	NO:

EFF. W/ OC#	PRIOR TO / OC#	DR.	DATE:
EFF. W/ VEH.#	PRIOR TO / VEH.#	CK.	APPR.

WIRING DIAGRAM INDEX

A	A/C, HEAT & VENT. SYSTEM	Page:	13.1
	AIR DRYER	Page:	8.1
	ALARM & SIGNAL	Page:	7.2
	ABS	Page:	21.1
	ARRANGEMENT - CABLE	Page:	B
	ARRANGEMENT - HARNESS	Page:	C
	ARRANGEMENT - SPARE WIRE	Page:	D
B	BACK-UP ALARM	Page:	9.3
	BACK-UP MONITOR	Page:	27.1
	BATTERY CHARGER	Page:	11.4
	BATTERY STANDARD AND 8D	Page:	1.2
C	CLUSTER	Page:	7.1
	CHARGING SYSTEM	Page:	4.2
	CIGAR LIGHTER	Page:	14.1
	CODE - CIRCUIT NUMBER	Page:	E
	CODE - CIRCUIT BREAKER	Page:	F
	CODE - CONNECTOR	Page:	G
	CODE - DIODE	Page:	H
	CODE - RELAY	Page:	I
	CODE - RESISTOR	Page:	J
	CODE - WIRING KEY	Page:	K
	CODE - FUSE	Page:	L
	CODE - MODULE	Page:	M
	CRUISE CONTROL - DDEC	Page:	5.1
	CB OPTION	Page:	20.5
D	DDEC III & IV	Page:	5.1
	DIGITAL CLOCK	Page:	14.1
	DISTRIBUTION 12V, 24V	Page:	1.1
	DISTRIB. 12V DISC., IGN & HOT WIRE	Page:	2.1
	DRIVER'S WINDOW LIFTER	Page:	14.1
E	ENGINE BLOCK HEATER	Page:	12.1
	ENGINE BRAKE SYSTEM	Page:	19.1
	ENGINE CONTROL	Page:	4.1
	ENTRANCE DOOR SEDAN	Page:	16.1
	ETHER COLD START	Page:	8.1
	EXTERIOR LIGHTIHG	Page:	9.1
F	FAN-CLUTCH RADIATOR	Page:	8.1
	FAST IDLE - DDEC	Page:	5.1
	FIRE DETECTOR	Page:	7.2
	FRONT DESTINATION SIGN	Page:	17.1
	FRONT CAMERA	Page:	20.6
	FUEL WATER FILTER	Page:	8.1
	FUEL PRIME PUMP	Page:	12.1
G	GALLEY ACCESSORIES	Page:	23.1
	GROUND SYSTEM	Page:	3.1
H	HIGH BUOY	Page:	18.1
	HOTESS CHIME	Page:	12.1
I	INTERIOR LIGHTING	Page:	11.1
	INTERCOM	Page:	27.1
K	KNEELING SYSTEM	Page:	18.1
L	LAVATORY	Page:	17.1
	LOW BUOY	Page:	18.1
	LUGGAGE DOOR LOCK	Page:	19.1
M	MIRROR-REAR VIEW	Page:	24.1
P	PARKING BRAKE SWITCH	Page:	8.1
	POWER 12V OUTLET	Page:	14.1
	PRODRIVER	Page:	8.1
R	RETARDER - WORLD TRANSM.	Page:	19.1
S	SPEED SWITCH (MANUAL TRANS.)		15.1
	SOUND & VIDEO SYSTEM	Page:	20.1
	SPEAKER PASSENGER	Page:	20.2
	SPEEDOMETER	Page :	7.1
	SUN VISOR	Page:	14.1
T	TELL TALE LIGHT MODULES	Page	28.1
	TRANSMISSION - MANUAL	Page:	15.1
	TRANSMISSION - WORLD	Page:	6.1
	TRANSMISSION – EATON	Page:	6.3
	TACHYMETER	Page :	7.1
W	WATER HEATER PRE-HEAT	Page:	26.1
	WATER TANK HEATER LAVATORY	Page:	12.1
	WHEEL CHAIR LIFT - RICON 9000	Page:	25.2
	WHEEL CHAIR LIFT - STEW. & STEV.	Page:	25.1
	WINDOW AJAR	Page:	7.2
	WINDSHIELD (UP) FAN DEFROSTOR	Page:	22.1
	WINDSHIELD (UP) HEATED	Page:	22.1
	WIPER & WASHER	Page:	10.1

WIRING DIAGRAM INDEX

A	A/C, HEAT & VENT. SYSTEM	Page:	13.1
	AIR DRYER	Page:	8.1
	ALARM & SIGNAL	Page:	7.2
	ABS	Page:	21.1
	ARRANGEMENT - CABLE	Page:	B
	ARRANGEMENT - HARNESS	Page:	C
	ARRANGEMENT - SPARE WIRE	Page:	D
B	BACK-UP ALARM	Page:	9.3
	BACK-UP MONITOR	Page:	27.1
	BATTERY CHARGER	Page:	11.4
	BATTERY STANDARD AND 8D	Page:	1.2
C	CLUSTER	Page:	7.1
	CHARGING SYSTEM	Page:	4.2
	CIGAR LIGHTER	Page:	14.1
	CODE - CIRCUIT NUMBER	Page:	E
	CODE - CIRCUIT BREAKER	Page:	F
	CODE - CONNECTOR	Page:	G
	CODE - DIODE	Page:	H
	CODE - RELAY	Page:	I
	CODE - RESISTOR	Page:	J
	CODE - WIRING KEY	Page:	K
	CODE - FUSE	Page:	L
	CODE - MODULE	Page:	M
	CRUISE CONTROL - DDEC	Page:	5.1
	CB OPTION	Page:	20.5
D	DDEC III & IV	Page:	5.1
	DIGITAL CLOCK	Page:	14.1
	DISTRIBUTION 12V, 24V	Page:	1.1
	DISTRIB. 12V DISC., IGN & HOT WIRE	Page:	2.1
	DRIVER'S WINDOW LIFTER	Page:	14.1
E	ENGINE BLOCK HEATER	Page:	12.1
	ENGINE BRAKE SYSTEM	Page:	19.1
	ENGINE CONTROL	Page:	4.1
	ENTRANCE DOOR SEDAN	Page:	16.1
	ETHER COLD START	Page:	8.1
	EXTERIOR LIGHTIHG	Page:	9.1
F	FAN-CLUTCH RADIATOR	Page:	8.1
	FAST IDLE - DDEC	Page:	5.1
	FIRE DETECTOR	Page:	7.2
	FRONT DESTINATION SIGN	Page:	17.1
	FRONT CAMERA	Page:	20.6
	FUEL FILTER WATER DETECTOR	Page:	8.1
	FUEL FILTER HEATER	Page:	8.2
	FUEL PRIME PUMP	Page:	12.1
G	GALLEY ACCESSORIES	Page:	23.1
	GROUND SYSTEM	Page:	3.1
H	HIGH BUOY	Page:	18.1
	HOTESS CHIME	Page:	12.1
I	INTERIOR LIGHTING	Page:	11.1
	INTERCOM	Page:	27.1
K	KNEELING SYSTEM	Page:	18.1
L	LAVATORY	Page:	17.1
	LOW BUOY	Page:	18.1
	LUGGAGE DOOR LOCK	Page:	19.1
M	MIRROR-REAR VIEW	Page:	24.1
P	PARKING BRAKE SWITCH	Page:	8.1
	POWER 12V OUTLET	Page:	14.1
	PRODRIVER	Page:	8.1
R	RETARDER - WORLD TRANSM.	Page:	19.1
S	SPEED SWITCH (MANUAL TRANS.)		15.1
	SOUND & VIDEO SYSTEM	Page:	20.1
	SPEAKER PASSENGER	Page:	20.2
	SPEEDOMETER	Page :	7.1
	SUN VISOR	Page:	14.1
T	TELL TALE LIGHT MODULES	Page	28.1
	TRANSMISSION - MANUAL	Page:	15.1
	TRANSMISSION - WORLD	Page:	6.1
	TRANSMISSION – EATON	Page:	6.3
	TACHYMETER	Page :	7.1
W	WATER HEATER PRE-HEAT	Page:	26.1
	WATER TANK HEATER LAVATORY	Page:	12.1
	WHEEL CHAIR LIFT - RICON 9000	Page:	25.2
	WHEEL CHAIR LIFT - STEW. & STEV.	Page:	25.1
	WINDOW AJAR	Page:	7.2
	WINDSHIELD (UP) FAN DEFROSTOR	Page:	22.1
	WINDSHIELD (UP) HEATED	Page:	22.1
	WIPER & WASHER	Page:	10.1

WIRING DIAGRAM INDEX

A	A/C, HEAT & VENT. SYSTEM	Page:	13.1
	AIR DRYER	Page:	8.1
	ALARM & SIGNAL	Page:	7.2
	ABS	Page:	21.1
	ARRANGEMENT - CABLE	Page:	B
	ARRANGEMENT - HARNESS	Page:	C1,C2
	ARRANGEMENT - SPARE WIRE	Page:	D
B	BACK-UP ALARM	Page:	9.3
	BACK-UP MONITOR	Page:	27.1
	BATTERY CHARGER	Page:	11.4
	BATTERY STANDARD AND 8D	Page:	1.2
C	CLUSTER	Page:	7.1
	CHARGING SYSTEM	Page:	4.2
	CIGAR LIGHTER	Page:	14.1
	CODE - CIRCUIT NUMBER	Page:	E
	CODE - CIRCUIT BREAKER	Page:	F
	CODE - CONNECTOR	Page:	G
	CODE - DIODE	Page:	H
	CODE - RELAY	Page:	I
	CODE - RESISTOR	Page:	J
	CODE - WIRING KEY	Page:	K
	CODE - FUSE	Page:	L
	CODE - MODULE	Page:	M
	CRUISE CONTROL - DDEC	Page:	5.1
	CB OPTION	Page:	20.5
D	DDEC III & IV	Page:	5.1
	DIGITAL CLOCK	Page:	14.1
	DISTRIBUTION 12V, 24V	Page:	1.1
	DISTRIB. 12V DISC., IGN & HOT WIRE	Page:	2.1
	DRIVER'S WINDOW LIFTER	Page:	14.1
E	ENGINE BLOCK HEATER	Page:	12.1
	ENGINE BRAKE SYSTEM	Page:	19.1
	ENGINE CONTROL	Page:	4.1
	ENTRANCE DOOR SEDAN	Page:	16.1
	ETHER COLD START	Page:	8.1
	EXTERIOR LIGHTIHG	Page:	9.1
F	FAN-CLUTCH RADIATOR	Page:	8.1
	FAST IDLE - DDEC	Page:	5.1
	FIRE DETECTOR	Page:	7.2
	FRONT DESTINATION SIGN	Page:	17.1
	FRONT CAMERA	Page:	20.6
	FUEL FILTER WATER DETECTOR	Page:	8.1
	FUEL FILTER HEATER	Page:	8.2
	FUEL PRIME PUMP	Page:	12.1
G	GALLEY ACCESSORIES	Page:	23.1
	GROUND SYSTEM	Page:	3.1
H	HIGH BUOY	Page:	18.1
	HOTESS CHIME	Page:	12.1
I	INTERIOR LIGHTING	Page:	11.1
	INTERCOM	Page:	27.1
K	KNEELING SYSTEM	Page:	18.1
L	LAVATORY	Page:	17.1
	LOW BUOY	Page:	18.1
	LUGGAGE DOOR LOCK	Page:	19.1
M	MIRROR-REAR VIEW	Page:	24.1
P	PARKING BRAKE SWITCH	Page:	8.1
	POWER 12V OUTLET	Page:	14.1
	PRODRIVER	Page:	8.1
R	RETARDER - WORLD TRANSM.	Page:	19.1
S	SEAT AUDIO SYSTEM	Page :	20.7
	SPEED SWITCH (MANUAL TRANS.)		15.1
	SOUND & VIDEO SYSTEM	Page:	20.1
	SPEAKER PASSENGER	Page:	20.2
	SPEEDOMETER	Page :	7.1
	SUN VISOR	Page:	14.1
T	TELL TALE LIGHT MODULES	Page	28.1
	TRANSMISSION - MANUAL	Page:	15.1
	TRANSMISSION - WORLD	Page:	6.1
	TRANSMISSION – EATON	Page:	6.3
	TACHYMETER	Page :	7.1
W	WATER HEATER PRE-HEAT	Page:	26.1
	WATER TANK HEATER LAVATORY	Page:	12.1
	WHEEL CHAIR LIFT - RICON 9000	Page:	25.2
	WHEEL CHAIR LIFT - STEW. & STEV.	Page:	25.1
	WINDOW AJAR	Page:	7.2
	WINDSHIELD (UP) FAN DEFROSTOR	Page:	22.1
	WINDSHIELD (UP) HEATED	Page:	22.1
	WIPER & WASHER	Page:	10.1

WIRING DIAGRAM INDEX

A	A/C, HEAT & VENT. SYSTEM	Page:	13.1
	AIR DRYER	Page:	8.1
	ALARM & SIGNAL	Page:	7.2
	ABS	Page:	21.1
	ARRANGEMENT - CABLE	Page:	B
	ARRANGEMENT - HARNESS	Page:	C1,C2
	ARRANGEMENT - SPARE WIRE	Page:	D
B	BACK-UP ALARM	Page:	9.3
	BACK-UP MONITOR	Page:	27.1
	BATTERY CHARGER	Page:	11.4
	BATTERY STANDARD AND 8D	Page:	1.2
C	CLUSTER	Page:	7.1
	CHARGING SYSTEM	Page:	4.2
	CIGAR LIGHTER	Page:	14.1
	CODE - CIRCUIT NUMBER	Page:	E
	CODE - CIRCUIT BREAKER	Page:	F
	CODE - CONNECTOR	Page:	G
	CODE - DIODE	Page:	H
	CODE - RELAY	Page:	I
	CODE - RESISTOR	Page:	J
	CODE - WIRING KEY	Page:	K
	CODE - FUSE	Page:	L
	CODE - MODULE	Page:	M
	CRUISE CONTROL - DDEC	Page:	5.1
	CB OPTION	Page:	20.5
D	DDEC III & IV	Page:	5.1
	DIGITAL CLOCK	Page:	14.1
	DISTRIBUTION 12V, 24V	Page:	1.1
	DISTRIB. 12V DISC., IGN & HOT WIRE	Page:	2.1
	DRIVER'S WINDOW LIFTER	Page:	14.1
E	ENGINE BLOCK HEATER	Page:	12.1
	ENGINE BRAKE SYSTEM	Page:	19.1
	ENGINE CONTROL	Page:	4.1
	ENTRANCE DOOR SEDAN	Page:	16.1
	ETHER COLD START	Page:	8.1
	EXTERIOR LIGHTIHG	Page:	9.1
F	FAN-CLUTCH RADIATOR	Page:	8.1
	FAST IDLE - DDEC	Page:	5.1
	FIRE DETECTOR	Page:	7.2
	FRONT DESTINATION SIGN	Page:	17.1
	FRONT CAMERA	Page:	20.6
	FUEL FILTER WATER DETECTOR	Page:	8.1
	FUEL FILTER HEATER	Page:	8.2
	FUEL PRIME PUMP	Page:	12.1
G	GALLEY ACCESSORIES	Page:	23.1
	GROUND SYSTEM	Page:	3.1
H	HIGH BUOY	Page:	18.1
	HOTESS CHIME	Page:	12.1
I	INTERIOR LIGHTING	Page:	11.1
	INTERCOM	Page:	27.1
K	KNEELING SYSTEM	Page:	18.1
L	LAVATORY	Page:	17.1
	LOW BUOY	Page:	18.1
	LUGGAGE DOOR LOCK	Page:	19.1
M	MIRROR-REAR VIEW	Page:	24.1
P	PARKING BRAKE SWITCH	Page:	8.1
	POWER 12V OUTLET	Page:	14.1
	PRODRIVER	Page:	8.1
R	RETARDER - WORLD TRANSM.	Page:	19.1
S	SEAT AUDIO SYSTEM	Page :	20.7
	SPEED SWITCH (MANUAL TRANS.)		15.1
	SOUND & VIDEO SYSTEM	Page:	20.1
	SPEAKER PASSENGER	Page:	20.2
	SPEEDOMETER	Page :	7.1
	SUN VISOR	Page:	14.1
T	TELL TALE LIGHT MODULES	Page	28.1
	TRANSMISSION - MANUAL	Page:	15.1
	TRANSMISSION - WORLD	Page:	6.1
	TRANSMISSION – EATON	Page:	6.3
	TACHYMETER	Page :	7.1
W	WATER HEATER PRE-HEAT	Page:	26.1
	WHEEL CHAIR LIFT - RICON 9000	Page:	25.2
	WHEEL CHAIR LIFT - STEW. & STEV.	Page:	25.1
	WINDOW AJAR	Page:	7.2
	WINDSHIELD (UP) FAN DEFROSTOR	Page:	22.1
	WINDSHIELD (UP) HEATED	Page:	22.1
	WIPER & WASHER	Page:	10.1

WIRING DIAGRAM INDEX


A	A/C, HEAT & VENT. SYSTEM	Page:	13.1
	AIR DRYER	Page:	8.1
	ALARM & SIGNAL	Page:	7.2
	ABS	Page:	21.1
	ARRANGEMENT - CABLE	Page:	B
	ARRANGEMENT - HARNESS	Page:	C1,C2
	ARRANGEMENT - SPARE WIRE	Page:	D
B	BACK-UP ALARM	Page:	9.3
	BACK-UP MONITOR	Page:	27.1
	BATTERY CHARGER	Page:	11.4
	BATTERY STANDARD AND 8D	Page:	1.2
C	CLUSTER	Page:	7.1
	CHARGING SYSTEM	Page:	4.2
	CIGAR LIGHTER	Page:	14.1
	CODE - CIRCUIT NUMBER	Page:	E
	CODE - CIRCUIT BREAKER	Page:	F
	CODE - CONNECTOR	Page:	G
	CODE - DIODE	Page:	H
	CODE - RELAY	Page:	I
	CODE - RESISTOR	Page:	J
	CODE - WIRING KEY	Page:	K
	CODE - FUSE	Page:	L
	CODE - MODULE	Page:	M
	CRUISE CONTROL - DDEC	Page:	5.1
	CB OPTION	Page:	20.5
D	DDEC III & IV	Page:	5.1
	DIGITAL CLOCK	Page:	14.1
	DISTRIBUTION 12V, 24V	Page:	1.1
	DISTRIB. 12V DISC., IGN & HOT WIRE	Page:	2.1
	DRIVER'S WINDOW LIFTER	Page:	14.1
E	ENGINE BLOCK HEATER	Page:	12.1
	ENGINE BRAKE SYSTEM	Page:	19.1
	ENGINE CONTROL	Page:	4.1
	ENTRANCE DOOR SEDAN	Page:	16.1
	ETHER COLD START	Page:	8.1
	EXTERIOR LIGHTIHG	Page:	9.1
F	FAN-CLUTCH RADIATOR	Page:	8.1
	FAST IDLE - DDEC	Page:	5.1
	FIRE DETECTOR	Page:	7.2
	FRONT DESTINATION SIGN	Page:	17.1
	FRONT CAMERA	Page:	20.6
	FUEL FILTER WATER DETECTOR	Page:	8.1
	FUEL FILTER HEATER	Page:	8.2
	FUEL PRIME PUMP	Page:	12.1
G	GALLEY ACCESSORIES	Page:	23.1
	GROUND SYSTEM	Page:	3.1
H	HIGH BUOY	Page:	18.1
	HOTESS CHIME	Page:	12.1
I	INTERIOR LIGHTING	Page:	11.1
	INTERCOM	Page:	27.1
K	KNEELING SYSTEM	Page:	18.1
L	LAVATORY	Page:	17.1
	LOW BUOY	Page:	18.1
	LUGGAGE DOOR LOCK	Page:	19.1
M	MIRROR-REAR VIEW	Page:	24.1
P	PARKING BRAKE SWITCH	Page:	8.1
	POWER 12V OUTLET	Page:	14.1
	PRODRIVER	Page:	8.1
R	RETARDER - WORLD TRANSM.	Page:	19.1
S	SEAT AUDIO SYSTEM	Page :	20.7
	SPEED SWITCH (MANUAL TRANS.)		15.1
	SOUND & VIDEO SYSTEM	Page:	20.1
	SPEAKER PASSENGER	Page:	20.2
	SPEEDOMETER	Page :	7.1
	STEERING CONTROL	Page:	15.1
	SUN VISOR	Page:	14.1
T	TELL TALE LIGHT MODULES	Page	28.1
	TRANSMISSION - MANUAL	Page:	15.1
	TRANSMISSION - WORLD	Page:	6.1
	TRANSMISSION – EATON	Page:	6.3
	TACHYMETER	Page :	7.1
W	WATER HEATER PRE-HEAT	Page:	26.1
	WHEEL CHAIR LIFT - RICON 9000	Page:	25.2
	WHEEL CHAIR LIFT - STEW. & STEV.	Page:	25.1
	WINDOW AJAR	Page:	7.2
	WINDSHIELD (UP) FAN DEFROSTOR	Page:	22.1
	WINDSHIELD (UP) HEATED	Page:	22.1
	WIPER & WASHER	Page:	10.1


WIRING DIAGRAM INDEX

A	A/C, HEAT & VENT. SYSTEM	Page:	13.1
	ALARM & SIGNAL	Page:	7.2
	ABS	Page:	21.1
	ARRANGEMENT - CABLE	Page:	B
	ARRANGEMENT - HARNESS	Page:	C1,C2
	ARRANGEMENT - SPARE WIRE	Page:	D
B	BACK-UP ALARM	Page:	9.3
	BACK-UP MONITOR	Page:	27.1
	BATTERY CHARGER	Page:	11.4
	BATTERY STANDARD AND 8D	Page:	1.2
C	CLUSTER	Page:	7.1
	CHARGING SYSTEM	Page:	4.2
	CIGAR LIGHTER	Page:	14.1
	CODE - CIRCUIT NUMBER	Page:	E
	CODE - CIRCUIT BREAKER	Page:	F
	CODE - CONNECTOR	Page:	G
	CODE - DIODE	Page:	H
	CODE - RELAY	Page:	I
	CODE - RESISTOR	Page:	J
	CODE - WIRING KEY	Page:	K
	CODE - FUSE	Page:	L
	CODE - MODULE	Page:	M
	CRUISE CONTROL - DDEC	Page:	5.1
	CB OPTION	Page:	20.5
D	DDEC III & IV	Page:	5.1
	DIGITAL CLOCK	Page:	14.1
	DISTRIBUTION 12V, 24V	Page:	1.1
	DISTRIB. 12V DISC., IGN & HOT WIRE	Page:	2.1
	DRIVER'S WINDOW LIFTER	Page:	14.1
E	ENGINE BLOCK HEATER	Page:	12.1
	ENGINE BRAKE SYSTEM	Page:	19.1
	ENGINE CONTROL	Page:	4.1
	ENTRANCE DOOR SEDAN	Page:	16.1
	ETHER COLD START	Page:	8.1
	EXTERIOR LIGHTIHG	Page:	9.1
F	FAN-CLUTCH RADIATOR	Page:	8.1
	FAST IDLE - DDEC	Page:	5.1
	FIRE DETECTOR	Page:	7.2
	FRONT DESTINATION SIGN	Page:	17.1
	FRONT CAMERA	Page:	20.6
	FUEL FILTER WATER DETECTOR	Page:	8.1
	FUEL FILTER HEATER	Page:	8.2
	FUEL PRIME PUMP	Page:	12.1
G	GALLEY ACCESSORIES	Page:	23.1
	GROUND SYSTEM	Page:	3.1
H	HIGH BUOY	Page:	18.1
	HOTESS CHIME	Page:	12.1
I	INTERIOR LIGHTING	Page:	11.1
	INTERCOM	Page:	27.1
K	KNEELING SYSTEM	Page:	18.1
L	LAVATORY	Page:	17.1
	LOW BUOY	Page:	18.1
	LUGGAGE DOOR LOCK	Page:	19.1
M	MIRROR-REAR VIEW	Page:	24.1
P	PARKING BRAKE SWITCH	Page:	8.1
	POWER 12V OUTLET	Page:	14.1
	PRODRIVER	Page:	8.1
R	RETARDER - WORLD TRANSM.	Page:	19.1
S	SEAT AUDIO SYSTEM	Page :	20.7
	SPEED SWITCH (MANUAL TRANS.)		15.1
	SOUND & VIDEO SYSTEM	Page:	20.1
	SPEAKER PASSENGER	Page:	20.2
	SPEEDOMETER	Page :	7.1
	STEERING CONTROL	Page:	15.1
	SUN VISOR	Page:	14.1
T	TELL TALE LIGHT MODULES	Page	28.1
	TRANSMISSION - MANUAL	Page:	15.1
	TRANSMISSION - WORLD	Page:	6.1
	TRANSMISSION – EATON	Page:	6.3
	TACHYMETER	Page :	7.1
W	WATER HEATER PRE-HEAT	Page:	26.1
	WHEEL CHAIR LIFT - RICON 9000	Page:	25.2
	WHEEL CHAIR LIFT - STEW. & STEV.	Page:	25.1
	WINDOW AJAR	Page:	7.2
	WINDSHIELD (UP) FAN DEFROSTOR	Page:	22.1
	WINDSHIELD (UP) HEATED	Page:	22.1
	WIPER & WASHER	Page:	10.1

WIRING DIAGRAM INDEX

A	A/C, HEAT & VENT. SYSTEM	Page:	13.1
	ALARM & SIGNAL	Page:	7.2
	ABS	Page:	21.1
	ARRANGEMENT - CABLE	Page:	B
	ARRANGEMENT - HARNESS	Page:	C1,C2
	ARRANGEMENT - SPARE WIRE	Page:	D
B	BACK-UP ALARM	Page:	9.3
	BACK-UP MONITOR	Page:	27.1
	BATTERY CHARGER	Page:	11.4
	BATTERY STANDARD AND 8D	Page:	1.2
C	CLUSTER	Page:	7.1
	CHARGING SYSTEM	Page:	4.2
	CIGAR LIGHTER	Page:	14.1
	CODE - CIRCUIT NUMBER	Page:	E
	CODE - CIRCUIT BREAKER	Page:	F
	CODE - CONNECTOR	Page:	G
	CODE - DIODE	Page:	H
	CODE - RELAY	Page:	I
	CODE - RESISTOR	Page:	J
	CODE - WIRING KEY	Page:	K
	CODE - FUSE	Page:	L
	CODE - MODULE	Page:	M
	CRUISE CONTROL - DDEC	Page:	5.1
	CB OPTION	Page:	20.5
D	DDEC III & IV	Page:	5.1
	DIGITAL CLOCK	Page:	14.1
	DISTRIBUTION 12V, 24V	Page:	1.1
	DISTRIB. 12V DISC., IGN & HOT WIRE	Page:	2.1
	DRIVER'S WINDOW LIFTER	Page:	14.1
E	ENGINE BLOCK HEATER	Page:	12.1
	ENGINE BRAKE SYSTEM	Page:	19.1
	ENGINE CONTROL	Page:	4.1
	ENTRANCE DOOR SEDAN	Page:	16.1
	ETHER COLD START	Page:	8.1
	EXTERIOR LIGHTIHG	Page:	9.1
F	FAN-CLUTCH RADIATOR	Page:	8.1
	FAST IDLE - DDEC	Page:	5.1
	FIRE DETECTOR	Page:	7.2
	FRONT DESTINATION SIGN	Page:	17.1
	FRONT CAMERA	Page:	20.6
	FUEL FILTER WATER DETECTOR	Page:	8.1
	FUEL FILTER HEATER	Page:	8.2
	FUEL PRIME PUMP	Page:	12.1
G	GALLEY ACCESSORIES	Page:	23.1
	GROUND SYSTEM	Page:	3.1
H	HIGH BUOY	Page:	18.1
	HOTESS CHIME	Page:	12.1
I	INTERIOR LIGHTING	Page:	11.1
	INTERCOM	Page:	27.1
K	KNEELING SYSTEM	Page:	18.1
L	LAVATORY	Page:	17.1
	LOW BUOY	Page:	18.1
	LUGGAGE DOOR LOCK	Page:	19.1
M	MIRROR-REAR VIEW	Page:	24.1
P	PARKING BRAKE SWITCH	Page:	8.1
	POWER 12V OUTLET	Page:	14.1
	PRODRIVER	Page:	8.1
R	RETARDER - WORLD TRANSM.	Page:	19.1
S	SEAT AUDIO SYSTEM	Page :	20.7
	SPEED SWITCH (MANUAL TRANS.)		15.1
	SOUND & VIDEO SYSTEM	Page:	20.1
	SPEAKER PASSENGER	Page:	20.2
	SPEEDOMETER	Page :	7.1
	STEERING CONTROL	Page:	15.1
	SUN VISOR	Page:	14.1
T	TELL TALE LIGHT MODULES	Page	28.1
	TRANSMISSION - MANUAL	Page:	15.1
	TRANSMISSION - WORLD	Page:	6.1
	TRANSMISSION – EATON	Page:	6.3
	TACHYMETER	Page :	7.1
W	WATER HEATER PRE-HEAT	Page:	26.1
	WHEEL CHAIR LIFT - RICON 9000	Page:	25.2
	WHEEL CHAIR LIFT - STEW. & STEV.	Page:	25.1
	WINDOW AJAR	Page:	7.2
	WINDSHIELD (UP) FAN DEFROSTOR	Page:	22.1
	WIPER & WASHER	Page:	10.1

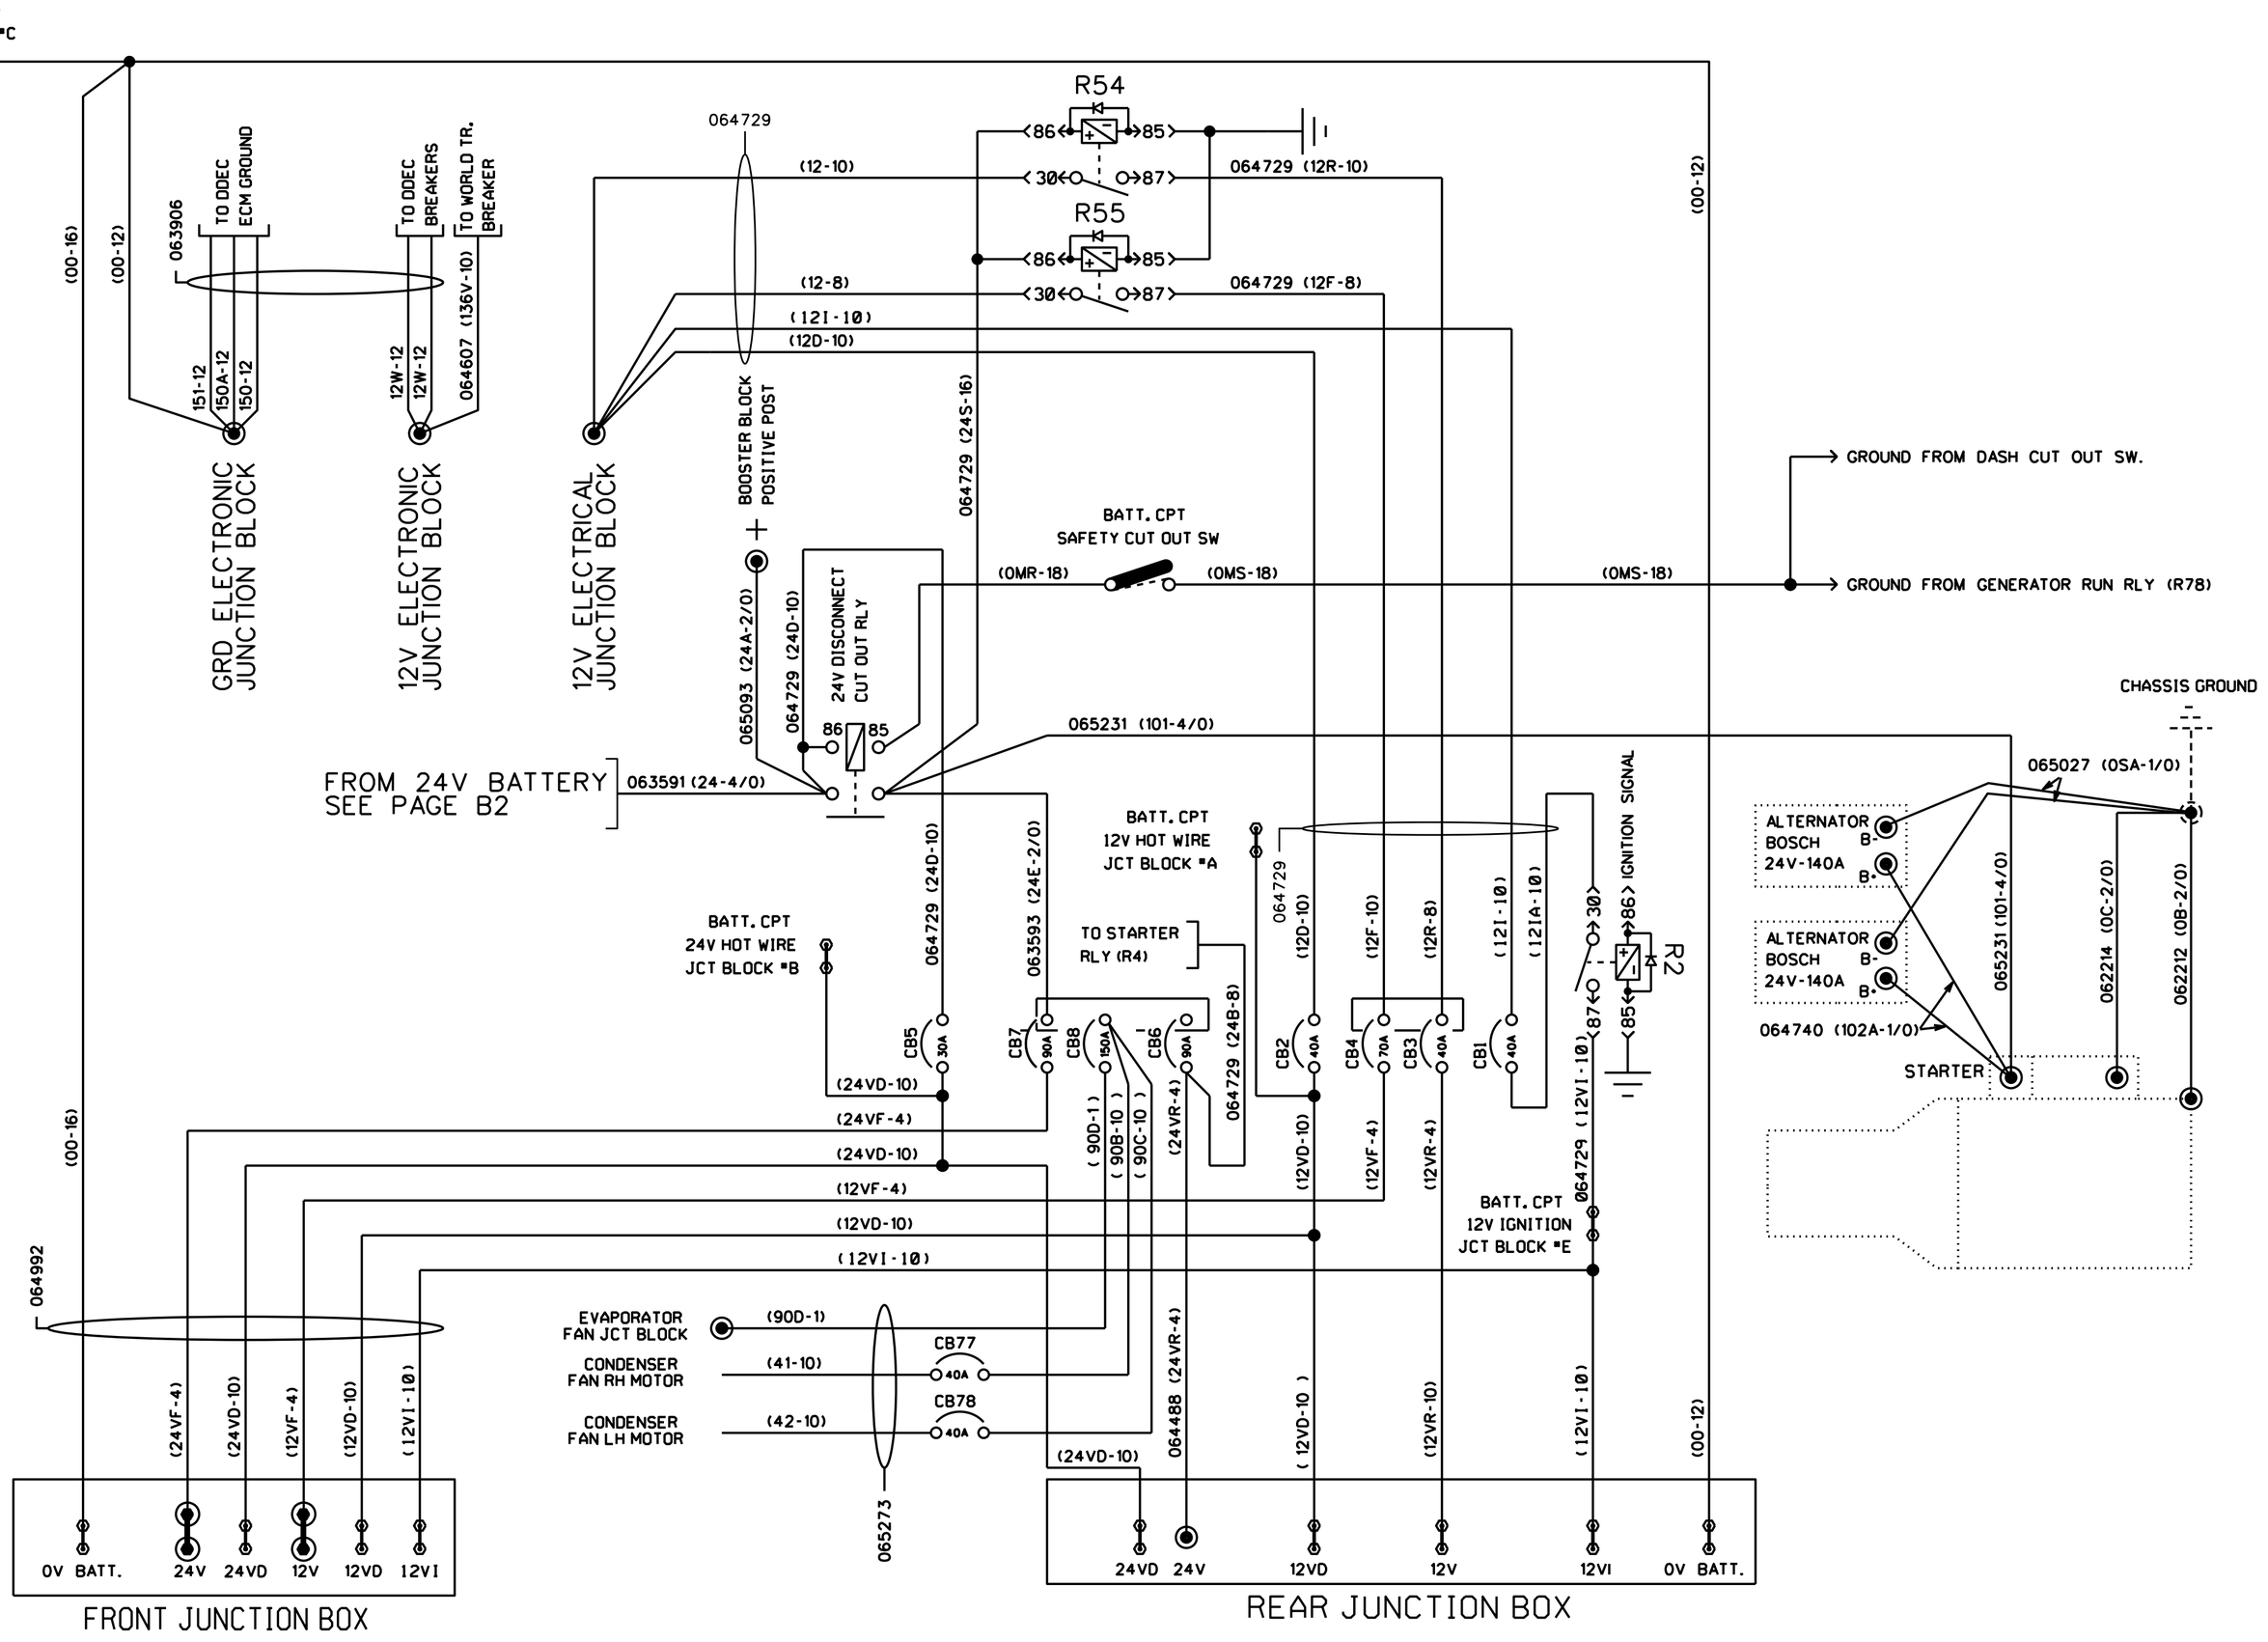
BATT. CPT
JCT BLOCK "C
(00-16)
(00-12)
063906
TO DDEC
ECM GROUND
TO DDEC
BREAKERS
TO WORLD TR.
BREAKER
151-12
150A-12
150-12
12W-12
12W-12
064607 (136V-10)
GRD ELECTRONIC
JUNCTION BLOCK
12V ELECTRONIC
JUNCTION BLOCK
12V ELECTRICAL
JUNCTION BLOCK
064729
R54
R55
86
85
30
87
(12-10)
064729 (12R-10)
(12-8)
064729 (12F-8)
(12I-10)
(12D-10)
BOOSTER BLOCK
POSITIVE POST
064729 (24S-16)
BATT. CPT
SAFETY CUT OUT SW
(OMR-18)
(OMS-18)
GROUND FROM DASH CUT OUT SW.
GROUND FROM GENERATOR RUN RLY (R78)
065093 (24A-2/0)
064729 (24D-10)
24V DISCONNECT
CUT OUT RLY
CHASSIS GROUND
065231 (101-4/0)
065027 (OSA-1/0)
FROM 24V BATTERY
SEE PAGE B2
063591 (24-4/0)
BATT. CPT
12V HOT WIRE
JCT BLOCK "A
ALTERNATOR
BOSCH
24V-140A
B-
B+
IGNITION SIGNAL
(12IA-10)
R2
064729 (12VI-10)
BATT. CPT
24V HOT WIRE
JCT BLOCK "B
TO STARTER
RLY (R4)
063593 (24E-2/0)
064729 (24B-8)
064729 (12D-10)
064729 (12F-10)
064729 (12R-8)
064729 (12I-10)
CB5
CB7
CB8
CB6
CB2
CB4
CB3
CB1
30A
90A
150A
90A
40A
70A
40A
40A
064740 (102A-1/0)
065231 (101-4/0)
062214 (0C-2/0)
062212 (0B-2/0)
STARTER
(24VD-10)
(24VF-4)
(24VD-10)
(12VF-4)
(12VD-10)
(12VI-10)
(90D-1)
(90B-10)
(90C-10)
(24VR-4)
(12VD-10)
(12VF-4)
(12VR-4)
BATT. CPT
12V IGNITION
JCT BLOCK "E
064992
EVAPORATOR
FAN JCT BLOCK
CONDENSER
FAN RH MOTOR
CONDENSER
FAN LH MOTOR
(90D-1)
(41-10)
(42-10)
CB77
CB78
40A
40A
065273
064488 (24VR-4)
(12VD-10)
(12VR-10)
(12VI-10)
(00-12)
0V BATT.
24V
24VD
12V
12VD
12VI
FRONT JUNCTION BOX
24VD
24V
12VD
12V
12VI
0V BATT.
REAR JUNCTION BOX

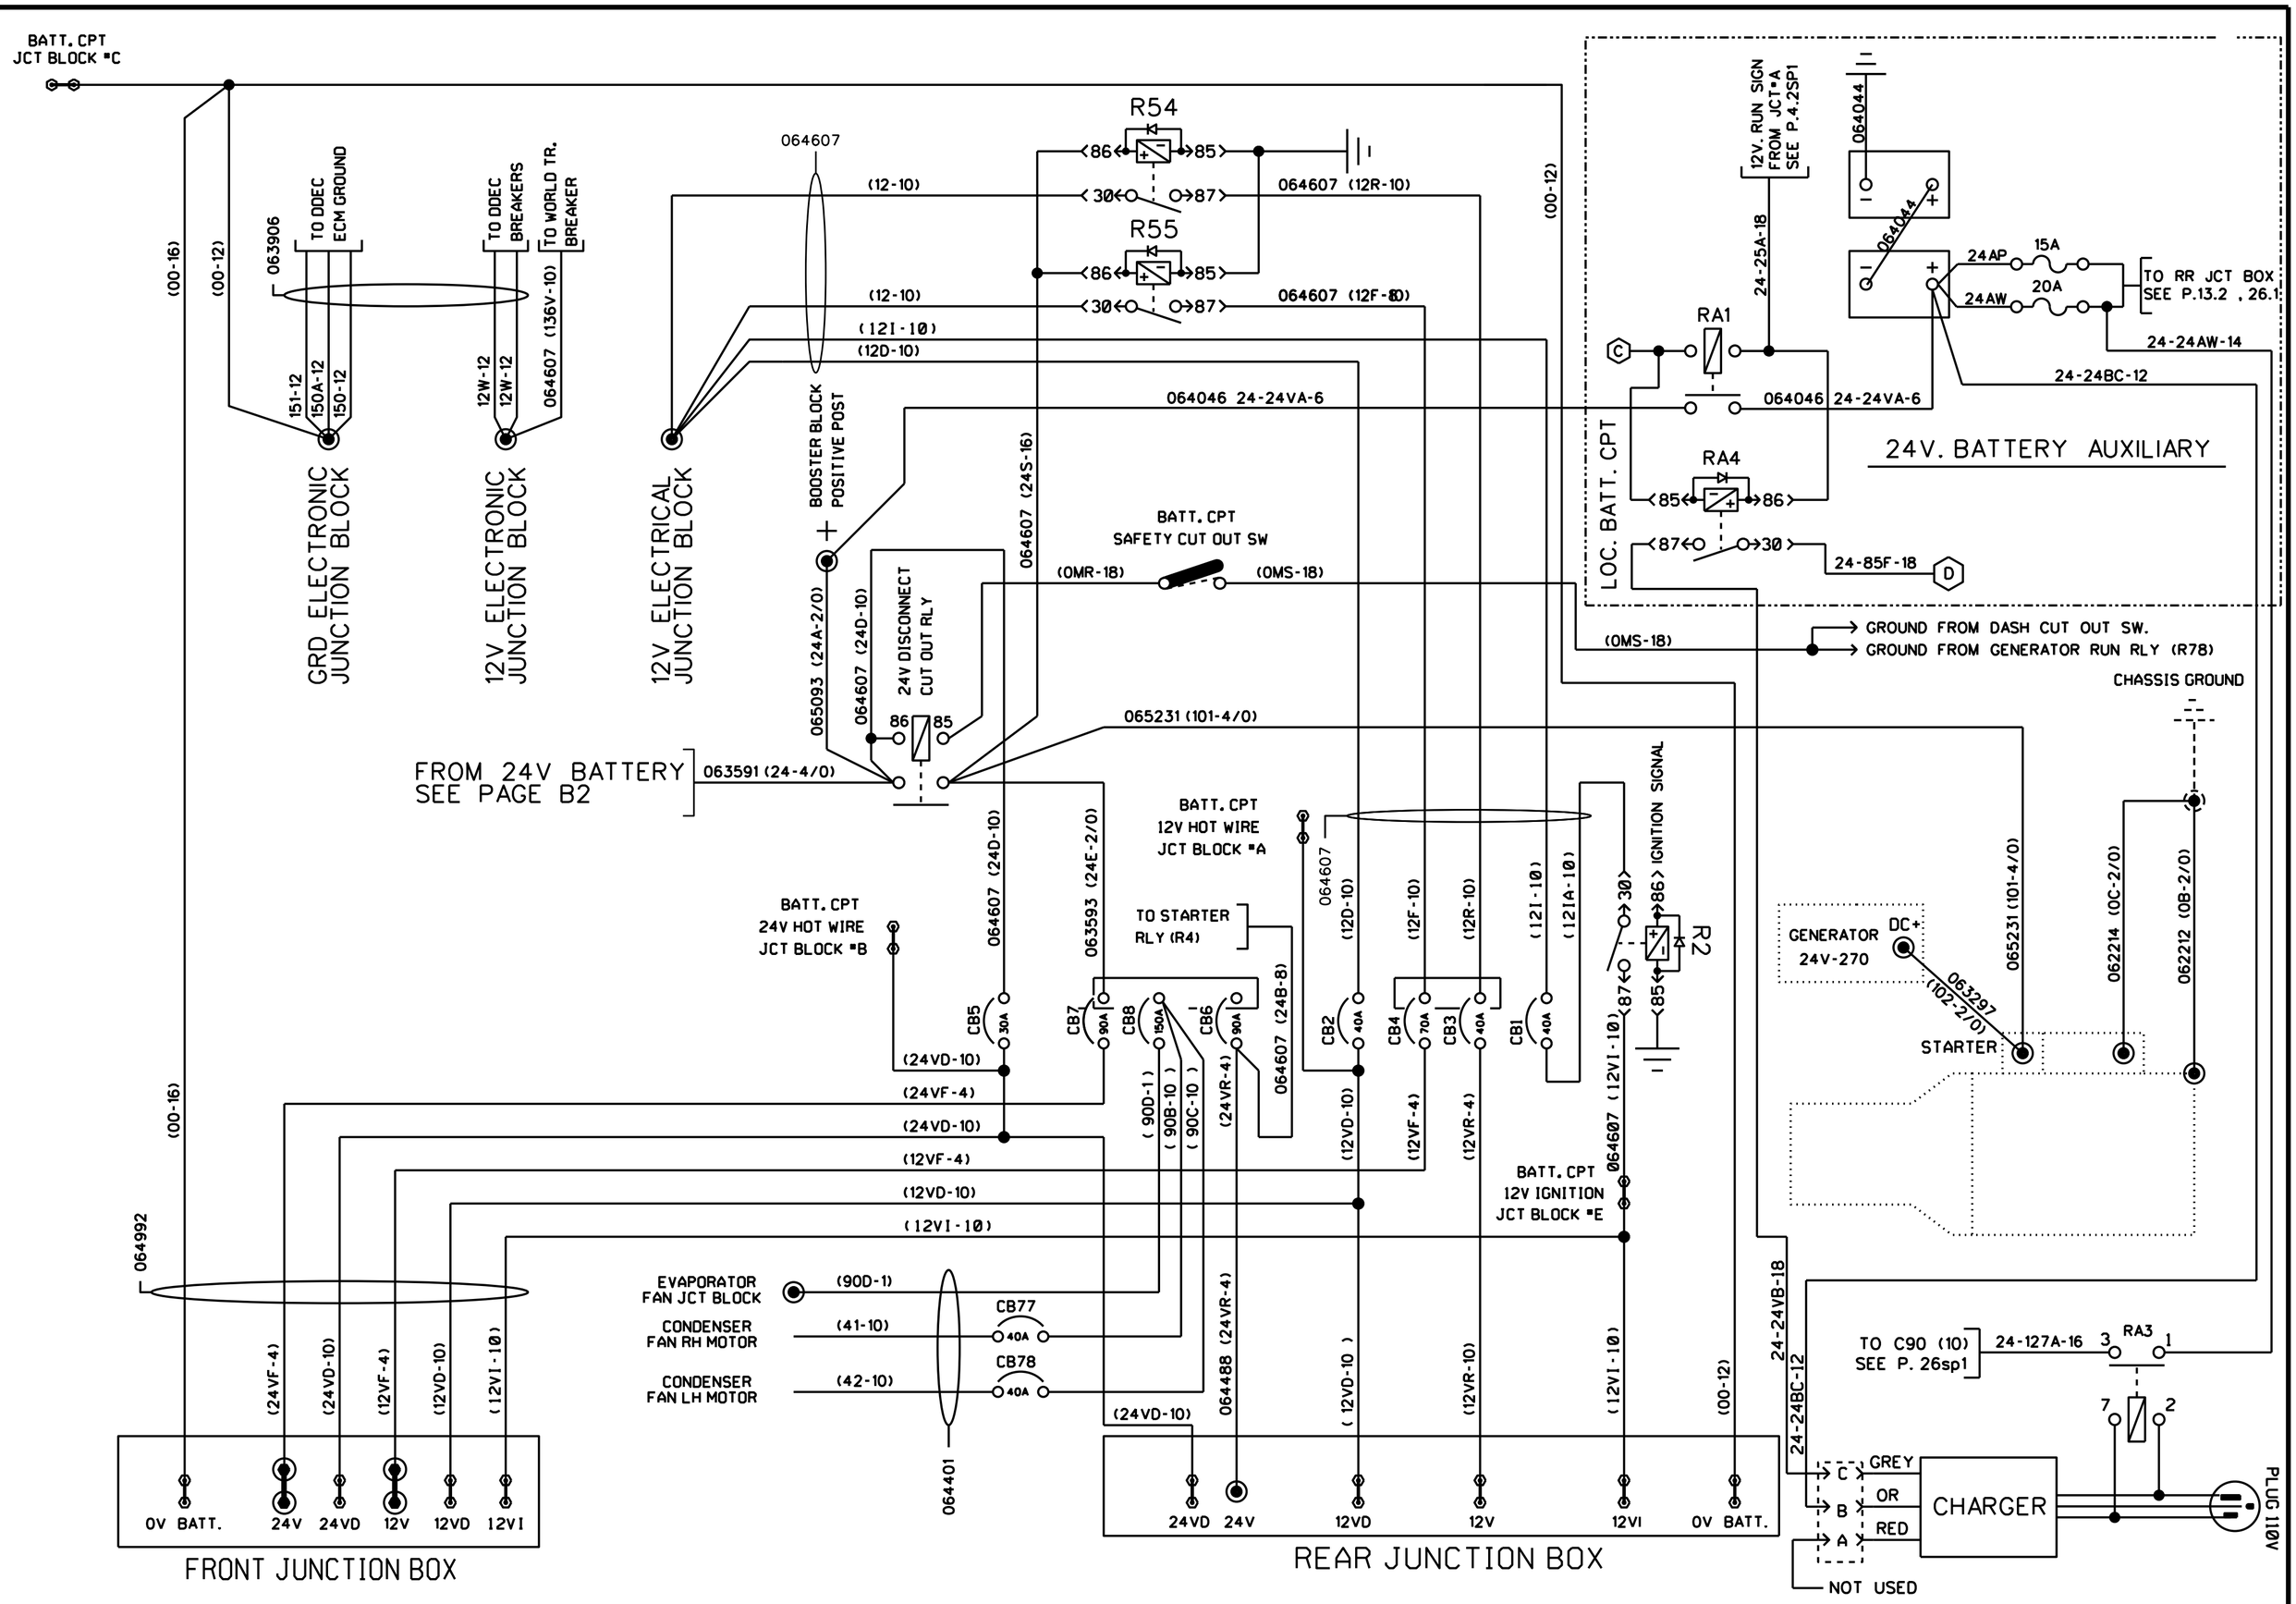

ORLEANS

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: B1sp1	REVISION 00

BATT. CPT
JCT BLOCK "C

(00-16)
(00-12)

063906
TO DDEC ECM GROUND
TO DDEC BREAKERS
TO WORLD TR. BREAKER

151-12
150A-12
150-12
12W-12
12W-12
064607 (136V-10)

GRD ELECTRONIC JUNCTION BLOCK
12V ELECTRONIC JUNCTION BLOCK
12V ELECTRICAL JUNCTION BLOCK

064607

R54
86 85
30 87
(12-10)
064607 (12R-10)

R55
86 85
30 87
(12-10)
064607 (12F-10)

(12I-10)
(12D-10)

BOOSTER BLOCK POSITIVE POST

064046 24-24VA-6

064607 (24S-16)

BATT. CPT
SAFETY CUT OUT SW
(OMR-18)
(OMS-18)

065093 (24A-2/0)
064607 (24D-10)
24V DISCONNECT CUT OUT RLY
86 85

FROM 24V BATTERY
SEE PAGE B2
063591 (24-4/0)

065231(101-4/0)

BATT. CPT
12V HOT WIRE
JCT BLOCK "A

BATT. CPT
24V HOT WIRE
JCT BLOCK "B

TO STARTER RLY (R4)

064607 (24E-2/0)
064607 (24D-10)
063593 (24B-8)

CB5 30A
CB7 90A
CB8 150A
CB6 90A
CB2 40A
CB4 70A
CB3 40A
CB1 40A

(24VD-10)
(24VF-4)
(24VD-10)
(12VF-4)
(12VD-10)
(12VI-10)
(90D-1)
(90B-10)
(90C-10)
(24VR-4)
064607 (24B-8)
(12VD-10)
(12VF-4)
(12VR-4)
(12D-10)
(12F-10)
(12R-10)
(12I-10)
(12IA-10)

064607 (12VI-10)
IGNITION SIGNAL
30 86
87 85
R2

BATT. CPT
12V IGNITION
JCT BLOCK "E

064992

EVAPORATOR FAN JCT BLOCK
CONDENSER FAN RH MOTOR
CONDENSER FAN LH MOTOR
(90D-1)
(41-10)
(42-10)
CB77 40A
CB78 40A
065273

064488 (24VR-4)

(00-12)

0V BATT. | 24V | 24VD | 12V | 12VD | 12VI
FRONT JUNCTION BOX

24VD | 24V | 12VD | 12V | 12VI | 0V BATT.
REAR JUNCTION BOX

12V. RUN SIGN FROM JCT "A SEE P.4.2SP1
24-25A-18
RA1
C
064044
064044
24AP 15A
24AW 20A
TO RR JCT BOX SEE P.13.2 , 26.1
064046 24-24VA-6
LOC. BATT. CPT

24V. BATTERY AUXILIARY

(OMS-18)
GROUND FROM DASH CUT OUT SW.
GROUND FROM GENERATOR RUN RLY (R78)


CHASSIS GROUND

GENERATOR 24V-270
DC+
063297 (102-2/0)
STARTER


065231 (101-4/0)
062214 (0C-2/0)
062212 (0B-2/0)

ADIRONDACK


PREVOST | WIRING DIAGRAM | NO: D060949 | PAGE: B1sp2 | REVISION 04

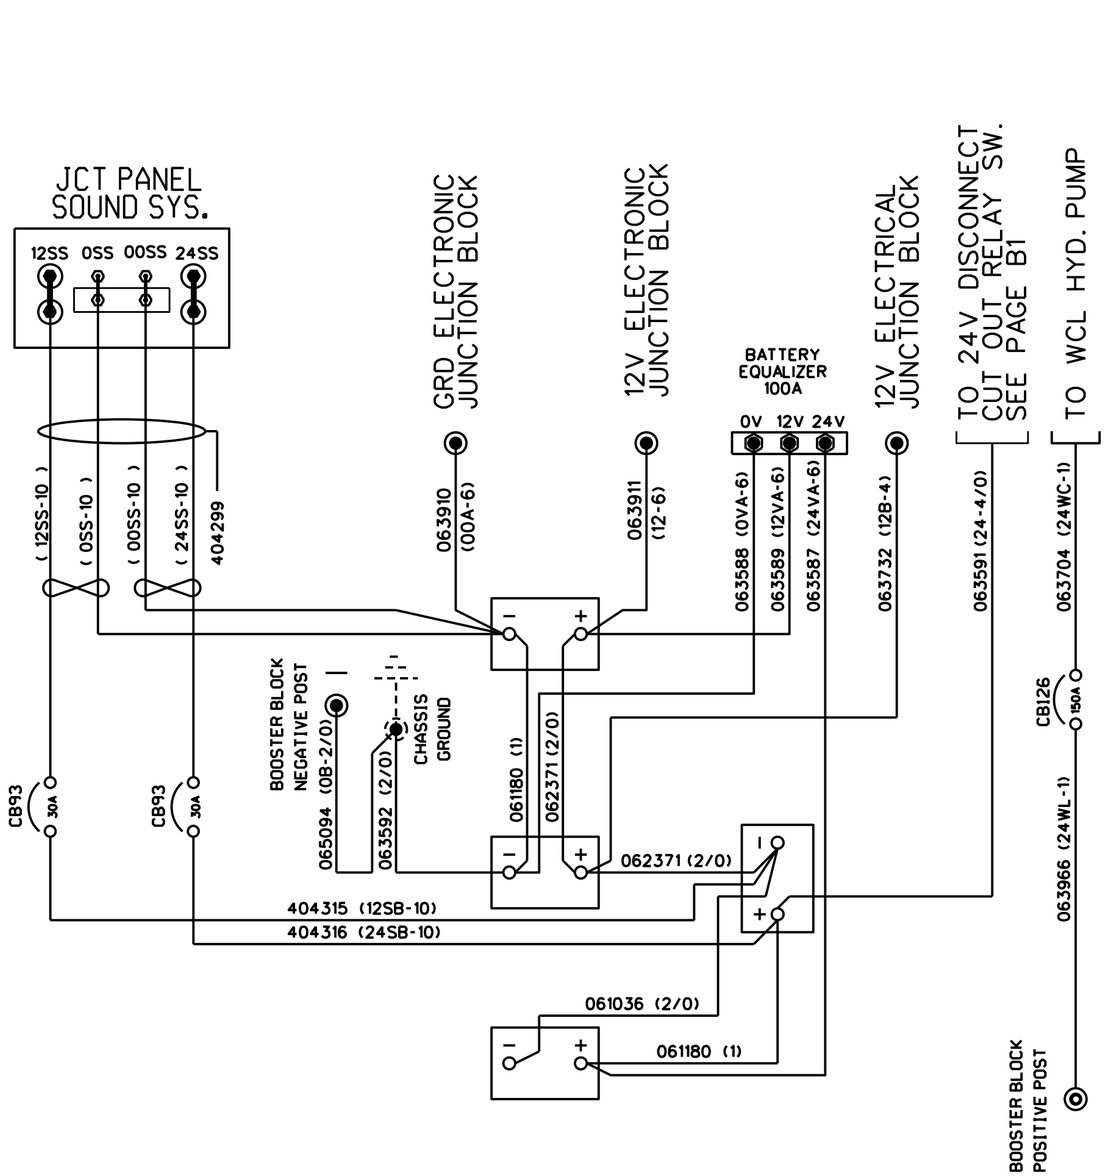


STANDARD BATTERIES

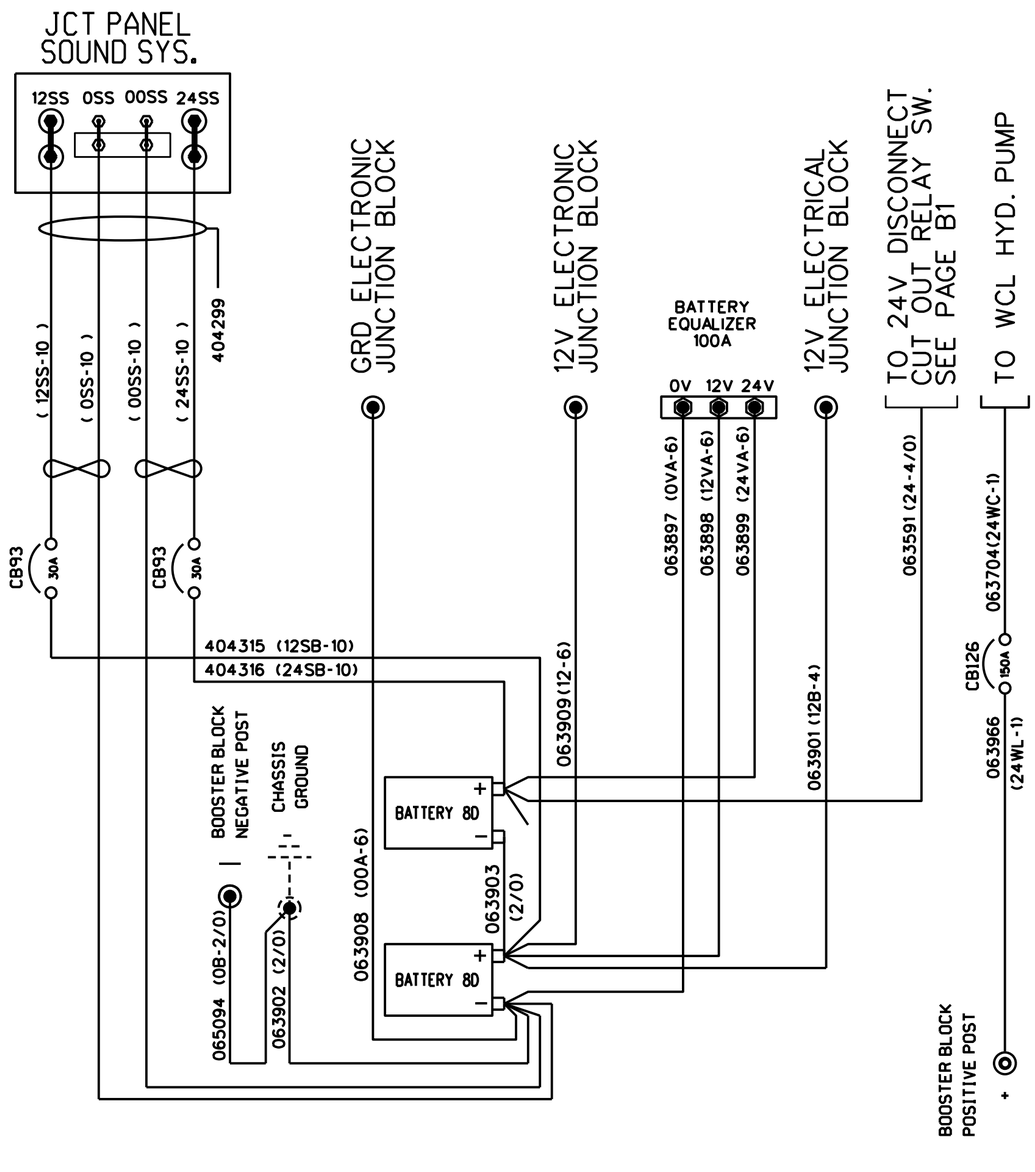


8D BATTERIES

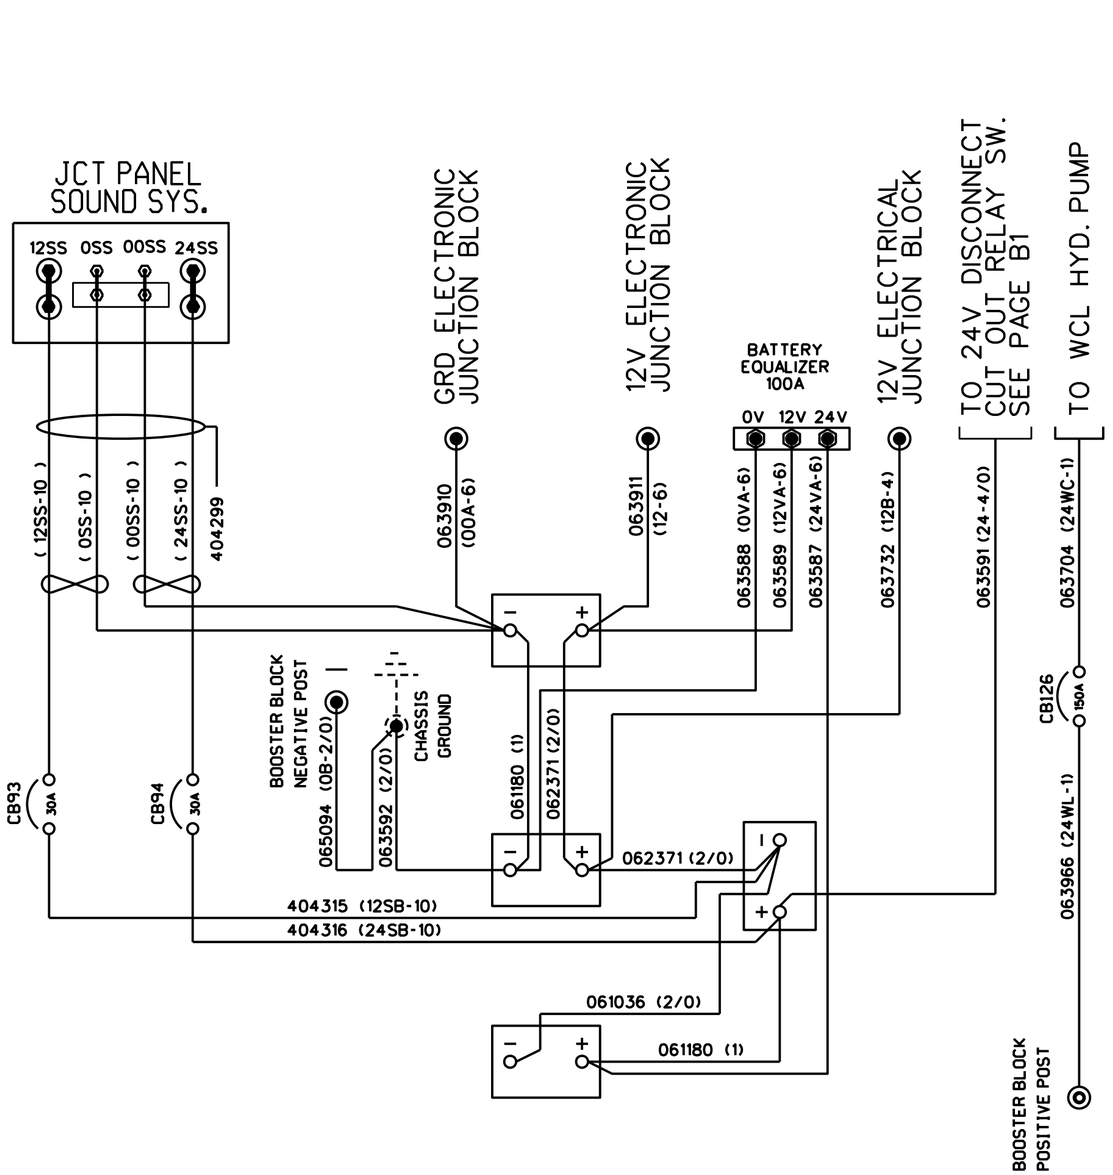


STANDARD BATTERIES

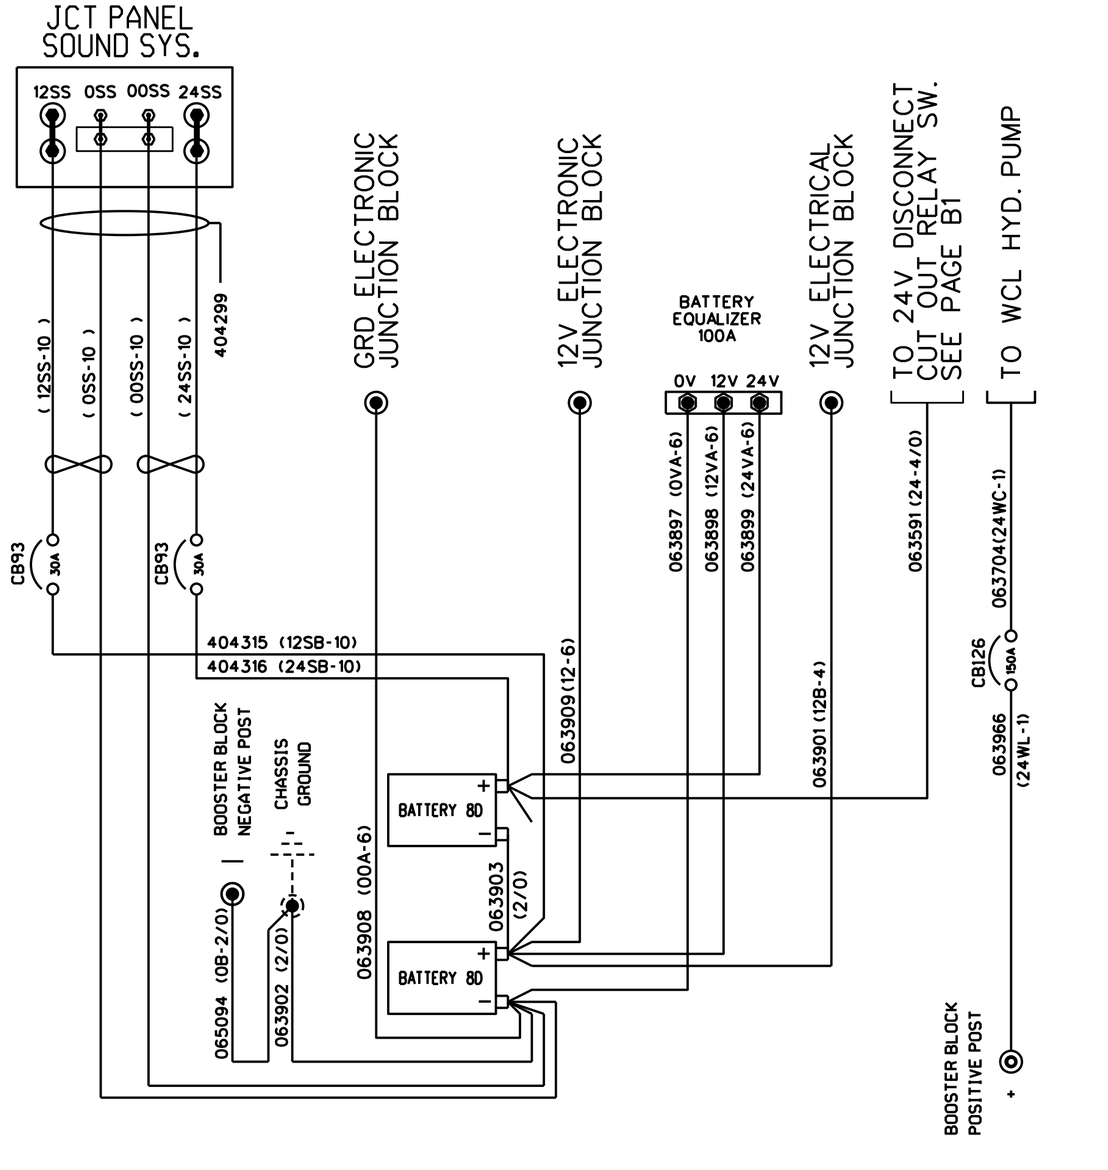


8D BATTERIES

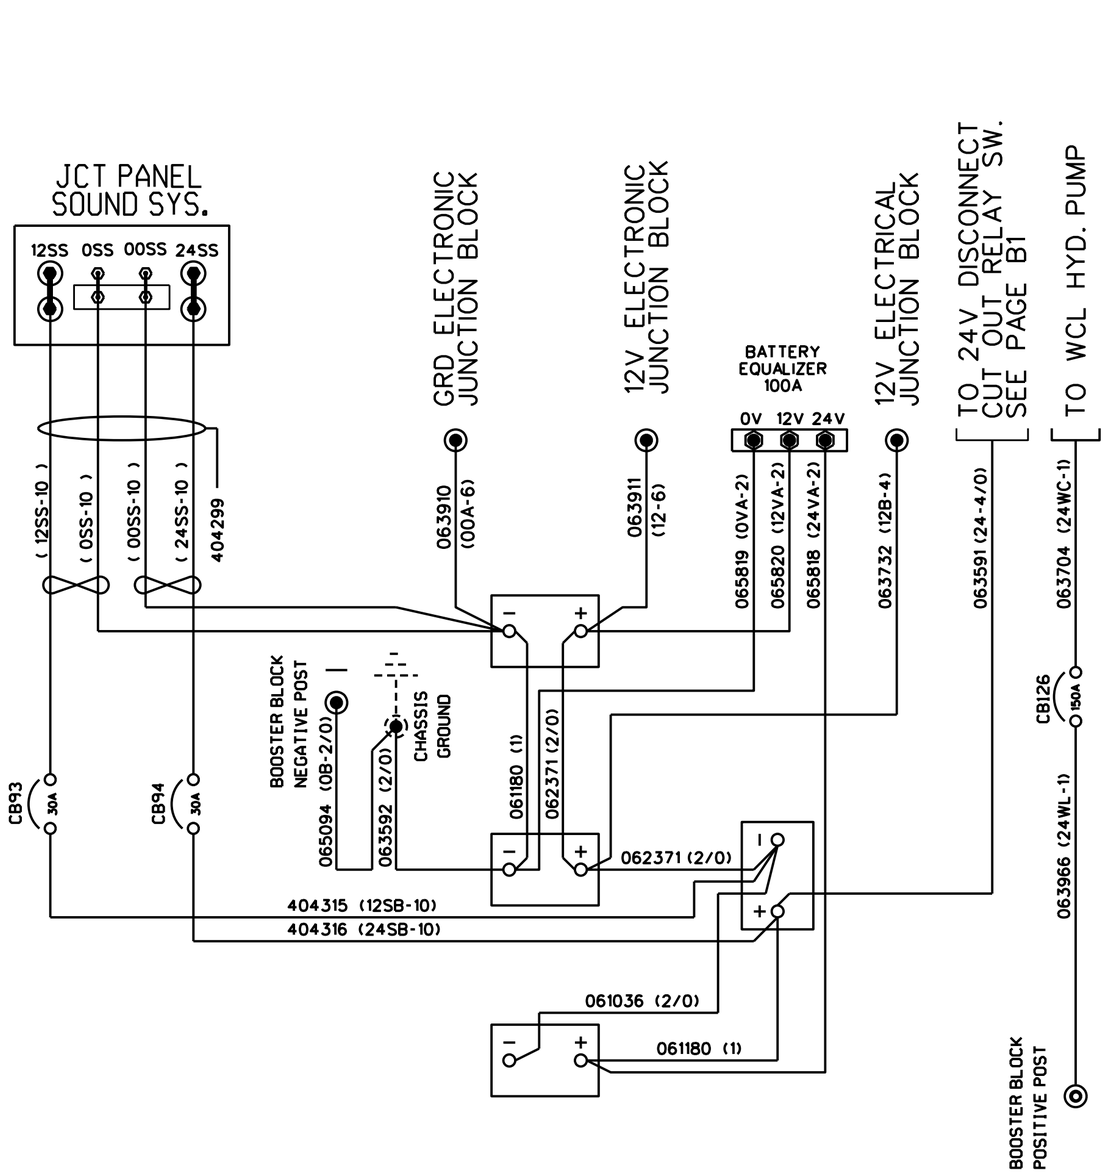


STANDARD BATTERIES

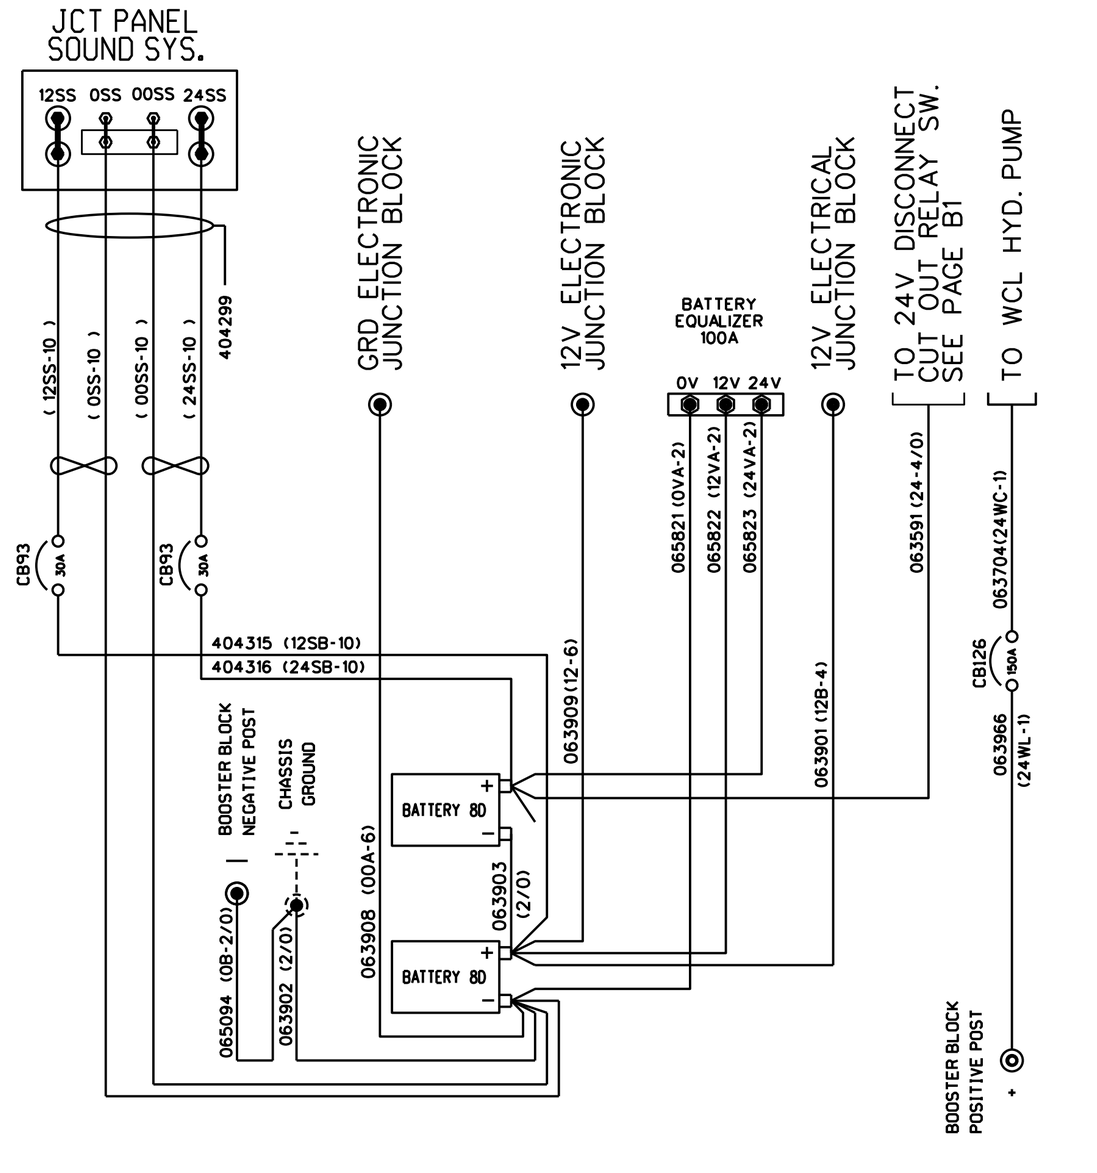


8D BATTERIES

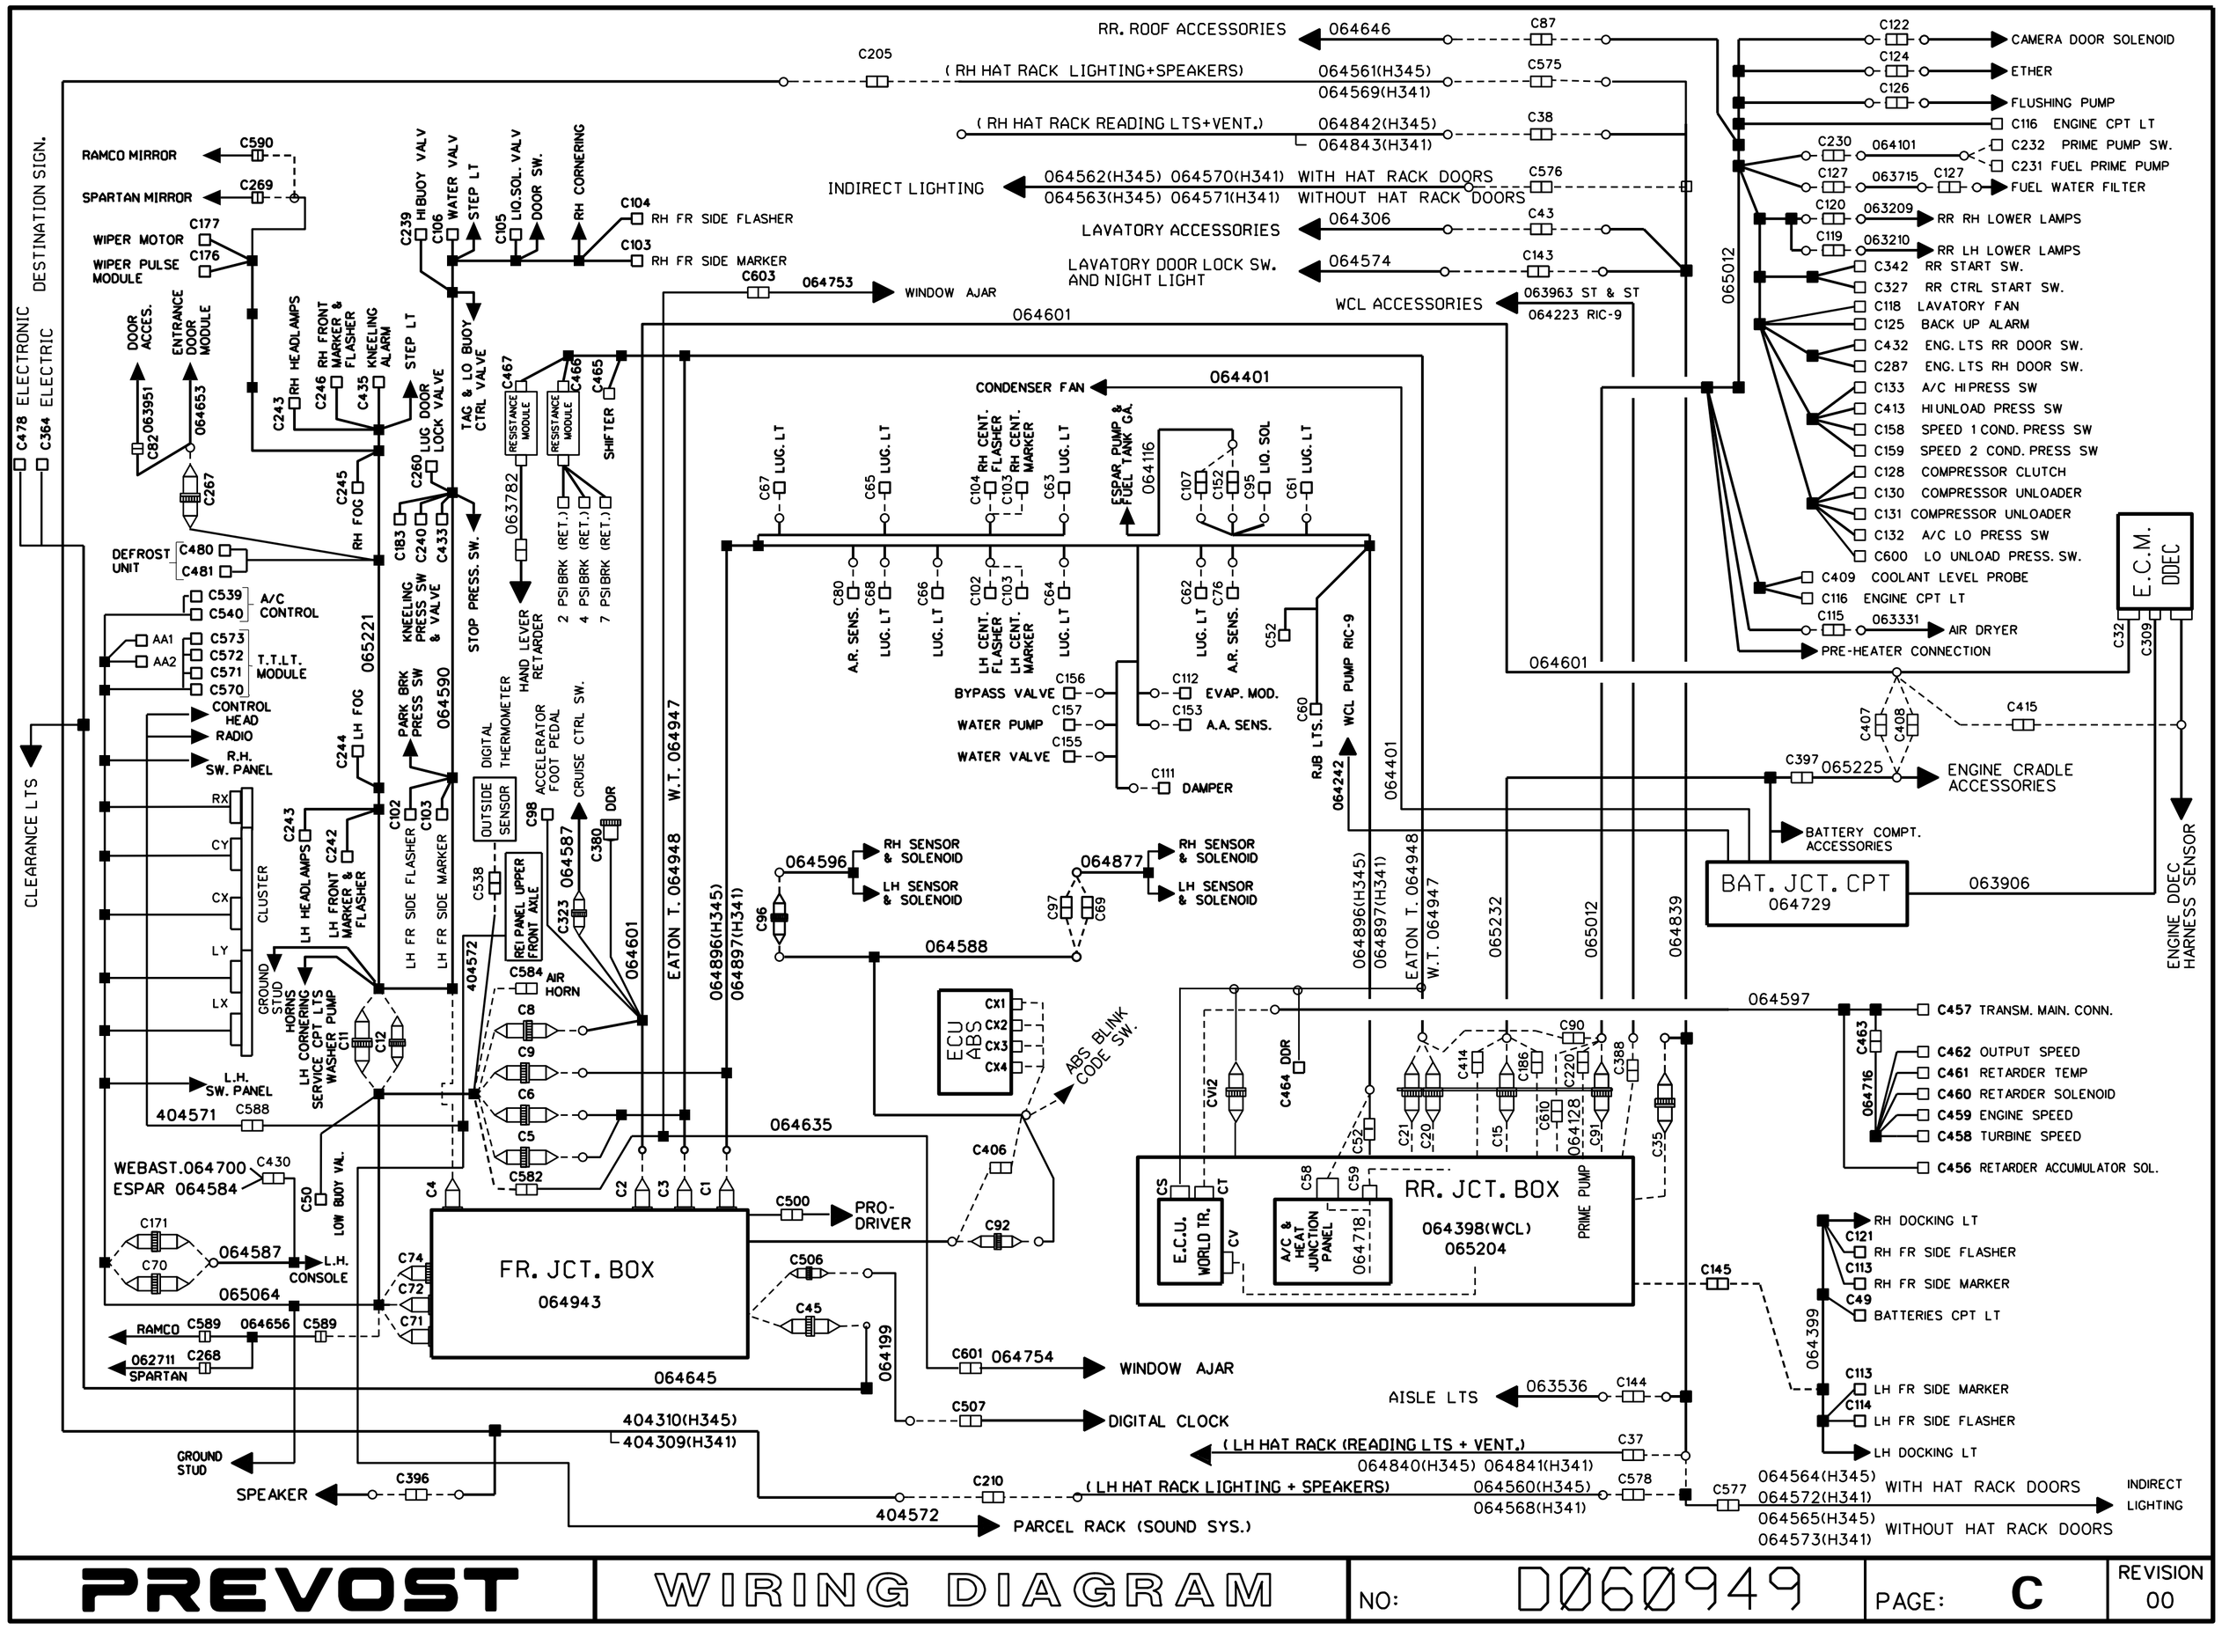

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: C	REVISION 00

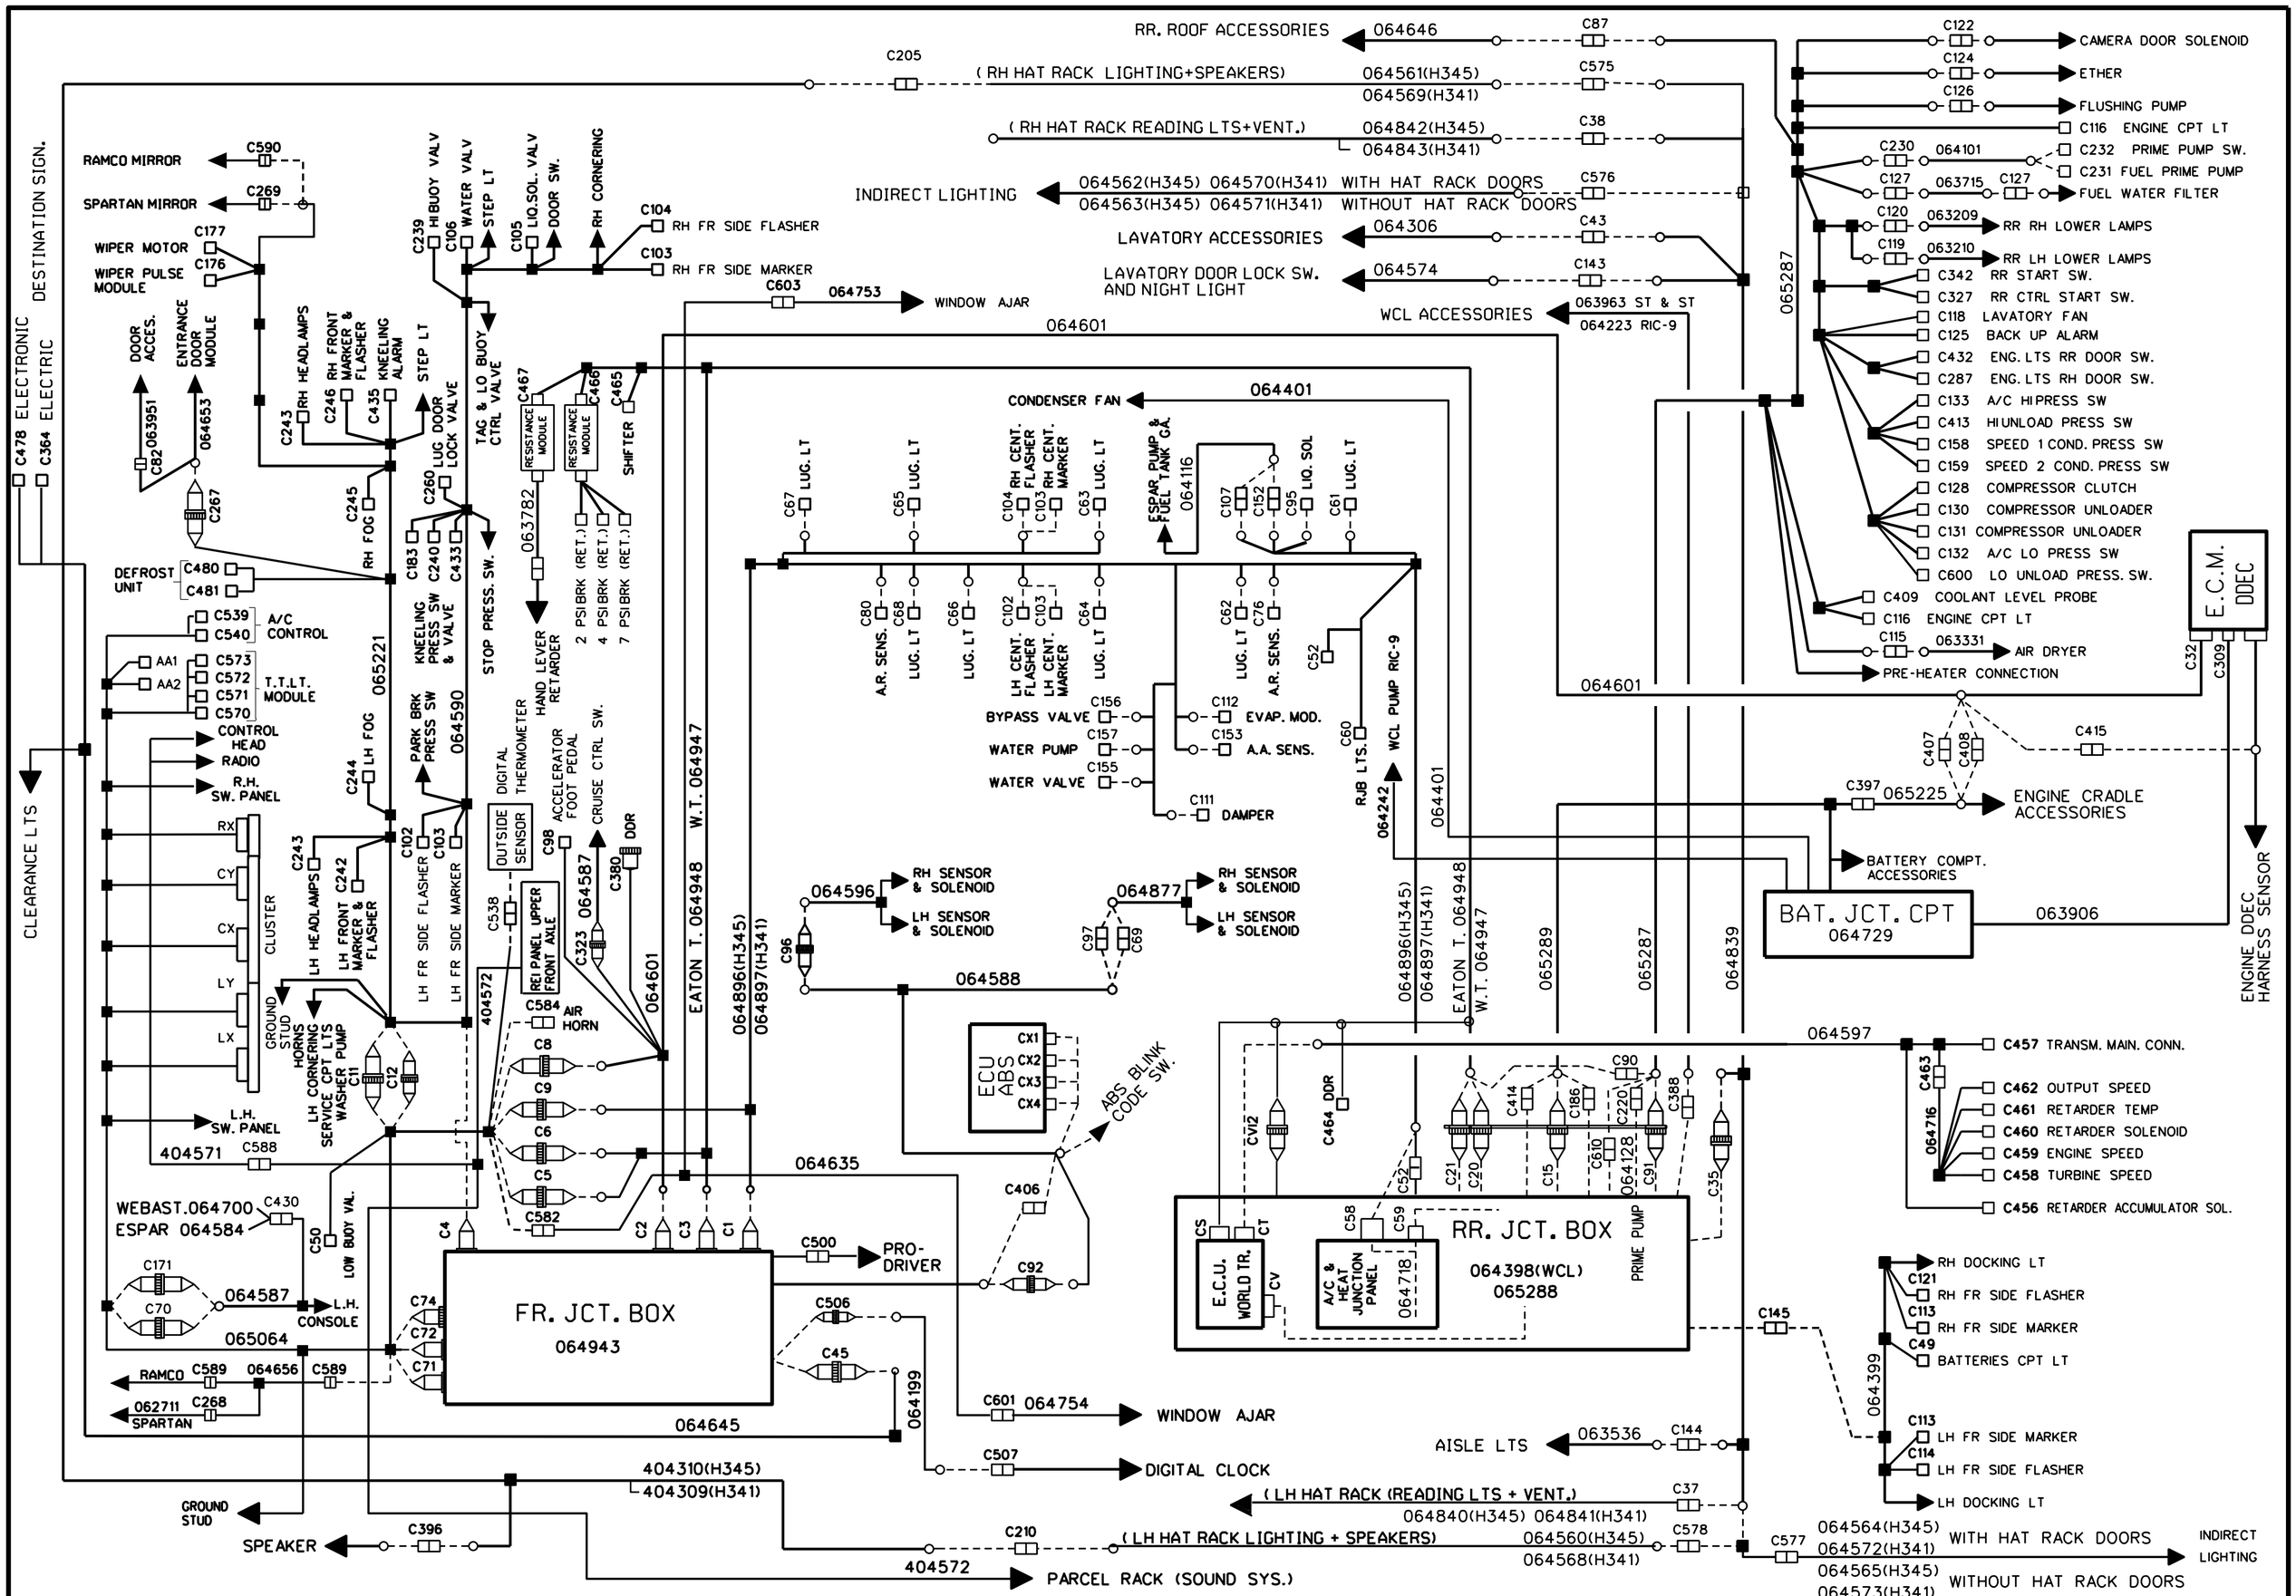

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: C	REVISION 03

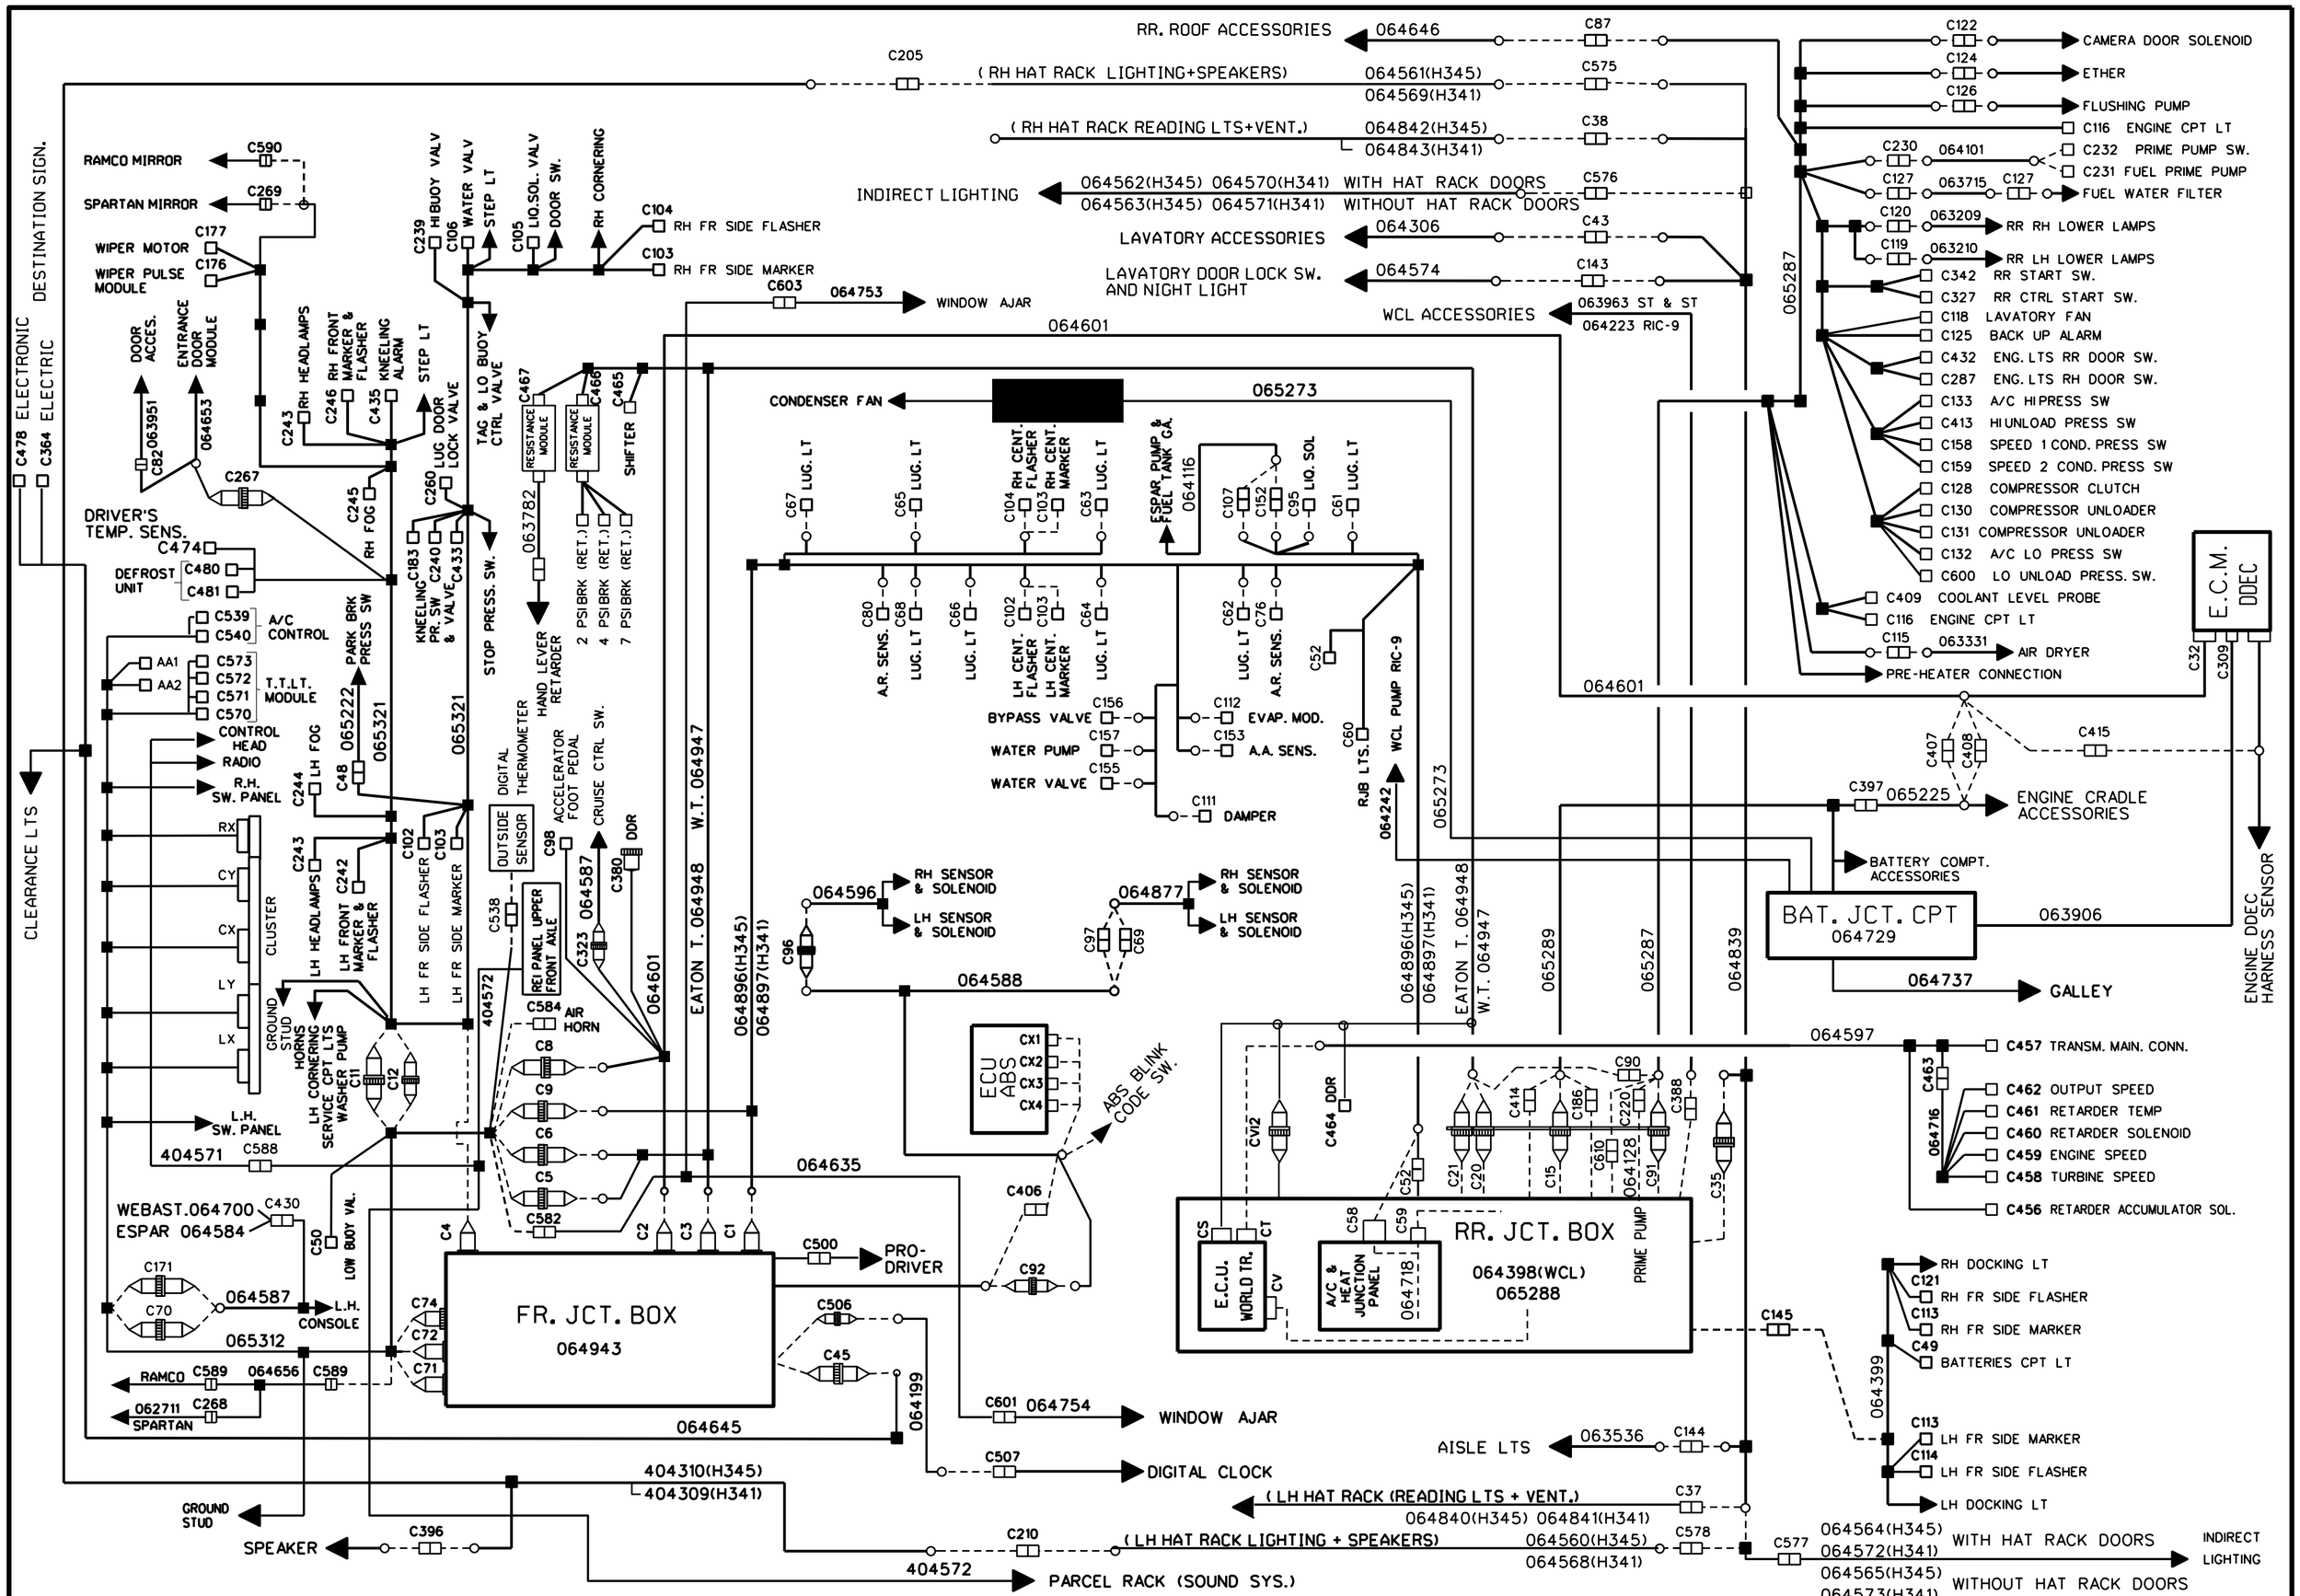


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: C	REVISION 04

RR. ROOF ACCESSORIES 064646 C87
C205 (RH HAT RACK LIGHTING+SPEAKERS) 064561(H345) 064569(H341) C575
(RH HAT RACK READING LTS+VENT.) 064842(H345) 064843(H341) C38
INDIRECT LIGHTING 064562(H345) 064570(H341) WITH HAT RACK DOORS 064563(H345) 064571(H341) WITHOUT HAT RACK DOORS C576
LAVATORY ACCESSORIES 064306 C43
LAVATORY DOOR LOCK SW. AND NIGHT LIGHT 064574 C143
WCL ACCESSORIES 063963 ST & ST 064223 RIC-9

C122 CAMERA DOOR SOLENOID
C124 ETHER
C126 FLUSHING PUMP
C116 ENGINE CPT LT
C223 FIRE DETECTOR
C230 064101 C232 PRIME PUMP SW. C231 FUEL PRIME PUMP
C127 063715 C127 FUEL WATER FILTER
C120 063209 RR RH LOWER LAMPS
C119 063210 RR LH LOWER LAMPS
C342 RR START SW.
C327 RR CTRL START SW.
C118 LAVATORY FAN
C125 BACK UP ALARM
C432 ENG. LTS RR DOOR SW.
C287 ENG. LTS RH DOOR SW.
C133 A/C HI PRESS SW
C413 HI UNLOAD PRESS SW
C158 SPEED 1 COND. PRESS SW
C159 SPEED 2 COND. PRESS SW
C128 COMPRESSOR CLUTCH
C130 COMPRESSOR UNLOADER
C131 COMPRESSOR UNLOADER
C132 A/C LO PRESS SW
C600 LO UNLOAD PRESS. SW.
C409 COOLANT LEVEL PROBE
C116 ENGINE CPT LT
C222 FIRE DETECTOR
C115 063331 AIR DRYER
PRE-HEATER CONNECTION
065287

RAMCO MIRROR C590
SPARTAN MIRROR C269
WIPER MOTOR C177
WIPER PULSE MODULE C176
C239 HI BUOY VALV
C106 WATER VALV
STEP LT
C105 LIQ.SOL. VALV
DOOR SW.
RH CORNERING
C104 RH FR SIDE FLASHER
C103 RH FR SIDE MARKER
C603 064753 WINDOW AJAR
064601
DOOR ACCES. C82 063951
ENTRANCE DOOR MODULE 064653
C243 RH HEADLAMPS
C246 RH FRONT MARKER & FLASHER
C435 KNEELING ALARM
STEP LT
TAG & LO BUOY CTRL VALVE
C467 RESISTANCE MODULE
C466 RESISTANCE MODULE
C465 SHIFTER
C267
C245 RH FOG
C260 LUG DOOR LOCK VALVE
063782
DRIVER'S TEMP. SENS. C474
DEFROST UNIT C480 C481
C539 C540 A/C CONTROL
AA1 AA2 C573 C572 C571 C570 T.T.LT. MODULE
PARK BRK PRESS SW
KNEELING PR. SW C183
KNEELING & VALVE C240 C433
STOP PRESS. SW.
2 PSI BRK (RET.) 4 PSI BRK (RET.) 7 PSI BRK (RET.)
HAND LEVER RETARDER
CONTROL HEAD
RADIO
R.H. SW. PANEL
065222
065378
C48
C244 LH FOG
DIGITAL THERMOMETER
OUTSIDE SENSOR
ACCELERATOR FOOT PEDAL
CRUISE CTRL SW.
DDR
C380
064587
C538
REI PANEL UPPER FRONT AXLE
C323
064601
404572
C584 AIR HORN
C8
C9
C6
C5
C582
064635
064645
064199
C45
C506
C507 DIGITAL CLOCK
C500 PRO-DRIVER
C406
C92
FR. JCT. BOX 064943
C74
C72
C71
C4
C2
C3
C1
C50 LOW BUOY VAL.
WEBAST.064700 ESPAR 064584 C430
C171
C70
064587 L.H. CONSOLE
065312
RAMCO C589 064656 C589
062711 SPARTAN C268
C601 064754 WINDOW AJAR
064596 RH SENSOR & SOLENOID LH SENSOR & SOLENOID
064877 RH SENSOR & SOLENOID LH SENSOR & SOLENOID
C96 C97 C69
064588
ECU ABS CX1 CX2 CX3 CX4
ABS BLINK CODE SW.
064896(H345) 064897(H341) EATON T. 064948 W.T. 064947
CONDENSER FAN
065273
C67 LUG. LT
C65 LUG. LT
C104 RH CENT. FLASHER
C103 RH CENT. MARKER
C63 LUG. LT
ESPAR. PUMP & FUEL TANK GA. 064116
C107 C152 C95 LIQ. SOL
C61 LUG. LT
C80 A.R. SENS.
C68 LUG. LT
C66 LUG. LT
C102 LH CENT. FLASHER
C103 LH CENT. MARKER
C64 LUG. LT
C62 LUG. LT
C76 A.R. SENS.
C52
C60 RJB LTS.
064242 WCL PUMP RIC-9
C156 BYPASS VALVE
C157 WATER PUMP
C155 WATER VALVE
C112 EVAP. MOD.
C153 A.A. SENS.
C111 DAMPER
064601
065273
064896(H345) 064897(H341) EATON T. 064948 W.T. 064947 065289 065287 064839
BAT. JCT. CPT 064729
063906
064737 GALLEY
BATTERY COMPT. ACCESSORIES
C415
C407 C408
C397 065225 ENGINE CRADLE ACCESSORIES
E.C.M. DDEC
C32 C309
ENGINE DDEC HARNESS SENSOR
C457 TRANSM. MAIN. CONN.
064597
C463
W/O RET. W/RET.
065330
C462 OUTPUT SPEED
C461 RETARDER TEMP
C460 RETARDER SOL.
C459 ENGINE SPEED
C458 TURBINE SPEED
065331
C462 OUTPUT SPEED
C459 ENGINE SPEED
C458 TURBINE SPEED
C456 RETARDER ACCUMULATOR SOL.
RR. JCT. BOX 064398(WCL) 065288
E.C.U. WORLD TR.
A/C & HEAT JUNCTION PANEL 064718
PRIME PUMP
C145
064399
RH DOCKING LT
C121 RH FR SIDE FLASHER
C113 RH FR SIDE MARKER
C49 BATTERIES CPT LT
C113 LH FR SIDE MARKER
C114 LH FR SIDE FLASHER
LH DOCKING LT
AISLE LTS 063536 C144
(LH HAT RACK (READING LTS + VENT.) 064840(H345) 064841(H341) C37
(LH HAT RACK LIGHTING + SPEAKERS) 064560(H345) 064568(H341) C578
C577 064564(H345) 064572(H341) WITH HAT RACK DOORS 064565(H345) 064573(H341) WITHOUT HAT RACK DOORS
INDIRECT LIGHTING
404310(H345) 404309(H341)
C210
404572 PARCEL RACK (SOUND SYS.)
GROUND STUD
SPEAKER C396
C478 ELECTRONIC
C364 ELECTRIC
DESTINATION SIGN.
CLEARANCE LTS
CLUSTER RX CY CX LY LX
GROUND STUD HORNS
LH HEADLAMPS
LH FRONT MARKER & FLASHER C242
LH FR SIDE FLASHER
LH FR SIDE MARKER
LH CORNERING SERVICE CPT LTS WASHER PUMP C11 C12
L.H. SW. PANEL
404571 C588

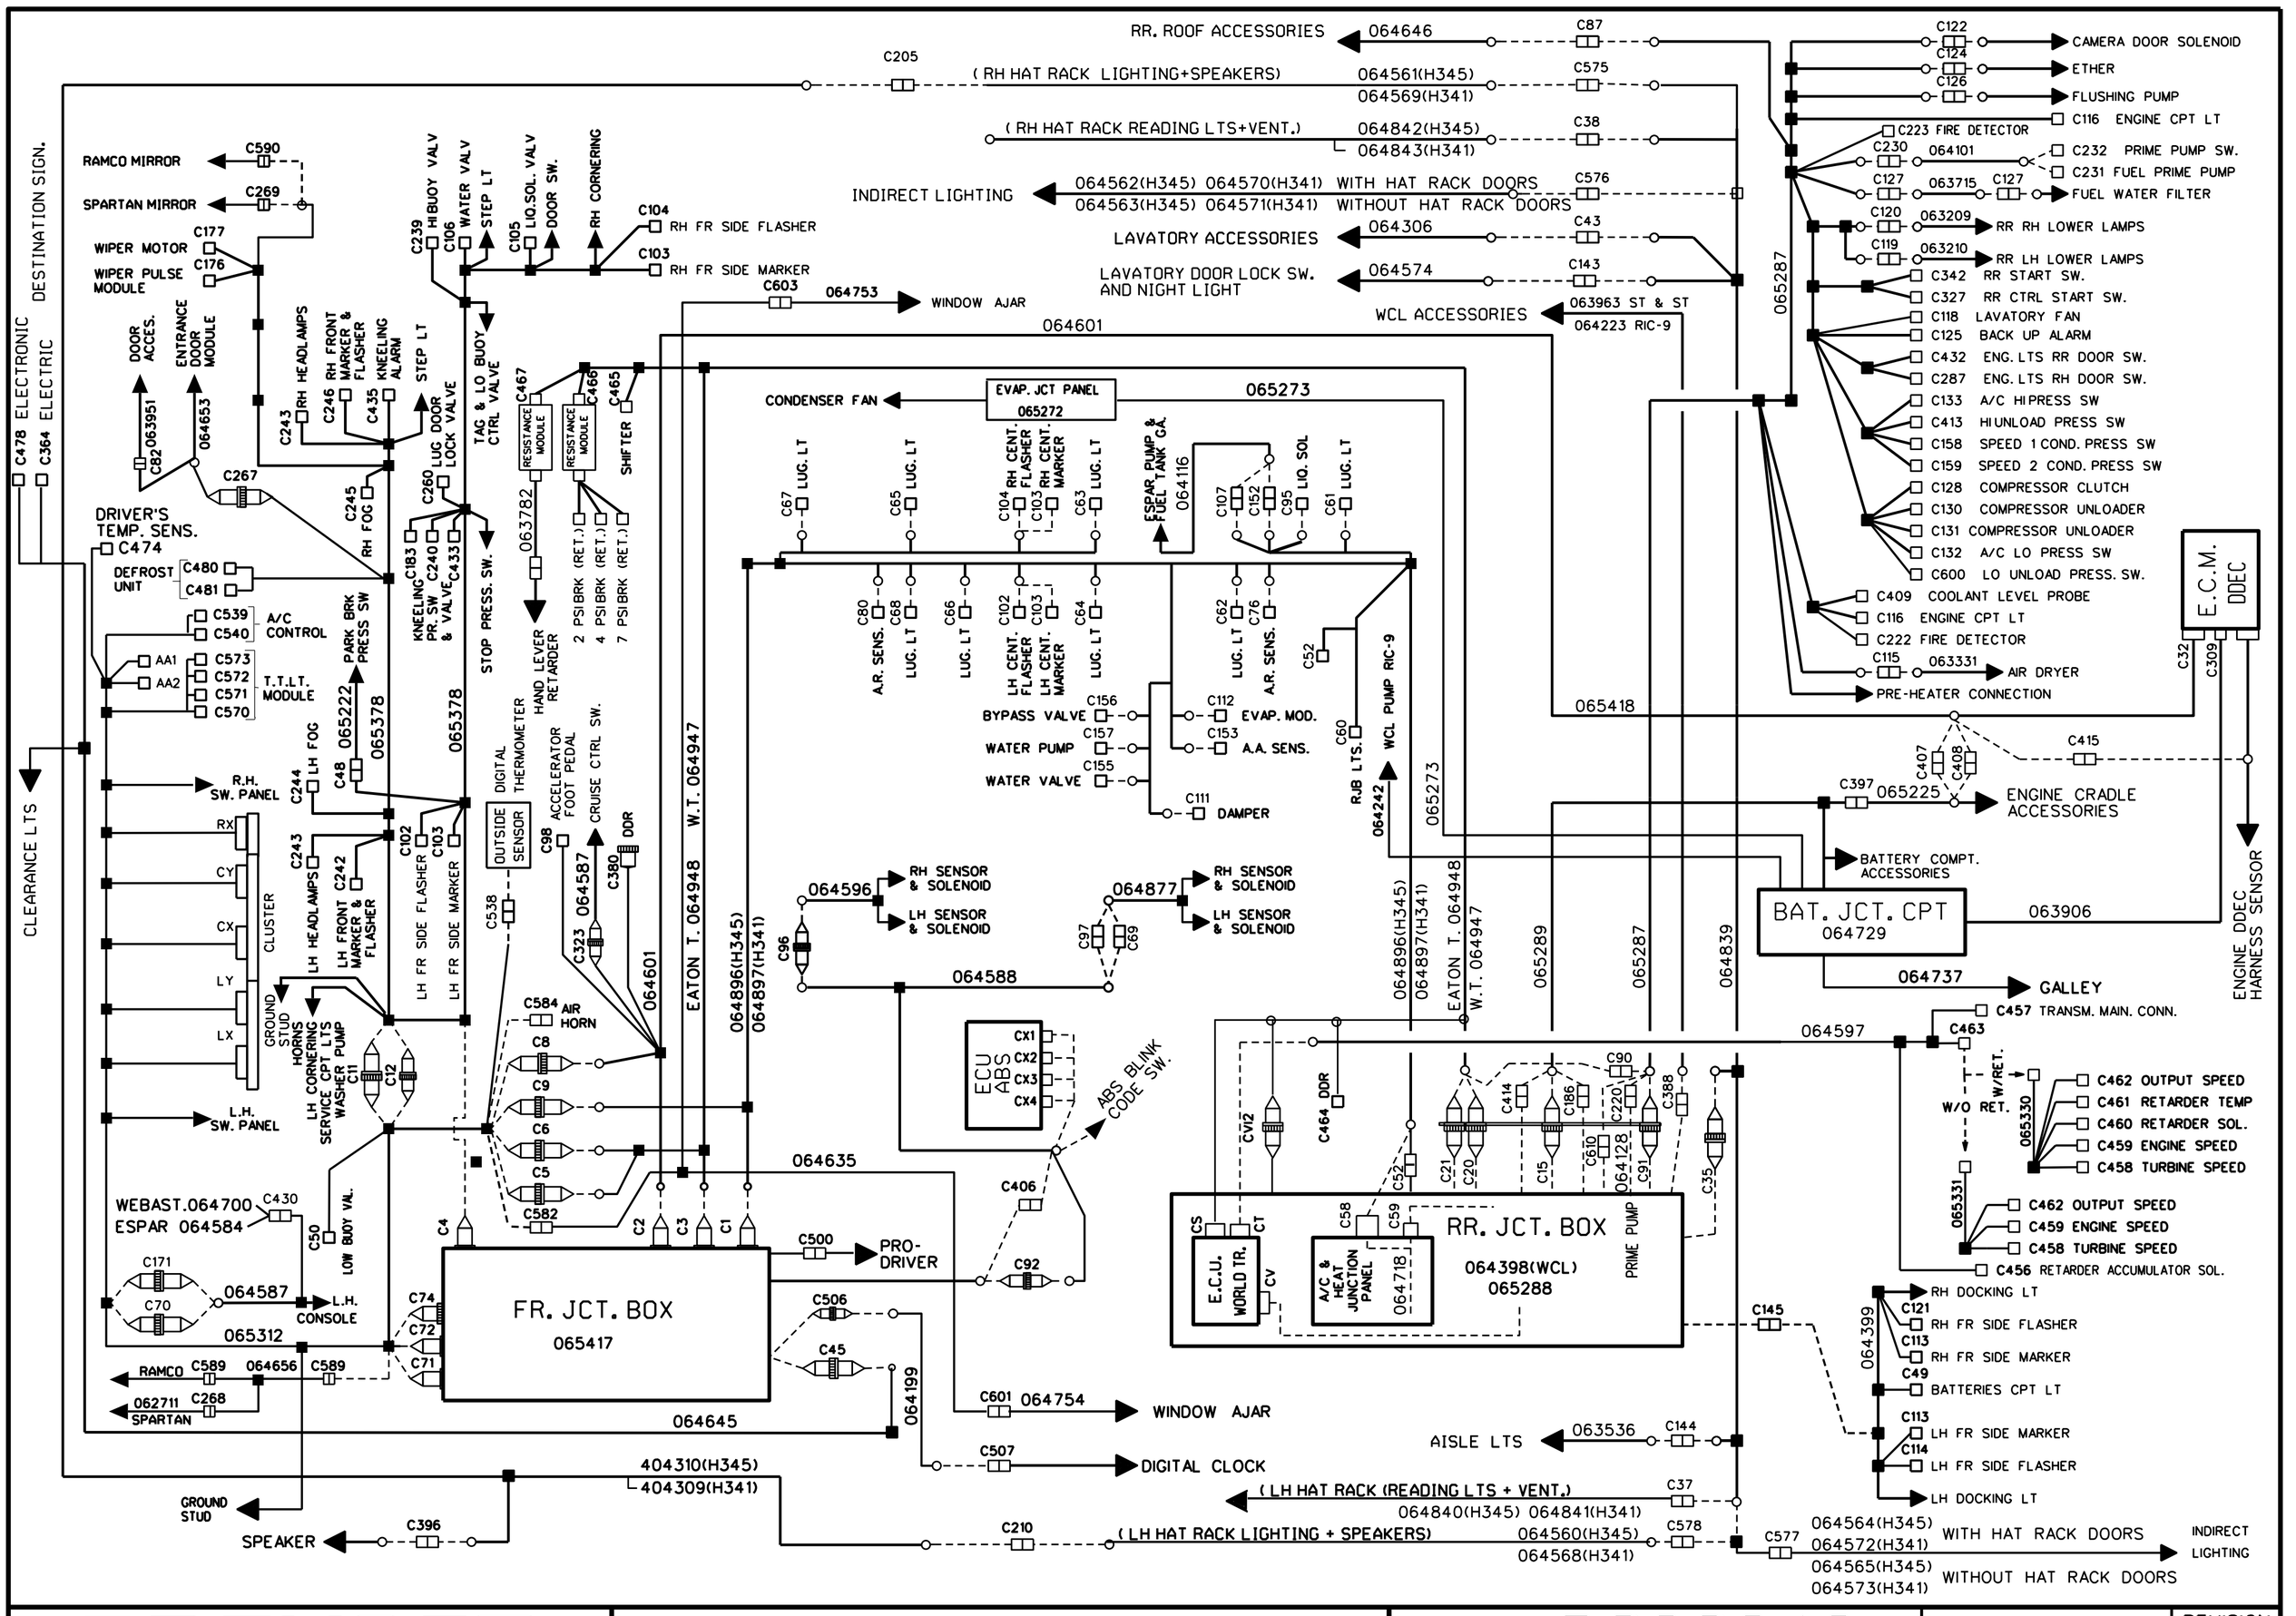
RR. ROOF ACCESSORIES 064646
(RH HAT RACK LIGHTING+SPEAKERS) 064561(H345) 064569(H341)
(RH HAT RACK READING LTS+VENT.) 064842(H345) 064843(H341)
INDIRECT LIGHTING 064562(H345) 064570(H341) WITH HAT RACK DOORS
064563(H345) 064571(H341) WITHOUT HAT RACK DOORS
LAVATORY ACCESSORIES 064306
LAVATORY DOOR LOCK SW. AND NIGHT LIGHT 064574
WCL ACCESSORIES 063963 ST & ST 064223 RIC-9
WINDOW AJAR 064753
064601
065273
065272
EVAP. JCT PANEL
CONDENSER FAN
ESPAR PUMP & FUEL TANK GA. 064116
065287
065418
065225
ENGINE CRADLE ACCESSORIES
BATTERY COMPT. ACCESSORIES
BAT. JCT. CPT 064729
063906
064737
GALLEY
ENGINE DDEC HARNESS SENSOR
E.C.M. DDEC
C32
C309
C415
C407
C408
C397
C122 CAMERA DOOR SOLENOID
C124 ETHER
C126 FLUSHING PUMP
C116 ENGINE CPT LT
C223 FIRE DETECTOR
C230 064101 C232 PRIME PUMP SW. C231 FUEL PRIME PUMP
C127 063715 C127 FUEL WATER FILTER
C120 063209 RR RH LOWER LAMPS
C119 063210 RR LH LOWER LAMPS
C342 RR START SW.
C327 RR CTRL START SW.
C118 LAVATORY FAN
C125 BACK UP ALARM
C432 ENG. LTS RR DOOR SW.
C287 ENG. LTS RH DOOR SW.
C133 A/C HI PRESS SW
C413 HI UNLOAD PRESS SW
C158 SPEED 1 COND. PRESS SW
C159 SPEED 2 COND. PRESS SW
C128 COMPRESSOR CLUTCH
C130 COMPRESSOR UNLOADER
C131 COMPRESSOR UNLOADER
C132 A/C LO PRESS SW
C600 LO UNLOAD PRESS. SW.
C409 COOLANT LEVEL PROBE
C116 ENGINE CPT LT
C222 FIRE DETECTOR
C115 063331 AIR DRYER
PRE-HEATER CONNECTION
C205
(RH HAT RACK LIGHTING+SPEAKERS) 064561(H345) 064569(H341)
(RH HAT RACK READING LTS+VENT.) 064842(H345) 064843(H341)
INDIRECT LIGHTING 064562(H345) 064570(H341) WITH HAT RACK DOORS
064563(H345) 064571(H341) WITHOUT HAT RACK DOORS
C87 C575 C38 C576 C43 C143
RAMCO MIRROR C590
SPARTAN MIRROR C269
WIPER MOTOR C177
WIPER PULSE MODULE C176
DOOR ACCES. C82 063951
ENTRANCE DOOR MODULE 064653
C267
DRIVER'S TEMP. SENS. C474
DEFROST UNIT C480 C481
A/C CONTROL C539 C540
T.T.L.T. MODULE AA1 AA2 C573 C572 C571 C570
C478 ELECTRONIC
C364 ELECTRIC
DESTINATION SIGN.
CLEARANCE LTS
R.H. SW. PANEL
L.H. SW. PANEL
CLUSTER
RX CY CX LY LX
GROUND STUD
HORNS
LH CORNERING
SERVICE CPT LTS
WASHER PUMP C11 C12
LH HEADLAMPS C243
LH FRONT MARKER & FLASHER C242
LH FR SIDE FLASHER C102
LH FR SIDE MARKER C103
C538
C239 HI BUOY VALV
C106 WATER VALV
STEP LT
C105 LIQ.SOL. VALV
DOOR SW.
RH CORNERING
C104 RH FR SIDE FLASHER
C103 RH FR SIDE MARKER
C603
RH HEADLAMPS C243
C246 RH FRONT MARKER & FLASHER
C435 KNEELING ALARM
STEP LT
LUG DOOR LOCK VALVE
TAG & LO BUOY CTRL VALVE
C467 C466 C465
RESISTANCE MODULE
SHIFTER
C260 C183 C240 C433
KNEELING PR. SW & VALVE
C245 RH FOG
LH FOG C244
C48 065222
PARK BRK PRESS SW
065378
STOP PRESS. SW.
063782
2 PSI BRK (RET.)
4 PSI BRK (RET.)
7 PSI BRK (RET.)
HAND LEVER RETARDER
DIGITAL THERMOMETER
OUTSIDE SENSOR
ACCELERATOR FOOT PEDAL
C98
CRUISE CTRL SW.
C87
DDR
C380
C323 064587
064601
EATON T. 064948
W.T. 064947
064896(H345)
064897(H341)
C584 AIR HORN
C8 C9 C6 C5 C582
C4 C2 C3 C1
C50 LOW BUOY VAL.
WEBAST.064700 C430
ESPAR 064584
C171 C70
064587
L.H. CONSOLE
065312
RAMCO C589 064656 C589
062711 C268 SPARTAN
064645
FR. JCT. BOX
065417
C74 C72 C71
C500 PRO-DRIVER
C506
C45
064199
C601 064754 WINDOW AJAR
C507 DIGITAL CLOCK
C92
C406
064635
ABS BLINK CODE SW.
ECU ABS CX1 CX2 CX3 CX4
064596 RH SENSOR & SOLENOID LH SENSOR & SOLENOID
064877 RH SENSOR & SOLENOID LH SENSOR & SOLENOID
C96 C97 C69
064588
C80 A.R. SENS.
C68 LUG. LT
C66 LUG. LT
C102 LH CENT. FLASHER
C103 LH CENT. MARKER
C64 LUG. LT
C67 LUG. LT
C65 LUG. LT
C104 RH CENT. FLASHER
C103 RH CENT. MARKER
C63 LUG. LT
C107 C152 C95 LIQ. SOL.
C61 LUG. LT
C62 LUG. LT
C76 A.R. SENS.
C52
C60 RJB LTS.
WCL PUMP RIC-9
064242
065273
C156 BYPASS VALVE
C157 WATER PUMP
C155 WATER VALVE
C112 EVAP. MOD.
C153 A.A. SENS.
C111 DAMPER
064896(H345)
064897(H341)
EATON T. 064948
W.T. 064947
065289
065287
064839
C464 DDR
C212
C414
C186
C220
C610
064128
C91
C388
C90
C21
C20
C15
C35
C52
C58
C59
RR. JCT. BOX
064398(WCL)
065288
PRIME PUMP
E.C.U. WORLD TR.
CS CT CV
A/C & HEAT JUNCTION PANEL
064718
C145
064597
C463
C457 TRANSM. MAIN. CONN.
W/RET.
W/O RET.
065330
C462 OUTPUT SPEED
C461 RETARDER TEMP
C460 RETARDER SOL.
C459 ENGINE SPEED
C458 TURBINE SPEED
065331
C462 OUTPUT SPEED
C459 ENGINE SPEED
C458 TURBINE SPEED
C456 RETARDER ACCUMULATOR SOL.
064399
RH DOCKING LT
C121 RH FR SIDE FLASHER
C113 RH FR SIDE MARKER
C49 BATTERIES CPT LT
C113 LH FR SIDE MARKER
C114 LH FR SIDE FLASHER
LH DOCKING LT
AISLE LTS 063536 C144
(LH HAT RACK (READING LTS + VENT.) 064840(H345) 064841(H341) C37
(LH HAT RACK LIGHTING + SPEAKERS) 064560(H345) 064568(H341) C578
C577 064564(H345) 064572(H341) WITH HAT RACK DOORS
064565(H345) 064573(H341) WITHOUT HAT RACK DOORS
INDIRECT LIGHTING
404310(H345)
404309(H341)
C210
C396
SPEAKER
GROUND STUD

RR. ROOF ACCESSORIES 064646 C87
C205 (RH HAT RACK LIGHTING+SPEAKERS) 064561(H345) 064569(H341) C575
(RH HAT RACK READING LTS+VENT.) 064842(H345) 064843(H341) C38
INDIRECT LIGHTING 064562(H345) 064570(H341) WITH HAT RACK DOORS 064563(H345) 064571(H341) WITHOUT HAT RACK DOORS C576
LAVATORY ACCESSORIES 064306 C43
LAVATORY DOOR LOCK SW. AND NIGHT LIGHT 064574 C143
WCL ACCESSORIES 063963 ST & ST 064223 RIC-9

C122 CAMERA DOOR SOLENOID
C124 ETHER
C126 FLUSHING PUMP
C116 ENGINE CPT LT
C223 FIRE DETECTOR
C230 064101 C232 PRIME PUMP SW. C231 FUEL PRIME PUMP
C127 063715 C127 FUEL WATER FILTER
C120 063209 RR RH LOWER LAMPS
C119 063210 RR LH LOWER LAMPS
C342 RR START SW.
C327 RR CTRL START SW.
C118 LAVATORY FAN
C125 BACK UP ALARM
C432 ENG. LTS RR DOOR SW.
C287 ENG. LTS RH DOOR SW.
C133 A/C HI PRESS SW
C413 HI UNLOAD PRESS SW
C158 SPEED 1 COND. PRESS SW
C159 SPEED 2 COND. PRESS SW
C128 COMPRESSOR CLUTCH
C130 COMPRESSOR UNLOADER
C131 COMPRESSOR UNLOADER
C132 A/C LO PRESS SW
C600 LO UNLOAD PRESS. SW.
C409 COOLANT LEVEL PROBE
C116 ENGINE CPT LT
C222 FIRE DETECTOR
C115 063331 AIR DRYER
PRE-HEATER CONNECTION
065287
065418
E.C.M. DDEC
C32
C309


RAMCO MIRROR C590
SPARTAN MIRROR C269
WIPER MOTOR C177
WIPER PULSE MODULE C176
DESTINATION SIGN.
C478 ELECTRONIC
C364 ELECTRIC
DOOR ACCES. C82 063951
ENTRANCE DOOR MODULE 064653
C267
DRIVER'S TEMP. SENS. C474
DEFROST UNIT C480 C481
A/C CONTROL C539 C540
T.T.L.T. MODULE AA1 AA2 C573 C572 C571 C570
PARK BRK PRESS SW 065222
065378
C239 HI BUOY VALV
C106 WATER VALV
STEP LT
C105 LIQ.SOL. VALV
DOOR SW.
RH CORNERING
C104 RH FR SIDE FLASHER
C103 RH FR SIDE MARKER
C603 064753 WINDOW AJAR
RH HEADLAMPS C243
C246 RH FRONT MARKER & FLASHER
C435 KNEELING ALARM
STEP LT
C245 RH FOG
C260 LUG DOOR LOCK VALVE
TAG & LO BUOY CTRL VALVE
C183 KNEELING PR. SW & VALVE C240 C433
STOP PRESS. SW.
C467 C466 C465 RESISTANCE MODULE
063782 HAND LEVER RETARDER
2 PSI BRK (RET.) 4 PSI BRK (RET.) 7 PSI BRK (RET.)
SHIFTER
065418
W.T. 064947
DIGITAL THERMOMETER
OUTSIDE SENSOR
ACCELERATOR FOOT PEDAL
CRUISE CTRL SW.
C98 DDR
C380 064587
C323
EATON T. 064948
064896(H345) 064897(H341)

CONDENSER FAN
EVAP. JCT PANEL 065272
065273
C67 LUG. LT
C65 LUG. LT
C104 RH CENT. FLASHER C103 RH CENT. MARKER
C63 LUG. LT
ESPAR. PUMP & FUEL TANK GA. 064116
C107 C152 C95 LIQ. SOL
C61 LUG. LT
C80 A.R. SENS. C68 LUG. LT
C66 LUG. LT
C102 LH CENT. FLASHER C103 LH CENT. MARKER
C64 LUG. LT
C62 LUG. LT C76 A.R. SENS.
C52
C156 BYPASS VALVE
C157 WATER PUMP
C155 WATER VALVE
C112 EVAP. MOD.
C153 A.A. SENS.
C111 DAMPER
C60 RJB LTS.
WCL PUMP RIC-9
064529
065273
064596 RH SENSOR & SOLENOID LH SENSOR & SOLENOID
064877 RH SENSOR & SOLENOID LH SENSOR & SOLENOID
C96 C97 C69
064588
064896(H345) 064897(H341)
EATON T. 064948 W.T. 064947
066411
065287
064839
BAT. JCT. CPT 065413
063906
064737 GALLEY
C457 TRANSM. MAIN. CONN.
064597
C463
W/O RET. 065330
C462 OUTPUT SPEED
C461 RETARDER TEMP
C460 RETARDER SOL.
C459 ENGINE SPEED
C458 TURBINE SPEED
W/RET. 065331
C462 OUTPUT SPEED
C459 ENGINE SPEED
C458 TURBINE SPEED
C456 RETARDER ACCUMULATOR SOL.
ENGINE CRADLE ACCESSORIES
C397 065225
C407 C408 C415
BATTERY COMPT. ACCESSORIES
ENGINE DDEC HARNESS SENSOR

CLEARANCE LTS
R.H. SW. PANEL
L.H. SW. PANEL
CLUSTER
RX CY CX LY LX
GROUND STUD
HORNS
LH CORNERING
SERVICE CPT LTS
WASHER PUMP
C11 C12
LH HEADLAMPS C244
LH FOG 065244
LH FRONT MARKER & FLASHER C243 C242
LH FR SIDE FLASHER C102
LH FR SIDE MARKER C103
C538
C584 AIR HORN
C8 C9 C6 C5 C582
C584 C8 C9 C6 C5 C582
ECU ABS CX1 CX2 CX3 CX4
ABS BLINK CODE SW.
064635
C406
C92
C500 PRO-DRIVER
C4 C2 C3 C1
FR. JCT. BOX 065417
C74 C72 C71
C506 C45
064199
C601 064754 WINDOW AJAR
C507 DIGITAL CLOCK
064645
065312
WEBAST.064700 ESPAR 064584 C430
C50 LOW BUOY VAL.
C171 C70 064587 L.H. CONSOLE
RAMCO C589 064656 C589
062711 C268 SPARTAN
GROUND STUD
SPEAKER C396
404310(H345) 404309(H341)
C210
(LH HAT RACK LIGHTING + SPEAKERS) 064560(H345) 064568(H341) C578
(LH HAT RACK (READING LTS + VENT.) 064840(H345) 064841(H341) C37
AISLE LTS 063536 C144
C577 064564(H345) 064572(H341) WITH HAT RACK DOORS
064565(H345) 064573(H341) WITHOUT HAT RACK DOORS
INDIRECT LIGHTING

CV12 C464 DDR
C414 C186 C90 C220 C388
C21 C20 C15 C610 064128 C91 C35
C52
CS CT CV
E.C.U. WORLD TR.
C58 C59
A/C & HEAT JUNCTION PANEL 064718
RR. JCT. BOX 064398(WCL) 065288
PRIME PUMP
C145
064399
RH DOCKING LT
C121 RH FR SIDE FLASHER
C113 RH FR SIDE MARKER
C49 BATTERIES CPT LT
C113 LH FR SIDE MARKER
C114 LH FR SIDE FLASHER
LH DOCKING LT

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: C1	REVISION 08

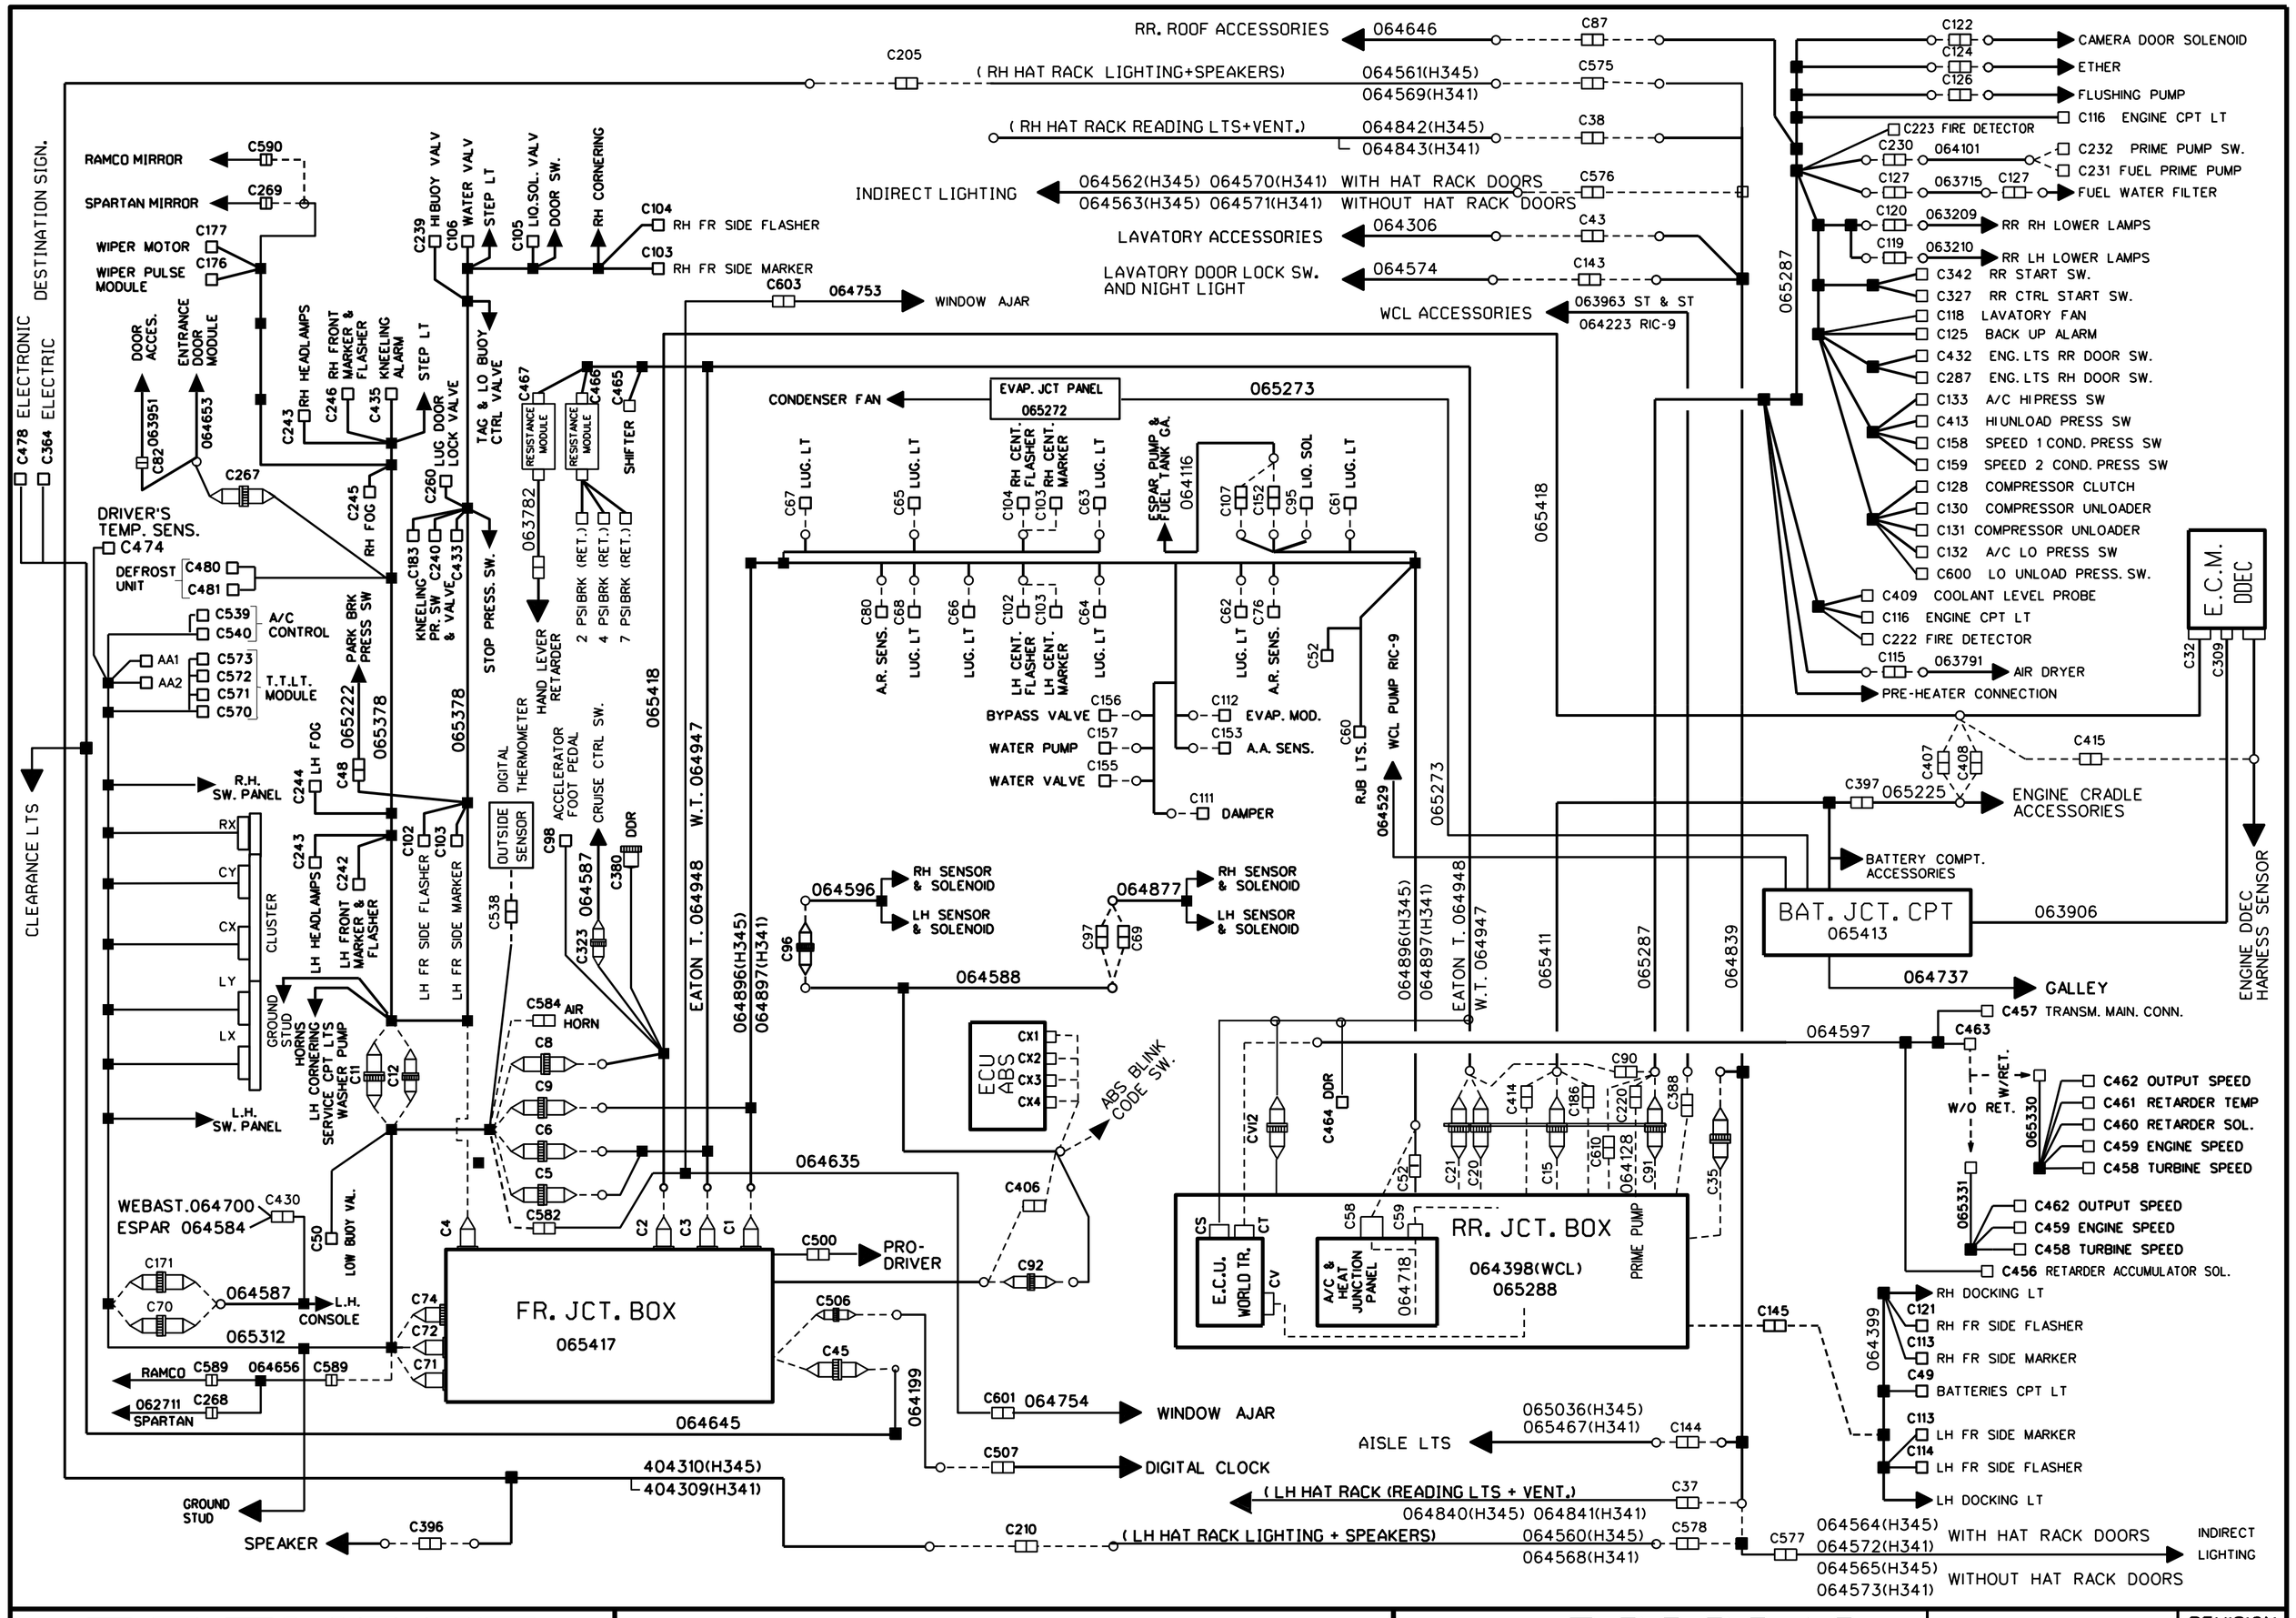

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: C1	REVISION 11

RR. ROOF ACCESSORIES 064646 C87
C205 (RH HAT RACK LIGHTING+SPEAKERS) 065495(H345) 064569(H341) C575
(RH HAT RACK READING LTS+VENT.) 064842(H345) 064843(H341) C38
INDIRECT LIGHTING 064562(H345) 064570(H341) WITH HAT RACK DOORS 064563(H345) 064571(H341) WITHOUT HAT RACK DOORS C576
LAVATORY ACCESSORIES 064306 C43
LAVATORY DOOR LOCK SW. AND NIGHT LIGHT 064574 C143
WCL ACCESSORIES 063963 ST & ST 064223 RIC-9

C122 CAMERA DOOR SOLENOID
C124 ETHER
C126 FLUSHING PUMP
C116 ENGINE CPT LT
C223 FIRE DETECTOR
C230 064101 C232 PRIME PUMP SW. C231 FUEL PRIME PUMP
C127 063715 C127 FUEL WATER FILTER
C120 063209 RR RH LOWER LAMPS
C119 063210 RR LH LOWER LAMPS
C342 RR START SW.
C327 RR CTRL START SW.
C118 LAVATORY FAN
C125 BACK UP ALARM
C432 ENG. LTS RR DOOR SW.
C287 ENG. LTS RH DOOR SW.
C133 A/C HI PRESS SW
C413 HI UNLOAD PRESS SW
C158 SPEED 1 COND. PRESS SW
C159 SPEED 2 COND. PRESS SW
C128 COMPRESSOR CLUTCH
C130 COMPRESSOR UNLOADER
C131 COMPRESSOR UNLOADER
C132 A/C LO PRESS SW
C600 LO UNLOAD PRESS. SW.
C409 COOLANT LEVEL PROBE
C116 ENGINE CPT LT
C222 FIRE DETECTOR
C115 063331 AIR DRYER
PRE-HEATER CONNECTION
065287
065418

C478 ELECTRONIC
C364 ELECTRIC
DESTINATION SIGN.
CLEARANCE LTS

RAMCO MIRROR C590
SPARTAN MIRROR C269
WIPER MOTOR C177
WIPER PULSE MODULE C176
DOOR ACCES. C82 063951
ENTRANCE DOOR MODULE 064653
RH HEADLAMPS C243
RH FRONT MARKER & FLASHER C246
KNEELING ALARM C435
STEP LT
C267
DRIVER'S TEMP. SENS. C474
DEFROST UNIT C480 C481
C539 C540 A/C CONTROL
AA1 AA2 C573 C572 C571 C570 T.T.L.T. MODULE
PARK BRK PRESS SW
C245 RH FOG
C260 LUG DOOR LOCK VALVE
C183 KNEELING PR. SW & VALVE C240 C433
STOP PRESS. SW.
063782
C467 C466 RESISTANCE MODULE
C465 SHIFTER
HAND LEVER RETARDER
2 PSI BRK (RET.)
4 PSI BRK (RET.)
7 PSI BRK (RET.)
TAG & LO BUOY CTRL VALVE
C239 HI BUOY VALV
C106 WATER VALV
STEP LT
C105 LIQ.SOL. VALV
DOOR SW.
RH CORNERING
C104 RH FR SIDE FLASHER
C103 RH FR SIDE MARKER
C603 064753 WINDOW AJAR
065378
065222
C48
C244 LH FOG
R.H. SW. PANEL
L.H. SW. PANEL
RX CY CX LY LX
CLUSTER
GROUND STUD
HORNS
LH CORNERING
SERVICE CPT LTS
WASHER PUMP
C11 C12
LH HEADLAMPS C243
LH FRONT MARKER & FLASHER C242
LH FR SIDE FLASHER C102
LH FR SIDE MARKER C103
C538
DIGITAL THERMOMETER
OUTSIDE SENSOR
ACCELERATOR FOOT PEDAL C98
CRUISE CTRL SW.
C380 DDR
C323 064587
C584 AIR HORN
C8 C9 C6 C5 C582
C4 C2 C3 C1
WEBAST.064700 C430
ESPAR 064584
C50 LOW BUOY VAL.
C171 C70
064587
L.H. CONSOLE
065312
C74 C72 C71
FR. JCT. BOX
065417
C500 PRO-DRIVER
C506 C45
064199
C601 064754 WINDOW AJAR
C507 DIGITAL CLOCK
064645
RAMCO C589 064656 C589
062711 SPARTAN C268
GROUND STUD
SPEAKER C396
404310(H345)
404309(H341)
C210
064635
C406 C92
064588
064596 RH SENSOR & SOLENOID LH SENSOR & SOLENOID
064877 RH SENSOR & SOLENOID LH SENSOR & SOLENOID
C96 C97 C69
ECU ABS CX1 CX2 CX3 CX4
ABS BLINK CODE SW.
W.T. 064947
EATON T. 064948
064896(H345)
064897(H341)

CONDENSER FAN
EVAP. JCT PANEL 065272
065273
C67 LUG. LT
C65 LUG. LT
C104 RH CENT. FLASHER
C103 RH CENT. MARKER
C63 LUG. LT
ESPAR PUMP & FUEL TANK GA. 064116
C107 C152 C95 LIQ. SOL
C61 LUG. LT
C80 A.R. SENS.
C68 LUG. LT
C66 LUG. LT
C102 LH CENT. FLASHER
C103 LH CENT. MARKER
C64 LUG. LT
C62 LUG. LT
C76 A.R. SENS.
C52
C60 RJB LTS.
WCL PUMP RIC-9
064529
BYPASS VALVE C156
WATER PUMP C157
WATER VALVE C155
C112 EVAP. MOD.
C153 A.A. SENS.
C111 DAMPER
065273
065418
064896(H345)
064897(H341)
EATON T. 064948
W.T. 064947
066411
065287
064839


E.C.M. DDEC
C32 C309
C415
C407 C408
C397 065225 ENGINE CRADLE ACCESSORIES
BATTERY COMPT. ACCESSORIES
BAT. JCT. CPT 065413
063906
064737 GALLEY
ENGINE DDEC HARNESS SENSOR


C457 TRANSM. MAIN. CONN.
064597
C463
W/O RET. W/RET.
065330
C462 OUTPUT SPEED
C461 RETARDER TEMP
C460 RETARDER SOL.
C459 ENGINE SPEED
C458 TURBINE SPEED
065331
C462 OUTPUT SPEED
C459 ENGINE SPEED
C458 TURBINE SPEED
C456 RETARDER ACCUMULATOR SOL.

CV12 C464 DDR
C90 C414 C186 C220 C388
C21 C20 C15 C610 064128 C91 C35
C52
CS CT CV
E.C.U. WORLD TR.
C58 C59
A/C & HEAT JUNCTION PANEL 064718
RR. JCT. BOX
064398(WCL)
065288
PRIME PUMP


C145
064399
RH DOCKING LT
C121 RH FR SIDE FLASHER
C113 RH FR SIDE MARKER
C49 BATTERIES CPT LT
C113 LH FR SIDE MARKER
C114 LH FR SIDE FLASHER
LH DOCKING LT

AISLE LTS 063536 C144
(LH HAT RACK (READING LTS + VENT.) 064840(H345) 064841(H341) C37
(LH HAT RACK LIGHTING + SPEAKERS) 065494(H345) 064568(H341) C578
C577 064564(H345) 064572(H341) WITH HAT RACK DOORS 064565(H345) 064573(H341) WITHOUT HAT RACK DOORS
INDIRECT LIGHTING

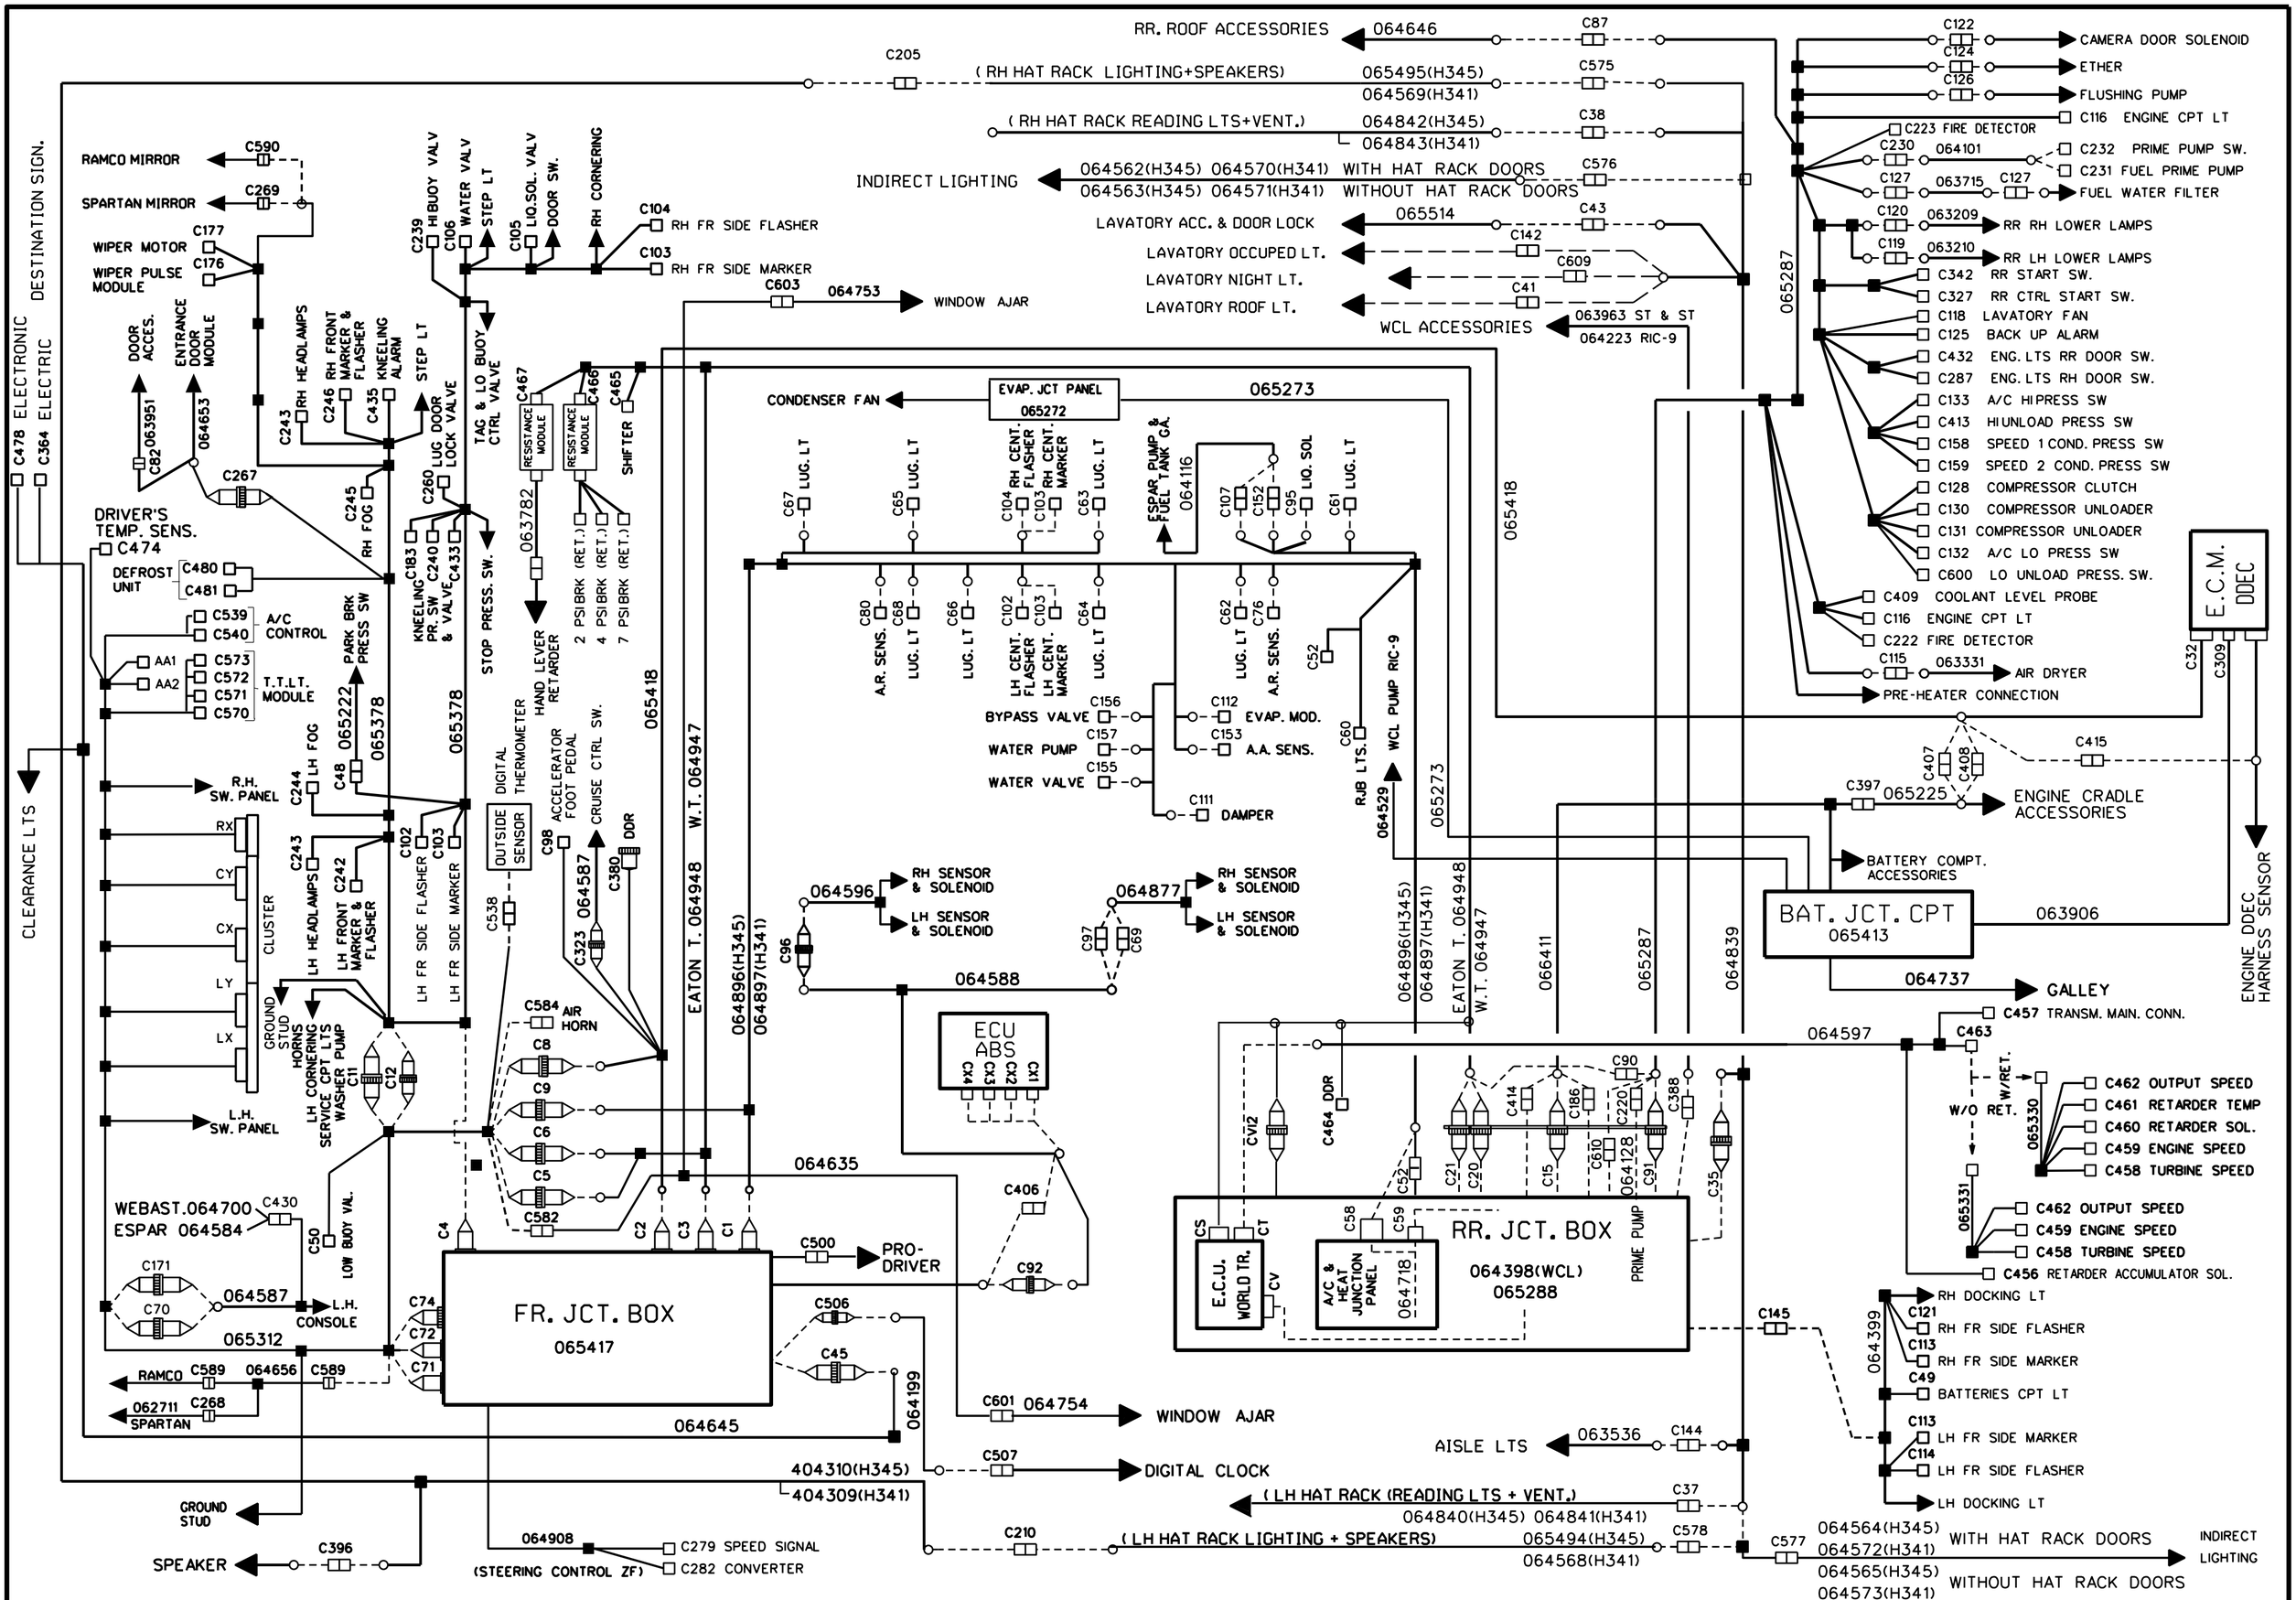

RR. ROOF ACCESSORIES
064646
C87
C122
CAMERA DOOR SOLENOID
C124
ETHER
C126
FLUSHING PUMP
C116 ENGINE CPT LT
C205
(RH HAT RACK LIGHTING+SPEAKERS)
065495(H345)
064569(H341)
C575
(RH HAT RACK READING LTS+VENT.)
064842(H345)
064843(H341)
C38
C223 FIRE DETECTOR
C230
064101
C232 PRIME PUMP SW.
C231 FUEL PRIME PUMP
INDIRECT LIGHTING
064562(H345) 064570(H341) WITH HAT RACK DOORS
064563(H345) 064571(H341) WITHOUT HAT RACK DOORS
C576
C127
063715
C127
FUEL WATER FILTER
LAVATORY ACC. & DOOR LOCK
065514
C43
C120
063209
RR RH LOWER LAMPS
LAVATORY OCCUPED LT.
C142
C119
063210
RR LH LOWER LAMPS
LAVATORY NIGHT LT.
C609
C342 RR START SW.
LAVATORY ROOF LT.
C41
063963 ST & ST
064223 RIC-9
WCL ACCESSORIES
065287
C327 RR CTRL START SW.
C118 LAVATORY FAN
C125 BACK UP ALARM
C432 ENG. LTS RR DOOR SW.
C287 ENG. LTS RH DOOR SW.
C133 A/C HI PRESS SW
C413 HI UNLOAD PRESS SW
C158 SPEED 1 COND. PRESS SW
C159 SPEED 2 COND. PRESS SW
C128 COMPRESSOR CLUTCH
C130 COMPRESSOR UNLOADER
C131 COMPRESSOR UNLOADER
C132 A/C LO PRESS SW
C600 LO UNLOAD PRESS. SW.
C409 COOLANT LEVEL PROBE
C116 ENGINE CPT LT
C222 FIRE DETECTOR
C115
063331
AIR DRYER
PRE-HEATER CONNECTION
C32
C309
E.C.M.
DDEC
C415
C407
C408
C397
065225
ENGINE CRADLE
ACCESSORIES
BATTERY COMPT.
ACCESSORIES
BAT. JCT. CPT
065413
063906
064737
GALLEY
ENGINE DDEC
HARNESS SENSOR
C457 TRANSM. MAIN. CONN.
C463
064597
W/RET.
W/O RET.
065330
C462 OUTPUT SPEED
C461 RETARDER TEMP
C460 RETARDER SOL.
C459 ENGINE SPEED
C458 TURBINE SPEED
065331
C462 OUTPUT SPEED
C459 ENGINE SPEED
C458 TURBINE SPEED
C456 RETARDER ACCUMULATOR SOL.
RR. JCT. BOX
064398(WCL)
065288
E.C.U. WORLD TR.
A/C & HEAT JUNCTION PANEL
064718
PRIME PUMP
C145
064399
RH DOCKING LT
C121
RH FR SIDE FLASHER
C113
RH FR SIDE MARKER
C49
BATTERIES CPT LT
C113
LH FR SIDE MARKER
C114
LH FR SIDE FLASHER
LH DOCKING LT
AISLE LTS
063536
C144
C37
(LH HAT RACK (READING LTS + VENT.)
064840(H345) 064841(H341)
C578
(LH HAT RACK LIGHTING + SPEAKERS)
065494(H345)
064568(H341)
C577
064564(H345)
064572(H341)
WITH HAT RACK DOORS
INDIRECT LIGHTING
064565(H345)
064573(H341)
WITHOUT HAT RACK DOORS
C210
C507
404310(H345)
404309(H341)
DIGITAL CLOCK
C601 064754
WINDOW AJAR
064645
064199
C506
C45
C500
PRO-DRIVER
C92
C406
064635
FR. JCT. BOX
065417
C74
C72
C71
C4
C2
C3
C1
C582
C584 AIR HORN
C8
C9
C6
C5
W.T. 064947
EATON T. 064948
064896(H345)
064897(H341)
C96
064596
RH SENSOR & SOLENOID
LH SENSOR & SOLENOID
C97
C69
064877
RH SENSOR & SOLENOID
LH SENSOR & SOLENOID
064588
ECU ABS
CX4 CX3 CX2 CX1
C64 DDR
CV12
C52
C21
C20
C15
C610
064128
C91
C414
C186
C220
C388
C90
C35
CS
CT
CV
C58
C59
C430
WEBAST.064700
ESPAR 064584
C50
LOW BUOY VAL.
C171
C70
064587
L.H. CONSOLE
065312
RAMCO C589 064656 C589
062711 C268
SPARTAN
GROUND STUD
SPEAKER
C396
064908
(STEERING CONTROL ZF)
C279 SPEED SIGNAL
C282 CONVERTER
CLEARANCE LTS
C478 ELECTRONIC
C364 ELECTRIC
DESTINATION SIGN.
RAMCO MIRROR
C590
SPARTAN MIRROR
C269
WIPER MOTOR
C177
WIPER PULSE MODULE
C176
DOOR ACCES.
C82 063951
ENTRANCE DOOR MODULE
064653
C267
DRIVER'S TEMP. SENS.
C474
DEFROST UNIT
C480
C481
A/C CONTROL
C539
C540
AA1
AA2
T.T.L.T. MODULE
C573
C572
C571
C570
PARK BRK PRESS SW
065222
065378
RH HEADLAMPS
C243
RH FRONT MARKER & FLASHER
C246
KNEELING ALARM
C435
STEP LT
LUG DOOR LOCK VALVE
C260
RH FOG
C245
KNEELING PR. SW & VALVE
C183
C240
C433
STOP PRESS. SW.
TAG & LO BUOY CTRL VALVE
HI BUOY VALV
C239
C106
WATER VALV
STEP LT
C105
LIQ.SOL. VALV
DOOR SW.
RH CORNERING
C104
RH FR SIDE FLASHER
C103
RH FR SIDE MARKER
C603
064753
WINDOW AJAR
RESISTANCE MODULE
C467
C466
C465
SHIFTER
063782
HAND LEVER RETARDER
2 PSI BRK (RET.)
4 PSI BRK (RET.)
7 PSI BRK (RET.)
CONDENSER FAN
EVAP. JCT PANEL
065272
065273
065418
C67 LUG. LT
C65 LUG. LT
C104 RH CENT. FLASHER
C103
RH CENT. MARKER
C63 LUG. LT
ESPAR PUMP & FUEL TANK GA.
064116
C107
C152
C95 LIQ. SOL
C61 LUG. LT
C80 A.R. SENS.
C68 LUG. LT
C66 LUG. LT
C102 LH CENT. FLASHER
C103
LH CENT. MARKER
C64 LUG. LT
C62 LUG. LT
C76 A.R. SENS.
C52
C60 RJB LTS.
WCL PUMP RIC-9
064529
C156 BYPASS VALVE
C157 WATER PUMP
C155 WATER VALVE
C112 EVAP. MOD.
C153 A.A. SENS.
C111 DAMPER
DIGITAL THERMOMETER
OUTSIDE SENSOR
C538
ACCELERATOR FOOT PEDAL
C98
CRUISE CTRL SW.
064587
C323
DDR
C380
C243 LH HEADLAMPS
C242 LH FRONT MARKER & FLASHER
C102 LH FR SIDE FLASHER
C103 LH FR SIDE MARKER
C48 LH FOG
C244
R.H. SW. PANEL
L.H. SW. PANEL
RX
CY
CX
LY
LX
CLUSTER
GROUND STUD
HORNS
LH CORNERING
SERVICE CPT LTS
WASHER PUMP
C11
C12
C9
C6
C5
C582
C4
C2
C3
C1
C50
C171
C70
C74
C72
C71
C45
C506
C500
C92
C406
C64 DDR
C52
C21
C20
C15
C610
064128
C91
C414
C186
C220
C388
C90
C35
C58
C59
C145
C144
C37
C578
C577
C210
C507
C601 064754
C396
C268
C589
064656
C589
C430
C480
C481
C539
C540
C573
C572
C571
C570
C538
C584
C8
C9
C6
C5
C582
C4
C2
C3
C1
C74
C72
C71
C45
C506
C500
C92
C406
C64

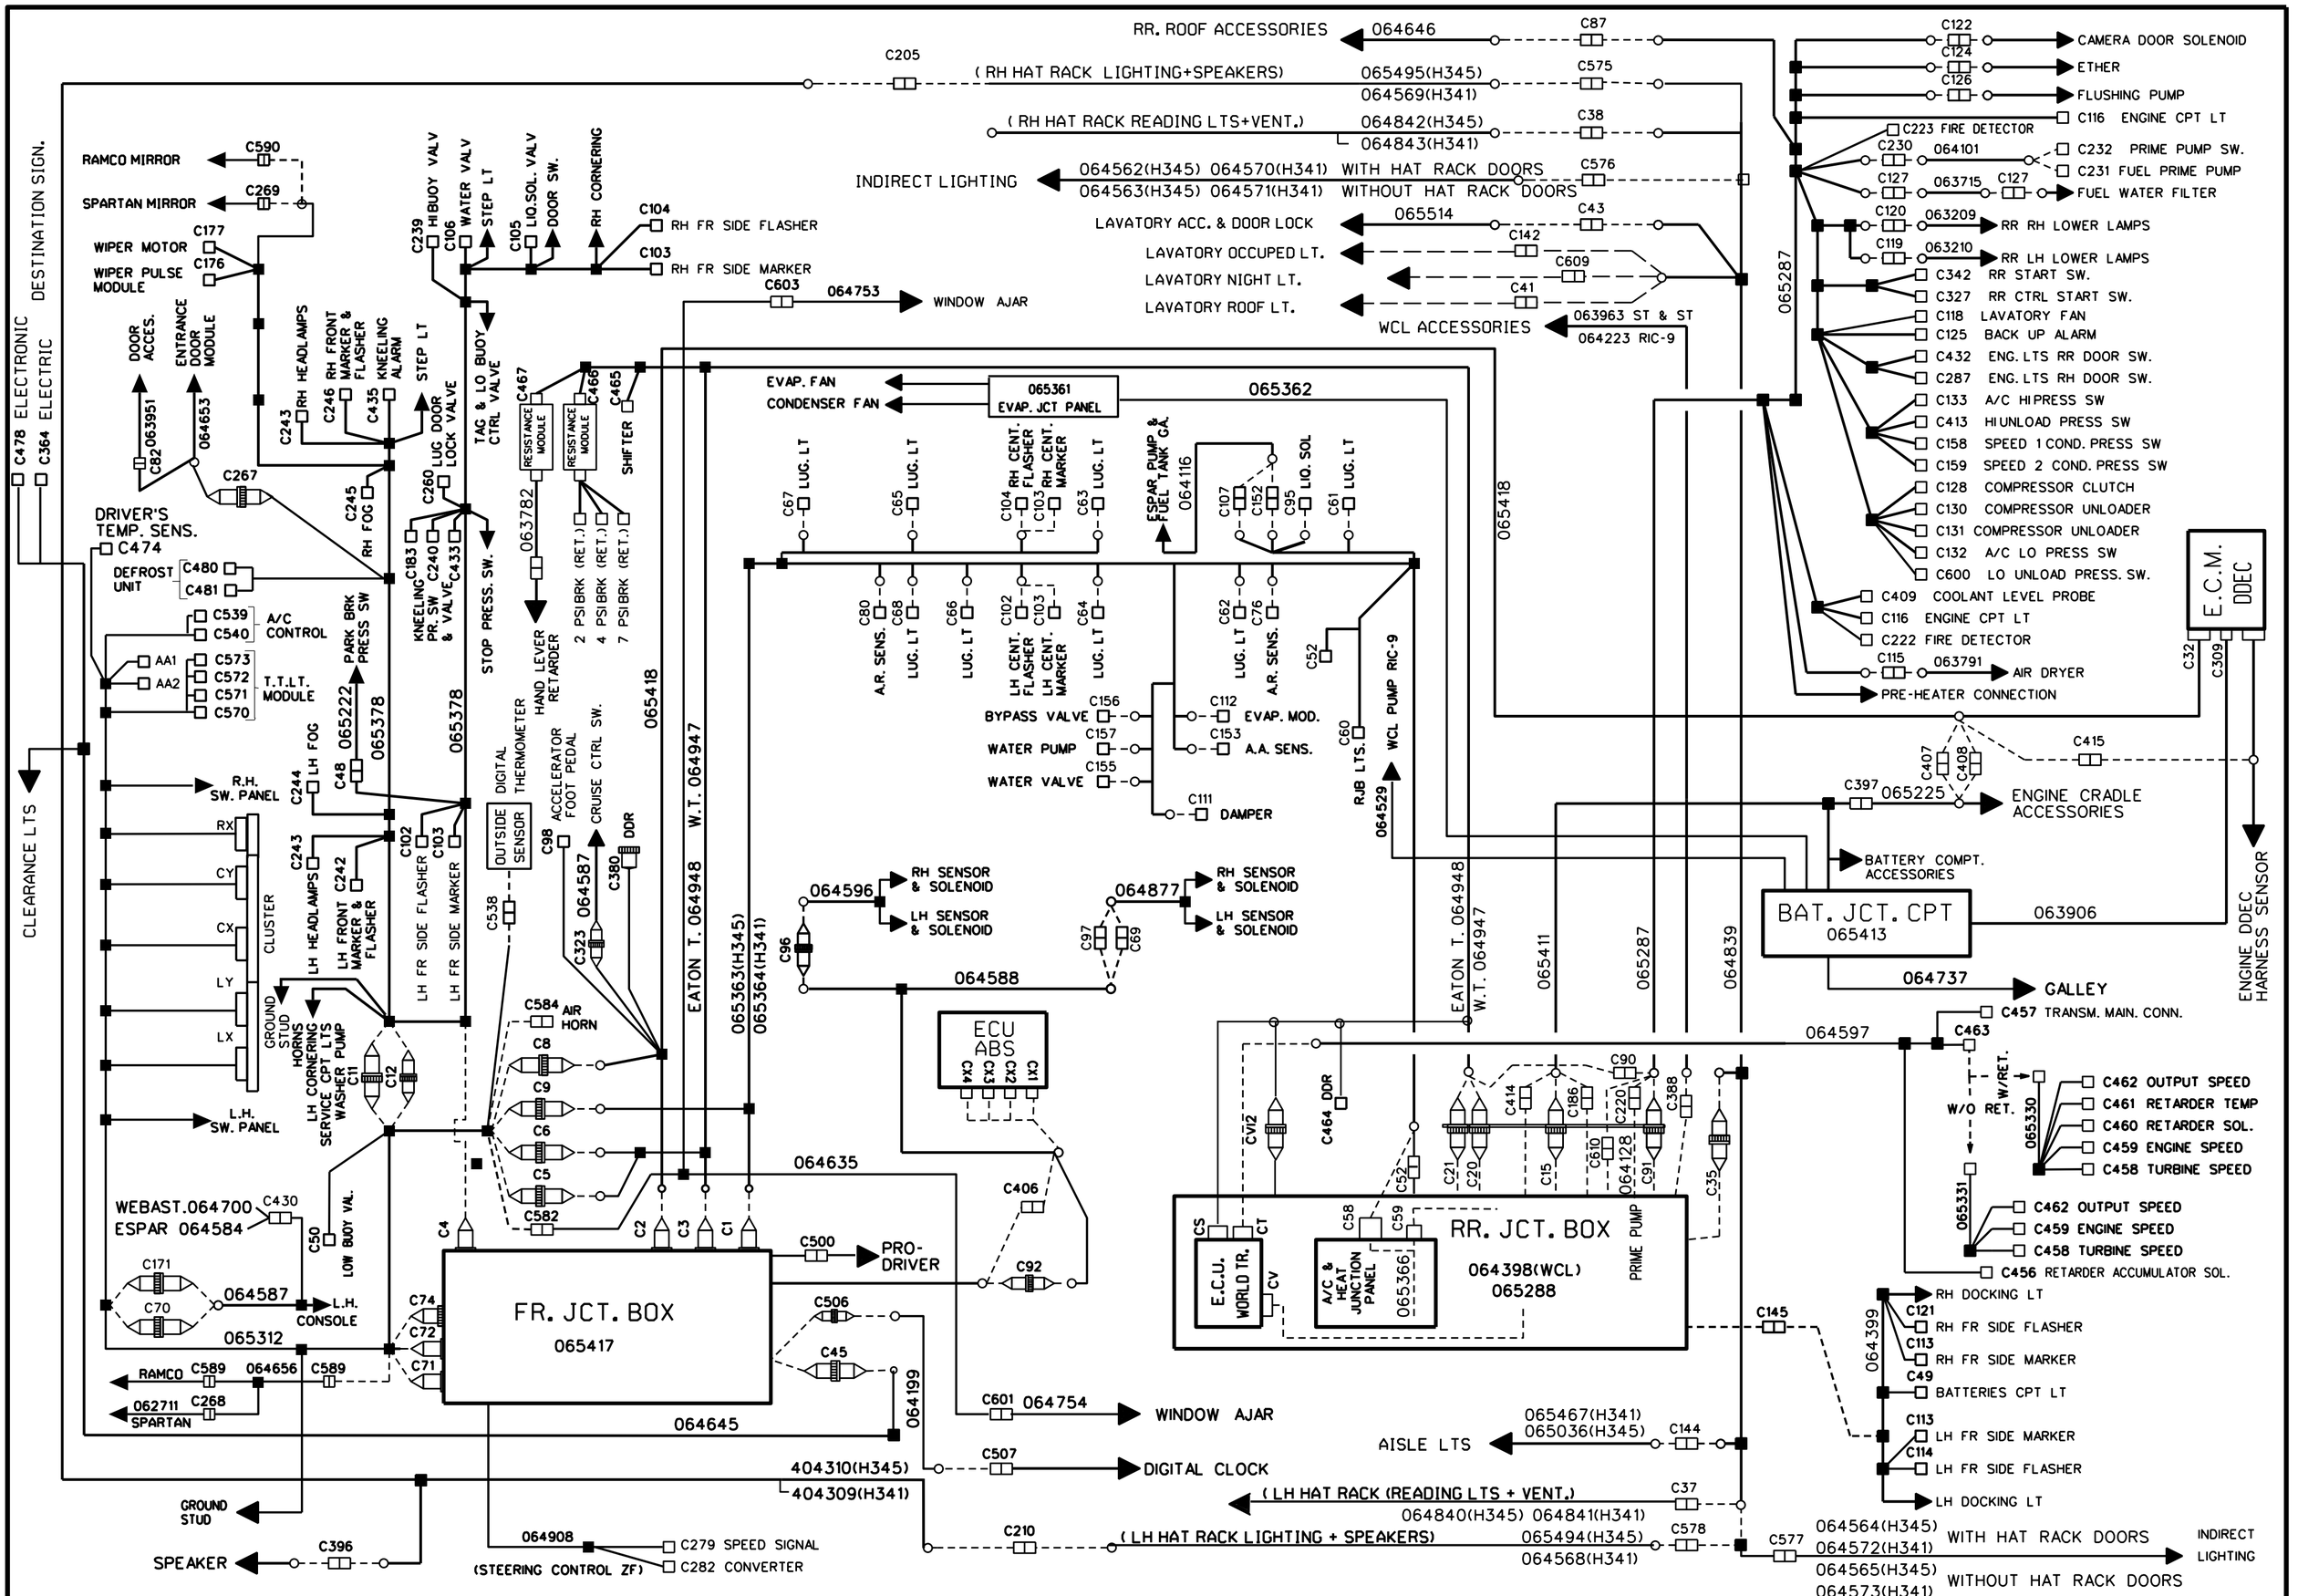


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: C1	REVISION 15

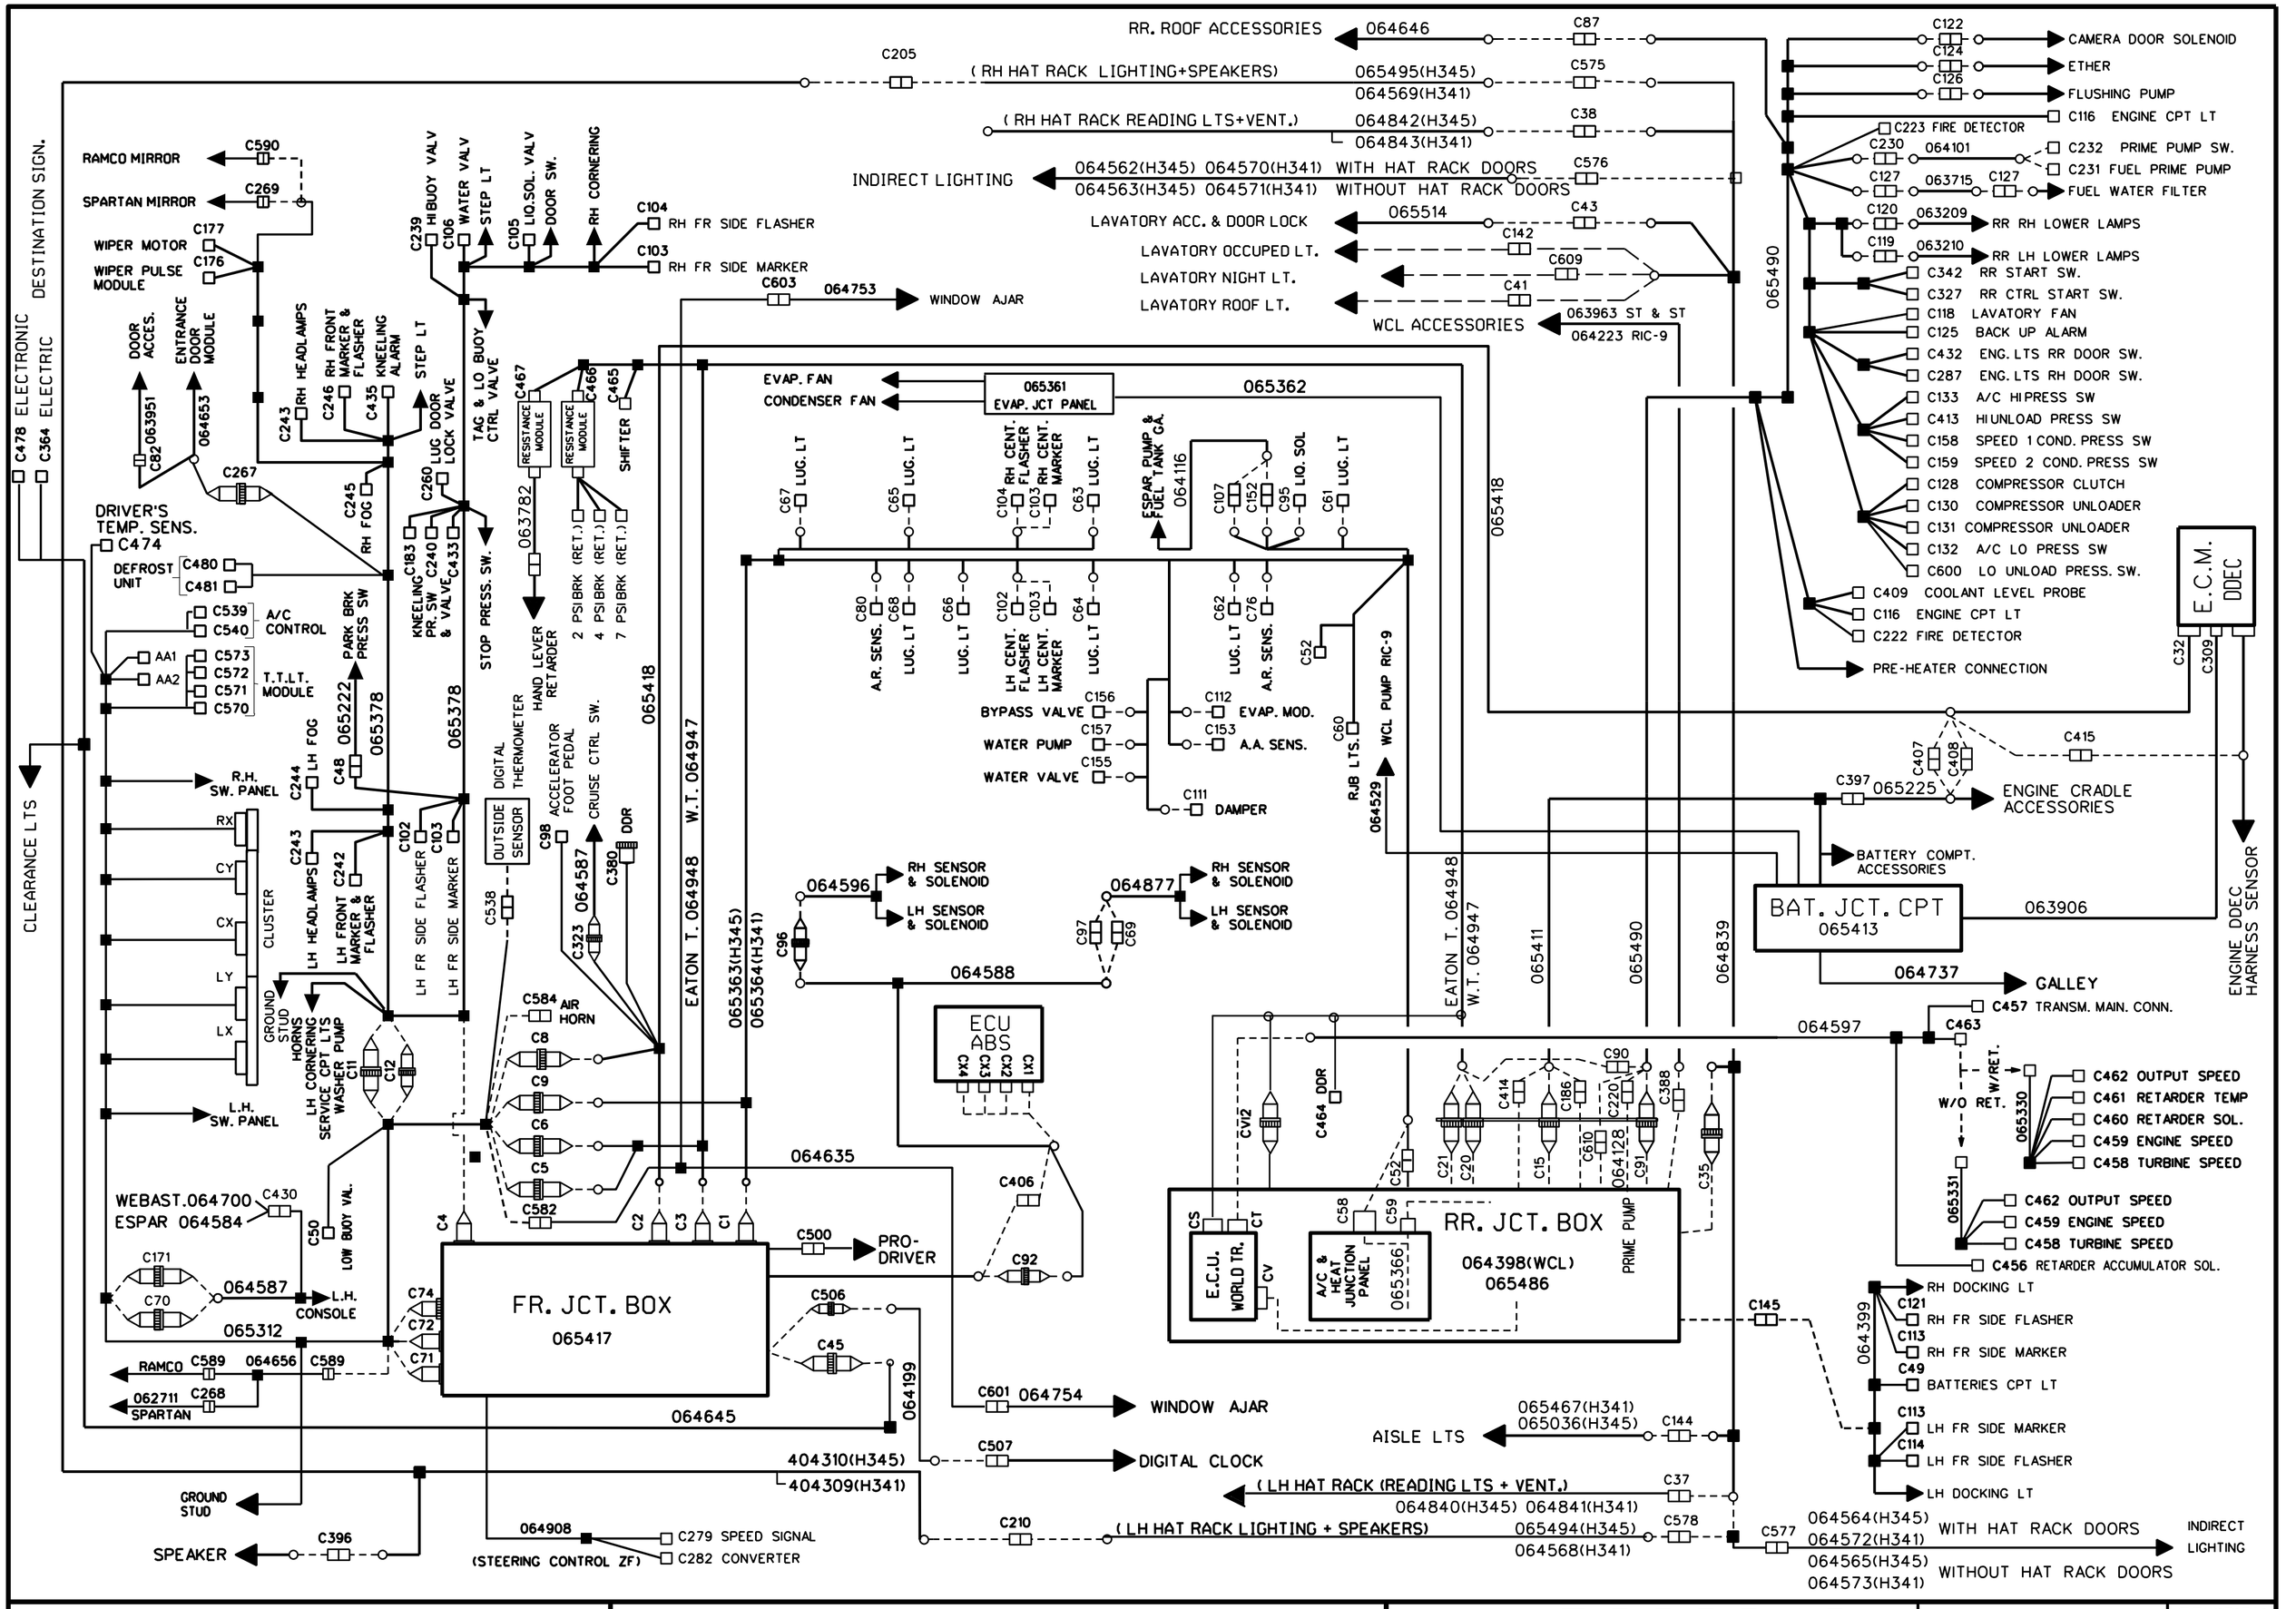


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: C1	REVISION 16

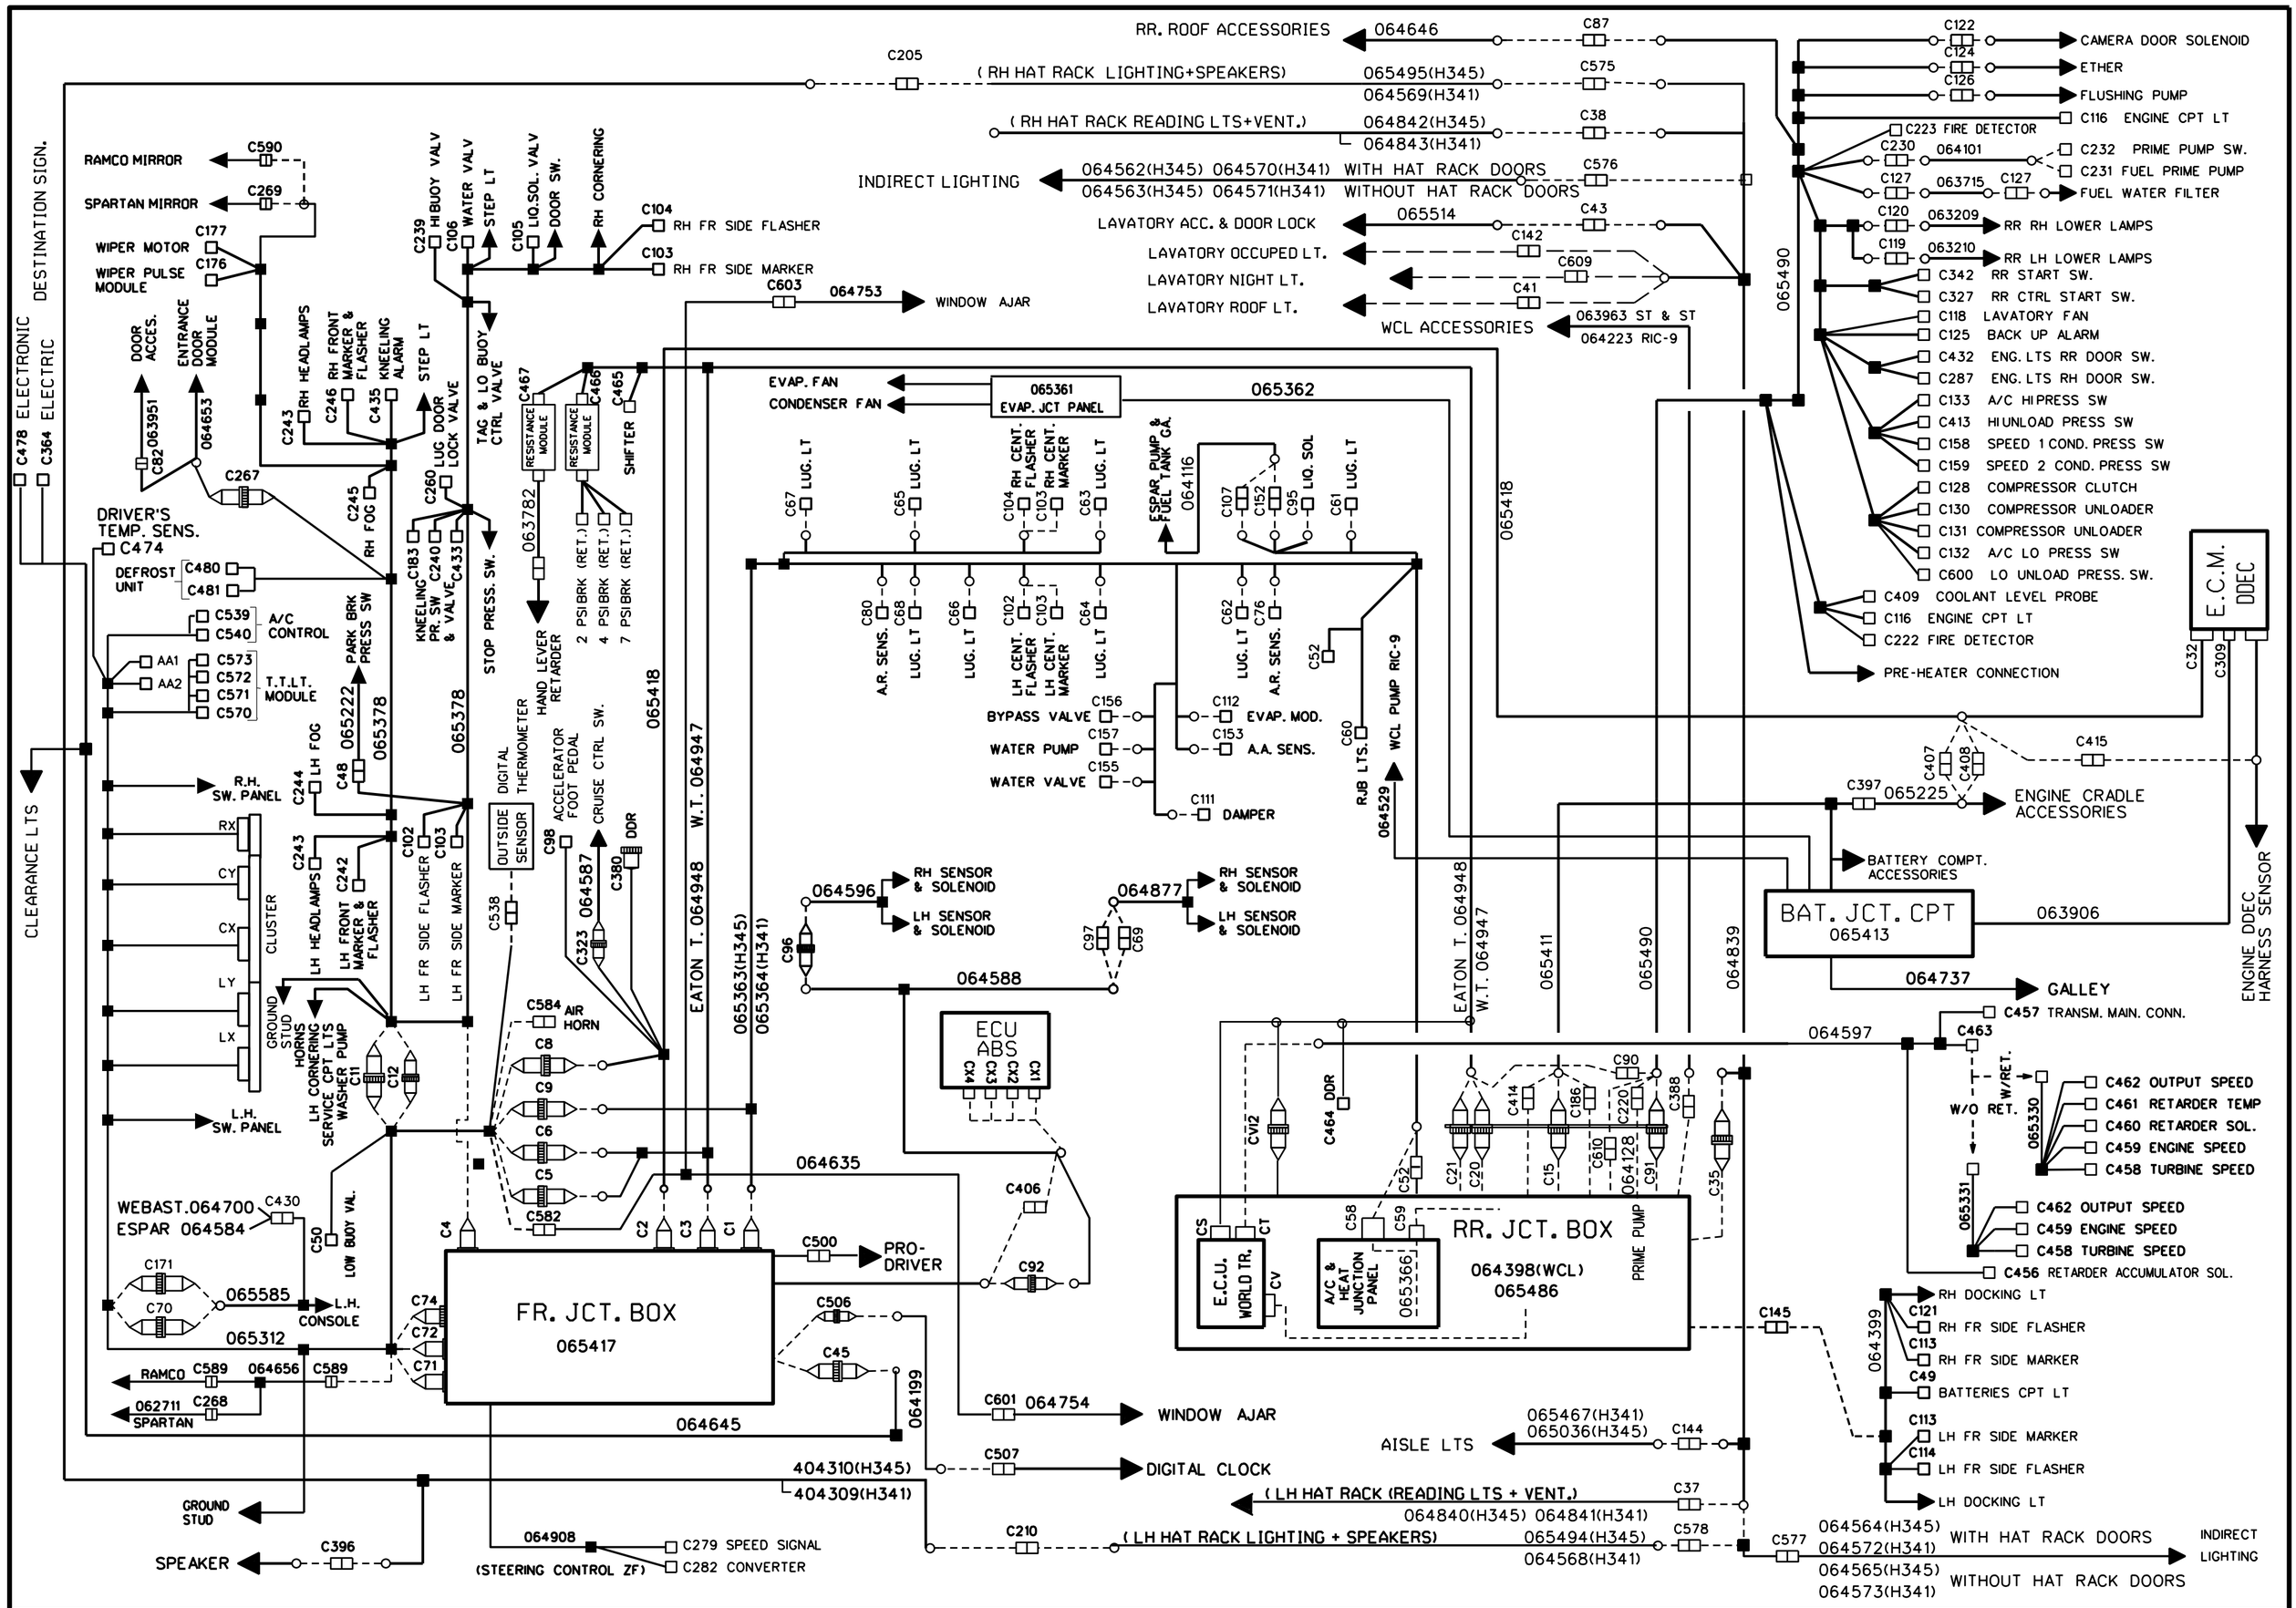

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: C1	REVISION 17

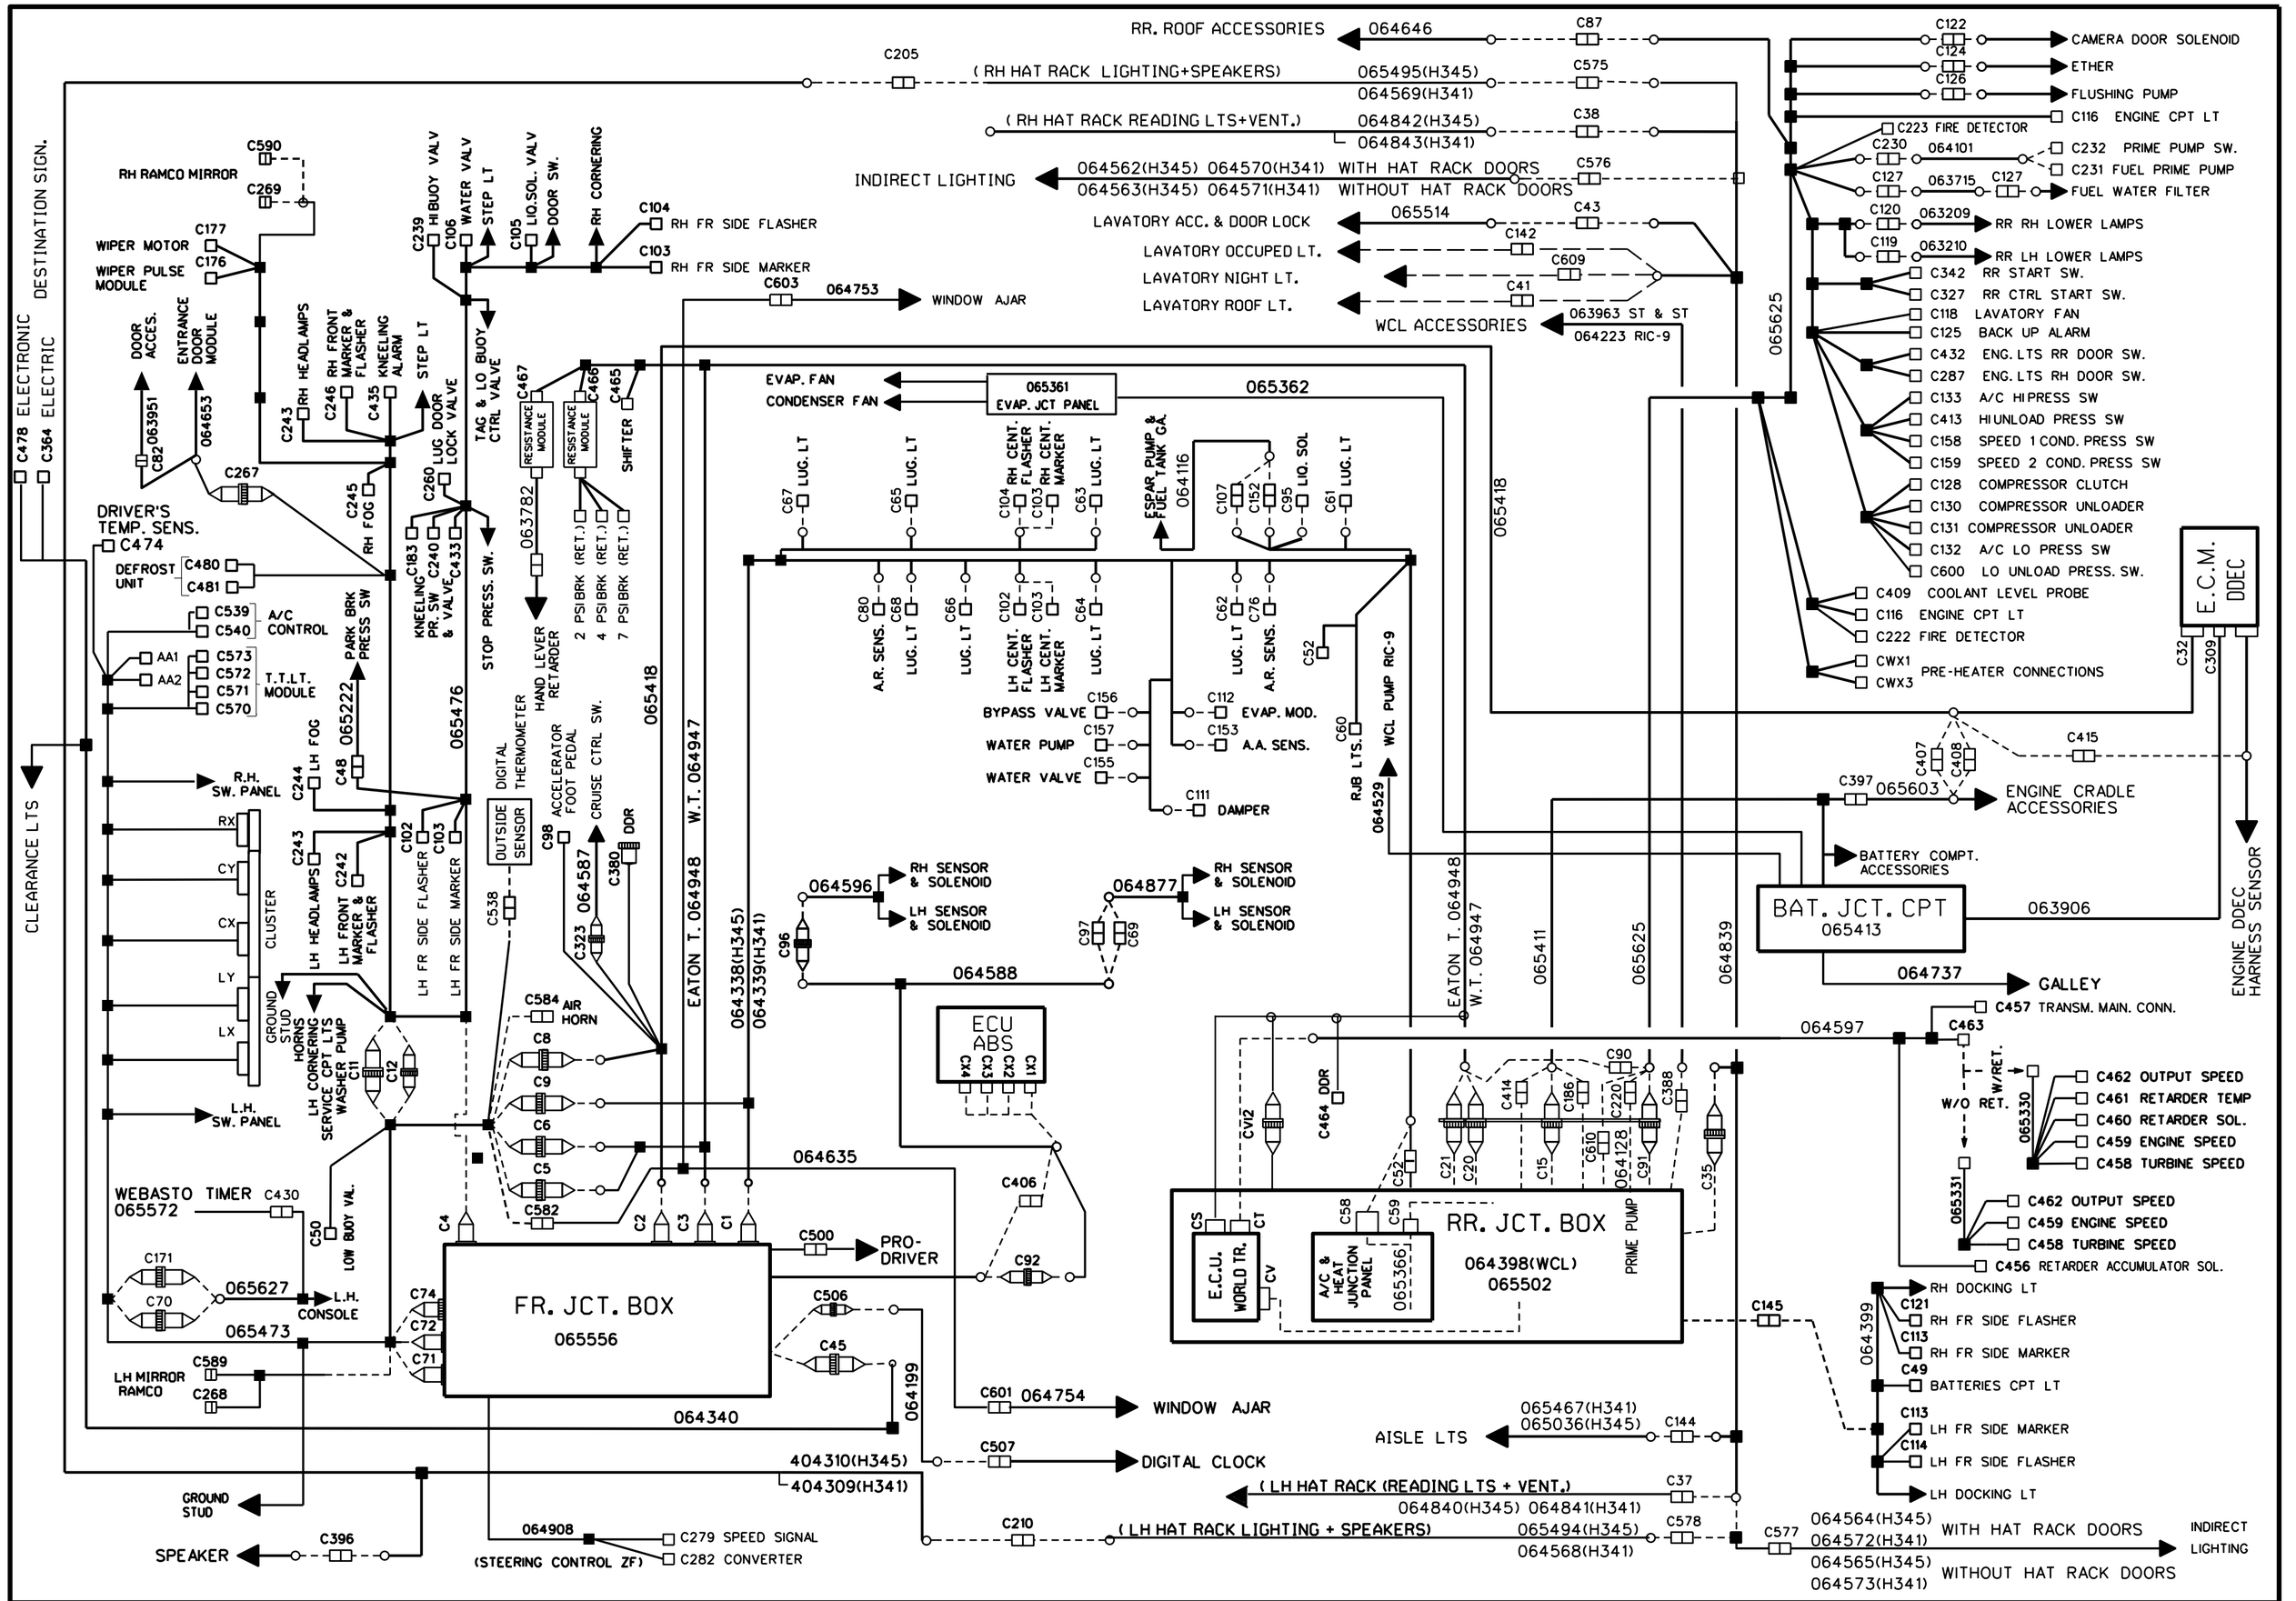
RR. ROOF ACCESSORIES
064646
C87
C122
CAMERA DOOR SOLENOID
C124
ETHER
C126
FLUSHING PUMP
C116 ENGINE CPT LT
C223 FIRE DETECTOR
C230
064101
C232 PRIME PUMP SW.
C231 FUEL PRIME PUMP
C127
063715
C127
FUEL WATER FILTER
C205
(RH HAT RACK LIGHTING+SPEAKERS)
065495(H345)
064569(H341)
C575
(RH HAT RACK READING LTS+VENT.)
064842(H345)
064843(H341)
C38
INDIRECT LIGHTING
064562(H345) 064570(H341) WITH HAT RACK DOORS
064563(H345) 064571(H341) WITHOUT HAT RACK DOORS
C576
LAVATORY ACC. & DOOR LOCK
065514
C43
LAVATORY OCCUPED LT.
C142
LAVATORY NIGHT LT.
C609
LAVATORY ROOF LT.
C41
WCL ACCESSORIES
063963 ST & ST
064223 RIC-9
C120
063209
RR RH LOWER LAMPS
C119
063210
RR LH LOWER LAMPS
C342 RR START SW.
C327 RR CTRL START SW.
C118 LAVATORY FAN
C125 BACK UP ALARM
C432 ENG. LTS RR DOOR SW.
C287 ENG. LTS RH DOOR SW.
C133 A/C HI PRESS SW
C413 HI UNLOAD PRESS SW
C158 SPEED 1 COND. PRESS SW
C159 SPEED 2 COND. PRESS SW
C128 COMPRESSOR CLUTCH
C130 COMPRESSOR UNLOADER
C131 COMPRESSOR UNLOADER
C132 A/C LO PRESS SW
C600 LO UNLOAD PRESS. SW.
C409 COOLANT LEVEL PROBE
C116 ENGINE CPT LT
C222 FIRE DETECTOR
CWX1
CWX3
PRE-HEATER CONNECTIONS
065625
065418
065362
065361
EVAP. JCT PANEL
EVAP. FAN
CONDENSER FAN
E.C.M.
DDEC
C32
C309
C415
C407
C408
C397
065603
ENGINE CRADLE ACCESSORIES
BATTERY COMPT. ACCESSORIES
BAT. JCT. CPT
065413
063906
064737
GALLEY
ENGINE DDEC HARNESS SENSOR
C457 TRANSM. MAIN. CONN.
064597
C463
W/RET.
W/O RET.
065330
C462 OUTPUT SPEED
C461 RETARDER TEMP
C460 RETARDER SOL.
C459 ENGINE SPEED
C458 TURBINE SPEED
065331
C462 OUTPUT SPEED
C459 ENGINE SPEED
C458 TURBINE SPEED
C456 RETARDER ACCUMULATOR SOL.
RH DOCKING LT
C121
RH FR SIDE FLASHER
C113
RH FR SIDE MARKER
C49
BATTERIES CPT LT
C113
LH FR SIDE MARKER
C114
LH FR SIDE FLASHER
LH DOCKING LT
064399
C145
RR. JCT. BOX
064398(WCL)
065502
PRIME PUMP
E.C.U.
WORLD TR.
A/C & HEAT JUNCTION PANEL
065366
064128
C90
C388
C414
C186
C220
C610
C91
C35
C52
C21
C20
C15
CV12
C464 DDR
CS
CT
CV
C58
C59
EATON T. 064948
W.T. 064947
065411
065625
064839
065418
065476
064947
EATON T. 064948 W.T. 064947
064338(H345)
064339(H341)
C603
064753
WINDOW AJAR
C239 HI BUOY VALV
C106 WATER VALV
STEP LT
C105 LIQ.SOL VALV
DOOR SW.
RH CORNERING
C104 RH FR SIDE FLASHER
C103 RH FR SIDE MARKER
C590
RH RAMCO MIRROR
C269
C177
WIPER MOTOR
C176
WIPER PULSE MODULE
DOOR ACCES.
ENTRANCE DOOR MODULE
RH HEADLAMPS
C246 RH FRONT MARKER & FLASHER
C435 KNEELING ALARM
STEP LT
C82 063951
064653
C243
C245 RH FOG
C267
C260 LUG DOOR LOCK VALVE
TAG & LO BUOY CTRL VALVE
C183
C240
C433
KNEELING PR. SW & VALVE
STOP PRESS. SW.
C467
C466
C465
RESISTANCE MODULE
RESISTANCE MODULE
SHIFTER
063782
2 PSI BRK (RET.)
4 PSI BRK (RET.)
7 PSI BRK (RET.)
HAND LEVER RETARDER
DIGITAL THERMOMETER
ACCELERATOR FOOT PEDAL
CRUISE CTRL SW.
DRIVER'S TEMP. SENS.
C474
DEFROST UNIT
C480
C481
C539
C540
A/C CONTROL
AA1
AA2
C573
C572
C571
C570
T.T.L.T. MODULE
PARK BRK PRESS SW
065222
C48
C244 LH FOG
C244
C243
LH HEADLAMPS
C242
LH FRONT MARKER & FLASHER
C102
C103
LH FR SIDE FLASHER
LH FR SIDE MARKER
OUTSIDE SENSOR
C538
C98
C380
DDR
C323 064587
C584 AIR HORN
C8
C9
C6
C5
C582
C4
C2
C3
C1
C500
PRO-DRIVER
C92
C406
064635
C96
064596
RH SENSOR & SOLENOID
LH SENSOR & SOLENOID
064588
C97
C69
064877
RH SENSOR & SOLENOID
LH SENSOR & SOLENOID
ECU ABS
CX4
CX3
CX2
CX1
C67
LUG. LT
C65
LUG. LT
C104 RH CENT. FLASHER
C103
RH CENT. MARKER
C63
LUG. LT
ESPAR PUMP & FUEL TANK GA.
064116
C107
C152
C95
LIQ. SOL
C61
LUG. LT
C80
A.R. SENS.
C68
LUG. LT
C66
LUG. LT
C102
C103
LH CENT. FLASHER
LH CENT. MARKER
C64
LUG. LT
C62
LUG. LT
C76
A.R. SENS.
C52
C156
BYPASS VALVE
C157
WATER PUMP
C155
WATER VALVE
C112
EVAP. MOD.
C153
A.A. SENS.
C111
DAMPER
C60
RJB LTS.
WCL PUMP RIC-9
064529
C74
C72
C71
FR. JCT. BOX
065556
C506
C45
064199
C601 064754
WINDOW AJAR
064340
C507
DIGITAL CLOCK
404310(H345)
404309(H341)
C210
C396
SPEAKER
GROUND STUD
064908
(STEERING CONTROL ZF)
C279 SPEED SIGNAL
C282 CONVERTER
065467(H341)
065036(H345)
C144
AISLE LTS
(LH HAT RACK (READING LTS + VENT.)
064840(H345) 064841(H341)
C37
(LH HAT RACK LIGHTING + SPEAKERS)
065494(H345)
064568(H341)
C578
C577
064564(H345)
064572(H341)
WITH HAT RACK DOORS
INDIRECT LIGHTING
064565(H345)
064573(H341)
WITHOUT HAT RACK DOORS
C478 ELECTRONIC
C364 ELECTRIC
DESTINATION SIGN.
CLEARANCE LTS
R.H. SW. PANEL
L.H. SW. PANEL
CLUSTER
RX
CY
CX
LY
LX
GROUND STUD
HORNS
LH CORNERING
SERVICE CPT LTS
WASHER PUMP
C11
C12
WEBASTO TIMER C430
065572
C50
LOW BUOY VAL.
C171
C70
065627
L.H. CONSOLE
065473
C589
LH MIRROR RAMCO
C268

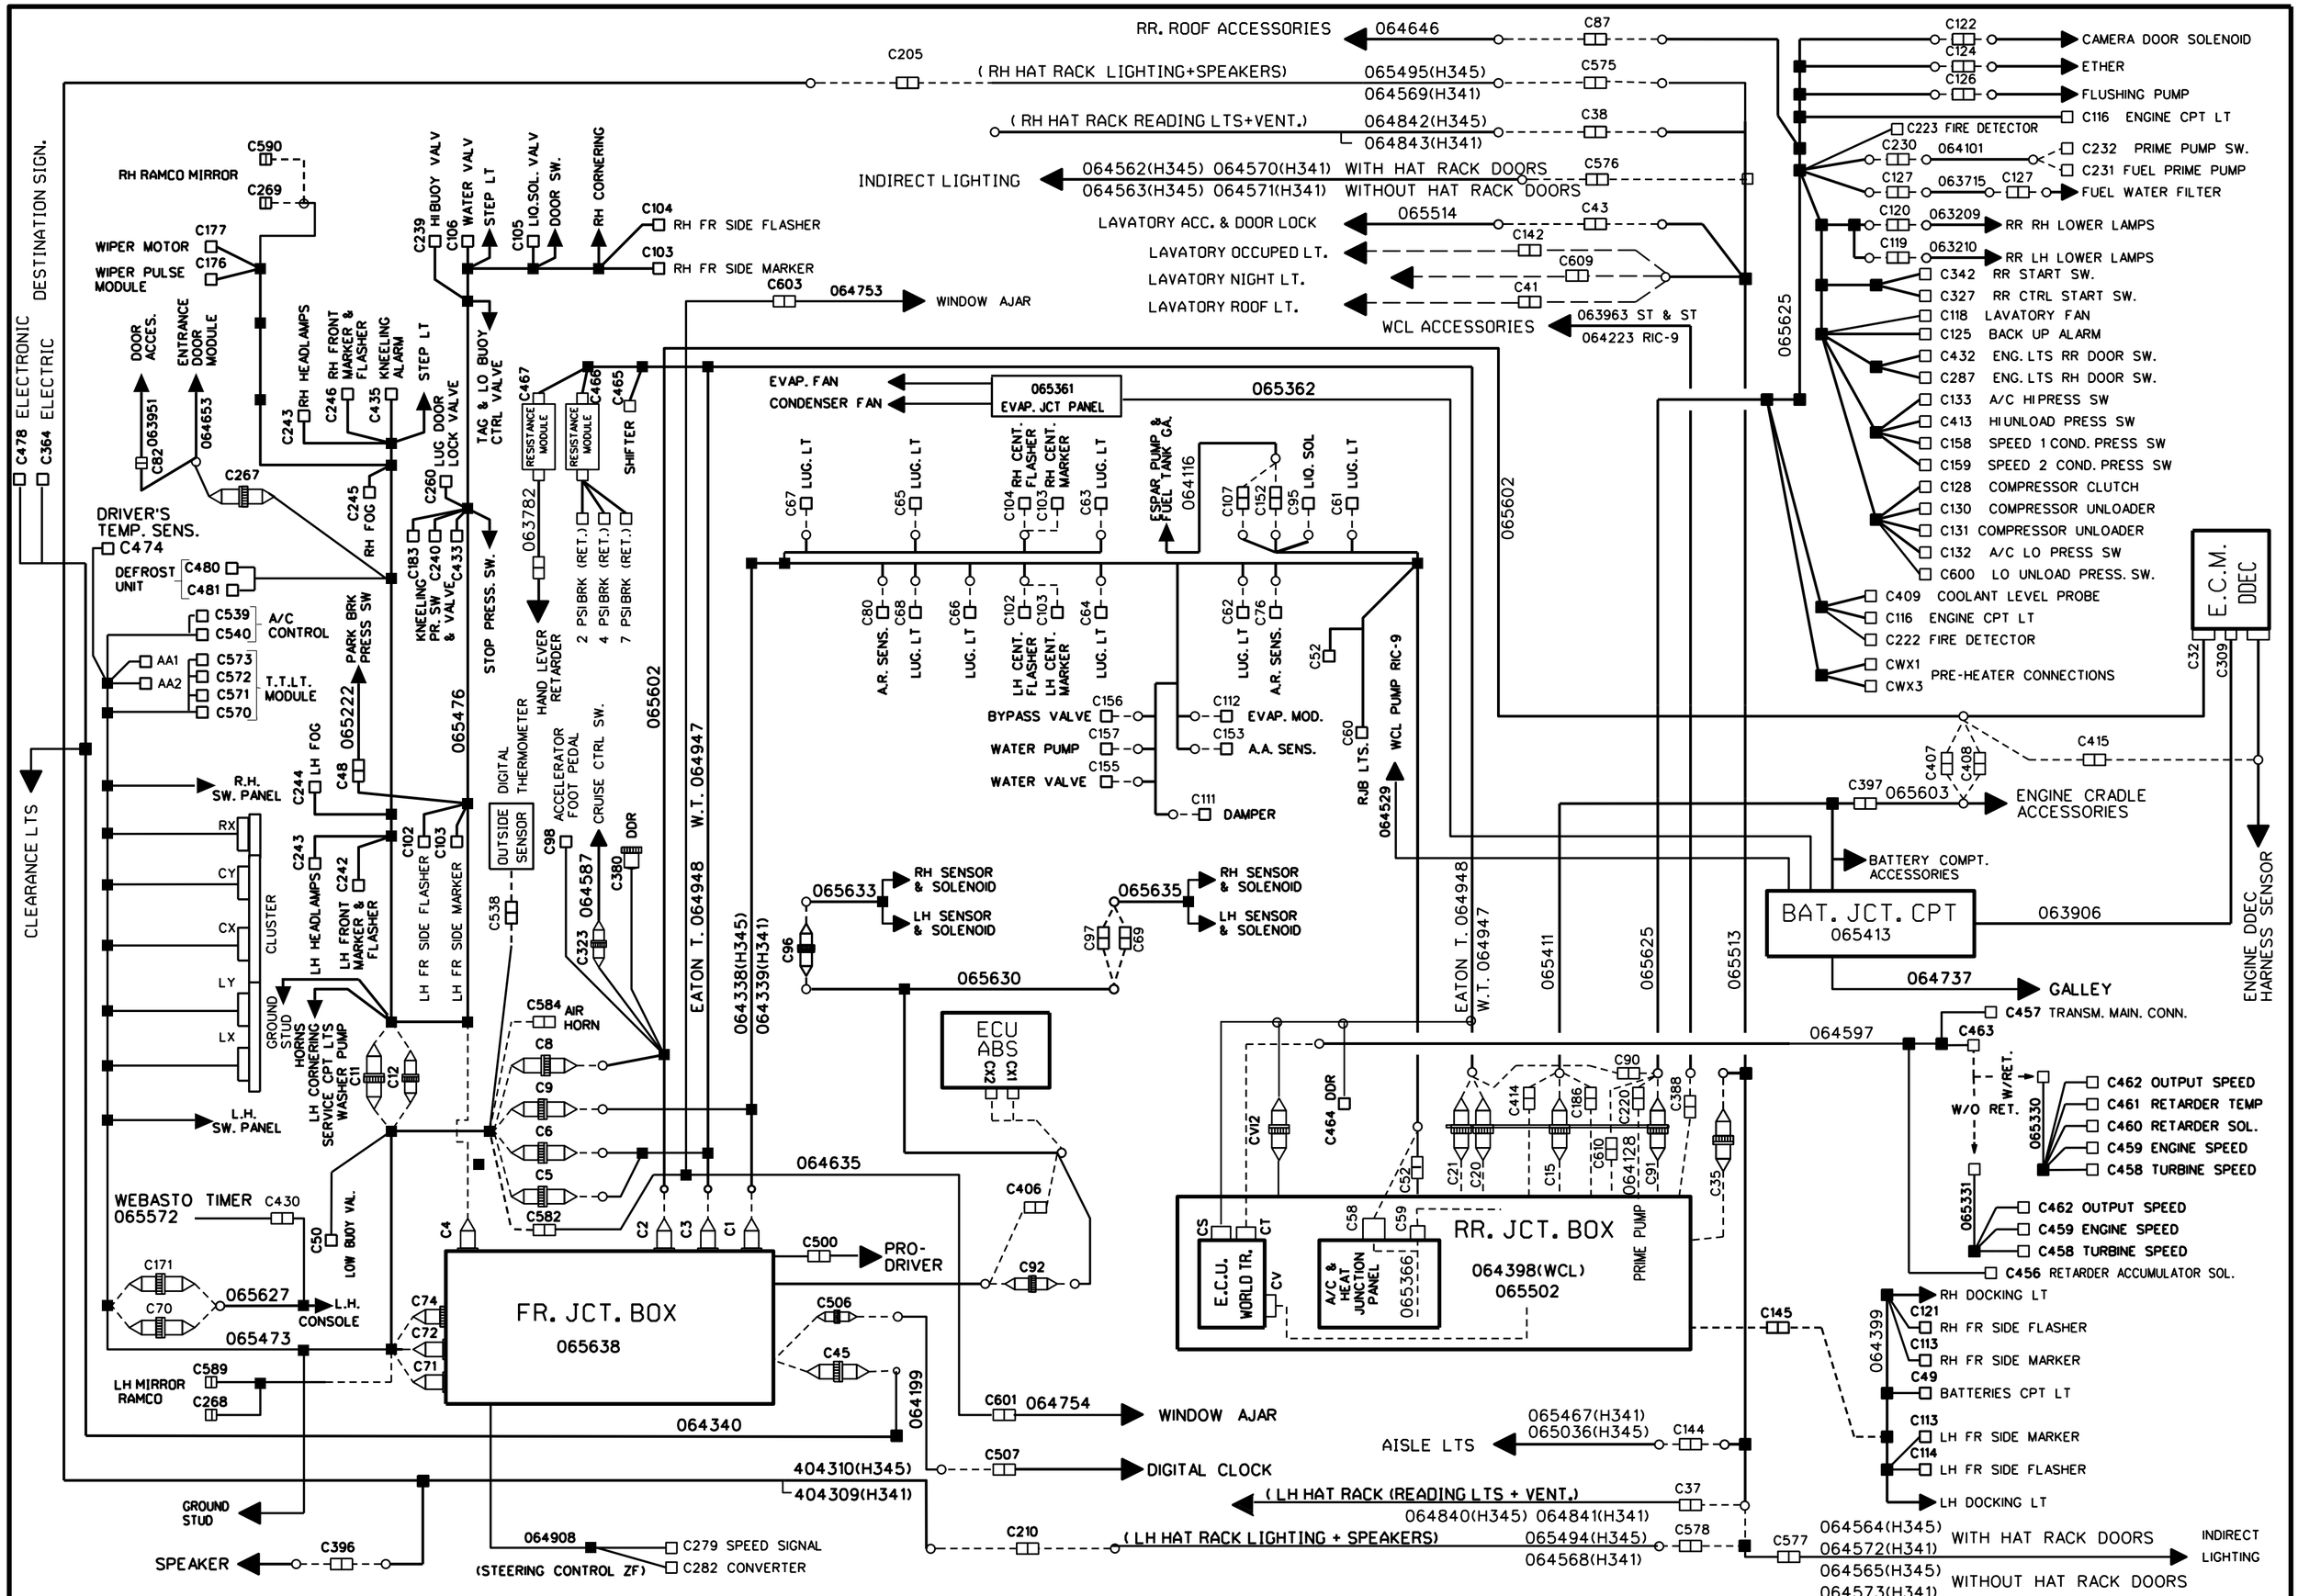

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: C1	REVISION 20

RR. ROOF ACCESSORIES 064646 C87
C205 (RH HAT RACK LIGHTING+SPEAKERS) 065495(H345) 064569(H341) C575
(RH HAT RACK READING LTS+VENT.) 064842(H345) 064843(H341) C38
INDIRECT LIGHTING 064562(H345) 064570(H341) WITH HAT RACK DOORS 064563(H345) 064571(H341) WITHOUT HAT RACK DOORS C576
LAVATORY ACC. & DOOR LOCK 065514 C43
LAVATORY OCCUPED LT. C142
LAVATORY NIGHT LT. C609
LAVATORY ROOF LT. C41
WCL ACCESSORIES 063963 ST & ST 064223 RIC-9

C122 CAMERA DOOR SOLENOID
C124 ETHER
C126 FLUSHING PUMP
C116 ENGINE CPT LT
C223 FIRE DETECTOR
C230 064101 C232 PRIME PUMP SW. C231 FUEL PRIME PUMP
C127 063715 C127 FUEL WATER FILTER
C120 063209 RR RH LOWER LAMPS
C119 063210 RR LH LOWER LAMPS
C342 RR START SW.
C327 RR CTRL START SW.
C118 LAVATORY FAN
C125 BACK UP ALARM
C432 ENG. LTS RR DOOR SW.
C287 ENG. LTS RH DOOR SW.
C133 A/C HI PRESS SW
C413 HI UNLOAD PRESS SW
C158 SPEED 1 COND. PRESS SW
C159 SPEED 2 COND. PRESS SW
C128 COMPRESSOR CLUTCH
C130 COMPRESSOR UNLOADER
C131 COMPRESSOR UNLOADER
C132 A/C LO PRESS SW
C600 LO UNLOAD PRESS. SW.
C409 COOLANT LEVEL PROBE
C116 ENGINE CPT LT
C222 FIRE DETECTOR
CWX1 CWX3 PRE-HEATER CONNECTIONS
065625

C478 ELECTRONIC DESTINATION SIGN.
C364 ELECTRIC
CLEARANCE LTS

RH RAMCO MIRROR C590 C269
WIPER MOTOR C177
WIPER PULSE MODULE C176
DOOR ACCES. C82 063951
ENTRANCE DOOR MODULE 064653
C267
DRIVER'S TEMP. SENS. C474
DEFROST UNIT C480 C481
A/C CONTROL C539 C540
T.T.L.T. MODULE AA1 AA2 C573 C572 C571 C570
PARK BRK PRESS SW
R.H. SW. PANEL
L.H. SW. PANEL
CLUSTER RX CY CX LY LX
GROUND STUD
HORNS
LH CORNERING
SERVICE CPT LTS
WASHER PUMP C11 C12
LOW BUOY VAL.
WEBASTO TIMER C430 065572
C171 C70 065627
L.H. CONSOLE
065473
LH MIRROR RAMCO C589 C268
GROUND STUD
SPEAKER C396

C239 HI BUOY VALV
C106 WATER VALV
STEP LT
C105 LIQ.SOL. VALV
DOOR SW.
RH CORNERING
C104 RH FR SIDE FLASHER
C103 RH FR SIDE MARKER
C603 064753 WINDOW AJAR
C243 RH HEADLAMPS
C246 RH FRONT MARKER & FLASHER
C435 KNEELING ALARM
STEP LT
C260 LUG DOOR LOCK VALVE
TAG & LO BUOY CTRL VALVE
C245 RH FOG
C183 KNEELING PR. SW
C240 C433 & VALVE
STOP PRESS. SW.
063782
C467 C466 RESISTANCE MODULE
C465 SHIFTER
2 PSI BRK (RET.)
4 PSI BRK (RET.)
7 PSI BRK (RET.)
HAND LEVER RETARDER
DIGITAL THERMOMETER
OUTSIDE SENSOR
ACCELERATOR FOOT PEDAL
CRUISE CTRL SW.
C98 C538 C323 064587 C380 DDR
LH FR SIDE FLASHER C102
LH FR SIDE MARKER C103
LH FRONT MARKER & FLASHER C242
LH HEADLAMPS C243
LH FOG C244 C48 065222
065476
065602
064947
EATON T. 064948 W.T. 064948
064338(H345) 064339(H341)
C584 AIR HORN
C8 C9 C6 C5
C582
C4 C2 C3 C1
C500 PRO-DRIVER
C92
C406
064635
FR. JCT. BOX 065638
C74 C72 C71
C506 C45
064199
064340
C601 064754 WINDOW AJAR
C507 DIGITAL CLOCK
404310(H345) 404309(H341)
C210
064908 (STEERING CONTROL ZF)
C279 SPEED SIGNAL
C282 CONVERTER


EVAP. FAN
CONDENSER FAN
065361 EVAP. JCT PANEL
065362
C67 LUG. LT
C65 LUG. LT
C104 RH CENT. FLASHER
C103 RH CENT. MARKER
C63 LUG. LT
ESPAR PUMP & FUEL TANK G.A. 065698
C107 C152 C95 LIQ. SOL
C61 LUG. LT
C80 A.R. SENS.
C68 LUG. LT
C66 LUG. LT
C102 LH CENT. FLASHER
C103 LH CENT. MARKER
C64 LUG. LT
C62 LUG. LT
C76 A.R. SENS.
C52
C156 BYPASS VALVE
C157 WATER PUMP
C155 WATER VALVE
C112 EVAP. MOD.
C153 A.A. SENS.
C111 DAMPER
C60 RJB LTS.
WCL PUMP RIC-9
064529
065633 RH SENSOR & SOLENOID LH SENSOR & SOLENOID
C96
065635 RH SENSOR & SOLENOID LH SENSOR & SOLENOID
C97 C69
065630
ECU ABS C X1 C X2
EATON T. 064948 W.T. 064947
065411
065625
065513
BAT. JCT. CPT 065413
063906
065664 GALLEY RIGHT
065668 GALLEY LEFT
ENGINE DDEC HARNESS SENSOR
C457 TRANSM. MAIN. CONN.
064597
C463
W/RET.
W/O RET.
065330
C462 OUTPUT SPEED
C461 RETARDER TEMP
C460 RETARDER SOL.
C459 ENGINE SPEED
C458 TURBINE SPEED
065331
C462 OUTPUT SPEED
C459 ENGINE SPEED
C458 TURBINE SPEED
C456 RETARDER ACCUMULATOR SOL.
C464 DDR
C90 C414 C186 C220 C388
C52 C21 C20 C15 C610 064128 C91 C35
C5 C7 E.C.U. WORLD TR. CV
C58 C59 A/C & HEAT JUNCTION PANEL 065366
RR. JCT. BOX 064398(WCL) 065502
PRIME PUMP
C145
064399
RH DOCKING LT
C121 RH FR SIDE FLASHER
C113 RH FR SIDE MARKER
C49 BATTERIES CPT LT
C113 LH FR SIDE MARKER
C114 LH FR SIDE FLASHER
LH DOCKING LT
AISLE LTS 065467(H341) 065036(H345) C144
(LH HAT RACK (READING LTS + VENT.) 064840(H345) 064841(H341) C37
(LH HAT RACK LIGHTING + SPEAKERS) 065494(H345) 064568(H341) C578
C577 064564(H345) 064572(H341) WITH HAT RACK DOORS 064565(H345) 064573(H341) WITHOUT HAT RACK DOORS INDIRECT LIGHTING

C415
C407 C408
C397 065603 ENGINE CRADLE ACCESSORIES
BATTERY COMPT. ACCESSORIES
C32 C309
E.C.M. DDEC

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: C1	REVISION 21

RR. ROOF ACCESSORIES 064646 C87
(RH HAT RACK LIGHTING+SPEAKERS) 065495(H345) 064569(H341) C575
(RH HAT RACK READING LTS+VENT.) 064842(H345) 064843(H341) C38
INDIRECT LIGHTING 064562(H345) 064570(H341) WITH HAT RACK DOORS 064563(H345) 064571(H341) WITHOUT HAT RACK DOORS C576
LAVATORY ACC. & DOOR LOCK 065514 C43
LAVATORY OCCUPED LT. C142
LAVATORY NIGHT LT. C609
LAVATORY ROOF LT. C41
WCL ACCESSORIES 063963 ST & ST 064223 RIC-9
C205
C590 RH RAMCO MIRROR
C269
C177 WIPER MOTOR
C176 WIPER PULSE MODULE
C239 HI BUOY VALV
C106 WATER VALV
STEP LT
C105 LIQ.SOL. VALV
DOOR SW.
RH CORNERING
C104 RH FR SIDE FLASHER
C103 RH FR SIDE MARKER
C603 064753 WINDOW AJAR
DOOR ACCES. C82 063951
ENTRANCE DOOR MODULE 064653
RH HEADLAMPS C243
RH FRONT MARKER & FLASHER C246
KNEELING ALARM C435
STEP LT
TAG & LO BUOY CTRL VALVE
C467 C466 C465 RESISTANCE MODULE
SHIFTER
C267
C245 RH FOG
C260 LUG DOOR LOCK VALVE
063782
DRIVER'S TEMP. SENS. C474
DEFROST UNIT C480 C481
KNEELING PR. SW. C183
C240 & VALVE C433
STOP PRESS. SW.
2 PSI BRK (RET.)
4 PSI BRK (RET.)
7 PSI BRK (RET.)
HAND LEVER RETARDER
A/C CONTROL C539 C540
T.T.LT. MODULE C573 C572 C571 C570 AA1 AA2
PARK BRK PRESS SW 065222
LH FOG C244 C48
065476
DIGITAL THERMOMETER
OUTSIDE SENSOR C538
ACCELERATOR FOOT PEDAL C98
CRUISE CTRL SW.
C380 DDR
C323 064587
065602
W.T. 064947
EATON T. 064948
064338(H345) 064339(H341)
R.H. SW. PANEL
RX CY CX LY LX CLUSTER
C243 LH HEADLAMPS
C242 LH FRONT MARKER & FLASHER
C102 C103 LH FR SIDE FLASHER
LH FR SIDE MARKER
GROUND STUD
HORNS
LH CORNERING
SERVICE CPT LTS
WASHER PUMP C11 C12
L.H. SW. PANEL
CLEARANCE LTS
C584 AIR HORN
C8 C9 C6 C5 C582
C4 C2 C3 C1
C500 PRO-DRIVER
C92
C406
064635
WEBASTO TIMER C430 065572
C50 LOW BUOY VAL.
C171 C70 065627 L.H. CONSOLE
065473
C589 LH MIRROR RAMCO C268
FR. JCT. BOX 065638
C74 C72 C71
C506 C45
064199
C601 064754 WINDOW AJAR
064340
C507 DIGITAL CLOCK
404310(H345) 404309(H341)
GROUND STUD
C396 SPEAKER
064908 (STEERING CONTROL ZF)
C279 SPEED SIGNAL
C282 CONVERTER
C210
EVAP. FAN
CONDENSER FAN
065361 EVAP. JCT PANEL
065362
C67 LUG. LT
C65 LUG. LT
C104 C103 RH CENT. FLASHER RH CENT. MARKER
C63 LUG. LT
ESPAR PUMP & FUEL TANK G.L. 065698
C107 C152 C95 LIQ. SOL.
C61 LUG. LT
C80 A.R. SENS.
C68 LUG. LT
C66 LUG. LT
C102 C103 LH CENT. FLASHER LH CENT. MARKER
C64 LUG. LT
C62 LUG. LT
C76 A.R. SENS.
C52
C60 RJB LTS.
WCL PUMP RIC-9
064529
C156 BYPASS VALVE
C157 WATER PUMP
C155 WATER VALVE
C112 EVAP. MOD.
C153 A.A. SENS.
C111 DAMPER
065633 RH SENSOR & SOLENOID LH SENSOR & SOLENOID
065635 RH SENSOR & SOLENOID LH SENSOR & SOLENOID
C96 C97 C69
065630
ECU ABS C X1 C X2
C464 DDR
CV12
C414 C186 C220 C90 C388
C52 C21 C20 C15 C610 064128 C91 C35
C5 C1 CV CT
E.C.U. WORLD TR.
C58 C59
A/C & HEAT JUNCTION PANEL 065366
RR. JCT. BOX 064398(WCL) 065502
PRIME PUMP
C145
065467(H341) 065036(H345) AISLE LTS C144
(LH HAT RACK (READING LTS + VENT.) 064840(H345) 064841(H341) C37
(LH HAT RACK LIGHTING + SPEAKERS) 065494(H345) 064568(H341) C578
C577 064564(H345) 064572(H341) WITH HAT RACK DOORS
064565(H345) 064573(H341) WITHOUT HAT RACK DOORS
INDIRECT LIGHTING
064597
C463
W/O RET. W/RET. 065750
C462 OUTPUT SPEED
C461 RETARDER TEMP
C460 RETARDER SOL.
C459 ENGINE SPEED
C458 TURBINE SPEED
065751
C462 OUTPUT SPEED
C459 ENGINE SPEED
C458 TURBINE SPEED
C456 RETARDER ACCUMULATOR SOL.
C457 TRANSM. MAIN. CONN.
064399
RH DOCKING LT
C121 RH FR SIDE FLASHER
C113 RH FR SIDE MARKER
C49 BATTERIES CPT LT
C113 LH FR SIDE MARKER
C114 LH FR SIDE FLASHER
LH DOCKING LT
065468
C122 CAMERA DOOR SOLENOID
C124 ETHER
C126 LAVATORY PUMP
C56 LAVATORY SECOND PUSH BUTTON
C116 ENGINE CPT LT
C223 FIRE DETECTOR
C230 064101 C232 PRIME PUMP SW. C231 FUEL PRIME PUMP
C127 063715 C127 FUEL WATER FILTER
C120 064335 RR RH LOWER LAMPS
C119 064334 RR LH LOWER LAMPS
C342 RR START SW.
C327 RR CTRL START SW.
C118 LAVATORY FAN
C125 BACK UP ALARM
C432 ENG. LTS RR DOOR SW.
C287 ENG. LTS RH DOOR SW.
C133 A/C HI PRESS SW
C413 HI UNLOAD PRESS SW
C158 SPEED 1 COND. PRESS SW
C159 SPEED 2 COND. PRESS SW
C128 COMPRESSOR CLUTCH
C130 COMPRESSOR UNLOADER
C131 COMPRESSOR UNLOADER
C132 A/C LO PRESS SW
C600 LO UNLOAD PRESS. SW.
C115 063791 AIR DRYER
C409 COOLANT LEVEL PROBE
C116 ENGINE CPT LT
C222 FIRE DETECTOR
CWX1 CWX3 PRE-HEATER CONNECTIONS
C32 C309 E.C.M. DDEC
C415
C407 C408 C397 065603 ENGINE CRADLE ACCESSORIES
BATTERY COMPT. ACCESSORIES
BAT. JCT. CPT 065413
063906
065664 GALLEY RIGHT
065668 GALLEY LEFT
ENGINE DDEC HARNESS SENSOR
EATON T. 064948 W.T. 064947
065411
065468
065513

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: C1	REVISION 23

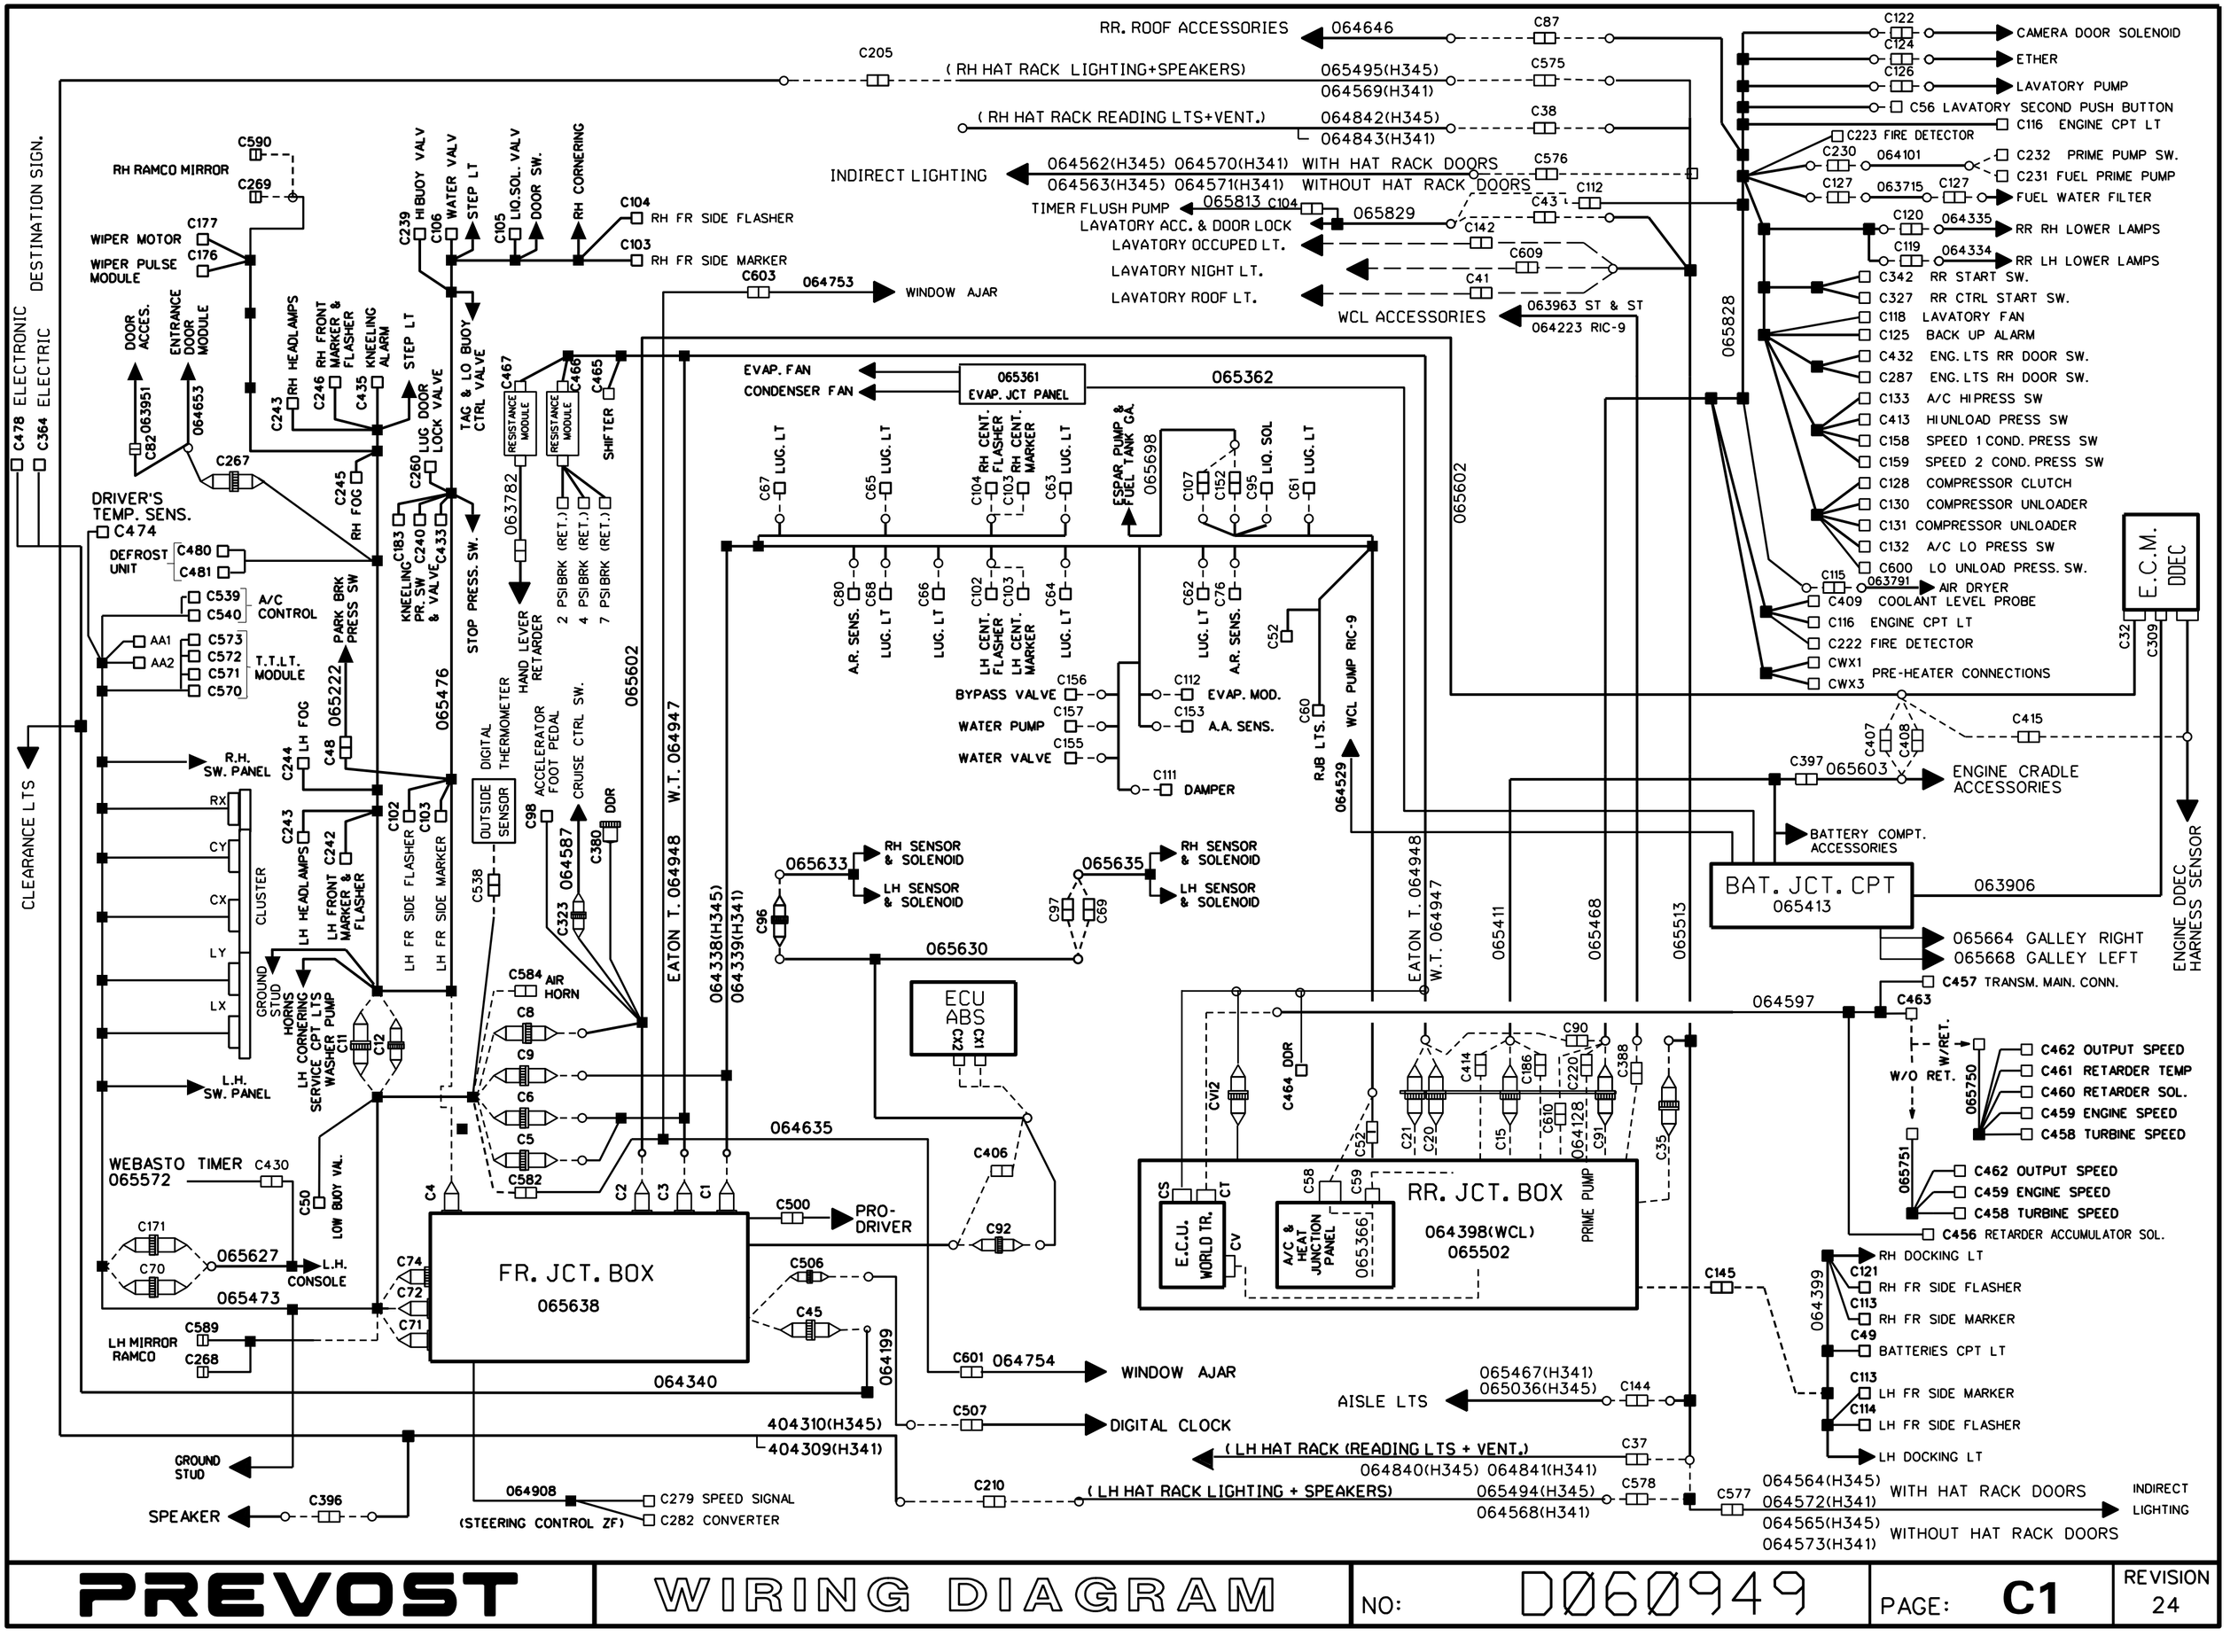

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: C1	REVISION 24

5 CHANNEL SLIM-LINE SEAT AUDIO SYSTEME

5 CHANNEL STEREO AMPL.

PA CH1 CH2 CH3 CH4 VIDEO

POWER C542 LEFT RIGHT SEAT

064486

FROM CONTROL HEAD 404302 404498

FROM DRIVER'S RADIO 900855

C545 RADIO SUPP. •1 900856

C545 RADIO SUPP. 2• 900856

C545 RADIO SUPP. 3• 900856

900758

901022 901022

901020

901019

SEAT AUDIO CONTROL

SEAT AUDIO CONTROL

SEAT AUDIO CONTROL

SEAT AUDIO CONTROL

901018 901008 901008 901008 901008 901021

BREAK OUT BOX

BREAK OUT BOX

901018 901018

TO NEXT LEFT PASSENGER SEAT

TO NEXT RIGHT PASSENGER SEAT

404380

404504

DIMMER C6

C218 CAMERA & TV SWITCH C217

CONTROL HEAD

C555 C554 C553

WIRELESS MIC. (CHARGER) C546

DRIVER'S SPEAKER 404762 C563

C564 SPARE MIC. CONN.

C564 L.H. MOD. PANEL MIC.

C566 BOOM MIC.

C567 PRIORITY MIC.

404571

C588

404572

A10 A11

FM AMPLI C3

R.H. CONSOL. MIC. C558

C465 404226

R.H. MOD. PANEL MIC.

PARCEL RACK JCT BLOCK

404255

TV TUNER

VDA

VCP

AUDIO OUT

C205 R.H. PASS. SPEAKER SEE P.C1

C210 L.H. PASS. SPEAKER SEE P.C1

C453 C15 404284 R66

C450 C451 C454

A18 A19 C569 C568 AMPLI

AUDIO SEAT

C544

C541

C396 404310

C561 WIRELESS MIC.

C455

RADIO

C556

C557

A1

A2

C452 ACC. POWER SEE P. C1

CD CHANGER 12 V MEM.

900988

CD CHANGER

404573

FIRST LUGG. SOUND SYSTEM JCT BOX

B/U MONITOR

065063 C394 SEE P. C1

064410

B/U CAMERA

5 CHANNEL SLIM-LINE SEAT AUDIO SYSTEME

5 CHANNEL STEREO AMPL.

PA CH1 CH2 CH3 CH4 VIDEO POWER C542 LEFT RIGHT SEAT

064486

FROM CONTROL HEAD 404302 404498

FROM DRIVER'S RADIO 900855

C545 RADIO SUPP. #1 900856

C545 RADIO SUPP. 2# 900856

C545 RADIO SUPP. 3# 900856

900758 404380

901022 901022

901020

901019

SEAT AUDIO CONTROL

SEAT AUDIO CONTROL

SEAT AUDIO CONTROL

SEAT AUDIO CONTROL

901018 901008 901008 901018

901008 901008 901021

BREAK OUT BOX

BREAK OUT BOX

901018 901018

TO NEXT LEFT PASSENGER SEAT

TO NEXT RIGHT PASSENGER SEAT

404504

DIMMER C6

C218 CAMERA & TV SWITCH C217

CONTROL HEAD

C555 C554 C553

C564 SPARE MIC. CONN.

C564 L.H. MOD. PANEL MIC.

C566 BOOM MIC.

C567 PRIORITY MIC.

WIRELESS MIC. (CHARGER) C546

DRIVER'S SPEAKER 404762 C563

404571 C588 405184

A10 A11

FM AMPLI C3

R.H. CONSOL. MIC. C558

C465 404226 R.H. MOD. PANEL MIC.

PARCEL RACK JCT BLOCK

404255

TV TUNER

VDA

VCP

AUDIO OUT

C205 R.H. PASS. SPEAKER SEE P.C1

C210 L.H. PASS. SPEAKER SEE P.C1

C453 C15 404284

R66

C450 C451 C454

A18 A19 C569 C568 AMPLI

AUDIO SEAT

C544

C541

C396 404310

C561 WIRELESS MIC.

C455

RADIO

C556 C557 A1 A2

C452 ACC. POWER SEE P. C1

CD CHANGER 12 V MEM.

900988 CD CHANGER

404573

FIRST LUGG. SOUND SYSTEM JCT BOX

B/U MONITOR

065063 C394 SEE P. C1

064410

B/U CAMERA

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: C2	REVISION 08

5 CHANNEL SLIM-LINE SEAT AUDIO SYSTEME

5 CHANNEL STEREO AMPL.

PA CH1 CH2 CH3 CH4 VIDEO POWER C542 LEFT RIGHT SEAT

FROM CONTROL HEAD 404302 404498

FROM DRIVER'S RADIO 900855

C545 RADIO SUPP. #1 900856

C545 RADIO SUPP. 2# 900856

C545 RADIO SUPP. 3# 900856

064486

900758

901022 901022

901020

901019

SEAT AUDIO CONTROL

SEAT AUDIO CONTROL

SEAT AUDIO CONTROL

SEAT AUDIO CONTROL

901018 901008 901008 901008 901008 901021

BREAK OUT BOX

BREAK OUT BOX

901018 901018

404380

TO NEXT LEFT PASSENGER SEAT

TO NEXT RIGHT PASSENGER SEAT

404504

PARCEL RACK JCT BLOCK

405308

TV TUNER

VDA

C205 R.H. PASS. SPEAKER SEE P.C1

C579 AUDIO OUT VCP C562

C396 404310

C561 WIRELESS MIC. C455

C210 L.H. PASS. SPEAKER SEE P.C1

DIMMER C6

CAMERA & TV SWITCH C218

C217

CONTROL HEAD

C555 C554 C553

WIRELESS MIC. (CHARGER) C546

DRIVER'S SPEAKER 404762 C563

C564 SPARE MIC. CONN.

C564 L.H. MOD. PANEL MIC.

C566 BOOM MIC.

C567 PRIORITY MIC.

404571

C588

405316

A10 A11

FM AMPLI C3

R.H. CONSOL. MIC. C558

C465 404226 R.H. MOD. PANEL MIC.

C453 C15 404284 R66

C450 C451 C454

A18 A19 C569 C568 AMPLI

AUDIO SEAT

C544 C541

404573

FIRST LUGG. SOUND SYSTEM JCT BOX

RADIO

C556 C557 A1 A2

C452 ACC. POWER SEE P. C1

CD CHANGER 12 V MEM.

900988

CD CHANGER


B/U MONITOR

065063 C394 SEE P. C1

064410

B/U CAMERA

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: C2	REVISION 18

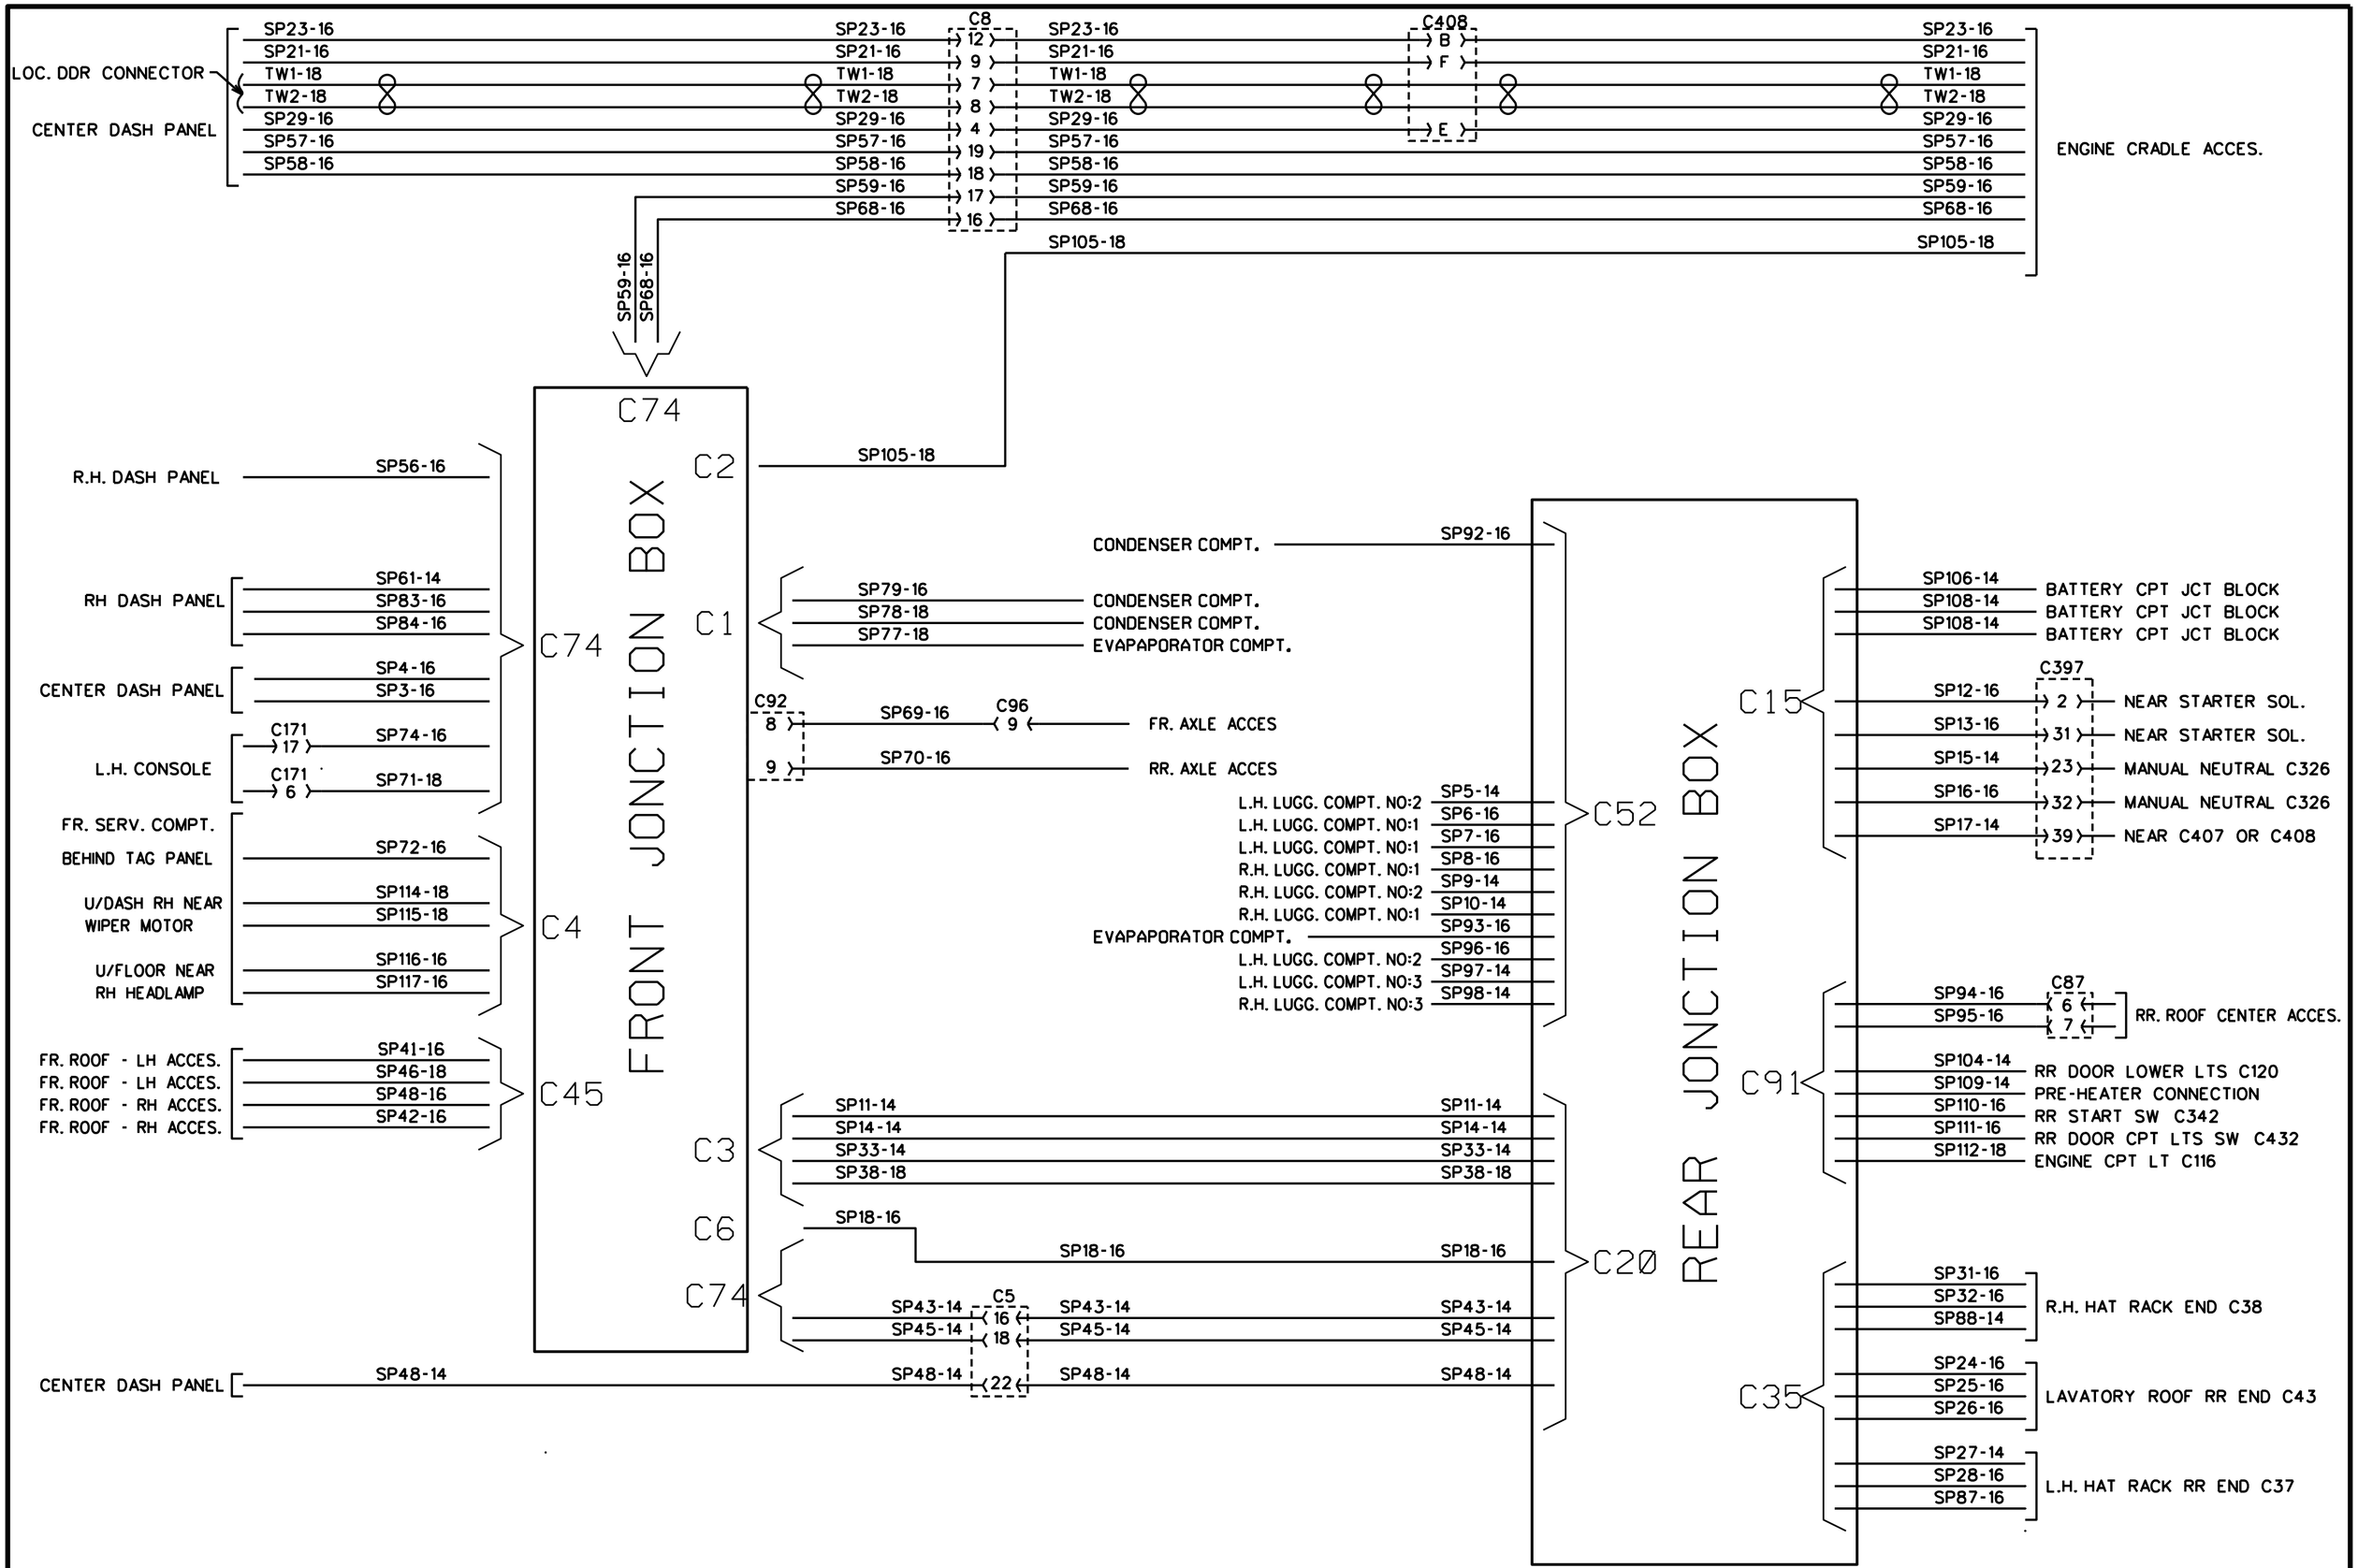

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: D	REVISION 00

LOC. DDR CONNECTOR
CENTER DASH PANEL

SP23-16
SP21-16
TW1-18
TW2-18
SP29-16
SP57-16
SP58-16

C8: 12, 9, 7, 8, 4, 19, 18, 17, 16

C408: B, F, E

SP59-16
SP68-16
SP105-18

ENGINE CRADLE ACCES.

C74 JONCTION BOX FRONT

C2
C1
C3
C6
C74
C4
C45

R.H. DASH PANEL — SP56-16

RH DASH PANEL — SP61-14, SP83-16, SP84-16

CENTER DASH PANEL — SP4-16, SP3-16

L.H. CONSOLE — C171 17 SP74-16; C171 6 SP71-18

FR. SERV. COMPT. BEHIND TAG PANEL — SP72-16

U/DASH RH NEAR WIPER MOTOR — SP114-18, SP115-18

U/FLOOR NEAR RH HEADLAMP — SP116-16, SP117-16

FR. ROOF - LH ACCES. — SP41-16
FR. ROOF - LH ACCES. — SP46-18
FR. ROOF - RH ACCES. — SP48-16
FR. ROOF - RH ACCES. — SP42-16

CONDENSER COMPT. — SP92-16

SP79-16 — CONDENSER COMPT.
SP78-18 — CONDENSER COMPT.
SP77-18 — EVAPAPORATOR COMPT.

C92 8 — SP69-16 — C96 9 — FR. AXLE ACCES
C92 9 — SP70-16 — RR. AXLE ACCES

L.H. LUGG. COMPT. NO:2 — SP5-14
L.H. LUGG. COMPT. NO:1 — SP6-16
L.H. LUGG. COMPT. NO:1 — SP7-16
R.H. LUGG. COMPT. NO:1 — SP8-16
R.H. LUGG. COMPT. NO:2 — SP9-14
R.H. LUGG. COMPT. NO:1 — SP10-14
EVAPAPORATOR COMPT. — SP93-16
L.H. LUGG. COMPT. NO:2 — SP96-16
L.H. LUGG. COMPT. NO:3 — SP97-14
R.H. LUGG. COMPT. NO:3 — SP98-14

C52

SP11-14
SP14-14
SP33-14
SP38-18

SP18-16

SP43-14 — C5 16 — SP43-14
SP45-14 — C5 18 — SP45-14
SP48-14 — C5 22 — SP48-14

CENTER DASH PANEL — SP48-14

C20

REAR JONCTION BOX

C15

SP106-14 — BATTERY CPT JCT BLOCK
SP108-14 — BATTERY CPT JCT BLOCK
SP108-14 — BATTERY CPT JCT BLOCK

C397

SP12-16 — 2 — NEAR STARTER SOL.
SP13-16 — 31 — NEAR STARTER SOL.
SP15-14 — 23 — MANUAL NEUTRAL C326
SP16-16 — 32 — MANUAL NEUTRAL C326
SP17-14 — 39 — NEAR C407 OR C408

C87

C91

SP94-16 — 6
SP95-16 — 7
RR. ROOF CENTER ACCES.

SP104-14 — RR DOOR LOWER LTS C120
SP109-14 — PRE-HEATER CONNECTION
SP119-14 — PRE-HEATER CONNECTION
SP110-16 — RR START SW C342
SP111-16 — RR DOOR CPT LTS SW C432
SP112-18 — ENGINE CPT LT C116

C35

SP31-16
SP32-16
SP88-14
R.H. HAT RACK END C38

SP24-16
SP25-16
SP26-16
LAVATORY ROOF RR END C43

SP27-14
SP28-16
SP87-16
L.H. HAT RACK RR END C37

CIRCUIT NUMBER CODE

No.	DESCRIPTION
B A	INTERIOR LTS-110V FLUORESCENT
B B	INTERIOR LTS-110V FLUORESCENT
D 1	SOUND SYSTEM-FR RH SPEAKER
D 2	SOUND SYSTEM-FR RH SPEAKER
D 3	SOUND SYSTEM-FR RH SPEAKER
D 4	SOUND SYSTEM-RR RH SPEAKER
D 5	SOUND SYSTEM-RR RH SPEAKER
D 6	SOUND SYSTEM-RR RH SPEAKER
D 7	SOUND SYSTEM-RR RH SPEAKER
D 8	SOUND SYSTEM-RR RH SPEAKER
D 3 4	SOUND SYSTEM-RR RH SPEAKER
D 6 7	SOUND SYSTEM-RR RH SPEAKER
G 1	SOUND SYSTEM-FR LH SPEAKER
G 2	SOUND SYSTEM-FR LH SPEAKER
G 3	SOUND SYSTEM-FR LH SPEAKER
G 4	SOUND SYSTEM-RR LH SPEAKER
G 5	SOUND SYSTEM-RR LH SPEAKER
G 6	SOUND SYSTEM-RR LH SPEAKER
G 7	SOUND SYSTEM-RR LH SPEAKER
G 8	SOUND SYSTEM-RR LH SPEAKER
G 3 4	SOUND SYSTEM-RR LH SPEAKER
G 6 7	SOUND SYSTEM-RR LH SPEAKER
L 1 A	INTERIOR LTS-110V FLUORESCENT
L 1 B	INTERIOR LTS-110V FLUORESCENT
L 2 A	INTERIOR LTS-110V FLUORESCENT
L 2 B	INTERIOR LTS-110V FLUORESCENT
L 8	ENG. BLK & WATER TANK-HEATER
L 9	ENG. BLK & WATER TANK-HEATER
L 0	110V RECEPTACLE- 110V FLUOR.
L 1	110V RECEPTACLE- 110V FLUOR.
L 2	110V RECEPTACLE- 110V FLUOR.
R A	INTERIOR LTS-110V FLUORESCENT
R B	INTERIOR LTS-110V FLUORESCENT
S H 1	SHIELD CHASSIS GRD
S H 2	SHIELD CHASSIS GRD
S H 3	SHIELD CHASSIS GRD
S H 4	SHIELD CHASSIS GRD
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 10	SPARE-RJB TO LUGG CPT #1
S P 11	SPARE-FJB TO RJB
S P 12	SPARE-RJB TO ENGINE
S P 13	SPARE-RJB TO ENGINE
S P 14	SPARE-FJB TO RJB
S P 15	SPARE-RJB TO ENGINE
S P 16	SPARE-RJB TO ENGINE
S P 17	SPARE-RJB TO ENGINE
S P 18	SPARE-FJB TO RJB
S P 24	SPARE-RJB TO LAVATORY ROOF
S P 25	SPARE-RJB TO LAVATORY ROOF
S P 26	SPARE-RJB TO LAVATORY ROOF
S P 27	SPARE-RJB TO LH HAT RACK
S P 28	SPARE-RJB TO LH HAT RACK
S P 31	SPARE-RJB TO RH HAT RACK
S P 32	SPARE-RJB TO RH HAT RACK
S P 33	SPARE-FJB TO RJB
S P 38	SPARE-FJB TO RJB
S P 43	SPARE-FJB TO RJB
S P 45	SPARE-FJB TO RJB
S P 46	SPARE-RJB TO LH FR ROOF
S P 48	SPARE-RJB TO DASH CENTER PANEL
S P 56	SPARE-ENGINE TO RH SW PANEL
S P 57	SPARE-DASH CENTER PANEL TO ENG.
S P 58	SPARE-DASH CENTER PANEL TO ENG.
S P 59	SPARE-FJB TO ENGINE
S P 61	SPARE-FJB TO DASH RH PANEL
S P 68	SPARE-FJB TO ENGINE
S P 69	SPARE-FJB TO FR AXLE
S P 70	SPARE-FJB TO FR AXLE
S P 71	SPARE-FJB TO RH SW PANEL
S P 72	SPARE-FJB TO FR SERV CPT
S P 74	SPARE-FJB TO LH CONSOLE
S P 77	SPARE-FJB TO EVAPORATOR CPT
S P 78	SPARE-FJB TO CONDENSER CPT
S P 79	SPARE-FJB TO CONDENSER CPT
S P 87	SPARE-RJB TO LH HAT RACK
S P 88	SPARE-RJB TO RH HAT RACK
S P 92	SPARE-RJB TO CONDENSER CPT
S P 93	SPARE-RJB TO EVAPORATOR CPT
S P 94	SPARE-RJB TO RR ROOF
S P 95	SPARE-RJB TO RR ROOF
S P 96	SPARE-RJB TO LUGG CPT #2
S P 97	SPARE-RJB TO LUGG CPT #3
S P 98	SPARE-RJB TO LUGG CPT #3
S P 104	SPARE-RJB TO ENGINE CPT
S P 105	SPARE-FJB TO ENGINE
S P 106	SPARE-RJB TO BATT. CPT.
S P 107	SPARE-RJB TO BATT. CPT.
S P 108	SPARE-RJB TO BATT. CPT.
S P 109	SPARE-RJB TO ENGINE CPT.
S P 110	SPARE-RJB TO ENGINE CPT.
S P 111	SPARE-RJB TO ENGINE CPT.
S P 112	SPARE-RJB TO ENGINE CPT.
S P 114	SPARE-FJB TO U/DASH WIPER
S P 115	SPARE-FJB TO U/DASH WIPER
S P 116	SPARE-FJB TO U/DASH FLOOR
S P 117	SPARE-FJB TO U/DASH FLOOR
W C	A/C & HEAT SYST-EVAP CTR SIGN
Y C	INTERIOR LTS-110V FLUORESCENT
Y D	INTERIOR LTS-110V FLUORESCENT
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0	GALLEY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A A	RS - VOLTAGE REGULATOR GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 E	RS - HAT RACK ACCES. LH GRD
0 E A	EATON TRANSMISSION GRD
0 F	RS - HAT RACK ACCES. RH GRD
0 G	RS - HAT RACK ACCES. RH GRD
0 H	RS - LAVATORY ACCES. GRD
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR (SEDAN) GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	FS - SOUND SYS. JCT PANEL GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R E	RADIO &CTRL HEAD CHASSIS GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN - GND RELAY
0 S A	EC-BOSCH ALT. GROUND
0 S 2	SOUND SYSTEM RADIO GRD
0 S 3	SOUND SYSTEM VIDEO GRD
0 S S	SOUNS SYSTEM BATT. GRD
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS FR JCT BOX CPT GRD STUD
0 Z	RR JCT BOX CPT GRD STUD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 A	A/C & HEAT SYSTEM-COOL 1 SIGN
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 B B	A/C & HEAT SYSTEM-COOL SIGN
2 H	A/C & HEAT SYSTEM-HI PRESS SW
2 H L	A/C & HEAT SYSTEM-LO & HI PRESS SW
2 L	A/C & HEAT SYSTEM-LO PRESS SW
4	HOSTESS & PASSENGER CHIME
4 A	HOSTESS & PASSENGER CHIME
4 B	PASSENGER CHIME

CIRCUIT NUMBER CODE

No.	DESCRIPTION
4 C	HOSTESS CHIME
5	INTERIOR LTS-AISLE & EMERG. EXIT
5	UPPER WINDSHIELD DEFROSTER
5 D	UPPER WINDSHIELD DEFROSTER
5 E	UPPER WINDSHIELD DEFROSTER
5 N	INTERIOR LTS-EMERGENCY EXIT
5 NC	SPEED SIGNAL LOWER 5MPH
5 NO	SPEED SIGNAL HIGHER 5MPH
6	INTERIOR LTS-AISLE
7 B	ENTRANCE DOOR (SEDAN)
7 D	ENTRANCE DOOR (SEDAN)
7 DA	ENTRANCE DOOR (SEDAN)
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
10	INTERIOR LTS-LUGGAGE CPT
10 A	INTERIOR LTS-LUGGAGE CPT
10 B	INTERIOR LTS-LUGGAGE CPT
10 D	INTERIOR LTS-LUGGAGE CPT
10 F	INTERIOR LTS-LUGGAGE CPT
10 H	INTERIOR LTS-LUGGAGE CPT
10 K	INTERIOR LTS-LUGGAGE CPT
10 R	INTERIOR LTS-LUGGAGE DOOR AJAR
11	FR DESTINATION SIGN
11 A	FR DESTINATION SIGN
11 B	FR DESTINATION SIGN
11 C	FR DESTINATION SIGN
11 D	FR DESTINATION SIGN
11 E	FR DESTINATION SIGN
11 K	FR DESTINATION SIGN
12	12V BAT ELECTRONIC JCT BLOCK
12	BAT CPT 12V BATTERY
12 A	FR JCT BOX 12V DISC SW
12 A	RR JCT BOX 12V DISC SW
12 B	12V BAT ELECTRICAL JCT BLOCK
12 B	RR JCT BOX 12V DISC SW
12 B	FR JCT BOX 12V DISC SW
12 BE	BAT. EQUALIZER MONITOR
12 C	FR JCT BOX 12V DISC SW
12 C	RR JCT BOX 12V HOT WIRE
12 CE	RR JCT BOX 12V HOT WIRE
12 D	BAT CPT 12V BATTERY
12 DT	TTLT MODULE
12 E	FR JCT BOX 12V DISC SW
12 E	RR JCT BOX 12V DISC SW
12 F	BAT CPT 12V FJB & IC
12 F	FR JCT BOX 12V DISC SW
12 F	RR JCT BOX 12V DISC SW
12 G	FR JCT BOX 12V DISC SW
12 H	12 V IGNITION D.T.RUN LIGHT
12 J	FR JCT BOX 12V DISC SW
12 I	12V IGNITION DISTRIBUTION
12 I	RR JCT BOX 12V IGNITION
12 K	12 VOLT IGN. TTLT & HVAC MODULE
12 IA	12V IGNITION DISTRIBUTION
12 IA	FR JCT BOX 12V IGNITION
12 IB	FR JCT BOX 12V IGNITION
12 IF	FR JCT BOX 12V IGNITION
12 LX	CLUSTER (12V HOT WIRE)
12 P	LH CONSOLE POWER OUTLET
12 R	BAT CPT 12V DISC RLY TO RJB
12 R	MEMORY BATTERY RADIO
12 S	SOUND SYSTEM 12V RADIO
12 S1	SOUND SYSTEM 12V RADIO
12 S2	SOUND SYSTEM 12V RADIO
12 SB	SOUND SYSTEM 12V FEEDING
12 SS	SOUND SYSTEM 12V FEEDING
12 VA	BATTERY TO EQUALIZER 12V
12 VD	12V HOT WIRE DISTRIBUTION
12 VF	BAT CPT 12V FJB & IC
12 VI	12V IGNITION DISTRIBUTION
12 VR	BAT CPT 12V DISC RLY TO RJB
12 W	12V BATTERY DDEC III
12 W	ENTRANCE DOOR (SEDAN)
12 WA	ENTRANCE DOOR (SEDAN)
12 X	FR JCT BOX 12V DISC SW
12 X2	FR JCT BOX 12V DISC SW
12 Y	FR JCT BOX 12V DISC SW
13 A	ALARM & SIGNAL-LO AIR PRIM.
13 B	ALARM & SIGNAL-LO AIR SEC.
14	LAVATORY-FLUSHING PUMP
14 A	LAVATORY-FLUSHING PUMP
15	EXTERIOR LTS-MULTI FUNC LEVEL
15 A	WIPER & WASHER UPPER WINDSHIELD
16	SPEED - SIGNAL +
16 A	SPEED - SIGNAL +
16 T	SPEED - SIGNAL +
17	EXTERIOR LTS-FLASHER UNIT
17 A	EXTERIOR LTS-FLASHER UNIT
19	DIFFERENTIAL OIL TEMP
20	SPEED - SIGNAL -
20 T	SPEED - SIGNAL -
20 W	SPEED - SIGNAL -
21	EXTERIOR LTS-DIRECTIONNAL LH
21 A	EXTERIOR LTS-DIRECTIONNAL LH
21 B	EXTERIOR LTS-HAZARD
21 C	EXTERIOR LTS-CORNERING LH
21 H	EXTERIOR LTS-DIRECTIONNAL LH
21 K	EXTERIOR LTS-CORNERING
21 N	EXTERIOR LTS-CORNERING LH
21 P	EXTERIOR LTS-CORNERING LH
23	EXTERIOR LTS-DIRECTIONNAL RH
23	EXTERIOR LTS-DIRECTIONNAL RH
23 A	EXTERIOR LTS-DIRECTIONNAL RH
23 B	EXTERIOR LTS-DIRECTIONNAL RH
23 C	EXTERIOR LTS-CORNERING RH
23 N	EXTERIOR LTS-CORNERING RH
23 P	EXTERIOR LTS-CORNERING RH
24	BAT CPT 24V BATTERY
24	FR JCT BOX 24V DISC SW
24 A	BOOSTER BLOCK 24V DISC SW
24 A	FR JCT BOX 24V DISC SW
24 A	RR JCT BOX 24V DISC SW
24 B	24V STARTER RLY FEEDING
24 B	FR JCT BOX 24V DISC SW
24 B	RR JCT BOX 24V DISC SW
24 BC	24 VOLT BATT. CHARGER
24 BE	RJB CPT-BAT EQ MONITOR HOT WIRE
24 C	FR JCT BOX 24V DISC SW
24 C	RR JCT BOX 24V DISC SW
24 D	BAT CPT 24V HOT WIRE
24 D	FR JCT BOX 24V HOT WIRE
24 D	RR JCT BOX 24V HOT WIRE
24 DA	A/C JCT BOX 24V HOT WIRE
24 E	BAT CPT 24V DISC SW
24 E	FR JCT BOX 24V DISC SW
24 E	RR JCT BOX 24V DISC SW
24 F	FR JCT BOX 24V DISC SW
24 F	RR JCT BOX 24V DISC SW
24 G	FR JCT BOX 24V DISC SW
24 G	RR JCT BOX 24V DISC SW
24 H	FR JCT BOX 24V DISC SW
24 H	RR JCT BOX 24V DISC SW
24 I	FR JCT BOX 24V IGNITION
24 I	RR JCT BOX 24V IGNITION
24 IA	FR JCT BOX 24V IGNITION
24 IA	RR JCT BOX 24V IGNITION
24 IB	FR JCT BOX 24V IGNITION
24 IB	RR JCT BOX 24V IGNITION
24 IC	FR JCT BOX 24V IGNITION
24 IF	FJB 24VOLT IGNITION
24 P	FR JCT BOX 24V DISC SW
24 S	24V DISC SW RLY SIGNAL
24 S1	SOUND SYSTEM 24V AMPLIFIER
24 S2	SOUND SYSTEM 24V AMPLIFIER
24 S3	SOUND SYSTEM 24V VIDEO
24 S4	SOUND SYSTEM 24V VIDEO
24 SB	SOUND SYSTEM 24V FEEDING
24 SS	SOUND SYSTEM 24V FEEDING
24 R	24 VOLTS FRONT CAMERA SW.
24 V2	RR JCT BOX 24V DISC SW
24 V3	RR JCT BOX 24V DISC SW
24 V4	RR JCT BOX 24V DISC SW
24 V5	RR JCT BOX 24V DISC SW
24 VD	24V HOT WIRE DISTRIBUTION
24 VF	BAT CPT 24V SW TO FJB & IC
24 VA	BATTERY TO EQUALIZER 24V
24 VI	RR JCT BOX 24V IGNITION
24 VR	BAT CPT 24V DISC SW TO RJB
24 W	RR JCT BOX 24V DISC SW (WCL)
24 WC	BATT.CPT TO HYD. PUMP (WCL)
24 WL	24V BATTERY-HYD. PUMP (WCL)
25 A1	PRE-EXITATION ALT. BOSCH #1
25 A2	PRE-EXITATION ALT. BOSCH #2
25 A	T.T. LT. ALTERNATOR #1
25 B	12 VOLTS IGN. ALT. SIGNAL MODULE
25 D	12 V. ENGINE RUN / HVAC SYSTEM
25 F	12 VOLT IGN. DISTRIBUTION
25 H	24 VOLT IGN. ALT. BOSCH
25 K	T.T. LT. ALTERNATOR #2
26 A	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26 B	DRIVER'S WINDOW LIFTER
26 C	DRIVER'S WINDOW LIFTER
27	LAVATORY-EMERGENCY SONALERT
28 A	A/C & HEAT SYSTEM-HI PRESSURE
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29 A	A/C & HEAT SYSTEM-DRIVER'S HTR
29 B	A/C & HEAT SYSTEM-DRIVER'S HTR
29 H	HVAC DASH MODULE
30 A	GALLEY
31 A	A/C & HEAT SYSTEM-UNLOADER
31 B	A/C & HEAT SYSTEM-UNLOADER
31 B	WIPER & WASHER SYSTEM
31 C	WIPER & WASHER SYSTEM
31 D	WIPER & WASHER SYSTEM
31 E	WIPER & WASHER SYSTEM
31 J	WIPER & WASHER SYSTEM
31 X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32 B	EXTERIOR LTS-BACK-UP
32 C	BACK-UP PWR & SIGNAL
32 D	BACK-UP ALARM
35	ENTRANCE DOOR (SEDAN)
35 B	ENTRANCE DOOR (SEDAN)
35 BB	ENTRANCE DOOR (SEDAN)
35 D	ENTRANCE DOOR (SEDAN)
36	JACOB BRAKE SYSREM

CIRCUIT NUMBER CODE

No.	DESCRIPTION
36A	JACOB BRAKE SYSREM
38	INTERIOR LTS-24V FLUORESCENT
38A	INTERIOR LTS-24V FLUORESCENT
38C	INTERIOR LTS-24V FLUORESCENT
38D	INTERIOR LTS-24V FLUORESCENT
39	INTERIOR LTS-24V LH CONSOLE SW
39A	INTERIOR LTS-DRIVER"S LTS
39P	READING LIGHTS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
43	HAT RACK FAN
43A	HAT RACK FAN
43B	HAT RACK FAN
43D	HAT RACK FAN
43E	HAT RACK FAN
43F	HAT RACK FAN
43G	HAT RACK FAN
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45B	A/C & HEAT SYSTEM-HEAT SIGN
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
48	ENTRANCE DOOR (SEDAN)
48A	ENTRANCE DOOR (SEDAN)
49	ENTRANCE DOOR (SEDAN)
49A	ENTRANCE DOOR (SEDAN)
50	AIR DRYER
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL- AIR HORN
52C	ALARM & SIGNAL- AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
57CA	A/C & HEAT SYSTEM-HEAT SIGN
57CC	A/C & HEAT SYSTEM-HEAT SIGN
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
62	LAVATORY-OCCUPIED LT
62A	LAVATORY-FLUOR LT
62B	LAVATORY-FLUOR LT
62E	LAVATORY-OCCUP & FLUOR LT
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVERS FAN
64B	DRIVERS FAN
64C	DRIVERS FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65P	PASSENGER REC. DAMPER
65D	DRIVER REC. DAMPER
66	O_PASS. ON/OFF
67	24 VOLT RUN DISTRIBUTION
67A	A/C & HEAT SYSTEM
67B	A/C & HEAT SYSTEM
67C	HEATING WINDSHIELD
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67V	A/C & HEAT SYSTEM-WATER VALVE
68	DASH & DEFROST DAMPER MOTOR
68A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH
72C	SUN VISOR-LH
72D	SUN VISOR-LH
73	LAVATORY-FEEDING
74	INTERIOR LTS-READING RH
74A	INTERIOR LTS-READING RH
74D	INTERIOR LTS-READING SIGNAL
75	INTERIOR LTS-READING LH
75A	INTERIOR LTS-READING LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77	A/C & HEAT SYSTEM-HI PRESSURE
77A	A/C & HEAT SYSTEM-DRIVER'S HTR
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85W	24V IGN ANTI SKID
85X	24V IGN ANTI SKID
85Y	ANTI SKID-WARNING LT
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
90J	A/C & HEAT SYSTEM-COND FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
100	INTERIOR LTS-GENERAL
100A	INTERIOR LTS-GENERAL
100B	INTERIOR LTS-GENERAL
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	WORLD TRANSM-SOL. SUPPLY
102A	24V STARTER TO BOSCH ALTERNATOR
103	LOW BUOY
104	WORLD TRANSM-SOL. FORWARD
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START

CIRCUIT NUMBER CODE

No.	DESCRIPTION
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125	GALLEY LAMP
125T	GALLEY LAMP
125W	WORLD TRANSM-RET. INDICATOR
126	KNEELING SYSTEM
126A	KNEELING SYSTEM
126B	KNEELING SYSTEM
126C	KNEELING SYSTEM
126D	KNEELING SYSTEM
126E	KNEELING SYSTEM
126F	KNEELING SYSTEM
126G	KNEELING SYSTEM
126H	KNEELING SYSTEM
126K	KNEELING SYSTEM
126P	KNEELING SYSTEM
126R	KNEELING SYSTEM
126W	5 MPH N.C. SIGNAL (WCL)
126S	KNEELING SYSTEM
126T	KNEELING SYSTEM
127	WORLD TRANSM-LUBE PRESS SW.
127	PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
127B	PRE-HEAT WATER HEATER
127	WORLD TRANSM-RETARDER FEED SOL.
127S	PRE-HEAT WATER HEATER
127W	PRE-HEAT WATER HEATER
128	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT WATER HEATER
128W	PRE-HEAT WATER HEATER
128	WORLD TRANSM-SOL. C2
129	PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	GALLEY-HEAT CONTAINERS
133A	GALLEY-HEAT CONTAINERS
133B	GALLEY-HEAT CONTAINERS
133C	GALLEY-HEAT CONTAINERS
133	WORLD TRANSM-RET. ACTUATOR HI
134	GALLEY-HEAT CONTAINERS
134A	GALLEY-HEAT CONTAINERS
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135A	A/C & HEAT SYSTEM-AIR SENSOR
135D	A/C & HEAT SYSTEM-AIR SENSOR
135C	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	GALLEY-ACCESSORIES
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146A	TRANSMISSION-12V IGNITION
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	WORLD TRANSM-OIL TEMP
147A	ETHER COLD START & D.R.L.
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
151A	ABS SYSTEM
152	ABS SYSTEM
152A	ABS SYSTEM
153	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	ABS SYSTEM
155	WORLD TRANSM-SPARE INPUT (-)
156	ABS SYSTEM
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157A	ABS SYSTEM
157B	ABS SYSTEM
157D	A.T.C. SYSTEM
157E	A.T.C. SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
165A	A/C & HEAT SYSTEM-TRANSMITER
165B	A/C & HEAT SYSTEM-TRANSMITER
165C	A/C & HEAT SYSTEM-TRANSMITER
165D	A/C & HEAT SYSTEM-TRANSMITER
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	A/C & HEAT SYSTEM-TEMP. CTR
167A	A/C & HEAT SYSTEM-TEMP. CTR
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170	LUGGAGE DOOR LOCK
170C	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
225	LAVATORY FAN
225A	LAVATORY FAN
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251A	DDEC III - DATA LOGGER 12 H.W.
251	DDEC III - PRODRIVER 12V H.W.
253	GALLEY-MICROWAVE
254	GALLEY-12V FRIGO NORCOLD
254A	GALLEY-FRIGO
255	GALLEY-COFEEMAKER
255A	GALLEY-COFEEMAKER
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
260	WINDOW AJAR
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
292	FAN CLUTCH RADIATOR SPD 2
300	DOOR AJAR MAGN.SW. (WCL)
300A	POWER SYSTEM SW. (WCL)
300B	DOOR AJAR ALARM (WCL)
301	POWER SYSTEM SW. (WCL)
302	DOOR AJAR T.T.LT. (WCL)
302A	DOOR AJAR ALARM SIGN.(WCL)
302B	DOOR AJAR MAGN.SW. (WCL)

CIRCUIT NUMBER CODE

No.	DESCRIPTION
303	REMOTE WALL SW. DWN (WCL)
304	REMOTE WALL SW. UP (WCL)
305	PARK. BRAKE SOL. VALVE (WCL)
305A	PARK. BRAKE SAFETY SW. (WCL)
306	CONTROL SYSTEM (WCL RICON)
307	CONTROL SYSTEM (WCL RICON)
308	CONTROL SYSTEM (WCL RICON)
309	CONTROL SYSTEM (WCL RICON)
310	EATON TRANSMISSION
311	EATON TRANSMISSION
312	EATON TRANSMISSION
313	EATON TRANSMISSION
314	EATON TRANSMISSION
315	EATON TRANSMISSIOM
316	EATON TRANSMISSION - EPL
317	EATON TRANSMISSION
318	EATON TRANSMISSION
319	EATON TRANSMISSION
320	EATON TRANSMISSION
321	EATON TRANSMISSION
322	EATON TRANSMISSIION
323	EATON TRANSMISSION
324	EATON TRANSMISSION
325	EATON TRANSMISSION
326	EATON TRANSMISSION
327	EATON TRANSMISSION
328	EATON TRANSMISSION
329	EATON TRANSMISSION
330	EATON TRANSMISSION - EPL
331	EATON TRANSMISSION - EPL
332	EATON TRANSMISSION
333	EATON TRANSMISSION - 12V BATTERY
334	EATON GENERATION 2
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE
540	DDEC III-CRUISE ENABLE LTS.
541	DDEC III-CRUISE SET SW
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
583	DDEC III-ENGINE BRAKE 4 CYL.
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
925	J1939-HIGH
926	J1939-LOW
927	J1939-SHIELD
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
979	DDEC III-ENGINE BRAKE 2 CYL.

CIRCUIT NUMBER CODE

No.	DESCRIPTION
B A	INTERIOR LTS-110V FLUORESCENT
B B	INTERIOR LTS-110V FLUORESCENT
D 1	SOUND SYSTEM-FR RH SPEAKER
D 2	SOUND SYSTEM-FR RH SPEAKER
D 3	SOUND SYSTEM-FR RH SPEAKER
D 4	SOUND SYSTEM-RR RH SPEAKER
D 5	SOUND SYSTEM-RR RH SPEAKER
D 6	SOUND SYSTEM-RR RH SPEAKER
D 7	SOUND SYSTEM-RR RH SPEAKER
D 8	SOUND SYSTEM-RR RH SPEAKER
D 3 4	SOUND SYSTEM-RR RH SPEAKER
D 6 7	SOUND SYSTEM-RR RH SPEAKER
G 1	SOUND SYSTEM-FR LH SPEAKER
G 2	SOUND SYSTEM-FR LH SPEAKER
G 3	SOUND SYSTEM-FR LH SPEAKER
G 4	SOUND SYSTEM-RR LH SPEAKER
G 5	SOUND SYSTEM-RR LH SPEAKER
G 6	SOUND SYSTEM-RR LH SPEAKER
G 7	SOUND SYSTEM-RR LH SPEAKER
G 8	SOUND SYSTEM-RR LH SPEAKER
G 3 4	SOUND SYSTEM-RR LH SPEAKER
G 6 7	SOUND SYSTEM-RR LH SPEAKER
L 1 A	INTERIOR LTS-110V FLUORESCENT
L 1 B	INTERIOR LTS-110V FLUORESCENT
L 2 A	INTERIOR LTS-110V FLUORESCENT
L 2 B	INTERIOR LTS-110V FLUORESCENT
L 8	ENG. BLK & WATER TANK-HEATER
L 9	ENG. BLK & WATER TANK-HEATER
L 0	110V RECEPTACLE- 110V FLUOR.
L 1	110V RECEPTACLE- 110V FLUOR.
L 2	110V RECEPTACLE- 110V FLUOR.
R A	INTERIOR LTS-110V FLUORESCENT
R B	INTERIOR LTS-110V FLUORESCENT
S H 1	SHIELD CHASSIS GRD
S H 2	SHIELD CHASSIS GRD
S H 3	SHIELD CHASSIS GRD
S H 4	SHIELD CHASSIS GRD
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 10	SPARE-RJB TO LUGG CPT #1
S P 11	SPARE-FJB TO RJB
S P 12	SPARE-RJB TO ENGINE
S P 13	SPARE-RJB TO ENGINE
S P 14	SPARE-FJB TO RJB
S P 15	SPARE-RJB TO ENGINE
S P 16	SPARE-RJB TO ENGINE
S P 17	SPARE-RJB TO ENGINE
S P 18	SPARE-FJB TO RJB
S P 24	SPARE-RJB TO LAVATORY ROOF
S P 25	SPARE-RJB TO LAVATORY ROOF
S P 26	SPARE-RJB TO LAVATORY ROOF
S P 27	SPARE-RJB TO LH HAT RACK
S P 28	SPARE-RJB TO LH HAT RACK
S P 31	SPARE-RJB TO RH HAT RACK
S P 32	SPARE-RJB TO RH HAT RACK
S P 33	SPARE-FJB TO RJB
S P 38	SPARE-FJB TO RJB
S P 43	SPARE-FJB TO RJB
S P 45	SPARE-FJB TO RJB
S P 46	SPARE-RJB TO LH FR ROOF
S P 48	SPARE-RJB TO DASH CENTER PANEL
S P 56	SPARE-ENGINE TO RH SW PANEL
S P 57	SPARE-DASH CENTER PANEL TO ENG.
S P 58	SPARE-DASH CENTER PANEL TO ENG.
S P 59	SPARE-FJB TO ENGINE
S P 61	SPARE-FJB TO DASH RH PANEL
S P 68	SPARE-FJB TO ENGINE
S P 69	SPARE-FJB TO FR AXLE
S P 70	SPARE-FJB TO FR AXLE
S P 71	SPARE-FJB TO RH SW PANEL
S P 72	SPARE-FJB TO FR SERV CPT
S P 74	SPARE-FJB TO LH CONSOLE
S P 77	SPARE-FJB TO EVAPORATOR CPT
S P 78	SPARE-FJB TO CONDENSER CPT
S P 79	SPARE-FJB TO CONDENSER CPT
S P 87	SPARE-RJB TO LH HAT RACK
S P 88	SPARE-RJB TO RH HAT RACK
S P 92	SPARE-RJB TO CONDENSER CPT
S P 93	SPARE-RJB TO EVAPORATOR CPT
S P 94	SPARE-RJB TO RR ROOF
S P 95	SPARE-RJB TO RR ROOF
S P 96	SPARE-RJB TO LUGG CPT #2
S P 97	SPARE-RJB TO LUGG CPT #3
S P 98	SPARE-RJB TO LUGG CPT #3
S P 104	SPARE-RJB TO ENGINE CPT
S P 105	SPARE-FJB TO ENGINE
S P 106	SPARE-RJB TO BATT. CPT.
S P 107	SPARE-RJB TO BATT. CPT.
S P 108	SPARE-RJB TO BATT. CPT.
S P 109	SPARE-RJB TO ENGINE CPT.
S P 110	SPARE-RJB TO ENGINE CPT.
S P 111	SPARE-RJB TO ENGINE CPT.
S P 112	SPARE-RJB TO ENGINE CPT.
S P 114	SPARE-FJB TO U/DASH WIPER
S P 115	SPARE-FJB TO U/DASH WIPER
S P 116	SPARE-FJB TO U/DASH FLOOR
S P 117	SPARE-FJB TO U/DASH FLOOR
W C	A/C & HEAT SYST-EVAP CTR SIGN
Y C	INTERIOR LTS-110V FLUORESCENT
Y D	INTERIOR LTS-110V FLUORESCENT
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0	GALLEY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A A	RS - VOLTAGE REGULATOR GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 E	RS - HAT RACK ACCES. LH GRD
0 E A	EATON TRANSMISSION GRD
0 F	RS - HAT RACK ACCES. RH GRD
0 G	RS - HAT RACK ACCES. RH GRD
0 H	RS - LAVATORY ACCES. GRD
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR (SEDAN) GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	FS - SOUND SYS. JCT PANEL GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R E	RADIO &CTRL HEAD CHASSIS GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN - GND RELAY
0 S A	EC-BOSCH ALT. GROUND
0 S 2	SOUND SYSTEM RADIO GRD
0 S 3	SOUND SYSTEM VIDEO GRD
0 S S	SOUNS SYSTEM BATT. GRD
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS FR JCT BOX CPT GRD STUD
0 Z	RR JCT BOX CPT GRD STUD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 A	A/C & HEAT SYSTEM-COOL 1 SIGN
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 B B	A/C & HEAT SYSTEM-COOL SIGN
2 H	A/C & HEAT SYSTEM-HI PRESS SW
2 E	A/C & HEAT SYSTEM EVAP CONT
2 F	A/C & HEAT SYSTEM EVAP CONT
2 H L	A/C & HEAT SYSTEM-LO & HI PRESS SW
2 L	A/C & HEAT SYSTEM-LO PRESS SW
4	HOSTESS & PASSENGER CHIME

CIRCUIT NUMBER CODE

No.	DESCRIPTION
4 A	HOSTESS & PASSENGER CHIME
4 B	PASSENGER CHIME
4 C	HOSTESS CHIME
5	INTERIOR LTS-AISLE & EMERG. EXIT
5	UPPER WINDSHIELD DEFROSTER
5 D	UPPER WINDSHIELD DEFROSTER
5 E	UPPER WINDSHIELD DEFROSTER
5 N	INTERIOR LTS-EMERGENCY EXIT
5 NC	SPEED SIGNAL LOWER 5MPH
5 NO	SPEED SIGNAL HIGHER 5MPH
6	INTERIOR LTS-AISLE
7 B	ENTRANCE DOOR (SEDAN)
7 D	ENTRANCE DOOR (SEDAN)
7 DA	ENTRANCE DOOR (SEDAN)
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
10	INTERIOR LTS-LUGGAGE CPT
10 A	INTERIOR LTS-LUGGAGE CPT
10 B	INTERIOR LTS-LUGGAGE CPT
10 D	INTERIOR LTS-LUGGAGE CPT
10 F	INTERIOR LTS-LUGGAGE CPT
10 H	INTERIOR LTS-LUGGAGE CPT
10 K	INTERIOR LTS-LUGGAGE CPT
10 R	INTERIOR LTS-LUGGAGE DOOR AJAR
11	FR DESTINATION SIGN
11 A	FR DESTINATION SIGN
11 B	FR DESTINATION SIGN
11 C	FR DESTINATION SIGN
11 D	FR DESTINATION SIGN
11 E	FR DESTINATION SIGN
11 K	FR DESTINATION SIGN
12	12V BAT ELECTRONIC JCT BLOCK
12	BAT CPT 12V BATTERY
12 A	FR JCT BOX 12V DISC SW
12 A	RR JCT BOX 12V DISC SW
12 B	12V BAT ELECTRICAL JCT BLOCK
12 B	RR JCT BOX 12V DISC SW
12 B	FR JCT BOX 12V DISC SW
12 BE	BAT. EQUALIZER MONITOR
12 C	FR JCT BOX 12V DISC SW
12 C	RR JCT BOX 12V HOT WIRE
12 CE	RR JCT BOX 12V HOT WIRE
12 D	BAT CPT 12V BATTERY
12 DT	TTLT MODULE
12 E	FR JCT BOX 12V DISC SW
12 E	RR JCT BOX 12V DISC SW
12 F	BAT CPT 12V FJB & IC
12 F	FR JCT BOX 12V DISC SW
12 F	RR JCT BOX 12V DISC SW
12 G	FR JCT BOX 12V DISC SW
12 H	12 V IGNITION D.T.RUN LIGHT
12 J	FR JCT BOX 12V DISC SW
12 I	12V IGNITION DISTRIBUTION
12 I	RR JCT BOX 12V IGNITION
12 K	12 VOLT IGN. TTLT & HVAC MODULE
12 IA	12V IGNITION DISTRIBUTION
12 IA	FR JCT BOX 12V IGNITION
12 IB	FR JCT BOX 12V IGNITION
12 IF	FR JCT BOX 12V IGNITION
12 LX	CLUSTER (12V HOT WIRE)
12 P	LH CONSOLE POWER OUTLET
12 R	BAT CPT 12V DISC RLY TO RJB
12 R	MEMORY BATTERY RADIO
12 S	SOUND SYSTEM 12V RADIO
12 S1	SOUND SYSTEM 12V RADIO
12 S2	SOUND SYSTEM 12V RADIO
12 SB	SOUND SYSTEM 12V FEEDING
12 SS	SOUND SYSTEM 12V FEEDING
12 VA	BATTERY TO EQUALIZER 12V
12 VD	12V HOT WIRE DISTRIBUTION
12 VF	BAT CPT 12V FJB & IC
12 VI	12V IGNITION DISTRIBUTION
12 VR	BAT CPT 12V DISC RLY TO RJB
12 W	12V BATTERY DDEC III
12 W	ENTRANCE DOOR (SEDAN)
12 WA	ENTRANCE DOOR (SEDAN)
12 X	FR JCT BOX 12V DISC SW
12 X2	FR JCT BOX 12V DISC SW
12 Y	FR JCT BOX 12V DISC SW
13 A	ALARM & SIGNAL-LO AIR PRIM.
13 B	ALARM & SIGNAL-LO AIR SEC.
14	LAVATORY-FLUSHING PUMP
14 A	LAVATORY-FLUSHING PUMP
15	EXTERIOR LTS-MULTI FUNC LEVEL
15 A	WIPER & WASHER UPPER WINDSHIELD
16	SPEED - SIGNAL +
16 A	SPEED - SIGNAL +
16 T	SPEED - SIGNAL +
17	EXTERIOR LTS-FLASHER UNIT
17 A	EXTERIOR LTS-FLASHER UNIT
19	DIFFERENTIAL OIL TEMP
20	SPEED - SIGNAL -
20 T	SPEED - SIGNAL -
20 W	SPEED - SIGNAL -
21	EXTERIOR LTS-DIRECTIONNAL LH
21 A	EXTERIOR LTS-DIRECTIONNAL LH
21 B	EXTERIOR LTS-HAZARD
21 C	EXTERIOR LTS-CORNERING LH
21 H	EXTERIOR LTS-DIRECTIONNAL LH
21 K	EXTERIOR LTS-CORNERING
21 N	EXTERIOR LTS-CORNERING LH
21 P	EXTERIOR LTS-CORNERING LH
23	EXTERIOR LTS-DIRECTIONNAL RH
23	EXTERIOR LTS-DIRECTIONNAL RH
23 A	EXTERIOR LTS-DIRECTIONNAL RH
23 B	EXTERIOR LTS-DIRECTIONNAL RH
23 C	EXTERIOR LTS-CORNERING RH
23 N	EXTERIOR LTS-CORNERING RH
23 P	EXTERIOR LTS-CORNERING RH
24	BAT CPT 24V BATTERY
24	FR JCT BOX 24V DISC SW
24 A	BOOSTER BLOCK 24V DISC SW
24 A	FR JCT BOX 24V DISC SW
24 A	RR JCT BOX 24V DISC SW
24 B	24V STARTER RLY FEEDING
24 B	FR JCT BOX 24V DISC SW
24 B	RR JCT BOX 24V DISC SW
24 BC	24 VOLT BATT. CHARGER
24 BE	RJB CPT-BAT EQ MONITOR HOT WIRE
24 C	FR JCT BOX 24V DISC SW
24 C	RR JCT BOX 24V DISC SW
24 D	BAT CPT 24V HOT WIRE
24 D	FR JCT BOX 24V HOT WIRE
24 D	RR JCT BOX 24V HOT WIRE
24 DA	A/C JCT BOX 24V HOT WIRE
24 E	BAT CPT 24V DISC SW
24 E	FR JCT BOX 24V DISC SW
24 E	RR JCT BOX 24V DISC SW
24 F	FR JCT BOX 24V DISC SW
24 F	RR JCT BOX 24V DISC SW
24 G	FR JCT BOX 24V DISC SW
24 G	RR JCT BOX 24V DISC SW
24 H	FR JCT BOX 24V DISC SW
24 H	RR JCT BOX 24V DISC SW
24 I	FR JCT BOX 24V IGNITION
24 I	RR JCT BOX 24V IGNITION
24 IA	FR JCT BOX 24V IGNITION
24 IA	RR JCT BOX 24V IGNITION
24 IB	FR JCT BOX 24V IGNITION
24 IB	RR JCT BOX 24V IGNITION
24 IC	FR JCT BOX 24V IGNITION
24 IF	FJB 24VOLT IGNITION
24 P	FR JCT BOX 24V DISC SW
24 S	24V DISC SW RLY SIGNAL
24 S1	SOUND SYSTEM 24V AMPLIFIER
24 S2	SOUND SYSTEM 24V AMPLIFIER
24 S3	SOUND SYSTEM 24V VIDEO
24 S4	SOUND SYSTEM 24V VIDEO
24 SB	SOUND SYSTEM 24V FEEDING
24 SS	SOUND SYSTEM 24V FEEDING
24 R	24 VOLTS FRONT CAMERA SW.
24 V2	RR JCT BOX 24V DISC SW
24 V3	RR JCT BOX 24V DISC SW
24 V4	RR JCT BOX 24V DISC SW
24 V5	RR JCT BOX 24V DISC SW
24 VD	24V HOT WIRE DISTRIBUTION
24 VF	BAT CPT 24V SW TO FJB & IC
24 VA	BATTERY TO EQUALIZER 24V
24 VI	RR JCT BOX 24V IGNITION
24 VR	BAT CPT 24V DISC SW TO RJB
24 W	RR JCT BOX 24V DISC SW (WCL)
24 WC	BATT.CPT TO HYD. PUMP (WCL)
24 WL	24V BATTERY-HYD. PUMP (WCL)
25 A1	PRE-EXITATION ALT. BOSCH #1
25 A2	PRE-EXITATION ALT. BOSCH #2
25 A	T.T. LT. ALTERNATOR #1
25 B	12 VOLTS IGN. ALT. SIGNAL MODULE
25 D	12 V. ENGINE RUN / HVAC SYSTEM
25 F	12 VOLT IGN. DISTRIBUTION
25 H	24 VOLT IGN. ALT. BOSCH
25 K	T.T. LT. ALTERNATOR #2
26 A	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26 B	DRIVER'S WINDOW LIFTER
26 C	DRIVER'S WINDOW LIFTER
27	LAVATORY-EMERGENCY SONALERT
28 A	A/C & HEAT SYSTEM-HI PRESSURE
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29 A	A/C & HEAT SYSTEM-DRIVER'S HTR
29 B	A/C & HEAT SYSTEM-DRIVER'S HTR
29 H	HVAC DASH MODULE
30 A	GALLEY
31 A	A/C & HEAT SYSTEM-UNLOADER
31 B	A/C & HEAT SYSTEM-UNLOADER
31 B	WIPER & WASHER SYSTEM
31 C	WIPER & WASHER SYSTEM
31 D	WIPER & WASHER SYSTEM
31 E	WIPER & WASHER SYSTEM
31 J	WIPER & WASHER SYSTEM
31 X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32 B	EXTERIOR LTS-BACK-UP
32 C	BACK-UP PWR & SIGNAL
32 D	BACK-UP ALARM
35	ENTRANCE DOOR (SEDAN)
35 B	ENTRANCE DOOR (SEDAN)
35 BB	ENTRANCE DOOR (SEDAN)

CIRCUIT NUMBER CODE

No.	DESCRIPTION
35 D	ENTRANCE DOOR (SEDAN)
36	JACOB BRAKE SYSREM
36 A	JACOB BRAKE SYSREM
38	INTERIOR LTS-24V FLUORESCENT
38 A	INTERIOR LTS-24V FLUORESCENT
38 C	INTERIOR LTS-24V FLUORESCENT
38 D	INTERIOR LTS-24V FLUORESCENT
39	INTERIOR LTS-24V LH CONSOLE SW
39 A	INTERIOR LTS-DRIVER"S LTS
39 P	READING LIGHTS
41	A/C & HEAT SYSTEM-COND FAN MOT
41 A	A/C & HEAT SYSTEM-COND FAN MOT
41 B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
42 A	A/C & HEAT SYSTEM-COND FAN MOT
43	HAT RACK FAN
43 A	HAT RACK FAN
43 B	HAT RACK FAN
43 D	HAT RACK FAN
43 E	HAT RACK FAN
43 F	HAT RACK FAN
43 G	HAT RACK FAN
44	EXTERIOR LTS-FOG
44 A	EXTERIOR LTS-FOG
44 B	EXTERIOR LTS-FOG
44 C	EXTERIOR LTS-FOG & HAZARD
45 B	A/C & HEAT SYSTEM-HEAT SIGN
45 D	A/C & HEAT SYSTEM-WATER VALVE
45 E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45 G	A/C & HEAT SYSTEM-DRIVER'S HTR
45 H	A/C & HEAT SYSTEM-DRIVER'S HTR
45 W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46 A	EXTERIOR LTS-MARKER
46 B	EXTERIOR LTS-MARKER
46 B	EXTERIOR LTS-MARKER
46 C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
48	ENTRANCE DOOR (SEDAN)
48 A	ENTRANCE DOOR (SEDAN)
49	ENTRANCE DOOR (SEDAN)
49 A	ENTRANCE DOOR (SEDAN)
50	AIR DRYER
52	ALARM & SIGNAL-ELEC. HORN
52 A	ALARM & SIGNAL-ELEC. HORN
52 B	ALARM & SIGNAL- AIR HORN
52 C	ALARM & SIGNAL- AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53 A	WIPER & WASHER SYSTEM
53 B	WIPER & WASHER SYSTEM
53 C	WIPER & WASHER SYSTEM
53 E	WIPER & WASHER SYSTEM
53 J	WIPER & WASHER SYSTEM
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57 A	A/C & HEAT SYSTEM-WATER PUMP
57 A	EXTERIOR LTS-HI BEAM
57 B	A/C & HEAT SYSTEM-WATER PUMP
57 C	PRE-HEAT WATER HEATER
57 CA	A/C & HEAT SYSTEM-HEAT SIGN
57 CC	A/C & HEAT SYSTEM-HEAT SIGN
58	EXTERIOR LTS-LO BEAM
58 A	EXTERIOR LTS-LO BEAM
58 B	EXTERIOR LTS-LO BEAM
58 E	EXTERIOR LTS-LO BEAM
59 A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61 A	EXTERIOR LTS-HEAD SIGNAL
62	LAVATORY-OCCUPIED LT
62 A	LAVATORY-FLUOR LT
62 B	LAVATORY-FLUOR LT
62 E	LAVATORY-OCCUP & FLUOR LT
63	EXTERIOR LTS-CLEARANCE
63 A	EXTERIOR LTS-CLEARANCE
63 B	EXTERIOR LTS-CLEARANCE
63 C	EXTERIOR LTS-MARKER SIGNAL
63 D	EXTERIOR LTS-MARKER & TAIL
63 E	EXTERIOR LTS-CLEARANCE
63 F	EXTERIOR LTS-MARKER BLINKER
63 H	EXTERIOR LTS-TAIL
64	DRIVERS FAN
64 B	DRIVERS FAN
64 C	DRIVERS FAN
65	FOOT DAMPER MOTOR
65 A	FOOT DAMPER MOTOR
65 P	PASSENGER REC. DAMPER
65 D	DRIVER REC. DAMPER
66	O_PASS. ON/OFF
67	24 VOLT RUN DISTRIBUTION
67 A	A/C & HEAT SYSTEM
67 B	A/C & HEAT SYSTEM
67 C	HEATING WINDSHIELD
67 K	A/C & HEAT SYSTEM-COND FAN CTR
67 L	A/C & HEAT SYSTEM-COND FAN CTR
67 V	A/C & HEAT SYSTEM-WATER VALVE
68	DASH & DEFROST DAMPER MOTOR
68 A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72 A	SUN VISOR-RH
72 B	SUN VISOR-RH
72 C	SUN VISOR-LH
72 D	SUN VISOR-LH
73	LAVATORY-FEEDING
74	INTERIOR LTS-READING RH
74 A	INTERIOR LTS-READING RH
74 D	INTERIOR LTS-READING SIGNAL
75	INTERIOR LTS-READING LH
75 A	INTERIOR LTS-READING LH
76	FUEL TANK GAUGE
76 B	LOW FUEL LT & ETHER COLD START
76 C	LOW FUEL LT
76 P	FUEL PRIME PUMP
76 M	FUEL PRIME PUMP
77	A/C & HEAT SYSTEM-HI PRESSURE
77 A	A/C & HEAT SYSTEM-DRIVER'S HTR
77 B	A/C & HEAT SYSTEM-COMPRESSOR
77 C	A/C & HEAT SYSTEM-COMPRESSOR
77 H	A/C & HEAT SYSTEM-COMPRESSOR
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82 A	EXTERIOR LTS-STOP SIGNAL
82 B	EXTERIOR LTS-STOP LTS
82 K	EXTERIOR LTS-STOP PARK BRK
82 L	EXTERIOR LTS-LH STOP
82 R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85 A	24V IGN DASH INSTRUMENTATION
85 B	ENGINE CTR-24V IGNITION
85 C	PARKING BRAKE SWITCH
85 F	ENGINE CTR-ENGINE CTR SW IGN
85 F	LO AIR SONALERT
85 W	24V IGN ANTI SKID
85 X	24V IGN ANTI SKID
85 Y	ANTI SKID-WARNING LT
86	ENGINE CTR-STARTER SOL SIGN
86 A	ENGINE CTR-STARTER SOL SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90 B	A/C & HEAT SYSTEM-COND FAN MOT
90 B	ENGINE CTR-MAST KEY SW FEED
90 C	A/C & HEAT SYSTEM-COND FAN MOT
90 F	CHARG SYST-VOLTAGE REGUL. "B"
90 H	A/C & HEAT SYSTEM-EVAP FAN MOT
90 J	A/C & HEAT SYSTEM-COND FAN MOT
91	PARKING BRAKE SW SIGNAL
91 A	DDEC-FAST IDLE SIGNAL
91 S	SONALERT PARKING BRAKE
91 W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95 A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
100	INTERIOR LTS-GENERAL
100 A	INTERIOR LTS-GENERAL
100 B	INTERIOR LTS-GENERAL
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	WORLD TRANSM-SOL. SUPPLY
102 A	24V STARTER TO BOSCH ALTERNATOR
103	LOW BUOY
104	WORLD TRANSM-SOL. FORWARD
105	WORLD TRANSM-RETARDER & SUMP
105 W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114 A	INTERIOR LTS-DASH LT
114 B	INTERIOR LTS-DASH LT REGUL.
114 D	INTERIOR LTS-DASH LT REGUL.
114 E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115 C	DDEC III-COOLANT LEVEL
115 W	WORLD TRANSM-DO NOT SHIFT SIGN
116	WORLD TRANSM-LO SIGNAL SOL. HI
116 B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117 A	ALARM & SIGNAL-TRANSM OIL TEMP
117 A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4

CIRCUIT NUMBER CODE

No.	DESCRIPTION
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125	GALLEY LAMP
125T	GALLEY LAMP
125W	WORLD TRANSM-RET. INDICATOR
126	KNEELING SYSTEM
126A	KNEELING SYSTEM
126B	KNEELING SYSTEM
126C	KNEELING SYSTEM
126D	KNEELING SYSTEM
126E	KNEELING SYSTEM
126F	KNEELING SYSTEM
126G	KNEELING SYSTEM
126H	KNEELING SYSTEM
126K	KNEELING SYSTEM
126P	KNEELING SYSTEM
126R	KNEELING SYSTEM
126W	5 MPH N.C. SIGNAL (WCL)
126S	KNEELING SYSTEM
126T	KNEELING SYSTEM
127	WORLD TRANSM-LUBE PRESS SW.
127	PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
127B	PRE-HEAT WATER HEATER
127	WORLD TRANSM-RETARDER FEED SOL.
127S	PRE-HEAT WATER HEATER
127W	PRE-HEAT WATER HEATER
128	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT WATER HEATER
128W	PRE-HEAT WATER HEATER
128	WORLD TRANSM-SOL. C2
129	PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	GALLEY-HEAT CONTAINERS
133A	GALLEY-HEAT CONTAINERS
133B	GALLEY-HEAT CONTAINERS
133C	GALLEY-HEAT CONTAINERS
133	WORLD TRANSM-RET. ACTUATOR HI
134	GALLEY-HEAT CONTAINERS
134A	GALLEY-HEAT CONTAINERS
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135A	A/C & HEAT SYSTEM-AIR SENSOR
135D	A/C & HEAT SYSTEM-AIR SENSOR
135C	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	GALLEY-ACCESSORIES
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146A	TRANSMISSION-12V IGNITION
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	WORLD TRANSM-OIL TEMP
147A	ETHER COLD START & D.R.L.
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
151A	ABS SYSTEM
152	ABS SYSTEM
152A	ABS SYSTEM
153	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	ABS SYSTEM
155	WORLD TRANSM-SPARE INPUT (-)
156	ABS SYSTEM
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157A	ABS SYSTEM
157B	ABS SYSTEM
157D	A.T.C. SYSTEM
157E	A.T.C. SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
165A	A/C & HEAT SYSTEM-TRANSMITER
165B	A/C & HEAT SYSTEM-TRANSMITER
165C	A/C & HEAT SYSTEM-TRANSMITER
165D	A/C & HEAT SYSTEM-TRANSMITER
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	A/C & HEAT SYSTEM-TEMP. CTR
167A	A/C & HEAT SYSTEM-TEMP. CTR
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170	LUGGAGE DOOR LOCK
170C	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
225	LAVATORY FAN
225A	LAVATORY FAN
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251A	DDEC III - DATA LOGGER 12 H.W.
251	DDEC III - PRODRIVER 12V H.W.
253	GALLEY-MICROWAVE
254	GALLEY-12V FRIGO NORCOLD
254A	GALLEY-FRIGO
255	GALLEY-COFEEMAKER
255A	GALLEY-COFEEMAKER
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
260	WINDOW AJAR
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
292	FAN CLUTCH RADIATOR SPD 2
300	DOOR AJAR MAGN.SW. (WCL)
300A	POWER SYSTEM SW. (WCL)
300B	DOOR AJAR ALARM (WCL)
301	POWER SYSTEM SW. (WCL)
302	DOOR AJAR T.T.LT. (WCL)

CIRCUIT NUMBER CODE

No.	DESCRIPTION
302A	DOOR AJAR ALARM SIGN.(WCL)
302B	DOOR AJAR MAGN.SW. (WCL)
303	REMOTE WALL SW. DWN (WCL)
304	REMOTE WALL SW. UP (WCL)
305	PARK. BRAKE SOL. VALVE (WCL)
305A	PARK. BRAKE SAFETY SW. (WCL)
306	CONTROL SYSTEM (WCL RICON)
307	CONTROL SYSTEM (WCL RICON)
308	CONTROL SYSTEM (WCL RICON)
309	CONTROL SYSTEM (WCL RICON)
310	EATON TRANSMISSION
311	EATON TRANSMISSION
312	EATON TRANSMISSION
313	EATON TRANSMISSION
314	EATON TRANSMISSION
315	EATON TRANSMISSIOM
316	EATON TRANSMISSION - EPL
317	EATON TRANSMISSION
318	EATON TRANSMISSION
319	EATON TRANSMISSION
320	EATON TRANSMISSION
321	EATON TRANSMISSION
322	EATON TRANSMISSIION
323	EATON TRANSMISSION
324	EATON TRANSMISSION
325	EATON TRANSMISSION
326	EATON TRANSMISSION
327	EATON TRANSMISSION
328	EATON TRANSMISSION
329	EATON TRANSMISSION
330	EATON TRANSMISSION - EPL
331	EATON TRANSMISSION - EPL
332	EATON TRANSMISSION
333	EATON TRANSMISSION - 12V BATTERY
334	EATON GENERATION 2
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE
540	DDEC III-CRUISE ENABLE LTS.
541	DDEC III-CRUISE SET SW
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
583	DDEC III-ENGINE BRAKE 4 CYL.
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
925	J1939-HIGH
926	J1939-LOW
927	J1939-SHIELD
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
979	DDEC III-ENGINE BRAKE 2 CYL.

No.	DESCRIPTION

No.	DESCRIPTION

CIRCUIT NUMBER CODE

No.	DESCRIPTION
B A	INTERIOR LTS-110V FLUORESCENT
B B	INTERIOR LTS-110V FLUORESCENT
D 1	SOUND SYSTEM-FR RH SPEAKER
D 2	SOUND SYSTEM-FR RH SPEAKER
D 3	SOUND SYSTEM-FR RH SPEAKER
D 4	SOUND SYSTEM-RR RH SPEAKER
D 5	SOUND SYSTEM-RR RH SPEAKER
D 6	SOUND SYSTEM-RR RH SPEAKER
D 7	SOUND SYSTEM-RR RH SPEAKER
D 8	SOUND SYSTEM-RR RH SPEAKER
D 3 4	SOUND SYSTEM-RR RH SPEAKER
D 6 7	SOUND SYSTEM-RR RH SPEAKER
G 1	SOUND SYSTEM-FR LH SPEAKER
G 2	SOUND SYSTEM-FR LH SPEAKER
G 3	SOUND SYSTEM-FR LH SPEAKER
G 4	SOUND SYSTEM-RR LH SPEAKER
G 5	SOUND SYSTEM-RR LH SPEAKER
G 6	SOUND SYSTEM-RR LH SPEAKER
G 7	SOUND SYSTEM-RR LH SPEAKER
G 8	SOUND SYSTEM-RR LH SPEAKER
G 3 4	SOUND SYSTEM-RR LH SPEAKER
G 6 7	SOUND SYSTEM-RR LH SPEAKER
L 1 A	INTERIOR LTS-110V FLUORESCENT
L 1 B	INTERIOR LTS-110V FLUORESCENT
L 2 A	INTERIOR LTS-110V FLUORESCENT
L 2 B	INTERIOR LTS-110V FLUORESCENT
L 8	ENG. BLK & WATER TANK-HEATER
L 9	ENG. BLK & WATER TANK-HEATER
L 0	110V RECEPTACLE- 110V FLUOR.
L 1	110V RECEPTACLE- 110V FLUOR.
L 2	110V RECEPTACLE- 110V FLUOR.
R A	INTERIOR LTS-110V FLUORESCENT
R B	INTERIOR LTS-110V FLUORESCENT
S H 1	SHIELD CHASSIS GRD
S H 2	SHIELD CHASSIS GRD
S H 3	SHIELD CHASSIS GRD
S H 4	SHIELD CHASSIS GRD
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 1 0	SPARE-RJB TO LUGG CPT #1
S P 1 1	SPARE-FJB TO RJB
S P 1 2	SPARE-RJB TO ENGINE
S P 1 3	SPARE-RJB TO ENGINE
S P 1 4	SPARE-FJB TO RJB
S P 1 5	SPARE-RJB TO ENGINE
S P 1 6	SPARE-RJB TO ENGINE
S P 1 7	SPARE-RJB TO ENGINE
S P 1 8	SPARE-FJB TO RJB
S P 2 4	SPARE-RJB TO LAVATORY ROOF
S P 2 5	SPARE-RJB TO LAVATORY ROOF
S P 2 6	SPARE-RJB TO LAVATORY ROOF
S P 2 7	SPARE-RJB TO LH HAT RACK
S P 2 8	SPARE-RJB TO LH HAT RACK
S P 3 1	SPARE-RJB TO RH HAT RACK
S P 3 2	SPARE-RJB TO RH HAT RACK
S P 3 3	SPARE-FJB TO RJB
S P 3 8	SPARE-FJB TO RJB
S P 4 3	SPARE-FJB TO RJB
S P 4 5	SPARE-FJB TO RJB
S P 4 6	SPARE-RJB TO LH FR ROOF
S P 4 8	SPARE-RJB TO DASH CENTER PANEL
S P 5 6	SPARE-ENGINE TO RH SW PANEL
S P 5 7	SPARE-DASH CENTER PANEL TO ENG.
S P 5 8	SPARE-DASH CENTER PANEL TO ENG.
S P 5 9	SPARE-FJB TO ENGINE
S P 6 1	SPARE-FJB TO DASH RH PANEL
S P 6 8	SPARE-FJB TO ENGINE
S P 6 9	SPARE-FJB TO FR AXLE
S P 7 0	SPARE-FJB TO FR AXLE
S P 7 1	SPARE-FJB TO RH SW PANEL
S P 7 2	SPARE-FJB TO FR SERV CPT
S P 7 4	SPARE-FJB TO LH CONSOLE
S P 7 7	SPARE-FJB TO EVAPORATOR CPT
S P 7 8	SPARE-FJB TO CONDENSER CPT
S P 7 9	SPARE-FJB TO CONDENSER CPT
S P 8 7	SPARE-RJB TO LH HAT RACK
S P 8 8	SPARE-RJB TO RH HAT RACK
S P 9 2	SPARE-RJB TO CONDENSER CPT
S P 9 3	SPARE-RJB TO EVAPORATOR CPT
S P 9 4	SPARE-RJB TO RR ROOF
S P 9 5	SPARE-RJB TO RR ROOF
S P 9 6	SPARE-RJB TO LUGG CPT #2
S P 9 7	SPARE-RJB TO LUGG CPT #3
S P 9 8	SPARE-RJB TO LUGG CPT #3
S P 1 0 4	SPARE-RJB TO ENGINE CPT
S P 1 0 5	SPARE-FJB TO ENGINE
S P 1 0 6	SPARE-RJB TO BATT. CPT.
S P 1 0 7	SPARE-RJB TO BATT. CPT.
S P 1 0 8	SPARE-RJB TO BATT. CPT.
S P 1 0 9	SPARE-RJB TO ENGINE CPT.
S P 1 1 0	SPARE-RJB TO ENGINE CPT.
S P 1 1 1	SPARE-RJB TO ENGINE CPT.
S P 1 1 2	SPARE-RJB TO ENGINE CPT.
S P 1 1 4	SPARE-FJB TO U/DASH WIPER
S P 1 1 5	SPARE-FJB TO U/DASH WIPER
S P 1 1 6	SPARE-FJB TO U/DASH FLOOR
S P 1 1 7	SPARE-FJB TO U/DASH FLOOR
W C	A/C & HEAT SYST-EVAP CTR SIGN
Y C	INTERIOR LTS-110V FLUORESCENT
Y D	INTERIOR LTS-110V FLUORESCENT
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0	GALLEY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A A	RS - VOLTAGE REGULATOR GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 E	RS - HAT RACK ACCES. LH GRD
0 E A	EATON TRANSMISSION GRD
0 F	RS - HAT RACK ACCES. RH GRD
0 G	RS - HAT RACK ACCES. RH GRD
0 H	RS - LAVATORY ACCES. GRD
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR (SEDAN) GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	FS - SOUND SYS. JCT PANEL GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R E	RADIO &CTRL HEAD CHASSIS GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN - GND RELAY
0 S A	EC-BOSCH ALT. GROUND
0 S 2	SOUND SYSTEM RADIO GRD
0 S 3	SOUND SYSTEM VIDEO GRD
0 S S	SOUNS SYSTEM BATT. GRD
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS FR JCT BOX CPT GRD STUD
0 Z	RR JCT BOX CPT GRD STUD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 A	A/C & HEAT SYSTEM-COOL 1 SIGN
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 B B	A/C & HEAT SYSTEM-COOL SIGN
2 H	A/C & HEAT SYSTEM-HI PRESS SW
2 E	A/C & HEAT SYSTEM EVAP CONT
2 F	A/C & HEAT SYSTEM EVAP CONT
2 H L	A/C & HEAT SYSTEM-LO & HI PRESS SW
2 L	A/C & HEAT SYSTEM-LO PRESS SW
4	HOSTESS & PASSENGER CHIME

CIRCUIT NUMBER CODE

No.	DESCRIPTION
4 A	HOSTESS & PASSENGER CHIME
4 B	PASSENGER CHIME
4 C	HOSTESS CHIME
5	INTERIOR LTS-AISLE & EMERG. EXIT
5	UPPER WINDSHIELD DEFROSTER
5 D	UPPER WINDSHIELD DEFROSTER
5 E	UPPER WINDSHIELD DEFROSTER
5 N	INTERIOR LTS-EMERGENCY EXIT
5 NC	SPEED SIGNAL LOWER 5MPH
5 NO	SPEED SIGNAL HIGHER 5MPH
6	INTERIOR LTS-AISLE
7 B	ENTRANCE DOOR (SEDAN)
7 D	ENTRANCE DOOR (SEDAN)
7 DA	ENTRANCE DOOR (SEDAN)
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
10	INTERIOR LTS-LUGGAGE CPT
10 A	INTERIOR LTS-LUGGAGE CPT
10 B	INTERIOR LTS-LUGGAGE CPT
10 D	INTERIOR LTS-LUGGAGE CPT
10 F	INTERIOR LTS-LUGGAGE CPT
10 H	INTERIOR LTS-LUGGAGE CPT
10 K	INTERIOR LTS-LUGGAGE CPT
10 R	INTERIOR LTS-LUGGAGE DOOR AJAR
11	FR DESTINATION SIGN
11 A	FR DESTINATION SIGN
11 B	FR DESTINATION SIGN
11 C	FR DESTINATION SIGN
11 D	FR DESTINATION SIGN
11 E	FR DESTINATION SIGN
11 K	FR DESTINATION SIGN
12	12V BAT ELECTRONIC JCT BLOCK
12	BAT CPT 12V BATTERY
12 A	FR JCT BOX 12V DISC SW
12 A	RR JCT BOX 12V DISC SW
12 B	12V BAT ELECTRICAL JCT BLOCK
12 B	RR JCT BOX 12V DISC SW
12 B	FR JCT BOX 12V DISC SW
12 BE	BAT. EQUALIZER MONITOR
12 C	FR JCT BOX 12V DISC SW
12 C	RR JCT BOX 12V HOT WIRE
12 CE	RR JCT BOX 12V HOT WIRE
12 D	BAT CPT 12V BATTERY
12 DT	TTLT MODULE
12 E	FR JCT BOX 12V DISC SW
12 E	RR JCT BOX 12V DISC SW
12 F	BAT CPT 12V FJB & IC
12 F	FR JCT BOX 12V DISC SW
12 F	RR JCT BOX 12V DISC SW
12 G	FR JCT BOX 12V DISC SW
12 H	12 V IGNITION D.T.RUN LIGHT
12 J	FR JCT BOX 12V DISC SW
12 I	12V IGNITION DISTRIBUTION
12 I	RR JCT BOX 12V IGNITION
12 K	12 VOLT IGN. TTLT & HVAC MODULE
12 IA	12V IGNITION DISTRIBUTION
12 IA	FR JCT BOX 12V IGNITION
12 IB	FR JCT BOX 12V IGNITION
12 IF	FR JCT BOX 12V IGNITION
12 LX	CLUSTER (12V HOT WIRE)
12 P	LH CONSOLE POWER OUTLET
12 R	BAT CPT 12V DISC RLY TO RJB
12 R	MEMORY BATTERY RADIO
12 S	SOUND SYSTEM 12V RADIO
12 S1	SOUND SYSTEM 12V RADIO
12 S1A	DVD KARAOKE FEEDING
12 S2	SOUND SYSTEM 12V RADIO
12 S2A	DVD KARAOKE FEEDING
12 SB	SOUND SYSTEM 12V FEEDING
12 SS	SOUND SYSTEM 12V FEEDING
12 VA	BATTERY TO EQUALIZER 12V
12 VD	12V HOT WIRE DISTRIBUTION
12 VF	BAT CPT 12V FJB & IC
12 VI	12V IGNITION DISTRIBUTION
12 VR	BAT CPT 12V DISC RLY TO RJB
12 W	12V BATTERY DDEC III
12 W	ENTRANCE DOOR (SEDAN)
12 WA	ENTRANCE DOOR (SEDAN)
12 X	FR JCT BOX 12V DISC SW
12 X2	FR JCT BOX 12V DISC SW
12 Y	FR JCT BOX 12V DISC SW
13 A	ALARM & SIGNAL-LO AIR PRIM.
13 B	ALARM & SIGNAL-LO AIR SEC.
14	LAVATORY-FLUSHING PUMP
14 A	LAVATORY-FLUSHING PUMP
15	EXTERIOR LTS-MULTI FUNC LEVEL
15 A	WIPER & WASHER UPPER WINDSHIELD
16	SPEED - SIGNAL +
16 A	SPEED - SIGNAL +
16 T	SPEED - SIGNAL +
17	EXTERIOR LTS-FLASHER UNIT
17 A	EXTERIOR LTS-FLASHER UNIT
19	DIFFERENTIAL OIL TEMP
20	SPEED - SIGNAL -
20 T	SPEED - SIGNAL -
20 W	SPEED - SIGNAL -
21	EXTERIOR LTS-DIRECTIONNAL LH
21 A	EXTERIOR LTS-DIRECTIONNAL LH
21 B	EXTERIOR LTS-HAZARD
21 C	EXTERIOR LTS-CORNERING LH
21 H	EXTERIOR LTS-DIRECTIONNAL LH
21 K	EXTERIOR LTS-CORNERING
21 N	EXTERIOR LTS-CORNERING LH
21 P	EXTERIOR LTS-CORNERING LH
23	EXTERIOR LTS-DIRECTIONNAL RH
23	EXTERIOR LTS-DIRECTIONNAL RH
23 A	EXTERIOR LTS-DIRECTIONNAL RH
23 B	EXTERIOR LTS-DIRECTIONNAL RH
23 C	EXTERIOR LTS-CORNERING RH
23 N	EXTERIOR LTS-CORNERING RH
23 P	EXTERIOR LTS-CORNERING RH
24	BAT CPT 24V BATTERY
24	FR JCT BOX 24V DISC SW
24 A	BOOSTER BLOCK 24V DISC SW
24 A	FR JCT BOX 24V DISC SW
24 A	RR JCT BOX 24V DISC SW
24 B	24V STARTER RLY FEEDING
24 B	FR JCT BOX 24V DISC SW
24 B	RR JCT BOX 24V DISC SW
24 BC	24 VOLT BATT. CHARGER
24 BE	RJB CPT-BAT EQ MONITOR HOT WIRE
24 C	FR JCT BOX 24V DISC SW
24 C	RR JCT BOX 24V DISC SW
24 D	BAT CPT 24V HOT WIRE
24 D	FR JCT BOX 24V HOT WIRE
24 D	RR JCT BOX 24V HOT WIRE
24 DA	A/C JCT BOX 24V HOT WIRE
24 E	BAT CPT 24V DISC SW
24 E	FR JCT BOX 24V DISC SW
24 E	RR JCT BOX 24V DISC SW
24 F	FR JCT BOX 24V DISC SW
24 F	RR JCT BOX 24V DISC SW
24 G	FR JCT BOX 24V DISC SW
24 G	RR JCT BOX 24V DISC SW
24 H	FR JCT BOX 24V DISC SW
24 H	RR JCT BOX 24V DISC SW
24 I	FR JCT BOX 24V IGNITION
24 I	RR JCT BOX 24V IGNITION
24 IA	FR JCT BOX 24V IGNITION
24 IA	RR JCT BOX 24V IGNITION
24 IB	FR JCT BOX 24V IGNITION
24 IB	RR JCT BOX 24V IGNITION
24 IC	FR JCT BOX 24V IGNITION
24 IF	FJB 24VOLT IGNITION
24 P	FR JCT BOX 24V DISC SW
24 S	24V DISC SW RLY SIGNAL
24 S1	SOUND SYSTEM 24V AMPLIFIER
24 S2	SOUND SYSTEM 24V AMPLIFIER
24 S3	SOUND SYSTEM 24V VIDEO
24 S4	SOUND SYSTEM 24V VIDEO
24 SB	SOUND SYSTEM 24V FEEDING
24 SS	SOUND SYSTEM 24V FEEDING
24 R	24 VOLTS FRONT CAMERA SW.
24 V2	RR JCT BOX 24V DISC SW
24 V3	RR JCT BOX 24V DISC SW
24 V4	RR JCT BOX 24V DISC SW
24 V5	RR JCT BOX 24V DISC SW
24 VD	24V HOT WIRE DISTRIBUTION
24 VF	BAT CPT 24V SW TO FJB & IC
24 VA	BATTERY TO EQUALIZER 24V
24 VI	RR JCT BOX 24V IGNITION
24 VR	BAT CPT 24V DISC SW TO RJB
24 W	RR JCT BOX 24V DISC SW (WCL)
24 WC	BATT.CPT TO HYD. PUMP (WCL)
24 WL	24V BATTERY-HYD. PUMP (WCL)
25 A1	PRE-EXITATION ALT. BOSCH #1
25 A2	PRE-EXITATION ALT. BOSCH #2
25 A	T.T. LT. ALTERNATOR #1
25 B	12 VOLTS IGN. ALT. SIGNAL MODULE
25 D	12 V. ENGINE RUN / HVAC SYSTEM
25 F	12 VOLT IGN. DISTRIBUTION
25 H	24 VOLT IGN. ALT. BOSCH
25 K	T.T. LT. ALTERNATOR #2
26 A	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26 B	DRIVER'S WINDOW LIFTER
26 C	DRIVER'S WINDOW LIFTER
27	LAVATORY-EMERGENCY SONALERT
28 A	A/C & HEAT SYSTEM-HI PRESSURE
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29 A	A/C & HEAT SYSTEM-DRIVER'S HTR
29 B	A/C & HEAT SYSTEM-DRIVER'S HTR
29 H	HVAC DASH MODULE
30 A	GALLEY
31 A	A/C & HEAT SYSTEM-UNLOADER
31 B	A/C & HEAT SYSTEM-UNLOADER
31 B	WIPER & WASHER SYSTEM
31 C	WIPER & WASHER SYSTEM
31 D	WIPER & WASHER SYSTEM
31 E	WIPER & WASHER SYSTEM
31 J	WIPER & WASHER SYSTEM
31 X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32 B	EXTERIOR LTS-BACK-UP
32 C	BACK-UP PWR & SIGNAL
32 D	BACK-UP ALARM
35	ENTRANCE DOOR (SEDAN)

CIRCUIT NUMBER CODE

No.	DESCRIPTION
35B	ENTRANCE DOOR (SEDAN)
35BB	ENTRANCE DOOR (SEDAN)
35D	ENTRANCE DOOR (SEDAN)
36	JACOB BRAKE SYSREM
36A	JACOB BRAKE SYSREM
38	INTERIOR LTS-24V FLUORESCENT
38A	INTERIOR LTS-24V FLUORESCENT
38C	INTERIOR LTS-24V FLUORESCENT
38D	INTERIOR LTS-24V FLUORESCENT
39	INTERIOR LTS-24V LH CONSOLE SW
39A	INTERIOR LTS-DRIVER"S LTS
39P	READING LIGHTS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
43	HAT RACK FAN
43A	HAT RACK FAN
43B	HAT RACK FAN
43D	HAT RACK FAN
43E	HAT RACK FAN
43F	HAT RACK FAN
43G	HAT RACK FAN
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45B	A/C & HEAT SYSTEM-HEAT SIGN
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
48	ENTRANCE DOOR (SEDAN)
48A	ENTRANCE DOOR (SEDAN)
49	ENTRANCE DOOR (SEDAN)
49A	ENTRANCE DOOR (SEDAN)
50	AIR DRYER
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL- AIR HORN
52C	ALARM & SIGNAL- AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
57CA	A/C & HEAT SYSTEM-HEAT SIGN
57CC	A/C & HEAT SYSTEM-HEAT SIGN
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
62	LAVATORY-OCCUPIED LT
62A	LAVATORY-FLUOR LT
62B	LAVATORY-FLUOR LT
62E	LAVATORY-OCCUP & FLUOR LT
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVERS FAN
64B	DRIVERS FAN
64C	DRIVERS FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65P	PASSENGER REC. DAMPER
65D	DRIVER REC. DAMPER
66	O_PASS. ON/OFF
67	24 VOLT RUN DISTRIBUTION
67A	A/C & HEAT SYSTEM
67B	A/C & HEAT SYSTEM
67C	HEATING WINDSHIELD
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67V	A/C & HEAT SYSTEM-WATER VALVE
68	DASH & DEFROST DAMPER MOTOR
68A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH
72C	SUN VISOR-LH
72D	SUN VISOR-LH
73	LAVATORY-FEEDING
74	INTERIOR LTS-READING RH
74A	INTERIOR LTS-READING RH
74D	INTERIOR LTS-READING SIGNAL
75	INTERIOR LTS-READING LH
75A	INTERIOR LTS-READING LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77	A/C & HEAT SYSTEM-HI PRESSURE
77A	A/C & HEAT SYSTEM-DRIVER'S HTR
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85W	24V IGN ANTI SKID
85X	24V IGN ANTI SKID
85Y	ANTI SKID-WARNING LT
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
90J	A/C & HEAT SYSTEM-COND FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
100	INTERIOR LTS-GENERAL
100A	INTERIOR LTS-GENERAL
100B	INTERIOR LTS-GENERAL
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	WORLD TRANSM-SOL. SUPPLY
102A	24V STARTER TO BOSCH ALTERNATOR
103	LOW BUOY
104	WORLD TRANSM-SOL. FORWARD
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR

CIRCUIT NUMBER CODE

No.	DESCRIPTION
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125	GALLEY LAMP
125T	GALLEY LAMP
125W	WORLD TRANSM-RET. INDICATOR
126	KNEELING SYSTEM
126A	KNEELING SYSTEM
126B	KNEELING SYSTEM
126C	KNEELING SYSTEM
126D	KNEELING SYSTEM
126E	KNEELING SYSTEM
126F	KNEELING SYSTEM
126G	KNEELING SYSTEM
126H	KNEELING SYSTEM
126K	KNEELING SYSTEM
126P	KNEELING SYSTEM
126R	KNEELING SYSTEM
126W	5 MPH N.C. SIGNAL (WCL)
126S	KNEELING SYSTEM
126T	KNEELING SYSTEM
127	WORLD TRANSM-LUBE PRESS SW.
127	PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
127B	PRE-HEAT WATER HEATER
127	WORLD TRANSM-RETARDER FEED SOL.
127S	PRE-HEAT WATER HEATER
127W	PRE-HEAT WATER HEATER
128	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT WATER HEATER
128W	PRE-HEAT WATER HEATER
128	WORLD TRANSM-SOL. C2
129	PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	GALLEY-HEAT CONTAINERS
133A	GALLEY-HEAT CONTAINERS
133B	GALLEY-HEAT CONTAINERS
133C	GALLEY-HEAT CONTAINERS
133	WORLD TRANSM-RET. ACTUATOR HI
134	GALLEY-HEAT CONTAINERS
134A	GALLEY-HEAT CONTAINERS
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135A	A/C & HEAT SYSTEM-AIR SENSOR
135D	A/C & HEAT SYSTEM-AIR SENSOR
135C	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	GALLEY-ACCESSORIES
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146A	TRANSMISSION-12V IGNITION
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	WORLD TRANSM-OIL TEMP
147A	ETHER COLD START & D.R.L.
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
151A	ABS SYSTEM
152	ABS SYSTEM
152A	ABS SYSTEM
153	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	ABS SYSTEM
155	WORLD TRANSM-SPARE INPUT (-)
156	ABS SYSTEM
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157A	ABS SYSTEM
157B	ABS SYSTEM
157D	A.T.C. SYSTEM
157E	A.T.C. SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
165A	A/C & HEAT SYSTEM-TRANSMITER
165B	A/C & HEAT SYSTEM-TRANSMITER
165C	A/C & HEAT SYSTEM-TRANSMITER
165D	A/C & HEAT SYSTEM-TRANSMITER
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	A/C & HEAT SYSTEM-TEMP. CTR
167A	A/C & HEAT SYSTEM-TEMP. CTR
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170	LUGGAGE DOOR LOCK
170C	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
225	LAVATORY FAN
225A	LAVATORY FAN
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251A	DDEC III - DATA LOGGER 12 H.W.
251	DDEC III - PRODRIVER 12V H.W.
253	GALLEY-MICROWAVE
254	GALLEY-12V FRIGO NORCOLD
254A	GALLEY-FRIGO
255	GALLEY-COFEEMAKER
255A	GALLEY-COFEEMAKER
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
260	WINDOW AJAR
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
292	FAN CLUTCH RADIATOR SPD 2
300	DOOR AJAR MAGN.SW. (WCL)
300A	POWER SYSTEM SW. (WCL)
300B	DOOR AJAR ALARM (WCL)

CIRCUIT NUMBER CODE

No.	DESCRIPTION
301	POWER SYSTEM SW. (WCL)
302	DOOR AJAR T.T.LT. (WCL)
302A	DOOR AJAR ALARM SIGN.(WCL)
302B	DOOR AJAR MAGN.SW. (WCL)
303	REMOTE WALL SW. DWN (WCL)
304	REMOTE WALL SW. UP (WCL)
305	PARK. BRAKE SOL. VALVE (WCL)
305A	PARK. BRAKE SAFETY SW. (WCL)
306	CONTROL SYSTEM (WCL RICON)
307	CONTROL SYSTEM (WCL RICON)
308	CONTROL SYSTEM (WCL RICON)
309	CONTROL SYSTEM (WCL RICON)
310	EATON TRANSMISSION
311	EATON TRANSMISSION
312	EATON TRANSMISSION
313	EATON TRANSMISSION
314	EATON TRANSMISSION
315	EATON TRANSMISSIOM
316	EATON TRANSMISSION - EPL
317	EATON TRANSMISSION
318	EATON TRANSMISSION
319	EATON TRANSMISSION
320	EATON TRANSMISSION
321	EATON TRANSMISSION
322	EATON TRANSMISSIION
323	EATON TRANSMISSION
324	EATON TRANSMISSION
325	EATON TRANSMISSION
326	EATON TRANSMISSION
327	EATON TRANSMISSION
328	EATON TRANSMISSION
329	EATON TRANSMISSION
330	EATON TRANSMISSION - EPL
331	EATON TRANSMISSION - EPL
332	EATON TRANSMISSION
333	EATON TRANSMISSION - 12V BATTERY
334	EATON GENERATION 2
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE

No.	DESCRIPTION
540	DDEC III-CRUISE ENABLE LTS.
541	DDEC III-CRUISE SET SW
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
583	DDEC III-ENGINE BRAKE 4 CYL.
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
925	J1939-HIGH
926	J1939-LOW
927	J1939-SHIELD
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
979	DDEC III-ENGINE BRAKE 2 CYL.

No.	DESCRIPTION

No.	DESCRIPTION

CIRCUIT NUMBER CODE

No.	DESCRIPTION
B A	INTERIOR LTS-110V FLUORESCENT
B B	INTERIOR LTS-110V FLUORESCENT
D 1	SOUND SYSTEM-FR RH SPEAKER
D 2	SOUND SYSTEM-FR RH SPEAKER
D 3	SOUND SYSTEM-FR RH SPEAKER
D 4	SOUND SYSTEM-RR RH SPEAKER
D 5	SOUND SYSTEM-RR RH SPEAKER
D 6	SOUND SYSTEM-RR RH SPEAKER
D 7	SOUND SYSTEM-RR RH SPEAKER
D 8	SOUND SYSTEM-RR RH SPEAKER
D 3 4	SOUND SYSTEM-RR RH SPEAKER
D 6 7	SOUND SYSTEM-RR RH SPEAKER
G 1	SOUND SYSTEM-FR LH SPEAKER
G 2	SOUND SYSTEM-FR LH SPEAKER
G 3	SOUND SYSTEM-FR LH SPEAKER
G 4	SOUND SYSTEM-RR LH SPEAKER
G 5	SOUND SYSTEM-RR LH SPEAKER
G 6	SOUND SYSTEM-RR LH SPEAKER
G 7	SOUND SYSTEM-RR LH SPEAKER
G 8	SOUND SYSTEM-RR LH SPEAKER
G 3 4	SOUND SYSTEM-RR LH SPEAKER
G 6 7	SOUND SYSTEM-RR LH SPEAKER
L 1 A	INTERIOR LTS-110V FLUORESCENT
L 1 B	INTERIOR LTS-110V FLUORESCENT
L 2 A	INTERIOR LTS-110V FLUORESCENT
L 2 B	INTERIOR LTS-110V FLUORESCENT
L 8	ENG. BLK & WATER TANK-HEATER
L 9	ENG. BLK & WATER TANK-HEATER
L 0	110V RECEPTACLE- 110V FLUOR.
L 1	110V RECEPTACLE- 110V FLUOR.
L 2	110V RECEPTACLE- 110V FLUOR.
R A	INTERIOR LTS-110V FLUORESCENT
R B	INTERIOR LTS-110V FLUORESCENT
S H 1	SHIELD CHASSIS GRD
S H 2	SHIELD CHASSIS GRD
S H 3	SHIELD CHASSIS GRD
S H 4	SHIELD CHASSIS GRD
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 10	SPARE-RJB TO LUGG CPT #1
S P 11	SPARE-FJB TO RJB
S P 12	SPARE-RJB TO ENGINE
S P 13	SPARE-RJB TO ENGINE
S P 14	SPARE-FJB TO RJB
S P 15	SPARE-RJB TO ENGINE
S P 16	SPARE-RJB TO ENGINE
S P 17	SPARE-RJB TO ENGINE
S P 18	SPARE-FJB TO RJB
S P 24	SPARE-RJB TO LAVATORY ROOF
S P 25	SPARE-RJB TO LAVATORY ROOF
S P 26	SPARE-RJB TO LAVATORY ROOF
S P 27	SPARE-RJB TO LH HAT RACK
S P 28	SPARE-RJB TO LH HAT RACK
S P 31	SPARE-RJB TO RH HAT RACK
S P 32	SPARE-RJB TO RH HAT RACK
S P 33	SPARE-FJB TO RJB
S P 38	SPARE-FJB TO RJB
S P 43	SPARE-FJB TO RJB
S P 45	SPARE-FJB TO RJB
S P 46	SPARE-RJB TO LH FR ROOF
S P 48	SPARE-RJB TO DASH CENTER PANEL
S P 56	SPARE-ENGINE TO RH SW PANEL
S P 57	SPARE-DASH CENTER PANEL TO ENG.
S P 58	SPARE-DASH CENTER PANEL TO ENG.
S P 59	SPARE-FJB TO ENGINE
S P 61	SPARE-FJB TO DASH RH PANEL
S P 68	SPARE-FJB TO ENGINE
S P 69	SPARE-FJB TO FR AXLE
S P 70	SPARE-FJB TO FR AXLE
S P 71	SPARE-FJB TO RH SW PANEL
S P 72	SPARE-FJB TO FR SERV CPT
S P 74	SPARE-FJB TO LH CONSOLE
S P 77	SPARE-FJB TO EVAPORATOR CPT
S P 78	SPARE-FJB TO CONDENSER CPT
S P 79	SPARE-FJB TO CONDENSER CPT
S P 87	SPARE-RJB TO LH HAT RACK
S P 88	SPARE-RJB TO RH HAT RACK
S P 92	SPARE-RJB TO CONDENSER CPT
S P 93	SPARE-RJB TO EVAPORATOR CPT
S P 94	SPARE-RJB TO RR ROOF
S P 95	SPARE-RJB TO RR ROOF
S P 96	SPARE-RJB TO LUGG CPT #2
S P 97	SPARE-RJB TO LUGG CPT #3
S P 98	SPARE-RJB TO LUGG CPT #3
S P 104	SPARE-RJB TO ENGINE CPT
S P 105	SPARE-FJB TO ENGINE
S P 106	SPARE-RJB TO BATT. CPT.
S P 107	SPARE-RJB TO BATT. CPT.
S P 108	SPARE-RJB TO BATT. CPT.
S P 109	SPARE-RJB TO ENGINE CPT.
S P 110	SPARE-RJB TO ENGINE CPT.
S P 111	SPARE-RJB TO ENGINE CPT.
S P 112	SPARE-RJB TO ENGINE CPT.
S P 114	SPARE-FJB TO U/DASH WIPER
S P 115	SPARE-FJB TO U/DASH WIPER
S P 116	SPARE-FJB TO U/DASH FLOOR
S P 117	SPARE-FJB TO U/DASH FLOOR
W C	A/C & HEAT SYST-EVAP CTR SIGN
Y C	INTERIOR LTS-110V FLUORESCENT
Y D	INTERIOR LTS-110V FLUORESCENT
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0	GALLEY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A A	RS - VOLTAGE REGULATOR GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 E	RS - HAT RACK ACCES. LH GRD
0 E A	EATON TRANSMISSION GRD
0 F	RS - HAT RACK ACCES. RH GRD
0 G	RS - HAT RACK ACCES. RH GRD
0 H	RS - LAVATORY ACCES. GRD
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR (SEDAN) GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	FS - SOUND SYS. JCT PANEL GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R E	RADIO &CTRL HEAD CHASSIS GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN - GND RELAY
0 S A	EC-BOSCH ALT. GROUND
0 S 2	SOUND SYSTEM RADIO GRD
0 S 3	SOUND SYSTEM VIDEO GRD
0 S S	SOUNS SYSTEM BATT. GRD
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 T 5	FS - HVAC DASH MODULE. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS FR JCT BOX CPT GRD STUD
0 Z	RR JCT BOX CPT GRD STUD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 A	A/C & HEAT SYSTEM-COOL 1 SIGN
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 B B	A/C & HEAT SYSTEM-COOL SIGN
2 H	A/C & HEAT SYSTEM-HI PRESS SW
2 E	A/C & HEAT SYSTEM EVAP CONT
2 F	A/C & HEAT SYSTEM EVAP CONT
2 H L	A/C & HEAT SYSTEM-LO & HI PRESS SW
2 L	A/C & HEAT SYSTEM-LO PRESS SW

CIRCUIT NUMBER CODE

No.	DESCRIPTION
4	HOSTESS & PASSENGER CHIME
4 A	HOSTESS & PASSENGER CHIME
4 B	PASSENGER CHIME
4 C	HOSTESS CHIME
5	INTERIOR LTS-AISLE & EMERG. EXIT
5	UPPER WINDSHIELD DEFROSTER
5 D	UPPER WINDSHIELD DEFROSTER
5 E	UPPER WINDSHIELD DEFROSTER
5 N	INTERIOR LTS-EMERGENCY EXIT
5 NC	SPEED SIGNAL LOWER 5MPH
5 NO	SPEED SIGNAL HIGHER 5MPH
6	INTERIOR LTS-AISLE
7 B	ENTRANCE DOOR (SEDAN)
7 D	ENTRANCE DOOR (SEDAN)
7 DA	ENTRANCE DOOR (SEDAN)
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
10	INTERIOR LTS-LUGGAGE CPT
10 A	INTERIOR LTS-LUGGAGE CPT
10 B	INTERIOR LTS-LUGGAGE CPT
10 D	INTERIOR LTS-LUGGAGE CPT
10 F	INTERIOR LTS-LUGGAGE CPT
10 H	INTERIOR LTS-LUGGAGE CPT
10 K	INTERIOR LTS-LUGGAGE CPT
10 R	INTERIOR LTS-LUGGAGE DOOR AJAR
11	FR DESTINATION SIGN
11 A	FR DESTINATION SIGN
11 B	FR DESTINATION SIGN
11 C	FR DESTINATION SIGN
11 D	FR DESTINATION SIGN
11 E	FR DESTINATION SIGN
11 K	FR DESTINATION SIGN
12	12V BAT ELECTRONIC JCT BLOCK
12	BAT CPT 12V BATTERY
12 A	FR JCT BOX 12V DISC SW
12 A	RR JCT BOX 12V DISC SW
12 B	12V BAT ELECTRICAL JCT BLOCK
12 B	RR JCT BOX 12V DISC SW
12 B	FR JCT BOX 12V DISC SW
12 BE	BAT. EQUALIZER MONITOR
12 C	FR JCT BOX 12V DISC SW
12 C	RR JCT BOX 12V HOT WIRE
12 CE	RR JCT BOX 12V HOT WIRE
12 D	BAT CPT 12V BATTERY
12 DT	TTLT MODULE
12 E	FR JCT BOX 12V DISC SW
12 E	RR JCT BOX 12V DISC SW
12 F	BAT CPT 12V FJB & IC
12 F	FR JCT BOX 12V DISC SW
12 F	RR JCT BOX 12V DISC SW
12 G	FR JCT BOX 12V DISC SW
12 H	12 V IGNITION D.T.RUN LIGHT
12 J	FR JCT BOX 12V DISC SW
12 I	12V IGNITION DISTRIBUTION
12 I	RR JCT BOX 12V IGNITION
12 K	12 VOLT IGN. TTLT & HVAC MODULE
12 IA	12V IGNITION DISTRIBUTION
12 IA	FR JCT BOX 12V IGNITION
12 IB	FR JCT BOX 12V IGNITION
12 IF	FR JCT BOX 12V IGNITION
12 LX	CLUSTER (12V HOT WIRE)
12 P	LH CONSOLE POWER OUTLET
12 R	BAT CPT 12V DISC RLY TO RJB
12 R	MEMORY BATTERY RADIO
12 S	SOUND SYSTEM 12V RADIO
12 S1	SOUND SYSTEM 12V RADIO
12 S1A	DVD KARAOKE FEEDING
12 S2	SOUND SYSTEM 12V RADIO
12 S2A	DVD KARAOKE FEEDING
12 SB	SOUND SYSTEM 12V FEEDING
12 SS	SOUND SYSTEM 12V FEEDING
12 VA	BATTERY TO EQUALIZER 12V
12 VD	12V HOT WIRE DISTRIBUTION
12 VF	BAT CPT 12V FJB & IC
12 VI	12V IGNITION DISTRIBUTION
12 VR	BAT CPT 12V DISC RLY TO RJB
12 W	12V BATTERY DDEC III
12 W	ENTRANCE DOOR (SEDAN)
12 WA	ENTRANCE DOOR (SEDAN)
12 X	FR JCT BOX 12V DISC SW
12 X2	FR JCT BOX 12V DISC SW
12 Y	FR JCT BOX 12V DISC SW
13 A	ALARM & SIGNAL-LO AIR PRIM.
13 B	ALARM & SIGNAL-LO AIR SEC.
14	LAVATORY-FLUSHING PUMP
14 A	LAVATORY-FLUSHING PUMP
15	EXTERIOR LTS-MULTI FUNC LEVEL
15 A	WIPER & WASHER UPPER WINDSHIELD
16	SPEED - SIGNAL +
16 A	SPEED - SIGNAL +
16 T	SPEED - SIGNAL +
17	EXTERIOR LTS-FLASHER UNIT
17 A	EXTERIOR LTS-FLASHER UNIT
19	DIFFERENTIAL OIL TEMP
20	SPEED - SIGNAL -
20 T	SPEED - SIGNAL -
20 W	SPEED - SIGNAL -
21	EXTERIOR LTS-DIRECTIONNAL LH
21 A	EXTERIOR LTS-DIRECTIONNAL LH
21 B	EXTERIOR LTS-HAZARD
21 C	EXTERIOR LTS-CORNERING LH
21 H	EXTERIOR LTS-DIRECTIONNAL LH
21 K	EXTERIOR LTS-CORNERING
21 N	EXTERIOR LTS-CORNERING LH
21 P	EXTERIOR LTS-CORNERING LH
23	EXTERIOR LTS-DIRECTIONNAL RH
23	EXTERIOR LTS-DIRECTIONNAL RH
23 A	EXTERIOR LTS-DIRECTIONNAL RH
23 B	EXTERIOR LTS-DIRECTIONNAL RH
23 C	EXTERIOR LTS-CORNERING RH
23 N	EXTERIOR LTS-CORNERING RH
23 P	EXTERIOR LTS-CORNERING RH
24	BAT CPT 24V BATTERY
24	FR JCT BOX 24V DISC SW
24 A	BOOSTER BLOCK 24V DISC SW
24 A	FR JCT BOX 24V DISC SW
24 A	RR JCT BOX 24V DISC SW
24 B	24V STARTER RLY FEEDING
24 B	FR JCT BOX 24V DISC SW
24 B	RR JCT BOX 24V DISC SW
24 BC	24 VOLT BATT. CHARGER
24 BE	RJB CPT-BAT EQ MONITOR HOT WIRE
24 C	FR JCT BOX 24V DISC SW
24 C	RR JCT BOX 24V DISC SW
24 D	BAT CPT 24V HOT WIRE
24 D	FR JCT BOX 24V HOT WIRE
24 D	RR JCT BOX 24V HOT WIRE
24 DA	A/C JCT BOX 24V HOT WIRE
24 E	BAT CPT 24V DISC SW
24 E	FR JCT BOX 24V DISC SW
24 E	RR JCT BOX 24V DISC SW
24 F	FR JCT BOX 24V DISC SW
24 F	RR JCT BOX 24V DISC SW
24 G	FR JCT BOX 24V DISC SW
24 G	RR JCT BOX 24V DISC SW
24 H	FR JCT BOX 24V DISC SW
24 H	RR JCT BOX 24V DISC SW
24 I	FR JCT BOX 24V IGNITION
24 I	RR JCT BOX 24V IGNITION
24 IA	FR JCT BOX 24V IGNITION
24 IA	RR JCT BOX 24V IGNITION
24 IB	FR JCT BOX 24V IGNITION
24 IB	RR JCT BOX 24V IGNITION
24 IC	FR JCT BOX 24V IGNITION
24 IF	FJB 24VOLT IGNITION
24 P	FR JCT BOX 24V DISC SW
24 S	24V DISC SW RLY SIGNAL
24 S1	SOUND SYSTEM 24V AMPLIFIER
24 S2	SOUND SYSTEM 24V AMPLIFIER
24 S3	SOUND SYSTEM 24V VIDEO
24 S4	SOUND SYSTEM 24V VIDEO
24 SB	SOUND SYSTEM 24V FEEDING
24 SS	SOUND SYSTEM 24V FEEDING
24 R	24 VOLTS FRONT CAMERA SW.
24 V2	RR JCT BOX 24V DISC SW
24 V3	RR JCT BOX 24V DISC SW
24 V4	RR JCT BOX 24V DISC SW
24 V5	RR JCT BOX 24V DISC SW
24 VD	24V HOT WIRE DISTRIBUTION
24 VF	BAT CPT 24V SW TO FJB & IC
24 VA	BATTERY TO EQUALIZER 24V
24 VI	RR JCT BOX 24V IGNITION
24 VR	BAT CPT 24V DISC SW TO RJB
24 W	RR JCT BOX 24V DISC SW (WCL)
24 WC	BATT.CPT TO HYD. PUMP (WCL)
24 WL	24V BATTERY-HYD. PUMP (WCL)
25 A1	PRE-EXITATION ALT. BOSCH #1
25 A2	PRE-EXITATION ALT. BOSCH #2
25 A	T.T. LT. ALTERNATOR #1
25 B	12 VOLTS IGN. ALT. SIGNAL MODULE
25 D	12 V. ENGINE RUN / HVAC SYSTEM
25 F	12 VOLT IGN. DISTRIBUTION
25 H	24 VOLT IGN. ALT. BOSCH
25 K	T.T. LT. ALTERNATOR #2
26 A	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26 B	DRIVER'S WINDOW LIFTER
26 C	DRIVER'S WINDOW LIFTER
27	LAVATORY-EMERGENCY SONALERT
28 A	A/C & HEAT SYSTEM-HI PRESSURE
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29 A	A/C & HEAT SYSTEM-DRIVER'S HTR
29 B	A/C & HEAT SYSTEM-DRIVER'S HTR
29 H	HVAC DASH MODULE
30 A	GALLEY
31 A	A/C & HEAT SYSTEM-UNLOADER
31 B	A/C & HEAT SYSTEM-UNLOADER
31 B	WIPER & WASHER SYSTEM
31 C	WIPER & WASHER SYSTEM
31 D	WIPER & WASHER SYSTEM
31 E	WIPER & WASHER SYSTEM
31 J	WIPER & WASHER SYSTEM
31 X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32 B	EXTERIOR LTS-BACK-UP
32 C	BACK-UP PWR & SIGNAL
32 D	BACK-UP ALARM

CIRCUIT NUMBER CODE

No.	DESCRIPTION
35	ENTRANCE DOOR (SEDAN)
35B	ENTRANCE DOOR (SEDAN)
35BB	ENTRANCE DOOR (SEDAN)
35D	ENTRANCE DOOR (SEDAN)
36	JACOB BRAKE SYSREM
36A	JACOB BRAKE SYSREM
38	INTERIOR LTS-24V FLUORESCENT
38A	INTERIOR LTS-24V FLUORESCENT
38C	INTERIOR LTS-24V FLUORESCENT
38D	INTERIOR LTS-24V FLUORESCENT
39	INTERIOR LTS-24V LH CONSOLE SW
39A	INTERIOR LTS-DRIVER"S LTS
39P	READING LIGHTS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
43	HAT RACK FAN
43A	HAT RACK FAN
43B	HAT RACK FAN
43D	HAT RACK FAN
43E	HAT RACK FAN
43F	HAT RACK FAN
43G	HAT RACK FAN
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45B	A/C & HEAT SYSTEM-HEAT SIGN
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
48	ENTRANCE DOOR (SEDAN)
48A	ENTRANCE DOOR (SEDAN)
49	ENTRANCE DOOR (SEDAN)
49A	ENTRANCE DOOR (SEDAN)
50	AIR DRYER
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL- AIR HORN
52C	ALARM & SIGNAL- AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
57CA	A/C & HEAT SYSTEM-HEAT SIGN
57CC	A/C & HEAT SYSTEM-HEAT SIGN
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
62	LAVATORY-OCCUPIED LT
62A	LAVATORY-FLUOR LT
62B	LAVATORY-FLUOR LT
62E	LAVATORY-OCCUP & FLUOR LT
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVERS FAN
64B	DRIVERS FAN
64C	DRIVERS FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65P	PASSENGER REC. DAMPER
65D	DRIVER REC. DAMPER
66	O_PASS. ON/OFF
67	24 VOLT RUN DISTRIBUTION
67A	A/C & HEAT SYSTEM
67B	A/C & HEAT SYSTEM
67C	HEATING WINDSHIELD
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67V	A/C & HEAT SYSTEM-WATER VALVE
68	DASH & DEFROST DAMPER MOTOR
68A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH
72C	SUN VISOR-LH
72D	SUN VISOR-LH
73	LAVATORY-FEEDING
74	INTERIOR LTS-READING RH
74A	INTERIOR LTS-READING RH
74D	INTERIOR LTS-READING SIGNAL
75	INTERIOR LTS-READING LH
75A	INTERIOR LTS-READING LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77	A/C & HEAT SYSTEM-HI PRESSURE
77A	A/C & HEAT SYSTEM-DRIVER'S HTR
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85W	24V IGN ANTI SKID
85X	24V IGN ANTI SKID
85Y	ANTI SKID-WARNING LT
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
90J	A/C & HEAT SYSTEM-COND FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
100	INTERIOR LTS-GENERAL
100A	INTERIOR LTS-GENERAL
100B	INTERIOR LTS-GENERAL
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	WORLD TRANSM-SOL. SUPPLY
102A	24V STARTER TO BOSCH ALTERNATOR
103	LOW BUOY
104	WORLD TRANSM-SOL. FORWARD
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2

CIRCUIT NUMBER CODE

No.	DESCRIPTION
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125	GALLEY LAMP
125T	GALLEY LAMP
125W	WORLD TRANSM-RET. INDICATOR
126	KNEELING SYSTEM
126A	KNEELING SYSTEM
126B	KNEELING SYSTEM
126C	KNEELING SYSTEM
126D	KNEELING SYSTEM
126E	KNEELING SYSTEM
126F	KNEELING SYSTEM
126G	KNEELING SYSTEM
126H	KNEELING SYSTEM
126K	KNEELING SYSTEM
126P	KNEELING SYSTEM
126R	KNEELING SYSTEM
126W	5 MPH N.C. SIGNAL (WCL)
126S	KNEELING SYSTEM
126T	KNEELING SYSTEM
127	WORLD TRANSM-LUBE PRESS SW.
127	PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
127B	PRE-HEAT WATER HEATER
127	WORLD TRANSM-RETARDER FEED SOL.
127S	PRE-HEAT WATER HEATER
127W	PRE-HEAT WATER HEATER
128	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT WATER HEATER
128W	PRE-HEAT WATER HEATER
128	WORLD TRANSM-SOL. C2
129	PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	GALLEY-HEAT CONTAINERS
133A	GALLEY-HEAT CONTAINERS
133B	GALLEY-HEAT CONTAINERS
133C	GALLEY-HEAT CONTAINERS
133	WORLD TRANSM-RET. ACTUATOR HI
134	GALLEY-HEAT CONTAINERS
134A	GALLEY-HEAT CONTAINERS
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135A	A/C & HEAT SYSTEM-AIR SENSOR
135D	A/C & HEAT SYSTEM-AIR SENSOR
135C	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	GALLEY-ACCESSORIES
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146A	TRANSMISSION-12V IGNITION
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	WORLD TRANSM-OIL TEMP
147A	ETHER COLD START & D.R.L.
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
151A	ABS SYSTEM
152	ABS SYSTEM
152A	ABS SYSTEM
153	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	ABS SYSTEM
155	WORLD TRANSM-SPARE INPUT (-)
156	ABS SYSTEM
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157A	ABS SYSTEM
157B	ABS SYSTEM
157D	A.T.C. SYSTEM
157E	A.T.C. SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
165A	A/C & HEAT SYSTEM-TRANSMITER
165B	A/C & HEAT SYSTEM-TRANSMITER
165C	A/C & HEAT SYSTEM-TRANSMITER
165D	A/C & HEAT SYSTEM-TRANSMITER
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	A/C & HEAT SYSTEM-TEMP. CTR
167A	A/C & HEAT SYSTEM-TEMP. CTR
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170	LUGGAGE DOOR LOCK
170C	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
225	LAVATORY FAN
225A	LAVATORY FAN
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251A	DDEC III - DATA LOGGER 12 H.W.
251	DDEC III - PRODRIVER 12V H.W.
253	GALLEY-MICROWAVE
254	GALLEY-12V FRIGO NORCOLD
254A	GALLEY-FRIGO
255	GALLEY-COFEEMAKER
255A	GALLEY-COFEEMAKER
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
260	WINDOW AJAR
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
292	FAN CLUTCH RADIATOR SPD 2
300	DOOR AJAR MAGN.SW. (WCL)
300A	POWER SYSTEM SW. (WCL)

CIRCUIT NUMBER CODE

No.	DESCRIPTION
300B	DOOR AJAR ALARM (WCL)
301	POWER SYSTEM SW. (WCL)
302	DOOR AJAR T.T.LT. (WCL)
302A	DOOR AJAR ALARM SIGN.(WCL)
302B	DOOR AJAR MAGN.SW. (WCL)
303	REMOTE WALL SW. DWN (WCL)
304	REMOTE WALL SW. UP (WCL)
305	PARK. BRAKE SOL. VALVE (WCL)
305A	PARK. BRAKE SAFETY SW. (WCL)
306	CONTROL SYSTEM (WCL RICON)
307	CONTROL SYSTEM (WCL RICON)
308	CONTROL SYSTEM (WCL RICON)
309	CONTROL SYSTEM (WCL RICON)
310	EATON TRANSMISSION
311	EATON TRANSMISSION
312	EATON TRANSMISSION
313	EATON TRANSMISSION
314	EATON TRANSMISSION
315	EATON TRANSMISSIOM
316	EATON TRANSMISSION - EPL
317	EATON TRANSMISSION
318	EATON TRANSMISSION
319	EATON TRANSMISSION
320	EATON TRANSMISSION
321	EATON TRANSMISSION
322	EATON TRANSMISSIION
323	EATON TRANSMISSION
324	EATON TRANSMISSION
325	EATON TRANSMISSION
326	EATON TRANSMISSION
327	EATON TRANSMISSION
328	EATON TRANSMISSION
329	EATON TRANSMISSION
330	EATON TRANSMISSION - EPL
331	EATON TRANSMISSION - EPL
332	EATON TRANSMISSION
333	EATON TRANSMISSION - 12V BATTERY
334	EATON GENERATION 2
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE

No.	DESCRIPTION
531	DDEC III-CRUISE CLUTCH RELEASE
540	DDEC III-CRUISE ENABLE LTS.
541	DDEC III-CRUISE SET SW
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
583	DDEC III-ENGINE BRAKE 4 CYL.
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
925	J1939-HIGH
926	J1939-LOW
927	J1939-SHIELD
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
979	DDEC III-ENGINE BRAKE 2 CYL.

No.	DESCRIPTION

No.	DESCRIPTION

CIRCUIT NUMBER CODE

No.	DESCRIPTION
B A	INTERIOR LTS-110V FLUORESCENT
B B	INTERIOR LTS-110V FLUORESCENT
D 1	SOUND SYSTEM-FR RH SPEAKER
D 2	SOUND SYSTEM-FR RH SPEAKER
D 3	SOUND SYSTEM-FR RH SPEAKER
D 4	SOUND SYSTEM-RR RH SPEAKER
D 5	SOUND SYSTEM-RR RH SPEAKER
D 6	SOUND SYSTEM-RR RH SPEAKER
D 7	SOUND SYSTEM-RR RH SPEAKER
D 8	SOUND SYSTEM-RR RH SPEAKER
D 3 4	SOUND SYSTEM-RR RH SPEAKER
D 6 7	SOUND SYSTEM-RR RH SPEAKER
G 1	SOUND SYSTEM-FR LH SPEAKER
G 2	SOUND SYSTEM-FR LH SPEAKER
G 3	SOUND SYSTEM-FR LH SPEAKER
G 4	SOUND SYSTEM-RR LH SPEAKER
G 5	SOUND SYSTEM-RR LH SPEAKER
G 6	SOUND SYSTEM-RR LH SPEAKER
G 7	SOUND SYSTEM-RR LH SPEAKER
G 8	SOUND SYSTEM-RR LH SPEAKER
G 3 4	SOUND SYSTEM-RR LH SPEAKER
G 6 7	SOUND SYSTEM-RR LH SPEAKER
L 1 A	INTERIOR LTS-110V FLUORESCENT
L 1 B	INTERIOR LTS-110V FLUORESCENT
L 2 A	INTERIOR LTS-110V FLUORESCENT
L 2 B	INTERIOR LTS-110V FLUORESCENT
L 0	110V RECEPTACLE- 110V FLUOR.
L 1	110V RECEPTACLE- 110V FLUOR.
L 2	110V RECEPTACLE- 110V FLUOR.
R A	INTERIOR LTS-110V FLUORESCENT
R B	INTERIOR LTS-110V FLUORESCENT
S H 1	SHIELD CHASSIS GRD
S H 2	SHIELD CHASSIS GRD
S H 3	SHIELD CHASSIS GRD
S H 4	SHIELD CHASSIS GRD
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 10	SPARE-RJB TO LUGG CPT #1
S P 11	SPARE-FJB TO RJB
S P 12	SPARE-RJB TO ENGINE
S P 13	SPARE-RJB TO ENGINE
S P 14	SPARE-FJB TO RJB
S P 15	SPARE-RJB TO ENGINE
S P 16	SPARE-RJB TO ENGINE
S P 17	SPARE-RJB TO ENGINE
S P 18	SPARE-FJB TO RJB
S P 24	SPARE-RJB TO LAVATORY ROOF
S P 25	SPARE-RJB TO LAVATORY ROOF
S P 26	SPARE-RJB TO LAVATORY ROOF
S P 27	SPARE-RJB TO LH HAT RACK
S P 28	SPARE-RJB TO LH HAT RACK
S P 31	SPARE-RJB TO RH HAT RACK
S P 32	SPARE-RJB TO RH HAT RACK
S P 33	SPARE-FJB TO RJB
S P 38	SPARE-FJB TO RJB
S P 43	SPARE-FJB TO RJB
S P 45	SPARE-FJB TO RJB
S P 46	SPARE-RJB TO LH FR ROOF
S P 48	SPARE-RJB TO DASH CENTER PANEL
S P 56	SPARE-ENGINE TO RH SW PANEL
S P 57	SPARE-DASH CENTER PANEL TO ENG.
S P 58	SPARE-DASH CENTER PANEL TO ENG.
S P 59	SPARE-FJB TO ENGINE
S P 61	SPARE-FJB TO DASH RH PANEL
S P 68	SPARE-FJB TO ENGINE
S P 69	SPARE-FJB TO FR AXLE
S P 70	SPARE-FJB TO FR AXLE
S P 71	SPARE-FJB TO RH SW PANEL
S P 72	SPARE-FJB TO FR SERV CPT
S P 74	SPARE-FJB TO LH CONSOLE
S P 77	SPARE-FJB TO EVAPORATOR CPT
S P 78	SPARE-FJB TO CONDENSER CPT
S P 79	SPARE-FJB TO CONDENSER CPT
S P 87	SPARE-RJB TO LH HAT RACK
S P 88	SPARE-RJB TO RH HAT RACK
S P 92	SPARE-RJB TO CONDENSER CPT
S P 93	SPARE-RJB TO EVAPORATOR CPT
S P 94	SPARE-RJB TO RR ROOF
S P 95	SPARE-RJB TO RR ROOF
S P 96	SPARE-RJB TO LUGG CPT #2
S P 97	SPARE-RJB TO LUGG CPT #3
S P 98	SPARE-RJB TO LUGG CPT #3
S P 104	SPARE-RJB TO ENGINE CPT
S P 105	SPARE-FJB TO ENGINE
S P 106	SPARE-RJB TO BATT. CPT.
S P 107	SPARE-RJB TO BATT. CPT.
S P 108	SPARE-RJB TO BATT. CPT.
S P 109	SPARE-RJB TO ENGINE CPT.
S P 110	SPARE-RJB TO ENGINE CPT.
S P 111	SPARE-RJB TO ENGINE CPT.
S P 112	SPARE-RJB TO ENGINE CPT.
S P 114	SPARE-FJB TO U/DASH WIPER
S P 115	SPARE-FJB TO U/DASH WIPER
S P 116	SPARE-FJB TO U/DASH FLOOR
S P 117	SPARE-FJB TO U/DASH FLOOR
W C	A/C & HEAT SYST-EVAP CTR SIGN
Y C	INTERIOR LTS-110V FLUORESCENT
Y D	INTERIOR LTS-110V FLUORESCENT
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0	GALLEY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A A	RS - VOLTAGE REGULATOR GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 E	RS - HAT RACK ACCES. LH GRD
0 E A	EATON TRANSMISSION GRD
0 F	RS - HAT RACK ACCES. RH GRD
0 G	RS - HAT RACK ACCES. RH GRD
0 H	RS - LAVATORY ACCES. GRD
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR (SEDAN) GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	FS - SOUND SYS. JCT PANEL GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R E	RADIO &CTRL HEAD CHASSIS GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN - GND RELAY
0 S A	EC-BOSCH ALT. GROUND
0 S 2	SOUND SYSTEM RADIO GRD
0 S 3	SOUND SYSTEM VIDEO GRD
0 S S	SOUNS SYSTEM BATT. GRD
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 T 5	FS - HVAC DASH MODULE. GRD
0 V	RR JCT BOX CPT GRD STUD
0 VA	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS FR JCT BOX CPT GRD STUD
0 Z	RR JCT BOX CPT GRD STUD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 A	A/C & HEAT SYSTEM-COOL 1 SIGN
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 B B	A/C & HEAT SYSTEM-COOL SIGN
2 H	A/C & HEAT SYSTEM-HI PRESS SW
2 E	A/C & HEAT SYSTEM EVAP CONT
2 F	A/C & HEAT SYSTEM EVAP CONT
2 H L	A/C & HEAT SYSTEM-LO & HI PRESS SW
2 L	A/C & HEAT SYSTEM-LO PRESS SW
4	HOSTESS & PASSENGER CHIME
4 A	HOSTESS & PASSENGER CHIME

CIRCUIT NUMBER CODE

No.	DESCRIPTION
4 B	PASSENGER CHIME
4 C	HOSTESS CHIME
5	INTERIOR LTS-AISLE & EMERG. EXIT
5	UPPER WINDSHIELD DEFROSTER
5 D	UPPER WINDSHIELD DEFROSTER
5 E	UPPER WINDSHIELD DEFROSTER
5 N	INTERIOR LTS-EMERGENCY EXIT
5 NC	SPEED SIGNAL LOWER 5MPH
5 NO	SPEED SIGNAL HIGHER 5MPH
6	INTERIOR LTS-AISLE
7 B	ENTRANCE DOOR (SEDAN)
7 D	ENTRANCE DOOR (SEDAN)
7 DA	ENTRANCE DOOR (SEDAN)
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
10	INTERIOR LTS-LUGGAGE CPT
10 A	INTERIOR LTS-LUGGAGE CPT
10 B	INTERIOR LTS-LUGGAGE CPT
10 D	INTERIOR LTS-LUGGAGE CPT
10 F	INTERIOR LTS-LUGGAGE CPT
10 H	INTERIOR LTS-LUGGAGE CPT
10 K	INTERIOR LTS-LUGGAGE CPT
10 R	INTERIOR LTS-LUGGAGE DOOR AJAR
11	FR DESTINATION SIGN
11 A	FR DESTINATION SIGN
11 B	FR DESTINATION SIGN
11 C	FR DESTINATION SIGN
11 D	FR DESTINATION SIGN
11 E	FR DESTINATION SIGN
11 K	FR DESTINATION SIGN
12	12V BAT ELECTRONIC JCT BLOCK
12	BAT CPT 12V BATTERY
12 A	FR JCT BOX 12V DISC SW
12 A	RR JCT BOX 12V DISC SW
12 B	12V BAT ELECTRICAL JCT BLOCK
12 B	RR JCT BOX 12V DISC SW
12 B	FR JCT BOX 12V DISC SW
12 BE	BAT. EQUALIZER MONITOR
12 C	FR JCT BOX 12V DISC SW
12 C	RR JCT BOX 12V HOT WIRE
12 CE	RR JCT BOX 12V HOT WIRE
12 D	BAT CPT 12V BATTERY
12 DT	TTLT MODULE
12 E	FR JCT BOX 12V DISC SW
12 E	RR JCT BOX 12V DISC SW
12 F	BAT CPT 12V FJB & IC
12 F	FR JCT BOX 12V DISC SW
12 F	RR JCT BOX 12V DISC SW
12 G	FR JCT BOX 12V DISC SW
12 H	12 V IGNITION D.T.RUN LIGHT
12 J	FR JCT BOX 12V DISC SW
12 I	12V IGNITION DISTRIBUTION
12 I	RR JCT BOX 12V IGNITION
12 K	12 VOLT IGN. TTLT & HVAC MODULE
12 IA	12V IGNITION DISTRIBUTION
12 IA	FR JCT BOX 12V IGNITION
12 IB	FR JCT BOX 12V IGNITION
12 IF	FR JCT BOX 12V IGNITION
12 LX	CLUSTER (12V HOT WIRE)
12 P	LH CONSOLE POWER OUTLET
12 R	BAT CPT 12V DISC RLY TO RJB
12 R	MEMORY BATTERY RADIO
12 S	SOUND SYSTEM 12V RADIO
12 S1	SOUND SYSTEM 12V RADIO
12 S1A	DVD KARAOKE FEEDING
12 S2	SOUND SYSTEM 12V RADIO
12 S2A	DVD KARAOKE FEEDING
12 SB	SOUND SYSTEM 12V FEEDING
12 SS	SOUND SYSTEM 12V FEEDING
12 VA	BATTERY TO EQUALIZER 12V
12 VD	12V HOT WIRE DISTRIBUTION
12 VF	BAT CPT 12V FJB & IC
12 VI	12V IGNITION DISTRIBUTION
12 VR	BAT CPT 12V DISC RLY TO RJB
12 W	12V BATTERY DDEC III
12 W	ENTRANCE DOOR (SEDAN)
12 WA	ENTRANCE DOOR (SEDAN)
12 X	FR JCT BOX 12V DISC SW
12 X2	FR JCT BOX 12V DISC SW
12 Y	FR JCT BOX 12V DISC SW
13 A	ALARM & SIGNAL-LO AIR PRIM.
13 B	ALARM & SIGNAL-LO AIR SEC.
14	LAVATORY-FLUSHING PUMP
14 A	LAVATORY-FLUSHING PUMP
15	EXTERIOR LTS-MULTI FUNC LEVEL
15 A	WIPER & WASHER UPPER WINDSHIELD
16	SPEED - SIGNAL +
16 A	SPEED - SIGNAL +
16 T	SPEED - SIGNAL +
17	EXTERIOR LTS-FLASHER UNIT
17 A	EXTERIOR LTS-FLASHER UNIT
19	DIFFERENTIAL OIL TEMP
20	SPEED - SIGNAL -
20 T	SPEED - SIGNAL -
20 W	SPEED - SIGNAL -
21	EXTERIOR LTS-DIRECTIONNAL LH
21 A	EXTERIOR LTS-DIRECTIONNAL LH
21 B	EXTERIOR LTS-HAZARD
21 C	EXTERIOR LTS-CORNERING LH
21 H	EXTERIOR LTS-DIRECTIONNAL LH
21 K	EXTERIOR LTS-CORNERING
21 N	EXTERIOR LTS-CORNERING LH
21 P	EXTERIOR LTS-CORNERING LH
23	EXTERIOR LTS-DIRECTIONNAL RH
23	EXTERIOR LTS-DIRECTIONNAL RH
23 A	EXTERIOR LTS-DIRECTIONNAL RH
23 B	EXTERIOR LTS-DIRECTIONNAL RH
23 C	EXTERIOR LTS-CORNERING RH
23 N	EXTERIOR LTS-CORNERING RH
23 P	EXTERIOR LTS-CORNERING RH
24	BAT CPT 24V BATTERY
24	FR JCT BOX 24V DISC SW
24 A	BOOSTER BLOCK 24V DISC SW
24 A	FR JCT BOX 24V DISC SW
24 A	RR JCT BOX 24V DISC SW
24 B	24V STARTER RLY FEEDING
24 B	FR JCT BOX 24V DISC SW
24 B	RR JCT BOX 24V DISC SW
24 BC	24 VOLT BATT. CHARGER
24 BE	RJB CPT-BAT EQ MONITOR HOT WIRE
24 C	FR JCT BOX 24V DISC SW
24 C	RR JCT BOX 24V DISC SW
24 D	BAT CPT 24V HOT WIRE
24 D	FR JCT BOX 24V HOT WIRE
24 D	RR JCT BOX 24V HOT WIRE
24 DA	A/C JCT BOX 24V HOT WIRE
24 E	BAT CPT 24V DISC SW
24 E	FR JCT BOX 24V DISC SW
24 E	RR JCT BOX 24V DISC SW
24 F	FR JCT BOX 24V DISC SW
24 F	RR JCT BOX 24V DISC SW
24 G	FR JCT BOX 24V DISC SW
24 G	RR JCT BOX 24V DISC SW
24 H	FR JCT BOX 24V DISC SW
24 H	RR JCT BOX 24V DISC SW
24 I	FR JCT BOX 24V IGNITION
24 I	RR JCT BOX 24V IGNITION
24 IA	FR JCT BOX 24V IGNITION
24 IA	RR JCT BOX 24V IGNITION
24 IB	FR JCT BOX 24V IGNITION
24 IB	RR JCT BOX 24V IGNITION
24 IC	FR JCT BOX 24V IGNITION
24 IF	FJB 24VOLT IGNITION
24 P	FR JCT BOX 24V DISC SW
24 S	24V DISC SW RLY SIGNAL
24 S1	SOUND SYSTEM 24V AMPLIFIER
24 S2	SOUND SYSTEM 24V AMPLIFIER
24 S3	SOUND SYSTEM 24V VIDEO
24 S4	SOUND SYSTEM 24V VIDEO
24 SB	SOUND SYSTEM 24V FEEDING
24 SS	SOUND SYSTEM 24V FEEDING
24 R	24 VOLTS FRONT CAMERA SW.
24 V2	RR JCT BOX 24V DISC SW
24 V3	RR JCT BOX 24V DISC SW
24 V4	RR JCT BOX 24V DISC SW
24 V5	RR JCT BOX 24V DISC SW
24 VD	24V HOT WIRE DISTRIBUTION
24 VF	BAT CPT 24V SW TO FJB & IC
24 VA	BATTERY TO EQUALIZER 24V
24 VI	RR JCT BOX 24V IGNITION
24 VR	BAT CPT 24V DISC SW TO RJB
24 W	RR JCT BOX 24V DISC SW (WCL)
24 WC	BATT.CPT TO HYD. PUMP (WCL)
24 WL	24V BATTERY-HYD. PUMP (WCL)
25 A1	PRE-EXITATION ALT. BOSCH #1
25 A2	PRE-EXITATION ALT. BOSCH #2
25 A	T.T. LT. ALTERNATOR #1
25 B	12 VOLTS IGN. ALT. SIGNAL MODULE
25 D	12 V. ENGINE RUN / HVAC SYSTEM
25 F	12 VOLT IGN. DISTRIBUTION
25 H	24 VOLT IGN. ALT. BOSCH
25 K	T.T. LT. ALTERNATOR #2
26 A	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26 B	DRIVER'S WINDOW LIFTER
26 C	DRIVER'S WINDOW LIFTER
27	LAVATORY-EMERGENCY SONALERT
28 A	A/C & HEAT SYSTEM-HI PRESSURE
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29 A	A/C & HEAT SYSTEM-DRIVER'S HTR
29 B	A/C & HEAT SYSTEM-DRIVER'S HTR
29 H	HVAC DASH MODULE
30 A	GALLEY
31 A	A/C & HEAT SYSTEM-UNLOADER
31 B	A/C & HEAT SYSTEM-UNLOADER
31 B	WIPER & WASHER SYSTEM
31 C	WIPER & WASHER SYSTEM
31 D	WIPER & WASHER SYSTEM
31 E	WIPER & WASHER SYSTEM
31 J	WIPER & WASHER SYSTEM
31 X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32 B	EXTERIOR LTS-BACK-UP
32 C	BACK-UP PWR & SIGNAL
32 D	BACK-UP ALARM
35	ENTRANCE DOOR (SEDAN)
35 B	ENTRANCE DOOR (SEDAN)

CIRCUIT NUMBER CODE

No.	DESCRIPTION
35BB	ENTRANCE DOOR (SEDAN)
35D	ENTRANCE DOOR (SEDAN)
36	JACOB BRAKE SYSREM
36A	JACOB BRAKE SYSREM
38	INTERIOR LTS-24V FLUORESCENT
38A	INTERIOR LTS-24V FLUORESCENT
38C	INTERIOR LTS-24V FLUORESCENT
38D	INTERIOR LTS-24V FLUORESCENT
39	INTERIOR LTS-24V LH CONSOLE SW
39A	INTERIOR LTS-DRIVER"S LTS
39P	READING LIGHTS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
43	HAT RACK FAN
43A	HAT RACK FAN
43B	HAT RACK FAN
43D	HAT RACK FAN
43E	HAT RACK FAN
43F	HAT RACK FAN
43G	HAT RACK FAN
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45B	A/C & HEAT SYSTEM-HEAT SIGN
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
48	ENTRANCE DOOR (SEDAN)
48A	ENTRANCE DOOR (SEDAN)
49	ENTRANCE DOOR (SEDAN)
49A	ENTRANCE DOOR (SEDAN)
50	AIR DRYER
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL- AIR HORN
52C	ALARM & SIGNAL- AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
57CA	A/C & HEAT SYSTEM-HEAT SIGN
57CC	A/C & HEAT SYSTEM-HEAT SIGN
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
62	LAVATORY-OCCUPIED LT
62A	LAVATORY-FLUOR LT
62B	LAVATORY-FLUOR LT
62E	LAVATORY-OCCUP & FLUOR LT
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVERS FAN
64B	DRIVERS FAN
64C	DRIVERS FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65P	PASSENGER REC. DAMPER
65D	DRIVER REC. DAMPER
66	O_PASS. ON/OFF
67	24 VOLT RUN DISTRIBUTION
67A	A/C & HEAT SYSTEM
67B	A/C & HEAT SYSTEM
67C	HEATING WINDSHIELD
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67V	A/C & HEAT SYSTEM-WATER VALVE
68	DASH & DEFROST DAMPER MOTOR
68A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH
72C	SUN VISOR-LH
72D	SUN VISOR-LH
73	LAVATORY-FEEDING
74	INTERIOR LTS-READING RH
74A	INTERIOR LTS-READING RH
74D	INTERIOR LTS-READING SIGNAL
75	INTERIOR LTS-READING LH
75A	INTERIOR LTS-READING LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77	A/C & HEAT SYSTEM-HI PRESSURE
77A	A/C & HEAT SYSTEM-DRIVER'S HTR
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85W	24V IGN ANTI SKID
85X	24V IGN ANTI SKID
85Y	ANTI SKID-WARNING LT
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
90J	A/C & HEAT SYSTEM-COND FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
100	INTERIOR LTS-GENERAL
100A	INTERIOR LTS-GENERAL
100B	INTERIOR LTS-GENERAL
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	WORLD TRANSM-SOL. SUPPLY
102A	24V STARTER TO BOSCH ALTERNATOR
103	LOW BUOY
104	WORLD TRANSM-SOL. FORWARD
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR

CIRCUIT NUMBER CODE

No.	DESCRIPTION
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125	GALLEY LAMP
125T	GALLEY LAMP
125W	WORLD TRANSM-RET. INDICATOR
126	KNEELING SYSTEM
126A	KNEELING SYSTEM
126B	KNEELING SYSTEM
126C	KNEELING SYSTEM
126D	KNEELING SYSTEM
126E	KNEELING SYSTEM
126F	KNEELING SYSTEM
126G	KNEELING SYSTEM
126H	KNEELING SYSTEM
126K	KNEELING SYSTEM
126P	KNEELING SYSTEM
126R	KNEELING SYSTEM
126W	5 MPH N.C. SIGNAL (WCL)
126S	KNEELING SYSTEM
126T	KNEELING SYSTEM
127	WORLD TRANSM-LUBE PRESS SW.
127	PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
127B	PRE-HEAT WATER HEATER
127	WORLD TRANSM-RETARDER FEED SOL.
127S	PRE-HEAT WATER HEATER
127W	PRE-HEAT WATER HEATER
128	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT WATER HEATER
128W	PRE-HEAT WATER HEATER
128	WORLD TRANSM-SOL. C2
129	PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	GALLEY-HEAT CONTAINERS
133A	GALLEY-HEAT CONTAINERS
133B	GALLEY-HEAT CONTAINERS
133C	GALLEY-HEAT CONTAINERS
133	WORLD TRANSM-RET. ACTUATOR HI
134	GALLEY-HEAT CONTAINERS
134A	GALLEY-HEAT CONTAINERS

No.	DESCRIPTION
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135A	A/C & HEAT SYSTEM-AIR SENSOR
135D	A/C & HEAT SYSTEM-AIR SENSOR
135C	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	GALLEY-ACCESSORIES
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146A	TRANSMISSION-12V IGNITION
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	WORLD TRANSM-OIL TEMP
147A	ETHER COLD START & D.R.L.
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO

No.	DESCRIPTION
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
151A	ABS SYSTEM
152	ABS SYSTEM
152A	ABS SYSTEM
153	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	ABS SYSTEM
155	WORLD TRANSM-SPARE INPUT (-)
156	ABS SYSTEM
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157A	ABS SYSTEM
157B	ABS SYSTEM
157D	A.T.C. SYSTEM
157E	A.T.C. SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
165A	A/C & HEAT SYSTEM-TRANSMITER
165B	A/C & HEAT SYSTEM-TRANSMITER
165C	A/C & HEAT SYSTEM-TRANSMITER
165D	A/C & HEAT SYSTEM-TRANSMITER
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	A/C & HEAT SYSTEM-TEMP. CTR
167A	A/C & HEAT SYSTEM-TEMP. CTR
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170	LUGGAGE DOOR LOCK
170C	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK

No.	DESCRIPTION
170H	LUGGAGE DOOR LOCK
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
225	LAVATORY FAN
225A	LAVATORY FAN
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251A	DDEC III - DATA LOGGER 12 H.W.
251	DDEC III - PRODRIVER 12V H.W.
253	GALLEY-MICROWAVE
254	GALLEY-12V FRIGO NORCOLD
254A	GALLEY-FRIGO
255	GALLEY-COFEEMAKER
255A	GALLEY-COFEEMAKER
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
260	WINDOW AJAR
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
292	FAN CLUTCH RADIATOR SPD 2
300	DOOR AJAR MAGN.SW. (WCL)
300A	POWER SYSTEM SW. (WCL)
300B	DOOR AJAR ALARM (WCL)
301	POWER SYSTEM SW. (WCL)

CIRCUIT NUMBER CODE

No.	DESCRIPTION
302	DOOR AJAR T.T.LT. (WCL)
302A	DOOR AJAR ALARM SIGN.(WCL)
302B	DOOR AJAR MAGN.SW. (WCL)
303	REMOTE WALL SW. DWN (WCL)
304	REMOTE WALL SW. UP (WCL)
305	PARK. BRAKE SOL. VALVE (WCL)
305A	PARK. BRAKE SAFETY SW. (WCL)
306	CONTROL SYSTEM (WCL RICON)
307	CONTROL SYSTEM (WCL RICON)
308	CONTROL SYSTEM (WCL RICON)
309	CONTROL SYSTEM (WCL RICON)
310	EATON TRANSMISSION
311	EATON TRANSMISSION
312	EATON TRANSMISSION
313	EATON TRANSMISSION
314	EATON TRANSMISSION
315	EATON TRANSMISSIOM
316	EATON TRANSMISSION - EPL
317	EATON TRANSMISSION
318	EATON TRANSMISSION
319	EATON TRANSMISSION
320	EATON TRANSMISSION
321	EATON TRANSMISSION
322	EATON TRANSMISSIION
323	EATON TRANSMISSION
324	EATON TRANSMISSION
325	EATON TRANSMISSION
326	EATON TRANSMISSION
327	EATON TRANSMISSION
328	EATON TRANSMISSION
329	EATON TRANSMISSION
330	EATON TRANSMISSION - EPL
331	EATON TRANSMISSION - EPL
332	EATON TRANSMISSION
333	EATON TRANSMISSION - 12V BATTERY
334	EATON GENERATION 2
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE
540	DDEC III-CRUISE ENABLE LTS.
541	DDEC III-CRUISE SET SW
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
583	DDEC III-ENGINE BRAKE 4 CYL.
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
925	J1939-HIGH
926	J1939-LOW
927	J1939-SHIELD
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
979	DDEC III-ENGINE BRAKE 2 CYL.

No.	DESCRIPTION

No.	DESCRIPTION

CIRCUIT NUMBER CODE

No.	DESCRIPTION
B A	INTERIOR LTS-110V FLUORESCENT
B B	INTERIOR LTS-110V FLUORESCENT
D 1	SOUND SYSTEM-FR RH SPEAKER
D 2	SOUND SYSTEM-FR RH SPEAKER
D 3	SOUND SYSTEM-FR RH SPEAKER
D 4	SOUND SYSTEM-RR RH SPEAKER
D 5	SOUND SYSTEM-RR RH SPEAKER
D 6	SOUND SYSTEM-RR RH SPEAKER
D 7	SOUND SYSTEM-RR RH SPEAKER
D 8	SOUND SYSTEM-RR RH SPEAKER
D 3 4	SOUND SYSTEM-RR RH SPEAKER
D 6 7	SOUND SYSTEM-RR RH SPEAKER
G 1	SOUND SYSTEM-FR LH SPEAKER
G 2	SOUND SYSTEM-FR LH SPEAKER
G 3	SOUND SYSTEM-FR LH SPEAKER
G 4	SOUND SYSTEM-RR LH SPEAKER
G 5	SOUND SYSTEM-RR LH SPEAKER
G 6	SOUND SYSTEM-RR LH SPEAKER
G 7	SOUND SYSTEM-RR LH SPEAKER
G 8	SOUND SYSTEM-RR LH SPEAKER
G 3 4	SOUND SYSTEM-RR LH SPEAKER
G 6 7	SOUND SYSTEM-RR LH SPEAKER
L 1 A	INTERIOR LTS-110V FLUORESCENT
L 1 B	INTERIOR LTS-110V FLUORESCENT
L 2 A	INTERIOR LTS-110V FLUORESCENT
L 2 B	INTERIOR LTS-110V FLUORESCENT
L 0	110V RECEPTACLE- 110V FLUOR.
L 1	110V RECEPTACLE- 110V FLUOR.
L 2	110V RECEPTACLE- 110V FLUOR.
R A	INTERIOR LTS-110V FLUORESCENT
R B	INTERIOR LTS-110V FLUORESCENT
S H 1	SHIELD CHASSIS GRD
S H 2	SHIELD CHASSIS GRD
S H 3	SHIELD CHASSIS GRD
S H 4	SHIELD CHASSIS GRD
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 10	SPARE-RJB TO LUGG CPT #1
S P 11	SPARE-FJB TO RJB
S P 12	SPARE-RJB TO ENGINE
S P 13	SPARE-RJB TO ENGINE
S P 14	SPARE-FJB TO RJB
S P 15	SPARE-RJB TO ENGINE
S P 16	SPARE-RJB TO ENGINE

No.	DESCRIPTION
S P 17	SPARE-RJB TO ENGINE
S P 18	SPARE-FJB TO RJB
S P 24	SPARE-RJB TO LAVATORY ROOF
S P 25	SPARE-RJB TO LAVATORY ROOF
S P 26	SPARE-RJB TO LAVATORY ROOF
S P 27	SPARE-RJB TO LH HAT RACK
S P 28	SPARE-RJB TO LH HAT RACK
S P 31	SPARE-RJB TO RH HAT RACK
S P 32	SPARE-RJB TO RH HAT RACK
S P 33	SPARE-FJB TO RJB
S P 38	SPARE-FJB TO RJB
S P 43	SPARE-FJB TO RJB
S P 45	SPARE-FJB TO RJB
S P 46	SPARE-RJB TO LH FR ROOF
S P 48	SPARE-RJB TO DASH CENTER PANEL
S P 56	SPARE-ENGINE TO RH SW PANEL
S P 57	SPARE-DASH CENTER PANEL TO ENG.
S P 58	SPARE-DASH CENTER PANEL TO ENG.
S P 59	SPARE-FJB TO ENGINE
S P 61	SPARE-FJB TO DASH RH PANEL
S P 68	SPARE-FJB TO ENGINE
S P 69	SPARE-FJB TO FR AXLE
S P 70	SPARE-FJB TO FR AXLE
S P 71	SPARE-FJB TO RH SW PANEL
S P 72	SPARE-FJB TO FR SERV CPT
S P 74	SPARE-FJB TO LH CONSOLE
S P 77	SPARE-FJB TO EVAPORATOR CPT
S P 78	SPARE-FJB TO CONDENSER CPT
S P 79	SPARE-FJB TO CONDENSER CPT
S P 87	SPARE-RJB TO LH HAT RACK
S P 88	SPARE-RJB TO RH HAT RACK
S P 92	SPARE-RJB TO CONDENSER CPT
S P 93	SPARE-RJB TO EVAPORATOR CPT
S P 94	SPARE-RJB TO RR ROOF
S P 95	SPARE-RJB TO RR ROOF
S P 96	SPARE-RJB TO LUGG CPT #2
S P 97	SPARE-RJB TO LUGG CPT #3
S P 98	SPARE-RJB TO LUGG CPT #3
S P 104	SPARE-RJB TO ENGINE CPT
S P 105	SPARE-FJB TO ENGINE
S P 106	SPARE-RJB TO BATT. CPT.
S P 107	SPARE-RJB TO BATT. CPT.
S P 108	SPARE-RJB TO BATT. CPT.
S P 109	SPARE-RJB TO ENGINE CPT.
S P 110	SPARE-RJB TO ENGINE CPT.
S P 111	SPARE-RJB TO ENGINE CPT.
S P 112	SPARE-RJB TO ENGINE CPT.
S P 114	SPARE-FJB TO U/DASH WIPER
S P 115	SPARE-FJB TO U/DASH WIPER
S P 116	SPARE-FJB TO U/DASH FLOOR

No.	DESCRIPTION
S P 117	SPARE-FJB TO U/DASH FLOOR
W C	A/C & HEAT SYST-EVAP CTR SIGN
Y C	INTERIOR LTS-110V FLUORESCENT
Y D	INTERIOR LTS-110V FLUORESCENT
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0	GALLEY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A	A/C SYSTEM-EVAP. GRN
0 A A	RS - VOLTAGE REGULATOR GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN EVAP. & CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 E	RS - HAT RACK ACCES. LH GRD
0 E A	EATON TRANSMISSION GRD
0 F	RS - HAT RACK ACCES. RH GRD
0 G	RS - HAT RACK ACCES. RH GRD
0 H	RS - LAVATORY ACCES. GRD
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR (SEDAN) GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD

No.	DESCRIPTION
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	FS - SOUND SYS. JCT PANEL GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R E	RADIO &CTRL HEAD CHASSIS GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN - GND RELAY
0 S A	EC-BOSCH ALT. GROUND
0 S 2	SOUND SYSTEM RADIO GRD
0 S 3	SOUND SYSTEM VIDEO GRD
0 S S	SOUNS SYSTEM BATT. GRD
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 T 5	FS - HVAC DASH MODULE. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS FR JCT BOX CPT GRD STUD
0 Z	RR JCT BOX CPT GRD STUD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 A	A/C & HEAT SYSTEM-COOL 1 SIGN
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 B B	A/C & HEAT SYSTEM-COOL SIGN
2 H	A/C & HEAT SYSTEM-HI PRESS SW
2 E	A/C & HEAT SYSTEM EVAP CONT
2 F	A/C & HEAT SYSTEM EVAP CONT
2 H L	A/C & HEAT SYSTEM-LO & HI PRESS SW
2 L	A/C & HEAT SYSTEM-LO PRESS SW
4	HOSTESS & PASSENGER CHIME

CIRCUIT NUMBER CODE

No.	DESCRIPTION
4 A	HOSTESS & PASSENGER CHIME
4 B	PASSENGER CHIME
4 C	HOSTESS CHIME
5	INTERIOR LTS-AISLE & EMERG. EXIT
5	UPPER WINDSHIELD DEFROSTER
5 D	UPPER WINDSHIELD DEFROSTER
5 E	UPPER WINDSHIELD DEFROSTER
5 N	INTERIOR LTS-EMERGENCY EXIT
5 NC	SPEED SIGNAL LOWER 5MPH
5 NO	SPEED SIGNAL HIGHER 5MPH
6	INTERIOR LTS-AISLE
7 B	ENTRANCE DOOR (SEDAN)
7 D	ENTRANCE DOOR (SEDAN)
7 DA	ENTRANCE DOOR (SEDAN)
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
10	INTERIOR LTS-LUGGAGE CPT
10 A	INTERIOR LTS-LUGGAGE CPT
10 B	INTERIOR LTS-LUGGAGE CPT
10 D	INTERIOR LTS-LUGGAGE CPT
10 F	INTERIOR LTS-LUGGAGE CPT
10 H	INTERIOR LTS-LUGGAGE CPT
10 K	INTERIOR LTS-LUGGAGE CPT
10 R	INTERIOR LTS-LUGGAGE DOOR AJAR
11	FR DESTINATION SIGN
11 A	FR DESTINATION SIGN
11 B	FR DESTINATION SIGN
11 C	FR DESTINATION SIGN
11 D	FR DESTINATION SIGN
11 E	FR DESTINATION SIGN
11 K	FR DESTINATION SIGN
12	12V BAT ELECTRONIC JCT BLOCK
12	BAT CPT 12V BATTERY
12 A	FR JCT BOX 12V DISC SW
12 A	RR JCT BOX 12V DISC SW
12 B	12V BAT ELECTRICAL JCT BLOCK
12 B	RR JCT BOX 12V DISC SW
12 B	FR JCT BOX 12V DISC SW
12 BE	BAT. EQUALIZER MONITOR
12 C	FR JCT BOX 12V DISC SW
12 C	RR JCT BOX 12V HOT WIRE
12 CE	RR JCT BOX 12V HOT WIRE
12 D	BAT CPT 12V BATTERY
12 DT	TTLT MODULE
12 E	FR JCT BOX 12V DISC SW
12 E	RR JCT BOX 12V DISC SW
12 F	BAT CPT 12V FJB & IC
12 F	FR JCT BOX 12V DISC SW
12 F	RR JCT BOX 12V DISC SW
12 G	FR JCT BOX 12V DISC SW
12 H	12 V IGNITION D.T.RUN LIGHT
12 J	FR JCT BOX 12V DISC SW
12 I	12V IGNITION DISTRIBUTION
12 I	RR JCT BOX 12V IGNITION
12 K	12 VOLT IGN. TTLT & HVAC MODULE
12 IA	12V IGNITION DISTRIBUTION
12 IA	FR JCT BOX 12V IGNITION
12 IB	FR JCT BOX 12V IGNITION
12 IF	FR JCT BOX 12V IGNITION
12 LX	CLUSTER (12V HOT WIRE)
12 P	LH CONSOLE POWER OUTLET
12 R	BAT CPT 12V DISC RLY TO RJB
12 R	MEMORY BATTERY RADIO
12 S	SOUND SYSTEM 12V RADIO
12 S1	SOUND SYSTEM 12V RADIO
12 S1A	DVD KARAOKE FEEDING
12 S2	SOUND SYSTEM 12V RADIO
12 S2A	DVD KARAOKE FEEDING
12 SB	SOUND SYSTEM 12V FEEDING
12 SS	SOUND SYSTEM 12V FEEDING
12 VA	BATTERY TO EQUALIZER 12V
12 VD	12V HOT WIRE DISTRIBUTION
12 VF	BAT CPT 12V FJB & IC
12 VI	12V IGNITION DISTRIBUTION
12 VR	BAT CPT 12V DISC RLY TO RJB
12 W	12V BATTERY DDEC III
12 W	ENTRANCE DOOR (SEDAN)
12 WA	ENTRANCE DOOR (SEDAN)
12 X	FR JCT BOX 12V DISC SW
12 X2	FR JCT BOX 12V DISC SW
12 Y	FR JCT BOX 12V DISC SW
13 A	ALARM & SIGNAL-LO AIR PRIM.
13 B	ALARM & SIGNAL-LO AIR SEC.
14	LAVATORY-FLUSHING PUMP
14 A	LAVATORY-FLUSHING PUMP
15	EXTERIOR LTS-MULTI FUNC LEVEL
15 A	WIPER & WASHER UPPER WINDSHIELD
16	SPEED - SIGNAL +
16 A	SPEED - SIGNAL +
16 T	SPEED - SIGNAL +
17	EXTERIOR LTS-FLASHER UNIT
17 A	EXTERIOR LTS-FLASHER UNIT
19	DIFFERENTIAL OIL TEMP
20	SPEED - SIGNAL -
20 T	SPEED - SIGNAL -
20 W	SPEED - SIGNAL -
21	EXTERIOR LTS-DIRECTIONNAL LH
21 A	EXTERIOR LTS-DIRECTIONNAL LH
21 B	EXTERIOR LTS-HAZARD
21 C	EXTERIOR LTS-CORNERING LH
21 H	EXTERIOR LTS-DIRECTIONNAL LH
21 K	EXTERIOR LTS-CORNERING
21 N	EXTERIOR LTS-CORNERING LH
21 P	EXTERIOR LTS-CORNERING LH
23	EXTERIOR LTS-DIRECTIONNAL RH
23	EXTERIOR LTS-DIRECTIONNAL RH
23 A	EXTERIOR LTS-DIRECTIONNAL RH
23 B	EXTERIOR LTS-DIRECTIONNAL RH
23 C	EXTERIOR LTS-CORNERING RH
23 N	EXTERIOR LTS-CORNERING RH
23 P	EXTERIOR LTS-CORNERING RH
24	BAT CPT 24V BATTERY
24	FR JCT BOX 24V DISC SW
24 A	BOOSTER BLOCK 24V DISC SW
24 A	FR JCT BOX 24V DISC SW
24 A	RR JCT BOX 24V DISC SW
24 B	24V STARTER RLY FEEDING
24 B	FR JCT BOX 24V DISC SW
24 B	RR JCT BOX 24V DISC SW
24 BC	24 VOLT BATT. CHARGER
24 BE	RJB CPT-BAT EQ MONITOR HOT WIRE
24 C	FR JCT BOX 24V DISC SW
24 C	RR JCT BOX 24V DISC SW
24 D	BAT CPT 24V HOT WIRE
24 D	FR JCT BOX 24V HOT WIRE
24 D	RR JCT BOX 24V HOT WIRE
24 DA	A/C JCT BOX 24V HOT WIRE
24 E	BAT CPT 24V DISC SW
24 E	FR JCT BOX 24V DISC SW
24 E	RR JCT BOX 24V DISC SW
24 F	FR JCT BOX 24V DISC SW
24 F	RR JCT BOX 24V DISC SW
24 G	FR JCT BOX 24V DISC SW
24 G	RR JCT BOX 24V DISC SW
24 H	FR JCT BOX 24V DISC SW
24 H	RR JCT BOX 24V DISC SW
24 I	FR JCT BOX 24V IGNITION
24 I	RR JCT BOX 24V IGNITION
24 IA	FR JCT BOX 24V IGNITION
24 IA	RR JCT BOX 24V IGNITION
24 IB	FR JCT BOX 24V IGNITION
24 IB	RR JCT BOX 24V IGNITION
24 IC	FR JCT BOX 24V IGNITION
24 IF	FJB 24VOLT IGNITION
24 P	FR JCT BOX 24V DISC SW
24 S	24V DISC SW RLY SIGNAL
24 S1	SOUND SYSTEM 24V AMPLIFIER
24 S2	SOUND SYSTEM 24V AMPLIFIER
24 S3	SOUND SYSTEM 24V VIDEO
24 S4	SOUND SYSTEM 24V VIDEO
24 SB	SOUND SYSTEM 24V FEEDING
24 SS	SOUND SYSTEM 24V FEEDING
24 R	24 VOLTS FRONT CAMERA SW.
24 V2	RR JCT BOX 24V DISC SW
24 V3	RR JCT BOX 24V DISC SW
24 V4	RR JCT BOX 24V DISC SW
24 V5	RR JCT BOX 24V DISC SW
24 VD	24V HOT WIRE DISTRIBUTION
24 VF	BAT CPT 24V SW TO FJB & IC
24 VA	BATTERY TO EQUALIZER 24V
24 VI	RR JCT BOX 24V IGNITION
24 VR	BAT CPT 24V DISC SW TO RJB
24 W	RR JCT BOX 24V DISC SW (WCL)
24 WC	BATT.CPT TO HYD. PUMP (WCL)
24 WL	24V BATTERY-HYD. PUMP (WCL)
25 A1	PRE-EXITATION ALT. BOSCH #1
25 A2	PRE-EXITATION ALT. BOSCH #2
25 A	T.T. LT. ALTERNATOR #1
25 B	12 VOLTS IGN. ALT. SIGNAL MODULE
25 D	12 V. ENGINE RUN / HVAC SYSTEM
25 F	12 VOLT IGN. DISTRIBUTION
25 H	24 VOLT IGN. ALT. BOSCH
25 K	T.T. LT. ALTERNATOR #2
26 A	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26 B	DRIVER'S WINDOW LIFTER
26 C	DRIVER'S WINDOW LIFTER
27	LAVATORY-EMERGENCY SONALERT
28 A	A/C & HEAT SYSTEM-HI PRESSURE
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29 A	A/C & HEAT SYSTEM-DRIVER'S HTR
29 B	A/C & HEAT SYSTEM-DRIVER'S HTR
29 H	HVAC DASH MODULE
30 A	GALLEY
31 A	A/C & HEAT SYSTEM-UNLOADER
31 B	A/C & HEAT SYSTEM-UNLOADER
31 B	WIPER & WASHER SYSTEM
31 C	WIPER & WASHER SYSTEM
31 D	WIPER & WASHER SYSTEM
31 E	WIPER & WASHER SYSTEM
31 J	WIPER & WASHER SYSTEM
31 X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32 B	EXTERIOR LTS-BACK-UP
32 C	BACK-UP PWR & SIGNAL
32 D	BACK-UP ALARM
35	ENTRANCE DOOR (SEDAN)

CIRCUIT NUMBER CODE

No.	DESCRIPTION
35B	ENTRANCE DOOR (SEDAN)
35BB	ENTRANCE DOOR (SEDAN)
35D	ENTRANCE DOOR (SEDAN)
36	JACOB BRAKE SYSREM
36A	JACOB BRAKE SYSREM
38	INTERIOR LTS-24V FLUORESCENT
38A	INTERIOR LTS-24V FLUORESCENT
38C	INTERIOR LTS-24V FLUORESCENT
38D	INTERIOR LTS-24V FLUORESCENT
39	INTERIOR LTS-24V LH CONSOLE SW
39A	INTERIOR LTS-DRIVER"S LTS
39P	READING LIGHTS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
43	HAT RACK FAN
43A	HAT RACK FAN
43B	HAT RACK FAN
43D	HAT RACK FAN
43E	HAT RACK FAN
43F	HAT RACK FAN
43G	HAT RACK FAN
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45B	A/C & HEAT SYSTEM-HEAT SIGN
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
48	ENTRANCE DOOR (SEDAN)
48A	ENTRANCE DOOR (SEDAN)
49	ENTRANCE DOOR (SEDAN)
49A	ENTRANCE DOOR (SEDAN)
50	AIR DRYER
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL- AIR HORN
52C	ALARM & SIGNAL- AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
57CA	A/C & HEAT SYSTEM-HEAT SIGN
57CC	A/C & HEAT SYSTEM-HEAT SIGN
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
62	LAVATORY-OCCUPIED LT
62A	LAVATORY-FLUOR LT
62B	LAVATORY-FLUOR LT
62E	LAVATORY-OCCUP & FLUOR LT
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVERS FAN
64B	DRIVERS FAN
64C	DRIVERS FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65P	PASSENGER REC. DAMPER
65D	DRIVER REC. DAMPER
66	O_PASS. ON/OFF
67	24 VOLT RUN DISTRIBUTION
67A	A/C & HEAT SYSTEM
67B	A/C & HEAT SYSTEM
67C	HEATING WINDSHIELD
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67V	A/C & HEAT SYSTEM-WATER VALVE
67X	A/C & HEAT SYSTEM
68	DASH & DEFROST DAMPER MOTOR
68A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH
72C	SUN VISOR-LH
72D	SUN VISOR-LH
73	LAVATORY-FEEDING
74	INTERIOR LTS-READING RH
74A	INTERIOR LTS-READING RH
74D	INTERIOR LTS-READING SIGNAL
75	INTERIOR LTS-READING LH
75A	INTERIOR LTS-READING LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77	A/C & HEAT SYSTEM-HI PRESSURE
77A	A/C & HEAT SYSTEM-DRIVER'S HTR
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85W	24V IGN ANTI SKID
85X	24V IGN ANTI SKID
85Y	ANTI SKID-WARNING LT
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
100	INTERIOR LTS-GENERAL
100A	INTERIOR LTS-GENERAL
100B	INTERIOR LTS-GENERAL
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	WORLD TRANSM-SOL. SUPPLY
102A	24V STARTER TO BOSCH ALTERNATOR
103	LOW BUOY
104	WORLD TRANSM-SOL. FORWARD
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR

CIRCUIT NUMBER CODE

No.	DESCRIPTION
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125	GALLEY LAMP
125T	GALLEY LAMP
125W	WORLD TRANSM-RET. INDICATOR
126	KNEELING SYSTEM
126A	KNEELING SYSTEM
126B	KNEELING SYSTEM
126C	KNEELING SYSTEM
126D	KNEELING SYSTEM
126E	KNEELING SYSTEM
126F	KNEELING SYSTEM
126G	KNEELING SYSTEM
126H	KNEELING SYSTEM
126K	KNEELING SYSTEM
126P	KNEELING SYSTEM
126R	KNEELING SYSTEM
126W	5 MPH N.C. SIGNAL (WCL)
126S	KNEELING SYSTEM
126T	KNEELING SYSTEM
127	WORLD TRANSM-LUBE PRESS SW.
127	PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
127B	PRE-HEAT WATER HEATER
127	WORLD TRANSM-RETARDER FEED SOL.
127S	PRE-HEAT WATER HEATER
127W	PRE-HEAT WATER HEATER
128	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT WATER HEATER
128W	PRE-HEAT WATER HEATER
128	WORLD TRANSM-SOL. C2
129	PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	A/C & HEAT SYSTEM-EVAP FAN MOTOR
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	GALLEY-HEAT CONTAINERS
133A	GALLEY-HEAT CONTAINERS
133B	GALLEY-HEAT CONTAINERS
133C	GALLEY-HEAT CONTAINERS
133	WORLD TRANSM-RET. ACTUATOR HI
134	GALLEY-HEAT CONTAINERS
134A	GALLEY-HEAT CONTAINERS
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135A	A/C & HEAT SYSTEM-AIR SENSOR
135D	A/C & HEAT SYSTEM-AIR SENSOR
135C	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	GALLEY-ACCESSORIES
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146A	TRANSMISSION-12V IGNITION
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	WORLD TRANSM-OIL TEMP
147A	ETHER COLD START & D.R.L.
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
151A	ABS SYSTEM
152	ABS SYSTEM
152A	ABS SYSTEM
153	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	ABS SYSTEM
155	WORLD TRANSM-SPARE INPUT (-)
156	ABS SYSTEM
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157A	ABS SYSTEM
157B	ABS SYSTEM
157D	A.T.C. SYSTEM
157E	A.T.C. SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
165A	A/C & HEAT SYSTEM-TRANSMITER
165B	A/C & HEAT SYSTEM-TRANSMITER
165C	A/C & HEAT SYSTEM-TRANSMITER
165D	A/C & HEAT SYSTEM-TRANSMITER
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	A/C & HEAT SYSTEM-TEMP. CTR
167A	A/C & HEAT SYSTEM-TEMP. CTR
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170	LUGGAGE DOOR LOCK
170C	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
225	LAVATORY FAN
225A	LAVATORY FAN
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251A	DDEC III - DATA LOGGER 12 H.W.
251	DDEC III - PRODRIVER 12V H.W.
253	GALLEY-MICROWAVE
254	GALLEY-12V FRIGO NORCOLD
254A	GALLEY-FRIGO
255	GALLEY-COFEEMAKER
255A	GALLEY-COFEEMAKER
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
260	WINDOW AJAR
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
292	FAN CLUTCH RADIATOR SPD 2
300	DOOR AJAR MAGN.SW. (WCL)
300A	POWER SYSTEM SW. (WCL)

CIRCUIT NUMBER CODE

No.	DESCRIPTION
300B	DOOR AJAR ALARM (WCL)
301	POWER SYSTEM SW. (WCL)
302	DOOR AJAR T.T.LT. (WCL)
302A	DOOR AJAR ALARM SIGN.(WCL)
302B	DOOR AJAR MAGN.SW. (WCL)
303	REMOTE WALL SW. DWN (WCL)
304	REMOTE WALL SW. UP (WCL)
305	PARK. BRAKE SOL. VALVE (WCL)
305A	PARK. BRAKE SAFETY SW. (WCL)
306	CONTROL SYSTEM (WCL RICON)
307	CONTROL SYSTEM (WCL RICON)
308	CONTROL SYSTEM (WCL RICON)
309	CONTROL SYSTEM (WCL RICON)
310	EATON TRANSMISSION
311	EATON TRANSMISSION
312	EATON TRANSMISSION
313	EATON TRANSMISSION
314	EATON TRANSMISSION
315	EATON TRANSMISSIOM
316	EATON TRANSMISSION - EPL
317	EATON TRANSMISSION
318	EATON TRANSMISSION
319	EATON TRANSMISSION
320	EATON TRANSMISSION
321	EATON TRANSMISSION
322	EATON TRANSMISSIION
323	EATON TRANSMISSION
324	EATON TRANSMISSION
325	EATON TRANSMISSION
326	EATON TRANSMISSION
327	EATON TRANSMISSION
328	EATON TRANSMISSION
329	EATON TRANSMISSION
330	EATON TRANSMISSION - EPL
331	EATON TRANSMISSION - EPL
332	EATON TRANSMISSION
333	EATON TRANSMISSION - 12V BATTERY
334	EATON GENERATION 2
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE

No.	DESCRIPTION
531	DDEC III-CRUISE CLUTCH RELEASE
540	DDEC III-CRUISE ENABLE LTS.
541	DDEC III-CRUISE SET SW
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
583	DDEC III-ENGINE BRAKE 4 CYL.
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
925	J1939-HIGH
926	J1939-LOW
927	J1939-SHIELD
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
979	DDEC III-ENGINE BRAKE 2 CYL.

No.	DESCRIPTION

No.	DESCRIPTION

CIRCUIT NUMBER CODE

No.	DESCRIPTION
B A	INTERIOR LTS-110V FLUORESCENT
B B	INTERIOR LTS-110V FLUORESCENT
D 1	SOUND SYSTEM-FR RH SPEAKER
D 2	SOUND SYSTEM-FR RH SPEAKER
D 3	SOUND SYSTEM-FR RH SPEAKER
D 4	SOUND SYSTEM-RR RH SPEAKER
D 5	SOUND SYSTEM-RR RH SPEAKER
D 6	SOUND SYSTEM-RR RH SPEAKER
D 7	SOUND SYSTEM-RR RH SPEAKER
D 8	SOUND SYSTEM-RR RH SPEAKER
D 3 4	SOUND SYSTEM-RR RH SPEAKER
D 6 7	SOUND SYSTEM-RR RH SPEAKER
G 1	SOUND SYSTEM-FR LH SPEAKER
G 2	SOUND SYSTEM-FR LH SPEAKER
G 3	SOUND SYSTEM-FR LH SPEAKER
G 4	SOUND SYSTEM-RR LH SPEAKER
G 5	SOUND SYSTEM-RR LH SPEAKER
G 6	SOUND SYSTEM-RR LH SPEAKER
G 7	SOUND SYSTEM-RR LH SPEAKER
G 8	SOUND SYSTEM-RR LH SPEAKER
G 3 4	SOUND SYSTEM-RR LH SPEAKER
G 6 7	SOUND SYSTEM-RR LH SPEAKER
L 1 A	INTERIOR LTS-110V FLUORESCENT
L 1 B	INTERIOR LTS-110V FLUORESCENT
L 2 A	INTERIOR LTS-110V FLUORESCENT
L 2 B	INTERIOR LTS-110V FLUORESCENT
L 0	110V RECEPTACLE- 110V FLUOR.
L 1	110V RECEPTACLE- 110V FLUOR.
L 2	110V RECEPTACLE- 110V FLUOR.
R A	INTERIOR LTS-110V FLUORESCENT
R B	INTERIOR LTS-110V FLUORESCENT
S H 1	SHIELD CHASSIS GRD
S H 2	SHIELD CHASSIS GRD
S H 3	SHIELD CHASSIS GRD
S H 4	SHIELD CHASSIS GRD
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 10	SPARE-RJB TO LUGG CPT #1
S P 11	SPARE-FJB TO RJB
S P 12	SPARE-RJB TO ENGINE
S P 13	SPARE-RJB TO ENGINE
S P 14	SPARE-FJB TO RJB
S P 15	SPARE-RJB TO ENGINE
S P 16	SPARE-RJB TO ENGINE

No.	DESCRIPTION
S P 17	SPARE-RJB TO ENGINE
S P 18	SPARE-FJB TO RJB
S P 24	SPARE-RJB TO LAVATORY ROOF
S P 25	SPARE-RJB TO LAVATORY ROOF
S P 26	SPARE-RJB TO LAVATORY ROOF
S P 27	SPARE-RJB TO LH HAT RACK
S P 28	SPARE-RJB TO LH HAT RACK
S P 31	SPARE-RJB TO RH HAT RACK
S P 32	SPARE-RJB TO RH HAT RACK
S P 33	SPARE-FJB TO RJB
S P 38	SPARE-FJB TO RJB
S P 43	SPARE-FJB TO RJB
S P 45	SPARE-FJB TO RJB
S P 46	SPARE-RJB TO LH FR ROOF
S P 48	SPARE-RJB TO DASH CENTER PANEL
S P 56	SPARE-ENGINE TO RH SW PANEL
S P 57	SPARE-DASH CENTER PANEL TO ENG.
S P 58	SPARE-DASH CENTER PANEL TO ENG.
S P 59	SPARE-FJB TO ENGINE
S P 61	SPARE-FJB TO DASH RH PANEL
S P 68	SPARE-FJB TO ENGINE
S P 69	SPARE-FJB TO FR AXLE
S P 70	SPARE-FJB TO FR AXLE
S P 71	SPARE-FJB TO RH SW PANEL
S P 72	SPARE-FJB TO FR SERV CPT
S P 74	SPARE-FJB TO LH CONSOLE
S P 77	SPARE-FJB TO EVAPORATOR CPT
S P 78	SPARE-FJB TO CONDENSER CPT
S P 79	SPARE-FJB TO CONDENSER CPT
S P 87	SPARE-RJB TO LH HAT RACK
S P 88	SPARE-RJB TO RH HAT RACK
S P 92	SPARE-RJB TO CONDENSER CPT
S P 93	SPARE-RJB TO EVAPORATOR CPT
S P 94	SPARE-RJB TO RR ROOF
S P 95	SPARE-RJB TO RR ROOF
S P 96	SPARE-RJB TO LUGG CPT #2
S P 97	SPARE-RJB TO LUGG CPT #3
S P 98	SPARE-RJB TO LUGG CPT #3
S P 104	SPARE-RJB TO ENGINE CPT
S P 105	SPARE-FJB TO ENGINE
S P 106	SPARE-RJB TO BATT. CPT.
S P 107	SPARE-RJB TO BATT. CPT.
S P 108	SPARE-RJB TO BATT. CPT.
S P 109	SPARE-RJB TO ENGINE CPT.
S P 110	SPARE-RJB TO ENGINE CPT.
S P 111	SPARE-RJB TO ENGINE CPT.
S P 112	SPARE-RJB TO ENGINE CPT.
S P 114	SPARE-FJB TO U/DASH WIPER
S P 115	SPARE-FJB TO U/DASH WIPER
S P 116	SPARE-FJB TO U/DASH FLOOR

No.	DESCRIPTION
S P 117	SPARE-FJB TO U/DASH FLOOR
W C	A/C & HEAT SYST-EVAP CTR SIGN
Y C	INTERIOR LTS-110V FLUORESCENT
Y D	INTERIOR LTS-110V FLUORESCENT
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0	GALLEY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A	A/C SYSTEM-EVAP. GRN
0 A A	RS - VOLTAGE REGULATOR GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN EVAP. & CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 E	RS - HAT RACK ACCES. LH GRD
0 E A	EATON TRANSMISSION GRD
0 F	RS - HAT RACK ACCES. RH GRD
0 G	RS - HAT RACK ACCES. RH GRD
0 H	RS - LAVATORY ACCES. GRD
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR (SEDAN) GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD

No.	DESCRIPTION
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	FS - SOUND SYS. JCT PANEL GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R E	RADIO &CTRL HEAD CHASSIS GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN - GND RELAY
0 S A	EC-BOSCH ALT. GROUND
0 S 2	SOUND SYSTEM RADIO GRD
0 S 3	SOUND SYSTEM VIDEO GRD
0 S S	SOUNS SYSTEM BATT. GRD
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 T 5	FS - HVAC DASH MODULE. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS FR JCT BOX CPT GRD STUD
0 Z	RR JCT BOX CPT GRD STUD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 A	A/C & HEAT SYSTEM-COOL 1 SIGN
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 B B	A/C & HEAT SYSTEM-COOL SIGN
2 H	A/C & HEAT SYSTEM-HI PRESS SW
2 E	A/C & HEAT SYSTEM EVAP CONT
2 F	A/C & HEAT SYSTEM EVAP CONT
2 H L	A/C & HEAT SYSTEM-LO & HI PRESS SW
2 L	A/C & HEAT SYSTEM-LO PRESS SW
4	HOSTESS & PASSENGER CHIME

CIRCUIT NUMBER CODE

No.	DESCRIPTION
4 A	HOSTESS & PASSENGER CHIME
4 B	PASSENGER CHIME
4 C	HOSTESS CHIME
5	INTERIOR LTS-AISLE & EMERG. EXIT
5	UPPER WINDSHIELD DEFROSTER
5 D	UPPER WINDSHIELD DEFROSTER
5 E	UPPER WINDSHIELD DEFROSTER
5 N	INTERIOR LTS-EMERGENCY EXIT
5 NC	SPEED SIGNAL LOWER 5MPH
5 NO	SPEED SIGNAL HIGHER 5MPH
6	INTERIOR LTS-AISLE
7 B	ENTRANCE DOOR (SEDAN)
7 D	ENTRANCE DOOR (SEDAN)
7 DA	ENTRANCE DOOR (SEDAN)
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
10	INTERIOR LTS-LUGGAGE CPT
10 A	INTERIOR LTS-LUGGAGE CPT
10 B	INTERIOR LTS-LUGGAGE CPT
10 D	INTERIOR LTS-LUGGAGE CPT
10 F	INTERIOR LTS-LUGGAGE CPT
10 H	INTERIOR LTS-LUGGAGE CPT
10 K	INTERIOR LTS-LUGGAGE CPT
10 R	INTERIOR LTS-LUGGAGE DOOR AJAR
11	FR DESTINATION SIGN
11 A	FR DESTINATION SIGN
11 B	FR DESTINATION SIGN
11 C	FR DESTINATION SIGN
11 D	FR DESTINATION SIGN
11 E	FR DESTINATION SIGN
11 K	FR DESTINATION SIGN
12	12V BAT ELECTRONIC JCT BLOCK
12	BAT CPT 12V BATTERY
12 A	FR JCT BOX 12V DISC SW
12 A	RR JCT BOX 12V DISC SW
12 B	12V BAT ELECTRICAL JCT BLOCK
12 B	RR JCT BOX 12V DISC SW
12 B	FR JCT BOX 12V DISC SW
12 BE	BAT. EQUALIZER MONITOR
12 C	FR JCT BOX 12V DISC SW
12 C	RR JCT BOX 12V HOT WIRE
12 CE	RR JCT BOX 12V HOT WIRE
12 D	BAT CPT 12V BATTERY
12 DT	TTLT MODULE
12 E	FR JCT BOX 12V DISC SW
12 E	RR JCT BOX 12V DISC SW
12 F	BAT CPT 12V FJB & IC
12 F	FR JCT BOX 12V DISC SW
12 F	RR JCT BOX 12V DISC SW
12 G	FR JCT BOX 12V DISC SW
12 H	12 V IGNITION D.T.RUN LIGHT
12 J	FR JCT BOX 12V DISC SW
12 I	12V IGNITION DISTRIBUTION
12 I	RR JCT BOX 12V IGNITION
12 K	12 VOLT IGN. TTLT & HVAC MODULE
12 IA	12V IGNITION DISTRIBUTION
12 IA	FR JCT BOX 12V IGNITION
12 IB	FR JCT BOX 12V IGNITION
12 IF	FR JCT BOX 12V IGNITION
12 LX	CLUSTER (12V HOT WIRE)
12 P	LH CONSOLE POWER OUTLET
12 R	BAT CPT 12V DISC RLY TO RJB
12 R	MEMORY BATTERY RADIO
12 S	SOUND SYSTEM 12V RADIO
12 S1	SOUND SYSTEM 12V RADIO
12 S1A	DVD KARAOKE FEEDING
12 S2	SOUND SYSTEM 12V RADIO
12 S2A	DVD KARAOKE FEEDING
12 SB	SOUND SYSTEM 12V FEEDING
12 SS	SOUND SYSTEM 12V FEEDING
12 VA	BATTERY TO EQUALIZER 12V
12 VD	12V HOT WIRE DISTRIBUTION
12 VF	BAT CPT 12V FJB & IC
12 VI	12V IGNITION DISTRIBUTION
12 VR	BAT CPT 12V DISC RLY TO RJB
12 W	12V BATTERY DDEC III
12 W	ENTRANCE DOOR (SEDAN)
12 WA	ENTRANCE DOOR (SEDAN)
12 X	FR JCT BOX 12V DISC SW
12 X2	FR JCT BOX 12V DISC SW
12 Y	FR JCT BOX 12V DISC SW
13 A	ALARM & SIGNAL-LO AIR PRIM.
13 B	ALARM & SIGNAL-LO AIR SEC.
14	LAVATORY-FLUSHING PUMP
14 A	LAVATORY-FLUSHING PUMP
15	EXTERIOR LTS-MULTI FUNC LEVEL
15 A	WIPER & WASHER UPPER WINDSHIELD
16	SPEED - SIGNAL +
16 A	SPEED - SIGNAL +
16 T	SPEED - SIGNAL +
17	EXTERIOR LTS-FLASHER UNIT
17 A	EXTERIOR LTS-FLASHER UNIT
19	DIFFERENTIAL OIL TEMP
20	SPEED - SIGNAL -
20 T	SPEED - SIGNAL -
20 W	SPEED - SIGNAL -
21	EXTERIOR LTS-DIRECTIONNAL LH
21 A	EXTERIOR LTS-DIRECTIONNAL LH
21 B	EXTERIOR LTS-HAZARD
21 C	EXTERIOR LTS-CORNERING LH
21 H	EXTERIOR LTS-DIRECTIONNAL LH
21 K	EXTERIOR LTS-CORNERING
21 N	EXTERIOR LTS-CORNERING LH
21 P	EXTERIOR LTS-CORNERING LH
23	EXTERIOR LTS-DIRECTIONNAL RH
23	EXTERIOR LTS-DIRECTIONNAL RH
23 A	EXTERIOR LTS-DIRECTIONNAL RH
23 B	EXTERIOR LTS-DIRECTIONNAL RH
23 C	EXTERIOR LTS-CORNERING RH
23 N	EXTERIOR LTS-CORNERING RH
23 P	EXTERIOR LTS-CORNERING RH
24	BAT CPT 24V BATTERY
24	FR JCT BOX 24V DISC SW
24 A	BOOSTER BLOCK 24V DISC SW
24 A	FR JCT BOX 24V DISC SW
24 A	RR JCT BOX 24V DISC SW
24 B	24V STARTER RLY FEEDING
24 B	FR JCT BOX 24V DISC SW
24 B	RR JCT BOX 24V DISC SW
24 BC	24 VOLT BATT. CHARGER
24 BE	RJB CPT-BAT EQ MONITOR HOT WIRE
24 C	FR JCT BOX 24V DISC SW
24 C	RR JCT BOX 24V DISC SW
24 D	BAT CPT 24V HOT WIRE
24 D	FR JCT BOX 24V HOT WIRE
24 D	RR JCT BOX 24V HOT WIRE
24 DA	A/C JCT BOX 24V HOT WIRE
24 E	BAT CPT 24V DISC SW
24 E	FR JCT BOX 24V DISC SW
24 E	RR JCT BOX 24V DISC SW
24 F	FR JCT BOX 24V DISC SW
24 F	RR JCT BOX 24V DISC SW
24 G	FR JCT BOX 24V DISC SW
24 G	RR JCT BOX 24V DISC SW
24 H	FR JCT BOX 24V DISC SW
24 H	RR JCT BOX 24V DISC SW
24 I	FR JCT BOX 24V IGNITION
24 I	RR JCT BOX 24V IGNITION
24 IA	FR JCT BOX 24V IGNITION
24 IB	FR JCT BOX 24V IGNITION
24 IB	RR JCT BOX 24V IGNITION
24 IC	FR JCT BOX 24V IGNITION
24 IF	FJB 24VOLT IGNITION
24 P	FR JCT BOX 24V DISC SW
24 S	24V DISC SW RLY SIGNAL
24 S1	SOUND SYSTEM 24V AMPLIFIER
24 S2	SOUND SYSTEM 24V AMPLIFIER
24 S3	SOUND SYSTEM 24V VIDEO
24 S4	SOUND SYSTEM 24V VIDEO
24 SB	SOUND SYSTEM 24V FEEDING
24 SS	SOUND SYSTEM 24V FEEDING
24 R	24 VOLTS FRONT CAMERA SW.
24 V2	RR JCT BOX 24V DISC SW
24 V3	RR JCT BOX 24V DISC SW
24 V4	RR JCT BOX 24V DISC SW
24 V5	RR JCT BOX 24V DISC SW
24 VD	24V HOT WIRE DISTRIBUTION
24 VF	BAT CPT 24V SW TO FJB & IC
24 VA	BATTERY TO EQUALIZER 24V
24 VI	RR JCT BOX 24V IGNITION
24 VR	BAT CPT 24V DISC SW TO RJB
24 W	RR JCT BOX 24V DISC SW (WCL)
24 WC	BATT.CPT TO HYD. PUMP (WCL)
24 WL	24V BATTERY-HYD. PUMP (WCL)
25	24 VOLT ALT.SIGNAL MODULE
25 A1	PRE-EXITATION ALT. BOSCH #1
25 A2	PRE-EXITATION ALT. BOSCH #2
25 A	T.T. LT. ALTERNATOR #1
25 B	12 VOLTS IGN. ALT. SIGNAL MODULE
25 D	12 V. ENGINE RUN / HVAC SYSTEM
25 F	12 VOLT IGN. DISTRIBUTION
25 H	24 VOLT IGN. ALT. BOSCH
25 K	T.T. LT. ALTERNATOR #2
26 A	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26 B	DRIVER'S WINDOW LIFTER
26 C	DRIVER'S WINDOW LIFTER
27	LAVATORY-EMERGENCY SONALERT
28 A	A/C & HEAT SYSTEM-HI PRESSURE
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29 A	A/C & HEAT SYSTEM-DRIVER'S HTR
29 B	A/C & HEAT SYSTEM-DRIVER'S HTR
29 H	HVAC DASH MODULE
30 A	GALLEY
31 A	A/C & HEAT SYSTEM-UNLOADER
31 B	A/C & HEAT SYSTEM-UNLOADER
31 B	WIPER & WASHER SYSTEM
31 C	WIPER & WASHER SYSTEM
31 D	WIPER & WASHER SYSTEM
31 E	WIPER & WASHER SYSTEM
31 J	WIPER & WASHER SYSTEM
31 X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32 B	EXTERIOR LTS-BACK-UP
32 C	BACK-UP PWR & SIGNAL
32 D	BACK-UP ALARM
35	ENTRANCE DOOR (SEDAN)

CIRCUIT NUMBER CODE

No.	DESCRIPTION
35B	ENTRANCE DOOR (SEDAN)
35BB	ENTRANCE DOOR (SEDAN)
35D	ENTRANCE DOOR (SEDAN)
36	JACOB BRAKE SYSREM
36A	JACOB BRAKE SYSREM
38	INTERIOR LTS-24V FLUORESCENT
38A	INTERIOR LTS-24V FLUORESCENT
38C	INTERIOR LTS-24V FLUORESCENT
38D	INTERIOR LTS-24V FLUORESCENT
39	INTERIOR LTS-24V LH CONSOLE SW
39A	INTERIOR LTS-DRIVER"S LTS
39P	READING LIGHTS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
43	HAT RACK FAN
43A	HAT RACK FAN
43B	HAT RACK FAN
43D	HAT RACK FAN
43E	HAT RACK FAN
43F	HAT RACK FAN
43G	HAT RACK FAN
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45B	A/C & HEAT SYSTEM-HEAT SIGN
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
48	ENTRANCE DOOR (SEDAN)
48A	ENTRANCE DOOR (SEDAN)
49	ENTRANCE DOOR (SEDAN)
49A	ENTRANCE DOOR (SEDAN)
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL- AIR HORN
52C	ALARM & SIGNAL- AIR HORN
53	ALARM & SIGNAL-ELEC. HORN

No.	DESCRIPTION
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
57CA	A/C & HEAT SYSTEM-HEAT SIGN
57CC	A/C & HEAT SYSTEM-HEAT SIGN
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
62	LAVATORY-OCCUPIED LT
62A	LAVATORY-FLUOR LT
62B	LAVATORY-FLUOR LT
62E	LAVATORY-OCCUP & FLUOR LT
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVERS FAN
64B	DRIVERS FAN
64C	DRIVERS FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65P	PASSENGER REC. DAMPER
65D	DRIVER REC. DAMPER
66	O_PASS. ON/OFF
67	24 VOLT RUN DISTRIBUTION
67A	A/C & HEAT SYSTEM
67B	A/C & HEAT SYSTEM
67C	HEATING WINDSHIELD
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67V	A/C & HEAT SYSTEM-WATER VALVE
67X	A/C & HEAT SYSTEM
68	DASH & DEFROST DAMPER MOTOR
68A	DASH & DEFROST DAMPER MOTOR

No.	DESCRIPTION
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH
72C	SUN VISOR-LH
72D	SUN VISOR-LH
73	LAVATORY-FEEDING
74	INTERIOR LTS-READING RH
74A	INTERIOR LTS-READING RH
74D	INTERIOR LTS-READING SIGNAL
75	INTERIOR LTS-READING LH
75A	INTERIOR LTS-READING LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77	A/C & HEAT SYSTEM-HI PRESSURE
77A	A/C & HEAT SYSTEM-DRIVER'S HTR
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85W	24V IGN ANTI SKID
85X	24V IGN ANTI SKID
85Y	ANTI SKID-WARNING LT
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT

No.	DESCRIPTION
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
100	INTERIOR LTS-GENERAL
100A	INTERIOR LTS-GENERAL
100B	INTERIOR LTS-GENERAL
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	WORLD TRANSM-SOL. SUPPLY
102A	24V STARTER TO BOSCH ALTERNATOR
103	LOW BUOY
104	WORLD TRANSM-SOL. FORWARD
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR

CIRCUIT NUMBER CODE

No.	DESCRIPTION
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125	GALLEY LAMP
125T	GALLEY LAMP
125W	WORLD TRANSM-RET. INDICATOR
126	KNEELING SYSTEM
126A	KNEELING SYSTEM
126B	KNEELING SYSTEM
126C	KNEELING SYSTEM
126D	KNEELING SYSTEM
126E	KNEELING SYSTEM
126F	KNEELING SYSTEM
126G	KNEELING SYSTEM
126H	KNEELING SYSTEM
126K	KNEELING SYSTEM
126P	KNEELING SYSTEM
126R	KNEELING SYSTEM
126W	5 MPH N.C. SIGNAL (WCL)
126S	KNEELING SYSTEM
126T	KNEELING SYSTEM
127	WORLD TRANSM-LUBE PRESS SW.
127	PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
127B	PRE-HEAT WATER HEATER
127	WORLD TRANSM-RETARDER FEED SOL.
127S	PRE-HEAT WATER HEATER
127W	PRE-HEAT WATER HEATER
128	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT WATER HEATER
128W	PRE-HEAT WATER HEATER
128	WORLD TRANSM-SOL. C2
129	PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	A/C & HEAT SYSTEM-EVAP FAN MOTOR
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	GALLEY-HEAT CONTAINERS
133A	GALLEY-HEAT CONTAINERS
133B	GALLEY-HEAT CONTAINERS
133C	GALLEY-HEAT CONTAINERS
133	WORLD TRANSM-RET. ACTUATOR HI
134	GALLEY-HEAT CONTAINERS
134A	GALLEY-HEAT CONTAINERS
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135A	A/C & HEAT SYSTEM-AIR SENSOR
135D	A/C & HEAT SYSTEM-AIR SENSOR
135C	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	GALLEY-ACCESSORIES
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146A	TRANSMISSION-12V IGNITION
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	WORLD TRANSM-OIL TEMP
147A	ETHER COLD START & D.R.L.
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
151A	ABS SYSTEM
152	ABS SYSTEM
152A	ABS SYSTEM
153	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	ABS SYSTEM
155	WORLD TRANSM-SPARE INPUT (-)
156	ABS SYSTEM
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157A	ABS SYSTEM
157B	ABS SYSTEM
157D	A.T.C. SYSTEM
157E	A.T.C. SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
165A	A/C & HEAT SYSTEM-TRANSMITER
165B	A/C & HEAT SYSTEM-TRANSMITER
165C	A/C & HEAT SYSTEM-TRANSMITER
165D	A/C & HEAT SYSTEM-TRANSMITER
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	A/C & HEAT SYSTEM-TEMP. CTR
167A	A/C & HEAT SYSTEM-TEMP. CTR
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170	LUGGAGE DOOR LOCK
170C	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
225	LAVATORY FAN
225A	LAVATORY FAN
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251A	DDEC III - DATA LOGGER 12 H.W.
251	DDEC III - PRODRIVER 12V H.W.
253	GALLEY-MICROWAVE
254	GALLEY-12V FRIGO NORCOLD
254A	GALLEY-FRIGO
255	GALLEY-COFEEMAKER
255A	GALLEY-COFEEMAKER
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
260	WINDOW AJAR
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
292	FAN CLUTCH RADIATOR SPD 2
300	DOOR AJAR MAGN.SW. (WCL)
300A	POWER SYSTEM SW. (WCL)

CIRCUIT NUMBER CODE

No.	DESCRIPTION
300B	DOOR AJAR ALARM (WCL)
301	POWER SYSTEM SW. (WCL)
302	DOOR AJAR T.T.LT. (WCL)
302A	DOOR AJAR ALARM SIGN.(WCL)
302B	DOOR AJAR MAGN.SW. (WCL)
303	REMOTE WALL SW. DWN (WCL)
304	REMOTE WALL SW. UP (WCL)
305	PARK. BRAKE SOL. VALVE (WCL)
305A	PARK. BRAKE SAFETY SW. (WCL)
306	CONTROL SYSTEM (WCL RICON)
307	CONTROL SYSTEM (WCL RICON)
308	CONTROL SYSTEM (WCL RICON)
309	CONTROL SYSTEM (WCL RICON)
310	EATON TRANSMISSION
311	EATON TRANSMISSION
312	EATON TRANSMISSION
313	EATON TRANSMISSION
314	EATON TRANSMISSION
315	EATON TRANSMISSIOM
316	EATON TRANSMISSION - EPL
317	EATON TRANSMISSION
318	EATON TRANSMISSION
319	EATON TRANSMISSION
320	EATON TRANSMISSION
321	EATON TRANSMISSION
322	EATON TRANSMISSIION
323	EATON TRANSMISSION
324	EATON TRANSMISSION
325	EATON TRANSMISSION
326	EATON TRANSMISSION
327	EATON TRANSMISSION
328	EATON TRANSMISSION
329	EATON TRANSMISSION
330	EATON TRANSMISSION - EPL
331	EATON TRANSMISSION - EPL
332	EATON TRANSMISSION
333	EATON TRANSMISSION - 12V BATTERY
334	EATON GENERATION 2
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE
540	DDEC III-CRUISE ENABLE LTS.
541	DDEC III-CRUISE SET SW
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
583	DDEC III-ENGINE BRAKE 4 CYL.
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
925	J1939-HIGH
926	J1939-LOW
927	J1939-SHIELD
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
979	DDEC III-ENGINE BRAKE 2 CYL.

No.	DESCRIPTION

No.	DESCRIPTION

CIRCUIT NUMBER CODE

No.	DESCRIPTION
B A	INTERIOR LTS-110V FLUORESCENT
B B	INTERIOR LTS-110V FLUORESCENT
D 1	SOUND SYSTEM-FR RH SPEAKER
D 2	SOUND SYSTEM-FR RH SPEAKER
D 3	SOUND SYSTEM-FR RH SPEAKER
D 4	SOUND SYSTEM-RR RH SPEAKER
D 5	SOUND SYSTEM-RR RH SPEAKER
D 6	SOUND SYSTEM-RR RH SPEAKER
D 7	SOUND SYSTEM-RR RH SPEAKER
D 8	SOUND SYSTEM-RR RH SPEAKER
D 3 4	SOUND SYSTEM-RR RH SPEAKER
D 6 7	SOUND SYSTEM-RR RH SPEAKER
G 1	SOUND SYSTEM-FR LH SPEAKER
G 2	SOUND SYSTEM-FR LH SPEAKER
G 3	SOUND SYSTEM-FR LH SPEAKER
G 4	SOUND SYSTEM-RR LH SPEAKER
G 5	SOUND SYSTEM-RR LH SPEAKER
G 6	SOUND SYSTEM-RR LH SPEAKER
G 7	SOUND SYSTEM-RR LH SPEAKER
G 8	SOUND SYSTEM-RR LH SPEAKER
G 3 4	SOUND SYSTEM-RR LH SPEAKER
G 6 7	SOUND SYSTEM-RR LH SPEAKER
L 1 A	INTERIOR LTS-110V FLUORESCENT
L 1 B	INTERIOR LTS-110V FLUORESCENT
L 2 A	INTERIOR LTS-110V FLUORESCENT
L 2 B	INTERIOR LTS-110V FLUORESCENT
L 0	110V RECEPTACLE- 110V FLUOR.
L 1	110V RECEPTACLE- 110V FLUOR.
L 2	110V RECEPTACLE- 110V FLUOR.
R A	INTERIOR LTS-110V FLUORESCENT
R B	INTERIOR LTS-110V FLUORESCENT
S H 1	SHIELD CHASSIS GRD
S H 2	SHIELD CHASSIS GRD
S H 3	SHIELD CHASSIS GRD
S H 4	SHIELD CHASSIS GRD
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 10	SPARE-RJB TO LUGG CPT #1
S P 11	SPARE-FJB TO RJB
S P 12	SPARE-RJB TO ENGINE
S P 13	SPARE-RJB TO ENGINE
S P 14	SPARE-FJB TO RJB
S P 15	SPARE-RJB TO ENGINE
S P 16	SPARE-RJB TO ENGINE
S P 17	SPARE-RJB TO ENGINE
S P 18	SPARE-FJB TO RJB
S P 24	SPARE-RJB TO LAVATORY ROOF
S P 25	SPARE-RJB TO LAVATORY ROOF
S P 26	SPARE-RJB TO LAVATORY ROOF
S P 27	SPARE-RJB TO LH HAT RACK
S P 28	SPARE-RJB TO LH HAT RACK
S P 31	SPARE-RJB TO RH HAT RACK
S P 32	SPARE-RJB TO RH HAT RACK
S P 33	SPARE-FJB TO RJB
S P 38	SPARE-FJB TO RJB
S P 43	SPARE-FJB TO RJB
S P 45	SPARE-FJB TO RJB
S P 46	SPARE-RJB TO LH FR ROOF
S P 48	SPARE-RJB TO DASH CENTER PANEL
S P 56	SPARE-ENGINE TO RH SW PANEL
S P 57	SPARE-DASH CENTER PANEL TO ENG.
S P 58	SPARE-DASH CENTER PANEL TO ENG.
S P 59	SPARE-FJB TO ENGINE
S P 61	SPARE-FJB TO DASH RH PANEL
S P 68	SPARE-FJB TO ENGINE
S P 69	SPARE-FJB TO FR AXLE
S P 70	SPARE-FJB TO FR AXLE
S P 71	SPARE-FJB TO RH SW PANEL
S P 72	SPARE-FJB TO FR SERV CPT
S P 74	SPARE-FJB TO LH CONSOLE
S P 77	SPARE-FJB TO EVAPORATOR CPT
S P 78	SPARE-FJB TO CONDENSER CPT
S P 79	SPARE-FJB TO CONDENSER CPT
S P 87	SPARE-RJB TO LH HAT RACK
S P 88	SPARE-RJB TO RH HAT RACK
S P 92	SPARE-RJB TO CONDENSER CPT
S P 93	SPARE-RJB TO EVAPORATOR CPT
S P 94	SPARE-RJB TO RR ROOF
S P 95	SPARE-RJB TO RR ROOF
S P 96	SPARE-RJB TO LUGG CPT #2
S P 97	SPARE-RJB TO LUGG CPT #3
S P 98	SPARE-RJB TO LUGG CPT #3
S P 104	SPARE-RJB TO ENGINE CPT
S P 105	SPARE-FJB TO ENGINE
S P 106	SPARE-RJB TO BATT. CPT.
S P 107	SPARE-RJB TO BATT. CPT.
S P 108	SPARE-RJB TO BATT. CPT.
S P 109	SPARE-RJB TO ENGINE CPT.
S P 110	SPARE-RJB TO ENGINE CPT.
S P 111	SPARE-RJB TO ENGINE CPT.
S P 112	SPARE-RJB TO ENGINE CPT.
S P 114	SPARE-FJB TO U/DASH WIPER
S P 115	SPARE-FJB TO U/DASH WIPER
S P 116	SPARE-FJB TO U/DASH FLOOR
S P 117	SPARE-FJB TO U/DASH FLOOR
S P 119	SPARE-RJB TO ENGINE CPT.
W C	A/C & HEAT SYST-EVAP CTR SIGN
Y C	INTERIOR LTS-110V FLUORESCENT
Y D	INTERIOR LTS-110V FLUORESCENT
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0	GALLEY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A	A/C SYSTEM-EVAP. GRN
0 A A	RS - VOLTAGE REGULATOR GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN EVAP. & CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 E	RS - HAT RACK ACCES. LH GRD
0 E A	EATON TRANSMISSION GRD
0 F	RS - HAT RACK ACCES. RH GRD
0 G	RS - HAT RACK ACCES. RH GRD
0 H	RS - LAVATORY ACCES. GRD
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L 6	FS - FRONT SERVICE CPT LTS GRD
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR (SEDAN) GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 1	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	FS - SOUND SYS. JCT PANEL GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R E	RADIO &CTRL HEAD CHASSIS GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN - GND RELAY
0 S A	EC-BOSCH ALT. GROUND
0 S 2	SOUND SYSTEM RADIO GRD
0 S 3	SOUND SYSTEM VIDEO GRD
0 S S	SOUNS SYSTEM BATT. GRD
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 T 5	FS - HVAC DASH MODULE. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS FR JCT BOX CPT GRD STUD
0 Z	RR JCT BOX CPT GRD STUD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 A	A/C & HEAT SYSTEM-COOL 1 SIGN
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 B B	A/C & HEAT SYSTEM-COOL SIGN
2 H	A/C & HEAT SYSTEM-HI PRESS SW
2 E	A/C & HEAT SYSTEM EVAP CONT
2 F	A/C & HEAT SYSTEM EVAP CONT

CIRCUIT NUMBER CODE

No.	DESCRIPTION
2 HL	A/C & HEAT SYSTEM-LO & HI PRESS SW
2 L	A/C & HEAT SYSTEM-LO PRESS SW
4	HOSTESS & PASSENGER CHIME
4 A	HOSTESS & PASSENGER CHIME
4 B	PASSENGER CHIME
4 C	HOSTESS CHIME
5	INTERIOR LTS-AISLE & EMERG. EXIT
5	UPPER WINDSHIELD DEFROSTER
5 D	UPPER WINDSHIELD DEFROSTER
5 E	UPPER WINDSHIELD DEFROSTER
5 N	INTERIOR LTS-EMERGENCY EXIT
5 NC	SPEED SIGNAL LOWER 5MPH
5 NO	SPEED SIGNAL HIGHER 5MPH
6	INTERIOR LTS-AISLE
7 B	ENTRANCE DOOR (SEDAN)
7 D	ENTRANCE DOOR (SEDAN)
7 DA	ENTRANCE DOOR (SEDAN)
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
10	INTERIOR LTS-LUGGAGE CPT
10 A	INTERIOR LTS-LUGGAGE CPT
10 B	INTERIOR LTS-LUGGAGE CPT
10 D	INTERIOR LTS-LUGGAGE CPT
10 F	INTERIOR LTS-LUGGAGE CPT
10 H	INTERIOR LTS-LUGGAGE CPT
10 K	INTERIOR LTS-LUGGAGE CPT
10 R	INTERIOR LTS-LUGGAGE DOOR AJAR
11	FR DESTINATION SIGN
11 A	FR DESTINATION SIGN
11 B	FR DESTINATION SIGN
11 C	FR DESTINATION SIGN
11 D	FR DESTINATION SIGN
11 E	FR DESTINATION SIGN
11 K	FR DESTINATION SIGN
12	12V BAT ELECTRONIC JCT BLOCK
12	BAT CPT 12V BATTERY
12 A	FR JCT BOX 12V DISC SW
12 A	RR JCT BOX 12V DISC SW
12 B	12V BAT ELECTRICAL JCT BLOCK
12 B	RR JCT BOX 12V DISC SW
12 B	FR JCT BOX 12V DISC SW
12 BE	BAT. EQUALIZER MONITOR
12 C	FR JCT BOX 12V DISC SW
12 C	RR JCT BOX 12V HOT WIRE
12 CE	RR JCT BOX 12V HOT WIRE
12 D	BAT CPT 12V BATTERY
12 DT	TTLT MODULE
12 E	FR JCT BOX 12V DISC SW
12 E	RR JCT BOX 12V DISC SW
12 F	BAT CPT 12V FJB & IC
12 F	FR JCT BOX 12V DISC SW
12 F	RR JCT BOX 12V DISC SW
12 G	FR JCT BOX 12V DISC SW
12 H	12 V IGNITION D.T.RUN LIGHT
12 J	FR JCT BOX 12V DISC SW
12 I	12V IGNITION DISTRIBUTION
12 I	RR JCT BOX 12V IGNITION
12 K	12 VOLT IGN. TTLT & HVAC MODULE
12 IA	12V IGNITION DISTRIBUTION
12 IA	FR JCT BOX 12V IGNITION
12 IB	FR JCT BOX 12V IGNITION
12 IF	FR JCT BOX 12V IGNITION
12 LX	CLUSTER (12V HOT WIRE)
12 P	LH CONSOLE POWER OUTLET
12 R	BAT CPT 12V DISC RLY TO RJB
12 R	MEMORY BATTERY RADIO
12 S	SOUND SYSTEM 12V RADIO
12 S1	SOUND SYSTEM 12V RADIO
12 S1A	DVD KARAOKE FEEDING
12 S2	SOUND SYSTEM 12V RADIO
12 S2A	DVD KARAOKE FEEDING
12 SB	SOUND SYSTEM 12V FEEDING
12 SS	SOUND SYSTEM 12V FEEDING
12 VA	BATTERY TO EQUALIZER 12V
12 VD	12V HOT WIRE DISTRIBUTION
12 VF	BAT CPT 12V FJB & IC
12 VI	12V IGNITION DISTRIBUTION
12 VR	BAT CPT 12V DISC RLY TO RJB
12 W	12V BATTERY DDEC III
12 W	ENTRANCE DOOR (SEDAN)
12 WA	ENTRANCE DOOR (SEDAN)
12 X	FR JCT BOX 12V DISC SW
12 X2	FR JCT BOX 12V DISC SW
12 Y	FR JCT BOX 12V DISC SW
13 A	ALARM & SIGNAL-LO AIR PRIM.
13 B	ALARM & SIGNAL-LO AIR SEC.
14	LAVATORY-FLUSHING PUMP
14 A	LAVATORY-FLUSHING PUMP
15	EXTERIOR LTS-MULTI FUNC LEVEL
15 A	WIPER & WASHER UPPER WINDSHIELD
16	SPEED - SIGNAL +
16 A	SPEED - SIGNAL +
16 T	SPEED - SIGNAL +
17	EXTERIOR LTS-FLASHER UNIT
17 A	EXTERIOR LTS-FLASHER UNIT
19	DIFFERENTIAL OIL TEMP
20	SPEED - SIGNAL -
20 T	SPEED - SIGNAL -
20 W	SPEED - SIGNAL -
21	EXTERIOR LTS-DIRECTIONNAL LH
21 A	EXTERIOR LTS-DIRECTIONNAL LH
21 B	EXTERIOR LTS-HAZARD
21 C	EXTERIOR LTS-CORNERING LH
21 H	EXTERIOR LTS-DIRECTIONNAL LH
21 K	EXTERIOR LTS-CORNERING
21 N	EXTERIOR LTS-CORNERING LH
21 P	EXTERIOR LTS-CORNERING LH
23	EXTERIOR LTS-DIRECTIONNAL RH
23	EXTERIOR LTS-DIRECTIONNAL RH
23 A	EXTERIOR LTS-DIRECTIONNAL RH
23 B	EXTERIOR LTS-DIRECTIONNAL RH
23 C	EXTERIOR LTS-CORNERING RH
23 N	EXTERIOR LTS-CORNERING RH
23 P	EXTERIOR LTS-CORNERING RH
24	BAT CPT 24V BATTERY
24	FR JCT BOX 24V DISC SW
24 A	BOOSTER BLOCK 24V DISC SW
24 A	FR JCT BOX 24V DISC SW
24 A	RR JCT BOX 24V DISC SW
24 B	24V STARTER RLY FEEDING
24 B	FR JCT BOX 24V DISC SW
24 B	RR JCT BOX 24V DISC SW
24 BC	24 VOLT BATT. CHARGER
24 BE	RJB CPT-BAT EQ MONITOR HOT WIRE
24 C	FR JCT BOX 24V DISC SW
24 C	RR JCT BOX 24V DISC SW
24 D	BAT CPT 24V HOT WIRE
24 D	FR JCT BOX 24V HOT WIRE
24 D	RR JCT BOX 24V HOT WIRE
24 DA	A/C JCT BOX 24V HOT WIRE
24 E	BAT CPT 24V DISC SW
24 E	FR JCT BOX 24V DISC SW
24 E	RR JCT BOX 24V DISC SW
24 F	FR JCT BOX 24V DISC SW
24 F	RR JCT BOX 24V DISC SW
24 G	FR JCT BOX 24V DISC SW
24 G	RR JCT BOX 24V DISC SW
24 H	FR JCT BOX 24V DISC SW
24 H	RR JCT BOX 24V DISC SW
24 I	FR JCT BOX 24V IGNITION
24 I	RR JCT BOX 24V IGNITION
24 IA	FR JCT BOX 24V IGNITION
24 IB	FR JCT BOX 24V IGNITION
24 IB	RR JCT BOX 24V IGNITION
24 IC	FR JCT BOX 24V IGNITION
24 IF	FJB 24VOLT IGNITION
24 P	FR JCT BOX 24V DISC SW
24 S	24V DISC SW RLY SIGNAL
24 S1	SOUND SYSTEM 24V AMPLIFIER
24 S2	SOUND SYSTEM 24V AMPLIFIER
24 S3	SOUND SYSTEM 24V VIDEO
24 S4	SOUND SYSTEM 24V VIDEO
24 SB	SOUND SYSTEM 24V FEEDING
24 SS	SOUND SYSTEM 24V FEEDING
24 R	24 VOLTS FRONT CAMERA SW.
24 V2	RR JCT BOX 24V DISC SW
24 V3	RR JCT BOX 24V DISC SW
24 V4	RR JCT BOX 24V DISC SW
24 V5	RR JCT BOX 24V DISC SW
24 VD	24V HOT WIRE DISTRIBUTION
24 VF	BAT CPT 24V SW TO FJB & IC
24 VA	BATTERY TO EQUALIZER 24V
24 VI	RR JCT BOX 24V IGNITION
24 VR	BAT CPT 24V DISC SW TO RJB
24 W	RR JCT BOX 24V DISC SW (WCL)
24 WC	BATT.CPT TO HYD. PUMP (WCL)
24 WL	24V BATTERY-HYD. PUMP (WCL)
25	24 VOLT ALT.SIGNAL MODULE
25 A1	PRE-EXITATION ALT. BOSCH #1
25 A2	PRE-EXITATION ALT. BOSCH #2
25 A	T.T. LT. ALTERNATOR #1
25 B	12 VOLTS IGN. ALT. SIGNAL MODULE
25 D	12 V. ENGINE RUN / HVAC SYSTEM
25 F	12 VOLT IGN. DISTRIBUTION
25 H	24 VOLT IGN. ALT. BOSCH
25 K	T.T. LT. ALTERNATOR #2
26 A	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26 B	DRIVER'S WINDOW LIFTER
26 C	DRIVER'S WINDOW LIFTER
27	LAVATORY-EMERGENCY SONALERT
28 A	A/C & HEAT SYSTEM-HI PRESSURE
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29 A	A/C & HEAT SYSTEM-DRIVER'S HTR
29 B	A/C & HEAT SYSTEM-DRIVER'S HTR
29 H	HVAC DASH MODULE
30 A	GALLEY
31 A	A/C & HEAT SYSTEM-UNLOADER
31 B	A/C & HEAT SYSTEM-UNLOADER
31 B	WIPER & WASHER SYSTEM
31 C	WIPER & WASHER SYSTEM
31 D	WIPER & WASHER SYSTEM
31 E	WIPER & WASHER SYSTEM
31 J	WIPER & WASHER SYSTEM
31 X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32 B	EXTERIOR LTS-BACK-UP

CIRCUIT NUMBER CODE

No.	DESCRIPTION
32C	BACK-UP PWR & SIGNAL
32D	BACK-UP ALARM
35	ENTRANCE DOOR (SEDAN)
35B	ENTRANCE DOOR (SEDAN)
35BB	ENTRANCE DOOR (SEDAN)
35D	ENTRANCE DOOR (SEDAN)
36	JACOB BRAKE SYSREM
36A	JACOB BRAKE SYSREM
38	INTERIOR LTS-24V FLUORESCENT
38A	INTERIOR LTS-24V FLUORESCENT
38C	INTERIOR LTS-24V FLUORESCENT
38D	INTERIOR LTS-24V FLUORESCENT
39	INTERIOR LTS-24V LH CONSOLE SW
39A	INTERIOR LTS-DRIVER"S LTS
39P	READING LIGHTS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
43	HAT RACK FAN
43A	HAT RACK FAN
43B	HAT RACK FAN
43D	HAT RACK FAN
43E	HAT RACK FAN
43F	HAT RACK FAN
43G	HAT RACK FAN
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45B	A/C & HEAT SYSTEM-HEAT SIGN
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
48	ENTRANCE DOOR (SEDAN)
48A	ENTRANCE DOOR (SEDAN)
49	ENTRANCE DOOR (SEDAN)
49A	ENTRANCE DOOR (SEDAN)
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL- AIR HORN
52C	ALARM & SIGNAL- AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
57CA	A/C & HEAT SYSTEM-HEAT SIGN
57CC	A/C & HEAT SYSTEM-HEAT SIGN
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
62	LAVATORY-OCCUPIED LT
62A	LAVATORY-FLUOR LT
62B	LAVATORY-FLUOR LT
62E	LAVATORY-OCCUP & FLUOR LT
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVERS FAN
64B	DRIVERS FAN
64C	DRIVERS FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65P	PASSENGER REC. DAMPER
65D	DRIVER REC. DAMPER
66	O_PASS. ON/OFF
67	24 VOLT RUN DISTRIBUTION
67A	A/C & HEAT SYSTEM
67B	A/C & HEAT SYSTEM
67C	HEATING WINDSHIELD
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67V	A/C & HEAT SYSTEM-WATER VALVE
67X	A/C & HEAT SYSTEM
68	DASH & DEFROST DAMPER MOTOR
68A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH
72C	SUN VISOR-LH
72D	SUN VISOR-LH
73	LAVATORY-FEEDING
74	INTERIOR LTS-READING RH
74A	INTERIOR LTS-READING RH
74D	INTERIOR LTS-READING SIGNAL
75	INTERIOR LTS-READING LH
75A	INTERIOR LTS-READING LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77	A/C & HEAT SYSTEM-HI PRESSURE
77A	A/C & HEAT SYSTEM-DRIVER'S HTR
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85W	24V IGN ANTI SKID
85X	24V IGN ANTI SKID
85Y	ANTI SKID-WARNING LT
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
100	INTERIOR LTS-GENERAL
100A	INTERIOR LTS-GENERAL
100B	INTERIOR LTS-GENERAL
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	WORLD TRANSM-SOL. SUPPLY
102A	24V STARTER TO BOSCH ALTERNATOR
103	LOW BUOY
104	WORLD TRANSM-SOL. FORWARD
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)

CIRCUIT NUMBER CODE

No.	DESCRIPTION
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125	GALLEY LAMP
125T	GALLEY LAMP
125W	WORLD TRANSM-RET. INDICATOR
126	KNEELING SYSTEM
126A	KNEELING SYSTEM
126B	KNEELING SYSTEM
126C	KNEELING SYSTEM
126D	KNEELING SYSTEM
126E	KNEELING SYSTEM
126F	KNEELING SYSTEM
126G	KNEELING SYSTEM
126H	KNEELING SYSTEM
126K	KNEELING SYSTEM
126P	KNEELING SYSTEM
126R	KNEELING SYSTEM
126W	5 MPH N.C. SIGNAL (WCL)
126S	KNEELING SYSTEM
126T	KNEELING SYSTEM
127	WORLD TRANSM-LUBE PRESS SW.
127	WORLD TRANSM-RETARDER FEED SOL.
127	POWER- PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT - BURNER ON SIGNAL
128	WORLD TRANSM-SOL. C2
129	POWER- PRE-HEAT WATER HEATER
129B	POWER- PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	A/C & HEAT SYSTEM-EVAP FAN MOTOR
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	GALLEY-HEAT CONTAINERS
133A	GALLEY-HEAT CONTAINERS
133B	GALLEY-HEAT CONTAINERS
133C	GALLEY-HEAT CONTAINERS
133	WORLD TRANSM-RET. ACTUATOR HI
134	GALLEY-HEAT CONTAINERS
134A	GALLEY-HEAT CONTAINERS
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135A	A/C & HEAT SYSTEM-AIR SENSOR
135D	A/C & HEAT SYSTEM-AIR SENSOR
135C	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	GALLEY-ACCESSORIES
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146A	TRANSMISSION-12V IGNITION
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	WORLD TRANSM-OIL TEMP
147A	ETHER COLD START & D.R.L.
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
151A	ABS SYSTEM
152	ABS SYSTEM
152A	ABS SYSTEM
153	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	ABS SYSTEM
155	WORLD TRANSM-SPARE INPUT (-)
156	ABS SYSTEM
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157A	ABS SYSTEM
157B	ABS SYSTEM
157D	A.T.C. SYSTEM
157E	A.T.C. SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
165A	A/C & HEAT SYSTEM-TRANSMITER
165B	A/C & HEAT SYSTEM-TRANSMITER
165C	A/C & HEAT SYSTEM-TRANSMITER
165D	A/C & HEAT SYSTEM-TRANSMITER
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	A/C & HEAT SYSTEM-TEMP. CTR
167A	A/C & HEAT SYSTEM-TEMP. CTR
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170	LUGGAGE DOOR LOCK
170C	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
225	LAVATORY FAN
225A	LAVATORY FAN
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251A	DDEC III - DATA LOGGER 12 H.W.
251	DDEC III - PRODRIVER 12V H.W.
253	GALLEY-MICROWAVE
254	GALLEY-12V FRIGO NORCOLD
254A	GALLEY-FRIGO
255	GALLEY-COFEEMAKER
255A	GALLEY-COFEEMAKER
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
260	WINDOW AJAR
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
292	FAN CLUTCH RADIATOR SPD 2
300	DOOR AJAR MAGN.SW. (WCL)
300A	POWER SYSTEM SW. (WCL)
300B	DOOR AJAR ALARM (WCL)

CIRCUIT NUMBER CODE

No.	DESCRIPTION
301	POWER SYSTEM SW. (WCL)
302	DOOR AJAR T.T.LT. (WCL)
302A	DOOR AJAR ALARM SIGN.(WCL)
302B	DOOR AJAR MAGN.SW. (WCL)
303	REMOTE WALL SW. DWN (WCL)
304	REMOTE WALL SW. UP (WCL)
305	PARK. BRAKE SOL. VALVE (WCL)
305A	PARK. BRAKE SAFETY SW. (WCL)
306	CONTROL SYSTEM (WCL RICON)
307	CONTROL SYSTEM (WCL RICON)
308	CONTROL SYSTEM (WCL RICON)
309	CONTROL SYSTEM (WCL RICON)
310	EATON TRANSMISSION
311	EATON TRANSMISSION
312	EATON TRANSMISSION
313	EATON TRANSMISSION
314	EATON TRANSMISSION
315	EATON TRANSMISSIOM
316	EATON TRANSMISSION - EPL
317	EATON TRANSMISSION
318	EATON TRANSMISSION
319	EATON TRANSMISSION
320	EATON TRANSMISSION
321	EATON TRANSMISSION
322	EATON TRANSMISSIION
323	EATON TRANSMISSION
324	EATON TRANSMISSION
325	EATON TRANSMISSION
326	EATON TRANSMISSION
327	EATON TRANSMISSION
328	EATON TRANSMISSION
329	EATON TRANSMISSION
330	EATON TRANSMISSION - EPL
331	EATON TRANSMISSION - EPL
332	EATON TRANSMISSION
333	EATON TRANSMISSION - 12V BATTERY
334	EATON GENERATION 2
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE

No.	DESCRIPTION
540	DDEC III-CRUISE ENABLE LTS.
541	DDEC III-CRUISE SET SW
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
583	DDEC III-ENGINE BRAKE 4 CYL.
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
925	J1939-HIGH
926	J1939-LOW
927	J1939-SHIELD
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
953A	THROTTLE INHIBIT
979	DDEC III-ENGINE BRAKE 2 CYL.

No.	DESCRIPTION

No.	DESCRIPTION

CIRCUIT NUMBER CODE

No.	DESCRIPTION
B A	INTERIOR LTS-110V FLUORESCENT
B B	INTERIOR LTS-110V FLUORESCENT
D 1	SOUND SYSTEM-FR RH SPEAKER
D 2	SOUND SYSTEM-FR RH SPEAKER
D 3	SOUND SYSTEM-FR RH SPEAKER
D 4	SOUND SYSTEM-RR RH SPEAKER
D 5	SOUND SYSTEM-RR RH SPEAKER
D 6	SOUND SYSTEM-RR RH SPEAKER
D 7	SOUND SYSTEM-RR RH SPEAKER
D 8	SOUND SYSTEM-RR RH SPEAKER
D 3 4	SOUND SYSTEM-RR RH SPEAKER
D 6 7	SOUND SYSTEM-RR RH SPEAKER
G 1	SOUND SYSTEM-FR LH SPEAKER
G 2	SOUND SYSTEM-FR LH SPEAKER
G 3	SOUND SYSTEM-FR LH SPEAKER
G 4	SOUND SYSTEM-RR LH SPEAKER
G 5	SOUND SYSTEM-RR LH SPEAKER
G 6	SOUND SYSTEM-RR LH SPEAKER
G 7	SOUND SYSTEM-RR LH SPEAKER
G 8	SOUND SYSTEM-RR LH SPEAKER
G 3 4	SOUND SYSTEM-RR LH SPEAKER
G 6 7	SOUND SYSTEM-RR LH SPEAKER
L 1 A	INTERIOR LTS-110V FLUORESCENT
L 1 B	INTERIOR LTS-110V FLUORESCENT
L 2 A	INTERIOR LTS-110V FLUORESCENT
L 2 B	INTERIOR LTS-110V FLUORESCENT
L 0	110V RECEPTACLE- 110V FLUOR.
L 1	110V RECEPTACLE- 110V FLUOR.
L 2	110V RECEPTACLE- 110V FLUOR.
R A	INTERIOR LTS-110V FLUORESCENT
R B	INTERIOR LTS-110V FLUORESCENT
S H 1	SHIELD CHASSIS GRD
S H 2	SHIELD CHASSIS GRD
S H 3	SHIELD CHASSIS GRD
S H 4	SHIELD CHASSIS GRD
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 10	SPARE-RJB TO LUGG CPT #1
S P 11	SPARE-FJB TO RJB
S P 12	SPARE-RJB TO ENGINE
S P 13	SPARE-RJB TO ENGINE
S P 14	SPARE-FJB TO RJB
S P 15	SPARE-RJB TO ENGINE
S P 16	SPARE-RJB TO ENGINE
S P 17	SPARE-RJB TO ENGINE
S P 18	SPARE-FJB TO RJB
S P 24	SPARE-RJB TO LAVATORY ROOF
S P 25	SPARE-RJB TO LAVATORY ROOF
S P 26	SPARE-RJB TO LAVATORY ROOF
S P 27	SPARE-RJB TO LH HAT RACK
S P 28	SPARE-RJB TO LH HAT RACK
S P 31	SPARE-RJB TO RH HAT RACK
S P 32	SPARE-RJB TO RH HAT RACK
S P 33	SPARE-FJB TO RJB
S P 38	SPARE-FJB TO RJB
S P 43	SPARE-FJB TO RJB
S P 45	SPARE-FJB TO RJB
S P 46	SPARE-RJB TO LH FR ROOF
S P 48	SPARE-RJB TO DASH CENTER PANEL
S P 56	SPARE-ENGINE TO RH SW PANEL
S P 57	SPARE-DASH CENTER PANEL TO ENG.
S P 58	SPARE-DASH CENTER PANEL TO ENG.
S P 59	SPARE-FJB TO ENGINE
S P 61	SPARE-FJB TO DASH RH PANEL
S P 68	SPARE-FJB TO ENGINE
S P 69	SPARE-FJB TO FR AXLE
S P 70	SPARE-FJB TO FR AXLE
S P 71	SPARE-FJB TO RH SW PANEL
S P 72	SPARE-FJB TO FR SERV CPT
S P 74	SPARE-FJB TO LH CONSOLE
S P 77	SPARE-FJB TO EVAPORATOR CPT
S P 78	SPARE-FJB TO CONDENSER CPT
S P 79	SPARE-FJB TO CONDENSER CPT
S P 87	SPARE-RJB TO LH HAT RACK
S P 88	SPARE-RJB TO RH HAT RACK
S P 92	SPARE-RJB TO CONDENSER CPT
S P 93	SPARE-RJB TO EVAPORATOR CPT
S P 94	SPARE-RJB TO RR ROOF
S P 95	SPARE-RJB TO RR ROOF
S P 96	SPARE-RJB TO LUGG CPT #2
S P 97	SPARE-RJB TO LUGG CPT #3
S P 98	SPARE-RJB TO LUGG CPT #3
S P 104	SPARE-RJB TO ENGINE CPT
S P 105	SPARE-FJB TO ENGINE
S P 106	SPARE-RJB TO BATT. CPT.
S P 107	SPARE-RJB TO BATT. CPT.
S P 108	SPARE-RJB TO BATT. CPT.
S P 109	SPARE-RJB TO ENGINE CPT.
S P 110	SPARE-RJB TO ENGINE CPT.
S P 111	SPARE-RJB TO ENGINE CPT.
S P 112	SPARE-RJB TO ENGINE CPT.
S P 114	SPARE-FJB TO U/DASH WIPER
S P 115	SPARE-FJB TO U/DASH WIPER
S P 116	SPARE-FJB TO U/DASH FLOOR
S P 117	SPARE-FJB TO U/DASH FLOOR
S P 119	SPARE-RJB TO ENGINE CPT.
W C	A/C & HEAT SYST-EVAP CTR SIGN
Y C	INTERIOR LTS-110V FLUORESCENT
Y D	INTERIOR LTS-110V FLUORESCENT
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0	GALLEY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A	A/C SYSTEM-EVAP. GRN
0 A A	RS - VOLTAGE REGULATOR GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN EVAP. & CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 E	RS - HAT RACK ACCES. LH GRD
0 E A	EATON TRANSMISSION GRD
0 F	RS - HAT RACK ACCES. RH GRD
0 G	RS - HAT RACK ACCES. RH GRD
0 H	RS - LAVATORY ACCES. GRD
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L 6	FS - FRONT SERVICE CPT LTS GRD
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR (SEDAN) GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 1	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	FS - SOUND SYS. JCT PANEL GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R E	RADIO &CTRL HEAD CHASSIS GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN - GND RELAY
0 S A	EC-BOSCH ALT. GROUND
0 S 2	SOUND SYSTEM RADIO GRD
0 S 3	SOUND SYSTEM VIDEO GRD
0 S S	SOUNS SYSTEM BATT. GRD
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 T 5	FS - HVAC DASH MODULE. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS SYSTEM - GRD
0 Y 2	ABS SYSTEM - GRD
0 Y 3	ABS SYSTEM - GRD
0 Y 4	ABS SYSTEM - GRD
0 Y 5	ABS SYSTEM - GRD
0 Y 6	ABS SYSTEM - GRD
0 Z	RR JCT BOX CPT GRD STUD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 A	A/C & HEAT SYSTEM-COOL 1 SIGN

CIRCUIT NUMBER CODE

No.	DESCRIPTION
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 B B	A/C & HEAT SYSTEM-COOL SIGN
2 H	A/C & HEAT SYSTEM-HI PRESS SW
2 E	A/C & HEAT SYSTEM EVAP CONT
2 F	A/C & HEAT SYSTEM EVAP CONT
2 H L	A/C & HEAT SYSTEM-LO & HI PRESS SW
2 L	A/C & HEAT SYSTEM-LO PRESS SW
4	HOSTESS & PASSENGER CHIME
4 A	HOSTESS & PASSENGER CHIME
4 B	PASSENGER CHIME
4 C	HOSTESS CHIME
5	INTERIOR LTS-AISLE & EMERG. EXIT
5	UPPER WINDSHIELD DEFROSTER
5 D	UPPER WINDSHIELD DEFROSTER
5 E	UPPER WINDSHIELD DEFROSTER
5 N	INTERIOR LTS-EMERGENCY EXIT
5 N C	SPEED SIGNAL LOWER 5MPH
5 N O	SPEED SIGNAL HIGHER 5MPH
6	INTERIOR LTS-AISLE
7 B	ENTRANCE DOOR (SEDAN)
7 D	ENTRANCE DOOR (SEDAN)
7 D A	ENTRANCE DOOR (SEDAN)
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
1 0	INTERIOR LTS-LUGGAGE CPT
1 0 A	INTERIOR LTS-LUGGAGE CPT
1 0 B	INTERIOR LTS-LUGGAGE CPT
1 0 D	INTERIOR LTS-LUGGAGE CPT
1 0 F	INTERIOR LTS-LUGGAGE CPT
1 0 H	INTERIOR LTS-LUGGAGE CPT
1 0 K	INTERIOR LTS-LUGGAGE CPT
1 0 R	INTERIOR LTS-LUGGAGE DOOR AJAR
1 1	FR DESTINATION SIGN
1 1 A	FR DESTINATION SIGN
1 1 B	FR DESTINATION SIGN
1 1 C	FR DESTINATION SIGN
1 1 D	FR DESTINATION SIGN
1 1 E	FR DESTINATION SIGN
1 1 K	FR DESTINATION SIGN
1 2	12V BAT ELECTRONIC JCT BLOCK
1 2	BAT CPT 12V BATTERY
1 2 A	FR JCT BOX 12V DISC SW
1 2 A	RR JCT BOX 12V DISC SW
1 2 B	12V BAT ELECTRICAL JCT BLOCK
1 2 B	RR JCT BOX 12V DISC SW
1 2 B	FR JCT BOX 12V DISC SW
1 2 B E	BAT. EQUALIZER MONITOR
1 2 C	FR JCT BOX 12V DISC SW
1 2 C	RR JCT BOX 12V HOT WIRE
1 2 C E	RR JCT BOX 12V HOT WIRE
1 2 D	BAT CPT 12V BATTERY
1 2 D T	TTLT MODULE
1 2 E	FR JCT BOX 12V DISC SW
1 2 E	RR JCT BOX 12V DISC SW
1 2 F	BAT CPT 12V FJB & IC
1 2 F	FR JCT BOX 12V DISC SW
1 2 F	RR JCT BOX 12V DISC SW
1 2 G	FR JCT BOX 12V DISC SW
1 2 H	12 V IGNITION D.T.RUN LIGHT
1 2 J	FR JCT BOX 12V DISC SW
1 2 I	12V IGNITION DISTRIBUTION
1 2 I	RR JCT BOX 12V IGNITION
1 2 K	12 VOLT IGN. TTLT & HVAC MODULE
1 2 I A	12V IGNITION DISTRIBUTION
1 2 I A	FR JCT BOX 12V IGNITION
1 2 I B	FR JCT BOX 12V IGNITION
1 2 I E	ABS-FR JCT BOX 12V IGNITION
1 2 I F	FR JCT BOX 12V IGNITION
1 2 L X	CLUSTER (12V HOT WIRE)
1 2 M	ABS-FR JCT BOX 12V DISC. SW.
1 2 P	LH CONSOLE POWER OUTLET
1 2 R	BAT CPT 12V DISC RLY TO RJB
1 2 R	MEMORY BATTERY RADIO
1 2 S	SOUND SYSTEM 12V RADIO
1 2 S 1	SOUND SYSTEM 12V RADIO
1 2 S 1 A	DVD KARAOKE FEEDING
1 2 S 2	SOUND SYSTEM 12V RADIO
1 2 S 2 A	DVD KARAOKE FEEDING
1 2 S B	SOUND SYSTEM 12V FEEDING
1 2 S S	SOUND SYSTEM 12V FEEDING
1 2 V A	BATTERY TO EQUALIZER 12V
1 2 V D	12V HOT WIRE DISTRIBUTION
1 2 V F	BAT CPT 12V FJB & IC
1 2 V I	12V IGNITION DISTRIBUTION
1 2 V R	BAT CPT 12V DISC RLY TO RJB
1 2 W	12V BATTERY DDEC III
1 2 W	ENTRANCE DOOR (SEDAN)
1 2 W A	ENTRANCE DOOR (SEDAN)
1 2 X	FR JCT BOX 12V DISC SW
1 2 X 2	FR JCT BOX 12V DISC SW
1 2 Y	FR JCT BOX 12V DISC SW
1 3 A	ALARM & SIGNAL-LO AIR PRIM.
1 3 B	ALARM & SIGNAL-LO AIR SEC.
1 4	LAVATORY-FLUSHING PUMP
1 4 A	LAVATORY-FLUSHING PUMP
1 5	EXTERIOR LTS-MULTI FUNC LEVEL
1 5 A	WIPER & WASHER UPPER WINDSHIELD
1 6	SPEED - SIGNAL +
1 6 A	SPEED - SIGNAL +
1 6 T	SPEED - SIGNAL +
1 7	EXTERIOR LTS-FLASHER UNIT
1 7 A	EXTERIOR LTS-FLASHER UNIT
1 9	DIFFERENTIAL OIL TEMP
2 0	SPEED - SIGNAL -
2 0 T	SPEED - SIGNAL -
2 0 W	SPEED - SIGNAL -
2 1	EXTERIOR LTS-DIRECTIONNAL LH
2 1 A	EXTERIOR LTS-DIRECTIONNAL LH
2 1 B	EXTERIOR LTS-HAZARD
2 1 C	EXTERIOR LTS-CORNERING LH
2 1 H	EXTERIOR LTS-DIRECTIONNAL LH
2 1 K	EXTERIOR LTS-CORNERING
2 1 N	EXTERIOR LTS-CORNERING LH
2 1 P	EXTERIOR LTS-CORNERING LH
2 3	EXTERIOR LTS-DIRECTIONNAL RH
2 3	EXTERIOR LTS-DIRECTIONNAL RH
2 3 A	EXTERIOR LTS-DIRECTIONNAL RH
2 3 B	EXTERIOR LTS-DIRECTIONNAL RH
2 3 C	EXTERIOR LTS-CORNERING RH
2 3 N	EXTERIOR LTS-CORNERING RH
2 3 P	EXTERIOR LTS-CORNERING RH
2 4	BAT CPT 24V BATTERY
2 4	FR JCT BOX 24V DISC SW
2 4 A	BOOSTER BLOCK 24V DISC SW
2 4 A	FR JCT BOX 24V DISC SW
2 4 A	RR JCT BOX 24V DISC SW
2 4 B	24V STARTER RLY FEEDING
2 4 B	FR JCT BOX 24V DISC SW
2 4 B C	24 VOLT BATT. CHARGER
2 4 B E	RJB CPT-BAT EQ MONITOR HOT WIRE
2 4 C	FR JCT BOX 24V DISC SW
2 4 C	RR JCT BOX 24V DISC SW
2 4 D	BAT CPT 24V HOT WIRE
2 4 D	FR JCT BOX 24V HOT WIRE
2 4 D	RR JCT BOX 24V HOT WIRE
2 4 D A	A/C JCT BOX 24V HOT WIRE
2 4 E	BAT CPT 24V DISC SW
2 4 E	FR JCT BOX 24V DISC SW
2 4 E	RR JCT BOX 24V DISC SW
2 4 F	FR JCT BOX 24V DISC SW
2 4 F	RR JCT BOX 24V DISC SW
2 4 G	FR JCT BOX 24V DISC SW
2 4 G	RR JCT BOX 24V DISC SW
2 4 H	FR JCT BOX 24V DISC SW
2 4 H	RR JCT BOX 24V DISC SW
2 4 I	FR JCT BOX 24V IGNITION
2 4 I	RR JCT BOX 24V IGNITION
2 4 I A	FR JCT BOX 24V IGNITION
2 4 I B	FR JCT BOX 24V IGNITION
2 4 I B	RR JCT BOX 24V IGNITION
2 4 I C	FR JCT BOX 24V IGNITION
2 4 I F	FJB 24VOLT IGNITION
2 4 P	FR JCT BOX 24V DISC SW
2 4 S	24V DISC SW RLY SIGNAL
2 4 S 1	SOUND SYSTEM 24V AMPLIFIER
2 4 S 2	SOUND SYSTEM 24V AMPLIFIER
2 4 S 3	SOUND SYSTEM 24V VIDEO
2 4 S 4	SOUND SYSTEM 24V VIDEO
2 4 S B	SOUND SYSTEM 24V FEEDING
2 4 S S	SOUND SYSTEM 24V FEEDING
2 4 R	24 VOLTS FRONT CAMERA SW.
2 4 V 2	RR JCT BOX 24V DISC SW
2 4 V 3	RR JCT BOX 24V DISC SW
2 4 V 4	RR JCT BOX 24V DISC SW
2 4 V 5	RR JCT BOX 24V DISC SW
2 4 V D	24V HOT WIRE DISTRIBUTION
2 4 V F	BAT CPT 24V SW TO FJB & IC
2 4 V A	BATTERY TO EQUALIZER 24V
2 4 V I	RR JCT BOX 24V IGNITION
2 4 V R	BAT CPT 24V DISC SW TO RJB
2 4 W	RR JCT BOX 24V DISC SW (WCL)
2 4 W C	BATT.CPT TO HYD. PUMP (WCL)
2 4 W L	24V BATTERY-HYD. PUMP (WCL)
2 5	24 VOLT ALT.SIGNAL MODULE
2 5 A 1	PRE-EXITATION ALT. BOSCH #1
2 5 A 2	PRE-EXITATION ALT. BOSCH #2
2 5 A	T.T. LT. ALTERNATOR #1
2 5 B	12 VOLTS IGN. ALT. SIGNAL MODULE
2 5 D	12 V. ENGINE RUN / HVAC SYSTEM
2 5 F	12 VOLT IGN. DISTRIBUTION
2 5 H	24 VOLT IGN. ALT. BOSCH
2 5 K	T.T. LT. ALTERNATOR #2
2 6 A	CIGAR LIGHTER
2 6	DRIVER'S WINDOW LIFTER
2 6 B	DRIVER'S WINDOW LIFTER
2 6 C	DRIVER'S WINDOW LIFTER
2 7	LAVATORY-EMERGENCY SONALERT
2 8 A	A/C & HEAT SYSTEM-HI PRESSURE
2 9	A/C & HEAT SYSTEM-DRIVER'S HTR
2 9 A	A/C & HEAT SYSTEM-DRIVER'S HTR
2 9 B	A/C & HEAT SYSTEM-DRIVER'S HTR
2 9 H	HVAC DASH MODULE
3 0 A	GALLEY
3 1 A	A/C & HEAT SYSTEM-UNLOADER
3 1 B	A/C & HEAT SYSTEM-UNLOADER
3 1 B	WIPER & WASHER SYSTEM
3 1 C	WIPER & WASHER SYSTEM

CIRCUIT NUMBER CODE

No.	DESCRIPTION
31D	WIPER & WASHER SYSTEM
31E	WIPER & WASHER SYSTEM
31J	WIPER & WASHER SYSTEM
31X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32B	EXTERIOR LTS-BACK-UP
32C	BACK-UP PWR & SIGNAL
32D	BACK-UP ALARM
35	ENTRANCE DOOR (SEDAN)
35B	ENTRANCE DOOR (SEDAN)
35BB	ENTRANCE DOOR (SEDAN)
35D	ENTRANCE DOOR (SEDAN)
36	JACOB BRAKE SYSREM
36A	JACOB BRAKE SYSREM
38	INTERIOR LTS-24V FLUORESCENT
38A	INTERIOR LTS-24V FLUORESCENT
38C	INTERIOR LTS-24V FLUORESCENT
38D	INTERIOR LTS-24V FLUORESCENT
39	INTERIOR LTS-24V LH CONSOLE SW
39A	INTERIOR LTS-DRIVER"S LTS
39P	READING LIGHTS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
43	HAT RACK FAN
43A	HAT RACK FAN
43B	HAT RACK FAN
43D	HAT RACK FAN
43E	HAT RACK FAN
43F	HAT RACK FAN
43G	HAT RACK FAN
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45B	A/C & HEAT SYSTEM-HEAT SIGN
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
48	ENTRANCE DOOR (SEDAN)
48A	ENTRANCE DOOR (SEDAN)
49	ENTRANCE DOOR (SEDAN)
49A	ENTRANCE DOOR (SEDAN)
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL- AIR HORN
52C	ALARM & SIGNAL- AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
57CA	A/C & HEAT SYSTEM-HEAT SIGN
57CC	A/C & HEAT SYSTEM-HEAT SIGN
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
62	LAVATORY-OCCUPIED LT
62A	LAVATORY-FLUOR LT
62B	LAVATORY-FLUOR LT
62E	LAVATORY-OCCUP & FLUOR LT
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVERS FAN
64B	DRIVERS FAN
64C	DRIVERS FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65P	PASSENGER REC. DAMPER
65D	DRIVER REC. DAMPER
66	O_PASS. ON/OFF
67	24 VOLT RUN DISTRIBUTION
67A	A/C & HEAT SYSTEM
67B	A/C & HEAT SYSTEM
67C	HEATING WINDSHIELD
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67V	A/C & HEAT SYSTEM-WATER VALVE
67X	A/C & HEAT SYSTEM
68	DASH & DEFROST DAMPER MOTOR
68A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH
72C	SUN VISOR-LH
72D	SUN VISOR-LH
73	LAVATORY-FEEDING
74	INTERIOR LTS-READING RH
74A	INTERIOR LTS-READING RH
74D	INTERIOR LTS-READING SIGNAL
75	INTERIOR LTS-READING LH
75A	INTERIOR LTS-READING LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77	A/C & HEAT SYSTEM-HI PRESSURE
77A	A/C & HEAT SYSTEM-DRIVER'S HTR
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85X	12V IGN ABS
85Y	ABS SYSTEM
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
100	INTERIOR LTS-GENERAL
100A	INTERIOR LTS-GENERAL
100B	INTERIOR LTS-GENERAL
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	WORLD TRANSM-SOL. SUPPLY
102A	24V STARTER TO BOSCH ALTERNATOR
103	LOW BUOY
104	WORLD TRANSM-SOL. FORWARD
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR

CIRCUIT NUMBER CODE

No.	DESCRIPTION
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125	GALLEY LAMP
125T	GALLEY LAMP
125W	WORLD TRANSM-RET. INDICATOR
126	KNEELING SYSTEM
126A	KNEELING SYSTEM
126B	KNEELING SYSTEM
126C	KNEELING SYSTEM
126D	KNEELING SYSTEM
126E	KNEELING SYSTEM
126F	KNEELING SYSTEM
126G	KNEELING SYSTEM
126H	KNEELING SYSTEM
126K	KNEELING SYSTEM
126P	KNEELING SYSTEM
126R	KNEELING SYSTEM
126W	5 MPH N.C. SIGNAL (WCL)
126S	KNEELING SYSTEM
126T	KNEELING SYSTEM
127	WORLD TRANSM-LUBE PRESS SW.
127	WORLD TRANSM-RETARDER FEED SOL.
127	POWER- PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT - BURNER ON SIGNAL
128	WORLD TRANSM-SOL. C2
129	POWER- PRE-HEAT WATER HEATER
129B	POWER- PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	A/C & HEAT SYSTEM-EVAP FAN MOTOR
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	GALLEY-HEAT CONTAINERS
133A	GALLEY-HEAT CONTAINERS
133B	GALLEY-HEAT CONTAINERS
133C	GALLEY-HEAT CONTAINERS
133	WORLD TRANSM-RET. ACTUATOR HI
134	GALLEY-HEAT CONTAINERS
134A	GALLEY-HEAT CONTAINERS
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135A	A/C & HEAT SYSTEM-AIR SENSOR
135D	A/C & HEAT SYSTEM-AIR SENSOR
135C	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	GALLEY-ACCESSORIES
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146A	TRANSMISSION-12V IGNITION
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	WORLD TRANSM-OIL TEMP
147A	ETHER COLD START & D.R.L.
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
152	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	WORLD TRANSM-SPARE INPUT (-)
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157B	ABS SYSTEM
157D	A.T.C. SYSTEM
157E	A.T.C. SYSTEM
157F	A.T.C. SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
165A	A/C & HEAT SYSTEM-TRANSMITER
165B	A/C & HEAT SYSTEM-TRANSMITER
165C	A/C & HEAT SYSTEM-TRANSMITER
165D	A/C & HEAT SYSTEM-TRANSMITER
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	A/C & HEAT SYSTEM-TEMP. CTR
167A	A/C & HEAT SYSTEM-TEMP. CTR
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170	LUGGAGE DOOR LOCK
170C	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
225	LAVATORY FAN
225A	LAVATORY FAN
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251A	DDEC III - DATA LOGGER 12 H.W.
251	DDEC III - PRODRIVER 12V H.W.
253	GALLEY-MICROWAVE
254	GALLEY-12V FRIGO NORCOLD
254A	GALLEY-FRIGO
255	GALLEY-COFEEMAKER
255A	GALLEY-COFEEMAKER
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
260	WINDOW AJAR
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
292	FAN CLUTCH RADIATOR SPD 2
300	DOOR AJAR MAGN.SW. (WCL)
300A	POWER SYSTEM SW. (WCL)
300B	DOOR AJAR ALARM (WCL)
301	POWER SYSTEM SW. (WCL)

CIRCUIT NUMBER CODE

No.	DESCRIPTION
302	DOOR AJAR T.T.LT. (WCL)
302A	DOOR AJAR ALARM SIGN.(WCL)
302B	DOOR AJAR MAGN.SW. (WCL)
303	REMOTE WALL SW. DWN (WCL)
304	REMOTE WALL SW. UP (WCL)
305	PARK. BRAKE SOL. VALVE (WCL)
305A	PARK. BRAKE SAFETY SW. (WCL)
306	CONTROL SYSTEM (WCL RICON)
307	CONTROL SYSTEM (WCL RICON)
308	CONTROL SYSTEM (WCL RICON)
309	CONTROL SYSTEM (WCL RICON)
310	EATON TRANSMISSION
311	EATON TRANSMISSION
312	EATON TRANSMISSION
313	EATON TRANSMISSION
314	EATON TRANSMISSION
315	EATON TRANSMISSIOM
316	EATON TRANSMISSION - EPL
317	EATON TRANSMISSION
318	EATON TRANSMISSION
319	EATON TRANSMISSION
320	EATON TRANSMISSION
321	EATON TRANSMISSION
322	EATON TRANSMISSIION
323	EATON TRANSMISSION
324	EATON TRANSMISSION
325	EATON TRANSMISSION
326	EATON TRANSMISSION
327	EATON TRANSMISSION
328	EATON TRANSMISSION
329	EATON TRANSMISSION
330	EATON TRANSMISSION - EPL
331	EATON TRANSMISSION - EPL
332	EATON TRANSMISSION
333	EATON TRANSMISSION - 12V BATTERY
334	EATON GENERATION 2
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE
540	DDEC III-CRUISE ENABLE LTS.

No.	DESCRIPTION
541	DDEC III-CRUISE SET SW
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
583	DDEC III-ENGINE BRAKE 4 CYL.
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
925	J1939-HIGH
926	J1939-LOW
927	J1939-SHIELD
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
953A	THROTTLE INHIBIT
979	DDEC III-ENGINE BRAKE 2 CYL.

No.	DESCRIPTION

No.	DESCRIPTION

CIRCUIT NUMBER CODE

No.	DESCRIPTION
B A	INTERIOR LTS-110V FLUORESCENT
B B	INTERIOR LTS-110V FLUORESCENT
D 1	SOUND SYSTEM-FR RH SPEAKER
D 2	SOUND SYSTEM-FR RH SPEAKER
D 3	SOUND SYSTEM-FR RH SPEAKER
D 4	SOUND SYSTEM-RR RH SPEAKER
D 5	SOUND SYSTEM-RR RH SPEAKER
D 6	SOUND SYSTEM-RR RH SPEAKER
D 7	SOUND SYSTEM-RR RH SPEAKER
D 8	SOUND SYSTEM-RR RH SPEAKER
D 3 4	SOUND SYSTEM-RR RH SPEAKER
D 6 7	SOUND SYSTEM-RR RH SPEAKER
G 1	SOUND SYSTEM-FR LH SPEAKER
G 2	SOUND SYSTEM-FR LH SPEAKER
G 3	SOUND SYSTEM-FR LH SPEAKER
G 4	SOUND SYSTEM-RR LH SPEAKER
G 5	SOUND SYSTEM-RR LH SPEAKER
G 6	SOUND SYSTEM-RR LH SPEAKER
G 7	SOUND SYSTEM-RR LH SPEAKER
G 8	SOUND SYSTEM-RR LH SPEAKER
G 3 4	SOUND SYSTEM-RR LH SPEAKER
G 6 7	SOUND SYSTEM-RR LH SPEAKER
L 1 A	INTERIOR LTS-110V FLUORESCENT
L 1 B	INTERIOR LTS-110V FLUORESCENT
L 2 A	INTERIOR LTS-110V FLUORESCENT
L 2 B	INTERIOR LTS-110V FLUORESCENT
L 0	110V RECEPTACLE- 110V FLUOR.
L 1	110V RECEPTACLE- 110V FLUOR.
L 2	110V RECEPTACLE- 110V FLUOR.
R A	INTERIOR LTS-110V FLUORESCENT
R B	INTERIOR LTS-110V FLUORESCENT
S H 1	SHIELD CHASSIS GRD
S H 2	SHIELD CHASSIS GRD
S H 3	SHIELD CHASSIS GRD
S H 4	SHIELD CHASSIS GRD
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 10	SPARE-RJB TO LUGG CPT #1
S P 11	SPARE-FJB TO RJB
S P 12	SPARE-RJB TO ENGINE
S P 13	SPARE-RJB TO ENGINE
S P 14	SPARE-FJB TO RJB
S P 15	SPARE-RJB TO ENGINE
S P 16	SPARE-RJB TO ENGINE
S P 17	SPARE-RJB TO ENGINE
S P 18	SPARE-FJB TO RJB
S P 24	SPARE-RJB TO LAVATORY ROOF
S P 25	SPARE-RJB TO LAVATORY ROOF
S P 26	SPARE-RJB TO LAVATORY ROOF
S P 27	SPARE-RJB TO LH HAT RACK
S P 28	SPARE-RJB TO LH HAT RACK
S P 31	SPARE-RJB TO RH HAT RACK
S P 32	SPARE-RJB TO RH HAT RACK
S P 33	SPARE-FJB TO RJB
S P 38	SPARE-FJB TO RJB
S P 43	SPARE-FJB TO RJB
S P 45	SPARE-FJB TO RJB
S P 46	SPARE-RJB TO LH FR ROOF
S P 48	SPARE-RJB TO DASH CENTER PANEL
S P 56	SPARE-ENGINE TO RH SW PANEL
S P 57	SPARE-DASH CENTER PANEL TO ENG.
S P 58	SPARE-DASH CENTER PANEL TO ENG.
S P 59	SPARE-FJB TO ENGINE
S P 61	SPARE-FJB TO DASH RH PANEL
S P 68	SPARE-FJB TO ENGINE
S P 69	SPARE-FJB TO FR AXLE
S P 70	SPARE-FJB TO FR AXLE
S P 71	SPARE-FJB TO RH SW PANEL
S P 72	SPARE-FJB TO FR SERV CPT
S P 74	SPARE-FJB TO LH CONSOLE
S P 77	SPARE-FJB TO EVAPORATOR CPT
S P 78	SPARE-FJB TO CONDENSER CPT
S P 79	SPARE-FJB TO CONDENSER CPT
S P 87	SPARE-RJB TO LH HAT RACK
S P 88	SPARE-RJB TO RH HAT RACK
S P 92	SPARE-RJB TO CONDENSER CPT
S P 93	SPARE-RJB TO EVAPORATOR CPT
S P 94	SPARE-RJB TO RR ROOF
S P 95	SPARE-RJB TO RR ROOF
S P 96	SPARE-RJB TO LUGG CPT #2
S P 97	SPARE-RJB TO LUGG CPT #3
S P 98	SPARE-RJB TO LUGG CPT #3
S P 104	SPARE-RJB TO ENGINE CPT
S P 105	SPARE-FJB TO ENGINE
S P 106	SPARE-RJB TO BATT. CPT.
S P 107	SPARE-RJB TO BATT. CPT.
S P 108	SPARE-RJB TO BATT. CPT.
S P 109	SPARE-RJB TO ENGINE CPT.
S P 110	SPARE-RJB TO ENGINE CPT.
S P 111	SPARE-RJB TO ENGINE CPT.
S P 112	SPARE-RJB TO ENGINE CPT.
S P 114	SPARE-FJB TO U/DASH WIPER
S P 115	SPARE-FJB TO U/DASH WIPER
S P 116	SPARE-FJB TO U/DASH FLOOR
S P 117	SPARE-FJB TO U/DASH FLOOR
S P 119	SPARE-RJB TO ENGINE CPT.
W C	A/C & HEAT SYST-EVAP CTR SIGN
Y C	INTERIOR LTS-110V FLUORESCENT
Y D	INTERIOR LTS-110V FLUORESCENT
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0	GALLEY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A	A/C SYSTEM-EVAP. GRN
0 A A	RS - VOLTAGE REGULATOR GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN EVAP. & CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 E	RS - HAT RACK ACCES. LH GRD
0 E A	EATON TRANSMISSION GRD
0 F	RS - HAT RACK ACCES. RH GRD
0 G	RS - HAT RACK ACCES. RH GRD
0 H	RS - LAVATORY ACCES. GRD
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L 6	FS - FRONT SERVICE CPT LTS GRD
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR (SEDAN) GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 1	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	FS - SOUND SYS. JCT PANEL GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R E	RADIO &CTRL HEAD CHASSIS GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN - GND RELAY
0 S A	EC-BOSCH ALT. GROUND
0 S 2	SOUND SYSTEM RADIO GRD
0 S 3	SOUND SYSTEM VIDEO GRD
0 S S	SOUNS SYSTEM BATT. GRD
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 T 5	FS - HVAC DASH MODULE. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS SYSTEM - GRD
0 Y 2	ABS SYSTEM - GRD
0 Y 3	ABS SYSTEM - GRD
0 Y 4	ABS SYSTEM - GRD
0 Y 5	ABS SYSTEM - GRD
0 Y 6	ABS SYSTEM - GRD
0 Z	RR JCT BOX CPT GRD STUD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 A	A/C & HEAT SYSTEM-COOL 1 SIGN

CIRCUIT NUMBER CODE

No.	DESCRIPTION
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 B B	A/C & HEAT SYSTEM-COOL SIGN
2 H	A/C & HEAT SYSTEM-HI PRESS SW
2 E	A/C & HEAT SYSTEM EVAP CONT
2 F	A/C & HEAT SYSTEM EVAP CONT
2 H L	A/C & HEAT SYSTEM-LO & HI PRESS SW
2 L	A/C & HEAT SYSTEM-LO PRESS SW
4	HOSTESS & PASSENGER CHIME
4 A	HOSTESS & PASSENGER CHIME
4 B	PASSENGER CHIME
4 C	HOSTESS CHIME
5	INTERIOR LTS-AISLE & EMERG. EXIT
5	UPPER WINDSHIELD DEFROSTER
5 D	UPPER WINDSHIELD DEFROSTER
5 E	UPPER WINDSHIELD DEFROSTER
5 N	INTERIOR LTS-EMERGENCY EXIT
5 N C	SPEED SIGNAL LOWER 5MPH
5 N O	SPEED SIGNAL HIGHER 5MPH
6	INTERIOR LTS-AISLE
7 B	ENTRANCE DOOR (SEDAN)
7 D	ENTRANCE DOOR (SEDAN)
7 D A	ENTRANCE DOOR (SEDAN)
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
1 0	INTERIOR LTS-LUGGAGE CPT
1 0 A	INTERIOR LTS-LUGGAGE CPT
1 0 B	INTERIOR LTS-LUGGAGE CPT
1 0 D	INTERIOR LTS-LUGGAGE CPT
1 0 F	INTERIOR LTS-LUGGAGE CPT
1 0 H	INTERIOR LTS-LUGGAGE CPT
1 0 K	INTERIOR LTS-LUGGAGE CPT
1 0 R	INTERIOR LTS-LUGGAGE DOOR AJAR
1 1	FR DESTINATION SIGN
1 1 A	FR DESTINATION SIGN
1 1 B	FR DESTINATION SIGN
1 1 C	FR DESTINATION SIGN
1 1 D	FR DESTINATION SIGN
1 1 E	FR DESTINATION SIGN
1 1 K	FR DESTINATION SIGN
1 2	12V BAT ELECTRONIC JCT BLOCK
1 2	BAT CPT 12V BATTERY
1 2 A	FR JCT BOX 12V DISC SW
1 2 A	RR JCT BOX 12V DISC SW
1 2 B	12V BAT ELECTRICAL JCT BLOCK
1 2 B	RR JCT BOX 12V DISC SW
1 2 B	FR JCT BOX 12V DISC SW
1 2 B E	BAT. EQUALIZER MONITOR
1 2 C	FR JCT BOX 12V DISC SW
1 2 C	RR JCT BOX 12V HOT WIRE
1 2 C E	RR JCT BOX 12V HOT WIRE
1 2 D	BAT CPT 12V BATTERY
1 2 D T	TTLT MODULE
1 2 E	FR JCT BOX 12V DISC SW
1 2 E	RR JCT BOX 12V DISC SW
1 2 F	BAT CPT 12V FJB & IC
1 2 F	FR JCT BOX 12V DISC SW
1 2 F	RR JCT BOX 12V DISC SW
1 2 G	FR JCT BOX 12V DISC SW
1 2 H	12 V IGNITION D.T.RUN LIGHT
1 2 J	FR JCT BOX 12V DISC SW
1 2 I	12V IGNITION DISTRIBUTION
1 2 I	RR JCT BOX 12V IGNITION
1 2 K	12 VOLT IGN. TTLT & HVAC MODULE
1 2 I A	12V IGNITION DISTRIBUTION
1 2 I A	FR JCT BOX 12V IGNITION
1 2 I B	FR JCT BOX 12V IGNITION
1 2 I E	ABS-FR JCT BOX 12V IGNITION
1 2 I F	FR JCT BOX 12V IGNITION
1 2 L X	CLUSTER (12V HOT WIRE)
1 2 M	ABS-FR JCT BOX 12V DISC. SW.
1 2 P	LH CONSOLE POWER OUTLET
1 2 R	BAT CPT 12V DISC RLY TO RJB
1 2 R	MEMORY BATTERY RADIO
1 2 S	SOUND SYSTEM 12V RADIO
1 2 S 1	SOUND SYSTEM 12V RADIO
1 2 S 1 A	DVD KARAOKE FEEDING
1 2 S 2	SOUND SYSTEM 12V RADIO
1 2 S 2 A	DVD KARAOKE FEEDING
1 2 S B	SOUND SYSTEM 12V FEEDING
1 2 S S	SOUND SYSTEM 12V FEEDING
1 2 V A	BATTERY TO EQUALIZER 12V
1 2 V D	12V HOT WIRE DISTRIBUTION
1 2 V F	BAT CPT 12V FJB & IC
1 2 V I	12V IGNITION DISTRIBUTION
1 2 V R	BAT CPT 12V DISC RLY TO RJB
1 2 W	12V BATTERY DDEC III
1 2 W	ENTRANCE DOOR (SEDAN)
1 2 W A	ENTRANCE DOOR (SEDAN)
1 2 X	FR JCT BOX 12V DISC SW
1 2 X 2	FR JCT BOX 12V DISC SW
1 2 Y	FR JCT BOX 12V DISC SW
1 3 A	ALARM & SIGNAL-LO AIR PRIM.
1 3 B	ALARM & SIGNAL-LO AIR SEC.
1 4	LAVATORY-FLUSHING PUMP
1 4 A	LAVATORY-FLUSHING PUMP
1 5	EXTERIOR LTS-MULTI FUNC LEVEL
1 5 A	WIPER & WASHER UPPER WINDSHIELD
1 6	SPEED - SIGNAL +
1 6 A	SPEED - SIGNAL +
1 6 T	SPEED - SIGNAL +
1 7	EXTERIOR LTS-FLASHER UNIT
1 7 A	EXTERIOR LTS-FLASHER UNIT
1 9	DIFFERENTIAL OIL TEMP
2 0	SPEED - SIGNAL -
2 0 T	SPEED - SIGNAL -
2 0 W	SPEED - SIGNAL -
2 1	EXTERIOR LTS-DIRECTIONNAL LH
2 1 A	EXTERIOR LTS-DIRECTIONNAL LH
2 1 B	EXTERIOR LTS-HAZARD
2 1 C	EXTERIOR LTS-CORNERING LH
2 1 H	EXTERIOR LTS-DIRECTIONNAL LH
2 1 K	EXTERIOR LTS-CORNERING
2 1 N	EXTERIOR LTS-CORNERING LH
2 1 P	EXTERIOR LTS-CORNERING LH
2 3	EXTERIOR LTS-DIRECTIONNAL RH
2 3	EXTERIOR LTS-DIRECTIONNAL RH
2 3 A	EXTERIOR LTS-DIRECTIONNAL RH
2 3 B	EXTERIOR LTS-DIRECTIONNAL RH
2 3 C	EXTERIOR LTS-CORNERING RH
2 3 N	EXTERIOR LTS-CORNERING RH
2 3 P	EXTERIOR LTS-CORNERING RH
2 4	BAT CPT 24V BATTERY
2 4	FR JCT BOX 24V DISC SW
2 4 A	BOOSTER BLOCK 24V DISC SW
2 4 A	FR JCT BOX 24V DISC SW
2 4 A	RR JCT BOX 24V DISC SW
2 4 B	24V STARTER RLY FEEDING
2 4 B	FR JCT BOX 24V DISC SW
2 4 B C	24 VOLT BATT. CHARGER
2 4 B E	RJB CPT-BAT EQ MONITOR HOT WIRE
2 4 C	FR JCT BOX 24V DISC SW
2 4 C	RR JCT BOX 24V DISC SW
2 4 D	BAT CPT 24V HOT WIRE
2 4 D	FR JCT BOX 24V HOT WIRE
2 4 D	RR JCT BOX 24V HOT WIRE
2 4 D A	A/C JCT BOX 24V HOT WIRE
2 4 E	BAT CPT 24V DISC SW
2 4 E	FR JCT BOX 24V DISC SW
2 4 E	RR JCT BOX 24V DISC SW
2 4 F	FR JCT BOX 24V DISC SW
2 4 F	RR JCT BOX 24V DISC SW
2 4 G	FR JCT BOX 24V DISC SW
2 4 G	RR JCT BOX 24V DISC SW
2 4 H	FR JCT BOX 24V DISC SW
2 4 H	RR JCT BOX 24V DISC SW
2 4 I	FR JCT BOX 24V IGNITION
2 4 I	RR JCT BOX 24V IGNITION
2 4 I A	FR JCT BOX 24V IGNITION
2 4 I B	FR JCT BOX 24V IGNITION
2 4 I B	RR JCT BOX 24V IGNITION
2 4 I C	FR JCT BOX 24V IGNITION
2 4 I F	FJB 24VOLT IGNITION
2 4 P	FR JCT BOX 24V DISC SW
2 4 S	24V DISC SW RLY SIGNAL
2 4 S 1	SOUND SYSTEM 24V AMPLIFIER
2 4 S 2	SOUND SYSTEM 24V AMPLIFIER
2 4 S 3	SOUND SYSTEM 24V VIDEO
2 4 S 4	SOUND SYSTEM 24V VIDEO
2 4 S B	SOUND SYSTEM 24V FEEDING
2 4 S S	SOUND SYSTEM 24V FEEDING
2 4 R	24 VOLTS FRONT CAMERA SW.
2 4 V 2	RR JCT BOX 24V DISC SW
2 4 V 3	RR JCT BOX 24V DISC SW
2 4 V 4	RR JCT BOX 24V DISC SW
2 4 V 5	RR JCT BOX 24V DISC SW
2 4 V D	24V HOT WIRE DISTRIBUTION
2 4 V F	BAT CPT 24V SW TO FJB & IC
2 4 V A	BATTERY TO EQUALIZER 24V
2 4 V I	RR JCT BOX 24V IGNITION
2 4 V R	BAT CPT 24V DISC SW TO RJB
2 4 W	RR JCT BOX 24V DISC SW (WCL)
2 4 W C	BATT.CPT TO HYD. PUMP (WCL)
2 4 W L	24V BATTERY-HYD. PUMP (WCL)
2 5	24 VOLT ALT.SIGNAL MODULE
2 5 A 1	PRE-EXITATION ALT. BOSCH #1
2 5 A 2	PRE-EXITATION ALT. BOSCH #2
2 5 A	T.T. LT. ALTERNATOR #1
2 5 B	12 VOLTS IGN. ALT. SIGNAL MODULE
2 5 D	12 V. ENGINE RUN / HVAC SYSTEM
2 5 F	12 VOLT IGN. DISTRIBUTION
2 5 H	24 VOLT IGN. ALT. BOSCH
2 5 K	T.T. LT. ALTERNATOR #2
2 6 A	CIGAR LIGHTER
2 6	DRIVER'S WINDOW LIFTER
2 6 B	DRIVER'S WINDOW LIFTER
2 6 C	DRIVER'S WINDOW LIFTER
2 7	LAVATORY-EMERGENCY SONALERT
2 8 A	A/C & HEAT SYSTEM-HI PRESSURE
2 9	A/C & HEAT SYSTEM-DRIVER'S HTR
2 9 A	A/C & HEAT SYSTEM-DRIVER'S HTR
2 9 B	A/C & HEAT SYSTEM-DRIVER'S HTR
2 9 H	HVAC DASH MODULE
3 0 A	GALLEY
3 1 A	A/C & HEAT SYSTEM-UNLOADER
3 1 B	A/C & HEAT SYSTEM-UNLOADER
3 1 B	WIPER & WASHER SYSTEM
3 1 C	WIPER & WASHER SYSTEM

CIRCUIT NUMBER CODE

No.	DESCRIPTION
31D	WIPER & WASHER SYSTEM
31E	WIPER & WASHER SYSTEM
31J	WIPER & WASHER SYSTEM
31X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32B	EXTERIOR LTS-BACK-UP
32C	BACK-UP PWR & SIGNAL
32D	BACK-UP ALARM
35	ENTRANCE DOOR (SEDAN)
35B	ENTRANCE DOOR (SEDAN)
35BB	ENTRANCE DOOR (SEDAN)
35D	ENTRANCE DOOR (SEDAN)
36	JACOB BRAKE SYSREM
36A	JACOB BRAKE SYSREM
38	INTERIOR LTS-24V FLUORESCENT
38A	INTERIOR LTS-24V FLUORESCENT
38C	INTERIOR LTS-24V FLUORESCENT
38D	INTERIOR LTS-24V FLUORESCENT
39	INTERIOR LTS-24V LH CONSOLE SW
39A	INTERIOR LTS-DRIVER"S LTS
39P	READING LIGHTS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
43	HAT RACK FAN
43A	HAT RACK FAN
43B	HAT RACK FAN
43D	HAT RACK FAN
43E	HAT RACK FAN
43F	HAT RACK FAN
43G	HAT RACK FAN
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45B	A/C & HEAT SYSTEM-HEAT SIGN
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
48	ENTRANCE DOOR (SEDAN)
48A	ENTRANCE DOOR (SEDAN)
49	ENTRANCE DOOR (SEDAN)
49A	ENTRANCE DOOR (SEDAN)
50	AIR DRYER
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL- AIR HORN
52C	ALARM & SIGNAL- AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
57CA	A/C & HEAT SYSTEM-HEAT SIGN
57CC	A/C & HEAT SYSTEM-HEAT SIGN
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
62	LAVATORY-OCCUPIED LT
62A	LAVATORY-FLUOR LT
62B	LAVATORY-FLUOR LT
62E	LAVATORY-OCCUP & FLUOR LT
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVERS FAN
64B	DRIVERS FAN
64C	DRIVERS FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65P	PASSENGER REC. DAMPER
65D	DRIVER REC. DAMPER
66	O_PASS. ON/OFF
67	24 VOLT RUN DISTRIBUTION
67A	A/C & HEAT SYSTEM
67B	A/C & HEAT SYSTEM
67C	HEATING WINDSHIELD
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67V	A/C & HEAT SYSTEM-WATER VALVE
67X	A/C & HEAT SYSTEM
68	DASH & DEFROST DAMPER MOTOR
68A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH
72C	SUN VISOR-LH
72D	SUN VISOR-LH
73	LAVATORY-FEEDING
74	INTERIOR LTS-READING RH
74A	INTERIOR LTS-READING RH
74D	INTERIOR LTS-READING SIGNAL
75	INTERIOR LTS-READING LH
75A	INTERIOR LTS-READING LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77	A/C & HEAT SYSTEM-HI PRESSURE
77A	A/C & HEAT SYSTEM-DRIVER'S HTR
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85X	12V IGN ABS
85Y	ABS SYSTEM
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
100	INTERIOR LTS-GENERAL
100A	INTERIOR LTS-GENERAL
100B	INTERIOR LTS-GENERAL
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	WORLD TRANSM-SOL. SUPPLY
102A	24V STARTER TO BOSCH ALTERNATOR
103	LOW BUOY
104	WORLD TRANSM-SOL. FORWARD
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR

CIRCUIT NUMBER CODE

No.	DESCRIPTION
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125	GALLEY LAMP
125T	GALLEY LAMP
125W	WORLD TRANSM-RET. INDICATOR
126	KNEELING SYSTEM
126A	KNEELING SYSTEM
126B	KNEELING SYSTEM
126C	KNEELING SYSTEM
126D	KNEELING SYSTEM
126E	KNEELING SYSTEM
126F	KNEELING SYSTEM
126G	KNEELING SYSTEM
126H	KNEELING SYSTEM
126K	KNEELING SYSTEM
126P	KNEELING SYSTEM
126R	KNEELING SYSTEM
126W	5 MPH N.C. SIGNAL (WCL)
126S	KNEELING SYSTEM
126T	KNEELING SYSTEM
127	WORLD TRANSM-LUBE PRESS SW.
127	WORLD TRANSM-RETARDER FEED SOL.
127	POWER- PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT - BURNER ON SIGNAL
128	WORLD TRANSM-SOL. C2
129	POWER- PRE-HEAT WATER HEATER
129B	POWER- PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	A/C & HEAT SYSTEM-EVAP FAN MOTOR
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	GALLEY-HEAT CONTAINERS
133A	GALLEY-HEAT CONTAINERS
133B	GALLEY-HEAT CONTAINERS
133C	GALLEY-HEAT CONTAINERS
133	WORLD TRANSM-RET. ACTUATOR HI
134	GALLEY-HEAT CONTAINERS
134A	GALLEY-HEAT CONTAINERS
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135A	A/C & HEAT SYSTEM-AIR SENSOR
135D	A/C & HEAT SYSTEM-AIR SENSOR
135C	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	GALLEY-ACCESSORIES
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146A	TRANSMISSION-12V IGNITION
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	WORLD TRANSM-OIL TEMP
147A	ETHER COLD START & D.R.L.
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
152	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	WORLD TRANSM-SPARE INPUT (-)
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157B	ABS SYSTEM
157D	A.T.C. SYSTEM
157E	A.T.C. SYSTEM
157F	A.T.C. SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
165A	A/C & HEAT SYSTEM-TRANSMITER
165B	A/C & HEAT SYSTEM-TRANSMITER
165C	A/C & HEAT SYSTEM-TRANSMITER
165D	A/C & HEAT SYSTEM-TRANSMITER
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	A/C & HEAT SYSTEM-TEMP. CTR
167A	A/C & HEAT SYSTEM-TEMP. CTR
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170	LUGGAGE DOOR LOCK
170C	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
225	LAVATORY FAN
225A	LAVATORY FAN
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251A	DDEC III - DATA LOGGER 12 H.W.
251	DDEC III - PRODRIVER 12V H.W.
253	GALLEY-MICROWAVE
254	GALLEY-12V FRIGO NORCOLD
254A	GALLEY-FRIGO
255	GALLEY-COFEEMAKER
255A	GALLEY-COFEEMAKER
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
260	WINDOW AJAR
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
292	FAN CLUTCH RADIATOR SPD 2
300	DOOR AJAR MAGN.SW. (WCL)
300A	POWER SYSTEM SW. (WCL)
300B	DOOR AJAR ALARM (WCL)
301	POWER SYSTEM SW. (WCL)

CIRCUIT NUMBER CODE

No.	DESCRIPTION
302	DOOR AJAR T.T.LT. (WCL)
302A	DOOR AJAR ALARM SIGN.(WCL)
302B	DOOR AJAR MAGN.SW. (WCL)
303	REMOTE WALL SW. DWN (WCL)
304	REMOTE WALL SW. UP (WCL)
305	PARK. BRAKE SOL. VALVE (WCL)
305A	PARK. BRAKE SAFETY SW. (WCL)
306	CONTROL SYSTEM (WCL RICON)
307	CONTROL SYSTEM (WCL RICON)
308	CONTROL SYSTEM (WCL RICON)
309	CONTROL SYSTEM (WCL RICON)
310	EATON TRANSMISSION
311	EATON TRANSMISSION
312	EATON TRANSMISSION
313	EATON TRANSMISSION
314	EATON TRANSMISSION
315	EATON TRANSMISSIOM
316	EATON TRANSMISSION - EPL
317	EATON TRANSMISSION
318	EATON TRANSMISSION
319	EATON TRANSMISSION
320	EATON TRANSMISSION
321	EATON TRANSMISSION
322	EATON TRANSMISSIION
323	EATON TRANSMISSION
324	EATON TRANSMISSION
325	EATON TRANSMISSION
326	EATON TRANSMISSION
327	EATON TRANSMISSION
328	EATON TRANSMISSION
329	EATON TRANSMISSION
330	EATON TRANSMISSION - EPL
331	EATON TRANSMISSION - EPL
332	EATON TRANSMISSION
333	EATON TRANSMISSION - 12V BATTERY
334	EATON GENERATION 2
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE
540	DDEC III-CRUISE ENABLE LTS.

No.	DESCRIPTION
541	DDEC III-CRUISE SET SW
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
583	DDEC III-ENGINE BRAKE 4 CYL.
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
925	J1939-HIGH
926	J1939-LOW
927	J1939-SHIELD
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
953A	THROTTLE INHIBIT
979	DDEC III-ENGINE BRAKE 2 CYL.

No.	DESCRIPTION

No.	DESCRIPTION

CIRCUIT NUMBER CODE

No.	DESCRIPTION
B A	INTERIOR LTS-110V FLUORESCENT
B B	INTERIOR LTS-110V FLUORESCENT
D 1	SOUND SYSTEM-FR RH SPEAKER
D 2	SOUND SYSTEM-FR RH SPEAKER
D 3	SOUND SYSTEM-FR RH SPEAKER
D 4	SOUND SYSTEM-RR RH SPEAKER
D 5	SOUND SYSTEM-RR RH SPEAKER
D 6	SOUND SYSTEM-RR RH SPEAKER
D 7	SOUND SYSTEM-RR RH SPEAKER
D 8	SOUND SYSTEM-RR RH SPEAKER
D 3 4	SOUND SYSTEM-RR RH SPEAKER
D 6 7	SOUND SYSTEM-RR RH SPEAKER
G 1	SOUND SYSTEM-FR LH SPEAKER
G 2	SOUND SYSTEM-FR LH SPEAKER
G 3	SOUND SYSTEM-FR LH SPEAKER
G 4	SOUND SYSTEM-RR LH SPEAKER
G 5	SOUND SYSTEM-RR LH SPEAKER
G 6	SOUND SYSTEM-RR LH SPEAKER
G 7	SOUND SYSTEM-RR LH SPEAKER
G 8	SOUND SYSTEM-RR LH SPEAKER
G 3 4	SOUND SYSTEM-RR LH SPEAKER
G 6 7	SOUND SYSTEM-RR LH SPEAKER
L 1 A	INTERIOR LTS-110V FLUORESCENT
L 1 B	INTERIOR LTS-110V FLUORESCENT
L 2 A	INTERIOR LTS-110V FLUORESCENT
L 2 B	INTERIOR LTS-110V FLUORESCENT
L 0	110V RECEPTACLE- 110V FLUOR.
L 1	110V RECEPTACLE- 110V FLUOR.
L 2	110V RECEPTACLE- 110V FLUOR.
R A	INTERIOR LTS-110V FLUORESCENT
R B	INTERIOR LTS-110V FLUORESCENT
S H 1	SHIELD CHASSIS GRD
S H 2	SHIELD CHASSIS GRD
S H 3	SHIELD CHASSIS GRD
S H 4	SHIELD CHASSIS GRD
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 10	SPARE-RJB TO LUGG CPT #1
S P 11	SPARE-FJB TO RJB
S P 12	SPARE-RJB TO ENGINE
S P 13	SPARE-RJB TO ENGINE
S P 14	SPARE-FJB TO RJB
S P 15	SPARE-RJB TO ENGINE
S P 16	SPARE-RJB TO ENGINE
S P 17	SPARE-RJB TO ENGINE
S P 18	SPARE-FJB TO RJB
S P 24	SPARE-RJB TO LAVATORY ROOF
S P 25	SPARE-RJB TO LAVATORY ROOF
S P 26	SPARE-RJB TO LAVATORY ROOF
S P 27	SPARE-RJB TO LH HAT RACK
S P 28	SPARE-RJB TO LH HAT RACK
S P 31	SPARE-RJB TO RH HAT RACK
S P 32	SPARE-RJB TO RH HAT RACK
S P 33	SPARE-FJB TO RJB
S P 38	SPARE-FJB TO RJB
S P 43	SPARE-FJB TO RJB
S P 45	SPARE-FJB TO RJB
S P 46	SPARE-RJB TO LH FR ROOF
S P 48	SPARE-RJB TO DASH CENTER PANEL
S P 56	SPARE-ENGINE TO RH SW PANEL
S P 57	SPARE-DASH CENTER PANEL TO ENG.
S P 58	SPARE-DASH CENTER PANEL TO ENG.
S P 59	SPARE-FJB TO ENGINE
S P 61	SPARE-FJB TO DASH RH PANEL
S P 68	SPARE-FJB TO ENGINE
S P 69	SPARE-FJB TO FR AXLE
S P 70	SPARE-FJB TO FR AXLE
S P 71	SPARE-FJB TO RH SW PANEL
S P 72	SPARE-FJB TO FR SERV CPT
S P 74	SPARE-FJB TO LH CONSOLE
S P 77	SPARE-FJB TO EVAPORATOR CPT
S P 78	SPARE-FJB TO CONDENSER CPT
S P 79	SPARE-FJB TO CONDENSER CPT
S P 87	SPARE-RJB TO LH HAT RACK
S P 88	SPARE-RJB TO RH HAT RACK
S P 92	SPARE-RJB TO CONDENSER CPT
S P 93	SPARE-RJB TO EVAPORATOR CPT
S P 94	SPARE-RJB TO RR ROOF
S P 95	SPARE-RJB TO RR ROOF
S P 96	SPARE-RJB TO LUGG CPT #2
S P 97	SPARE-RJB TO LUGG CPT #3
S P 98	SPARE-RJB TO LUGG CPT #3
S P 104	SPARE-RJB TO ENGINE CPT
S P 105	SPARE-FJB TO ENGINE
S P 106	SPARE-RJB TO BATT. CPT.
S P 107	SPARE-RJB TO BATT. CPT.
S P 108	SPARE-RJB TO BATT. CPT.
S P 109	SPARE-RJB TO ENGINE CPT.
S P 110	SPARE-RJB TO ENGINE CPT.
S P 111	SPARE-RJB TO ENGINE CPT.
S P 112	SPARE-RJB TO ENGINE CPT.
S P 114	SPARE-FJB TO U/DASH WIPER
S P 115	SPARE-FJB TO U/DASH WIPER
S P 116	SPARE-FJB TO U/DASH FLOOR
S P 117	SPARE-FJB TO U/DASH FLOOR
S P 119	SPARE-RJB TO ENGINE CPT.
W C	A/C & HEAT SYST-EVAP CTR SIGN
Y C	INTERIOR LTS-110V FLUORESCENT
Y D	INTERIOR LTS-110V FLUORESCENT
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0	GALLEY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A	A/C SYSTEM-EVAP. GRN
0 A A	RS - VOLTAGE REGULATOR GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN EVAP. & CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 E	RS - HAT RACK ACCES. LH GRD
0 E A	EATON TRANSMISSION GRD
0 F	RS - HAT RACK ACCES. RH GRD
0 G	RS - HAT RACK ACCES. RH GRD
0 H	RS - LAVATORY ACCES. GRD
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L 6	FS - FRONT SERVICE CPT LTS GRD
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR (SEDAN) GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 1	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	FS - SOUND SYS. JCT PANEL GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R E	RADIO &CTRL HEAD CHASSIS GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN - GND RELAY
0 S A	EC-BOSCH ALT. GROUND
0 S 2	SOUND SYSTEM RADIO GRD
0 S 3	SOUND SYSTEM VIDEO GRD
0 S S	SOUNS SYSTEM BATT. GRD
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 T 5	FS - HVAC DASH MODULE. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS SYSTEM - GRD
0 Y 2	ABS SYSTEM - GRD
0 Y 3	ABS SYSTEM - GRD
0 Y 4	ABS SYSTEM - GRD
0 Y 5	ABS SYSTEM - GRD
0 Y 6	ABS SYSTEM - GRD
0 Z	RR JCT BOX CPT GRD STUD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 A	A/C & HEAT SYSTEM-COOL 1 SIGN

CIRCUIT NUMBER CODE

No.	DESCRIPTION
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 B B	A/C & HEAT SYSTEM-COOL SIGN
2 H	A/C & HEAT SYSTEM-HI PRESS SW
2 E	A/C & HEAT SYSTEM EVAP CONT
2 F	A/C & HEAT SYSTEM EVAP CONT
2 H L	A/C & HEAT SYSTEM-LO & HI PRESS SW
2 L	A/C & HEAT SYSTEM-LO PRESS SW
4	HOSTESS & PASSENGER CHIME
4 A	HOSTESS & PASSENGER CHIME
4 B	PASSENGER CHIME
4 C	HOSTESS CHIME
5	INTERIOR LTS-AISLE & EMERG. EXIT
5	UPPER WINDSHIELD DEFROSTER
5 D	UPPER WINDSHIELD DEFROSTER
5 E	UPPER WINDSHIELD DEFROSTER
5 N	INTERIOR LTS-EMERGENCY EXIT
5 N C	SPEED SIGNAL LOWER 5MPH
5 N O	SPEED SIGNAL HIGHER 5MPH
6	INTERIOR LTS-AISLE
7 B	ENTRANCE DOOR (SEDAN)
7 D	ENTRANCE DOOR (SEDAN)
7 D A	ENTRANCE DOOR (SEDAN)
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
1 0	INTERIOR LTS-LUGGAGE CPT
1 0 A	INTERIOR LTS-LUGGAGE CPT
1 0 B	INTERIOR LTS-LUGGAGE CPT
1 0 D	INTERIOR LTS-LUGGAGE CPT
1 0 F	INTERIOR LTS-LUGGAGE CPT
1 0 H	INTERIOR LTS-LUGGAGE CPT
1 0 K	INTERIOR LTS-LUGGAGE CPT
1 0 R	INTERIOR LTS-LUGGAGE DOOR AJAR
1 1	FR DESTINATION SIGN
1 1 A	FR DESTINATION SIGN
1 1 B	FR DESTINATION SIGN
1 1 C	FR DESTINATION SIGN
1 1 D	FR DESTINATION SIGN
1 1 E	FR DESTINATION SIGN
1 1 K	FR DESTINATION SIGN
1 2	12V BAT ELECTRONIC JCT BLOCK
1 2	BAT CPT 12V BATTERY
1 2 A	FR JCT BOX 12V DISC SW
1 2 A	RR JCT BOX 12V DISC SW
1 2 B	12V BAT ELECTRICAL JCT BLOCK
1 2 B	RR JCT BOX 12V DISC SW
1 2 B	FR JCT BOX 12V DISC SW
1 2 B E	BAT. EQUALIZER MONITOR
1 2 C	FR JCT BOX 12V DISC SW
1 2 C	RR JCT BOX 12V HOT WIRE
1 2 C E	RR JCT BOX 12V HOT WIRE
1 2 D	BAT CPT 12V BATTERY
1 2 D T	TTLT MODULE
1 2 E	FR JCT BOX 12V DISC SW
1 2 E	RR JCT BOX 12V DISC SW
1 2 F	BAT CPT 12V FJB & IC
1 2 F	FR JCT BOX 12V DISC SW
1 2 F	RR JCT BOX 12V DISC SW
1 2 G	FR JCT BOX 12V DISC SW
1 2 H	12 V IGNITION D.T.RUN LIGHT
1 2 J	FR JCT BOX 12V DISC SW
1 2 I	12V IGNITION DISTRIBUTION
1 2 I	RR JCT BOX 12V IGNITION
1 2 K	12 VOLT IGN. TTLT & HVAC MODULE
1 2 I A	12V IGNITION DISTRIBUTION
1 2 I A	FR JCT BOX 12V IGNITION
1 2 I B	FR JCT BOX 12V IGNITION
1 2 I E	ABS-FR JCT BOX 12V IGNITION
1 2 I F	FR JCT BOX 12V IGNITION
1 2 L X	CLUSTER (12V HOT WIRE)
1 2 M	ABS-FR JCT BOX 12V DISC. SW.
1 2 P	LH CONSOLE POWER OUTLET
1 2 R	BAT CPT 12V DISC RLY TO RJB
1 2 R	MEMORY BATTERY RADIO
1 2 S	SOUND SYSTEM 12V RADIO
1 2 S 1	SOUND SYSTEM 12V RADIO
1 2 S 1 A	DVD KARAOKE FEEDING
1 2 S 2	SOUND SYSTEM 12V RADIO
1 2 S 2 A	DVD KARAOKE FEEDING
1 2 S B	SOUND SYSTEM 12V FEEDING
1 2 S S	SOUND SYSTEM 12V FEEDING
1 2 V A	BATTERY TO EQUALIZER 12V
1 2 V D	12V HOT WIRE DISTRIBUTION
1 2 V F	BAT CPT 12V FJB & IC
1 2 V I	12V IGNITION DISTRIBUTION
1 2 V R	BAT CPT 12V DISC RLY TO RJB
1 2 W	12V BATTERY DDEC III
1 2 W	ENTRANCE DOOR (SEDAN)
1 2 W A	ENTRANCE DOOR (SEDAN)
1 2 X	FR JCT BOX 12V DISC SW
1 2 X 2	FR JCT BOX 12V DISC SW
1 2 Y	FR JCT BOX 12V DISC SW
1 3 A	ALARM & SIGNAL-LO AIR PRIM.
1 3 B	ALARM & SIGNAL-LO AIR SEC.
1 4	LAVATORY-FLUSHING PUMP
1 4 A	LAVATORY-FLUSHING PUMP
1 4 P	LAVATORY-FLUSHING PUMP
1 5	EXTERIOR LTS-MULTI FUNC LEVEL
1 5 A	WIPER & WASHER UPPER WINDSHIELD
1 6	SPEED - SIGNAL +
1 6 A	SPEED - SIGNAL +
1 6 T	SPEED - SIGNAL +
1 7	EXTERIOR LTS-FLASHER UNIT
1 7 A	EXTERIOR LTS-FLASHER UNIT
1 9	DIFFERENTIAL OIL TEMP
2 0	SPEED - SIGNAL -
2 0 T	SPEED - SIGNAL -
2 0 W	SPEED - SIGNAL -
2 1	EXTERIOR LTS-DIRECTIONNAL LH
2 1 A	EXTERIOR LTS-DIRECTIONNAL LH
2 1 B	EXTERIOR LTS-HAZARD
2 1 C	EXTERIOR LTS-CORNERING LH
2 1 H	EXTERIOR LTS-DIRECTIONNAL LH
2 1 K	EXTERIOR LTS-CORNERING
2 1 N	EXTERIOR LTS-CORNERING LH
2 1 P	EXTERIOR LTS-CORNERING LH
2 3	EXTERIOR LTS-DIRECTIONNAL RH
2 3	EXTERIOR LTS-DIRECTIONNAL RH
2 3 A	EXTERIOR LTS-DIRECTIONNAL RH
2 3 B	EXTERIOR LTS-DIRECTIONNAL RH
2 3 C	EXTERIOR LTS-CORNERING RH
2 3 N	EXTERIOR LTS-CORNERING RH
2 3 P	EXTERIOR LTS-CORNERING RH
2 4	BAT CPT 24V BATTERY
2 4	FR JCT BOX 24V DISC SW
2 4 A	BOOSTER BLOCK 24V DISC SW
2 4 A	FR JCT BOX 24V DISC SW
2 4 A	RR JCT BOX 24V DISC SW
2 4 B	24V STARTER RLY FEEDING
2 4 B	FR JCT BOX 24V DISC SW
2 4 B C	24 VOLT BATT. CHARGER
2 4 B E	RJB CPT-BAT EQ MONITOR HOT WIRE
2 4 C	FR JCT BOX 24V DISC SW
2 4 C	RR JCT BOX 24V DISC SW
2 4 D	BAT CPT 24V HOT WIRE
2 4 D	FR JCT BOX 24V HOT WIRE
2 4 D	RR JCT BOX 24V HOT WIRE
2 4 D A	A/C JCT BOX 24V HOT WIRE
2 4 E	BAT CPT 24V DISC SW
2 4 E	FR JCT BOX 24V DISC SW
2 4 E	RR JCT BOX 24V DISC SW
2 4 F	FR JCT BOX 24V DISC SW
2 4 F	RR JCT BOX 24V DISC SW
2 4 G	FR JCT BOX 24V DISC SW
2 4 G	RR JCT BOX 24V DISC SW
2 4 H	FR JCT BOX 24V DISC SW
2 4 H	RR JCT BOX 24V DISC SW
2 4 I	FR JCT BOX 24V IGNITION
2 4 I	RR JCT BOX 24V IGNITION
2 4 I A	FR JCT BOX 24V IGNITION
2 4 I B	FR JCT BOX 24V IGNITION
2 4 I B	RR JCT BOX 24V IGNITION
2 4 I C	FR JCT BOX 24V IGNITION
2 4 I F	FJB 24VOLT IGNITION
2 4 P	FR JCT BOX 24V DISC SW
2 4 S	24V DISC SW RLY SIGNAL
2 4 S 1	SOUND SYSTEM 24V AMPLIFIER
2 4 S 2	SOUND SYSTEM 24V AMPLIFIER
2 4 S 3	SOUND SYSTEM 24V VIDEO
2 4 S 4	SOUND SYSTEM 24V VIDEO
2 4 S B	SOUND SYSTEM 24V FEEDING
2 4 S S	SOUND SYSTEM 24V FEEDING
2 4 R	24 VOLTS FRONT CAMERA SW.
2 4 V 2	RR JCT BOX 24V DISC SW
2 4 V 3	RR JCT BOX 24V DISC SW
2 4 V 4	RR JCT BOX 24V DISC SW
2 4 V 5	RR JCT BOX 24V DISC SW
2 4 V D	24V HOT WIRE DISTRIBUTION
2 4 V F	BAT CPT 24V SW TO FJB & IC
2 4 V A	BATTERY TO EQUALIZER 24V
2 4 V I	RR JCT BOX 24V IGNITION
2 4 V R	BAT CPT 24V DISC SW TO RJB
2 4 W	RR JCT BOX 24V DISC SW (WCL)
2 4 W C	BATT.CPT TO HYD. PUMP (WCL)
2 4 W L	24V BATTERY-HYD. PUMP (WCL)
2 5	24 VOLT ALT.SIGNAL MODULE
2 5 A 1	PRE-EXITATION ALT. BOSCH #1
2 5 A 2	PRE-EXITATION ALT. BOSCH #2
2 5 A	T.T. LT. ALTERNATOR #1
2 5 B	12 VOLTS IGN. ALT. SIGNAL MODULE
2 5 D	12 V. ENGINE RUN / HVAC SYSTEM
2 5 F	12 VOLT IGN. DISTRIBUTION
2 5 H	24 VOLT IGN. ALT. BOSCH
2 5 K	T.T. LT. ALTERNATOR #2
2 6 A	CIGAR LIGHTER
2 6	DRIVER'S WINDOW LIFTER
2 6 B	DRIVER'S WINDOW LIFTER
2 6 C	DRIVER'S WINDOW LIFTER
2 7	LAVATORY-EMERGENCY SONALERT
2 8 A	A/C & HEAT SYSTEM-HI PRESSURE
2 9	A/C & HEAT SYSTEM-DRIVER'S HTR
2 9 A	A/C & HEAT SYSTEM-DRIVER'S HTR
2 9 B	A/C & HEAT SYSTEM-DRIVER'S HTR
2 9 H	HVAC DASH MODULE
3 0 A	GALLEY
3 1 A	A/C & HEAT SYSTEM-UNLOADER
3 1 B	A/C & HEAT SYSTEM-UNLOADER
3 1 B	WIPER & WASHER SYSTEM

CIRCUIT NUMBER CODE

No.	DESCRIPTION
31C	WIPER & WASHER SYSTEM
31D	WIPER & WASHER SYSTEM
31E	WIPER & WASHER SYSTEM
31J	WIPER & WASHER SYSTEM
31X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32B	EXTERIOR LTS-BACK-UP
32C	BACK-UP PWR & SIGNAL
32D	BACK-UP ALARM
35	ENTRANCE DOOR (SEDAN)
35B	ENTRANCE DOOR (SEDAN)
35BB	ENTRANCE DOOR (SEDAN)
35D	ENTRANCE DOOR (SEDAN)
36	JACOB BRAKE SYSREM
36A	JACOB BRAKE SYSREM
38	INTERIOR LTS-24V FLUORESCENT
38A	INTERIOR LTS-24V FLUORESCENT
38C	INTERIOR LTS-24V FLUORESCENT
38D	INTERIOR LTS-24V FLUORESCENT
39	INTERIOR LTS-24V LH CONSOLE SW
39A	INTERIOR LTS-DRIVER"S LTS
39P	READING LIGHTS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
43	HAT RACK FAN
43A	HAT RACK FAN
43B	HAT RACK FAN
43D	HAT RACK FAN
43E	HAT RACK FAN
43F	HAT RACK FAN
43G	HAT RACK FAN
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45B	A/C & HEAT SYSTEM-HEAT SIGN
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
48	ENTRANCE DOOR (SEDAN)
48A	ENTRANCE DOOR (SEDAN)
49	ENTRANCE DOOR (SEDAN)
49A	ENTRANCE DOOR (SEDAN)
50	AIR DRYER
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL- AIR HORN
52C	ALARM & SIGNAL- AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
57CA	A/C & HEAT SYSTEM-HEAT SIGN
57CC	A/C & HEAT SYSTEM-HEAT SIGN
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
62	LAVATORY-OCCUPIED LT
62A	LAVATORY-FLUOR LT
62B	LAVATORY-FLUOR LT
62E	LAVATORY-OCCUP & FLUOR LT
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVERS FAN
64B	DRIVERS FAN
64C	DRIVERS FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65P	PASSENGER REC. DAMPER
65D	DRIVER REC. DAMPER
66	O_PASS. ON/OFF
67	24 VOLT RUN DISTRIBUTION
67A	A/C & HEAT SYSTEM
67B	A/C & HEAT SYSTEM
67C	HEATING WINDSHIELD
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67V	A/C & HEAT SYSTEM-WATER VALVE
67X	A/C & HEAT SYSTEM
68	DASH & DEFROST DAMPER MOTOR
68A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH
72C	SUN VISOR-LH
72D	SUN VISOR-LH
73	LAVATORY-FEEDING
74	INTERIOR LTS-READING RH
74A	INTERIOR LTS-READING RH
74D	INTERIOR LTS-READING SIGNAL
75	INTERIOR LTS-READING LH
75A	INTERIOR LTS-READING LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77	A/C & HEAT SYSTEM-HI PRESSURE
77A	A/C & HEAT SYSTEM-DRIVER'S HTR
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85X	12V IGN ABS
85Y	ABS SYSTEM
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
100	INTERIOR LTS-GENERAL
100A	INTERIOR LTS-GENERAL
100B	INTERIOR LTS-GENERAL
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	WORLD TRANSM-SOL. SUPPLY
102A	24V STARTER TO BOSCH ALTERNATOR
103	LOW BUOY
104	WORLD TRANSM-SOL. FORWARD
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
116	WORLD TRANSM-LO SIGNAL SOL. HI

CIRCUIT NUMBER CODE

No.	DESCRIPTION
116 B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117 A	ALARM & SIGNAL-TRANSM OIL TEMP
117 A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122 A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123 A	ALARM & SIGNAL-FIRE DETECTOR
123 B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125	GALLEY LAMP
125 T	GALLEY LAMP
125 W	WORLD TRANSM-RET. INDICATOR
126	KNEELING SYSTEM
126 A	KNEELING SYSTEM
126 B	KNEELING SYSTEM
126 C	KNEELING SYSTEM
126 D	KNEELING SYSTEM
126 E	KNEELING SYSTEM
126 F	KNEELING SYSTEM
126 G	KNEELING SYSTEM
126 H	KNEELING SYSTEM
126 K	KNEELING SYSTEM
126 P	KNEELING SYSTEM
126 R	KNEELING SYSTEM
126 W	5 MPH N.C. SIGNAL (WCL)
126 S	KNEELING SYSTEM
126 T	KNEELING SYSTEM
127	WORLD TRANSM-LUBE PRESS SW.
127	WORLD TRANSM-RETARDER FEED SOL.
127	POWER- PRE-HEAT WATER HEATER
127 A	PRE-HEAT WATER HEATER
128 A	PRE-HEAT WATER HEATER
128 B	PRE-HEAT - BURNER ON SIGNAL
128	WORLD TRANSM-SOL. C2
129	POWER- PRE-HEAT WATER HEATER
129 B	POWER- PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	A/C & HEAT SYSTEM-EVAP FAN MOTOR
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132 W	WORLD TRANSM-ENG BRK OUTPUT (-)

No.	DESCRIPTION
133	GALLEY-HEAT CONTAINERS
133 A	GALLEY-HEAT CONTAINERS
133 B	GALLEY-HEAT CONTAINERS
133 C	GALLEY-HEAT CONTAINERS
133	WORLD TRANSM-RET. ACTUATOR HI
134	GALLEY-HEAT CONTAINERS
134 A	GALLEY-HEAT CONTAINERS
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135 A	A/C & HEAT SYSTEM-AIR SENSOR
135 D	A/C & HEAT SYSTEM-AIR SENSOR
135 C	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135 D	WORLD TRANSM-RETARDER RES MOD
135 C	WORLD TRANSM-RETARDER TEMP
136	GALLEY-ACCESSORIES
136	WORLD TRANSM-ECU POWER
136 V	WORLD TRANSM-12V BATTERY
136 W	WORLD TRANSM-12V BATTERY
136 X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137 A	MIRROR (SPARTAN & RAMCO)
137 B	RR VIEW MIRROR (SPARTAN)
137 C	RR VIEW MIRROR (SPARTAN)
137 D	RR VIEW MIRROR (SPARTAN)
137 E	RR VIEW MIRROR (SPARTAN)
137 G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138 A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143 A	ABS SYSTEM
143 W	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144 A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146 A	TRANSMISSION-12V IGNITION
146	WORLD TRANSM-IGNITION SENSE
146 W	WORLD TRANSM-12V IGNITION

No.	DESCRIPTION
146 X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	WORLD TRANSM-OIL TEMP
147 A	ETHER COLD START & D.R.L.
147 C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149 A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150 A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
152	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	WORLD TRANSM-SPARE INPUT (-)
156	WORLD TRANSM-THROTTLE POS.
156 A	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157 B	ABS SYSTEM
157 D	A.T.C. SYSTEM
157 E	A.T.C. SYSTEM
157 F	A.T.C. SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161 B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
165 A	A/C & HEAT SYSTEM-TRANSMITER
165 B	A/C & HEAT SYSTEM-TRANSMITER
165 C	A/C & HEAT SYSTEM-TRANSMITER
165 D	A/C & HEAT SYSTEM-TRANSMITER
166 B	A/C & HEAT SYSTEM-EVAP. MOD.
167	A/C & HEAT SYSTEM-TEMP. CTR
167 A	A/C & HEAT SYSTEM-TEMP. CTR
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168 A	A/C & HEAT SYSTEM-HUMIDISTAT
170	LUGGAGE DOOR LOCK
170 C	LUGGAGE DOOR LOCK

No.	DESCRIPTION
170 E	LUGGAGE DOOR LOCK
170 H	LUGGAGE DOOR LOCK
181 A	THERMOMETER INSIDE SENSOR
181 B	THERMOMETER INSIDE SENSOR
181 C	THERMOMETER OUTSIDE SENSOR
181 D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197 A	FUEL WATER FILTER
197 B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
225	LAVATORY FAN
225 A	LAVATORY FAN
231	NEUTRAL SIGNAL GRD
231 A	NEUTRAL COIL RELAY FEED SIGNAL
231 W	NEUTRAL SIGNAL GRD (WCL)
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251 A	DDEC III - DATA LOGGER 12 H.W.
251	DDEC III - PRODRIVER 12V H.W.
253	GALLEY-MICROWAVE
254	GALLEY-12V FRIGO NORCOLD
254 A	GALLEY-FRIGO
255	GALLEY-COFEEMAKER
255 A	GALLEY-COFEEMAKER
257	WINDSHIELD HEATED
257 A	WINDSHIELD HEATED
257 B	WINDSHIELD HEATED
257 C	WINDSHIELD HEATED
257 D	WINDSHIELD HEATED SPARE
257 E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258 A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259 A	WINDSHIELD HEATED
260	WINDOW AJAR
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
292	FAN CLUTCH RADIATOR SPD 2
300	DOOR AJAR MAGN.SW. (WCL)
300 A	POWER SYSTEM SW. (WCL)
300 B	DOOR AJAR ALARM (WCL)

CIRCUIT NUMBER CODE

No.	DESCRIPTION
301	POWER SYSTEM SW. (WCL)
302	DOOR AJAR T.T.LT. (WCL)
302A	DOOR AJAR ALARM SIGN.(WCL)
302B	DOOR AJAR MAGN.SW. (WCL)
303	REMOTE WALL SW. DWN (WCL)
304	REMOTE WALL SW. UP (WCL)
305	PARK. BRAKE SOL. VALVE (WCL)
305A	PARK. BRAKE SAFETY SW. (WCL)
306	CONTROL SYSTEM (WCL RICON)
307	CONTROL SYSTEM (WCL RICON)
308	CONTROL SYSTEM (WCL RICON)
309	CONTROL SYSTEM (WCL RICON)
310	EATON TRANSMISSION
311	EATON TRANSMISSION
312	EATON TRANSMISSION
313	EATON TRANSMISSION
314	EATON TRANSMISSION
315	EATON TRANSMISSIOM
316	EATON TRANSMISSION - EPL
317	EATON TRANSMISSION
318	EATON TRANSMISSION
319	EATON TRANSMISSION
320	EATON TRANSMISSION
321	EATON TRANSMISSION
322	EATON TRANSMISSIION
323	EATON TRANSMISSION
324	EATON TRANSMISSION
325	EATON TRANSMISSION
326	EATON TRANSMISSION
327	EATON TRANSMISSION
328	EATON TRANSMISSION
329	EATON TRANSMISSION
330	EATON TRANSMISSION - EPL
331	EATON TRANSMISSION - EPL
332	EATON TRANSMISSION
333	EATON TRANSMISSION - 12V BATTERY
334	EATON GENERATION 2
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE

No.	DESCRIPTION
540	DDEC III-CRUISE ENABLE LTS.
541	DDEC III-CRUISE SET SW
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
583	DDEC III-ENGINE BRAKE 4 CYL.
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
925	J1939-HIGH
926	J1939-LOW
927	J1939-SHIELD
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
953A	THROTTLE INHIBIT
979	DDEC III-ENGINE BRAKE 2 CYL.

No.	DESCRIPTION

No.	DESCRIPTION

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 1	2	40A	562686	BAT. CPT.	12V IGNITION
CB 2	1.1	40A	870093	BAT. CPT.	12V HOT WIRE
CB 3	1.1	40A	562686	BAT. CPT.	12V FEED RR. JCT. BOX
CB 4	1.1	70A	562687	BAT. CPT.	12V FEED FR. JCT. BOX
CB 5	1.1	30A	870690	BAT. CPT.	24V HOT WIRE
CB 6	1.1	90A	562683	BAT. CPT.	24V FEED RR. JCT. BOX
CB 7	1.1	90A	562683	BAT. CPT.	24V FEED FR. JCT. BOX
CB 8	1.1	150A	560299	BAT. CPT.	24V EVAPORATOR FAN MOTOR
CB 10	4	8A	561791	FR. JCT. BOX	MASTER KEY SWITCH
CB 16	4	8A	561791	RR. JCT. BOX	ENGINE-RR. CTRL & START SW.
CB 18	4	6A	561790	RR. JCT. BOX	ENGINE-FR. CTRL SW.
CB 19	5	15A	561793	BAT. CPT.	E.C.M. DDEC 12V POWER
CB 20	5	15A	561793	BAT. CPT.	E.C.M. DDEC 12V POWER
CB 21	5	10A	561792	RR. JCT. BOX	E.C.M. DDEC and WTEC 12V IGNITION
CB 24	6	25A	561794	BAT. CPT.	WORLD TRANSMISSION & EATON 12V POWER
CB 26	9.3	10A	561792	RR. JCT. BOX	BACK-UP LTS
CB 27	7	8A	561791	FR. JCT. BOX	24V IGNITION DASH ACCESSORIES
CB 28	7	6A	561790	FR. JCT. BOX	12V IGNITION DASH ACCESSORIES
CB 34	9.3	6A	561792	RR. JCT. BOX	BACK-UP ALARM
CB 35	9.3	15A	561790	FR. JCT. BOX	FOG & HAZARD DASH SW.
CB 37	9.1	6A	561790	FR. JCT. BOX	HEAD & MULTI-FUNCTION LEVEL SW.
CB 38	9.1	10A	561792	FR. JCT. BOX	FR. MARKER LTS
CB 39	9.1	20A	561794	FR. JCT. BOX	CLEARANCE & IDENTIFICATION LTS
CB 40	9.1	8A	561791	FR. JCT. BOX	FR. CLEARANCE & IDENTIFICATION LTS
CB 41	9.1	8A	561791	RR. JCT. BOX	RR. CLEARANCE & IDENTIFICATION LTS
CB 42	9.1	8A	561791	RR. JCT. BOX	RR. TAIL & LICENCE LTS
CB 43	9.1	20A	561794	FR. JCT. BOX	HEADLAMP (HI)
CB 44	9.1	15A	561793	FR. JCT. BOX	HEADLAMP (LO)
CB 45	9.2	10A	561792	FR. JCT. BOX	WIPER CTRL MULTI-FUNCTION LEVEL SW.
CB 46	9.2	20A	561794	FR. JCT. BOX	FLASHER & HAZARD UNIT
CB 48	9.3	6A	561790	FR. JCT. BOX	STOP LTS PRESSURE SW.
CB 49	9.3	15A	561793	RR. JCT. BOX	STOP & CYCLOP LTS
CB 51	10	10A	561792	FR. JCT. BOX	UPPER WIPER CTRL SW.
CB 52	11.1	15A	561793	RR. JCT. BOX	LUGGAGE & DOOR AJAR LTS
CB 57	11.2	8A	561791	FR. JCT. BOX	DASH LTS RHEOSTAT
CB 58	13.1	6A	561790	FR. JCT. BOX	HVAC DASH MODULE
CB 63	11.4	8A	561791	FR. SERVICE.CPT	110V FLUORESCENT LH
CB 64	11.4	8A	561791	FR. SERVICE.CPT	110V FLUORESCENT RH
CB 70	22.1	6A	561790	FR. JCT. BOX	UPPER HEATING WINDSHIELD SW.
CB 71	13.1	10A	561792	RR. JCT. BOX	A/C & HEAT LOGIC PANEL
CB 72	13.2	10A	561792	RR. JCT. BOX	A/C COMPRESSOR CLUTCH
CB 73	13.2	15A	561793	RR. JCT. BOX	WATER PUMP
CB 77	13.1	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR RH
CB 78	13.1	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR LH
CB 79	13.2	15A	561793	FR. JCT. BOX	DRIVER'S HTR FAN SPEED CTRL MODULE
CB 85	16.1	10A	561790	FR. JCT. BOX	ENTRANCE DOOR (SEDAN) & STEP LTS
CB 93	1.2	30A	870690	BAT. CPT.	SOUND SYSTEM 12V FEEDING
CB 94	1.2	30A	870690	BAT. CPT.	SOUND SYSTEM 12V FEEDING
CB 95	20.1	10A	561792	S.S. JCT. PANEL	SOUND SYSTEM AMPLI
CB 96	20.1	10A	561792	S.S. JCT. PANEL	VIDEO SYSTEM
CB 97	20.1	10A	561792	S.S. JCT. PANEL	SOUND SYSTEM B/U P.A. AMPLI
CB 98	20.1	15A	561793	S.S. JCT. PANEL	SOUND SYSTEM RADIO & CD
CB 99	20.7	15A	561793	S.S. JCT. PANEL	SEAT AUDIO SYSTEM
CB 105	21	6A	561790	FR. JCT. BOX	E.C.U. ABS
CB 106	21	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 107	21	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 124	8	6A	561790	RR. JCT. BOX	RADIATOR FAN CLUTCH
CB 126	25.1	150A	560299	BAT. CPT.	WHELL CHAIR LIFT MOTOR PUMP STE.

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 126	25.2	90A	560298	BAT. CPT.	WHELL CHAIR LIFT MOTOR PUMP RICON
CB 127	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN L.H.
CB 128	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN R.H.
CB 129	7.2	6A	561790	FR. JCT. BOX	CLUSTER
CB 130	28	6A	561790	FR. JCT. BOX	CLUSTER
CB 131	4.2	6A	561790	RR. JCT. BOX	ALT. BOSCH

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 1	2	40A	562686	BAT. CPT.	12V IGNITION
CB 2	1.1	40A	870093	BAT. CPT.	12V HOT WIRE
CB 3	1.1	40A	562686	BAT. CPT.	12V FEED RR. JCT. BOX
CB 4	1.1	70A	562687	BAT. CPT.	12V FEED FR. JCT. BOX
CB 5	1.1	30A	870690	BAT. CPT.	24V HOT WIRE
CB 6	1.1	90A	562683	BAT. CPT.	24V FEED RR. JCT. BOX
CB 7	1.1	90A	562683	BAT. CPT.	24V FEED FR. JCT. BOX
CB 8	1.1	150A	560299	BAT. CPT.	24V EVAPORATOR FAN MOTOR
CB 10	4	8A	561791	FR. JCT. BOX	MASTER KEY SWITCH
CB 13	23.1	90A	562683	BAT. CPT.	INVERTER
CB 16	4	8A	561791	RR. JCT. BOX	ENGINE-RR. CTRL & START SW.
CB 18	4	6A	561790	RR. JCT. BOX	ENGINE-FR. CTRL SW.
CB 19	5	15A	561793	BAT. CPT.	E.C.M. DDEC 12V POWER
CB 20	5	15A	561793	BAT. CPT.	E.C.M. DDEC 12V POWER
CB 21	5	10A	561792	RR. JCT. BOX	E.C.M. DDEC and WTEC 12V IGNITION
CB 24	6	25A	561794	BAT. CPT.	WORLD TRANSMISSION & EATON 12V POWER
CB 26	9.3	8A	561791	RR. JCT. BOX	BACK-UP LTS
CB 27	7	8A	561791	FR. JCT. BOX	24V IGNITION DASH ACCESSORIES
CB 28	7	6A	561790	FR. JCT. BOX	12V IGNITION DASH ACCESSORIES
CB 34	9.3	6A	561792	RR. JCT. BOX	BACK-UP ALARM
CB 35	9.3	15A	561790	FR. JCT. BOX	FOG & HAZARD DASH SW.
CB 37	9.1	6A	561790	FR. JCT. BOX	HEAD & MULTI-FUNCTION LEVEL SW.
CB 38	9.1	3A	561797	FR. JCT. BOX	FR. MARKER LTS
CB 39	9.1	6A	561790	FR. JCT. BOX	CLEARANCE & IDENTIFICATION LTS
CB 40	9.1	3A	561797	FR. JCT. BOX	FR. CLEARANCE & IDENTIFICATION LTS
CB 41	9.1	3A	561797	RR. JCT. BOX	RR. CLEARANCE & IDENTIFICATION LTS
CB 42	9.1	8A	561791	RR. JCT. BOX	RR. TAIL & LICENCE LTS
CB 43	9.1	20A	561794	FR. JCT. BOX	HEADLAMP (HI)
CB 44	9.1	15A	561793	FR. JCT. BOX	HEADLAMP (LO)
CB 45	9.2	10A	561792	FR. JCT. BOX	WIPER CTRL MULTI-FUNCTION LEVEL SW.
CB 46	9.2	10A	561792	FR. JCT. BOX	FLASHER & HAZARD UNIT
CB 48	9.3	6A	561790	FR. JCT. BOX	STOP LTS PRESSURE SW.
CB 49	9.3	6A	561790	RR. JCT. BOX	STOP & CYCLOP LTS
CB 51	10	10A	561792	FR. JCT. BOX	UPPER WIPER CTRL SW.
CB 52	11.1	15A	561793	RR. JCT. BOX	LUGGAGE & DOOR AJAR LTS
CB 57	11.2	8A	561791	FR. JCT. BOX	DASH LTS RHEOSTAT
CB 58	13.1	6A	561790	FR. JCT. BOX	HVAC DASH MODULE
CB 63	11.4	8A	561791	FR. SERVICE.CPT	110V FLUORESCENT LH
CB 64	11.4	8A	561791	FR. SERVICE.CPT	110V FLUORESCENT RH
CB 70					
CB 71	13.1	10A	561792	RR. JCT. BOX	A/C & HEAT LOGIC PANEL
CB 72	13.2	10A	561792	RR. JCT. BOX	A/C COMPRESSOR CLUTCH
CB 73	13.2	15A	561793	RR. JCT. BOX	WATER PUMP
CB 77	13.1	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR RH
CB 78	13.1	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR LH
CB 79	13.2	15A	561793	FR. JCT. BOX	DRIVER'S HTR FAN SPEED CTRL MODULE
CB 85	16.1	10A	561790	FR. JCT. BOX	ENTRANCE DOOR (SEDAN) & STEP LTS
CB 93	1.2	30A	870690	BAT. CPT.	SOUND SYSTEM 12V FEEDING
CB 94	1.2	30A	870690	BAT. CPT.	SOUND SYSTEM 12V FEEDING
CB 95	20.1	10A	561792	S.S. JCT. PANEL	SOUND SYSTEM AMPLI
CB 96	20.1	10A	561792	S.S. JCT. PANEL	VIDEO SYSTEM
CB 97	20.1	10A	561792	S.S. JCT. PANEL	SOUND SYSTEM B/U P.A. AMPLI
CB 98	20.1	15A	561793	S.S. JCT. PANEL	SOUND SYSTEM RADIO & CD
CB 99	20.7	15A	561793	S.S. JCT. PANEL	SEAT AUDIO SYSTEM
CB 105	21	6A	561790	FR. JCT. BOX	E.C.U. ABS
CB 106	21	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 107	21	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 124	8	6A	561790	RR. JCT. BOX	RADIATOR FAN CLUTCH

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 126	25.1	150A	560299	BAT. CPT.	WHELL CHAIR LIFT MOTOR PUMP STE.
CB 126	25.2	90A	560298	BAT. CPT.	WHELL CHAIR LIFT MOTOR PUMP RICON
CB 127	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN L.H.
CB 128	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN R.H.
CB 129	7.2	6A	561790	FR. JCT. BOX	CLUSTER
CB 130	28	6A	561790	FR. JCT. BOX	CLUSTER
CB 131	4.2	6A	561790	RR. JCT. BOX	ALT. BOSCH

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 1	2	40A	562686	BAT. CPT.	12V IGNITION
CB 2	1.1	40A	870093	BAT. CPT.	12V HOT WIRE
CB 3	1.1	40A	562686	BAT. CPT.	12V FEED RR. JCT. BOX
CB 4	1.1	70A	562687	BAT. CPT.	12V FEED FR. JCT. BOX
CB 5	1.1	30A	870690	BAT. CPT.	24V HOT WIRE
CB 6	1.1	90A	562683	BAT. CPT.	24V FEED RR. JCT. BOX
CB 7	1.1	90A	562683	BAT. CPT.	24V FEED FR. JCT. BOX
CB 8	1.1	150A	560299	BAT. CPT.	24V EVAPORATOR FAN MOTOR
CB 10	4	8A	561791	FR. JCT. BOX	MASTER KEY SWITCH
CB 13	23.1	90A	562683	BAT. CPT.	INVERTER
CB 16	4	8A	561791	RR. JCT. BOX	ENGINE-RR. CTRL & START SW.
CB 18	4	6A	561790	RR. JCT. BOX	ENGINE-FR. CTRL SW.
CB 19	5	15A	561793	BAT. CPT.	E.C.M. DDEC 12V POWER
CB 20	5	15A	561793	BAT. CPT.	E.C.M. DDEC 12V POWER
CB 21	5	10A	561792	RR. JCT. BOX	E.C.M. DDEC and WTEC 12V IGNITION
CB 24	6	25A	561794	BAT. CPT.	WORLD TRANSMISSION & EATON 12V POWER
CB 26	9.3	8A	561791	RR. JCT. BOX	BACK-UP LTS
CB 27	7	8A	561791	FR. JCT. BOX	24V IGNITION DASH ACCESSORIES
CB 28	7	6A	561790	FR. JCT. BOX	12V IGNITION DASH ACCESSORIES
CB 34	9.3	6A	561792	RR. JCT. BOX	BACK-UP ALARM
CB 35	9.3	15A	561790	FR. JCT. BOX	FOG & HAZARD DASH SW.
CB 37	9.1	6A	561790	FR. JCT. BOX	HEAD & MULTI-FUNCTION LEVEL SW.
CB 38	9.1	3A	561797	FR. JCT. BOX	FR. MARKER LTS
CB 39	9.1	6A	561790	FR. JCT. BOX	CLEARANCE & IDENTIFICATION LTS
CB 40	9.1	3A	561797	FR. JCT. BOX	FR. CLEARANCE & IDENTIFICATION LTS
CB 41	9.1	3A	561797	RR. JCT. BOX	RR. CLEARANCE & IDENTIFICATION LTS
CB 42	9.1	8A	561791	RR. JCT. BOX	RR. TAIL & LICENCE LTS
CB 43	9.1	20A	561794	FR. JCT. BOX	HEADLAMP (HI)
CB 44	9.1	15A	561793	FR. JCT. BOX	HEADLAMP (LO)
CB 45	9.2	10A	561792	FR. JCT. BOX	WIPER CTRL MULTI-FUNCTION LEVEL SW.
CB 46	9.2	10A	561792	FR. JCT. BOX	FLASHER & HAZARD UNIT
CB 48	9.3	6A	561790	FR. JCT. BOX	STOP LTS PRESSURE SW.
CB 49	9.3	6A	561790	RR. JCT. BOX	STOP & CYCLOP LTS
CB 51	10	10A	561792	FR. JCT. BOX	UPPER WIPER CTRL SW.
CB 52	11.1	15A	561793	RR. JCT. BOX	LUGGAGE & DOOR AJAR LTS
CB 57	11.2	8A	561791	FR. JCT. BOX	DASH LTS RHEOSTAT
CB 58	13.1	6A	561790	FR. JCT. BOX	HVAC DASH MODULE
CB 63	11.4	8A	561791	FR. SERVICE.CPT	110V FLUORESCENT LH
CB 64	11.4	8A	561791	FR. SERVICE.CPT	110V FLUORESCENT RH
CB 70					
CB 71	13.1	10A	561792	RR. JCT. BOX	A/C & HEAT LOGIC PANEL
CB 72	13.2	10A	561792	RR. JCT. BOX	A/C COMPRESSOR CLUTCH
CB 73	13.2	15A	561793	RR. JCT. BOX	WATER PUMP
CB 77	13.1	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR RH
CB 78	13.1	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR LH
CB 79	13.2	15A	561793	FR. JCT. BOX	DRIVER'S HTR FAN SPEED CTRL MODULE
CB 85	16.1	10A	561790	FR. JCT. BOX	ENTRANCE DOOR (SEDAN) & STEP LTS
CB 93	1.2	30A	870690	BAT. CPT.	SOUND SYSTEM 12V FEEDING
CB 94	1.2	30A	870690	BAT. CPT.	SOUND SYSTEM 12V FEEDING
CB 95	20.1	10A	561792	S.S. JCT. PANEL	SOUND SYSTEM AMPLI
CB 96	20.1	10A	561792	S.S. JCT. PANEL	VIDEO SYSTEM
CB 97	20.1	10A	561792	S.S. JCT. PANEL	SOUND SYSTEM B/U P.A. AMPLI
CB 98	20.1	15A	561793	S.S. JCT. PANEL	SOUND SYSTEM RADIO & CD
CB 99	20.7	15A	561793	S.S. JCT. PANEL	SEAT AUDIO SYSTEM
CB 105	21.1	6A	561790	FR. JCT. BOX	E.C.U. ABS
CB 106	21.1	15A	561793	FR. JCT. BOX	E.C.U. ABS
CB 124	8	6A	561790	RR. JCT. BOX	RADIATOR FAN CLUTCH
CB 126	25.1	150A	560299	BAT. CPT.	WHELL CHAIR LIFT MOTOR PUMP STE.

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 126	25.2	90A	560298	BAT. CPT.	WHELL CHAIR LIFT MOTOR PUMP RICON
CB 127	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN L.H.
CB 128	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN R.H.
CB 129	7.2	6A	561790	FR. JCT. BOX	CLUSTER
CB 130	28	6A	561790	FR. JCT. BOX	CLUSTER
CB 131	4.2	6A	561790	RR. JCT. BOX	ALT. BOSCH

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 1	2	40A	562686	BAT. CPT.	12V IGNITION
CB 2	1.1	40A	870093	BAT. CPT.	12V HOT WIRE
CB 3	1.1	40A	562686	BAT. CPT.	12V FEED RR. JCT. BOX
CB 4	1.1	70A	562687	BAT. CPT.	12V FEED FR. JCT. BOX
CB 5	1.1	30A	870690	BAT. CPT.	24V HOT WIRE
CB 6	1.1	90A	562683	BAT. CPT.	24V FEED RR. JCT. BOX
CB 7	1.1	90A	562683	BAT. CPT.	24V FEED FR. JCT. BOX
CB 8	1.1	150A	560299	BAT. CPT.	24V EVAPORATOR FAN MOTOR
CB 10	4	8A	561791	FR. JCT. BOX	MASTER KEY SWITCH
CB 13	23.1	90A	562683	BAT. CPT.	INVERTER
CB 16	4	8A	561791	RR. JCT. BOX	ENGINE-RR. CTRL & START SW.
CB 18	4	6A	561790	RR. JCT. BOX	ENGINE-FR. CTRL SW.
CB 19	5	15A	561793	BAT. CPT.	E.C.M. DDEC 12V POWER
CB 20	5	15A	561793	BAT. CPT.	E.C.M. DDEC 12V POWER
CB 21	5	10A	561792	RR. JCT. BOX	E.C.M. DDEC and WTEC 12V IGNITION
CB 24	6	25A	561794	BAT. CPT.	WORLD TRANSMISSION & EATON 12V POWER
CB 26	9.3	8A	561791	RR. JCT. BOX	BACK-UP LTS
CB 27	7	8A	561791	FR. JCT. BOX	24V IGNITION DASH ACCESSORIES
CB 28	7	6A	561790	FR. JCT. BOX	12V IGNITION DASH ACCESSORIES
CB 34	9.3	6A	561792	RR. JCT. BOX	BACK-UP ALARM
CB 35	9.3	15A	561790	FR. JCT. BOX	FOG & HAZARD DASH SW.
CB 37	9.1	6A	561790	FR. JCT. BOX	HEAD & MULTI-FUNCTION LEVEL SW.
CB 38	9.1	3A	561797	FR. JCT. BOX	FR. MARKER LTS
CB 39	9.1	6A	561790	FR. JCT. BOX	CLEARANCE & IDENTIFICATION LTS
CB 40	9.1	3A	561797	FR. JCT. BOX	FR. CLEARANCE & IDENTIFICATION LTS
CB 41	9.1	3A	561797	RR. JCT. BOX	RR. CLEARANCE & IDENTIFICATION LTS
CB 42	9.1	8A	561791	RR. JCT. BOX	RR. TAIL & LICENCE LTS
CB 43	9.1	20A	561794	FR. JCT. BOX	HEADLAMP (HI)
CB 44	9.1	15A	561793	FR. JCT. BOX	HEADLAMP (LO)
CB 45	9.2	10A	561792	FR. JCT. BOX	WIPER CTRL MULTI-FUNCTION LEVEL SW.
CB 46	9.2	10A	561792	FR. JCT. BOX	FLASHER & HAZARD UNIT
CB 48	9.3	6A	561790	FR. JCT. BOX	STOP LTS PRESSURE SW.
CB 49	9.3	6A	561790	RR. JCT. BOX	STOP & CYCLOP LTS
CB 51	10	10A	561792	FR. JCT. BOX	UPPER WIPER CTRL SW.
CB 52	11.1	15A	561793	RR. JCT. BOX	LUGGAGE & DOOR AJAR LTS
CB 57	11.2	8A	561791	FR. JCT. BOX	DASH LTS RHEOSTAT
CB 58	13.1	6A	561790	FR. JCT. BOX	HVAC DASH MODULE
CB 63	11.4	8A	561791	FR. SERVICE.CPT	110V FLUORESCENT LH
CB 64	11.4	8A	561791	FR. SERVICE.CPT	110V FLUORESCENT RH
CB 70					
CB 71	13.1	10A	561792	RR. JCT. BOX	A/C & HEAT LOGIC PANEL
CB 72	13.2	10A	561792	RR. JCT. BOX	A/C COMPRESSOR CLUTCH
CB 73	13.2	15A	561793	RR. JCT. BOX	WATER PUMP
CB 77	13.1	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR RH
CB 78	13.1	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR LH
CB 79	13.2	15A	561793	FR. JCT. BOX	DRIVER'S HTR FAN SPEED CTRL MODULE
CB 85	16.1	10A	561790	FR. JCT. BOX	ENTRANCE DOOR (SEDAN) & STEP LTS
CB 93	1.2	30A	870690	BAT. CPT.	SOUND SYSTEM 12V FEEDING
CB 94	1.2	30A	870690	BAT. CPT.	SOUND SYSTEM 24V FEEDING
CB 95	20.1	10A	561792	S.S. JCT. PANEL	SOUND SYSTEM AMPLI
CB 96	20.1	10A	561792	S.S. JCT. PANEL	VIDEO SYSTEM
CB 97	20.1	10A	561792	S.S. JCT. PANEL	SOUND SYSTEM B/U P.A. AMPLI
CB 98	20.1	15A	561793	S.S. JCT. PANEL	SOUND SYSTEM RADIO & CD
CB 99	20.7	15A	561793	S.S. JCT. PANEL	SEAT AUDIO SYSTEM
CB 105	21.1	6A	561790	FR. JCT. BOX	E.C.U. ABS
CB 106	21.1	15A	561793	FR. JCT. BOX	E.C.U. ABS
CB 124	8	6A	561790	RR. JCT. BOX	RADIATOR FAN CLUTCH
CB 126	25.1	150A	560299	BAT. CPT.	WHELL CHAIR LIFT MOTOR PUMP STE.

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 126	25.2	90A	560298	BAT. CPT.	WHELL CHAIR LIFT MOTOR PUMP RICON
CB 127	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN L.H.
CB 128	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN R.H.
CB 129	7.2	6A	561790	FR. JCT. BOX	CLUSTER
CB 130	28	6A	561790	FR. JCT. BOX	CLUSTER
CB 131	4.2	6A	561790	RR. JCT. BOX	ALT. BOSCH

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
AA1	BEHIND DASH - SONALERT	BOSCH	5		561183
AA2	BEHIND DASH - SONALERT	BOSCH	5		561183
C X1	FR LH UPPER WHELL CPT-ABS	AMP	18		562792
C X2	FR LH UPPER WHELL CPT-ABS	AMP	6		562793
C X3	FR LH UPPER WHELL CPT-ABS	AMP	9		562794
C X4	FR LH UPPER WHELL CPT-ABS	AMP	15		562795`
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
CV I2	RR JCT BOX-WORLD TRANSM. & EATON	AMP CPC	9	561636	561637
C Y	CLUSTER	JAE	30		562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 7					
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10					
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22	RR JCT BOX - EATON TRANSM.	AMP MNL	6	561552	561515
C 23	DDEC ENGINE-ECM J1939	PED MP	6	-------	561962
C 24	DDEC ENGINE	PED WP	1	561605	561577
C 25	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690
C 28	EATON TRANSMISSION	DEUTCH	3	562877	562884
C 29	EATON TRANSMISSION	PED MP	6	562878	------
C 30	RR JCT BOX - ECU EATON TRANSM.	PED MP	32	------	562866
C 31	RR JCT BOX - ECU EATON TRANSM.	PED MP	24	------	562865
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33	RR JCT BOX - EATON TRANSM.	DEUTCH	9	562531	------
C 34	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	3	------	562871
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	24	------	562874
C 37	RR SECTION-LH HAT RACK	MOLEX	6	562558	562557
C 38	RR SECTION-RH HAT RACK	MOLEX	6	562558	562557
C 39	LH CONSOLE - EATON TRANSM. DISPLAY	AMP MNL	4	561551	561668
C 40	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 41	LAVATORY ROOF FLUORESCENT	AMP MNL	2	560900	560898
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662
C 44	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERVICE CMPT.PRESS SW PARK BREAK	DEUTCH	4	562479	562477
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577
C 51					
C 52	RR JCT BOX	AMP CPC	22	561709	561710
C 53					
C 54					
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					
C 57					
C 58	RR JCT BOX AC PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX AC PANEL	AMP CPC	14	561584	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	16	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75					
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 78					
C 79					
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100	------	562248	------
C 86					
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88					
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS		35	------	641094
C 94					
C 95	CONDENSOR CPT - LIQ. SOL. VALVE	PED WP	2	561566	561690
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100	LH CONSOLE – 120 VOLTS SWITCH	EATON	8	------	562763
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	EVAPORATOR COMPT-SPEED MOT CTRL	DEUTSCH	5	------	562566
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115	ENGINE COMPT-AIR DRYER	PED WP	2	561566	561690
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117					
C 118	ENGINE COMPT-LAVATORY FAN	PED WP	2	561566	561690
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-UNLOAD TAG SYSTEM	PED WP	2	561566	561690
C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX - A/C PANEL DIODE CONN.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 143	LAVATORY DOOR WALL	AMP MNL	3	560908	562006
C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150					
C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	641132	------
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172	ENGINE COMPT-WATER TANK HEAT.	PED WP	2	561566	561690
C 173	LAV.POTABLE-WATER TANK HEAT.	AMP MNL	2	560900	560898
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C 190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690
C 191	ENGINE CPT RR DOOR RH STOP LT	PED WP	2	561566	561690
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C 193					
C 194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690
C 195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690
C 196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690
C 199	ENGINE CPT RR DOOR LICENCE LT	DOM AUTO	2	930210	------
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 202	RH HAT RACK-INDIRECT LIGHTING	MOLEX	2	---------	562758
C 203	RH HAT RACK-INDIRECT LIGHTING	MOLEX	6	---------	562759
C 204	RH HAT RACK-GENERAL LT	AMP MNL	2	560900	560898
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 206	RH HAT RACK-READING LT	AMP FF	4	----------	562756
C 207	LH HAT RACK-READING LT	AMP FF	4	----------	562756
C 208	LH HAT RACK-BALLAST	MOLEX	2	----------	562758
C 209	LH HAT RACK HOTESS CHIME	AMP MNL	3	561667	561550
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214	ENGINE CPT J1922				
C 215	TAG AXLE - A.T.C. SYSTEM				
C 216	TAG AXLE - A.T.C. SYSTEM				
C 217	RH DASH PANEL-FRONT CAMERA SW	EATON	8	--------	562763
C 218	RH DASH PANEL-FRONT CAMERA SW	AMP MNL	2	560900	560898
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221					
C 222					
C 223					
C 224					
C 225					
C 226					
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233	FR. SERVICE COMPT.	VDO	8		562043
C 234	FR. SERVICE COMPT.	VDO	8		562044
C 235	FR. SERVICE COMPT.	VDO	8		562041
C 236	LUGGAGE COMPARTEMENT	AMP MNL	4	560851	560852
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	2	561566	561690
C 241					
C 242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 243	FR SERVICE CPT-HEADLAMPS	TC	3	------	561071
C 244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812
C 245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812
C 246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 247					
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250					
C 251	LH DASH PANEL-FAST IDLE SW	EATON	8	------	562763
C 252					
C 253	LH DASH PANEL-ETHER SW	EATON	8	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH DASH PANEL-JACOB & RETARDER SW	EATON	8	------	562763
C 256					
C 257					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274	RR. JCT. BOX – SIGNAL ALT. MODULE				
C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 277					
C 278					
C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 280	LH CONSOLE-UNLOAD TAG SW.	NGR	10	------	562763
C 281					
C 282					
C 283					
C 284					
C 285					
C 286	RH SW PANEL-A/C & HEAT	EATON	8	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	8	------	562763
C 289					
C 290					
C 291					
C 292					
C 293					
C 294					
C 295					
C 296					
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299	RH DASH PANEL SW-GALLEY	EATON	8	------	562763
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH DASH PANEL -LUG. DOOR LCK SW	EATON	8	------	562763
C 311	RH DASH PANEL -HOS & PAS CHIME SW	EATON	8	------	562763
C 312	RH DASH PANEL -READING LTS SW	EATON	8	------	562763
C 313	RH DASH PANEL -GEN & FLUOR LTS SW	EATON	8	------	562763
C 314	LH DASH PANEL-FR DEST. SIGN SW	EATON	8	------	562763
C 315	LH DASH PANEL-LH STORE SW	EATON	8	------	562763
C 316	LH CONSOLE SPARE SWITCH	EATON	8	------	562763
C 317	LH DASH PANEL-RH STORE SW	EATON	8	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	8	------	562763
C 319					
C 320	RH DASH PANEL-DRIVER'S LTS SW	EATON	8	------	562763
C 321	READING LTS TEST				
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637
C 324					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 325	LH DASH PANEL-KNEELING SW	EATON	8	------	562763
C 326	ENGINE CMPT.	PED	4	------	561610
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331	GALLEY MICROWAVE SW	EATON	8	------	562763
C 332					
C 333	GALLEY RH CONTAINER SW	EATON	8	------	562763
C 334	GALLEY LH CONTAINER SW	EATON	8	------	562763
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346					
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360					
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376					
C 377	LH DASH PANEL-STOP ENG.OVERIDE SW	EATON	8	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381					
C 382					
C 383					
C 384					
C 385					
C 386	LH DASH PANEL-WCL POWER SYSTEM SW	EATON	8	------	562763
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734
C 389	WCL REAR DOOR	MOLEX	4	561477	561476
C 390	LAVATORY WALL-WCL REMOTE CTR	EATON	8	------	562763
C 391	LAVATORY WALL-WCL LAMP	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 392	LAVATORY WALL-WCL SW. LT.	EATON	2	------	561835
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	------	------
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. – PRE-EXITATION ALT.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402	RR DRIVE AXLE-AIR DRYER	PED MP	2	------	562251
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247
C 404	GALLEY LAMP	AMP MNL	2	561248	561247
C 405					
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH DASH PANEL-MASTER SWITCH SW	EATON	8	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9	561670	561669
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562398	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	LH DASH PANEL-HTR WINDSH.SW	EATON	8	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	------
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 423	PRO-HEAT	PC	2		
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427	PRO-HEAT	PED-WP	2	561566	561680
C 428	PRO-HEAT	PED WP	6	561606	561607
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	PED-WP	2	561566	561680
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 438					
C 439					
C 440					
C 441					
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680
C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 455	WIRELESS MICRO-LH HAT-RACK	CINCH	2	562554	562551
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDR CONNECTOR	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468			8		
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 479	HVAC MODULE				
C 480	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	4	561889	561890
C 481	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	------	562237
C 484	UNDER DASH LH.-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH.-DASH & DEFR. DAM.MOT.	AMP MNL	3	561667	561550
C 486					
C 487					
C 488					
C 489					
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER	PED MP	7	562433	------
C 502	LH DASH PANEL-PRE HEATER SW.	EATON	8	------	562763
C 503	LH CONSOLE-PRE HEATER SW.	EATON	2	------	561837
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	9	------	562681
C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	562580
C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	------	561183
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 543	RR JCT BOX-PARK. BRAKE STOP LTS RESIS.	PED WP	2	561566	561690
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 546					
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	8	------	562763
C 549	LH DASH PANEL-FAN CLUTCH OVERR. SW	EATON	8	------	562763
C 550	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 551	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 552	LAST LUGG. CPT. -WCL RICON	AMP CPC	9	561636	561637
C 553	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 554	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 555	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 556	UNDER DASH R.H. - RADIO ACC.	MOLEX	2	562550	562549
C 557	UNDER DASH R.H. - RADIO ACC.	MOLEX	9	562556	562555
C 558	UNDER DASH R.H. - RADIO ACC.	MOLEX	4	562507	562503
C 559	SOUND SYS. JCT. PANEL – FILTER AMPLI	PED WP	2	561566	561690
C 560	SOUND SYS. JCT. PANEL - POWER AMPLI	MOLEX	4	562507	562503
C 561	L.H. HAT RACK - WIRELESS MICRO	MOLEX	4	562507	562503
C 562	L.H. HAT RACK - VCP	MOLEX	9	562556	562555
C 563	L.H MODESTY PANEL - DRIVERS SPK.	MOLEX	4	562507	562503
C 564	L.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 565	R.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 566	L.H. CONSOLE - BOOM MICRO	MOLEX	4	562507	562503
C 567	L.H. CONSOLE - DRIVERS MICRO	MOLEX	4	562507	562503
C 568	SOUND SYS. JCT. PANEL - PASS. SPK	CINCH	4	562553	562552
C 569	SOUND SYS. JCT. PANEL - POWER AMPLI.	MOLEX	9	562556	562555
C 570	UNDER DASH PANEL TTLT	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT	MOLEX	8		562465
C 574	HAT -RACK FLUOR. INDIRECT LIGHTING	MOLEX	6	----------	562759
C 575	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 576	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 577	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 578	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 579					
C 580	RH DASH PANEL-HAT RACK FAN SW	EATON	8	--------	562763
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587					
C 588	FRONT SERVICE CPT. CENTER SOUND SYS.	AMP. CPC	37	561645	561646
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593	BATTERY CMPT. - CHARGER	PED WP	3	561781	561782
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476
C 596	DASH CENTER MODULE - CLOSE DOOR	MOLEX	4	561477	561476
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601	L.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 602	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 603	R.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 604					
C 605	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 606	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
C 609	LAVATORY - NIGHT LIGHT				
C 610	RR JCT BOX	AMP MNL	6	561552	561515
C 611	HAT RACK READING LTS RICON	MOLEX	6	562558	562557
C 612	HAT -RACK FLUOR. INSTATION LTS RICON	MOLEX	4	562507	562503
C 613	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 614	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 615					
C 616					
L X	CLUSTER	JAE	22		562766
L Y	CLUSTER	JAE	30		562767
R X	CLUSTER	JAE	22		562764

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
AA1	BEHIND DASH - SONALERT	BOSCH	5		561183
AA2	BEHIND DASH - SONALERT	BOSCH	5		561183
C X1	FR LH UPPER WHELL CPT-ABS	AMP	18		562792
C X2	FR LH UPPER WHELL CPT-ABS	AMP	6		562793
C X3	FR LH UPPER WHELL CPT-ABS	AMP	9		562794
C X4	FR LH UPPER WHELL CPT-ABS	AMP	15		562795`
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
CV I2	RR JCT BOX-WORLD TRANSM. & EATON	AMP CPC	9	561636	561637
C Y	CLUSTER	JAE	30		562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 7					
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10					
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22	RR JCT BOX - EATON TRANSM.	AMP MNL	6	561552	561515
C 23	DDEC ENGINE-ECM J1939	PED MP	6	-------	561962
C 24	DDEC ENGINE	PED WP	1	561605	561577
C 25	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690
C 28	EATON TRANSMISSION	DEUTCH	3	562877	562884
C 29	EATON TRANSMISSION	PED MP	6	562878	------
C 30	RR JCT BOX - ECU EATON TRANSM.	PED MP	32	------	562866
C 31	RR JCT BOX - ECU EATON TRANSM.	PED MP	24	------	562865
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33	RR JCT BOX - EATON TRANSM.	DEUTCH	9	562531	------
C 34	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	3	------	562871
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	24	------	562874
C 37	RR SECTION-LH HAT RACK	MOLEX	6	562558	562557
C 38	RR SECTION-RH HAT RACK	MOLEX	6	562558	562557
C 39	LH CONSOLE - EATON TRANSM. DISPLAY	AMP MNL	4	561551	561668
C 40	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 41	LAVATORY ROOF FLUORESCENT	AMP MNL	2	560900	560898
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662
C 44	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERVICE CMPT.PRESS SW PARK BREAK	DEUTCH	4	562479	562477
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577
C 51					
C 52	RR JCT BOX	AMP CPC	22	561709	561710
C 53					
C 54					
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					
C 57					
C 58	RR JCT BOX AC PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX AC PANEL	AMP CPC	14	561584	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	16	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75					
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 78					
C 79					
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100	------	562248	------
C 86					
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88					
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS		35	------	641094
C 94					
C 95	CONDENSOR CPT - LIQ. SOL. VALVE	PED WP	2	561566	561690
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100	LH CONSOLE – 120 VOLTS SWITCH	EATON	8	------	562763
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	EVAPORATOR COMPT-SPEED MOT CTRL	DEUTSCH	5	------	562566
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115	ENGINE COMPT-AIR DRYER	PED WP	2	561566	561690
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117					
C 118	ENGINE COMPT-LAVATORY FAN	PED WP	2	561566	561690
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-UNLOAD TAG SYSTEM	PED WP	2	561566	561690
C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX - A/C PANEL DIODE CONN.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 143	LAVATORY DOOR WALL	AMP MNL	3	560908	562006
C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150					
C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	641132	------
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172	ENGINE COMPT-WATER TANK HEAT.	PED WP	2	561566	561690
C 173	LAV.POTABLE-WATER TANK HEAT.	AMP MNL	2	560900	560898
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C 190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690
C 191	ENGINE CPT RR DOOR RH STOP LT	PED WP	2	561566	561690
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C 193					
C 194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690
C 195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690
C 196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690
C 199	ENGINE CPT RR DOOR LICENCE LT	DOM AUTO	2	930210	------
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 202	RH HAT RACK-INDIRECT LIGHTING	MOLEX	2	---------	562758
C 203	RH HAT RACK-INDIRECT LIGHTING	MOLEX	6	---------	562759
C 204	RH HAT RACK-GENERAL LT	AMP MNL	2	560900	560898
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 206	RH HAT RACK-READING LT	AMP FF	4	----------	562756
C 207	LH HAT RACK-READING LT	AMP FF	4	----------	562756
C 208	LH HAT RACK-BALLAST	MOLEX	2	----------	562758
C 209	LH HAT RACK HOTESS CHIME	AMP MNL	3	561667	561550
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214	ENGINE CPT J1922				
C 215	TAG AXLE - A.T.C. SYSTEM				
C 216	TAG AXLE - A.T.C. SYSTEM				
C 217	RH DASH PANEL-FRONT CAMERA SW	EATON	8	--------	562763
C 218	RH DASH PANEL-FRONT CAMERA SW	AMP MNL	2	560900	560898
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 224					
C 225					
C 226					
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233	FR. SERVICE COMPT.	VDO	8		562043
C 234	FR. SERVICE COMPT.	VDO	8		562044
C 235	FR. SERVICE COMPT.	VDO	8		562041
C 236	LUGGAGE COMPARTEMENT	AMP MNL	4	560851	560852
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	2	561566	561690
C 241					
C 242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 243	FR SERVICE CPT-HEADLAMPS	TC	3	------	561071
C 244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812
C 245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812
C 246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 247					
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250					
C 251	LH DASH PANEL-FAST IDLE SW	EATON	8	------	562763
C 252					
C 253	LH DASH PANEL-ETHER SW	EATON	8	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH DASH PANEL-JACOB & RETARDER SW	EATON	8	------	562763
C 256					
C 257					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274	RR. JCT. BOX – SIGNAL ALT. MODULE				
C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 277					
C 278					
C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 280	LH CONSOLE-UNLOAD TAG SW.	NGR	10	------	562763
C 281					
C 282					
C 283					
C 284					
C 285					
C 286	RH SW PANEL-A/C & HEAT	EATON	8	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	8	------	562763
C 289					
C 290					
C 291					
C 292					
C 293					
C 294					
C 295					
C 296					
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299	RH DASH PANEL SW-GALLEY	EATON	8	------	562763
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH DASH PANEL -LUG. DOOR LCK SW	EATON	8	------	562763
C 311	RH DASH PANEL -HOS & PAS CHIME SW	EATON	8	------	562763
C 312	RH DASH PANEL -READING LTS SW	EATON	8	------	562763
C 313	RH DASH PANEL -GEN & FLUOR LTS SW	EATON	8	------	562763
C 314	LH DASH PANEL-FR DEST. SIGN SW	EATON	8	------	562763
C 315	LH DASH PANEL-LH STORE SW	EATON	8	------	562763
C 316	LH CONSOLE SPARE SWITCH	EATON	8	------	562763
C 317	LH DASH PANEL-RH STORE SW	EATON	8	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	8	------	562763
C 319					
C 320	RH DASH PANEL-DRIVER'S LTS SW	EATON	8	------	562763
C 321	READING LTS TEST				
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637
C 324					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 325	LH DASH PANEL-KNEELING SW	EATON	8	------	562763
C 326	ENGINE CMPT.	PED	4	------	561610
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331	GALLEY MICROWAVE SW	EATON	8	------	562763
C 332					
C 333	GALLEY RH CONTAINER SW	EATON	8	------	562763
C 334	GALLEY LH CONTAINER SW	EATON	8	------	562763
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346					
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360					
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376					
C 377	LH DASH PANEL-STOP ENG.OVERIDE SW	EATON	8	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381					
C 382					
C 383					
C 384					
C 385					
C 386	LH DASH PANEL-WCL POWER SYSTEM SW	EATON	8	------	562763
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734
C 389	WCL REAR DOOR	MOLEX	4	561477	561476
C 390	LAVATORY WALL-WCL REMOTE CTR	EATON	8	------	562763
C 391	LAVATORY WALL-WCL LAMP	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 392	LAVATORY WALL-WCL SW. LT.	EATON	2	------	561835
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	------	------
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. – PRE-EXITATION ALT.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402	RR DRIVE AXLE-AIR DRYER	PED MP	2	------	562251
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247
C 404	GALLEY LAMP	AMP MNL	2	561248	561247
C 405					
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH DASH PANEL-MASTER SWITCH SW	EATON	8	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9	561670	561669
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562398	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	LH DASH PANEL-HTR WINDSH.SW	EATON	8	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	------
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 423	PRO-HEAT	PC	2		
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427	PRO-HEAT	PED-WP	2	561566	561680
C 428	PRO-HEAT	PED WP	6	561606	561607
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	PED-WP	2	561566	561680
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 438					
C 439					
C 440					
C 441					
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680
C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 455	WIRELESS MICRO-LH HAT-RACK	CINCH	2	562554	562551
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDR CONNECTOR	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468			8		
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 479	HVAC MODULE				
C 480	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	4	561889	561890
C 481	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	------	562237
C 484	UNDER DASH LH.-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH.-DASH & DEFR. DAM.MOT.	AMP MNL	3	561667	561550
C 486					
C 487					
C 488					
C 489					
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER	PED MP	7	562433	------
C 502	LH DASH PANEL-PRE HEATER SW.	EATON	8	------	562763
C 503	LH CONSOLE-PRE HEATER SW.	EATON	2	------	561837
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	9	------	562681
C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	562580
C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	------	561183
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 543	RR JCT BOX-PARK. BRAKE STOP LTS RESIS.	PED WP	2	561566	561690
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 546					
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	8	------	562763
C 549	LH DASH PANEL-FAN CLUTCH OVERR. SW	EATON	8	------	562763
C 550	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 551	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 552	LAST LUGG. CPT. -WCL RICON	AMP CPC	9	561636	561637
C 553	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 554	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 555	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 556	UNDER DASH R.H. - RADIO ACC.	MOLEX	2	562550	562549
C 557	UNDER DASH R.H. - RADIO ACC.	MOLEX	9	562556	562555
C 558	UNDER DASH R.H. - RADIO ACC.	MOLEX	4	562507	562503
C 559	SOUND SYS. JCT. PANEL – FILTER AMPLI	PED WP	2	561566	561690
C 560	SOUND SYS. JCT. PANEL - POWER AMPLI	MOLEX	4	562507	562503
C 561	L.H. HAT RACK - WIRELESS MICRO	MOLEX	4	562507	562503
C 562	L.H. HAT RACK - VCP	MOLEX	9	562556	562555
C 563	L.H MODESTY PANEL - DRIVERS SPK.	MOLEX	4	562507	562503
C 564	L.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 565	R.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 566	L.H. CONSOLE - BOOM MICRO	MOLEX	4	562507	562503
C 567	L.H. CONSOLE - DRIVERS MICRO	MOLEX	4	562507	562503
C 568	SOUND SYS. JCT. PANEL - PASS. SPK	CINCH	4	562553	562552
C 569	SOUND SYS. JCT. PANEL - POWER AMPLI.	MOLEX	9	562556	562555
C 570	UNDER DASH PANEL TTLT	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT	MOLEX	8		562465
C 574	HAT -RACK FLUOR. INDIRECT LIGHTING	MOLEX	6	----------	562759
C 575	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 576	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 577	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 578	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 579					
C 580	RH DASH PANEL-HAT RACK FAN SW	EATON	8	--------	562763
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587					
C 588	FRONT SERVICE CPT. CENTER SOUND SYS.	AMP. CPC	37	561645	561646
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593	BATTERY CMPT. - CHARGER	PED WP	3	561781	561782
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476
C 596	DASH CENTER MODULE - CLOSE DOOR	MOLEX	4	561477	561476
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601	L.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 602	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 603	R.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 604					
C 605	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 606	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
C 609	LAVATORY - NIGHT LIGHT				
C 610	RR JCT BOX	AMP MNL	6	561552	561515
C 611	HAT RACK READING LTS RICON	MOLEX	6	562558	562557
C 612	HAT -RACK FLUOR. INSTATION LTS RICON	MOLEX	4	562507	562503
C 613	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 614	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 615					
C 616					
L X	CLUSTER	JAE	22		562766
L Y	CLUSTER	JAE	30		562767
R X	CLUSTER	JAE	22		562764

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
AA1	BEHIND DASH - SONALERT	BOSCH	5		561183
AA2	BEHIND DASH - SONALERT	BOSCH	5		561183
C X1	FR LH UPPER WHELL CPT-ABS	AMP	18		562792
C X2	FR LH UPPER WHELL CPT-ABS	AMP	6		562793
C X3	FR LH UPPER WHELL CPT-ABS	AMP	9		562794
C X4	FR LH UPPER WHELL CPT-ABS	AMP	15		562795`
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
CV I2	RR JCT BOX-WORLD TRANSM. & EATON	AMP CPC	9	561636	561637
C Y	CLUSTER	JAE	30		562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 7					
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10					
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22	RR JCT BOX - EATON TRANSM.	AMP MNL	6	561552	561515
C 23	DDEC ENGINE-ECM J1939	PED MP	6	-------	561962
C 24	DDEC ENGINE	PED WP	1	561605	561577
C 25	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690
C 28	EATON TRANSMISSION	DEUTCH	3	562877	562884
C 29	EATON TRANSMISSION	PED MP	6	562878	------
C 30	RR JCT BOX - ECU EATON TRANSM.	PED MP	32	------	562866
C 31	RR JCT BOX - ECU EATON TRANSM.	PED MP	24	------	562865
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33	RR JCT BOX - EATON TRANSM.	DEUTCH	9	562531	------
C 34	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	3	------	562871
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	24	------	562874
C 37	RR SECTION-LH HAT RACK	MOLEX	6	562558	562557
C 38	RR SECTION-RH HAT RACK	MOLEX	6	562558	562557
C 39	LH CONSOLE - EATON TRANSM. DISPLAY	AMP MNL	4	561551	561668
C 40	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 41	LAVATORY ROOF FLUORESCENT	AMP MNL	2	560900	560898
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662
C 44	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERVICE CMPT.PRESS SW PARK BREAK	DEUTCH	4	562479	562477
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577
C 51					
C 52	RR JCT BOX	AMP CPC	22	561709	561710
C 53					
C 54					
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					
C 57					
C 58	RR JCT BOX AC PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX AC PANEL	AMP CPC	14	561584	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	16	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	SERV CPT. RXT. ENT. DOOR SW	DEUTSCH	4	562479	562477
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 78					
C 79					
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100	------	562248	------
C 86					
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88					
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS		35	------	641094
C 94					
C 95	CONDENSOR CPT - LIQ. SOL. VALVE	PED WP	2	561566	561690
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100	LH CONSOLE – 120 VOLTS SWITCH	EATON	8	------	562763
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	EVAPORATOR COMPT-SPEED MOT CTRL	DEUTSCH	5	------	562566
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115	ENGINE COMPT-AIR DRYER	PED WP	2	561566	561690
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117					
C 118	ENGINE COMPT-LAVATORY FAN	PED WP	2	561566	561690
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-UNLOAD TAG SYSTEM	PED WP	2	561566	561690
C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX - A/C PANEL DIODE CONN.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 143	LAVATORY DOOR WALL	AMP MNL	3	560908	562006
C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150					
C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	641132	------
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172	ENGINE COMPT-WATER TANK HEAT.	PED WP	2	561566	561690
C 173	LAV.POTABLE-WATER TANK HEAT.	AMP MNL	2	560900	560898
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C 190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690
C 191	ENGINE CPT RR DOOR RH STOP LT	PED WP	2	561566	561690
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C 193					
C 194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690
C 195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690
C 196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690
C 199	ENGINE CPT RR DOOR LICENCE LT	DOM AUTO	2	930210	------
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 202	RH HAT RACK-INDIRECT LIGHTING	MOLEX	2	---------	562758
C 203	RH HAT RACK-INDIRECT LIGHTING	MOLEX	6	---------	562759
C 204	RH HAT RACK-GENERAL LT	AMP MNL	2	560900	560898
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 206	RH HAT RACK-READING LT	AMP FF	4	----------	562756
C 207	LH HAT RACK-READING LT	AMP FF	4	----------	562756
C 208	LH HAT RACK-BALLAST	MOLEX	2	----------	562758
C 209	LH HAT RACK HOTESS CHIME	AMP MNL	3	561667	561550
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214	ENGINE CPT J1922				
C 215	TAG AXLE - A.T.C. SYSTEM				
C 216	TAG AXLE - A.T.C. SYSTEM				
C 217	RH DASH PANEL-FRONT CAMERA SW	EATON	8	--------	562763
C 218	RH DASH PANEL-FRONT CAMERA SW	AMP MNL	2	560900	560898
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 224					
C 225					
C 226					
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233	FR. SERVICE COMPT.	VDO	8		562043
C 234	FR. SERVICE COMPT.	VDO	8		562044
C 235	FR. SERVICE COMPT.	VDO	8		562041
C 236	LUGGAGE COMPARTEMENT	AMP MNL	4	560851	560852
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	2	561566	561690
C 241					
C 242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 243	FR SERVICE CPT-HEADLAMPS	TC	3	------	561071
C 244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812
C 245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812
C 246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 247					
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250					
C 251	LH DASH PANEL-FAST IDLE SW	EATON	8	------	562763
C 252					
C 253	LH DASH PANEL-ETHER SW	EATON	8	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH DASH PANEL-JACOB & RETARDER SW	EATON	8	------	562763
C 256					
C 257					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274	RR. JCT. BOX – SIGNAL ALT. MODULE				
C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 277					
C 278					
C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 280	LH CONSOLE-UNLOAD TAG SW.	NGR	10	------	562763
C 281					
C 282					
C 283					
C 284					
C 285					
C 286	RH SW PANEL-A/C & HEAT	EATON	8	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	8	------	562763
C 289					
C 290					
C 291					
C 292					
C 293					
C 294					
C 295					
C 296					
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299	RH DASH PANEL SW-GALLEY	EATON	8	------	562763
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH DASH PANEL -LUG. DOOR LCK SW	EATON	8	------	562763
C 311	RH DASH PANEL -HOS & PAS CHIME SW	EATON	8	------	562763
C 312	RH DASH PANEL -READING LTS SW	EATON	8	------	562763
C 313	RH DASH PANEL -GEN & FLUOR LTS SW	EATON	8	------	562763
C 314	LH DASH PANEL-FR DEST. SIGN SW	EATON	8	------	562763
C 315	LH DASH PANEL-LH STORE SW	EATON	8	------	562763
C 316	LH CONSOLE SPARE SWITCH	EATON	8	------	562763
C 317	LH DASH PANEL-RH STORE SW	EATON	8	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	8	------	562763
C 319					
C 320	RH DASH PANEL-DRIVER'S LTS SW	EATON	8	------	562763
C 321	READING LTS TEST				
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637
C 324					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 325	LH DASH PANEL-KNEELING SW	EATON	8	------	562763
C 326	ENGINE CMPT.	PED	4	------	561610
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331	GALLEY MICROWAVE SW	EATON	8	------	562763
C 332					
C 333	GALLEY RH CONTAINER SW	EATON	8	------	562763
C 334	GALLEY LH CONTAINER SW	EATON	8	------	562763
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346					
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360					
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376					
C 377	LH DASH PANEL-STOP ENG.OVERIDE SW	EATON	8	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381					
C 382					
C 383					
C 384					
C 385					
C 386	LH DASH PANEL-WCL POWER SYSTEM SW	EATON	8	------	562763
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734
C 389	WCL REAR DOOR	MOLEX	4	561477	561476
C 390	LAVATORY WALL-WCL REMOTE CTR	EATON	8	------	562763
C 391	LAVATORY WALL-WCL LAMP	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 392	LAVATORY WALL-WCL SW. LT.	EATON	2	------	561835
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	------	------
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. – PRE-EXITATION ALT.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402	RR DRIVE AXLE-AIR DRYER	PED MP	2	------	562251
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247
C 404	GALLEY LAMP	AMP MNL	2	561248	561247
C 405					
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH DASH PANEL-MASTER SWITCH SW	EATON	8	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9	561670	561669
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562398	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	LH DASH PANEL-HTR WINDSH.SW	EATON	8	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	------
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 423	PRO-HEAT	PC	2		
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427	PRO-HEAT	PED-WP	2	561566	561680
C 428	PRO-HEAT	PED WP	6	561606	561607
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	PED-WP	2	561566	561680
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 438	EVAP COMPT	AMP MNL	2	561248	561247
C 439		AMP MNL	2	561248	561247
C 440		DEUTSCH	4	562479	562477
C 441					
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680
C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 455	WIRELESS MICRO-LH HAT-RACK	CINCH	2	562554	562551
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDR CONNECTOR	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468			8		
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 479	HVAC MODULE				
C 480	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	4	561889	561890
C 481	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	------	562237
C 484	UNDER DASH LH.-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH.-DASH & DEFR. DAM.MOT.	AMP MNL	3	561667	561550
C 486					
C 487					
C 488					
C 489					
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER	PED MP	7	562433	------
C 502	LH DASH PANEL-PRE HEATER SW.	EATON	8	------	562763
C 503	LH CONSOLE-PRE HEATER SW.	EATON	2	------	561837
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	9	------	562681
C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	562580
C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	------	561183
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 543	RR JCT BOX-PARK. BRAKE STOP LTS RESIS.	PED WP	2	561566	561690
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 546					
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	8	------	562763
C 549	LH DASH PANEL-FAN CLUTCH OVERR. SW	EATON	8	------	562763
C 550	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 551	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 552	LAST LUGG. CPT. -WCL RICON	AMP CPC	9	561636	561637
C 553	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 554	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 555	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 556	UNDER DASH R.H. - RADIO ACC.	MOLEX	2	562550	562549
C 557	UNDER DASH R.H. - RADIO ACC.	MOLEX	9	562556	562555
C 558	UNDER DASH R.H. - RADIO ACC.	MOLEX	4	562507	562503
C 559	SOUND SYS. JCT. PANEL – FILTER AMPLI	PED WP	2	561566	561690
C 560	SOUND SYS. JCT. PANEL - POWER AMPLI	MOLEX	4	562507	562503
C 561	L.H. HAT RACK - WIRELESS MICRO	MOLEX	4	562507	562503
C 562	L.H. HAT RACK - VCP	MOLEX	12	562556	563070
C 563	L.H MODESTY PANEL - DRIVERS SPK.	MOLEX	4	562507	562503
C 564	L.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 565	R.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 566	L.H. CONSOLE - BOOM MICRO	MOLEX	4	562507	562503
C 567	L.H. CONSOLE - DRIVERS MICRO	MOLEX	4	562507	562503
C 568	SOUND SYS. JCT. PANEL - PASS. SPK	CINCH	4	562553	562552
C 569	SOUND SYS. JCT. PANEL - POWER AMPLI.	MOLEX	9	562556	562555
C 570	UNDER DASH PANEL TTLT	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT	MOLEX	8		562465
C 574	HAT -RACK FLUOR. INDIRECT LIGHTING	MOLEX	6	----------	562759
C 575	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 576	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 577	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 578	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 579	L.H HAT RACK – UCP POWER	MOLEX	4		563071
C 580	RH DASH PANEL-HAT RACK FAN SW	EATON	8	--------	562763
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587					
C 588	FRONT SERVICE CPT. CENTER SOUND SYS.	AMP. CPC	37	561645	561646
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593	BATTERY CMPT. - CHARGER	PED WP	3	561781	561782
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476
C 596	DASH CENTER MODULE - CLOSE DOOR	MOLEX	4	561477	561476
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601	L.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 602	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 603	R.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 604					
C 605	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 606	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
C 609	LAVATORY - NIGHT LIGHT				
C 610	RR JCT BOX	AMP MNL	6	561552	561515
C 611	HAT RACK READING LTS RICON	MOLEX	6	562558	562557
C 612	HAT -RACK FLUOR. INSTATION LTS RICON	MOLEX	4	562507	562503
C 613	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 614	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 615					
C 616					
L X	CLUSTER	JAE	22		562766
L Y	CLUSTER	JAE	30		562767
R X	CLUSTER	JAE	22		562764

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
AA1	BEHIND DASH - SONALERT	BOSCH	5		561183
AA2	BEHIND DASH - SONALERT	BOSCH	5		561183
C X1	FR LH UPPER WHELL CPT-ABS	AMP	18		562792
C X2	FR LH UPPER WHELL CPT-ABS	AMP	6		562793
C X3	FR LH UPPER WHELL CPT-ABS	AMP	9		562794
C X4	FR LH UPPER WHELL CPT-ABS	AMP	15		562795`
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
CV I2	RR JCT BOX-WORLD TRANSM. & EATON	AMP CPC	9	561636	561637
C Y	CLUSTER	JAE	30		562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 7					
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10					
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22	RR JCT BOX - EATON TRANSM.	AMP MNL	6	561552	561515
C 23	DDEC ENGINE-ECM J1939	PED MP	6	-------	561962
C 24	DDEC ENGINE	PED WP	1	561605	561577
C 25	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690
C 28	EATON TRANSMISSION	DEUTCH	3	562877	562884
C 29	EATON TRANSMISSION	PED MP	6	562878	------
C 30	RR JCT BOX - ECU EATON TRANSM.	PED MP	32	------	562866
C 31	RR JCT BOX - ECU EATON TRANSM.	PED MP	24	------	562865
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33	RR JCT BOX - EATON TRANSM.	DEUTCH	9	562531	------
C 34	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	3	------	562871
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	24	------	562874
C 37	RR SECTION-LH HAT RACK	MOLEX	6	562558	562557
C 38	RR SECTION-RH HAT RACK	MOLEX	6	562558	562557
C 39	LH CONSOLE - EATON TRANSM. DISPLAY	AMP MNL	4	561551	561668
C 40	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 41	LAVATORY ROOF FLUORESCENT	AMP MNL	2	560900	560898
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662
C 44	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERVICE CMPT.PRESS SW PARK BREAK	DEUTCH	4	562479	562477
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577
C 51					
C 52	RR JCT BOX	AMP CPC	22	561709	561710
C 53					
C 54					
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					
C 57					
C 58	RR JCT BOX AC PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX AC PANEL	AMP CPC	14	561584	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	16	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	SERV CPT. RXT. ENT. DOOR SW	DEUTSCH	4	562479	562477
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 78					
C 79					
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100	------	562248	------
C 86					
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88					
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS		35	------	641094
C 94					
C 95	CONDENSOR CPT - LIQ. SOL. VALVE	PED WP	2	561566	561690
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100	LH CONSOLE – 120 VOLTS SWITCH	EATON	8	------	562763
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	EVAPORATOR COMPT-SPEED MOT CTRL	DEUTSCH	5	------	562566
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115	ENGINE COMPT-AIR DRYER	PED WP	2	561566	561690
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117					
C 118	ENGINE COMPT-LAVATORY FAN	PED WP	2	561566	561690
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-UNLOAD TAG SYSTEM	PED WP	2	561566	561690
C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX - A/C PANEL DIODE CONN.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 143	LAVATORY DOOR WALL	AMP MNL	3	560908	562006
C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150					
C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	641132	------
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172	ENGINE COMPT-WATER TANK HEAT.	PED WP	2	561566	561690
C 173	LAV.POTABLE-WATER TANK HEAT.	AMP MNL	2	560900	560898
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C 190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690
C 191	ENGINE CPT RR DOOR RH STOP LT	PED WP	2	561566	561690
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C 193					
C 194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690
C 195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690
C 196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690
C 199	ENGINE CPT RR DOOR LICENCE LT	DOM AUTO	2	930210	------
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 202	RH HAT RACK-INDIRECT LIGHTING	MOLEX	2	---------	562758
C 203	RH HAT RACK-INDIRECT LIGHTING	MOLEX	6	---------	562759
C 204	RH HAT RACK-GENERAL LT	AMP MNL	2	560900	560898
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 206	RH HAT RACK-READING LT	AMP FF	4	----------	562756
C 207	LH HAT RACK-READING LT	AMP FF	4	----------	562756
C 208	LH HAT RACK-BALLAST	MOLEX	2	----------	562758
C 209	LH HAT RACK HOTESS CHIME	AMP MNL	3	561667	561550
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214	ENGINE CPT J1922				
C 215	TAG AXLE - A.T.C. SYSTEM				
C 216	TAG AXLE - A.T.C. SYSTEM				
C 217	RH DASH PANEL-FRONT CAMERA SW	EATON	8	--------	562763
C 218	RH DASH PANEL-FRONT CAMERA SW	AMP MNL	2	560900	560898
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 224					
C 225					
C 226					
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233	FR. SERVICE COMPT.	VDO	8		562043
C 234	FR. SERVICE COMPT.	VDO	8		562044
C 235	FR. SERVICE COMPT.	VDO	8		562041
C 236	LUGGAGE COMPARTEMENT	AMP MNL	4	560851	560852
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	2	561566	561690
C 241					
C 242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 243	FR SERVICE CPT-HEADLAMPS	TC	3	------	561071
C 244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812
C 245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812
C 246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 247					
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250					
C 251	LH DASH PANEL-FAST IDLE SW	EATON	8	------	562763
C 252					
C 253	LH DASH PANEL-ETHER SW	EATON	8	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH DASH PANEL-JACOB & RETARDER SW	EATON	8	------	562763
C 256					
C 257					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274	RR. JCT. BOX – SIGNAL ALT. MODULE				
C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 277					
C 278					
C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 280	LH CONSOLE-UNLOAD TAG SW.	NGR	10	------	562763
C 281					
C 282					
C 283					
C 284					
C 285					
C 286	RH SW PANEL-A/C & HEAT	EATON	8	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	8	------	562763
C 289					
C 290					
C 291					
C 292					
C 293					
C 294					
C 295					
C 296					
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299	RH DASH PANEL SW-GALLEY	EATON	8	------	562763
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH DASH PANEL -LUG. DOOR LCK SW	EATON	8	------	562763
C 311	RH DASH PANEL -HOS & PAS CHIME SW	EATON	8	------	562763
C 312	RH DASH PANEL -READING LTS SW	EATON	8	------	562763
C 313	RH DASH PANEL -GEN & FLUOR LTS SW	EATON	8	------	562763
C 314	LH DASH PANEL-FR DEST. SIGN SW	EATON	8	------	562763
C 315	LH DASH PANEL-LH STORE SW	EATON	8	------	562763
C 316	LH CONSOLE SPARE SWITCH	EATON	8	------	562763
C 317	LH DASH PANEL-RH STORE SW	EATON	8	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	8	------	562763
C 319					
C 320	RH DASH PANEL-DRIVER'S LTS SW	EATON	8	------	562763
C 321	READING LTS TEST				
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637
C 324					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 325	LH DASH PANEL-KNEELING SW	EATON	8	------	562763
C 326	ENGINE CMPT.	PED	4	------	561610
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331	GALLEY MICROWAVE SW	EATON	8	------	562763
C 332					
C 333	GALLEY RH CONTAINER SW	EATON	8	------	562763
C 334	GALLEY LH CONTAINER SW	EATON	8	------	562763
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346					
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360					
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376					
C 377	LH DASH PANEL-STOP ENG.OVERIDE SW	EATON	8	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381					
C 382					
C 383					
C 384					
C 385					
C 386	LH DASH PANEL-WCL POWER SYSTEM SW	EATON	8	------	562763
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734
C 389	WCL REAR DOOR	MOLEX	4	561477	561476
C 390	LAVATORY WALL-WCL REMOTE CTR	EATON	8	------	562763
C 391	LAVATORY WALL-WCL LAMP	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 392	LAVATORY WALL-WCL SW. LT.	EATON	2	------	561835
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	------	------
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. – PRE-EXITATION ALT.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402	RR DRIVE AXLE-AIR DRYER	PED MP	2	------	562251
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247
C 404	GALLEY LAMP	AMP MNL	2	561248	561247
C 405					
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH DASH PANEL-MASTER SWITCH SW	EATON	8	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9	561670	561669
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562398	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	LH DASH PANEL-HTR WINDSH.SW	EATON	8	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	------
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 423	PRO-HEAT	PC	2		
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427	PRO-HEAT	PED-WP	2	561566	561680
C 428	PRO-HEAT	PED WP	6	561606	561607
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	PED-WP	2	561566	561680
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 438	EVAP COMPT	AMP MNL	2	561248	561247
C 439		AMP MNL	2	561248	561247
C 440		DEUTSCH	4	562479	562477
C 441					
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680
C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 455	WIRELESS MICRO-LH HAT-RACK	MOLEX	6	------	562464
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDR CONNECTOR	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468			8		
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 479	HVAC MODULE				
C 480	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	4	561889	561890
C 481	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	------	562237
C 484	UNDER DASH LH.-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH.-DASH & DEFR. DAM.MOT.	AMP MNL	3	561667	561550
C 486					
C 487					
C 488					
C 489					
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER	PED MP	7	562433	------
C 502	LH DASH PANEL-PRE HEATER SW.	EATON	8	------	562763
C 503	LH CONSOLE-PRE HEATER SW.	EATON	2	------	561837
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	9	------	562681
C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	562580
C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	------	561183
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 543	RR JCT BOX-PARK. BRAKE STOP LTS RESIS.	PED WP	2	561566	561690
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 546	WIRELESS MIC. CHARGING SYSTEM	MOLEX	2	--------	563025
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	8	------	562763
C 549	LH DASH PANEL-FAN CLUTCH OVERR. SW	EATON	8	------	562763
C 550	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 551	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 552	LAST LUGG. CPT. -WCL RICON	AMP CPC	9	561636	561637
C 553	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 554	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 555	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 556	UNDER DASH R.H. - RADIO ACC.	MOLEX	2	562550	562549
C 557	UNDER DASH R.H. - RADIO ACC.	MOLEX	9	562556	562555
C 558	UNDER DASH R.H. - RADIO ACC.	MOLEX	4	562507	562503
C 559	SOUND SYS. JCT. PANEL – FILTER AMPLI	PED WP	2	561566	561690
C 560	SOUND SYS. JCT. PANEL – POWER AMPLI	MOLEX	4	562507	562503
C 561	L.H. HAT RACK - WIRELESS MICRO	MOLEX	8		562465
C 562	L.H. HAT RACK - VCP	MOLEX	12	562556	563070
C 563	L.H MODESTY PANEL - DRIVERS SPK.	MOLEX	4	562507	562503
C 564	L.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 565	R.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 566	L.H. CONSOLE - BOOM MICRO	MOLEX	4	562507	562503
C 567	L.H. CONSOLE - DRIVERS MICRO	MOLEX	4	562507	562503
C 568	SOUND SYS. JCT. PANEL - PASS. SPK	CINCH	4	562553	562552
C 569	SOUND SYS. JCT. PANEL - POWER AMPLI.	MOLEX	9	562556	562555
C 570	UNDER DASH PANEL TTLT	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT	MOLEX	8		562465
C 574	HAT -RACK FLUOR. INDIRECT LIGHTING	MOLEX	6	----------	562759
C 575	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 576	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 577	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 578	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 579	L.H HAT RACK – VCP POWER	MOLEX	4		563071
C 580	RH DASH PANEL-HAT RACK FAN SW	EATON	8	--------	562763
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587					
C 588	FRONT SERVICE CPT. CENTER SOUND SYS.	AMP. CPC	37	561645	561646
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593	BATTERY CMPT. - CHARGER	PED WP	3	561781	561782
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476
C 596	DASH CENTER MODULE - CLOSE DOOR	MOLEX	4	561477	561476
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601	L.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 602	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 603	R.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 604					
C 605	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 606	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
C 609	LAVATORY - NIGHT LIGHT				
C 610	RR JCT BOX	AMP MNL	6	561552	561515
C 611	HAT RACK READING LTS RICON	MOLEX	6	562558	562557
C 612	HAT -RACK FLUOR. INSTATION LTS RICON	MOLEX	4	562507	562503
C 613	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 614	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 615					
C 616					
L X	CLUSTER	JAE	22		562766
L Y	CLUSTER	JAE	30		562767
R X	CLUSTER	JAE	22		562764

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
AA1	BEHIND DASH - SONALERT	BOSCH	5		561183
AA2	BEHIND DASH - SONALERT	BOSCH	5		561183
C X1	FR LH UPPER WHELL CPT-ABS	AMP	18		562792
C X2	FR LH UPPER WHELL CPT-ABS	AMP	6		562793
C X3	FR LH UPPER WHELL CPT-ABS	AMP	9		562794
C X4	FR LH UPPER WHELL CPT-ABS	AMP	15		562795`
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
CV I2	RR JCT BOX-WORLD TRANSM. & EATON	AMP CPC	9	561636	561637
C Y	CLUSTER	JAE	30		562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 7					
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10					
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22	RR JCT BOX - EATON TRANSM.	AMP MNL	6	561552	561515
C 23	DDEC ENGINE-ECM J1939	PED MP	6	-------	561962
C 24	DDEC ENGINE	PED WP	1	561605	561577
C 25	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690
C 28	EATON TRANSMISSION	DEUTCH	3	562877	562884
C 29	EATON TRANSMISSION	PED MP	6	562878	------
C 30	RR JCT BOX - ECU EATON TRANSM.	PED MP	32	------	562866
C 31	RR JCT BOX - ECU EATON TRANSM.	PED MP	24	------	562865
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33	RR JCT BOX - EATON TRANSM.	DEUTCH	9	562531	------
C 34	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	3	------	562871
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	24	------	562874
C 37	RR SECTION-LH HAT RACK	MOLEX	6	562558	562557
C 38	RR SECTION-RH HAT RACK	MOLEX	6	562558	562557
C 39	LH CONSOLE - EATON TRANSM. DISPLAY	AMP MNL	4	561551	561668
C 40	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 41	LAVATORY ROOF FLUORESCENT	AMP MNL	2	560900	560898
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662
C 44	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERVICE CMPT.PRESS SW PARK BREAK	DEUTCH	4	562479	562477
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577
C 51					
C 52	RR JCT BOX	AMP CPC	22	561709	561710
C 53					
C 54					
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					
C 57					
C 58	RR JCT BOX AC PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX AC PANEL	AMP CPC	14	561584	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	16	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	SERV CPT. RXT. ENT. DOOR SW	DEUTSCH	4	562479	562477
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 78					
C 79					
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100	------	562248	------
C 86					
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88					
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS		35	------	641094
C 94					
C 95	CONDENSOR CPT - LIQ. SOL. VALVE	PED WP	2	561566	561690
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100	LH CONSOLE – 120 VOLTS SWITCH	EATON	8	------	562763
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	EVAPORATOR COMPT-SPEED MOT CTRL	DEUTSCH	5	------	562566
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115	ENGINE COMPT-AIR DRYER	PED WP	2	561566	561690
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117					
C 118	ENGINE COMPT-LAVATORY FAN	PED WP	2	561566	561690
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-UNLOAD TAG SYSTEM	PED WP	2	561566	561690
C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX - A/C PANEL DIODE CONN.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 143	LAVATORY DOOR WALL	AMP MNL	3	560908	562006
C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150					
C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	641132	------
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172	ENGINE COMPT-WATER TANK HEAT.	PED WP	2	561566	561690
C 173	LAV.POTABLE-WATER TANK HEAT.	AMP MNL	2	560900	560898
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C 190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690
C 191	ENGINE CPT RR DOOR RH STOP LT	PED WP	2	561566	561690
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C 193					
C 194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690
C 195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690
C 196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690
C 199	ENGINE CPT RR DOOR LICENCE LT	DOM AUTO	2	930210	------
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 202	RH HAT RACK-INDIRECT LIGHTING	MOLEX	2	---------	562758
C 203	RH HAT RACK-INDIRECT LIGHTING	MOLEX	6	---------	562759
C 204	RH HAT RACK-GENERAL LT	AMP MNL	2	560900	560898
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 206	RH HAT RACK-READING LT	AMP FF	4	----------	562756
C 207	LH HAT RACK-READING LT	AMP FF	4	----------	562756
C 208	LH HAT RACK-BALLAST	MOLEX	2	----------	562758
C 209	LH HAT RACK HOTESS CHIME	AMP MNL	3	561667	561550
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214	ENGINE CPT J1922				
C 215	TAG AXLE - A.T.C. SYSTEM				
C 216	TAG AXLE - A.T.C. SYSTEM				
C 217	RH DASH PANEL-FRONT CAMERA SW	EATON	8	--------	562763
C 218	RH DASH PANEL-FRONT CAMERA SW	AMP MNL	2	560900	560898
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 224					
C 225					
C 226					
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233	FR. SERVICE COMPT.	VDO	8		562043
C 234	FR. SERVICE COMPT.	VDO	8		562044
C 235	FR. SERVICE COMPT.	VDO	8		562041
C 236	LUGGAGE COMPARTEMENT	AMP MNL	4	560851	560852
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	2	561566	561690
C 241					
C 242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 243	FR SERVICE CPT-HEADLAMPS	TC	3	------	561071
C 244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812
C 245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812
C 246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 247					
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250					
C 251	LH DASH PANEL-FAST IDLE SW	EATON	8	------	562763
C 252					
C 253	LH DASH PANEL-ETHER SW	EATON	8	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH DASH PANEL-JACOB & RETARDER SW	EATON	8	------	562763
C 256					
C 257					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274	RR. JCT. BOX – SIGNAL ALT. MODULE				
C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 277					
C 278					
C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 280	LH CONSOLE-UNLOAD TAG SW.	NGR	10	------	562763
C 281					
C 282					
C 283					
C 284					
C 285					
C 286	RH SW PANEL-A/C & HEAT	EATON	8	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	8	------	562763
C 289					
C 290					
C 291					
C 292					
C 293					
C 294					
C 295					
C 296					
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299	RH DASH PANEL SW-GALLEY	EATON	8	------	562763
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH DASH PANEL -LUG. DOOR LCK SW	EATON	8	------	562763
C 311	RH DASH PANEL -HOS & PAS CHIME SW	EATON	8	------	562763
C 312	RH DASH PANEL -READING LTS SW	EATON	8	------	562763
C 313	RH DASH PANEL -GEN & FLUOR LTS SW	EATON	8	------	562763
C 314	LH DASH PANEL-FR DEST. SIGN SW	EATON	8	------	562763
C 315	LH DASH PANEL-LH STORE SW	EATON	8	------	562763
C 316	LH CONSOLE SPARE SWITCH	EATON	8	------	562763
C 317	LH DASH PANEL-RH STORE SW	EATON	8	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	8	------	562763
C 319					
C 320	RH DASH PANEL-DRIVER'S LTS SW	EATON	8	------	562763
C 321	READING LTS TEST				
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637
C 324					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 325	LH DASH PANEL-KNEELING SW	EATON	8	------	562763
C 326	ENGINE CMPT.	PED	4	------	561610
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331	GALLEY MICROWAVE SW	EATON	8	------	562763
C 332					
C 333	GALLEY RH CONTAINER SW	EATON	8	------	562763
C 334	GALLEY LH CONTAINER SW	EATON	8	------	562763
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346					
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360					
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376					
C 377	LH DASH PANEL-STOP ENG.OVERIDE SW	EATON	8	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381					
C 382					
C 383					
C 384					
C 385					
C 386	LH DASH PANEL-WCL POWER SYSTEM SW	EATON	8	------	562763
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734
C 389	WCL REAR DOOR	MOLEX	4	561477	561476
C 390	LAVATORY WALL-WCL REMOTE CTR	EATON	8	------	562763
C 391	LAVATORY WALL-WCL LAMP	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 392	LAVATORY WALL-WCL SW. LT.	EATON	2	------	561835
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	------	------
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. – PRE-EXITATION ALT.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402	RR DRIVE AXLE-AIR DRYER	PED MP	2	------	562251
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247
C 404	GALLEY LAMP	AMP MNL	2	561248	561247
C 405					
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH DASH PANEL-MASTER SWITCH SW	EATON	8	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9	561670	561669
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562398	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	LH DASH PANEL-HTR WINDSH.SW	EATON	8	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	------
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 423	PRO-HEAT	PC	2		
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427	PRO-HEAT	PED-WP	2	561566	561680
C 428	PRO-HEAT	PED WP	6	561606	561607
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	PED-WP	2	561566	561680
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 438	EVAP COMPT	AMP MNL	2	561248	561247
C 439		AMP MNL	2	561248	561247
C 440		DEUTSCH	4	562479	562477
C 441					
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680
C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 455	WIRELESS MICRO-LH HAT-RACK	MOLEX	6	------	562464
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDR CONNECTOR	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468			8		
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 479	HVAC MODULE				
C 480	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	4	561889	561890
C 481	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	------	562237
C 484	UNDER DASH LH.-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH.-DASH & DEFR. DAM.MOT.	AMP MNL	3	561667	561550
C 486					
C 487					
C 488					
C 489					
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER	PED MP	7	562433	------
C 502	LH DASH PANEL-PRE HEATER SW.	EATON	8	------	562763
C 503	LH CONSOLE-PRE HEATER SW.	EATON	2	------	561837
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	9	------	562681
C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	562580
C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	------	561183
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 543	RR JCT BOX-PARK. BRAKE STOP LTS RESIS.	PED WP	2	561566	561690
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 546	WIRELESS MIC. CHARGING SYSTEM	MOLEX	2	--------	563025
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	8	------	562763
C 549	LH DASH PANEL-FAN CLUTCH OVERR. SW	EATON	8	------	562763
C 550	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 551	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 552	LAST LUGG. CPT. -WCL RICON	AMP CPC	9	561636	561637
C 553	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 554	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 555	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 556	UNDER DASH R.H. - RADIO ACC.	MOLEX	2	562550	562549
C 557	UNDER DASH R.H. - RADIO ACC.	MOLEX	9	562556	562555
C 558	UNDER DASH R.H. - RADIO ACC.	MOLEX	4	562507	562503
C 559	SOUND SYS. JCT. PANEL – FILTER AMPLI	PED WP	2	561566	561690
C 560	SOUND SYS. JCT. PANEL – POWER AMPLI	MOLEX	4	562507	562503
C 561	L.H. HAT RACK - WIRELESS MICRO	MOLEX	8		562465
C 562	L.H. HAT RACK - VCP	MOLEX	12	562556	563070
C 563	L.H MODESTY PANEL - DRIVERS SPK.	MOLEX	4	562507	562503
C 564	L.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 565	R.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 566	L.H. CONSOLE - BOOM MICRO	MOLEX	4	562507	562503
C 567	L.H. CONSOLE - DRIVERS MICRO	MOLEX	4	562507	562503
C 568	SOUND SYS. JCT. PANEL - PASS. SPK	CINCH	4	562553	562552
C 569	SOUND SYS. JCT. PANEL - POWER AMPLI.	MOLEX	9	562556	562555
C 570	UNDER DASH PANEL TTLT	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT	MOLEX	8		562465
C 574	HAT -RACK FLUOR. INDIRECT LIGHTING	MOLEX	6	----------	562759
C 575	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 576	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 577	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 578	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 579	L.H HAT RACK – VCP POWER	MOLEX	4		563071
C 580	RH DASH PANEL-HAT RACK FAN SW	EATON	8	--------	562763
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587	LH PARCEL RACK DVD UNIT	MOLEX	4	563040	563071
C 588	FRONT SERVICE CPT. CENTER SOUND SYS.	AMP. CPC	37	561645	561646
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593	BATTERY CMPT. - CHARGER	PED WP	3	561781	561782
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476
C 596	DASH CENTER MODULE - CLOSE DOOR	MOLEX	4	561477	561476
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601	L.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 602	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 603	R.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 604	LH PARCEL RACK DVD VIDEO STABILIZER	SWITCHCRAFT	1	563074	
C 605	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 606	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
C 609	LAVATORY - NIGHT LIGHT				
C 610	RR JCT BOX	AMP MNL	6	561552	561515
C 611	HAT RACK READING LTS RICON	MOLEX	6	562558	562557
C 612	HAT -RACK FLUOR. INSTATION LTS RICON	MOLEX	4	562507	562503
C 613	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 614	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 615	LH PARCEL RACK DVD SING ALONG ADAPT.	MOLEX	2	562550	562549
C 616					
L X	CLUSTER	JAE	22		562766
L Y	CLUSTER	JAE	30		562767
R X	CLUSTER	JAE	22		562764

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
AA1	BEHIND DASH - SONALERT	BOSCH	5		561183
AA2	BEHIND DASH - SONALERT	BOSCH	5		561183
C X1	FR LH UPPER WHELL CPT-ABS	AMP	18		562792
C X2	FR LH UPPER WHELL CPT-ABS	AMP	6		562793
C X3	FR LH UPPER WHELL CPT-ABS	AMP	9		562794
C X4	FR LH UPPER WHELL CPT-ABS	AMP	15		562795`
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
CV I2	RR JCT BOX-WORLD TRANSM. & EATON	AMP CPC	9	561636	561637
C Y	CLUSTER	JAE	30		562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 7					
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10					
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22	RR JCT BOX - EATON TRANSM.	AMP MNL	6	561552	561515
C 23	DDEC ENGINE-ECM J1939	PED MP	6	-------	561962
C 24	DDEC ENGINE	PED WP	1	561605	561577
C 25	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690
C 28	EATON TRANSMISSION	DEUTCH	3	562877	562884
C 29	EATON TRANSMISSION	PED MP	6	562878	------
C 30	RR JCT BOX - ECU EATON TRANSM.	PED MP	32	------	562866
C 31	RR JCT BOX - ECU EATON TRANSM.	PED MP	24	------	562865
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33	RR JCT BOX - EATON TRANSM.	DEUTCH	9	562531	------
C 34	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	3	------	562871
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	24	------	562874
C 37	RR SECTION-LH HAT RACK	MOLEX	6	562558	562557
C 38	RR SECTION-RH HAT RACK	MOLEX	6	562558	562557
C 39	LH CONSOLE - EATON TRANSM. DISPLAY	AMP MNL	4	561551	561668
C 40	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 41	LAVATORY ROOF FLUORESCENT	AMP MNL	2	560900	560898
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662
C 44	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERVICE CMPT.PRESS SW PARK BREAK	DEUTCH	4	562479	562477
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577
C 51					
C 52	RR JCT BOX	AMP CPC	22	561709	561710
C 53					
C 54					
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					
C 57					
C 58	RR JCT BOX AC PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX AC PANEL	AMP CPC	14	561584	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	16	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	SERV CPT. RXT. ENT. DOOR SW	DEUTSCH	4	562479	562477
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 78					
C 79					
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100	------	562248	------
C 86					
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88					
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS		35	------	641094
C 94					
C 95	CONDENSOR CPT - LIQ. SOL. VALVE	PED WP	2	561566	561690
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100	LH CONSOLE – 120 VOLTS SWITCH	EATON	8	------	562763
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	EVAPORATOR COMPT-SPEED MOT CTRL	DEUTSCH	5	------	562566
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115	ENGINE COMPT-AIR DRYER	PED WP	2	561566	561690
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117					
C 118	ENGINE COMPT-LAVATORY FAN	PED WP	2	561566	561690
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-UNLOAD TAG SYSTEM	PED WP	2	561566	561690
C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX - A/C PANEL DIODE CONN.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 143	LAVATORY DOOR WALL	AMP MNL	3	560908	562006
C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150					
C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	641132	------
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172					
C 173					
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C 190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690
C 191	ENGINE CPT RR DOOR RH STOP LT	PED WP	2	561566	561690
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C 193					
C 194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690
C 195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690
C 196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690
C 199	ENGINE CPT RR DOOR LICENCE LT	DOM AUTO	2	930210	------
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 202	RH HAT RACK-INDIRECT LIGHTING	MOLEX	2	---------	562758
C 203	RH HAT RACK-INDIRECT LIGHTING	MOLEX	6	---------	562759
C 204	RH HAT RACK-GENERAL LT	AMP MNL	2	560900	560898
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 206	RH HAT RACK-READING LT	AMP FF	4	----------	562756
C 207	LH HAT RACK-READING LT	AMP FF	4	----------	562756
C 208	LH HAT RACK-BALLAST	MOLEX	2	----------	562758
C 209	LH HAT RACK HOTESS CHIME	AMP MNL	3	561667	561550
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214	ENGINE CPT J1922				
C 215	TAG AXLE - A.T.C. SYSTEM				
C 216	TAG AXLE - A.T.C. SYSTEM				
C 217	RH DASH PANEL-FRONT CAMERA SW	EATON	8	--------	562763
C 218	RH DASH PANEL-FRONT CAMERA SW	AMP MNL	2	560900	560898
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 224					
C 225					
C 226					
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233	FR. SERVICE COMPT.	VDO	8		562043
C 234	FR. SERVICE COMPT.	VDO	8		562044
C 235	FR. SERVICE COMPT.	VDO	8		562041
C 236	LUGGAGE COMPARTEMENT	AMP MNL	4	560851	560852
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	2	561566	561690
C 241					
C 242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 243	FR SERVICE CPT-HEADLAMPS	TC	3	------	561071
C 244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812
C 245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812
C 246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 247					
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250					
C 251	LH DASH PANEL-FAST IDLE SW	EATON	8	------	562763
C 252					
C 253	LH DASH PANEL-ETHER SW	EATON	8	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH DASH PANEL-JACOB & RETARDER SW	EATON	8	------	562763
C 256					
C 257					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274	RR. JCT. BOX – SIGNAL ALT. MODULE				
C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 277					
C 278					
C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 280	LH CONSOLE-UNLOAD TAG SW.	NGR	10	------	562763
C 281					
C 282					
C 283					
C 284					
C 285					
C 286	RH SW PANEL-A/C & HEAT	EATON	8	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	8	------	562763
C 289					
C 290					
C 291					
C 292					
C 293					
C 294					
C 295					
C 296					
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299	RH DASH PANEL SW-GALLEY	EATON	8	------	562763
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH DASH PANEL -LUG. DOOR LCK SW	EATON	8	------	562763
C 311	RH DASH PANEL -HOS & PAS CHIME SW	EATON	8	------	562763
C 312	RH DASH PANEL -READING LTS SW	EATON	8	------	562763
C 313	RH DASH PANEL -GEN & FLUOR LTS SW	EATON	8	------	562763
C 314	LH DASH PANEL-FR DEST. SIGN SW	EATON	8	------	562763
C 315	LH DASH PANEL-LH STORE SW	EATON	8	------	562763
C 316	LH CONSOLE SPARE SWITCH	EATON	8	------	562763
C 317	LH DASH PANEL-RH STORE SW	EATON	8	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	8	------	562763
C 319					
C 320	RH DASH PANEL-DRIVER'S LTS SW	EATON	8	------	562763
C 321	READING LTS TEST				
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637
C 324					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 325	LH DASH PANEL-KNEELING SW	EATON	8	------	562763
C 326	ENGINE CMPT.	PED	4	------	561610
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331	GALLEY MICROWAVE SW	EATON	8	------	562763
C 332					
C 333	GALLEY RH CONTAINER SW	EATON	8	------	562763
C 334	GALLEY LH CONTAINER SW	EATON	8	------	562763
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346					
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360					
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376					
C 377	LH DASH PANEL-STOP ENG.OVERIDE SW	EATON	8	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381					
C 382					
C 383					
C 384					
C 385					
C 386	LH DASH PANEL-WCL POWER SYSTEM SW	EATON	8	------	562763
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734
C 389	WCL REAR DOOR	MOLEX	4	561477	561476
C 390	LAVATORY WALL-WCL REMOTE CTR	EATON	8	------	562763
C 391	LAVATORY WALL-WCL LAMP	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 392	LAVATORY WALL-WCL SW. LT.	EATON	2	------	561835
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	------	------
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. – PRE-EXITATION ALT.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402	RR DRIVE AXLE-AIR DRYER	PED MP	2	------	562251
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247
C 404	GALLEY LAMP	AMP MNL	2	561248	561247
C 405					
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH DASH PANEL-MASTER SWITCH SW	EATON	8	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9	561670	561669
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562398	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	LH DASH PANEL-HTR WINDSH.SW	EATON	8	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	------
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 423	PRO-HEAT	PC	2		
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427	PRO-HEAT	PED-WP	2	561566	561680
C 428	PRO-HEAT	PED WP	6	561606	561607
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	PED-WP	2	561566	561680
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 438	EVAP COMPT	AMP MNL	2	561248	561247
C 439		AMP MNL	2	561248	561247
C 440		DEUTSCH	4	562479	562477
C 441					
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680
C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 455	WIRELESS MICRO-LH HAT-RACK	MOLEX	6	------	562464
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDR CONNECTOR	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468			8		
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 479	HVAC MODULE				
C 480	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	4	561889	561890
C 481	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	------	562237
C 484	UNDER DASH LH.-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH.-DASH & DEFR. DAM.MOT.	AMP MNL	3	561667	561550
C 486					
C 487					
C 488					
C 489					
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER	PED MP	7	562433	------
C 502	LH DASH PANEL-PRE HEATER SW.	EATON	8	------	562763
C 503	LH CONSOLE-PRE HEATER SW.	EATON	2	------	561837
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	9	------	562681
C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	562580
C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	------	561183
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 543	RR JCT BOX-PARK. BRAKE STOP LTS RESIS.	PED WP	2	561566	561690
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 546	WIRELESS MIC. CHARGING SYSTEM	MOLEX	2	--------	563025
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	8	------	562763
C 549	LH DASH PANEL-FAN CLUTCH OVERR. SW	EATON	8	------	562763
C 550	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 551	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 552	LAST LUGG. CPT. -WCL RICON	AMP CPC	9	561636	561637
C 553	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 554	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 555	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 556	UNDER DASH R.H. - RADIO ACC.	MOLEX	2	562550	562549
C 557	UNDER DASH R.H. - RADIO ACC.	MOLEX	9	562556	562555
C 558	UNDER DASH R.H. - RADIO ACC.	MOLEX	4	562507	562503
C 559	SOUND SYS. JCT. PANEL – FILTER AMPLI	PED WP	2	561566	561690
C 560	SOUND SYS. JCT. PANEL – POWER AMPLI	MOLEX	4	562507	562503
C 561	L.H. HAT RACK - WIRELESS MICRO	MOLEX	8		562465
C 562	L.H. HAT RACK - VCP	MOLEX	12	562556	563070
C 563	L.H MODESTY PANEL - DRIVERS SPK.	MOLEX	4	562507	562503
C 564	L.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 565	R.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 566	L.H. CONSOLE - BOOM MICRO	MOLEX	4	562507	562503
C 567	L.H. CONSOLE - DRIVERS MICRO	MOLEX	4	562507	562503
C 568	SOUND SYS. JCT. PANEL - PASS. SPK	CINCH	4	562553	562552
C 569	SOUND SYS. JCT. PANEL - POWER AMPLI.	MOLEX	9	562556	562555
C 570	UNDER DASH PANEL TTLT	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT	MOLEX	8		562465
C 574	HAT -RACK FLUOR. INDIRECT LIGHTING	MOLEX	6	----------	562759
C 575	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 576	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 577	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 578	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 579	L.H HAT RACK – VCP POWER	MOLEX	4		563071
C 580	RH DASH PANEL-HAT RACK FAN SW	EATON	8	--------	562763
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587	LH PARCEL RACK DVD UNIT	MOLEX	4	563040	563071
C 588	FRONT SERVICE CPT. CENTER SOUND SYS.	AMP. CPC	37	561645	561646
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593	BATTERY CMPT. - CHARGER	PED WP	3	561781	561782
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476
C 596	DASH CENTER MODULE - CLOSE DOOR	MOLEX	4	561477	561476
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601	L.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 602	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 603	R.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 604	LH PARCEL RACK DVD VIDEO STABILIZER	SWITCHCRAFT	1	563074	
C 605	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 606	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
C 609	LAVATORY - NIGHT LIGHT				
C 610	RR JCT BOX	AMP MNL	6	561552	561515
C 611	HAT RACK READING LTS RICON	MOLEX	6	562558	562557
C 612	HAT -RACK FLUOR. INSTATION LTS RICON	MOLEX	4	562507	562503
C 613	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 614	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 615	LH PARCEL RACK DVD SING ALONG ADAPT.	MOLEX	2	562550	562549
C 616					
L X	CLUSTER	JAE	22		562766
L Y	CLUSTER	JAE	30		562767
R X	CLUSTER	JAE	22		562764

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
AA1	BEHIND DASH - SONALERT	BOSCH	5		561183
AA2	BEHIND DASH - SONALERT	BOSCH	5		561183
C X1	FR LH UPPER WHELL CPT-ABS	AMP	18		562792
C X2	FR LH UPPER WHELL CPT-ABS	AMP	6		562793
C X3	FR LH UPPER WHELL CPT-ABS	AMP	9		562794
C X4	FR LH UPPER WHELL CPT-ABS	AMP	15		562795`
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
CV I2	RR JCT BOX-WORLD TRANSM. & EATON	AMP CPC	9	561636	561637
C Y	CLUSTER	JAE	30		562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 7					
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10					
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22	RR JCT BOX - EATON TRANSM.	AMP MNL	6	561552	561515
C 23	DDEC ENGINE-ECM J1939	PED MP	6	-------	561962
C 24	DDEC ENGINE	PED WP	1	561605	561577
C 25	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690
C 28	EATON TRANSMISSION	DEUTCH	3	562877	562884
C 29	EATON TRANSMISSION	PED MP	6	562878	------
C 30	RR JCT BOX - ECU EATON TRANSM.	PED MP	32	------	562866
C 31	RR JCT BOX - ECU EATON TRANSM.	PED MP	24	------	562865
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33	RR JCT BOX - EATON TRANSM.	DEUTCH	9	562531	------
C 34	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	3	------	562871
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	24	------	562874
C 37	RR SECTION-LH HAT RACK	MOLEX	6	562558	562557
C 38	RR SECTION-RH HAT RACK	MOLEX	6	562558	562557
C 39	LH CONSOLE - EATON TRANSM. DISPLAY	AMP MNL	4	561551	561668
C 40	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 41	LAVATORY ROOF LIGHT	LEECRAFT	2	-----	562803
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662
C 44	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERVICE CMPT.PRESS SW PARK BREAK	DEUTCH	4	562479	562477
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577
C 51					
C 52	RR JCT BOX	AMP CPC	22	561709	561710
C 53					
C 54					
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					
C 57					
C 58	RR JCT BOX AC PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX AC PANEL	AMP CPC	14	561584	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	16	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	SERV CPT. RXT. ENT. DOOR SW	DEUTSCH	4	562479	562477
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 78					
C 79					
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100	------	562248	------
C 86					
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88					
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS		35	------	641094
C 94					
C 95	CONDENSOR CPT - LIQ. SOL. VALVE	PED WP	2	561566	561690
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100	LH CONSOLE – 120 VOLTS SWITCH	EATON	8	------	562763
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	EVAPORATOR COMPT-SPEED MOT CTRL	DEUTSCH	5	------	562566
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115	ENGINE COMPT-AIR DRYER	PED WP	2	561566	561690
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117					
C 118	ENGINE COMPT-LAVATORY FAN	PED WP	2	561566	561690
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-UNLOAD TAG SYSTEM	PED WP	2	561566	561690
C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX - A/C PANEL DIODE CONN.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 143					
C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150					
C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	641132	------
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172					
C 173					
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C 190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690
C 191	ENGINE CPT RR DOOR RH STOP LT	PED WP	2	561566	561690
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C 193					
C 194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690
C 195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690
C 196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690
C 199	ENGINE CPT RR DOOR LICENCE LT	DOM AUTO	2	930210	------
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 202	RH HAT RACK-INDIRECT LIGHTING	MOLEX	2	---------	562758
C 203	RH HAT RACK-INDIRECT LIGHTING	MOLEX	6	---------	562759
C 204	RH HAT RACK-GENERAL LT	AMP MNL	2	560900	560898
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 206	RH HAT RACK-READING LT	AMP FF	4	----------	562756
C 207	LH HAT RACK-READING LT	AMP FF	4	----------	562756
C 208	LH HAT RACK-BALLAST	MOLEX	2	----------	562758
C 209	LH HAT RACK HOTESS CHIME	AMP MNL	3	561667	561550
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214	ENGINE CPT J1922				
C 215	TAG AXLE - A.T.C. SYSTEM				
C 216	TAG AXLE - A.T.C. SYSTEM				
C 217	RH DASH PANEL-FRONT CAMERA SW	EATON	8	--------	562763
C 218	RH DASH PANEL-FRONT CAMERA SW	AMP MNL	2	560900	560898
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 224					
C 225					
C 226					
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233	FR. SERVICE COMPT.	VDO	8		562043
C 234	FR. SERVICE COMPT.	VDO	8		562044
C 235	FR. SERVICE COMPT.	VDO	8		562041
C 236	LUGGAGE COMPARTEMENT	AMP MNL	4	560851	560852
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	2	561566	561690
C 241					
C 242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 243	FR SERVICE CPT-HEADLAMPS	TC	3	------	561071
C 244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812
C 245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812
C 246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 247					
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250					
C 251	LH DASH PANEL-FAST IDLE SW	EATON	8	------	562763
C 252					
C 253	LH DASH PANEL-ETHER SW	EATON	8	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH DASH PANEL-JACOB & RETARDER SW	EATON	8	------	562763
C 256					
C 257					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274	RR. JCT. BOX – SIGNAL ALT. MODULE				
C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 277					
C 278					
C 279 *	FR SERVICE CPT.- STEERING ZF	DEUTCH	2		562486
C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 280	LH CONSOLE-UNLOAD TAG SW.	NGR	10	------	562763
C 281					
C 282					
C 283					
C 284					
C 285					
C 286	RH SW PANEL-A/C & HEAT	EATON	8	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	8	------	562763
C 289					
C 290					
C 291					
C 292					
C 293					
C 294					
C 295					
C 296					
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299	RH DASH PANEL SW-GALLEY	EATON	8	------	562763
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH DASH PANEL -LUG. DOOR LCK SW	EATON	8	------	562763
C 311	RH DASH PANEL -HOS & PAS CHIME SW	EATON	8	------	562763
C 312	RH DASH PANEL -READING LTS SW	EATON	8	------	562763
C 313	RH DASH PANEL -GEN & FLUOR LTS SW	EATON	8	------	562763
C 314	LH DASH PANEL-FR DEST. SIGN SW	EATON	8	------	562763
C 315	LH DASH PANEL-LH STORE SW	EATON	8	------	562763
C 316	LH CONSOLE SPARE SWITCH	EATON	8	------	562763
C 317	LH DASH PANEL-RH STORE SW	EATON	8	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	8	------	562763
C 319					
C 320	RH DASH PANEL-DRIVER'S LTS SW	EATON	8	------	562763
C 321	READING LTS TEST				
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 324					
C 325	LH DASH PANEL-KNEELING SW	EATON	8	------	562763
C 326	ENGINE CMPT.	PED	4	------	561610
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331	GALLEY MICROWAVE SW	EATON	8	------	562763
C 332					
C 333	GALLEY RH CONTAINER SW	EATON	8	------	562763
C 334	GALLEY LH CONTAINER SW	EATON	8	------	562763
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346					
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360					
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376					
C 377	LH DASH PANEL-STOP ENG.OVERIDE SW	EATON	8	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381					
C 382					
C 383					
C 384					
C 385					
C 386	LH DASH PANEL-WCL POWER SYSTEM SW	EATON	8	------	562763
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734
C 389	WCL REAR DOOR	MOLEX	4	561477	561476
C 390	LAVATORY WALL-WCL REMOTE CTR	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 391	LAVATORY WALL-WCL LAMP	EATON	8	------	562763
C 392	LAVATORY WALL-WCL SW. LT.	EATON	2	------	561835
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	------	------
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. – PRE-EXITATION ALT.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402	RR DRIVE AXLE-AIR DRYER	PED MP	2	------	562251
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247
C 404	GALLEY LAMP	AMP MNL	2	561248	561247
C 405					
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH DASH PANEL-MASTER SWITCH SW	EATON	8	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9	561670	561669
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562398	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	LH DASH PANEL-HTR WINDSH.SW	EATON	8	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	------
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 423	PRO-HEAT	PC	2		
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427	PRO-HEAT	PED-WP	2	561566	561680
C 428	PRO-HEAT	PED WP	6	561606	561607
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	PED-WP	2	561566	561680
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 438	EVAP COMPT	AMP MNL	2	561248	561247
C 439		AMP MNL	2	561248	561247
C 440		DEUTSCH	4	562479	562477
C 441					
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680
C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 455	WIRELESS MICRO-LH HAT-RACK	MOLEX	6	------	562464
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDR CONNECTOR	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468			8		
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 479	HVAC MODULE				
C 480	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	4	561889	561890
C 481	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	------	562237
C 484	UNDER DASH LH.-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH.-DASH & DEFR. DAM.MOT.	AMP MNL	3	561667	561550
C 486					
C 487					
C 488					
C 489					
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER	PED MP	7	562433	------
C 502	LH DASH PANEL-PRE HEATER SW.	EATON	8	------	562763
C 503	LH CONSOLE-PRE HEATER SW.	EATON	2	------	561837
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	9	------	562681
C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	562580
C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	------	561183
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 543	RR JCT BOX-PARK. BRAKE STOP LTS RESIS.	PED WP	2	561566	561690
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 546	WIRELESS MIC. CHARGING SYSTEM	MOLEX	2	--------	563025
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	8	------	562763
C 549	LH DASH PANEL-FAN CLUTCH OVERR. SW	EATON	8	------	562763
C 550	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 551	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 552	LAST LUGG. CPT. -WCL RICON	AMP CPC	9	561636	561637
C 553	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 554	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 555	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 556	UNDER DASH R.H. - RADIO ACC.	MOLEX	2	562550	562549
C 557	UNDER DASH R.H. - RADIO ACC.	MOLEX	9	562556	562555
C 558	UNDER DASH R.H. - RADIO ACC.	MOLEX	4	562507	562503
C 559	SOUND SYS. JCT. PANEL – FILTER AMPLI	PED WP	2	561566	561690
C 560	SOUND SYS. JCT. PANEL – POWER AMPLI	MOLEX	4	562507	562503
C 561	L.H. HAT RACK - WIRELESS MICRO	MOLEX	8		562465
C 562	L.H. HAT RACK - VCP	MOLEX	12	562556	563070
C 563	L.H MODESTY PANEL - DRIVERS SPK.	MOLEX	4	562507	562503
C 564	L.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 565	R.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 566	L.H. CONSOLE - BOOM MICRO	MOLEX	4	562507	562503
C 567	L.H. CONSOLE - DRIVERS MICRO	MOLEX	4	562507	562503
C 568	SOUND SYS. JCT. PANEL - PASS. SPK	CINCH	4	562553	562552
C 569	SOUND SYS. JCT. PANEL - POWER AMPLI.	MOLEX	9	562556	562555
C 570	UNDER DASH PANEL TTLT	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT	MOLEX	8		562465
C 574	HAT -RACK FLUOR. INDIRECT LIGHTING	MOLEX	6	----------	562759
C 575	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 576	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 577	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 578	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 579	L.H HAT RACK – VCP POWER	MOLEX	4		563071
C 580	RH DASH PANEL-HAT RACK FAN SW	EATON	8	--------	562763
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587	LH PARCEL RACK DVD UNIT	MOLEX	4	563040	563071
C 588	FRONT SERVICE CPT. CENTER SOUND SYS.	AMP. CPC	37	561645	561646
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593	BATTERY CMPT. - CHARGER	PED WP	3	561781	561782
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476
C 596	DASH CENTER MODULE - CLOSE DOOR	MOLEX	4	561477	561476
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601	L.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 602	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 603	R.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 604	LH PARCEL RACK DVD VIDEO STABILIZER	SWITCHCRAFT	1	563074	
C 605	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 606	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
C 609	LAVATORY - NIGHT LIGHT				
C 610	RR JCT BOX	AMP MNL	6	561552	561515
C 611	HAT RACK READING LTS RICON	MOLEX	6	562558	562557
C 612	HAT -RACK FLUOR. INSTATION LTS RICON	MOLEX	4	562507	562503
C 613	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 614	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 615	LH PARCEL RACK DVD SING ALONG ADAPT.	MOLEX	2	562550	562549
C 616					
L X	CLUSTER	JAE	22		562766
L Y	CLUSTER	JAE	30		562767
R X	CLUSTER	JAE	22		562764

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
AA1	BEHIND DASH - SONALERT	BOSCH	5		561183
AA2	BEHIND DASH - SONALERT	BOSCH	5		561183
C X1	FR LH UPPER WHELL CPT-ABS	AMP	18		562792
C X2	FR LH UPPER WHELL CPT-ABS	AMP	6		562793
C X3	FR LH UPPER WHELL CPT-ABS	AMP	9		562794
C X4	FR LH UPPER WHELL CPT-ABS	AMP	15		562795`
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
CV I2	RR JCT BOX-WORLD TRANSM. & EATON	AMP CPC	9	561636	561637
C Y	CLUSTER	JAE	30		562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 7					
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10					
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22	RR JCT BOX - EATON TRANSM.	AMP MNL	6	561552	561515
C 23	DDEC ENGINE-ECM J1939	PED MP	6	-------	561962
C 24	DDEC ENGINE	PED WP	1	561605	561577
C 25	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690
C 28	EATON TRANSMISSION	DEUTCH	3	562877	562884
C 29	EATON TRANSMISSION	PED MP	6	562878	------
C 30	RR JCT BOX - ECU EATON TRANSM.	PED MP	32	------	562866
C 31	RR JCT BOX - ECU EATON TRANSM.	PED MP	24	------	562865
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33	RR JCT BOX - EATON TRANSM.	DEUTCH	9	562531	------
C 34	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	3	------	562871
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	24	------	562874
C 37	RR SECTION-LH HAT RACK	MOLEX	6	562558	562557
C 38	RR SECTION-RH HAT RACK	MOLEX	6	562558	562557
C 39	LH CONSOLE - EATON TRANSM. DISPLAY	AMP MNL	4	561551	561668
C 40	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 41	LAVATORY ROOF LIGHT	LEECRAFT	2	-----	562803
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662
C 44	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERVICE CMPT.PRESS SW PARK BREAK	DEUTCH	4	562479	562477
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577
C 51					
C 52	RR JCT BOX	AMP CPC	22	561709	561710
C 53					
C 54					
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					
C 57					
C 58	RR JCT BOX AC PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX AC PANEL	AMP CPC	14	561584	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	16	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	SERV CPT. RXT. ENT. DOOR SW	DEUTSCH	4	562479	562477
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 78					
C 79					
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100	------	562248	------
C 86					
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88					
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS		35	------	641094
C 94					
C 95	CONDENSOR CPT - LIQ. SOL. VALVE	PED WP	2	561566	561690
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100	LH CONSOLE – 120 VOLTS SWITCH	EATON	8	------	562763
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112					
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115					
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117					
C 118	ENGINE COMPT-LAVATORY FAN	PED WP	2	561566	561690
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-UNLOAD TAG SYSTEM	PED WP	2	561566	561690
C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX - A/C PANEL DIODE CONN.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 143					
C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150					
C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	641132	------
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172					
C 173					
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C 190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690
C 191	ENGINE CPT RR DOOR RH STOP LT	PED WP	2	561566	561690
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C 193					
C 194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690
C 195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690
C 196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690
C 199	ENGINE CPT RR DOOR LICENCE LT	DOM AUTO	2	930210	------
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 202	RH HAT RACK-INDIRECT LIGHTING	MOLEX	2	---------	562758
C 203	RH HAT RACK-INDIRECT LIGHTING	MOLEX	6	---------	562759
C 204	RH HAT RACK-GENERAL LT	AMP MNL	2	560900	560898
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 206	RH HAT RACK-READING LT	AMP FF	4	----------	562756
C 207	LH HAT RACK-READING LT	AMP FF	4	----------	562756
C 208	LH HAT RACK-BALLAST	MOLEX	2	----------	562758
C 209	LH HAT RACK HOTESS CHIME	AMP MNL	3	561667	561550
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214	ENGINE CPT J1922				
C 215	TAG AXLE - A.T.C. SYSTEM				
C 216	TAG AXLE - A.T.C. SYSTEM				
C 217	RH DASH PANEL-FRONT CAMERA SW	EATON	8	--------	562763
C 218	RH DASH PANEL-FRONT CAMERA SW	AMP MNL	2	560900	560898
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 224					
C 225					
C 226					
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233	FR. SERVICE COMPT.	VDO	8		562043
C 234	FR. SERVICE COMPT.	VDO	8		562044
C 235	FR. SERVICE COMPT.	VDO	8		562041
C 236	LUGGAGE COMPARTEMENT	AMP MNL	4	560851	560852
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	2	561566	561690
C 241					
C 242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 243	FR SERVICE CPT-HEADLAMPS	TC	3	------	561071
C 244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812
C 245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812
C 246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 247					
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250					
C 251	LH DASH PANEL-FAST IDLE SW	EATON	8	------	562763
C 252					
C 253	LH DASH PANEL-ETHER SW	EATON	8	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH DASH PANEL-JACOB & RETARDER SW	EATON	8	------	562763
C 256					
C 257					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274	RR. JCT. BOX – SIGNAL ALT. MODULE				
C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 277					
C 278					
C 279 *	FR SERVICE CPT.- STEERING ZF	DEUTCH	2		562486
C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 280	LH CONSOLE-UNLOAD TAG SW.	NGR	10	------	562763
C 281					
C 282					
C 283					
C 284					
C 285					
C 286	RH SW PANEL-A/C & HEAT	EATON	8	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	8	------	562763
C 289					
C 290					
C 291					
C 292					
C 293					
C 294					
C 295					
C 296					
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299	RH DASH PANEL SW-GALLEY	EATON	8	------	562763
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH DASH PANEL -LUG. DOOR LCK SW	EATON	8	------	562763
C 311	RH DASH PANEL -HOS & PAS CHIME SW	EATON	8	------	562763
C 312	RH DASH PANEL -READING LTS SW	EATON	8	------	562763
C 313	RH DASH PANEL -GEN & FLUOR LTS SW	EATON	8	------	562763
C 314	LH DASH PANEL-FR DEST. SIGN SW	EATON	8	------	562763
C 315	LH DASH PANEL-LH STORE SW	EATON	8	------	562763
C 316	LH CONSOLE SPARE SWITCH	EATON	8	------	562763
C 317	LH DASH PANEL-RH STORE SW	EATON	8	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	8	------	562763
C 319					
C 320	RH DASH PANEL-DRIVER'S LTS SW	EATON	8	------	562763
C 321	READING LTS TEST				
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 324					
C 325	LH DASH PANEL-KNEELING SW	EATON	8	------	562763
C 326	ENGINE CMPT.	PED	4	------	561610
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331	GALLEY MICROWAVE SW	EATON	8	------	562763
C 332					
C 333	GALLEY RH CONTAINER SW	EATON	8	------	562763
C 334	GALLEY LH CONTAINER SW	EATON	8	------	562763
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346					
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360					
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376					
C 377	LH DASH PANEL-STOP ENG.OVERIDE SW	EATON	8	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381					
C 382					
C 383					
C 384					
C 385					
C 386	LH DASH PANEL-WCL POWER SYSTEM SW	EATON	8	------	562763
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734
C 389	WCL REAR DOOR	MOLEX	4	561477	561476
C 390	LAVATORY WALL-WCL REMOTE CTR	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 391	LAVATORY WALL-WCL LAMP	EATON	8	------	562763
C 392	LAVATORY WALL-WCL SW. LT.	EATON	2	------	561835
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	------	------
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. – PRE-EXITATION ALT.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402					
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247
C 404	GALLEY LAMP	AMP MNL	2	561248	561247
C 405					
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH DASH PANEL-MASTER SWITCH SW	EATON	8	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9	561670	561669
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562398	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	LH DASH PANEL-HTR WINDSH.SW	EATON	8	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	------
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 423	PRO-HEAT	PC	2		
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427	PRO-HEAT	PED-WP	2	561566	561680
C 428	PRO-HEAT	PED WP	6	561606	561607
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	PED-WP	2	561566	561680
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 438	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 439	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 440	EVAP CMPT- A/C CONTROL	DEUTSCH	4	562479	562477
C 441					
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680
C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 455	WIRELESS MICRO-LH HAT-RACK	MOLEX	6	------	562464
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDR CONNECTOR	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468			8		
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 479	HVAC MODULE				
C 480	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	4	561889	561890
C 481	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	------	562237
C 484	UNDER DASH LH.-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH.-DASH & DEFR. DAM.MOT.	AMP MNL	3	561667	561550
C 486					
C 487					
C 488					
C 489					
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER	PED MP	7	562433	------
C 502	LH DASH PANEL-PRE HEATER SW.	EATON	8	------	562763
C 503	LH CONSOLE-PRE HEATER SW.	EATON	2	------	561837
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	9	------	562681
C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	562580
C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	------	561183
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 543	RR JCT BOX-PARK. BRAKE STOP LTS RESIS.	PED WP	2	561566	561690
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 546	WIRELESS MIC. CHARGING SYSTEM	MOLEX	2	--------	563025
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	8	------	562763
C 549	LH DASH PANEL-FAN CLUTCH OVERR. SW	EATON	8	------	562763
C 550	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 551	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 552	LAST LUGG. CPT. -WCL RICON	AMP CPC	9	561636	561637
C 553	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 554	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 555	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 556	UNDER DASH R.H. - RADIO ACC.	MOLEX	2	562550	562549
C 557	UNDER DASH R.H. - RADIO ACC.	MOLEX	9	562556	562555
C 558	UNDER DASH R.H. - RADIO ACC.	MOLEX	4	562507	562503
C 559	SOUND SYS. JCT. PANEL – FILTER AMPLI	PED WP	2	561566	561690
C 560	SOUND SYS. JCT. PANEL – POWER AMPLI	MOLEX	4	562507	562503
C 561	L.H. HAT RACK - WIRELESS MICRO	MOLEX	8		562465
C 562	L.H. HAT RACK - VCP	MOLEX	12	562556	563070
C 563	L.H MODESTY PANEL - DRIVERS SPK.	MOLEX	4	562507	562503
C 564	L.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 565	R.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 566	L.H. CONSOLE - BOOM MICRO	MOLEX	4	562507	562503
C 567	L.H. CONSOLE - DRIVERS MICRO	MOLEX	4	562507	562503
C 568	SOUND SYS. JCT. PANEL - PASS. SPK	CINCH	4	562553	562552
C 569	SOUND SYS. JCT. PANEL - POWER AMPLI.	MOLEX	9	562556	562555
C 570	UNDER DASH PANEL TTLT	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT	MOLEX	8		562465
C 574	HAT -RACK FLUOR. INDIRECT LIGHTING	MOLEX	6	----------	562759
C 575	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 576	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 577	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 578	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 579	L.H HAT RACK – VCP POWER	MOLEX	4		563071
C 580	RH DASH PANEL-HAT RACK FAN SW	EATON	8	--------	562763
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587	LH PARCEL RACK DVD UNIT	MOLEX	4	563040	563071
C 588	FRONT SERVICE CPT. CENTER SOUND SYS.	AMP. CPC	37	561645	561646
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593	BATTERY CMPT. - CHARGER	PED WP	3	561781	561782
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476
C 596	DASH CENTER MODULE - CLOSE DOOR	MOLEX	4	561477	561476
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601	L.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 602	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 603	R.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 604	LH PARCEL RACK DVD VIDEO STABILIZER	SWITCHCRAFT	1	563074	
C 605	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 606	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
C 609	LAVATORY - NIGHT LIGHT				
C 610	RR JCT BOX	AMP MNL	6	561552	561515
C 611	HAT RACK READING LTS RICON	MOLEX	6	562558	562557
C 612	HAT -RACK FLUOR. INSTATION LTS RICON	MOLEX	4	562507	562503
C 613	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 614	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 615	LH PARCEL RACK DVD SING ALONG ADAPT.	MOLEX	2	562550	562549
C 616					
L X	CLUSTER	JAE	22		562766
L Y	CLUSTER	JAE	30		562767
R X	CLUSTER	JAE	22		562764

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
AA1	BEHIND DASH - SONALERT	BOSCH	5		561183
AA2	BEHIND DASH - SONALERT	BOSCH	5		561183
C X1	FR LH UPPER WHELL CPT-ABS	AMP	18		562792
C X2	FR LH UPPER WHELL CPT-ABS	AMP	6		562793
C X3	FR LH UPPER WHELL CPT-ABS	AMP	9		562794
C X4	FR LH UPPER WHELL CPT-ABS	AMP	15		562795`
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
CV I2	RR JCT BOX-WORLD TRANSM. & EATON	AMP CPC	9	561636	561637
C Y	CLUSTER	JAE	30		562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 7					
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10					
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22	RR JCT BOX - EATON TRANSM.	AMP MNL	6	561552	561515
C 23	DDEC ENGINE-ECM J1939	PED MP	6	-------	561962
C 24	DDEC ENGINE	PED WP	1	561605	561577
C 25	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690
C 28	EATON TRANSMISSION	DEUTCH	3	562877	562884
C 29	EATON TRANSMISSION	PED MP	6	562878	------
C 30	RR JCT BOX - ECU EATON TRANSM.	PED MP	32	------	562866
C 31	RR JCT BOX - ECU EATON TRANSM.	PED MP	24	------	562865
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33	RR JCT BOX - EATON TRANSM.	DEUTCH	9	562531	------
C 34	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	3	------	562871
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	24	------	562874
C 37	RR SECTION-LH HAT RACK	MOLEX	6	562558	562557
C 38	RR SECTION-RH HAT RACK	MOLEX	6	562558	562557
C 39	LH CONSOLE - EATON TRANSM. DISPLAY	AMP MNL	4	561551	561668
C 40	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 41	LAVATORY ROOF LIGHT	LEECRAFT	2	-----	562803
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662
C 44	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERVICE CMPT.PRESS SW PARK BREAK	DEUTCH	4	562479	562477
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577
C 51					
C 52	RR JCT BOX	AMP CPC	22	561709	561710
C 53					
C 54					
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					
C 57					
C 58	RR JCT BOX AC PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX AC PANEL	AMP CPC	14	561584	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	16	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	SERV CPT. RXT. ENT. DOOR SW	DEUTSCH	4	562479	562477
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 78					
C 79					
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100	------	562248	------
C 86					
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88					
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS		35	------	641094
C 94					
C 95	CONDENSOR CPT - LIQ. SOL. VALVE	PED WP	2	561566	561690
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100	LH CONSOLE – 120 VOLTS SWITCH	EATON	8	------	562763
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112					
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115					
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117					
C 118	ENGINE COMPT-LAVATORY FAN	PED WP	2	561566	561690
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-UNLOAD TAG SYSTEM	PED WP	2	561566	561690
C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX - A/C PANEL DIODE CONN.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 143					
C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150					
C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	641132	------
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172					
C 173					
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C 190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690
C 191	ENGINE CPT RR DOOR RH STOP LT	PED WP	2	561566	561690
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C 193					
C 194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690
C 195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690
C 196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690
C 199	ENGINE CPT RR DOOR LICENCE LT	DOM AUTO	2	930210	------
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 202	RH HAT RACK-INDIRECT LIGHTING	MOLEX	2	---------	562758
C 203	RH HAT RACK-INDIRECT LIGHTING	MOLEX	6	---------	562759
C 204	RH HAT RACK-GENERAL LT	AMP MNL	2	560900	560898
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 206	RH HAT RACK-READING LT	AMP FF	4	----------	562756
C 207	LH HAT RACK-READING LT	AMP FF	4	----------	562756
C 208	LH HAT RACK-BALLAST	MOLEX	2	----------	562758
C 209	LH HAT RACK HOTESS CHIME	AMP MNL	3	561667	561550
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214	ENGINE CPT J1922				
C 215	TAG AXLE - A.T.C. SYSTEM				
C 216	TAG AXLE - A.T.C. SYSTEM				
C 217	RH DASH PANEL-FRONT CAMERA SW	EATON	8	--------	562763
C 218	RH DASH PANEL-FRONT CAMERA SW	AMP MNL	2	560900	560898
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 224					
C 225					
C 226					
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233	FR. SERVICE COMPT.	VDO	8		562043
C 234	FR. SERVICE COMPT.	VDO	8		562044
C 235	FR. SERVICE COMPT.	VDO	8		562041
C 236	LUGGAGE COMPARTEMENT	AMP MNL	4	560851	560852
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	2	561566	561690
C 241					
C 242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 243	FR SERVICE CPT-HEADLAMPS	TC	3	------	561071
C 244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812
C 245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812
C 246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 247					
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250					
C 251	LH DASH PANEL-FAST IDLE SW	EATON	8	------	562763
C 252					
C 253	LH DASH PANEL-ETHER SW	EATON	8	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH DASH PANEL-JACOB & RETARDER SW	EATON	8	------	562763
C 256					
C 257					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274	RR. JCT. BOX – SIGNAL ALT. MODULE				
C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 277					
C 278					
C 279 *	FR SERVICE CPT.- STEERING ZF	DEUTCH	2		562486
C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 280	LH CONSOLE-UNLOAD TAG SW.	NGR	10	------	562763
C 281					
C 282					
C 283					
C 284					
C 285					
C 286	RH SW PANEL-A/C & HEAT	EATON	8	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	8	------	562763
C 289					
C 290					
C 291					
C 292					
C 293					
C 294					
C 295					
C 296					
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299	RH DASH PANEL SW-GALLEY	EATON	8	------	562763
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH DASH PANEL -LUG. DOOR LCK SW	EATON	8	------	562763
C 311	RH DASH PANEL -HOS & PAS CHIME SW	EATON	8	------	562763
C 312	RH DASH PANEL -READING LTS SW	EATON	8	------	562763
C 313	RH DASH PANEL -GEN & FLUOR LTS SW	EATON	8	------	562763
C 314	LH DASH PANEL-FR DEST. SIGN SW	EATON	8	------	562763
C 315	LH DASH PANEL-LH STORE SW	EATON	8	------	562763
C 316	LH CONSOLE SPARE SWITCH	EATON	8	------	562763
C 317	LH DASH PANEL-RH STORE SW	EATON	8	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	8	------	562763
C 319					
C 320	RH DASH PANEL-DRIVER'S LTS SW	EATON	8	------	562763
C 321	READING LTS TEST				
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 324					
C 325	LH DASH PANEL-KNEELING SW	EATON	8	------	562763
C 326	ENGINE CMPT.	PED	4	------	561610
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331	GALLEY MICROWAVE SW	EATON	8	------	562763
C 332					
C 333	GALLEY RH CONTAINER SW	EATON	8	------	562763
C 334	GALLEY LH CONTAINER SW	EATON	8	------	562763
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346					
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360					
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376					
C 377	LH DASH PANEL-STOP ENG.OVERIDE SW	EATON	8	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381					
C 382					
C 383					
C 384					
C 385					
C 386	LH DASH PANEL-WCL POWER SYSTEM SW	EATON	8	------	562763
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734
C 389	WCL REAR DOOR	MOLEX	4	561477	561476
C 390	LAVATORY WALL-WCL REMOTE CTR	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 391	LAVATORY WALL-WCL LAMP	EATON	8	------	562763
C 392	LAVATORY WALL-WCL SW. LT.	EATON	2	------	561835
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	------	------
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. – PRE-EXITATION ALT.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402					
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247
C 404	GALLEY LAMP	AMP MNL	2	561248	561247
C 405					
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH DASH PANEL-MASTER SWITCH SW	EATON	8	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9	561670	561669
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562398	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	LH DASH PANEL-HTR WINDSH.SW	EATON	8	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	------
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 423	PRO-HEAT	PC	2		
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427	PRO-HEAT	PED-WP	2	561566	561680
C 428	PRO-HEAT	PED WP	6	561606	561607
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	PED-WP	2	561566	561680
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 438	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 439	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 440	EVAP CMPT- A/C CONTROL	DEUTSCH	4	562479	562477
C 441					
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680
C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 455	WIRELESS MICRO-LH HAT-RACK	MOLEX	6	------	562464
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDR CONNECTOR	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468			8		
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 479	HVAC MODULE				
C 480	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	4	561889	561890
C 481	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	------	562237
C 484	UNDER DASH LH.-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH.-DASH & DEFR. DAM.MOT.	AMP MNL	3	561667	561550
C 486					
C 487	S.S.PANEL – AUDIO IN AMPLI	MOLEX	4	------	563071
C 488	S.S.PANEL – AMPLI SIGNAL	MOLEX	8	------	562465
C 489	S.S.PANEL – SPEAKER OUTLET	MOLEX	6	------	562464
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER	PED MP	7	562433	------
C 502	LH DASH PANEL-PRE HEATER SW.	EATON	8	------	562763
C 503	LH CONSOLE-PRE HEATER SW.	EATON	2	------	561837
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	9	------	562681
C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	562580
C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	------	561183
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 543	RR JCT BOX-PARK. BRAKE STOP LTS RESIS.	PED WP	2	561566	561690
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 546	WIRELESS MIC. CHARGING SYSTEM	MOLEX	2	--------	563025
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	8	------	562763
C 549	LH DASH PANEL-FAN CLUTCH OVERR. SW	EATON	8	------	562763
C 550	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 551	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 552	LAST LUGG. CPT. -WCL RICON	AMP CPC	9	561636	561637
C 553	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 554	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 555	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 556	UNDER DASH R.H. - RADIO ACC.	MOLEX	2	562550	562549
C 557	UNDER DASH R.H. - RADIO ACC.	MOLEX	9	562556	562555
C 558	UNDER DASH R.H. - RADIO ACC.	MOLEX	4	562507	562503
C 559	SOUND SYS. JCT. PANEL – FILTER AMPLI	PED WP	2	561566	561690
C 560	SOUND SYS. JCT. PANEL – POWER AMPLI	MOLEX	4	562507	562503
C 561	L.H. HAT RACK - WIRELESS MICRO	MOLEX	8		562465
C 562	L.H. HAT RACK - VCP	MOLEX	12	562556	563070
C 563	L.H MODESTY PANEL - DRIVERS SPK.	MOLEX	4	562507	562503
C 564	L.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 565	R.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 566	L.H. CONSOLE - BOOM MICRO	MOLEX	4	562507	562503
C 567	L.H. CONSOLE - DRIVERS MICRO	MOLEX	4	562507	562503
C 568	SOUND SYS. JCT. PANEL - PASS. SPK	CINCH	4	562553	562552
C 569	SOUND SYS. JCT. PANEL - POWER AMPLI.	MOLEX	9	562556	562555
C 570	UNDER DASH PANEL TTLT	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT	MOLEX	8		562465
C 574	HAT -RACK FLUOR. INDIRECT LIGHTING	MOLEX	6	----------	562759
C 575	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 576	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 577	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 578	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 579	L.H HAT RACK – VCP POWER	MOLEX	4		563071
C 580	RH DASH PANEL-HAT RACK FAN SW	EATON	8	--------	562763
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587	LH PARCEL RACK DVD UNIT	MOLEX	4	563040	563071
C 588	FRONT SERVICE CPT. CENTER SOUND SYS.	AMP. CPC	37	561645	561646
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593	BATTERY CMPT. - CHARGER	PED WP	3	561781	561782
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476
C 596	DASH CENTER MODULE - CLOSE DOOR	MOLEX	4	561477	561476
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601	L.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 602	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 603	R.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 604	LH PARCEL RACK DVD VIDEO STABILIZER	SWITCHCRAFT	1	563074	
C 605	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 606	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
C 609	LAVATORY - NIGHT LIGHT				
C 610	RR JCT BOX	AMP MNL	6	561552	561515
C 611	HAT RACK READING LTS RICON	MOLEX	6	562558	562557
C 612	HAT -RACK FLUOR. INSTATION LTS RICON	MOLEX	4	562507	562503
C 613	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 614	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 615	LH PARCEL RACK DVD SING ALONG ADAPT.	MOLEX	2	562550	562549
C 616					
L X	CLUSTER	JAE	22		562766
L Y	CLUSTER	JAE	30		562767
R X	CLUSTER	JAE	22		562764

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
AA1	BEHIND DASH - SONALERT	BOSCH	5		561183
AA2	BEHIND DASH - SONALERT	BOSCH	5		561183
C X1	FR LH UPPER WHELL CPT-ABS	AMP	18		562792
C X2	FR LH UPPER WHELL CPT-ABS	AMP	6		562793
C X3	FR LH UPPER WHELL CPT-ABS	AMP	9		562794
C X4	FR LH UPPER WHELL CPT-ABS	AMP	15		562795`
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
CV I2	RR JCT BOX-WORLD TRANSM. & EATON	AMP CPC	9	561636	561637
C WX1	ENGINE CPT-WEBASTO PRE-HEAT WATER	AMP SEALED	7		563135
C WX3	ENGINE CPT-WEBASTO PRE-HEAT WATER	AMP SEALED	7	563136	
C Y	CLUSTER	JAE	30	---	562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 7					
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10	LUGGAGE COMPT. WATER BOOSTER PUMP	PED	2	562348	562471
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22	RR JCT BOX - EATON TRANSM.	AMP MNL	6	561552	561515
C 23	DDEC ENGINE-ECM J1939	PED MP	6	-------	561962
C 24	DDEC ENGINE	PED WP	1	561605	561577
C 25	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690
C 28	EATON TRANSMISSION	DEUTCH	3	562877	562884
C 29	EATON TRANSMISSION	PED MP	6	562878	------
C 30	RR JCT BOX - ECU EATON TRANSM.	PED MP	32	------	562866
C 31	RR JCT BOX - ECU EATON TRANSM.	PED MP	24	------	562865
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33	RR JCT BOX - EATON TRANSM.	DEUTCH	9	562531	------
C 34	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	3	------	562871
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	24	------	562874
C 37	RR SECTION-LH HAT RACK	MOLEX	6	562558	562557
C 38	RR SECTION-RH HAT RACK	MOLEX	6	562558	562557
C 39	LH CONSOLE - EATON TRANSM. DISPLAY	AMP MNL	4	561551	561668
C 40	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 41	LAVATORY ROOF LIGHT	LEECRAFT	2	-----	562803
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662
C 44	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERVICE CMPT.PRESS SW PARK BREAK	DEUTCH	4	562479	562477
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577
C 51					
C 52	RR JCT BOX	AMP CPC	22	561709	561710
C 53	SPARE TIRE COMPT ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 54	SPARE TIRE COMPT ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					
C 57					
C 58	RR JCT BOX AC PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX AC PANEL	AMP CPC	14	561584	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	16	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	SERV CPT. RXT. ENT. DOOR SW	DEUTSCH	4	562479	562477
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 78					
C 79					
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100	------	562248	------
C 86					
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88					
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS		35	------	641094
C 94	RH CONSOLE ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 95	CONDENSOR CPT - LIQ. SOL. VALVE	PED WP	2	561566	561690
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100	LH CONSOLE – 120 VOLTS SWITCH	EATON	8	------	562763
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112					
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115					
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117	FR SRV. COMPT. KNEELING SYS.	PED WP	2	561761	
C 118	ENGINE COMPT-LAVATORY FAN	PED WP	2	561566	561690
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-UNLOAD TAG SYSTEM	PED WP	2	561566	561690
C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129					
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX - A/C PANEL DIODE CONN.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 143					
C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150					
C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	641132	------
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172					
C 173					
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					
C 189	ENGINE CPT RR DOOR B/U LT	TRUCK-LITE	2	------	562755
C 190	ENGINE CPT RR DOOR TAIL/ STOP LT	SUPER SEAL	3		562601
C 191	ENGINE CPT RR DOOR RH TAIL/STOP LT	SUPER SEAL	3		562601
C 192	ENGINE CPT RR DOOR DIR. LT	SUPER SEAL	3		562601
C 193					
C 194					
C 195					
C 198	ENGINE CPT RR DOOR LICENCE LT	PED WP	2	562348	562471
C 199	ENGINE CPT RR DOOR LICENCE LT	PED WP	2	562348	562471
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 202	RH HAT RACK-INDIRECT LIGHTING	MOLEX	2	---------	562758
C 203	RH HAT RACK-INDIRECT LIGHTING	MOLEX	6	---------	562759
C 204	RH HAT RACK-GENERAL LT	AMP MNL	2	560900	560898
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 206	RH HAT RACK-READING LT	AMP FF	4	----------	562756
C 207	LH HAT RACK-READING LT	AMP FF	4	----------	562756
C 208	LH HAT RACK-BALLAST	MOLEX	2	----------	562758
C 209	LH HAT RACK HOTESS CHIME	AMP MNL	3	561667	561550
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214	ENGINE CPT J1922				
C 215	TAG AXLE - A.T.C. SYSTEM				
C 216	TAG AXLE - A.T.C. SYSTEM				
C 217	RH DASH PANEL-FRONT CAMERA SW	EATON	8	--------	562763
C 218	RH DASH PANEL-FRONT CAMERA SW	AMP MNL	2	560900	560898
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 224	ENGINE CMPT. -VORAD J1939	DEUTSCH	3	562877	562884
C 225	ENGINE CMPT. -VORAD J1939	DEUTSCH	3	562877	562884
C 226	FR LH UPPER WHEEL CPT-VORAD J1939	DEUTSCH	3	562677	562884
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233	FR. SERVICE COMPT.	VDO	8		562043
C 234	FR. SERVICE COMPT.	VDO	8		562044
C 235	FR. SERVICE COMPT.	VDO	8		562041
C 236	LUGGAGE COMPARTEMENT	AMP MNL	4	560851	560852
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	3	561781	562428
C 241	HEADLAMPS HI BEAM	HELLA	2		562623
C 242	HEADLAMPS LO BEAM	HELLA	2		562623
C 243	FR SERVICE CPT. HEADLAMPS	DEUTCH	3	565131	562789
C 244	FR SERVICE CPT-LH FOG LAMP	DEUTCH	2	562902	562901
C 245	FR SERVICE CPT-RH FOG LAMP	DEUTCH	2	562902	562901
C 246	FR SERVICE CPT. MIRROR	CONXALL	5	563091	563090
C 247	HEADLAMPS MARK & DIR LTS	AMP SUPER S	3		562601
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250	LH CONSOL PANEL- LOW BOY	PED	2	561566	561690
C 251	LH DASH PANEL-FAST IDLE SW	EATON	8	------	562763
C 252					
C 253	LH DASH PANEL-ETHER SW	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH DASH PANEL-JACOB & RETARDER SW	EATON	8	------	562763
C 256					
C 257					
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274	RR. JCT. BOX – SIGNAL ALT. MODULE				
C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 277					
C 278					
C 279 *	FR SERVICE CPT.- STEERING ZF	DEUTCH	2		562486
C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 280	LH CONSOLE-UNLOAD TAG SW.	NGR	10	------	562763
C 281					
C 282					
C 283					
C 284					
C 285					
C 286	RH SW PANEL-A/C & HEAT	EATON	8	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	8	------	562763
C 289					
C 290					
C 291					
C 292					
C 293					
C 294					
C 295					
C 296					
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299	RH DASH PANEL SW-GALLEY	EATON	8	------	562763
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH DASH PANEL -LUG. DOOR LCK SW	EATON	8	------	562763
C 311	RH DASH PANEL -HOS & PAS CHIME SW	EATON	8	------	562763
C 312	RH DASH PANEL -READING LTS SW	EATON	8	------	562763
C 313	RH DASH PANEL -GEN & FLUOR LTS SW	EATON	8	------	562763
C 314	LH DASH PANEL-FR DEST. SIGN SW	EATON	8	------	562763
C 315	LH DASH PANEL-LH STORE SW	EATON	8	------	562763
C 316	LH CONSOLE SPARE SWITCH	EATON	8	------	562763
C 317	LH DASH PANEL-RH STORE SW	EATON	8	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	8	------	562763
C 319					
C 320	RH DASH PANEL-DRIVER'S LTS SW	EATON	8	------	562763
C 321	READING LTS TEST				
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637
C 324					
C 325	LH DASH PANEL-KNEELING SW	EATON	8	------	562763
C 326	ENGINE CMPT.	PED	4	------	561610
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331	GALLEY MICROWAVE SW	EATON	8	------	562763
C 332					
C 333	GALLEY RH CONTAINER SW	EATON	8	------	562763
C 334	GALLEY LH CONTAINER SW	EATON	8	------	562763
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346					
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360					
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376					
C 377	LH DASH PANEL-STOP ENG.OVERIDE SW	EATON	8	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381					
C 382					
C 383					
C 384					
C 385					
C 386	LH DASH PANEL-WCL POWER SYSTEM SW	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734
C 389	WCL REAR DOOR	MOLEX	4	561477	561476
C 390	LAVATORY WALL-WCL REMOTE CTR	EATON	8	------	562763
C 391	LAVATORY WALL-WCL LAMP	EATON	8	------	562763
C 392	LAVATORY WALL-WCL SW. LT.	EATON	2	------	561835
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	------	------
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. – PRE-EXITATION ALT.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402					
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247
C 404	GALLEY LAMP	AMP MNL	2	561248	561247
C 405	LAST LUGGAGE COMP.- INVERTER SIGNAL	AMP MNL	2	561248	561247
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH DASH PANEL-MASTER SWITCH SW	EATON	8	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9	561670	561669
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562398	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	LH DASH PANEL-HTR WINDSH.SW	EATON	8	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420					
C 421					
C 422					
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427	PRO-HEAT	PED-WP	2	561566	561680
C 428	PRO-HEAT	PED WP	6	561606	561607
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	PED-WP	2	561566	561680
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 438	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 439	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 440	EVAP CMPT- A/C CONTROL	DEUTSCH	4	562479	562477
C 441	FR JCT BOX- DIODES	AMP MNL	15	561987	561986
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 455	WIRELESS MICRO-LH HAT-RACK	MOLEX	6	------	562464
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDR CONNECTOR	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468			8		
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 479	HVAC MODULE				
C 480	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	4	561889	561890
C 481	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	------	562237
C 484	UNDER DASH LH.-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH.-DASH & DEFR. DAM.MOT.	AMP MNL	3	561667	561550
C 486					
C 487	S.S.PANEL – AUDIO IN AMPLI	MOLEX	4	------	563071
C 488	S.S.PANEL – AMPLI SIGNAL	MOLEX	8	------	562465
C 489	S.S.PANEL – SPEAKER OUTLET	MOLEX	6	------	562464
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER	PED MP	7	562433	------
C 502	LH DASH PANEL-PRE HEATER SW.	EATON	8	------	562763
C 503	LH CONSOLE-PRE HEATER SW.	EATON	2	------	561837
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	9	------	562681
C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	562580

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 522					
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 543					
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 546	WIRELESS MIC. CHARGING SYSTEM	MOLEX	2	--------	563025
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	8	------	562763
C 549	LH DASH PANEL-FAN CLUTCH OVERR. SW	EATON	8	------	562763
C 550	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 551	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 552	LAST LUGG. CPT. -WCL RICON	AMP CPC	9	561636	561637
C 553	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 554	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 555	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 556	UNDER DASH R.H. - RADIO ACC.	MOLEX	2	562550	562549
C 557	UNDER DASH R.H. - RADIO ACC.	MOLEX	9	562556	562555
C 558	UNDER DASH R.H. - RADIO ACC.	MOLEX	4	562507	562503
C 559	SOUND SYS. JCT. PANEL – FILTER AMPLI	PED WP	2	561566	561690
C 560	SOUND SYS. JCT. PANEL – POWER AMPLI	MOLEX	4	562507	562503
C 561	L.H. HAT RACK - WIRELESS MICRO	MOLEX	8		562465
C 562	L.H. HAT RACK - VCP	MOLEX	12	562556	563070
C 563	L.H MODESTY PANEL - DRIVERS SPK.	MOLEX	4	562507	562503
C 564	L.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 565	R.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 566	L.H. CONSOLE - BOOM MICRO	MOLEX	4	562507	562503
C 567	L.H. CONSOLE - DRIVERS MICRO	MOLEX	4	562507	562503
C 568	SOUND SYS. JCT. PANEL - PASS. SPK	CINCH	4	562553	562552
C 569	SOUND SYS. JCT. PANEL - POWER AMPLI.	MOLEX	9	562556	562555
C 570	UNDER DASH PANEL TTLT	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT	MOLEX	8		562465
C 574	HAT -RACK FLUOR. INDIRECT LIGHTING	MOLEX	6	----------	562759
C 575	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 576	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 577	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 578	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 579	L.H HAT RACK – VCP POWER	MOLEX	4		563071
C 580	RH DASH PANEL-HAT RACK FAN SW	EATON	8	--------	562763
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 587	LH PARCEL RACK DVD UNIT	MOLEX	4	563040	563071
C 588	FRONT SERVICE CPT. CENTER SOUND SYS.	AMP. CPC	37	561645	561646
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593	BATTERY CMPT. - CHARGER	PED WP	3	561781	561782
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476
C 596	DASH CENTER MODULE - CLOSE DOOR	MOLEX	4	561477	561476
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601	L.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 602	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 603	R.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 604	LH PARCEL RACK DVD VIDEO STABILIZER	SWITCHCRAFT	1	563074	
C 605	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 606	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
C 609	LAVATORY - NIGHT LIGHT				
C 610	RR JCT BOX	AMP MNL	6	561552	561515
C 611	HAT RACK READING LTS RICON	MOLEX	6	562558	562557
C 612	HAT -RACK FLUOR. INSTATION LTS RICON	MOLEX	4	562507	562503
C 613	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 614	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 615	LH PARCEL RACK DVD SING ALONG ADAPT.	MOLEX	2	562550	562549
C 616					
L X	CLUSTER	JAE	22		562766
L Y	CLUSTER	JAE	30		562767
R X	CLUSTER	JAE	22		562764

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
AA1	BEHIND DASH - SONALERT	BOSCH	5		561183
AA2	BEHIND DASH - SONALERT	BOSCH	5		561183
C X1	FR SERVICE COMPT- ECU ABS	AMP	15		563200
C X2	FR SERVICE COMPT- ECU ABS	AMP	18		563201
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
C I2	RR JCT BOX-WORLD TRANSM. & EATON	AMP CPC	9	561636	561637
C WX1	ENGINE CPT-WEBASTO PRE-HEAT WATER	AMP SEALED	7		563135
C WX3	ENGINE CPT-WEBASTO PRE-HEAT WATER	AMP SEALED	7	563136	
C Y	CLUSTER	JAE	30	---	562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 7					
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10	LUGGAGE COMPT. WATER BOOSTER PUMP	PED	2	562348	562471
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22	RR JCT BOX - EATON TRANSM.	AMP MNL	6	561552	561515
C 23	DDEC ENGINE-ECM J1939	PED MP	6	-------	561962
C 24	DDEC ENGINE	PED WP	1	561605	561577
C 25	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690
C 28	EATON TRANSMISSION	DEUTCH	3	562877	562884
C 29	EATON TRANSMISSION	PED MP	6	562878	------
C 30	RR JCT BOX - ECU EATON TRANSM.	PED MP	32	------	562866
C 31	RR JCT BOX - ECU EATON TRANSM.	PED MP	24	------	562865
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33	RR JCT BOX - EATON TRANSM.	DEUTCH	9	562531	------
C 34	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	3	------	562871
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	24	------	562874
C 37	RR SECTION-LH HAT RACK	MOLEX	6	562558	562557
C 38	RR SECTION-RH HAT RACK	MOLEX	6	562558	562557
C 39	LH CONSOLE - EATON TRANSM. DISPLAY	AMP MNL	4	561551	561668
C 40	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 41	LAVATORY ROOF LIGHT	LEECRAFT	2	-----	562803
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662
C 44	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERVICE CMPT.PRESS SW PARK BREAK	DEUTCH	4	562479	562477
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577
C 51					
C 52	RR JCT BOX	AMP CPC	22	561709	561710
C 53	SPARE TIRE COMPT ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 54	SPARE TIRE COMPT ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					
C 57					
C 58	RR JCT BOX AC PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX AC PANEL	AMP CPC	14	561584	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	16	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	SERV CPT. RXT. ENT. DOOR SW	DEUTSCH	4	562479	562477
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 78					
C 79					
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100	------	562248	------
C 86					
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88					
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS		35	------	641094
C 94	RH CONSOLE ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 95	CONDENSOR CPT - LIQ. SOL. VALVE	PED WP	2	561566	561690
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100	LH CONSOLE – 120 VOLTS SWITCH	EATON	8	------	562763
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112					
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115					
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117	FR SRV. COMPT. KNEELING SYS.	PED WP	2	561761	
C 118	ENGINE COMPT-LAVATORY FAN	PED WP	2	561566	561690
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 122	ENGINE CPT-UNLOAD TAG SYSTEM	PED WP	2	561566	561690
C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129					
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX - A/C PANEL DIODE CONN.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 143					
C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150					
C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	641132	------
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172					
C 173					
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					
C 189	ENGINE CPT RR DOOR B/U LT	TRUCK-LITE	2	------	562755
C 190	ENGINE CPT RR DOOR TAIL/ STOP LT	SUPER SEAL	3		562601
C 191	ENGINE CPT RR DOOR RH TAIL/STOP LT	SUPER SEAL	3		562601
C 192	ENGINE CPT RR DOOR DIR. LT	SUPER SEAL	3		562601
C 193					
C 194					
C 195					
C 198	ENGINE CPT RR DOOR LICENCE LT	PED WP	2	562348	562471
C 199	ENGINE CPT RR DOOR LICENCE LT	PED WP	2	562348	562471
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 202	RH HAT RACK-INDIRECT LIGHTING	MOLEX	2	--------	562758
C 203	RH HAT RACK-INDIRECT LIGHTING	MOLEX	6	--------	562759
C 204	RH HAT RACK-GENERAL LT	AMP MNL	2	560900	560898
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 206	RH HAT RACK-READING LT	AMP FF	4	----------	562756
C 207	LH HAT RACK-READING LT	AMP FF	4	----------	562756
C 208	LH HAT RACK-BALLAST	MOLEX	2	----------	562758
C 209	LH HAT RACK HOTESS CHIME	AMP MNL	3	561667	561550
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214	ENGINE CPT J1922				
C 215	TAG AXLE - A.T.C. SYSTEM				
C 216	TAG AXLE - A.T.C. SYSTEM				
C 217	RH DASH PANEL-FRONT CAMERA SW	EATON	8	--------	562763
C 218	RH DASH PANEL-FRONT CAMERA SW	AMP MNL	2	560900	560898
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 224	ENGINE CMPT. -VORAD J1939	DEUTSCH	3	562877	562884
C 225	ENGINE CMPT. -VORAD J1939	DEUTSCH	3	562877	562884
C 226	FR LH UPPER WHEEL CPT-VORAD J1939	DEUTSCH	3	562677	562884
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233	FR. SERVICE COMPT.	VDO	8		562043
C 234	FR. SERVICE COMPT.	VDO	8		562044
C 235	FR. SERVICE COMPT.	VDO	8		562041
C 236	LUGGAGE COMPARTEMENT	AMP MNL	4	560851	560852
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	3	561781	562428
C 241	HEADLAMPS HI BEAM	HELLA	2		562623
C 242	HEADLAMPS LO BEAM	HELLA	2		562623
C 243	FR SERVICE CPT. HEADLAMPS	DEUTCH	3	565131	562789
C 244	FR SERVICE CPT-LH FOG LAMP	DEUTCH	2	562902	562901
C 245	FR SERVICE CPT-RH FOG LAMP	DEUTCH	2	562902	562901
C 246	FR SERVICE CPT. MIRROR	CONXALL	5	563091	563090
C 247	HEADLAMPS MARK & DIR LTS	AMP SUPER S	3		562601
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250	LH CONSOL PANEL- LOW BOY	PED	2	561566	561690
C 251	LH DASH PANEL-FAST IDLE SW	EATON	8	------	562763
C 252					
C 253	LH DASH PANEL-ETHER SW	EATON	8	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH DASH PANEL-JACOB & RETARDER SW	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 256					
C 257					
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274	RR. JCT. BOX – SIGNAL ALT. MODULE				
C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 277					
C 278					
C 279 *	FR SERVICE CPT.- STEERING ZF	DEUTCH	2		562486
C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 280	LH CONSOLE-UNLOAD TAG SW.	NGR	10	------	562763
C 281					
C 282					
C 283					
C 284					
C 285					
C 286	RH SW PANEL-A/C & HEAT	EATON	8	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	8	------	562763
C 289					
C 290					
C 291					
C 292					
C 293					
C 294					
C 295					
C 296					
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299	RH DASH PANEL SW-GALLEY	EATON	8	------	562763
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH DASH PANEL -LUG. DOOR LCK SW	EATON	8	------	562763
C 311	RH DASH PANEL -HOS & PAS CHIME SW	EATON	8	------	562763
C 312	RH DASH PANEL -READING LTS SW	EATON	8	------	562763
C 313	RH DASH PANEL -GEN & FLUOR LTS SW	EATON	8	------	562763
C 314	LH DASH PANEL-FR DEST. SIGN SW	EATON	8	------	562763
C 315	LH DASH PANEL-LH STORE SW	EATON	8	------	562763
C 316	LH CONSOLE SPARE SWITCH	EATON	8	------	562763
C 317	LH DASH PANEL-RH STORE SW	EATON	8	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	8	------	562763
C 319					
C 320	RH DASH PANEL-DRIVER'S LTS SW	EATON	8	------	562763
C 321	READING LTS TEST				

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637
C 324					
C 325	LH DASH PANEL-KNEELING SW	EATON	8	------	562763
C 326	ENGINE CMPT.	PED	4	------	561610
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331	GALLEY MICROWAVE SW	EATON	8	------	562763
C 332					
C 333	GALLEY RH CONTAINER SW	EATON	8	------	562763
C 334	GALLEY LH CONTAINER SW	EATON	8	------	562763
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346					
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360					
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376					
C 377	LH DASH PANEL-STOP ENG.OVERIDE SW	EATON	8	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381					
C 382					
C 383					
C 384					
C 385					
C 386	LH DASH PANEL-WCL POWER SYSTEM SW	EATON	8	------	562763
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 389	WCL REAR DOOR	MOLEX	4	561477	561476
C 390	LAVATORY WALL-WCL REMOTE CTR	EATON	8	------	562763
C 391	LAVATORY WALL-WCL LAMP	EATON	8	------	562763
C 392	LAVATORY WALL-WCL SW. LT.	EATON	2	------	561835
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	------	------
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. – PRE-EXITATION ALT.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402					
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247
C 404	GALLEY LAMP	AMP MNL	2	561248	561247
C 405	LAST LUGGAGE COMP.- INVERTER SIGNAL	AMP MNL	2	561248	561247
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH DASH PANEL-MASTER SWITCH SW	EATON	8	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9	561670	561669
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562398	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	LH DASH PANEL-HTR WINDSH.SW	EATON	8	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420					
C 421					
C 422					
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427	PRO-HEAT	PED-WP	2	561566	561680
C 428	PRO-HEAT	PED WP	6	561606	561607
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	PED-WP	2	561566	561680
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 438	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 439	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 440	EVAP CMPT- A/C CONTROL	DEUTSCH	4	562479	562477
C 441	FR JCT BOX- DIODES	AMP MNL	15	561987	561986
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680
C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 455	WIRELESS MICRO-LH HAT-RACK	MOLEX	6	------	562464
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDR CONNECTOR	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468			8		
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 479	HVAC MODULE				
C 480	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	4	561889	561890
C 481	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	------	562237
C 484	UNDER DASH LH.-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH.-DASH & DEFR. DAM.MOT.	AMP MNL	3	561667	561550
C 486					
C 487	S.S.PANEL – AUDIO IN AMPLI	MOLEX	4	------	563071
C 488	S.S.PANEL – AMPLI SIGNAL	MOLEX	8	------	562465
C 489	S.S.PANEL – SPEAKER OUTLET	MOLEX	6	------	562464
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER	PED MP	7	562433	------
C 502	LH DASH PANEL-PRE HEATER SW.	EATON	8	------	562763
C 503	LH CONSOLE-PRE HEATER SW.	EATON	2	------	561837
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	9	------	562681
C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	562580
C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 522					
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 543					
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 546	WIRELESS MIC. CHARGING SYSTEM	MOLEX	2	--------	563025
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	8	------	562763
C 549	LH DASH PANEL-FAN CLUTCH OVERR. SW	EATON	8	------	562763
C 550	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 551	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 552	LAST LUGG. CPT. -WCL RICON	AMP CPC	9	561636	561637
C 553	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 554	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 555	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 556	UNDER DASH R.H. - RADIO ACC.	MOLEX	2	562550	562549
C 557	UNDER DASH R.H. - RADIO ACC.	MOLEX	9	562556	562555
C 558	UNDER DASH R.H. - RADIO ACC.	MOLEX	4	562507	562503
C 559	SOUND SYS. JCT. PANEL – FILTER AMPLI	PED WP	2	561566	561690
C 560	SOUND SYS. JCT. PANEL – POWER AMPLI	MOLEX	4	562507	562503
C 561	L.H. HAT RACK - WIRELESS MICRO	MOLEX	8		562465
C 562	L.H. HAT RACK - VCP	MOLEX	12	562556	563070
C 563	L.H MODESTY PANEL - DRIVERS SPK.	MOLEX	4	562507	562503
C 564	L.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 565	R.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 566	L.H. CONSOLE - BOOM MICRO	MOLEX	4	562507	562503
C 567	L.H. CONSOLE - DRIVERS MICRO	MOLEX	4	562507	562503
C 568	SOUND SYS. JCT. PANEL - PASS. SPK	CINCH	4	562553	562552
C 569	SOUND SYS. JCT. PANEL - POWER AMPLI.	MOLEX	9	562556	562555
C 570	UNDER DASH PANEL TTLT	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT	MOLEX	8		562465
C 574	HAT -RACK FLUOR. INDIRECT LIGHTING	MOLEX	6	----------	562759
C 575	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 576	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 577	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 578	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 579	L.H HAT RACK – VCP POWER	MOLEX	4		563071
C 580	RH DASH PANEL-HAT RACK FAN SW	EATON	8	--------	562763
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587	LH PARCEL RACK DVD UNIT	MOLEX	4	563040	563071
C 588	FRONT SERVICE CPT. CENTER SOUND SYS.	AMP. CPC	37	561645	561646

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593	BATTERY CMPT. - CHARGER	PED WP	3	561781	561782
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476
C 596	DASH CENTER MODULE - CLOSE DOOR	MOLEX	4	561477	561476
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601	L.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 602	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 603	R.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 604	LH PARCEL RACK DVD VIDEO STABILIZER	SWITCHCRAFT	1	563074	
C 605	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 606	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
C 609	LAVATORY - NIGHT LIGHT				
C 610	RR JCT BOX	AMP MNL	6	561552	561515
C 611	HAT RACK READING LTS RICON	MOLEX	6	562558	562557
C 612	HAT -RACK FLUOR. INSTATION LTS RICON	MOLEX	4	562507	562503
C 613	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 614	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 615	LH PARCEL RACK DVD SING ALONG ADAPT.	MOLEX	2	562550	562549
C 616					
C X	CLUSTER	JAE	22		562766
C Y	CLUSTER	JAE	30		562767
L X	CLUSTER	JAE	22		562764
L					
R					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
AA1	BEHIND DASH - SONALERT	BOSCH	5		561183
AA2	BEHIND DASH - SONALERT	BOSCH	5		561183
C X1	FR SERVICE COMPT- ECU ABS	AMP	15		563200
C X2	FR SERVICE COMPT- ECU ABS	AMP	18		563201
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
C I2	RR JCT BOX-WORLD TRANSM. & EATON	AMP CPC	9	561636	561637
C WX1	ENGINE CPT-WEBASTO PRE-HEAT WATER	AMP SEALED	7		563135
C WX3	ENGINE CPT-WEBASTO PRE-HEAT WATER	AMP SEALED	7	563136	
C Y	CLUSTER	JAE	30	---	562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 7					
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10	LUGGAGE COMPT. WATER BOOSTER PUMP	PED	2	562348	562471
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22	RR JCT BOX - EATON TRANSM.	AMP MNL	6	561552	561515
C 23	DDEC ENGINE-ECM J1939	PED MP	6	-------	561962
C 24	DDEC ENGINE	PED WP	1	561605	561577
C 25	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690
C 28	EATON TRANSMISSION	DEUTCH	3	562877	562884
C 29	EATON TRANSMISSION	PED MP	6	562878	------
C 30	RR JCT BOX - ECU EATON TRANSM.	PED MP	32	------	562866
C 31	RR JCT BOX - ECU EATON TRANSM.	PED MP	24	------	562865
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33	RR JCT BOX - EATON TRANSM.	DEUTCH	9	562531	------
C 34	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	3	------	562871
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	24	------	562874
C 37	RR SECTION-LH HAT RACK	MOLEX	6	562558	562557
C 38	RR SECTION-RH HAT RACK	MOLEX	6	562558	562557
C 39	LH CONSOLE - EATON TRANSM. DISPLAY	AMP MNL	4	561551	561668
C 40	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 41	LAVATORY ROOF LIGHT	LEECRAFT	2	-----	562803
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662
C 44	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERVICE CMPT.PRESS SW PARK BREAK	DEUTCH	4	562479	562477
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577
C 51					
C 52	RR JCT BOX	AMP CPC	22	561709	561710
C 53	SPARE TIRE COMPT ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 54	SPARE TIRE COMPT ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
*C 56	ENGINE COMPT- LAVATORY PUSH BUTTON	PED WP	2	561566	561690
C 56	HAT RACK - MOTOR FAN	MOLEX	6	562558	562557
C 57	HAT RACK - MOTOR FAN	MOLEX	6	562558	562557
C 58	RR JCT BOX AC PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX AC PANEL	AMP CPC	14	561584	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	16	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	SERV CPT. RXT. ENT. DOOR SW	DEUTSCH	4	562479	562477
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 78					
C 79					
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100	------	562248	------
C 86					
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88					
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS		35	------	641094
C 94	RH CONSOLE ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 95	CONDENSOR CPT - LIQ. SOL. VALVE	PED WP	2	561566	561690
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100	LH CONSOLE – 120 VOLTS SWITCH	EATON	8	------	562763
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112					
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115	ENGINE COMPT-AIR DRYER	PED WP	2	561566	561690
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117	FR SRV. COMPT. KNEELING SYS.	PED WP	2	561761	
C 118	ENGINE COMPT-LAVATORY FAN	PED WP	2	561566	561690
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-UNLOAD TAG SYSTEM	PED WP	2	561566	561690
C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129					
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX - A/C PANEL DIODE CONN.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 143					
C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150					
C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	641132	------
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172					
C 173					
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					
C 189	ENGINE CPT RR DOOR B/U LT	TRUCK-LITE	2	------	562755
C 190	ENGINE CPT RR DOOR TAIL/ STOP LT	SUPER SEAL	3		562601
C 191	ENGINE CPT RR DOOR RH TAIL/STOP LT	SUPER SEAL	3		562601
C 192	ENGINE CPT RR DOOR DIR. LT	SUPER SEAL	3		562601
C 193					
C 194					
C 195					
C 198	ENGINE CPT RR DOOR LICENCE LT	PED WP	2	562348	562471
C 199	ENGINE CPT RR DOOR LICENCE LT	PED WP	2	562348	562471
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 202	RH HAT RACK-INDIRECT LIGHTING	MOLEX	2	---------	562758
C 203	RH HAT RACK-INDIRECT LIGHTING	MOLEX	6	---------	562759
C 204	RH HAT RACK-GENERAL LT	AMP MNL	2	560900	560898
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 206	RH HAT RACK-READING LT	AMP FF	4	----------	562756
C 207	LH HAT RACK-READING LT	AMP FF	4	----------	562756
C 208	LH HAT RACK-BALLAST	MOLEX	2	----------	562758
C 209	LH HAT RACK HOTESS CHIME	AMP MNL	3	561667	561550
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214	ENGINE CPT J1922				
C 215	TAG AXLE - A.T.C. SYSTEM				
C 216	TAG AXLE - A.T.C. SYSTEM				
C 217	RH DASH PANEL-FRONT CAMERA SW	EATON	8	--------	562763
C 218	RH DASH PANEL-FRONT CAMERA SW	AMP MNL	2	560900	560898
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 224	ENGINE CMPT. -VORAD J1939	DEUTSCH	3	562877	562884
C 225	ENGINE CMPT. -VORAD J1939	DEUTSCH	3	562877	562884
C 226	FR LH UPPER WHEEL CPT-VORAD J1939	DEUTSCH	3	562677	562884
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233	FR. SERVICE COMPT.	VDO	8		562043
C 234	FR. SERVICE COMPT.	VDO	8		562044
C 235	FR. SERVICE COMPT.	VDO	8		562041
C 236	LUGGAGE COMPARTEMENT	AMP MNL	4	560851	560852
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	3	561781	562428
C 241	HEADLAMPS HI BEAM	HELLA	2		562623
C 242	HEADLAMPS LO BEAM	HELLA	2		562623
C 243	FR SERVICE CPT. HEADLAMPS	DEUTCH	3	565131	562789
C 244	FR SERVICE CPT-LH FOG LAMP	DEUTCH	2	562902	562901
C 245	FR SERVICE CPT-RH FOG LAMP	DEUTCH	2	562902	562901
C 246	FR SERVICE CPT. MIRROR	CONXALL	5	563091	563090
C 247	HEADLAMPS MARK & DIR LTS	AMP SUPER S	3		562601
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250	LH CONSOL PANEL- LOW BOY	PED	2	561566	561690
C 251	LH DASH PANEL-FAST IDLE SW	EATON	8	------	562763
C 252					
C 253	LH DASH PANEL-ETHER SW	EATON	8	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 255	LH DASH PANEL-JACOB & RETARDER SW	EATON	8	------	562763
C 256					
C 257					
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274	RR. JCT. BOX – SIGNAL ALT. MODULE				
C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 277					
C 278					
C 279 *	FR SERVICE CPT.- STEERING ZF	DEUTCH	2		562486
C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 280	LH CONSOLE-UNLOAD TAG SW.	NGR	10	------	562763
C 281					
C 282					
C 283					
C 284					
C 285					
C 286	RH SW PANEL-A/C & HEAT	EATON	8	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	8	------	562763
C 289					
C 290					
C 291					
C 292					
C 293					
C 294					
C 295					
C 296					
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299	RH DASH PANEL SW-GALLEY	EATON	8	------	562763
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH DASH PANEL -LUG. DOOR LCK SW	EATON	8	------	562763
C 311	RH DASH PANEL -HOS & PAS CHIME SW	EATON	8	------	562763
C 312	RH DASH PANEL -READING LTS SW	EATON	8	------	562763
C 313	RH DASH PANEL -GEN & FLUOR LTS SW	EATON	8	------	562763
C 314	LH DASH PANEL-FR DEST. SIGN SW	EATON	8	------	562763
C 315	LH DASH PANEL-LH STORE SW	EATON	8	------	562763
C 316	LH CONSOLE SPARE SWITCH	EATON	8	------	562763
C 317	LH DASH PANEL-RH STORE SW	EATON	8	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	8	------	562763
C 319					
C 320	RH DASH PANEL-DRIVER'S LTS SW	EATON	8	------	562763

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 321	READING LTS TEST				
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637
C 324					
C 325	LH DASH PANEL-KNEELING SW	EATON	8	------	562763
C 326	ENGINE CMPT.	PED	4	------	561610
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331	GALLEY MICROWAVE SW	EATON	8	------	562763
C 332					
C 333	GALLEY RH CONTAINER SW	EATON	8	------	562763
C 334	GALLEY LH CONTAINER SW	EATON	8	------	562763
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346					
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360					
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376					
C 377	LH DASH PANEL-STOP ENG.OVERIDE SW	EATON	8	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381					
C 382					
C 383					
C 384					
C 385					
C 386	LH DASH PANEL-WCL POWER SYSTEM SW	EATON	8	------	562763
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734
C 389	WCL REAR DOOR	MOLEX	4	561477	561476
C 390	LAVATORY WALL-WCL REMOTE CTR	EATON	8	------	562763
C 391	LAVATORY WALL-WCL LAMP	EATON	8	------	562763
C 392	LAVATORY WALL-WCL SW. LT.	EATON	2	------	561835
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	------	------
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. – PRE-EXITATION ALT.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402					
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247
C 404	GALLEY LAMP	AMP MNL	2	561248	561247
C 405	LAST LUGGAGE COMP.- INVERTER SIGNAL	AMP MNL	2	561248	561247
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH DASH PANEL-MASTER SWITCH SW	EATON	8	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9	561670	561669
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562398	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	LH DASH PANEL-HTR WINDSH.SW	EATON	8	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420					
C 421					
C 422					
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427	PRO-HEAT	PED-WP	2	561566	561680
C 428	PRO-HEAT	PED WP	6	561606	561607
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	PED-WP	2	561566	561680
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 438	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 439	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 440	EVAP CMPT- A/C CONTROL	DEUTSCH	4	562479	562477
C 441	FR JCT BOX- DIODES	AMP MNL	15	561987	561986
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680
C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 455	WIRELESS MICRO-LH HAT-RACK	MOLEX	6	------	562464
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDR CONNECTOR	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468			8		
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 479	HVAC MODULE				
C 480	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	4	561889	561890
C 481	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	------	562237
C 484	UNDER DASH LH.-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH.-DASH & DEFR. DAM.MOT.	AMP MNL	3	561667	561550
C 486					
C 487	S.S.PANEL – AUDIO IN AMPLI	MOLEX	4	------	563071
C 488	S.S.PANEL – AMPLI SIGNAL	MOLEX	8	------	562465
C 489	S.S.PANEL – SPEAKER OUTLET	MOLEX	6	------	562464
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER	PED MP	7	562433	------
C 502	LH DASH PANEL-PRE HEATER SW.	EATON	8	------	562763
C 503	LH CONSOLE-PRE HEATER SW.	EATON	2	------	561837
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	9	------	562681
C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	562580
C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 522					
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 543					
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 546	WIRELESS MIC. CHARGING SYSTEM	MOLEX	2	--------	563025
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	8	------	562763
C 549	LH DASH PANEL-FAN CLUTCH OVERR. SW	EATON	8	------	562763
C 550	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 551	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 552	LAST LUGG. CPT. -WCL RICON	AMP CPC	9	561636	561637
C 553	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 554	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 555	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 556	UNDER DASH R.H. - RADIO ACC.	MOLEX	2	562550	562549
C 557	UNDER DASH R.H. - RADIO ACC.	MOLEX	9	562556	562555
C 558	UNDER DASH R.H. - RADIO ACC.	MOLEX	4	562507	562503
C 559	SOUND SYS. JCT. PANEL – FILTER AMPLI	PED WP	2	561566	561690
C 560	SOUND SYS. JCT. PANEL – POWER AMPLI	MOLEX	4	562507	562503
C 561	L.H. HAT RACK - WIRELESS MICRO	MOLEX	8		562465
C 562	L.H. HAT RACK - VCP	MOLEX	12	562556	563070
C 563	L.H MODESTY PANEL - DRIVERS SPK.	MOLEX	4	562507	562503
C 564	L.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 565	R.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 566	L.H. CONSOLE - BOOM MICRO	MOLEX	4	562507	562503
C 567	L.H. CONSOLE - DRIVERS MICRO	MOLEX	4	562507	562503
C 568	SOUND SYS. JCT. PANEL - PASS. SPK	CINCH	4	562553	562552
C 569	SOUND SYS. JCT. PANEL - POWER AMPLI.	MOLEX	9	562556	562555
C 570	UNDER DASH PANEL TTLT	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT	MOLEX	8		562465
C 574	HAT -RACK FLUOR. INDIRECT LIGHTING	MOLEX	6	----------	562759
C 575	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 576	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 577	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 578	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 579	L.H HAT RACK – VCP POWER	MOLEX	4		563071
C 580	RH DASH PANEL-HAT RACK FAN SW	EATON	8	--------	562763
C 581	LH DASH PANEL – ELECTRICAL HORN	PED MP	2		562777
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587	LH PARCEL RACK DVD UNIT	MOLEX	4	563040	563071

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 588	FRONT SERVICE CPT. CENTER SOUND SYS.	AMP. CPC	37	561645	561646
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593	BATTERY CMPT. - CHARGER	PED WP	3	561781	561782
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476
C 596	DASH CENTER MODULE - CLOSE DOOR	MOLEX	4	561477	561476
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 599	DASH CENTER MODULE – MAGN. SENSOR	AMP MNL	2	561248	561247
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601	L.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 602	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 603	R.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 604	LH PARCEL RACK DVD VIDEO STABILIZER	SWITCHCRAFT	1	563074	
C 605	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 606	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
C 609	LAVATORY - NIGHT LIGHT				
C 610	RR JCT BOX	AMP MNL	6	561552	561515
C 611	HAT RACK READING LTS RICON	MOLEX	6	562558	562557
C 612	HAT -RACK FLUOR. INSTATION LTS RICON	MOLEX	4	562507	562503
C 613	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 614	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 615	LH PARCEL RACK DVD SING ALONG ADAPT.	MOLEX	2	562550	562549
C 616					
C X	CLUSTER	JAE	22		562766
C Y	CLUSTER	JAE	30		562767
L X	CLUSTER	JAE	22		562764
L					
R					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
AA1	BEHIND DASH - SONALERT	BOSCH	5		561183
AA2	BEHIND DASH - SONALERT	BOSCH	5		561183
C X1	FR SERVICE COMPT- ECU ABS	AMP	15		563200
C X2	FR SERVICE COMPT- ECU ABS	AMP	18		563201
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
C I2	RR JCT BOX-WORLD TRANSM. & EATON	AMP CPC	9	561636	561637
C WX1	ENGINE CPT-WEBASTO PRE-HEAT WATER	AMP SEALED	7		563135
C WX3	ENGINE CPT-WEBASTO PRE-HEAT WATER	AMP SEALED	7	563136	
C Y	CLUSTER	JAE	30	---	562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 7					
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10	LUGGAGE COMPT. WATER BOOSTER PUMP	PED	2	562348	562471
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22	RR JCT BOX - EATON TRANSM.	AMP MNL	6	561552	561515
C 23	DDEC ENGINE-ECM J1939	PED MP	6	-------	561962
C 24	DDEC ENGINE	PED WP	1	561605	561577
C 25	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690
C 28	EATON TRANSMISSION	DEUTCH	3	562877	562884
C 29	EATON TRANSMISSION	PED MP	6	562878	------
C 30	RR JCT BOX - ECU EATON TRANSM.	PED MP	32	------	562866
C 31	RR JCT BOX - ECU EATON TRANSM.	PED MP	24	------	562865
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33	RR JCT BOX - EATON TRANSM.	DEUTCH	9	562531	------
C 34	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	3	------	562871
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	24	------	562874
C 37	RR SECTION-LH HAT RACK	MOLEX	6	562558	562557
C 38	RR SECTION-RH HAT RACK	MOLEX	6	562558	562557
C 39	LH CONSOLE - EATON TRANSM. DISPLAY	AMP MNL	4	561551	561668
C 40	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 41	LAVATORY ROOF LIGHT	LEECRAFT	2	-----	562803
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662
C 44	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERVICE CMPT.PRESS SW PARK BREAK	DEUTCH	4	562479	562477
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577
C 51					
C 52	RR JCT BOX	AMP CPC	22	561709	561710
C 53	SPARE TIRE COMPT ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 54	SPARE TIRE COMPT ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
*C 56	ENGINE COMPT- LAVATORY PUSH BUTTON	PED WP	2	561566	561690
C 56	HAT RACK - MOTOR FAN	MOLEX	6	562558	562557
C 57	HAT RACK - MOTOR FAN	MOLEX	6	562558	562557
C 58	RR JCT BOX AC PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX AC PANEL	AMP CPC	14	561584	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	16	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	SERV CPT. RXT. ENT. DOOR SW	DEUTSCH	4	562479	562477
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 78					
C 79					
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100	------	562248	------
C 86					
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88					
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS		35	------	641094
C 94	RH CONSOLE ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 95	CONDENSOR CPT - LIQ. SOL. VALVE	PED WP	2	561566	561690
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100	LH CONSOLE – 120 VOLTS SWITCH	EATON	8	------	562763
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	LAVATORY TRAP-FLUSH PUMP SW.	DEUTSCH	4	562479	562477
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	LAVATORY BACK WALL-FLUSH PUMP SW.	DEUTSCH	4	562479	562477
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115	ENGINE COMPT-AIR DRYER	PED WP	2	561566	561690
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117	FR SRV. COMPT. KNEELING SYS.	PED WP	2	561761	
C 118	ENGINE COMPT-LAVATORY FAN	PED WP	2	561566	561690
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-UNLOAD TAG SYSTEM	PED WP	2	561566	561690
C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129					
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX - A/C PANEL DIODE CONN.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 143					
C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150					
C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	641132	------
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172					
C 173					
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					
C 189	ENGINE CPT RR DOOR B/U LT	TRUCK-LITE	2	------	562755
C 190	ENGINE CPT RR DOOR TAIL/ STOP LT	SUPER SEAL	3		562601
C 191	ENGINE CPT RR DOOR RH TAIL/STOP LT	SUPER SEAL	3		562601
C 192	ENGINE CPT RR DOOR DIR. LT	SUPER SEAL	3		562601
C 193					
C 194					
C 195					
C 198	ENGINE CPT RR DOOR LICENCE LT	PED WP	2	562348	562471
C 199	ENGINE CPT RR DOOR LICENCE LT	PED WP	2	562348	562471
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 202	RH HAT RACK-INDIRECT LIGHTING	MOLEX	2	---------	562758
C 203	RH HAT RACK-INDIRECT LIGHTING	MOLEX	6	---------	562759
C 204	RH HAT RACK-GENERAL LT	AMP MNL	2	560900	560898
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 206	RH HAT RACK-READING LT	AMP FF	4	----------	562756
C 207	LH HAT RACK-READING LT	AMP FF	4	----------	562756
C 208	LH HAT RACK-BALLAST	MOLEX	2	----------	562758
C 209	LH HAT RACK HOTESS CHIME	AMP MNL	3	561667	561550
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214	ENGINE CPT J1922				
C 215	TAG AXLE - A.T.C. SYSTEM				
C 216	TAG AXLE - A.T.C. SYSTEM				
C 217	RH DASH PANEL-FRONT CAMERA SW	EATON	8	--------	562763
C 218	RH DASH PANEL-FRONT CAMERA SW	AMP MNL	2	560900	560898
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 224	ENGINE CMPT. -VORAD J1939	DEUTSCH	3	562877	562884
C 225	ENGINE CMPT. -VORAD J1939	DEUTSCH	3	562877	562884
C 226	FR LH UPPER WHEEL CPT-VORAD J1939	DEUTSCH	3	562677	562884
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233	FR. SERVICE COMPT.	VDO	8		562043
C 234	FR. SERVICE COMPT.	VDO	8		562044
C 235	FR. SERVICE COMPT.	VDO	8		562041
C 236	LUGGAGE COMPARTEMENT	AMP MNL	4	560851	560852
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	3	561781	562428
C 241	HEADLAMPS HI BEAM	HELLA	2		562623
C 242	HEADLAMPS LO BEAM	HELLA	2		562623
C 243	FR SERVICE CPT. HEADLAMPS	DEUTCH	3	565131	562789
C 244	FR SERVICE CPT-LH FOG LAMP	DEUTCH	2	562902	562901
C 245	FR SERVICE CPT-RH FOG LAMP	DEUTCH	2	562902	562901
C 246	FR SERVICE CPT. MIRROR	CONXALL	5	563091	563090
C 247	HEADLAMPS MARK & DIR LTS	AMP SUPER S	3		562601
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250	LH CONSOL PANEL- LOW BOY	PED	2	561566	561690
C 251	LH DASH PANEL-FAST IDLE SW	EATON	8	------	562763
C 252					
C 253	LH DASH PANEL-ETHER SW	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH DASH PANEL-JACOB & RETARDER SW	EATON	8	------	562763
C 256					
C 257					
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274	RR. JCT. BOX – SIGNAL ALT. MODULE				
C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 277					
C 278					
C 279 *	FR SERVICE CPT.- STEERING ZF	DEUTCH	2		562486
C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 280	LH CONSOLE-UNLOAD TAG SW.	NGR	10	------	562763
C 281					
C 282					
C 283					
C 284					
C 285					
C 286	RH SW PANEL-A/C & HEAT	EATON	8	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	8	------	562763
C 289					
C 290					
C 291					
C 292					
C 293					
C 294					
C 295					
C 296					
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299	RH DASH PANEL SW-GALLEY	EATON	8	------	562763
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH DASH PANEL -LUG. DOOR LCK SW	EATON	8	------	562763
C 311	RH DASH PANEL -HOS & PAS CHIME SW	EATON	8	------	562763
C 312	RH DASH PANEL -READING LTS SW	EATON	8	------	562763
C 313	RH DASH PANEL -GEN & FLUOR LTS SW	EATON	8	------	562763
C 314	LH DASH PANEL-FR DEST. SIGN SW	EATON	8	------	562763
C 315	LH DASH PANEL-LH STORE SW	EATON	8	------	562763
C 316	LH CONSOLE SPARE SWITCH	EATON	8	------	562763
C 317	LH DASH PANEL-RH STORE SW	EATON	8	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	8	------	562763
C 319					
C 320	RH DASH PANEL-DRIVER'S LTS SW	EATON	8	------	562763
C 321	READING LTS TEST				
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637
C 324					
C 325	LH DASH PANEL-KNEELING SW	EATON	8	------	562763
C 326	ENGINE CMPT.	PED	4	------	561610
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331	GALLEY MICROWAVE SW	EATON	8	------	562763
C 332					
C 333	GALLEY RH CONTAINER SW	EATON	8	------	562763
C 334	GALLEY LH CONTAINER SW	EATON	8	------	562763
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346					
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360					
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376					
C 377	LH DASH PANEL-STOP ENG.OVERIDE SW	EATON	8	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381					
C 382					
C 383					
C 384					
C 385					
C 386	LH DASH PANEL-WCL POWER SYSTEM SW	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734
C 389	WCL REAR DOOR	MOLEX	4	561477	561476
C 390	LAVATORY WALL-WCL REMOTE CTR	EATON	8	------	562763
C 391	LAVATORY WALL-WCL LAMP	EATON	8	------	562763
C 392	LAVATORY WALL-WCL SW. LT.	EATON	2	------	561835
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	------	------
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. – PRE-EXITATION ALT.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402					
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247
C 404	GALLEY LAMP	AMP MNL	2	561248	561247
C 405	LAST LUGGAGE COMP.- INVERTER SIGNAL	AMP MNL	2	561248	561247
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH DASH PANEL-MASTER SWITCH SW	EATON	8	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9	561670	561669
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562398	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	LH DASH PANEL-HTR WINDSH.SW	EATON	8	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420					
C 421					
C 422					
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427	PRO-HEAT	PED-WP	2	561566	561680
C 428	PRO-HEAT	PED WP	6	561606	561607
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	PED-WP	2	561566	561680
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 438	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 439	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 440	EVAP CMPT- A/C CONTROL	DEUTSCH	4	562479	562477
C 441	FR JCT BOX- DIODES	AMP MNL	15	561987	561986
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 455	WIRELESS MICRO-LH HAT-RACK	MOLEX	6	------	562464
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDR CONNECTOR	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468			8		
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 479	HVAC MODULE				
C 480	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	4	561889	561890
C 481	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	------	562237
C 484	UNDER DASH LH.-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH.-DASH & DEFR. DAM.MOT.	AMP MNL	3	561667	561550
C 486					
C 487	S.S.PANEL – AUDIO IN AMPLI	MOLEX	4	------	563071
C 488	S.S.PANEL – AMPLI SIGNAL	MOLEX	8	------	562465
C 489	S.S.PANEL – SPEAKER OUTLET	MOLEX	6	------	562464
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER	PED MP	7	562433	------
C 502	LH DASH PANEL-PRE HEATER SW.	EATON	8	------	562763
C 503	LH CONSOLE-PRE HEATER SW.	EATON	2	------	561837
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	9	------	562681
C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	562580

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 522					
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 543					
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 546	WIRELESS MIC. CHARGING SYSTEM	MOLEX	2	--------	563025
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	8	------	562763
C 549	LH DASH PANEL-FAN CLUTCH OVERR. SW	EATON	8	------	562763
C 550	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 551	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 552	LAST LUGG. CPT. -WCL RICON	AMP CPC	9	561636	561637
C 553	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 554	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 555	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 556	UNDER DASH R.H. - RADIO ACC.	MOLEX	2	562550	562549
C 557	UNDER DASH R.H. - RADIO ACC.	MOLEX	9	562556	562555
C 558	UNDER DASH R.H. - RADIO ACC.	MOLEX	4	562507	562503
C 559	SOUND SYS. JCT. PANEL – FILTER AMPLI	PED WP	2	561566	561690
C 560	SOUND SYS. JCT. PANEL – POWER AMPLI	MOLEX	4	562507	562503
C 561	L.H. HAT RACK - WIRELESS MICRO	MOLEX	8		562465
C 562	L.H. HAT RACK - VCP	MOLEX	12	562556	563070
C 563	L.H MODESTY PANEL - DRIVERS SPK.	MOLEX	4	562507	562503
C 564	L.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 565	R.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 566	L.H. CONSOLE - BOOM MICRO	MOLEX	4	562507	562503
C 567	L.H. CONSOLE - DRIVERS MICRO	MOLEX	4	562507	562503
C 568	SOUND SYS. JCT. PANEL - PASS. SPK	CINCH	4	562553	562552
C 569	SOUND SYS. JCT. PANEL - POWER AMPLI.	MOLEX	9	562556	562555
C 570	UNDER DASH PANEL TTLT	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT	MOLEX	8		562465
C 574	HAT -RACK FLUOR. INDIRECT LIGHTING	MOLEX	6	----------	562759
C 575	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 576	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 577	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 578	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 579	L.H HAT RACK – VCP POWER	MOLEX	4		563071
C 580	RH DASH PANEL-HAT RACK FAN SW	EATON	8	--------	562763
C 581	LH DASH PANEL – ELECTRICAL HORN	PED MP	2		562777
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 587	LH PARCEL RACK DVD UNIT	MOLEX	4	563040	563071
C 588	FRONT SERVICE CPT. CENTER SOUND SYS.	AMP. CPC	37	561645	561646
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593	BATTERY CMPT. - CHARGER	PED WP	3	561781	561782
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476
C 596	DASH CENTER MODULE - CLOSE DOOR	MOLEX	4	561477	561476
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 599	DASH CENTER MODULE – MAGN. SENSOR	AMP MNL	2	561248	561247
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601	L.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 602	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 603	R.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 604	LH PARCEL RACK DVD VIDEO STABILIZER	SWITCHCRAFT	1	563074	
C 605	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 606	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
C 609	LAVATORY - NIGHT LIGHT				
C 610	RR JCT BOX	AMP MNL	6	561552	561515
C 611	HAT RACK READING LTS RICON	MOLEX	6	562558	562557
C 612	HAT -RACK FLUOR. INSTATION LTS RICON	MOLEX	4	562507	562503
C 613	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 614	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 615	LH PARCEL RACK DVD SING ALONG ADAPT.	MOLEX	2	562550	562549
C 616					
C X	CLUSTER	JAE	22		562766
C Y	CLUSTER	JAE	30		562767
L X	CLUSTER	JAE	22		562764
L					
R					

DIODES NUMBER CODE

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 1	13.1	3A	561740	RJB A/C JCT PANEL	LIQ. SOL. VALVE SUPPRESSOR
D 2	4.1	3A	561740	BATT. CPT.	EATON TRANSMISSION
D 3	1.1	3A	561740	BATT. CPT.	24V DISC. CUT OUT RLY
D 4	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 5	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 6	5	3A	561740	FR JCT BOX	WCL NEUT. SIGN INTERFACE TO PARK BRK TTLT
D 7					
D 8					
D 9	12	3A	561740	FR L.H. HAT-RACK	HOSTESS & PASSENGER CHIME
D 10	9.1	3A	561740	FR JCT BOX	DAY-TIME RUN LIGHT –ENGINE NOT RUN
D 11	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D 12	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D 13	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D 14	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D 15	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-UP
D 16	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-DOWN
D 17	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 18	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 19	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-PARK BRK CALL SW.
D 20	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-HEAD LT SW
D 21	18	3A	561740	FR JCT BOX	KNEELING SYSTEM FEED BACK
D 22	4.2	3A	561740	FR JCT BOX	ALTERNATOR POWER IGNITION
D 23					
D 24					
D 25	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 26	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 27	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 28	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 29	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 30	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 31					
D 32					
D 33					
D 34					
D 35	25	3A	561740	RR JCT BOX	WCL DOOR AJAR ALARM T.T.LT.
D 36	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 37	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 38	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 39					
D 40					
D 41					
D 42					
D 43	10	3A	561740	LOWER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 44	10	3A	561740	LOWER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 45	10	3A	561740	UPPER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 46					
D 47					
D 48					
D 49					
D 50					
D 51					
D 52					
D 53					
D 54					
D 55					
D 56					
D 57					

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 58	17	3A	561740	FR JCT BOX	RR HIGH BUOY - KNEELING
D 59	13.2	3A	561740	RJB A/C JCT PANEL	A/C & HEAT BYPASS SWITCH
D 60	13.2	3A	561740	RJB A/C JCT PANEL	A/C COMPR.CLUTCH SUPPRESSOR
D 61	9.2	3A	561740	FR JCT BOX	KNEELING SIDE FR RH DIRECTIONNAL LT
D 62	13.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP FEED
D 63	17	3A	561740	FR JCT BOX	LAVATORY SONALERT
D 64	17	3A	561740	FR JCT BOX	WCL DOOR ALARM
D 65	13.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP - PRE-HEAT FEED
D 66	13.2	3A	561740	RJB A/C JCT PANEL	WATER VALVE - HEAT SW. FEED
D 67	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - RH
D 68	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - LH
D 69					
D 70	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 71	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 72	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 73	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 74					
D 75	4	3A	381351	BAT CPT	STARTER-SUPPRESSOR COIL RLY
D 76					
D 77	18	3A	561740	FR JCT BOX	PARKING BRAKE - KNEELING
D 78	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 79	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 80					
D 81	18	3A	561740	FR JCT BOX	PIEZO-KNEELING
D 82	18	3A	561740	FR JCT BOX	PIEZO-KNEELING
D 83	8	3A	561740	RR JCT BOX	FAN CLUTCH W/RETARDER
D 84	13.2	3A	561740	RJB A/C JCT PANEL	WATER VALVE
D 85	13.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP
D 86	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 87	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 88	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 89	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 90	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 91	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D F1	8.1	3A	561740	RR. JCT. BOX	FAN CLUTCH - SUPPRESSOR
D F2	8.1	3A	561740	RR. JCT. BOX	FAN CLUTCH - SUPPRESSOR

DIODES NUMBER CODE

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 1	13.1	3A	561740	RJB A/C JCT PANEL	LIQ. SOL. VALVE SUPPRESSOR
D 2	4.1	3A	561740	BATT. CPT.	EATON TRANSMISSION
D 3	1.1	3A	561740	BATT. CPT.	24V DISC. CUT OUT RLY
D 4	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 5	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 6	5	3A	561740	FR JCT BOX	WCL NEUT. SIGN INTERFACE TO PARK BRK TTLT
D 7					
D 8	9.1	3A	561740	FR JCT BOX	HI/LO BEAMS
D 9	12	3A	561740	FR L.H. HAT-RACK	HOSTESS & PASSENGER CHIME
D 10	9.1	3A	561740	FR JCT BOX	DAY-TIME RUN LIGHT –ENGINE NOT RUN
D 11	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D 12	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D 13	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D 14	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D 15	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-UP
D 16	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-DOWN
D 17	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 18	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 19	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-PARK BRK CALL SW.
D 20	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-HEAD LT SW
D 21	18	3A	561740	FR JCT BOX	KNEELING SYSTEM FEED BACK
D 22	4.2	3A	561740	FR JCT BOX	ALTERNATOR POWER IGNITION
D 23					
D 24					
D 25	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 26	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 27	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 28	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 29	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 30	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 31					
D 32					
D 33					
D 34					
D 35	25	3A	561740	RR JCT BOX	WCL DOOR AJAR ALARM T.T.LT.
D 36	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 37	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 38	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 39					
D 40					
D 41					
D 42					
D 43	10	3A	561740	LOWER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 44	10	3A	561740	LOWER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 45	10	3A	561740	UPPER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 46	9.3	3A	561740	RR JCT BOX	PARK BRAKE STOP LIGHT
D 47	9.3	3A	561740	RR JCT BOX	CYCLOP LTS
D 48					
D 49					
D 50					
D 51					
D 52					
D 53					
D 54					
D 55					
D 56					
D 57					

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 58	17	3A	561740	FR JCT BOX	RR HIGH BUOY - KNEELING
D 59	13.2	3A	561740	RJB A/C JCT PANEL	A/C & HEAT BYPASS SWITCH
D 60	13.2	3A	561740	RJB A/C JCT PANEL	A/C COMPR.CLUTCH SUPPRESSOR
D 61	9.2	3A	561740	FR JCT BOX	KNEELING SIDE FR RH DIRECTIONNAL LT
D 62	13.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP FEED
D 63	17	3A	561740	FR JCT BOX	LAVATORY SONALERT
D 64	17	3A	561740	FR JCT BOX	WCL DOOR ALARM
D 65	13.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP - PRE-HEAT FEED
D 66	13.2	3A	561740	RJB A/C JCT PANEL	WATER VALVE - HEAT SW. FEED
D 67	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - RH
D 68	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - LH
D 69					
D 70	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 71	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 72	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 73	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 74					
D 75	4	3A	381351	BAT CPT	STARTER-SUPPRESSOR COIL RLY
D 76					
D 77	18	3A	561740	FR JCT BOX	PARKING BRAKE - KNEELING
D 78	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 79	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 80					
D 81	18	3A	561740	FR JCT BOX	PIEZO-KNEELING
D 82					
D 83	8	3A	561740	RR JCT BOX	FAN CLUTCH W/RETARDER
D 84	13.2	3A	561740	RJB A/C JCT PANEL	WATER VALVE
D 85	13.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP
D 86	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 87	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 88	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 89	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 90	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 91	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D F1	8.1	3A	561740	RR. JCT. BOX	FAN CLUTCH - SUPPRESSOR
D F2	8.1	3A	561740	RR. JCT. BOX	FAN CLUTCH - SUPPRESSOR

DIODES NUMBER CODE

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 1	13.1	3A	561740	RJB A/C JCT PANEL	LIQ. SOL. VALVE SUPPRESSOR
D 2	4.1	3A	561740	BATT. CPT.	EATON TRANSMISSION
D 3	1.1	3A	561740	BATT. CPT.	24V DISC. CUT OUT RLY
D 4	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 5	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 6	5	3A	561740	FR JCT BOX	WCL NEUT. SIGN INTERFACE TO PARK BRK TTLT
D 7					
D 8	9.1	3A	561740	FR JCT BOX	HI/LO BEAMS
D 9	12	3A	561740	FR L.H. HAT-RACK	HOSTESS & PASSENGER CHIME
D 10	9.1	3A	561740	FR JCT BOX	DAY-TIME RUN LIGHT –ENGINE NOT RUN
D 11	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D 12	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D 13	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D 14	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D 15	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-UP
D 16	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-DOWN
D 17	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 18	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 19	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-PARK BRK CALL SW.
D 20	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-HEAD LT SW
D 21	18	3A	561740	FR JCT BOX	KNEELING SYSTEM FEED BACK
D 22	4.2	3A	561740	FR JCT BOX	ALTERNATOR POWER IGNITION
D 23					
D 24					
D 25	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 26	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 27	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 28	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 29	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 30	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 31					
D 32					
D 33					
D 34					
D 35	25	3A	561740	RR JCT BOX	WCL DOOR AJAR ALARM T.T.LT.
D 36	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 37	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 38	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 39					
D 40					
D 41					
D 42					
D 43	10	3A	561740	LOWER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 44	10	3A	561740	LOWER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 45	10	3A	561740	UPPER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 46	9.3	3A	561740	RR JCT BOX	PARK BRAKE STOP LIGHT
D 47	9.3	3A	561740	RR JCT BOX	CYCLOP LTS
D 48					
D 49					
D 50					
D 51					
D 52					
D 53					
D 54					
D 55	25	3A	561740	RR JCT BOX	SHIFTER INHIBIT R109
D 56					
D 57					

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 58	17	3A	561740	FR JCT BOX	RR HIGH BUOY - KNEELING
D 59	13.2	3A	561740	RJB A/C JCT PANEL	A/C & HEAT BYPASS SWITCH
D 60	13.2	3A	561740	RJB A/C JCT PANEL	A/C COMPR.CLUTCH SUPPRESSOR
D 61	9.2	3A	561740	FR JCT BOX	KNEELING SIDE FR RH DIRECTIONNAL LT
D 62	13.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP FEED
D 63	17	3A	561740	FR JCT BOX	LAVATORY SONALERT
D 64	17	3A	561740	FR JCT BOX	WCL DOOR ALARM
D 65	13.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP - PRE-HEAT FEED
D 66	13.2	3A	561740	RJB A/C JCT PANEL	WATER VALVE - HEAT SW. FEED
D 67	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - RH
D 68	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - LH
D 69					
D 70	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 71	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 72	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 73	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 74					
D 75	4	3A	381351	BAT CPT	STARTER-SUPPRESSOR COIL RLY
D 76					
D 77	18	3A	561740	FR JCT BOX	PARKING BRAKE - KNEELING
D 78	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 79	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 80					
D 81	18	3A	561740	FR JCT BOX	PIEZO-KNEELING
D 82					
D 83	8	3A	561740	RR JCT BOX	FAN CLUTCH W/RETARDER
D 84	13.2	3A	561740	RJB A/C JCT PANEL	WATER VALVE
D 85	13.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP
D 86	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 87	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 88	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 89	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 90	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 91	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D F1	8.1	3A	561740	RR. JCT. BOX	FAN CLUTCH - SUPPRESSOR
D F2	8.1	3A	561740	RR. JCT. BOX	FAN CLUTCH - SUPPRESSOR

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R F1	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 1
R F2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2
R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY
R LA	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LATCH)
R LO	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (PRESS. SW.)
R LT	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LIGHT)
R LV	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (VALVE)
R 1	1.1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R 2	2.1	24V	561991	BATT. CPT.	ENGINE RUN (12) FR & RR
R 3					
R 4	4.1	24V	561005	BATT. CPT.	STARTING MOTOR
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.
R 6	9.3	24V	561707	RR JCT BOX	STOP LTS-PARKING BRAKE
R 7	5.1	24V	561707	FR JCT BOX	FAST IDLE
R 8					
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS
R 10	4.1	12V	562092	BATT. CPT.	NEUTRAL SIGNAL EATON TRANSM.
R 11					
R 12	7.2	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS
R 14	9.1	24V	561707	FR JCT BOX	BLINKER
R 15	9.1	24V	561707	FR JCT BOX	FR MARKER LTS
R 16	9.1	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R 17	9.1	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS
R 18	9.1	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-OUT
R 19	9.1	24V	561707	FR JCT BOX	HEADLAMPS (HI)
R 20	9.1	24V	561707	FR JCT BOX	HEADLAMPS (LO)
R 21	9.2	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT
R 22	4.1	24V	561707	BATT. CPT	NEUTRAL SIGNAL EATON TRANSM.
R 23	9.2	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT
R 24	9.2	24V	561707	FR JCT BOX	R.H. CORNERING LT
R 25	9.2	24V	561707	FR JCT BOX	L.H. CORNERING LT
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS
R 27	11.2	24V	561707	RR JCT BOX	AISLE & EMERG.EXIT - LTS
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R 29	11.3	24V	561707	RR JCT BOX	READING LTS R.H.
R 30	11.3	24V	561707	RR JCT BOX	READING LTS L.H.
R 31	11.3	24V	561707	RR JCT BOX	GENERAL LTS
R 32	11.4	24V	561707	RR JCT BOX	24V FLUORESCENT
R 34	13.1	24V	561707	RJB A/C JCT PANEL	A/C LOGIC PANEL
R 35	13.2	24V	561707	RJB A/C JCT PANEL	WATER PUMP
R 36	13.2	24V	561707	RJB A/C JCT PANEL	A/C COMPRESSOR CLUTCH
R 37	9.2	24V	561707	FR JCT BOX	KNEELING LT
R 38	13.1	24v	561707	RJB A/C JCT PANEL	A/C LIQ. SOL. VALVE
R 39	13.1	24V	561005	BATT. CPT.	CONDENSER FAN MOTOR
R 40	13.1	24V	561014	BATT. CPT.	CONDENSER SPEED CTR HI
R 41	13.1	24V	561005	BATT. CPT.	CONDENSER SPEED CTR HI
R 42	6.3	12V	562092	BATT. CPT	EATON TRANSM.
R 43	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 44	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 45					
R 46					
R 47	23.1	24V	561707	GALLEY COMPT	GALLEY-LIQUID CONTAINERS
R 48	23.1	24V	561707	GALLEY COMPT	GALLEY-COFFEE MAKER
R 49	21.1	24V	561707	FR JCT BOX	ABS - SERVICE BRK RLY
R 50					
R 51	11.3	24V	562092	FR JCT BOX	DRIVER'S LTS RLY- ENT. DOOR SIGN.
R 52	21.1	24V	561707	FR JCT BOX	ABS - W/TR SIGN. RETARDER
R 53	1.1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR
R 54	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY RR
R 55	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY FR
R 56	21.1				ATC LAMP
R 57	9.1	24V	561707	FR JCT BOX	DAY'S BLINKER
R 58	21.1	24V	561707	FR JCT BOX	ATC TAG AXLE BREAK

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 59	9.3	12V	562092	RR JCT BOX	DOCKING LTS
R 60					
R 61	9.3	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL
R 62					
R 63					
R 64					
R 65					
R 66	20.3	24V	561707	SS JCT PANEL	SOUND SYSTEM VIDEO
R 67	20.1	12V	562092	SS JCT PANEL	SOUND SYSTEM RADIO
R 68	20.1	24V	561991	SS JCT PANEL	SOUND SYSTEM AMPLIFIER
R 69					
R 70					
R 71					
R 72					
R 73					
R 74					
R 75					
R 76					
R 77					
R 78	1.1	12V	562092	FR JCT BOX	MASTER SWITCH
R 79	23	24V	561707	GALLEY CPT.	GALLEY-REFRIGERATOR
R 80	11.1	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R 81					
R 82	19	24V	561707	FR JCT BOX	RETARDER WT
R 83					
R 84	8	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R 85	8	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R 86					
R 87	19	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R 88					
R 89	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 90	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 91	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 92	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 93	26	24V	561707	RR JCT BOX	PRE-HEAT WATER HEATER (WEBASTO)
R 94	25	24V	561707	RR JCT BOX	WCL - SYSTEM
R 95	25	24V	561707	RR JCT BOX	WCL - MAGNETIC SW. SIGN.
R 96	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR ALARM
R 97	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR PARK. BRAKE
R 98	25	24V	561707	RR JCT BOX	WCL -.ALTERNATOR SIGNAL
R 99	8	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 100					
R 101				RR JCT BOX	FUEL FILTER HEATER
R 102	17	24V	561707	RR JCT BOX	LAVATORY FLUORESCENT
R 103	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN
R 104	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - L.H.
R 105	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - R.H.
R 106	17.1	24V	561707	RR JCT BOX	LAVATORY FAN
R 107					
R 2010	26.2	24V	561230	WEBASTO PRE-HEAT	WEBASTO
R A1	4.2	24V	561707	RR JCT BOX	PRE-EXITATION RELAY BOSCH ALT.
R A2	4.2	24V	561707	RR JCT BOX	PRE-EXITATION RELAY BOSCH ALT.
R A3	4.2	24V	561707	RR JCT BOX	ALT. 1 OR ALT.2 RUN RELAY
R A4	4.2	24V	561707	RR JCT BOX	ALT. 1 AND ALT. 2 RUN RELAY
R PS	4.1SP1	24V	561707	FR JCT BOX	IDLE POWER SHUT DOWN
R TS	5.1SP1	24V	561707	FR JCT BOX	IDLE POWER SHUT DOWN
V IMN	6	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
V IMR	6	12V	562092	RR JCT BOX	VIM WORLD TR.-B/U SIGNAL
V IM1	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
V IM2	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
V IM3	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
V IM4	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT4 RETARD. ON SIGNAL

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION	No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R F1	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 1
R F2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2
R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY
R LA	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LATCH)
R LO	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (PRESS. SW.)
R LT	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LIGHT)
R LV	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (VALVE)
R 1	1.1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R 2	2.1	24V	561991	BATT. CPT.	ENGINE RUN (12) FR & RR
R 3					
R 4	4.1	24V	561005	BATT. CPT.	STARTING MOTOR
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.
R 6	9.3	24V	561707	RR JCT BOX	STOP LTS-PARKING BRAKE
R 7	5.1	24V	561707	FR JCT BOX	FAST IDLE
R 8					
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS
R 10	4.1	12V	562092	BATT. CPT.	NEUTRAL SIGNAL EATON TRANSM.
R 11					
R 12	7.2	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS
R 14	9.1	24V	561707	FR JCT BOX	BLINKER
R 15	9.1	24V	561707	FR JCT BOX	FR MARKER LTS
R 16	9.1	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R 17	9.1	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS
R 18	9.1	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-OUT
R 19	9.1	24V	561707	FR JCT BOX	HEADLAMPS (HI)
R 20	9.1	24V	561707	FR JCT BOX	HEADLAMPS (LO)
R 21	9.2	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT
R 22	4.1	24V	561707	BATT. CPT	NEUTRAL SIGNAL EATON TRANSM.
R 23	9.2	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT
R 24	9.2	24V	561707	FR JCT BOX	R.H. CORNERING LT
R 25	9.2	24V	561707	FR JCT BOX	L.H. CORNERING LT
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS
R 27	11.2	24V	561707	RR JCT BOX	AISLE & EMERG.EXIT - LTS
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R 29	11.3	24V	561707	RR JCT BOX	READING LTS R.H.
R 30	11.3	24V	561707	RR JCT BOX	READING LTS L.H.
R 31	11.3	24V	561707	RR JCT BOX	GENERAL LTS
R 32	11.4	24V	561707	RR JCT BOX	24V FLUORESCENT
R 34	13.1	24V	561707	RJB A/C JCT PANEL	A/C LOGIC PANEL
R 35	13.2	24V	561707	RJB A/C JCT PANEL	WATER PUMP
R 36	13.2	24V	561707	RJB A/C JCT PANEL	A/C COMPRESSOR CLUTCH
R 37	9.2	24V	561707	FR JCT BOX	KNEELING LT
R 38	13.1	24v	561707	RJB A/C JCT PANEL	A/C LIQ. SOL. VALVE
R 39	13.4	24V	561005	EVAP. CPT.	CONDENSER FAN MOTOR
R 40	13.4	24V	561014	EVAP. CPT.	CONDENSER SPEED CTR HI
R 41	13.4	24V	561005	EVAP. CPT.	CONDENSER SPEED CTR HI
R 42	6.3	12V	562092	BATT. CPT	EATON TRANSM.
R 43	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 44	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 45					
R 46					
R 47	23.1	24V	561707	GALLEY COMPT	GALLEY-LIQUID CONTAINERS
R 48	23.1	24V	561707	GALLEY COMPT	GALLEY-COFFEE MAKER
R 49	21.1	24V	561707	FR JCT BOX	ABS - SERVICE BRK RLY
R 50	13.4	24V	561005	EVAP CPT	EVAP FAN MOTOR 1ST SPEED
R 51	11.3	24V	562092	FR JCT BOX	DRIVER'S LTS RLY- ENT. DOOR SIGN.
R 52	21.1	24V	561707	FR JCT BOX	ABS - W/TR SIGN. RETARDER
R 53	1.1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR
R 54	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY RR
R 55	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY FR
R 56	21.1				ATC LAMP
R 57	9.1	24V	561707	FR JCT BOX	DAY'S BLINKER
R 58	21.1	24V	561707	FR JCT BOX	ATC TAG AXLE BREAK

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 59	9.3	12V	562092	RR JCT BOX	DOCKING LTS
R 60	13.4	24V	561707	EVAP CPT	EVAP FAN CONTROL SPEED 2
R 61	9.3	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL
R 62	5.1	24V	561707	FR JCT BOX	DDEC PARKING BRAKE RELAY
R 63					
R 64					
R 65					
R 66	20.3	24V	561707	SS JCT PANEL	SOUND SYSTEM VIDEO
R 67	20.1	12V	562092	SS JCT PANEL	SOUND SYSTEM RADIO
R 68	20.1	24V	561991	SS JCT PANEL	SOUND SYSTEM AMPLIFIER
R 69					
R 70					
R 71					
R 72					
R 73					
R 74					
R 75					
R 76					
R 77					
R 78	1.1	12V	562092	FR JCT BOX	MASTER SWITCH
R 79	23	24V	561707	GALLEY CPT.	GALLEY-REFRIGERATOR
R 80	11.1	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R 81					
R 82	19	24V	561707	FR JCT BOX	RETARDER WT
R 83					
R 84	8	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R 85	8	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R 86					
R 87	19	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R 88					
R 89	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 90	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 91	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 92	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 93	26	24V	561707	RR JCT BOX	PRE-HEAT WATER HEATER (WEBASTO)
R 94	25	24V	561707	RR JCT BOX	WCL - SYSTEM
R 95	25	24V	561707	RR JCT BOX	WCL - MAGNETIC SW. SIGN.
R 96	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR ALARM
R 97	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR PARK. BRAKE
R 98	25	24V	561707	RR JCT BOX	WCL -.ALTERNATOR SIGNAL
R 99	8	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 100					
R 101				RR JCT BOX	FUEL FILTER HEATER
R 102	17	24V	561707	RR JCT BOX	LAVATORY FLUORESCENT
R 103	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN
R 104	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - L.H.
R 105	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - R.H.
R 106	17.1	24V	561707	RR JCT BOX	LAVATORY FAN
R 107					
R 2010	26.2	24V	561230	WEBASTO PRE-HEAT	WEBASTO
R A1	4.2	24V	561707	RR JCT BOX	PRE-EXITATION RELAY BOSCH ALT.
R A2	4.2	24V	561707	RR JCT BOX	PRE-EXITATION RELAY BOSCH ALT.
R A3	4.2	24V	561707	RR JCT BOX	ALT. 1 OR ALT.2 RUN RELAY
R A4	4.2	24V	561707	RR JCT BOX	ALT. 1 AND ALT. 2 RUN RELAY
R PS	4.1SP1	24V	561707	FR JCT BOX	IDLE POWER SHUT DOWN
R TS	5.1SP1	24V	561707	FR JCT BOX	IDLE POWER SHUT DOWN
V IMN	6	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
V IMR	6	12V	562092	RR JCT BOX	VIM WORLD TR.-B/U SIGNAL
V IM1	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
V IM2	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
V IM3	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
V IM4	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT4 RETARD. ON SIGNAL

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R F1	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 1
R F2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2
R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY
R LA	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LATCH)
R LO	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (PRESS. SW.)
R LT	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LIGHT)
R LV	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (VALVE)
R 1	1.1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R 2	2.1	24V	561991	BATT. CPT.	ENGINE RUN (12) FR & RR
R 3					
R 4	4.1	24V	561005	BATT. CPT.	STARTING MOTOR
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.
R 6	9.3	24V	561707	RR JCT BOX	STOP LTS-PARKING BRAKE
R 7	5.1	24V	561707	FR JCT BOX	FAST IDLE
R 8					
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS
R 10	4.1	12V	562092	BATT. CPT.	NEUTRAL SIGNAL EATON TRANSM.
R 11					
R 12	7.2	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS
R 14	9.1	24V	561707	FR JCT BOX	BLINKER
R 15	9.1	24V	561707	FR JCT BOX	FR MARKER LTS
R 16	9.1	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R 17	9.1	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS
R 18	9.1	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-OUT
R 19	9.1	24V	561707	FR JCT BOX	HEADLAMPS (HI)
R 20	9.1	24V	561707	FR JCT BOX	HEADLAMPS (LO)
R 21	9.2	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT
R 22	4.1	24V	561707	BATT. CPT	NEUTRAL SIGNAL EATON TRANSM.
R 23	9.2	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT
R 24	9.2	24V	561707	FR JCT BOX	R.H. CORNERING LT
R 25	9.2	24V	561707	FR JCT BOX	L.H. CORNERING LT
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS
R 27	11.2	24V	561707	RR JCT BOX	AISLE & EMERG.EXIT - LTS
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R 29	11.3	24V	561707	RR JCT BOX	READING LTS R.H.
R 30	11.3	24V	561707	RR JCT BOX	READING LTS L.H.
R 31	11.3	24V	561707	RR JCT BOX	GENERAL LTS
R 32	11.4	24V	561707	RR JCT BOX	24V FLUORESCENT
R 34	13.1	24V	561707	RJB A/C JCT PANEL	A/C LOGIC PANEL
R 35	13.2	24V	561707	RJB A/C JCT PANEL	WATER PUMP
R 36	13.2	24V	561707	RJB A/C JCT PANEL	A/C COMPRESSOR CLUTCH
R 37	9.2	24V	561707	FR JCT BOX	KNEELING LT
R 38	13.1	24v	561707	RJB A/C JCT PANEL	A/C LIQ. SOL. VALVE
R 39	13.4	24V	561005	EVAP. CPT.	CONDENSER FAN MOTOR
R 40	13.4	24V	561014	EVAP. CPT.	CONDENSER SPEED CTR HI
R 41	13.4	24V	561005	EVAP. CPT.	CONDENSER SPEED CTR HI
R 42	6.3	12V	562092	BATT. CPT	EATON TRANSM.
R 43	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 44	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 45					
R 46					
R 47	23.1	24V	561707	GALLEY COMPT	GALLEY-LIQUID CONTAINERS
R 48	23.1	24V	561707	GALLEY COMPT	GALLEY-COFFEE MAKER
R 49	21.1	24V	561707	FR JCT BOX	ABS - SERVICE BRK RLY
R 50	13.4	24V	561005	EVAP CPT	EVAP FAN MOTOR 1ST SPEED
R 51	11.3	24V	562092	FR JCT BOX	DRIVER'S LTS RLY- ENT. DOOR SIGN.
R 52	21.1	24V	561707	FR JCT BOX	ABS - W/TR SIGN. RETARDER
R 53	1.1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR
R 54	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY RR
R 55	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY FR
R 56	21.1				ATC LAMP
R 57	9.1	24V	561707	FR JCT BOX	DAY'S BLINKER
R 58	21.1	24V	561707	FR JCT BOX	ATC TAG AXLE BREAK

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 59	9.3	12V	562092	RR JCT BOX	DOCKING LTS
R 60	13.4	24V	561707	EVAP CPT	EVAP FAN CONTROL SPEED 2
R 61	9.3	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL
R 62	5.1	24V	561707	FR JCT BOX	DDEC PARKING BRAKE RELAY
R 63	13.4	24V	560772	EVAP. CPT.	TIME DELAY EVAP. FAN
R 64					
R 65					
R 66	20.3	24V	561707	SS JCT PANEL	SOUND SYSTEM VIDEO
R 67	20.1	12V	562092	SS JCT PANEL	SOUND SYSTEM RADIO
R 68	20.1	24V	561991	SS JCT PANEL	SOUND SYSTEM AMPLIFIER
R 69					
R 70					
R 71					
R 72	23.1	24V	561005	LAST LUGG. CPT.	INVERTER CUT OFF
R 73	23.1SP	24V	561005	LAST LUGG. CPT.	INVERTER CUT OFF
R 74					
R 75					
R 76					
R 77					
R 78	1.1	12V	562092	FR JCT BOX	MASTER SWITCH
R 79	23	24V	561707	GALLEY CPT.	GALLEY-REFRIGERATOR
R 80	11.1	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R 81					
R 82	19	24V	561707	FR JCT BOX	RETARDER WT
R 83					
R 84	8	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R 85	8	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R 86					
R 87	19	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R 88					
R 89					
R 90	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 91					
R 92					
R 93	26	24V	561707	RR JCT BOX	PRE-HEAT WATER HEATER (WEBASTO)
R 94	25	24V	561707	RR JCT BOX	WCL - SYSTEM
R 95	25	24V	561707	RR JCT BOX	WCL - MAGNETIC SW. SIGN.
R 96	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR ALARM
R 97	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR PARK. BRAKE
R 98	25	24V	561707	RR JCT BOX	WCL -.ALTERNATOR SIGNAL
R 99	8	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 100					
R 101				RR JCT BOX	FUEL FILTER HEATER
R 102	17	24V	561707	RR JCT BOX	LAVATORY FLUORESCENT
R 103	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN
R 104	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - L.H.
R 105	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - R.H.
R 106	17.1	24V	561707	RR JCT BOX	LAVATORY FAN
R 107					
R 109	6.1	24V	561707	RR JCT BOX	TROTTLE INHIBIT
R 2010	26.2	24V	561230	WEBASTO PRE-HEAT	WEBASTO
R A1	4.2	24V	561707	RR JCT BOX	PRE-EXITATION RELAY BOSCH ALT.
R A2	4.2	24V	561707	RR JCT BOX	PRE-EXITATION RELAY BOSCH ALT.
R A3	4.2	24V	561707	RR JCT BOX	ALT. 1 OR ALT.2 RUN RELAY
R A4	4.2	24V	561707	RR JCT BOX	ALT. 1 AND ALT. 2 RUN RELAY
R PS	4.1SP1	24V	561707	FR JCT BOX	IDLE POWER SHUT DOWN
R TS	5.1SP1	24V	561707	FR JCT BOX	IDLE POWER SHUT DOWN
V IMN	6	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
V IMR	6	12V	562092	RR JCT BOX	VIM WORLD TR.-B/U SIGNAL
V IM1	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
V IM2	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
V IM3	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
V IM4	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT4 RETARD. ON SIGNAL

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION	No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R F1	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 1
R F2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2
R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY
R LA	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LATCH)
R LO	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (PRESS. SW.)
R LT	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LIGHT)
R LV	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (VALVE)
R 1	1.1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R 2	2.1	24V	561991	BATT. CPT.	ENGINE RUN (12) FR & RR
R 3					
R 4	4.1	24V	561005	BATT. CPT.	STARTING MOTOR
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.
R 6	9.3	24V	561707	RR JCT BOX	STOP LTS-PARKING BRAKE
R 7	5.1	24V	561707	FR JCT BOX	FAST IDLE
R 8					
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS
R 10	4.1	12V	562092	BATT. CPT.	NEUTRAL SIGNAL EATON TRANSM.
R 11					
R 12	7.2	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS
R 14	9.1	24V	561707	FR JCT BOX	BLINKER
R 15	9.1	24V	561707	FR JCT BOX	FR MARKER LTS
R 16	9.1	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R 17	9.1	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS
R 18	9.1	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-OUT
R 19	9.1	24V	561707	FR JCT BOX	HEADLAMPS (HI)
R 20	9.1	24V	561707	FR JCT BOX	HEADLAMPS (LO)
R 21	9.2	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT
R 22	4.1	24V	561707	BATT. CPT	NEUTRAL SIGNAL EATON TRANSM.
R 23	9.2	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT
R 24	9.2	24V	561707	FR JCT BOX	R.H. CORNERING LT
R 25	9.2	24V	561707	FR JCT BOX	L.H. CORNERING LT
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS
R 27	11.2	24V	561707	RR JCT BOX	AISLE & EMERG.EXIT - LTS
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R 29	11.3	24V	561707	RR JCT BOX	READING LTS R.H.
R 30	11.3	24V	561707	RR JCT BOX	READING LTS L.H.
R 31	11.3	24V	561707	RR JCT BOX	GENERAL LTS
R 32	11.4	24V	561707	RR JCT BOX	24V FLUORESCENT
R 34	13.1	24V	561707	RJB A/C JCT PANEL	A/C LOGIC PANEL
R 35	13.2	24V	561707	RJB A/C JCT PANEL	WATER PUMP
R 36	13.2	24V	561707	RJB A/C JCT PANEL	A/C COMPRESSOR CLUTCH
R 37	9.2	24V	561707	FR JCT BOX	KNEELING LT
R 38	13.1	24v	561707	RJB A/C JCT PANEL	A/C LIQ. SOL. VALVE
R 39	13.4	24V	561005	EVAP. CPT.	CONDENSER FAN MOTOR
R 40	13.4	24V	561014	EVAP. CPT.	CONDENSER SPEED CTR HI
R 41	13.4	24V	561005	EVAP. CPT.	CONDENSER SPEED CTR HI
R 42	6.3	12V	562092	BATT. CPT	EATON TRANSM.
R 43	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 44	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 45					
R 46					
R 47	23.1	24V	561707	GALLEY COMPT	GALLEY-LIQUID CONTAINERS
R 48	23.1	24V	561707	GALLEY COMPT	GALLEY-COFFEE MAKER
R 49	21.1	24V	561707	FR JCT BOX	ABS - SERVICE BRK RLY
R 50	13.4	24V	561005	EVAP CPT	EVAP FAN MOTOR 1ST SPEED
R 51	11.3	24V	562092	FR JCT BOX	DRIVER'S LTS RLY- ENT. DOOR SIGN.
R 52	21.1	24V	561707	FR JCT BOX	ABS - W/TR SIGN. RETARDER
R 53	1.1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR
R 54	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY RR
R 55	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY FR
R 56	21.1				ATC LAMP
R 57	9.1	24V	561707	FR JCT BOX	DAY'S BLINKER
R 58	21.1	24V	561707	FR JCT BOX	ATC TAG AXLE BREAK

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 59	9.3	12V	562092	RR JCT BOX	DOCKING LTS
R 60	13.4	24V	561707	EVAP CPT	EVAP FAN CONTROL SPEED 2
R 61	9.3	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL
R 62	5.1	24V	561707	FR JCT BOX	DDEC PARKING BRAKE RELAY
R 63	13.4	24V	560772	EVAP. CPT.	TIME DELAY EVAP. FAN
R 64					
R 65					
R 66	20.3	24V	561707	SS JCT PANEL	SOUND SYSTEM VIDEO
R 67	20.1	12V	562092	SS JCT PANEL	SOUND SYSTEM RADIO
R 68	20.1	24V	561991	SS JCT PANEL	SOUND SYSTEM AMPLIFIER
R 69					
R 70					
R 71					
R 72	23.1	24V	561005	LAST LUGG. CPT.	INVERTER CUT OFF
R 73	23.1SP	24V	561005	LAST LUGG. CPT.	INVERTER CUT OFF
R 74					
R 75					
R 76					
R 77					
R 78	1.1	12V	562092	FR JCT BOX	MASTER SWITCH
R 79	23	24V	561707	GALLEY CPT.	GALLEY-REFRIGERATOR
R 80	11.1	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R 81					
R 82	19	24V	561707	FR JCT BOX	RETARDER WT
R 83					
R 84	8	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R 85	8	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R 86					
R 87	19	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R 88					
R 89					
R 90	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 91					
R 92					
R 93	26	24V	561707	RR JCT BOX	PRE-HEAT WATER HEATER
R 94	25	24V	561707	RR JCT BOX	WCL - SYSTEM
R 95	25	24V	561707	RR JCT BOX	WCL - MAGNETIC SW. SIGN.
R 96	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR ALARM
R 97	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR PARK. BRAKE
R 98	25	24V	561707	RR JCT BOX	WCL -.ALTERNATOR SIGNAL
R 99	8	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 100					
R 101				RR JCT BOX	FUEL FILTER HEATER
R 102	17	24V	561707	RR JCT BOX	LAVATORY FLUORESCENT
R 103	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN
R 104	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - L.H.
R 105	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - R.H.
R 106	17.1	24V	561707	RR JCT BOX	LAVATORY FAN
R 107					
R 109	5.1	24V	561707	RR JCT BOX	THROTTLE INHIBIT
R 119	6.1SP2	24V	561707	RR JCT BOX	OPTION - PARKING BRAKE APPLIED
R A1	4.2	24V	561707	RR JCT BOX	PRE-EXITATION RELAY BOSCH ALT.
R A2	4.2	24V	561707	RR JCT BOX	PRE-EXITATION RELAY BOSCH ALT.
R A3	4.2	24V	561707	RR JCT BOX	ALT. 1 OR ALT.2 RUN RELAY
R A4	4.2	24V	561707	RR JCT BOX	ALT. 1 AND ALT. 2 RUN RELAY
R PS	4.1SP1	24V	561707	FR JCT BOX	IDLE POWER SHUT DOWN
R TS	5.1SP1	24V	561707	FR JCT BOX	IDLE POWER SHUT DOWN
V IMN	6	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
V IMR	6	12V	562092	RR JCT BOX	VIM WORLD TR.-B/U SIGNAL
V IM1	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
V IM2	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
V IM3	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
V IM4	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT4 RETARD. ON SIGNAL

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION	No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R F1	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 1
R F2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2
R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY
R LA	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LATCH)
R LO	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (PRESS. SW.)
R LT	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LIGHT)
R LV	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (VALVE)
R 1	1.1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R 2	2.1	24V	561991	BATT. CPT.	ENGINE RUN (12) FR & RR
R 3					
R 4	4.1	24V	561005	BATT. CPT.	STARTING MOTOR
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.
R 6	9.3	24V	561707	RR JCT BOX	STOP LTS-PARKING BRAKE
R 7	5.1	24V	561707	FR JCT BOX	FAST IDLE
R 8					
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS
R 10	4.1	12V	562092	BATT. CPT.	NEUTRAL SIGNAL EATON TRANSM.
R 11					
R 12	7.2	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS
R 14	9.1	24V	561707	FR JCT BOX	BLINKER
R 15	9.1	24V	561707	FR JCT BOX	FR MARKER LTS
R 16	9.1	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R 17	9.1	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS
R 18	9.1	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-OUT
R 19	9.1	24V	561707	FR JCT BOX	HEADLAMPS (HI)
R 20	9.1	24V	561707	FR JCT BOX	HEADLAMPS (LO)
R 21	9.2	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT
R 22	4.1	24V	561707	BATT. CPT	NEUTRAL SIGNAL EATON TRANSM.
R 23	9.2	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT
R 24	9.2	24V	561707	FR JCT BOX	R.H. CORNERING LT
R 25	9.2	24V	561707	FR JCT BOX	L.H. CORNERING LT
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS
R 27	11.2	24V	561707	RR JCT BOX	AISLE & EMERG.EXIT - LTS
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R 29	11.3	24V	561707	RR JCT BOX	READING LTS R.H.
R 30	11.3	24V	561707	RR JCT BOX	READING LTS L.H.
R 31	11.3	24V	561707	RR JCT BOX	GENERAL LTS
R 32	11.4	24V	561707	RR JCT BOX	24V FLUORESCENT
R 34	13.1	24V	561707	RJB A/C JCT PANEL	A/C LOGIC PANEL
R 35	13.2	24V	561707	RJB A/C JCT PANEL	WATER PUMP
R 36	13.2	24V	561707	RJB A/C JCT PANEL	A/C COMPRESSOR CLUTCH
R 37	9.2	24V	561707	FR JCT BOX	KNEELING LT
R 38	13.1	24v	561707	RJB A/C JCT PANEL	A/C LIQ. SOL. VALVE
R 39	13.4	24V	561005	EVAP. CPT.	CONDENSER FAN MOTOR
R 40	13.4	24V	561014	EVAP. CPT.	CONDENSER SPEED CTR HI
R 41	13.4	24V	561005	EVAP. CPT.	CONDENSER SPEED CTR HI
R 42	6.3	12V	562092	BATT. CPT	EATON TRANSM.
R 43	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 44	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 45					
R 46					
R 47	23.1	24V	561707	GALLEY COMPT	GALLEY-LIQUID CONTAINERS
R 48	23.1	24V	561707	GALLEY COMPT	GALLEY-COFFEE MAKER
R 49	21.1	12V	562092	FR JCT BOX	ABS - SERVICE BRK RLY
R 50	13.4	24V	561005	EVAP CPT	EVAP FAN MOTOR 1ST SPEED
R 51	11.3	24V	562092	FR JCT BOX	DRIVER'S LTS RLY- ENT. DOOR SIGN.
R 52	21.1	12V	562092	FR JCT BOX	ABS - W/TR SIGN. RETARDER
R 53	1.1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR
R 54	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY RR
R 55	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY FR
R 56	21.1				ATC LAMP
R 57	9.1	24V	561707	FR JCT BOX	DAY'S BLINKER
R 58	21.1	12V	562092	FR JCT BOX	ATC TAG AXLE BREAK

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 59	9.3	12V	562092	RR JCT BOX	DOCKING LTS
R 60	13.4	24V	561707	EVAP CPT	EVAP FAN CONTROL SPEED 2
R 61	9.3	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL
R 62	5.1	24V	561707	FR JCT BOX	DDEC PARKING BRAKE RELAY
R 63	13.4	24V	560772	EVAP. CPT.	TIME DELAY EVAP. FAN
R 64					
R 65					
R 66	20.3	24V	561707	SS JCT PANEL	SOUND SYSTEM VIDEO
R 67	20.1	12V	562092	SS JCT PANEL	SOUND SYSTEM RADIO
R 68	20.1	24V	561991	SS JCT PANEL	SOUND SYSTEM AMPLIFIER
R 69					
R 70					
R 71					
R 72	23.1	24V	561005	LAST LUGG. CPT.	INVERTER CUT OFF
R 73	23.1SP	24V	561005	LAST LUGG. CPT.	INVERTER CUT OFF
R 74					
R 75					
R 76					
R 77					
R 78	1.1	12V	562092	FR JCT BOX	MASTER SWITCH
R 79	23	24V	561707	GALLEY CPT.	GALLEY-REFRIGERATOR
R 80	11.1	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R 81					
R 82	19	24V	561707	FR JCT BOX	RETARDER WT
R 83					
R 84	8	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R 85	8	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R 86					
R 87	19	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R 88					
R 89					
R 90	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 91					
R 92					
R 93	26	24V	561707	RR JCT BOX	PRE-HEAT WATER HEATER
R 94	25	24V	561707	RR JCT BOX	WCL - SYSTEM
R 95	25	24V	561707	RR JCT BOX	WCL - MAGNETIC SW. SIGN.
R 96	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR ALARM
R 97	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR PARK. BRAKE
R 98	25	24V	561707	RR JCT BOX	WCL -.ALTERNATOR SIGNAL
R 99	8	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 100					
R 101				RR JCT BOX	FUEL FILTER HEATER
R 102	17	24V	561707	RR JCT BOX	LAVATORY FLUORESCENT
R 103	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN
R 104	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - L.H.
R 105	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - R.H.
R 106	17.1	24V	561707	RR JCT BOX	LAVATORY FAN
R 107					
R 109	5.1	24V	561707	RR JCT BOX	THROTTLE INHIBIT
R 119	6.1SP2	24V	561707	RR JCT BOX	OPTION - PARKING BRAKE APPLIED
R A1	4.2	24V	561707	RR JCT BOX	PRE-EXITATION RELAY BOSCH ALT.
R A2	4.2	24V	561707	RR JCT BOX	PRE-EXITATION RELAY BOSCH ALT.
R A3	4.2	24V	561707	RR JCT BOX	ALT. 1 OR ALT.2 RUN RELAY
R A4	4.2	24V	561707	RR JCT BOX	ALT. 1 AND ALT. 2 RUN RELAY
R PS	4.1SP1	24V	561707	FR JCT BOX	IDLE POWER SHUT DOWN
R TS	5.1SP1	24V	561707	FR JCT BOX	IDLE POWER SHUT DOWN
V IMN	6	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
V IMR	6	12V	562092	RR JCT BOX	VIM WORLD TR.-B/U SIGNAL
V IM1	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
V IM2	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
V IM3	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
V IM4	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT4 RETARD. ON SIGNAL

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R F1	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 1
R F2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2
R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY
R LA	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LATCH)
R LO	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (PRESS. SW.)
R LT	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LIGHT)
R LV	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (VALVE)
R 1	1.1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R 2	2.1	24V	561991	BATT. CPT.	ENGINE RUN (12) FR & RR
R 3					
R 4	4.1	24V	561005	BATT. CPT.	STARTING MOTOR
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.
R 6	9.3	24V	561707	RR JCT BOX	STOP LTS-PARKING BRAKE
R 7	5.1	24V	561707	FR JCT BOX	FAST IDLE
R 8					
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS
R 10	4.1	12V	562092	BATT. CPT.	NEUTRAL SIGNAL EATON TRANSM.
R 11					
R 12	7.2	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS
R 14	9.1	24V	561707	FR JCT BOX	BLINKER
R 15	9.1	24V	561707	FR JCT BOX	FR MARKER LTS
R 16	9.1	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R 17	9.1	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS
R 18	9.1	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-OUT
R 19	9.1	24V	561707	FR JCT BOX	HEADLAMPS (HI)
R 20	9.1	24V	561707	FR JCT BOX	HEADLAMPS (LO)
R 21	9.2	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT
R 22	4.1	24V	561707	BATT. CPT	NEUTRAL SIGNAL EATON TRANSM.
R 23	9.2	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT
R 24	9.2	24V	561707	FR JCT BOX	R.H. CORNERING LT
R 25	9.2	24V	561707	FR JCT BOX	L.H. CORNERING LT
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS
R 27	11.2	24V	561707	RR JCT BOX	AISLE & EMERG.EXIT - LTS
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R 29	11.3	24V	561707	RR JCT BOX	READING LTS R.H.
R 30	11.3	24V	561707	RR JCT BOX	READING LTS L.H.
R 31	11.3	24V	561707	RR JCT BOX	GENERAL LTS
R 32	11.4	24V	561707	RR JCT BOX	24V FLUORESCENT
R 34	13.1	24V	561707	RJB A/C JCT PANEL	A/C LOGIC PANEL
R 35	13.2	24V	561707	RJB A/C JCT PANEL	WATER PUMP
R 36	13.2	24V	561707	RJB A/C JCT PANEL	A/C COMPRESSOR CLUTCH
R 37	9.2	24V	561707	FR JCT BOX	KNEELING LT
R 38	13.1	24v	561707	RJB A/C JCT PANEL	A/C LIQ. SOL. VALVE
R 39	13.4	24V	561005	EVAP. CPT.	CONDENSER FAN MOTOR
R 40	13.4	24V	561014	EVAP. CPT.	CONDENSER SPEED CTR HI
R 41	13.4	24V	561005	EVAP. CPT.	CONDENSER SPEED CTR HI
R 42	6.3	12V	562092	BATT. CPT	EATON TRANSM.
R 43	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 44	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 45					
R 46					
R 47	23.1	24V	561707	GALLEY COMPT	GALLEY-LIQUID CONTAINERS
R 48	23.1	24V	561707	GALLEY COMPT	GALLEY-COFFEE MAKER
R 49	21.1	12V	562092	FR JCT BOX	ABS - SERVICE BRK RLY
R 50	13.4	24V	561005	EVAP CPT	EVAP FAN MOTOR 1ST SPEED
R 51	11.3	24V	562092	FR JCT BOX	DRIVER'S LTS RLY- ENT. DOOR SIGN.
R 52	21.1	12V	562092	FR JCT BOX	ABS - W/TR SIGN. RETARDER
R 53	1.1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR
R 54	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY RR
R 55	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY FR
R 56	21.1				ATC LAMP
R 57	9.1	24V	561707	FR JCT BOX	DAY'S BLINKER
R 58	21.1	12V	562092	FR JCT BOX	ATC TAG AXLE BREAK

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 59	9.3	12V	562092	RR JCT BOX	DOCKING LTS
R 60	13.4	24V	561707	EVAP CPT	EVAP FAN CONTROL SPEED 2
R 61	9.3	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL
R 62	5.1	24V	561707	FR JCT BOX	DDEC PARKING BRAKE RELAY
R 63	13.4	24V	560772	EVAP. CPT.	TIME DELAY EVAP. FAN
R 64					
R 65					
R 66	20.3	24V	561707	SS JCT PANEL	SOUND SYSTEM VIDEO
R 67	20.1	12V	562092	SS JCT PANEL	SOUND SYSTEM RADIO
R 68	20.1	24V	561991	SS JCT PANEL	SOUND SYSTEM AMPLIFIER
R 69					
R 70					
R 71					
R 72	23.1	24V	561005	LAST LUGG. CPT.	INVERTER CUT OFF
R 73	23.1SP	24V	561005	LAST LUGG. CPT.	INVERTER CUT OFF
R 74					
R 75					
R 76					
R 77					
R 78	1.1	12V	562092	FR JCT BOX	MASTER SWITCH
R 79	23	24V	561707	GALLEY CPT.	GALLEY-REFRIGERATOR
R 80	11.1	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R 81	17.1	24V	561707	LAVATORY SW.	LAVATORY TIMER PUMP
R 82	19	24V	561707	FR JCT BOX	RETARDER WT
R 83					
R 84	8	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R 85	8	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R 86					
R 87	19	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R 88					
R 89					
R 90	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 91					
R 92					
R 93	26	24V	561707	RR JCT BOX	PRE-HEAT WATER HEATER
R 94	25	24V	561707	RR JCT BOX	WCL - SYSTEM
R 95	25	24V	561707	RR JCT BOX	WCL - MAGNETIC SW. SIGN.
R 96	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR ALARM
R 97	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR PARK. BRAKE
R 98	25	24V	561707	RR JCT BOX	WCL -.ALTERNATOR SIGNAL
R 99	8	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 100					
R 101				RR JCT BOX	FUEL FILTER HEATER
R 102	17	24V	561707	RR JCT BOX	LAVATORY FLUORESCENT
R 103	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN
R 104	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - L.H.
R 105	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - R.H.
R 106	17.1	24V	561707	RR JCT BOX	LAVATORY FAN
R 107					
R 109	5.1	24V	561707	RR JCT BOX	THROTTLE INHIBIT
R 119	6.1SP2	24V	561707	RR JCT BOX	OPTION - PARKING BRAKE APPLIED
R A1	4.2	24V	561707	RR JCT BOX	PRE-EXITATION RELAY BOSCH ALT.
R A2	4.2	24V	561707	RR JCT BOX	PRE-EXITATION RELAY BOSCH ALT.
R A3	4.2	24V	561707	RR JCT BOX	ALT. 1 OR ALT.2 RUN RELAY
R A4	4.2	24V	561707	RR JCT BOX	ALT. 1 AND ALT. 2 RUN RELAY
R PS	4.1SP1	24V	561707	FR JCT BOX	IDLE POWER SHUT DOWN
R TS	5.1SP1	24V	561707	FR JCT BOX	IDLE POWER SHUT DOWN
V IMN	6	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
V IMR	6	12V	562092	RR JCT BOX	VIM WORLD TR.-B/U SIGNAL
V IM1	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
V IM2	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
V IM3	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
V IM4	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT4 RETARD. ON SIGNAL

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION	No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

RESISTORS NUMBER CODE

No.	PAGE	OHM(S)	#PREV.	LOCATION	FUNCTION
RS 1	5	11 K	561898	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 2	5	3.6 K	561897	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 3	9.3	1 (2)	561537	FR JCT BOX	FOG LT - RH
RS 4	9.3	1 (2)	561537	FR JCT BOX	FOG LT - LH
RS 5	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - LH
RS 6	16.1	5	563006	RH UNDER DASH	VOLTAGE DIV. OPEN DOOR SOL.
RS 7	9.3	.82 (2)	060806	RR JCT BOX	PARKING BRAKE STOP LTS
RS 8	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - RH
RS 11	22	12	561191	FR TOP	DEFROSTER SPEED
RS 12	22	12	561191	FR TOP	DEFROSTER SPEED
RS 13	17	80 (2)	562108	FR TOP	FR DESTINATION SIGN
RS 9	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - RH
RS 10	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - LH
RS 17	7	220	562498	FR JCT BOX	FIRE ALARM
RS 18	8	75 K	064208	RR JCT BOX	FAN CLUTCH W/RETARDER
RS 20	15	1 K	562470	RR JCT BOX	WORLD TR. SPEED TO DDEC III
RS 21	22	15K	562908	DASH	CURRENT LIMIT FOR LED
RS 24	9.1	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 25	9.3	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 26	10	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 28	26.1	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 29	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 30	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 31	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 32	13.3	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 33	4.2	30	562948	RR JCT BOX	CURRENT LOAD FOR RELAY CONTACT
RS 33	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 34	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 35	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 36	13.1	10	064907	BATT. COMPT.	CURRENT LIMIT FOR RELAY
RS 37	13.1	5	064907	BATT. COMPT.	CURRENT LIMIT FOR RELAY

RESISTORS NUMBER CODE

No.	PAGE	OHM(S)	#PREV.	LOCATION	FUNCTION
RS 1	5	11 K	561898	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 2	5	3.6 K	561897	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 3	9.3	1 (2)	561537	FR JCT BOX	FOG LT - RH
RS 4	9.3	1 (2)	561537	FR JCT BOX	FOG LT - LH
RS 5	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - LH
RS 6	16.1	5	563006	RH UNDER DASH	VOLTAGE DIV. OPEN DOOR SOL.
RS 7	9.3	.82 (2)	060806	RR JCT BOX	PARKING BRAKE STOP LTS
RS 8	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - RH
RS 9	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - RH
RS 10	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - LH
RS 11	22	12	561191	FR TOP	DEFROSTER SPEED
RS 12	22	12	561191	FR TOP	DEFROSTER SPEED
RS 13	17	80 (2)	562108	FR TOP	FR DESTINATION SIGN
RS 14	21.1	1K	562470	FR. SERV. CPT.	ABS
RS 15					
RS 16					
RS 17	7	220	562498	FR JCT BOX	FIRE ALARM
RS 18	8	75 K	064208	RR JCT BOX	FAN CLUTCH W/RETARDER
RS 20	15	1 K	562470	RR JCT BOX	WORLD TR. SPEED TO DDEC III
RS 21	22	15K	562908	DASH	CURRENT LIMIT FOR LED
RS 24	9.1	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 25	9.3	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 26	10	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 28	26.1	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 29	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 30	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 31	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 32	13.3	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 33	4.2	30	562948	RR JCT BOX	CURRENT LOAD FOR RELAY CONTACT
RS 33	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 34	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 35	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 36	13.1	10	064907	BATT. COMPT.	CURRENT LIMIT FOR RELAY
RS 37	13.1	5	064907	BATT. COMPT.	CURRENT LIMIT FOR RELAY


RESISTORS NUMBER CODE


No.	PAGE	OHM(S)	#PREV.	LOCATION	FUNCTION
RS 1	5	11 K	561898	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 2	5	3.6 K	561897	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 3	9.3	1 (2)	561537	FR JCT BOX	FOG LT - RH
RS 4	9.3	1 (2)	561537	FR JCT BOX	FOG LT - LH
RS 5	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - LH
RS 6	16.1	5	563006	RH UNDER DASH	VOLTAGE DIV. OPEN DOOR SOL.
RS 7	9.3	.82 (2)	060806	RR JCT BOX	PARKING BRAKE STOP LTS
RS 8	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - RH
RS 9	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - RH
RS 10	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - LH
RS 11	22	12	561191	FR TOP	DEFROSTER SPEED
RS 12	22	12	561191	FR TOP	DEFROSTER SPEED
RS 13	17	80 (2)	562108	FR TOP	FR DESTINATION SIGN
RS 14					
RS 15					
RS 16					
RS 17	7	220	562498	FR JCT BOX	FIRE ALARM
RS 18	8	75 K	064208	RR JCT BOX	FAN CLUTCH W/RETARDER
RS 19	13.4	30K	065613	EVAP. CPT.	TIME DELAY RELAY EVAP. FAN
RS 20	15	1 K	562470	RR JCT BOX	WORLD TR. SPEED TO DDEC III
RS 21	22	15K	562908	DASH	CURRENT LIMIT FOR LED
RS 24	9.1	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 25	9.3	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 26	10	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 28	26.1	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 29	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 30	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 31	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 32	13.3	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 33	4.2	30	562948	RR JCT BOX	CURRENT LOAD FOR RELAY CONTACT
RS 33	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 34	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 35	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 36	13.1	10	064907	BATT. COMPT.	CURRENT LIMIT FOR RELAY
RS 37	13.1	5	064907	BATT. COMPT.	CURRENT LIMIT FOR RELAY
RS 38	21.1	620	563205	FR. SERV. COMPT	ABS
RS 39	21.1	620	563205	FR. SERV. COMPT	TRAILER ABS


RESISTORS NUMBER CODE

No.	PAGE	OHM(S)	#PREV.	LOCATION	FUNCTION
RS 1	5	11 K	561898	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 2	5	3.6 K	561897	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 3	9.3	1 (2)	561537	FR JCT BOX	FOG LT - RH
RS 4	9.3	1 (2)	561537	FR JCT BOX	FOG LT - LH
RS 5	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - LH
RS 6	16.1	5	563006	RH UNDER DASH	VOLTAGE DIV. OPEN DOOR SOL.
RS 7	9.3	.82 (2)	060806	RR JCT BOX	PARKING BRAKE STOP LTS
RS 8	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - RH
RS 9	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - RH
RS 10	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - LH
RS 11	22	12	561191	FR TOP	DEFROSTER SPEED
RS 12	22	12	561191	FR TOP	DEFROSTER SPEED
RS 13	17	80 (2)	562108	FR TOP	FR DESTINATION SIGN
RS 14					
RS 15					
RS 16					
RS 17	7	220	562498	FR JCT BOX	FIRE ALARM
RS 18	8	75 K	064208	RR JCT BOX	FAN CLUTCH W/RETARDER
RS 19	13.4	30K	065613	EVAP. CPT.	TIME DELAY RELAY EVAP. FAN
RS 20	15	1 K	562470	RR JCT BOX	WORLD TR. SPEED TO DDEC III
RS 21	22	15K	562908	DASH	CURRENT LIMIT FOR LED
RS 24	9.1	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 25	9.3	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 26	10	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 28	26.1	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 29	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 30	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 31	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 32	13.3	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 33	4.2	30	562948	RR JCT BOX	CURRENT LOAD FOR RELAY CONTACT
RS 33	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 34	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 35	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 36	13.1	10	064907	BATT. COMPT.	CURRENT LIMIT FOR RELAY
RS 37	13.1	5	064907	BATT. COMPT.	CURRENT LIMIT FOR RELAY
RS 38	21.1	620	563205	FR. SERV. COMPT	ABS
RS 39	21.1	620	563205	FR. SERV. COMPT	TRAILER ABS
RS 40					
RS 41	17.1	1M	065830	LAVATORY TRAP	FLUSH PUMP TIME DELAY

WIRING DIAGRAM KEYS




WIRE CROSSING


WIRE SOLDERING JOINT



SHIELDED WIRES


TWISTED WIRES


STUD TERMINAL


JUNCTION BLOCK

DUMMY





CHASSIS GROUND



ACCESSORY CHASSIS GROUND

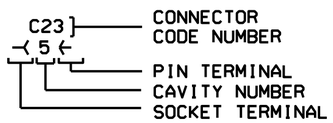




ILLUMINATING LAMP



FLUORESCENT LAMP







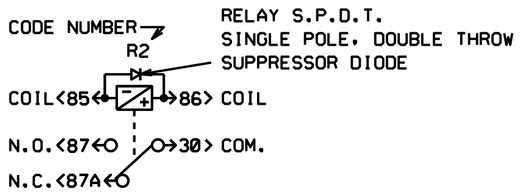


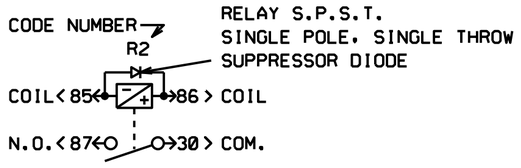


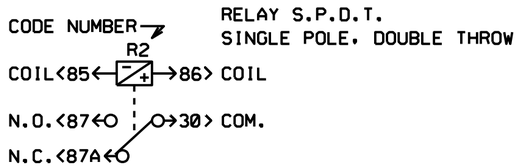

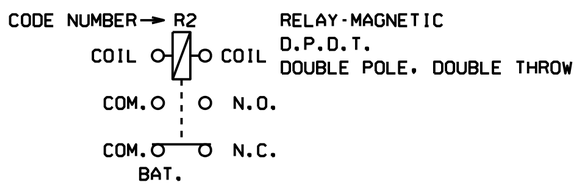


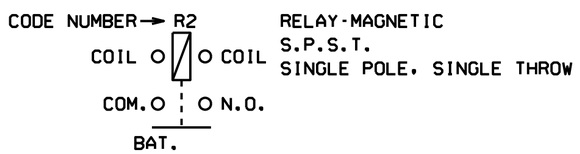











PRESSURE SWITCH N.C.


PRESSURE SWITCH N.O.



SWITCH MOMENTARY CONTACT


SWITCH PUSH BUTTON







110V EXTERIOR PLUG RECEPTACLE


ELECTRIC HORN


THERMOSTAT


HEATER

SOLENOID VALVE







FR. JCT BOX - JUNCTION BLOCK



RR. JCT BOX - JUNCTION BLOCK



BAT. JCT PANEL - JUNCTION BLOCK

BLK	BLACK
YEL	YELLOW
RED	RED
WH	WHITE
GRY	GREY
ORA	ORANGE
BLU	BLUE
GRN	GREEN
BRN	BROWN
PUR	PURPLE
PK	PINK

WIRING DIAGRAM KEYS




WIRE CROSSING


WIRE SOLDERING JOINT



SHIELDED WIRES



TWISTED WIRES


STUD TERMINAL


JUNCTION BLOCK

DUMMY




CHASSIS GROUND



ACCESSORY CHASSIS GROUND

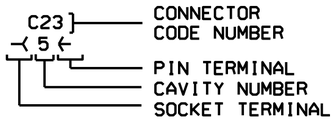




L.E.D.



ILLUMINATING LAMP



FLUORESCENT LAMP







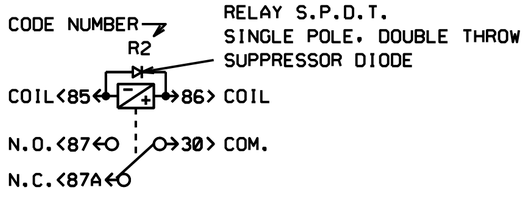


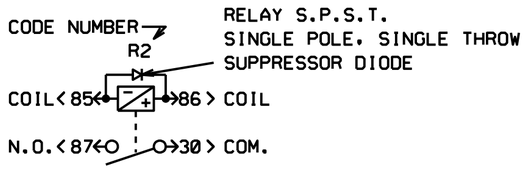


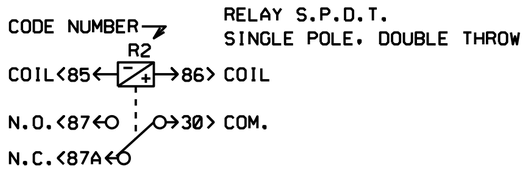


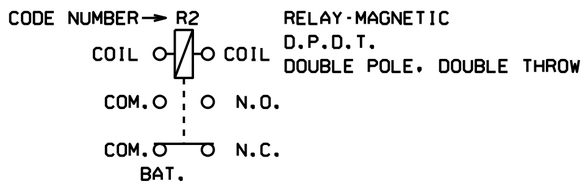

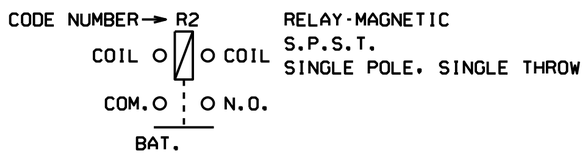









PRESSURE SWITCH N.C.



PRESSURE SWITCH N.O.


SWITCH MOMENTARY CONTACT


SWITCH PUSH BUTTON

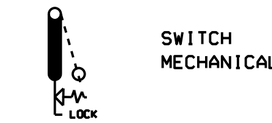




110V EXTERIOR PLUG RECEPTACLE


ELECTRIC HORN


THERMOSTAT


HEATER

SOLENOID VALVE






FR. JCT BOX - JUNCTION BLOCK


RR. JCT BOX - JUNCTION BLOCK


BAT. JCT PANEL - JUNCTION BLOCK

BLK	BLACK
YEL	YELLOW
RED	RED
WH	WHITE
GRY	GREY
ORA	ORANGE
BLU	BLUE
GRN	GREEN
BRN	BROWN
PUR	PURPLE
PK	PINK

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V BATTERY
F 2	6.1	10A	562407	RR. JCT. BOX	WORLD TRANS.& EATON TRANS.12V IGNITION
F 3	7.2	20A	562605	FR. JCT. BOX	ELECTRICAL HORNS
F 4	7.2	5A	562259	FR. JCT. BOX	FIRE ALARM
F 5	8.1	10A	562407	RR. JCT. BOX	AIR DRYER
F 6	5.1	5A	562602	FR. JCT. BOX	CRUISE DECEL SW.
F 7	8.1	5A	562602	FR. JCT. BOX	PARKING BRAKE PRESSURE SW.
F 8	9.2	10A	562407	FR. JCT. BOX	CORNERING LTS
F 9	9.3	15A	562604	RR. JCT. BOX	DOCKING LTS
F 10	9.3	15A	562604	FR. JCT. BOX	FOG LTS
F 11	11.1	5A	562259	FR. JCT. BOX	FRONT SERVICE CPT LTS
F 12	11.2	10A	562407	RR. JCT. BOX	AISLE LTS
F 13	11.2	7.5A	562602	RR. JCT. BOX	EMERGENCY EXIT LTS
F 14	11.3	15A	562602	FR. JCT. BOX	DRIVER'S LTS
F 15	11.3	15A	562604	RR. JCT. BOX	READING LTS RH
F 16	11.3	15A	562604	RR. JCT. BOX	READING LTS LH
F 17	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING R.H.
F 18	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT RH
F 19	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT LH
F 20	11.3	5A	562599	FR. JCT. BOX	GENERAL & READING LTS. SW.
F 21	12.1	10A	560061	RR. JCT. BOX	PRIME PUMP
F 22	14.1	10A	562407	FR. JCT. BOX	POWER 12V OUTLET
F 23	14.1	15A	562604	FR. JCT. BOX	DRIVER'S WINDOW LIFTER
F 24	14.1	15A	562604	FR. JCT. BOX	CIGAR LIGHTER
F 25	14.1	3A	562599	FR. JCT. BOX	SUN VISOR
F 26	26.1	5A	562259	FR. JCT. BOX	WATER HTR TIMER
F 27	17.1	5A	562259	RR. JCT. BOX	GALLEY LAMP & LAVATORY NIGHT LTS.
F 28	17.1	10A	562407	RR. JCT. BOX	LAVATORY PUMP
F 29	17.1	7.5A	562602	RR. JCT. BOX	LAVATORY LTS
F 31	17.1	5A	562259	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRONIC
F 31	17.1	7.5A	562602	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRIC
F 32	11.3	5A	562259	FR. JCT. BOX	PASSENGER NO SMOKING LTS
F 33	18.1	5A	562259	FR. JCT. BOX	KNEELING SYSTEM
F 34	19.1	3A	562599	FR. JCT. BOX	LUGGAGE DOOR LOCK
F 39	22.1	10A	562407	FR. JCT. BOX	UPPER WINDSHIELD FAN DEFROST
F 40	22.1	20A	562605	FR. JCT. BOX	HEATED WINDSCHIELD LH
F 41	22.1	20A	562605	FR. JCT. BOX	HEATED WINDSCHIELD RH
F 46	24.1	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 24V SPARTAN
F 47	24.3	7.5A	562407	FR. JCT. BOX	MIRROR ADJUST & HEATED 12V RAMCO
F 48	25.2	10A	562407	RR. JCT. BOX	WHEEL CHAIR LIFT POWER CONTROL
F 49	26.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 50	26.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER
F 51	11.2	7.5A	562602	RR. JCT. BOX	HAR RACK CPT LTS
F 57	17.1	5A	562259	RR. JCT. BOX	LAVATORY FLUORESCENT
F 58	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING L.H.
F 59					
F 60	17.1	10A	562407	RR. JCT. BOX	LAVATORY FAN
F 61	27.1	1A	560893	FR. JCT. BOX	INTERCOM
F 62	2.1	3A	562599	RR. JCT. BOX	PRO-LINK & FIRE ALARM
F 63	27.1	3A	560893	MON. CLARION	BACK-UP MONITOR CLARION
F 70	23.1	7.5A	562602	GALLEY PANEL	GALLEY RH CONTAINER
F 71	23.1	7.5A	562602	GALLEY PANEL	GALLEY LH CONTAINER
F 72	23.1	10A	562407	GALLEY PANEL	GALLEY REFRIGERATOR COMPRESSOR
F 73	23.1	35A	562608	GALLEY PANEL	GALLEY COFFEMAKER
F 74	23.1	7.5	560598	BAT. CPT.	GALLEY REFRIGERATOR

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V BATTERY
F 2	6.1	10A	562407	RR. JCT. BOX	WORLD TRANS.& EATON TRANS.12V IGNITION
F 3	7.2	20A	562605	FR. JCT. BOX	ELECTRICAL HORNS
F 4	7.2	5A	562259	FR. JCT. BOX	FIRE ALARM
F 5	8.1	10A	562407	RR. JCT. BOX	AIR DRYER
F 6	5.1	5A	562602	FR. JCT. BOX	CRUISE DECEL SW.
F 7	8.1	5A	562602	FR. JCT. BOX	PARKING BRAKE PRESSURE SW.
F 8	9.2	10A	562407	FR. JCT. BOX	CORNERING LTS
F 9	9.3	15A	562604	RR. JCT. BOX	DOCKING LTS
F 10	9.3	15A	562604	FR. JCT. BOX	FOG LTS
F 11	11.1	5A	562259	FR. JCT. BOX	FRONT SERVICE CPT LTS
F 12	11.2	10A	562407	RR. JCT. BOX	AISLE LTS
F 13	11.2	7.5A	562602	RR. JCT. BOX	EMERGENCY EXIT LTS
F 14	11.3	15A	562602	FR. JCT. BOX	DRIVER'S LTS
F 15	11.3	15A	562604	RR. JCT. BOX	READING LTS RH
F 16	11.3	15A	562604	RR. JCT. BOX	READING LTS LH
F 17	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING R.H.
F 18	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT RH
F 19	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT LH
F 20	11.3	5A	562599	FR. JCT. BOX	GENERAL & READING LTS. SW.
F 21	12.1	10A	560061	RR. JCT. BOX	PRIME PUMP
F 22	14.1	10A	562407	FR. JCT. BOX	POWER 12V OUTLET
F 23	14.1	15A	562604	FR. JCT. BOX	DRIVER'S WINDOW LIFTER
F 24	14.1	15A	562604	FR. JCT. BOX	CIGAR LIGHTER
F 25	14.1	3A	562599	FR. JCT. BOX	SUN VISOR
F 26	26.1	5A	562259	FR. JCT. BOX	WATER HTR TIMER
F 27	17.1	5A	562259	RR. JCT. BOX	GALLEY LAMP & LAVATORY NIGHT LTS.
F 28	17.1	10A	562407	RR. JCT. BOX	LAVATORY PUMP
F 29	17.1	7.5A	562602	RR. JCT. BOX	LAVATORY LTS
F 31	17.1	5A	562259	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRONIC
F 31	17.1	7.5A	562602	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRIC
F 32	11.3	5A	562259	FR. JCT. BOX	PASSENGER NO SMOKING LTS
F 33	18.1	5A	562259	FR. JCT. BOX	KNEELING SYSTEM
F 34	19.1	3A	562599	FR. JCT. BOX	LUGGAGE DOOR LOCK
F 39	22.1	10A	562407	FR. JCT. BOX	UPPER WINDSHIELD FAN DEFROST
F 40	22.1	20A	562605	FR. JCT. BOX	HEATED WINDSCHIELD LH
F 41	22.1	20A	562605	FR. JCT. BOX	HEATED WINDSCHIELD RH
F 42	20.5	3A			WIRELESS MIC CAHRGER
F 43	1.2	3A	562599	FR. JCT. BOX	12V SIGNAL TO BATT MONITOR
F 44	1.2	3A	562599	FR. JCT. BOX	24V SIGNAL TO BATT MONITOR
F 46	24.1	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 24V SPARTAN
F 47	24.3	7.5A	562407	FR. JCT. BOX	MIRROR ADJUST & HEATED 12V RAMCO
F 48	25.2	10A	562407	RR. JCT. BOX	WHEEL CHAIR LIFT POWER CONTROL
F 49	26.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 50	26.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER
F 51	11.2	7.5A	562602	RR. JCT. BOX	HAR RACK CPT LTS
F 57	17.1	5A	562259	RR. JCT. BOX	LAVATORY FLUORESCENT
F 58	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING L.H.
F 59					
F 60	17.1	10A	562407	RR. JCT. BOX	LAVATORY FAN
F 61	27.1	1A	560893	FR. JCT. BOX	INTERCOM
F 62	2.1	3A	562599	RR. JCT. BOX	PRO-LINK & FIRE ALARM
F 63	27.1	3A	560893	MON. CLARION	BACK-UP MONITOR CLARION
F 70	23.1	7.5A	562602	GALLEY PANEL	GALLEY RH CONTAINER
F 71	23.1	7.5A	562602	GALLEY PANEL	GALLEY LH CONTAINER
F 72	23.1	10A	562407	GALLEY PANEL	GALLEY REFRIGERATOR COMPRESSOR
F 73	23.1	35A	562608	GALLEY PANEL	GALLEY COFFEMAKER

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 74	23.1	7.5	560598	BAT. CPT.	GALLEY REFRIGERATOR

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION	No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V BATTERY
F 2	6.1	10A	562407	RR. JCT. BOX	WORLD TRANS.& EATON TRANS.12V IGNITION
F 3	7.2	20A	562605	FR. JCT. BOX	ELECTRICAL HORNS
F 4	7.2	5A	562259	FR. JCT. BOX	FIRE ALARM
F 5	8.1	10A	562407	RR. JCT. BOX	AIR DRYER
F 6	5.1	5A	562602	FR. JCT. BOX	CRUISE DECEL SW.
F 7	8.1	5A	562602	FR. JCT. BOX	PARKING BRAKE PRESSURE SW.
F 8	9.2	10A	562407	FR. JCT. BOX	CORNERING LTS
F 9	9.3	15A	562604	RR. JCT. BOX	DOCKING LTS
F 10	9.3	15A	562604	FR. JCT. BOX	FOG LTS
F 11	11.1	5A	562259	FR. JCT. BOX	FRONT SERVICE CPT LTS
F 12	11.2	10A	562407	RR. JCT. BOX	AISLE LTS
F 13	11.2	7.5A	562602	RR. JCT. BOX	EMERGENCY EXIT LTS
F 14	11.3	15A	562602	FR. JCT. BOX	DRIVER'S LTS
F 15	11.3	15A	562604	RR. JCT. BOX	READING LTS RH
F 16	11.3	15A	562604	RR. JCT. BOX	READING LTS LH
F 17	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING R.H.
F 18	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT RH
F 19	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT LH
F 20	11.3	5A	562599	FR. JCT. BOX	GENERAL & READING LTS. SW.
F 21	12.1	10A	560061	RR. JCT. BOX	PRIME PUMP
F 22	14.1	10A	562407	FR. JCT. BOX	POWER 12V OUTLET
F 23	14.1	15A	562604	FR. JCT. BOX	DRIVER'S WINDOW LIFTER
F 24	14.1	15A	562604	FR. JCT. BOX	CIGAR LIGHTER
F 25	14.1	3A	562599	FR. JCT. BOX	SUN VISOR
F 26	26.1	5A	562259	FR. JCT. BOX	WATER HTR TIMER
F 27	17.1	5A	562259	RR. JCT. BOX	GALLEY LAMP & LAVATORY NIGHT LTS.
F 28	17.1	10A	562407	RR. JCT. BOX	LAVATORY PUMP
F 29	17.1	7.5A	562602	RR. JCT. BOX	LAVATORY LTS
F 31	17.1	5A	562259	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRONIC
F 31	17.1	7.5A	562602	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRIC
F 32	11.3	5A	562259	FR. JCT. BOX	PASSENGER NO SMOKING LTS
F 33	18.1	5A	562259	FR. JCT. BOX	KNEELING SYSTEM
F 34	19.1	3A	562599	FR. JCT. BOX	LUGGAGE DOOR LOCK
F 39	22.1	10A	562407	FR. JCT. BOX	UPPER WINDSHIELD FAN DEFROST
F 40	22.1	20A	562605	FR. JCT. BOX	HEATED WINDSCHIELD LH
F 41	22.1	20A	562605	FR. JCT. BOX	HEATED WINDSCHIELD RH
F 42	20.5	3A			WIRELESS MIC CAHRGER
F 43	1.2	3A	562599	FR. JCT. BOX	12V SIGNAL TO BATT MONITOR
F 44	1.2	3A	562599	FR. JCT. BOX	24V SIGNAL TO BATT MONITOR
F 46	24.1	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 24V SPARTAN
F 47	24.3	7.5A	562407	FR. JCT. BOX	MIRROR ADJUST & HEATED 12V RAMCO
F 48	25.2	10A	562407	RR. JCT. BOX	WHEEL CHAIR LIFT POWER CONTROL
F 49	26.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 50	26.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER
F 51	11.2	7.5A	562602	RR. JCT. BOX	HAR RACK CPT LTS
F 57	17.1	5A	562259	RR. JCT. BOX	LAVATORY FLUORESCENT
F 58	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING L.H.
F 59					
F 60	17.1	10A	562407	RR. JCT. BOX	LAVATORY FAN
F 61	27.1	1A	560893	FR. JCT. BOX	INTERCOM
F 62	2.1	3A	562599	RR. JCT. BOX	PRO-LINK & FIRE ALARM
F 63	27.1	3A	560893	MON. CLARION	BACK-UP MONITOR CLARION
F 70	23.1	7.5A	562602	GALLEY PANEL	GALLEY RH CONTAINER
F 71	23.1	7.5A	562602	GALLEY PANEL	GALLEY LH CONTAINER
F 72	23.1	10A	562407	GALLEY PANEL	GALLEY REFRIGERATOR COMPRESSOR
F 73	23.1	35A	562608	GALLEY PANEL	GALLEY COFFEMAKER
F 74	23.1	7.5	560598	BAT. CPT.	GALLEY REFRIGERATOR
F 75					
F 76	20.8	1A	562597	SOUND SYS JC	DVD KARAOKE
F 77	20.8	3A	562599	SOUND SYS JC	DVD KARAOKE

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION	No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V BATTERY
F 2	6.1	10A	562407	RR. JCT. BOX	WORLD TRANS.& EATON TRANS.12V IGNITION
F 3	7.2	20A	562605	FR. JCT. BOX	ELECTRICAL HORNS
F 4	7.2	5A	562259	FR. JCT. BOX	FIRE ALARM
F 5	8.1	10A	562407	RR. JCT. BOX	AIR DRYER
F 6	5.1	5A	562602	FR. JCT. BOX	CRUISE DECEL SW.
F 7	8.1	5A	562602	FR. JCT. BOX	PARKING BRAKE PRESSURE SW.
F 8	9.2	10A	562407	FR. JCT. BOX	CORNERING LTS
F 9	9.3	15A	562604	RR. JCT. BOX	DOCKING LTS
F 10	9.3	15A	562604	FR. JCT. BOX	FOG LTS
F 11	11.1	5A	562259	FR. JCT. BOX	FRONT SERVICE CPT LTS
F 12	11.2	10A	562407	RR. JCT. BOX	AISLE LTS
F 13	11.2	7.5A	562602	RR. JCT. BOX	EMERGENCY EXIT LTS
F 14	11.3	15A	562602	FR. JCT. BOX	DRIVER'S LTS
F 15	11.3	15A	562604	RR. JCT. BOX	READING LTS RH
F 16	11.3	15A	562604	RR. JCT. BOX	READING LTS LH
F 17	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING R.H.
F 18	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT RH
F 19	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT LH
F 20	11.3	5A	562599	FR. JCT. BOX	GENERAL & READING LTS. SW.
F 21	12.1	10A	560061	RR. JCT. BOX	PRIME PUMP
F 22	14.1	10A	562407	FR. JCT. BOX	POWER 12V OUTLET
F 23	14.1	15A	562604	FR. JCT. BOX	DRIVER'S WINDOW LIFTER
F 24	14.1	15A	562604	FR. JCT. BOX	CIGAR LIGHTER
F 25	14.1	3A	562599	FR. JCT. BOX	SUN VISOR
F 26	26.1	5A	562259	FR. JCT. BOX	WATER HTR TIMER
F 27	17.1	5A	562259	RR. JCT. BOX	GALLEY LAMP & LAVATORY NIGHT LTS.
F 28	17.1	10A	562407	RR. JCT. BOX	LAVATORY PUMP
F 29	17.1	7.5A	562602	RR. JCT. BOX	LAVATORY LTS
F 31	17.1	5A	562259	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRONIC
F 31	17.1	7.5A	562602	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRIC
F 32	11.3	5A	562259	FR. JCT. BOX	PASSENGER NO SMOKING LTS
F 33	18.1	5A	562259	FR. JCT. BOX	KNEELING SYSTEM
F 34	19.1	3A	562599	FR. JCT. BOX	LUGGAGE DOOR LOCK
F 39	22.1	10A	562407	FR. JCT. BOX	UPPER WINDSHIELD FAN DEFROST
F 40	22.1	20A	562605	FR. JCT. BOX	HEATED WINDSCHIELD LH
F 41	22.1	20A	562605	FR. JCT. BOX	HEATED WINDSCHIELD RH
F 42	20.5	3A			WIRELESS MIC CAHRGER
F 43	1.2	3A	562599	FR. JCT. BOX	12V SIGNAL TO BATT MONITOR
F 44	1.2	3A	562599	FR. JCT. BOX	24V SIGNAL TO BATT MONITOR
F 46	24.1	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 24V SPARTAN
F 47	24.3	7.5A	562407	FR. JCT. BOX	MIRROR ADJUST & HEATED 12V RAMCO
F 48	25.2	10A	562407	RR. JCT. BOX	WHEEL CHAIR LIFT POWER CONTROL
F 49	26.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 50	26.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER
F 51	11.2	7.5A	562602	RR. JCT. BOX	HAR RACK CPT LTS
F 57	17.1	5A	562259	RR. JCT. BOX	LAVATORY FLUORESCENT
F 58	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING L.H.
F 59					
F 60	17.1	10A	562407	RR. JCT. BOX	LAVATORY FAN
F 61	27.1	1A	560893	FR. JCT. BOX	INTERCOM
F 62	2.1	3A	562599	RR. JCT. BOX	PRO-LINK & FIRE ALARM
F 63	27.1	3A	560893	MON. CLARION	BACK-UP MONITOR CLARION
F 70	23.1	7.5A	562602	GALLEY PANEL	GALLEY RH CONTAINER
F 71	23.1	7.5A	562602	GALLEY PANEL	GALLEY LH CONTAINER
F 72	23.1	10A	562407	GALLEY PANEL	GALLEY REFRIGERATOR COMPRESSOR
F 73	23.1	35A	562608	GALLEY PANEL	GALLEY COFFEMAKER
F 74	23.1	7.5	560598	BAT. CPT.	GALLEY REFRIGERATOR
F 75					
F 76	20.8	1A	562597	SOUND SYS JC	DVD KARAOKE
F 77	20.8	3A	562599	SOUND SYS JC	DVD KARAOKE
F ZF1	15.1	3A	560893	FR.JCT.BOX	STEERING CONTROL

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V BATTERY
F 2	6.1	10A	562407	RR. JCT. BOX	WORLD TRANS.& EATON TRANS.12V IGNITION
F 3	7.2	20A	562605	FR. JCT. BOX	ELECTRICAL HORNS
F 4	7.2	5A	562259	FR. JCT. BOX	FIRE ALARM
F 5					
F 6	5.1	5A	562602	FR. JCT. BOX	CRUISE DECEL SW.
F 7	8.1	5A	562602	FR. JCT. BOX	PARKING BRAKE PRESSURE SW.
F 8	9.2	10A	562407	FR. JCT. BOX	CORNERING LTS
F 9	9.3	15A	562604	RR. JCT. BOX	DOCKING LTS
F 10	9.3	15A	562604	FR. JCT. BOX	FOG LTS
F 11	11.1	5A	562259	FR. JCT. BOX	FRONT SERVICE CPT LTS
F 12	11.2	10A	562407	RR. JCT. BOX	AISLE LTS
F 13	11.2	7.5A	562602	RR. JCT. BOX	EMERGENCY EXIT LTS
F 14	11.3	15A	562602	FR. JCT. BOX	DRIVER'S LTS
F 15	11.3	15A	562604	RR. JCT. BOX	READING LTS RH
F 16	11.3	15A	562604	RR. JCT. BOX	READING LTS LH
F 17	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING R.H.
F 18	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT RH
F 19	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT LH
F 20	11.3	5A	562599	FR. JCT. BOX	GENERAL & READING LTS. SW.
F 21	12.1	10A	560061	RR. JCT. BOX	PRIME PUMP
F 22	14.1	10A	562407	FR. JCT. BOX	POWER 12V OUTLET
F 23	14.1	15A	562604	FR. JCT. BOX	DRIVER'S WINDOW LIFTER
F 24	14.1	15A	562604	FR. JCT. BOX	CIGAR LIGHTER
F 25	14.1	3A	562599	FR. JCT. BOX	SUN VISOR
F 26	26.1	5A	562259	FR. JCT. BOX	WATER HTR TIMER
F 27	17.1	5A	562259	RR. JCT. BOX	GALLEY LAMP & LAVATORY NIGHT LTS.
F 28	17.1	10A	562407	RR. JCT. BOX	LAVATORY PUMP
F 29	17.1	7.5A	562602	RR. JCT. BOX	LAVATORY LTS
F 31	17.1	5A	562259	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRONIC
F 31	17.1	7.5A	562602	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRIC
F 32	11.3	5A	562259	FR. JCT. BOX	PASSENGER NO SMOKING LTS
F 33	18.1	5A	562259	FR. JCT. BOX	KNEELING SYSTEM
F 34	19.1	3A	562599	FR. JCT. BOX	LUGGAGE DOOR LOCK
F 39	22.1	10A	562407	FR. JCT. BOX	UPPER WINDSHIELD FAN DEFROST
F 40	22.1	20A	562605	FR. JCT. BOX	HEATED WINDSCHIELD LH
F 41	22.1	20A	562605	FR. JCT. BOX	HEATED WINDSCHIELD RH
F 42	20.5	3A			WIRELESS MIC CAHRGER
F 43	1.2	3A	562599	FR. JCT. BOX	12V SIGNAL TO BATT MONITOR
F 44	1.2	3A	562599	FR. JCT. BOX	24V SIGNAL TO BATT MONITOR
F 46	24.1	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 24V SPARTAN
F 47	24.3	7.5A	562407	FR. JCT. BOX	MIRROR ADJUST & HEATED 12V RAMCO
F 48	25.2	10A	562407	RR. JCT. BOX	WHEEL CHAIR LIFT POWER CONTROL
F 49	26.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 50	26.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER
F 51	11.2	7.5A	562602	RR. JCT. BOX	HAR RACK CPT LTS
F 57	17.1	5A	562259	RR. JCT. BOX	LAVATORY FLUORESCENT
F 58	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING L.H.
F 59					
F 60	17.1	10A	562407	RR. JCT. BOX	LAVATORY FAN
F 61	27.1	1A	560893	FR. JCT. BOX	INTERCOM
F 62	2.1	3A	562599	RR. JCT. BOX	PRO-LINK & FIRE ALARM
F 63	27.1	3A	560893	MON. CLARION	BACK-UP MONITOR CLARION
F 70	23.1	7.5A	562602	GALLEY PANEL	GALLEY RH CONTAINER
F 71	23.1	7.5A	562602	GALLEY PANEL	GALLEY LH CONTAINER
F 72	23.1	10A	562407	GALLEY PANEL	GALLEY REFRIGERATOR COMPRESSOR

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 73	23.1	35A	562608	GALLEY PANEL	GALLEY COFFEMAKER
F 74	23.1	7.5	560598	BAT. CPT.	GALLEY REFRIGERATOR
F 75					
F 76	20.8	1A	562597	SOUND SYS JC	DVD KARAOKE
F 77	20.8	3A	562599	SOUND SYS JC	DVD KARAOKE
F ZF1	15.1	3A	560893	FR.JCT.BOX	STEERING CONTROL

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V BATTERY
F 2	6.1	10A	562407	RR. JCT. BOX	WORLD TRANS.& EATON TRANS.12V IGNITION
F 3	7.2	20A	562605	FR. JCT. BOX	ELECTRICAL HORNS
F 4	7.2	5A	562259	FR. JCT. BOX	FIRE ALARM
F 5					
F 6	5.1	5A	562602	FR. JCT. BOX	CRUISE DECEL SW.
F 7	8.1	5A	562602	FR. JCT. BOX	PARKING BRAKE PRESSURE SW.
F 8	9.2	10A	562407	FR. JCT. BOX	CORNERING LTS
F 9	9.3	15A	562604	RR. JCT. BOX	DOCKING LTS
F 10	9.3	15A	562604	FR. JCT. BOX	FOG LTS
F 11	11.1	5A	562259	FR. JCT. BOX	FRONT SERVICE CPT LTS
F 12	11.2	10A	562407	RR. JCT. BOX	AISLE LTS
F 13	11.2	7.5A	562602	RR. JCT. BOX	EMERGENCY EXIT LTS
F 14	11.3	15A	562602	FR. JCT. BOX	DRIVER'S LTS
F 15	11.3	15A	562604	RR. JCT. BOX	READING LTS RH
F 16	11.3	15A	562604	RR. JCT. BOX	READING LTS LH
F 17	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING R.H.
F 18	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT RH
F 19	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT LH
F 20	11.3	5A	562599	FR. JCT. BOX	GENERAL & READING LTS. SW.
F 21	12.1	10A	560061	RR. JCT. BOX	PRIME PUMP
F 22	14.1	10A	562407	FR. JCT. BOX	POWER 12V OUTLET
F 23	14.1	15A	562604	FR. JCT. BOX	DRIVER'S WINDOW LIFTER
F 24	14.1	15A	562604	FR. JCT. BOX	CIGAR LIGHTER
F 25	14.1	3A	562599	FR. JCT. BOX	SUN VISOR
F 26	26.1	7.5A	562259	FR. JCT. BOX	WATER HTR WEBASTO TIMER
F 27	17.1	5A	562259	RR. JCT. BOX	GALLEY LAMP & LAVATORY NIGHT LTS.
F 28	17.1	10A	562407	RR. JCT. BOX	LAVATORY PUMP
F 29	17.1	7.5A	562602	RR. JCT. BOX	LAVATORY LTS
F 31	17.1	5A	562259	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRONIC
F 31	17.1	7.5A	562602	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRIC
F 32	11.3	5A	562259	FR. JCT. BOX	PASSENGER NO SMOKING LTS
F 33	18.1	5A	562259	FR. JCT. BOX	KNEELING SYSTEM
F 34	19.1	3A	562599	FR. JCT. BOX	LUGGAGE DOOR LOCK
F 39	22.1	20A	562605	FR. JCT. BOX	UPPER WINDSHIELD FAN AND PUMP DEFROST
F 40					
F 41					
F 42	20.5	3A			WIRELESS MIC CHARGER
F 43	1.2	3A	562599	FR. JCT. BOX	12V SIGNAL TO BATT MONITOR
F 44	1.2	3A	562599	FR. JCT. BOX	24V SIGNAL TO BATT MONITOR
F 46	24.1	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 24V SPARTAN
F 47	24.3	7.5A	562407	FR. JCT. BOX	MIRROR ADJUST & HEATED 12V RAMCO
F 48	25.2	10A	562407	RR. JCT. BOX	WHEEL CHAIR LIFT POWER CONTROL
F 49	26.1	15A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 50	26.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 51	11.2	7.5A	562602	RR. JCT. BOX	HAR RACK CPT LTS
F 57	17.1	5A	562259	RR. JCT. BOX	LAVATORY FLUORESCENT
F 58	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING L.H.
F 59					
F 60	17.1	10A	562407	RR. JCT. BOX	LAVATORY FAN
F 61	27.1	1A	560893	FR. JCT. BOX	INTERCOM
F 62	2.1	3A	562599	RR. JCT. BOX	PRO-LINK & FIRE ALARM
F 63	27.1	3A	560893	MON. CLARION	BACK-UP MONITOR CLARION
F 70	23.1	7.5A	562602	GALLEY PANEL	GALLEY RH CONTAINER
F 71	23.1	7.5A	562602	GALLEY PANEL	GALLEY LH CONTAINER
F 72	23.1	10A	562407	GALLEY PANEL	GALLEY REFRIGERATOR COMPRESSOR
F 73	23.1	35A	562608	GALLEY PANEL	GALLEY COFFEMAKER
F 74	23.1	7.5	560598	BAT. CPT.	GALLEY REFRIGERATOR
F 75					
F 76	20.8	1A	562597	SOUND SYS JC	DVD KARAOKE
F 77	20.8	3A	562599	SOUND SYS JC	DVD KARAOKE
F ZF1	15.1	3A	560893	FR.JCT.BOX	STEERING CONTROL

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION	No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V BATTERY
F 2	6.1	10A	562407	RR. JCT. BOX	WORLD TRANS.& EATON TRANS.12V IGNITION
F 3	7.2	20A	562605	FR. JCT. BOX	ELECTRICAL HORNS
F 4	7.2	5A	562259	FR. JCT. BOX	FIRE ALARM
F 5	8.1	7.5A	562602	RR. JCT. BOX	AIR DRYER
F 6	5.1	5A	562602	FR. JCT. BOX	CRUISE DECEL SW.
F 7	8.1	5A	562602	FR. JCT. BOX	PARKING BRAKE PRESSURE SW.
F 8	9.2	10A	562407	FR. JCT. BOX	CORNERING LTS
F 9	9.3	15A	562604	RR. JCT. BOX	DOCKING LTS
F 10	9.3	15A	562604	FR. JCT. BOX	FOG LTS
F 11	11.1	5A	562259	FR. JCT. BOX	FRONT SERVICE CPT LTS
F 12	11.2	10A	562407	RR. JCT. BOX	AISLE LTS
F 13	11.2	7.5A	562602	RR. JCT. BOX	EMERGENCY EXIT LTS
F 14	11.3	15A	562602	FR. JCT. BOX	DRIVER'S LTS
F 15	11.3	15A	562604	RR. JCT. BOX	READING LTS RH
F 16	11.3	15A	562604	RR. JCT. BOX	READING LTS LH
F 17	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING R.H.
F 18	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT RH
F 19	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT LH
F 20	11.3	5A	562599	FR. JCT. BOX	GENERAL & READING LTS. SW.
F 21	12.1	10A	560061	RR. JCT. BOX	PRIME PUMP
F 22	14.1	10A	562407	FR. JCT. BOX	POWER 12V OUTLET
F 23	14.1	15A	562604	FR. JCT. BOX	DRIVER'S WINDOW LIFTER
F 24	14.1	15A	562604	FR. JCT. BOX	CIGAR LIGHTER
F 25	14.1	3A	562599	FR. JCT. BOX	SUN VISOR
F 26	26.1	7.5A	562259	FR. JCT. BOX	WATER HTR WEBASTO TIMER
F 27	17.1	5A	562259	RR. JCT. BOX	GALLEY LAMP & LAVATORY NIGHT LTS.
F 28	17.1	10A	562407	RR. JCT. BOX	LAVATORY PUMP
F 29	17.1	7.5A	562602	RR. JCT. BOX	LAVATORY LTS
F 31	17.1	5A	562259	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRONIC
F 31	17.1	7.5A	562602	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRIC
F 32	11.3	5A	562259	FR. JCT. BOX	PASSENGER NO SMOKING LTS
F 33	18.1	5A	562259	FR. JCT. BOX	KNEELING SYSTEM
F 34	19.1	3A	562599	FR. JCT. BOX	LUGGAGE DOOR LOCK
F 39	22.1	20A	562605	FR. JCT. BOX	UPPER WINDSHIELD FAN AND PUMP DEFROST
F 40					
F 41					
F 42	20.5	3A			WIRELESS MIC CHARGER
F 43	1.2	3A	562599	FR. JCT. BOX	12V SIGNAL TO BATT MONITOR
F 44	1.2	3A	562599	FR. JCT. BOX	24V SIGNAL TO BATT MONITOR
F 46	24.1	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 24V SPARTAN
F 47	24.3	7.5A	562407	FR. JCT. BOX	MIRROR ADJUST & HEATED 12V RAMCO
F 48	25.2	10A	562407	RR. JCT. BOX	WHEEL CHAIR LIFT POWER CONTROL
F 49	26.1	15A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 50	26.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 51	11.2	7.5A	562602	RR. JCT. BOX	HAR RACK CPT LTS
F 57	17.1	5A	562259	RR. JCT. BOX	LAVATORY FLUORESCENT
F 58	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING L.H.
F 59					
F 60	17.1	10A	562407	RR. JCT. BOX	LAVATORY FAN
F 61	27.1	1A	560893	FR. JCT. BOX	INTERCOM
F 62	2.1	3A	562599	RR. JCT. BOX	PRO-LINK & FIRE ALARM
F 63	27.1	3A	560893	MON. CLARION	BACK-UP MONITOR CLARION
F 70	23.1	7.5A	562602	GALLEY PANEL	GALLEY RH CONTAINER
F 71	23.1	7.5A	562602	GALLEY PANEL	GALLEY LH CONTAINER
F 72	23.1	10A	562407	GALLEY PANEL	GALLEY REFRIGERATOR COMPRESSOR
F 73	23.1	35A	562608	GALLEY PANEL	GALLEY COFFEMAKER
F 74	23.1	7.5	560598	BAT. CPT.	GALLEY REFRIGERATOR
F 75					
F 76	20.8	1A	562597	SOUND SYS JC	DVD KARAOKE
F 77	20.8	3A	562599	SOUND SYS JC	DVD KARAOKE
F ZF1	15.1	3A	560893	FR.JCT.BOX	STEERING CONTROL

FUSES CODE


No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION

LOGIC GATE

TRUTH TABLE


AND GATE



INPUT		OUT
A	B	C
Ø	Ø	Ø
Ø	1	Ø
1	Ø	Ø
1	1	1

*OUTPUT IS 1 WHEN ALL INPUT IS 1


NAND GATE



INPUT		OUT
A	B	C
Ø	Ø	1
Ø	1	1
1	Ø	1
1	1	Ø

* OUTPUT IS Ø WHEN ALL INPUT IS Ø


OR GATE



INPUT		OUT
A	B	C
Ø	Ø	Ø
Ø	1	1
1	Ø	1
1	1	1

* OUTPUT IS 1 WHEN EITHER INPUT IS 1


NOR GATE



INPUT		OUT
A	B	C
Ø	Ø	1
Ø	1	Ø
1	Ø	Ø
1	1	Ø

* OUTPUT IS 1 WHEN NONE INPUT IS 1

NOT GATE



INPUT	OUT
A	B
Ø	1
1	Ø

* OUTPUT IS REVERSE OF INPUT

ON-DELAY



XX SECOND
AFTER A=1
THAN B=1

OFF-DELAY




XX SECOND
AFTER A=Ø
THAN B=Ø

INPUT OR OUTPUT LEVEL
LEVEL 1 = 12 VOLTS OR 24 VOLTS
LEVEL Ø = Ø VOLT (TO GROUND)

LOGIC GATE

TRUTH TABLE


AND GATE



INPUT		OUT
A	B	C
Ø	Ø	Ø
Ø	1	Ø
1	Ø	Ø
1	1	1

*OUTPUT IS 1 WHEN ALL INPUT IS 1


NAND GATE



INPUT		OUT
A	B	C
Ø	Ø	1
Ø	1	1
1	Ø	1
1	1	Ø

* OUTPUT IS Ø WHEN ALL INPUT IS 1


OR GATE



INPUT		OUT
A	B	C
Ø	Ø	Ø
Ø	1	1
1	Ø	1
1	1	1

* OUTPUT IS 1 WHEN EITHER INPUT IS 1


NOR GATE



INPUT		OUT
A	B	C
Ø	Ø	1
Ø	1	Ø
1	Ø	Ø
1	1	Ø

* OUTPUT IS 1 WHEN NONE INPUT IS 1

NOT GATE



INPUT	OUT
A	B
Ø	1
1	Ø

* OUTPUT IS REVERSE OF INPUT

ON-DELAY



XX SECOND
AFTER A=1
THAN B=1

OFF-DELAY




XX SECOND
AFTER A=Ø
THAN B=Ø


INPUT OR OUTPUT LEVEL

LEVEL 1 = 12 VOLTS OR 24 VOLTS


LEVEL Ø = Ø VOLT (TO GROUND)

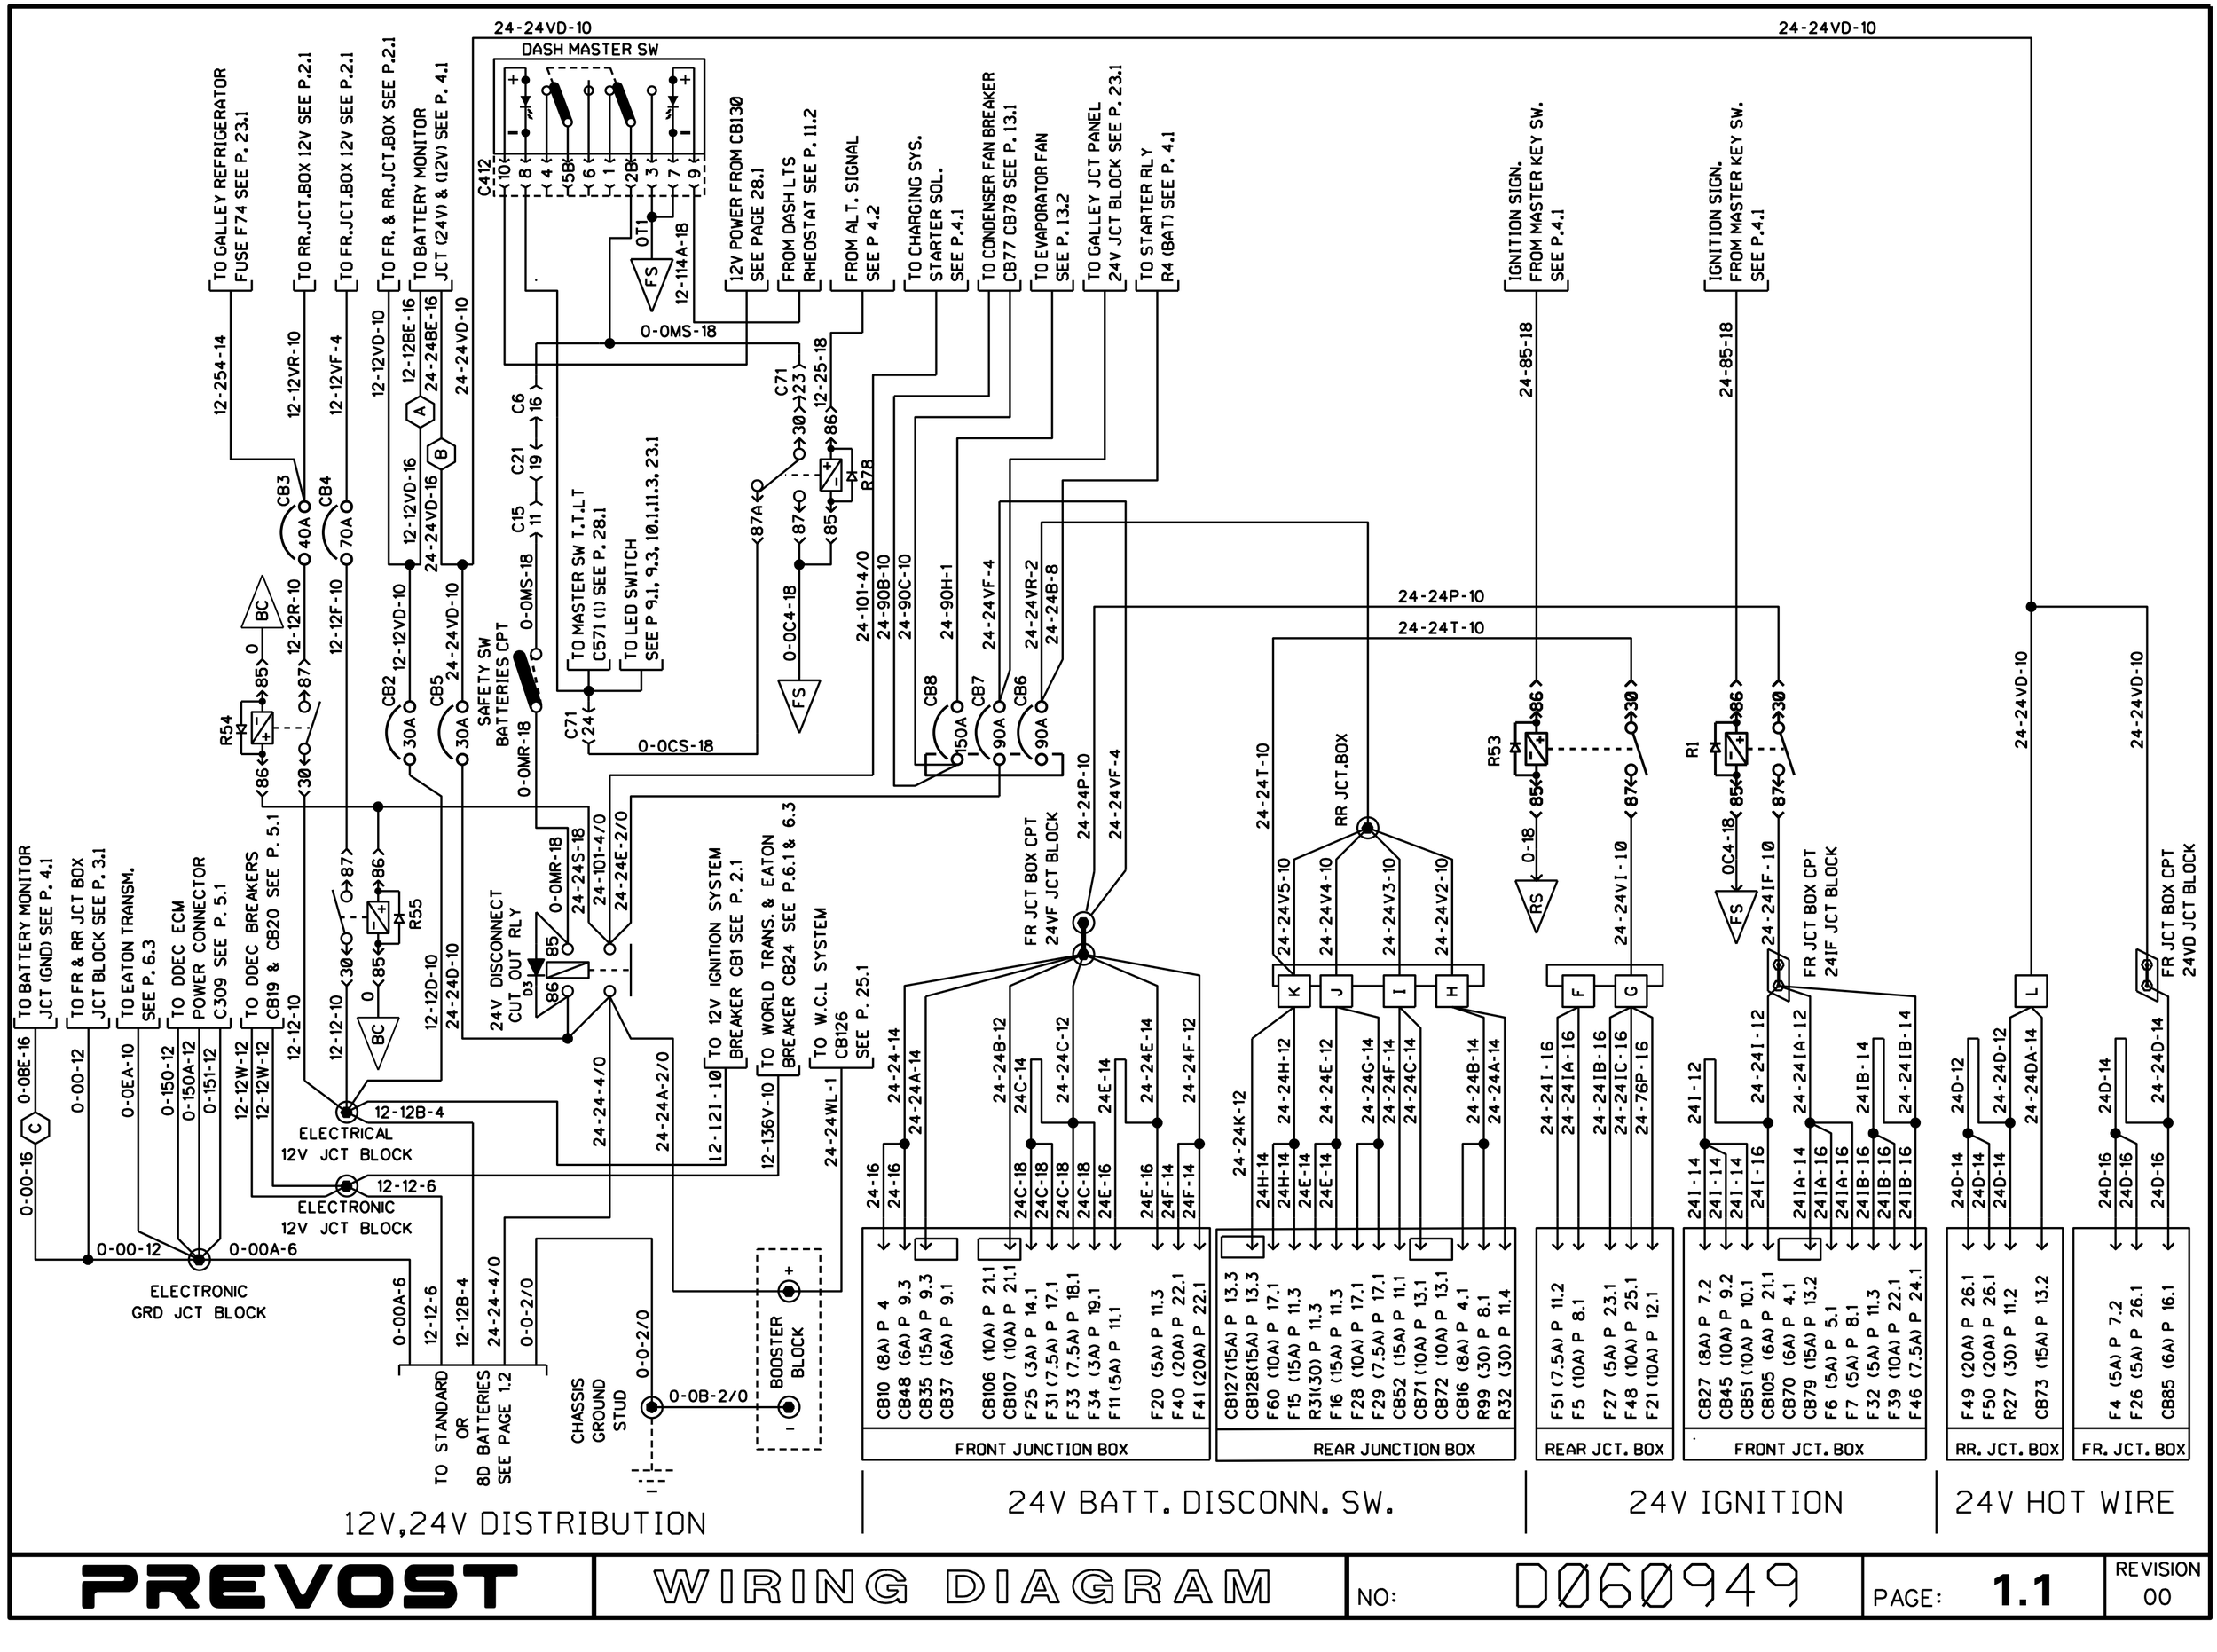


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 1.1	REVISION 00

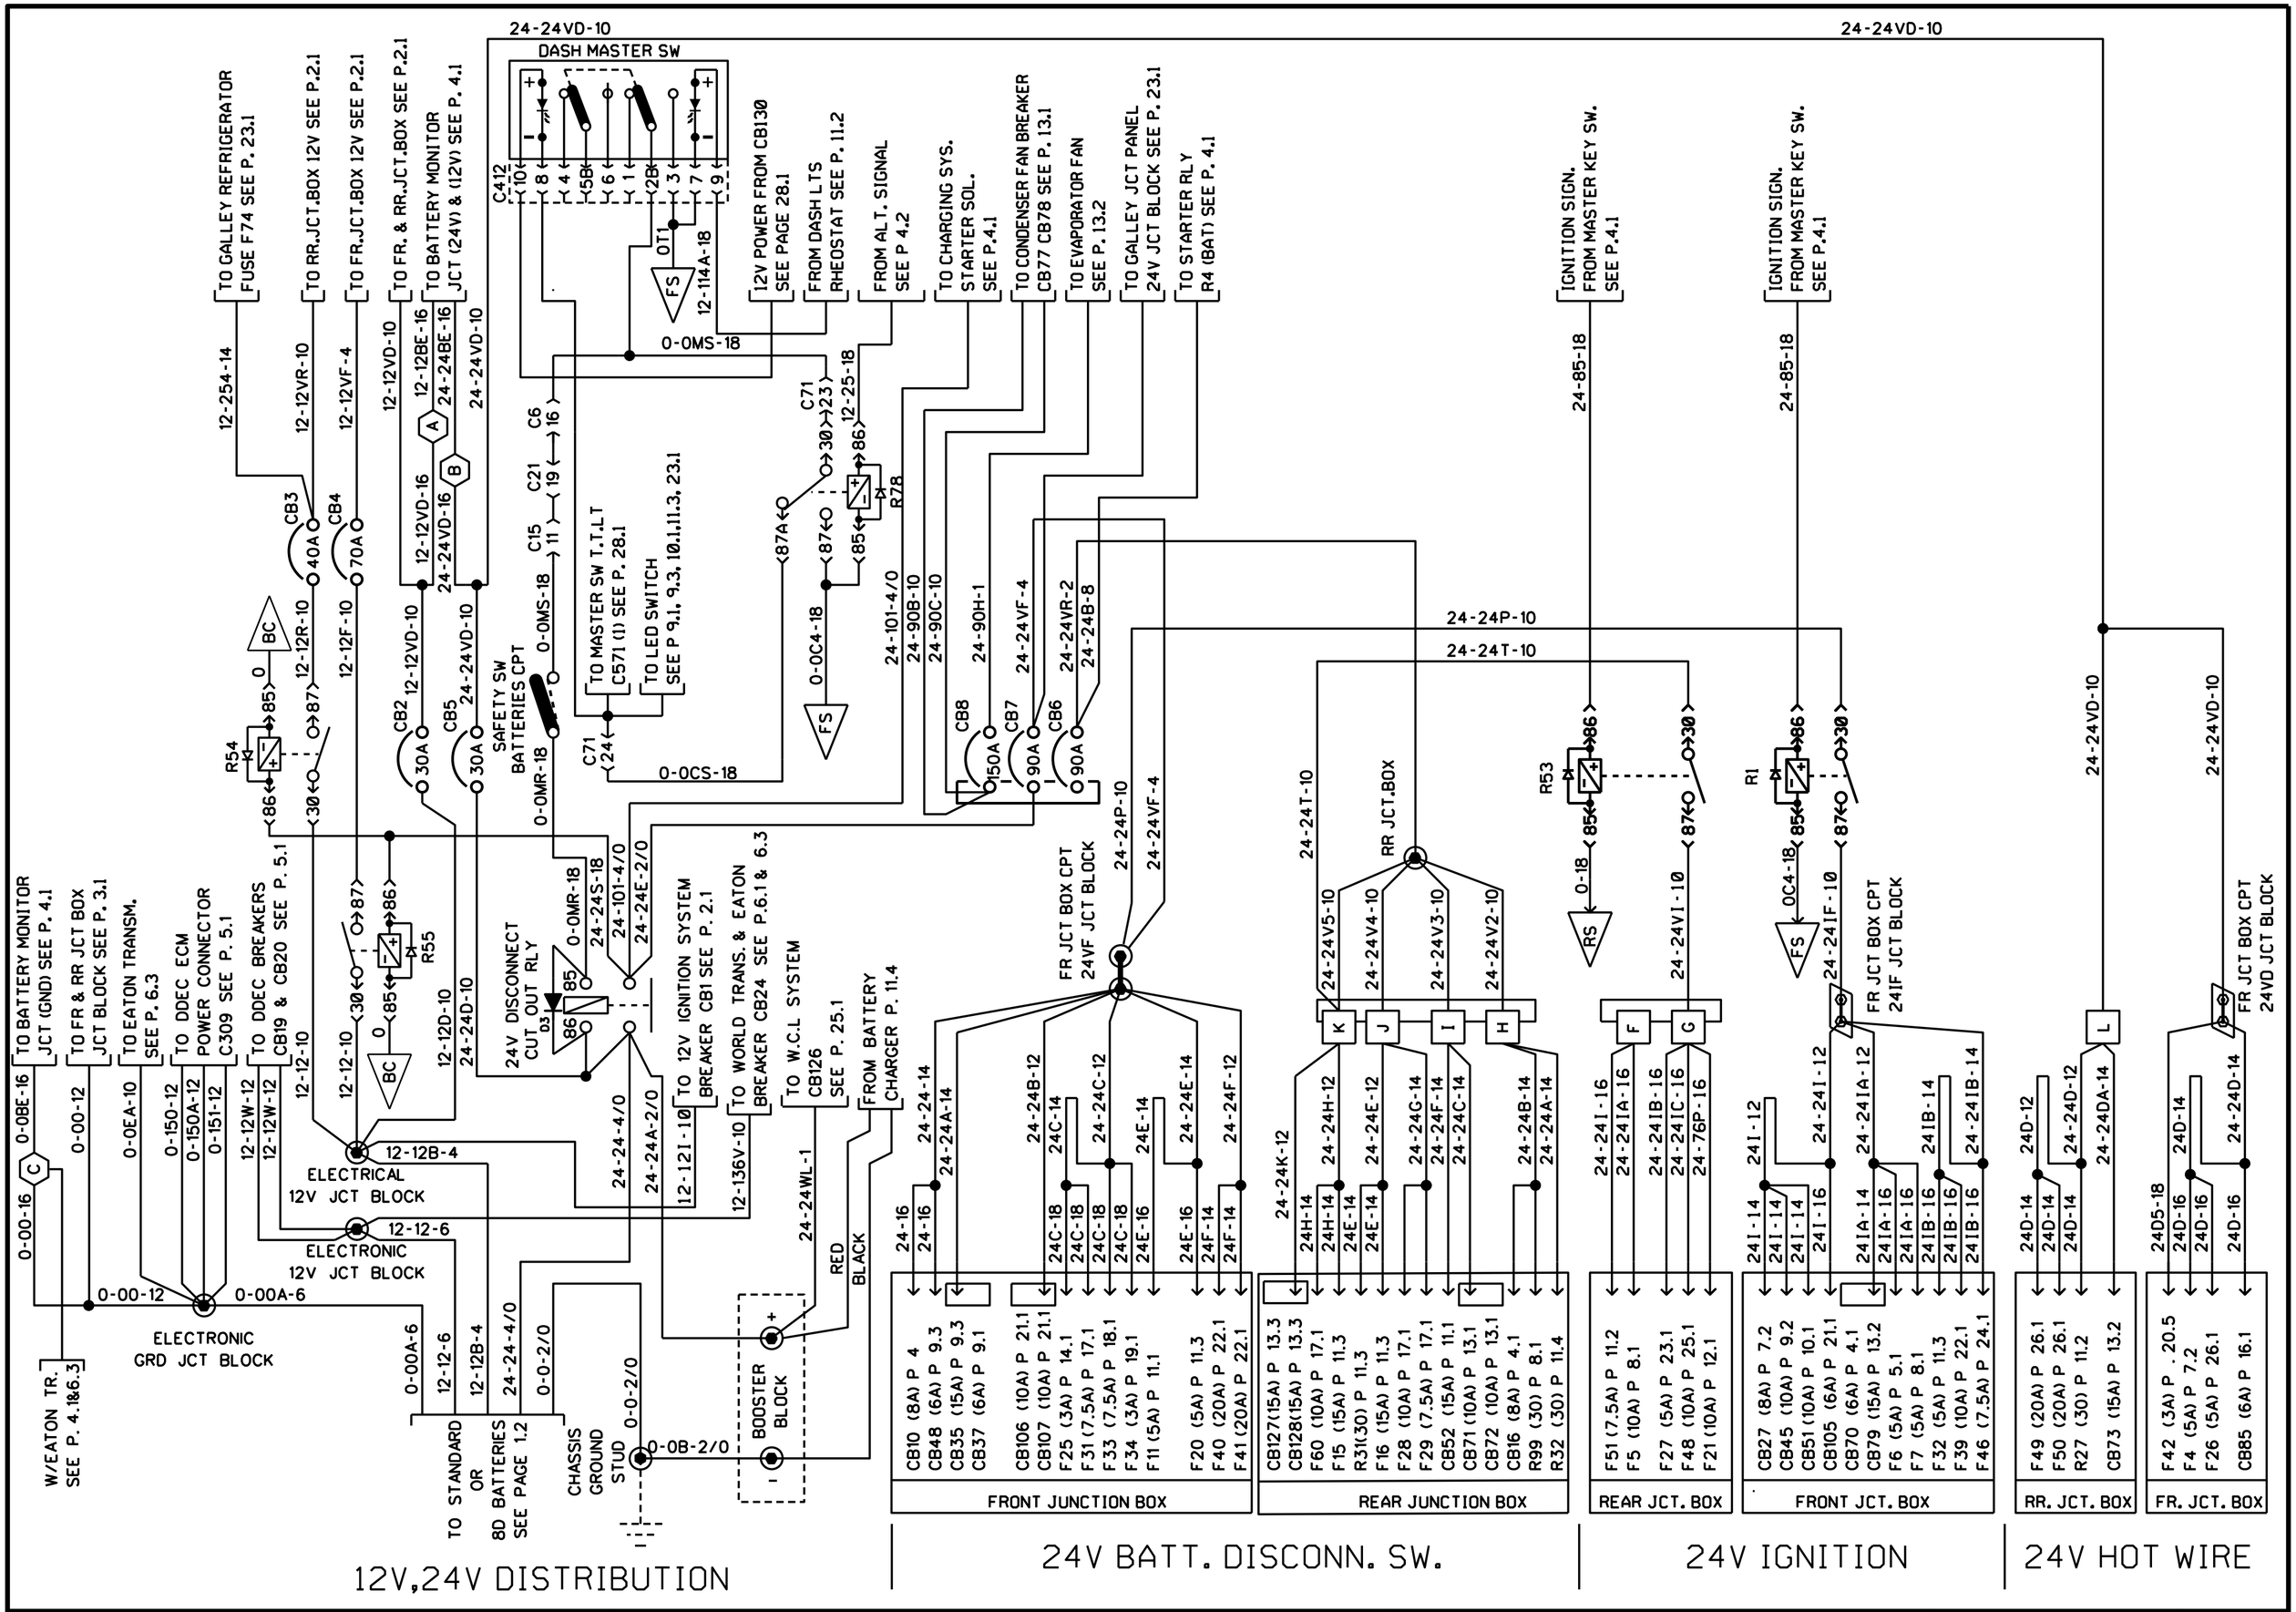


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 1.1	REVISION 04

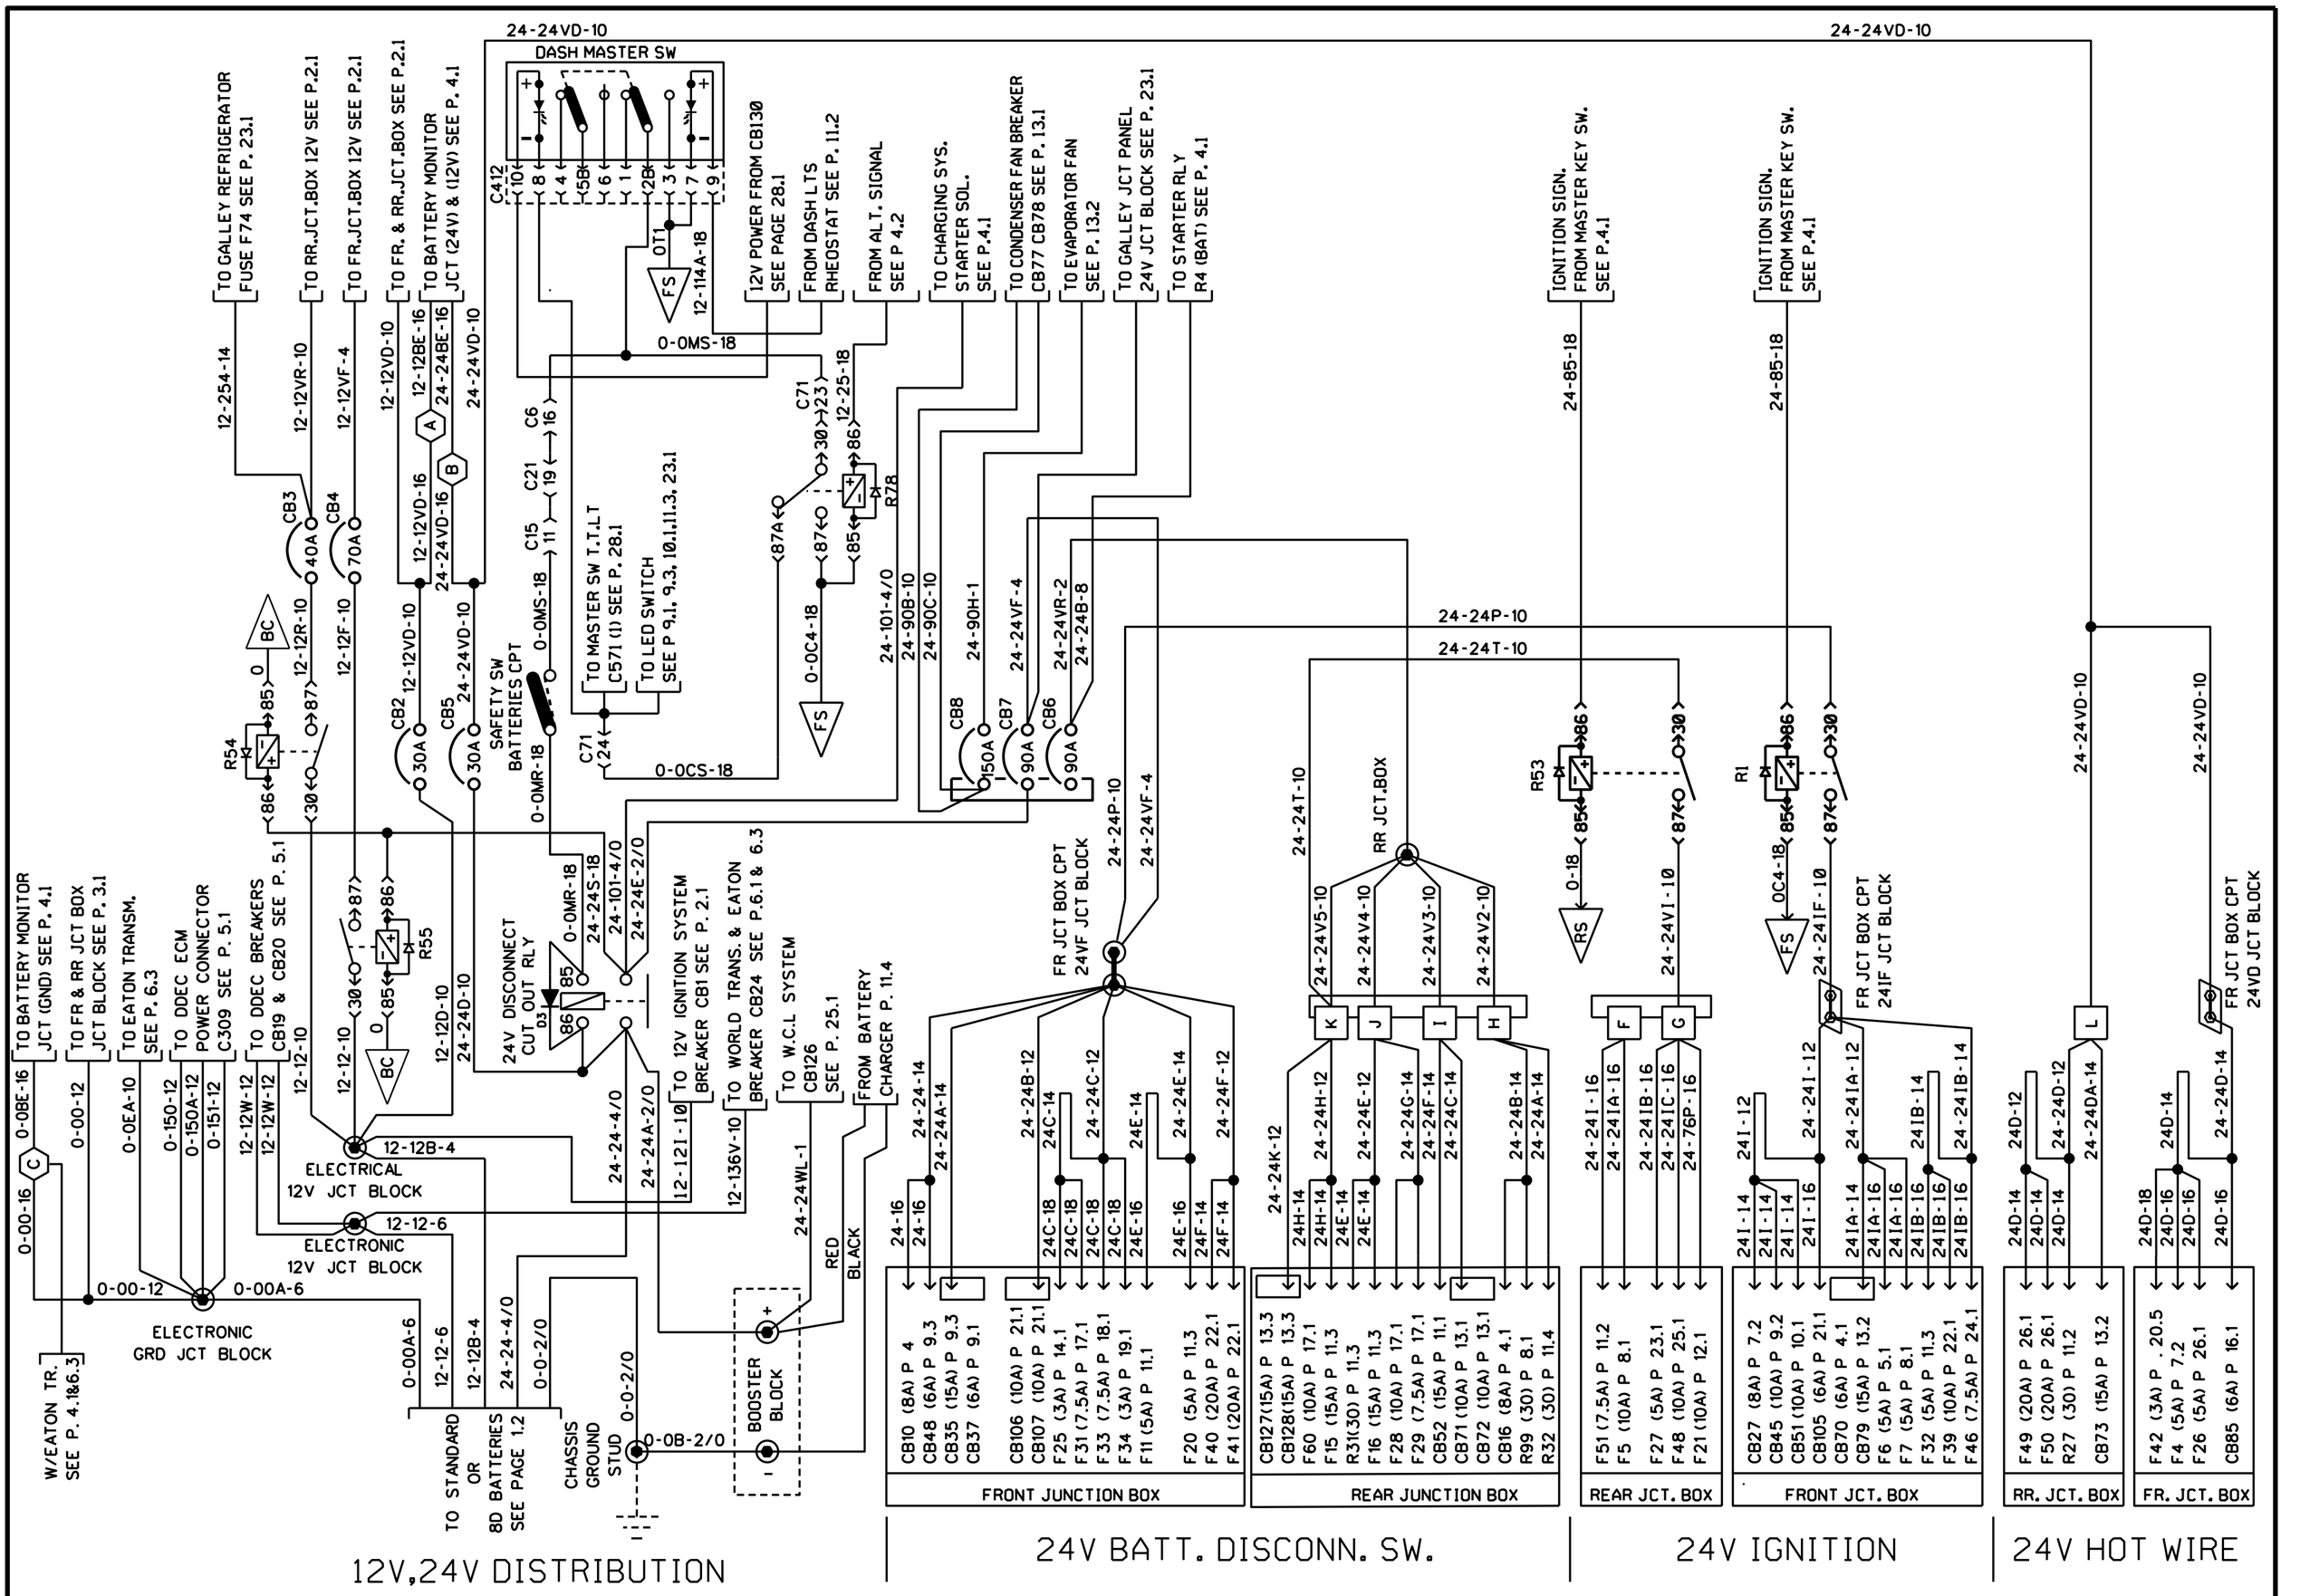


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 1.1	REVISION 07

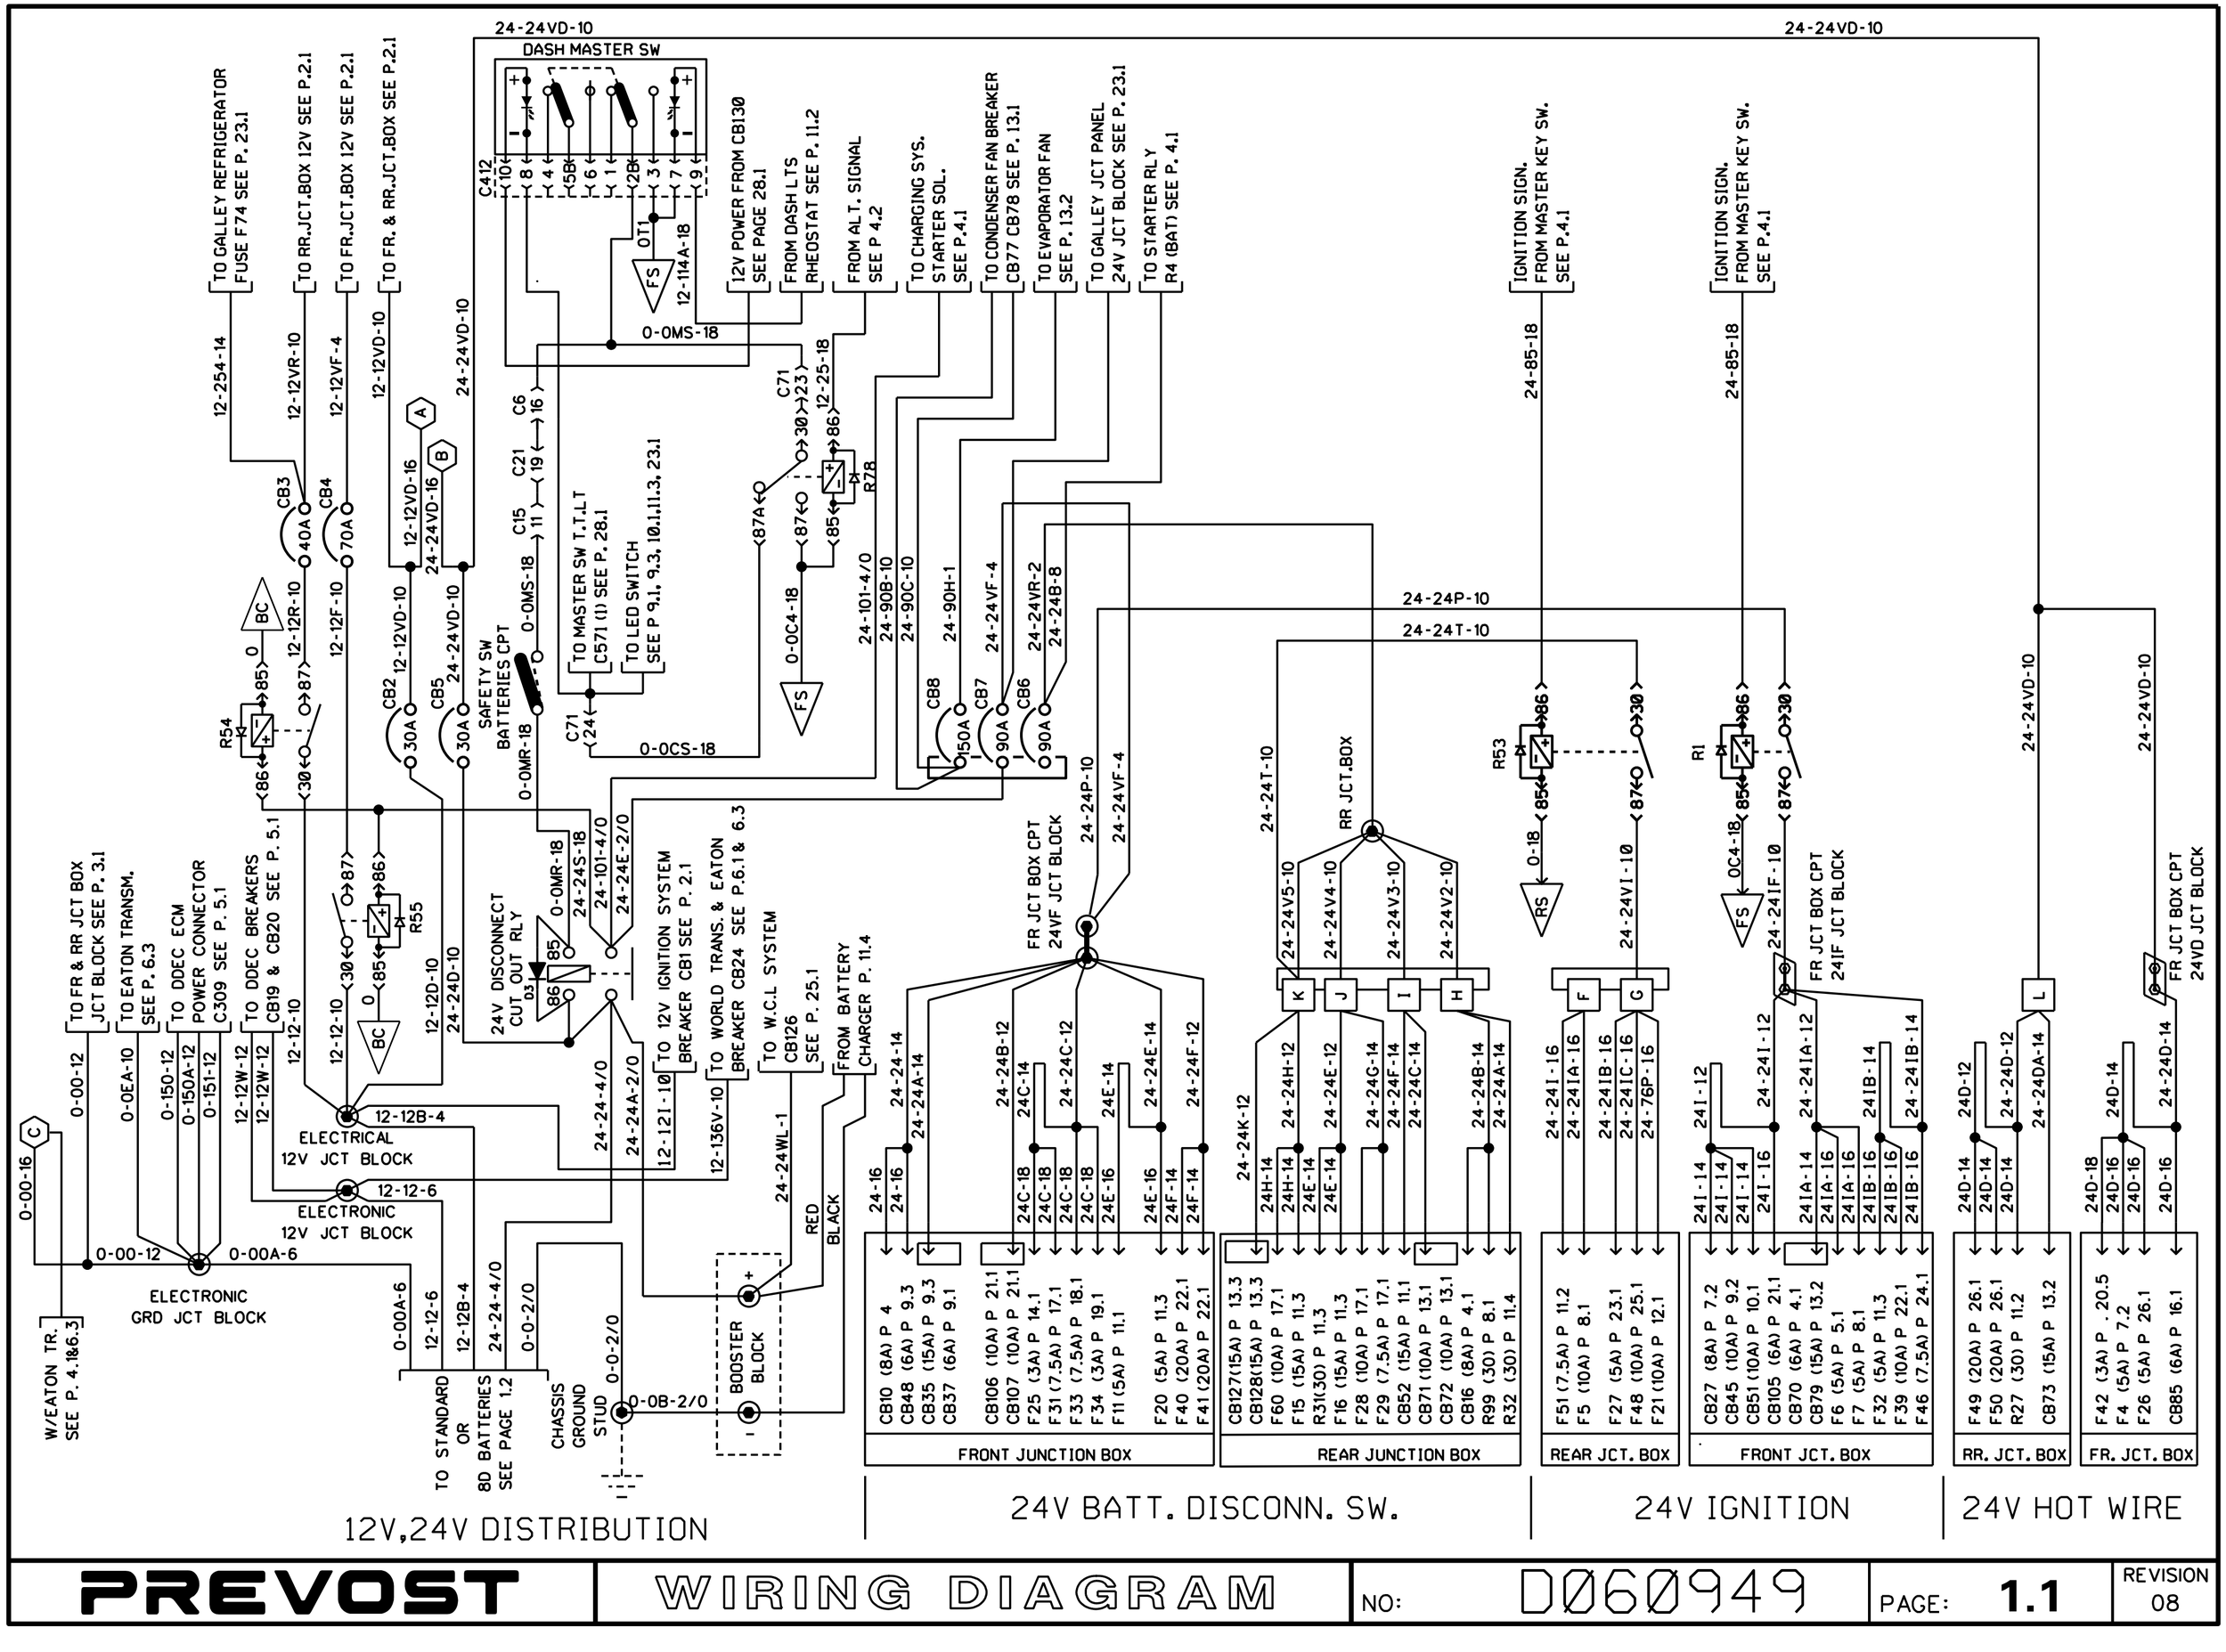

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 1.1	REVISION 08

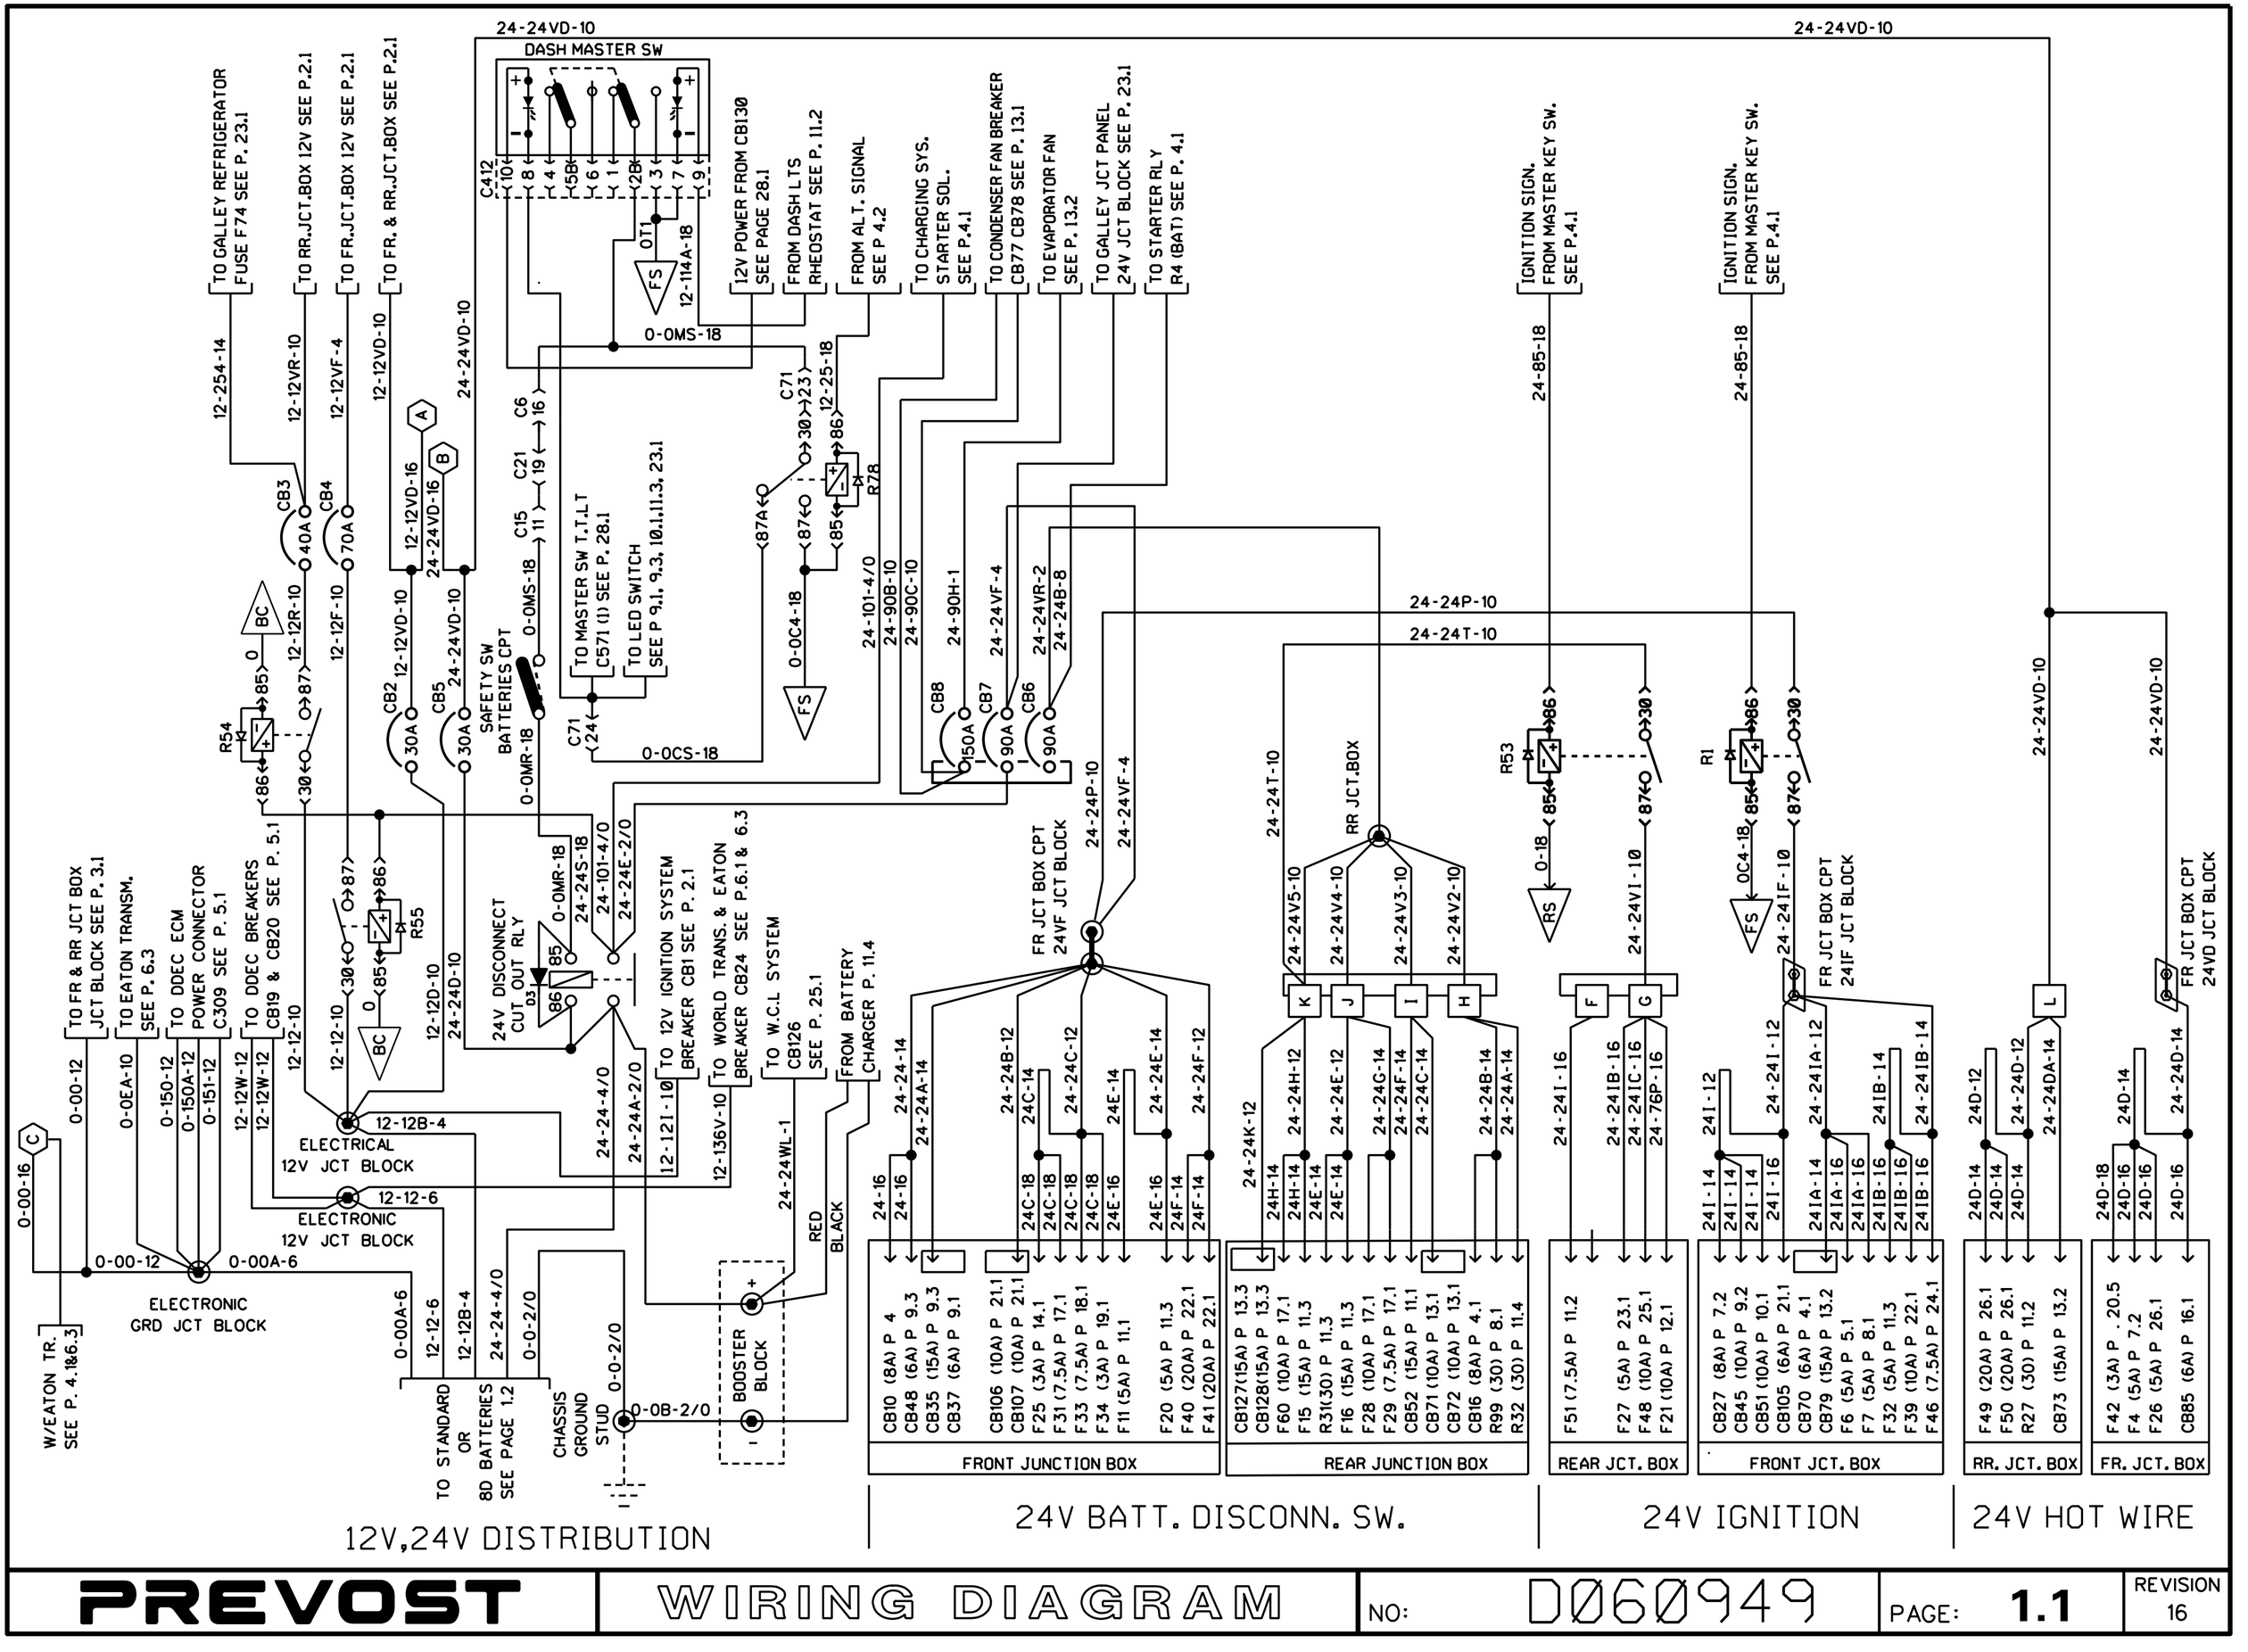
24-24VD-10
DASH MASTER SW
C412
I2V POWER FROM CB130 SEE PAGE 28.1
FROM DASH LTS RHEOSTAT SEE P. 11.2
FROM ALT. SIGNAL SEE P 4.2
TO CHARGING SYS. STARTER SOL. SEE P.4.1
TO CONDENSER FAN BREAKER CB77 CB78 SEE P. 13.1
TO EVAPORATOR FAN SEE P. 13.2
TO GALLEY JCT PANEL 24V JCT BLOCK SEE P. 23.1
TO STARTER RLY R4 (BAT) SEE P. 4.1
IGNITION SIGN. FROM MASTER KEY SW. SEE P.4.1
TO GALLEY REFRIGERATOR FUSE F74 SEE P. 23.1
TO RR.JCT.BOX I2V SEE P.2.1
TO FR.JCT.BOX I2V SEE P.2.1
TO FR. & RR.JCT.BOX SEE P.2.1
12-12VD-10
12-12VD-16
24-24VD-16
12-12VR-10
12-12VF-4
12-254-14
12-12R-10
12-12F-10
12-12VD-10
24-12VD-10
CB1
CB2
CB3
CB4
CB5
CB6
CB7
CB8
40A
70A
30A
90A
150A
R54
R55
R53
R1
R78
BC
SAFETY SW BATTERIES CPT
0-0MR-18
0-0MS-18
0-0C4-18
0-0CS-18
TO MASTER SW T.T.L.T C571 (1) SEE P. 28.1
TO LED SWITCH SEE P 9.1, 9.3, 10.1, 11.3, 23.1
C71
C15
C21
C6
12-25-18
87A
87
85
86
30
24-101-4/0
24-90B-10
24-90C-10
24-90H-1
24-24VF-4
24-24VR-2
24-24B-8
24-24T-10
24-24P-10
24-85-18
FS
12-114A-18
0T1
0-0MS-18
TO 12V IGNITION SYSTEM BREAKER CB1 SEE P. 2.1
TO WORLD TRANS. & EATON BREAKER CB24 SEE P.6.1 & 6.3
TO W.C.L SYSTEM CB126 SEE P. 25.1
FROM BATTERY CHARGER P. 11.4
24-24S-18
24-24E-2/0
24-24-4/0
24-24A-2/0
12-121-10
12-136V-10
24-24WL-1
RED
BLACK
24V DISCONNECT CUT OUT RLY
D3
0-0MR-18
12-12D-10
24-24D-10
TO FR JCT BOX CPT 24VF JCT BLOCK
FR JCT BOX CPT 24VR JCT BLOCK
RR JCT.BOX
24-24V5-10
24-24V4-10
24-24V3-10
24-24V2-10
24-24K-12
24H-14
24-24H-12
24E-14
24-24E-12
24-24G-14
24-24F-14
24-24C-14
24-24B-14
24-24A-14
24-24E-14
24-24F-12
24-24-14
24-24A-14
24-24B-12
24C-14
24-24C-12
24C-18
24E-16
24F-14
24F-12
24-16
0-18
RS
0C4-18
FS
24-24I-10
24-24IF-10
FR JCT BOX CPT 24IF JCT BLOCK
24-24VD-10
24-24I-12
24-24IA-12
24I-14
24I-16
24IA-14
24IA-16
24IB-14
24IB-16
24-241-16
24-241B-16
24-241C-16
24-76P-16
24D-12
24D-14
24D-16
24-24D-12
24-24D-14
24-24DA-14
FR JCT BOX CPT 24VD JCT BLOCK
TO FR & RR JCT BOX JCT BLOCK SEE P. 3.1
TO EATON TRANSM. SEE P. 6.3
TO DDEC ECM POWER CONNECTOR C309 SEE P. 5.1
TO DDEC BREAKERS CB19 & CB20 SEE P. 5.1
0-00-12
0-0EA-10
0-150-12
0-150A-12
0-151-12
12-12W-12
12-12-10
12-12-6
12-12B-4
ELECTRICAL 12V JCT BLOCK
ELECTRONIC 12V JCT BLOCK
0-00-16
0-00A-6
ELECTRONIC GRD JCT BLOCK
W/EATON TR. SEE P. 4.1&6.3
TO STANDARD OR 8D BATTERIES SEE PAGE 1.2
CHASSIS GROUND STUD
0-0-2/0
0-0B-2/0
BOOSTER BLOCK
CB10 (8A) P 4
CB48 (6A) P 9.3
CB35 (15A) P 9.3
CB37 (6A) P 9.1
CB106 (10A) P 21.1
CB107 (10A) P 21.1
F25 (3A) P 14.1
F31 (7.5A) P 17.1
F33 (7.5A) P 18.1
F34 (3A) P 19.1
F11 (5A) P 11.1
F20 (5A) P 11.3
F40 (20A) P 22.1
F41 (20A) P 22.1
FRONT JUNCTION BOX
CB127(15A) P 13.3
CB128(15A) P 13.3
F60 (10A) P 17.1
F15 (15A) P 11.3
R31(30) P 11.3
F16 (15A) P 11.3
F28 (10A) P 17.1
F29 (7.5A) P 17.1
CB52 (15A) P 11.1
CB71 (10A) P 13.1
CB72 (10A) P 13.1
CB16 (8A) P 4.1
R99 (30) P 8.1
R32 (30) P 11.4
REAR JUNCTION BOX
F51 (7.5A) P 11.2
F27 (5A) P 23.1
F48 (10A) P 25.1
F21 (10A) P 12.1
REAR JCT. BOX
CB27 (8A) P 7.2
CB45 (10A) P 9.2
CB51 (10A) P 10.1
CB105 (6A) P 21.1
CB70 (6A) P 4.1
CB79 (15A) P 13.2
F6 (5A) P 5.1
F7 (5A) P 8.1
F32 (5A) P 11.3
F39 (10A) P 22.1
F46 (7.5A) P 24.1
FRONT JCT. BOX
F49 (20A) P 26.1
F50 (20A) P 26.1
R27 (30) P 11.2
CB73 (15A) P 13.2
RR. JCT. BOX
F42 (3A) P . 20.5
F4 (5A) P 7.2
F26 (5A) P 26.1
CB85 (6A) P 16.1
FR. JCT. BOX
12V,24V DISTRIBUTION
24V BATT. DISCONN. SW.
24V IGNITION
24V HOT WIRE

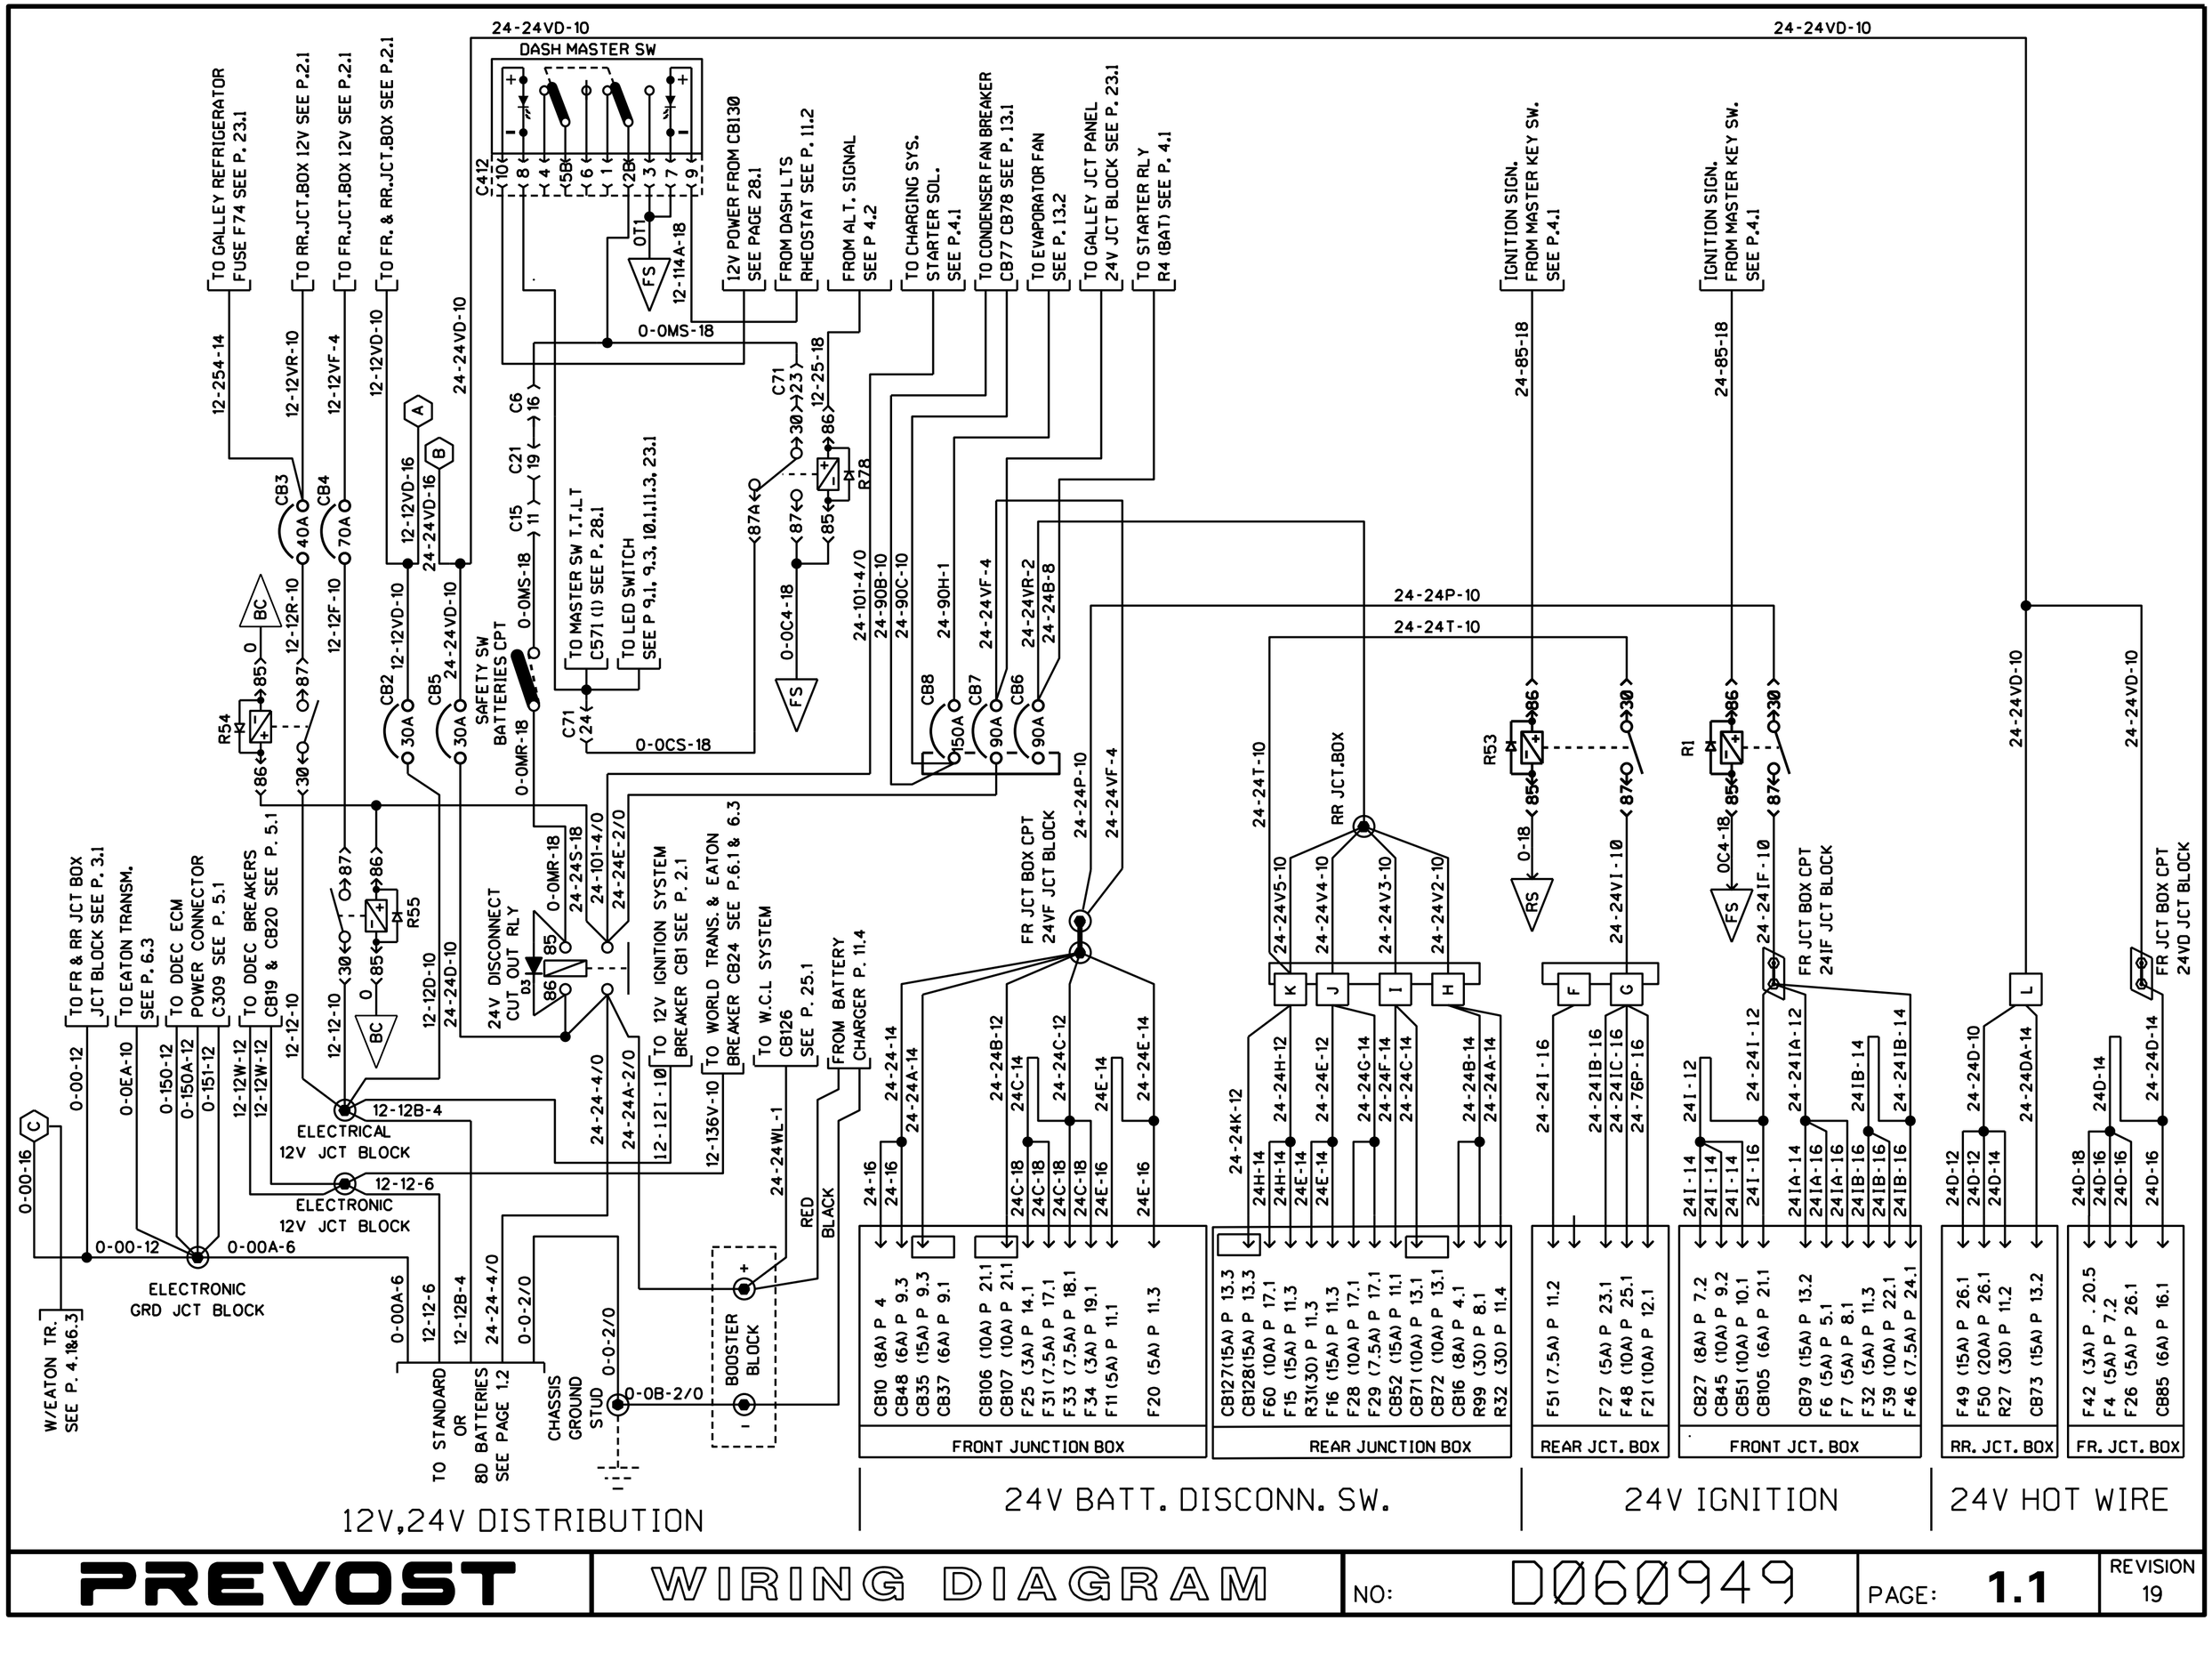


PREVOST


WIRING DIAGRAM

NO: D060949


PAGE: 1.1

REVISION 19

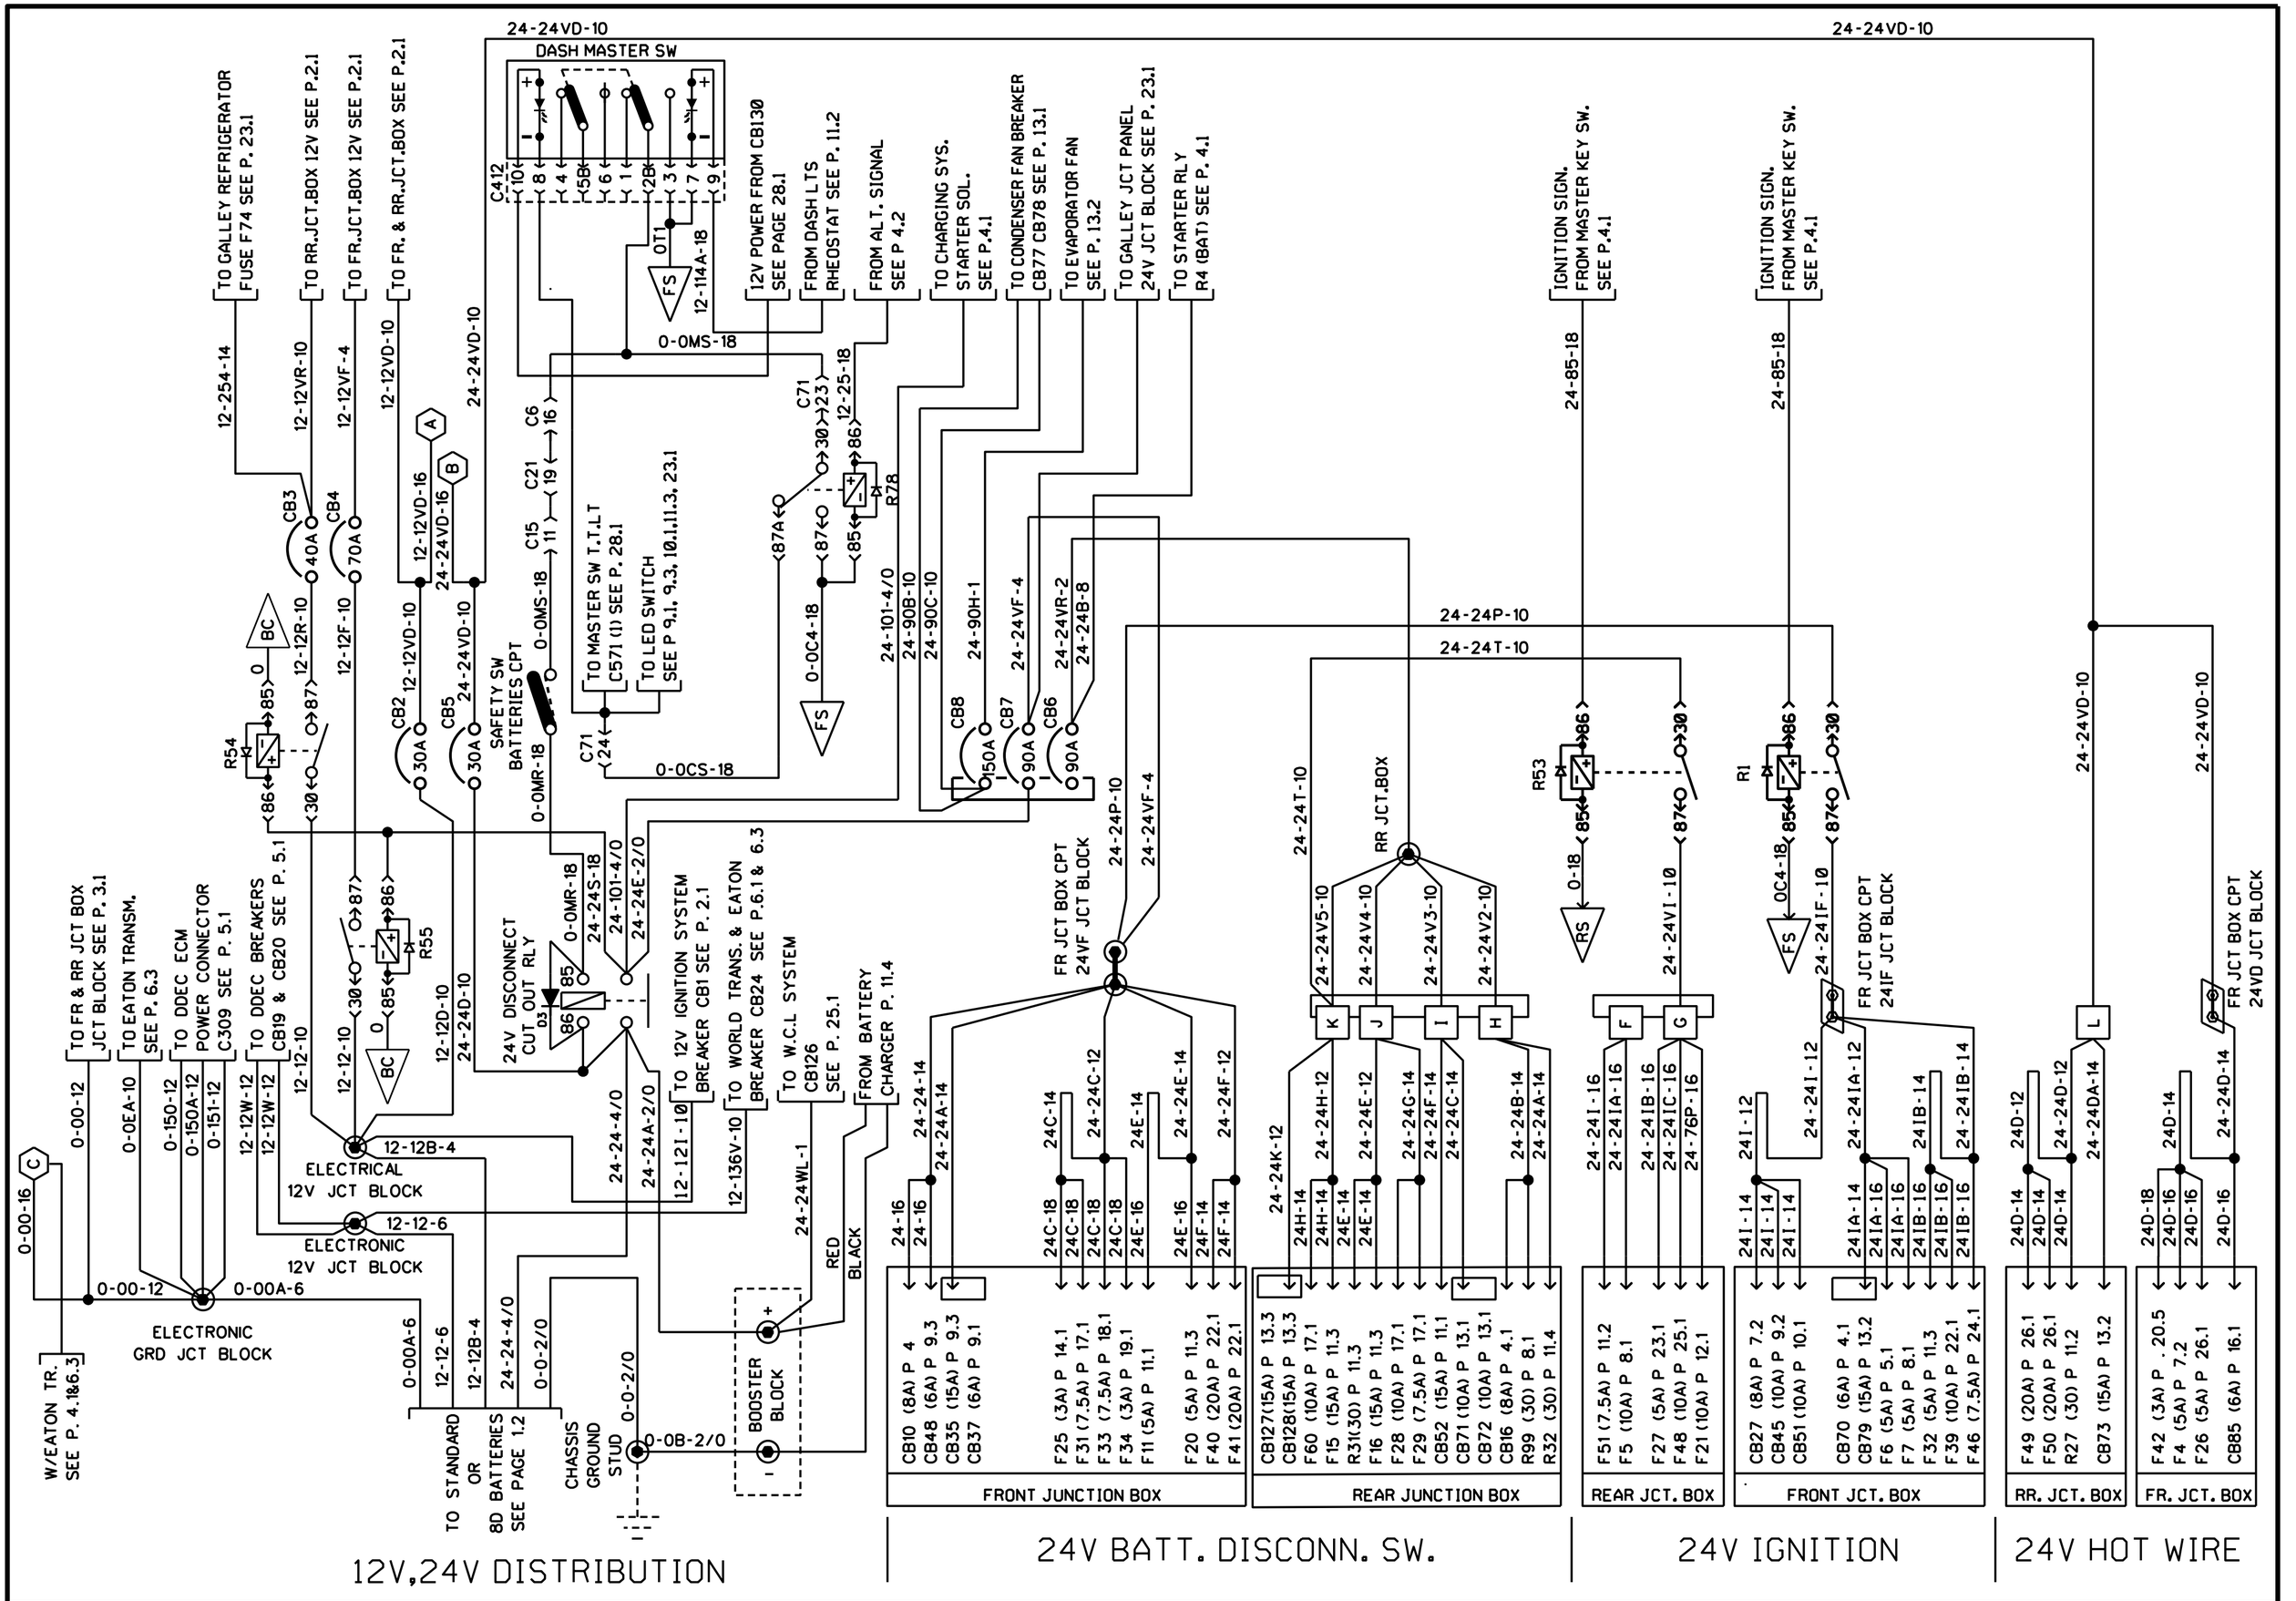

12V,24V DISTRIBUTION
24V BATT. DISCONN. SW.
24V IGNITION
24V HOT WIRE
DASH MASTER SW
SAFETY SW BATTERIES CPT
ELECTRICAL 12V JCT BLOCK
ELECTRONIC 12V JCT BLOCK
ELECTRONIC GRD JCT BLOCK
BOOSTER BLOCK
CHASSIS GROUND STUD
24V DISCONNECT CUT OUT RLY
FRONT JUNCTION BOX
REAR JUNCTION BOX
FRONT JCT. BOX
REAR JCT. BOX
FR. JCT. BOX
RR. JCT. BOX
FR JCT BOX CPT 24VF JCT BLOCK
RR JCT.BOX
FR JCT BOX CPT 24VD JCT BLOCK
FR JCT BOX CPT 24IF JCT BLOCK
TO GALLEY REFRIGERATOR FUSE F74 SEE P. 23.1
TO RR.JCT.BOX 12V SEE P.2.1
TO FR.JCT.BOX 12V SEE P.2.1
TO FR. & RR.JCT.BOX SEE P.2.1
I2V POWER FROM CB130 SEE PAGE 28.1
FROM DASH LTS RHEOSTAT SEE P. 11.2
FROM ALT. SIGNAL SEE P. 4.2
TO CHARGING SYS. STARTER SOL. SEE P.4.1
TO CONDENSER FAN BREAKER CB77 CB78 SEE P. 13.1
TO EVAPORATOR FAN SEE P. 13.2
TO GALLEY JCT PANEL 24V JCT BLOCK SEE P. 23.1
TO STARTER RLY R4 (BAT) SEE P. 4.1
IGNITION SIGN. FROM MASTER KEY SW. SEE P.4.1
TO MASTER SW T.T.L.T C571 (1) SEE P. 28.1
TO LED SWITCH SEE P 9.1, 9.3, 10.1, 11.3, 23.1
TO 12V IGNITION SYSTEM BREAKER CB1 SEE P. 2.1
TO WORLD TRANS. & EATON BREAKER CB24 SEE P.6.1 & 6.3
TO W.C.L SYSTEM CB126 SEE P. 25.1
FROM BATTERY CHARGER P. 11.4
TO FR & RR JCT BOX JCT BLOCK SEE P. 3.1
TO EATON TRANSM. SEE P. 6.3
TO DDEC ECM POWER CONNECTOR C309 SEE P. 5.1
TO DDEC BREAKERS CB19 & CB20 SEE P. 5.1
W/EATON TR. SEE P. 4.1&6.3
TO STANDARD OR 8D BATTERIES SEE PAGE 1.2
24-24VD-10
12-12VD-10
12-12VD-16
24-24VD-16
12-12VR-10
12-12F-10
12-12VF-4
12-254-14
12-12R-10
12-12W-10
12-12W-12
12-12-10
12-12D-10
24-12D-10
24-24D-10
0-00-12
0-00-16
0-00A-6
0-0EA-10
0-150-12
0-150A-12
0-151-12
0-0MS-18
0-0MR-18
0-0CS-18
0-0C4-18
0-0OMR-18
0-0-2/0
0-0B-2/0
12-12B-4
12-12-6
12-136V-10
12-121-10
24-24A-2/0
24-24-4/0
24-24WL-1
24-101-4/0
24-90B-10
24-90C-10
24-90H-1
24-24VF-4
24-24VR-2
24-24B-8
24-24P-10
24-24T-10
24-24S-18
24-24E-2/0
24-85-18
24-24V5-10
24-24V4-10
24-24V3-10
24-24V2-10
24-24K-12
24-24H-12
24-24E-12
24-24G-14
24-24F-14
24-24C-14
24-24B-14
24-24A-14
24-24E-14
24-24C-12
24-24F-12
24-24A-14
24-24I-12
24-24IA-12
24-24IB-14
24-24I-10
24-24IF-10
24-24VI-10
24-241-16
24-241A-16
24-241B-16
24-241C-16
24-76P-16
24-24DA-14
24-24D-12
24-24D-14
24-24D-16
24-24D-18
24-16
24-24A-14
24C-14
24C-18
24C-12
24E-14
24E-16
24F-14
24F-12
24H-14
24H-12
24I-14
24I-12
241A-14
241A-16
241B-14
241B-16
24D-12
24D-14
24D-16
24D-18
C412
C71
C6
C21
C15
CB1
CB2
CB3
CB4
CB5
CB6
CB7
CB8
R54
R78
R53
R1
R55
OT1
12-114A-18
CB10 (8A) P 4
CB48 (6A) P 9.3
CB35 (15A) P 9.3
CB37 (6A) P 9.1
F25 (3A) P 14.1
F31 (7.5A) P 17.1
F33 (7.5A) P 18.1
F34 (3A) P 19.1
F11 (5A) P 11.1
F20 (5A) P 11.3
F40 (20A) P 22.1
F41 (20A) P 22.1
CB127(15A) P 13.3
CB128(15A) P 13.3
F60 (10A) P 17.1
F15 (15A) P 11.3
R31(30) P 11.3
F16 (15A) P 11.3
F28 (10A) P 17.1
F29 (7.5A) P 17.1
CB52 (15A) P 11.1
CB71 (10A) P 13.1
CB72 (10A) P 13.1
CB16 (8A) P 4.1
R99 (30) P 8.1
R32 (30) P 11.4
F51 (7.5A) P 11.2
F5 (10A) P 8.1
F27 (5A) P 23.1
F48 (10A) P 25.1
F21 (10A) P 12.1
CB27 (8A) P 7.2
CB45 (10A) P 9.2
CB51 (10A) P 10.1
CB70 (6A) P 4.1
CB79 (15A) P 13.2
F6 (5A) P 5.1
F7 (5A) P 8.1
F32 (5A) P 11.3
F39 (10A) P 22.1
F46 (7.5A) P 24.1
F49 (20A) P 26.1
F50 (20A) P 26.1
R27 (30) P 11.2
CB73 (15A) P 13.2
F42 (3A) P . 20.5
F4 (5A) P 7.2
F26 (5A) P 26.1
CB85 (6A) P 16.1
RED
BLACK

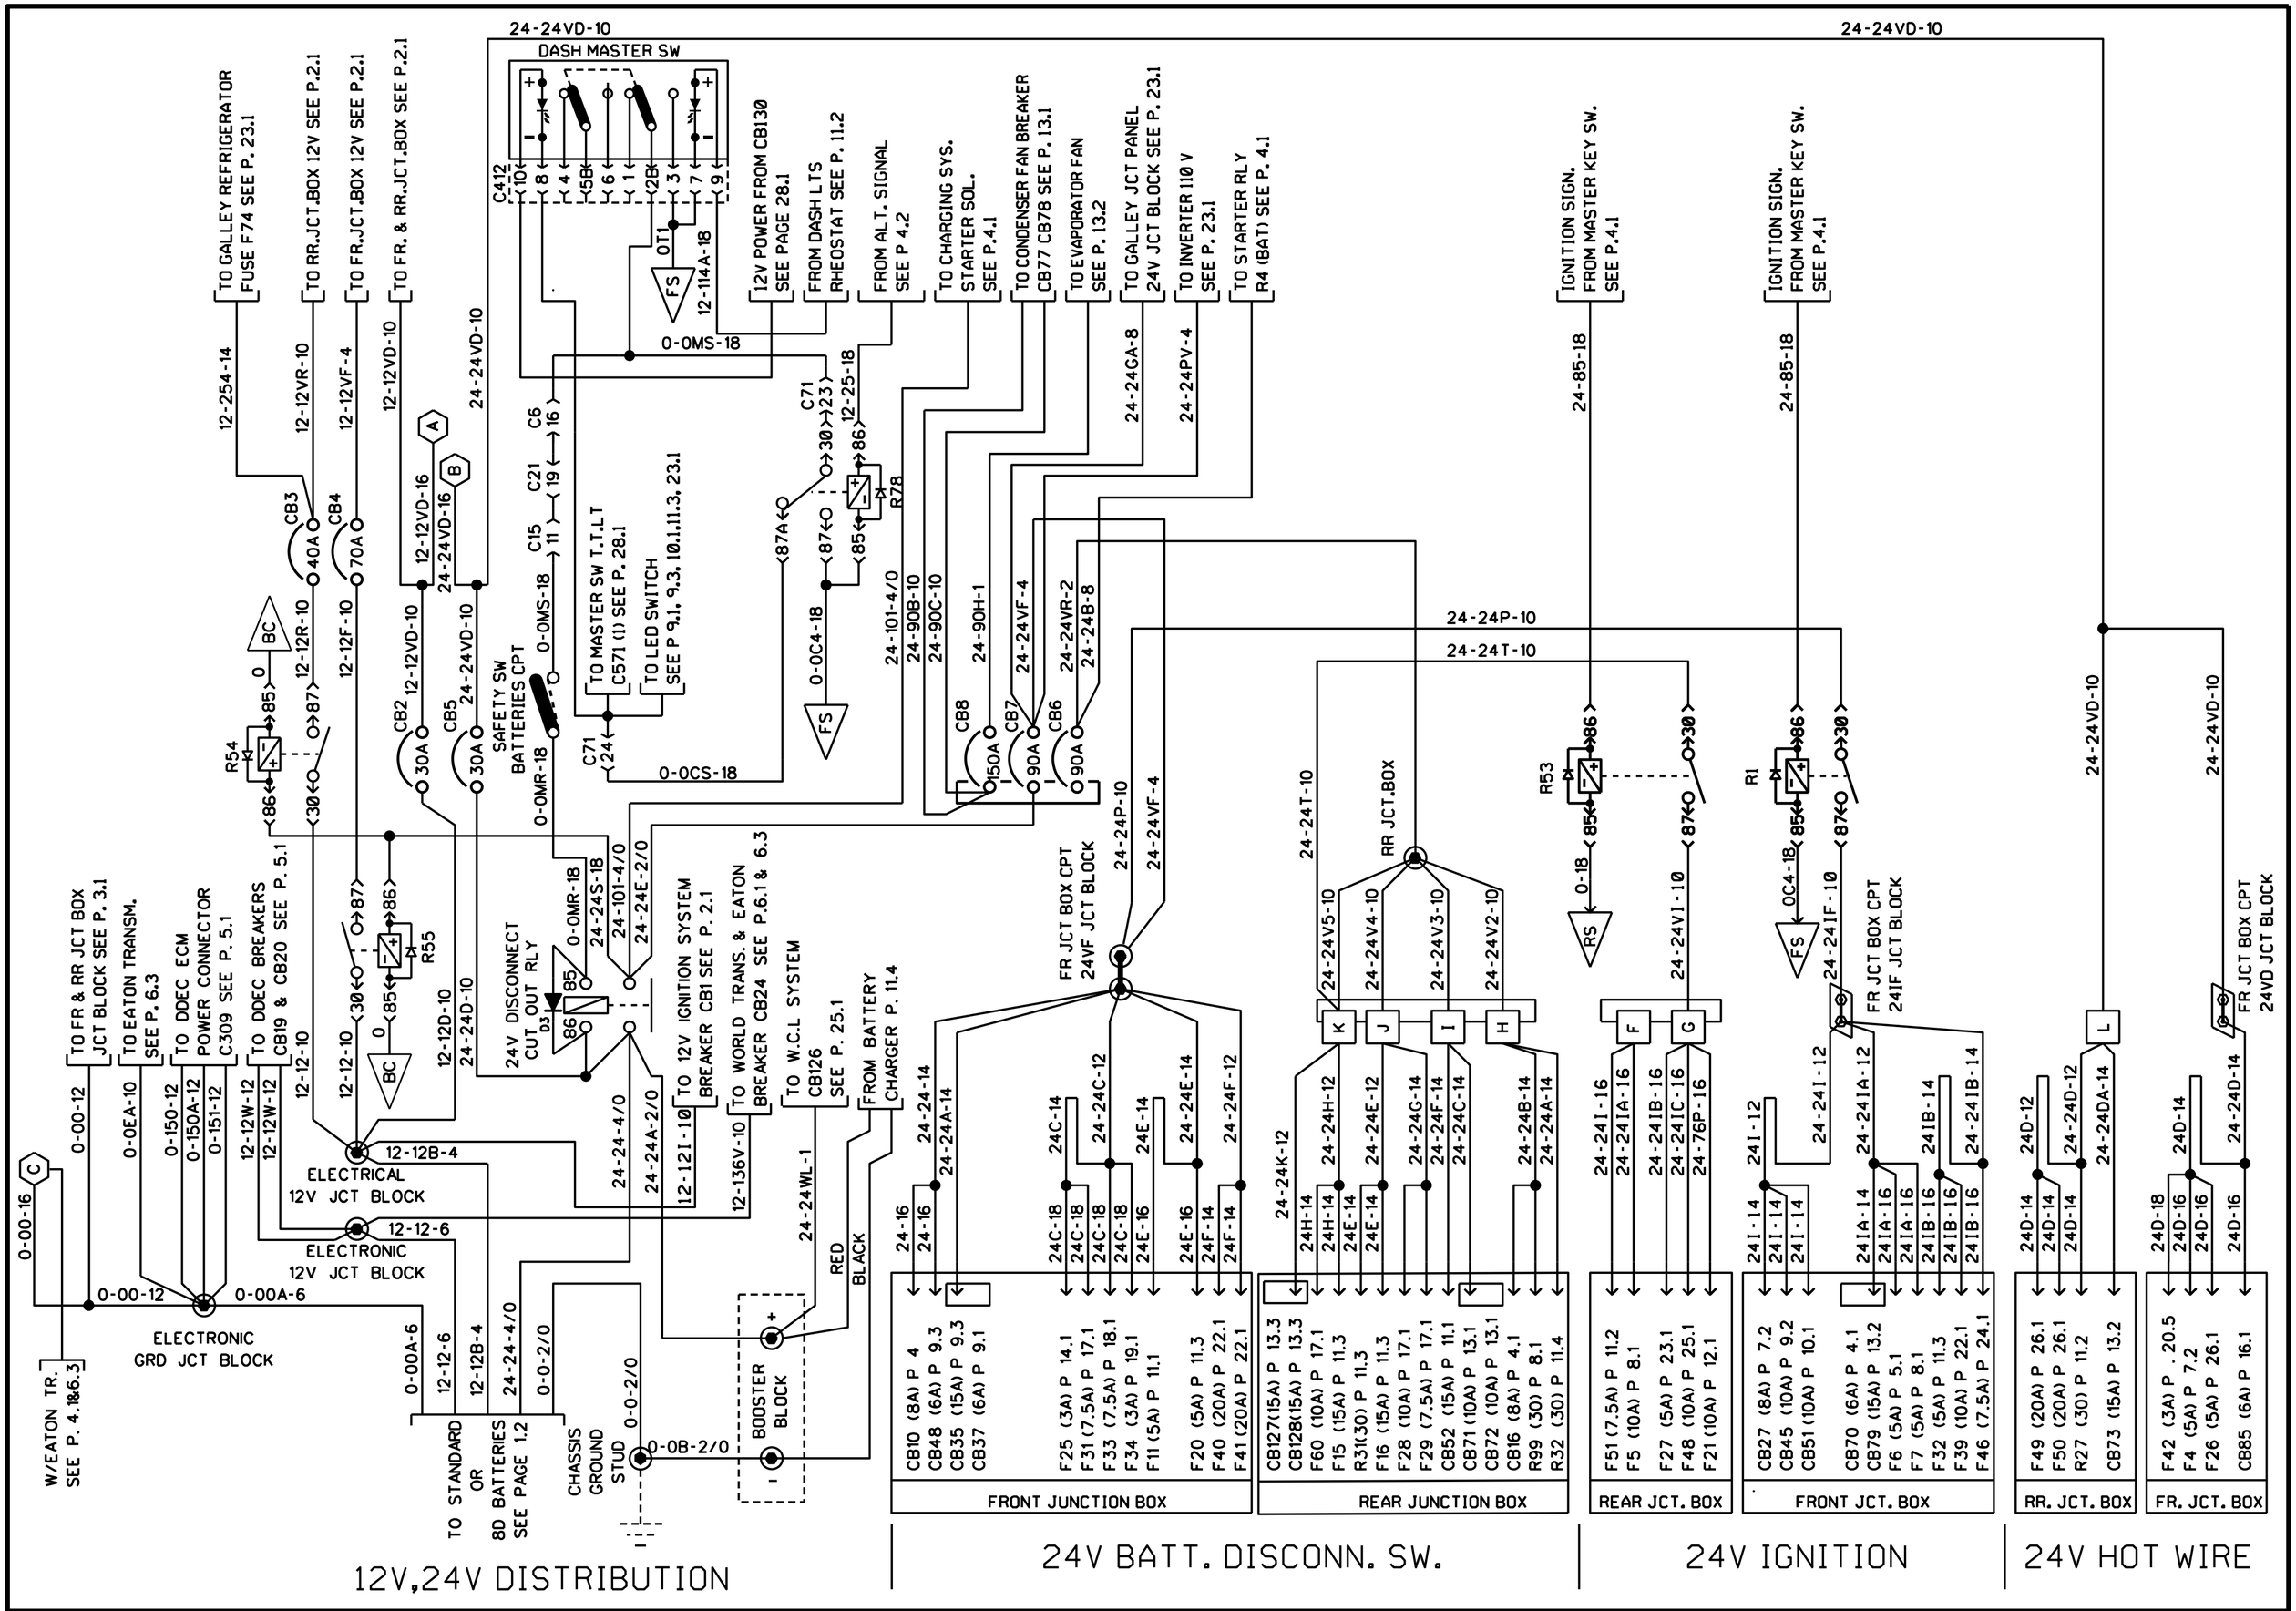


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 1.1	REVISION 21

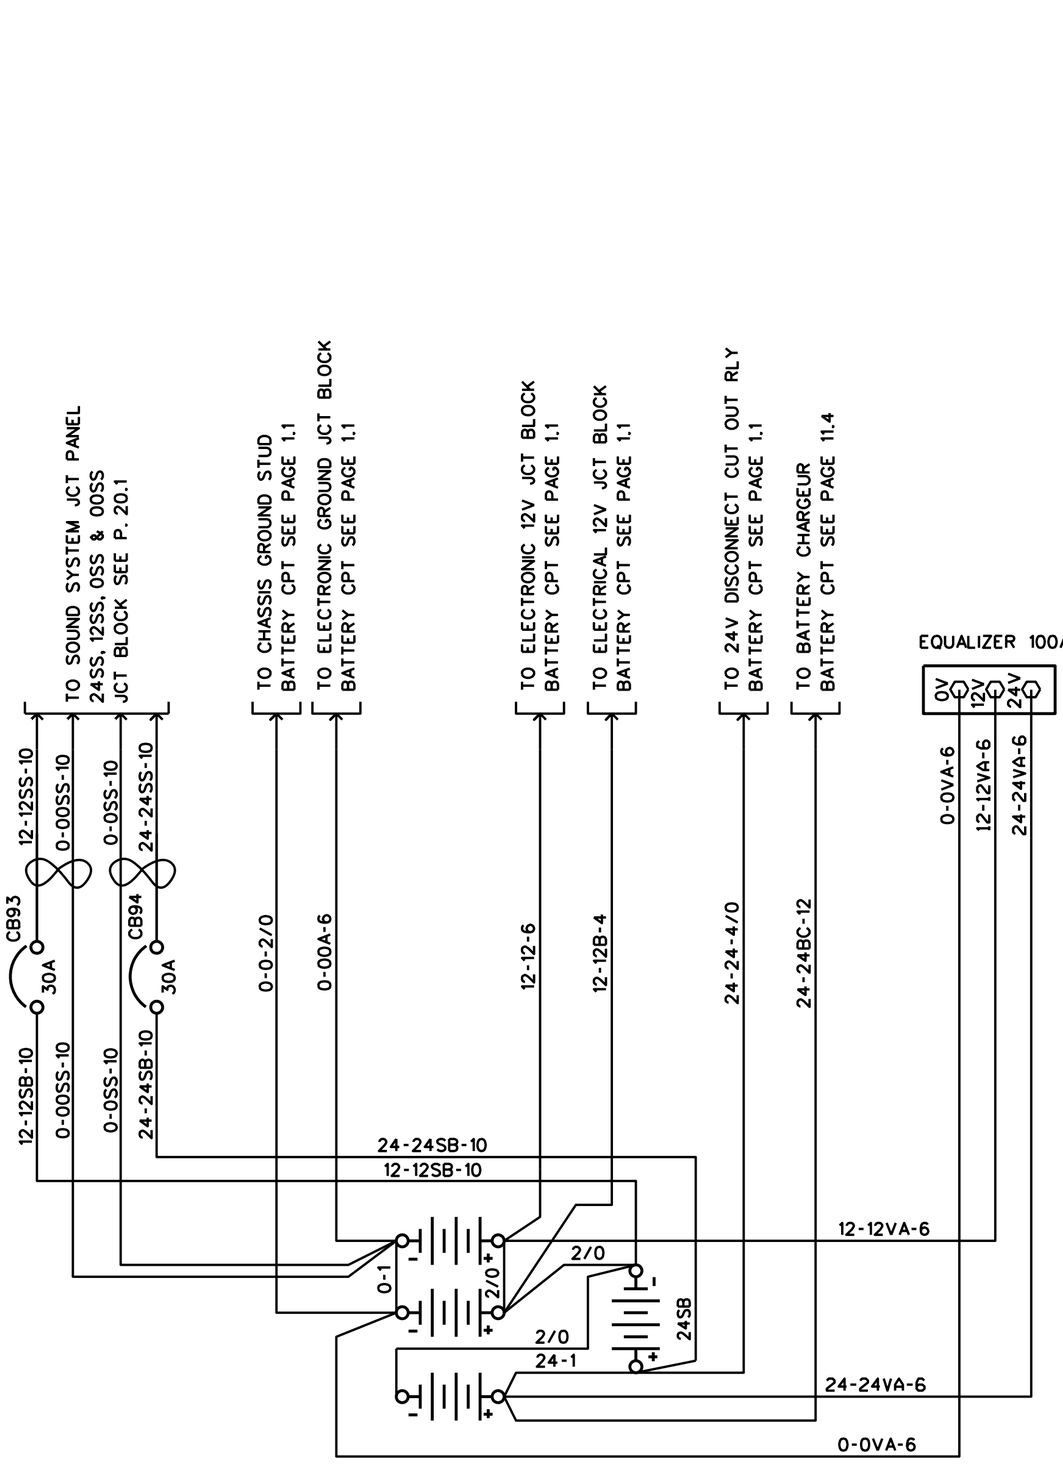


STANDARD BATTERIES

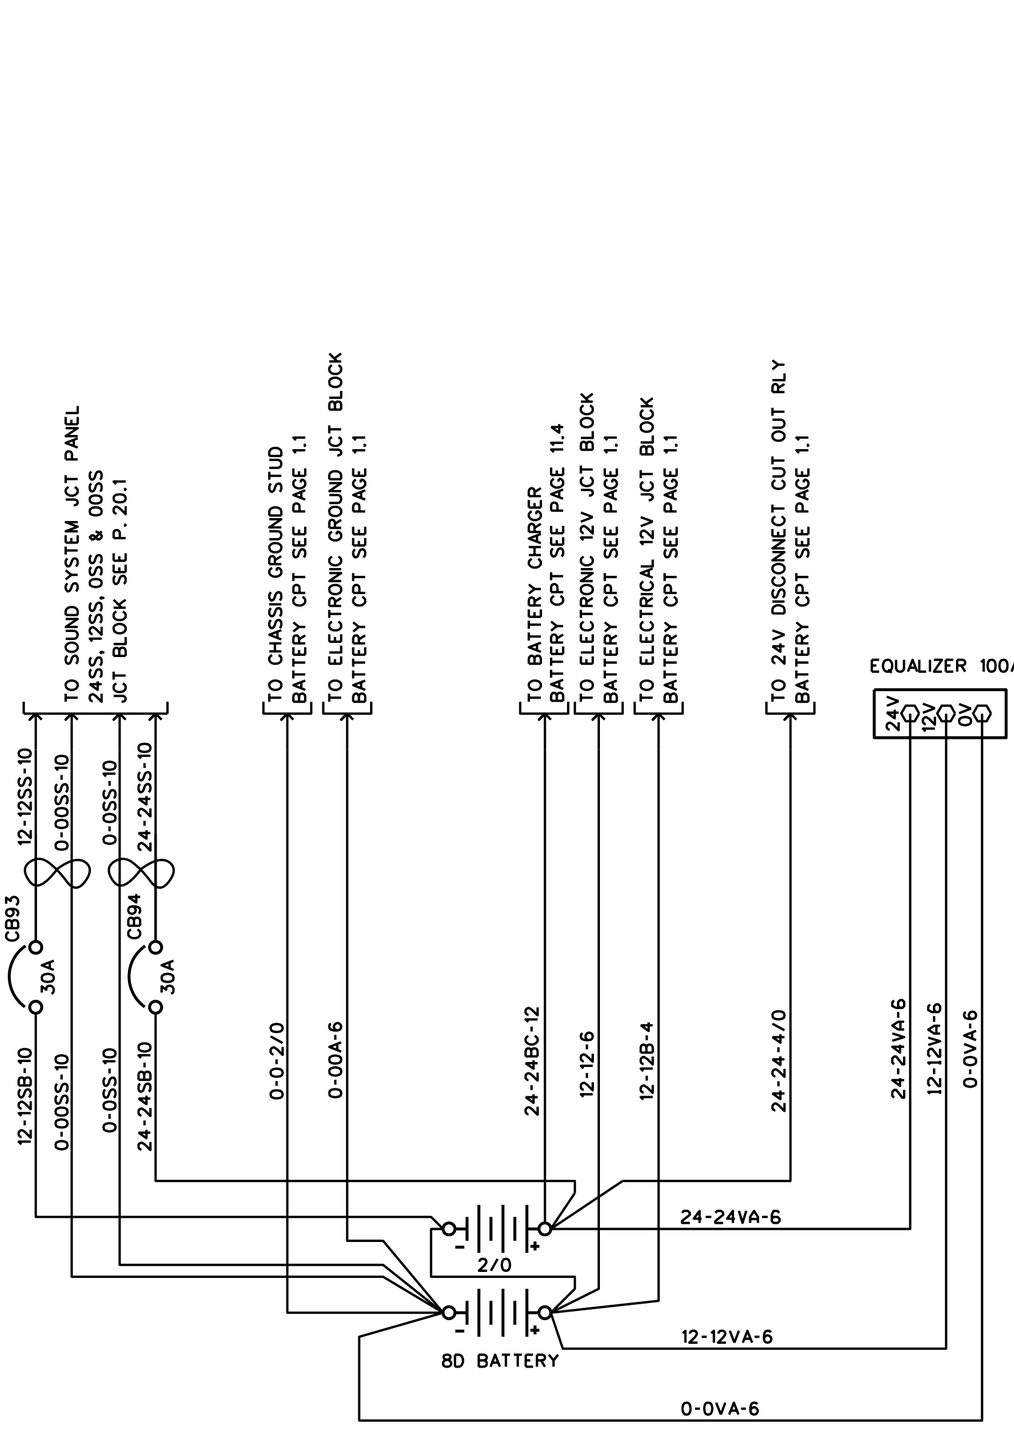


8D BATTERIES

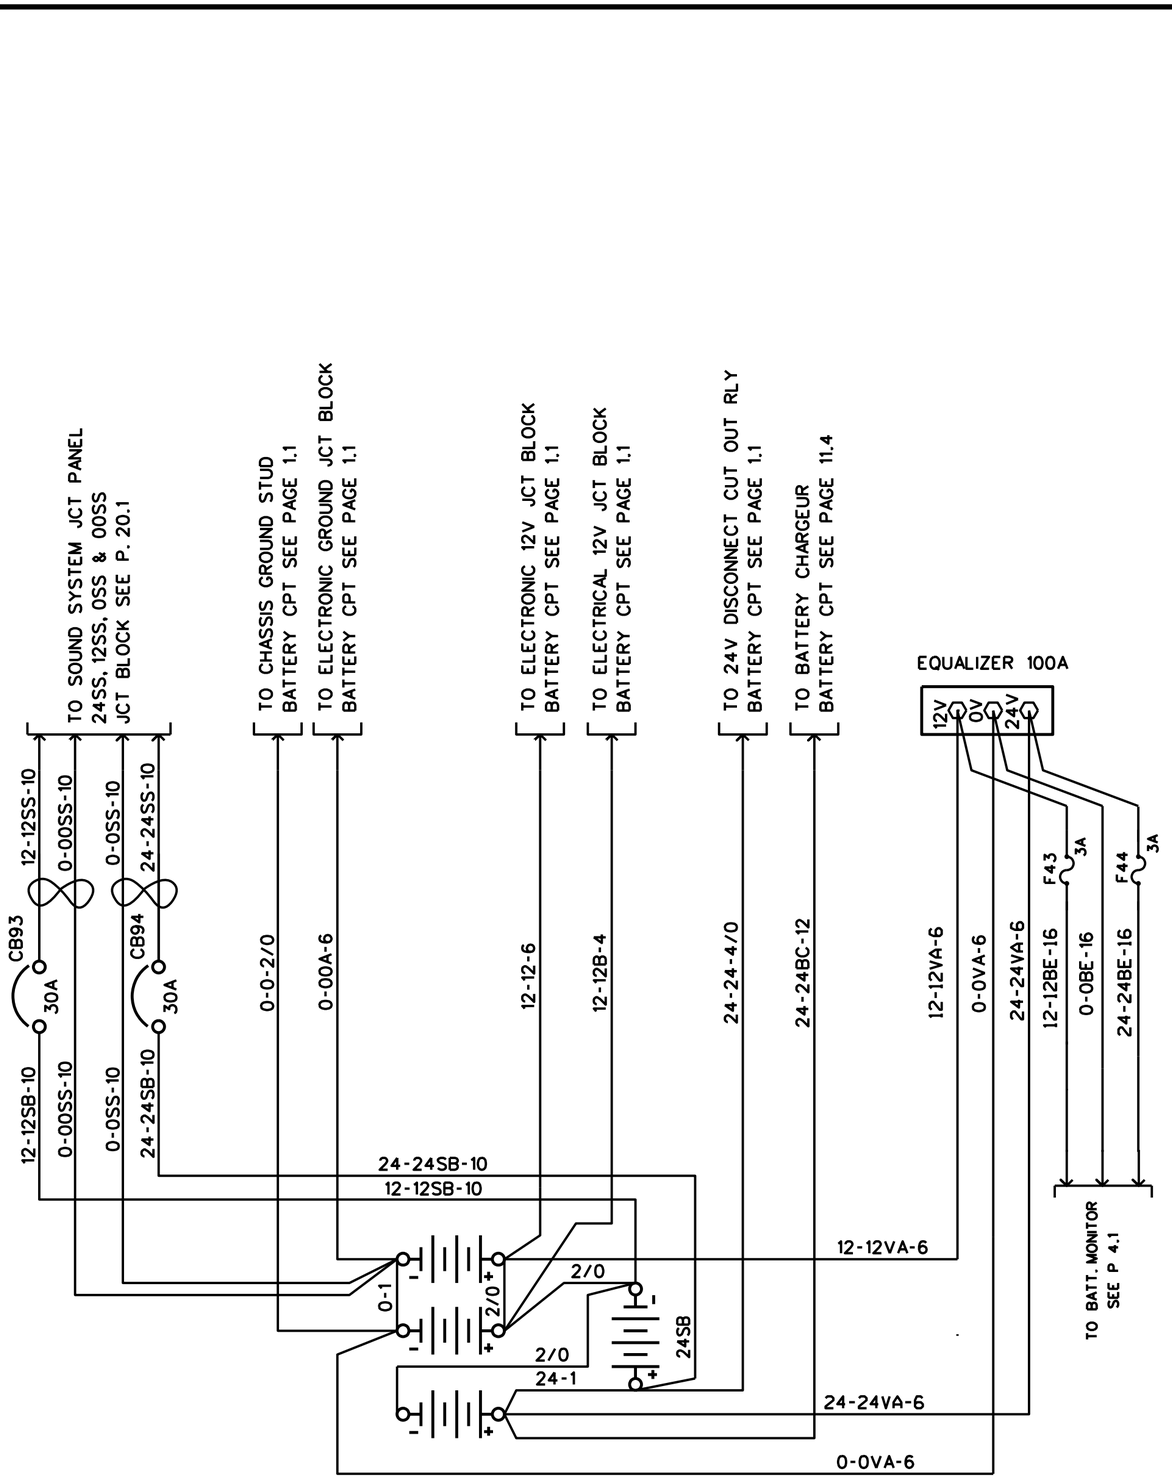


STANDARD BATTERIES

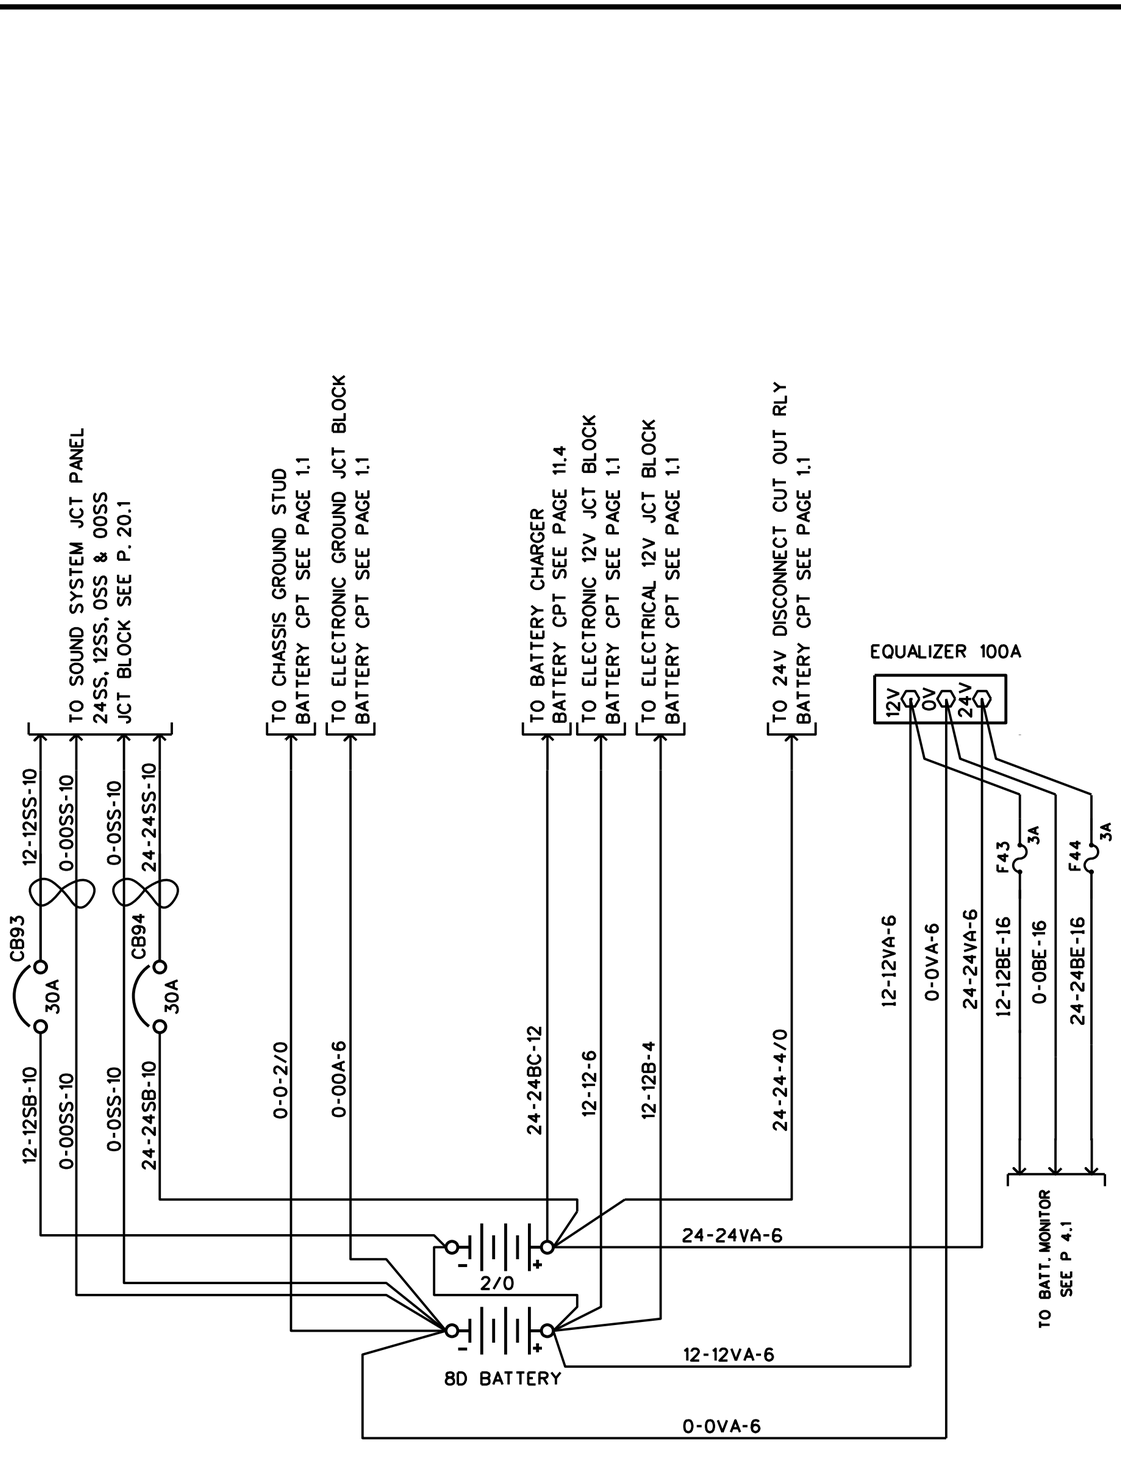

8D BATTERIES

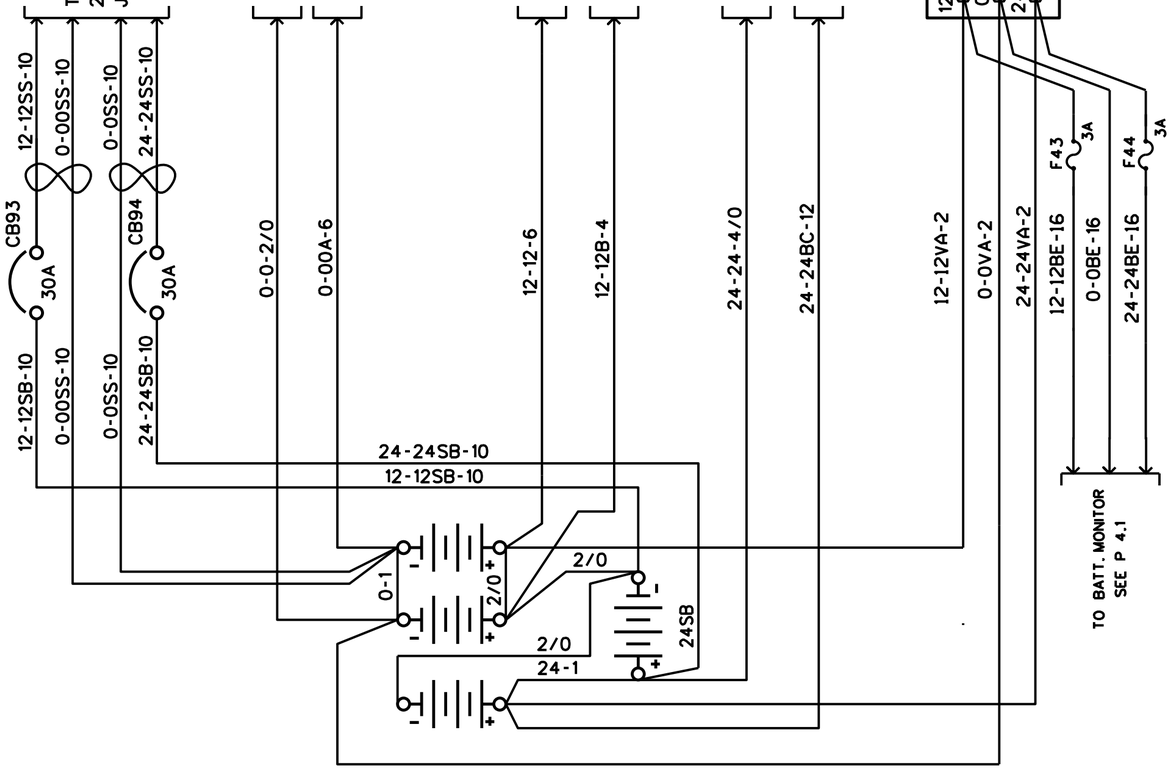

STANDARD BATTERIES

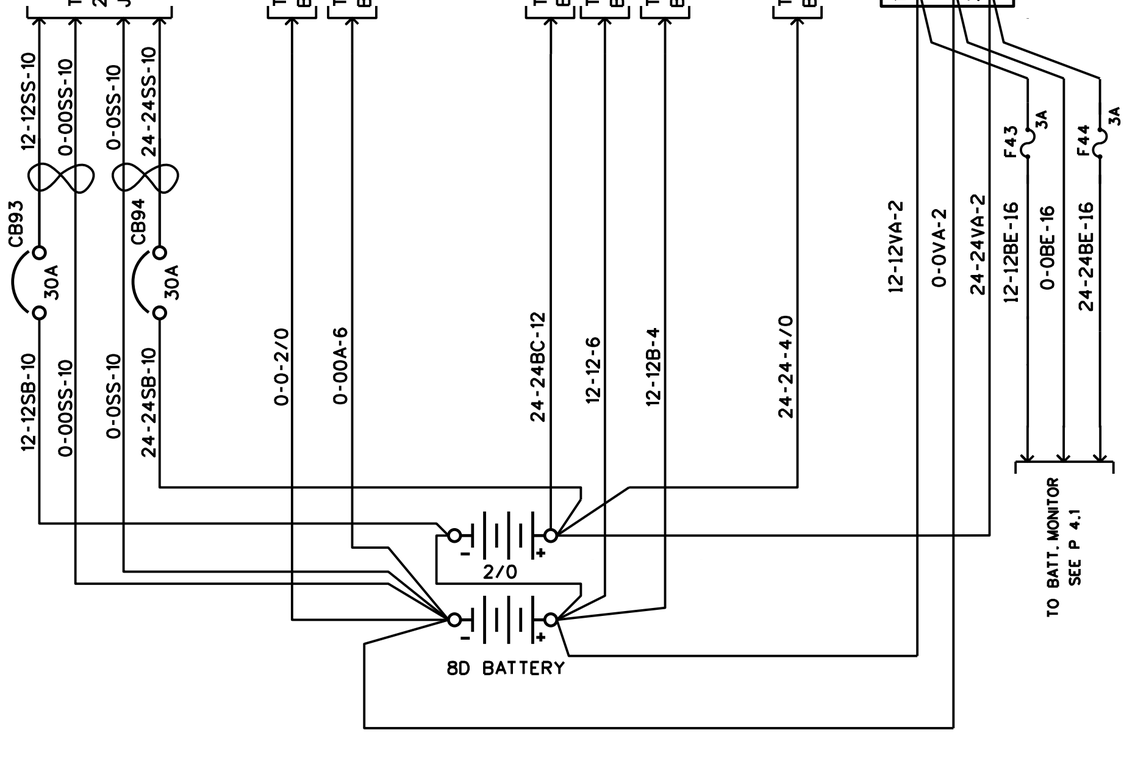

8D BATTERIES

PREVOST

WIRING DIAGRAM

NO: D060949

PAGE: 2.1

REVISION 00

12V BATT. DISCONN. SW.

FRONT JUNCTION BOX

CB38 (10A) P 9.1
CB39 (20A) P 9.1
CB43 (20A) P 9.1
CB44 (15A) P 9.1
CB46 (20A) P 9.2
F8 (10A) P 9.2
F10 (15A) P 9.3
F3 (20A) P 7.2
F22 (10A) P 14.1
F24 (15A) P 14.1
F14 (15A) P 11.3
F23 (15A) P 14.1
CB130 (6A) P.28.1
CB57 (10A) P.11.2
CB58 (6A) P.13.1

12-12A-12
12-12B-12
12-12C-12
12E-14
12-12E-12
12E-14
12-12F-12
12G-14
12-12G-12
12G-14
12-12G-14
12-12J-14
12-12K-12
12-12K-12

FR. JCT BOX CPT
12VF JCT BLOCK

12-12012V-16 → TO POWER 12V CB SEE P. 20.5

12-12VF-4 → FROM 12V DITRIBUTION BREAKER CB4 SEE P.1.1

REAR JUNCTION BOX

CB42 (8A) P 9.1
CB49 (15A) P 9.3
F57 (5A) P.17.1
F9 (15A) P 9.3
R9 (30) P 9.3

12-12A-16
12-12E-14
12-12F-14
12-32B-14

C
D

12-12VR-10 → 12-12VR-10 → FROM 12V DITRIBUTION BREAKER CB3 SEE P.1.1

12V IGNITION

REAR JCT.BOX

C43 (7) P4.2
CB21 (10A) P.5.1

12-121-14
12-121-14

B

12-12VI-10

R2

BC — 0-16 — 85 — 86 — 24-85F-18 → 24V IGN. ENG. CTRL SW FROM BATTERIES CPT JCT• D SEE P.4.1

E — 12-12VI-10 — 87 — 30 — 12-121A-10 — CB1 40A — 12-121-10 → FROM 12V DITRIBUTION 12V BATTERY POST SEE P.1.1

FRONT JCT.BOX

F47 (7.5A) P 24.1
CB28 (6A) P 7.1

12-121-16
12-121A-16

12V HOT WIRE

TO DDR CONNECTOR CVI2 (3) SEE P. 6.1 & 6.3

TO HOT TEMP. DETECT. C535 (2) SEE P. 7.2

12-12CE-18 — C579 (6 D) — F62 3A — C579 (A 3) — 12-12C-18 — E — 12-12VD-10 → 12-12VD-10 → FROM 12V DISTRIBUTION BREAKER CB2 SEE P.1.1

FRONT JCT.BOX

CB129 SEE P 7.1

12-12D-18


12-12VD-10

12-251-18 → TO PRODRIVER SEE P.8.1


TO RADIO BATTERY YELLOW WIRE SEE P 20.1

12-12R-18


12-251A-18 → TO DATA LOGGER

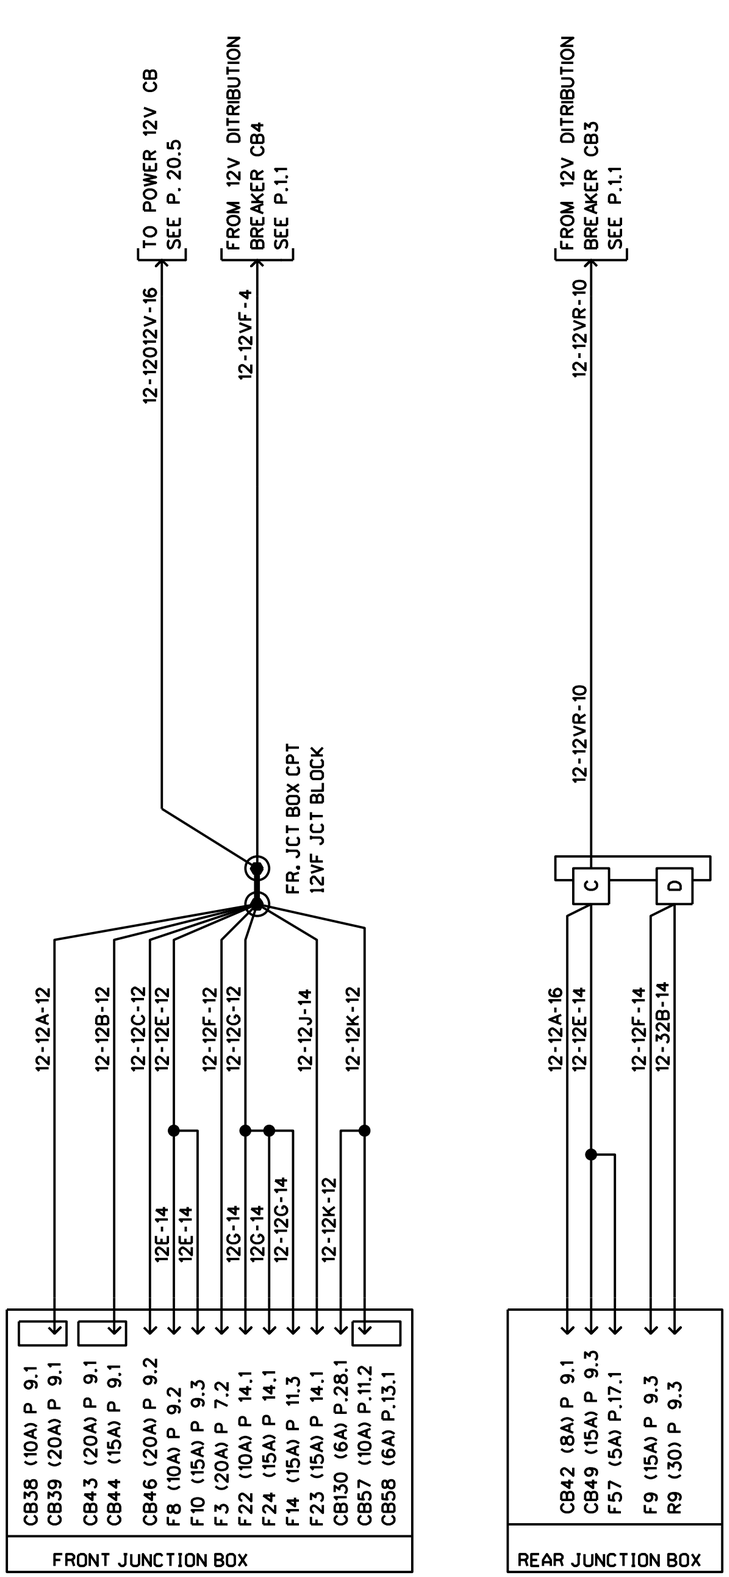

12V BATT. DISCONN. SW. | 12V IGNITION | 12V HOT WIRE

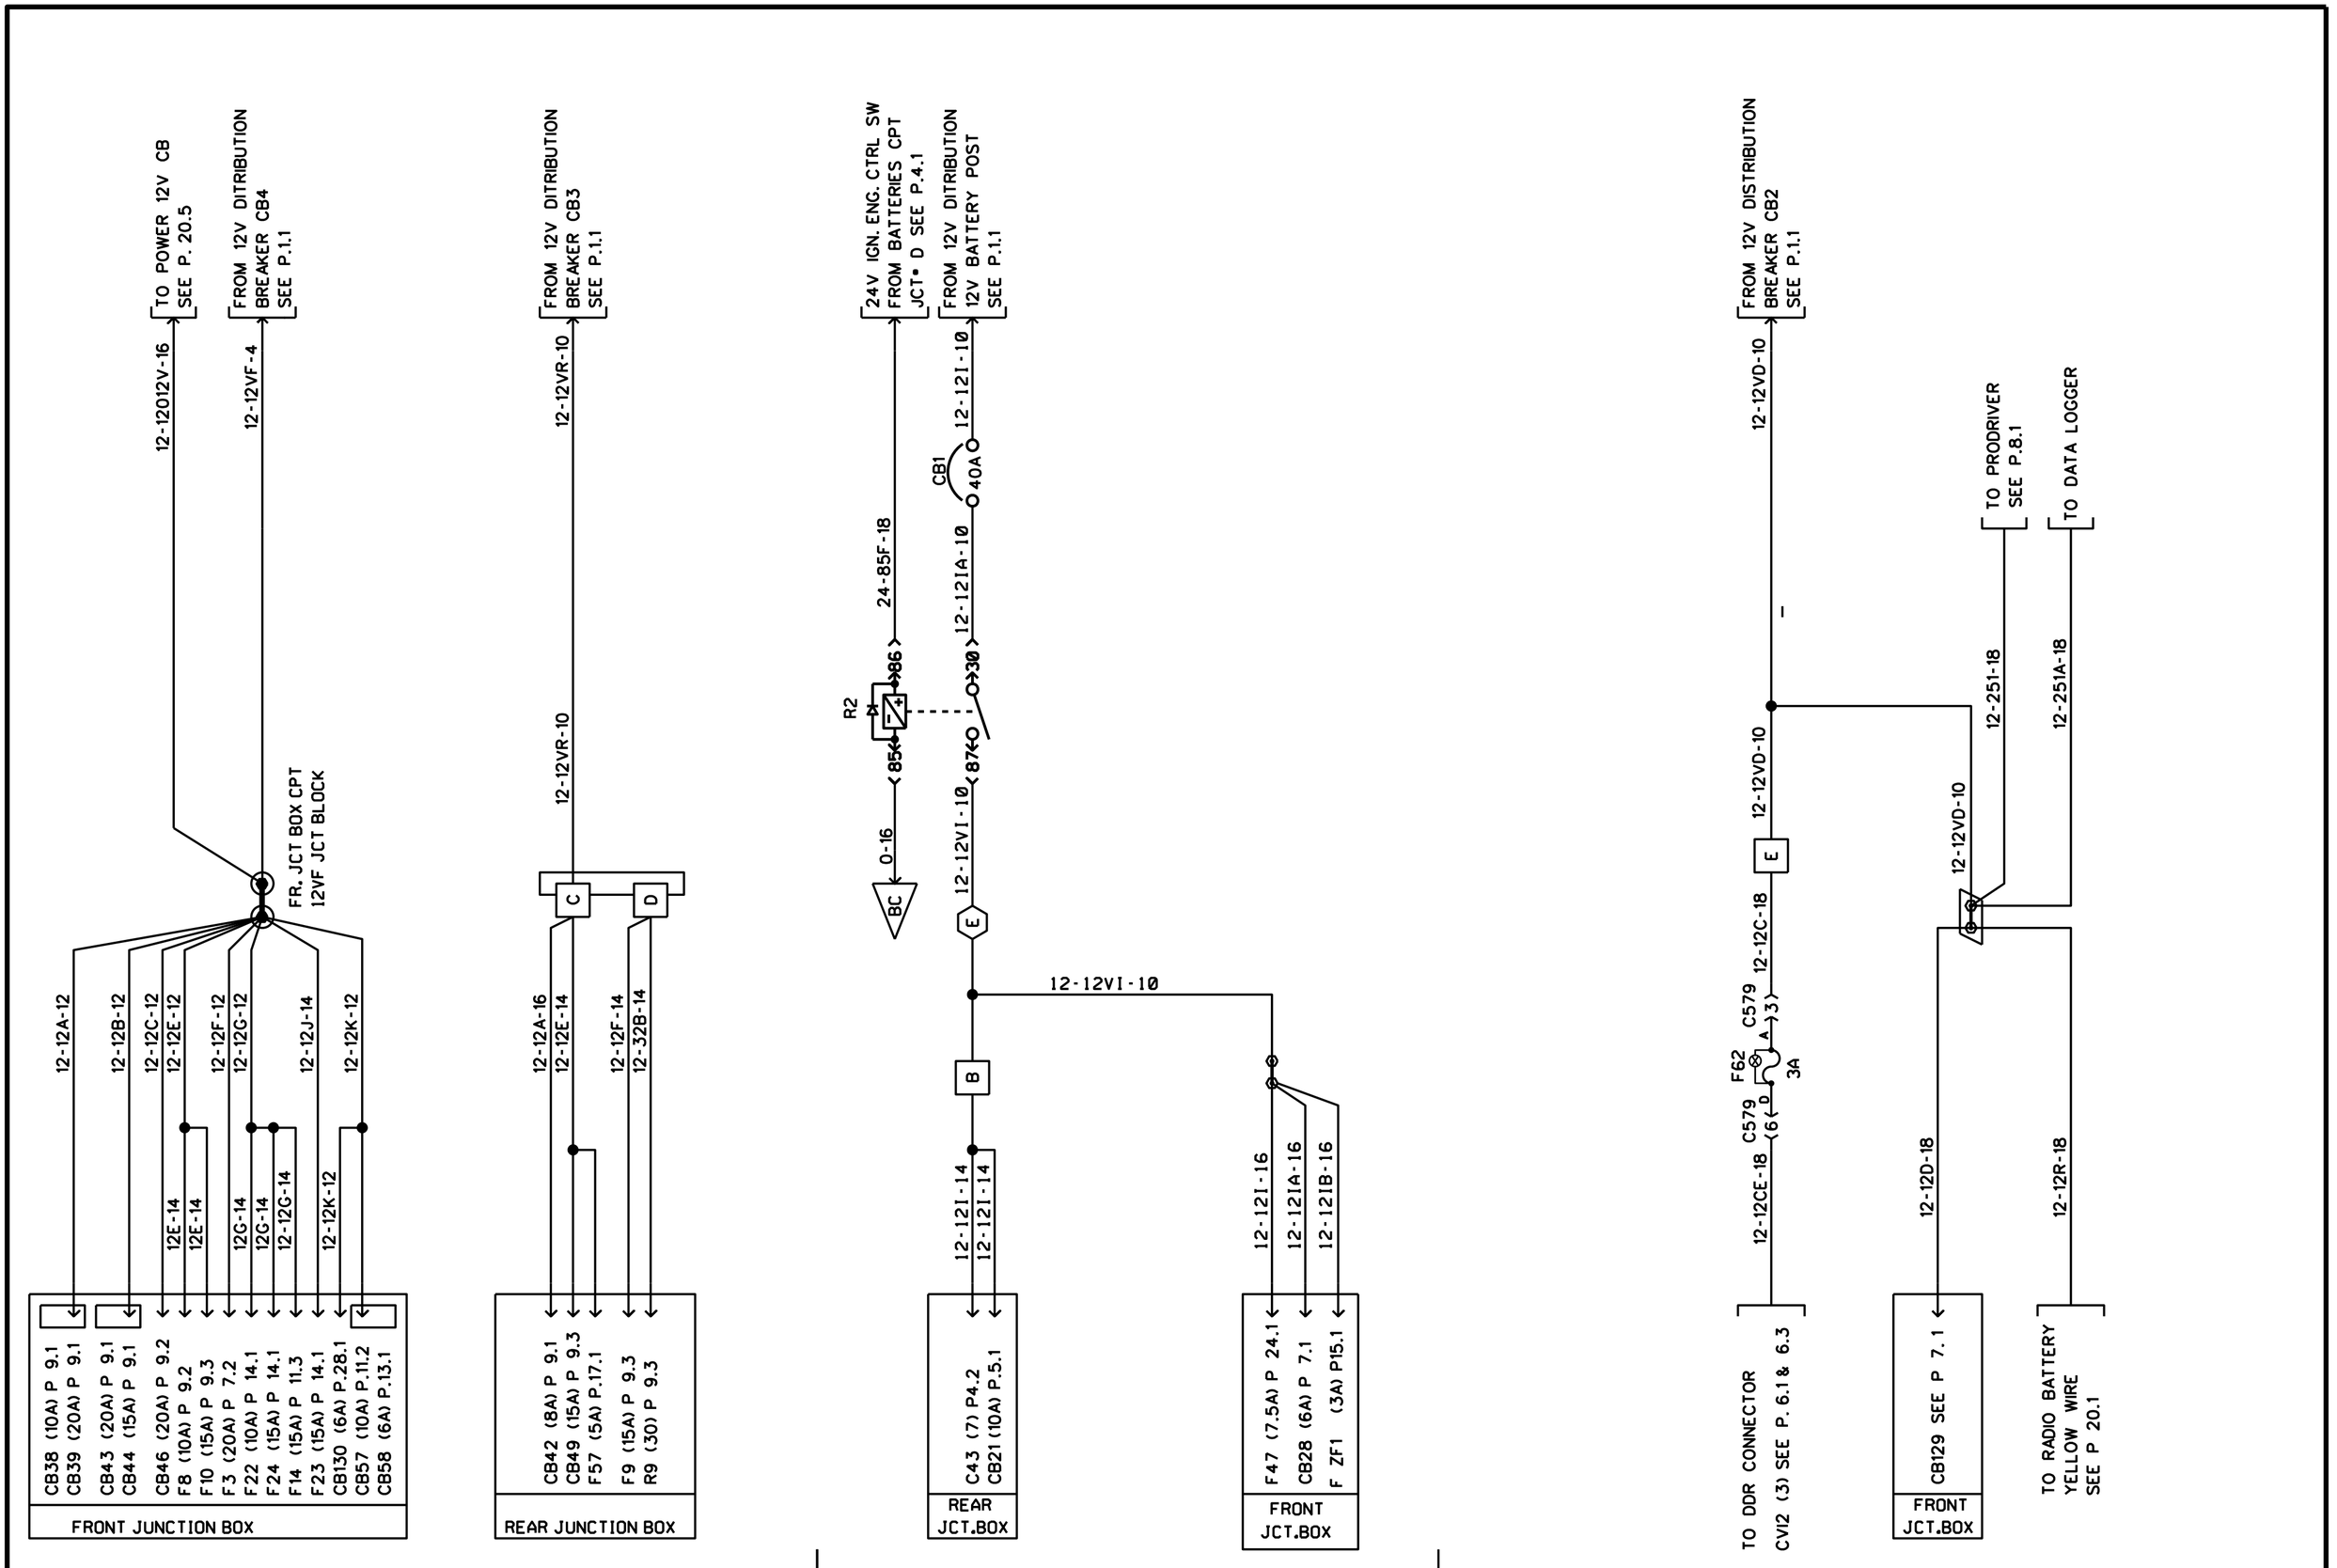

12V BATT. DISCONN. SW. | 12V IGNITION | 12V HOT WIRE

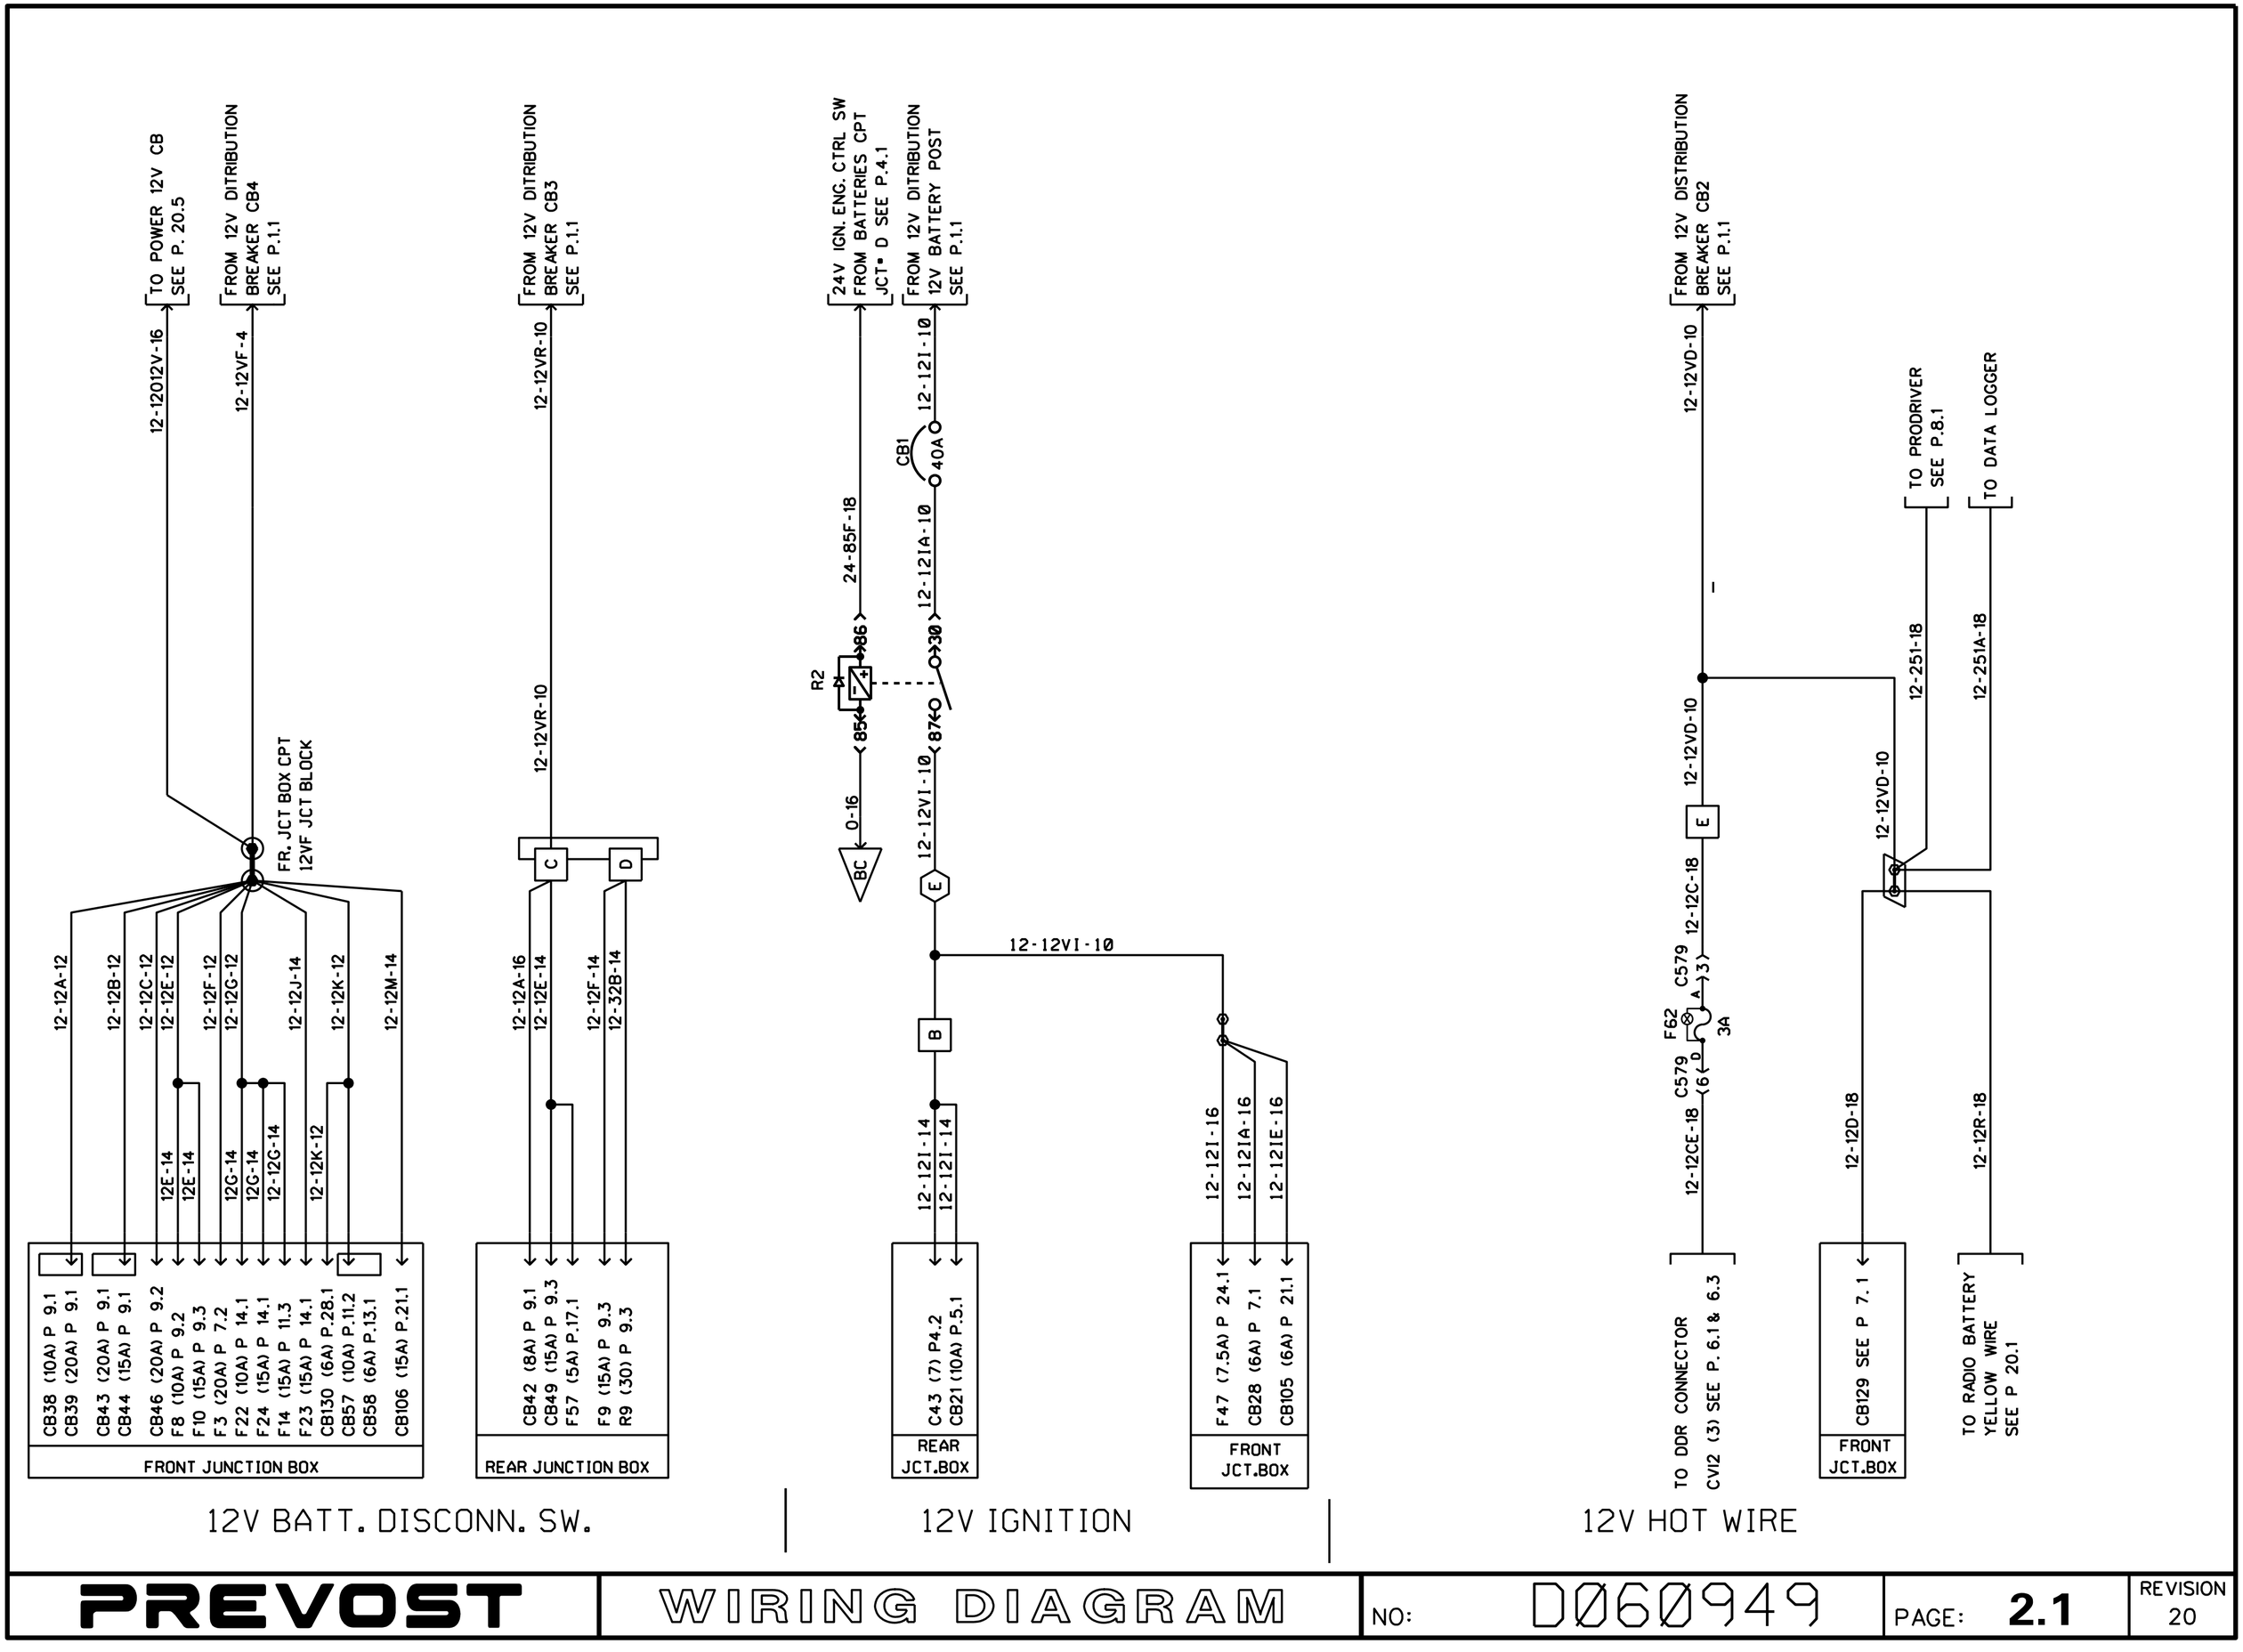

12V BATT. DISCONN. SW. | 12V IGNITION | 12V HOT WIRE

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 2.1	REVISION 20

PREVOST

WIRING DIAGRAM

NO: D060949

PAGE: 3.1

REVISION 00

CHASSIS GROUND

FRONT JUNCTION BOX COMPARTMENT — FRONT SECTION (FS)

- FRONT SERVICE CPT C105 (B), C106 (B), C239 (B), C260 (A&B), C183 (A)
- FRONT SERVICE CPT C267 (7), C536 (4)
- FRONT SERVICE CPT C323 (1), SH1, SH3
- BEHIND DASH RH PANEL C452 (1), AA2 (85)
- FRONT JCT. BOX - RELAYS & C522 (87)

0-0C-14, 0-0C1-18, 0-0C1-14, 0-0C2-18, 0-0C3-18, 0-0C4-18, C3 15, 0-0C4-14 → FRONT JCT BOX 0C GROUND STUD

- FRONT SERVICE CPT C435 (2), C246 (3), C242 (3) & STEP LT
- FRONT SERVICE CPT C102 (GRD), C103 (GRD), C104 (GRD), LO BUOY SW & STEP LT
- FRONT SERVICE CPT HEADLAMP CON C243
- FRONT JCT. BOX - CORNERING LTS RESISTORS
- FRONT JCT. BOX - FOG LTS RESISTORS
- LH CONSOLE

0-0L-14, 0-0L1-14, 0-0L2-12, 0-0L3-14, C3 22, 0-0L3-14, 0-0L4-14, C3 16, 0-0L4-14, 0-0L5-14, 24 C171 → FRONT JCT BOX 0L GROUND STUD

- WIPER MOTOR C177 (1) & PULSE MOD. C176 (1) & RH MIRROR C269 (3)
- DRIVER'S HTR FAN SPEED CTRL MOD. C175 (5)
- FR. SERV. CPT-HORNS C101 (B), & WASHER PUMP
- RADIATOR FAN CLUTCH SPEED 2 C549
- FR. JCT. BOX - WIPER PULSE MOD. C248 (1)
- LH CONSOLE SWITCH
- FRONT SERVICE CPT - LH MIRROR C268 (3)

0-0M-14, 0-0M3-12, 0-0M4-14, 0-0M5-14, 0-0M6-14, C3 14, 0-0M6-14, 0-0M7-14, C171 21, 0-0M7-14, 0-0M7-14 → FRONT JCT BOX 0M GROUND STUD

- FR. SERV. CPT- TAG PRESSURE SW.
- LH SWITCH PANEL
- DASH LH PANEL
- BEHIND DASH PANEL-AUDIBLE FLASHER C424 (1)
- BEHIND DASH PANEL - B/U MONITOR C394 (2) CLUSTER
- FR. JCT BOX - GROUND JCT BLOCK - SHIFTER & DDR CONNECTOR
- 12V POWER OUTLET

0-0T-18, 0-0T1-18, 0-0T2-18, C3 23, 0-0T3-14, 0-0T4-16 → FRONT JCT BOX 0T GROUND STUD

FRONT ROOF SECTION (FRS)

- ROOF ACCES. CLEARANCE LTS C213(1), FAN DEFROST C365(1), DEST. SIGN. C364(1) C478(3), WARNING C362(1) C363(1) C373(1), WIPER MOT. C361(1) & DRIVER'S LTS
- HEATING UPPER WINDSHIELD

0-0A-18, 0-0A-18, 0-0A-14, 0-0A-14, 0-0B-12 → FRONT LH ROOF GROUND STUD

REAR JUNCTION BOX COMPARTMENT — REAR SECTION (RS)

- RR JCT. BOX - RELAYS
- RR JCT. BOX - C535(1), R84, R85, C475(1) & SOLDER WT SHIELD SH2, SH3, 20, 20T
- RR JCT. BOX - VIMN(87), VIMR(87), VIM4(30) & SOLDER WT SHIELD SH1
- RR JCT BOX - RETARDER FAN CLUTCH C508(3)
- RR JCT BOX - A/C & HEAT JCT PANEL
- RR JCT BOX - DOCKING LTS RESISTORS

0-0-18, 0-0A-16, M, 0-0B-10; 0-0W-18; 0-0R-16; C59 1, 0-0K-16; 0-0DR-14

- SIDE WINDOWS EMERGENCY EXIT LTS C36(2)
- LH HAT RACK & GEN C204(2), FLUOR. C208(3)
- AISLE LTS C83(1)
- LH READ LTS C207(1), PASS & HOST CHIME SW
- RH HAT RACK & GEN C204(2), FLUOR. C202(3)
- RH READ LTS C206(1), PASS & HOST CHIME SW
- LAV. OCC. LT C143(3), GAL. LT C328(1) FLUOR C41(1)
- WCL RELAY R94 (85) & R98 (85)

0-16, C36 2, C35 1, 0-0D-14; C37 2; C144 1, C37 7, 2, 0-0E-14, N; C38 2, 3, 0-0F-14; 4, 0-0G-14; 15, 0-0H-16, 0-0WC-16, O, 0-0C-10

- RR END LAMPS RH C119 (A)
- RR END LAMPS LH C120 (A)
- ENG CPT C126(B), C128(2), C129(2), C130(2), C131(2), C422(1)
- ENG CPT C230(2), C127(B), C122(B), C124(A)
- ENG CPT C125(B)
- RR ROOF CLEARANCE LTS C87(2) & ENGINE CPT C287(A), C432(2) & C115(B)
- RR ROOF CAMERA C87(1)
- RR SIDE MARK C113, FLASH LH C114 & RH C121
- LUG CPT RH SIDE MARKER C103, FLASHER C104
- LUG CPT FUEL TANK C152(A), DAMPER C111(2), WATER VALVE C155(D), BYPASS VALVE C156(B), LH SIDE FLASHER C102, LH SIDE MARKER C103

0-0RH-16, 0-0LH-16, 0-0X-12; 0-0P-14, 0-0R-14, 0-0X-12; 0-0N-14, 0-0K-14, 0-0Y-12; 0-0J-16, 0-0DF-14, 0-0Y-12; 0-0B-14, 0-0Z-12; 0-0A-14, 0-0Z-12 → REAR JCT BOX GROUND STUD

BATTERY COMPARTMENT (BC)

- BAT CPT - RELAYS R2, R3, R54, R55
- ENGINE-SOLDER SHIELD SH1, SH2, SH3 & C326(B)
- VOLTAGE REGULATOR
- CONDENSER FAN SPEED. RLY R39, R40, R41, EATON TR.
- CONDENSER FAN RELAY R41 (87)
- CONDENSER FAN LH
- GALLEY INVERTER JUNCTION BLOCK
- GALLEY COFFEMAKER
- GALLEY R47 R48 R79, C403 LAMP, SW LT, HEAT CONT.
- WHEEL CHAIR LIFT RICON

0-0-16, 0-0A-16, C397 1, 0-0A-16, 0-0AA-12, 0-0C-16, 0-0D-10, 0-0D-10, 0-0-6, 0-0-10, 0-0-16, 0-0W-6 → BATTERY COMPARTMENT GROUND STUD

BATTERY GROUND

RBG — RR JCT BOX

- DDEC ACCES. BATTERY GROUND SEE PAGE 5.1
- WORLD TRANS. ACCES. BAT. GRD SEE PAGE 6.1

0-953-18, 0-143W-12, P, 0-00-12, 0-00-12 → FROM BATTERY COMPARTMENT ELECTRONIC GROUND JCT BLOCK SEE PAGE 1.1

FBG — FR JCT BOX

- TELL TALE LIGHT MODULE SEE PAGE 28.1
- CLUSTER SEE P.7.1

C74 36, 0-00A-18, 0-00-16

PREVOST | WIRING DIAGRAM | NO: D060949 | PAGE: 3.1 | REVISION 04

CHASSIS GROUND

FRONT JUNCTION BOX COMPARTMENT — FRONT SECTION (FS)

- FRONT SERVICE CPT C105 (B), C106 (B), C239 (B), C260 (A&B), C183 (A)
- FRONT SERVICE CPT C267 (7), C536 (4)
- FRONT SERVICE CPT C323 (1), SH1, SH3
- BEHIND DASH RH PANEL C452 (1), AA2 (85)
- FRONT JCT. BOX - RELAYS & C522 (87)

0-0C-14; 0-0C1-18; 0-0C1-14; 0-0C2-18; 0-0C3-18; 0-0C4-18; C3 15; 0-0C4-14 → FRONT JCT BOX 0C GROUND STUD

- FRONT SERVICE CPT C435 (2), C246 (3), C242 (3) & STEP LT
- FRONT SERVICE CPT C102 (GRD), C103 (GRD), C104 (GRD), LO BUOY SW & STEP LT
- FRONT SERVICE CPT HEADLAMP CON C243
- FRONT JCT. BOX - CORNERING LTS RESISTORS
- FRONT JCT. BOX - FOG LTS RESISTORS
- LH CONSOLE

0-0L-14; 0-0L1-14; 0-0L2-12; 0-0L3-14; C3 22; 0-0L3-14; 0-0L4-14; C3 16; 0-0L4-14; 0-0L5-14; 24 C171 → FRONT JCT BOX 0L GROUND STUD

- WIPER MOTOR C177 (1) & PULSE MOD. C176 (1) & RH MIRROR C269 (3)
- DRIVER'S HTR FAN SPEED CTRL MOD. C175 (5)
- FR. SERV. CPT-HORNS C101 (B), & WASHER PUMP
- RADIATOR FAN CLUTCH SPEED 2 C549
- FR. JCT. BOX - WIPER PULSE MOD. C248 (1)
- LH CONSOLE SWITCH
- FRONT SERVICE CPT - LH MIRROR C268 (3)

0-0M-14; 0-0M3-12; 0-0M4-14; 0-0M5-14; 0-0M6-14; C3 14; 0-0M6-14; 0-0M7-14; C171 21; 0-0M7-14; 0-0M7-14 → FRONT JCT BOX 0M GROUND STUD

- FR. SERV. CPT- TAG PRESSURE SW.
- LH SWITCH PANEL
- DASH LH PANEL
- BEHIND DASH PANEL-AUDIBLE FLASHER C424 (1)
- BEHIND DASH PANEL - B/U MONITOR C394 (2) CLUSTER
- FR. JCT BOX - GROUND JCT BLOCK - SHIFTER & DDR CONNECTOR
- 12V POWER OUTLET

0-0T-18; 0-0T1-18; 0-0T2-18; C3 23; 0-0T3-14; 0-0T4-16 → FRONT JCT BOX 0T GROUND STUD

FRONT ROOF SECTION (FRS)

- ROOF ACCES. CLEARANCE LTS C213(1), FAN DEFROST C365(1), DEST. SIGN. C364(1) C478(3), WARNING C362(1) C363(1) C373(1), WIPER MOT. C361(1) & DRIVER'S LTS
- HEATING UPPER WINDSHIELD

0-0A-18; 0-0A-18; 0-0A-14; 0-0A-14; 0-0B-12 → FRONT LH ROOF GROUND STUD

REAR JUNCTION BOX COMPARTMENT — REAR SECTION (RS)

- RR JCT. BOX - RELAYS
- RR JCT. BOX - C535(1), R84, R85, C475(1) & SOLDER WT SHIELD SH2, SH3, 20, 20T
- RR JCT. BOX - VIMN(87), VIMR(87), VIM4(30) & SOLDER WT SHIELD SH1
- RR JCT BOX - RETARDER FAN CLUTCH C508(3)
- RR JCT BOX - A/C & HEAT JCT PANEL
- RR JCT BOX - DOCKING LTS RESISTORS
- SIDE WINDOWS EMERGENCY EXIT LTS C36(2)
- LH HAT RACK & GEN C204(2), FLUOR. C208(3)
- AISLE LTS C83(1)
- LH READ LTS C207(1), PASS & HOST CHIME SW
- RH HAT RACK & GEN C204(2), FLUOR. C202(3)
- RH READ LTS C206(1), PASS & HOST CHIME SW
- LAV. OCC. LT C143(3), GAL. LT C328(1) FLUOR C41(1)
- WCL RELAY R94 (85) & R98 (85)
- RR END LAMPS RH C119 (A)
- RR END LAMPS LH C120 (A)
- ENG CPT C126(B), C128(2), C129(2), C130(2), C131(2), C422(1)
- ENG CPT C230(2), C127(B), C122(B), C124(A)
- ENG CPT C125(B)
- RR ROOF CLEARANCE LTS C87(2) & ENGINE CPT C287(A), C432(2) & C115(B)
- RR ROOF CAMERA C87(1)
- RR SIDE MARK C113, FLASH LH C114 & RH C121
- LUG CPT RH SIDE MARKER C103, FLASHER C104
- LUG CPT FUEL TANK C152(A), DAMPER C111(2), WATER VALVE C155(D), BYPASS VALVE C156(B), LH SIDE FLASHER C102, LH SIDE MARKER C103

0-0-18; 0-0A-16; 0-0W-18 → M → 0-0B-10

0-0R-16; C59 1; 0-0K-16; 0-0DR-14 → N

0-16; C36 2; C37 2; C144 1; C37 7; C38 2; C35 1; 0-0D-14; 0-0E-14; 0-0F-14; 0-0G-14; 0-0H-16; 0-0WC-16 → O → 0-0C-10

0-0RH-16; 0-0LH-16; 0-0X-12; 0-0P-14; 0-0R-14; 0-0X-12; 0-0N-14; 0-0Y-12; 0-0K-14; 0-0J-16; 0-0DF-14; 0-0Y-12; 0-0B-14; 0-0Z-12; 0-0A-14; 0-0Z-12 → REAR JCT BOX GROUND STUD

BATTERY COMPARTMENT (BC)

- BAT CPT - RELAYS R2, R3, R54, R55
- ENGINE-SOLDER SHIELD SH1, SH2, SH3 & C326(B)
- VOLTAGE REGULATOR
- GALLEY INVERTER JUNCTION BLOCK
- GALLEY COFFEMAKER
- GALLEY R47 R48 R79, C403 LAMP, SW LT, HEAT CONT.
- WHEEL CHAIR LIFT RICON

0-0-16; 0-0A-16; C397 1; 0-0A-16; 0-0AA-12; 0-0-6; 0-0-10; 0-0-16; 0-0W-6 → BATTERY COMPARTMENT GROUND STUD

EVAP. COMPT. (EC)

- CONDENSER FAN SPEED. RLY R39, R40, R41 P. 13.4
- CONDENSER FAN RELAY P. 13.4
- CONDENSER FAN LH P. 13.4
- EVAP. FAN P. 13.4

0-0C-16; 0-0D-10; 0-0D-10; 0-0-1 → EVAP. COMPARTMENT GROUND STUD

RR JCT BOX (RBG)

- DDEC ACCES. BATTERY GROUND SEE PAGE 5.1
- WORLD TRANS. ACCES. BAT. GRD SEE PAGE 6.1

0-953-18; 0-143W-12 → P → 0-00-12 → 0-00-12 → FROM BATTERY COMPARTMENT ELECTRONIC GROUND JCT BLOCK SEE PAGE 1.1

FR JCT BOX (FBG)

- TELL TALE LIGHT MODULE SEE PAGE 28.1
- CLUSTER SEE P.7.1
- HVAC DASH MODULE SEE P. 13.1
- WIRELESS MIC. CHARGER P. 20.5

C74 36; 0-00A-18; 0-00-16; 0-0S3-18

BATTERY GROUND

PREVOST | WIRING DIAGRAM | NO: D06094 | PAGE: 3.1 | REVISION 07

CHASSIS GROUND

FRONT JUNCTION BOX COMPARTMENT

FRONT SECTION (FS)

- FRONT SERVICE CPT C105 (B), C106 (B), C239 (B), C260 (A&B), C183 (A)
- FRONT SERVICE CPT C267 (7), C536 (4)
- FRONT SERVICE CPT C323 (1), SH1, SH3
- BEHIND DASH RH PANEL C452 (1), AA2 (85)
- FRONT JCT. BOX - RELAYS & C522 (87)
- FRONT SERVICE CPT C435 (2), C246 (3), C242 (3) & STEP LT
- FRONT SERVICE CPT C102 (GRD), C103 (GRD), C104 (GRD), LO BUOY SW & STEP LT
- FRONT SERVICE CPT HEADLAMP CON C243
- FRONT JCT. BOX - CORNERING LTS RESISTORS
- FRONT JCT. BOX - FOG LTS RESISTORS
- LH CONSOLE
- WIPER MOTOR C177 (1) & PULSE MOD. C176 (1) & RH MIRROR C269 (3)
- DRIVER'S HTR FAN SPEED CTRL MOD. C175 (5)
- FR. SERV. CPT-HORNS C101 (B), & WASHER PUMP
- RADIATOR FAN CLUTCH SPEED 2 C549
- FR. JCT. BOX - WIPER PULSE MOD. C248 (1)
- LH CONSOLE SWITCH
- FRONT SERVICE CPT - LH MIRROR C268 (3)
- FR. SERV. CPT- TAG PRESSURE SW.
- LH SWITCH PANEL
- DASH LH PANEL
- BEHIND DASH PANEL-AUDIBLE FLASHER C424 (1)
- BEHIND DASH PANEL - B/U MONITOR C394 (2)
- CLUSTER
- WIRELESS MIC.CHARGER P.20.5
- FR. JCT BOX - GROUND JCT BLOCK - SHIFTER & DDR CONNECTOR
- 12V POWER OUTLET

0-0C-14
0-0C1-18
0-0C1-14
0-0C2-18
0-0C3-18
0-0C4-18
C3 15
0-0C4-14
→ FRONT JCT BOX 0C GROUND STUD

0-0L-14
0-0L1-14
0-0L2-12
0-0L3-14
C3 22
0-0L3-14
0-0L4-14
C3 16
0-0L4-14
0-0L5-14
C3 24
C171
→ FRONT JCT BOX 0L GROUND STUD

0-0M-14
0-0M3-12
0-0M4-14
0-0M5-14
0-0M6-14
C3 14
0-0M6-14
0-0M7-14
C171 21
0-0M7-14
0-0M7-14
→ FRONT JCT BOX 0M GROUND STUD

0-0T-18
0-0T1-18
0-0T2-18
C3 23
0-0T3-14
0-0T4-16
→ FRONT JCT BOX 0T GROUND STUD

FRONT ROOF SECTION (FRS)

- ROOF ACCES. CLEARANCE LTS C213(1), FAN DEFROST C365(1), DEST. SIGN. C364(1) C478(3), WARNING C362(1) C363(1) C373(1), WIPER MOT. C361(1) & DRIVER'S LTS
- HEATING UPPER WINDSHIELD

0-0A-18
0-0A-18
0-0A-14
0-0A-14
0-0B-12
→ FRONT LH ROOF GROUND STUD

REAR JUNCTION BOX COMPARTMENT

REAR SECTION (RS)

- RR JCT. BOX - RELAYS
- RR JCT. BOX - C535(1), R84, R85, C475(1) & SOLDER WT SHIELD SH2, SH3, 20, 20T
- RR JCT. BOX - VIMN(87), VIMR(87), VIM4(30) & SOLDER WT SHIELD SH1
- RR JCT BOX - RETARDER FAN CLUTCH C508(3)
- RR JCT BOX - A/C & HEAT JCT PANEL
- RR JCT BOX - DOCKING LTS RESISTORS
- SIDE WINDOWS EMERGENCY EXIT LTS C36(2)
- LH HAT RACK & GEN C204(2), FLUOR. C208(3)
- AISLE LTS C83(1)
- LH READ LTS C207(1), PASS & HOST CHIME SW
- RH HAT RACK & GEN C204(2), FLUOR. C202(3)
- RH READ LTS C206(1), PASS & HOST CHIME SW
- LAV. OCC. LT C143(3), GAL. LT C328(1) FLUOR C41(1)
- WCL RELAY R94 (85) & R98 (85)
- RR END LAMPS RH C119 (A)
- RR END LAMPS LH C120 (A)
- ENG CPT C126(B), C128(2), C129(2), C130(2), C131(2), C422(1)
- ENG CPT C230(2), C127(B), C122(B), C124(A)
- ENG CPT C125(B)
- RR ROOF CLEARANCE LTS C87(2) & ENGINE CPT C287(A), C432(2) & C115(B)
- RR ROOF CAMERA C87(1)
- RR SIDE MARK C113, FLASH LH C114 & RH C121
- LUG CPT RH SIDE MARKER C103, FLASHER C104
- LUG CPT FUEL TANK C152(A), DAMPER C111(2), WATER VALVE C155(D), BYPASS VALVE C156(B), LH SIDE FLASHER C102, LH SIDE MARKER C103

0-0-18
0-0A-16
0-0W-18
M
0-0B-10
0-0R-16
C59 1
0-0K-16
0-0DR-14
0-16
C36 2
C37 2
C144 1
C37 7
C38 2
C35
1
2
3
4
15
0-0D-14
0-0E-14
0-0F-14
0-0G-14
0-0H-16
0-0WC-16
N
O
0-0C-10
0-0RH-16
0-0LH-16
0-0X-12
0-0P-14
0-0R-14
0-0X-12
0-0N-14
0-0K-14
0-0Y-12
0-0J-16
0-0DF-14
0-0Y-12
0-0B-14
0-0Z-12
0-0A-14
0-0Z-12
→ REAR JCT BOX GROUND STUD

BATTERY COMPARTMENT (BC)

- BAT CPT - RELAYS R2, R3, R54, R55
- ENGINE-SOLDER SHIELD SH1, SH2, SH3 & C326(B)
- VOLTAGE REGULATOR
- GALLEY INVERTER JUNCTION BLOCK
- GALLEY COFFEMAKER
- GALLEY R47 R48 R79, C403 LAMP, SW LT, HEAT CONT.
- WHEEL CHAIR LIFT RICON

0-0-16
0-0A-16
C397 1
0-0A-16
0-0AA-12
0-0-6
0-0-10
0-0-16
0-0W-6
→ BATTERY COMPARTMENT GROUND STUD

EVAP. COMPT. (EC)

- CONDENSER FAN SPEED. RLY R39, R40, R41 P. 13.4
- CONDENSER FAN RELAY P. 13.4
- CONDENSER FAN LH P. 13.4
- EVAP. FAN P. 13.4

0-0C-16
0-0D-10
0-0D-10
0-0-1
→ EVAP. COMPARTMENT GROUND STUD

RR JCT BOX (RBG)

- DDEC ACCES. BATTERY GROUND SEE PAGE 5.1
- WORLD TRANS. ACCES. BAT. GRD SEE PAGE 6.1

0-953-18
0-143W-12
P
0-00-12
0-00-12
→ FROM BATTERY COMPARTMENT ELECTRONIC GROUND JCT BLOCK SEE PAGE 1.1

FR JCT BOX (FBG)

- TELL TALE LIGHT MODULE SEE PAGE 28.1
- CLUSTER SEE P.7.1
- HVAC DASH MODULE SEE P. 13.1
- WIRELESS MIC. CHARGER P. 20.5

C74 36
0-00A-18
0-00-16
0-0S3-18

BATTERY GROUND

PREVOST | WIRING DIAGRAM | NO: D060949 | PAGE: 3.1 | REVISION 08

CHASSIS GROUND

FRONT JUNCTION BOX COMPARTMENT — FRONT SECTION (FS)

FRONT SERVICE CPT C105 (B), C106 (B), C239 (B), C260 (A&B), C183 (A)
FRONT SERVICE CPT C267 (7), C536 (4)
FRONT SERVICE CPT C323 (1), SH1, SH3
BEHIND DASH RH PANEL C452 (1), AA2 (85)
FRONT JCT. BOX - RELAYS & C522 (87)

FRONT SERVICE CPT C435 (2), C246 (3), C242 (3) & STEP LT
FRONT SERVICE CPT C102 (GRD), C103 (GRD), C104 (GRD), LO BUOY SW & STEP LT
FRONT SERVICE CPT HEADLAMP CON C243
FRONT JCT. BOX - CORNERING LTS RESISTORS
FRONT JCT. BOX - FOG LTS RESISTORS
LH CONSOLE

WIPER MOTOR C177 (1) & PULSE MOD. C176 (1) & RH MIRROR C269 (3)
DRIVER'S HTR FAN SPEED CTRL MOD. C175 (5)
FR. SERV. CPT-HORNS C101 (B), & WASHER PUMP
RADIATOR FAN CLUTCH SPEED 2 C549
FR. JCT. BOX - WIPER PULSE MOD. C248 (1)

LH CONSOLE SWITCH
FRONT SERVICE CPT - LH MIRROR C268 (3)

FR. SERV. CPT- TAG PRESSURE SW.

LH SWITCH PANEL

DASH LH PANEL
BEHIND DASH PANEL-AUDIBLE FLASHER C424 (1)

BEHIND DASH PANEL - B/U MONITOR C394 (2)
CLUSTER
WIRELESS MIC.CHARGER P.20.5
FR. JCT BOX - GROUND JCT BLOCK - SHIFTER & DDR CONNECTOR

12V POWER OUTLET

0-0C-14, 0-0C1-18, 0-0C1-14, 0-0C2-18, 0-0C3-18, 0-0C4-18, C3 15, 0-0C4-14 → FRONT JCT BOX 0C GROUND STUD

0-0L-14, 0-0L1-14, 0-0L2-12, 0-0L3-14, C3 22, 0-0L3-14, 0-0L4-14, C3 16, 0-0L4-14, 0-0L5-14, C171 24 → FRONT JCT BOX 0L GROUND STUD

0-0M-14, 0-0M3-12, 0-0M4-14, 0-0M5-14, 0-0M6-14, C3 14, 0-0M6-14, 0-0M7-14, C171 21, 0-0M7-14, 0-0M7-14 → FRONT JCT BOX 0M GROUND STUD

0-0T-18, 0-0T1-18, 0-0T2-18, C3 23, 0-0T3-14, 0-0T4-16 → FRONT JCT BOX 0T GROUND STUD

FRONT ROOF SECTION (FRS)

ROOF ACCES. CLEARANCE LTS C213(1), FAN DEFROST C365(1), DEST. SIGN. C364(1) C478(3), WARNING C362(1) C363(1) C373(1), WIPER MOT. C361(1) & DRIVER'S LTS

HEATING UPPER WINDSHIELD

0-0A-18, 0-0A-18, 0-0A-14, 0-0A-14, 0-0B-12 → FRONT LH ROOF GROUND STUD

REAR JUNCTION BOX COMPARTMENT — REAR SECTION (RS)

RR JCT. BOX - RELAYS
RR JCT. BOX - C535(1), R84, R85, C475(1) & SOLDER WT SHIELD SH2, SH3, 20, 20T
RR JCT. BOX - VIMN(87), VIMR(87), VIM4(30) & SOLDER WT SHIELD SH1
RR JCT BOX - RETARDER FAN CLUTCH C508(3)
RR JCT BOX - A/C & HEAT JCT PANEL
RR JCT BOX - DOCKING LTS RESISTORS

SIDE WINDOWS EMERGENCY EXIT LTS C36(2)
LH HAT RACK & GEN C204(2), FLUOR. C208(3)
AISLE LTS C83(1)
LH READ LTS C207(1), PASS & HOST CHIME SW
RH HAT RACK & GEN C204(2), FLUOR. C202(3)
RH READ LTS C206(1), PASS & HOST CHIME SW
LAV. OCC. LT C143(3), GAL. LT C328(1) FLUOR C41(1)
WCL RELAY R94 (85) & R98 (85)
RR END LAMPS RH C119 (A)
RR END LAMPS LH C120 (A)
ENG CPT C126(B), C128(2), C129(2), C130(2), C131(2), C422(1)
ENG CPT C230(2), C127(B), C122(B), C124(A)
ENG CPT C125(B)
RR ROOF CLEARANCE LTS C87(2)
& ENGINE CPT C287(A), C432(2) & C115(B)
RR ROOF CAMERA C87(1)
RR SIDE MARK C113, FLASH LH C114 & RH C121

LUG CPT RH SIDE MARKER C103, FLASHER C104

LUG CPT FUEL TANK C152(A), DAMPER C111(2), WATER VALVE C155(D), BYPASS VALVE C156(B), LH SIDE FLASHER C102, LH SIDE MARKER C103

0-0-18, 0-0A-16 → M; 0-0W-18 → M; M → 0-0B-10
0-0R-16, C59 1, 0-0K-16, 0-0DR-14
0-16, C36 2, C37 2, C144 1, C37 7, C38 2, C35 1, 0-0D-14, 0-0E-14, 0-0F-14, 0-0G-14, 0-0H-16, 15, 0-0WC-16 → N, O; O → 0-0C-10
0-0RH-16, 0-0LH-16 → 0-0X-12; 0-0P-14, 0-0R-14 → 0-0X-12; 0-0N-14 → 0-0Y-12; 0-0K-14, 0-0J-16, 0-0DF-14 → 0-0Y-12; 0-0B-14 → 0-0Z-12; 0-0A-14 → 0-0Z-12
→ REAR JCT BOX GROUND STUD

BATTERY COMPARTMENT (BC)

BAT CPT - RELAYS R2, R3, R54, R55
ENGINE-SOLDER SHIELD SH1, SH2, SH3 & C326(B)
VOLTAGE REGULATOR
GALLEY INVERTER JUNCTION BLOCK
GALLEY COFFEMAKER
GALLEY R47 R48 R79, C403 LAMP, SW LT, HEAT CONT.
WHEEL CHAIR LIFT RICON

0-0-16, 0-0A-16, C397 1, 0-0A-16, 0-0AA-12, 0-0-6, 0-0-10, 0-0-16, 0-0W-6 → BATTERY COMPARTMENT GROUND STUD

EVAP. COMPT. (EC)

CONDENSER FAN SPEED. RLY R39, R40, R41 P. 13.4
CONDENSER FAN RELAY P. 13.4
CONDENSER FAN LH P. 13.4
EVAP. FAN P. 13.4

0-0C-16, 0-0D-10, 0-0D-10, 0-0-1 → EVAP. COMPARTMENT GROUND STUD

RR JCT BOX (RBG)

DDEC ACCES. BATTERY GROUND SEE PAGE 5.1
WORLD TRANS. ACCES. BAT. GRD SEE PAGE 6.1

0-953-18, 0-143W-12 → P; 0-00-12, 0-00-12 → FROM BATTERY COMPARTMENT ELECTRONIC GROUND JCT BLOCK SEE PAGE 1.1

FR JCT BOX (FBG)

TELL TALE LIGHT MODULE SEE PAGE 28.1
CLUSTER SEE P.7.1
HVAC DASH MODULE SEE P. 13.1
WIRELESS MIC. CHARGER P. 20.5

C74 36, 0-00A-18, 0-00-16

BATTERY GROUND

PREVOST | WIRING DIAGRAM | NO: D060949 | PAGE: 3.1 | REVISION 10

CHASSIS GROUND

FRONT JUNCTION BOX COMPARTMENT

FRONT SECTION (FS)

FRONT SERVICE CPT C105 (B), C106 (B), C239 (B), C260 (A&B), C183 (A)
FRONT SERVICE CPT C267 (7), C536 (4)
FRONT SERVICE CPT C323 (1), SH1, SH3
BEHIND DASH RH PANEL C452 (1), AA2 (85)
FRONT JCT. BOX - RELAYS & C522 (87)

FRONT SERVICE CPT C435 (2), C246 (3), C242 (3) & STEP LT
FRONT SERVICE CPT C102 (GRD), C103 (GRD), C104 (GRD), LO BUOY SW & STEP LT
FRONT SERVICE CPT HEADLAMP CON C243
FRONT JCT. BOX - CORNERING LTS RESISTORS
FRONT JCT. BOX - FOG LTS RESISTORS
LH CONSOLE

WIPER MOTOR C177 (1) & PULSE MOD. C176 (1) & RH MIRROR C269 (3)
DRIVER'S HTR FAN SPEED CTRL MOD. C175 (5)
FR. SERV. CPT-HORNS C101 (B), & WASHER PUMP
RADIATOR FAN CLUTCH SPEED 2 C549
FR. JCT. BOX - WIPER PULSE MOD. C248 (1)

LH CONSOLE SWITCH
FRONT SERVICE CPT - LH MIRROR C268 (3)

FR. SERV. CPT- TAG PRESSURE SW.

LH SWITCH PANEL

DASH LH PANEL
BEHIND DASH PANEL-AUDIBLE FLASHER C424 (1)

BEHIND DASH PANEL - B/U MONITOR C394 (2)
CLUSTER
WIRELESS MIC.CHARGER P.20.5
FR. JCT BOX - GROUND JCT BLOCK - SHIFTER & DDR CONNECTOR
12V POWER OUTLET

HVAC DASH MODULE SEE P. 13.1

0-0C-14, 0-0C1-14, 0-0C2-18, 0-0C3-18, 0-0C4-18, C3 15, 0-0C4-14 → FRONT JCT BOX 0C GROUND STUD

0-0L-14, 0-0L1-14, 0-0L2-12, 0-0L3-14, C3 22, 0-0L3-14, 0-0L4-14, C3 16, 0-0L4-14, 0-0L5-14, C171 24 → FRONT JCT BOX 0L GROUND STUD

0-0M-14, 0-0M3-12, 0-0M4-14, 0-0M5-14, 0-0M6-14, C3 14, 0-0M6-14, 0-0M7-14, C171 21, 0-0M7-14, 0-0M7-14 → FRONT JCT BOX 0M GROUND STUD

0-0T-18, 0-0T1-18, 0-0T2-18, C3 23, 0-0T3-14, 0-0T4-16, 0-0T5-14 → FRONT JCT BOX 0T GROUND STUD

FRONT ROOF SECTION (FRS)

ROOF ACCES. CLEARANCE LTS C213(1), FAN DEFROST C365(1), DEST. SIGN. C364(1) C478(3), WARNING C362(1) C363(1) C373(1), WIPER MOT. C361(1) & DRIVER'S LTS

HEATING UPPER WINDSHIELD

0-0A-18, 0-0A-18, 0-0A-14, 0-0A-14, 0-0B-12 → FRONT LH ROOF GROUND STUD

REAR JUNCTION BOX COMPARTMENT

REAR SECTION (RS)

RR JCT. BOX - RELAYS
RR JCT. BOX - C535(1), R84, R85, C475(1) & SOLDER WT SHIELD SH2, SH3, 20, 20T
RR JCT. BOX - VIMN(87), VIMR(87), VIM4(30) & SOLDER WT SHIELD SH1
RR JCT BOX - RETARDER FAN CLUTCH C508(3)
RR JCT BOX - A/C & HEAT JCT PANEL
RR JCT BOX - DOCKING LTS RESISTORS

SIDE WINDOWS EMERGENCY EXIT LTS C36(2)
LH HAT RACK & GEN C204(2), FLUOR. C208(3)
AISLE LTS C83(1)
LH READ LTS C207(1), PASS & HOST CHIME SW
RH HAT RACK & GEN C204(2), FLUOR. C202(3)
RH READ LTS C206(1), PASS & HOST CHIME SW
LAV. OCC. LT C143(3), GAL. LT C328(1) FLUOR C41(1)
WCL RELAY R94 (85) & R98 (85)
RR END LAMPS RH C119 (A)
RR END LAMPS LH C120 (A)
ENG CPT C126(B), C128(2), C129(2), C130(2), C131(2), C422(1)
ENG CPT C230(2), C127(B), C122(B), C124(A)
ENG CPT C125(B)
RR ROOF CLEARANCE LTS C87(2) & ENGINE CPT C287(A), C432(2) & C115(B)
RR ROOF CAMERA C87(1)
RR SIDE MARK C113, FLASH LH C114 & RH C121

LUG CPT RH SIDE MARKER C103, FLASHER C104

LUG CPT FUEL TANK C152(A), DAMPER C111(2), WATER VALVE C155(D), BYPASS VALVE C156(B), LH SIDE FLASHER C102, LH SIDE MARKER C103

0-0-18, 0-0A-16, 0-0W-18 → M → 0-0B-10
0-0R-16, C59 1, 0-0K-16, 0-0DR-14 → N
0-16, C36 2, C37 2, C144 1, C37 7, C38 2, C35 1–15, 0-0D-14, 0-0E-14, 0-0F-14, 0-0G-14, 0-0H-16, 0-0WC-16 → O → 0-0C-10
0-0RH-16, 0-0LH-16, 0-0P-14, 0-0R-14, 0-0N-14, 0-0K-14, 0-0J-16, 0-0DF-14, 0-0B-14, 0-0A-14 → 0-0X-12, 0-0X-12, 0-0Y-12, 0-0Y-12, 0-0Z-12, 0-0Z-12 → REAR JCT BOX GROUND STUD

BATTERY COMPARTMENT (BC)

BAT CPT - RELAYS R2, R3, R54, R55
ENGINE-SOLDER SHIELD SH1, SH2, SH3 & C326(B)
VOLTAGE REGULATOR
GALLEY INVERTER JUNCTION BLOCK
GALLEY COFFEMAKER
GALLEY R47 R48 R79, C403 LAMP, SW LT, HEAT CONT.
WHEEL CHAIR LIFT RICON

0-0-16, 0-0A-16, C397 1, 0-0A-16, 0-0AA-12, 0-0-6, 0-0-10, 0-0-16, 0-0W-6 → BATTERY COMPARTMENT GROUND STUD

EVAP. COMPT. (EC)

CONDENSER FAN SPEED. RLY R39, R40, R41 P. 13.4
CONDENSER FAN RELAY P. 13.4
CONDENSER FAN LH P. 13.4
EVAP. FAN P. 13.4

0-0C-16, 0-0D-10, 0-0D-10, 0-0-1 → EVAP. COMPARTMENT GROUND STUD

RR JCT BOX (RBG)

DDEC ACCES. BATTERY GROUND SEE PAGE 5.1
WORLD TRANS. ACCES. BAT. GRD SEE PAGE 6.1

0-953-18, 0-143W-12 → P → 0-00-12, 0-00-12 → FROM BATTERY COMPARTMENT ELECTRONIC GROUND JCT BLOCK SEE PAGE 1.1

FR JCT BOX (FBG)

TELL TALE LIGHT MODULE SEE PAGE 28.1
CLUSTER SEE P.7.1
WIRELESS MIC. CHARGER P. 20.5

C74 36, 0-00A-18, 0-00-16

BATTERY GROUND

PREVOST | WIRING DIAGRAM | NO: D060949 | PAGE: 3.1 | REVISION 14

CHASSIS GROUND

FRONT SECTION — FRONT JUNCTION BOX COMPARTMENT (FS)

- FRONT SERVICE CPT C105 (B), C106 (B), C239 (B), C260 (A&B), C183 (A)
- FRONT SERVICE CPT C267 (7), C536 (4)
- FRONT SERVICE CPT C323 (1), SH1, SH3
- BEHIND DASH RH PANEL C452 (1), AA2 (85)
- FRONT JCT. BOX - RELAYS & C522 (87)

→ 0-0C-14, 0-0C1-18, 0-0C1-14, 0-0C2-18, 0-0C3-18, 0-0C4-18, C3 15, 0-0C4-14 → FRONT JCT BOX 0C GROUND STUD

- FRONT SERVICE CPT C435 (2), C246 (3), C242 (3) & STEP LT
- FRONT SERVICE CPT C102 (GRD), C103 (GRD), C104 (GRD), LO BUOY SW & STEP LT
- FRONT SERVICE CPT HEADLAMP CON C243
- FRONT JCT. BOX - CORNERING LTS RESISTORS
- FRONT JCT. BOX - FOG LTS RESISTORS
- LH CONSOLE

→ 0-0L-14, 0-0L1-14, 0-0L2-12, 0-0L3-14, C3 22, 0-0L3-14, 0-0L4-14, C3 16, 0-0L4-14, 0-0L5-14, 24 C171 → FRONT JCT BOX 0L GROUND STUD

- WIPER MOTOR C177 (1) & PULSE MOD. C176 (1) & RH MIRROR C269 (3)
- DRIVER'S HTR FAN SPEED CTRL MOD. C175 (5)
- FR. SERV. CPT-HORNS C101 (B), & WASHER PUMP
- RADIATOR FAN CLUTCH SPEED 2 C549
- FR. JCT. BOX - WIPER PULSE MOD. C248 (1)
- LH CONSOLE SWITCH
- FRONT SERVICE CPT - LH MIRROR C268 (3)

→ 0-0M-14, 0-0M3-12, 0-0M4-14, 0-0M5-14, 0-0M6-14, C3 14, 0-0M6-14, 0-0M7-14, C171 21, 0-0M7-14, 0-0M7-14 → FRONT JCT BOX 0M GROUND STUD

- FR. SERV. CPT- TAG PRESSURE SW.
- LH SWITCH PANEL
- DASH LH PANEL
- BEHIND DASH PANEL-AUDIBLE FLASHER C424 (1)
- BEHIND DASH PANEL - B/U MONITOR C394 (2)
- CLUSTER
- WIRELESS MIC.CHARGER P.20.5
- FR. JCT BOX - GROUND JCT BLOCK - SHIFTER & DDR CONNECTOR
- STEERING CONTROL ZF P. 15.1
- 12V POWER OUTLET
- HVAC DASH MODULE SEE P. 13.1

→ 0-0T-18, 0-0T1-18, 0-0T2-18, C3 23, 0-0T3-14, 0-0T3-14, 0-0T4-16, 0-0T5-14 → FRONT JCT BOX 0T GROUND STUD

FRONT ROOF SECTION (FRS)

- ROOF ACCES. CLEARANCE LTS C213(1), FAN DEFROST C365(1), DEST. SIGN. C364(1) C478(3), WARNING C362(1) C363(1) C373(1), WIPER MOT. C361(1) & DRIVER'S LTS
- HEATING UPPER WINDSHIELD

→ 0-0A-18, 0-0A-18, 0-0A-14, 0-0A-14, 0-0B-12 → FRONT LH ROOF GROUND STUD

REAR SECTION — REAR JUNCTION BOX COMPARTMENT (RS)

- RR JCT. BOX - RELAYS
- RR JCT. BOX - C535(1), R84, R85, C475(1) & SOLDER WT SHIELD SH2, SH3, 20, 20T
- RR JCT. BOX - VIMN(87), VIMR(87), VIM4(30) & SOLDER WT SHIELD SH1
- RR JCT BOX - RETARDER FAN CLUTCH C508(3)
- RR JCT BOX - A/C & HEAT JCT PANEL
- RR JCT BOX - DOCKING LTS RESISTORS
- SIDE WINDOWS EMERGENCY EXIT LTS C36(2)
- LH HAT RACK & GEN C204(2), FLUOR. C208(3)
- AISLE LTS C83(1)
- LH READ LTS C207(1), PASS & HOST CHIME SW
- RH HAT RACK & GEN C204(2), FLUOR. C202(3)
- RH READ LTS C206(1), PASS & HOST CHIME SW
- LAV. OCC. LT C143(3), GAL. LT C328(1) FLUOR C41(1)
- WCL RELAY R94 (85) & R98 (85)
- RR END LAMPS RH C119 (A)
- RR END LAMPS LH C120 (A)
- ENG CPT C126(B), C128(2), C129(2), C130(2), C131(2), C422(1)
- ENG CPT C230(2), C127(B), C122(B), C124(A)
- ENG CPT C125(B)
- RR ROOF CLEARANCE LTS C87(2) & ENGINE CPT C287(A), C432(2) & C115(B)
- RR ROOF CAMERA C87(1)
- RR SIDE MARK C113, FLASH LH C114 & RH C121
- LUG CPT RH SIDE MARKER C103, FLASHER C104
- LUG CPT FUEL TANK C152(A), DAMPER C111(2), WATER VALVE C155(D), BYPASS VALVE C156(B), LH SIDE FLASHER C102, LH SIDE MARKER C103

→ 0-0-18, 0-0A-16, 0-0W-18 → M → 0-0B-10
→ 0-0R-16, C59 1, 0-0K-16, 0-0DR-14 → N → 0-0B-10
→ 0-16, C36 2, C37 2, C144 1, C37 7, C38 2, C35 1 2 3 4 15, 0-0D-14, 0-0E-14, 0-0F-14, 0-0G-14, 0-0H-16, 0-0WC-16 → O → 0-0C-10
0-0RH-16, 0-0LH-16 → 0-0X-12
0-0P-14, 0-0R-14 → 0-0X-12
0-0N-14, 0-0K-14 → 0-0Y-12
0-0J-16, 0-0DF-14 → 0-0Y-12
0-0B-14 → 0-0Z-12
0-0A-14 → 0-0Z-12
→ REAR JCT BOX GROUND STUD

BATTERY COMPARTMENT (BC)

- BAT CPT - RELAYS R2, R3, R54, R55
- ENGINE-SOLDER SHIELD SH1, SH2, SH3 & C326(B)
- VOLTAGE REGULATOR
- GALLEY INVERTER JUNCTION BLOCK
- GALLEY COFFEMAKER
- GALLEY R47 R48 R79, C403 LAMP, SW LT, HEAT CONT.
- WHEEL CHAIR LIFT RICON

→ 0-0-16, 0-0A-16, C397 1, 0-0A-16, 0-0AA-12, 0-0-6, 0-0-10, 0-0-16, 0-0W-6 → BATTERY COMPARTMENT GROUND STUD

EVAP. COMPT. (EC)

- CONDENSER FAN SPEED. RLY R39, R40, R41 P. 13.4
- CONDENSER FAN RELAY P. 13.4
- CONDENSER FAN LH P. 13.4
- EVAP. FAN P. 13.4

→ 0-0C-16, 0-0D-10, 0-0D-10, 0-0-1 → EVAP. COMPARTMENT GROUND STUD

RR JCT BOX (RBG)

- DDEC ACCES. BATTERY GROUND SEE PAGE 5.1
- WORLD TRANS. ACCES. BAT. GRD SEE PAGE 6.1


→ 0-953-18, 0-143W-12 → P → 0-00-12, 0-00-12 → FROM BATTERY COMPARTMENT ELECTRONIC GROUND JCT BLOCK SEE PAGE 1.1

FR JCT BOX (FBG)

- TELL TALE LIGHT MODULE SEE PAGE 28.1
- CLUSTER SEE P.7.1
- WIRELESS MIC. CHARGER P. 20.5

→ C74 36, 0-00A-18, 0-00-16

BATTERY GROUND

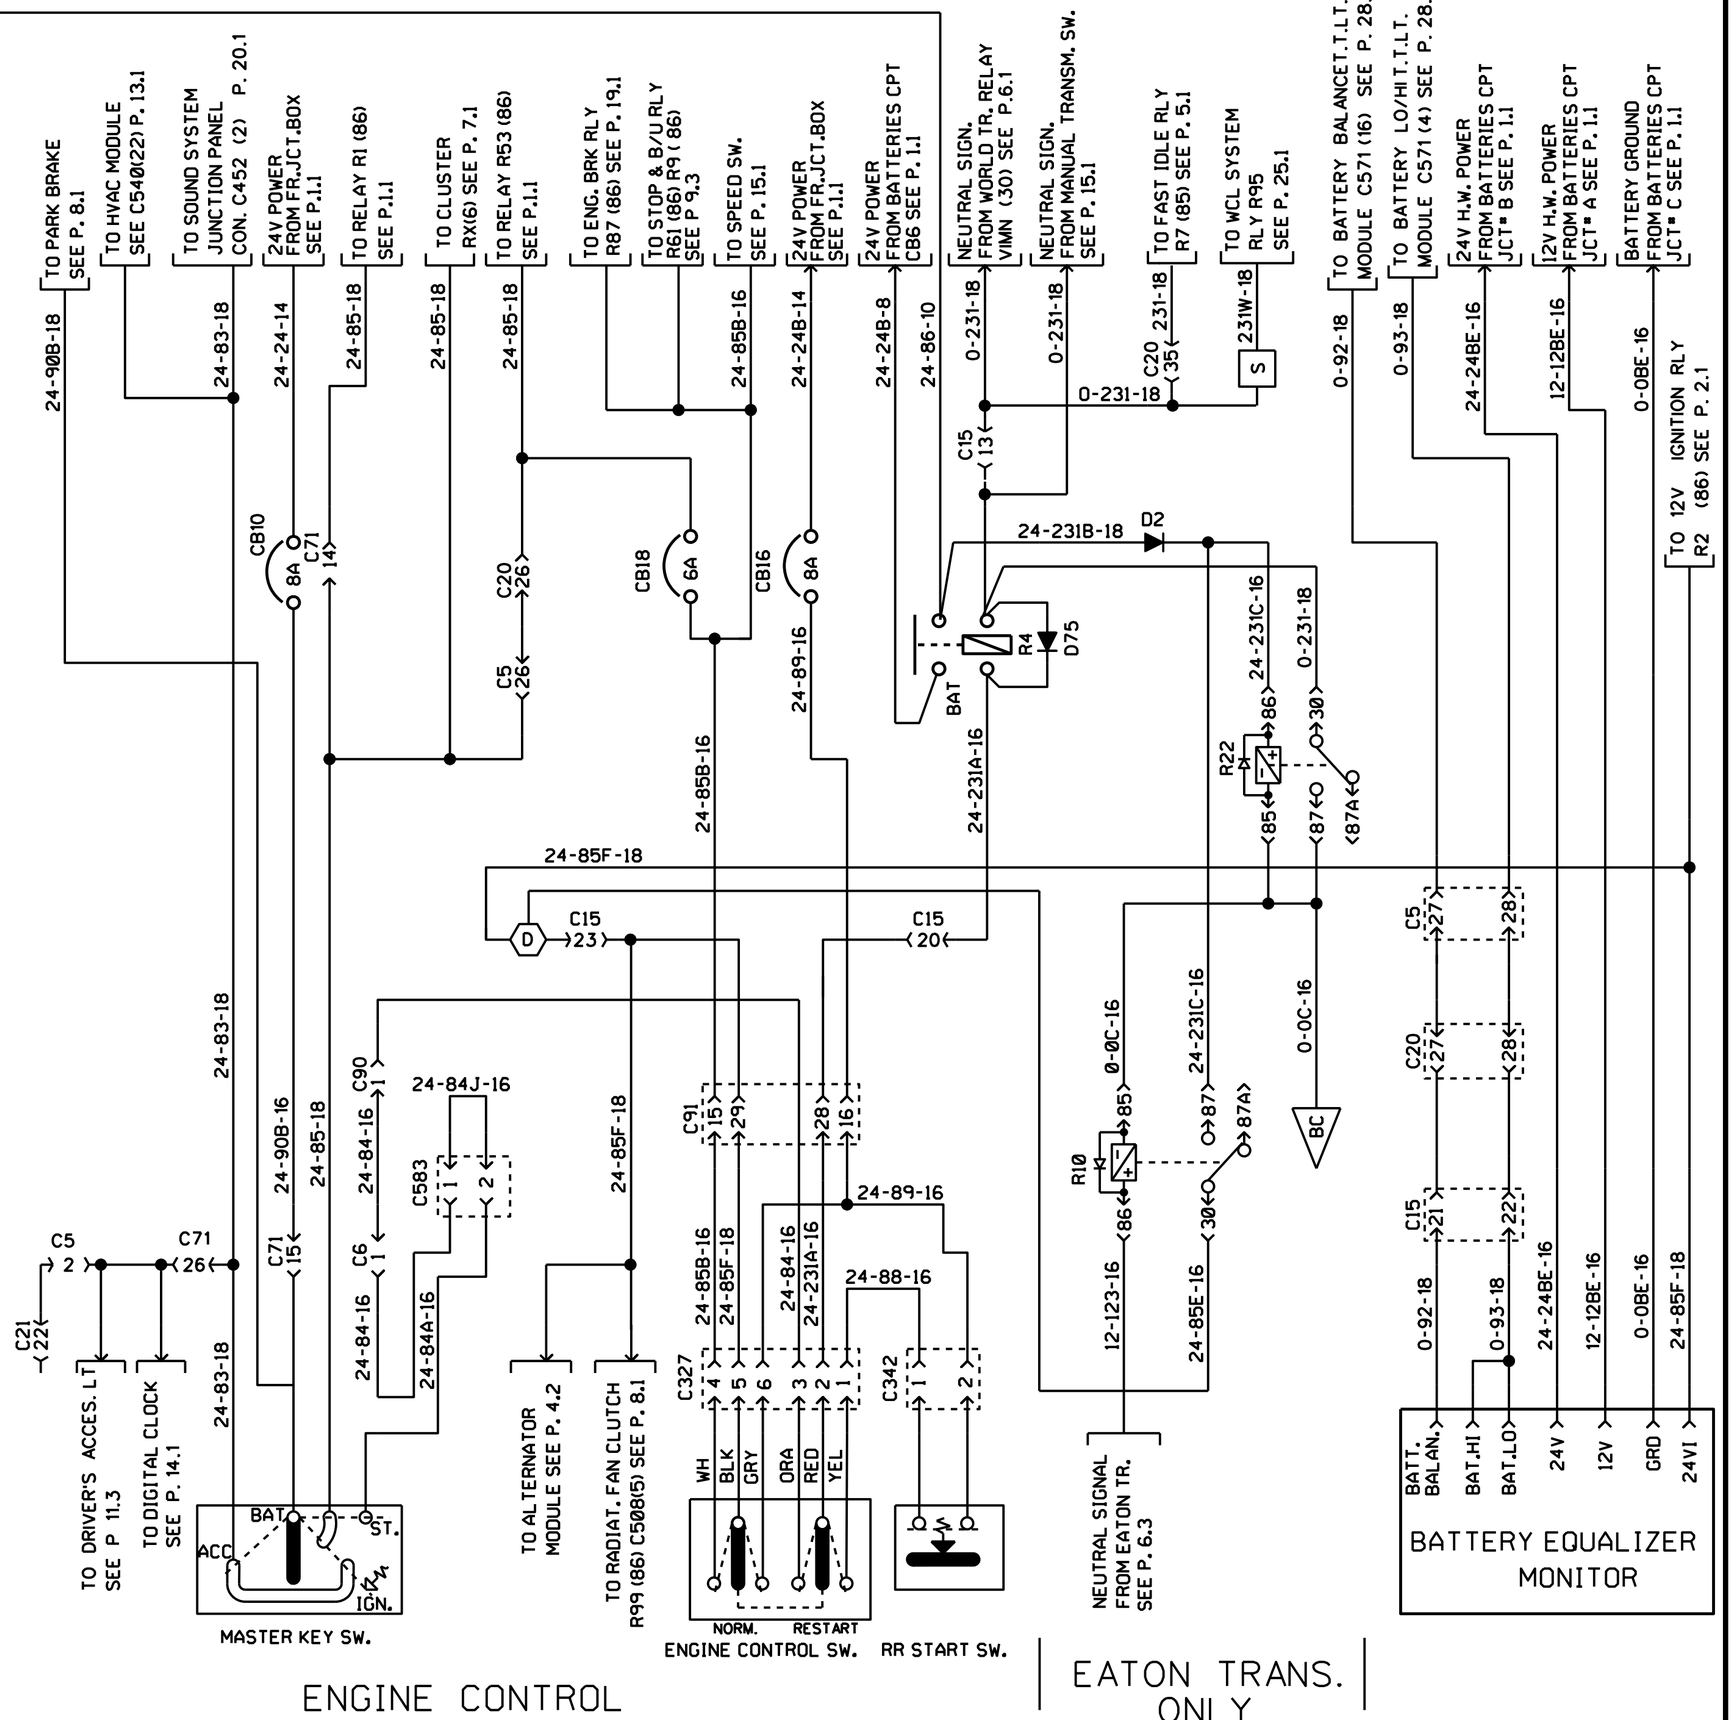
TO STARTER SOL. SEE P. 4.2
24-90B-18
TO PARK BRAKE SEE P. 8.1
TO HVAC MODULE SEE C540(22) P. 13.1
TO SOUND SYSTEM JUNCTION PANEL CON. C452 (2) P. 20.1
24V POWER FROM FR.JCT.BOX SEE P.1.1
TO RELAY R1 (86) SEE P.1.1
TO CLUSTER RX(6) SEE P. 7.1
TO RELAY R53 (86) SEE P.1.1
TO ENG. BRK RLY R87 (86) SEE P. 19.1
TO STOP & B/U RLY R61 (86) R9 (86) SEE P 9.3
TO SPEED SW. SEE P. 15.1
24V POWER FROM FR.JCT.BOX SEE P.1.1
24V POWER FROM BATTERIES CPT CB6 SEE P. 1.1
NEUTRAL SIGN. FROM WORLD TR. RELAY VIMN (30) SEE P.6.1
NEUTRAL SIGN. FROM MANUAL TRANSM. SW. SEE P. 15.1
TO FAST IDLE RLY R7 (85) SEE P. 5.1
TO WCL SYSTEM RLY R95 SEE P. 25.1
TO BATTERY BALANCET.T.L.T. MODULE C571 (16) SEE P. 28.1
TO BATTERY LO/HI T.T.L.T. MODULE C571 (4) SEE P. 28.1
24V H.W. POWER FROM BATTERIES CPT JCT= B SEE P. 1.1
12V H.W. POWER FROM BATTERIES CPT JCT= A SEE P. 1.1
BATTERY GROUND FROM BATTERIES CPT JCT= C SEE P. 1.1
TO 12V IGNITION RLY R2 (86) SEE P. 2.1
CB10 8A
CB18 6A
CB16 8A
C71
C20
C5
C15
BAT
R4
D75
D2
24-231B-18
24-231A-16
24-231C-16
R22
85
86
87
87A
30
24-85F-18
24-85B-16
24-89-16
24-88-16
24-83-18
24-85-18
24-84-16
24-84A-16
24-84J-16
24-90B-16
24-85F-18
C90
C583
C6
C91
C327
C342
C21
C5
C71
TO DRIVER'S ACCES. LT SEE P 11.3
TO DIGITAL CLOCK SEE P. 14.1
BAT
ST.
ACC
IGN.
MASTER KEY SW.
TO ALTERNATOR MODULE SEE P. 4.2
TO RADIAT. FAN CLUTCH R99 (86) C508(5) SEE P. 8.1
WH
BLK
GRY
ORA
RED
YEL
NORM.
RESTART
ENGINE CONTROL SW.
RR START SW.
R10
0-0C-16
12-123-16
24-85E-16
NEUTRAL SIGNAL FROM EATON TR. SEE P. 6.3
BC
BATT. BALAN.
BAT.HI
BAT.LO
24V
12V
GRD
24VI
0-92-18
0-93-18
24-24BE-16
12-12BE-16
0-0BE-16
24-85F-18
BATTERY EQUALIZER MONITOR
ENGINE CONTROL
EATON TRANS. ONLY

PREVOST

WIRING DIAGRAM


ENGINE CONTROL


EATON TRANS. ONLY


NO: D060949

PAGE: 4.1

REVISION 04

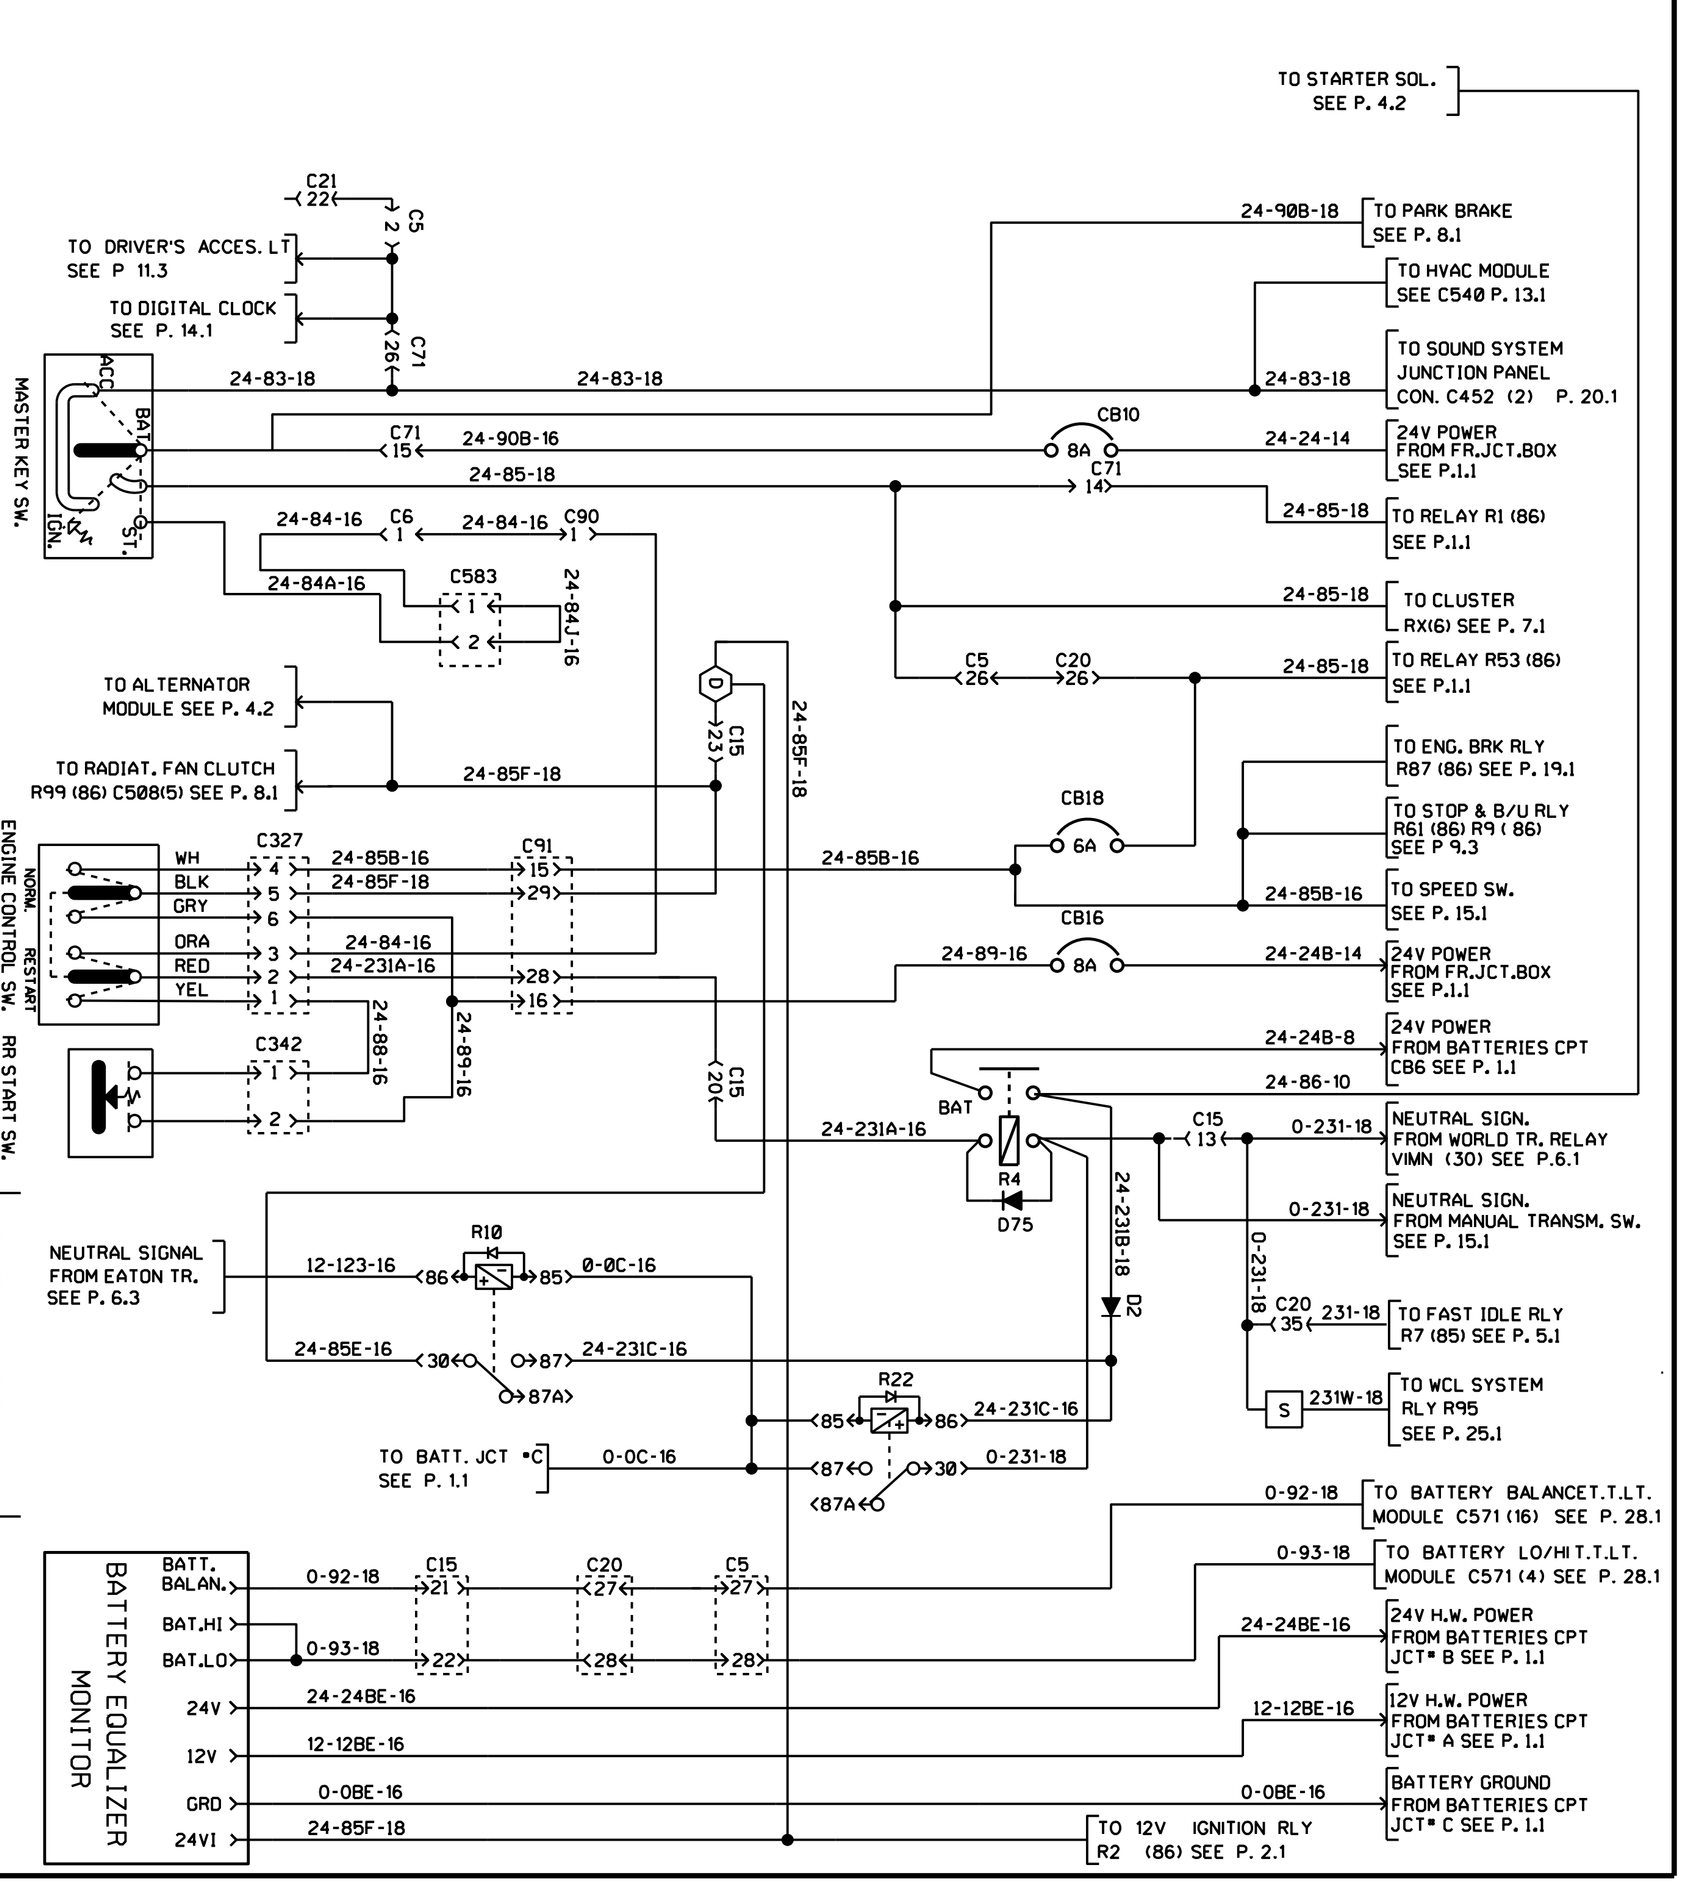

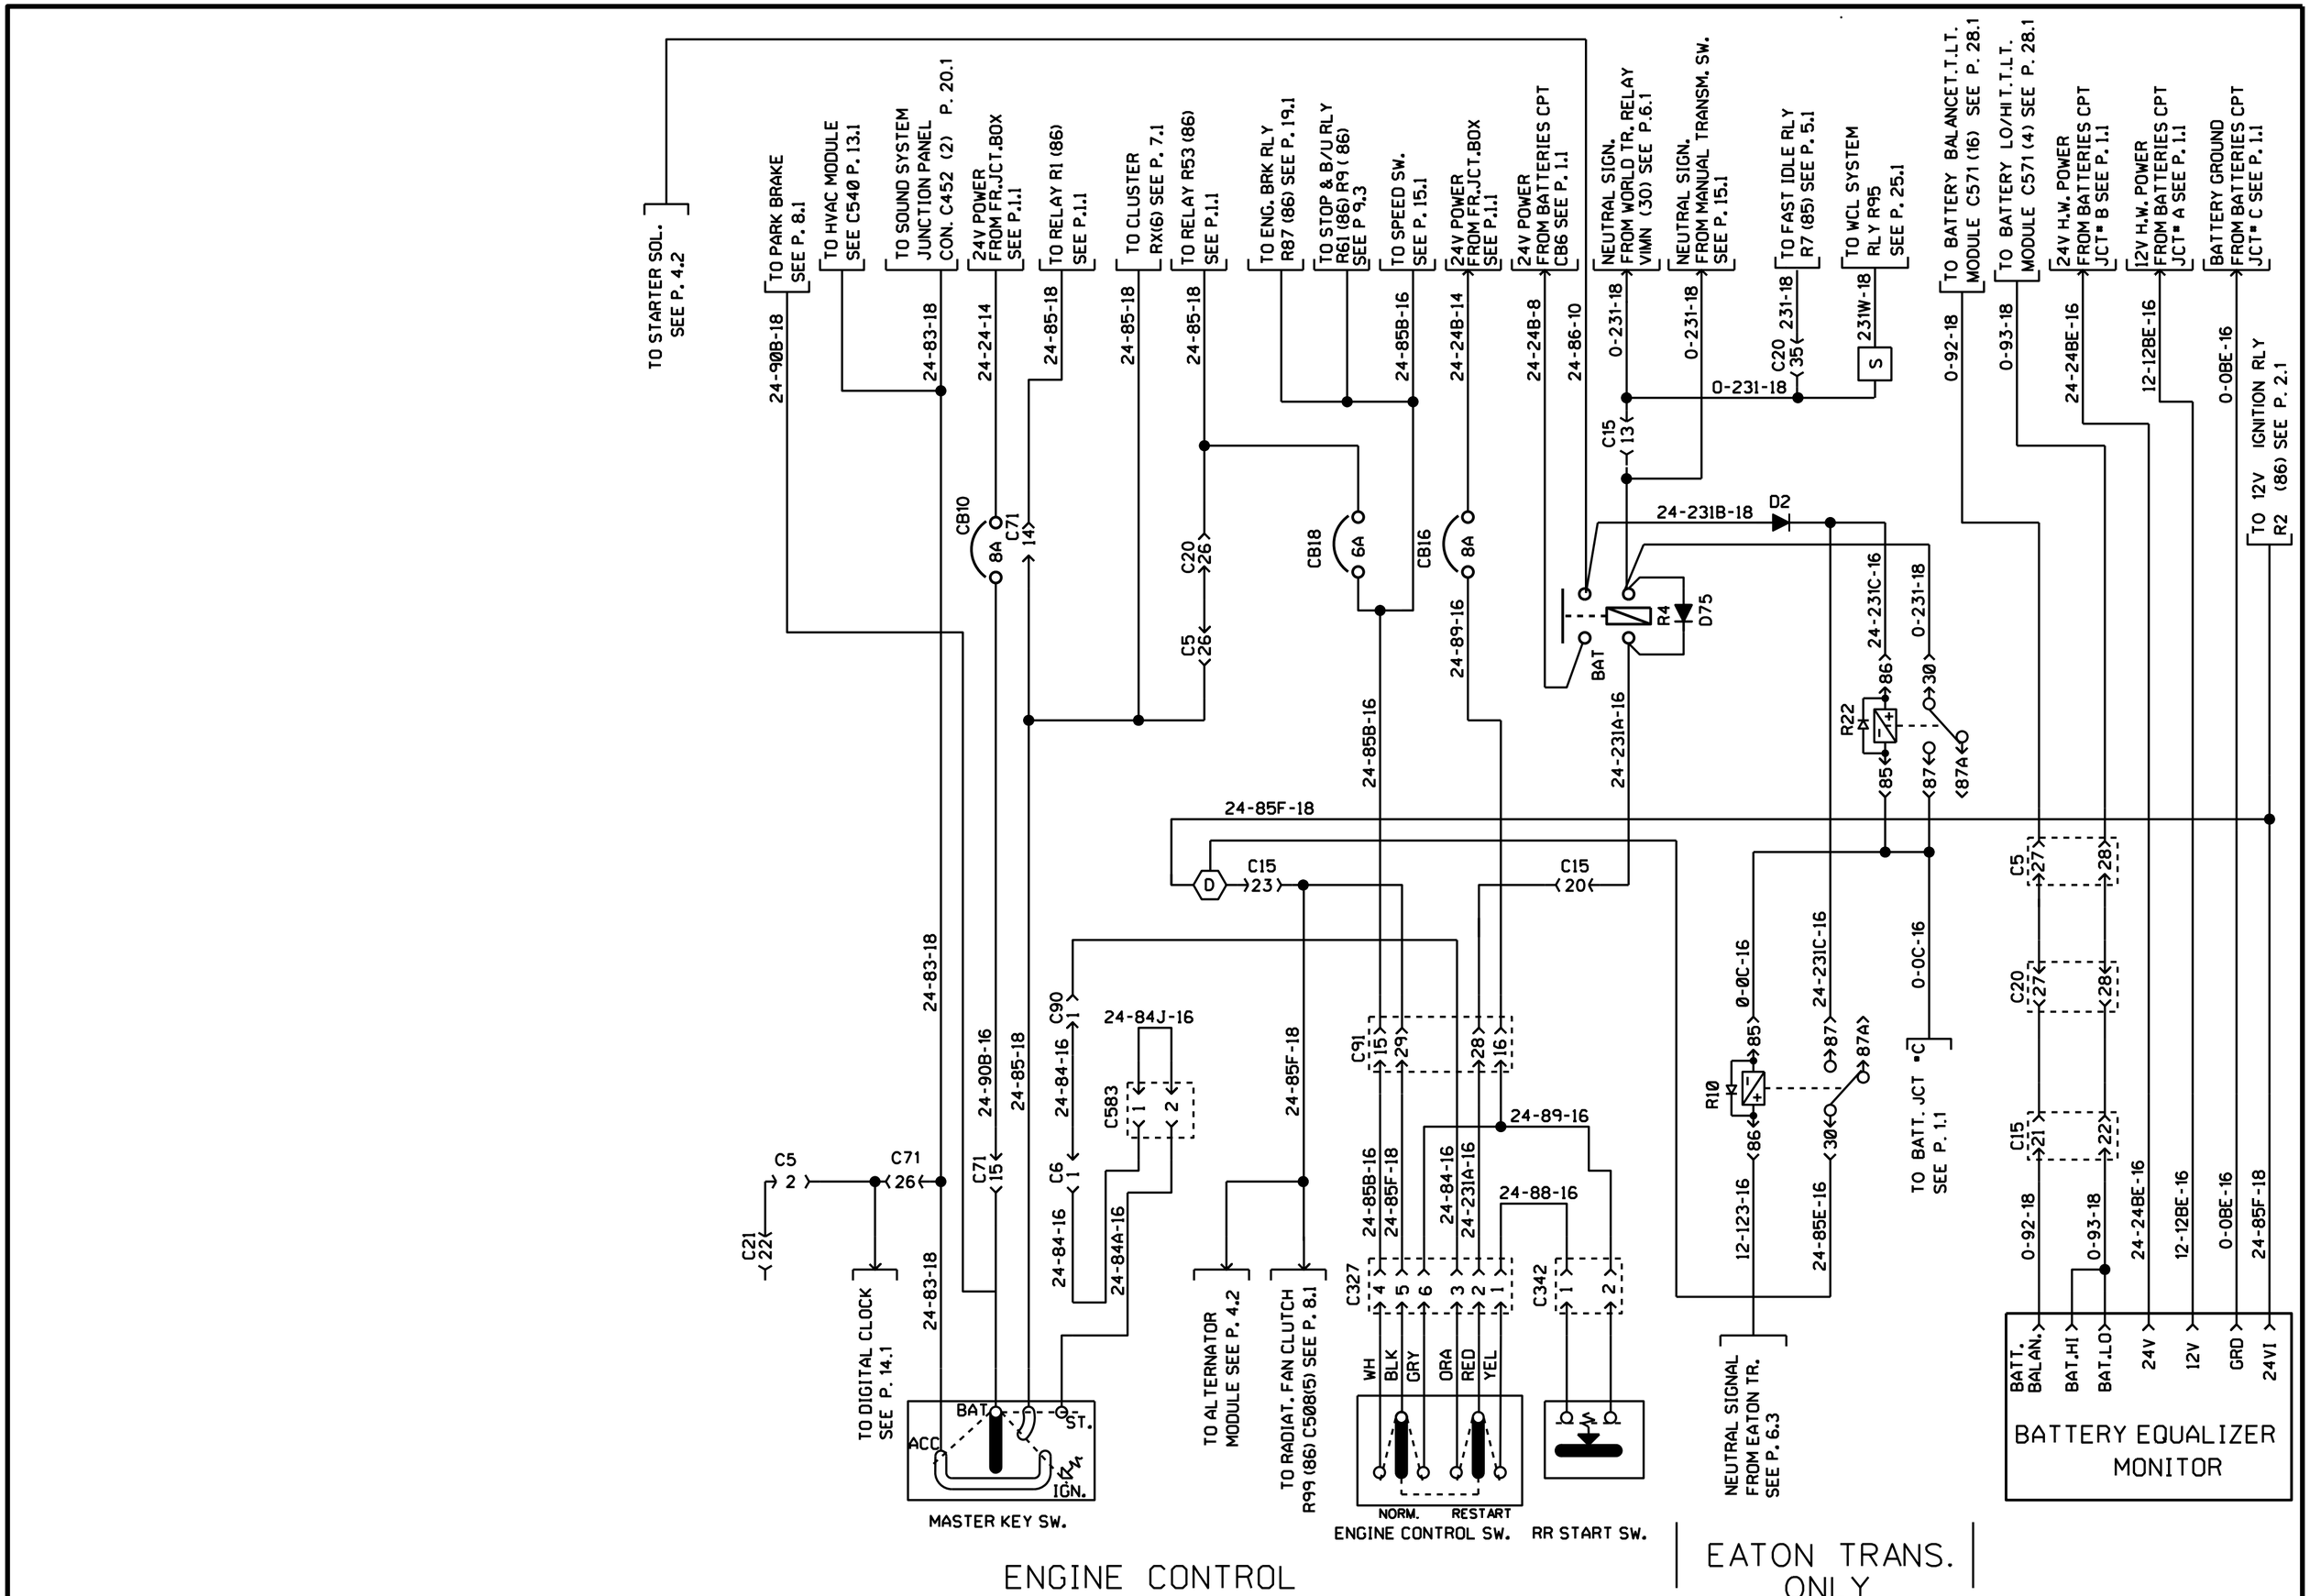
TO STARTER SOL. SEE P. 4.2
24-90B-18
TO PARK BRAKE SEE P. 8.1
TO HVAC MODULE SEE C540 P. 13.1
TO SOUND SYSTEM JUNCTION PANEL CON. C452 (2) P. 20.1
24-83-18
24-24-14
24V POWER FROM FR.JCT.BOX SEE P.1.1
24-85-18
TO RELAY R1 (86) SEE P.1.1
TO CLUSTER RX(6) SEE P. 7.1
TO RELAY R53 (86) SEE P.1.1
TO ENG. BRK RLY R87 (86) SEE P. 19.1
TO STOP & B/U RLY R61 (86) R9 (86) SEE P 9.3
TO SPEED SW. SEE P. 15.1
24-85B-16
24V POWER FROM FR.JCT.BOX SEE P.1.1
24-24B-14
24V POWER FROM BATTERIES CPT CB6 SEE P. 1.1
24-24B-8
24-86-10
NEUTRAL SIGN. FROM WORLD TR. RELAY VIMN (30) SEE P.6.1
0-231-18
C15 13
NEUTRAL SIGN. FROM MANUAL TRANSM. SW. SEE P. 15.1
TO FAST IDLE RLY R7 (85) SEE P. 5.1
C20 35
231-18
TO WCL SYSTEM RLY R95 SEE P. 25.1
231W-18
S
TO BATTERY BALANCET.T.LT. MODULE C571 (16) SEE P. 28.1
0-92-18
TO BATTERY LO/HI T.T.LT. MODULE C571 (4) SEE P. 28.1
0-93-18
24V H.W. POWER FROM BATTERIES CPT JCT= B SEE P. 1.1
24-24BE-16
12V H.W. POWER FROM BATTERIES CPT JCT= A SEE P. 1.1
12-12BE-16
BATTERY GROUND FROM BATTERIES CPT JCT= C SEE P. 1.1
0-0BE-16
TO 12V IGNITION RLY R2 (86) SEE P. 2.1
CB10
8A
C71 14
CB18
6A
CB16
8A
C20 26
C5 26
24-89-16
24-231B-18
D2
BAT
R4
D75
24-231A-16
24-231C-16
R22
86
85
87
30
87A
24-85F-18
D
C15 23
C15 20
C90 1
24-84J-16
C583 1 2
24-84-16
C6 1
24-84A-16
24-85F-18
C91 15 29 28 16
24-85B-16
24-85F-18
24-84-16
24-231A-16
24-89-16
24-88-16
C327 4 5 6 3 2 1
C342 1 2
C5 2
C71 26
C71 15
C21 22
24-83-18
24-90B-16
24-85-18
TO DIGITAL CLOCK SEE P. 14.1
BAT
ST.
ACC
IGN.
MASTER KEY SW.
TO ALTERNATOR MODULE SEE P. 4.2
TO RADIAT. FAN CLUTCH R99 (86) C508(5) SEE P. 8.1
WH
BLK
GRY
ORA
RED
YEL
NORM.
RESTART
ENGINE CONTROL SW.
RR START SW.
R10
0-0C-16
12-123-16
24-85E-16
24-231C-16
0-0C-16
TO BATT. JCT "C" SEE P. 1.1
NEUTRAL SIGNAL FROM EATON TR. SEE P. 6.3
C5 27 28
C20 27 28
C15 21 22
0-92-18
0-93-18
24-24BE-16
12-12BE-16
0-0BE-16
24-85F-18
BATT. BALAN.
BAT.HI
BAT.LO
24V
12V
GRD
24VI
BATTERY EQUALIZER MONITOR
ENGINE CONTROL
EATON TRANS. ONLY

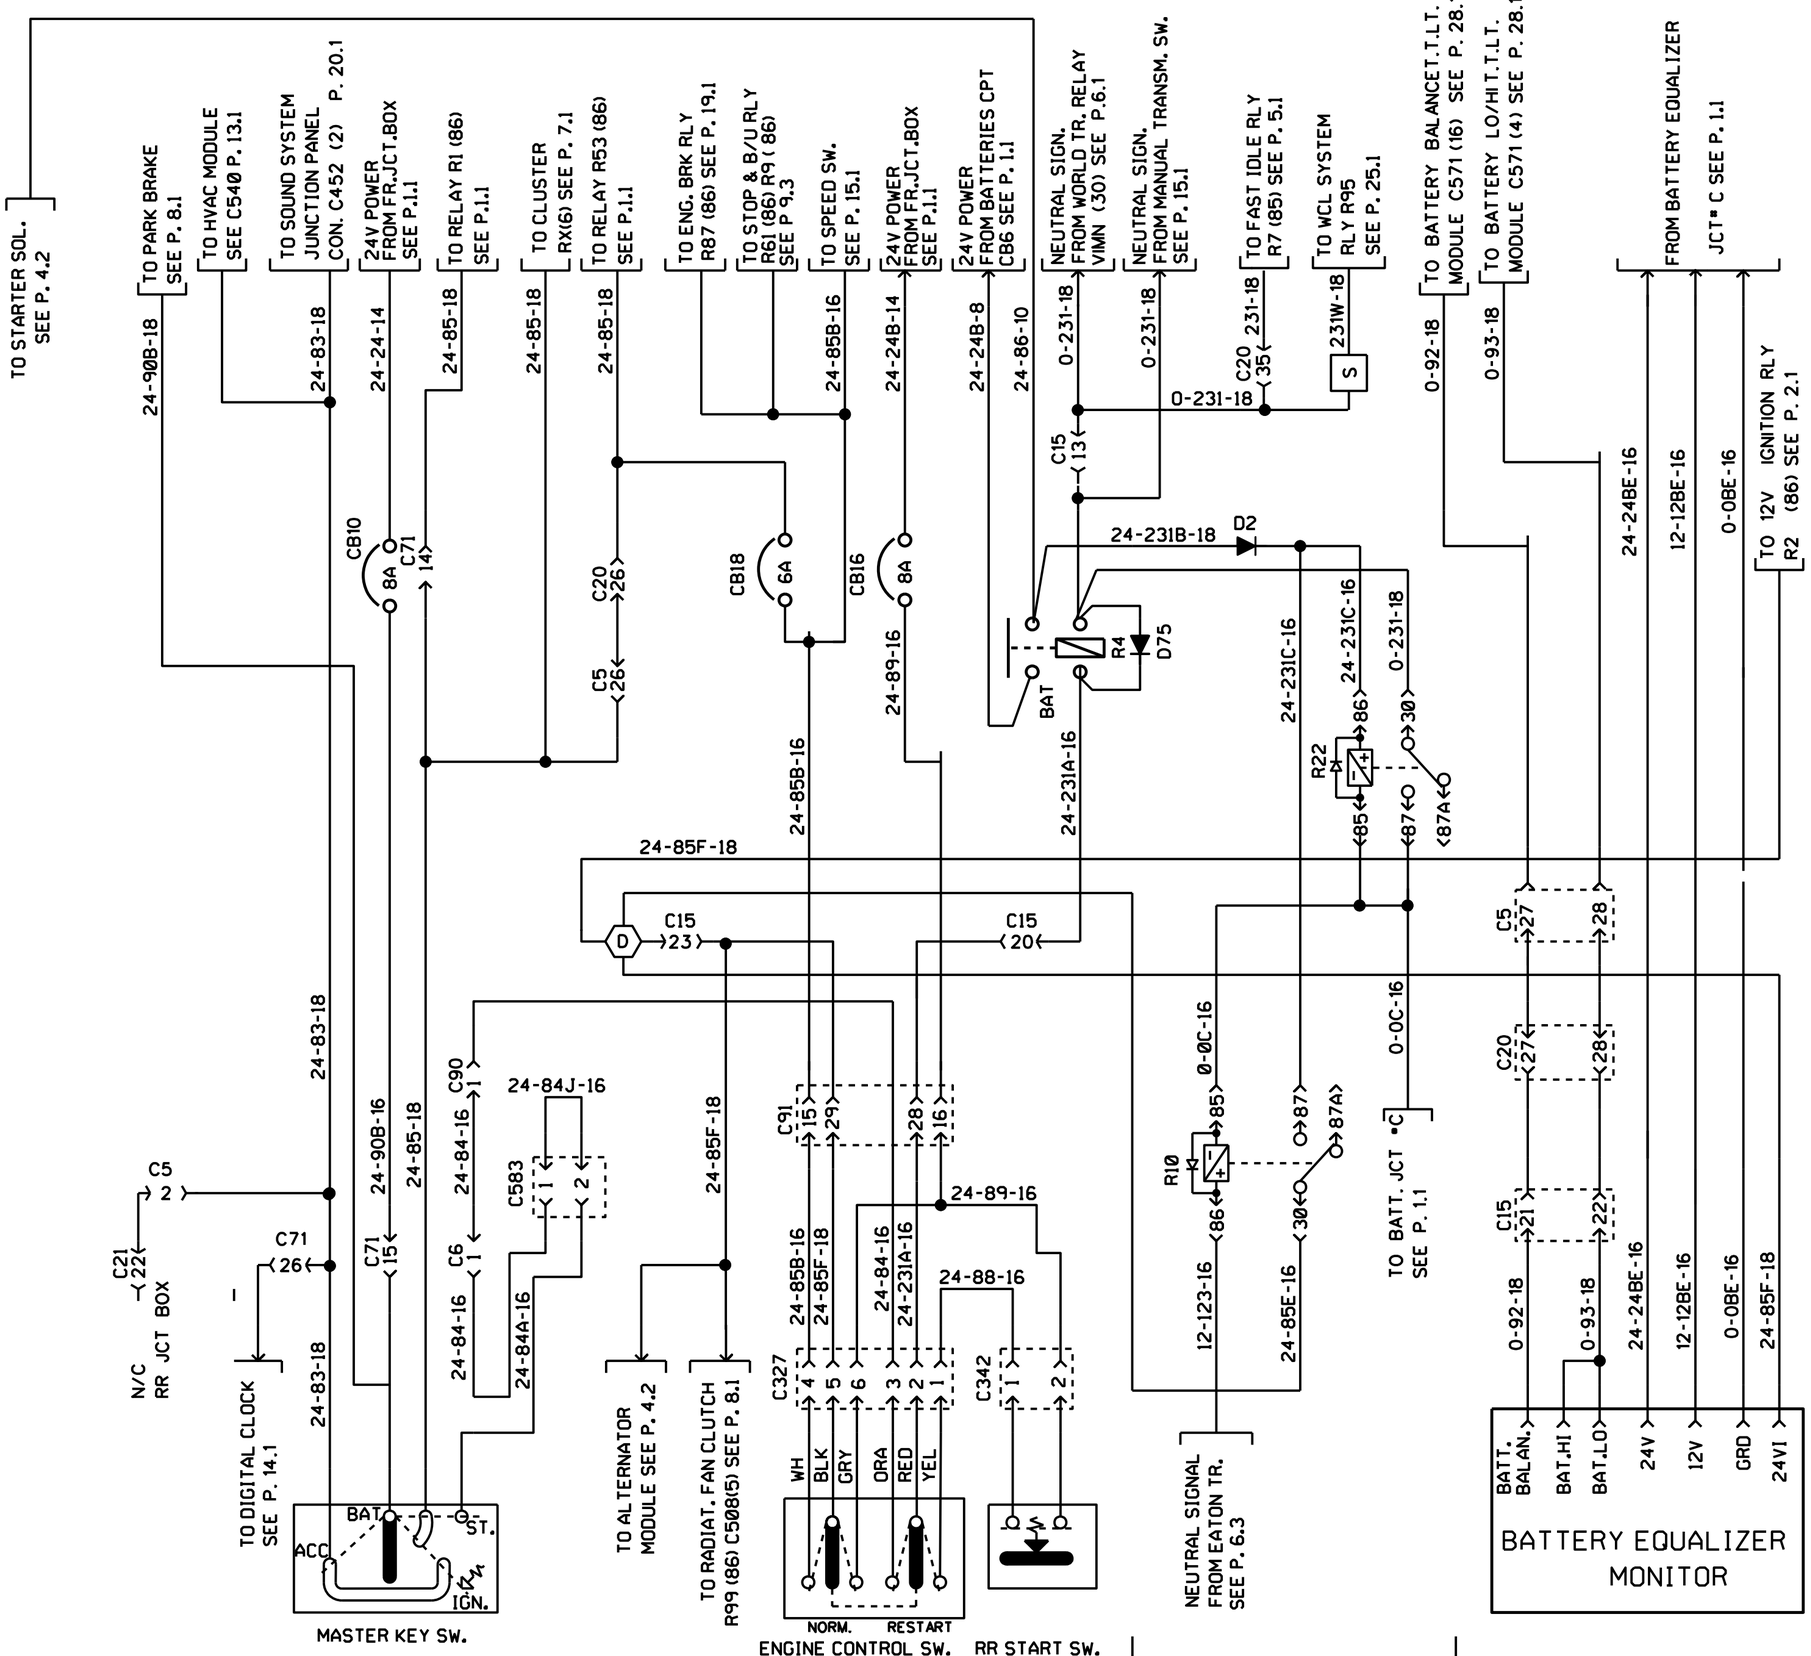

ENGINE CONTROL

EATON TRANS. ONLY


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 4.1	REVISION 08


PREVOST | WIRING DIAGRAM

SPECIAL CHARGING SYSTEM &

ENGINE CONTROL WITH POWER SHUTDOWN & IDLER TIMER


NO: D060949 | PAGE: 4.1 sp1 | REVISION 00

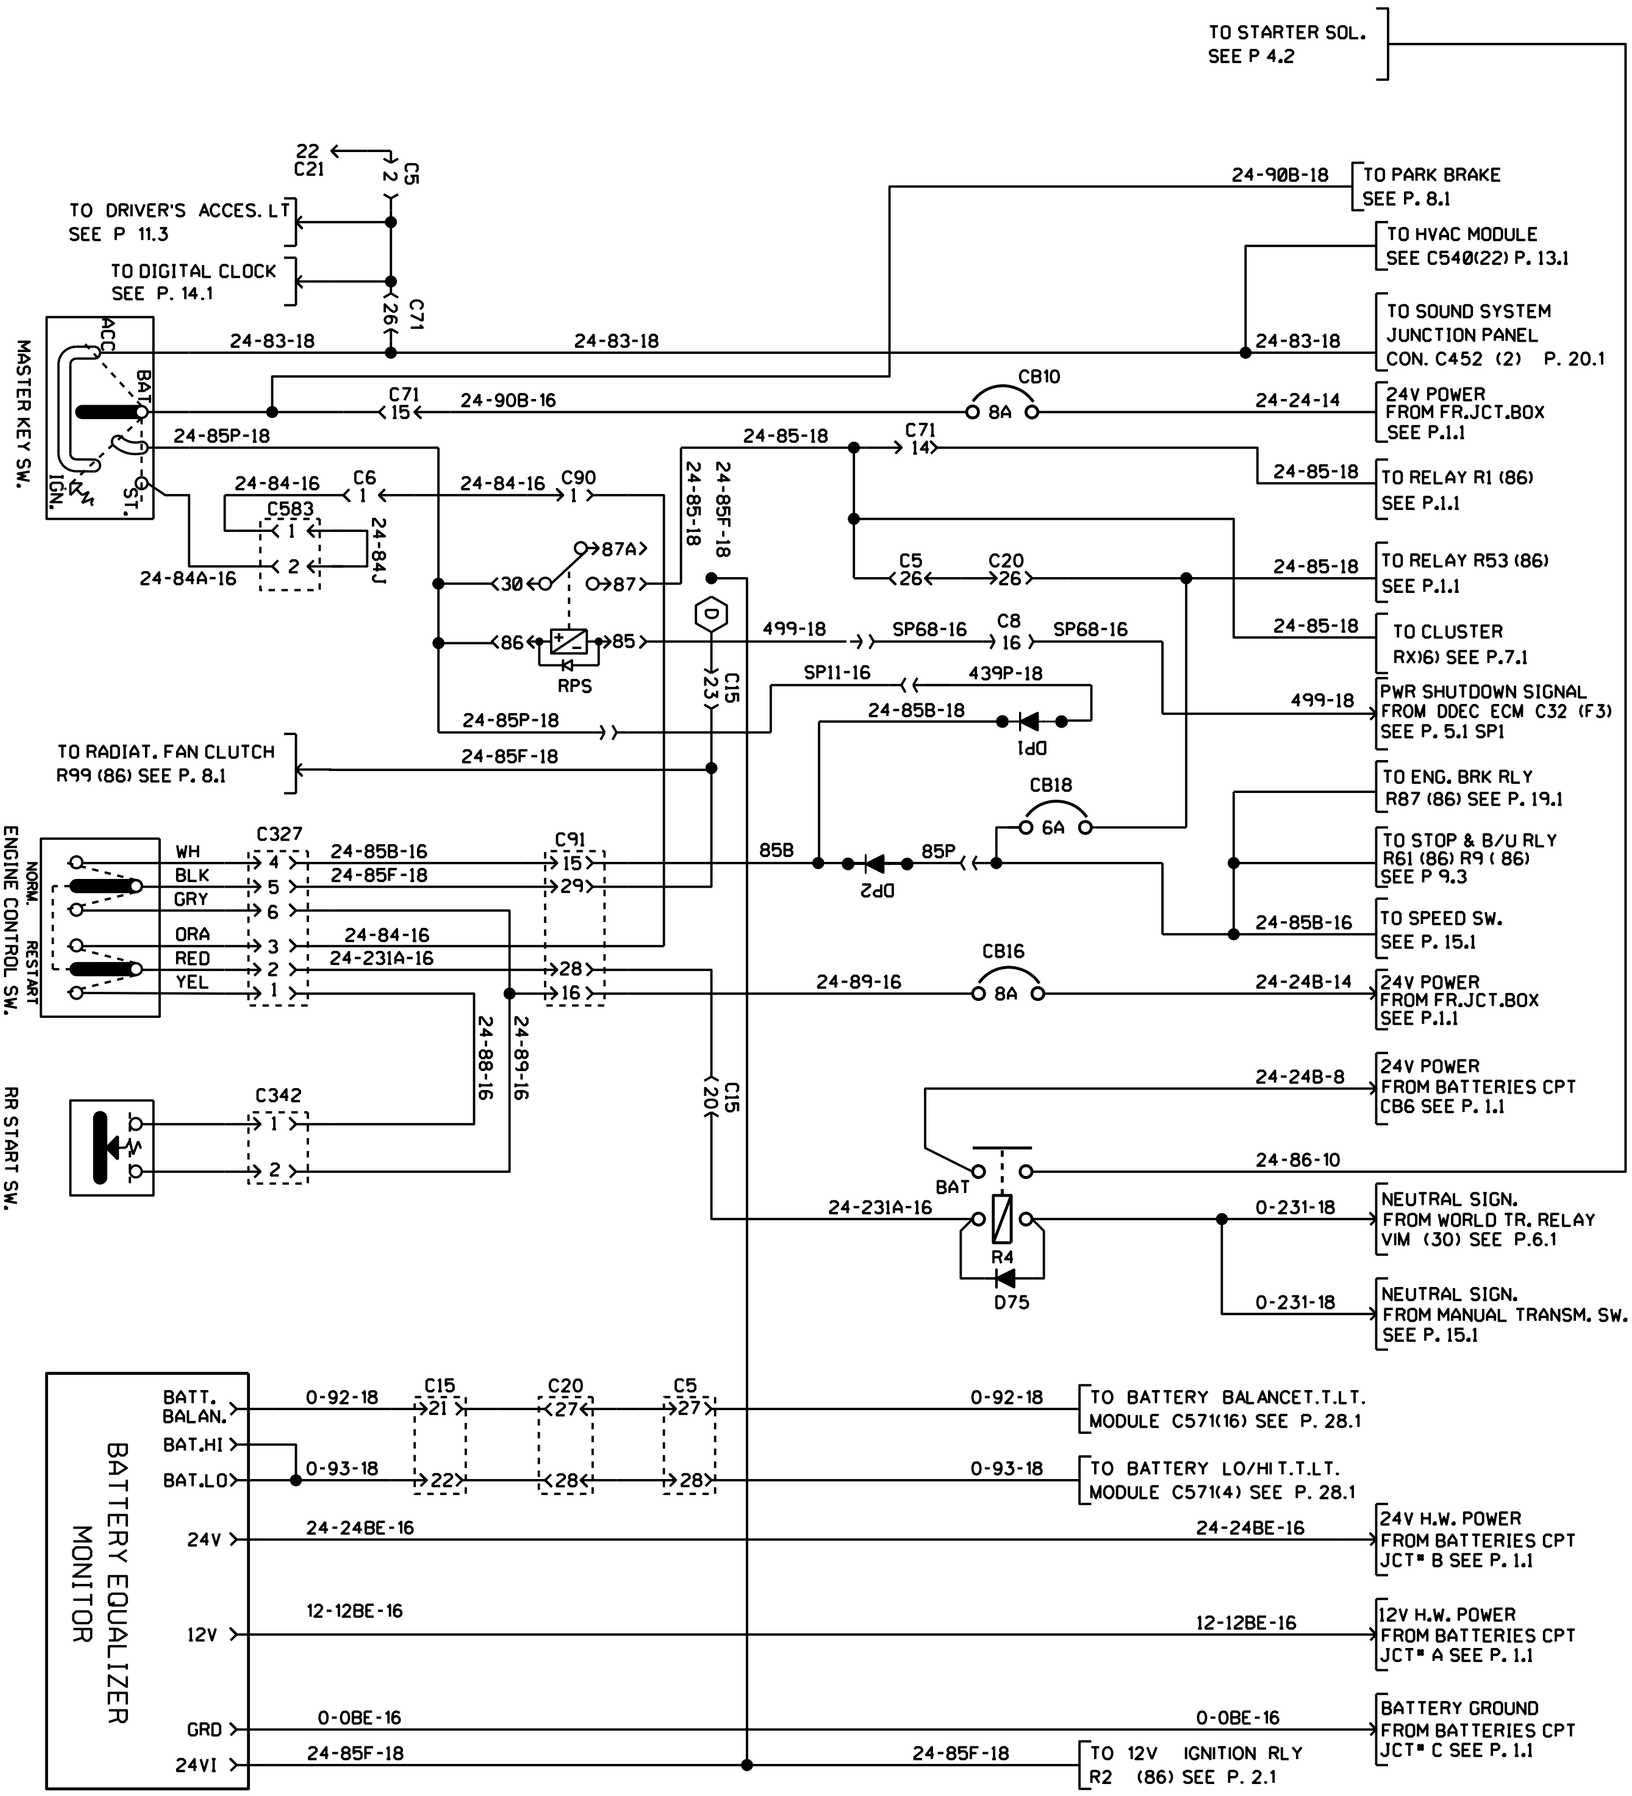

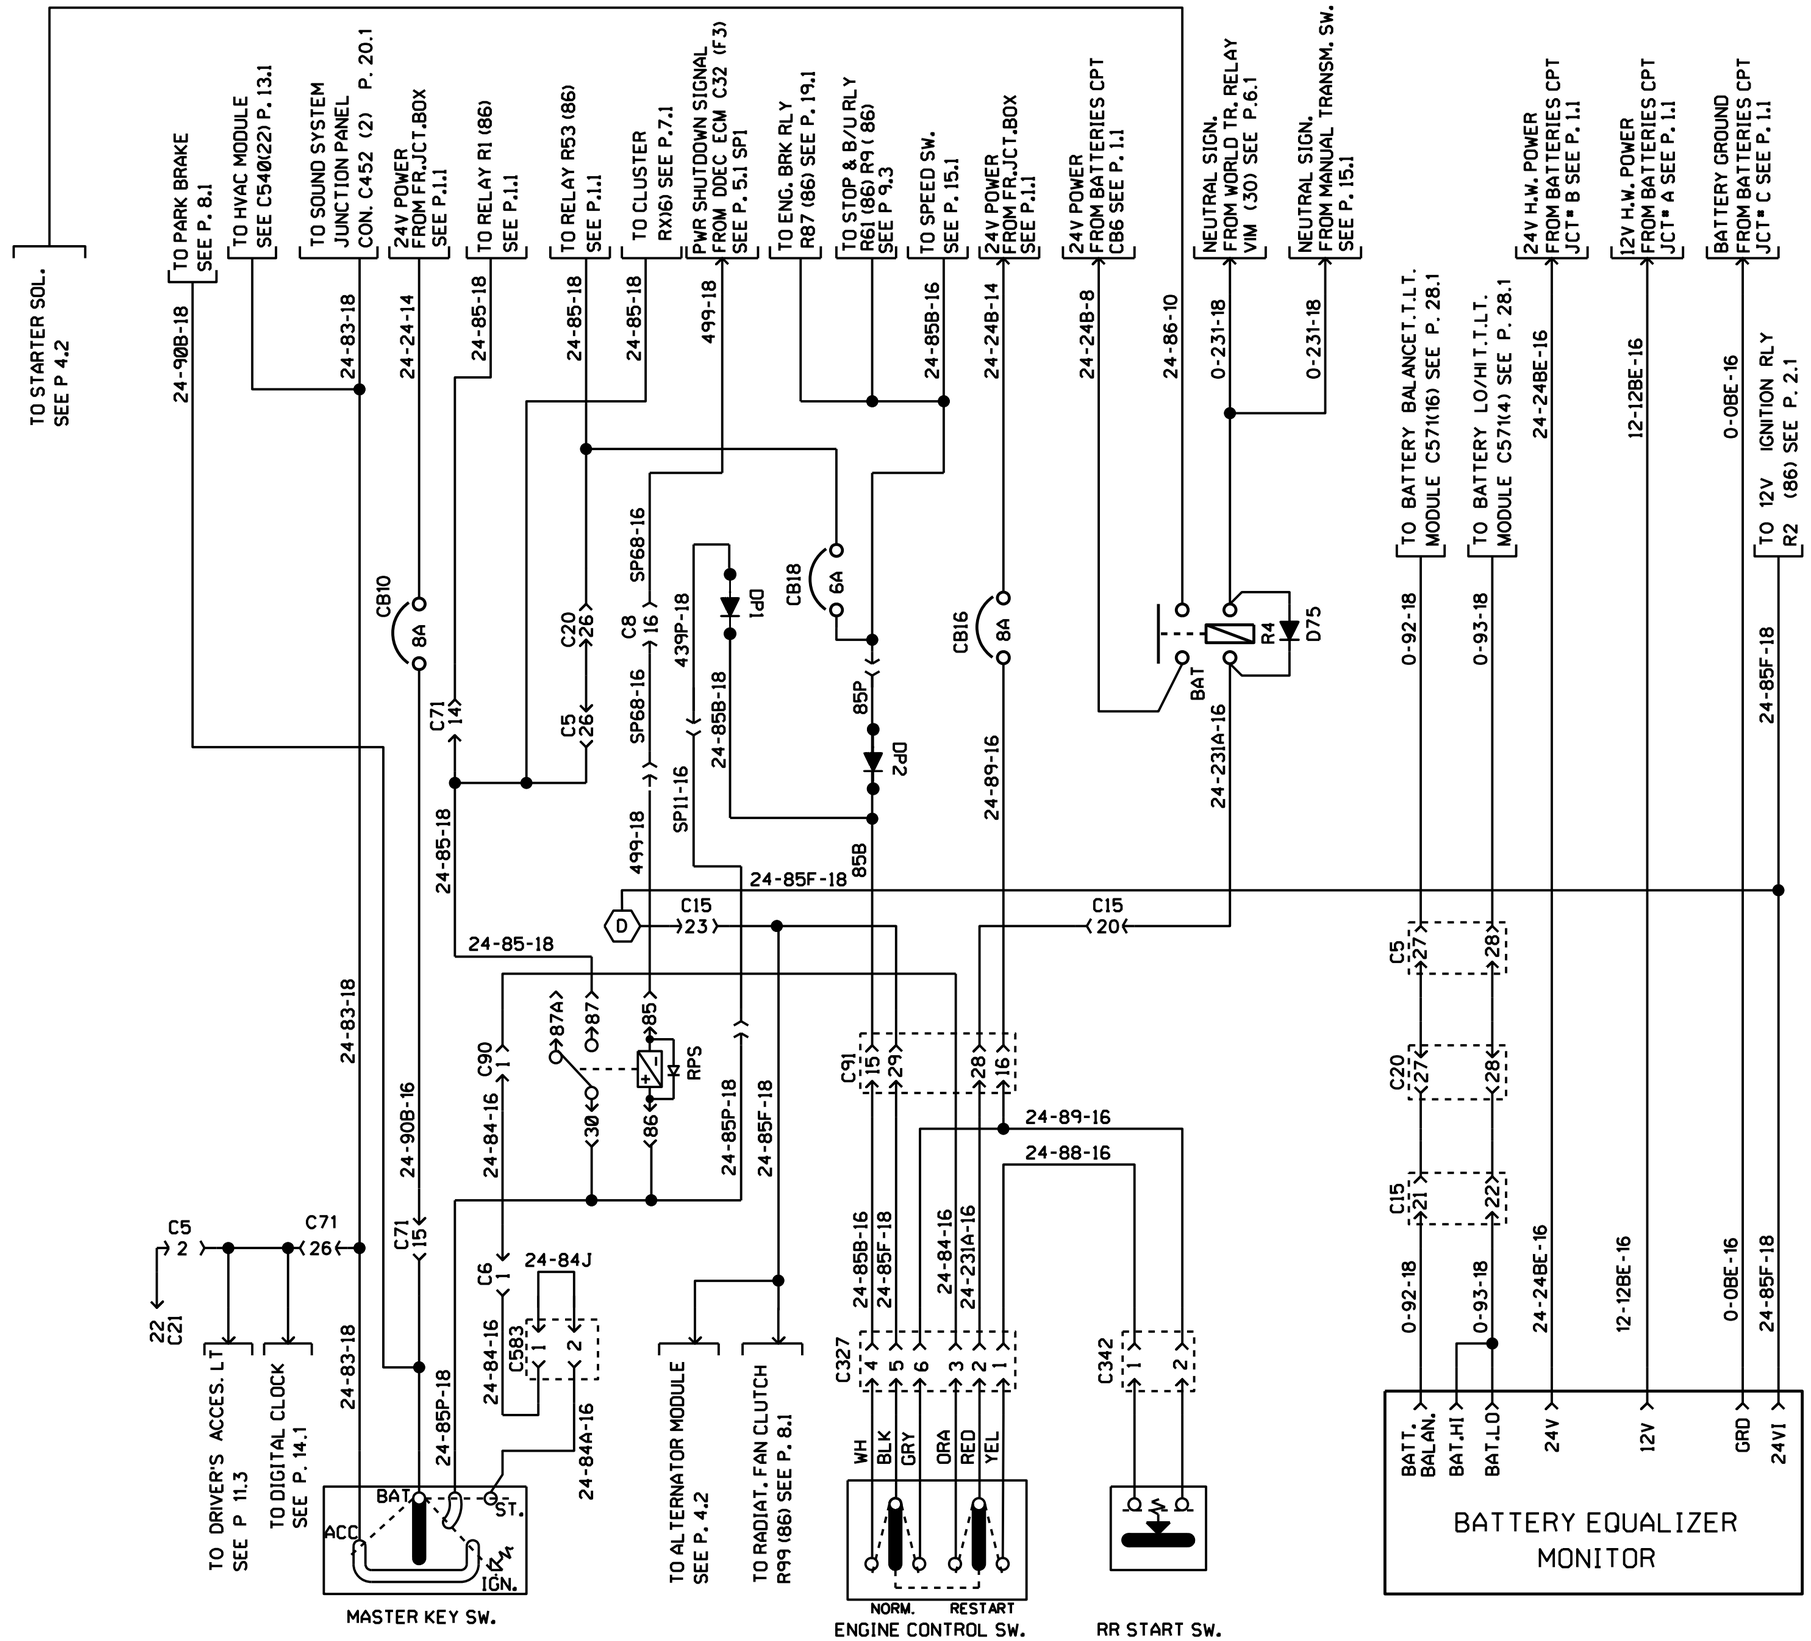


SPECIAL CHARGING SYSTEM & ENGINE CONTROL WITH POWER SHUTDOWN & IDLER TIMER

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 4.1 sp1	REVISION 04

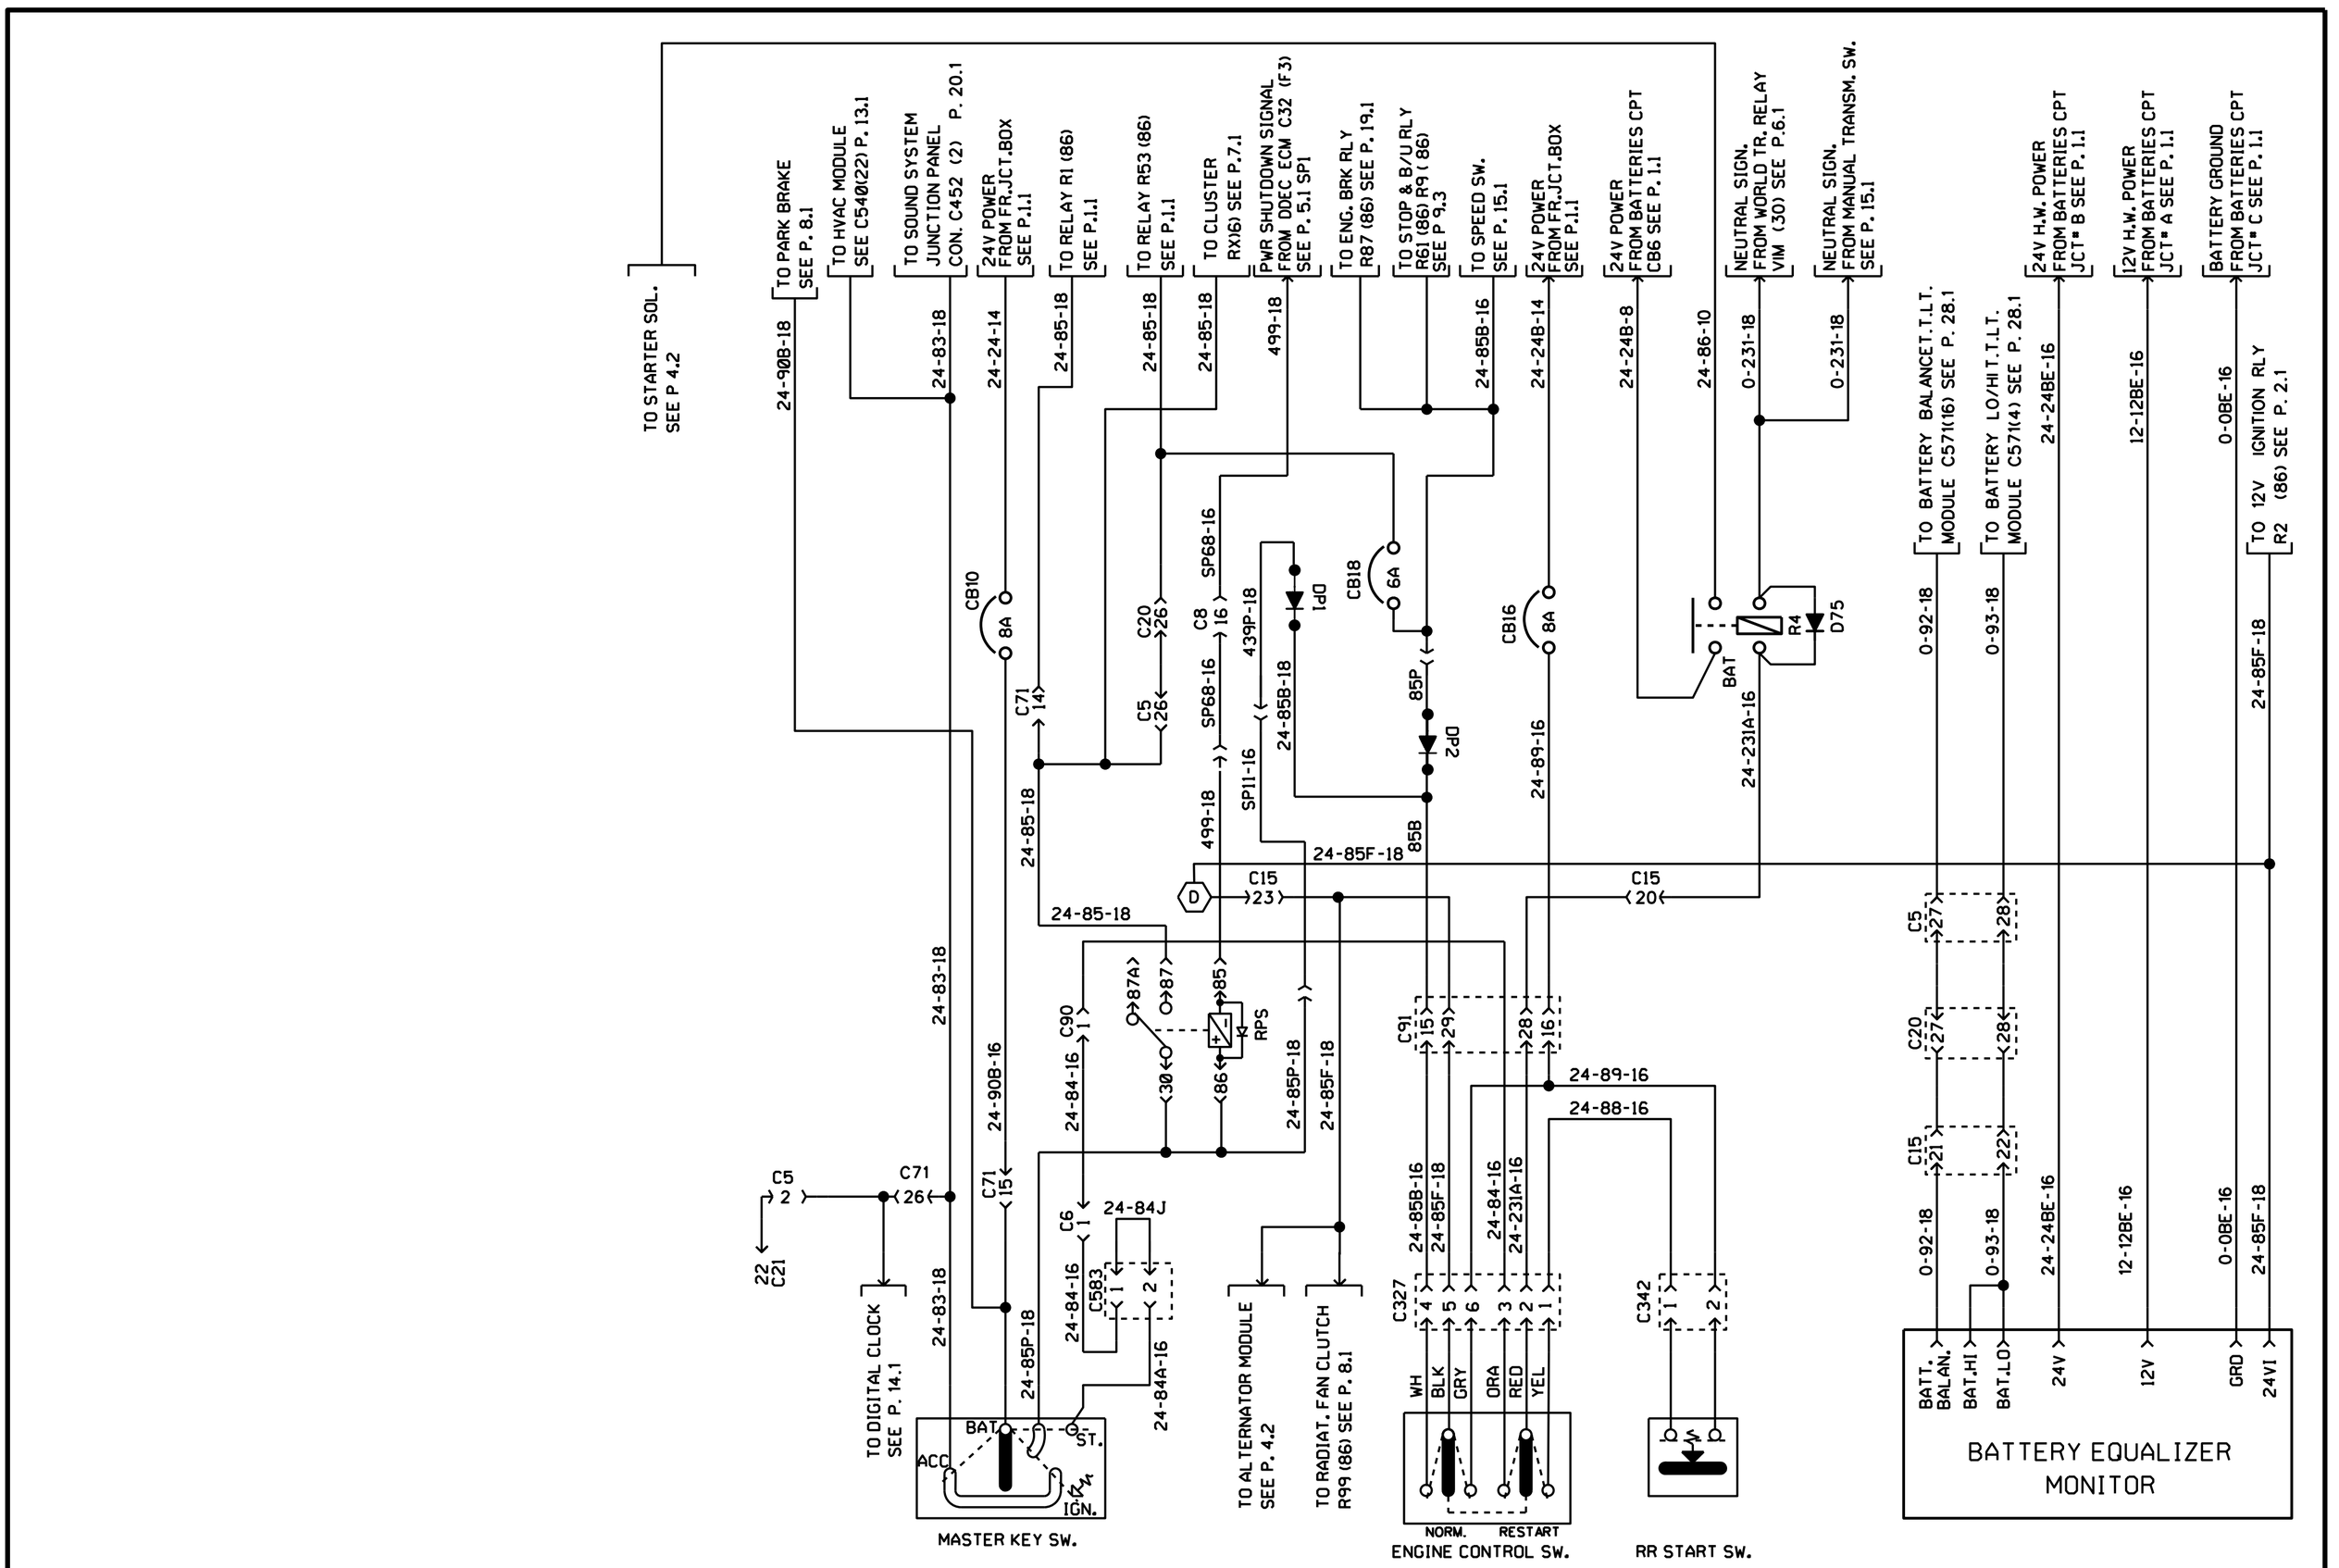

ENGINE CONTROL WITH POWER SHUTDOWN & IDLER TIMER

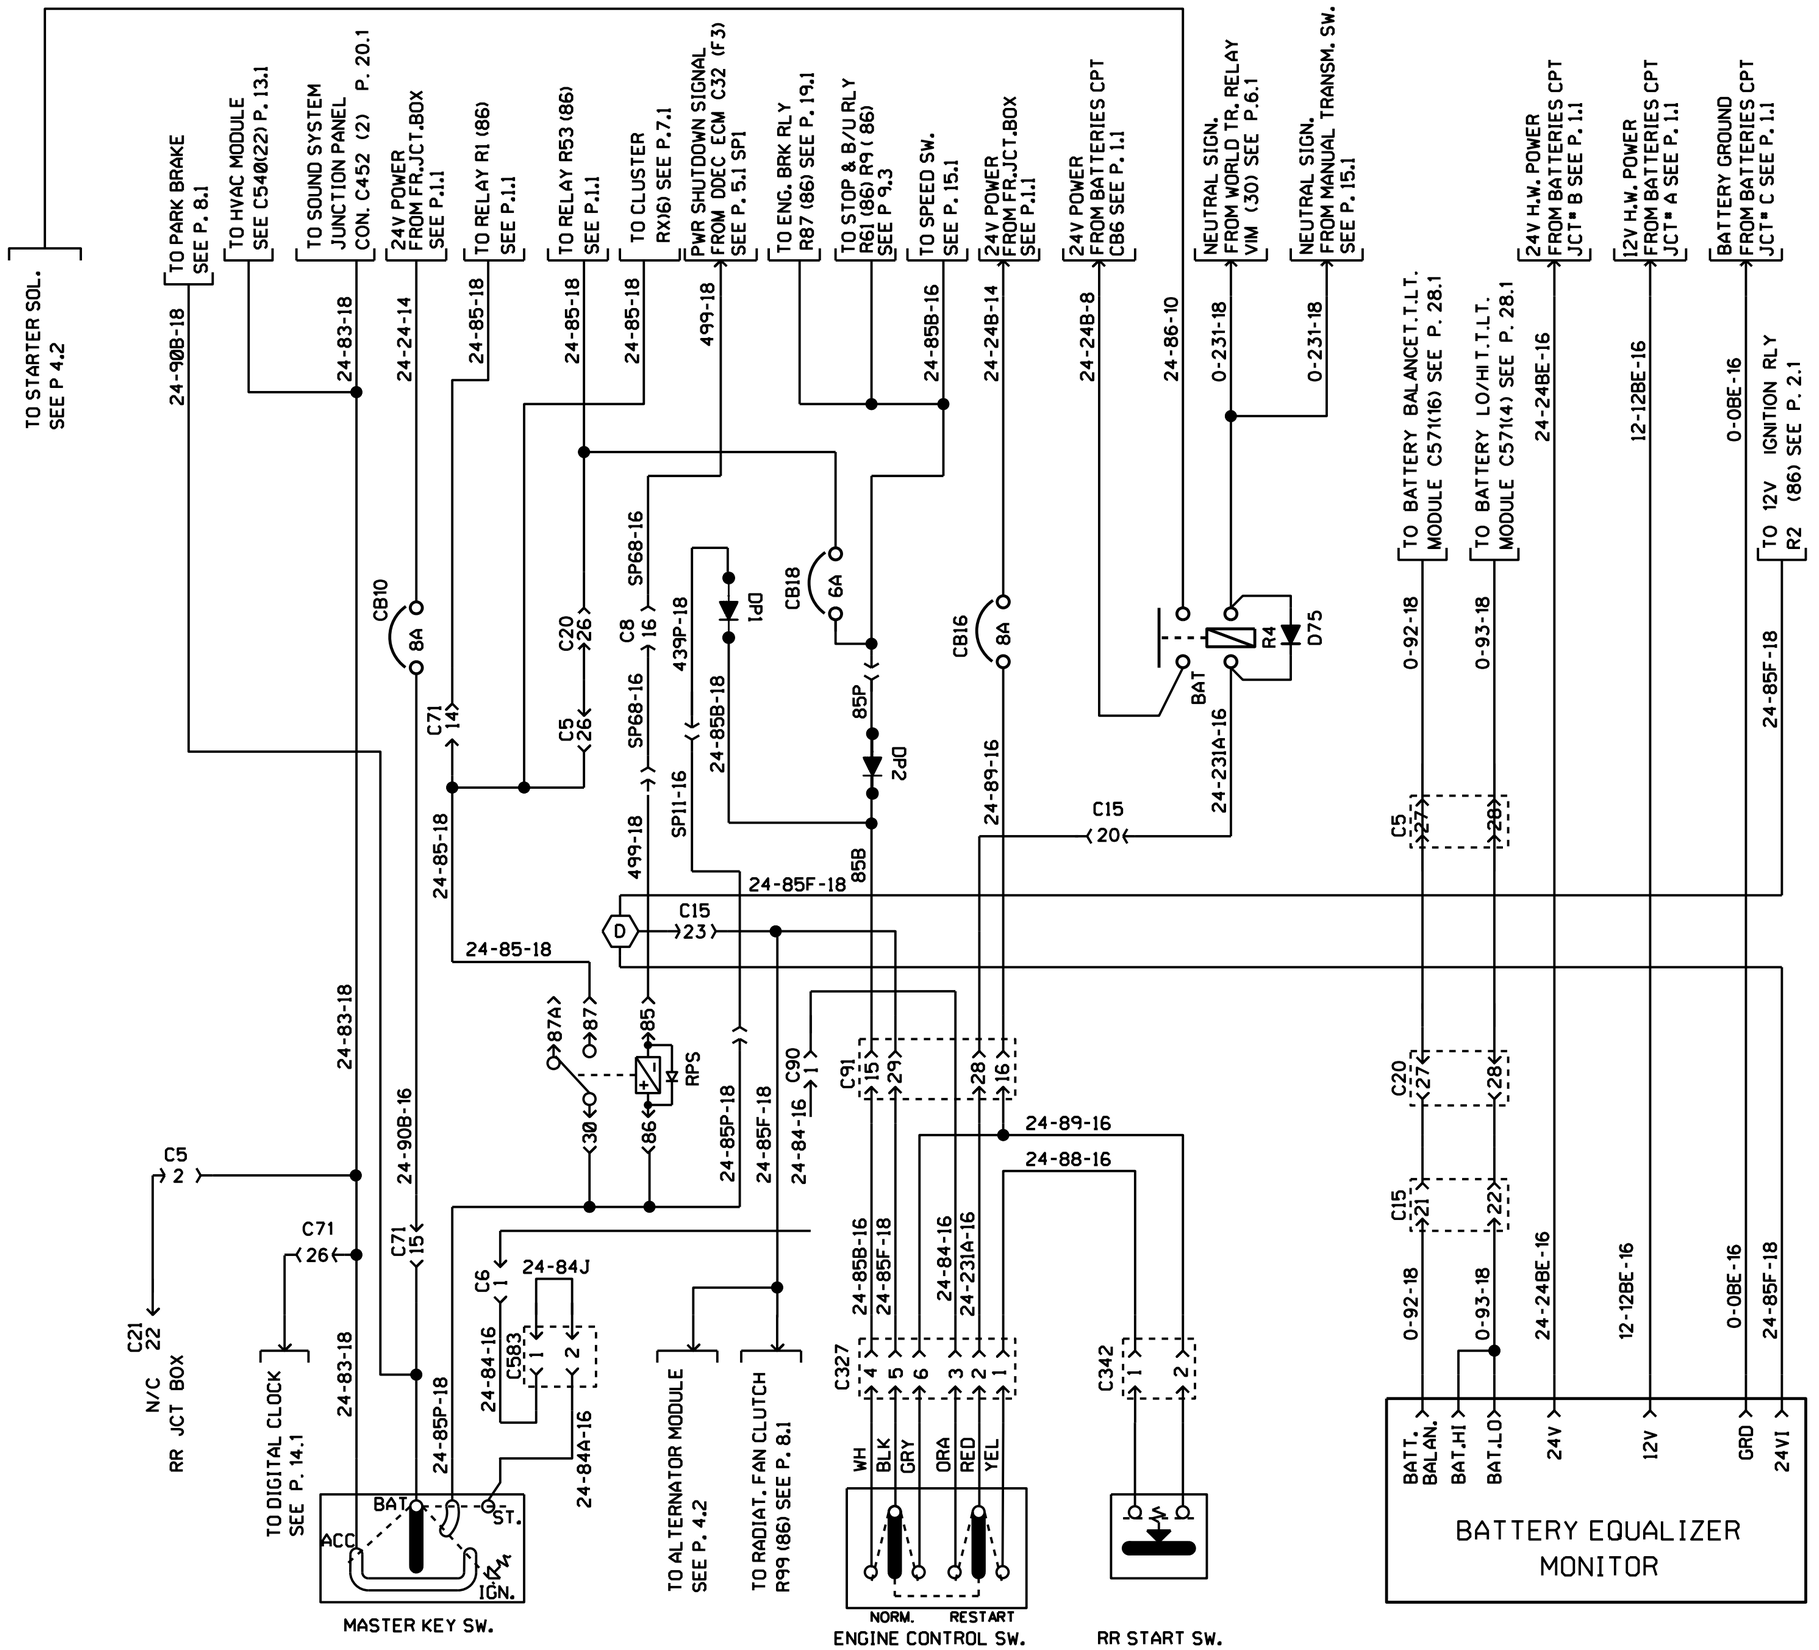

ENGINE CONTROL WITH POWER SHUTDOWN & IDLER TIMER

PREVOST

WIRING DIAGRAM


ENGINE CONTROL WITH FORD KEY


EATON TRANS. ONLY


NO: D060949


PAGE: 4.1 sp2

REVISION 00

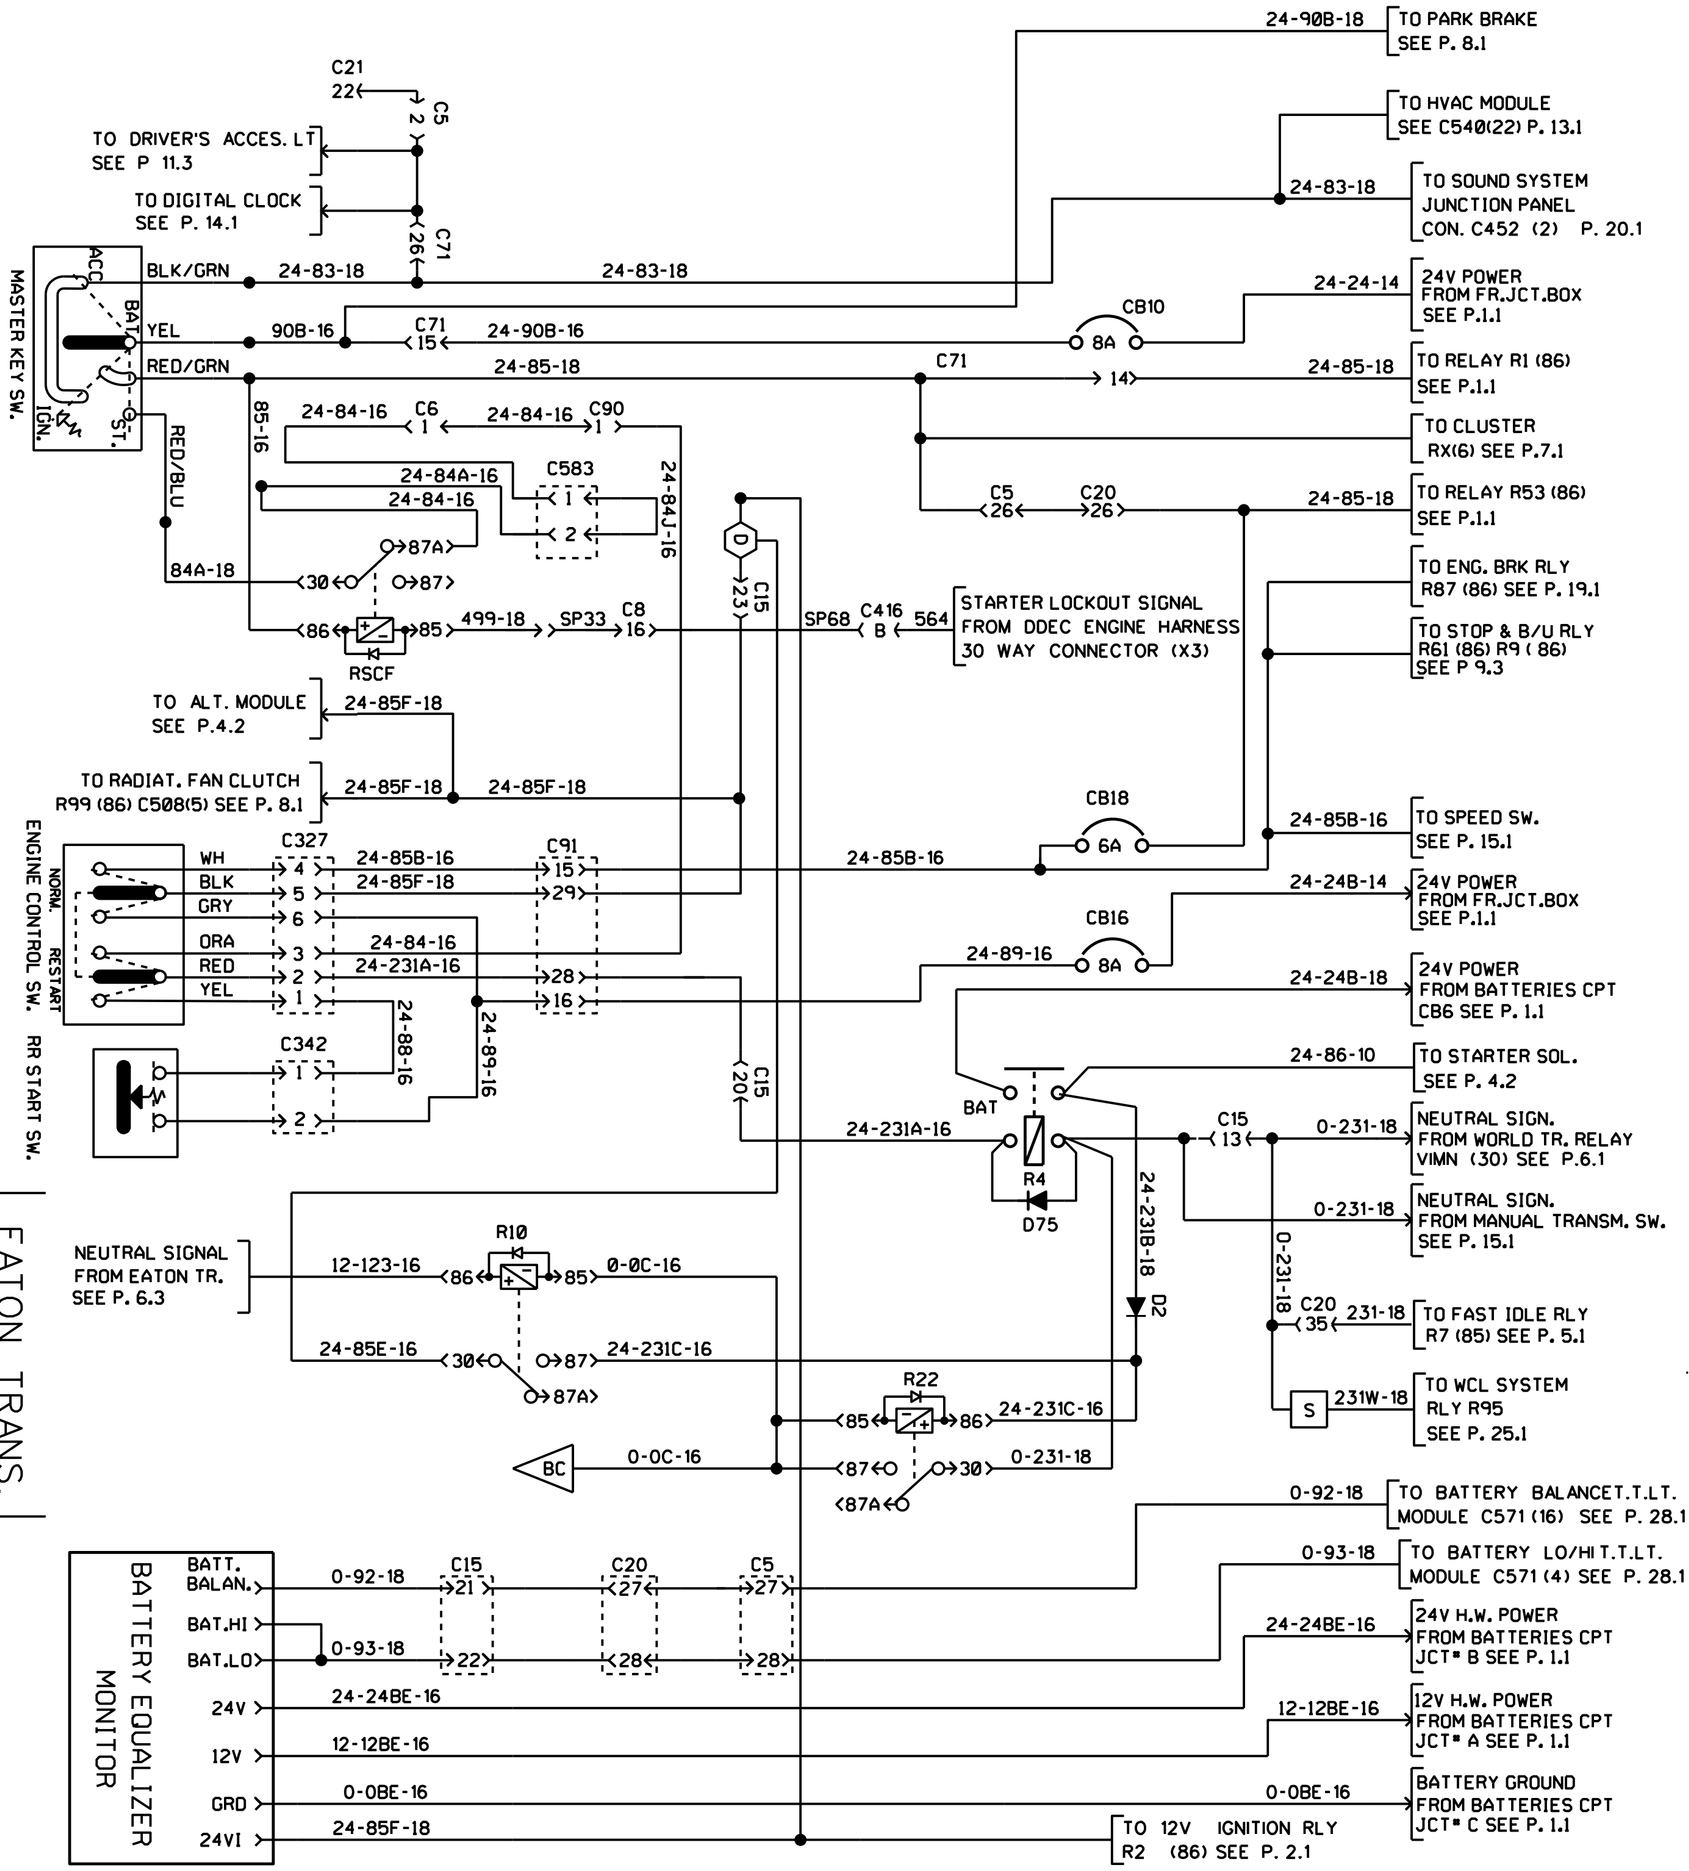


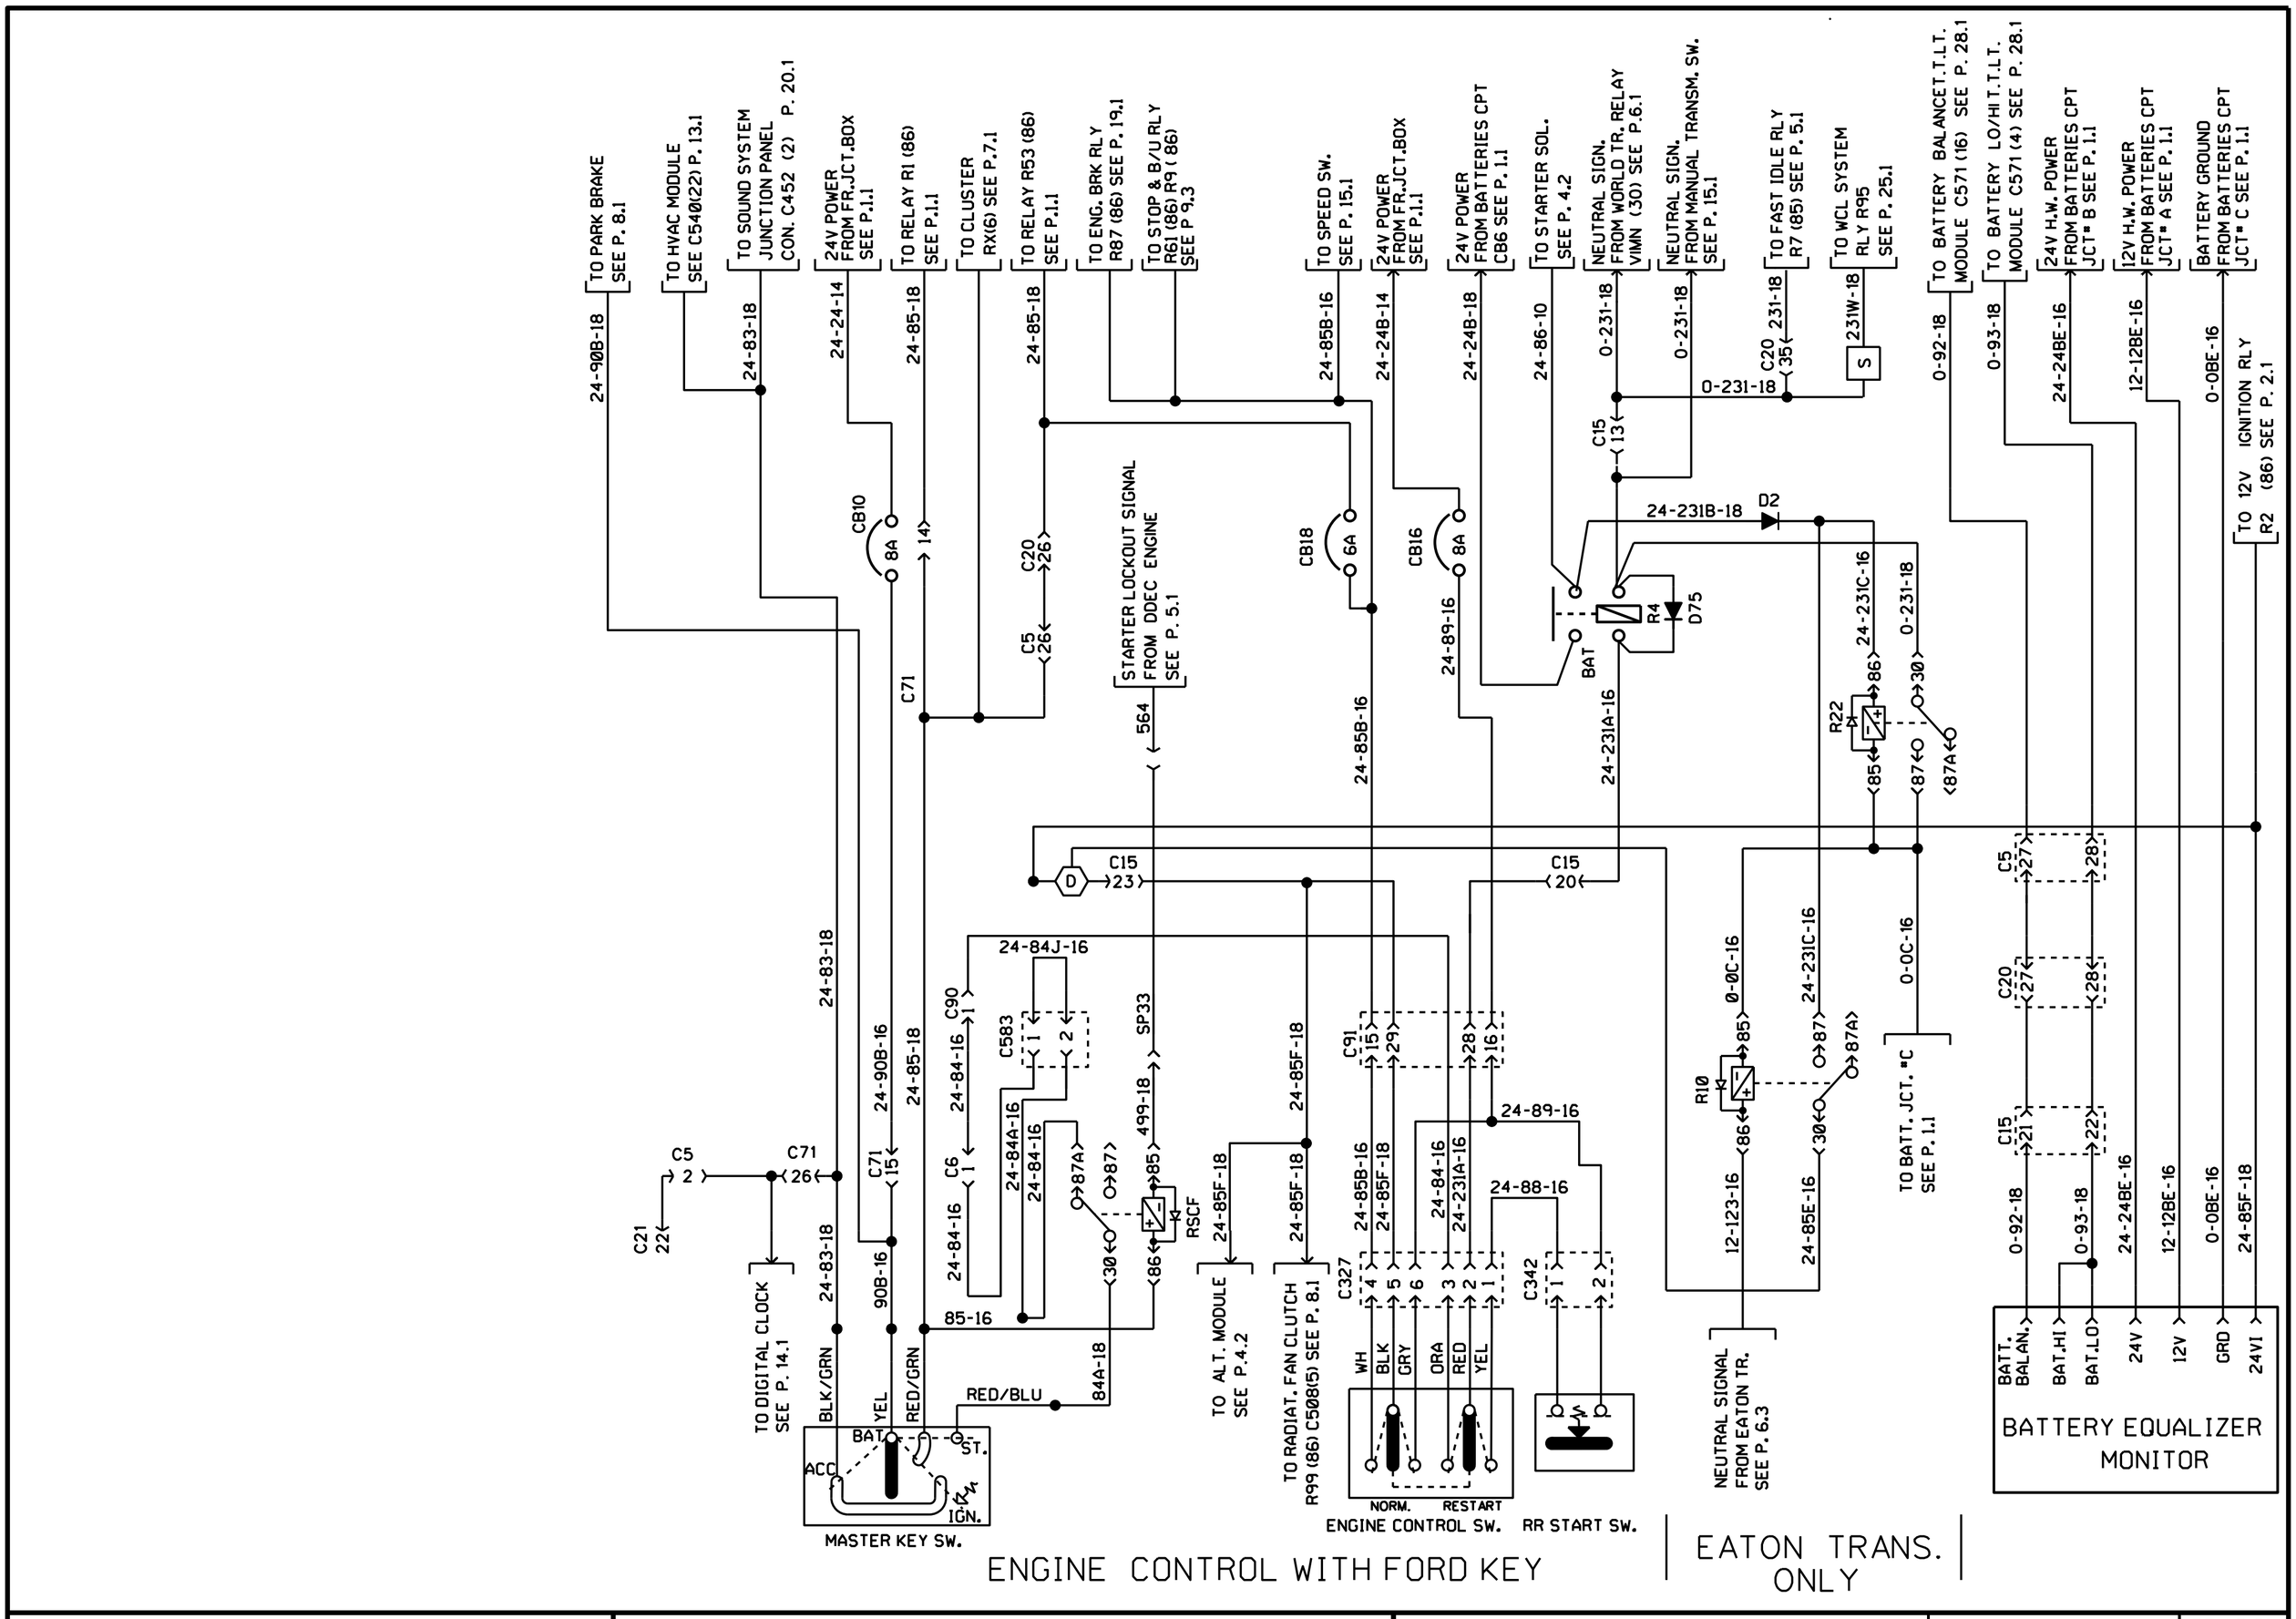
TO PARK BRAKE SEE P. 8.1
TO HVAC MODULE SEE C540(22) P. 13.1
TO SOUND SYSTEM JUNCTION PANEL CON. C452 (2) P. 20.1
24V POWER FROM FR.JCT.BOX SEE P.1.1
TO RELAY R1 (86) SEE P.1.1
TO CLUSTER RX(6) SEE P.7.1
TO RELAY R53 (86) SEE P.1.1
TO ENG. BRK RLY R87 (86) SEE P. 19.1
TO STOP & B/U RLY R61 (86) R9 (86) SEE P 9.3
TO SPEED SW. SEE P. 15.1
24V POWER FROM FR.JCT.BOX SEE P.1.1
24V POWER FROM BATTERIES CPT CB6 SEE P. 1.1
TO STARTER SOL. SEE P. 4.2
NEUTRAL SIGN. FROM WORLD TR. RELAY VMN (30) SEE P.6.1
NEUTRAL SIGN. FROM MANUAL TRANSM. SW. SEE P. 15.1
TO FAST IDLE RLY R7 (85) SEE P. 5.1
TO WCL SYSTEM RLY R95 SEE P. 25.1
TO BATTERY BALANCE T.L.T. MODULE C571 (16) SEE P. 28.1
TO BATTERY LO/HI T.T.L.T. MODULE C571 (4) SEE P. 28.1
24V H.W. POWER FROM BATTERIES CPT JCT* B SEE P. 1.1
12V H.W. POWER FROM BATTERIES CPT JCT* A SEE P. 1.1
BATTERY GROUND FROM BATTERIES CPT JCT* C SEE P. 1.1
TO 12V IGNITION RLY R2 (86) SEE P. 2.1
STARTER LOCKOUT SIGNAL FROM DDEC ENGINE SEE P. 5.1
24-90B-18
24-83-18
24-24-14
24-85-18
24-85-16
24-24B-14
24-24B-18
24-86-10
0-231-18
24-231B-18
24-231C-16
0-92-18
0-93-18
24-24BE-16
12-12BE-16
0-0BE-16
CB10 8A
CB18 6A
CB16 8A
C71
C5 26
C20 26
C15 13
C20 35
S 231W-18
24-89-16
BAT
R4
D75
D2
R22
85
86
87
87A
30
C15 23
C15 20
C5 27
C5 28
C20 27
C20 28
C15 21
C15 22
24-84J-16
C583
C90 1
24-84-16
24-84A-16
C6 1
499-18
SP33
RSCF
24-85F-18
C91 15
C91 29
C91 28
C91 16
24-89-16
24-88-16
C327
C342
24-85B-16
24-84-16
24-231A-16
WH
BLK
GRY
ORA
RED
YEL
R10
0-0C-16
12-123-16
24-85E-16
0-0C-16
TO BATT. JCT. *C SEE P. 1.1
NEUTRAL SIGNAL FROM EATON TR. SEE P. 6.3
C5 2
C21 22
C71 26
C71 15
24-83-18
90B-16
BLK/GRN
YEL
RED/GRN
RED/BLU
84A-18
85-16
TO DIGITAL CLOCK SEE P. 14.1
TO ALT. MODULE SEE P.4.2
TO RADIAT. FAN CLUTCH R99 (86) C508(5) SEE P. 8.1
BAT
ACC
ST.
IGN.
MASTER KEY SW.
NORM.
RESTART
ENGINE CONTROL SW.
RR START SW.
BATT. BALAN.
BAT.HI
BAT.LO
24V
12V
GRD
24VI
BATTERY EQUALIZER MONITOR
ENGINE CONTROL WITH FORD KEY
EATON TRANS. ONLY

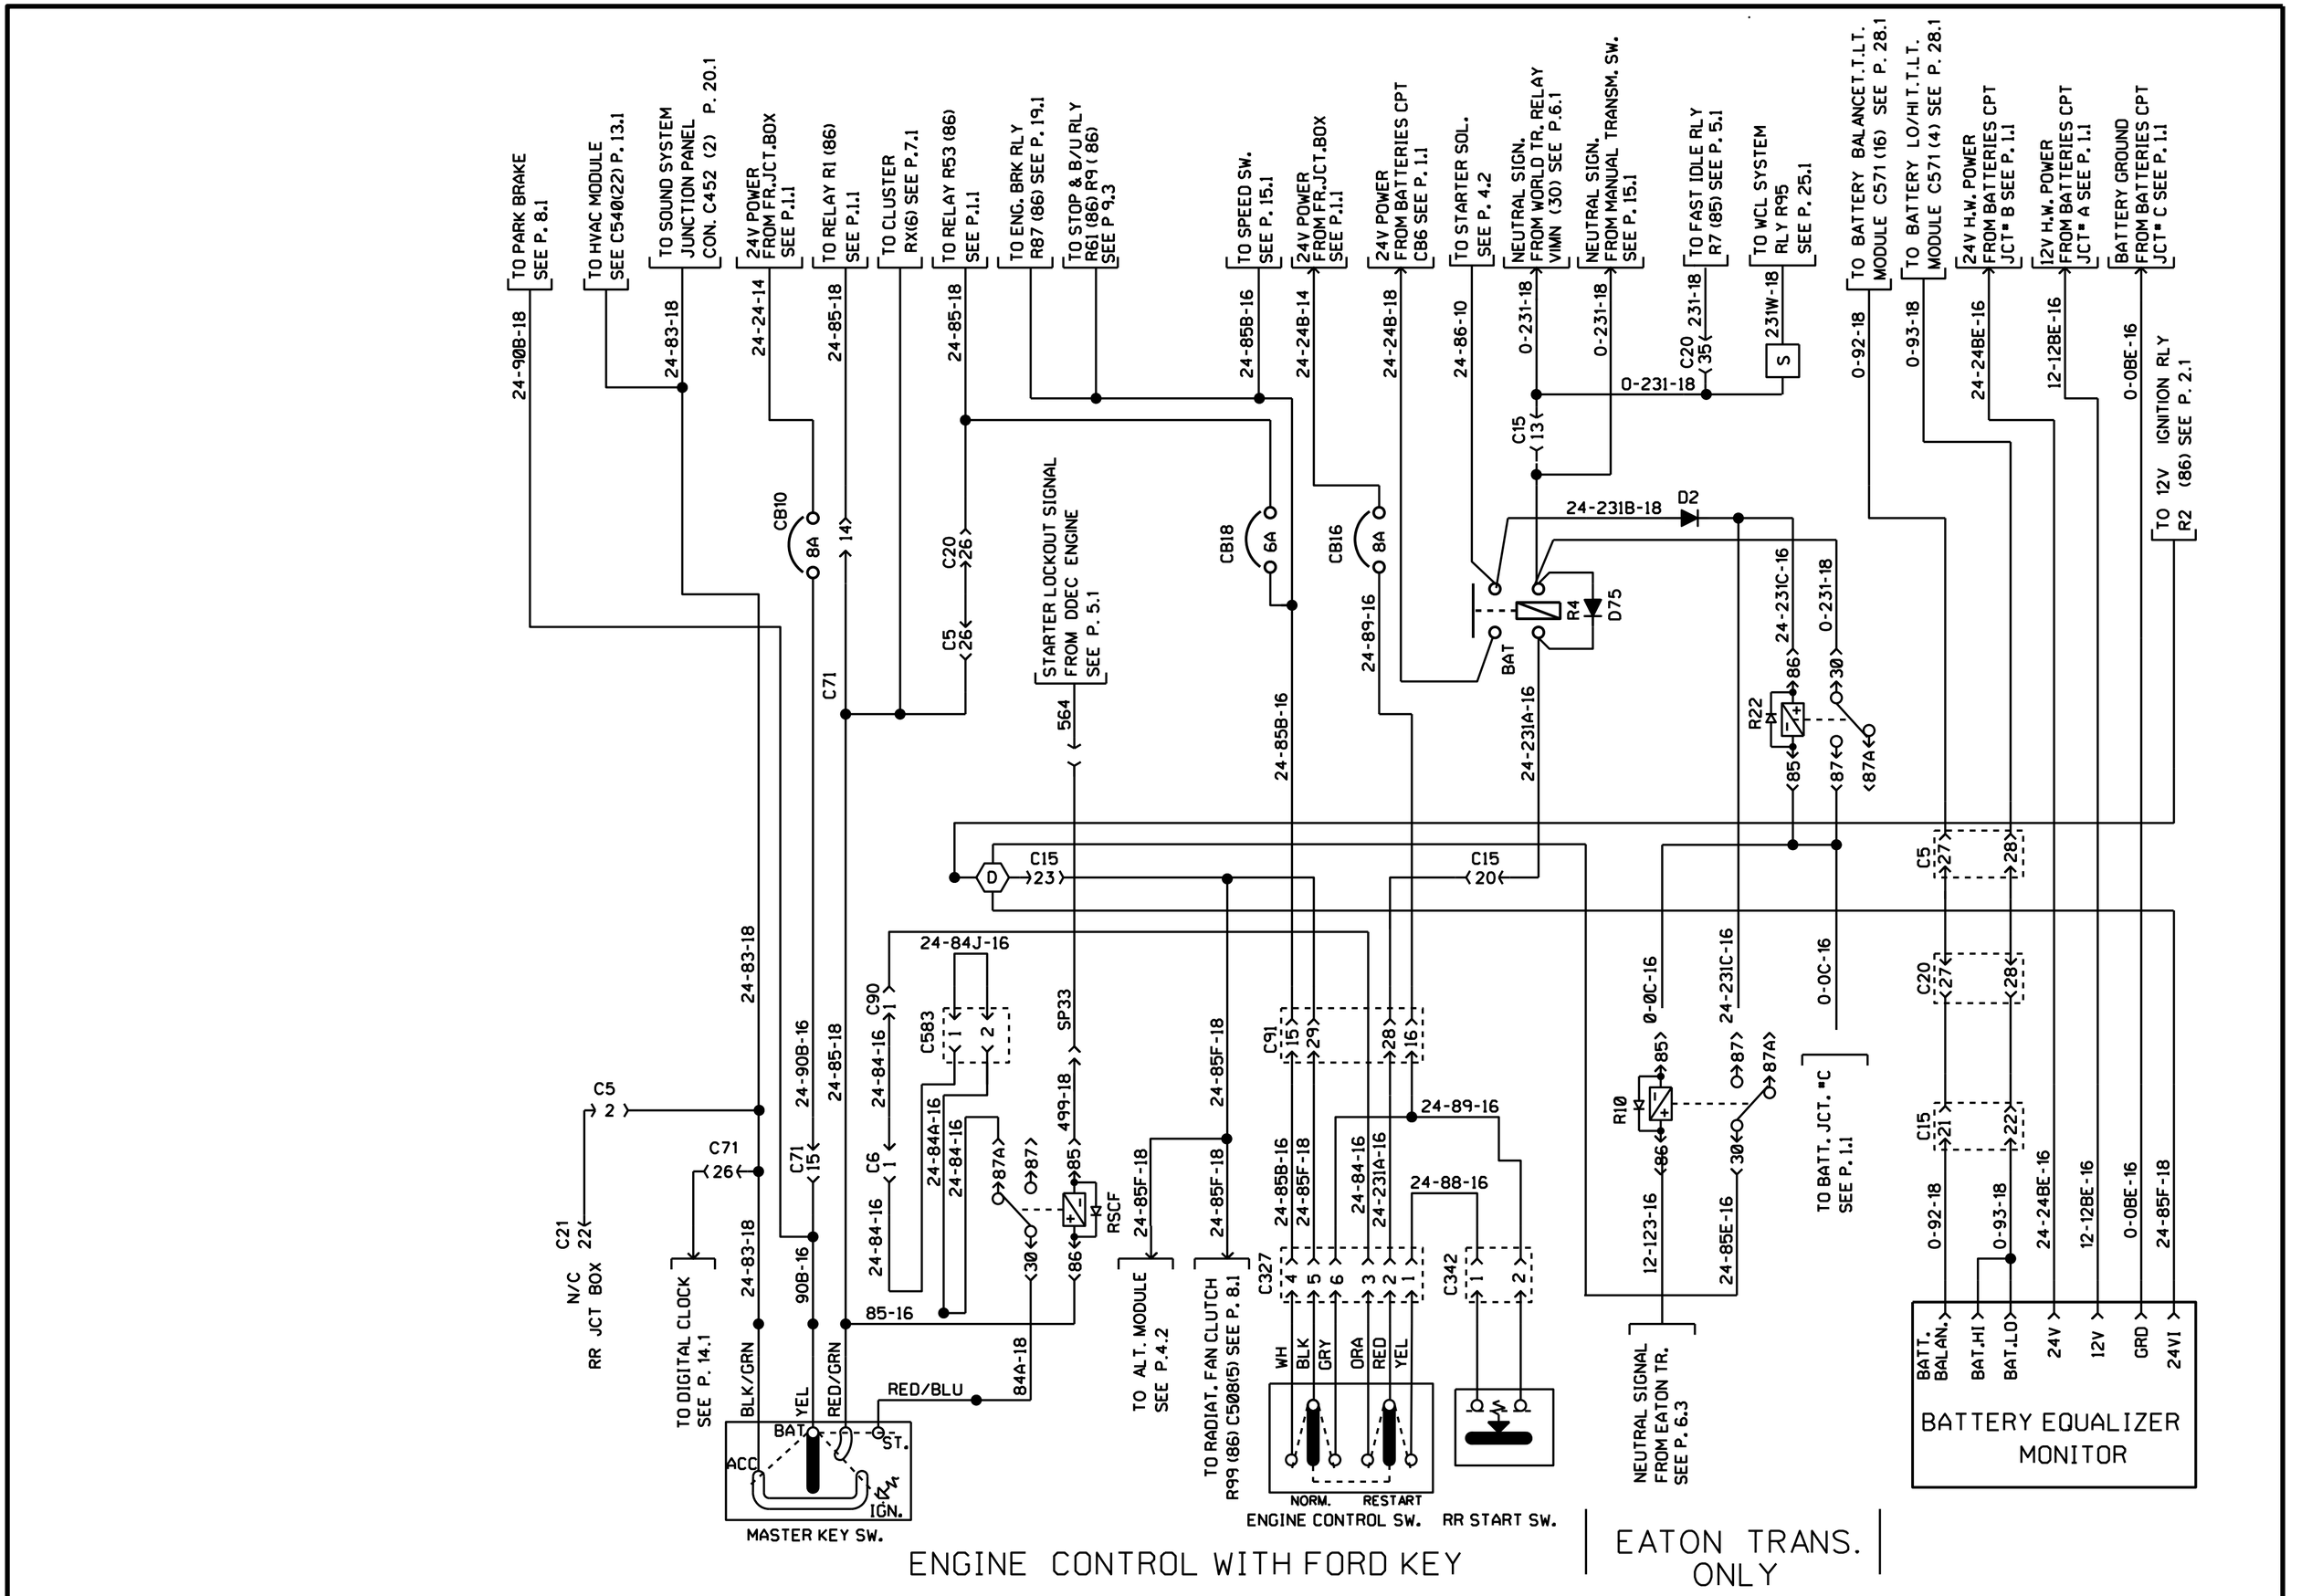

TO PARK BRAKE SEE P. 8.1
TO HVAC MODULE SEE C540(22) P. 13.1
TO SOUND SYSTEM JUNCTION PANEL CON. C452 (2) P. 20.1
24V POWER FROM FR.JCT.BOX SEE P.1.1
TO RELAY R1 (86) SEE P.1.1
TO CLUSTER RX(6) SEE P.7.1
TO RELAY R53 (86) SEE P.1.1
TO ENG. BRK RLY R87 (86) SEE P. 19.1
TO STOP & B/U RLY R61 (86) R9 (86) SEE P 9.3
TO SPEED SW. SEE P. 15.1
24V POWER FROM FR.JCT.BOX SEE P.1.1
24V POWER FROM BATTERIES CPT CB6 SEE P. 1.1
TO STARTER SOL. SEE P. 4.2
NEUTRAL SIGN. FROM WORLD TR. RELAY VIMN (30) SEE P.6.1
NEUTRAL SIGN. FROM MANUAL TRANSM. SW. SEE P. 15.1
TO FAST IDLE RLY R7 (85) SEE P. 5.1
TO WCL SYSTEM RLY R95 SEE P. 25.1
TO BATTERY BALANCET.T.LT. MODULE C571(16) SEE P. 28.1
TO BATTERY LO/HI T.T.LT. MODULE C571(4) SEE P. 28.1
24V H.W. POWER FROM BATTERIES CPT JCT" B SEE P. 1.1
12V H.W. POWER FROM BATTERIES CPT JCT" A SEE P. 1.1
BATTERY GROUND FROM BATTERIES CPT JCT" C SEE P. 1.1
TO 12V IGNITION RLY R2 (86) SEE P. 2.1
STARTER LOCKOUT SIGNAL FROM DDEC ENGINE SEE P. 5.1
CB10 8A
CB18 6A
CB16 8A
D2
R4
D75
R22
RSCF
SP33
C71
C5
C20
C15
C90
C583
C6
C91
C327
C342
C21
N/C RR JCT BOX
TO DIGITAL CLOCK SEE P. 14.1
TO ALT. MODULE SEE P.4.2
TO RADIAT. FAN CLUTCH R99 (86) C5085 SEE P. 8.1
MASTER KEY SW.
BAT.
ACC
IGN.
ST.
ENGINE CONTROL SW.
NORM.
RESTART
RR START SW.
R10
TO BATT. JCT. "C SEE P. 1.1
NEUTRAL SIGNAL FROM EATON TR. SEE P. 6.3
BATTERY EQUALIZER MONITOR
BATT. BALAN.
BAT.HI
BAT.LO
24V
12V
GRD
24VI
ENGINE CONTROL WITH FORD KEY
EATON TRANS. ONLY

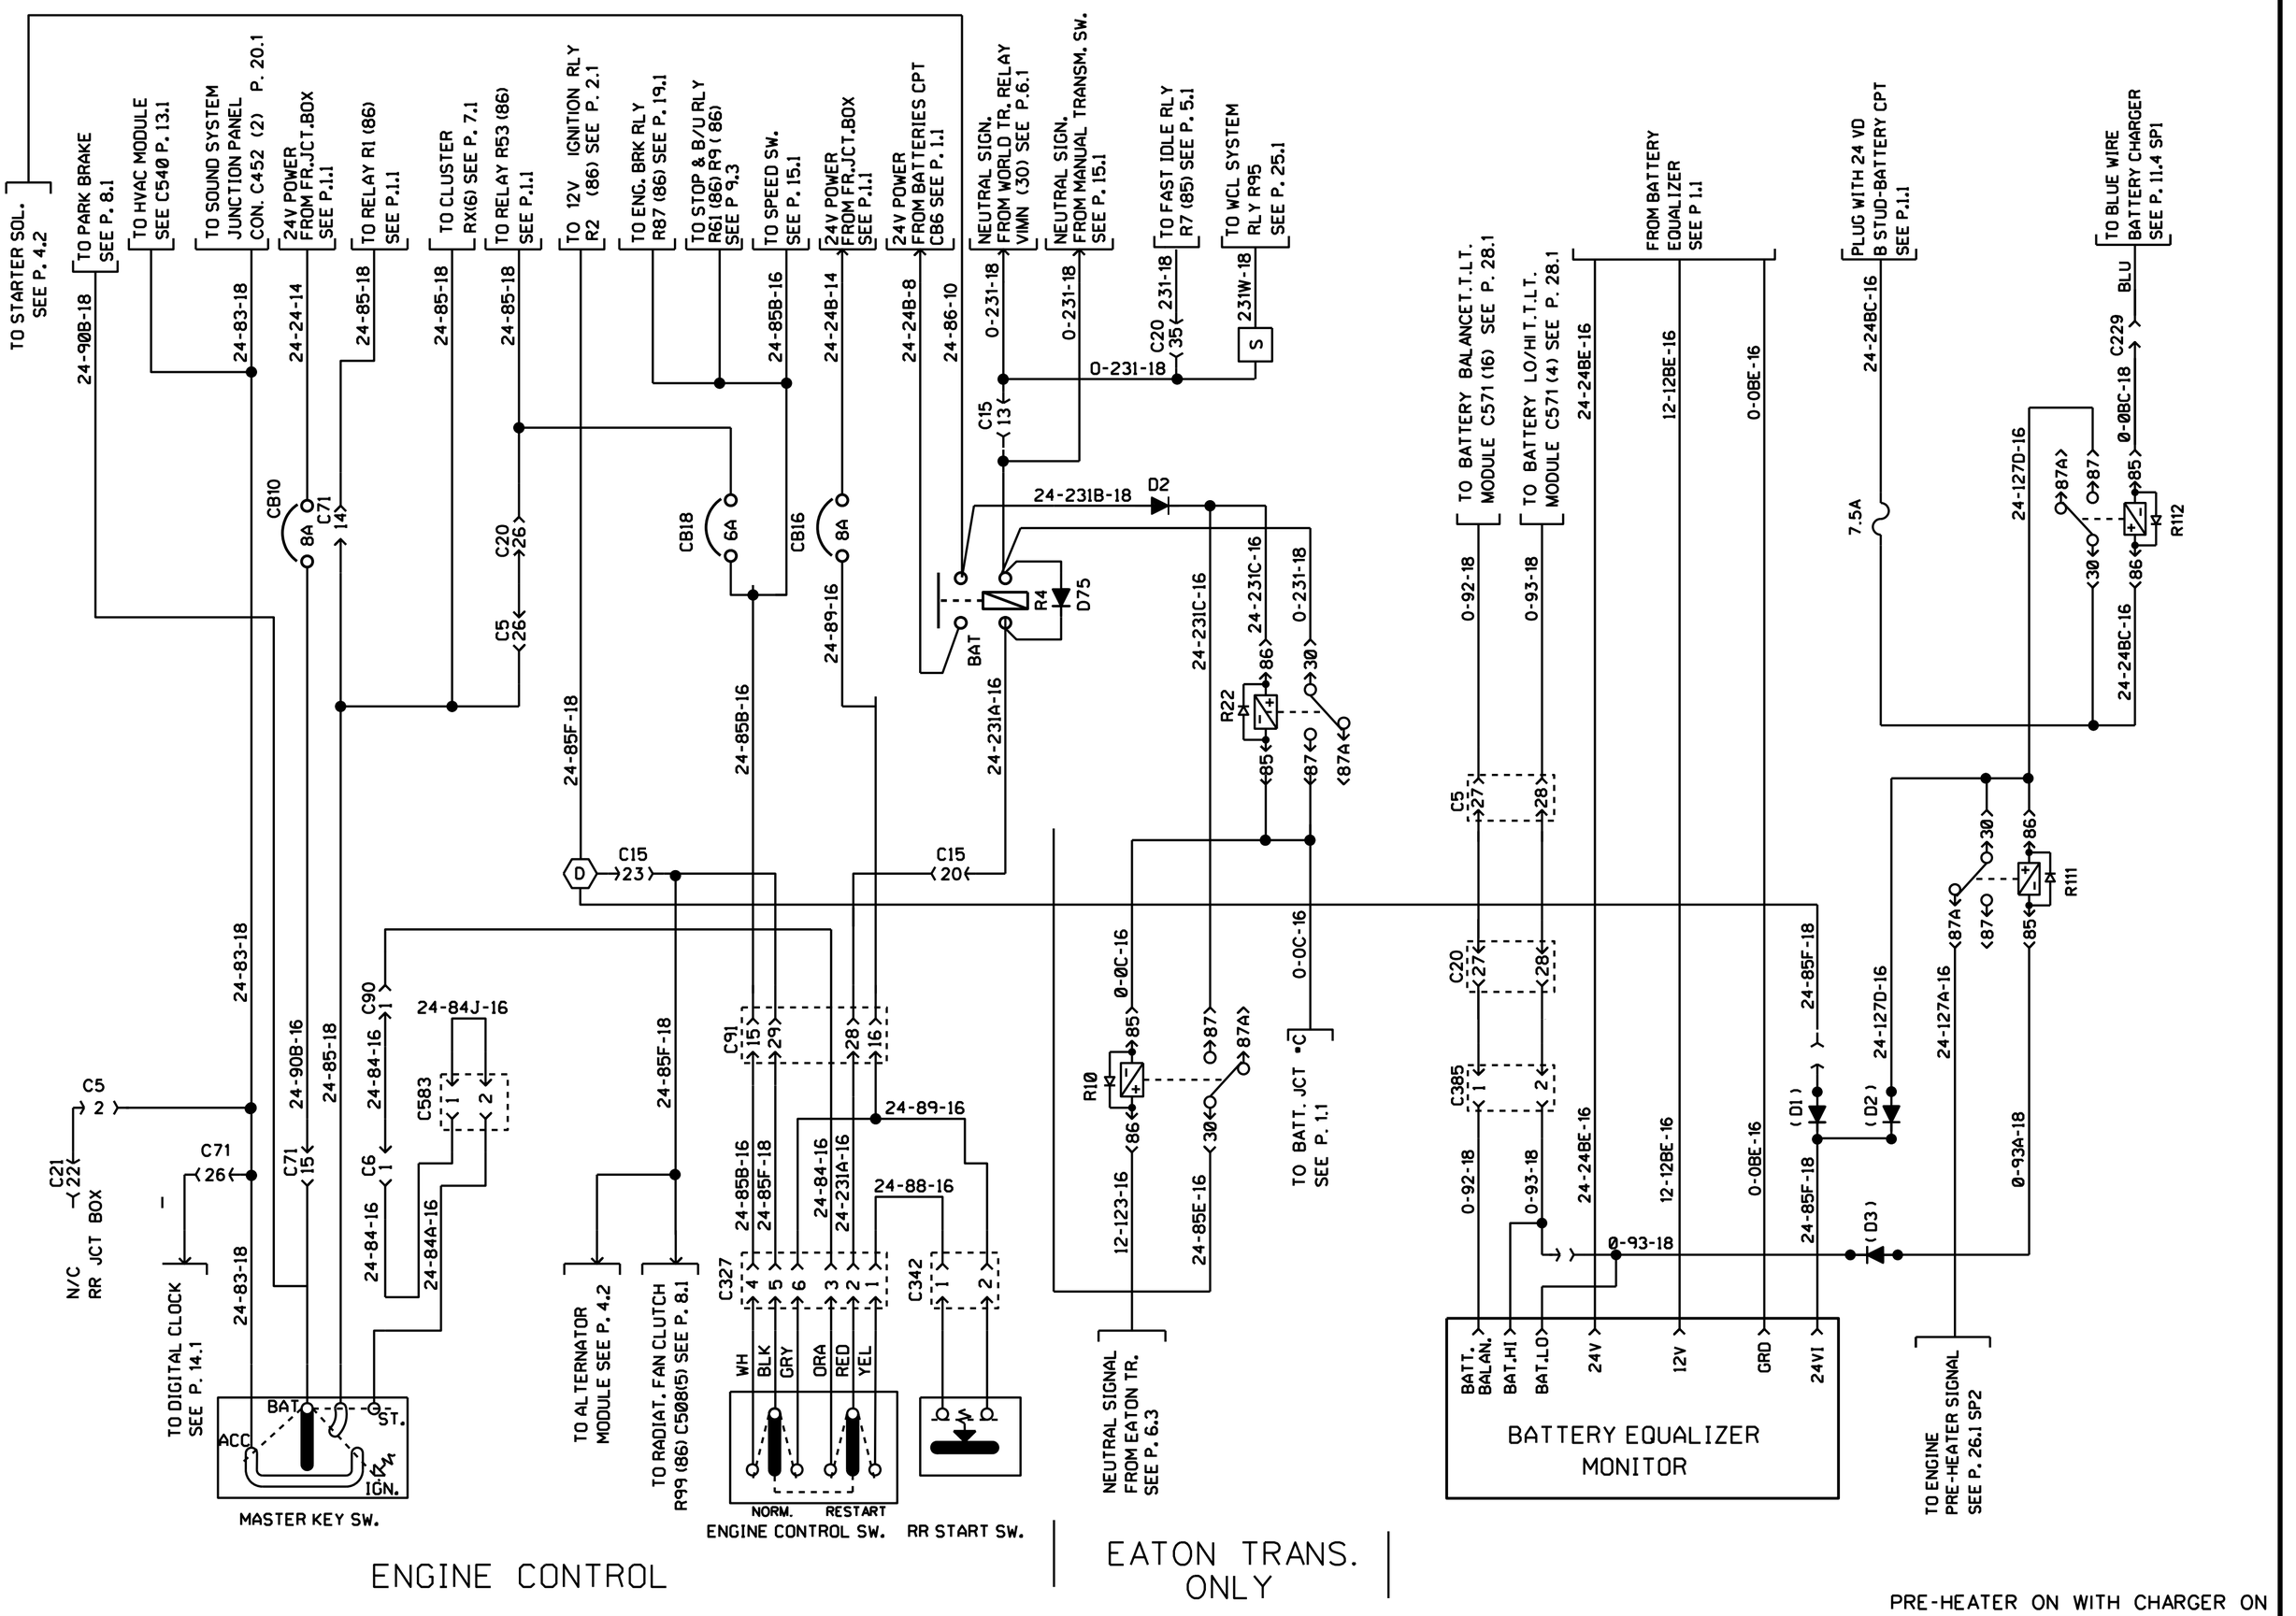


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 4.1sp3	REVISION 00

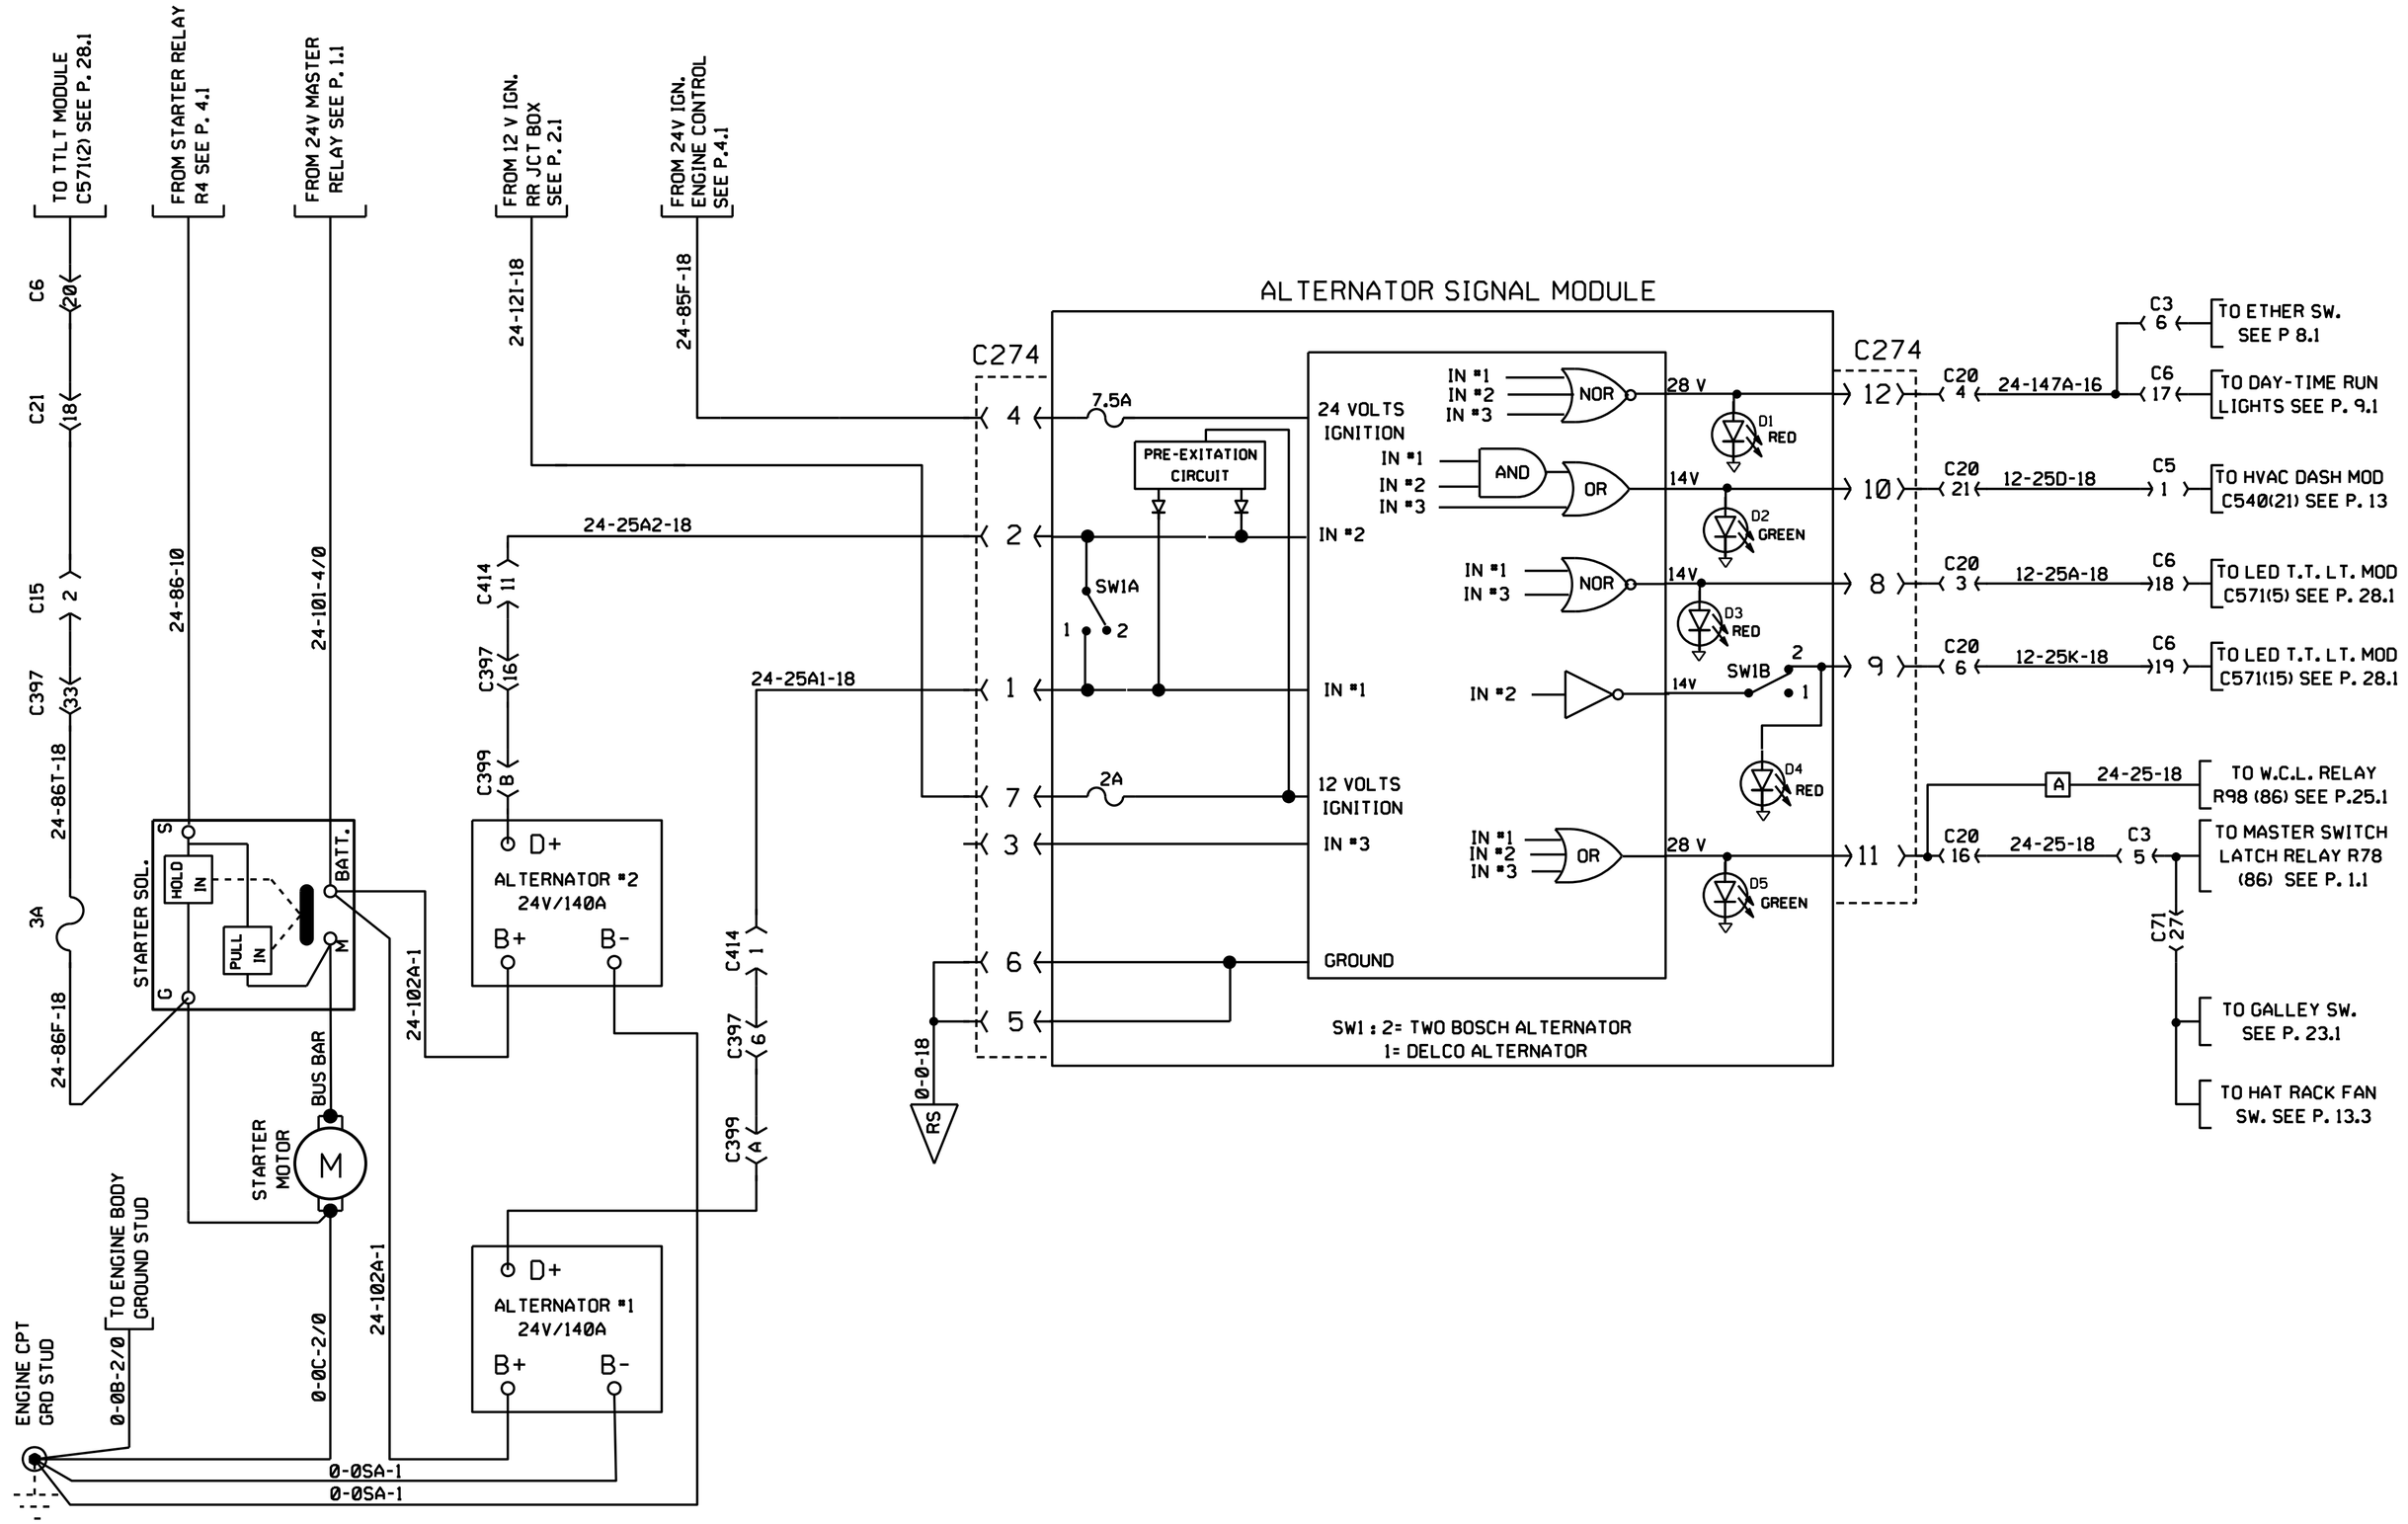


STARTER & BOSCH ALTERNATOR

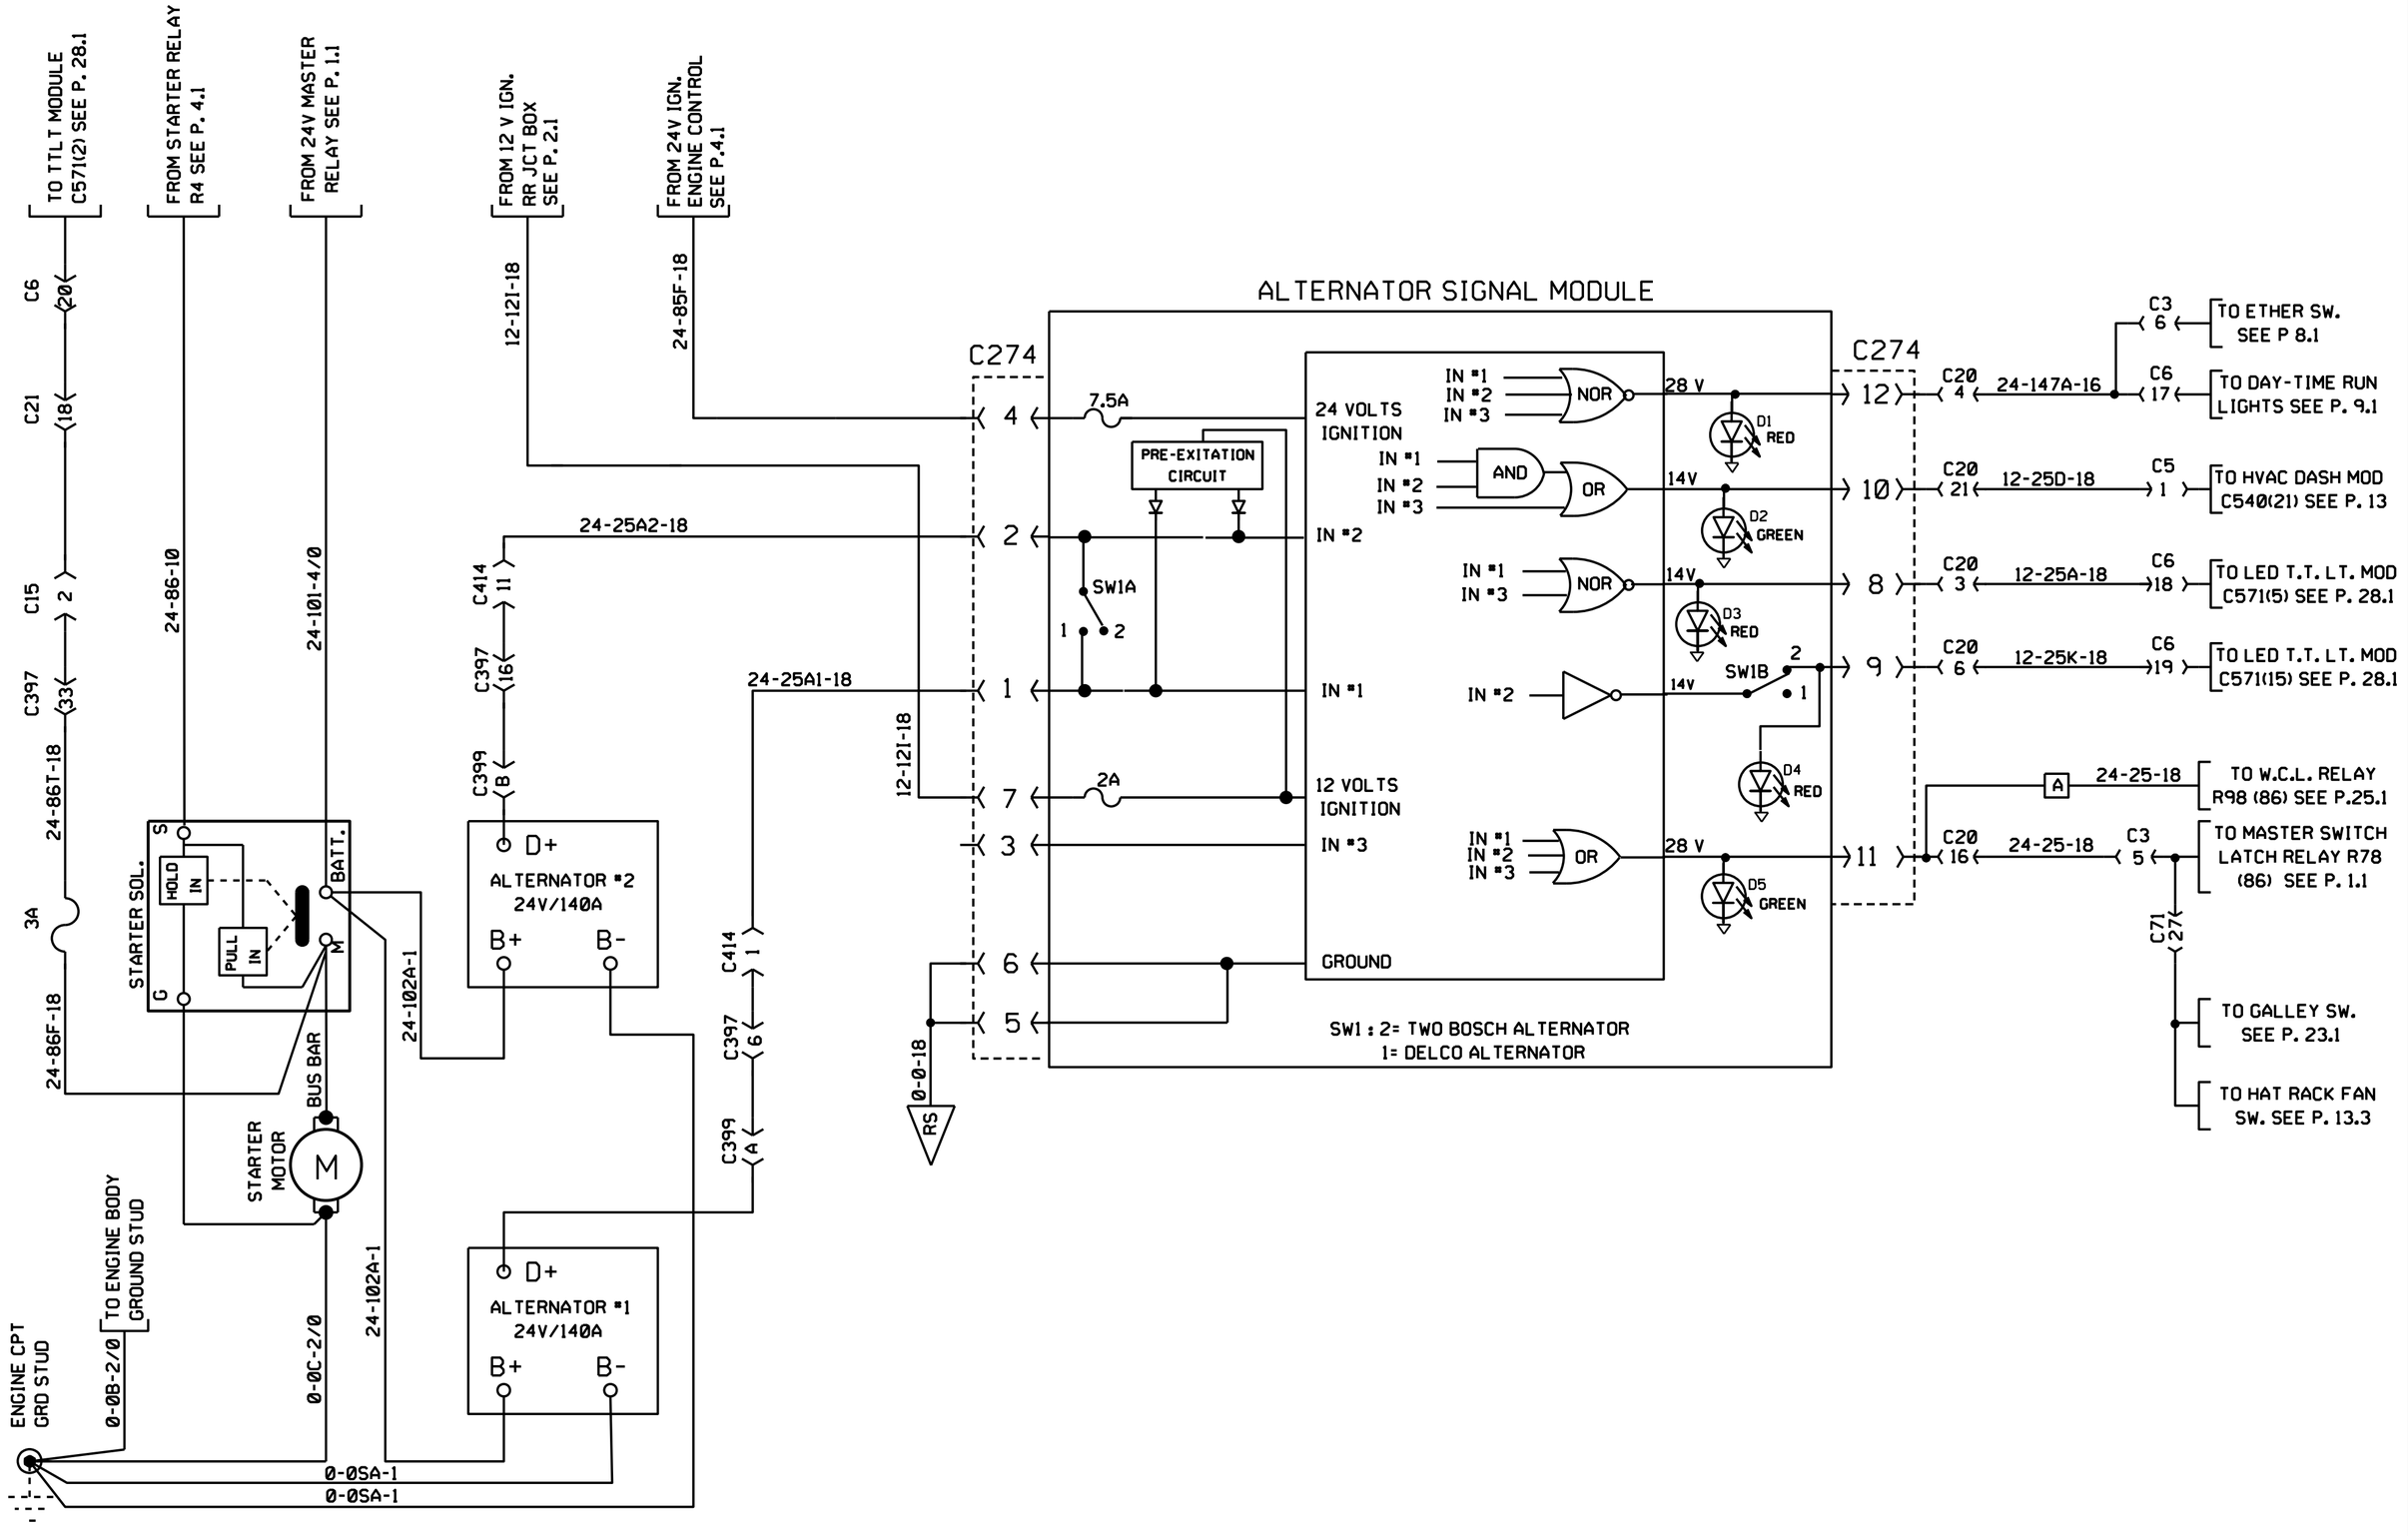


STARTER & BOSCH ALTERNATOR

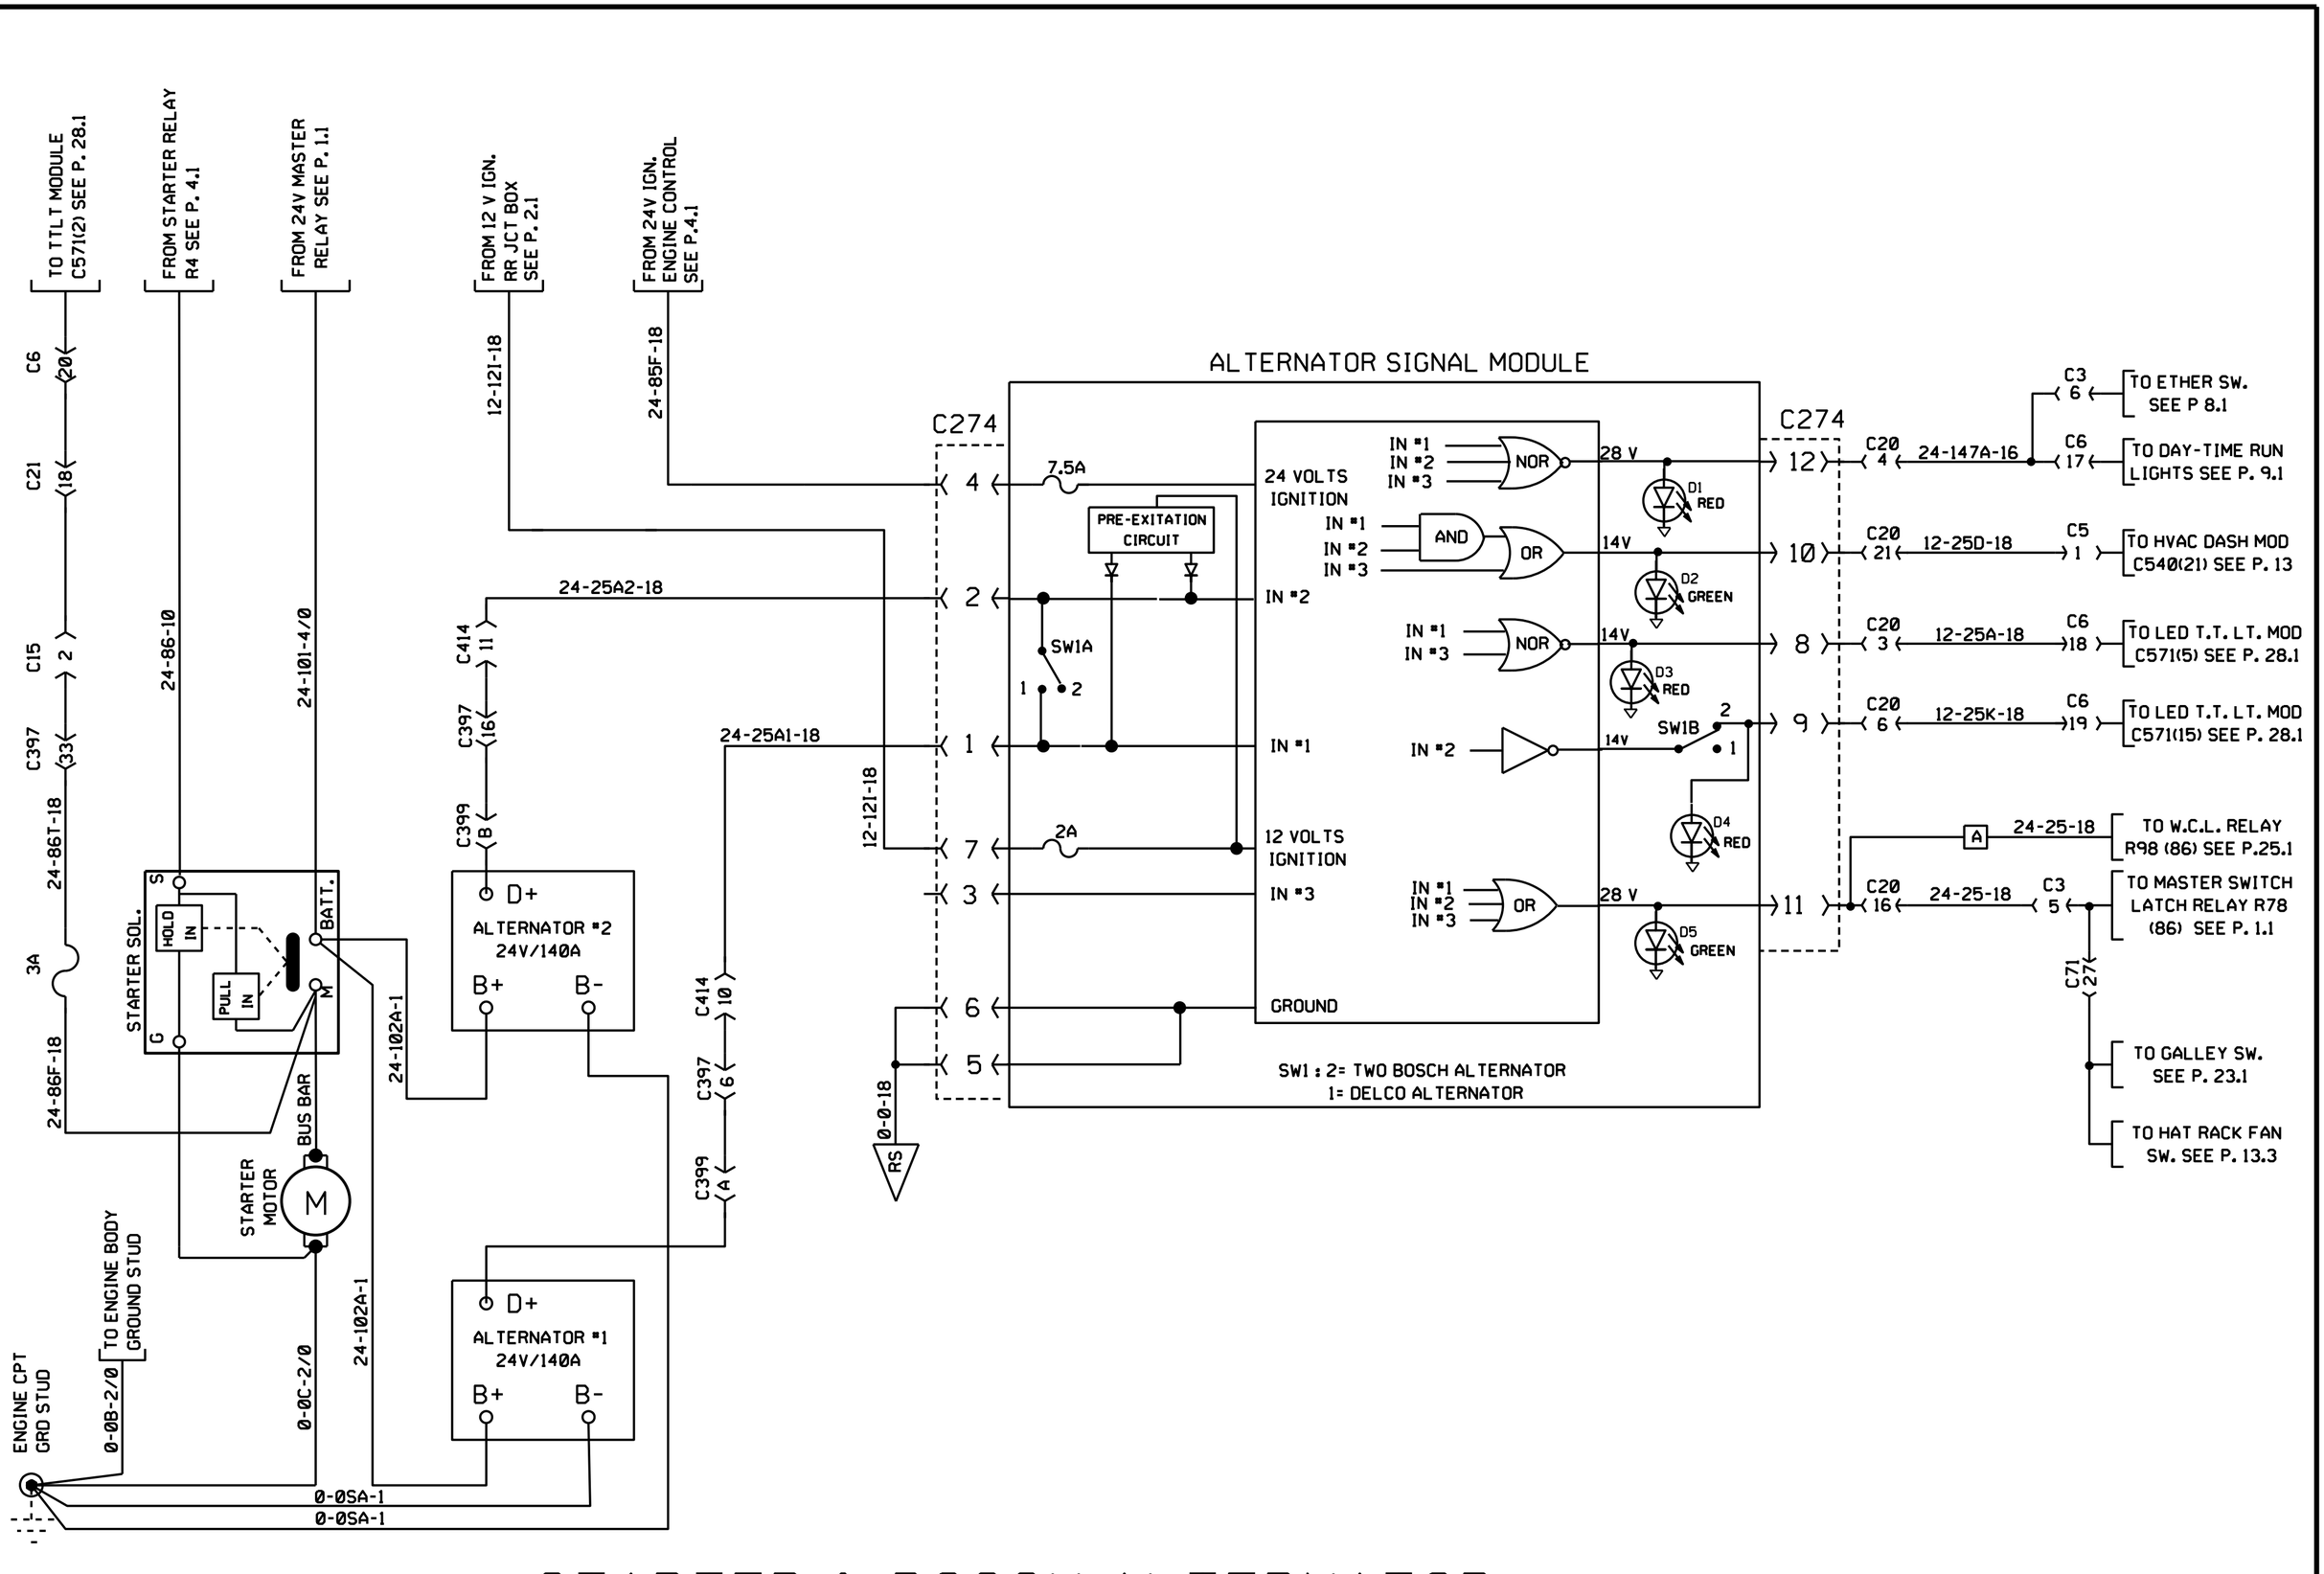


STARTER & BOSCH ALTERNATOR

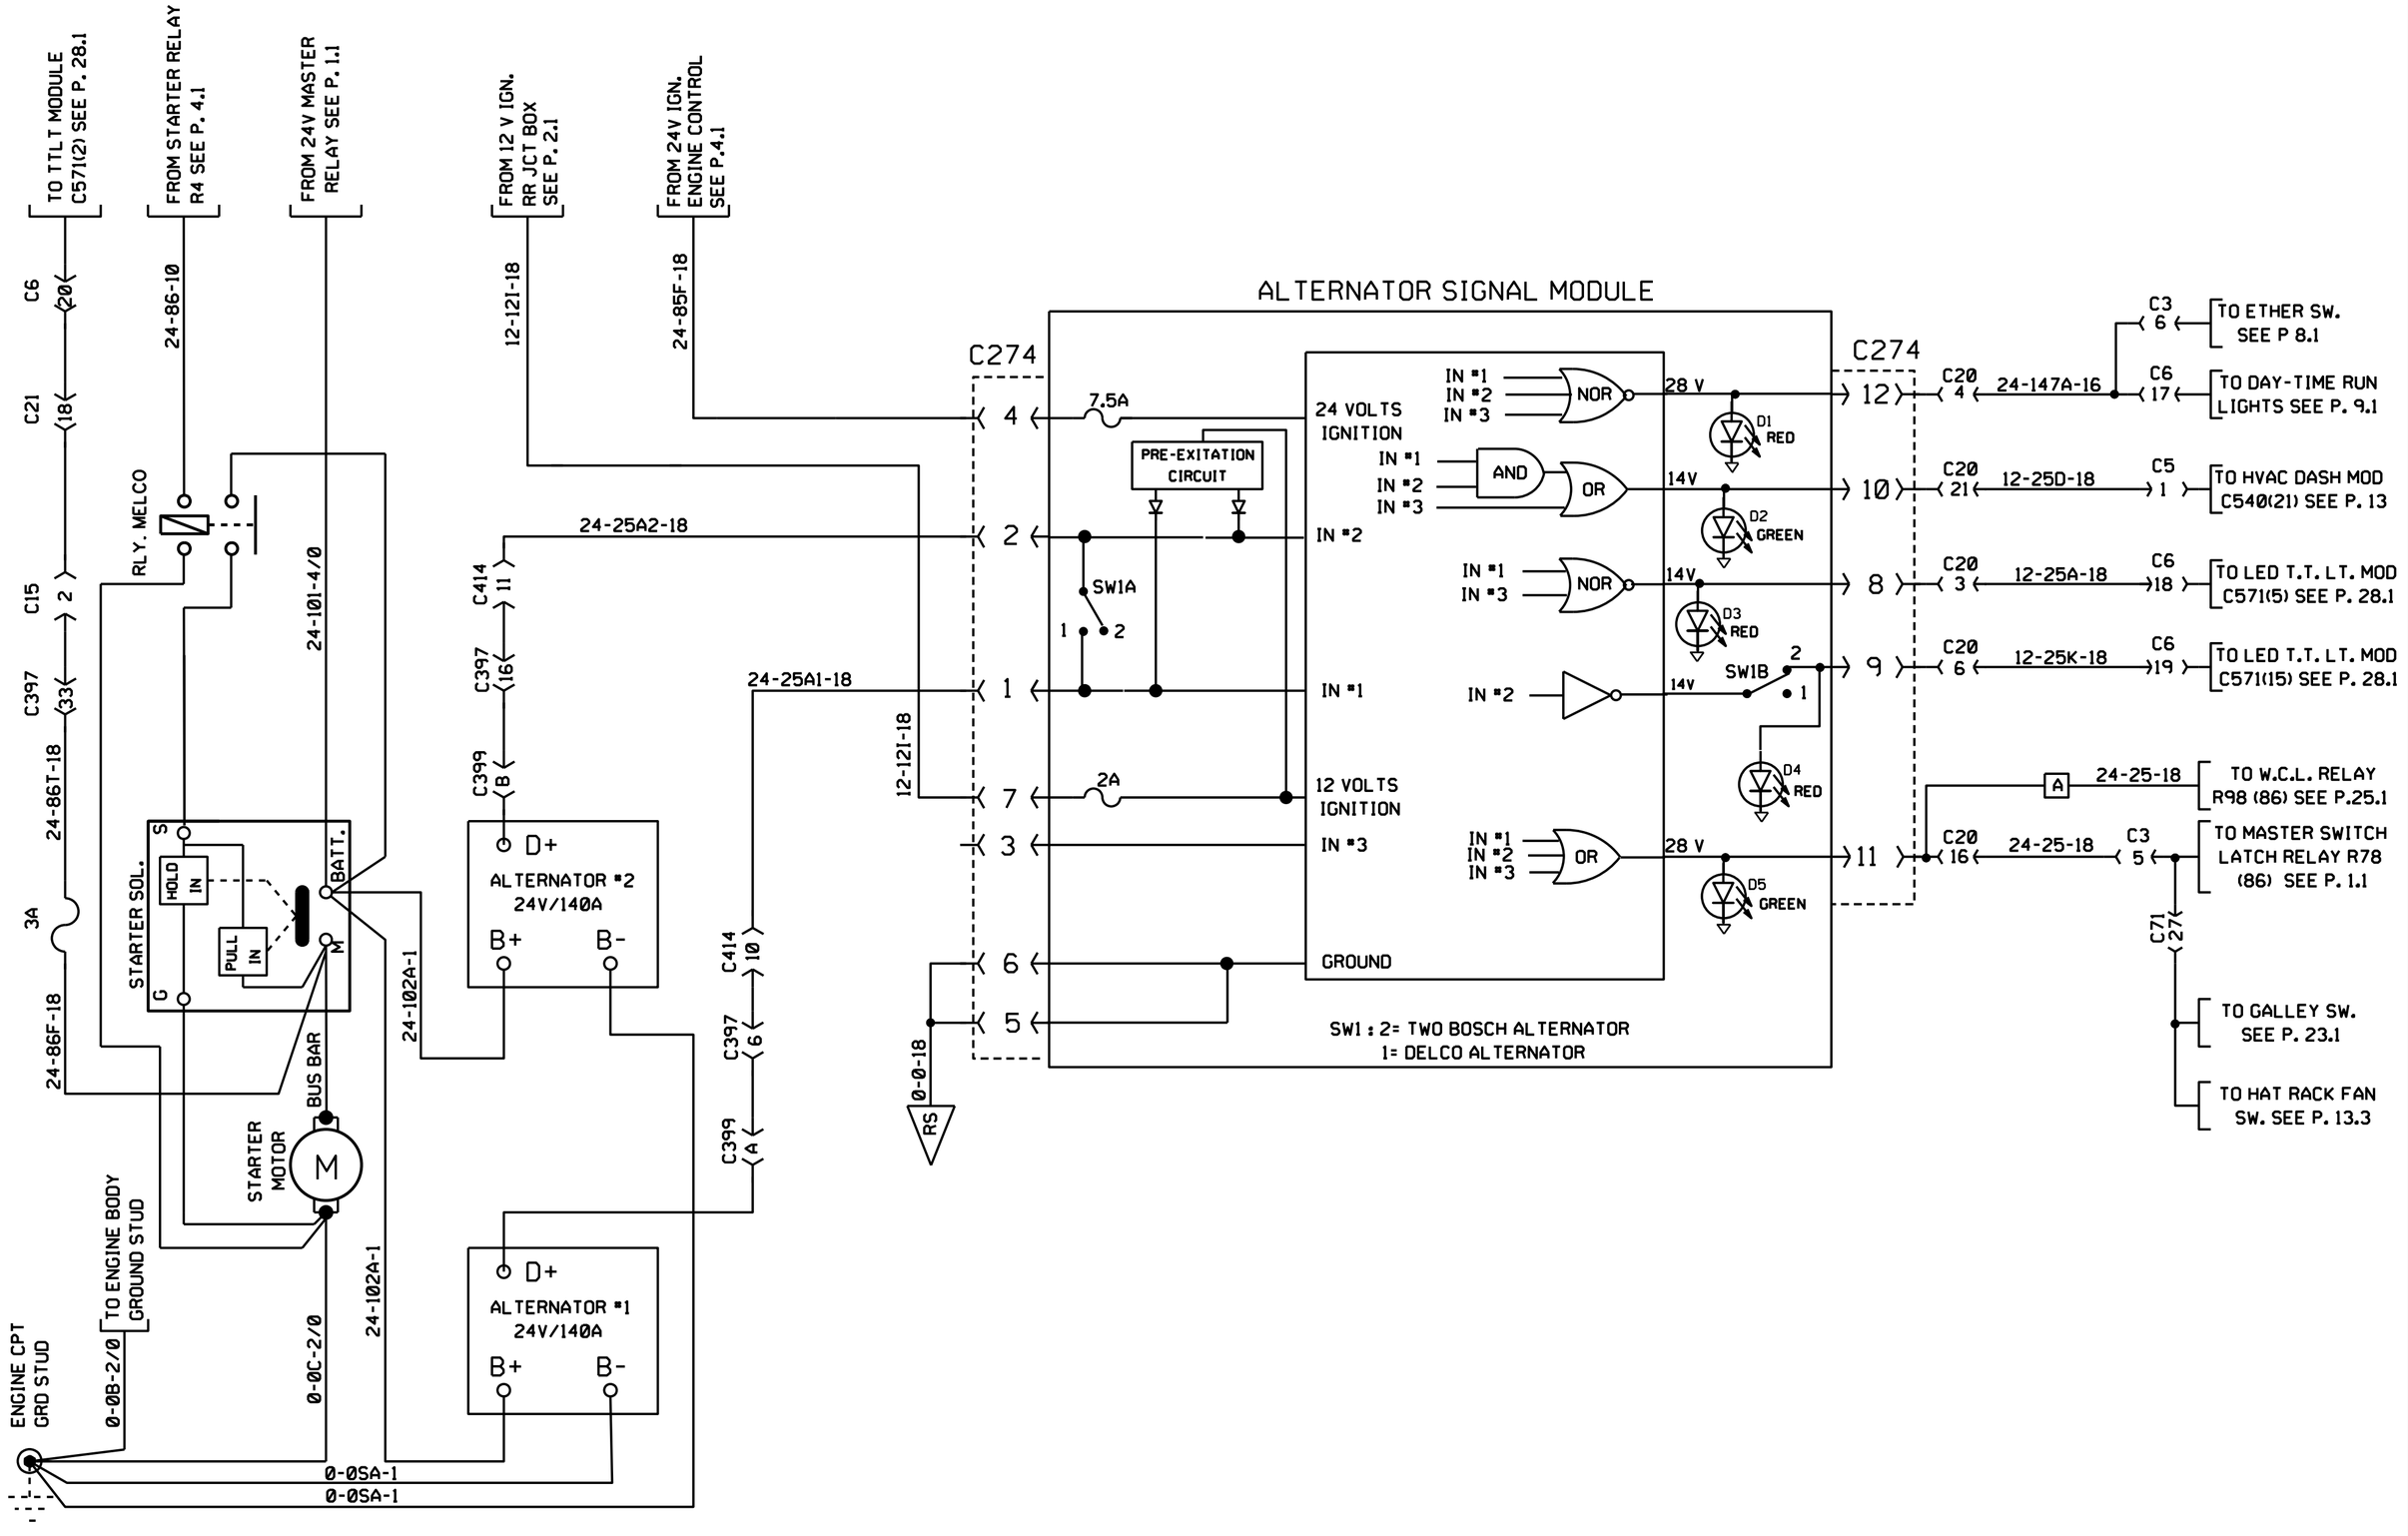


STARTER & BOSCH ALTERNATOR

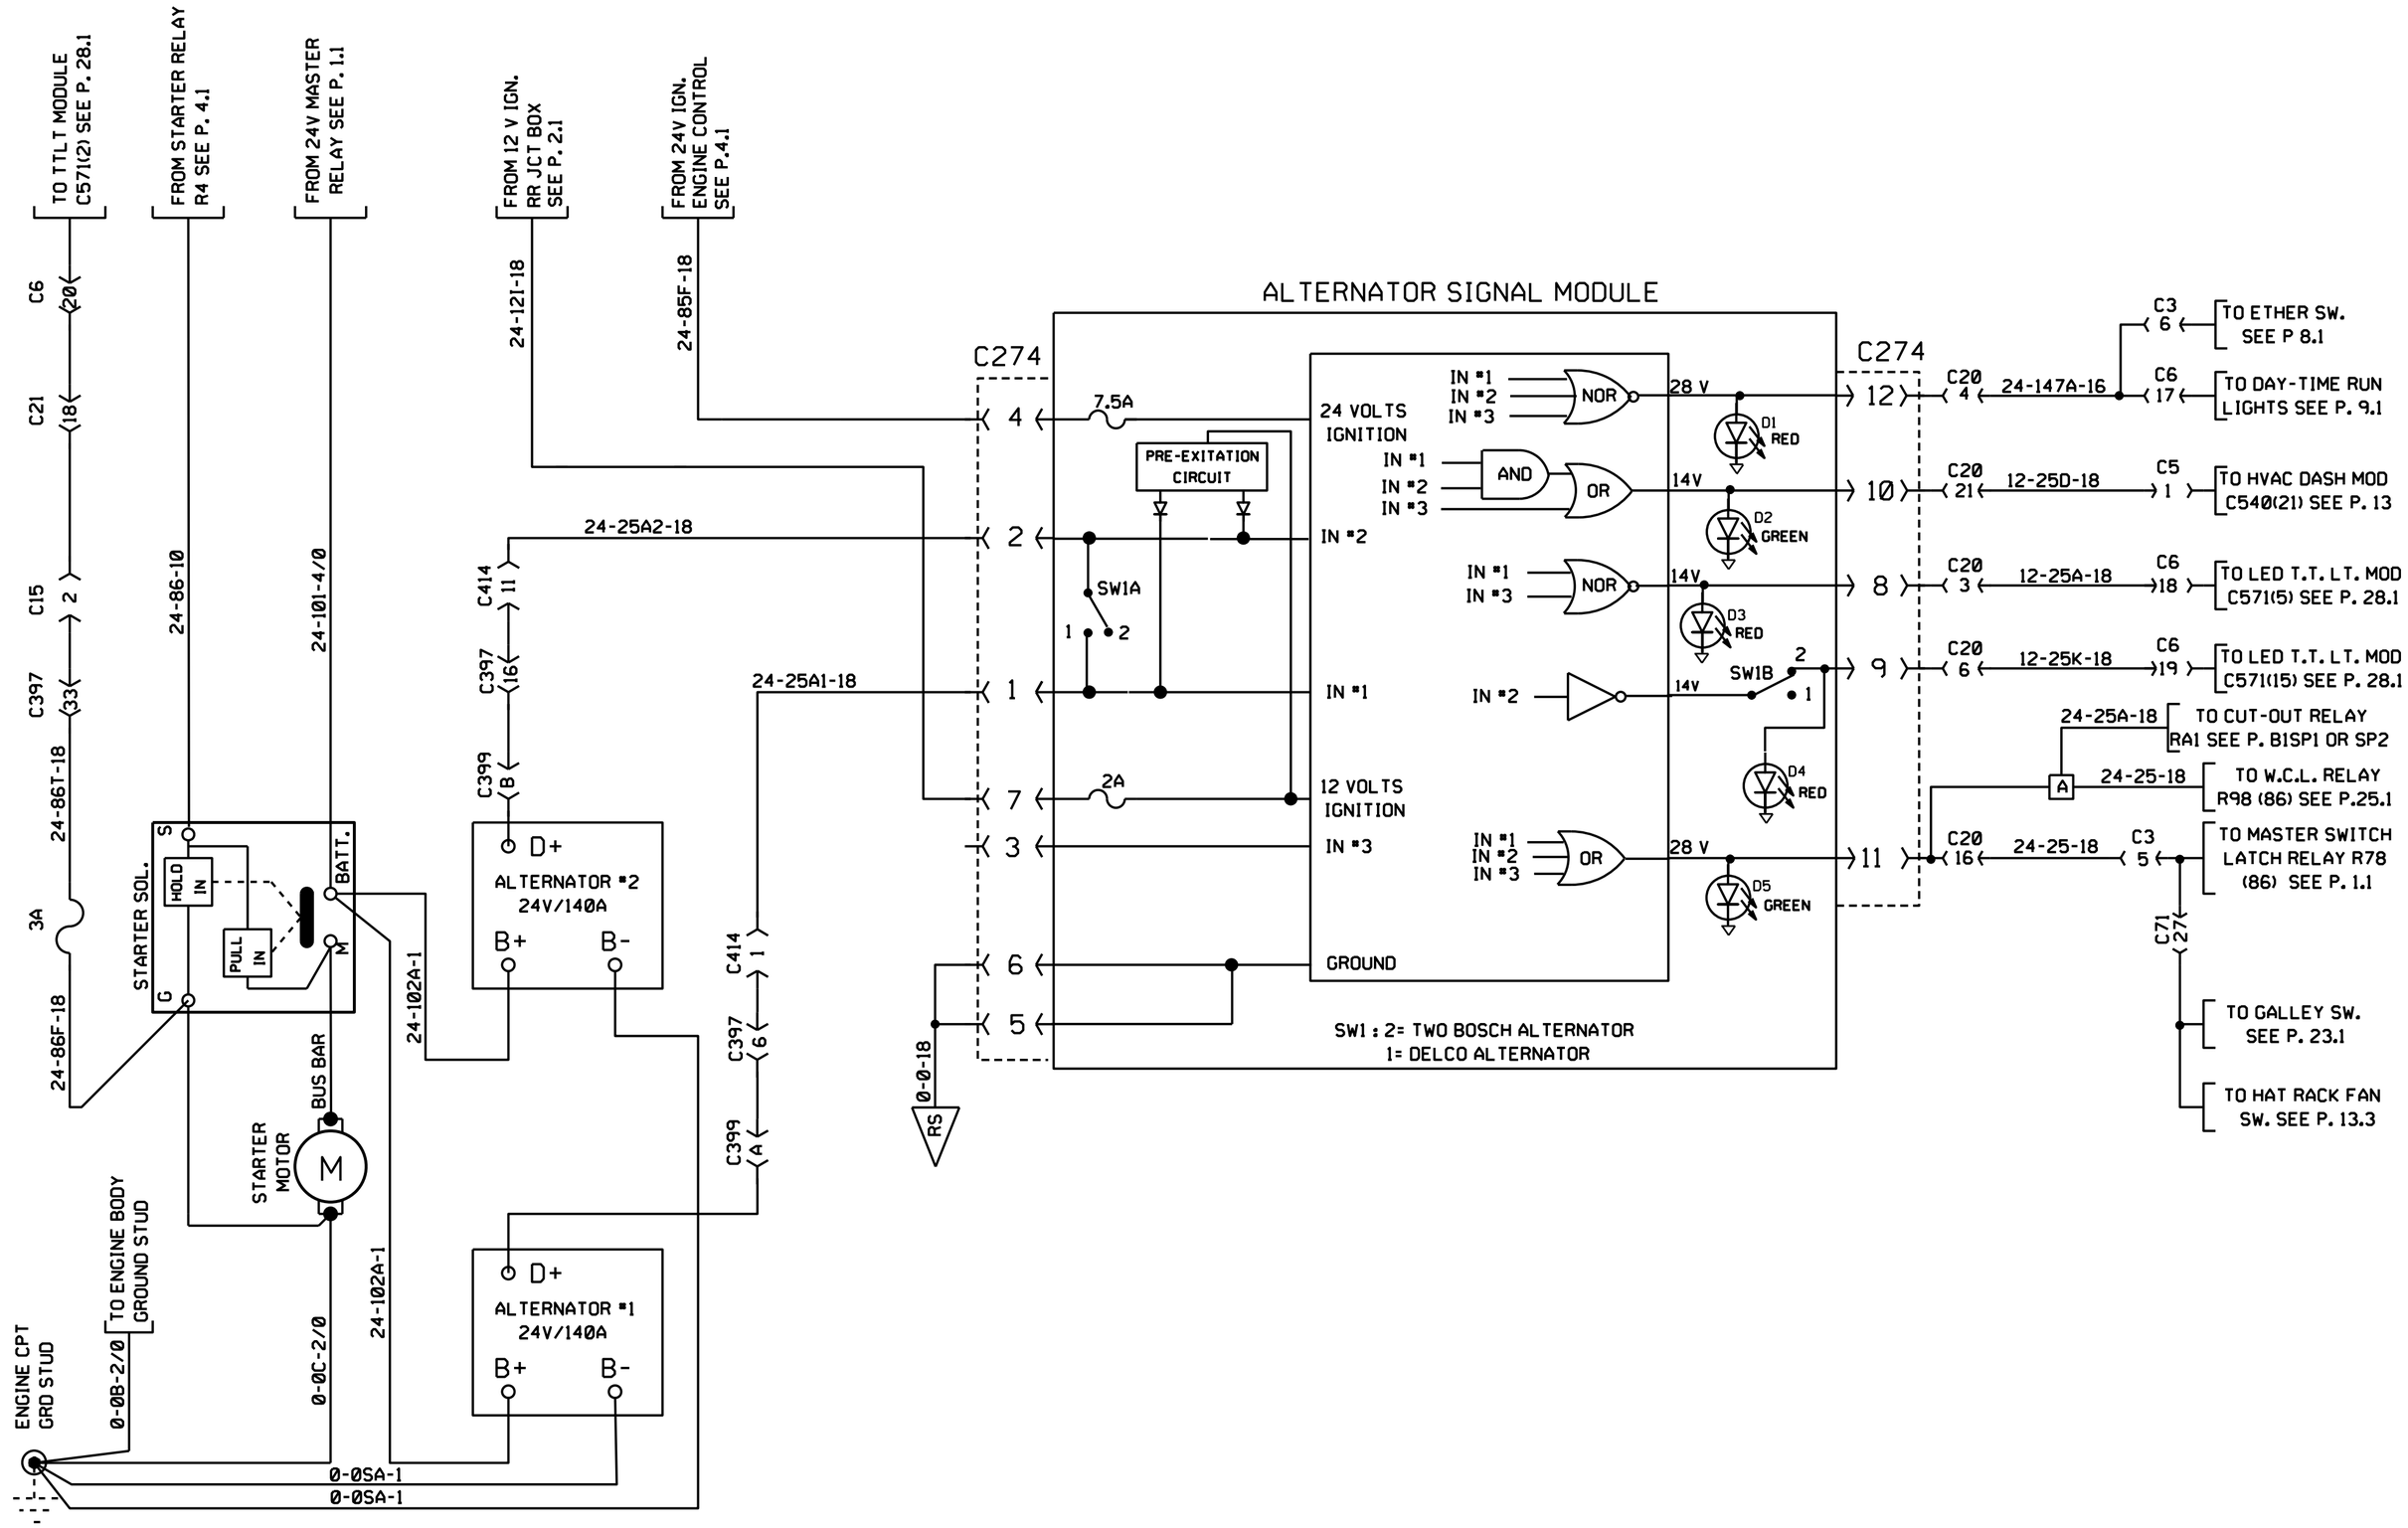

STARTER & BOSCH ALTERNATOR

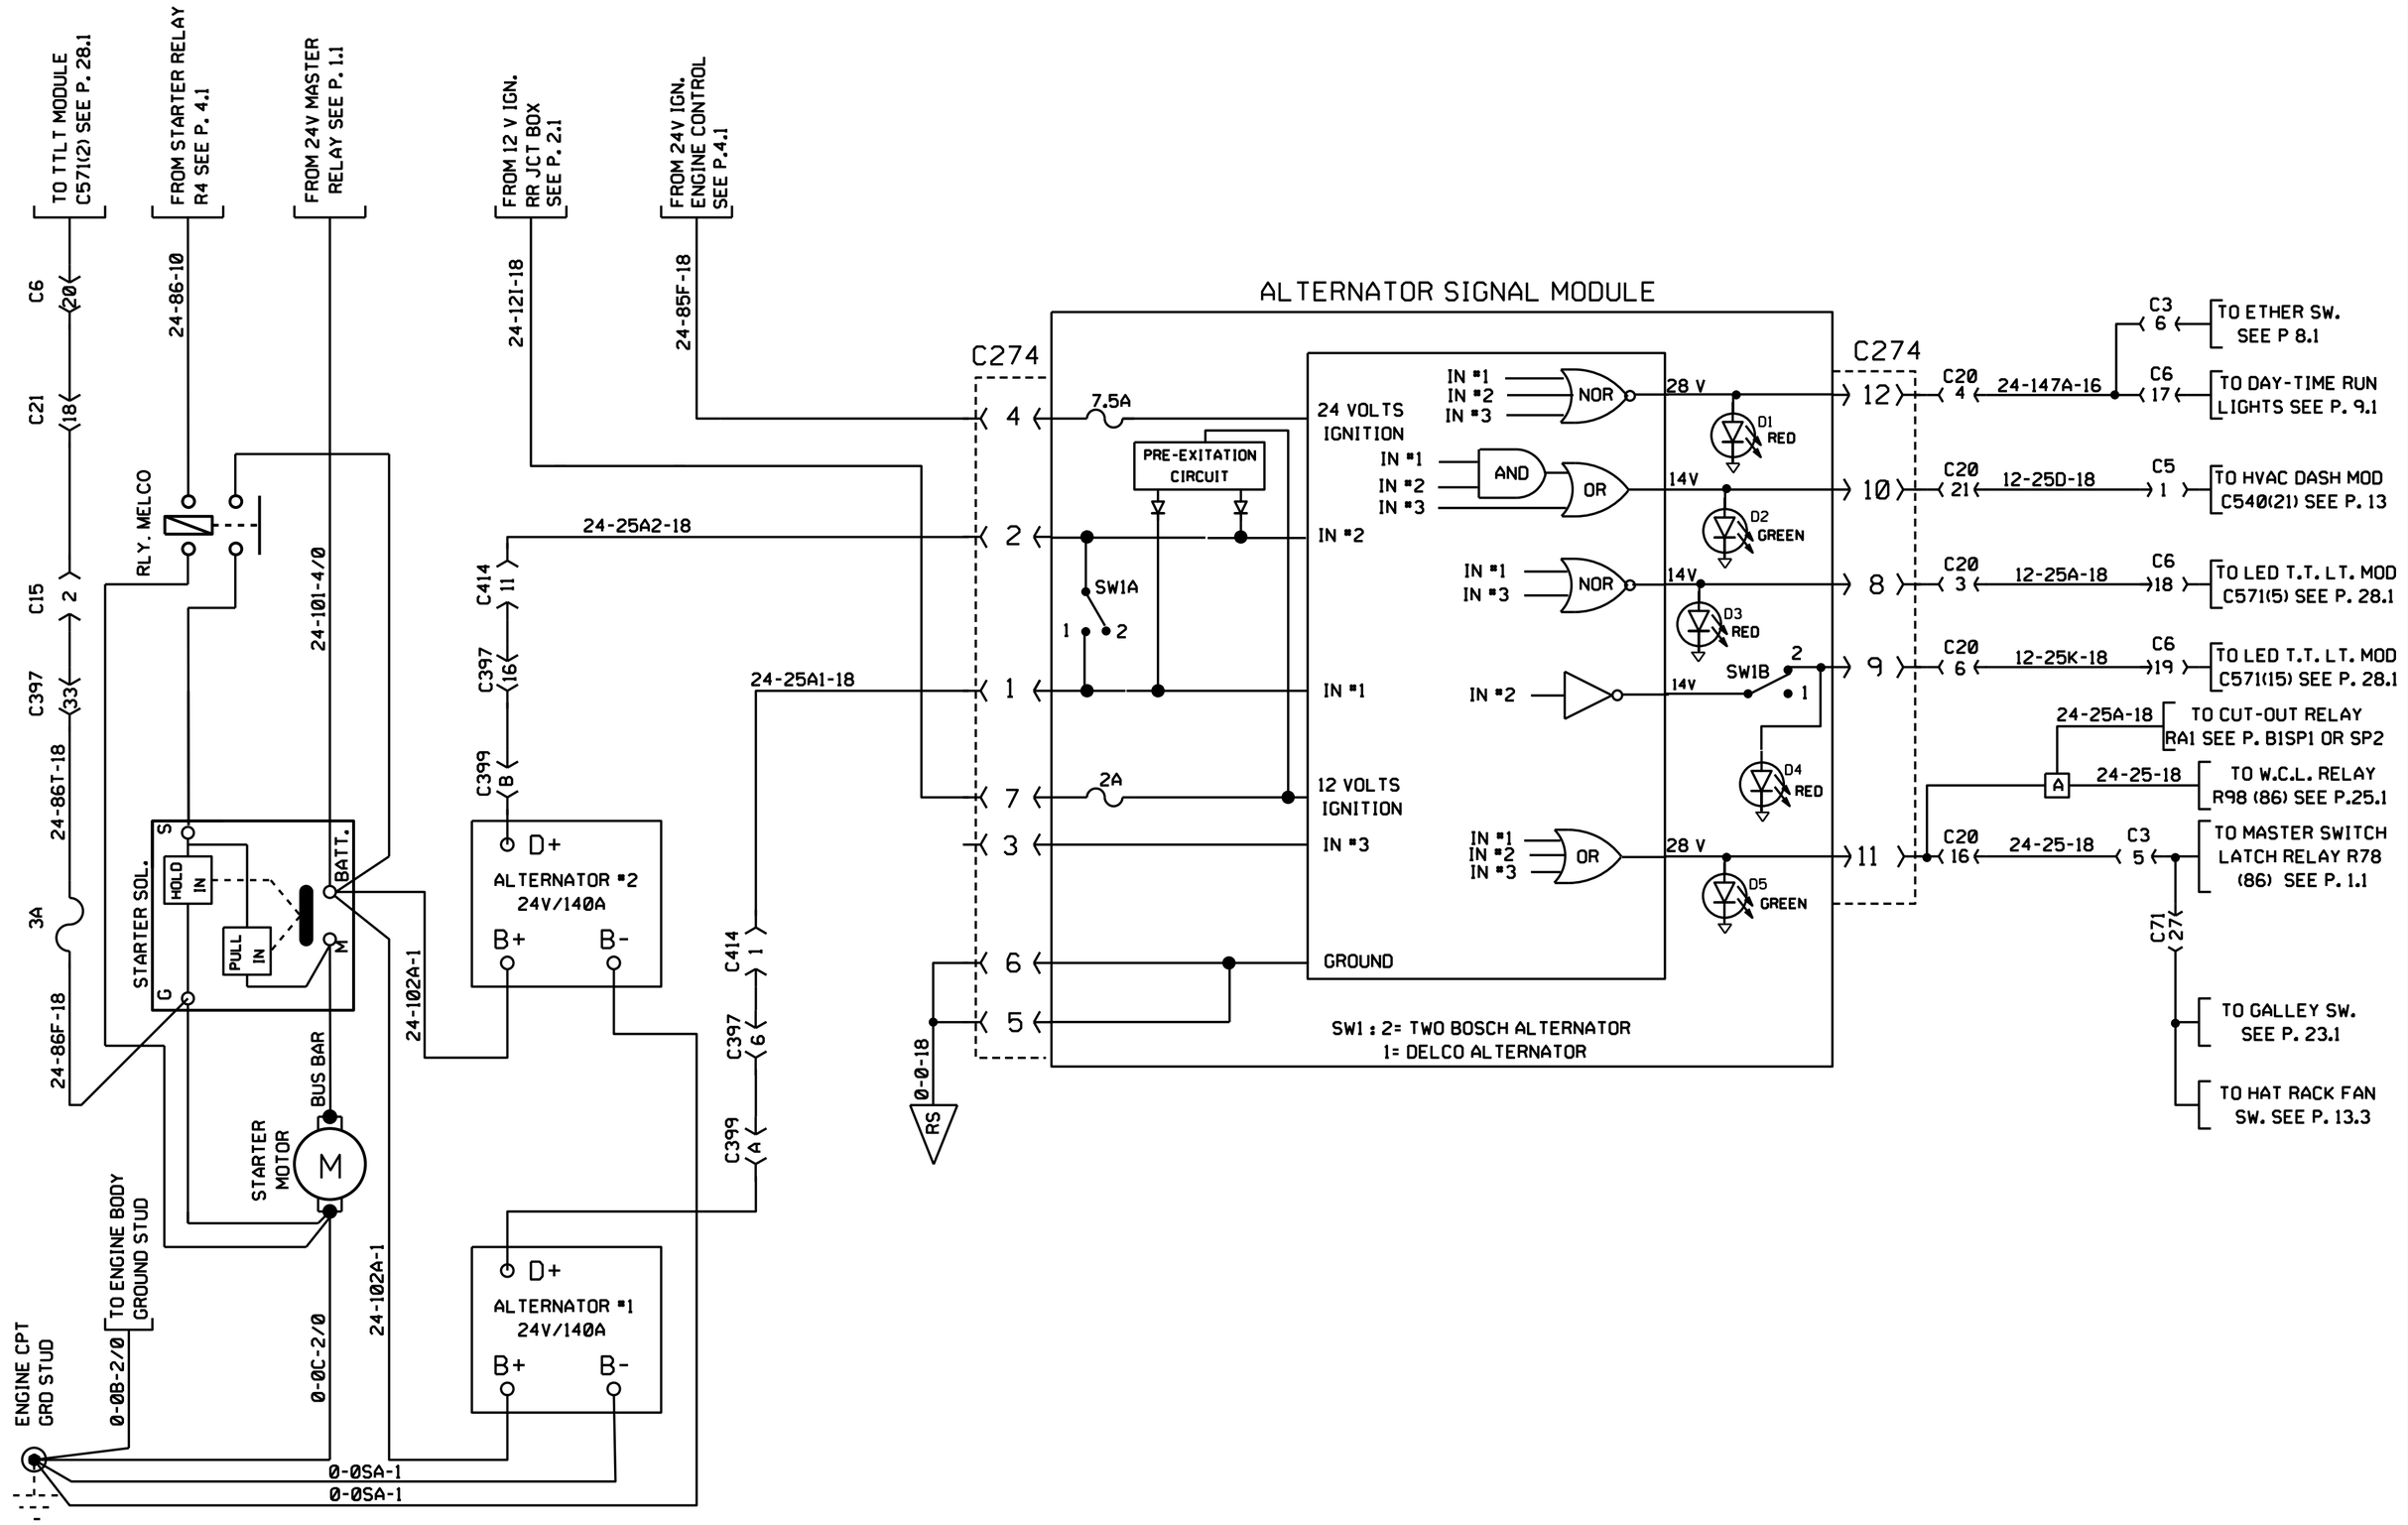


STARTER & BOSCH ALTERNATOR

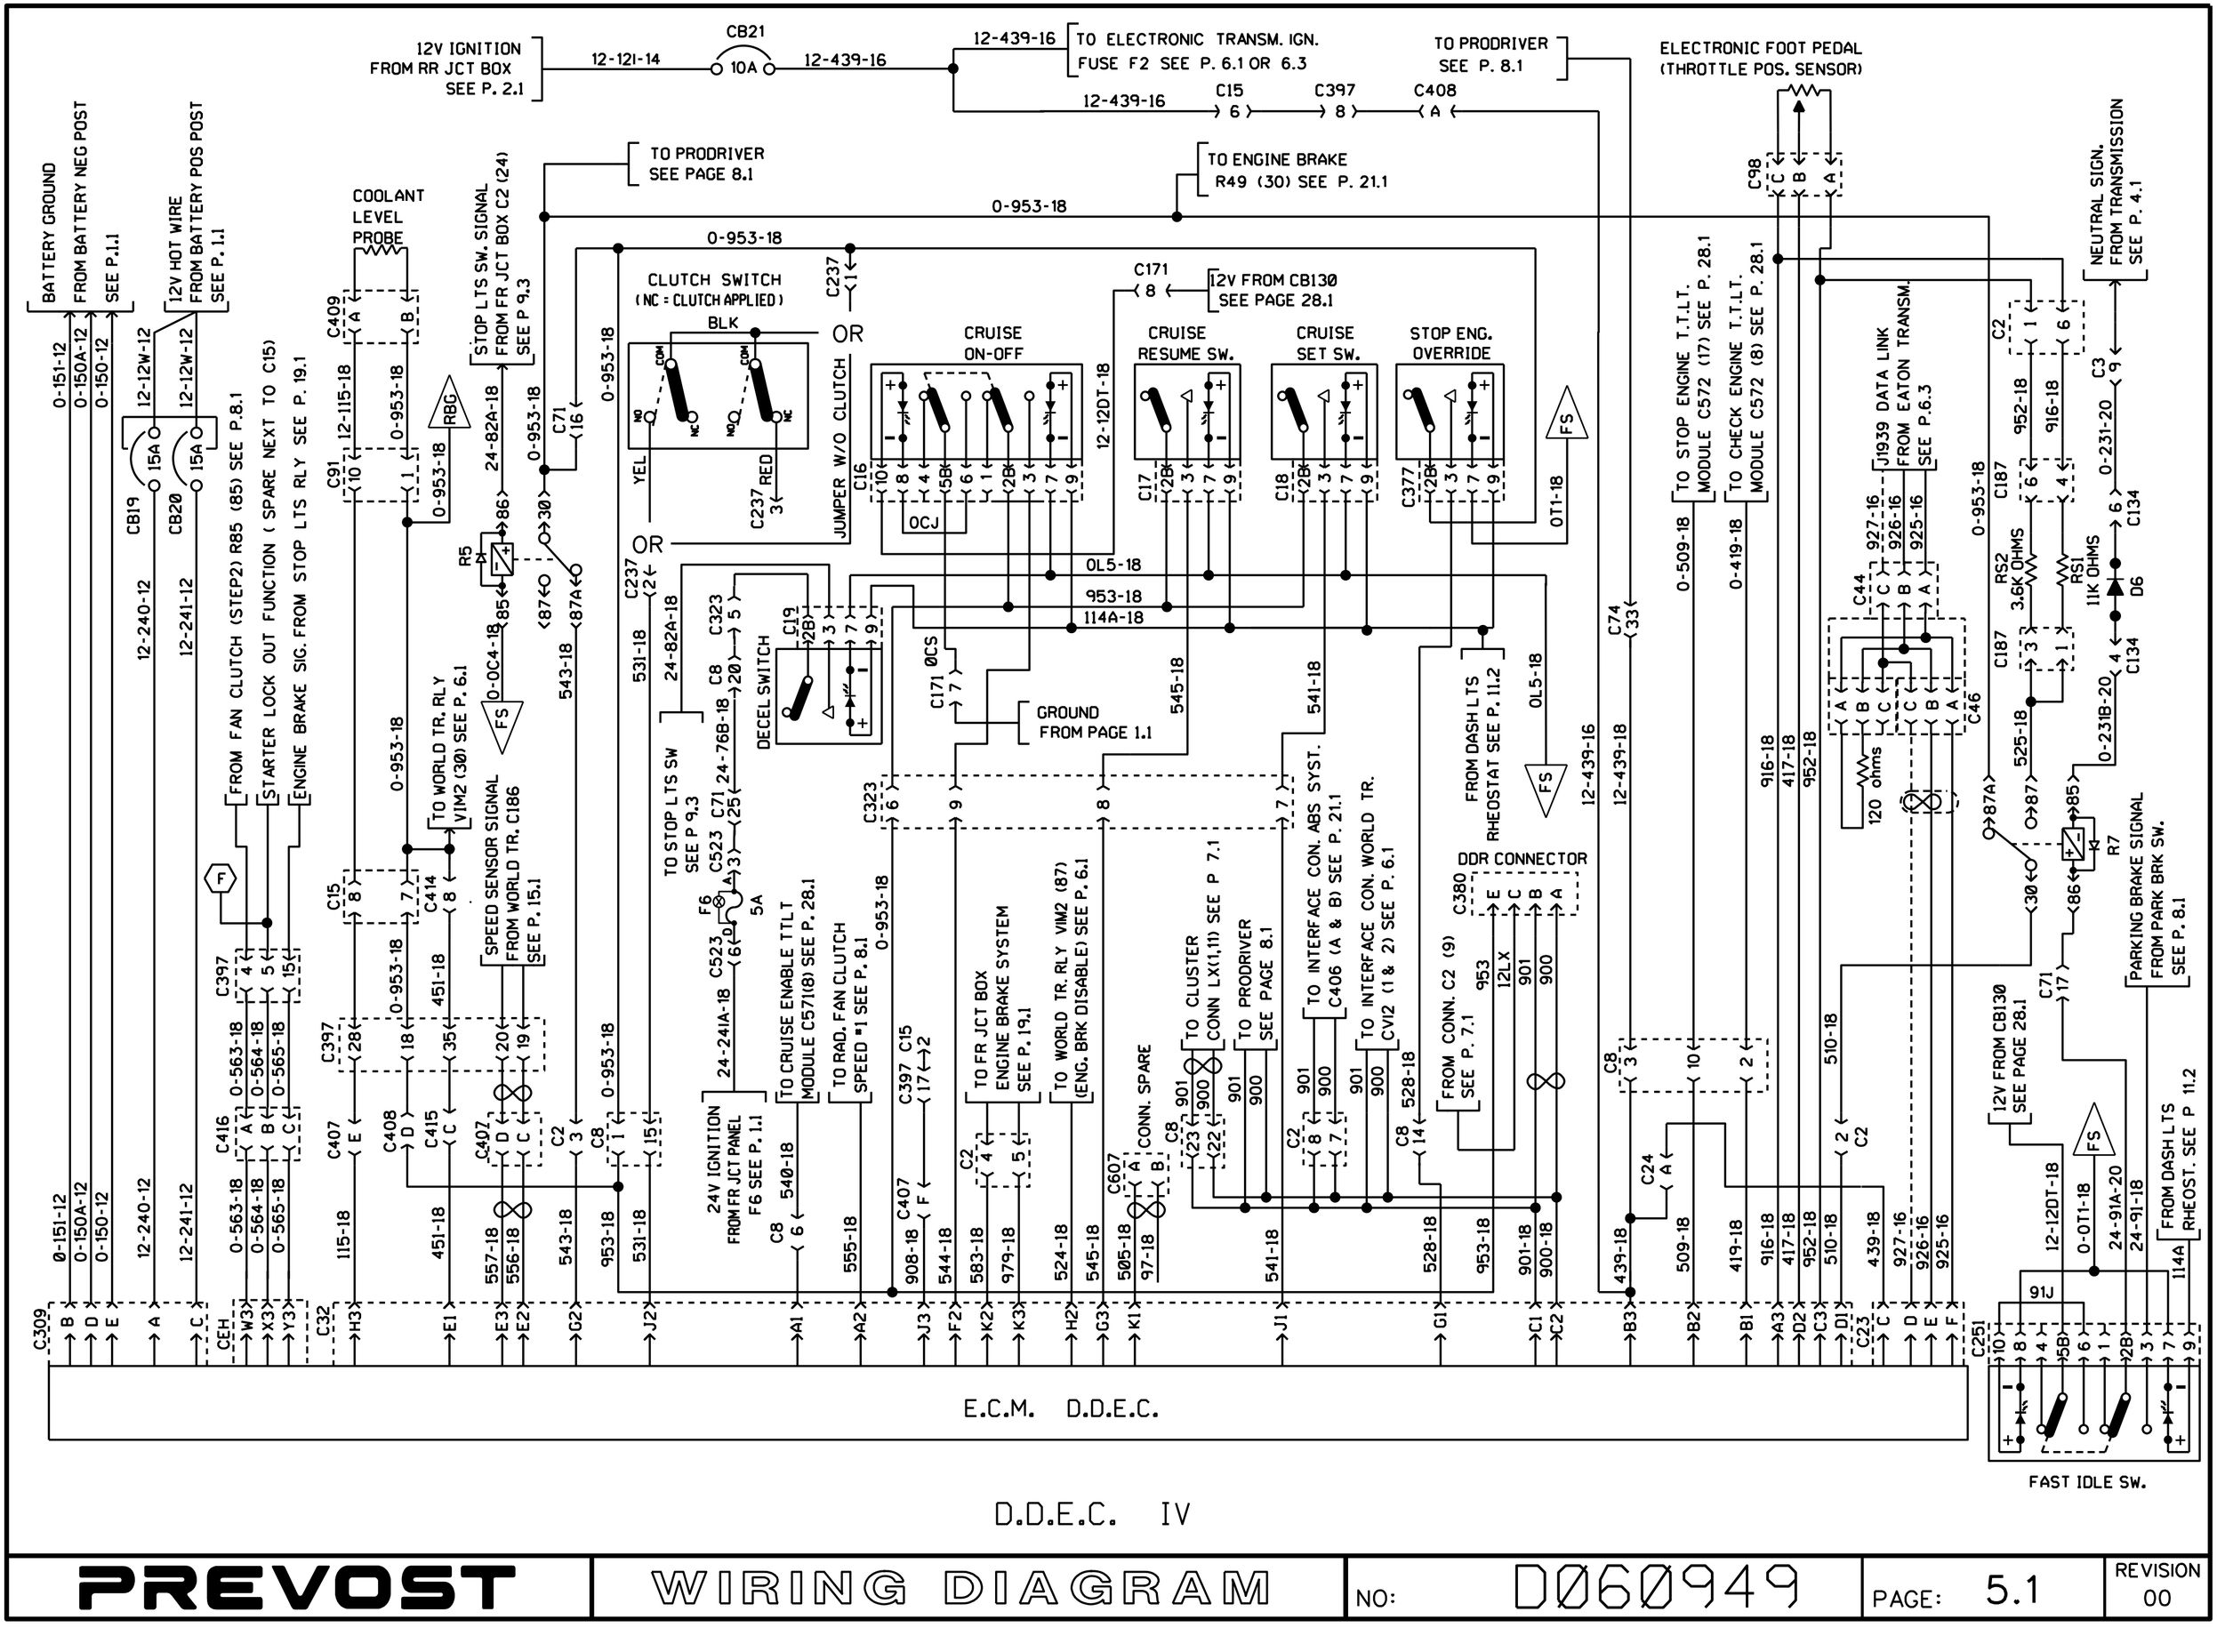


D.D.E.C. IV

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 5.1	REVISION 00

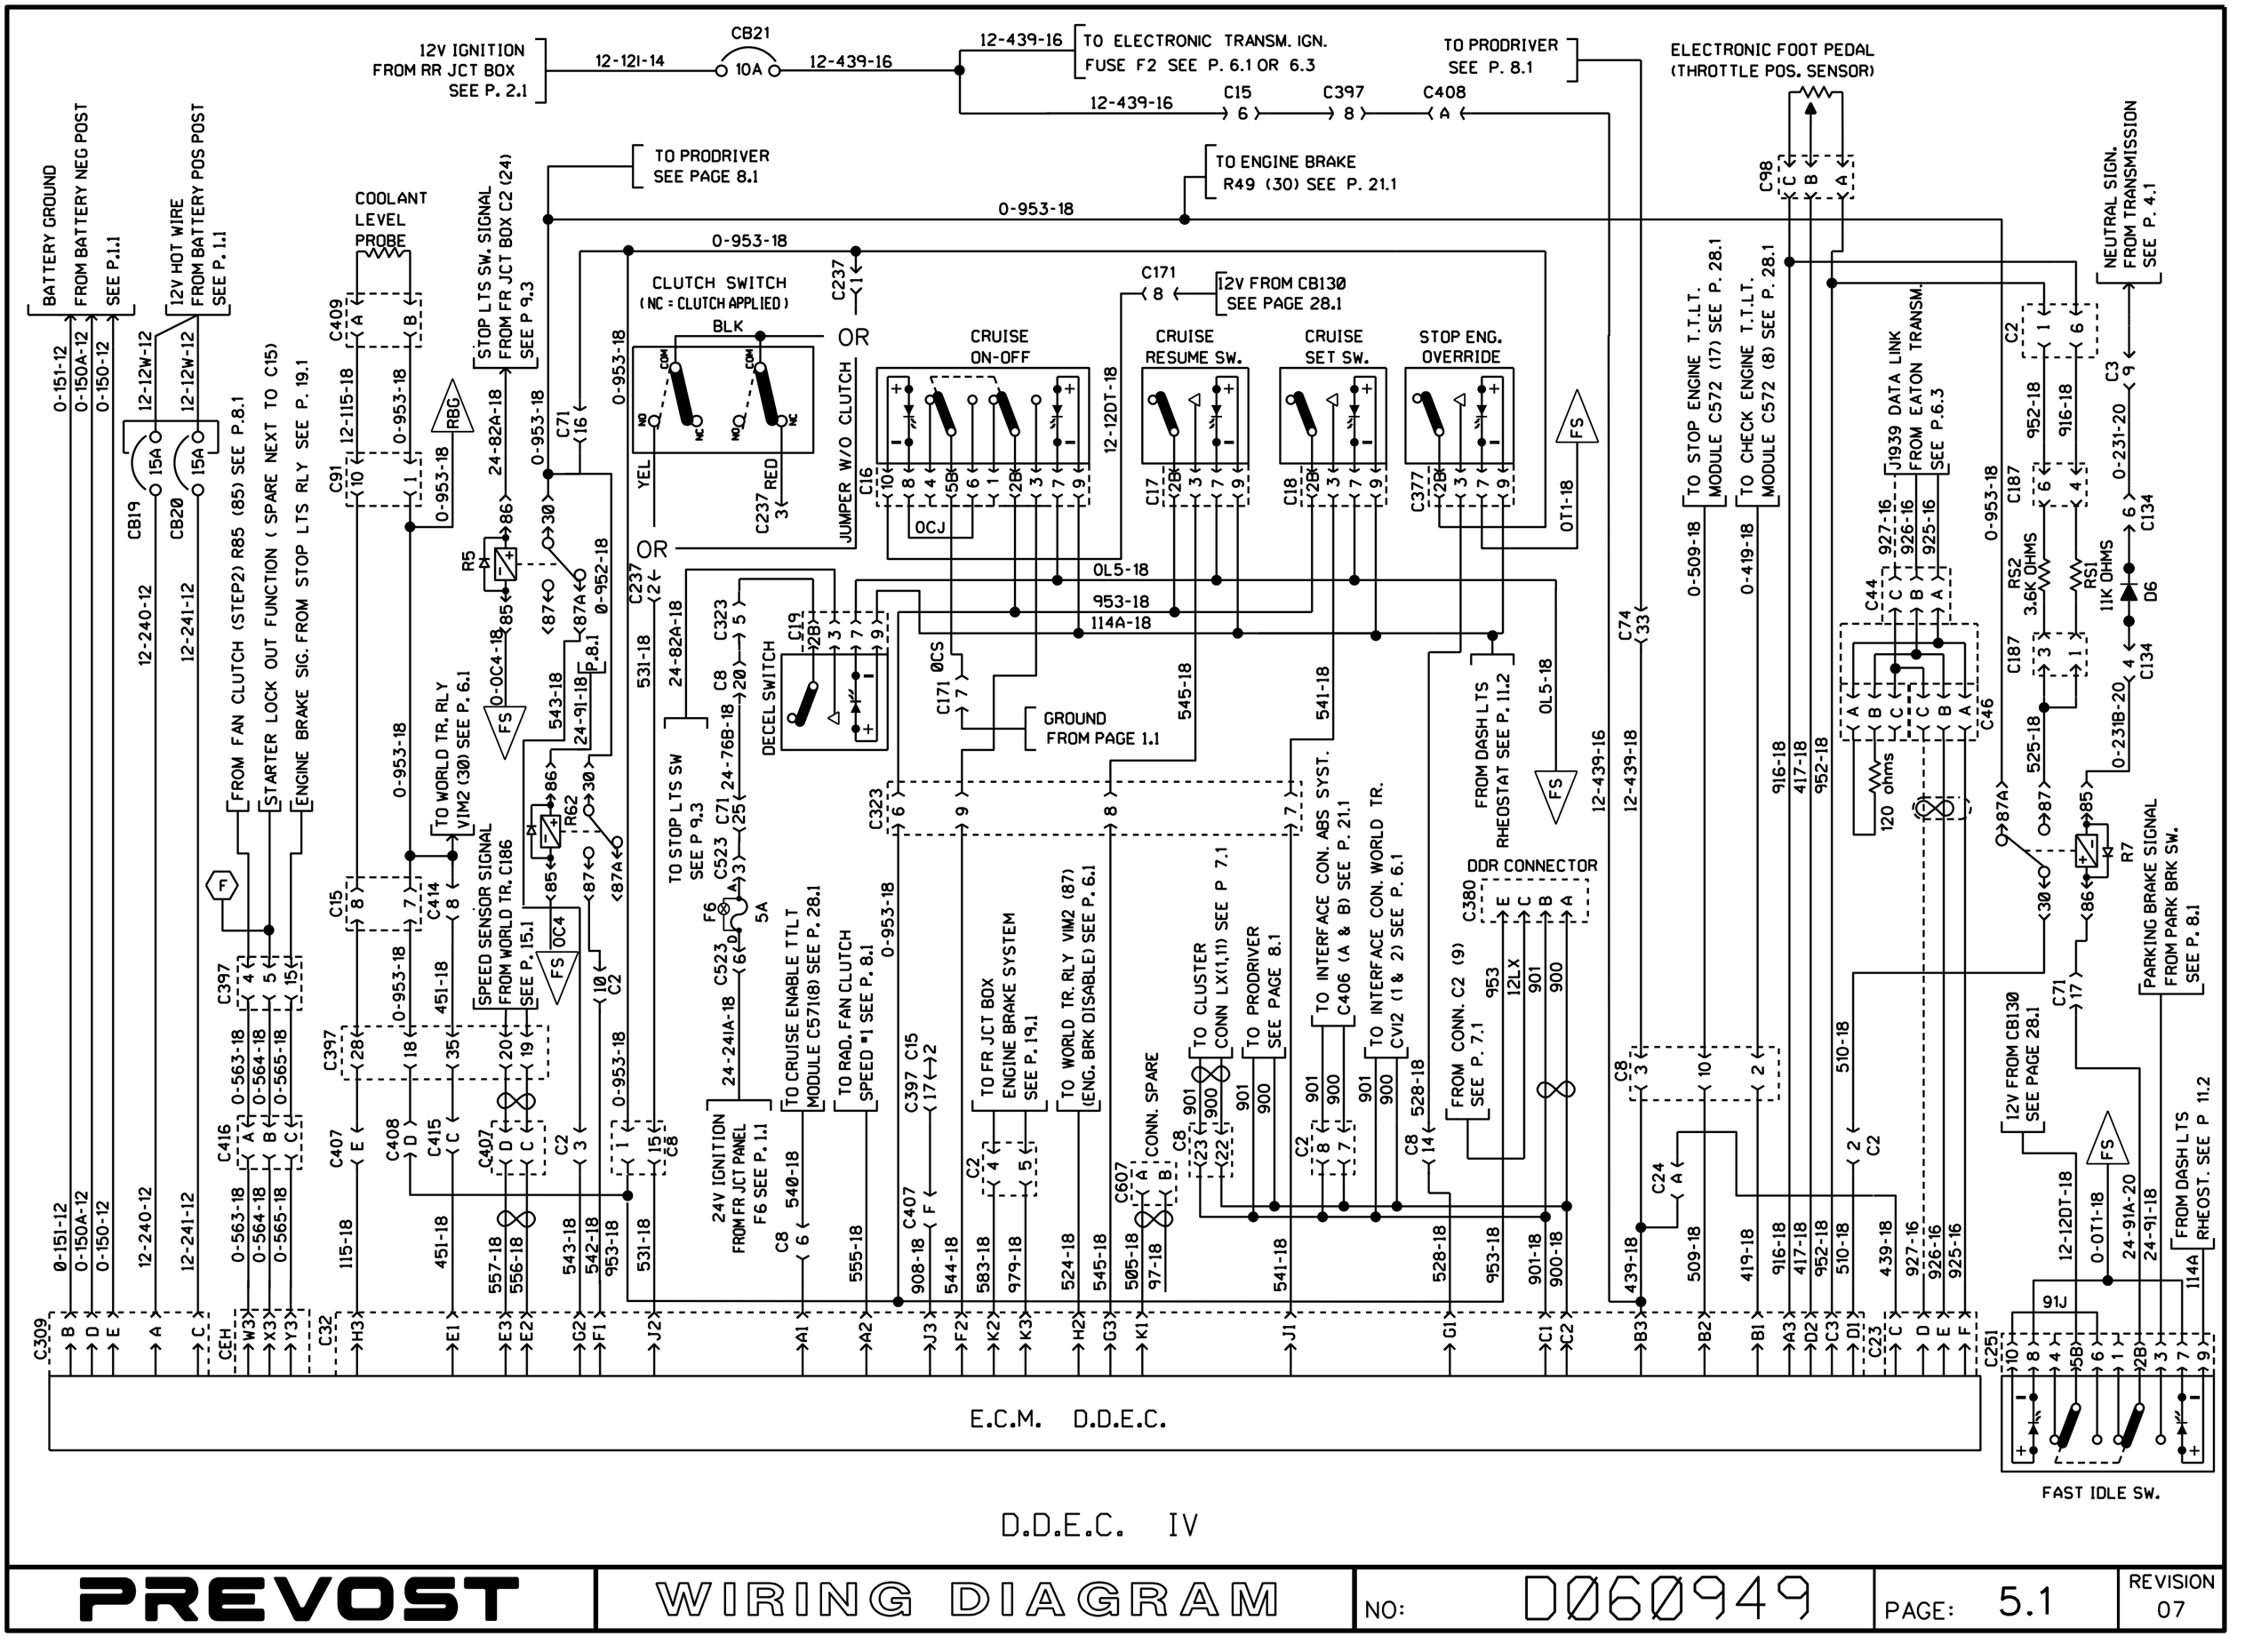


D.D.E.C. IV


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 5.1	REVISION 07

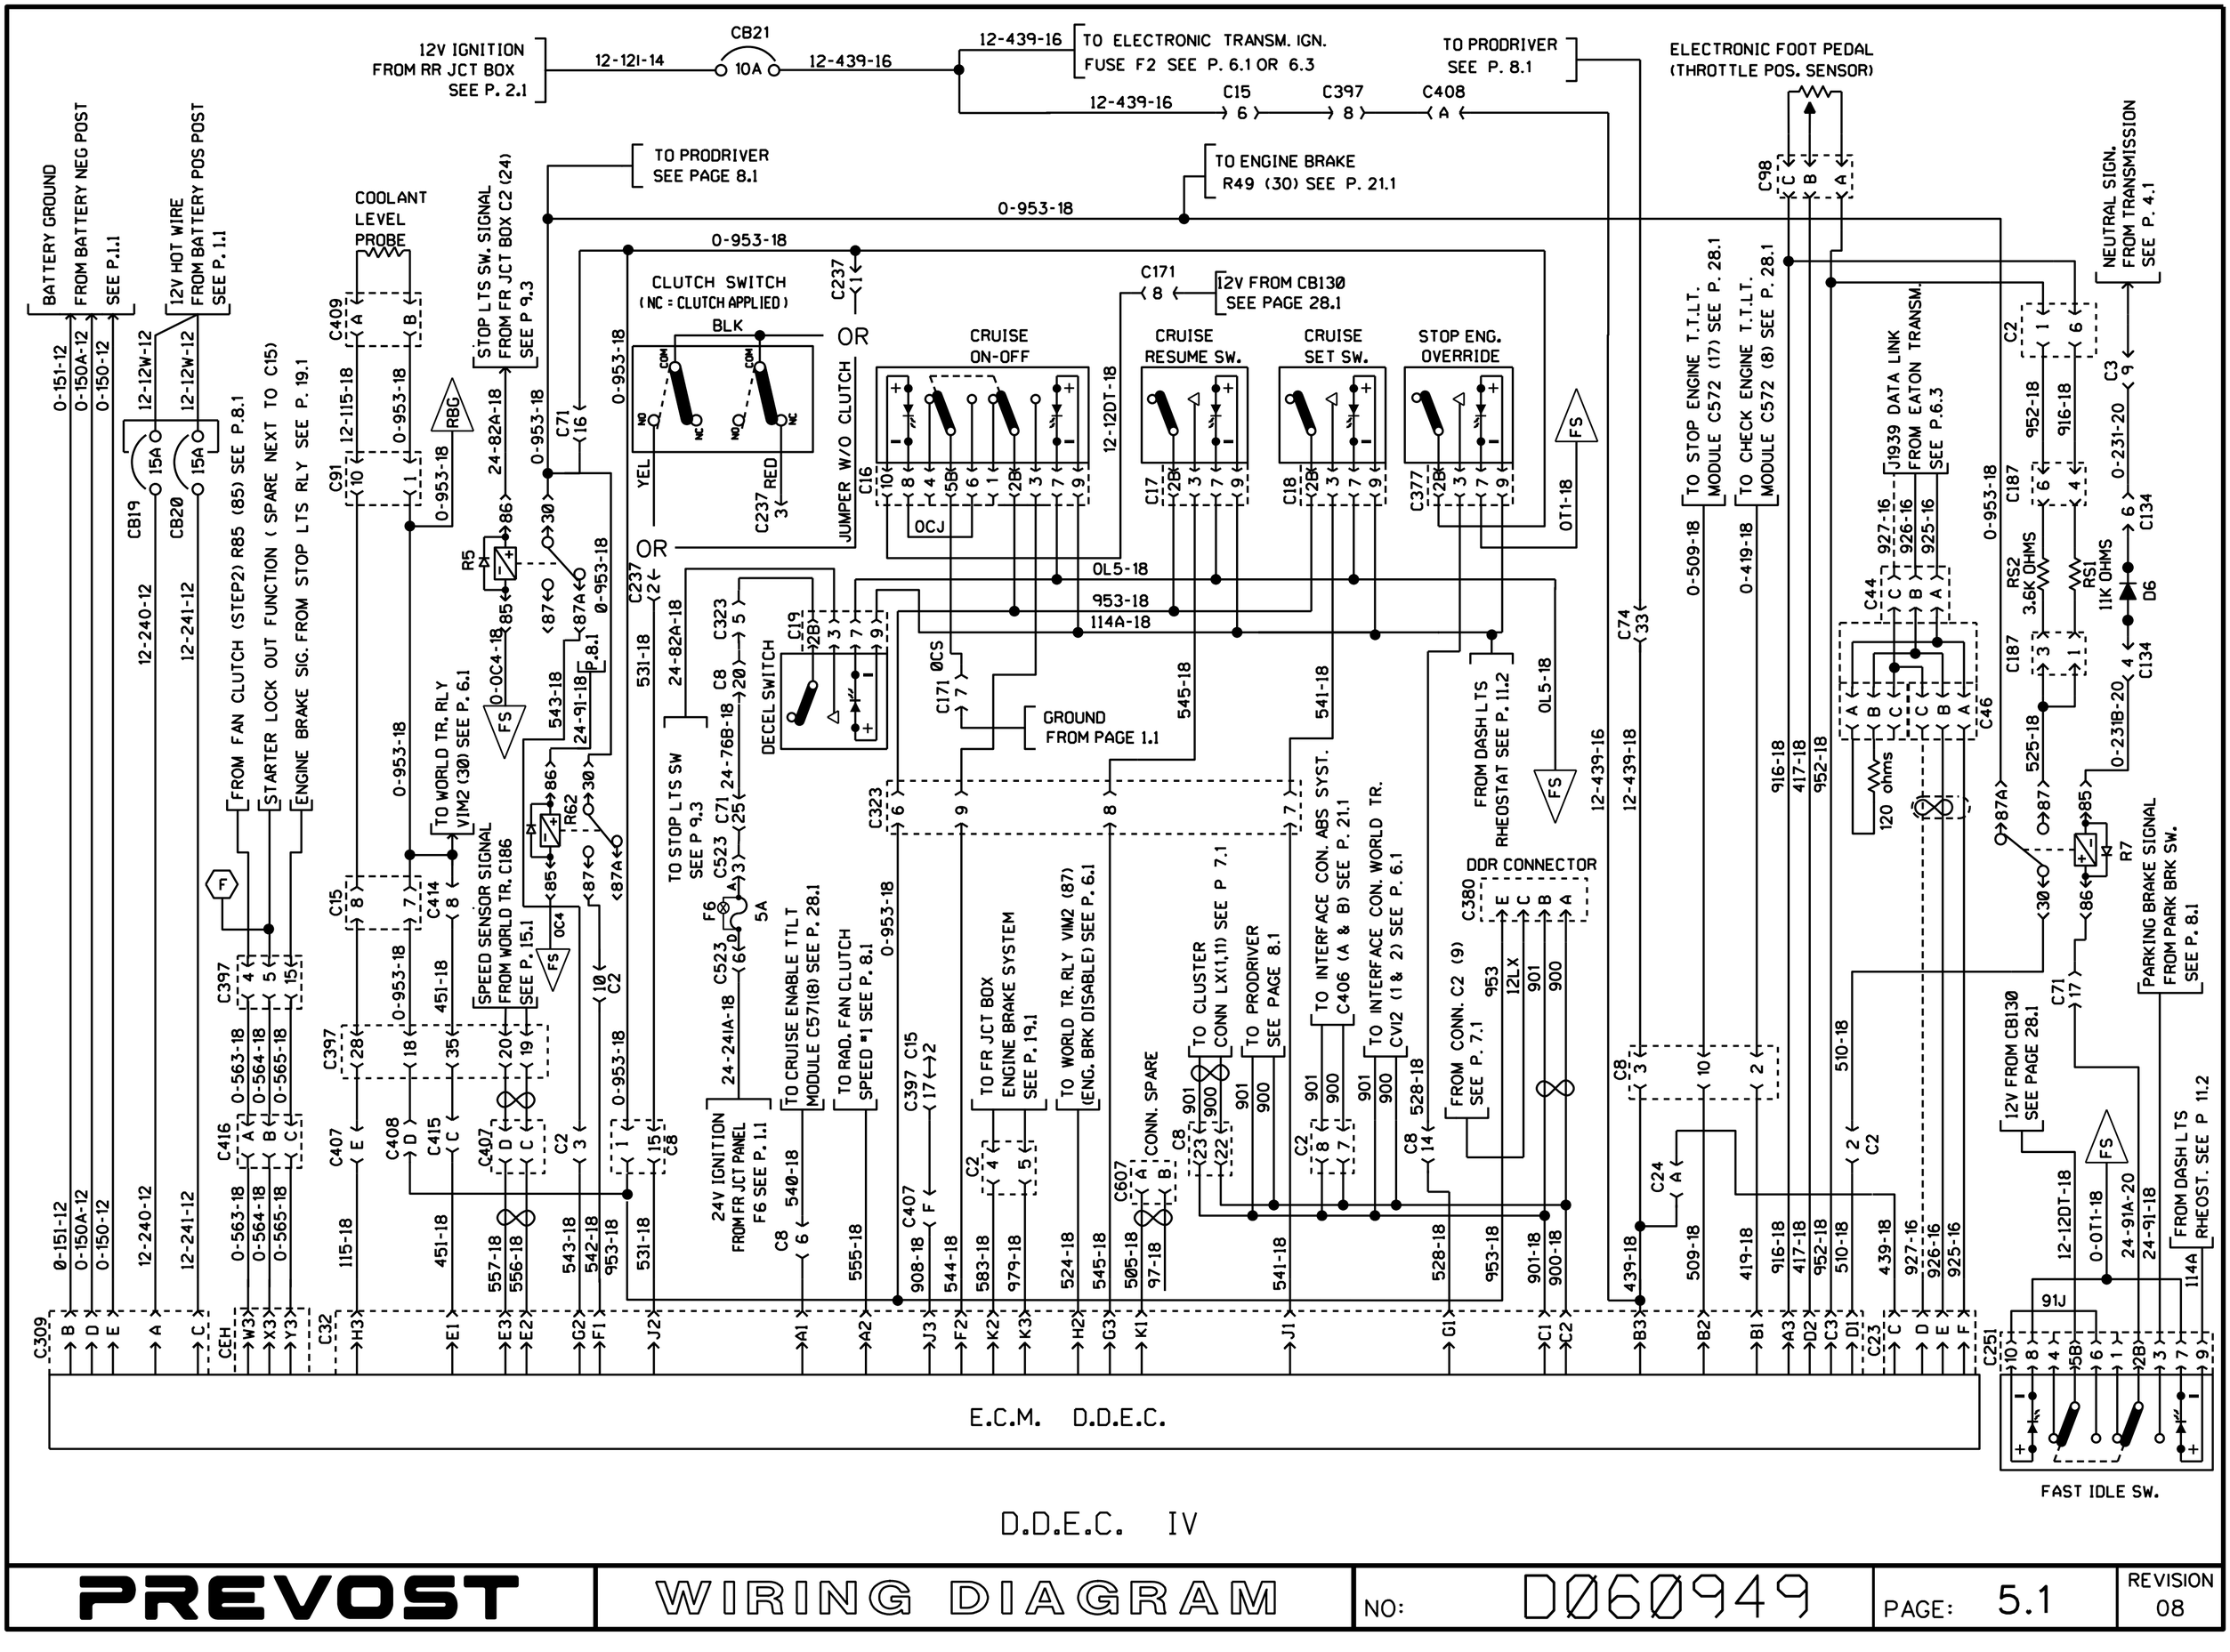

D.D.E.C. IV


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 5.1	REVISION 08

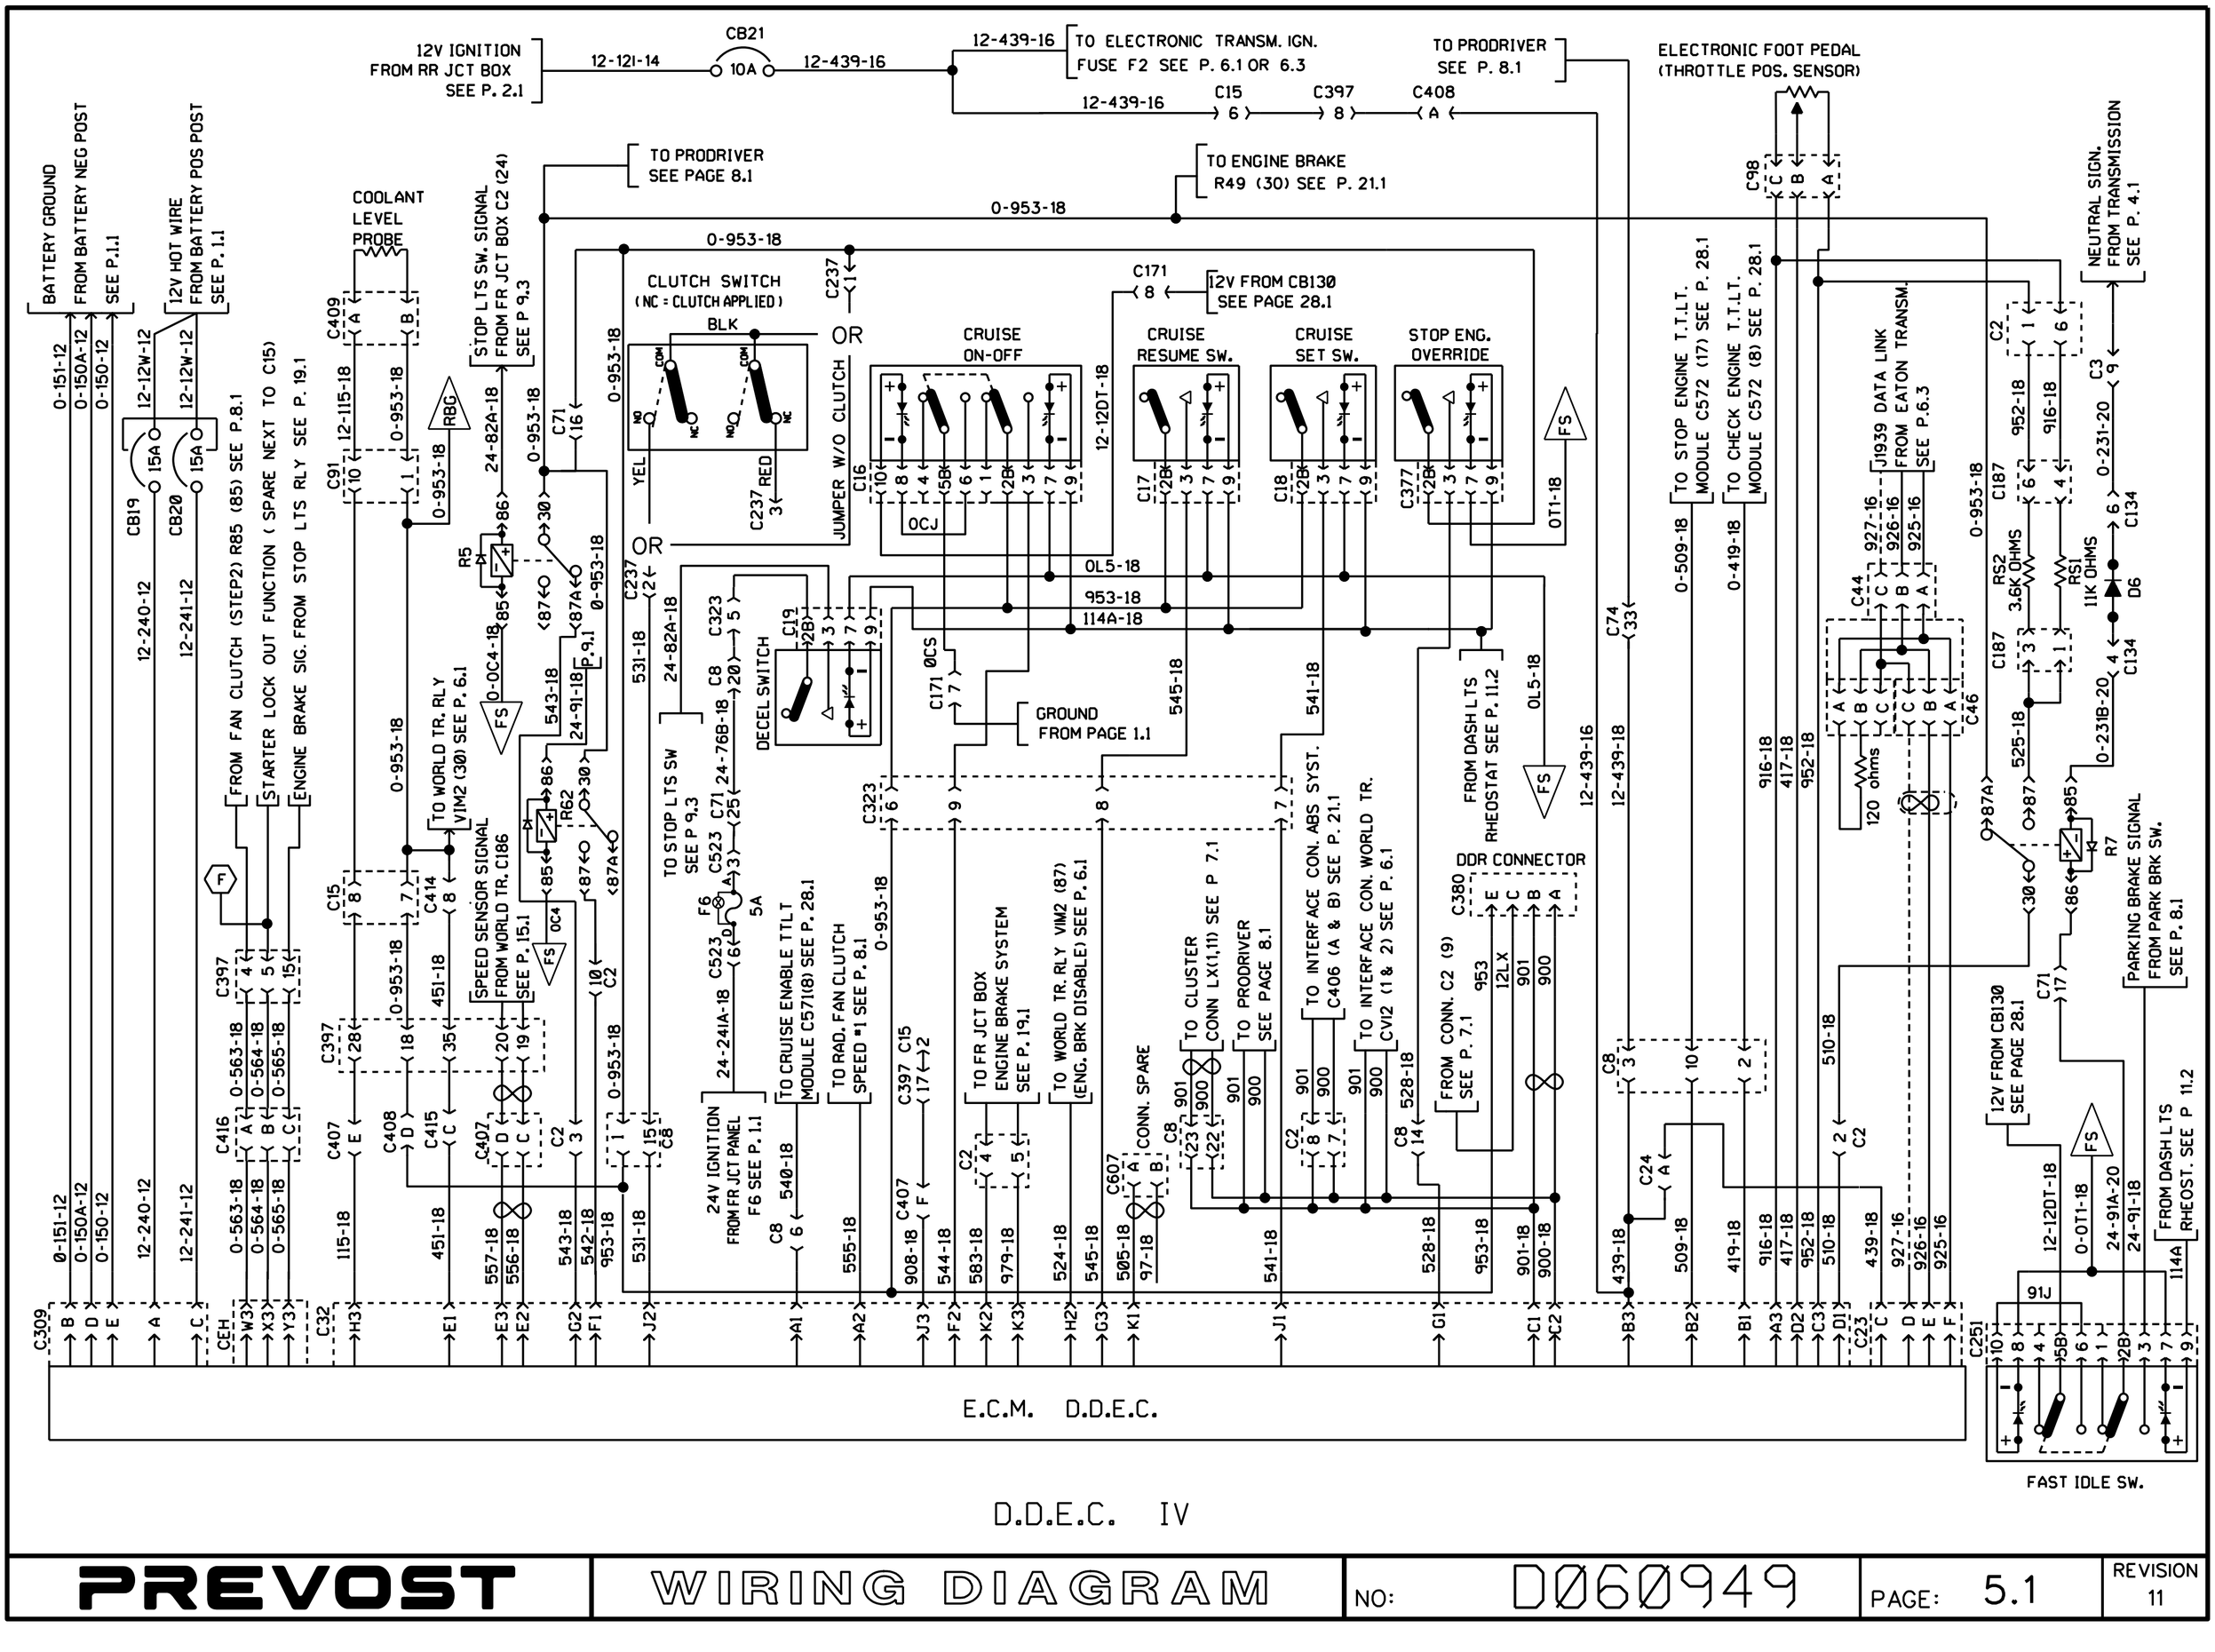
12V IGNITION FROM RR JCT BOX SEE P. 2.1
CB21
10A
TO ELECTRONIC TRANSM. IGN. FUSE F2 SEE P. 6.1 OR 6.3
TO PRODRIVER SEE P. 8.1
ELECTRONIC FOOT PEDAL (THROTTLE POS. SENSOR)
BATTERY GROUND
FROM BATTERY NEG POST
SEE P.1.1
12V HOT WIRE FROM BATTERY POS POST SEE P. 1.1
COOLANT LEVEL PROBE
STOP LTS SW. SIGNAL FROM FR JCT BOX C2 (24) SEE P 9.3
TO PRODRIVER SEE PAGE 8.1
TO ENGINE BRAKE R49 (30) SEE P. 21.1
CLUTCH SWITCH (NC = CLUTCH APPLIED)
JUMPER W/O CLUTCH
CRUISE ON-OFF
CRUISE RESUME SW.
CRUISE SET SW.
STOP ENG. OVERRIDE
12V FROM CB130 SEE PAGE 28.1
TO STOP ENGINE T.T.L.T. MODULE C572 (17) SEE P. 28.1
TO CHECK ENGINE T.T.L.T. MODULE C572 (8) SEE P. 28.1
J1939 DATA LINK FROM EATON TRANSM. SEE P.6.3
NEUTRAL SIGN. FROM TRANSMISSION SEE P. 4.1
FROM FAN CLUTCH (STEP2) R85 (85) SEE P.8.1
STARTER LOCK OUT FUNCTION (SPARE NEXT TO C15)
ENGINE BRAKE SIG. FROM STOP LTS RLY SEE P. 19.1
TO WORLD TR. RLY VIM2 (30) SEE P. 6.1
SPEED SENSOR SIGNAL FROM WORLD TR. C186
TO RAD. FAN CLUTCH SPEED *1 SEE P. 8.1
TO CRUISE ENABLE TTL T MODULE C571(8) SEE P. 28.1
24V IGNITION FROM FR JCT PANEL F6 SEE P. 1.1
DECEL SWITCH
GROUND FROM PAGE 1.1
TO FR JCT BOX ENGINE BRAKE SYSTEM SEE P. 19.1
TO WORLD TR. RLY VIM2 (87) (ENG. BRK DISABLE) SEE P. 6.1
CONN. SPARE
TO CLUSTER CONN LX(1,11) SEE P 7.1
TO PRODRIVER SEE PAGE 8.1
TO INTERFACE CON. ABS C406 (A & B) SEE P. 21.1
TO INTERFACE CON. WORLD TR. CVI2 (1 & 2) SEE P. 6.1
FROM DASH LTS RHEOSTAT SEE P. 11.2
DDR CONNECTOR
FROM CONN. C2 (9) SEE P. 7.1
TO STOP LTS SW SEE P 9.3
R5
R62
RS1 11K OHMS
RS2 3.6K OHMS
120 ohms
D6
R7
PARKING BRAKE SIGNAL FROM PARK BRK SW. SEE P. 8.1
12V FROM CB130 SEE PAGE 28.1
FROM DASH LTS RHEOST. SEE P 11.2
FAST IDLE SW.
E.C.M. D.D.E.C.
D.D.E.C. IV

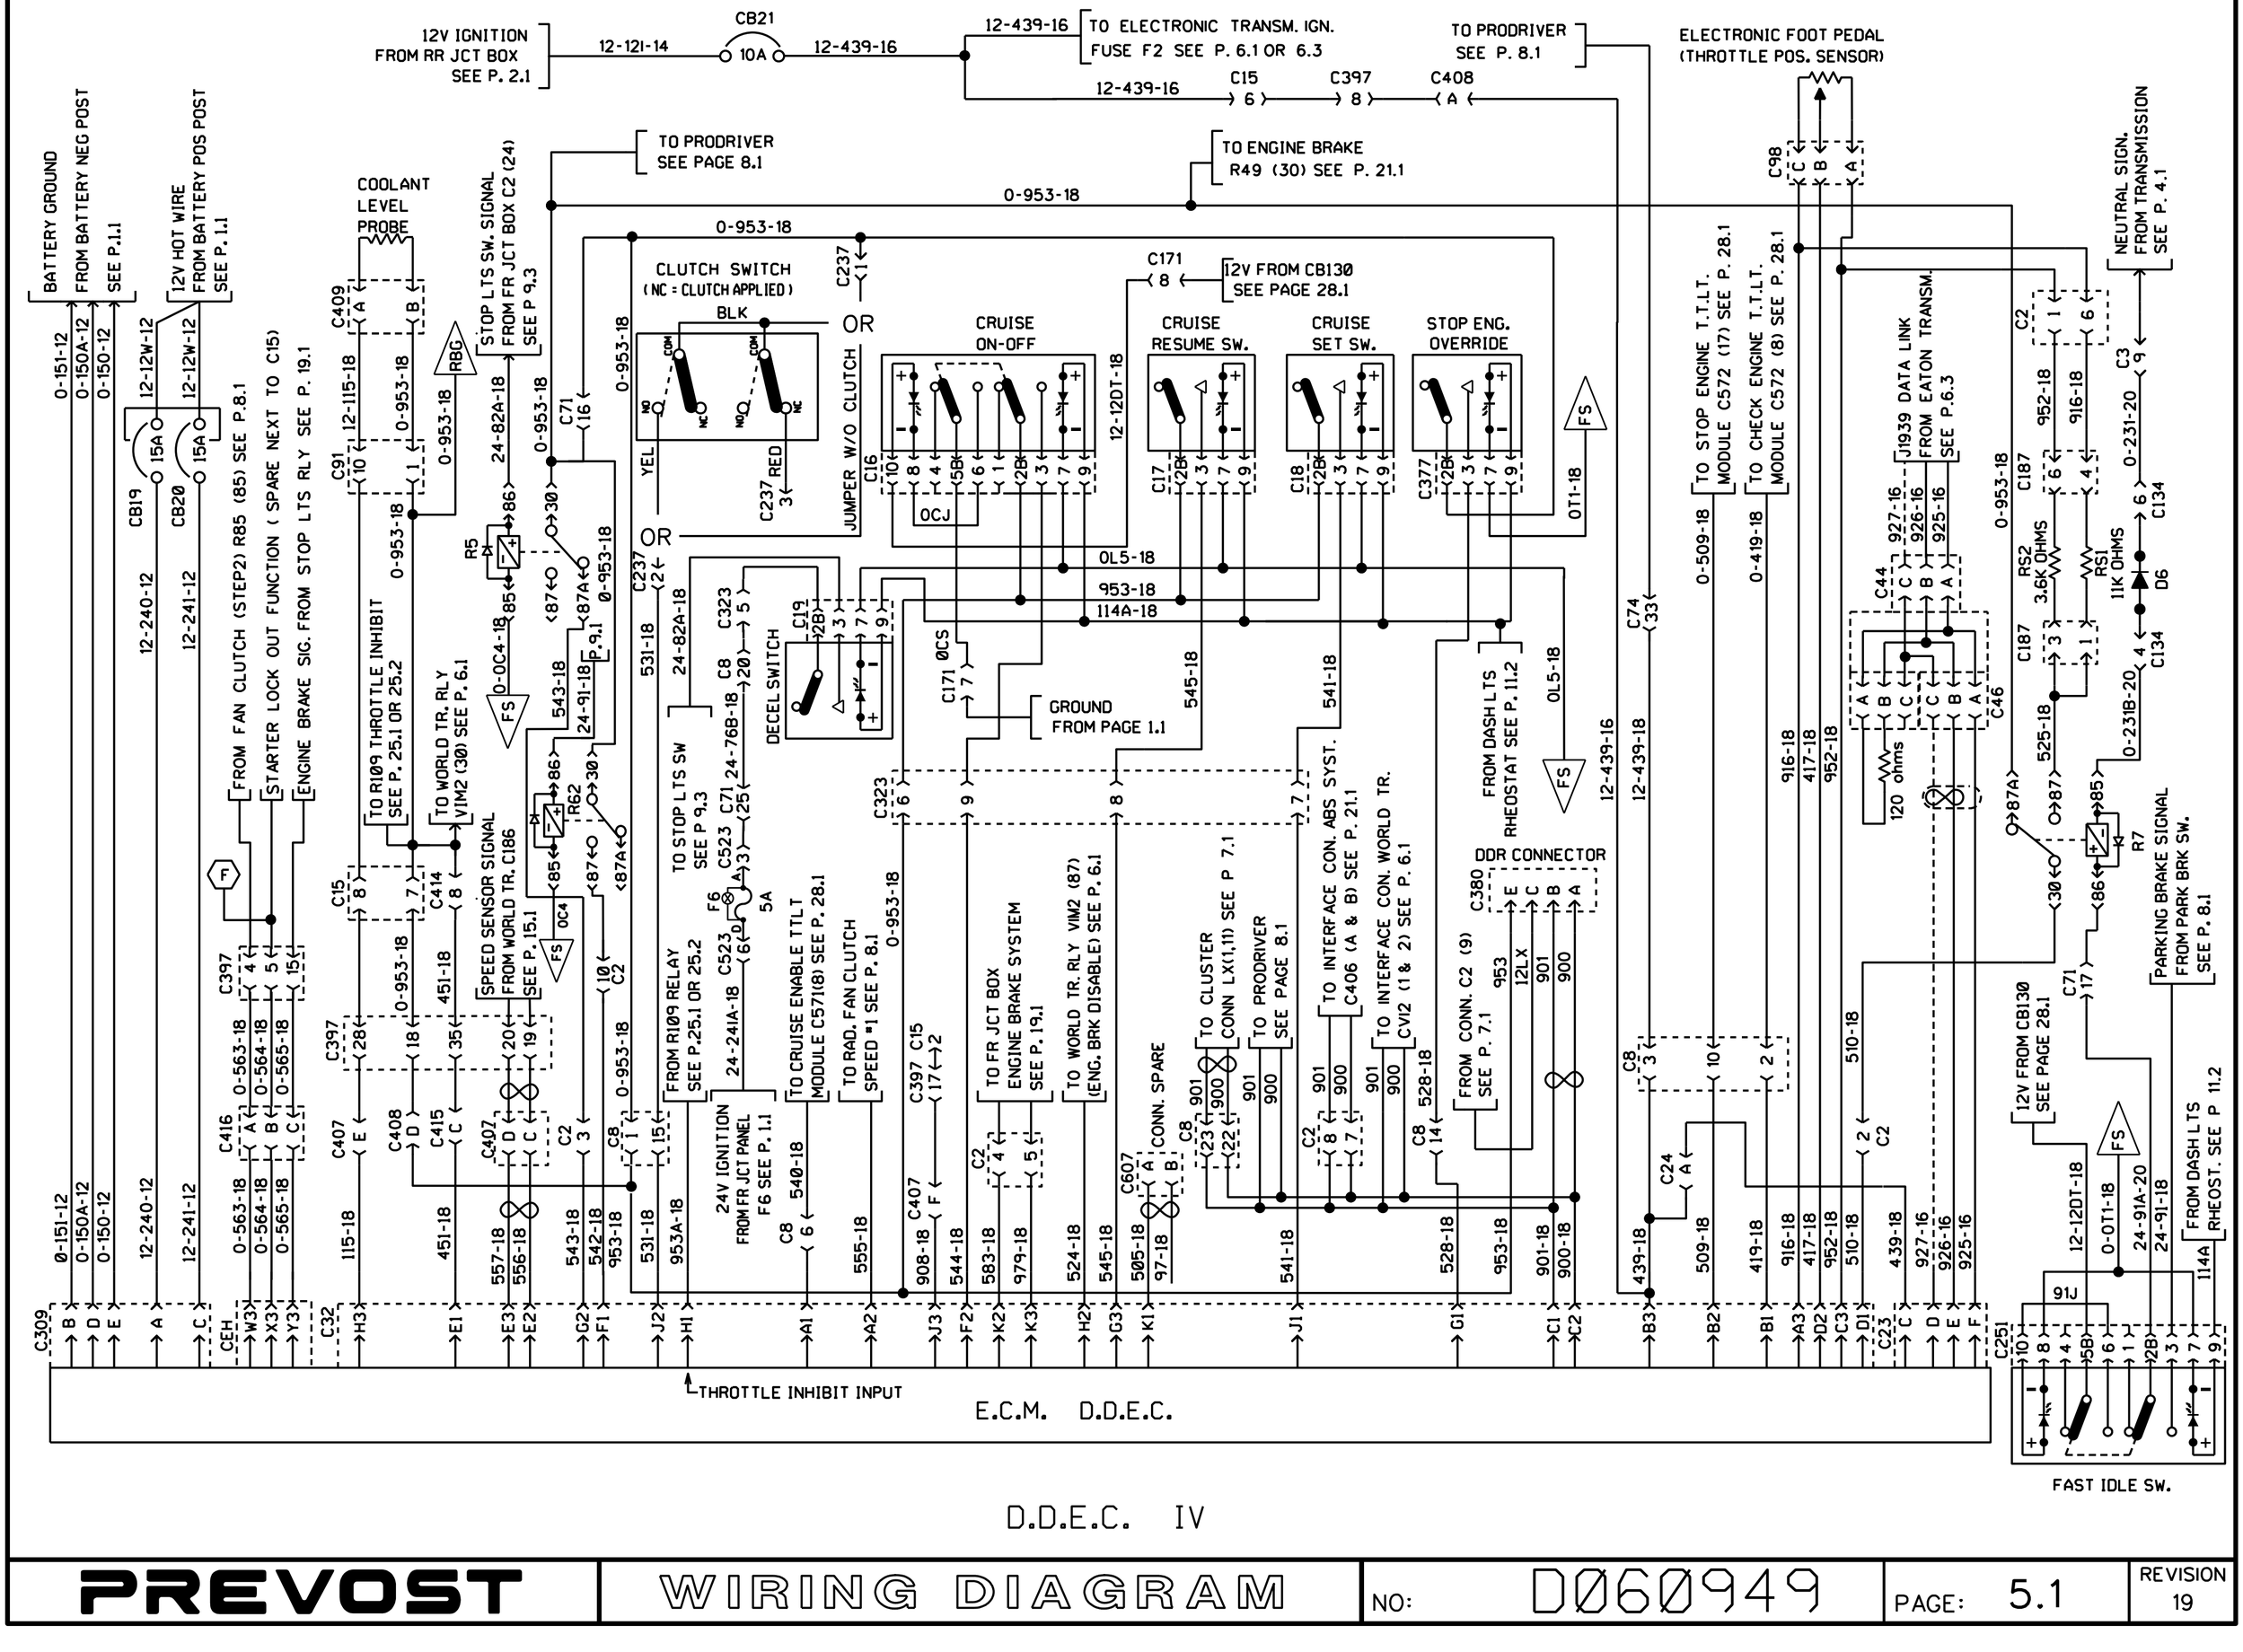


D.D.E.C. IV

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 5.1	REVISION 19

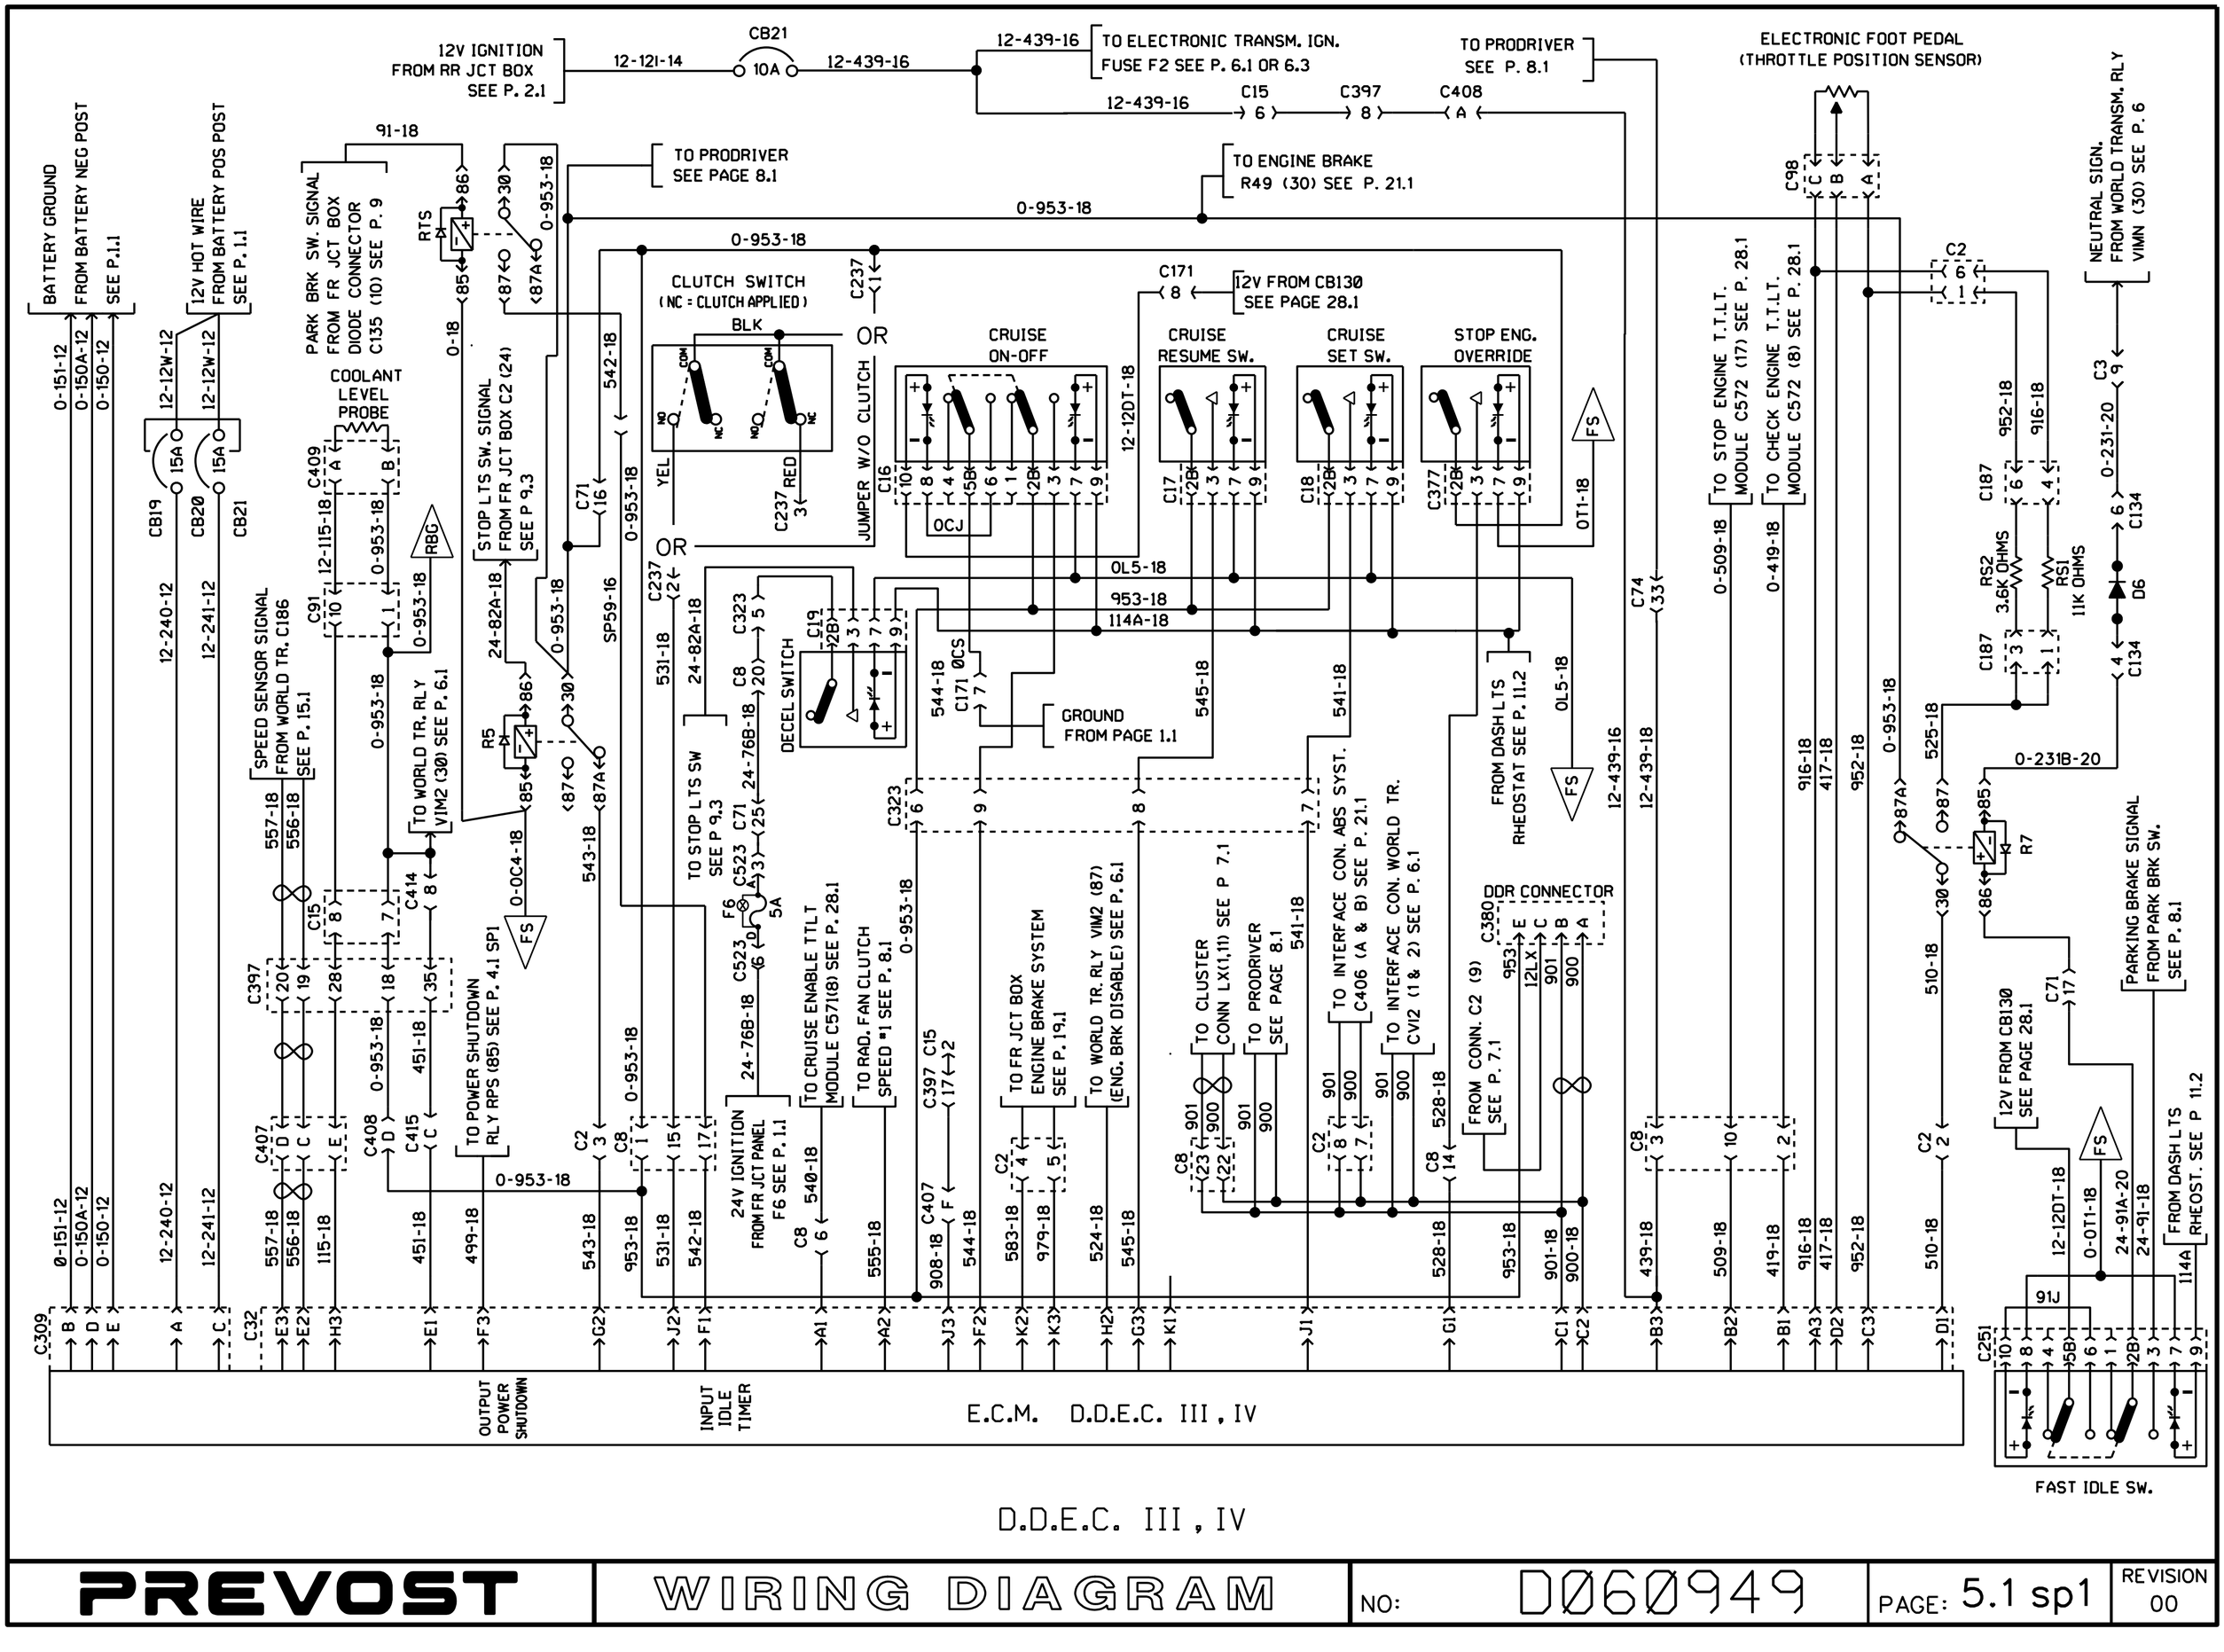


D.D.E.C. III , IV

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 5.1 sp1	REVISION 00

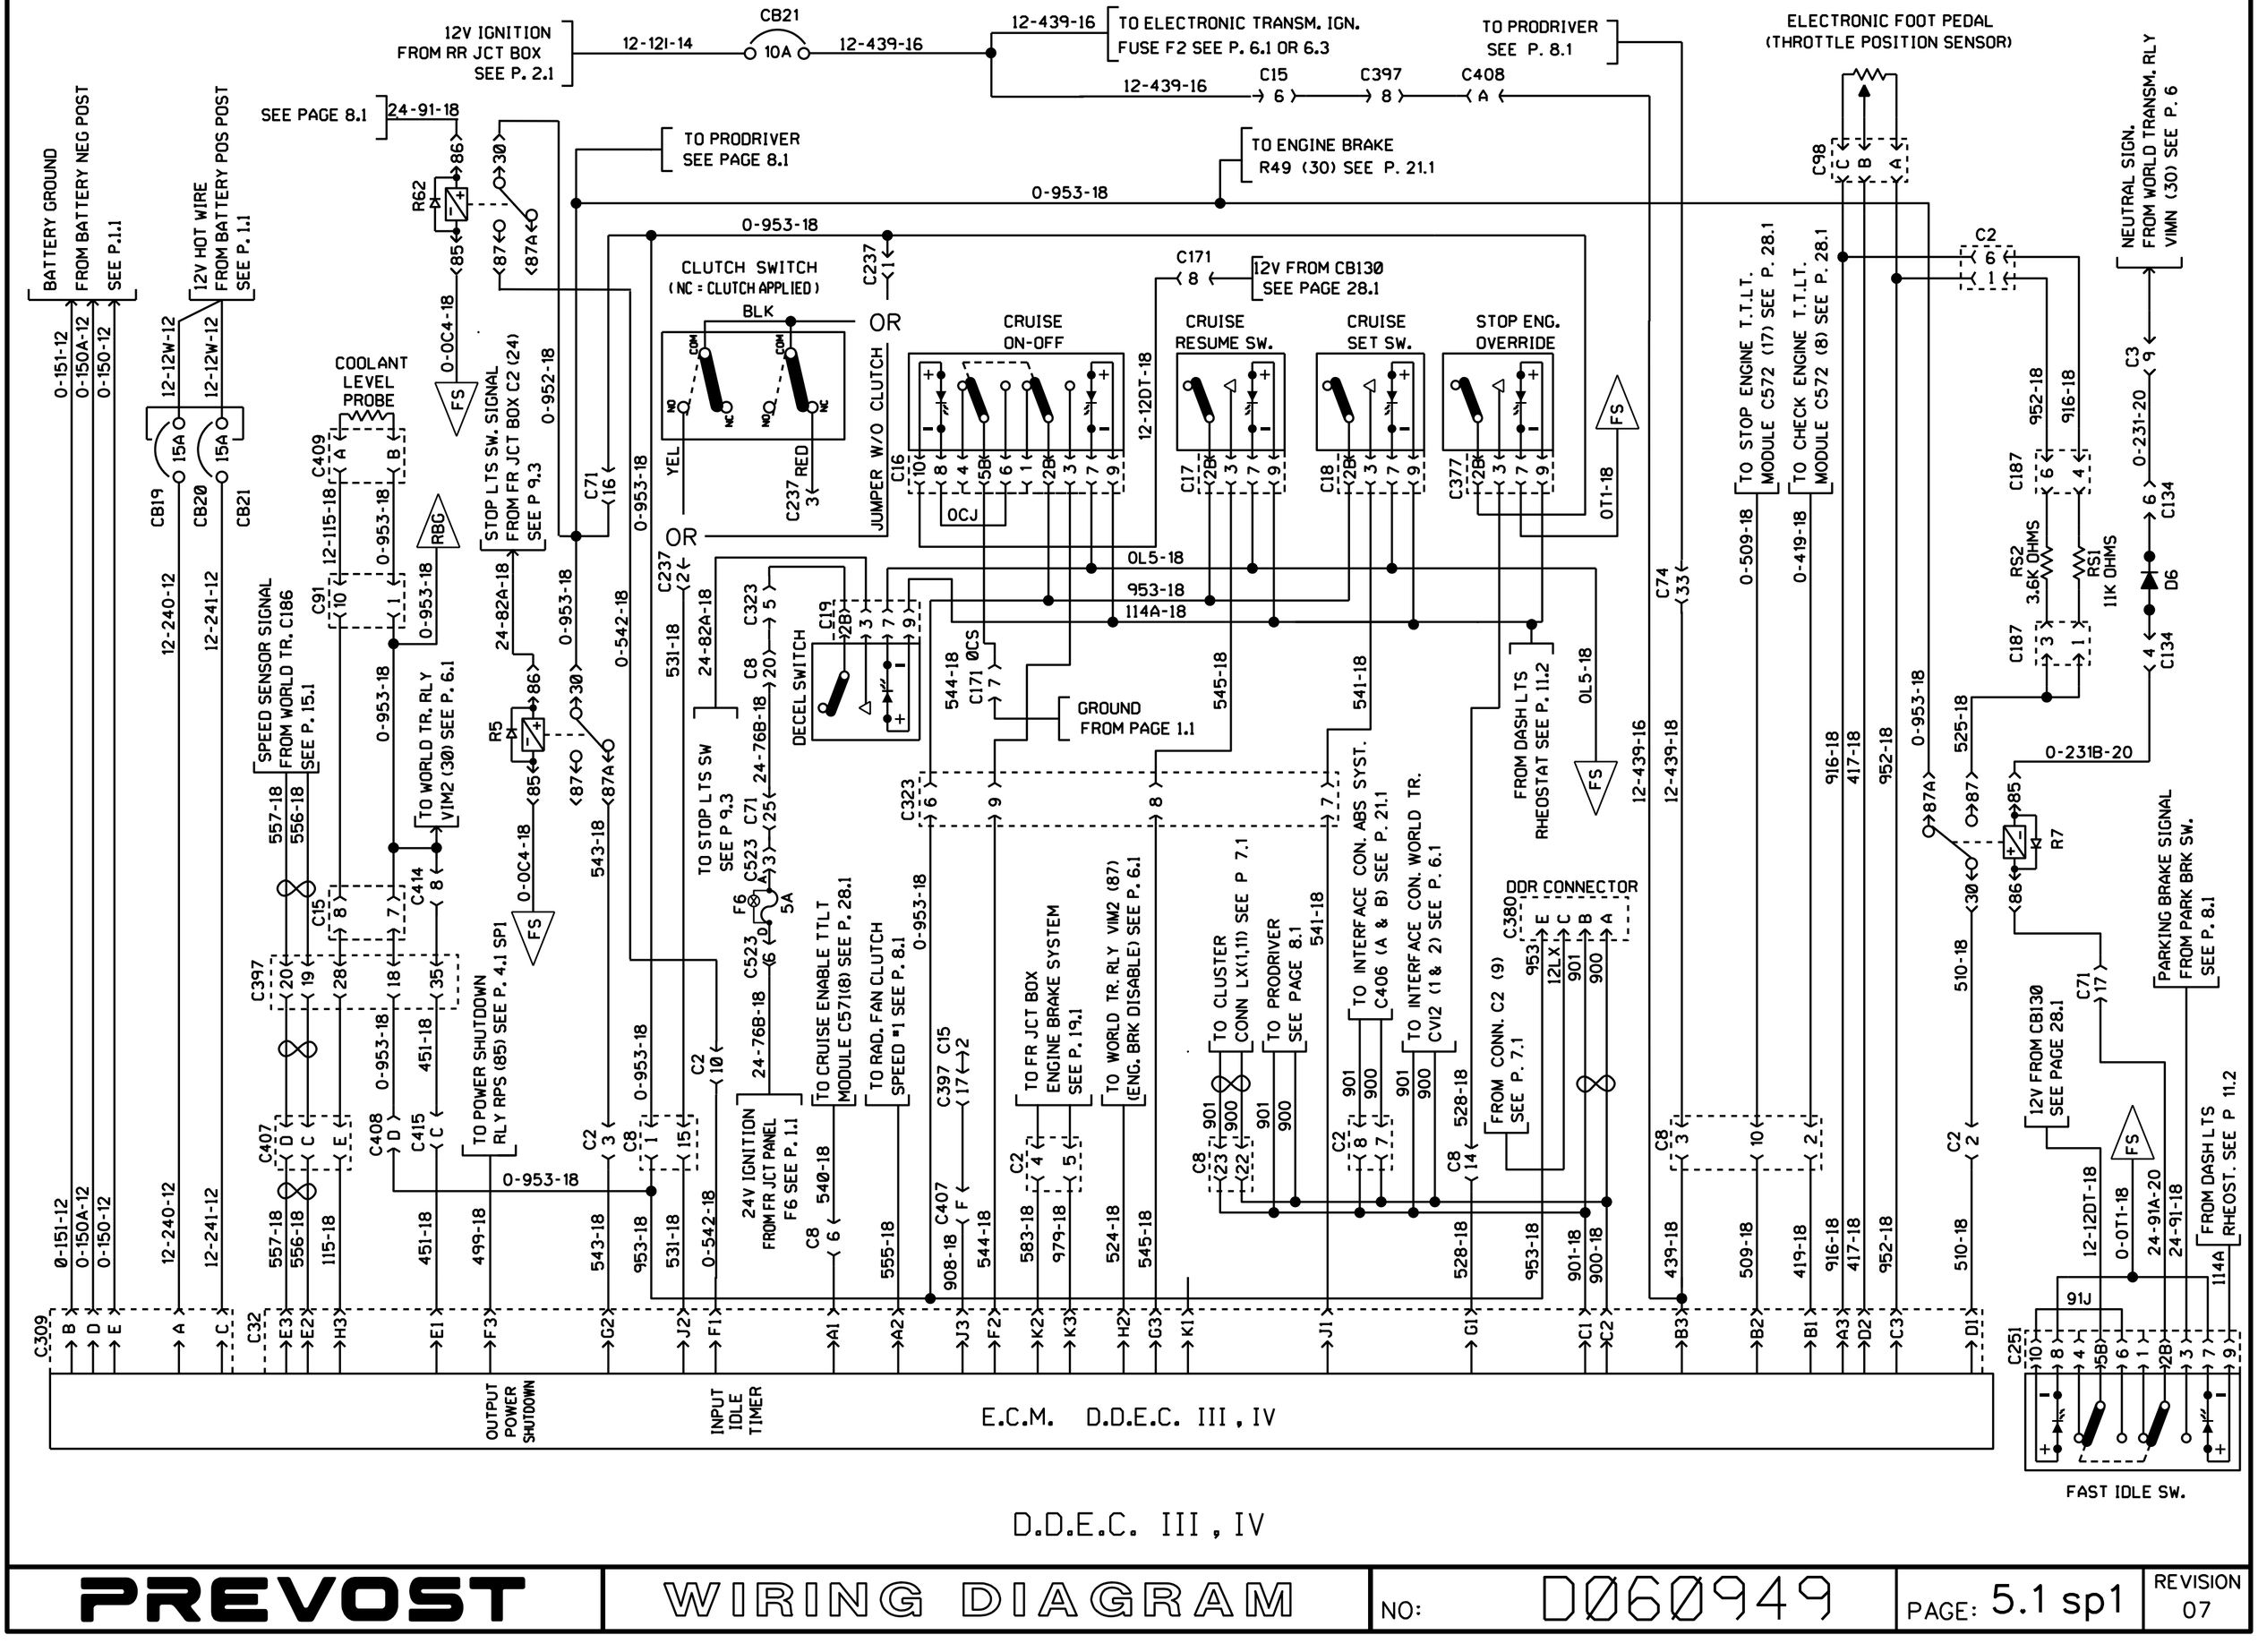

12V IGNITION FROM RR JCT BOX SEE P. 2.1
CB21
10A
TO ELECTRONIC TRANSM. IGN. FUSE F2 SEE P. 6.1 OR 6.3
TO PRODRIVER SEE P. 8.1
ELECTRONIC FOOT PEDAL (THROTTLE POSITION SENSOR)
BATTERY GROUND FROM BATTERY NEG POST SEE P.1.1
12V HOT WIRE FROM BATTERY POS POST SEE P. 1.1
SEE PAGE 8.1
TO PRODRIVER SEE PAGE 8.1
TO ENGINE BRAKE R49 (30) SEE P. 21.1
CLUTCH SWITCH (NC = CLUTCH APPLIED)
JUMPER W/O CLUTCH
CRUISE ON-OFF
CRUISE RESUME SW.
CRUISE SET SW.
STOP ENG. OVERRIDE
12V FROM CB130 SEE PAGE 28.1
COOLANT LEVEL PROBE
STOP LTS SW. SIGNAL FROM FR JCT BOX C2 (24) SEE P 9.3
SPEED SENSOR SIGNAL FROM WORLD TR. C186 SEE P. 15.1
TO WORLD TR. RLY VIM2 (30) SEE P. 6.1
DECEL SWITCH
GROUND FROM PAGE 1.1
FROM DASH LTS RHEOSTAT SEE P. 11.2
TO STOP ENGINE T.T.L.T. MODULE C572 (17) SEE P. 28.1
TO CHECK ENGINE T.T.L.T. MODULE C572 (8) SEE P. 28.1
NEUTRAL SIGN. FROM WORLD TRANSM. RLY VIMN (30) SEE P. 6
TO POWER SHUTDOWN RLY RPS (85) SEE P. 4.1 SP1
TO CRUISE ENABLE TTLT MODULE C571(8) SEE P. 28.1
TO RAD. FAN CLUTCH SPEED "1 SEE P. 8.1
24V IGNITION FROM FR JCT PANEL F6 SEE P. 1.1
TO FR JCT BOX ENGINE BRAKE SYSTEM SEE P. 19.1
TO WORLD TR. RLY VIM2 (87) (ENG. BRK DISABLE) SEE P. 6.1
TO CLUSTER CONN LX(1,1) SEE P 7.1
TO PRODRIVER SEE PAGE 8.1
TO INTERFACE CON. ABS SYST. C406 (A & B) SEE P. 21.1
TO INTERFACE CON. WORLD TR. CVI2 (1 & 2) SEE P. 6.1
FROM CONN. C2 (9) SEE P. 7.1
DDR CONNECTOR
PARKING BRAKE SIGNAL FROM PARK BRK SW. SEE P. 8.1
FROM DASH LTS RHEOST. SEE P 11.2
FAST IDLE SW.
E.C.M. D.D.E.C. III , IV
OUTPUT POWER SHUTDOWN
INPUT IDLE TIMER

D.D.E.C. III , IV

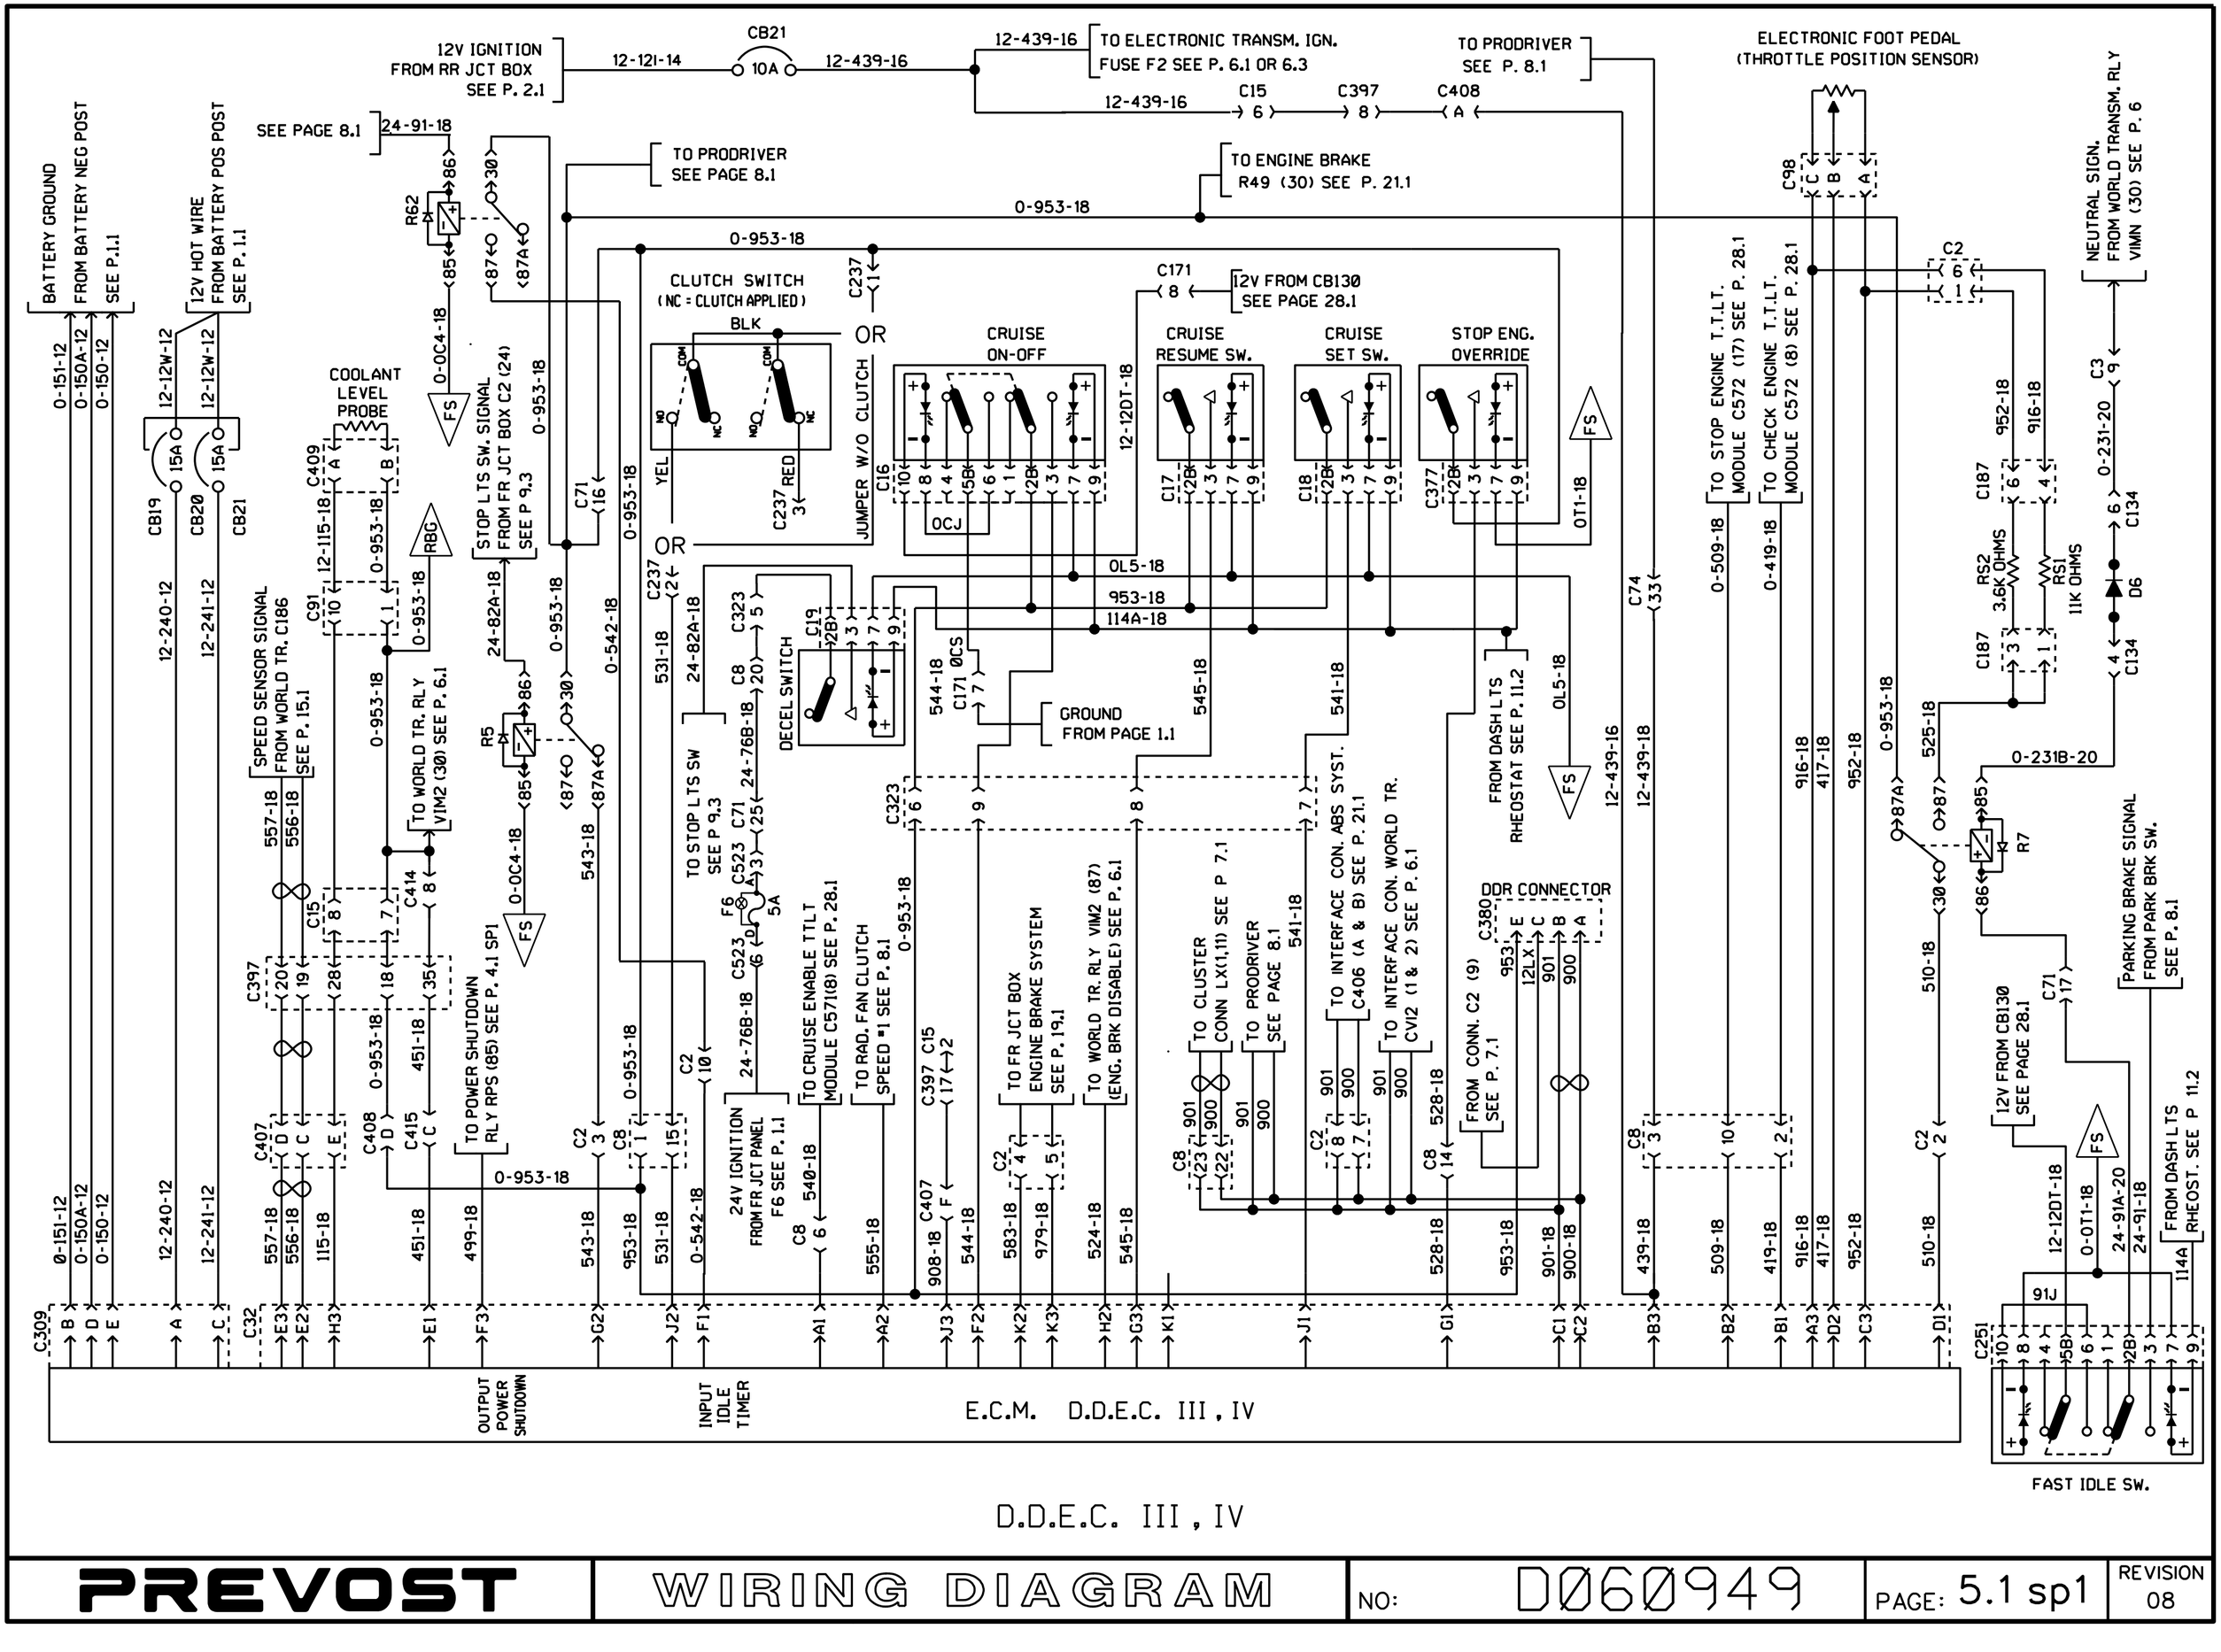


D.D.E.C. III , IV

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 5.1 sp1	REVISION 08

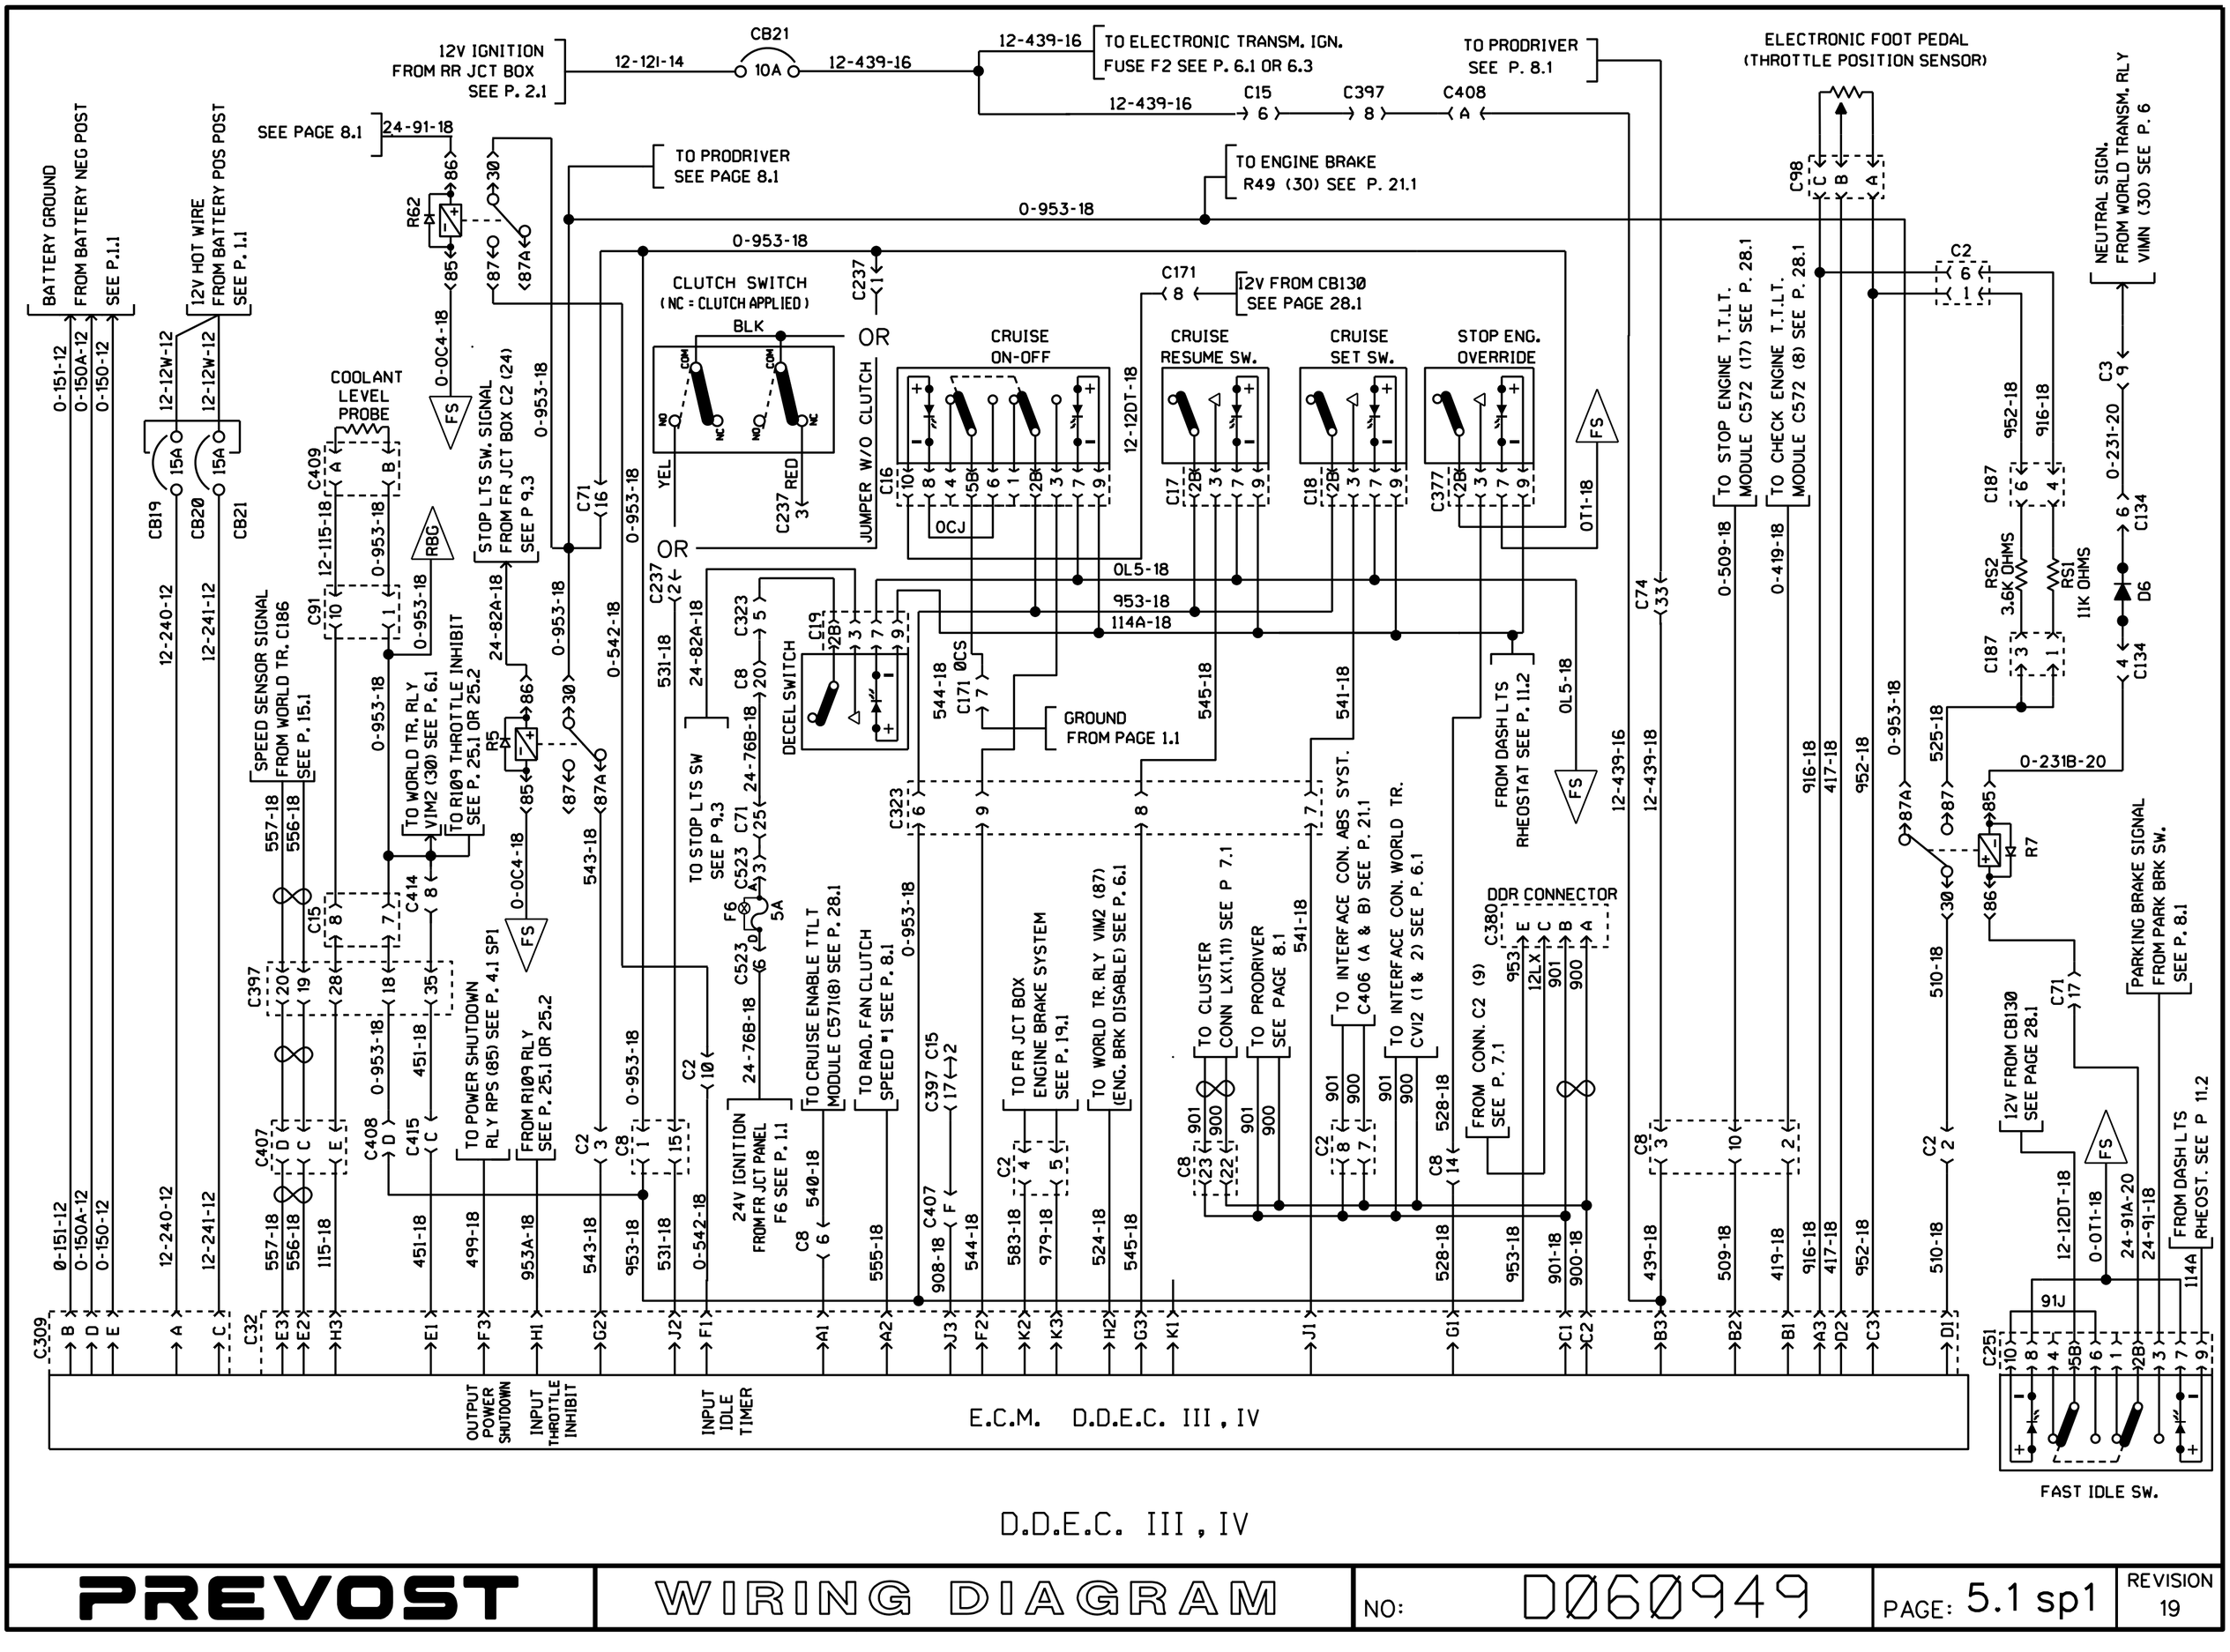



D.D.E.C. III , IV

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 5.1 sp1	REVISION 19

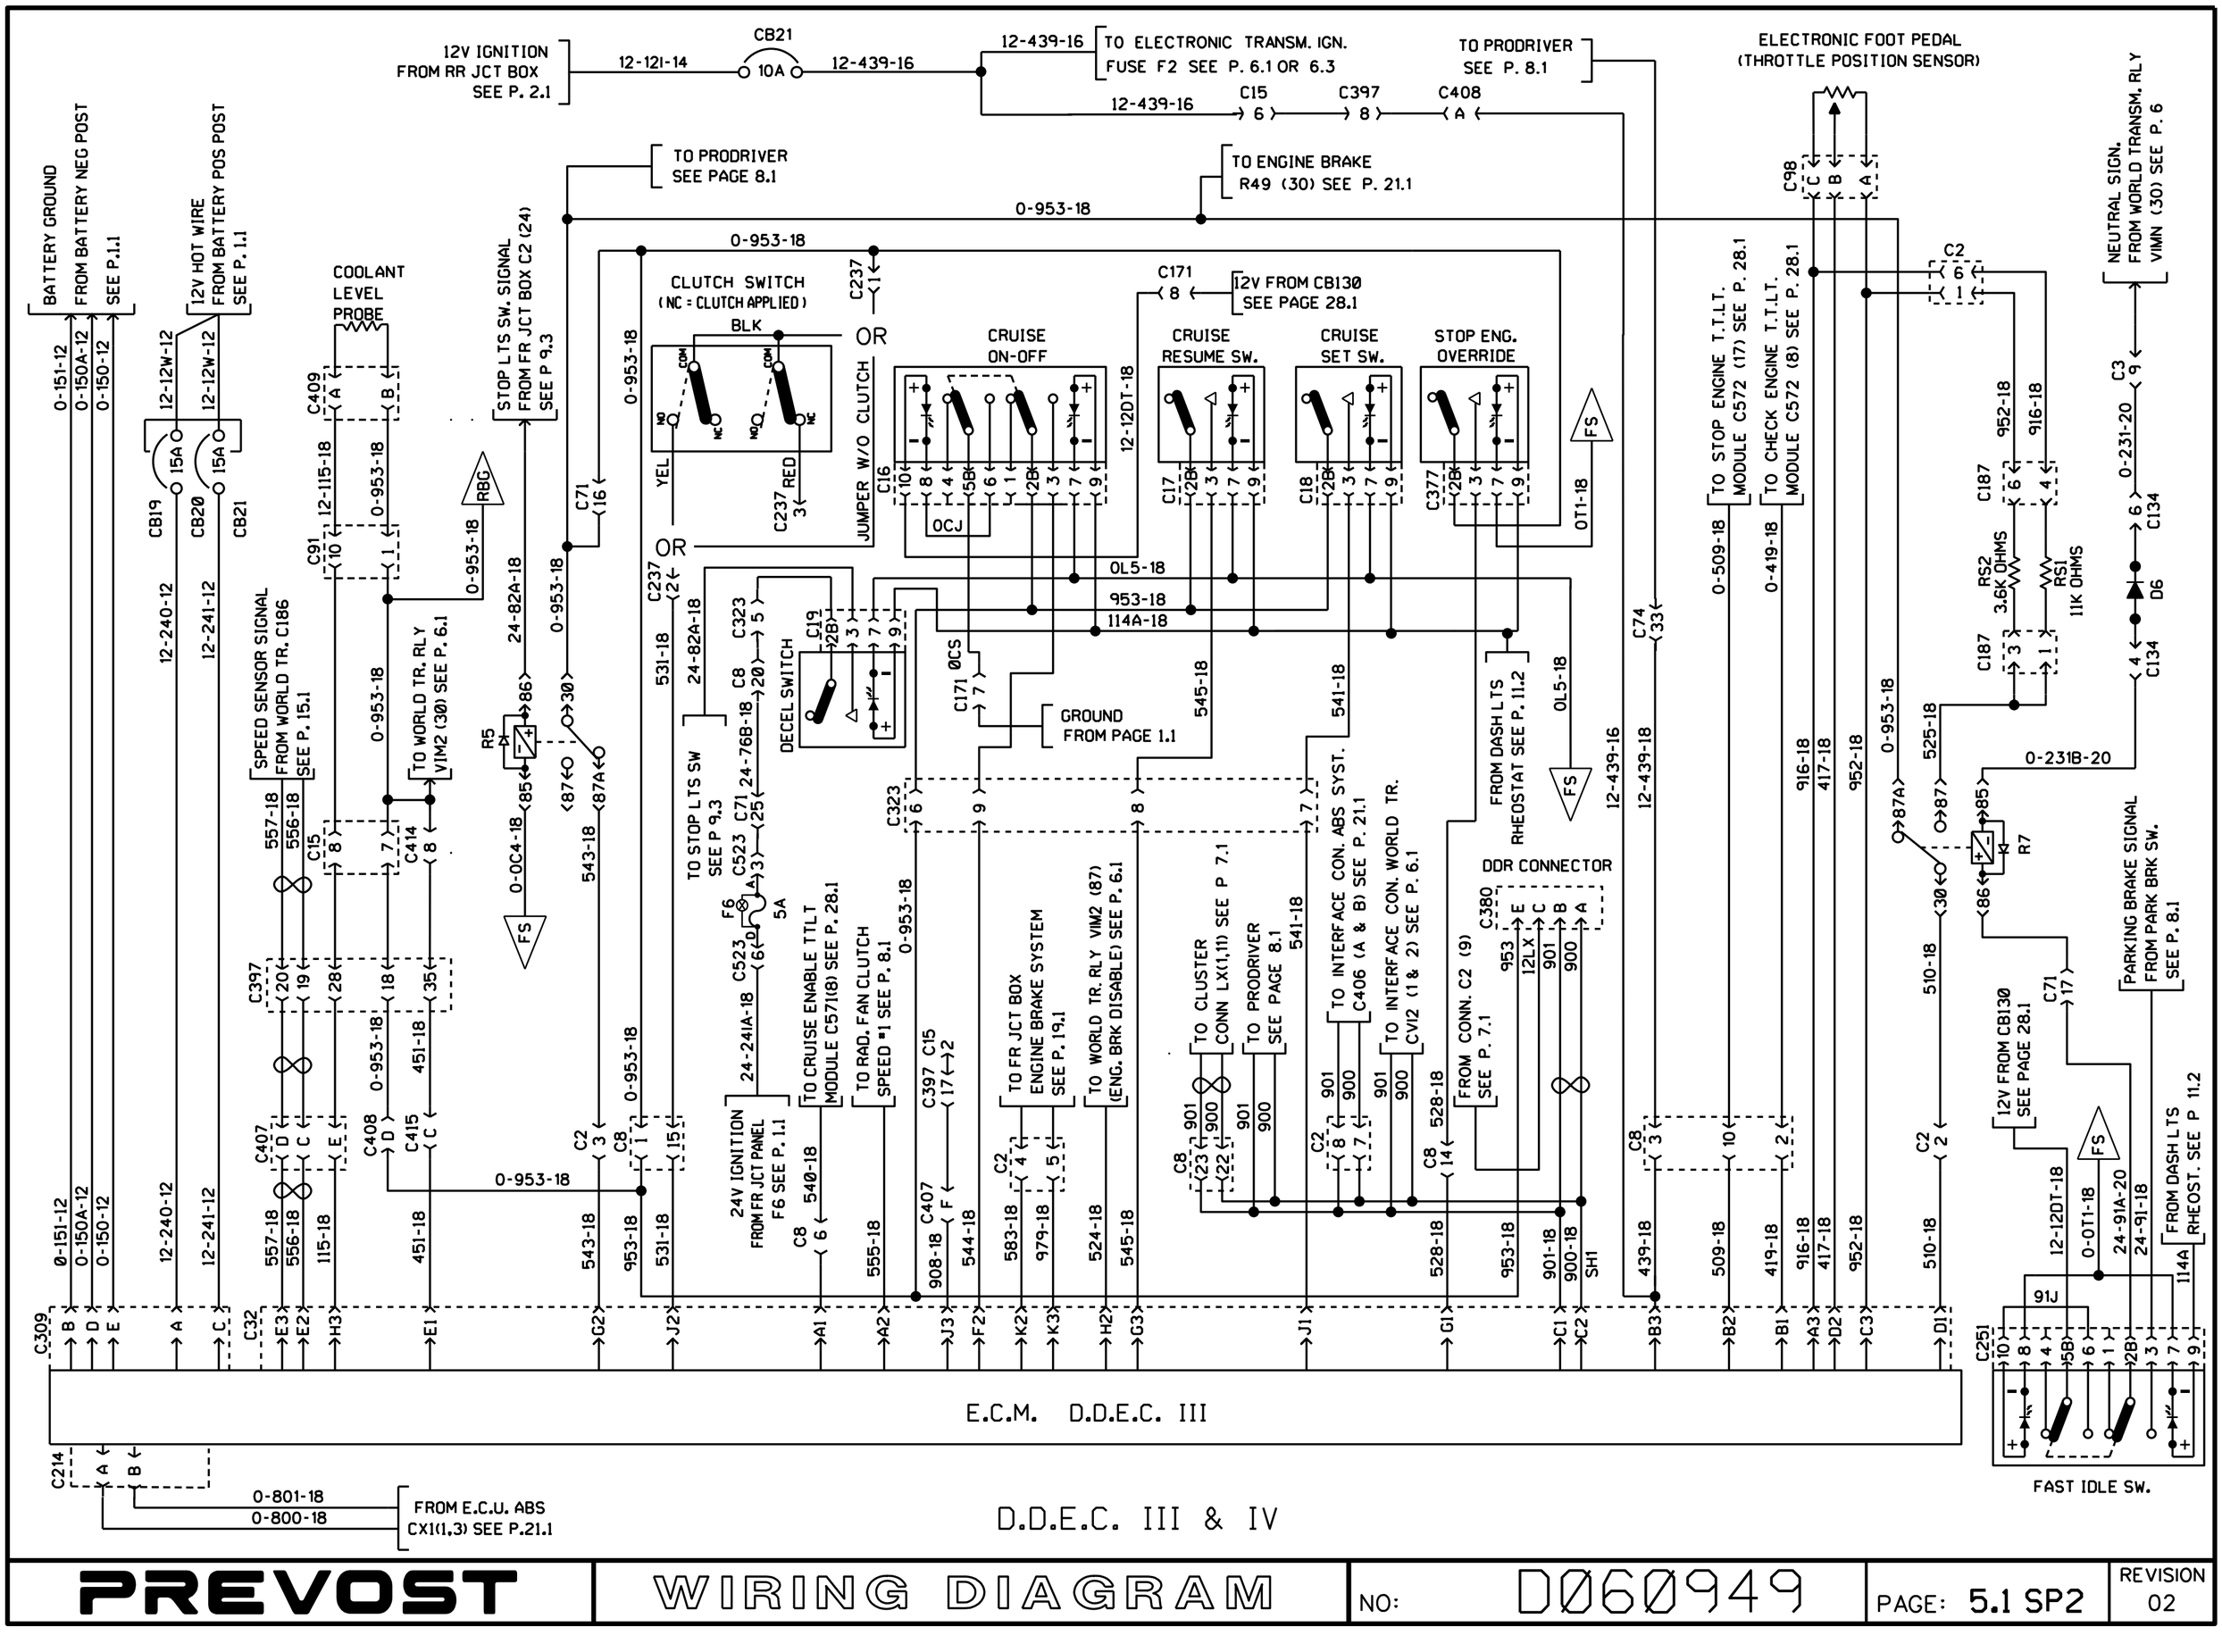


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 5.1 SP2	REVISION 02

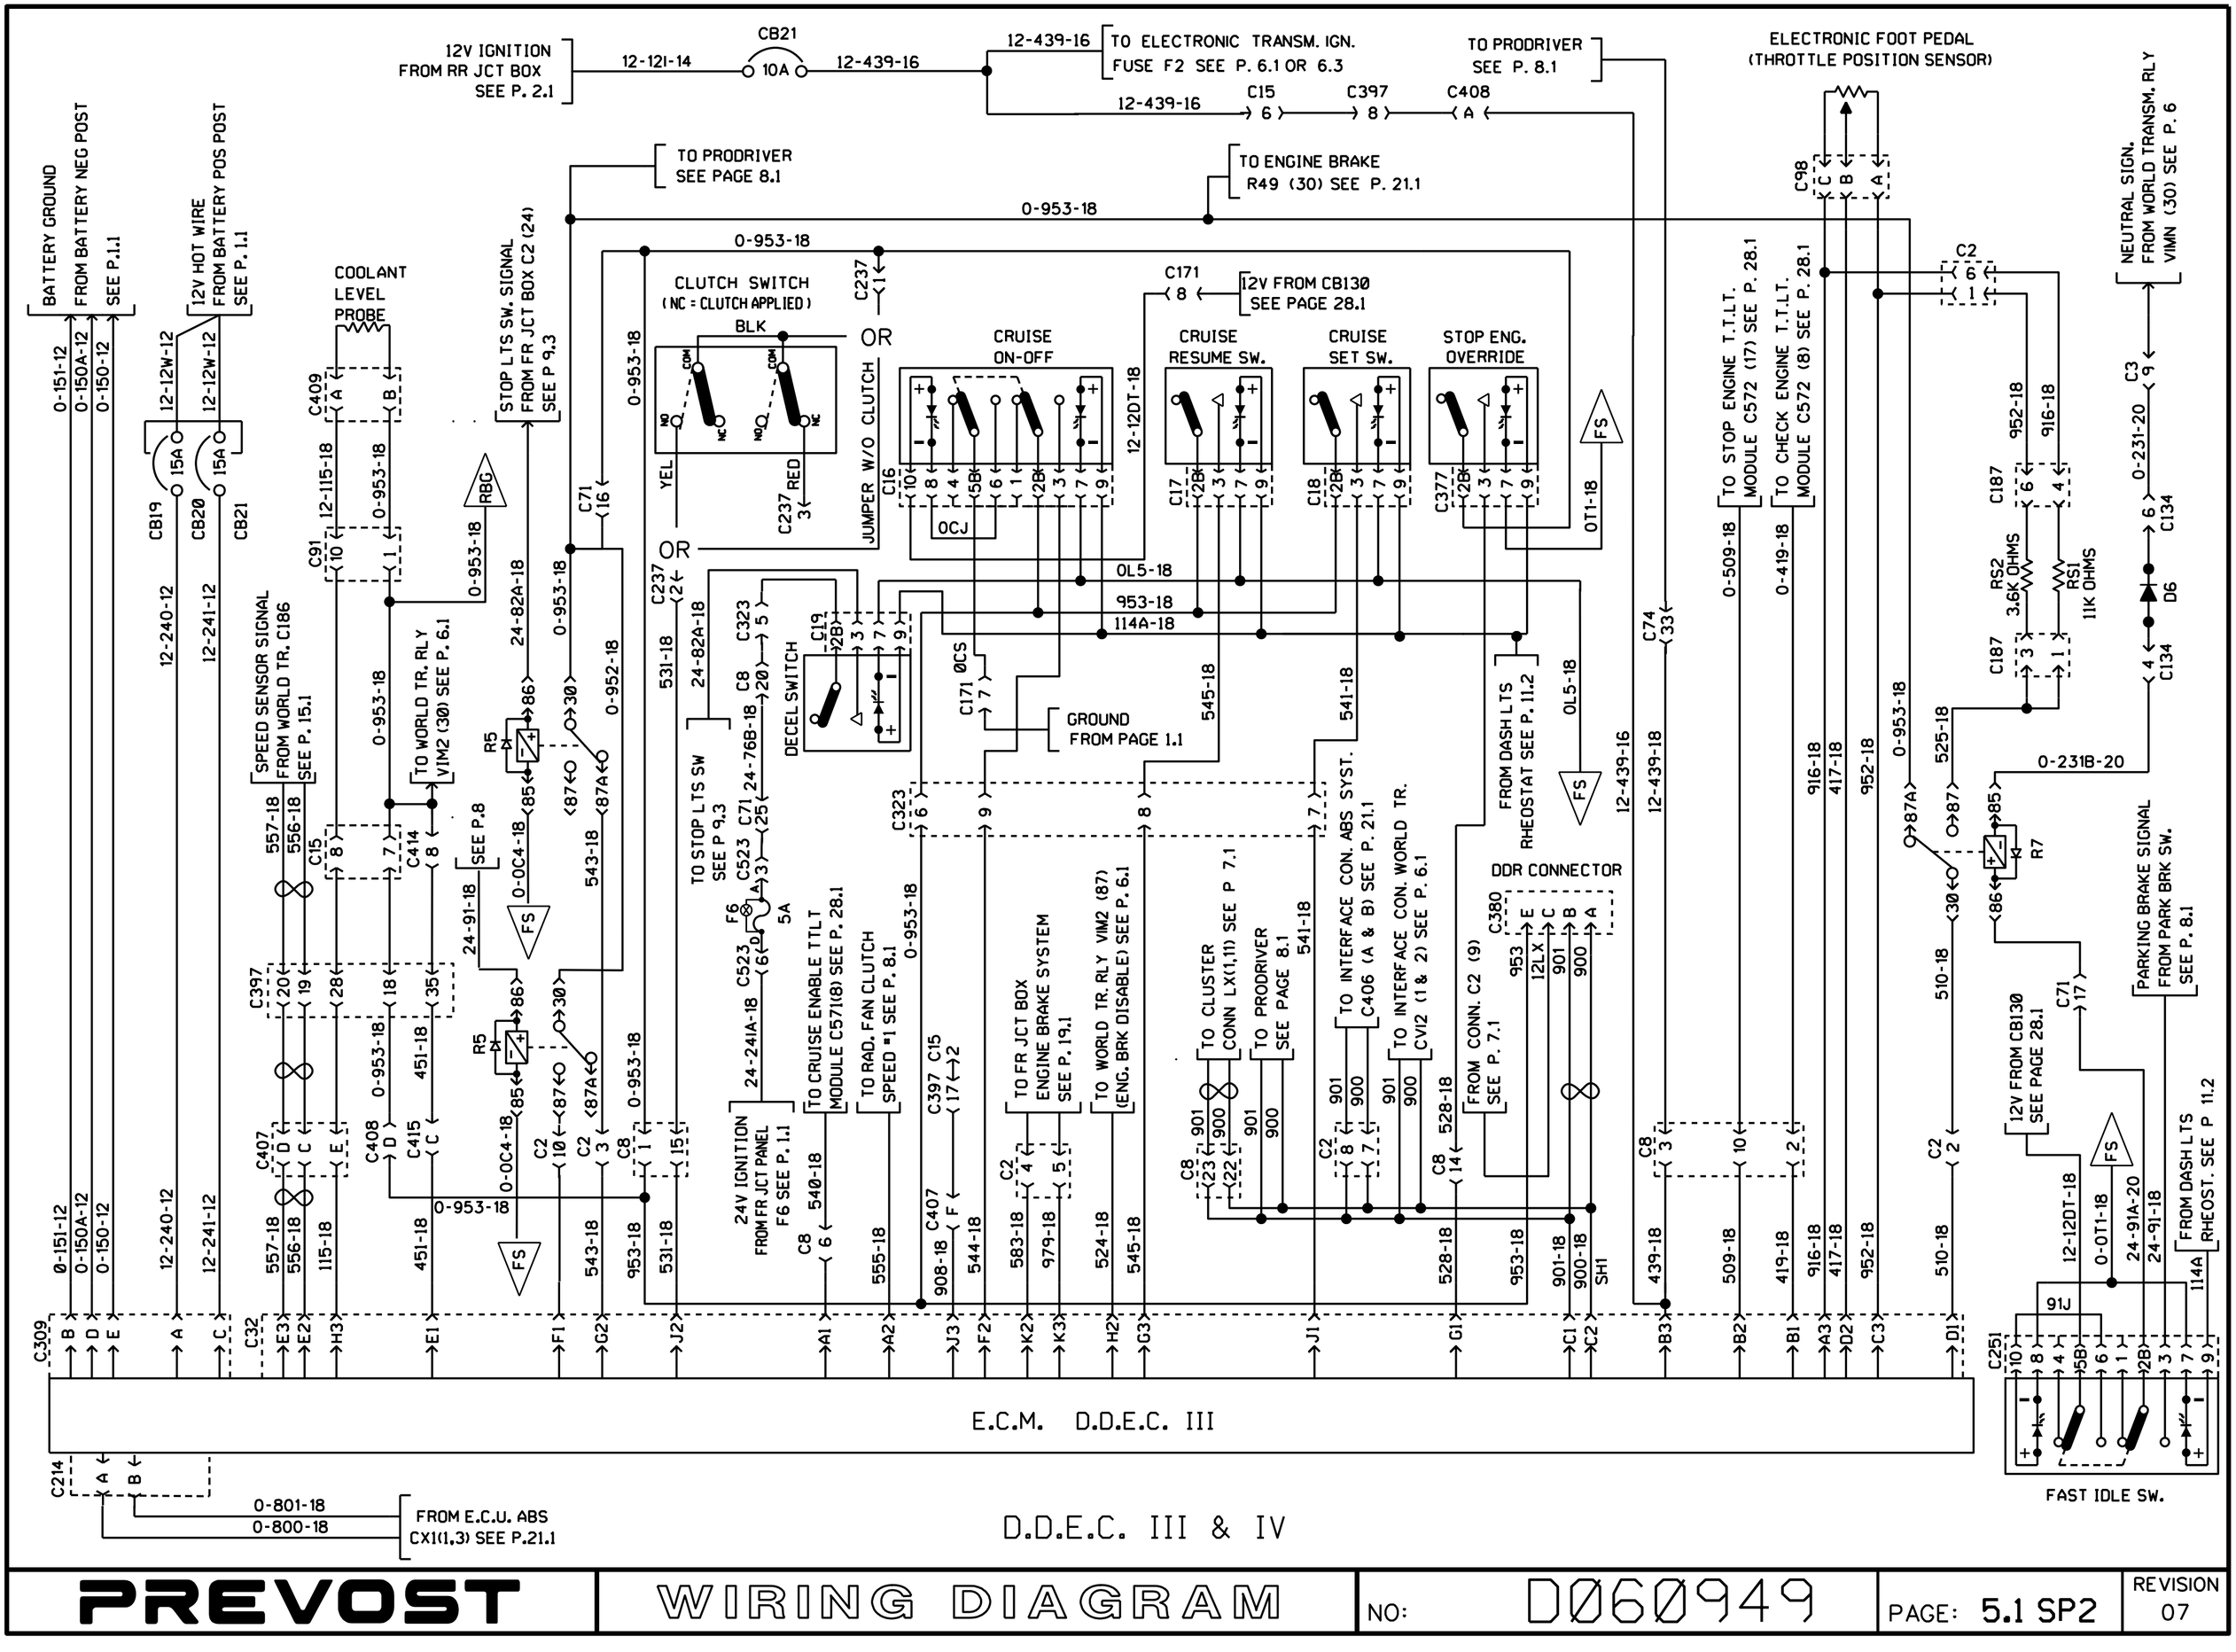

12V IGNITION FROM RR JCT BOX SEE P. 2.1
12-121-14
CB21
10A
12-439-16
TO ELECTRONIC TRANSM. IGN. FUSE F2 SEE P. 6.1 OR 6.3
TO PRODRIVER SEE P. 8.1
ELECTRONIC FOOT PEDAL (THROTTLE POSITION SENSOR)
C15
C397
C408
TO PRODRIVER SEE PAGE 8.1
TO ENGINE BRAKE R49 (30) SEE P. 21.1
0-953-18
BATTERY GROUND FROM BATTERY NEG POST SEE P.1.1
12V HOT WIRE FROM BATTERY POS POST SEE P. 1.1
0-151-12
0-150A-12
0-150-12
12-12W-12
CB19
CB20
CB21
15A
COOLANT LEVEL PROBE
C409
C91
12-115-18
CLUTCH SWITCH (NC = CLUTCH APPLIED)
BLK
YEL
RED
C237
JUMPER W/O CLUTCH
OR
CRUISE ON-OFF
CRUISE RESUME SW.
CRUISE SET SW.
STOP ENG. OVERRIDE
C171
12V FROM CB130 SEE PAGE 28.1
12-12DT-18
C16
C17
C18
C377
OC5
FS
OT1-18
0L5-18
953-18
114A-18
STOP LTS SW. SIGNAL FROM FR JCT BOX C2 (24) SEE P 9.3
RBG
C71
16
24-82A-18
R5
86
85
30
87
87A
0-952-18
SPEED SENSOR SIGNAL FROM WORLD TR. C186 SEE P. 15.1
TO WORLD TR. RLY VIM2 (30) SEE P. 6.1
SEE P.8
DECEL SWITCH
C19
C323
C8
20
5
24-76B-18
C71
25
TO STOP LTS SW SEE P 9.3
0C5
GROUND FROM PAGE 1.1
545-18
541-18
ABS SYST. P. 21.1
WORLD TR.
FROM DASH LTS RHEOSTAT SEE P. 11.2
0L5-18
C74
33
12-439-16
12-439-18
TO STOP ENGINE T.T.L.T. MODULE C572 (17) SEE P. 28.1
TO CHECK ENGINE T.T.L.T. MODULE C572 (8) SEE P. 28.1
0-509-18
0-419-18
C98
C
B
A
C2
6
1
916-18
417-18
952-18
0-953-18
525-18
0-231B-20
C187
RS2
3.6K OHMS
RS1
11K OHMS
952-18
916-18
NEUTRAL SIGN. FROM WORLD TRANSM. RLY VIMN (30) SEE P. 6
C3
9
0-231-20
D6
C134
557-18
556-18
115-18
451-18
543-18
953-18
531-18
C397
C15
C414
C407
C408
C415
C2
C8
0-953-18
0-0C4-18
24-91-18
24-241A-18
5A
F6
C523
24V IGNITION FROM FR JCT PANEL F6 SEE P. 1.1
TO CRUISE ENABLE TTLT MODULE C571(8) SEE P. 28.1
TO RAD. FAN CLUTCH SPEED "1 SEE P. 8.1
540-18
555-18
908-18
544-18
583-18
979-18
524-18
545-18
C407
C15
TO FR JCT BOX ENGINE BRAKE SYSTEM SEE P. 19.1
TO WORLD TR. RLY VIM2 (87) (ENG. BRK DISABLE) SEE P. 6.1
TO CLUSTER CONN LX(1,11) SEE P 7.1
TO PRODRIVER SEE PAGE 8.1
TO INTERFACE CON. ABS SYST. C406 (A & B) SEE P. 21.1
TO INTERFACE CON. WORLD TR. CVI2 (1 & 2) SEE P. 6.1
FROM CONN. C2 (9) SEE P. 7.1
528-18
DDR CONNECTOR
C380
953
12LX
901
900
E
C
B
A
439-18
509-18
419-18
916-18
417-18
952-18
510-18
C8
C2
3
10
2
2
C71
17
12V FROM CB130 SEE PAGE 28.1
12-12DT-18
0-0T1-18
24-91A-20
24-91-18
PARKING BRAKE SIGNAL FROM PARK BRK SW. SEE P. 8.1
FROM DASH LTS RHEOST. SEE P 11.2
114A
R7
91J
C251
FAST IDLE SW.
C309
C32
E.C.M. D.D.E.C. III
C214
0-801-18
0-800-18
FROM E.C.U. ABS CX1(1,3) SEE P.21.1
D.D.E.C. III & IV

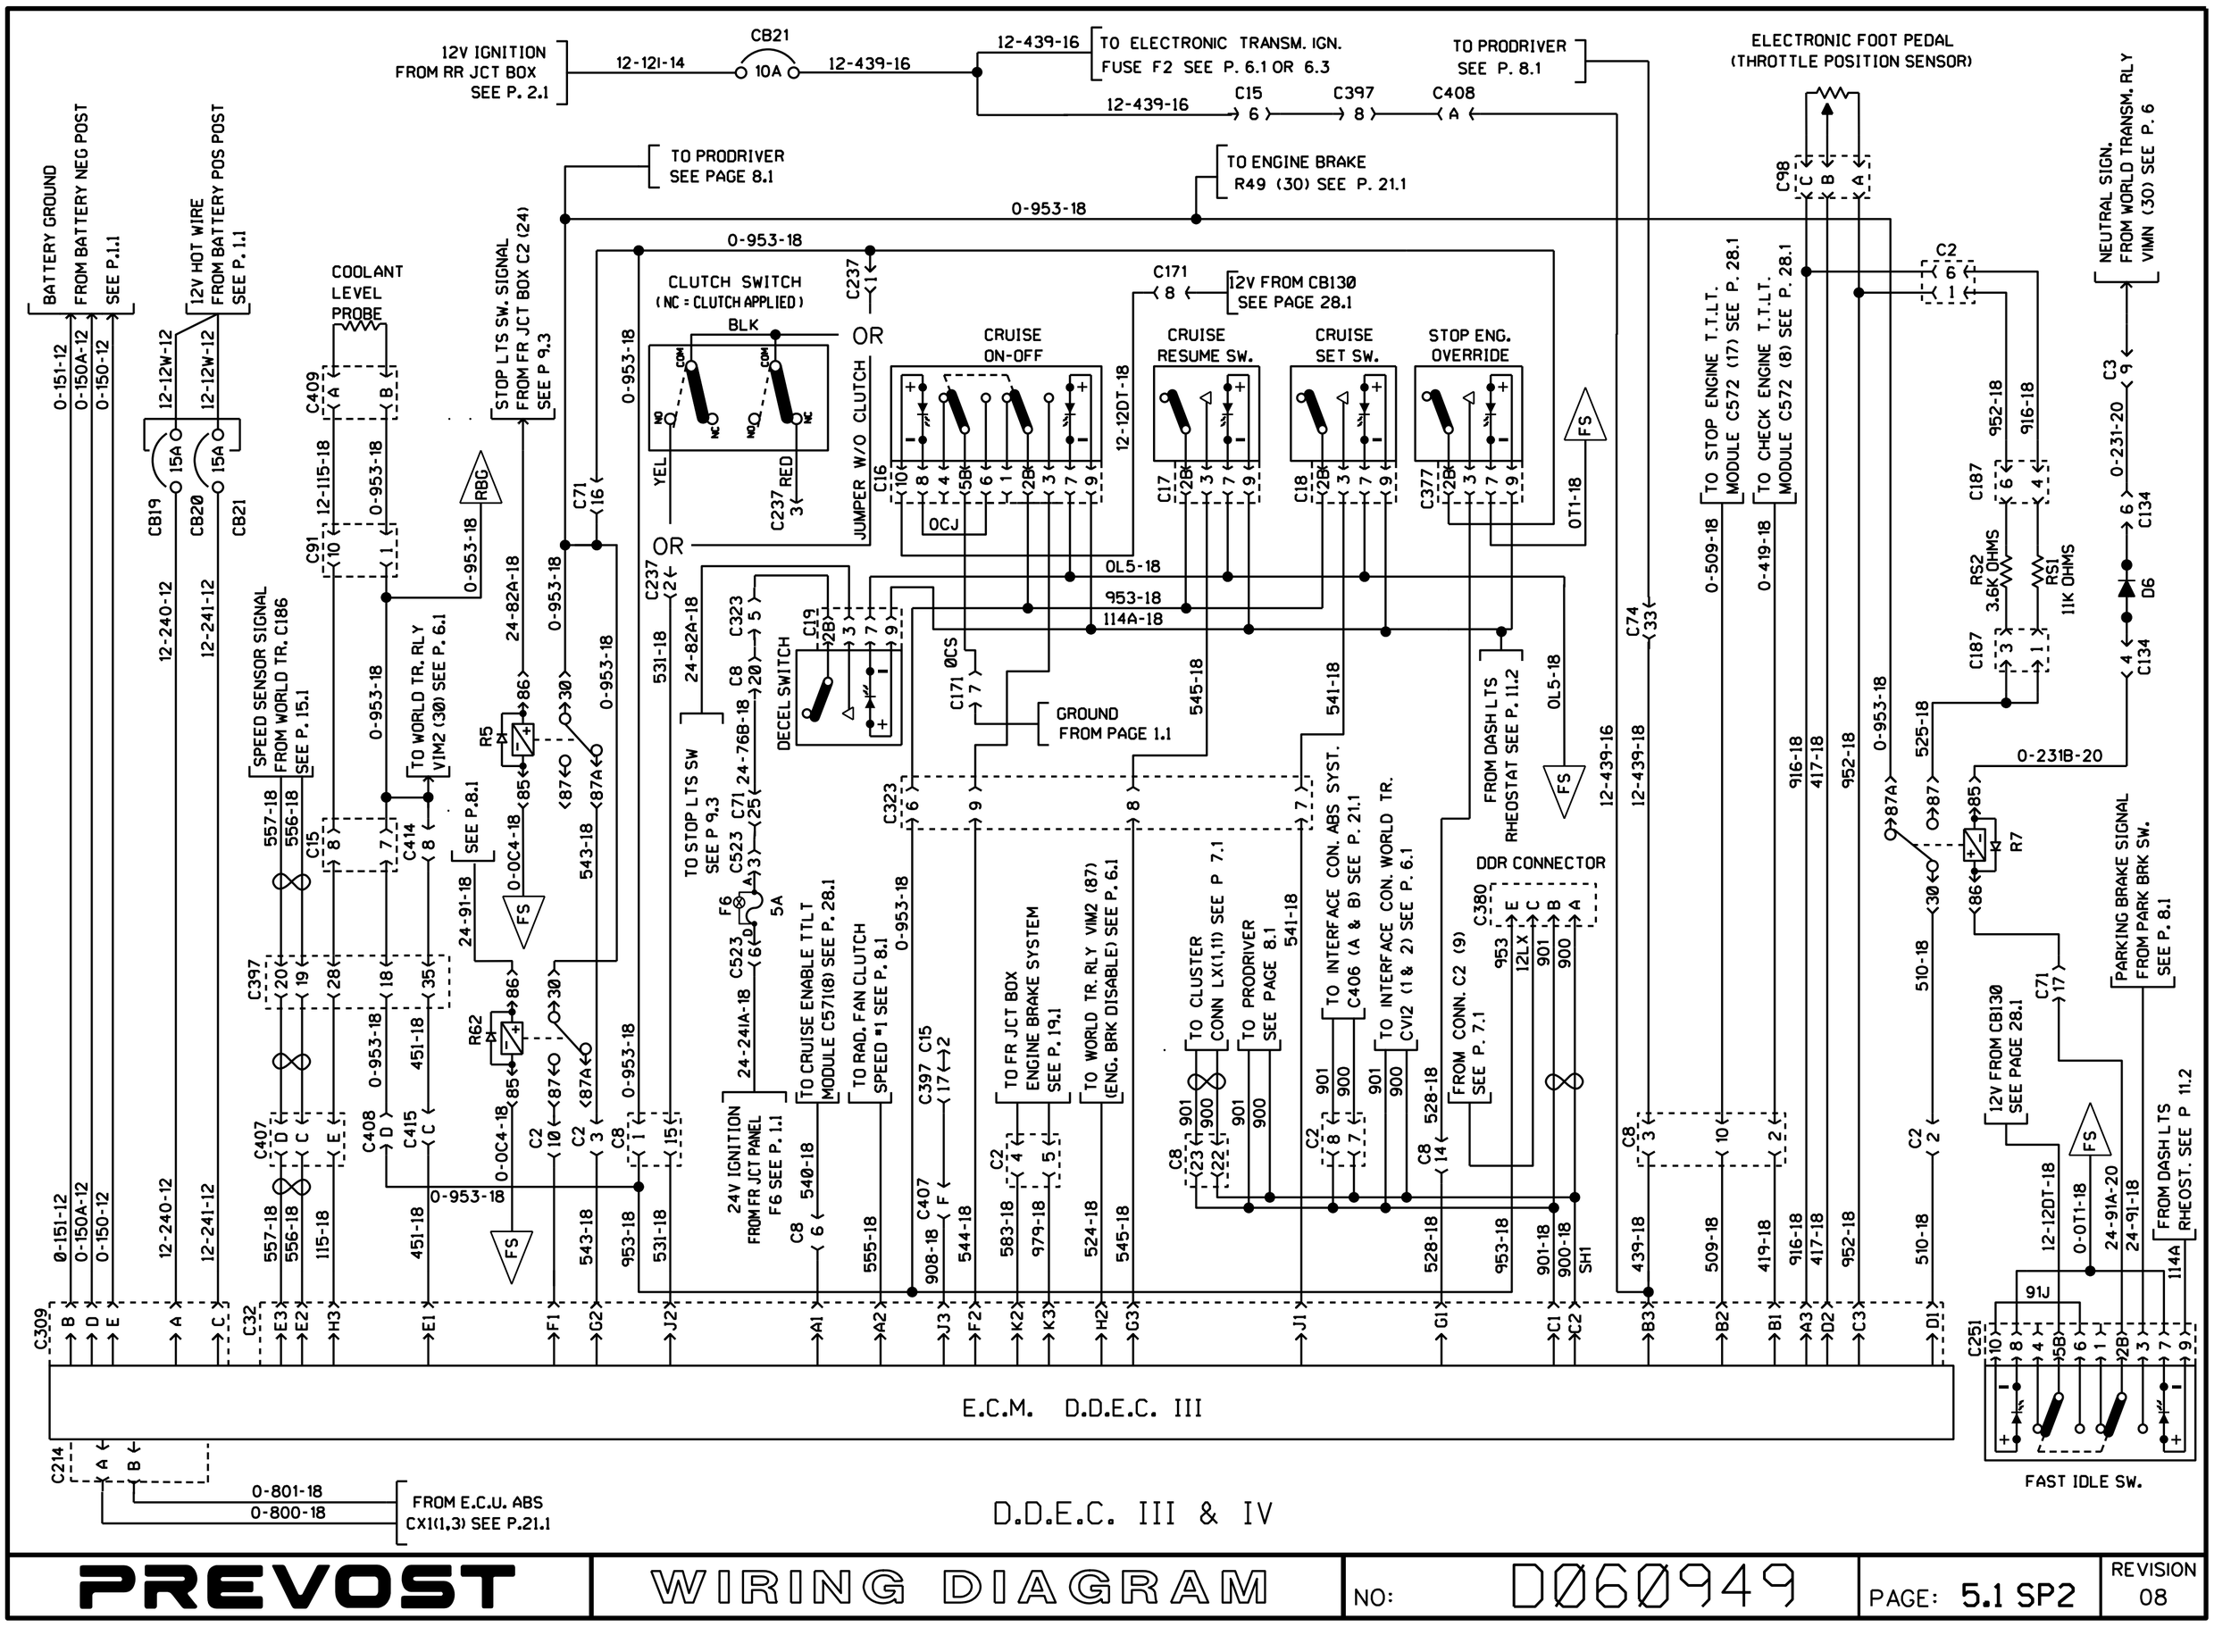


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 5.1 SP2	REVISION 08

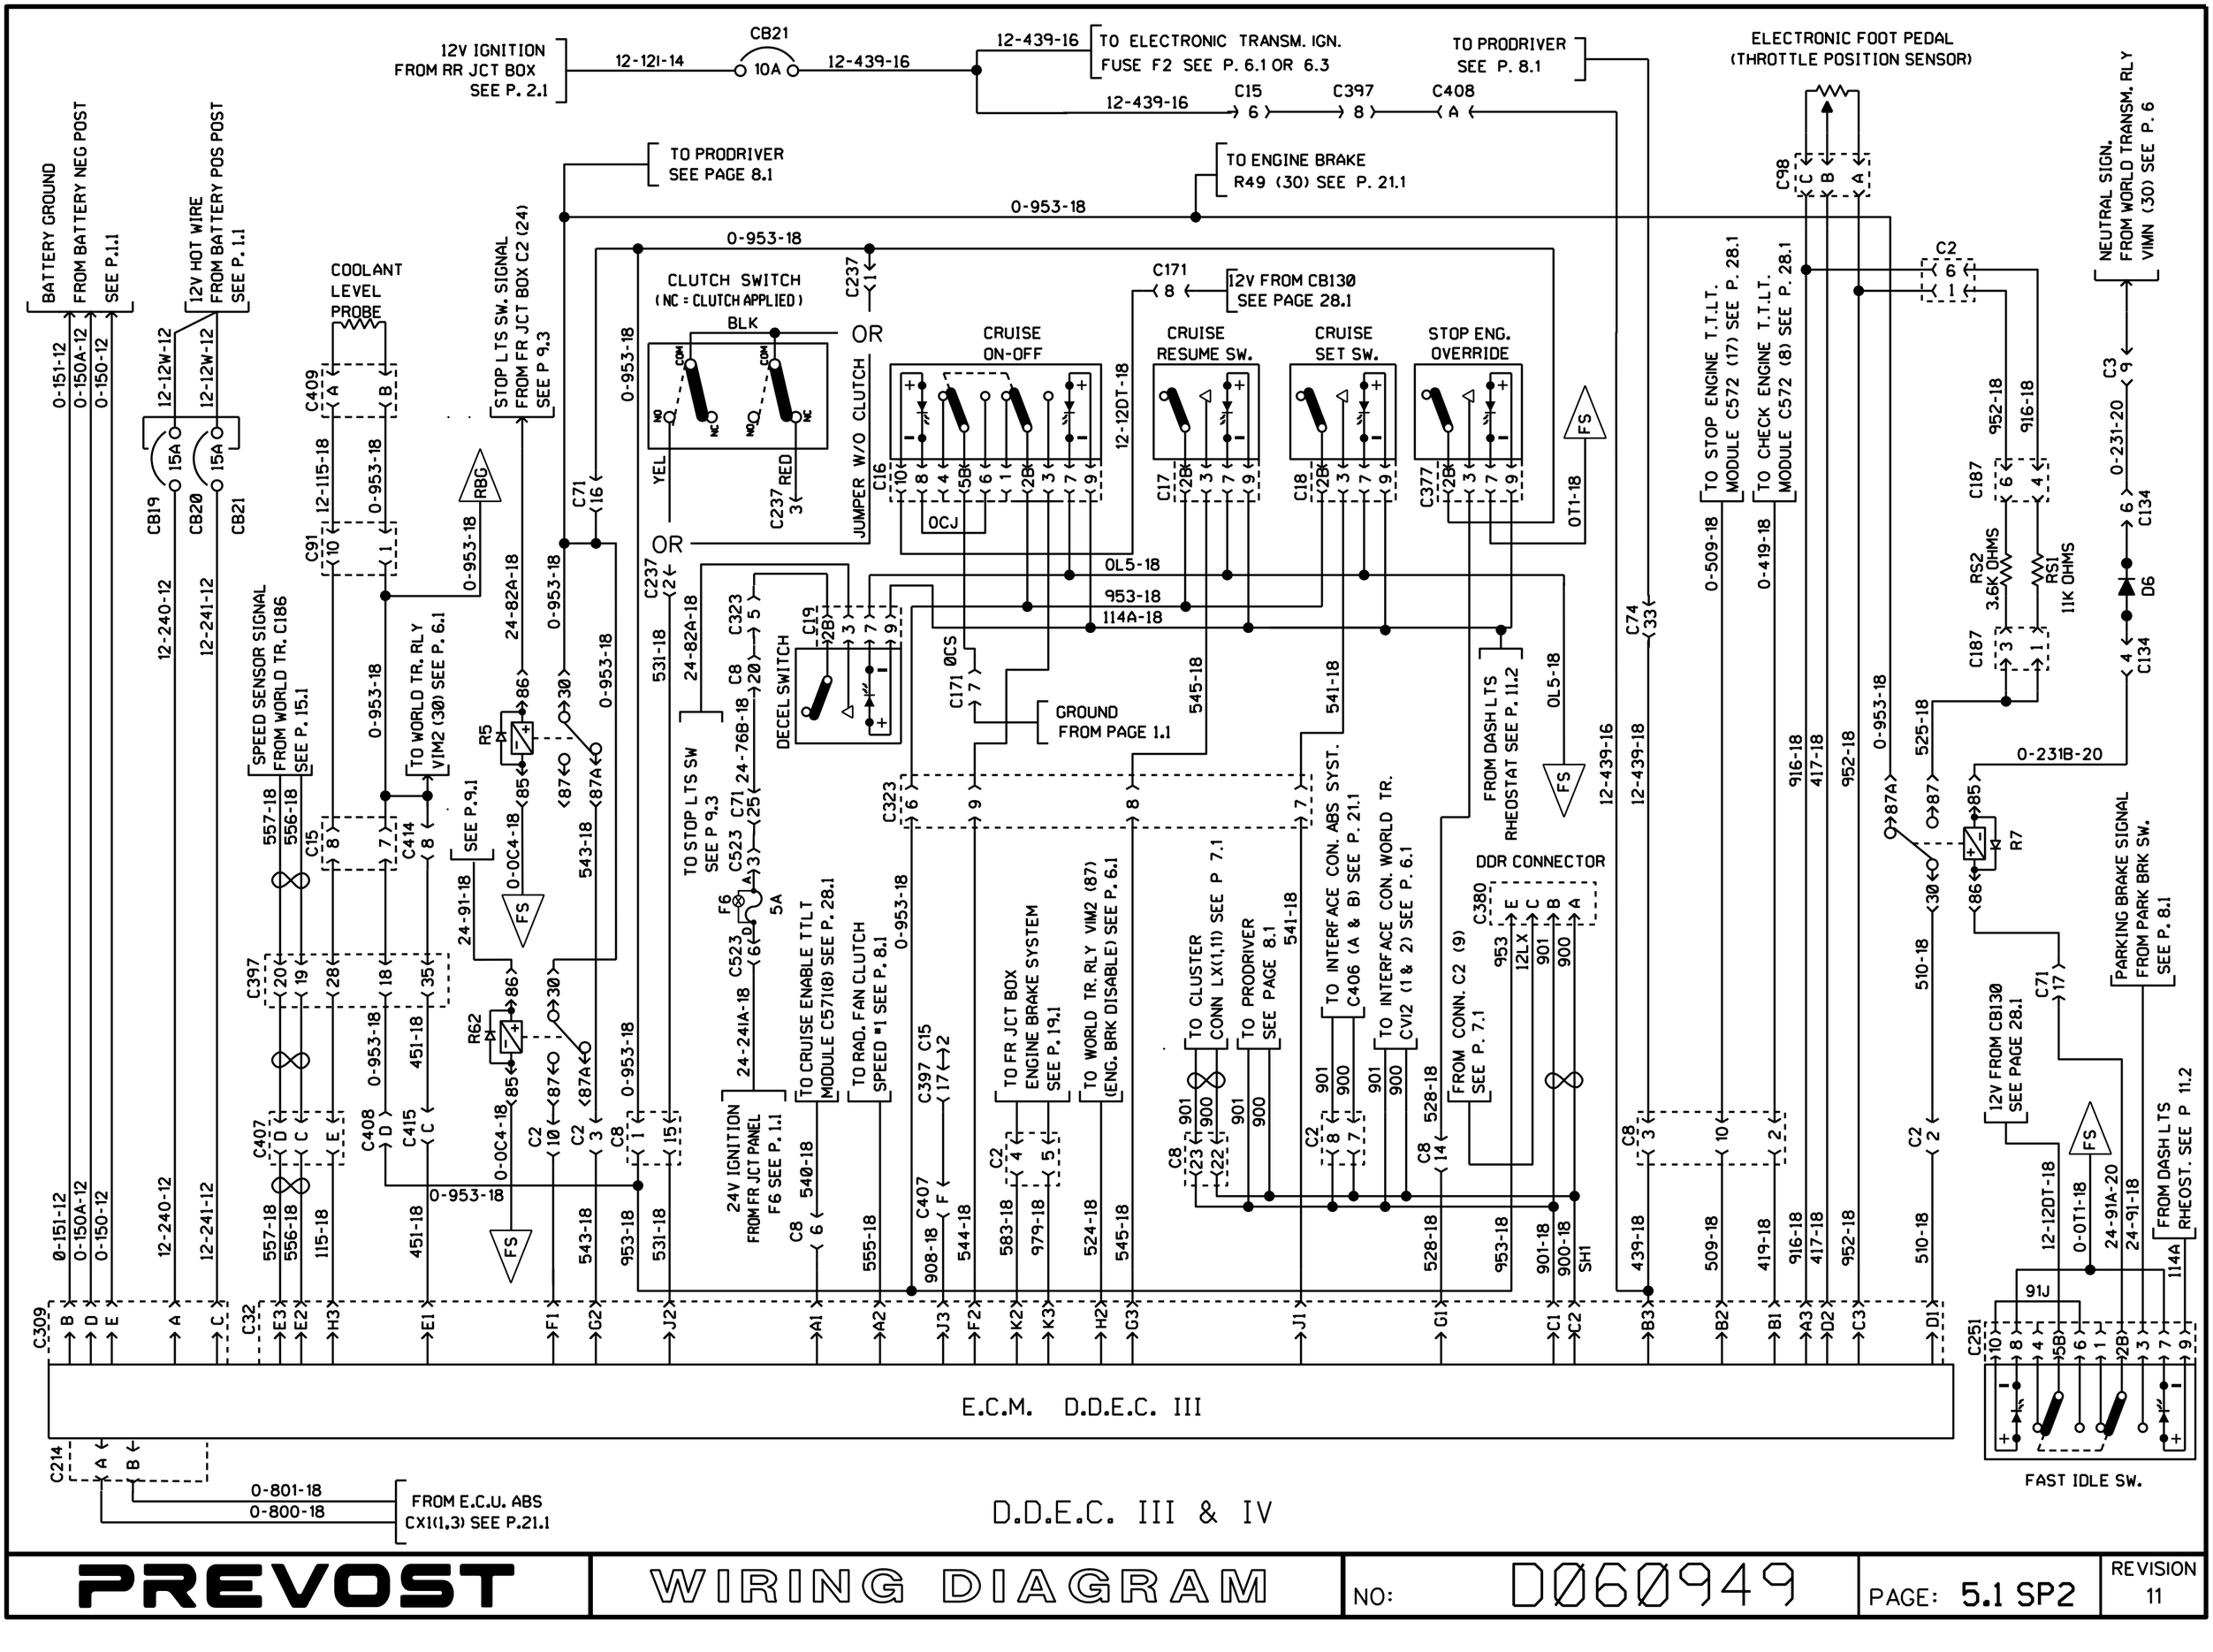


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 5.1 SP2	REVISION 11

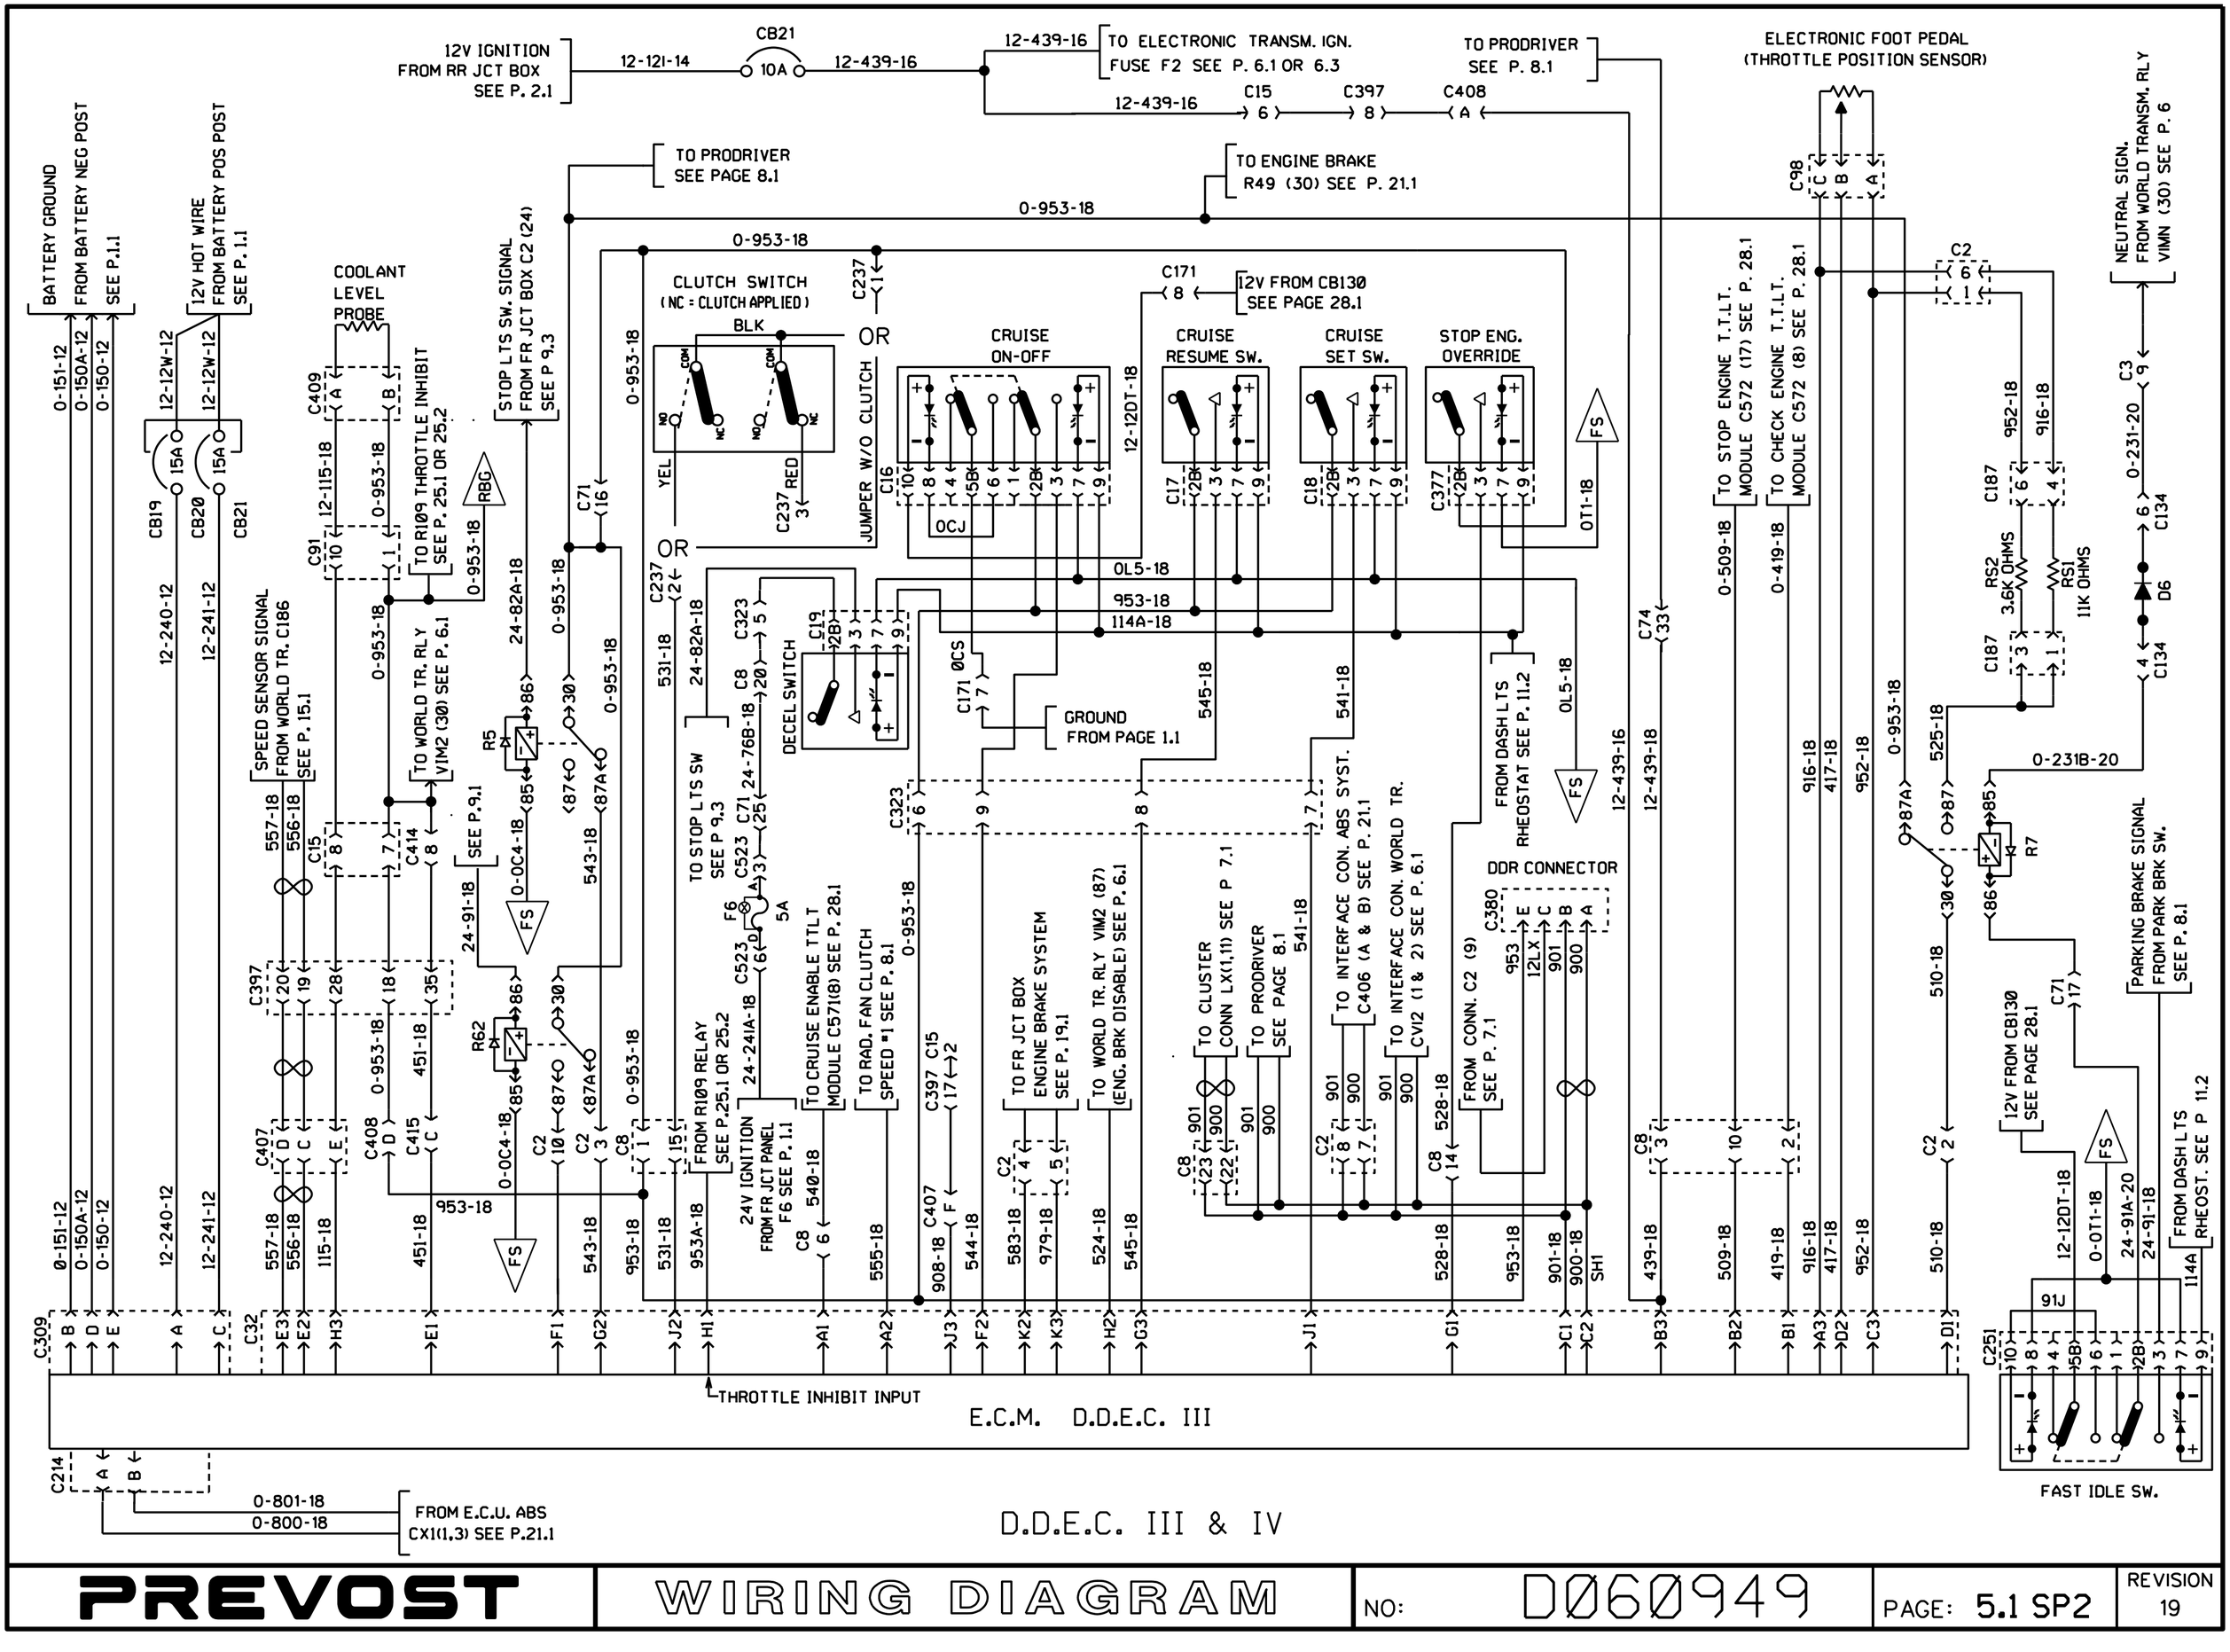
BATTERY GROUND
FROM BATTERY NEG POST
SEE P.1.1
0-151-12
0-150A-12
0-150-12
12V HOT WIRE
FROM BATTERY POS POST
SEE P. 1.1
12-12W-12
CB19
CB20
CB21
15A
12-240-12
12-241-12
12V IGNITION
FROM RR JCT BOX
SEE P. 2.1
12-121-14
CB21
10A
12-439-16
TO ELECTRONIC TRANSM. IGN.
FUSE F2 SEE P. 6.1 OR 6.3
TO PRODRIVER
SEE P. 8.1
C15
C397
C408
6
8
A
TO PRODRIVER
SEE PAGE 8.1
TO ENGINE BRAKE
R49 (30) SEE P. 21.1
0-953-18
ELECTRONIC FOOT PEDAL
(THROTTLE POSITION SENSOR)
C98
C
B
A
C2
6
1
COOLANT
LEVEL
PROBE
C409
A
B
12-115-18
C91
10
1
TO R109 THROTTLE INHIBIT
SEE P. 25.1 OR 25.2
RBG
STOP LTS SW. SIGNAL
FROM FR JCT BOX C2 (24)
SEE P 9.3
CLUTCH SWITCH
(NC = CLUTCH APPLIED)
BLK
YEL
RED
C237
1
2
3
OR
JUMPER W/O CLUTCH
C16
C171
8
12V FROM CB130
SEE PAGE 28.1
CRUISE
ON-OFF
CRUISE
RESUME SW.
CRUISE
SET SW.
STOP ENG.
OVERRIDE
12-12DT-18
C17
C18
C377
OCJ
FS
OT1-18
TO STOP ENGINE T.T.L.T.
MODULE C572 (17) SEE P. 28.1
TO CHECK ENGINE T.T.L.T.
MODULE C572 (8) SEE P. 28.1
0-509-18
0-419-18
NEUTRAL SIGN.
FROM WORLD TRANSM. RLY
VIMN (30) SEE P. 6
C3
9
0-231-20
C134
D6
C187
952-18
916-18
RS2
3.6K OHMS
RS1
11K OHMS
0L5-18
953-18
114A-18
C74
33
C71
16
0-953-18
24-82A-18
531-18
C323
5
C8
20
24-76B-18
C71
25
TO STOP LTS SW
SEE P 9.3
DECEL SWITCH
C19
2B
C171
0CS
7
GROUND
FROM PAGE 1.1
545-18
541-18
FROM DASH LTS
RHEOSTAT SEE P. 11.2
12-439-18
916-18
417-18
952-18
525-18
0-231B-20
R5
86
85
30
87
87A
24-91-18
0-0C4-18
543-18
C397
20
19
28
18
35
C407
C408
C415
C414
C
D
E
451-18
557-18
556-18
115-18
C15
8
7
R62
953-18
C2
10
3
C8
1
15
6
540-18
555-18
908-18
C407
F
544-18
583-18
979-18
524-18
545-18
C2
4
5
C8
23
22
901
900
528-18
14
953-18
439-18
509-18
419-18
510-18
C8
3
10
2
C2
2
TO CRUISE ENABLE TTLT
MODULE C571(8) SEE P. 28.1
TO RAD. FAN CLUTCH
SPEED "1 SEE P. 8.1
FROM R109 RELAY
SEE P.25.1 OR 25.2
24V IGNITION
FROM FR JCT PANEL
F6 SEE P. 1.1
C397 C15
17
2
TO FR JCT BOX
ENGINE BRAKE SYSTEM
SEE P. 19.1
TO WORLD TR. RLY VIM2 (87)
(ENG. BRK DISABLE) SEE P. 6.1
TO CLUSTER
CONN LX(1,11) SEE P 7.1
TO PRODRIVER
SEE PAGE 8.1
TO INTERFACE CON. ABS SYST.
C406 (A & B) SEE P. 21.1
TO INTERFACE CON. WORLD TR. RLY
CVI2 (1 & 2) SEE P. 6.1
FROM CONN. C2 (9)
SEE P. 7.1
DDR CONNECTOR
C380
953
12LX
901
900
E
C
B
A
SPEED SENSOR SIGNAL
FROM WORLD TR. C186
SEE P. 15.1
TO WORLD TR. RLY
VIM2 (30) SEE P. 6.1
0-953-18
24-82A-18
0-0C4-18
FS
R5
R62
C523
6
3
A
F6
5A
24-241A-18
24-91A-20
0-0T1-18
12-12DT-18
12V FROM CB130
SEE PAGE 28.1
C71
17
PARKING BRAKE SIGNAL
FROM PARK BRK SW.
SEE P. 8.1
FROM DASH LTS
RHEOST. SEE P 11.2
114A
R7
C251
16
FAST IDLE SW.
C309
B
D
E
A
C
C32
E3
E2
H3
E1
F1
G2
J2
H1
A1
A2
J3
F2
K2
K3
H2
G3
J1
G1
C1
C2
B3
B2
B1
A3
D2
C3
D1
THROTTLE INHIBIT INPUT
E.C.M. D.D.E.C. III
C214
A
B
0-801-18
0-800-18
FROM E.C.U. ABS
CX1(1,3) SEE P.21.1
D.D.E.C. III & IV

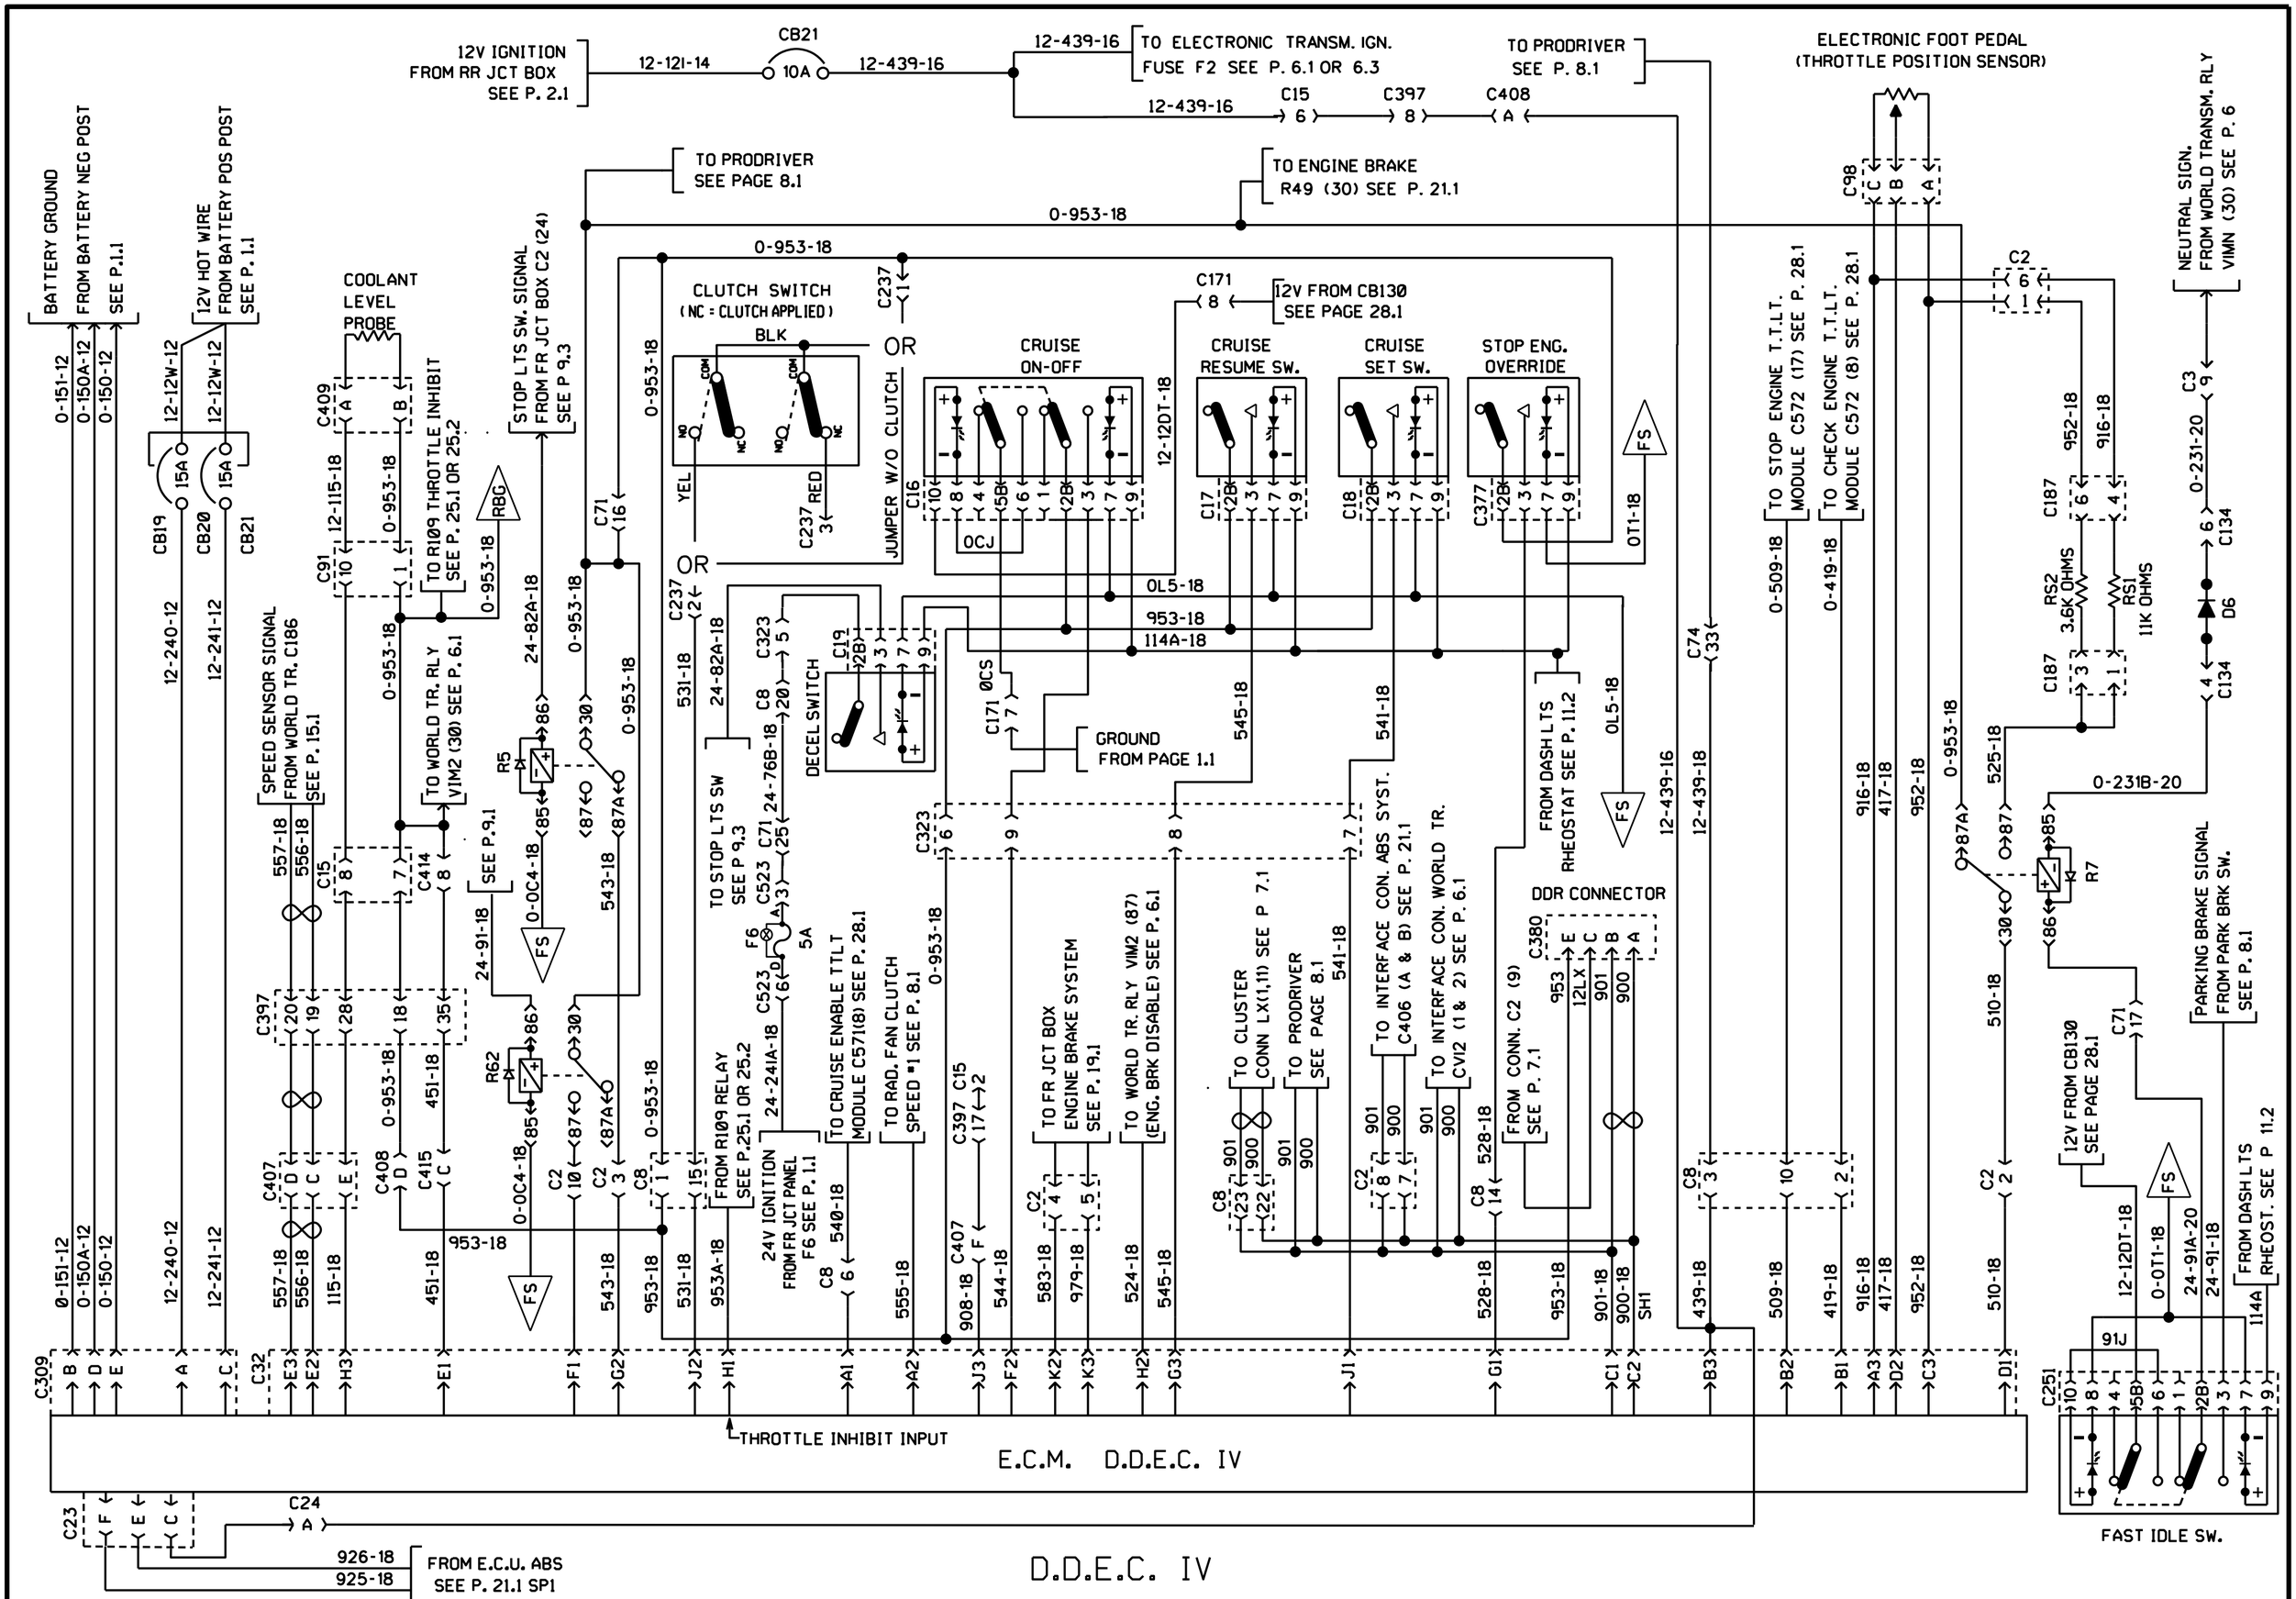

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 5.1 SP2	REVISION 20

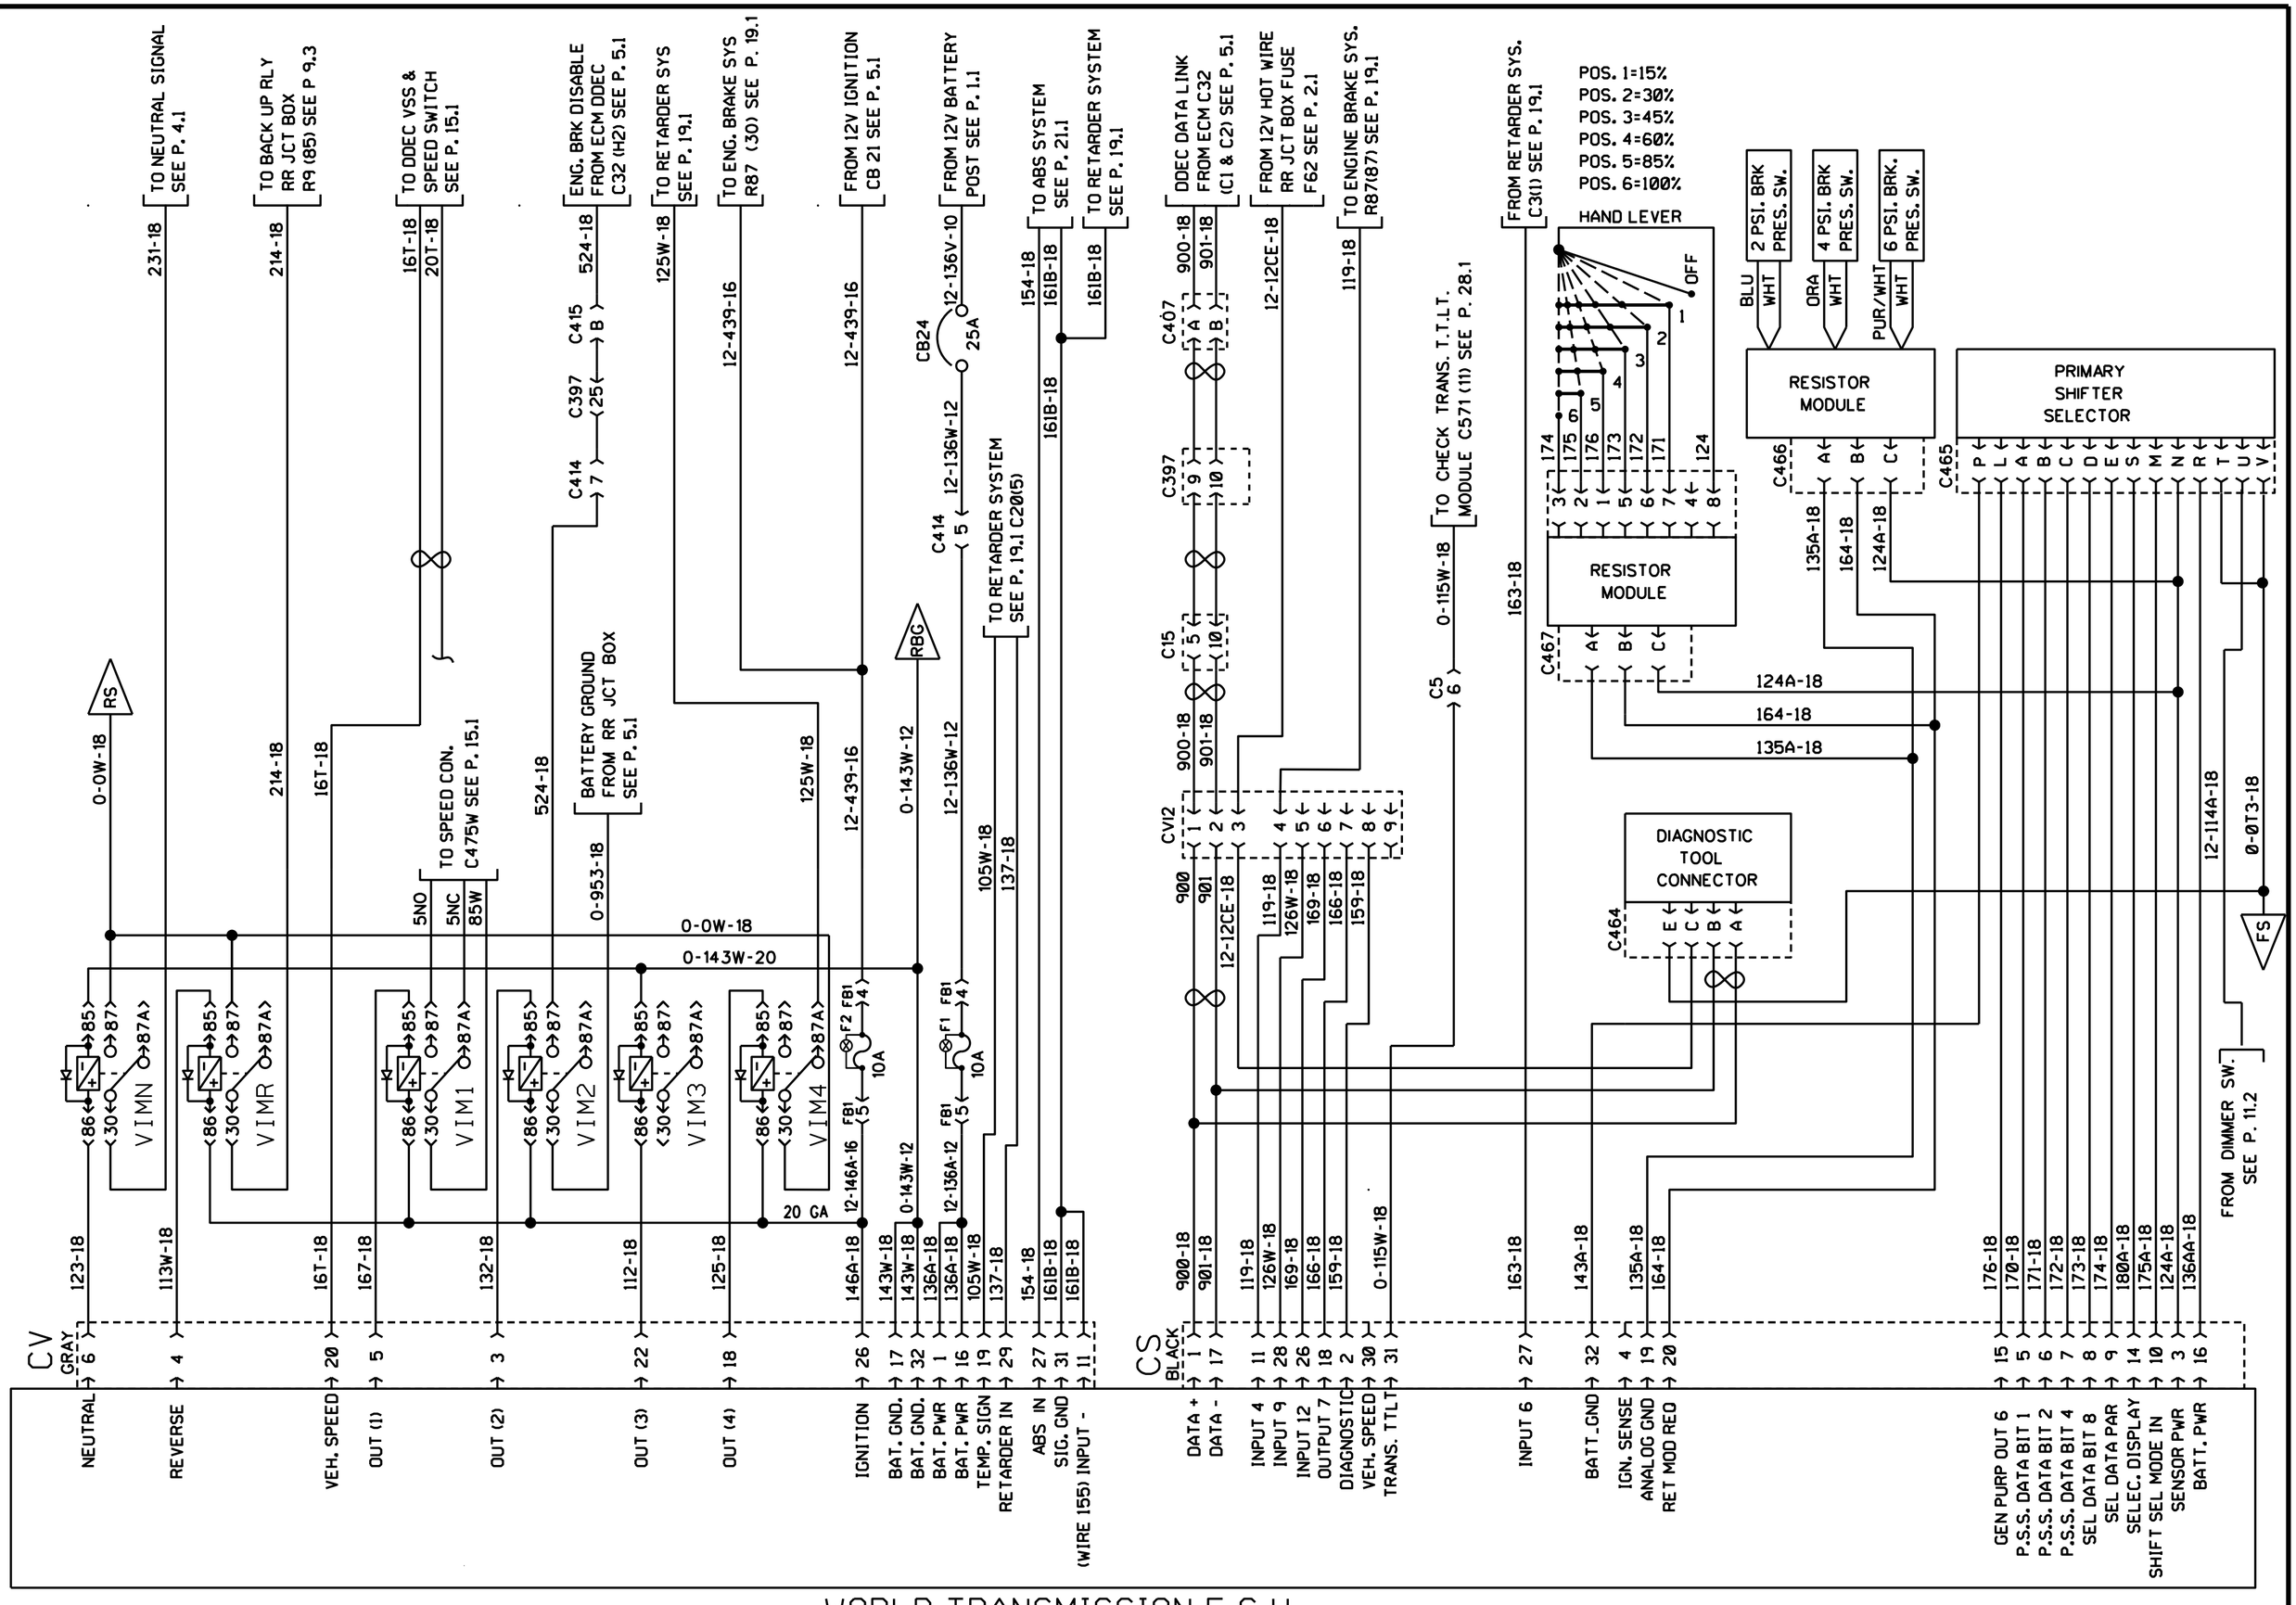


PREVOST — WIRING DIAGRAM

NO: D060949

PAGE: 6.1

REVISION 00

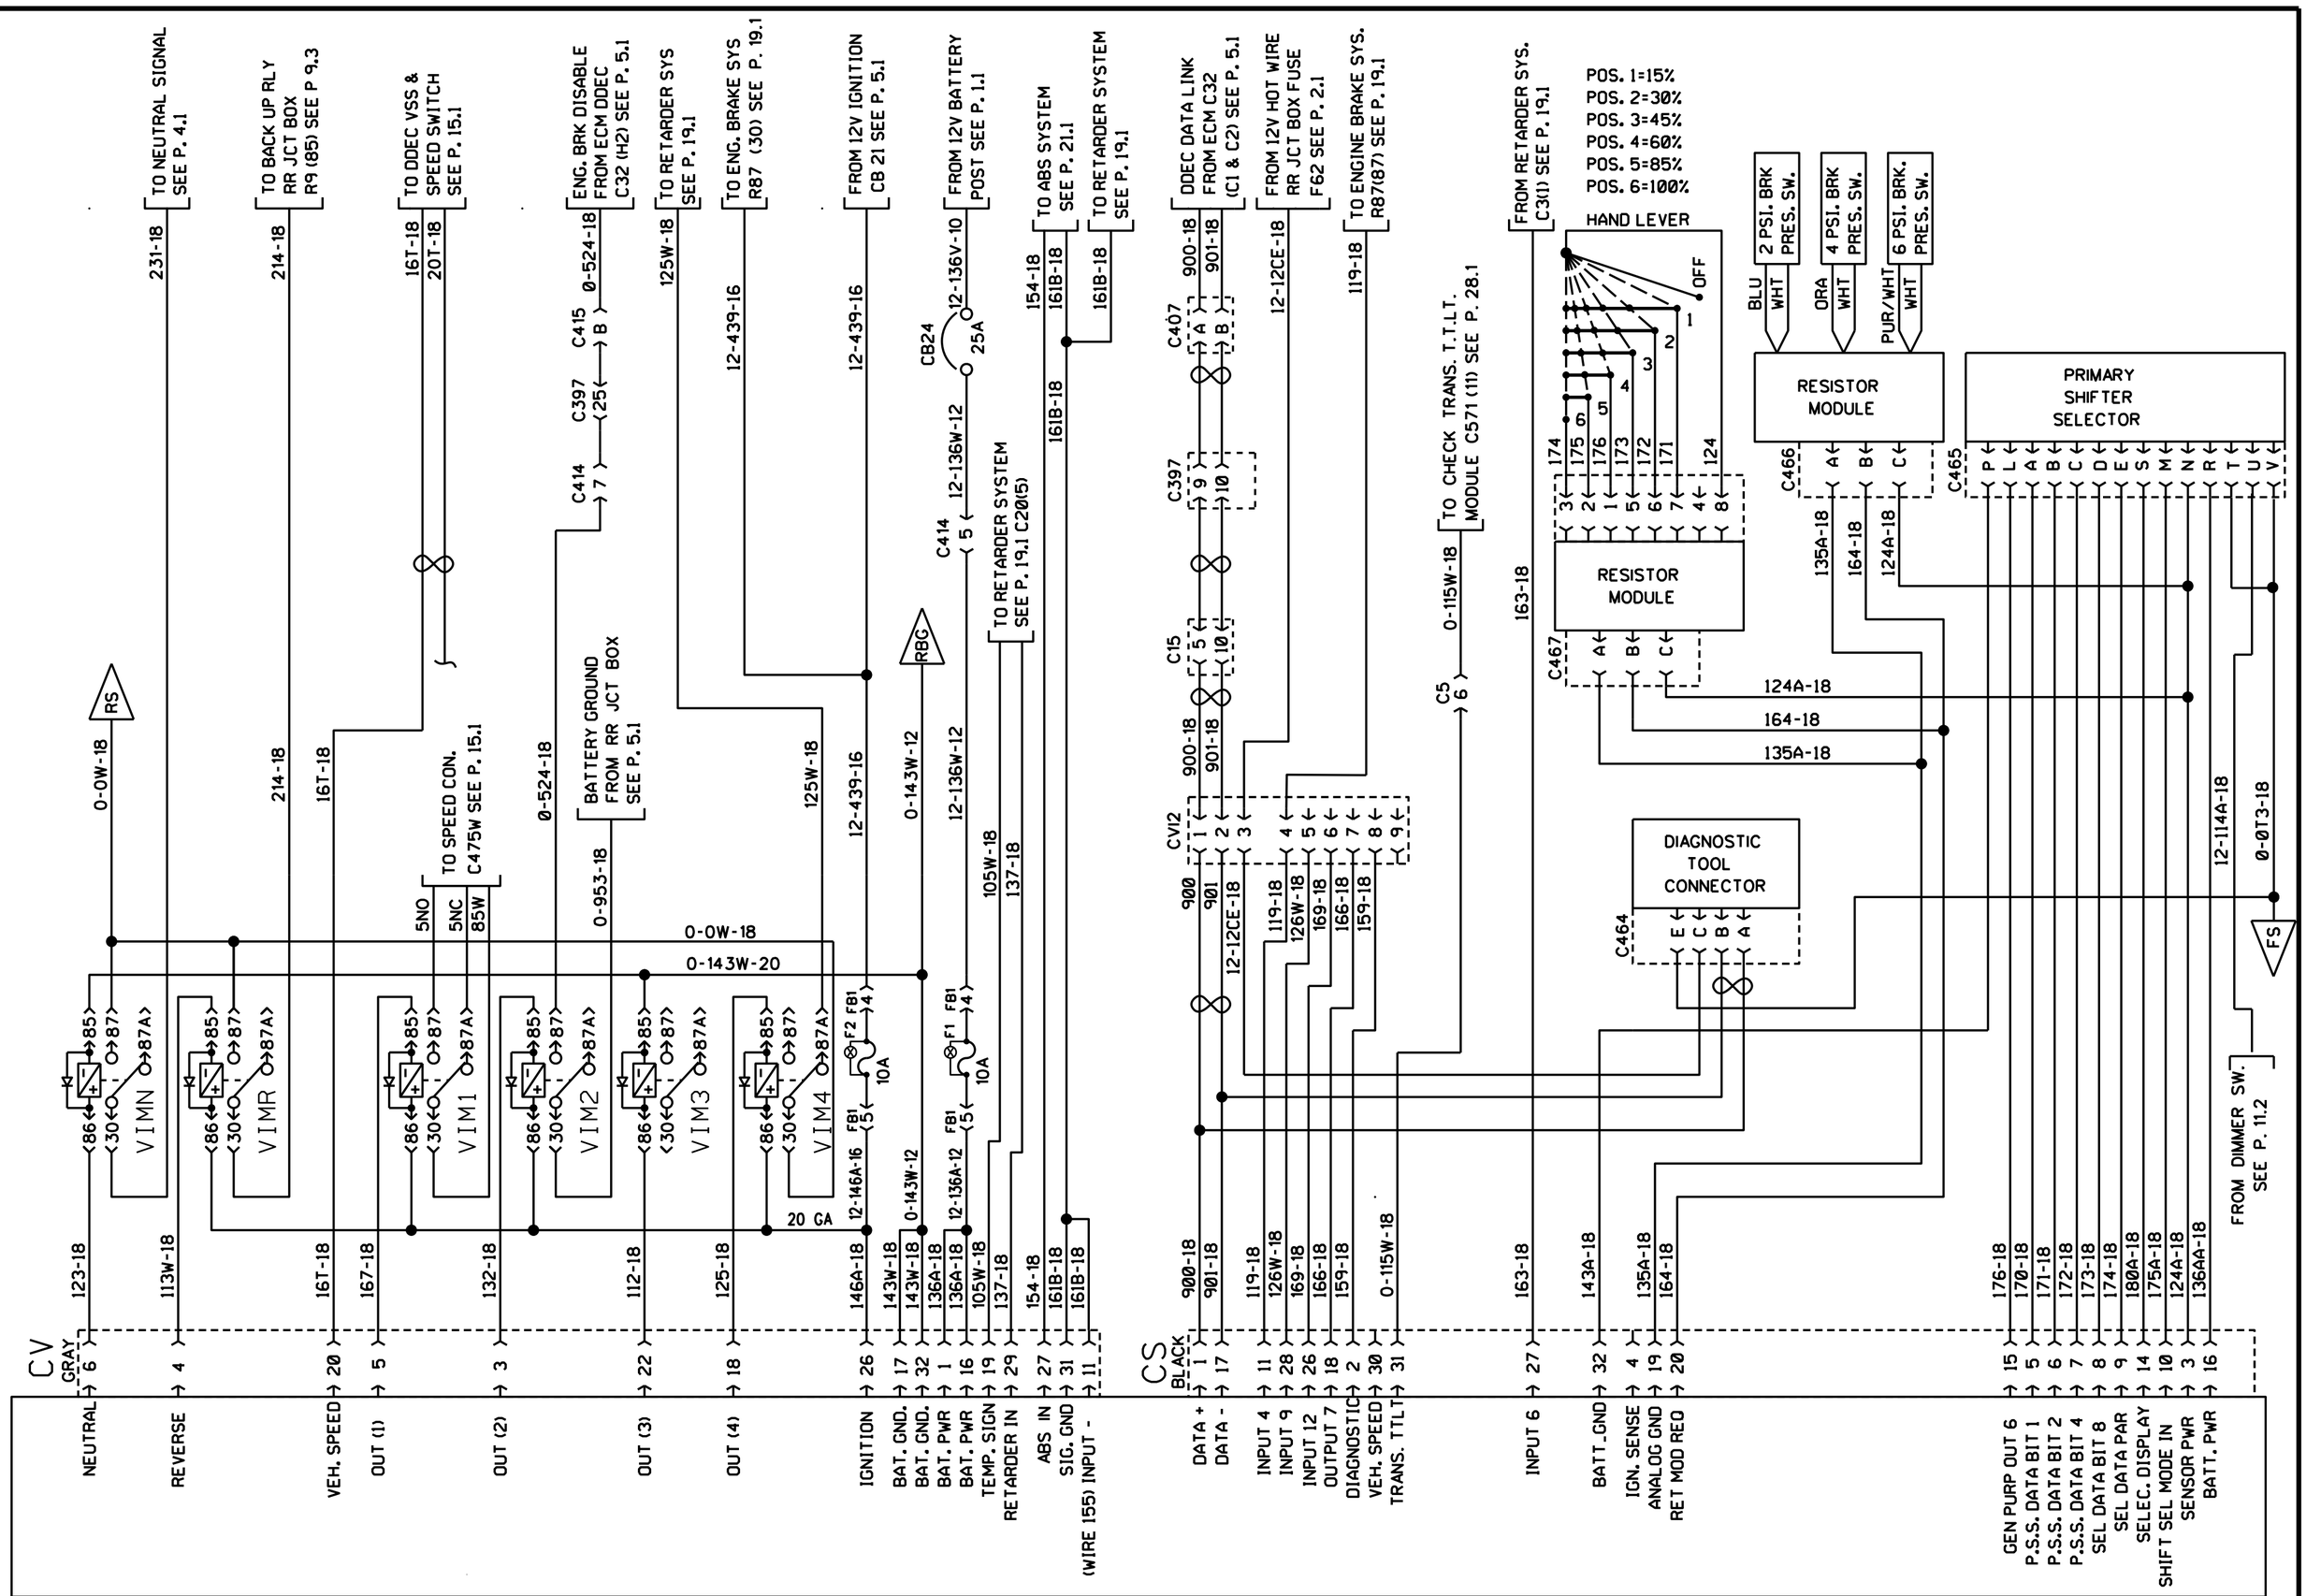

WORLD TRANSMISSION E.C.U.

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 6.1	REVISION 08

PREVOST

WIRING DIAGRAM

WORLD TRANSMISSION E.C.U.

WHEN PARKING BRAKE IS APPLIED AND THE SHIFTER IN NEUTRAL POSITION, THE TRANSMISSION WILL NOT SHIFT

NO: D060949

PAGE: 6.1 SP2

REVISION 00

CV
GRAY

NEUTRAL → 6 — 123-18 — VIMN — 0-0W-18 → RS
REVERSE → 4 — 113W-18 — VIMR — 231-18 → TO NEUTRAL SIGNAL SEE P. 4.1
214-18 → 214-18 TO BACK UP RLY RR JCT BOX R9 (85) SEE P 9.3
VEH. SPEED → 20 — 16T-18 → 16T-18
OUT (1) → 5 — 167-18 — VIM1 — 5NO / 5NC / 85W → TO SPEED CON. C475W SEE P. 15.1
16T-18 / 20T-18 → TO DDEC VSS & SPEED SWITCH SEE P. 15.1
OUT (2) → 3 — 132-18 — VIM2 — 0-524-18 → C414 7 — C397 25 — C415 B → 0-524-18 ENG. BRK DISABLE FROM ECM DDEC C32 (H2) SEE P. 5.1
0-953-18 → BATTERY GROUND FROM RR JCT BOX SEE P. 5.1
OUT (3) → 22 — 112-18 — VIM3 — 125W-18 → TO RETARDER SYS SEE P. 19.1
OUT (4) → 18 — 125-18 — VIM4 — 125W-18 → 12-439-16 → TO ENG. BRAKE SYS R87 (30) SEE P. 19.1
20 GA
0-143W-20
0-0W-18

IGNITION → 26 — 146A-18 — 12-146A-16 — FB1 5 — F2 10A — FB1 4 — 12-439-16 → 12-439-16 FROM 12V IGNITION CB 21 SEE P. 5.1
BAT. GND. → 17 — 143W-18
BAT. GND. → 32 — 143W-18 — 0-143W-12 → 0-143W-12 → RBG
BAT. PWR → 1 — 136A-18
BAT. PWR → 16 — 136A-18 — 12-136A-12 — FB1 5 — F1 10A — FB1 4 — 12-136W-12 → C414 5 — 12-136W-12 — CB24 25A — 12-136V-10 FROM 12V BATTERY POST SEE P. 1.1
TEMP. SIGN → 19 — 105W-18 → 105W-18
RETARDER IN → 29 — 137-18 → 137-18 TO RETARDER SYSTEM SEE P. 19.1 C20(5)
ABS IN → 27 — 154-18 → 154-18 TO ABS SYSTEM SEE P. 21.1
SIG. GND → 31 — 161B-18 → 161B-18 → 161B-18 TO RETARDER SYSTEM SEE P. 19.1
AUX RANGE INHIBIT → 11 — 155-18 → 87A

RS — 0-0-18 — 87 / 85 — R109 — 30 / 86 — 161B-18 / 24-91-18 → FROM PARK. BRAKE SIGN. RLY R6 SEE P. 9.3

CS
BLACK

DATA + → 1 — 900-18 — CVI2 1 — C15 5 — C397 9 — C407 A — 900-18 → DDEC DATA LINK FROM ECM C32 (C1 & C2) SEE P. 5.1
DATA - → 17 — 901-18 — CVI2 2 — C15 10 — C397 10 — C407 B — 901-18
12-12CE-18 — CVI2 3 → 12-12CE-18 FROM 12V HOT WIRE RR JCT BOX FUSE F62 SEE P. 2.1
INPUT 4 → 11 — 119-18 — CVI2 4 → 119-18 TO ENGINE BRAKE SYS. R87(87) SEE P. 19.1
INPUT 9 → 28 — 126W-18 — CVI2 5
INPUT 12 → 26 — 169-18 — CVI2 6
OUTPUT 7 → 18 — 166-18 — CVI2 7
DIAGNOSTIC → 2 — 159-18 — CVI2 8
VEH. SPEED → 30 — CVI2 9
TRANS. TTLT → 31 — 0-115W-18 → C5 6 — 0-115W-18 → TO CHECK TRANS. T.T.L.T. MODULE C571 (11) SEE P. 28.1

INPUT 6 → 27 — 163-18 → 163-18 FROM RETARDER SYS. C3(1) SEE P. 19.1
BATT_GND → 32 — 143A-18
IGN. SENSE → 4
ANALOG GND → 19 — 135A-18
RET MOD REQ → 20 — 164-18

C464 DIAGNOSTIC TOOL CONNECTOR: E, C, B, A

C467 RESISTOR MODULE: A, B, C; 3, 2, 1, 5, 6, 7, 4, 8 → 174, 175, 176, 173, 172, 171, 124
HAND LEVER: OFF; 1 POS. 1=15%; 2 POS. 2=30%; 3 POS. 3=45%; 4 POS. 4=60%; 5 POS. 5=85%; 6 POS. 6=100%


135A-18, 164-18, 124A-18

C466 RESISTOR MODULE: A, B, C
135A-18
164-18
124A-18
BLU / WHT → 2 PSI. BRK PRES. SW.
ORA / WHT → 4 PSI. BRK PRES. SW.
PUR/WHT / WHT → 6 PSI. BRK. PRES. SW.

C465 PRIMARY SHIFTER SELECTOR: P, L, A, B, C, D, E, S, M, N, R, T, U, V

GEN PURP OUT 6 → 15 — 176-18
P.S.S. DATA BIT 1 → 5 — 170-18
P.S.S. DATA BIT 2 → 6 — 171-18
P.S.S. DATA BIT 4 → 7 — 172-18
SEL DATA BIT 8 → 8 — 173-18
SEL DATA PAR → 9 — 174-18
SELEC. DISPLAY → 14 — 180A-18
SHIFT SEL MODE IN → 10 — 175A-18
SENSOR PWR → 3 — 124A-18
BATT. PWR → 16 — 136AA-18


FROM DIMMER SW. SEE P. 11.2 — 12-114A-18
FS — 0-0T3-18

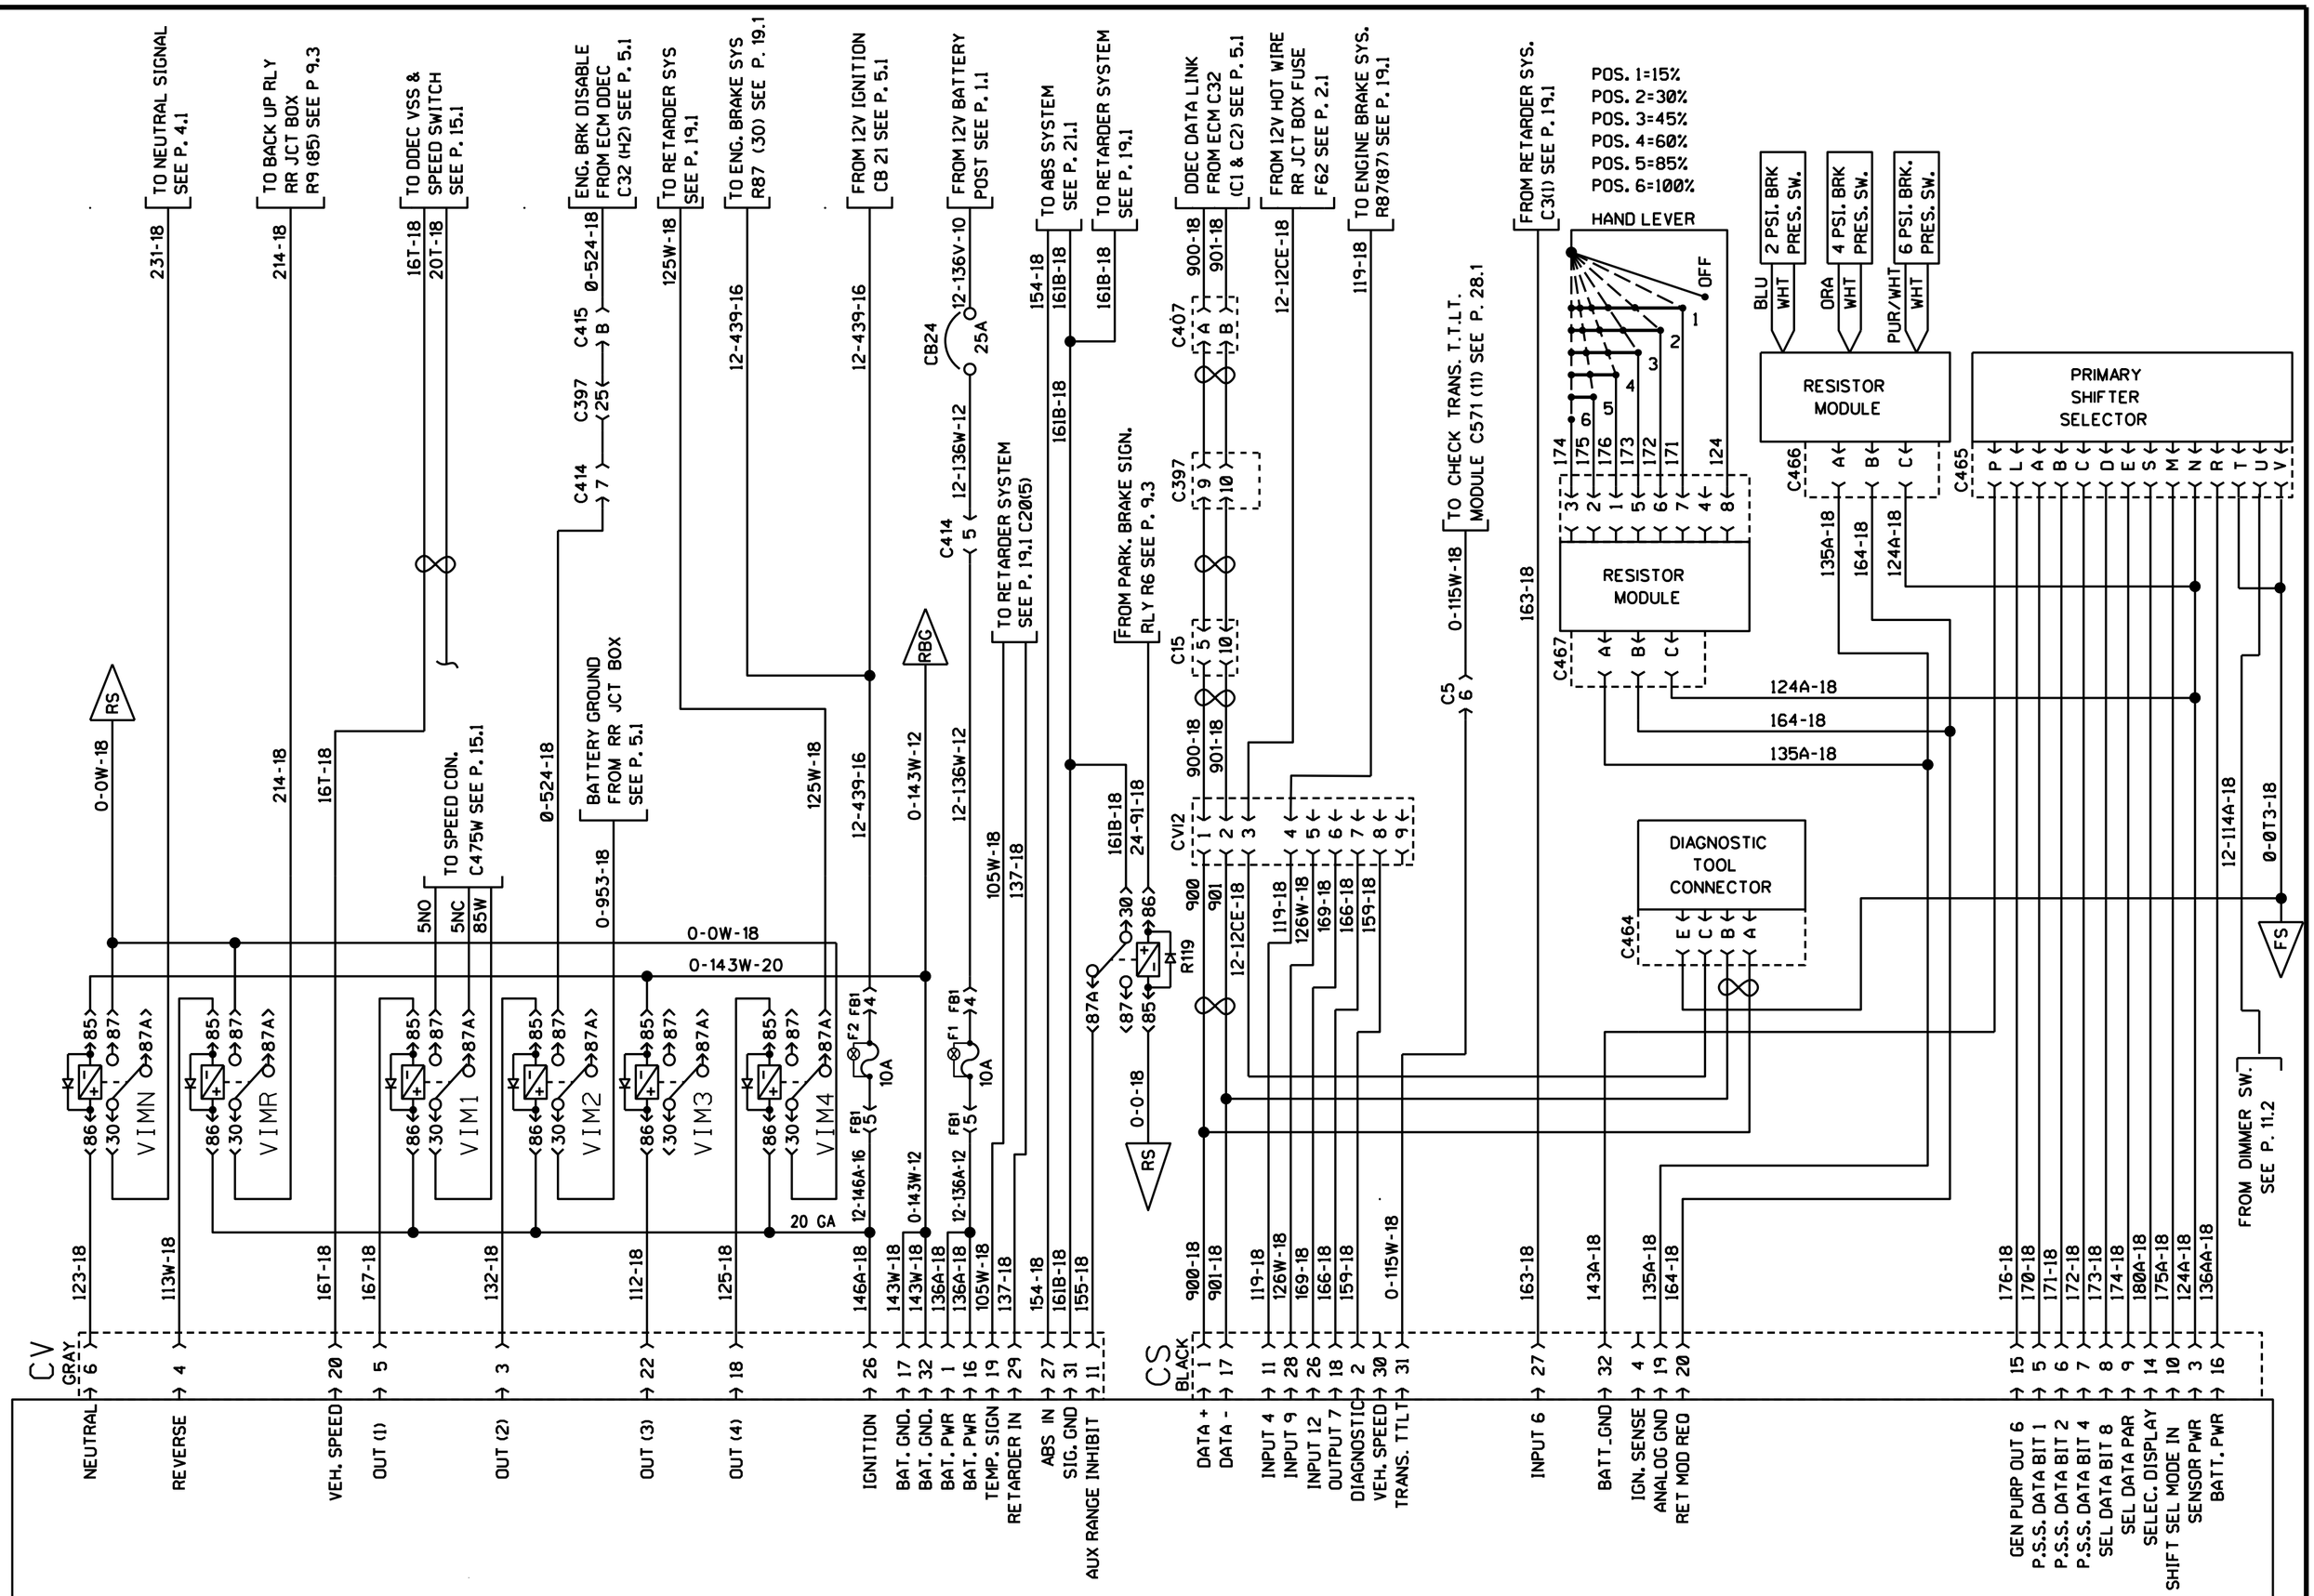


WORLD TRANSMISSION E.C.U.

WHEN PARKING BRAKE IS APPLIED AND THE SHIFTER IN NEUTRAL POSITION, THE TRANSMISSION WILL NOT SHIFT

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 6.1 SP2	REVISION 19

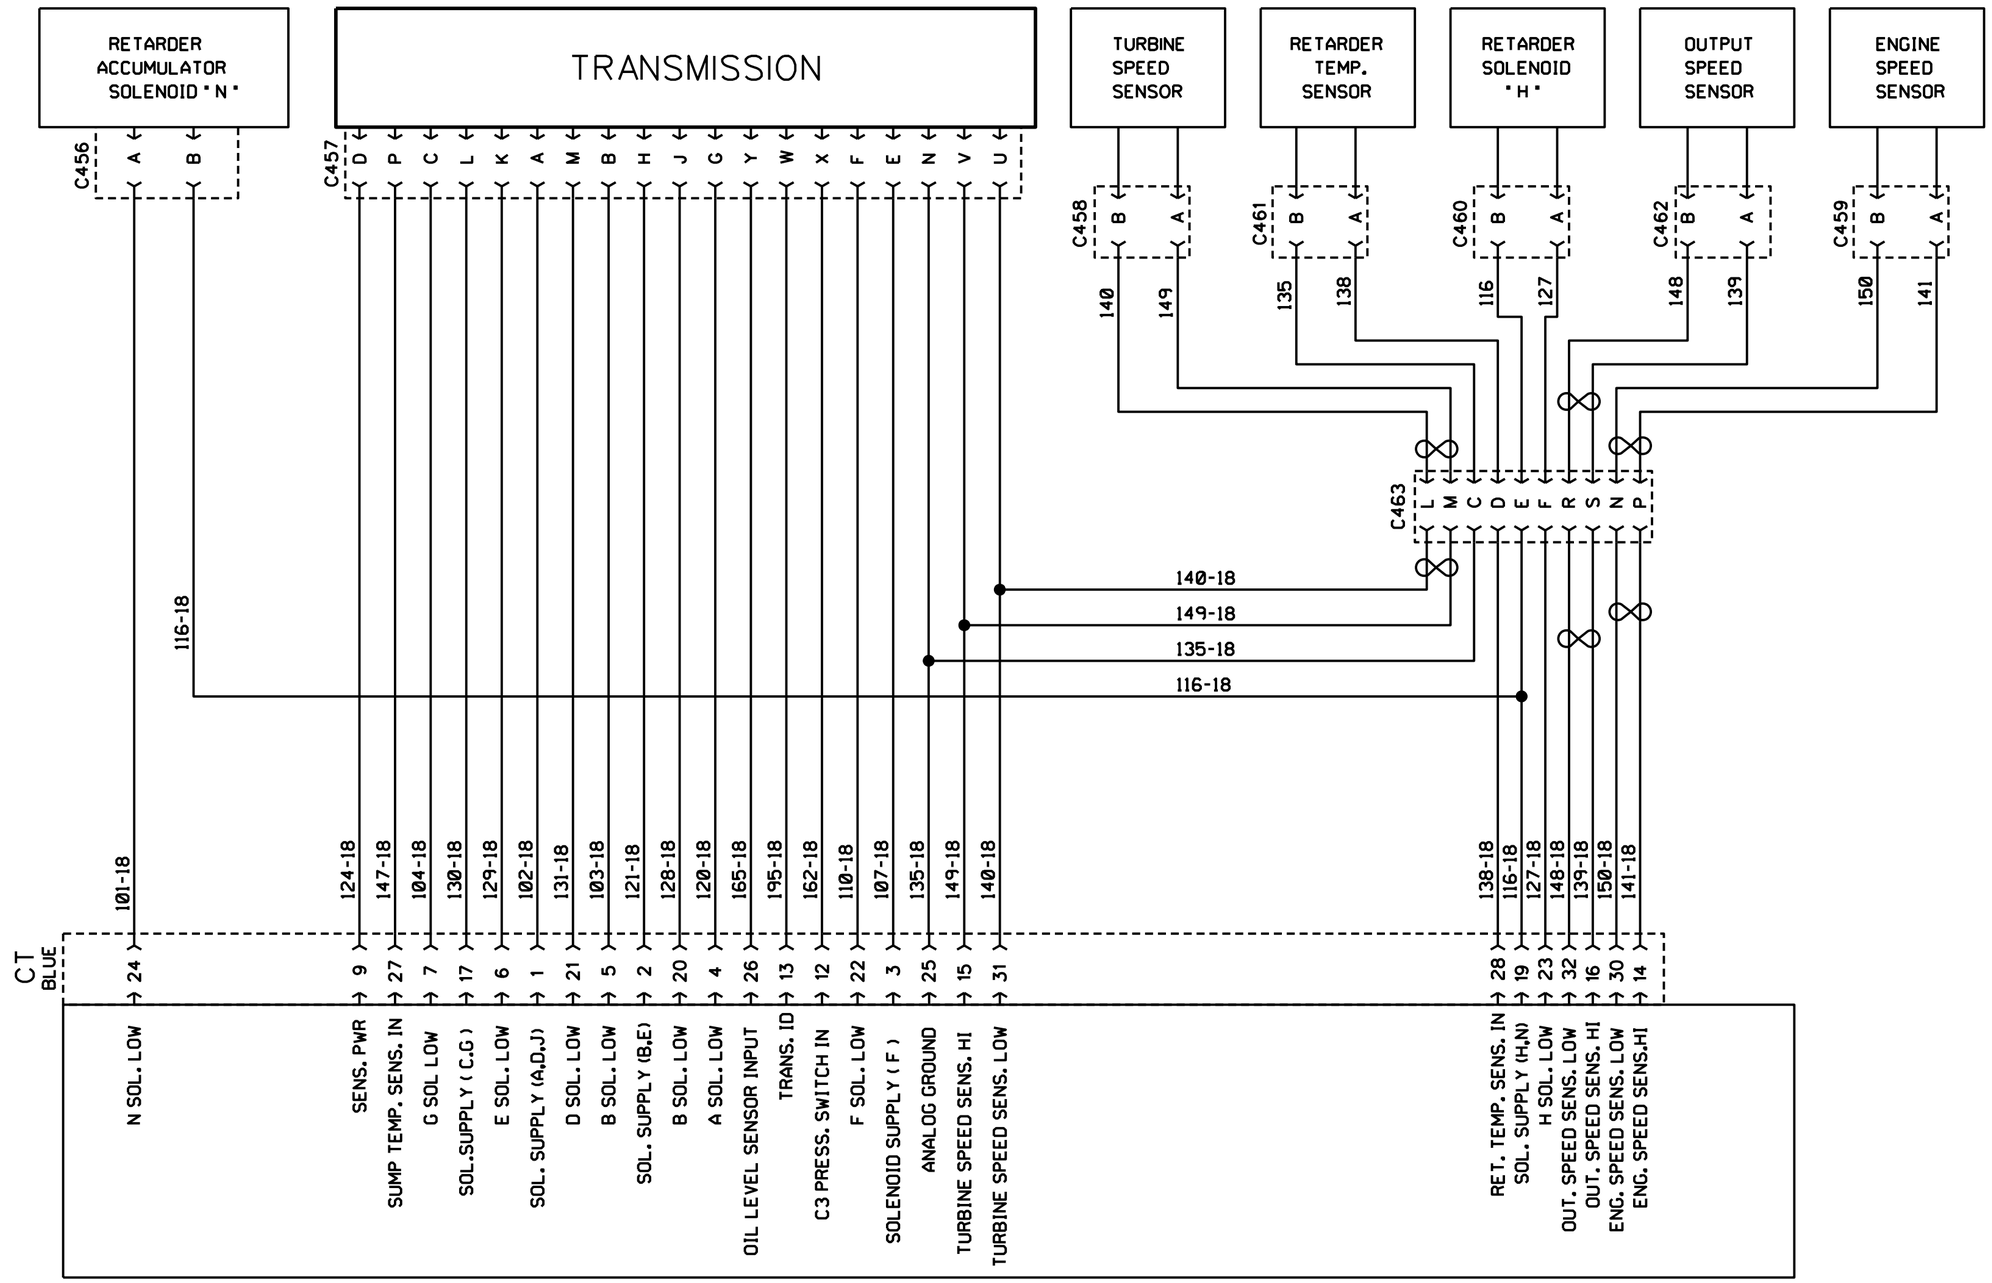

WORLD TRANSMISSION E.C.U. (SUITE)

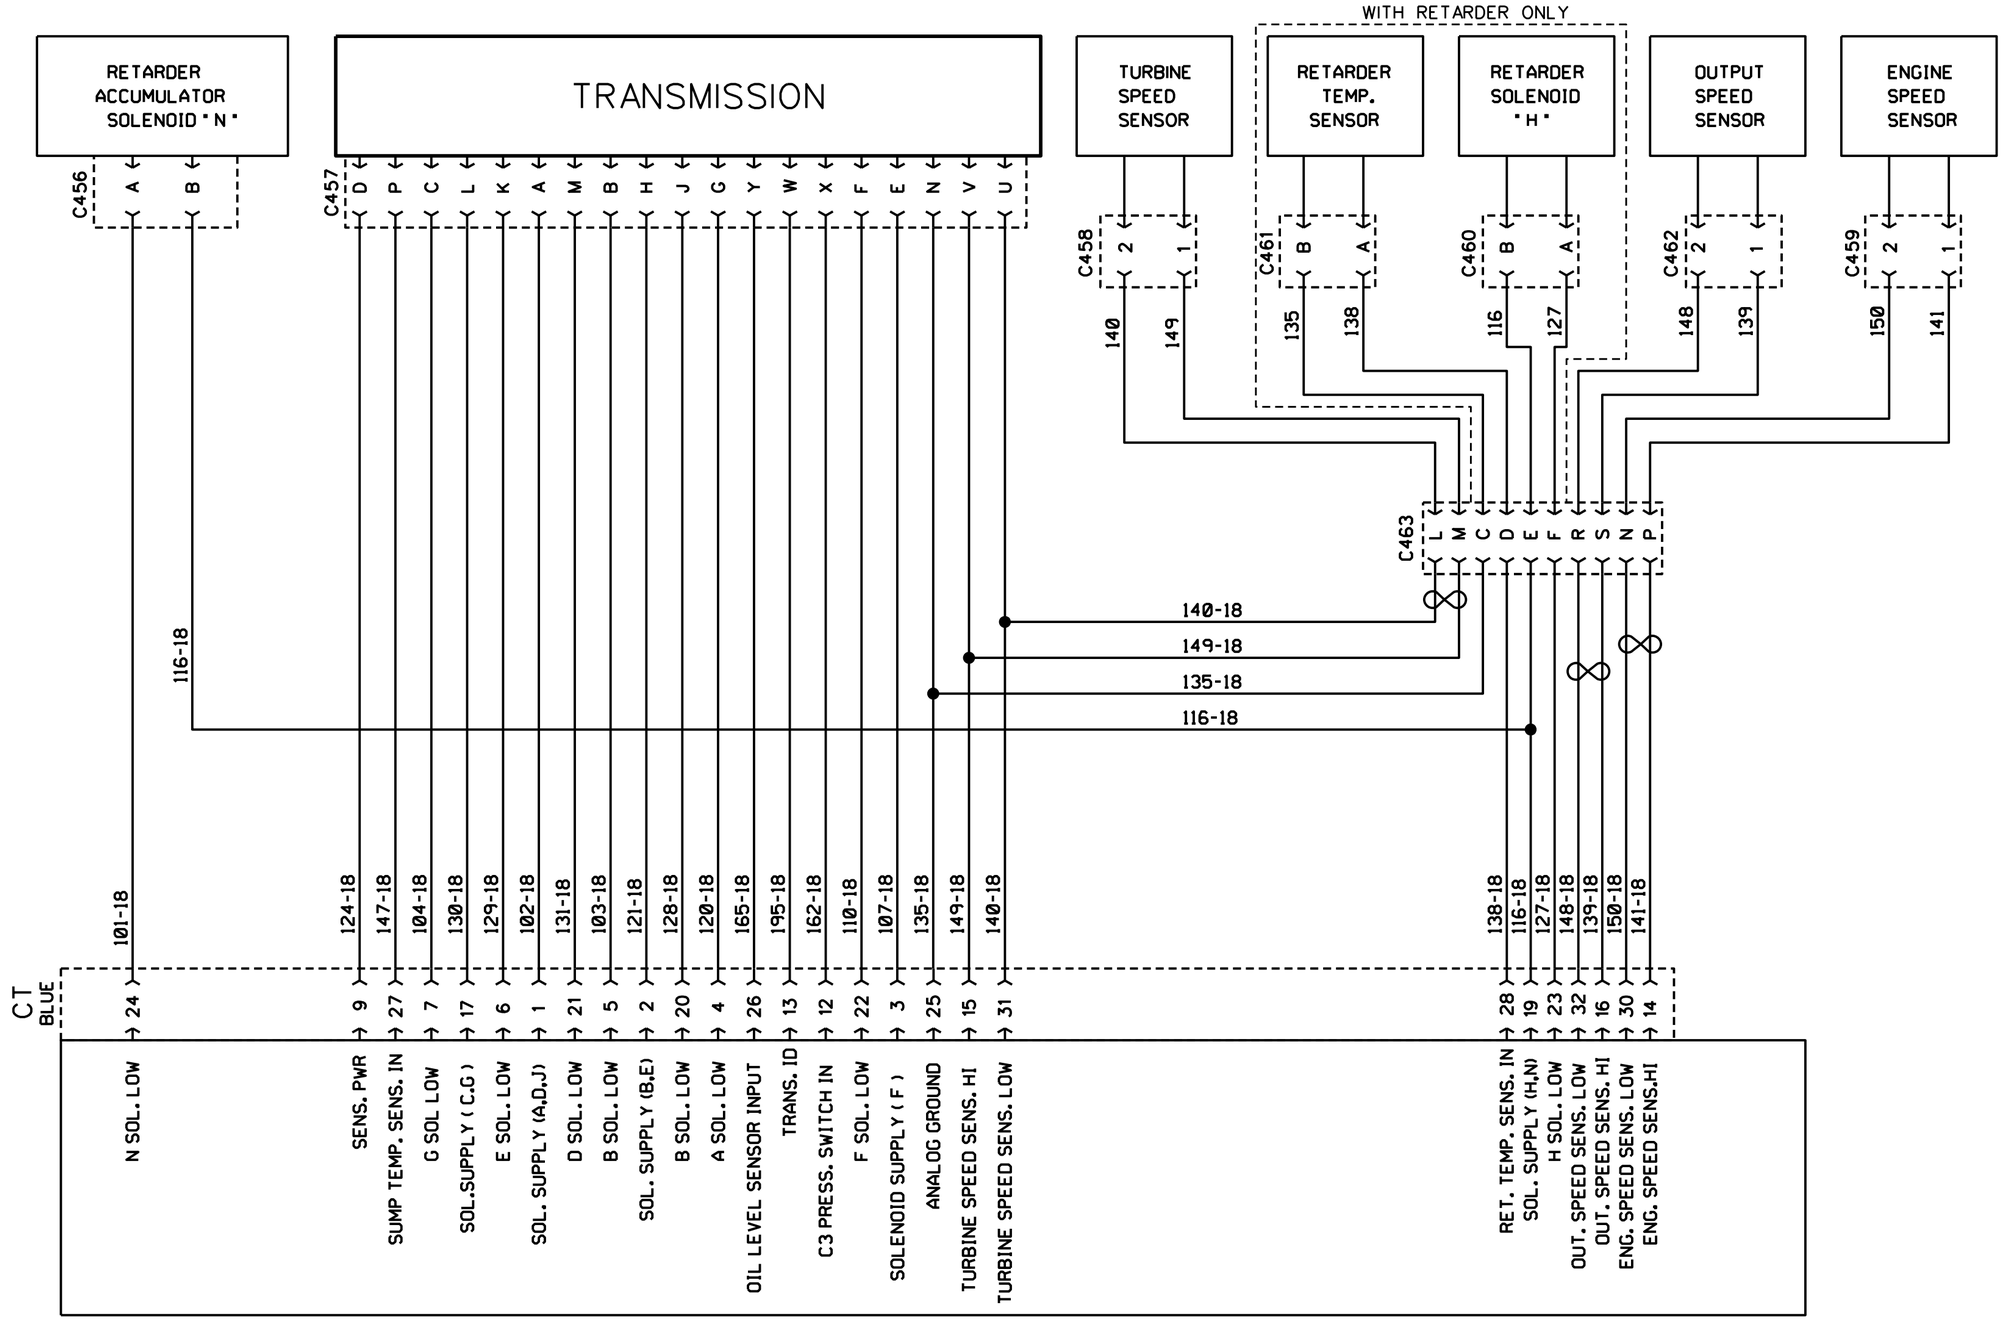

WORLD TRANSMISSION E.C.U. (SUITE)

TRANSMISSION HARNESS

REAR JUNCTION COMPARTIMENT

EATON TRANSMISSION CONTROLLER
32 WAYS
24 WAYS

GEAR SELECT SENSOR
RAIL SELECT SENSOR
REVERSE BALL SWITCH
INPUT SHAFT SPEED SENSOR
OUTPUT SHAFT SPEED SENSOR
MAIN SHAFT SPEED SENSOR
INERTIA BREAK SOLENOID
HI RANGE VALVE
HI
LO
RAIL SELECT MOTOR
GEAR SELECT MOTOR

C464 DDR CONNECTOR
12CE
900
901
319

C28
C29
C30
C31
C34
C36
C39
C40
C22
C25
C33
J28
J29

SYSTEM MANAGER ECU
J1939 LOW
J1939 HIGH
SHIELD

UP
DOWN
SHIFT LEVER

R42
POWER CONNECT RELAY
(LOCATION: BATT. CPT.)

R8
CB24
25A
F2
10A
FB1
C414
BC

FROM 12V HOT WIRE
RR JCT BOX FUSE
F62 SEE P. 2.1

24V IGN RR CTR SW
FROM BAT. JCT CPT
C15 (23) SEE P. 4.1

FROM 12V BATTERY
POST SEE P. 1.1

TO START ENABLE RLY
R10 (86) SEE P. 4.1

FROM DASH LTS RHEOSTAT SEE P 11.2

GEAR DISPLAY

SERVICE PORT

CVI2
C15
C397
C407

DDEC DATA LINK
FROM ECM C32
C1 & C2 SEE P. 5.1

TO DDEC J1939
ECM DATA LINK
SEE C23 P. 5.1

TO 12 VOLTS POWER
EATON TRANSMISSION
SEE SAME PAGE

FROM 12 VOLTS BATT.
CB24 SEE THIS PAGE

CHASSIS GND STUD
BATT. CPT.

25 amp
15 amp
120 ohms

EATON TRANSMISSION E.C.U.

TRANSMISSION HARNESS

REAR JUNCTION COMPARTIMENT

EATON TRANSMISSION CONTROLLER
32 WAYS
24 WAYS

GEAR SELECT SENSOR
RAIL SELECT SENSOR
REVERSE BALL SWITCH
INPUT SHAFT SPEED SENSOR
OUTPUT SHAFT SPEED SENSOR
MAIN SHAFT SPEED SENSOR
INERTIA BREAK SOLENOID
HI RANGE VALVE
HI
LO
RAIL SELECT MOTOR
GEAR SELECT MOTOR

C464 DDR CONNECTOR
12CE
900
901
319

SYSTEM MANAGER ECU
C30
C31
J1939 LOW
J1939 HIGH
SHIELD

C34
UP
DOWN

C36
SHIFT LEVER

FROM 12V HOT WIRE
RR JCT BOX FUSE
F62 SEE P. 2.1

24V IGN RR CTR SW
FROM BAT. JCT CPT
C15 (23) SEE P. 4.1

FROM 12V BATTERY
POST SEE P. 1.1

TO START ENABLE RLY
R10 (86) SEE P. 4.1

FROM DASH LTS RHEOSTAT SEE P 11.2

R8
CB24
25A
C22
C414
F2
10A
FB1

TO JCT • C
SEE P. 6.3

R42
POWER CONNECT RELAY
(LOCATION: BATT. CPT.)

C33
SERVICE PORT

C40
C25
120 ohms

GEAR DISPLAY
C39

CVI2
C15
C397
C407

DDEC DATA LINK
FROM ECM C32
C1 & C2 SEE P. 5.1

TO DDEC J1939
ECM DATA LINK
SEE C23 P. 5.1

TO 12 VOLTS POWER
EATON TRANSMISSION
SEE SAME PAGE

FROM 12 VOLTS BATT.
CB24 SEE THIS PAGE

CHASSIS GND STUD
BATT. CPT.

333-10
0EA-10
25 amp
15 amp
RED-12
BLK-12


EATON TRANSMISSION E.C.U.

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 6.3	REVISION 04

PREVOST

WIRING DIAGRAM


CLUSTER

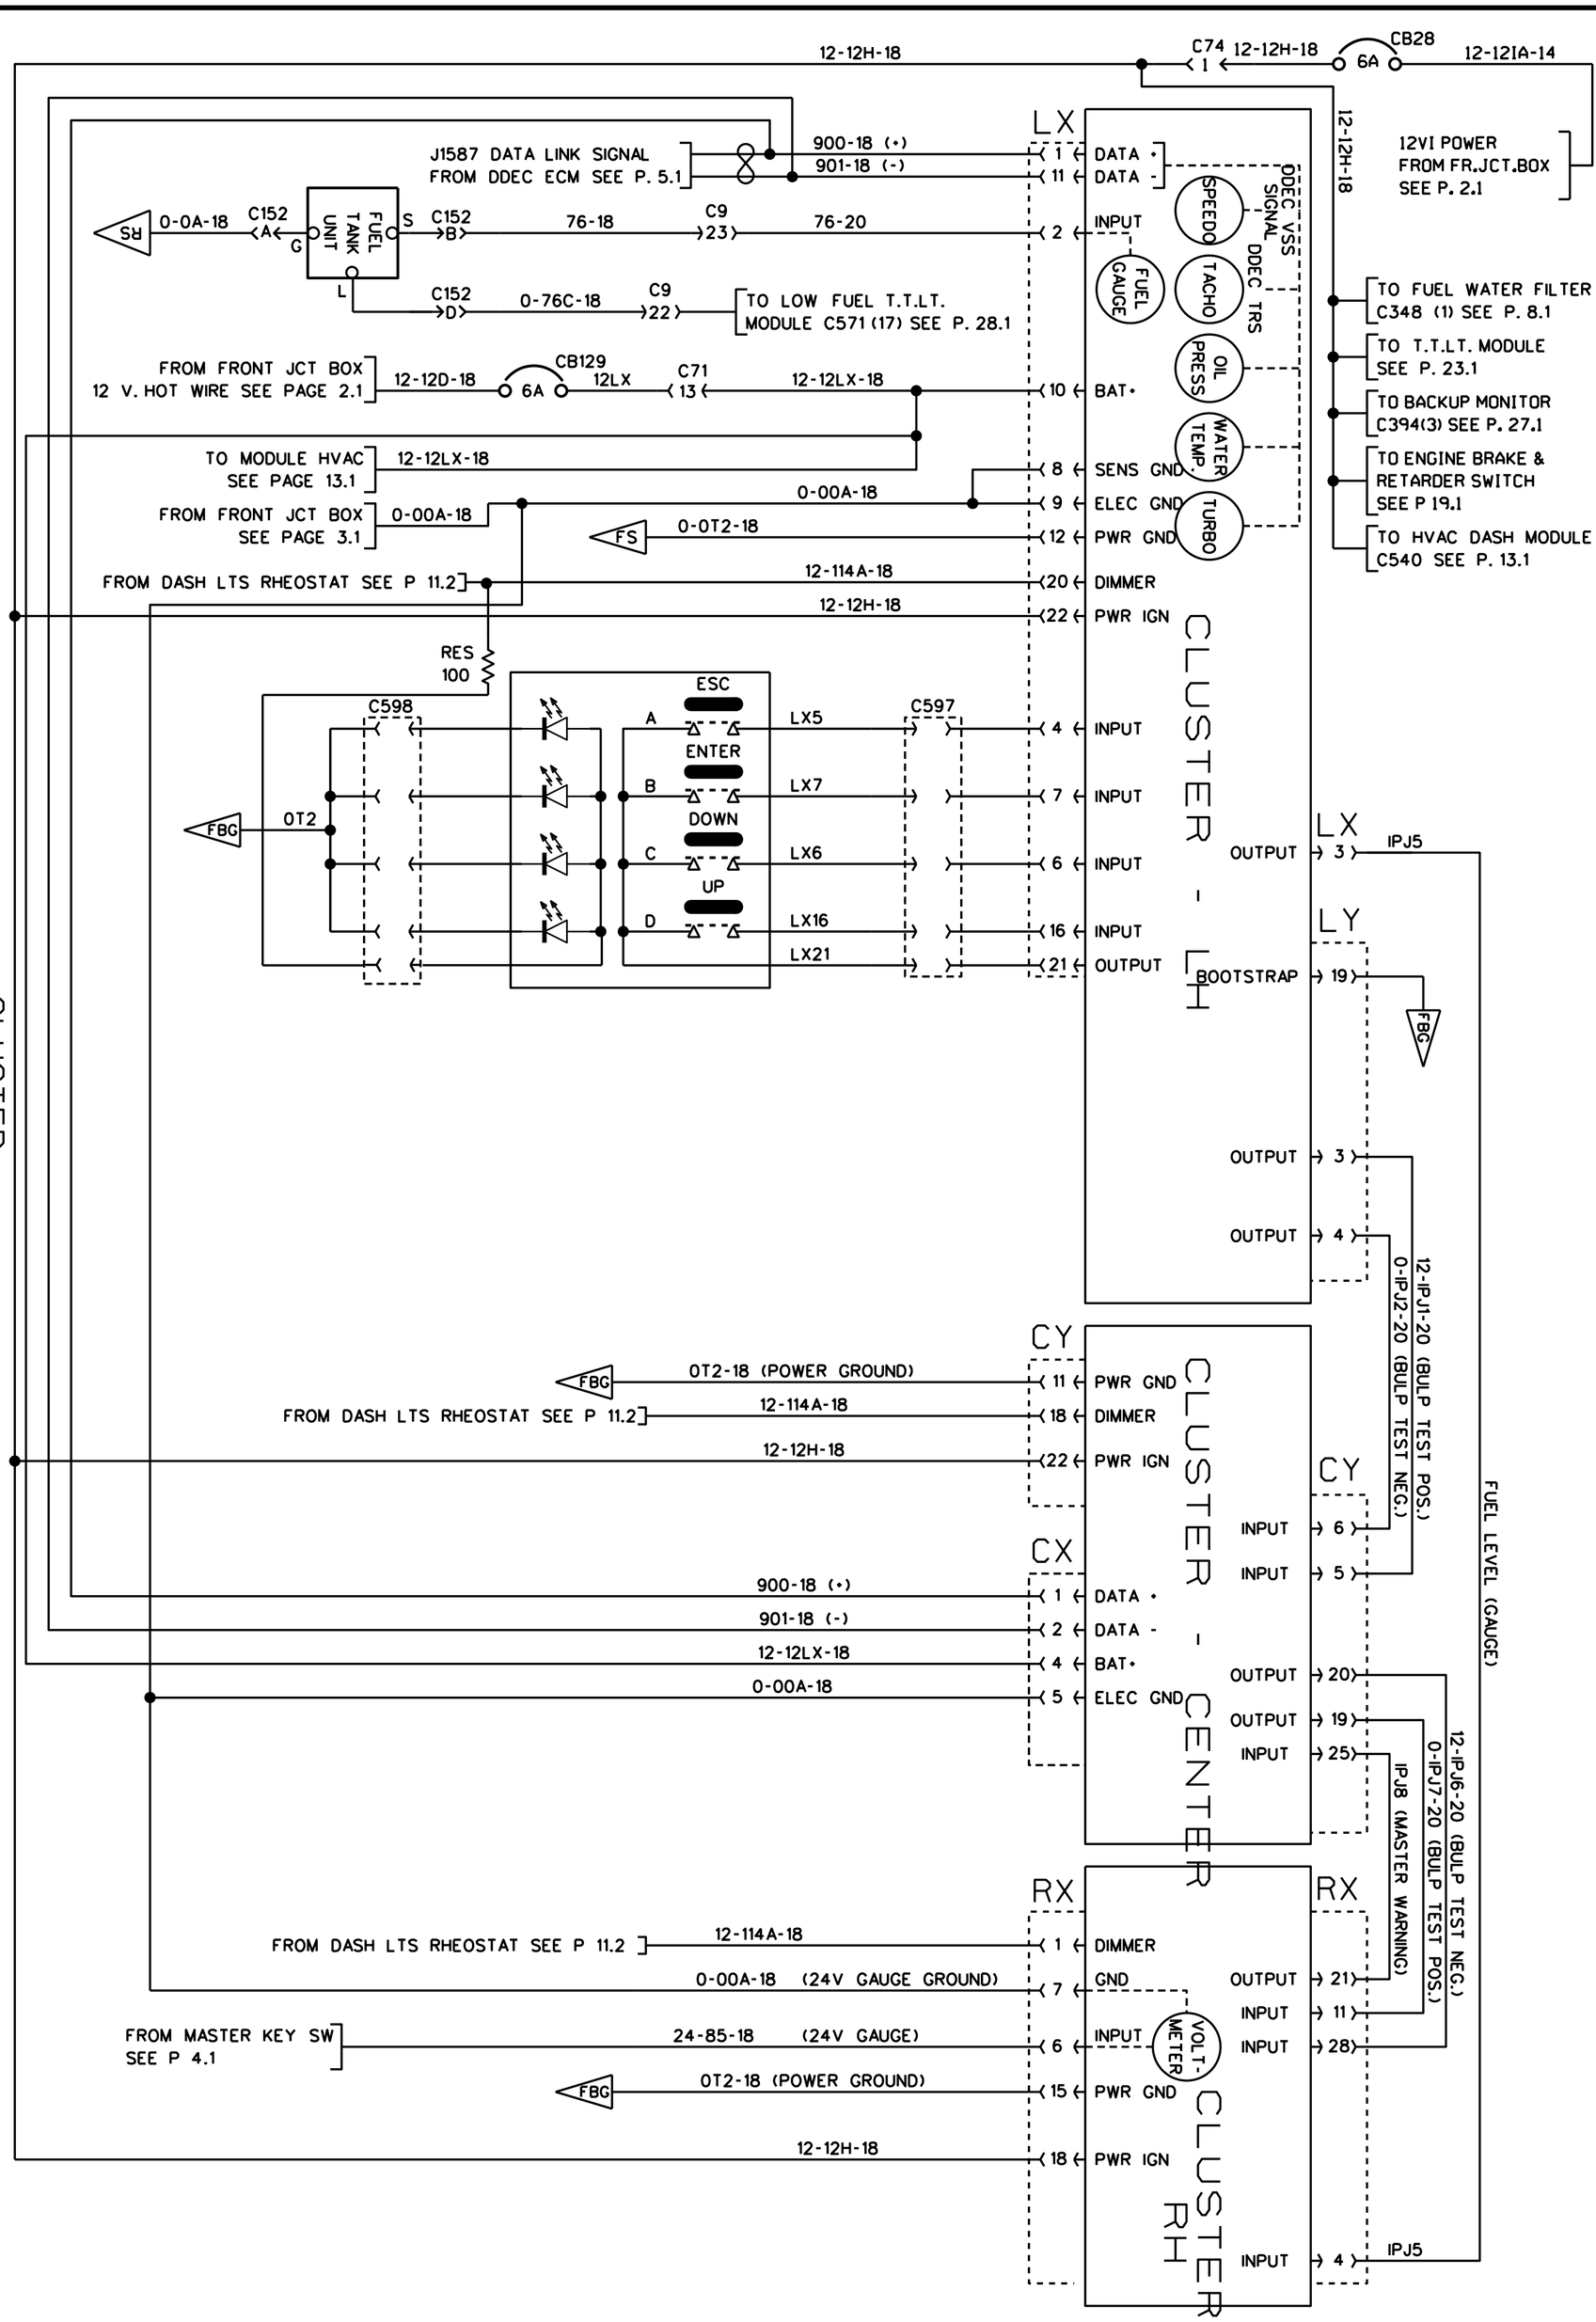


NO: D060949


PAGE: 7.1


REVISION 00

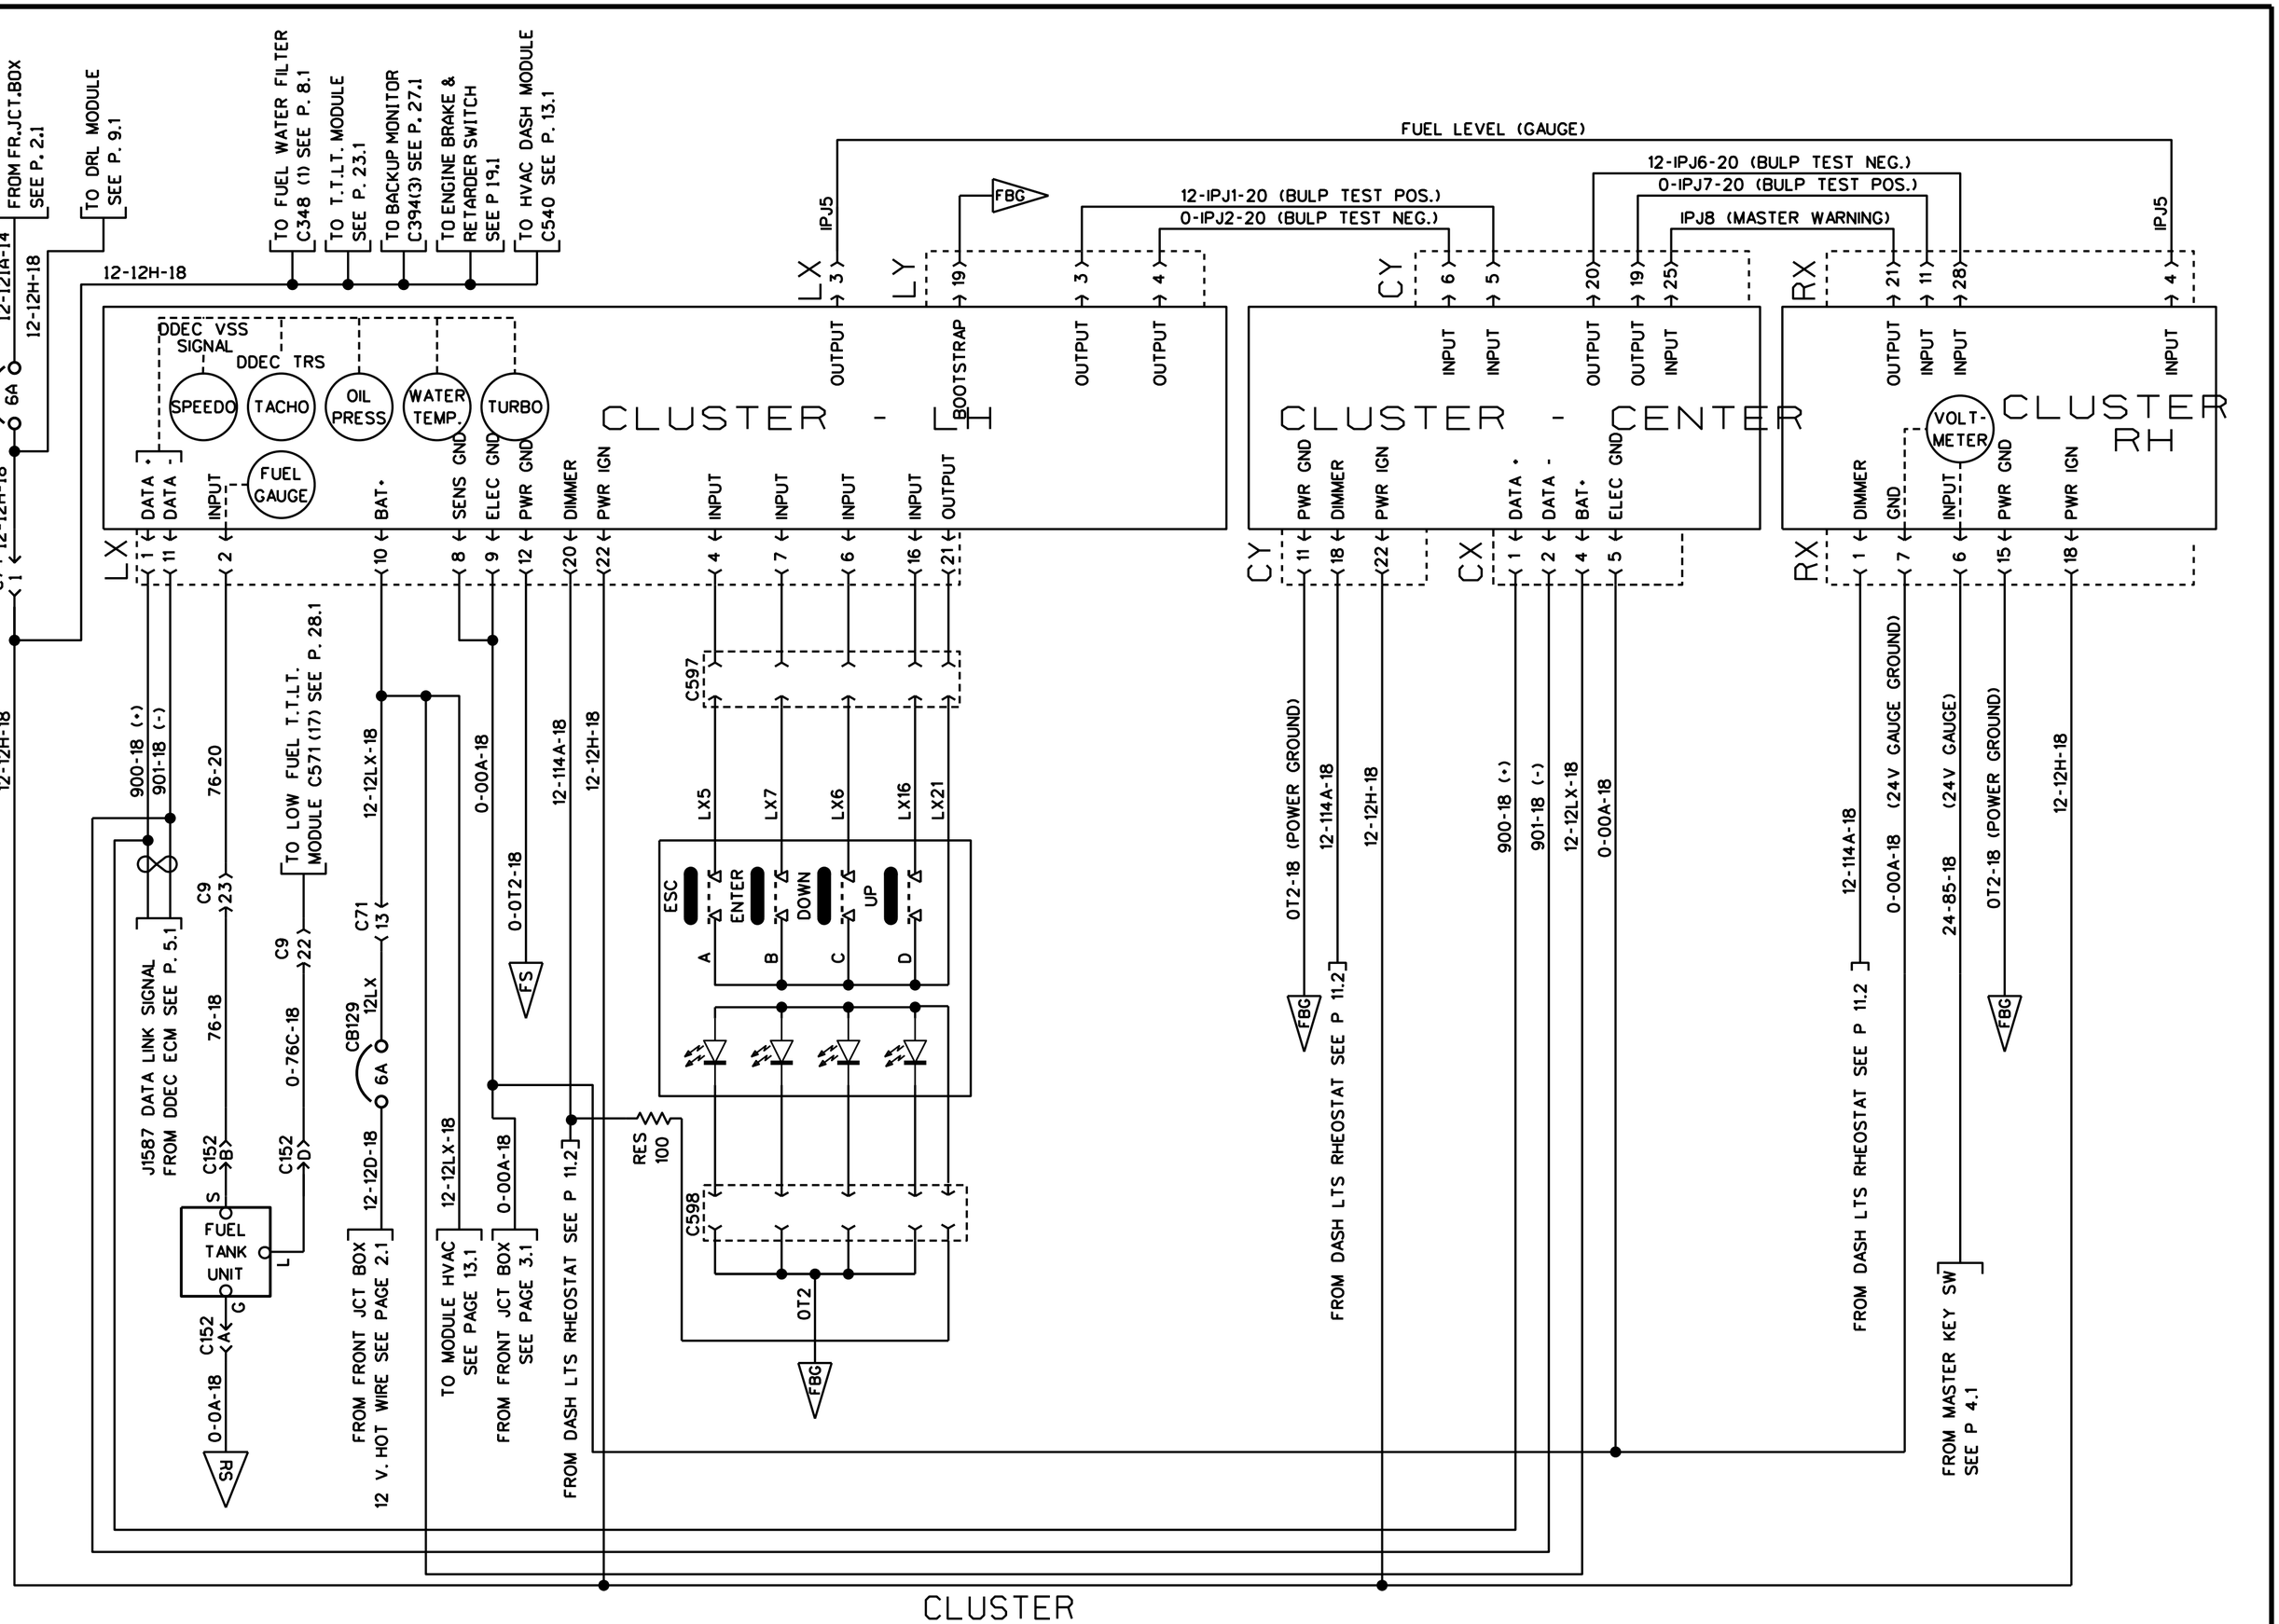


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 7.1	REVISION 04

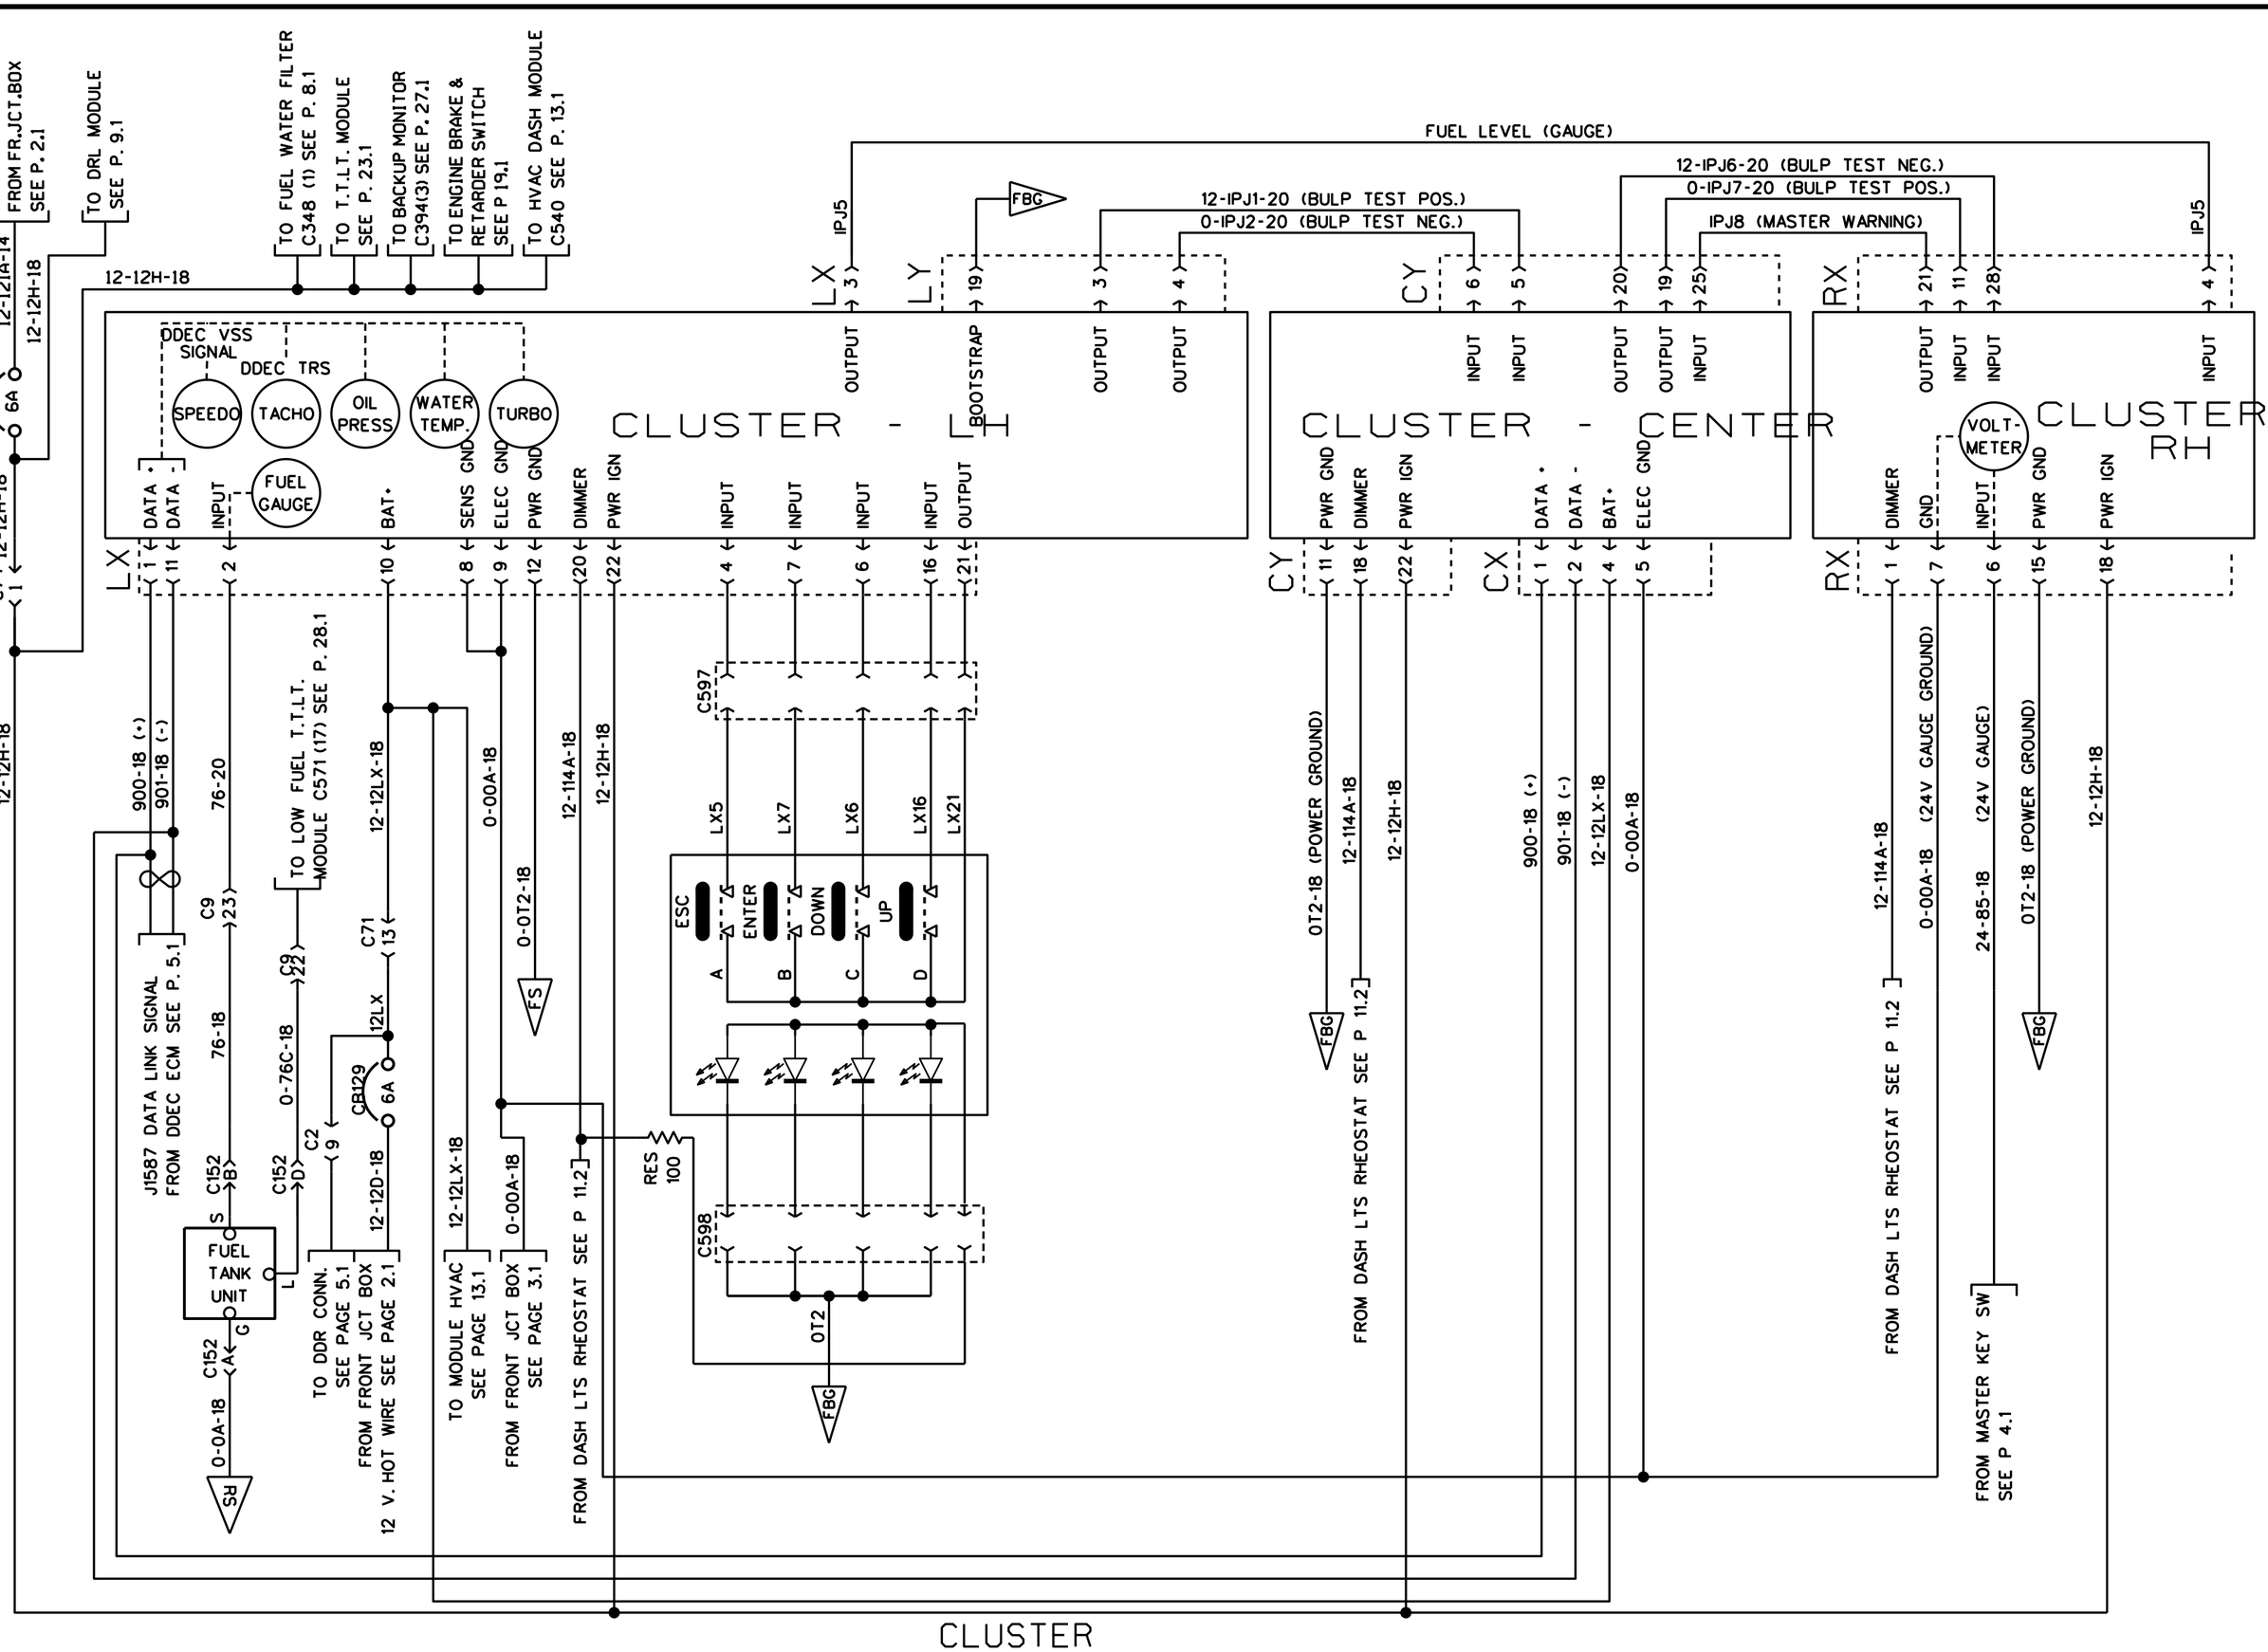
12V1 POWER FROM FR.JCT.BOX SEE P. 2.1
TO DRL MODULE SEE P. 9.1
TO FUEL WATER FILTER C348 (1) SEE P. 8.1
TO T.T.LT. MODULE SEE P. 23.1
TO BACKUP MONITOR C394(3) SEE P. 27.1
TO ENGINE BRAKE & RETARDER SWITCH SEE P 19.1
TO HVAC DASH MODULE C540 SEE P. 13.1
12-12H-18
12-12A-14
CB28
6A
C74 12-12H-18
FUEL LEVEL (GAUGE)
12-IPJ6-20 (BULP TEST NEG.)
0-IPJ7-20 (BULP TEST POS.)
IPJ8 (MASTER WARNING)
12-IPJ1-20 (BULP TEST POS.)
0-IPJ2-20 (BULP TEST NEG.)
IPJ5
FBG
LX
LY
CY
CX
RX
CLUSTER - LH
CLUSTER - CENTER
CLUSTER RH
DDEC VSS SIGNAL
DDEC TRS
SPEEDO
TACHO
OIL PRESS
WATER TEMP.
TURBO
FUEL GAUGE
VOLT-METER
OUTPUT
BOOTSTRAP
INPUT
DATA +
DATA -
BAT+
SENS GND
ELEC GND
PWR GND
DIMMER
PWR IGN
GND
12-12H-18
900-18 (+)
901-18 (-)
76-20
12-12LX-18
0-00A-18
12-114A-18
C597
C598
LX5
LX7
LX6
LX16
LX21
ESC
ENTER
DOWN
UP
A
B
C
D
RES 100
0T2
0-0T2-18
FS
RS
0T2-18 (POWER GROUND)
FROM DASH LTS RHEOSTAT SEE P 11.2
24-85-18
FROM MASTER KEY SW SEE P 4.1
J1587 DATA LINK SIGNAL FROM DDEC ECM SEE P. 5.1
C152
C9
C8
C71
C2
76-18
0-76C-18
12LX
12-12D-18
CB129
FUEL TANK UNIT
TO DDR CONN. SEE PAGE 5.1
FROM FRONT JCT BOX
12 V. HOT WIRE SEE PAGE 2.1
TO LOW FUEL T.T.LT. MODULE C571 (17) SEE P. 28.1
TO MODULE HVAC SEE PAGE 13.1
FROM FRONT JCT BOX SEE PAGE 3.1
FROM DASH LTS RHEOSTAT SEE P 11.2
CLUSTER

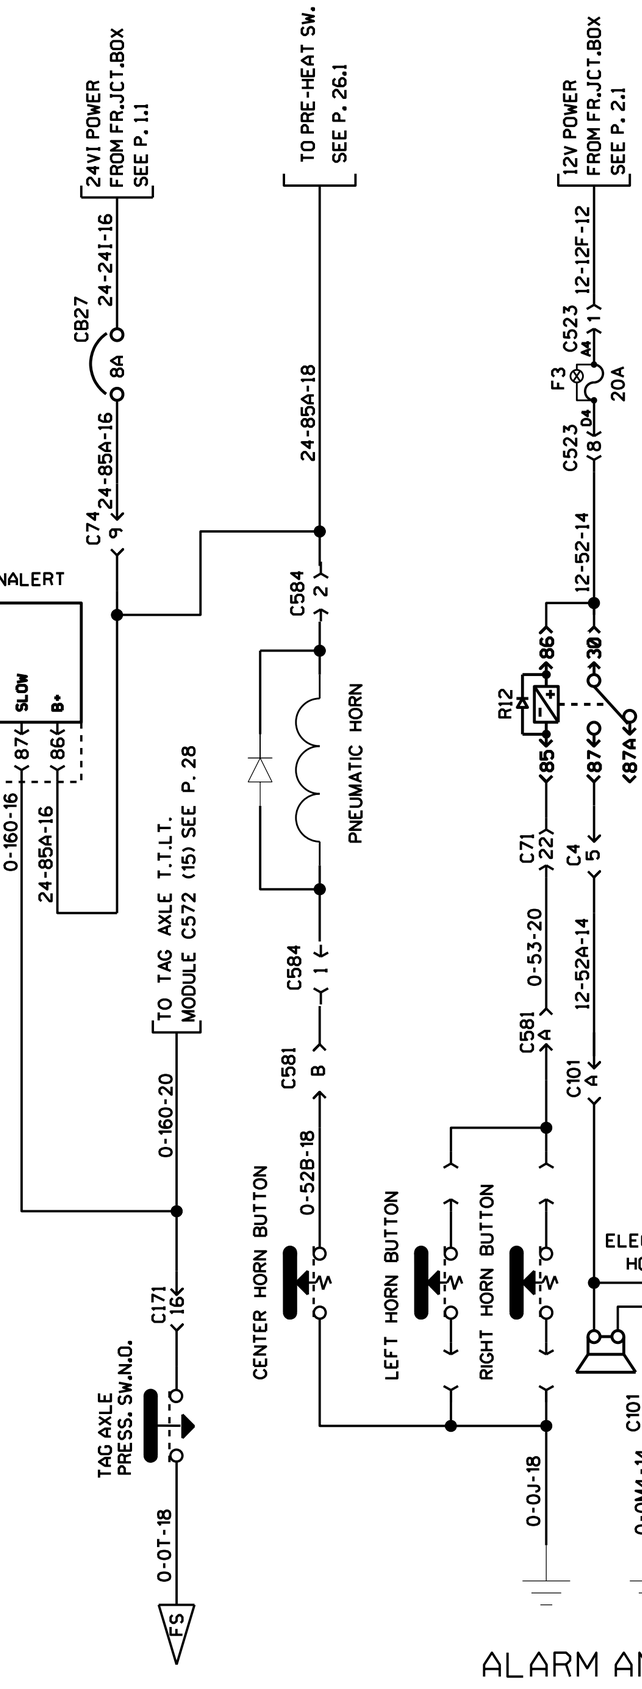

SONALERT
AA1
85
87
86
FAST
SLOW
B+
0-160-16
24-85A-16
C74
9
24-85A-16
CB27
24-241-16
8A
24VI POWER
FROM FR.JCT.BOX
SEE P. 1.1
TO PRE-HEAT SW.
SEE P. 26.1
24-85A-18
C584
2
PNEUMATIC HORN
TO TAG AXLE T.T.L.T.
MODULE C572 (15) SEE P. 28
0-160-20
C171
16
TAG AXLE
PRESS. SW.N.O.
0-0T-18
FS
C584
1
C581
B
0-52B-18
CENTER HORN BUTTON
LEFT HORN BUTTON
RIGHT HORN BUTTON
0-0J-18
C581
A
0-53-20
C101
A
12-52A-14
ELECTRICAL
HORNS
C101
B
0-0M4-14
R12
86
85
87
30
87A
C523
8
12-52-14
F3
04
20A
C523
A4
1
12-12F-12
12V POWER
FROM FR.JCT.BOX
SEE P. 2.1
C71
22
0-53-20
C4
5
12-52A-14
24-123A-18
C523
7
03
F4
5A
C523
A3
2
24-24D-14
24V HOT WIRE
FROM FR.JCT.BOX
SEE P. 1.1
TO DIGITAL CLOCK
SEE P. 14.1
24-123A-18
RS17
220 OHMS
C340
1
RED
PIEZO
BLK
2
TO FIRE ALARM T.T.L.T.
MODULE C571 (12) SEE P. 28
0-123B-18
C71
4
C340
C6
4
C20
22
0-123B-18
12V HOT WIRE
FROM RR JCT BOX
FUSE F62 SEE P. 2.1
12-12CE-18
RS
0-0A-18
ENGINE CPT LH
SENSOR
ENGINE CPT RH
SENSOR
BATTERIES CPT
SENSOR
C535
3
2
1
TRIG
12V
GRD
HOT TEMPERATURE DETECTOR MODULE
ALARM AND SIGNAL
TO TTLT WINDOW AJAR
C572 (11) SEE PAGE. 28.1
OT2
RS
C582
A
B
C603
1
2
C601
2
1
0-260-20
0-0T2-20
0-0T2-20
0-260-20
C602
2
1
MAGNETIC SWITCH
N.C. - WINDOW OPEN
ONLY ON H3-45
R.H.
L.H.
WINDOW AJAR

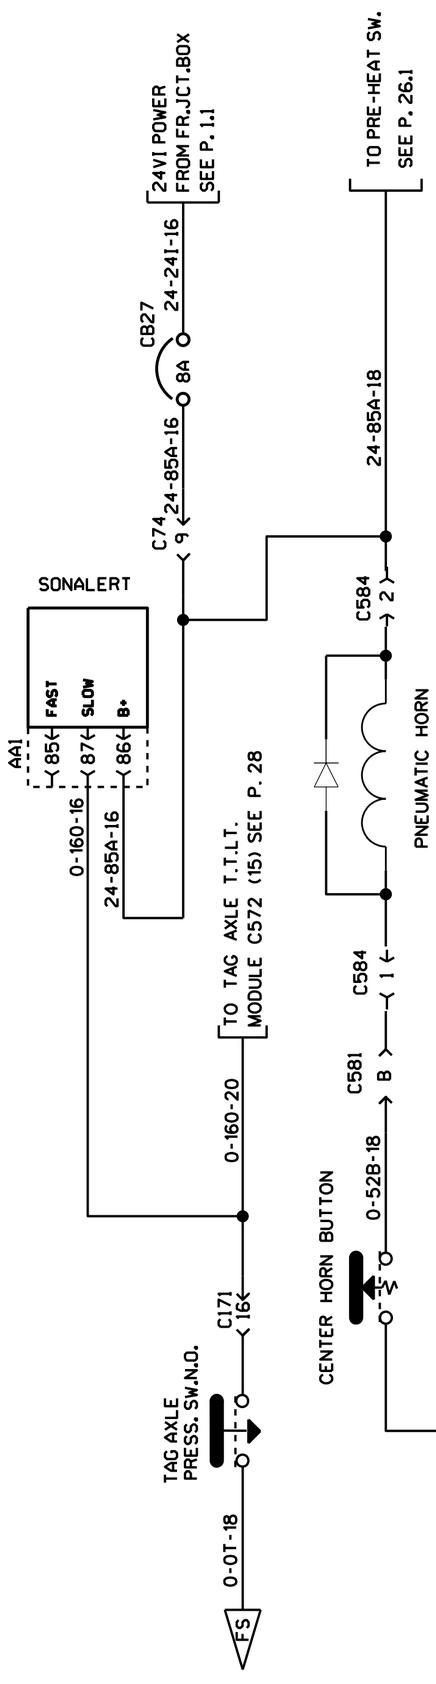


ALARM AND SIGNAL

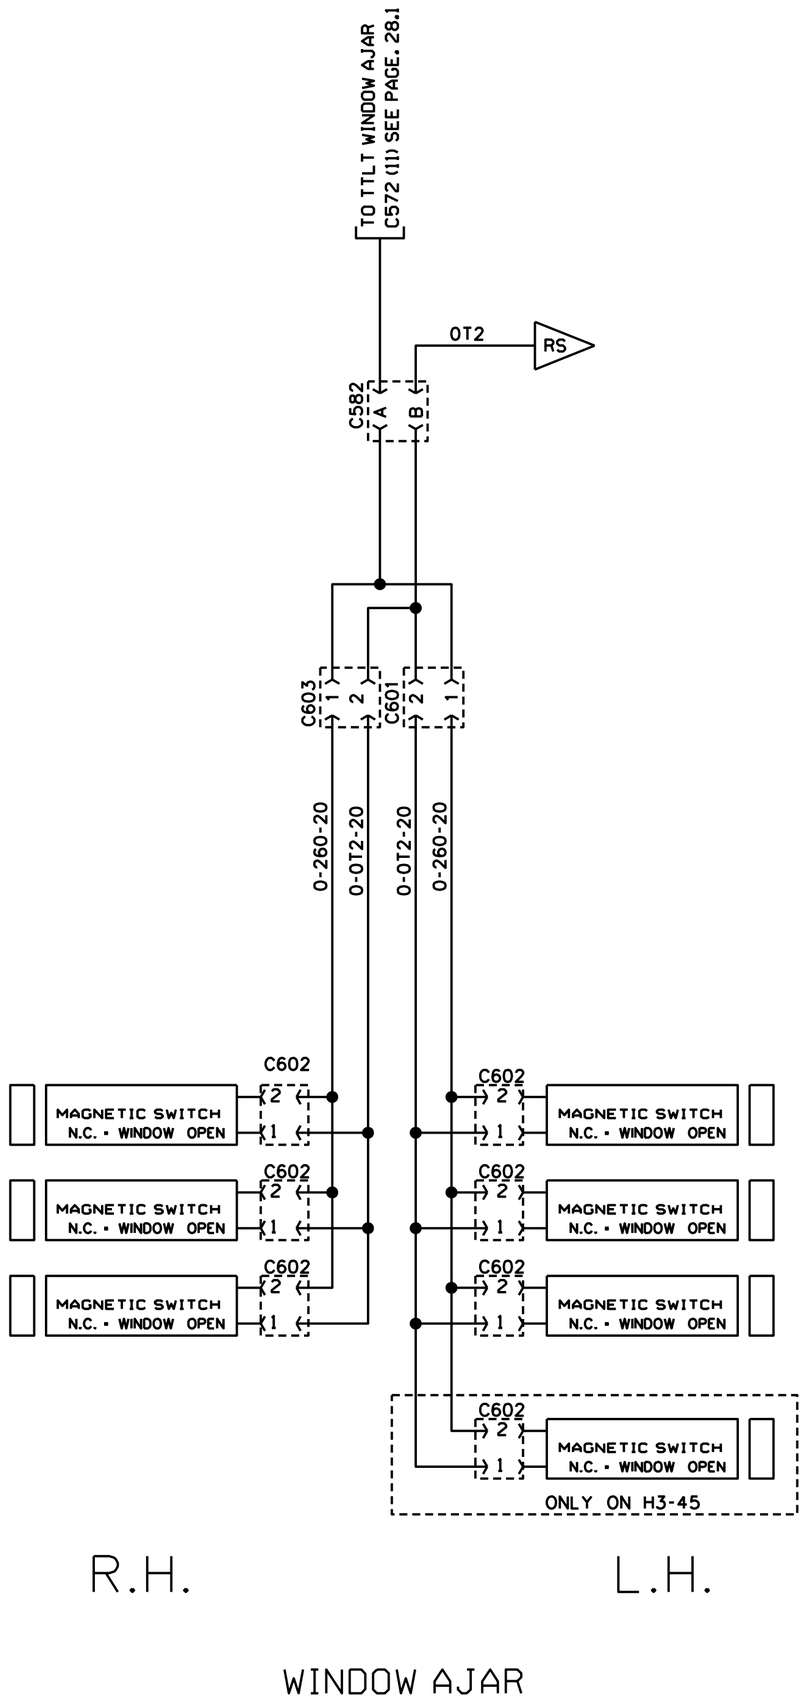

WINDOW AJAR

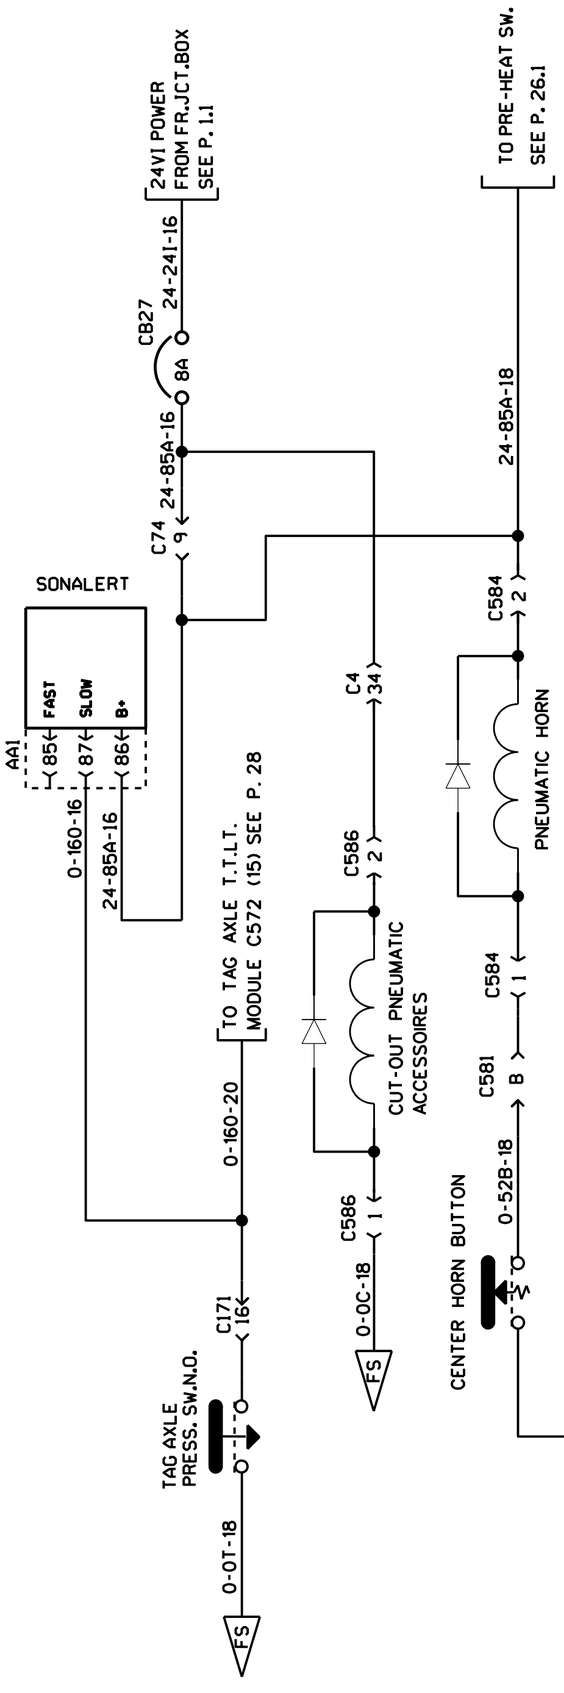


ALARM AND SIGNAL

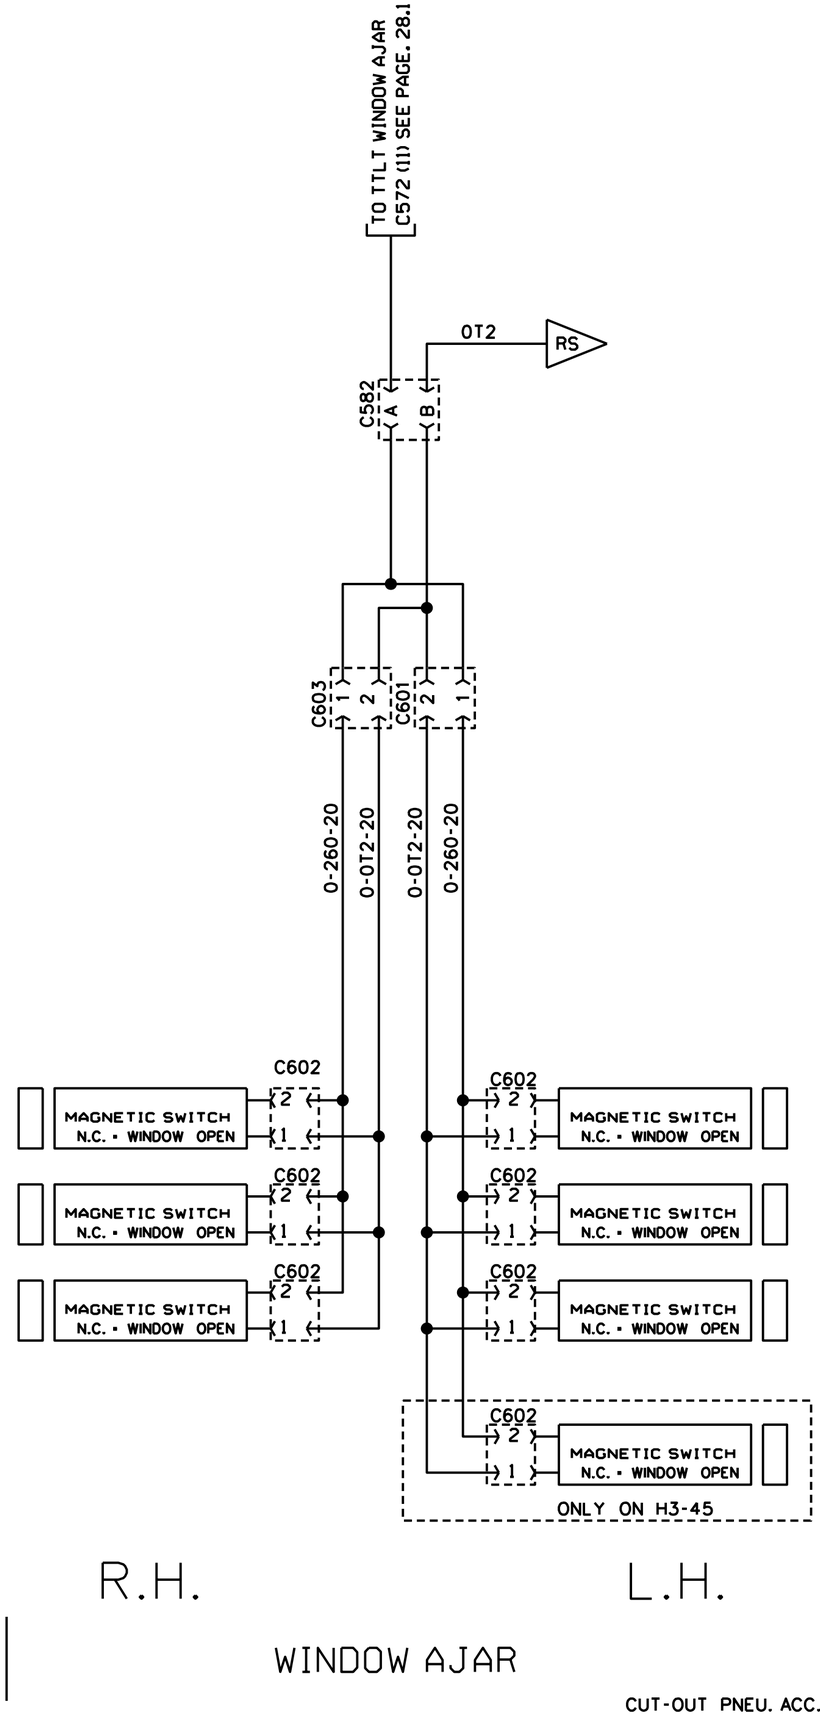



WINDOW AJAR

CUT-OUT PNEU. ACC.

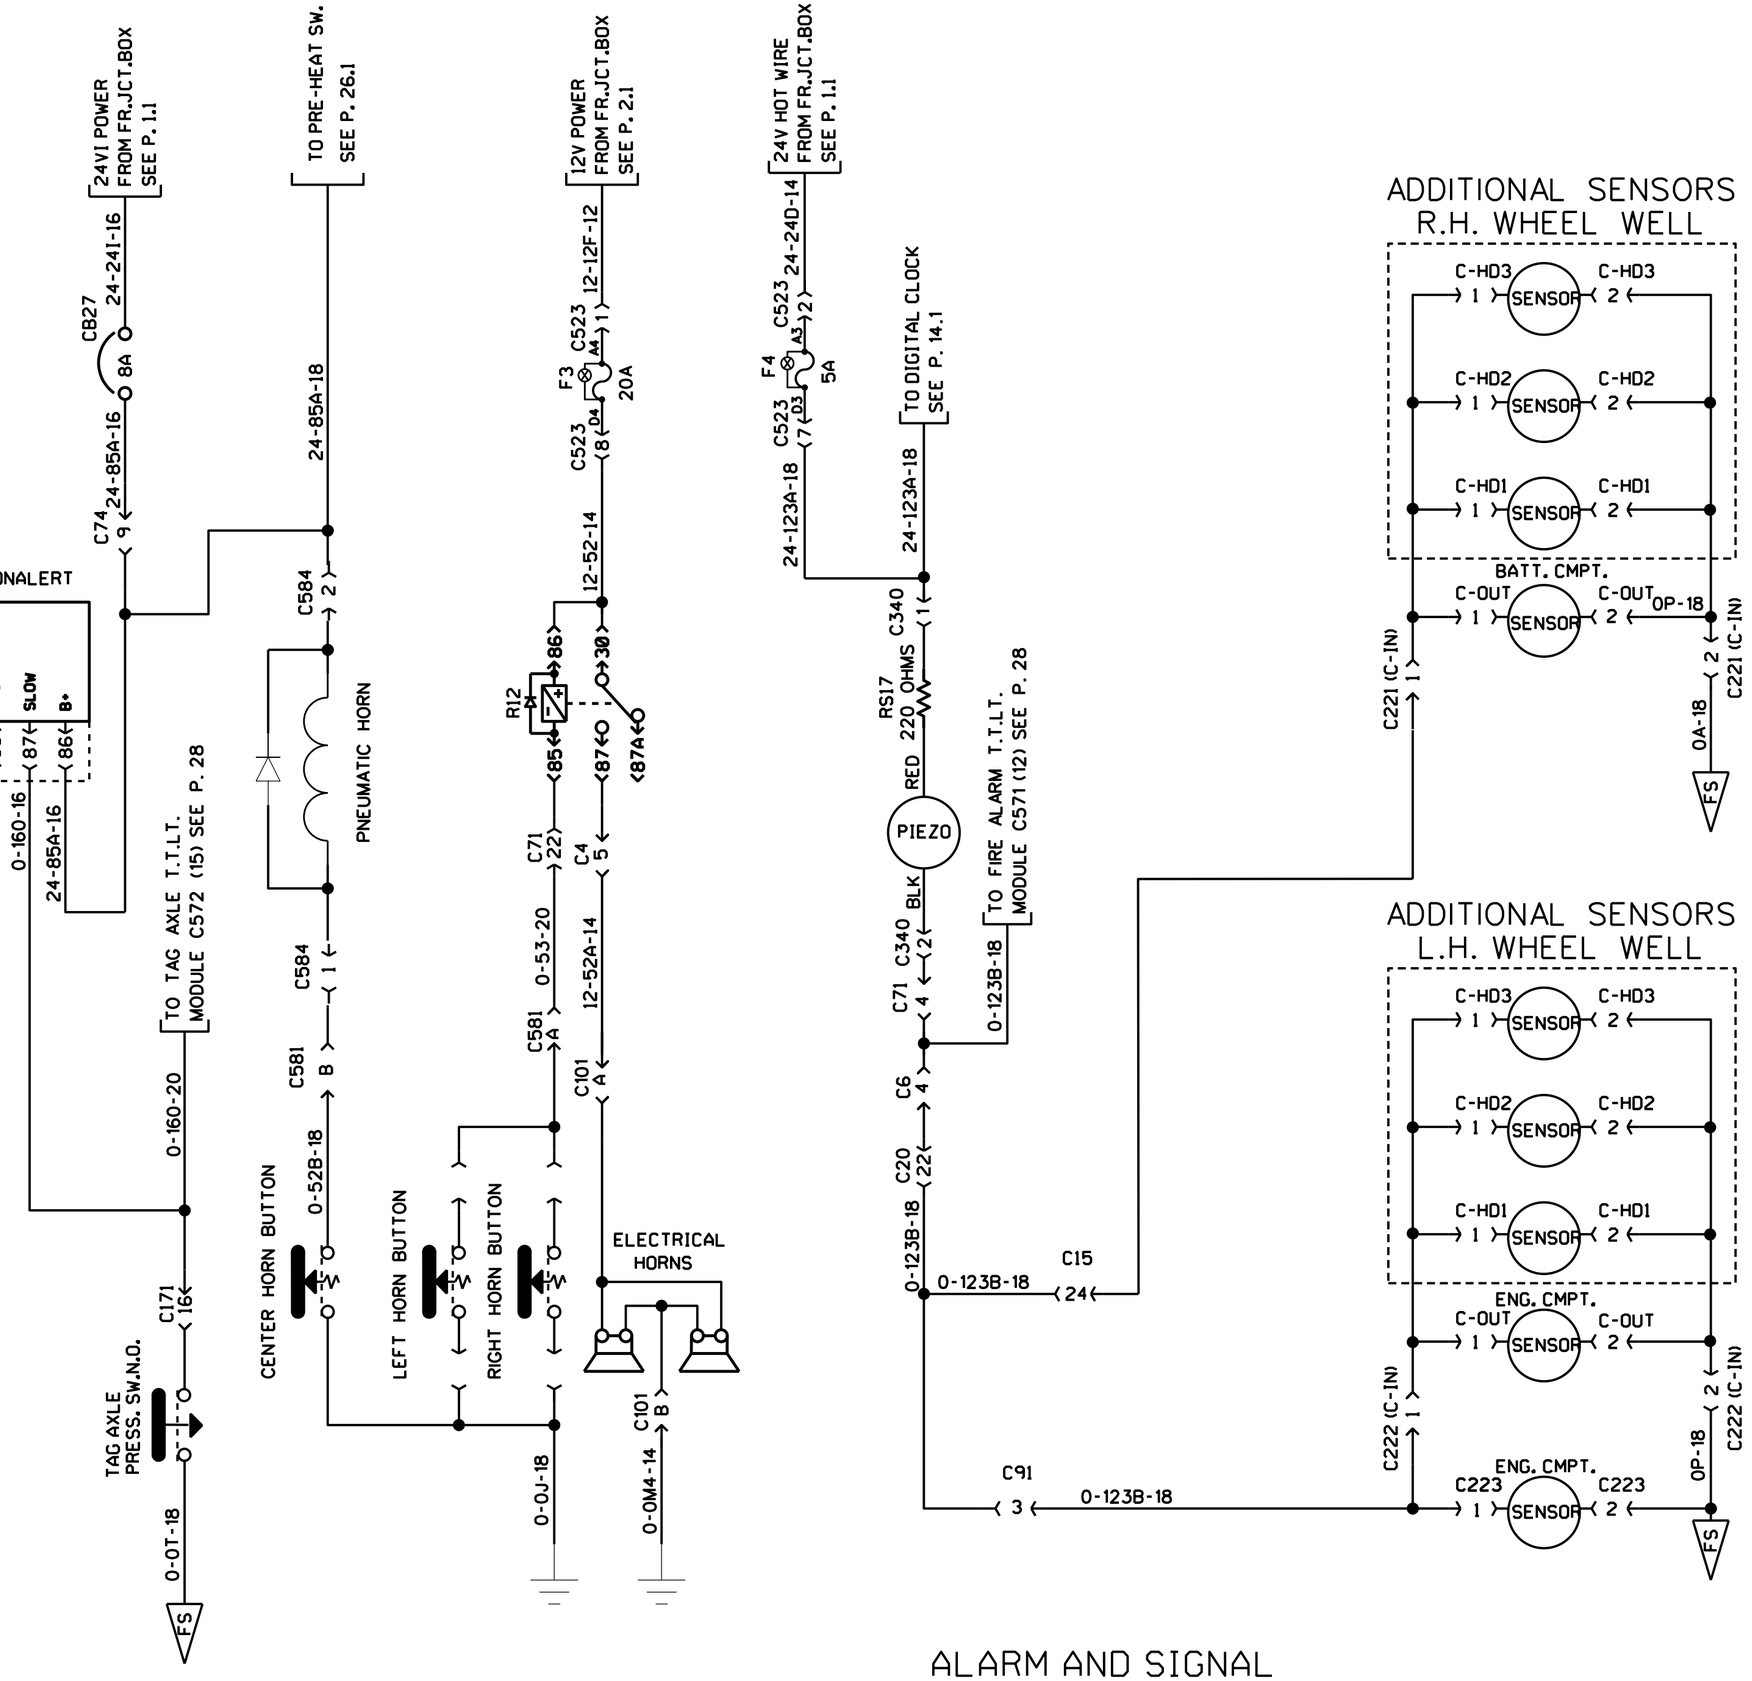



ALARM AND SIGNAL

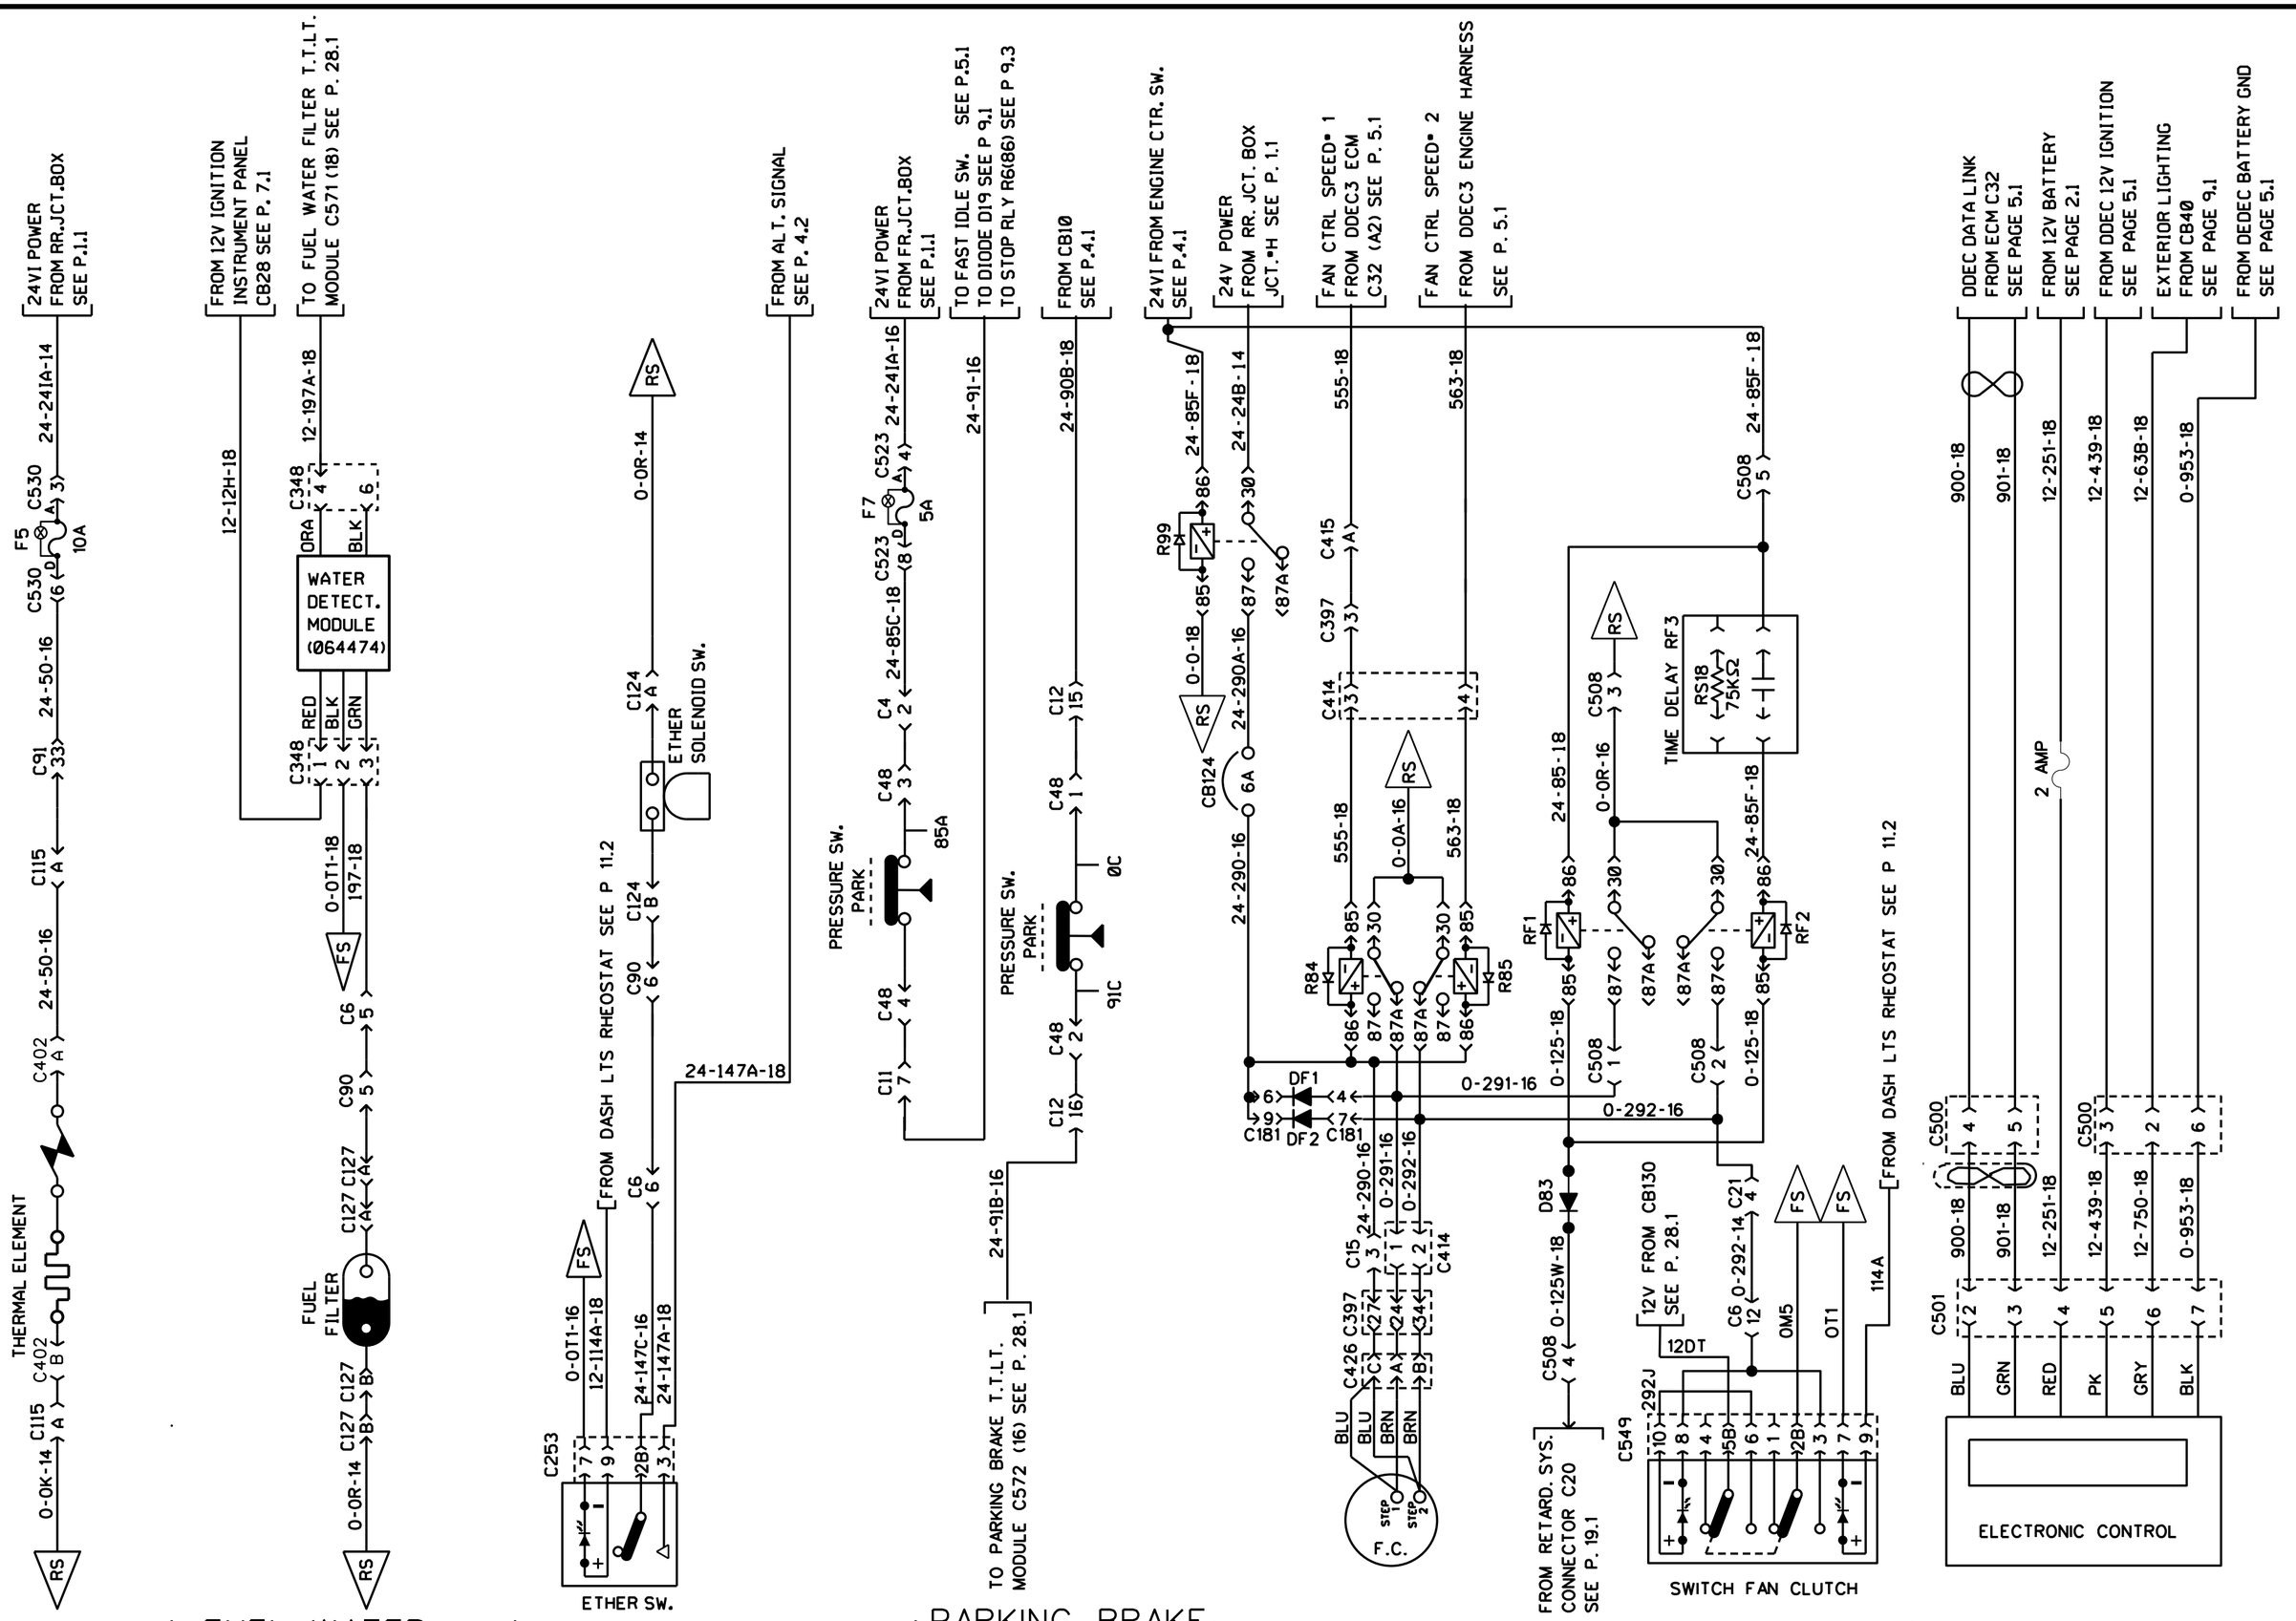
AIR DRYER
24VI POWER FROM RR.JCT.BOX SEE P.1.1
F5 10A
C530
24-241A-14
24-50-16
C91
C115
C402
THERMAL ELEMENT
0-0K-14
RS
FUEL WATER FILTER
FROM 12V IGNITION INSTRUMENT PANEL CB28 SEE P. 7.1
12-12H-18
TO FUEL WATER FILTER T.T.L.T. MODULE C571 (18) SEE P. 28.1
12-197A-18
C348
WATER DETECT. MODULE (064474)
RED
BLK
GRN
ORA
BLK
0-0T1-18
197-18
FS
FUEL FILTER
C127
0-0R-14
ETHER COLD START
FROM ALT. SIGNAL SEE P. 4.2
0-0R-14
C124
ETHER SOLENOID SW.
FROM DASH LTS RHEOSTAT SEE P 11.2
0-0T1-16
12-114A-18
24-147C-16
24-147A-18
C253
ETHER SW.
PARKING BRAKE SWITCH
24VI POWER FROM FR.JCT.BOX SEE P.1.1
F7 5A
C523
24-241A-16
TO FAST IDLE SW. SEE P.5.1
TO DIODE D19 SEE P 9.1
TO STOP RLY R6(86) SEE P 9.3
24-91-16
FROM CB10 SEE P.4.1
24-90B-18
24-85C-18
C4
C48
PRESSURE SW. PARK
85A
C11
24-91B-16
TO PARKING BRAKE T.T.L.T. MODULE C572 (16) SEE P. 28.1
91C
0C
RADIATOR FAN CLUTCH
24VI FROM ENGINE CTR. SW. SEE P.4.1
24V POWER FROM RR. JCT. BOX JCT.•H SEE P. 1.1
FAN CTRL SPEED• 1 FROM DDEC3 ECM C32 (A2) SEE P. 5.1
FAN CTRL SPEED• 2 FROM DDEC3 ENGINE HARNESS SEE P. 5.1
R99
24-85F-18
24-24B-14
CB124 6A
24-290A-16
0-0-18
555-18
563-18
C415
C414
C397
TIME DELAY RF3
RS18 75KΩ
C508
0-0R-16
0-0A-16
R84
R85
RF1
RF2
DF1
DF2
C181
0-291-16
0-292-16
0-125-18
C508
C426 C397 C15 C414
BLU BRN
F.C.
STEP 1
STEP 2
D83
0-125W-18
FROM RETARD. SYS. CONNECTOR C20 SEE P. 19.1
12V FROM CB130 SEE P. 28.1
12DT
C549
292J
0M5
OT1
C6 0-292-14 C21
114A
FROM DASH LTS RHEOSTAT SEE P 11.2
SWITCH FAN CLUTCH
PRODRIVER
DDEC DATA LINK FROM ECM C32 SEE PAGE 5.1
900-18
901-18
2 AMP
FROM 12V BATTERY SEE PAGE 2.1
12-251-18
FROM DDEC 12V IGNITION SEE PAGE 5.1
12-439-18
12-63B-18
EXTERIOR LIGHTING FROM CB40 SEE PAGE 9.1
0-953-18
FROM DEDEC BATTERY GND SEE PAGE 5.1
C500
C501
BLU
GRN
RED
PK
GRY
BLK
12-750-18
ELECTRONIC CONTROL

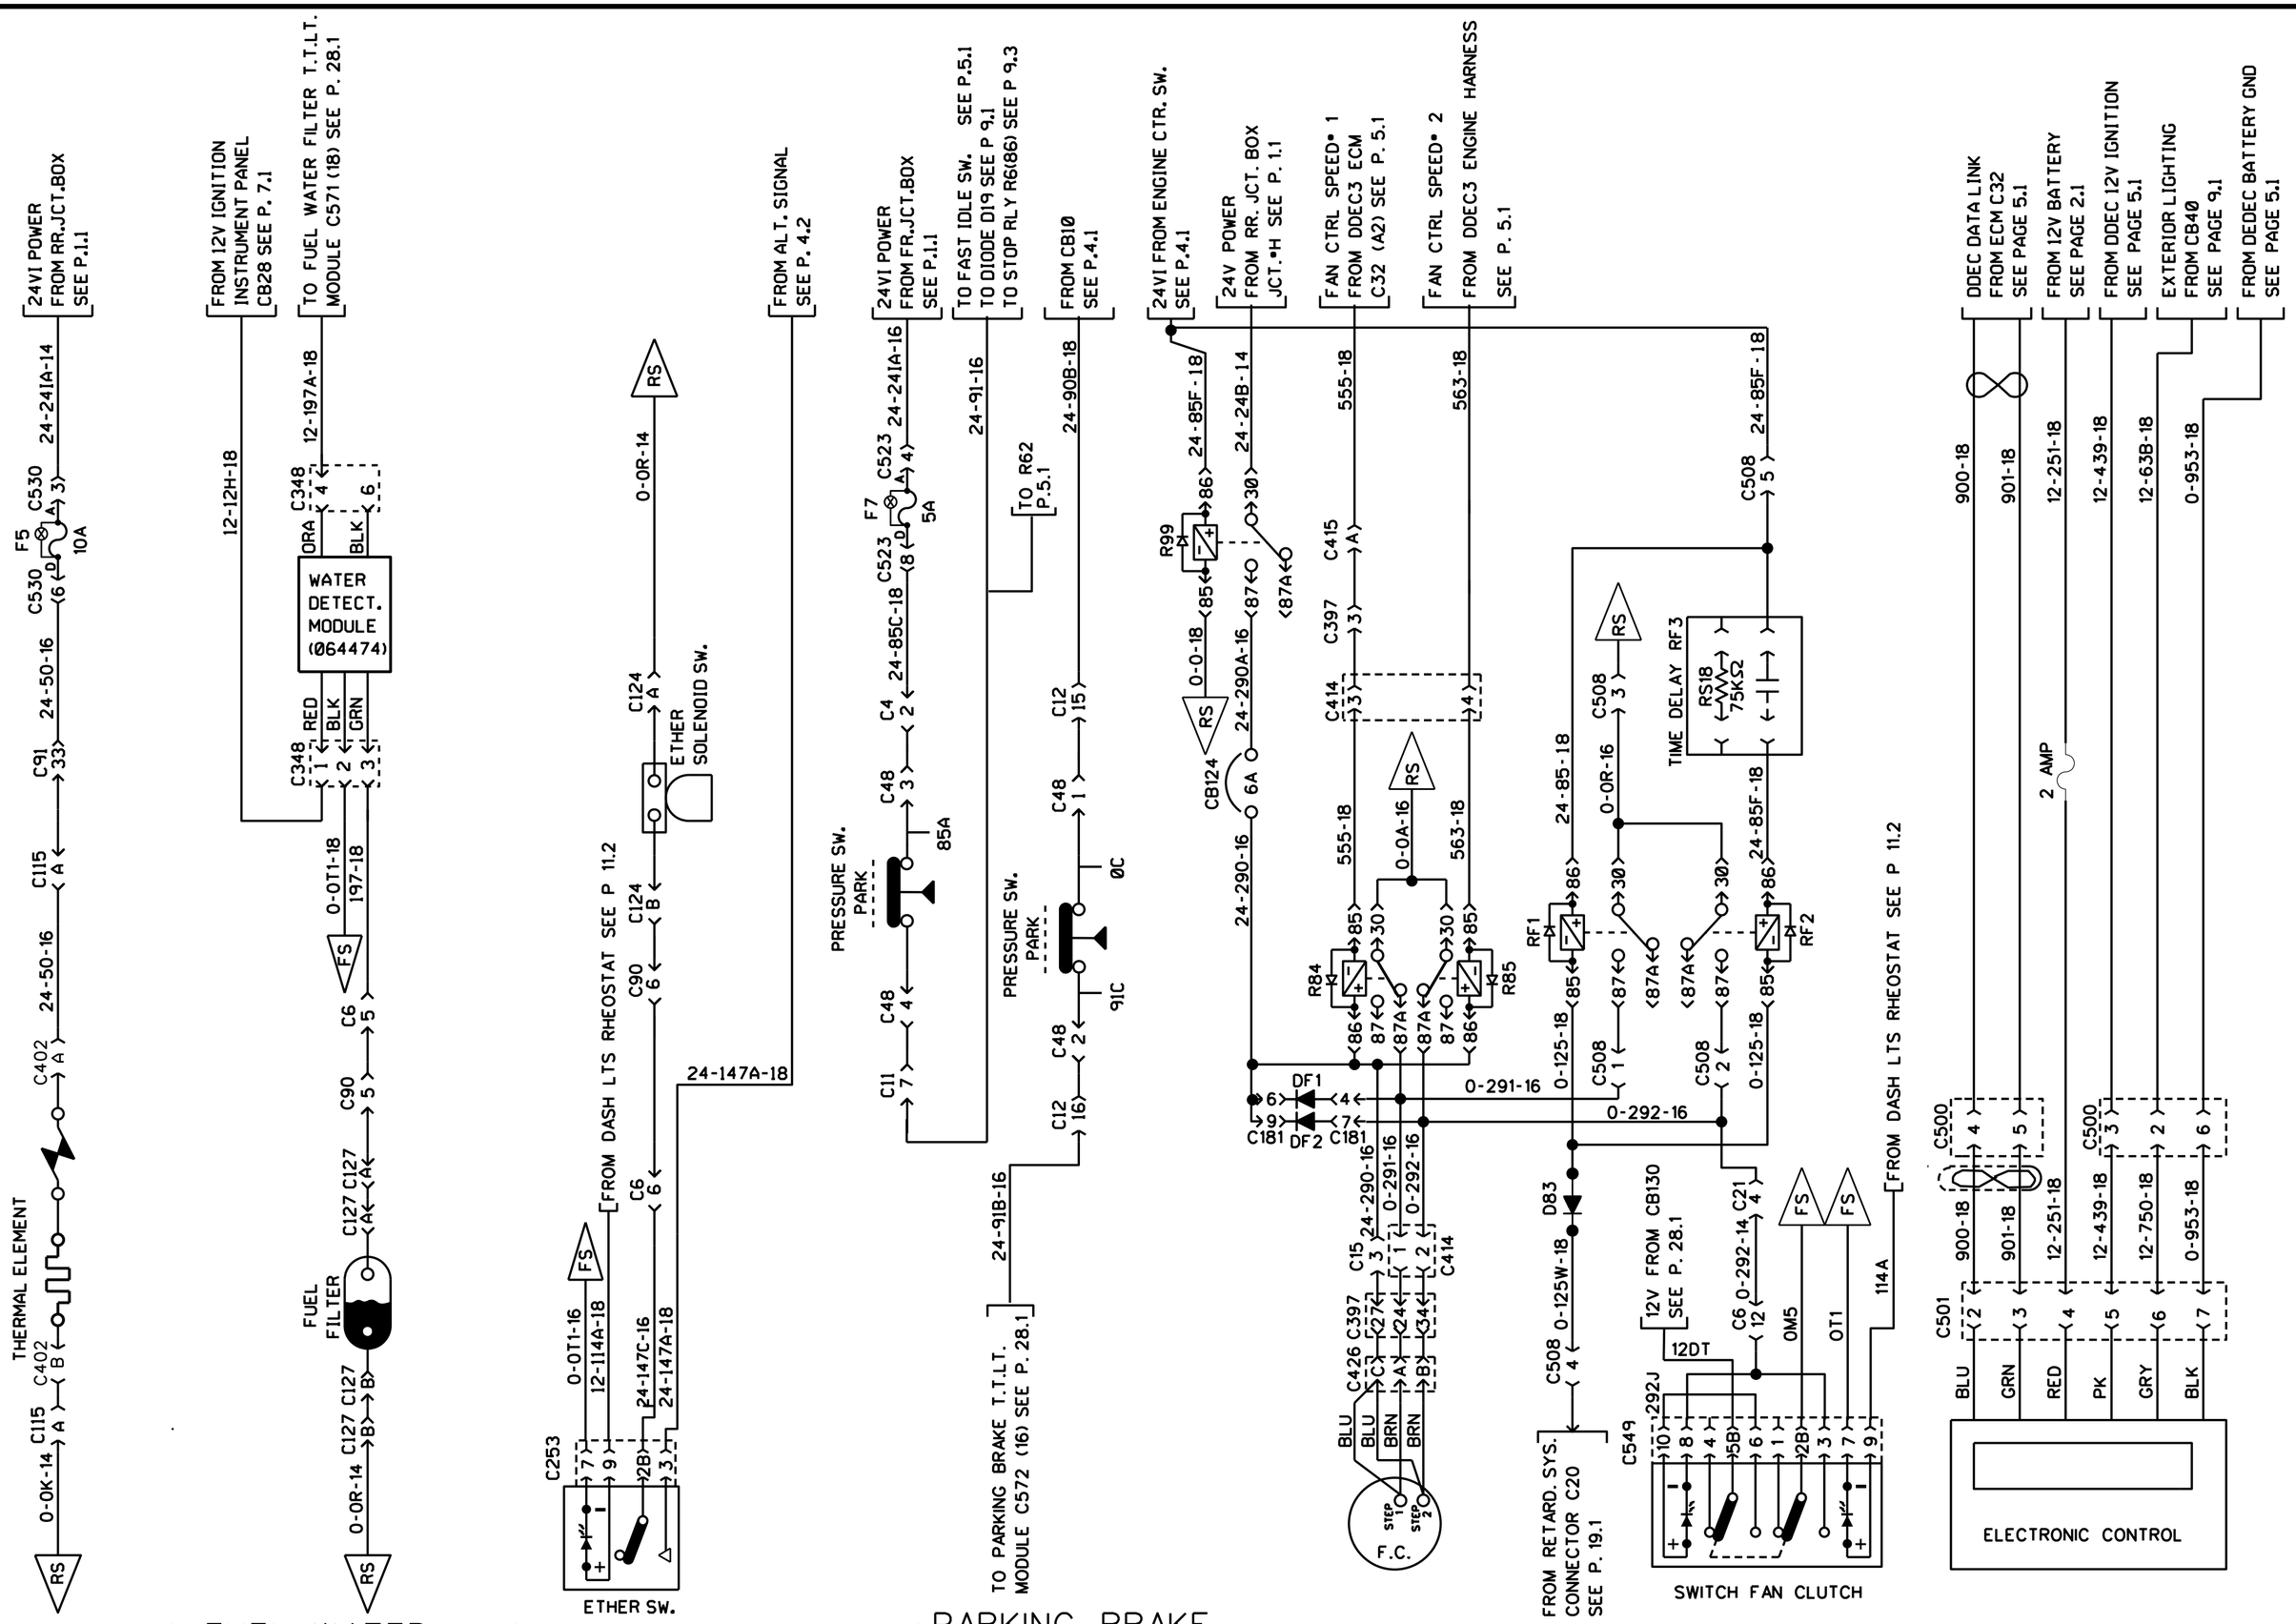



PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 8.1	REVISION 07

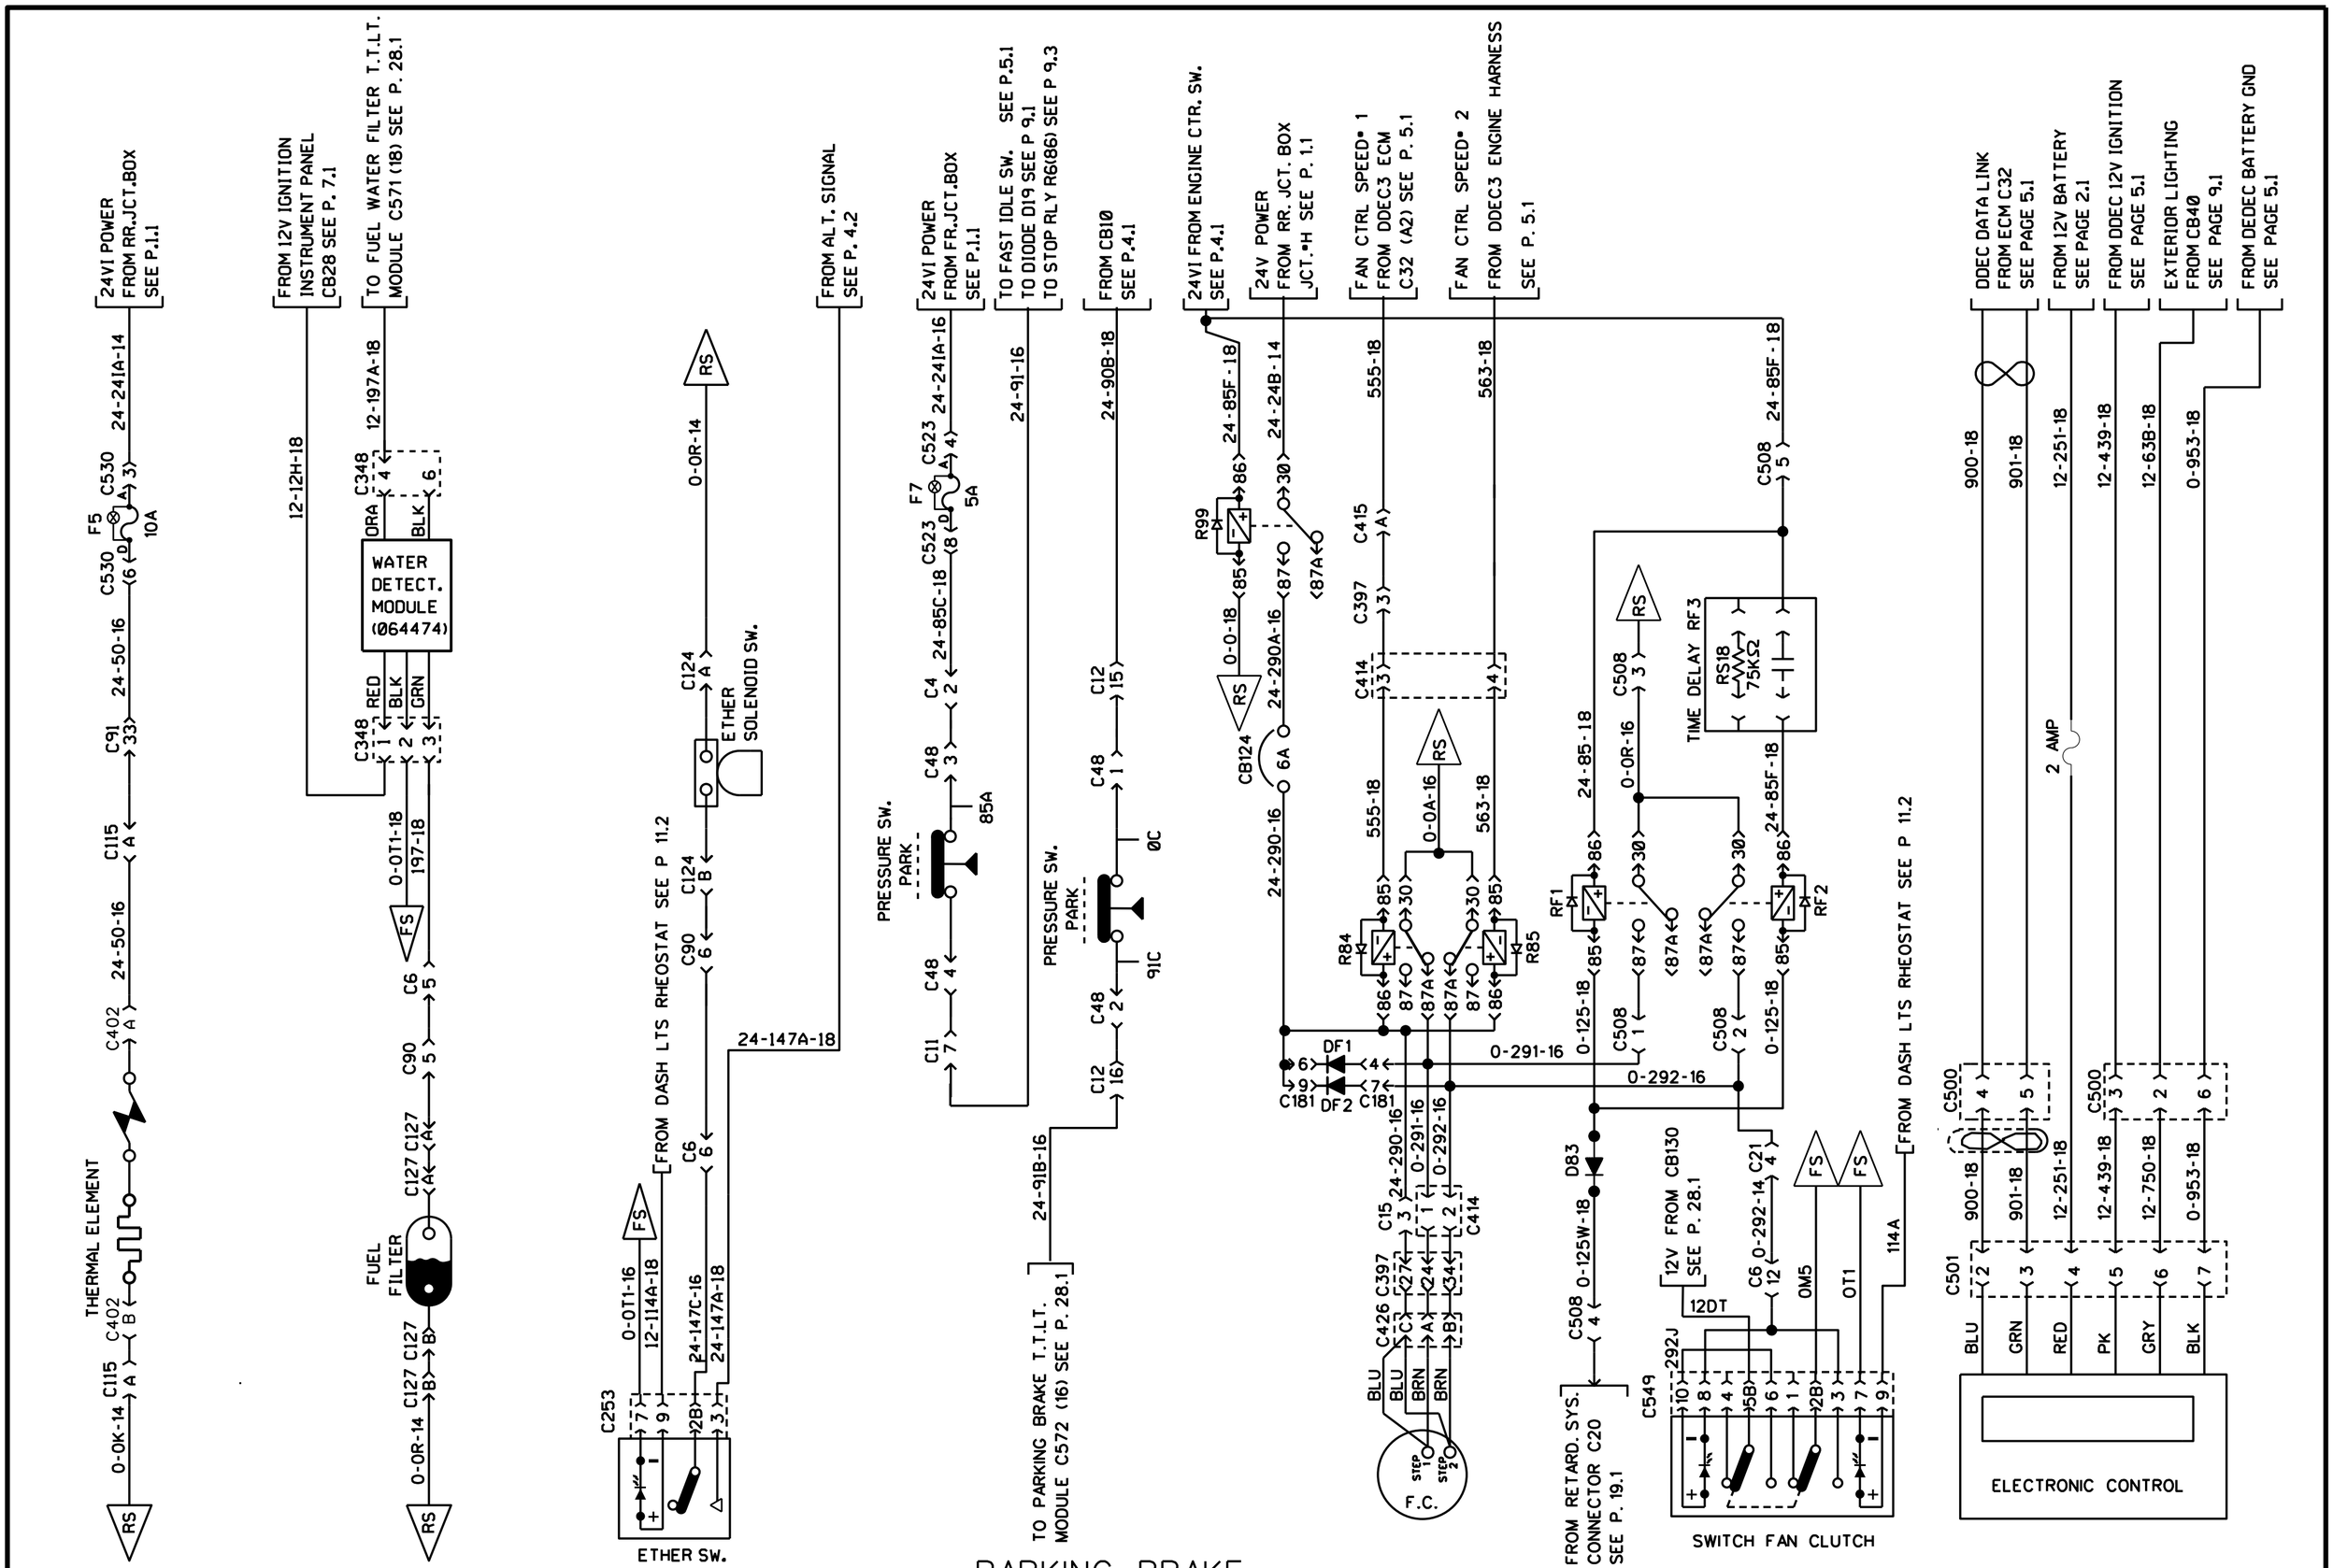
AIR DRYER
FUEL WATER FILTER
ETHER COLD START
PARKING BRAKE SWITCH
RADIATOR FAN CLUTCH
PRODRIVER
24VI POWER FROM RR.JCT.BOX SEE P.1.1
FROM 12V IGNITION INSTRUMENT PANEL CB28 SEE P. 7.1
TO FUEL WATER FILTER T.T.L.T. MODULE C571 (18) SEE P. 28.1
FROM ALT. SIGNAL SEE P. 4.2
24VI POWER FROM FR.JCT.BOX SEE P.1.1
TO FAST IDLE SW. SEE P.5.1
TO DIODE D19 SEE P 9.1
TO STOP RLY R6(86) SEE P 9.3
FROM CB10 SEE P.4.1
24VI FROM ENGINE CTR. SW. SEE P.4.1
24V POWER FROM RR. JCT. BOX JCT.•H SEE P. 1.1
FAN CTRL SPEED• 1 FROM DDEC3 ECM C32 (A2) SEE P. 5.1
FAN CTRL SPEED• 2 FROM DDEC3 ENGINE HARNESS SEE P. 5.1
DDEC DATA LINK FROM ECM C32 SEE PAGE 5.1
FROM 12V BATTERY SEE PAGE 2.1
FROM DDEC 12V IGNITION SEE PAGE 5.1
EXTERIOR LIGHTING FROM CB40 SEE PAGE 9.1
FROM DEDEC BATTERY GND SEE PAGE 5.1
WATER DETECT. MODULE (064474)
THERMAL ELEMENT
FUEL FILTER
ETHER SOLENOID SW.
ETHER SW.
PRESSURE SW. PARK
TO PARKING BRAKE T.T.L.T. MODULE C572 (16) SEE P. 28.1
FROM DASH LTS RHEOSTAT SEE P 11.2
TIME DELAY RF3
SWITCH FAN CLUTCH
FROM RETARD. SYS. CONNECTOR C20 SEE P. 19.1
12V FROM CB130 SEE P. 28.1
ELECTRONIC CONTROL
F.C.

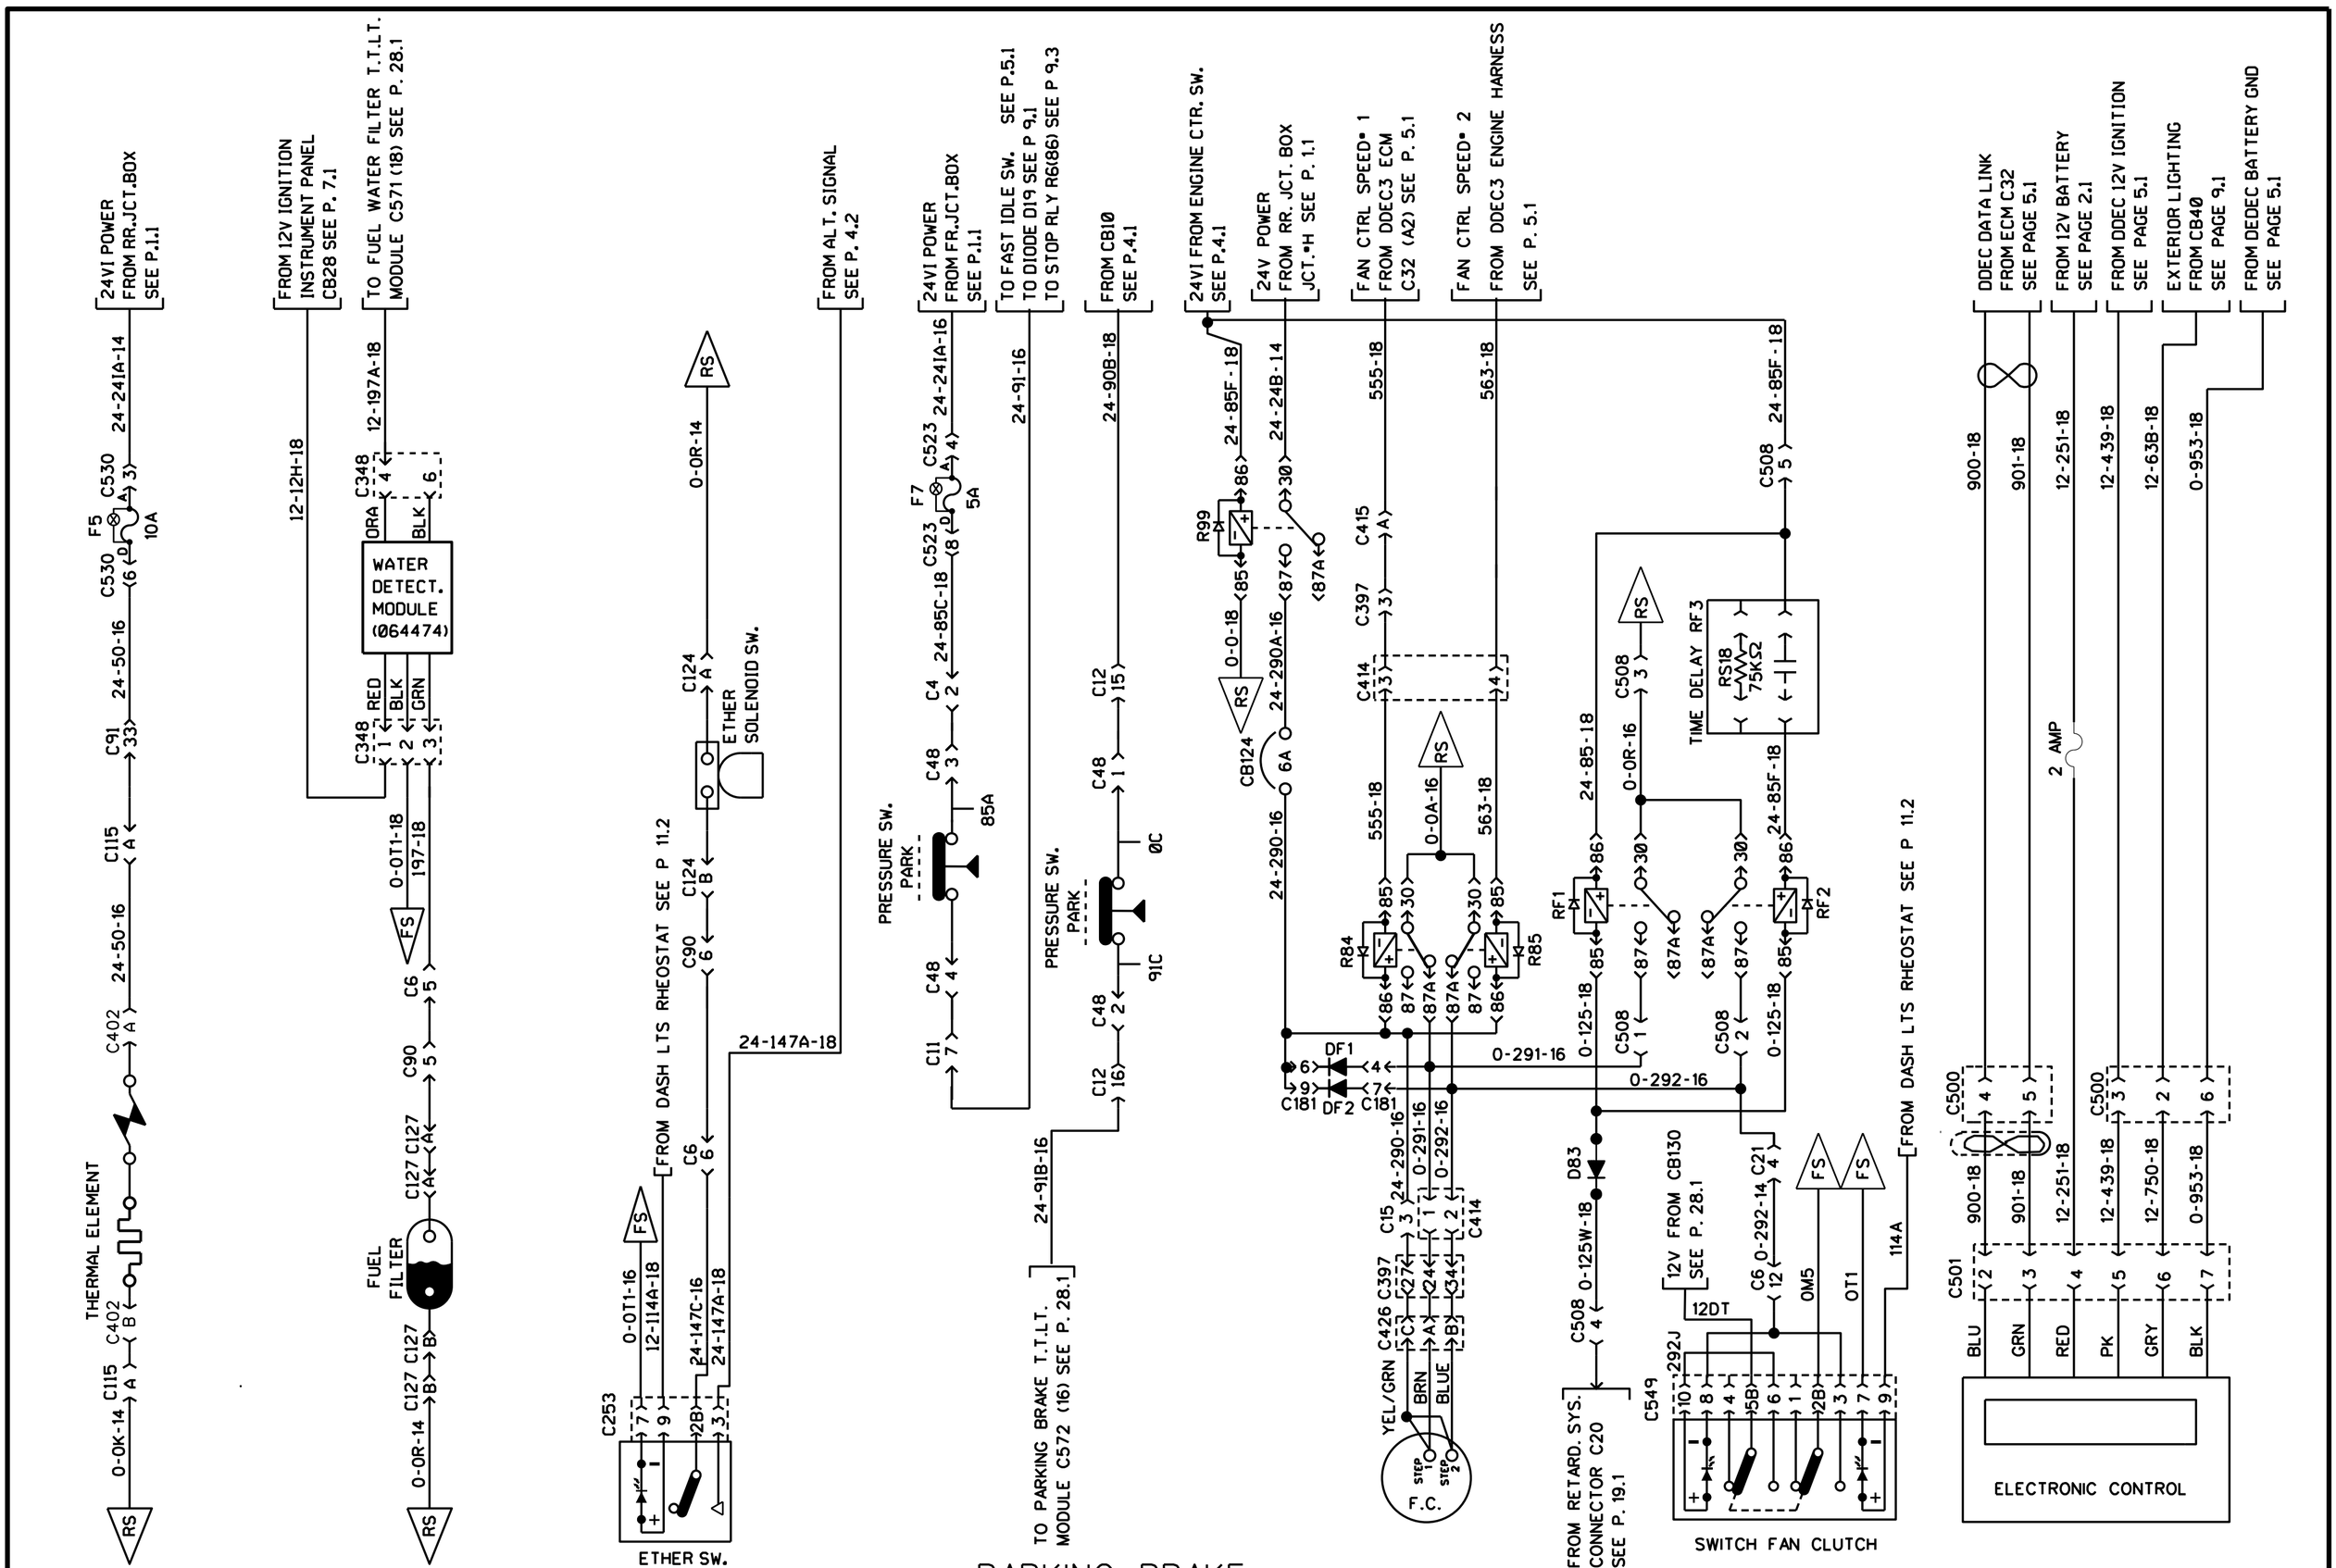

AIR DRYER | FUEL WATER FILTER | ETHER COLD START | PARKING BRAKE SWITCH | RADIATOR FAN CLUTCH | PRODRIVER

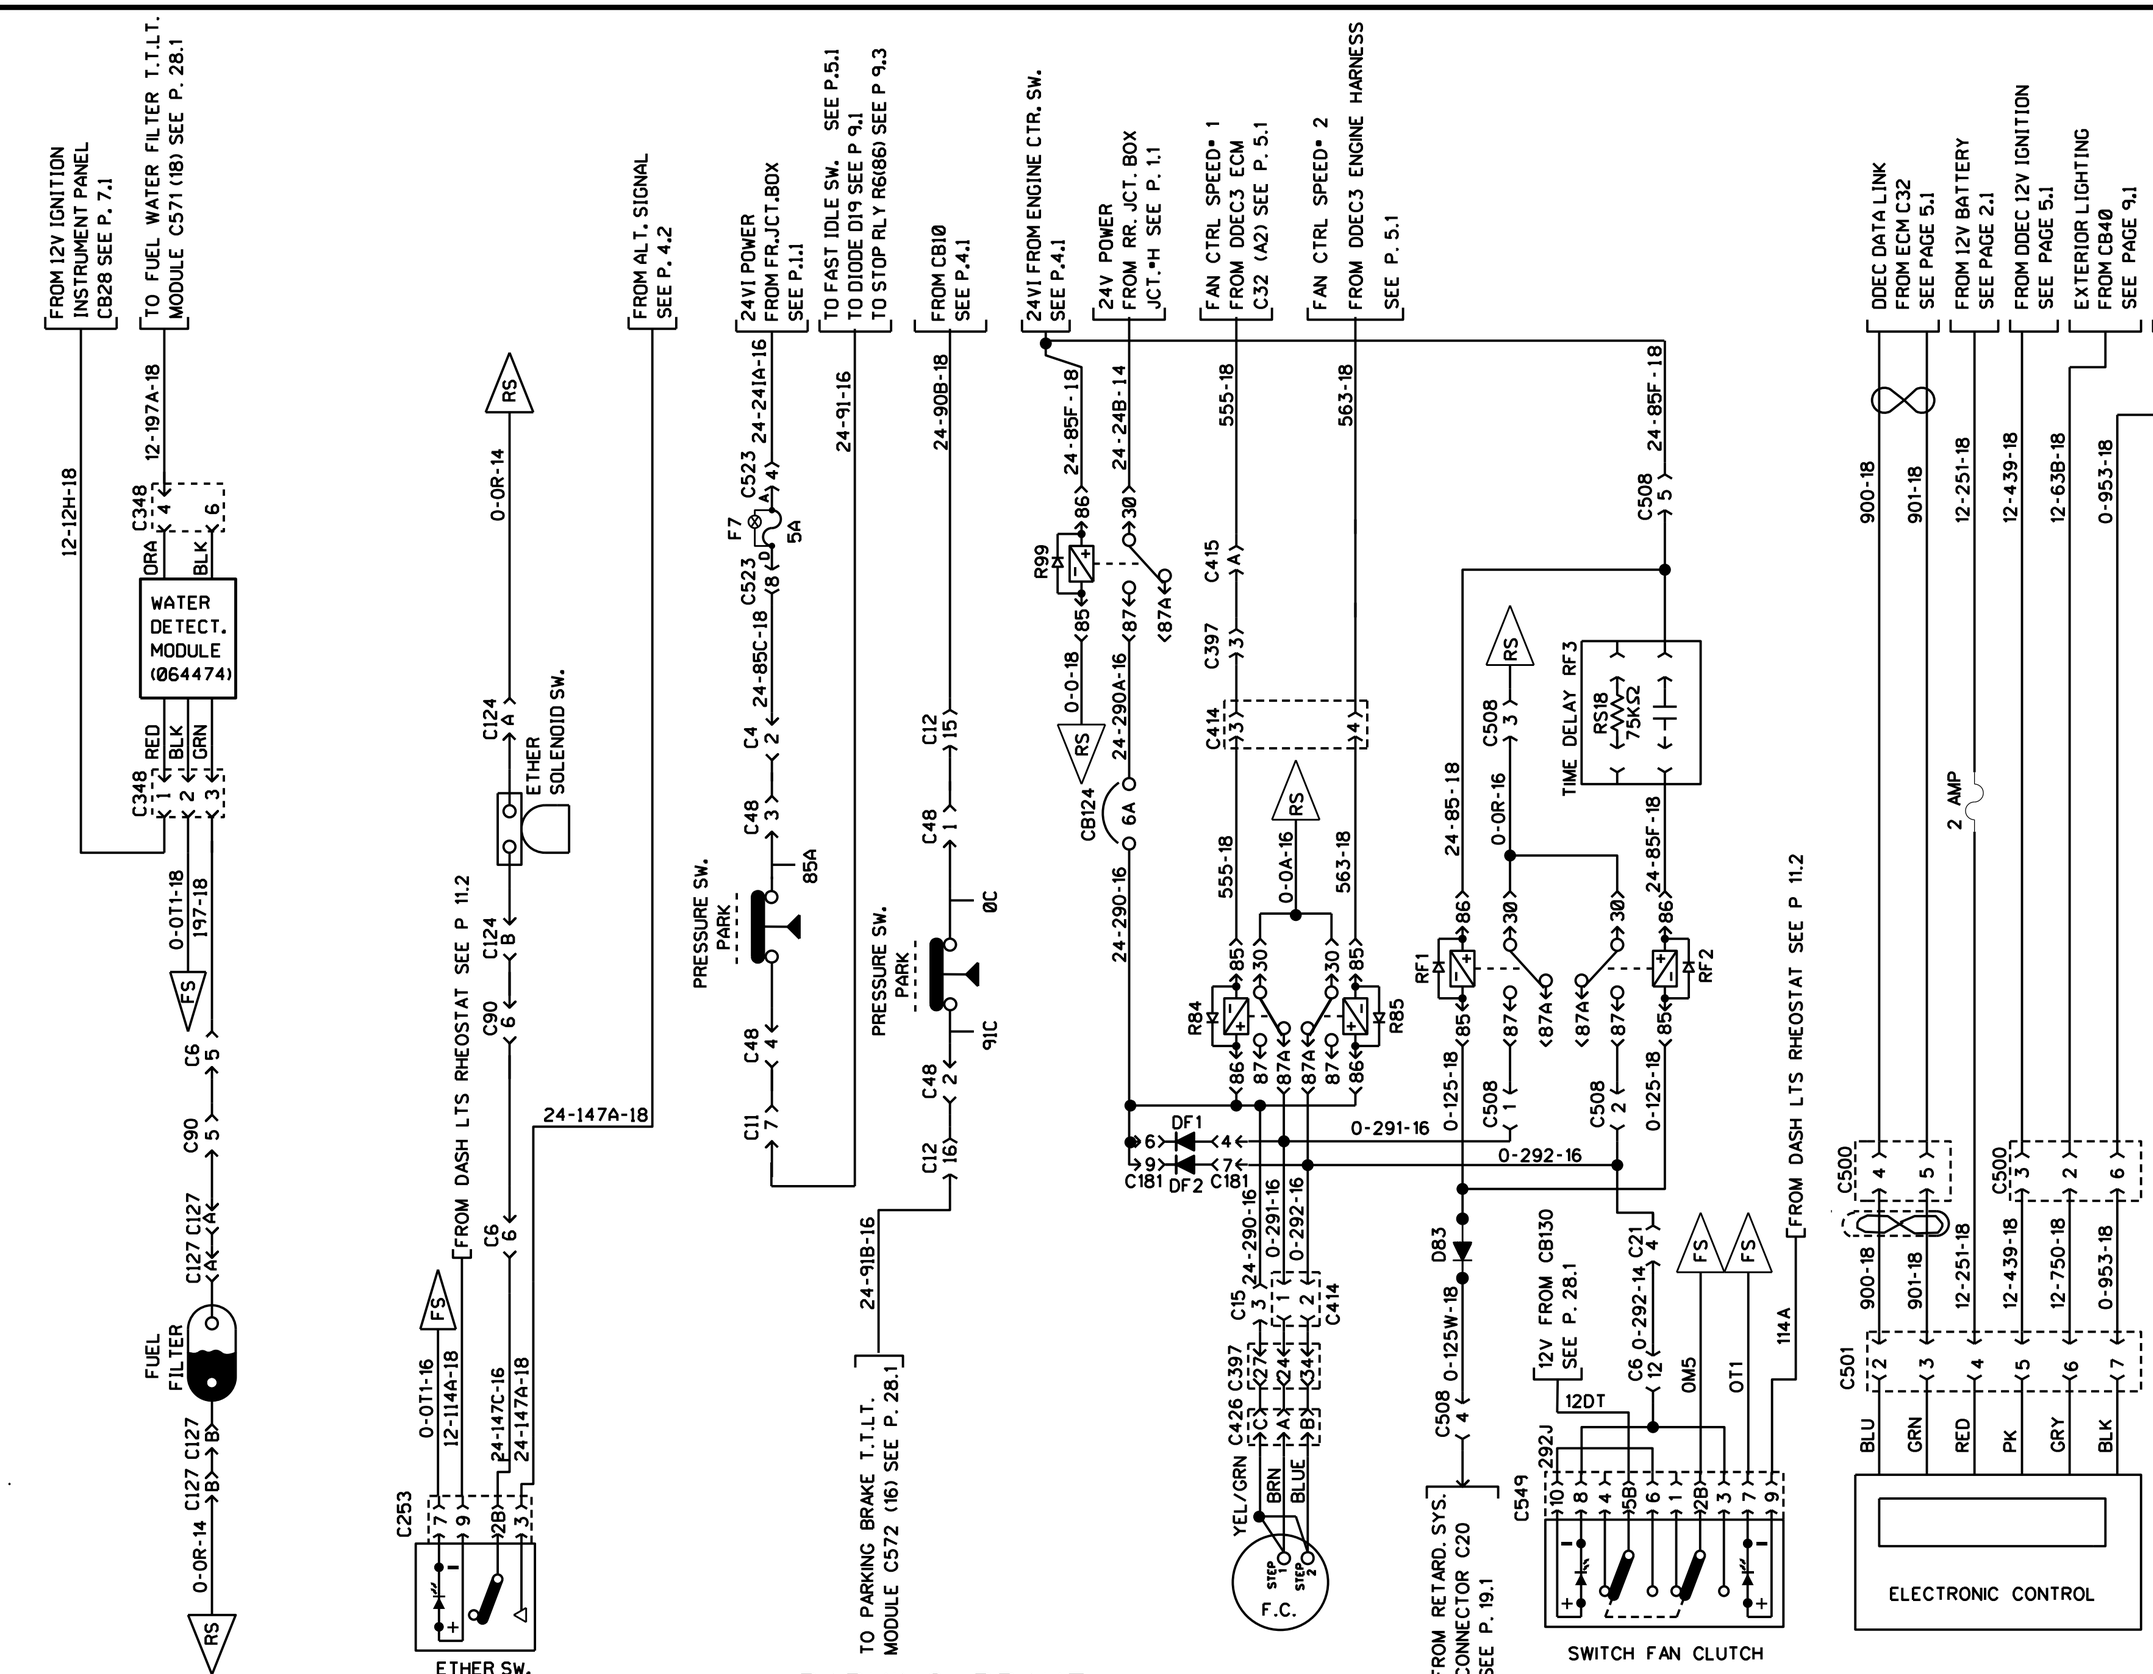
FUEL WATER FILTER
FROM 12V IGNITION INSTRUMENT PANEL CB28 SEE P. 7.1
12-12H-18
TO FUEL WATER FILTER T.T.L.T. MODULE C571 (18) SEE P. 28.1
12-197A-18
C348
ORA
BLK
WATER DETECT. MODULE (064474)
RED
BLK
GRN
0-0T1-18
197-18
FS
C6
C90
C127
FUEL FILTER
0-OR-14
RS
ETHER COLD START
C124
ETHER SOLENOID SW.
0-OR-14
FROM DASH LTS RHEOSTAT SEE P 11.2
C253
0-0T1-16
12-114A-18
24-147C-16
24-147A-18
ETHER SW.
PARKING BRAKE SWITCH
FROM ALT. SIGNAL SEE P. 4.2
24VI POWER FROM FR.JCT.BOX SEE P.1.1
F7
5A
C523
24-241A-16
TO FAST IDLE SW. SEE P.5.1
TO DIODE D19 SEE P 9.1
TO STOP RLY R6(86) SEE P 9.3
24-91-16
FROM CB10 SEE P.4.1
24-90B-18
C48
C4
24-85C-18
PRESSURE SW. PARK
85A
91C
24-91B-16
TO PARKING BRAKE T.T.L.T. MODULE C572 (16) SEE P. 28.1
RADIATOR FAN CLUTCH
24VI FROM ENGINE CTR. SW. SEE P.4.1
24V POWER FROM RR. JCT. BOX JCT."H SEE P. 1.1
FAN CTRL SPEED" 1 FROM DDEC3 ECM C32 (A2) SEE P. 5.1
FAN CTRL SPEED" 2 FROM DDEC3 ENGINE HARNESS SEE P. 5.1
24-85F-18
R99
24-24B-14
CB124
6A
24-290A-16
0-0-18
555-18
563-18
C414
C415
C397
TIME DELAY RF3
RS18 75KΩ
0-0A-16
0-0R-16
24-85-18
C508
R84
R85
RF1
RF2
DF1
DF2
C181
0-291-16
0-292-16
0-125-18
24-290-16
C15
C426
YEL/GRN
BRN
BLUE
STEP 1
STEP 2
F.C.
D83
0-125W-18
FROM RETARD. SYS. CONNECTOR C20 SEE P. 19.1
12V FROM CB130 SEE P. 28.1
12DT
C549
292J
0M5
OT1
114A
C21
FROM DASH LTS RHEOSTAT SEE P 11.2
SWITCH FAN CLUTCH
PRODRIVER
DDEC DATA LINK FROM ECM C32 SEE PAGE 5.1
900-18
901-18
FROM 12V BATTERY SEE PAGE 2.1
12-251-18
2 AMP
FROM DDEC 12V IGNITION SEE PAGE 5.1
12-439-18
12-63B-18
EXTERIOR LIGHTING FROM CB40 SEE PAGE 9.1
0-953-18
FROM DEDEC BATTERY GND SEE PAGE 5.1
C500
C501
BLU
GRN
RED
PK
GRY
BLK
12-750-18
ELECTRONIC CONTROL

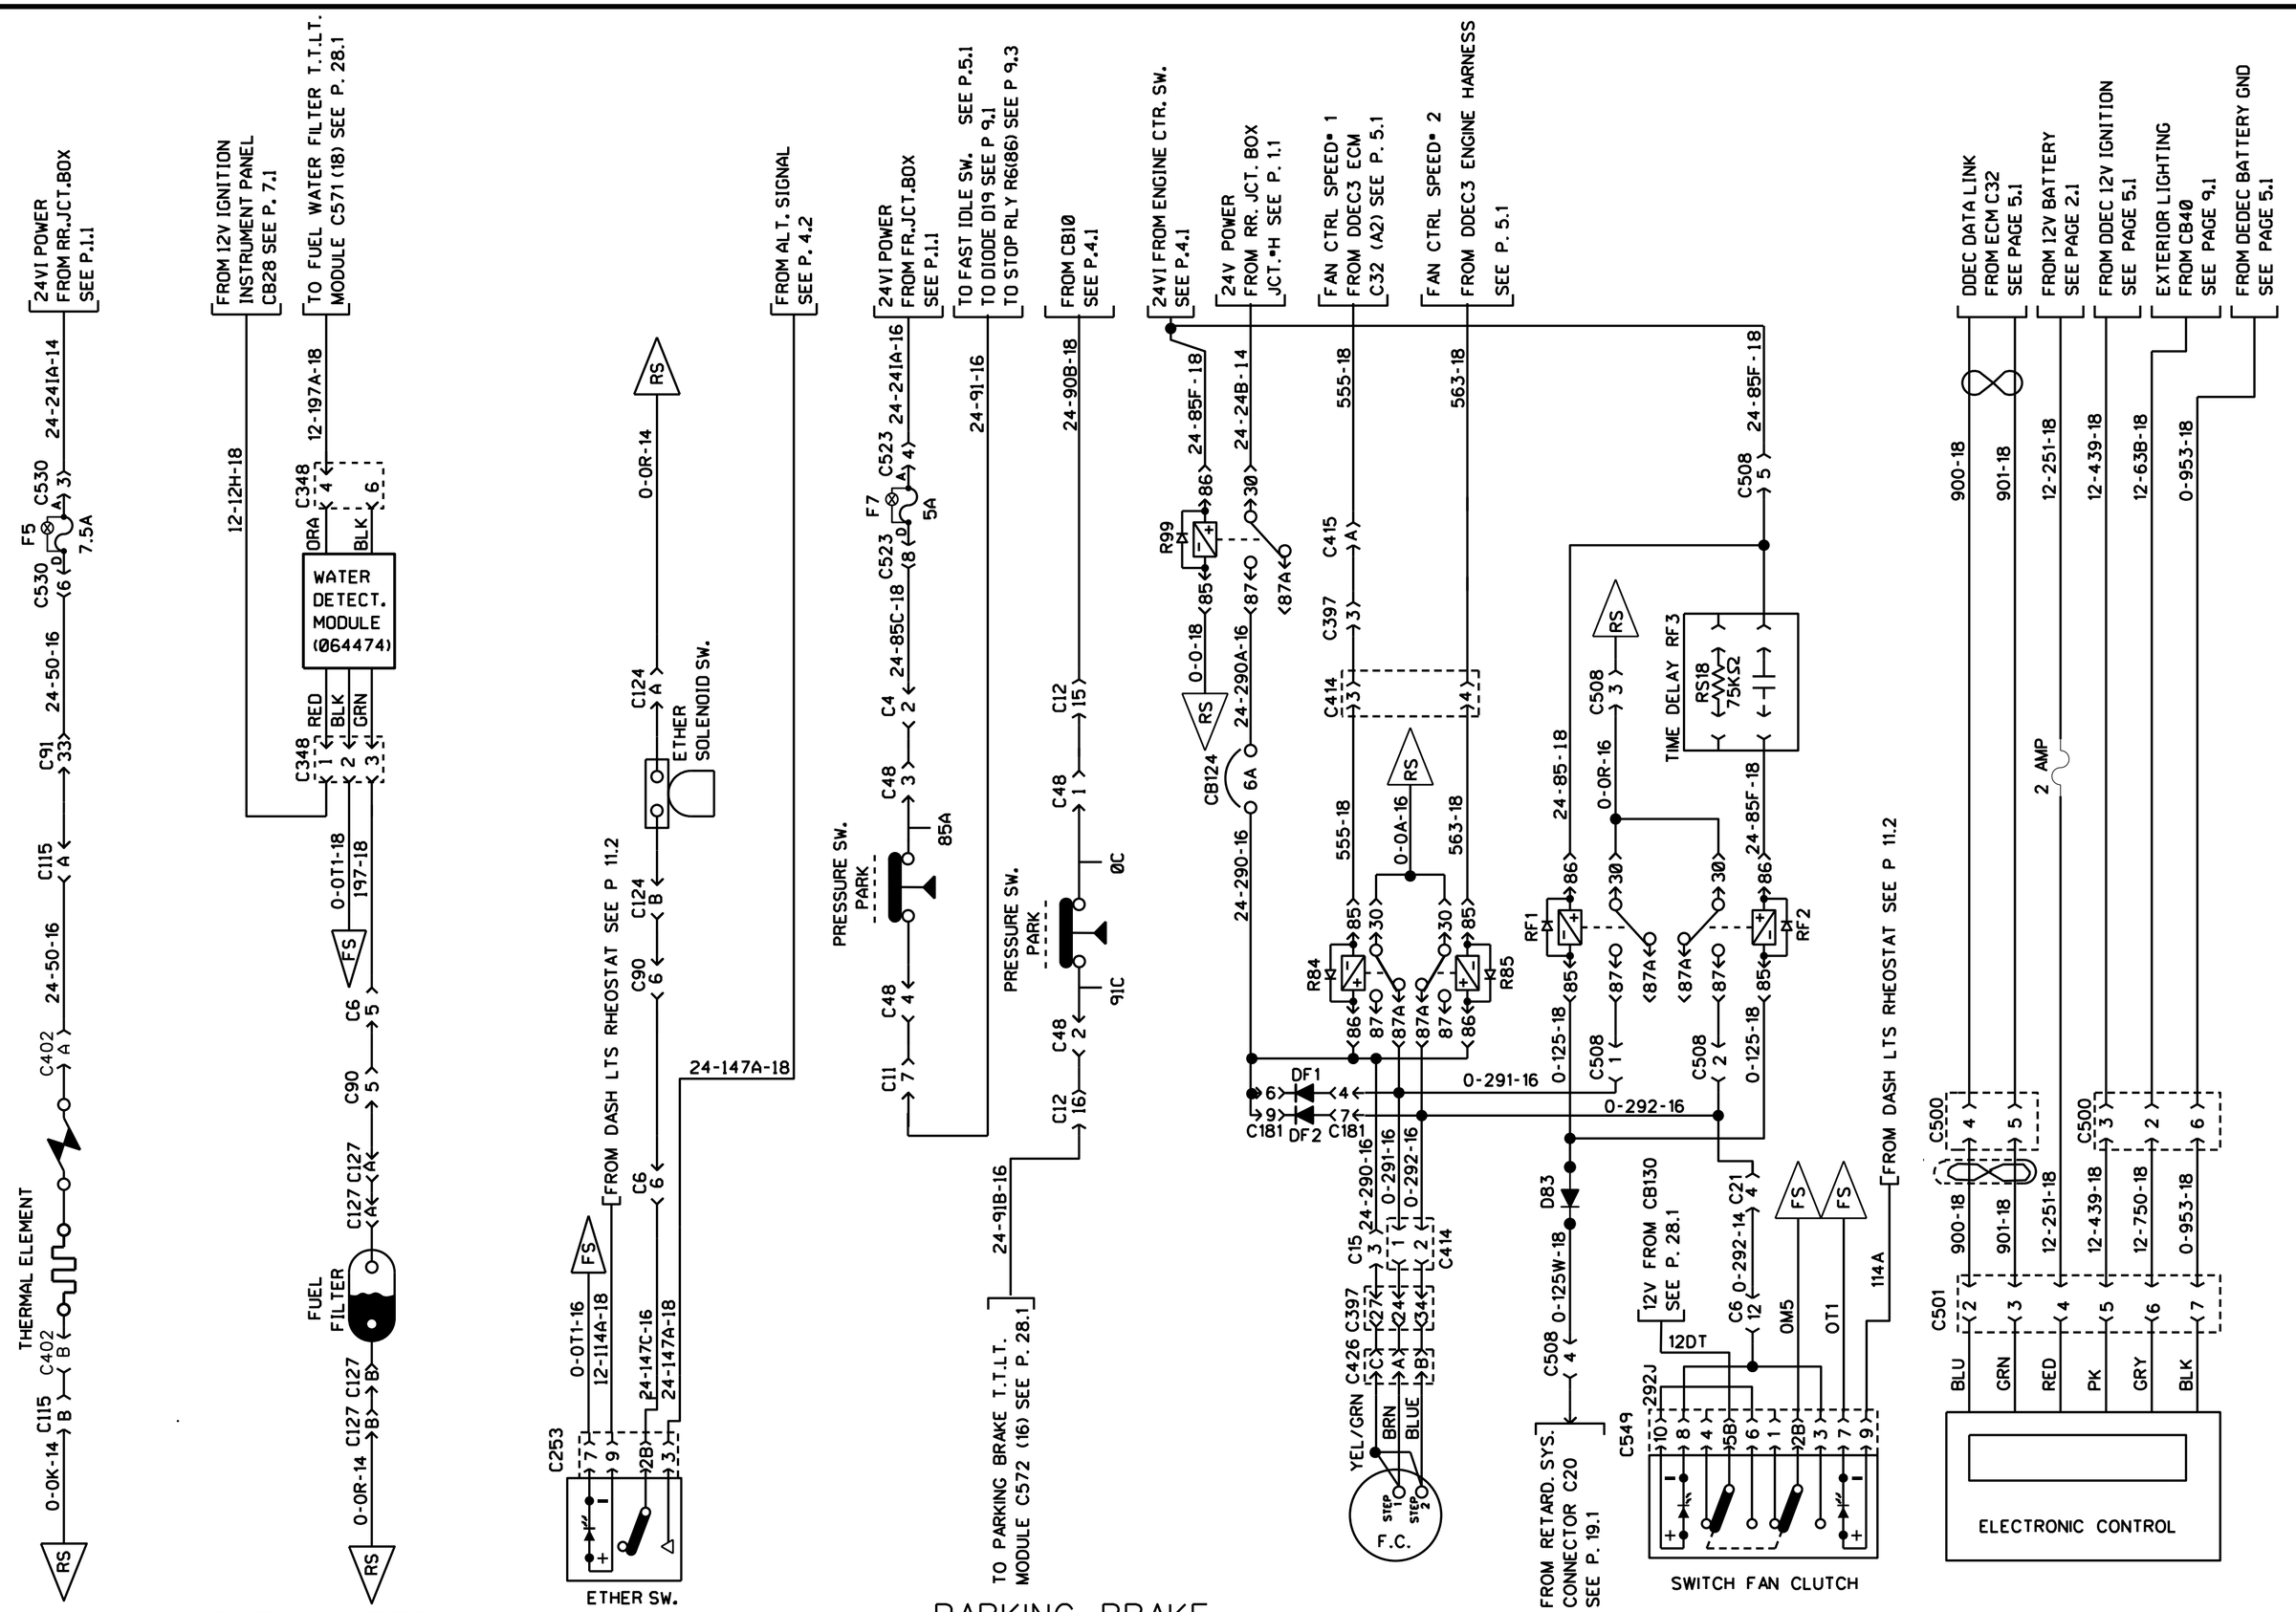
AIR DRYER
FUEL WATER FILTER
ETHER COLD START
PARKING BRAKE SWITCH
RADIATOR FAN CLUTCH
PRODRIVER
24VI POWER FROM RR.JCT.BOX SEE P.1.1
FROM I2V IGNITION INSTRUMENT PANEL CB28 SEE P. 7.1
TO FUEL WATER FILTER T.T.L.T. MODULE C571 (18) SEE P. 28.1
WATER DETECT. MODULE (064474)
THERMAL ELEMENT
FUEL FILTER
ETHER SOLENOID SW.
ETHER SW.
FROM DASH LTS RHEOSTAT SEE P 11.2
FROM ALT. SIGNAL SEE P. 4.2
PRESSURE SW. PARK
TO PARKING BRAKE T.T.L.T. MODULE C572 (16) SEE P. 28.1
24VI FROM ENGINE CTR. SW. SEE P.4.1
24V POWER FROM RR. JCT. BOX JCT.•H SEE P. 1.1
FAN CTRL SPEED• 1 FROM DDEC3 ECM C32 (A2) SEE P. 5.1
FAN CTRL SPEED• 2 FROM DDEC3 ENGINE HARNESS SEE P. 5.1
TIME DELAY RF3
RS18 75KΩ
SWITCH FAN CLUTCH
FROM RETARD. SYS. CONNECTOR C20 SEE P. 19.1
12V FROM CB130 SEE P. 28.1
FROM DASH LTS RHEOSTAT SEE P 11.2
DDEC DATA LINK FROM ECM C32 SEE PAGE 5.1
FROM 12V BATTERY SEE PAGE 2.1
FROM DDEC 12V IGNITION SEE PAGE 5.1
EXTERIOR LIGHTING FROM CB40 SEE PAGE 9.1
FROM DEDEC BATTERY GND SEE PAGE 5.1
ELECTRONIC CONTROL

E.L. 2002/01/31

CANCEL

FUEL WATER FILTER

ETHER COLD START

PARKING BRAKE SWITCH

RADIATOR FAN CLUTCH

ORLEANS

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 8.1sp1	REVISION 00

PREVOST


WIRING DIAGRAM

FUEL WATER FILTER

ETHER COLD START

PARKING BRAKE SWITCH

RADIATOR FAN CLUTCH

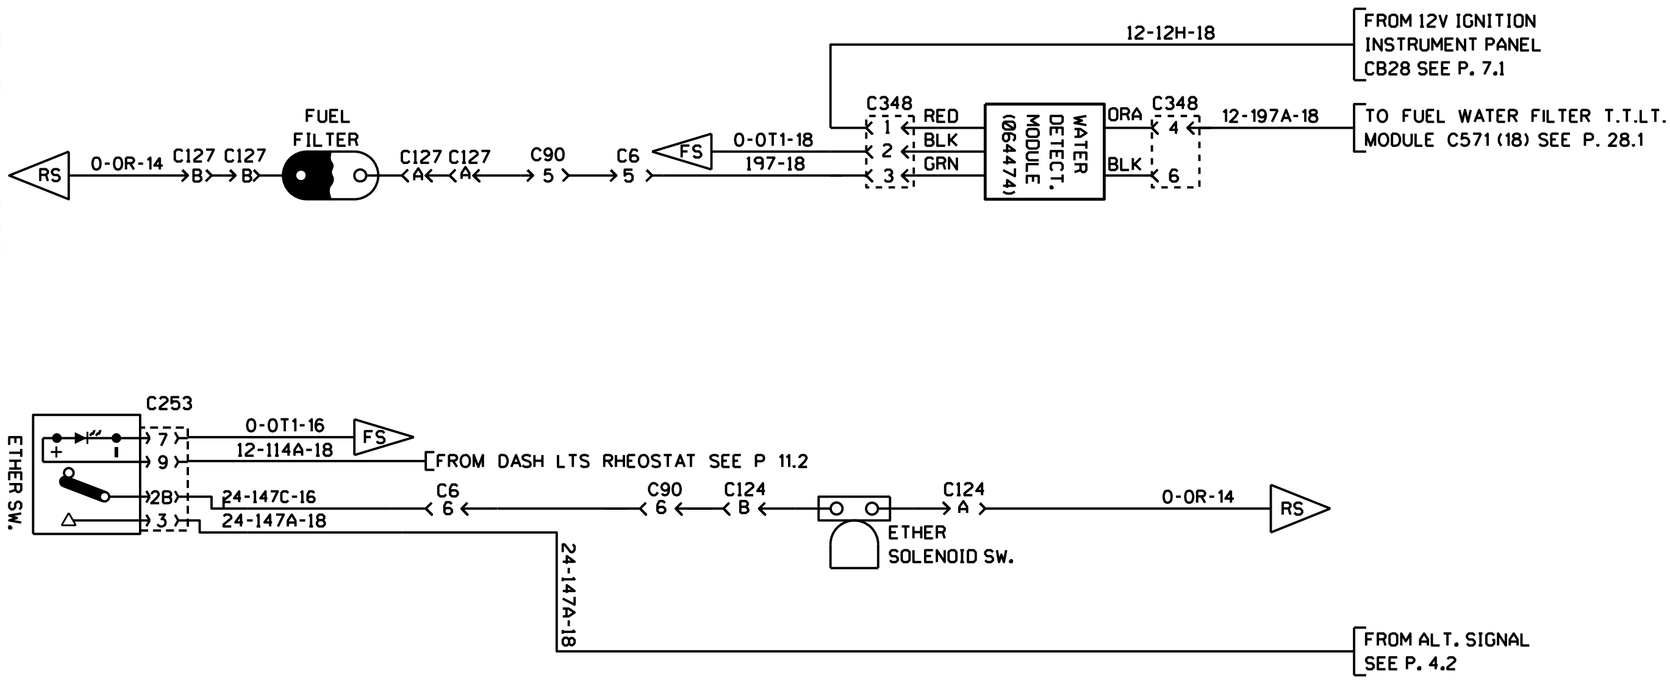


NO: D060949


PAGE: 8.1sp1

REVISION 01


ORLEANS

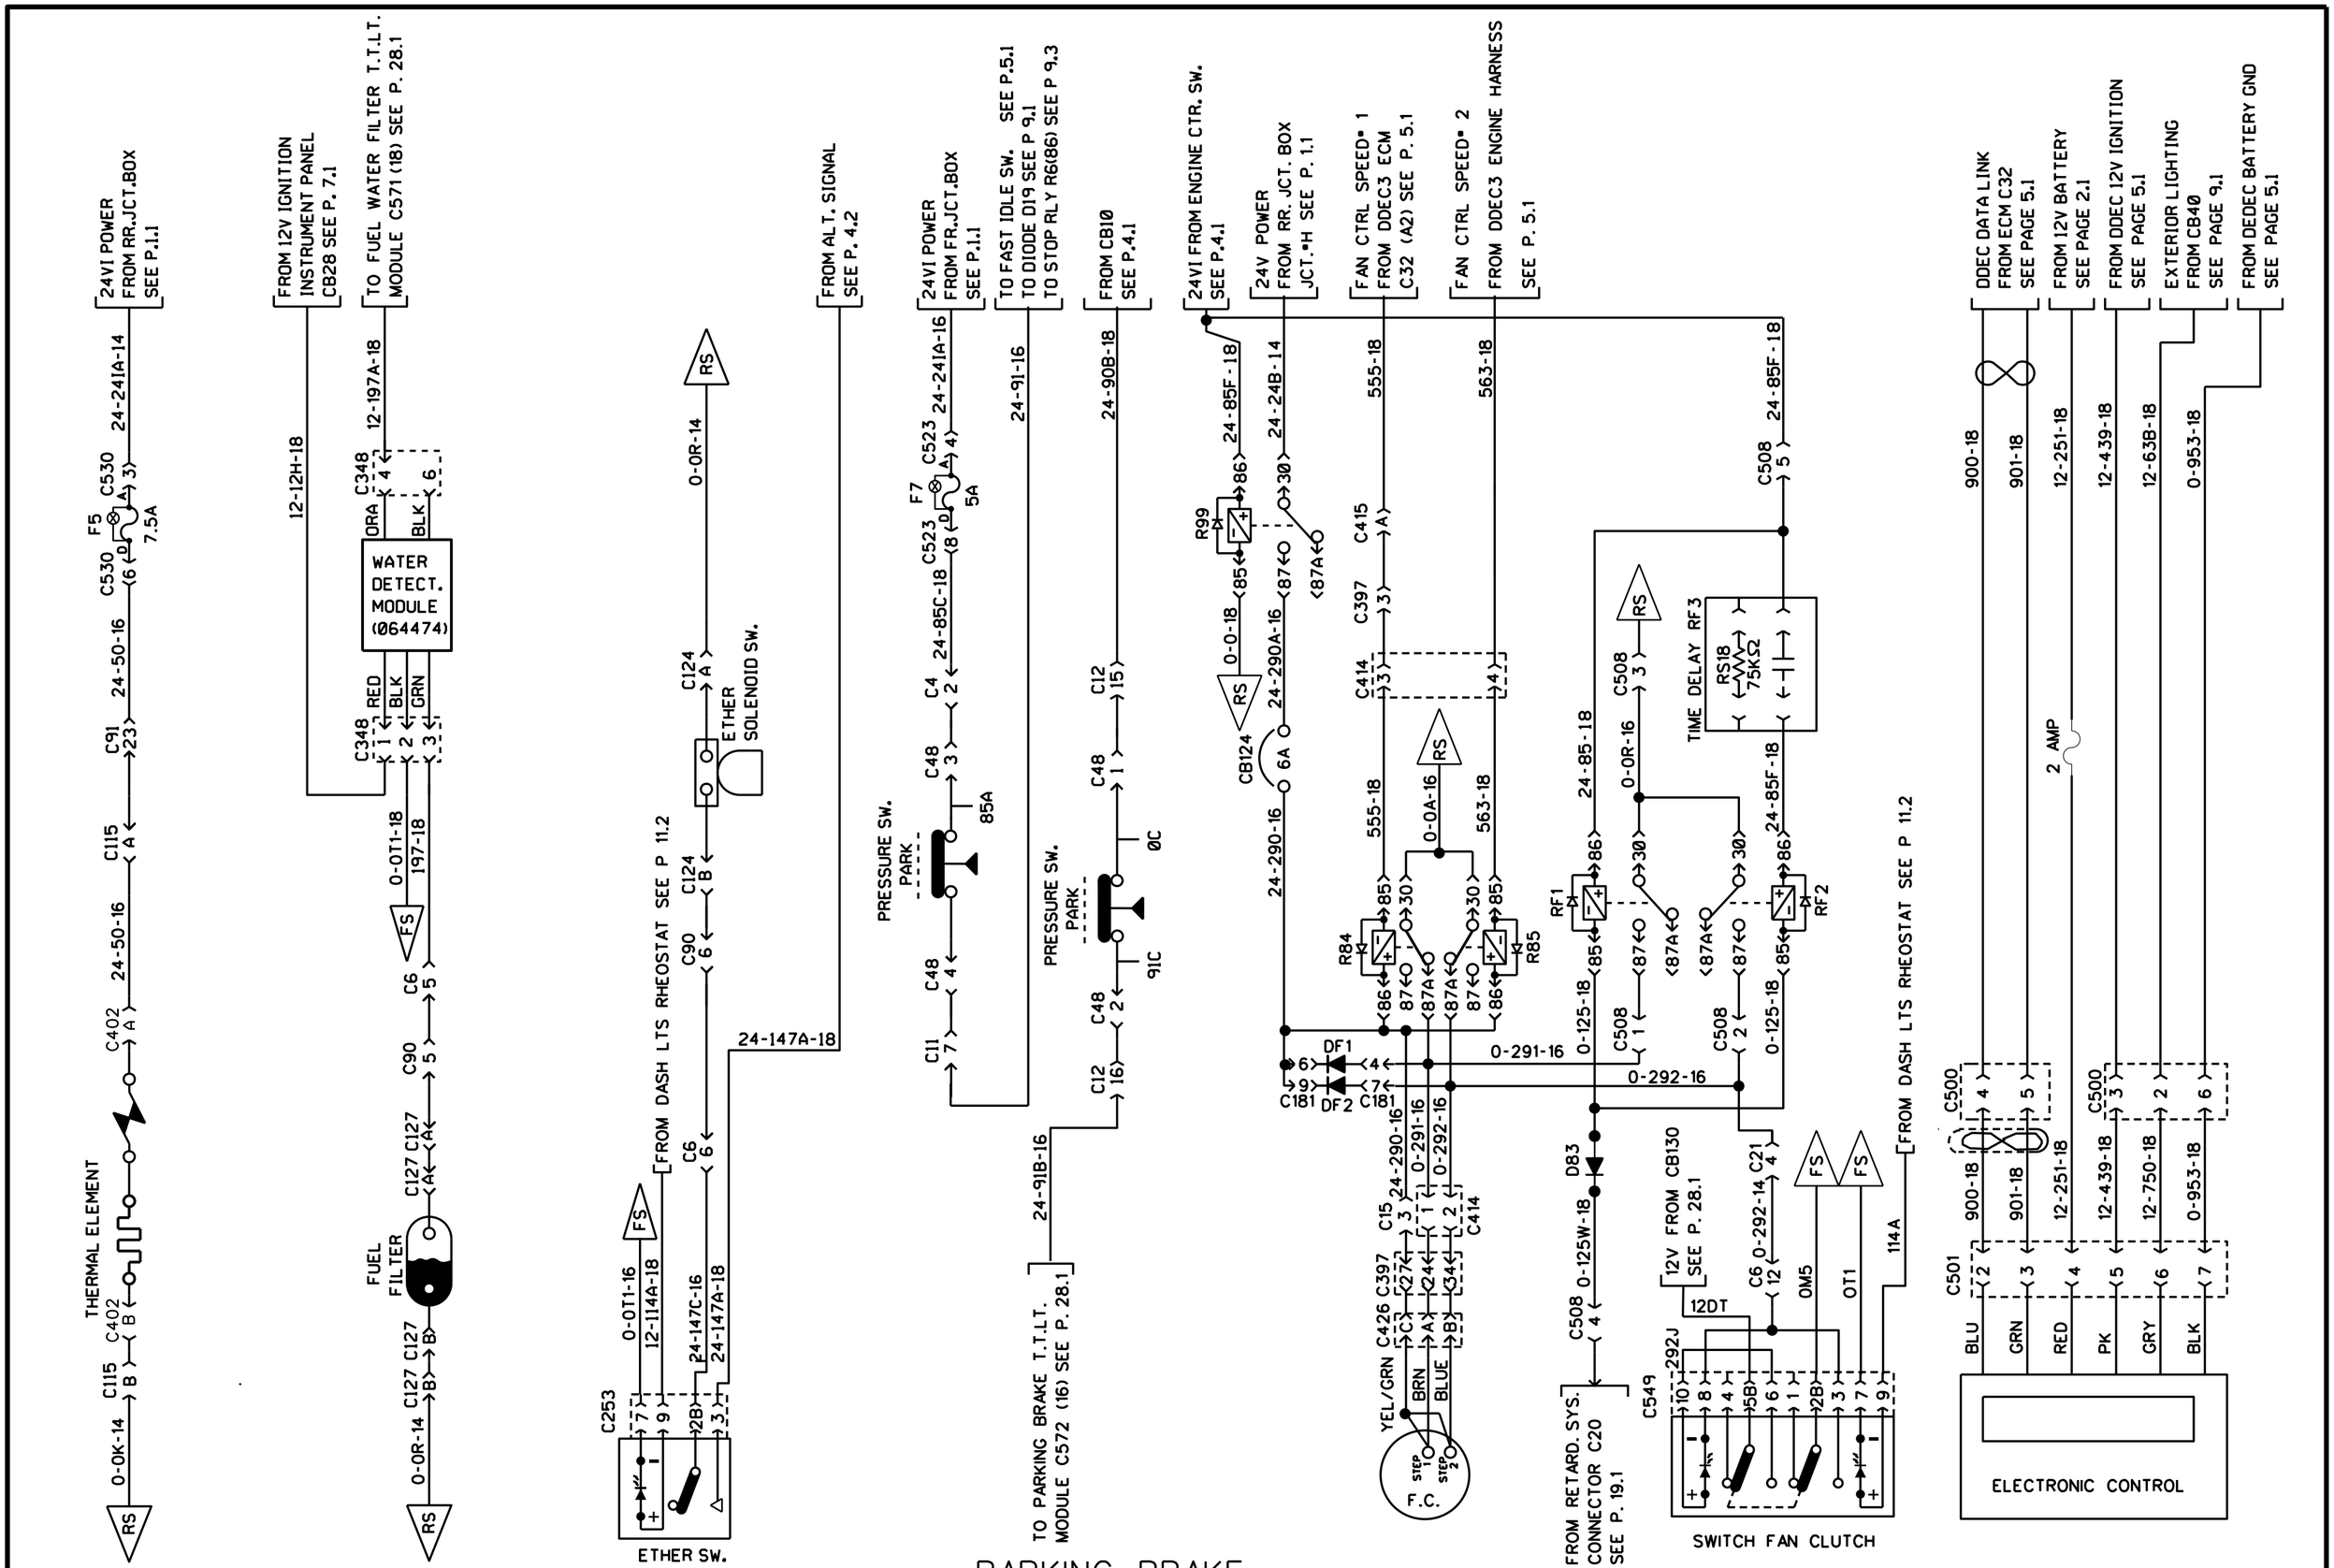

PREVOST | WIRING DIAGRAM | NO: D060949 | PAGE: 8.1SP2 | REVISION 00

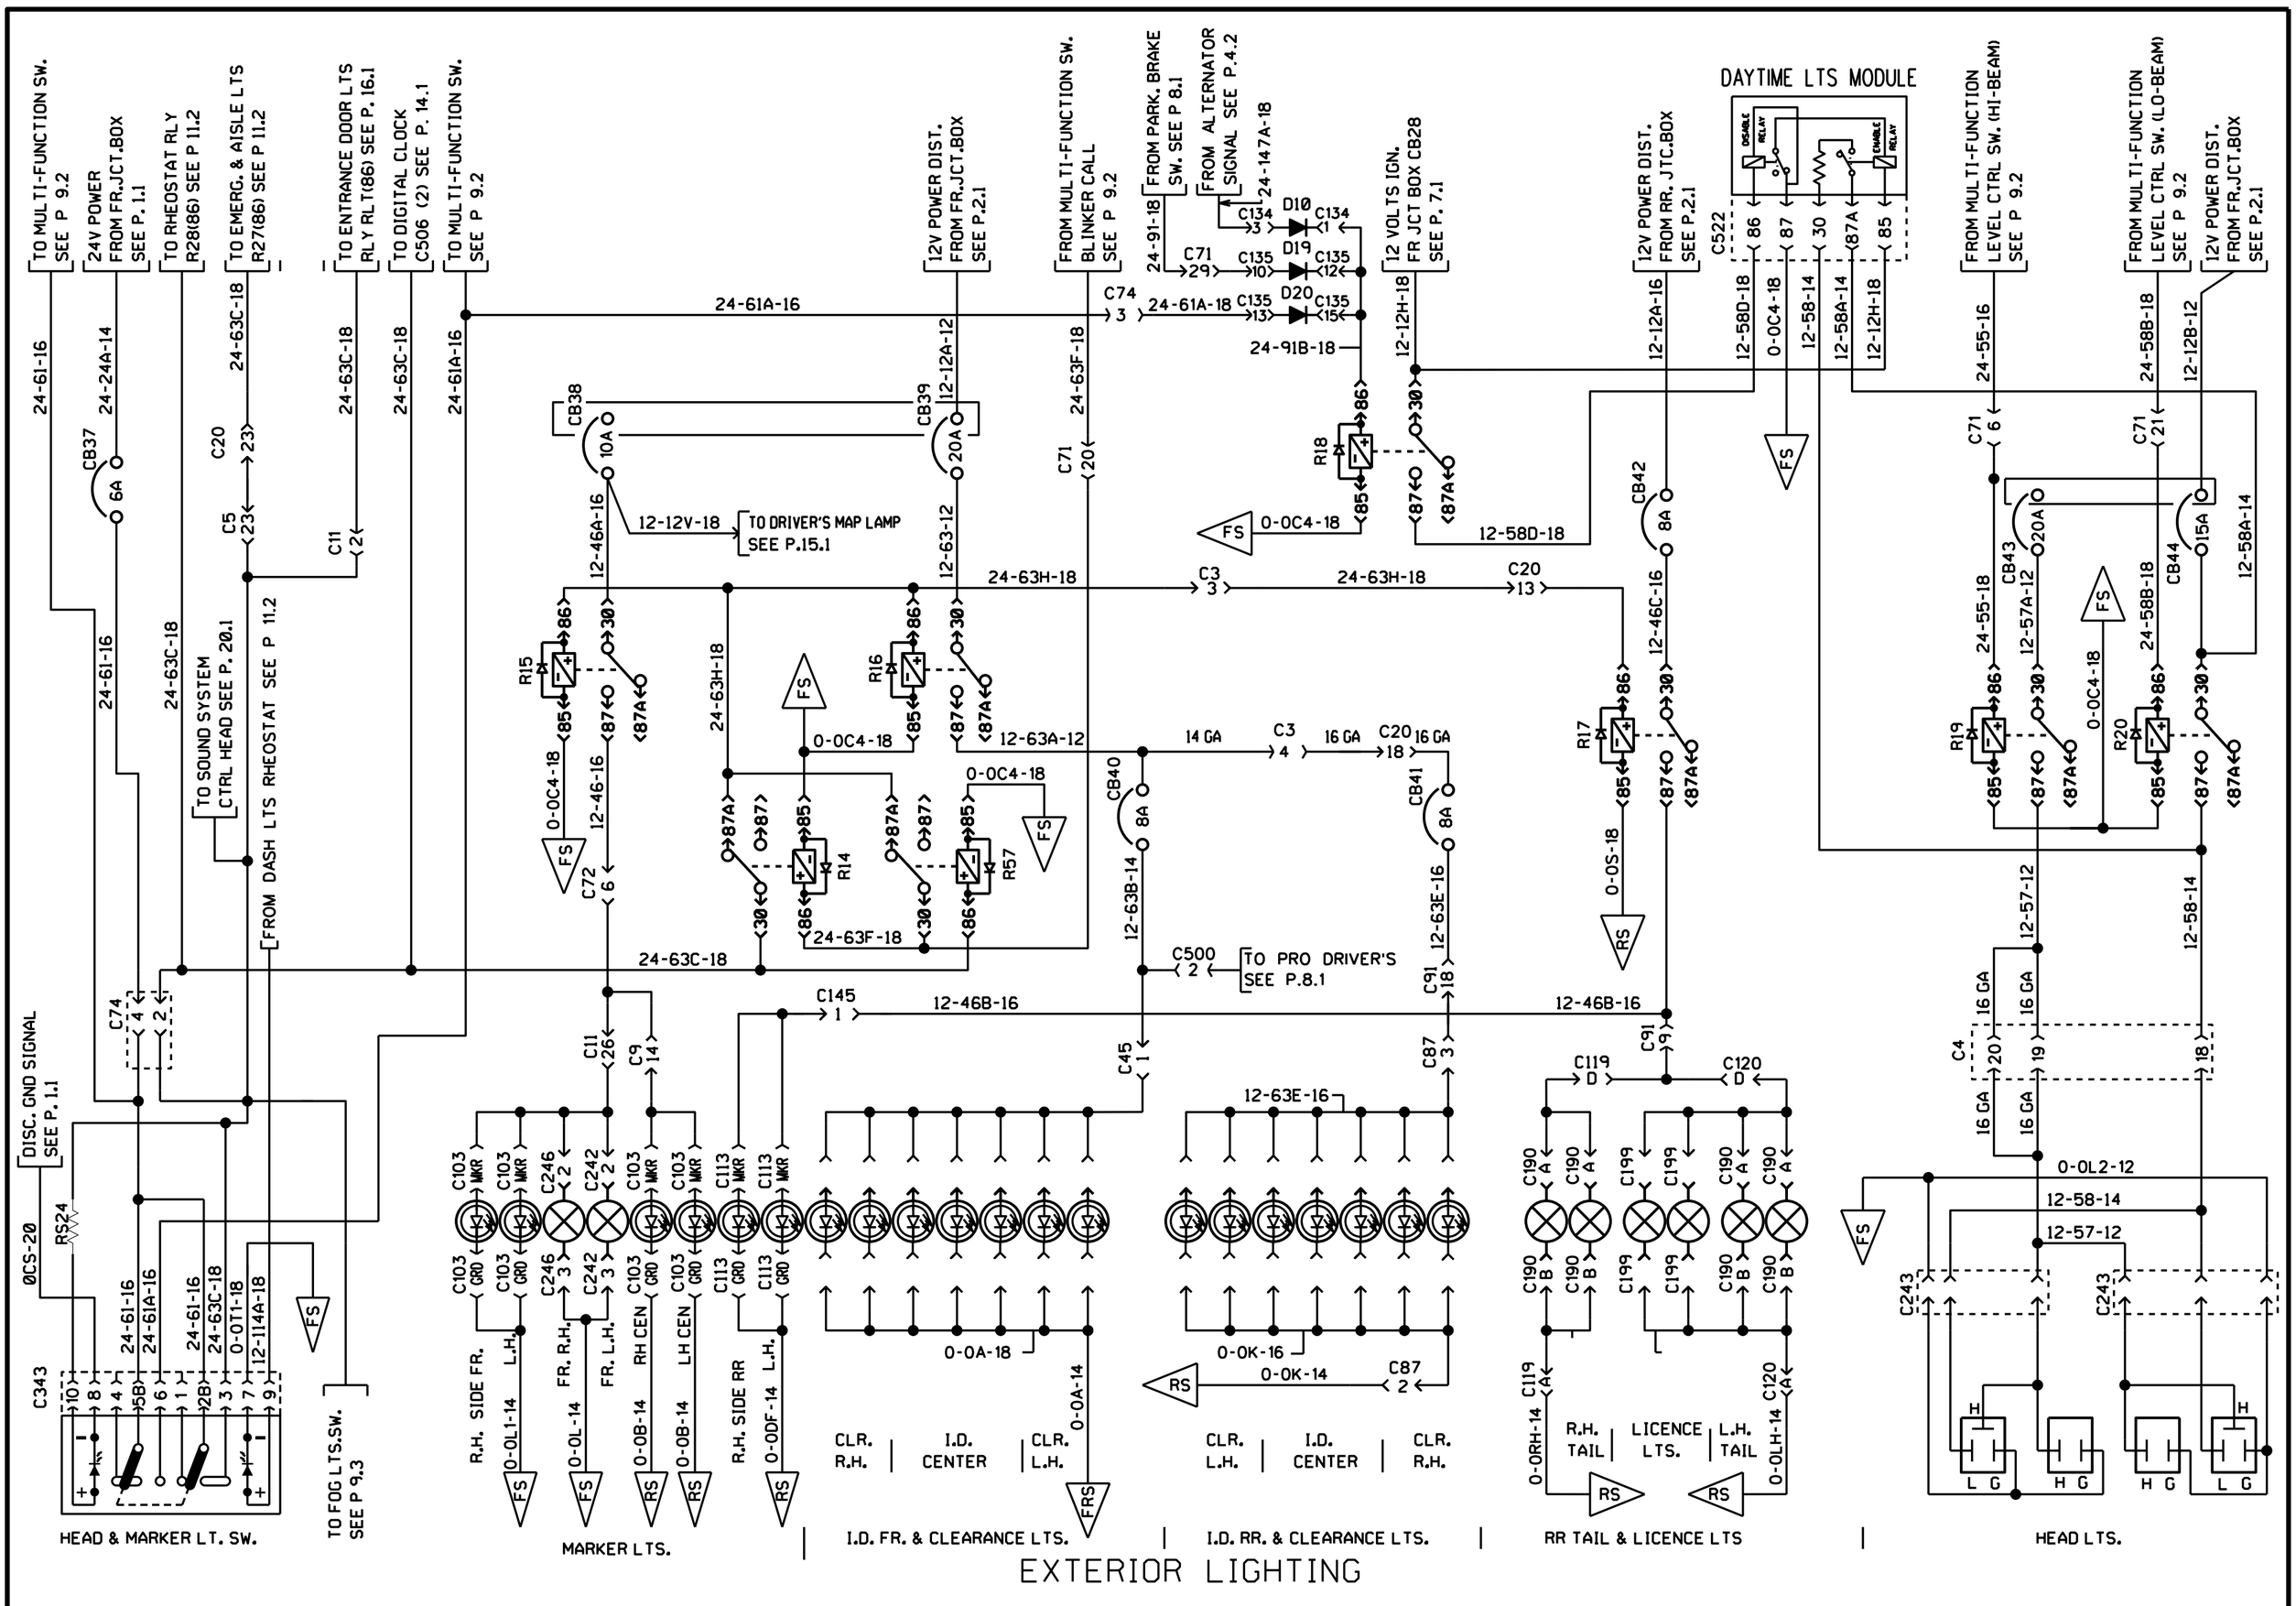


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 9.1	REVISION 04

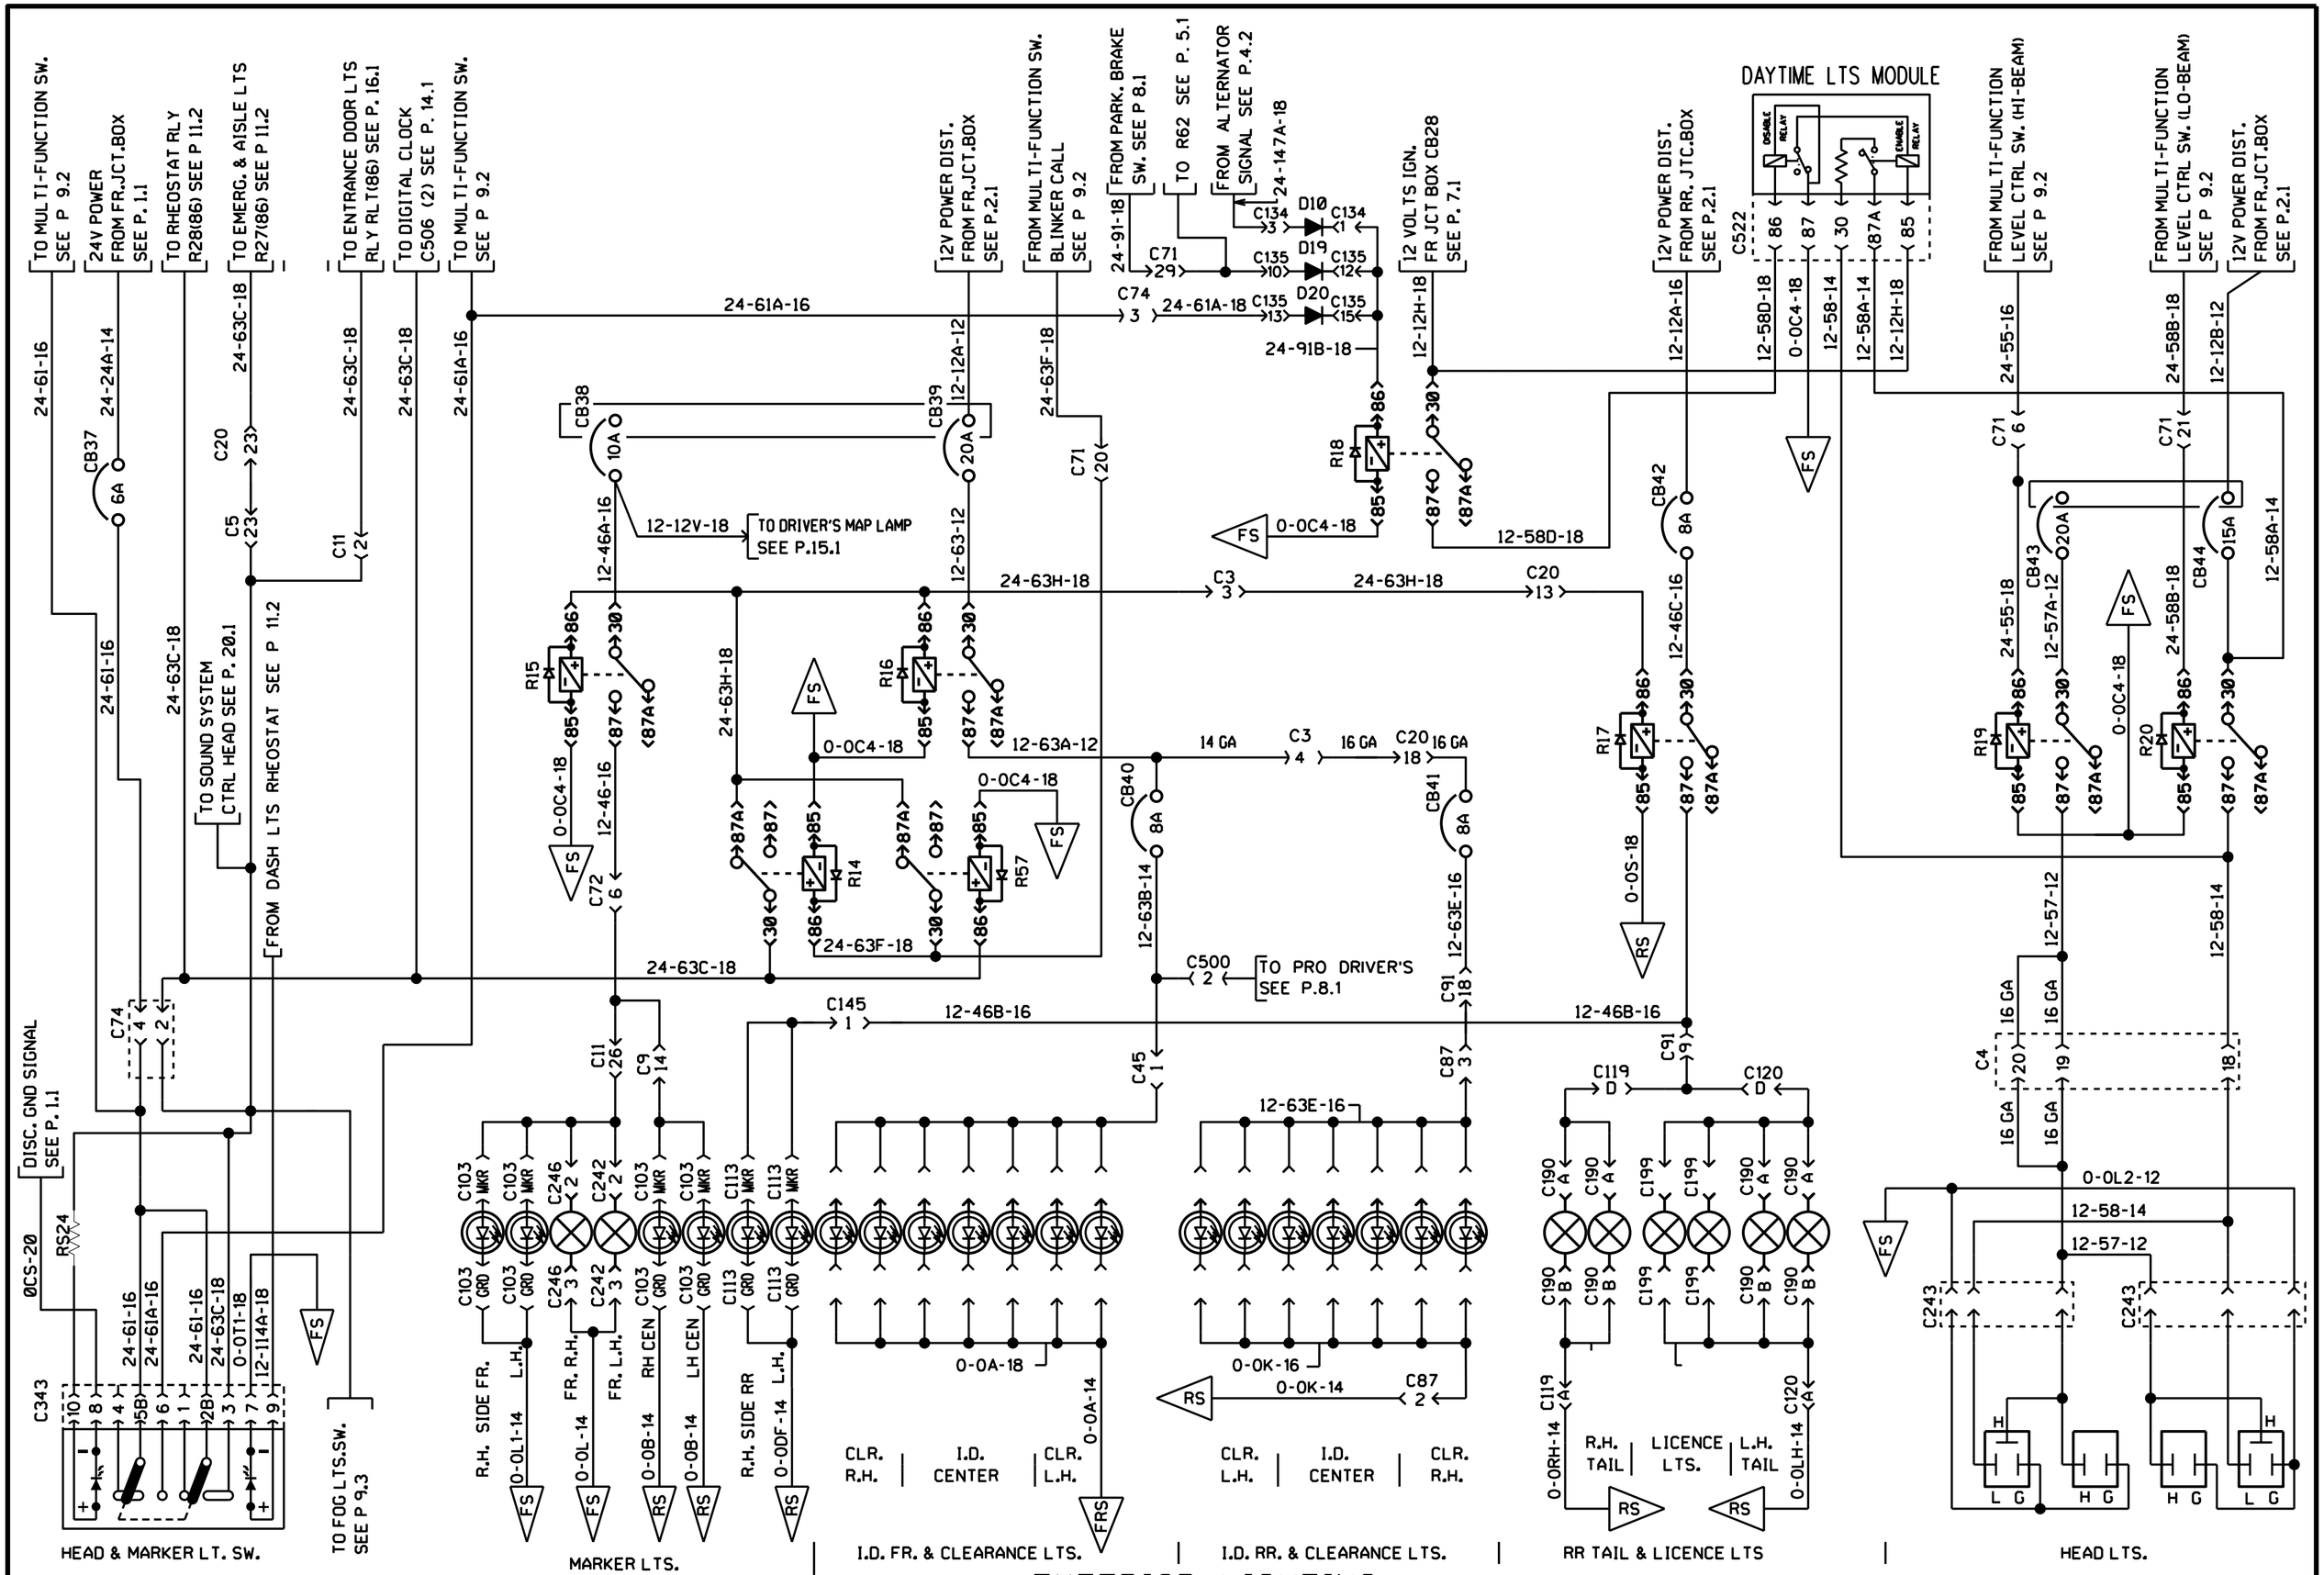


EXTERIOR LIGHTING

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 9.1	REVISION 11

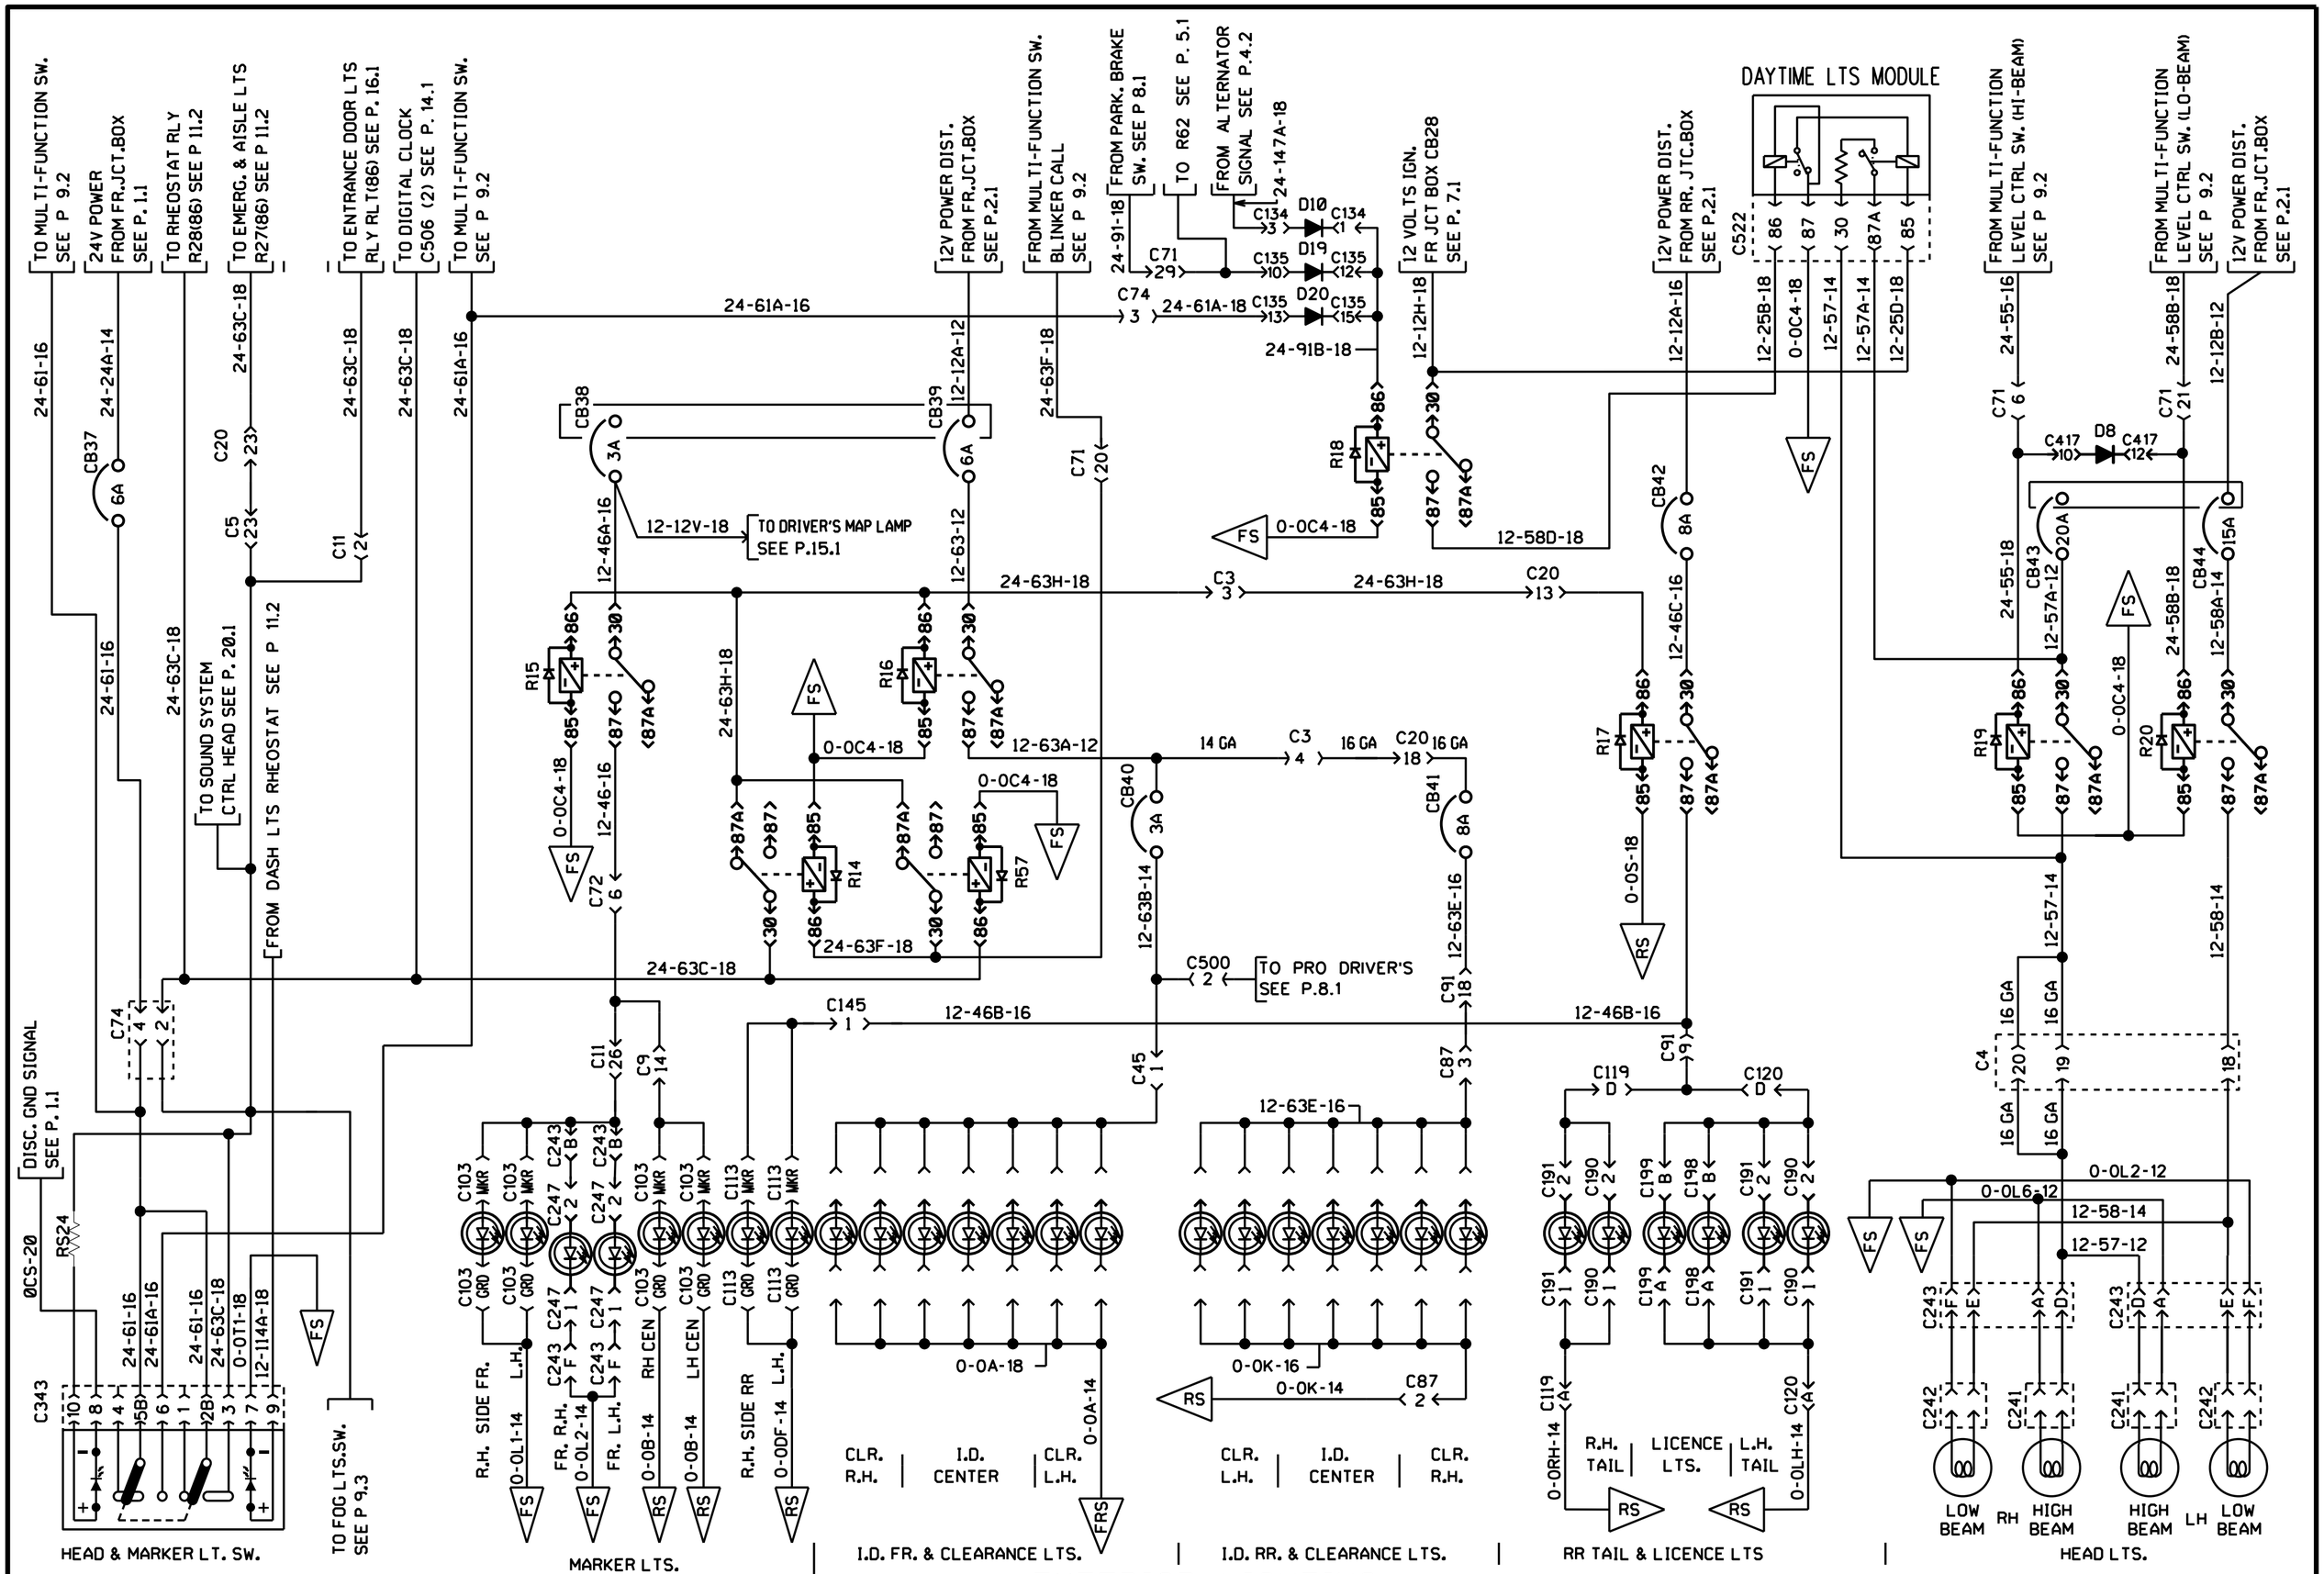


EXTERIOR LIGHTING

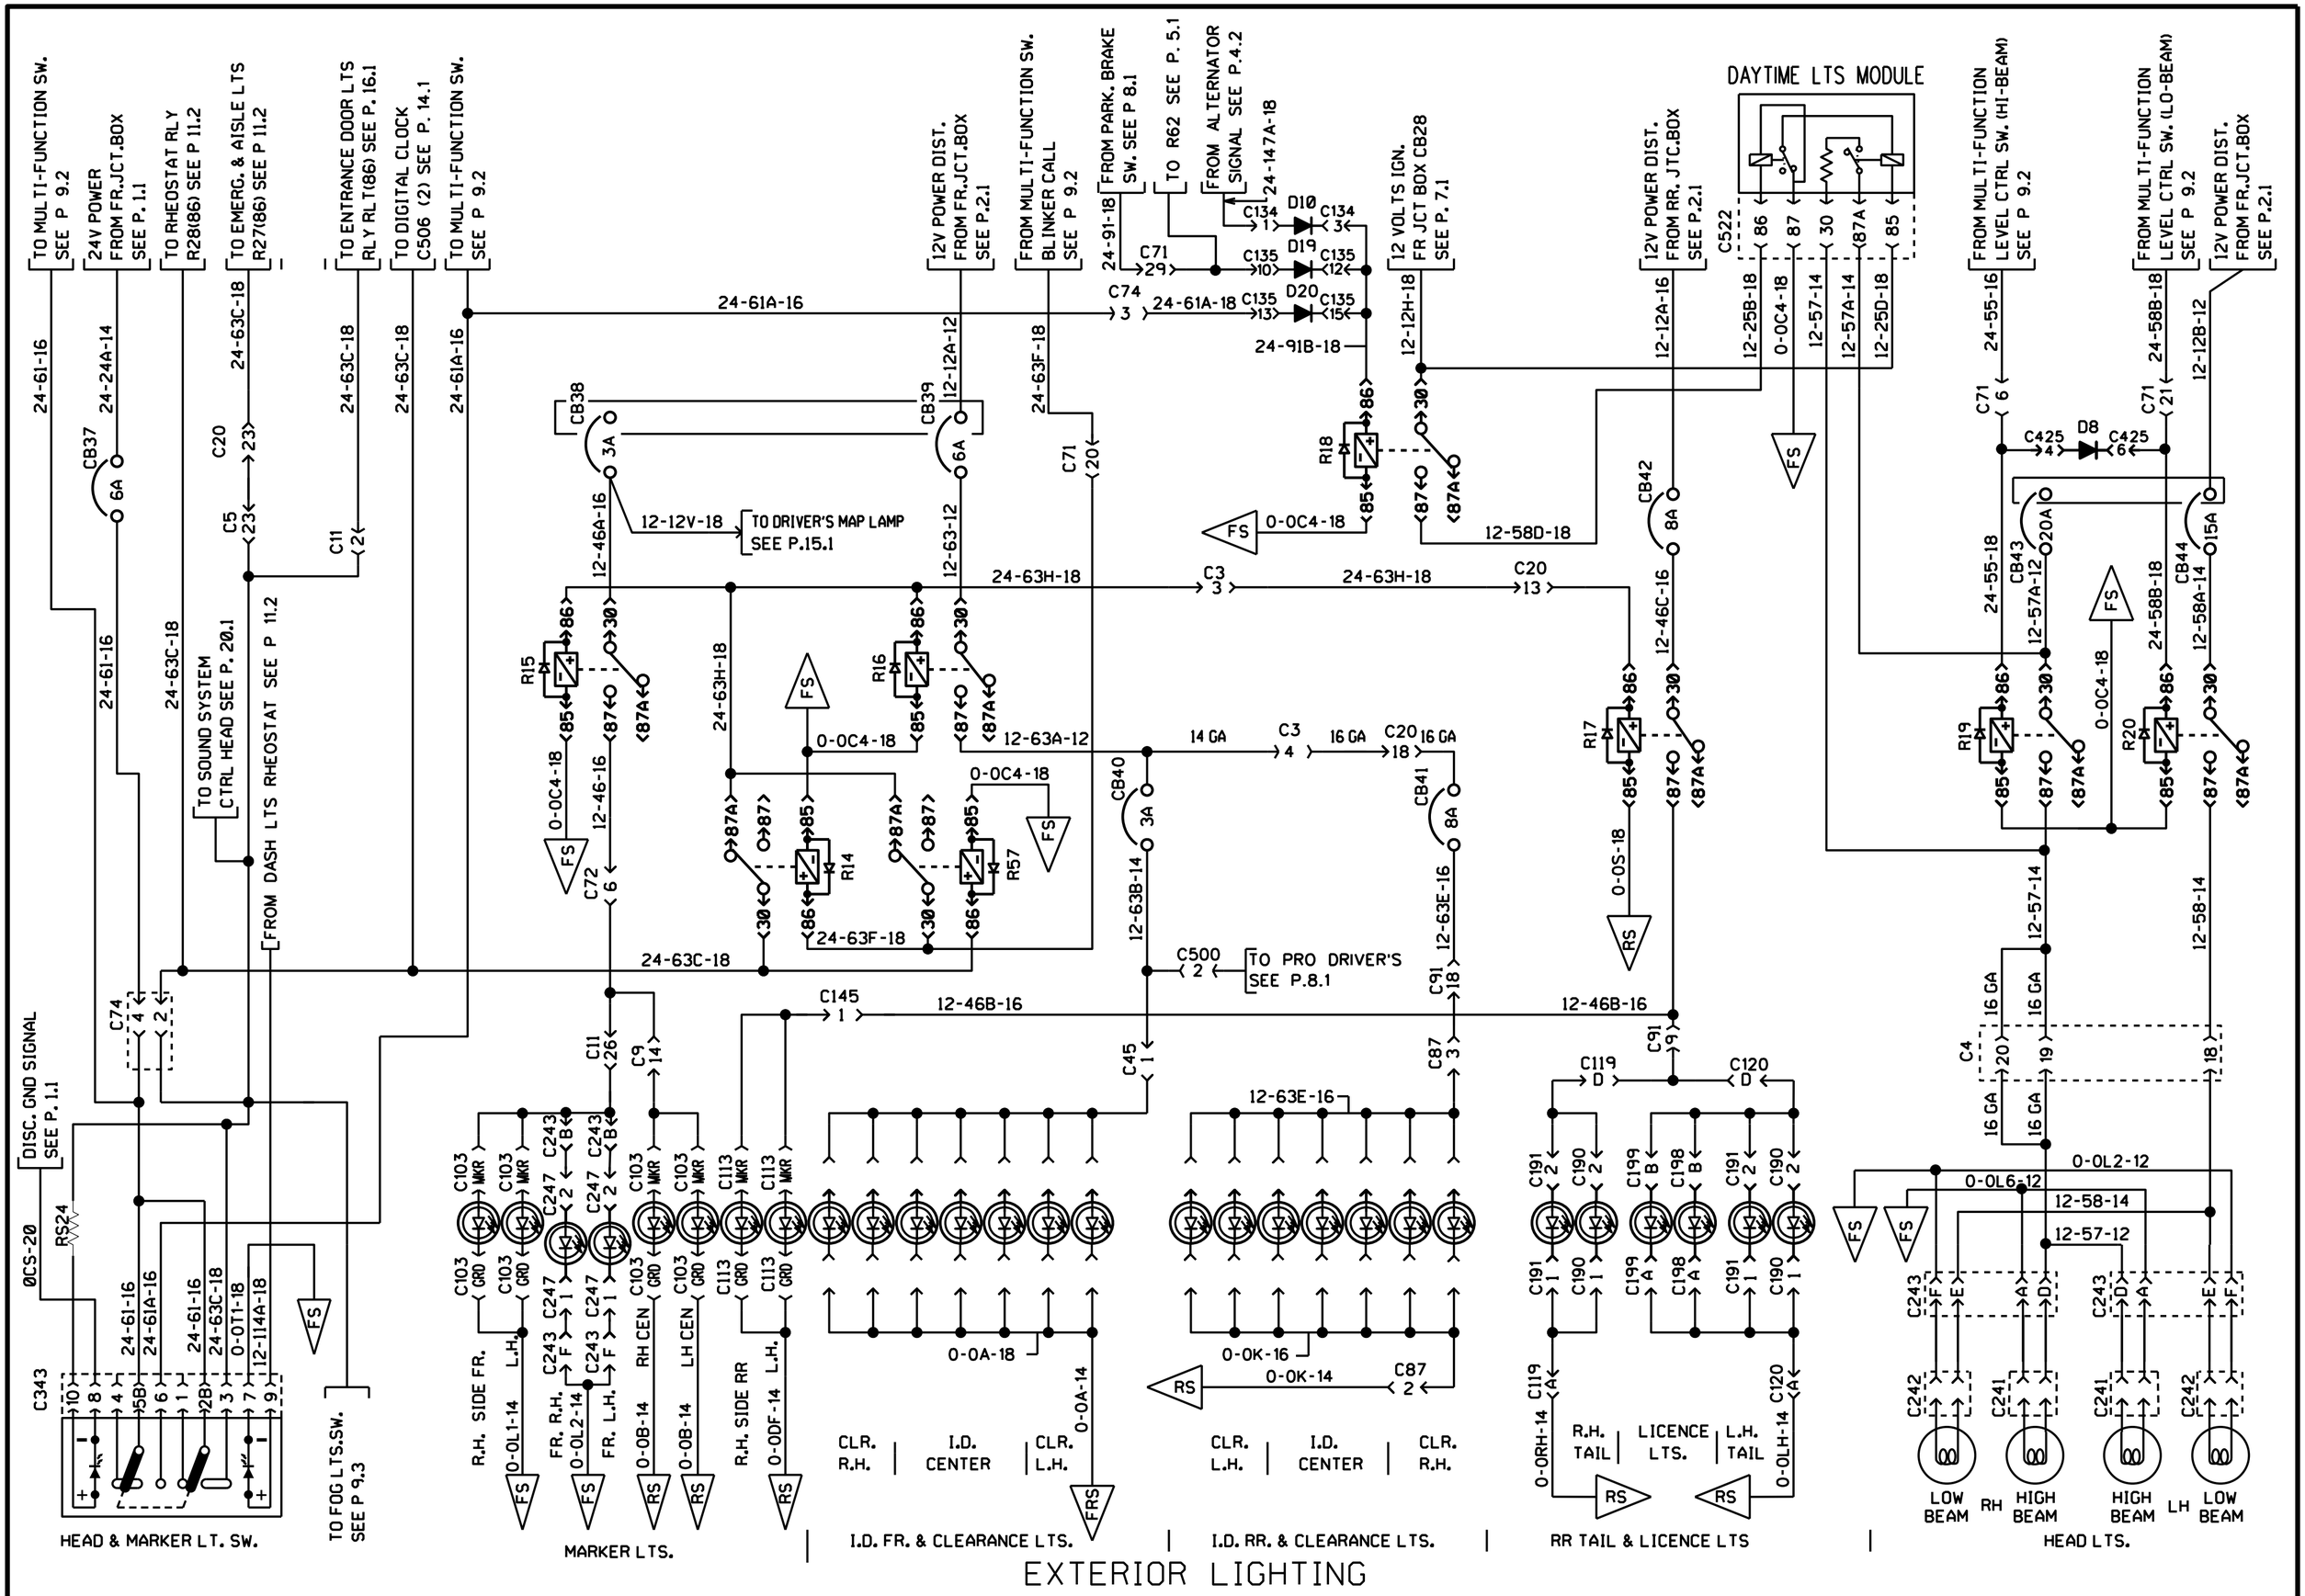


EXTERIOR LIGHTING


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 9.1	REVISION 20

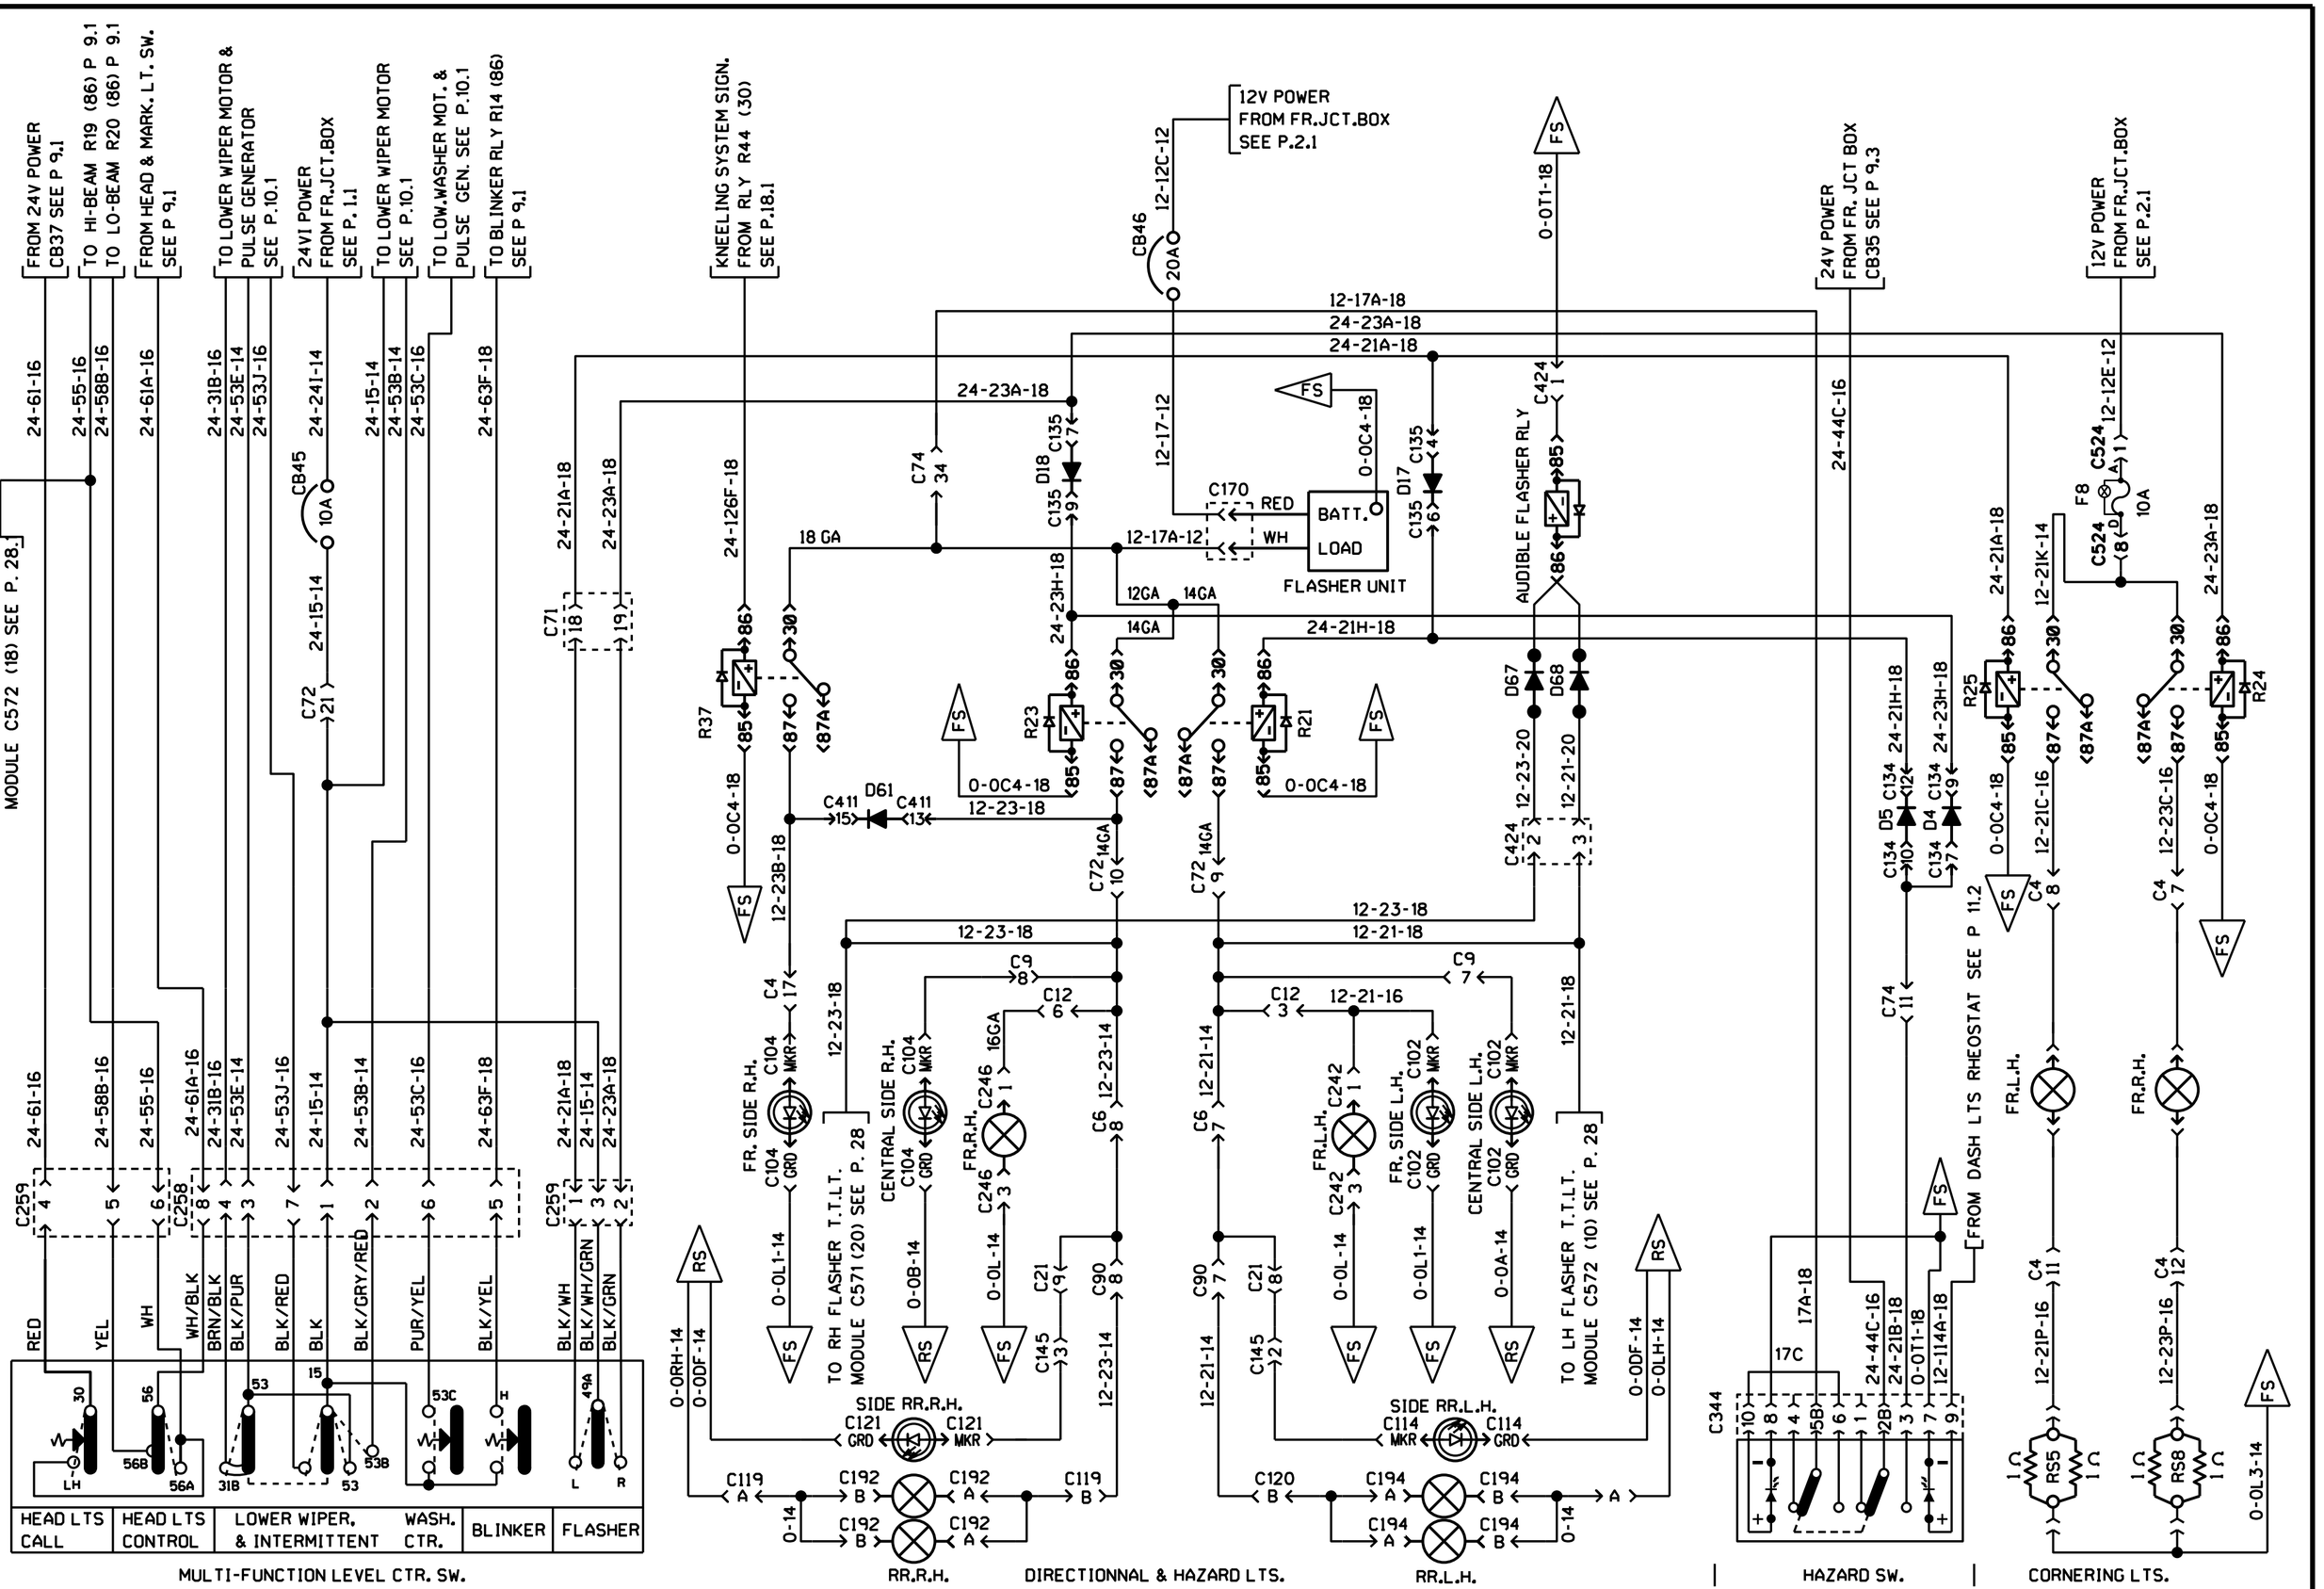


EXTERIOR LIGHTING

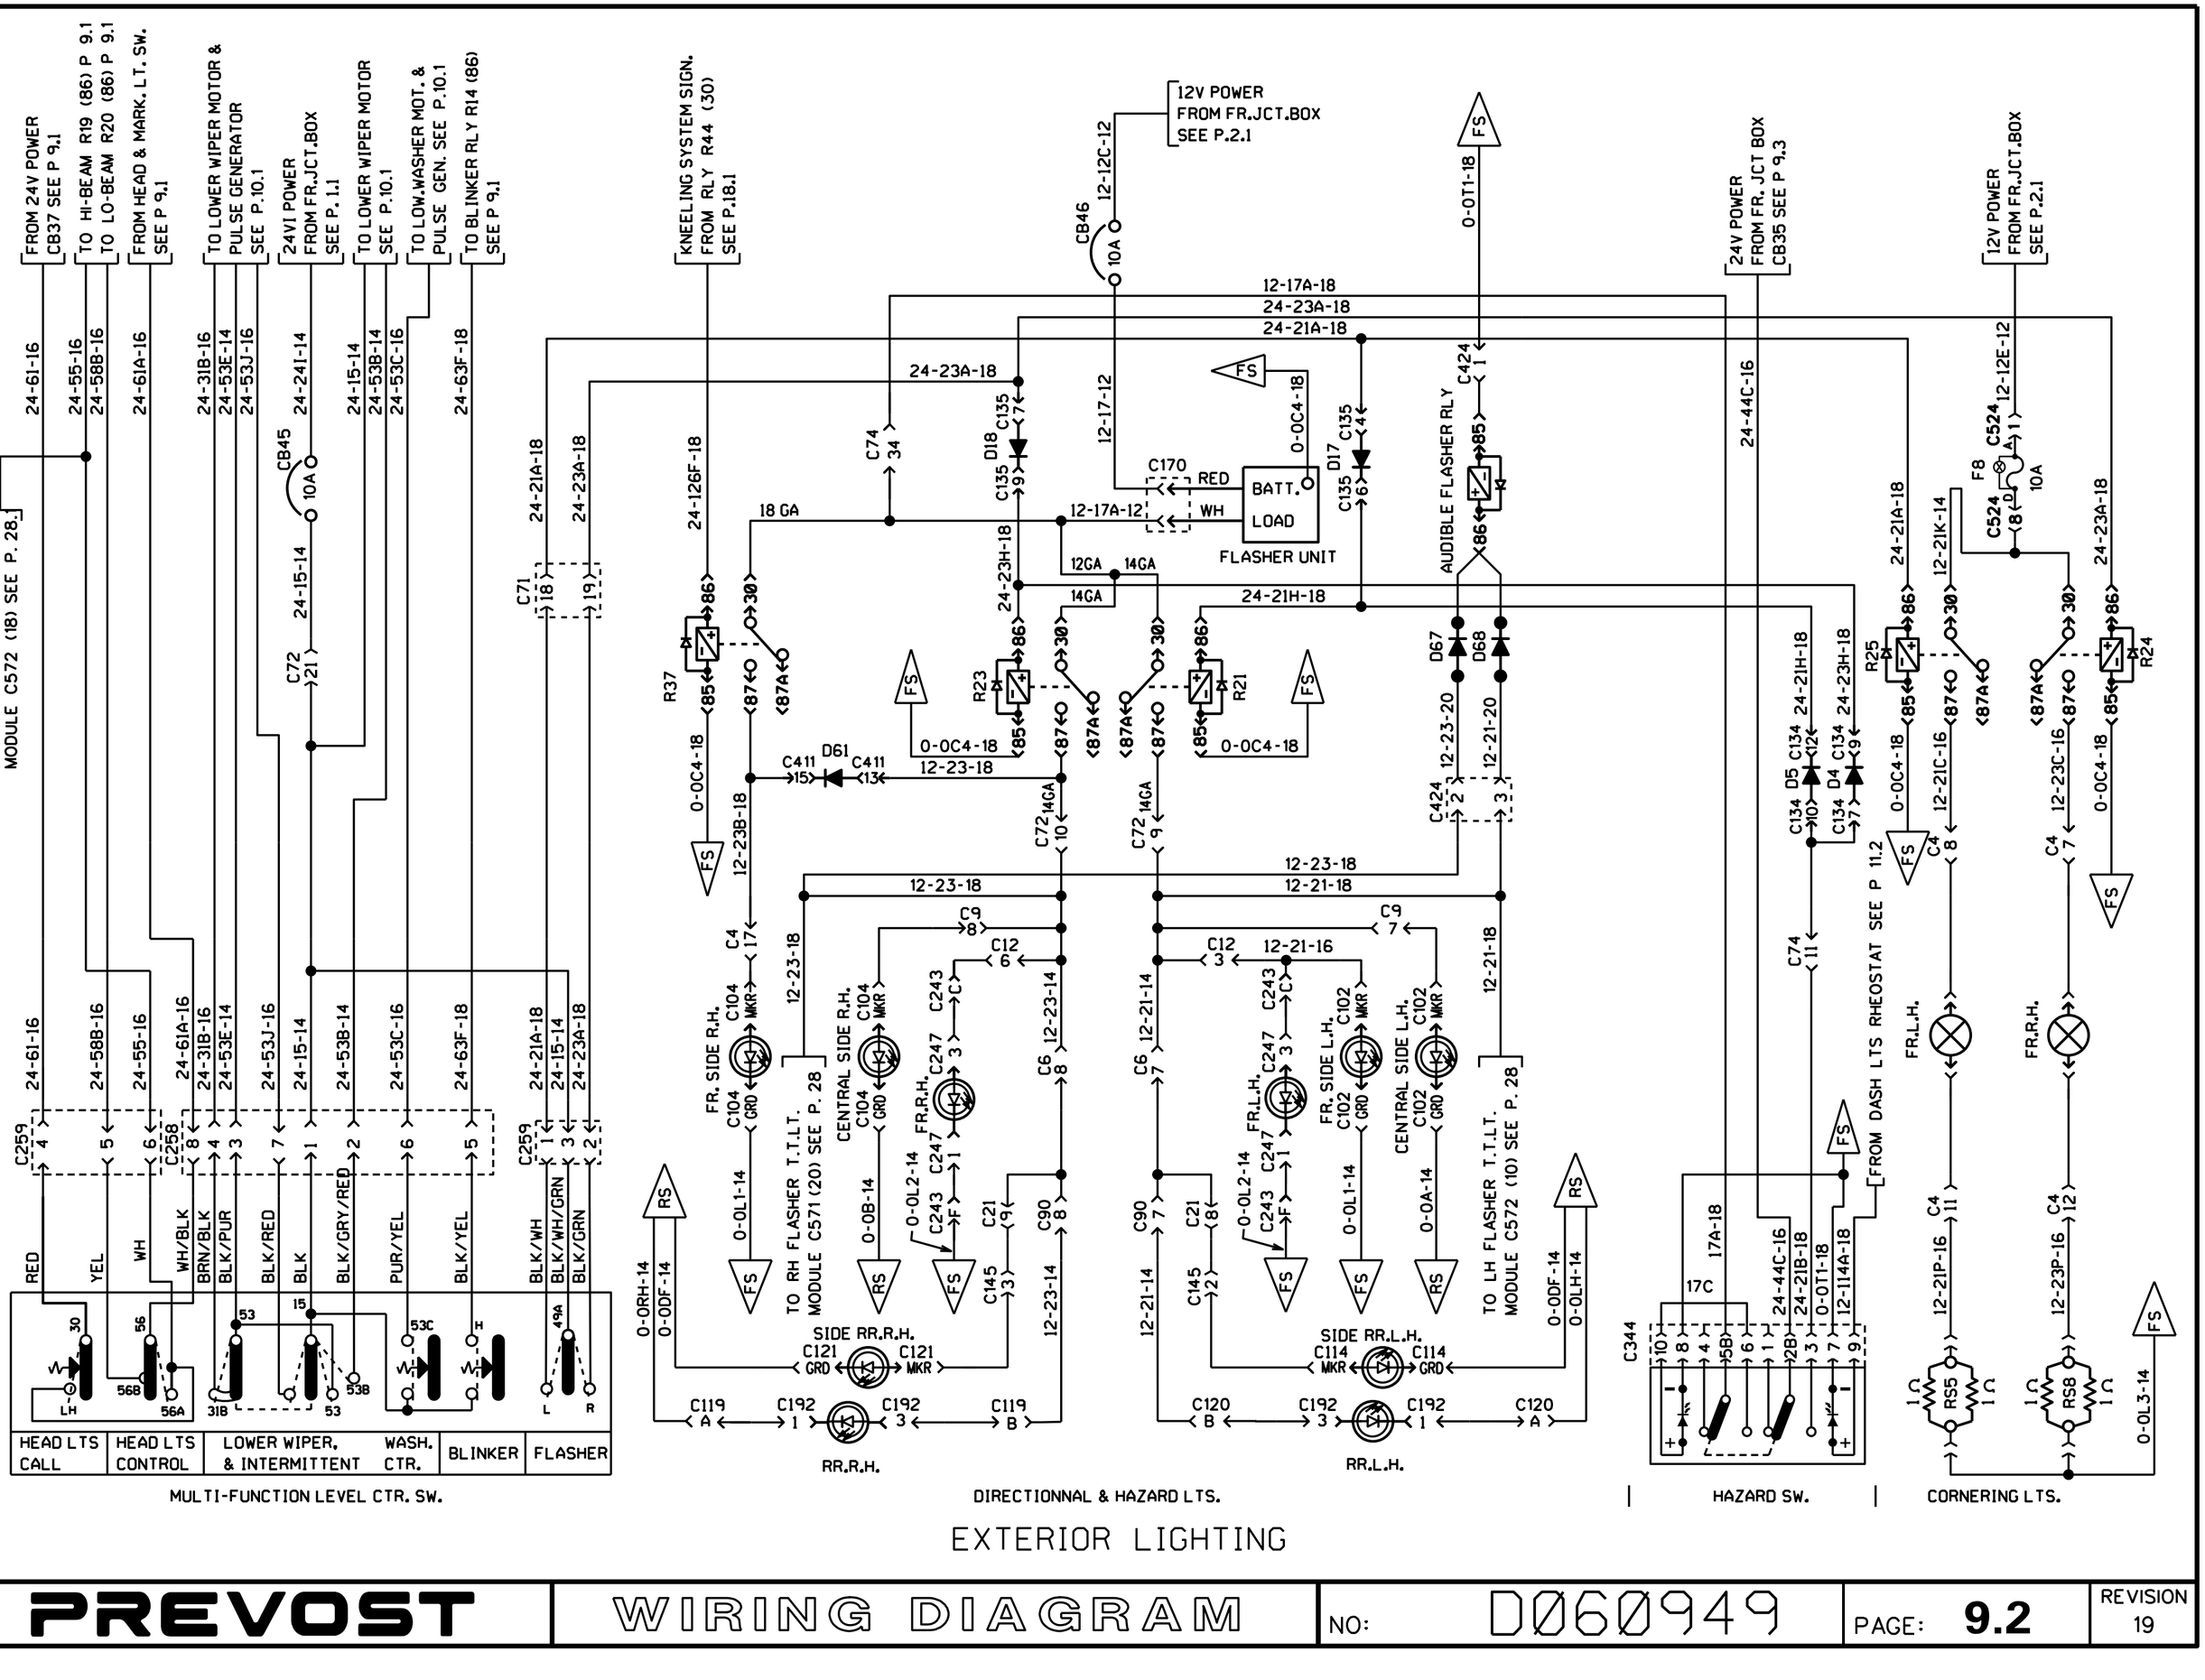


EXTERIOR LIGHTING

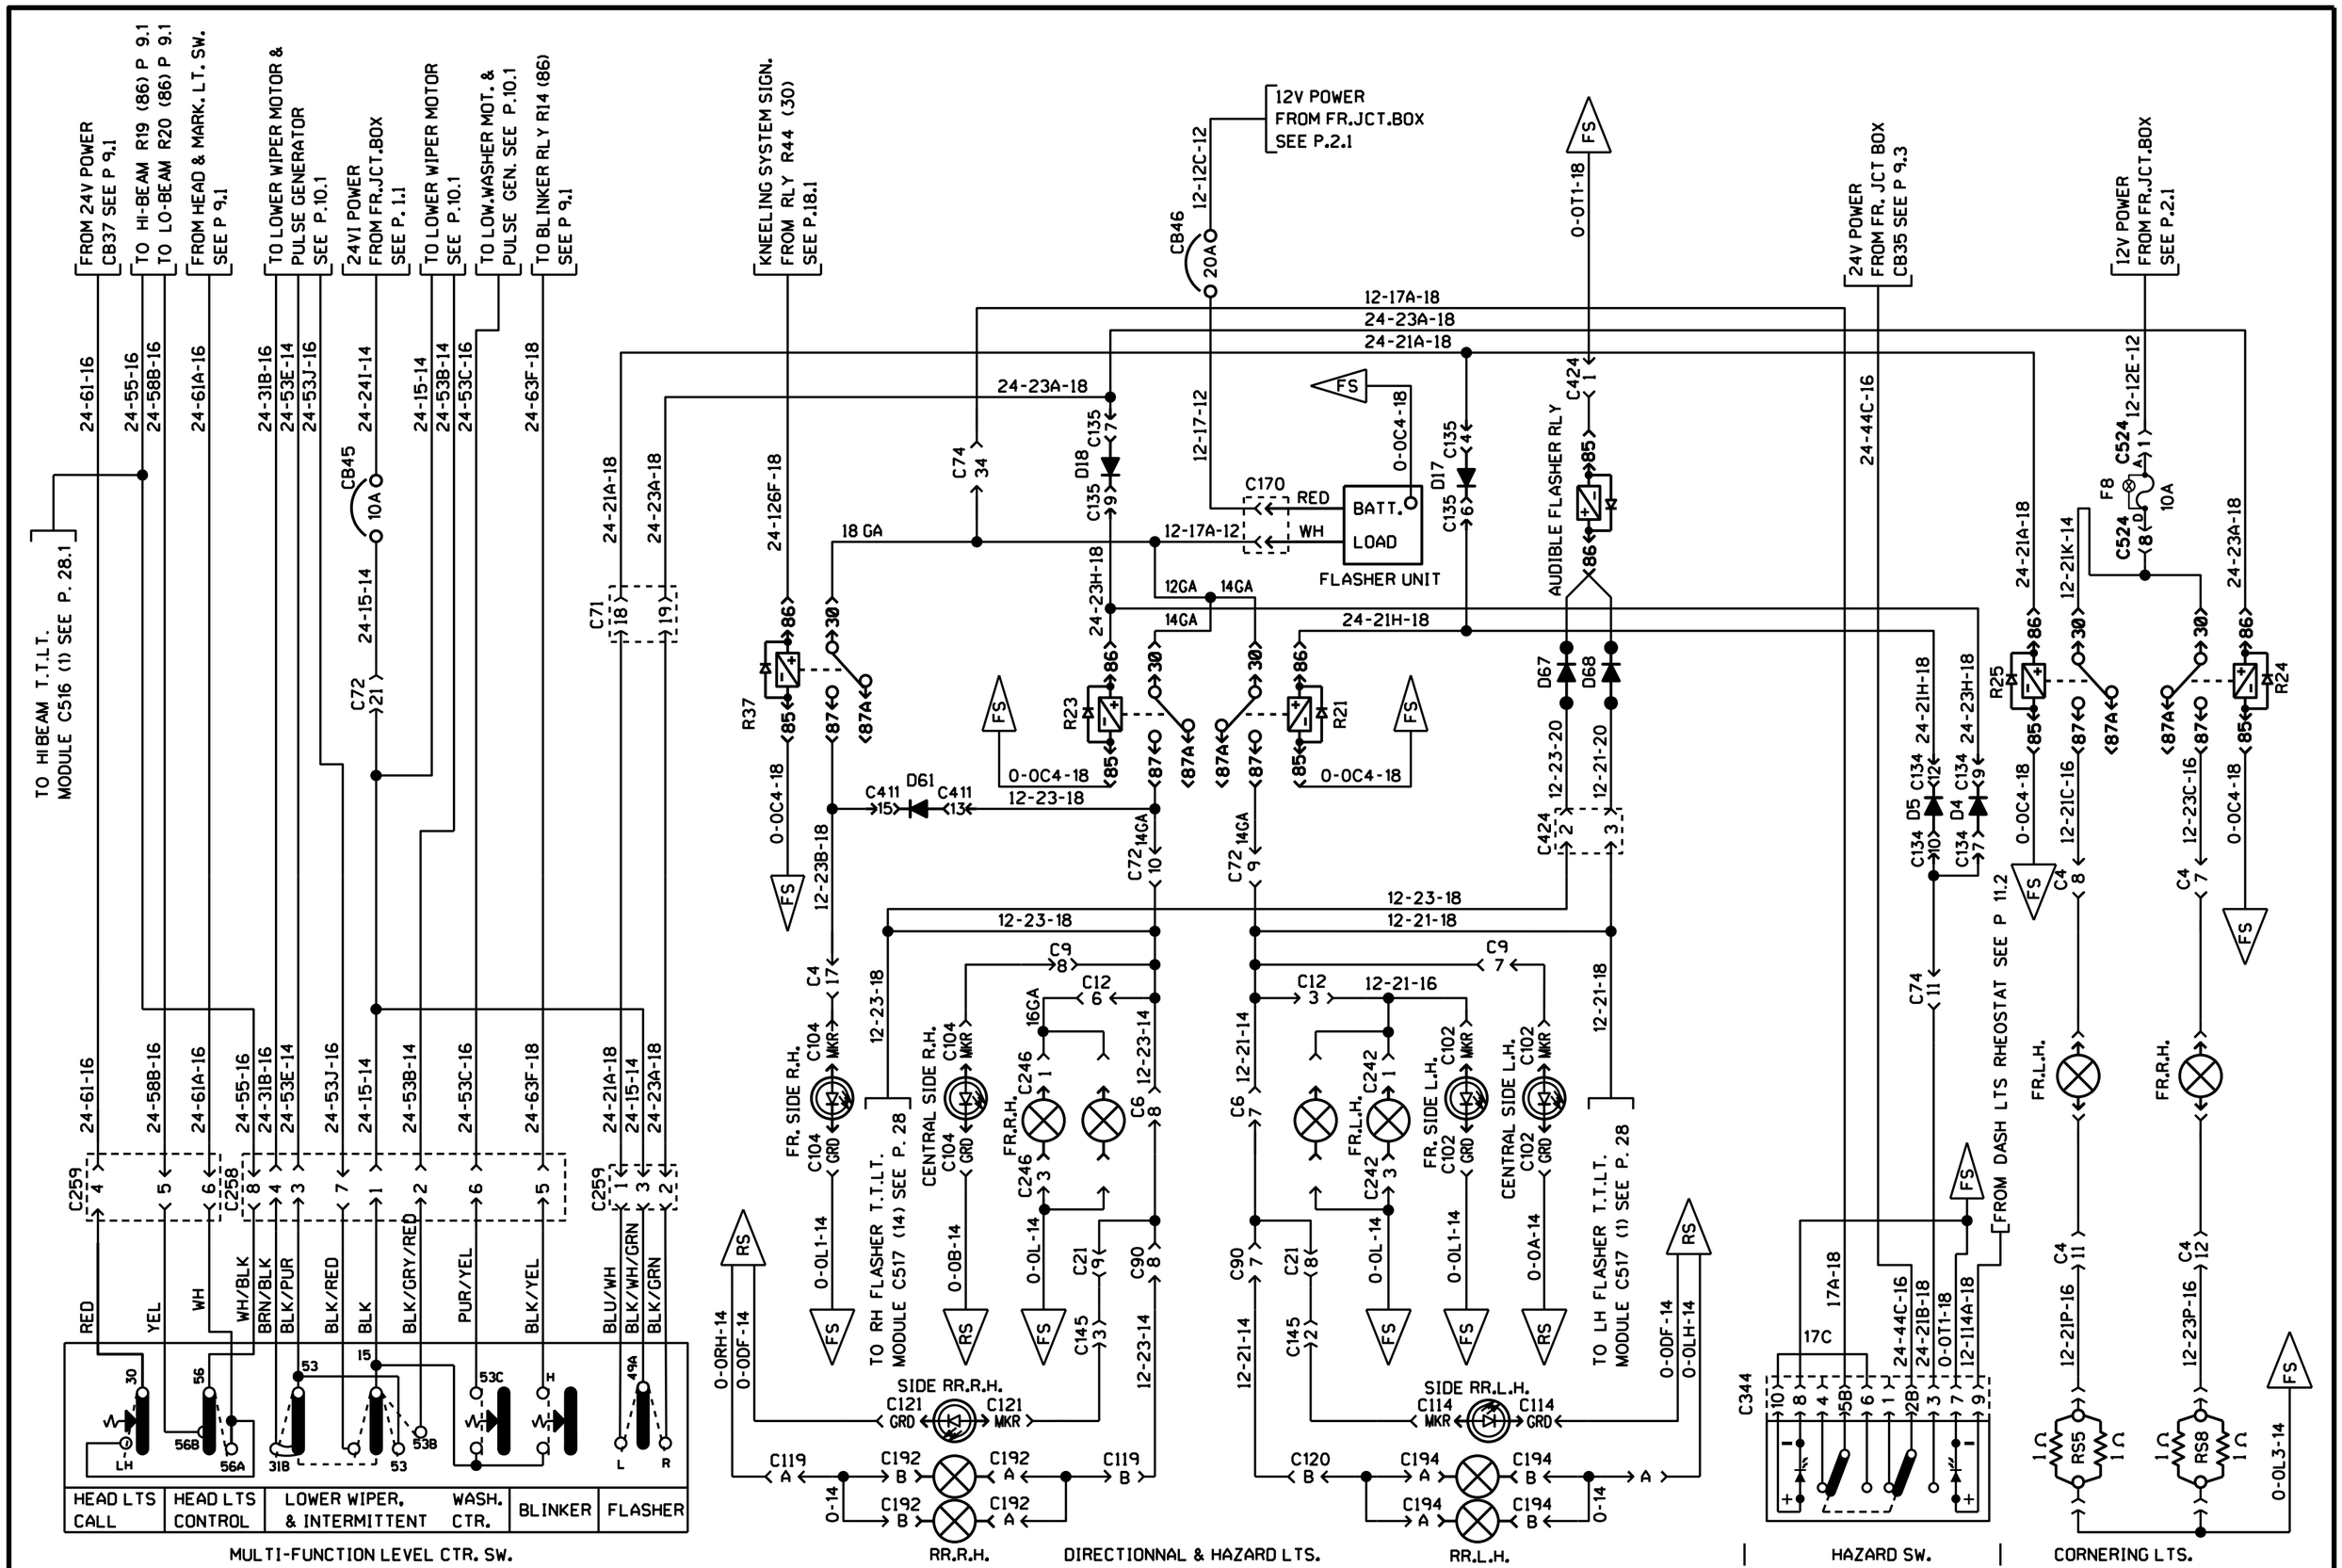


EXTERIOR LIGHTING

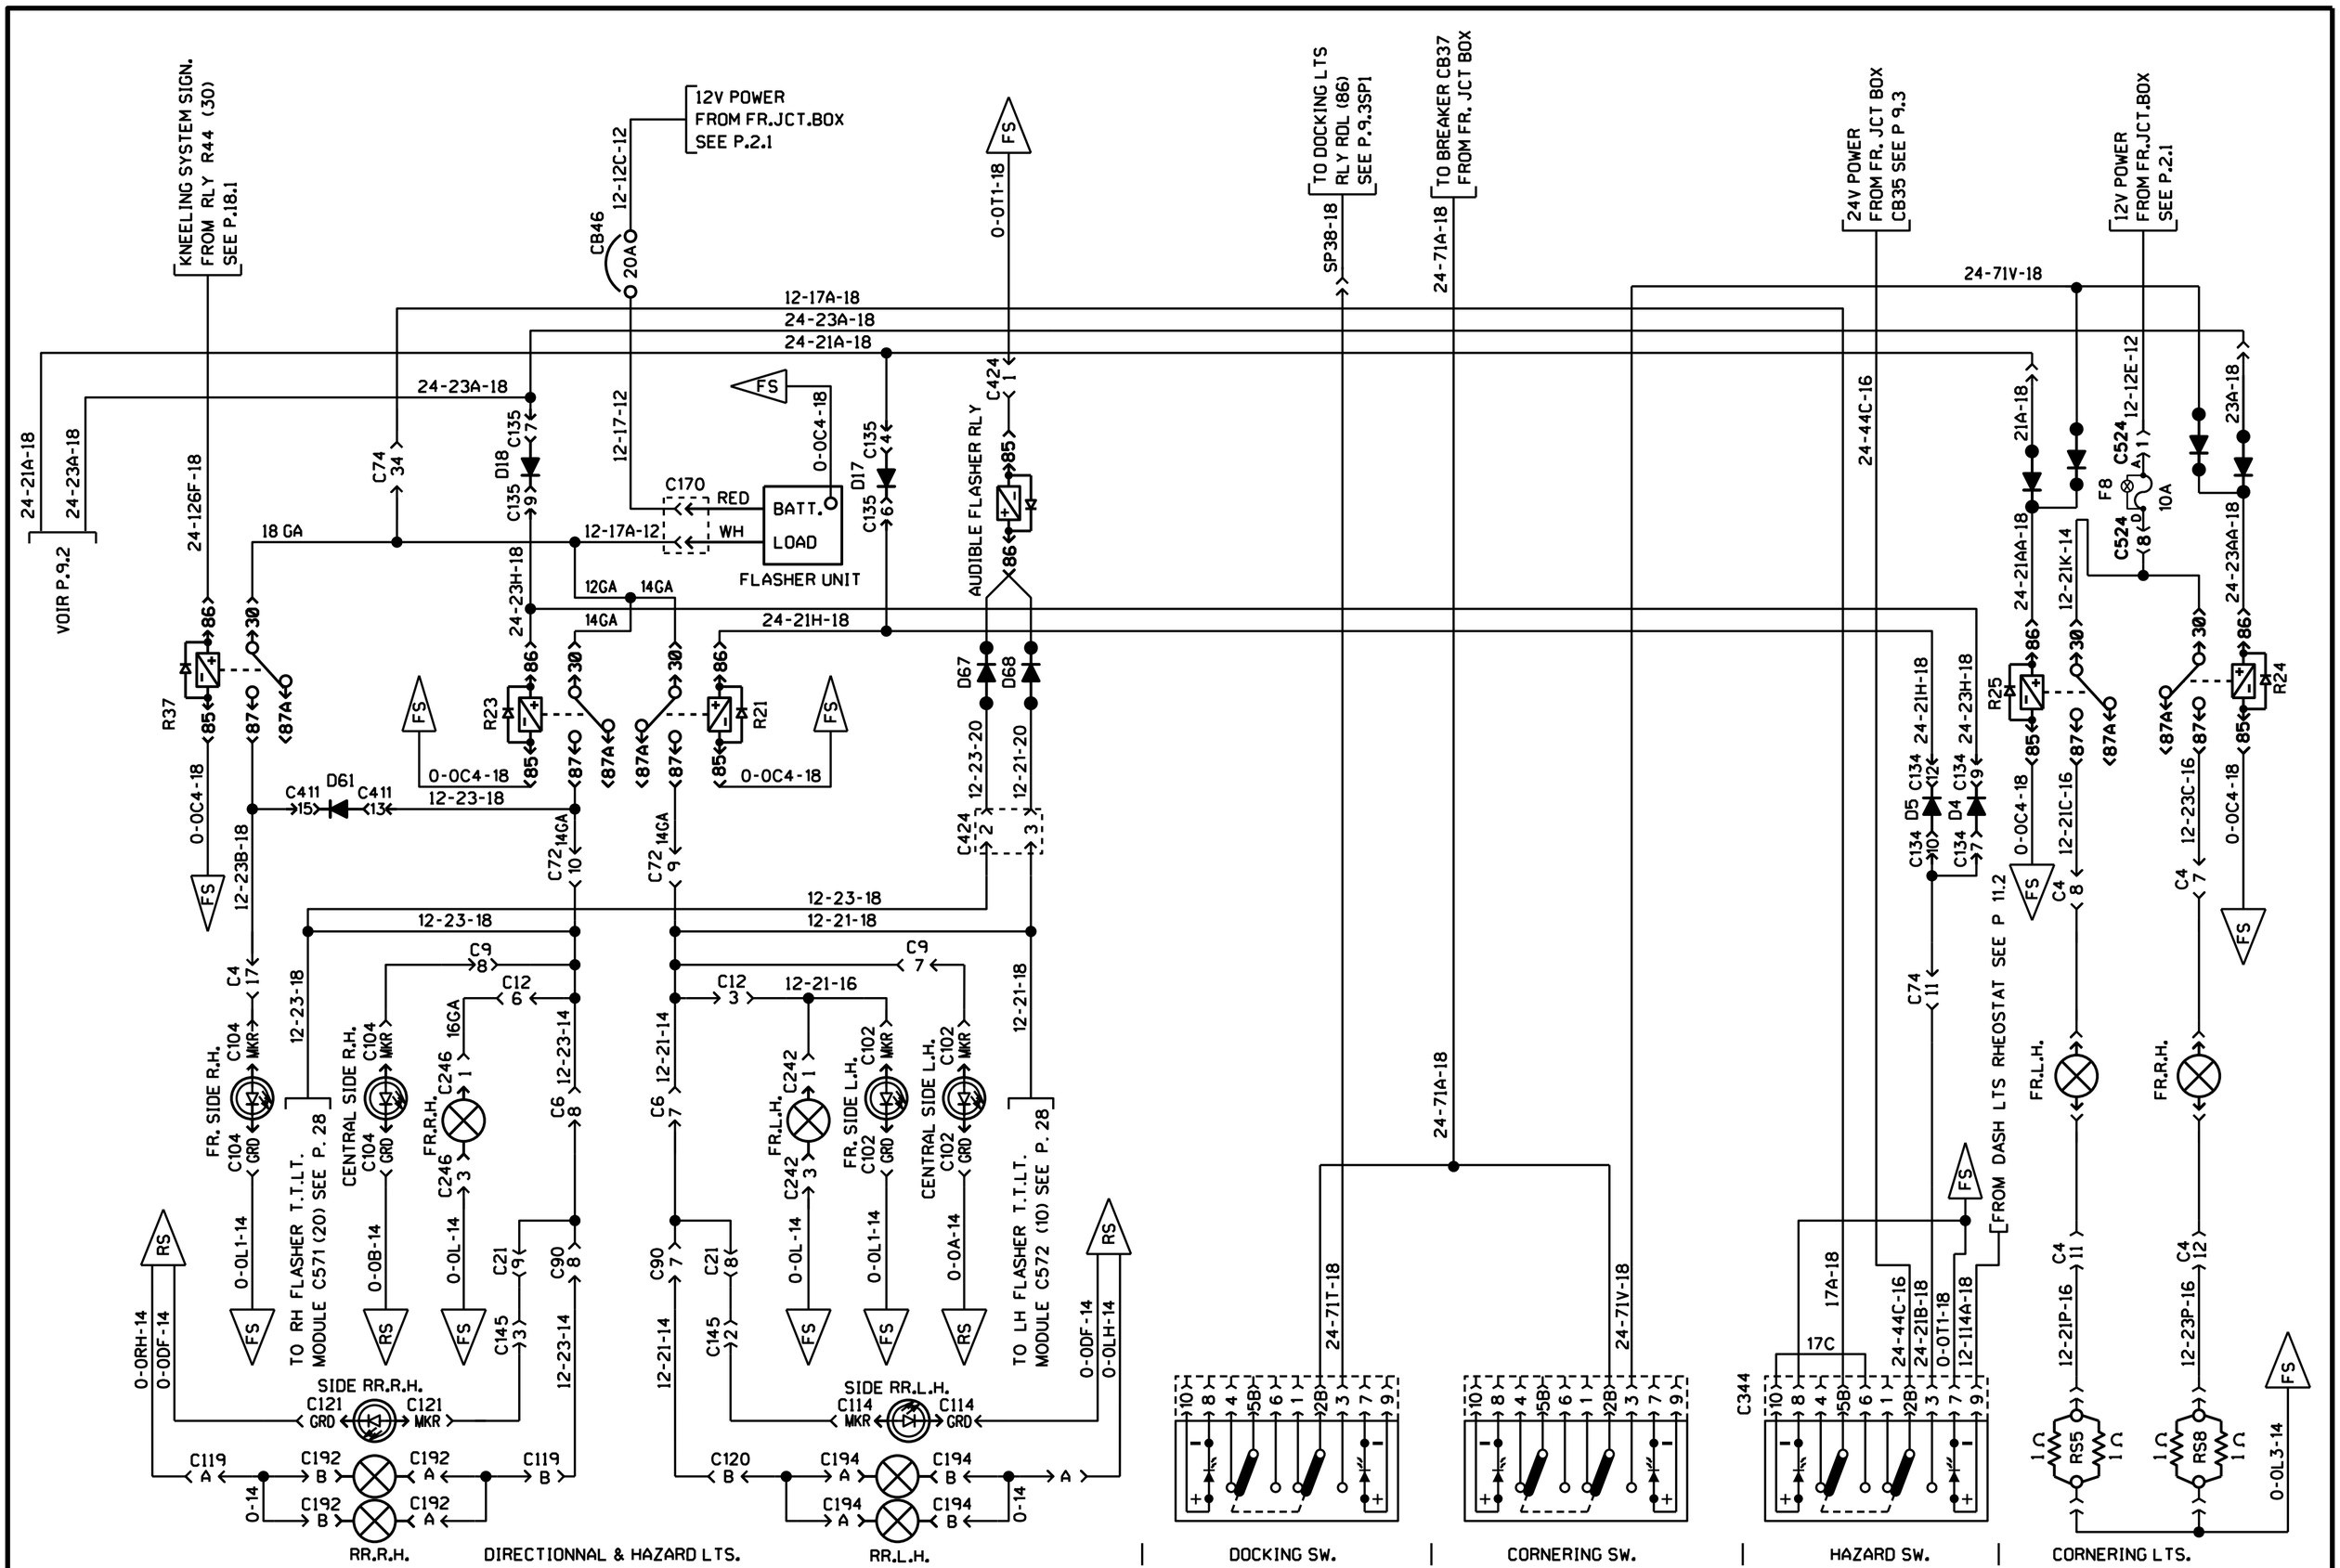


EXTERIOR LIGHTING

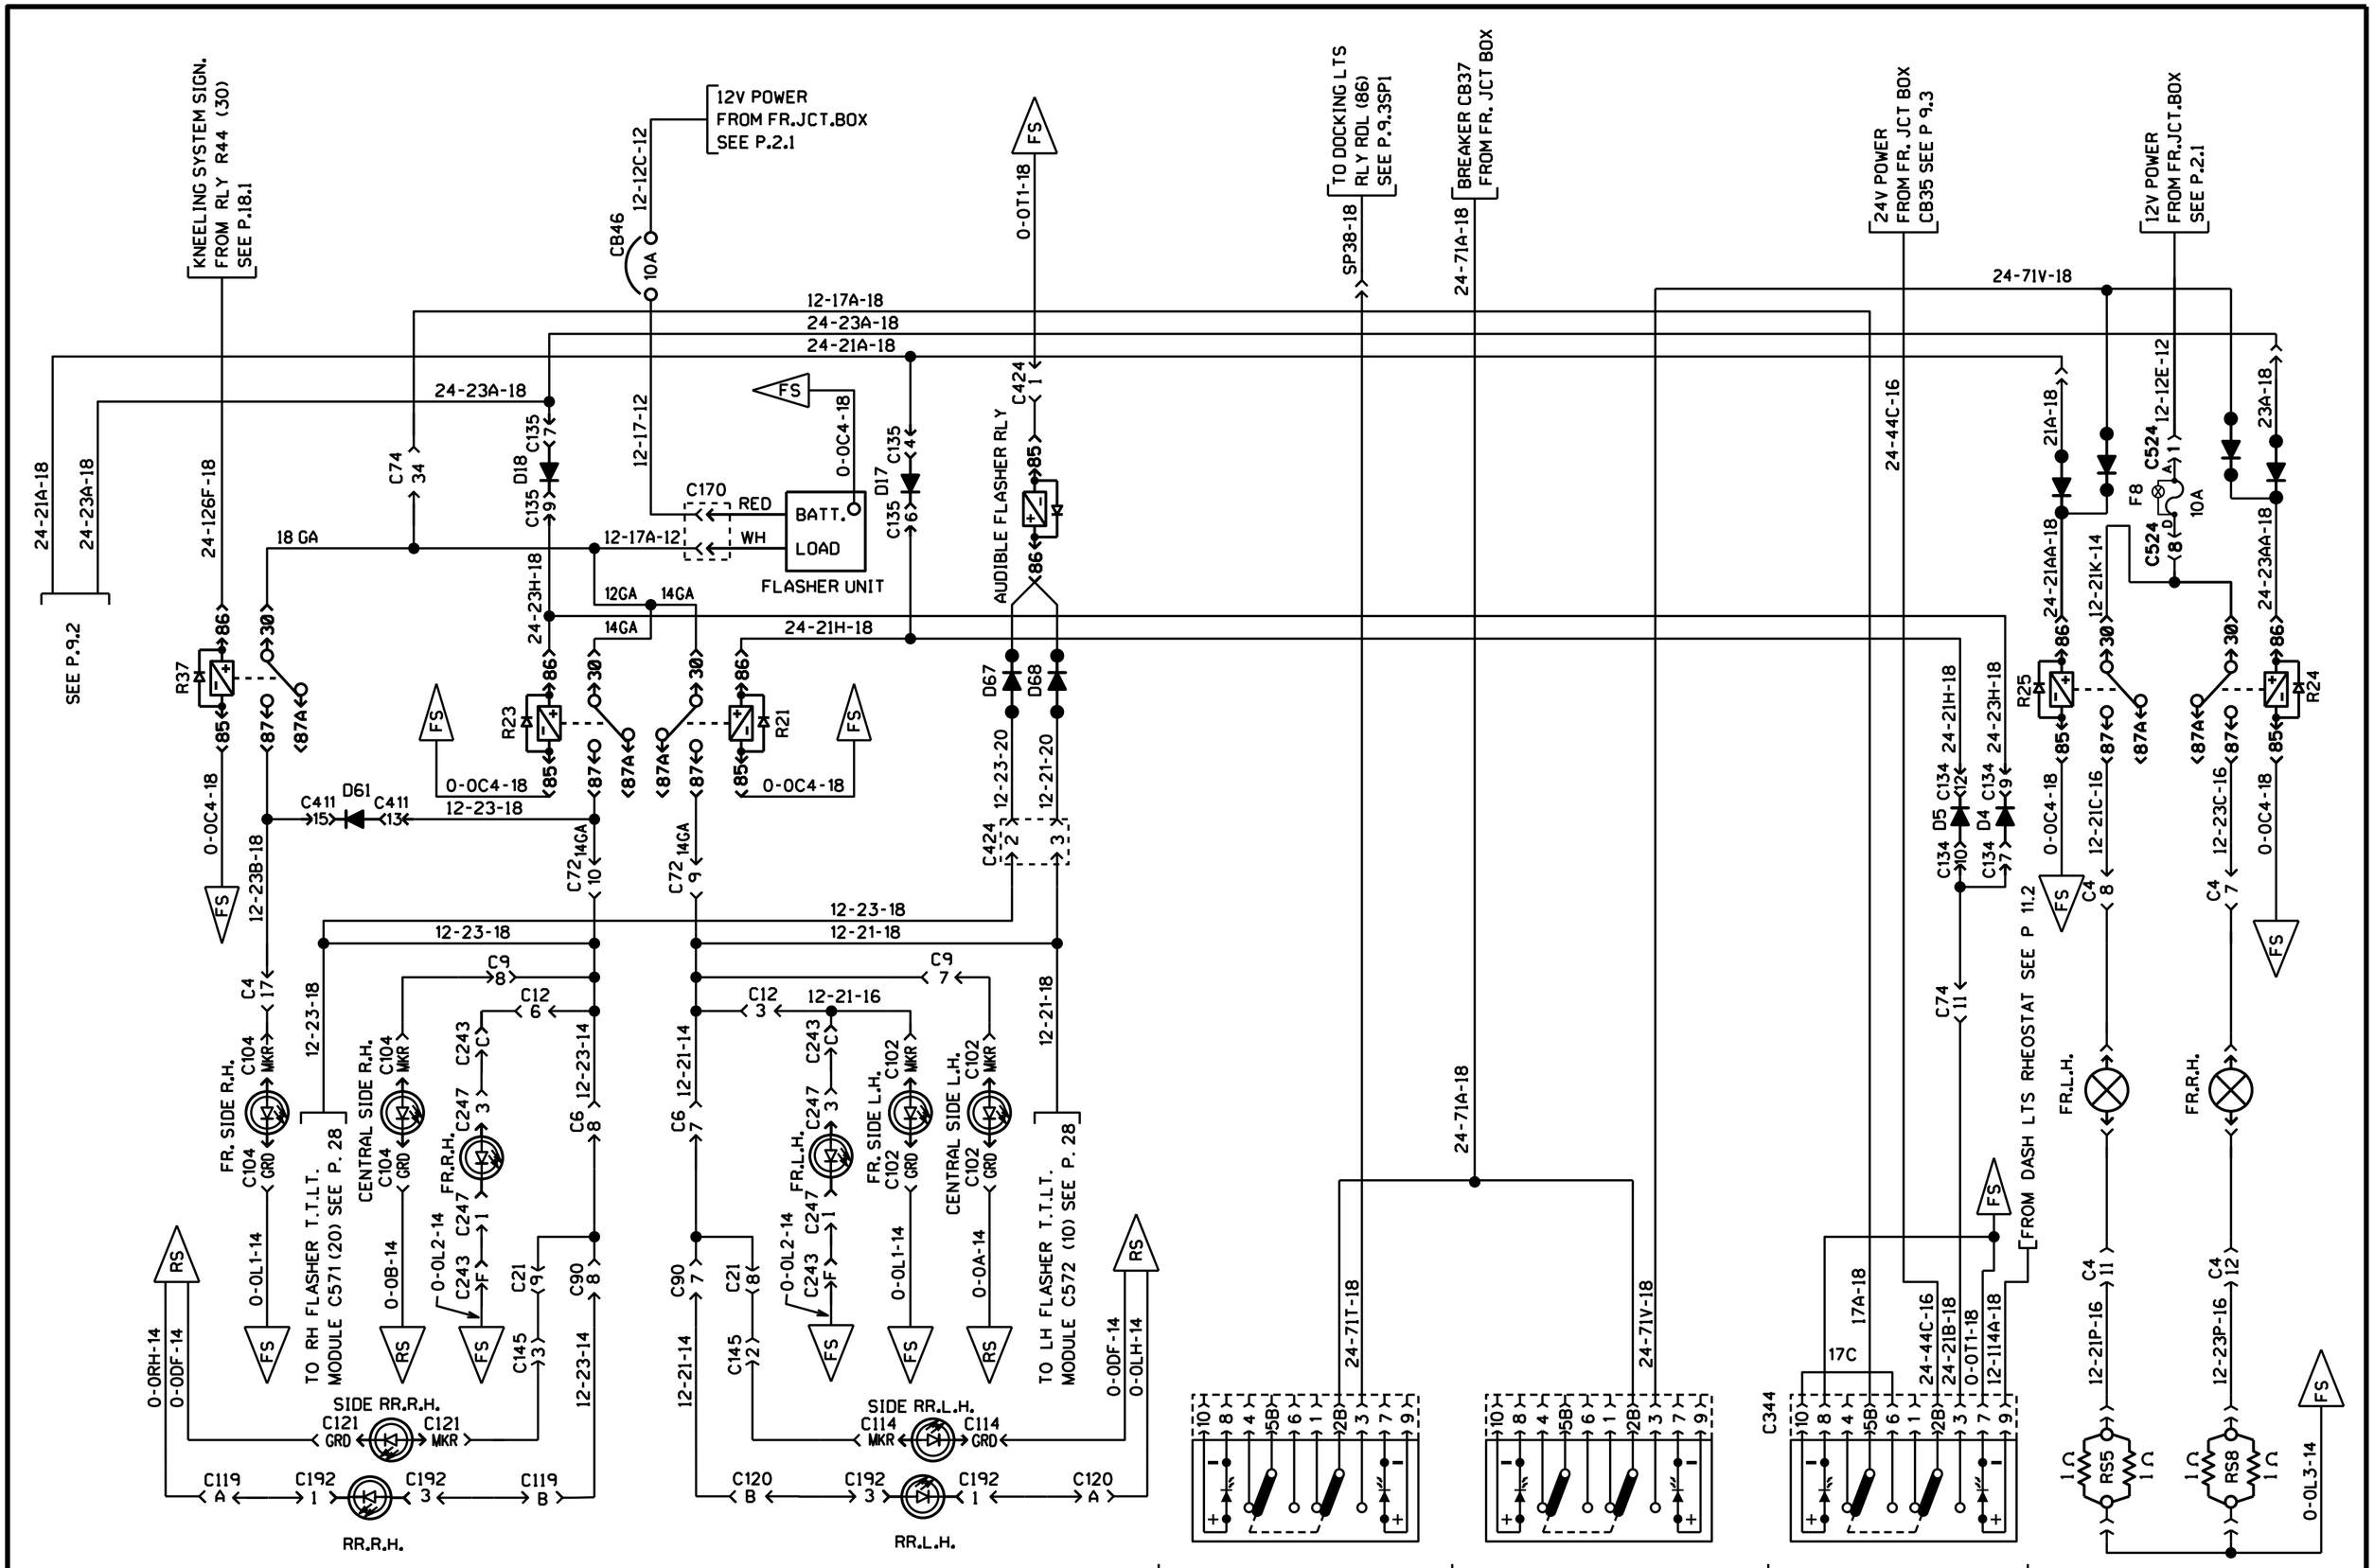


EXTERIOR LIGHTING

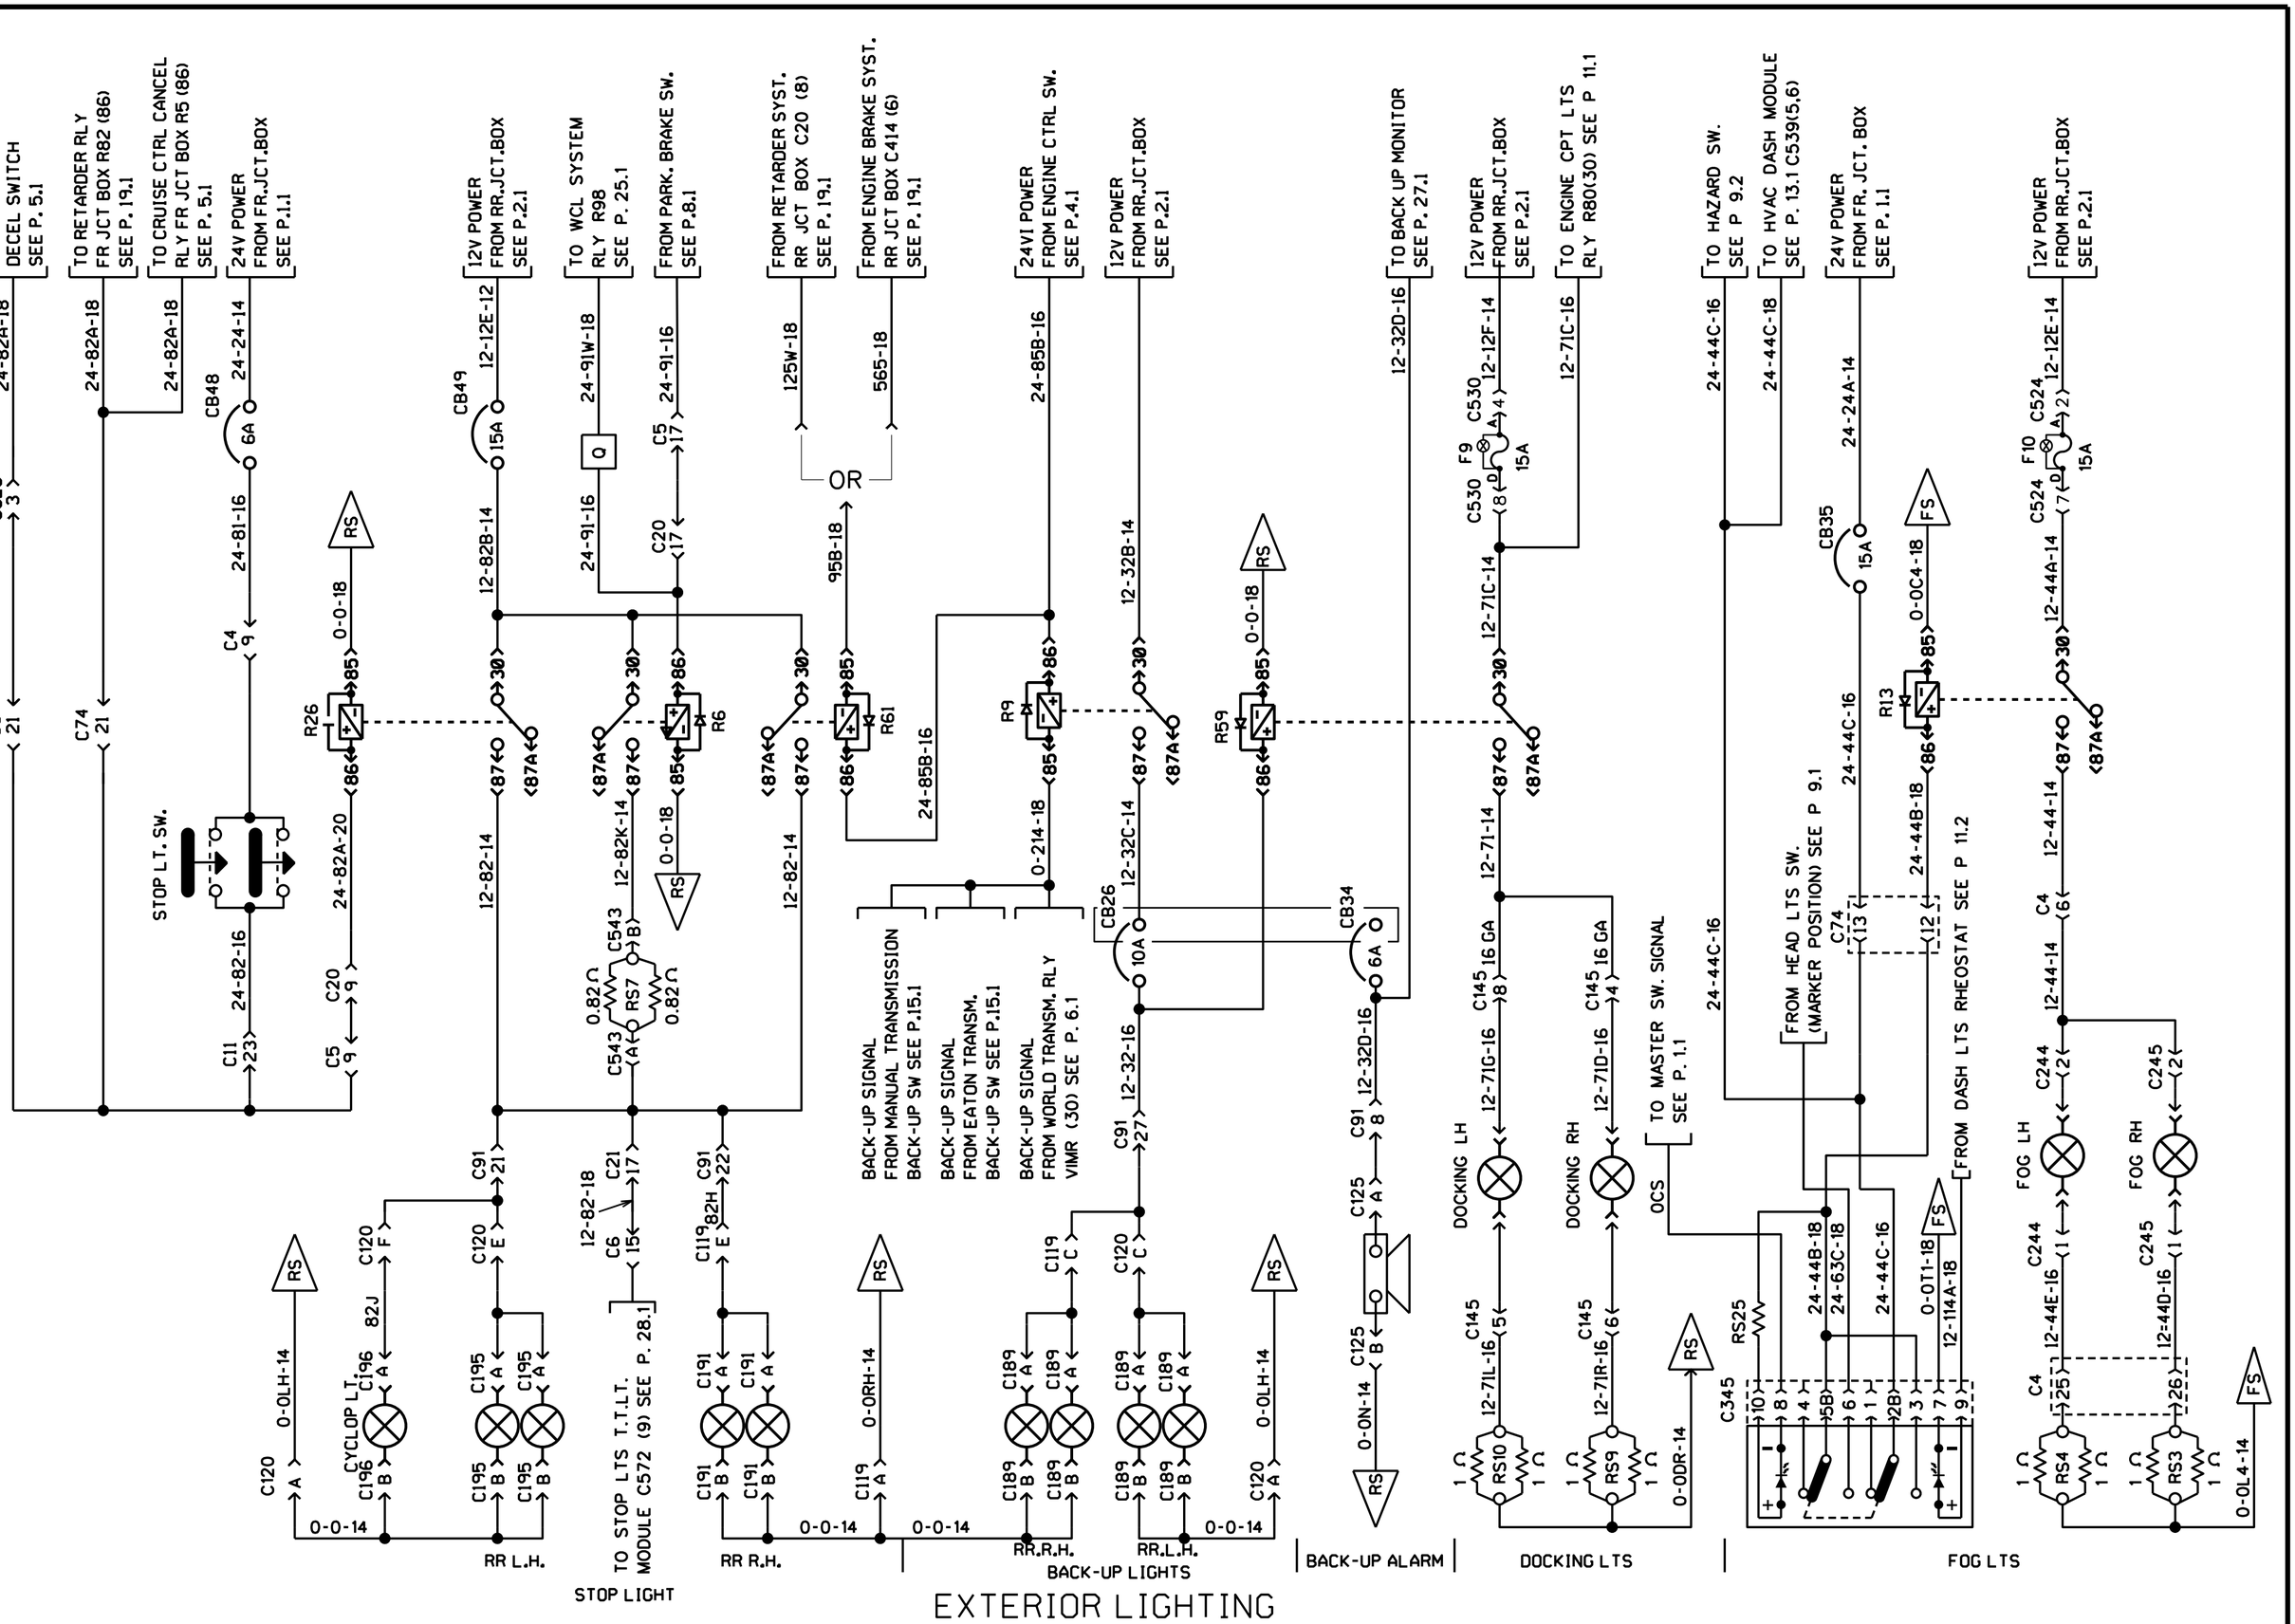


EXTERIOR LIGHTING

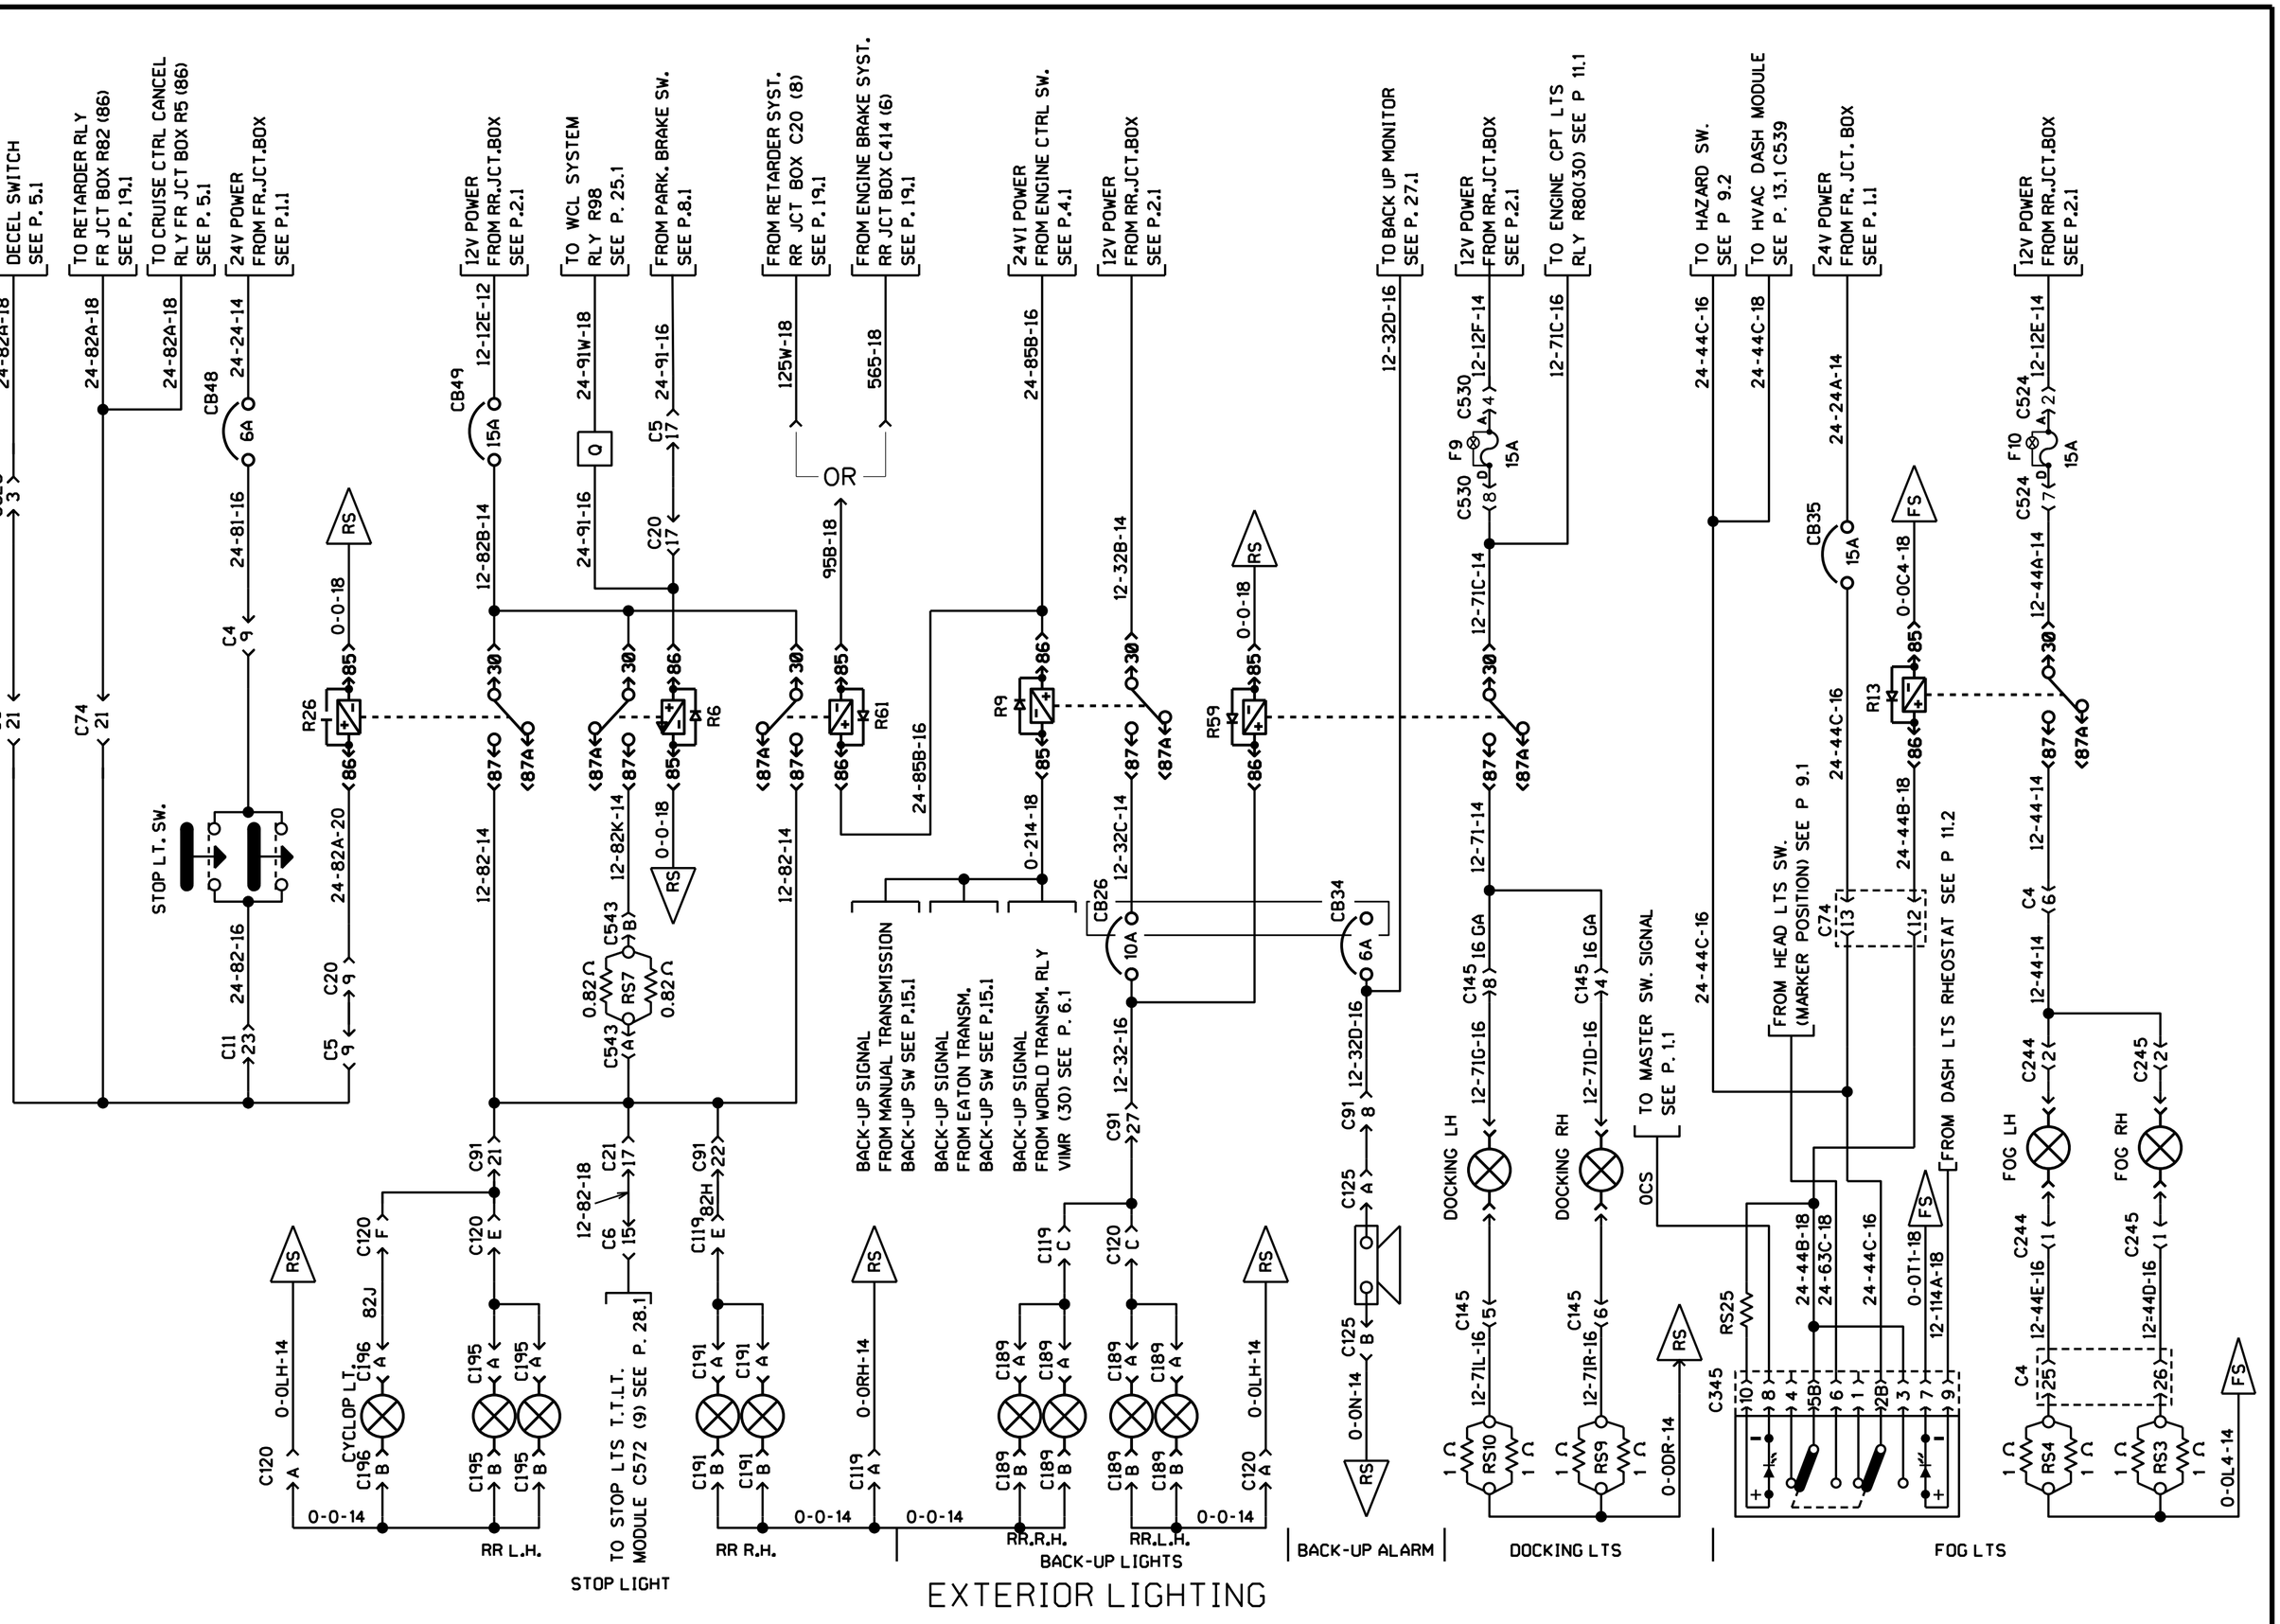


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 9.3	REVISION 04

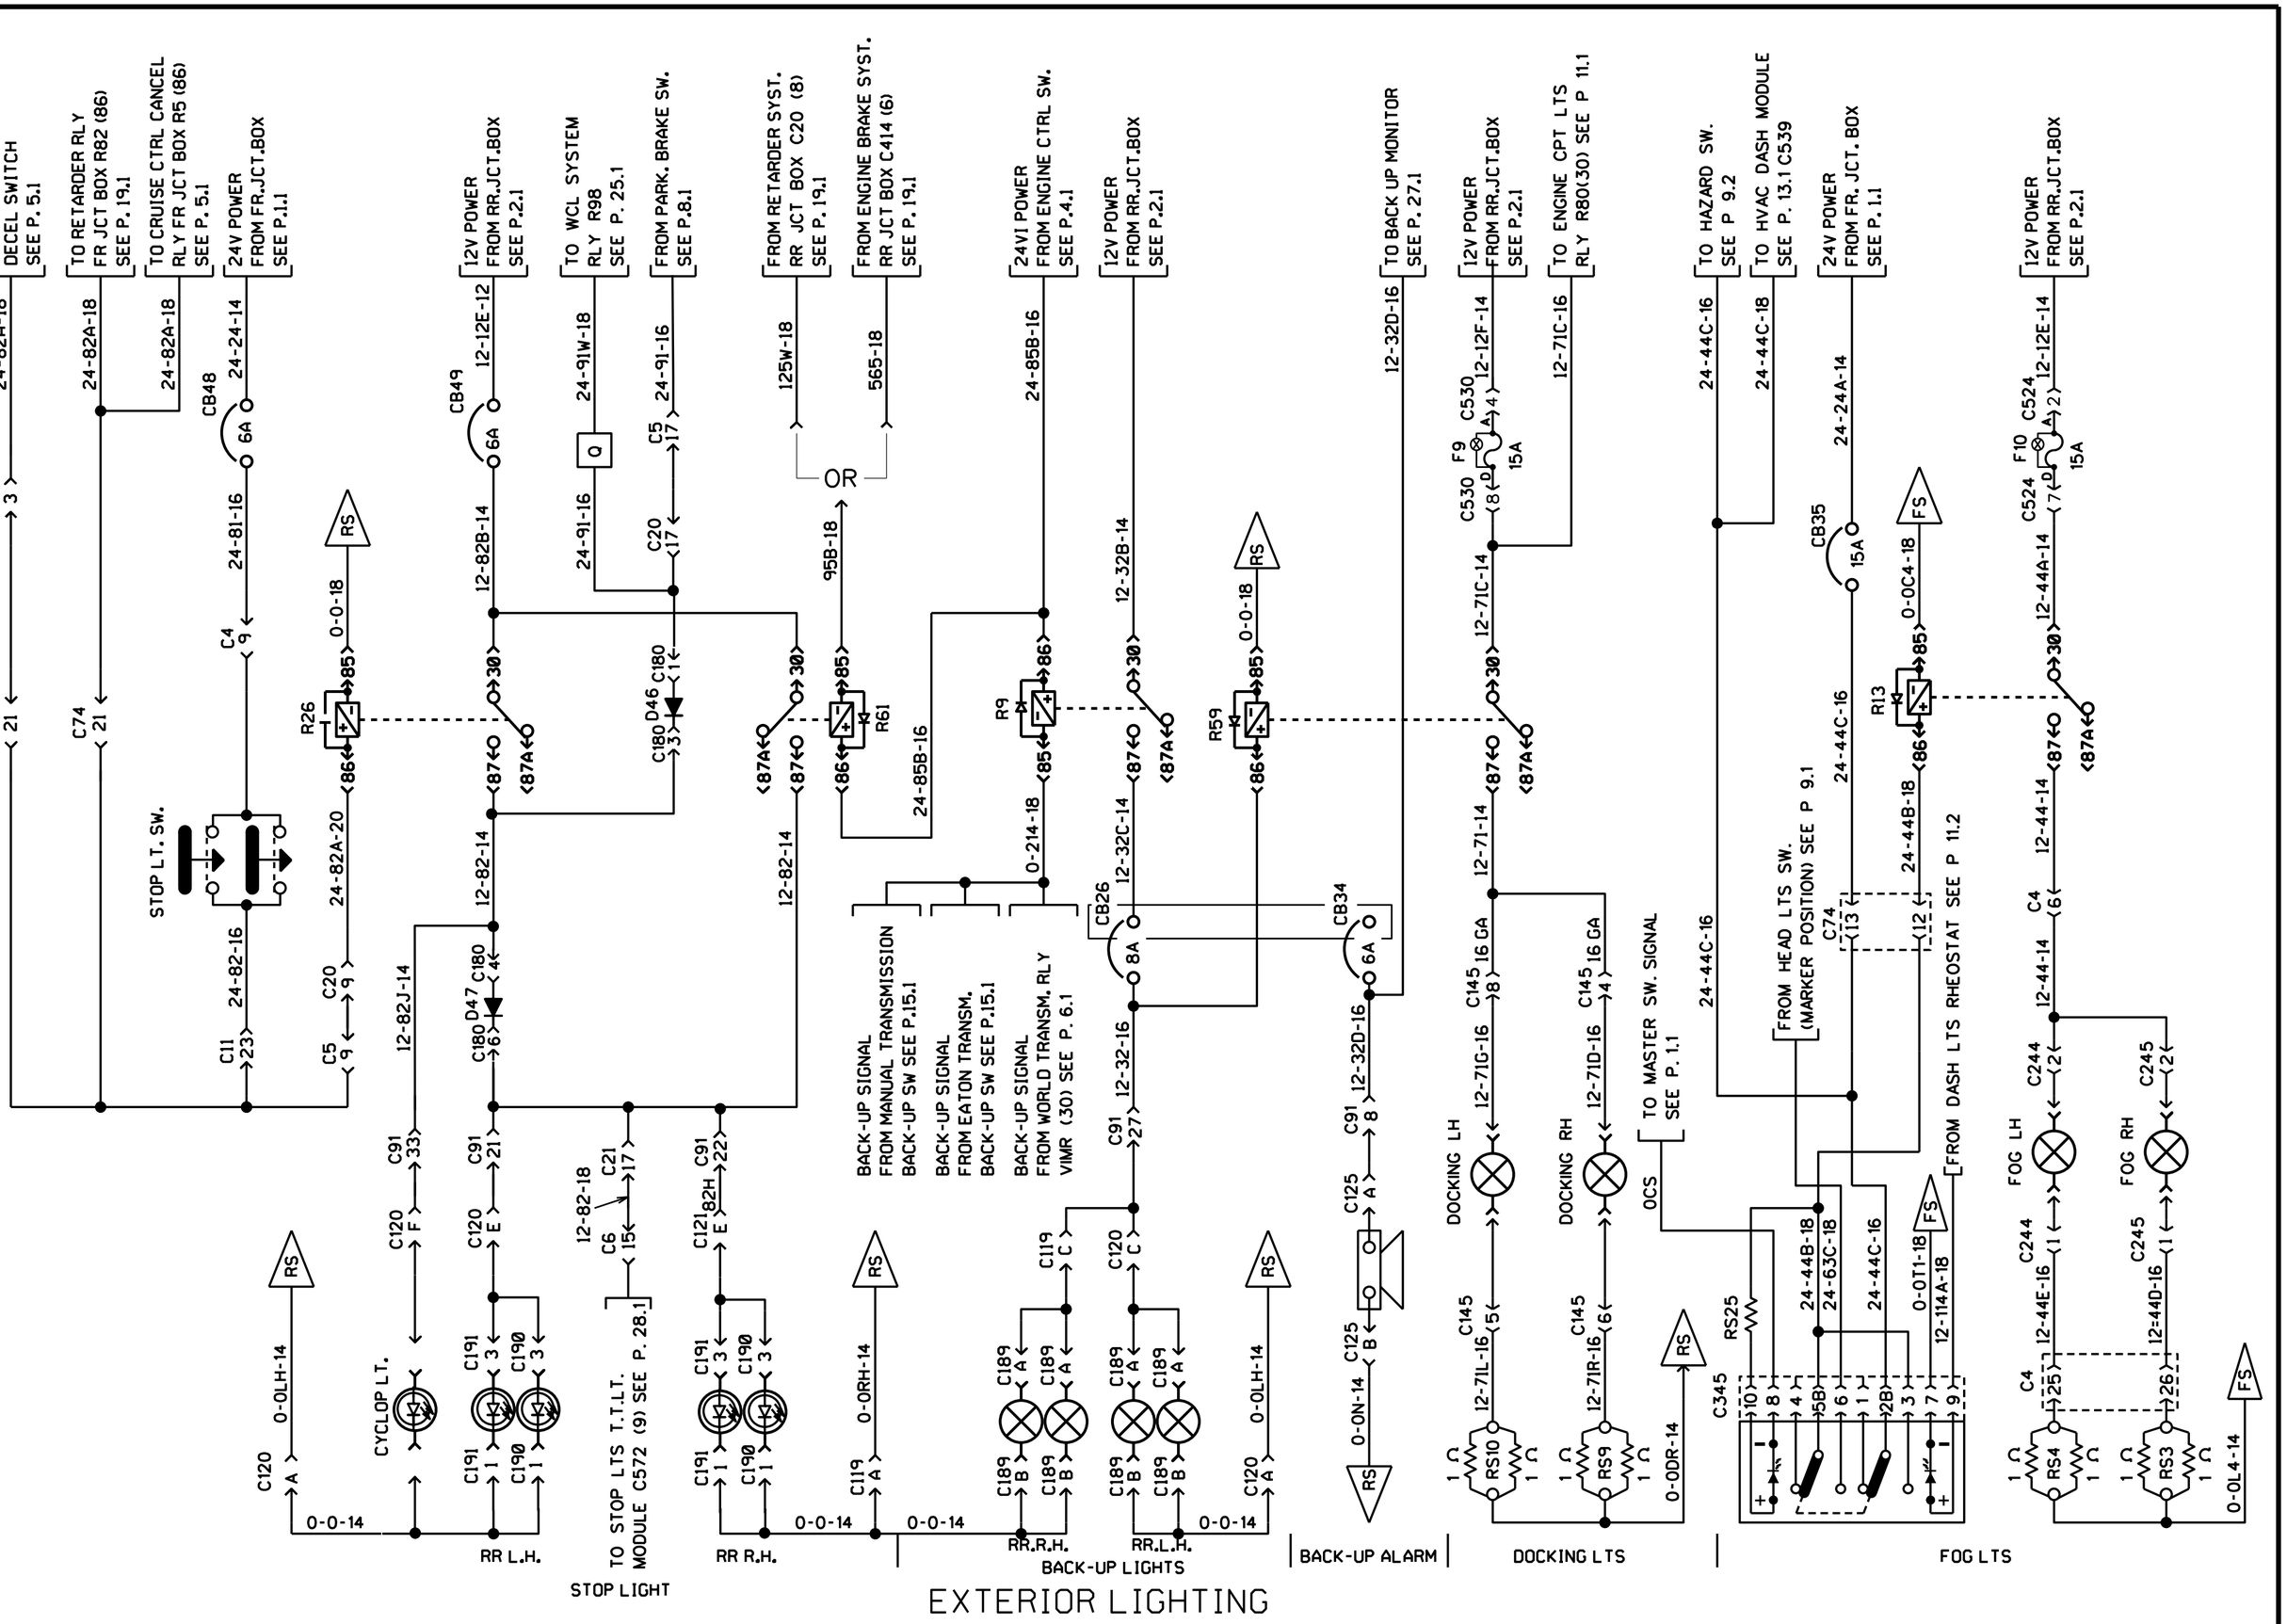

EXTERIOR LIGHTING

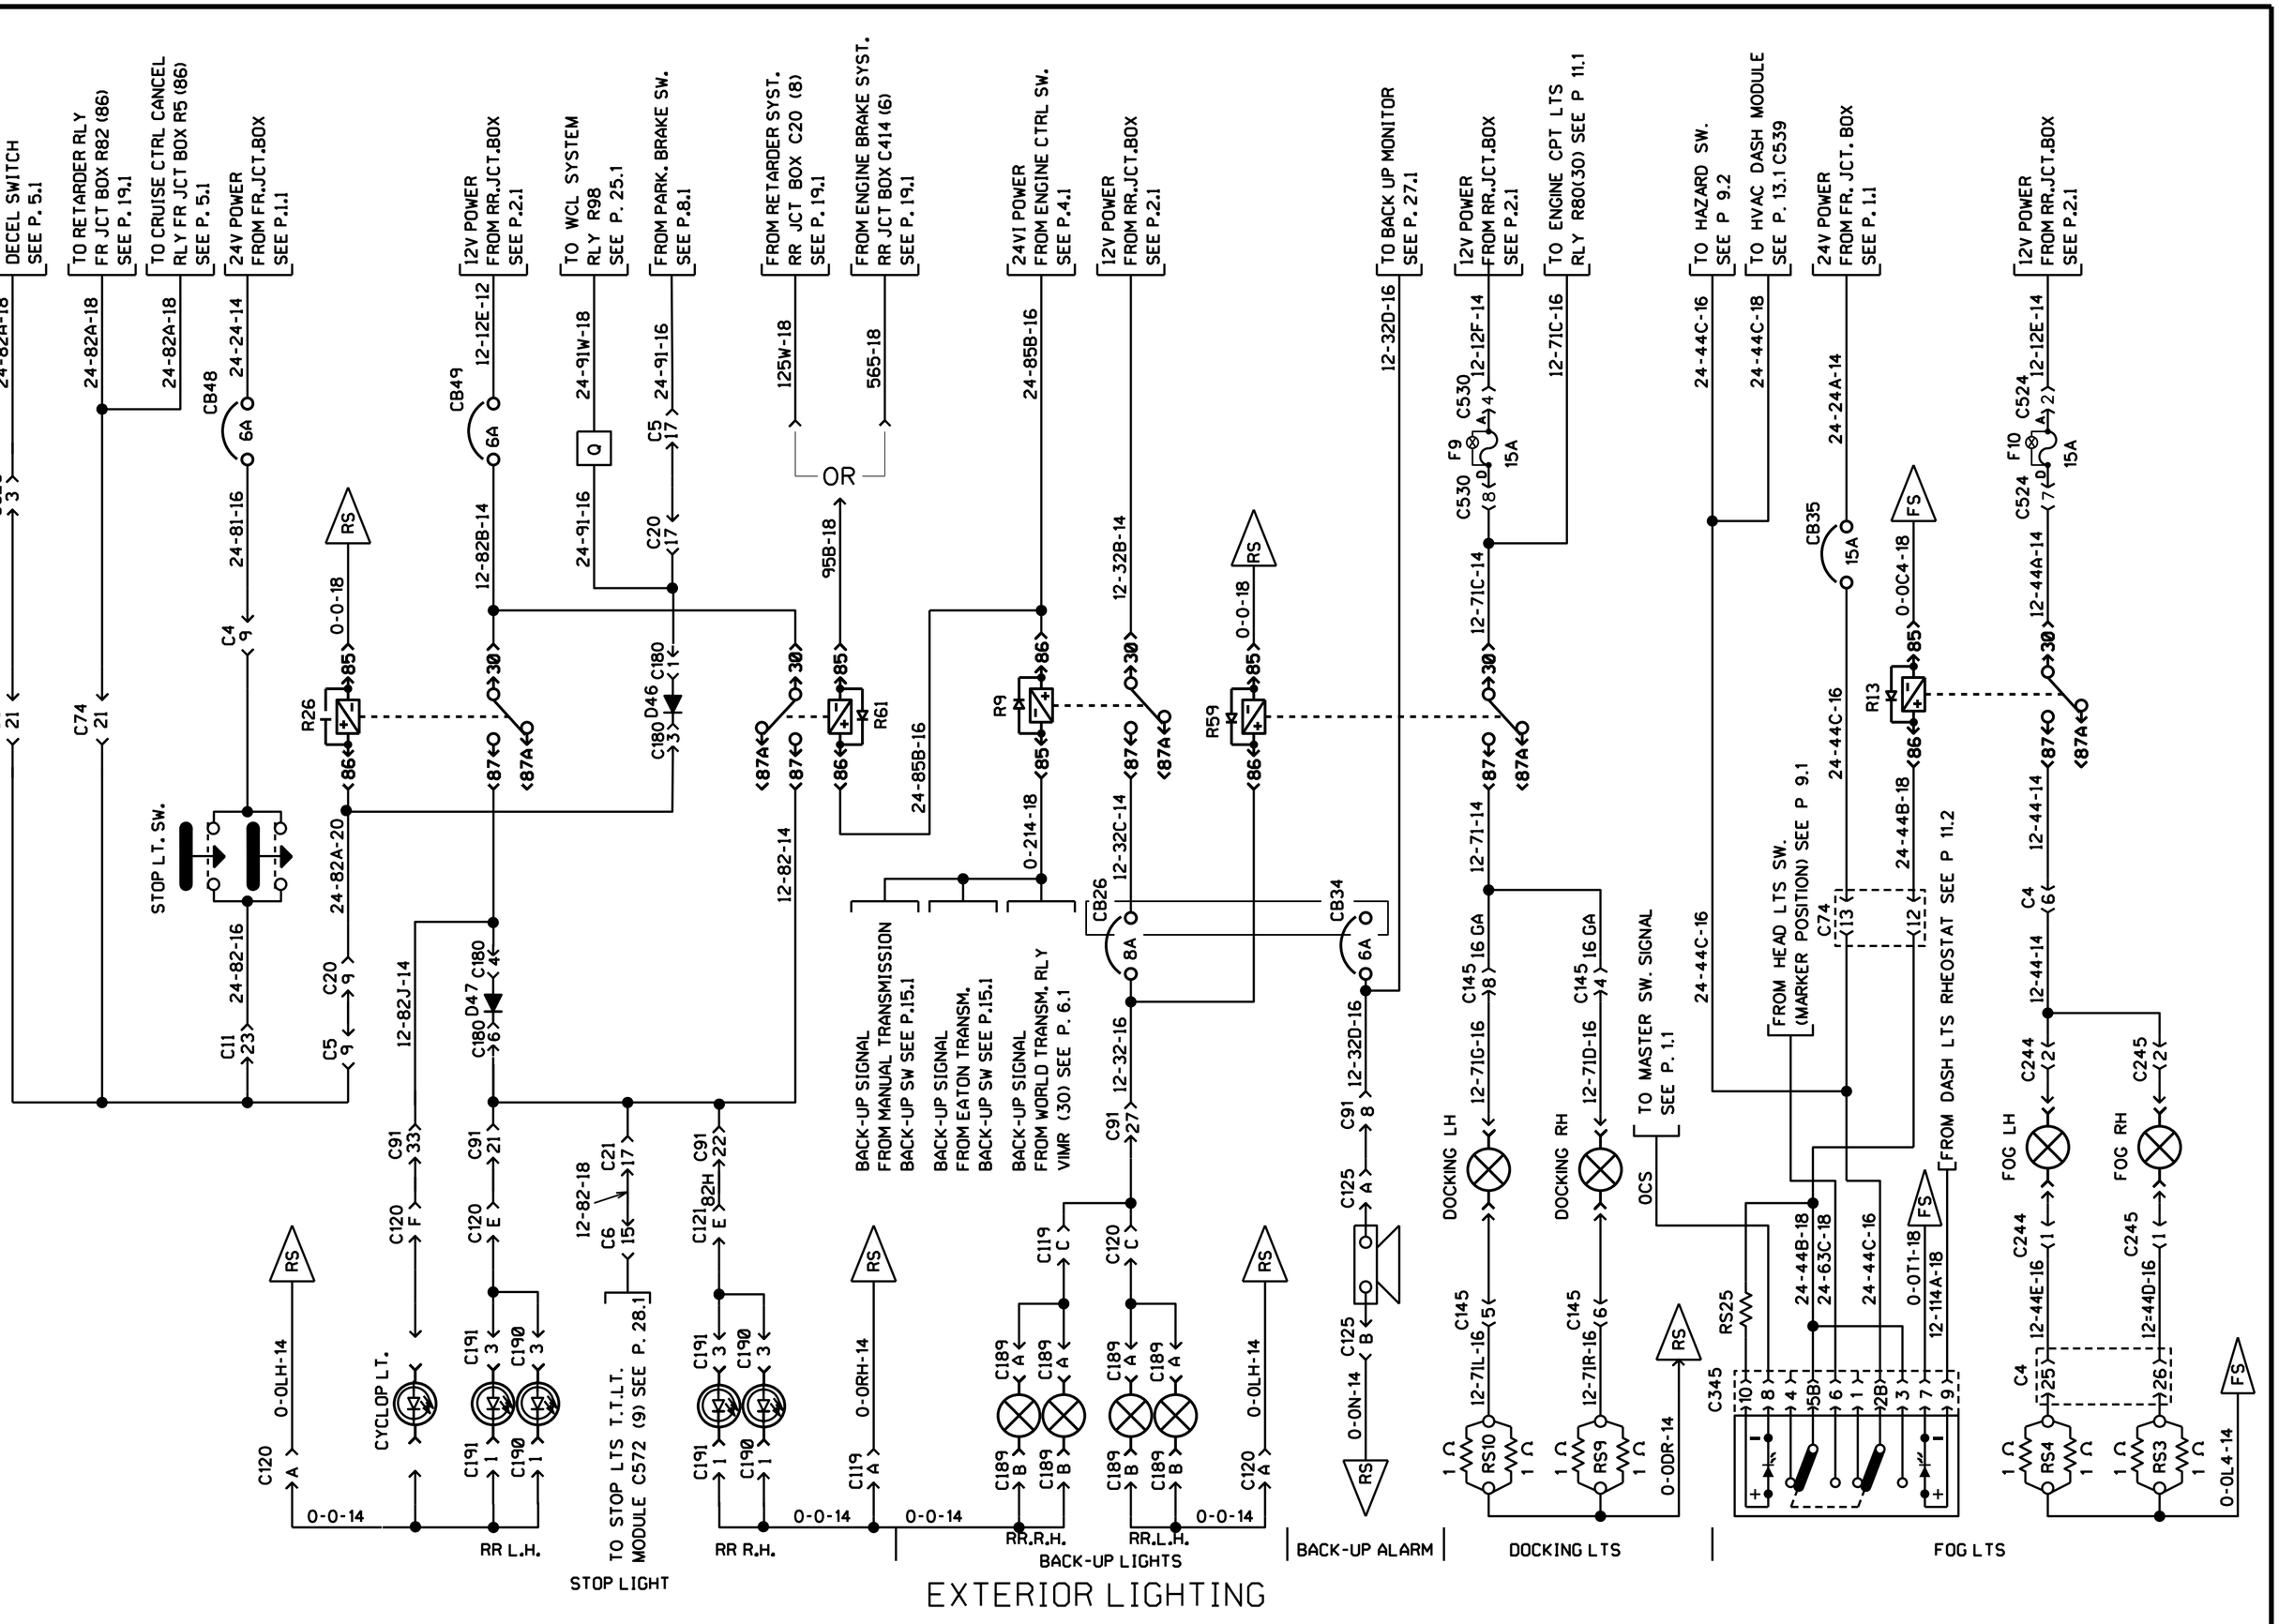


EXTERIOR LIGHTING

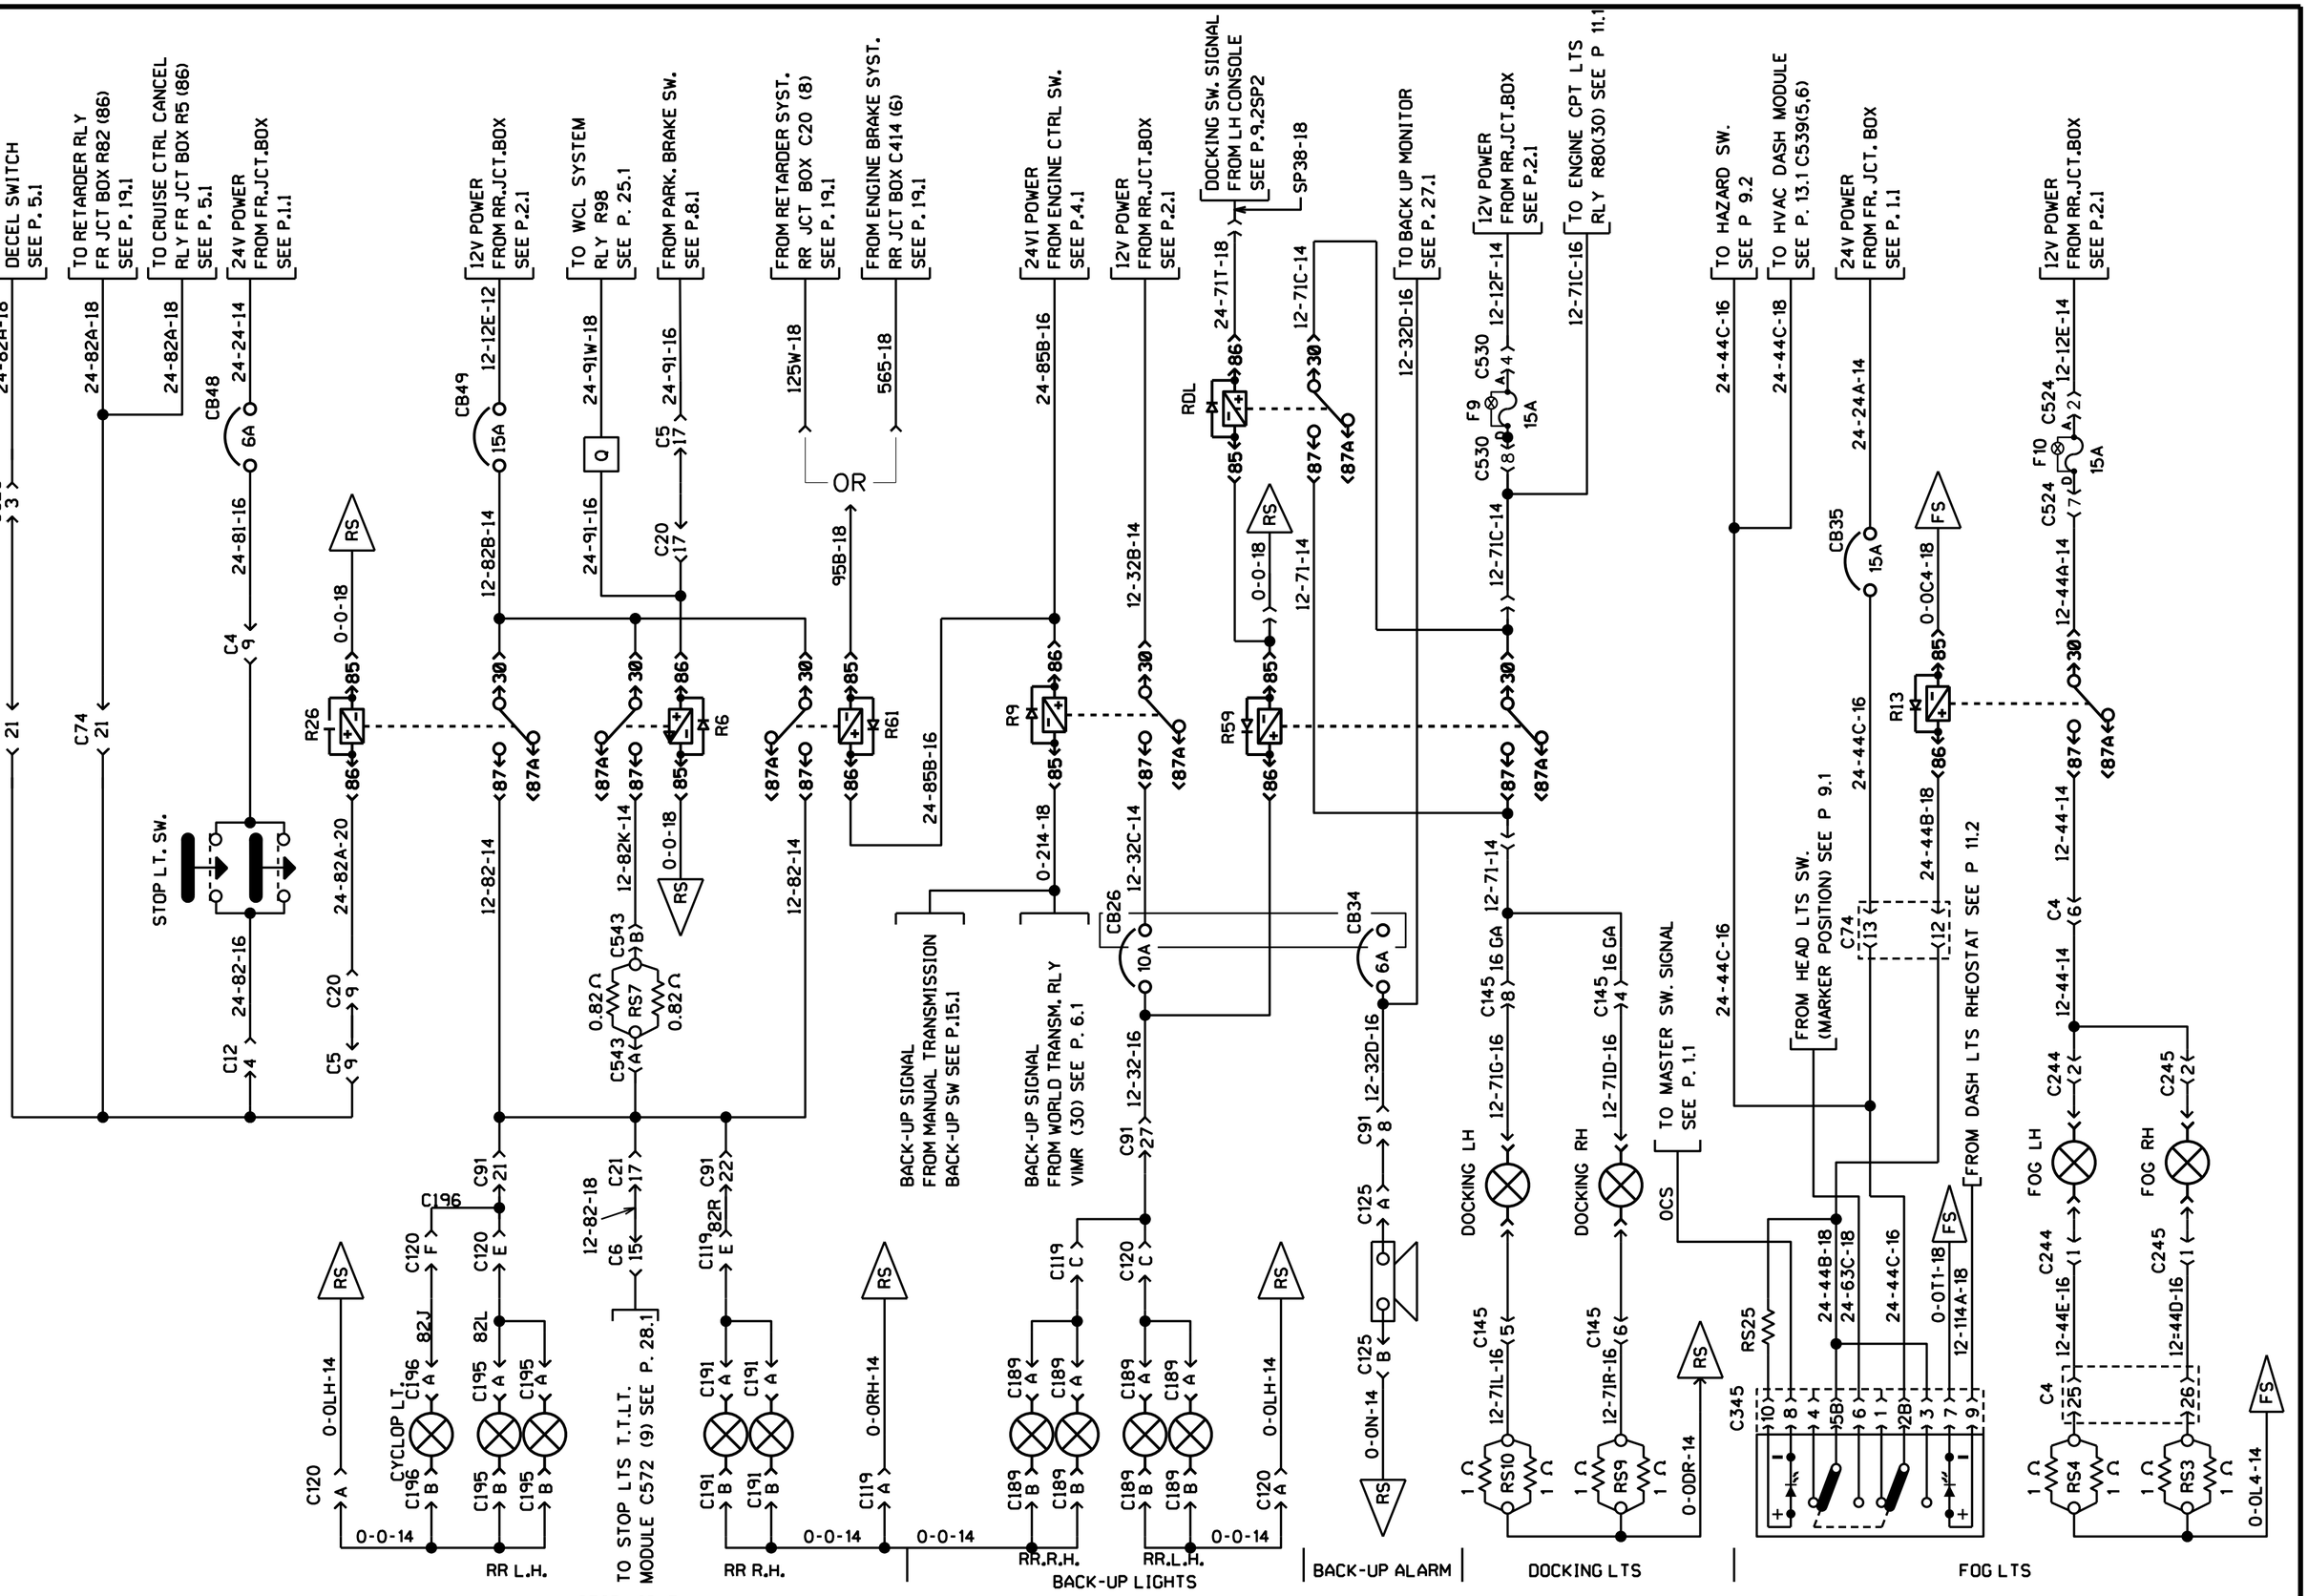


EXTERIOR LIGHTING

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 9.3sp1	REVISION 00

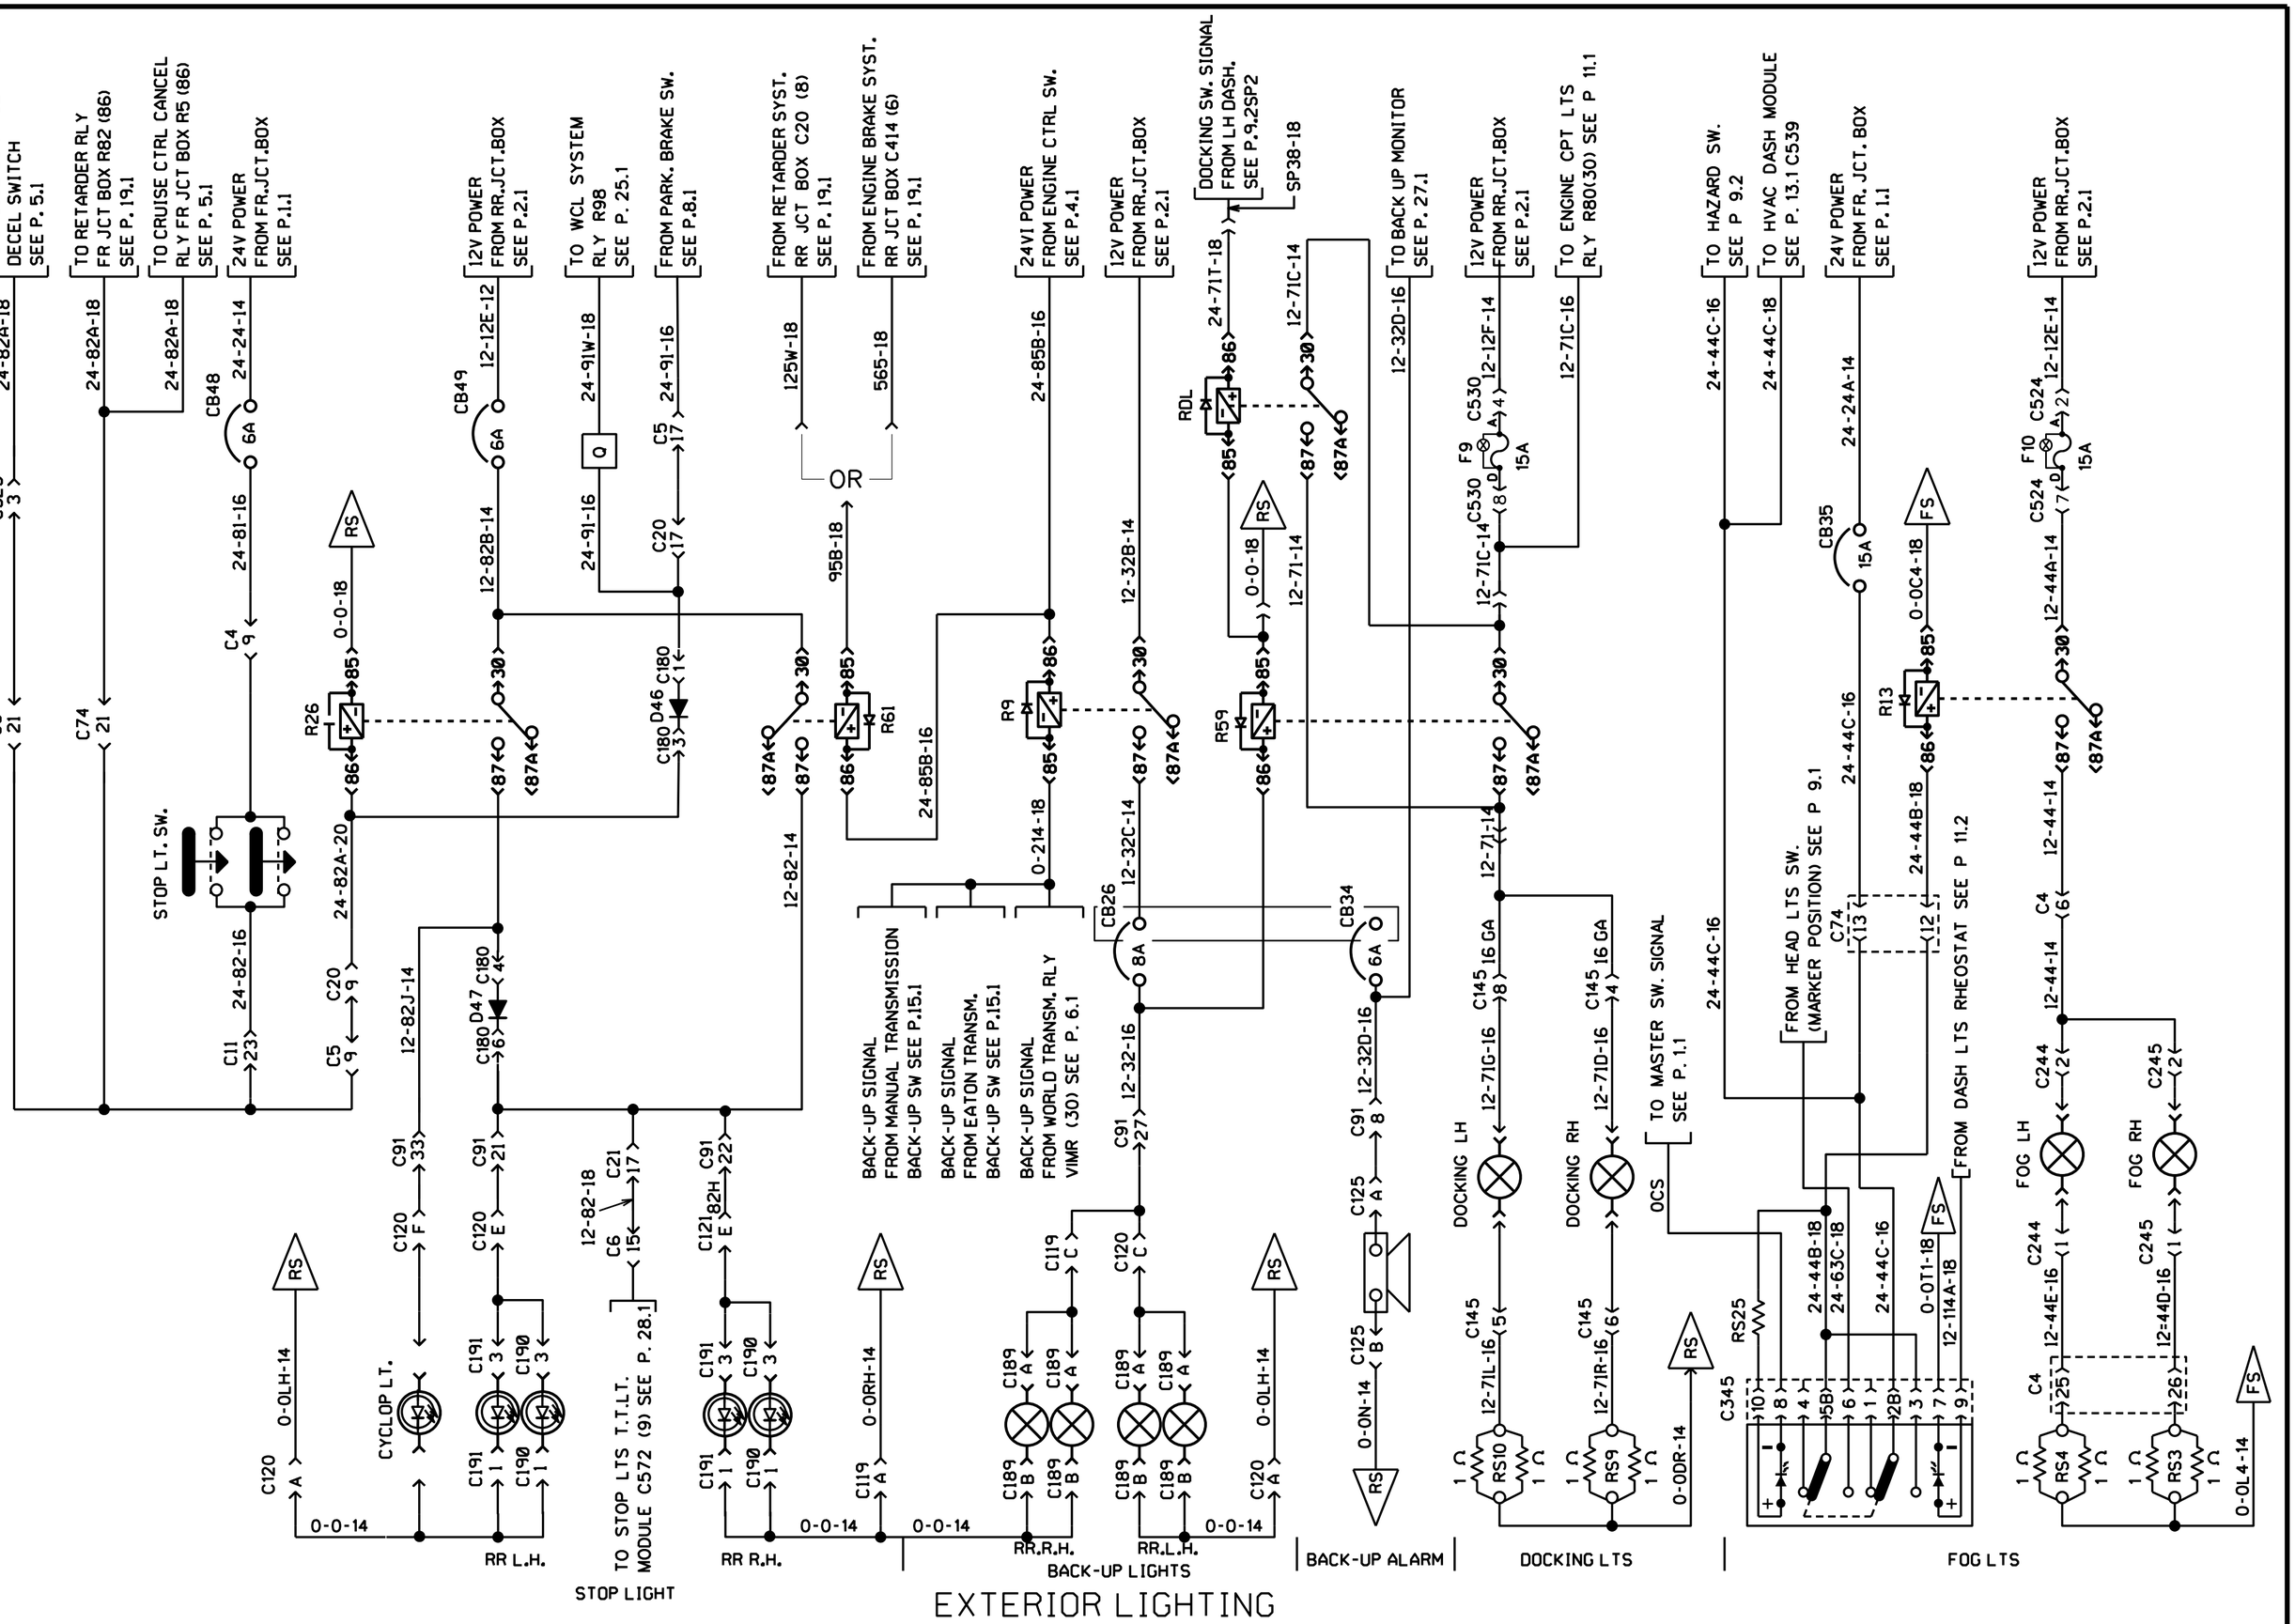


EXTERIOR LIGHTING

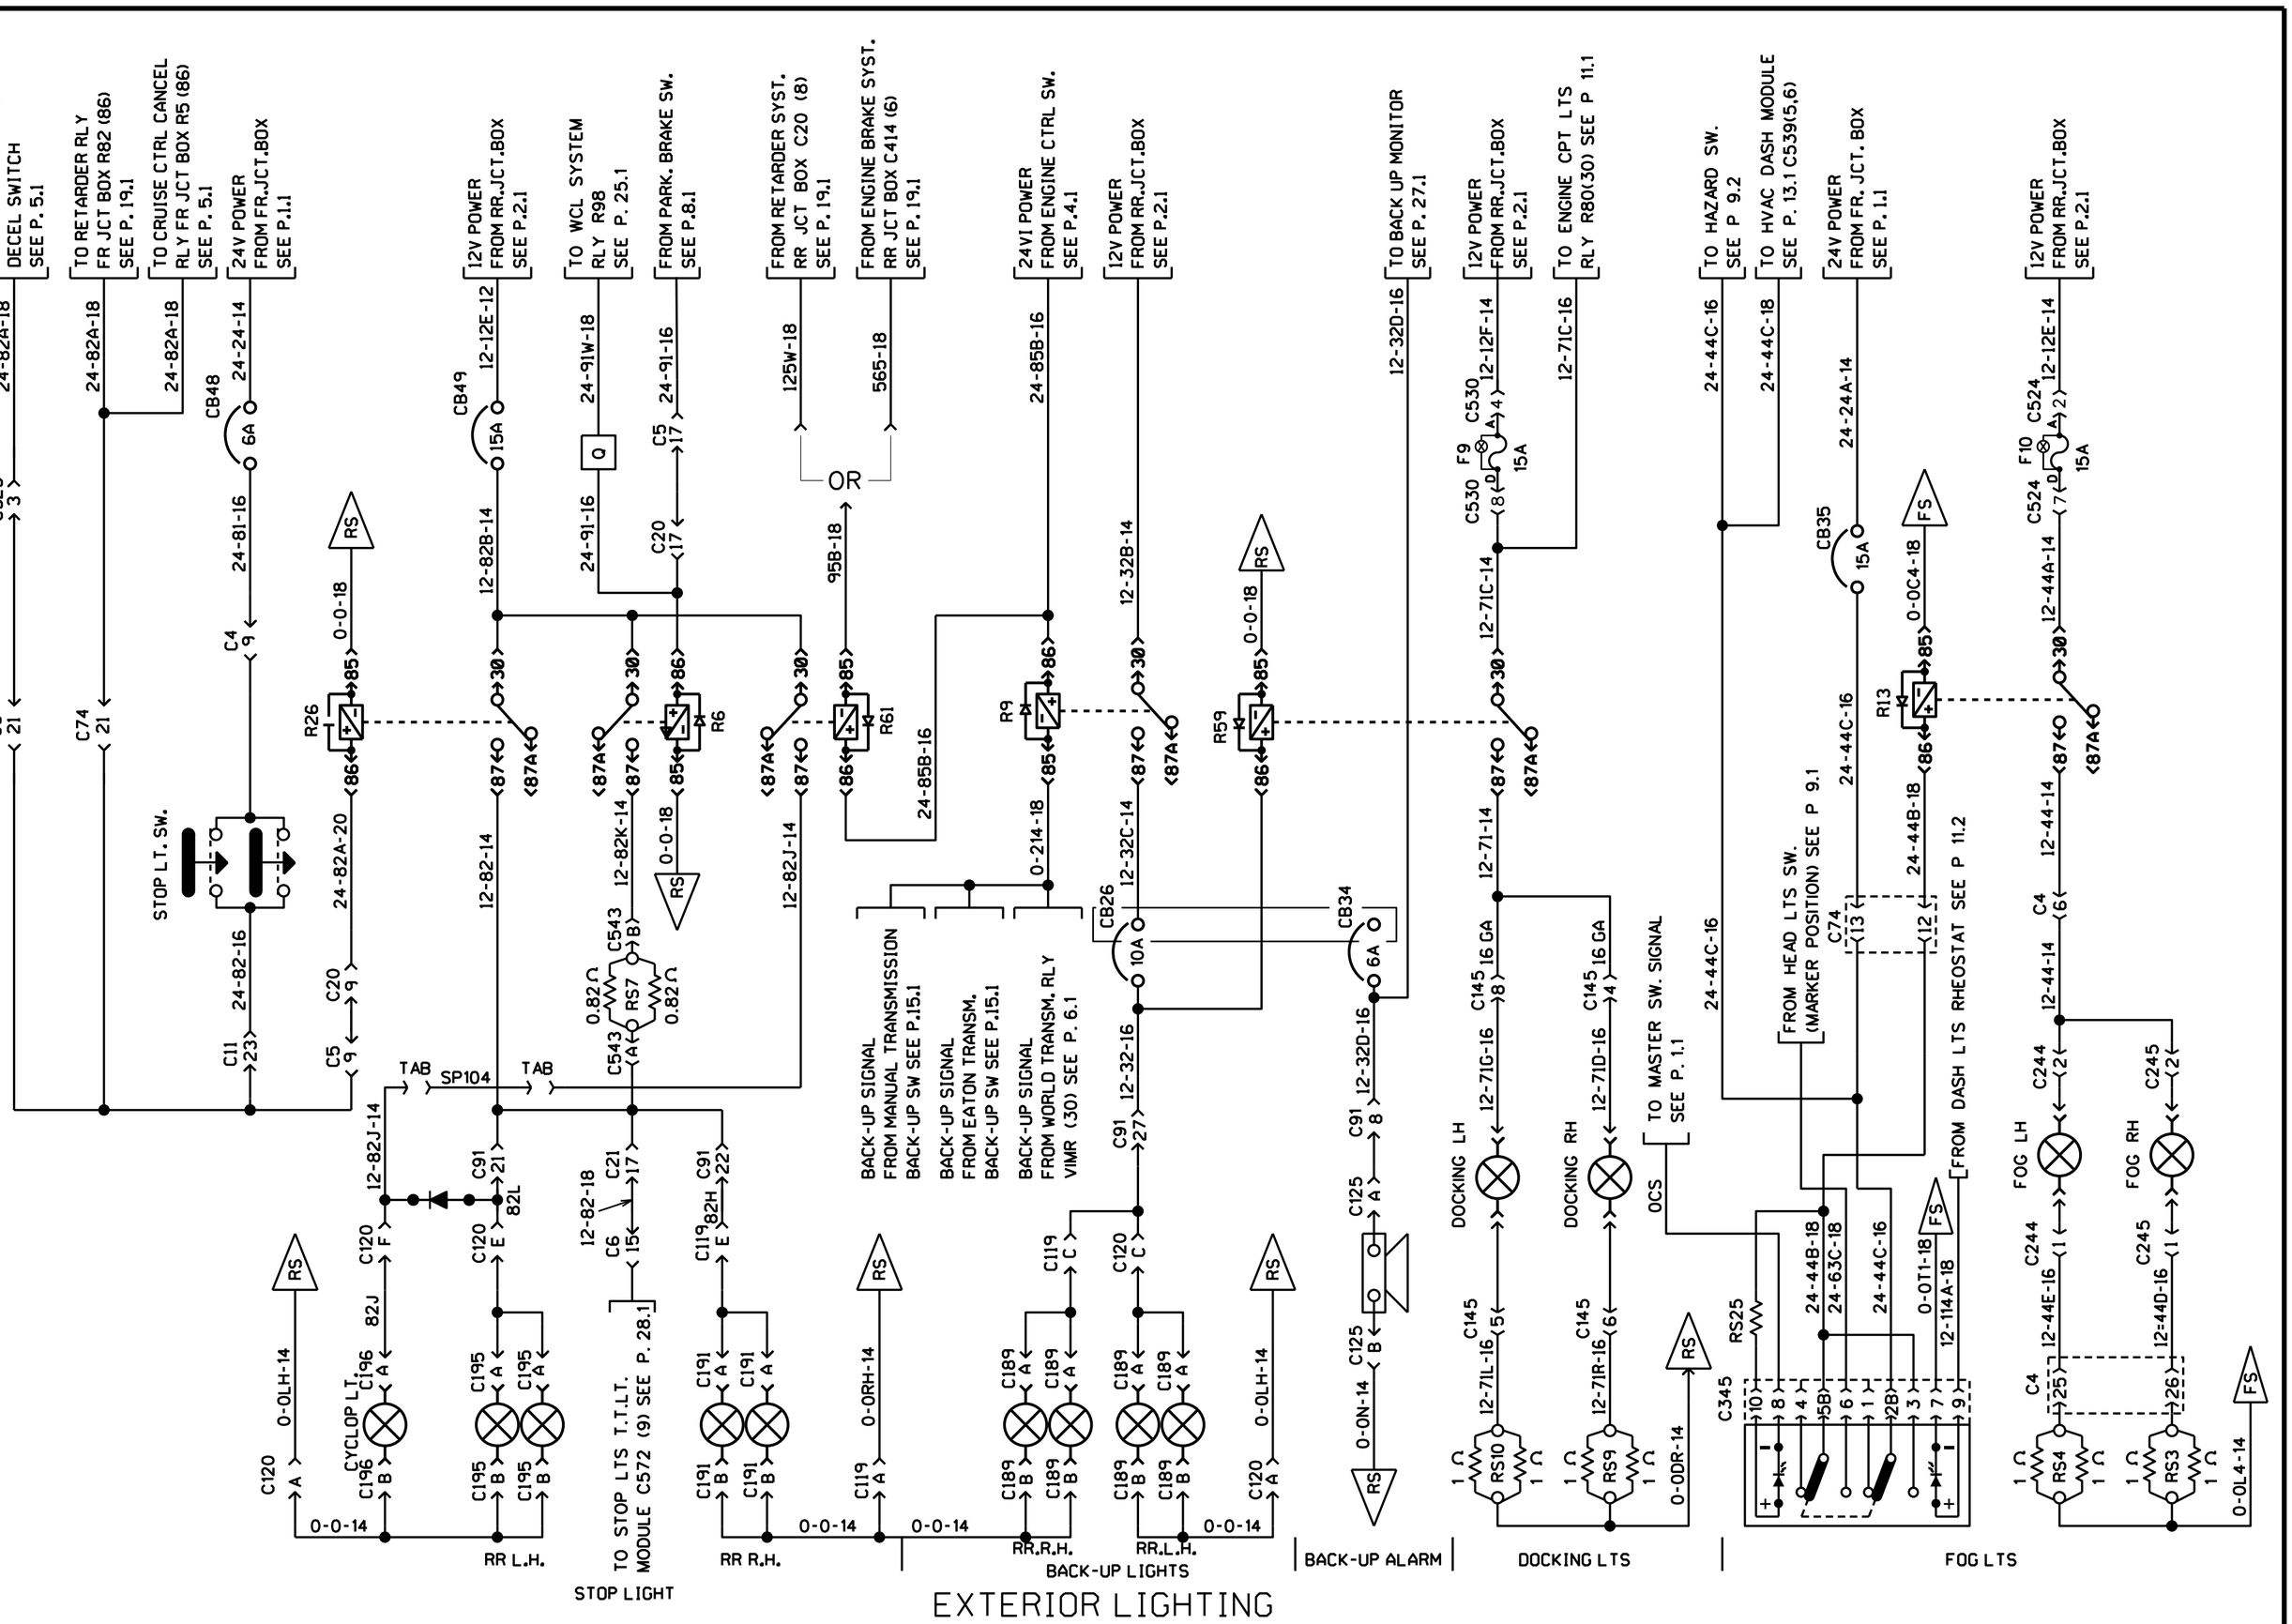


EXTERIOR LIGHTING

SPECIAL, CYCLOP ONLY W/RETARD. VEH. Y3378

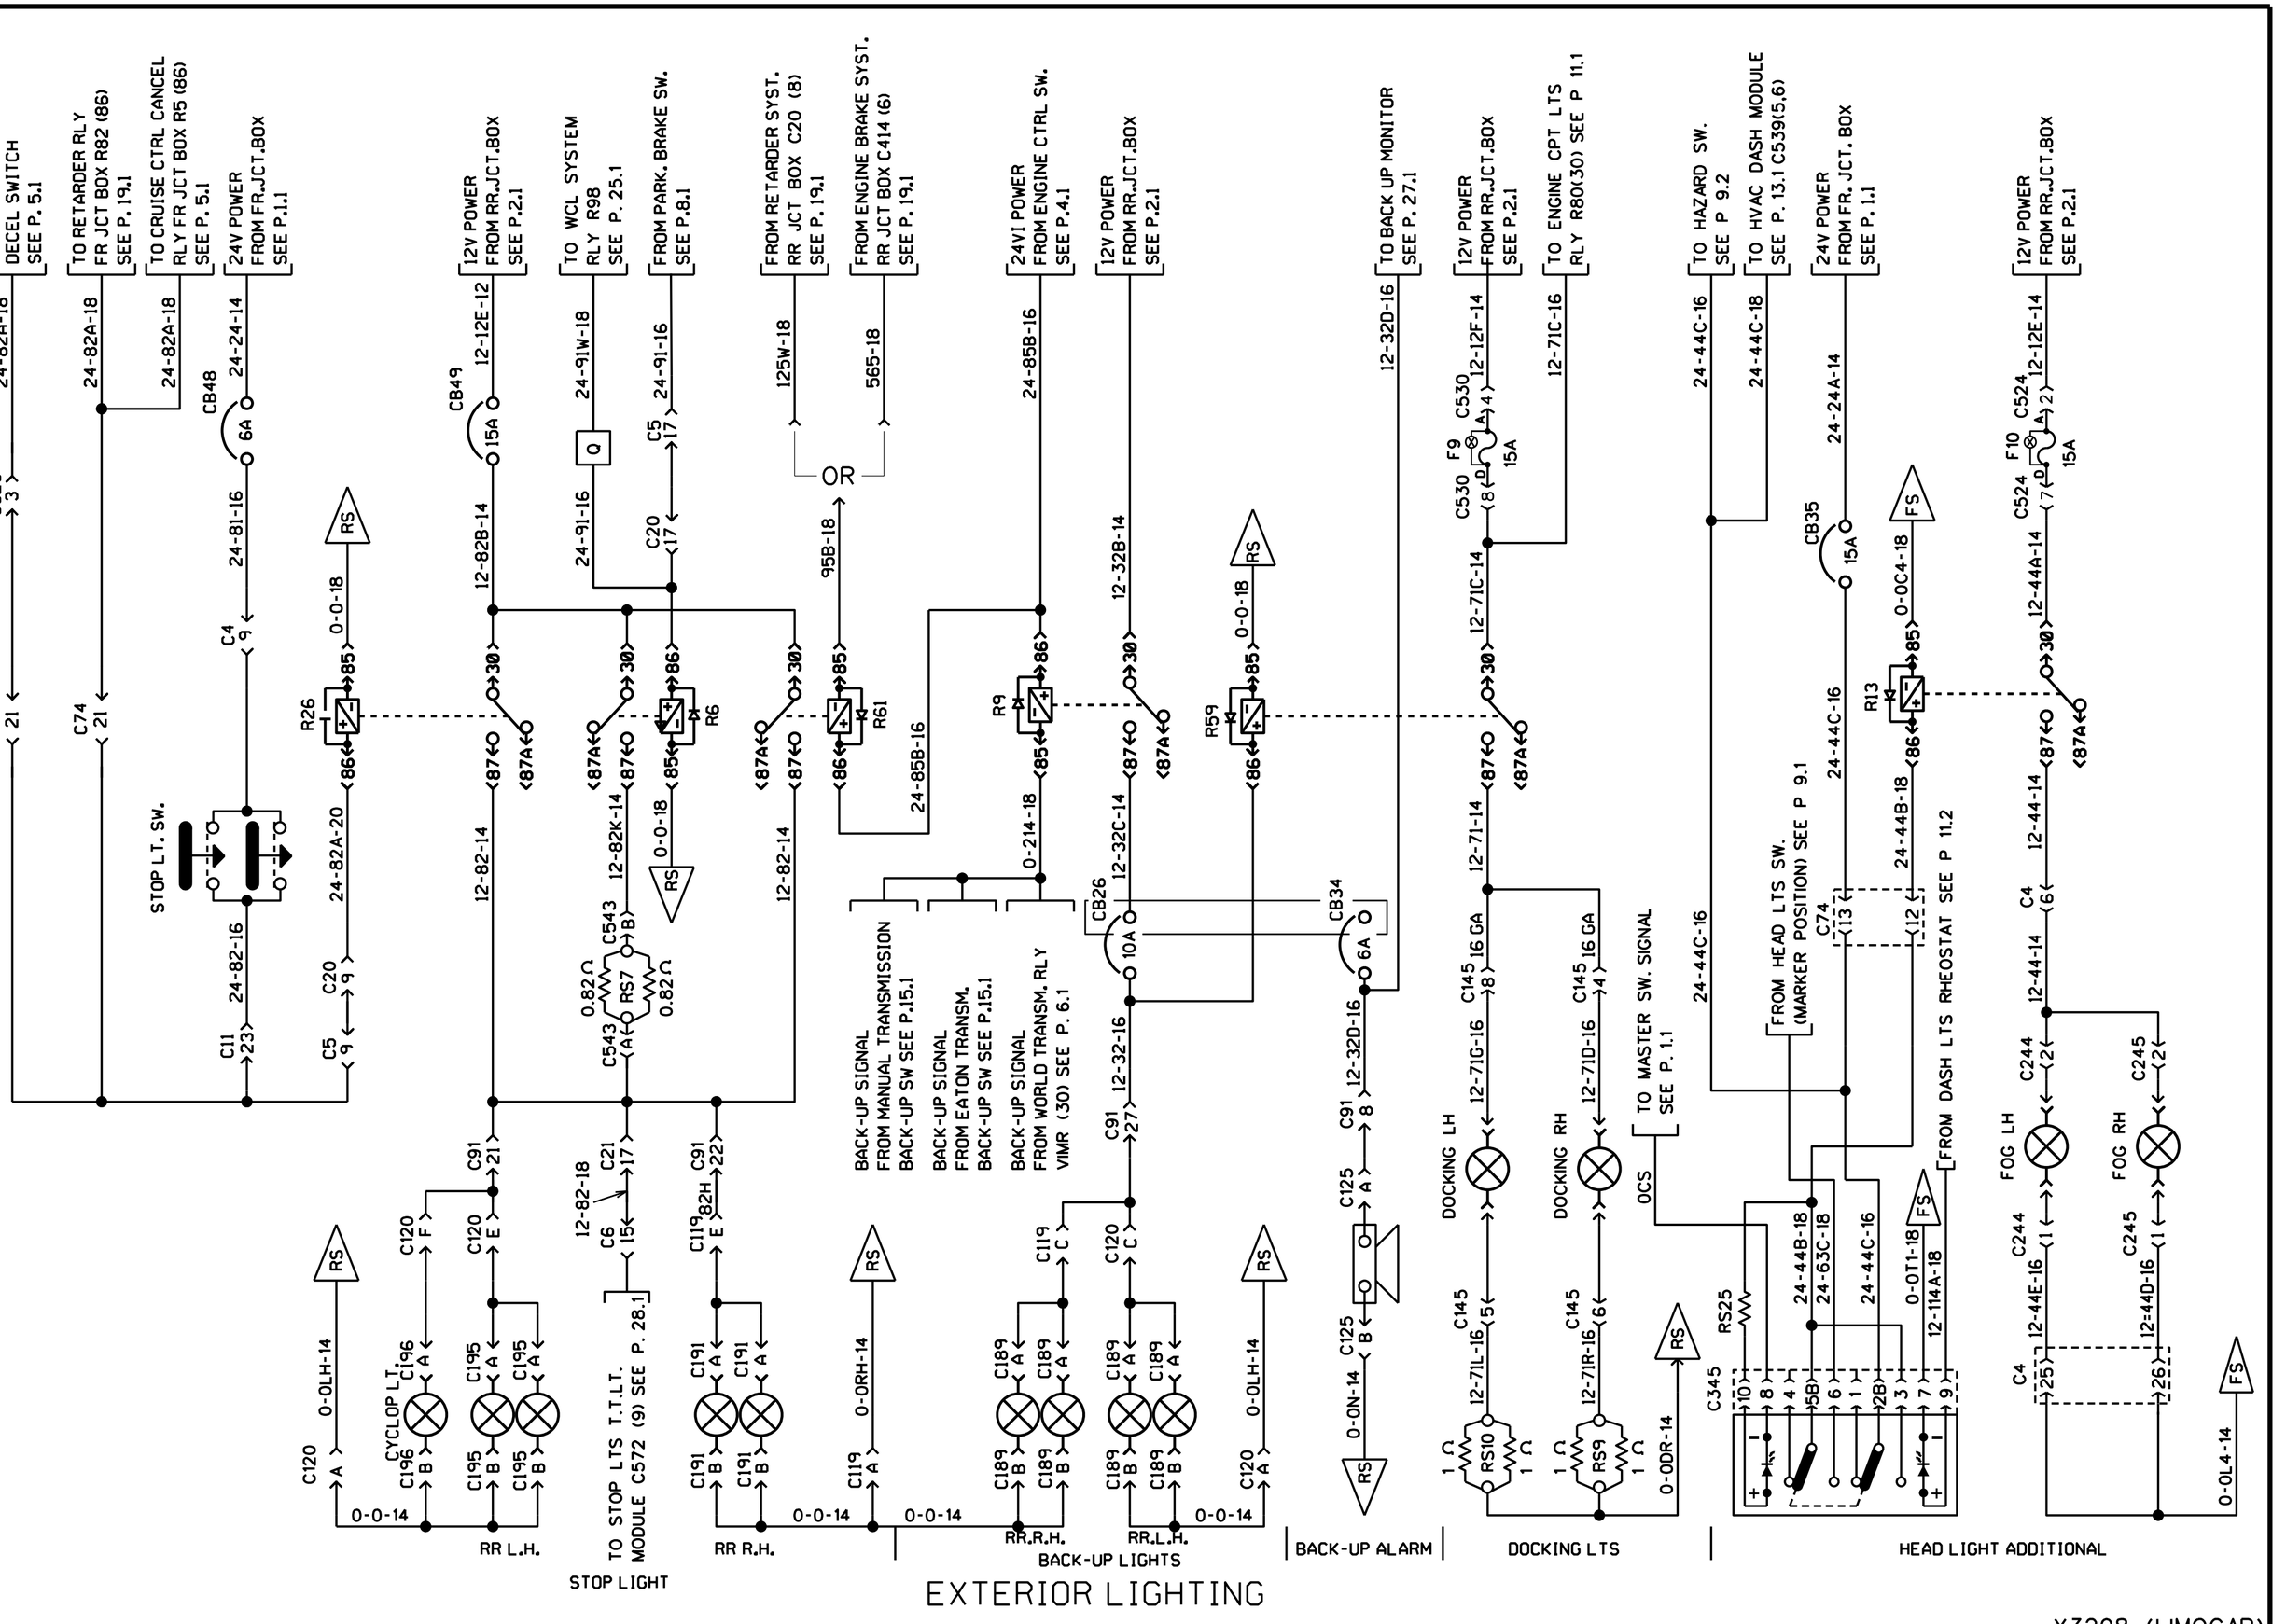


EXTERIOR LIGHTING

X3298 (LIMOCAR)

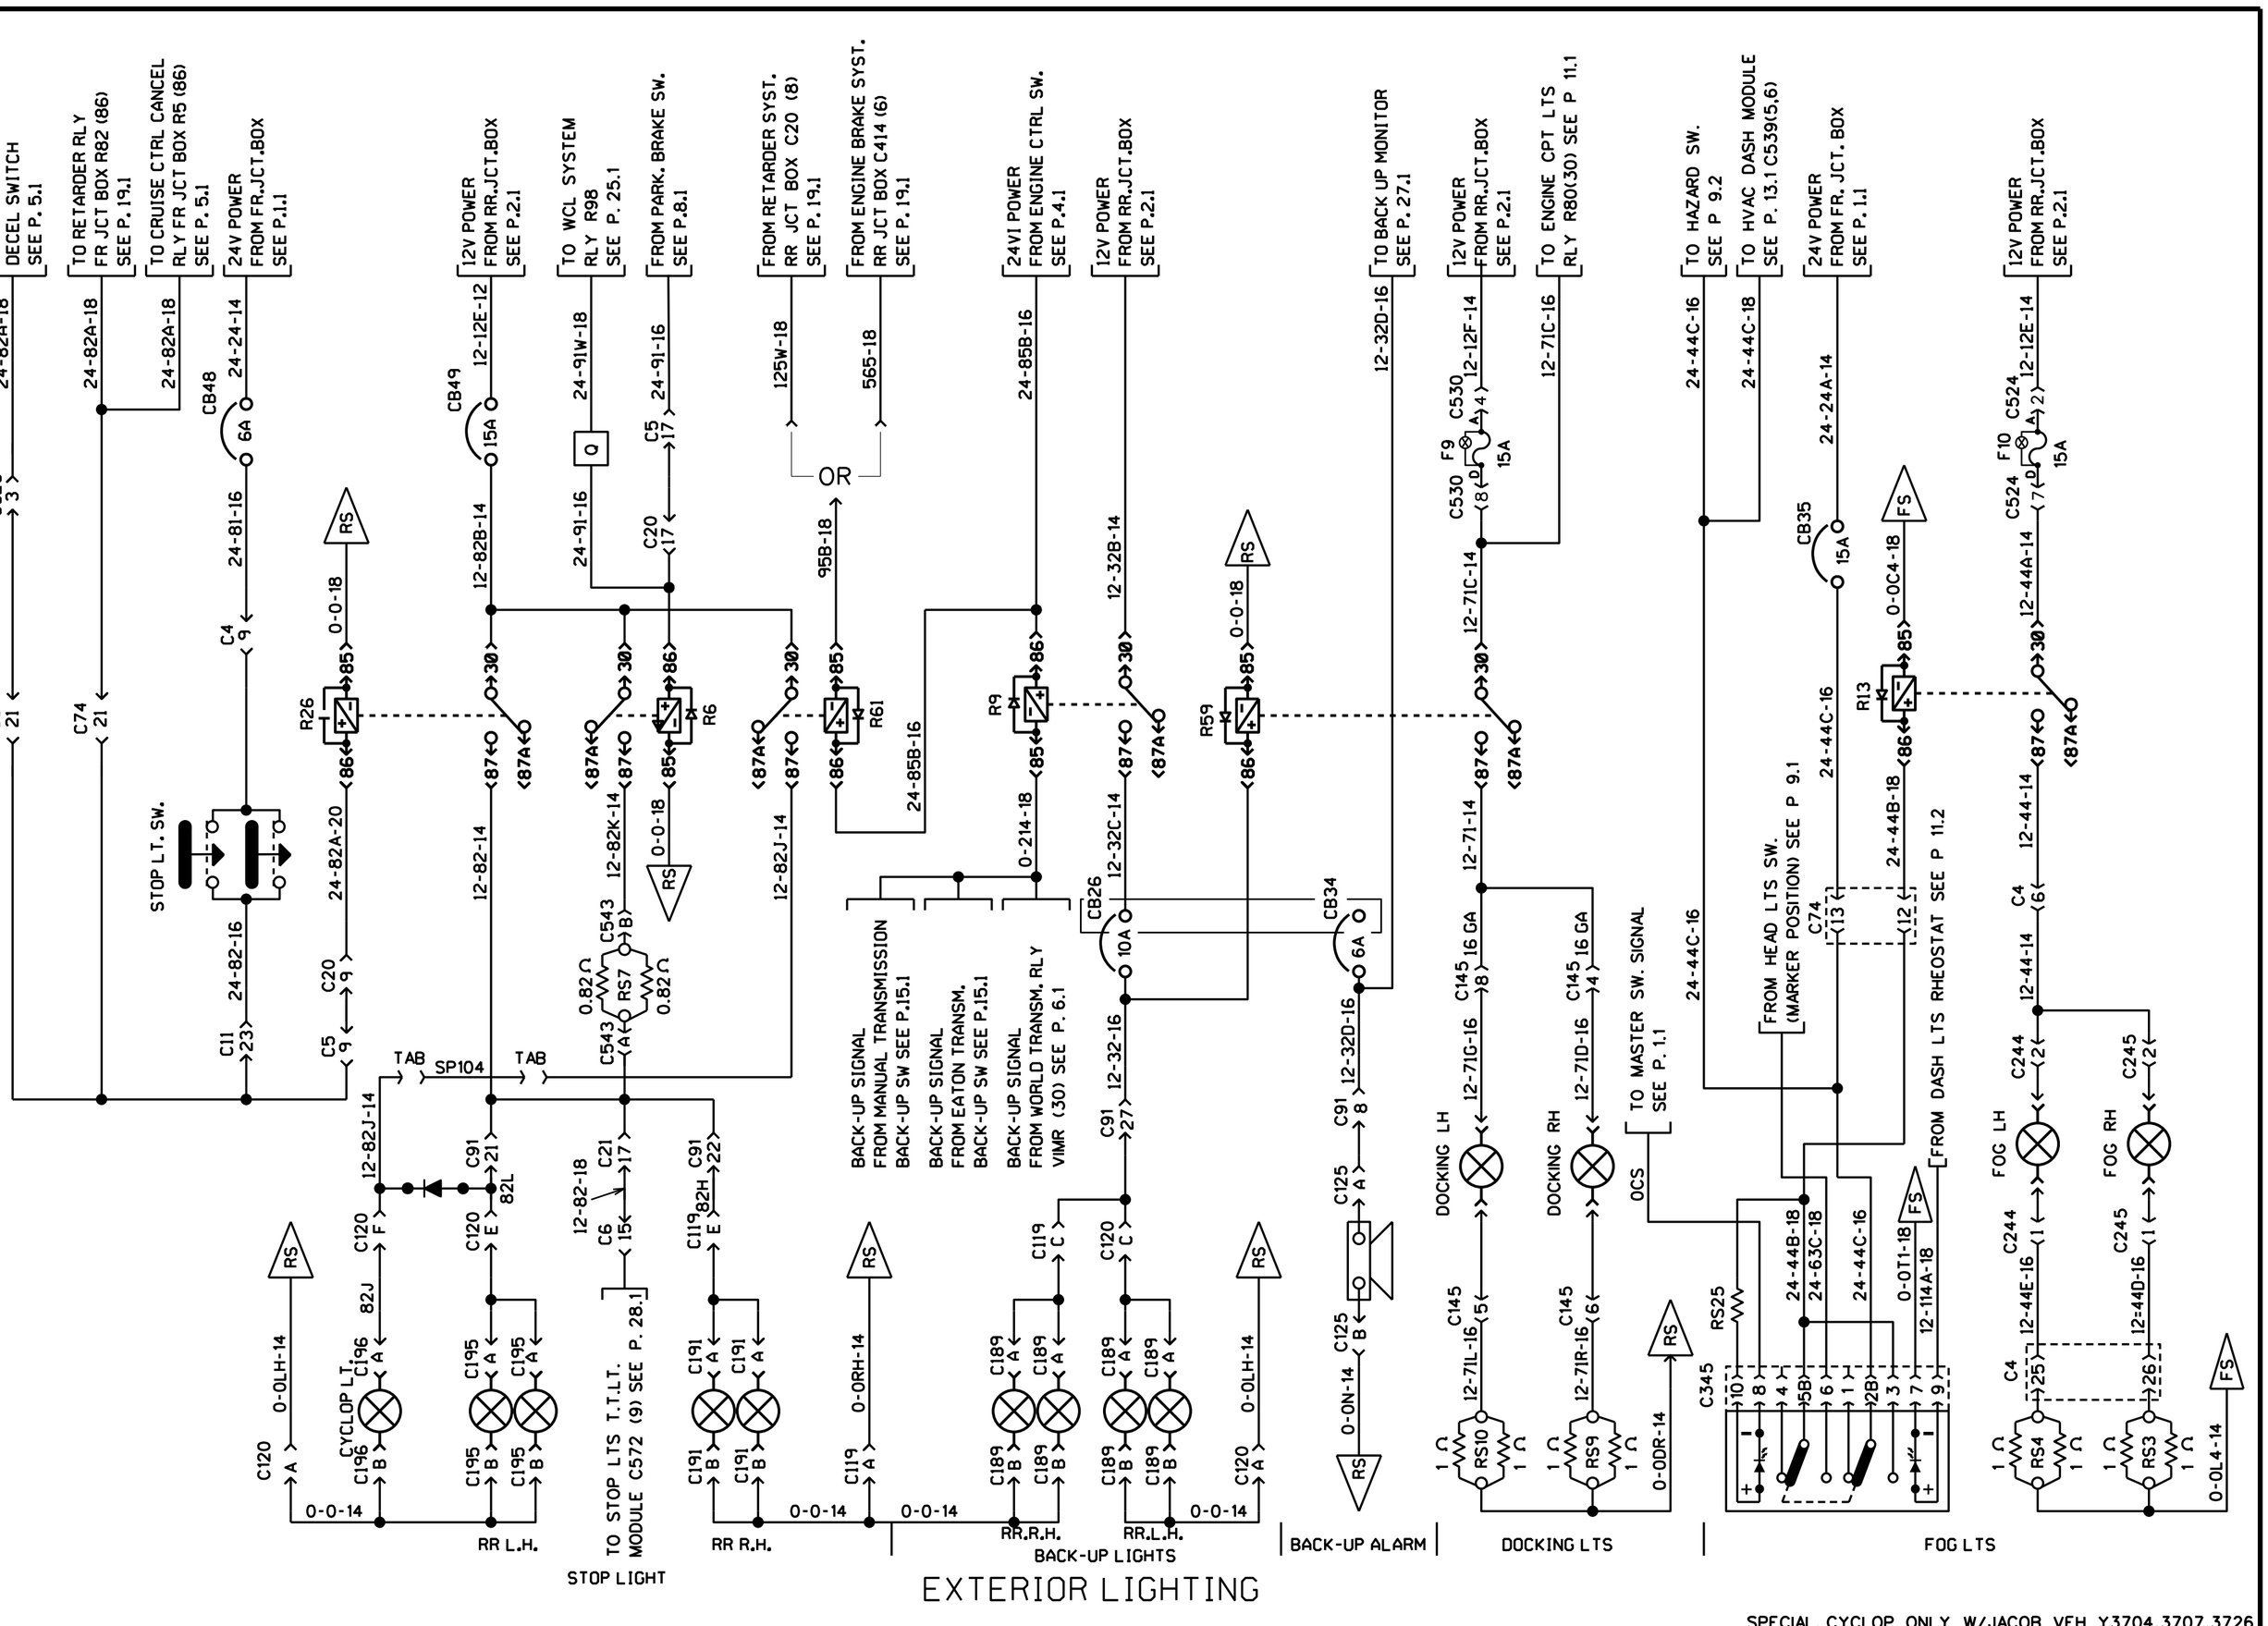


EXTERIOR LIGHTING

SPECIAL, CYCLOP ONLY W/JACOB VEH. Y3704,3707,3726

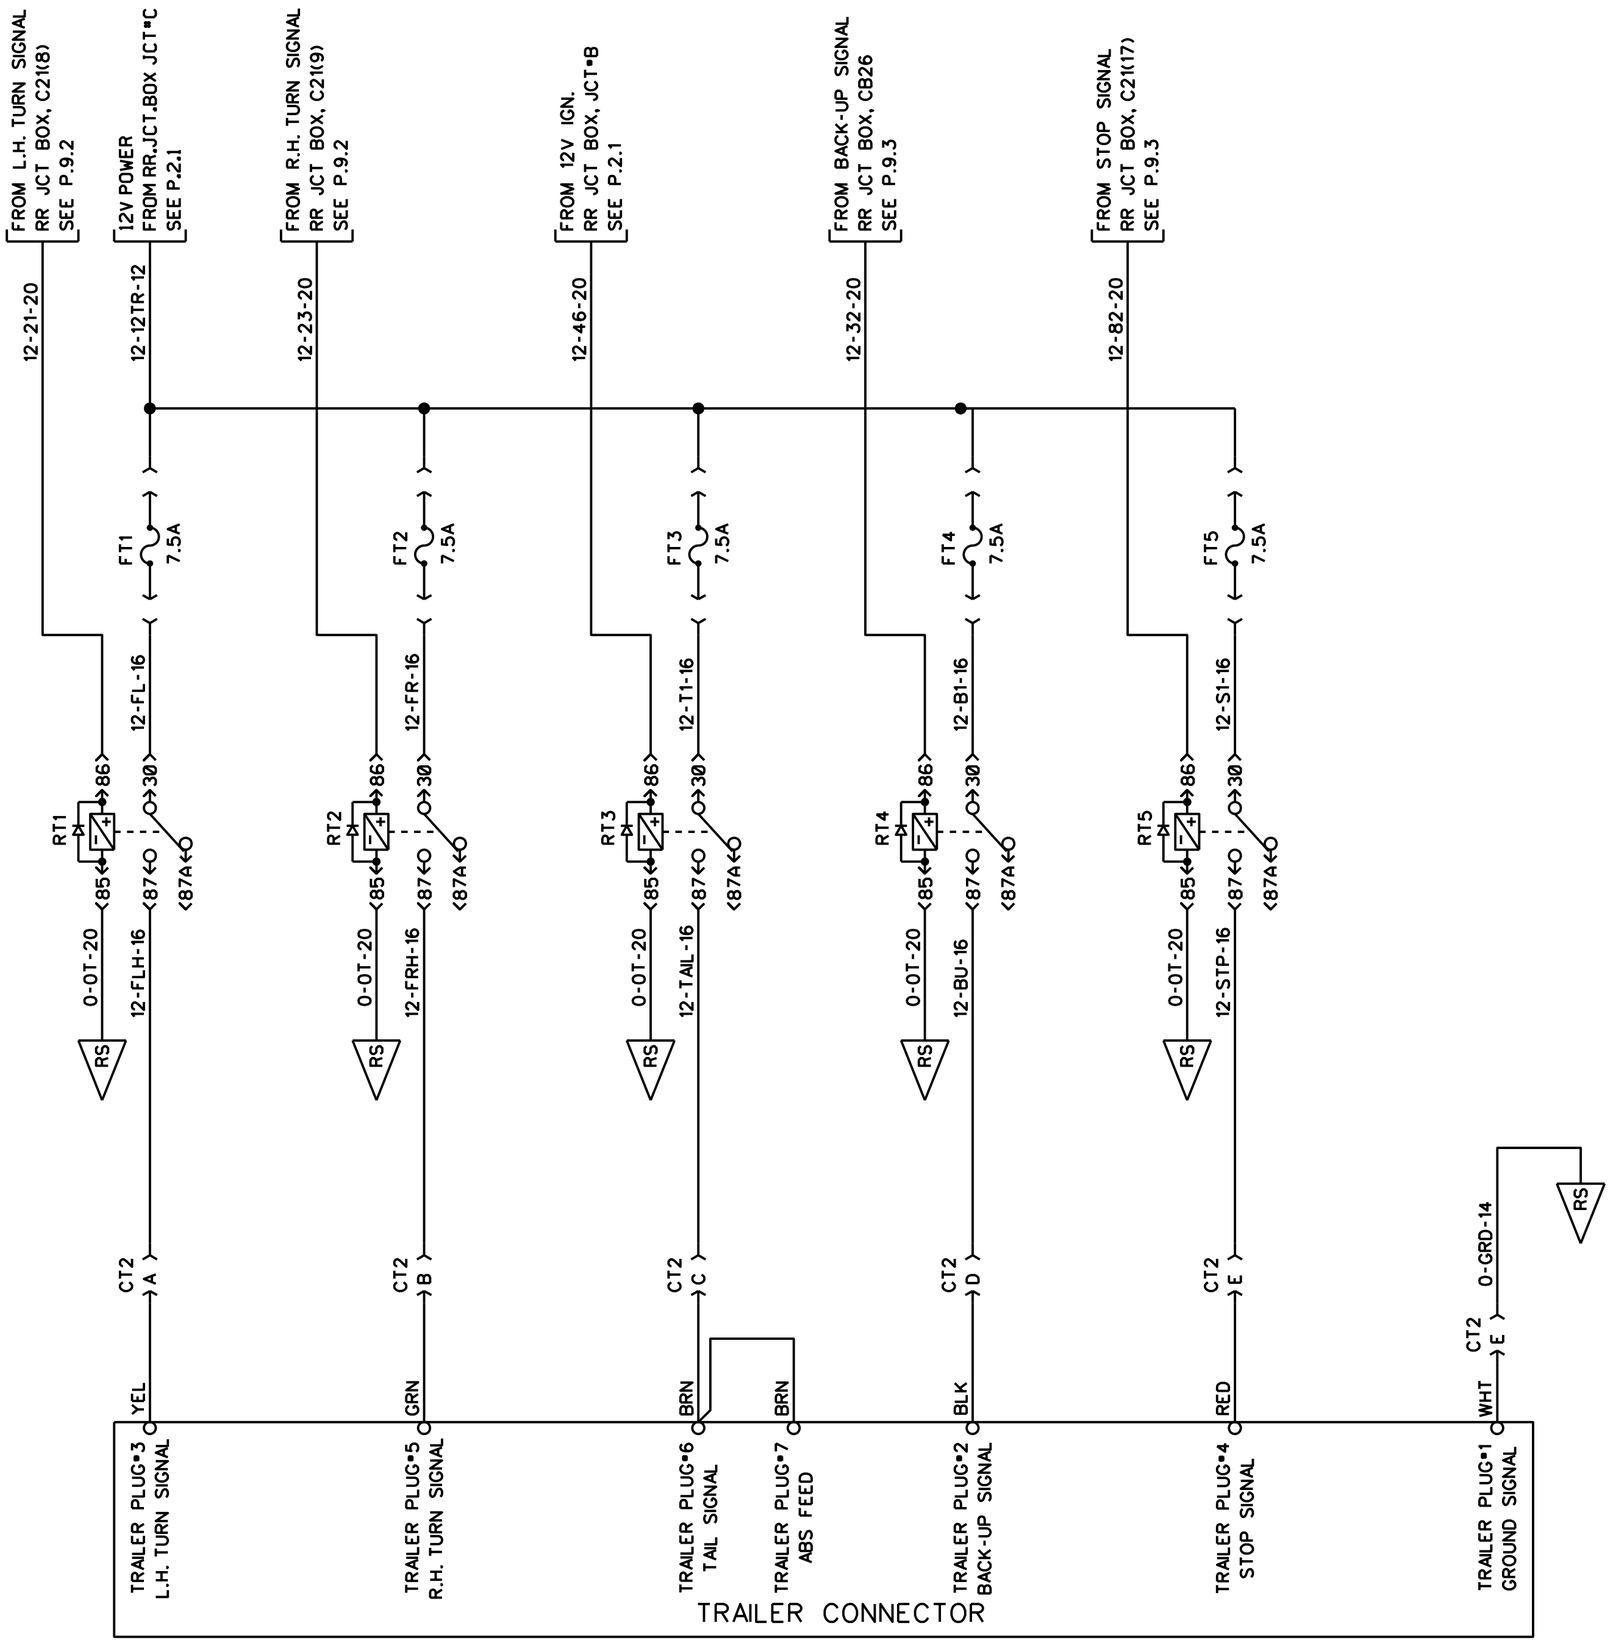


EXTERIOR TRAILER LIGHTING

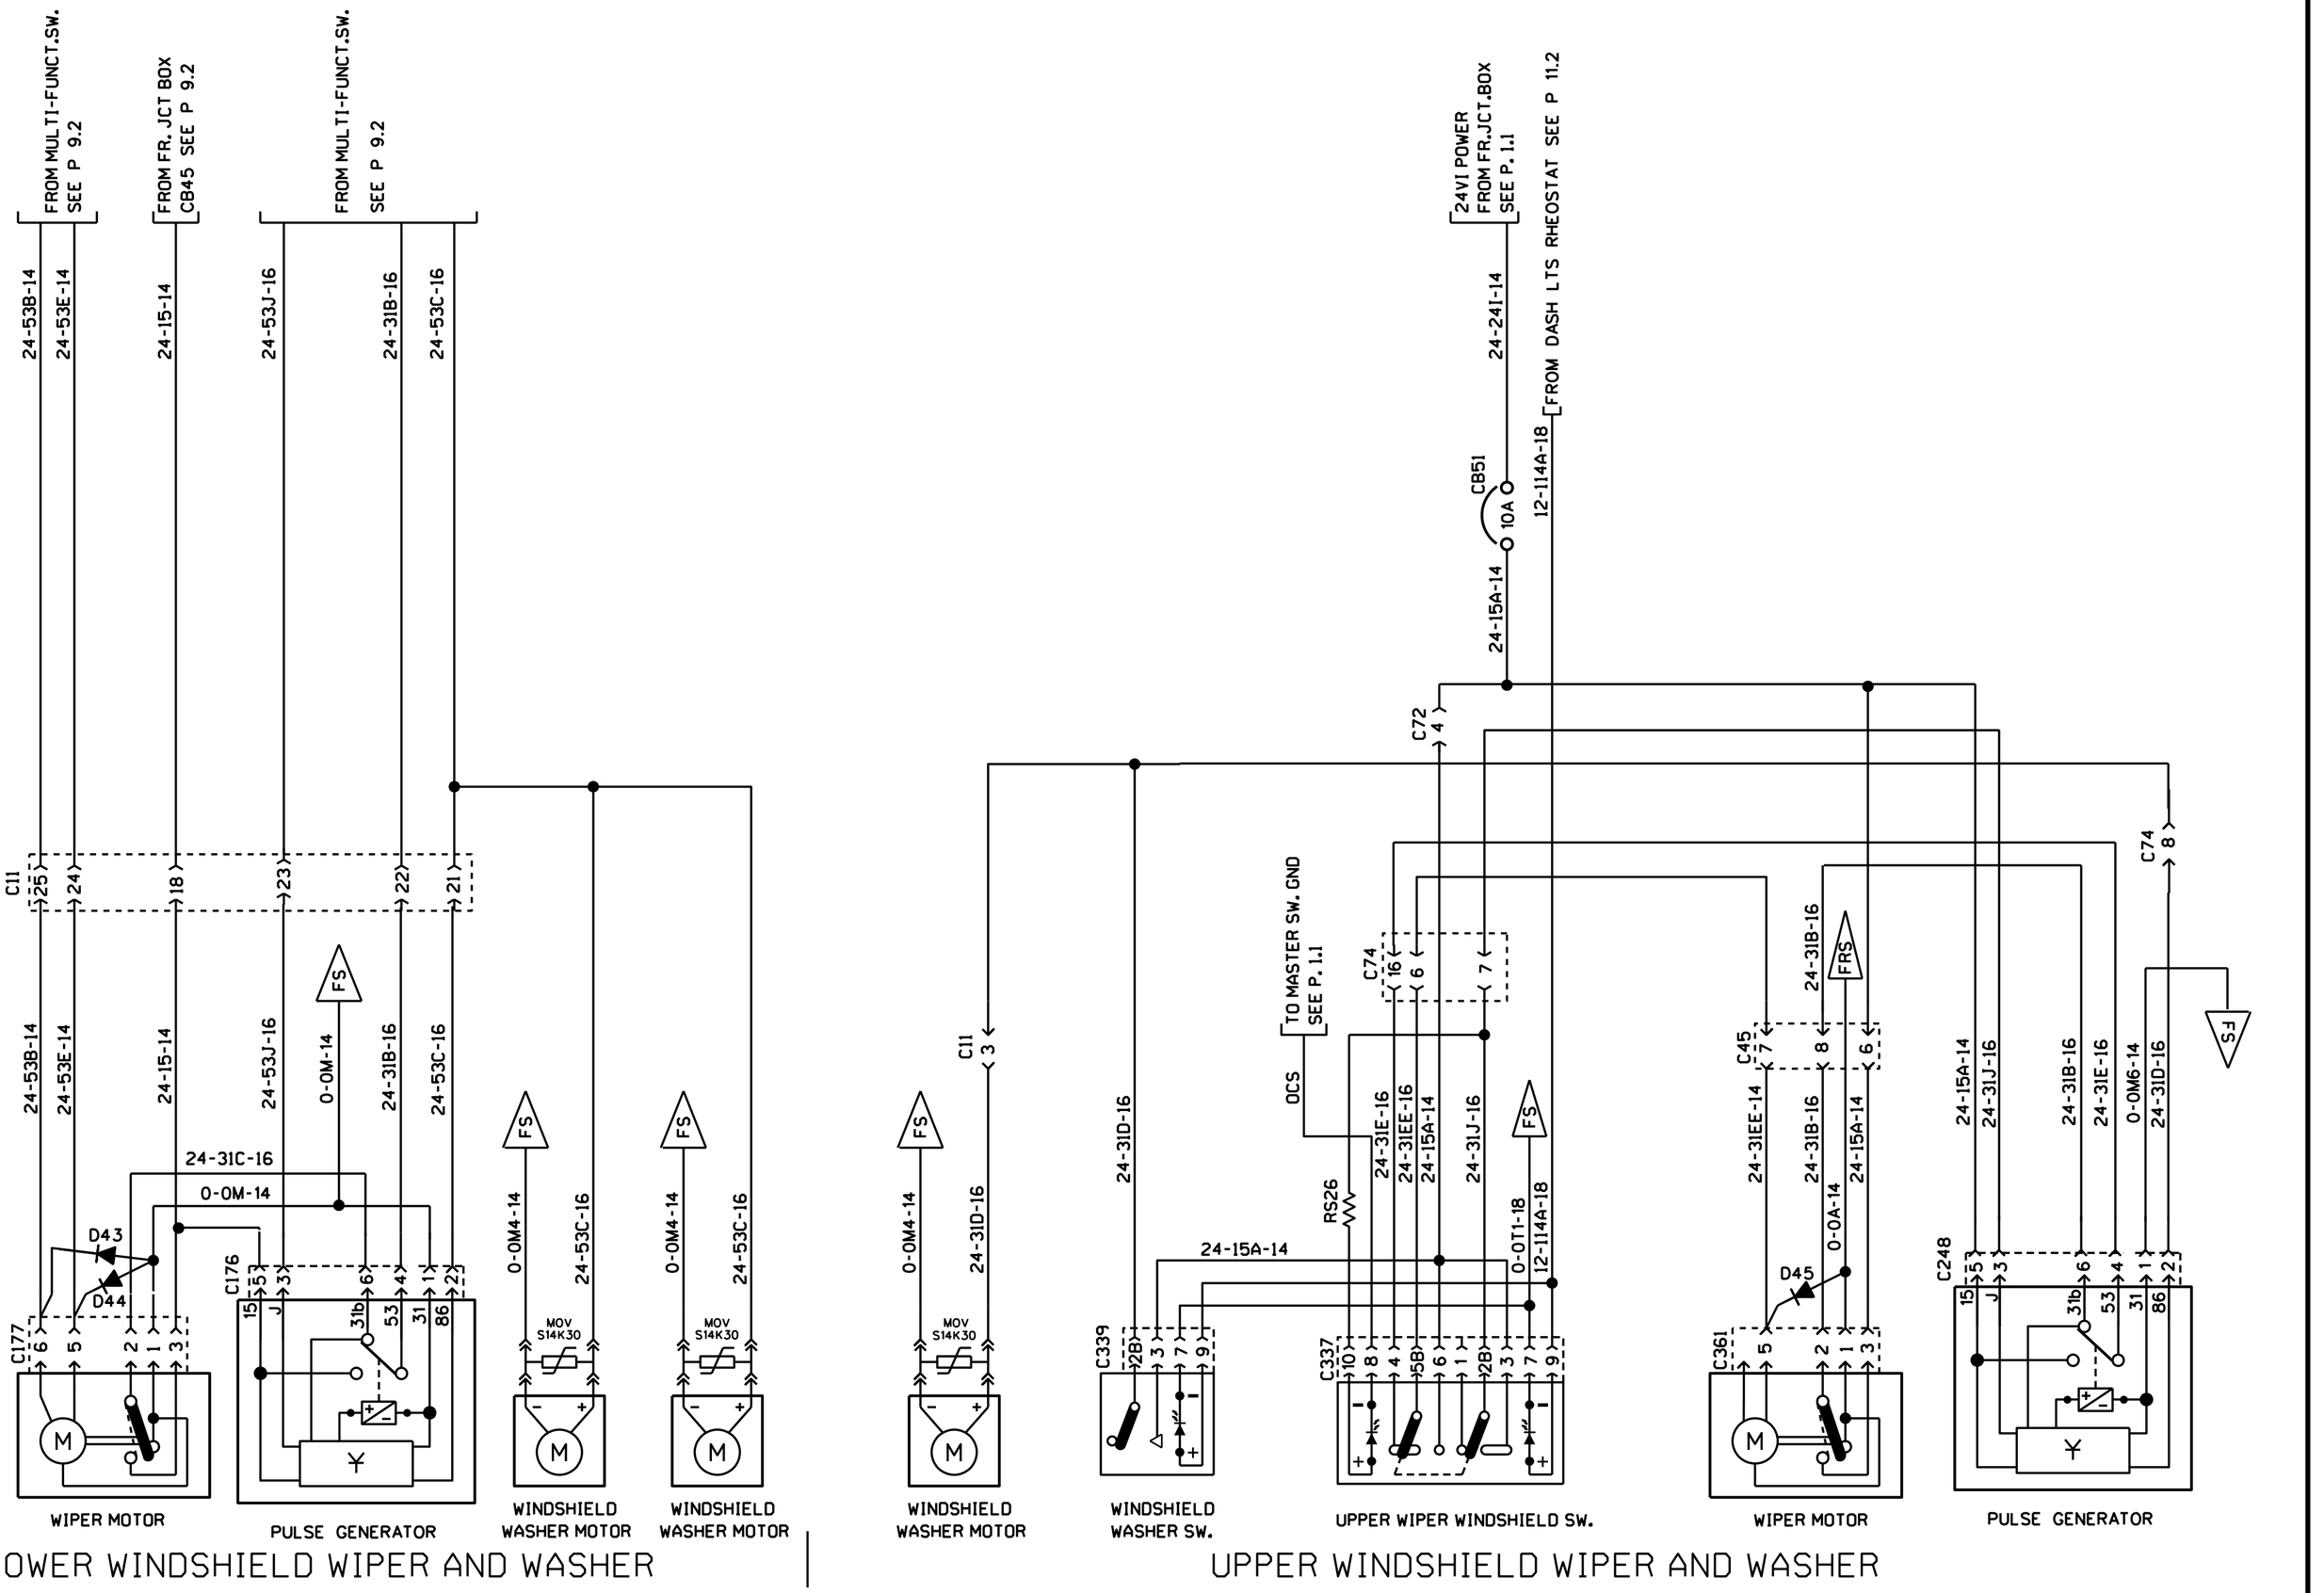


LOWER WINDSHIELD WIPER AND WASHER


UPPER WINDSHIELD WIPER AND WASHER

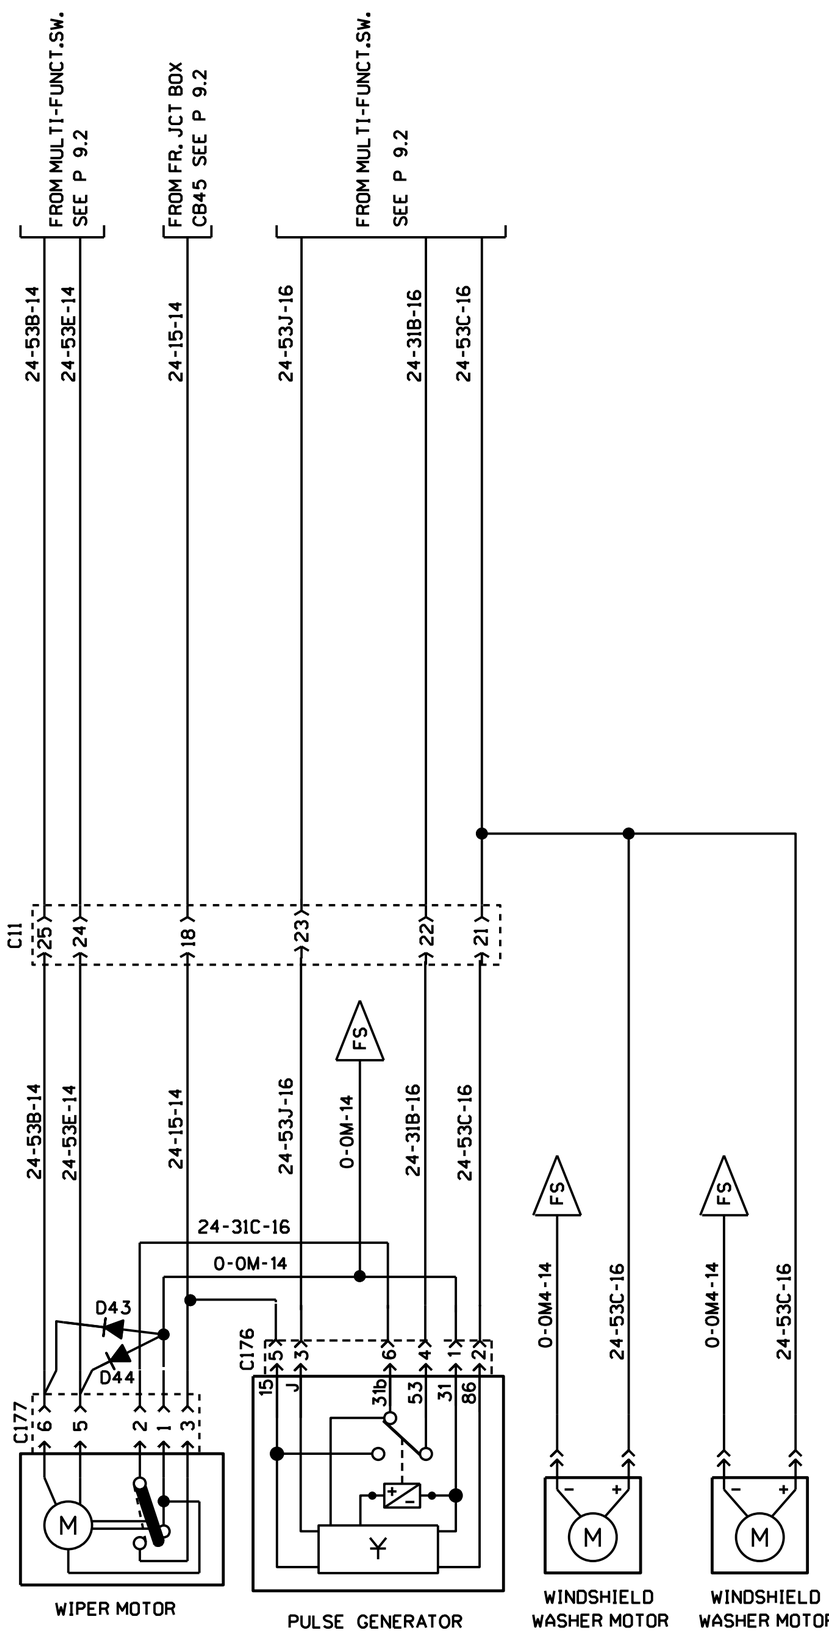


LOWER WINDSHIELD WIPER AND WASHER

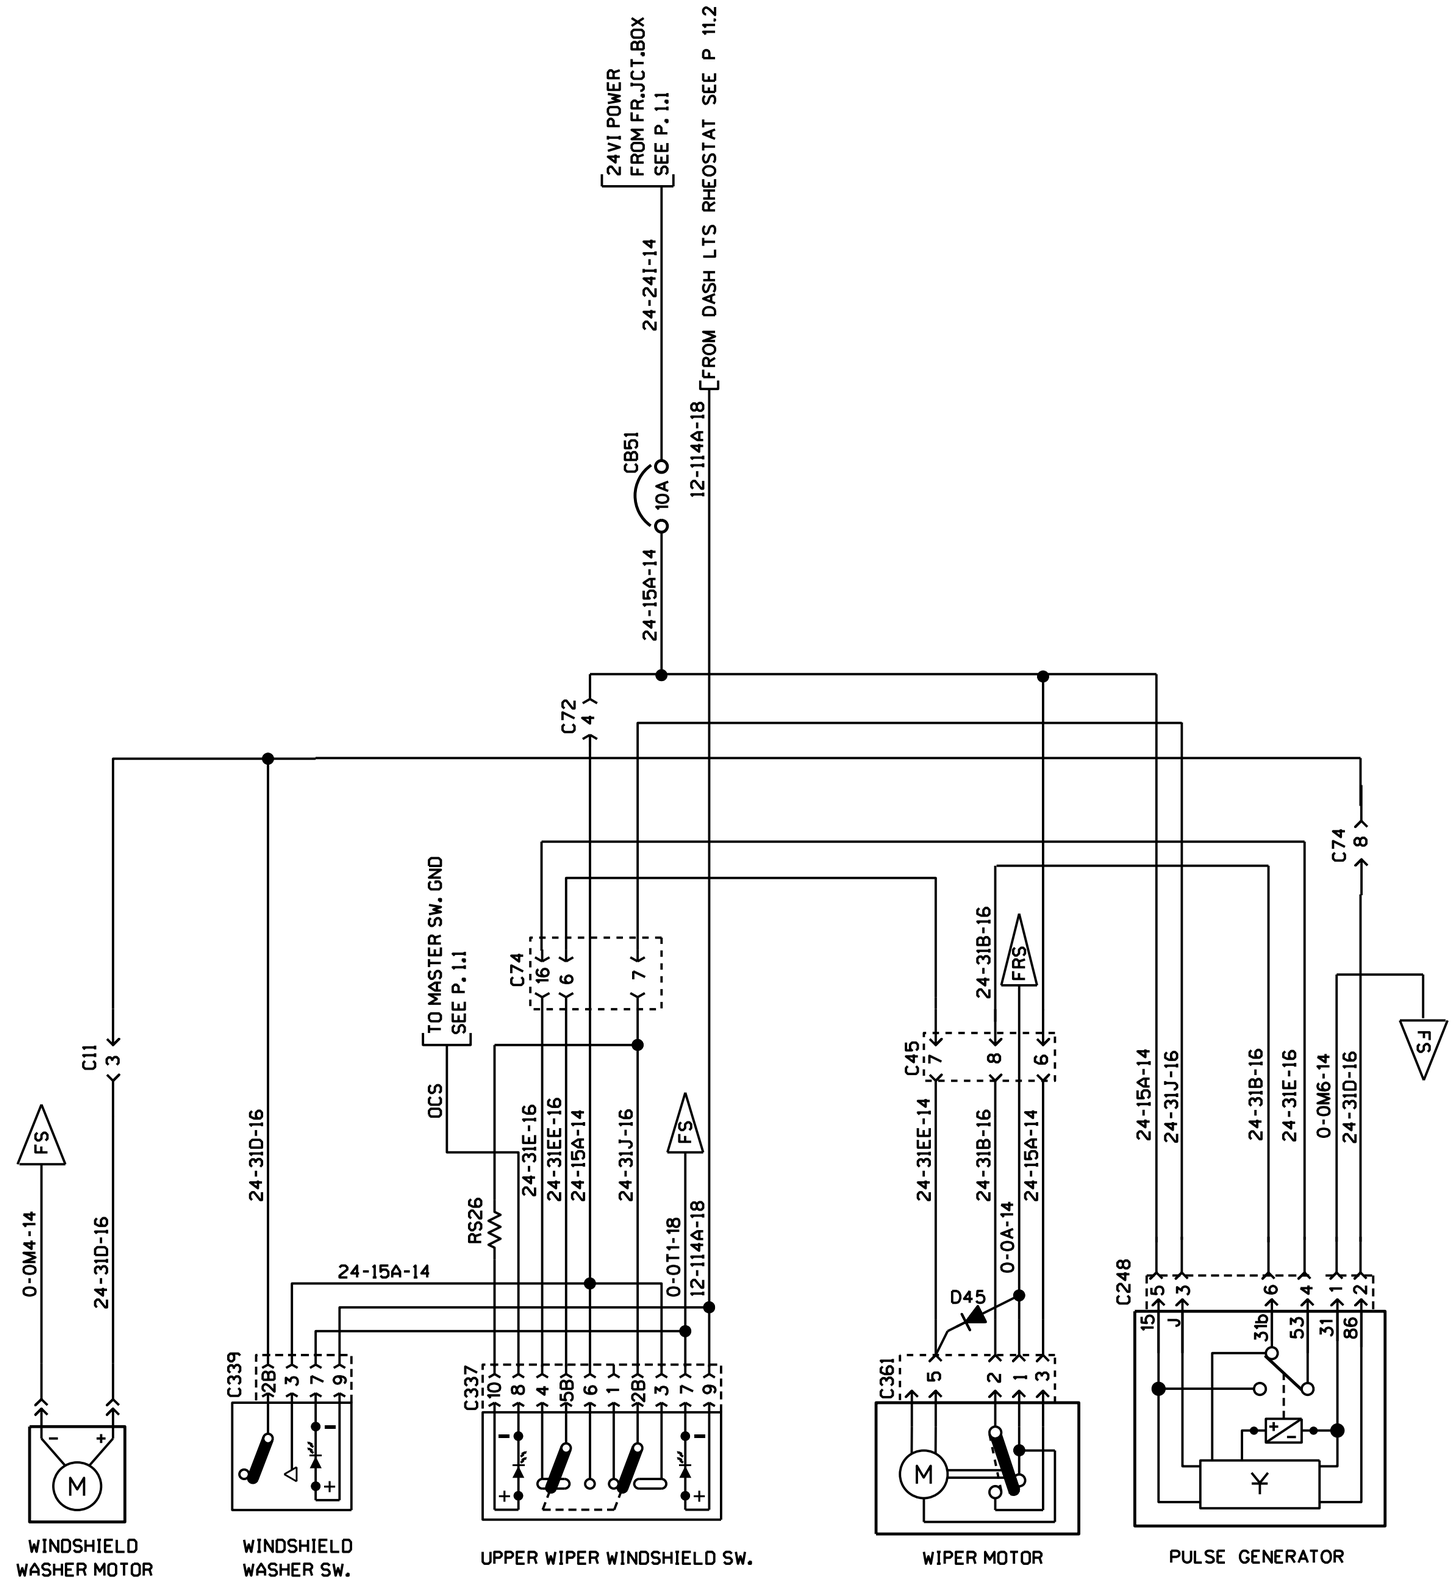

UPPER WINDSHIELD WIPER AND WASHER

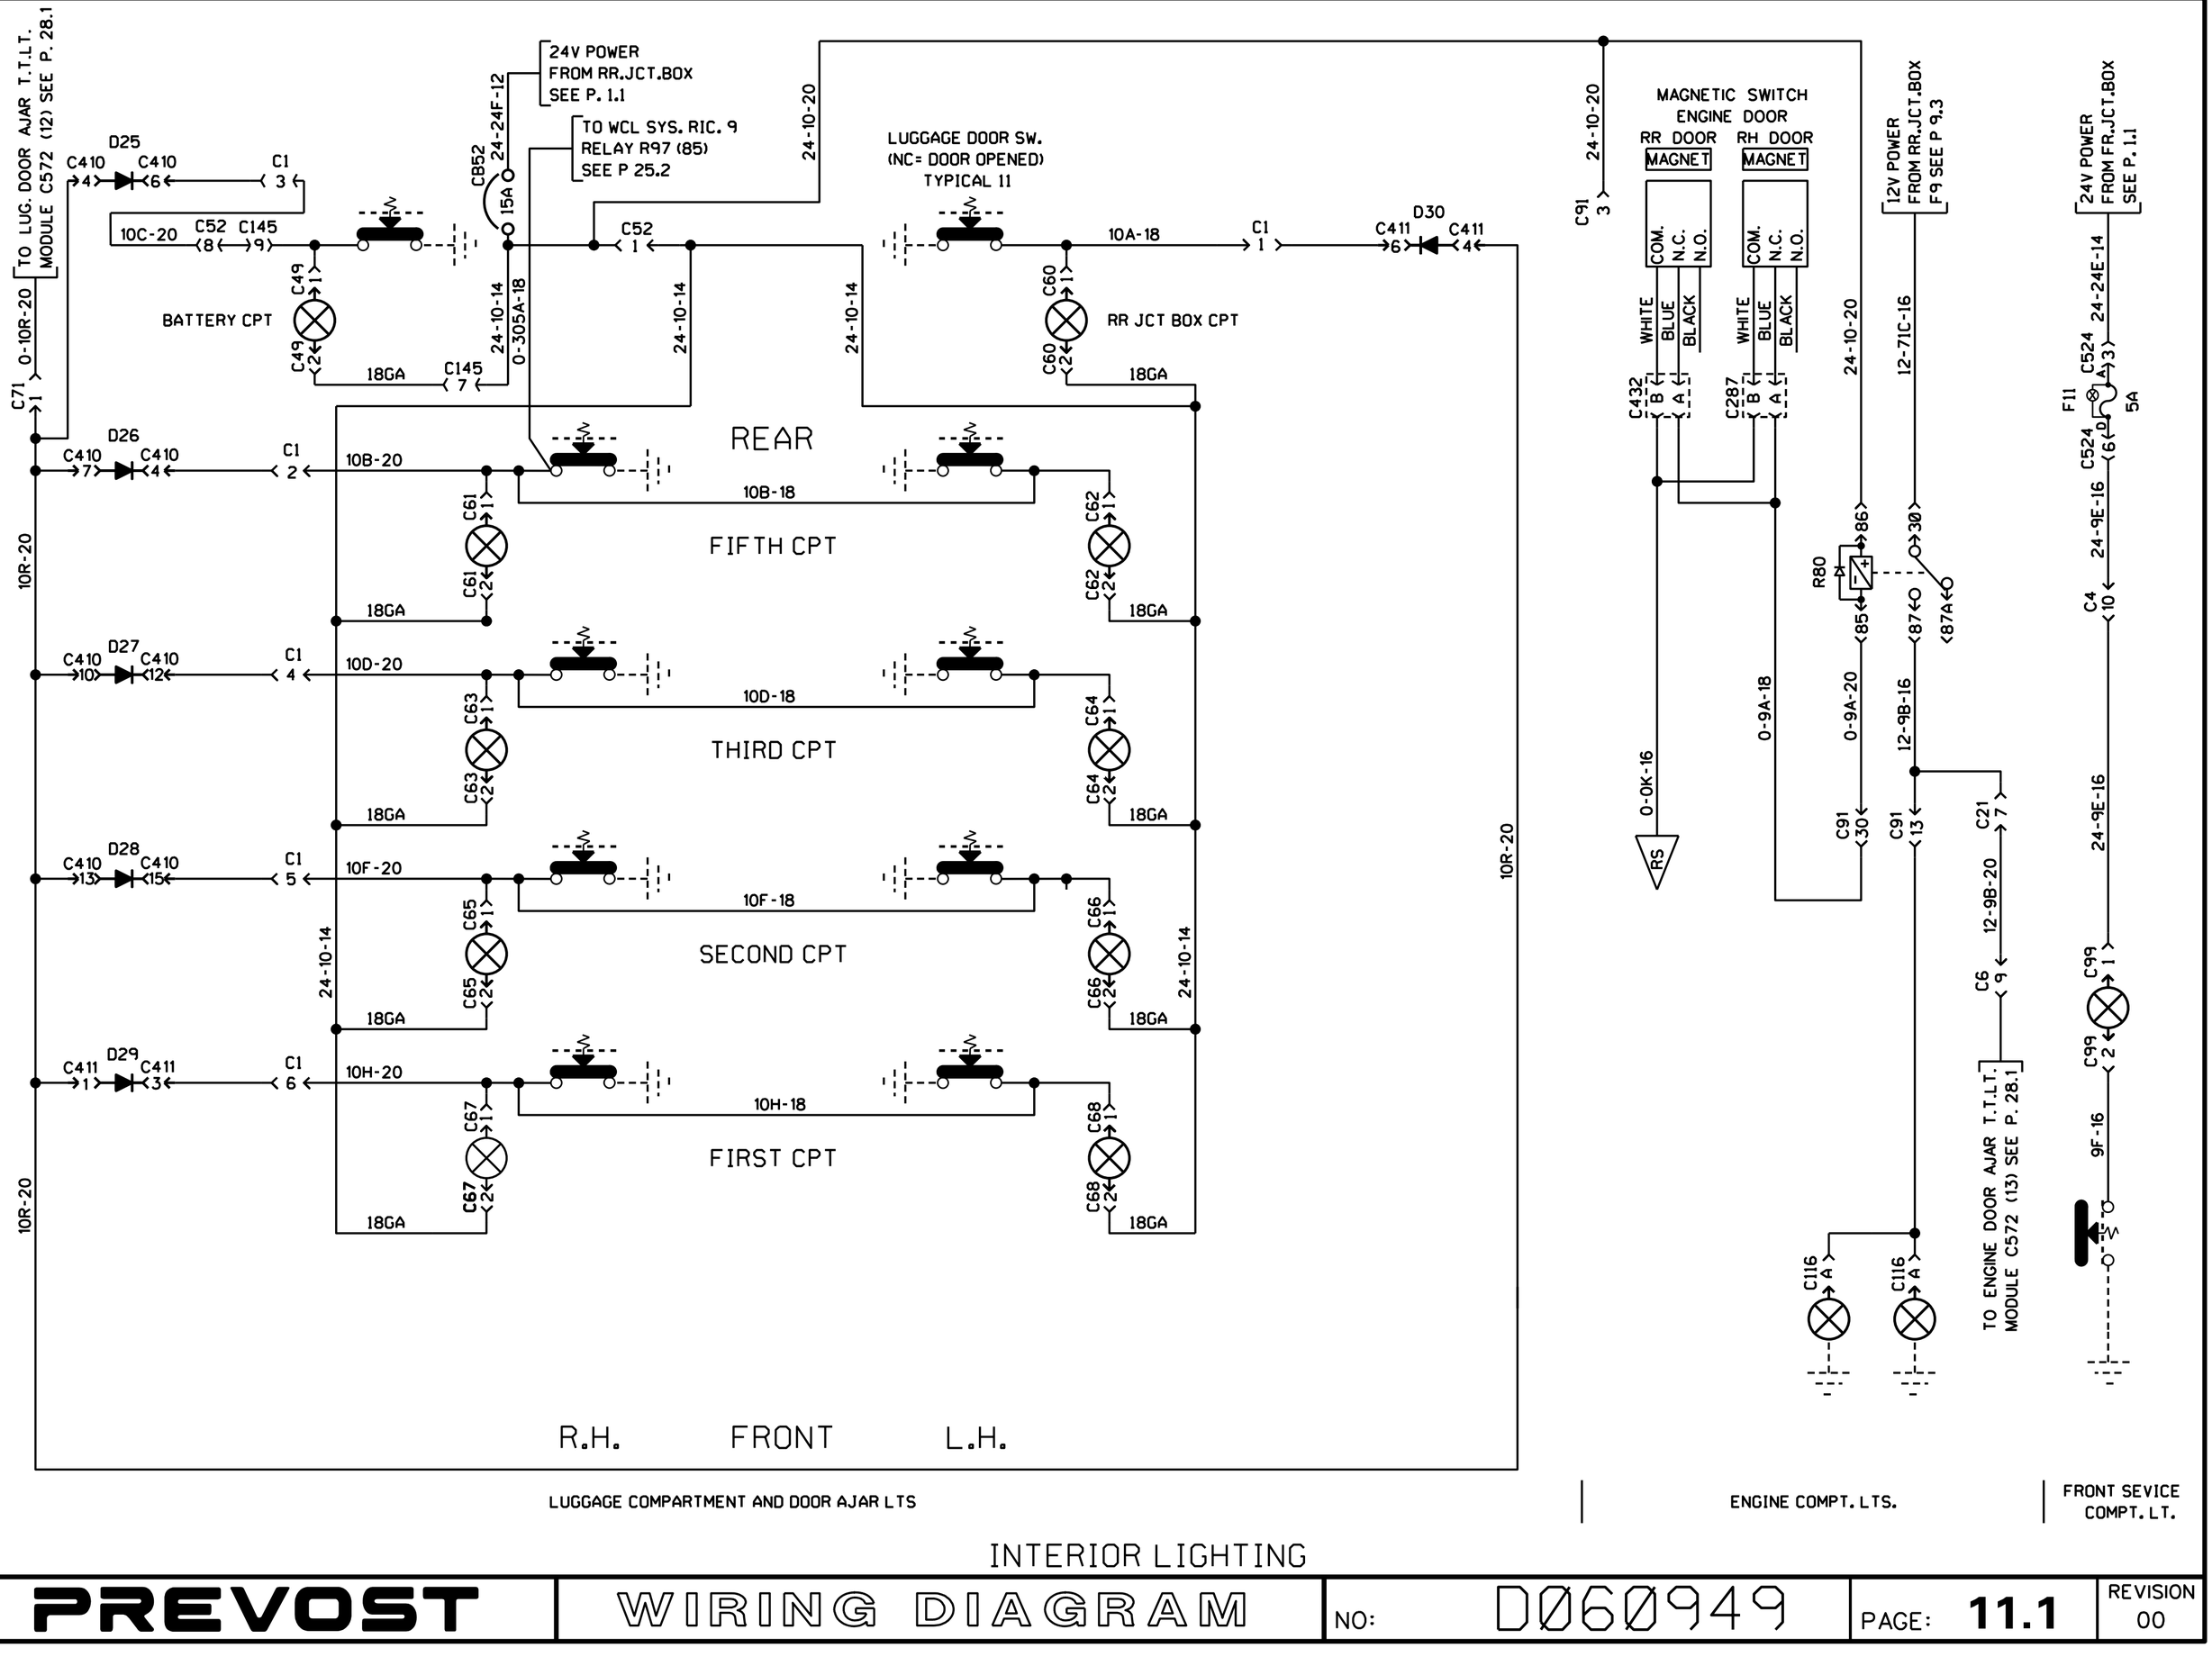


INTERIOR LIGHTING

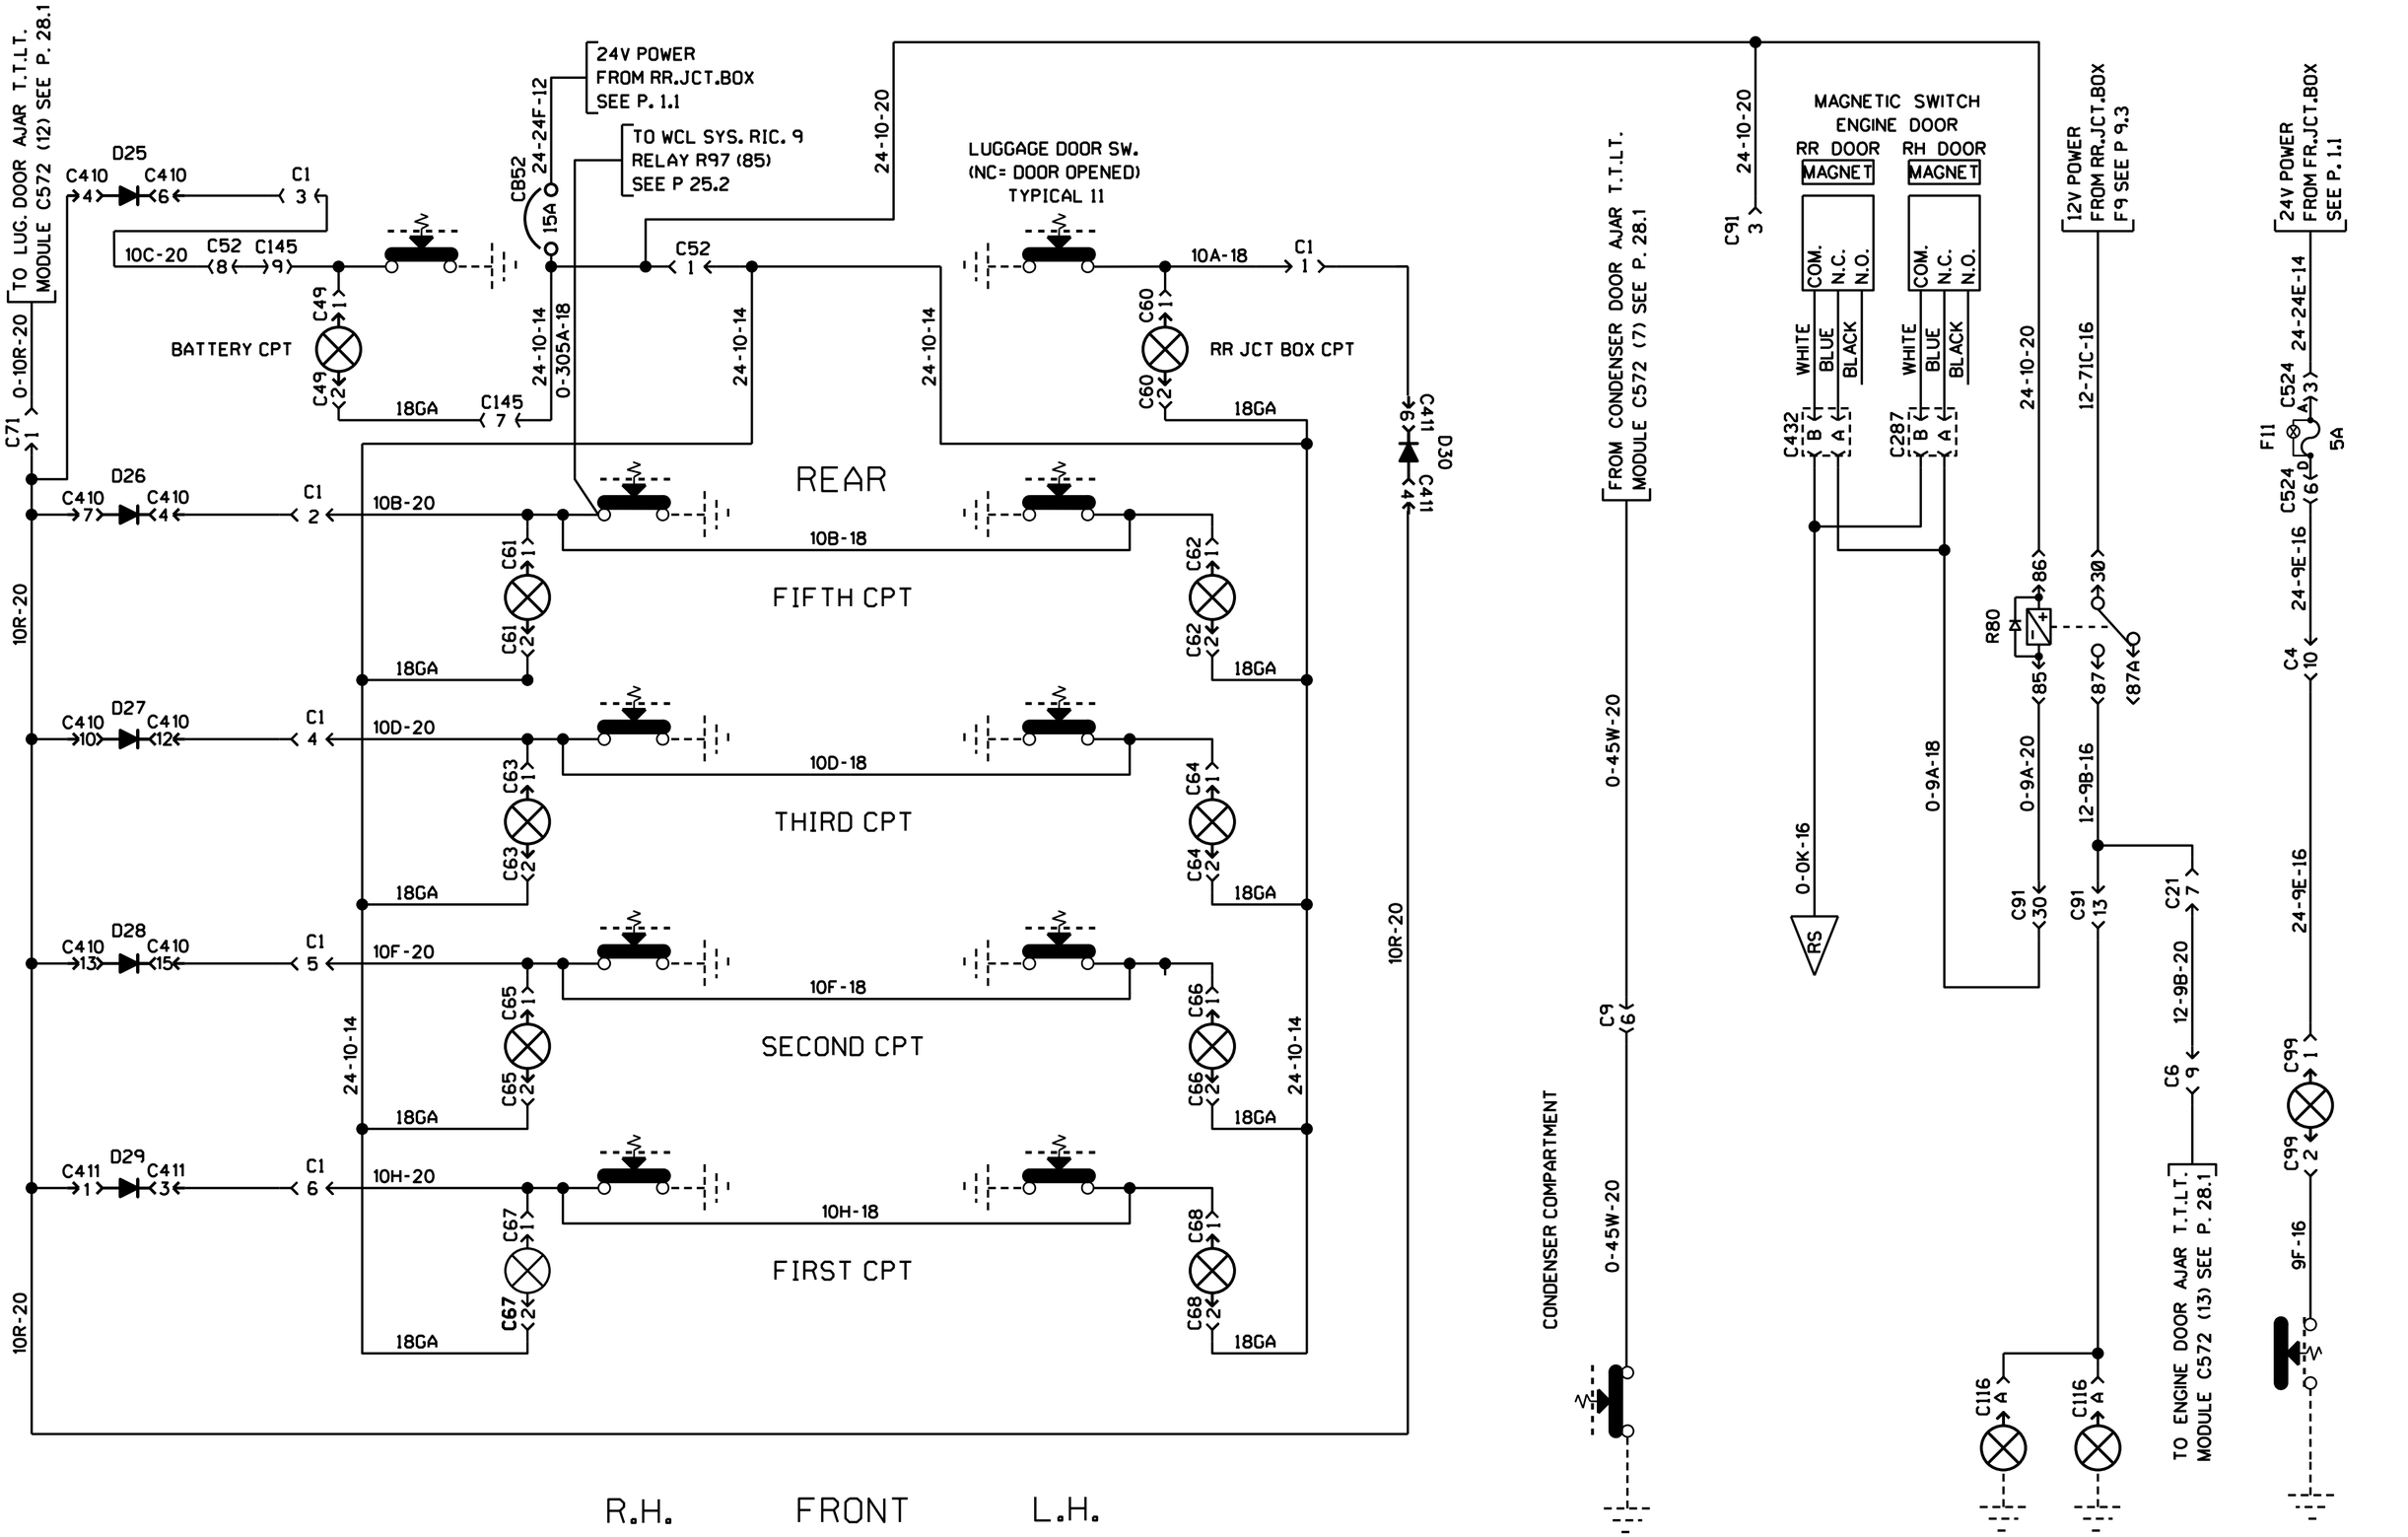


LUGGAGE COMPARTMENT AND DOOR AJAR LTS | DOOR AJAR SWITCH CONDENSER COMPT. | ENGINE COMPT. LTS. | FRONT SEVICE COMPT. LT.


INTERIOR LIGHTING

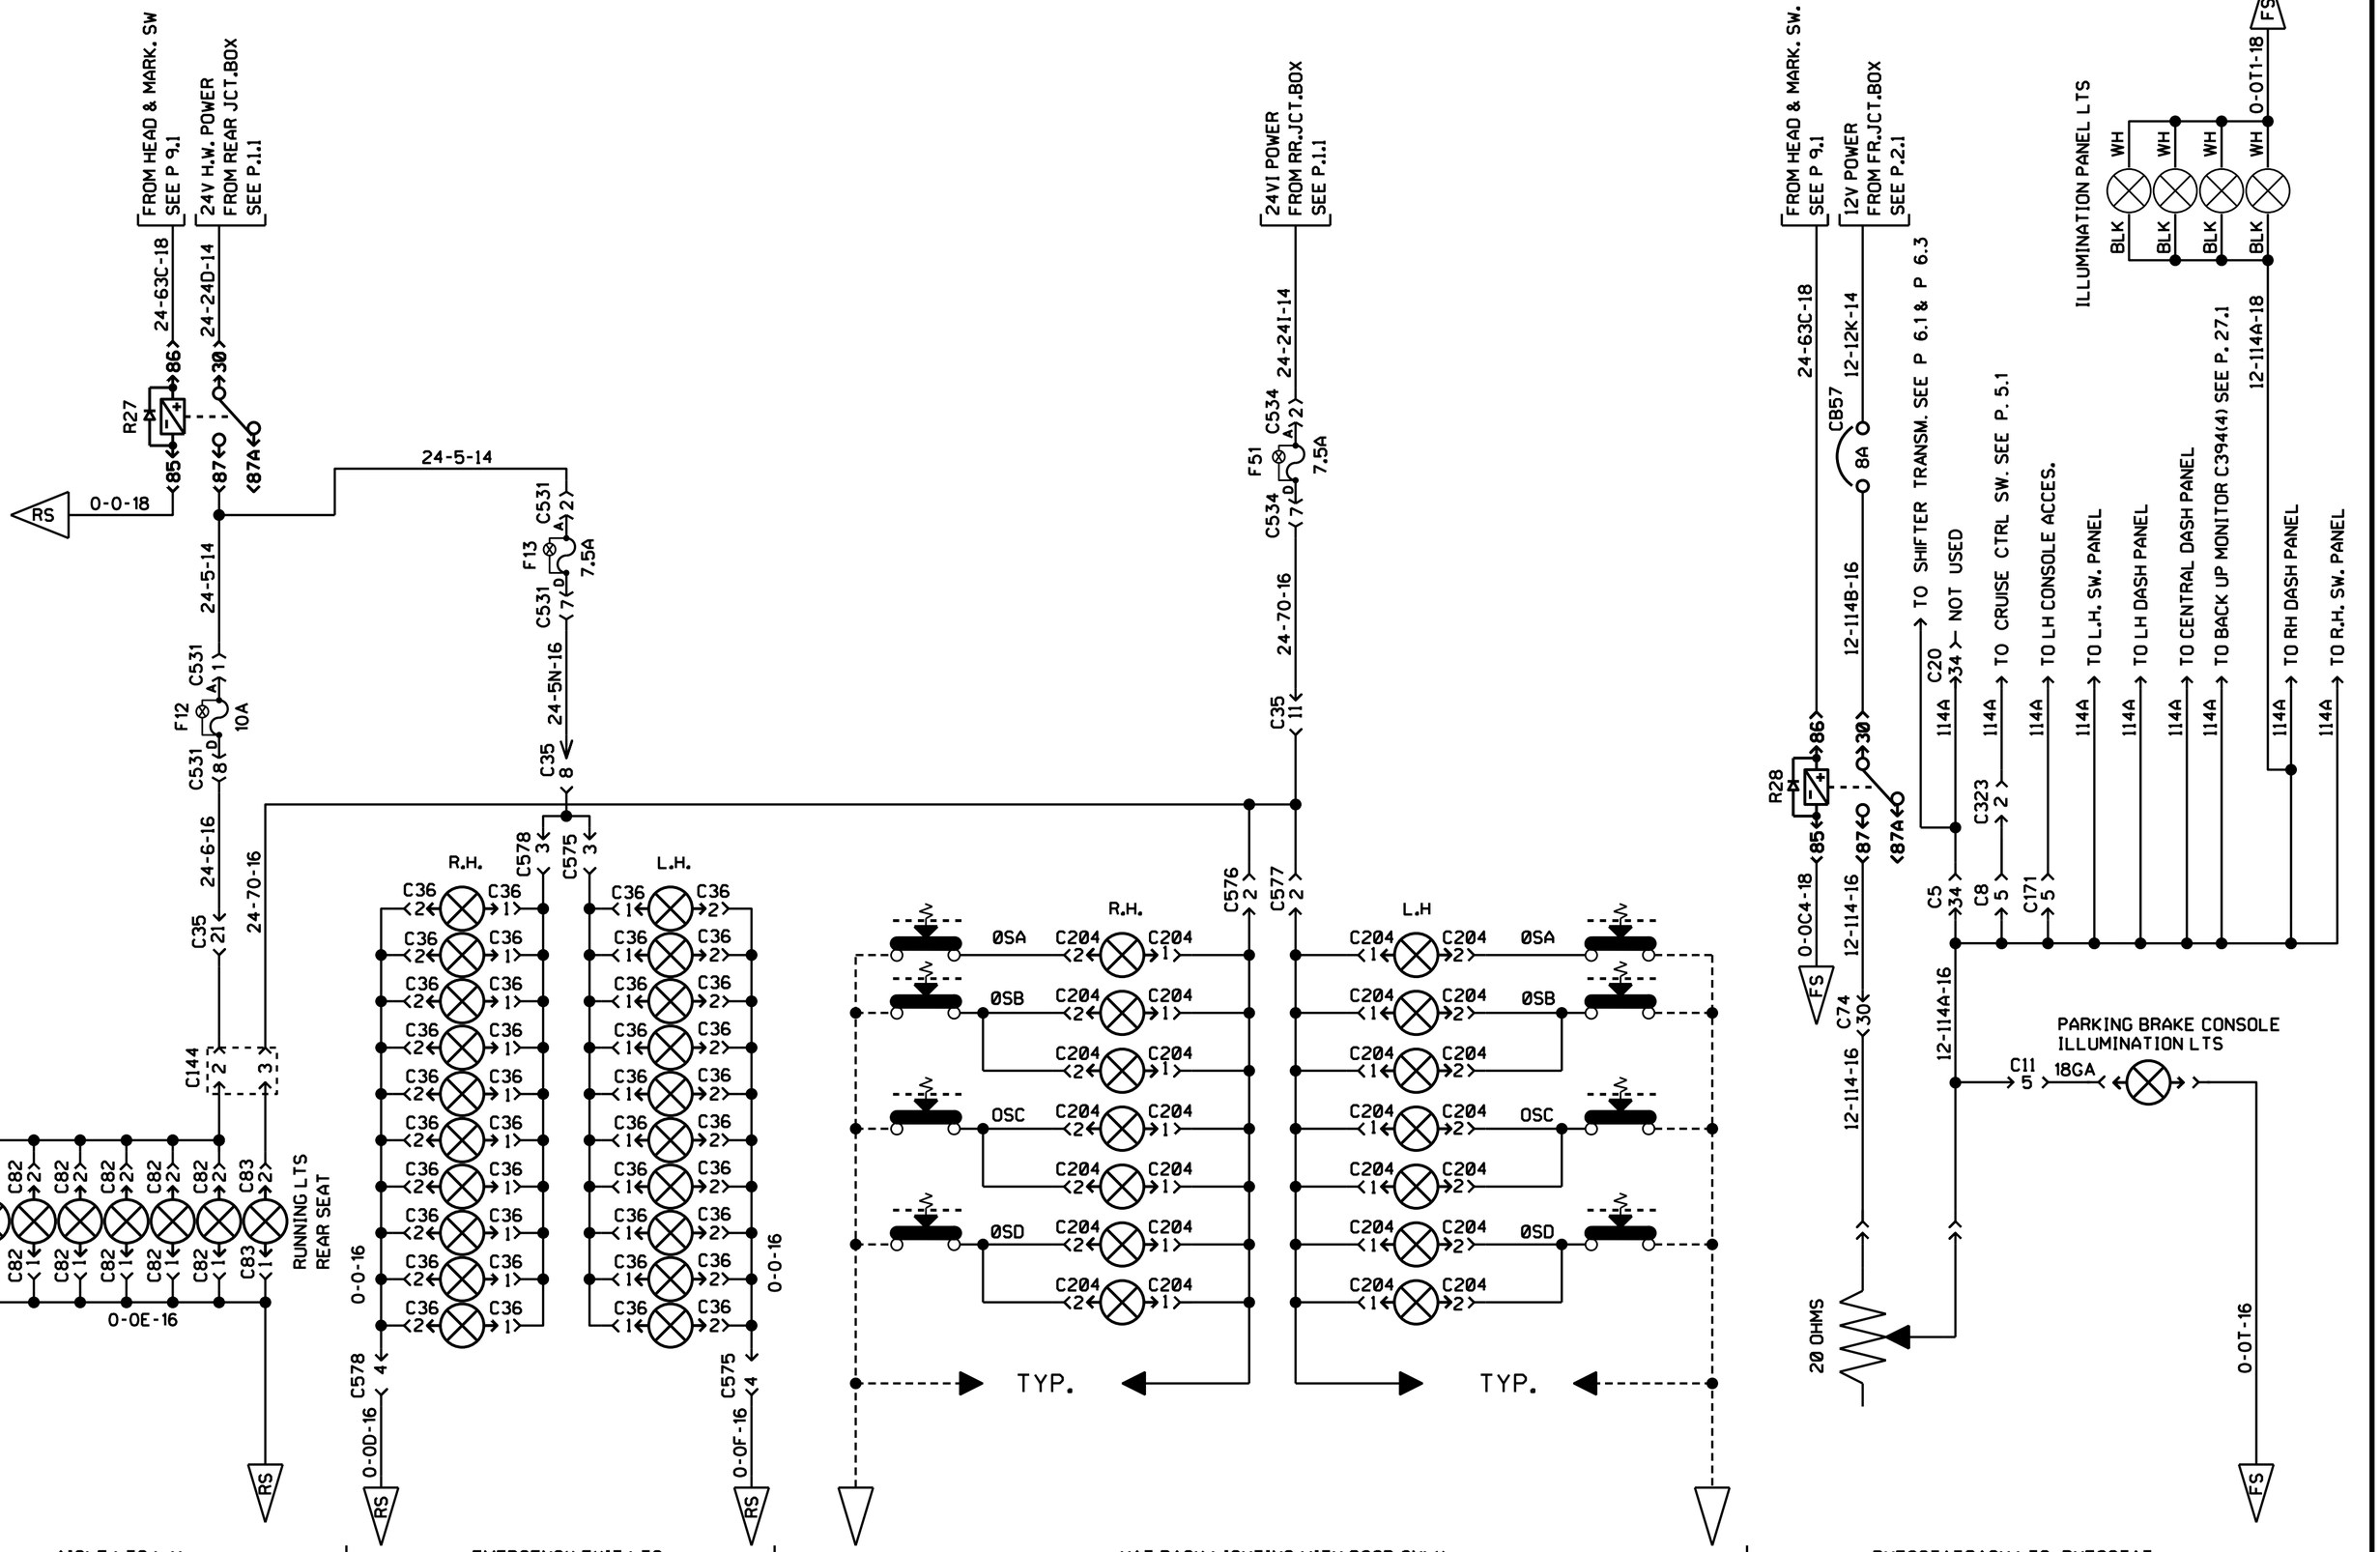


INTERIOR LIGHTING

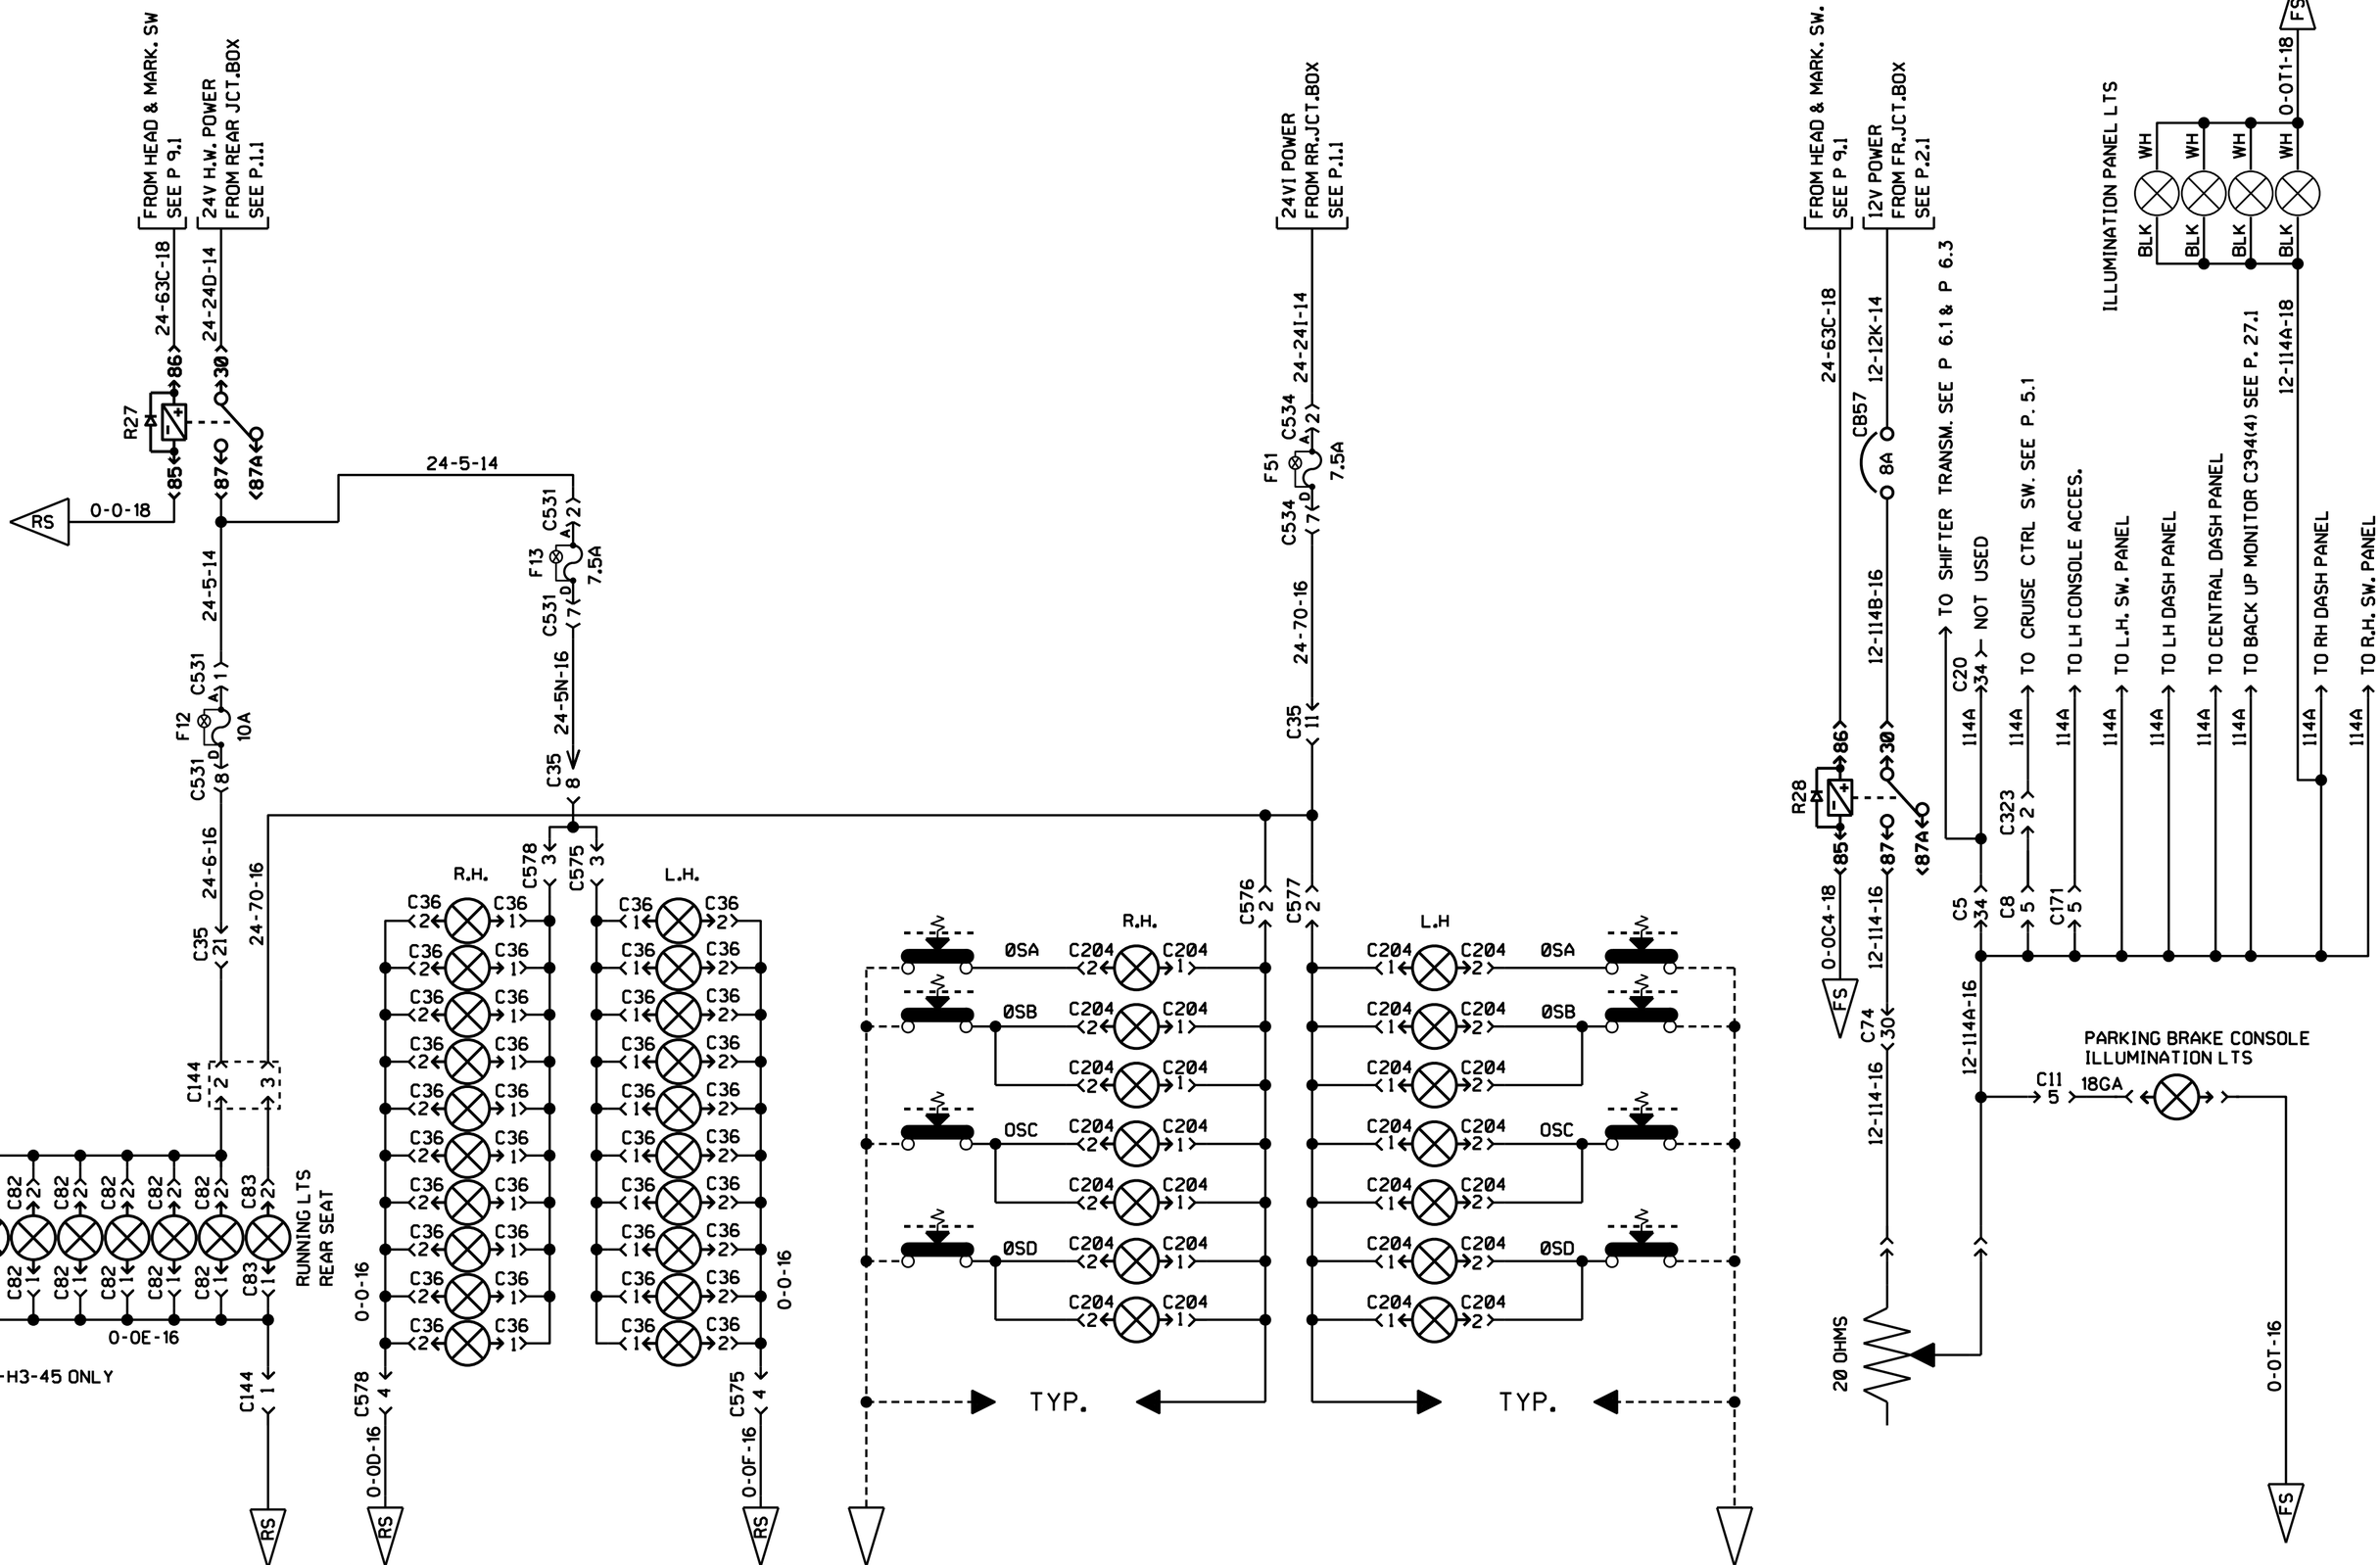

INTERIOR LIGHTING

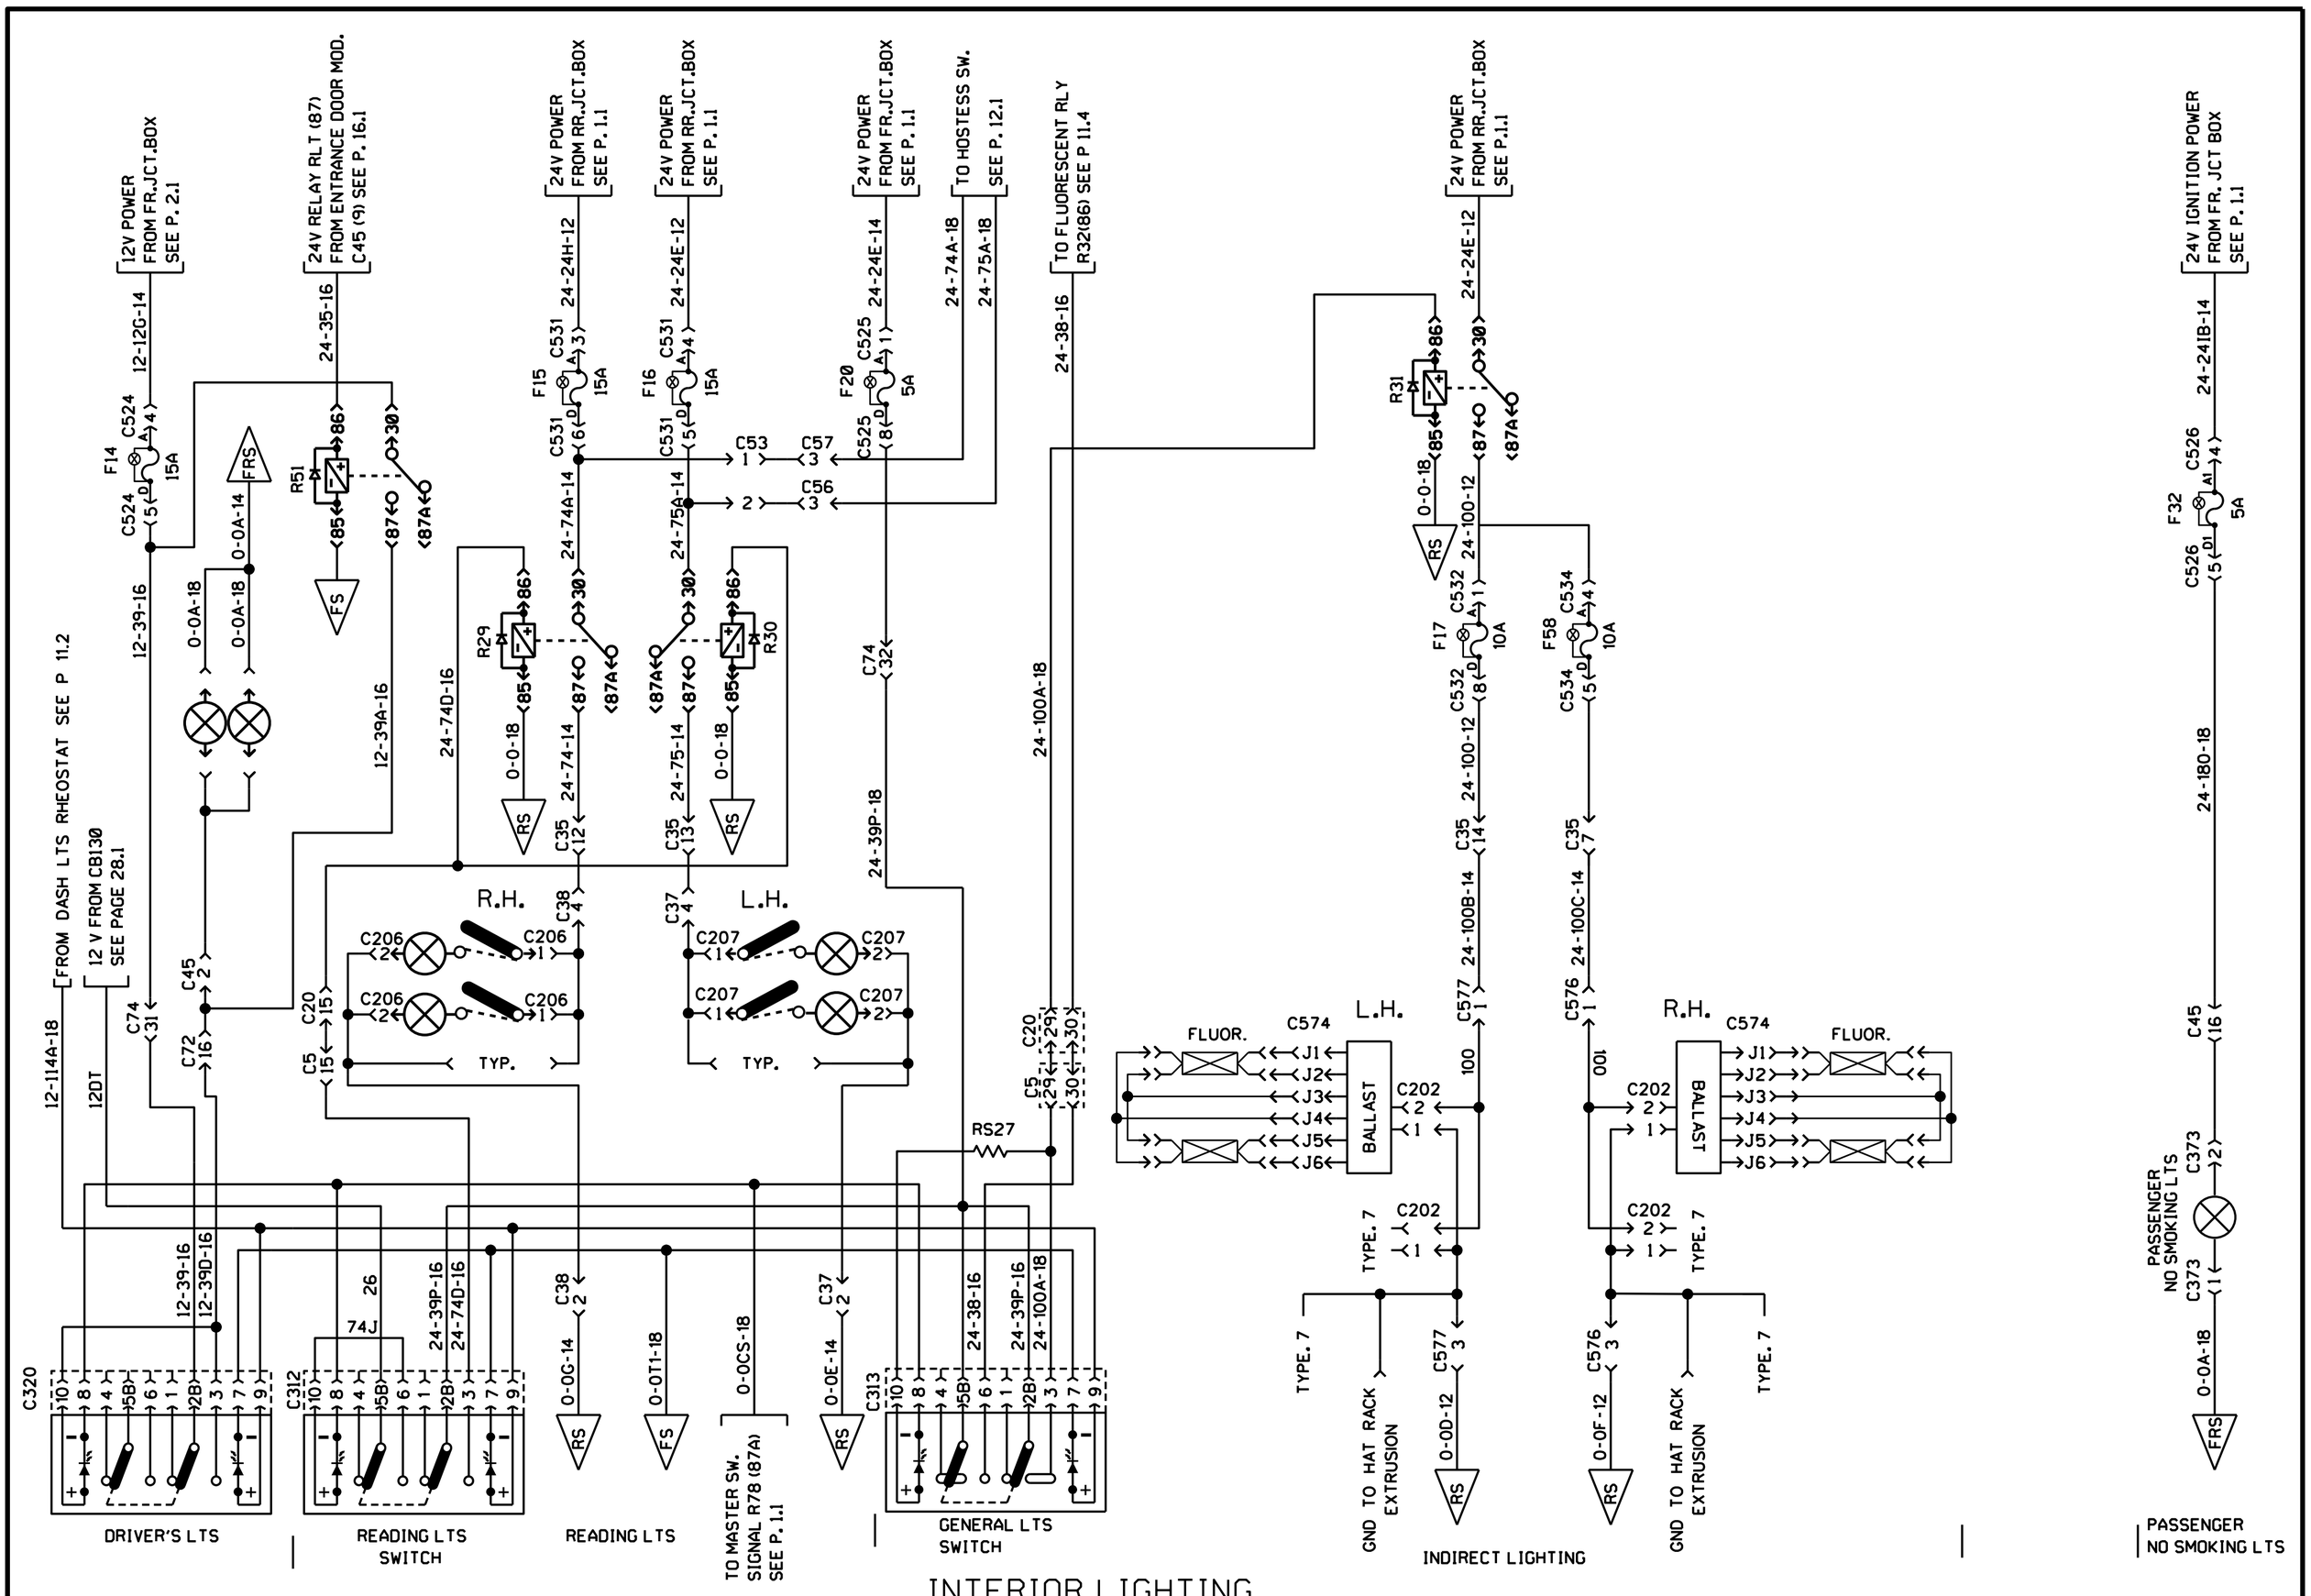


INTERIOR LIGHTING

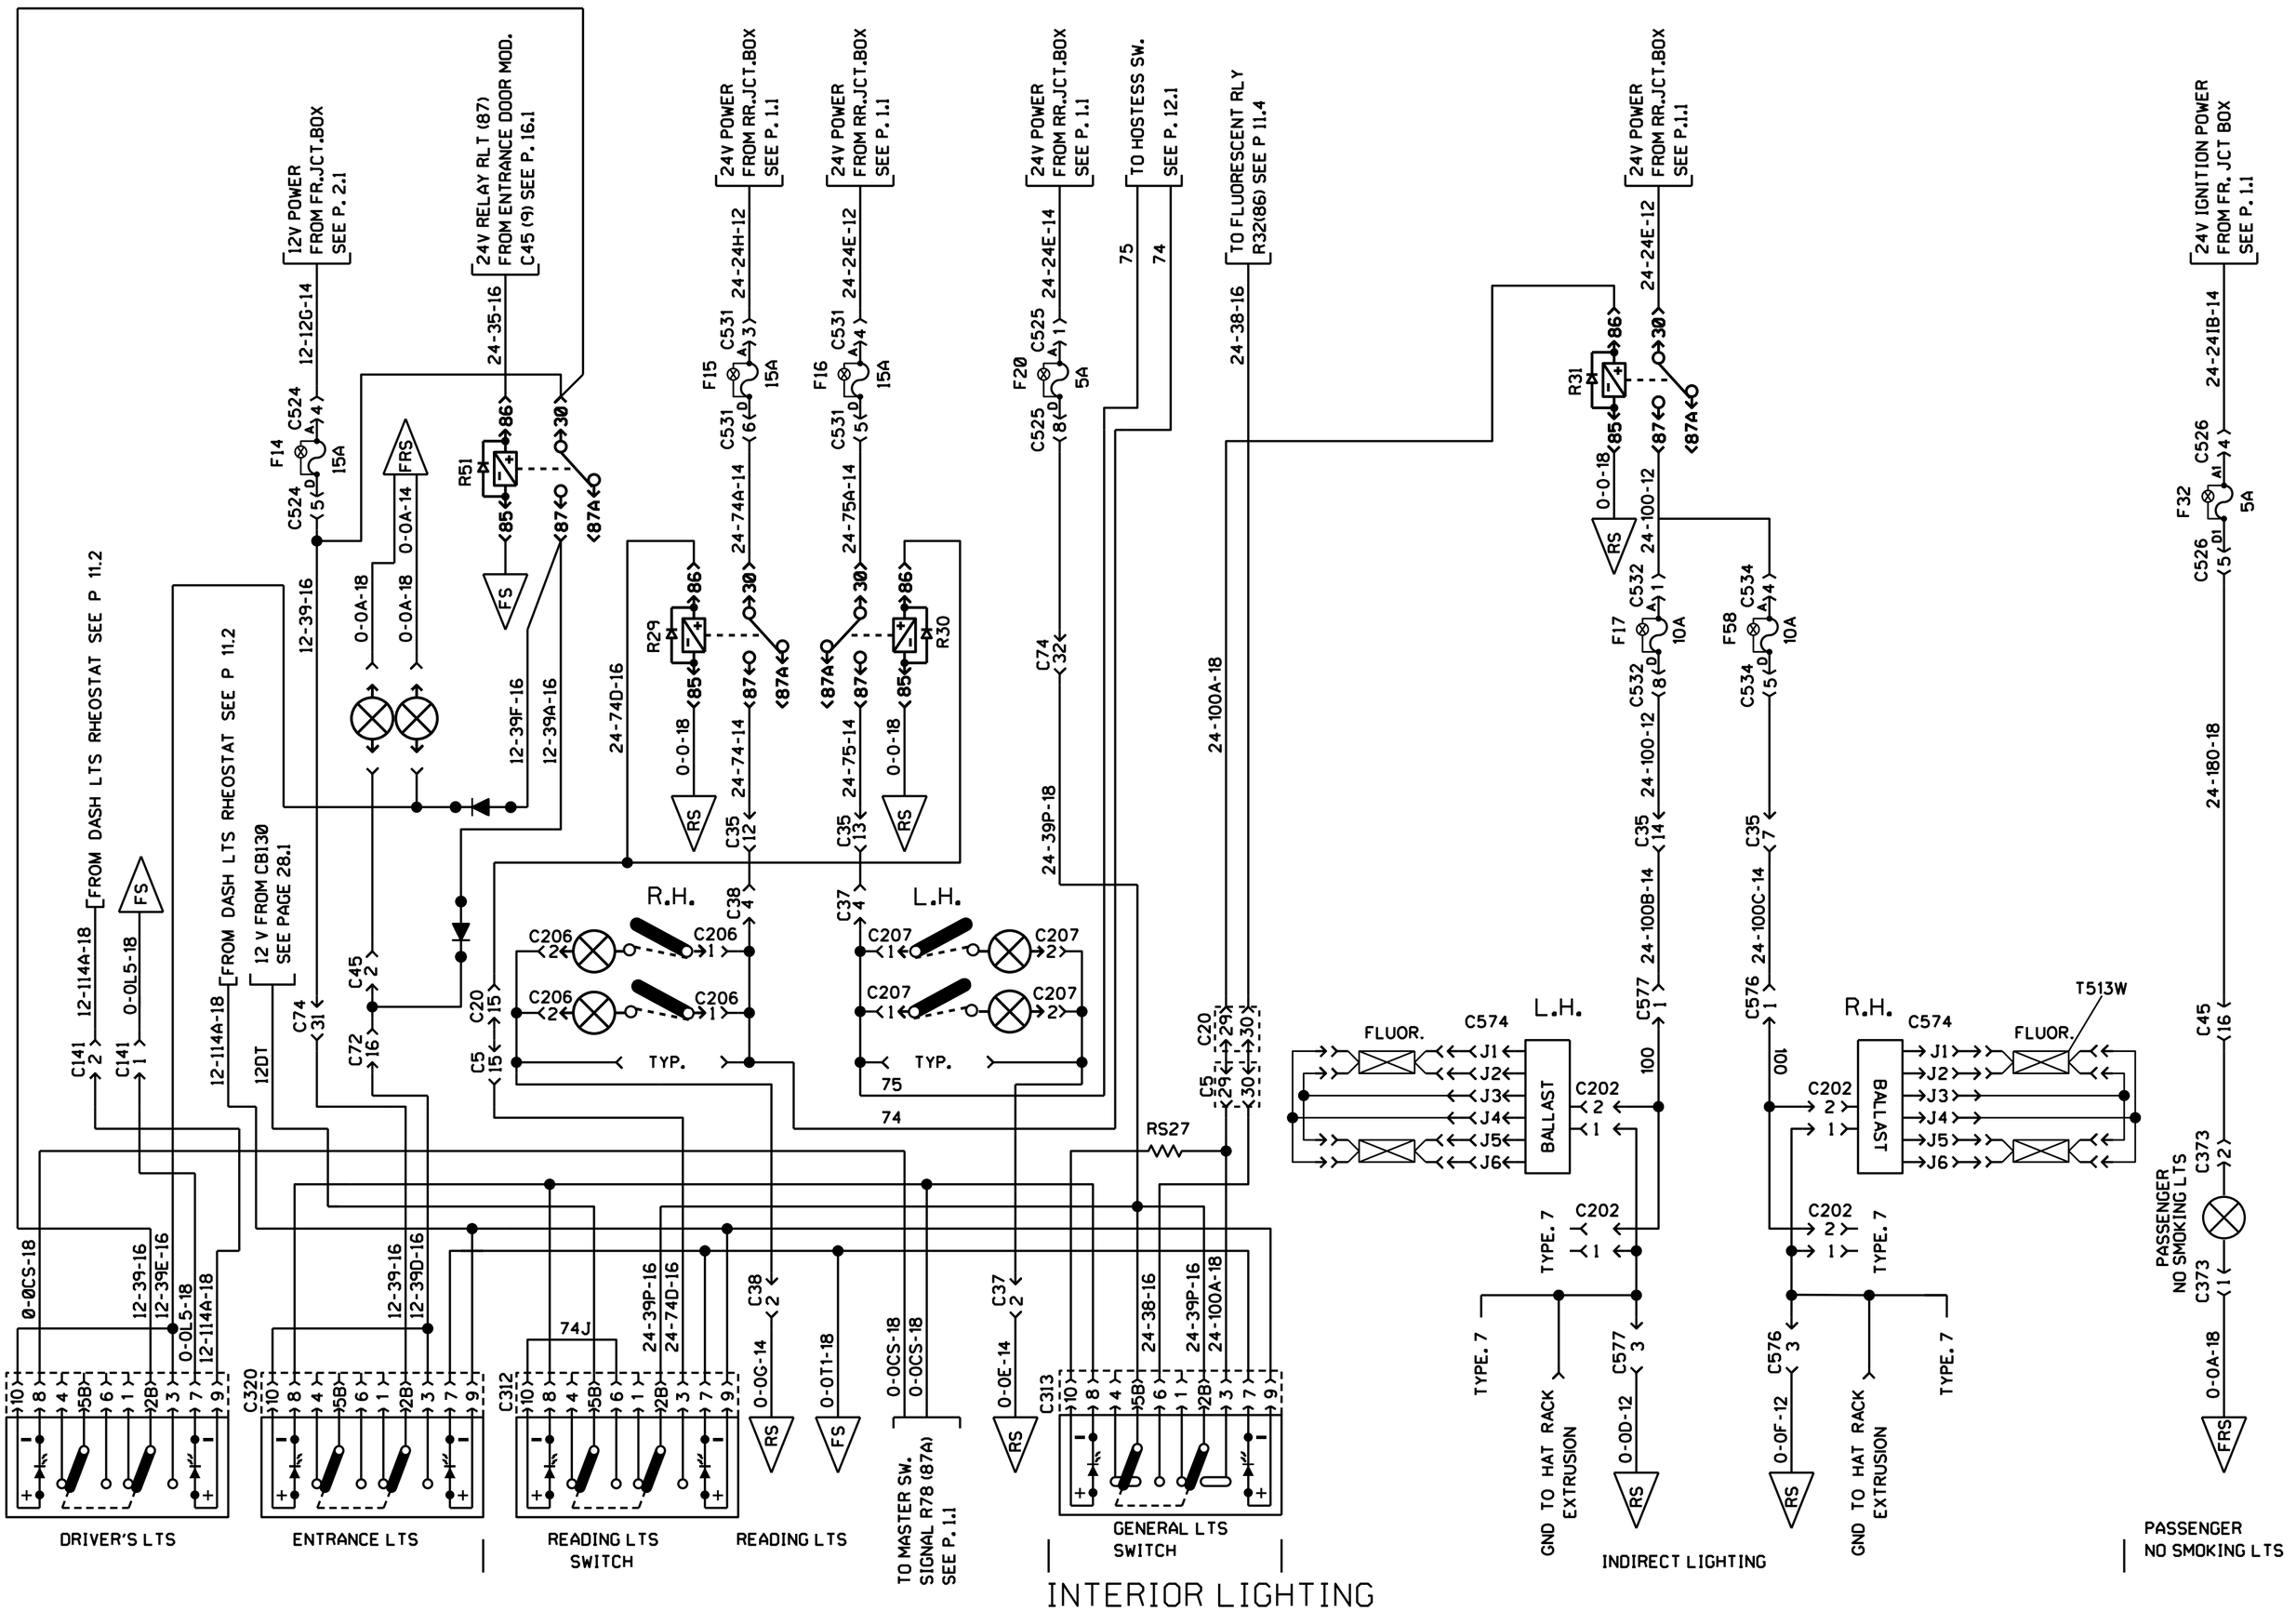


INTERIOR LIGHTING

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 11.3 sp1	REVISION 00

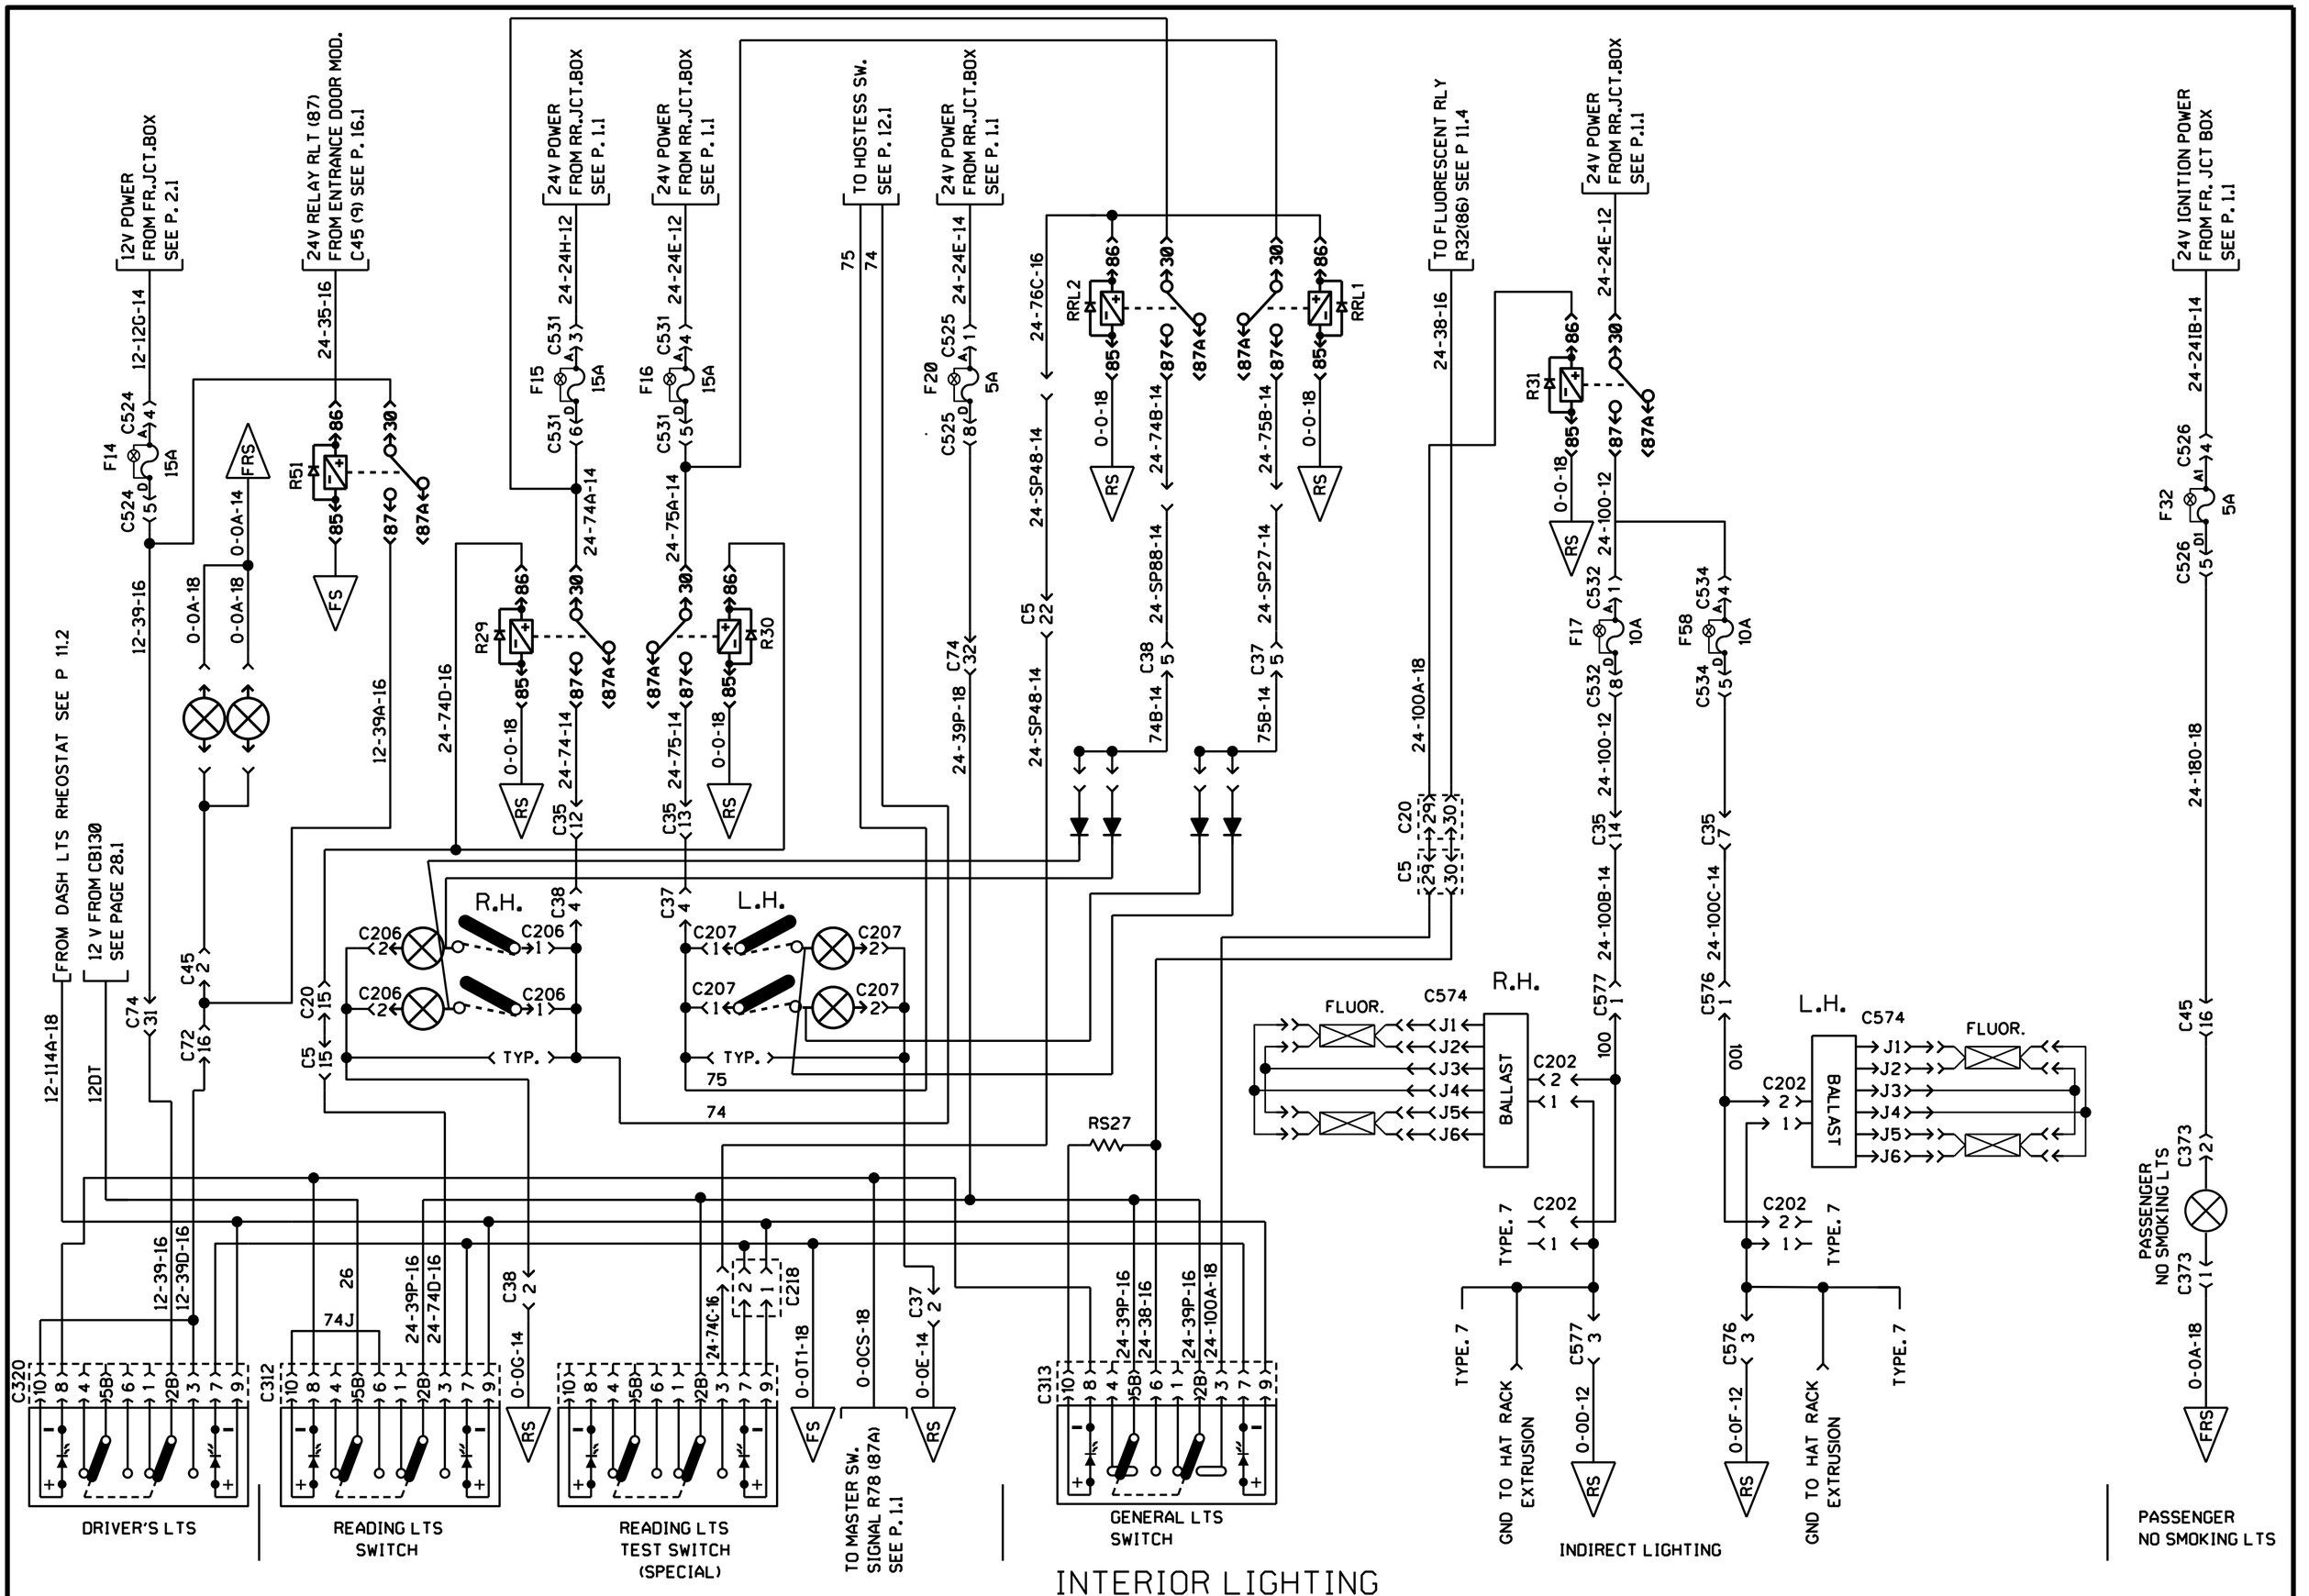


INTERIOR LIGHTING

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 11.3 sp2	REVISION 00

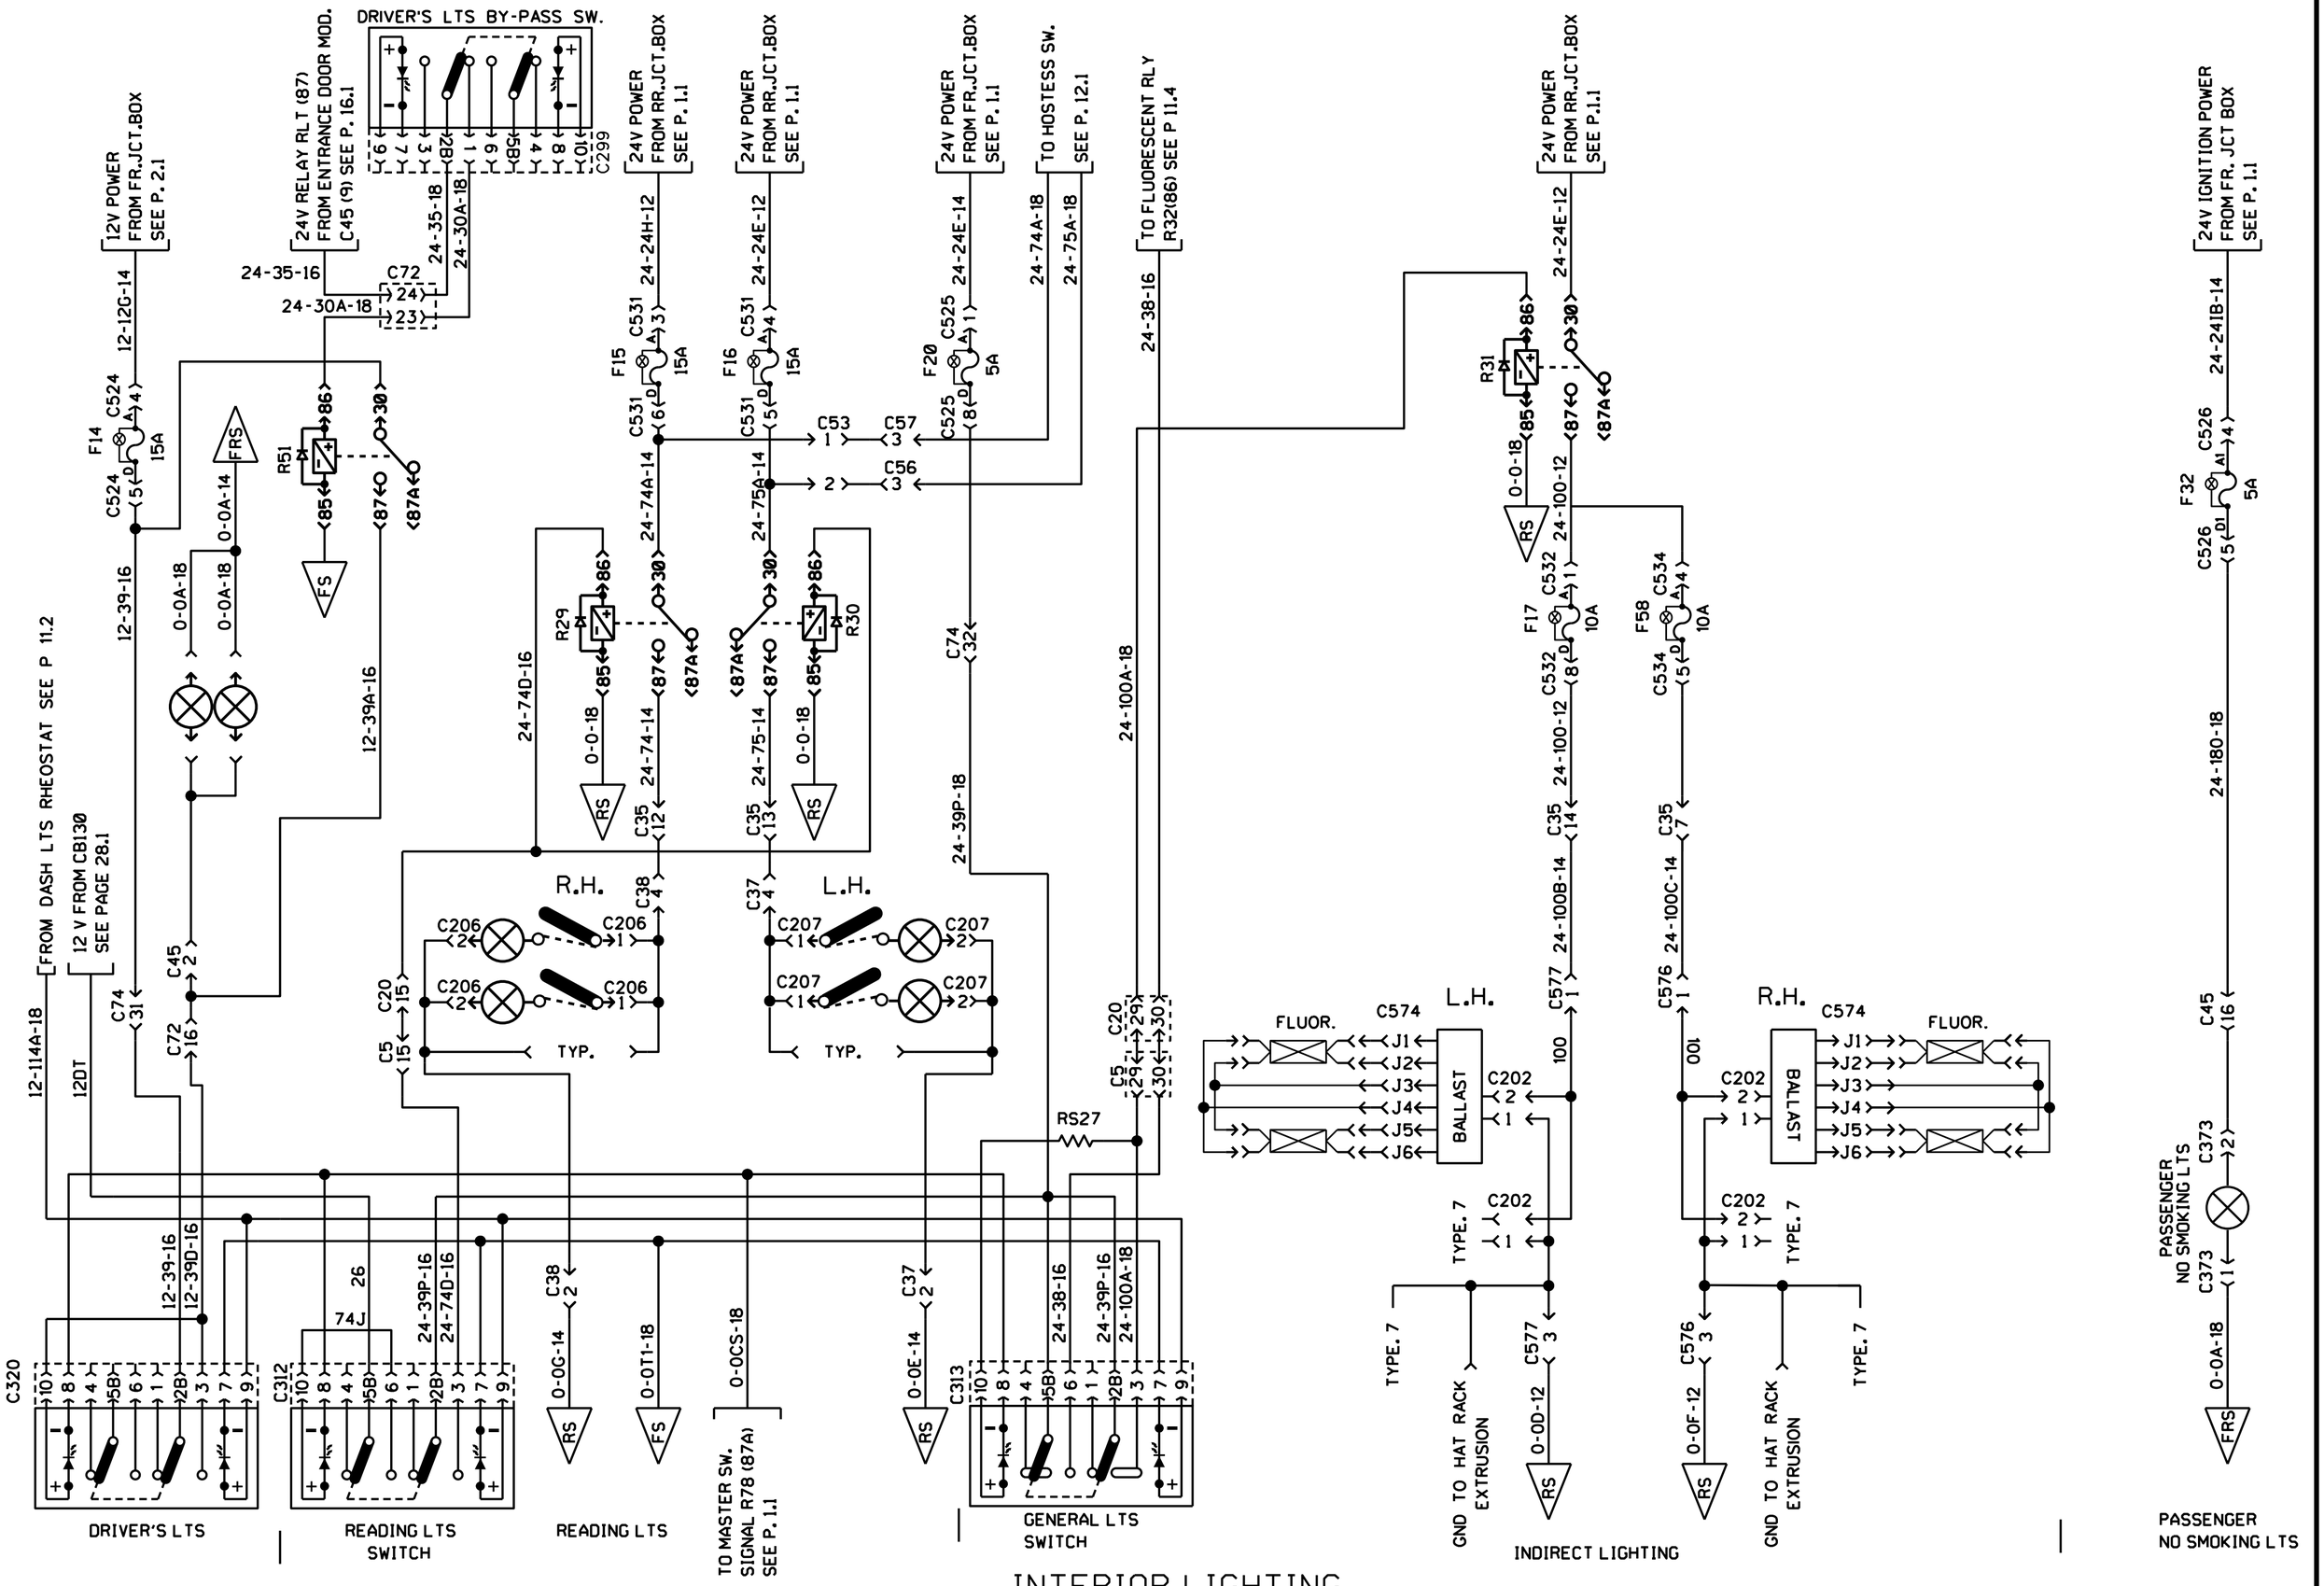


INTERIOR LIGHTING

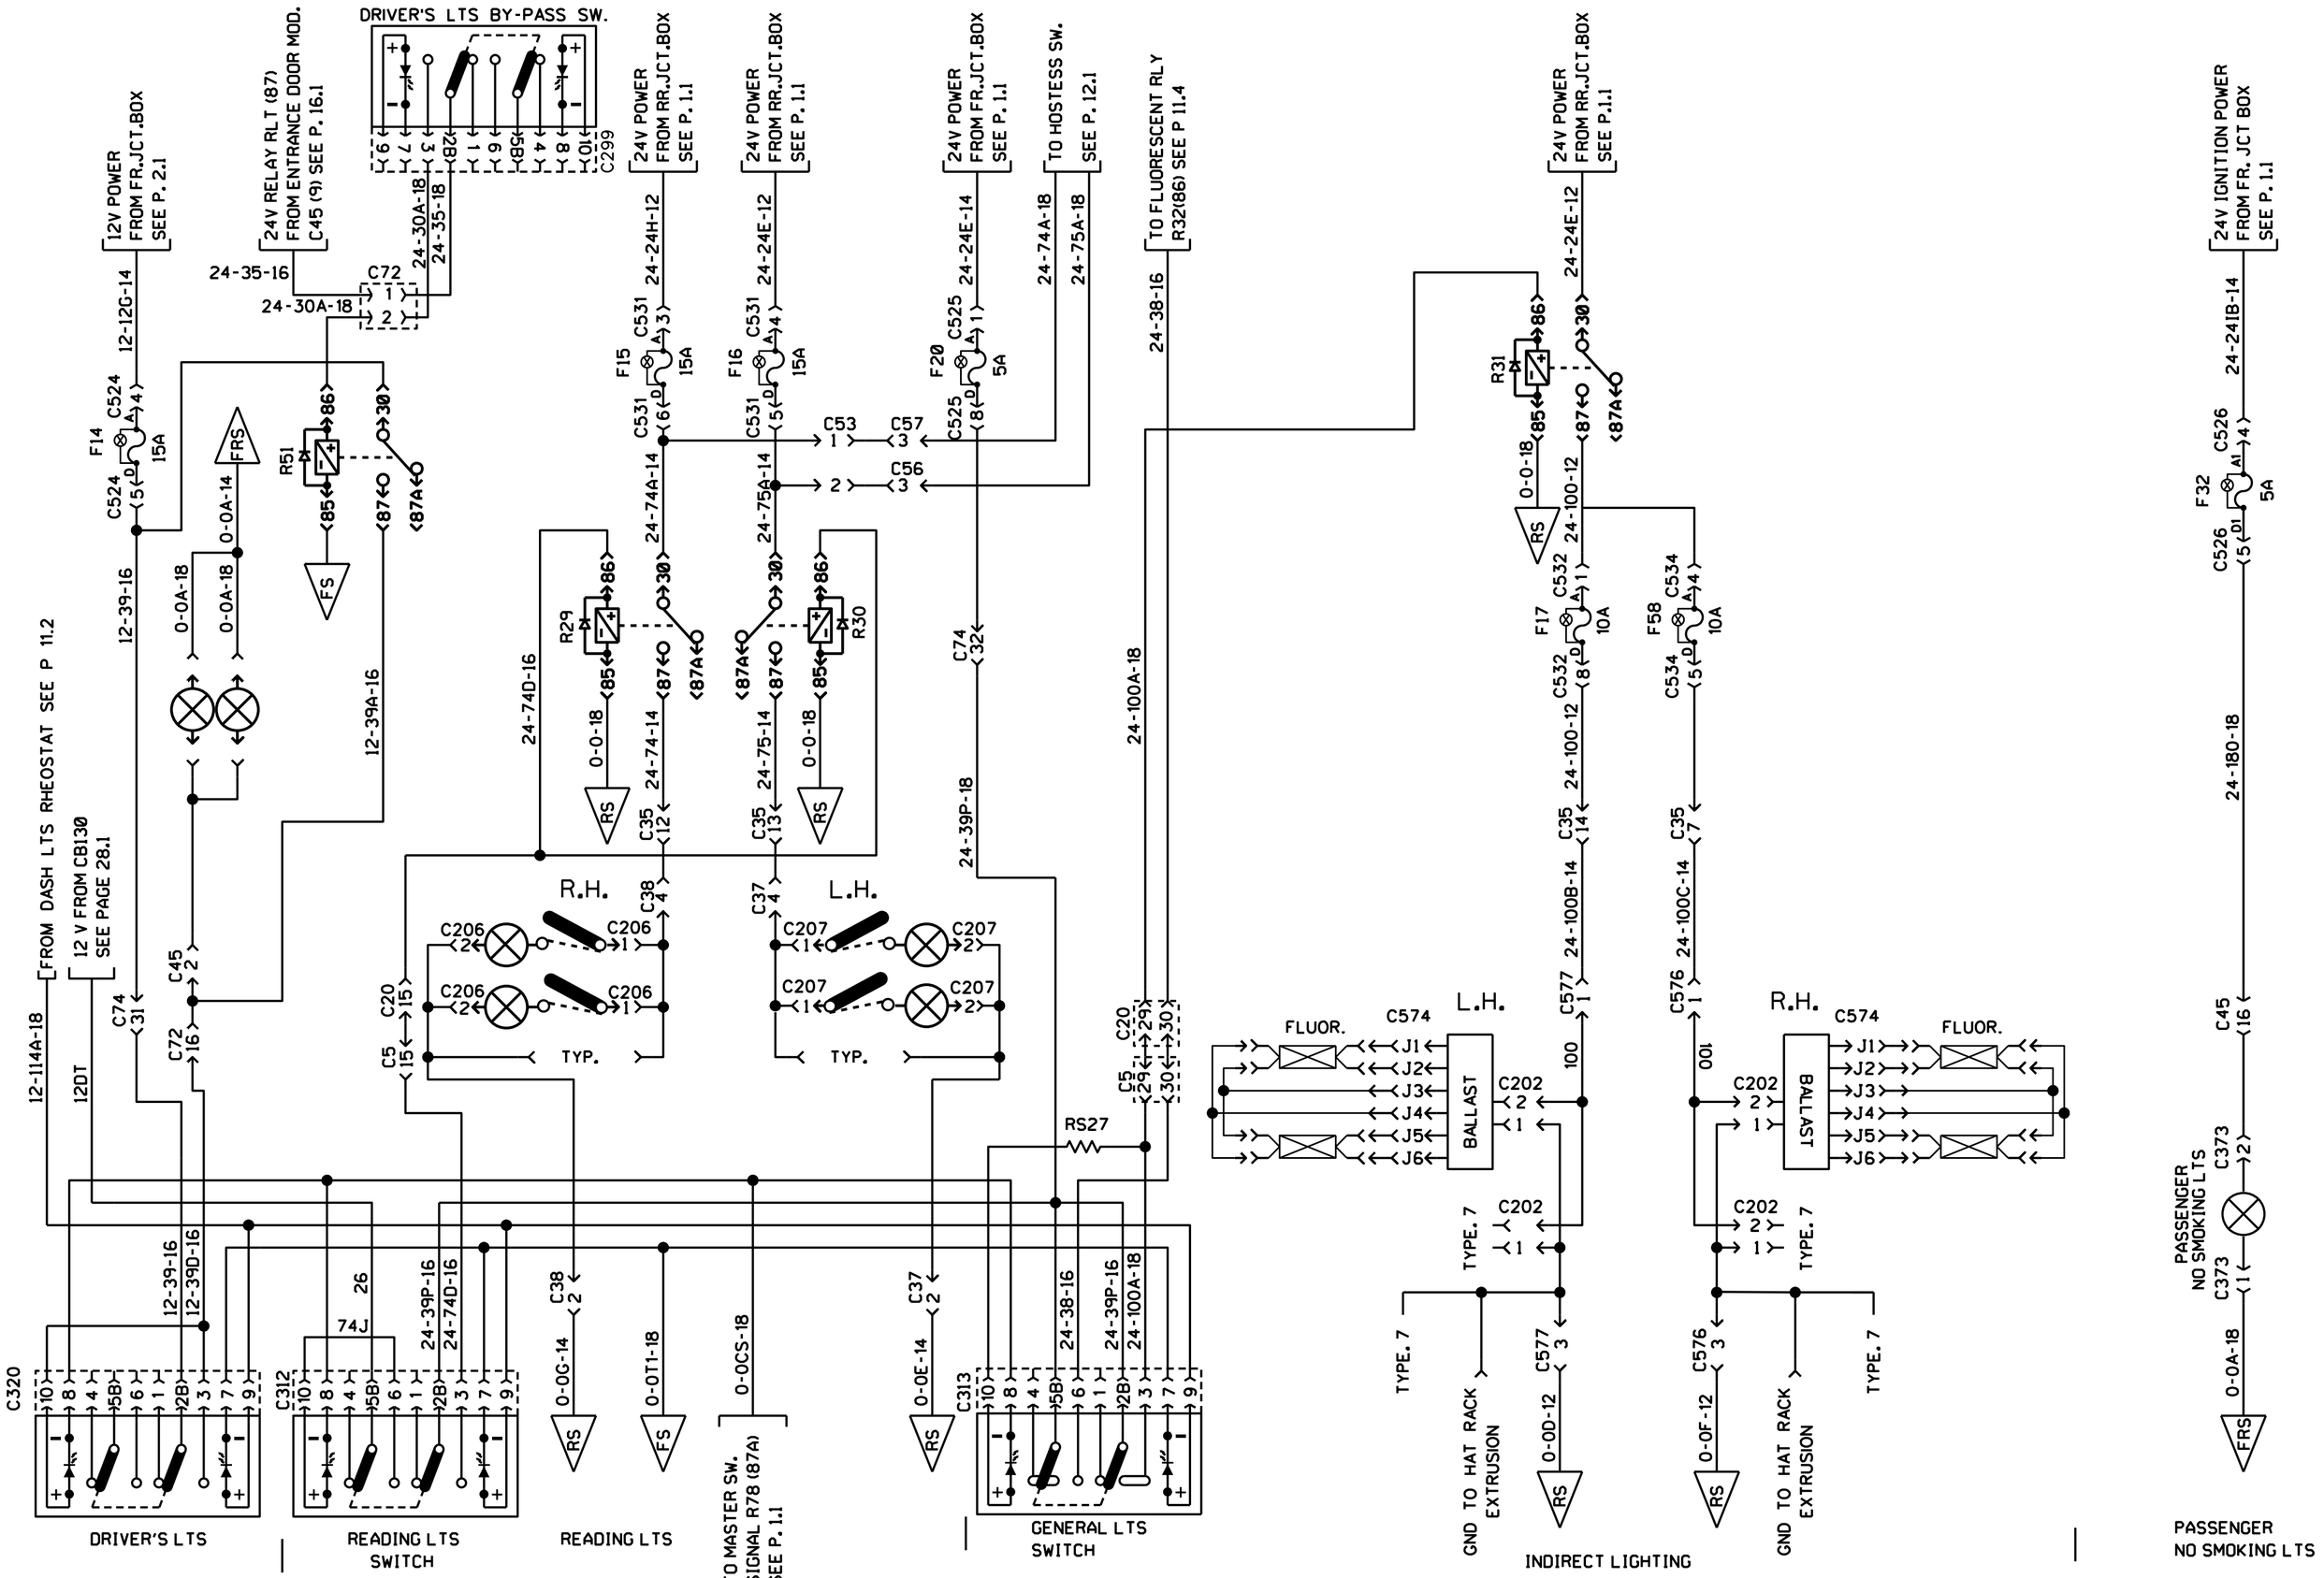

INTERIOR LIGHTING

DRIVER'S LTS SW. ADD. EFF. 3-4654

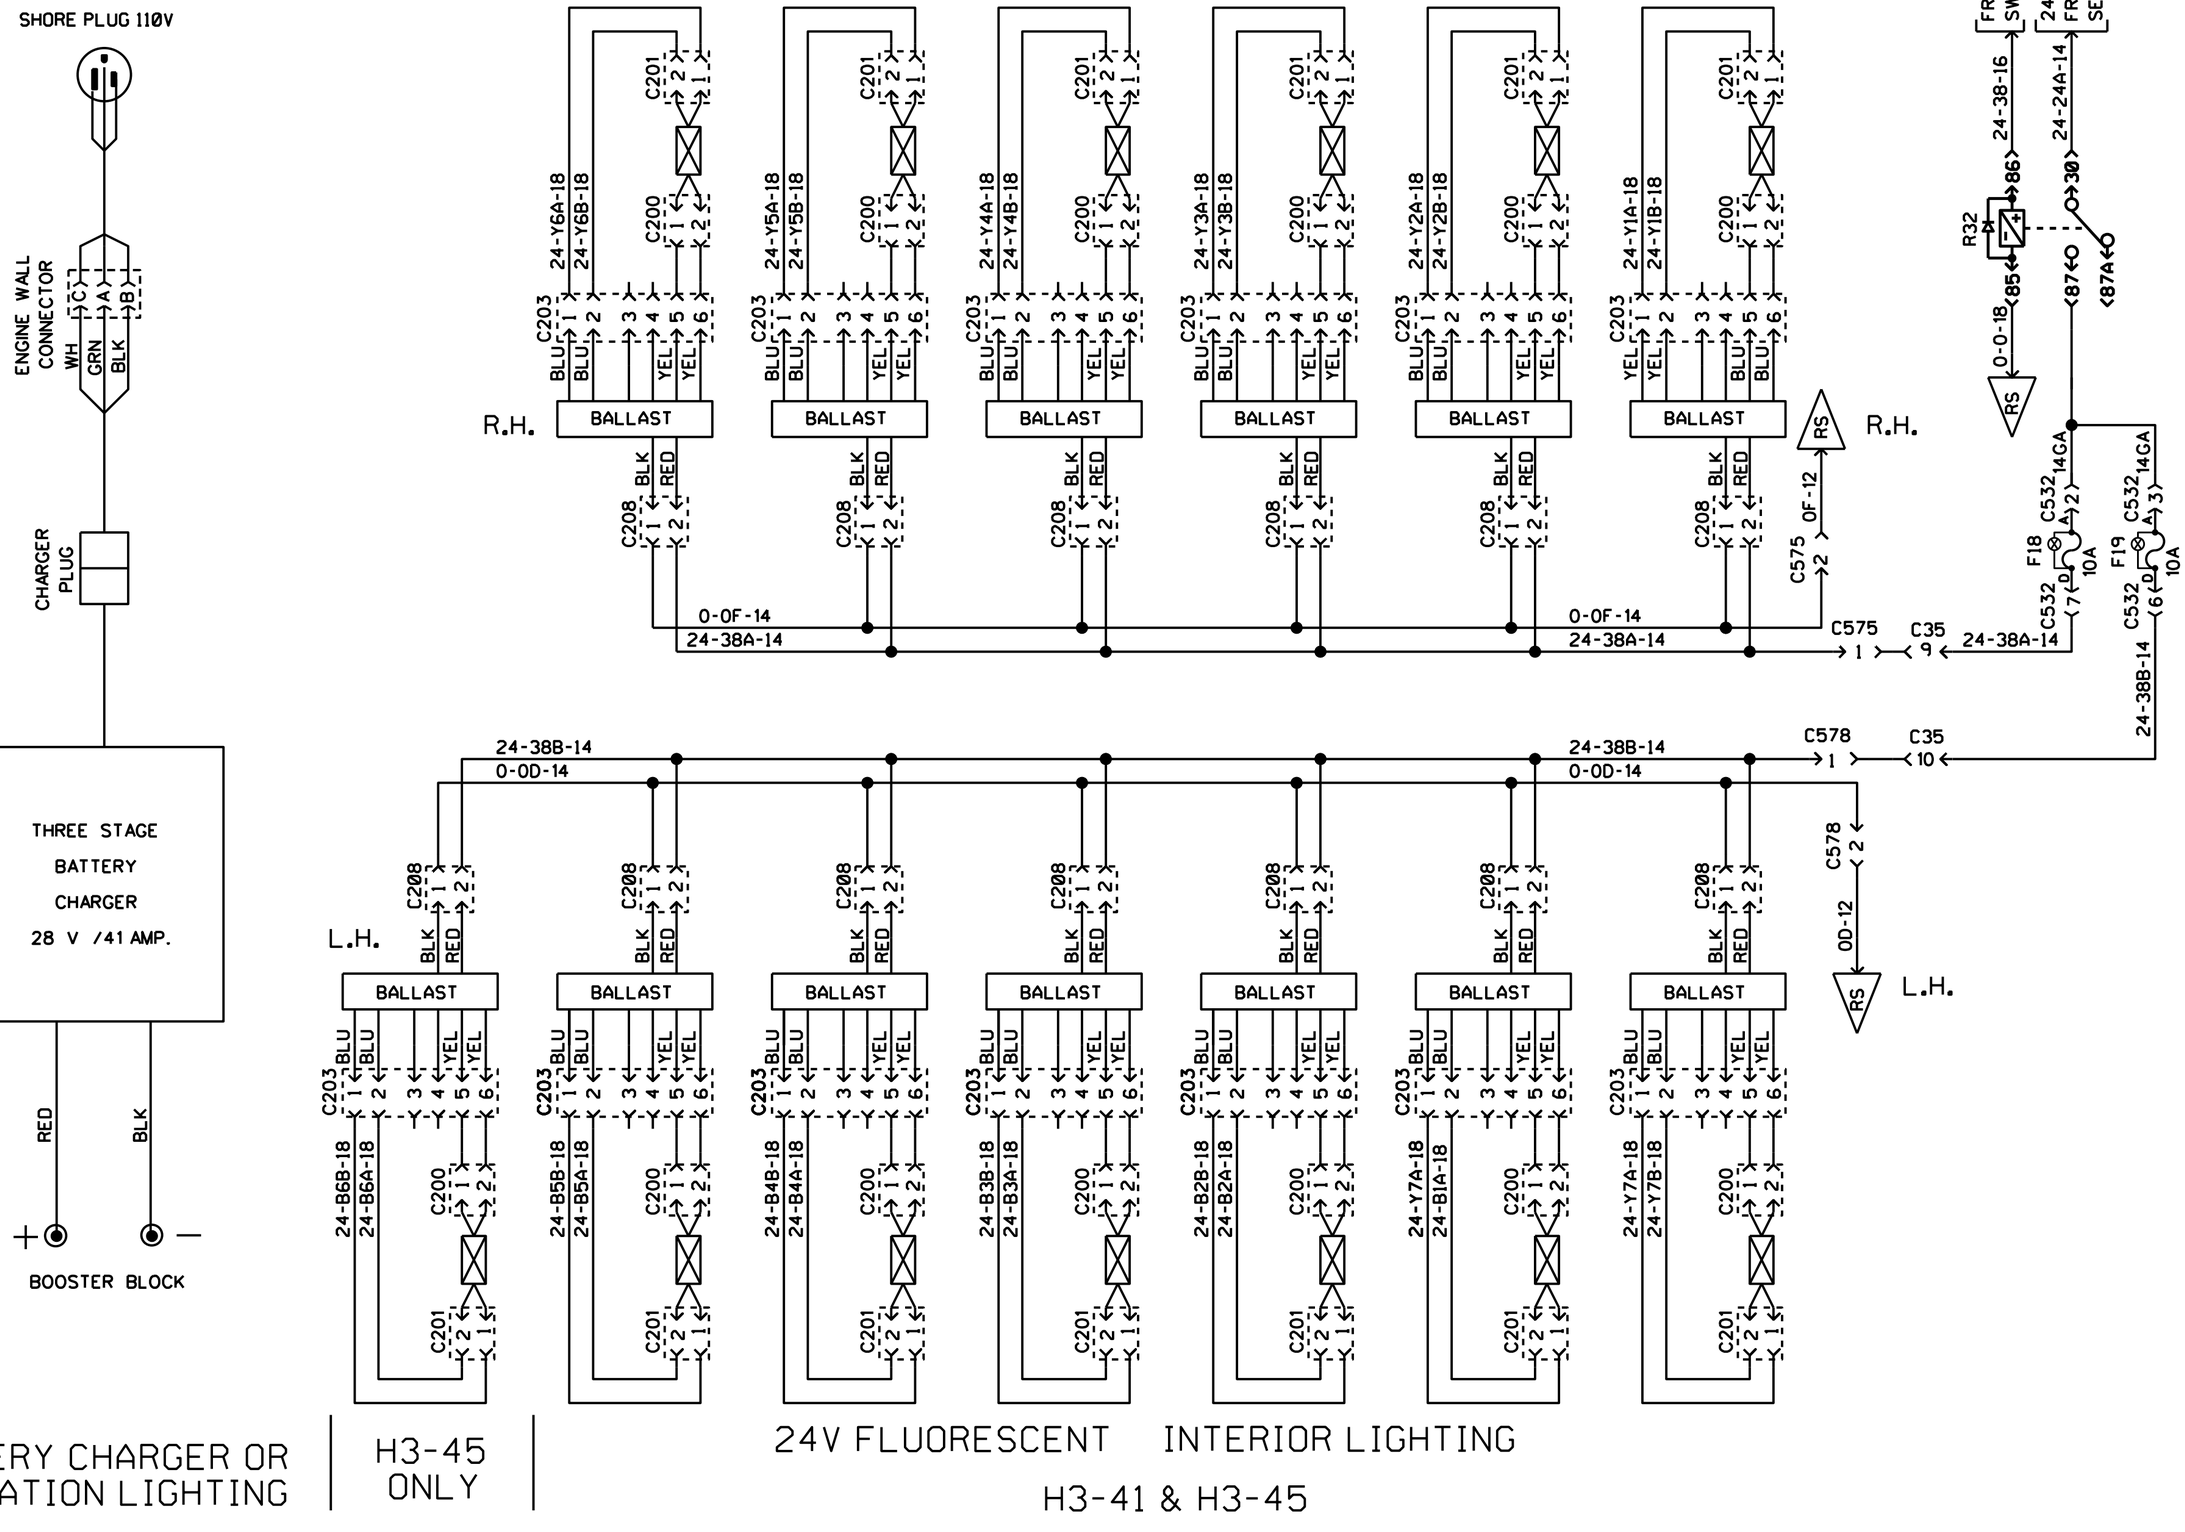



BATTERY CHARGER OR IN-STATION LIGHTING


H3-45 ONLY

24V FLUORESCENT INTERIOR LIGHTING

H3-41 & H3-45

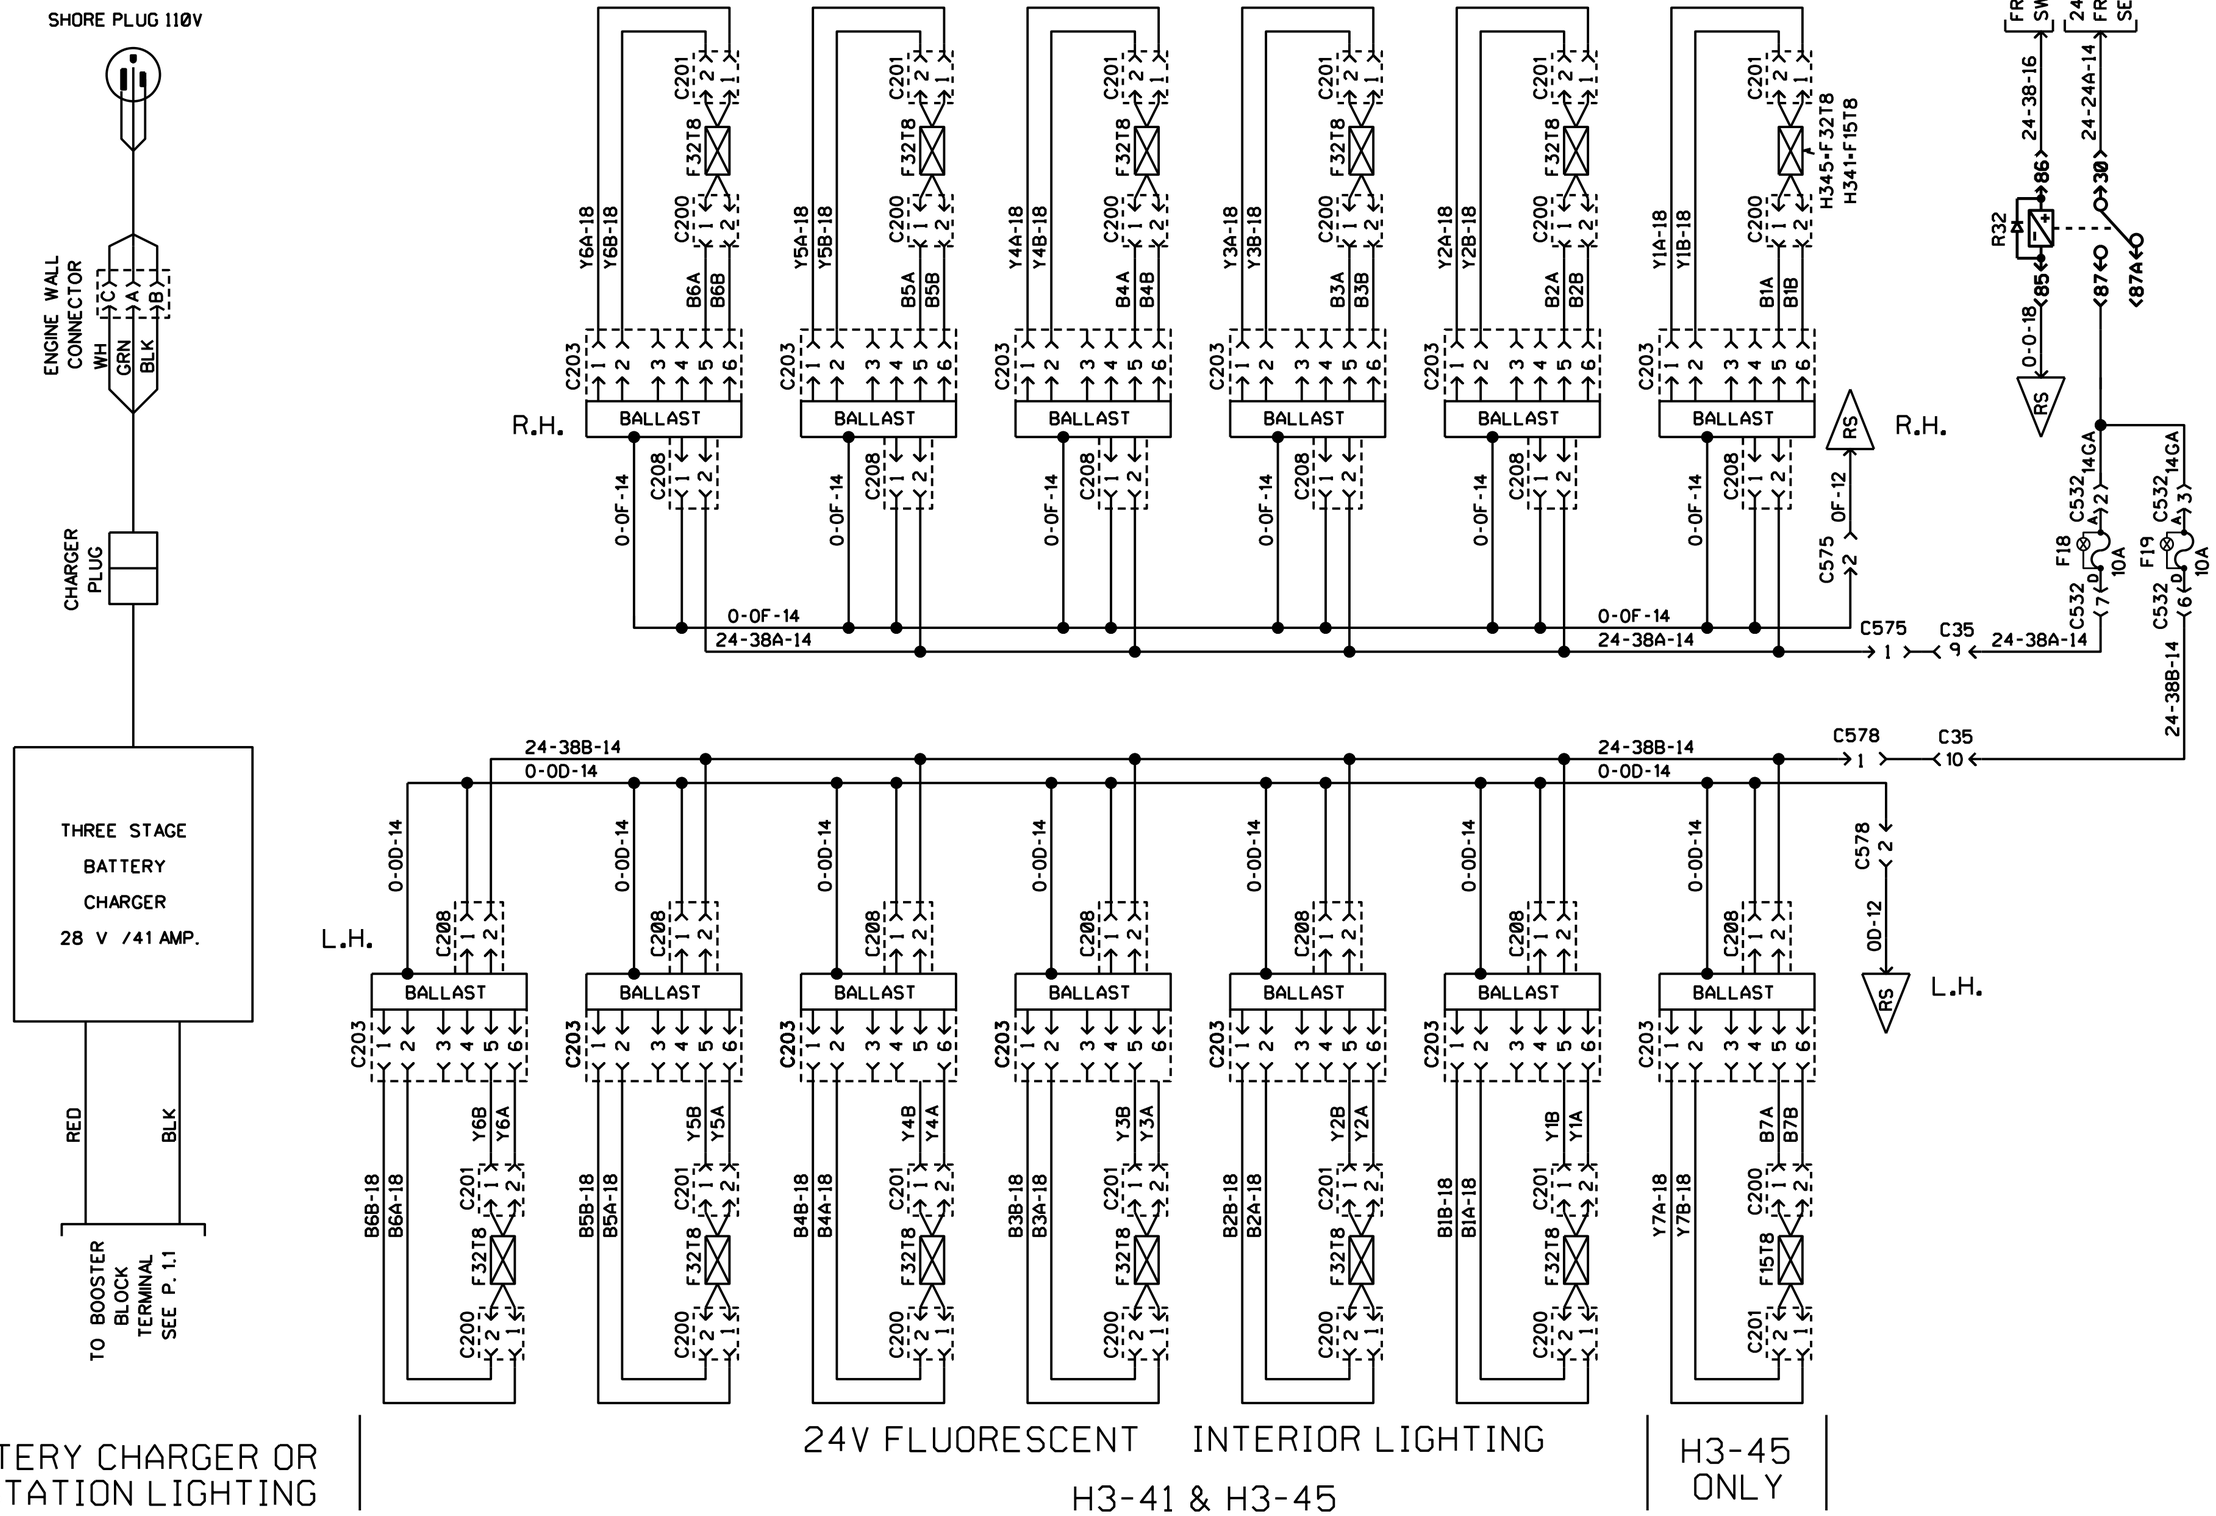

SHORE PLUG 110V
ENGINE WALL CONNECTOR
WH C
GRN A
BLK B
CHARGER PLUG
THREE STAGE BATTERY CHARGER 28 V /41 AMP.
RED
BLK
TO BOOSTER BLOCK TERMINAL SEE P. 1.1
R.H.
L.H.
BALLAST
C203
C208
C200
C201
F32T8
F15T8
H345-F32T8
H341-F15T8
Y6A-18
Y6B-18
Y5A-18
Y5B-18
Y4A-18
Y4B-18
Y3A-18
Y3B-18
Y2A-18
Y2B-18
Y1A-18
Y1B-18
B6A
B6B
B5A
B5B
B4A
B4B
B3A
B3B
B2A
B2B
B1A
B1B
B7A
B7B
Y7A-18
Y7B-18
B6B-18
B6A-18
B5B-18
B5A-18
B4B-18
B4A-18
B3B-18
B3A-18
B2B-18
B2A-18
B1B-18
B1A-18
0-0F-14
0-0D-14
24-38A-14
24-38B-14
0F-12
0D-12
C575
C578
C35
RS
FROM GENERAL LTS SWITCH SEE P 11.3
24V POWER FROM RR.JCT.BOX SEE P. 1.1
24-38-16
24-24A-14
0-0-18
R32
86
85
87
30
87A
F18
F19
10A
C532
14GA
BATTERY CHARGER OR IN-STATION LIGHTING
24V FLUORESCENT INTERIOR LIGHTING
H3-41 & H3-45
H3-45 ONLY

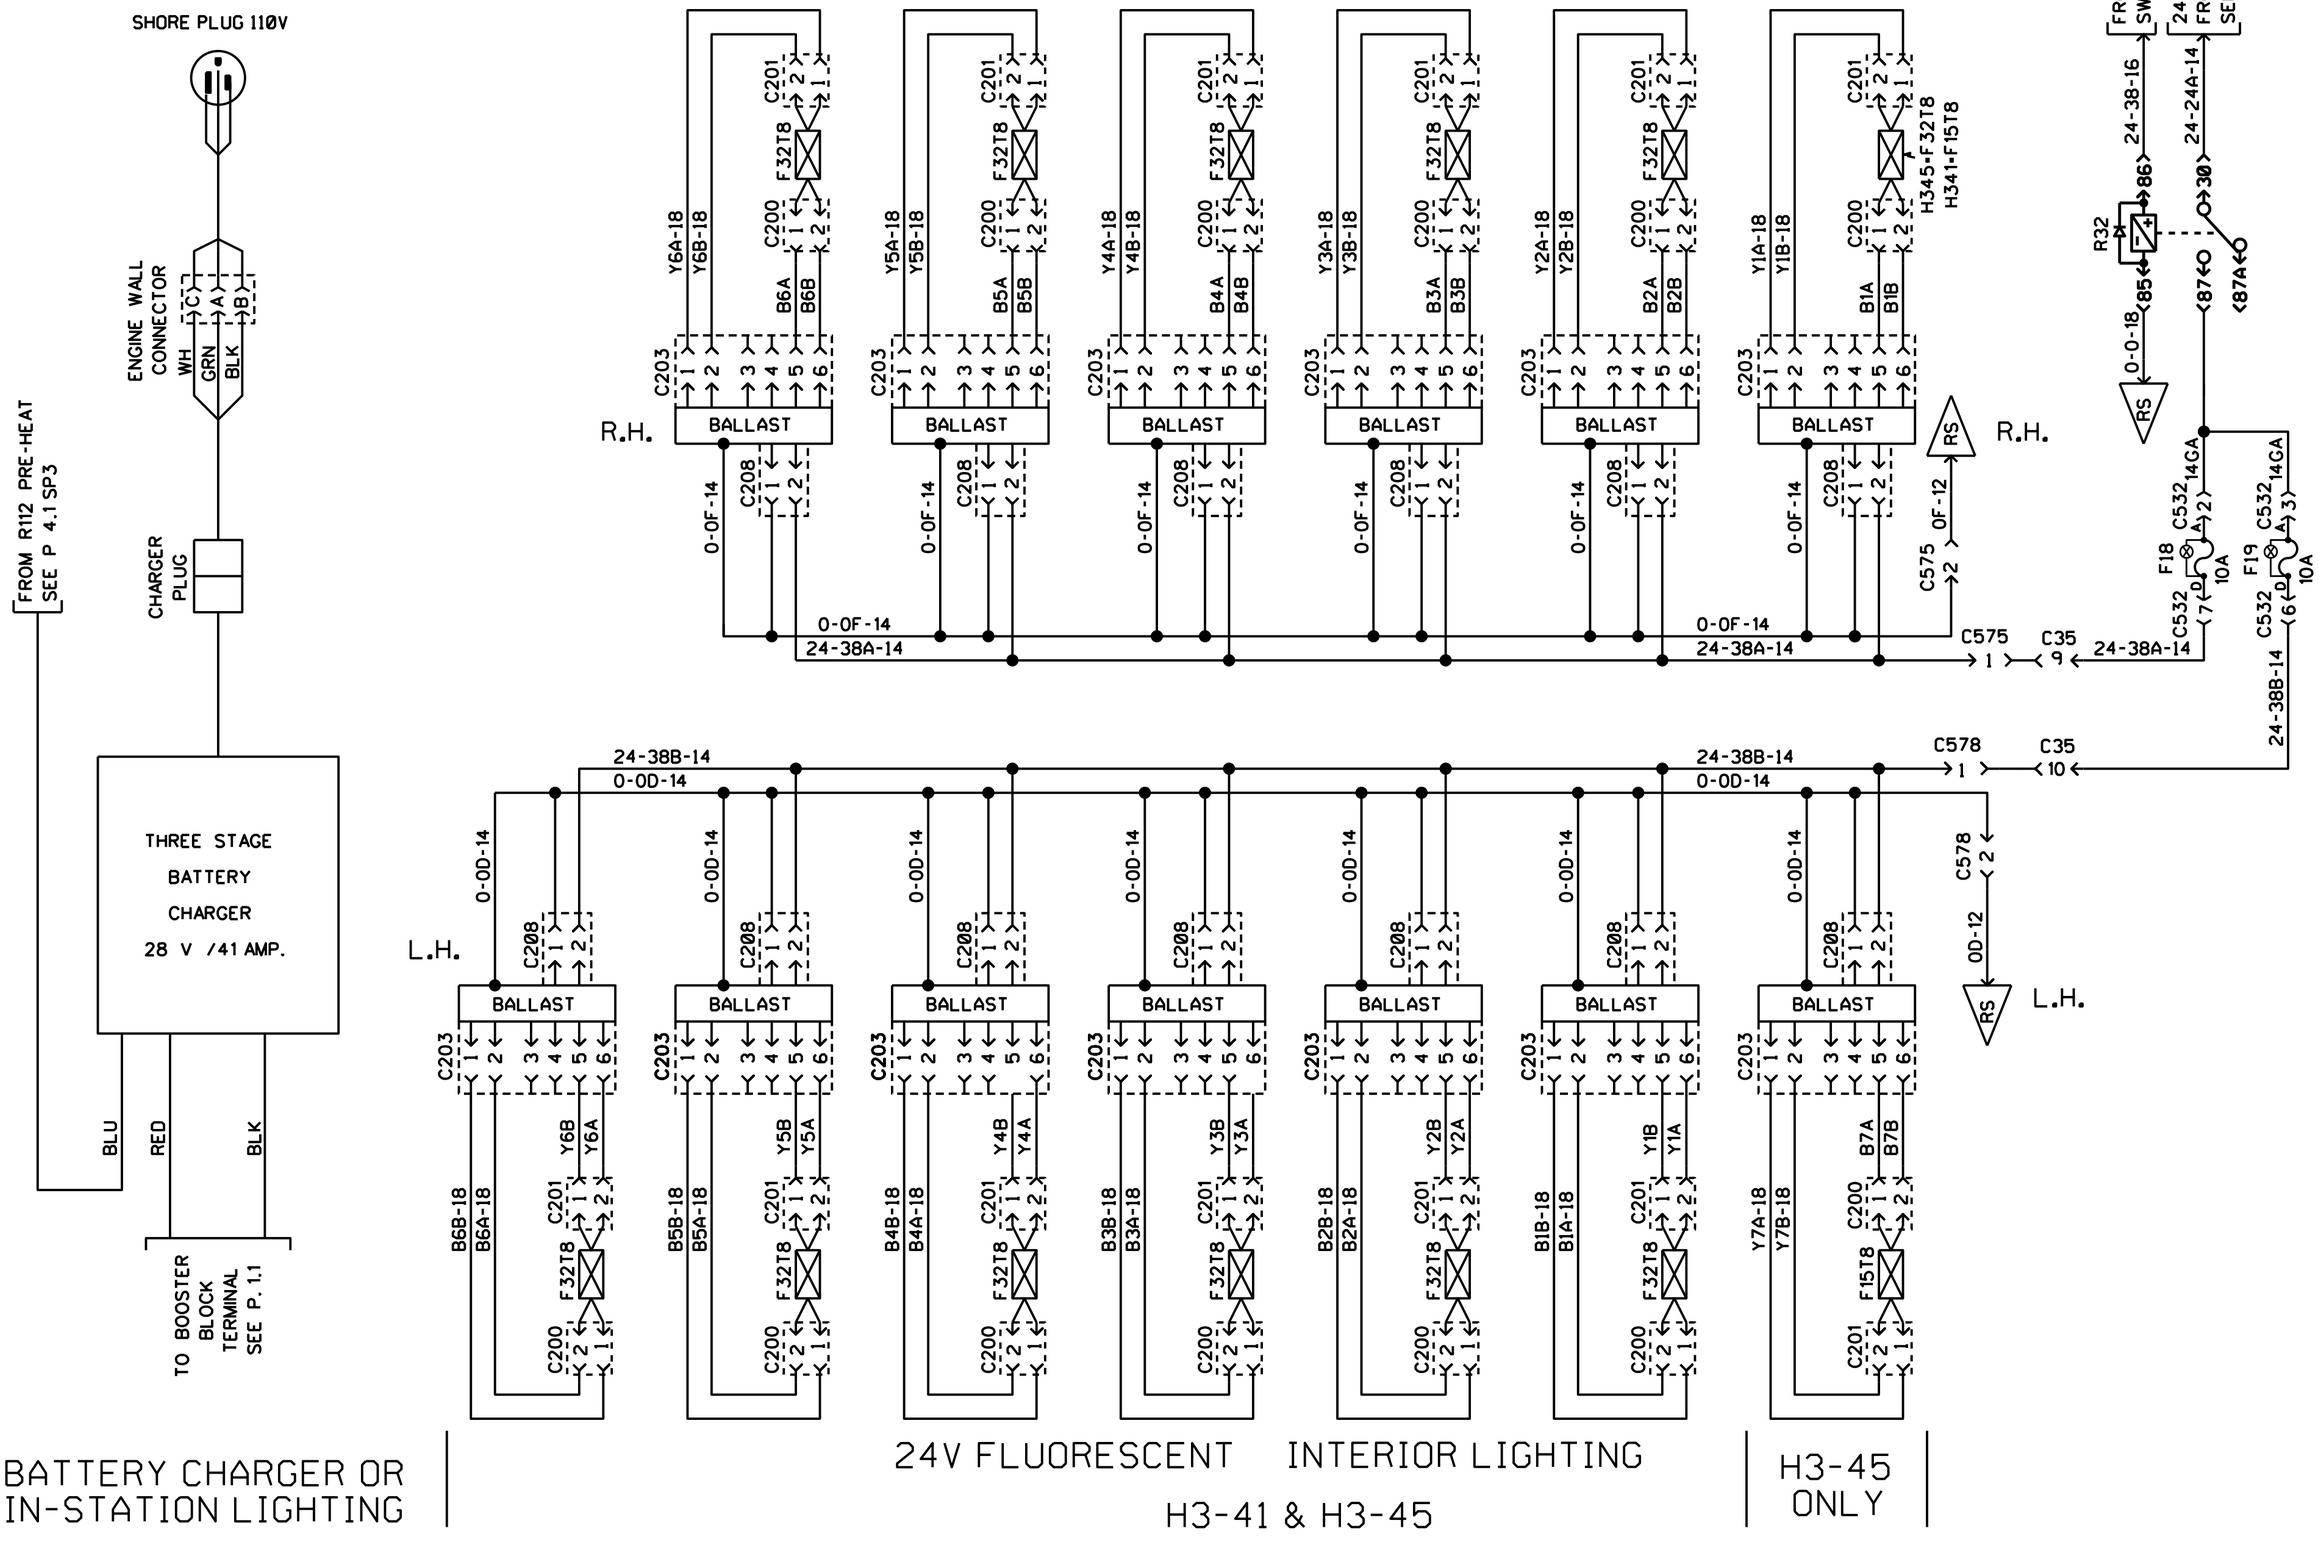
SHORE PLUG 110V
ENGINE WALL CONNECTOR
WH
GRN
BLK
C
A
B
CHARGER PLUG
FROM R112 PRE-HEAT
SEE P 4.1 SP3
THREE STAGE
BATTERY
CHARGER
28 V /41 AMP.
BLU
RED
BLK
TO BOOSTER BLOCK TERMINAL SEE P. 1.1
R.H.
L.H.
BALLAST
C203
C208
C200
C201
F32T8
F15T8
H345-F32T8
H341-F15T8
Y6A-18
Y6B-18
Y5A-18
Y5B-18
Y4A-18
Y4B-18
Y3A-18
Y3B-18
Y2A-18
Y2B-18
Y1A-18
Y1B-18
B6A
B6B
B5A
B5B
B4A
B4B
B3A
B3B
B2A
B2B
B1A
B1B
B6B-18
B6A-18
B5B-18
B5A-18
B4B-18
B4A-18
B3B-18
B3A-18
B2B-18
B2A-18
B1B-18
B1A-18
Y7A-18
Y7B-18
B7A
B7B
0-0F-14
0-0D-14
24-38A-14
24-38B-14
0F-12
0D-12
C575
C578
C35
RS
FROM GENERAL LTS SWITCH SEE P 11.3
24V POWER FROM RR.JCT.BOX SEE P. 1.1
24-38-16
24-24A-14
0-0-18
R32
86
85
87
30
87A
F18
F19
10A
C532
14GA
24-38A-14
24-38B-14
BATTERY CHARGER OR IN-STATION LIGHTING
24V FLUORESCENT INTERIOR LIGHTING
H3-41 & H3-45
H3-45 ONLY

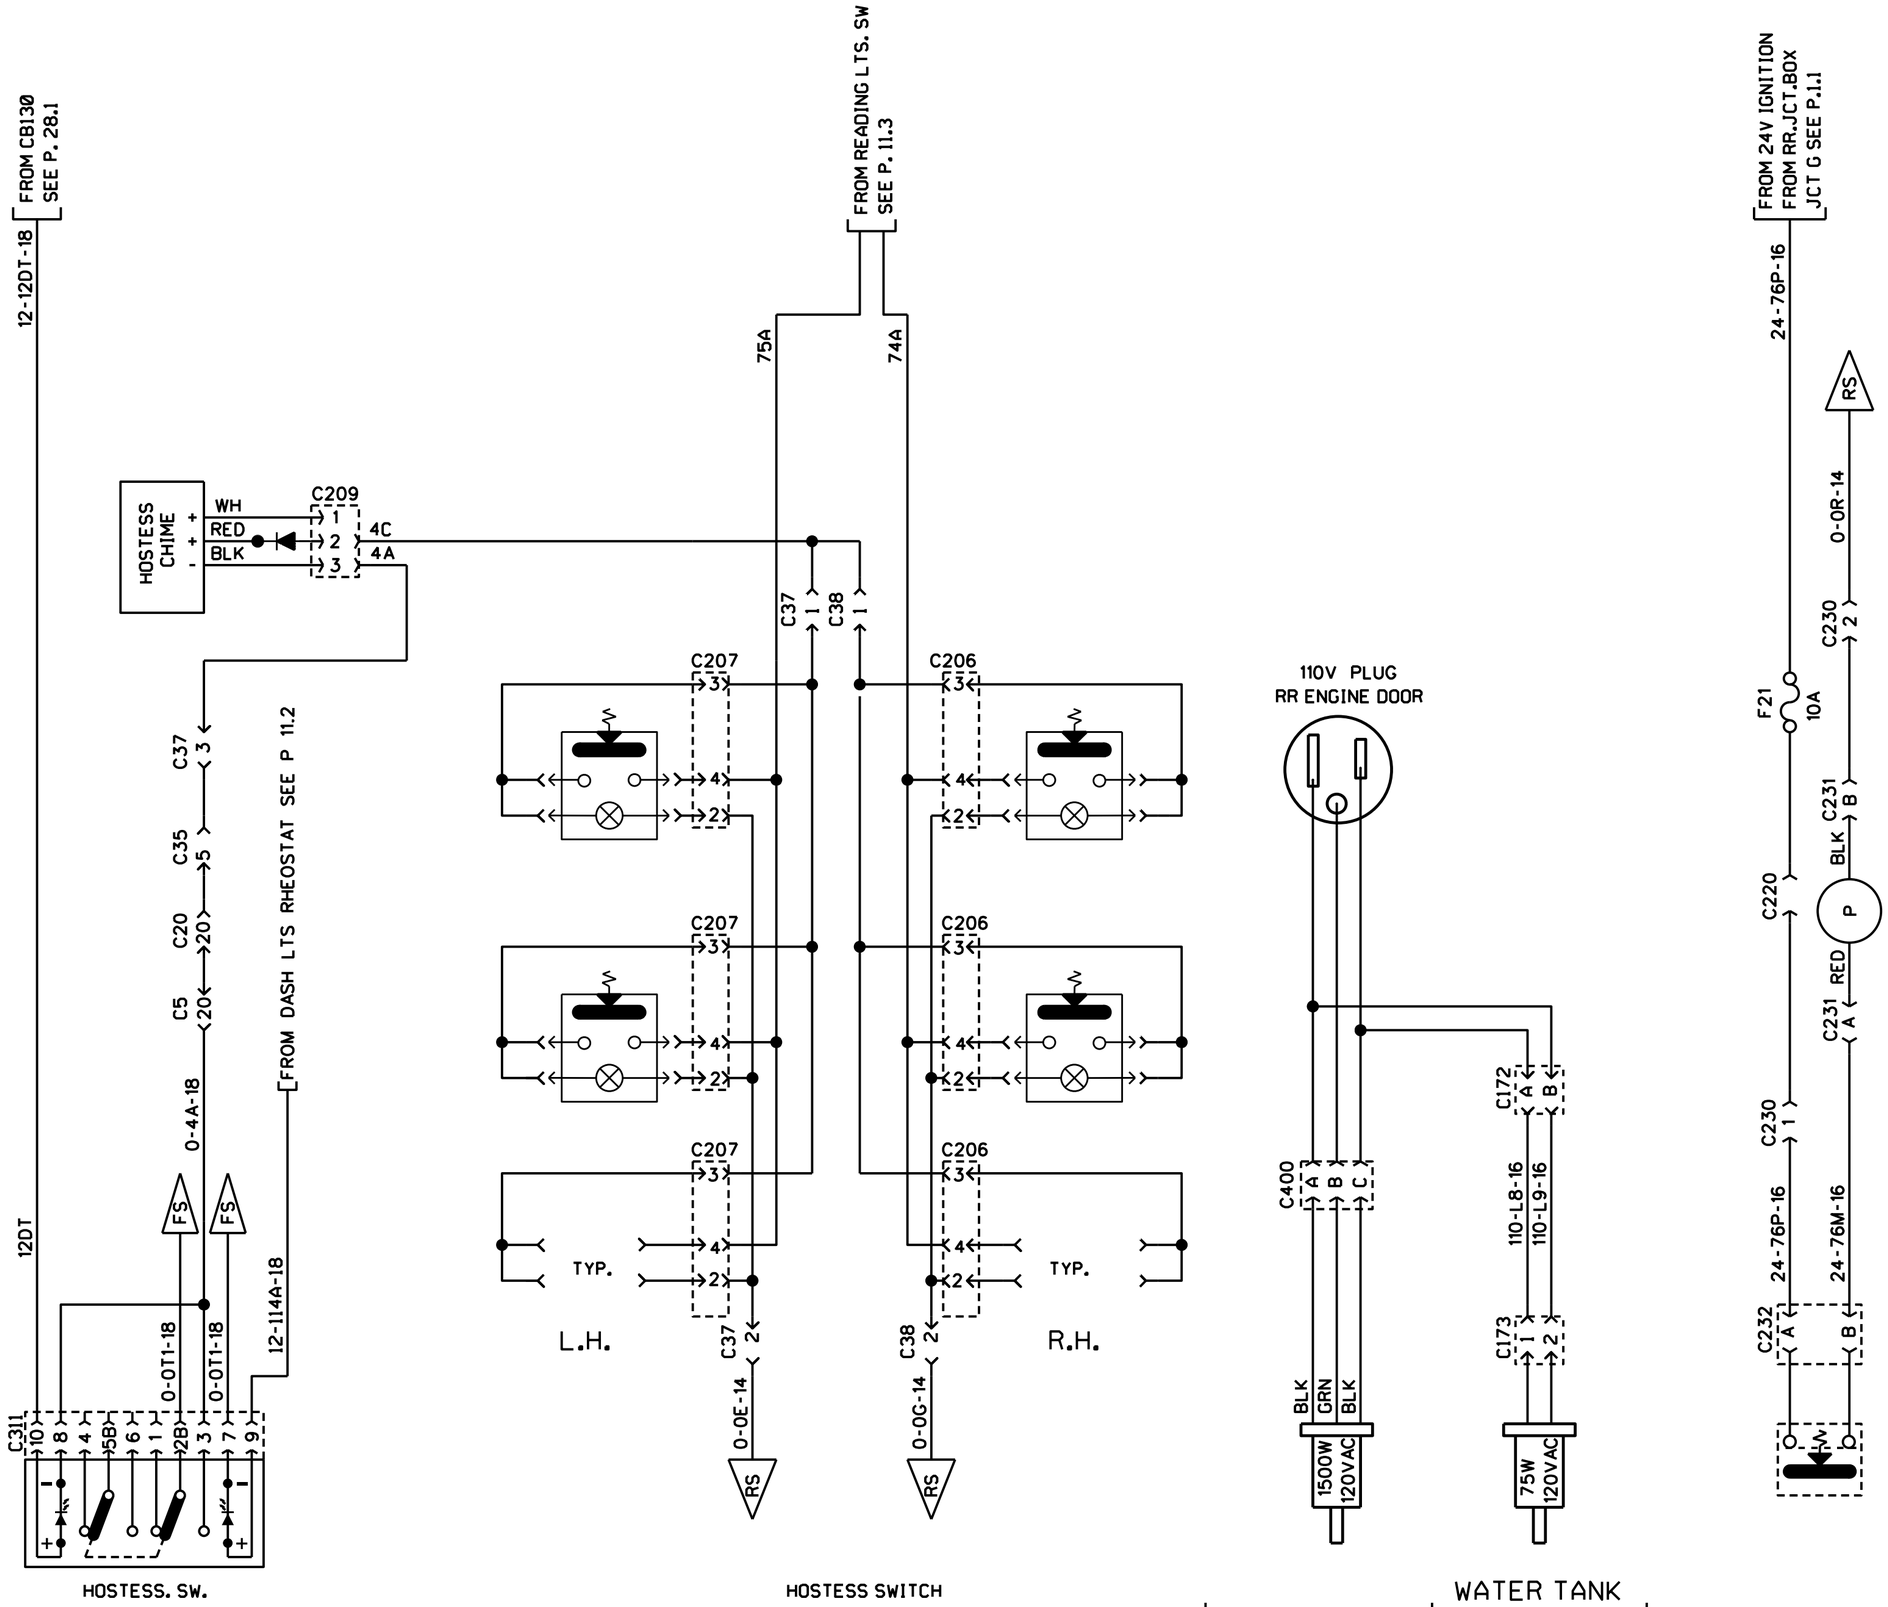


HOSTESS CHIME

ENGINE BLOCK HEATER | WATER TANK HEATER LAVATORY | FUEL PRIME PUMP

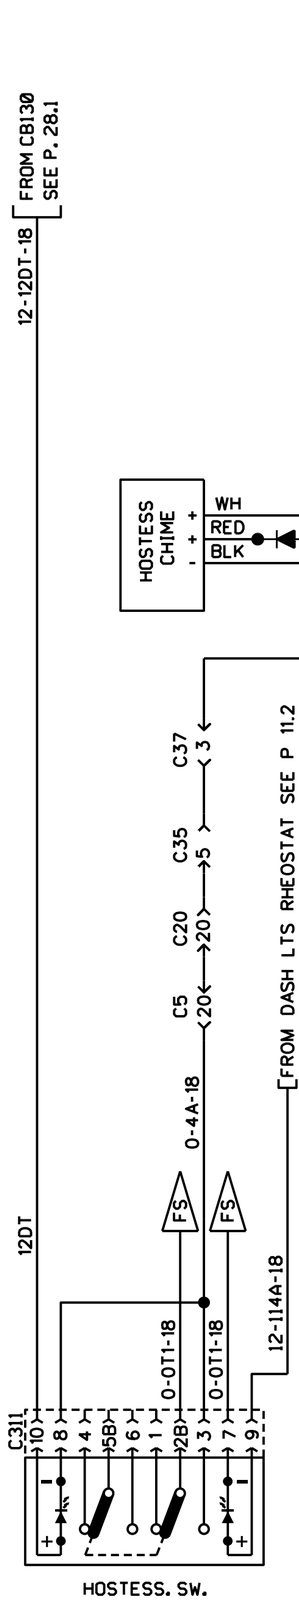


HOSTESS. SW.

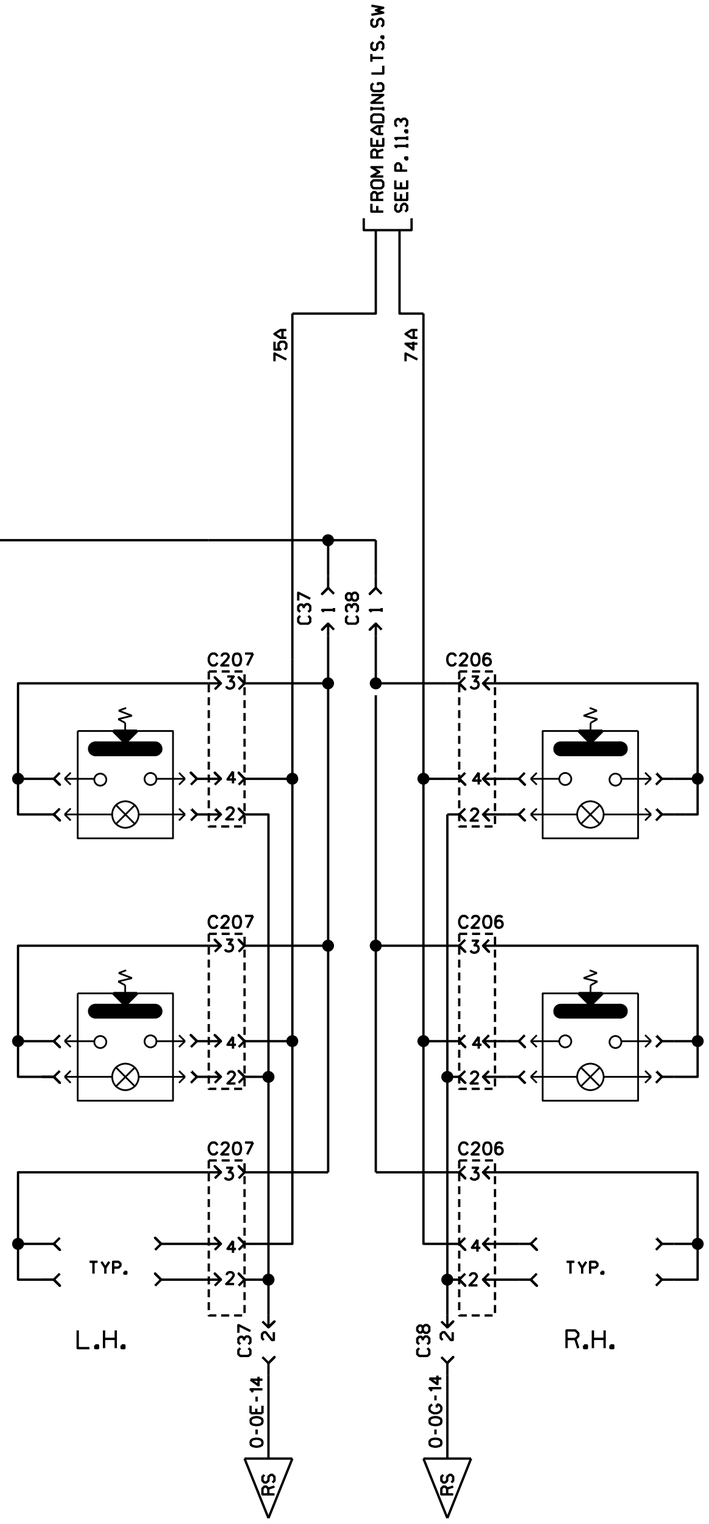


HOSTESS SWITCH

HOSTESS CHIME

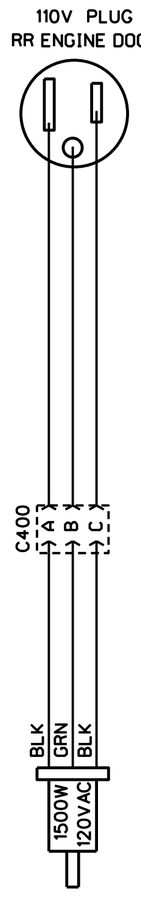

ENGINE BLOCK HEATER

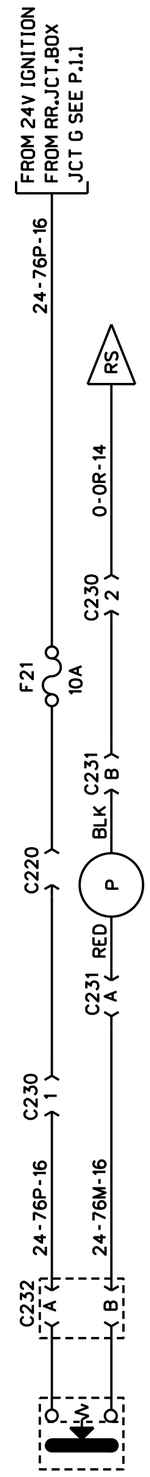

FUEL PRIME PUMP

HVAC DASH CONTROL

IN | HVAC DASH MODULE | OUT

C539 | C540 | C140

FBG 0-00A-18
FS 0-0T2-16
12V POWER FROM FR JCT BOX SEE P. 2.1 — CB58 6A — 12-29H-16 — C74 35 — 12-12K-14
24V POWER FROM FR JCT BOX CB35 SEE P. 9.3 — 24-44C-16
12 V. ENGINE RUN FROM ALT. MODULE SEE P. 4.2 — 12-25D-20
ENTRANCE DOOR OPEN SIGN FROM C4(21) SEE P. 16.1 — 24-12W-18
12 VOLTS IGNITION FROM FR JCT BOX CB28 SEE P. 7.1 — 12-12H-18
N.C. MAGNETIC SWITCH CENTRAL POS. - OPEN — C599 — 12-69-18
INSIDE TEMP. SENSOR — C474 YEL 181B-18 (WHT) BLK 181A-18 (BLK)
OUTSIDE TEMP. SENSOR — C538 YEL 181D-18 (WHT) BLK 181C-18 (WHT)
24V ACCESSORIES FROM KEY SWITCH SEE P. 4.1 — 24-83-20
FROM DASH LIGHT RHEOSTAT SEE P. 11.2 — 0@12-114A-20
24V HOT WIRE FROM CB85 SEE P. 16.1 — 24-7B-20 — 0-00A-18 — FBG
PASSENGER HEAT SIGNAL FROM LOGIC PANEL HEAT•1 SEE P. 13.2 — 24-45B-20
24-2B-18

POWER GRD
POWER 12 V
POWER 24 V
AND
ON OFF DRIVER
24V / 12V
10 Kohms
ELECTRONIC DRIVER POT.
REC DRIVER
REC PASSENGER
OR
GRD PHOTOCELL INTENSITY ON DISPLAY
DRIVER'S TEMP. CTR'L
24V
CUT-IN • 25 F
CUT OUT • 35 F
GRD FROZEN POINT SIGNAL OUTSIDE THERMOMETER
TO PASSENGER DISPLAY
BACKLIGHTING INTENSITY ON KEYBOARD
VOLTMETER INTERFACE NOT USED
PASSENGER SET POINT ELECTRONIC POT. 500 ohms — P1 P2 P3 — 20
SIG. REF
HEAT MODE / COOL MODE — GRD
GRD ON OFF PASSENGER

C539: 11 DRIVER; 10 24V; 23 12V; 19 10 Kohms; 18 ELECTRONIC DRIVER POT.; 17; 9 REC DRIVER; 8 REC PASSENGER / OR; 13; 14; 15; 16; 20 GRD; 21; 22 GRD ON OFF PASSENGER
C540: 13; 3; 14; 4; 15 P1; 16 P2; 5 P3; 6 SIG.; 17 REF
C539: 22

C11: 4 — 24-45G-18 — C106 A — DRIVER'S HEATER SOL. VALVE C106 N.O. — C106 B — 0-0C-14 — FS
C11: 28 — 12-116B-18 — C105 A — DRIVER'S LIQ. SOL. VALVE C105 N.C. — C105 B — 0-0C-14
C11: 8 — 24-116C-18 — C480 C — TRIGGER ON
C11: 32 — 64B-18 — C481 C — CW
C11: 30 — 64-18 — C481 B — WIPER
C11: 31 — 64A-18 — C481 A — CCW
PWM CONTROL — DRIVER'S FAN SPEED CTR'L
MOTOR — DEFROSTER FAN B
BATTERY — A
GRD — C480 B — 0-0M3-12 — FS
24V POWER FROM FR.JCT.BOX SEE P.1.1 — CB79 15A — 24-24IA-14 — C4 23 — 24-29-14 — C480 A — RED
C11 17 — 24-65D-18 — C480 D
DRV. REC DAMPER GAZ CYLINDER A B
PASS. REC DAMPER GAZ CYLINDER C111 1 C111 2 — 0-0A-18 — RS
C9 5 — 24-65P-18 — C539 8

C11: 13 — 65A-18 — C484 B — FOOT DAMPER MOTOR
C11: 14 — 65-18 — C484 A — DASH & DEFROST DAMPER
C11: 15 — 68-18 — C485 1 — MOTOR
C11: 16 — 68A-18 — C485 3

C539: 20 — 0-77K-20 — TO A/C MODULE C139(15) SEE P. 13.2
C539: 21 — 0-181-20 — TO FROZEN POINT T.T. LT MODULE C572(14) P. 28.1
C540: 13 — 180-20
C540: 3 — 180A-20
C540: 14 — 180B-20
C540: 4 — 180C-20
TO TELL-TALE LTS MODULE OUTSIDE TEMP. DYSPLAY C573(5,6,7,8) SEE P. 28.1
C540: 15 — 0@1-167-18
C540: 16 — 0@1-167A-18
C540: 5 — 0-165D-18

C9 19 — 0@1-167-18 — C58 15 — TO ELECT. TRANSMITTER C137 (8) SEE P. 13.2
C9 20 — 0@1-167A-18 — C58 14 — TO ELECT. TRANSMITTER C137 (9) SEE P. 13.2
C9 18 — 0-165D-18 — C58 13 — REFERENCE GROUND ELECT. TRANSMITTER C137 (1) SEE P. 13.2

PASSENGER LIQ. SOL. VALVE
24-2B-18 — C95 B — C95 A — 0-0A-18 — RS

C539: 22 — C9 1 — 0-66-20 — C58 3
C59 14 — 24-2B-18 — C91 32 — TO COND. P.S. SECOND SPEED SEE P. 13.4
C9 17 — C58 10
24-67A-16 — TO LAVATORY FAN R106(86) SEE P. 17.1
C59 9 — 24-67A-16 — C91 31 — TO COND. P.S. FIRST SPEED SEE P. 13.4
C58 19 — 24-67A-16 — TO EVAPORATOR CONTROL MODULE C112(B) SEE P. 13.2
24-67A-16 — TO HVAC LOGIC PANEL P. 13.2

FROM A/C MODULE C139(14) SEE P.13.2 — 24-2BB-18 — R38 86 85 — 0-0K-18 — RS
R38 30 87 — 24-2B-18 — C136 9 D1 C136 7
R38 87A
24V POWER FROM RR JCT.BOX SEE P. 1.1 — 24-24C-12 — CB71 10A — C59 10 — 24-67D-20 — R34 86 85
R34 30 87 — 24-67A-16
R34 87A
R34 85 — 0-66-20

HVAC DASH CONTROL

IN | HVAC DASH MODULE | OUT

FBG 0-00A-18 → C539 3,4,5 → GRD

12V HOT WIRE FROM CB 129 FR JCT BOX SEE P. 7.1 — 12-12LX-18 → C539 10 → C.P.U. MEMORY

12V POWER FROM FR JCT BOX SEE P. 2.1 — CB58 6A — 12-29H-16 → C74 35 — 12-12K-14

C539 8 → AND → C.P.U. PASSENGER

C539 9 → AND → C.P.U. DRIVER

24V POWER FROM FR JCT BOX CB35 SEE P. 9.3 — 24-44C-16 → C539 7 → AND → 24VI

C539 6 → AND → 24VE

12 V. ENGINE RUN FROM ALT. MODULE SEE P. 4.2 — 12-25D-20 → C540 21

FROM ENTRANCE DOOR OPEN SIGNAL SEE P. 16.1 — 24-12W-18 → C539 8

12 VOLTS IGNITION FROM FR JCT BOX CB28 SEE P. 7.1 — 12-12H-18 → C540 22

N.C. MAGNETIC SWITCH CENTRAL POS. - OPEN DRIVER'S RETURN — C599 1,2 — 12-69-18 → C539 11

AIR SENSOR (T) — WHT — C474 2,1 — 181B-18 (YEL) / 181A-18 (YEL) → C140 1,2

OUTSIDE TEMP. SENSOR — YEL / BLK — C538 2,1 — 181D-18 (WHT) / 181C-18 (WHT) → C140 3,4

24V ACCESSORIES FROM KEY SWITCH SEE P. 4.1 — 24-83-20 → C540 20

FROM DASH LIGHT RHEOSTAT SEE P. 11.2 — 0@12-114A-20 → C540 19

C540 14,10,9,4 — NOT USED

FBG 0-00A-18 → C540 5 — ANALOG GROUND

PASSENGER HEAT SIGNAL FROM LOGIC PANEL HEAT•1 SEE P. 13.2 — 24-45B-20 → C540 16 — HEAT LED

24-2B-18 → C540 15 — COOL LED → GRD

C479 1 — TX — SERIAL PORT — RX — 2,3

GRD — PHOTOCELL INTENSITY ON DISPLAY

DRIVER'S TEMP. CTR'L (Kp=3 Ki=15) → 24V

CUT-IN = 25 F, CUT OUT = 35 F — GRD — FROZEN POINT SIGNAL OUTSIDE THERMOMETER → C540 21

TO PASSENGER DISPLAY BACKLIGHTING KEYBOARD

ON/OFF DRIVER: 24VI, 24VI, 12VI → V.R. 9.4V → C539 16, 19, 22

N/C → C539 13

PWM CONTROL → C539 2

DRIVER N/C (REC) → C539 1

ON/OFF PASSENGER: 24VI, 24VE → OR → C539 15, 14

P1, P2, P3 — PASSENGER SET POINT ELECTRONIC POT. 500 ohms (20)

VOLTMETER INTERFACE — SIG. + → C539 13; REF. - → C539 12

ON/OFF PASSENGER: GRD → C539 20

C539 18 — GRD

C540 18, 6, 17, 7 — GRD, DATA, CLK, ENABLE

180-20 / 180A-20 / 180B-20 / 180C-20 → TO TELL-TALE LTS MODULE OUTSIDE TEMP. DYSPLAY C573(5,6,7,8) SEE P. 28.1

C539 18, 11, 12, 23, 24 → R/L/DEFROST/FOOT DAMPER MOTORS

C539 21 → 0-77K-20 → TO A/C MODULE C139(15) SEE P. 13.2

C539 17 → 0-181-20 → TO FROZEN POINT T.T. LT MODULE C572(14) P. 28.1

C539 16 → 24-45G-18 → C11 4 → 24-45G-18 → C106 A — N.O. — C106 B → 0-0C-14 → FS

DRIVER'S HEATER SOL. VALVE

C539 19 → 24-116B-18 → C11 28 → 24-116B-18 → C105 A — N.C. — C105 B → 0-0C-14

DRIVER'S LIQ. SOL. VALVE

C539 22 → 9.4-116C-18 → C11 8 → 9.4-116C-18 → C480 C

C539 13 → 64B-18 → C481 C — CW

C539 2 → 3.2@8.5-64-18 → C11 30 → 64-18 → C481 B — WIPER

C539 1 → C11 31 → 64A-18 → C481 A — CCW

C481 → PWM CONTROL (TRIGGER ON) → DRIVER'S FAN SPEED CTR'L

C480 MOTOR → B — DEFROSTER FAN

C480 BATTERY → A

C480 GRD → B → 0-0M3-12 → FS

24V POWER FROM FR.JCT.BOX SEE P.1.1 — CB79 15A — 24-24IA-14 → C4 23 — 24-29-14 → C480 A

C539 15 → 24-65D-18 → C11 17 → 24-65D-18 → C480 D — RED

C480 A → DRV. REC DAMPER GAZ CYLINDER → B

C539 14 → 24-65P-18 → 24-65P-18 → C9 5 → C111 1 — PASS. REC DAMPER GAZ CYLINDER — C111 2 → 0-0A-18 → RS

FOOT DAMPER — MOTOR — C484 B / A — 65A-18 / 65-18

DASH & DEFROST DAMPER — MOTOR — C485 1 / 3 — 68-18 / 68A-18

C9 19 → 0@1-167-18 → C58 15 → TO ELECT. TRANSMITTER C137 (8) SEE P. 13.2

C9 20 → 0@1-167A-18 → C58 14 → TO ELECT. TRANSMITTER C137 (9) SEE P. 13.2

C9 18 → 0-165D-18 → C58 13 → REFERENCE GROUND ELECT. TRANSMITTER C137 (1) SEE P. 13.2

C539 1 → 0@1-167-18

C539 2 → 0@1-167A-18

C539 3 → 0-165D-18

PASSENGER LIQ. SOL. VALVE — C95 B / A — 24-2B-18 → 0-0A-18 → RS

C59 14 → 24-2B-18 → C91 32 → TO COND. P.S. SECOND SPEED SEE P. 13.4

C59 9 → 24-67A-16 → C91 31 → TO COND. P.S. FIRST SPEED SEE P. 13.4

C58 19 → 24-67A-16 → TO EVAPORATOR CONTROL MODULE C112(B) SEE P. 13.4

24-67A-16 → TO LAVATORY FAN R106(86) SEE P. 17.1

24-67A-16 → TO HVAC LOGIC PANEL P. 13.2

C539 20 → C9 1 — 0-66-20 — C58 3 → C9 17 → C58 10 → 24-2B-18 → C59 14 → C91 32 → TO COND. P.S. SECOND SPEED SEE P. 13.4

FROM A/C MODULE C139(14) SEE P.13.2 — 24-2BB-18 → R38 86 → 85 → 0-0K-18 → RS

R38 30 → 87 → 24-2B-18 → C136 D1 C136 9 → 7

R38 87A

24V POWER FROM RR JCT.BOX SEE P. 1.1 — 24-24C-12 — CB71 10A — C59 10 — 24-67D-20 → R34 86 → 85 → 0-66-20

R34 30 → 87 → 24-67A-16

R34 87A

HVAC DASH CONTROL

IN | HVAC DASH MODULE | OUT

C539: 3 FS 0-0T5-14; 4 0-0T5-18; 5 GRD; 10 12V HOT WIRE FROM CB 129 FR JCT BOX SEE P. 7.1 12-12LX-18; 8 12V POWER FROM FR JCT BOX SEE P. 2.1 CB58 6A 12-29H-16 C74 35; 9 12-12K-14; 7 24V POWER FROM FR JCT BOX CB35 SEE P. 9.3 24-44C-16; 6 GRD

C540: 21 12 V. ENGINE RUN FROM ALT. MODULE SEE P. 4.2 12-25D-20; 8 FROM ENTRANCE DOOR OPEN SIGNAL SEE P. 16.1 24-12W-18; 22 12 VOLTS IGNITION FROM FR JCT BOX CB28 SEE P. 7.1 12-12H-18; C599 N.C. MAGNETIC SWITCH CENTRAL POS. = OPEN DRIVER'S RETURN 1 2 12-69-18; 11

C140: AIR SENSOR T WHT WHT C474 2 1 2@4-181B-18 (YEL) 0-181A-18 (YEL); 1 2

C538: OUTSIDE TEMP. SENSOR YEL BLK 2 1 181D-18 (CLR) 181C-18 (BLK); 3 4

C540: 20 24V ACCESSORIES FROM KEY SWITCH SEE P. 4.1 24-83-20; 19 FROM DASH LIGHT RHEOSTAT SEE P. 11.2 0@12-114A-20

14 10 9 4 NOT USED

FS 0-0T5-18; 5 ANALOG GROUND

16 PASSENGER HEAT SIGNAL FROM LOGIC PANEL HEAT=1 SEE P. 13.2 24-45B-20; HEAT LED

15 24-2B-18; COOL LED GRD

C479: 1 2 3 TX RX SERIAL PORT

GRD PHOTOCELL INTENSITY ON DISPLAY

24V Kp=3 Ki=15 DRIVER'S TEMP. CTR'L

CUT-IN = 25 F CUT OUT = 35 F GRD FROZEN POINT SIGNAL OUTSIDE THERMOMETER

TO PASSENGER DISPLAY BACKLIGHTING KEYBOARD

ON OFF DRIVER 24VI 24VI 12VI V.R. 9.4V N/C

PWM CONTROL

DRIVER N/C REC 24VI REC PASSENGER 24VE OR

AND C.P.U. MEMORY

AND C.P.U. PASSENGER

AND C.P.U. DRIVER

AND 24VI

AND 24VE

VOLTMETER INTERFACE SIG. + REF. −

ON OFF PASSENGER GRD GRD

C539: 16 24-45G-18; 19 24-116B-18; 22 9.4-116C-18; N/C 13; 2 3.2@8.5-64-18; 1; 15 24-65D-18; 14 24-65P-18; 18; 11 65A-18; 12 65-18; 23 68-18; 24 68A-18; 21 0-77K-20; 17 0-181-20; 18 GRD 180-20; 6 DATA 180A-20; 17 CLK 180B-20; 7 ENABLE 180C-20; 1 0@1-167-18; 2 0@1-167A-18; 3 0-165D-18; 20 0-66-20

C11: 4 24-45G-18; 28 24-116B-18; 8 9.4-116C-18; 32 64B-18; 30 64-18; 31 64A-18; 17 24-65D-18

DRIVER'S HEATER SOL. VALVE C106 N.O. C106 A B 0-0C-14 FS

DRIVER'S LIQ. SOL. VALVE C105 N.C. C105 A B 0-0C-14

C480 C TRIGGER ON B CW WIPER CCW A; PWM CONTROL; DRIVER'S FAN SPEED CTR'L

C481 C B A

MOTOR B BATTERY A GRD B DEFROSTER FAN C480 0-0M3-12 FS

24VI POWER FROM FR.JCT.BOX SEE P.1.1 CB79 15A C4 23 24-24IA-14 24-29-14 C480 A D RED C11 17 24-65D-18

DRV. REC DAMPER GAZ CYLINDER A B FS

PASS. REC DAMPER GAZ CYLINDER C9 5 24-65P-18 C111 1 2 C111 0-0A-18 RS

FOOT DAMPER C484 B A 65A-18 65-18 MOTOR DASH & DEFROST DAMPER

C485 1 3 68-18 68A-18 MOTOR

TO A/C MODULE C139(15) SEE P. 13.2

TO FROZEN POINT T.T. LT MODULE C572(14) P. 28.1

TO TELL-TALE LTS MODULE OUTSIDE TEMP. DYSPLAY C573(5,6,7,8) SEE P. 28.1

C9 19 0@1-167-18 C58 15 TO ELECT. TRANSMITTER C137 (8) SEE P. 13.2

20 0@1-167A-18 14 TO ELECT. TRANSMITTER C137 (9) SEE P. 13.2

18 0-165D-18 13 REFERENCE GROUND ELECT. TRANSMITTER C137 (1) SEE P. 13.2

P1 P2 P3 PASSENGER SET POINT ELECTRONIC POT. 500 ohms 20

PASSENGER LIQ. SOL. VALVE C95 B A 24-2B-18 0-0A-18 RS

C59 14 24-2B-18 C91 32 TO COND. P.S. SECOND SPEED SEE P. 13.4

C9 17 C58 10

24-67A-16 TO LAVATORY FAN R106(86) SEE P. 17.1

C59 9 24-67A-16 C91 31 TO COND. P.S. FIRST SPEED SEE P. 13.4

C58 19 24-67A-16 TO EVAPORATOR CONTROL MODULE C112(B) SEE P. 13.4

24-67A-16 TO HVAC LOGIC PANEL P. 13.2

FROM A/C MODULE C139(14) SEE P.13.2 24-28B-18

R38 86 85 0-0K-18 RS 30 87 87A 24-2B-18 C136 D1 C136 9 7

24V POWER FROM RR JCT.BOX SEE P. 1.1 24-24C-12 CB71 10A C59 10 24-67D-20

R34 86 85 0-66-20 30 87 87A 24-67A-16

C9 1 0-66-20 C58 3

HVAC DASH CONTROL

IN | HVAC DASH MODULE | OUT

C539


FS 0-0T5-14 → 3
0-0T5-18 → 4
5
GRD
12V HOT WIRE FROM CB 129 FR JCT BOX SEE P. 7.1 — 12-12LX-18 → 10 — C.P.U. MEMORY
12V POWER FROM FR JCT BOX SEE P. 2.1 — CB58 6A — 12-29H-16 — C74 35 → 8
12-12K-14 → 9 — AND — C.P.U. PASSENGER
24V POWER FROM FR JCT BOX CB35 SEE P. 9.3 — 24-44C-16 → 7 — AND — C.P.U. DRIVER
6 — AND — 24VI
C540
12 V. ENGINE RUN FROM ALT. MODULE SEE P. 4.2 — 12-25D-20 → 21 — AND — 24VE
FROM ENTRANCE DOOR OPEN SIGNAL SEE P. 16.1 — 24-12W-18 → 8
12 VOLTS IGNITION FROM FR JCT BOX CB28 SEE P. 7.1 — 12-12H-18 → 22
N.C. MAGNETIC SWITCH CENTRAL POS. - OPEN DRIVER'S RETURN — C599 1, 2 — 12-69-18 → 11
AIR SENSOR — WHT C474 2 — 2@4-181B-18 (YEL) — C140 1
WHT 1 — 0-181A-18 (YEL) → 2
OUTSIDE TEMP. SENSOR — YEL C538 2 — 181D-18 (CLR) — 3
BLK 1 — 181C-18 (BLK) → 4
24V ACCESSORIES FROM KEY SWITCH SEE P. 4.1 — 24-83-20 → C540 20
FROM DASH LIGHT RHEOSTAT SEE P. 11.2 — 0@12-114A-20 → 19
14, 10, 9, 4 — NOT USED
FS 0-0T5-18 → 5 — ANALOG GROUND
PASSENGER HEAT SIGNAL FROM LOGIC PANEL HEAT•1 SEE P. 13.2 — 24-45B-20 → 16 — HEAT LED
24-2B-18 → 15 — COOL LED — GRD
C479 1 TX, 2 RX, 3 — SERIAL PORT — GRD

ON OFF DRIVER: 24VI, 24VI, 12VI → V.R. 9.4V
PWM CONTROL — N/C 13, 2, 1
DRIVER N/C: REC, REC, 24VI
PASSENGER: 24VE → OR
GRD — PHOTOCELL INTENSITY ON DISPLAY → 18
DRIVER'S TEMP. CTR'L: Kp•3 Ki•15 — 24V → 11
CUT IN • 35 F, CUT OUT • 25 F — GRD — FROZEN POINT SIGNAL OUTSIDE THERMOMETER → 12
TO PASSENGER DISPLAY BACKLIGHTING KEYBOARD
GRD → 18
DATA → 6
CLK → 17
ENABLE → 7
P1 → 1, P2 → 2, P3 → 3
PASSENGER SET POINT ELECTRONIC POT. 500 ohms — 20
24VI — VOLTMETER INTERFACE — SIG. + → 13, REF. - → 12
ON OFF PASSENGER — GRD — GRD → C539 20


C539 16 → 24-45G-18 → C11 4 → C106 A — N.O. — C106 B → 0-0C-14 → FS
DRIVER'S HEATER SOL. VALVE
DRIVER'S LIQ. SOL. VALVE: C105 A — N.C. — C105 B
19 → 24-116B-18 → 28 → 24-116B-18 → C105 A — C105 B → 0-0C-14
22 → 9.4-116C-18 → 8 → 9.4-116C-18 → C480 C
13 → 32 → 64B-18 → C481 C — CW
2 → 3.2@8.5-64-18 → 30 → 64-18 → B — WIPER
1 → 31 → 64A-18 → A — CCW
TRIGGER ON — PWM CONTROL — DRIVER'S FAN SPEED CTR'L
MOTOR — B
BATTERY — A
GRD — B
DEFROSTER FAN — C480 A, B — 0-0M3-12 → FS
24VI POWER FROM FR.JCT.BOX SEE P.1.1 — CB79 15A — 24-24IA-14 — C4 23 — 24-29-14 — C480 A
C11 17 — 24-65D-18 — D — RED
DRV. REC DAMPER GAZ CYLINDER — A, B
PASS. REC DAMPER GAZ CYLINDER — C111 1, 2 — 0-0A-18 → RS
15 → 24-65D-18
14 → 24-65P-18 → C9 5 → 24-65P-18
18
11 → 65A-18 → C484 B — MOTOR
12 → 65-18 → A — DASH & DEFROST DAMPER
23 → 68-18 → C485 1 — MOTOR
24 → 68A-18 → 3
21 → 77K-20 → TO A/C MODULE C139(15) SEE P. 13.2
17 → 0-181-20 → TO FROZEN POINT T.T. LT MODULE C572(14) P. 28.1
C540 18 → 180-20 → 180A-20 → 180B-20 → 180C-20 → TO TELL-TALE LTS MODULE OUTSIDE TEMP. DYSPLAY C573(5,6,7,8) SEE P. 28.1
C9 19 → 0@1-167-18 → C58 15 → TO ELECT. TRANSMITTER C137 (8) SEE P. 13.2
20 → 0@1-167A-18 → 14 → TO ELECT. TRANSMITTER C137 (9) SEE P. 13.2
18 → 0-165D-18 → 13 → REFERENCE GROUND ELECT. TRANSMITTER C137 (1) SEE P. 13.2
1 → 0@1-167-18
2 → 0@1-167A-18
3 → 0-165D-18

PASSENGER LIQ. SOL. VALVE: C95 B — C95 A → 0-0A-18 → RS
24-2B-18
C59 14 → 24-2B-18 → C91 32 → TO COND. P.S. SECOND SPEED SEE P. 13.4
C9 17 → C58 10
24-67A-16 → TO LAVATORY FAN R106(86) SEE P. 17.1
C59 9 → 24-67A-16 → C91 31 → TO COND. P.S. FIRST SPEED SEE P. 13.4
C58 19 → 24-67A-16 → TO EVAPORATOR CONTROL MODULE C112(B) SEE P. 13.4
24-67A-16 → TO HVAC LOGIC PANEL P. 13.2


FROM A/C MODULE C139(14) SEE P.13.2 — 24-28B-18 → R38 86, 85 — 0-0K-18 → RS
30, 87 — 24-2B-18 → C136 9 — D1 — C136 7
87A
24V POWER FROM RR JCT.BOX SEE P. 1.1 — 24-24C-12 — CB71 10A — C59 10 — 24-67D-20 → R34 86, 85 — 0-66-20
30, 87 — 24-67A-16
87A

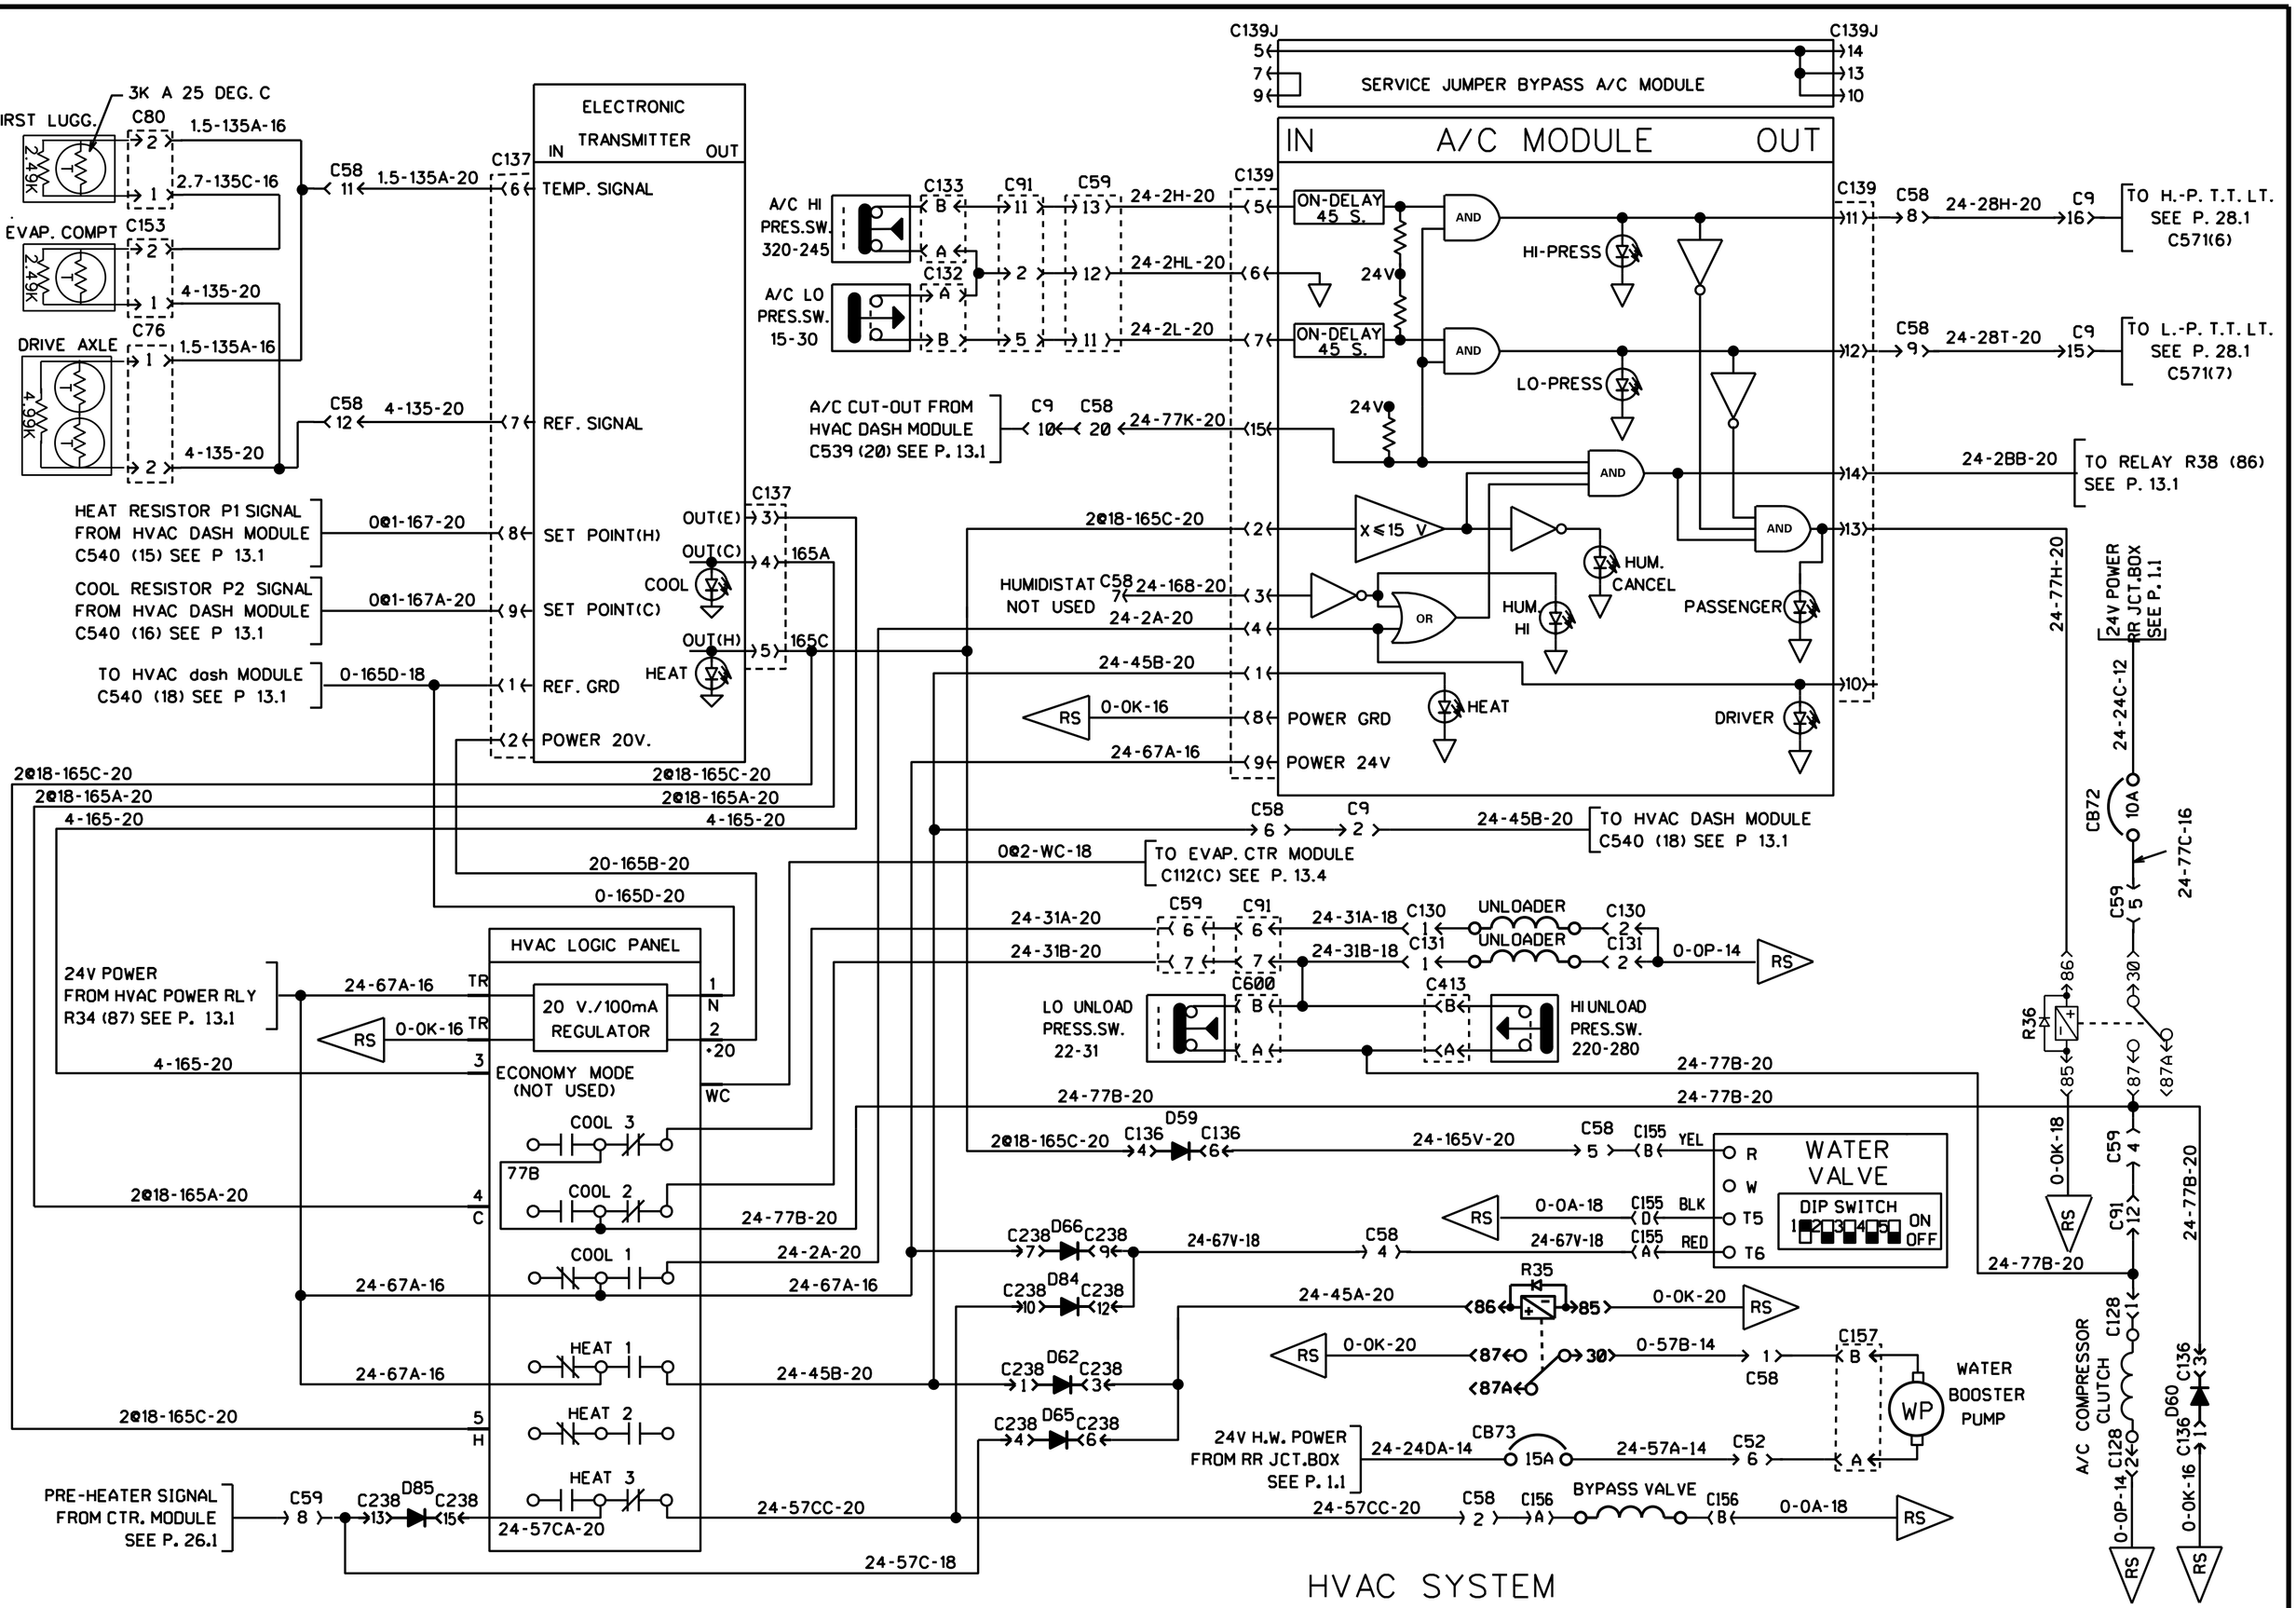
3K A 25 DEG. C
FIRST LUGG.
C80
1.5-135A-16
2.49K
2.7-135C-16
EVAP. COMPT
C153
4-135-20
DRIVE AXLE
C76
4.99K
C58
11
1.5-135A-20
C137
ELECTRONIC
TRANSMITTER
IN
OUT
TEMP. SIGNAL
REF. SIGNAL
SET POINT(H)
SET POINT(C)
REF. GRD
POWER 20V.
HEAT RESISTOR P1 SIGNAL
FROM HVAC DASH MODULE
C540 (15) SEE P 13.1
0@1-167-20
COOL RESISTOR P2 SIGNAL
FROM HVAC DASH MODULE
C540 (16) SEE P 13.1
0@1-167A-20
TO HVAC dash MODULE
C540 (18) SEE P 13.1
0-165D-18
OUT(E)
OUT(C)
OUT(H)
COOL
HEAT
165A
165C
C139J
SERVICE JUMPER BYPASS A/C MODULE
A/C MODULE
C139
ON-DELAY
45 S.
AND
HI-PRESS
LO-PRESS
24V
X≤15 V
OR
HUM.
CANCEL
HUM.
HI
PASSENGER
DRIVER
HEAT
POWER GRD
POWER 24V
A/C HI
PRES.SW.
320-245
A/C LO
PRES.SW.
15-30
C133
C132
C91
C59
24-2H-20
24-2HL-20
24-2L-20
A/C CUT-OUT FROM
HVAC DASH MODULE
C539 (20) SEE P. 13.1
C9
C58
24-77K-20
2@18-165C-20
HUMIDISTAT
NOT USED
24-168-20
24-2A-20
24-45B-20
RS
0-0K-16
24-67A-16
24-28H-20
TO H.-P. T.T. LT.
SEE P. 28.1
C571(6)
24-28T-20
TO L.-P. T.T. LT.
SEE P. 28.1
C571(7)
24-28B-20
TO RELAY R38 (86)
SEE P. 13.1
24-77H-20
24V POWER
RR JCT.BOX
SEE P. 1.1
CB72
10A
24-24C-12
24-77C-16
R36
86
85
30
87
87A
2@18-165A-20
4-165-20
20-165B-20
0-165D-20
0@2-WC-18
TO EVAP. CTR MODULE
C112(C) SEE P. 13.4
HVAC LOGIC PANEL
24V POWER
FROM HVAC POWER RLY
R34 (87) SEE P. 13.1
24-67A-16
TR
20 V./100mA
REGULATOR
ECONOMY MODE
(NOT USED)
WC
COOL 3
COOL 2
COOL 1
HEAT 1
HEAT 2
HEAT 3
77B
4
C
5
H
24-77B-20
24-2A-20
24-67A-16
24-45B-20
24-57CC-20
24-57CA-20
24-57C-18
PRE-HEATER SIGNAL
FROM CTR. MODULE
SEE P. 26.1
C59
8
C238
D85
C238
13
15
C58
6
2
24-45B-20
TO HVAC DASH MODULE
C540 (18) SEE P 13.1
24-31A-20
24-31B-20
C59
C91
6
7
24-31A-18
24-31B-18
C130
C131
UNLOADER
0-0P-14
LO UNLOAD
PRESS.SW.
22-31
C600
C413
HI UNLOAD
PRES.SW.
220-280
24-77B-20
C59
4
C91
12
0-0K-18
0-0K-16
0-0P-14
C128
A/C COMPRESSOR
CLUTCH
C136
D60
C136
3
1
2
C58
4
24-67V-18
C238
D66
C238
7
9
C238
D84
C238
10
12
C238
D62
C238
1
3
C238
D65
C238
4
6
C136
D59
C136
4
6
C155
YEL
BLK
RED
R
W
T5
T6
WATER
VALVE
DIP SWITCH
ON
OFF
0-0A-18
24-67V-18
24-165V-20
R35
24-45A-20
0-0K-20
0-57B-14
C157
WATER
BOOSTER
PUMP
WP
24V H.W. POWER
FROM RR JCT.BOX
SEE P. 1.1
CB73
15A
24-24DA-14
24-57A-14
C52
6
BYPASS VALVE
C156
24-57CC-20
0-0A-18


HVAC SYSTEM

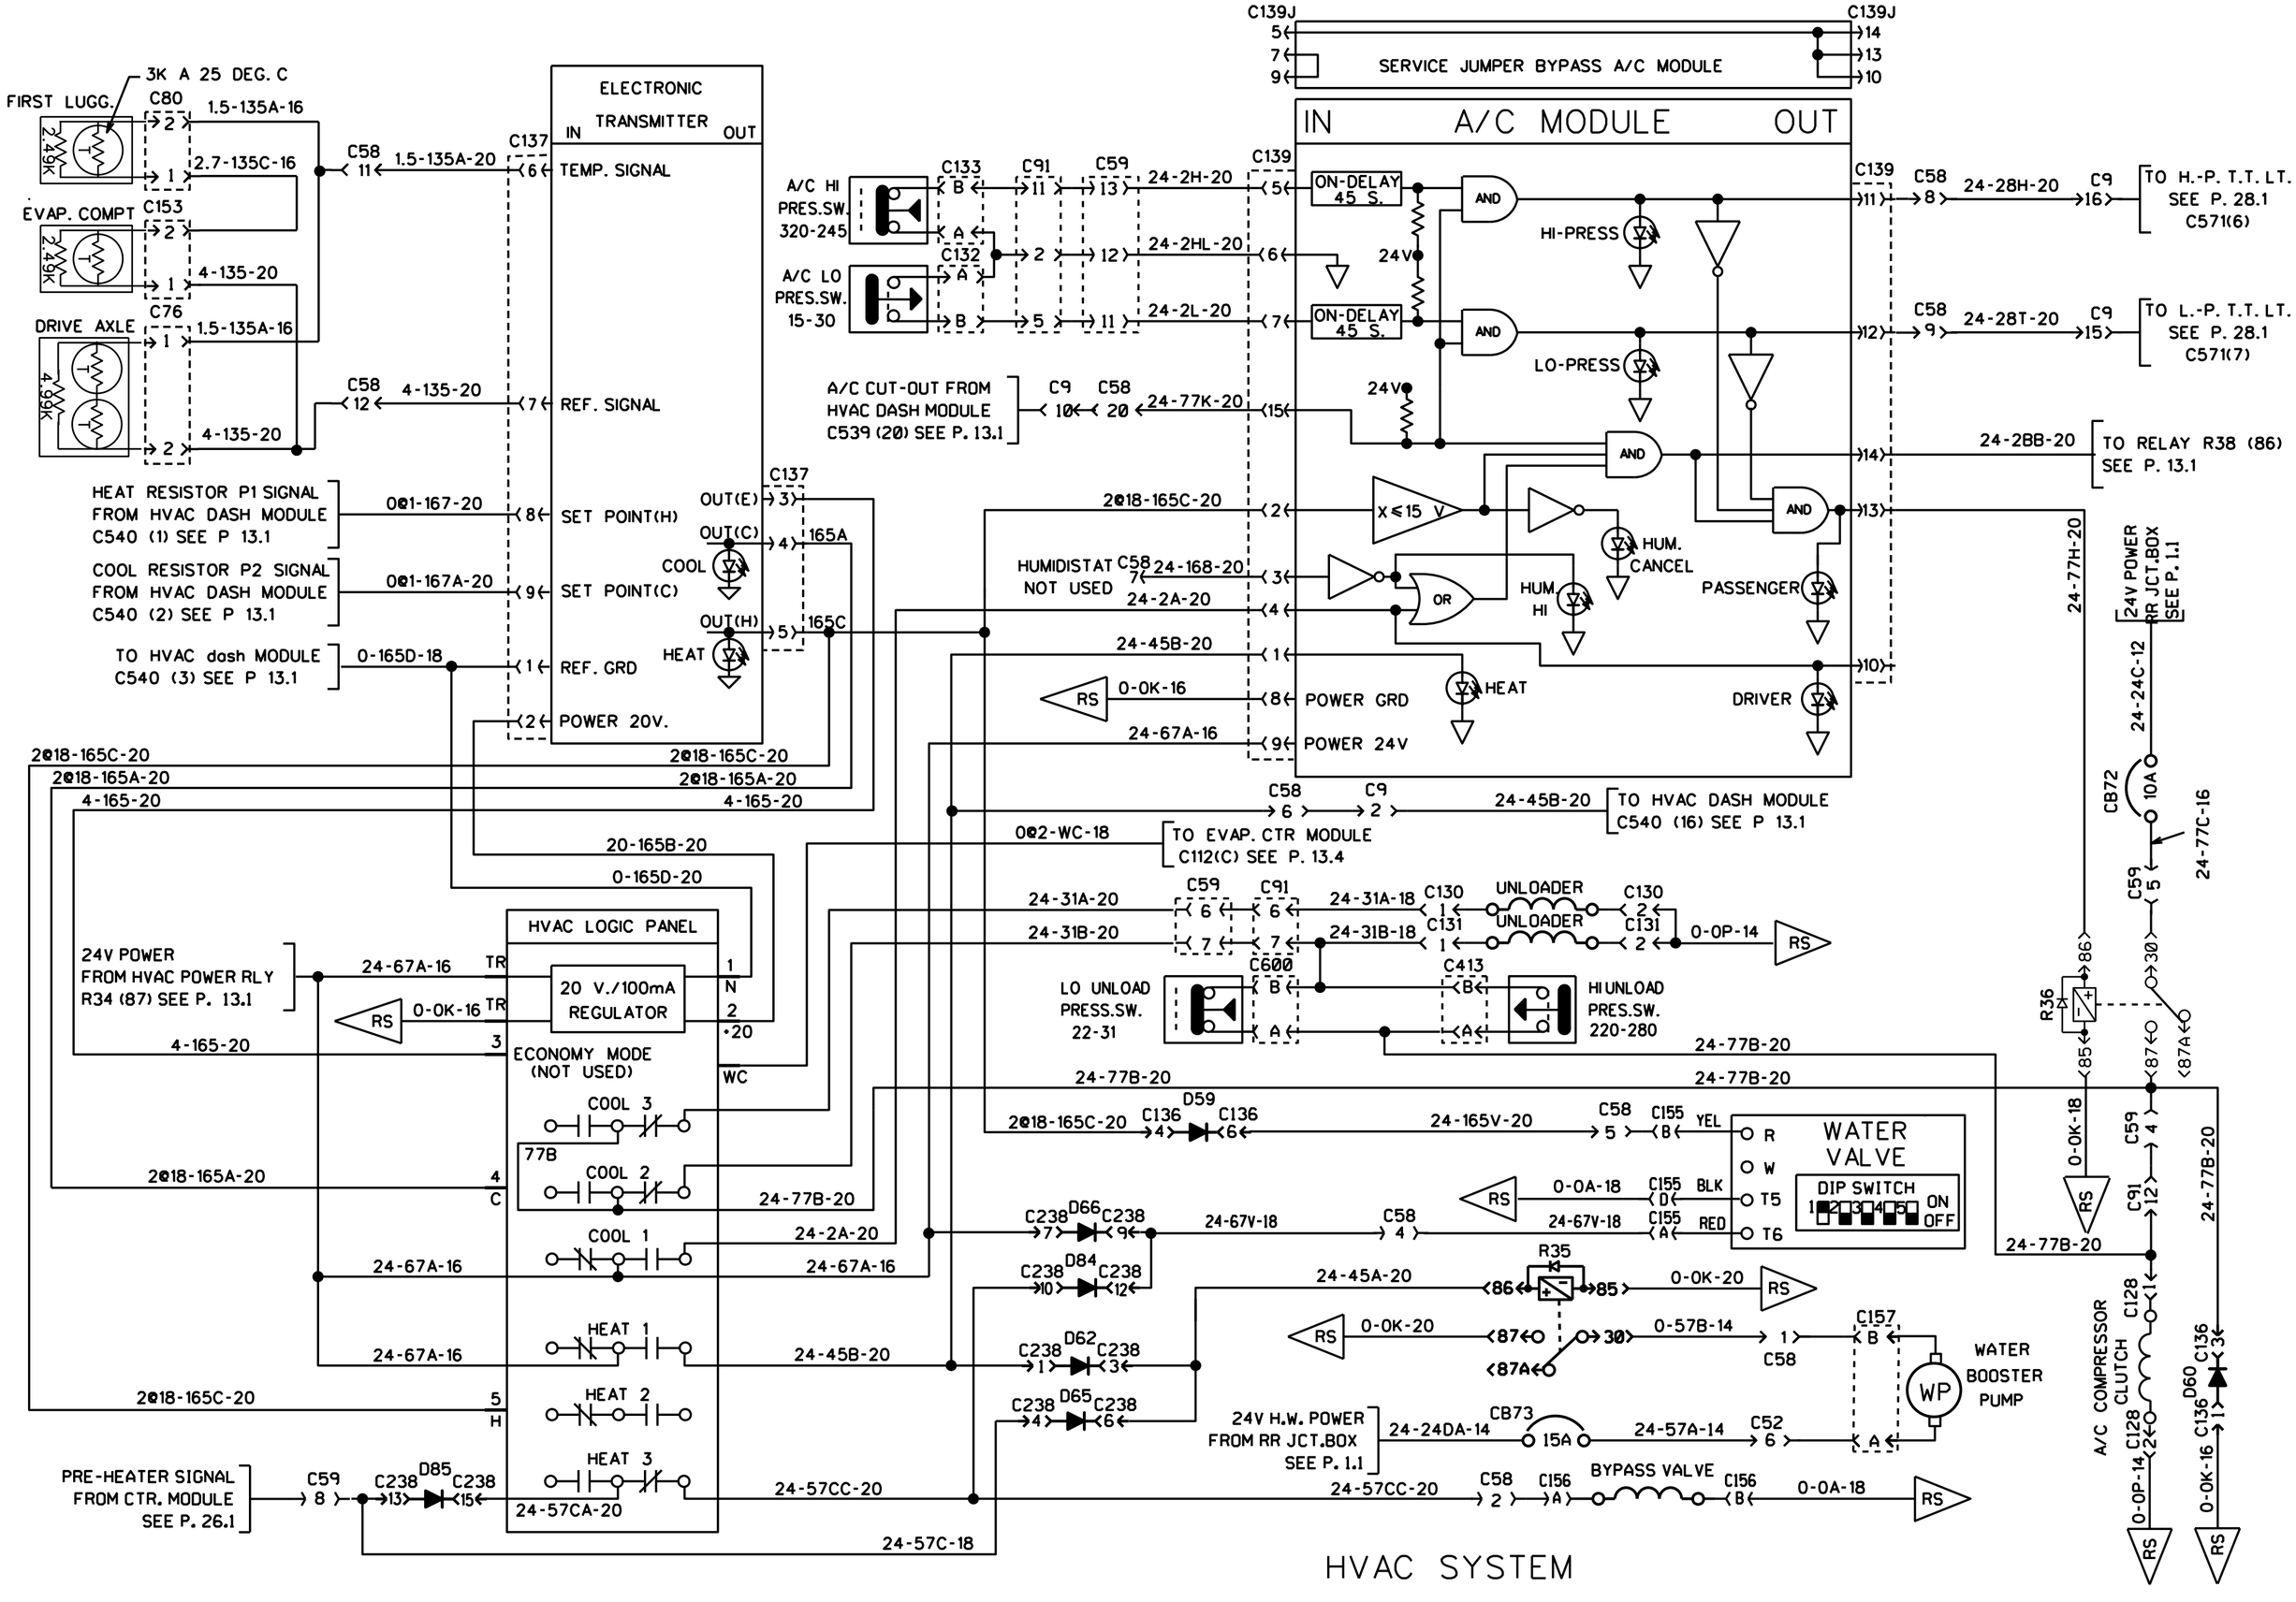
3K A 25 DEG. C
FIRST LUGG.
C80
1.5-135A-16
2.7-135C-16
EVAP. COMPT
C153
4-135-20
DRIVE AXLE
C76
1.5-135A-16
4-135-20
C58
11
1.5-135A-20
C137
ELECTRONIC
TRANSMITTER
IN
OUT
6 TEMP. SIGNAL
C58
12
4-135-20
7 REF. SIGNAL
HEAT RESISTOR P1 SIGNAL
FROM HVAC DASH MODULE
C540 (1) SEE P 13.1
0@1-167-20
8 SET POINT(H)
COOL RESISTOR P2 SIGNAL
FROM HVAC DASH MODULE
C540 (2) SEE P 13.1
0@1-167A-20
9 SET POINT(C)
TO HVAC dash MODULE
C540 (3) SEE P 13.1
0-165D-18
1 REF. GRD
2 POWER 20V.
OUT(E)
OUT(C)
OUT(H)
COOL
HEAT
C137
3
4
5
165A
165C
2@18-165C-20
2@18-165A-20
4-165-20
20-165B-20
0-165D-20
HVAC LOGIC PANEL
24V POWER
FROM HVAC POWER RLY
R34 (87) SEE P. 13.1
24-67A-16
TR
20 V./100mA
REGULATOR
1
N
2
•20
WC
RS
0-0K-16
ECONOMY MODE
(NOT USED)
3
4-165-20
COOL 3
77B
COOL 2
COOL 1
HEAT 1
HEAT 2
HEAT 3
2@18-165A-20
4
C
2@18-165C-20
5
H
24-57CA-20
PRE-HEATER SIGNAL
FROM CTR. MODULE
SEE P. 26.1
C59
8
C238
D85
C238
13
15
24-57CC-20
24-57C-18
24-77B-20
24-2A-20
24-67A-16
24-45B-20
C238
D66
C238
7
9
C238
D84
C238
10
12
C238
D62
C238
1
3
C238
D65
C238
4
6
A/C HI
PRES.SW.
320-245
A/C LO
PRES.SW.
15-30
C133
B
A
C132
A
B
C91
11
2
5
C59
13
12
11
24-2H-20
24-2HL-20
24-2L-20
A/C CUT-OUT FROM
HVAC DASH MODULE
C539 (20) SEE P. 13.1
C9
10
C58
20
24-77K-20
C139
5
6
7
15
C139J
5
7
9
SERVICE JUMPER BYPASS A/C MODULE
C139J
14
13
10
IN
A/C MODULE
OUT
ON-DELAY
45 S.
ON-DELAY
45 S.
24V
AND
HI-PRESS
LO-PRESS
X≤15 V
HUM.
CANCEL
HUMIDISTAT
NOT USED
C58
7
24-168-20
OR
HUM.
HI
PASSENGER
DRIVER
HEAT
POWER GRD
POWER 24V
2@18-165C-20
2
24-2A-20
3
4
24-45B-20
1
RS
0-0K-16
8
24-67A-16
9
C58
6
C9
2
24-45B-20
TO HVAC DASH MODULE
C540 (16) SEE P 13.1
0@2-WC-18
TO EVAP. CTR MODULE
C112(C) SEE P. 13.4
C139
11
12
14
13
10
C58
8
9
24-28H-20
24-28T-20
24-28B-20
C9
16
15
TO H.-P. T.T. LT.
SEE P. 28.1
C571(6)
TO L.-P. T.T. LT.
SEE P. 28.1
C571(7)
TO RELAY R38 (86)
SEE P. 13.1
24-77H-20
24V POWER
RR JCT.BOX
SEE P. 1.1
CB72
10A
24-24C-12
24-77C-16
C59
5
30
R36
86
85
87
87A
24-31A-20
24-31B-20
C59
6
7
C91
6
7
24-31A-18
24-31B-18
C130
1
C131
1
UNLOADER
UNLOADER
C130
2
C131
2
0-0P-14
RS
C600
B
A
C413
B
A
LO UNLOAD
PRESS.SW.
22-31
HI UNLOAD
PRES.SW.
220-280
24-77B-20
24-77B-20
2@18-165C-20
C136
D59
C136
4
6
24-165V-20
C58
5
C155
B
YEL
WATER
VALVE
R
W
T5
T6
DIP SWITCH
1 2 3 4 5
ON
OFF
RS
0-0A-18
C155
D
BLK
24-67V-18
C155
A
RED
C58
4
24-67V-18
C238
7
D66
C238
9
C238
10
D84
C238
12
R35
86
85
87
30
87A
24-45A-20
0-0K-20
RS
0-0K-20
0-57B-14
1
C58
C157
B
A
WP
WATER
BOOSTER
PUMP
24-77B-20
0-0K-18
RS
C59
4
C91
12
24-77B-20
C128
1
C128
2
A/C COMPRESSOR
CLUTCH
0-0P-14
RS
C136
3
D60
C136
1
0-0K-16
RS
24-77C-16
24-77B-20
24V H.W. POWER
FROM RR JCT.BOX
SEE P. 1.1
24-24DA-14
CB73
15A
24-57A-14
C52
6
C58
2
C156
A
BYPASS VALVE
C156
B
24-57CC-20
0-0A-18
RS


HVAC SYSTEM

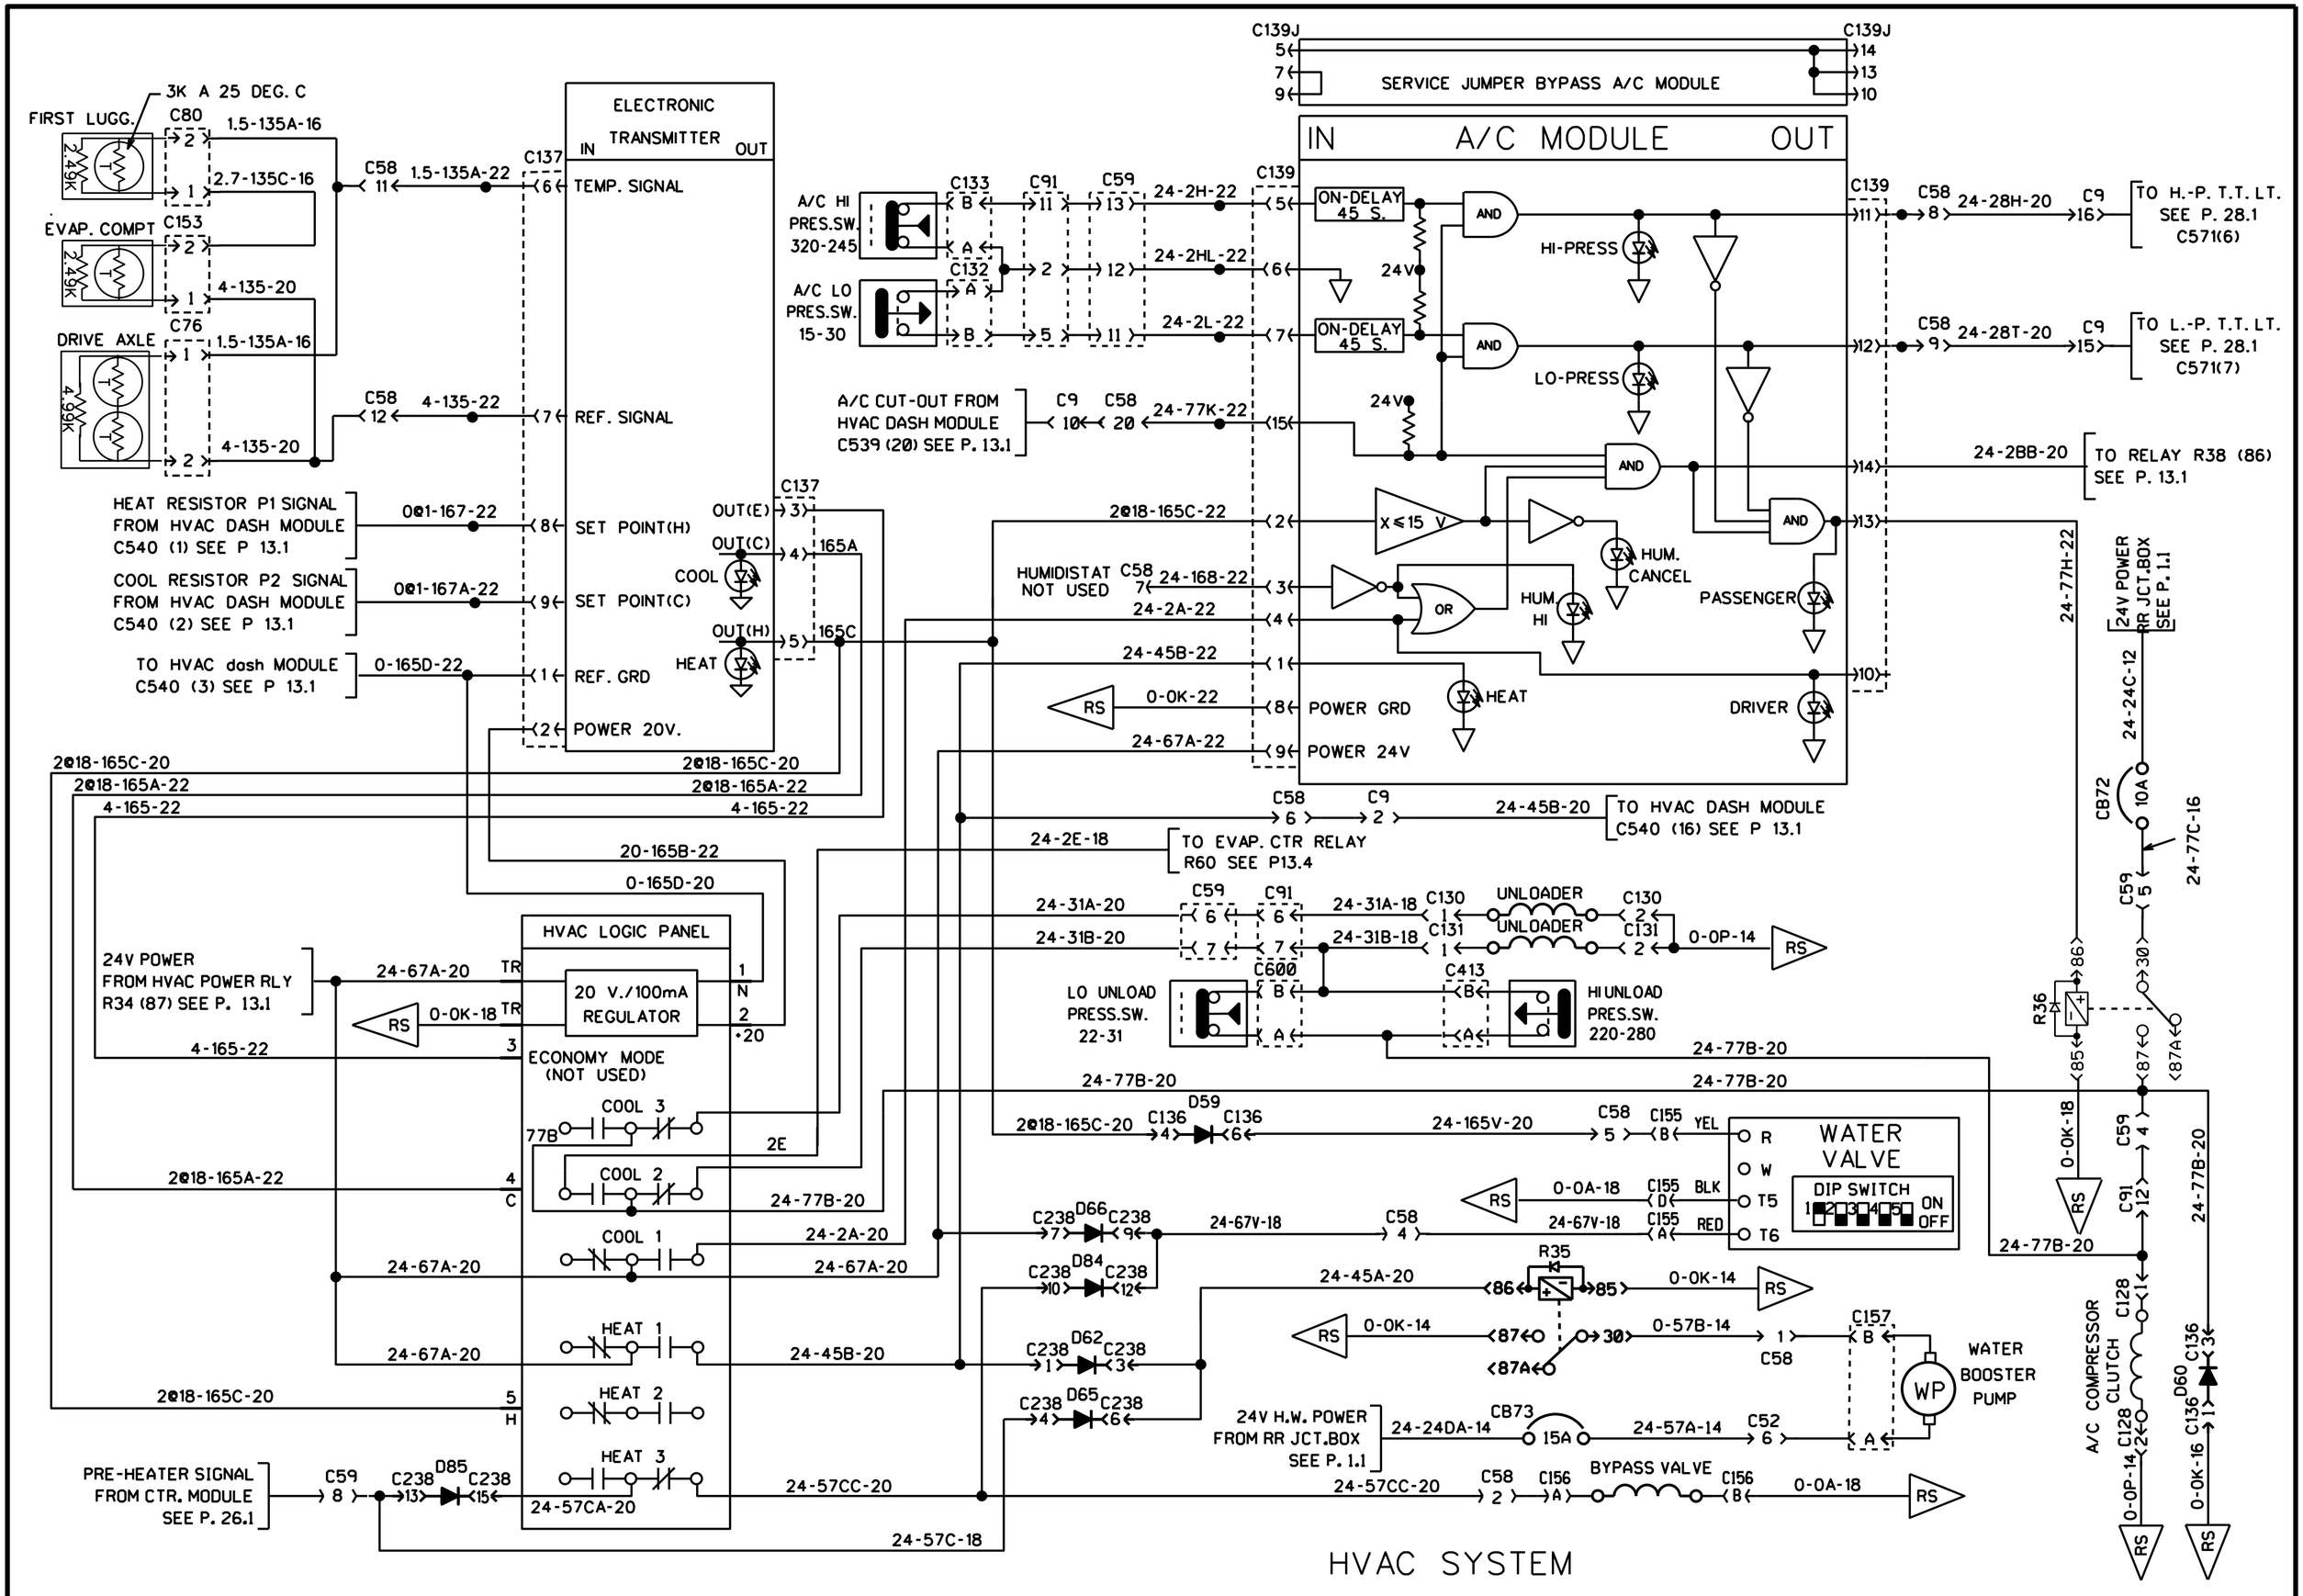

ELECTRONIC TRANSMITTER
IN
OUT
TEMP. SIGNAL
REF. SIGNAL
SET POINT(H)
SET POINT(C)
REF. GRD
POWER 20V.
OUT(E)
OUT(C)
OUT(H)
COOL
HEAT
3K A 25 DEG. C
FIRST LUGG.
EVAP. COMPT
DRIVE AXLE
2.49K
4.99K
1.5-135A-16
2.7-135C-16
4-135-20
1.5-135A-22
4-135-22
HEAT RESISTOR P1 SIGNAL FROM HVAC DASH MODULE C540 (1) SEE P 13.1
COOL RESISTOR P2 SIGNAL FROM HVAC DASH MODULE C540 (2) SEE P 13.1
TO HVAC dash MODULE C540 (3) SEE P 13.1
0@1-167-22
0@1-167A-22
0-165D-22
165A
165C
2@18-165C-22
2@18-165A-22
4-165-22
20-165B-22
0-165D-20
SERVICE JUMPER BYPASS A/C MODULE
A/C MODULE
ON-DELAY 45 S.
AND
HI-PRESS
LO-PRESS
24V
X≤15 V
OR
HUM. CANCEL
HUM HI
PASSENGER
DRIVER
HEAT
POWER GRD
POWER 24V
A/C HI PRES.SW. 320-245
A/C LO PRES.SW. 15-30
24-2H-22
24-2HL-22
24-2L-22
A/C CUT-OUT FROM HVAC DASH MODULE C539 (20) SEE P. 13.1
24-77K-22
HUMIDISTAT NOT USED
24-168-22
24-2A-22
24-45B-22
0-0K-22
24-67A-22
24-28H-20
TO H.-P. T.T. LT. SEE P. 28.1 C571(6)
24-28T-20
TO L.-P. T.T. LT. SEE P. 28.1 C571(7)
24-28B-20
TO RELAY R38 (86) SEE P. 13.1
24-77H-22
24V POWER RR JCT.BOX SEE P. 1.1
24-24C-12
CB72
10A
24-77C-16
TO HVAC DASH MODULE C540 (16) SEE P 13.1
24-2E-18
TO EVAP. CTR RELAY R60 SEE P13.4
HVAC LOGIC PANEL
24V POWER FROM HVAC POWER RLY R34 (87) SEE P. 13.1
24-67A-20
20 V./100mA REGULATOR
0-0K-18
ECONOMY MODE (NOT USED)
COOL 3
COOL 2
COOL 1
HEAT 1
HEAT 2
HEAT 3
77B
2E
24-77B-20
24-67A-20
24-45B-20
24-57CA-20
24-57CC-20
24-57C-18
PRE-HEATER SIGNAL FROM CTR. MODULE SEE P. 26.1
24-31A-20
24-31B-20
24-31A-18
24-31B-18
UNLOADER
0-0P-14
LO UNLOAD PRESS.SW. 22-31
HI UNLOAD PRESS.SW. 220-280
24-165V-20
WATER VALVE
DIP SWITCH
ON
OFF
0-0A-18
24-67V-18
R35
0-0K-14
0-57B-14
WATER BOOSTER PUMP
WP
24V H.W. POWER FROM RR JCT.BOX SEE P. 1.1
24-24DA-14
15A
24-57A-14
BYPASS VALVE
A/C COMPRESSOR CLUTCH
0-0P-14
0-0K-16
R36
24-77B-20
24-77C-16


HVAC SYSTEM

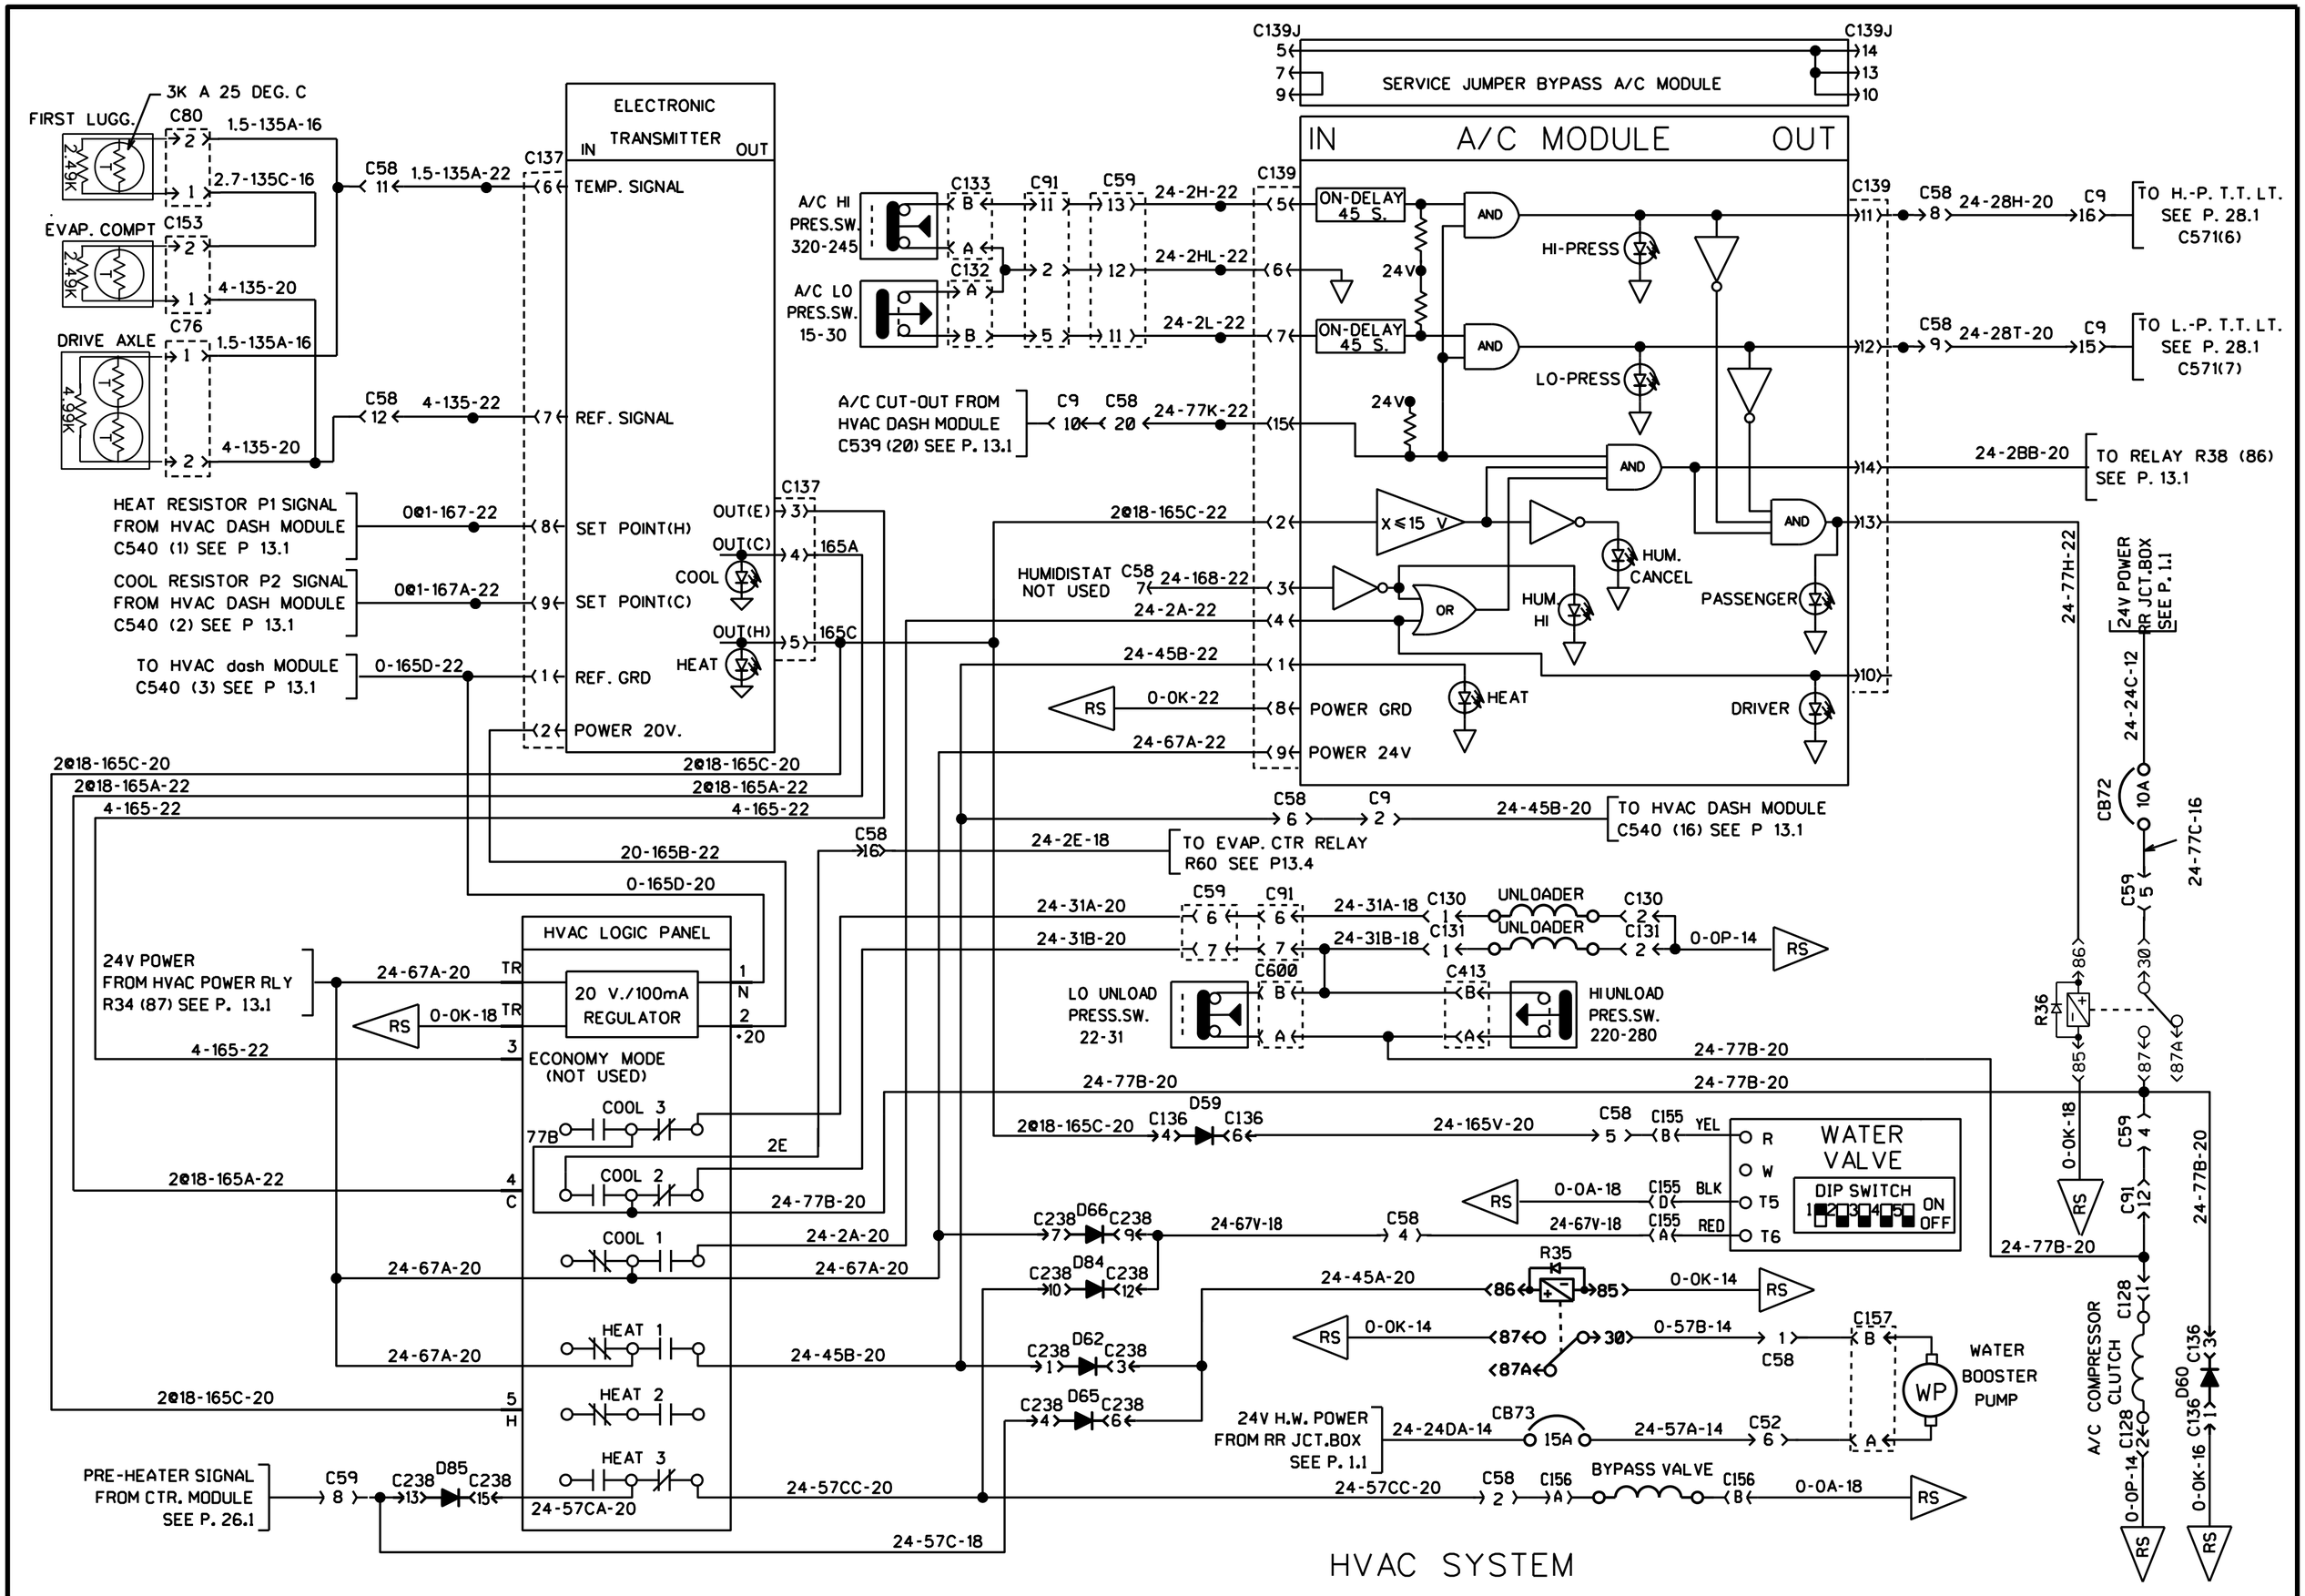
FIRST LUGG.
3K A 25 DEG. C
C80
1.5-135A-16
2.49K
2.7-135C-16
EVAP. COMPT
C153
4-135-20
DRIVE AXLE
C76
4.99K
C58
1.5-135A-22
4-135-22
ELECTRONIC TRANSMITTER
IN
OUT
C137
TEMP. SIGNAL
REF. SIGNAL
SET POINT(H)
SET POINT(C)
REF. GRD
POWER 20V.
OUT(E)
OUT(C)
OUT(H)
COOL
HEAT
HEAT RESISTOR P1 SIGNAL FROM HVAC DASH MODULE C540 (1) SEE P 13.1
0@1-167-22
COOL RESISTOR P2 SIGNAL FROM HVAC DASH MODULE C540 (2) SEE P 13.1
0@1-167A-22
TO HVAC dash MODULE C540 (3) SEE P 13.1
0-165D-22
2@18-165C-20
2@18-165A-22
4-165-22
20-165B-22
0-165D-20
HVAC LOGIC PANEL
24V POWER FROM HVAC POWER RLY R34 (87) SEE P. 13.1
24-67A-20
20 V./100mA REGULATOR
RS
0-0K-18
ECONOMY MODE (NOT USED)
COOL 3
COOL 2
COOL 1
HEAT 1
HEAT 2
HEAT 3
77B
2E
24-77B-20
24-2A-20
24-67A-20
24-45B-20
24-57CA-20
PRE-HEATER SIGNAL FROM CTR. MODULE SEE P. 26.1
C59
C238
D85
24-57CC-20
24-57C-18
A/C HI PRES.SW. 320-245
A/C LO PRES.SW. 15-30
C133
C132
C91
C59
24-2H-22
24-2HL-22
24-2L-22
A/C CUT-OUT FROM HVAC DASH MODULE C539 (20) SEE P. 13.1
C9
24-77K-22
C139J
SERVICE JUMPER BYPASS A/C MODULE
C139
IN
A/C MODULE
OUT
ON-DELAY 45 S.
AND
24V
HI-PRESS
LO-PRESS
X≤15 V
HUMIDISTAT NOT USED
24-168-22
OR
HUM. HI
HUM. CANCEL
PASSENGER
DRIVER
HEAT
POWER GRD
POWER 24V
24-2E-18
TO EVAP. CTR RELAY R60 SEE P13.4
24-45B-20
TO HVAC DASH MODULE C540 (16) SEE P 13.1
24-31A-20
24-31B-20
24-31A-18
24-31B-18
C130
C131
UNLOADER
0-0P-14
LO UNLOAD PRESS.SW. 22-31
HI UNLOAD PRES.SW. 220-280
C600
C413
24-77B-20
2@18-165C-22
D59
C136
24-165V-20
WATER VALVE
DIP SWITCH
ON
OFF
R
W
T5
T6
0-0A-18
24-67V-18
C155
BLK
RED
YEL
D66
D84
D62
D65
24-45A-20
R35
0-0K-14
0-57B-14
C157
WATER BOOSTER PUMP
WP
24V H.W. POWER FROM RR JCT.BOX SEE P. 1.1
24-24DA-14
CB73
15A
24-57A-14
C52
BYPASS VALVE
C156
24-77H-22
24V POWER RR JCT.BOX SEE P. 1.1
24-24C-12
CB72
10A
24-77C-16
A/C COMPRESSOR CLUTCH
C128
0-0P-14
0-0K-16
D60
R36
86
85
87
87A
30
TO H.-P. T.T. LT. SEE P. 28.1 C571(6)
TO L.-P. T.T. LT. SEE P. 28.1 C571(7)
24-28H-20
24-28T-20
24-28B-20
TO RELAY R38 (86) SEE P. 13.1


HVAC SYSTEM

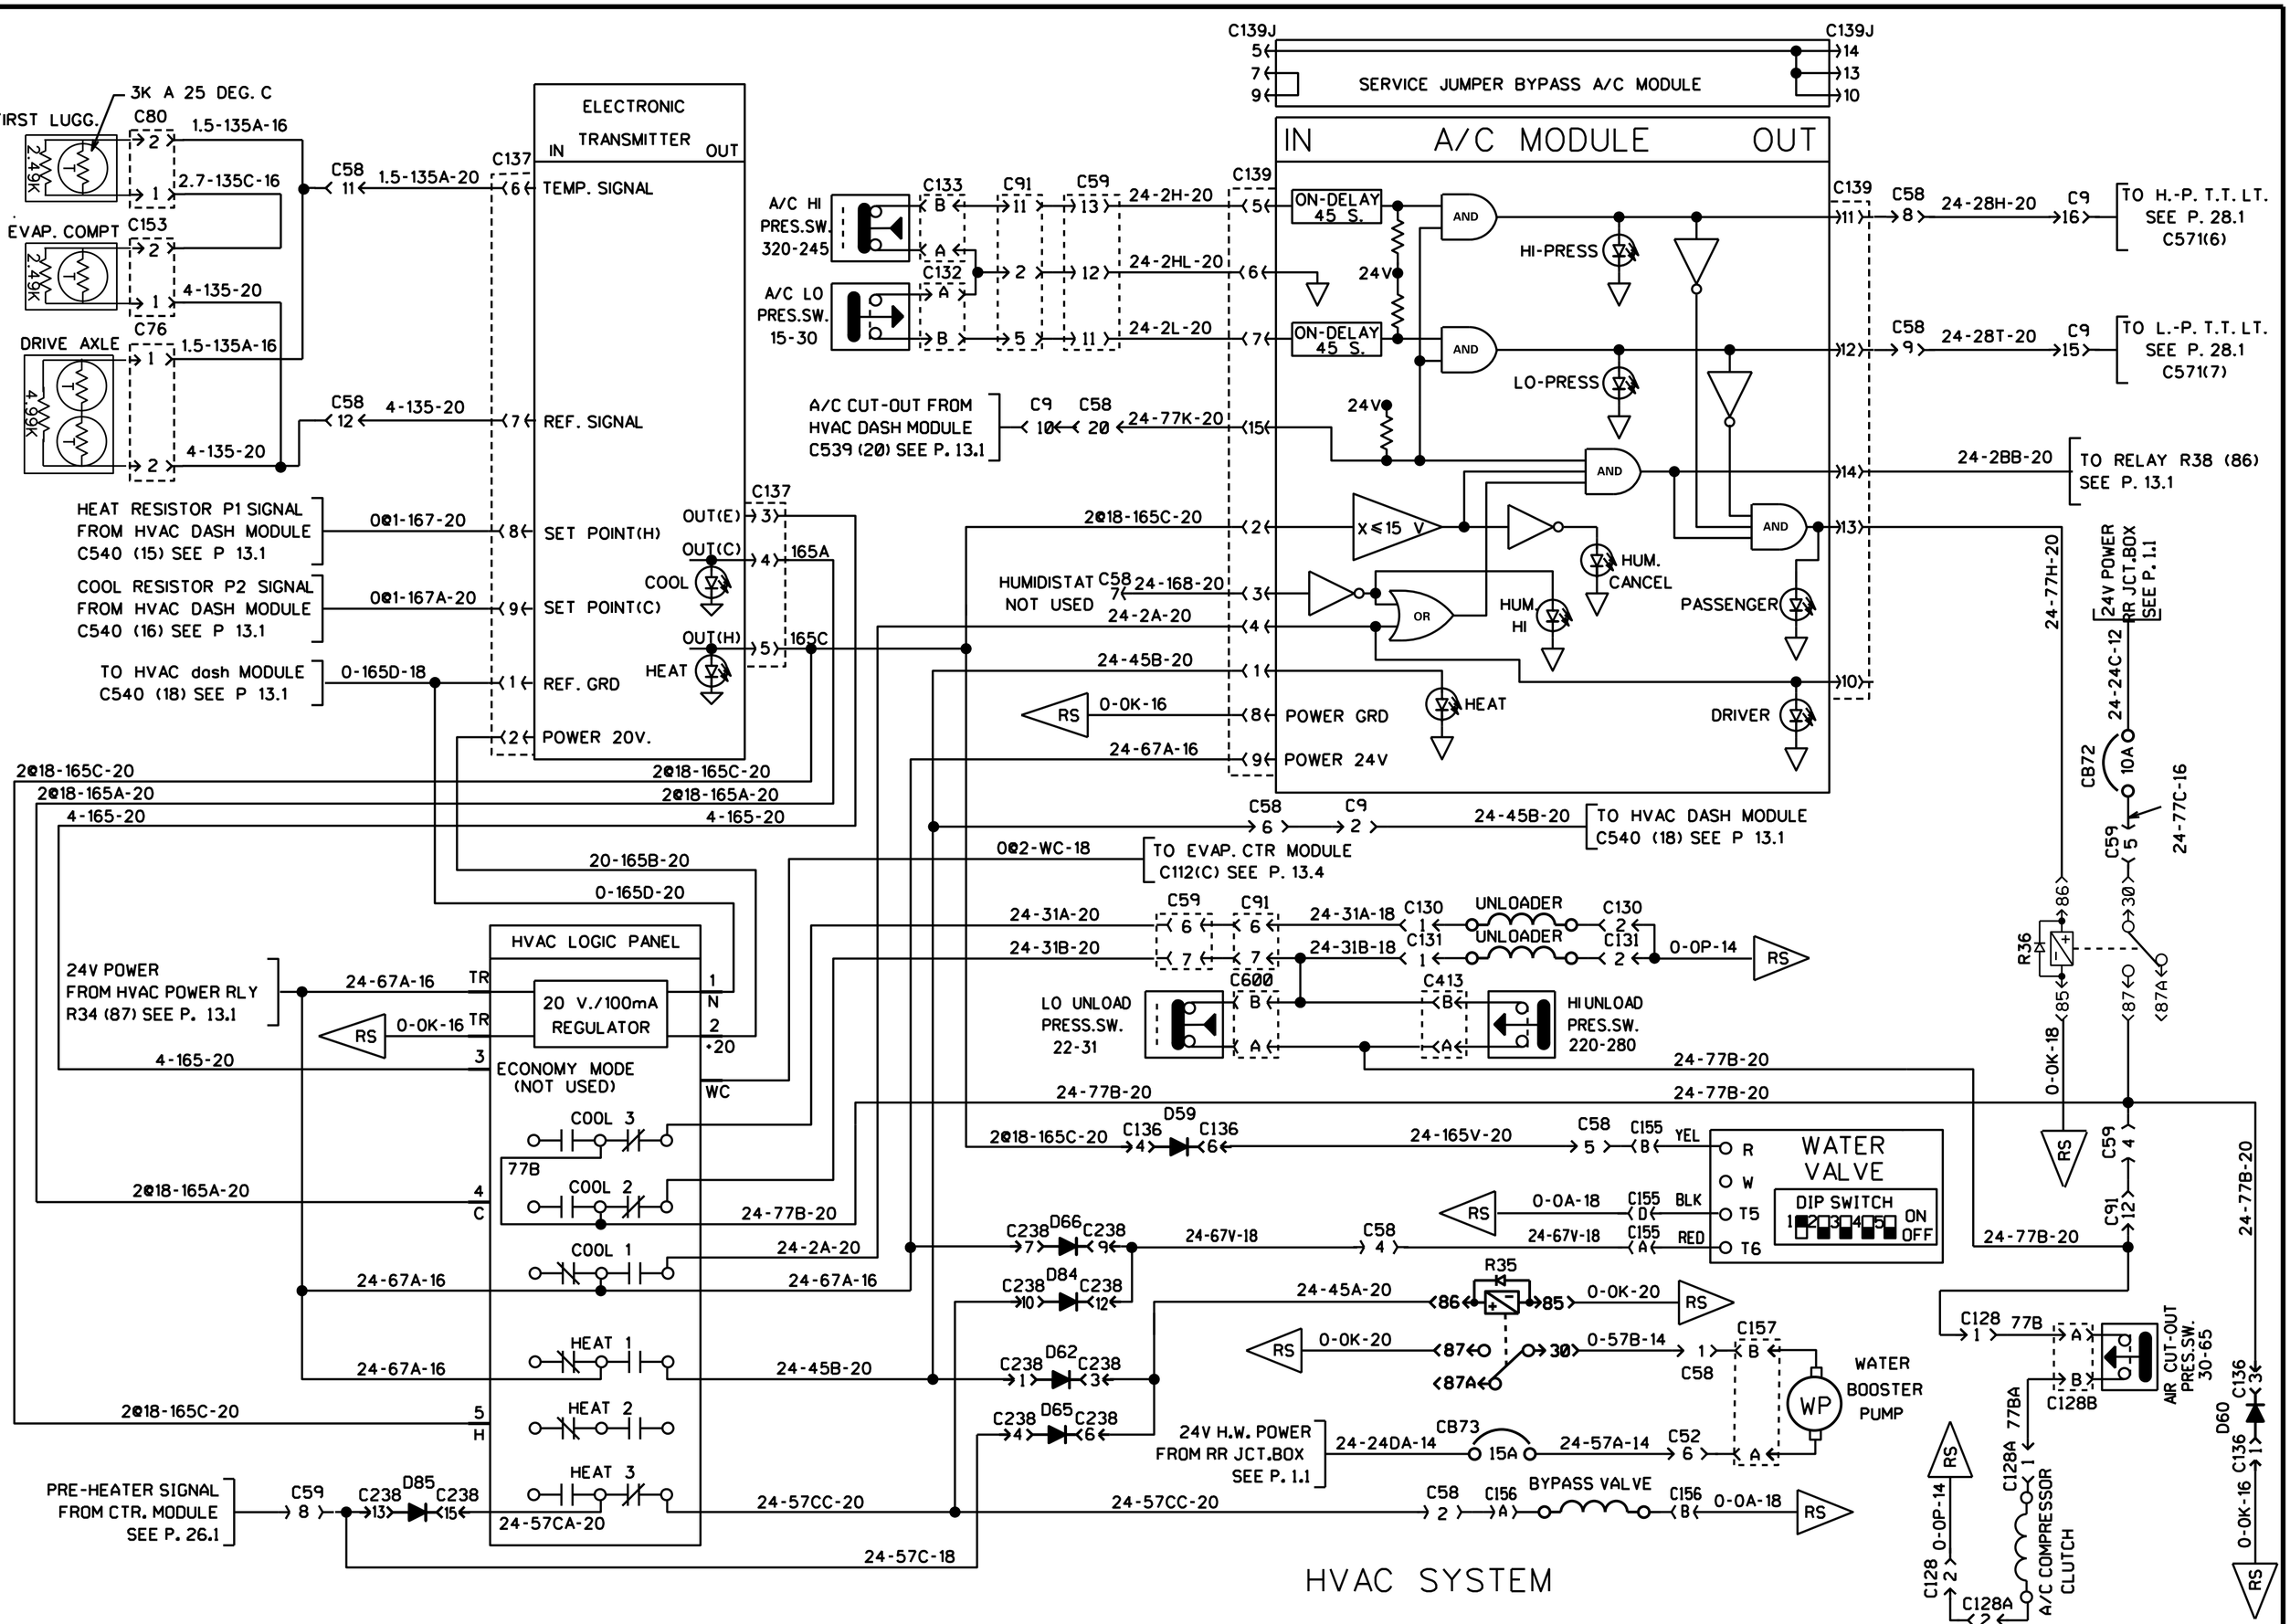
ELECTRONIC TRANSMITTER
IN
OUT
TEMP. SIGNAL
REF. SIGNAL
SET POINT(H)
SET POINT(C)
REF. GRD
POWER 20V.
3K A 25 DEG. C
FIRST LUGG.
EVAP. COMPT
DRIVE AXLE
2.46K
4.96K
C80
C153
C76
C58
C137
1.5-135A-16
2.7-135C-16
4-135-20
1.5-135A-20
HEAT RESISTOR P1 SIGNAL FROM HVAC DASH MODULE C540 (15) SEE P 13.1
COOL RESISTOR P2 SIGNAL FROM HVAC DASH MODULE C540 (16) SEE P 13.1
TO HVAC dash MODULE C540 (18) SEE P 13.1
0@1-167-20
0@1-167A-20
0-165D-18
OUT(E)
OUT(C)
OUT(H)
COOL
HEAT
165A
165C
2@18-165C-20
2@18-165A-20
4-165-20
20-165B-20
0-165D-20
HVAC LOGIC PANEL
24V POWER FROM HVAC POWER RLY R34 (87) SEE P. 13.1
24-67A-16
20 V./100mA REGULATOR
RS
0-0K-16
TR
N
2
20
WC
ECONOMY MODE (NOT USED)
COOL 3
COOL 2
COOL 1
HEAT 1
HEAT 2
HEAT 3
77B
C
H
PRE-HEATER SIGNAL FROM CTR. MODULE SEE P. 26.1
C59
C238
D85
24-57CA-20
24-57CC-20
24-57C-18
C139J
SERVICE JUMPER BYPASS A/C MODULE
IN
A/C MODULE
OUT
C139
ON-DELAY 45 S.
AND
24V
HI-PRESS
LO-PRESS
A/C HI PRES.SW. 320-245
A/C LO PRES.SW. 15-30
C133
C132
C91
C59
24-2H-20
24-2HL-20
24-2L-20
A/C CUT-OUT FROM HVAC DASH MODULE C539 (20) SEE P. 13.1
C9
C58
24-77K-20
X≤15 V
HUMIDISTAT NOT USED
24-168-20
24-2A-20
OR
HUM. HI
HUM. CANCEL
PASSENGER
DRIVER
HEAT
POWER GRD
POWER 24V
0-0K-16
24-45B-20
24-67A-16
2@18-165C-20
24-2BB-20
TO RELAY R38 (86) SEE P. 13.1
TO H.-P. T.T. LT. SEE P. 28.1 C571(6)
TO L.-P. T.T. LT. SEE P. 28.1 C571(7)
24-28H-20
24-28T-20
24-77H-20
24V POWER RR JCT.BOX SEE P. 1.1
24-24C-12
CB72
10A
24-77C-16
TO HVAC DASH MODULE C540 (18) SEE P 13.1
TO EVAP. CTR MODULE C112(C) SEE P. 13.4
0@2-WC-18
C130
C131
UNLOADER
24-31A-18
24-31B-18
0-0P-14
LO UNLOAD PRESS.SW. 22-31
HI UNLOAD PRES.SW. 220-280
C600
C413
24-77B-20
D59
C136
24-165V-20
YEL
BLK
RED
WATER VALVE
DIP SWITCH
ON
OFF
0-0A-18
24-67V-18
T5
T6
D66
D84
D62
D65
24-45A-20
R35
0-0K-20
0-57B-14
C157
C52
WATER BOOSTER PUMP
WP
24-24DA-14
CB73
15A
24-57A-14
24V H.W. POWER FROM RR JCT.BOX SEE P. 1.1
BYPASS VALVE
C156
C128
C128A
C128B
A/C COMPRESSOR CLUTCH
AIR CUT-OUT PRESS.SW. 30-65
R36
D60
0-0K-18
0-0K-16
HVAC SYSTEM

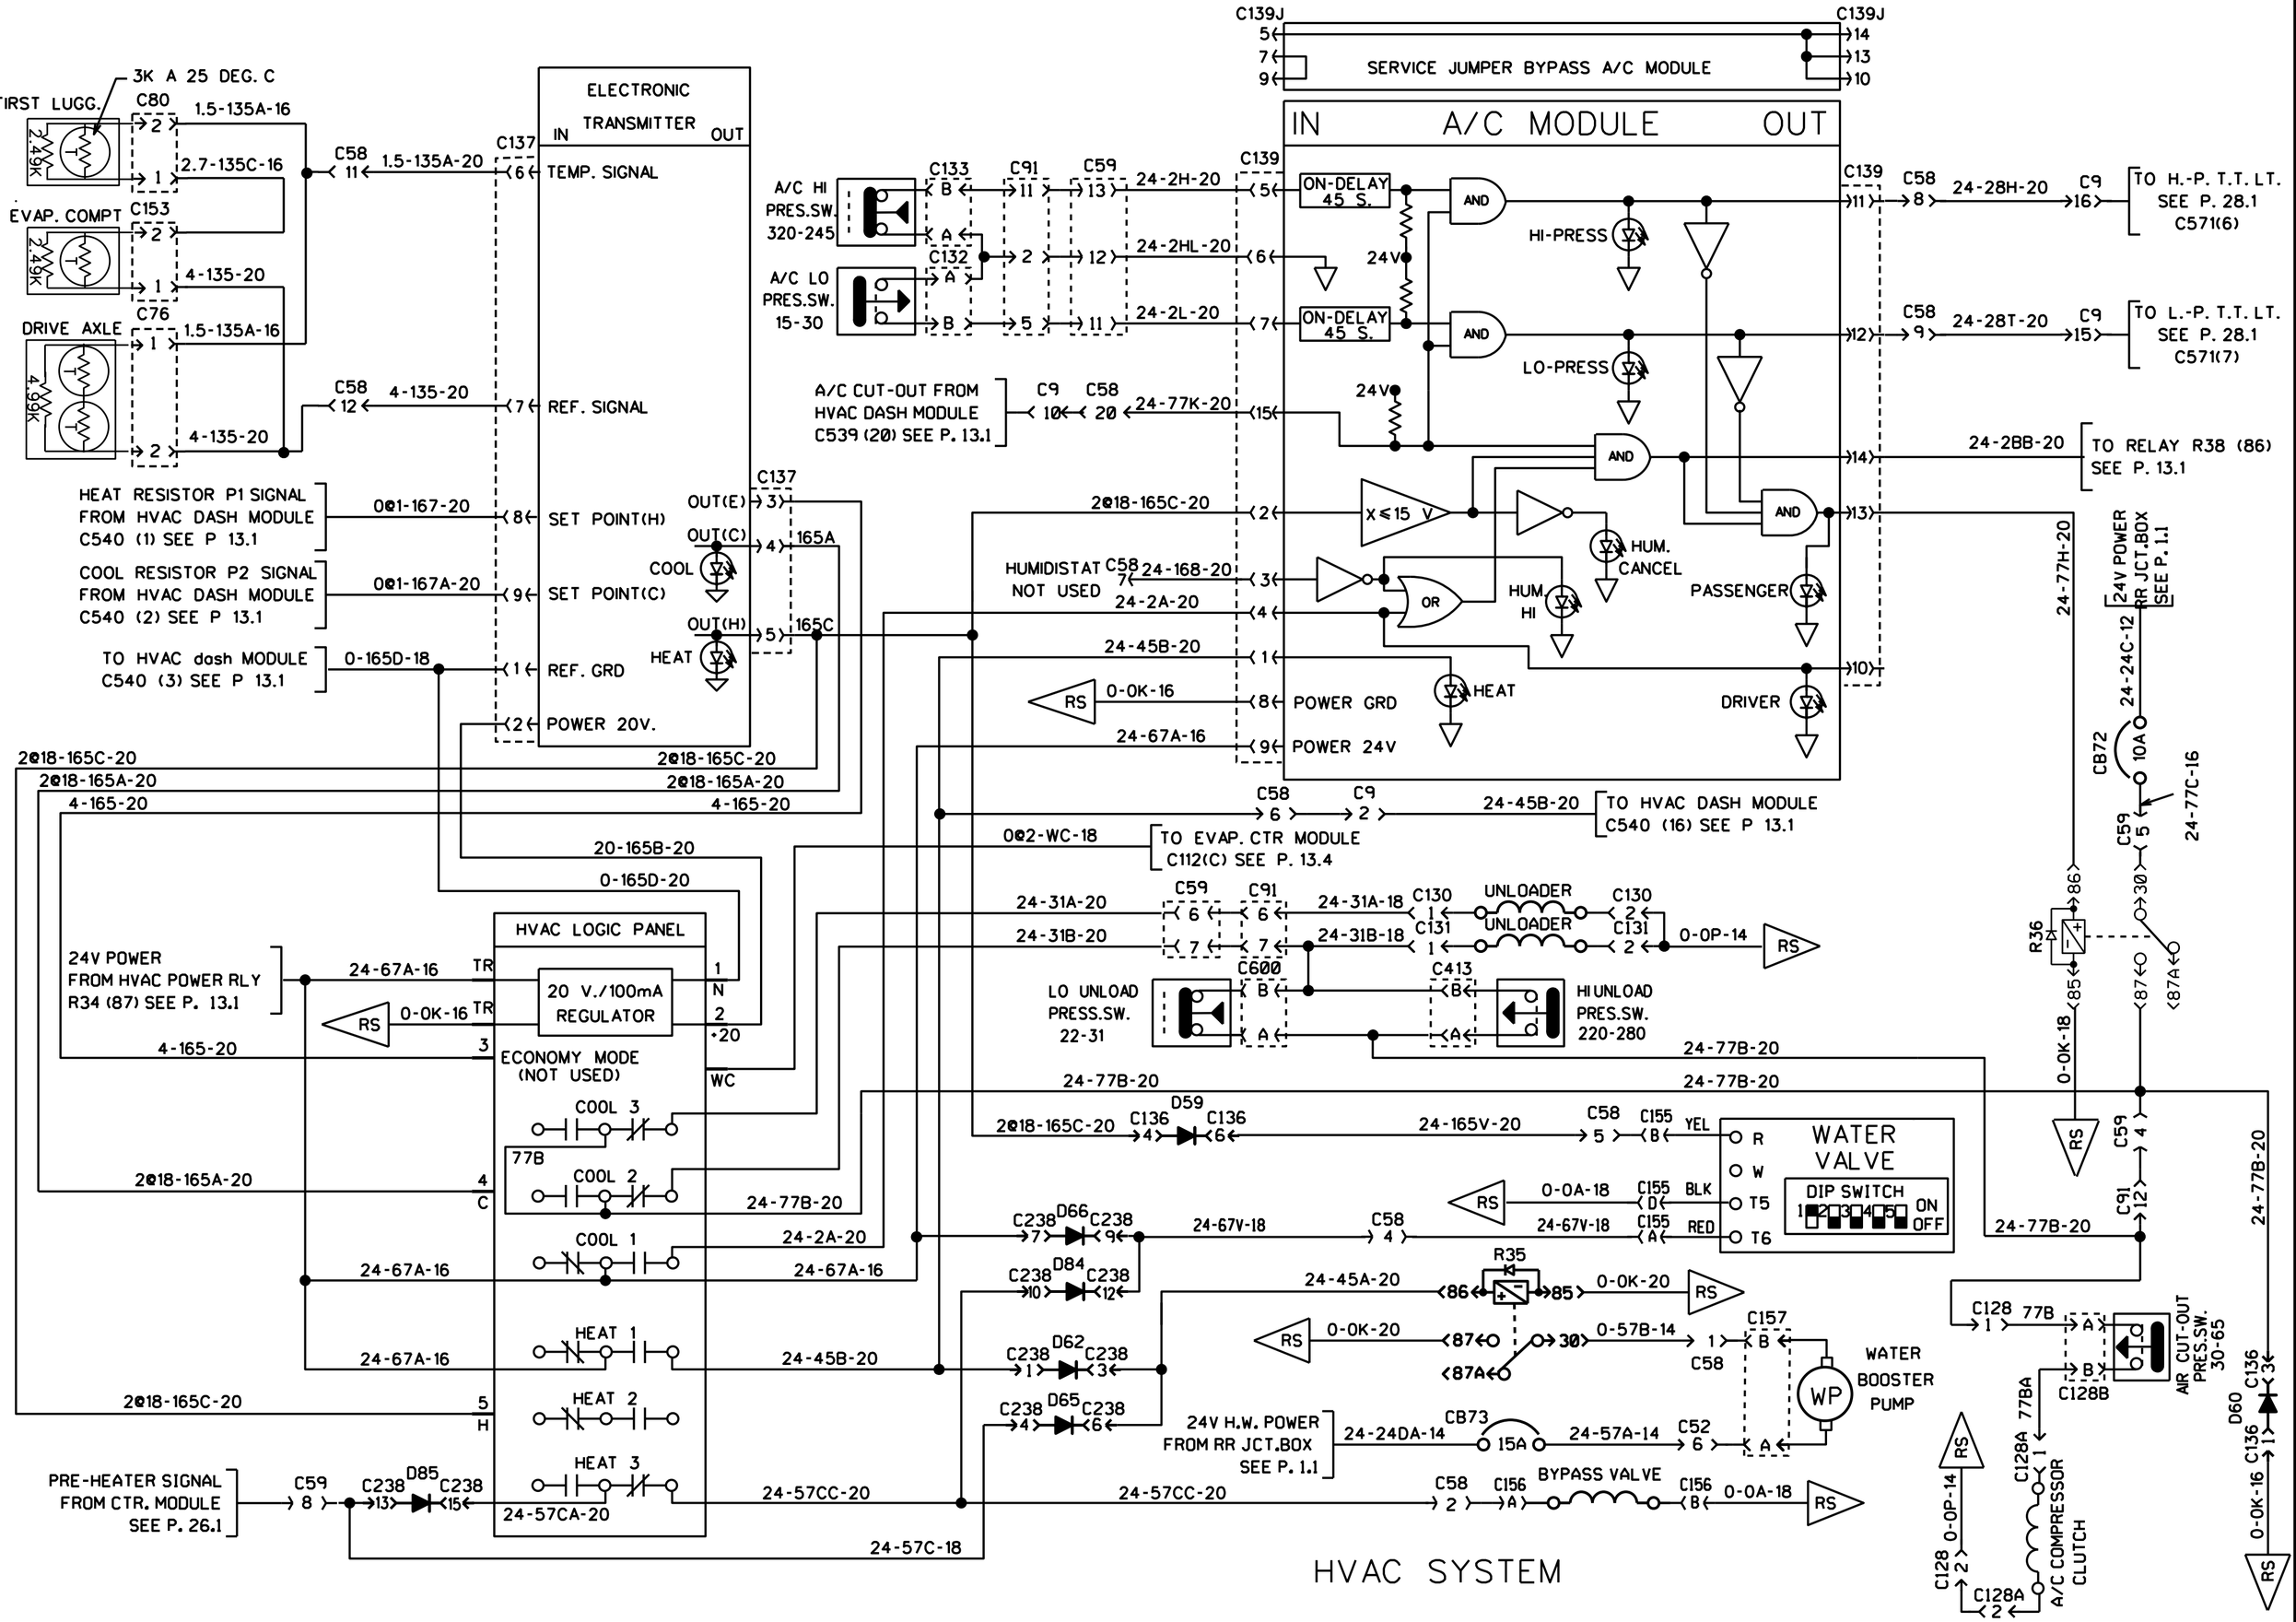

3K A 25 DEG. C
FIRST LUGG.
C80
1.5-135A-16
2.7-135C-16
EVAP. COMPT
C153
4-135-20
DRIVE AXLE
C76
1.5-135A-16
4-135-20
C58
11
1.5-135A-20
C137
ELECTRONIC
TRANSMITTER
IN
OUT
6
TEMP. SIGNAL
C58
12
4-135-20
7
REF. SIGNAL
HEAT RESISTOR P1 SIGNAL
FROM HVAC DASH MODULE
C540 (1) SEE P 13.1
0@1-167-20
8
SET POINT(H)
COOL RESISTOR P2 SIGNAL
FROM HVAC DASH MODULE
C540 (2) SEE P 13.1
0@1-167A-20
9
SET POINT(C)
TO HVAC dash MODULE
C540 (3) SEE P 13.1
0-165D-18
1
REF. GRD
2
POWER 20V.
OUT(E)
OUT(C)
OUT(H)
COOL
HEAT
C137
3
4
5
165A
165C
2@18-165C-20
2@18-165A-20
4-165-20
20-165B-20
0-165D-20
HVAC LOGIC PANEL
24V POWER
FROM HVAC POWER RLY
R34 (87) SEE P. 13.1
24-67A-16
TR
20 V./100mA
REGULATOR
1
N
2
+20
WC
RS
0-0K-16
ECONOMY MODE
(NOT USED)
3
COOL 3
COOL 2
COOL 1
HEAT 1
HEAT 2
HEAT 3
77B
4
C
5
H
PRE-HEATER SIGNAL
FROM CTR. MODULE
SEE P. 26.1
C59
8
C238
D85
13
15
24-57CA-20
24-57C-18
24-57CC-20
C139J
5
7
9
SERVICE JUMPER BYPASS A/C MODULE
14
13
10
IN
A/C MODULE
OUT
C139
A/C HI
PRES.SW.
320-245
A/C LO
PRES.SW.
15-30
C133
C132
C91
C59
24-2H-20
24-2HL-20
24-2L-20
ON-DELAY
45 S.
24V
AND
HI-PRESS
LO-PRESS
A/C CUT-OUT FROM
HVAC DASH MODULE
C539 (20) SEE P. 13.1
C9
C58
10
20
24-77K-20
15
24-2BB-20
TO RELAY R38 (86)
SEE P. 13.1
2@18-165C-20
X≤15 V
HUMIDISTAT
NOT USED
24-168-20
24-2A-20
OR
HUM.
HI
HUM.
CANCEL
PASSENGER
DRIVER
HEAT
24-45B-20
RS
0-0K-16
POWER GRD
POWER 24V
24-67A-16
C58
6
C9
2
24-45B-20
TO HVAC DASH MODULE
C540 (16) SEE P 13.1
0@2-WC-18
TO EVAP. CTR MODULE
C112(C) SEE P. 13.4
24-31A-20
24-31B-20
C59
C91
24-31A-18
24-31B-18
C130
C131
UNLOADER
0-0P-14
LO UNLOAD
PRESS.SW.
22-31
C600
C413
HI UNLOAD
PRES.SW.
220-280
24-77B-20
C136
D59
24-165V-20
C155
YEL
BLK
RED
WATER
VALVE
R
W
T5
T6
DIP SWITCH
ON
OFF
0-0A-18
24-67V-18
C238
D66
D84
D62
D65
C128
77B
C128B
AIR CUT-OUT
PRES.SW.
30-65
R35
24-45A-20
0-0K-20
0-57B-14
C157
WATER
BOOSTER
PUMP
WP
24-24DA-14
CB73
15A
24-57A-14
C52
BYPASS VALVE
C156
C128A
A/C COMPRESSOR
CLUTCH
0-0P-14
24-77H-20
24V POWER
RR JCT.BOX
SEE P. 1.1
24-24C-12
CB72
10A
24-77C-16
R36
86
85
87
87A
30
0-0K-18
0-0K-16
D60
HVAC SYSTEM

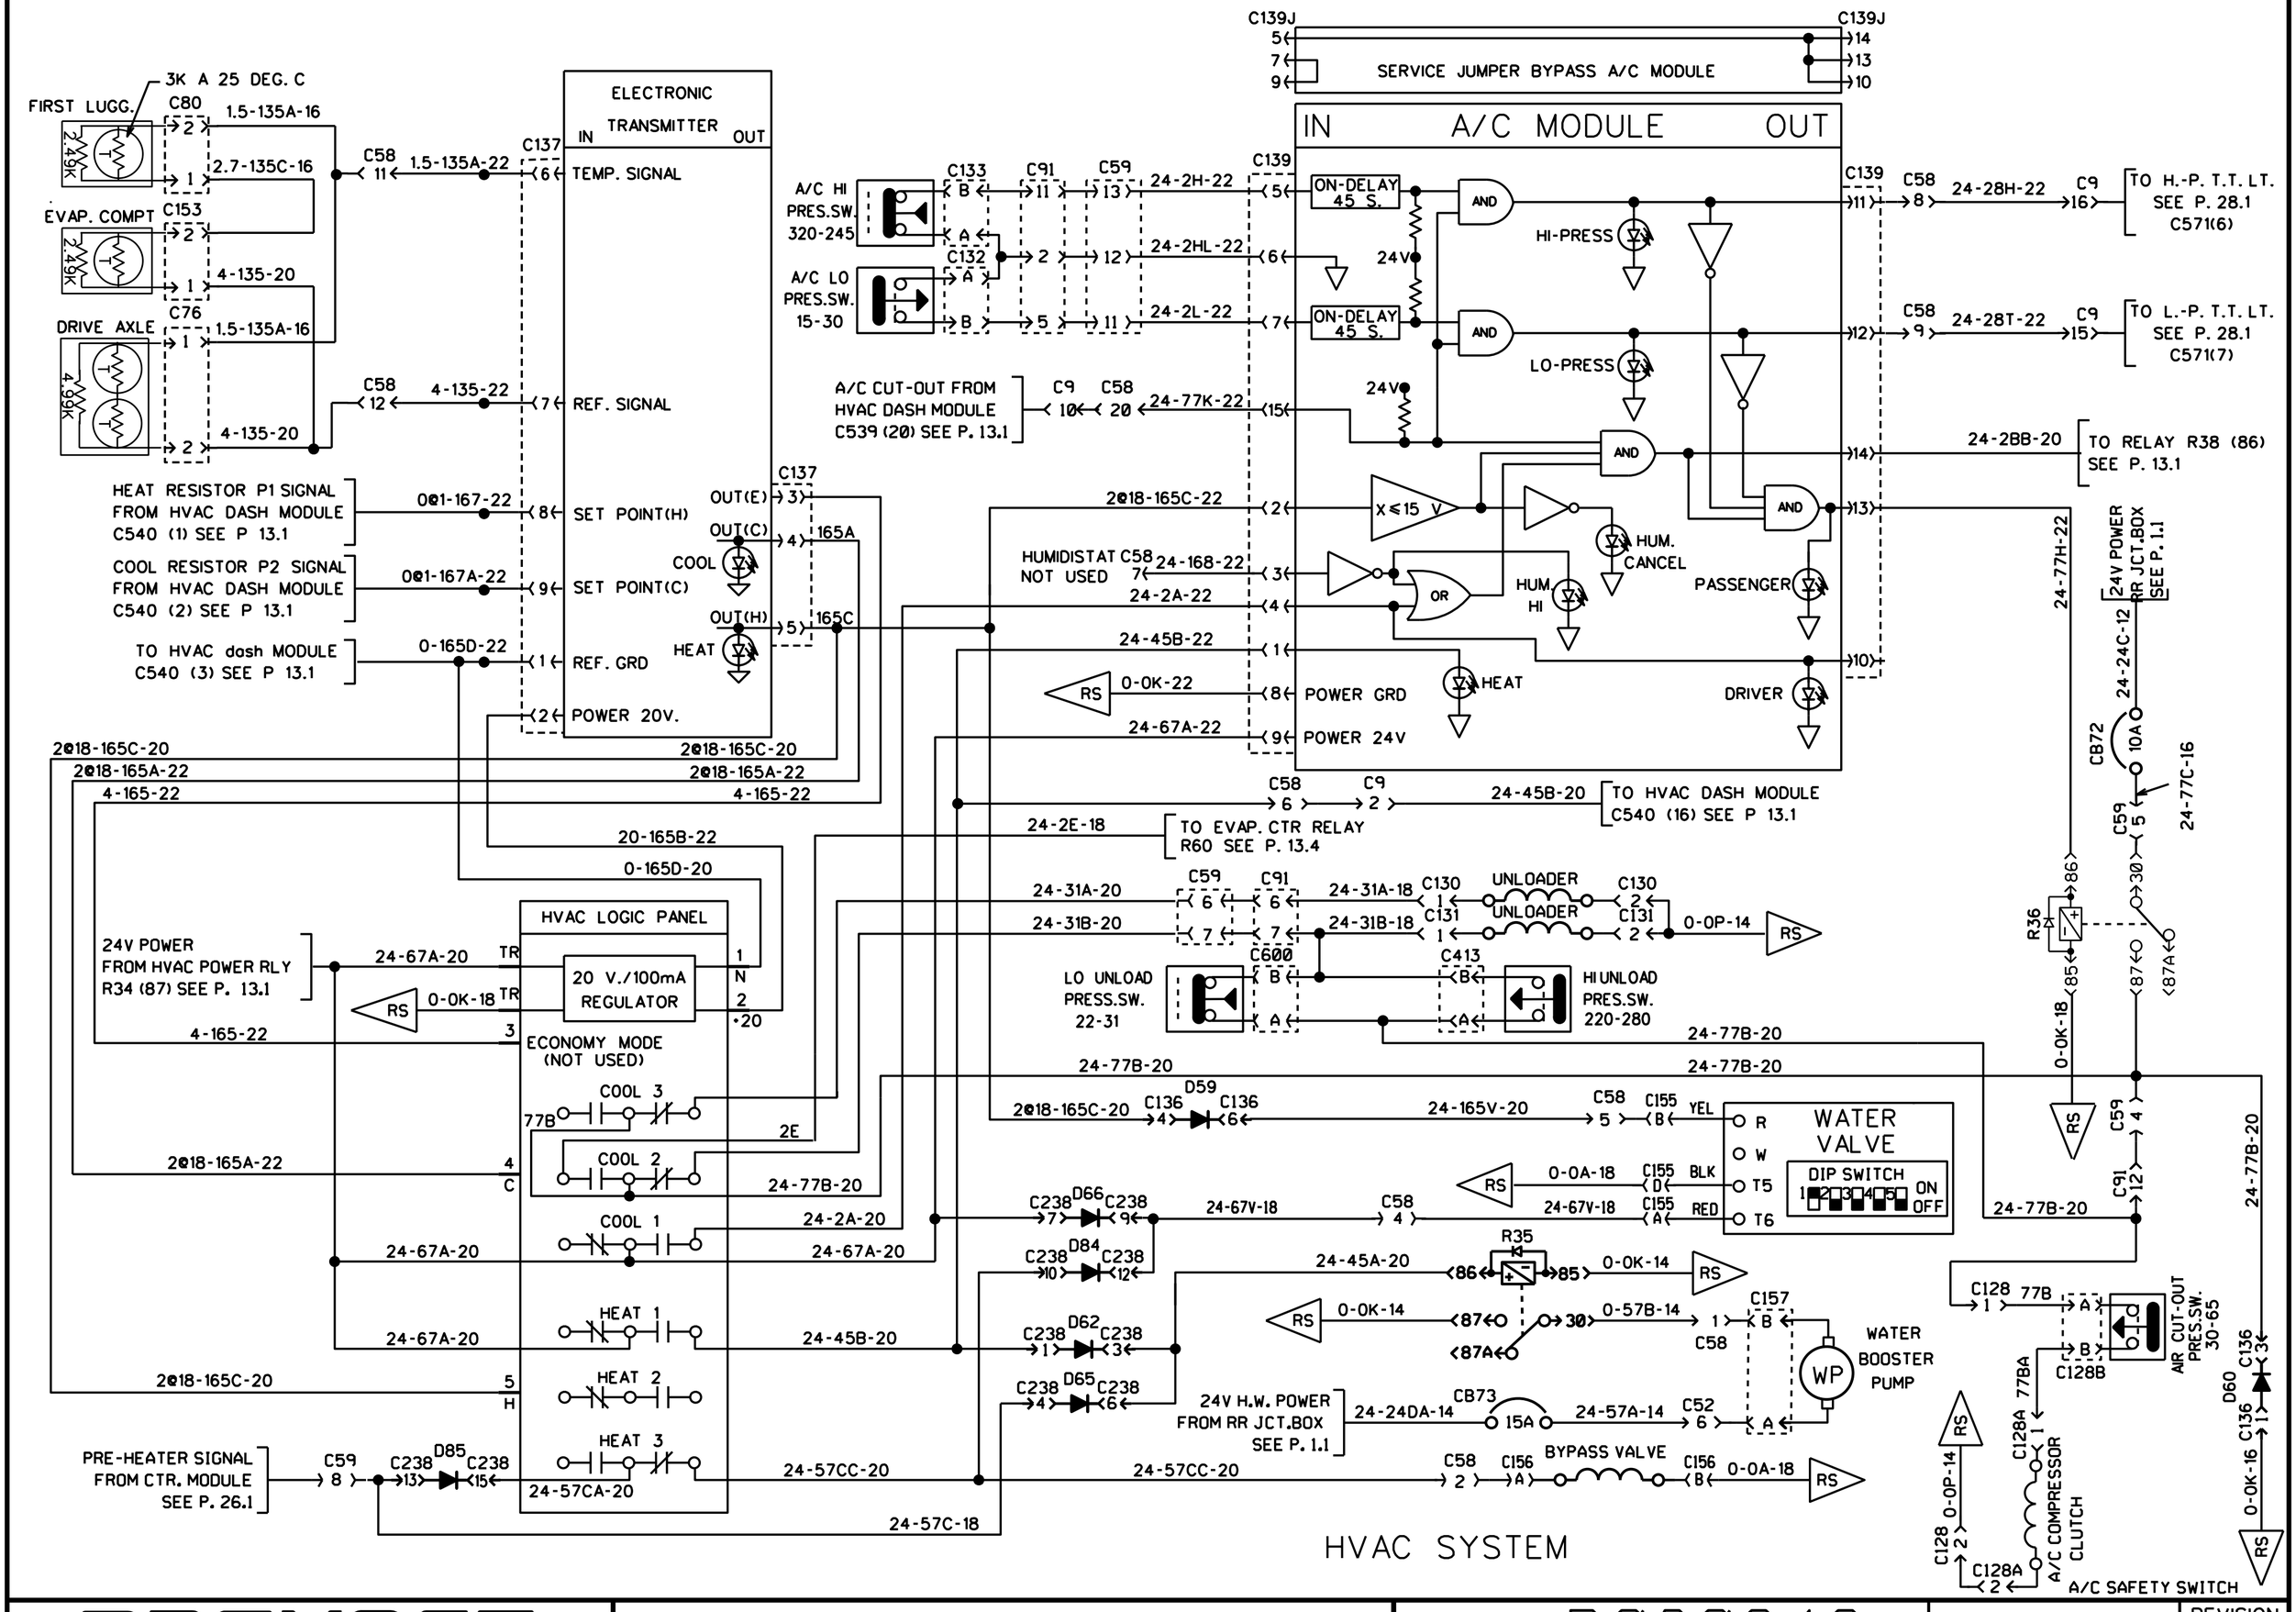

3K A 25 DEG. C
FIRST LUGG.
C80
1.5-135A-16
2.7-135C-16
EVAP. COMPT
C153
4-135-20
DRIVE AXLE
C76
1.5-135A-16
4-135-20
C58
11
1.5-135A-22
C58
12
4-135-22
C137
ELECTRONIC
TRANSMITTER
IN
OUT
6 TEMP. SIGNAL
7 REF. SIGNAL
8 SET POINT(H)
9 SET POINT(C)
1 REF. GRD
2 POWER 20V.
OUT(E) 3
OUT(C) 4
OUT(H) 5
COOL
HEAT
165A
165C
HEAT RESISTOR P1 SIGNAL
FROM HVAC DASH MODULE
C540 (1) SEE P 13.1
0@1-167-22
COOL RESISTOR P2 SIGNAL
FROM HVAC DASH MODULE
C540 (2) SEE P 13.1
0@1-167A-22
TO HVAC dash MODULE
C540 (3) SEE P 13.1
0-165D-22
2@18-165C-20
2@18-165A-22
4-165-22
20-165B-22
0-165D-20
HVAC LOGIC PANEL
24V POWER
FROM HVAC POWER RLY
R34 (87) SEE P. 13.1
24-67A-20
TR
20 V./100mA
REGULATOR
1
N
2
•20
RS
0-0K-18
ECONOMY MODE
(NOT USED)
3
4-165-22
COOL 3
COOL 2
COOL 1
HEAT 1
HEAT 2
HEAT 3
77B
2E
24-77B-20
24-2A-20
24-67A-20
24-45B-20
24-57CA-20
24-57CC-20
24-57C-18
2@18-165A-22
4
C
2@18-165C-20
5
H
PRE-HEATER SIGNAL
FROM CTR. MODULE
SEE P. 26.1
C59
8
C238
D85
13
15
C139J
5
7
9
SERVICE JUMPER BYPASS A/C MODULE
14
13
10
IN
A/C MODULE
OUT
C139
ON-DELAY
45 S.
24V
AND
HI-PRESS
LO-PRESS
X≤15 V
OR
HUM.
CANCEL
HUM.
HI
PASSENGER
DRIVER
HEAT
POWER GRD
POWER 24V
A/C HI
PRES.SW.
320-245
A/C LO
PRES.SW.
15-30
C133
C91
C59
C132
24-2H-22
24-2HL-22
24-2L-22
A/C CUT-OUT FROM
HVAC DASH MODULE
C539 (20) SEE P. 13.1
C9
10
C58
20
24-77K-22
HUMIDISTAT
NOT USED
C58
7
24-168-22
2@18-165C-22
24-2A-22
24-45B-22
RS
0-0K-22
24-67A-22
C58
11
24-28H-22
C9
16
TO H.-P. T.T. LT.
SEE P. 28.1
C571(6)
C58
9
24-28T-22
C9
15
TO L.-P. T.T. LT.
SEE P. 28.1
C571(7)
24-28B-20
TO RELAY R38 (86)
SEE P. 13.1
24-77H-22
24V POWER
RR JCT.BOX
SEE P. 1.1
24-24C-12
CB72
10A
24-77C-16
C58
6
C9
2
24-45B-20
TO HVAC DASH MODULE
C540 (16) SEE P 13.1
24-2E-18
TO EVAP. CTR RELAY
R60 SEE P. 13.4
C59
C91
24-31A-20
24-31B-20
C130
C131
UNLOADER
24-31A-18
24-31B-18
0-0P-14
C600
C413
LO UNLOAD
PRESS.SW.
22-31
HI UNLOAD
PRES.SW.
220-280
24-77B-20
D59
C136
2@18-165C-20
24-165V-20
C155
YEL
R
W
T5
T6
WATER
VALVE
DIP SWITCH
ON
OFF
0-0A-18
BLK
RED
C238
D66
D84
D62
D65
24-67V-18
24-45A-20
R35
86
85
87
87A
30
0-0K-14
0-57B-14
C157
C58
WP
WATER
BOOSTER
PUMP
24V H.W. POWER
FROM RR JCT.BOX
SEE P. 1.1
24-24DA-14
CB73
15A
24-57A-14
C52
BYPASS VALVE
C156
0-0A-18
R36
0-0K-18
C59
4
C91
12
24-77B-20
C128
77B
C128B
AIR CUT-OUT
PRES.SW.
30-65
C128A
77BA
A/C COMPRESSOR
CLUTCH
C128
0-0P-14
C128A
A/C SAFETY SWITCH
D60
C136
0-0K-16


HVAC SYSTEM

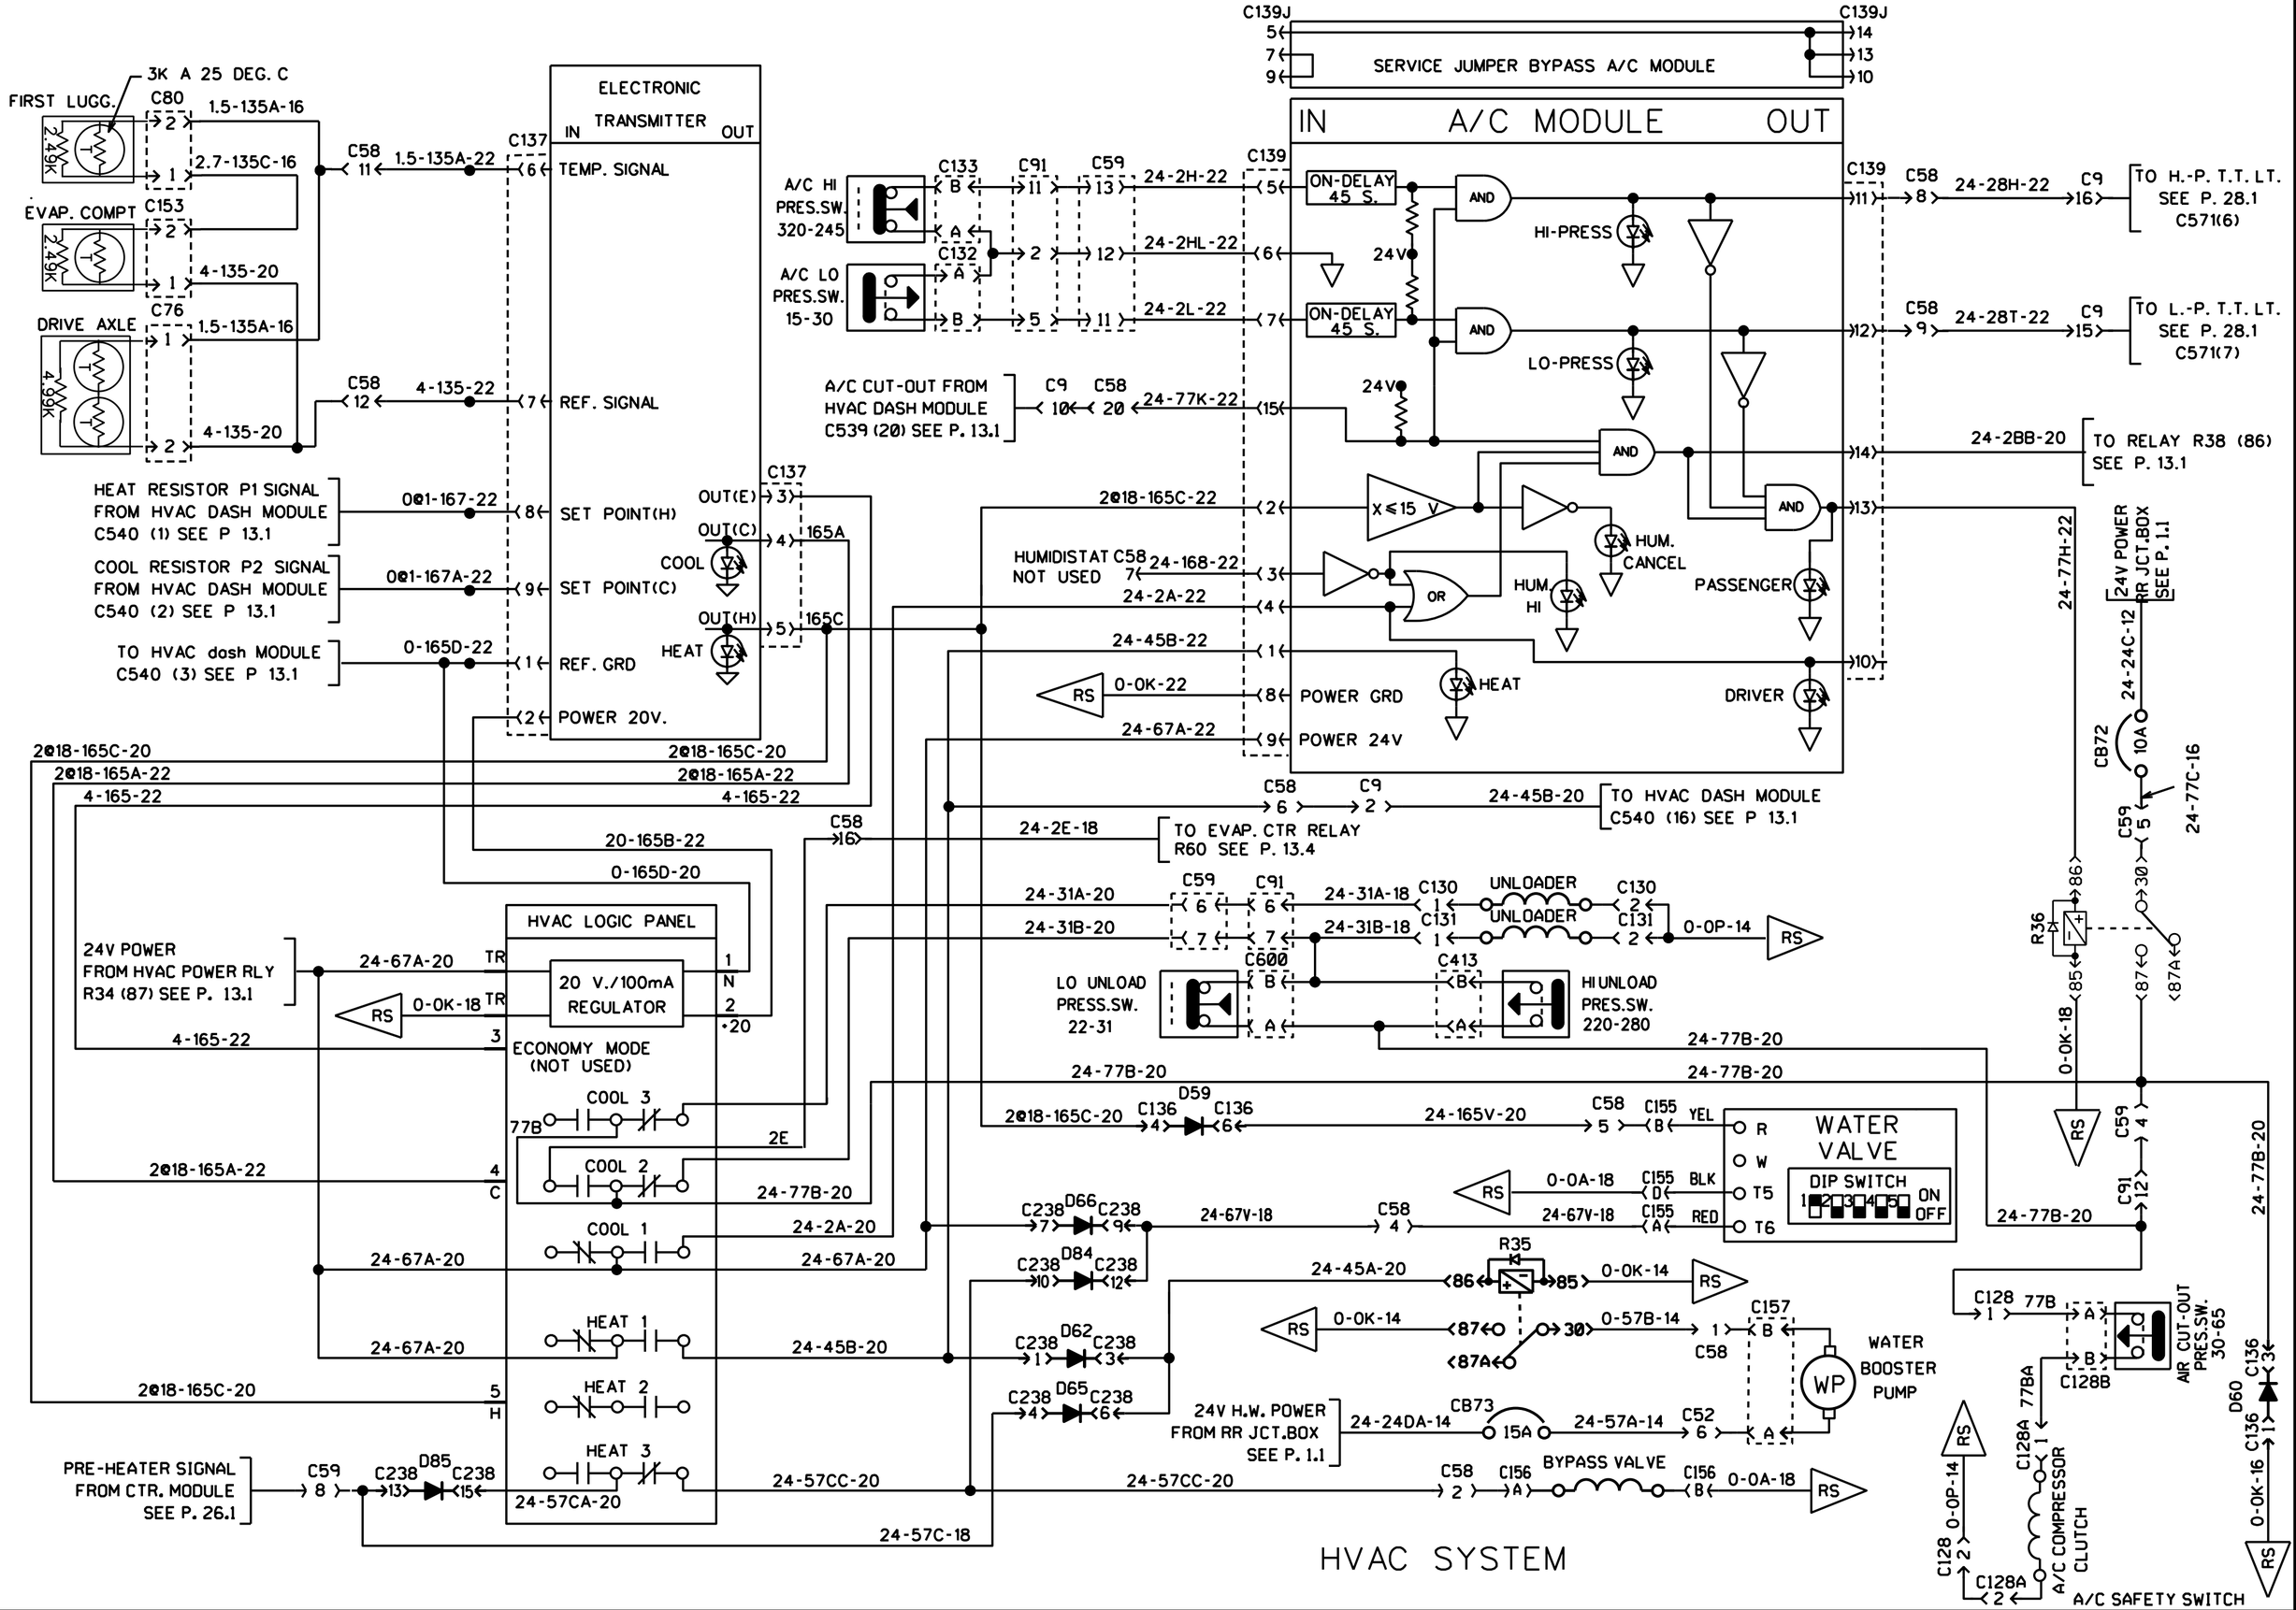
3K A 25 DEG. C
FIRST LUGG.
2.49K
C80
1.5-135A-16
2.7-135C-16
EVAP. COMPT
C153
4-135-20
DRIVE AXLE
C76
4.99K
C58
1.5-135A-22
C137
ELECTRONIC TRANSMITTER
IN
OUT
TEMP. SIGNAL
4-135-22
REF. SIGNAL
HEAT RESISTOR P1 SIGNAL FROM HVAC DASH MODULE C540 (1) SEE P 13.1
0@1-167-22
SET POINT(H)
COOL RESISTOR P2 SIGNAL FROM HVAC DASH MODULE C540 (2) SEE P 13.1
0@1-167A-22
SET POINT(C)
TO HVAC dash MODULE C540 (3) SEE P 13.1
0-165D-22
REF. GRD
POWER 20V.
OUT(E)
OUT(C)
OUT(H)
COOL
HEAT
165A
165C
2@18-165C-20
2@18-165A-22
4-165-22
20-165B-22
0-165D-20
A/C HI PRES.SW. 320-245
A/C LO PRES.SW. 15-30
C133
C132
C91
C59
24-2H-22
24-2HL-22
24-2L-22
A/C CUT-OUT FROM HVAC DASH MODULE C539 (20) SEE P. 13.1
C9
24-77K-22
C139J
SERVICE JUMPER BYPASS A/C MODULE
C139
IN
A/C MODULE
OUT
ON-DELAY 45 S.
AND
24V
HI-PRESS
LO-PRESS
X≤15 V
OR
HUM. CANCEL
HUM HI
PASSENGER
HEAT
DRIVER
HUMIDISTAT C58 NOT USED
24-168-22
2@18-165C-22
24-2A-22
24-45B-22
RS
0-0K-22
POWER GRD
24-67A-22
POWER 24V
24-28H-22
TO H.-P. T.T. LT. SEE P. 28.1 C571(6)
24-28T-22
TO L.-P. T.T. LT. SEE P. 28.1 C571(7)
24-28B-20
TO RELAY R38 (86) SEE P. 13.1
24-77H-22
24V POWER RR JCT.BOX SEE P. 1.1
CB72
10A
24-24C-12
24-77C-16
C58
C9
24-45B-20
TO HVAC DASH MODULE C540 (16) SEE P 13.1
24-2E-18
TO EVAP. CTR RELAY R60 SEE P. 13.4
HVAC LOGIC PANEL
24V POWER FROM HVAC POWER RLY R34 (87) SEE P. 13.1
24-67A-20
TR
20 V./100mA REGULATOR
0-0K-18
ECONOMY MODE (NOT USED)
COOL 3
COOL 2
COOL 1
HEAT 1
HEAT 2
HEAT 3
77B
2E
C
H
24-77B-20
24-67A-20
24-2A-20
24-45B-20
2@18-165C-20
2@18-165A-22
4-165-22
PRE-HEATER SIGNAL FROM CTR. MODULE SEE P. 26.1
C59
C238
D85
24-57CC-20
24-57CA-20
24-57C-18
C59
C91
24-31A-20
24-31B-20
24-31A-18
24-31B-18
C130
C131
UNLOADER
0-0P-14
C600
C413
LO UNLOAD PRESS.SW. 22-31
HI UNLOAD PRESS.SW. 220-280
D59
C136
24-165V-20
C155
YEL
BLK
RED
WATER VALVE
R
W
T5
T6
DIP SWITCH
ON
OFF
0-0A-18
24-67V-18
D66
D84
D62
D65
R35
24-45A-20
0-0K-14
0-57B-14
C157
WATER BOOSTER PUMP
WP
24-24DA-14
CB73
15A
24-57A-14
C52
24V H.W. POWER FROM RR JCT.BOX SEE P. 1.1
BYPASS VALVE
C156
C128
C128B
AIR CUT-OUT PRESS.SW. 30-65
C128A
A/C COMPRESSOR CLUTCH
A/C SAFETY SWITCH
D60
0-0K-16
R36
86
85
87
87A
30


HVAC SYSTEM

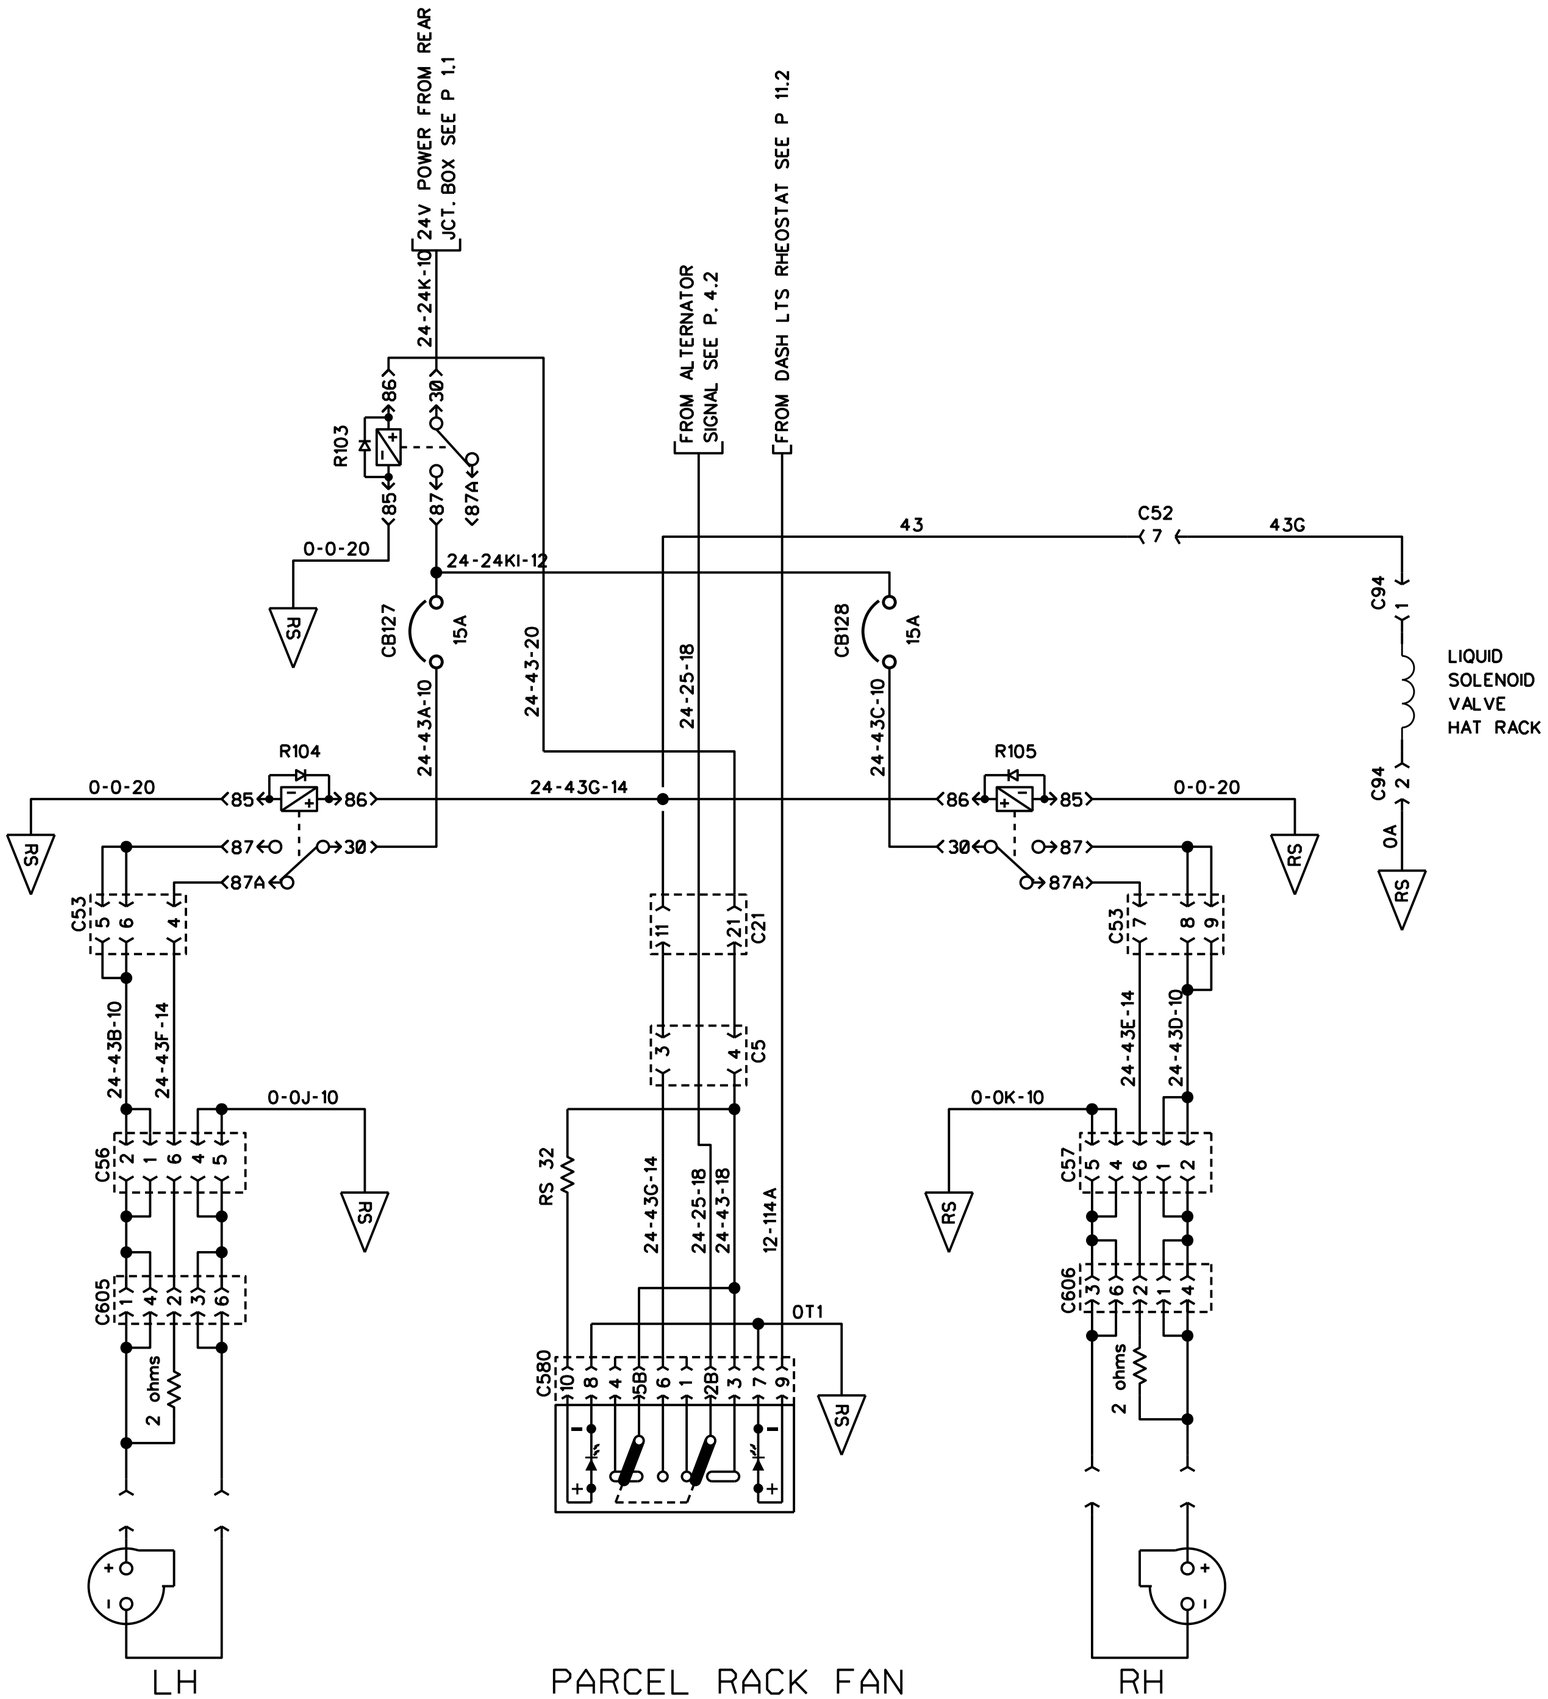
24V POWER FROM REAR JCT. BOX SEE P 1.1
24-24K-10
FROM ALTERNATOR SIGNAL SEE P. 4.2
FROM DASH LTS RHEOSTAT SEE P 11.2
R103
86
30
85
87
87A
0-0-20
RS
24-24KI-12
CB127
15A
24-43A-10
24-43-20
24-25-18
CB128
15A
24-43C-10
43
C52
7
43G
C94
1
LIQUID SOLENOID VALVE HAT RACK
C94
2
OA
R104
R105
24-43G-14
C53
5
6
4
11
21
C21
3
4
C5
7
8
9
24-43B-10
24-43F-14
24-43E-14
24-43D-10
0-0J-10
0-0K-10
C56
2
1
6
4
5
C605
1
4
2
3
6
2 ohms
RS 32
24-43G-14
24-25-18
24-43-18
12-114A
0T1
C580
10
8
4
5B
6
1
2B
3
7
9
C57
5
4
6
1
2
C606
3
6
2
1
4
LH
PARCEL RACK FAN
RH

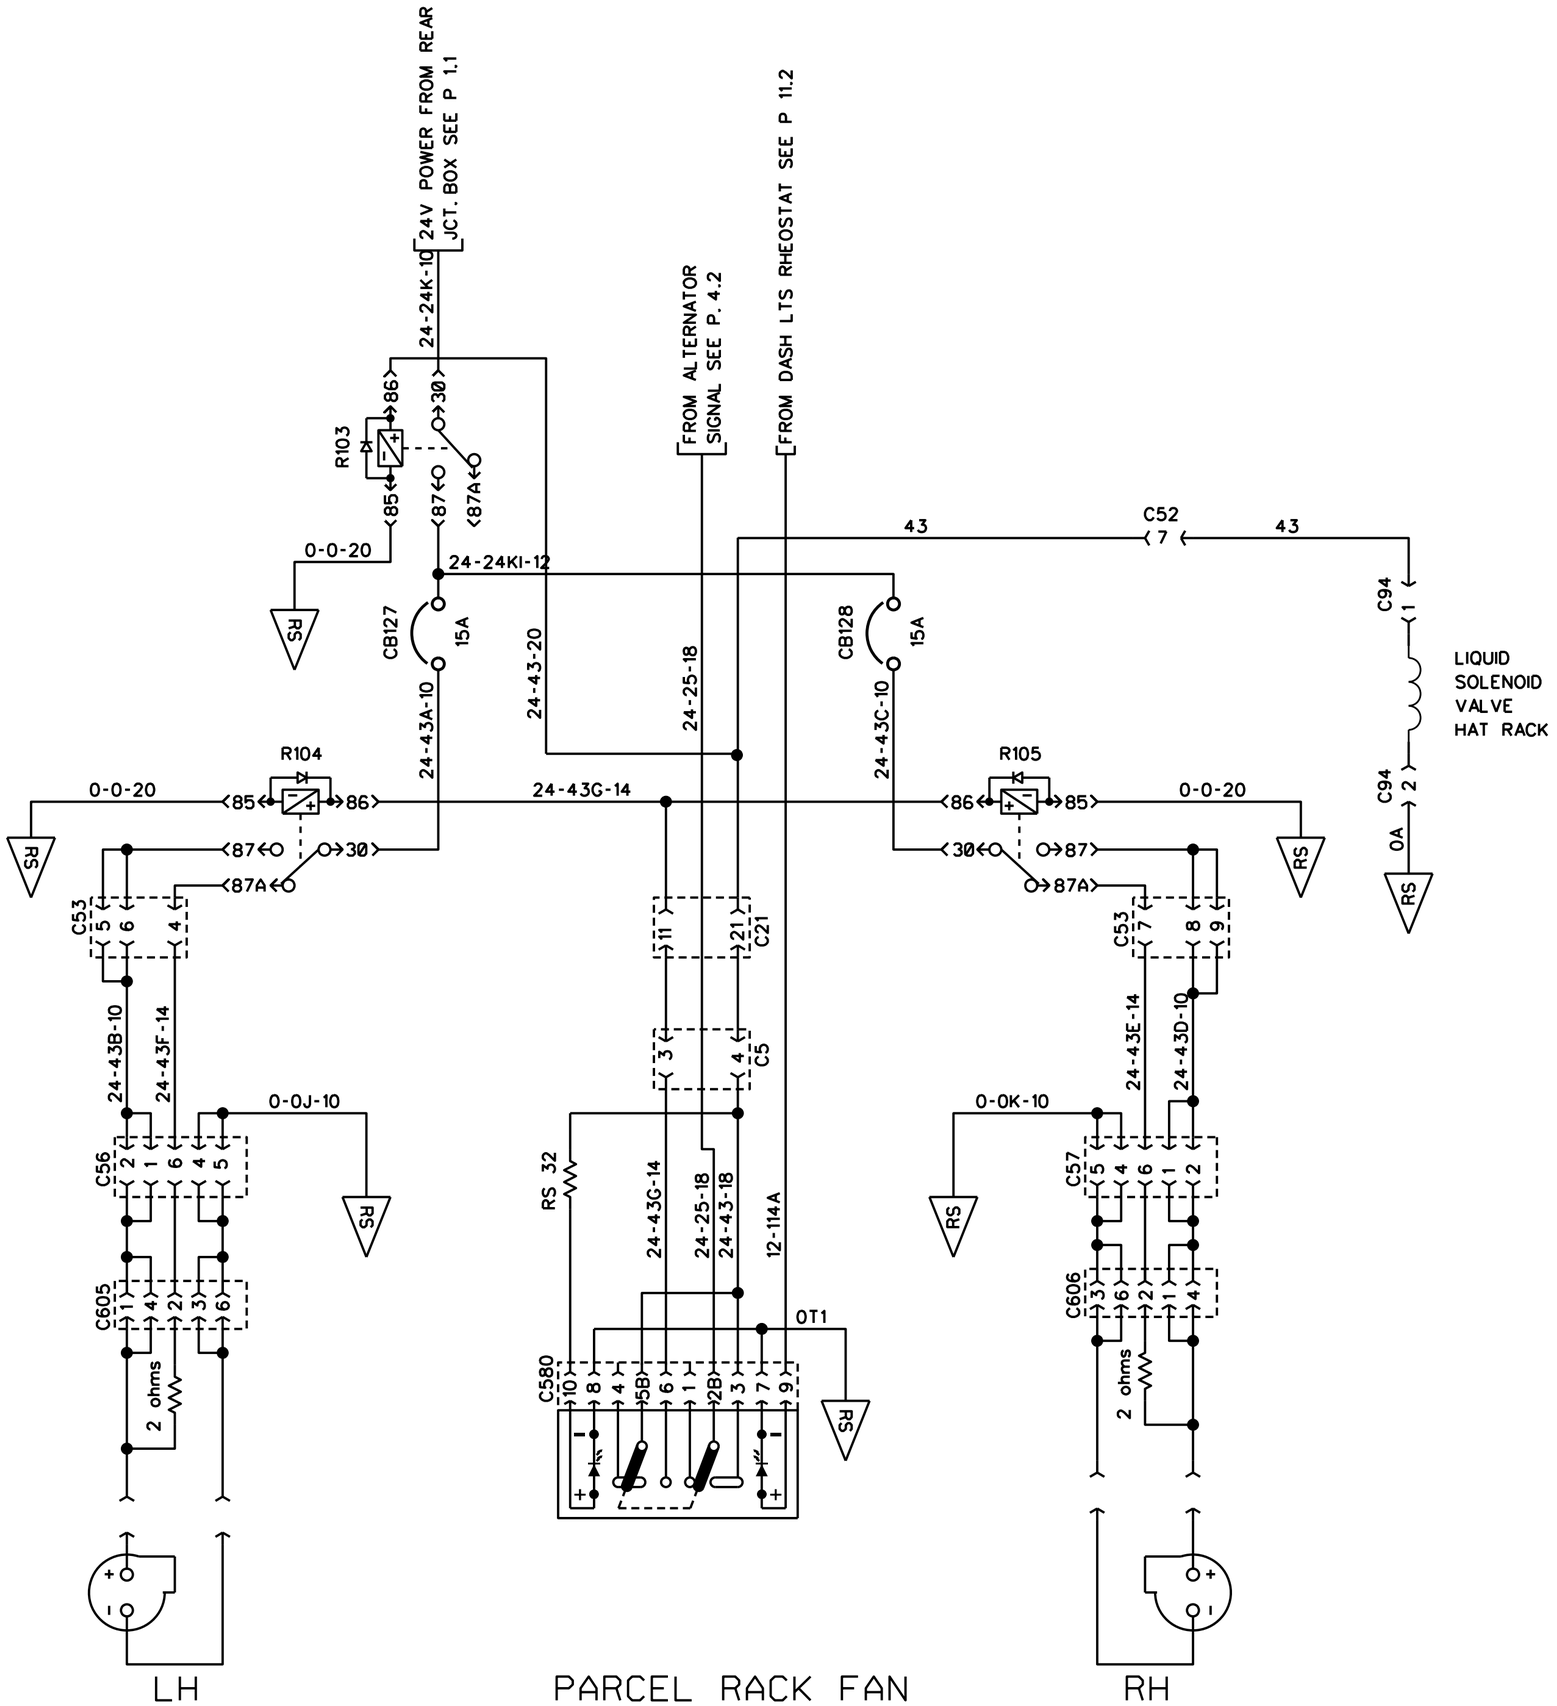

24V POWER FROM REAR JCT. BOX SEE P 1.1
24-24K-10
FROM ALTERNATOR SIGNAL SEE P. 4.2
FROM DASH LTS RHEOSTAT SEE P 11.2
R103
86
30
85
87
87A
0-0-20
24-24KI-12
CB127
15A
CB128
15A
24-43A-10
24-43-20
24-25-18
24-43C-10
43
C52
7
43
C94
1
LIQUID SOLENOID VALVE HAT RACK
C94
2
0A
R104
R105
24-43G-14
C53
5
6
4
11
21
C21
3
4
C5
C53
7
8
9
24-43B-10
24-43F-14
24-43E-14
24-43D-10
0-0J-10
0-0K-10
C56
2
1
6
4
5
C57
5
4
6
1
2
C605
1
4
2
3
6
C606
3
6
2
1
4
2 ohms
2 ohms
RS 32
24-43G-14
24-25-18
24-43-18
12-114A
0T1
C580
10
8
4
5B
6
1
2B
3
7
9
RS
LH
PARCEL RACK FAN
RH

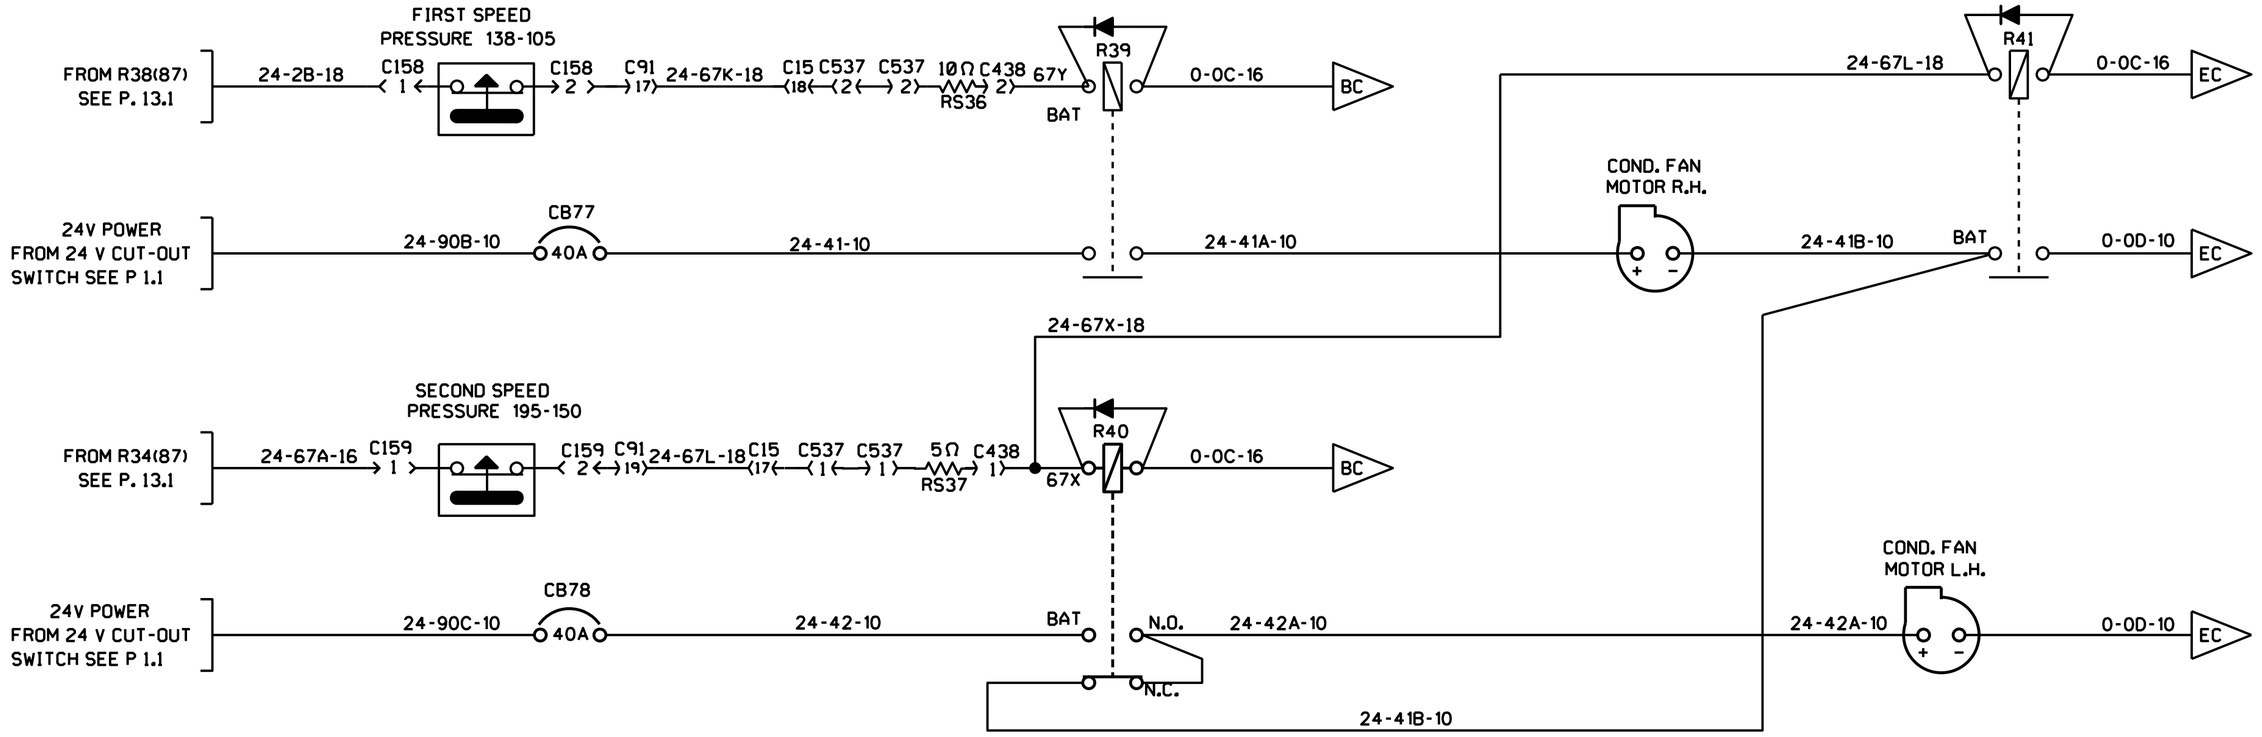


CONDENSER FAN

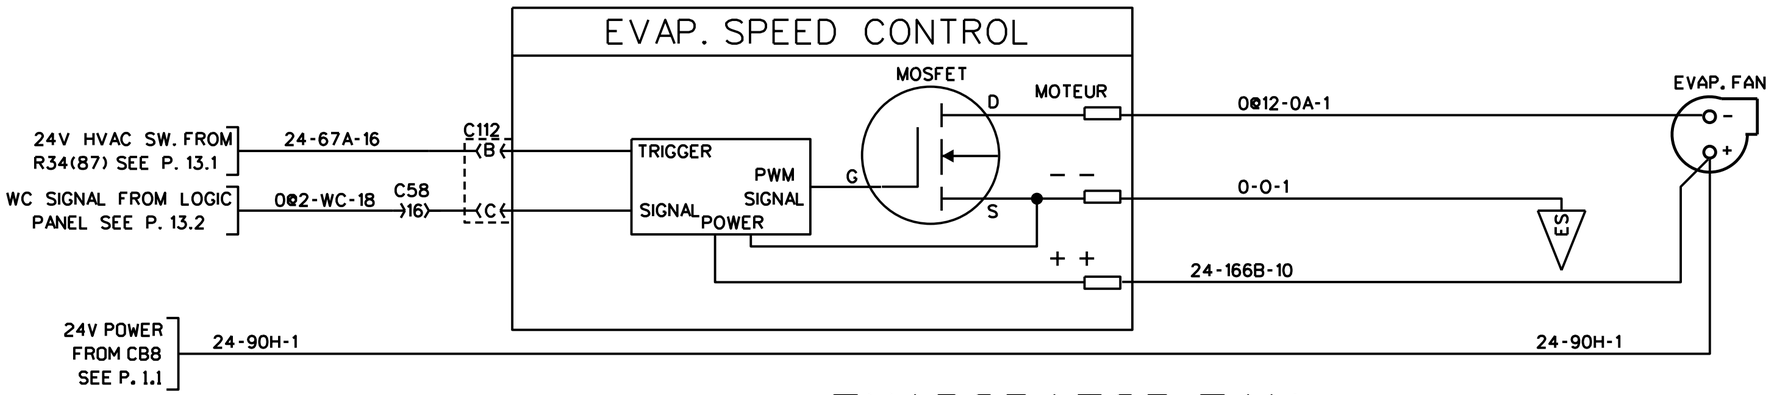

EVAPORATOR FAN




CONDENSER COMPT. DOOR AJAR

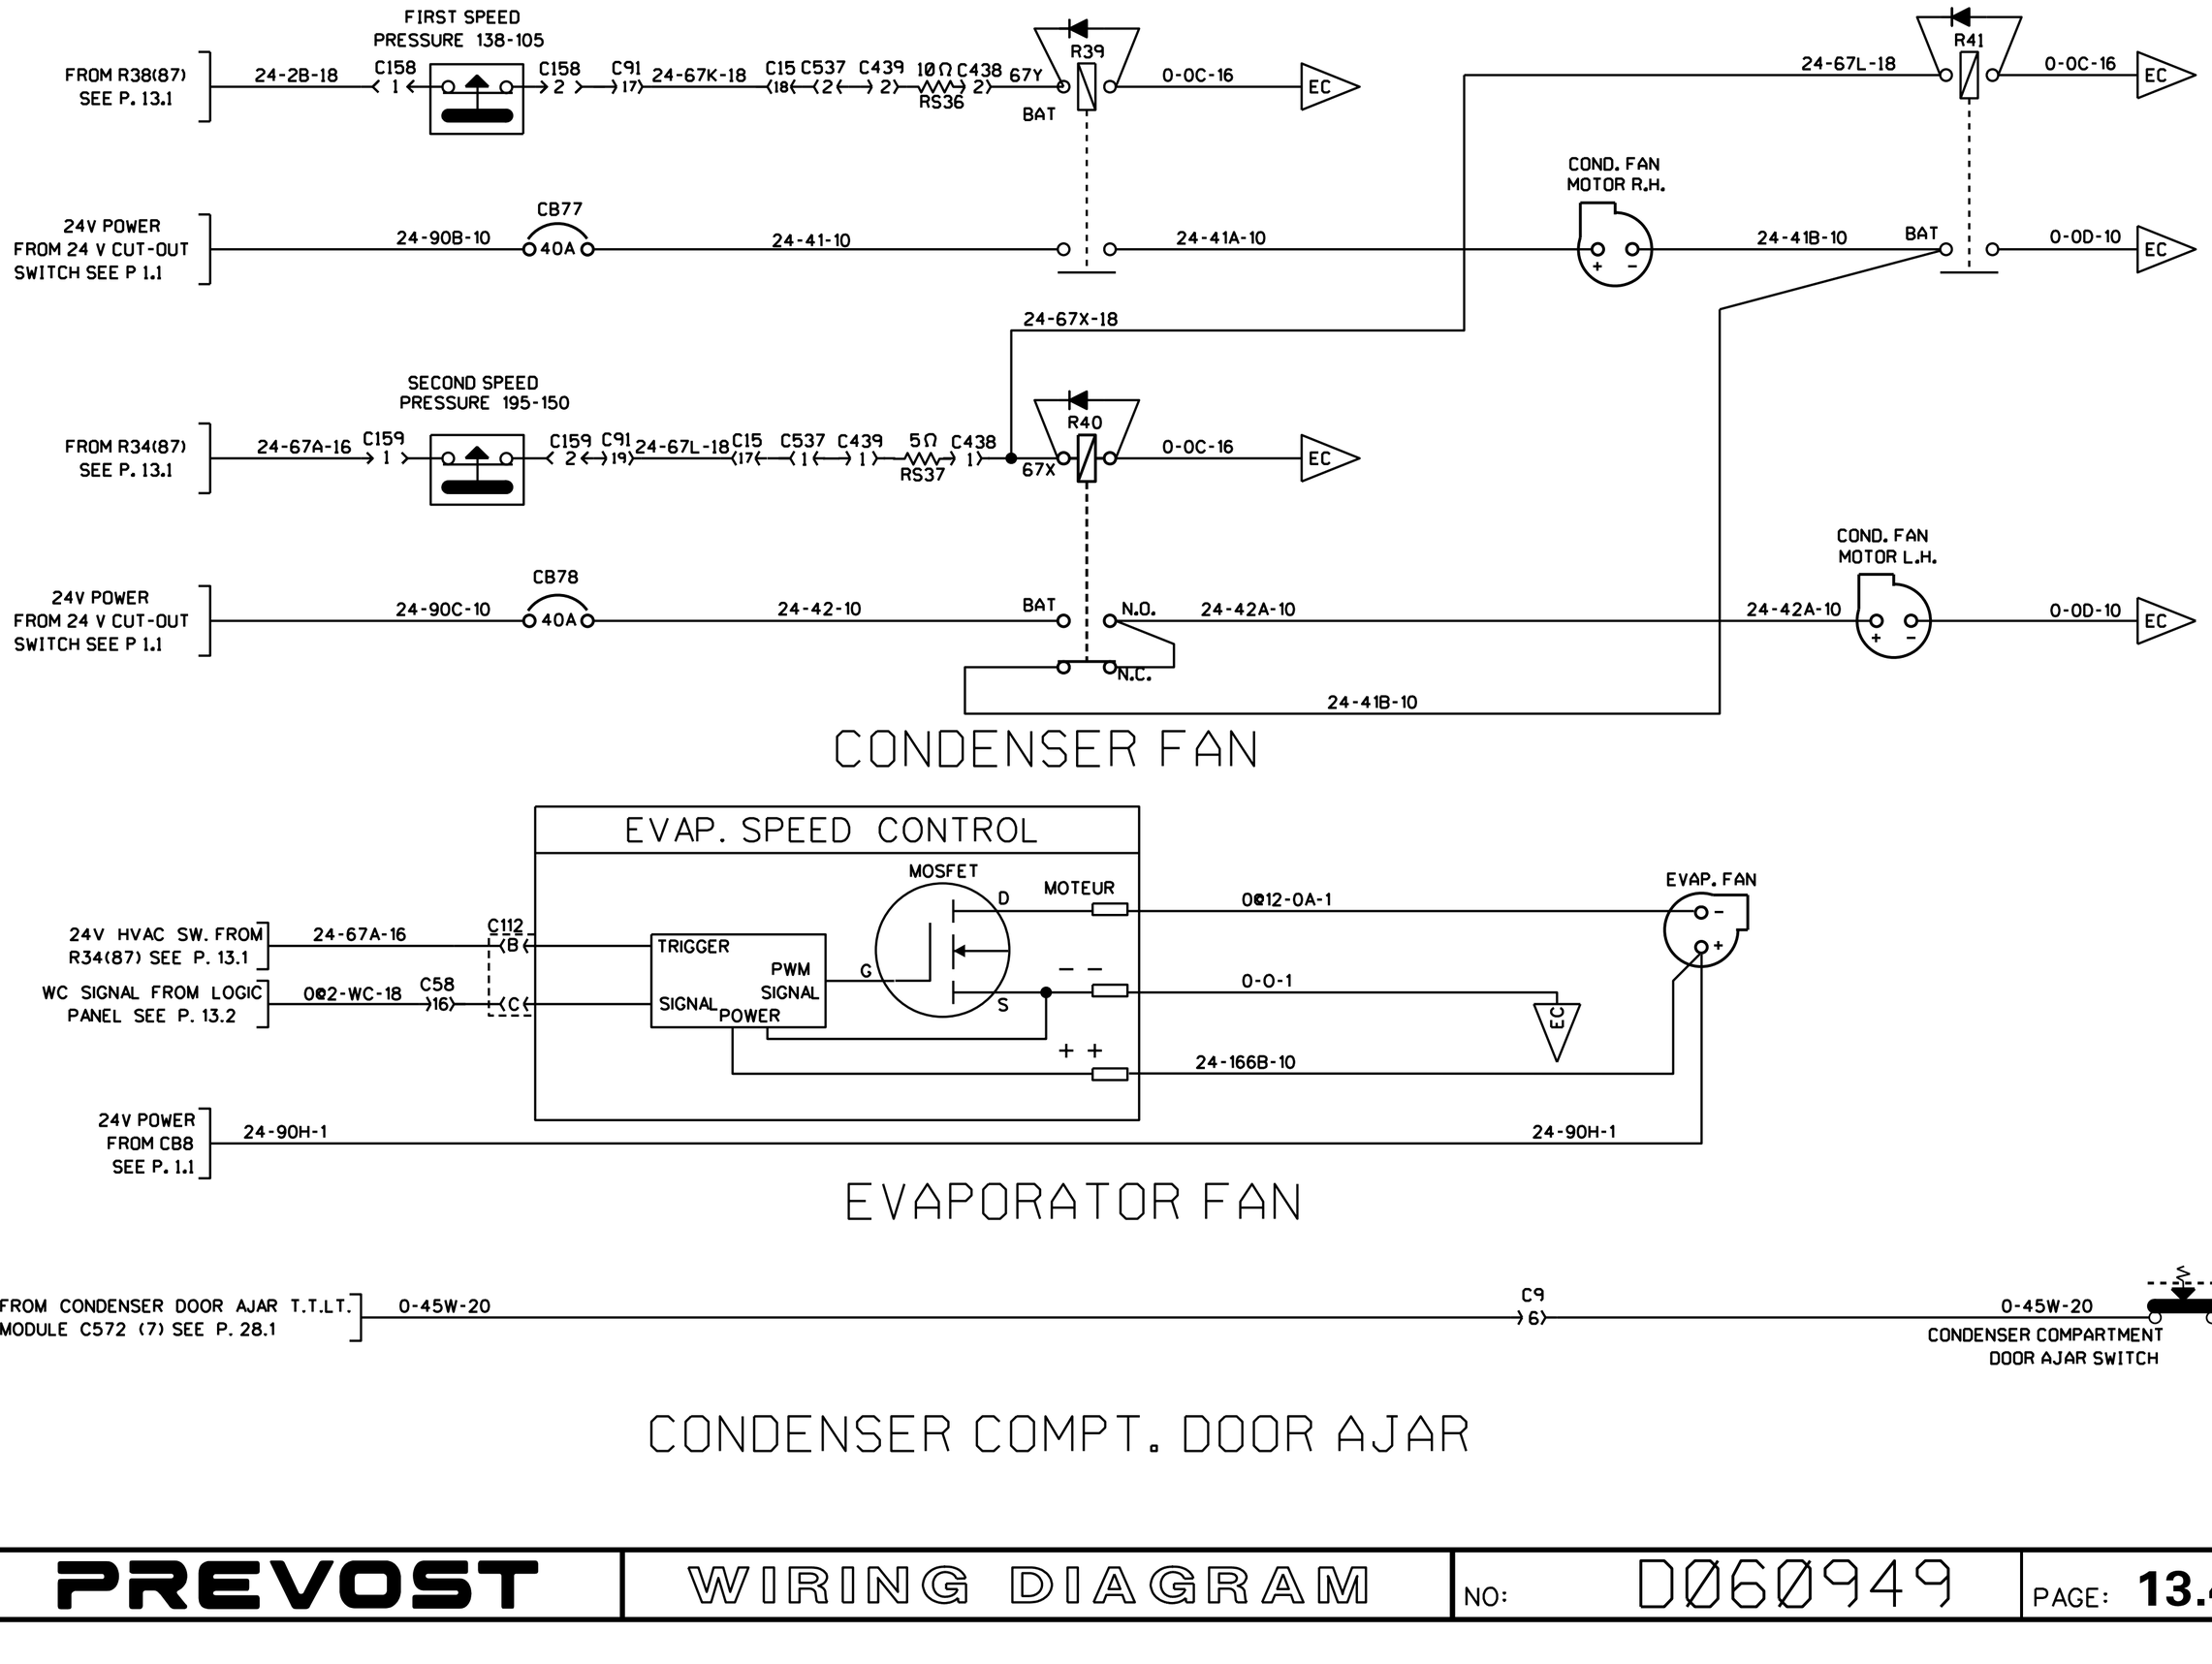


CONDENSER FAN

EVAPORATOR FAN


CONDENSER COMPT. DOOR AJAR

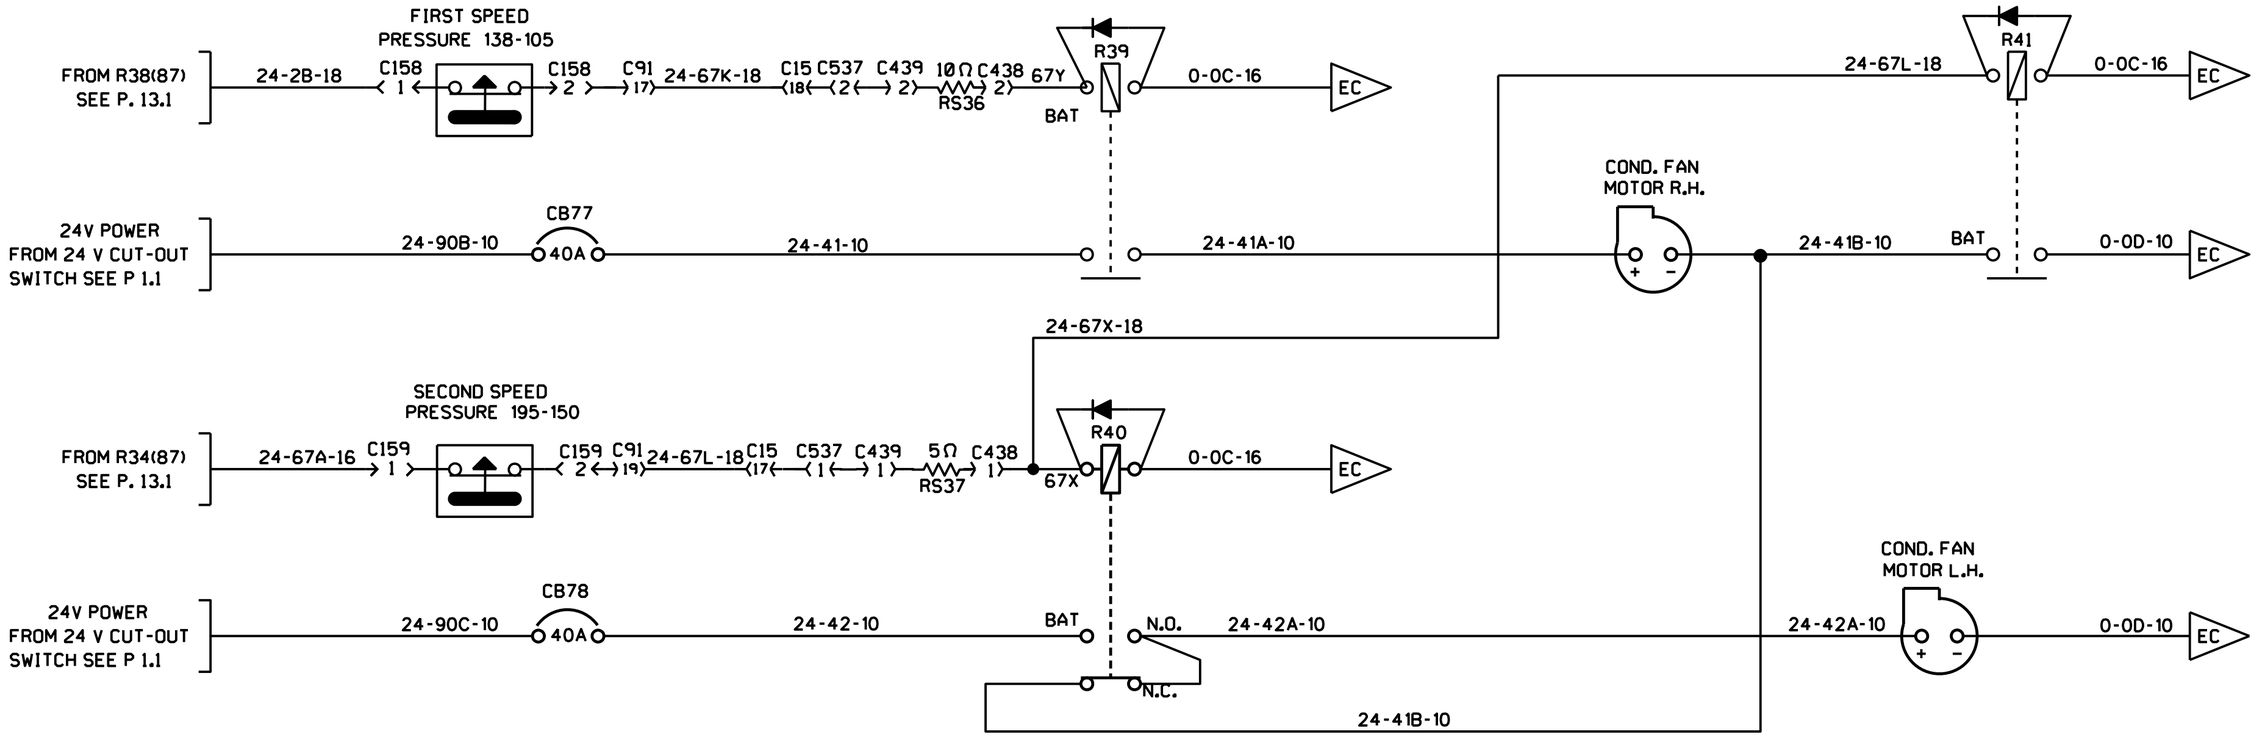


CONDENSER FAN

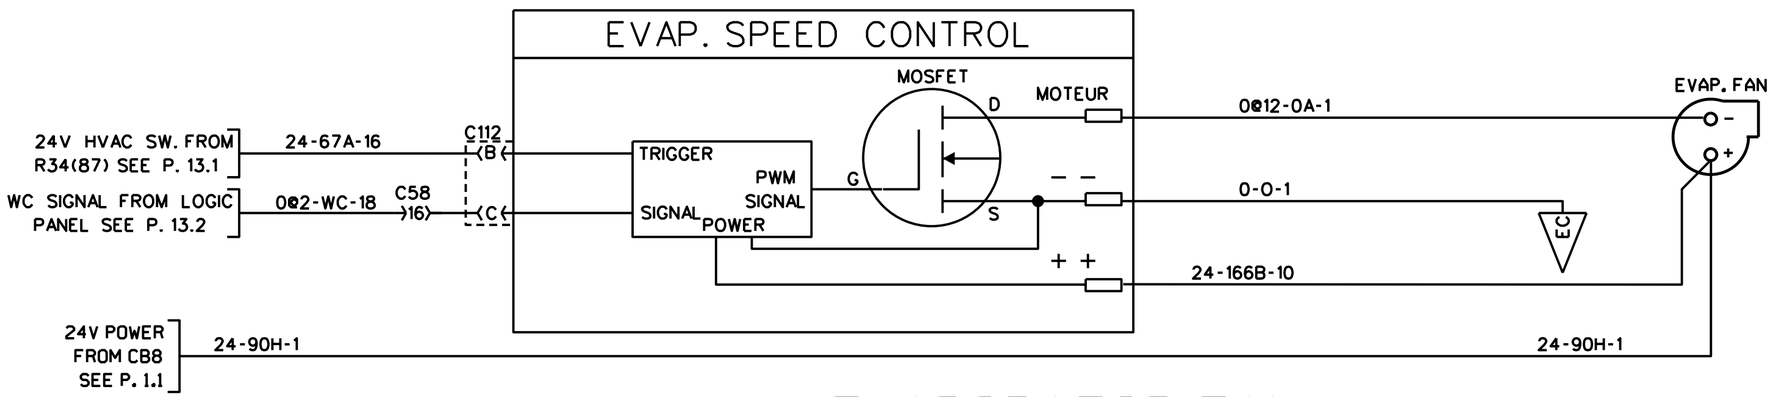


EVAPORATOR FAN

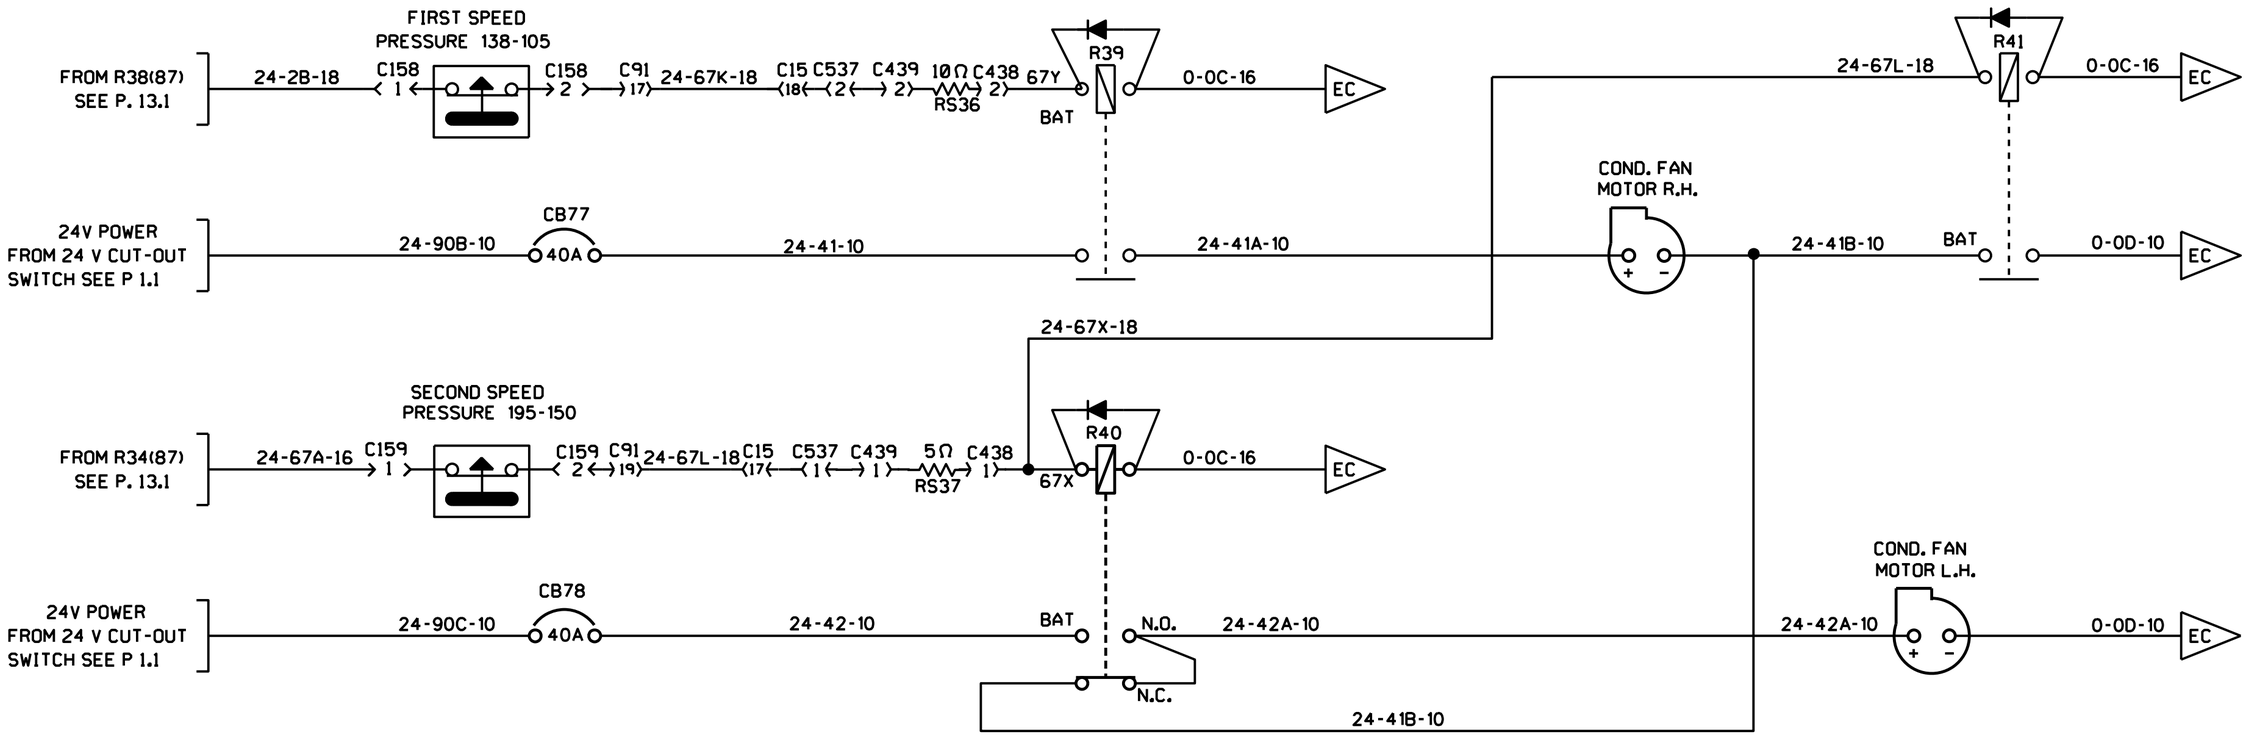


CONDENSER FAN (2 SPEED)

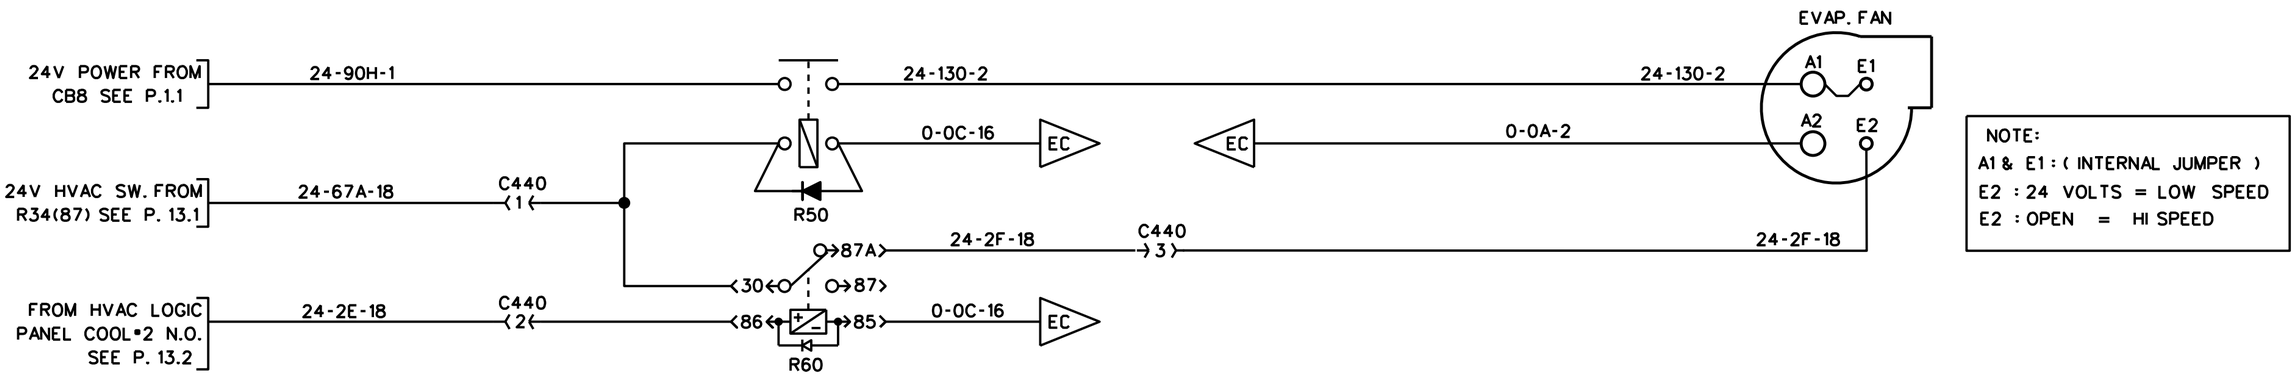


EVAPORATOR FAN (2 SPEED)

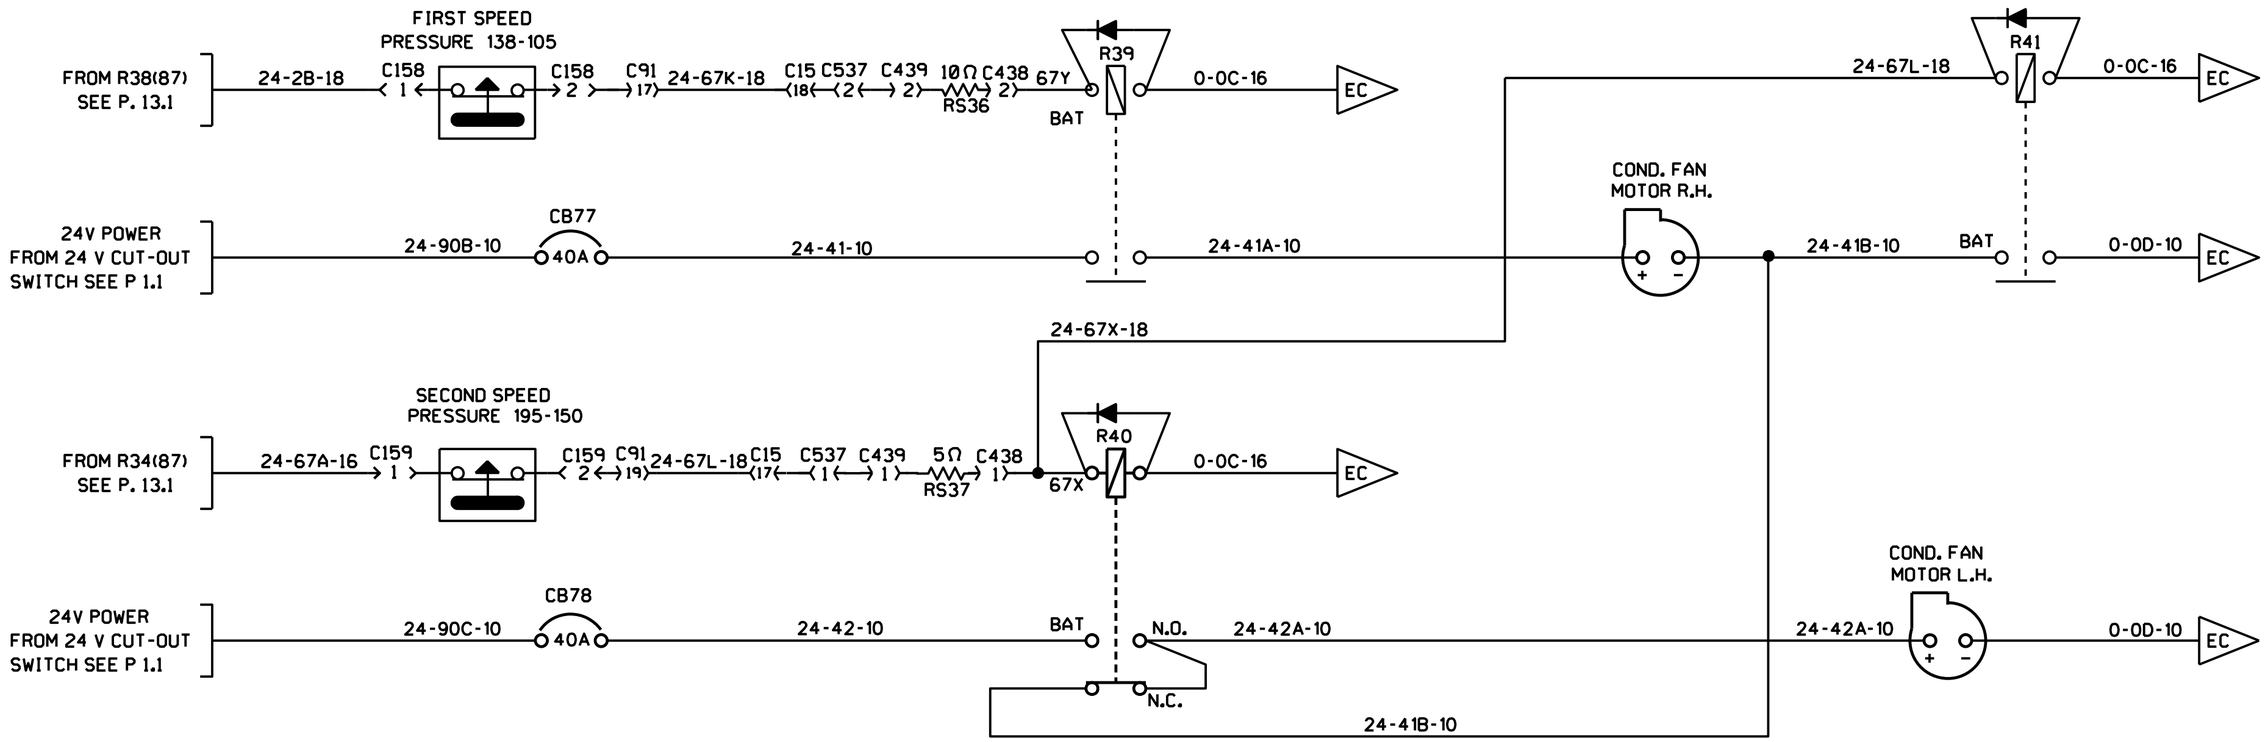


CONDENSER FAN (2 SPEED)

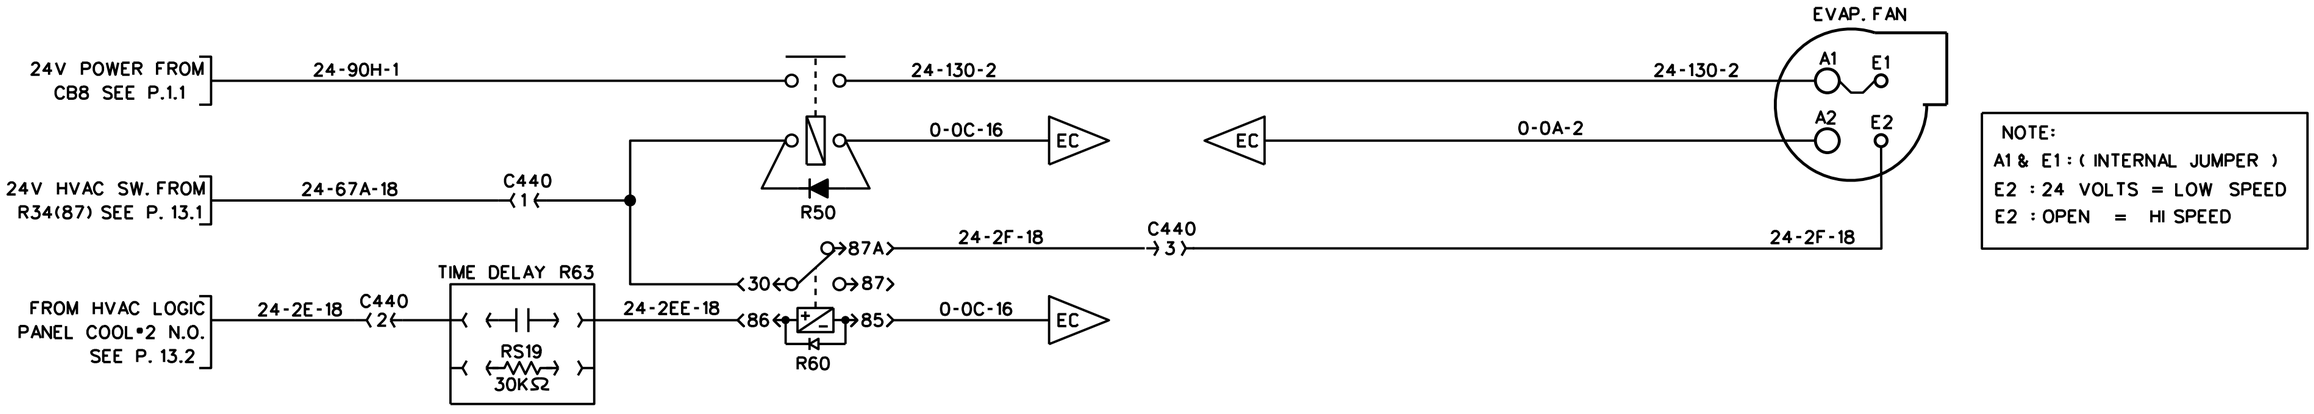


EVAPORATOR FAN (2 SPEED)

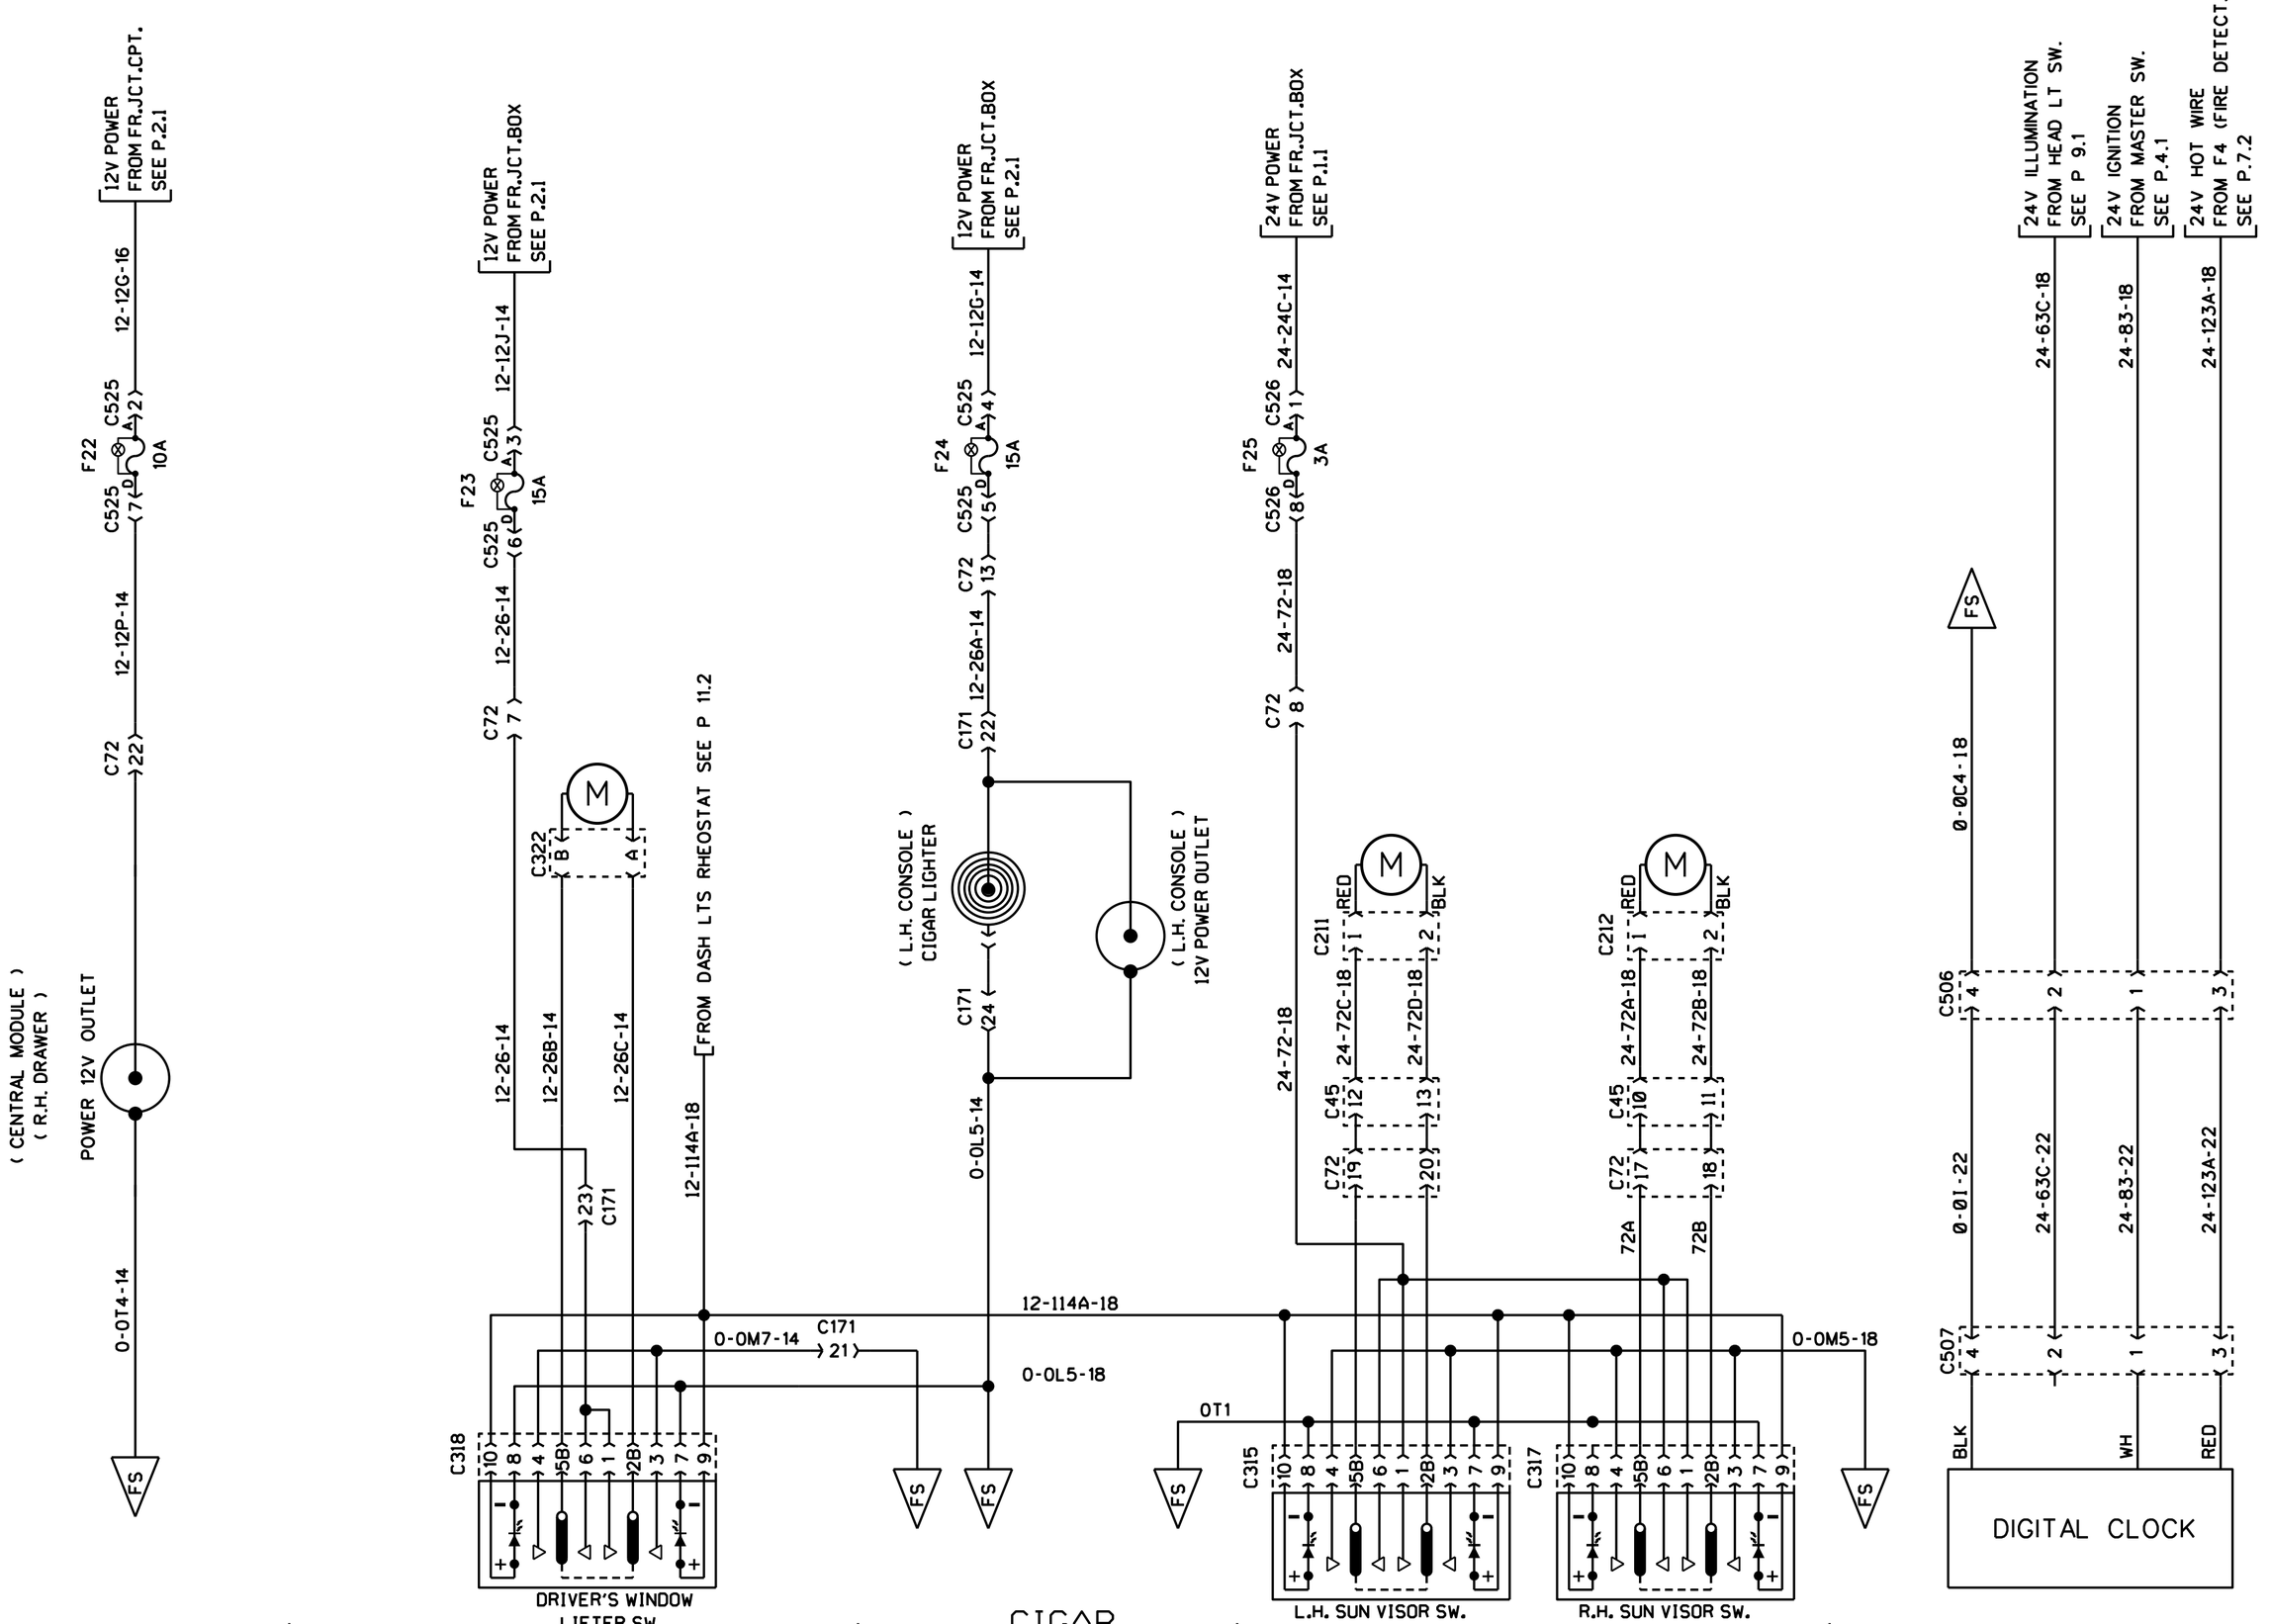


POWER 12V OUTLET | DRIVER'S WINDOW LIFTER | CIGAR LIGHTER | SUN VISOR | DIGITAL CLOCK

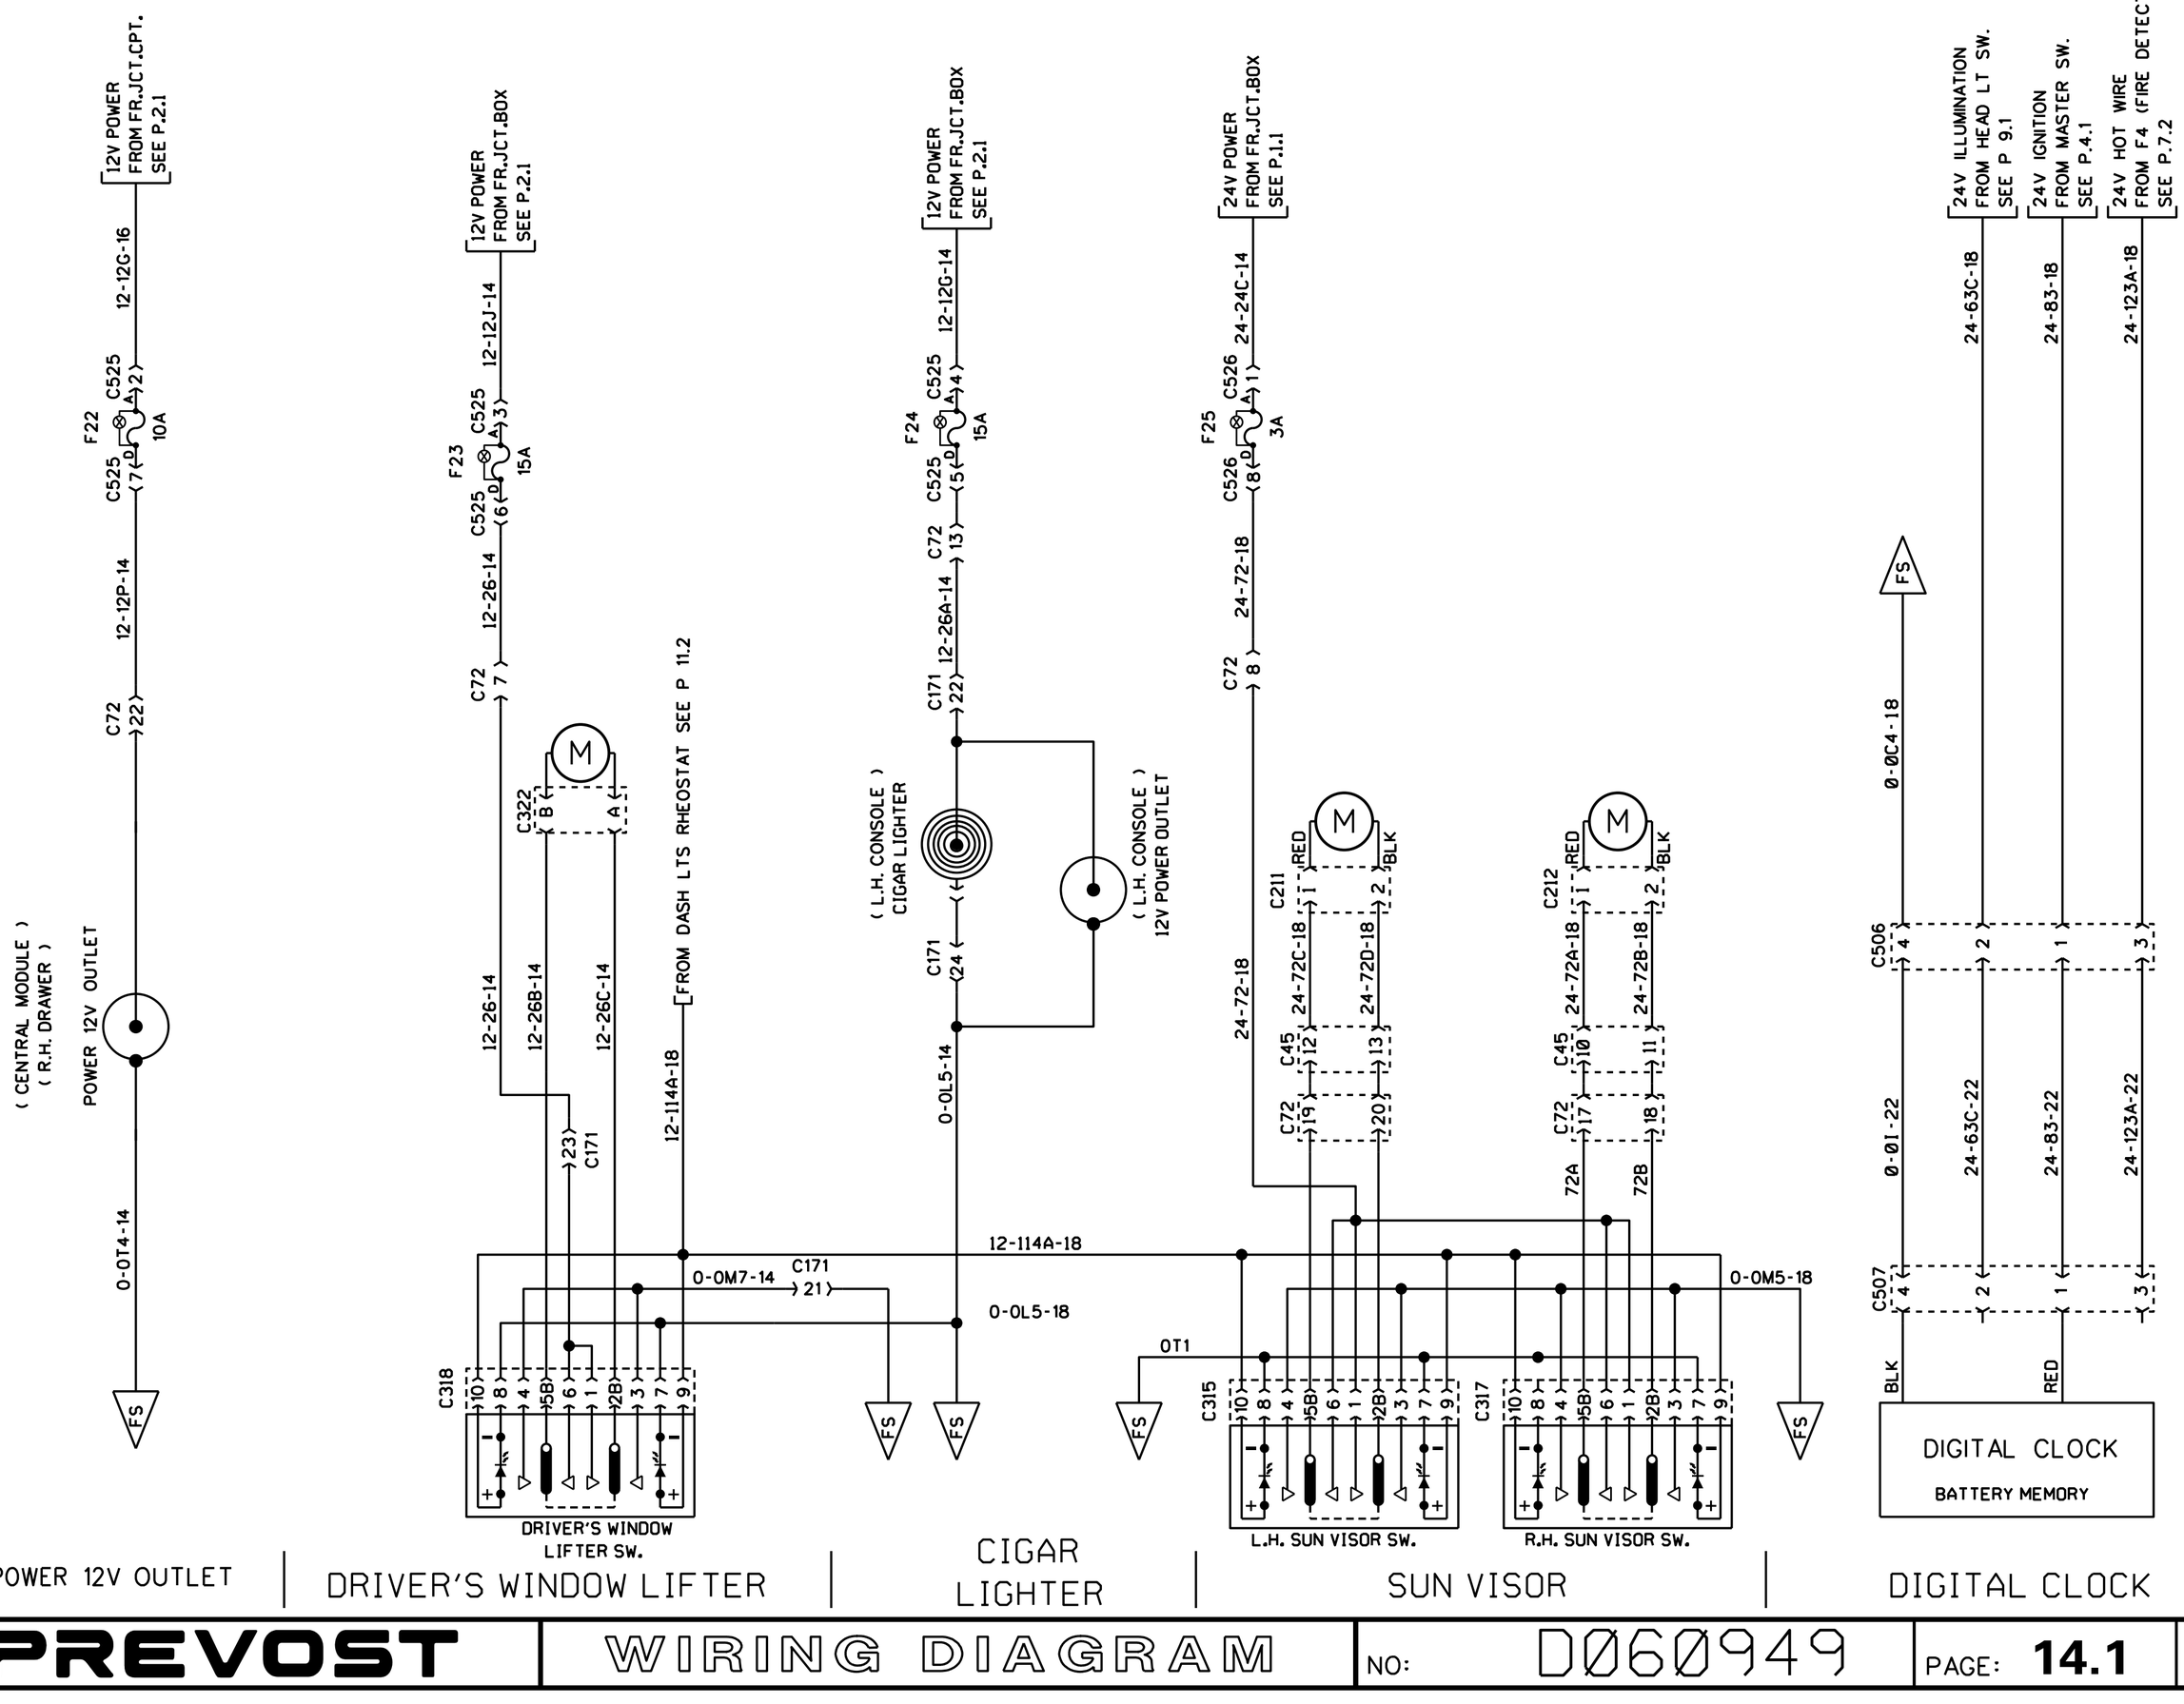
12V POWER
FROM FR.JCT.CPT.
SEE P.2.1
12-12G-16
C525
2
A
F22
10A
C525
7
D
12-12P-14
C72
22
12V POWER
FROM FR.JCT.BOX
SEE P.2.1
12-12J-14
C525
3
A
F23
15A
C525
6
D
12-26-14
C72
7
12V POWER
FROM FR.JCT.BOX
SEE P.2.1
12-12G-14
C525
4
A
F24
15A
C525
5
D
12-26A-14
C72
13
C171
22
24V POWER
FROM FR.JCT.BOX
SEE P.1.1
24-24C-14
C526
1
A
F25
3A
C526
8
D
24-72-18
C72
8
24V ILLUMINATION
FROM HEAD LT SW.
SEE P 9.1
24-63C-18
24V IGNITION
FROM MASTER SW.
SEE P.4.1
24-83-18
24V HOT WIRE
FROM F4 (FIRE DETECT.)
SEE P.7.2
24-123A-18
FS
0-0C4-18
(CENTRAL MODULE)
(R.H. DRAWER)
POWER 12V OUTLET
0-0T4-14
FS
M
C322
B
A
12-26-14
12-26B-14
12-26C-14
23
C171
12-114A-18
FROM DASH LTS RHEOSTAT SEE P 11.2
(L.H. CONSOLE)
CIGAR LIGHTER
(L.H. CONSOLE)
12V POWER OUTLET
C171
24
0-0L5-14
24-72-18
C211
1
RED
2
BLK
24-72C-18
24-72D-18
C45
12
13
C72
19
20
C212
24-72A-18
24-72B-18
C45
10
11
C72
17
18
72A
72B
12-114A-18
0-0M7-14
C171
21
0-0L5-18
0-0M5-18
0T1
C318
C315
C317
DRIVER'S WINDOW
LIFTER SW.
L.H. SUN VISOR SW.
R.H. SUN VISOR SW.
C506
C507
0-0I-22
24-63C-22
24-83-22
24-123A-22
BLK
RED
DIGITAL CLOCK
BATTERY MEMORY
POWER 12V OUTLET
DRIVER'S WINDOW LIFTER
CIGAR LIGHTER
SUN VISOR
DIGITAL CLOCK

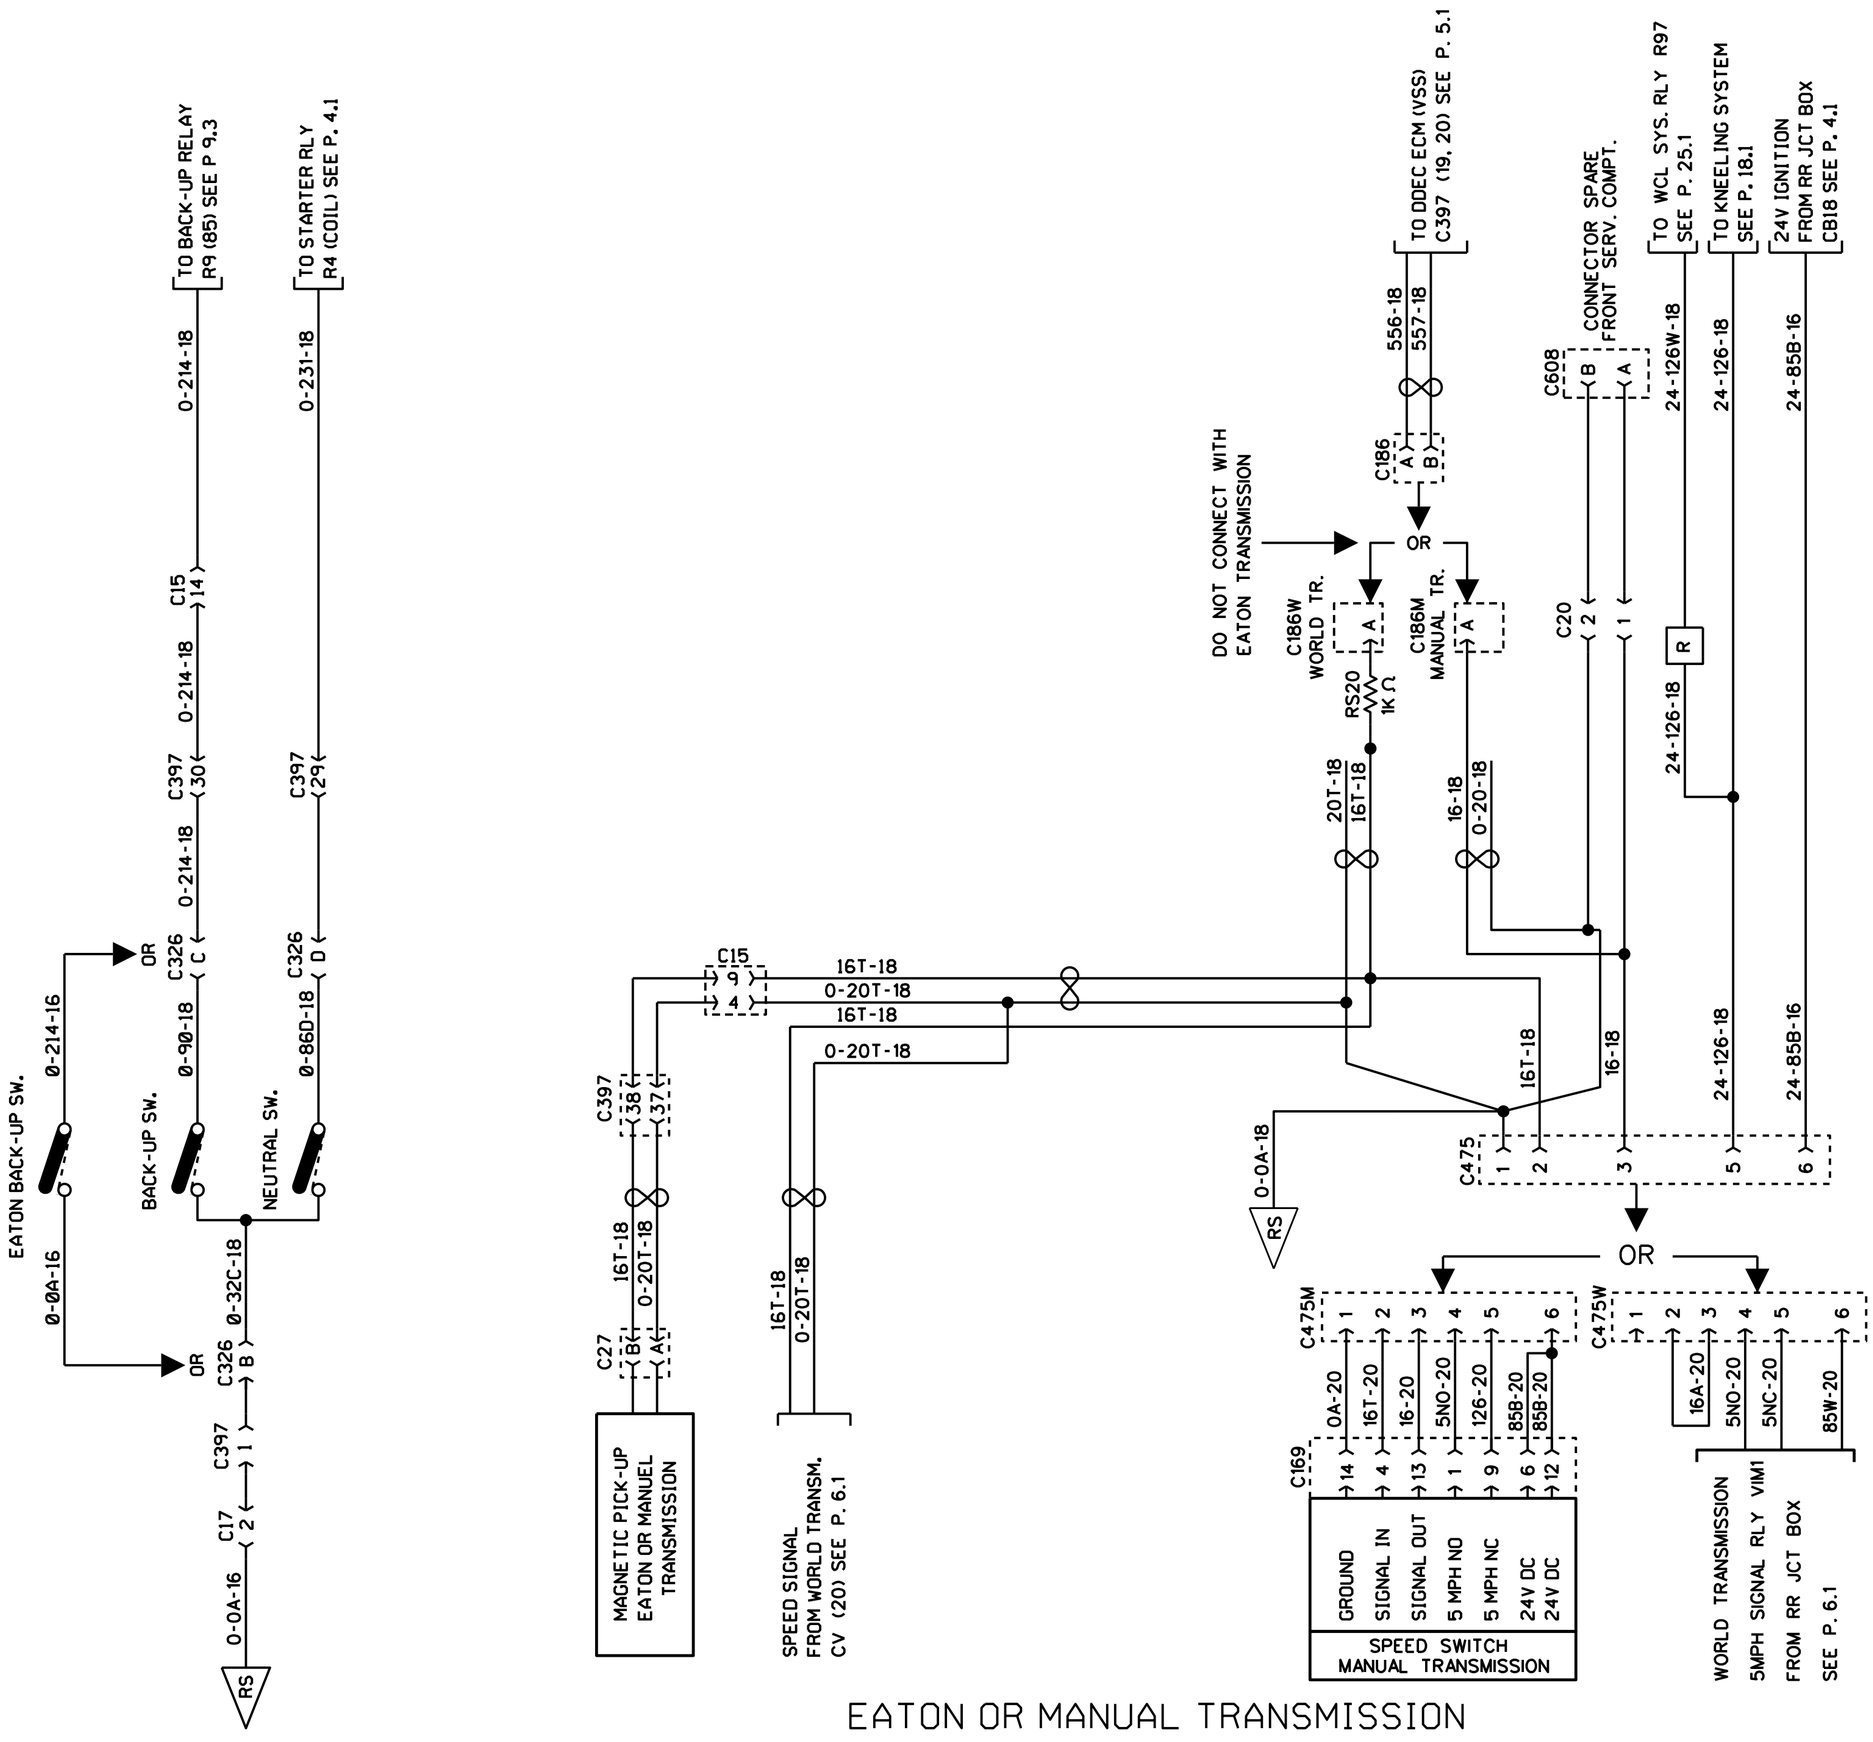


EATON OR MANUAL TRANSMISSION

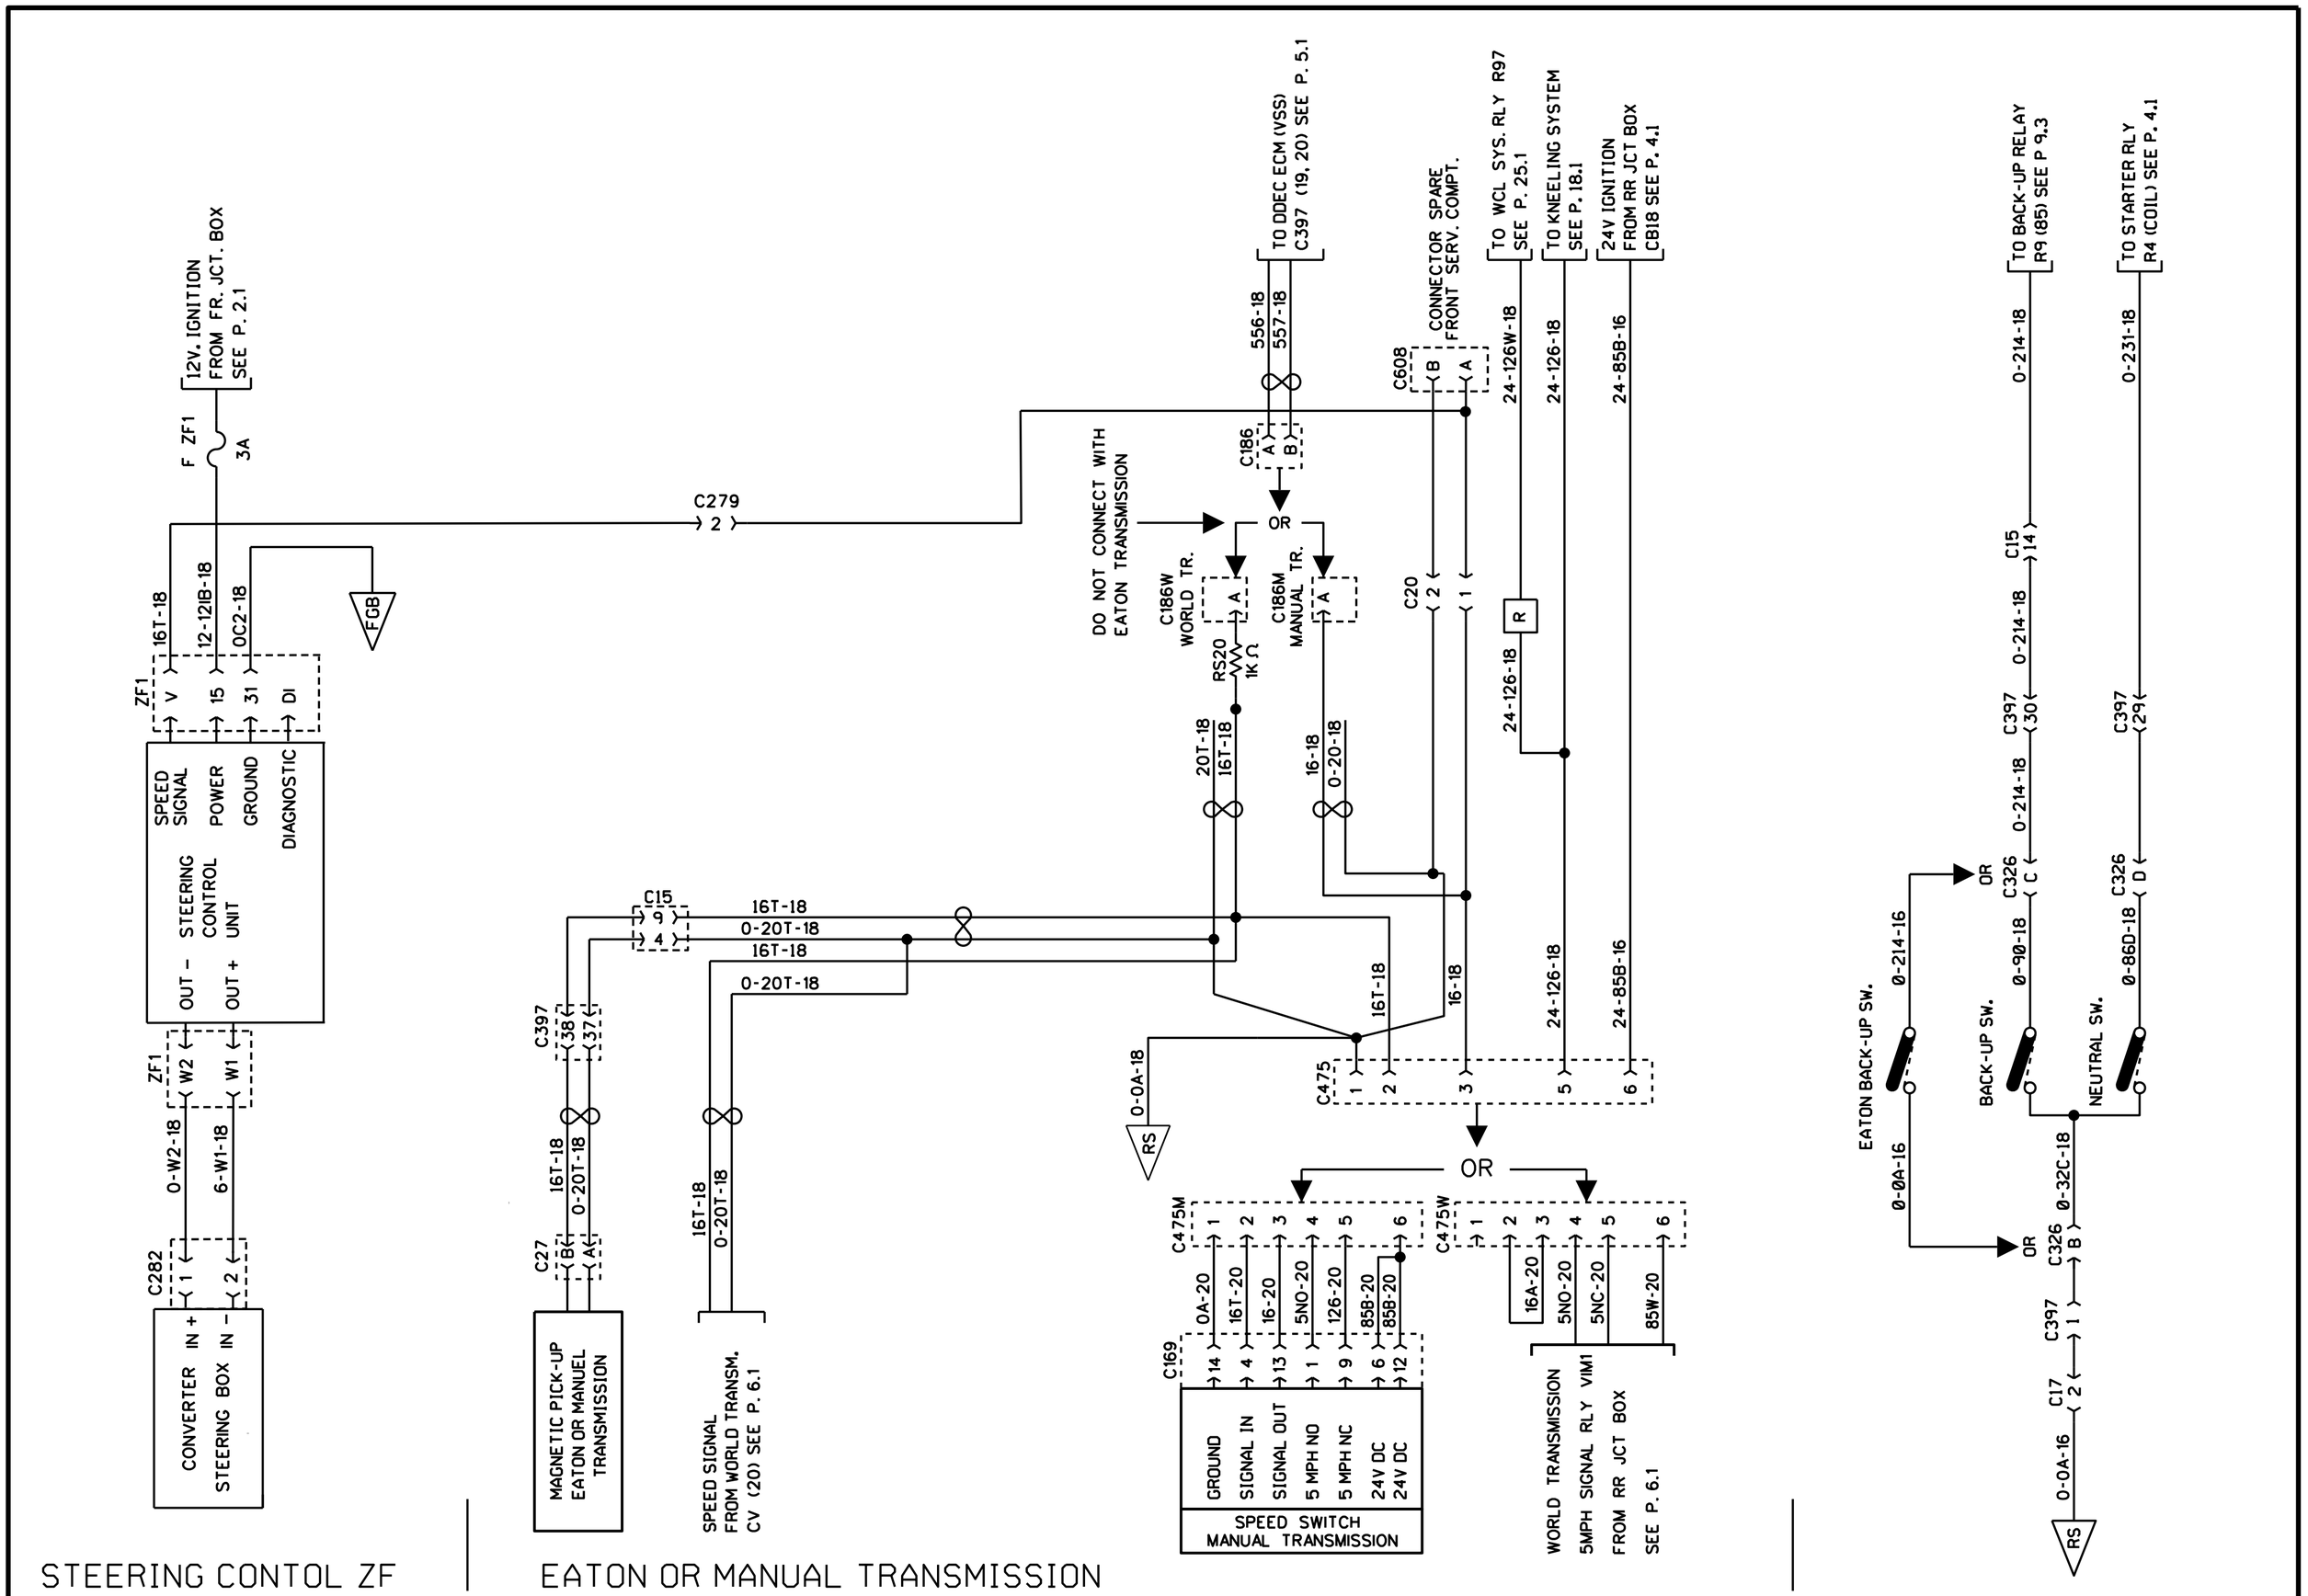


STEERING CONTOL ZF


EATON OR MANUAL TRANSMISSION

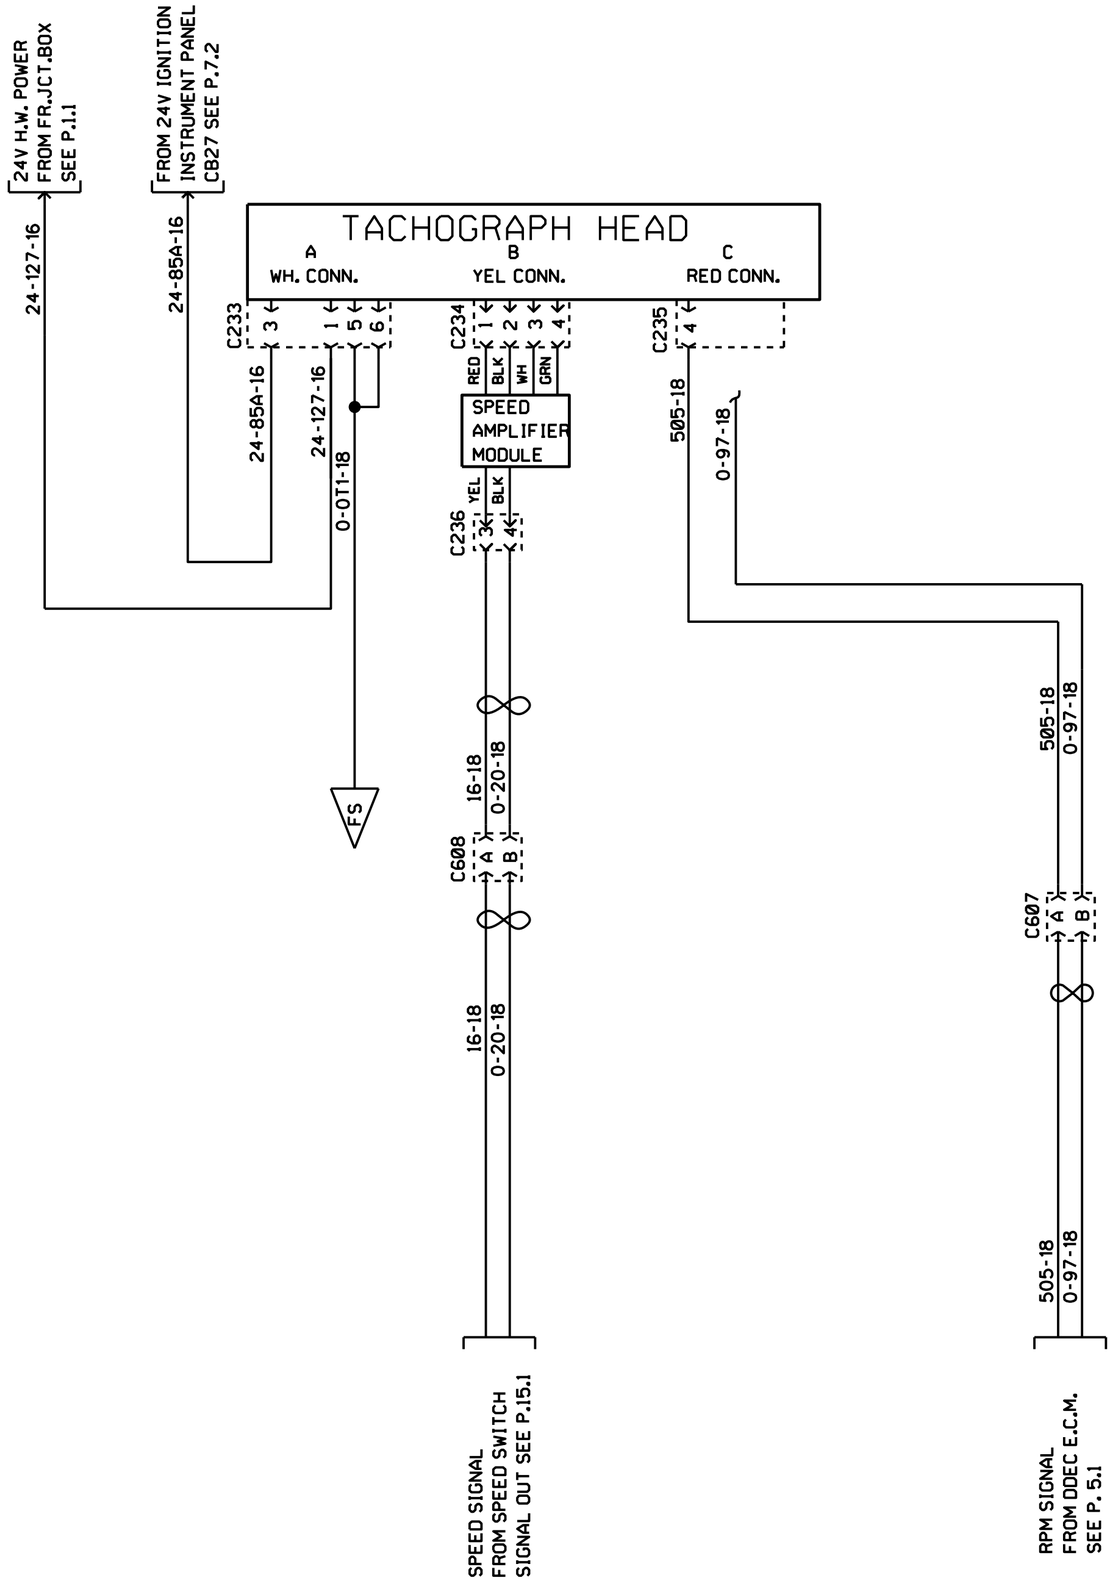

ELECTRONIC TACHOGRAPH

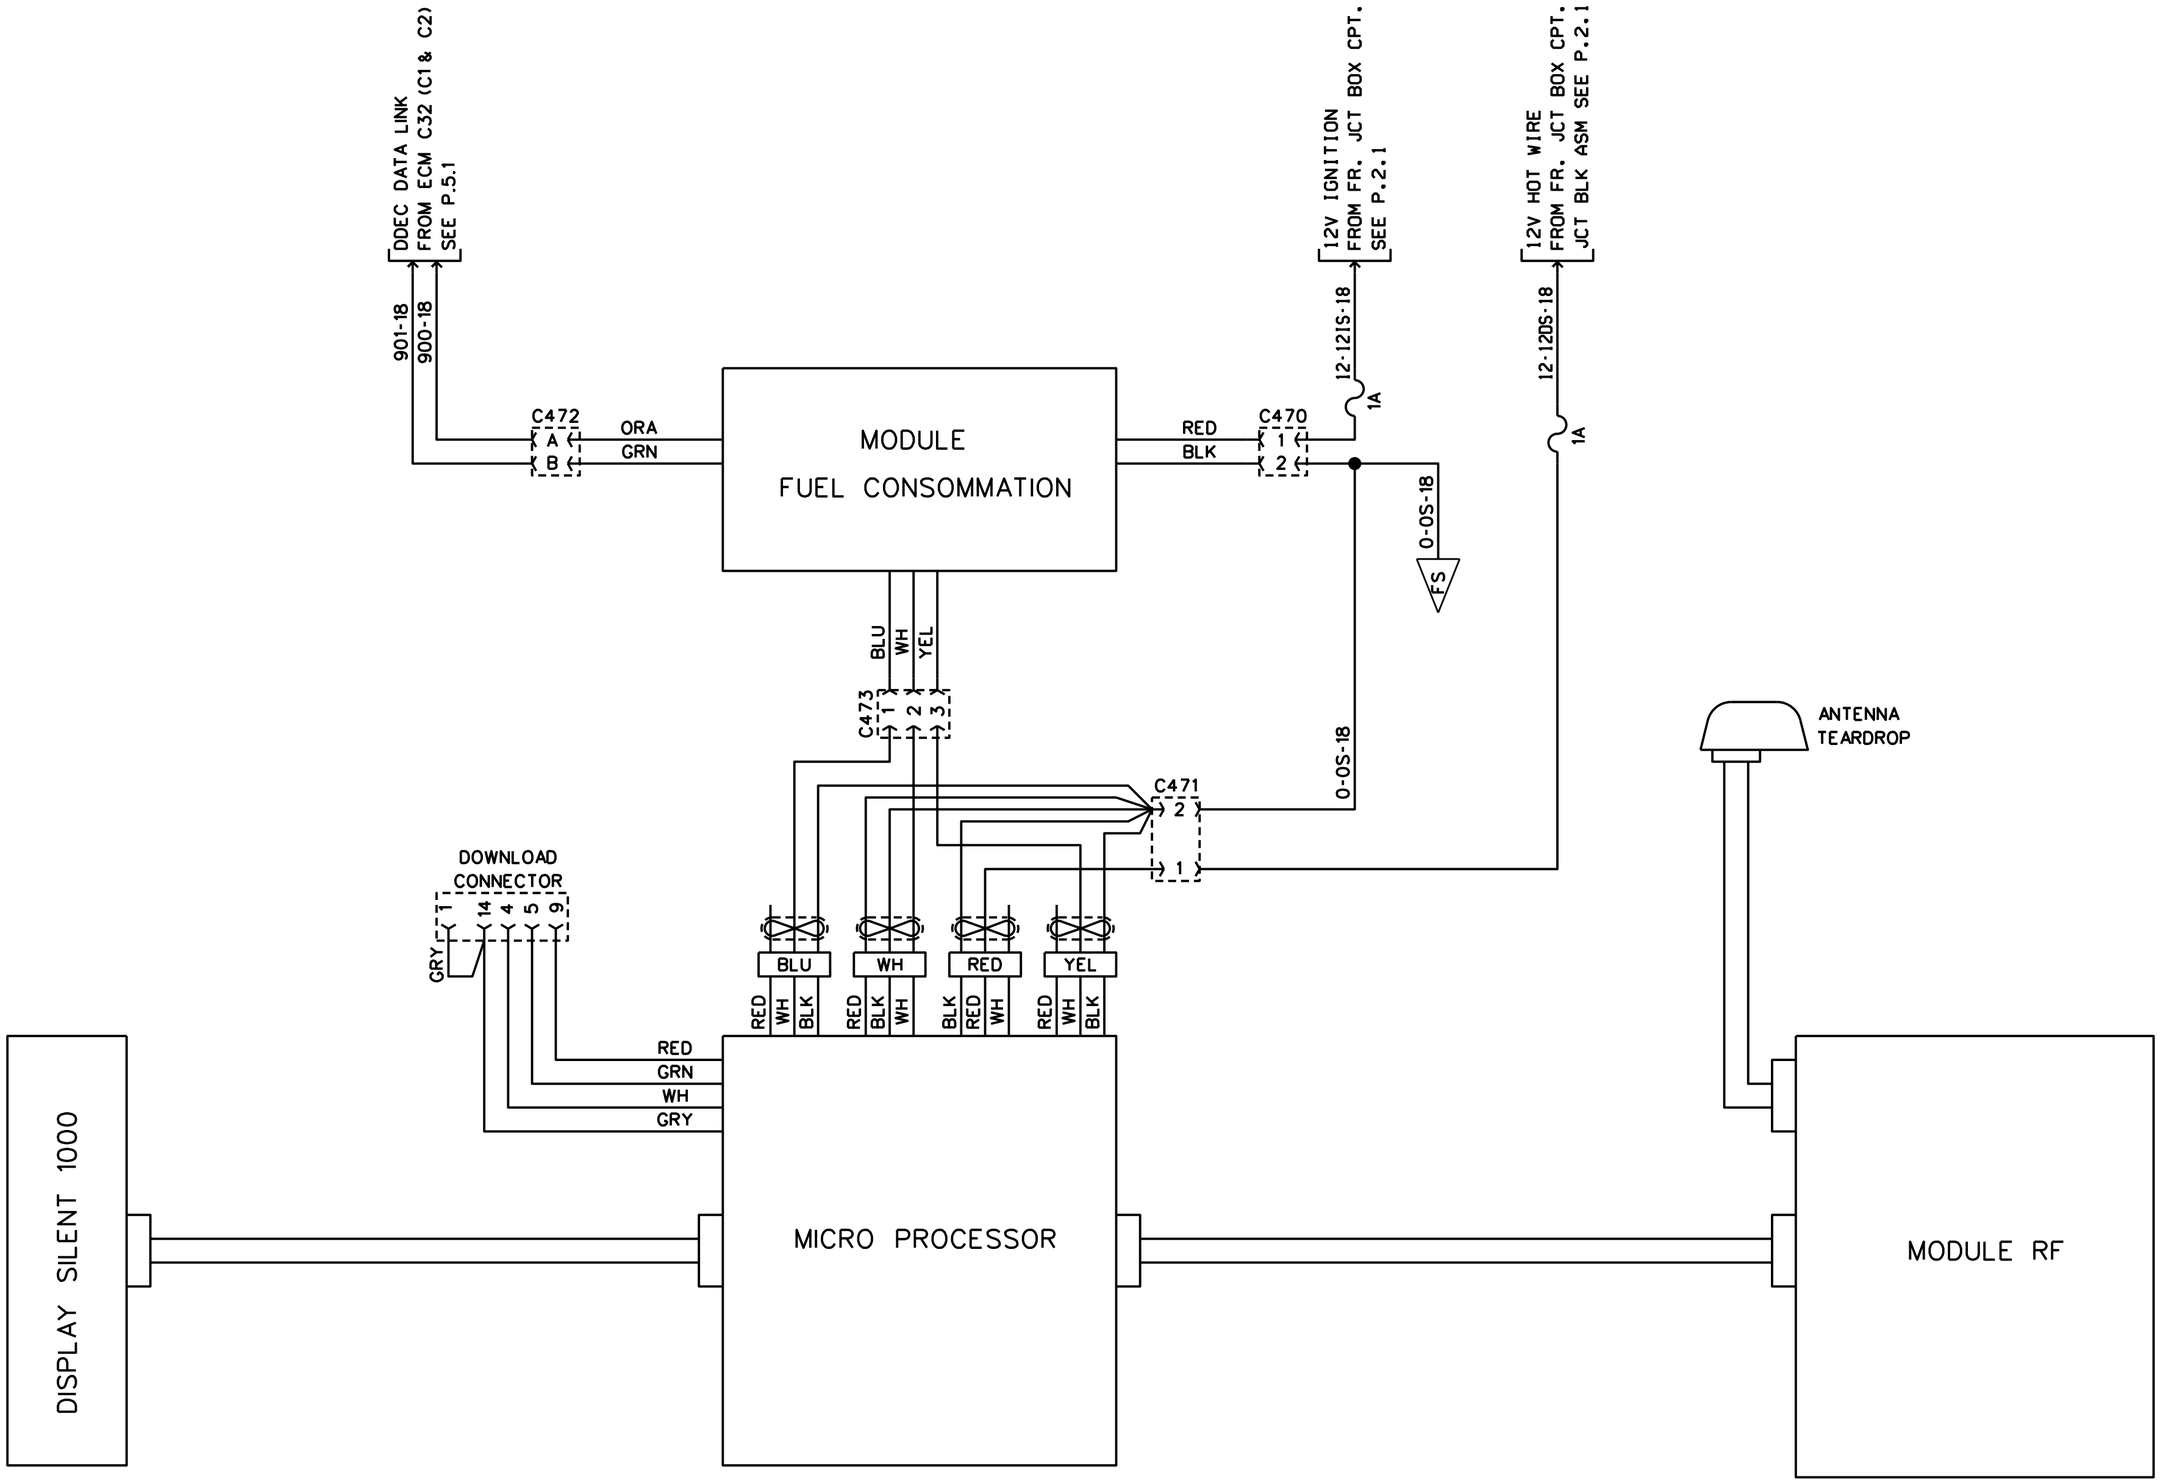

DDEC DATA LINK
FROM ECM C32 (C1 & C2)
SEE P.5.1
901-18
900-18
C472
A
B
ORA
GRN
MODULE
FUEL CONSOMMATION
RED
BLK
C470
1
2
12V IGNITION
FROM FR. JCT BOX CPT.
SEE P.2.1
12-12IS-18
1A
12V HOT WIRE
FROM FR. JCT BOX CPT.
JCT BLK ASM SEE P.2.1
12-12OS-18
1A
0-OS-18
FS
BLU
WH
YEL
C473
1
2
3
C471
2
1
0-OS-18
ANTENNA
TEARDROP
DOWNLOAD
CONNECTOR
1
14
4
5
9
GRY
BLU
WH
RED
YEL
RED
WH
BLK
RED
BLK
WH
BLK
RED
WH
RED
WH
BLK
RED
GRN
WH
GRY
DISPLAY SILENT 1000
MICRO PROCESSOR
MODULE RF

SILENT 1000

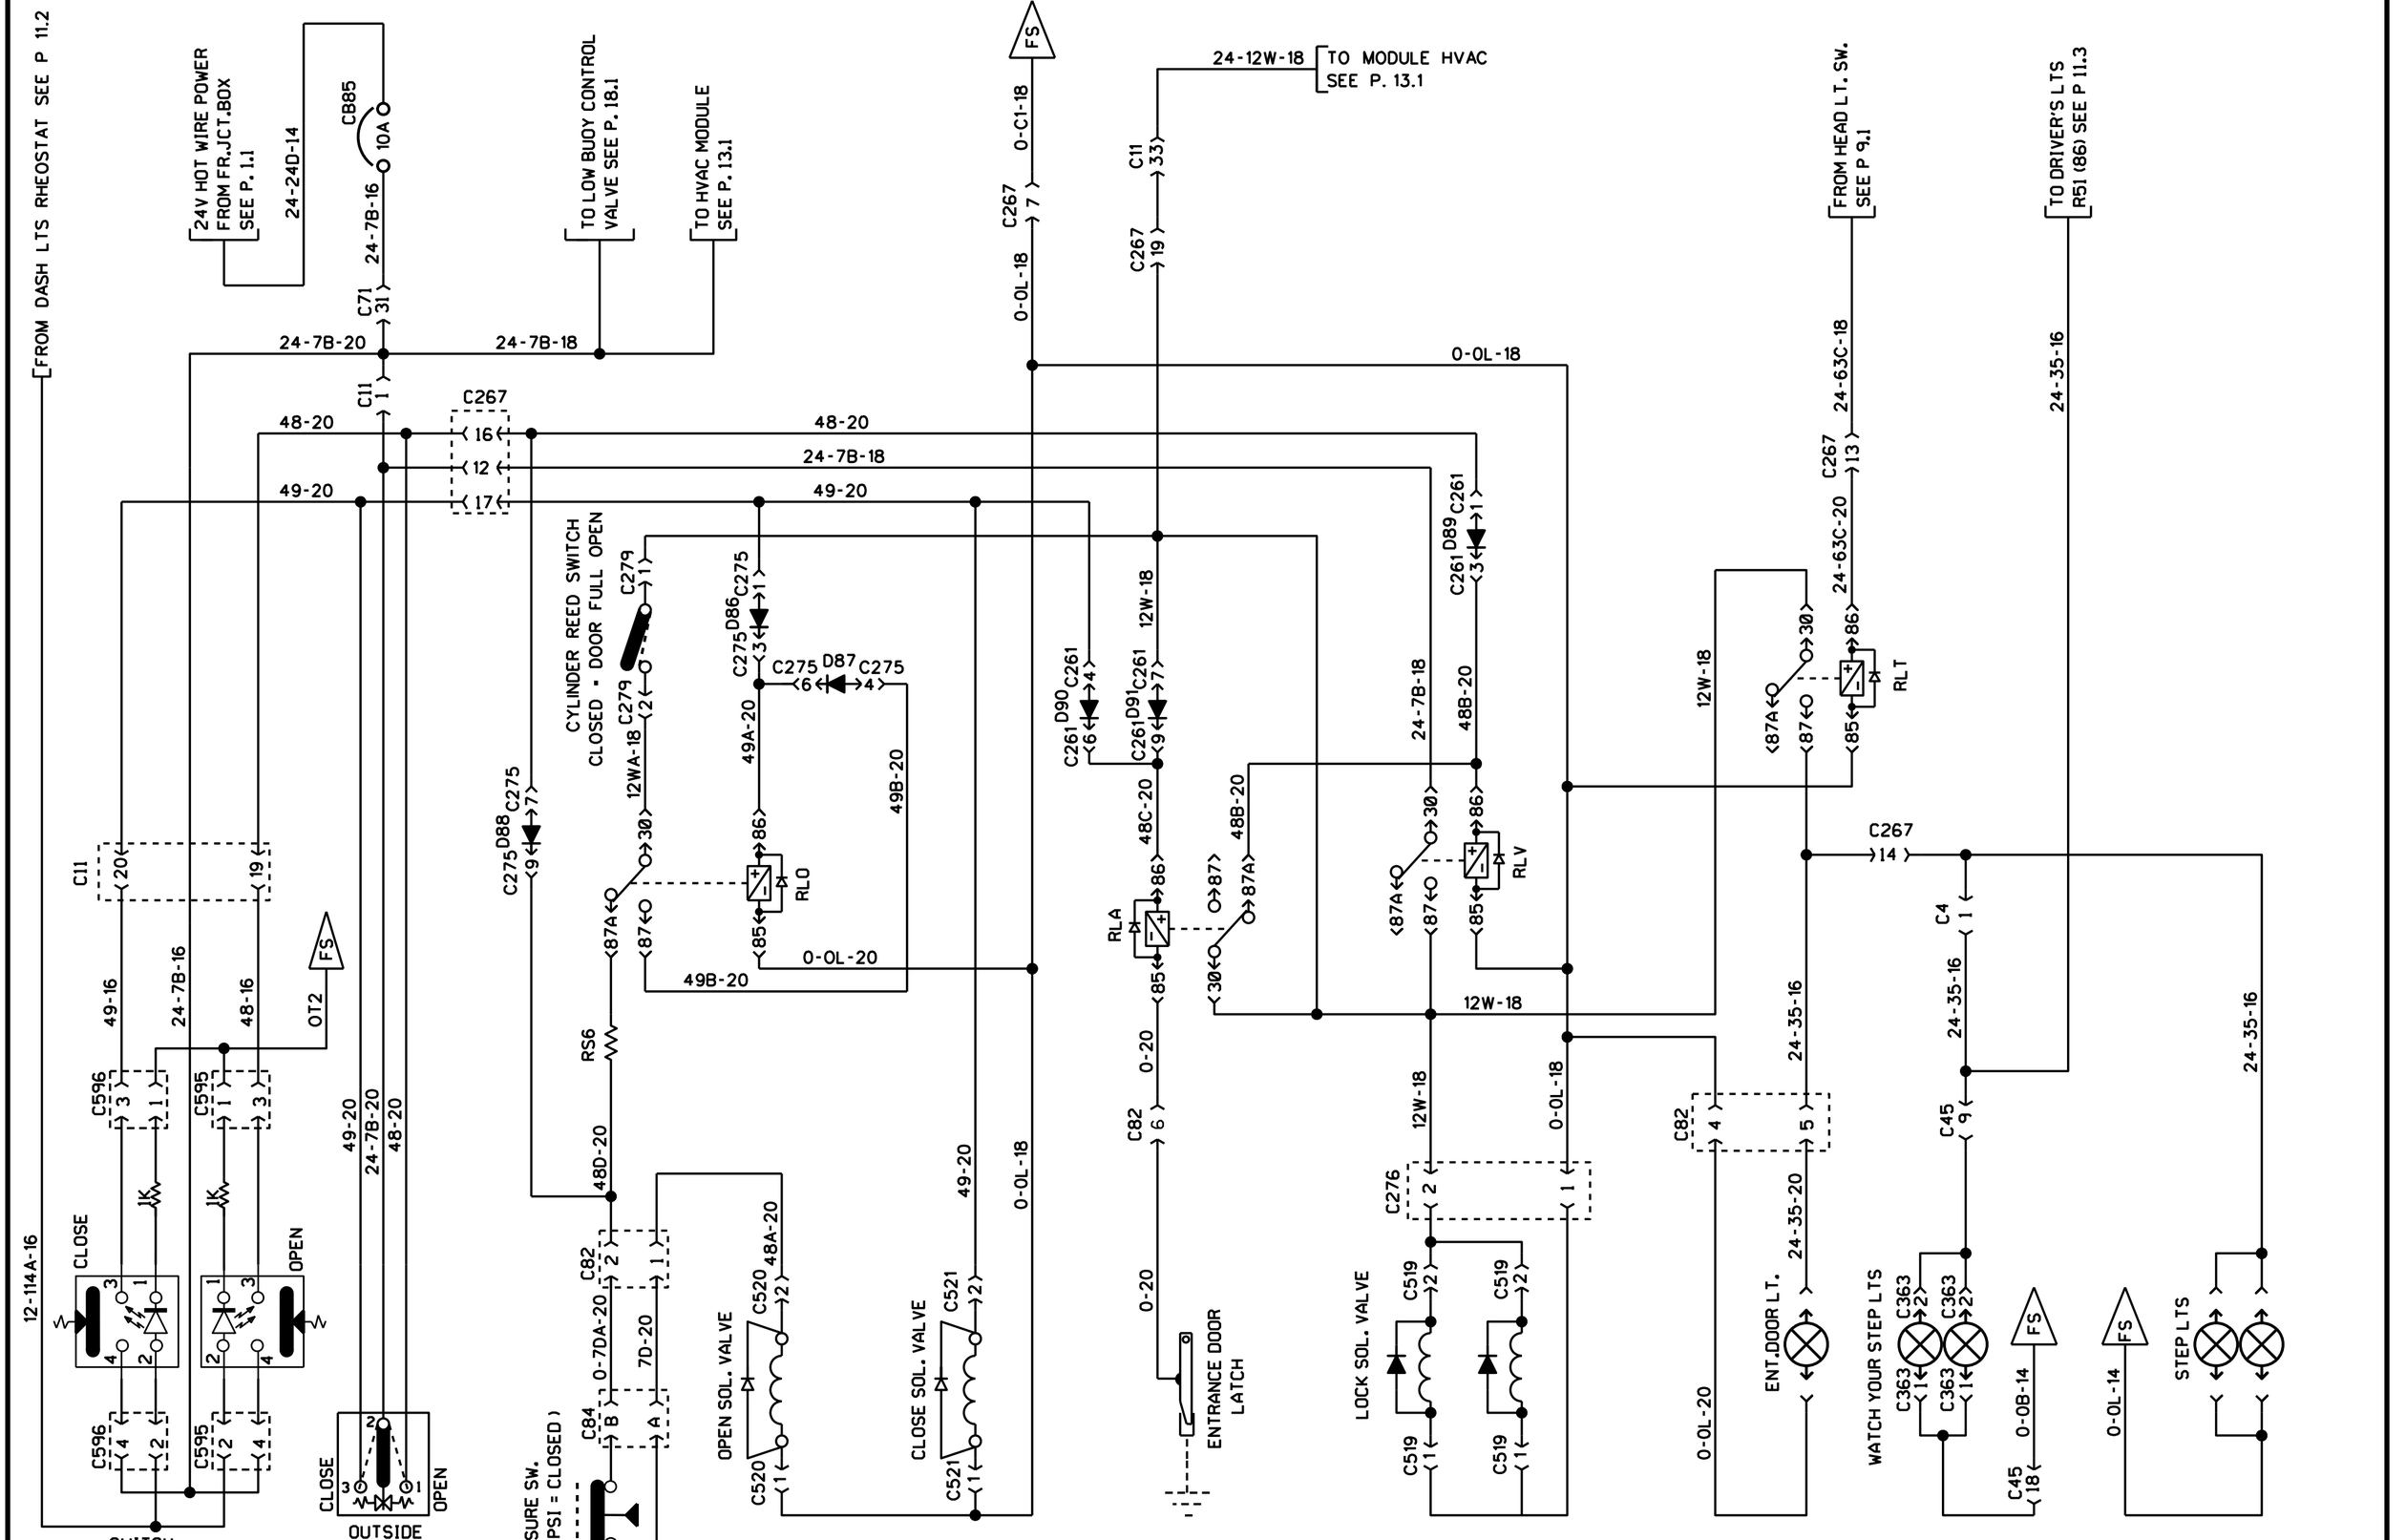


ENTRANCE DOOR (SEDAN)


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 16.1	REVISION 00

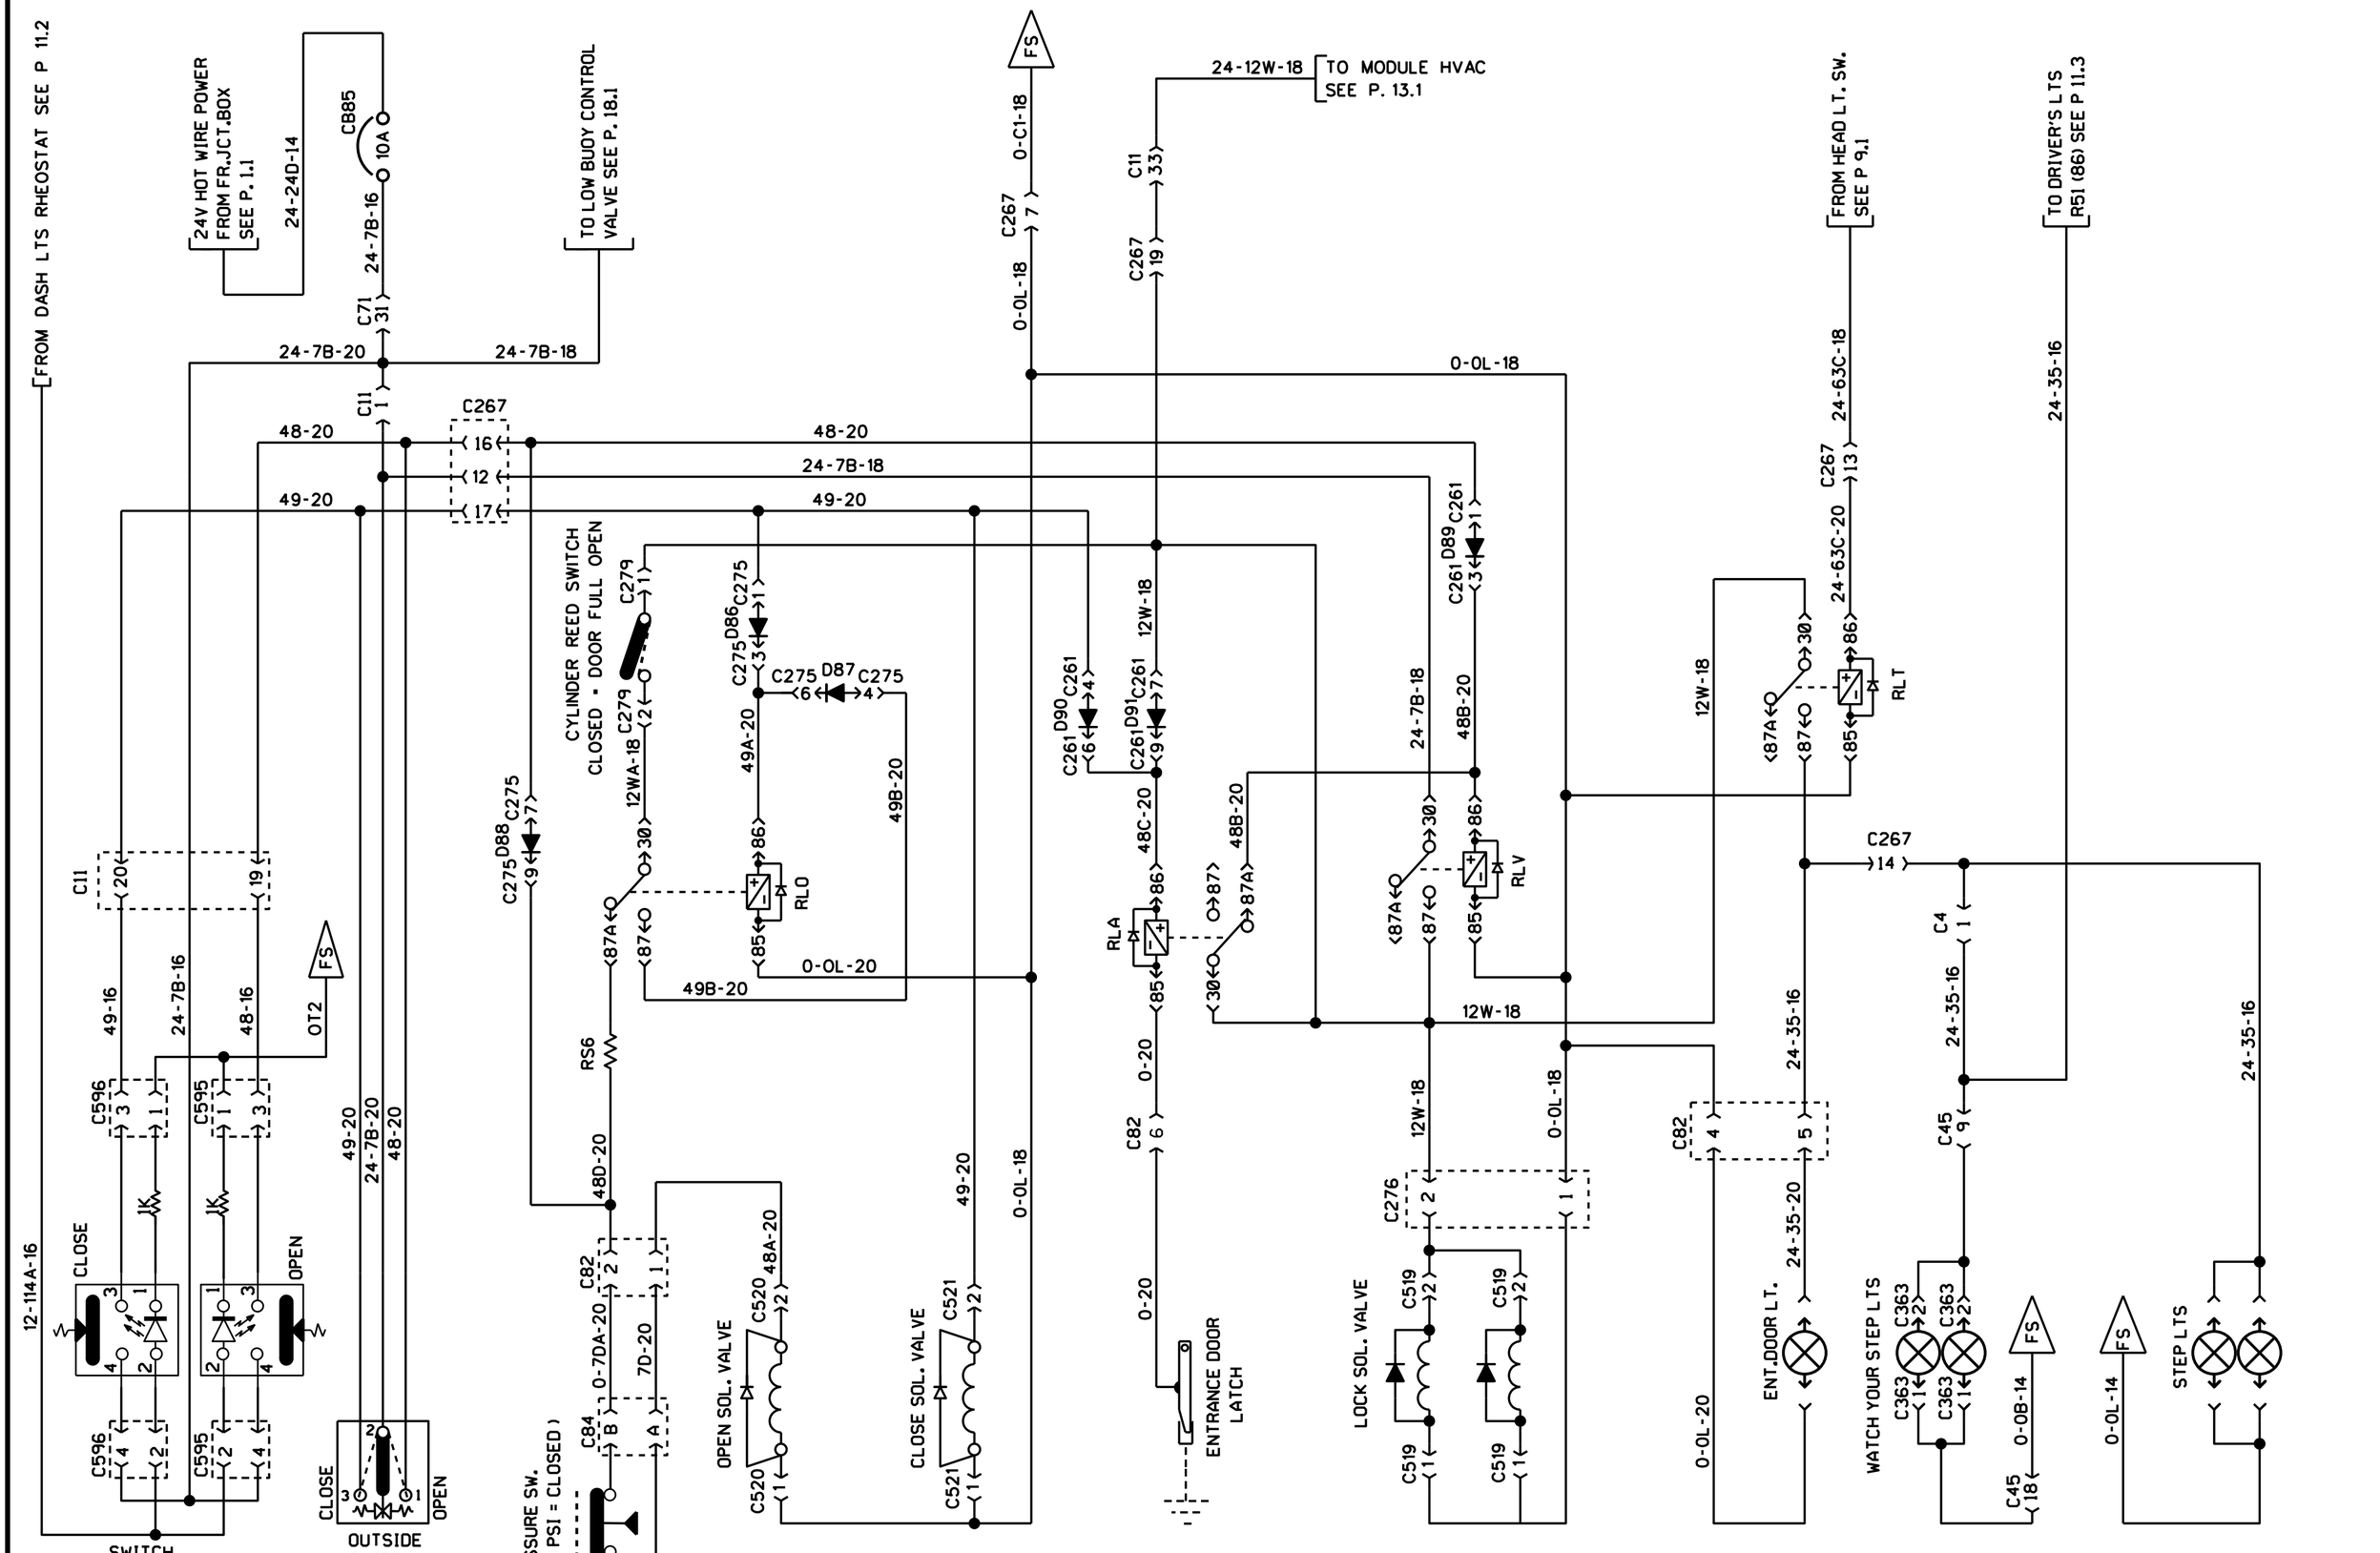


ENTRANCE DOOR (SEDAN)

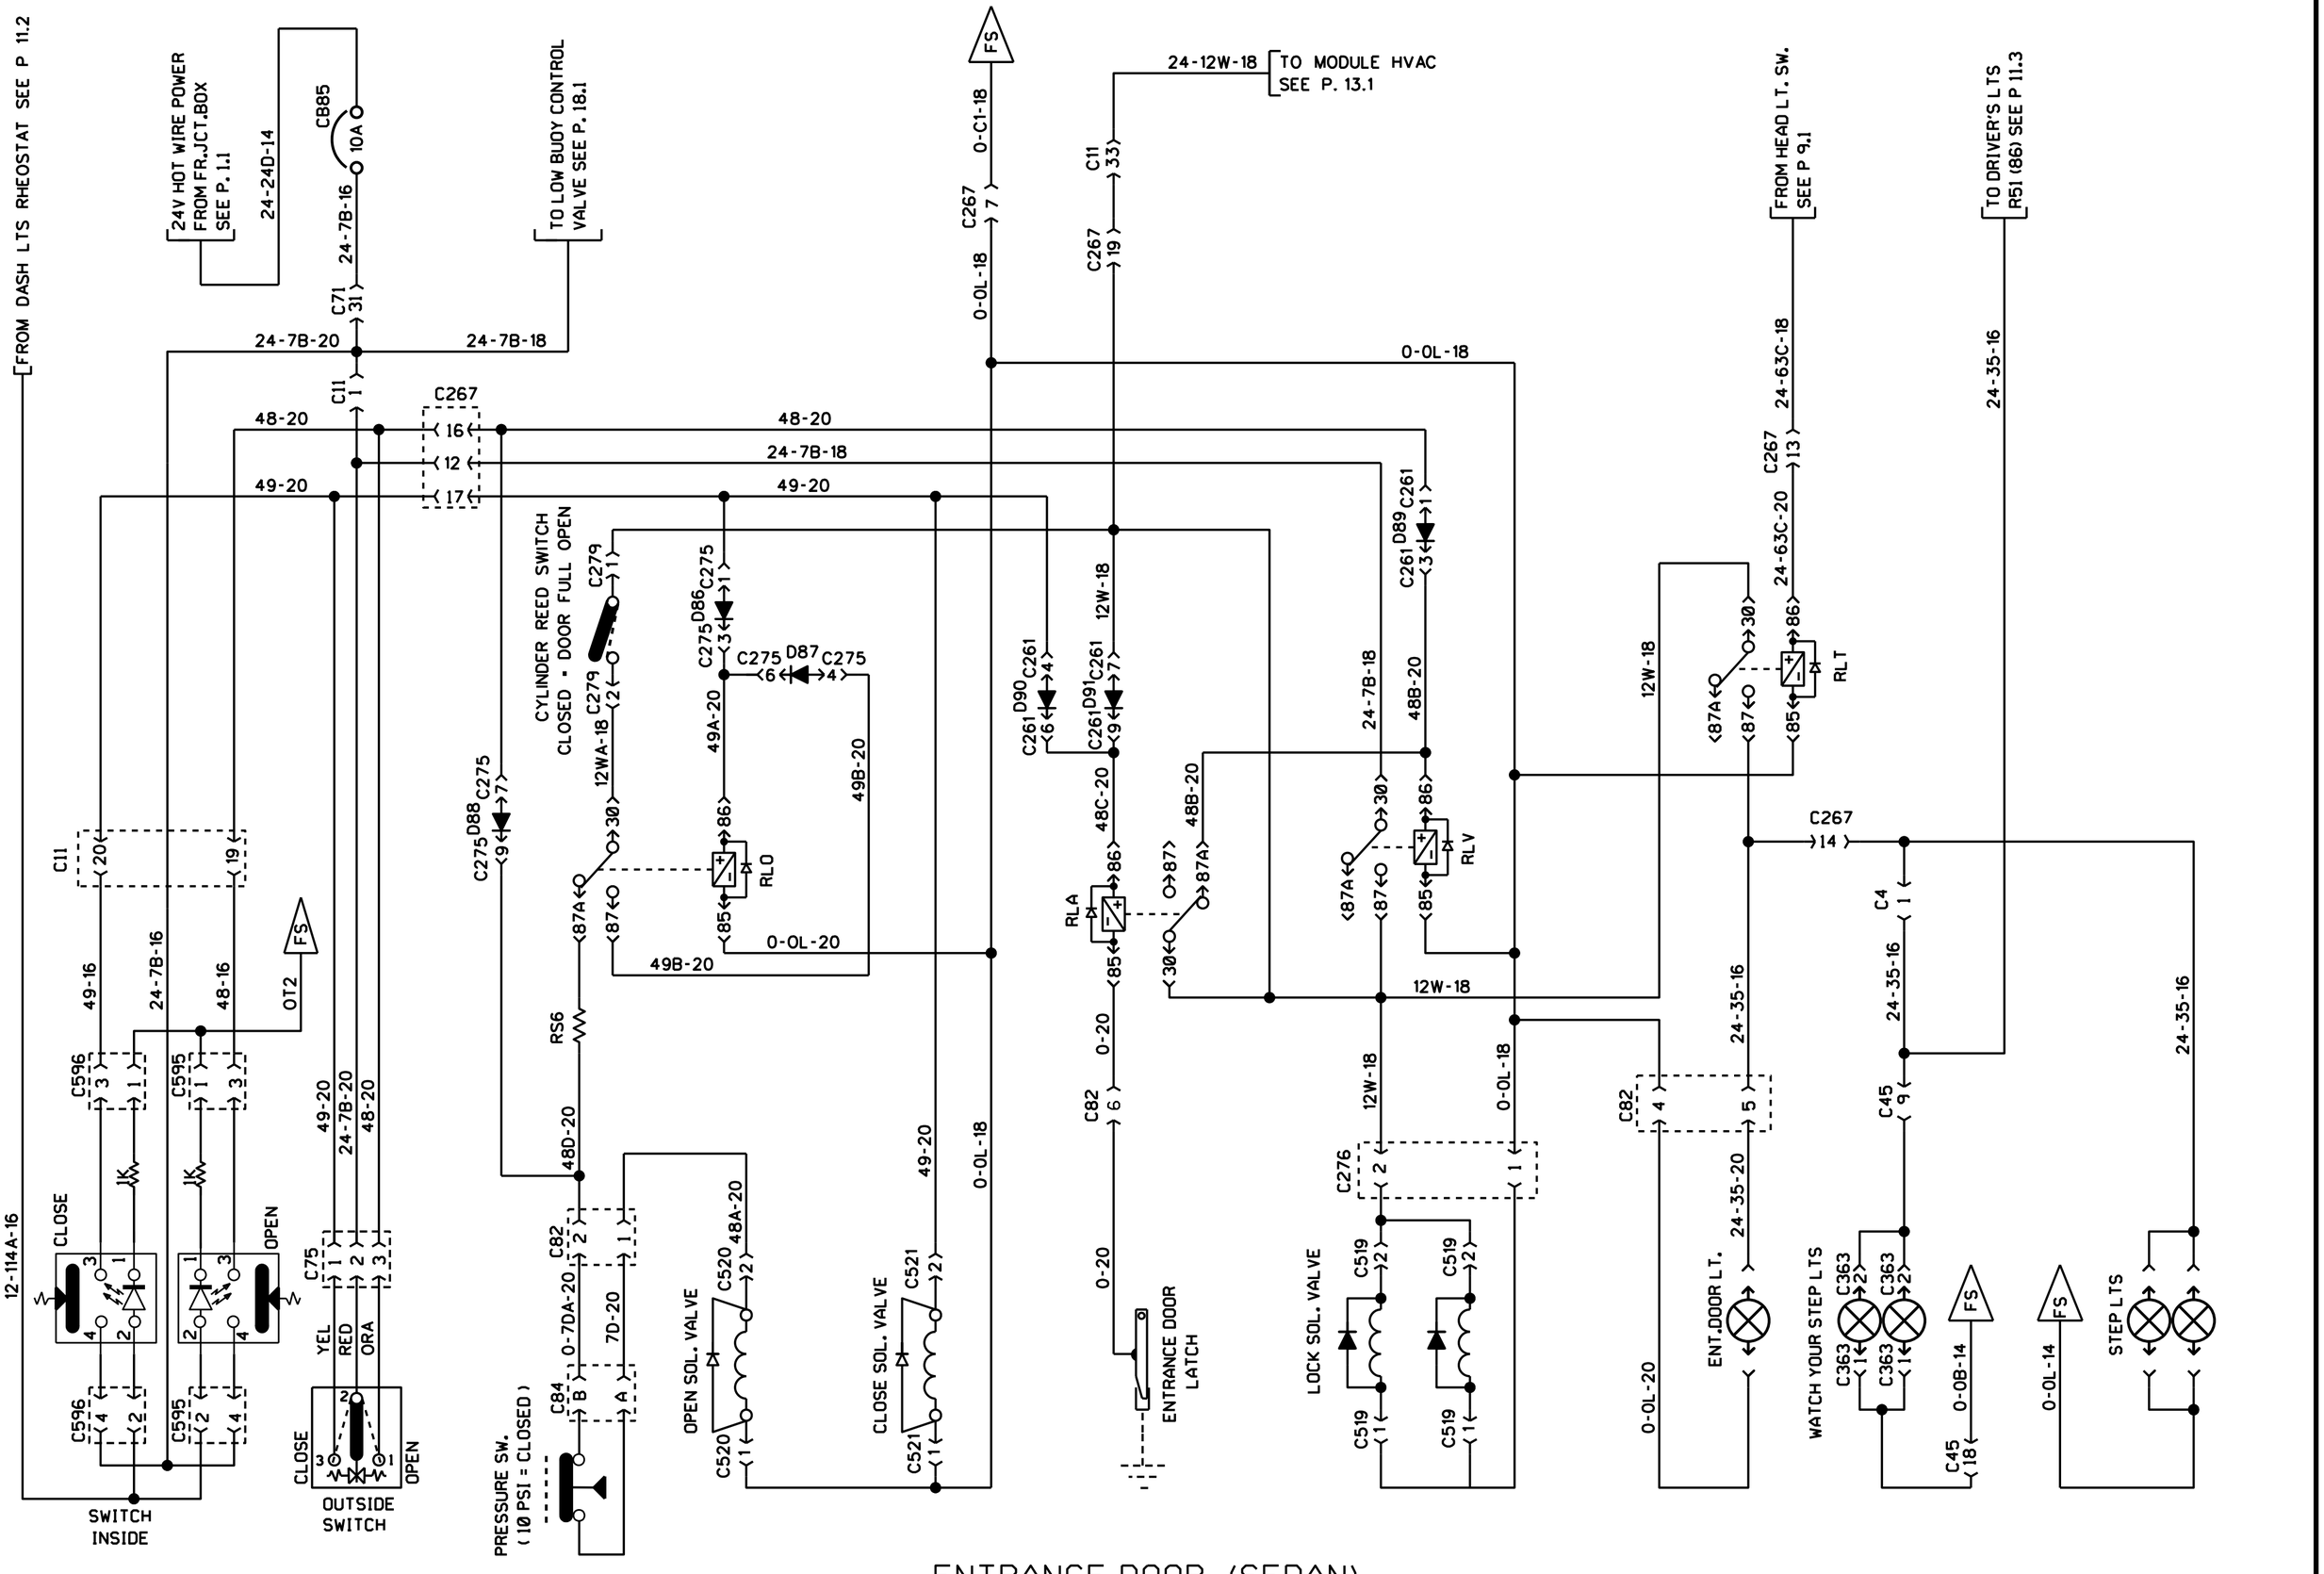


ENTRANCE DOOR (SEDAN)

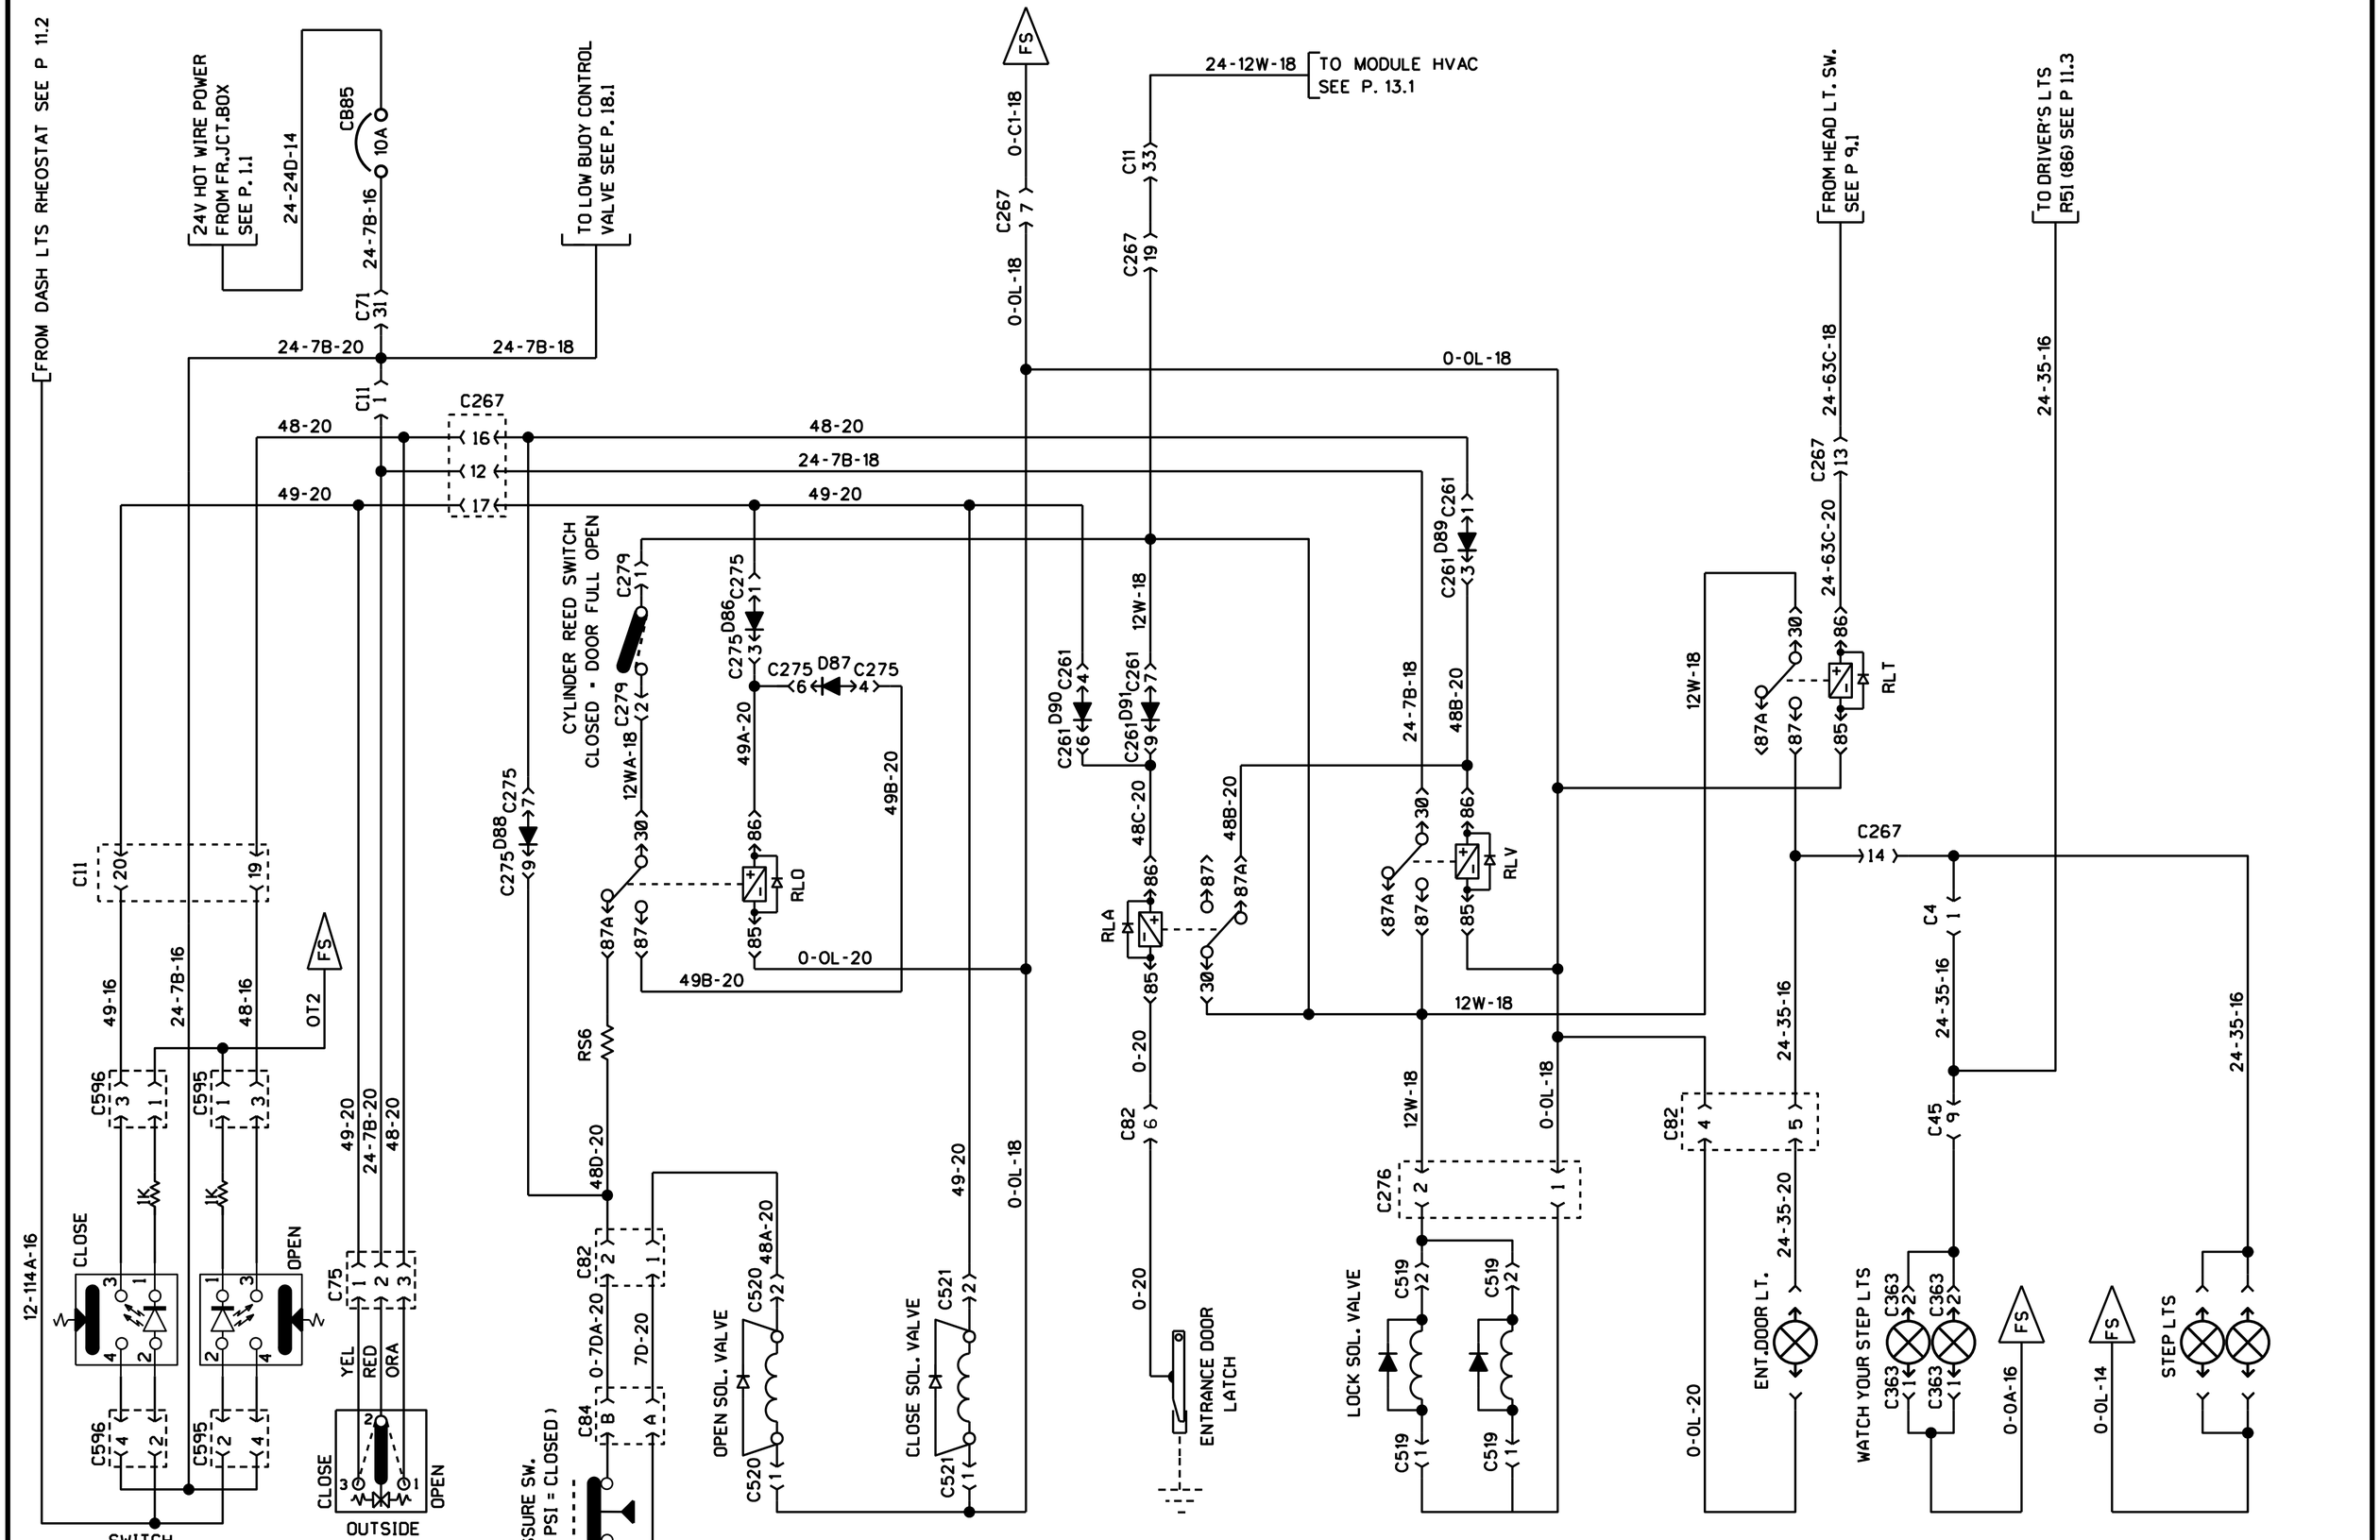

ENTRANCE DOOR (SEDAN)

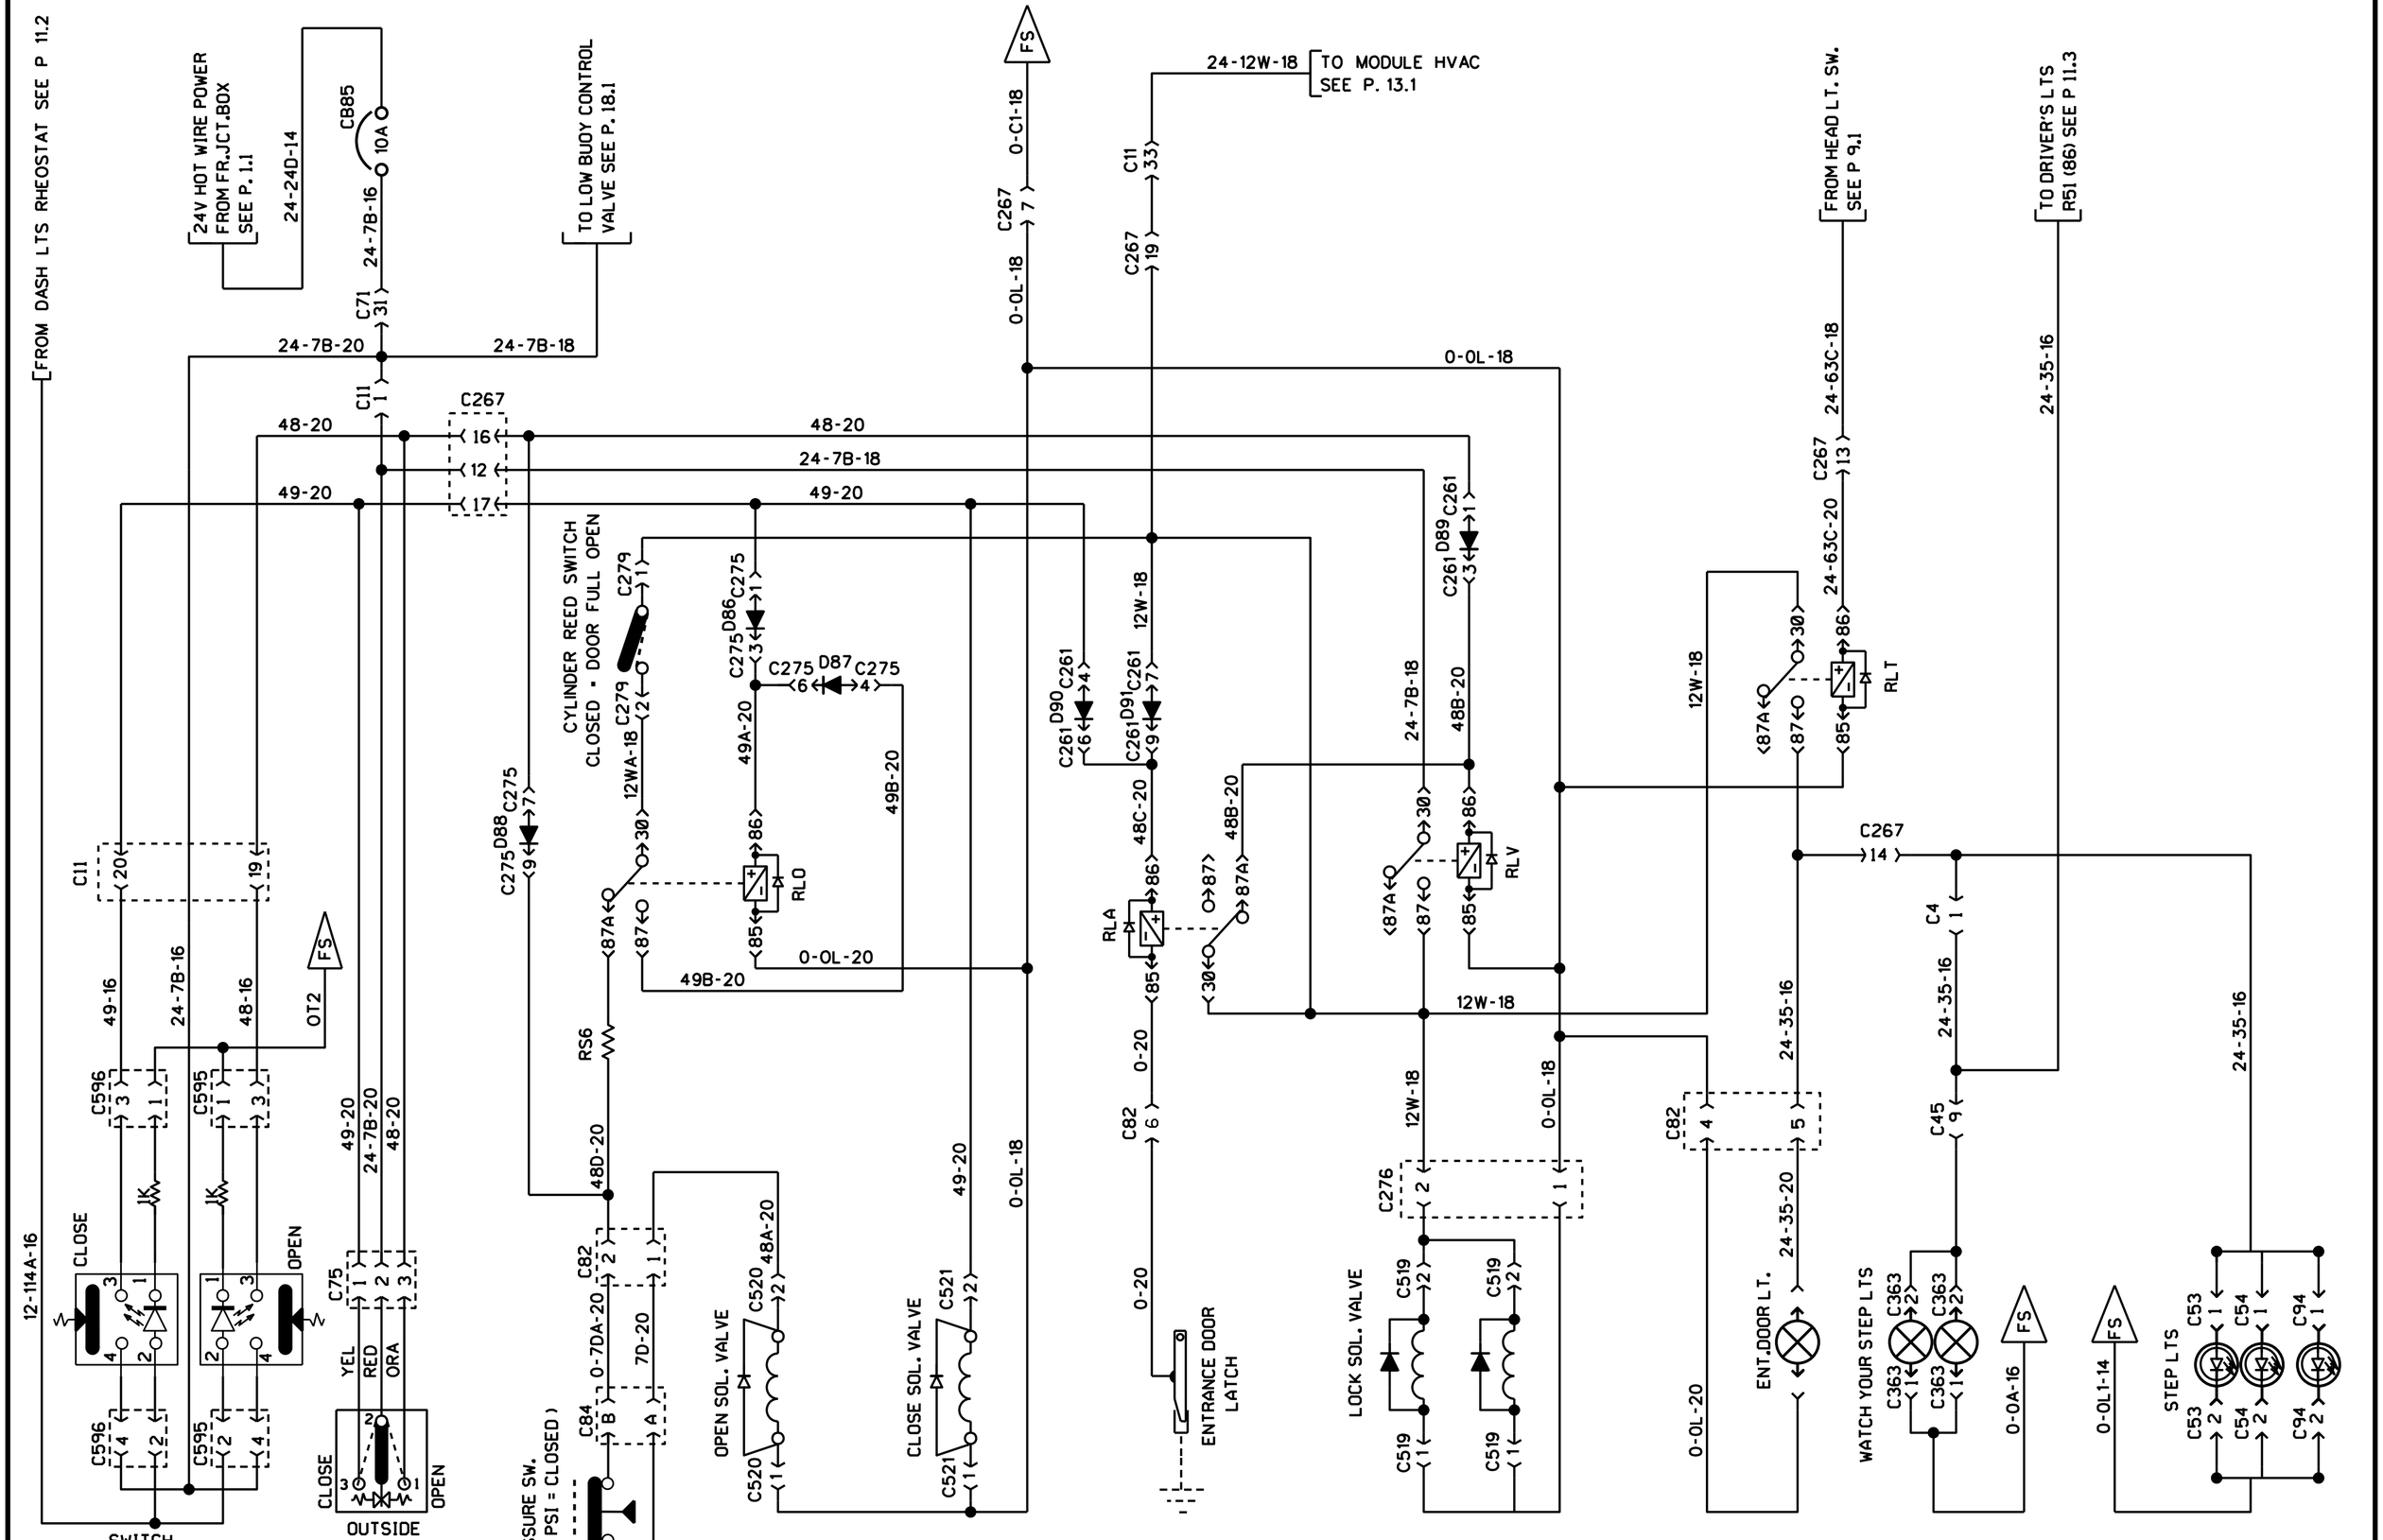


ENTRANCE DOOR (SEDAN)

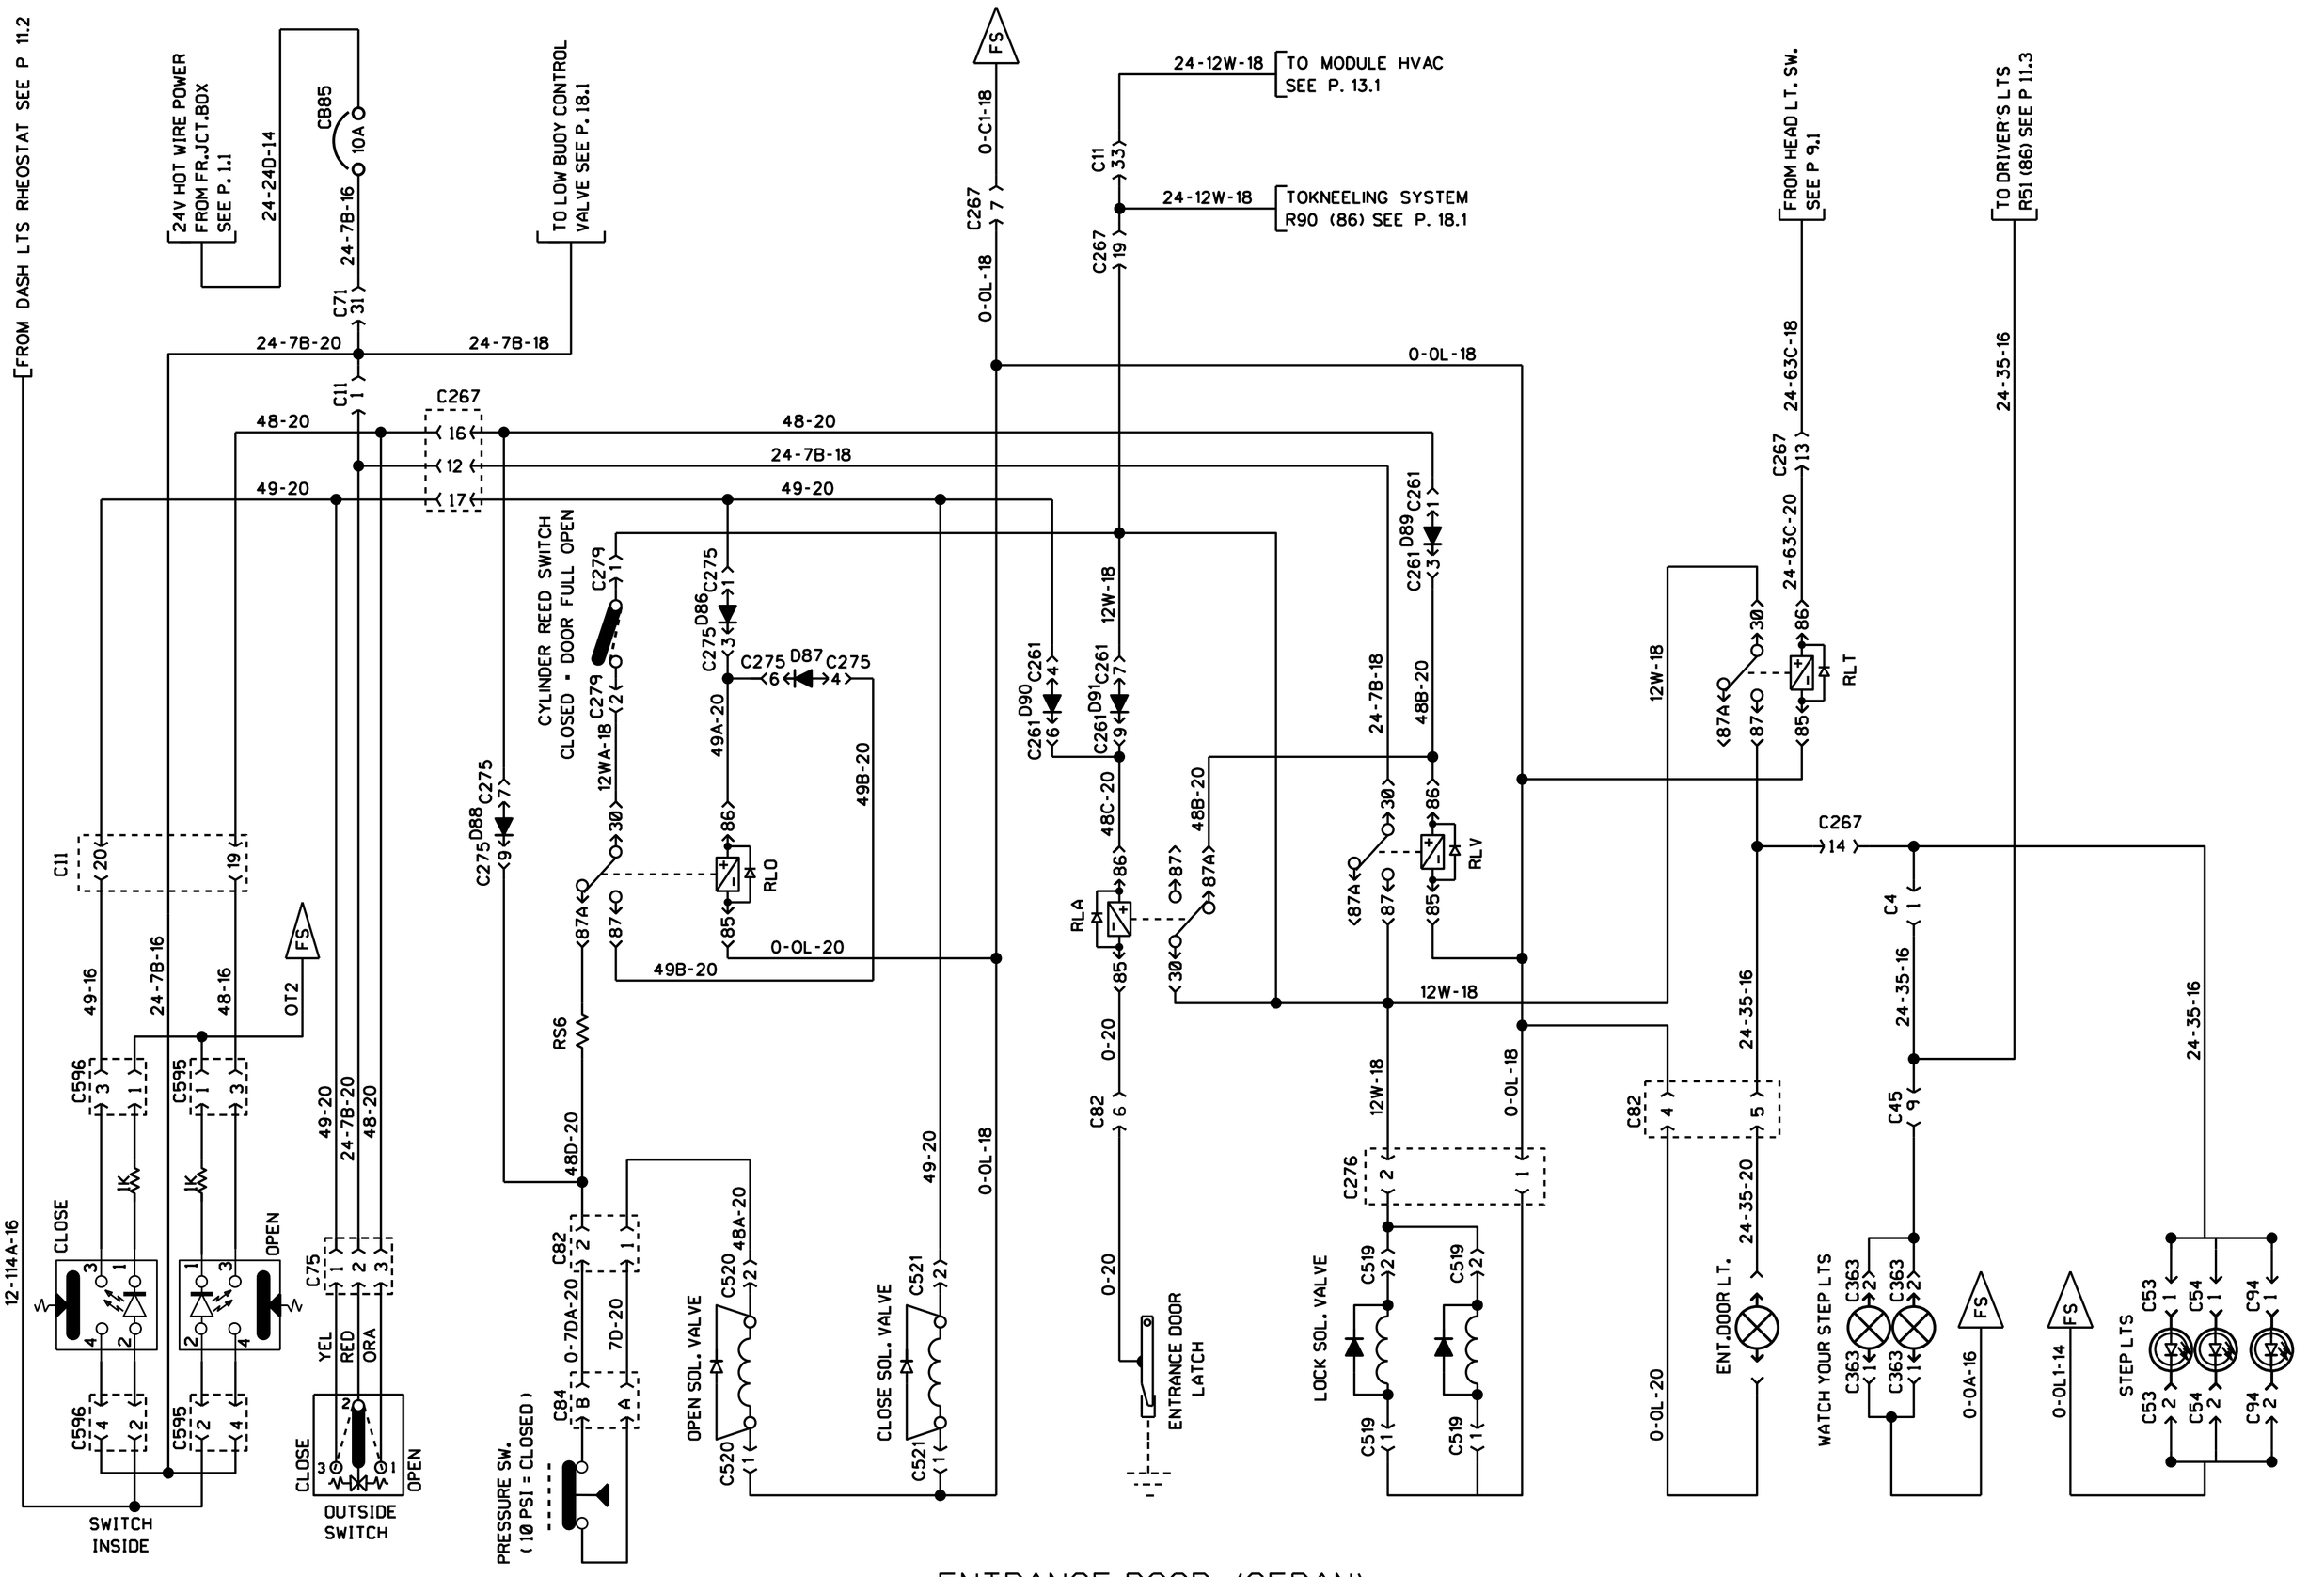


ENTRANCE DOOR (SEDAN)


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 16.1	REVISION 20

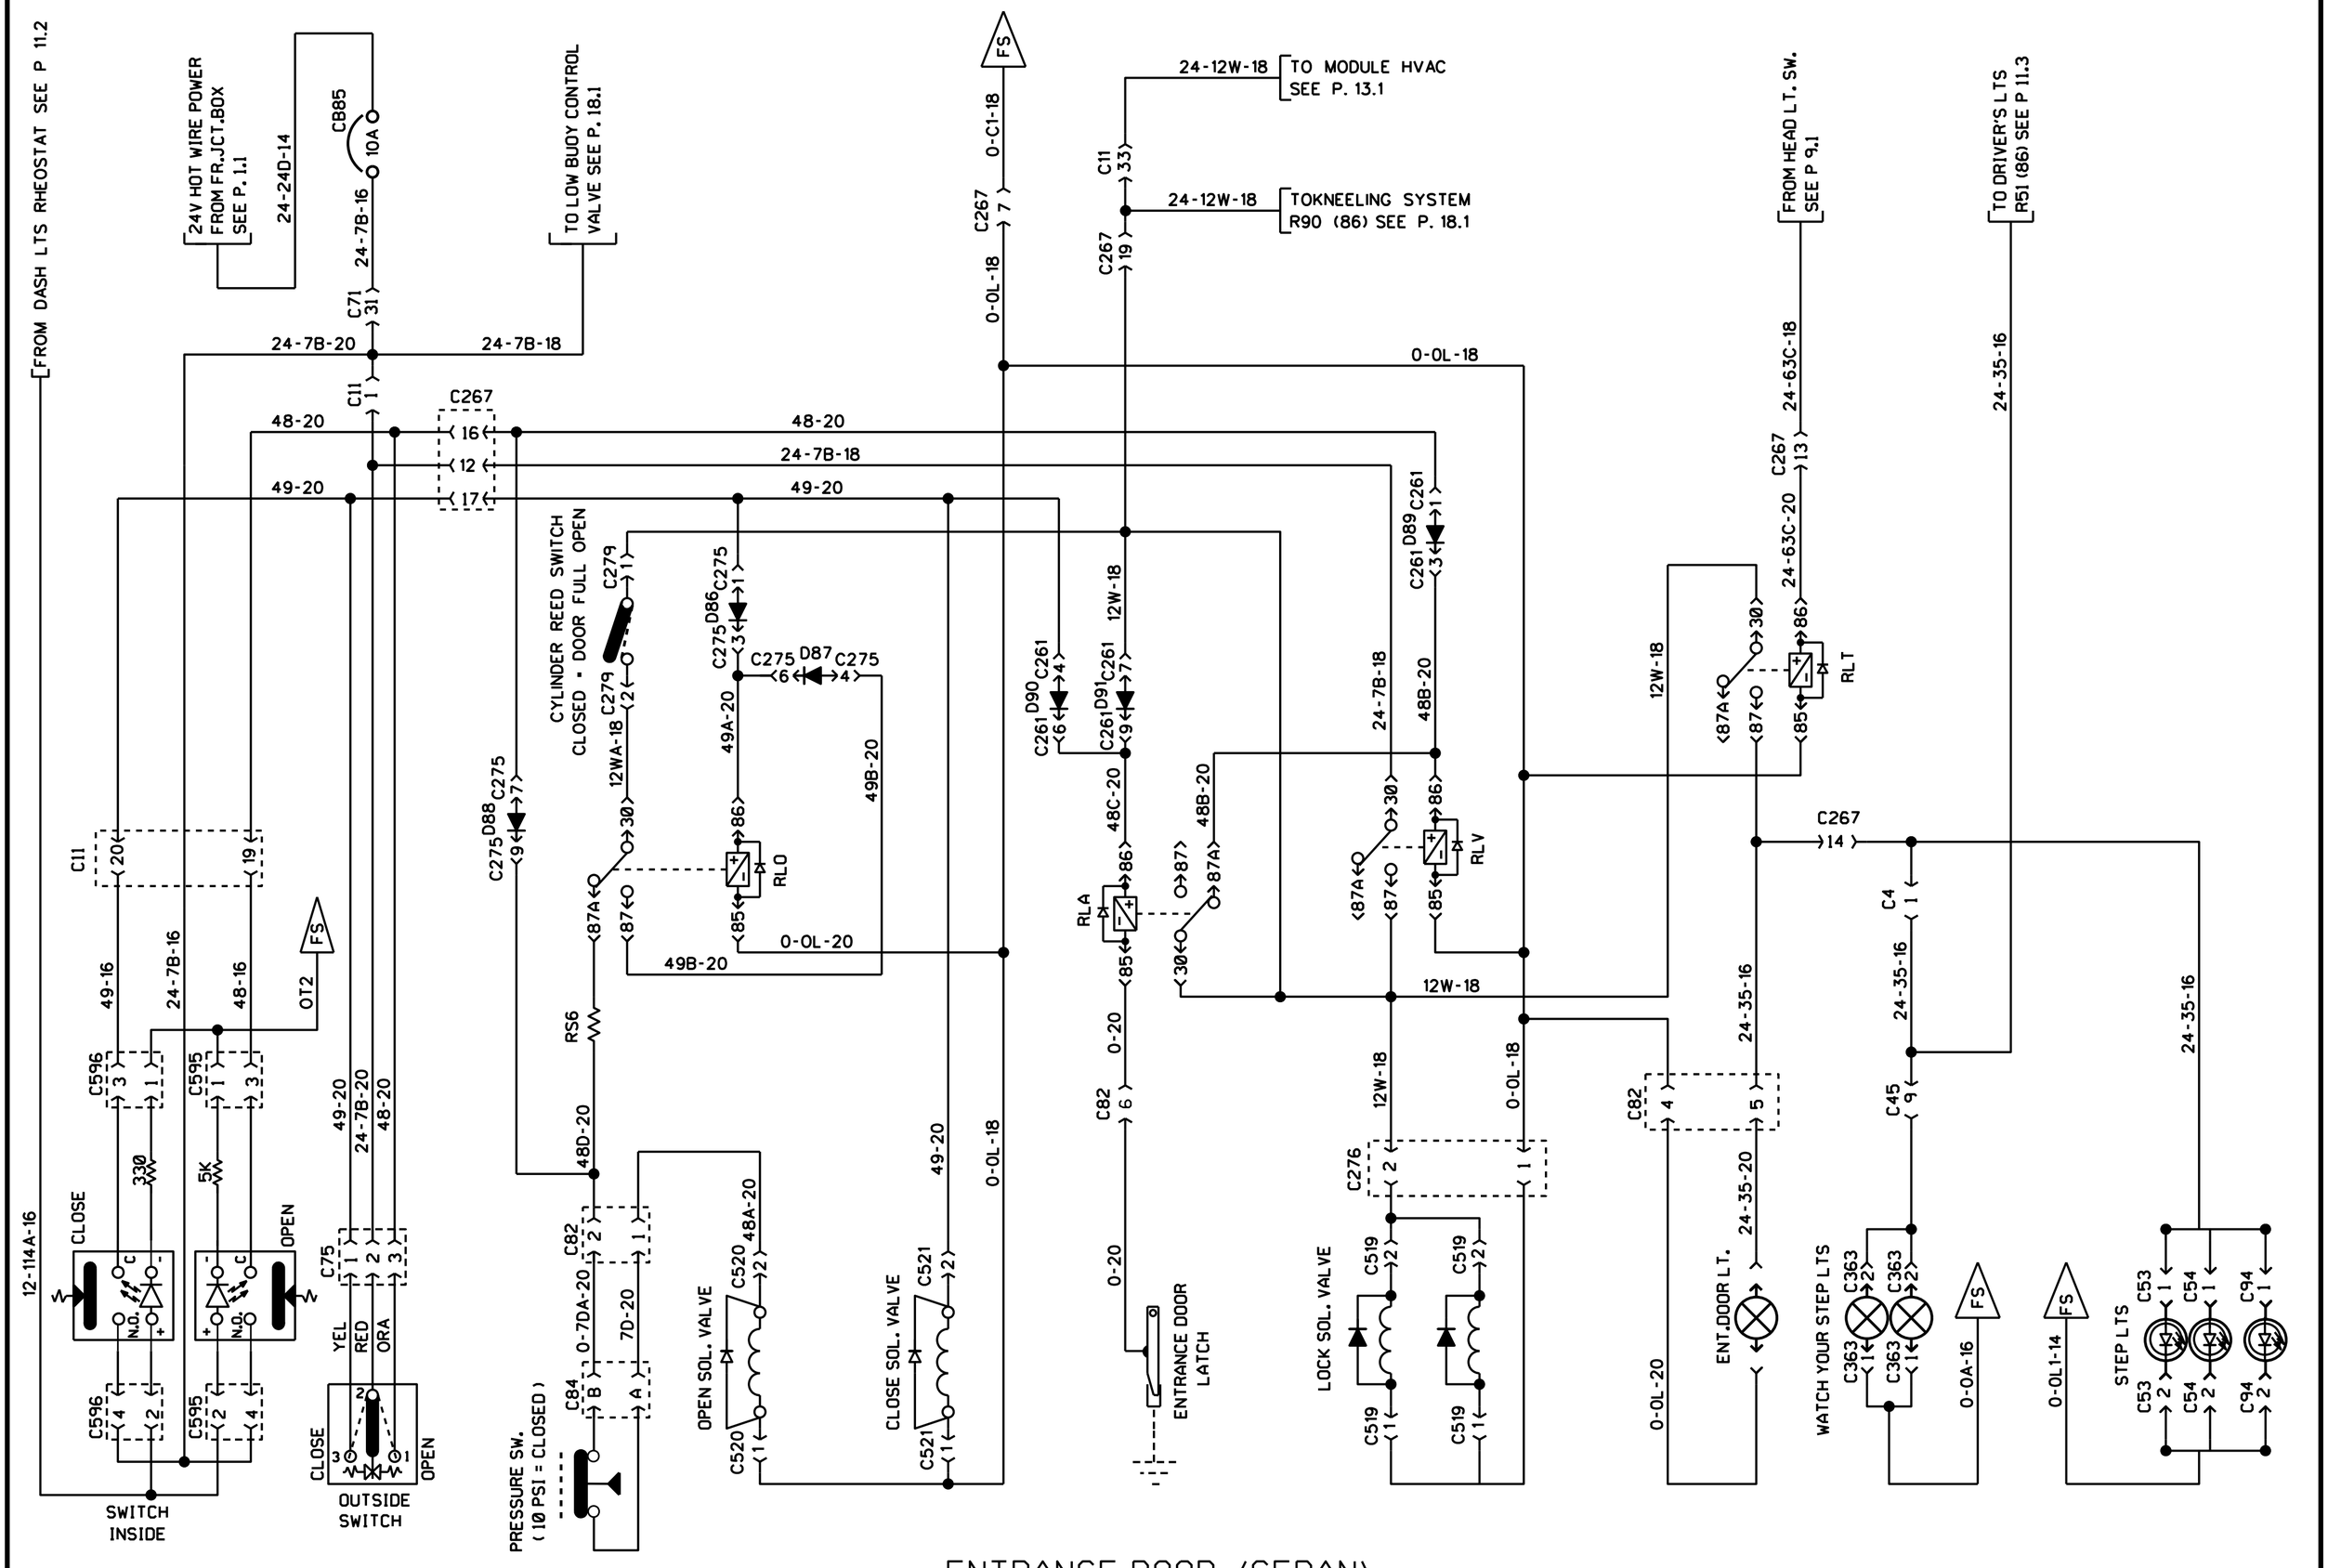


ENTRANCE DOOR (SEDAN)

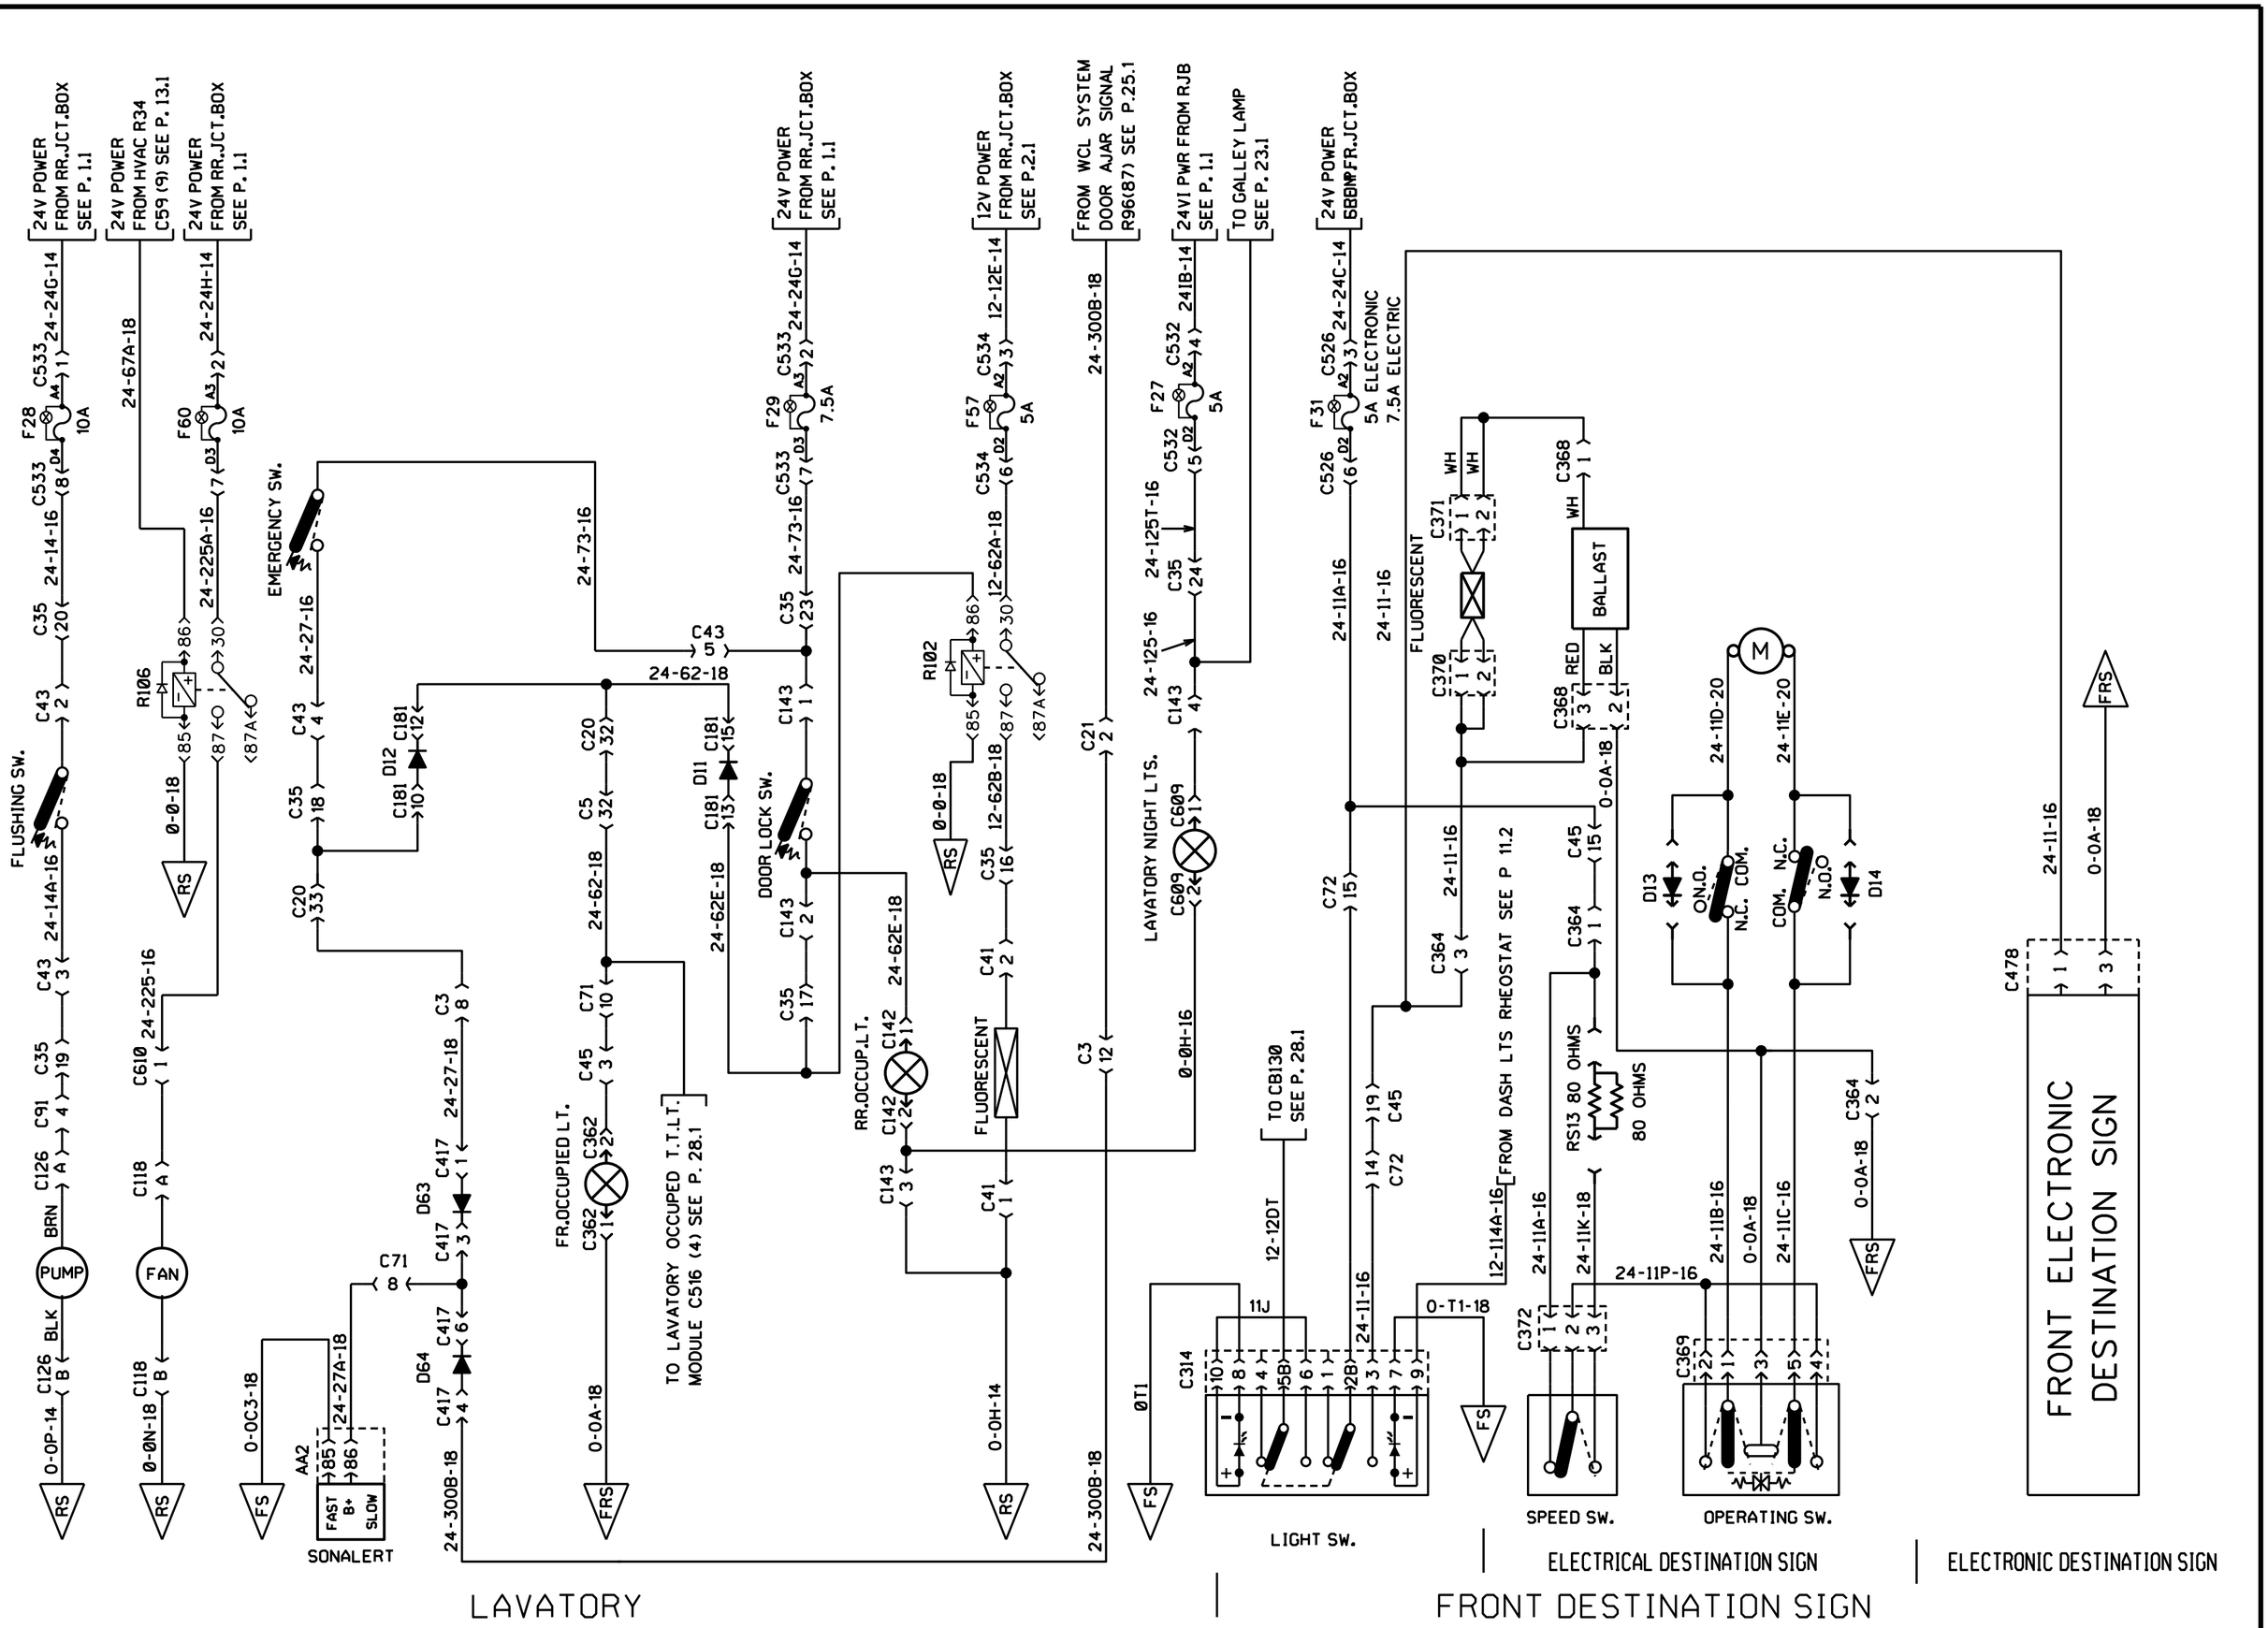


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 17.1	REVISION 00

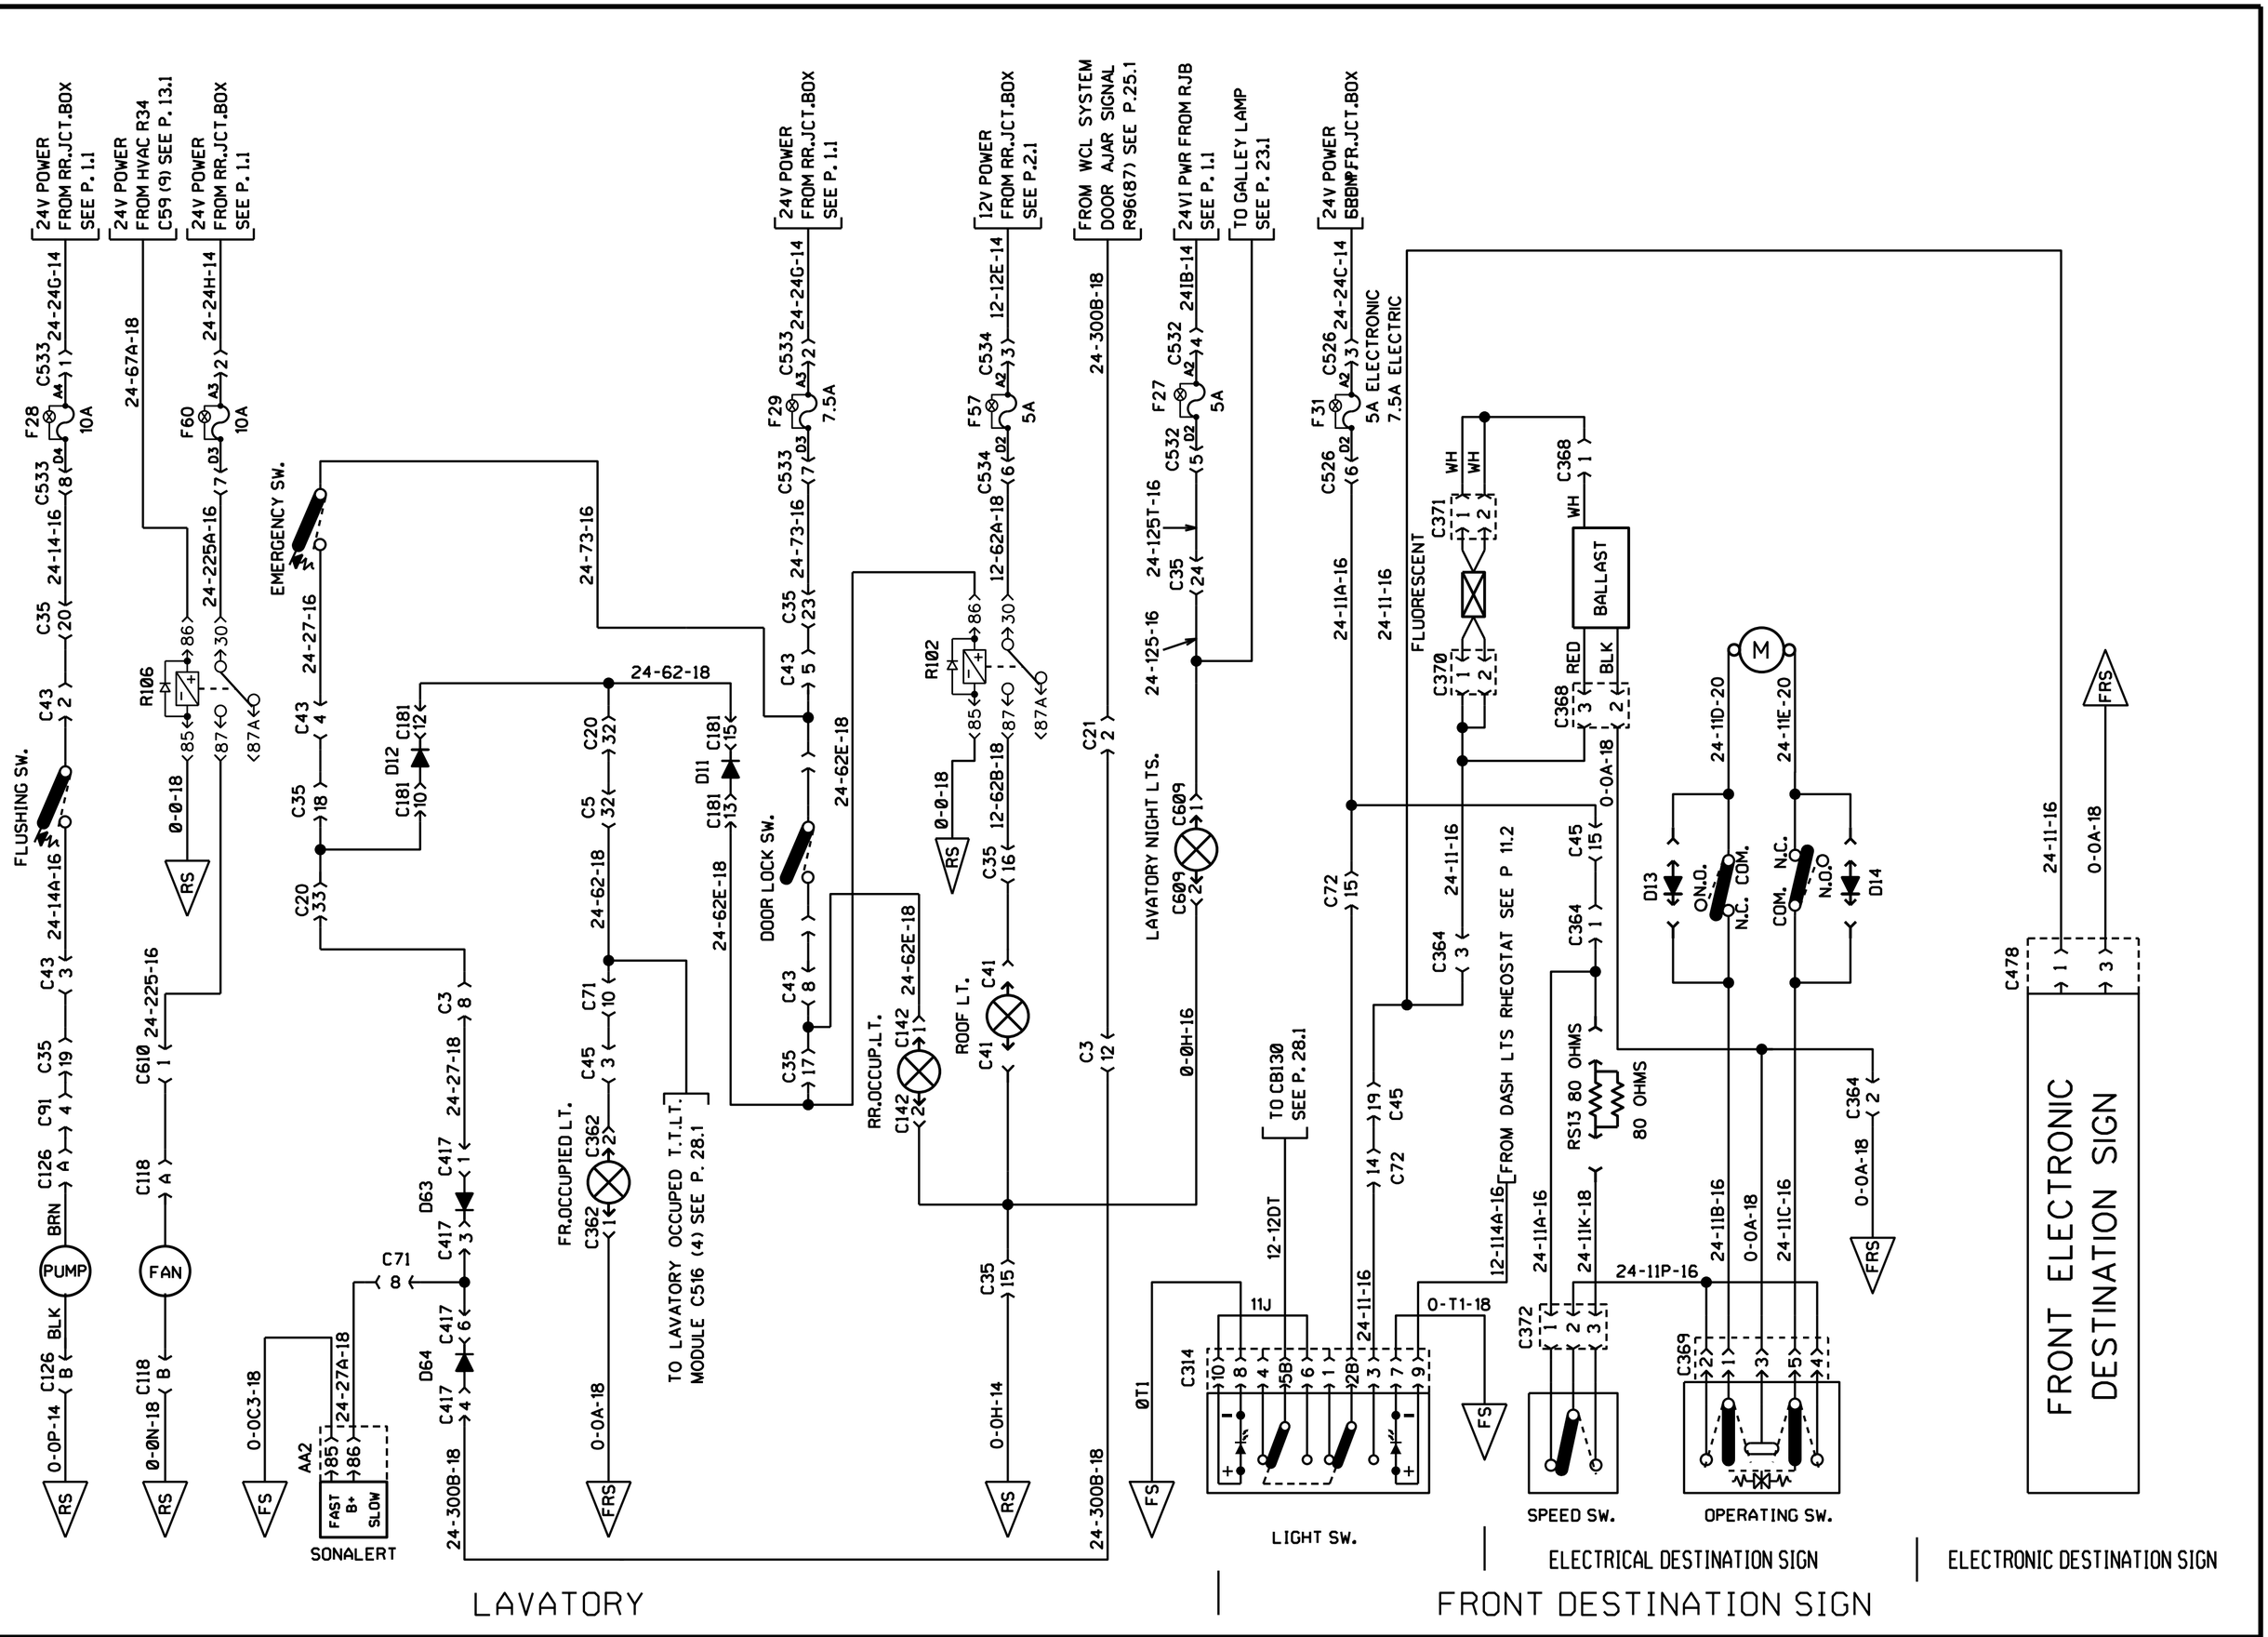



PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 17.1	REVISION 14

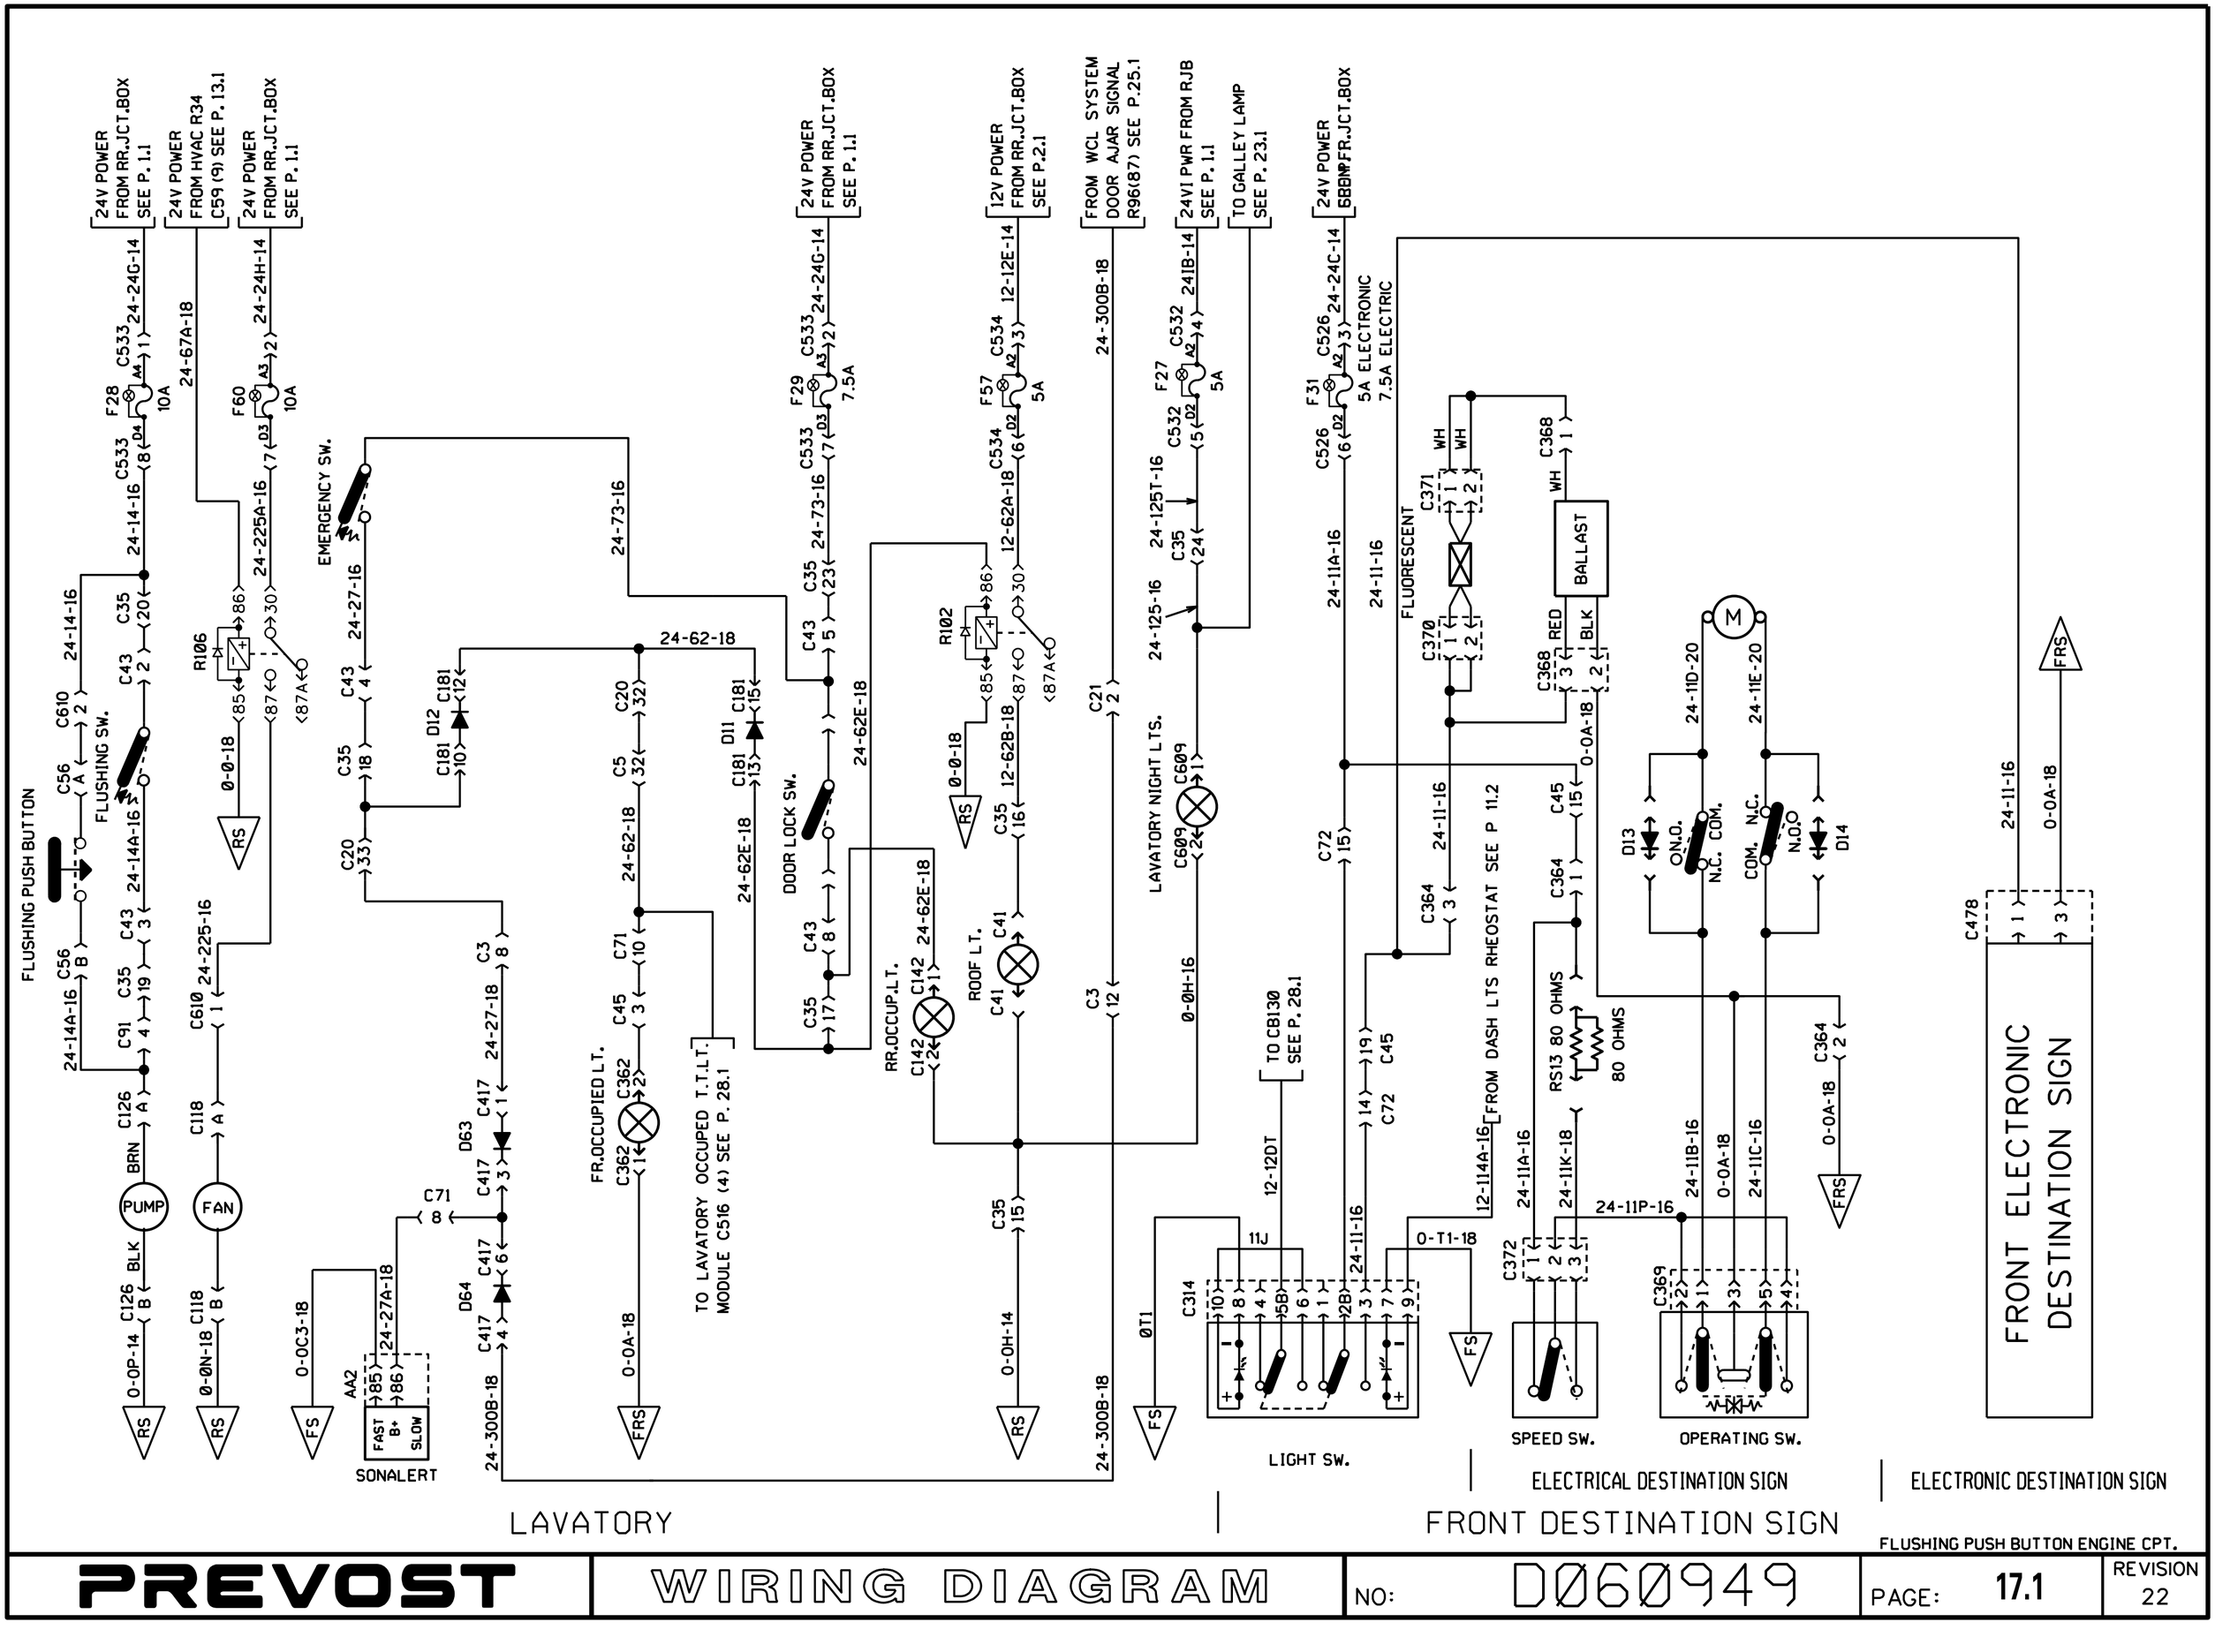

24V POWER FROM RR.JCT.BOX SEE P. 1.1
24V POWER FROM HVAC R34 C59 (9) SEE P. 13.1
24V POWER FROM RR.JCT.BOX SEE P. 1.1
24V POWER FROM RR.JCT.BOX SEE P. 1.1
12V POWER FROM RR.JCT.BOX SEE P.2.1
FROM WCL SYSTEM DOOR AJAR SIGNAL R96(87) SEE P.25.1
24V1 PWR FROM RJB SEE P. 1.1
TO GALLEY LAMP SEE P. 23.1
24V POWER 6BBNFFR.JCT.BOX
5A ELECTRONIC
7.5A ELECTRIC
EMERGENCY SW.
FLUSHING PUSH BUTTON
FLUSHING SW.
PUMP
FAN
SONALERT
FAST B+ SLOW
FR.OCCUPIED LT.
TO LAVATORY OCCUPED T.T.L.T. MODULE C516 (4) SEE P. 28.1
DOOR LOCK SW.
RR.OCCUP.LT.
ROOF LT.
LAVATORY NIGHT LTS.
TO CB130 SEE P. 28.1
FROM DASH LTS RHEOSTAT SEE P 11.2
80 OHMS
FLUORESCENT
BALLAST
LIGHT SW.
SPEED SW.
OPERATING SW.
FRONT ELECTRONIC DESTINATION SIGN
LAVATORY
ELECTRICAL DESTINATION SIGN
ELECTRONIC DESTINATION SIGN
FRONT DESTINATION SIGN
FLUSHING PUSH BUTTON ENGINE CPT.

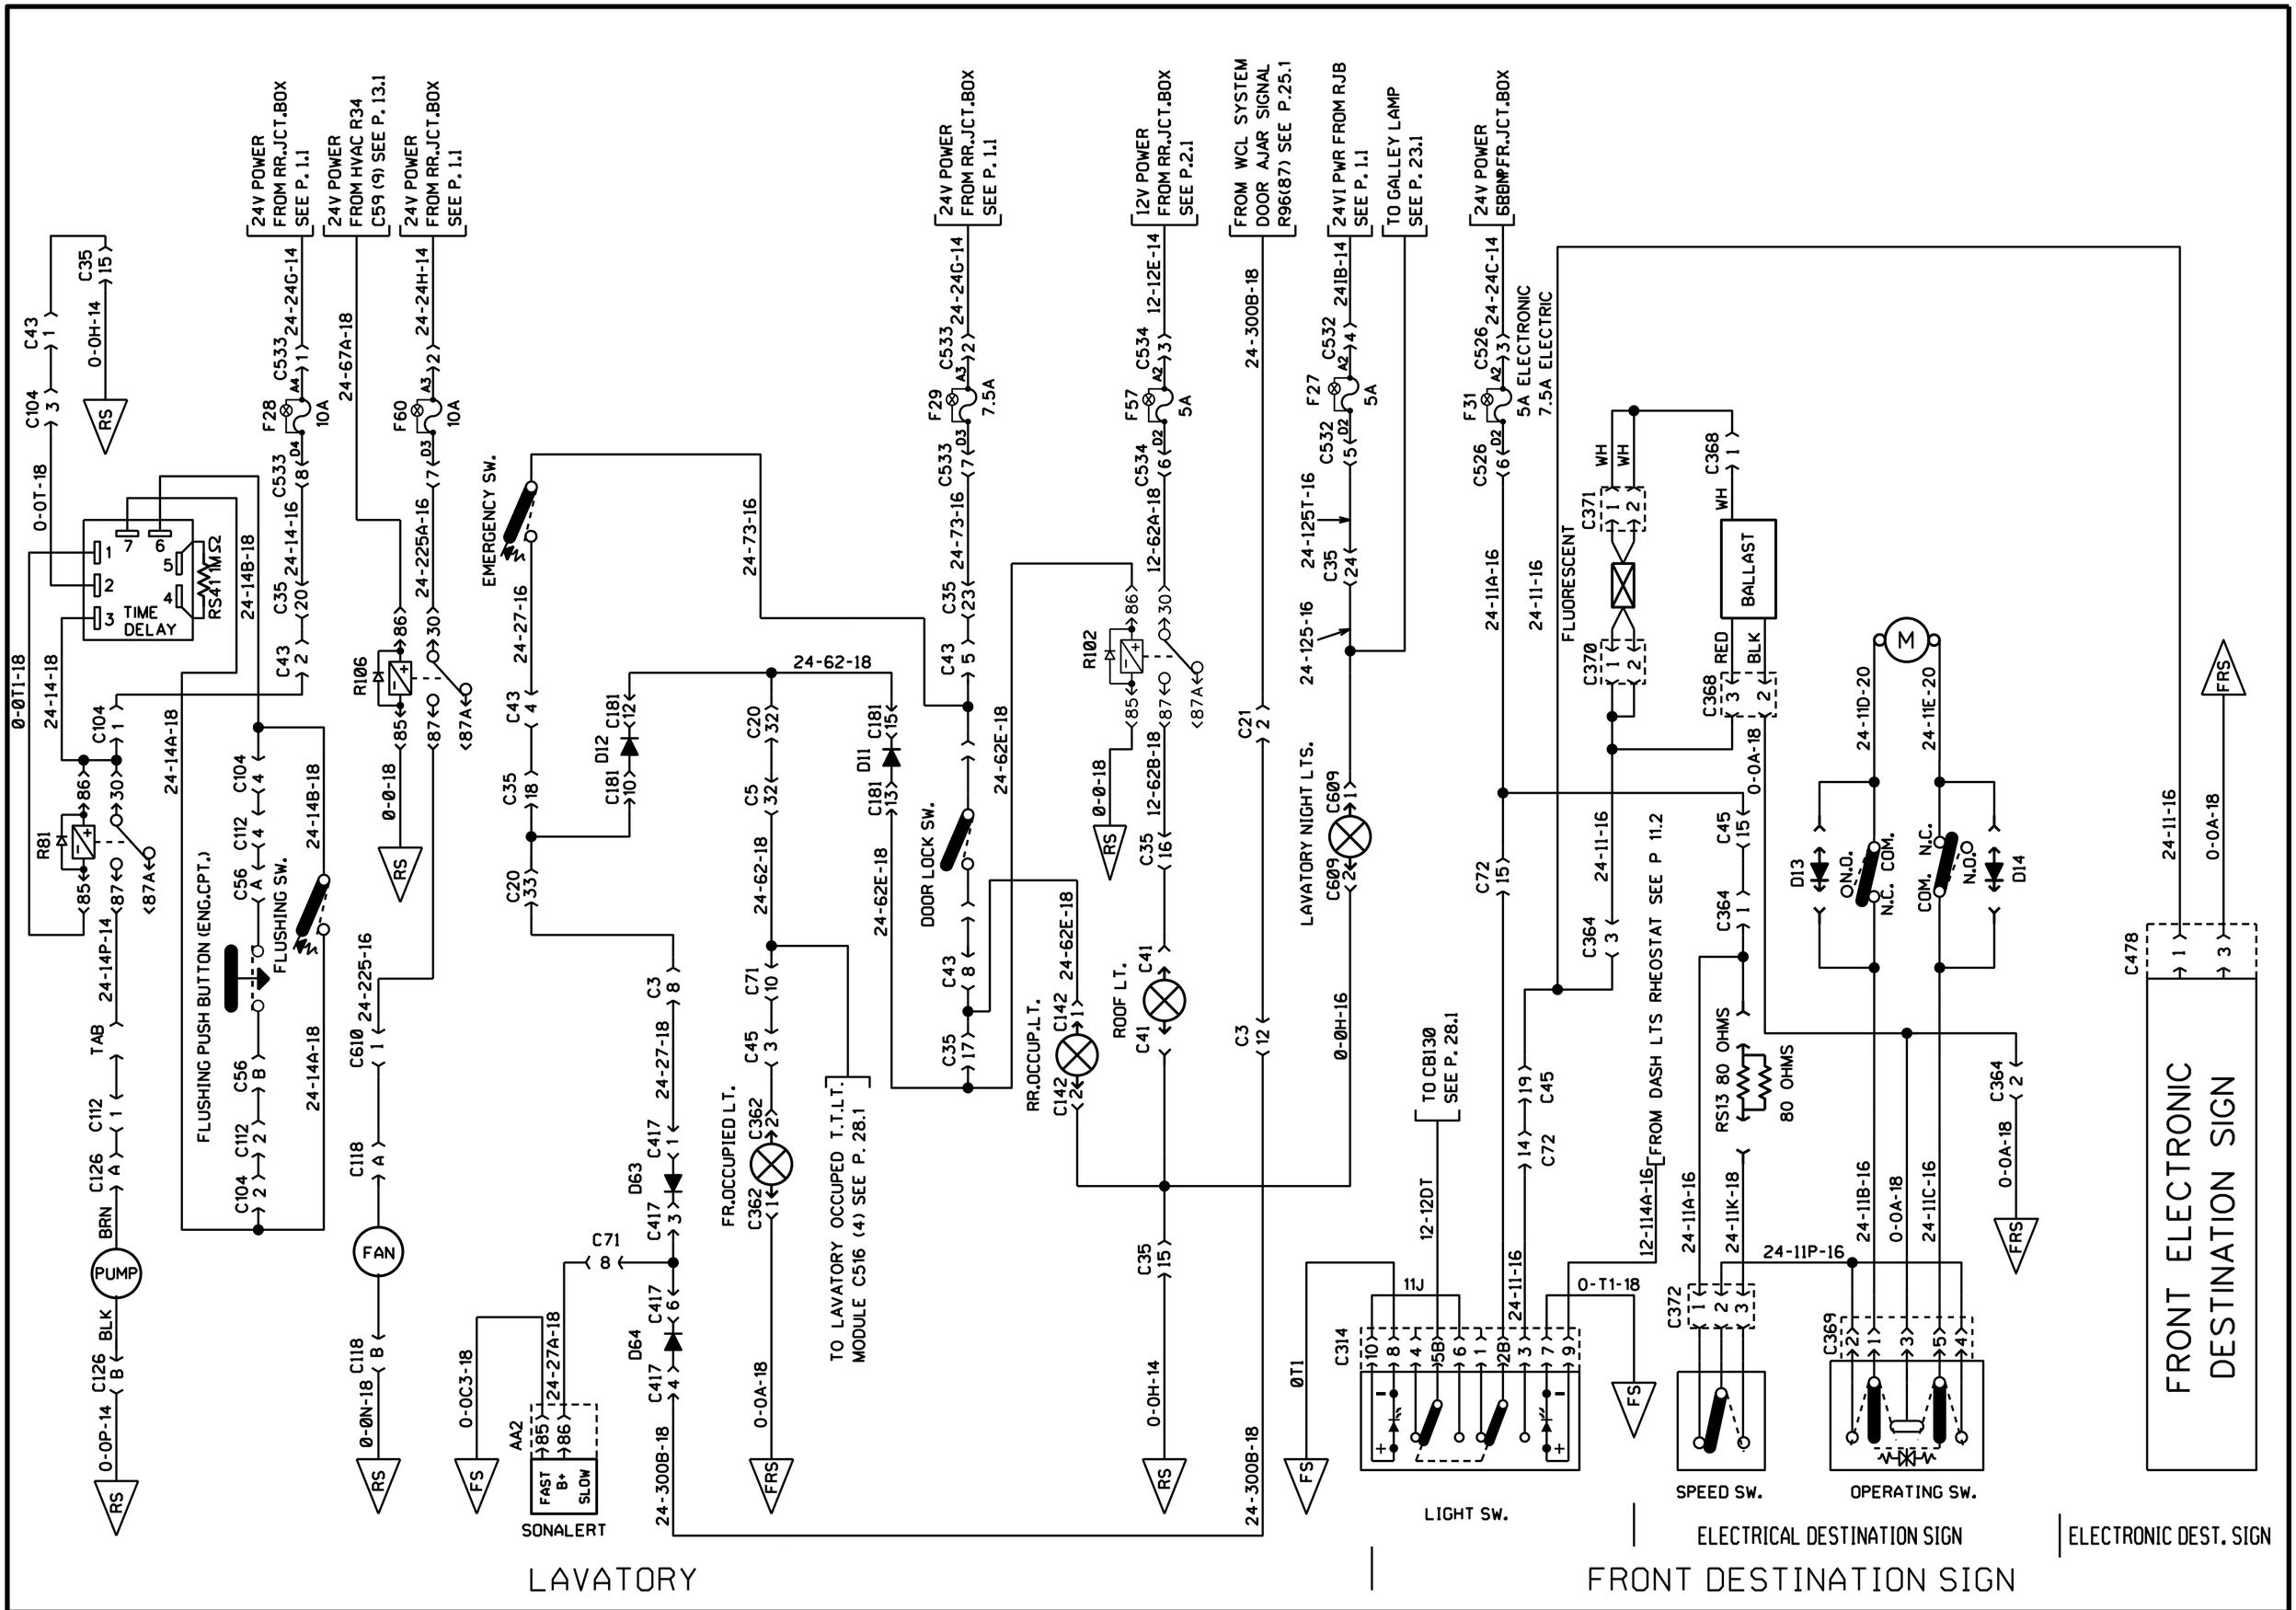

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 17.1	REVISION 24

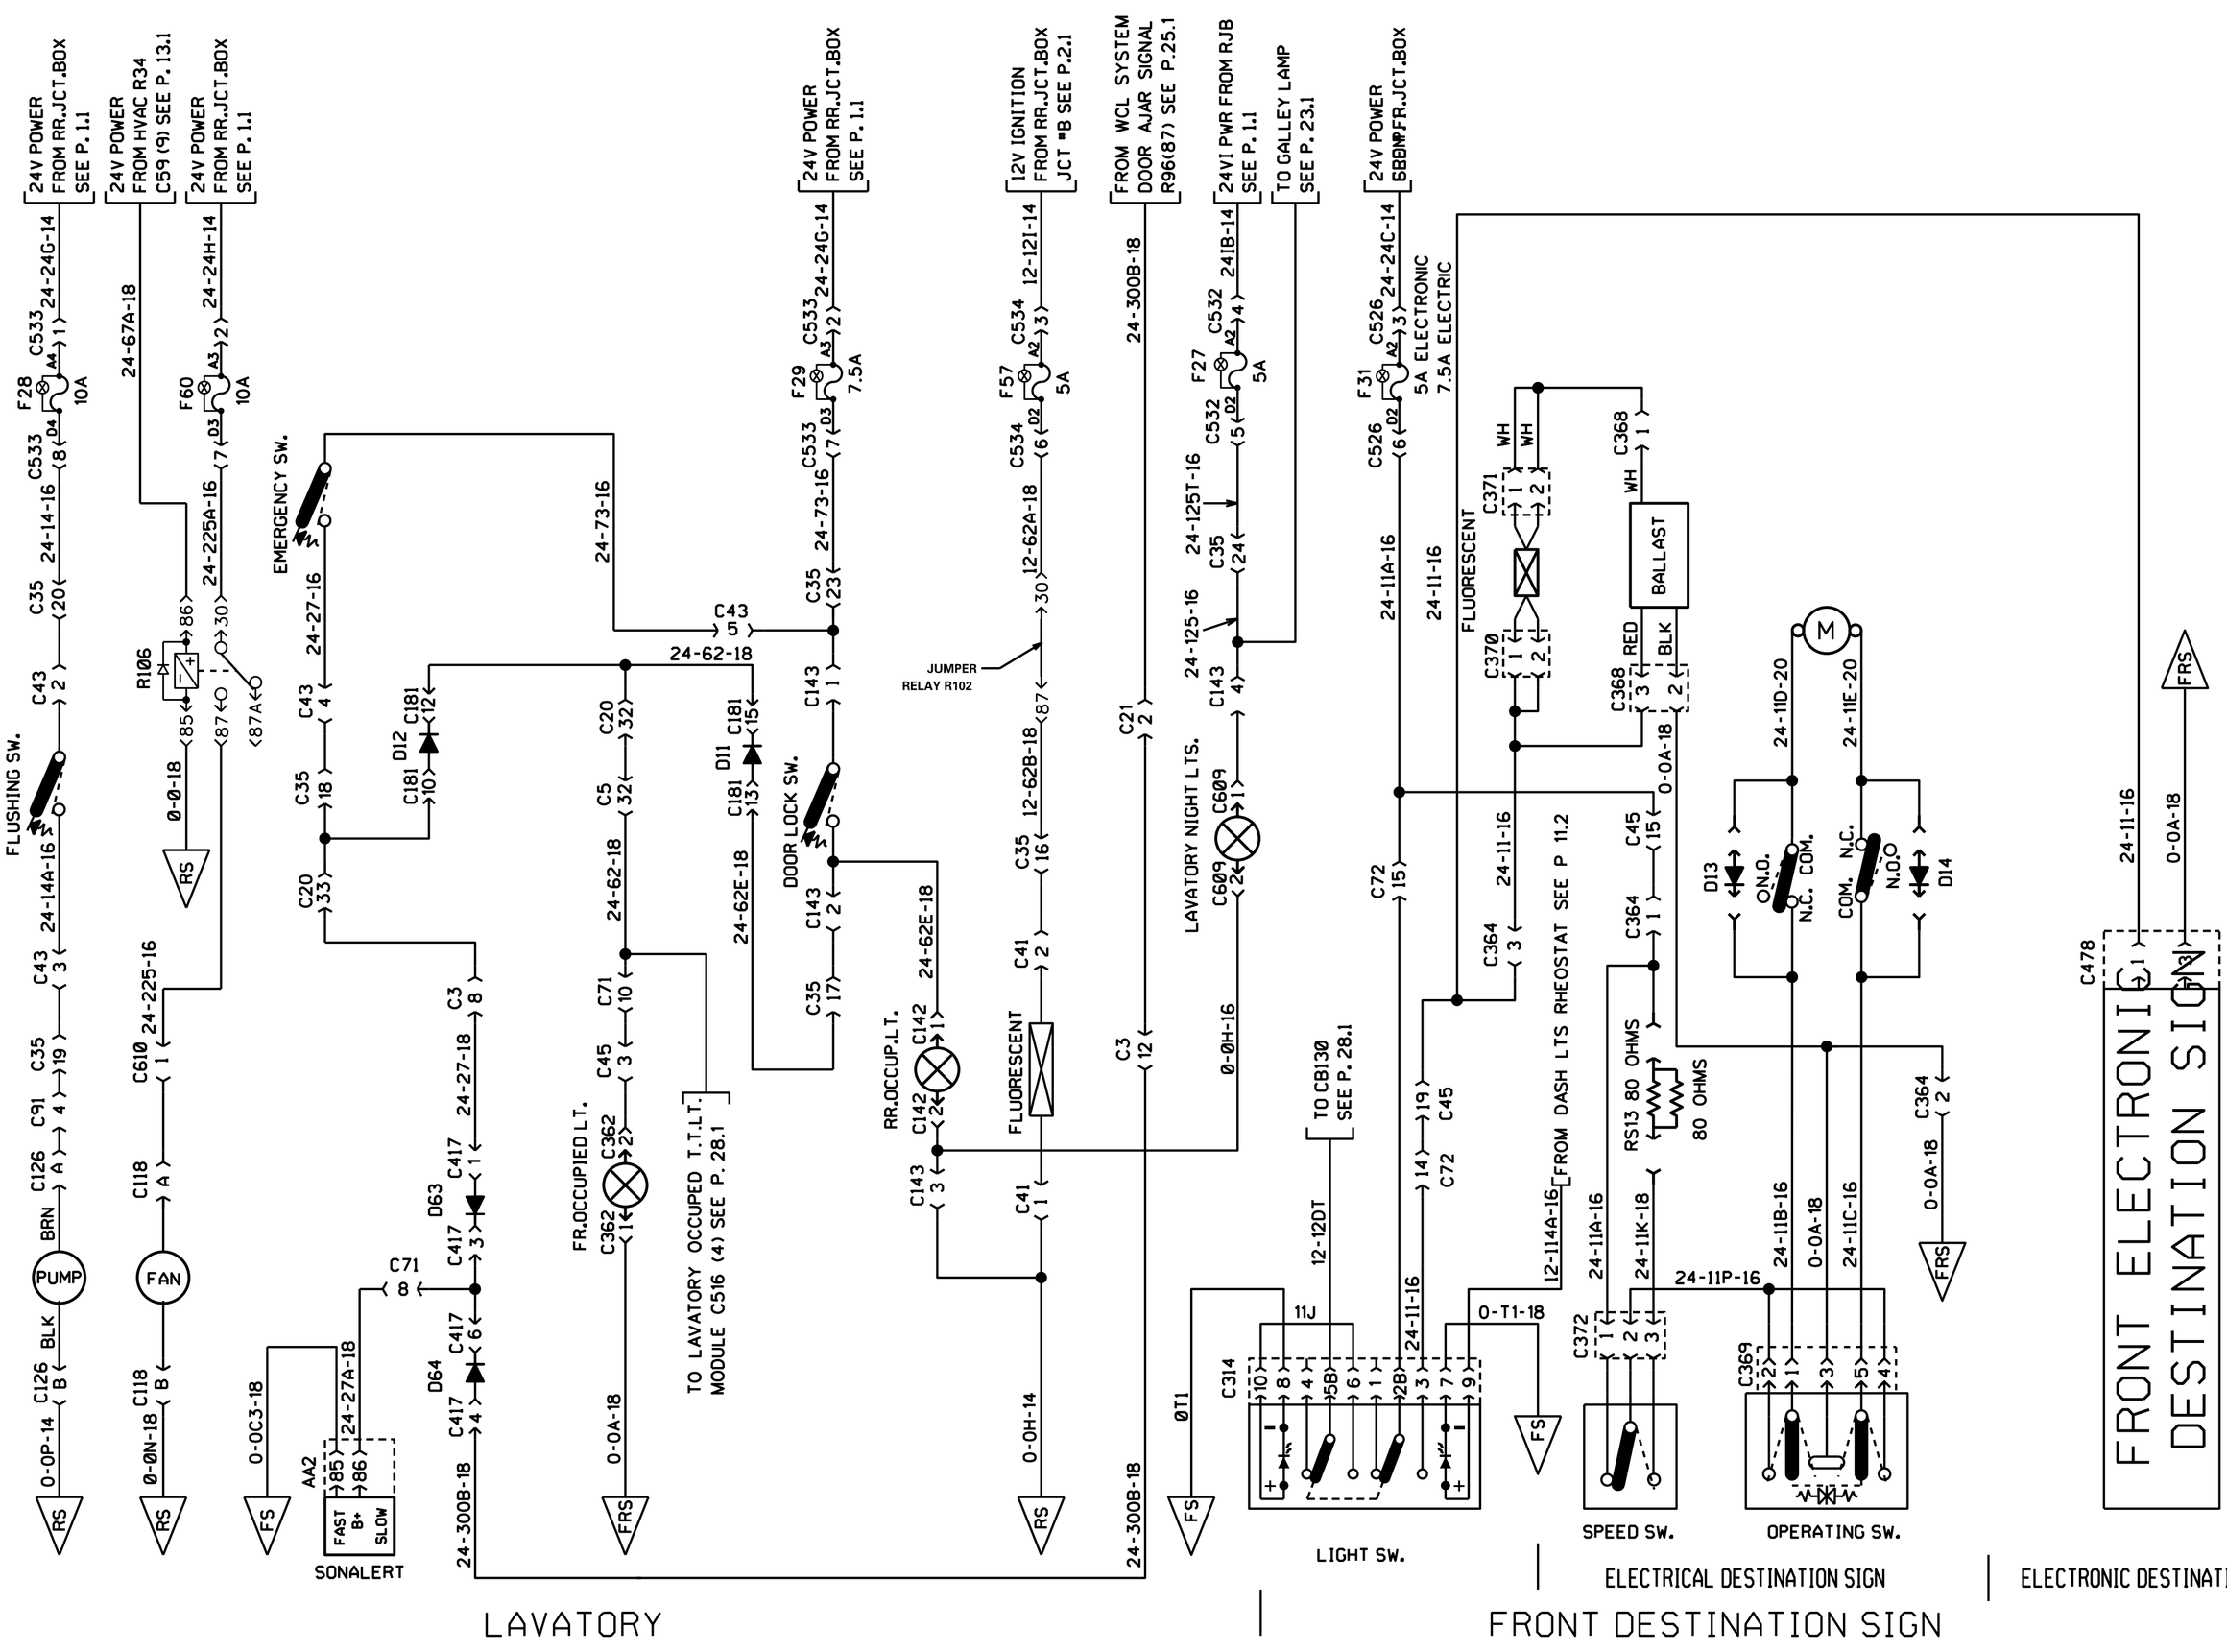
FLUSHING SW.
C43 2
C35 (20) 24-14-16 C533 (8) D4
F28 10A
24-24G-14 C533 (1) A4
24V POWER FROM RR.JCT.BOX SEE P. 1.1
24-67A-18
24V POWER FROM HVAC R34 C59 (9) SEE P. 13.1
F60 10A
24-24H-14 C533 (2) A3
24V POWER FROM RR.JCT.BOX SEE P. 1.1
R106
85 86 87 87A 30
24-225A-16 C533 (7) D3
0-0-18
RS
EMERGENCY SW.
24-27-16 C43 4
24-73-16
C43 5
24-62-18
C35 (23) 24-73-16 C533 (7) D3
F29 7.5A
24-24G-14 C533 (2) A3
24V POWER FROM RR.JCT.BOX SEE P. 1.1
C35 18
C20 33
C181 D12 12 10
C20 32
C5
C181 D11 15 13
DOOR LOCK SW.
C143 2
C35 17
24-62E-18
24-62-18
C71 10
C45 3
FR.OCCUPIED L.T.
C362 2 1
TO LAVATORY OCCUPED T.T.L.T. MODULE C516 (4) SEE P. 28.1
C3 8
24-27-18
C417 1 3
D63
C71 8
D64 C417 6 4
24-300B-18
0-0C3-18
AA2 85 86
24-27A-18
FAST B+ SLOW
SONALERT
FS
0-0A-18
FRS
C118 A
C610 24-225-16 1
C118 B
0-0N-18
RS
C126 BRN A
C91 4
C35 19
C43 3
24-14A-16
C126 BLK B
0-0P-14
RS
PUMP
FAN
JUMPER RELAY R102
C534 6 D2
12-62A-18
30 87
12-62B-18
C35 16
C41 2
FLUORESCENT
C41 1
0-0H-14
RS
C534 3 A2
F57 5A
12-121-14
12V IGNITION FROM RR.JCT.BOX JCT "B SEE P.2.1
C142 2 1
RR.OCCUP.LT.
C143 3
24-62E-18
C3 12
24-300B-18
FS
FROM WCL SYSTEM DOOR AJAR SIGNAL R96(87) SEE P.25.1
24-300B-18
C21 2
24-125-16
C143 4
24-125T-16
C35 24
C532 5 D2
F27 5A
C532 4 A2
24IB-14
24VI PWR FROM RJB SEE P. 1.1
TO GALLEY LAMP SEE P. 23.1
LAVATORY NIGHT LTS.
C609 1
C609 2
0-0H-16
C526 6 D2
F31 7.5A
C526 3 A2
24-24C-14
24V POWER FROM BBM FR.JCT.BOX
5A ELECTRONIC
24-11A-16
24-11-16
FLUORESCENT
C371 1 2 WH WH
C370 1 2
C368 1 WH
C368 3 RED
2 BLK
BALLAST
0-0A-18
C72 15
C364 3
24-11-16
FROM DASH LTS RHEOSTAT SEE P 11.2
C364 1
C45 15
RS13 80 OHMS
80 OHMS
24-11D-20
24-11E-20
M
D13
D14
O.N.D.
N.C. COM.
COM. N.C.
N.O.D.
C364 2
0-0A-18
FRS
FRS
24-11-16
0-0A-18
C478 1 3
FRONT ELECTRONIC DESTINATION SIGN
0T1
C314 10 8 4 5B 6 1 2B 3 7 9
11J
TO CB130 SEE P. 28.1
12-12DT
C72 14 19 C45
12-114A-16
FS
24-11A-16
C372 1 2 3
24-11K-18
24-11P-16
C369 2 1 3 5 4
24-11B-16
0-0A-18
24-11C-16
LIGHT SW.
SPEED SW.
OPERATING SW.
LAVATORY
ELECTRICAL DESTINATION SIGN
ELECTRONIC DESTINATION SIGN
FRONT DESTINATION SIGN

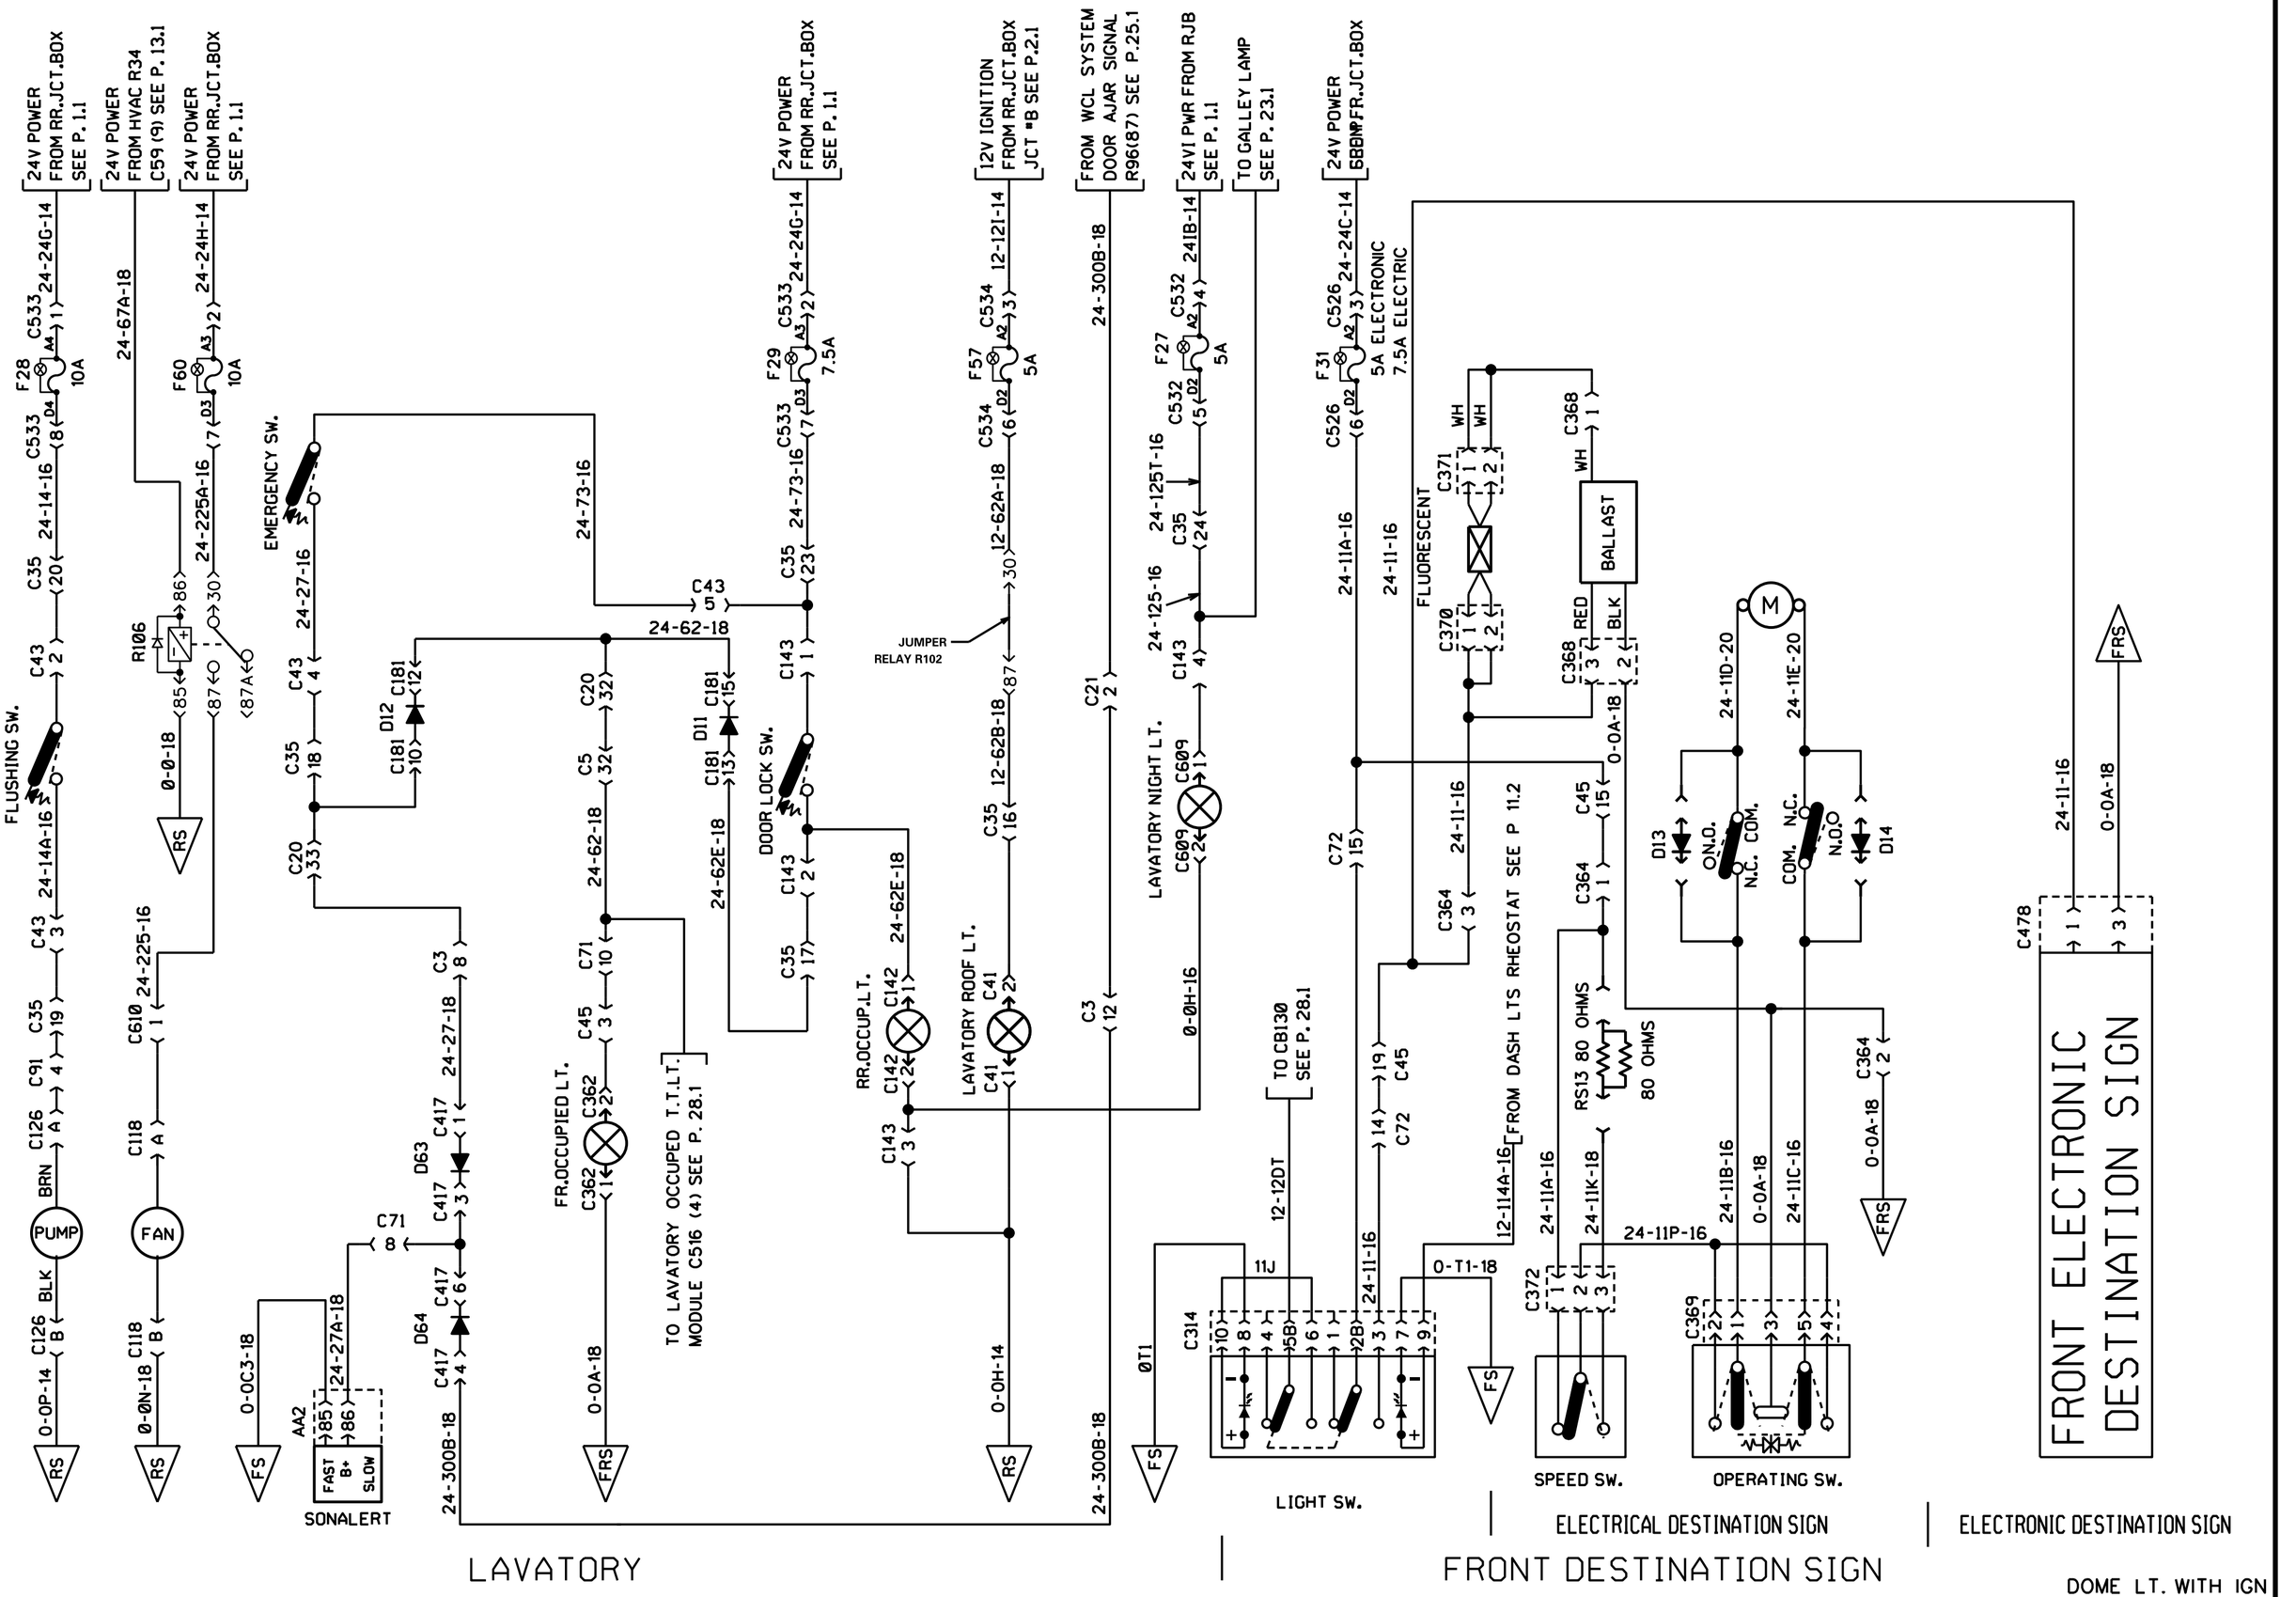
FLUSHING SW.
C43 2
C35 20
24-14-16
C533 8 D4
F28 A4 10A
24-14A-16
C43 3
C35 19
C91 4
C126 A
BRN
PUMP
C126 B
BLK
0-0P-14
RS
24V POWER FROM RR.JCT.BOX SEE P. 1.1
24V POWER FROM HVAC R34 C59 (9) SEE P. 13.1
24V POWER FROM RR.JCT.BOX SEE P. 1.1
24-67A-18
R106
85
86
87
30
87A
0-0-18
24-225A-16
F60 A3 10A
C533 7 D3
24-24H-14
C610 1
C118 A
FAN
C118 B
0-0N-18
24-225-16
EMERGENCY SW.
24-27-16
C43 4
C35 18
C20 33
C20 32
C5 32
24-62-18
C71 10
C45 3
FR.OCCUPIED LT.
C362 2
C362 1
0-0A-18
FRS
TO LAVATORY OCCUPED T.T.LT. MODULE C516 (4) SEE P. 28.1
24-73-16
C43 5
24-62-18
C35 24-73-16 C533 7 D3
F29 A3 7.5A
C533 24-24G-14 2
24V POWER FROM RR.JCT.BOX SEE P. 1.1
C181 12 D12
C181 10
C181 15 D11
C181 13
24-62E-18
DOOR LOCK SW.
C143 2
C35 17
C143 1
C35 23
C3 8
24-27-18
C417 1 D63
C417 3
C71 8
C417 6 D64
C417 4
24-300B-18
C3 12
0-0H-16
C609 2
LAVATORY NIGHT LT.
C609 1
0T1
FS
C314
11J
12-12DT
TO CB130 SEE P. 28.1
24-11-16
C72 14
C72 19
C45
0-T1-18
12-114A-16
FROM DASH LTS RHEOSTAT SEE P 11.2
C364 3
C72 15
C364 1
C45 15
0-0A-18
RS13 80 OHMS
80 OHMS
C364 2
0-0A-18
FRS
C372
24-11A-16
24-11K-18
24-11P-16
C369
24-11B-16
24-11C-16
0-0A-18
D13
D14
O.N.O.
N.C. COM.
COM. N.C.
N.O.
C478
FRONT ELECTRONIC DESTINATION SIGN
RR.OCCUP.LT.
C142 2
C142 1
C143 3
LAVATORY ROOF LT.
C41 1
C41 2
C35 16
12-62B-18
JUMPER RELAY R102
C534 6 D2
F57 A2 5A
C534 12-12I-14 3
12V IGNITION FROM RR.JCT.BOX JCT "B SEE P.2.1
FROM WCL SYSTEM DOOR AJAR SIGNAL R96(87) SEE P.25.1
24-300B-18
C21 2
C143 4
24-125-16
24-125T-16
C35 24
C532 5 D2
F27 A2 5A
C532 24IB-14 4
24VI PWR FROM RJB SEE P. 1.1
TO GALLEY LAMP SEE P. 23.1
C526 6 D2
F31 A2 5A ELECTRONIC 7.5A ELECTRIC
C526 24-24C-14 3
24V POWER FROM RR.JCT.BOX
24-11A-16
24-11-16
FLUORESCENT
C371 1 WH
C371 2 WH
C370 1
C370 2
C368 3 RED
C368 2 BLK
C368 1 WH
BALLAST
24-11D-20
24-11E-20
M
AA2 85 86
FAST B+ SLOW
SONALERT
0-0C3-18
24-27A-18
24-300B-18
LIGHT SW.
SPEED SW.
OPERATING SW.
ELECTRICAL DESTINATION SIGN
ELECTRONIC DESTINATION SIGN
LAVATORY
FRONT DESTINATION SIGN
DOME LT. WITH IGN

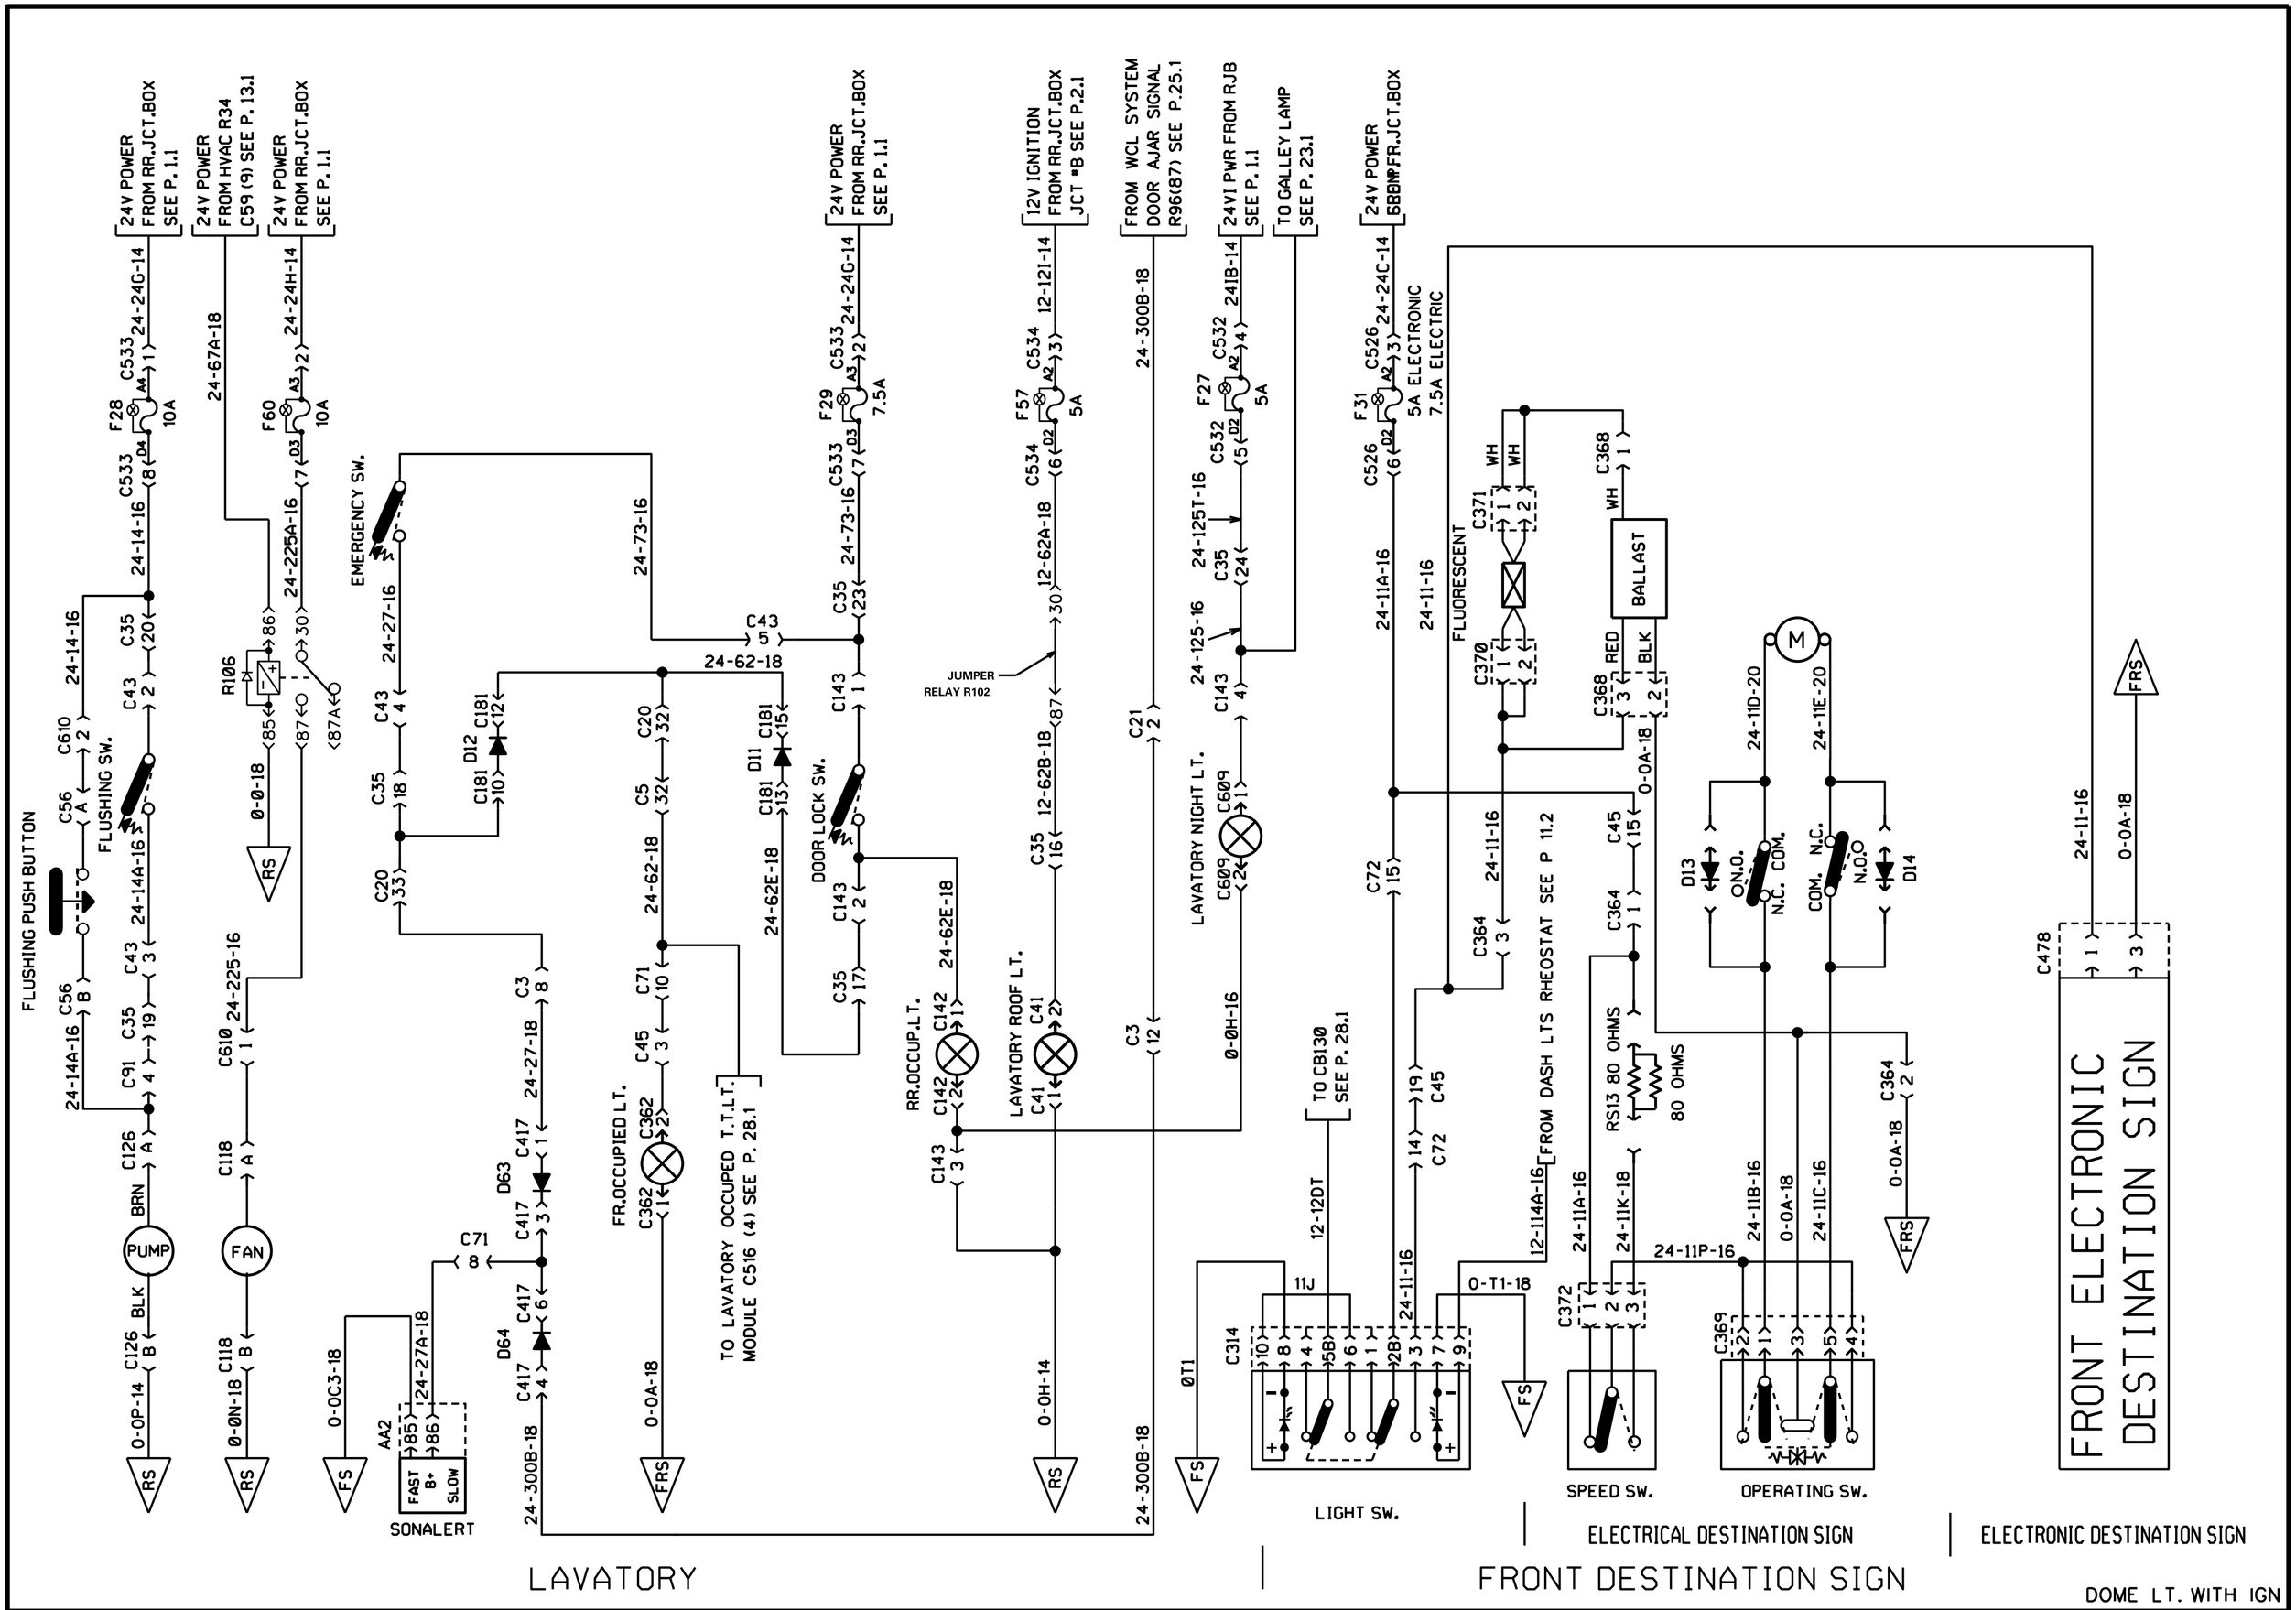
FLUSHING PUSH BUTTON
FLUSHING SW.
PUMP
FAN
SONALERT
EMERGENCY SW.
DOOR LOCK SW.
JUMPER RELAY R102
FR.OCCUPIED LT.
RR.OCCUP.LT.
LAVATORY ROOF LT.
LAVATORY NIGHT LT.
TO LAVATORY OCCUPED T.T.LT. MODULE C516 (4) SEE P. 28.1
24V POWER FROM RR.JCT.BOX SEE P. 1.1
24V POWER FROM HVAC R34 C59 (9) SEE P. 13.1
12V IGNITION FROM RR.JCT.BOX JCT "B SEE P.2.1
FROM WCL SYSTEM DOOR AJAR SIGNAL R96(87) SEE P.25.1
24VI PWR FROM RJB SEE P. 1.1
TO GALLEY LAMP SEE P. 23.1
24V POWER FROM FR.JCT.BOX
5A ELECTRONIC
7.5A ELECTRIC
FLUORESCENT
BALLAST
TO CB130 SEE P. 28.1
FROM DASH LTS RHEOSTAT SEE P 11.2
80 OHMS
LIGHT SW.
SPEED SW.
OPERATING SW.
FRONT ELECTRONIC DESTINATION SIGN
LAVATORY
ELECTRICAL DESTINATION SIGN
ELECTRONIC DESTINATION SIGN
FRONT DESTINATION SIGN
DOME LT. WITH IGN

PREVOST

WIRING DIAGRAM

NO: D06094 9

PAGE: 17.1 sp2

REVISION 00

LAVATORY SWITCH ADDED FOR LIGHT

FRONT DESTINATION SIGN

ELECTRICAL DESTINATION SIGN

ELECTRONIC DESTINATION SIGN

RS 0-0P-14 C126 B BLK PUMP BRN C126 A C91 4 C35 19 C43 3 24-14A-16 FLUSHING SW. C43 2 C35 20 24-14-16 C533 8 D4 F28 10A A4 C533 1 24-24G-14 24V POWER FROM RR.JCT.BOX SEE P. 1.1

RS 0-0N-18 C118 B FAN C118 A C610 1 24-225-16 R106 RS 0-0-18 85 86 87 30 87A 24-67A-18 24V POWER FROM HVAC R34 C59 (9) SEE P. 13.1

24-225A-16 7 D3 F60 10A A3 2 24-24H-14 24V POWER FROM RR.JCT.BOX SEE P. 1.1

FS 0-0C3-18 SONALERT AA2 FAST B+ SLOW 85 86 24-27A-18 8 C71

EMERGENCY SW. C20 33 C35 18 C43 4 24-27-16

C181 D12 C181 10 12

24-300B-18 C417 4 D64 C417 6 C417 3 D63 C417 1 24-27-18 C3 8

FR.OCCUPIED LT. FRS 0-0A-18 C362 1 C362 2 C45 3 C71 10 24-62-18 C5 32 C20 32

24-73-16

TO LAVATORY OCCUPED T.T.LT. MODULE C516 (4) SEE P. 28.1

24-62-18 C43 5

24-62E-18 C181 13 D11 C181 15

DOOR LOCK SW. C35 17 C143 2 C143 1 C35 23 24-73-16 C533 7 D3 F29 7.5A A3 C533 2 24-24G-14 24V POWER FROM RR.JCT.BOX SEE P. 1.1

RR.OCCUP.LT. C143 3 C142 2 C142 1 24-62E-18 SW. FOR LIGHT

RS 0-0-18 R102 85 86 87 30 87A

RS 0-0H-14 C41 1 FLUORESCENT C41 2 C35 16 12-62B-18 12-62A-18 C534 6 D2 F57 5A A2 C534 3 12-12E-14 12V POWER FROM RR.JCT.BOX SEE P.2.1

24-300B-18 C3 12 C21 2 24-300B-18 FROM WCL SYSTEM DOOR AJAR SIGNAL R96(87) SEE P.25.1

FS 0T1 C314 LIGHT SW. 10 8 4 5B 6 1 2B 3 7 9 11J 12-12DT TO CB130 SEE P. 28.1

LAVATORY NIGHT LTS. 0-0H-16 C609 2 C609 1 C143 4 24-125-16 24-125T-16 C35 24 C532 5 D2 F27 5A A2 C532 4 24IB-14 24VI PWR FROM RJB SEE P. 1.1

TO GALLEY LAMP SEE P. 23.1

C72 15 24-11A-16 C526 6 D2 F31 5A ELECTRONIC 7.5A ELECTRIC A2 C526 3 24-24C-14 24V POWER FROM RR.JCT.BOX

24-11-16 14 19 C72 C45

FLUORESCENT C364 3 24-11-16 C370 1 2 C371 1 2 WH WH

FS 0-T1-18 12-114A-16 FROM DASH LTS RHEOSTAT SEE P 11.2


SPEED SW. C372 1 2 3 24-11A-16 24-11K-18 RS13 80 OHMS 80 OHMS C364 1 C45 15 0-0A-18 C368 3 RED 2 BLK BALLAST WH C368 1

24-11P-16

OPERATING SW. C369 2 1 3 5 4 24-11B-16 0-0A-18 24-11C-16 D13 ON.O. N.C. COM. COM. N.C. N.O. D14 24-11D-20 24-11E-20 M

FRS 0-0A-18 C364 2

FRONT ELECTRONIC DESTINATION SIGN C478 1 3 24-11-16 0-0A-18 FRS

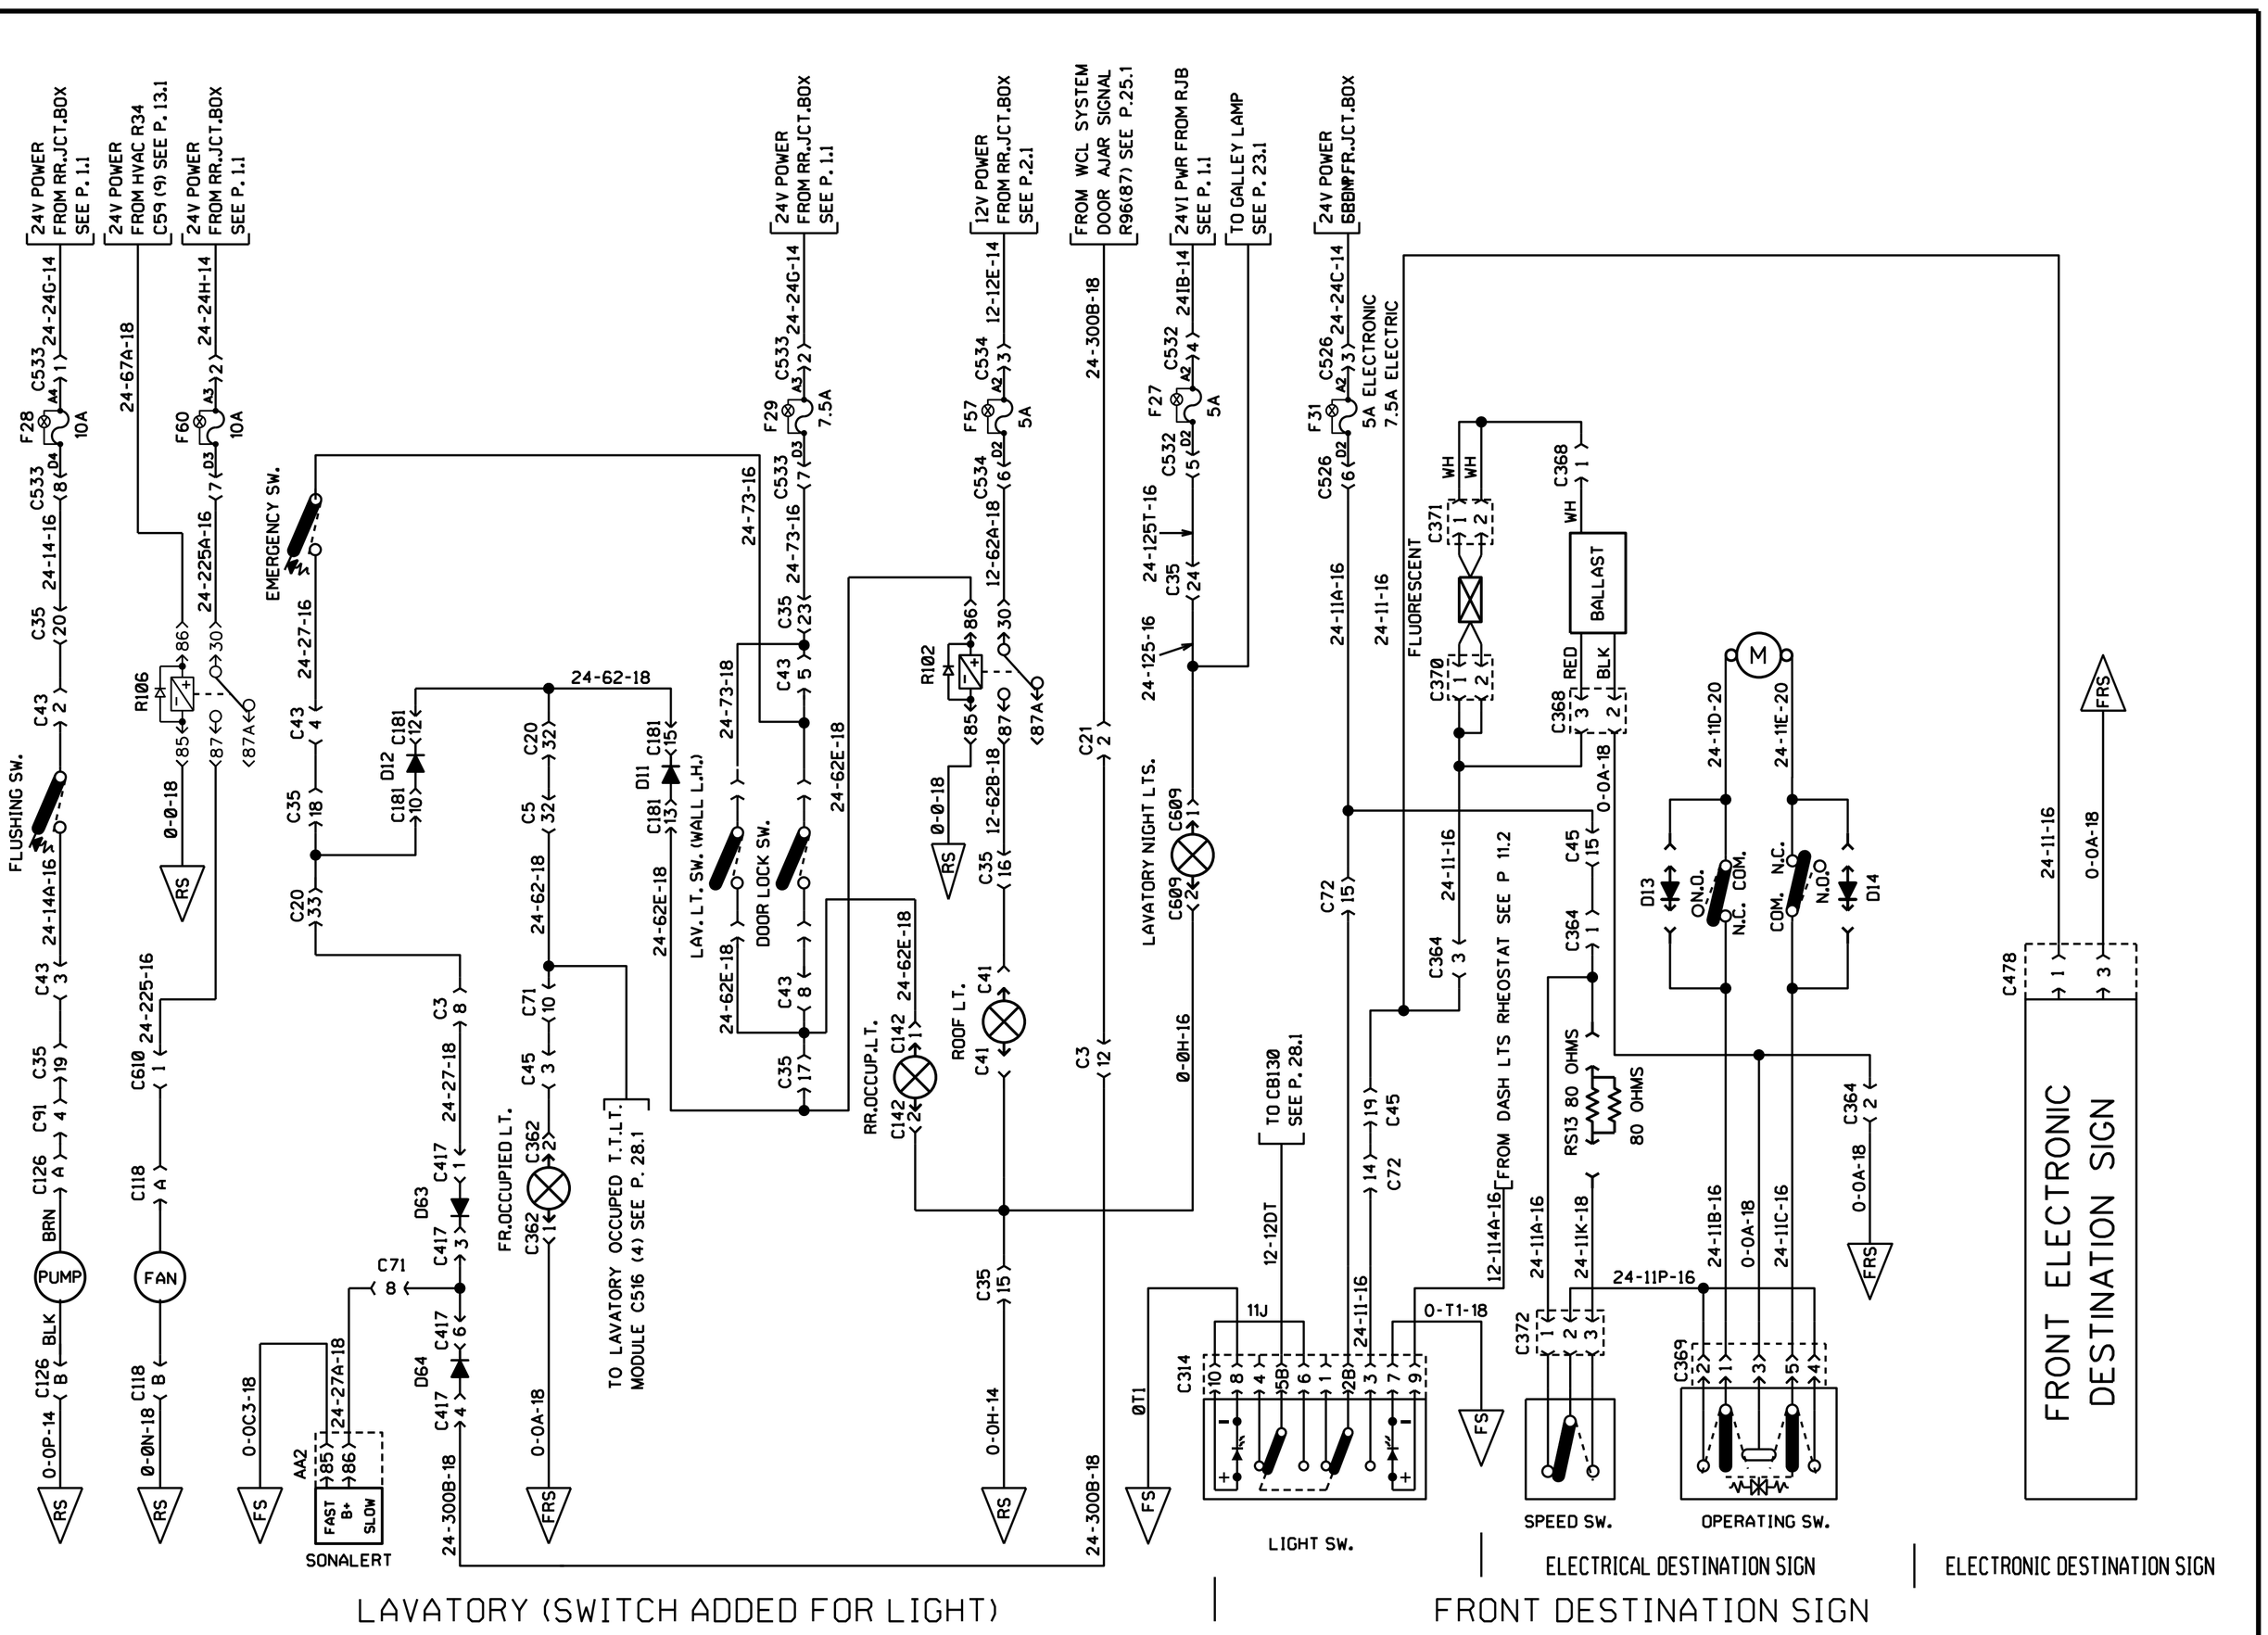
FLUSHING SW.
EMERGENCY SW.
PUMP
FAN
SONALERT
FAST
B+
SLOW
FR.OCCUPIED LT.
TO LAVATORY OCCUPED T.T.L.T.
MODULE C516 (4) SEE P. 28.1
RR.OCCUP.LT.
ROOF LT.
LAV. LT. SW. (WALL L.H.)
DOOR LOCK SW.
LAVATORY NIGHT LTS.
24V POWER FROM RR.JCT.BOX SEE P. 1.1
24V POWER FROM HVAC R34 C59 (9) SEE P. 13.1
12V POWER FROM RR.JCT.BOX SEE P.2.1
FROM WCL SYSTEM DOOR AJAR SIGNAL R96(87) SEE P.25.1
24VI PWR FROM RJB SEE P. 1.1
TO GALLEY LAMP SEE P. 23.1
24V POWER FROM FR.JCT.BOX
5A ELECTRONIC
7.5A ELECTRIC
FLUORESCENT
BALLAST
TO CB130 SEE P. 28.1
FROM DASH LTS RHEOSTAT SEE P 11.2
RS13 80 OHMS
80 OHMS
LIGHT SW.
SPEED SW.
OPERATING SW.
FRONT ELECTRONIC DESTINATION SIGN
LAVATORY (SWITCH ADDED FOR LIGHT)
ELECTRICAL DESTINATION SIGN
ELECTRONIC DESTINATION SIGN
FRONT DESTINATION SIGN

PREVOST

WIRING DIAGRAM

LAVATORY (SWITCH ADDED FOR LIGHT)

FRONT DESTINATION SIGN


ELECTRICAL DESTINATION SIGN


ELECTRONIC DEST. SIGN

NO: D060949


PAGE: 17.1sp2


REVISION 03

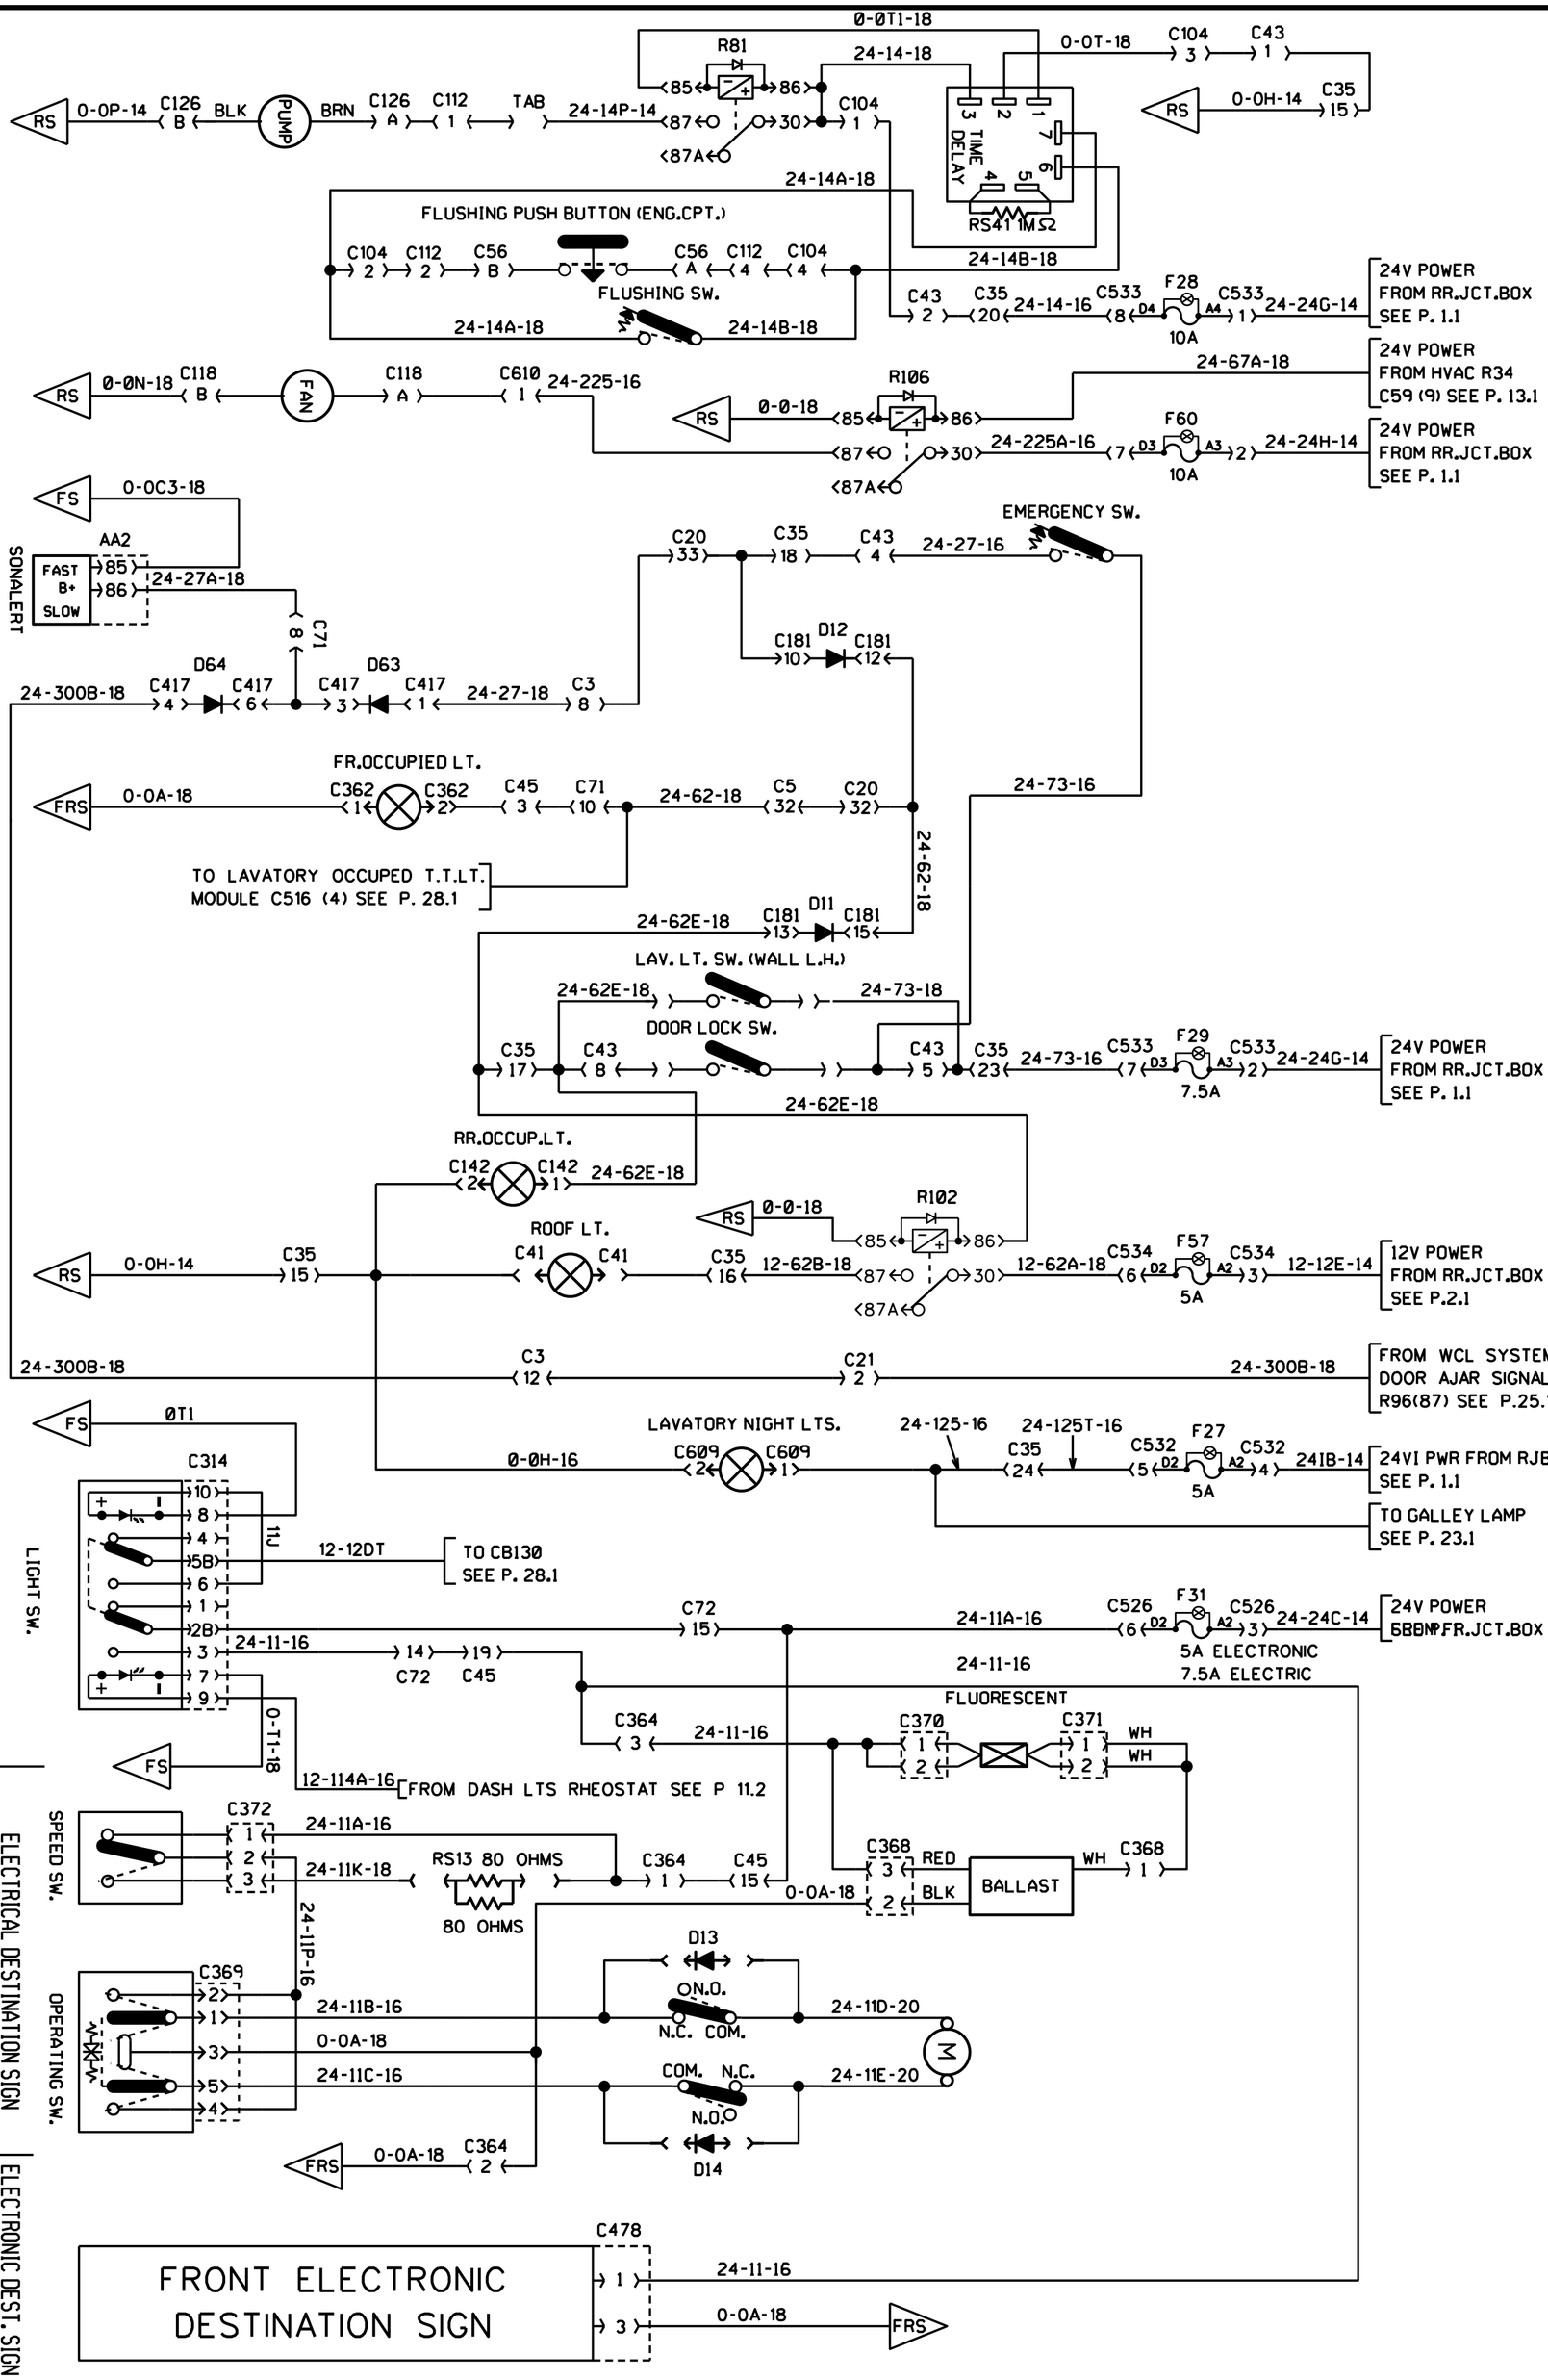

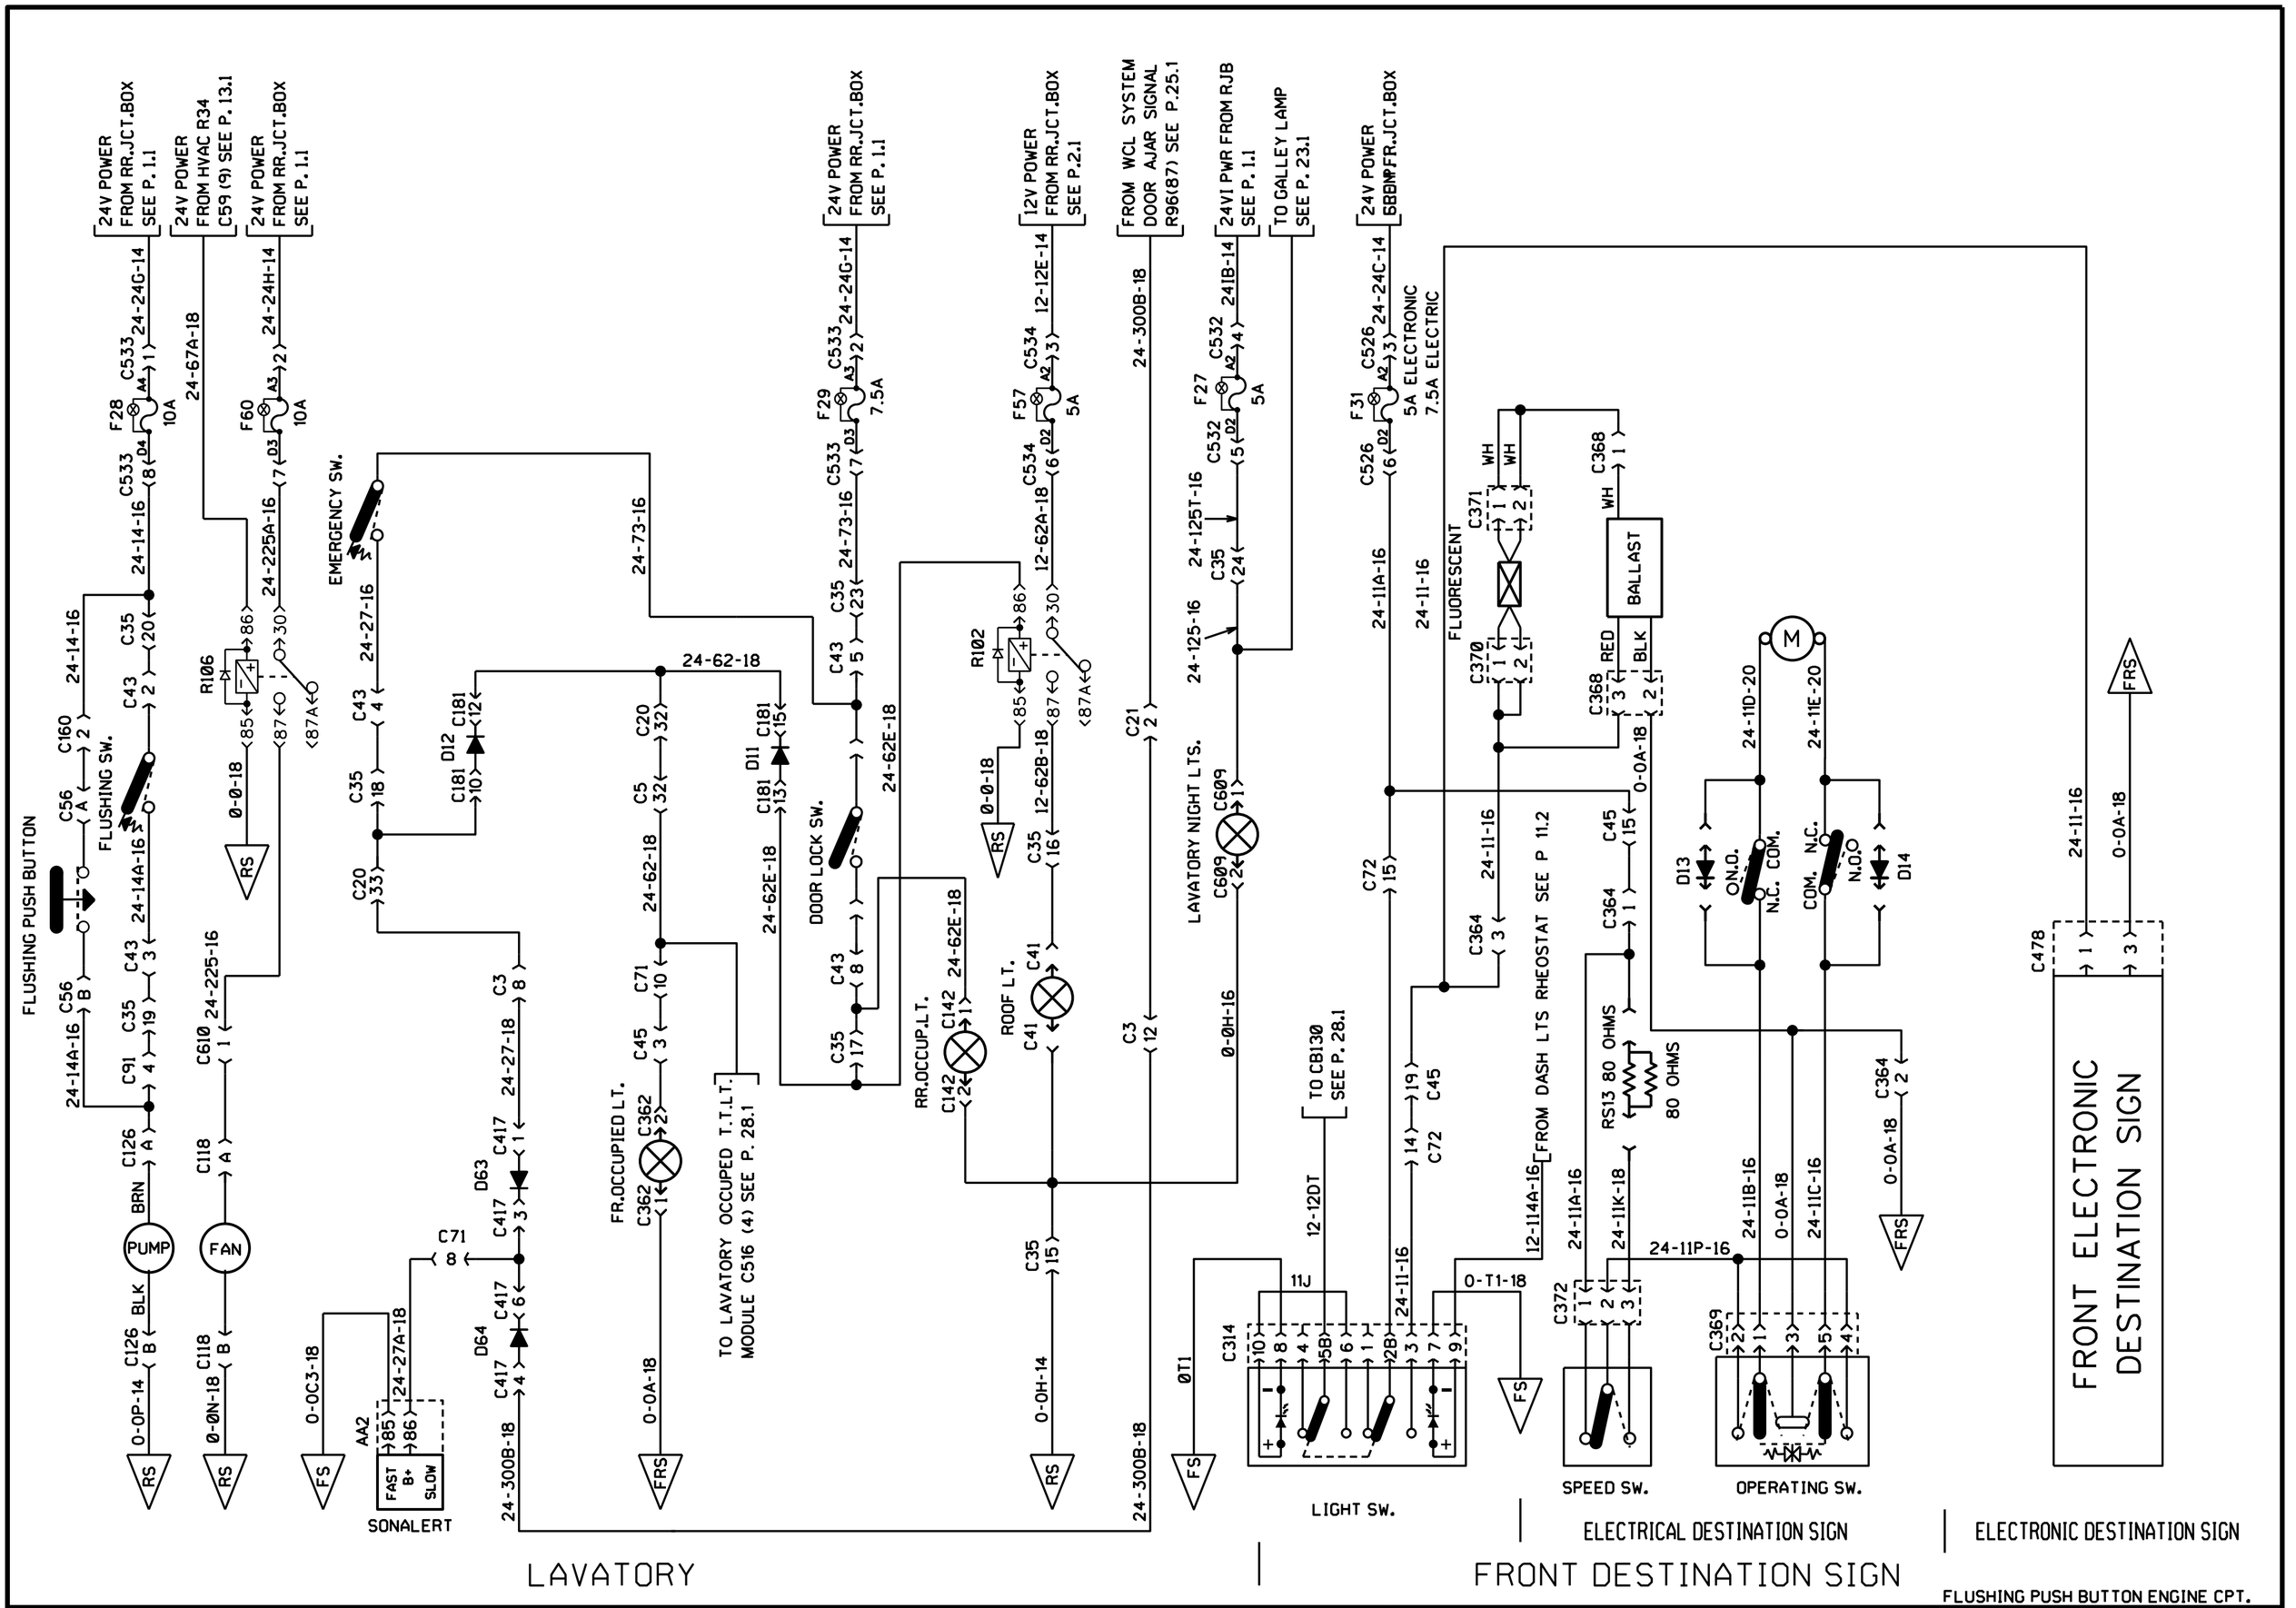

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 17.1 sp3	REVISION 00

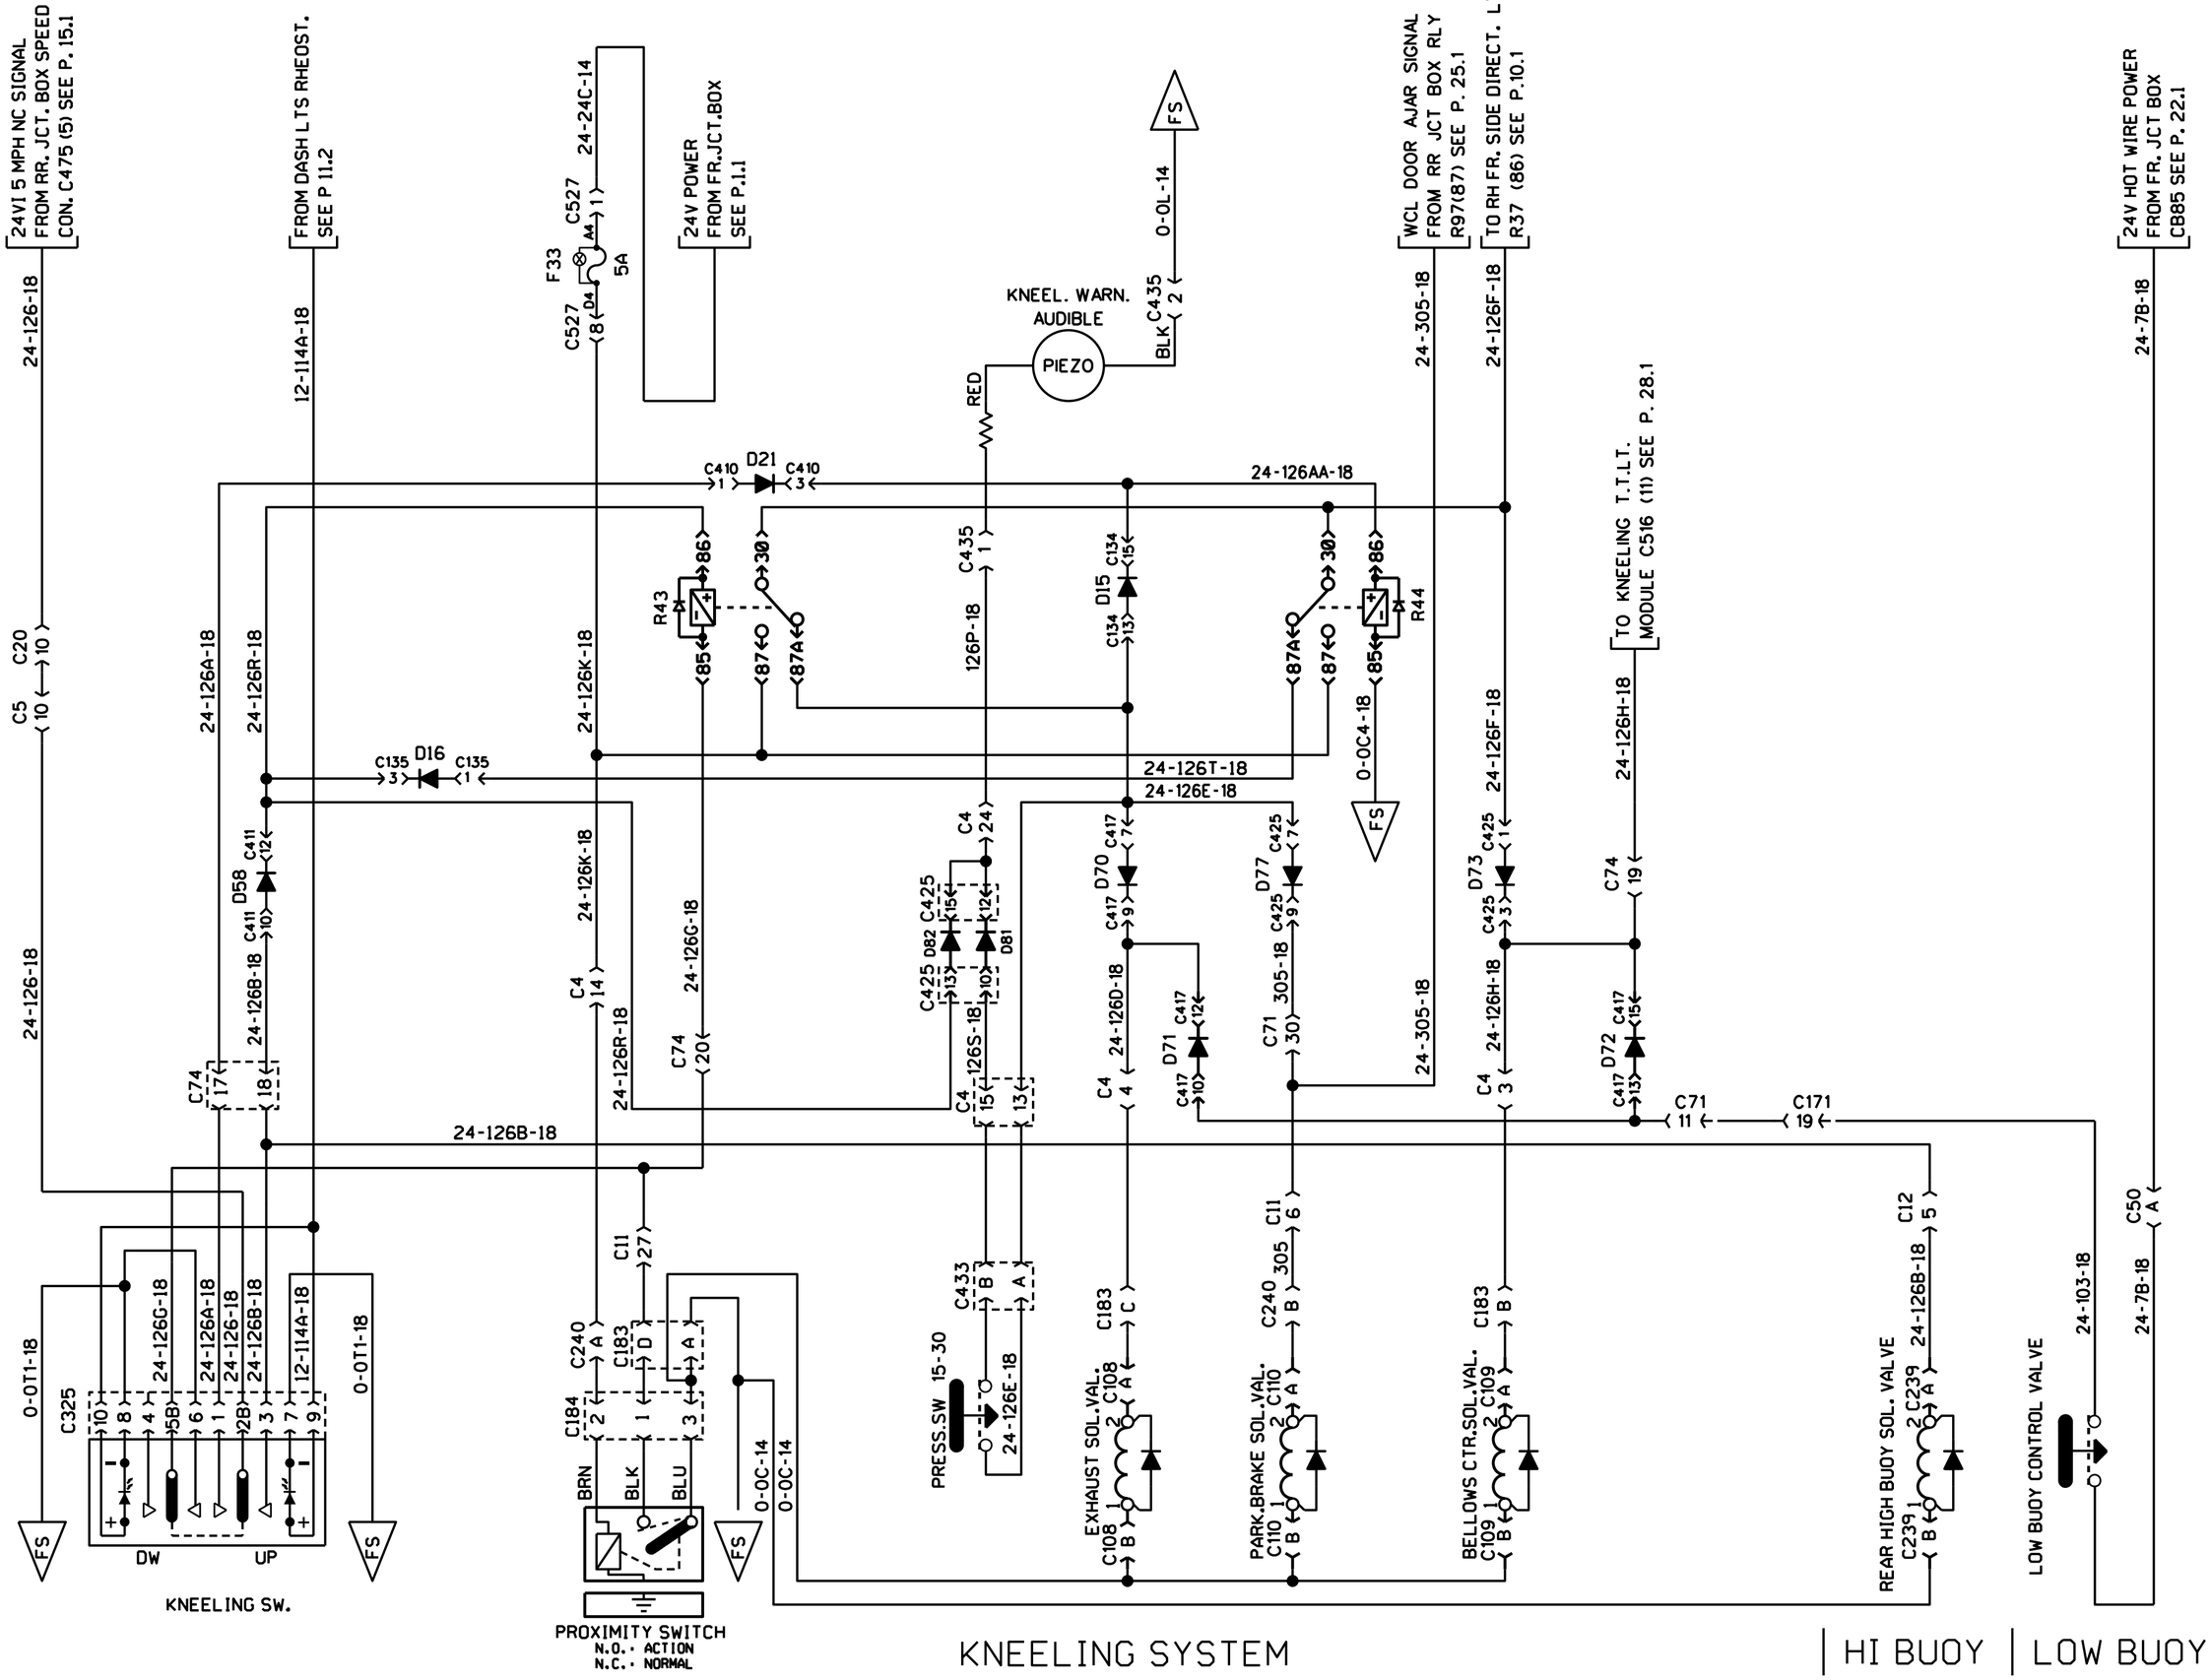
24VI 5 MPH NC SIGNAL FROM RR. JCT. BOX SPEED CON. C475 (5) SEE P. 15.1
FROM DASH LTS RHEOST. SEE P 11.2
24V POWER FROM FR.JCT.BOX SEE P.1.1
KNEEL. WARN. AUDIBLE
PIEZO
WCL DOOR AJAR SIGNAL FROM RR JCT BOX RLY R97(87) SEE P. 25.1
TO RH FR. SIDE DIRECT. LT R37 (86) SEE P.10.1
24V HOT WIRE POWER FROM FR. JCT BOX CB85 SEE P. 22.1
TO KNEELING T.T.L.T. MODULE C516 (11) SEE P. 28.1
24-126-18
24-126A-18
24-126R-18
24-126K-18
24-126T-18
24-126E-18
24-126B-18
24-126G-18
24-126D-18
24-126S-18
24-126H-18
24-305-18
24-126AA-18
24-126F-18
24-7B-18
24-103-18
12-114A-18
0-0T1-18
0-0C4-18
0-0C-14
0-0L-14
D21
D16
D58
D82
D81
D70
D77
D73
D71
D72
R43
R44
D15
F33
5A
C5
C20
C325
C74
C4
C11
C12
C50
C71
C171
C527
C435
C134
C135
C411
C425
C417
C240
C183
C184
C433
C109
C108
C110
C239
PRESS.SW 15-30
EXHAUST SOL.VAL.
PARK.BRAKE SOL.VAL.
BELLOWS CTR.SOL.VAL.
REAR HIGH BUOY SOL. VALVE
LOW BUOY CONTROL VALVE
KNEELING SW.
DW
UP
PROXIMITY SWITCH
N.O.: ACTION
N.C.: NORMAL
BRN
BLK
BLU
RED
FS
KNEELING SYSTEM
HI BUOY
LOW BUOY

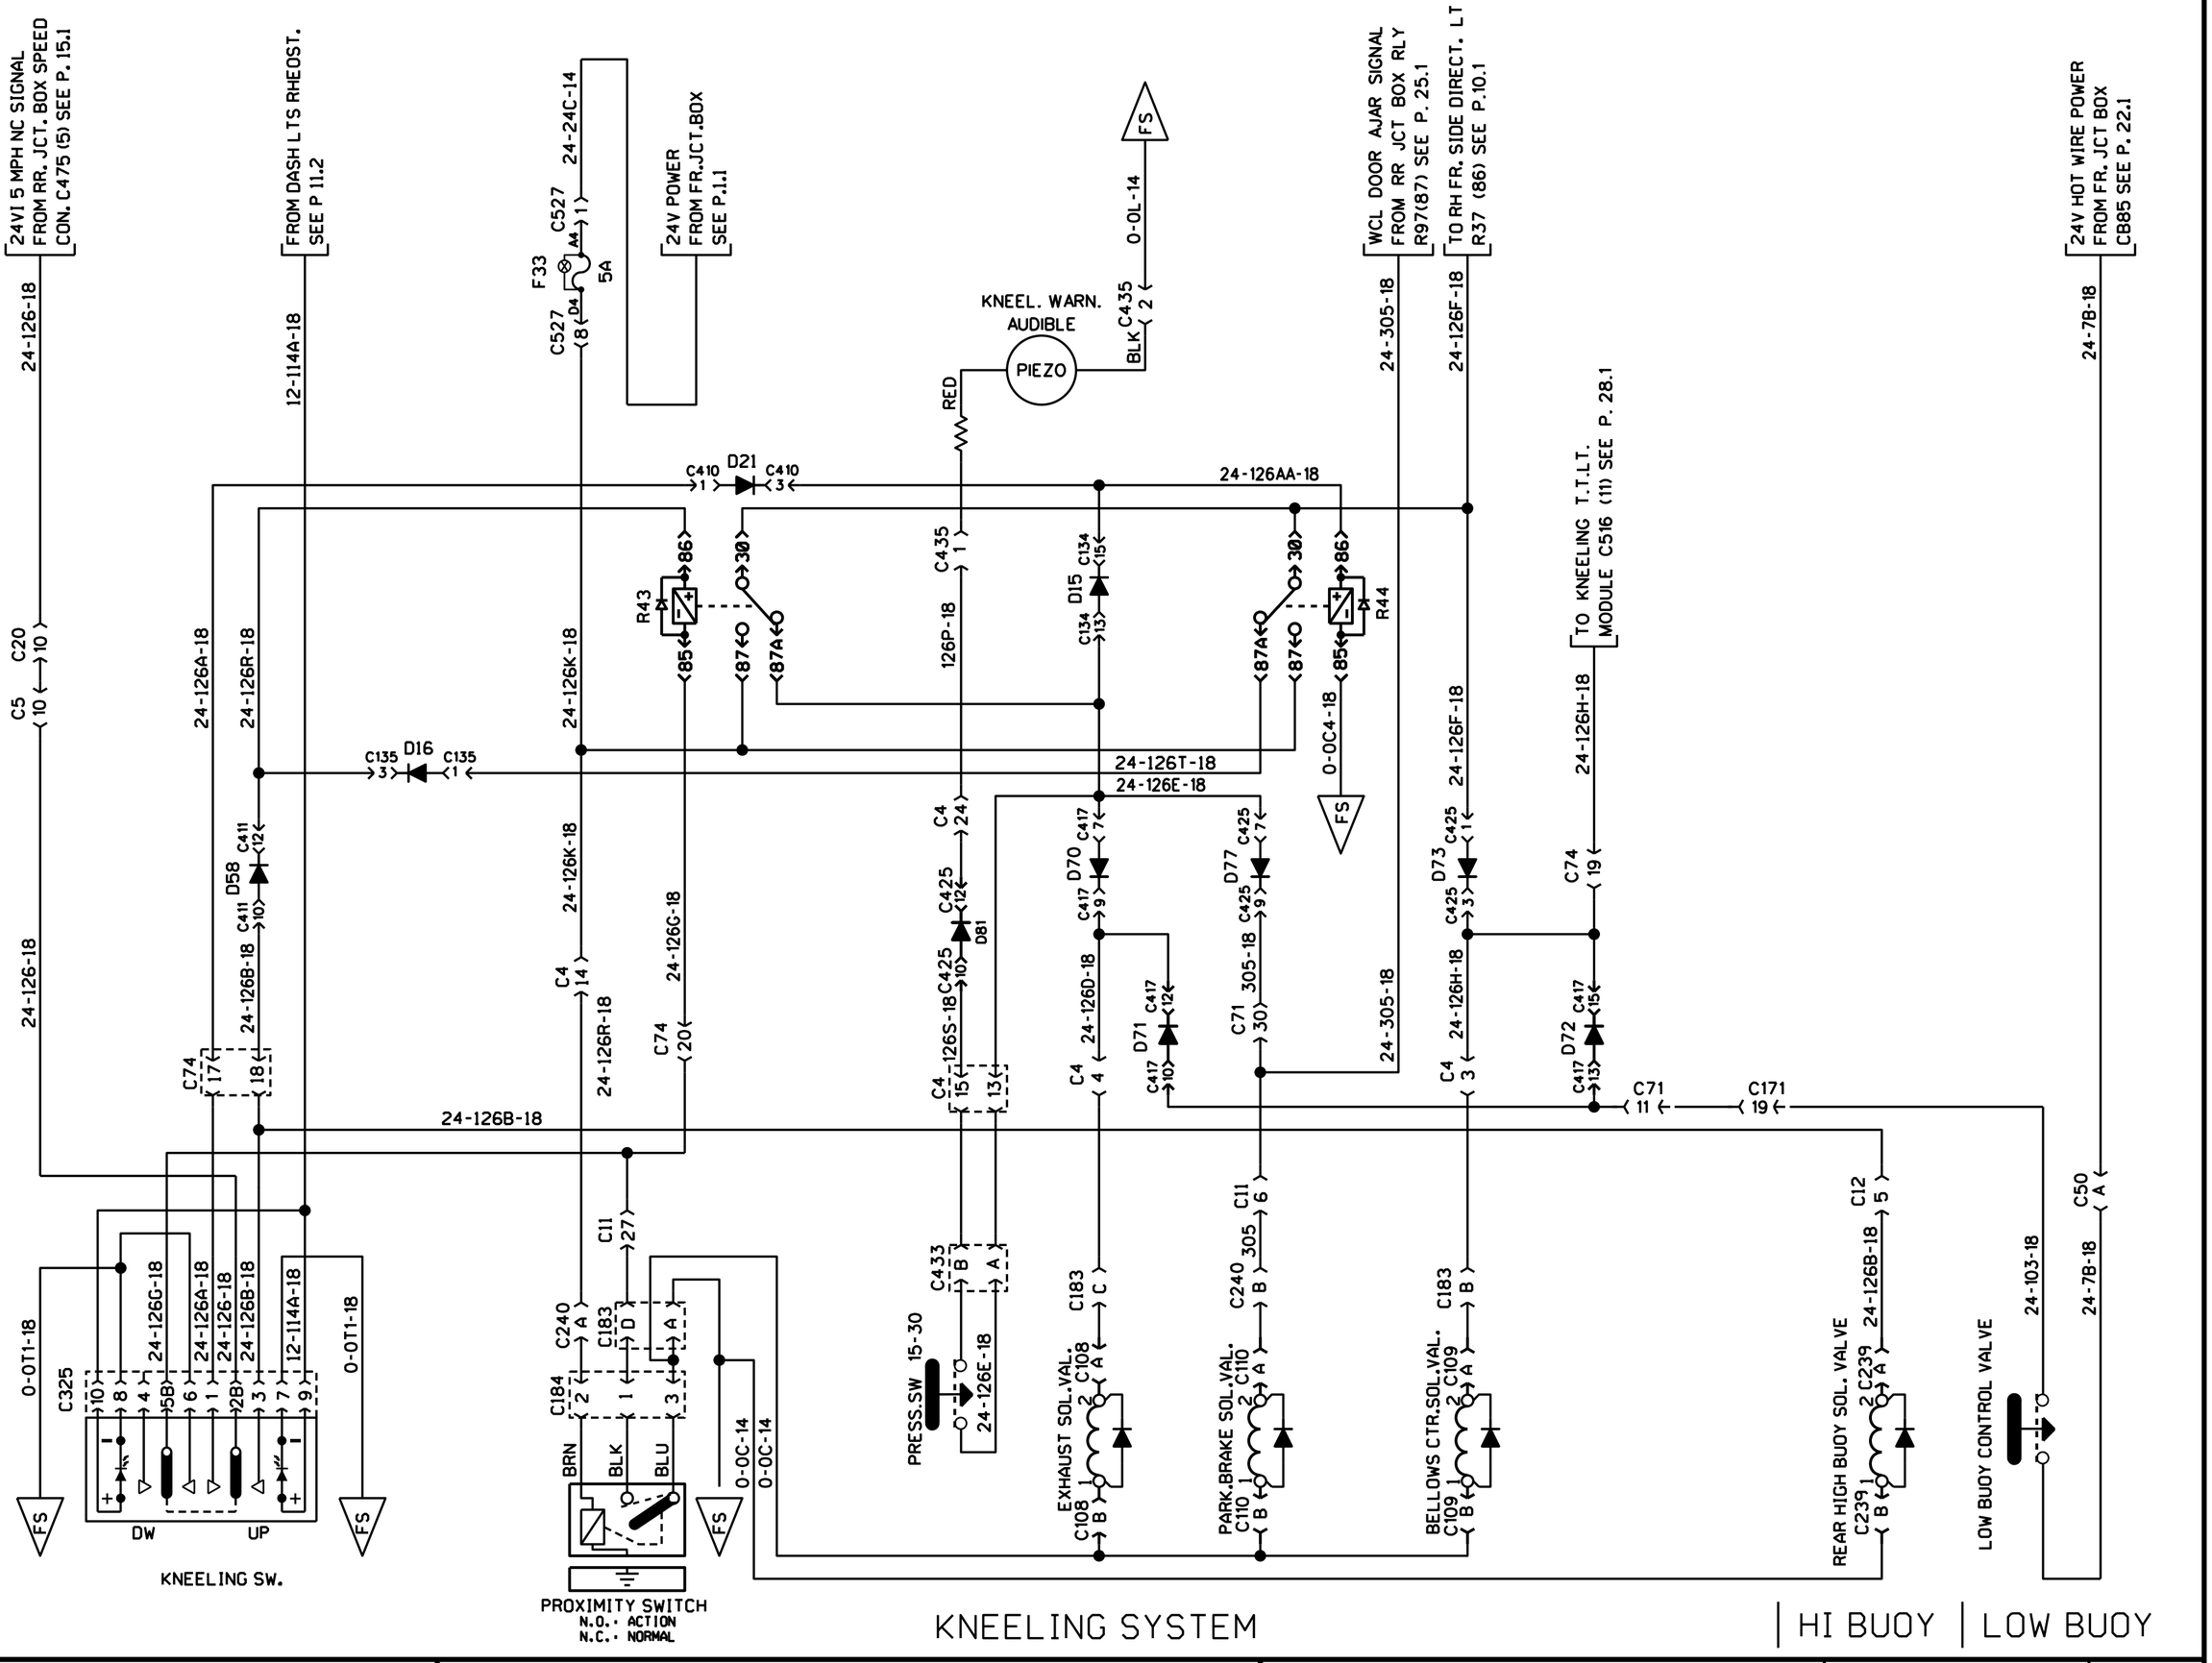
24VI 5 MPH NC SIGNAL FROM RR. JCT. BOX SPEED CON. C475 (5) SEE P. 15.1
24-126-18
C5 C20
10 10
FROM DASH LTS RHEOST. SEE P 11.2
12-114A-18
F33 5A
C527 24-24C-14
C527 A4 1
C527 D4 8
24V POWER FROM FR.JCT.BOX SEE P.1.1
KNEEL. WARN. AUDIBLE
PIEZO
RED
C435 2
BLK
0-0L-14
FS
WCL DOOR AJAR SIGNAL FROM RR JCT BOX RLY R97(87) SEE P. 25.1
24-305-18
TO RH FR. SIDE DIRECT. LT R37 (86) SEE P.10.1
24-126F-18
24V HOT WIRE POWER FROM FR. JCT BOX CB85 SEE P. 22.1
24-7B-18
TO KNEELING T.T.L.T. MODULE C516 (11) SEE P. 28.1
24-126H-18
24-126AA-18
C410 1
C410 3
D21
C435 1
126P-18
R43
R44
D15
C134 15
C134 13
86
30
87
87A
85
24-126A-18
24-126R-18
24-126K-18
C135 3
C135 1
D16
24-126T-18
24-126E-18
0-0C4-18
C4 24
C425 12
D81
C425 10
126S-18
C4 15
C4 13
D70 C417 7
C417 9
24-126D-18
C4 4
D71 C417 12
C417 10
D77 C425 7
C425 9
C71 305-18 30
24-305-18
D73 C425 1
C425 3
24-126H-18
C4 3
D72 C417 15
C417 13
C74 19
C71 11
C171 19
D58 C411 12
C411 10
24-126B-18
C74 17
C74 18
C4 14
24-126R-18
C74 20
24-126G-18
C74 16
C11 27
C240 A
C183 D
C184 2
C184 1
C184 3
BRN
BLK
BLU
PROXIMITY SWITCH
N.O.: ACTION
N.C.: NORMAL
0-0C-14
FS
C433 B
C433 A
PRESS.SW 15-30
C183 C
C108 A
EXHAUST SOL.VAL.
C108 2
C108 1
C108 B
C240 305 B
C11 6
C110 A
PARK.BRAKE SOL.VAL.
C110 2
C110 1
C110 B
C183 B
C109 A
BELLOWS CTR.SOL.VAL.
C109 2
C109 1
C109 B
C12 5
C239 A
REAR HIGH BUOY SOL. VALVE
C239 2
C239 1
C239 B
24-103-18
LOW BUOY CONTROL VALVE
C50 A
C325
10 8 4 5B 6 1 2B 3 7 9
0-0T1-18
24-126G-18
24-126A-18
24-126-18
24-126B-18
12-114A-18
DW
UP
KNEELING SW.
KNEELING SYSTEM
HI BUOY
LOW BUOY

PREVOST


WIRING DIAGRAM


KNEELING SYSTEM | HI BUOY | LOW BUOY

NO: D060949

PAGE: 18.1

REVISION 08

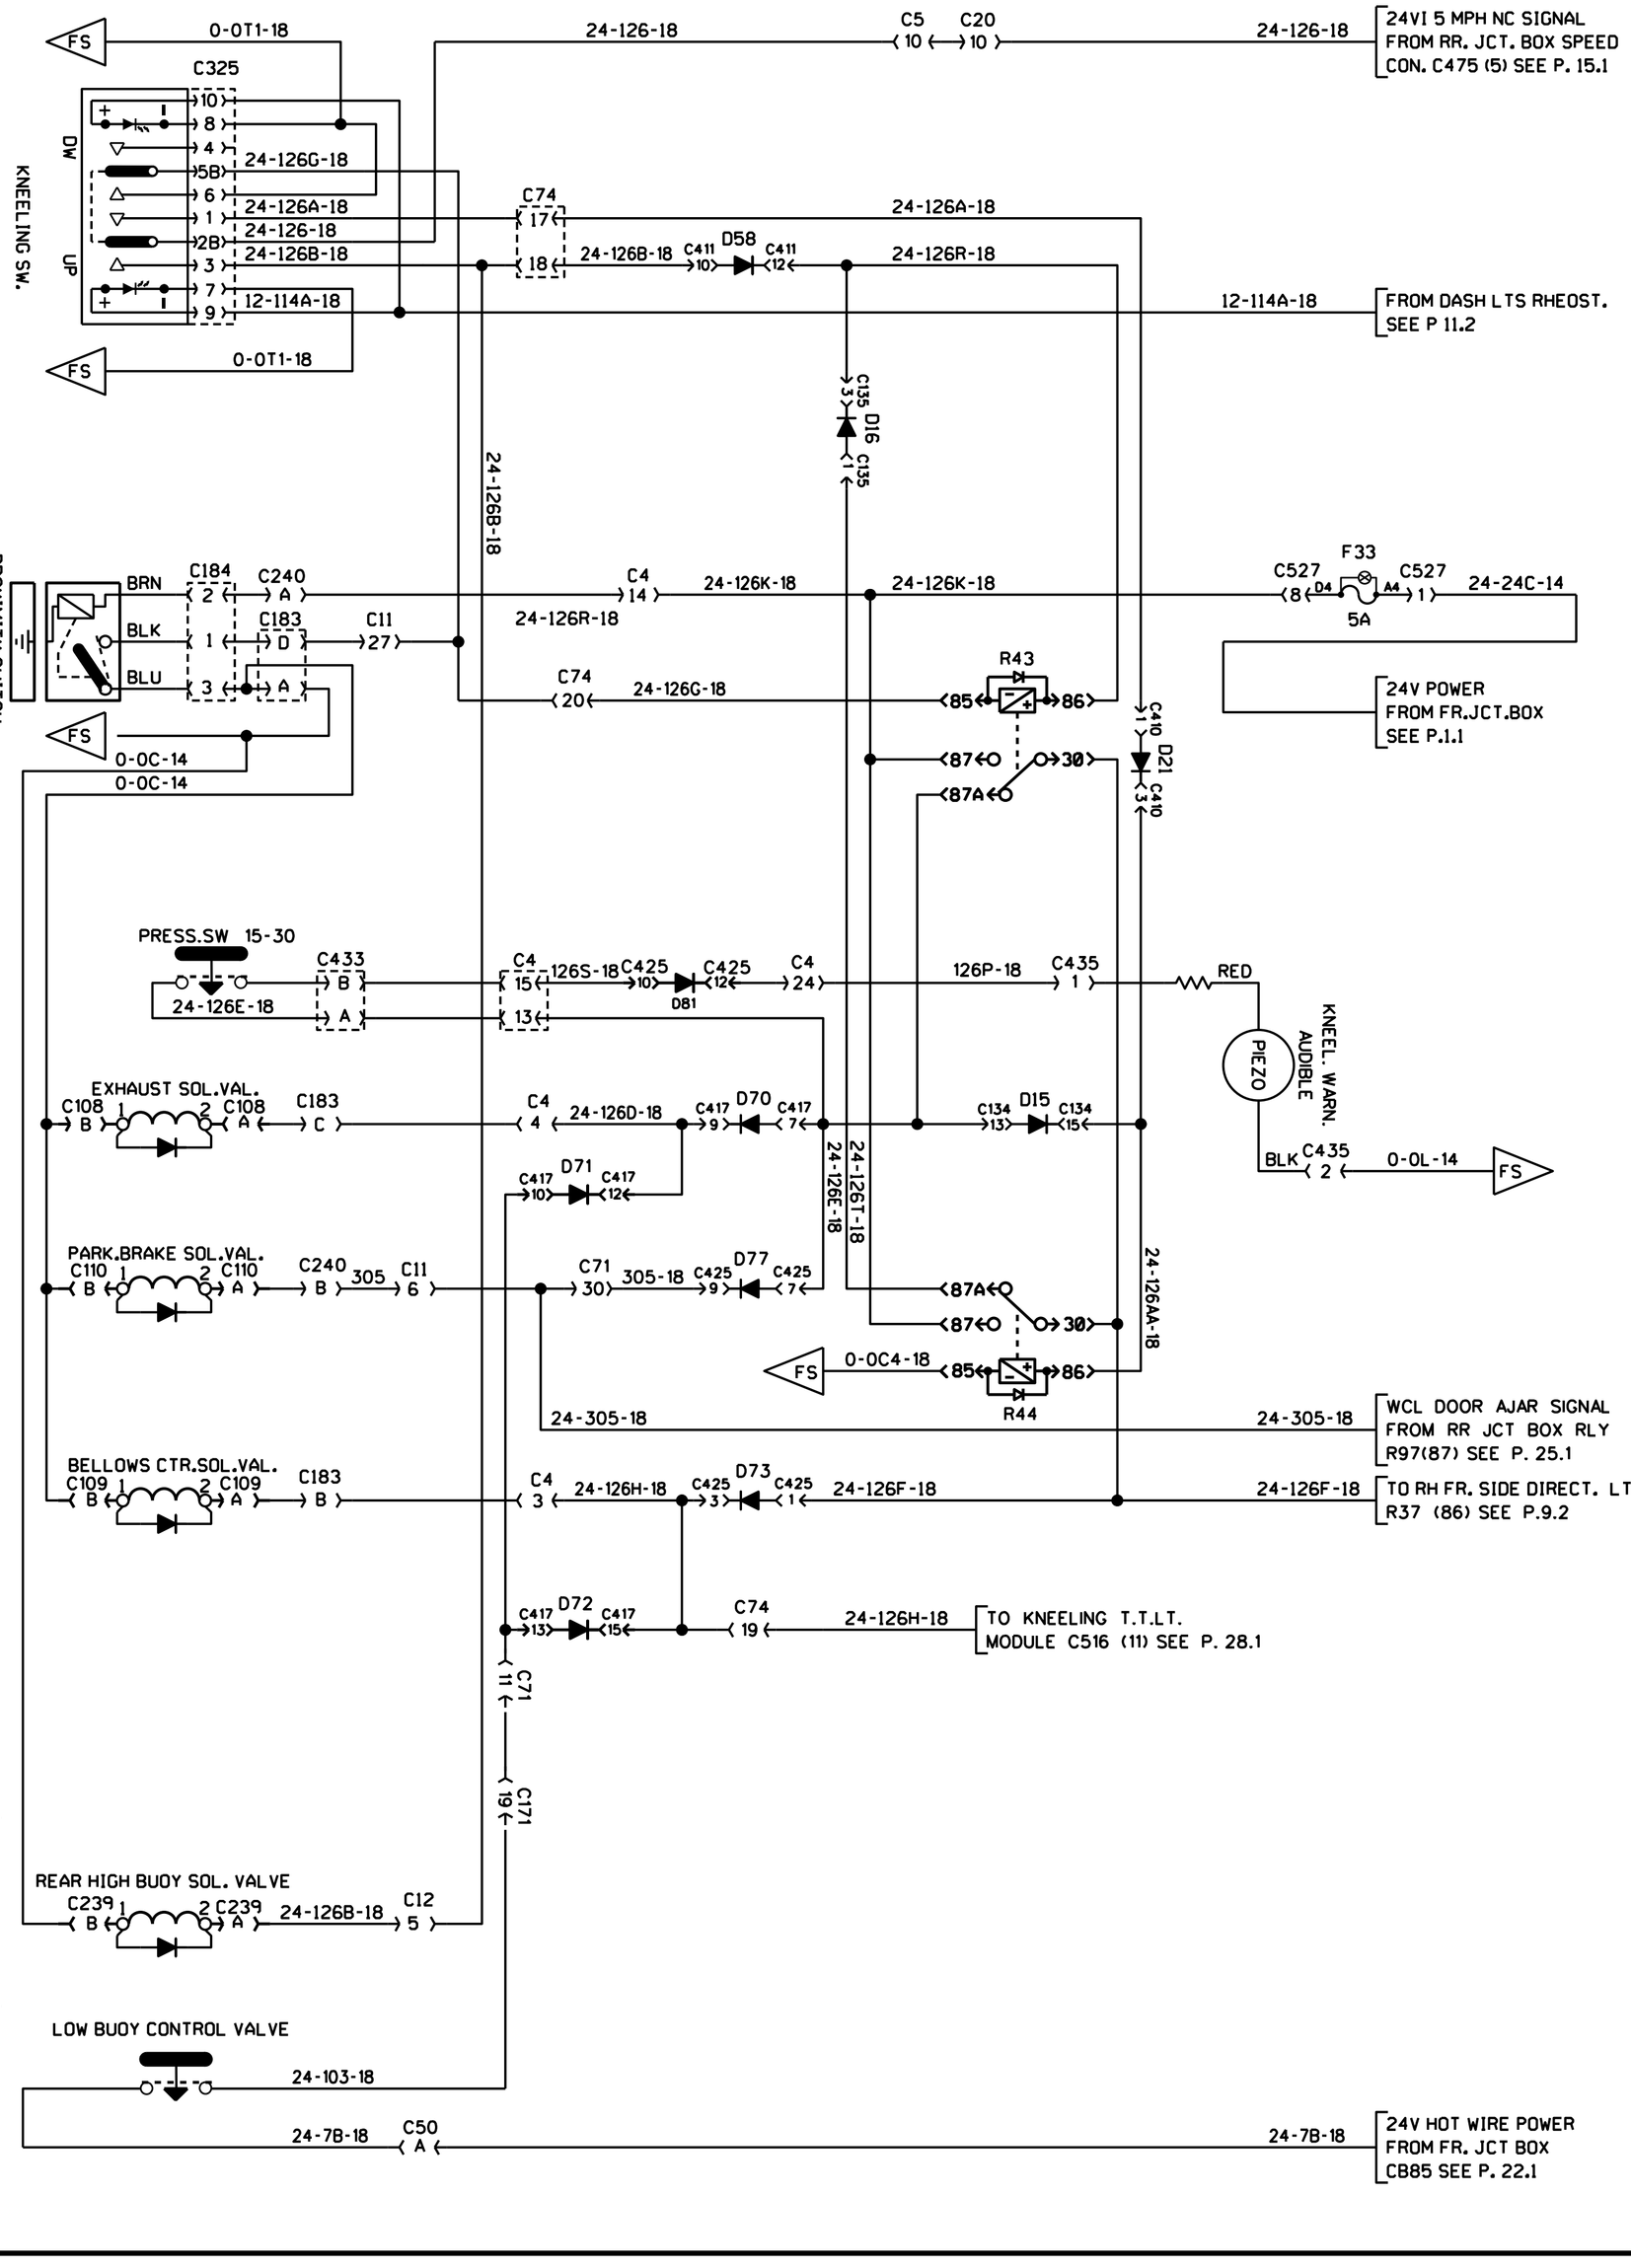

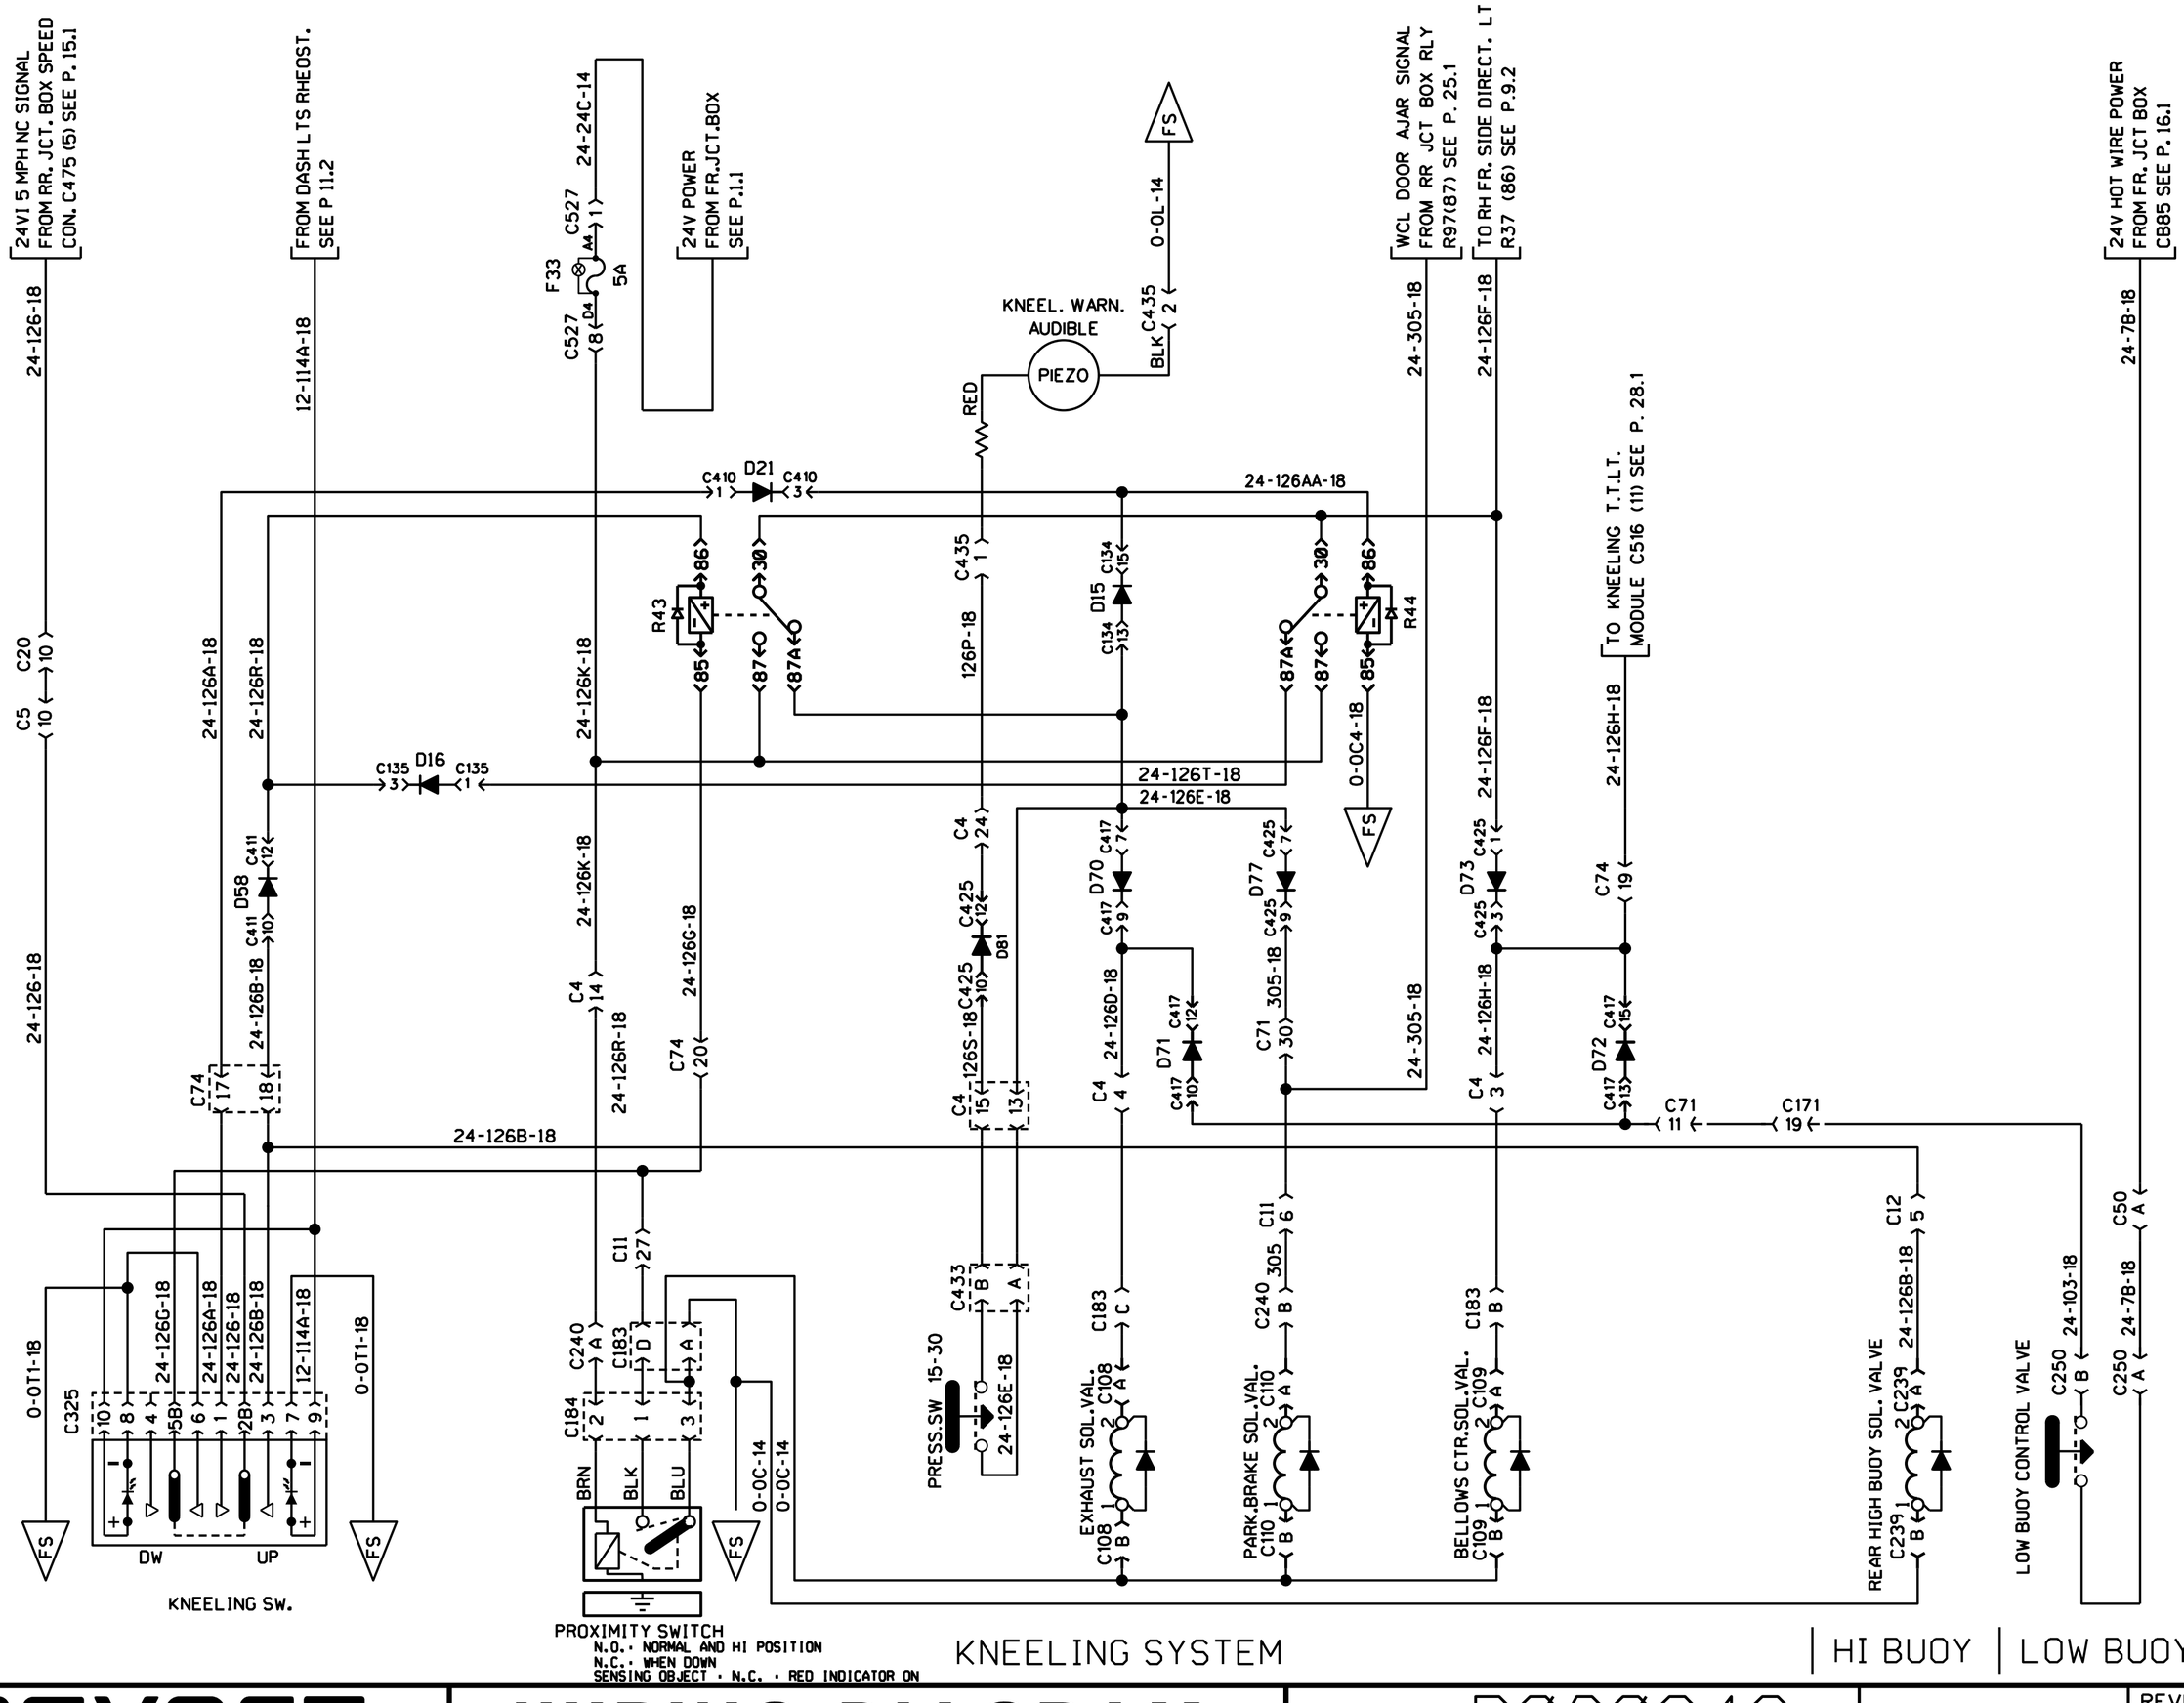
24V I 5 MPH NC SIGNAL
FROM RR. JCT. BOX SPEED
CON. C475 (5) SEE P. 15.1
24-126-18
C5
C20
10
10
24-126A-18
24-126R-18
24-126-18
24-126B-18
24-126K-18
12-114A-18
FROM DASH LTS RHEOST.
SEE P 11.2
F33
5A
C527
24-24C-14
24V POWER
FROM FR.JCT.BOX
SEE P.1.1
KNEEL. WARN.
AUDIBLE
PIEZO
RED
C435
0-0L-14
FS
WCL DOOR AJAR SIGNAL
FROM RR JCT BOX RLY
R97(87) SEE P. 25.1
24-305-18
TO RH FR. SIDE DIRECT. LT
R37 (86) SEE P.9.2
24-126F-18
24V HOT WIRE POWER
FROM FR. JCT BOX
CB85 SEE P. 16.1
24-7B-18
TO KNEELING T.T.L.T.
MODULE C516 (11) SEE P. 28.1
24-126H-18
24-126AA-18
D21
C410
R43
R44
D15
C134
126P-18
C435
86
30
87
87A
85
D16
C135
24-126T-18
24-126E-18
0-0C4-18
D58
C411
D70
C417
D77
C425
D73
C425
D71
C417
D72
C417
D81
C425
24-126S-18
24-126D-18
24-305-18
24-126H-18
C74
C4
C71
C171
C325
0-0T1-18
24-126G-18
24-126A-18
24-126-18
24-126B-18
12-114A-18
DW
UP
KNEELING SW.
C240
C183
C184
BRN
BLK
BLU
0-0C-14
C11
C433
PRESS.SW 15-30
EXHAUST SOL.VAL.
C108
PARK.BRAKE SOL.VAL.
C110
BELLOWS CTR.SOL.VAL.
C109
C239
REAR HIGH BUOY SOL. VALVE
C12
C250
24-103-18
C50
LOW BUOY CONTROL VALVE
PROXIMITY SWITCH
N.O.: NORMAL AND HI POSITION
N.C.: WHEN DOWN
SENSING OBJECT - N.C. - RED INDICATOR ON
KNEELING SYSTEM
HI BUOY
LOW BUOY

ENTRENCE DOOR OPEN SIGNAL SEE P. 16.1

24VI 5 MPH NC SIGNAL FROM RR. JCT. BOX SPEED CON. C475 (5) SEE P. 15.1

FROM DASH LTS RHEOST. SEE P 11.2

24V POWER FROM FR.JCT.BOX SEE P.1.1

WCL DOOR AJAR SIGNAL FROM RR JCT BOX RLY R97(87) SEE P. 25.1

TO RH FR. SIDE DIRECT. LT R37 (86) SEE P.9.2

24V HOT WIRE POWER FROM FR. JCT BOX CB85 SEE P. 22.1

TO KNEELING T.T.L.T. MODULE C516 (11) SEE P. 28.1

KNEEL. WARN. AUDIBLE

PIEZO

RED

F33 5A

R90 R43 R44

D21 D16 D58 D15 D81 D77 D73 D72 D70 D71

24-126AA-18 24-126A-18 24-126R-18 24-126K-18 24-126E-18 24-126T-18 24-126D-18 24-126S-18 24-126G-18 24-126H-18 24-126F-18 24-126B-18 24-126I-18 24-305-18

12-114A-18 24-12W-18 24-126-18 24-7B-18 24-103-18 0-OC4-18 0-OT1-18 0-OL-14 0-OC-14

KNEELING SW.

DW UP

PROXIMITY SWITCH

N.O.: NORMAL & HI POSITION
N.C.: WHEN DOWN

PRESS.SW 15-30

PARK.BRAKE SOL.VAL.

UP SOL.VAL.

EXHAUST SOL.VAL. (DOWN)

KNEELING CTR.SOL.VAL. (BELLOWS)

REAR HIGH BUOY SOL. VALVE

LOW BUOY CONTROL VALVE

KNEELING SYSTEM

HI BUOY | LOW BUOY

ENTRANCE DOOR OPEN SIGNAL SEE P. 16.1

24VI 5 MPH NC SIGNAL FROM RR. JCT. BOX SPEED CON. C475 (5) SEE P. 15.1

FROM DASH LTS RHEOST. SEE P 11.2

24V POWER FROM FR. JCT. BOX SEE P. 1.1

WCL DOOR AJAR SIGNAL FROM RR JCT BOX RLY R97(87) SEE P. 25.1

TO RH FR. SIDE DIRECT. LT R37 (86) SEE P. 9.2

24V HOT WIRE POWER FROM FR. JCT BOX CB85 SEE P. 22.1

TO KNEELING T.T.L.T. MODULE C516 (11) SEE P. 28.1

KNEEL. WARN. AUDIBLE

PIEZO

RED

F33 5A

R90 R43 R44

D21 D16 D58 D15 D81 D77 D73 D72 D70 D71

24-12W-18 24-126-18 12-114A-18 24-24C-14 0-0L-14 24-305-18 24-126F-18 24-126H-18 24-7B-18

24-126A-18 24-126R-18 24-126K-18 24-126E-18 24-126T-18 24-126AA-18 24-126B-18 24-126I-18 24-126S-18 24-126D-18 24-126G-18 0-0C4-18 0-0C-14 0-0T1-18 0-0T-18 126P-18 305-18 24-103-18 24-7B-18

C527 C435 C134 C425 C411 C417 C74 C71 C171 C4 C3 C5 C20 C11 C12 C50 C325 C240 C183 C184 C433 C110 C117 C108 C109 C239

FS

KNEELING SW.

DW UP

PROXIMITY SWITCH

N.O.: NORMAL & UP POSITION
N.C.: WHEN DOWN

PRESS.SW 15-30

PARK.BRAKE SOL.VAL.

UP SOL.VAL.

EXHAUST SOL.VAL. (DOWN)

KNEELING CTR.SOL.VAL. (BELLOWS)

REAR HIGH BUOY SOL. VALVE

LOW BUOY CONTROL VALVE

KNEELING SYSTEM

HI BUOY | LOW BUOY

ENTRANCE DOOR OPEN SIGNAL SEE P. 16.1

24V 5 MPH NC SIGNAL FROM RR. JCT. BOX SPEED CON. C475 (5) SEE P. 15.1

FROM DASH LTS RHEOST. SEE P 11.2

24V POWER FROM FR.JCT.BOX SEE P.1.1

WCL DOOR AJAR SIGNAL FROM RR JCT BOX RLY R97(87) SEE P. 25.1

TO RH FR. SIDE DIRECT. LT R37 (86) SEE P.9.2

24V HOT WIRE POWER FROM FR. JCT BOX CB85 SEE P. 22.1

TO KNEELING T.T.L.T. MODULE C516 (11) SEE P. 28.1

KNEEL. WARN. AUDIBLE

PIEZO

R90 R43 R44

D21 D16 D58 D15 D81 D77 D73 D72 D70 D71

F33 5A

24-24C-14 24-12W-18 24-126-18 12-114A-18 24-126AA-18 24-126A-18 24-126R-18 24-126K-18 126P-18 24-126E-18 24-126T-18 24-305-18 24-126F-18 24-126H-18 24-7B-18 24-126I-18 24-126B-18 24-126S-18 24-126G-18 24-103-18 0-OL-14 0-OC4-18 0-OT1-18 0-126G-18

KNEELING SW.

PROXIMITY SWITCH

N.O.: NORMAL & UP POSITION
N.C.: WHEN DOWN

PRESS.SW 15-30

PARK.BRAKE SOL.VAL.

UP SOL.VAL.

EXHAUST SOL.VAL. (DOWN)


KNEELING CTR.SOL.VAL. (BELLOWS)

REAR HIGH BUOY SOL. VALVE

LOW BUOY CONTROL VALVE

KNEELING SYSTEM

HI BUOY | LOW BUOY

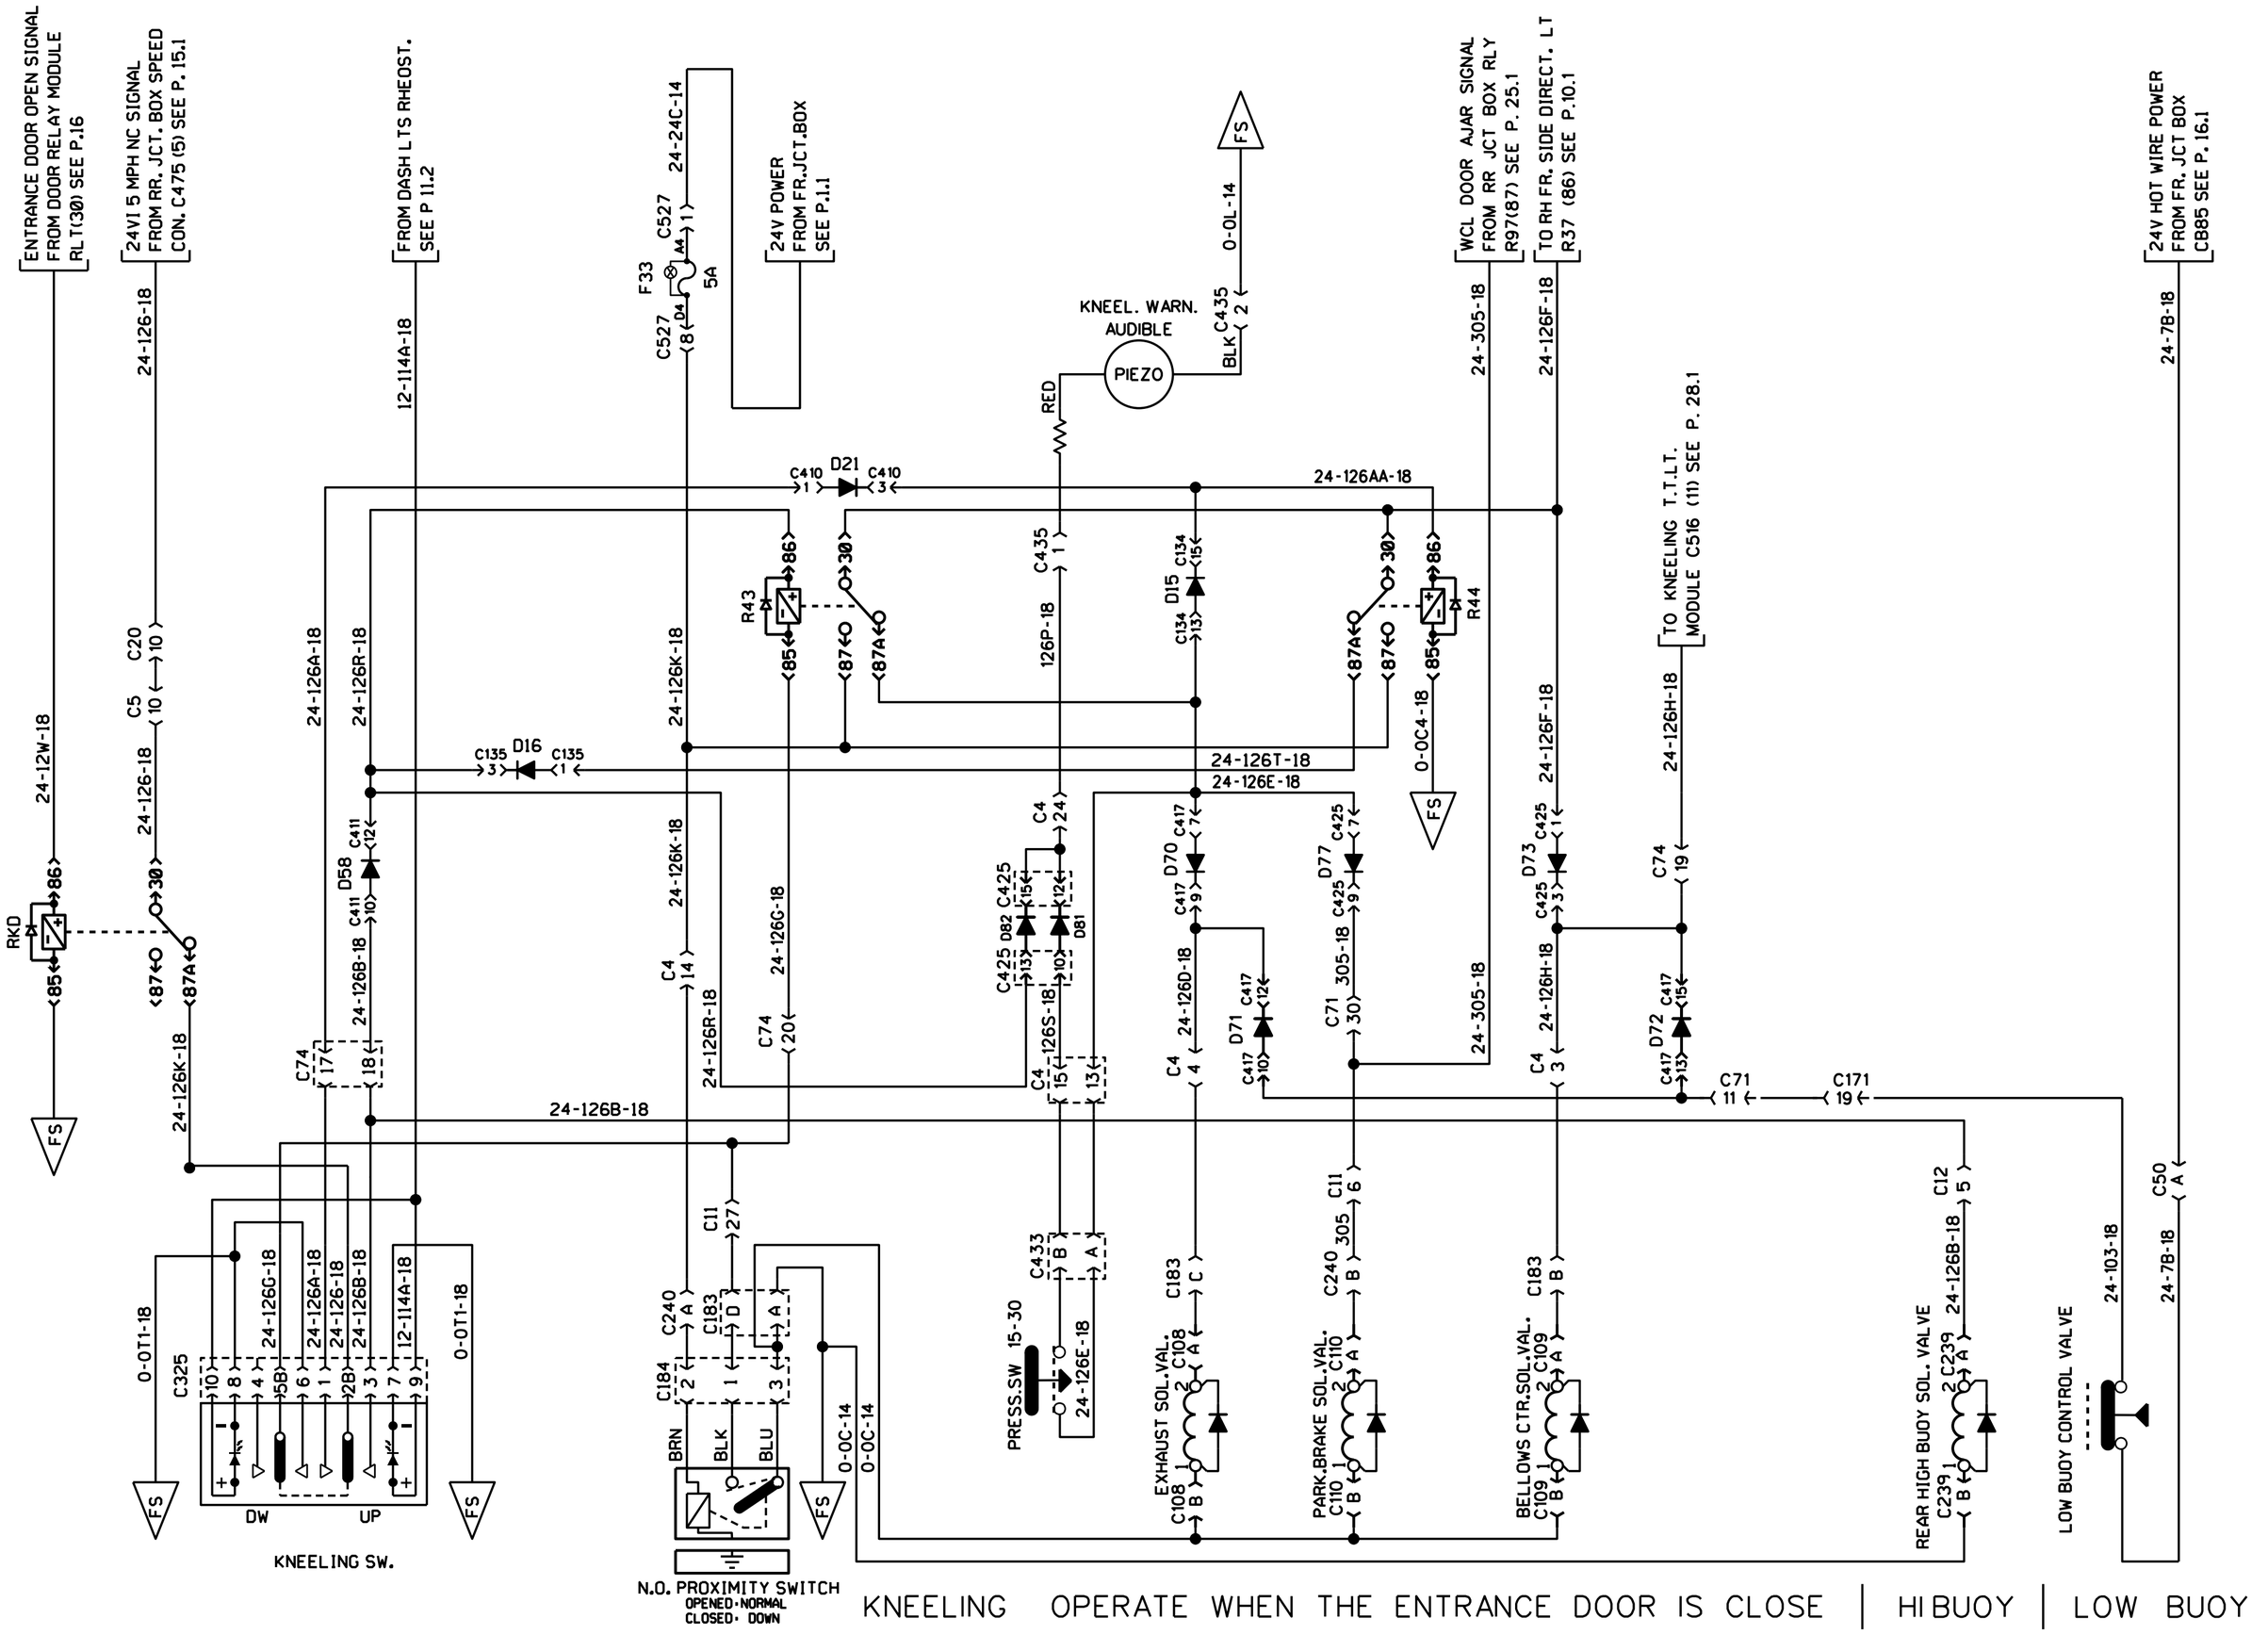
ENTRANCE DOOR OPEN SIGNAL FROM DOOR RELAY MODULE RLT(30) SEE P.16
24V I 5 MPH NC SIGNAL FROM RR. JCT. BOX SPEED CON. C475 (5) SEE P. 15.1
FROM DASH LTS RHEOST. SEE P 11.2
24V POWER FROM FR.JCT.BOX SEE P.1.1
WCL DOOR AJAR SIGNAL FROM RR JCT BOX RLY R97(87) SEE P. 25.1
TO RH FR. SIDE DIRECT. LT R37 (86) SEE P.10.1
24V HOT WIRE POWER FROM FR. JCT BOX CB85 SEE P. 16.1
TO KNEELING T.T.L.T. MODULE C516 (11) SEE P. 28.1
KNEEL. WARN. AUDIBLE
PIEZO
RED
F33
5A
24-24C-14
0-0L-14
24-12W-18
24-126-18
24-126A-18
24-126R-18
24-126K-18
24-126B-18
24-126AA-18
24-126T-18
24-126E-18
24-126G-18
24-126C-18
24-126S-18
24-126D-18
24-126H-18
24-126F-18
24-305-18
126P-18
0-0C4-18
0-0C-14
0-0T1-18
12-114A-18
24-7B-18
24-103-18
R43
R44
RKD
D15
D16
D21
D58
D70
D71
D72
D73
D77
D81
D82
KNEELING SW.
DW
UP
N.O. PROXIMITY SWITCH
OPENED-NORMAL
CLOSED- DOWN
PRESS.SW 15-30
EXHAUST SOL.VAL.
PARK.BRAKE SOL.VAL.
BELLOWS CTR.SOL.VAL.
REAR HIGH BUOY SOL. VALVE
LOW BUOY CONTROL VALVE
BRN
BLK
BLU
KNEELING OPERATE WHEN THE ENTRANCE DOOR IS CLOSE | HI BUOY | LOW BUOY

PREVOST

WIRING DIAGRAM

KNEELING OPERATE WHEN THE ENTRANCE DOOR IS CLOSE | HI BUOY | LOW BUOY

NO: D06094 9

PAGE: 18.1 sp1

REVISION 04

RKD
FS
85
86
24-12W-18
ENTRANCE DOOR OPEN SIGNAL
FROM DOOR RELAY MODULE
RLT(30) SEE P.16
87
30
87A
24-126-18
C5
C20
10
24-126-18
24VI 5 MPH NC SIGNAL
FROM RR. JCT. BOX SPEED
CON. C475 (5) SEE P. 15.1
0-0T1-18
24-126K-18
C325
KNEELING SW.
DW
UP
24-126G-18
24-126A-18
24-126-18
24-126B-18
12-114A-18
C74
17
18
D58
C411
24-126R-18
FROM DASH LTS RHEOST.
SEE P 11.2
C135
D16
24-126B-18
F33
C527
D4
A4
5A
24-24C-14
24V POWER
FROM FR.JCT.BOX
SEE P.1.1
N.O. PROXIMITY SWITCH
OPENED: NORMAL
CLOSED: DOWN
BRN
BLK
BLU
C184
C240
C183
C11
C4
14
27
24-126R-18
R43
C74
20
24-126G-18
C410
D21
0-0C-14
PRESS.SW 15-30
C433
24-126E-18
126S-18
C425
D81
126P-18
C435
RED
PIEZO
KNEEL. WARN.
AUDIBLE
EXHAUST SOL.VAL.
C108
C183
24-126D-18
D70
C417
D71
C134
D15
BLK
0-0L-14
PARK.BRAKE SOL.VAL.
C110
C240
305
C11
C71
305-18
D77
24-126E-18
24-126T-18
24-126AA-18
0-0C4-18
R44
24-305-18
WCL DOOR AJAR SIGNAL
FROM RR JCT BOX RLY
R97(87) SEE P. 25.1
BELLOWS CTR.SOL.VAL.
C109
C183
24-126H-18
D73
24-126F-18
TO RH FR. SIDE DIRECT. LT
R37 (86) SEE P.10.1
D72
C74
19
TO KNEELING T.T.LT.
MODULE C516 (11) SEE P. 28.1
C71
11
C171
19
REAR HIGH BUOY SOL. VALVE
C239
24-126B-18
C12
5
LOW BUOY CONTROL VALVE
24-103-18
24-7B-18
C50
A
24V HOT WIRE POWER
FROM FR. JCT BOX
CB85 SEE P. 16.1

PREVOST

WIRING DIAGRAM

KNEELING OPERATE WHEN THE ENTRANCE DOOR IS CLOSE | HI BUOY | LOW BUOY

NO: D0609 49

PAGE: 18.1 sp1

REVISION 08

RKD
FS
85
86
24-12W-18
ENTRANCE DOOR OPEN SIGNAL
FROM DOOR RELAY MODULE
RLT(30) SEE P.16
87
30
87A
24-126-18
C5
10
C20
10
24VI 5 MPH NC SIGNAL
FROM RR. JCT. BOX SPEED
CON. C475 (5) SEE P. 15.1
0-0T1-18
C325
24-126K-18
KNEELING SW.
DN
UP
24-126G-18
24-126A-18
24-126-18
24-126B-18
12-114A-18
C74
17
18
D58
C411
10
12
24-126R-18
FROM DASH LTS RHEOST.
SEE P 11.2
C135
3
D16
11
24-126B-18
N.O. PROXIMITY SWITCH
OPENED: NORMAL
CLOSED: DOWN
BRN
BLK
BLU
C184
C240
C183
C11
27
C4
14
24-126K-18
24-126R-18
F33
C527
D4
A4
5A
24-24C-14
24V POWER
FROM FR.JCT.BOX
SEE P.1.1
R43
C74
20
24-126G-18
C410
D21
0-0C-14
PRESS.SW 15-30
C433
B
A
24-126E-18
C4
15
13
126S-18
C425
10
12
D81
24
126P-18
C435
1
RED
PIEZO
KNEEL. WARN.
AUDIBLE
BLK
2
0-0L-14
EXHAUST SOL.VAL.
C108
C183
C
4
24-126D-18
C417
9
7
D70
D71
C134
13
15
D15
24-126E-18
24-126T-18
24-126AA-18
PARK.BRAKE SOL.VAL.
C110
C240
305
C11
6
C71
30
305-18
D77
0-0C4-18
R44
24-305-18
WCL DOOR AJAR SIGNAL
FROM RR JCT BOX RLY
R97(87) SEE P. 25.1
BELLOWS CTR.SOL.VAL.
C109
24-126H-18
D73
24-126F-18
TO RH FR. SIDE DIRECT. LT
R37 (86) SEE P.10.1
D72
19
TO KNEELING T.T.LT.
MODULE C516 (11) SEE P. 28.1
REAR HIGH BUOY SOL. VALVE
C239
24-126B-18
C12
5
LOW BUOY CONTROL VALVE
24-103-18
24-7B-18
C50
A
24V HOT WIRE POWER
FROM FR. JCT BOX
CB85 SEE P. 16.1

ENTRANCE DOOR OPEN SIGNAL
FROM DOOR RELAY MODULE
RLT(30) SEE P.16

24VI 5 MPH NC SIGNAL
FROM RR. JCT. BOX SPEED
CON. C475 (5) SEE P. 15.1

FROM DASH LTS RHEOST.
SEE P 11.2

24V POWER
FROM FR.JCT.BOX
SEE P.1.1

WCL DOOR AJAR SIGNAL
FROM RR JCT BOX RLY
R97(87) SEE P. 25.1

TO RH FR. SIDE DIRECT. LT
R37 (86) SEE P.10.1

24V HOT WIRE POWER
FROM FR. JCT BOX
CB85 SEE P. 16.1

TO KNEELING T.T.LT.
MODULE C516 (11) SEE P. 28.1

KNEEL. WARN.
AUDIBLE

PIEZO

RED

BLK

F33 5A

RKD

R43

R44

D15

D21

D16

D58

D70

D77

D73

D71

D72

D81

PRESS.SW 15-30

EXHAUST SOL.VAL. C108

PARK.BRAKE SOL.VAL. C110

BELLOWS CTR.SOL.VAL. C109

REAR HIGH BUOY SOL. VALVE C239

LOW BUOY CONTROL VALVE C250

KNEELING SW.


DW

UP

N.O. PROXIMITY SWITCH
OPENED-NORMAL
CLOSED- DOWN

KNEELING OPERATE WHEN THE ENTRANCE DOOR IS CLOSE | HI BUOY | LOW BUOY

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 18.1 sp1	REVISION 17

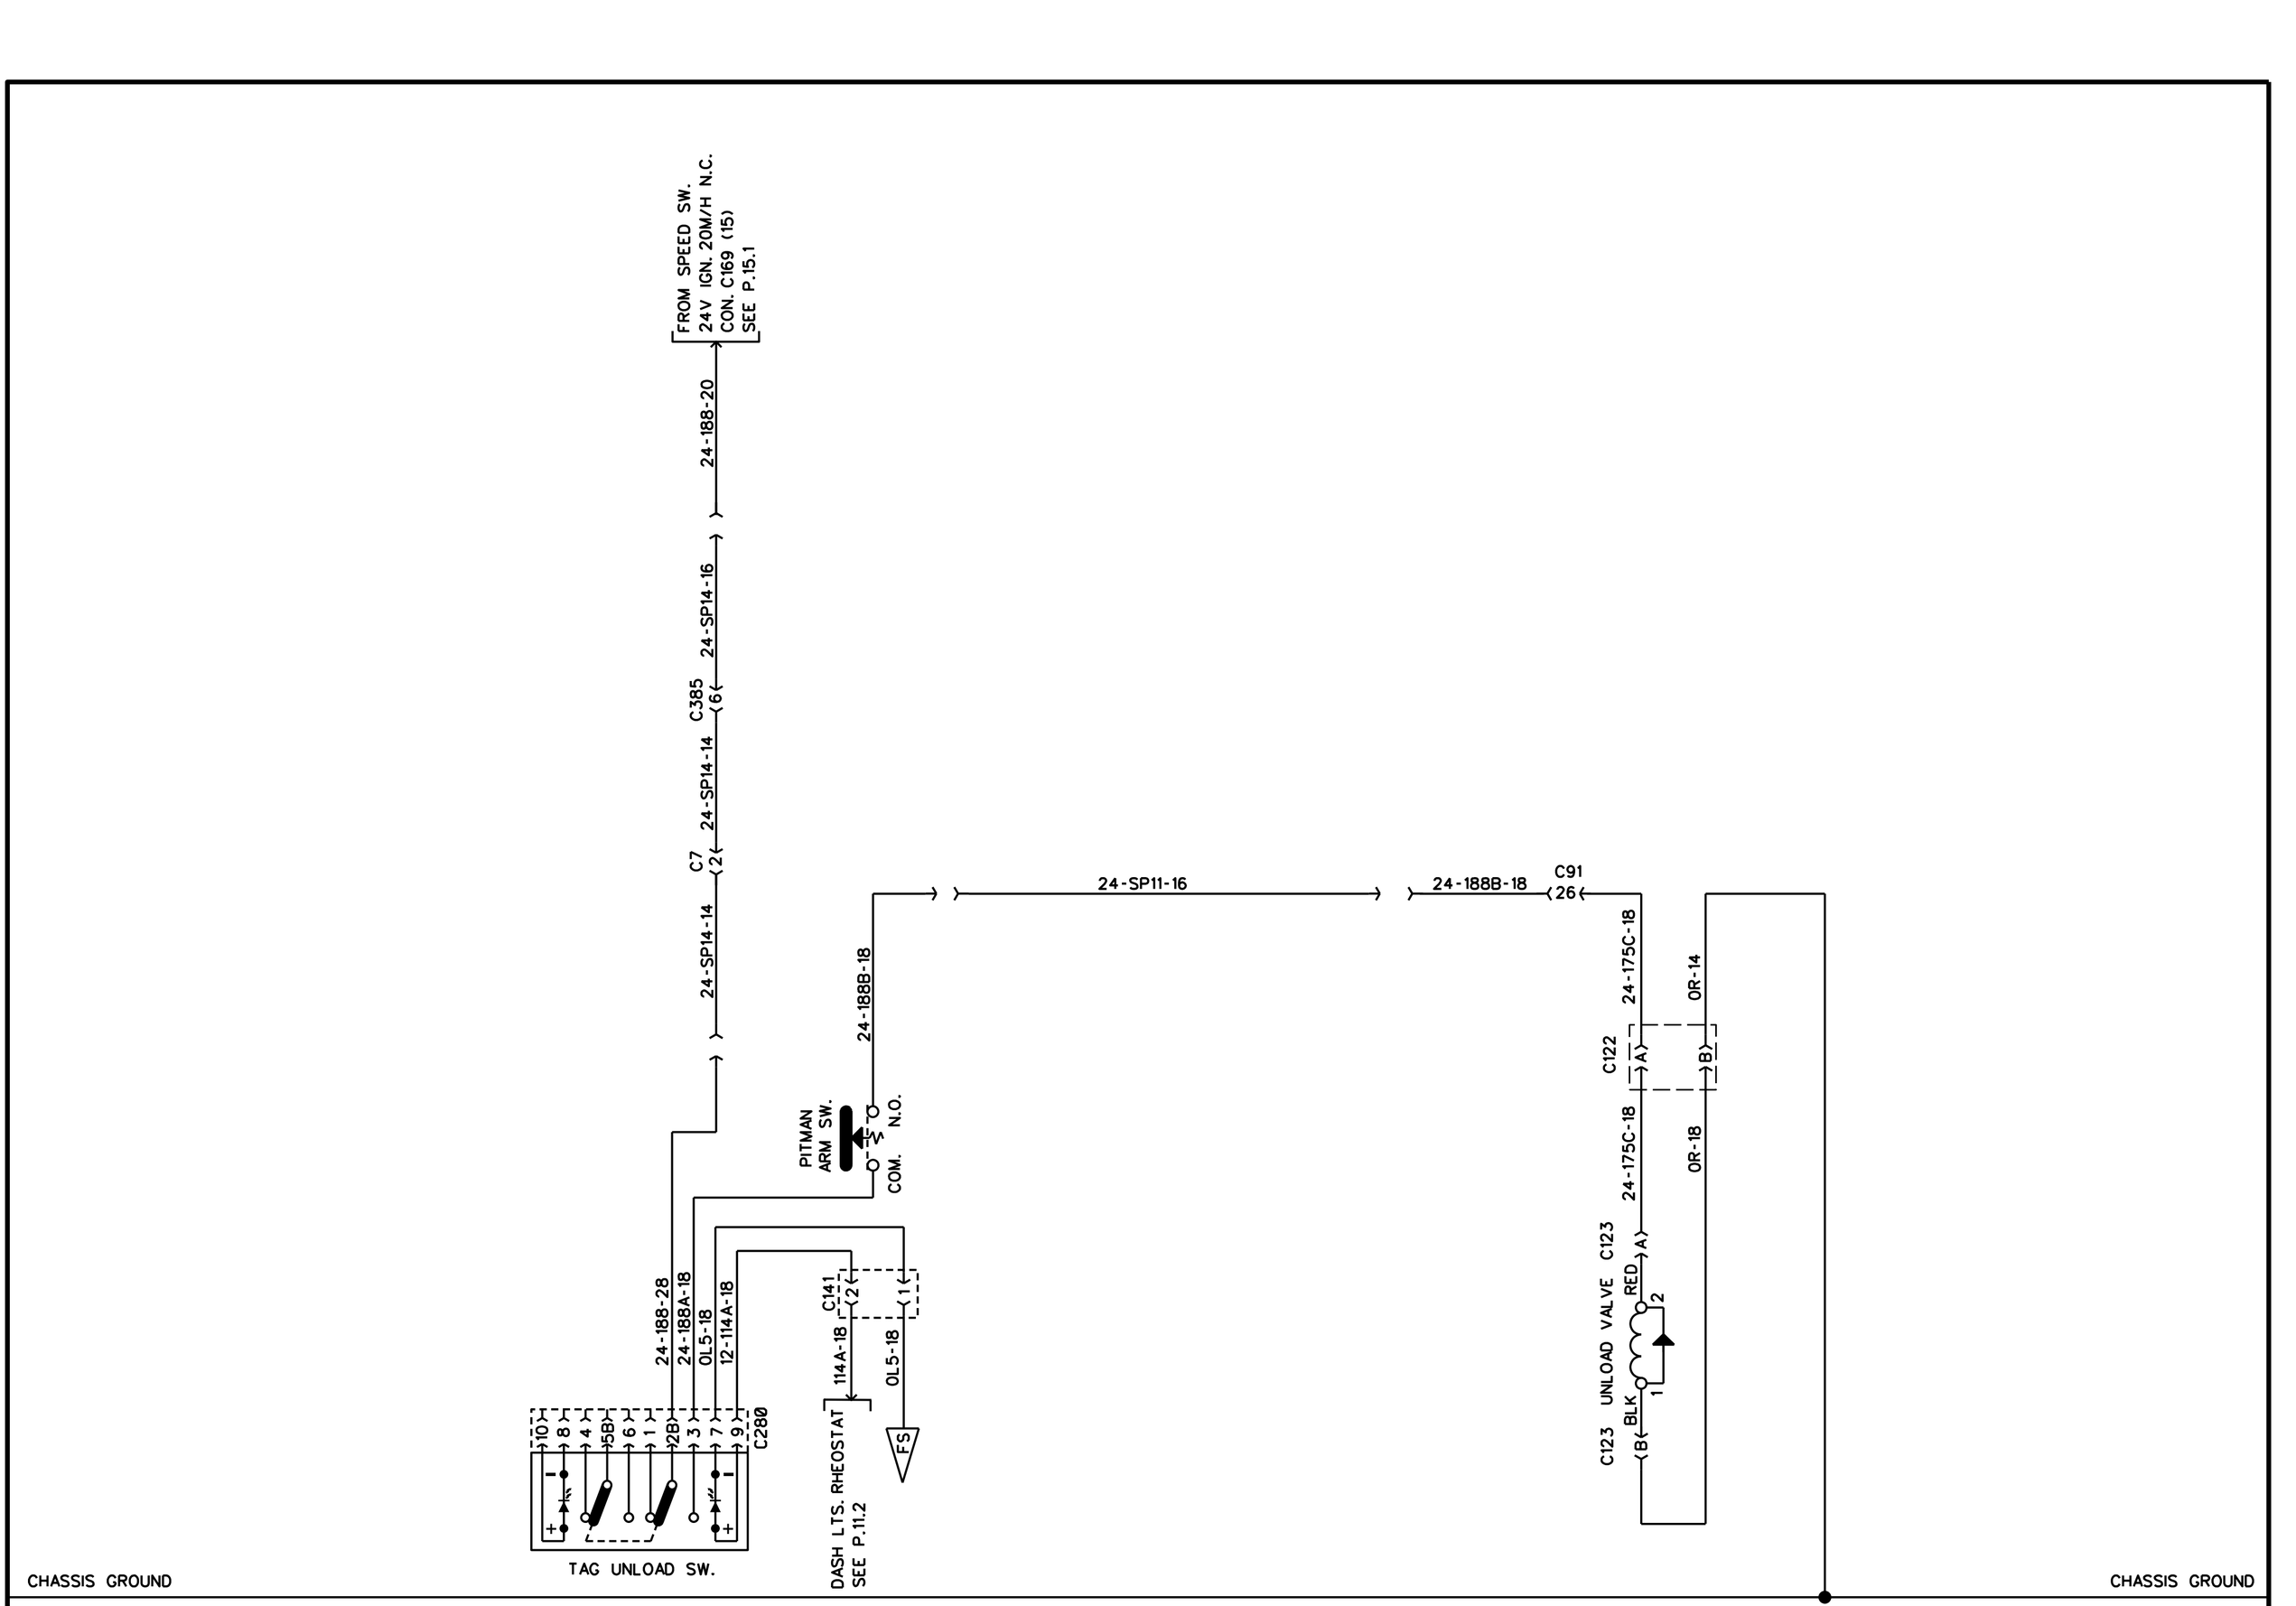

UNLOAD TAG SYSTEM

FROM SPEED SW.
24V IGN. 20M/H N.C.
CON. C169 (15)
SEE P.15.1

24-188-20

24-SP14-14

24-SP11-16

24-188B-18

C91
26

24-188B-18

PITMAN ARM SW.

COM.

N.O.

24-188-28

24-188A-18

0L5-18

12-114A-18

C141
2

1

114A-18

0L5-18

FS

DASH LTS. RHEOSTAT
SEE P.11.2

C280
10
8
4
5B
6
1
2B
3
7
9

TAG UNLOAD SW.

C122
A
B

24-175C-18

OR-14

OR-18

24-175C-18

C123 UNLOAD VALVE C123
RED
2
1
BLK
A
B

CHASSIS GROUND

CHASSIS GROUND

UNLOAD TAG SYSTEM

PREVOST

KNEELING SYSTEM | HI BUOY | LOW BUOY

NO: D060949

PAGE: 18.1sp3

REVISION 00

24-126-18

FS 0-0T1-18

C325

KNEELING SW.

DN

UP

24-126G-18

24-126A-18

24-126-18

24-126B-18

12-114A-18

FS 0-0T1-18

C5 10 — C20 10 — 24-126-18 — 24VI 5 MPH NC SIGNAL FROM RR. JCT. BOX SPEED CON. C475 (5) SEE P. 15.1

C74 17 — 24-126B-18 — C411 10 — D58 — C411 12 — 24-126R-18

24-126A-18

12-114A-18 — FROM DASH LTS RHEOST. SEE P 11.2

C135 3 — D16 — C135 1

24-126B-18

N.O. PROXIMITY SWITCH OPENED:NORMAL CLOSED:DOWN

BRN — C184 2 — C240 A — C4 14 — 24-126K-18

BLK — C184 1 — C183 D — C11 27 — 24-126R-18

BLU — C184 3 — C183 A

C74 20 — 24-126G-18

FS 0-0C-14

0-0C-14

F33

C527 8 — D4 — A4 — C527 1 — 24-24C-14

5A

24-126K-18

24V POWER FROM FR.JCT.BOX SEE P.1.1

R43

85 — 86

87 — 30

87A

C410 1 — D21 — C410 3

PRESS.SW 35-60

24-126E-18

C433 B — C433 A

C4 15 — 126S-18 — C425 13 — D82 — C425 15

C425 10 — D81 — C425 12

C4 24 — 126P-18 — C435 1 — RED

PIEZO — KNEEL. WARN. AUDIBLE

BLK C435 2 — 0-0L-14 — FS

EXHAUST SOL.VAL.

C108 B — C108 1 — C108 2 — C108 A — C183 C

C4 4 — 24-126D-18 — C417 9 — D70 — C417 7

C417 10 — D71 — C417 12

C134 13 — D15 — C134 15

24-126E-18

24-126T-18

24-126AA-18

PARK.BRAKE SOL.VAL.

C110 B — C110 1 — C110 2 — C110 A — C240 B — 305 — C11 6

C71 30 — 305-18 — C425 9 — D77 — C425 7

87A — 87 — 30

FS 0-0C4-18 — 85 — 86

R44

24-305-18 — 24-305-18 — WCL DOOR AJAR SIGNAL FROM RR JCT BOX RLY R97(87) SEE P. 25.1

BELLOWS CTR.SOL.VAL.

C109 B — C109 1 — C109 2 — C109 A — C183 B

C4 3 — 24-126H-18 — C425 3 — D73 — C425 1 — 24-126F-18 — 24-126F-18 — TO RH FR. SIDE DIRECT. LT R37 (86) SEE P.10.1

C417 13 — D72 — C417 15 — C74 19 — 24-126H-18 — TO KNEELING T.T.LT. MODULE C516 (11) SEE P. 28.1

87A — 24-103A-18 — 87 — 30

24-103-18 — 86 — 85 — RL1

C71 11

87A — 30 — 87 — 103C — CL2 4

85 — 86 — RL2 — CL2 6

24-103B-18

REAR HIGH BUOY SOL. VALVE

C239 B — C239 1 — C239 2 — C239 A — 24-126B-18 — C12 5

24-126-18 — CL1 2 — 126 — CL2 1 — CL2 3 — 24-103E-18

RL3

85 — 86

LOW BUOY CONTROL VALVE

24-103-18 — C171 19

30 — 87 — 87A — 103H-18 — CL1 3 — 103H-18

LOW BUOY BYPASS VALVE
NOT ENERGIZED=MAN. SW. CTRL
ENERGIZED=BYPASS MAN. SW. CTRL

CL3 B — CL3 A — 0-0L-18 — CL1 1 — FS

24-7B-18 — C50 A — 24-7B-18 — 24V HOT WIRE POWER FROM FR. JCT BOX CB85 SEE P. 22.1

24-126K-18

24V1 5 MPH NC SIGNAL FROM RR. JCT. BOX SPEED CON. C475 (5) SEE P. 15.1

FROM DASH LTS RHEOST. SEE P 11.2

24V POWER FROM FR.JCT.BOX SEE P.1.1

WCL DOOR AJAR SIGNAL FROM RR JCT BOX RLY R97(87) SEE P. 25.1

TO RH FR. SIDE DIRECT. LT R37 (86) SEE P.10.1

TO KNEELING T.T.L.T. MODULE C516 (11) SEE P. 28.1

LOW BUOY BYPASS VALVE
NOT ENERGIZED=MAN. SW. CTRL
ENERGIZED=BYPASS MAN. SW. CTRL

24V HOT WIRE POWER FROM FR. JCT BOX CB85 SEE P. 22.1

KNEEL. WARN. AUDIBLE

PIEZO

KNEELING SW.

DW

UP

N.O. PROXIMITY SWITCH
OPENED=NORMAL
CLOSED=DOWN

PRESS.SW 35-60

EXHAUST SOL.VAL.

PARK.BRAKE SOL.VAL.

BELLOWS CTR.SOL.VAL.

REAR HIGH BUOY SOL. VALVE

LOW BUOY CONTROL VALVE

KNEELING SYSTEM

HI BUOY | LOW BUOY

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 18.1sp3	REVISION 04

PREVOST


WIRING DIAGRAM

KNEELING SYSTEM | HI BUOY | LOW BUOY

NO: D060949

PAGE: 18.1sp3

REVISION 05

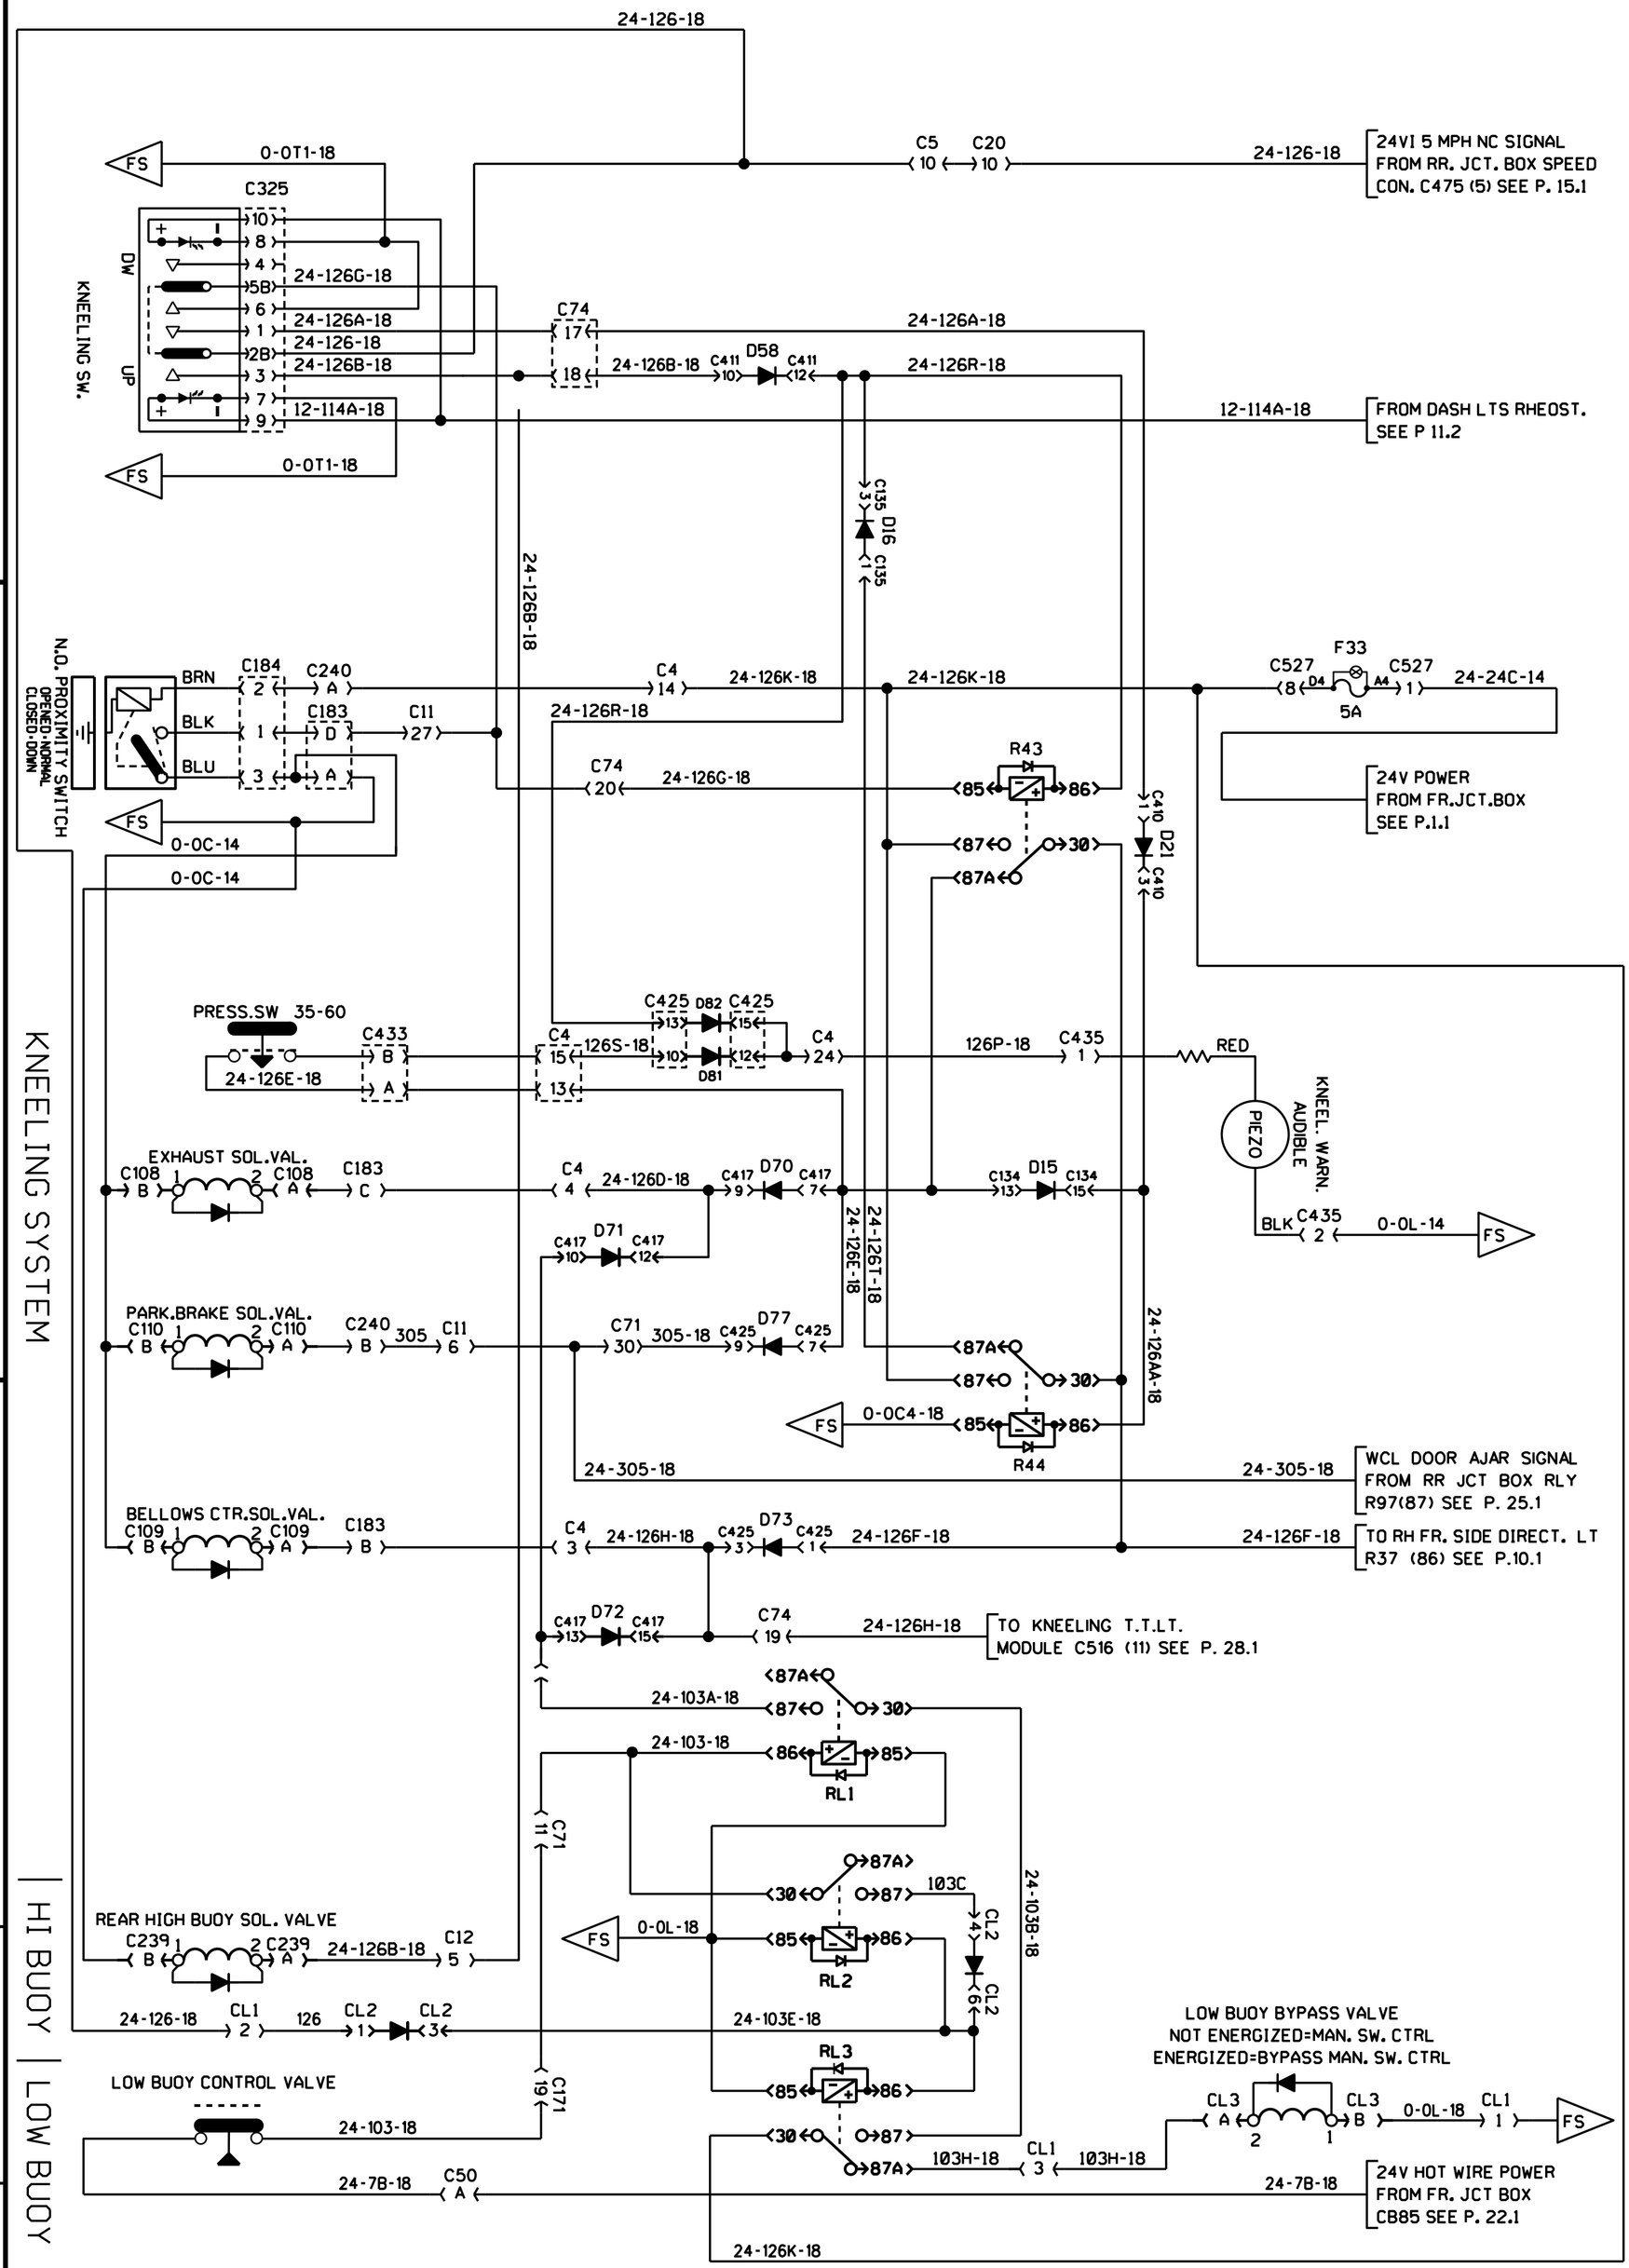

PREVOST | WIRING DIAGRAM | KNEELING SYSTEM | HI BUOY | LOW BUOY | NO: D060949 | PAGE: 18.1sp3 | REVISION 08

24-126-18

FS 0-0T1-18

C325

KNEELING SW.

DW: 10, 8, 4, 5B 24-126G-18, 6 24-126A-18, 1 24-126-18

UP: 2B 24-126B-18, 3, 7, 9 12-114A-18

FS 0-0T1-18

C5 10 — C20 10 — 24-126-18 — 24VI 5 MPH NC SIGNAL FROM RR. JCT. BOX SPEED CON. C475 (5) SEE P. 15.1

C74 17 — 24-126A-18

C74 18 — 24-126B-18 — C411 10 — D58 — C411 12 — 24-126R-18

12-114A-18 — FROM DASH LTS RHEOST. SEE P 11.2

C135 3 — D16 — C135 1

24-126B-18

N.O. PROXIMITY SWITCH OPENED=NORMAL CLOSED=DOWN

BRN C184 2 — C240 A — C4 14 — 24-126K-18 — 24-126K-18

BLK C183 1 — D — C11 27 — 24-126R-18

BLU 3 — A

C527 8 — D4 F33 5A A4 — C527 1 — 24-24C-14

24V POWER FROM FR.JCT.BOX SEE P.1.1

FS 0-0C-14

0-0C-14

C74 20 — 24-126G-18 — R43 85 — 86

87 — 30

87A

C410 1 — D21 — C410 3

PRESS.SW 35-60

24-126E-18

C433 B — A

C425 13 — D82 — C425 15

C4 15 — 126S-18 — 10 — D81 — 12 — C4 24 — 126P-18 — C435 1 — RED

C4 13

KNEEL. WARN. AUDIBLE PIEZO

BLK C435 2 — 0-0L-14 — FS

EXHAUST SOL.VAL. C108 1 2 C108 — B — A — C183 C

C4 4 — 24-126D-18 — C417 9 — D70 — C417 7

C417 10 — D71 — C417 12

C134 13 — D15 — C134 15

24-126E-18 — 24-126T-18

PARK.BRAKE SOL.VAL. C110 1 2 C110 — B — A — C240 B — 305 — C11 6

C71 30 — 305-18 — C425 9 — D77 — C425 7

87A — 87 — 30

24-126AA-18

FS 0-0C4-18 — 85 — 86 — R44

24-305-18 — 24-305-18 — WCL DOOR AJAR SIGNAL FROM RR JCT BOX RLY R97(87) SEE P. 25.1

BELLOWS CTR.SOL.VAL. C109 1 2 C109 — B — A — C183 B

C4 3 — 24-126H-18 — C425 3 — D73 — C425 1 — 24-126F-18 — 24-126F-18 — TO RH FR. SIDE DIRECT. LT R37 (86) SEE P.10.1

C417 13 — D72 — C417 15 — C74 19 — 24-126H-18 — TO KNEELING T.T.LT. MODULE C516 (11) SEE P. 28.1

87A — 87 — 30 — 24-103A-18

86 — 85 — 24-103-18 — RL1

C71 11

87A — 30 — 87 — 103C — CL2 4 — CL2 6

REAR HIGH BUOY SOL. VALVE C239 1 2 C239 — B — A — 24-126B-18 — C12 5

FS 0-0L-18 — 85 — 86 — RL2

24-126-18 — CL1 2 — 126 — CL2 — CL2 3 — 24-103E-18

24-103B-18

LOW BUOY BYPASS VALVE
NOT ENERGIZED=MAN. SW. CTRL
ENERGIZED=BYPASS MAN. SW. CTRL

RL3

LOW BUOY CONTROL VALVE

C171 19

85 — 86

CL3 A — CL3 B — 2 — 1 — 0-0L-18 — CL1 1 — FS

24-103-18

30 — 87 — 87A — 103H-18 — CL1 3 — 103H-18

24-7B-18 — C50 A — 24-7B-18 — 24V HOT WIRE POWER FROM FR. JCT BOX CB85 SEE P. 22.1

24-126K-18

PREVOST

KNEELING SYSTEM | HI BUOY | LOW BUOY

PROGRAM NO: D060949

PAGE: 18.1sp3

REVISION 17

24-126-18

FS 0-0T1-18

C325

KNEELING SW.

DW: 24-126G-18, 24-126A-18, 24-126-18, 24-126B-18

UP: 12-114A-18

FS 0-0T1-18

C5 10 — C20 10

24-126-18 — 24VI 5 MPH NC SIGNAL FROM RR. JCT. BOX SPEED CON. C475 (5) SEE P. 15.1

C74 17 — 24-126A-18

C74 18 — 24-126B-18 — C411 10 — D58 — C411 12 — 24-126R-18

12-114A-18 — FROM DASH LTS RHEOST. SEE P 11.2

C135 3 — D16 — C135 1

24-126B-18

N.O. PROXIMITY SWITCH OPENED=NORMAL CLOSED=DOWN

BRN C184 2 — C240 A — C4 14 — 24-126K-18 — 24-126K-18

BLK C183 1 — C11 27 — 24-126R-18

BLU C183 3 — A

C527 8 — D4 — F33 — A4 — C527 1 — 24-24C-14

5A

24V POWER FROM FR.JCT.BOX SEE P.1.1

FS 0-0C-14

0-0C-14

C74 20 — 24-126G-18

R43 85 — 86

87 — 30

87A

C410 1 — D21 — C410 3

PRESS.SW 35-60

24-126E-18

C433 B — A

C425 13 — D82 — C425 15

C4 15 — 126S-18 — 10 — D81 — 12 — C4 24 — 126P-18 — C435 1 — RED

C4 13

KNEEL. WARN. AUDIBLE PIEZO

BLK C435 2 — 0-0L-14 — FS

EXHAUST SOL.VAL. C108 1 B — 2 C108 A — C183 C

C4 4 — 24-126D-18 — C417 9 — D70 — C417 7

C417 10 — D71 — C417 12

C134 13 — D15 — C134 15

24-126E-18

24-126T-18

PARK.BRAKE SOL.VAL. C110 1 B — 2 C110 A — C240 B — 305 — C11 6

C71 30 — 305-18 — C425 9 — D77 — C425 7

87A — 87 — 30

24-126AA-18

FS 0-0C4-18 — 85 — 86 — R44

24-305-18 — 24-305-18 — WCL DOOR AJAR SIGNAL FROM RR JCT BOX RLY R97(87) SEE P. 25.1

BELLOWS CTR.SOL.VAL. C109 1 B — 2 C109 A — C183 B

C4 3 — 24-126H-18 — C425 3 — D73 — C425 1 — 24-126F-18 — 24-126F-18 — TO RH FR. SIDE DIRECT. LT R37 (86) SEE P.10.1

C417 13 — D72 — C417 15 — C74 19 — 24-126H-18 — TO KNEELING T.T.LT. MODULE C516 (11) SEE P. 28.1

87A — 24-103A-18 — 87 — 30

24-103-18 — 86 — 85 — RL1

C71 11

87A — 30 — 87 — 103C — CL2 4 — CL2 6

REAR HIGH BUOY SOL. VALVE C239 1 B — 2 C239 A — 24-126B-18 — C12 5

FS 0-0L-18 — 85 — 86 — RL2

24-126-18 — CL1 2 — 126 — CL2 1 — CL2 3

24-103E-18

24-103B-18

RL3

LOW BUOY CONTROL VALVE

C250 B — 24-103-18

C171 19

LOW BUOY BYPASS VALVE
NOT ENERGIZED=MAN. SW. CTRL
ENERGIZED=BYPASS MAN. SW. CTRL

CL3 A — 2 — 1 — CL3 B — 0-0L-18 — CL1 1 — FS

30 — 87 — 87A — 103H-18 — CL1 3 — 103H-18

C250 A — 24-7B-18 — C50 A

24-7B-18 — 24V HOT WIRE POWER FROM FR. JCT BOX CB85 SEE P. 16.1

24-126K-18

PREVOST

WIRING DIAGRAM

KNEELING DOWN WHEN THE ENTRANCE DOOR IS CLOSE BUT RAISE WHEN THE DOOR IS CLOSED OR OPEN | HI BUOY | LOW BUOY

NO: D06094

PAGE: 18.1 sp4

REVISION 00

RKUP
RKD
FS
0-0-18
24-12W-18
ENTRANCE DOOR OPEN SIGNAL FROM DOOR RELAY MODULE RLT(30) SEE P.16
24-126G-18
0-0T1-18
24-126K-18
24-126-18
C5
C20
24VI 5 MPH NC SIGNAL FROM RR. JCT. BOX SPEED CON. C475 (5) SEE P. 15.1
C325
KNEELING SW.
DW
UP
24-126A-18
24-126B-18
12-114A-18
FROM DASH LTS RHEOST. SEE P 11.2
C74
D58
C411
24-126R-18
C135
D16
24-126B-18
N.O. PROXIMITY SWITCH OPENED:NORMAL CLOSED: DOWN
BRN
BLK
BLU
C184
C240
C183
C11
C4
F33
C527
5A
24-24C-14
24V POWER FROM FR.JCT.BOX SEE P.1.1
R43
D21
C410
0-0C-14
PRESS.SW 15-30
C433
24-126E-18
126S-18
C425
D81
126P-18
C435
RED
PIEZO
KNEEL. WARN. AUDIBLE
BLK
0-0L-14
EXHAUST SOL.VAL.
C108
C183
24-126D-18
D70
D71
D15
C134
24-126E-18
24-126T-18
24-126AA-18
PARK.BRAKE SOL.VAL.
C110
305
C71
305-18
D77
87A
87
30
85
86
FS
0-0C4-18
R44
24-305-18
WCL DOOR AJAR SIGNAL FROM RR JCT BOX RLY R97(87) SEE P. 25.1
BELLOWS CTR.SOL.VAL.
C109
24-126H-18
D73
24-126F-18
TO RH FR. SIDE DIRECT. LT R37 (86) SEE P.10.1
D72
C74
TO KNEELING T.T.LT. MODULE C516 (11) SEE P. 28.1
C171
REAR HIGH BUOY SOL. VALVE
C239
C12
LOW BUOY CONTROL VALVE
24-103-18
24-7B-18
C50
24V HOT WIRE POWER FROM FR. JCT BOX CB85 SEE P. 16.1

ENTRANCE DOOR OPEN SIGNAL
FROM DOOR RELAY MODULE
RLT(30) SEE P.16

24VI 5 MPH NC SIGNAL
FROM RR. JCT. BOX SPEED
CON. C475 (5) SEE P. 15.1

FROM DASH L TS RHEOST.
SEE P 11.2

24V POWER
FROM FR.JCT.BOX
SEE P.1.1

KNEEL. WARN.
AUDIBLE

WCL DOOR AJAR SIGNAL
FROM RR JCT BOX RLY
R97(87) SEE P. 25.1

TO RH FR. SIDE DIRECT. LT
R37 (86) SEE P.10.1

24V HOT WIRE POWER
FROM FR. JCT BOX
CB85 SEE P. 16.1

TO KNEELING T.T.L.T.
MODULE C516 (11) SEE P. 28.1

RKD

RKUP

R43

R44

D21

D16

D15

D58

D70

D71

D72

D73

D77

D81

F33 5A

PIEZO

RED

FS

KNEELING SW.

DW

UP

N.O. PROXIMITY SWITCH
OPENED-NORMAL
CLOSED- DOWN

PRESS.SW 15-30

EXHAUST SOL.VAL.

PARK.BRAKE SOL.VAL.


BELLOWS CTR.SOL.VAL.

REAR HIGH BUOY SOL. VALVE

LOW BUOY CONTROL VALVE


KNEELING DOWN WHEN THE ENTRANCE DOOR IS CLOSE
BUT RAISE WHEN THE DOOR IS CLOSED OR OPEN

HI BUOY | LOW BUOY

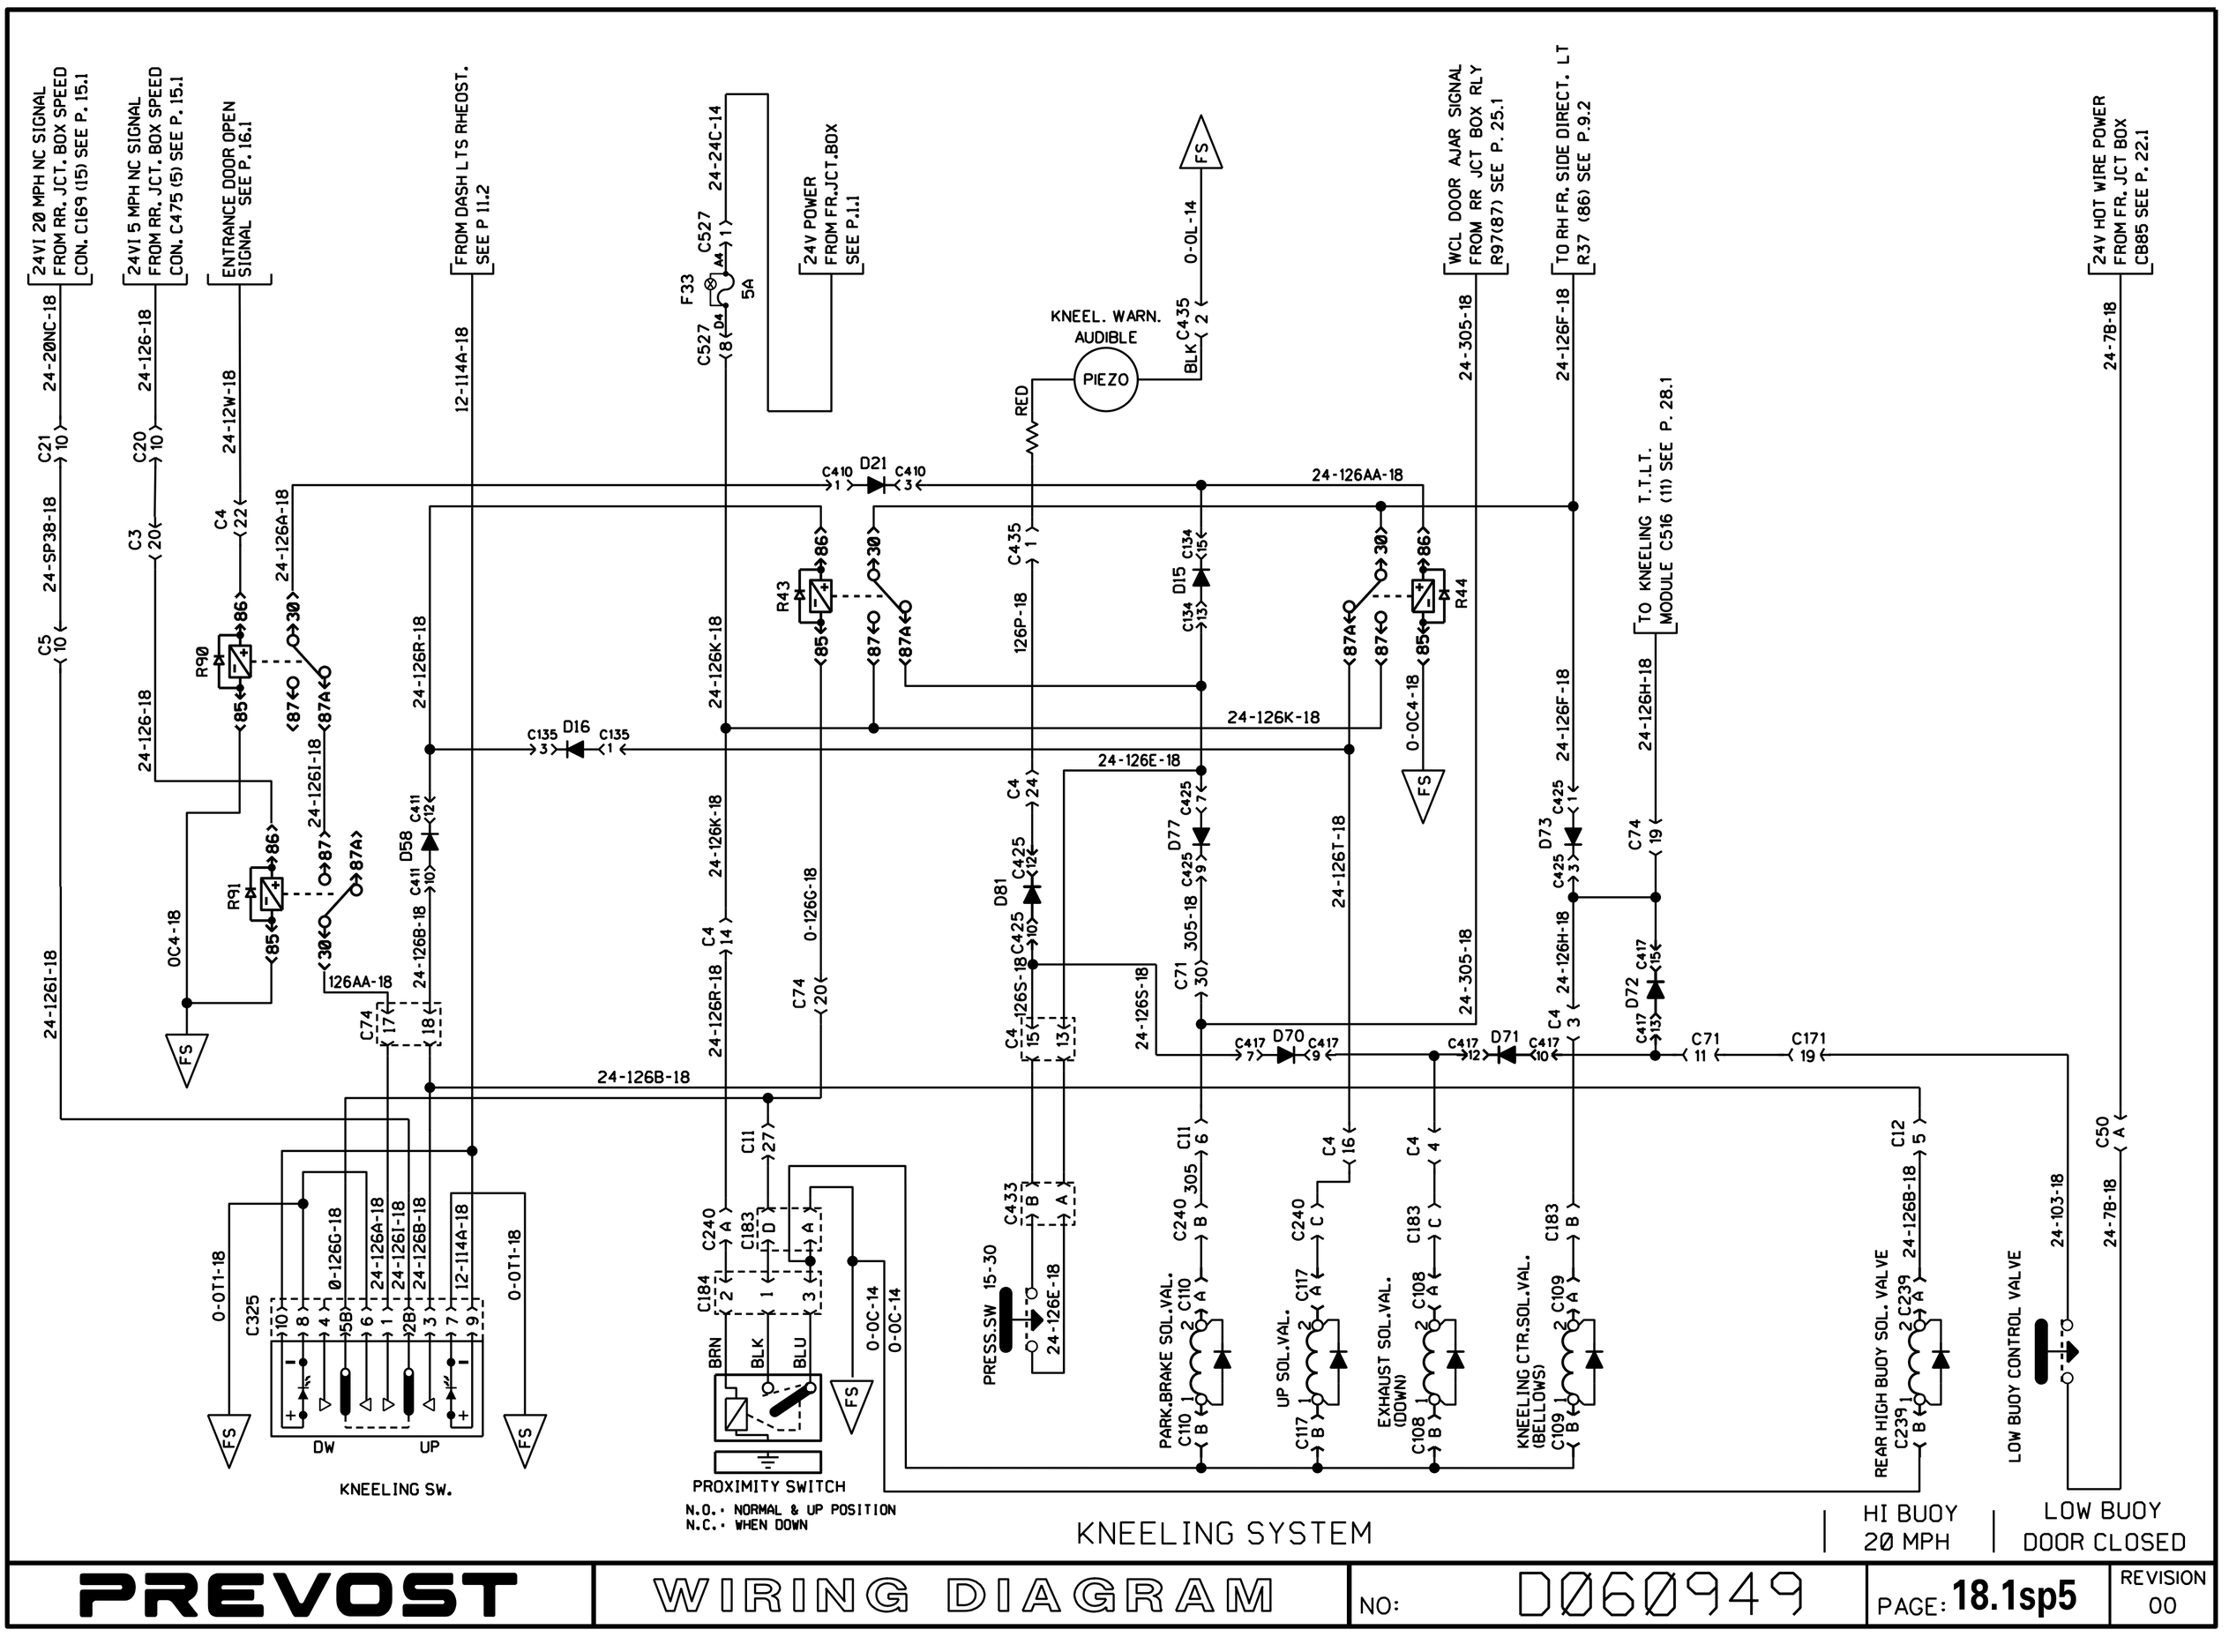

24VI 20 MPH NC SIGNAL FROM RR. JCT. BOX SPEED CON. C169 (15) SEE P. 15.1
24VI 5 MPH NC SIGNAL FROM RR. JCT. BOX SPEED CON. C475 (5) SEE P. 15.1
ENTRANCE DOOR OPEN SIGNAL SEE P. 16.1
FROM DASH LTS RHEOST. SEE P 11.2
24V POWER FROM FR.JCT.BOX SEE P.1.1
KNEEL. WARN. AUDIBLE
PIEZO
WCL DOOR AJAR SIGNAL FROM RR JCT BOX RLY R97(87) SEE P. 25.1
TO RH FR. SIDE DIRECT. LT R37 (86) SEE P.9.2
24V HOT WIRE POWER FROM FR. JCT BOX CB85 SEE P. 22.1
TO KNEELING T.T.L.T. MODULE C516 (11) SEE P. 28.1
KNEELING SW.
DW
UP
PROXIMITY SWITCH
N.O.: NORMAL & UP POSITION
N.C.: WHEN DOWN
PRESS.SW 15-30
PARK.BRAKE SOL.VAL.
UP SOL.VAL.
EXHAUST SOL.VAL. (DOWN)
KNEELING CTR.SOL.VAL. (BELLOWS)
REAR HIGH BUOY SOL. VALVE
LOW BUOY CONTROL VALVE
KNEELING SYSTEM
HI BUOY 20 MPH
LOW BUOY DOOR CLOSED

PREVOST | WIRING DIAGRAM | NO: D060949 | PAGE: 19.1 | REVISION 00


LUGGAGE DOOR LOCK

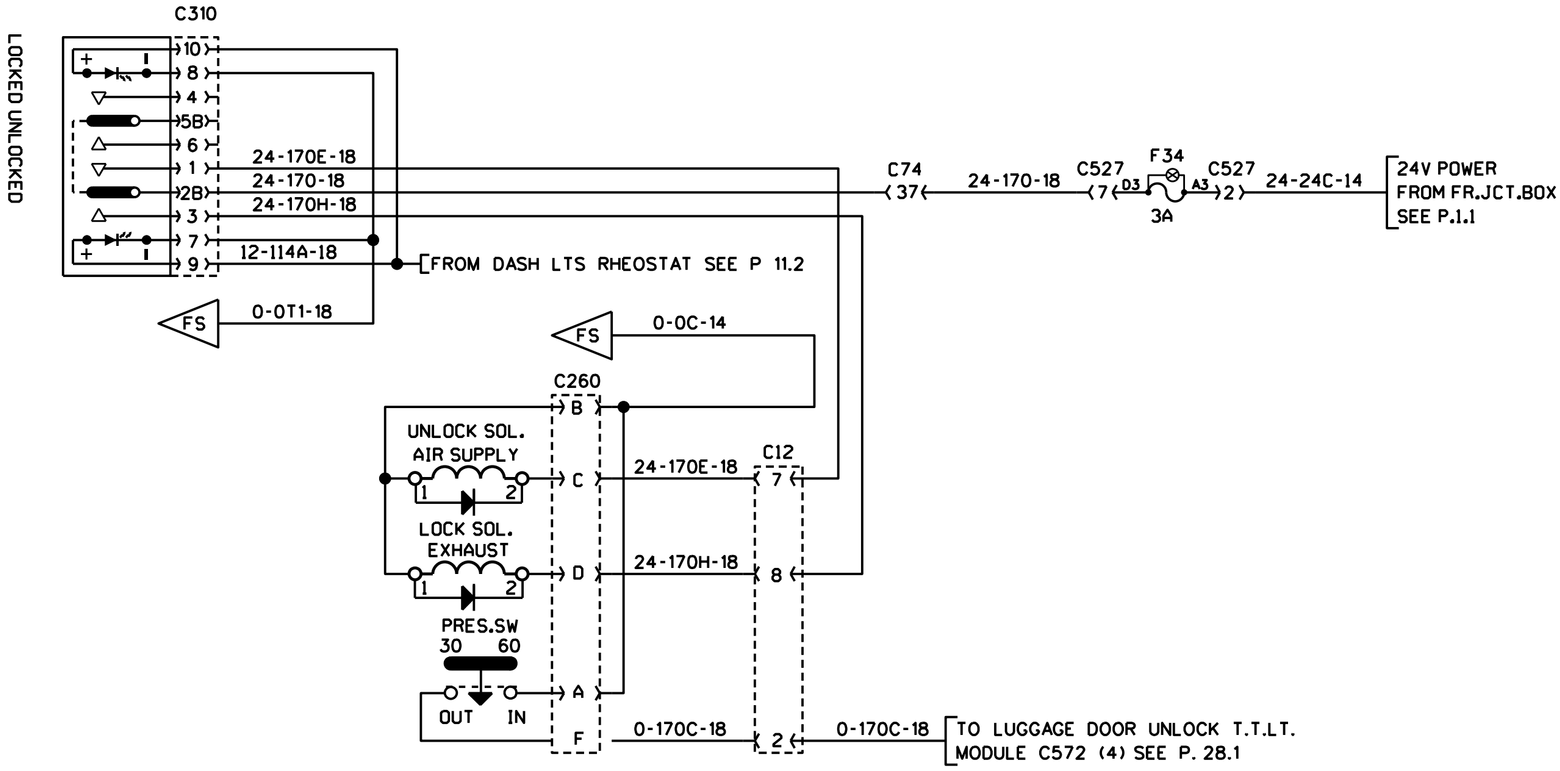


ENGINE BRAKE SYSTEM

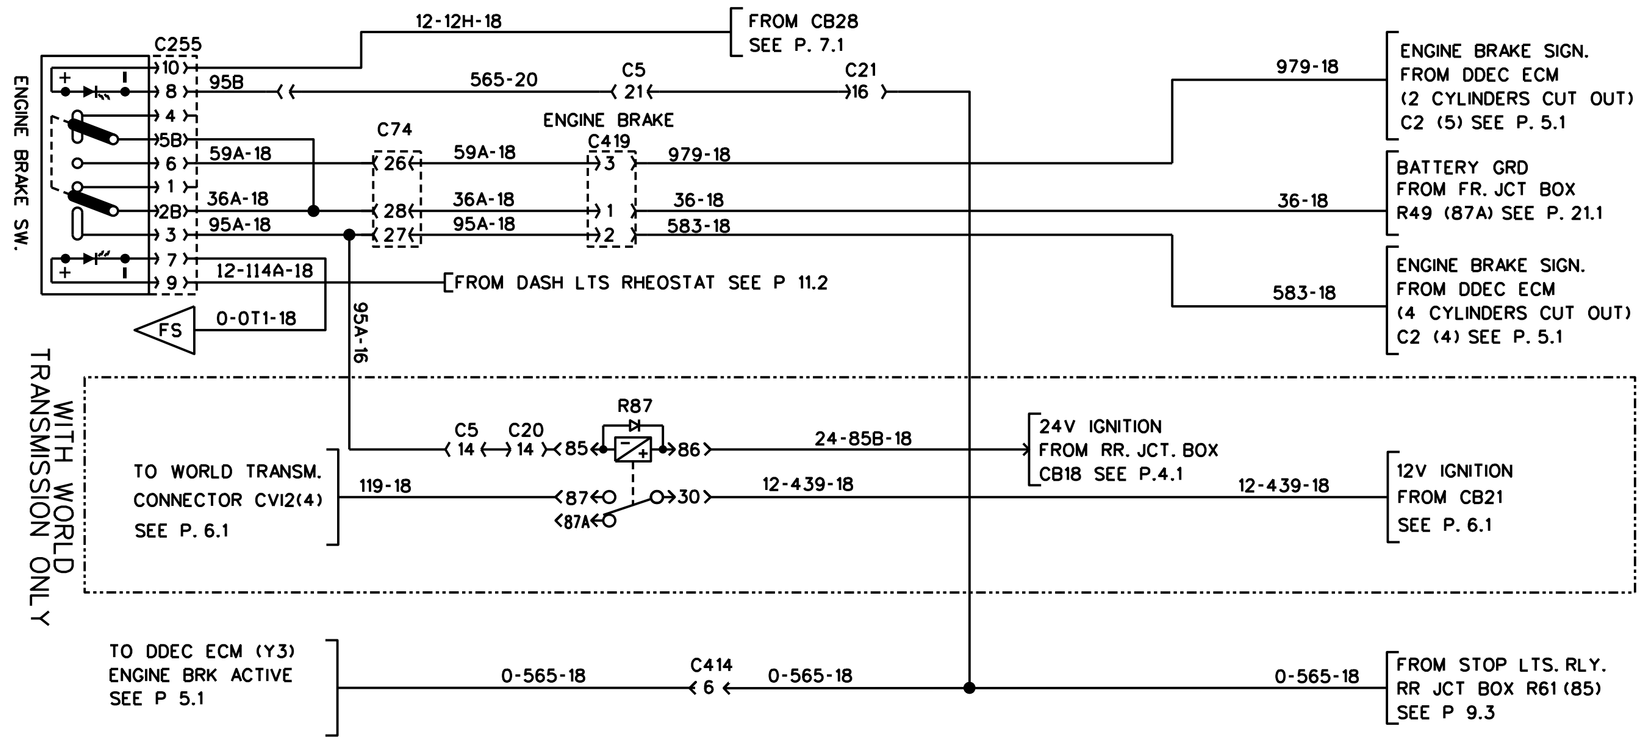


RETARDER SYSTEM
(WORLD TRANSMISSION)

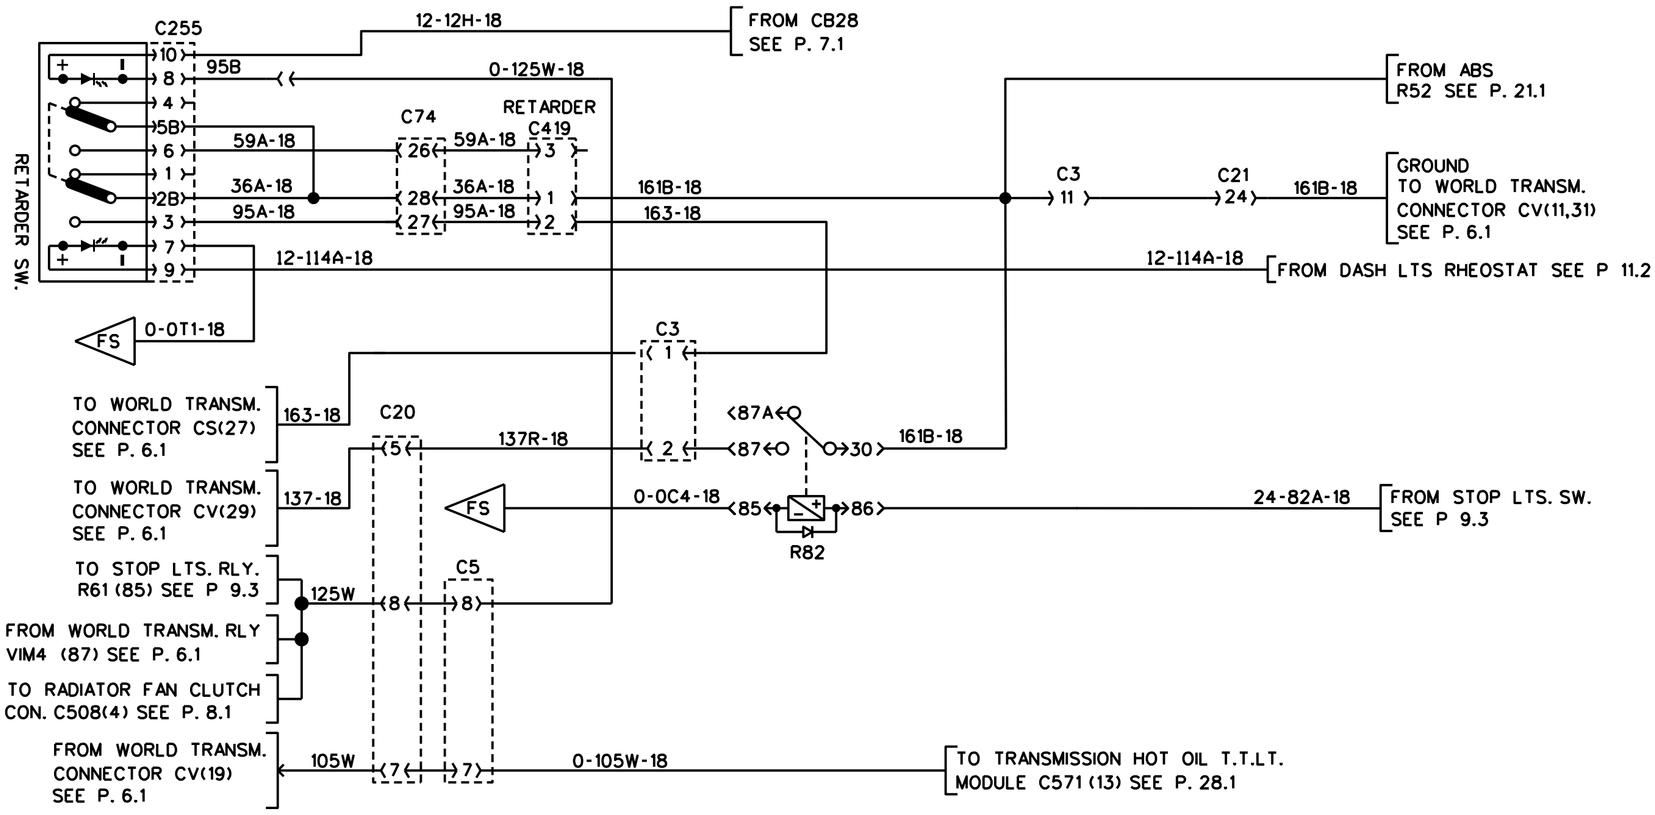

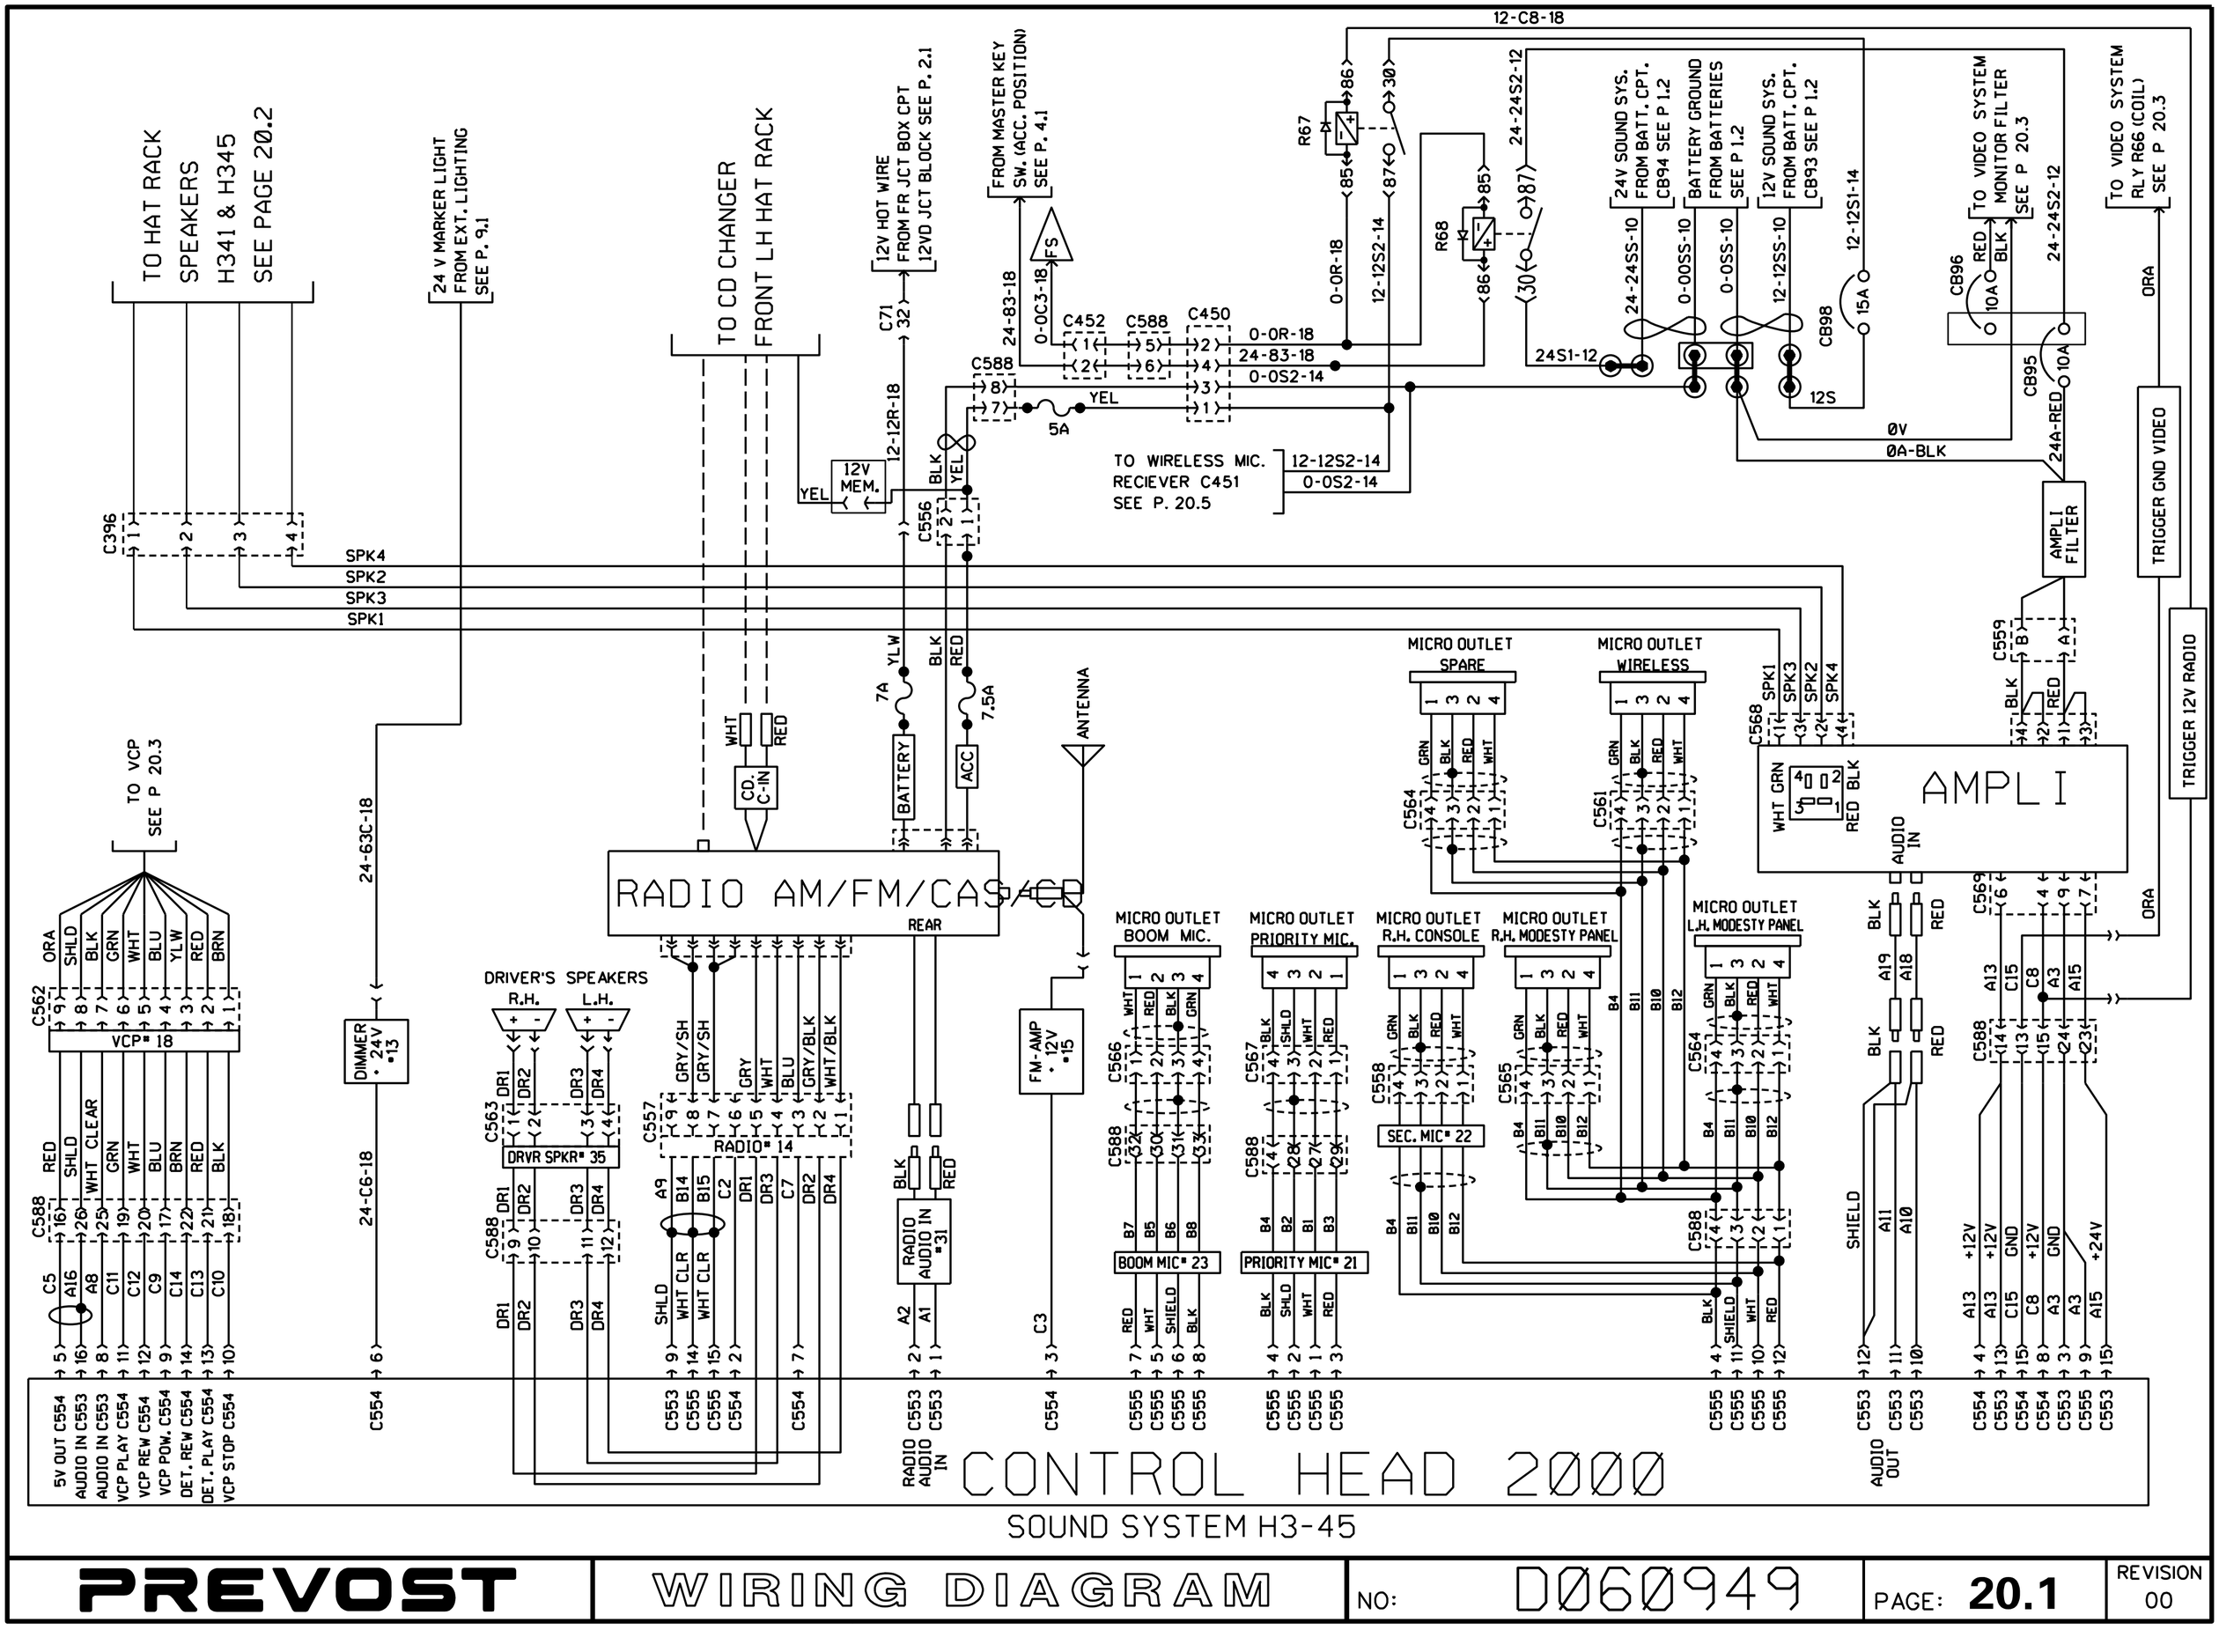


SOUND SYSTEM H3-45

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 20.1	REVISION 00

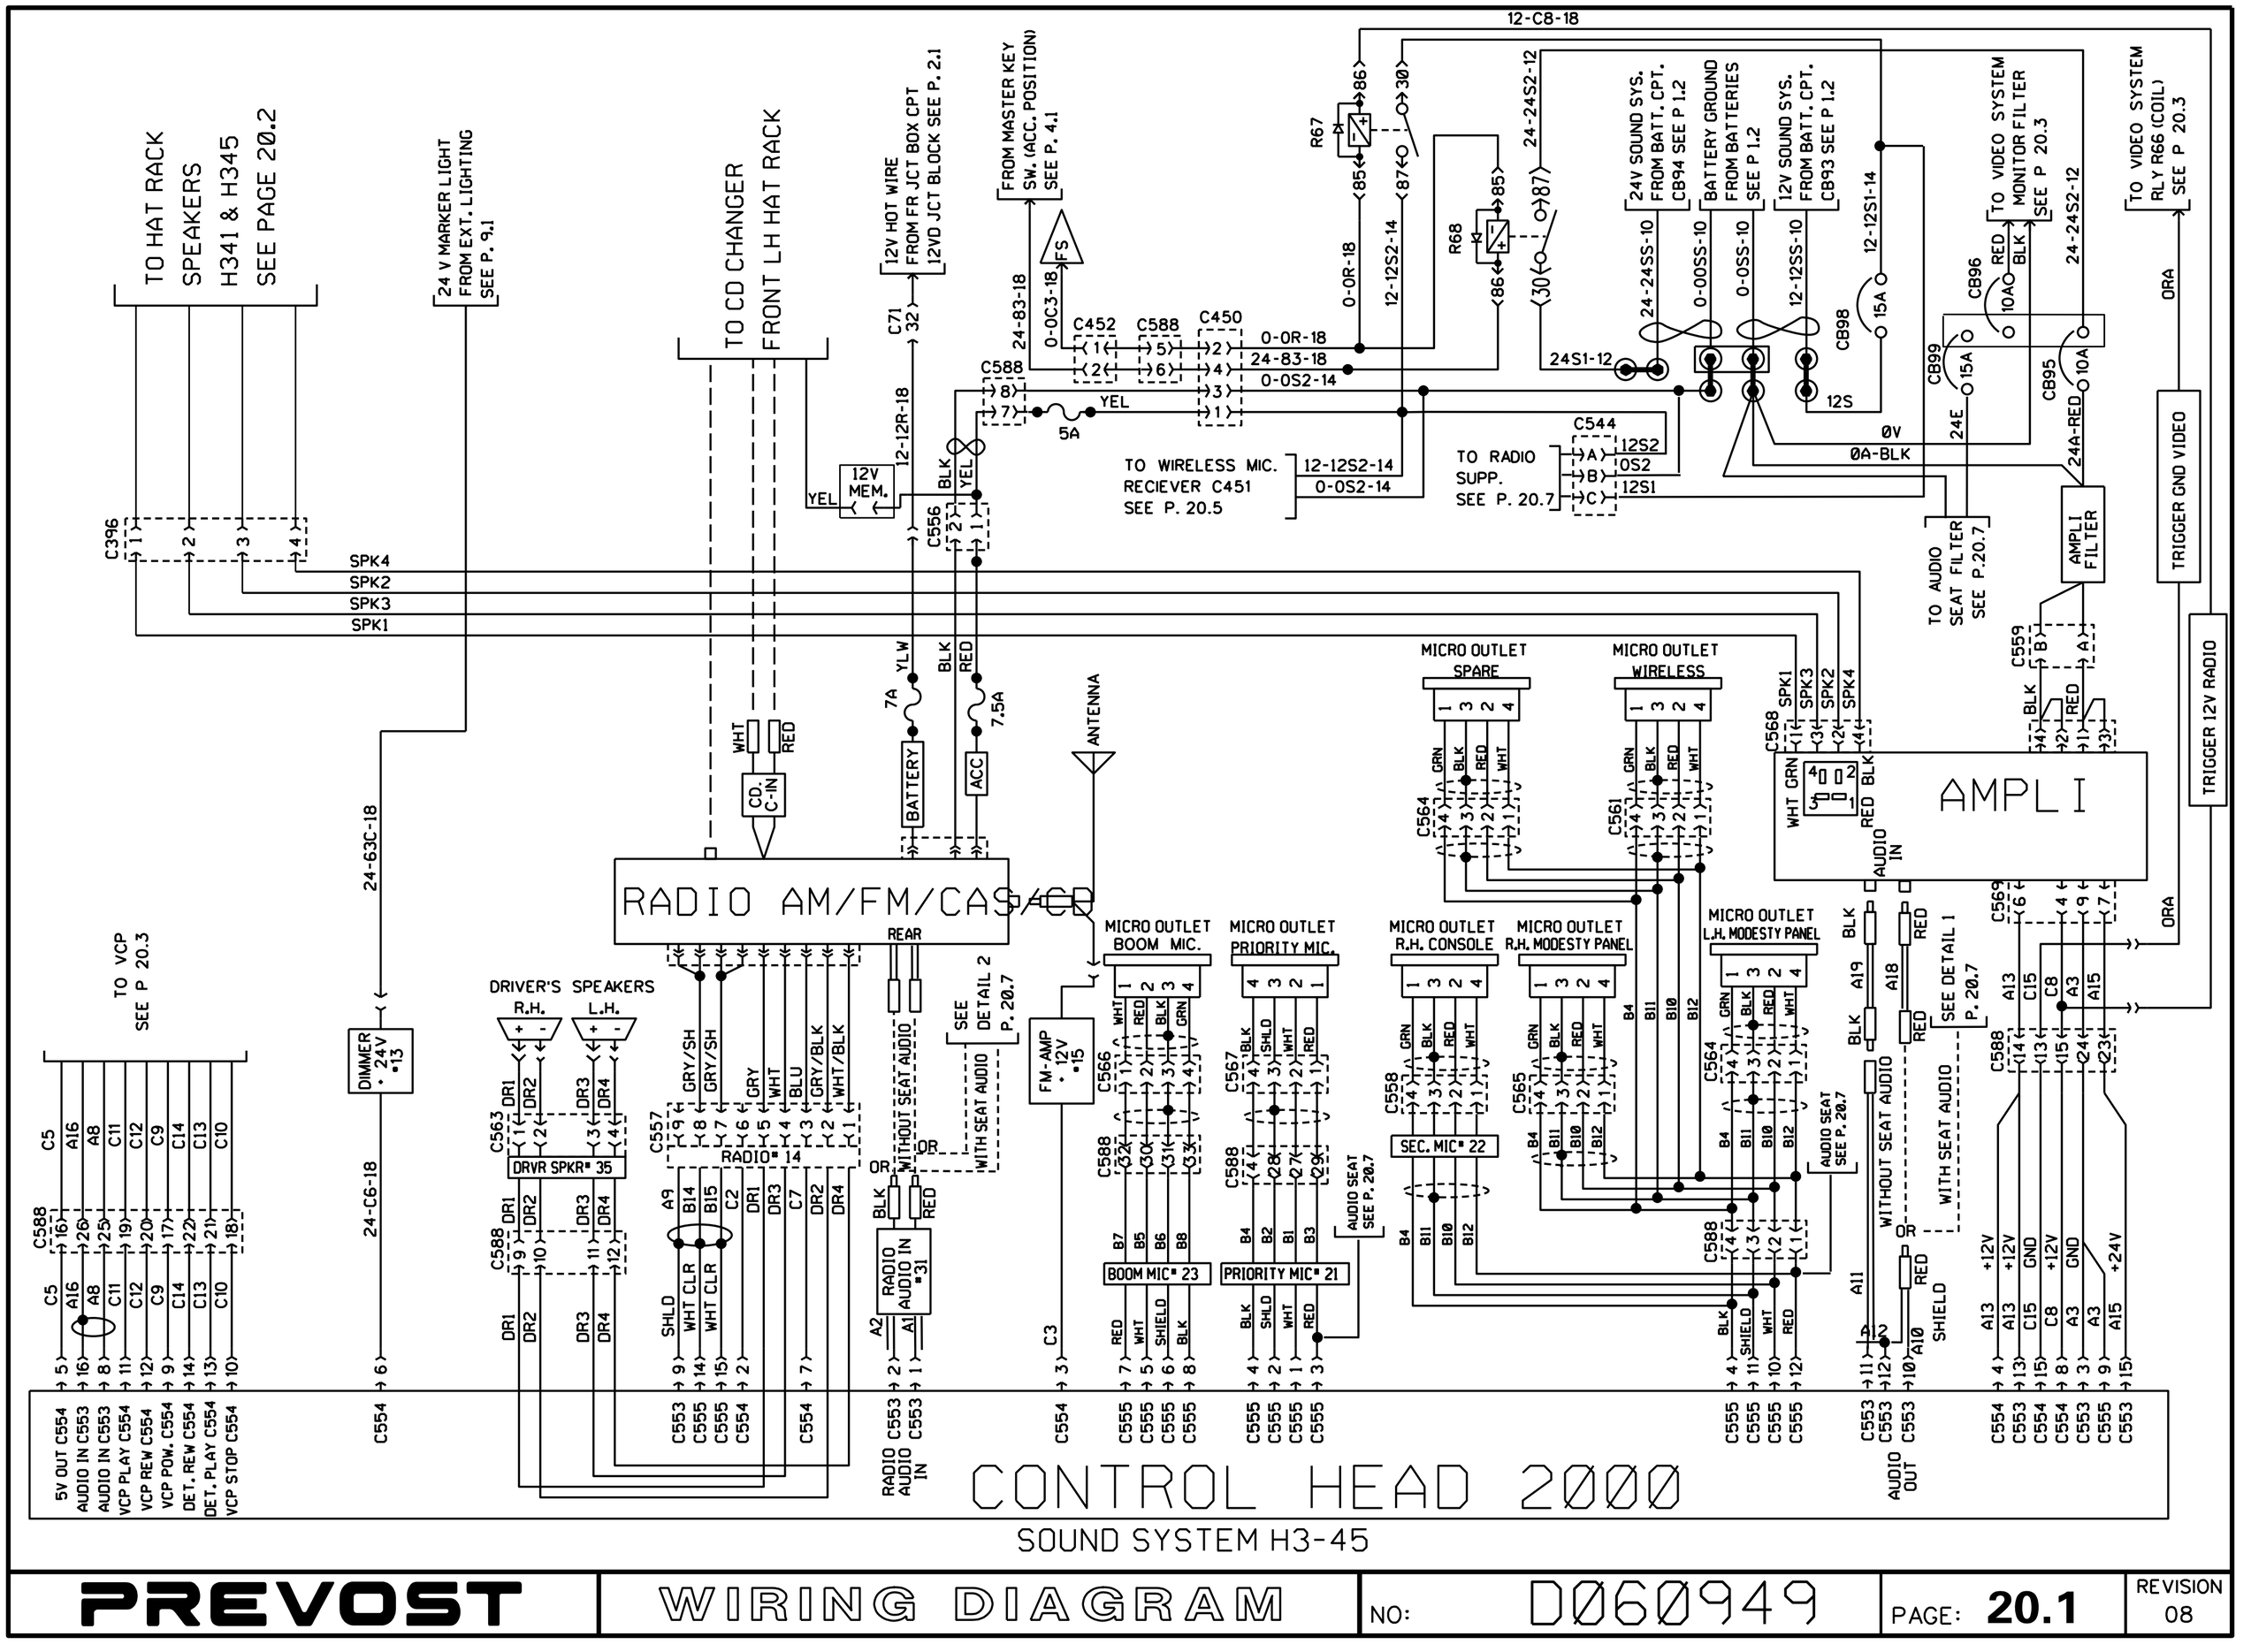


SOUND SYSTEM H3-45

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 20.1	REVISION 08

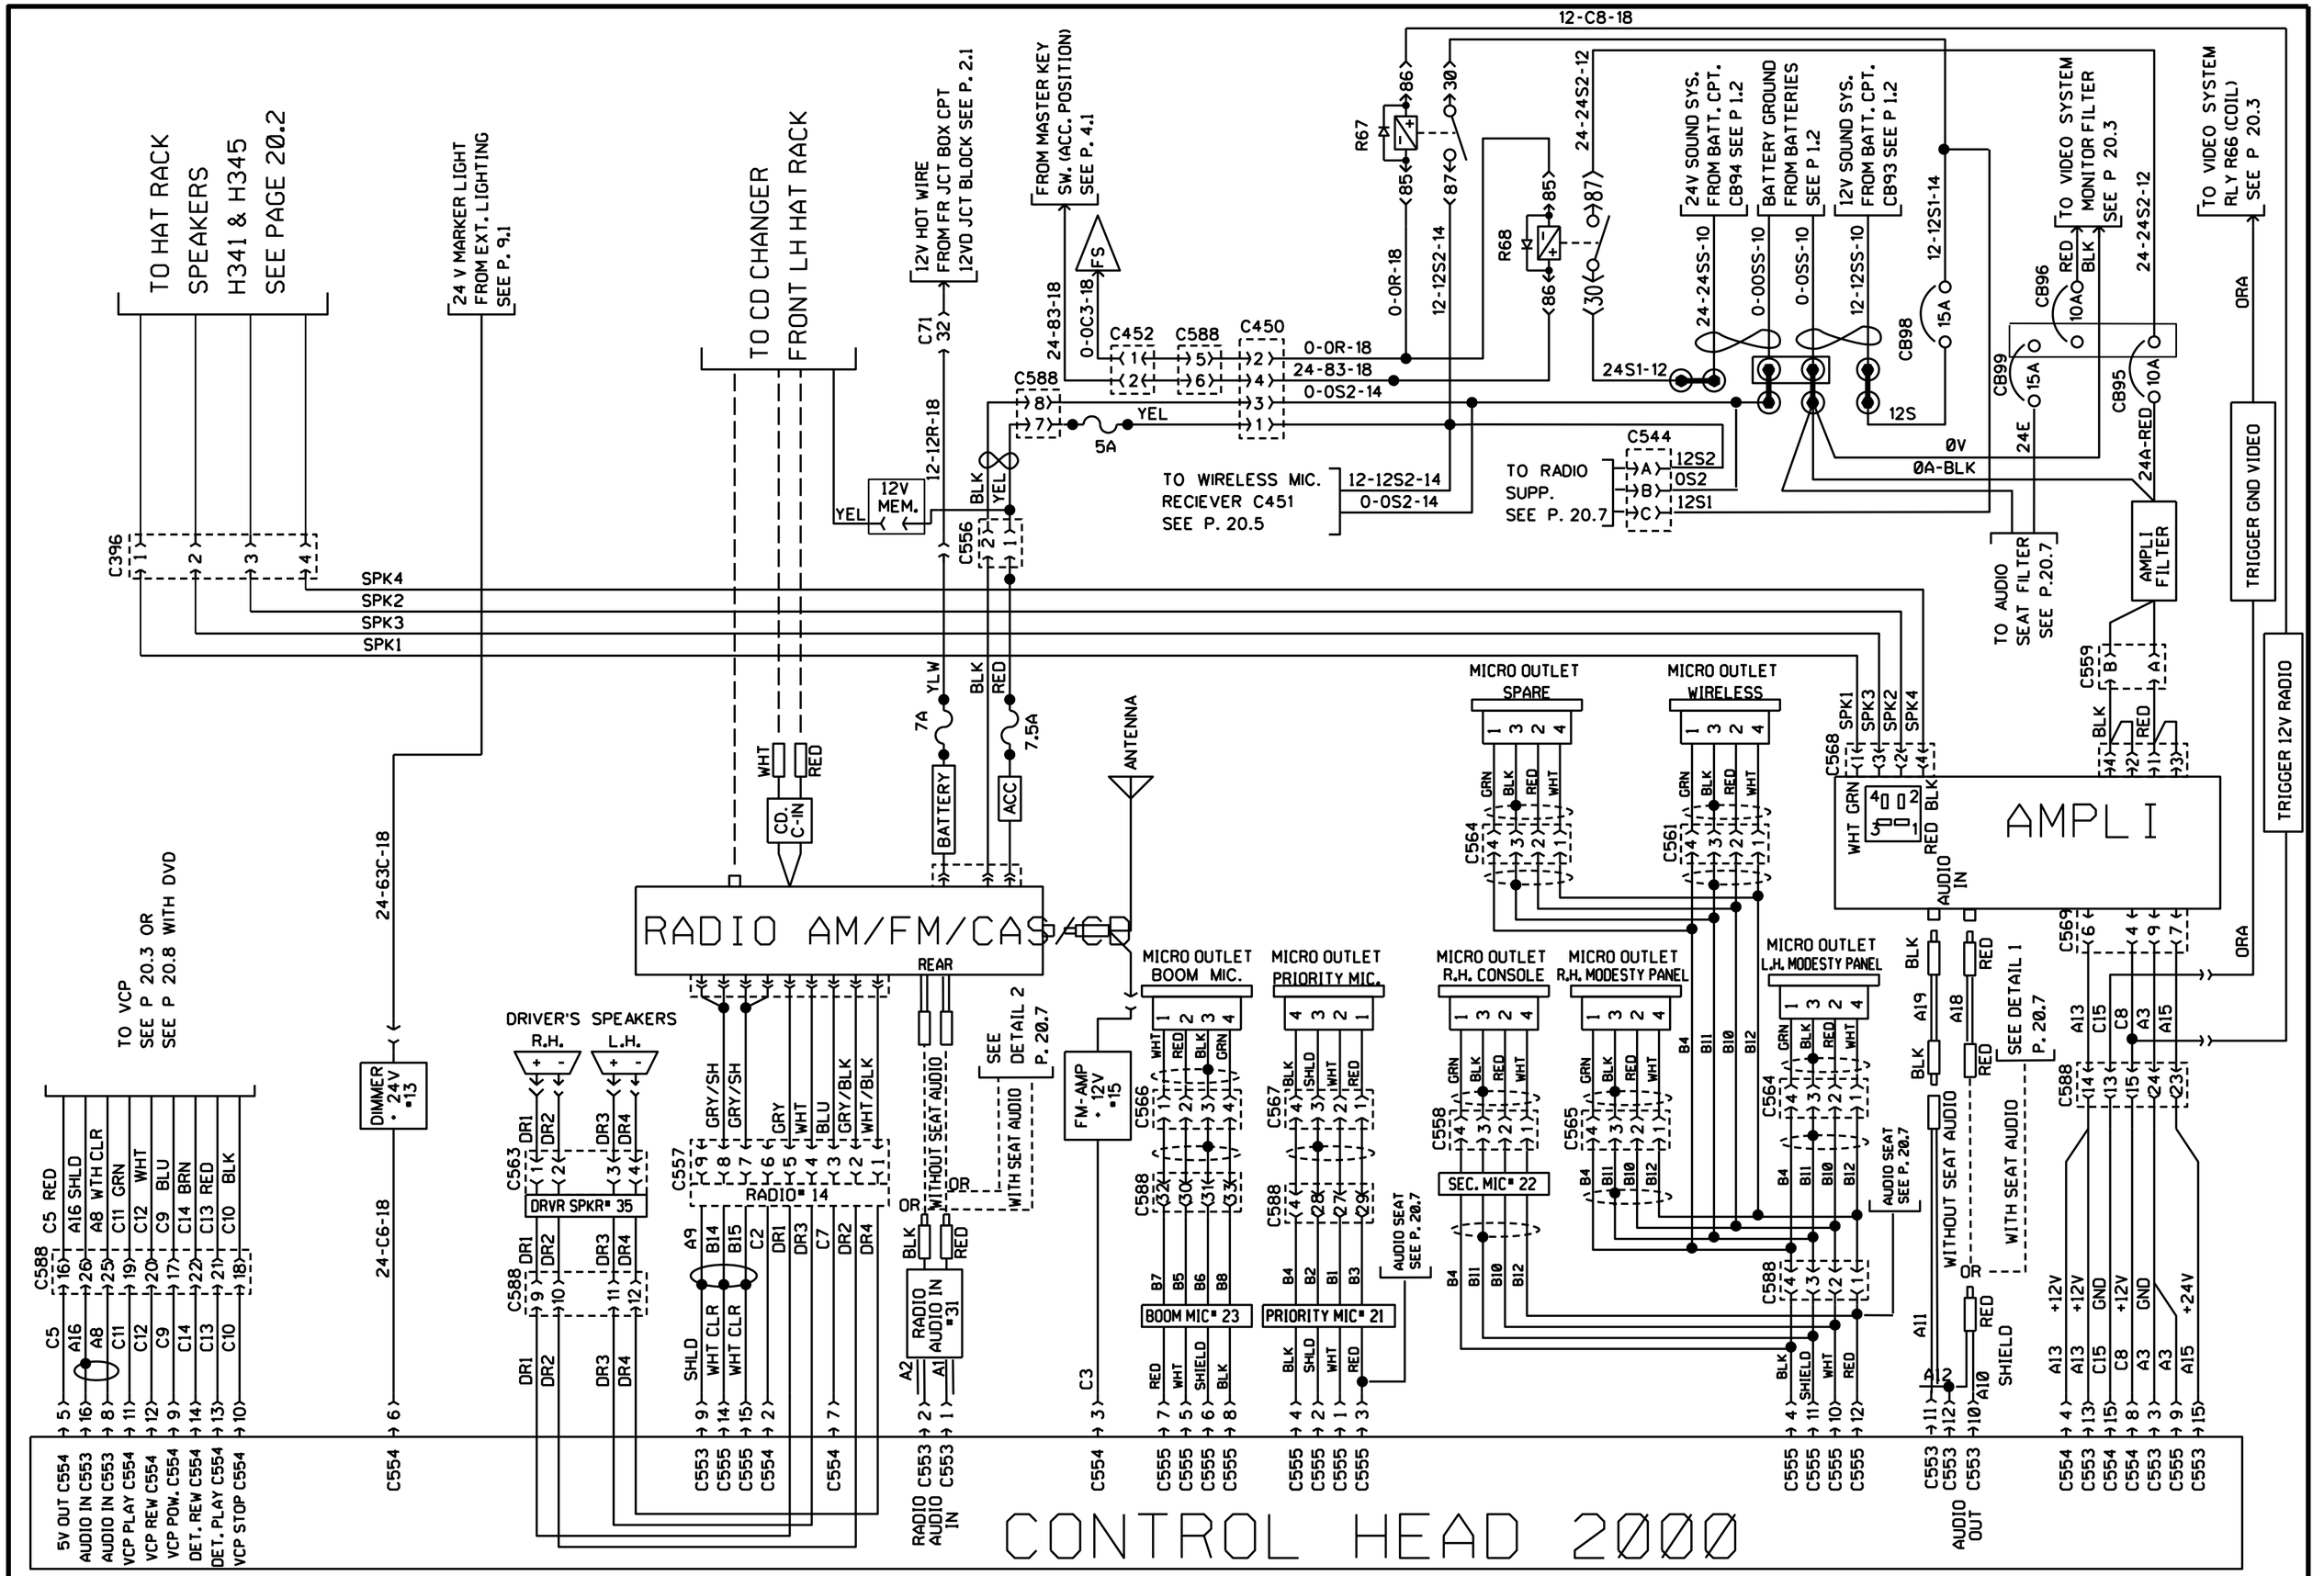


SOUND SYSTEM H3-45

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 20.1	REVISION 09

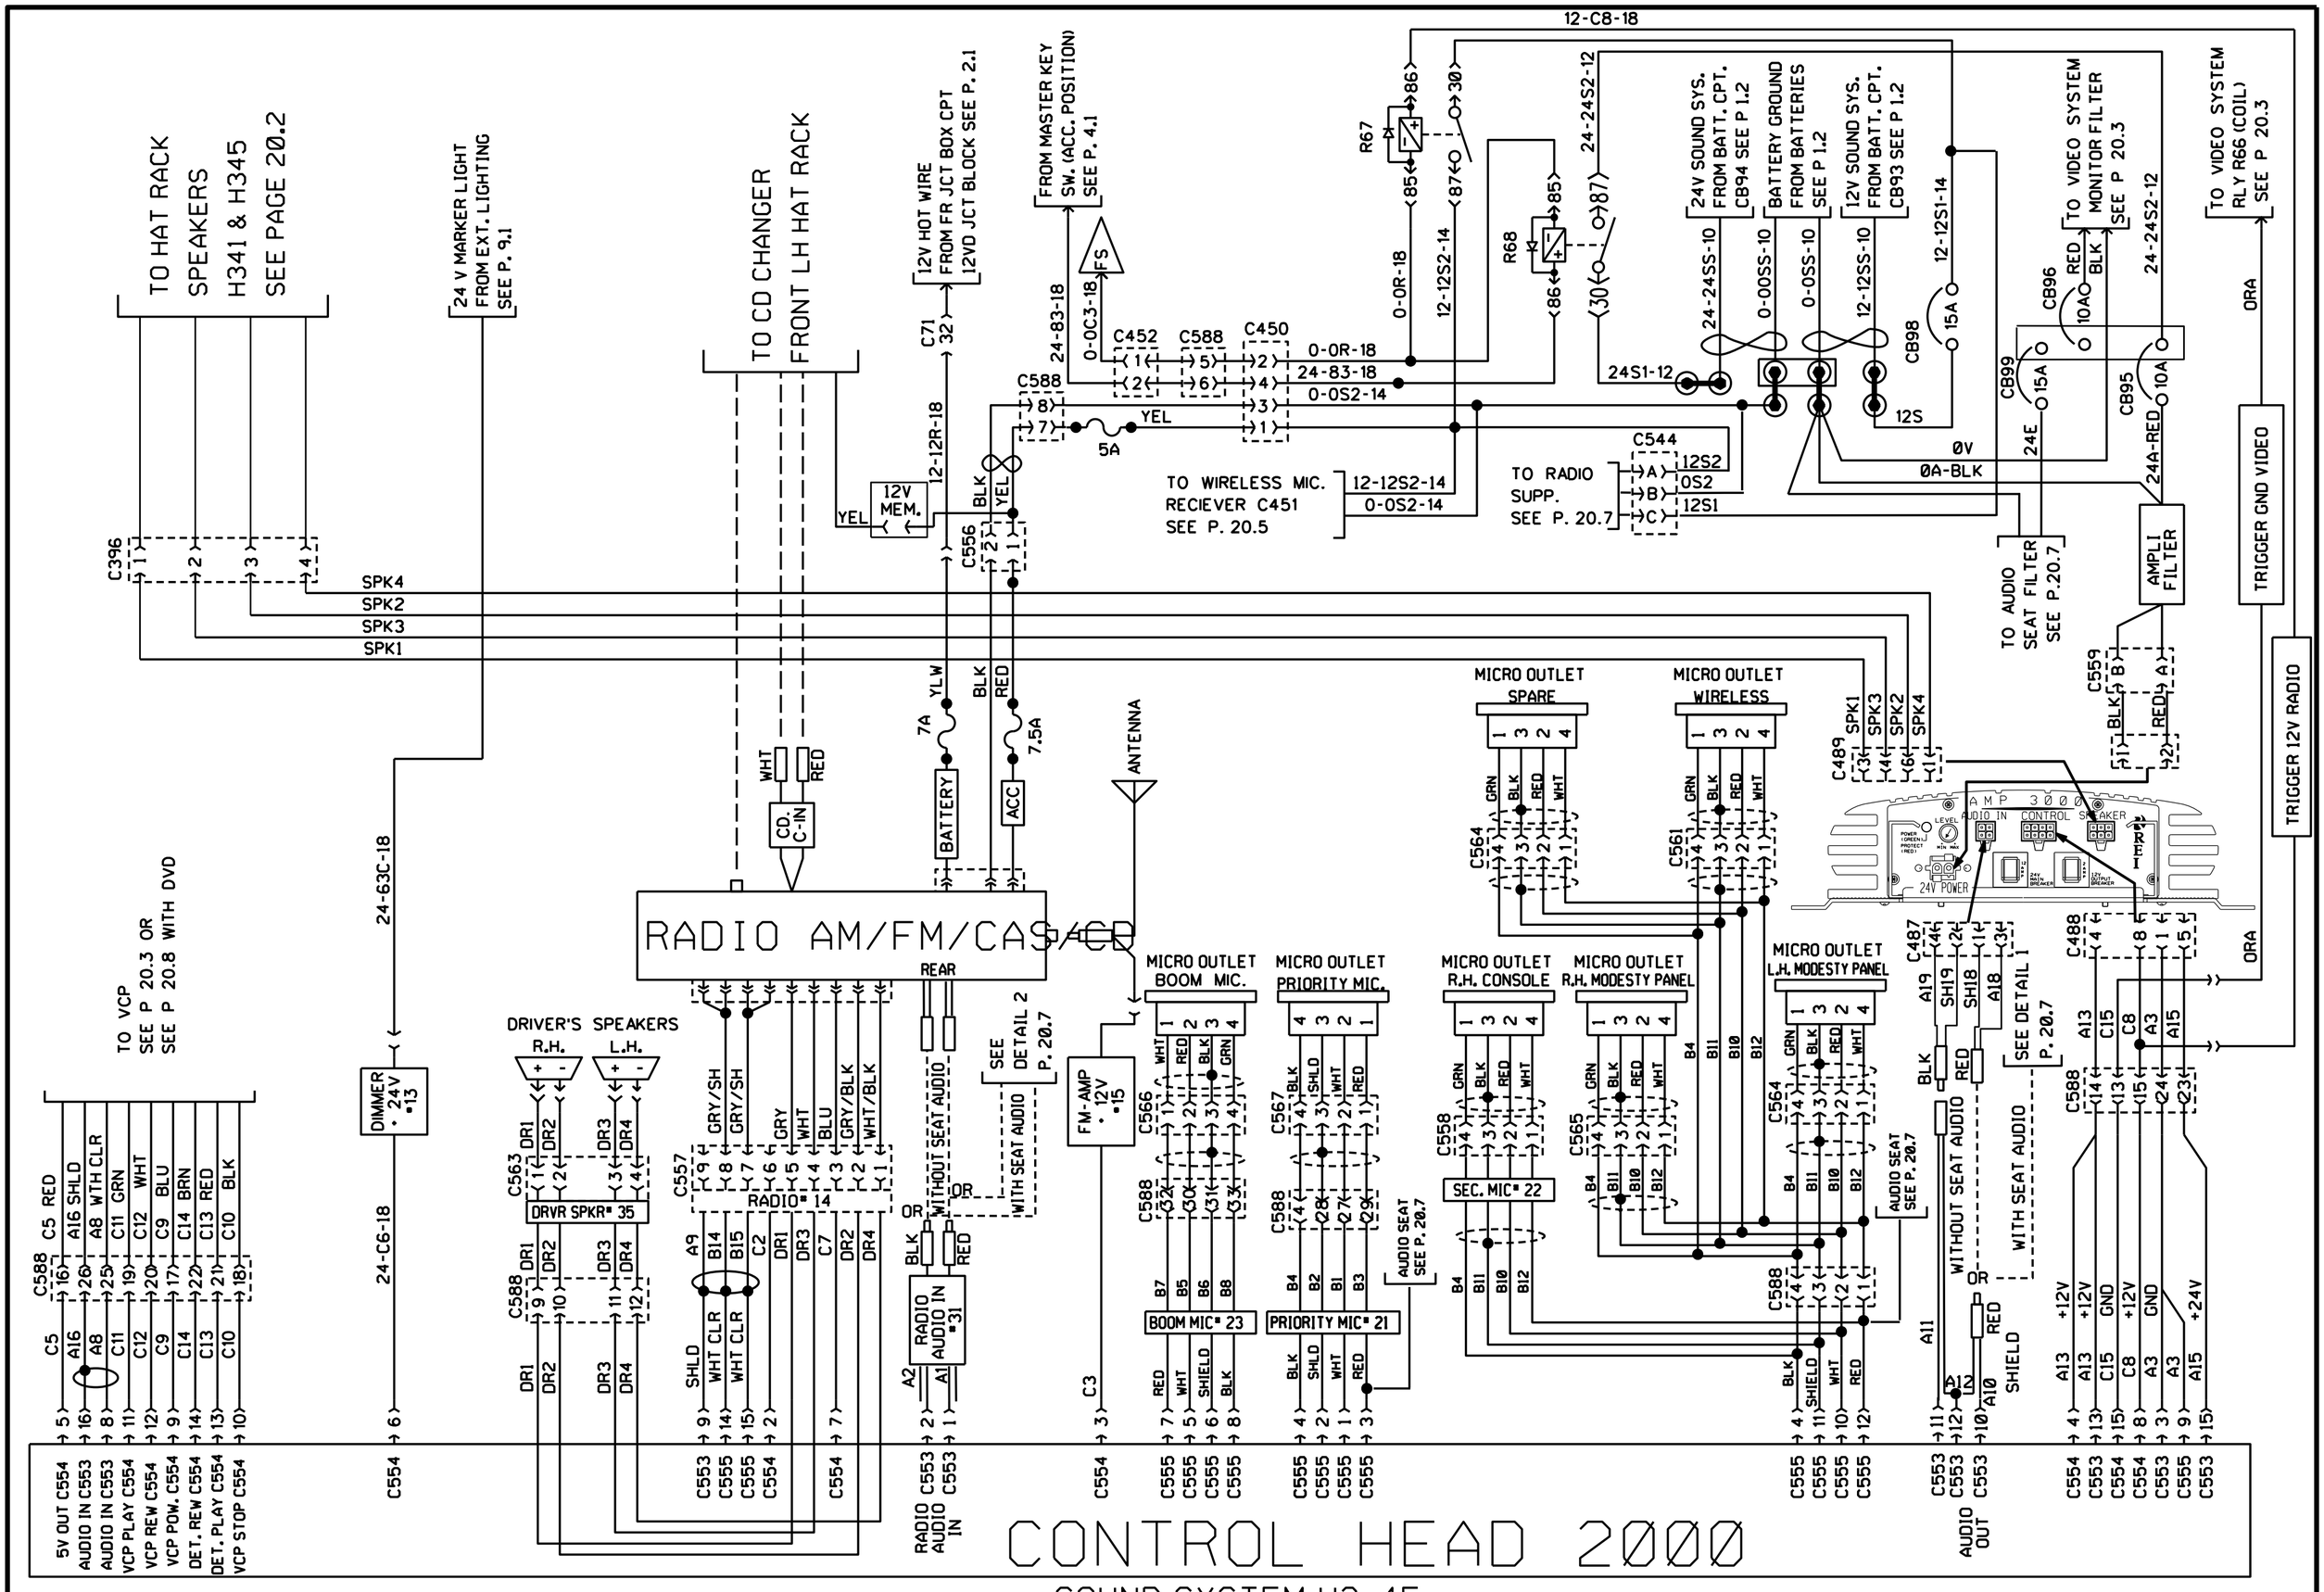


SOUND SYSTEM H3-45


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 20.1	REVISION 18

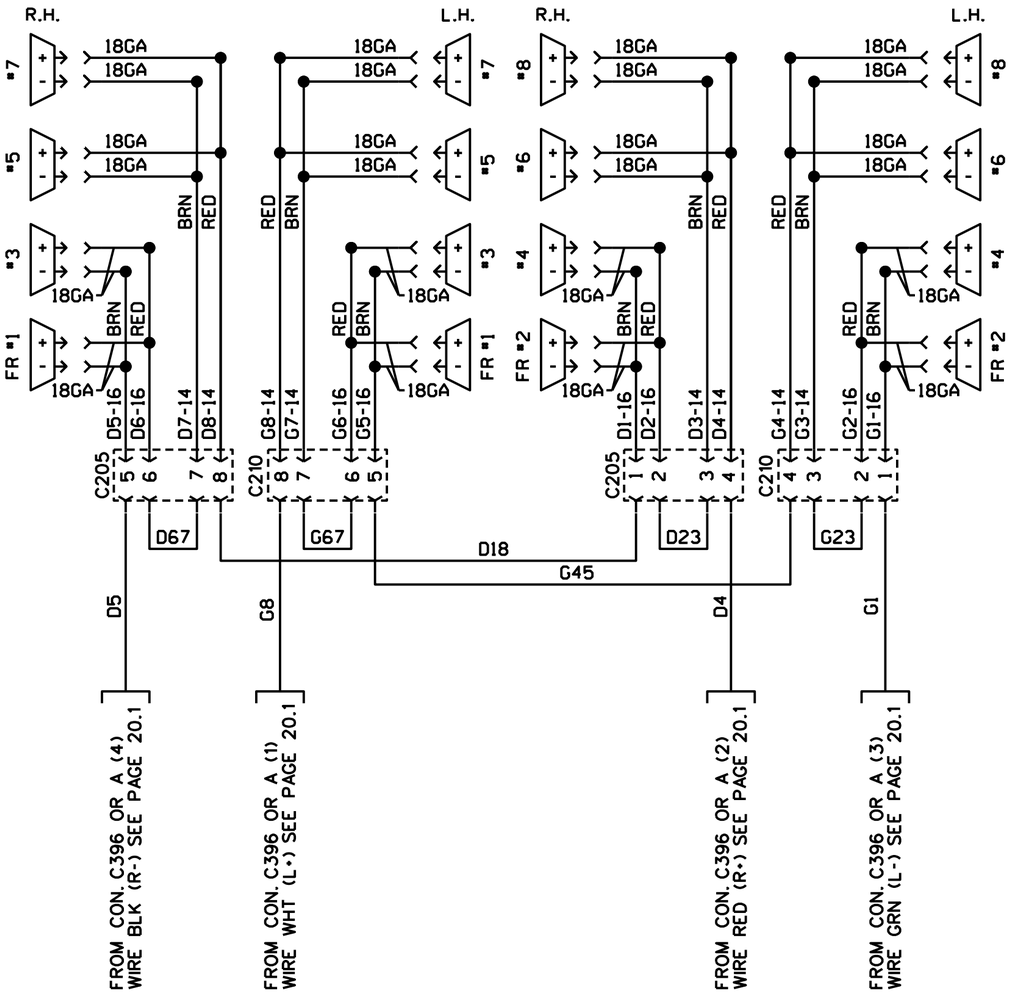


HAT RACK SPEAKERS H3-45

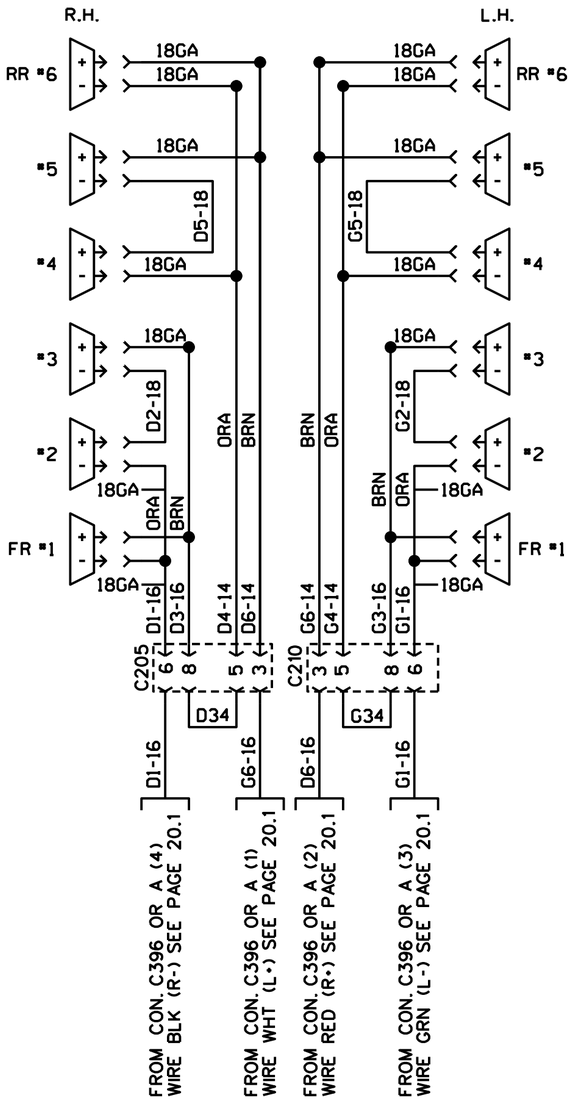


HAT RACK SPEAKERS H3-41

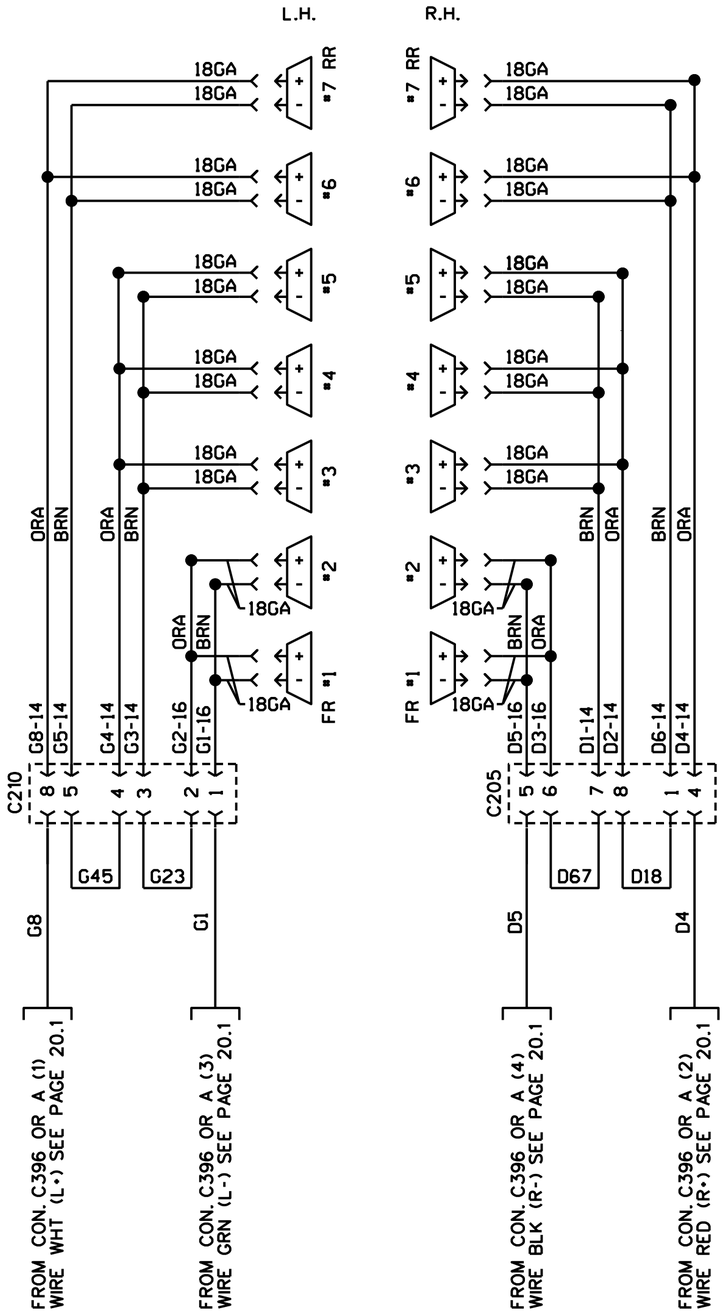


HAT RACK SPEAKERS H3-45

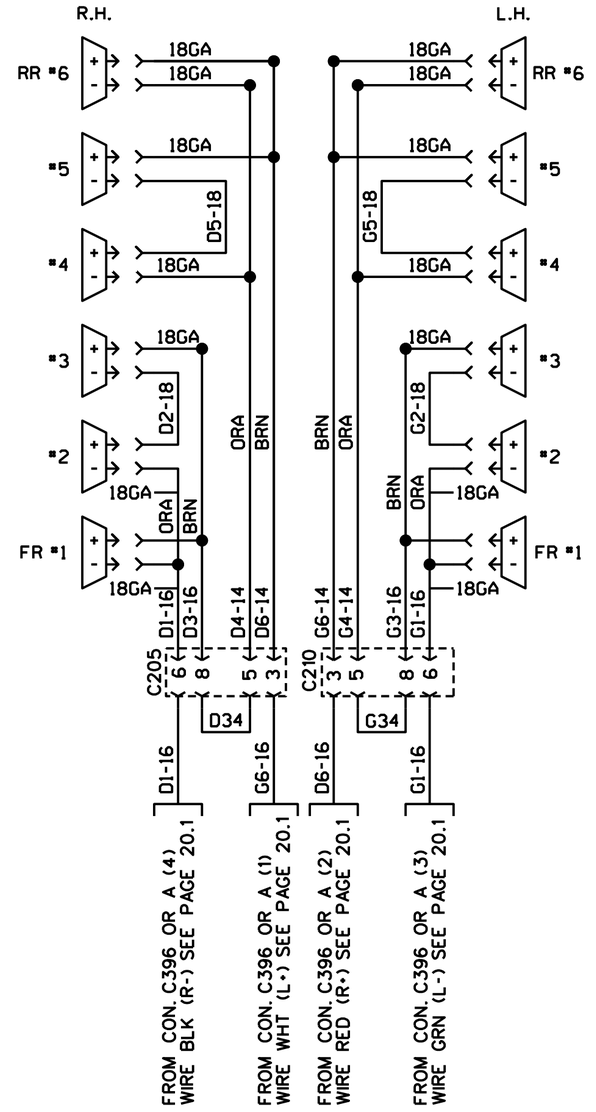


HAT RACK SPEAKERS H3-41

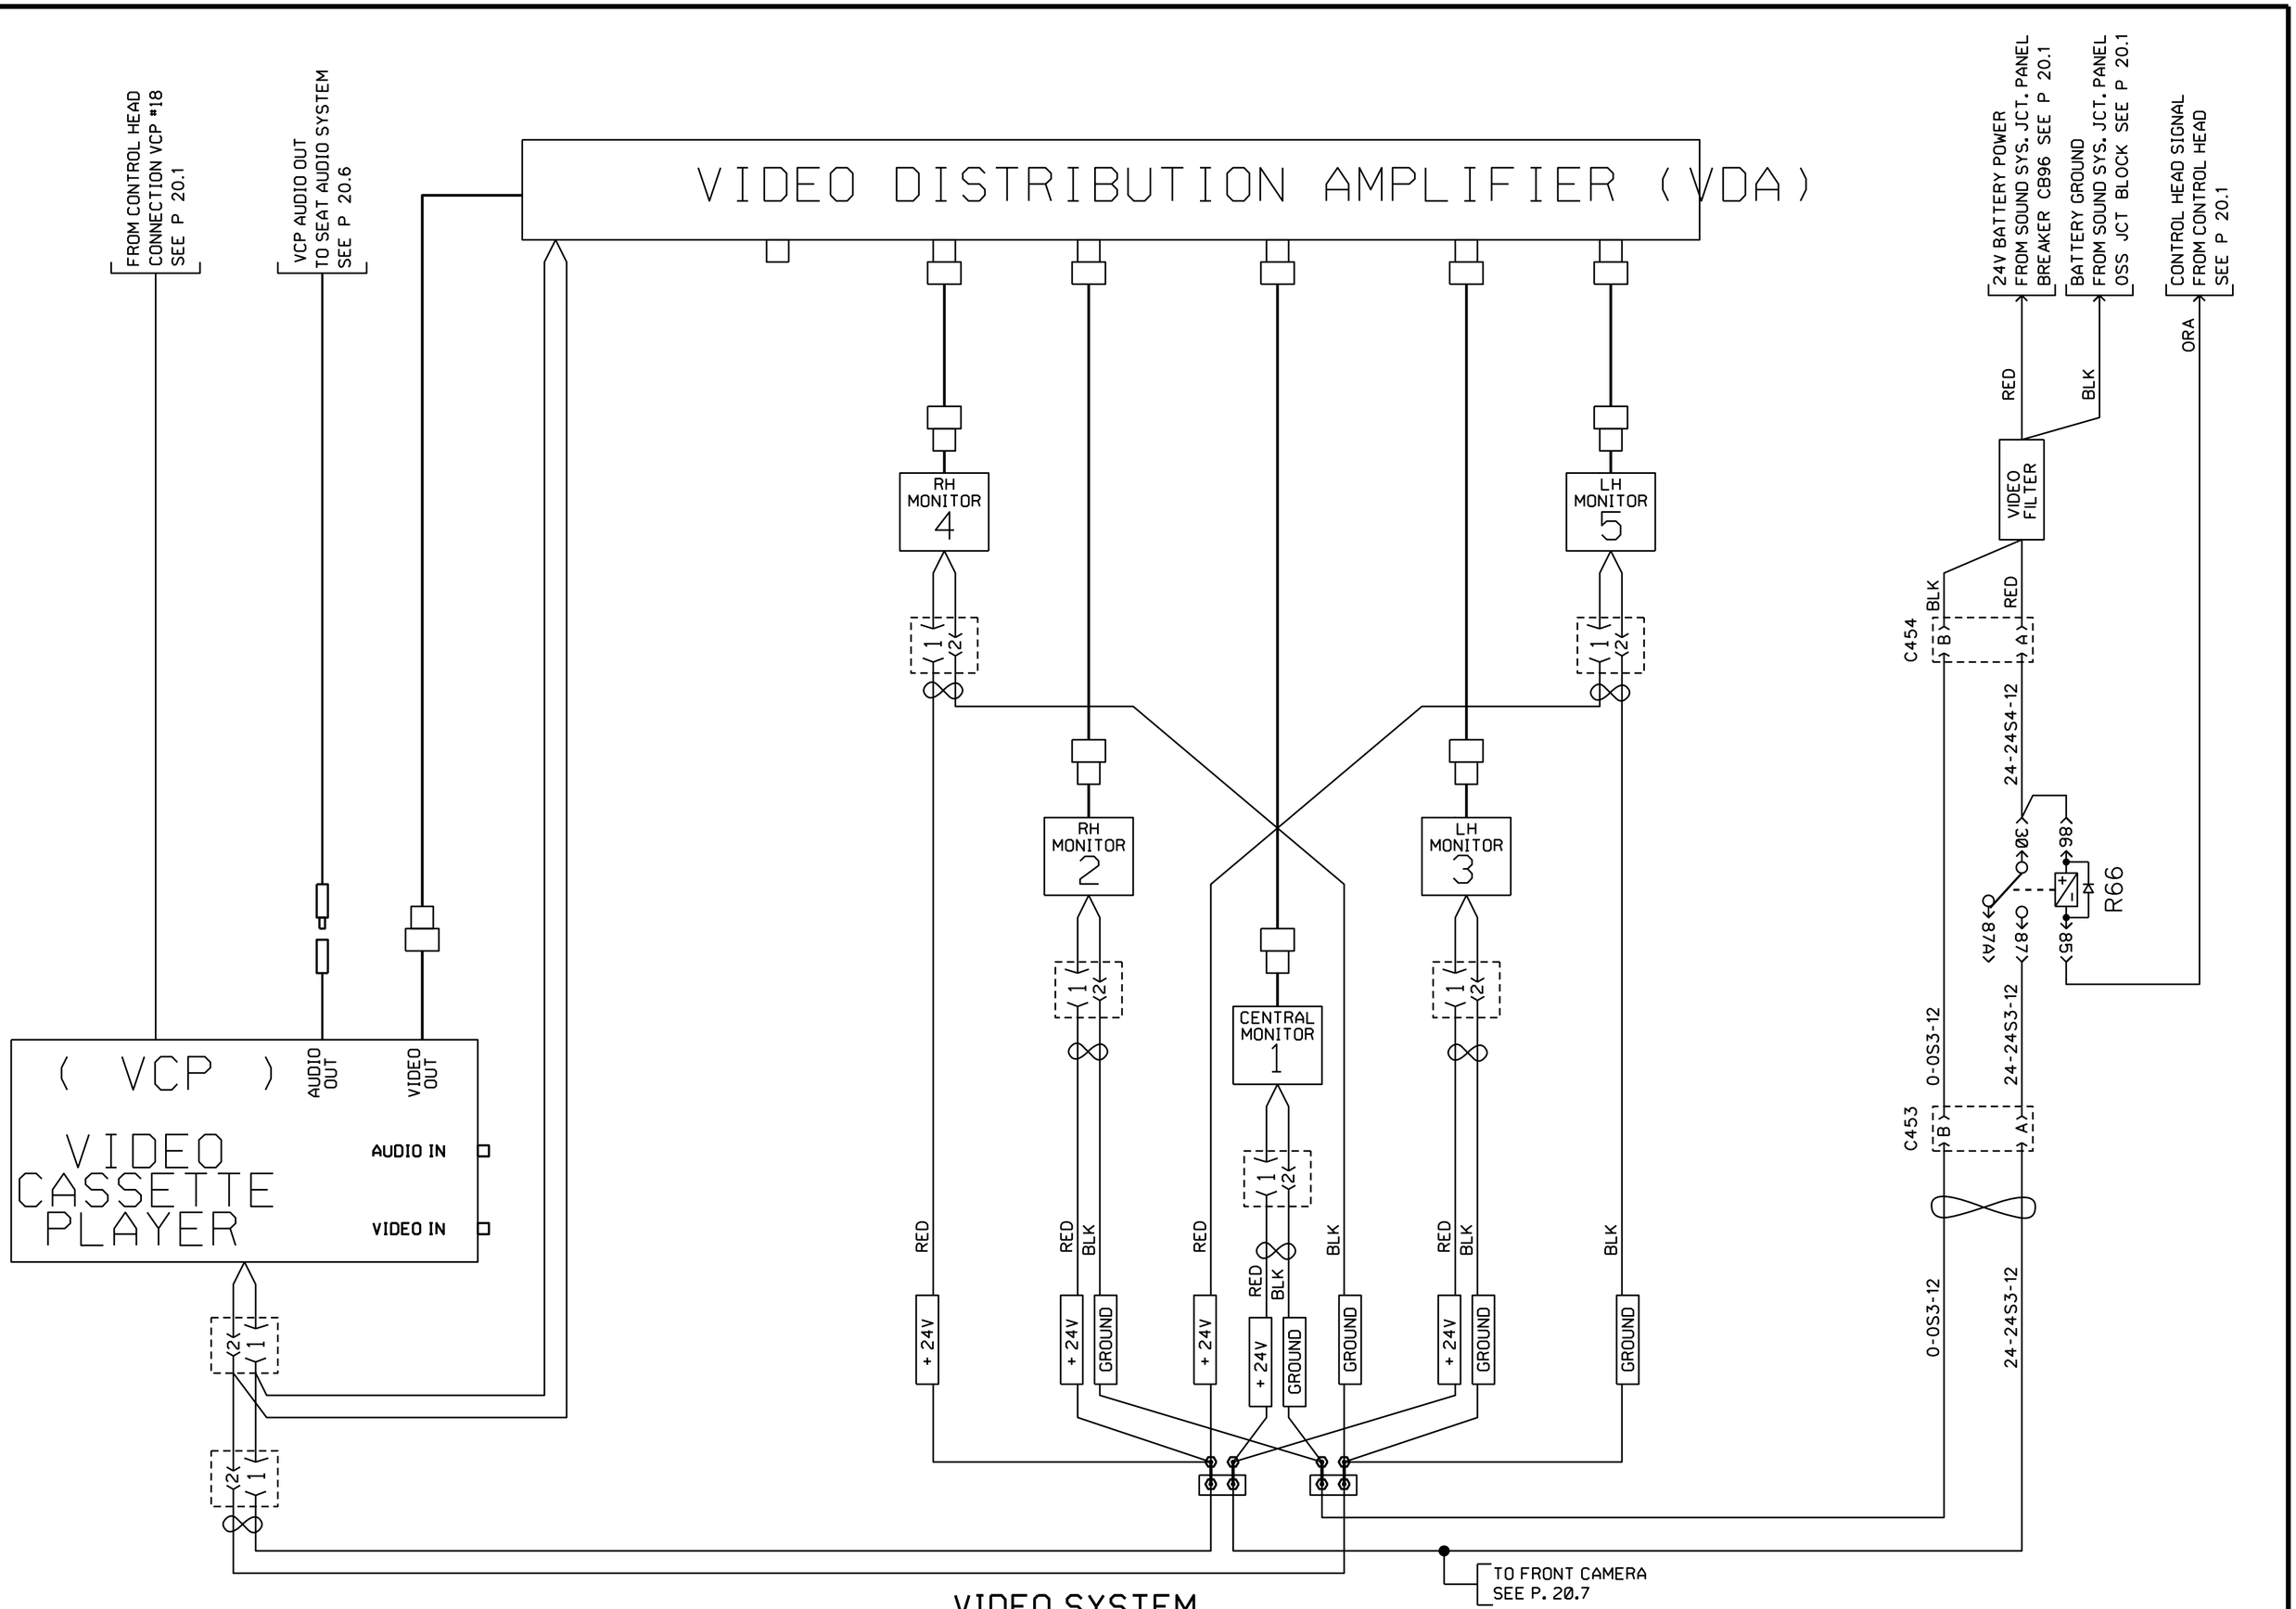


VIDEO SYSTEM

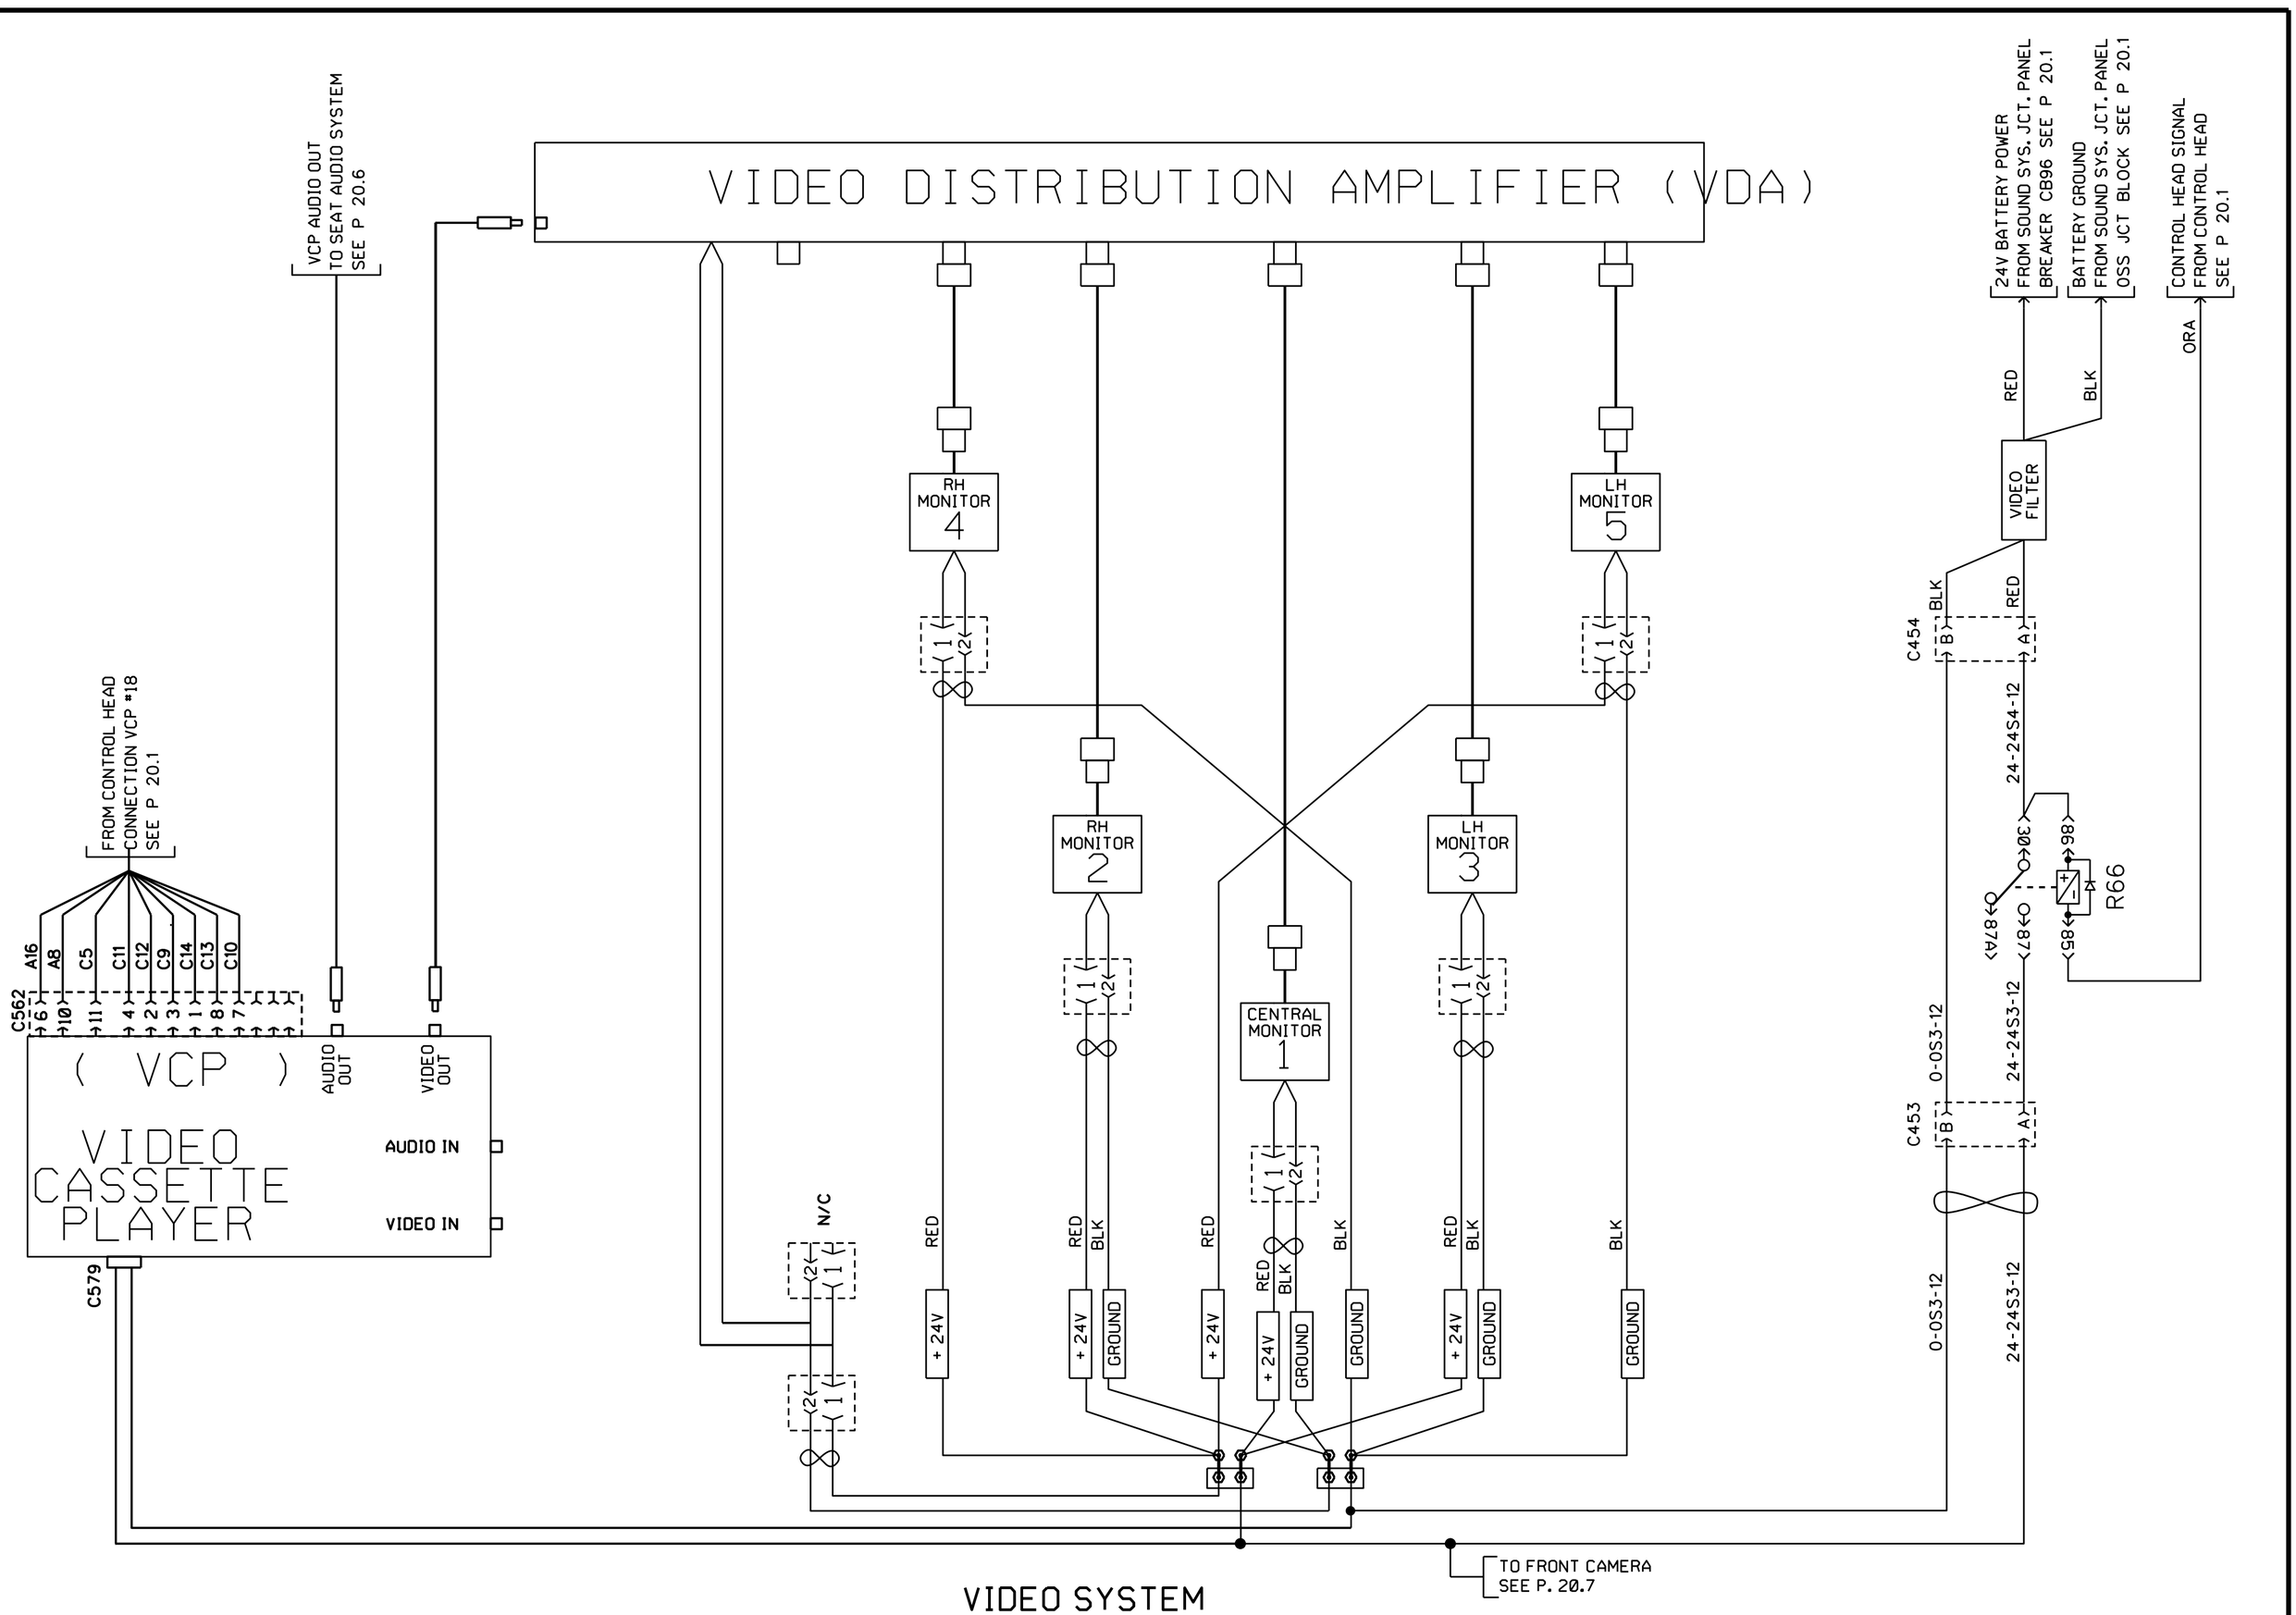


VIDEO SYSTEM

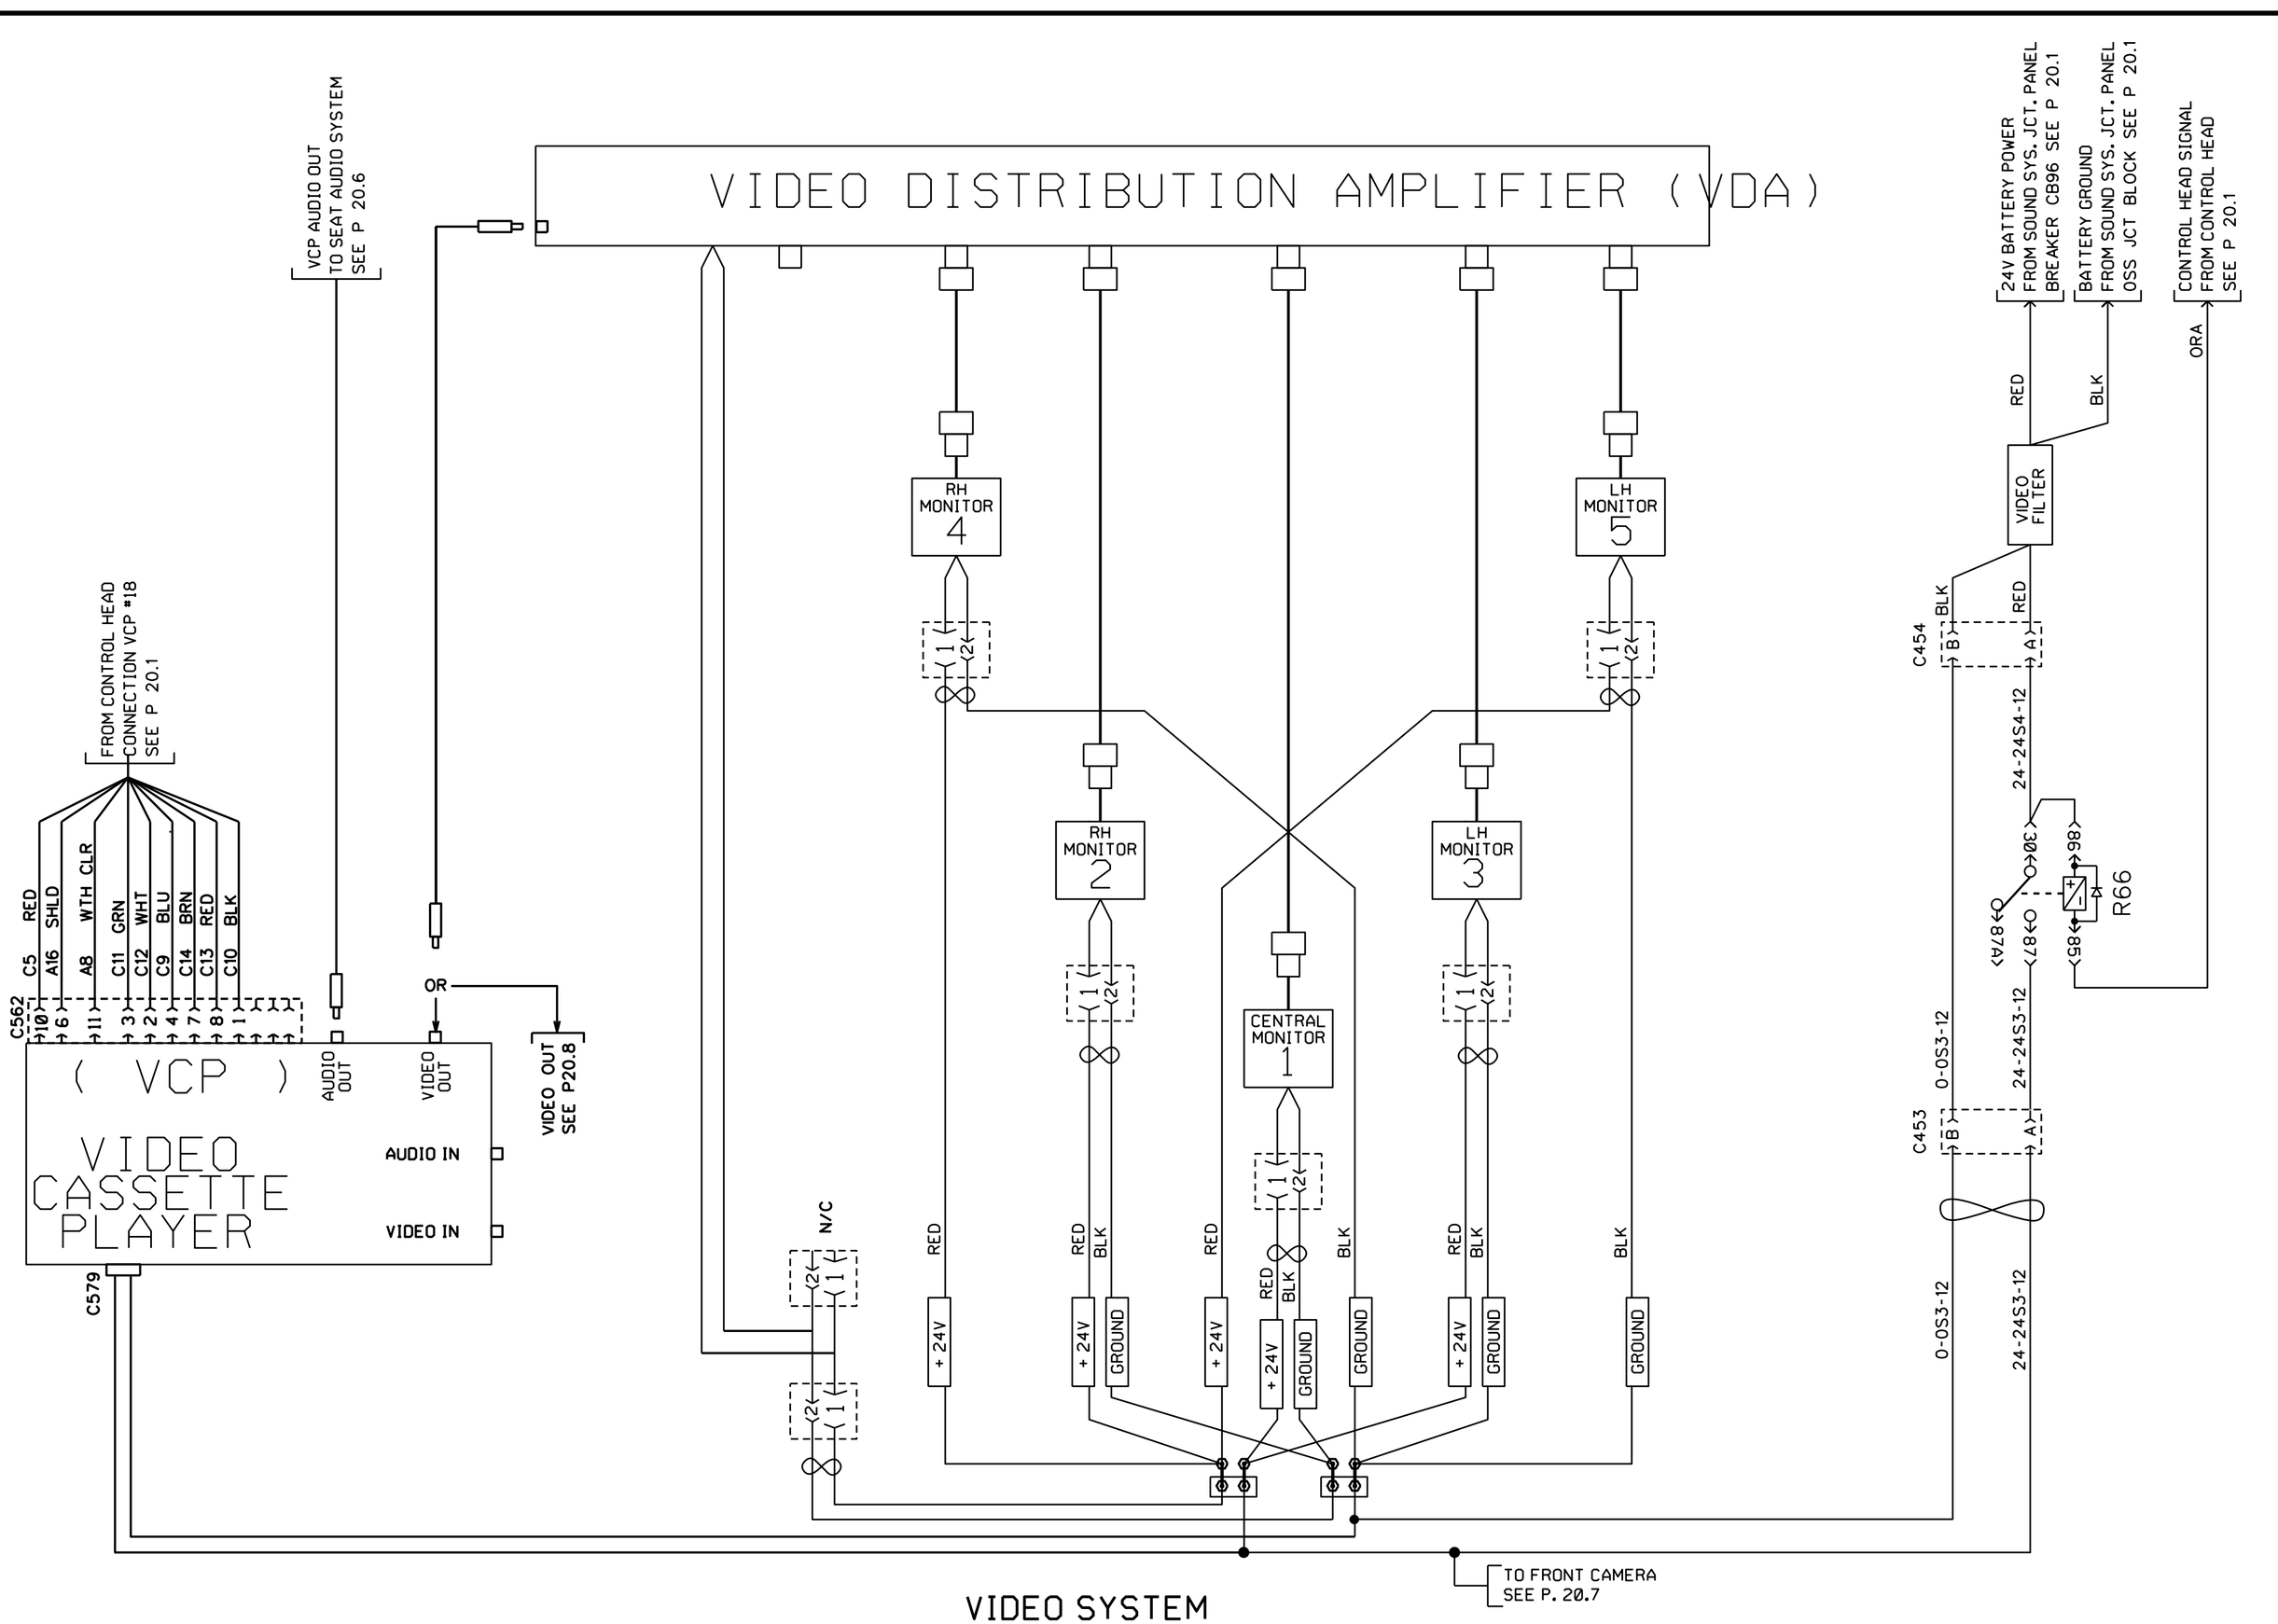


VIDEO SYSTEM

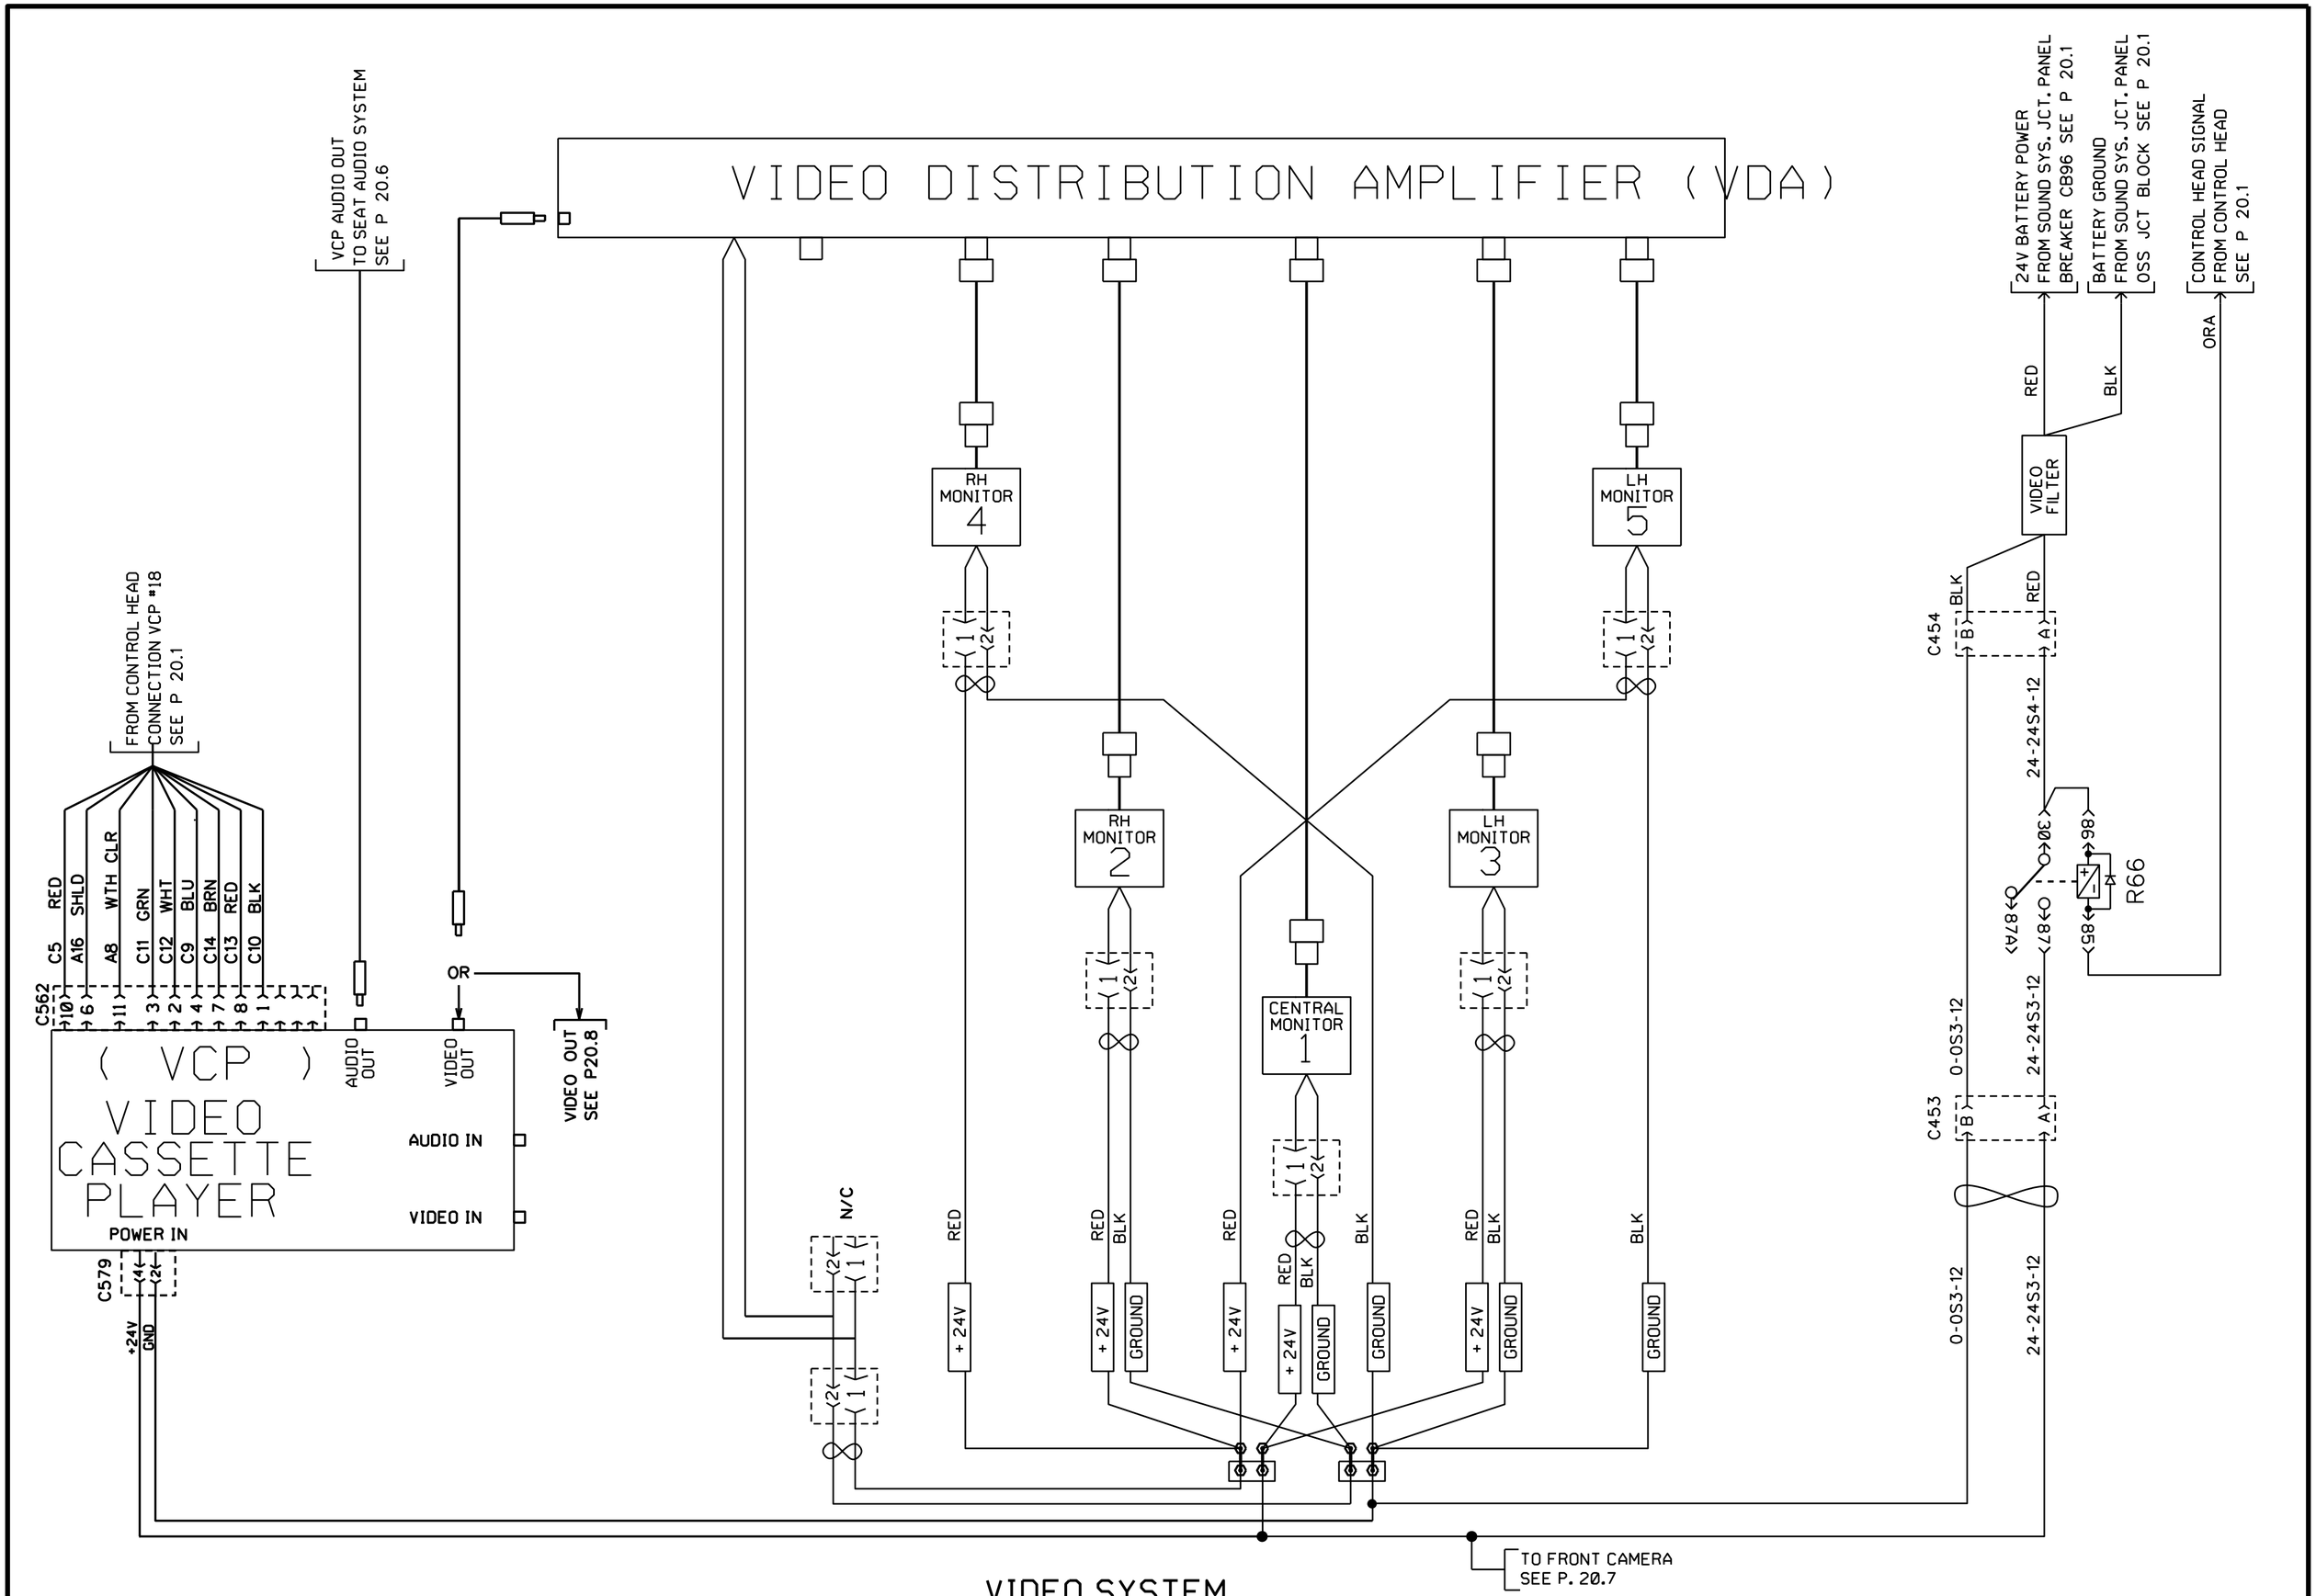

VIDEO SYSTEM

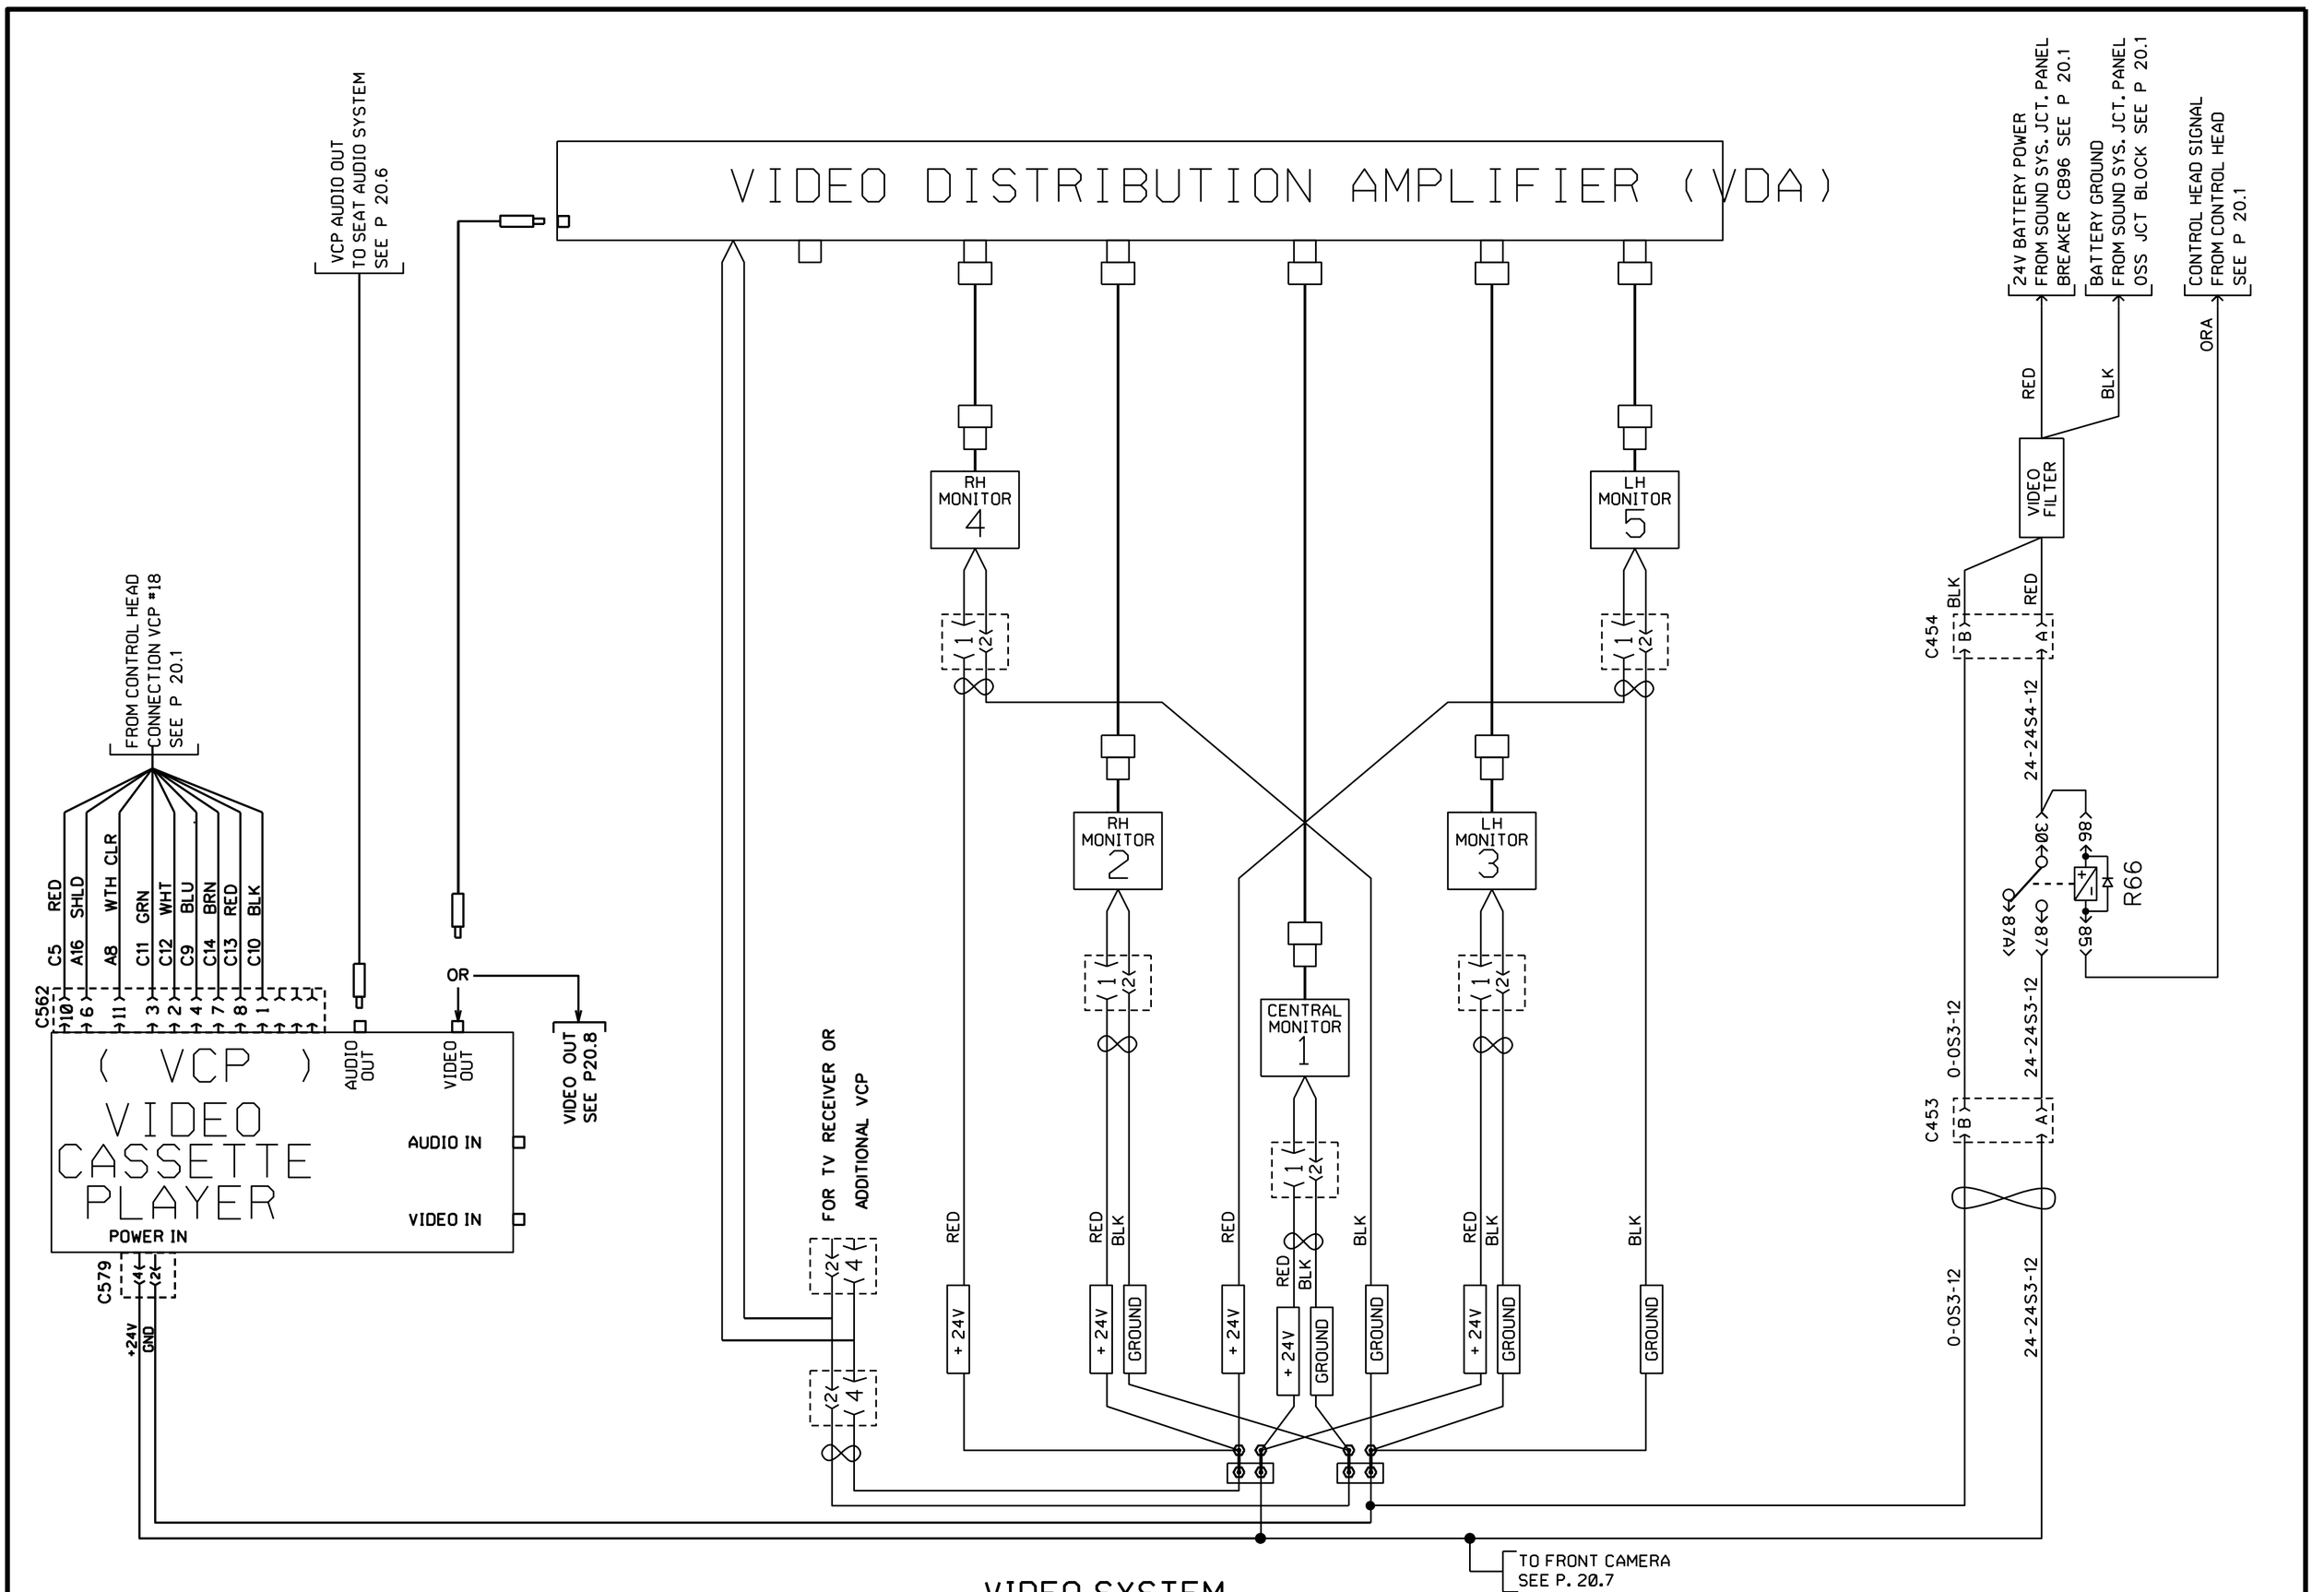


VIDEO SYSTEM

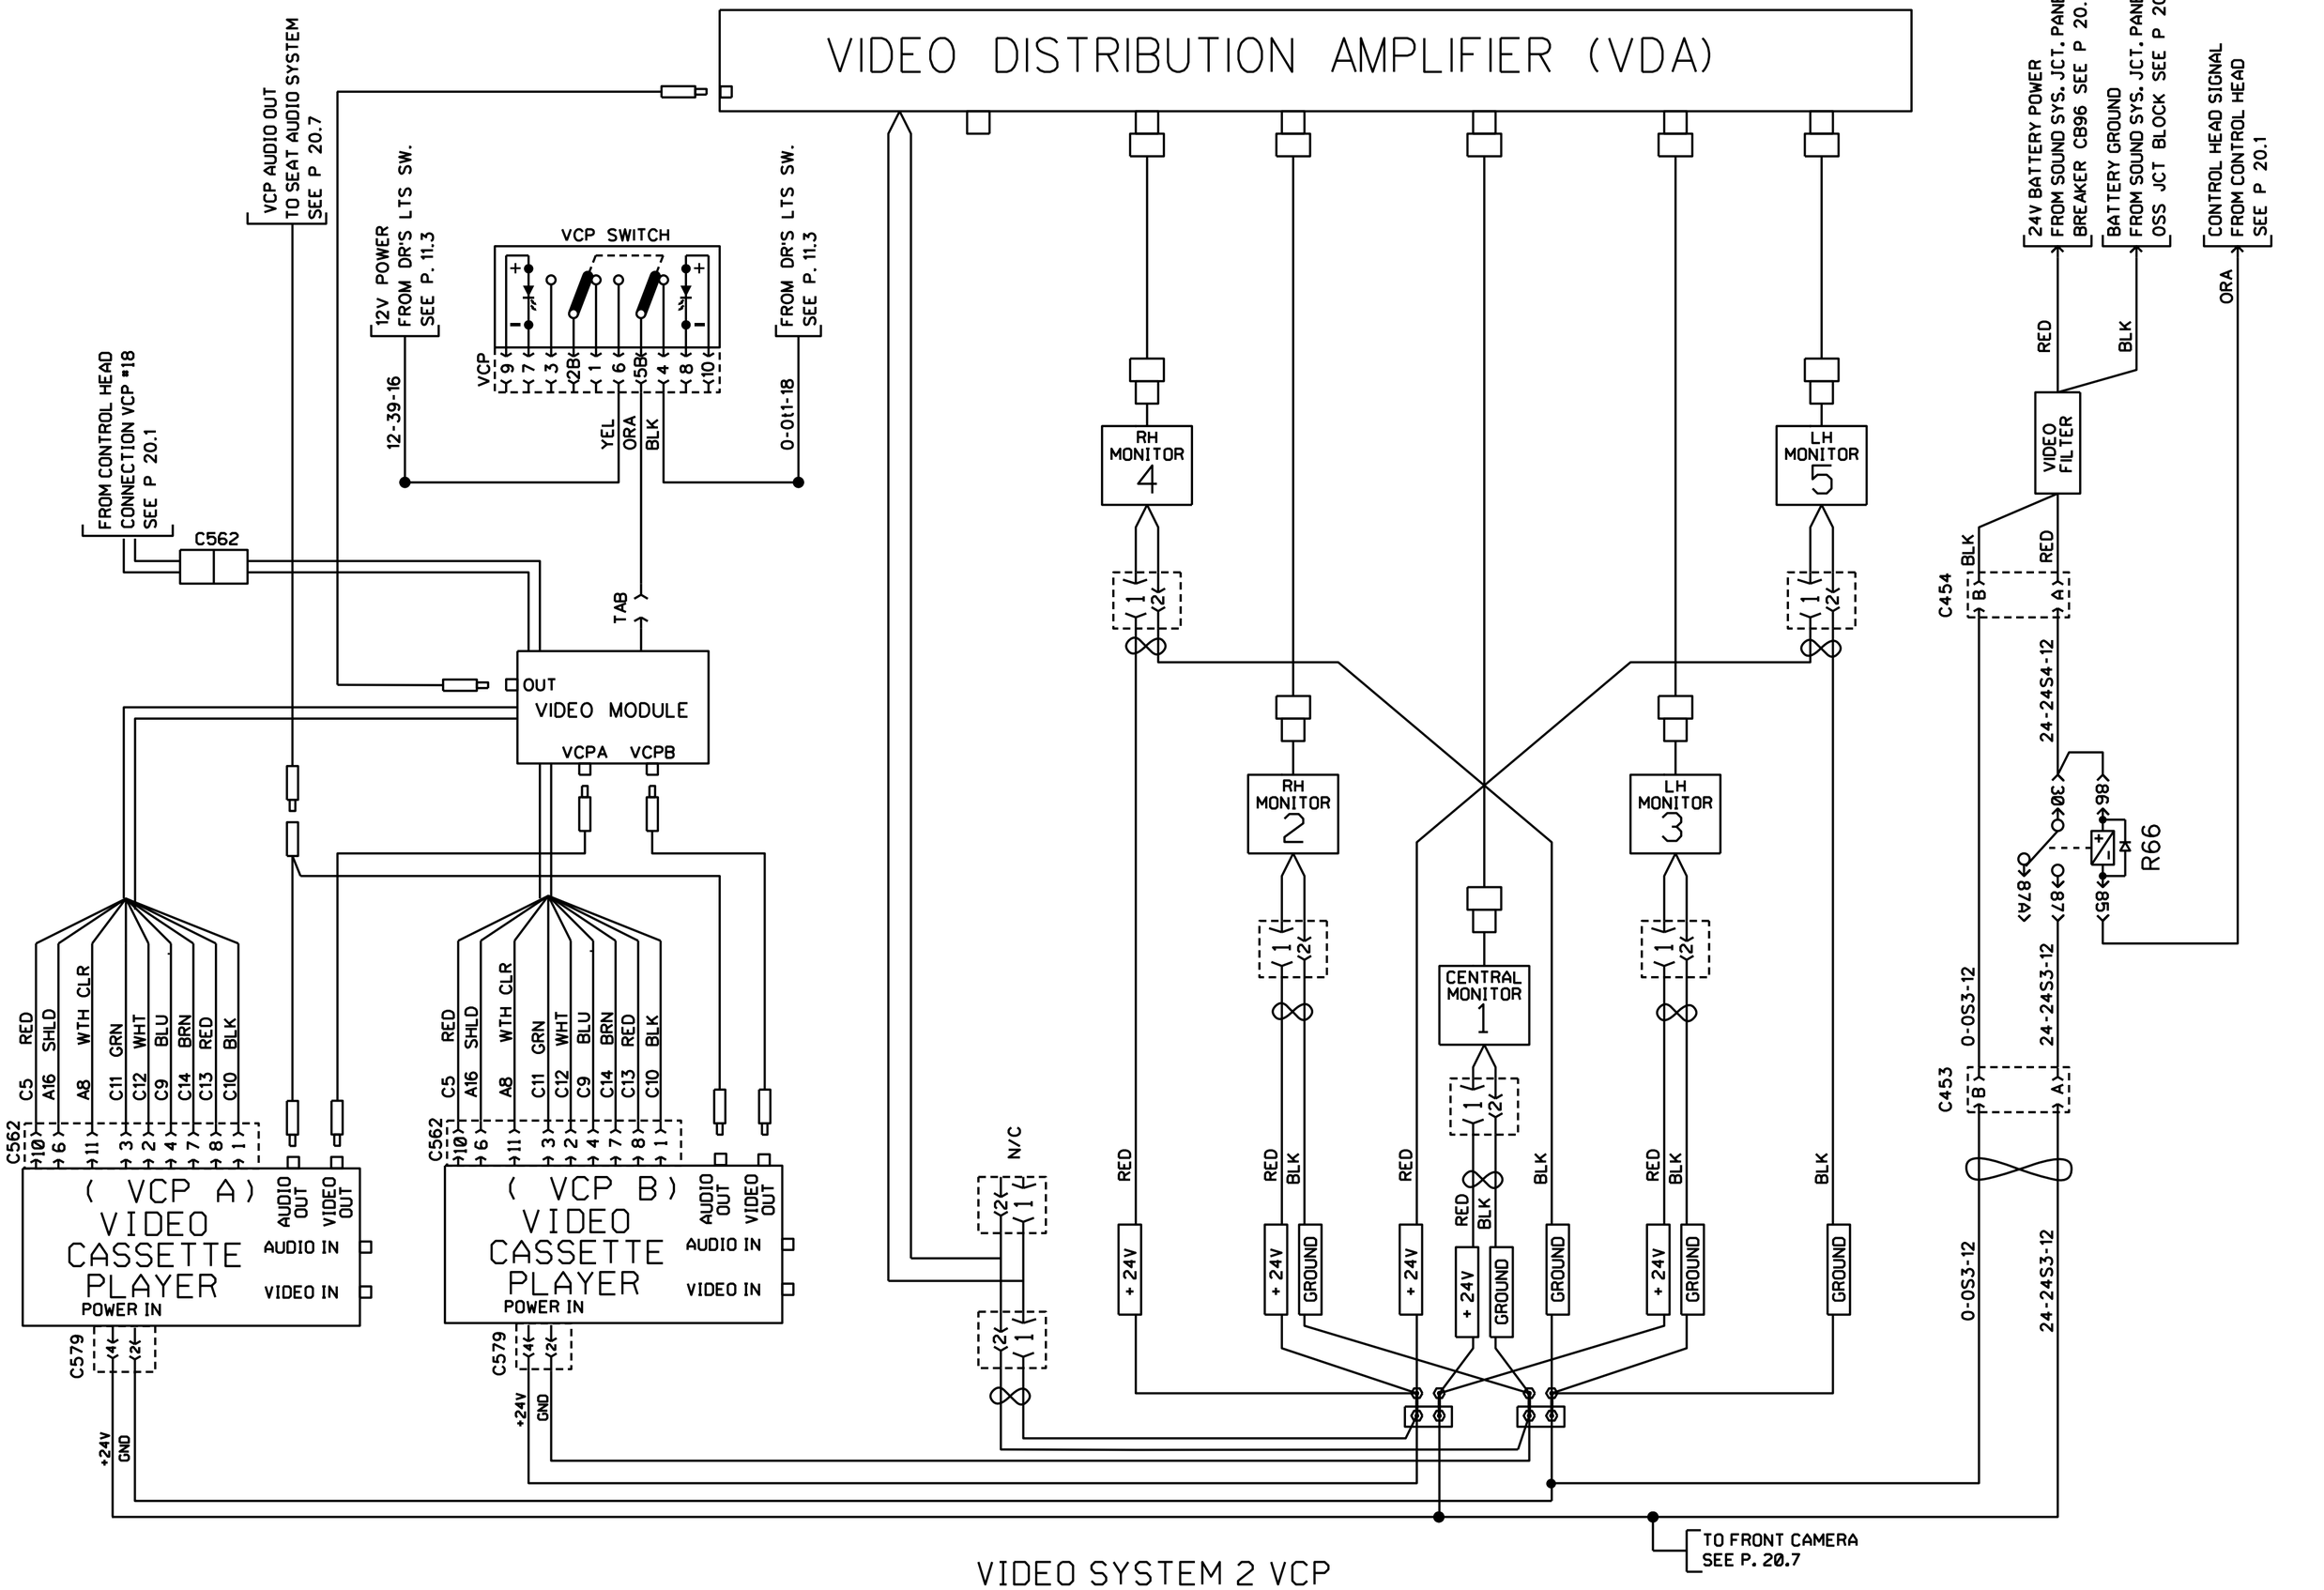


VIDEO SYSTEM 2 VCP


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 20.3 SP1	REVISION 00

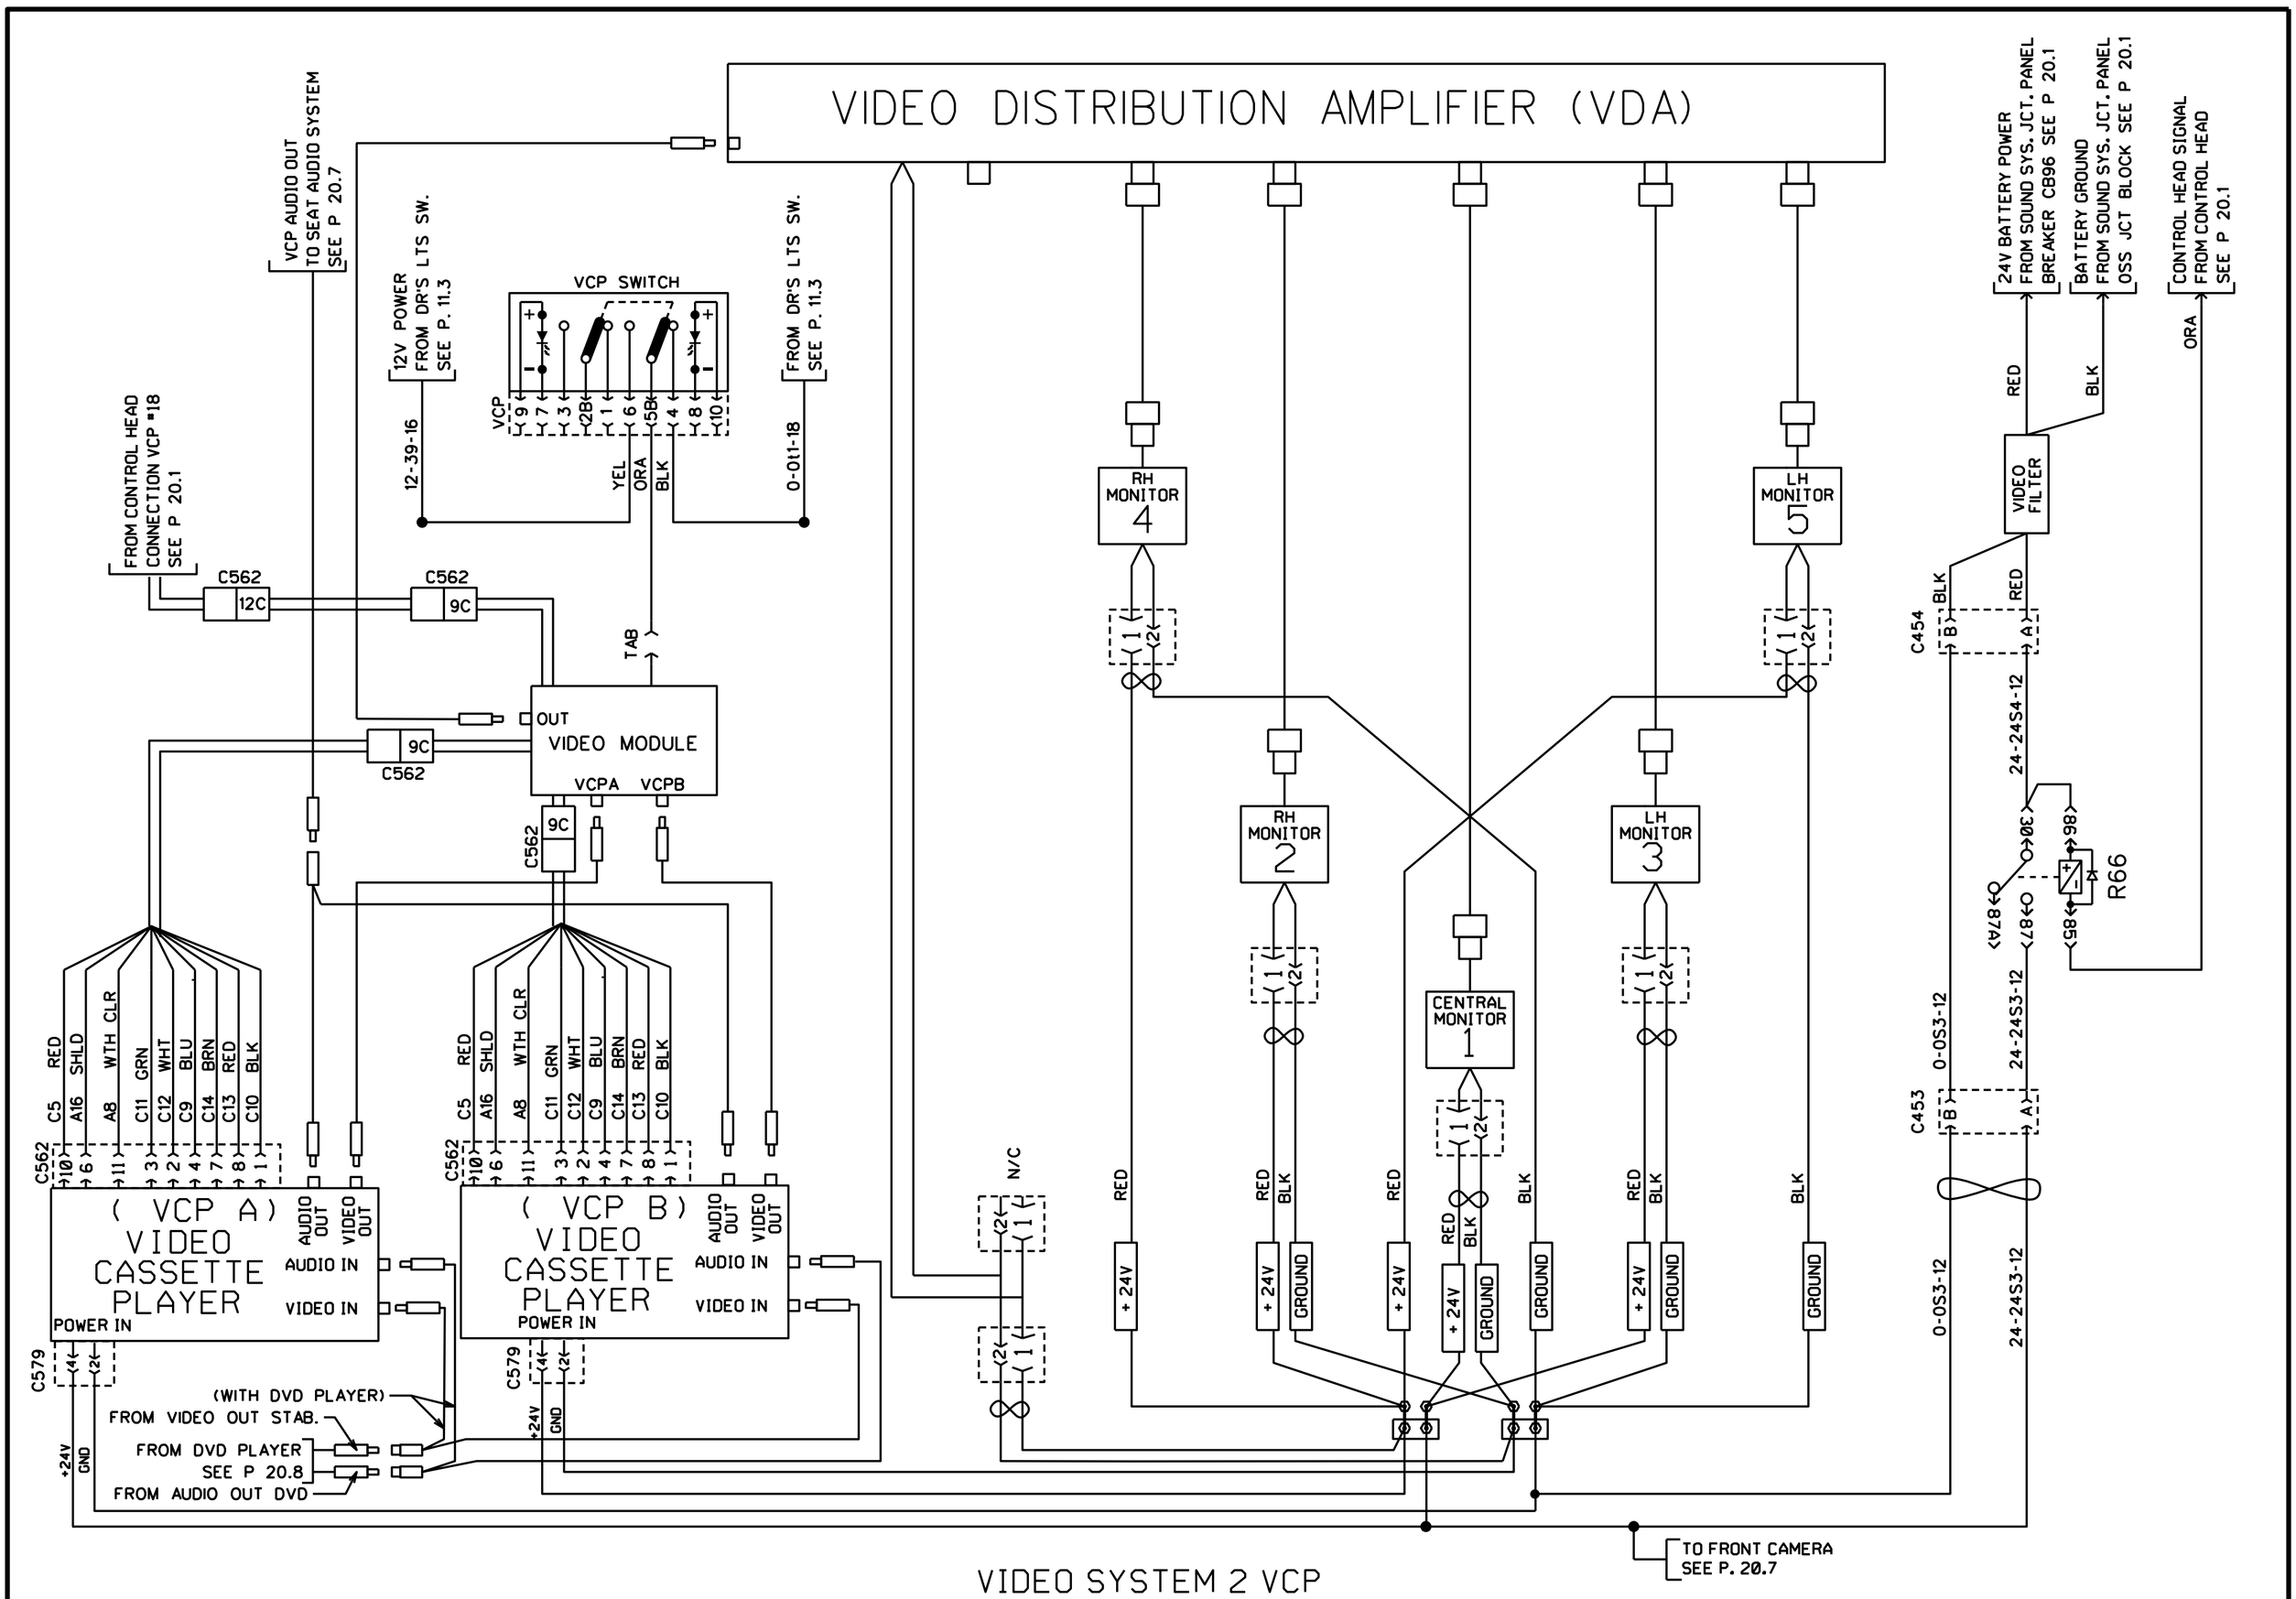


VIDEO SYSTEM 2 VCP

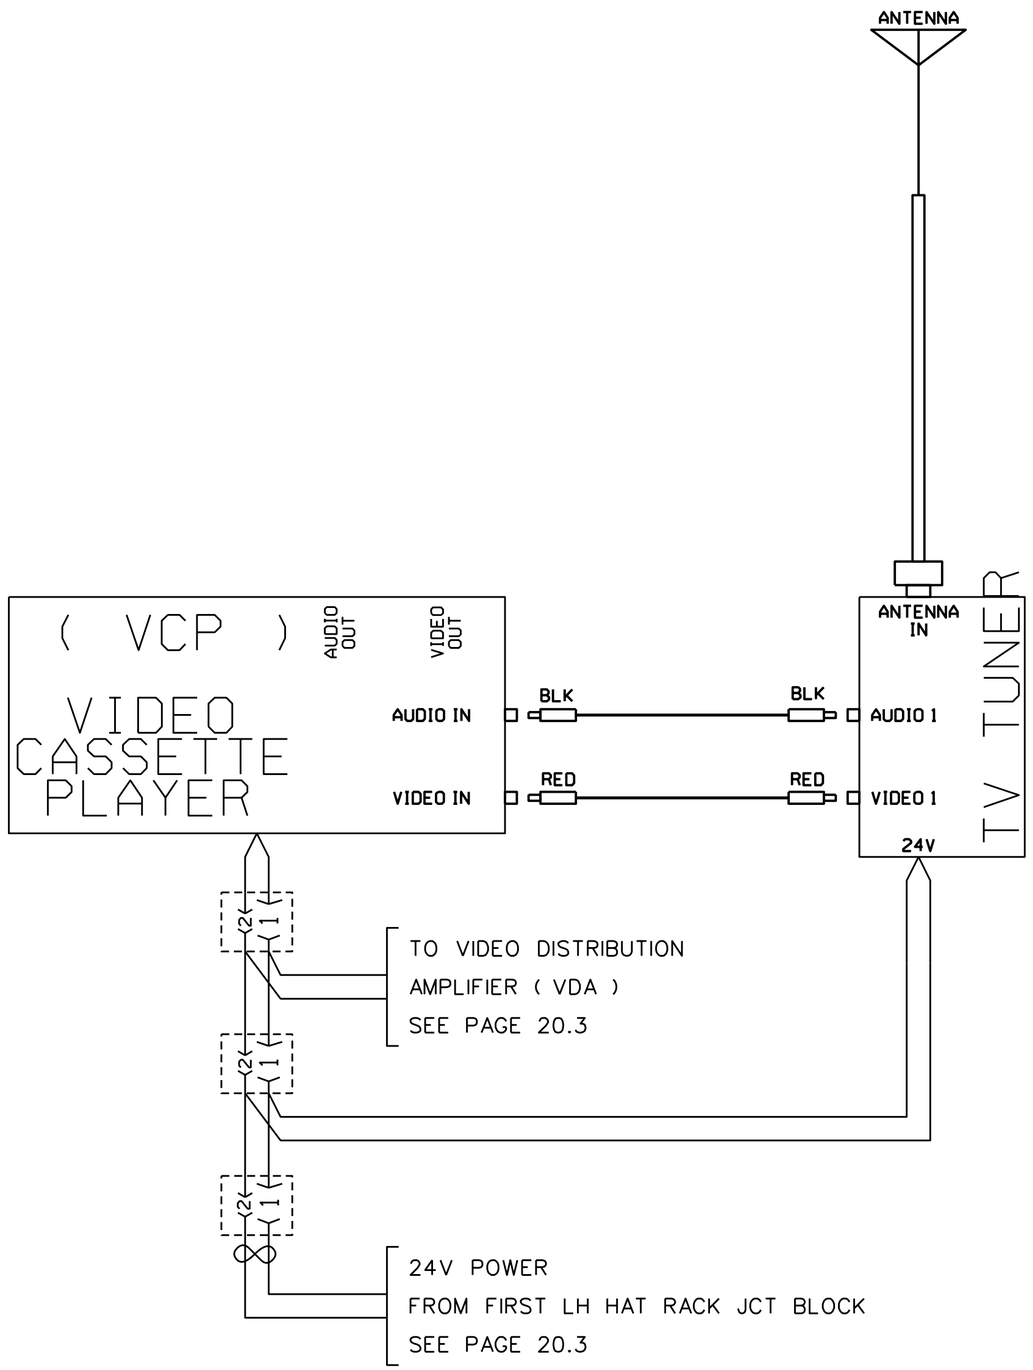
ANTENNA
ANTENNA IN
TV TUNER
(VCP)
AUDIO OUT
VIDEO OUT
VIDEO CASSETTE PLAYER
AUDIO IN
VIDEO IN
BLK
BLK
AUDIO 1
RED
RED
VIDEO 1
24V
12
11
TO VIDEO DISTRIBUTION
AMPLIFIER (VDA)
SEE PAGE 20.3
12
11
12
11
24V POWER
FROM FIRST LH HAT RACK JCT BLOCK
SEE PAGE 20.3


TV RECEIVER

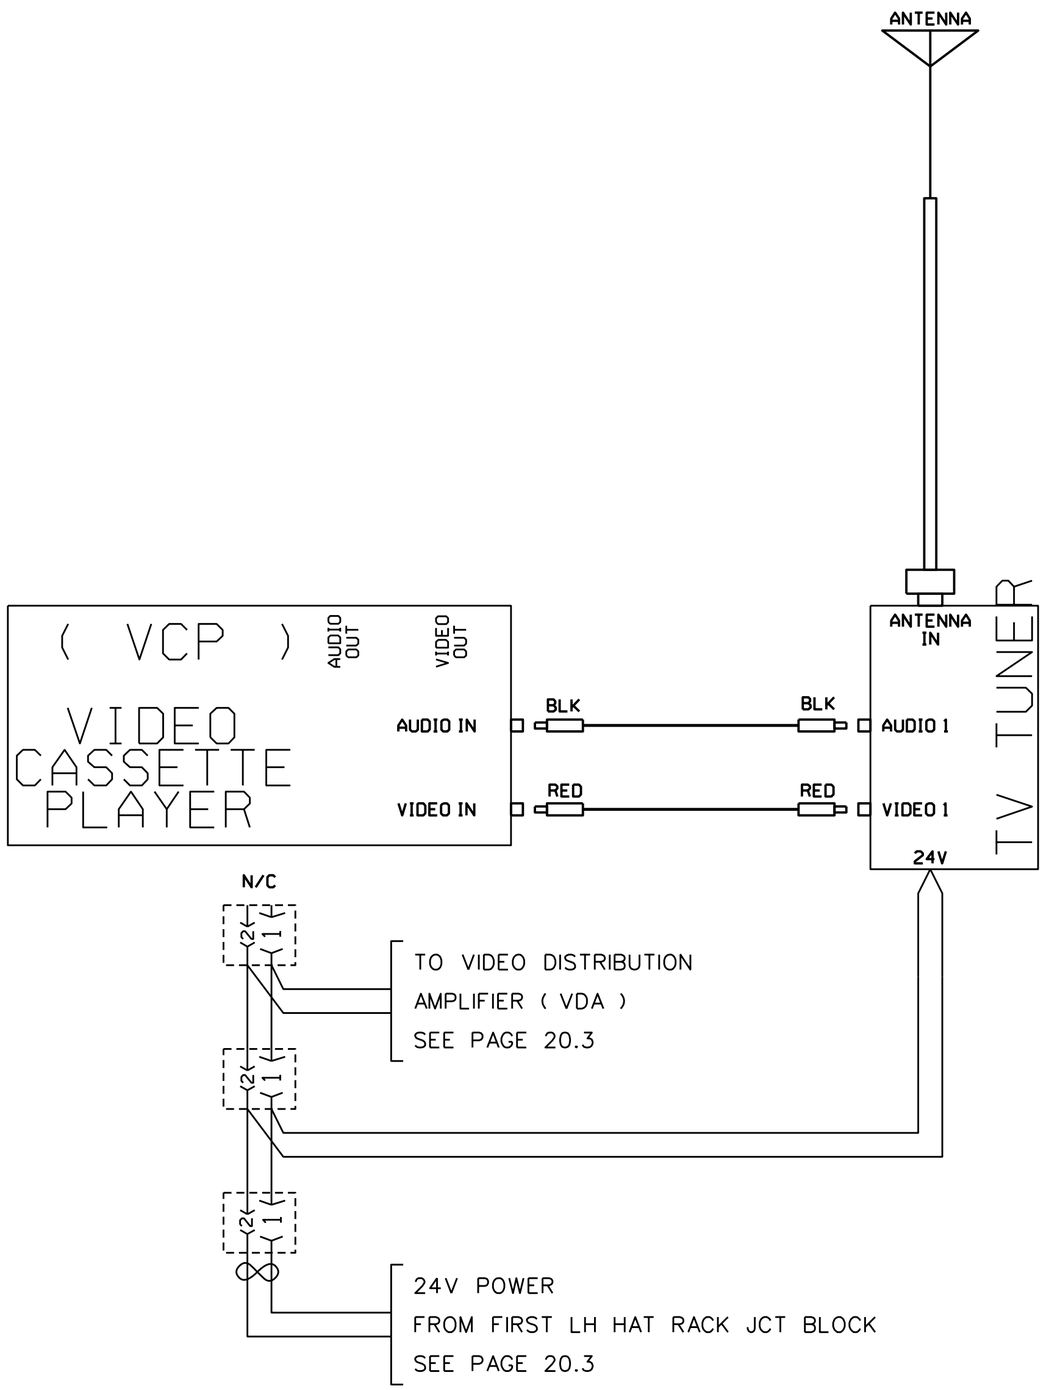
ANTENNA
ANTENNA IN
TV TUNER
(VCP)
AUDIO OUT
VIDEO OUT
VIDEO CASSETTE PLAYER
AUDIO IN
VIDEO IN
BLK
BLK
RED
RED
AUDIO 1
VIDEO 1
24V
N/C
TO VIDEO DISTRIBUTION
AMPLIFIER (VDA)
SEE PAGE 20.3
24V POWER
FROM FIRST LH HAT RACK JCT BLOCK
SEE PAGE 20.3


TV RECEIVER

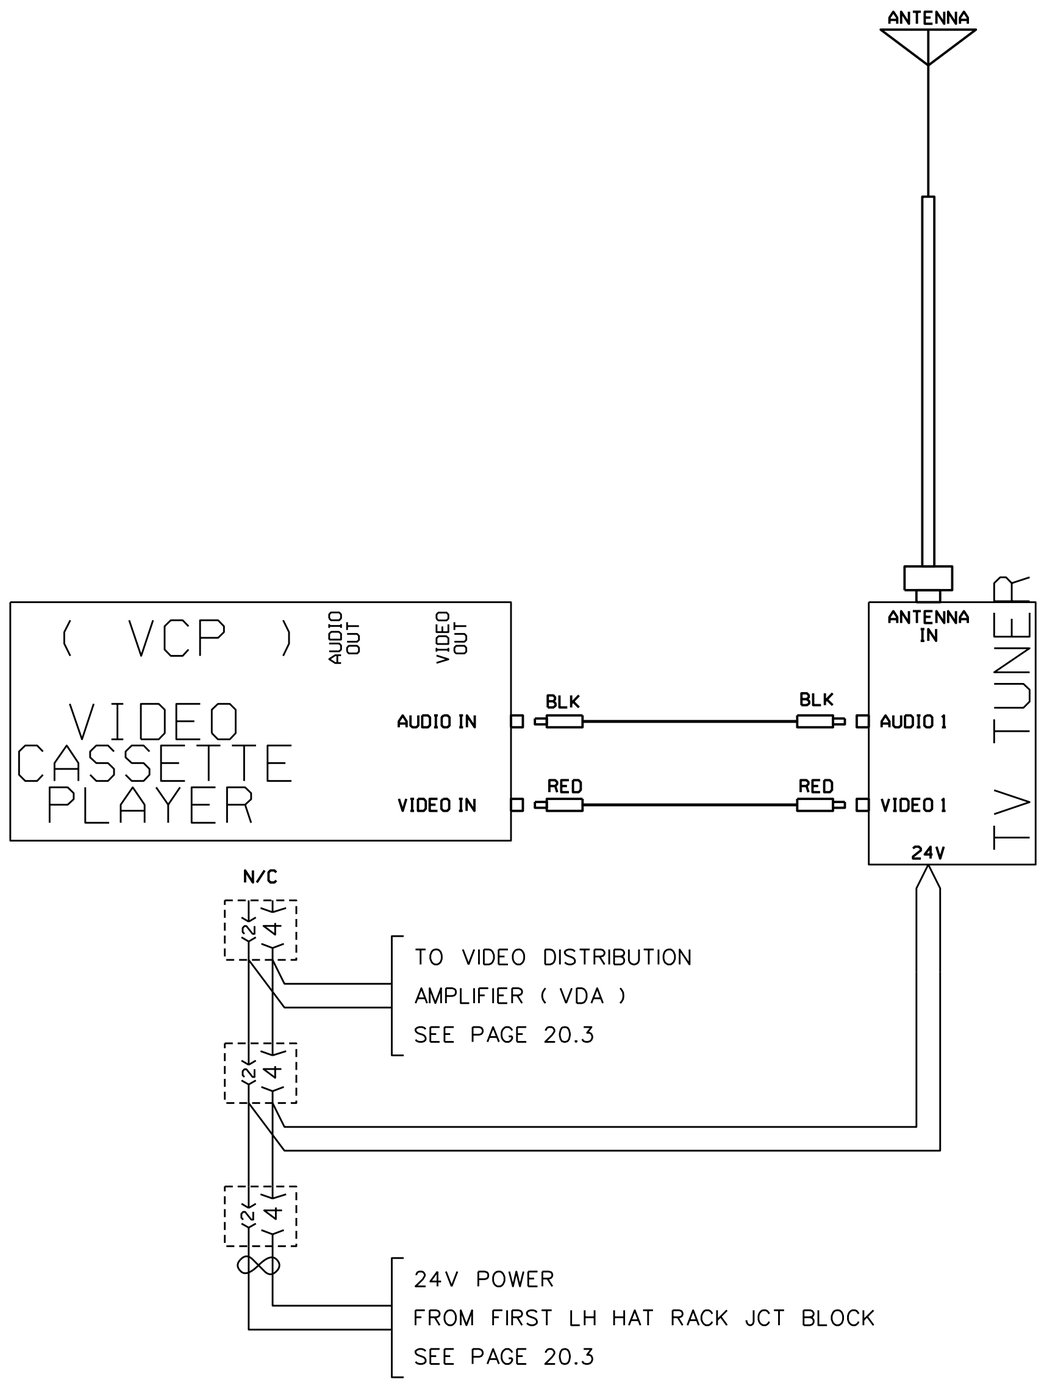

ANTENNA
(VCP)
AUDIO OUT
VIDEO OUT
VIDEO CASSETTE PLAYER
AUDIO IN
VIDEO IN
BLK
BLK
RED
RED
ANTENNA IN
AUDIO 1
VIDEO 1
24V
TV TUNER
N/C
J2
P4
TO VIDEO DISTRIBUTION
AMPLIFIER (VDA)
SEE PAGE 20.3
24V POWER
FROM FIRST LH HAT RACK JCT BLOCK
SEE PAGE 20.3

TV RECEIVER

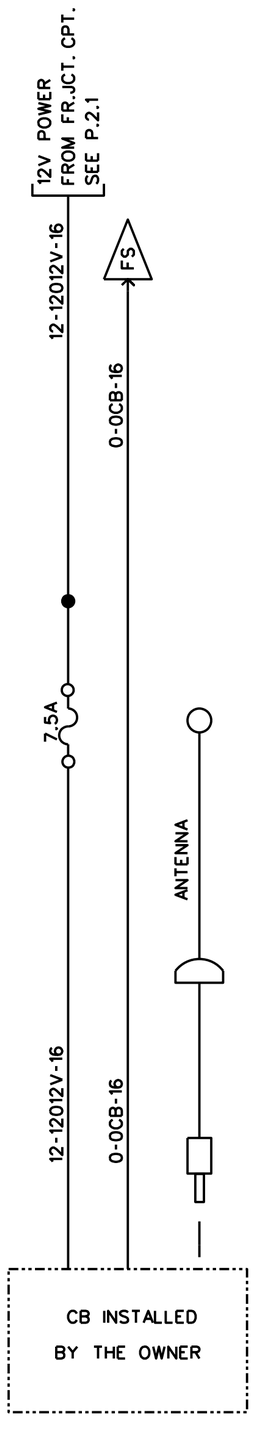


CB OPTION

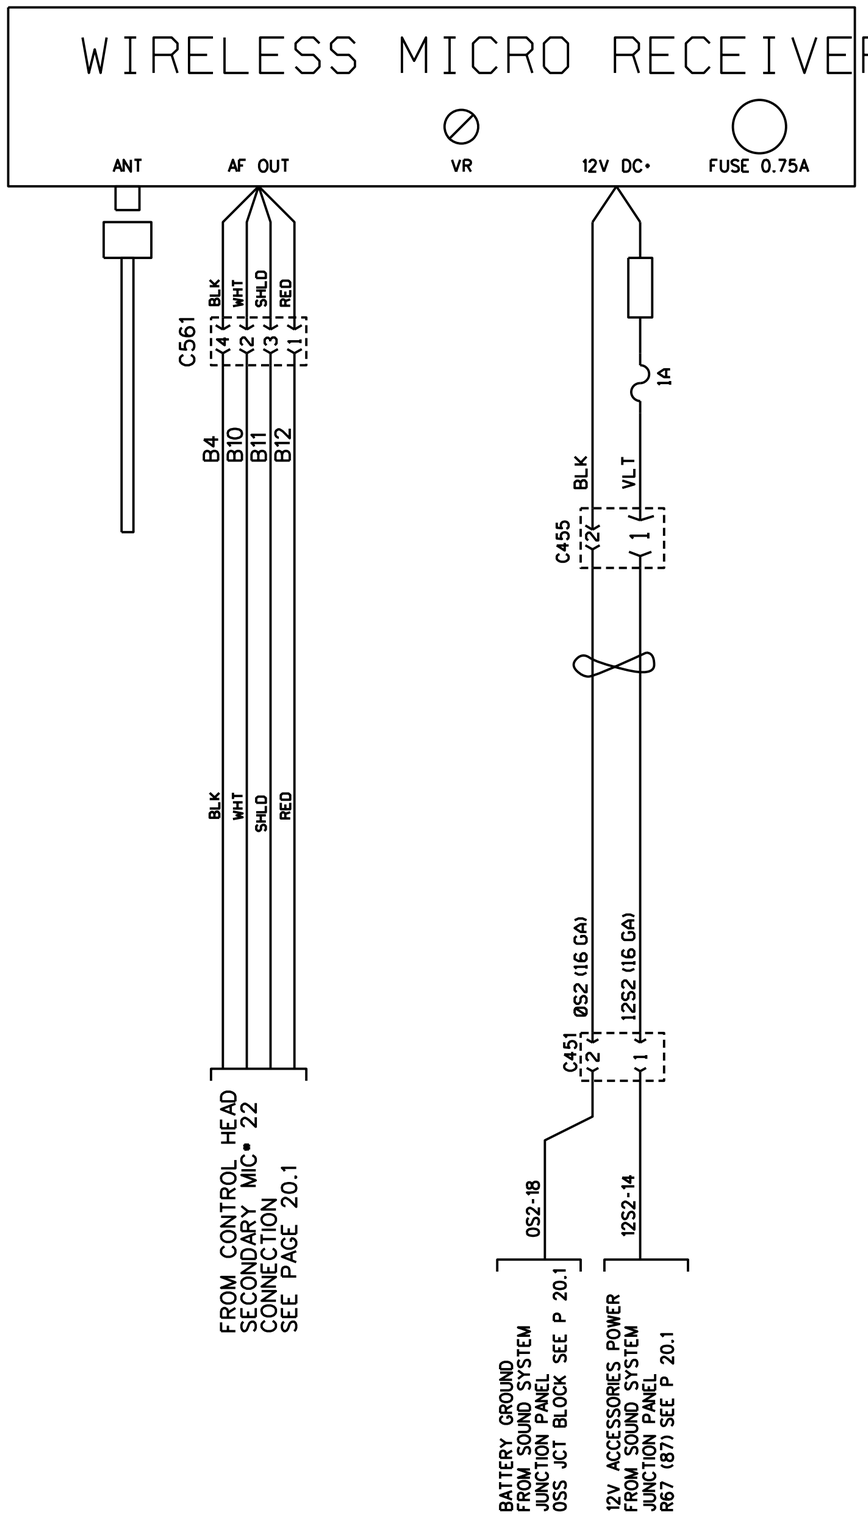


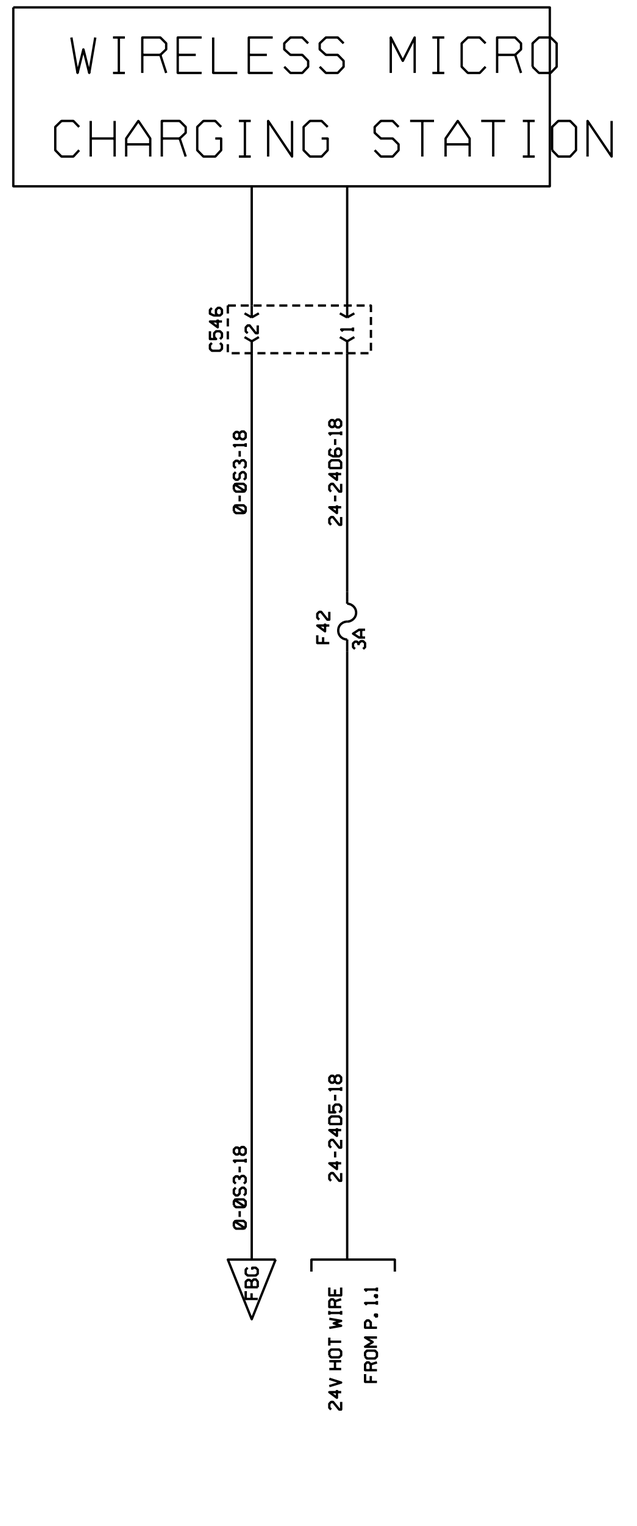


WIRELESS MICROPHONE

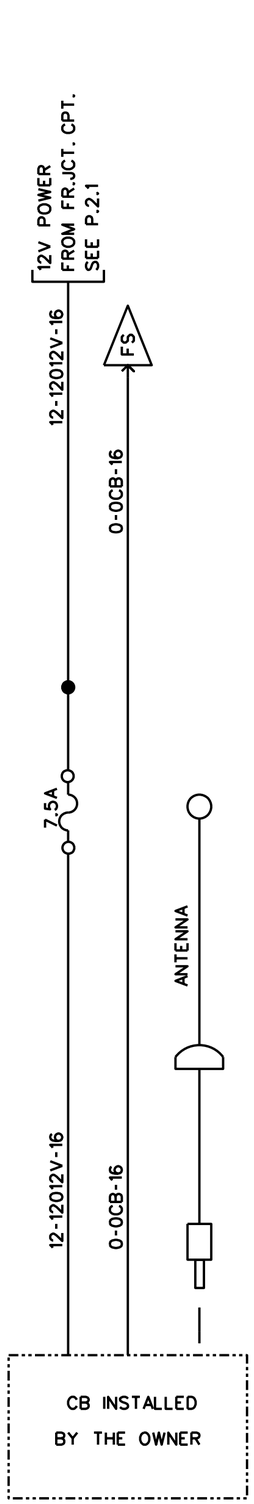


CB OPTION

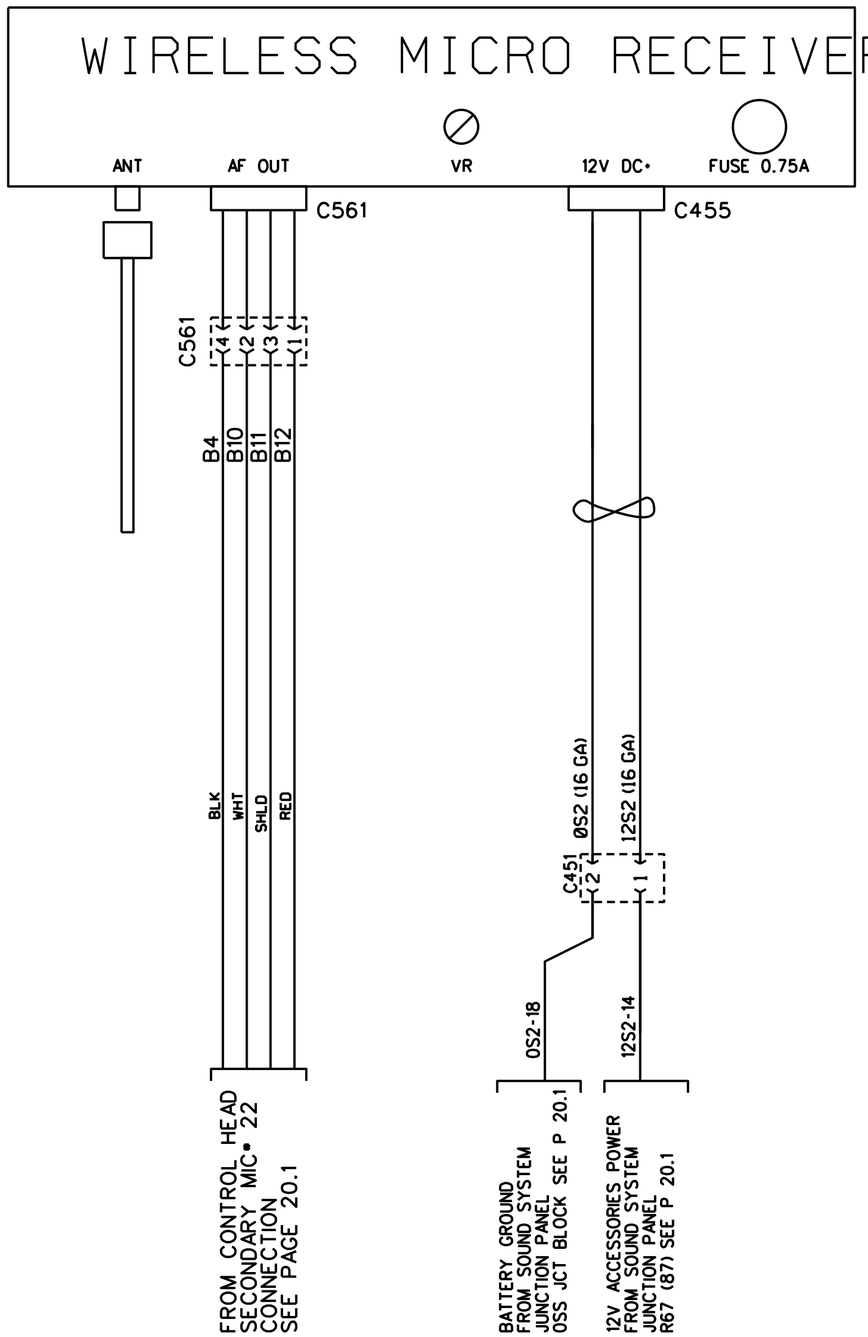


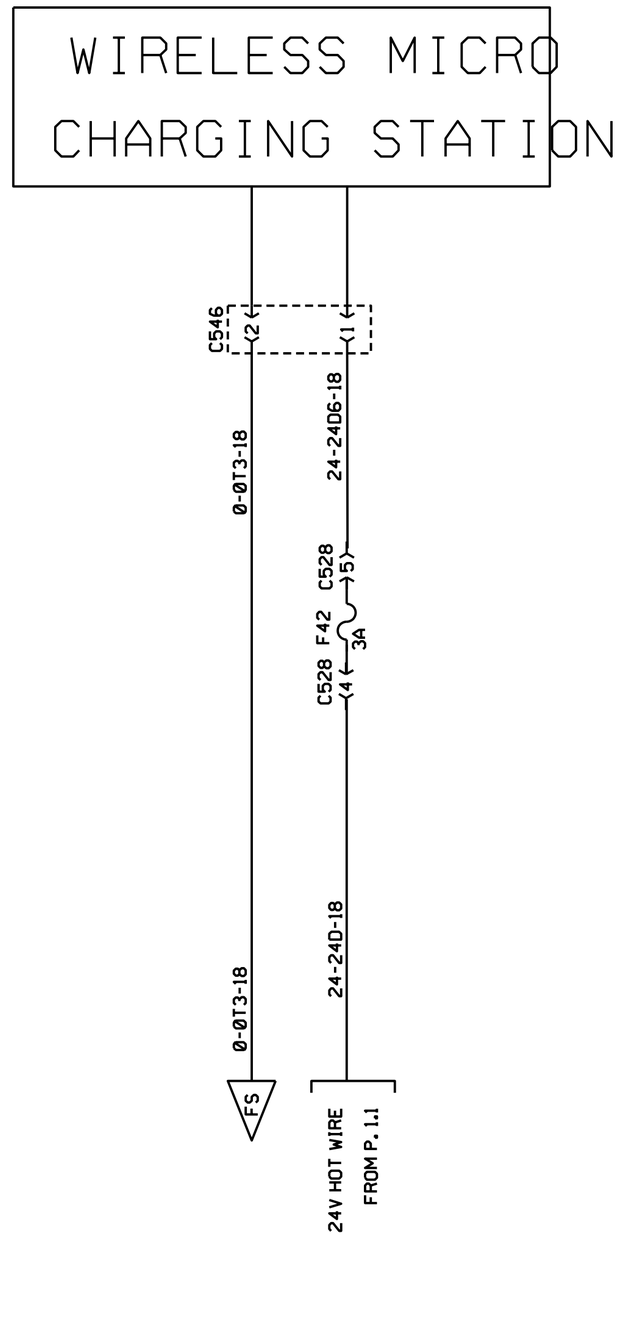


WIRELESS MICROPHONE

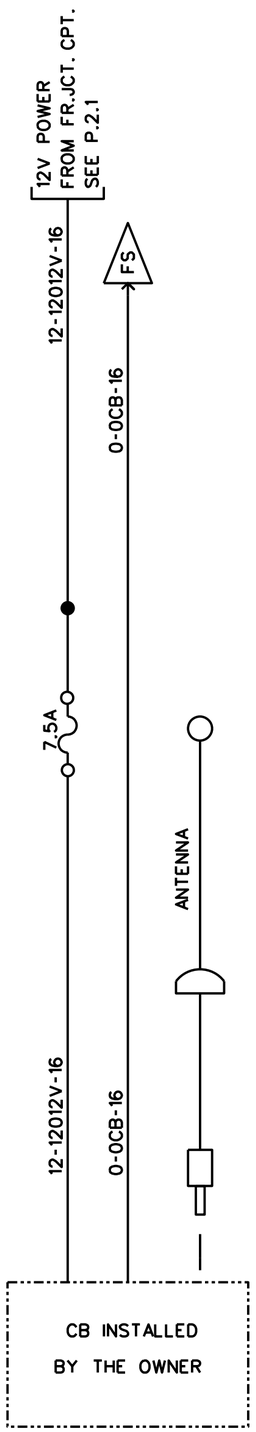


CB OPTION

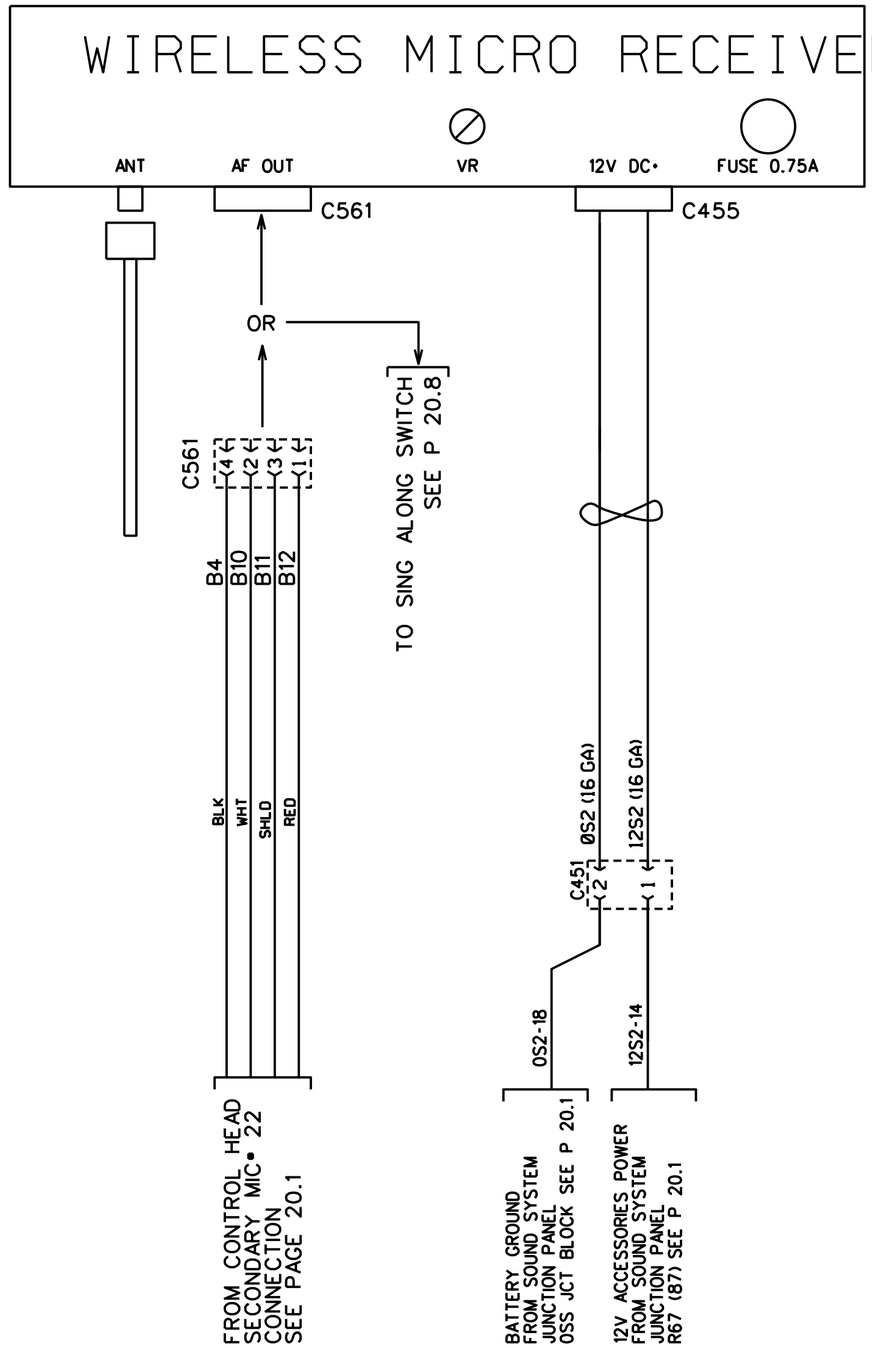


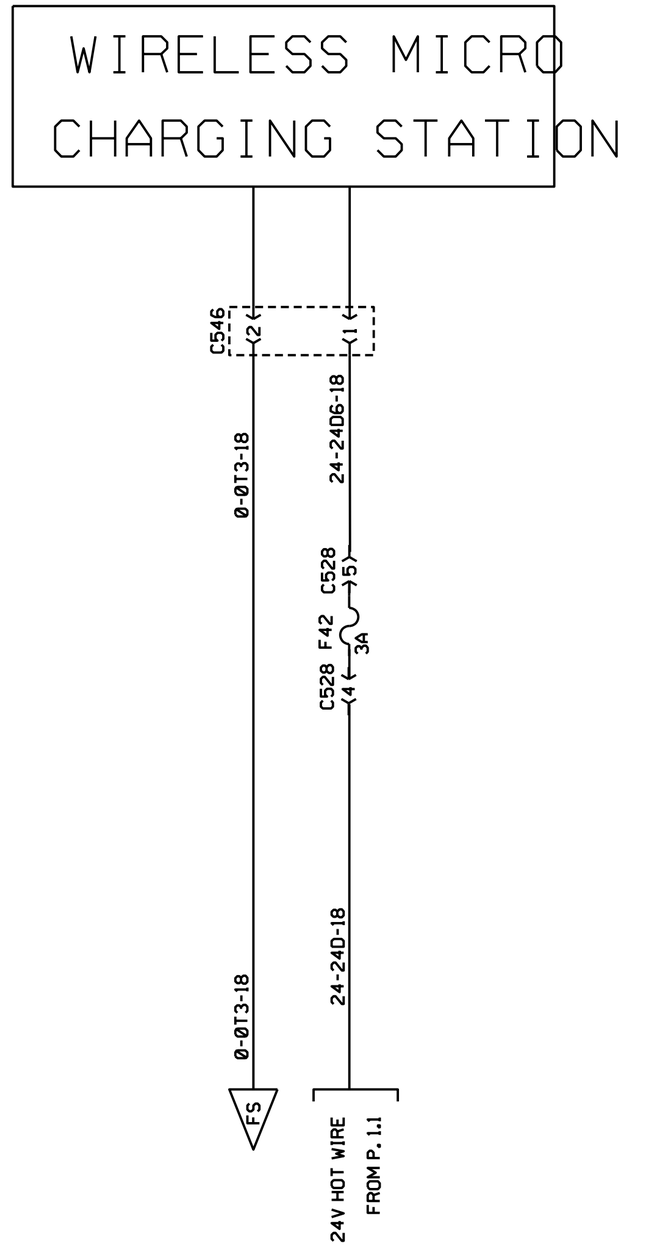


WIRELESS MICROPHONE

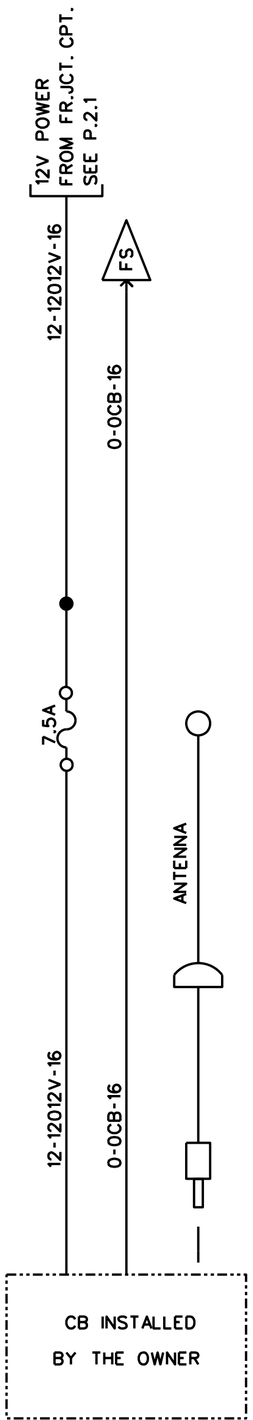


CB OPTION

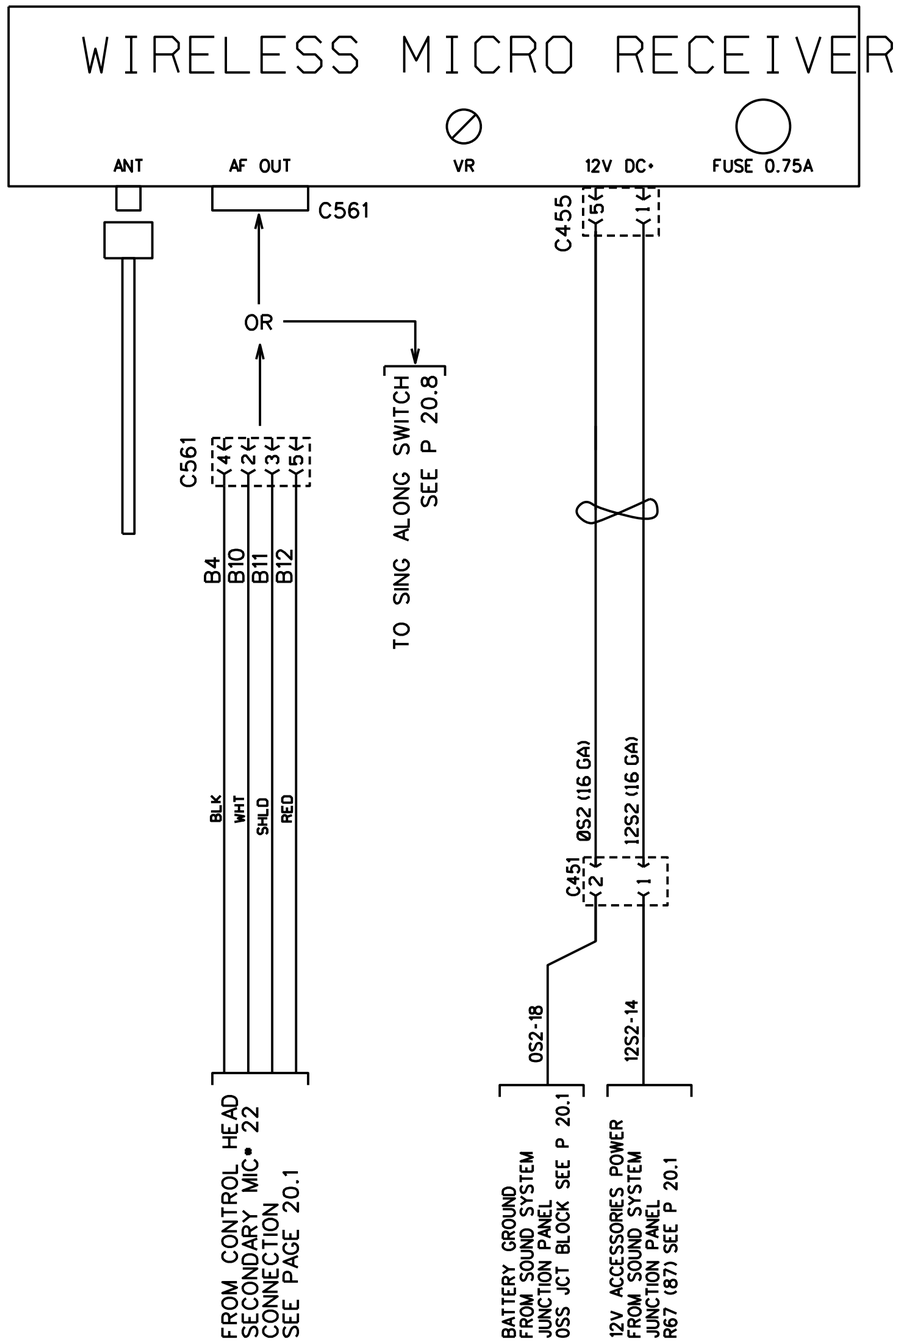


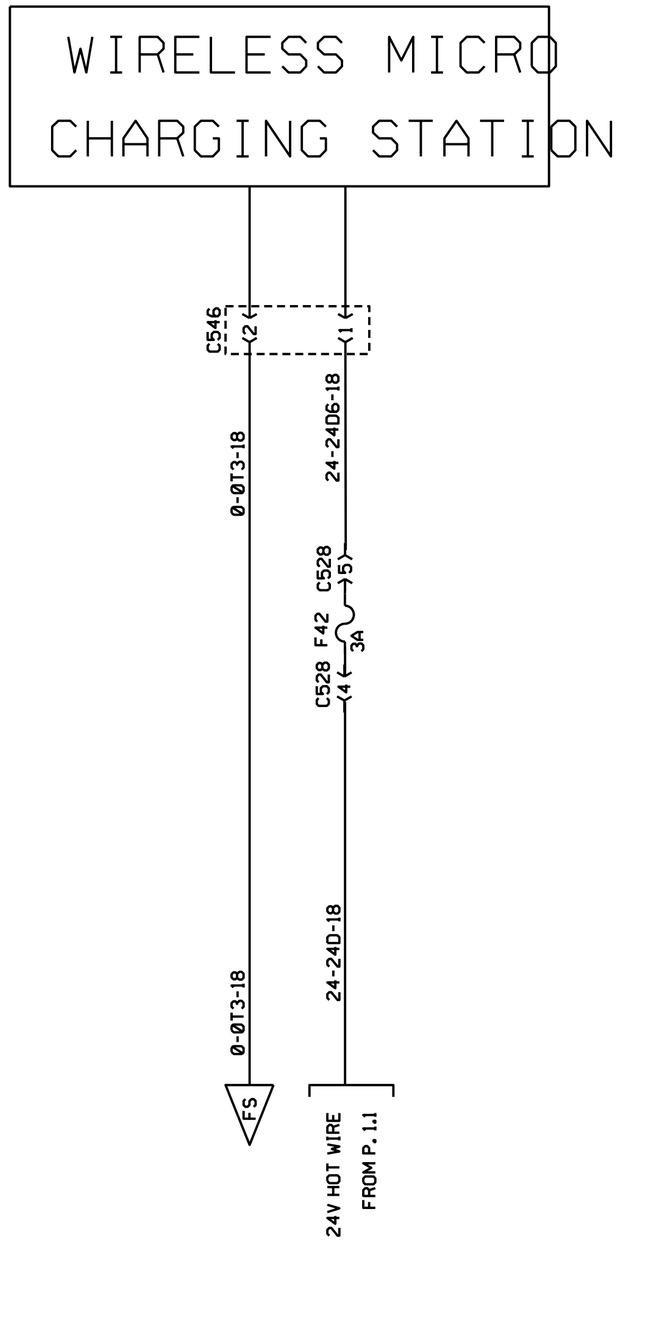


WIRELESS MICROPHONE

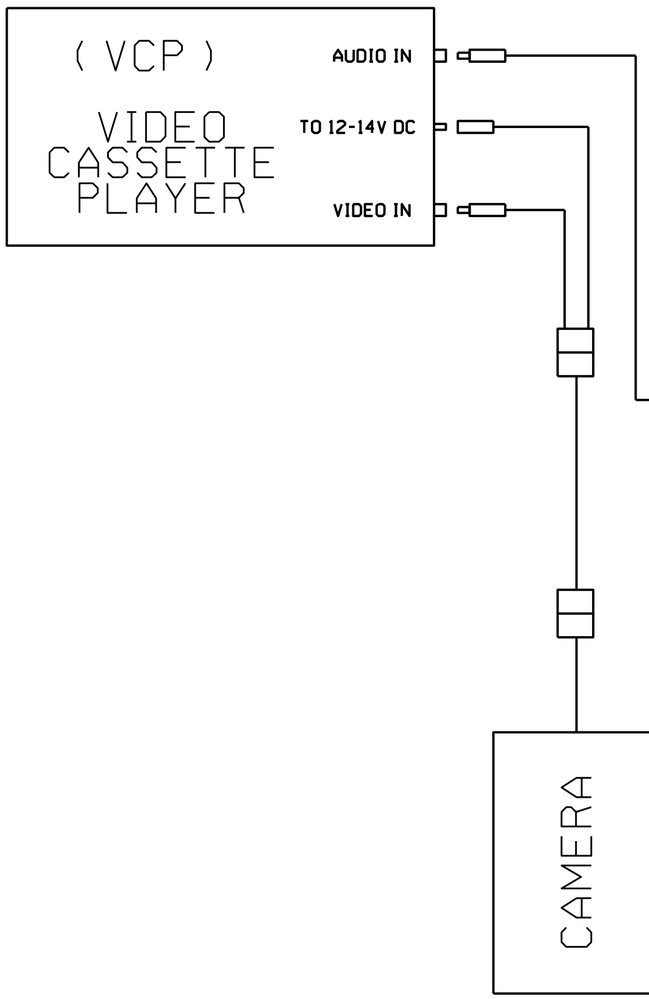


FRONT CAMERA WITHOUT TV RECEIVER

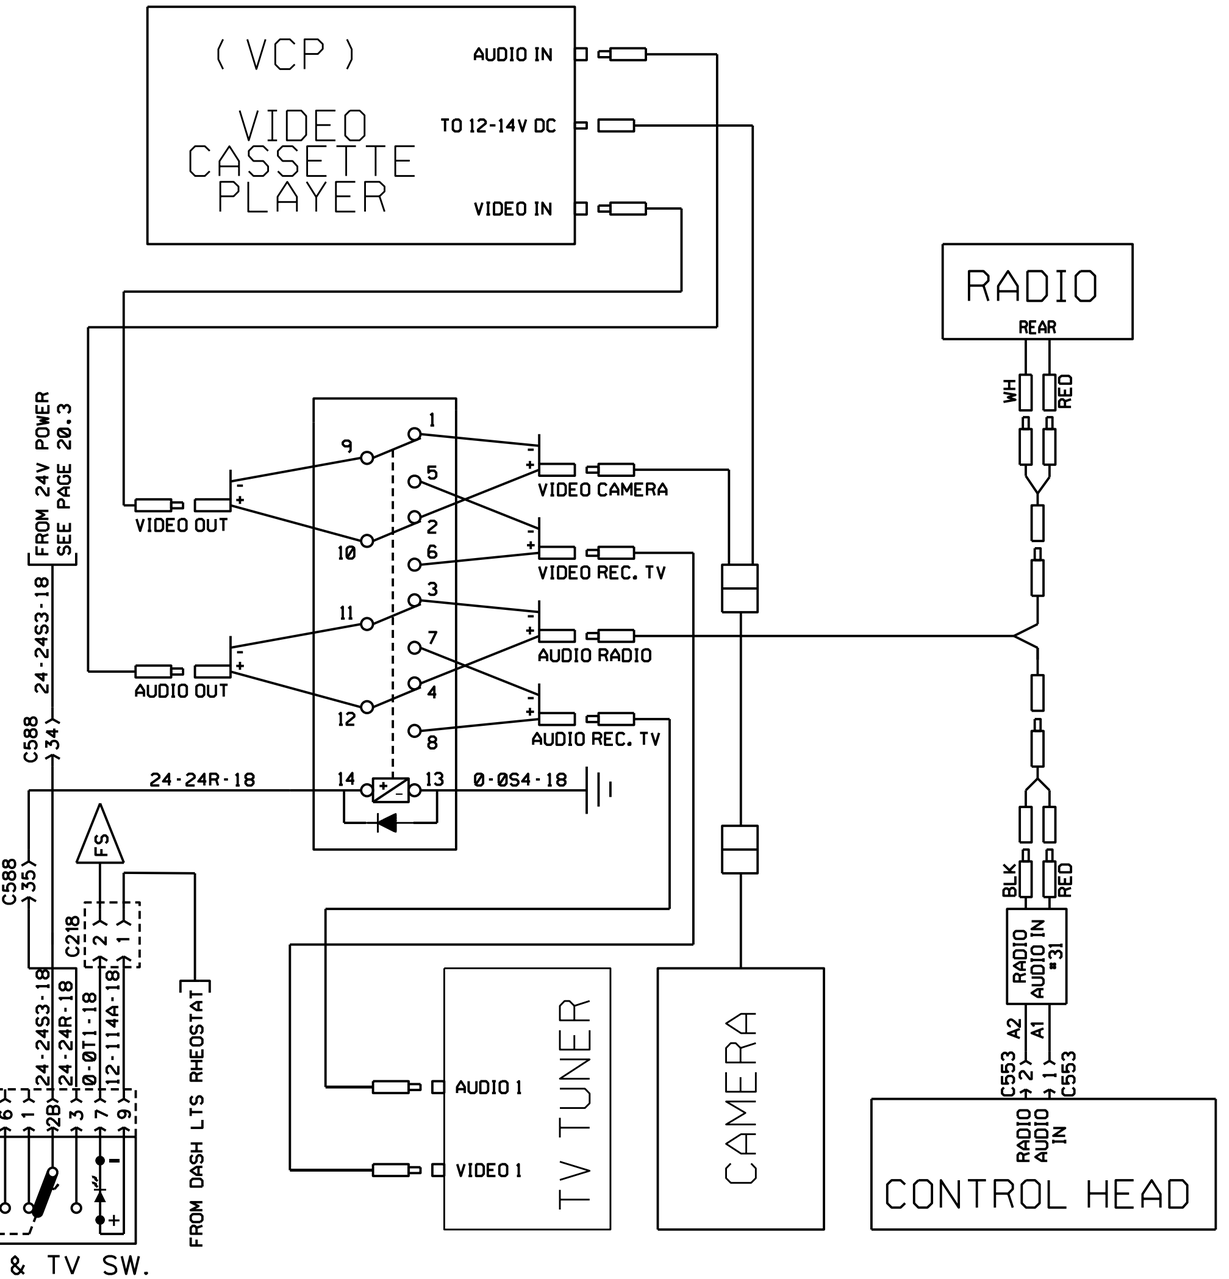



FRONT CAMERA WITH TV RECEIVER

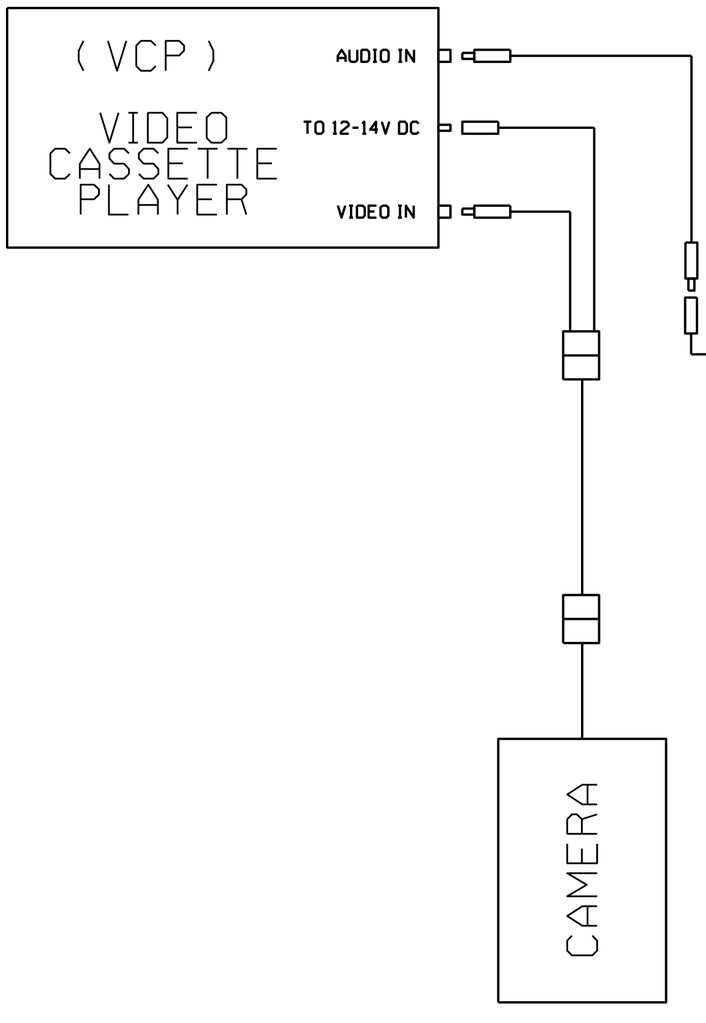

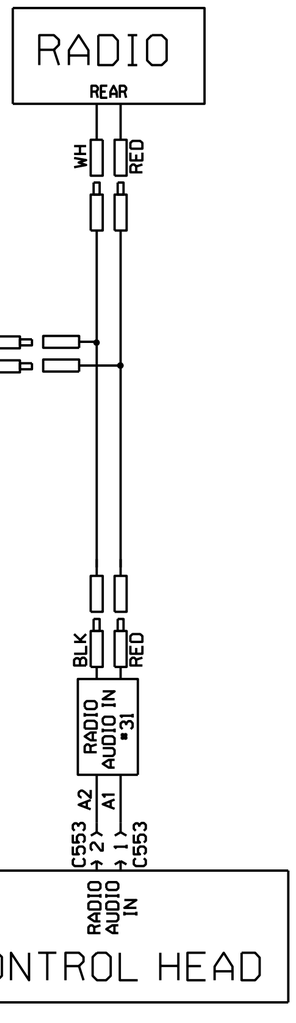


FRONT CAMERA WITHOUT TV RECEIVER

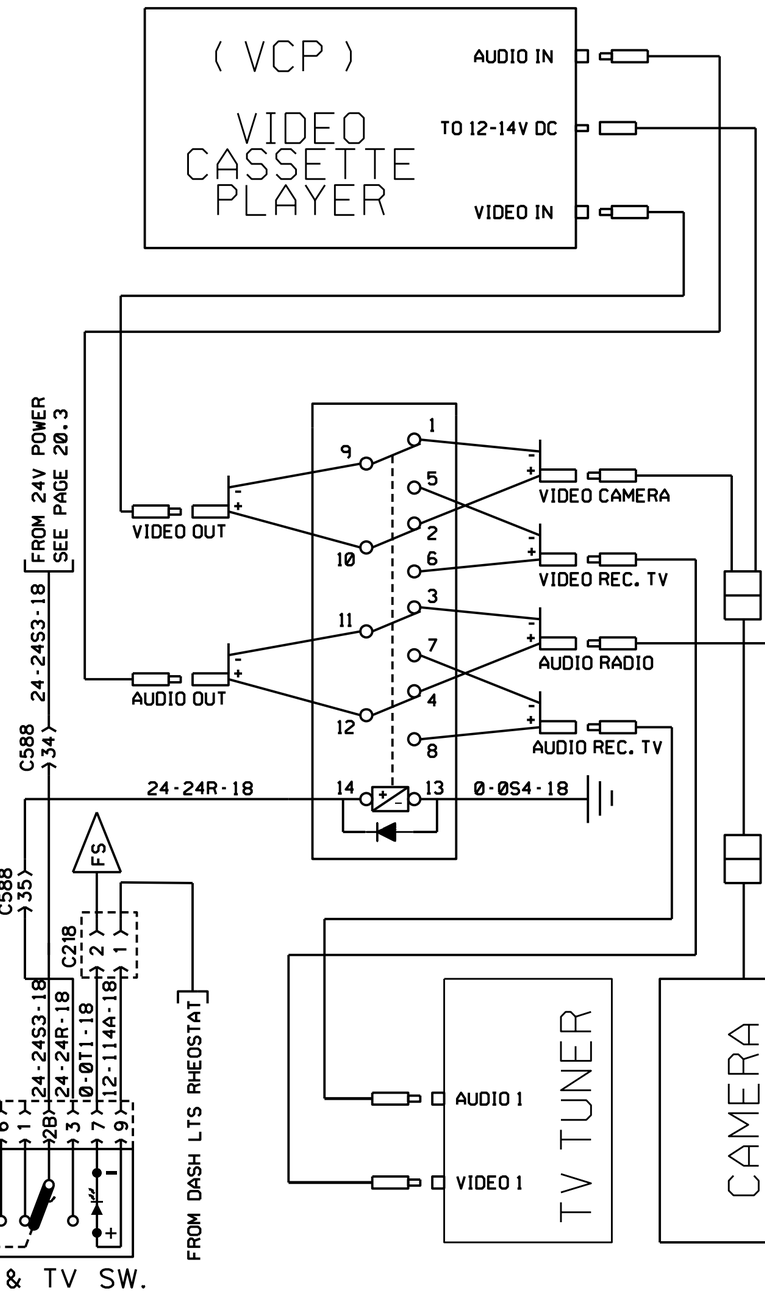


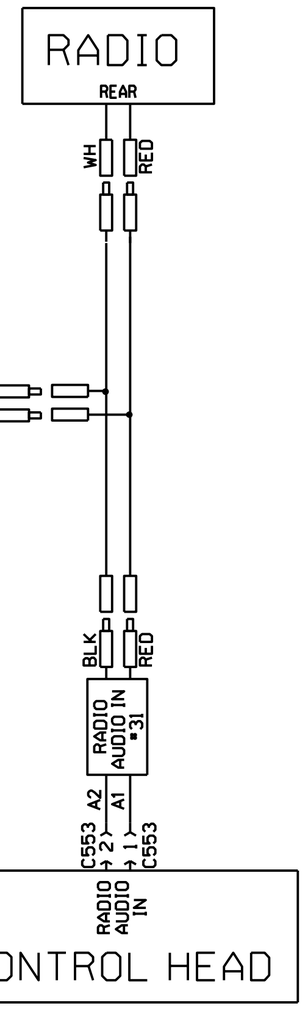


FRONT CAMERA WITH TV RECEIVER

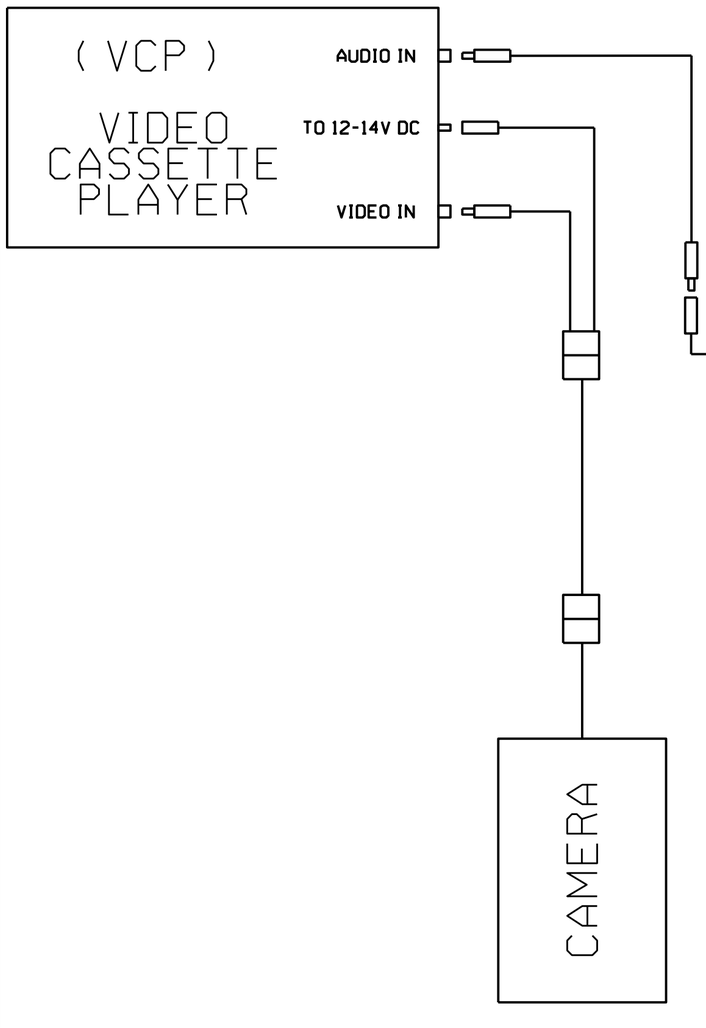


FRONT CAMERA WITHOUT TV RECEIVER

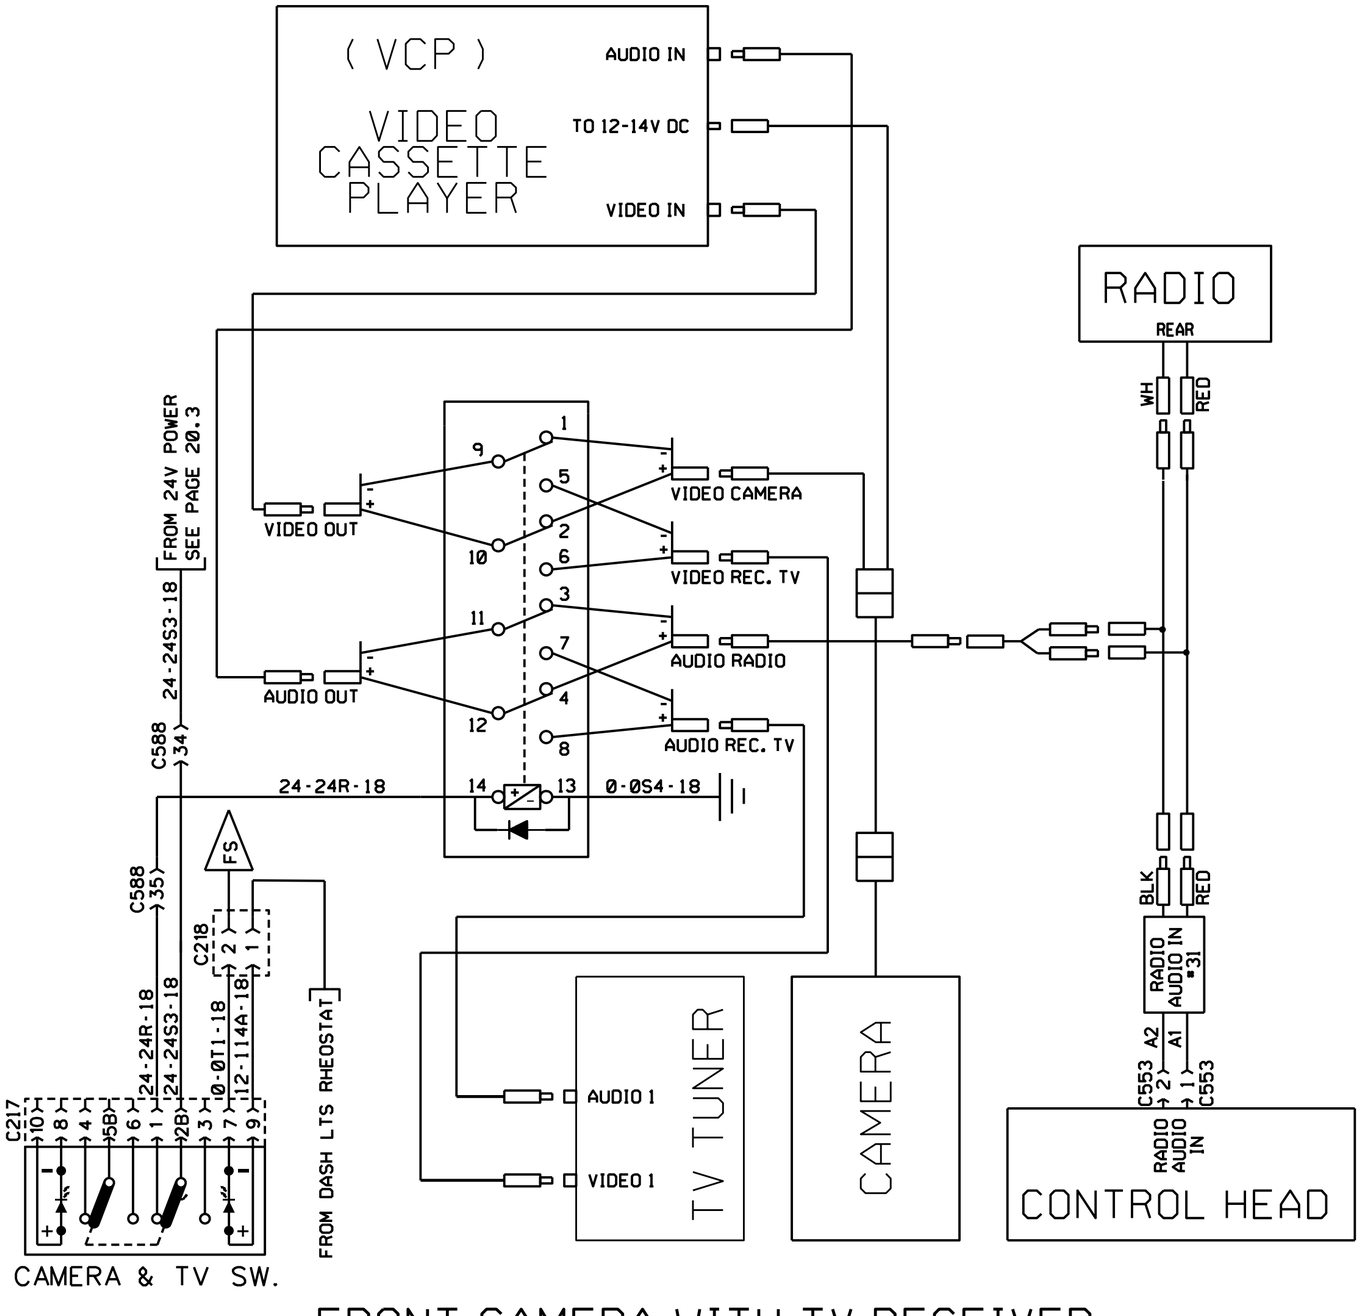


FRONT CAMERA WITH TV RECEIVER

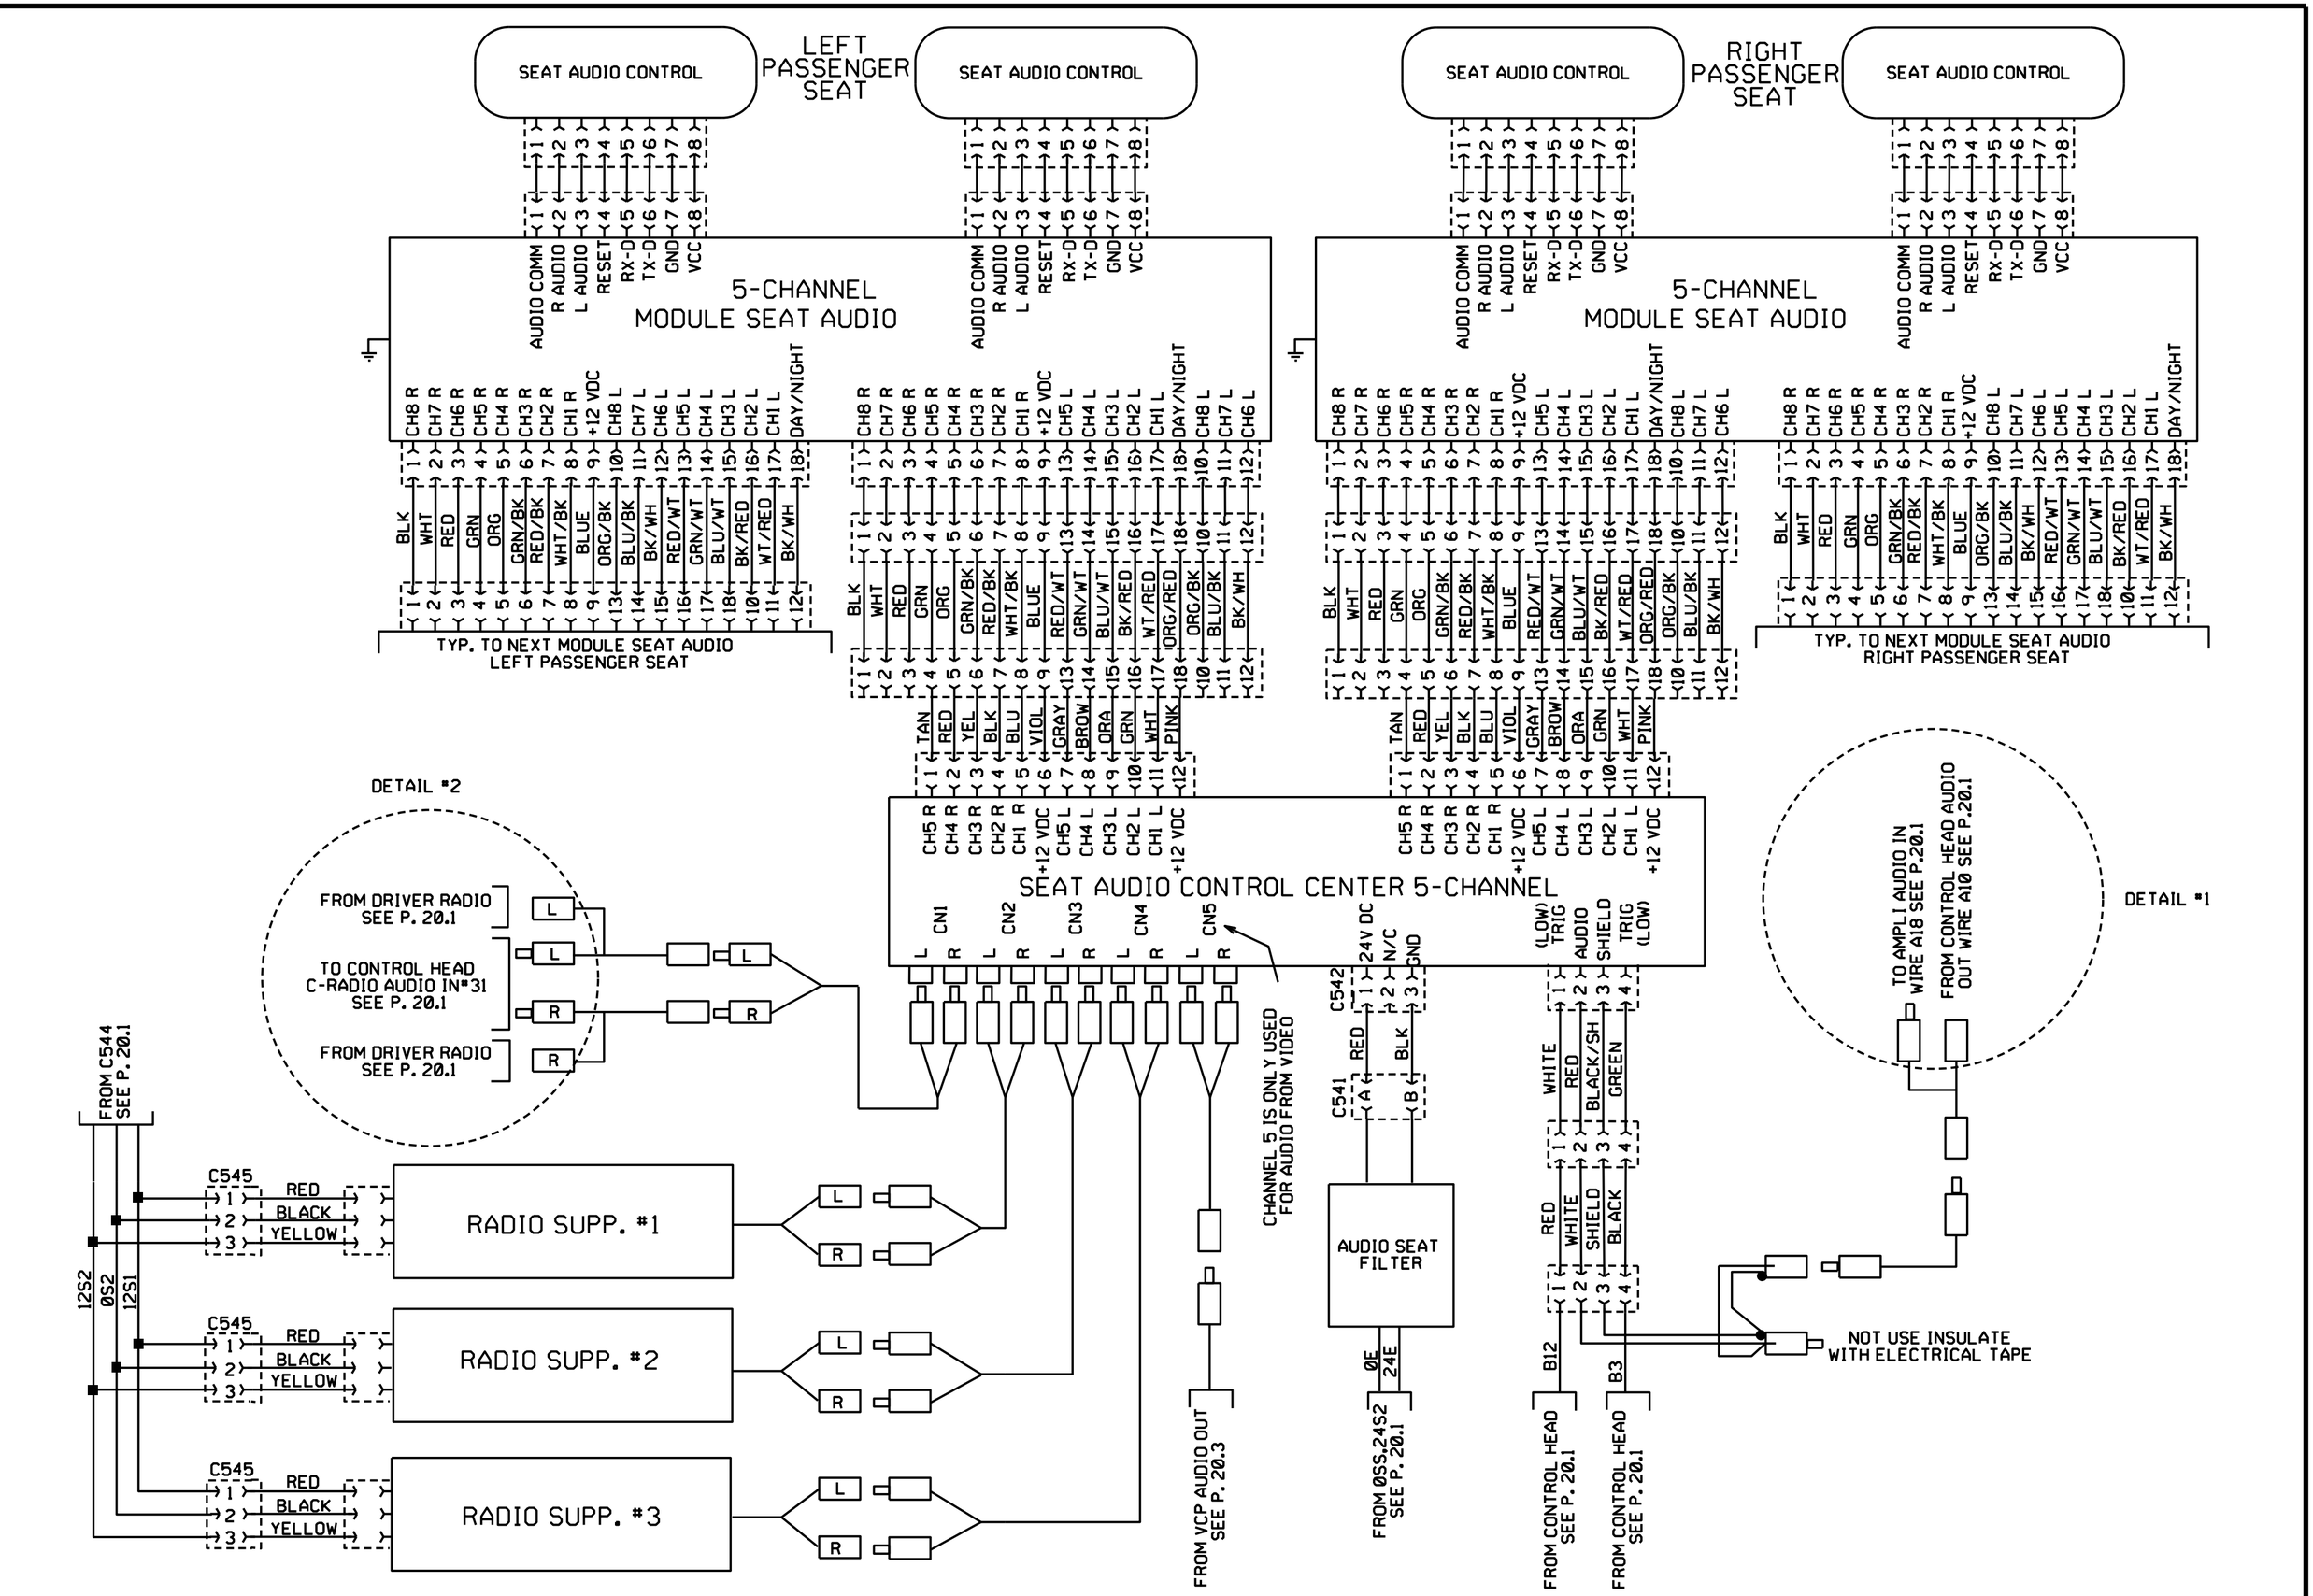


5-CHANNEL SLIM-LINE SEAT AUDIO SYSTEM

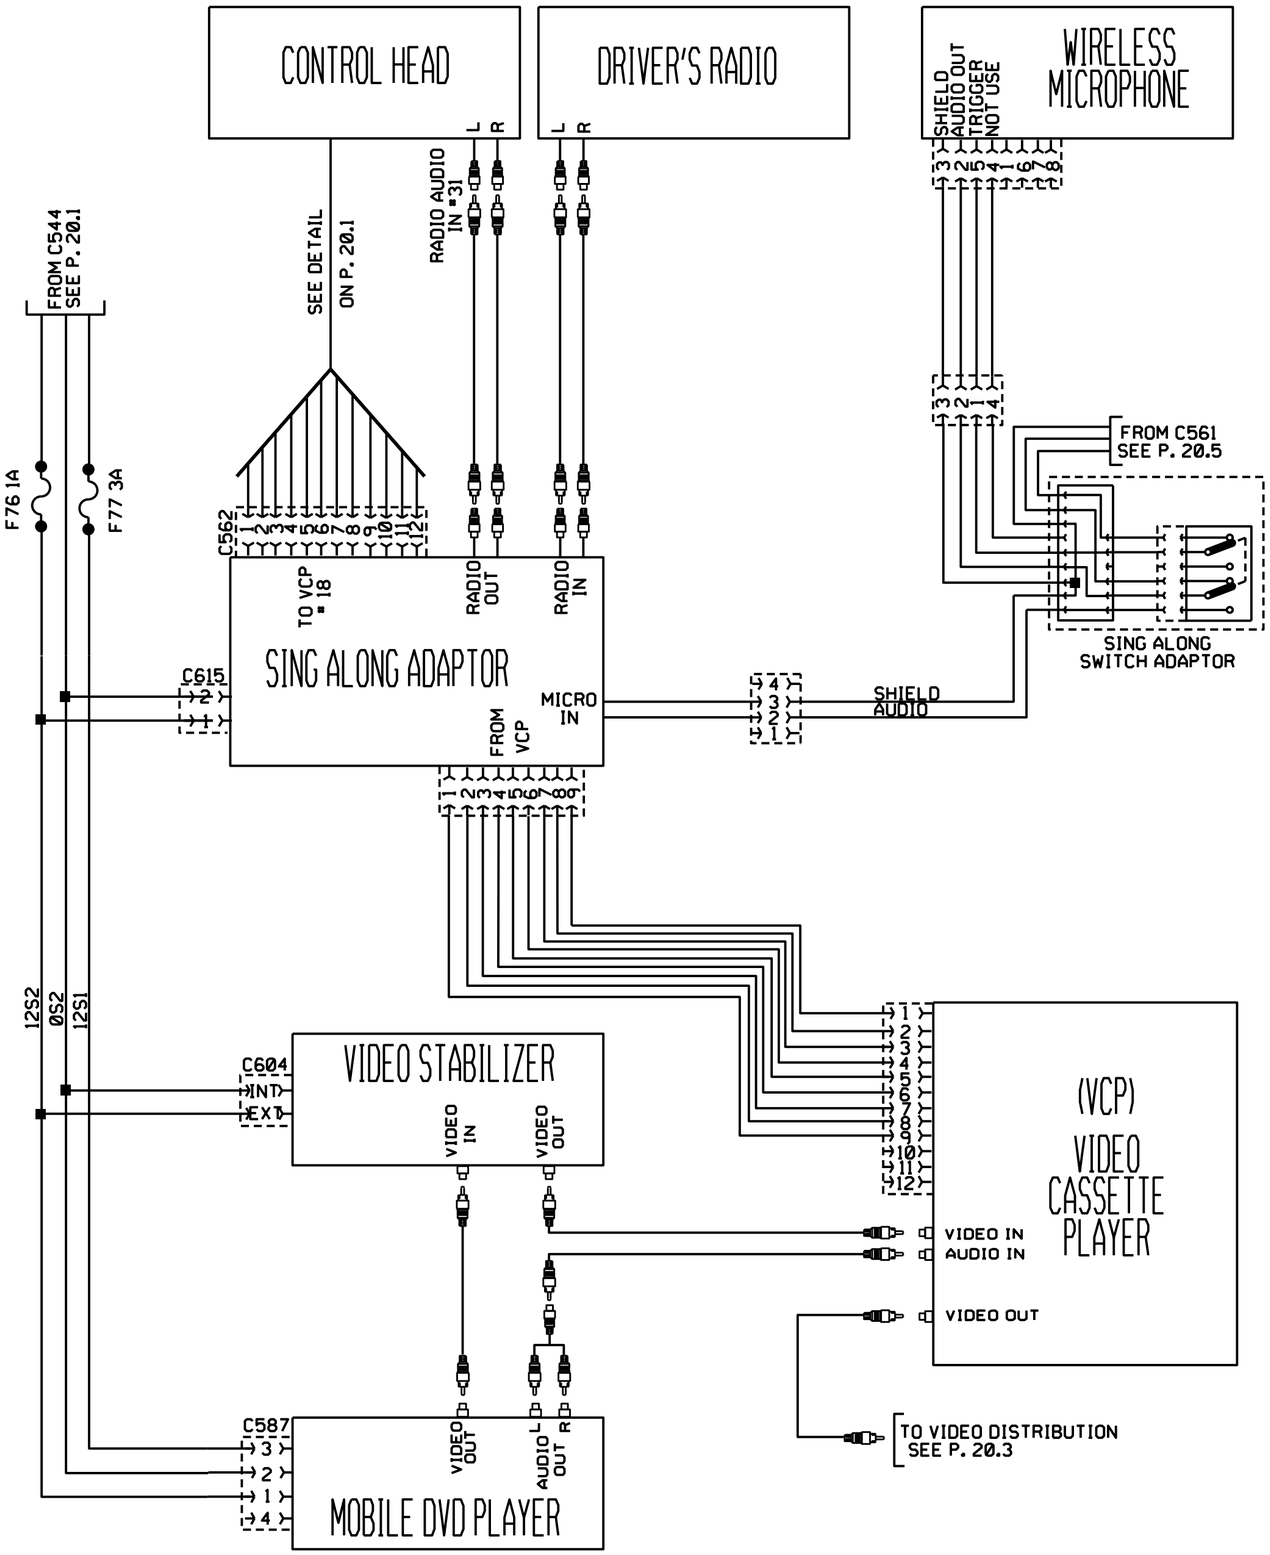


VCP AND DVD WITH KARAOKE

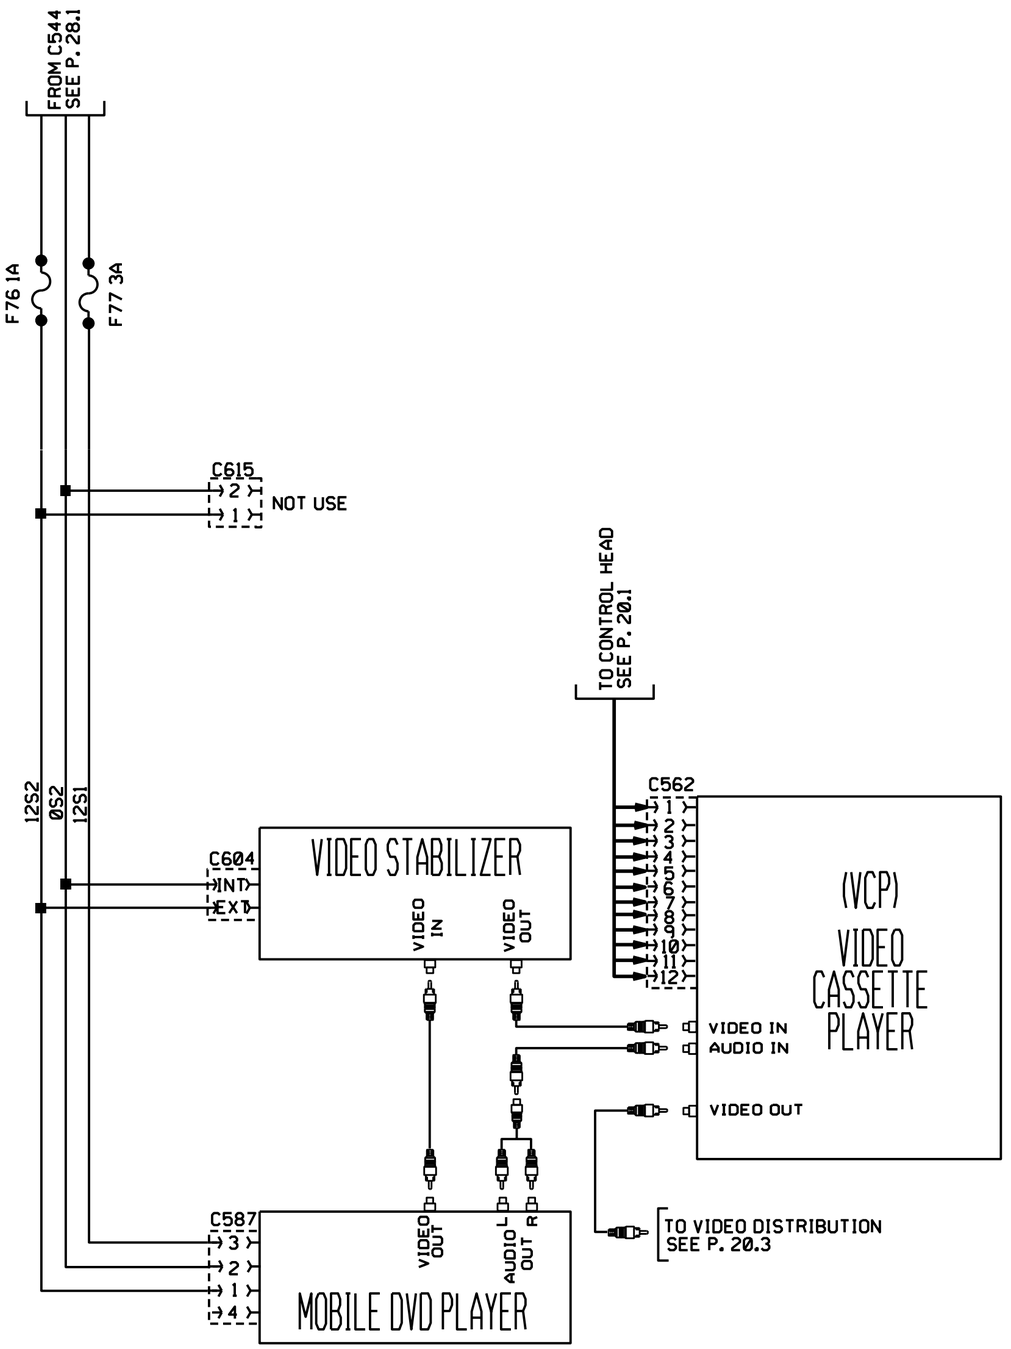


VCP AND DVD

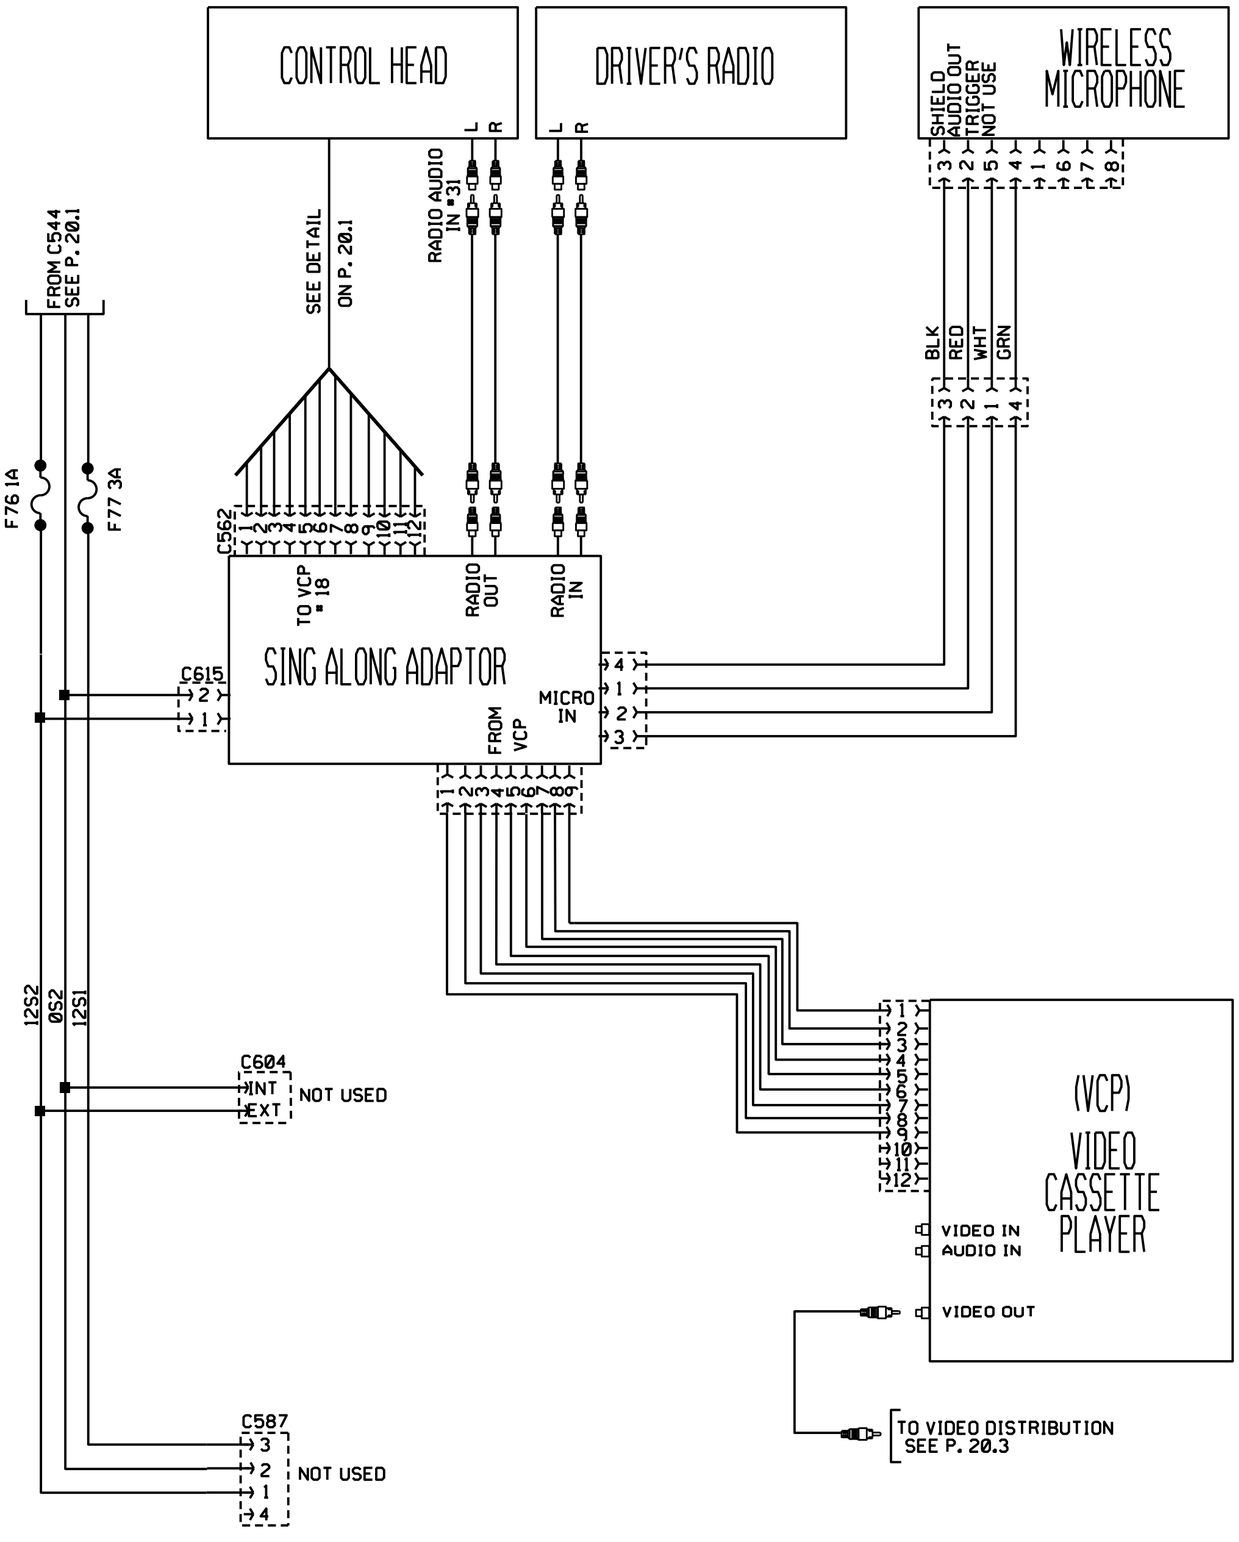

VCP AND SING ALONG ADAPTOR

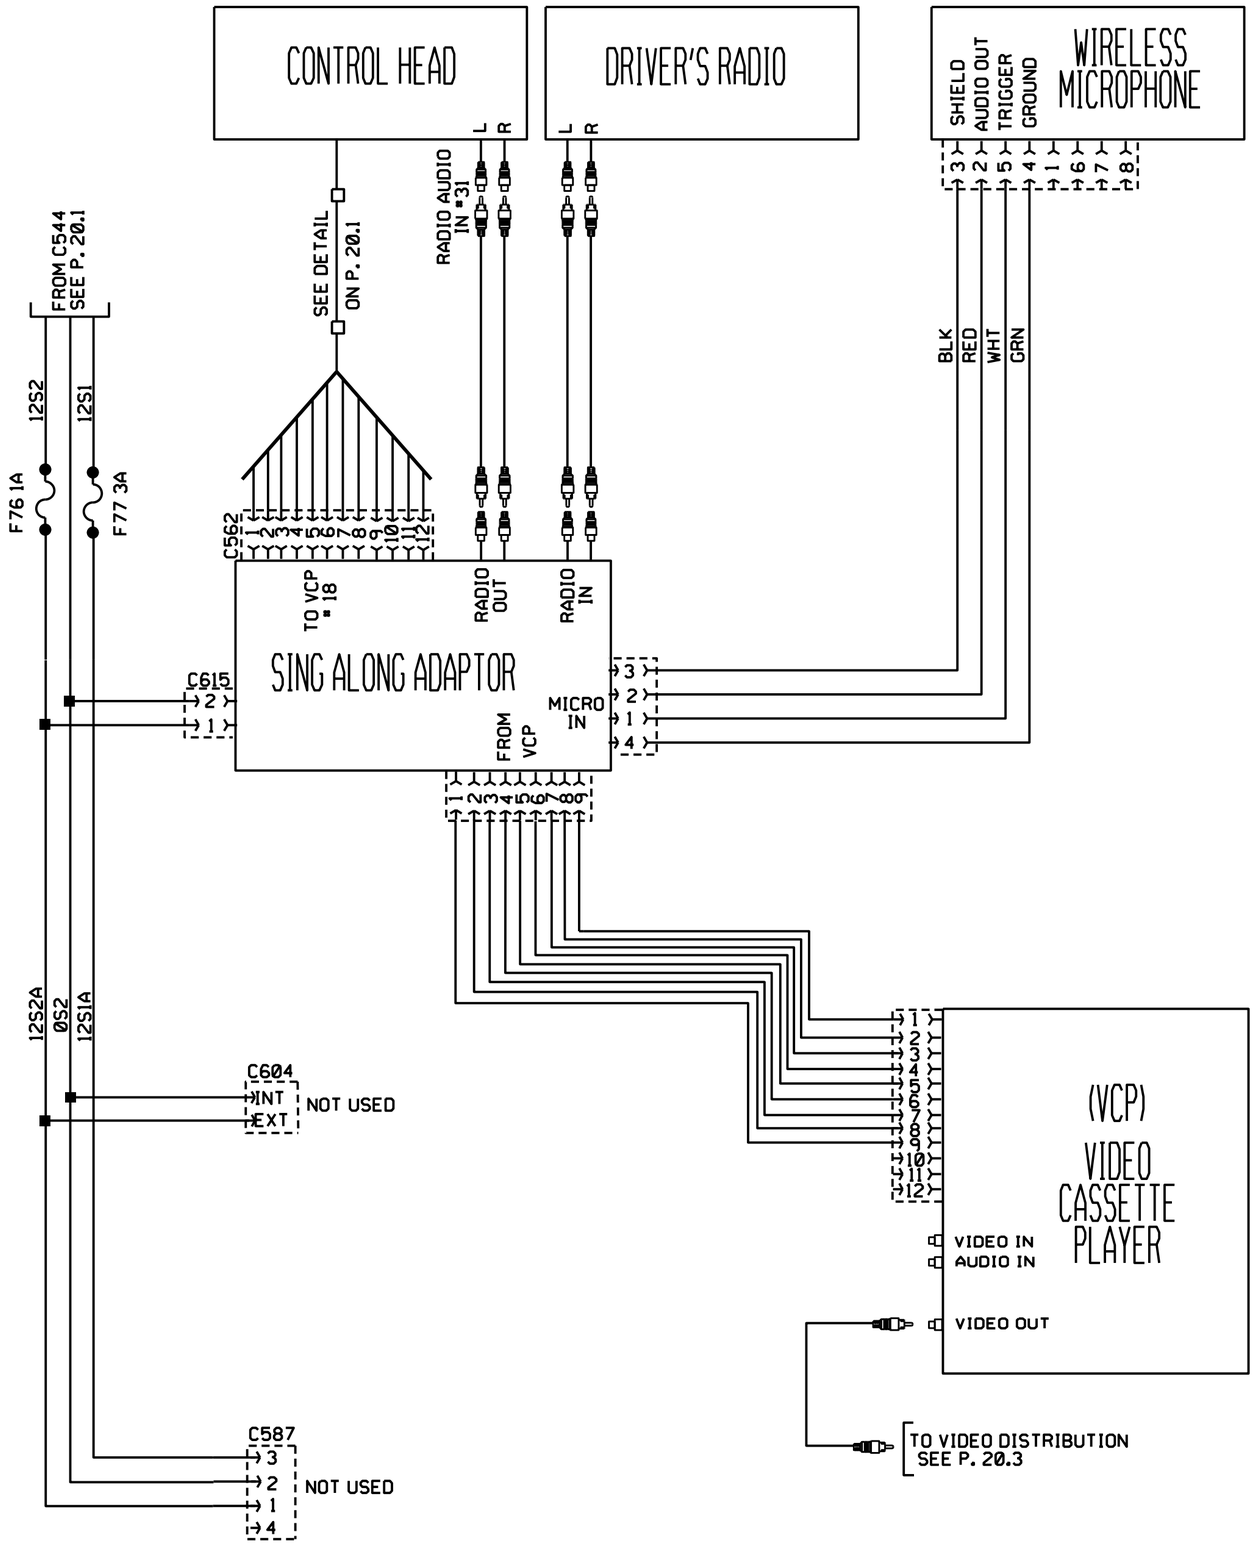

VCP AND SING ALONG ADAPTOR

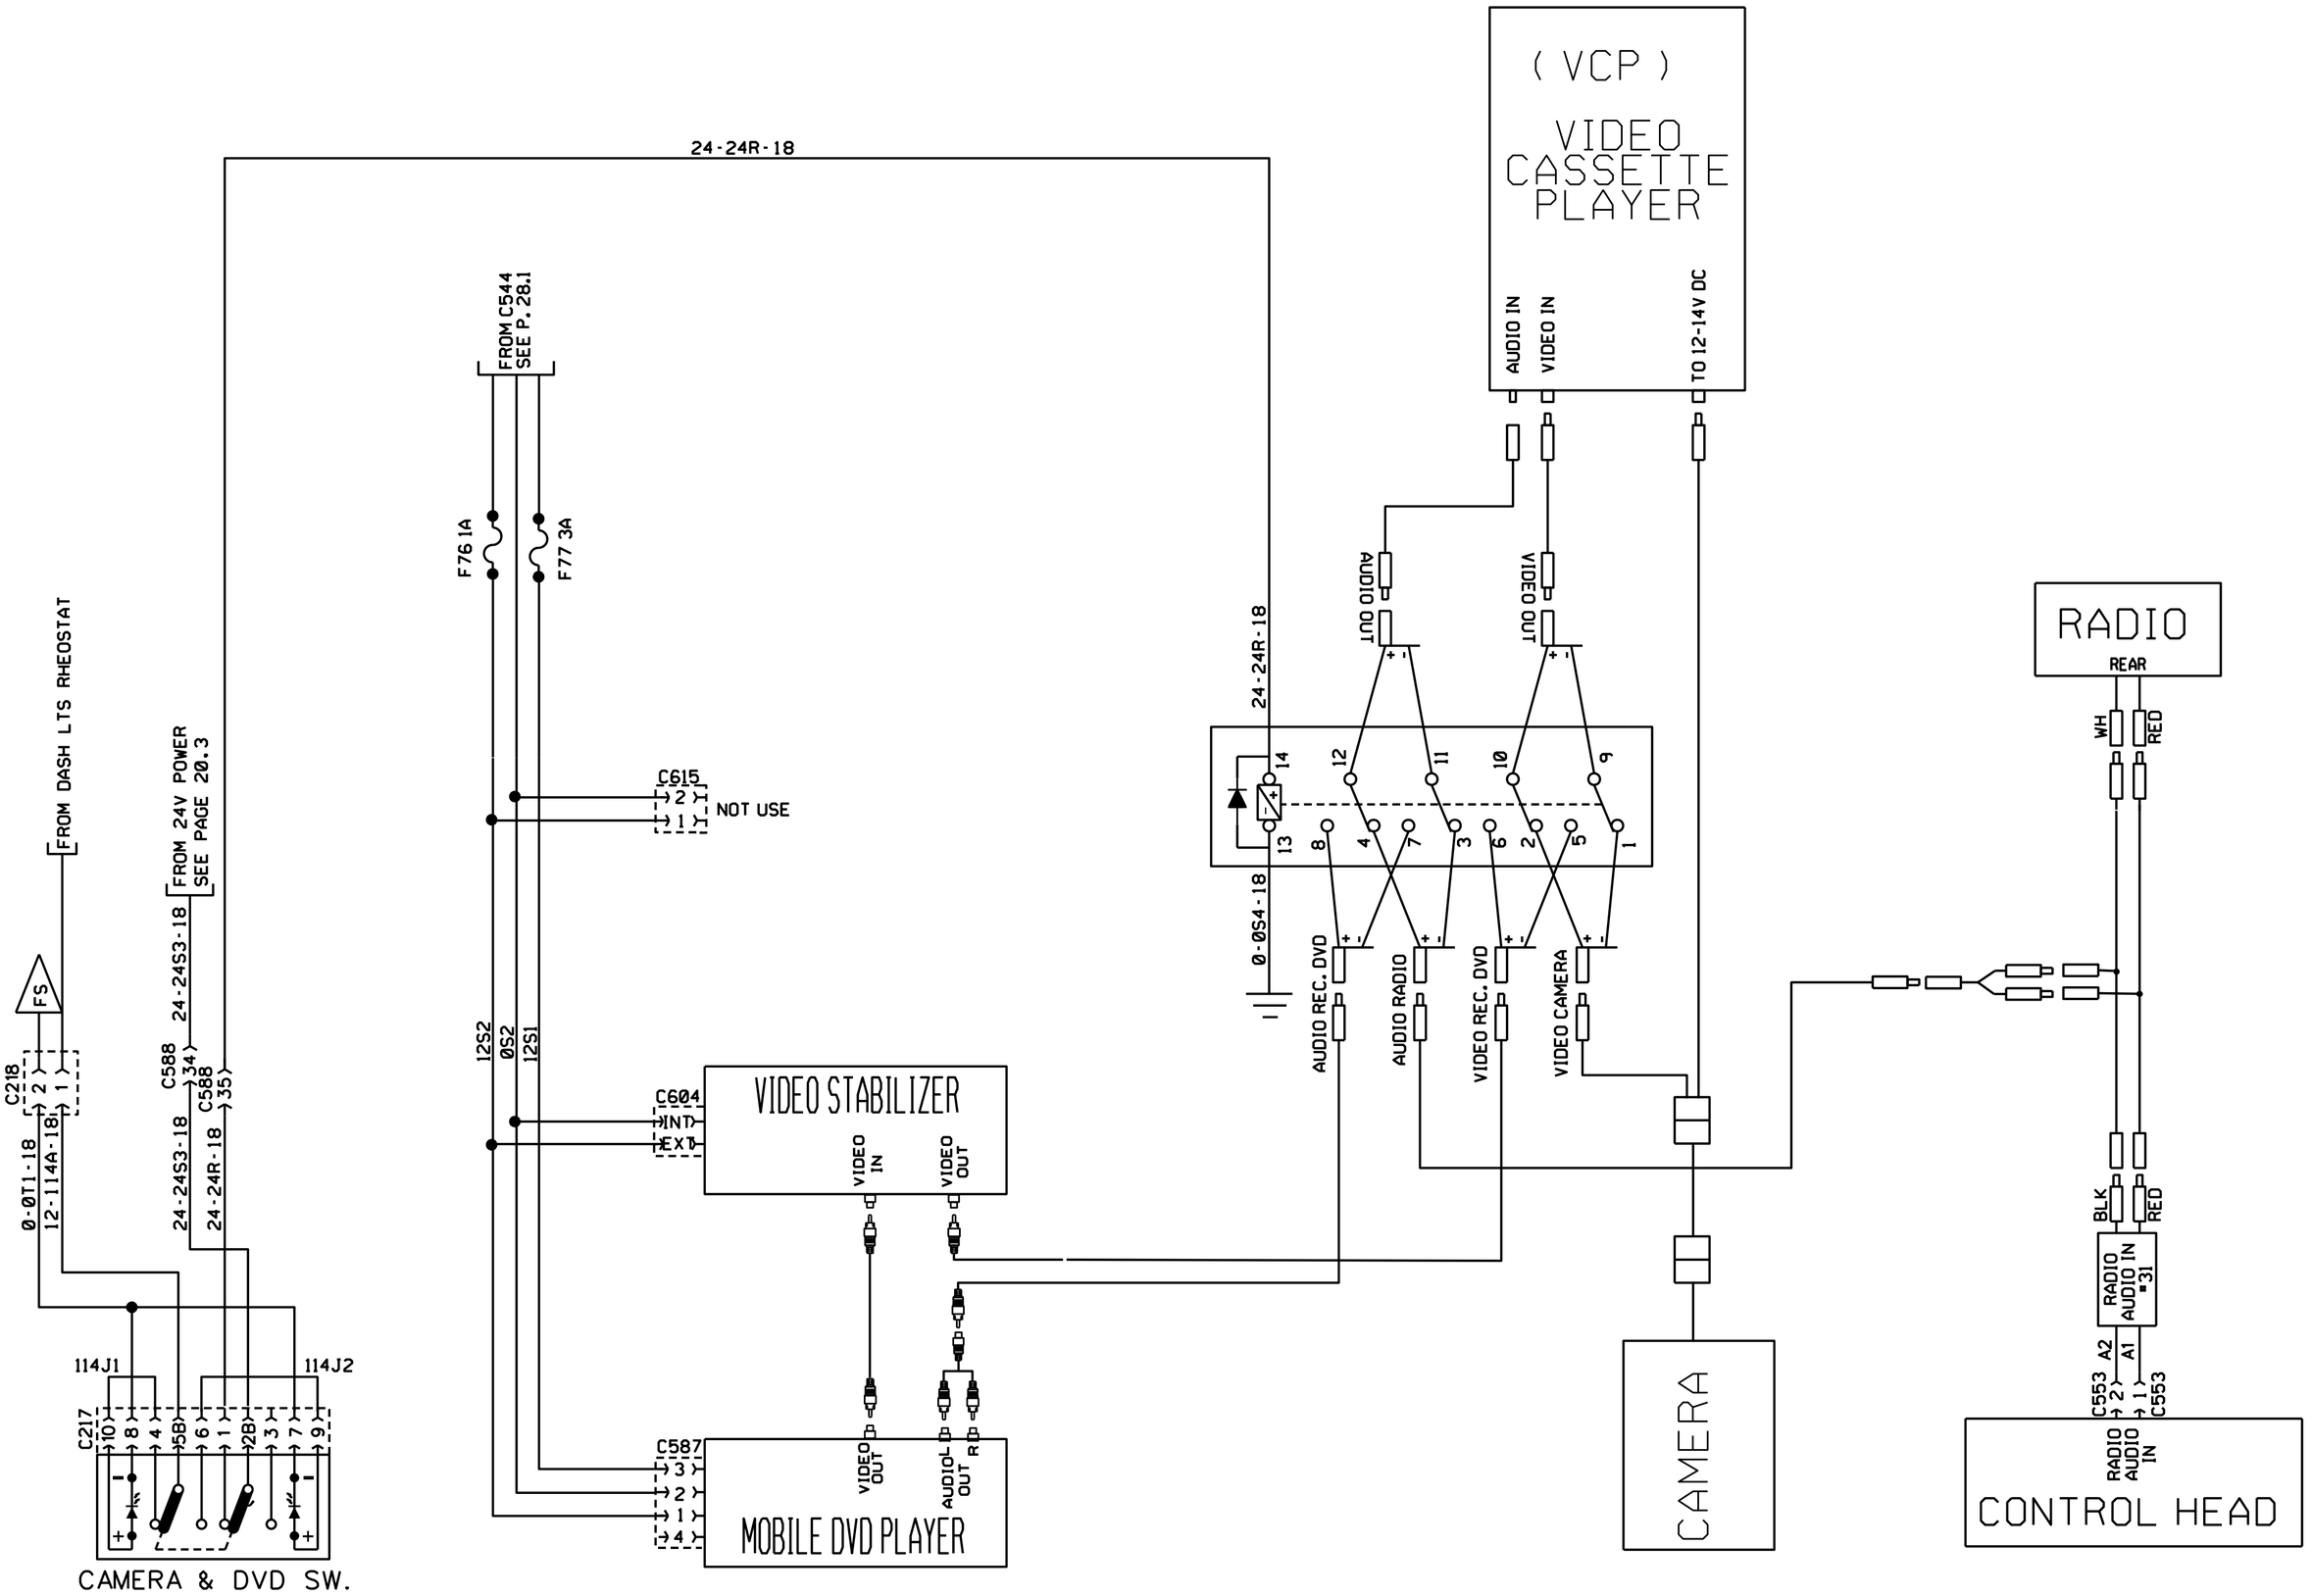

VCP, DVD AND FRONT CAMERA

PREVOST

WIRING DIAGRAM

E.C.U. - ABS (VERSION "D")

TO ENGINE BRAKE SW. SEE PAGE 19.1

36-18

87A

87

30

154-18 C3 10

C21 23 154-18 TO WORLD TRANSMISSION CV (27) SEE P. 6.1

0-953-18 BATTERY GROUND FROM FR. JCT BOX SEE P. 5.1

C21 24 161B-18 GND FROM WORLD TRANS. CONN. CV (11,31) SEE P. 6.1

CX1

17 157B-18 C92 1 85 86 R49 (ENGINE BRK)

8 24-156A-14 C92 2 24-156A-14 CB106 10A

12 0-0G-14

11 0-0Y1-14

10 0-0Y2-14

R52 85 86 87 30 C3 11

7 24-85X-18 C92 5 24-85X-18 CB105 6A 24-24I-14 24V IGNITION FROM FR JCT BOX SEE P. 1.1

18 0-85Y-18 C92 6 C74 22 0-85Y-18 TO ABS T.T.LT. MODULE C572 (6) SEE P. 28.1

0Y7-16

9 24-157A-14 C92 7 24-157-16 CB107 10A 24-24B-14

ABS TTLT CPT

BLINK SW.

24V POWER FROM FR JCT BOX SEE P. 1.1

TWISTED 30/METER

13 901-18 C406 B 901-18 J1587 DATA LINK SIGNAL FROM DDEC ECM SEE P. 5.1

14 900-18 A 900-18

CX2

TWISTED 30/METER

4 138-18 C96 3 BRN C163 SENSOR

5 138A-18 C96 2 BLK C163 SENSOR

C162

1 24-139-16 C96 1 BLU C162 2 OUTLET VALVE

2 24-140-16 C96 7 BRN C162 3 INLET VALVE

3 0-0Y3-16 C96 8 GRN/YEL C162 1

0-0Y4-16 C96 4 GRN/YEL C162 1

CX3

7 24-141-16 C96 6 BLU C162 2 OUTLET VALVE

8 24-142-16 C96 5 BRN C162 3 INLET VALVE

C161

9 0-0Y4-16

TWISTED 30/METER

5 143A-18 C96 10 BLK C160 SENSOR

4 143-18 C96 11 BRN C160 SENSOR

CX4

7 151-16 151-16 C97 B C168 A

4 152-16 152-16 C97 A C168 B

TWISTED 30/METER

5 144-18 C69 F C164 2 SENSOR

6 144A-18 C69 E C164 1 SENSOR

C165

1 24-145-16 C69 D BLU C165 2 OUTLET VALVE

2 24-146-16 C69 C BRN C165 3 INLET VALVE

3 0-0Y5-16 C97 F GRN/YEL C165 1

12 0-0Y6-16 C97 C GRN/YEL C166 1

C166

10 24-147-16 C69 B BLU C166 2 OUTLET VALVE

11 24-148-16 C69 A BRN C166 3 INLET VALVE

TWISTED 30/METER

9 149A-18 C97 E C167 1 SENSOR

8 149-18 C97 D C167 2 SENSOR

FRONT AXLE

LH WHEEL "L2"

RH WHEEL "L1"

DRIVE AXLE

LH WHEEL "A1"

RH WHEEL "A2"

NO: D060949

PAGE: 21.1

REVISION 00

PREVOST

WIRING DIAGRAM

E.C.U. - ABS (VERSION "D")

FRONT AXLE — DRIVE AXLE

TO ENGINE BRAKE SW. SEE PAGE 19.1

36-18

CX1

C92

87A / 87 / 30 / 85 / 86

R49 (ENGINE BRK)

154-18 C3 10 — C21 23 — 154-18 — TO WORLD TRANSMISSION CV (27) SEE P. 6.1

0-953-18 — BATTERY GROUND FROM FR. JCT BOX SEE P. 5.1

C21 24 — 161B-18 — GND FROM WORLD TRANS. CONN. CV (11,31) SEE P. 6.1

CB106 10A

R52

C3 11

CB105 6A

CB107 10A

17	157B-18	1	85 / 86	
8	24-156A-14	2	24-156A-14	
12	0-0G-14			
11	0-0Y1-14			
10	0-0Y2-14			
7	24-85X-18	5	24-85X-18 / 24-241-14	24V IGNITION FROM FR JCT BOX SEE P. 1.1
18	0-85Y-18	6	C74 22 — 0-85Y-18	TO ABS T.T.LT. MODULE C572 (6) SEE P. 28.1
9	24-157A-14	7	24-157-16	24-24B-14

0Y7-16

ABS TTLT CPT

BLINK SW.

24V POWER FROM FR JCT BOX SEE P. 1.1

TWISTED 30/METER

C406

13	901-18	B	901-18 — J1587 DATA LINK SIGNAL FROM DDEC ECM SEE P. 5.1
14	900-18	A	900-18

CX2

C96

C163

SENSOR

C162

OUTLET VALVE

INLET VALVE

LH WHEEL "L2"

RH WHEEL "L1"

C161

4	138-18	3	BRN	
5	138A-18	2	BLK	
1	24-139-16	1	BLU	2
2	24-140-16	7	BRN	3
3	0-0Y3-16	8	GRN/YEL	1
	0-0Y4-16	4	GRN/YEL	1

CX3

7	24-141-16	6	BLU	2
8	24-142-16	5	BRN	3
9	0-0Y4-16			
5	143A-18	10	BLK	
4	143-18	11	BRN	

C160

SENSOR

CX4

7	151-16	151-16	B	A
4	152-16	152-16	A	B

C97 — C168

C69 — C164

SENSOR

C165

OUTLET VALVE

INLET VALVE

LH WHEEL "A1"

5	144-18	F	2
6	144A-18	E	1
1	24-145-16	D	BLU
2	24-146-16	C	BRN
3	0-0Y5-16	C97 F	GRN/YEL
12	0-0Y6-16	C	GRN/YEL
10	24-147-16	C69 B	BLU
11	24-148-16	A	BRN

C166

OUTLET VALVE

INLET VALVE

RH WHEEL "A2"


9	149A-18	C97 E	C167 1	SENSOR
8	149-18	D	2	

NO: D060949

PAGE: 21.1

REVISION 08

E.C.U. - ABS (VERSION "D")

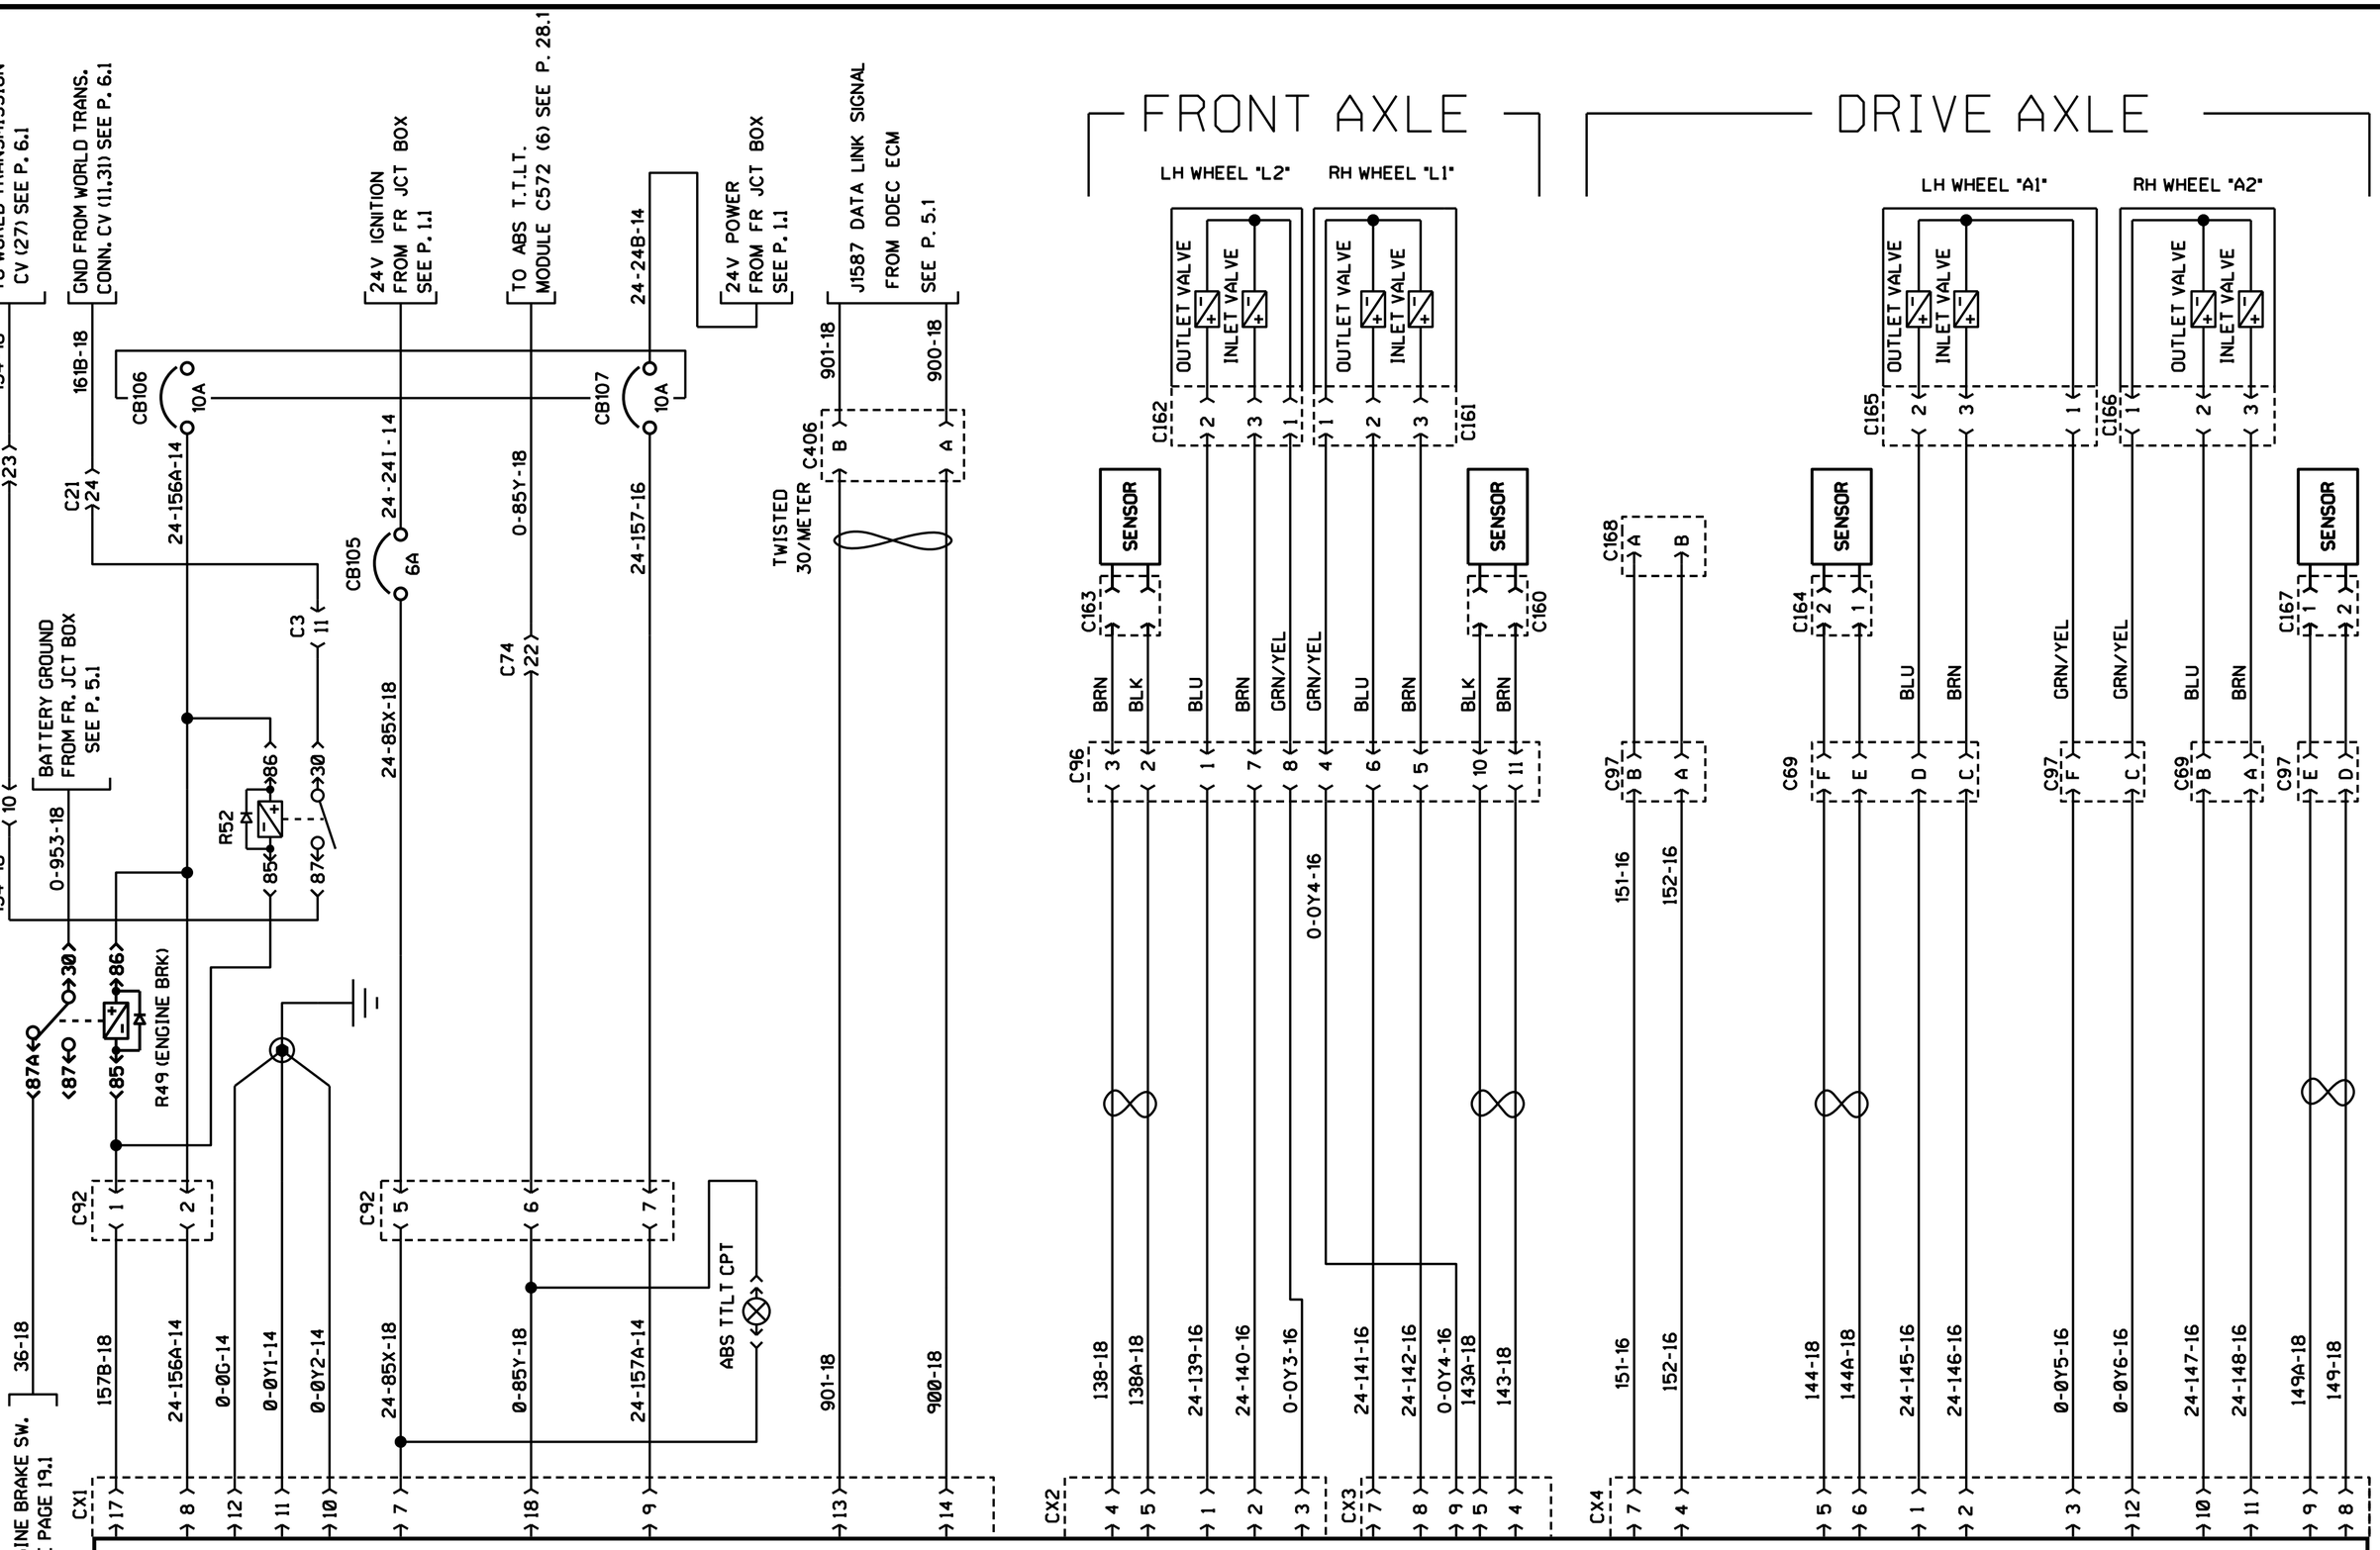

PREVOST

WIRING DIAGRAM

E.C.U. - ABS (VERSION "D")

TO ENGINE BRAKE SW. SEE PAGE 19.1

36-18

87A / 87 / 30 / 85 / 86

R49 (ENGINE BRK)

154-18 C3 10 → C21 23 154-18 TO WORLD TRANSMISSION CV (27) SEE P. 6.1

0-953-18 BATTERY GROUND FROM FR. JCT BOX SEE P. 5.1

C21 24 161B-18 GND FROM WORLD TRANS. CONN. CV (11,31) SEE P. 6.1

CX1

17 157B-18 C92 1

8 24-156A-14 C92 2 → 24-156A-14 CB106 10A

12 0-0G-14

11 0-0Y1-14

10 0-0Y2-14

R52 85 86 87 30 C3 11

7 24-85X-18 C92 5 → 24-85X-18 CB105 6A → 24-241-14 24V IGNITION FROM FR JCT BOX SEE P. 1.1

RS14

18 0-85Y-18 C92 6 → C74 22 0-85Y-18 TO ABS T.T.LT. MODULE C572 (6) SEE P. 28.1

9 24-157A-14 C92 7 → 24-157-16 CB107 10A → 24-24B-14

24V POWER FROM FR JCT BOX SEE P. 1.1

TWISTED 30/METER

13 901-18 C406 B 901-18 J1587 DATA LINK SIGNAL FROM DDEC ECM SEE P. 5.1

14 900-18 C406 A 900-18

CX2

4 138-18 C96 3 BRN C163 SENSOR

5 138A-18 C96 2 BLK C163 SENSOR

1 24-139-16 C96 1 BLU C162 OUTLET VALVE / INLET VALVE

2 24-140-16 C96 7 BRN C162 OUTLET VALVE / INLET VALVE

3 0-0Y3-16 C96 8 GRN/YEL C162 OUTLET VALVE / INLET VALVE

0-0Y4-16 C96 4 GRN/YEL C161 OUTLET VALVE / INLET VALVE

CX3

7 24-141-16 C96 6 BLU C161 OUTLET VALVE / INLET VALVE

8 24-142-16 C96 5 BRN C161 OUTLET VALVE / INLET VALVE

9 0-0Y4-16

5 143A-18 C96 10 BLK C160 SENSOR

4 143-18 C96 11 BRN C160 SENSOR

FRONT AXLE

LH WHEEL "L2"

RH WHEEL "L1"

DRIVE AXLE

CX4

7 151-16 151-16 C97 B C168 A

4 152-16 152-16 C97 A C168 B

5 144-18 C69 F C164 2 SENSOR

6 144A-18 C69 E C164 1 SENSOR

1 24-145-16 C69 D BLU C165 OUTLET VALVE / INLET VALVE

2 24-146-16 C69 C BRN C165 OUTLET VALVE / INLET VALVE

LH WHEEL "A1"

3 0-0Y5-16 C97 F GRN/YEL C165 1

12 0-0Y6-16 C97 C GRN/YEL C166 1

10 24-147-16 C69 B BLU C166 OUTLET VALVE / INLET VALVE

11 24-148-16 C69 A BRN C166 OUTLET VALVE / INLET VALVE

RH WHEEL "A2"


9 149A-18 C97 E C167 1 SENSOR

8 149-18 C97 D C167 2 SENSOR


NO: D060949

PAGE: 21.1


REVISION 16

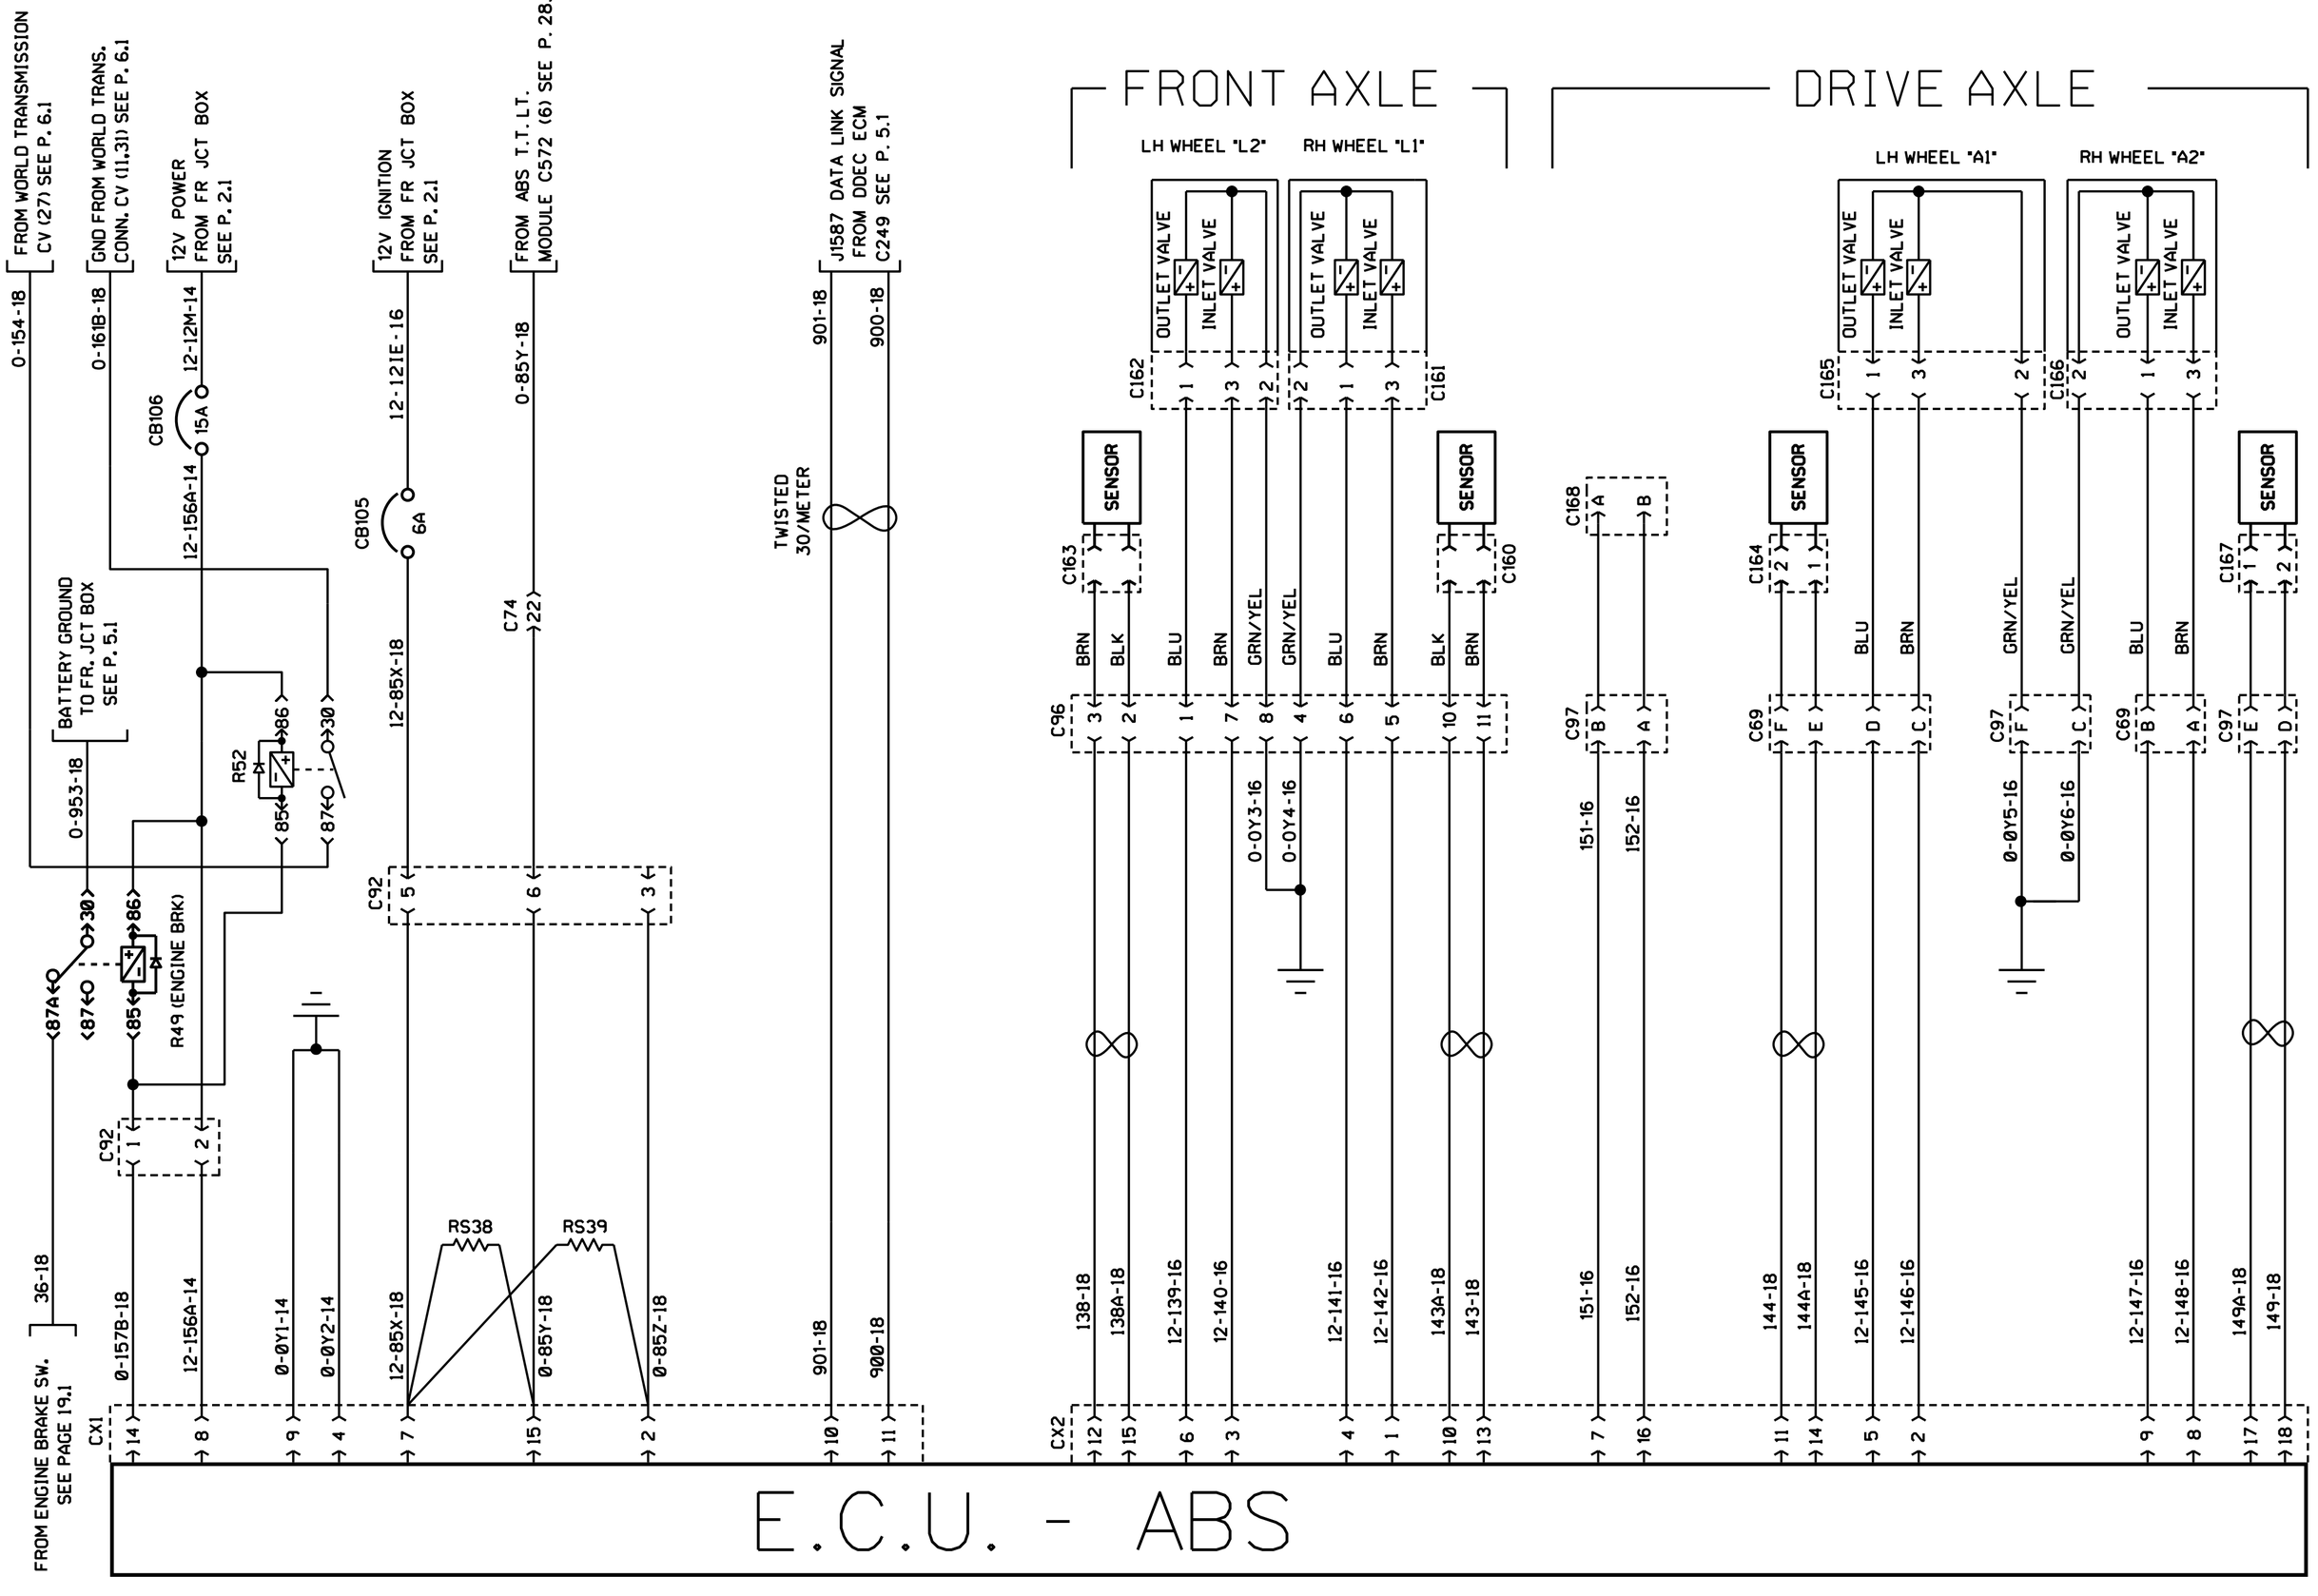


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 21.1	REVISION 20

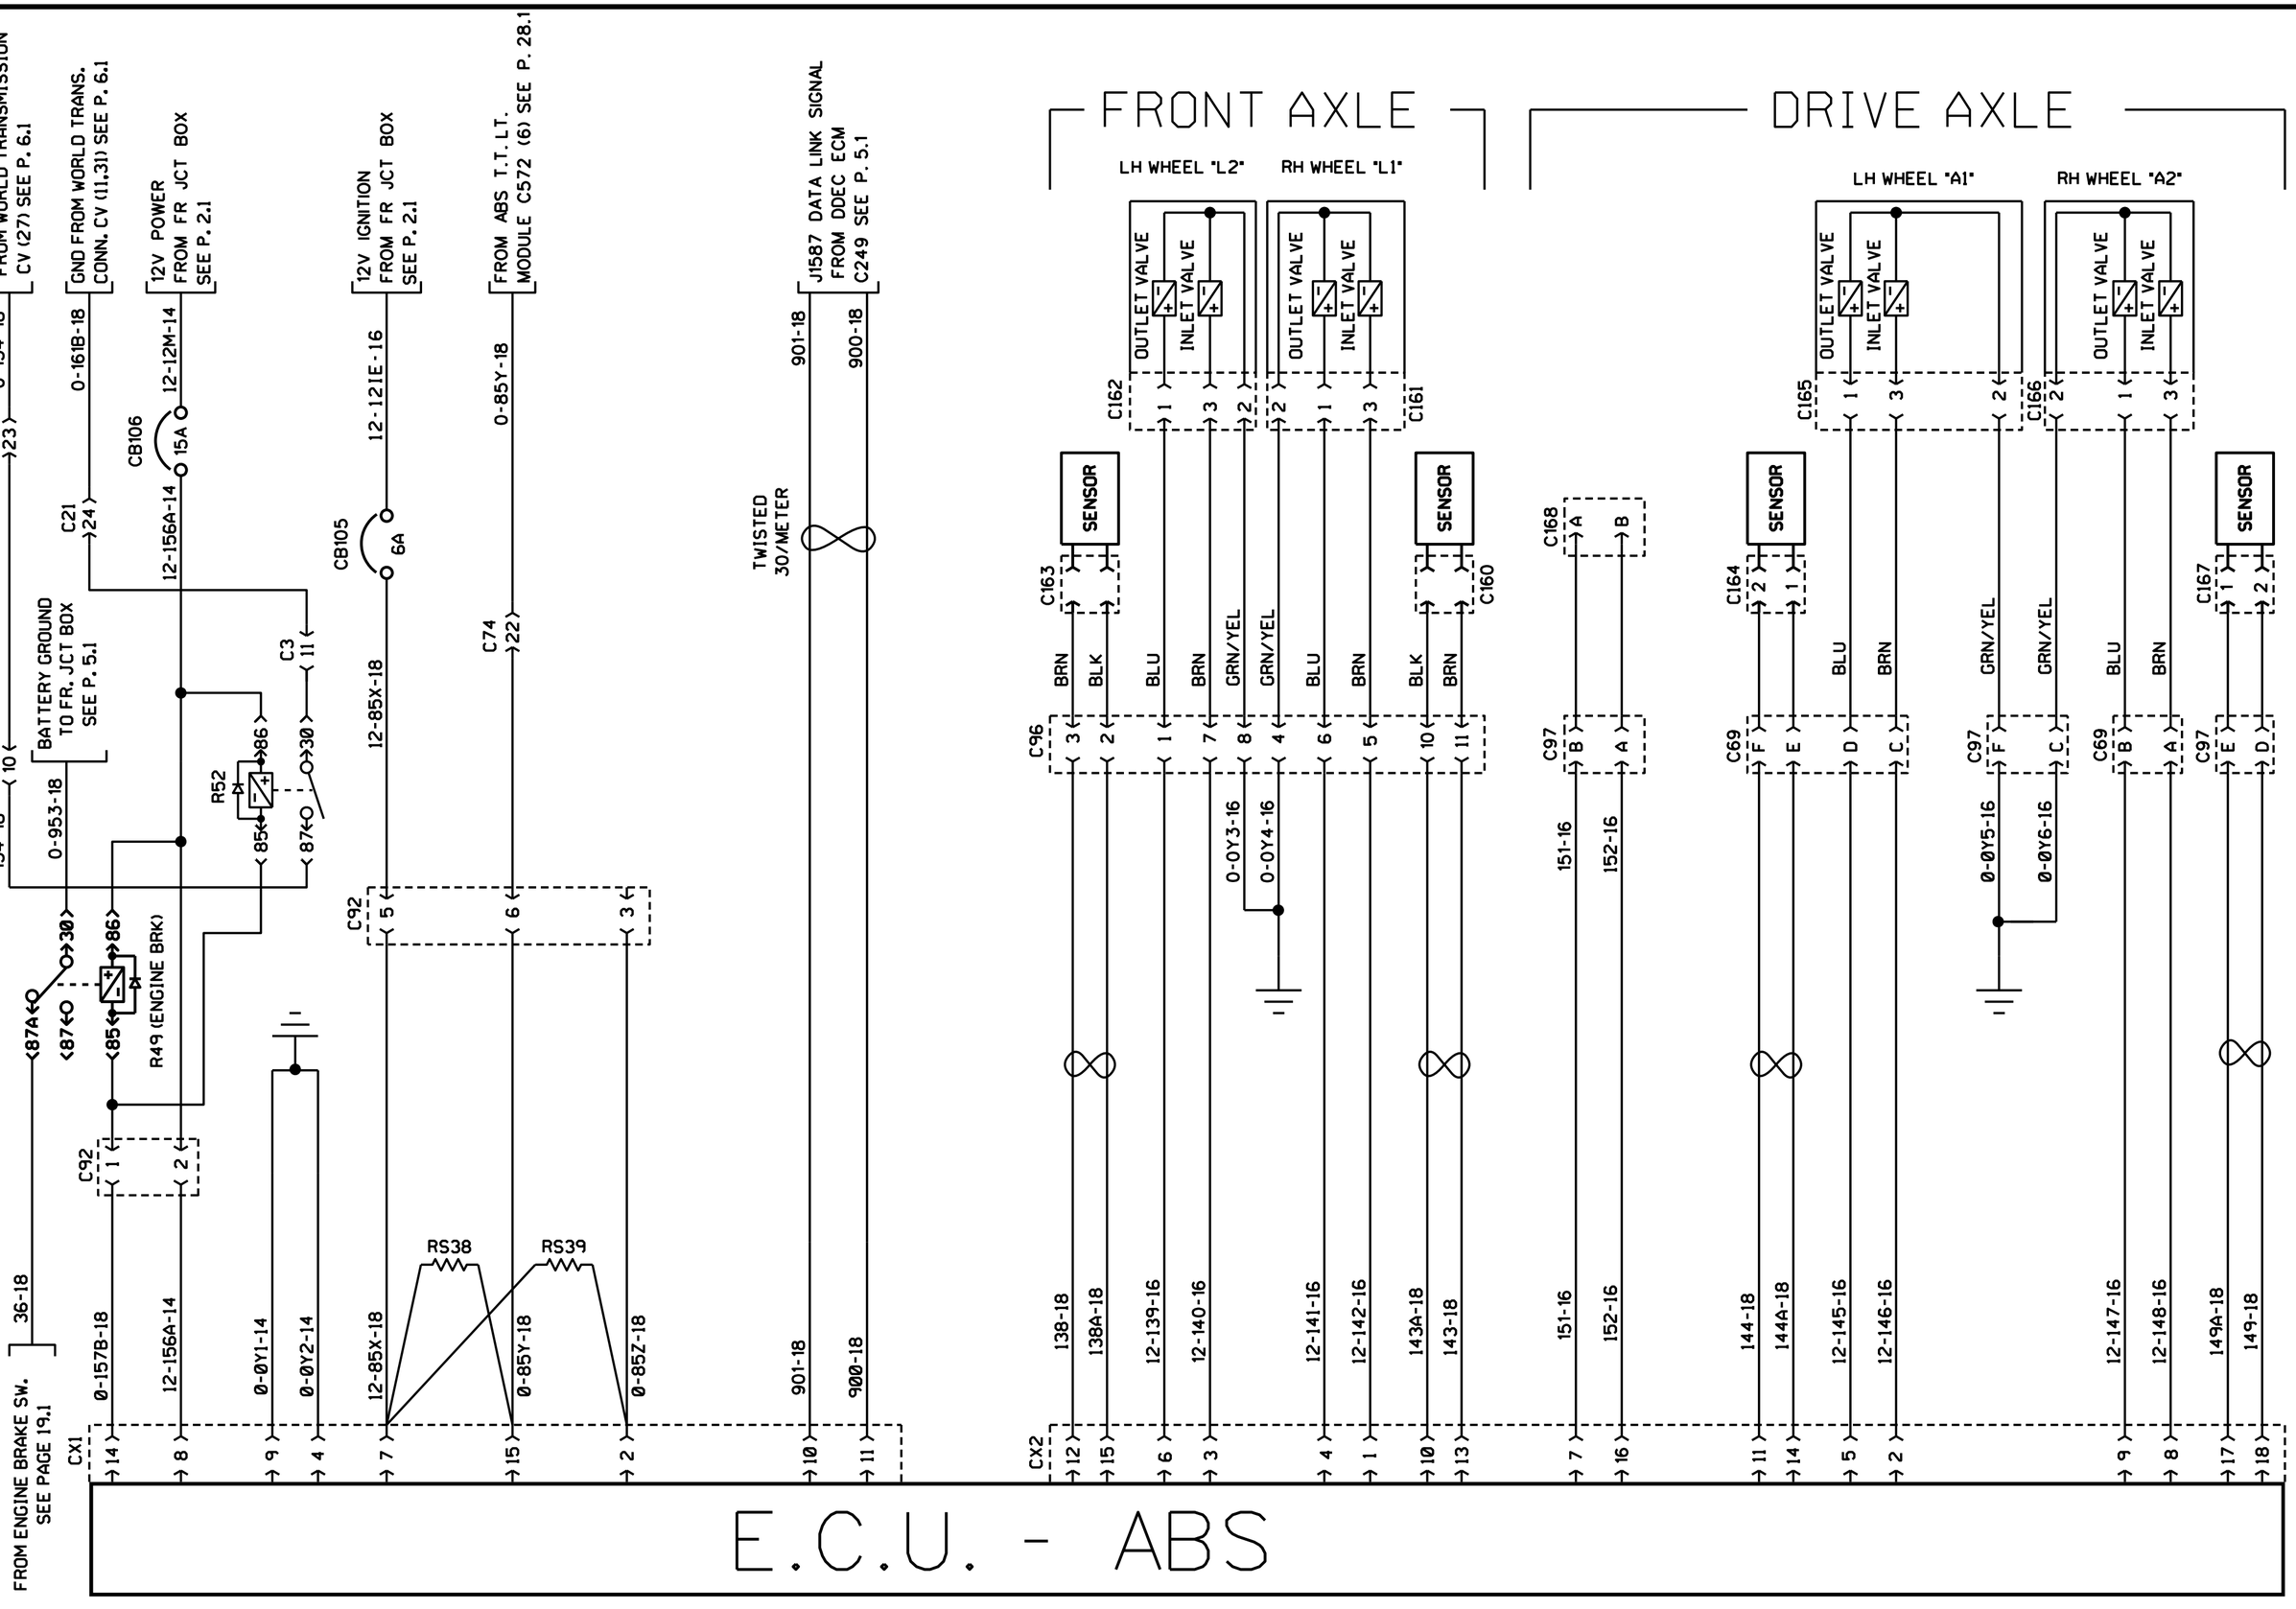

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 21.1	REVISION 22

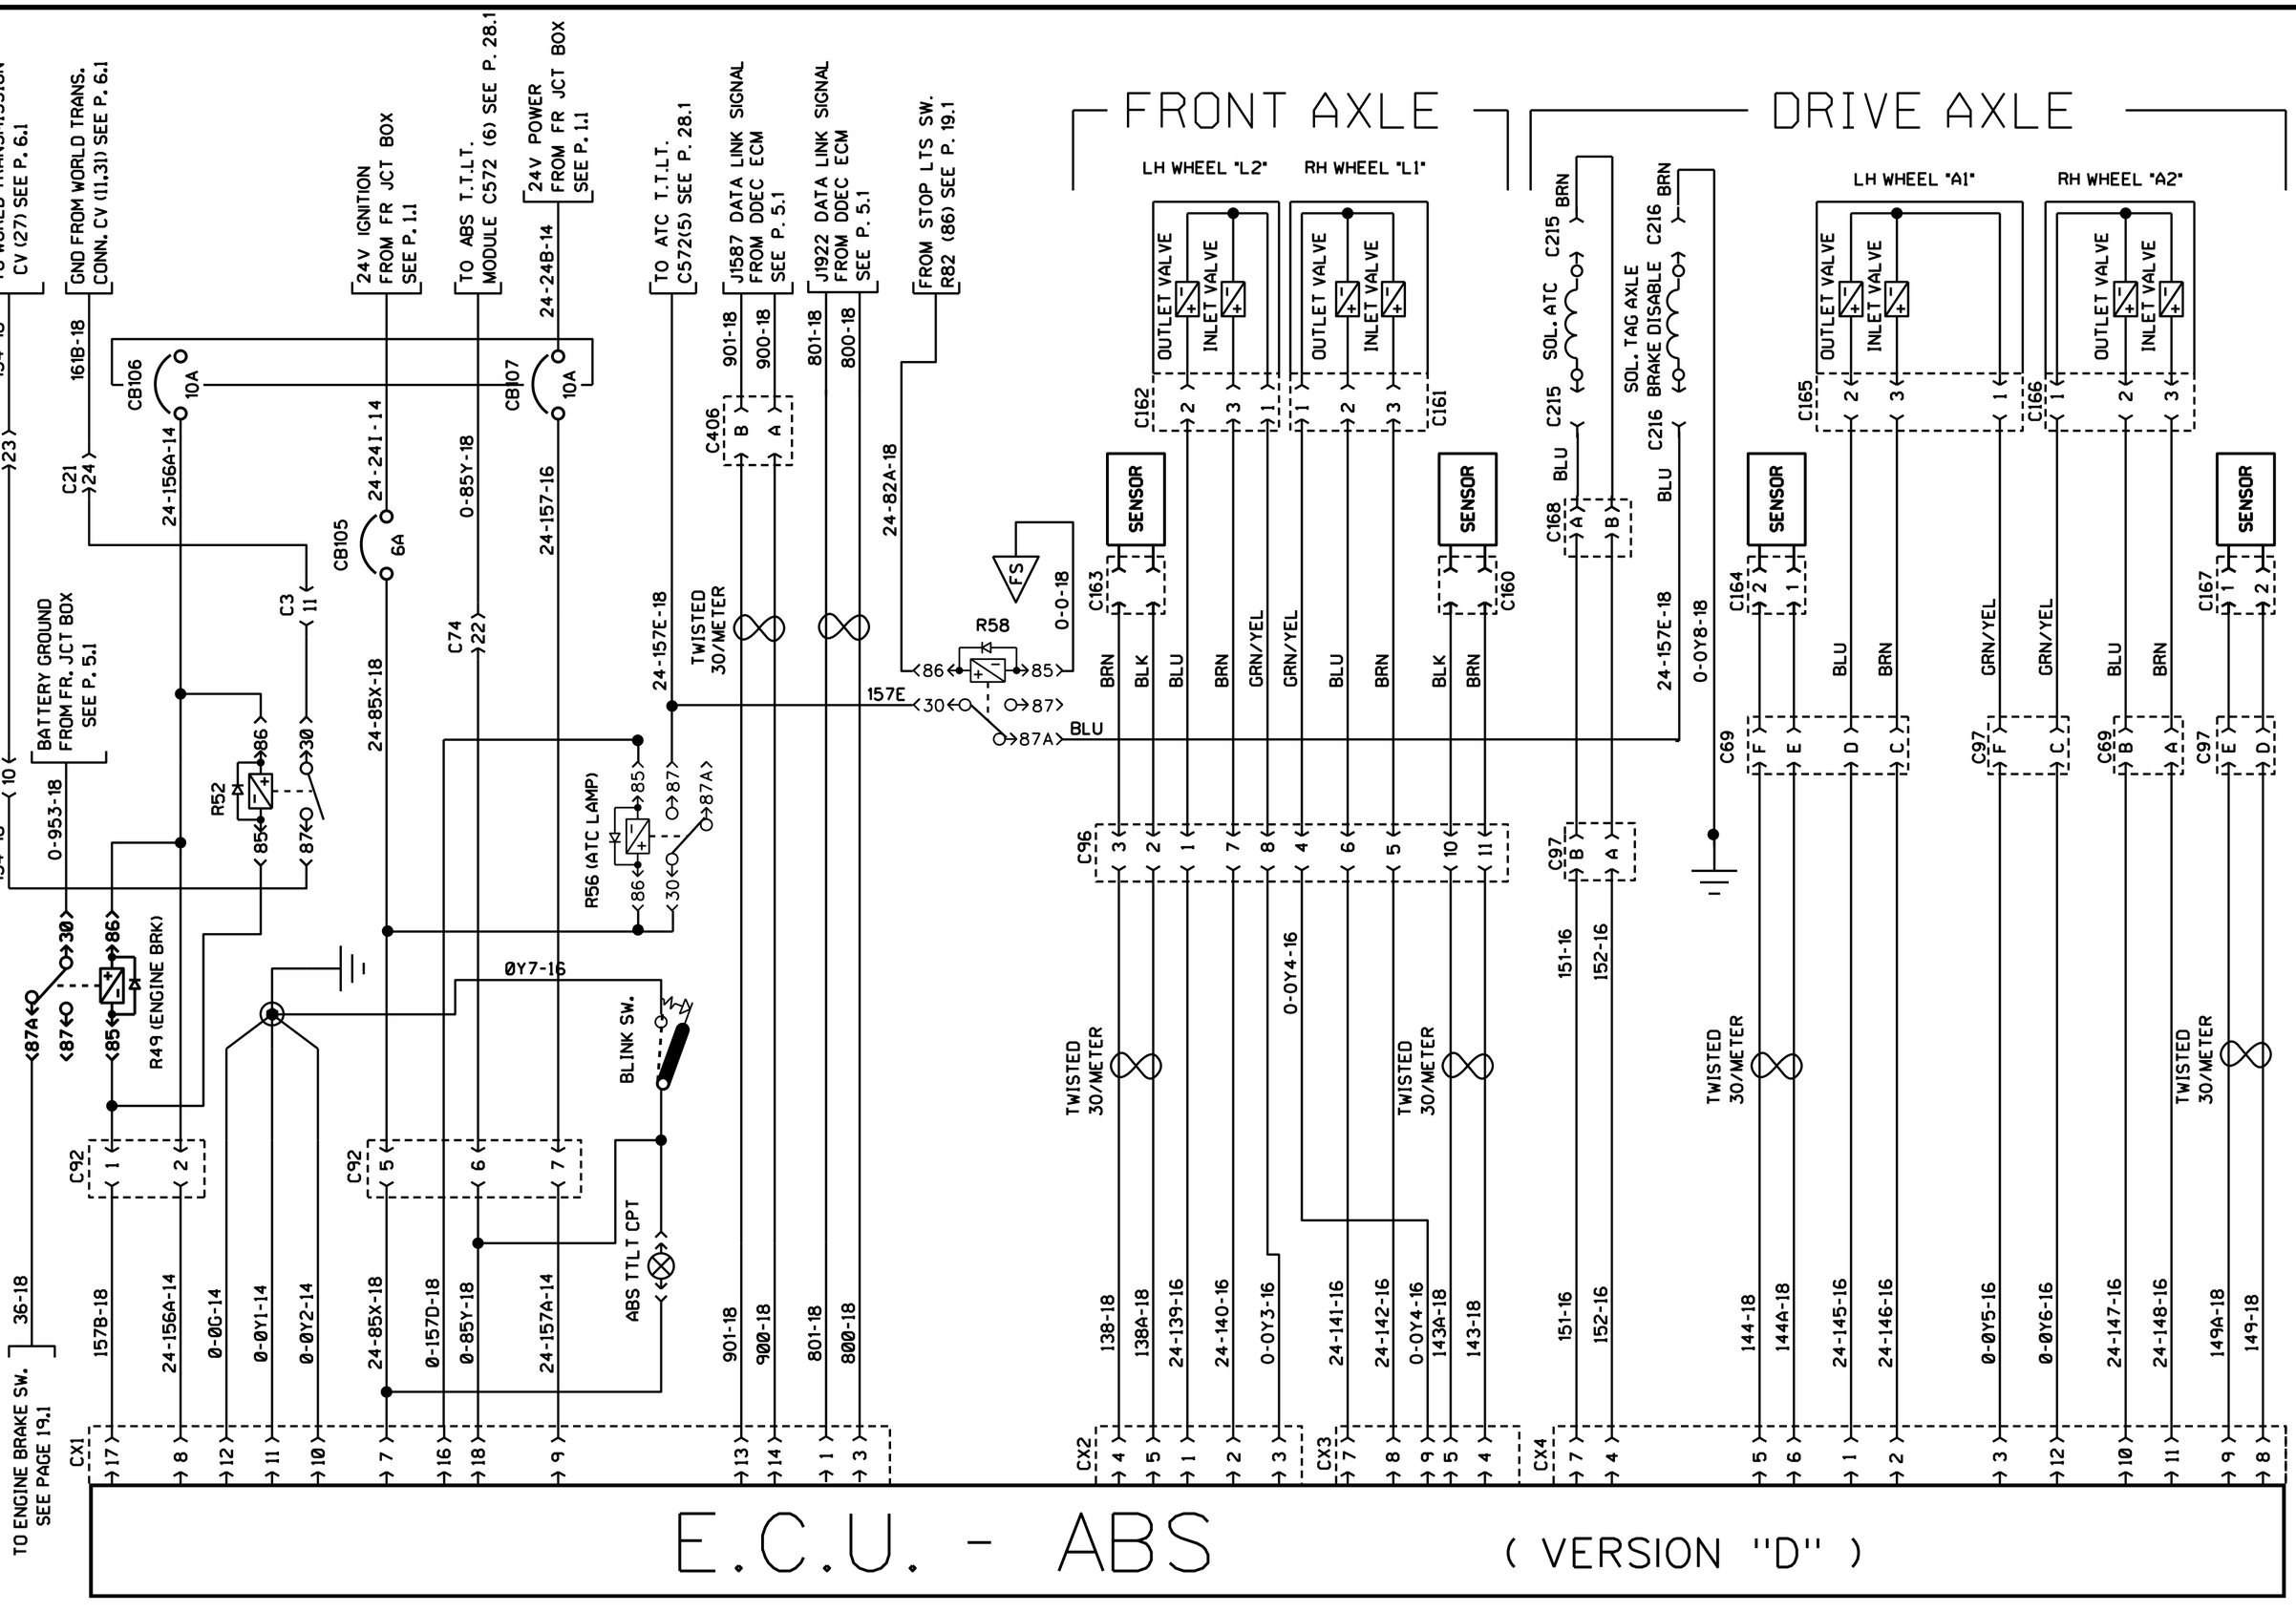


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 21.1 SP1	REVISION 00

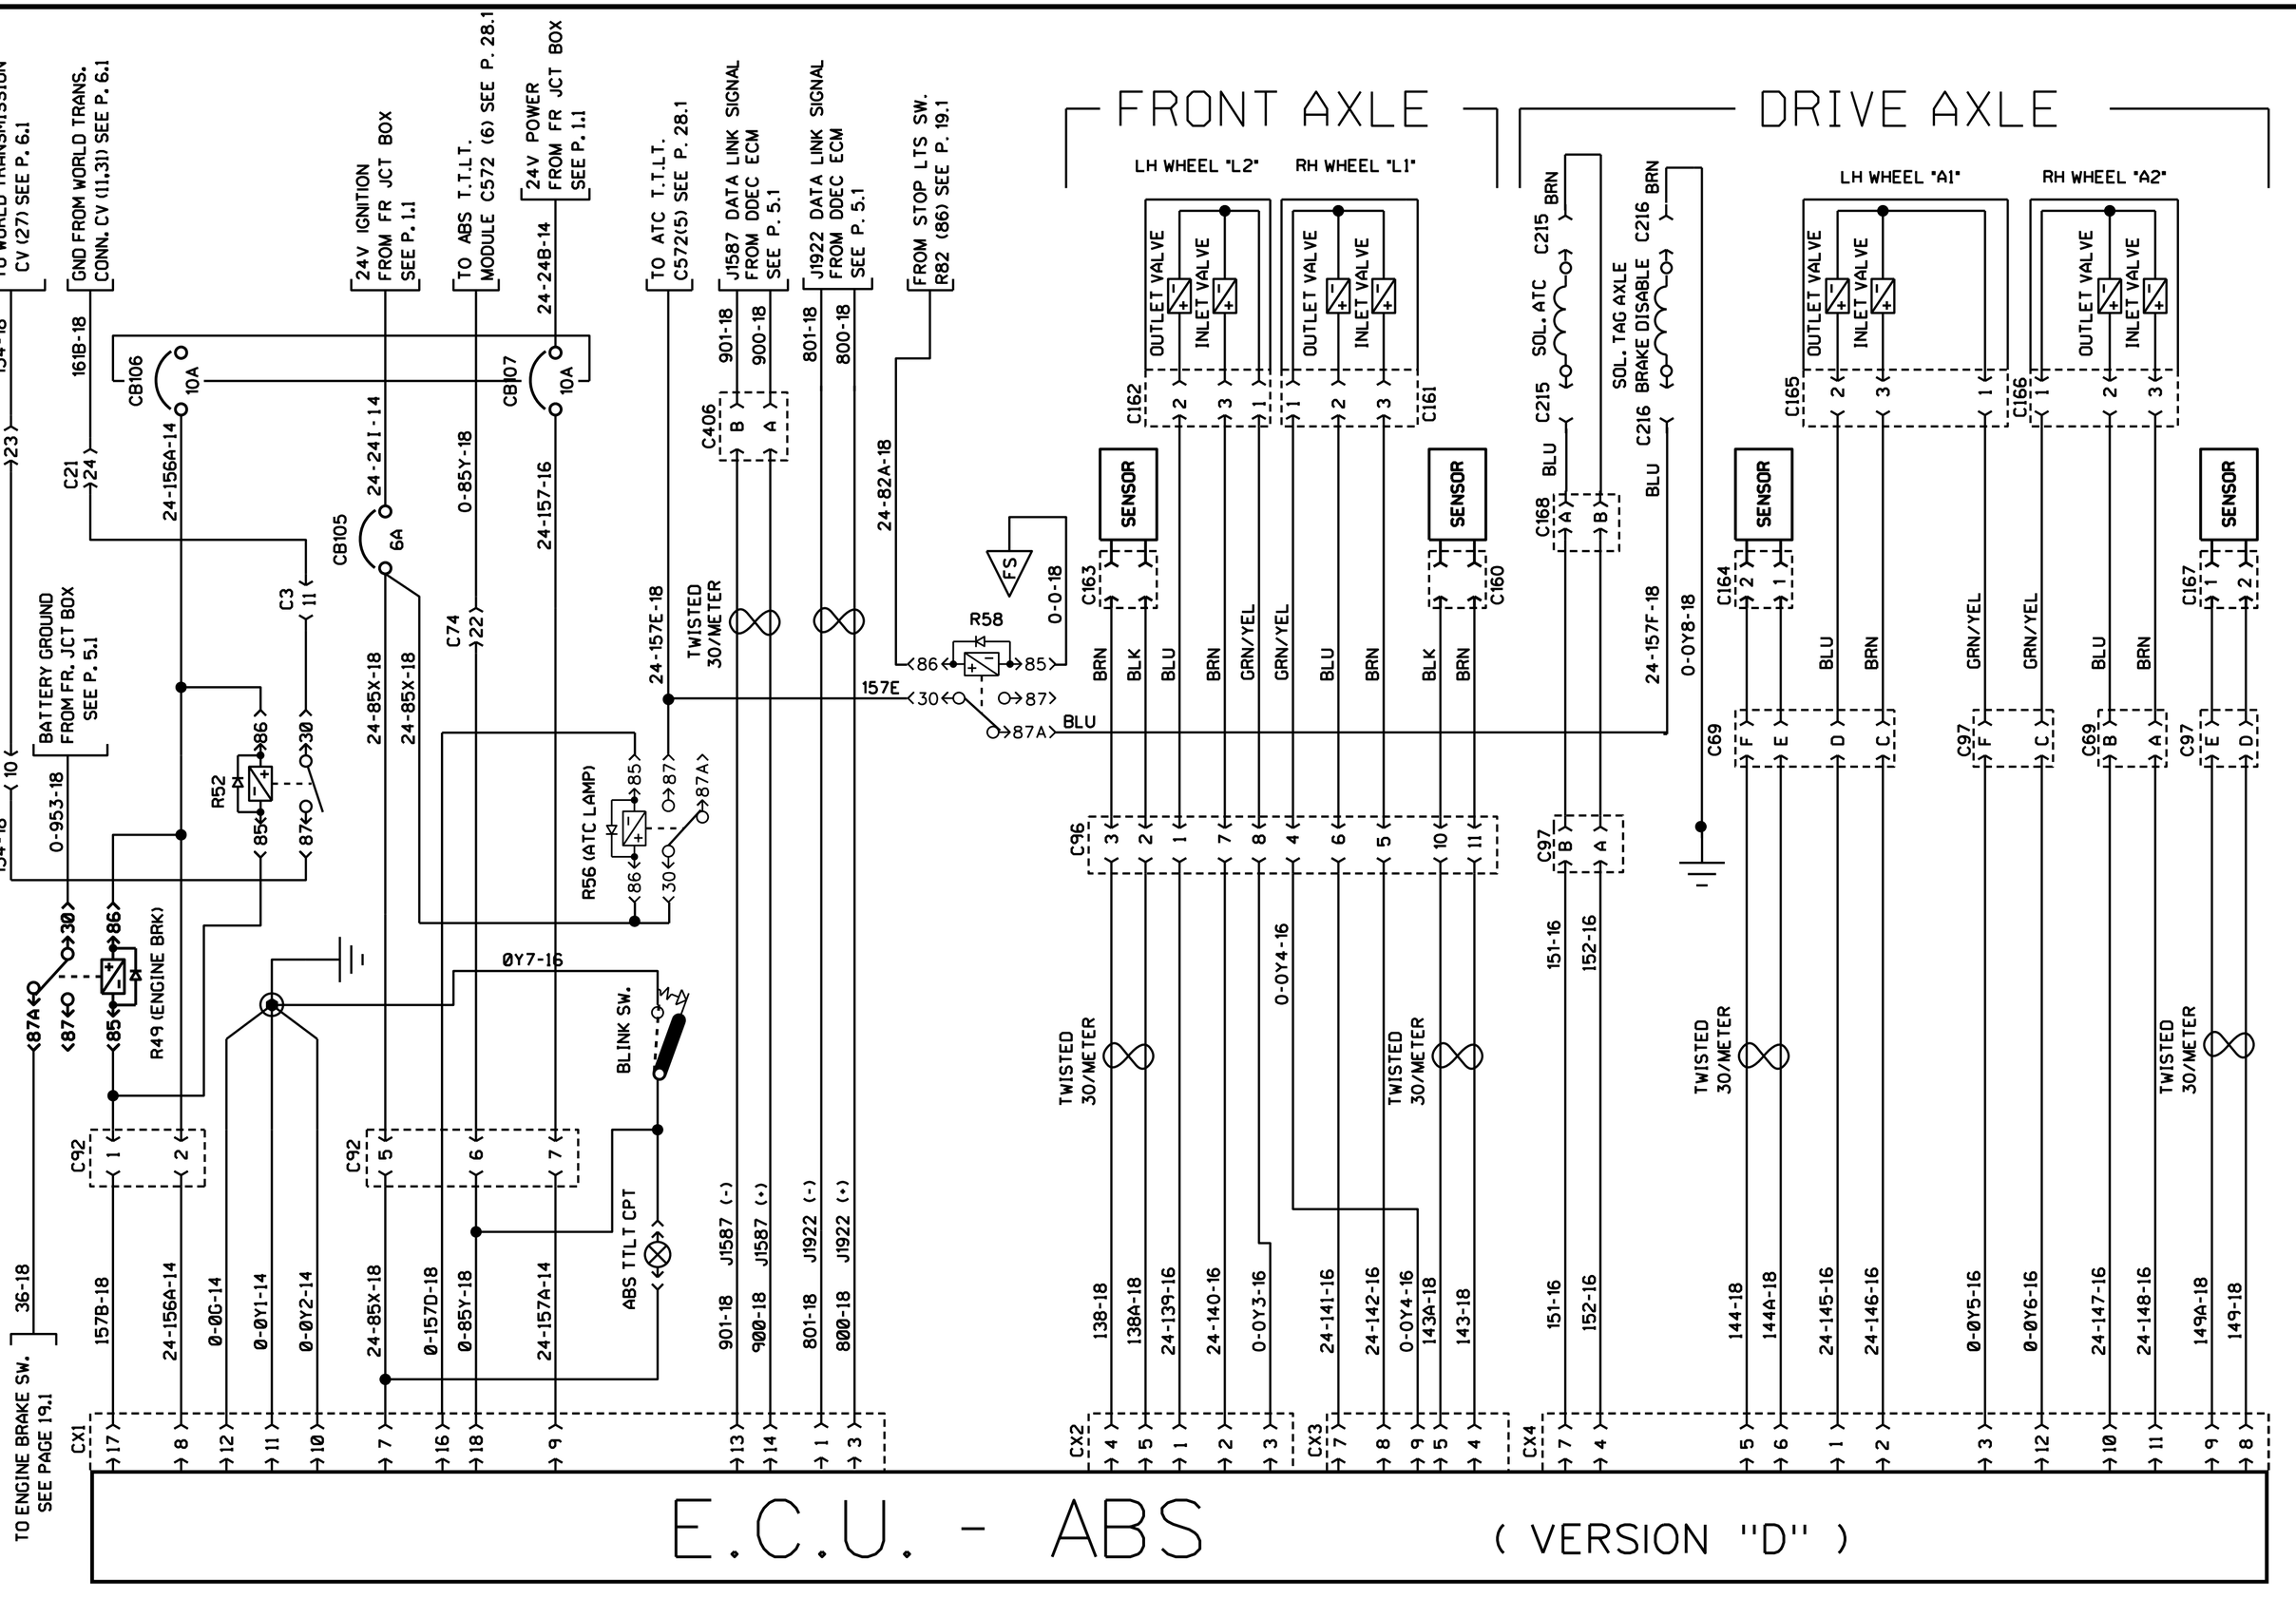


E.C.U. - ABS

(VERSION "D")


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 21.1 SP1	REVISION 02

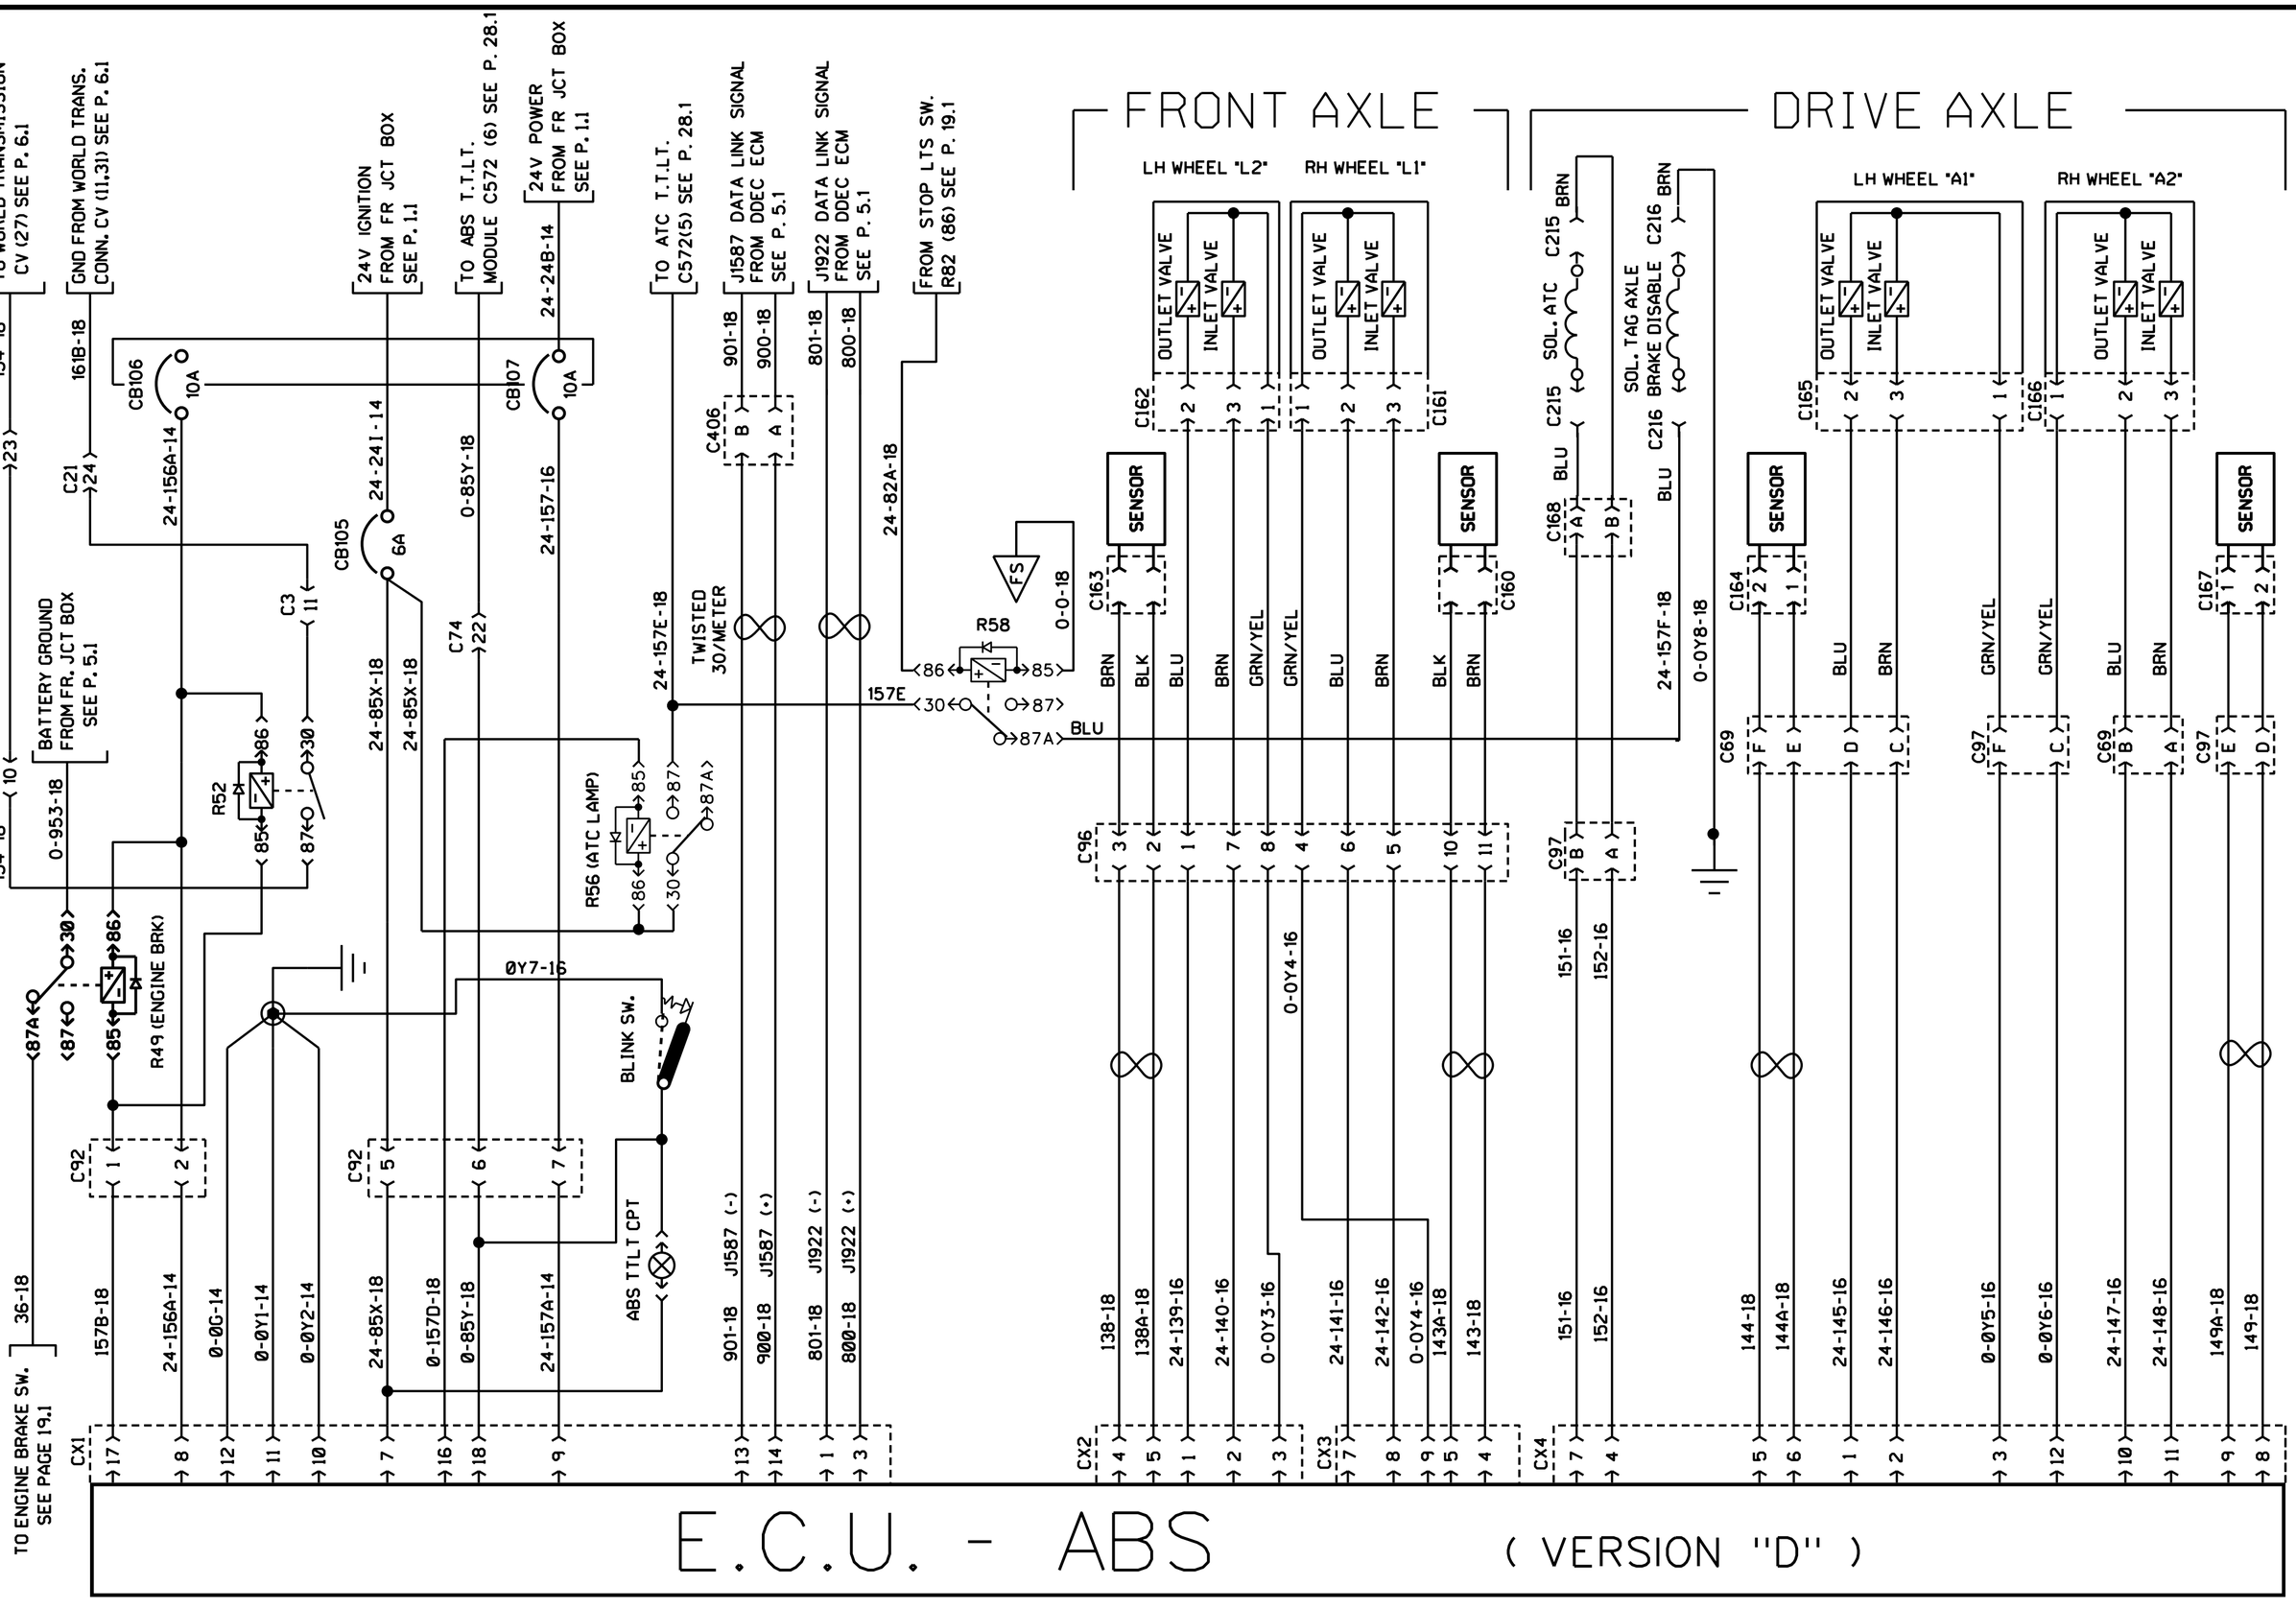

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 21.1 SP1	REVISION 08

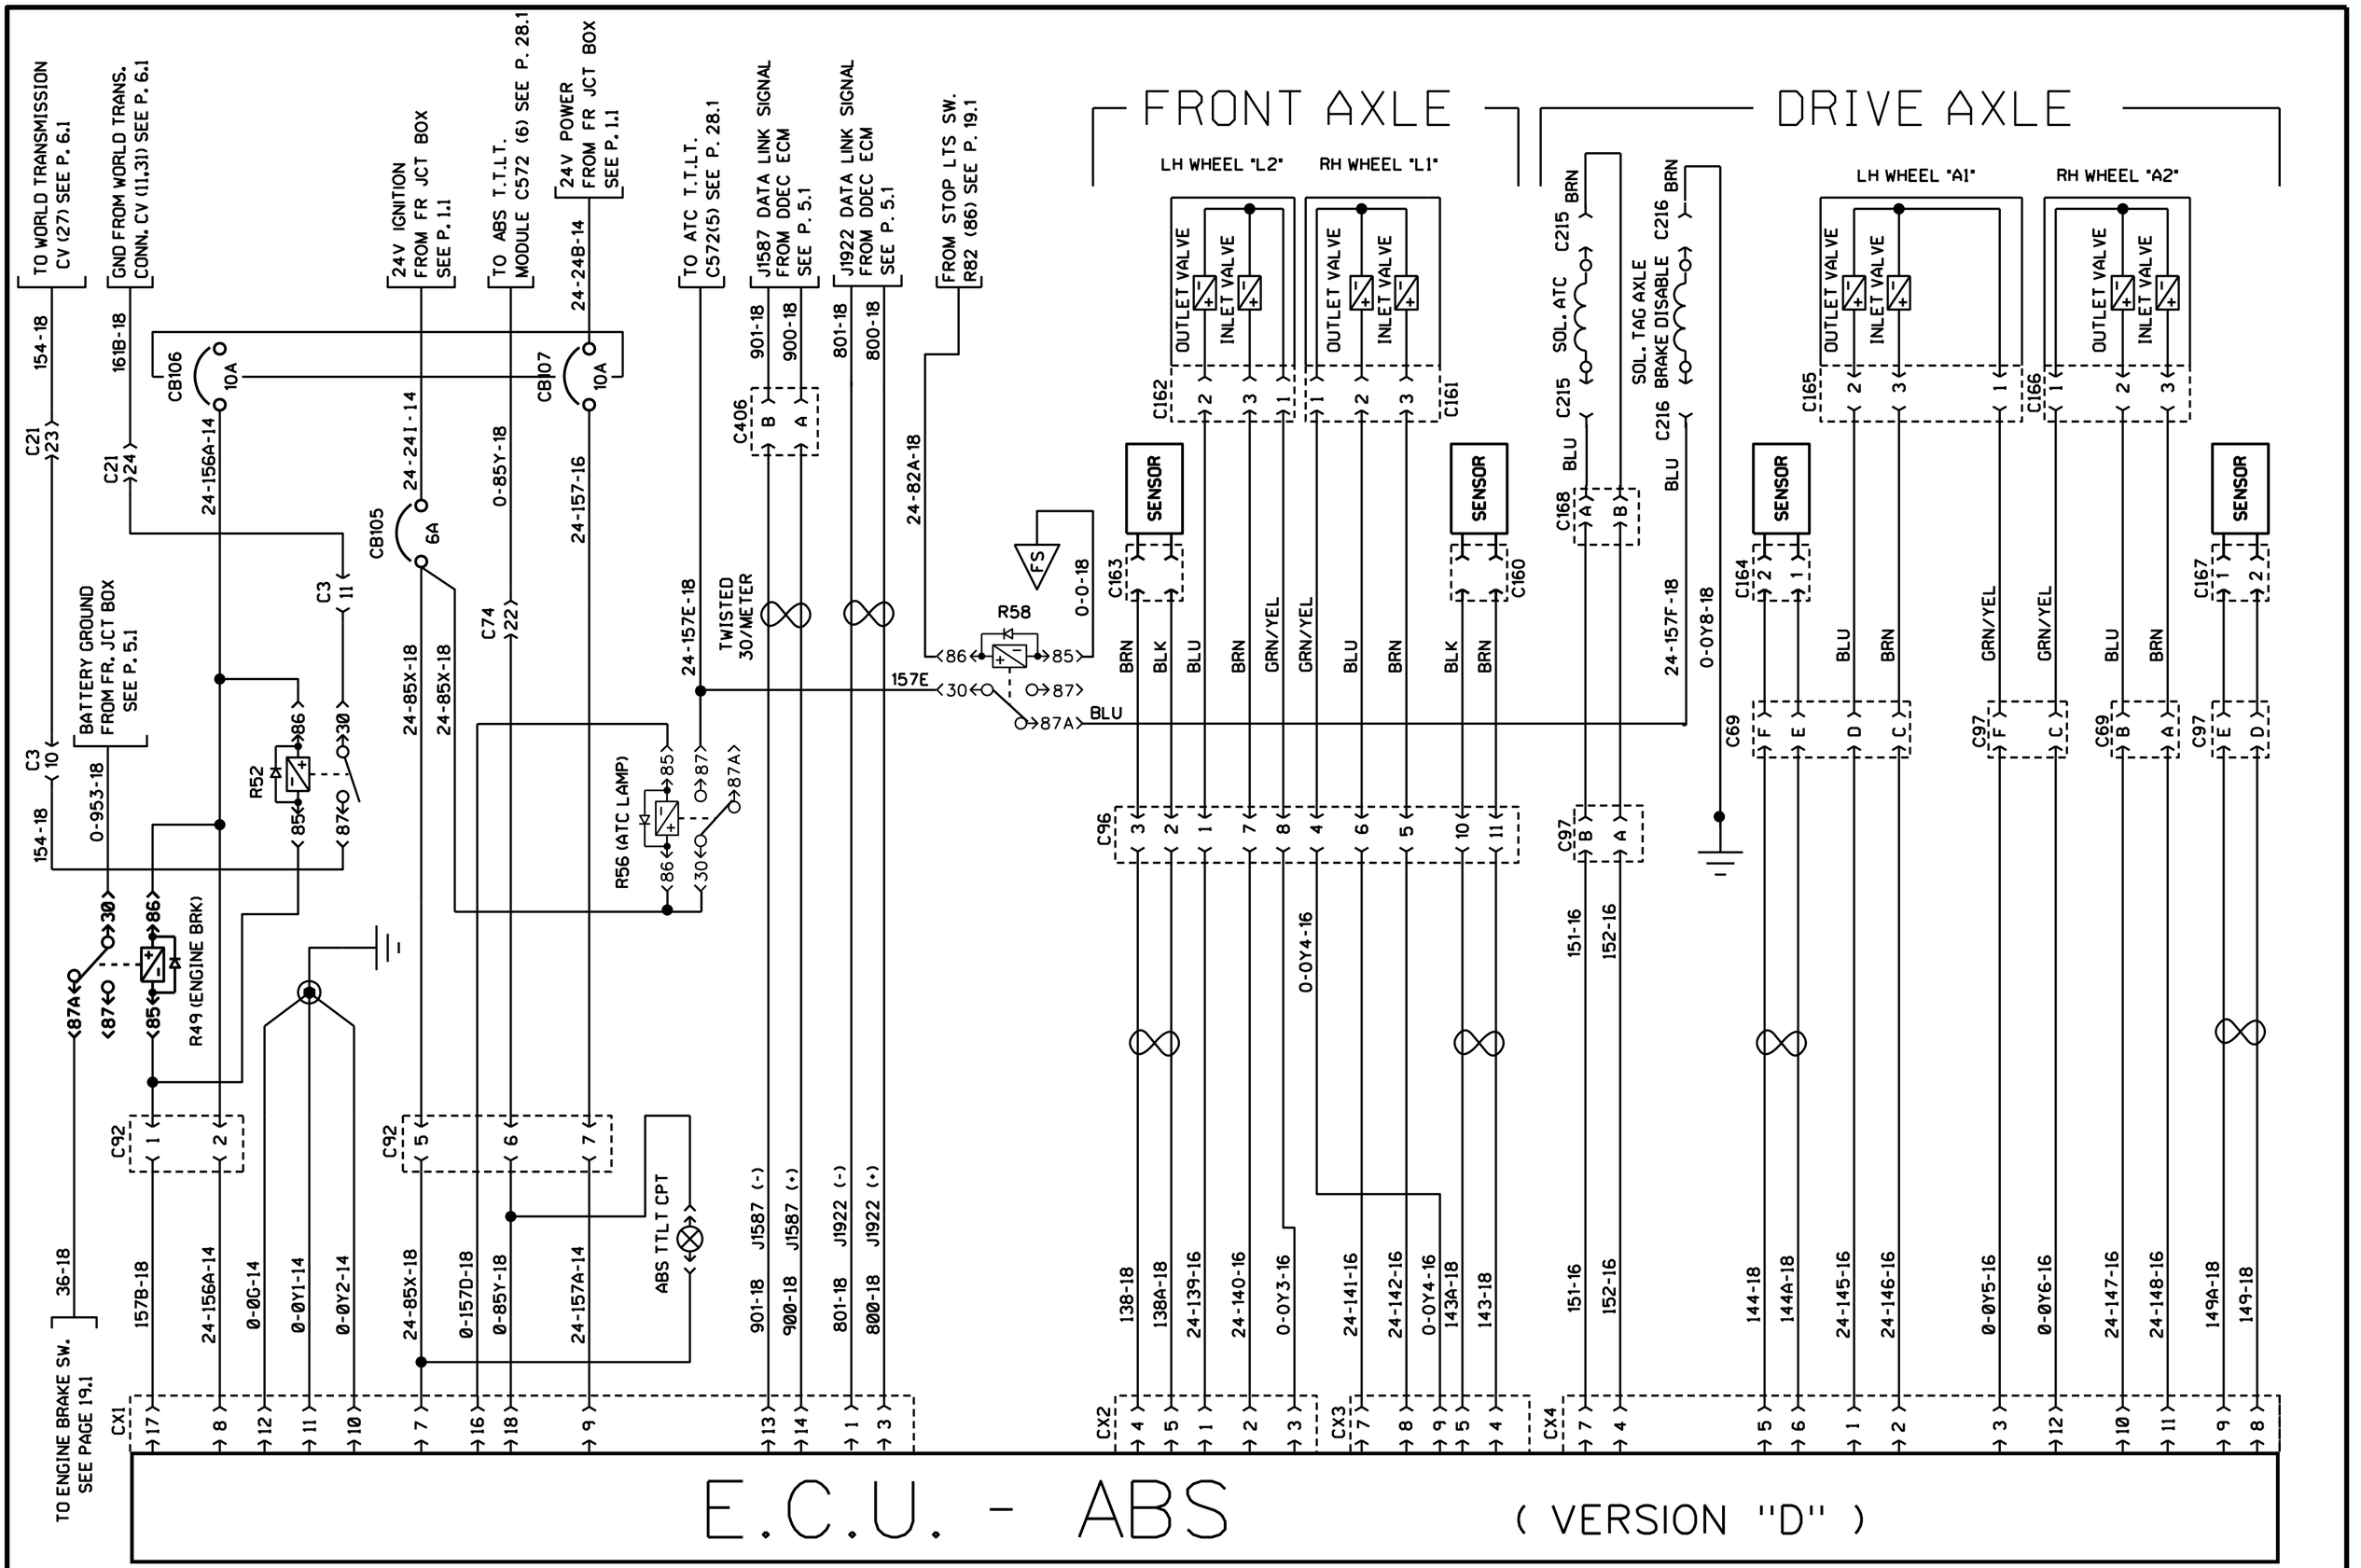

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 21.1 SP1	REVISION 14

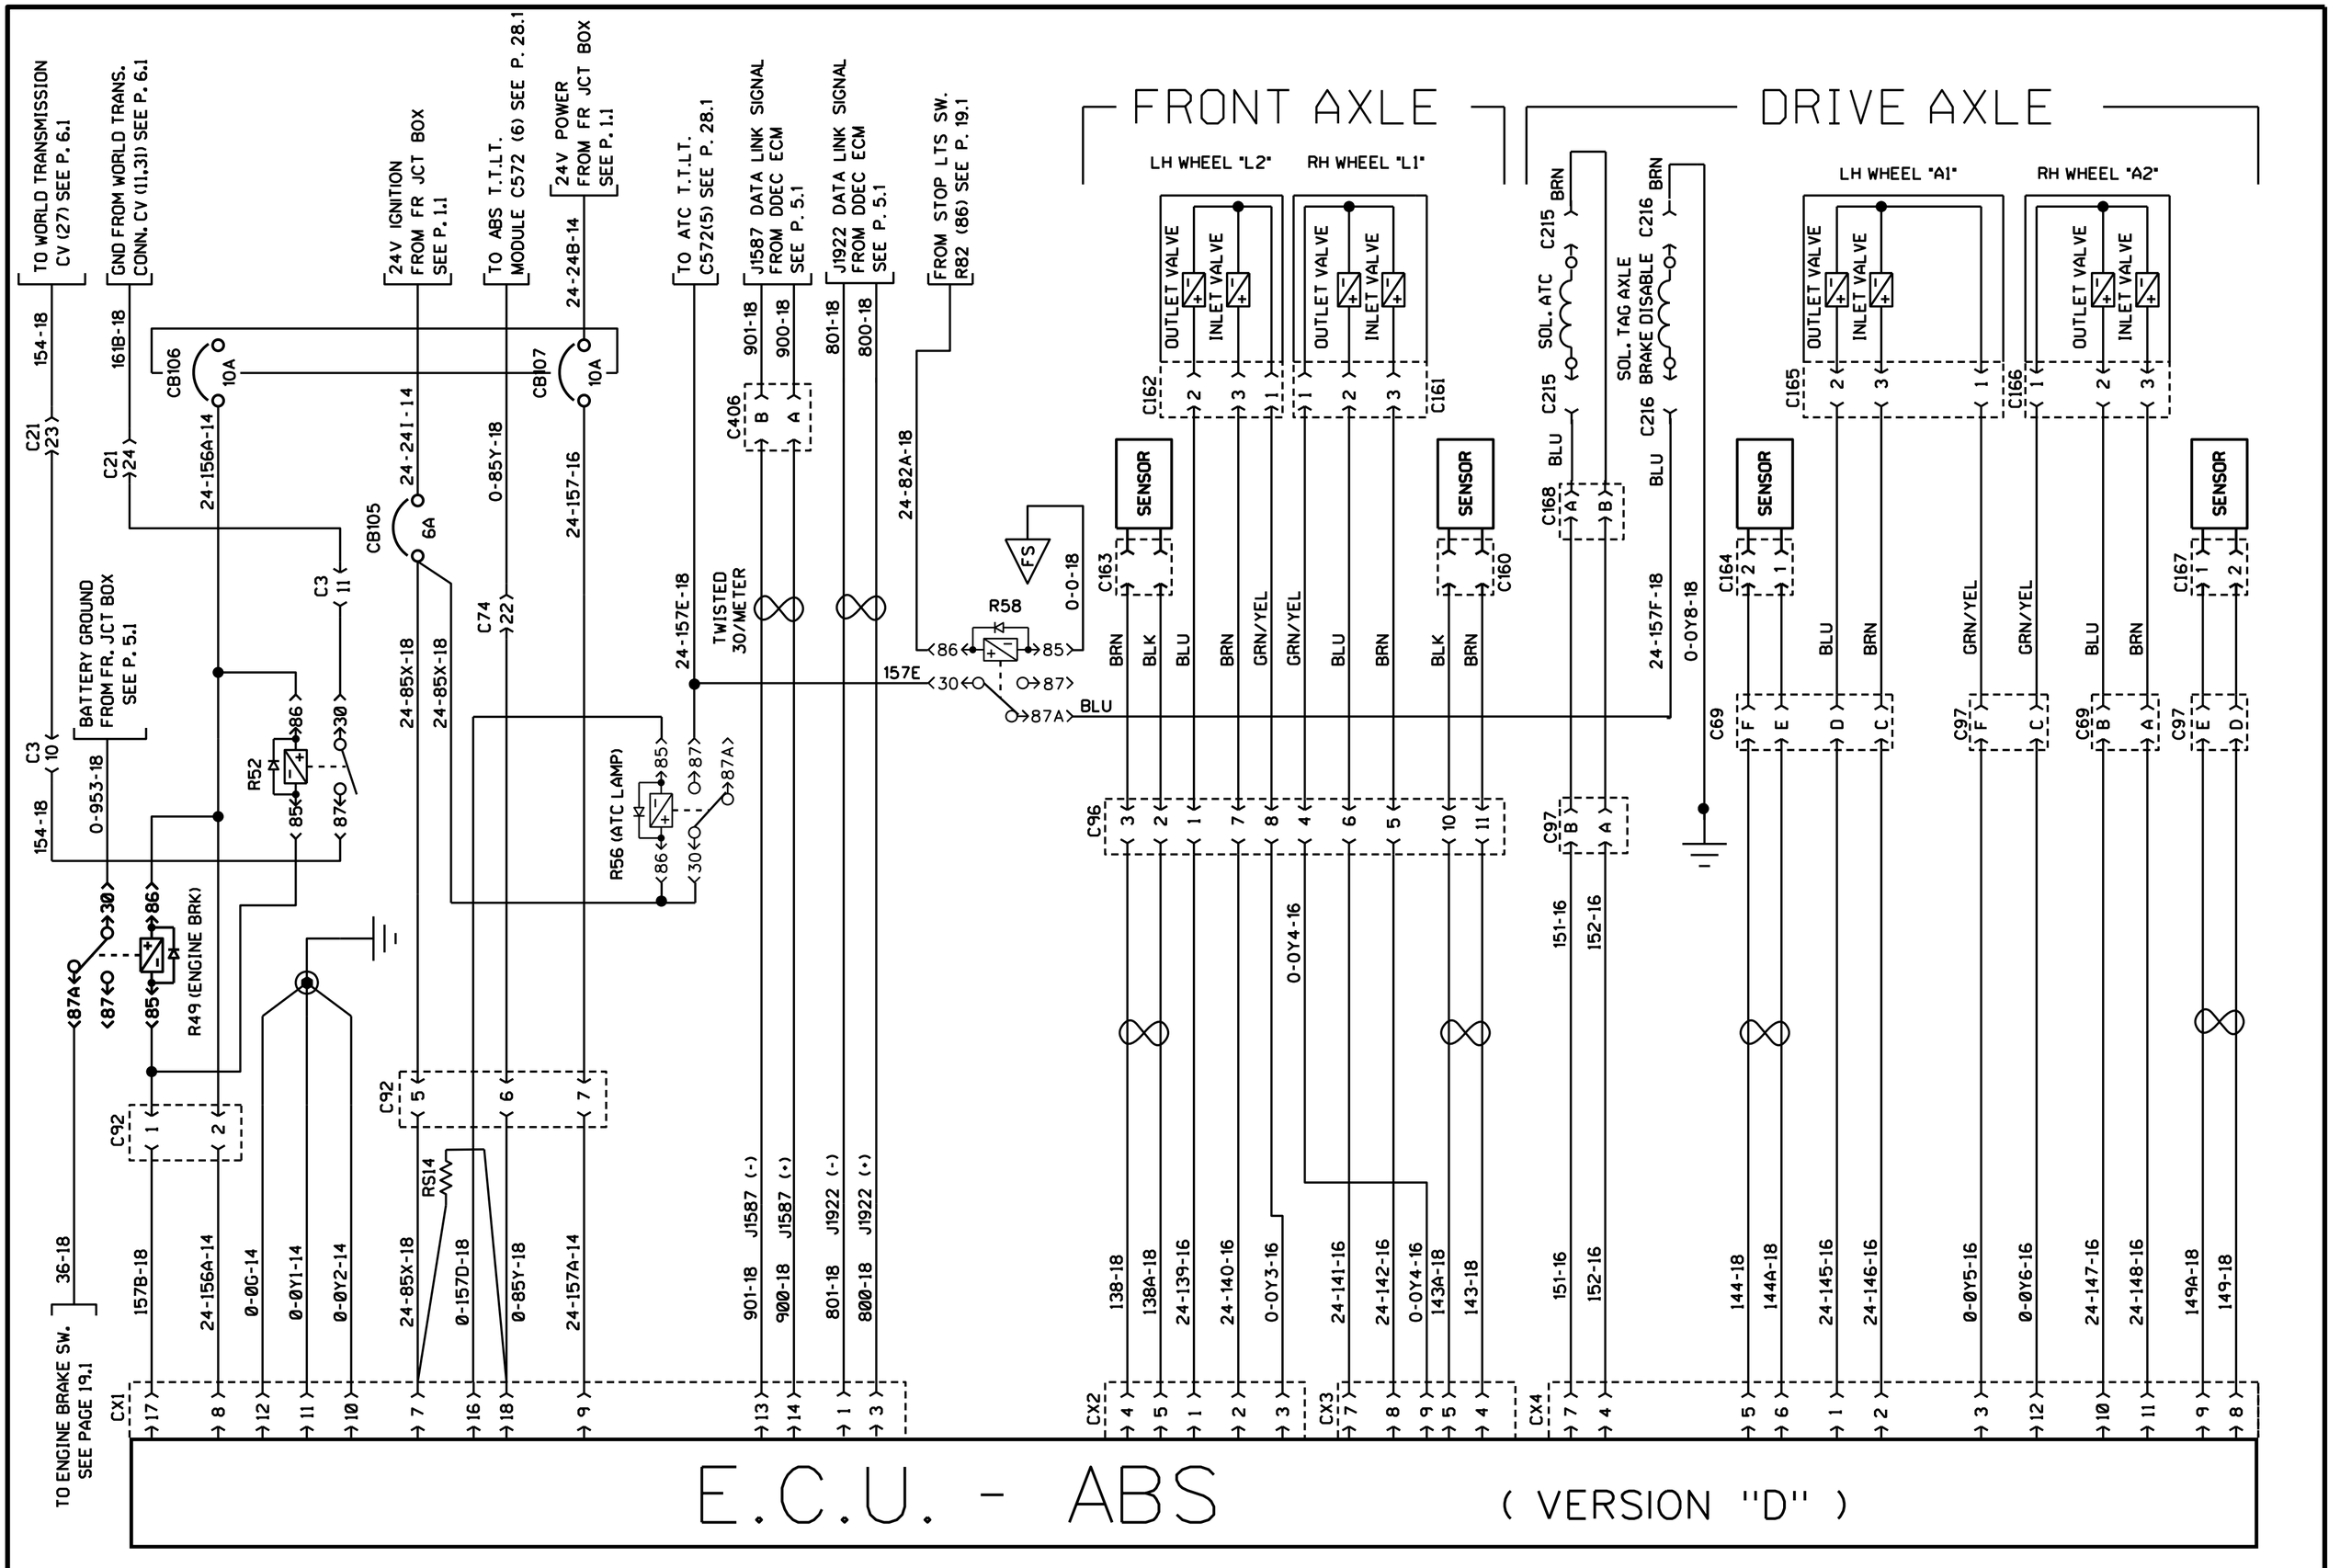

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 21.1 SP1	REVISION 16

PREVOST

E.C.U. - ABS WIRING DIAGRAM

FROM ENGINE BRAKE SW. SEE PAGE 19.1 — 36-18

CX1

14 — 0-157B-18 — C92 1 — 87A / 87 / 85 / 86 / 30 — R49 (ENGINE BRK)

0-953-18 — BATTERY GROUND TO FR. JCT BOX SEE P. 5.1

0-154-18 — FROM WORLD TRANSMISSION CV (27) SEE P. 6.1

0-161B-18 — GND FROM WORLD TRANS. CONN. CV (11,31) SEE P. 6.1

8 — 12-156A-14 — C92 2 — CB106 15A — 12-156A-14 / 12-12M-14 — 12V POWER FROM FR JCT BOX SEE P. 2.1

9 — 0-0Y1-14

4 — 0-0Y2-14

R52 (85 / 86 / 87 / 30)

7 — 12-85X-18 — C92 5 — CB105 6A — 12-85X-18 / 12-12IE-16 — 12V IGNITION FROM FR JCT BOX SEE P. 2.1

RS38

15 — 0-85Y-18 — C92 6 — C74 22 — 0-85Y-18 — FROM ABS T.T. LT. MODULE C572 (6) SEE P. 28.1

RS39

R56 (ATC LAMP) (85 / 86 / 87 / 30)

2 — 0-85Z-18 — C92 3

13 — 0-157D-18 — 12-157E-18 — FROM ATC T.T. LT. MODULE C571 (19) SEE P. 28.1

TWISTED 30/METER

10 — 901-18 — 901-18 — J1587 DATA LINK SIGNAL FROM DDEC ECM C249 SEE P. 5.1

11 — 900-18 — 900-18

1 — 926-18 GRN J1939 LOW — 120 ohms — C226 B / A / C / C / A / B — 925-18 / 926-18 — C225 C / A / B — C224 B / A / C / C / A / B — 926-18 / 925-18 — J1939 DATA LINK SIGNAL FROM DDEC ECM C249 SEE P. 5.1 SP2

3 — 925-18 YEL J1939 HIGH — 120 ohms

R58 (30 / 86 / 87A / 87 / 85)

24-82A-18 — FROM STOP LTS SW. R82 (86) SEE P. 19.1

0-0-18 — FS

CX2

C96

12 — 138-18 — 3 — BRN — C163 — SENSOR

15 — 138A-18 — 2 — BLK

6 — 12-139-16 — 1 — BLU — C162 — OUTLET VALVE / INLET VALVE — LH WHEEL "L2"

3 — 12-140-16 — 7 — BRN

0-0Y3-16 — 8 — GRN/YEL

0-0Y4-16 — 4 — GRN/YEL — OUTLET VALVE / INLET VALVE — RH WHEEL "L1"

4 — 12-141-16 — 6 — BLU

1 — 12-142-16 — 5 — BRN — C161

10 — 143A-18 — 10 — BLK — SENSOR

13 — 143-18 — 11 — BRN — C160

FRONT AXLE

DRIVE AXLE

7 — 151-16 — 151-16 — C97 B — C168 A — BLU — C215 SOL. ATC C215 — BRN

16 — 152-16 — 152-16 — C97 A — C168 B

SOL. TAG AXLE BRAKE DISABLE — C216 / C216

24-157F-18 — BLU

0-0Y8-18

11 — 144-18 — C69 F — C164 2 — SENSOR

14 — 144A-18 — C69 E — C164 1

C165 — OUTLET VALVE / INLET VALVE — LH WHEEL "A1"

5 — 12-145-16 — D — BLU

2 — 12-146-16 — C — BRN

0-0Y5-16 — C97 F — GRN/YEL

0-0Y6-16 — C97 C — GRN/YEL — C166 — OUTLET VALVE / INLET VALVE — RH WHEEL "A2"

9 — 12-147-16 — C69 B — BLU

8 — 12-148-16 — C69 A — BRN

17 — 149A-18 — C97 E — C167 1 — SENSOR

18 — 149-18 — C97 D — C167 2

PREVOST | WIRING DIAGRAM | NO: D060949 | PAGE: 21.1 SP1 | REVISION 20

E.C.U. - ABS

FROM WORLD TRANSMISSION CV (27) SEE P. 6.1
GND FROM WORLD TRANS. CONN. CV (11,31) SEE P. 6.1
12V POWER FROM FR JCT BOX SEE P. 2.1
12V IGNITION FROM FR JCT BOX SEE P. 2.1
FROM ABS T.T. LT. MODULE C572 (6) SEE P. 28.1
FROM ATC T.T. LT. MODULE C571 (19) SEE P. 28.1
J1587 DATA LINK SIGNAL FROM DDEC ECM C249 SEE P. 5.1
J1939 DATA LINK SIGNAL FROM DDEC ECM C249 SEE P. 5.1 SP2
FROM STOP LTS SW. R82 (86) SEE P. 19.1
BATTERY GROUND TO FR. JCT BOX SEE P. 5.1
R49 (ENGINE BRK)
R52
R56 (ATC LAMP)
R58
120 ohms
TWISTED 30/METER
RS38
RS39
FROM ENGINE BRAKE SW. SEE PAGE 19.1


FRONT AXLE

LH WHEEL "L2" RH WHEEL "L1"
OUTLET VALVE
INLET VALVE
SENSOR


DRIVE AXLE

SOL. ATC
SOL. TAG AXLE
BRAKE DISABLE
LH WHEEL "A1" RH WHEEL "A2"
OUTLET VALVE
INLET VALVE
SENSOR


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 21.1 SP1	REVISION 23

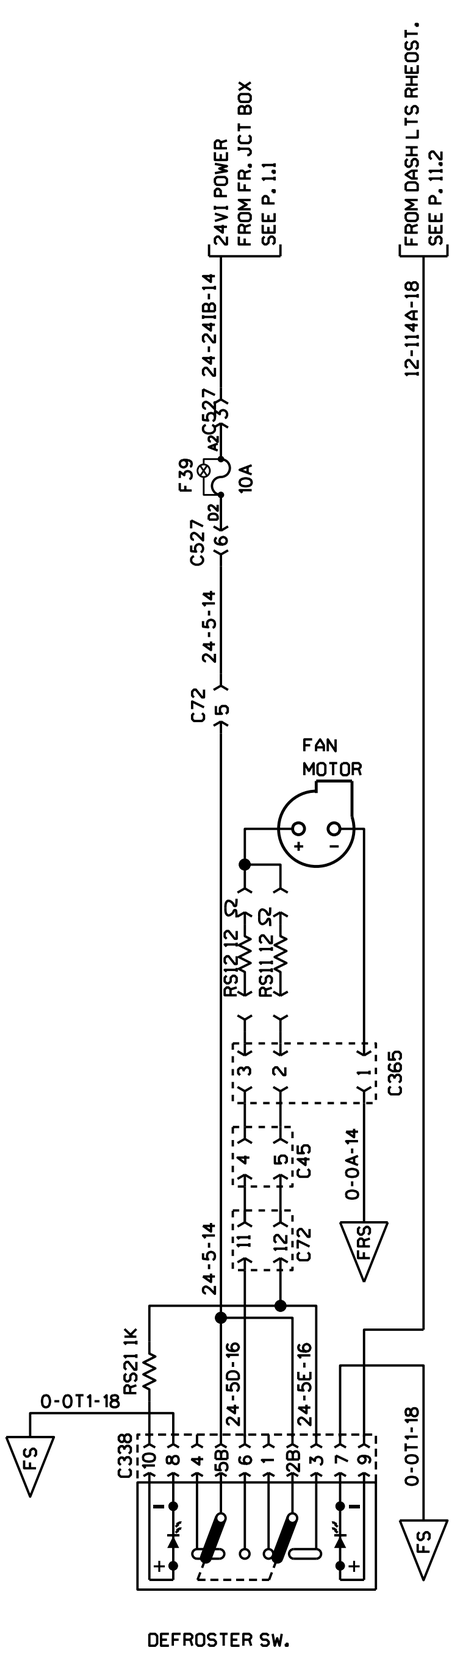


UPPER WINDSHIELD DEFROST

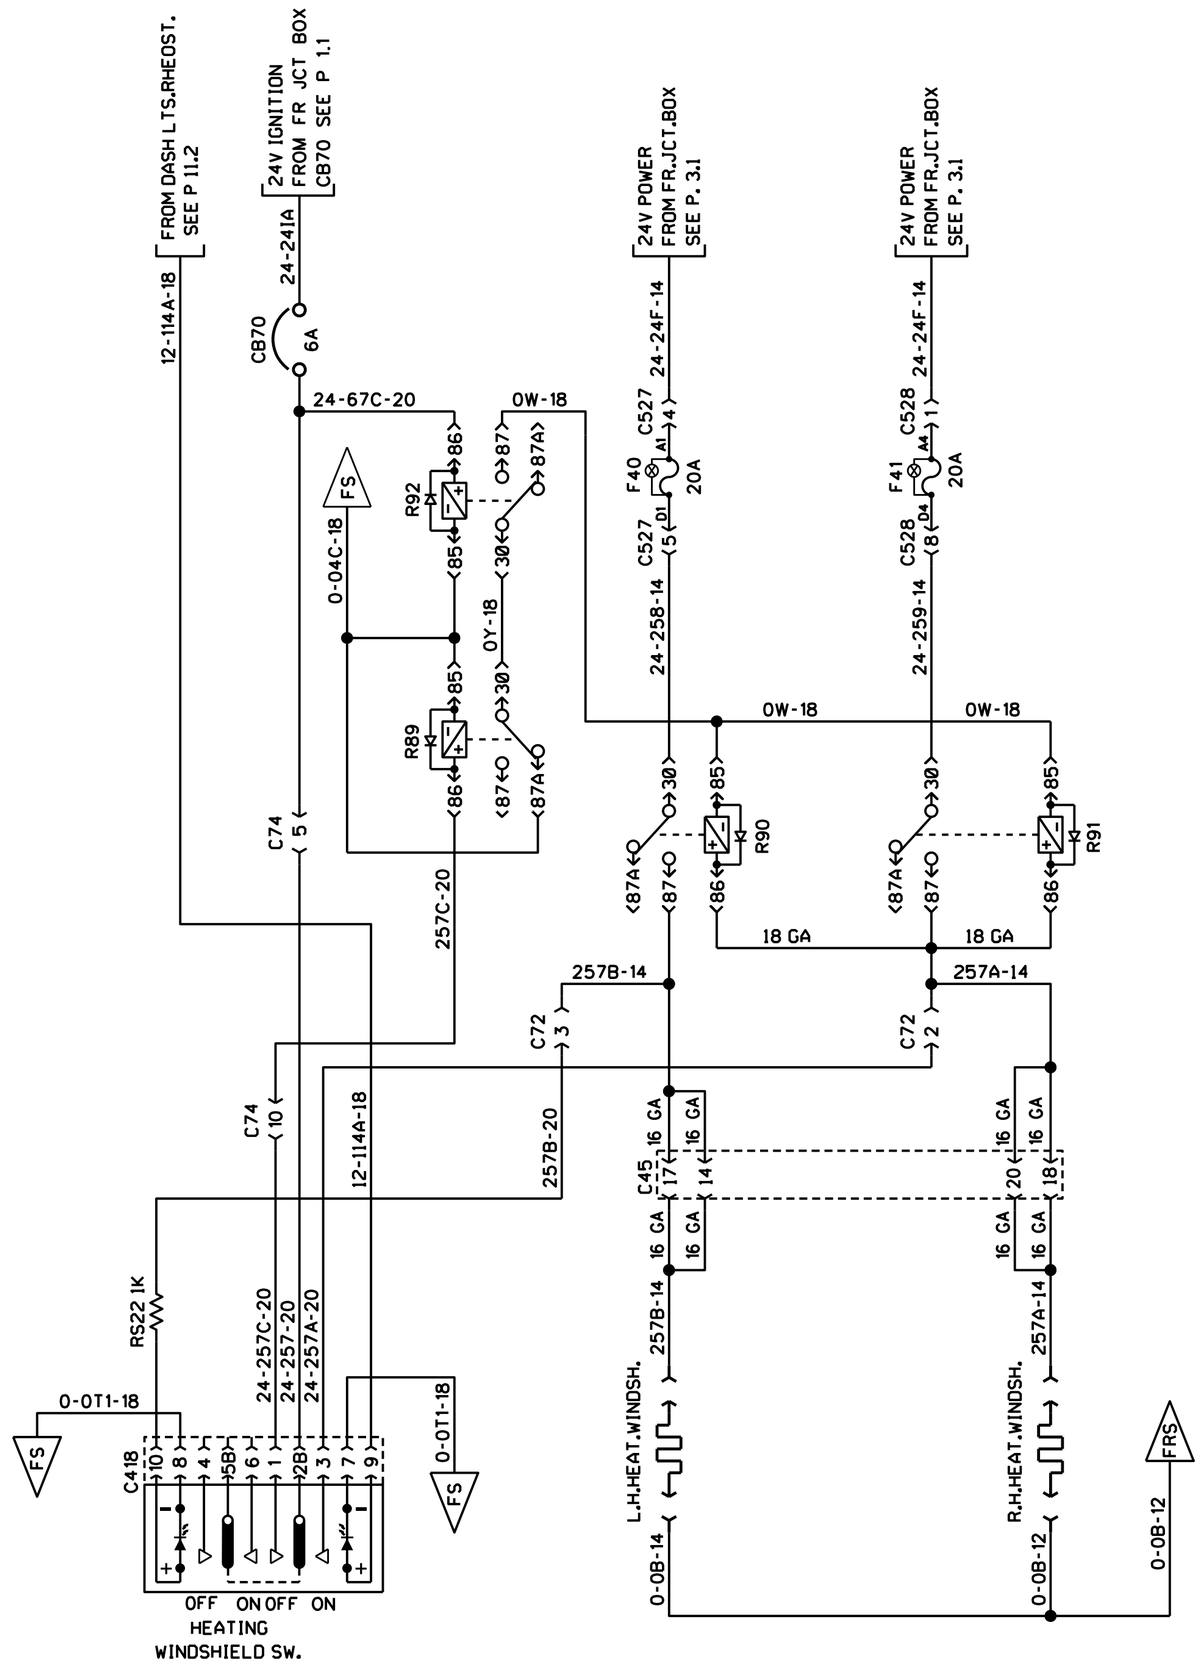


UPPER HEATED WINDSHIELD

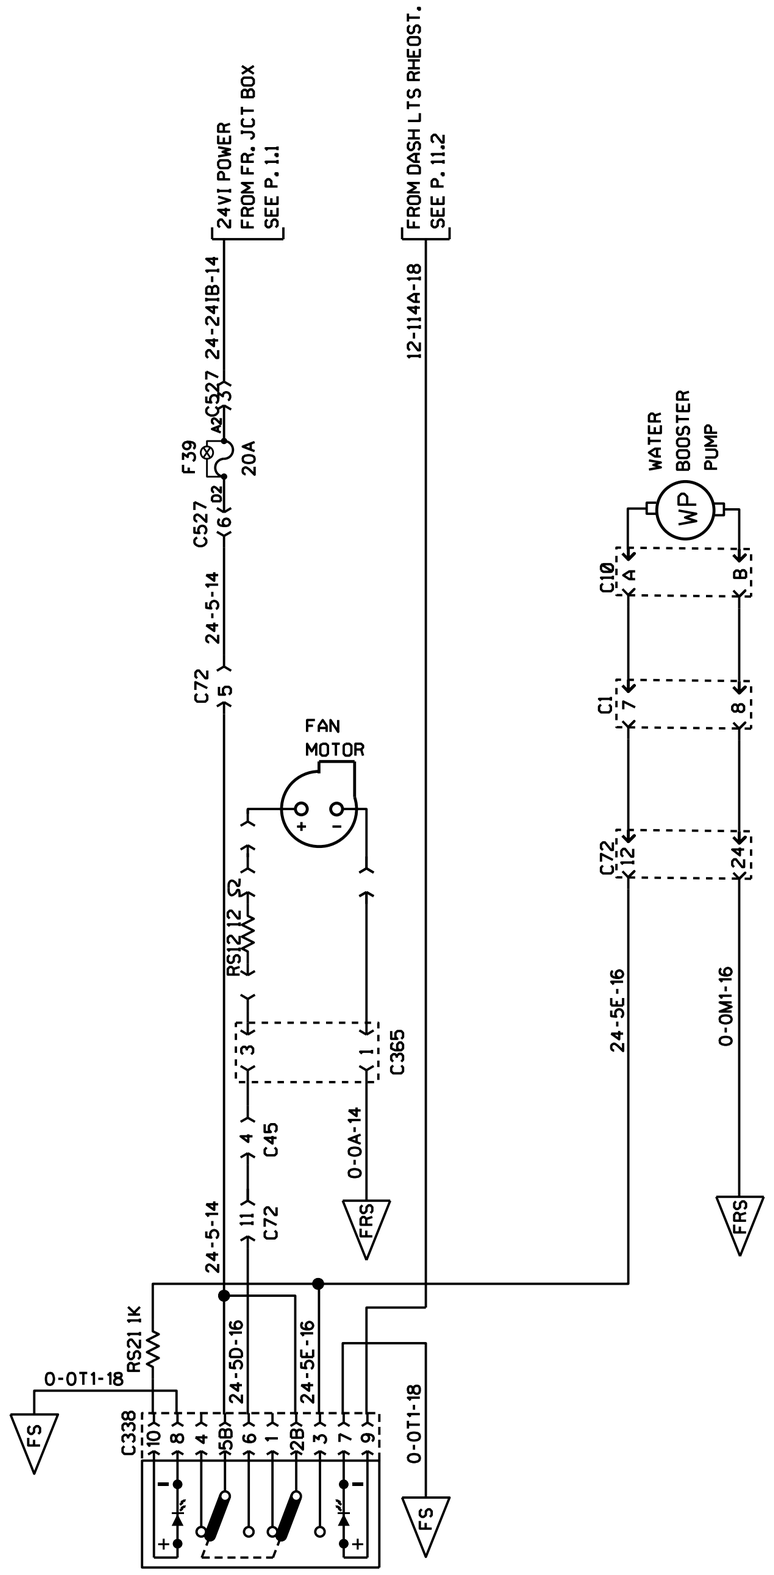


UPPER WINDSHIELD DEFROST

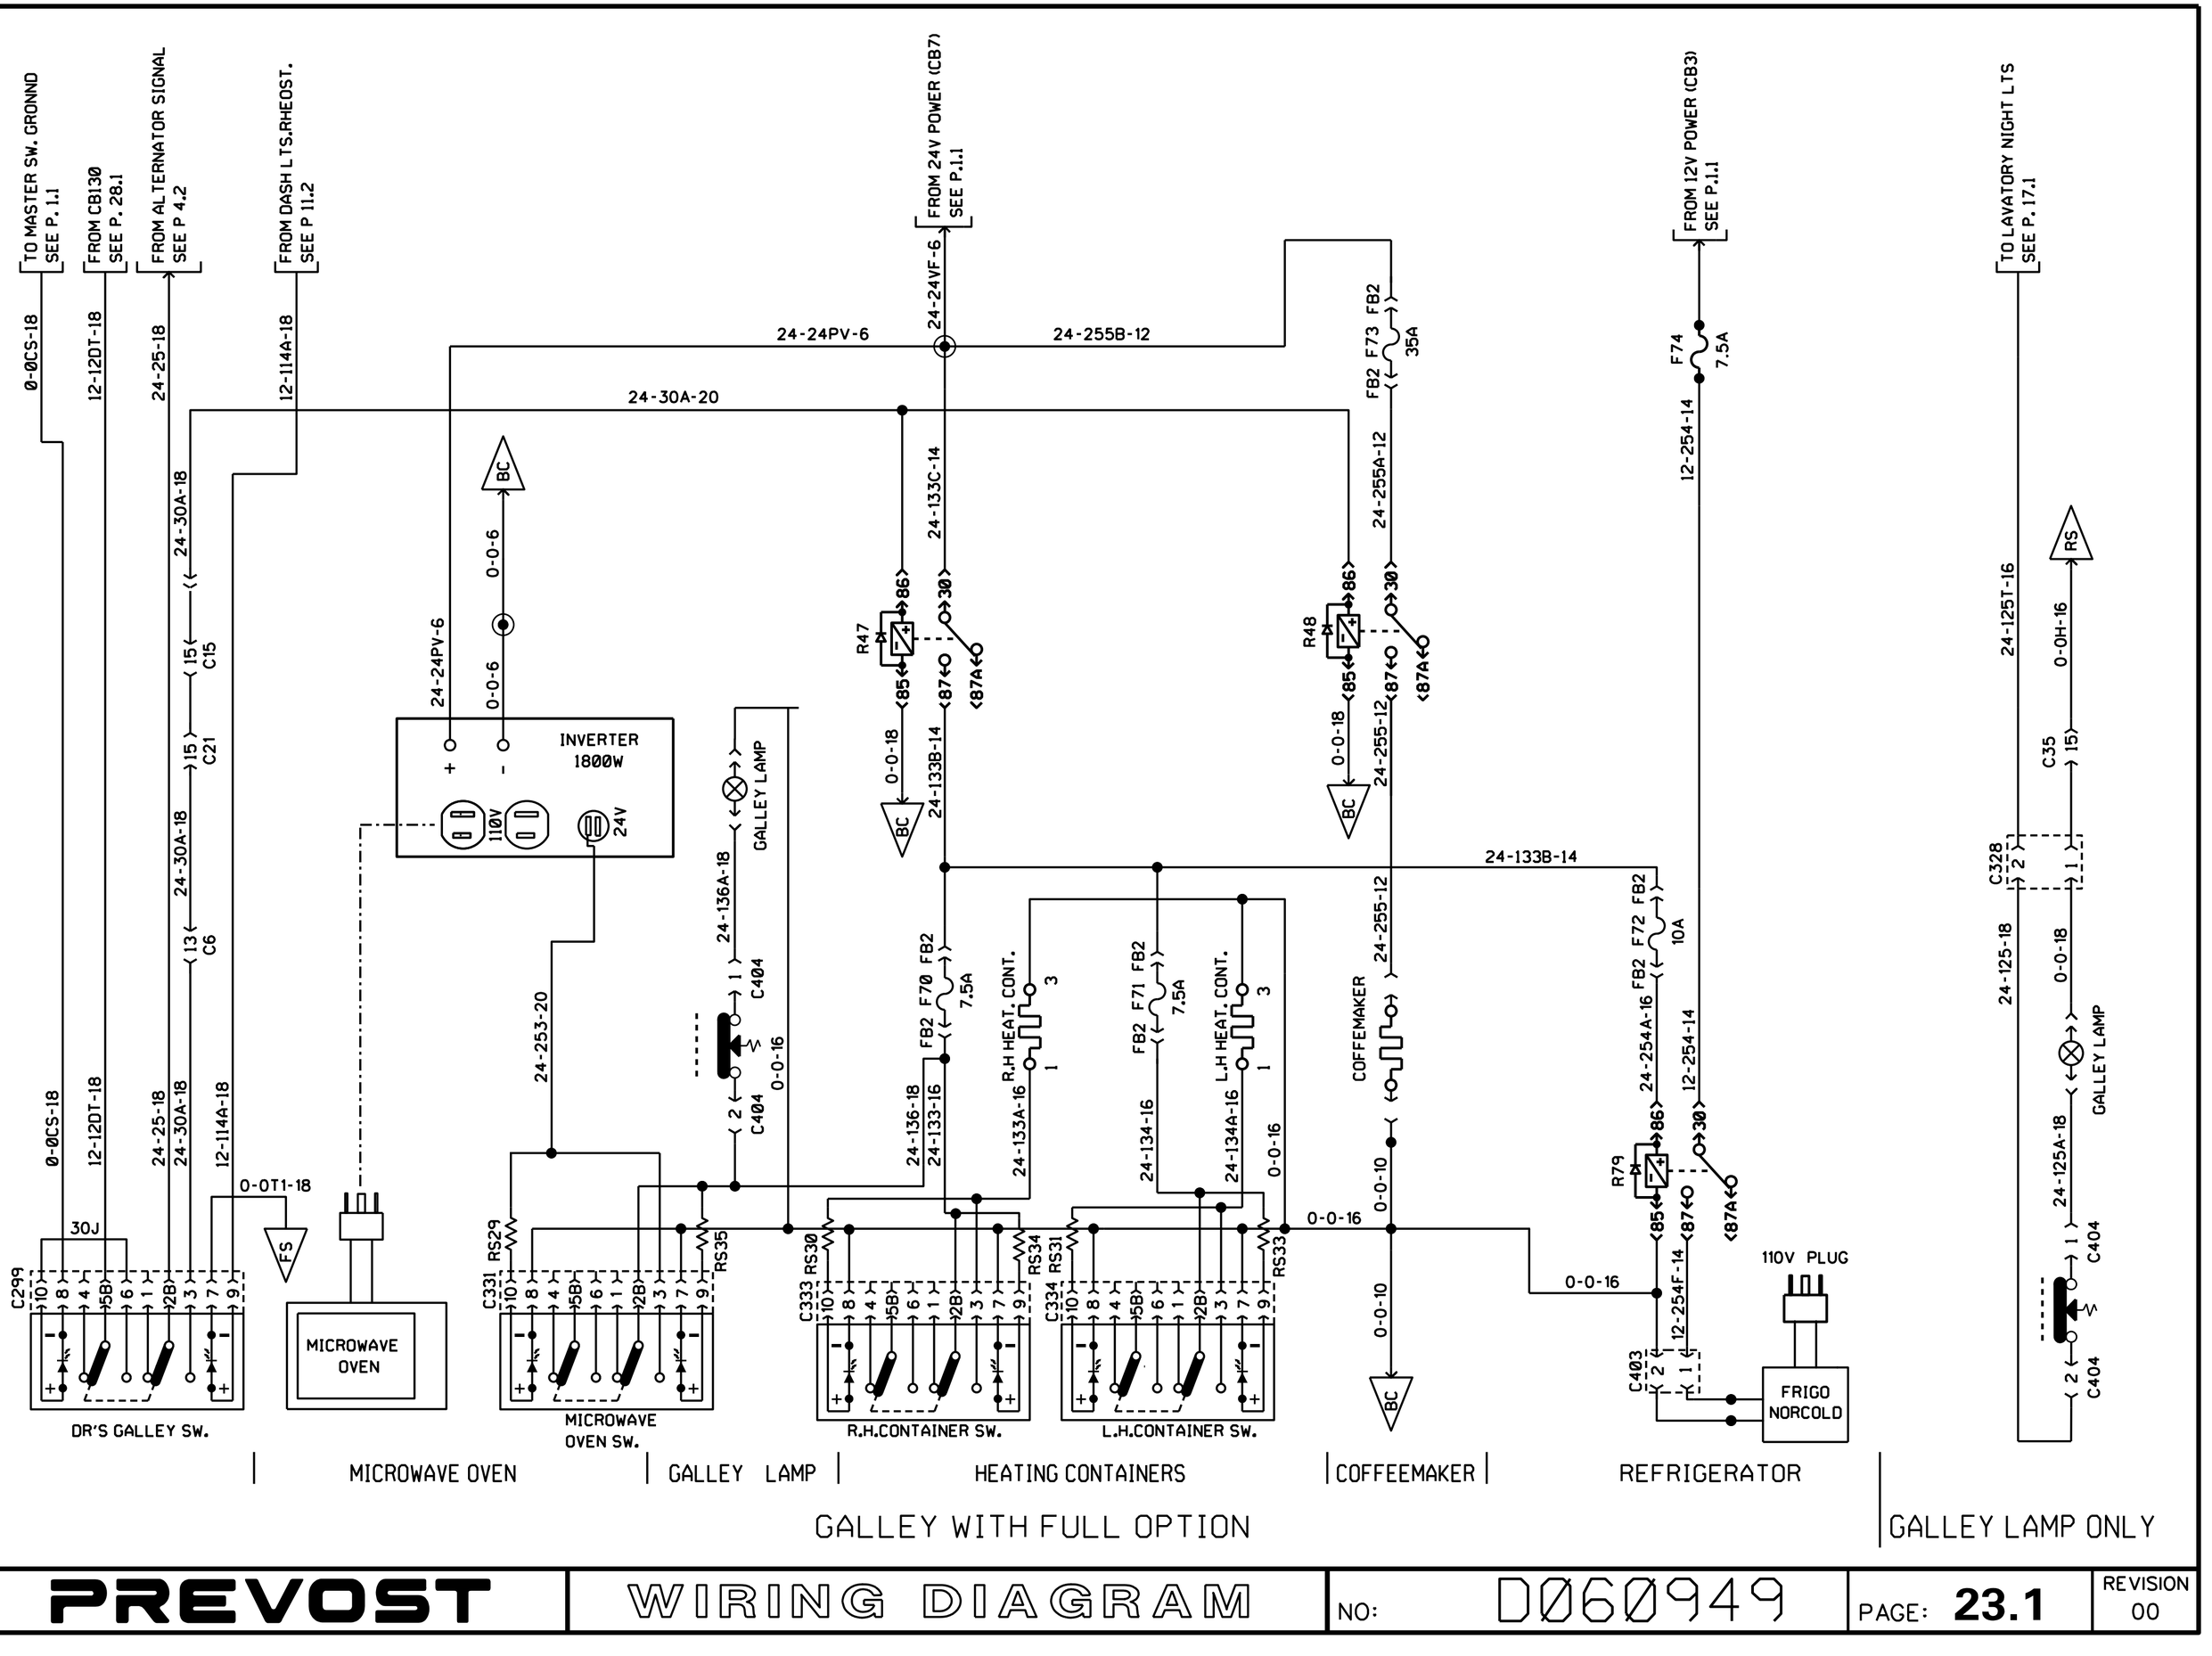

TO MASTER SW. GRONND
SEE P. 1.1
FROM CB130
SEE P. 28.1
FROM ALTERNATOR SIGNAL
SEE P 4.2
FROM DASH LTS.RHEOST.
SEE P 11.2
FROM 24V POWER (CB7)
SEE P.1.1
FROM 12V POWER (CB3)
SEE P.1.1
TO LAVATORY NIGHT LTS
SEE P. 17.1
0-0CS-18
12-12DT-18
24-25-18
24-30A-18
12-114A-18
24-24PV-6
24-24VF-6
24-255B-12
24-30A-20
24-255A-12
FB2 F73 FB2
35A
F74
7.5A
12-254-14
24-125T-16
0-OH-16
C35
15
RS
C328
24-125-18
GALLEY LAMP
C404
INVERTER
1800W
110V
24V
BC
0-0-6
0-0-18
24-133C-14
24-133B-14
R47
R48
86
85
87
30
87A
24-136A-18
C404
0-0-16
24-253-20
FB2 F70 FB2
7.5A
FB2 F71 FB2
7.5A
R.H HEAT. CONT.
L.H HEAT. CONT.
3
1
24-136-18
24-133-16
24-133A-16
24-134-16
24-134A-16
COFFEMAKER
24-255-12
0-0-10
FB2 F72 FB2
10A
24-254A-16
12-254-14
R79
24-254F-14
C403
110V PLUG
FRIGO
NORCOLD
0-0T1-18
FS
30J
C15
C21
C6
C299
C331 RS29
RS35
C333 RS30
RS34
C334 RS31
RS33
MICROWAVE
OVEN
DR'S GALLEY SW.
MICROWAVE
OVEN SW.
R.H.CONTAINER SW.
L.H.CONTAINER SW.
MICROWAVE OVEN
GALLEY LAMP
HEATING CONTAINERS
COFFEEMAKER
REFRIGERATOR
GALLEY WITH FULL OPTION
GALLEY LAMP ONLY

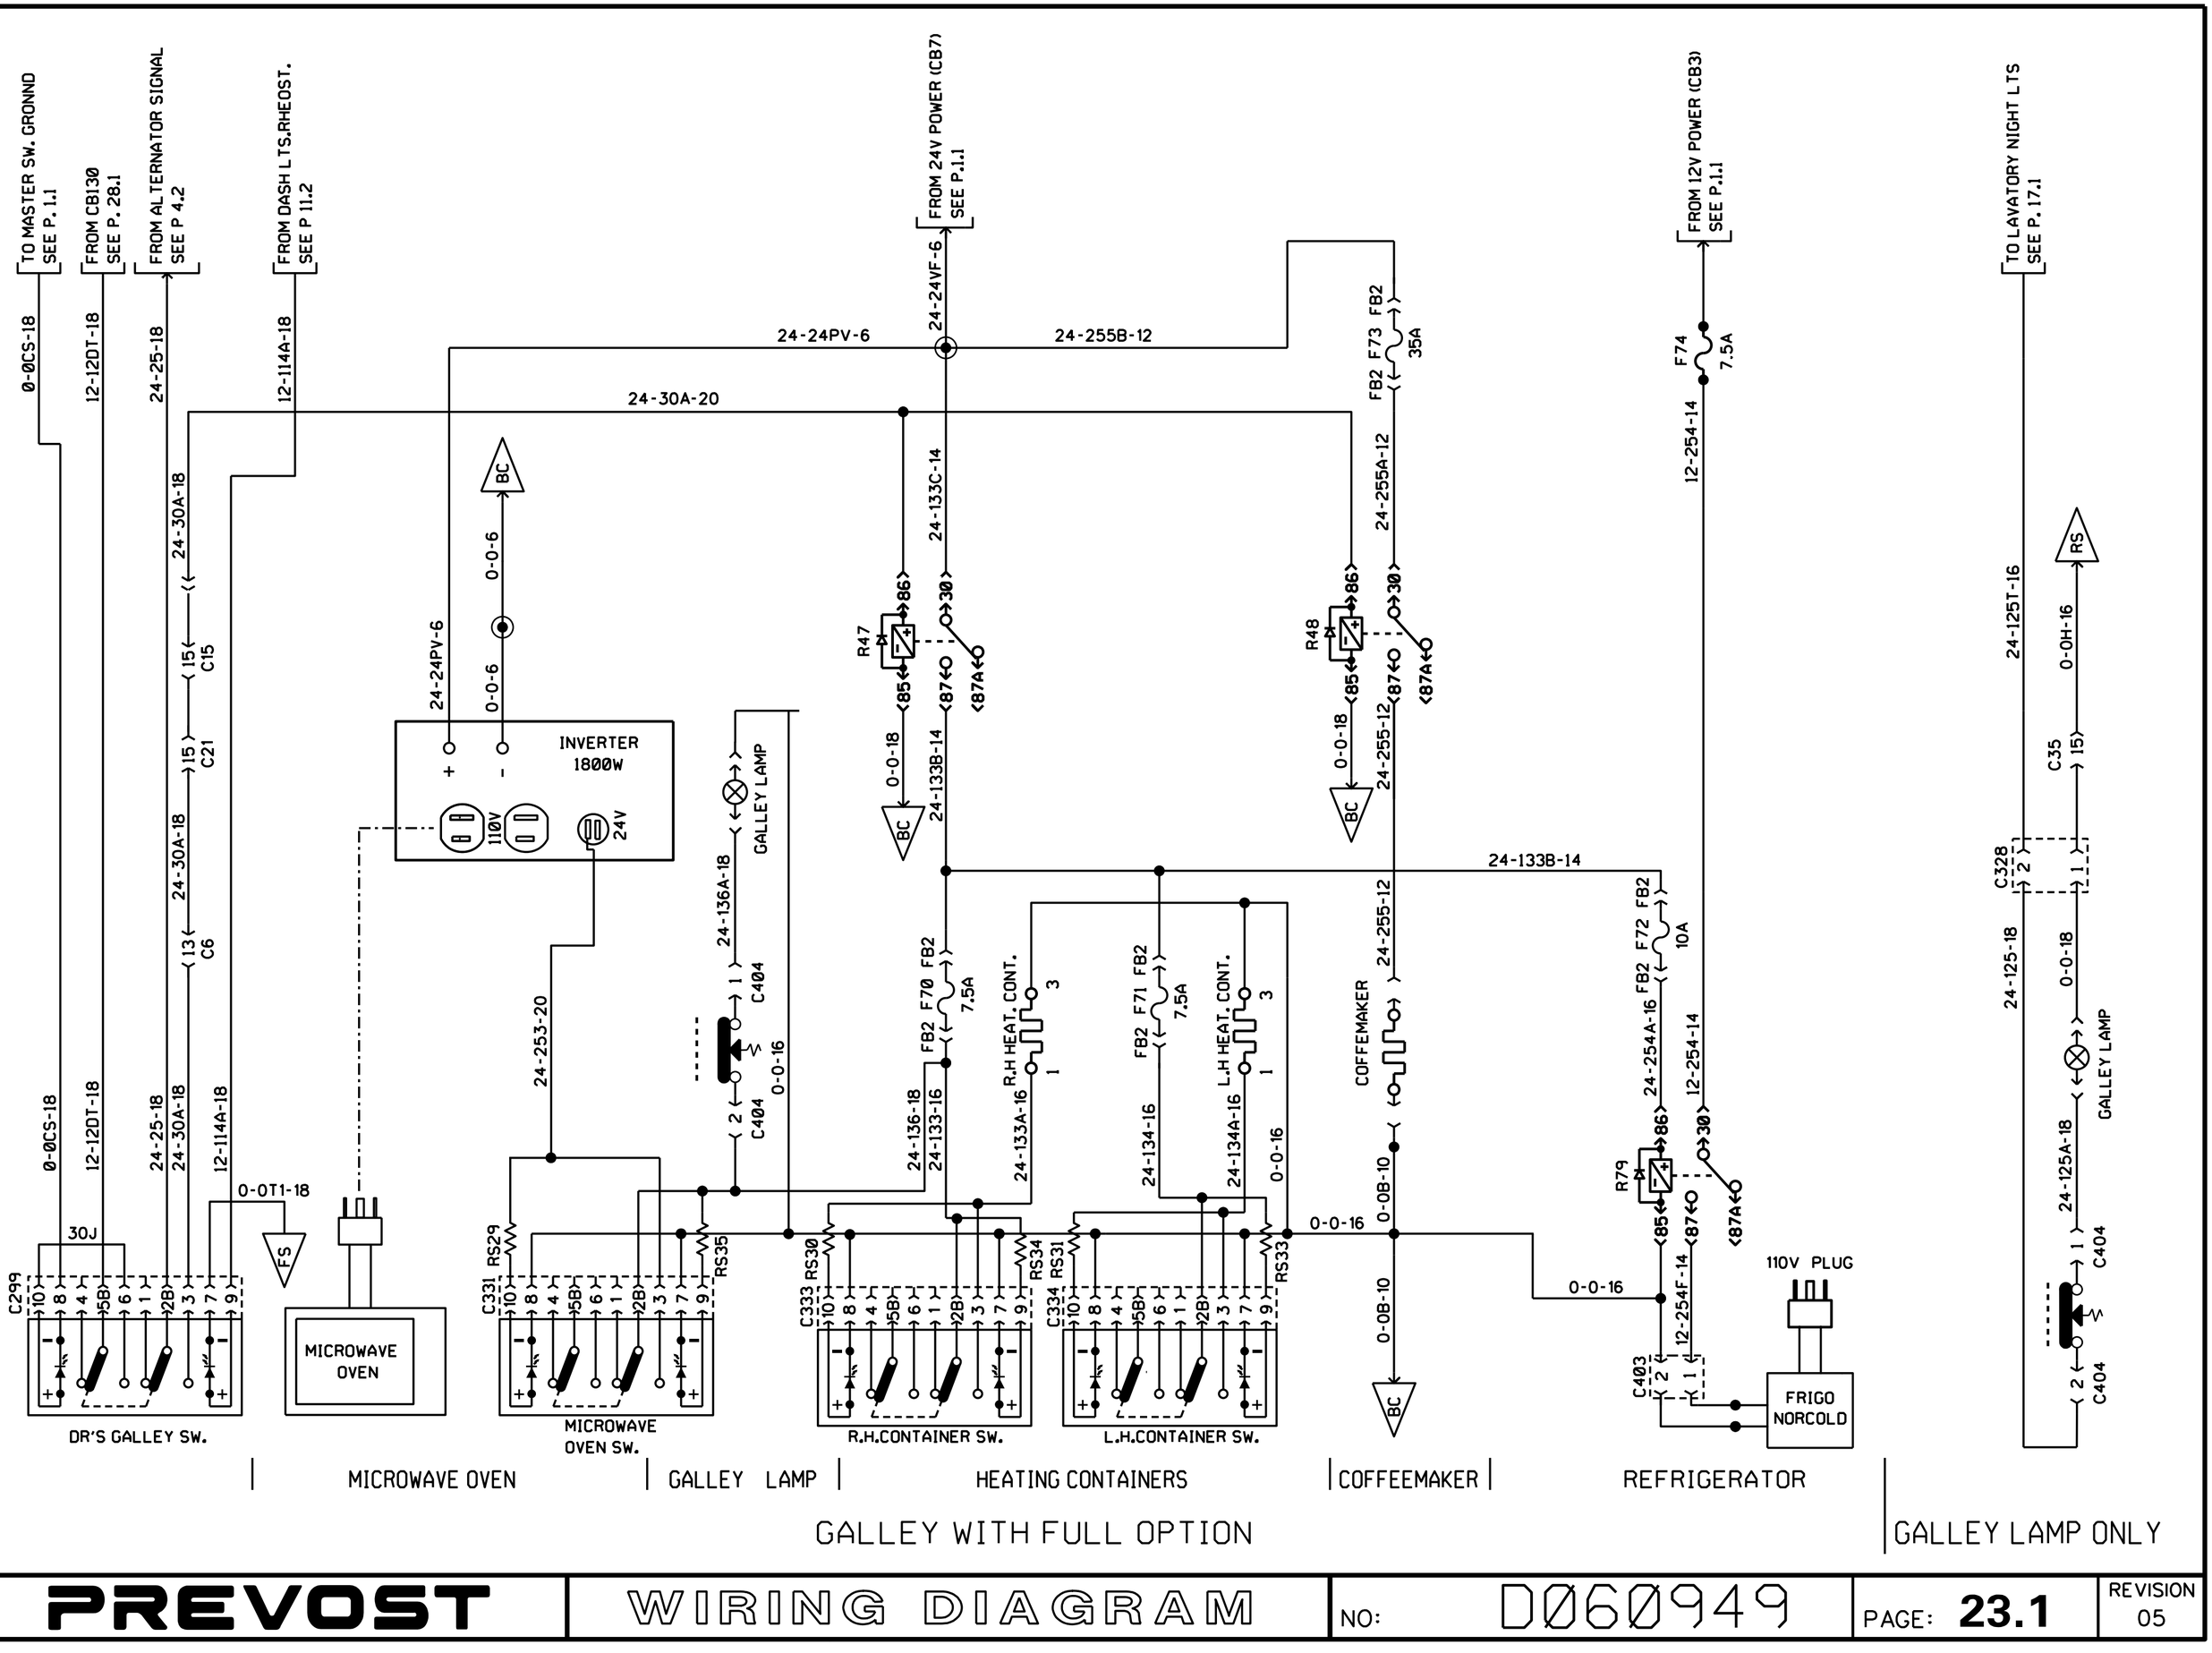


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 23.1	REVISION 05

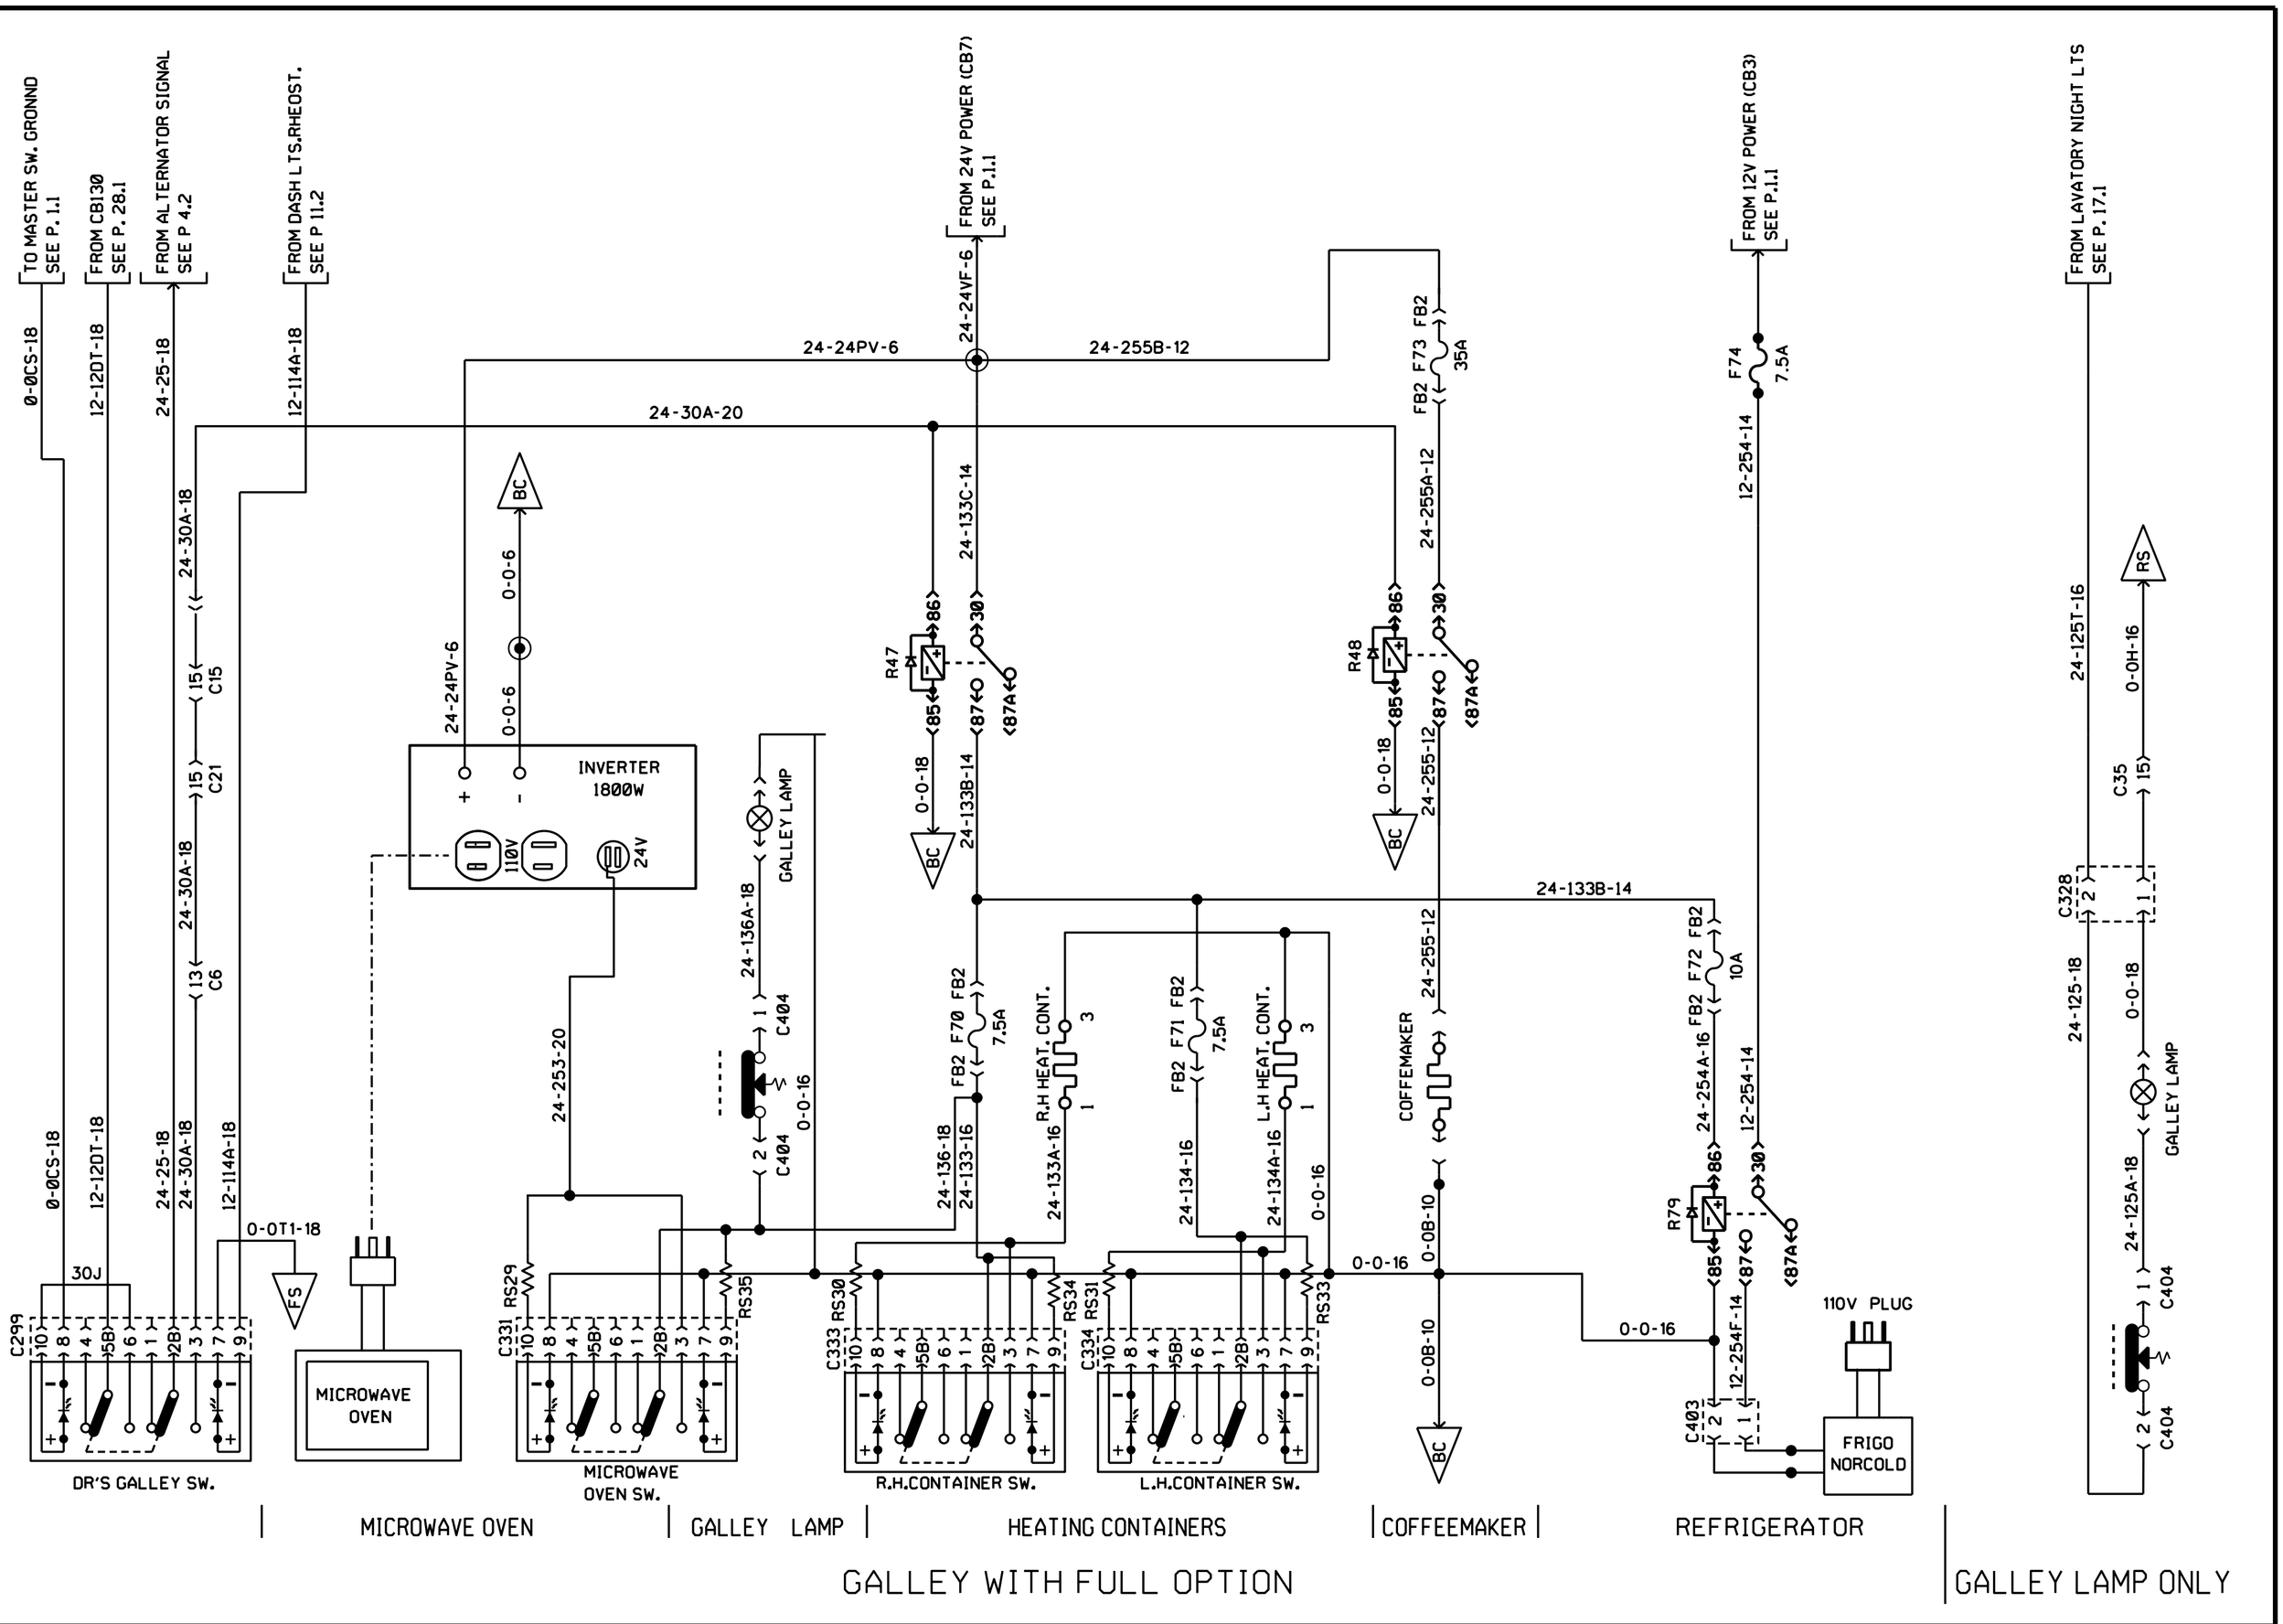


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 23.1	REVISION 08

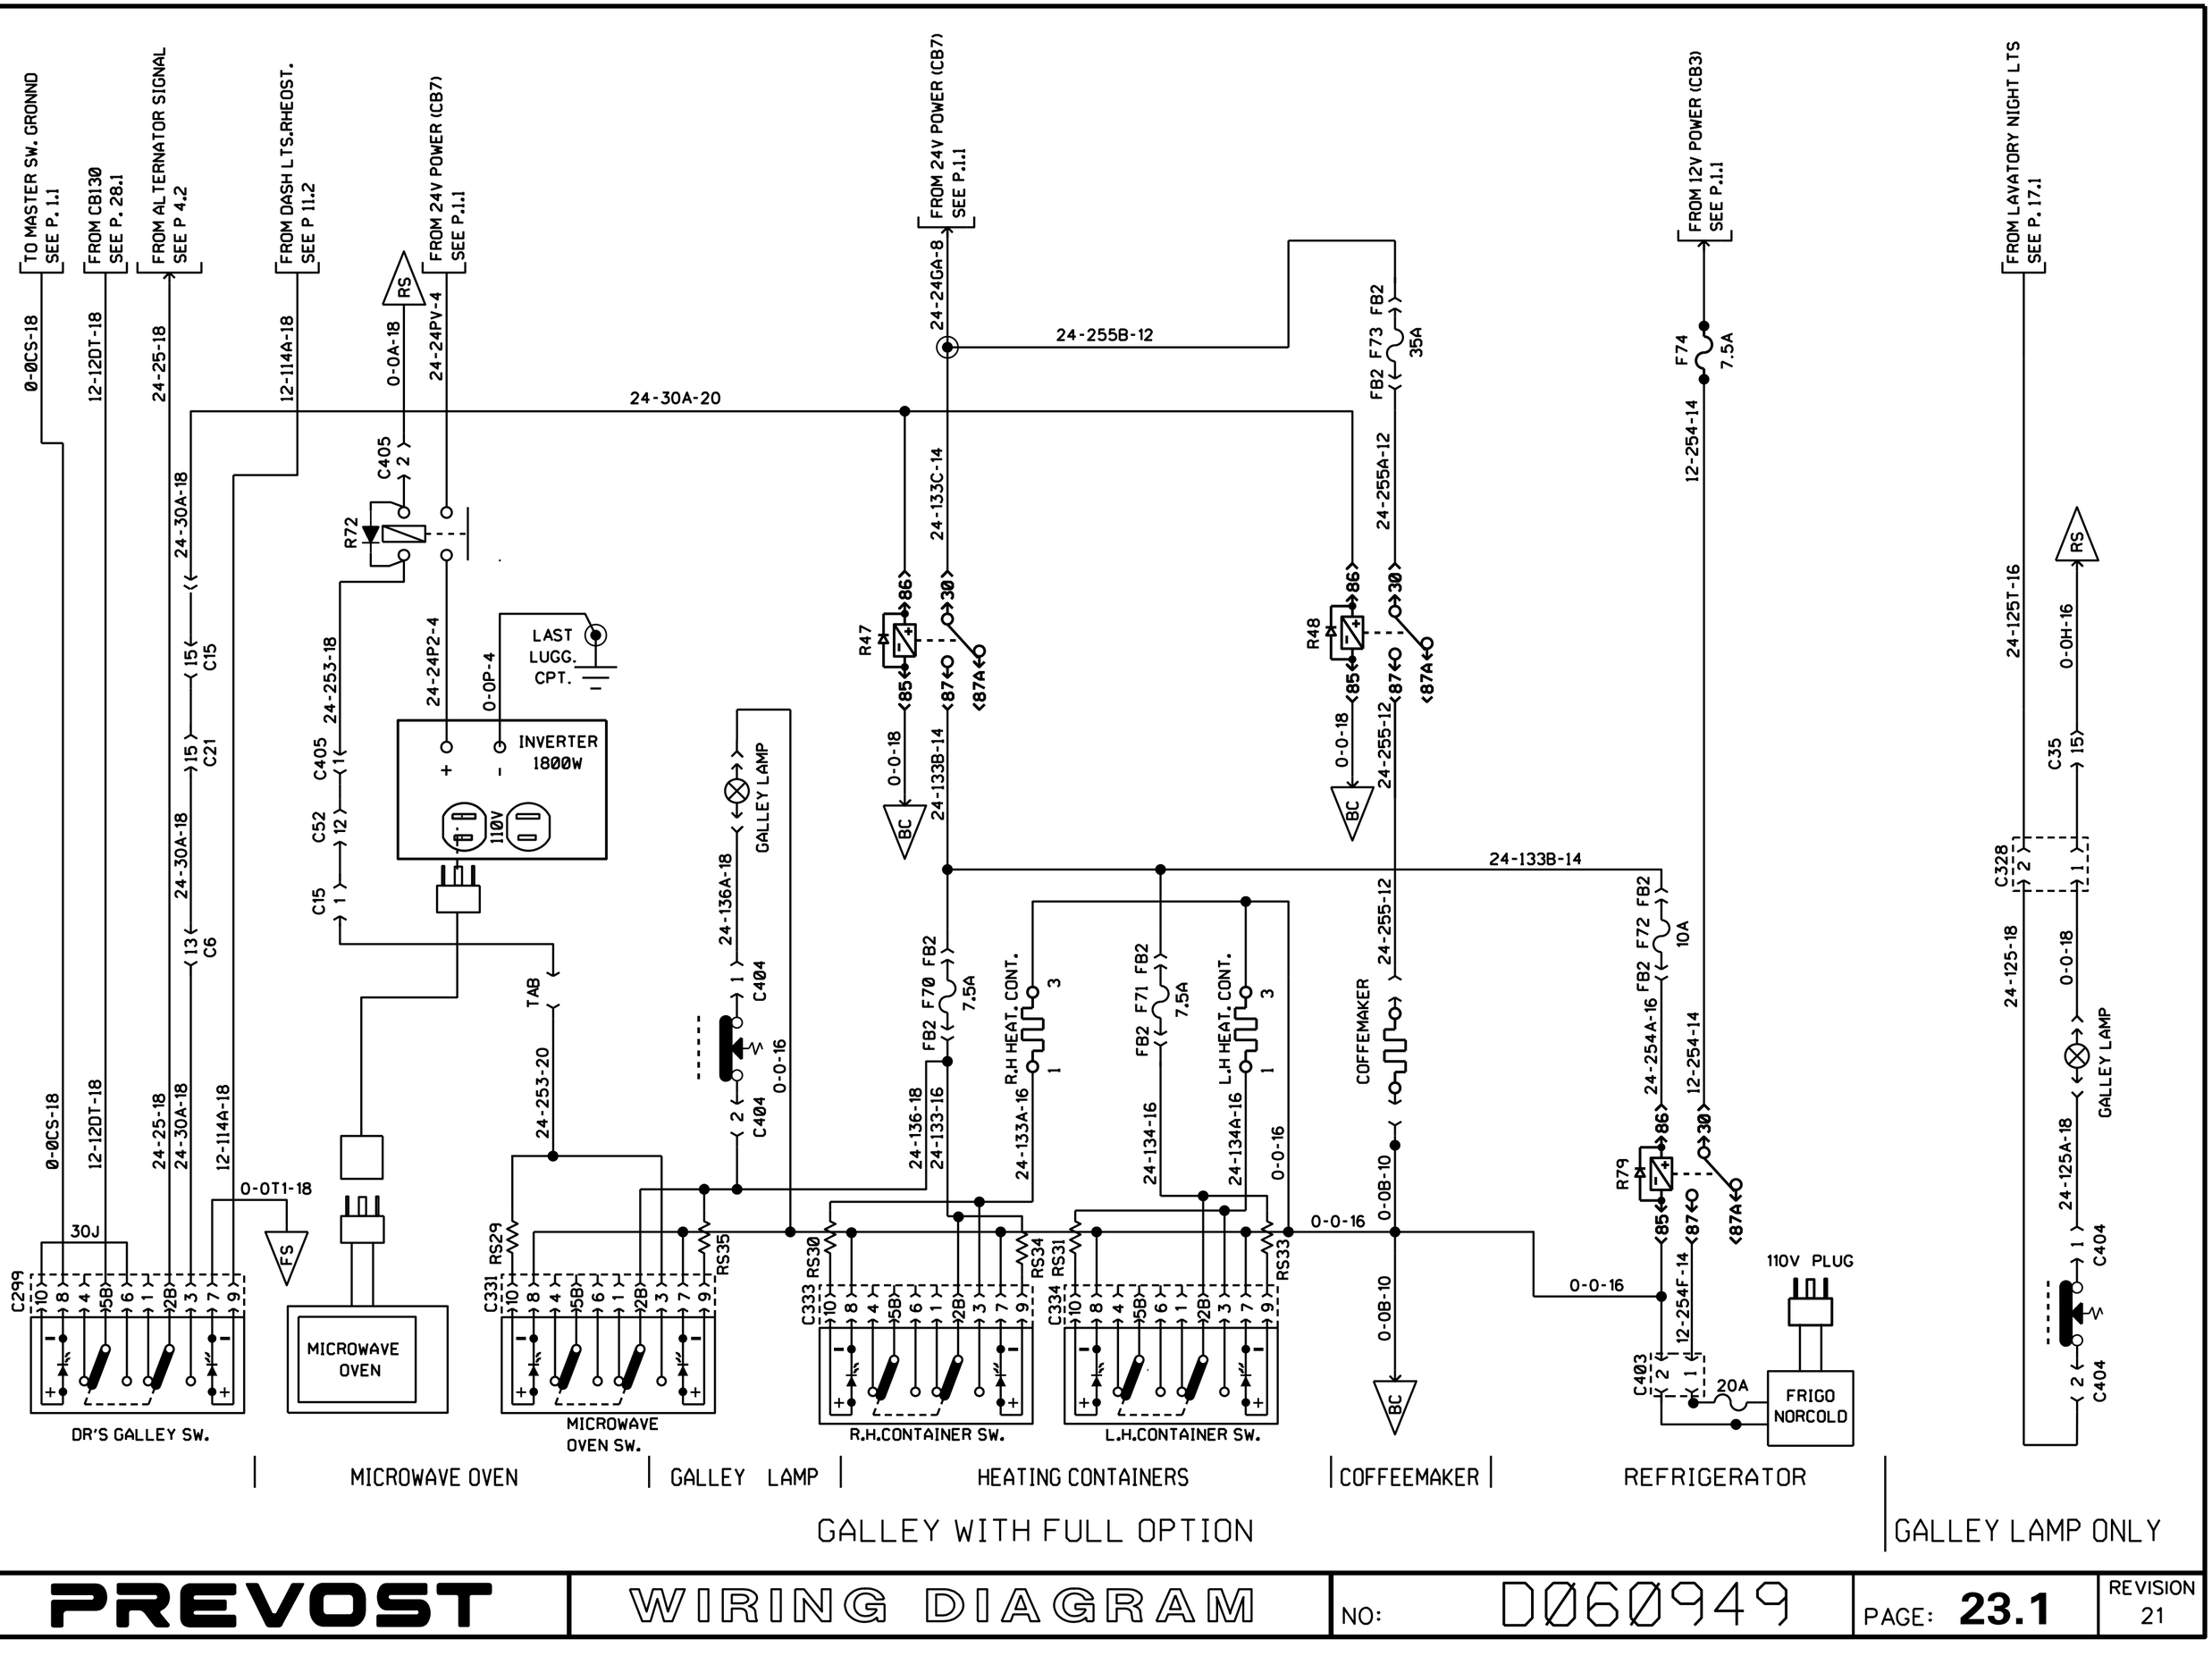


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 23.1	REVISION 21

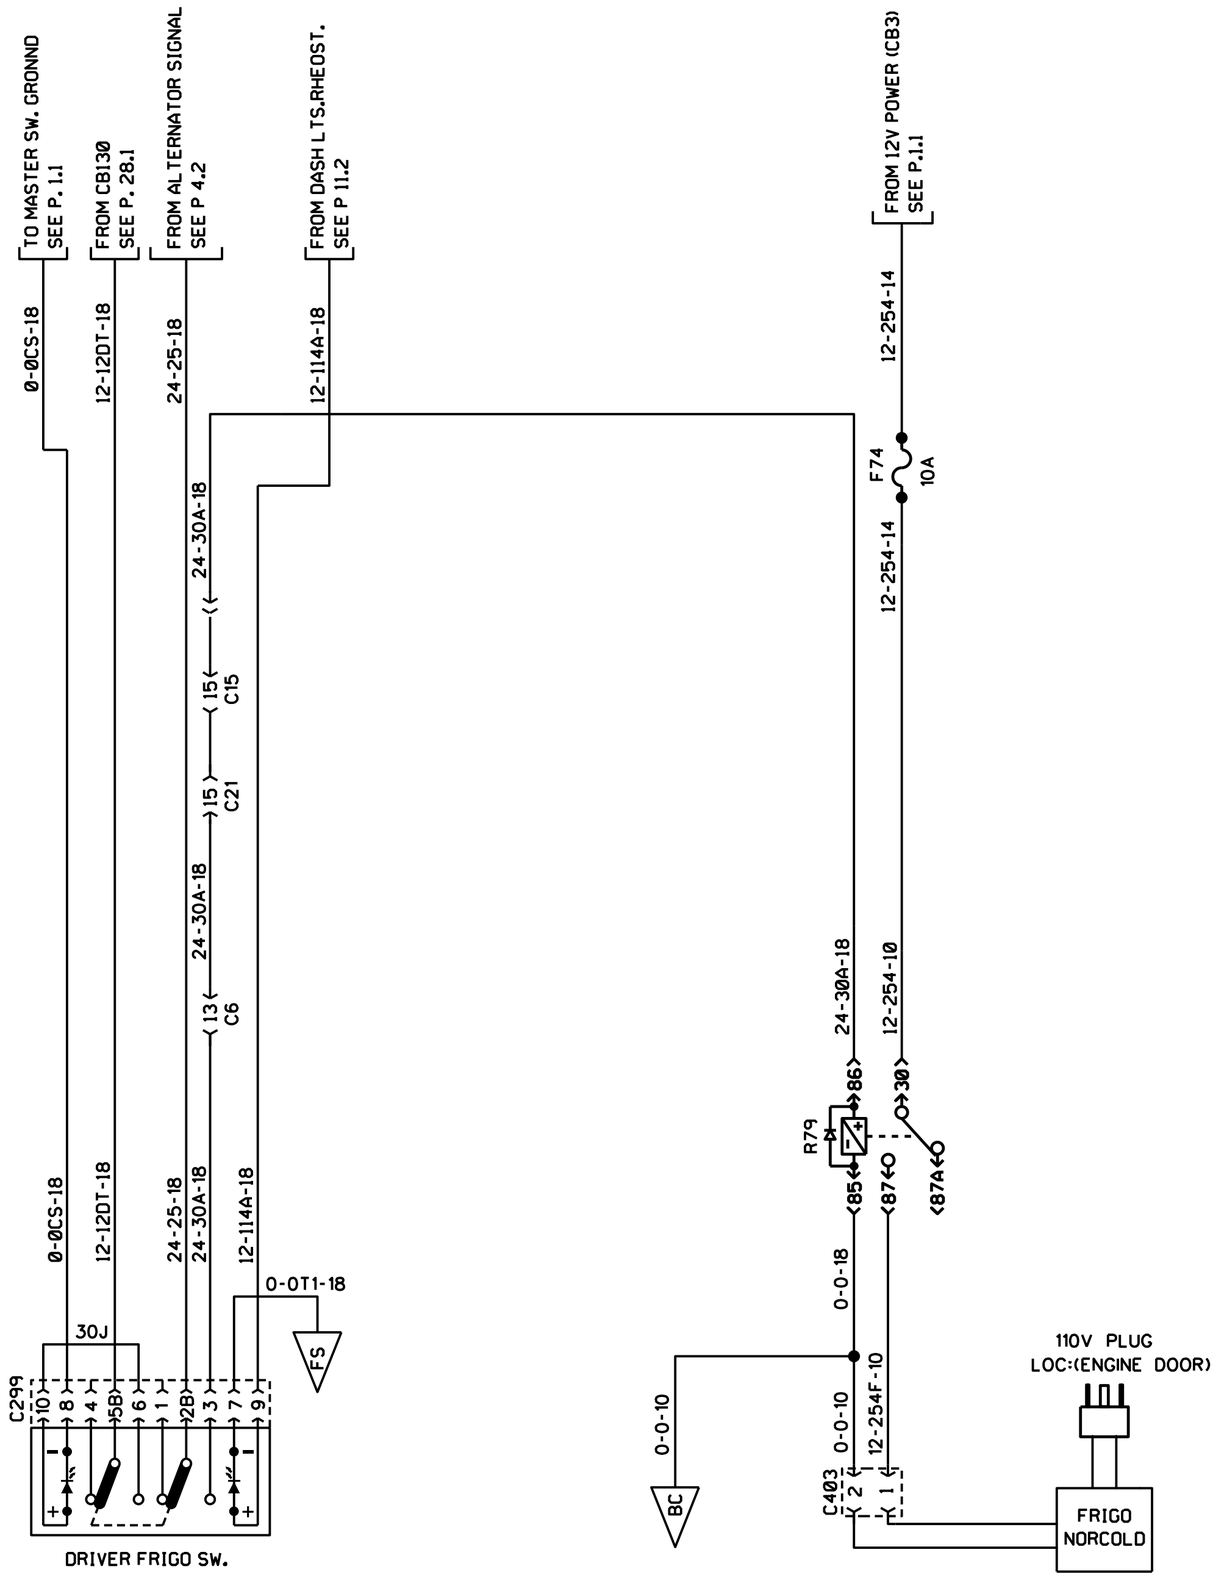

REFRIGERATOR FIRST LUGGAGE CPT.

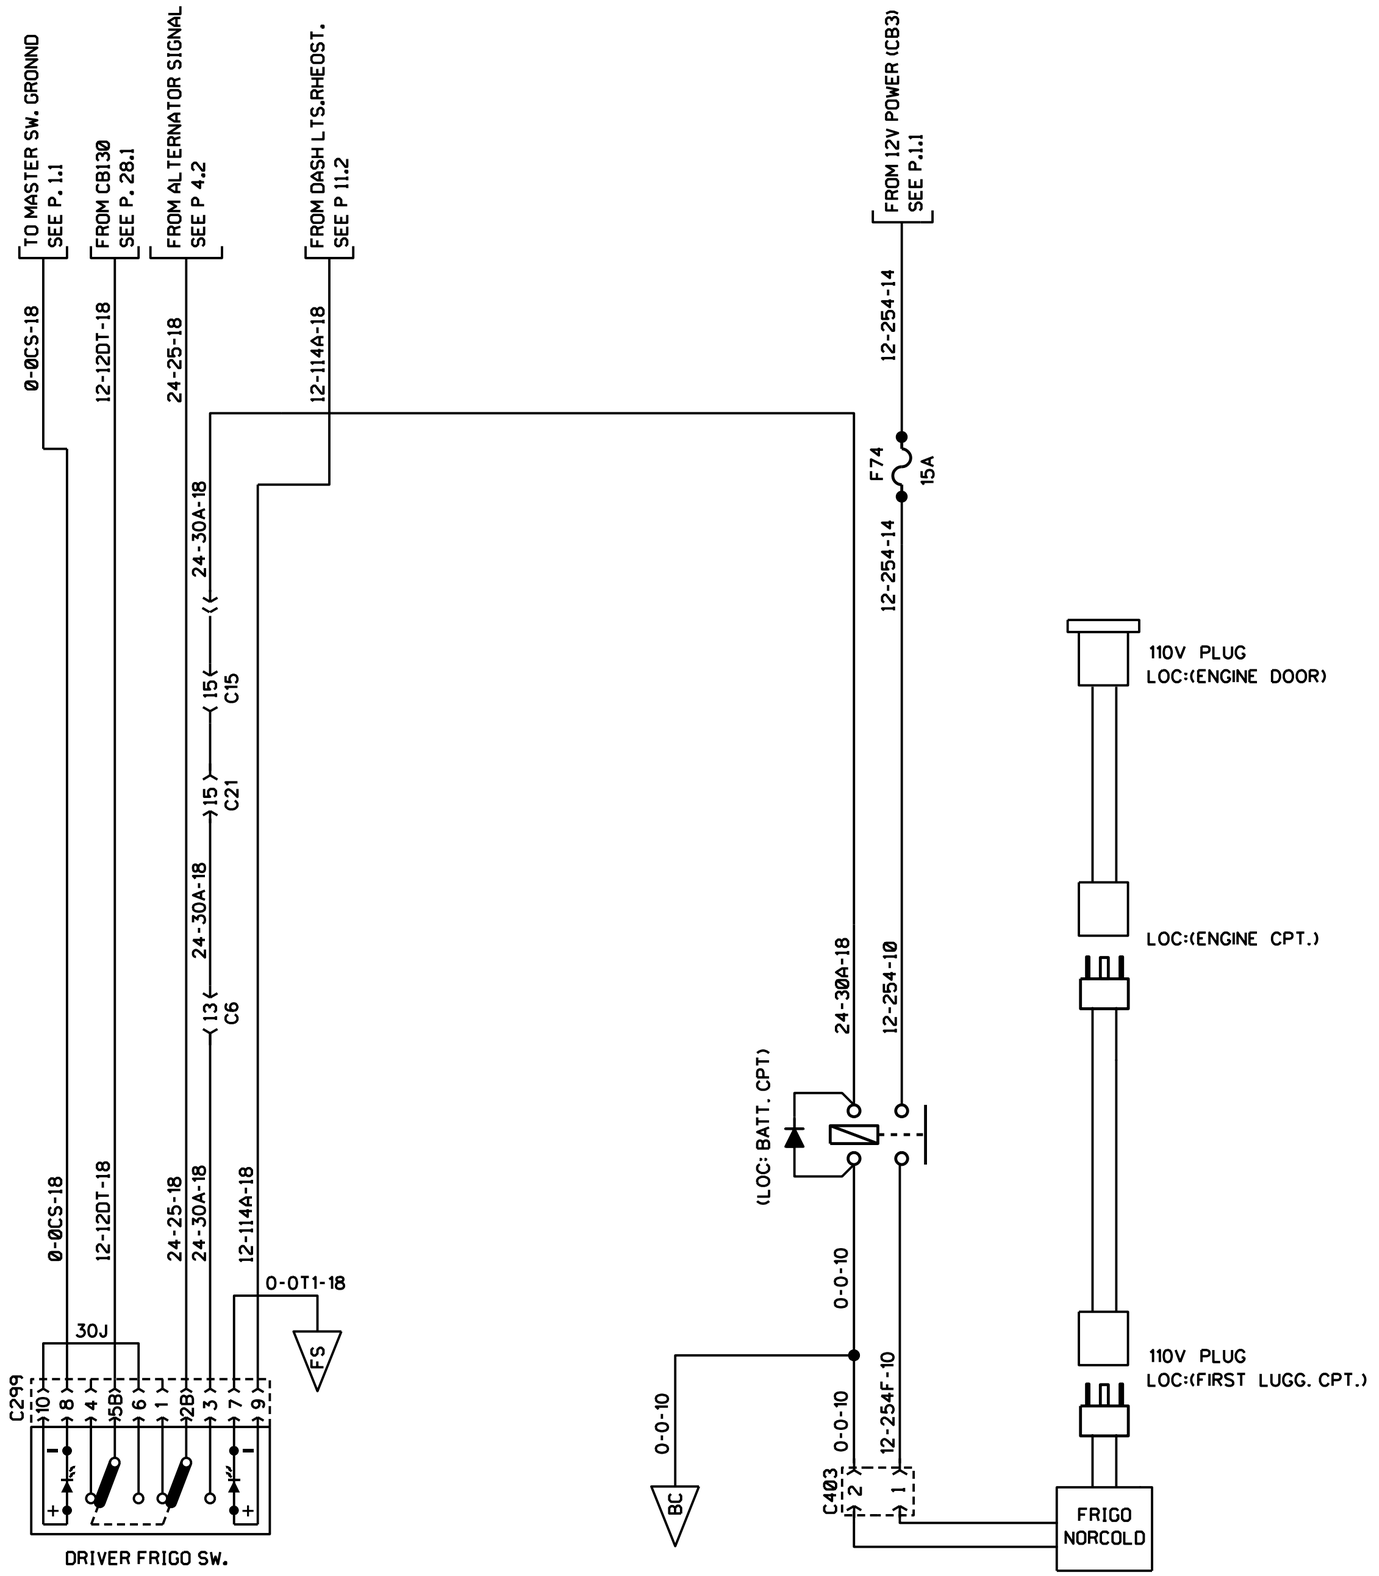


REFRIGERATOR FIRST LUGGAGE CPT.

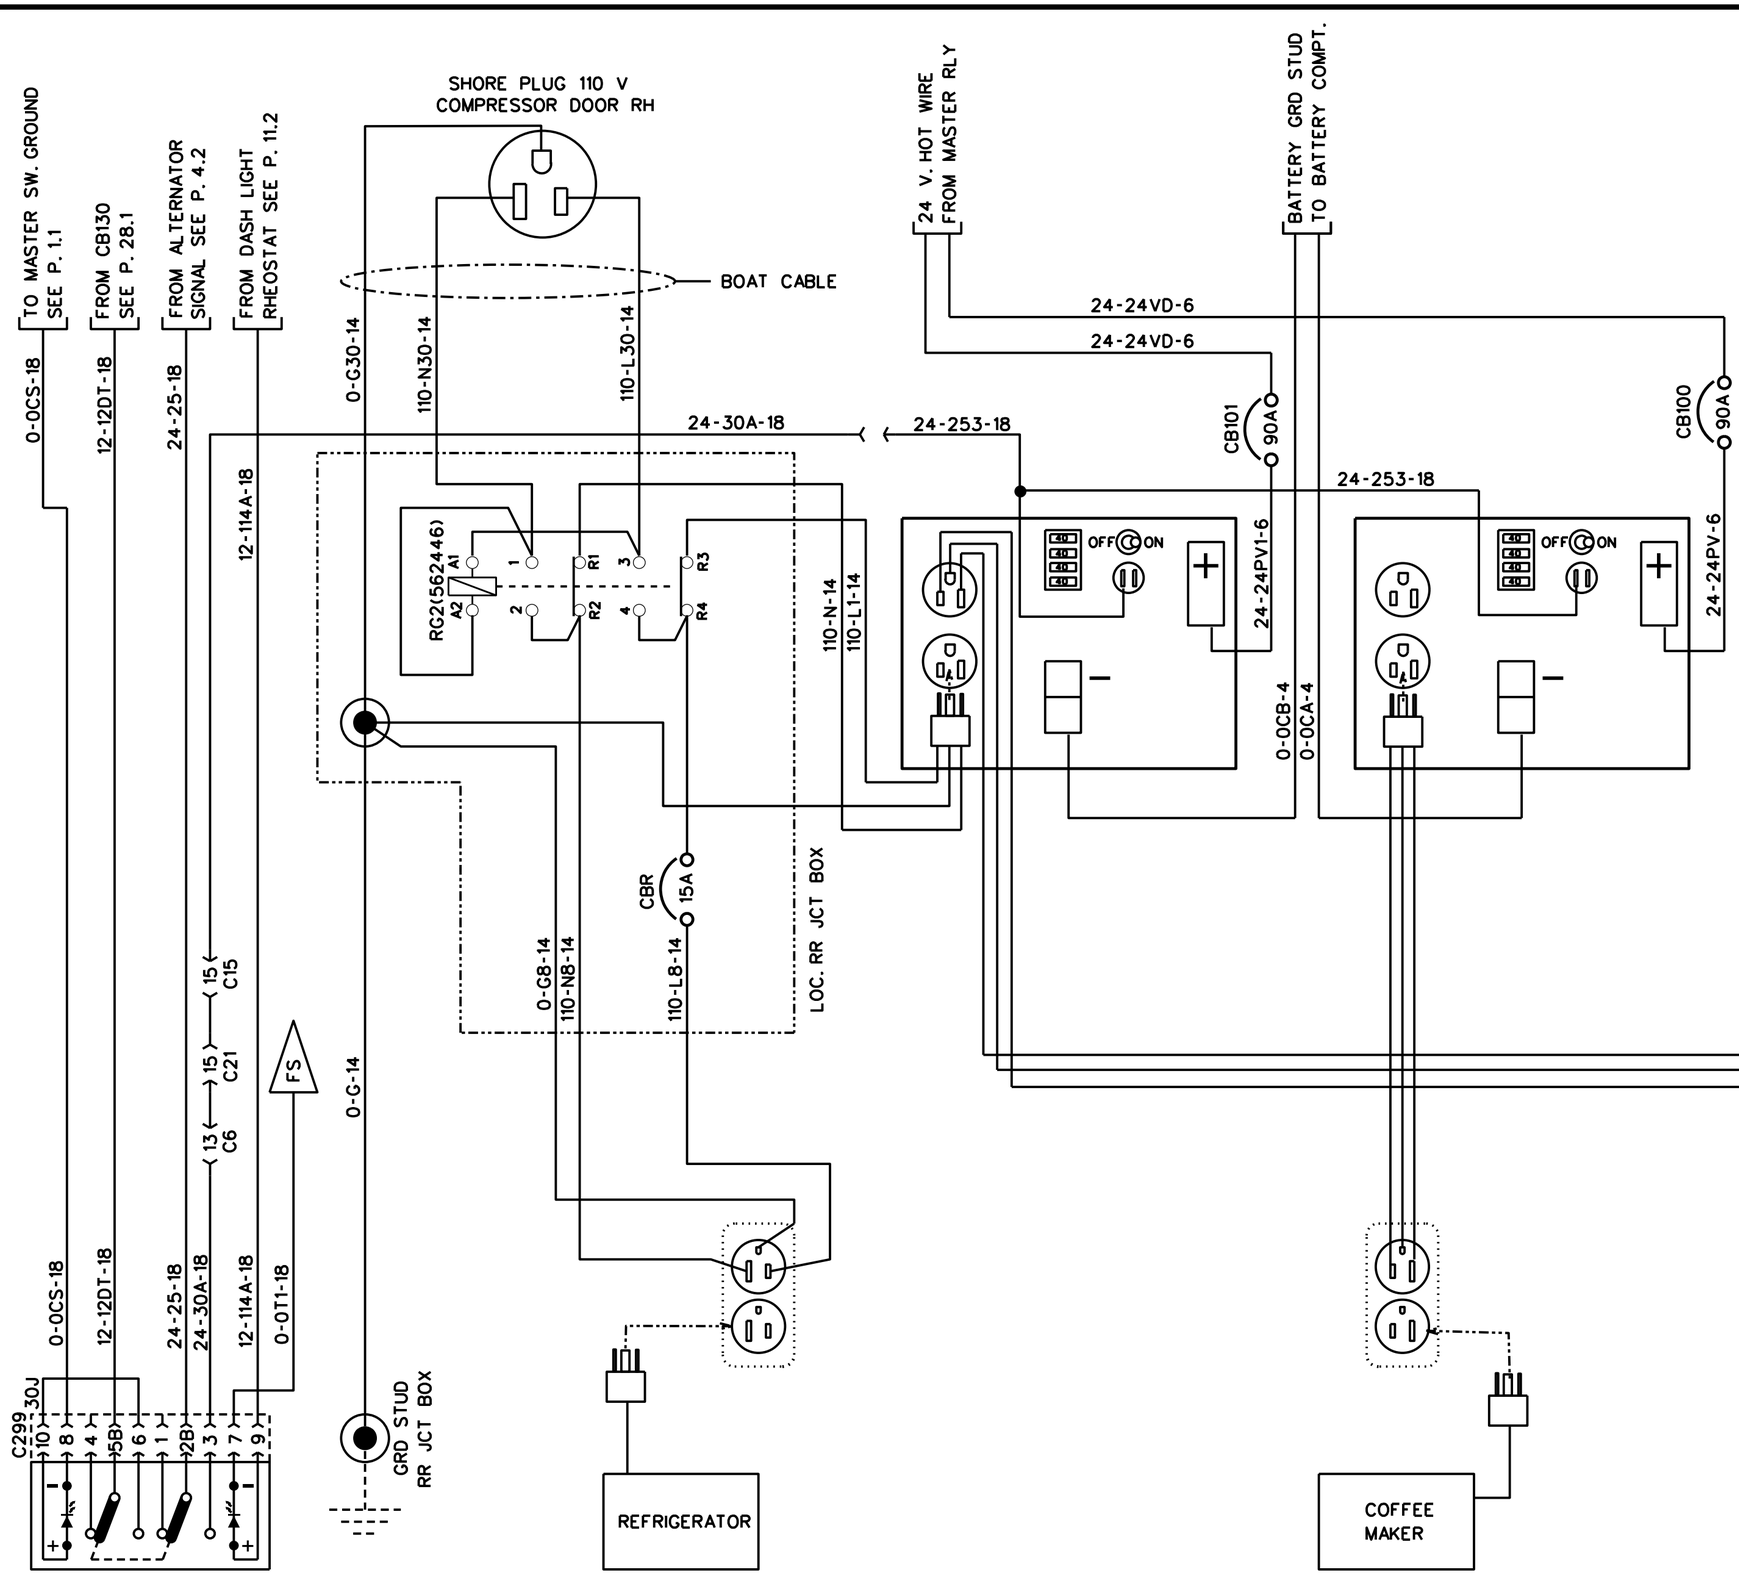

REFRIGERATOR | COFFEEMAKER | PLUG 120V. FOR COMPUTER


1-4149 (QUEBECOISE)

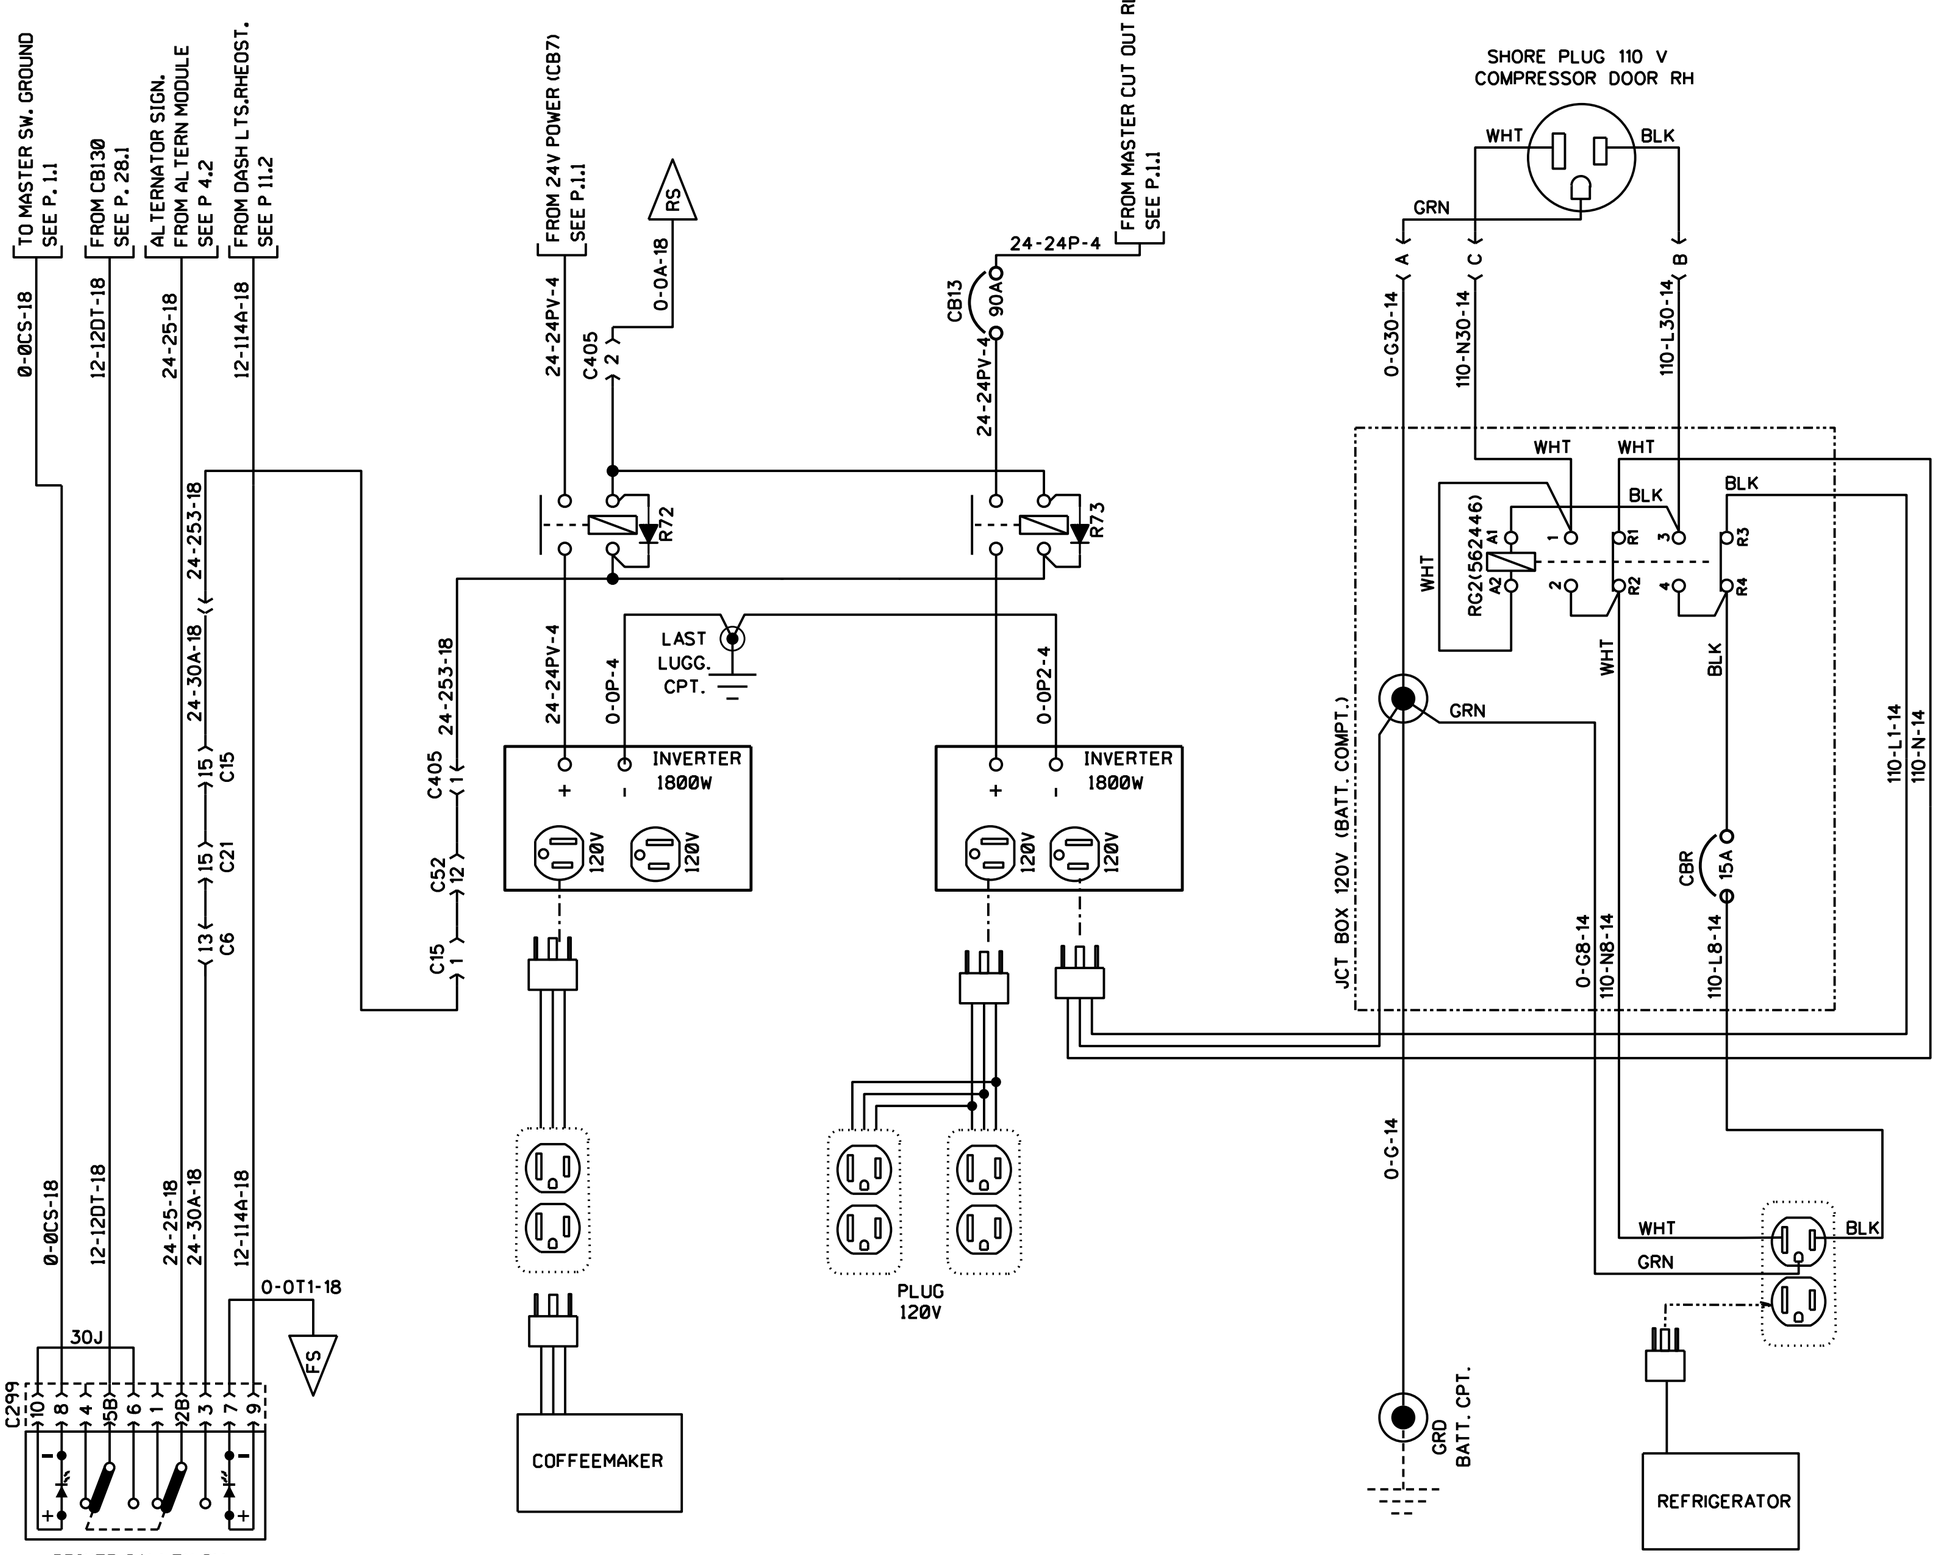

120V OUTLET

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 23.1SP2	REVISION 01

SANS RELAIS

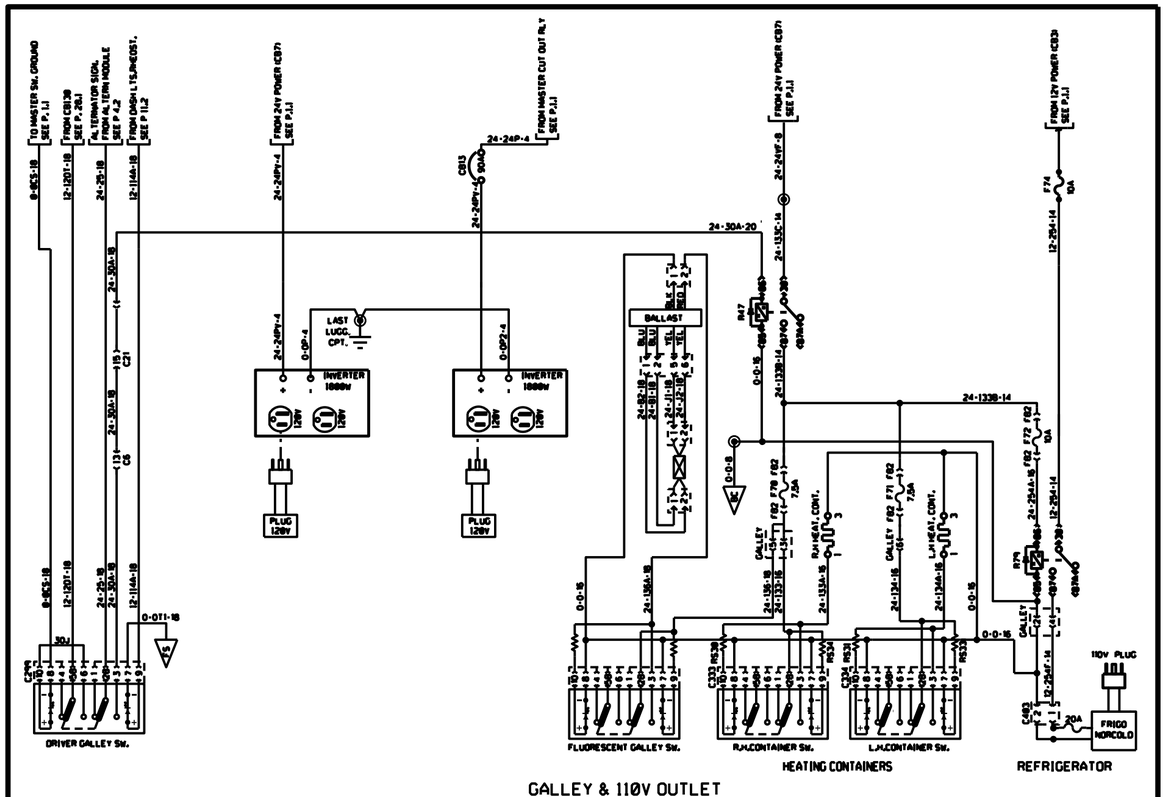


GALLEY & 110V OUTLET

RED ARROW


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE:23.1sp3	REVISION 00

AVEC RELAIS

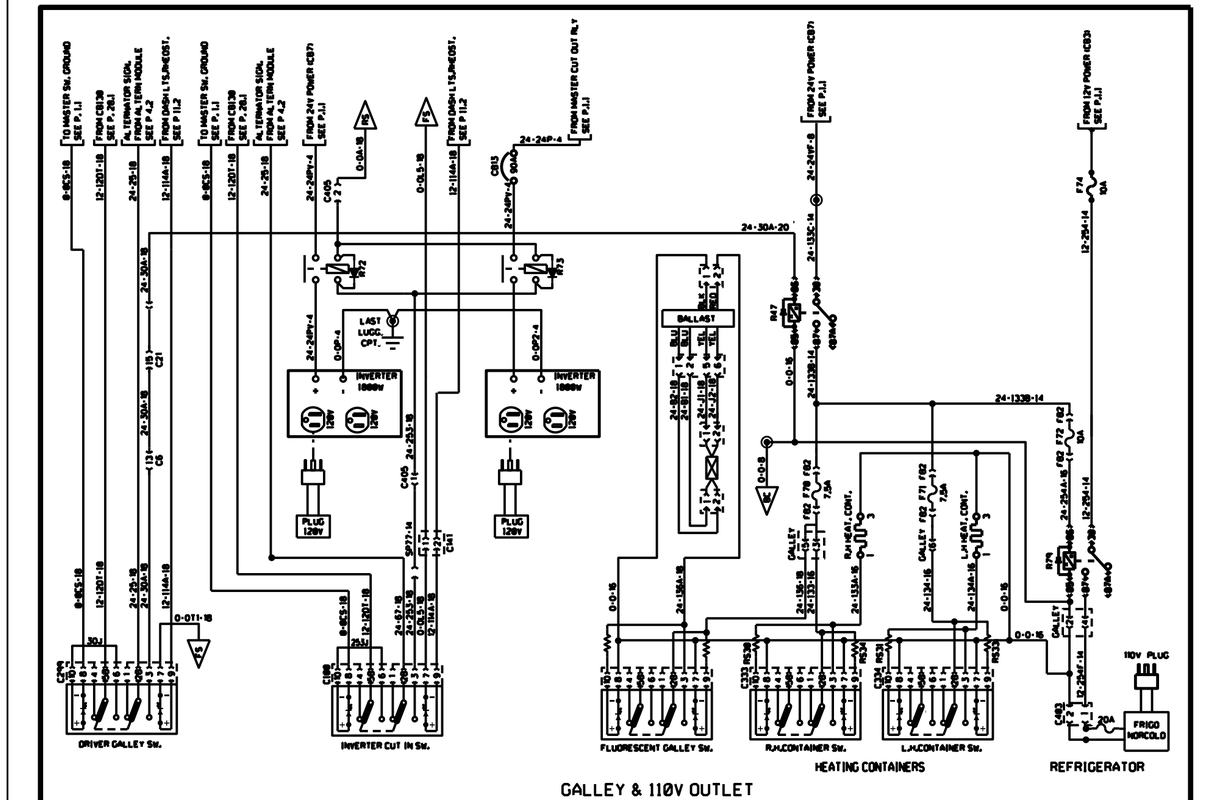


GALLEY & 110V OUTLET


PREVOST	WIRING DIAGRAM	NO: D060949	PAGE:23.1spX	REVISION 00

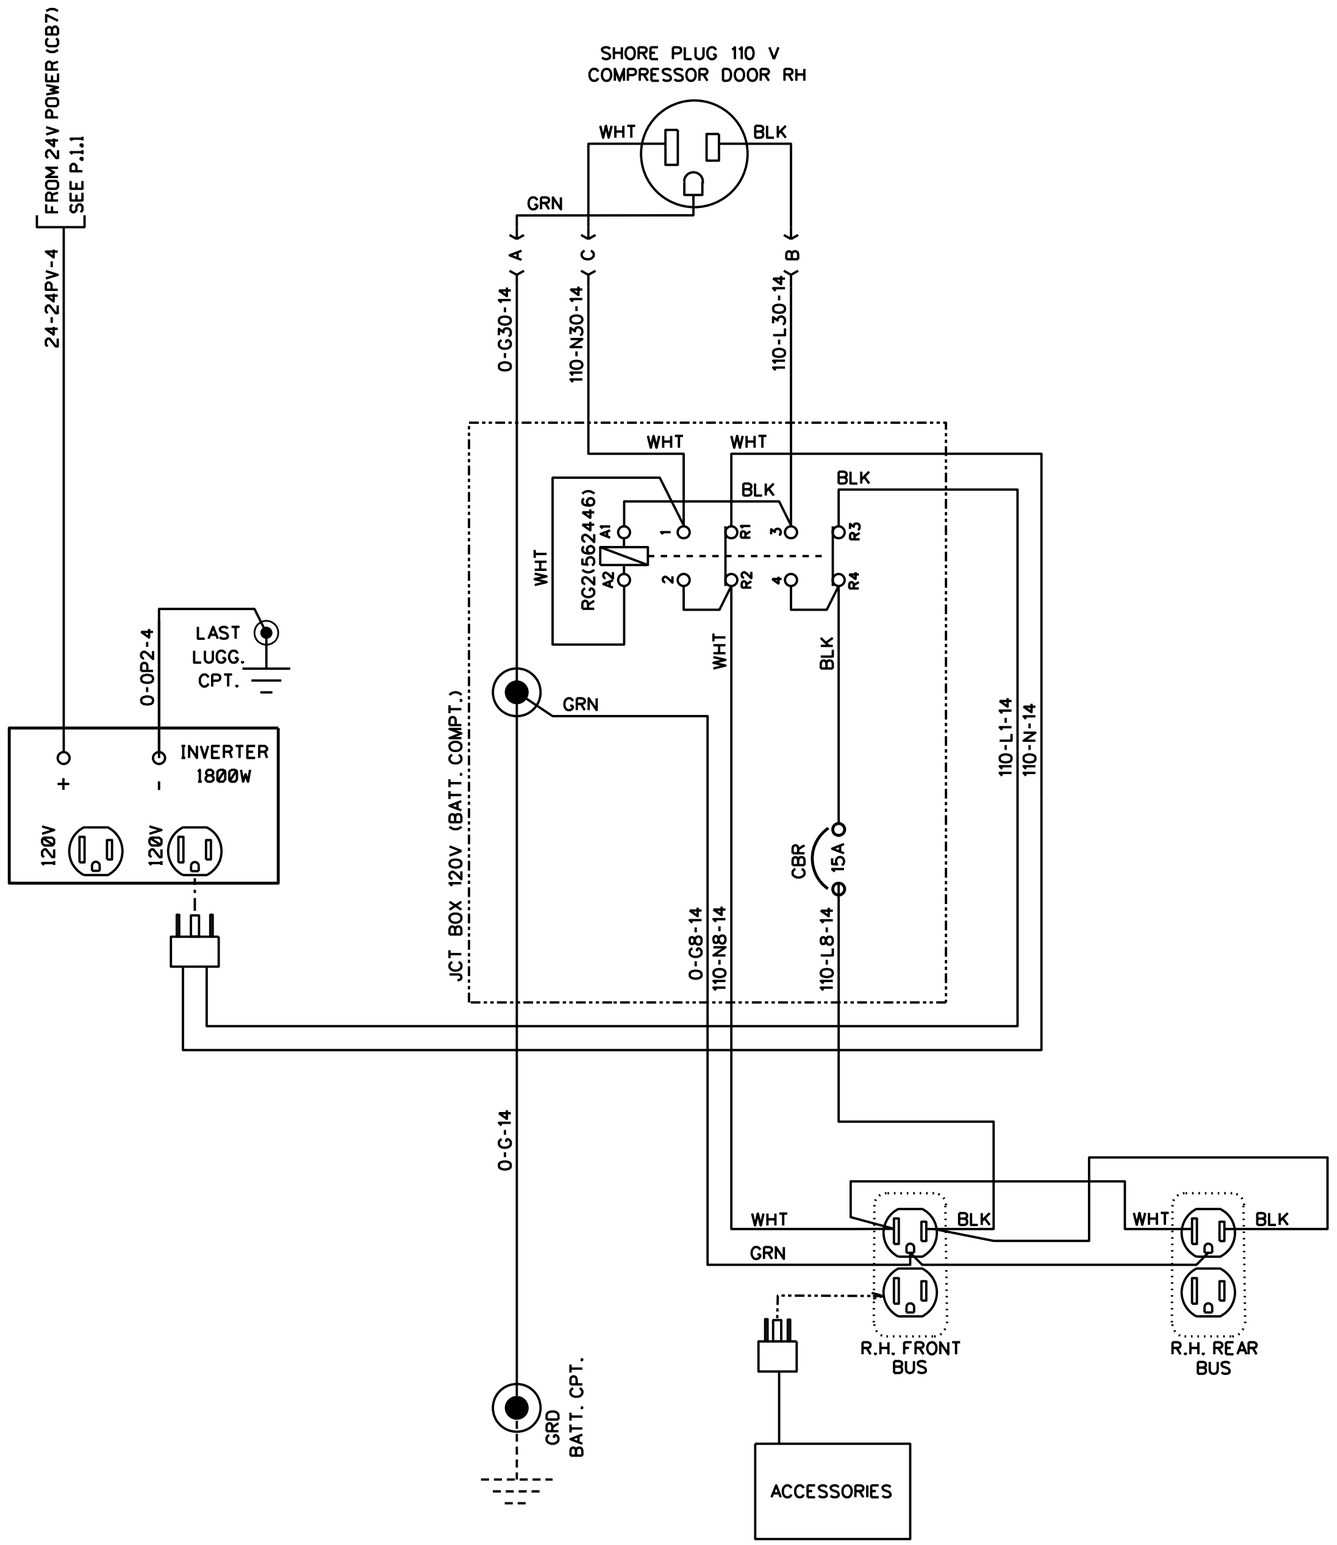
FROM 24V POWER (CB7)
SEE P.1.1
24-24PV-4
0-OP2-4
LAST
LUGG.
CPT.
INVERTER
1800W
+
-
120V
120V
SHORE PLUG 110 V
COMPRESSOR DOOR RH
WHT
BLK
GRN
A
C
B
0-G30-14
110-N30-14
110-L30-14
JCT. BOX 120V (BATT. COMPT.)
RG2(562446)
A1
A2
1
2
R1
R2
3
4
R3
R4
WHT
WHT
BLK
BLK
GRN
CBR
15A
0-G8-14
110-N8-14
110-L8-14
110-L1-14
110-N-14
0-G-14
GRD
BATT. CPT.
WHT
BLK
GRN
WHT
BLK
R.H. FRONT
BUS
R.H. REAR
BUS
ACCESSORIES


120V OUTLET

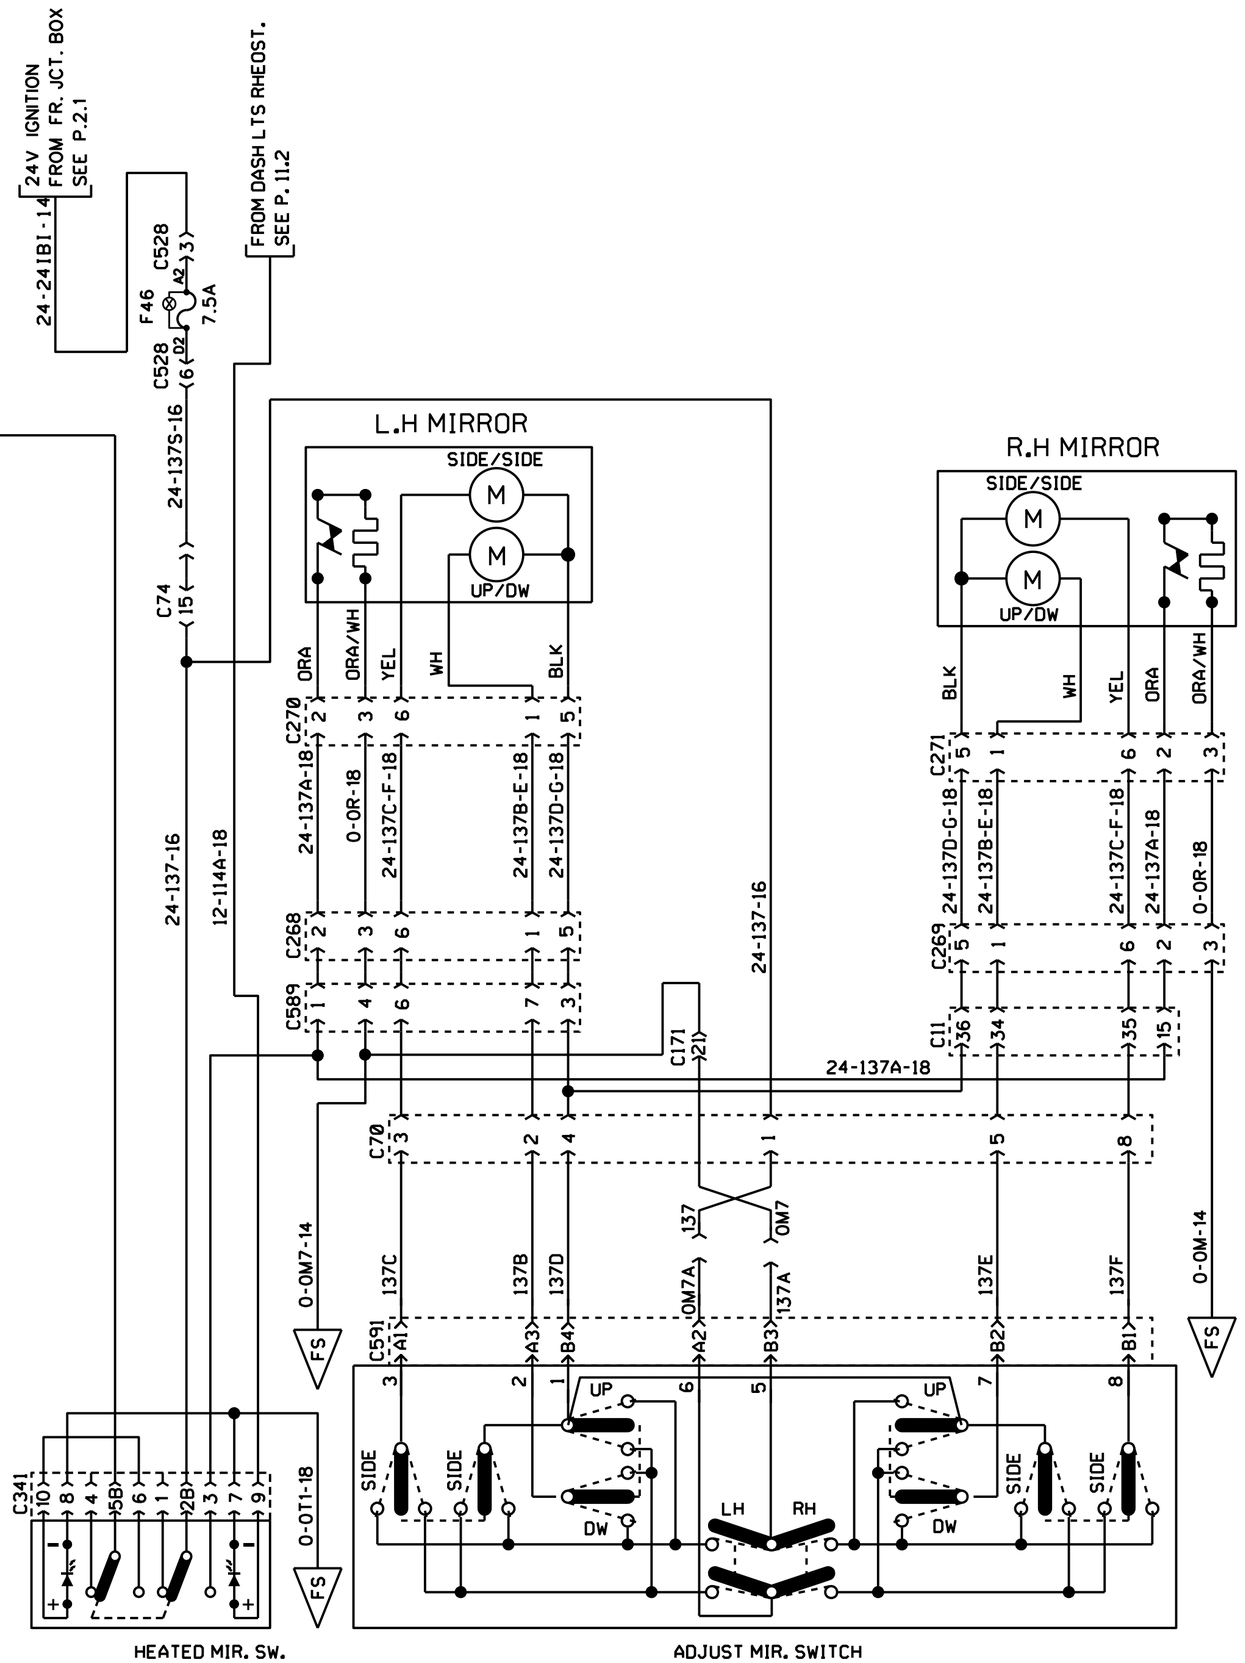


REAR VIEW MIRROR SPARTAN - 1 ADJUSTMENT SW. & 1 HEATED SW.

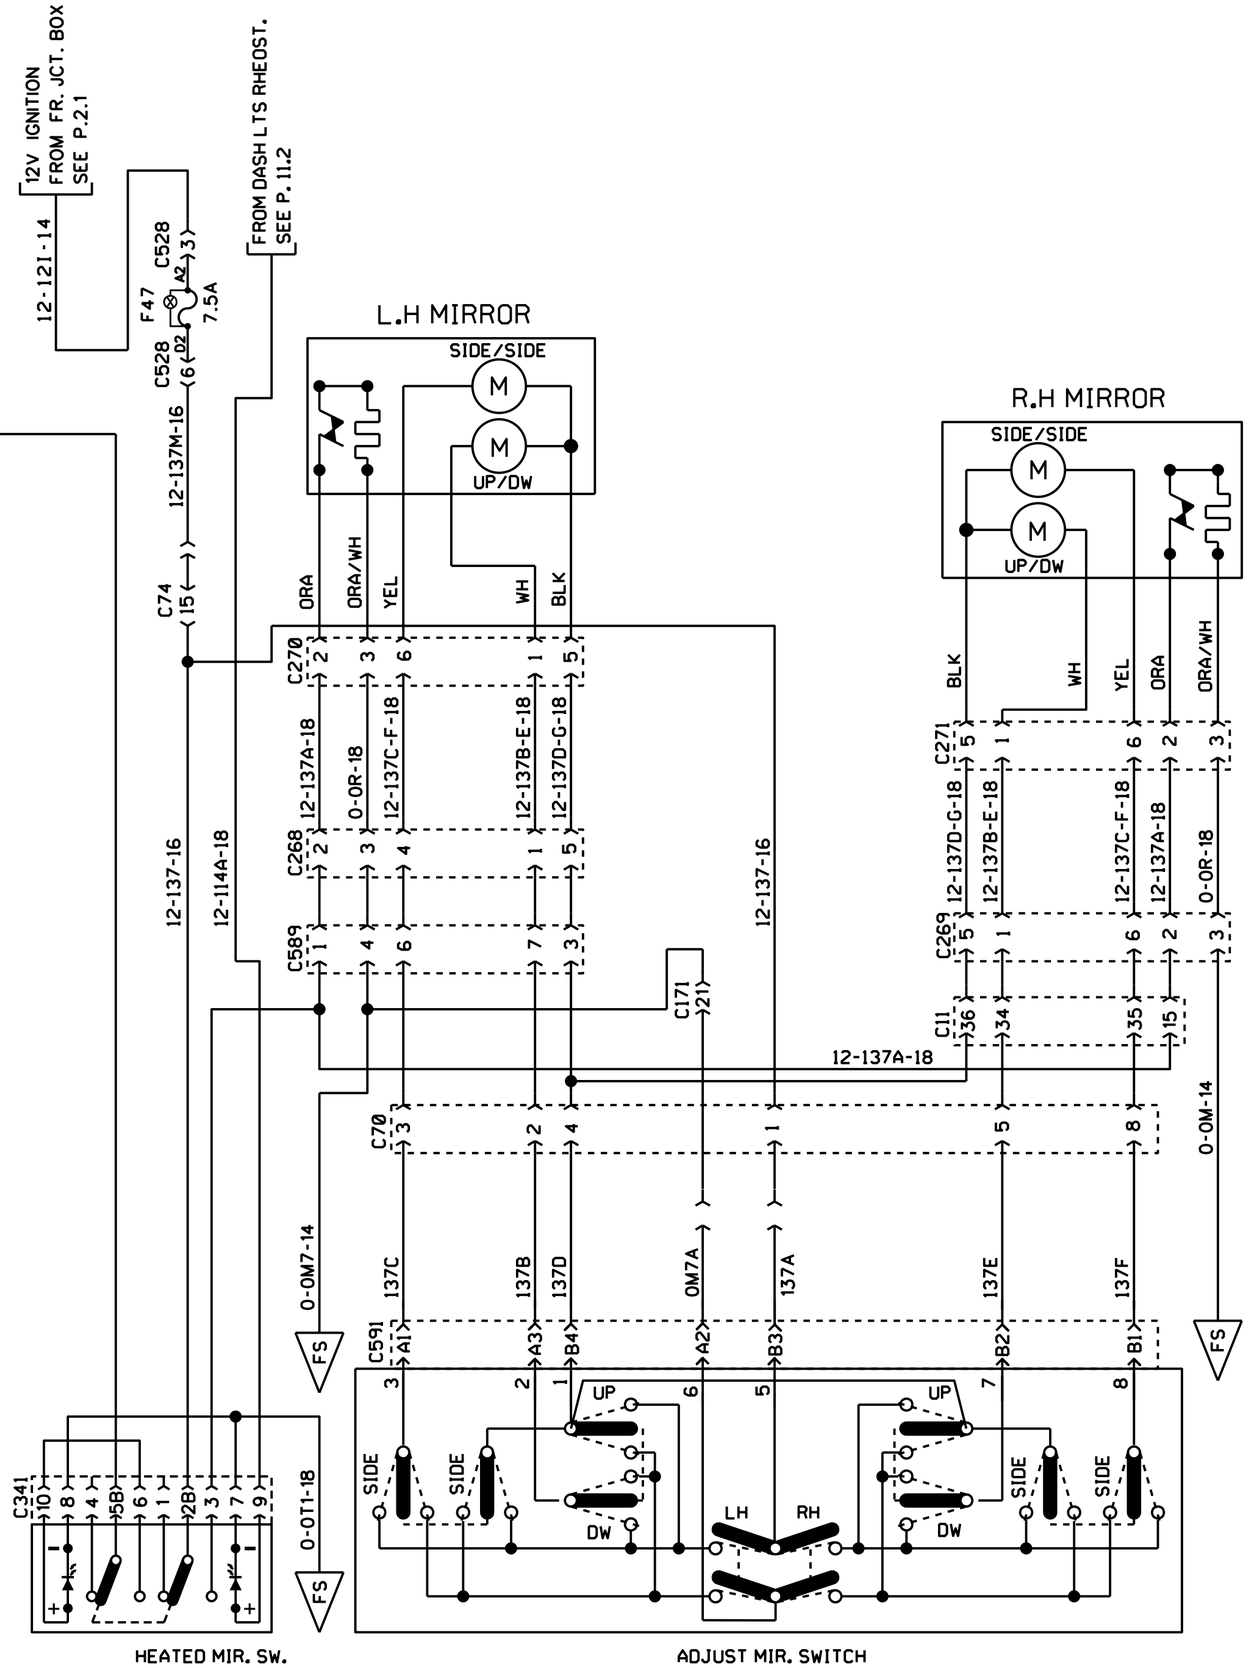

REAR VIEW MIRROR RAMCO FLAT - 1 ADJUSTMENT SW. & 1 HEATED SW.

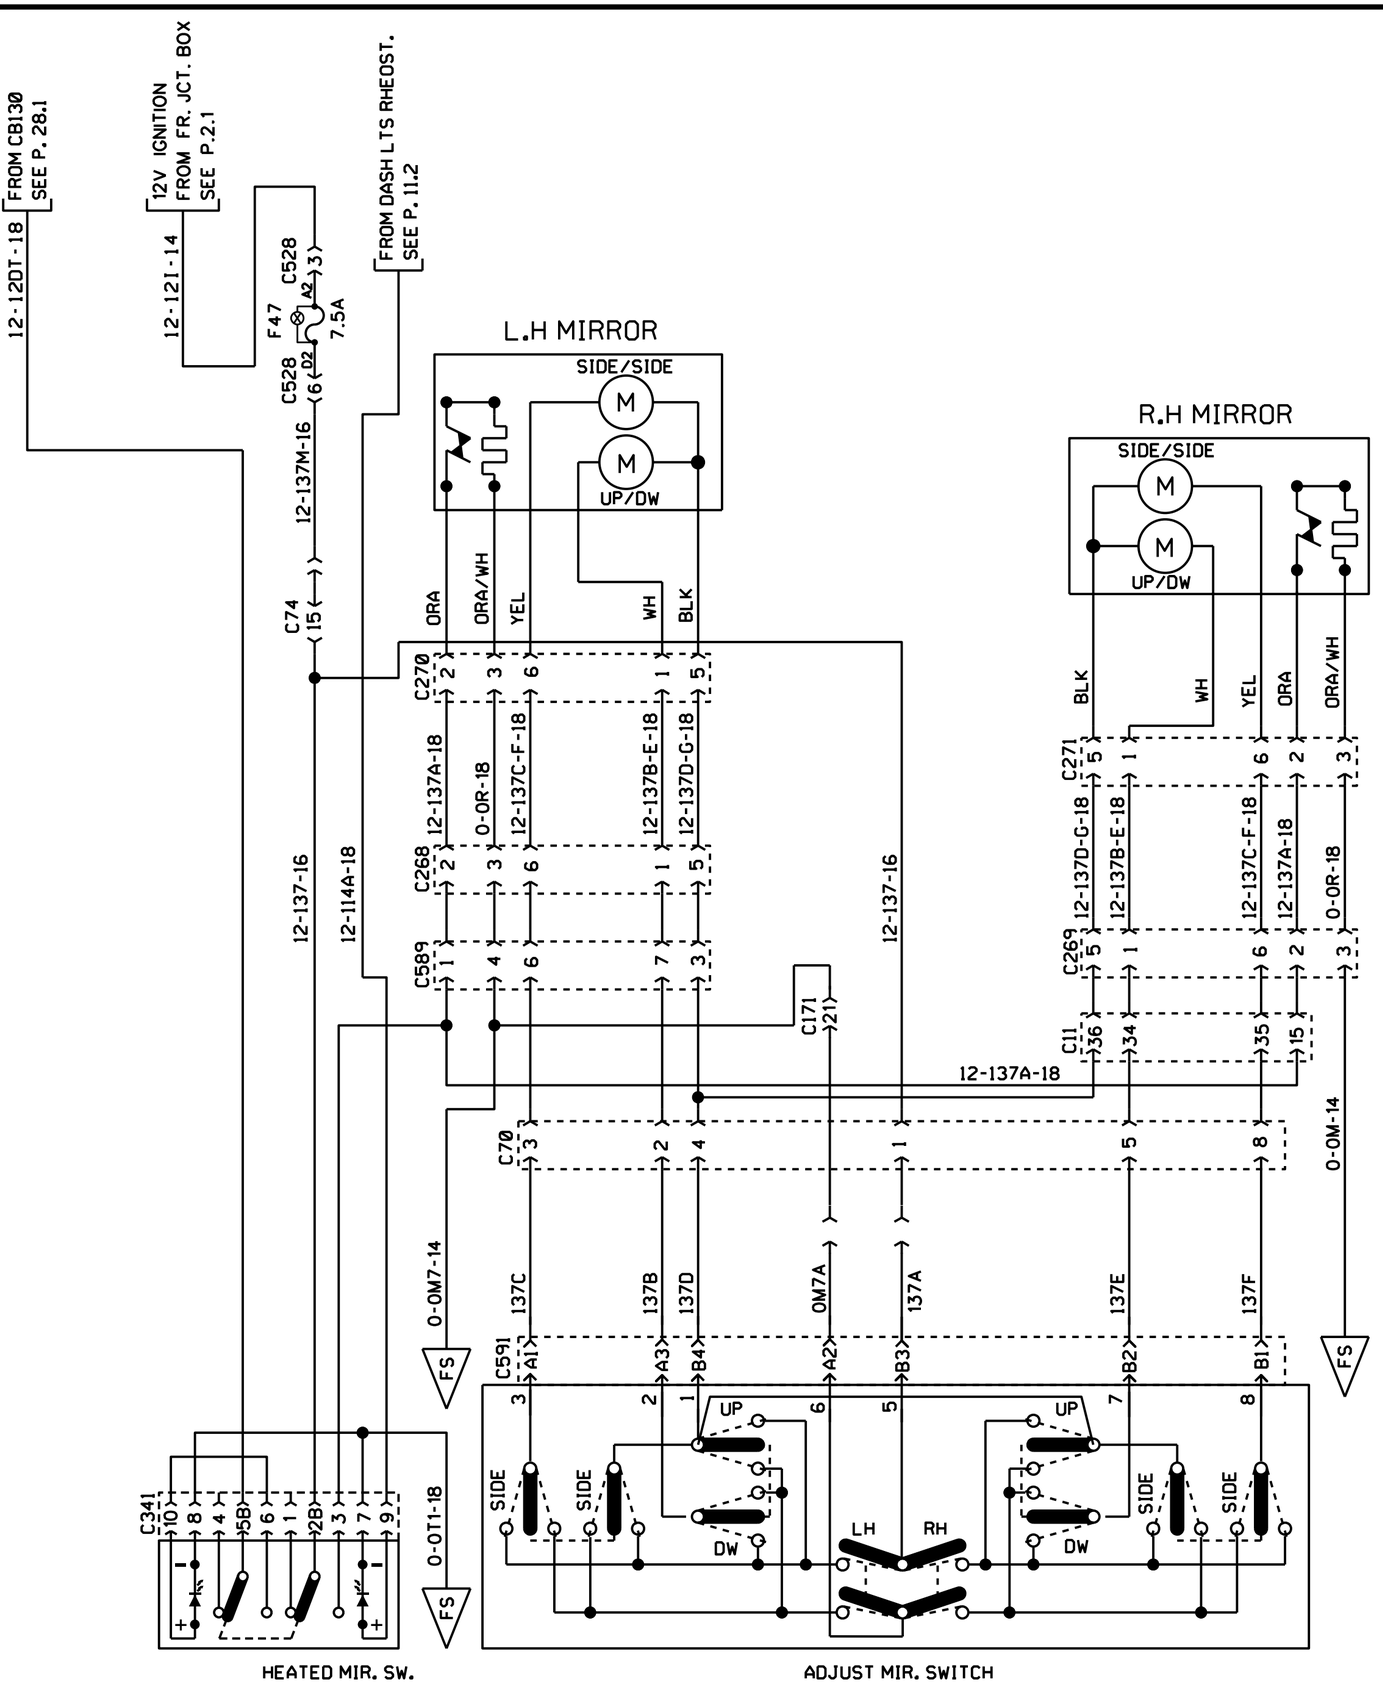

REAR VIEW MIRROR RAMCO FLAT - 1 ADJUSTMENT SW. & 1 HEATED SW.

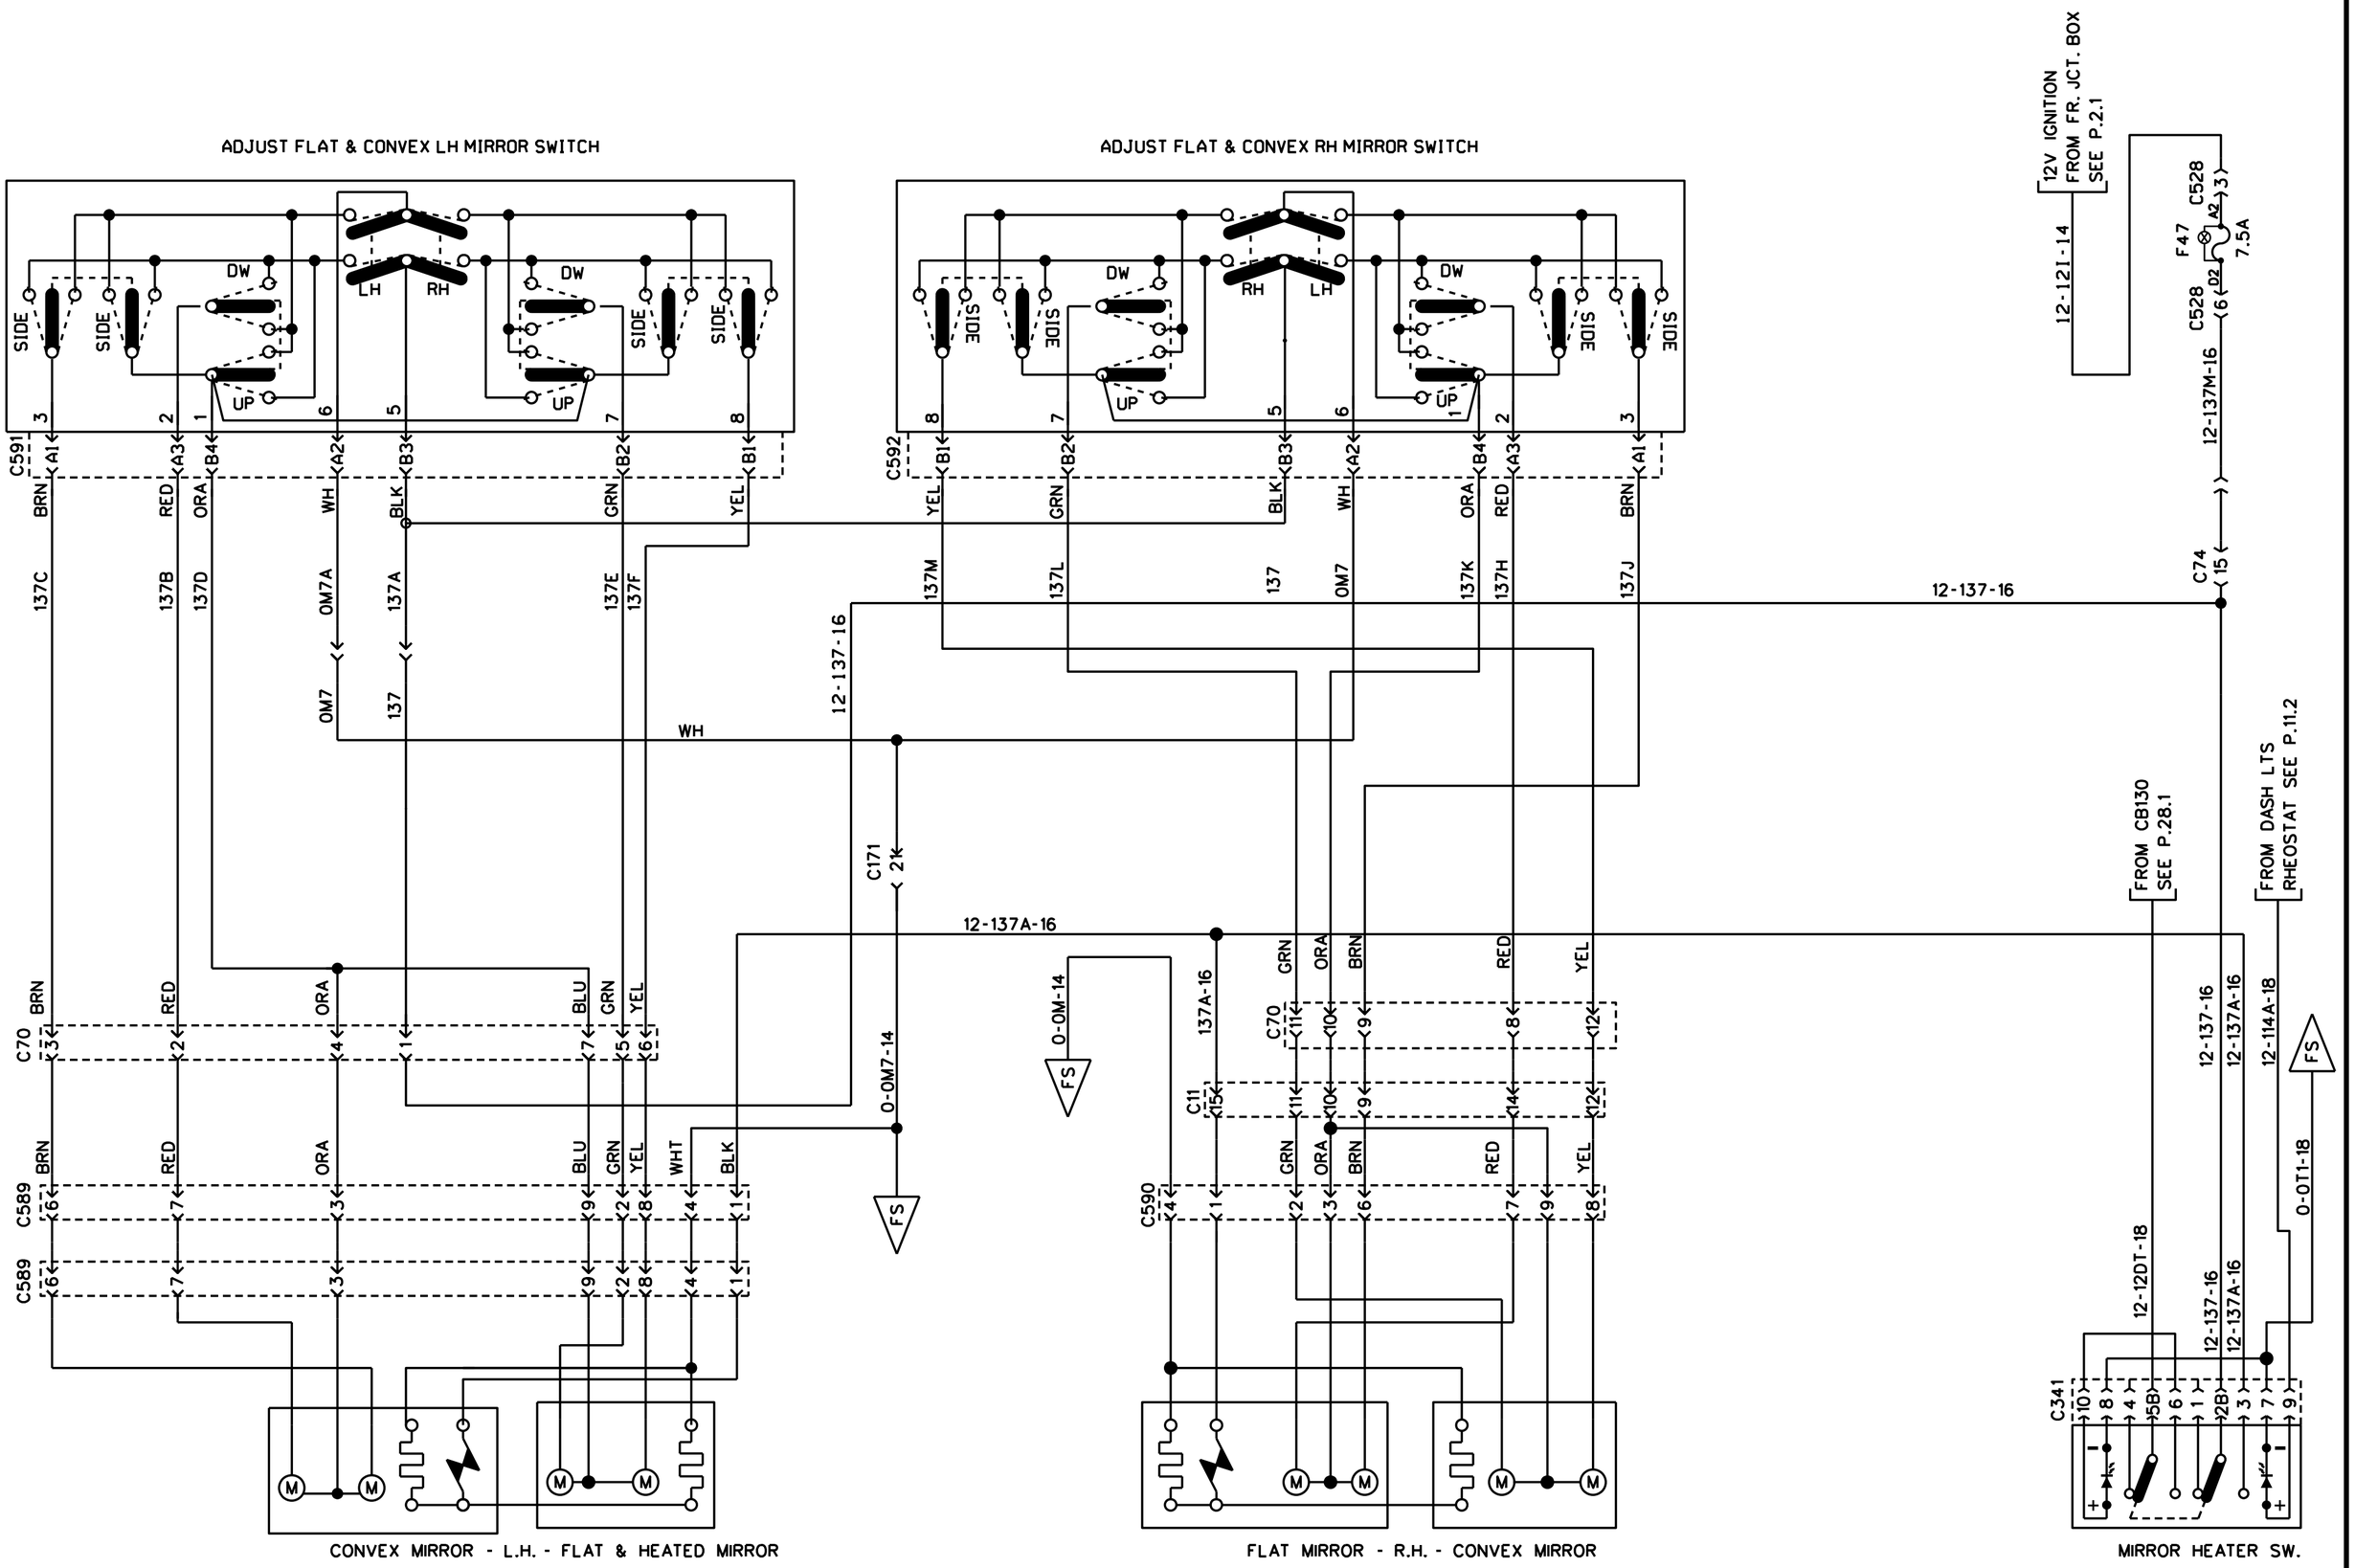

REAR VIEW MIRROR RAMCO FLAT & CONVEX - 2 ADJUSTMENT SW. & 1 HEATED SW.

PREVOST


W.C.L. SYSTEM STEWART & STEVENSON

WIRING DIAGRAM

NO: D060949

PAGE: 25.1

REVISION 00

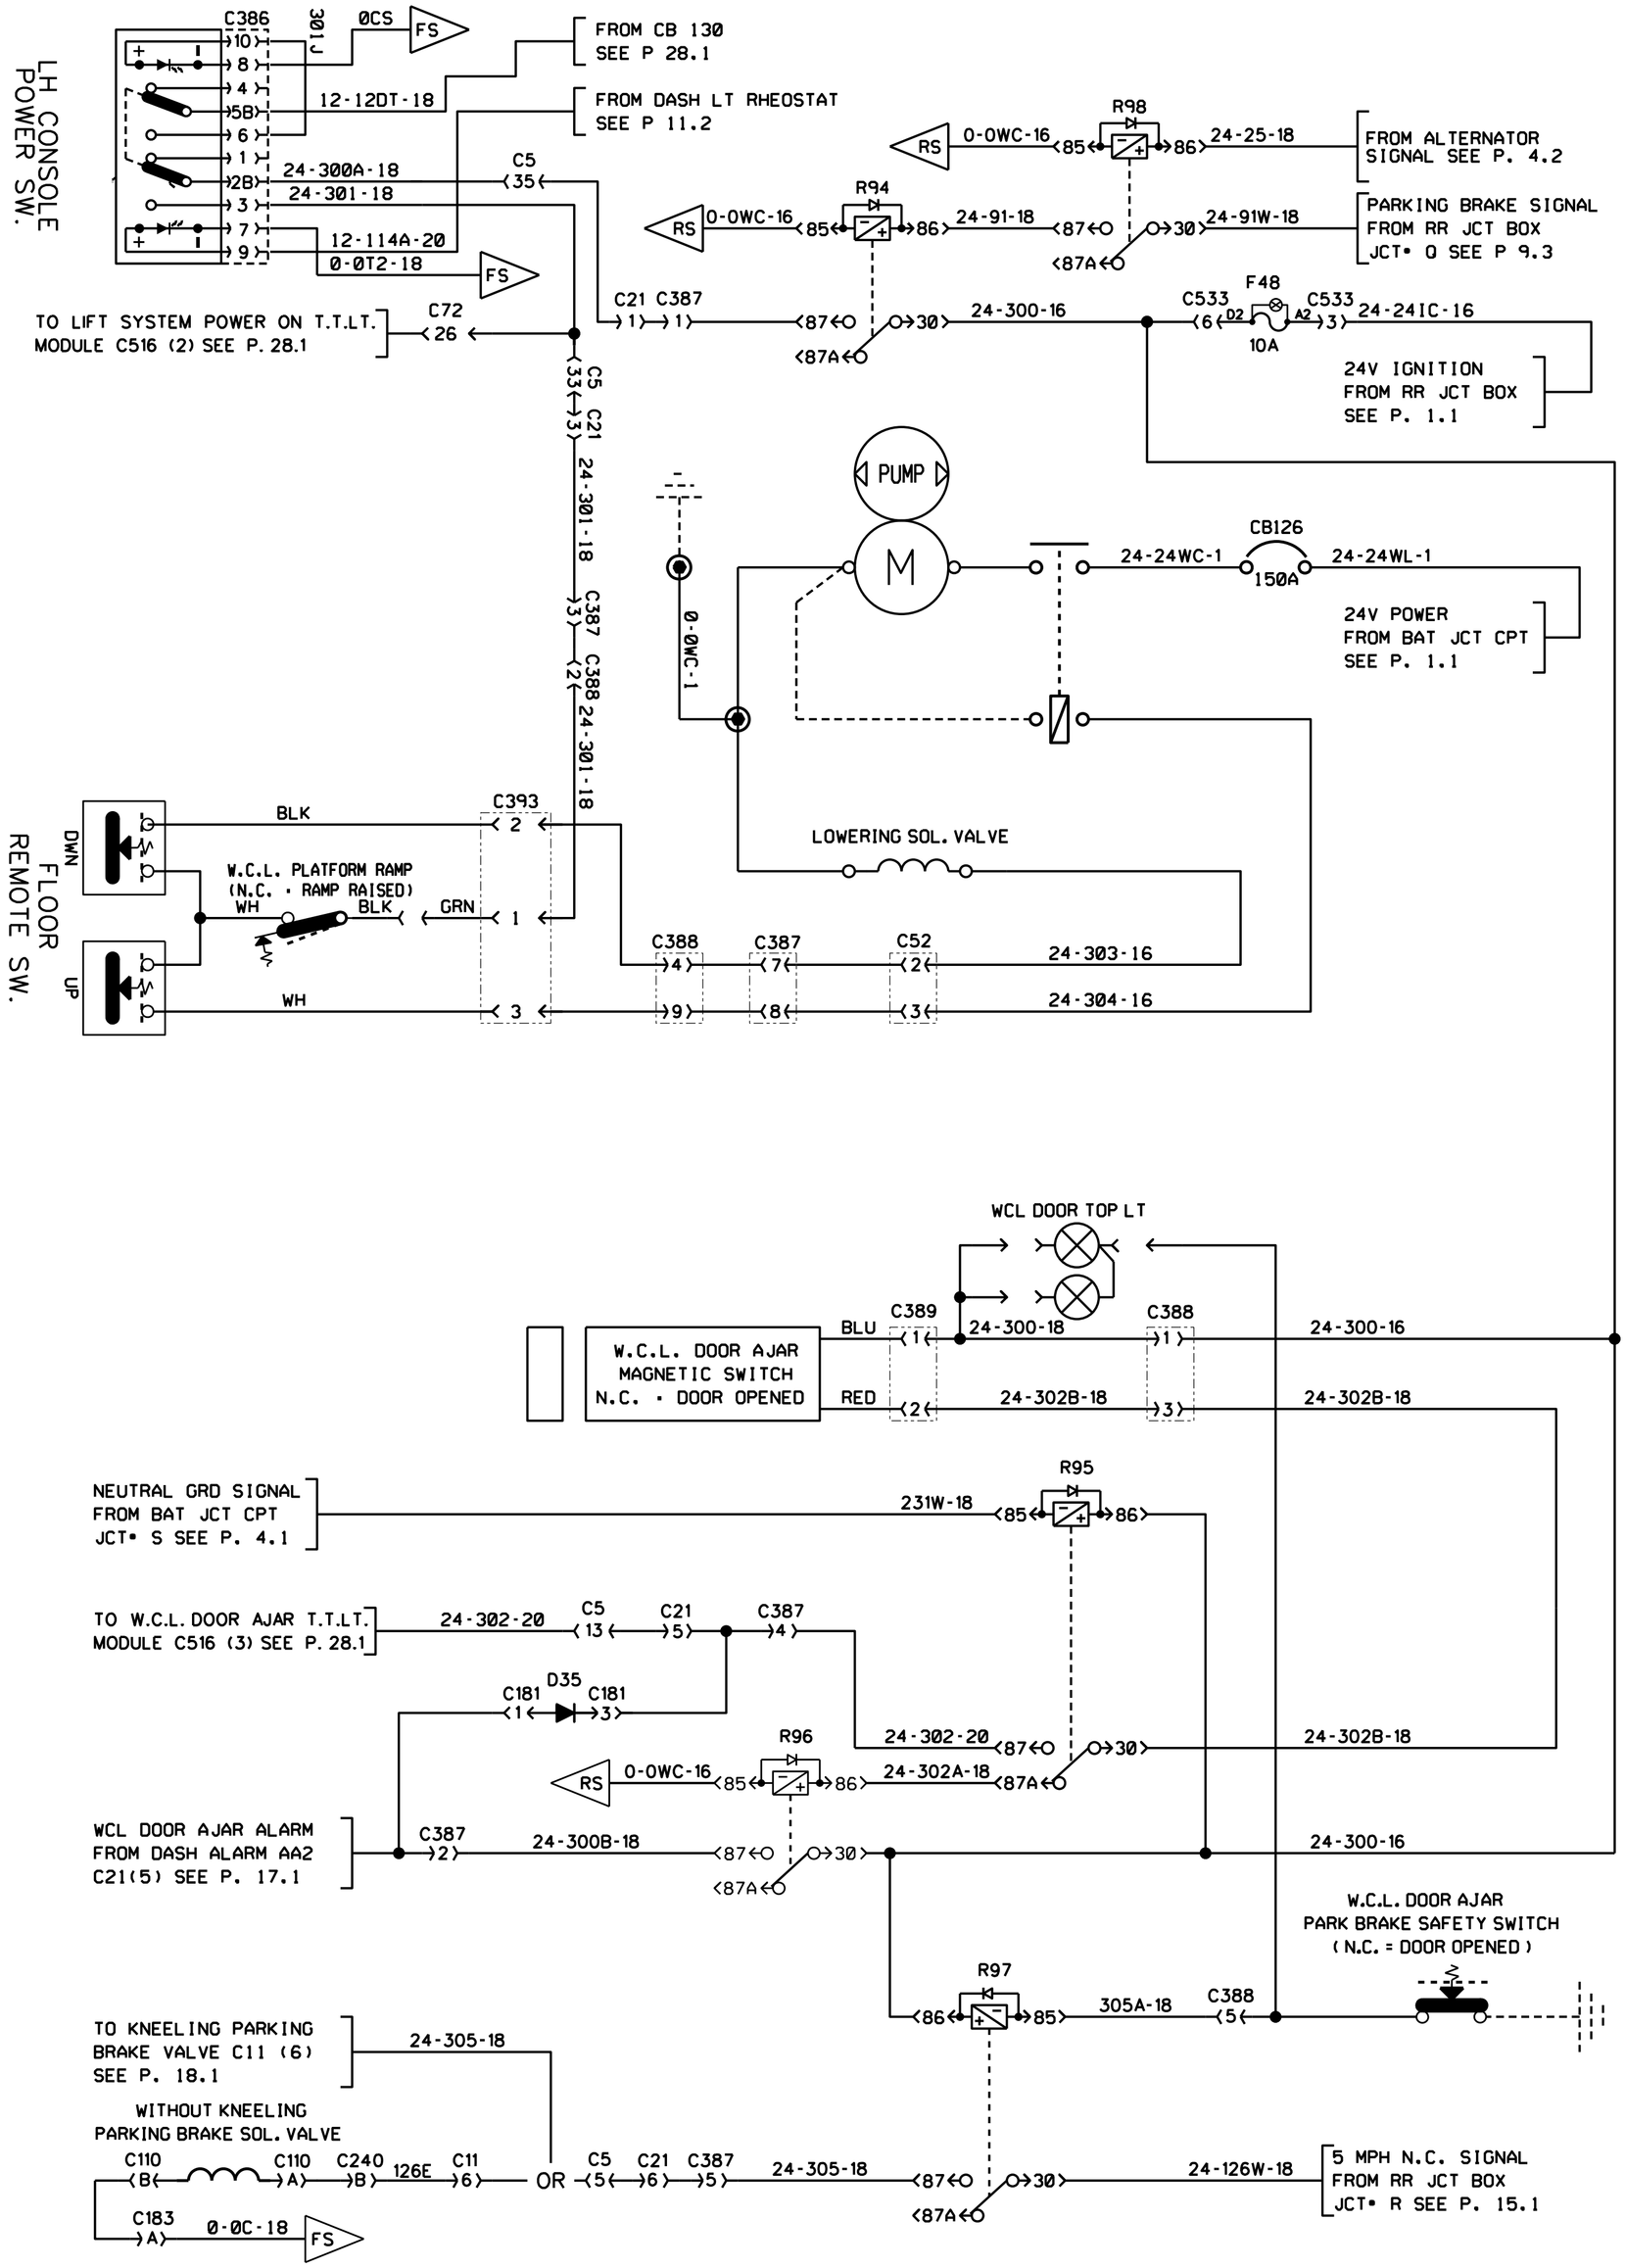

PREVOST


W.C.L. SYSTEM STEWART & STEVENSON

WIRING DIAGRAM


NO: D060949

PAGE: 25.1

REVISION 08

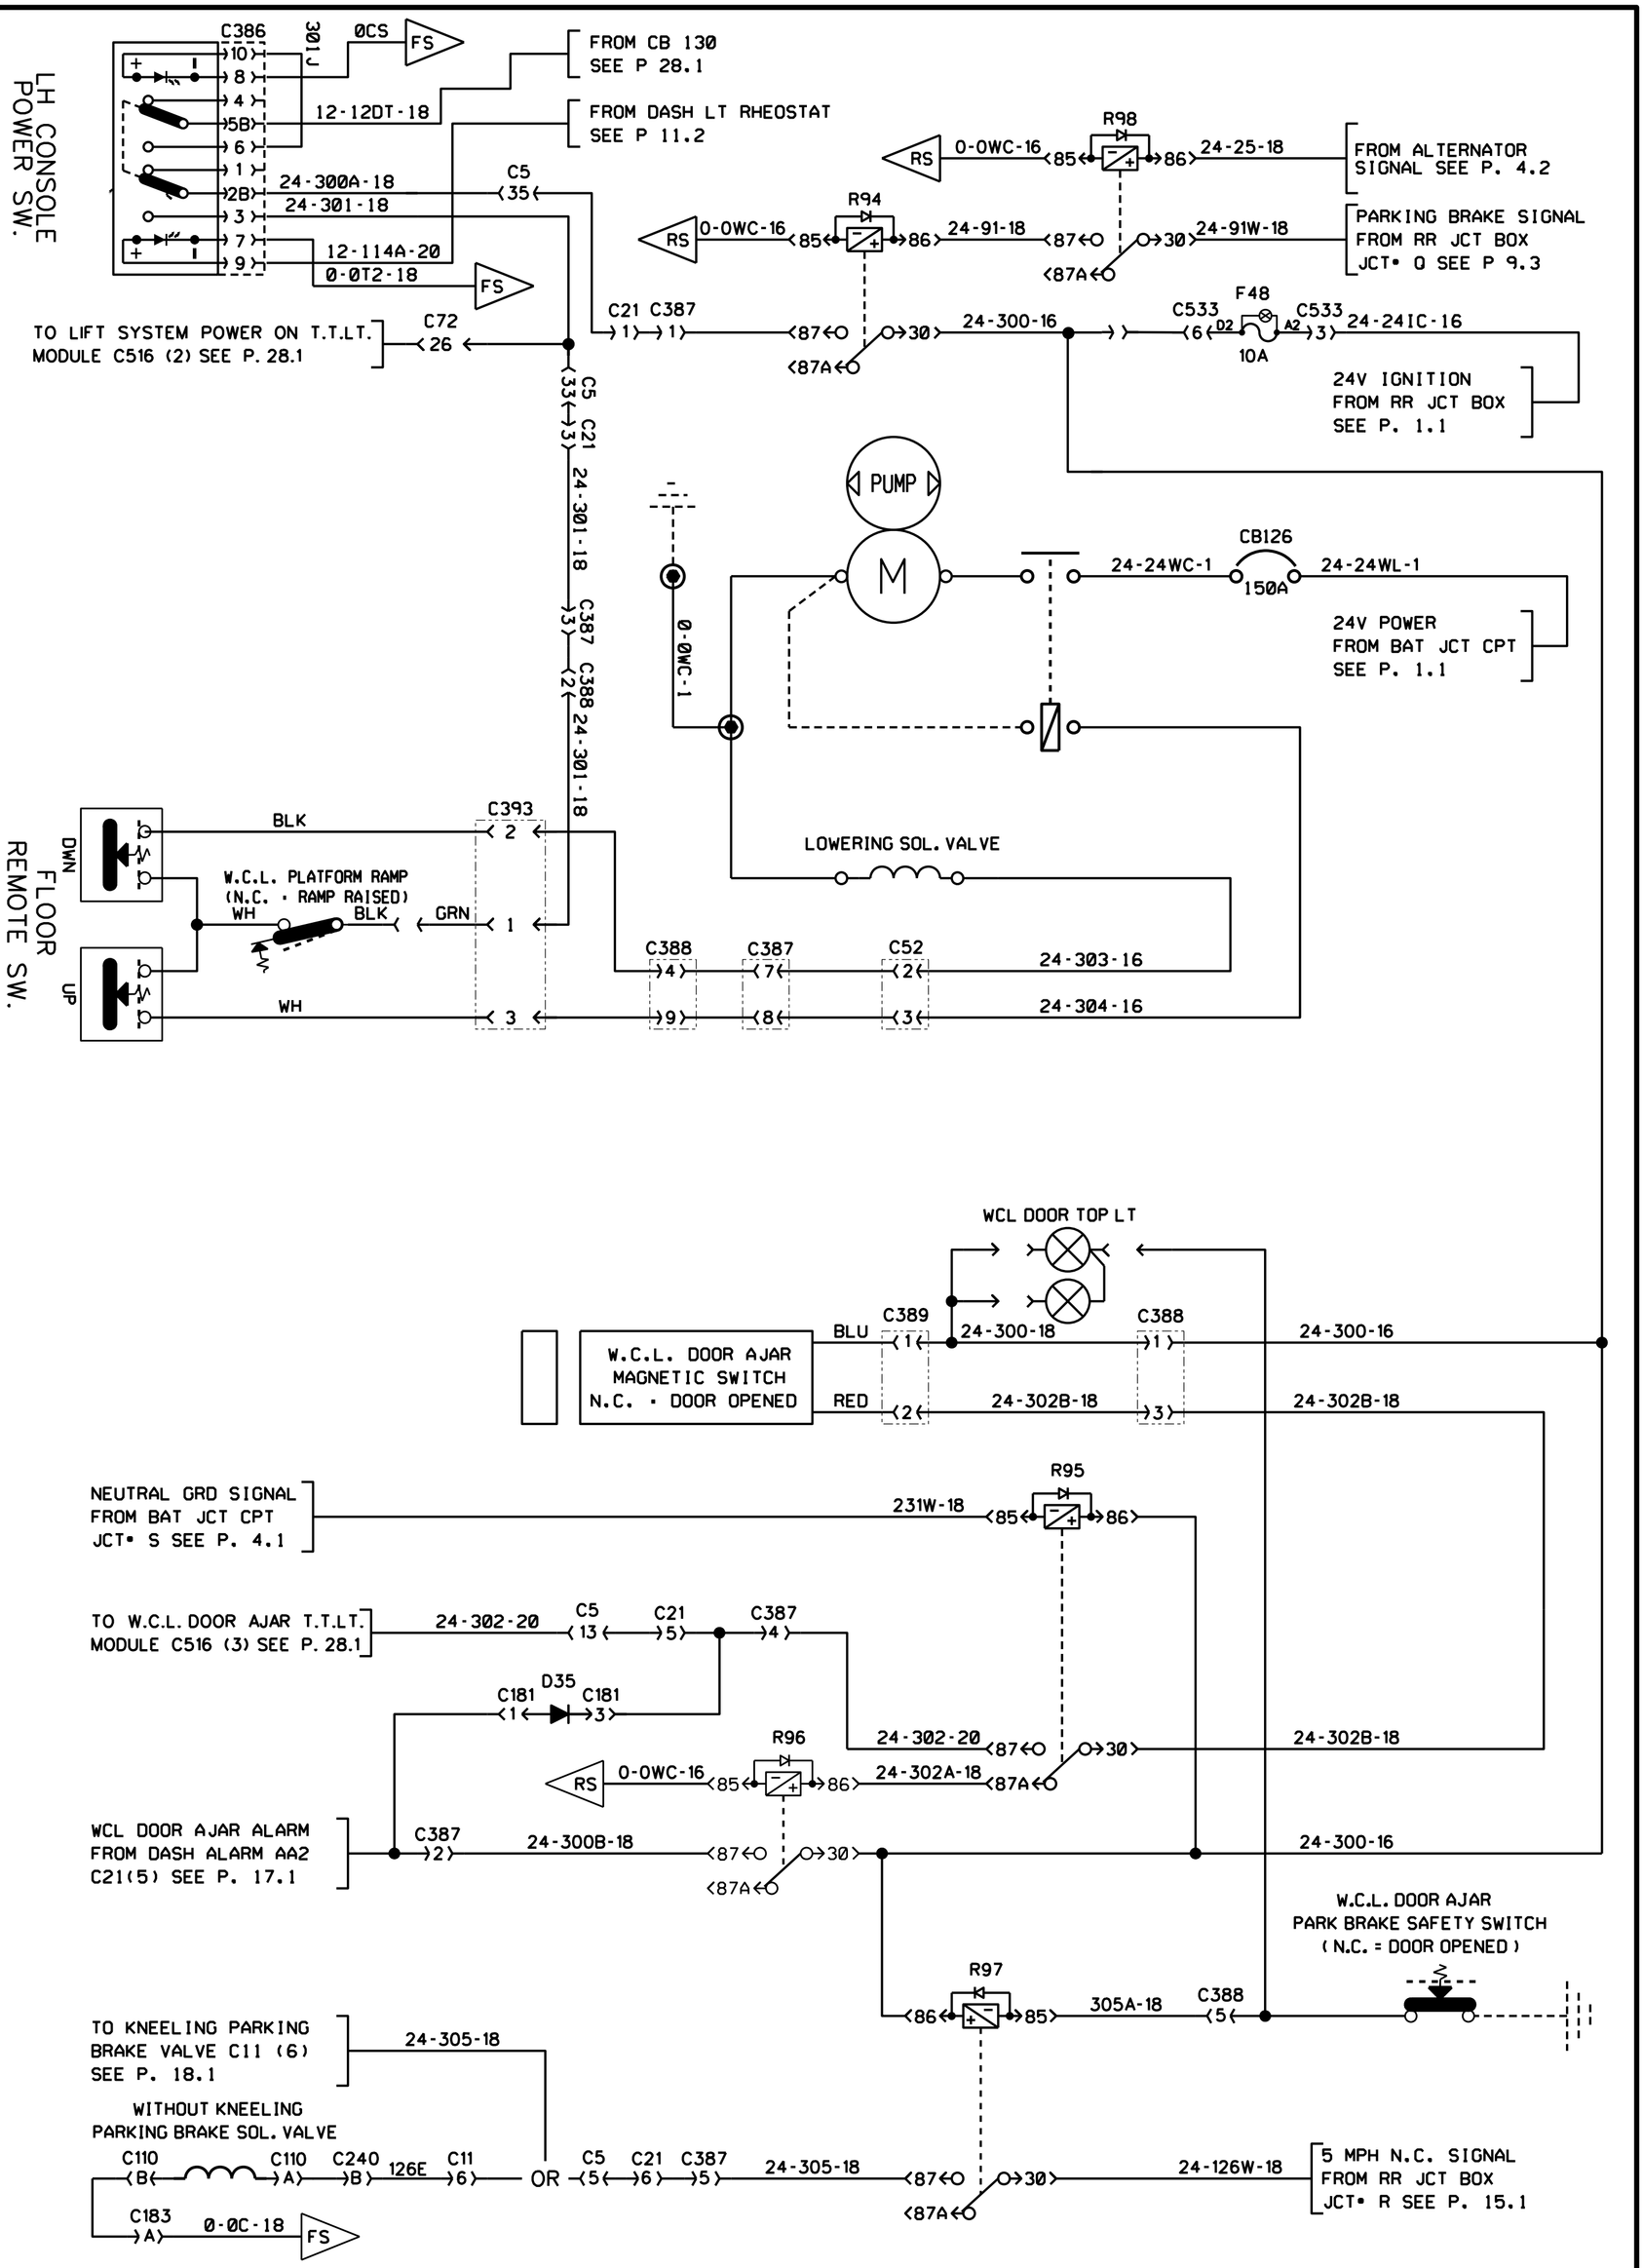

W.C.L. SYSTEM STEWART & STEVENSON

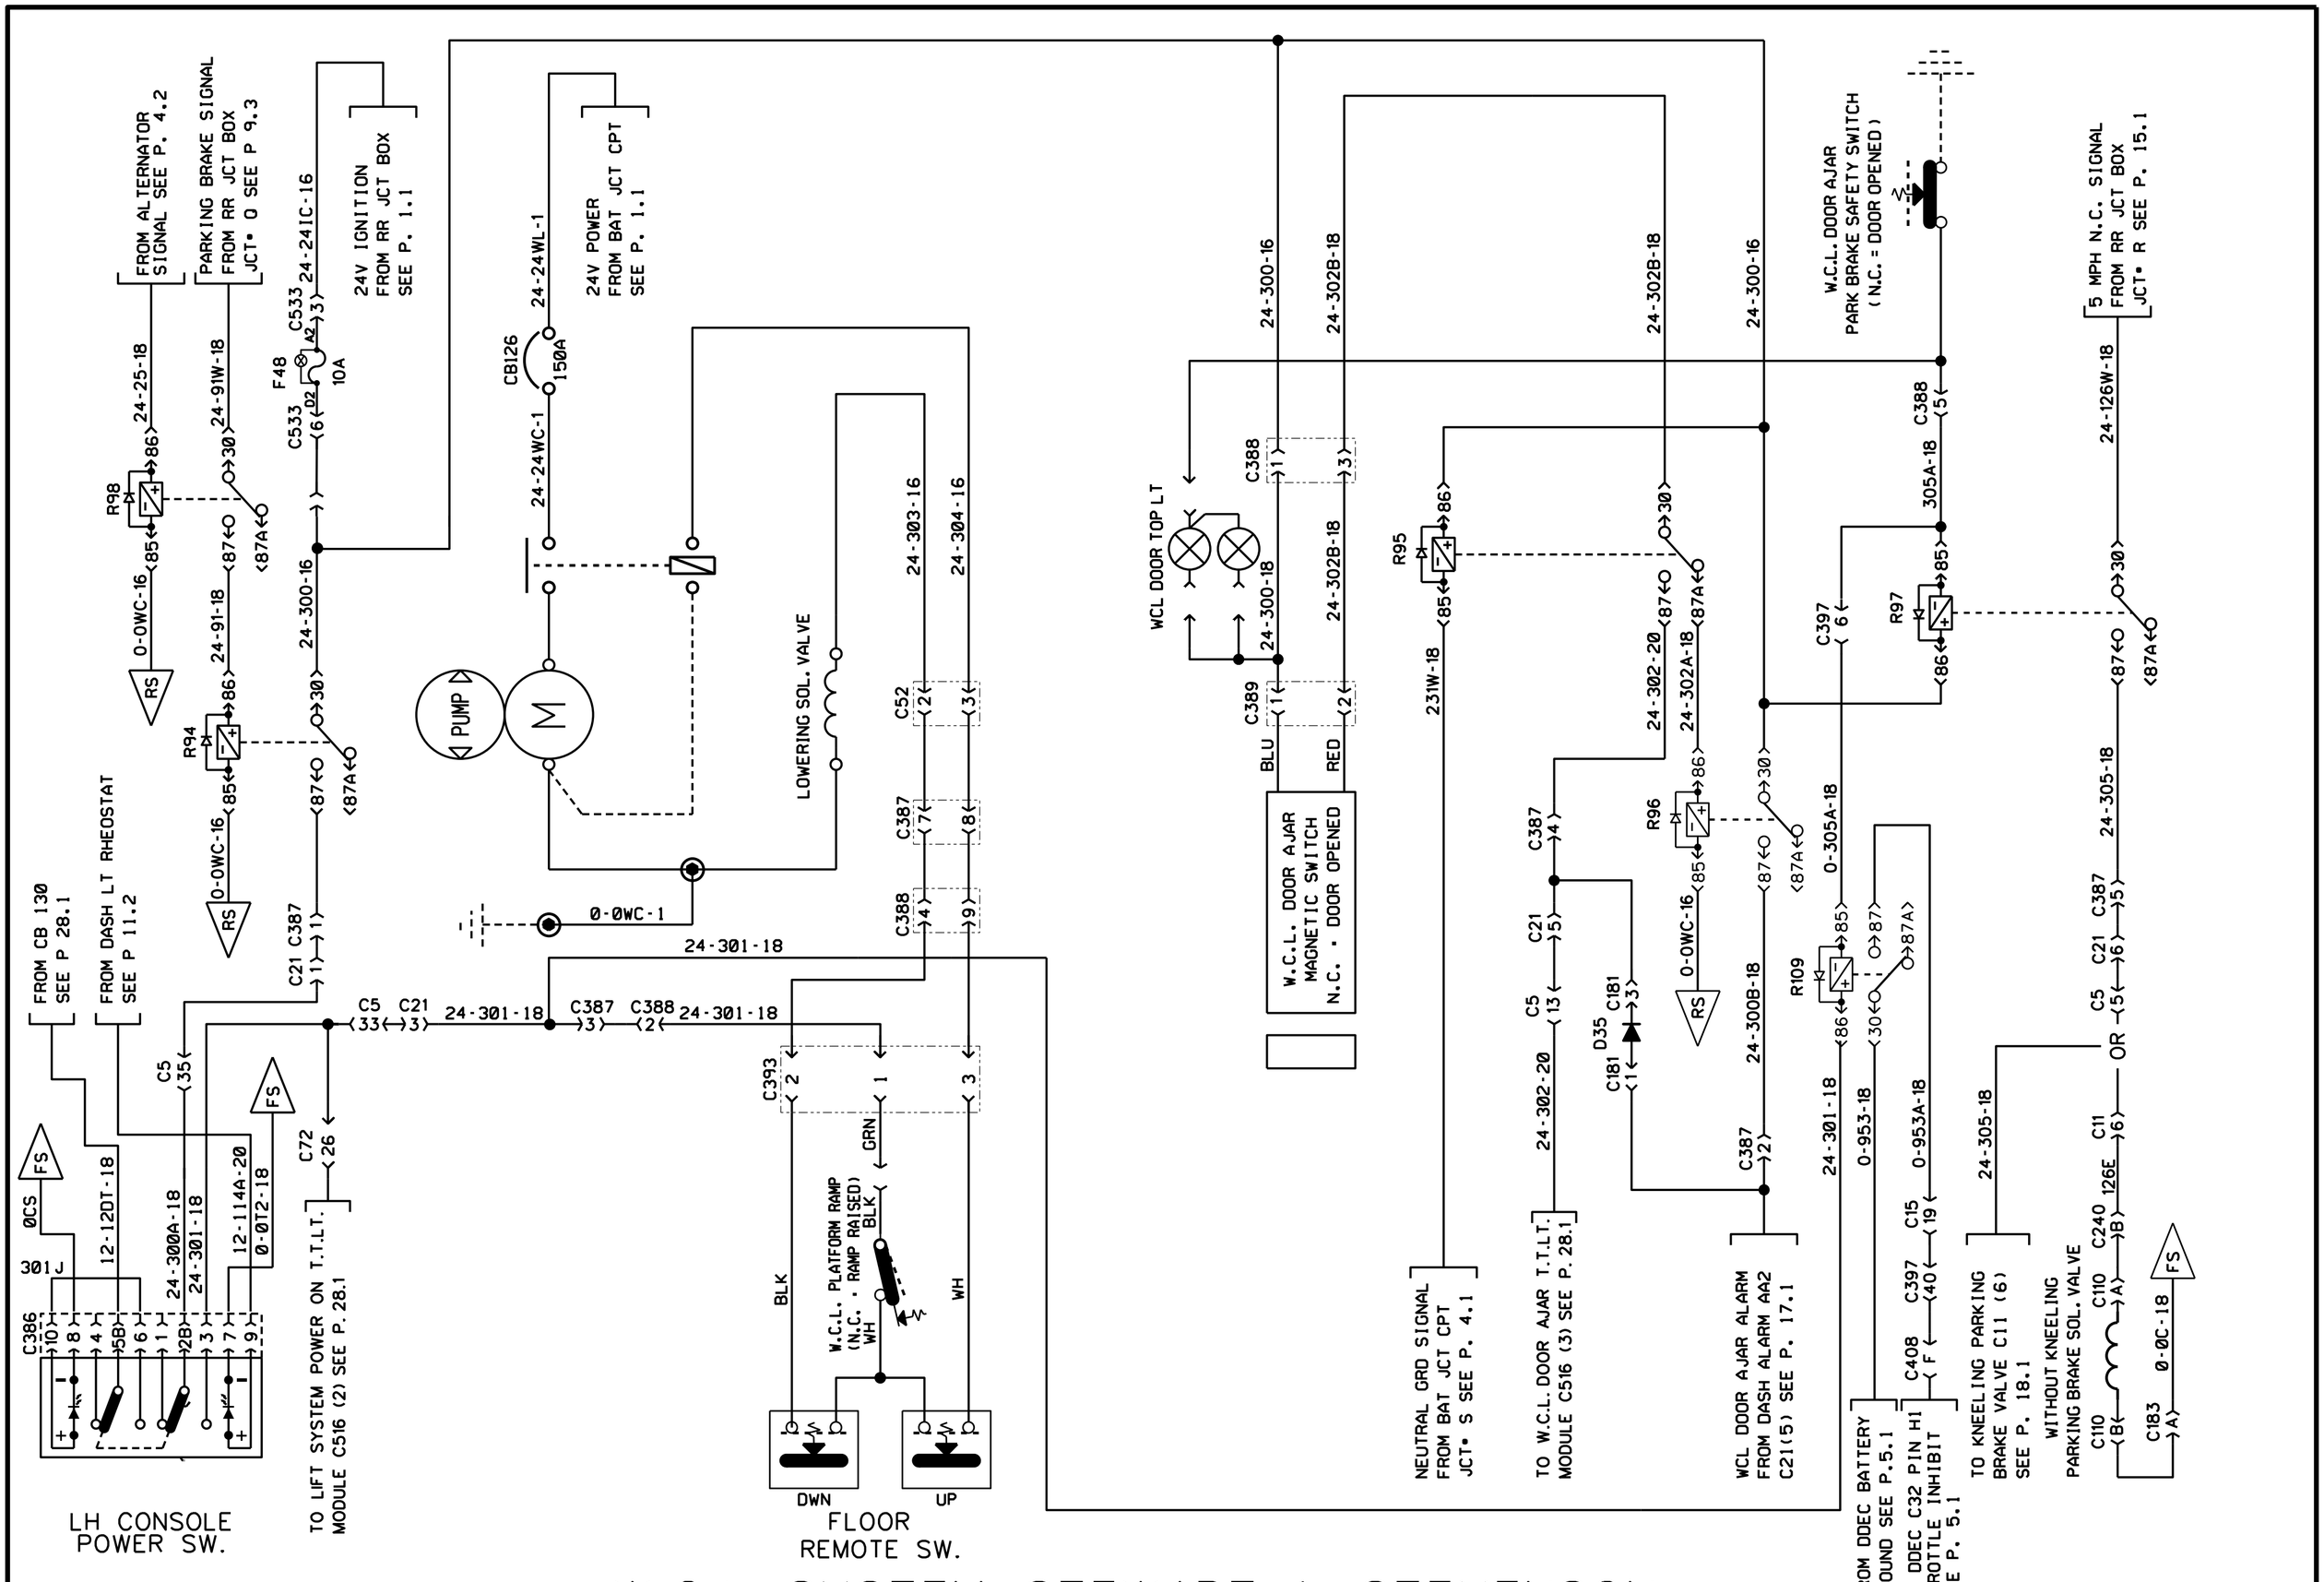


PREVOST

W.C.L. SYSTEM STEWART & STEVENSON WIRING DIAGRAM

NO: D060949

PAGE: 25.1

REVISION 21

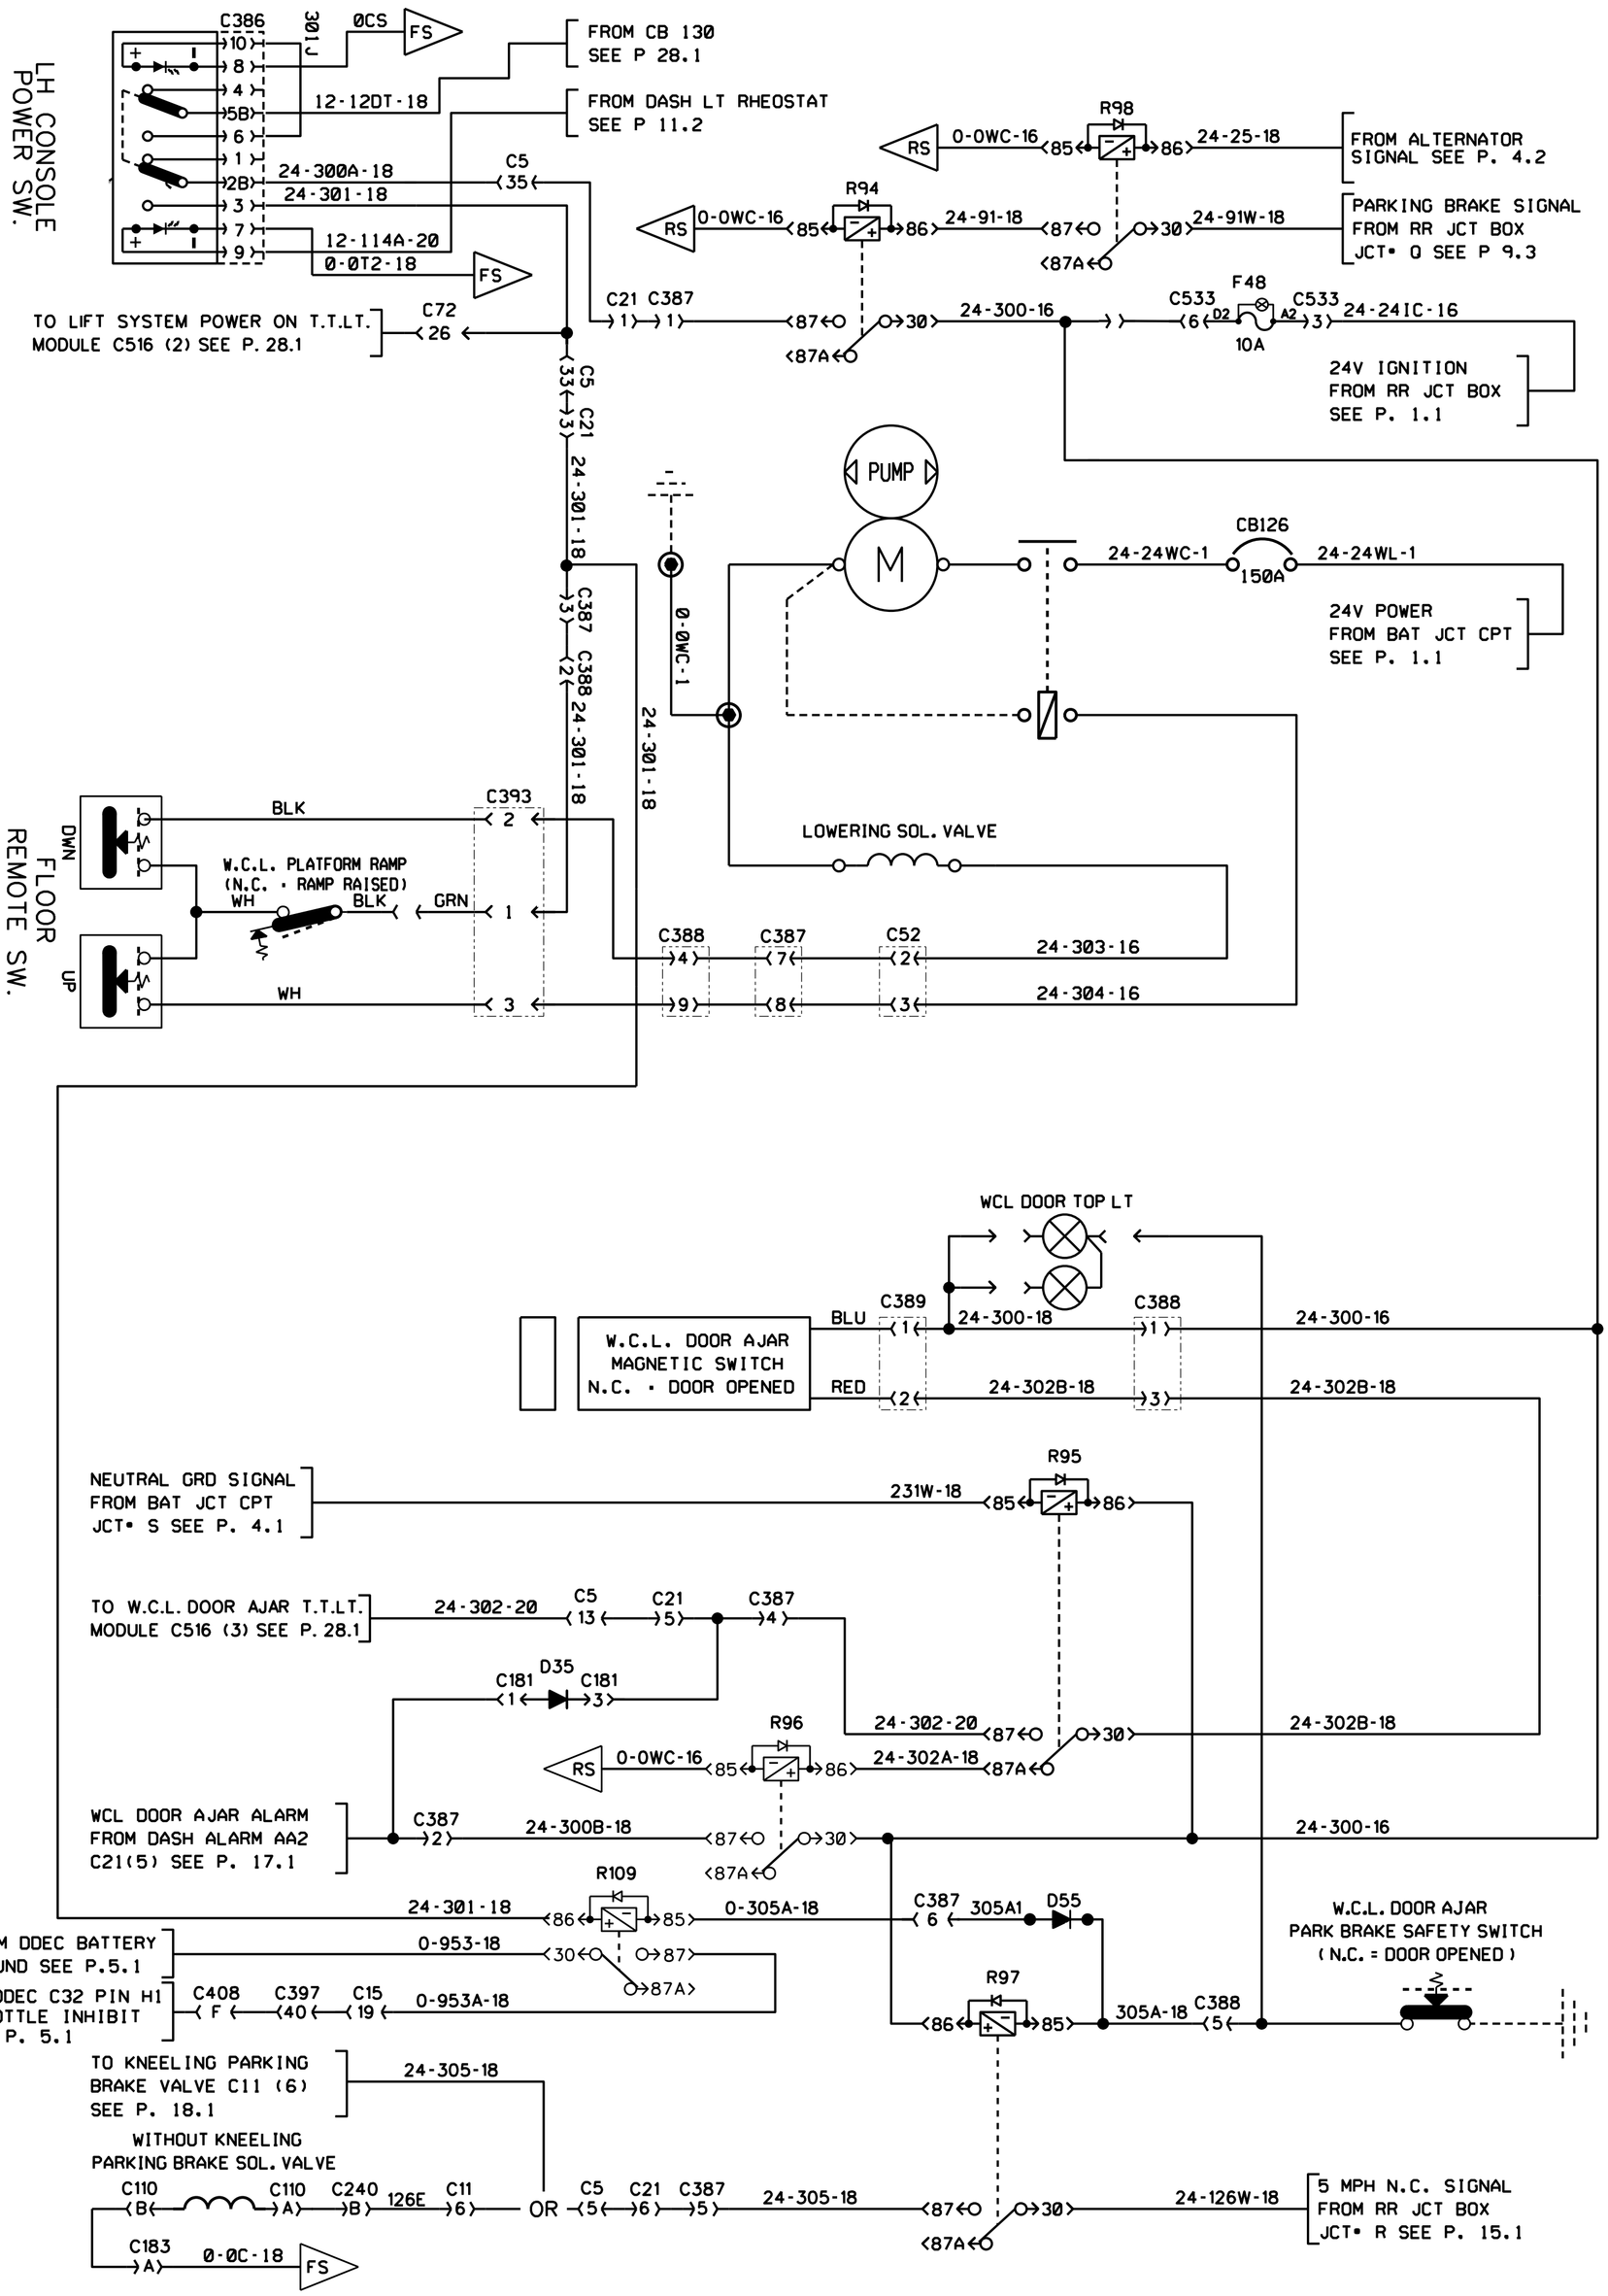

PREVOST


W.C.L. SYSTEM STEWART & STEVENSON WIRING DIAGRAM


NO: D060949


PAGE: 25.1sp1

REVISION 00


ORLEANS

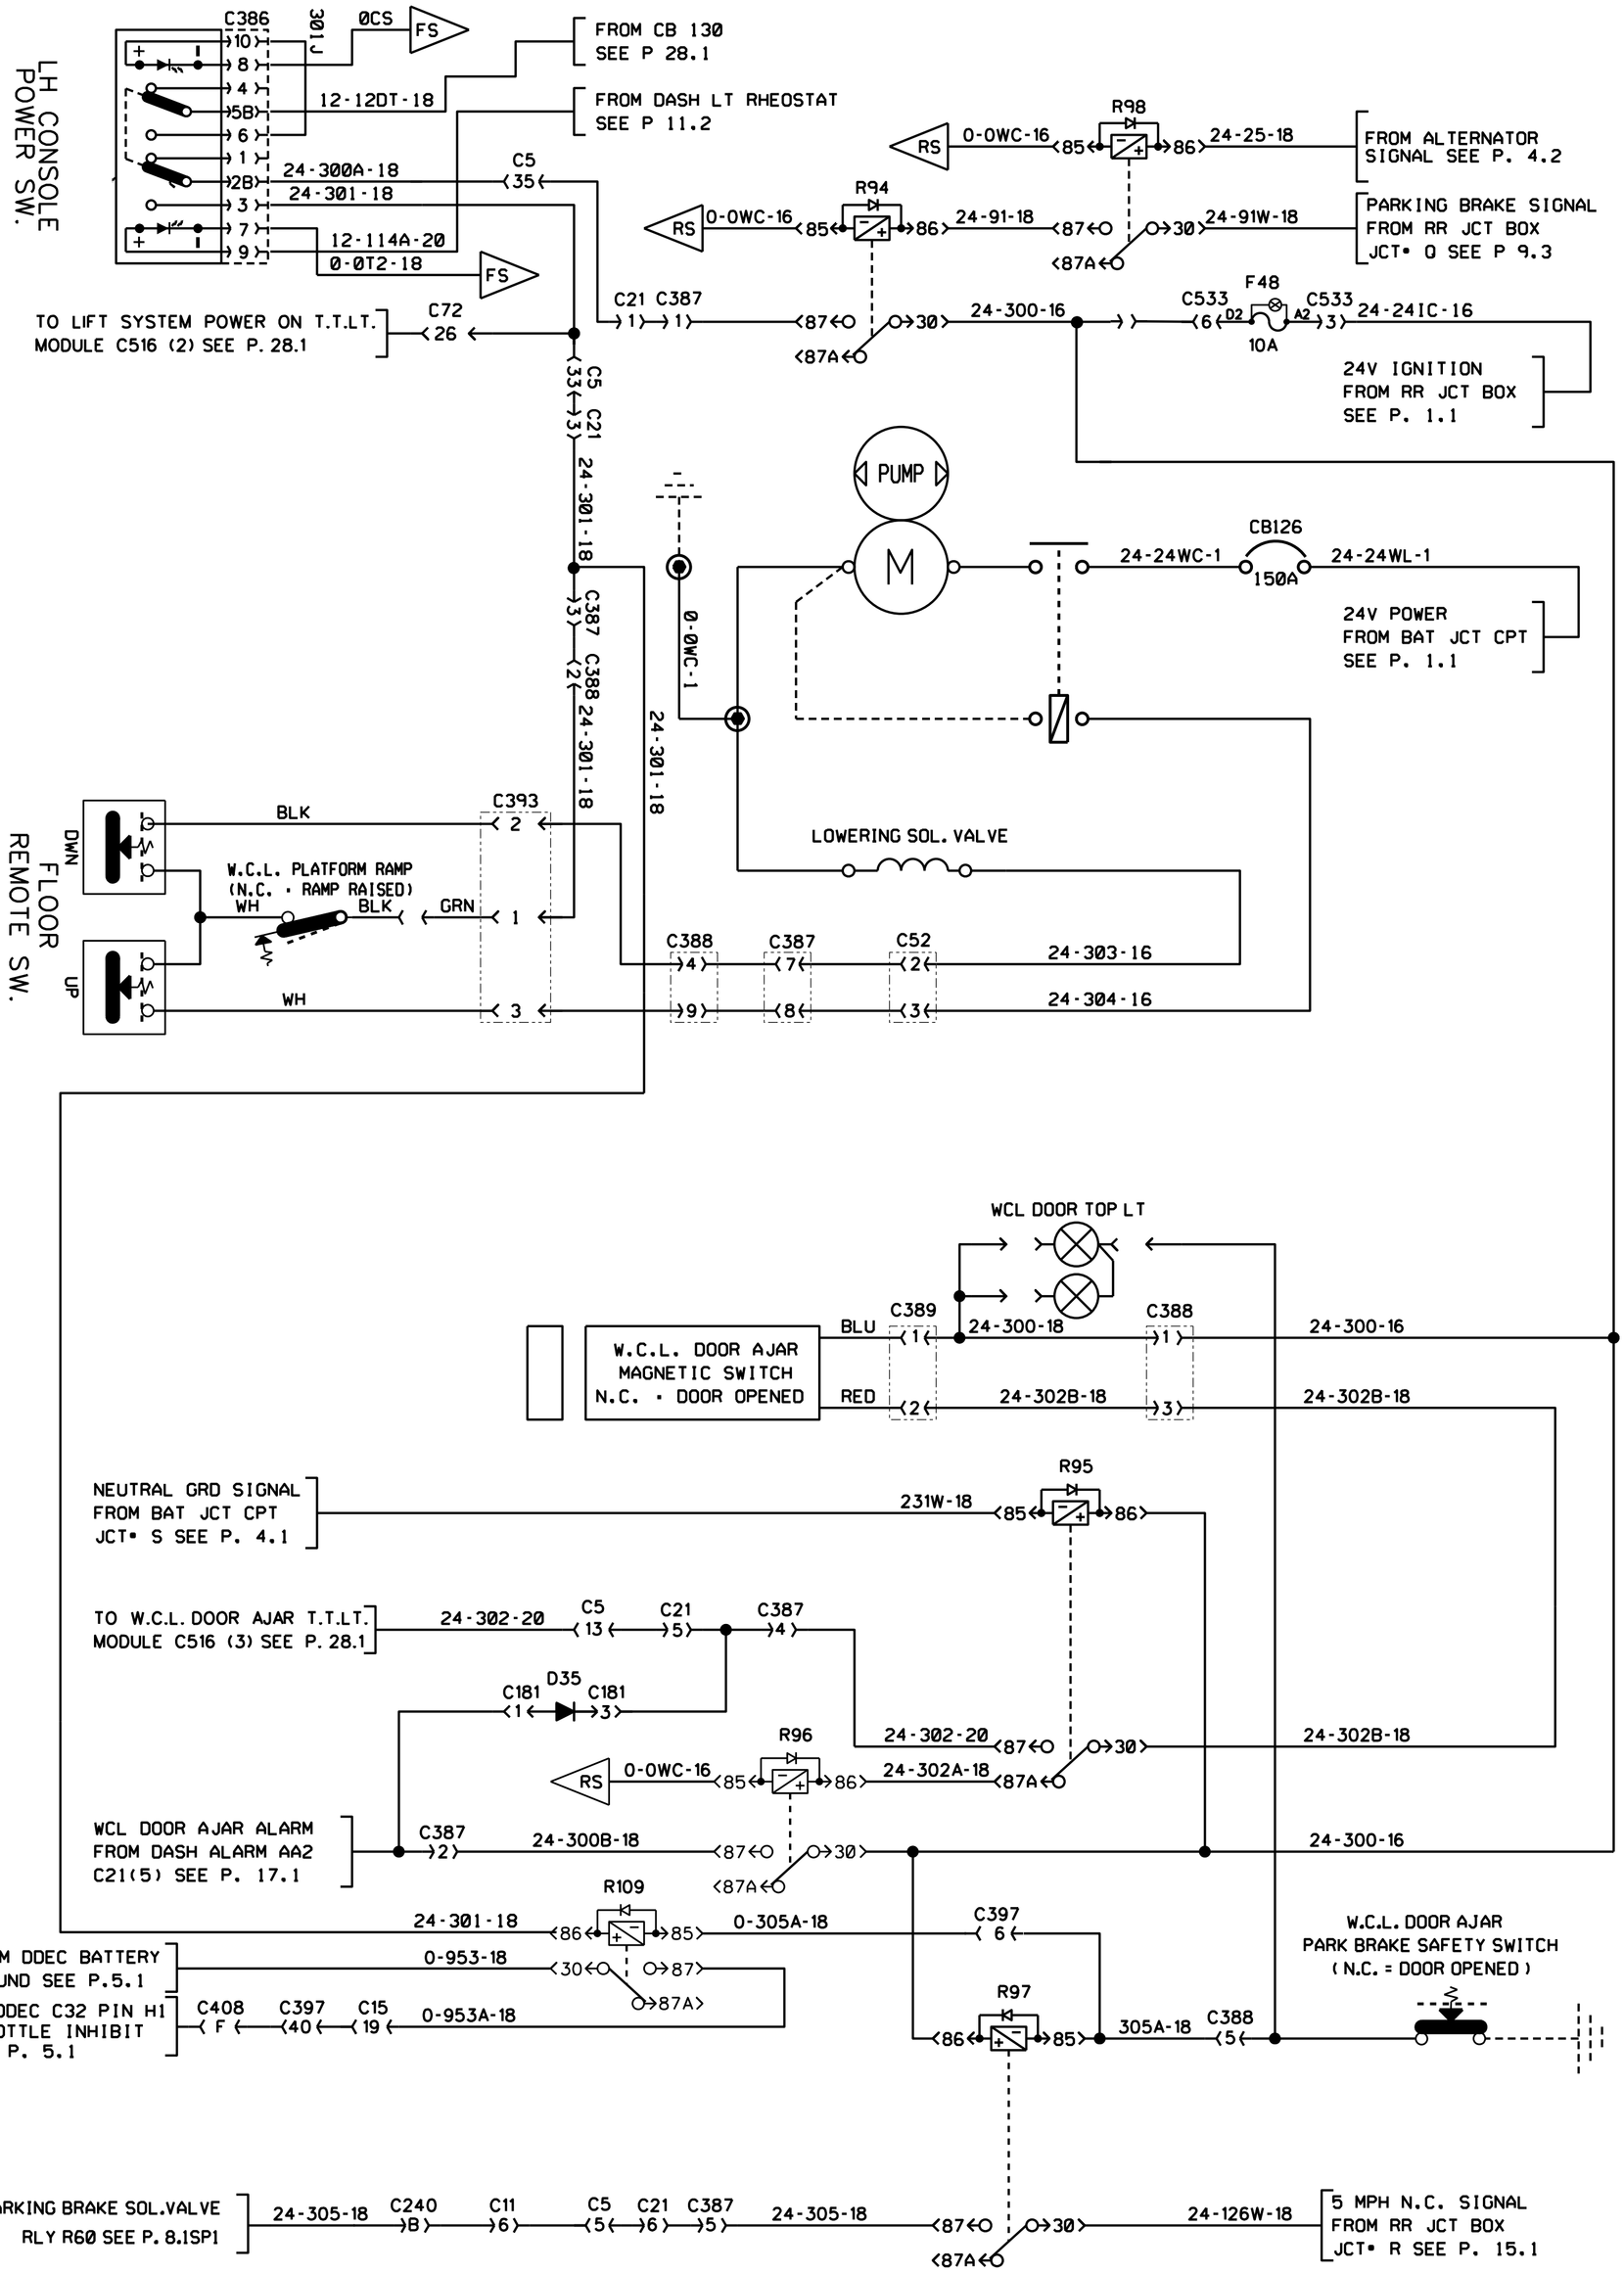


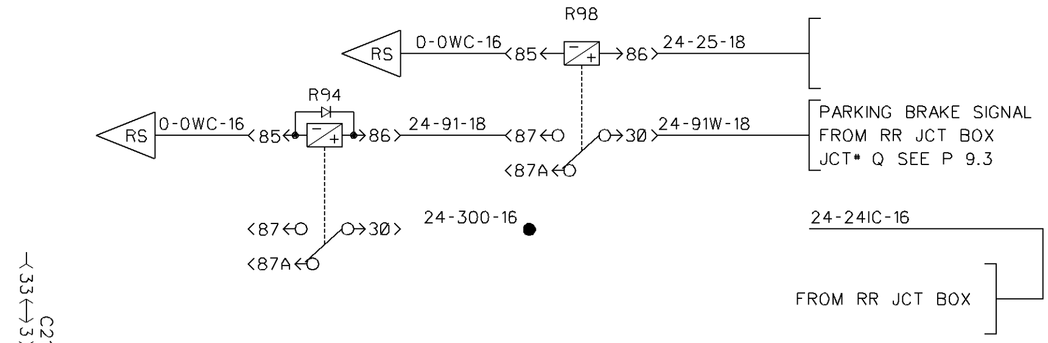
R98
RS
0-0WC-16
85
86
24-25-18
R94
RS
0-0WC-16
85
86
24-91-18
87
30
24-91W-18
87A
PARKING BRAKE SIGNAL
FROM RR JCT BOX
JCT* Q SEE P 9.3
87
30
87A
24-300-16
24-24IC-16
FROM RR JCT BOX



33
C21
3
24-301-18
C387
3

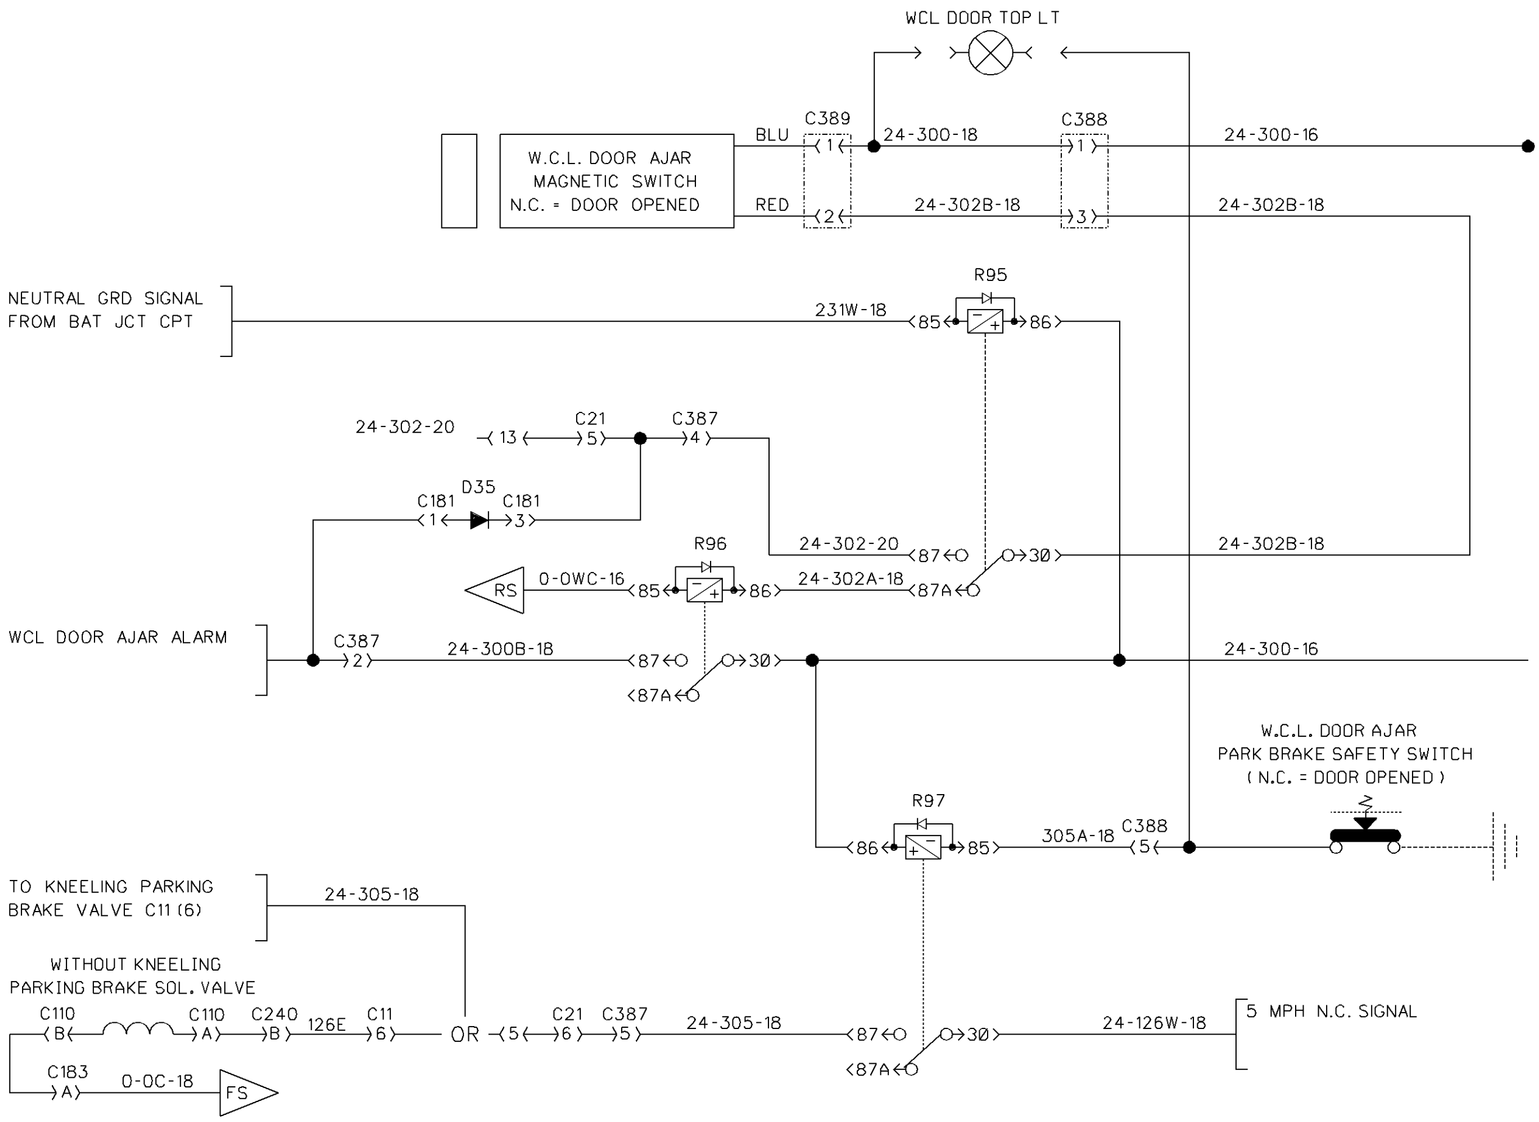


WCL DOOR TOP LT
W.C.L. DOOR AJAR
MAGNETIC SWITCH
N.C. = DOOR OPENED
BLU
RED
C389
1
2
24-300-18
24-302B-18
C388
1
3
24-300-16
24-302B-18
NEUTRAL GRD SIGNAL
FROM BAT JCT CPT
R95
231W-18
85
86
24-302-20
13
C21
5
C387
4
C181
1
D35
C181
3
R96
24-302-20
87
30
24-302B-18
RS
0-0WC-16
85
86
24-302A-18
87A
WCL DOOR AJAR ALARM
C387
2
24-300B-18
87
30
87A
24-300-16
W.C.L. DOOR AJAR
PARK BRAKE SAFETY SWITCH
(N.C. = DOOR OPENED)
R97
86
85
305A-18
C388
5
TO KNEELING PARKING
BRAKE VALVE C11 (6)
24-305-18
WITHOUT KNEELING
PARKING BRAKE SOL. VALVE
C110
B
C110
A
C240
B
126E
C11
6
OR
5
C21
6
C387
5
24-305-18
87
30
87A
24-126W-18
5 MPH N.C. SIGNAL
C183
A
0-0C-18
FS

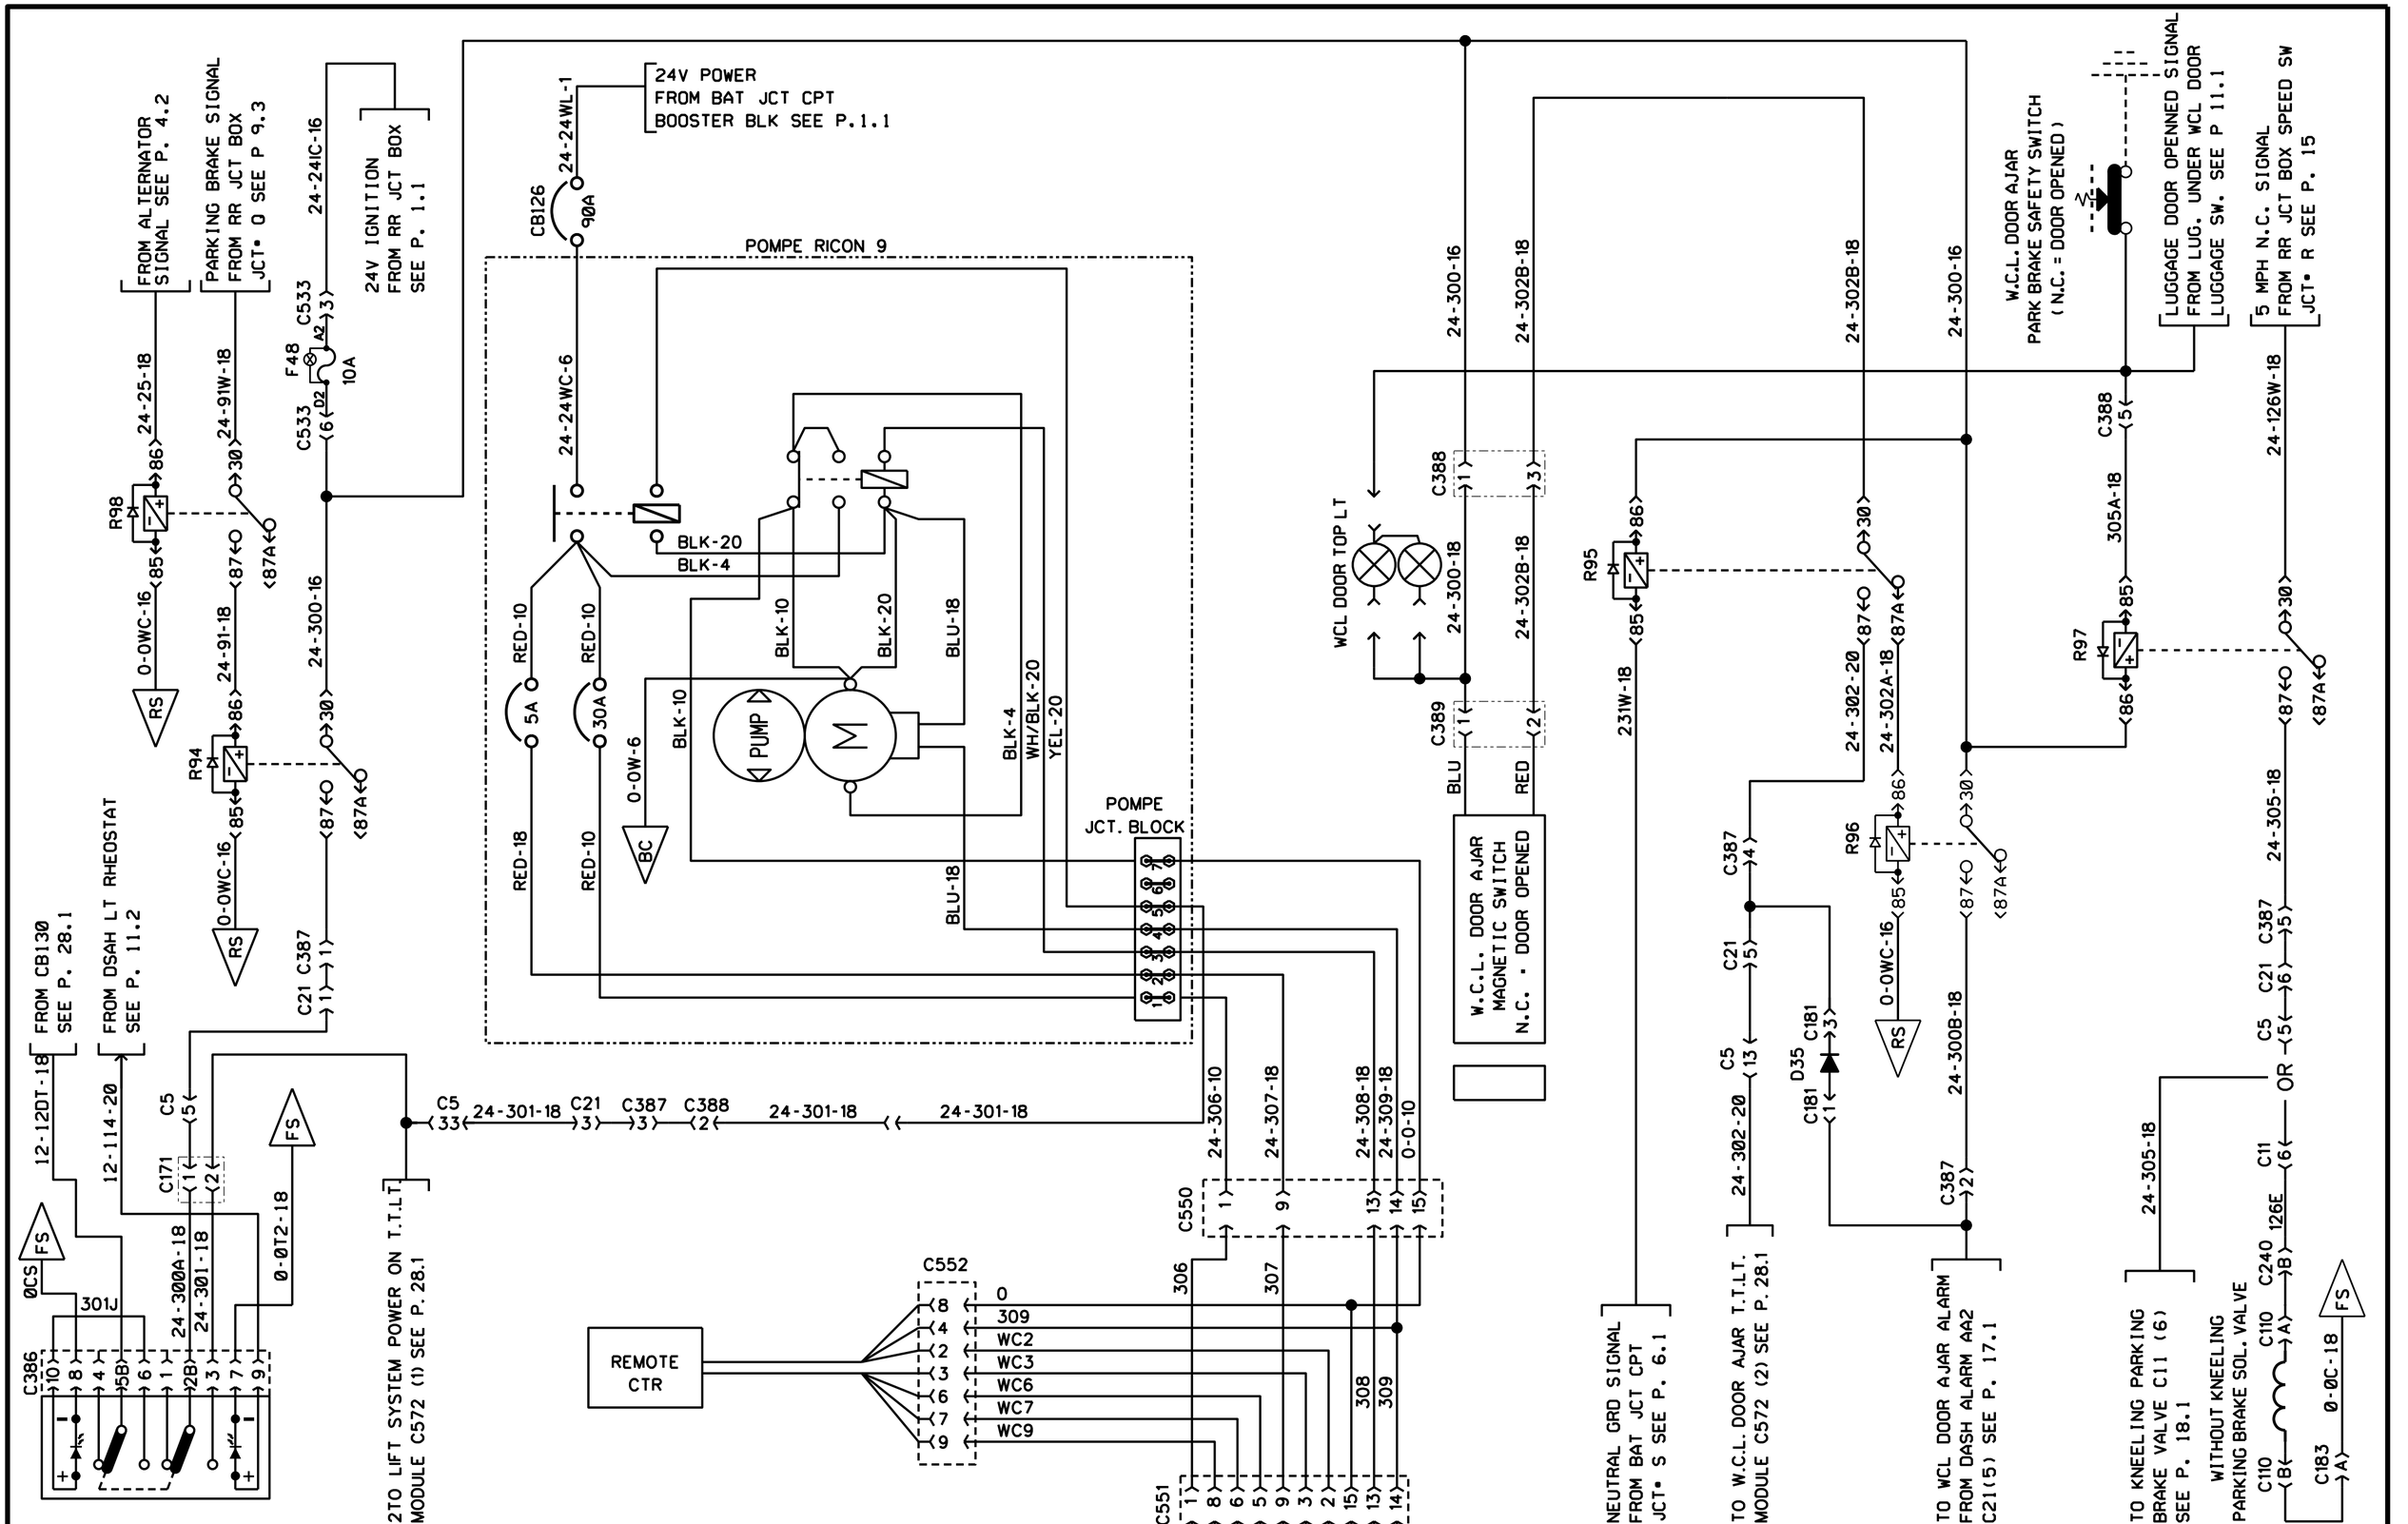



W.C.L. SYSTEM RICON 9

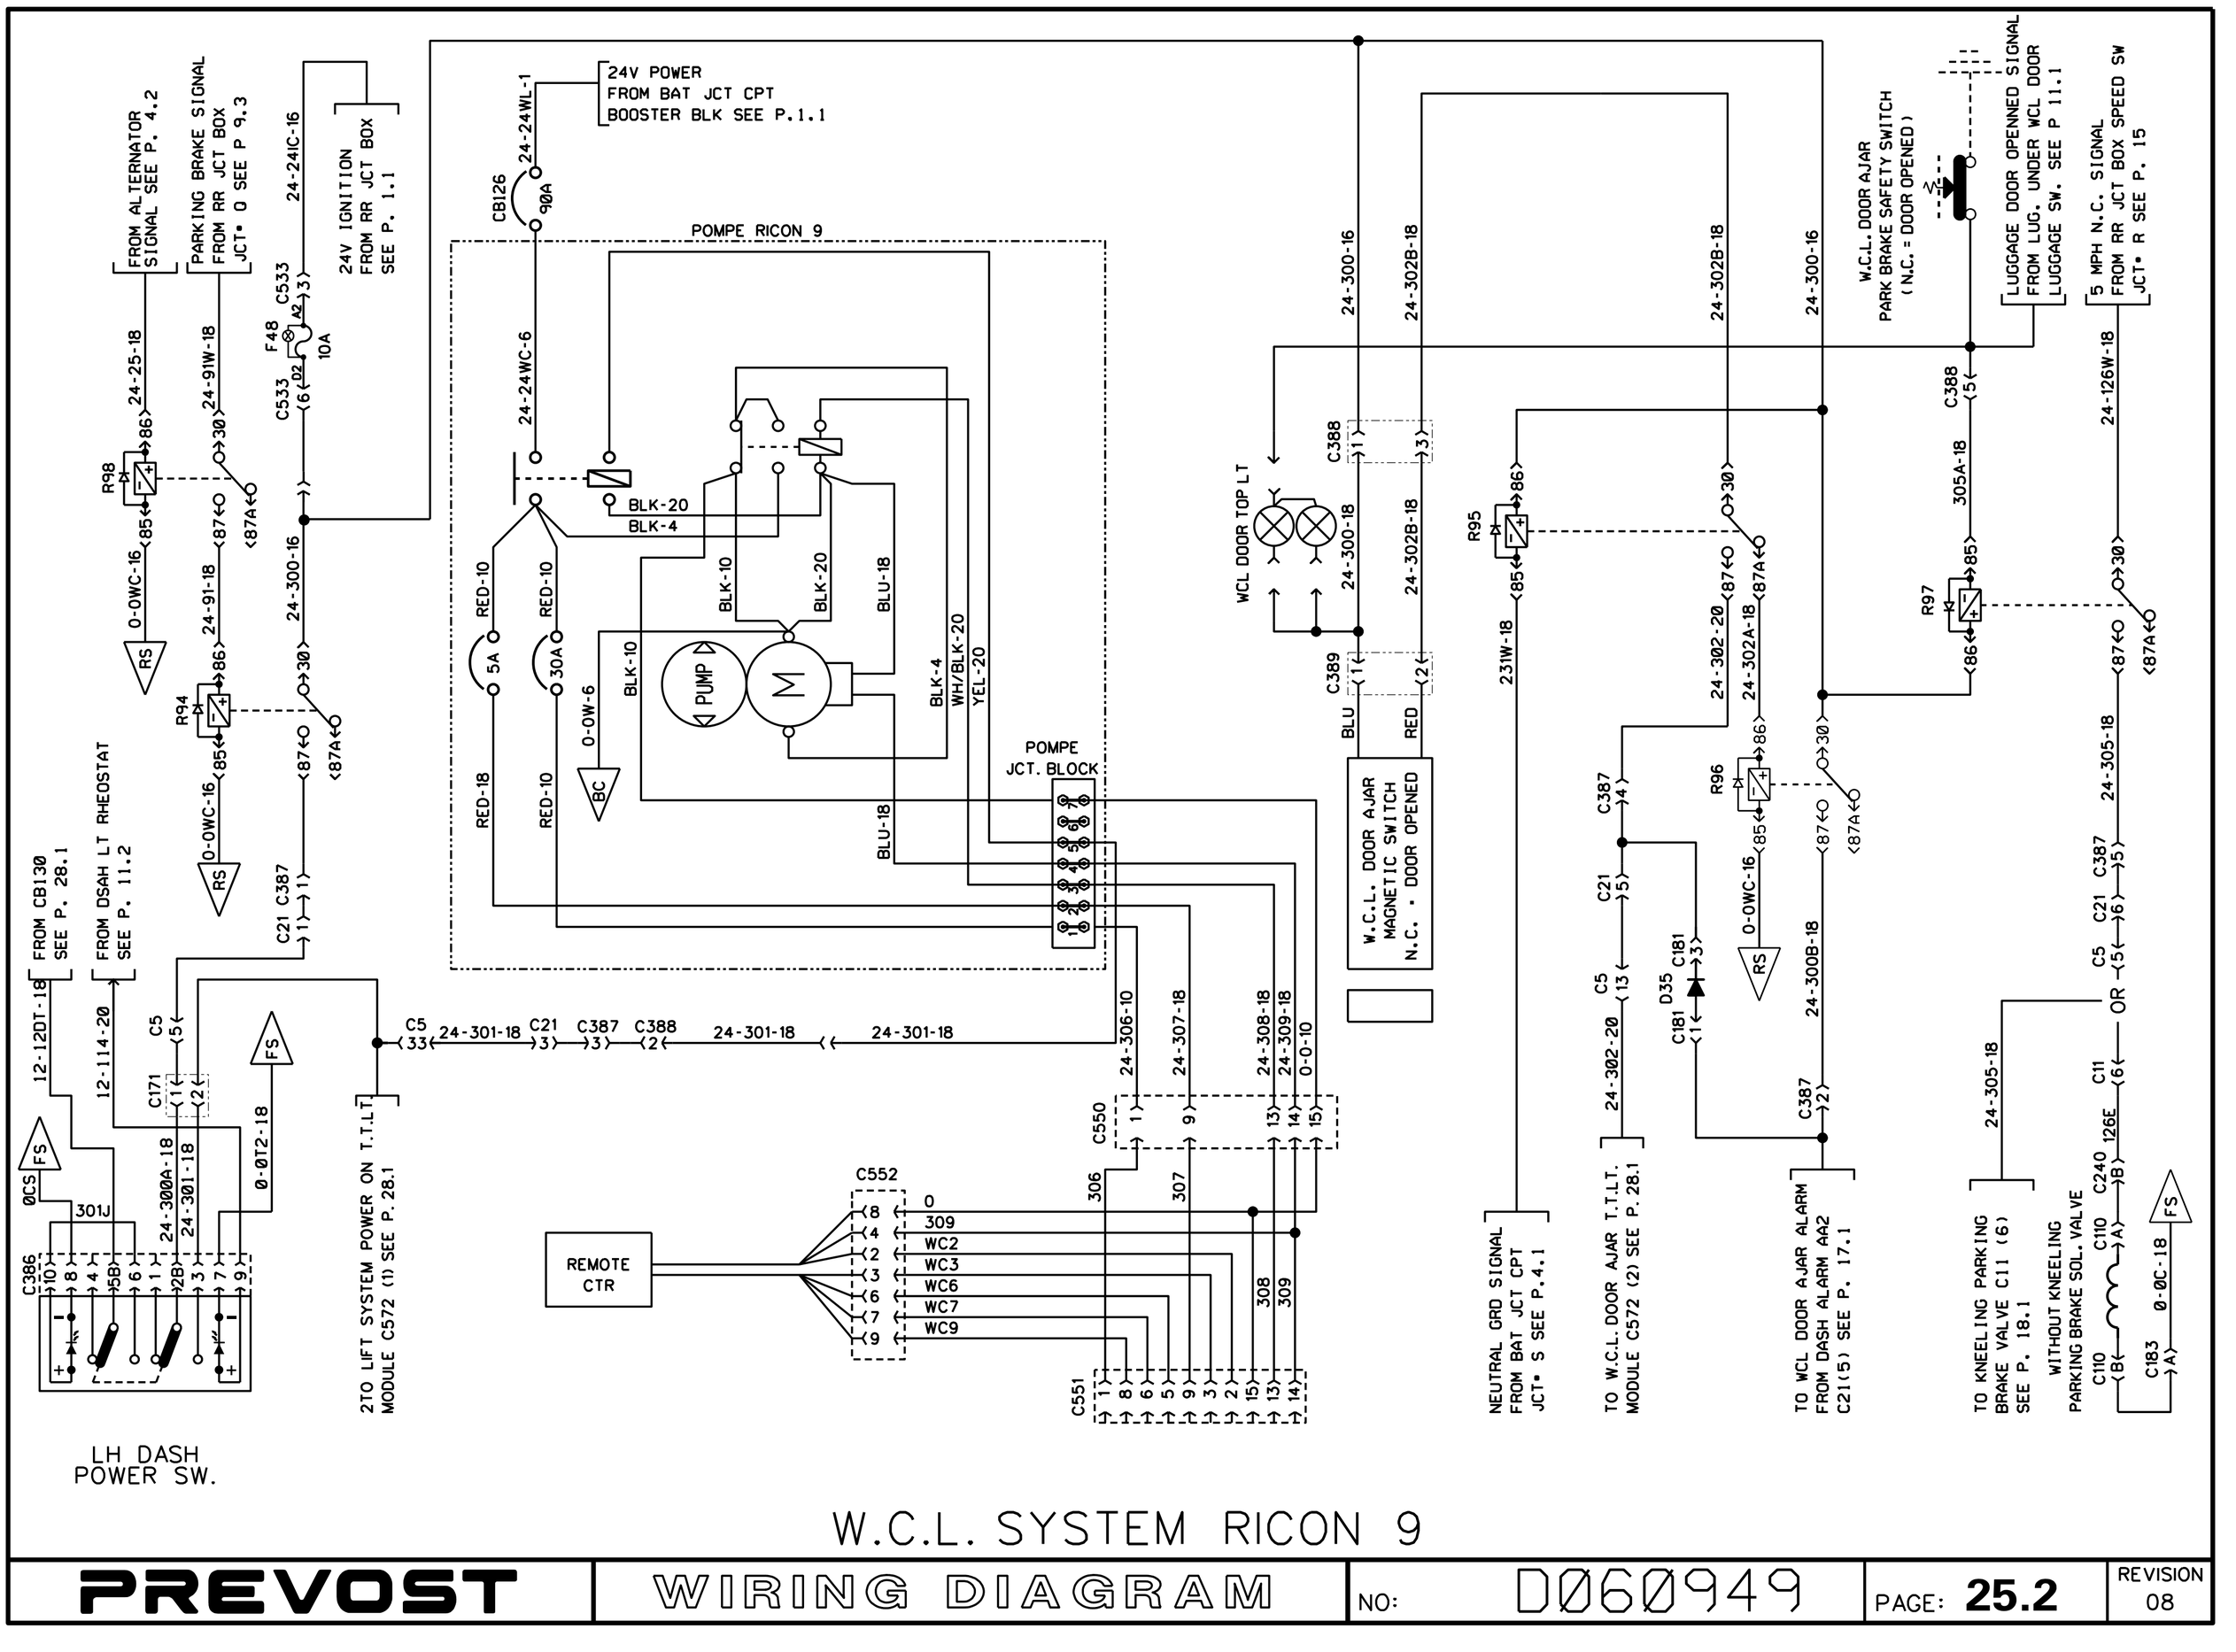


W.C.L. SYSTEM RICON 9

W.C.L. SYSTEM RICON 9

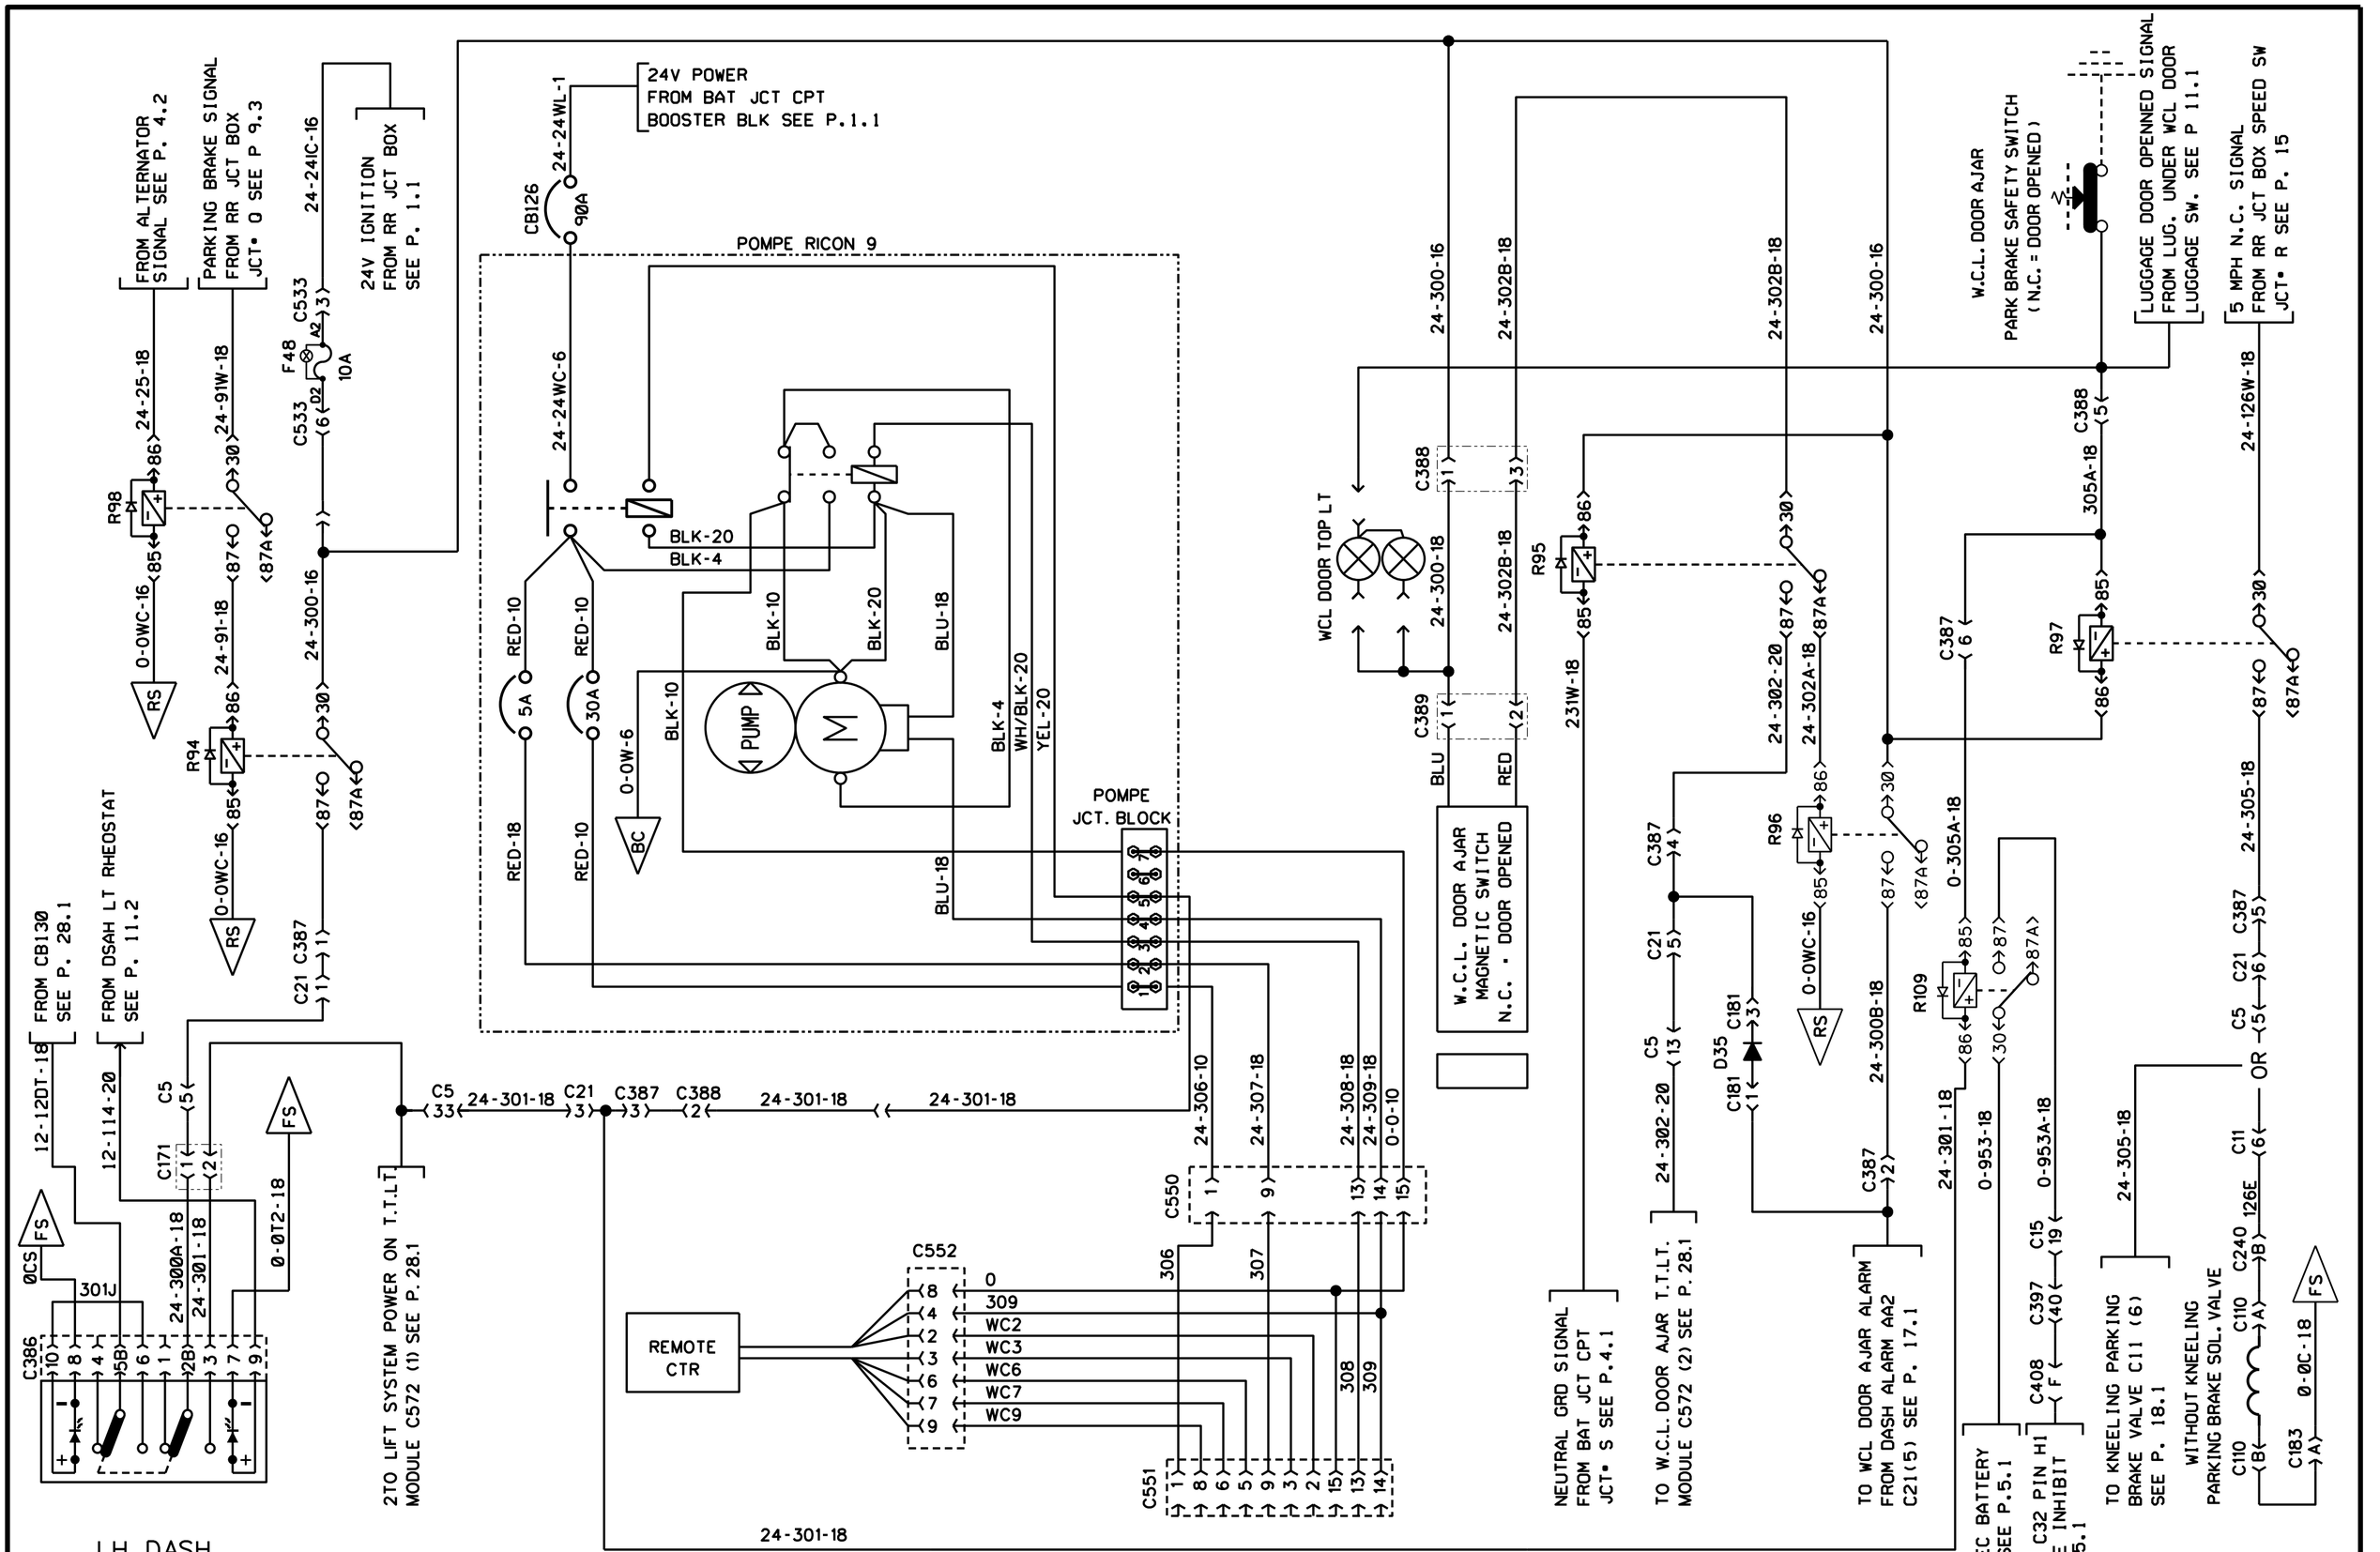

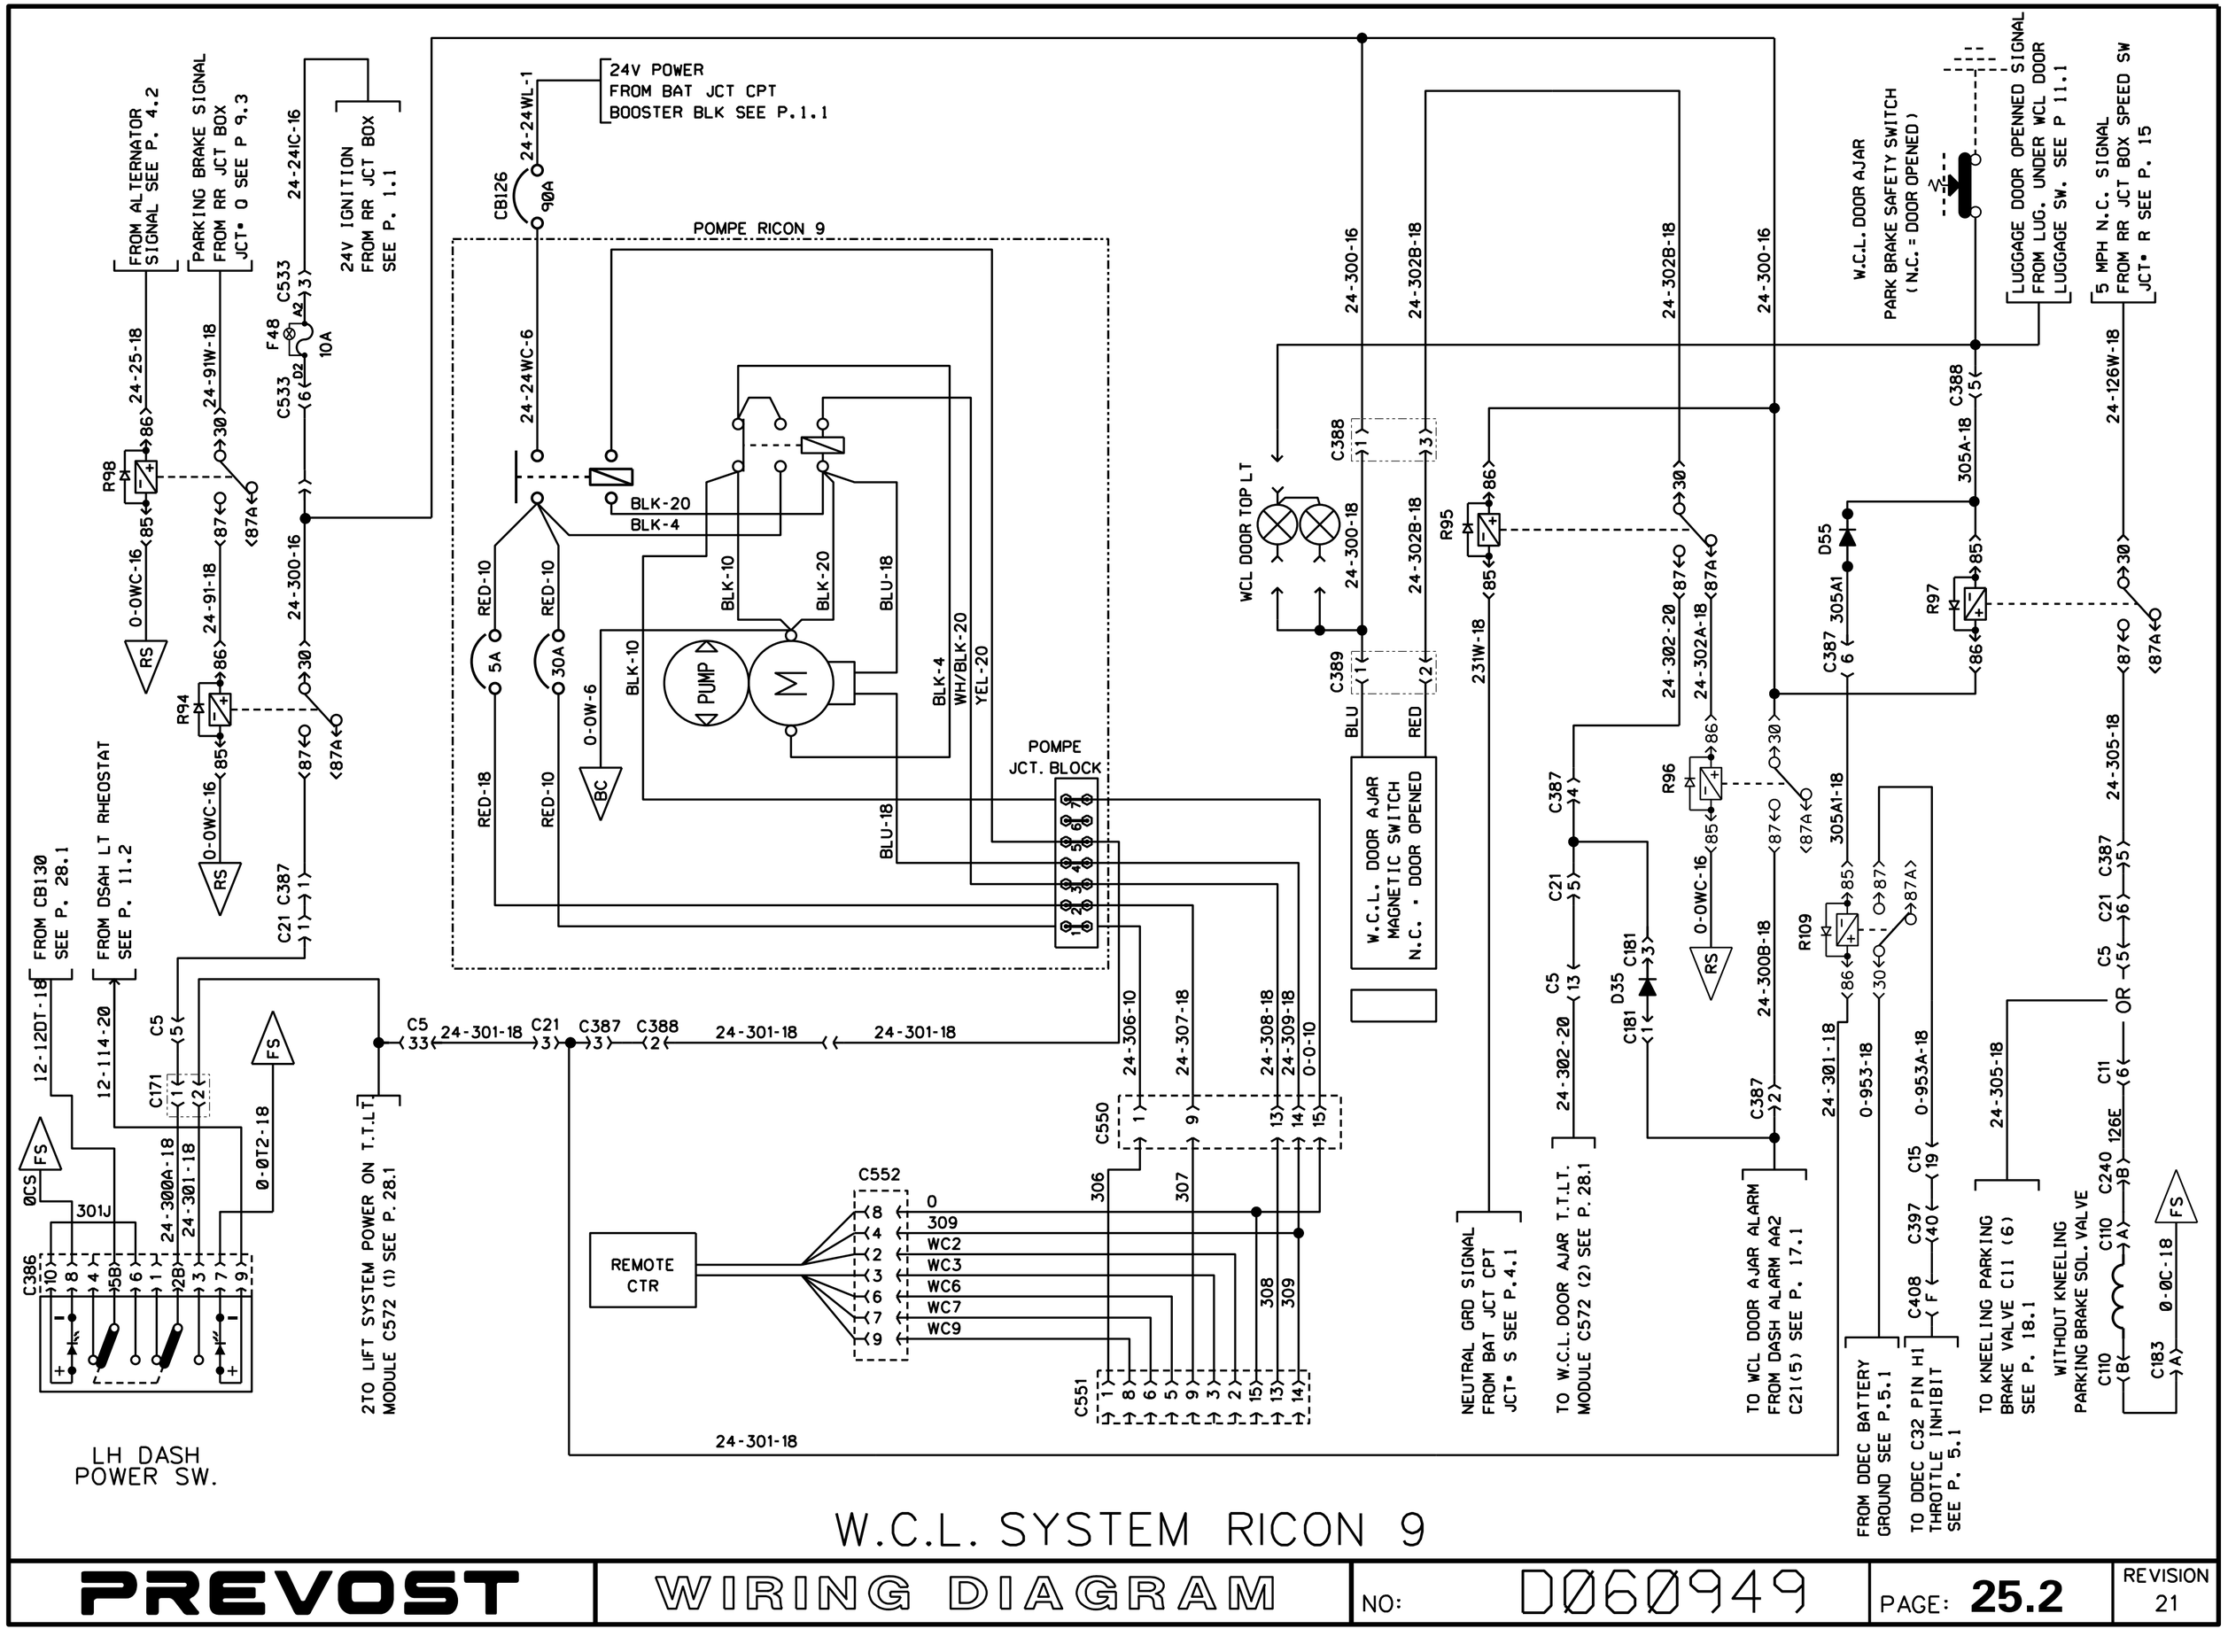

W.C.L. SYSTEM RICON 9

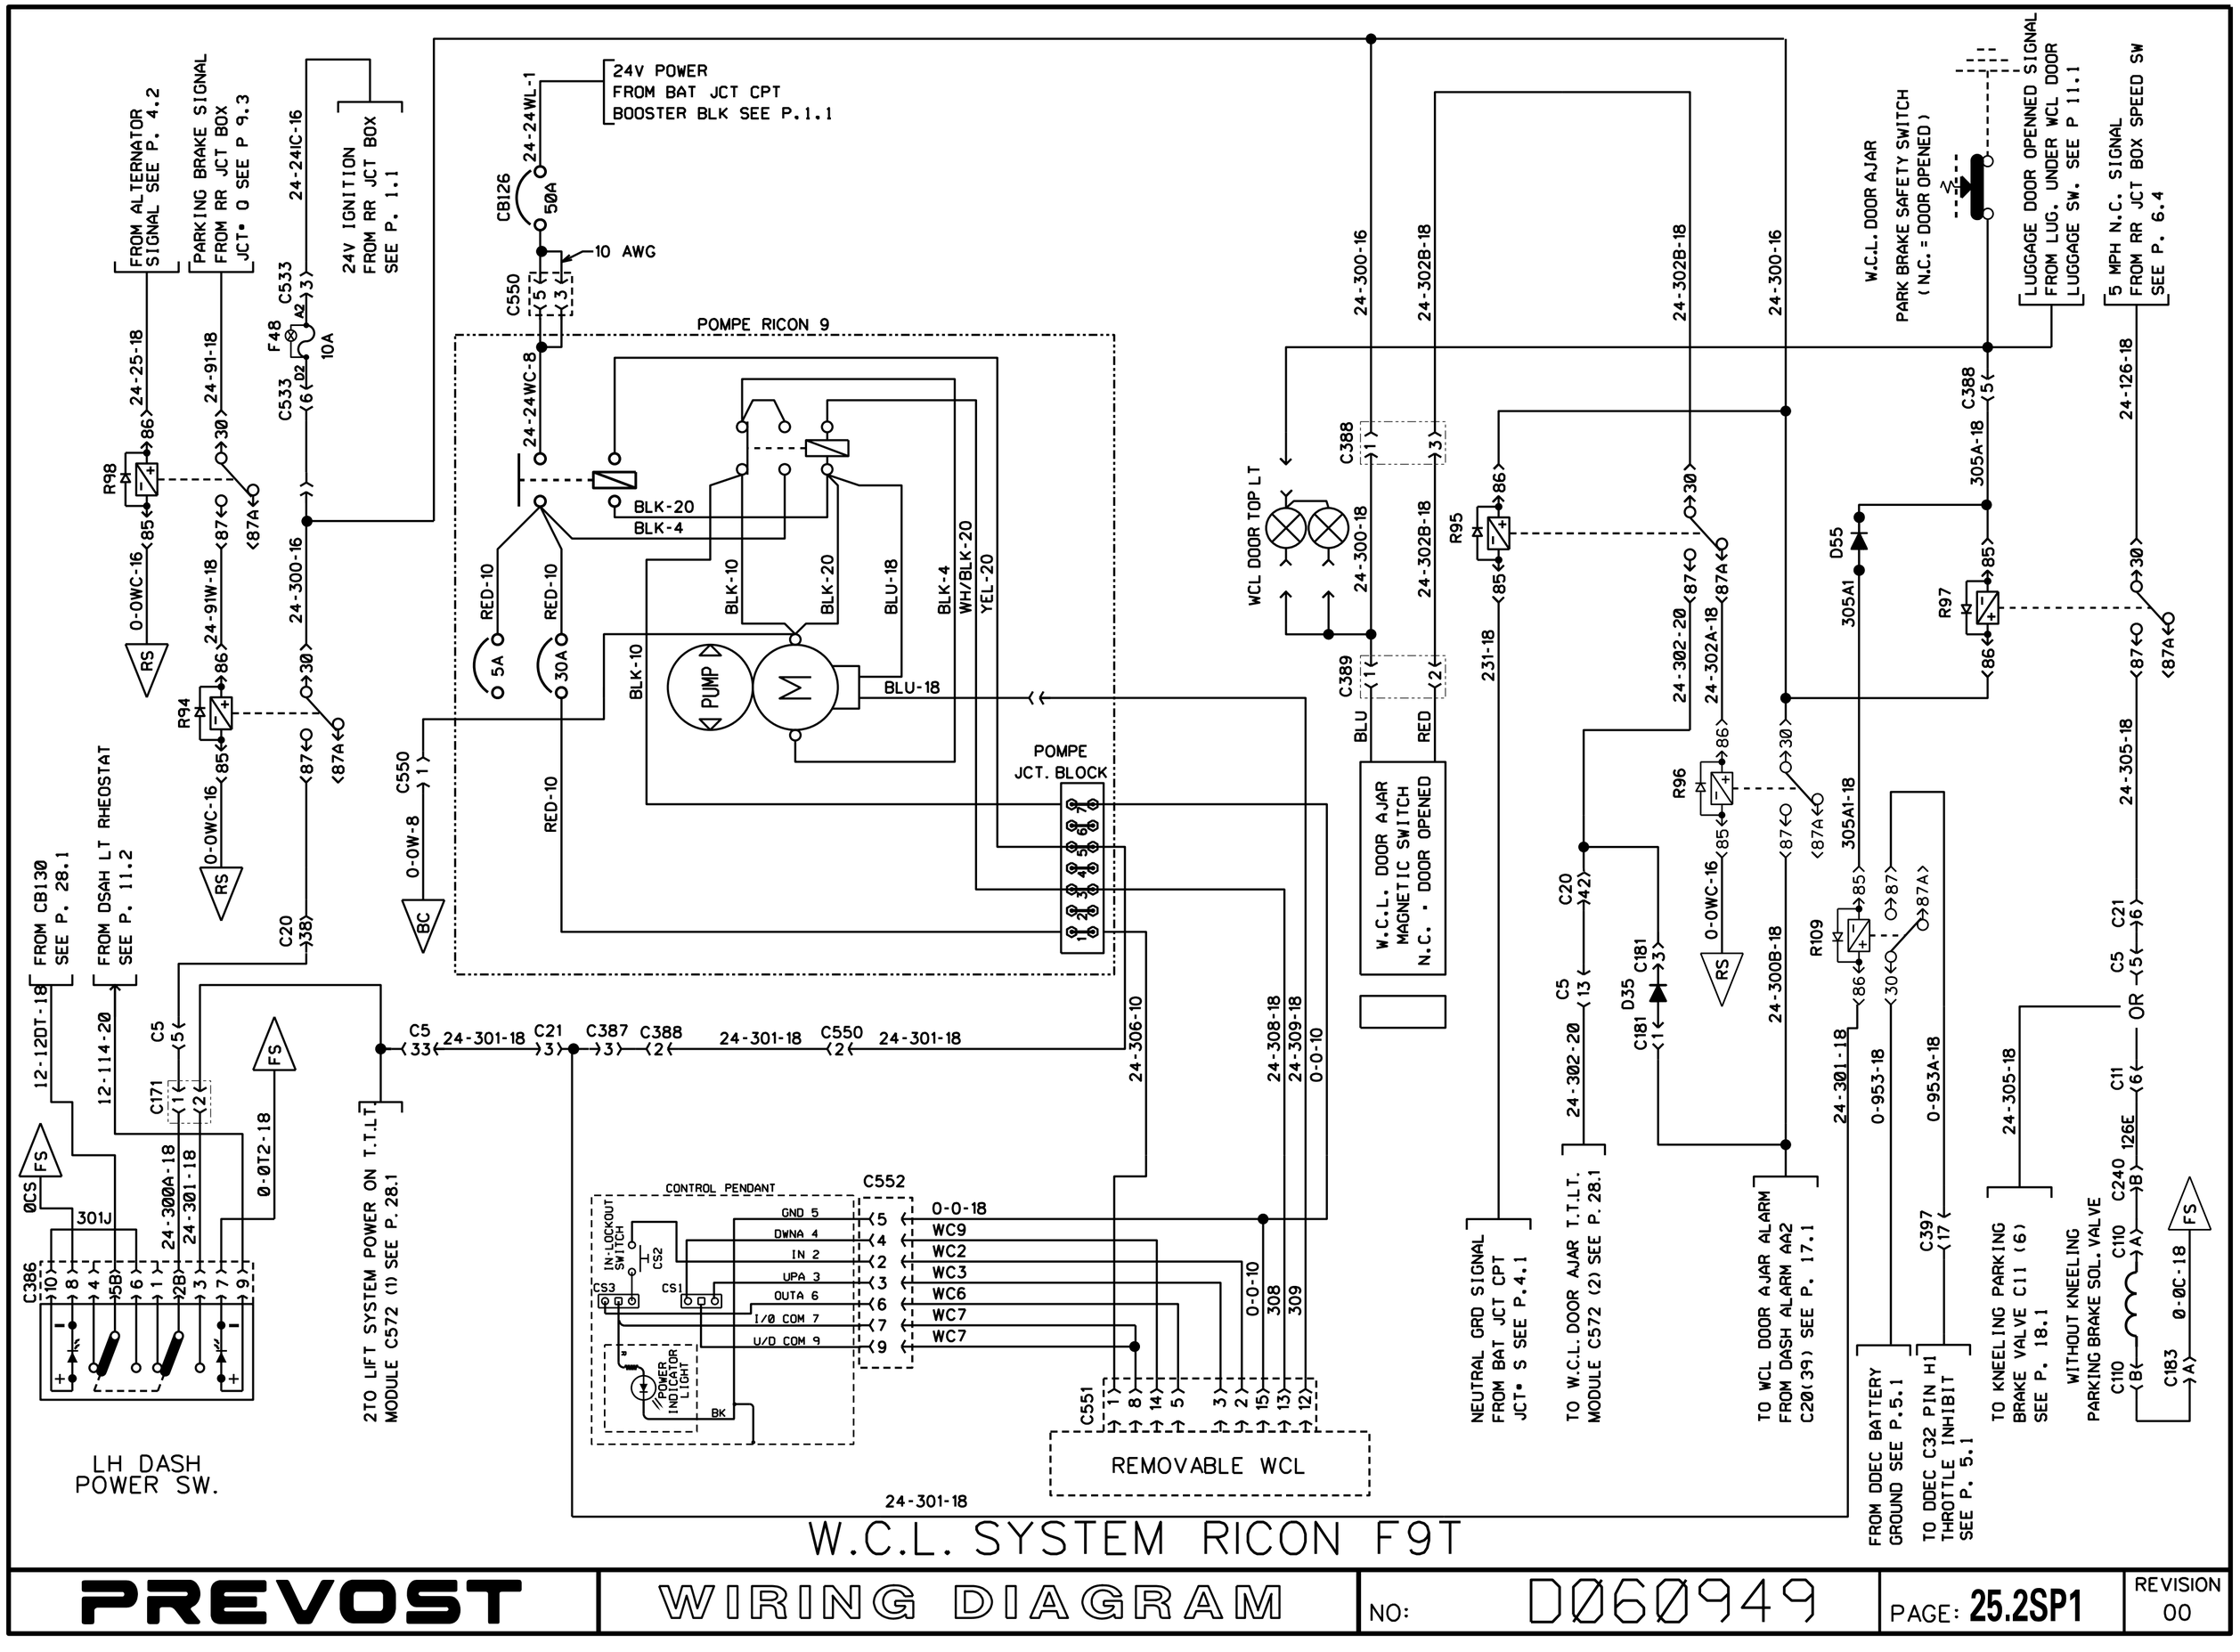

W.C.L. SYSTEM RICON F9T

PREVOST | WIRING DIAGRAM

PRE-HEAT WATER HEATER (WEBASTO 2020)

NO: D060949

PAGE: 26.1

REVISION 00

PRE-HEAT WATER HEATER (WEBASTO 2020 (24V 80000 BTU)

ELECTRICAL MODULE

C420 A 1 0-0WB-16 / 2 24-57H-18

C129 B 4 24-129-12 / 5 / 6 128B-18 / 3 128A-18 / 1 24-127A-16 / 2 0P-14

C91 23 0-0WB-16 → R93 (85 / 86) → 24-129-20 → C534 8 D4 F50 20A A4 1 C534 → 24-24D-14 → 24-24D-12 → 24V H.W. POWER FROM RR.JCT.BOX SEE P.1.1

C91 14 24-57H-18 → R93 (30 / 87 / 87A) → 24-57C-18 → 24-57C-18 TO WATER PUMP SEE P. 13.2

C91 36 16GA → 16GA → 24-129-14 → C534 8 D4 F50 20A A4 1 C534 → 24-24D-14 → 24-24D-12

C91 37 16GA → 16GA

C91 20 → 24-129B-14 → C533 5 D1 F49 20A A1 4 C533 → 24-24D-12

C90 3 → 128B-18 → C6 3

C90 2 → 128A-18 → C6 2

C90 10 → 24-127A-16 → C6 10

RS ← 0P-14 ← C129 2

FS → 0-0M7-14 → C171 21 / C430 5 → 0M7 → C504 5 GROUND

C171 18 → 128B → C430 7

C421 1 ← 0-0WB-16 ← C420 1

C422 1 ← 129B-14 ← C129 1

C422 2 ← 0-0P-14 ← C129 2

C422 C

C 8 BRN → M
C 6 ORA → WH
C 4 WH → BLU
C 7 BLU
C 1 GRN
C 2 YEL
C 5

C504 WEBASTO TIMER
- 5 GROUND
- 3 OPERAT. INDICAT. LH ← 128A ← C430 3 ← C171 10 ← 128A
- 7 ON/OFF ← D78 ← 127B ← C430 6 ← C171 3 ← 127A
- 2 B+ ← 127
- 6 B+ ← 127 ← C430 1 ← C171 4
- 4 IGNITION
- 8 DASH LTS OPT.

C171 4 → 127 → C430 1

C171 4 → 127A → C430 6 → D78 → 127B

C171 3 → 127A → C430 2

C171 4 → 127 → C430 1

C171 4 → 127A → C430 6 → D79 → C430 4 → C171 2 → C431 1 → C171 1

C502 PRE-HEAT SW.
- 10 → FS → 0T1
- 8 → RS28 → 127A
- 4
- 5B
- 6
- 1
- 2B → 24-85A-16 → C431 → C171 1 → 24-85A-16 → FROM 24V IGNITION INSTRUMENTATION SEE P. 7.2
- 3
- 7 → 12-114A-18 → FROM DASH LTS RHEOSTAT SEE P 11.2
- 9

C71 28 → 24-127-16 → C71 C526 28 / 7 D3 F26 5A A3 2 C526 → 24-24D-16 → 24V H.W. POWER FROM FR.JCT.BOX SEE P. 1.1

PRE-HEAT WATER HEATER (ESPAR)

C505 ELECTRONIC TIMER CONTROL SW.
- 1 → 24-85A-16 → C431 → 24-85A-16 → FROM 24V IGNITION INSTRUMENTATION SEE P.7.1
- 11 → 24-127-16 → C430 1 → C171 4 → 24-127-16 → C71 C526 28 / 7 D3 F26 5A A3 2 C526 → 24-24D-16 → 24V H.W. POWER FROM FR.JCT.BOX SEE P. 1.1
- 2 → 24-127B-16
- 12 → 0-0W-16
- 4
- 8 → 24-128A-18 → D78 → 127A → C430 6 → 24-127A-16 → C171 3


C502 PRE-HEAT SW.
- 10 → FS ← 0-0M7-14 ← C430 5
- 8
- 4
- 5B
- 6
- 1
- 2B → 24-85A-16 → C171 2 / C430 4 → 127A
- 3 → 24-128A-18 → C430 3
- 7 → 24-128B-18 → C430 7
- 9

D79 → RS28 → 127A


0T1

C129
- 2 → 0-0P-14 → RS
- 4 → 24-129-12 → C91 36 16GA → 16GA → C91 37 16GA → 16GA → 24-129-14 → C534 8 D4 F50 20A A4 1 C534 → 24-24D-14 → 24V H.W. POWER FROM RR.JCT.BOX SEE P. 1.1
- 1 → 24-127A-16 → C90 10 → 24-127A-16 → C6 10
- 3 → 24-128A-18 → C90 2 → 2 → C171 10
- 6 → 24-128B-18 → C90 3 → 3 → C171 18
- 5


CONTROL MODULE ESPAR (24V 41000 BTU)
- BRN → 1
- YEL/RED → 2 → 24-57H-18 → C91 14 → 57H → R93 30 → JUMPER → R93 87 → C52 20 → 24-57C-18 → TO WATER PUMP RLY SEE P 13.2
- GRN → 24-127W-18 → C91 34 → C52 4 → C107 B → 24-127W-18
- YEL → 24-128W-18 → C91 35 → C52 5 → C107 A → 24-128W-18 → FUEL METERING PUMP
- YEL

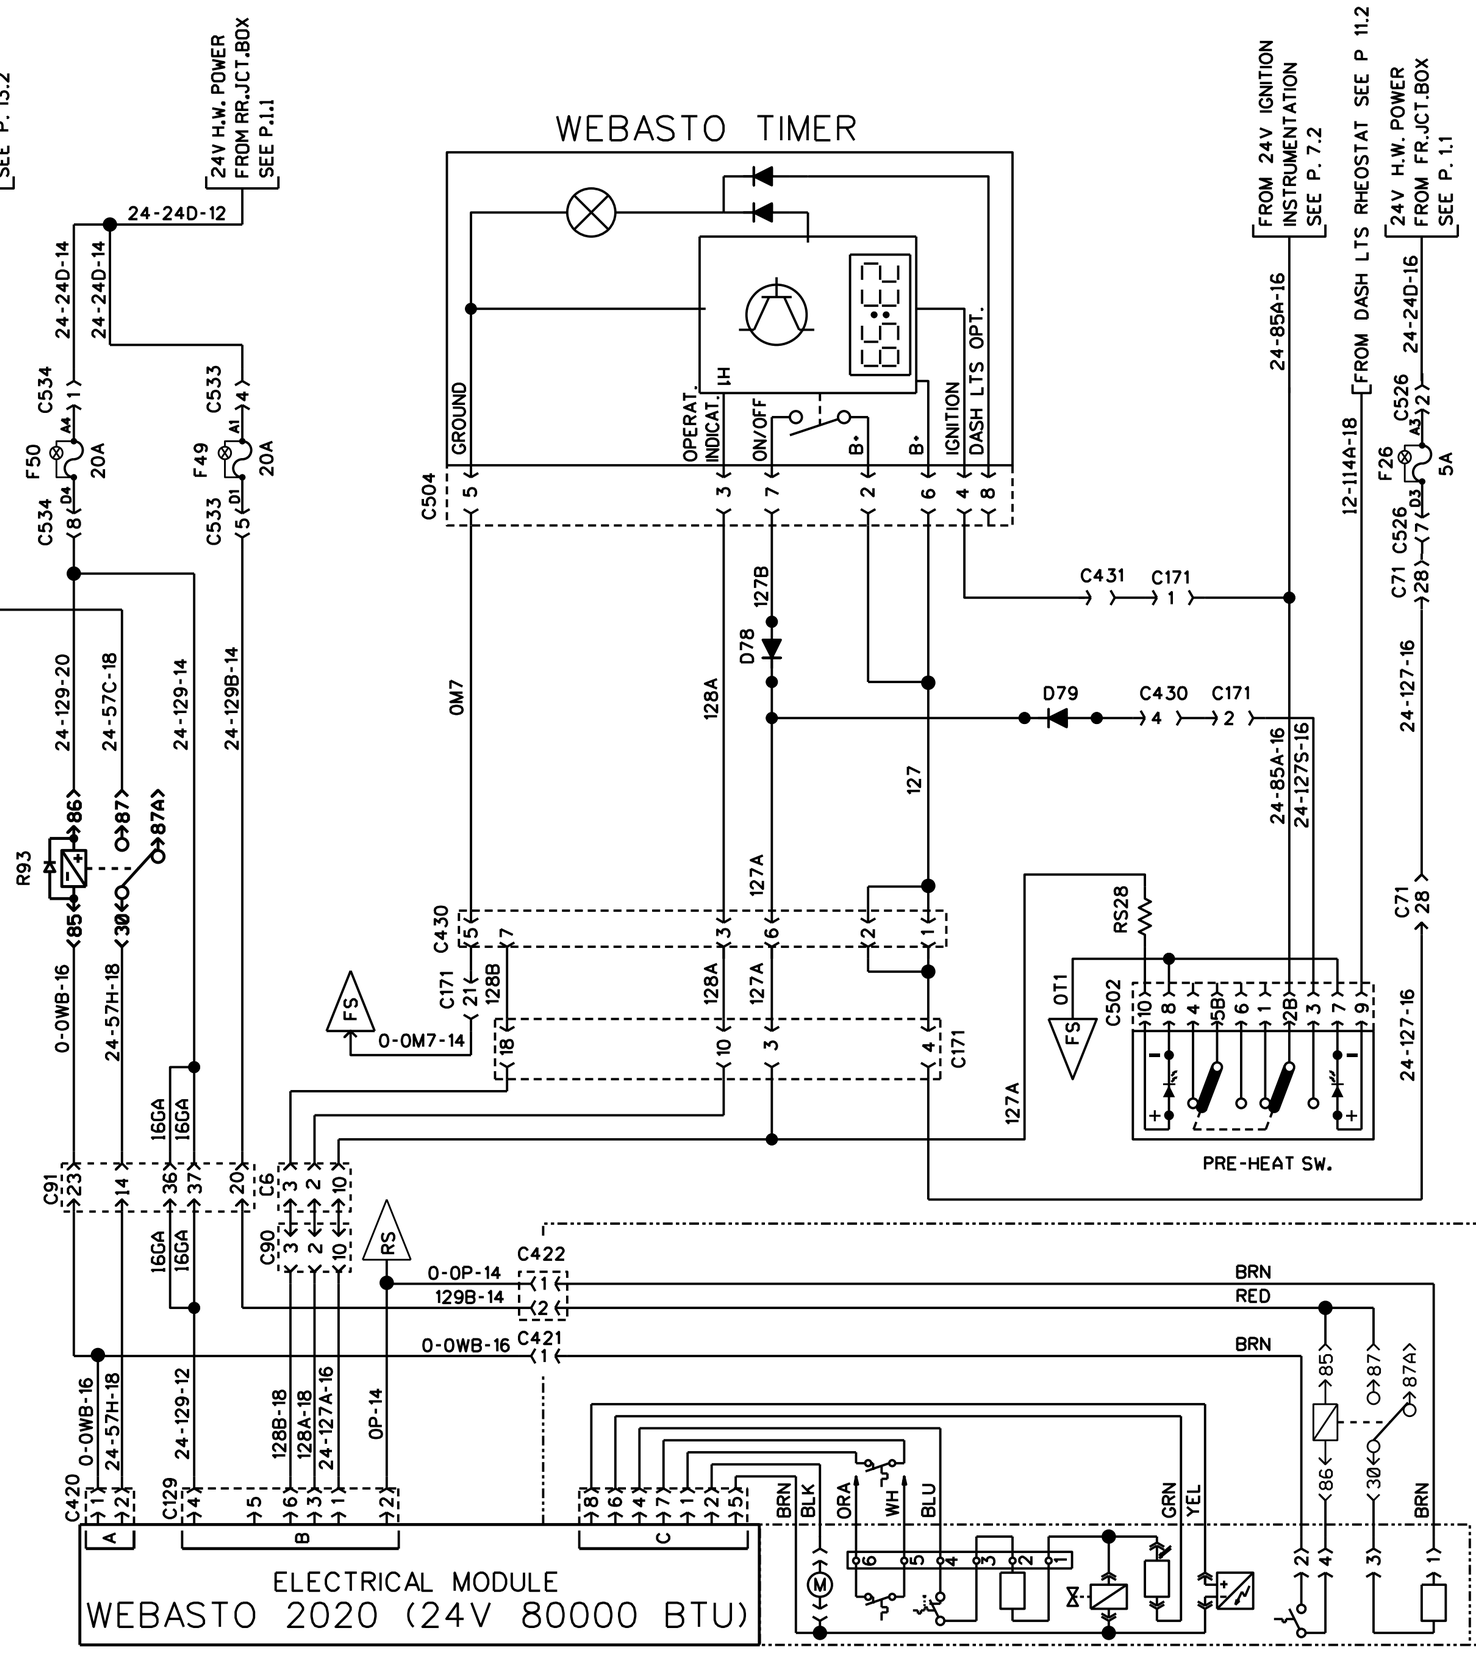


PRE-HEAT WATER HEATER (WEBASTO 2020)

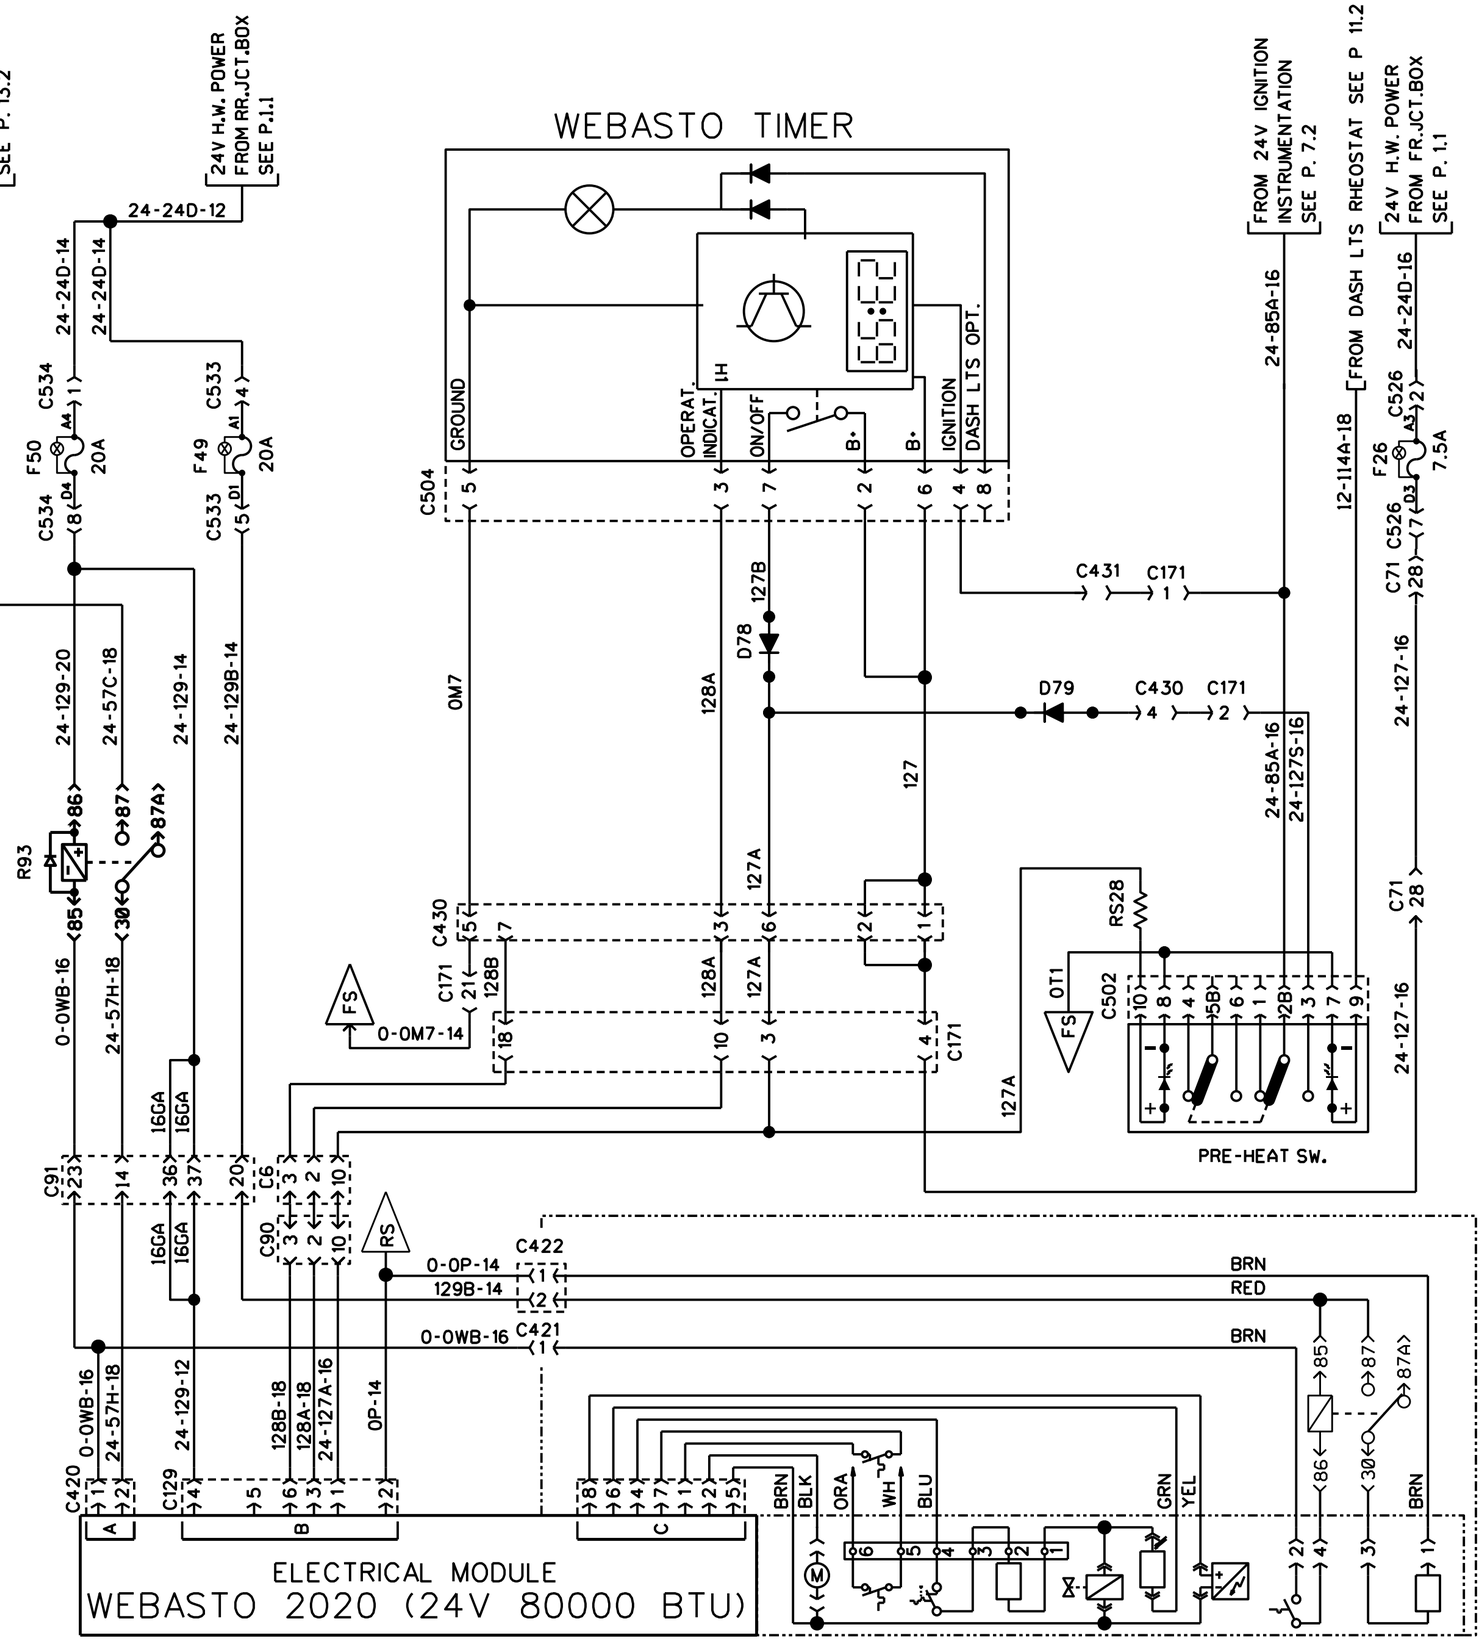


PRE-HEAT WATER HEATER (WEBASTO 2020)

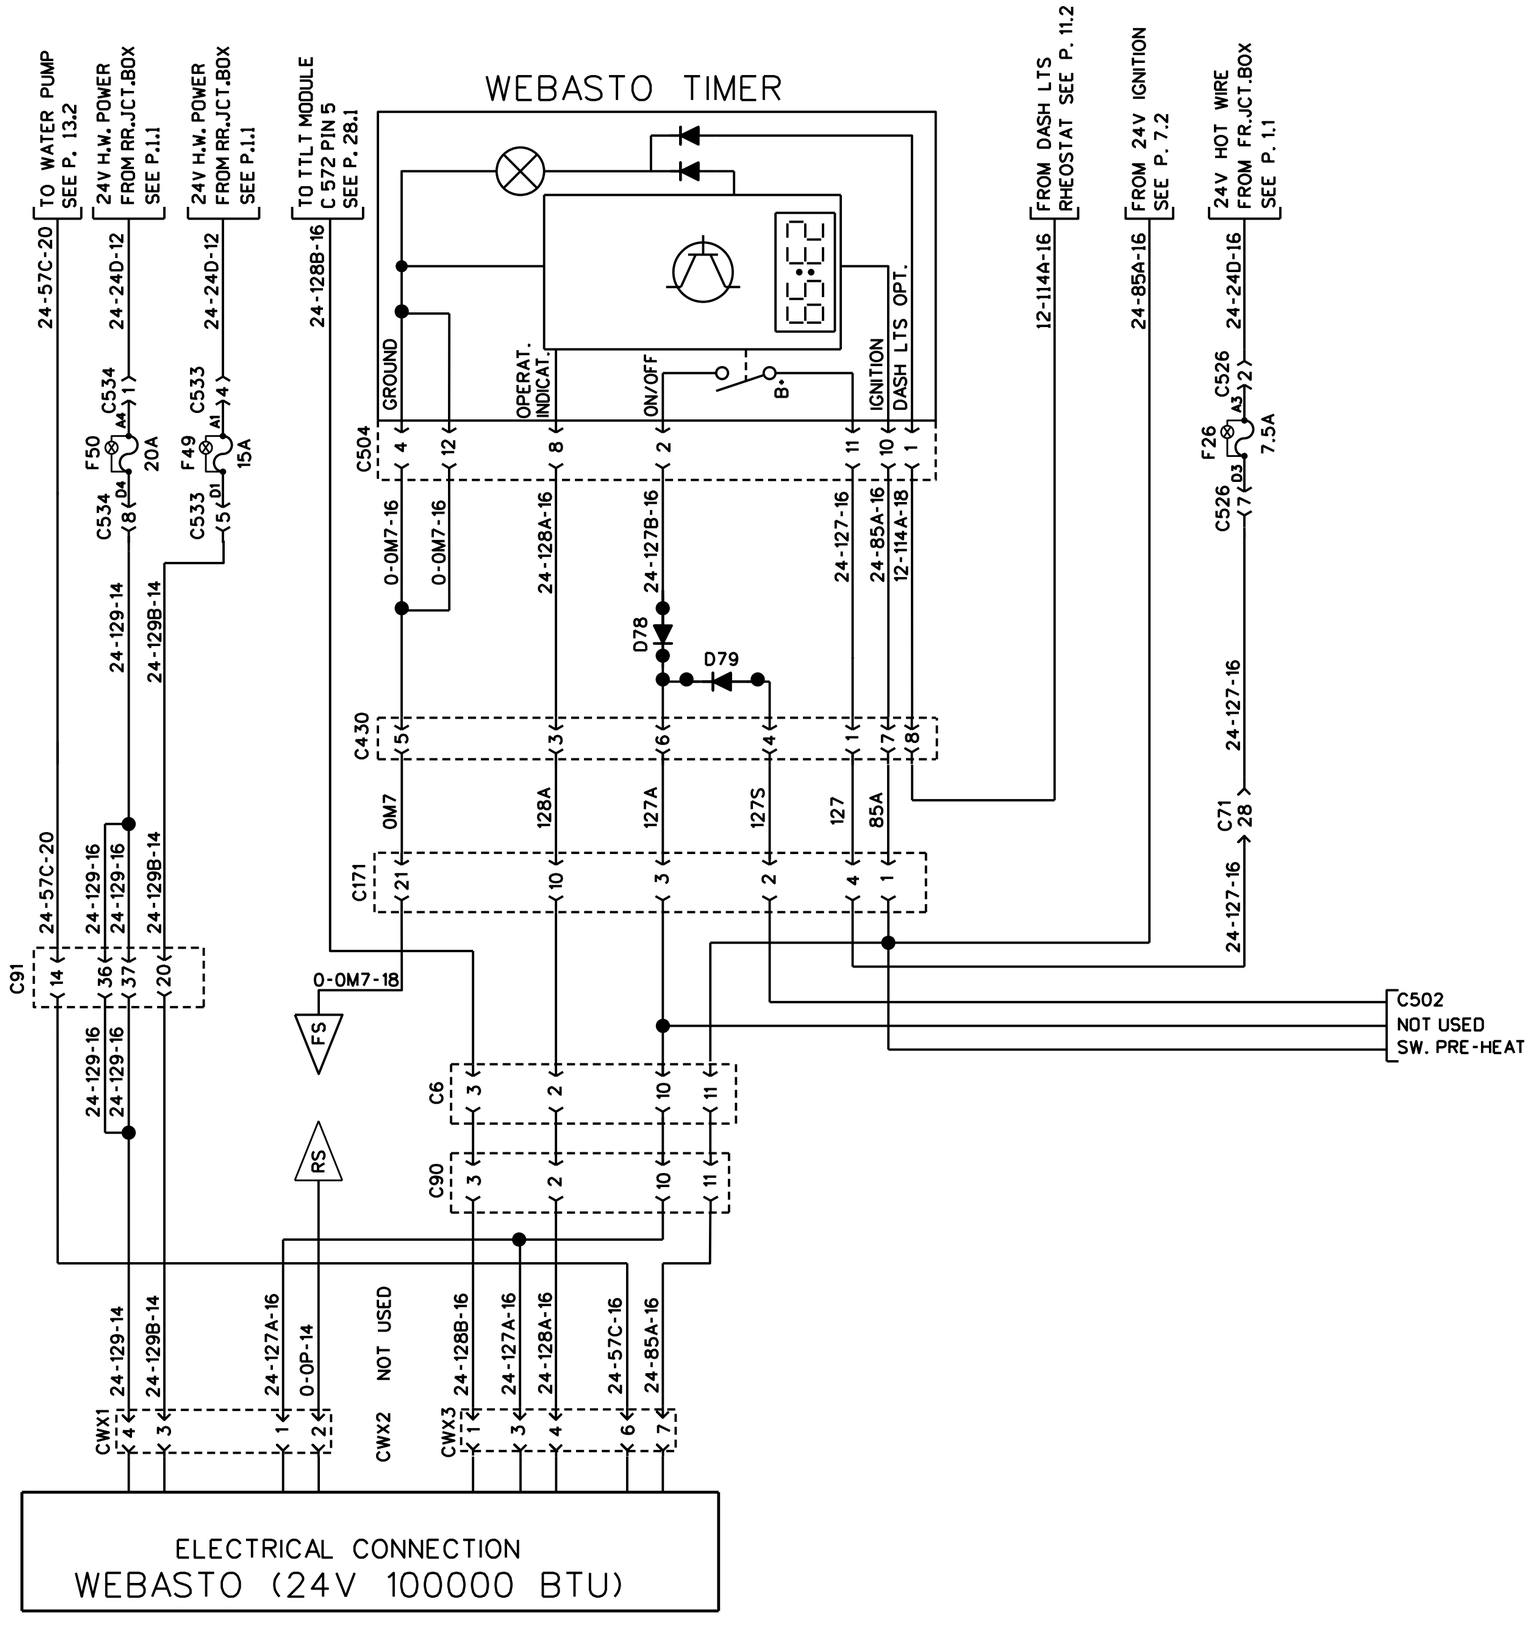


PRE-HEAT WATER HEATER (WEBASTO THERMO 300)

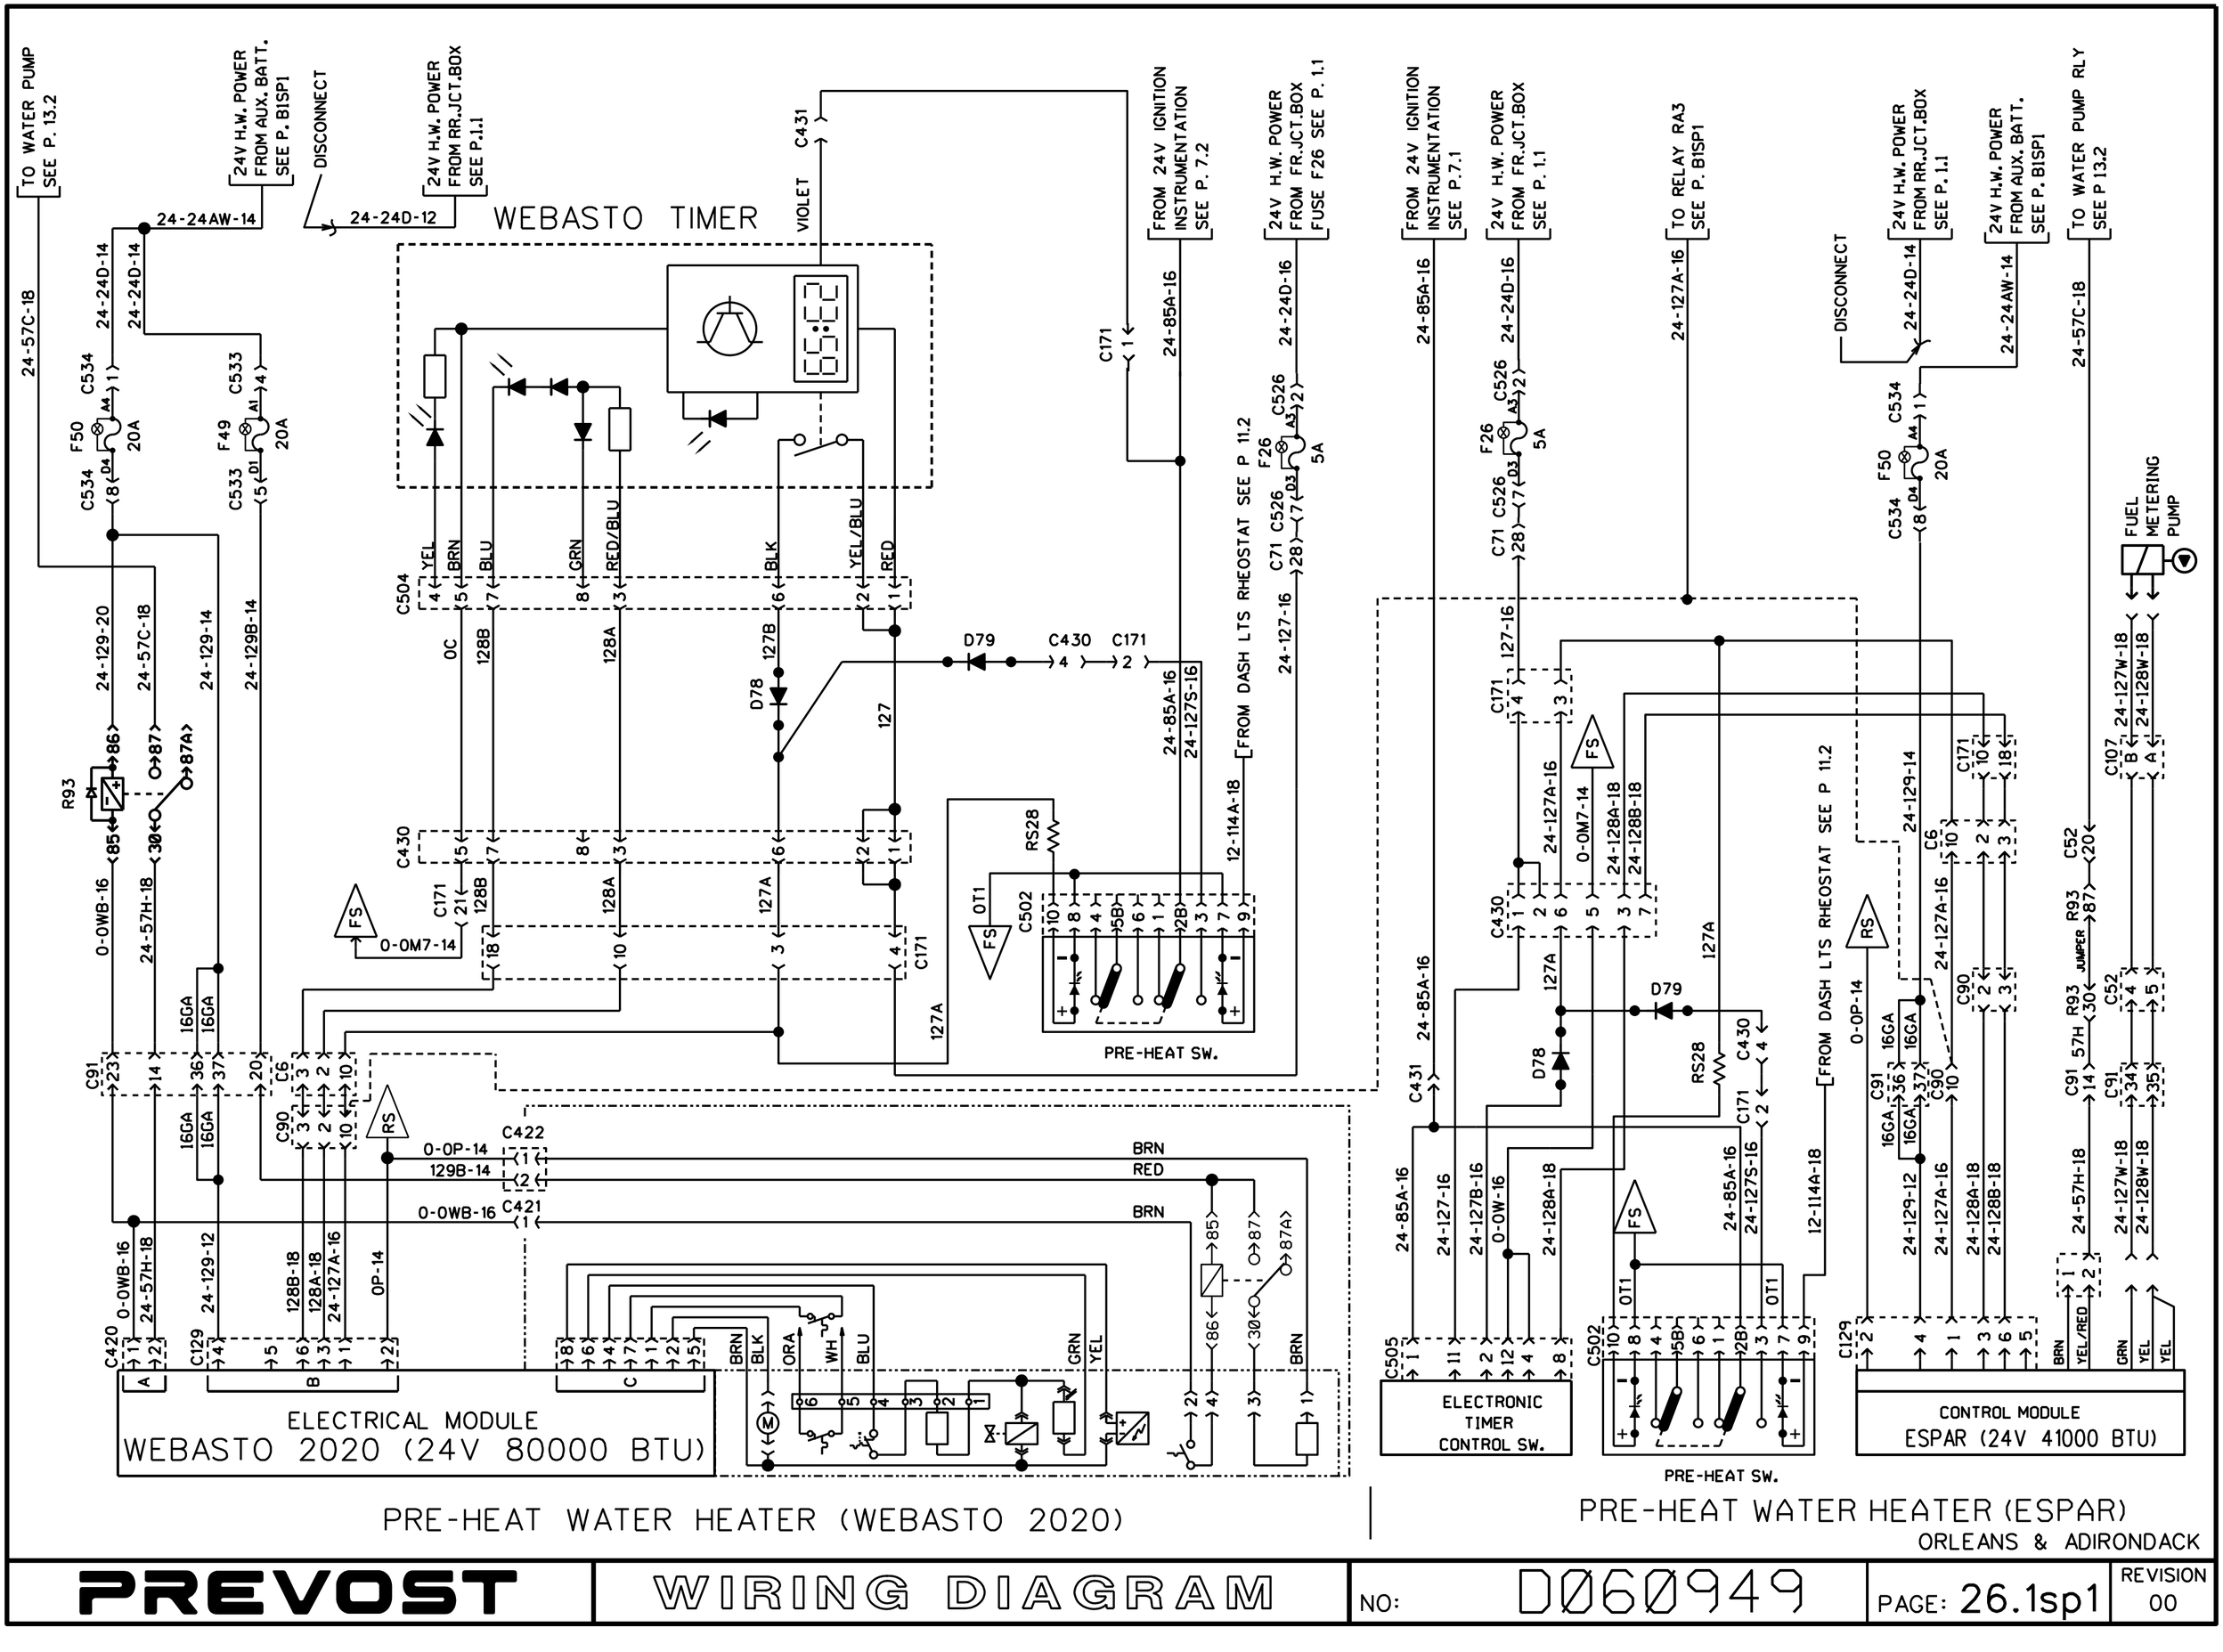

TO WATER PUMP
SEE P. 13.2
24-57C-18
24V H.W. POWER
FROM AUX. BATT.
SEE P. B1SP1
DISCONNECT
24-24D-12
24V H.W. POWER
FROM RR.JCT.BOX
SEE P.1.1
24-24AW-14
24-24D-14
WEBASTO TIMER
VIOLET
C431
C171
24-85A-16
FROM 24V IGNITION
INSTRUMENTATION
SEE P. 7.2
F50
F49
20A
C534
C533
24-129-20
24-57C-18
24-129-14
24-129B-14
R93
0-0WB-16
24-57H-18
C504
YEL
BRN
BLU
GRN
RED/BLU
BLK
YEL/BLU
RED
0C
128B
128A
127B
127
D78
D79
C430
24-85A-16
24-127S-16
FROM DASH LTS RHEOSTAT SEE P 11.2
24-127-16
C71 C526
F26
5A
24V H.W. POWER
FROM FR.JCT.BOX
FUSE F26 SEE P. 1.1
24-24D-16
24-85A-16
24-127A-16
TO RELAY RA3
SEE P. B1SP1
24-24D-16
24V H.W. POWER
FROM FR.JCT.BOX
SEE P. 1.1
DISCONNECT
24V H.W. POWER
FROM RR.JCT.BOX
SEE P. 1.1
24-24D-14
24-24AW-14
24V H.W. POWER
FROM AUX. BATT.
SEE P. B1SP1
TO WATER PUMP RLY
SEE P 13.2
24-57C-18
FUEL
METERING
PUMP
C171
127-16
FS
0-0M7-14
24-127A-16
24-128A-18
24-128B-18
C430
127A
RS28
OT1
C502
PRE-HEAT SW.
C91
C422
C421
C420
C129
C90
C6
RS
0-0P-14
129B-14
16GA
24-129-12
24-127A-16
24-128A-18
24-128B-18
OP-14
BRN
RED
ELECTRICAL MODULE
WEBASTO 2020 (24V 80000 BTU)
BRN
BLK
ORA
WH
BLU
GRN
YEL
A
B
C
C505
ELECTRONIC
TIMER
CONTROL SW.
C90
C52
JUMPER
57H
24-57H-18
24-127W-18
24-128W-18
CONTROL MODULE
ESPAR (24V 41000 BTU)
PRE-HEAT WATER HEATER (WEBASTO 2020)
PRE-HEAT WATER HEATER (ESPAR)
ORLEANS & ADIRONDACK

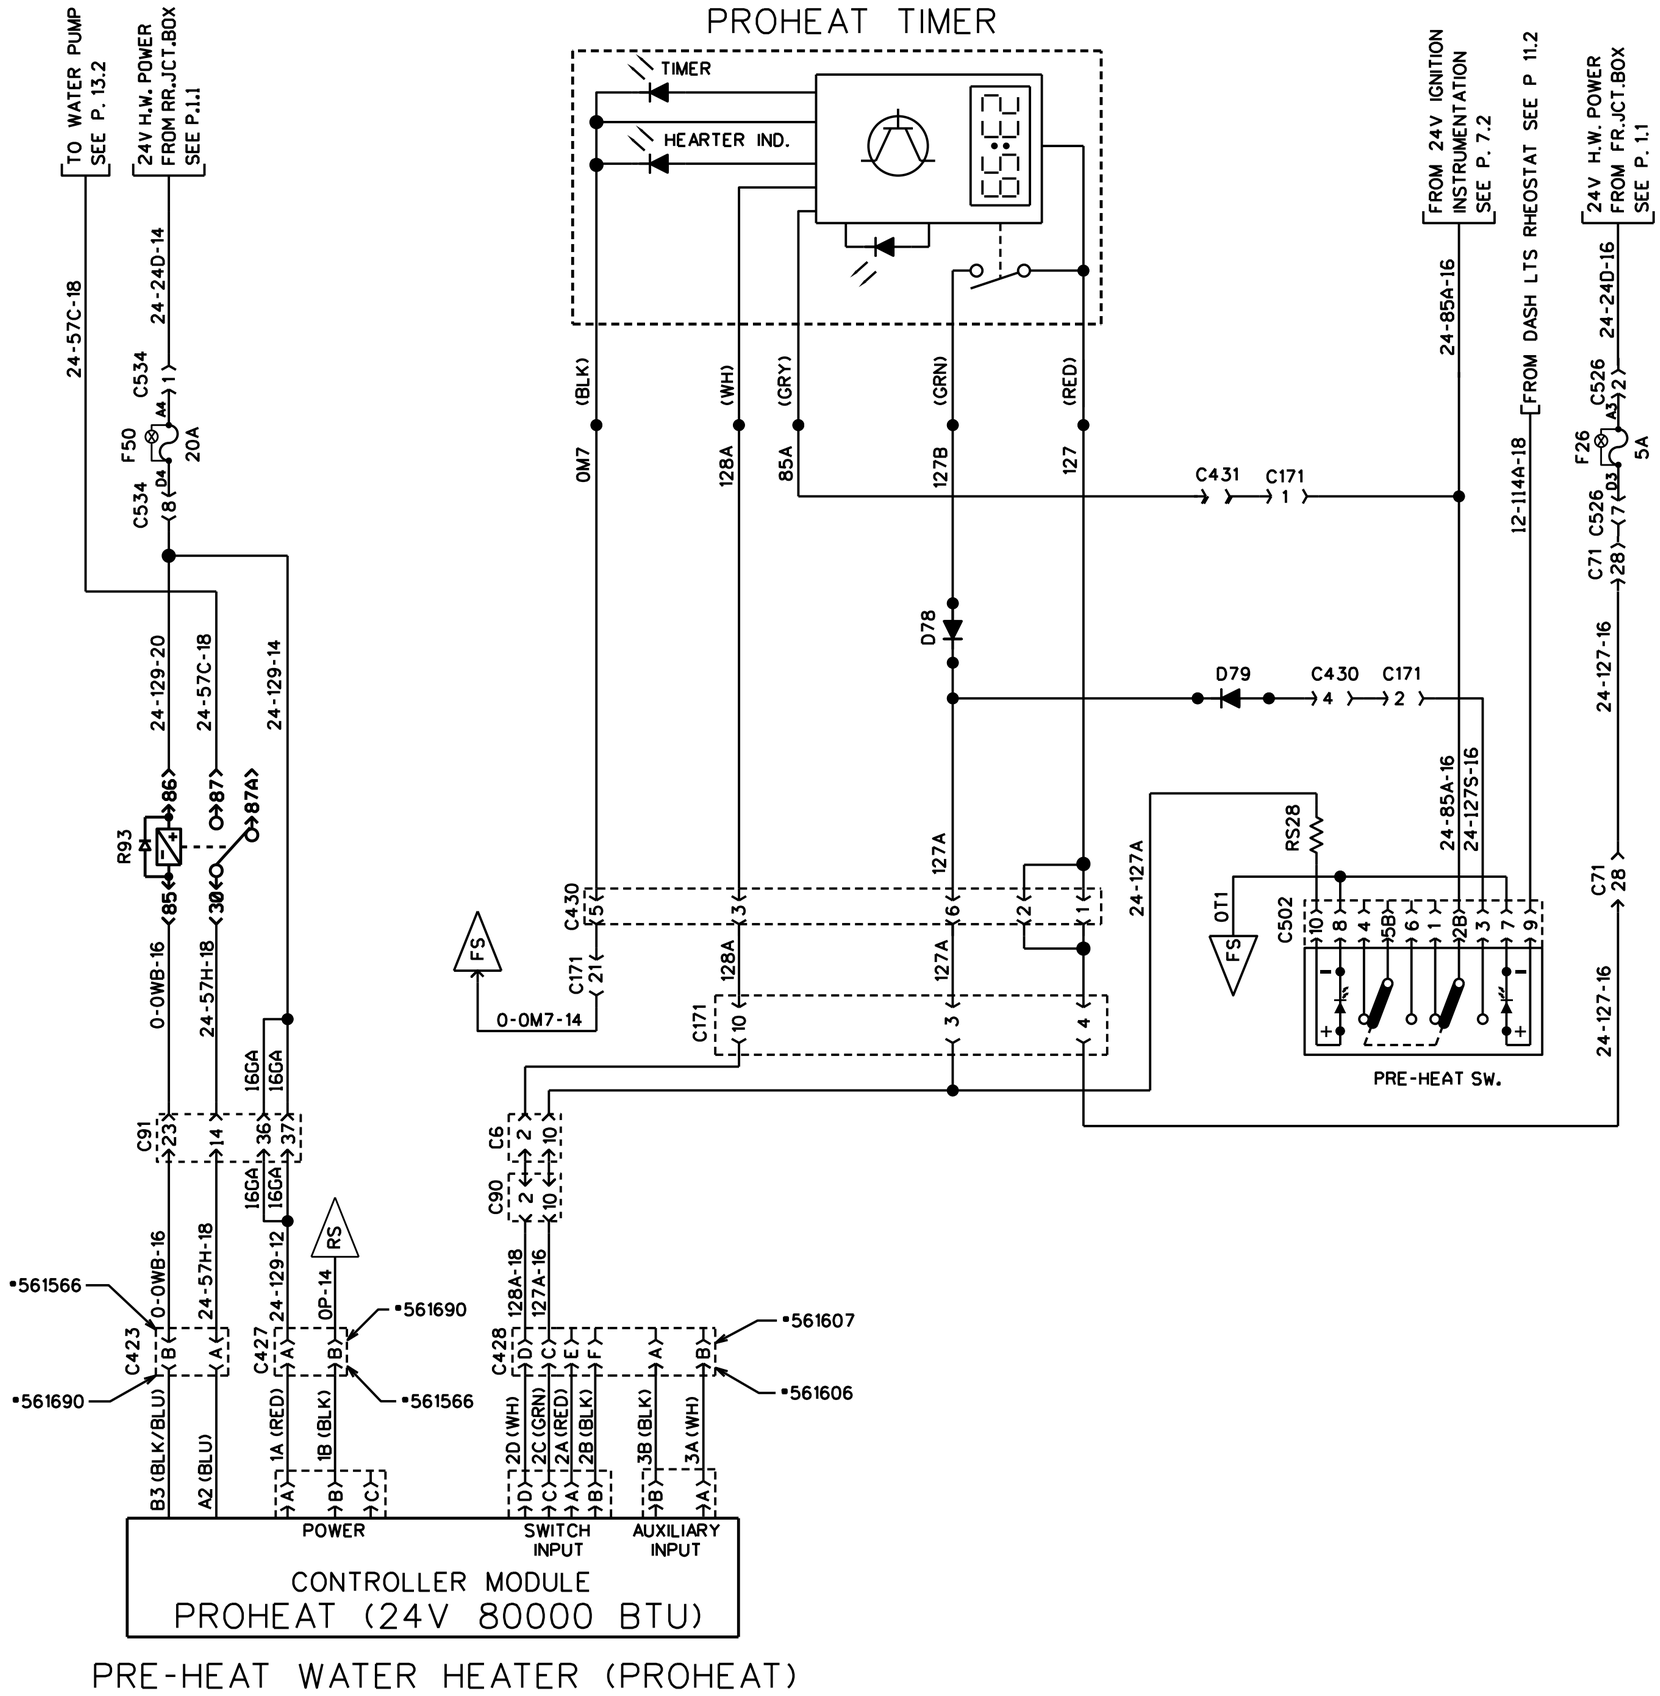


PRE-HEAT WATER HEATER (PROHEAT)

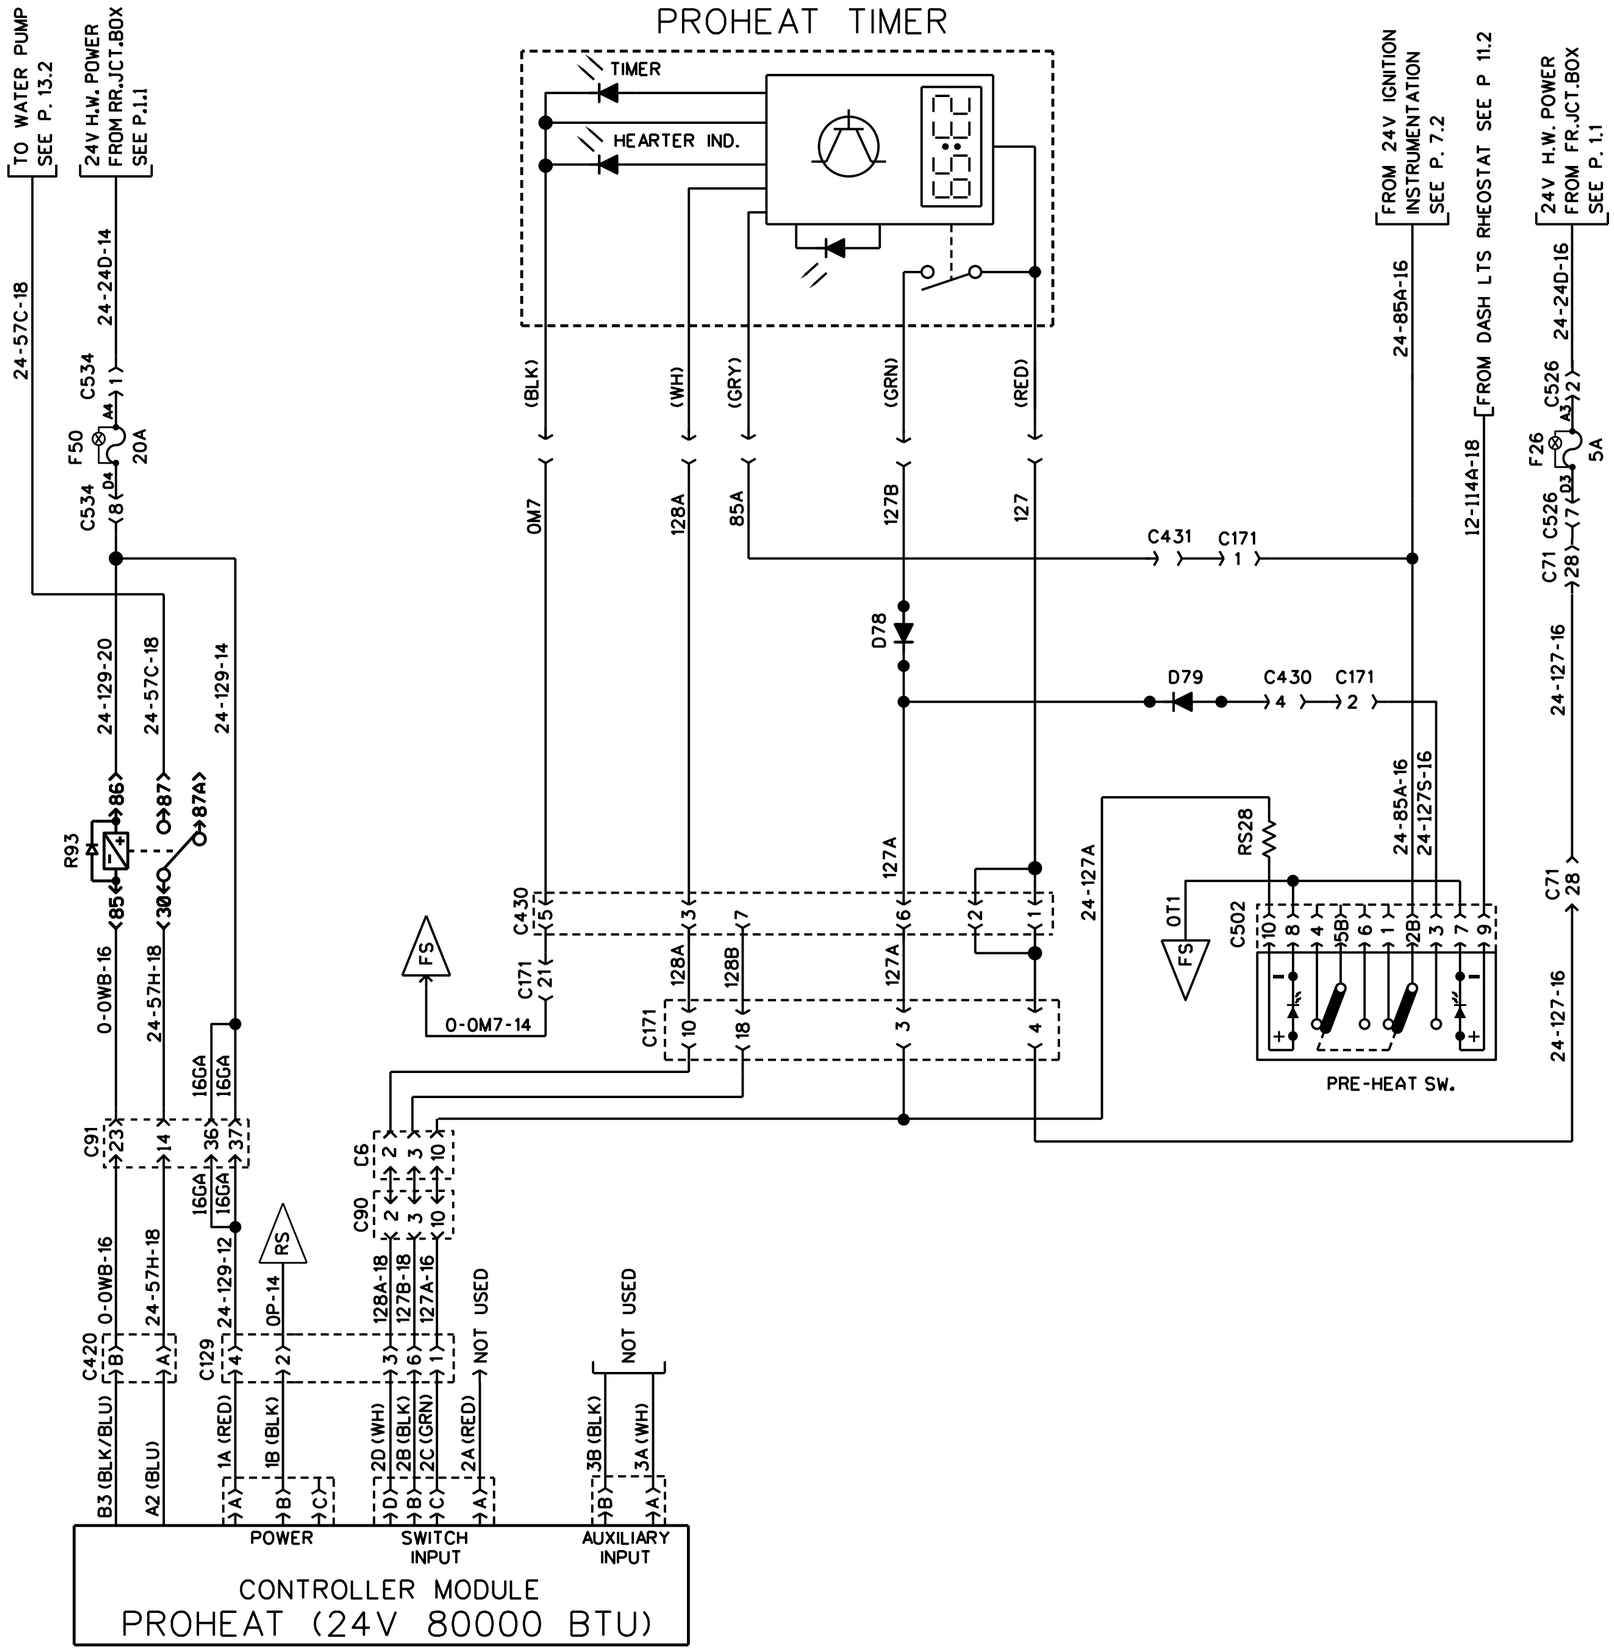


PRE-HEAT WATER HEATER (PROHEAT)

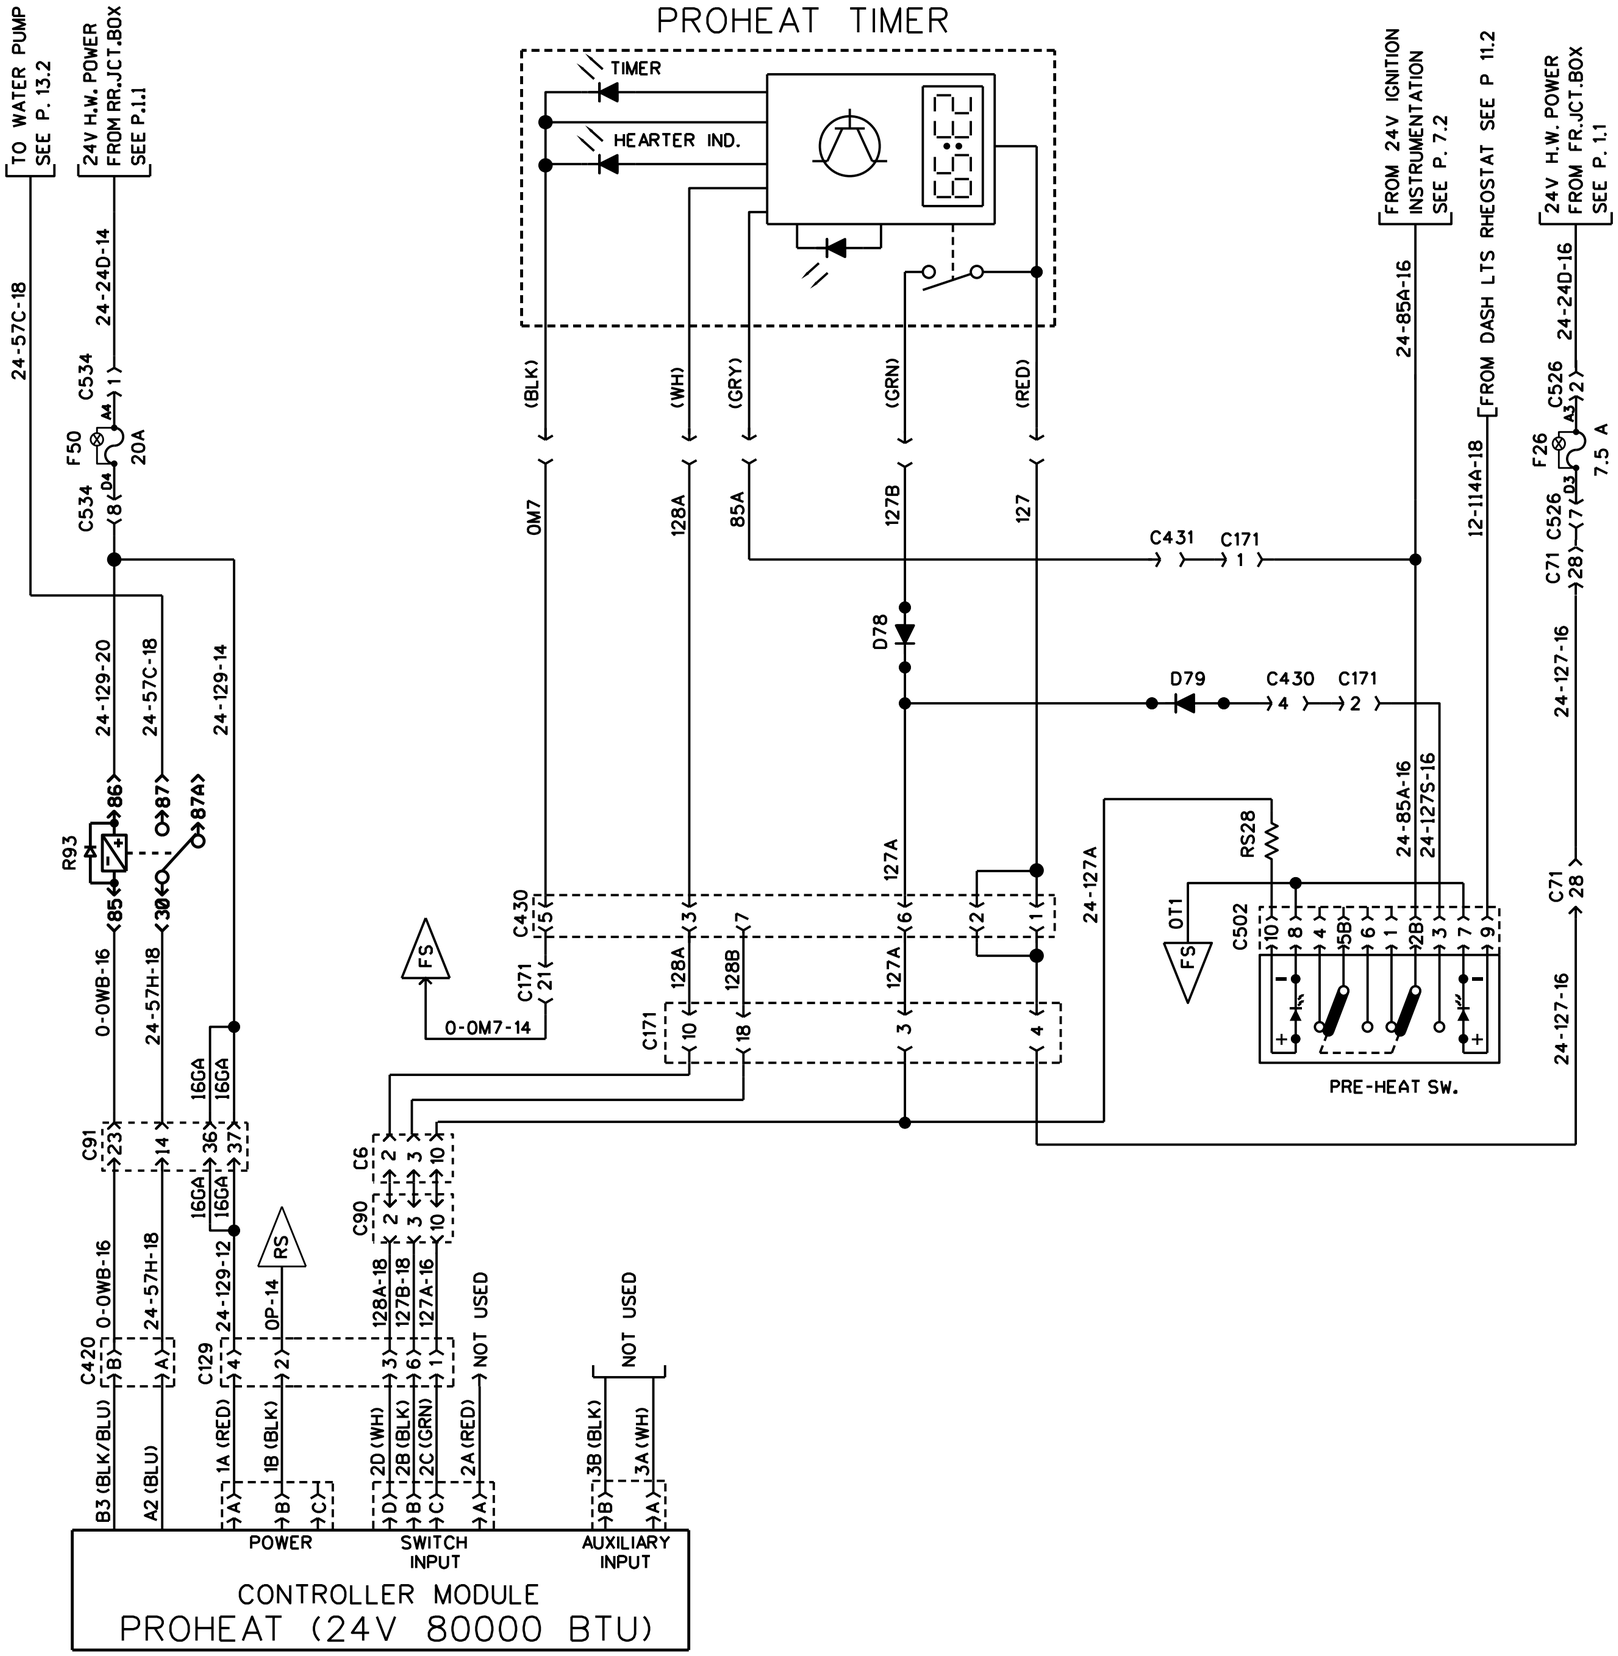


PRE-HEAT WATER HEATER (PROHEAT)

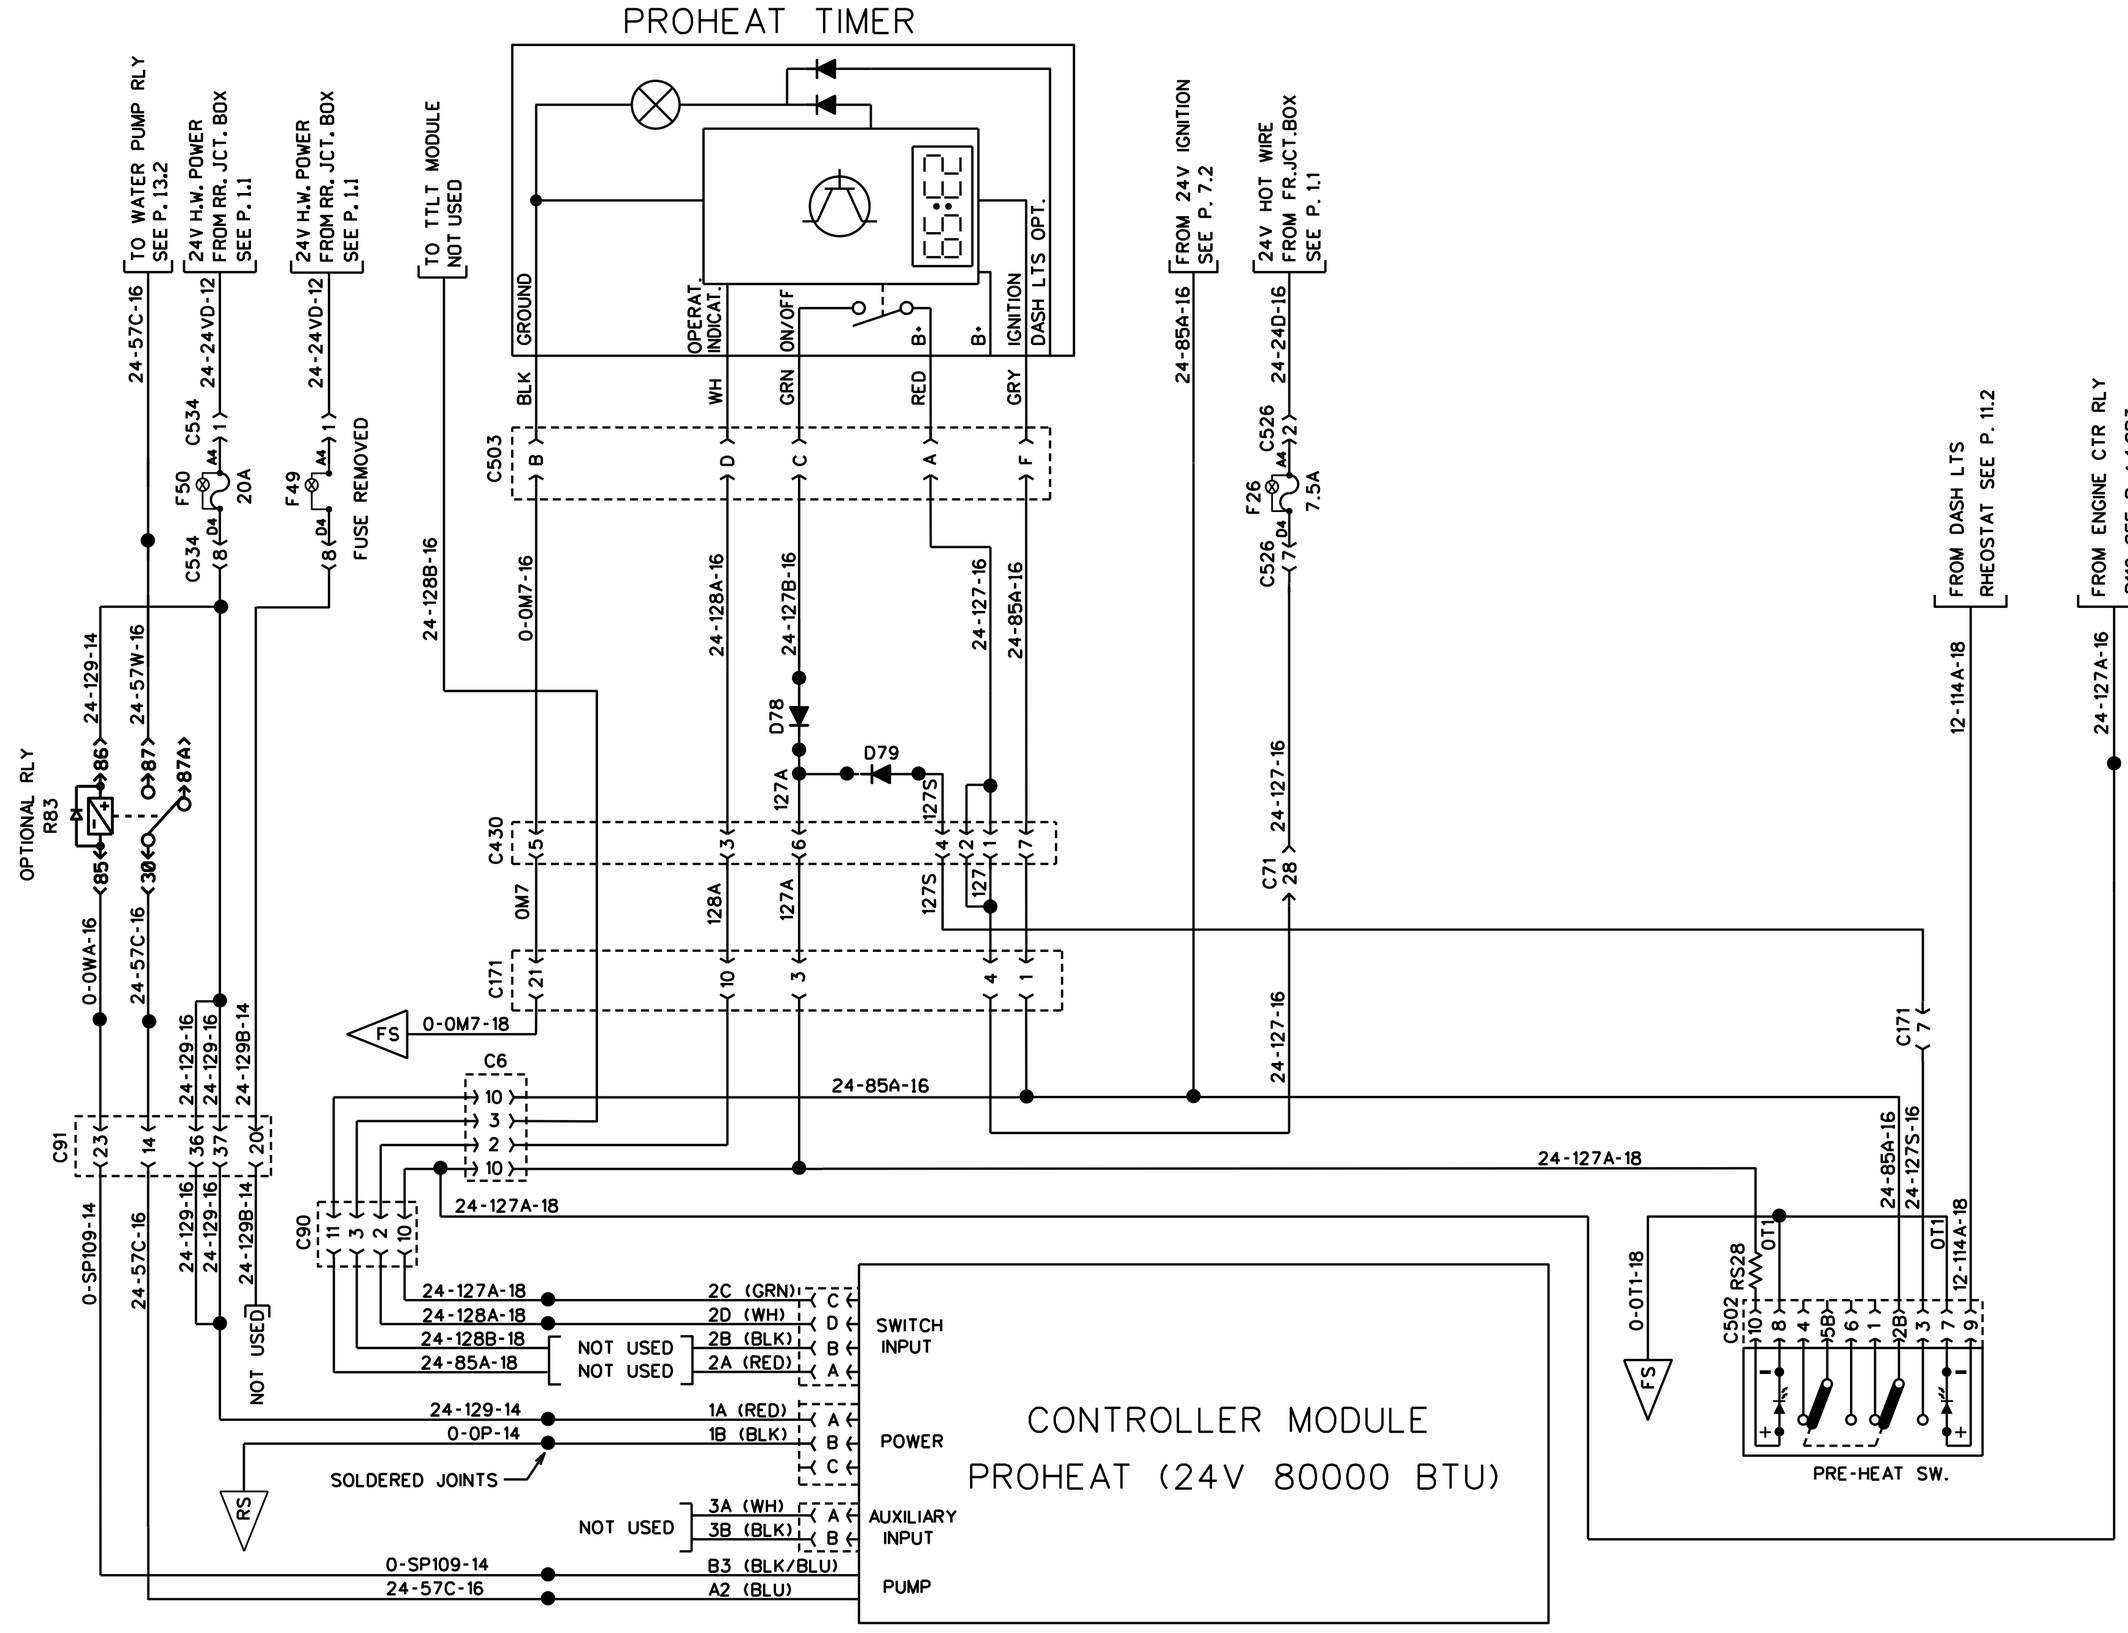


PRE-HEAT WATER HEATER PROHEAT AUTOMATICALLY ON W/BATTERY CHARGER

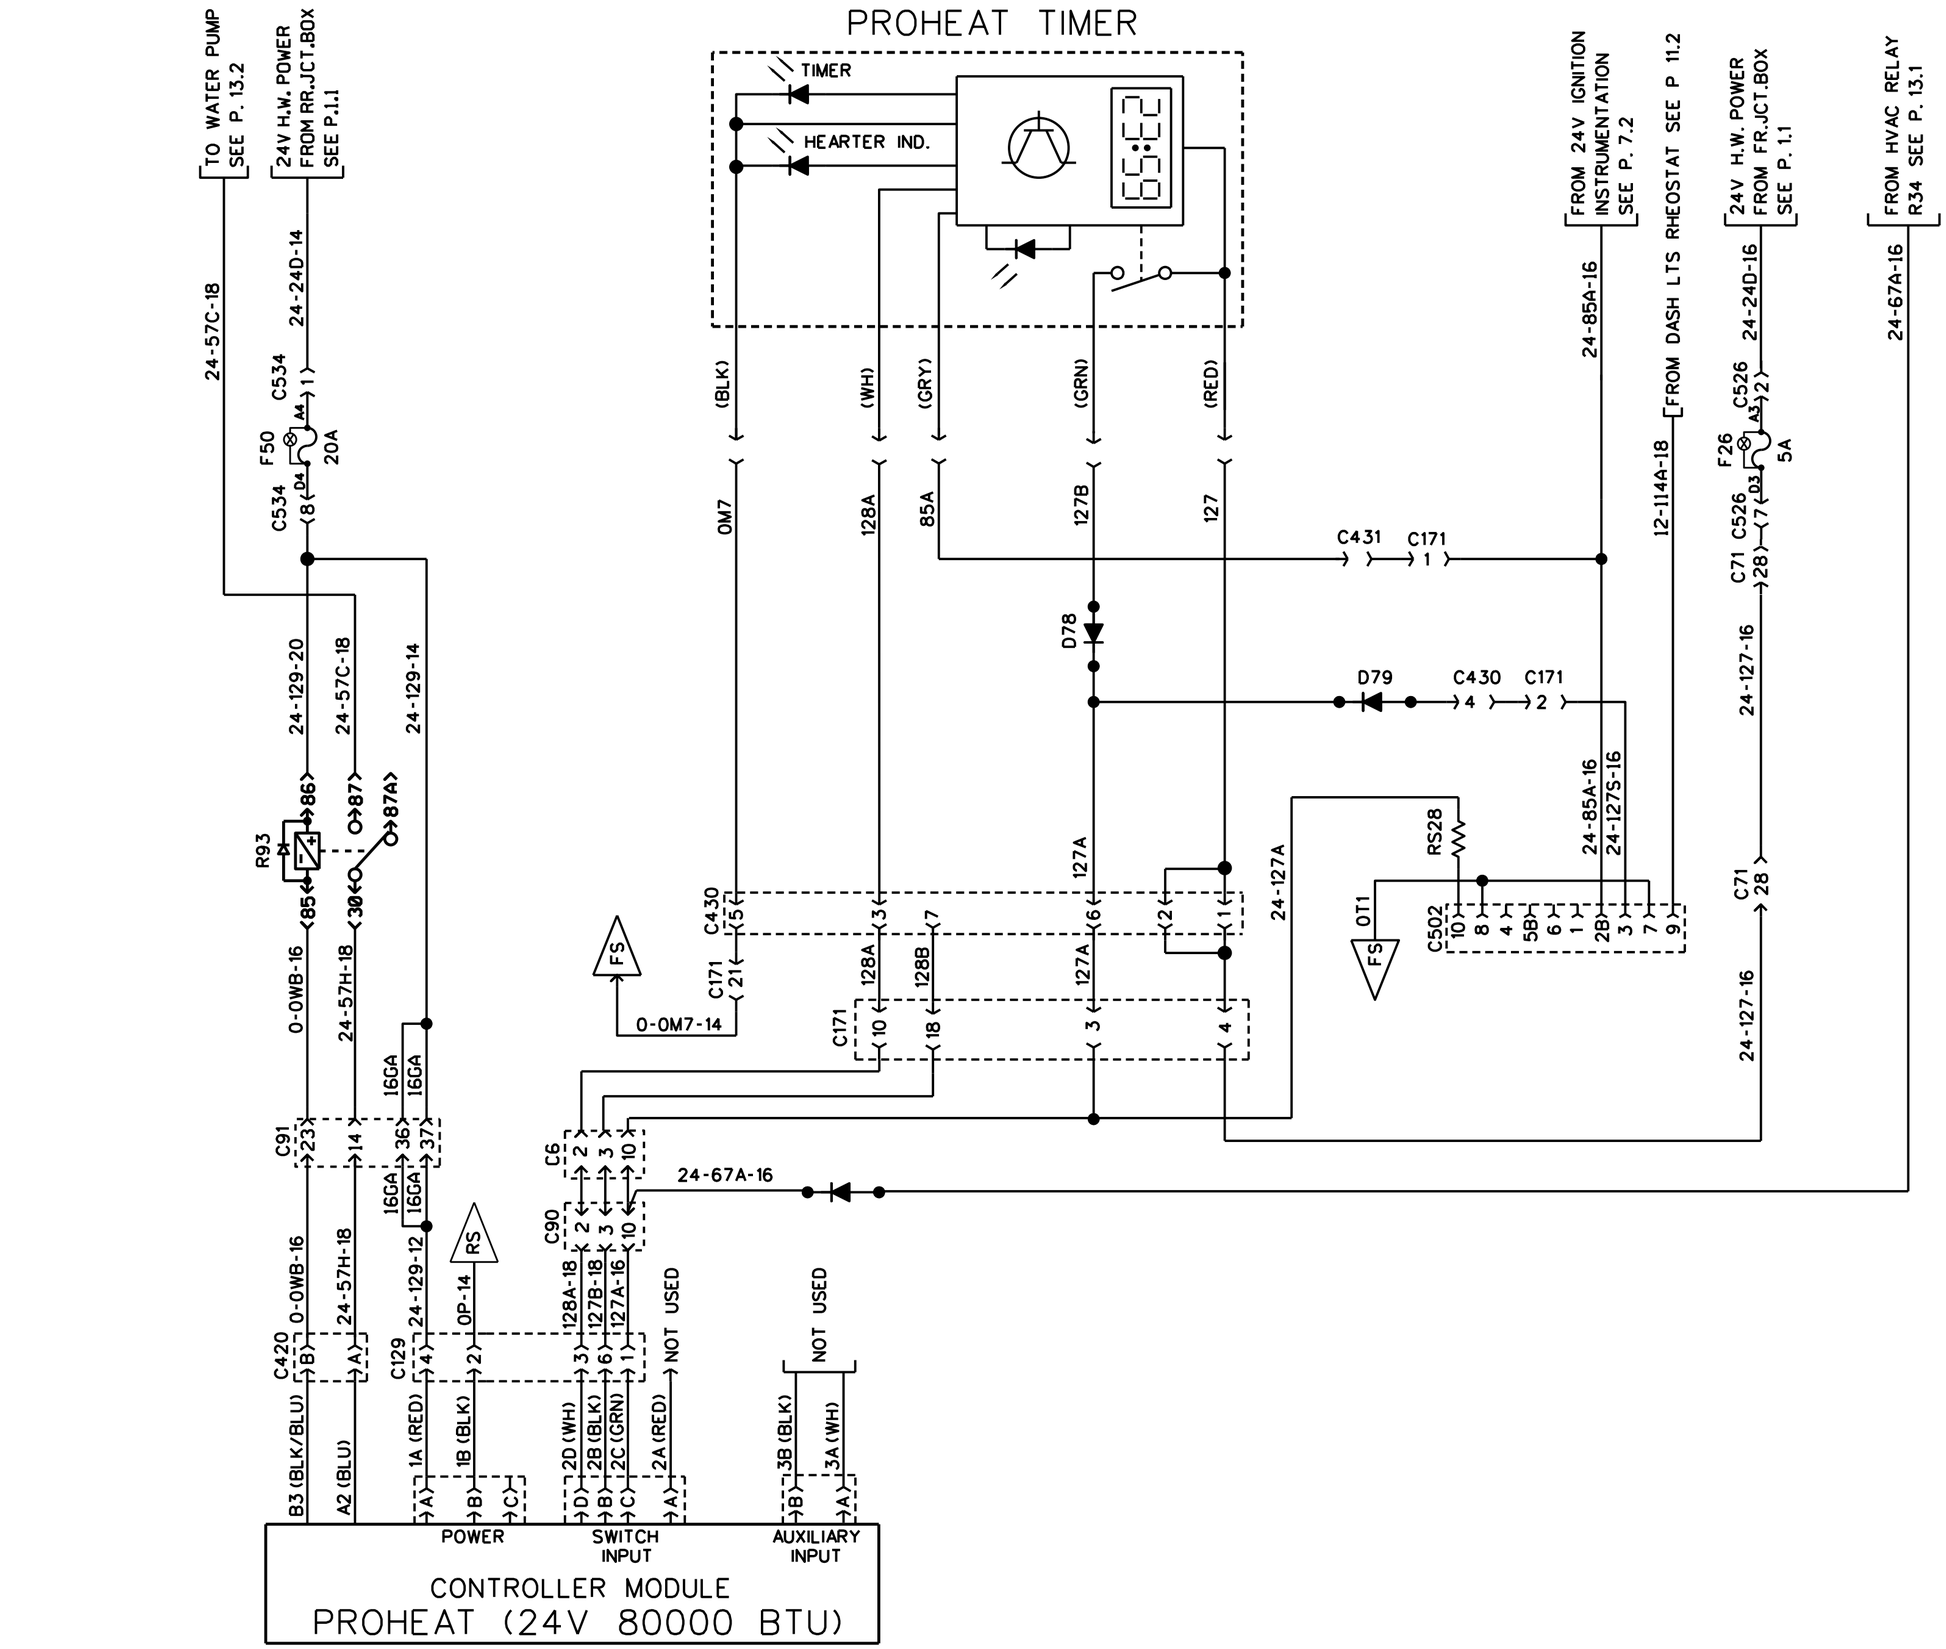


PRE-HEAT WATER HEATER (PROHEAT AUTOMATIC ON A/C)

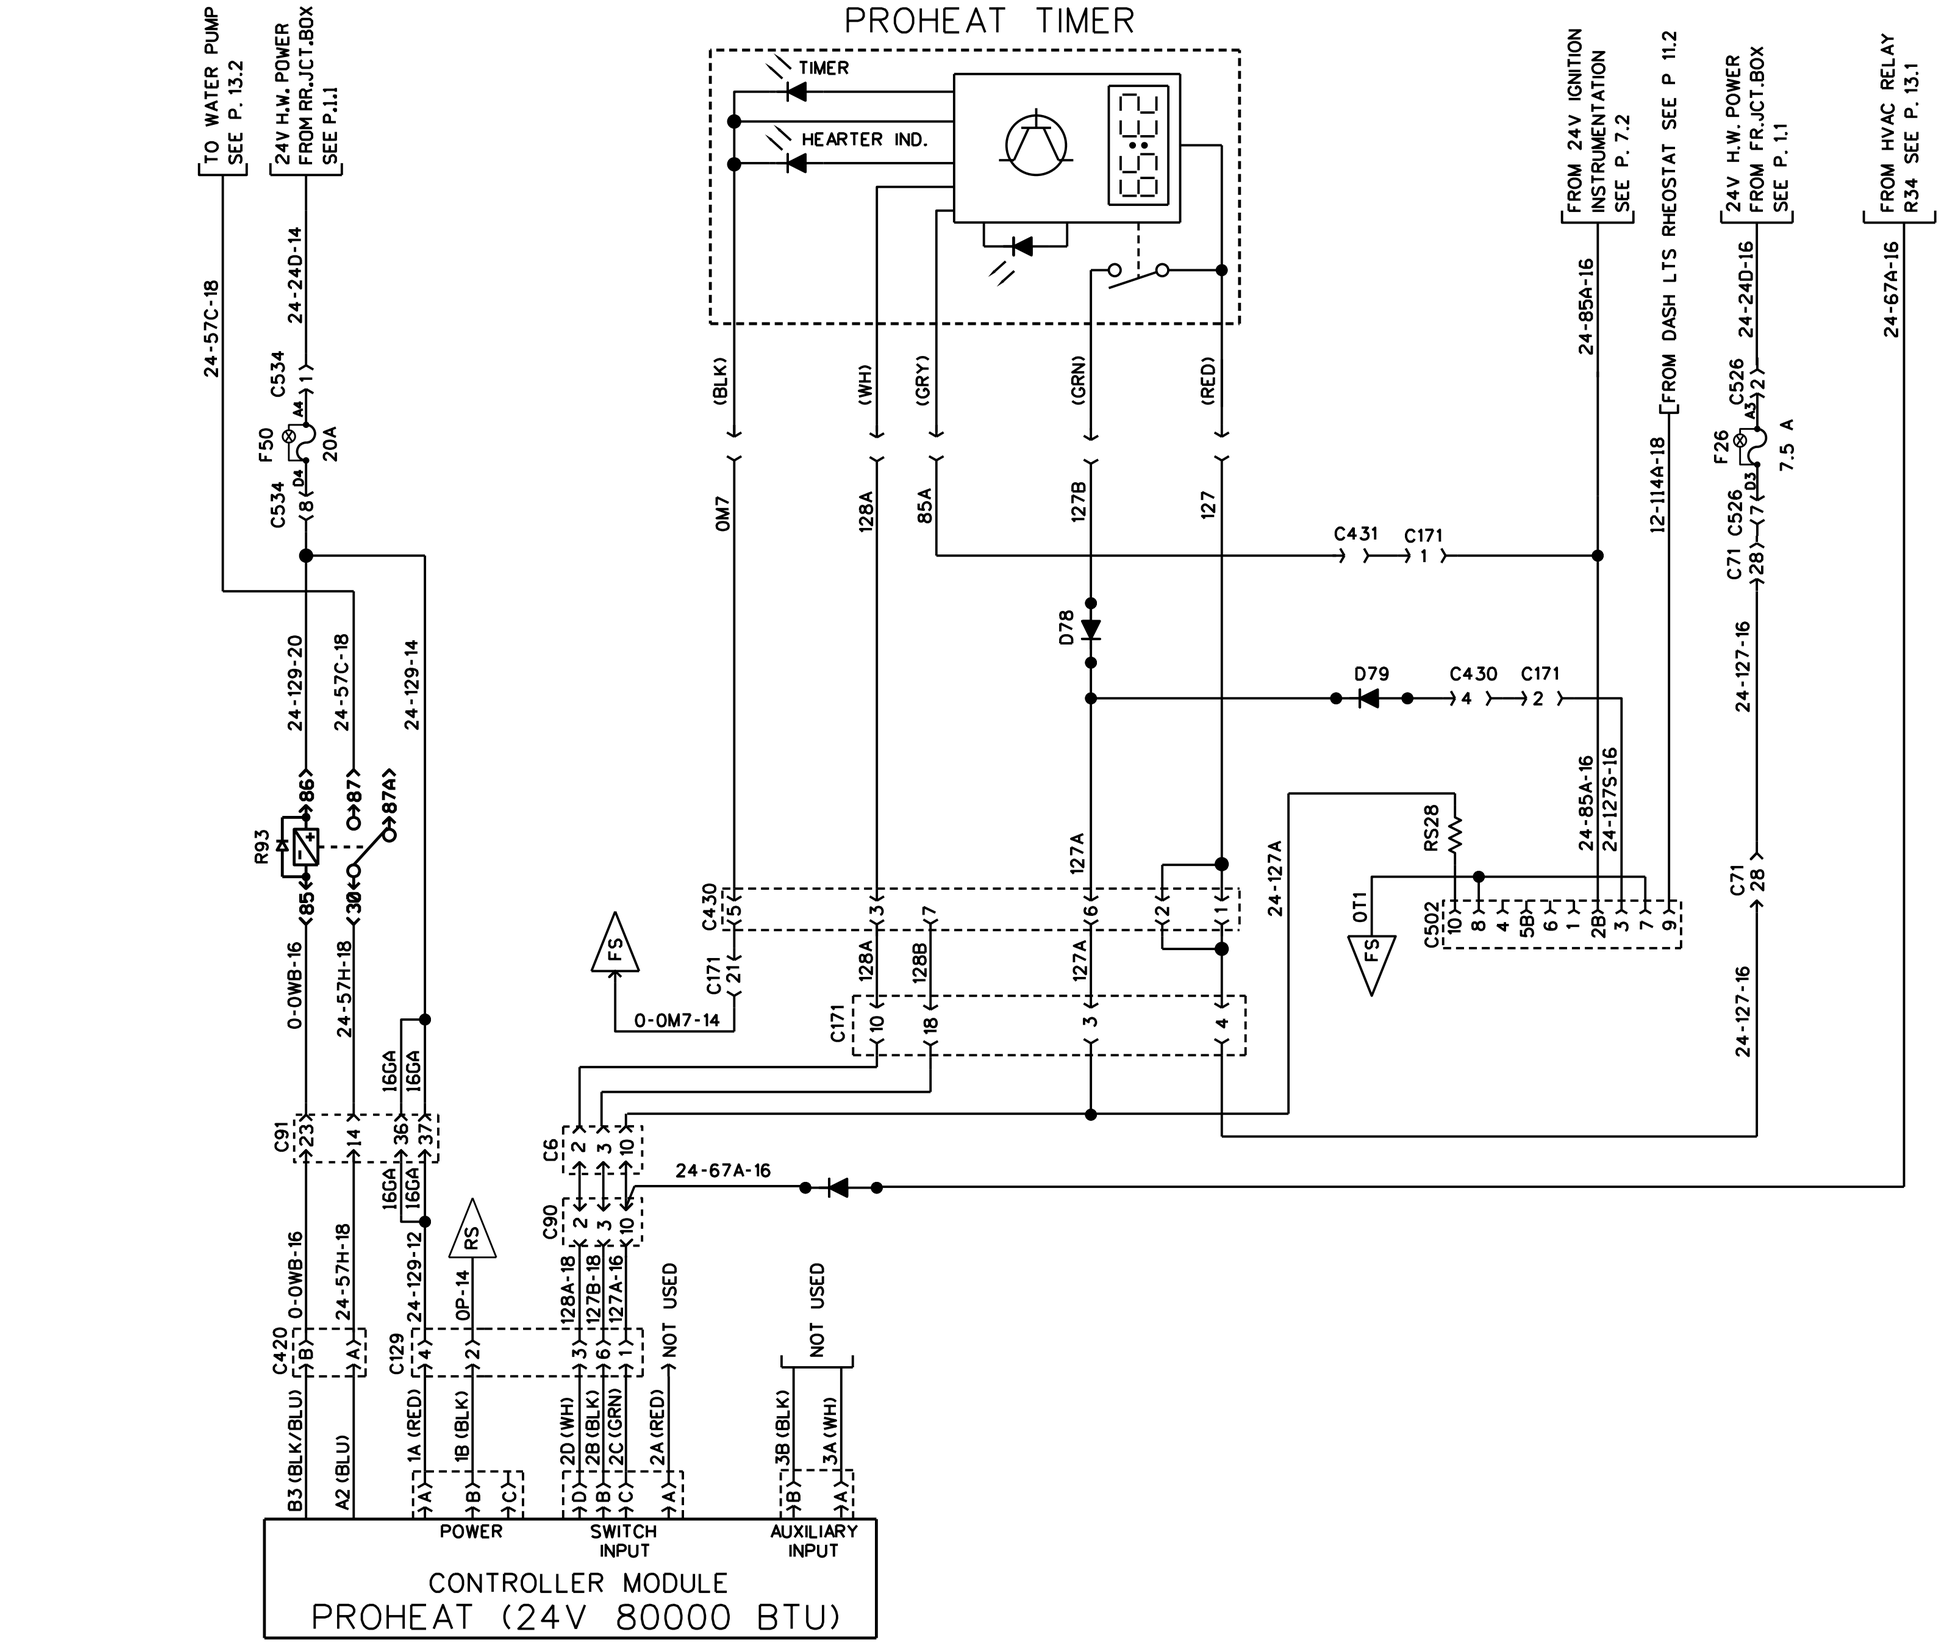


PRE-HEAT WATER HEATER (PROHEAT AUTOMATIC ON A/C)

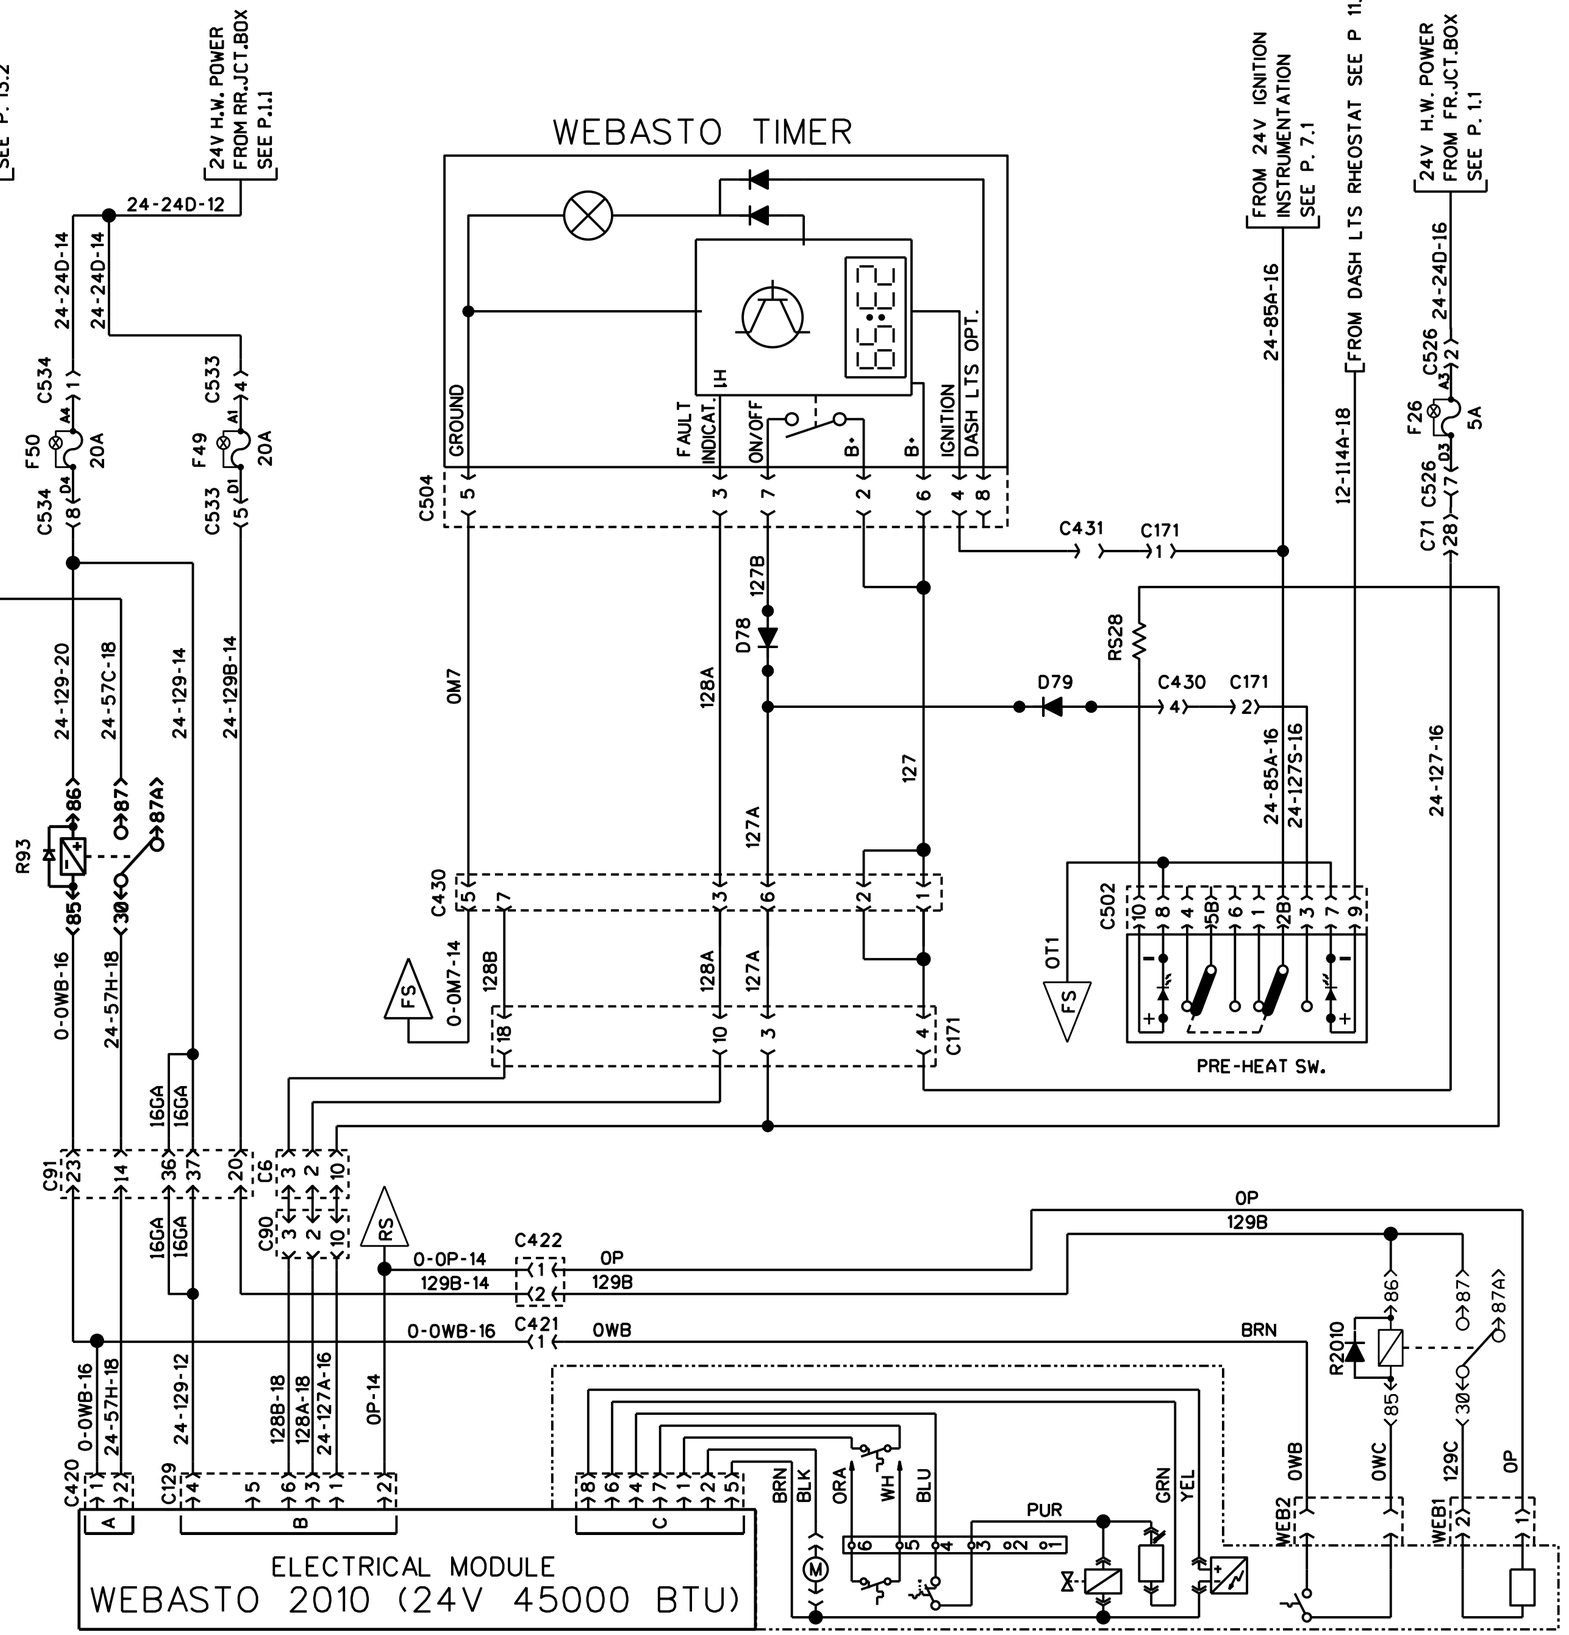


PRE-HEAT WATER HEATER (WEBASTO 2010)

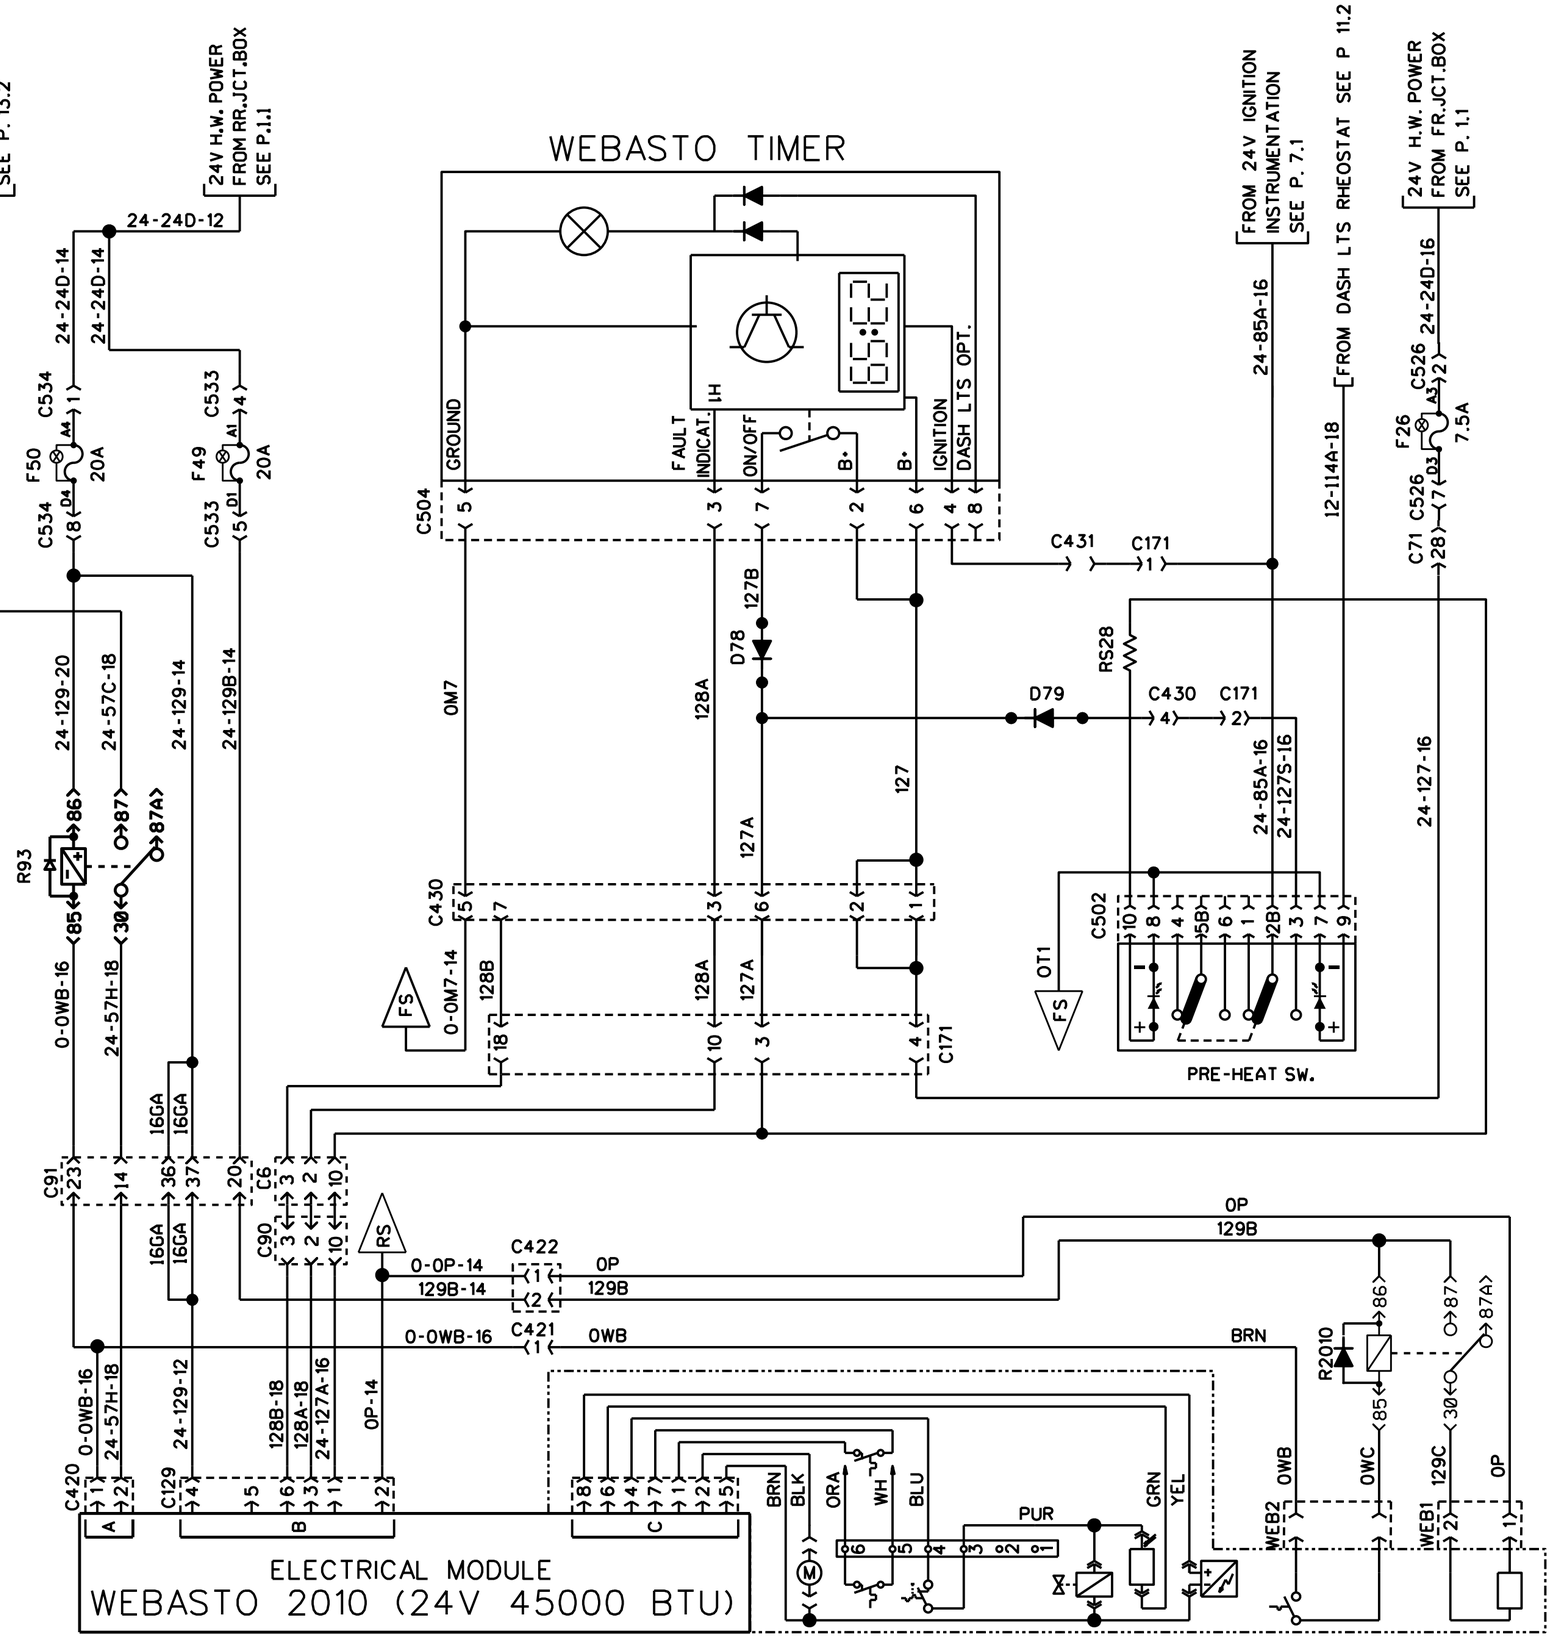


PRE-HEAT WATER HEATER (WEBASTO 2010)

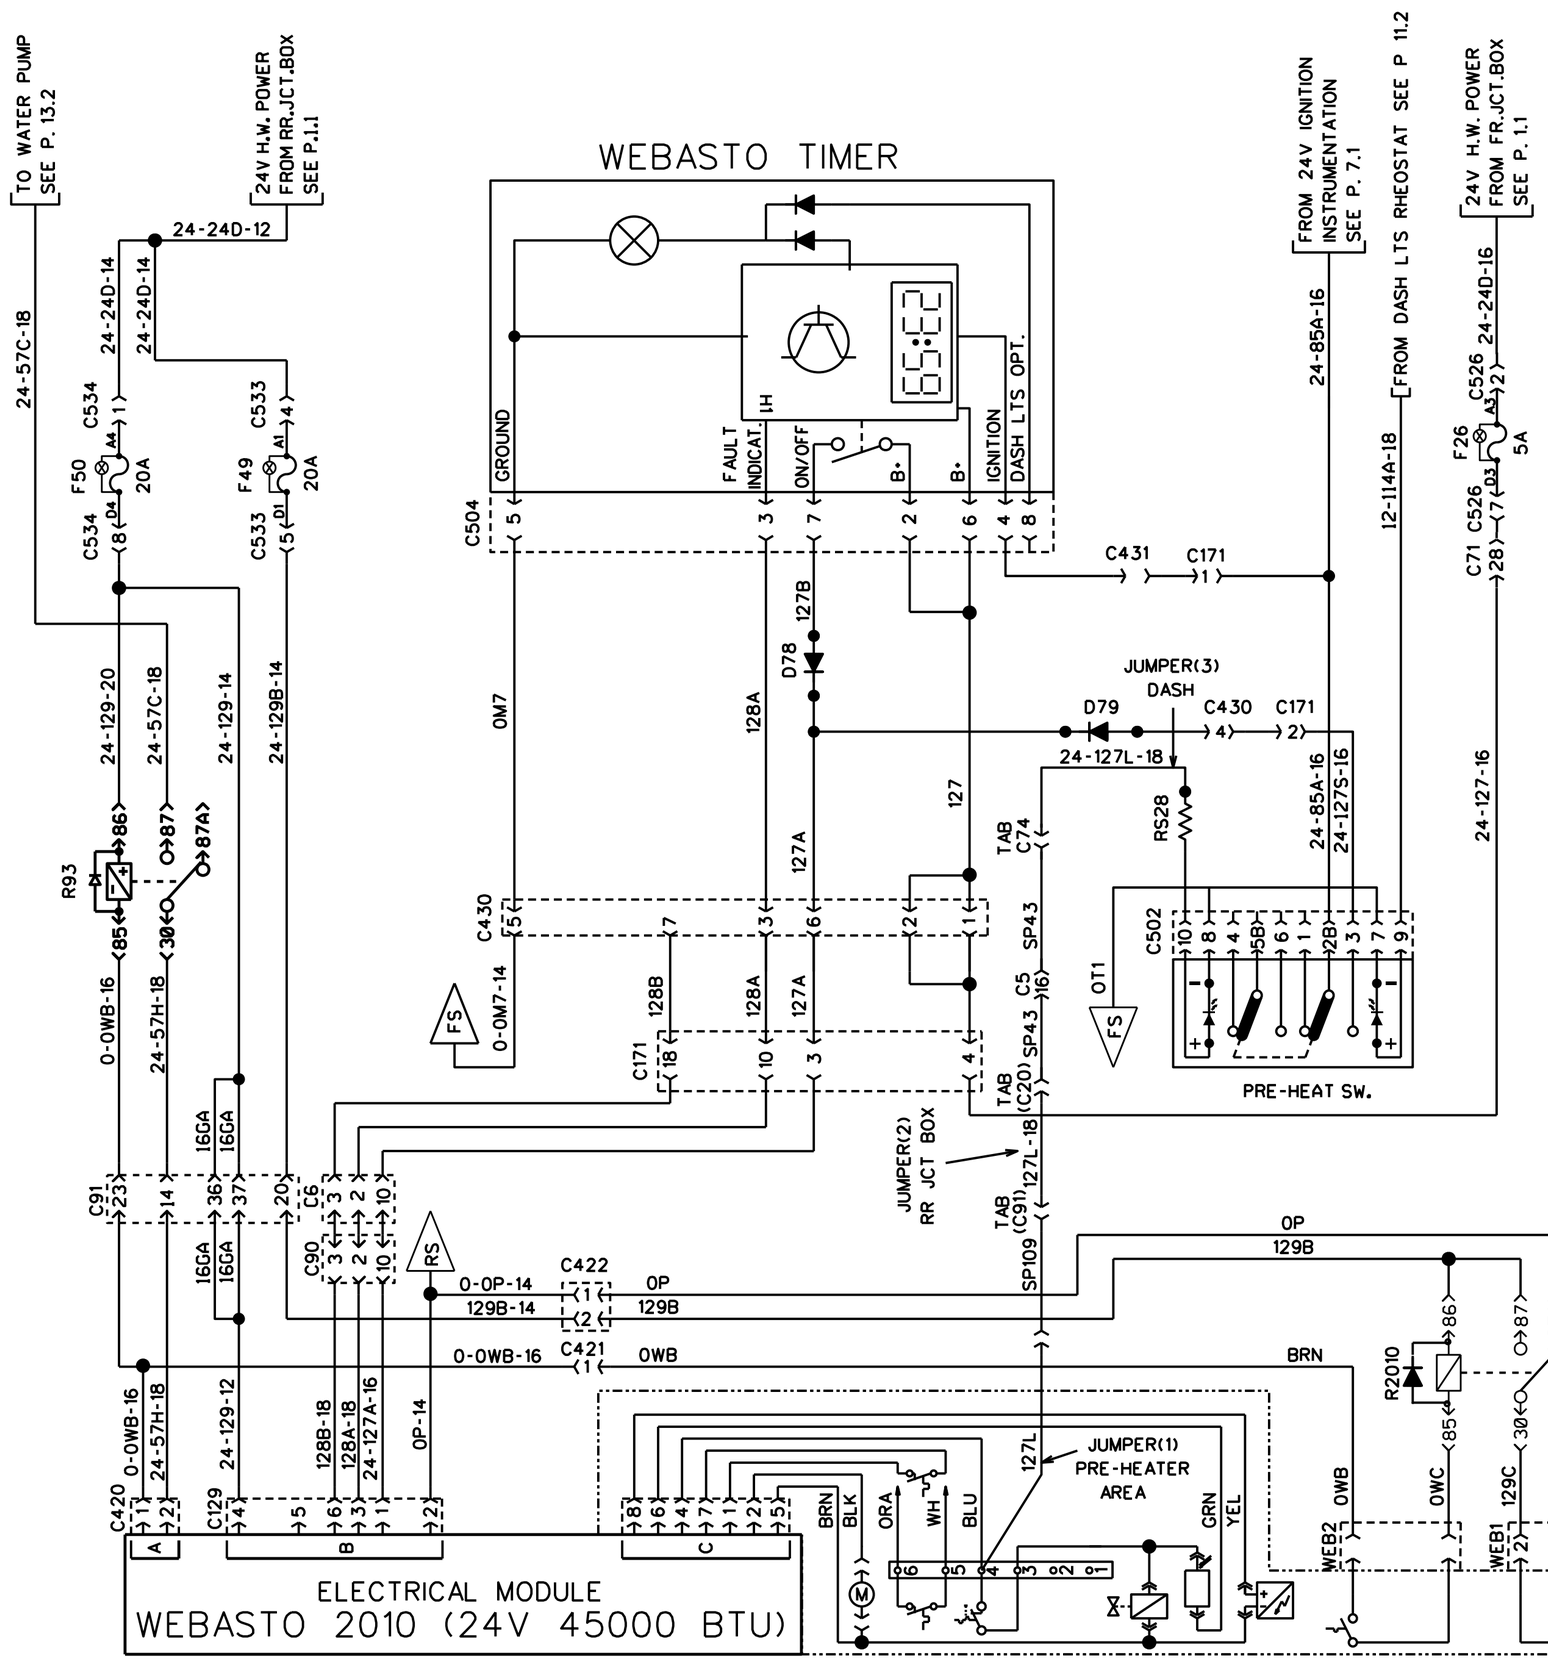


PRE-HEAT WATER HEATER (WEBASTO 2010)

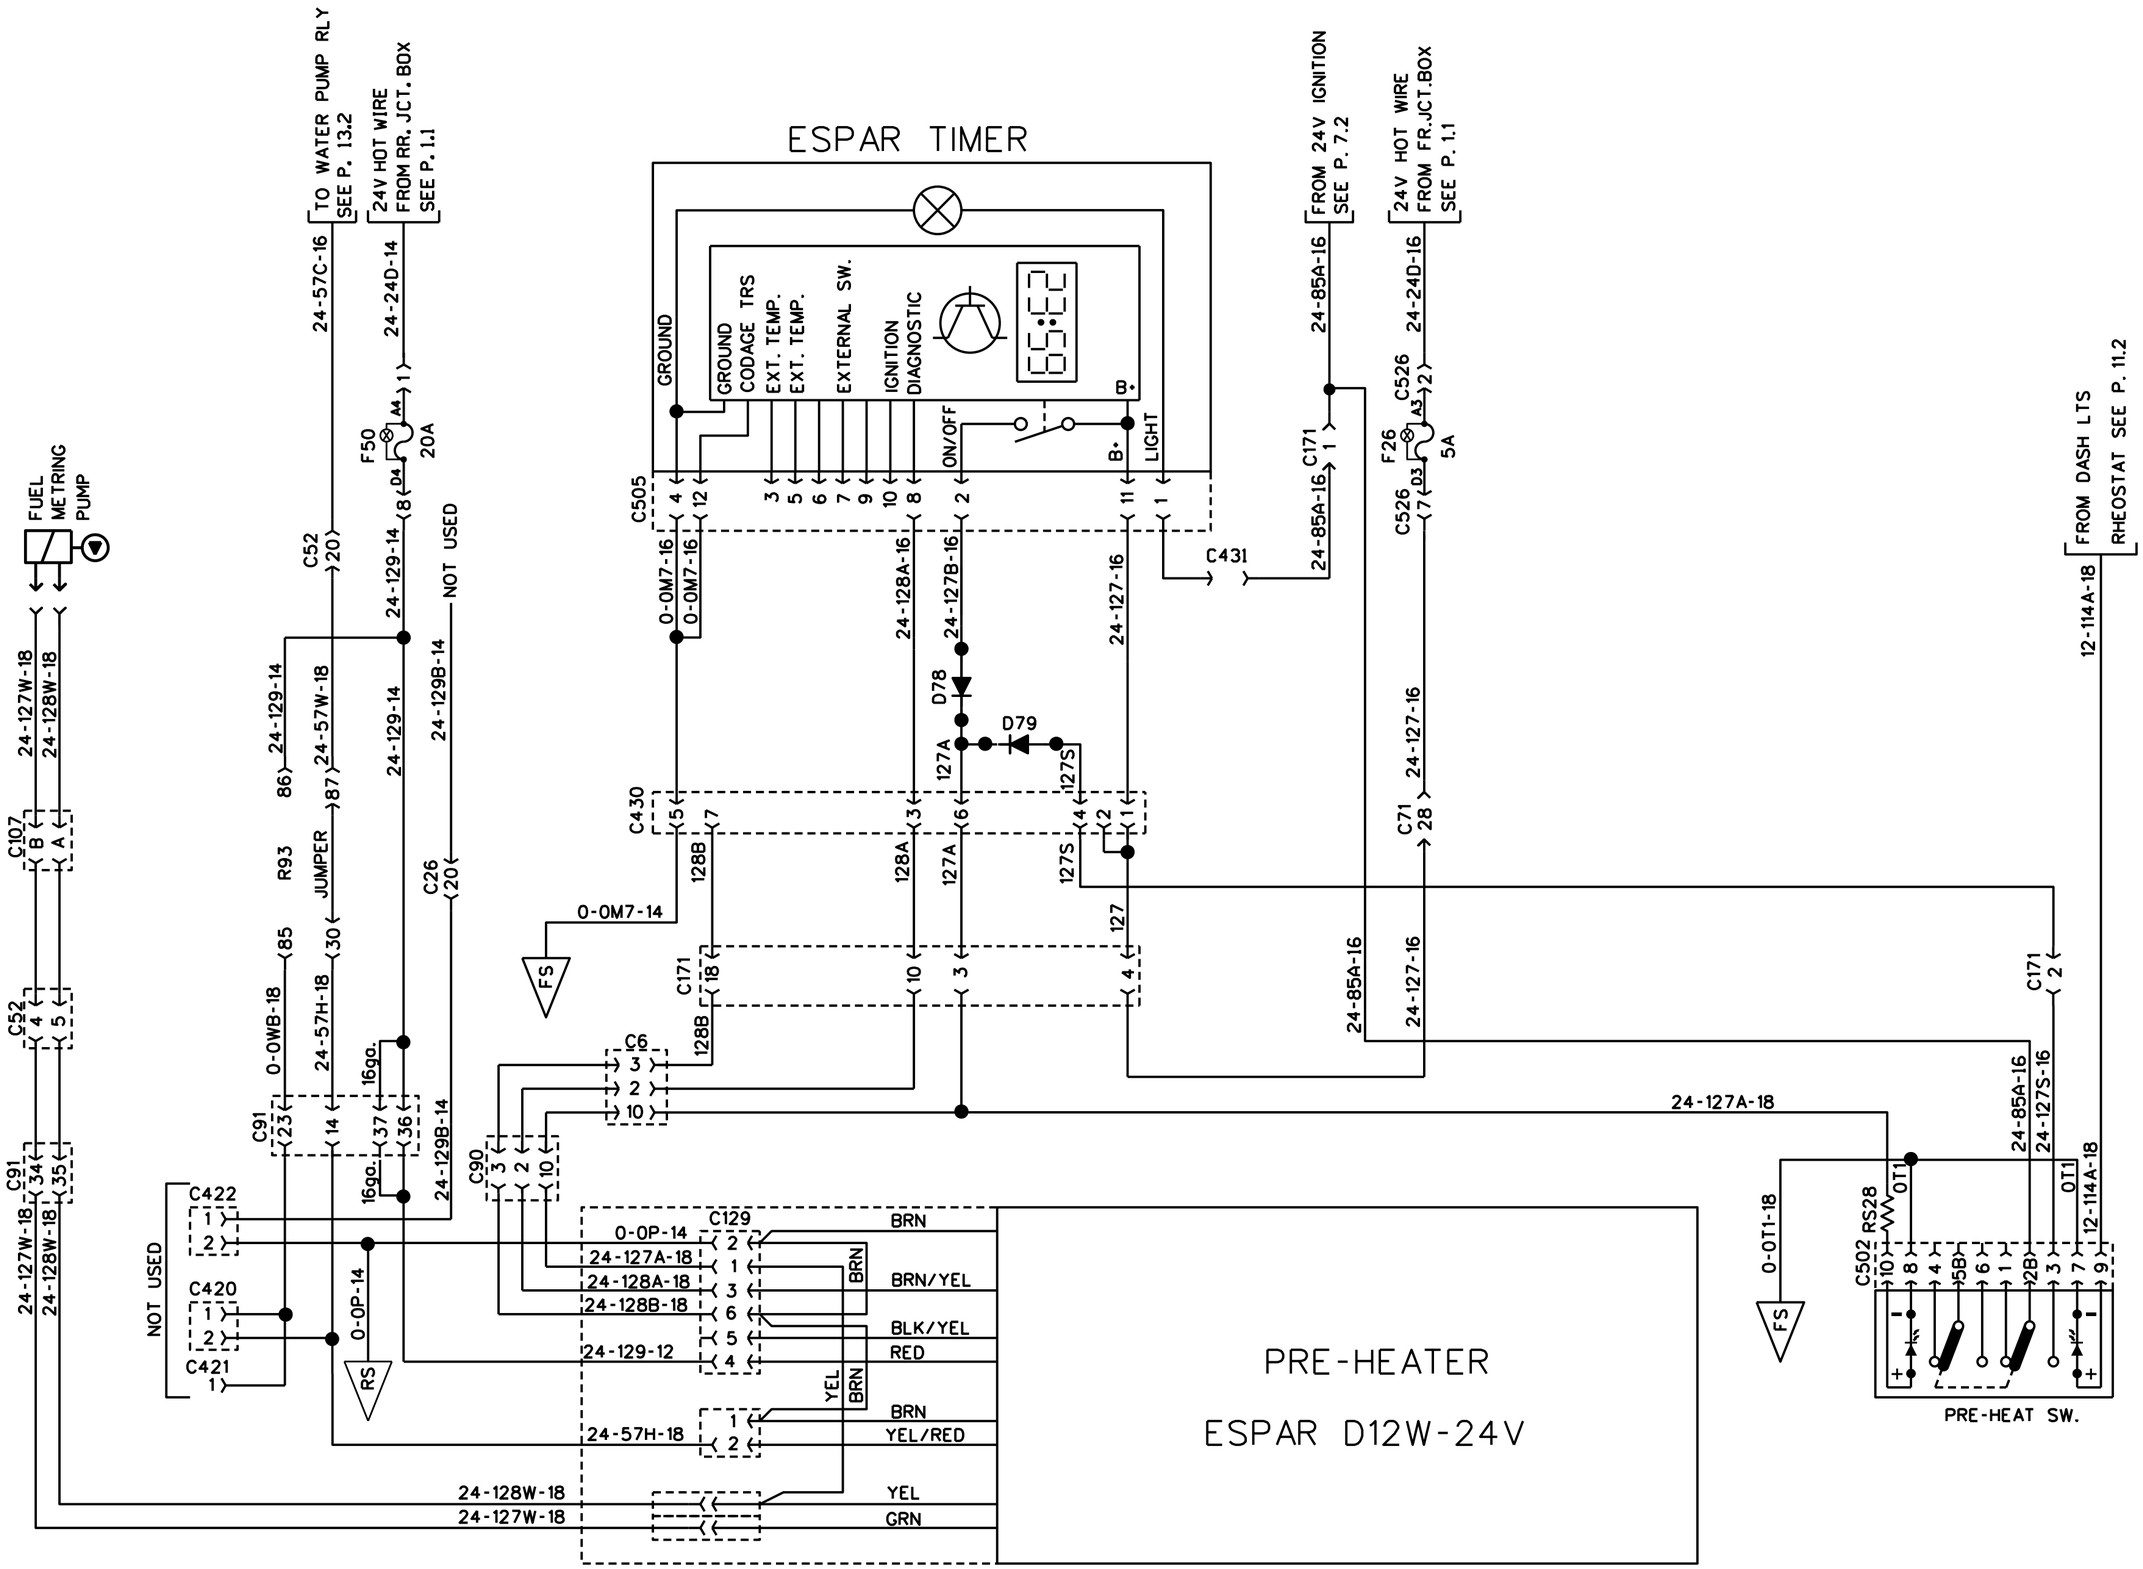


PRE-HEAT ESPAR D12W-24V (41000 BTU)

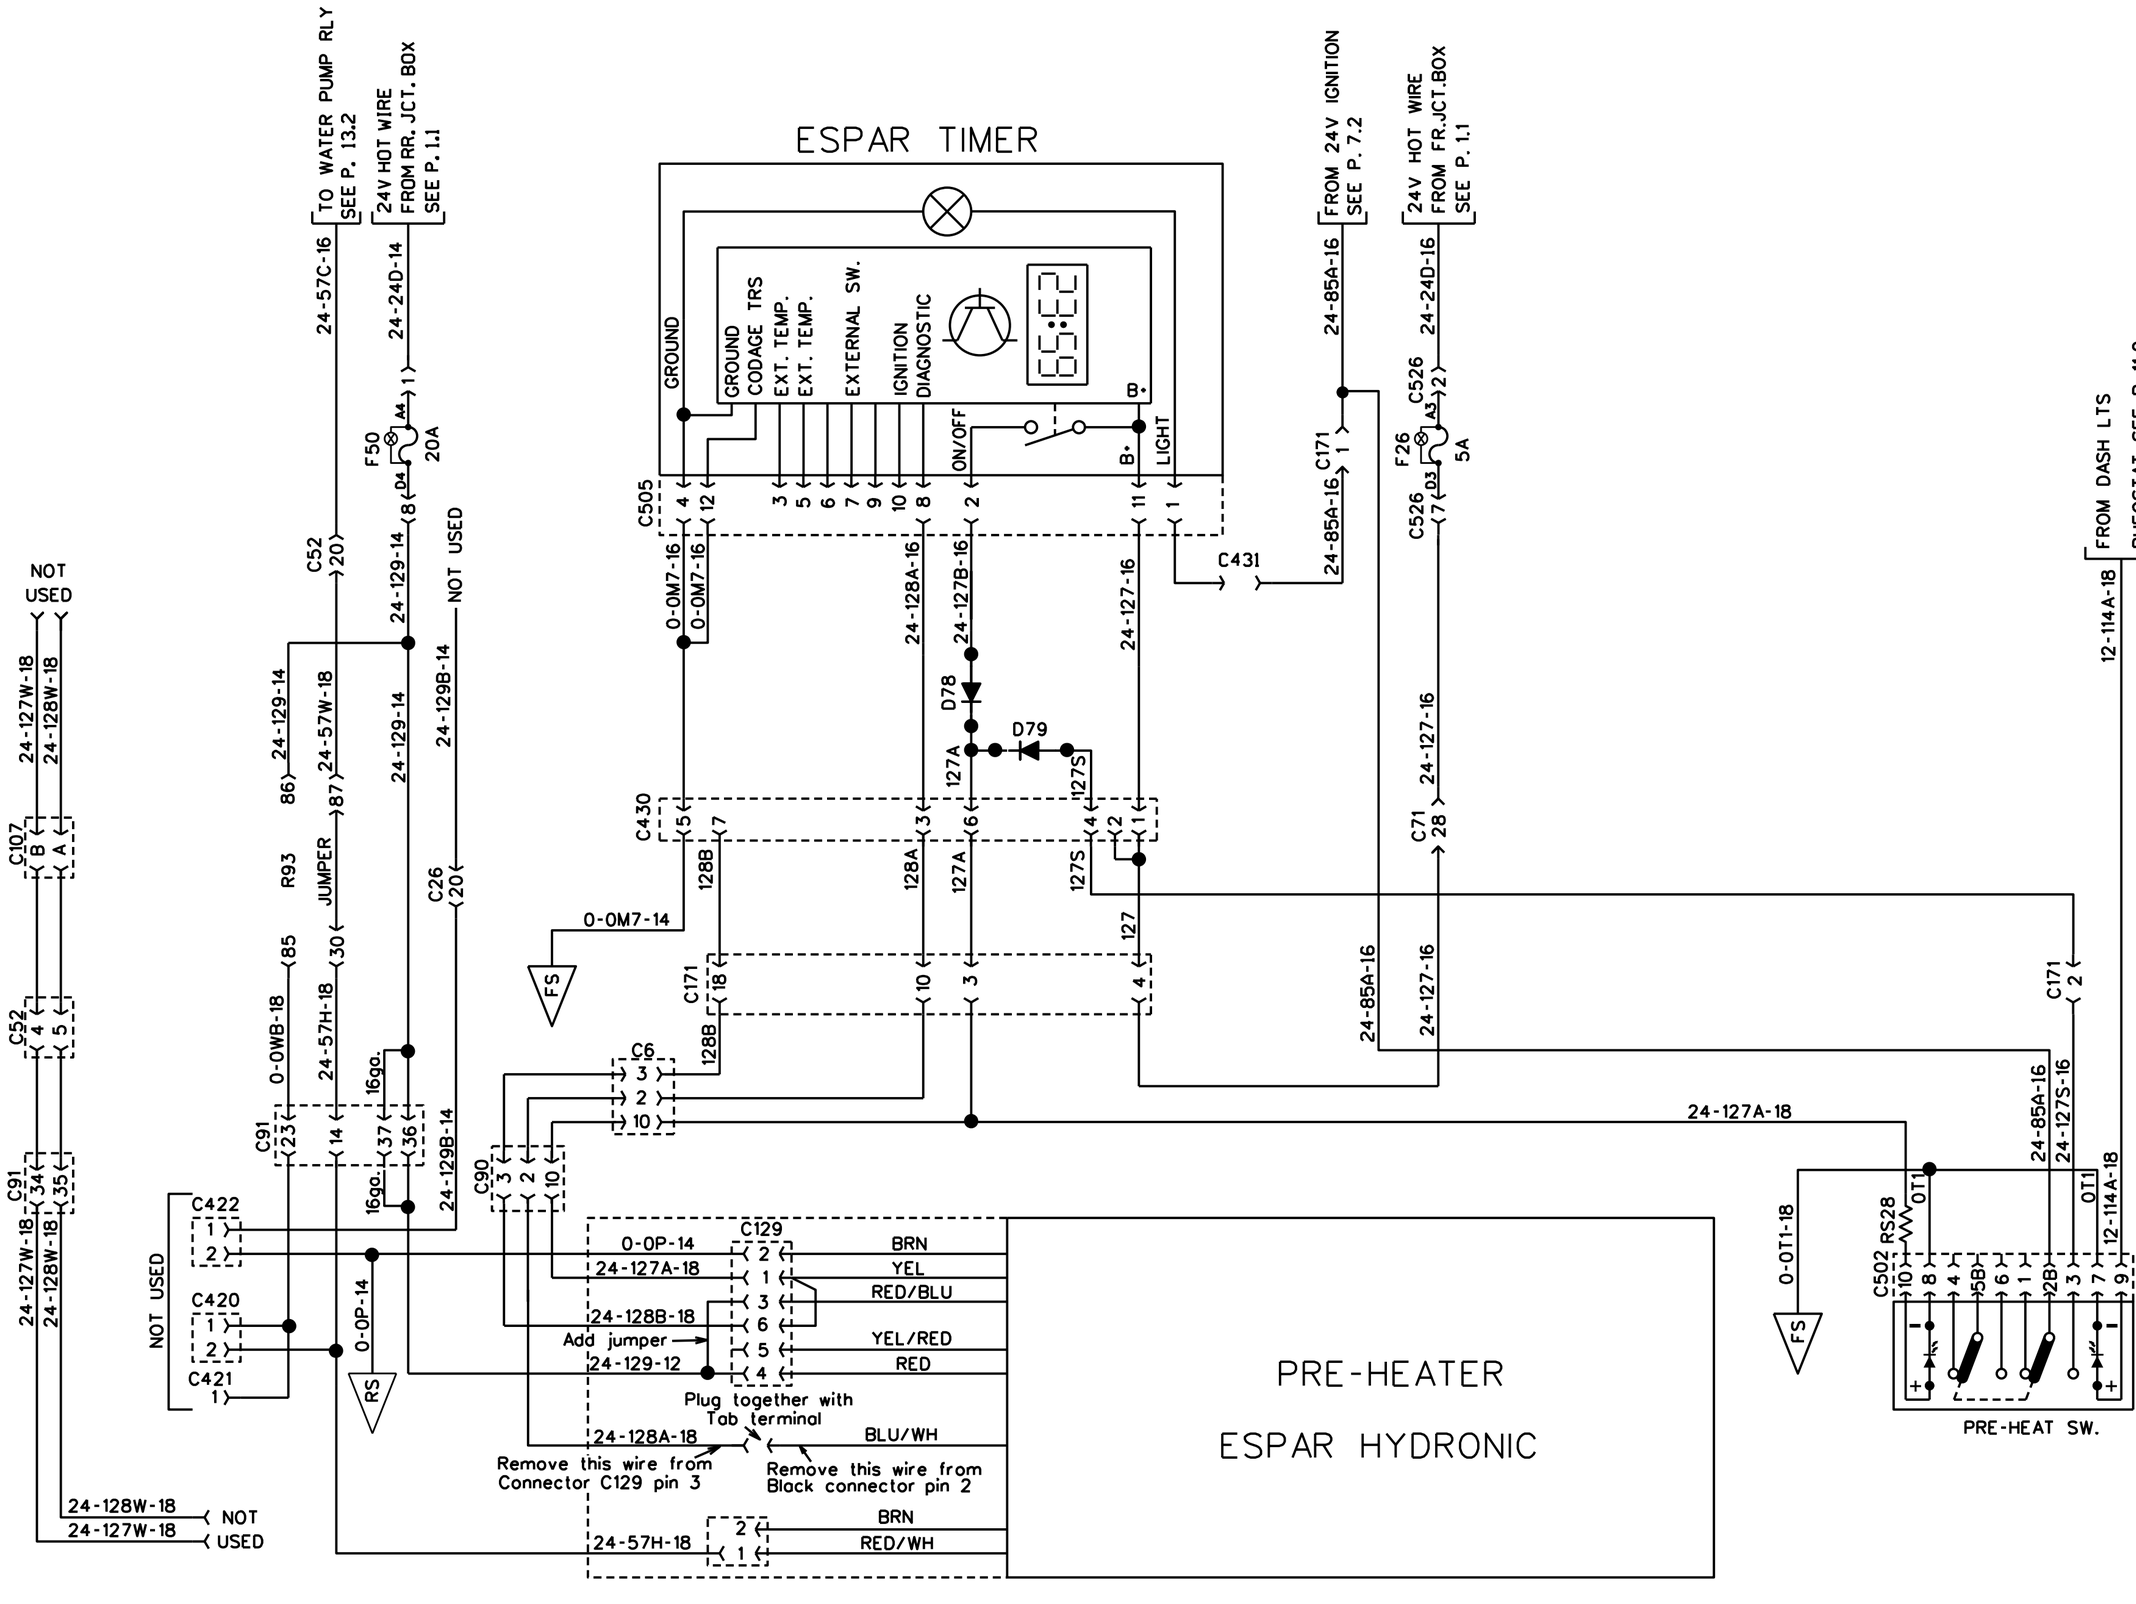


PRE-HEAT ESPAR HYDRONIC (103000 BTU)

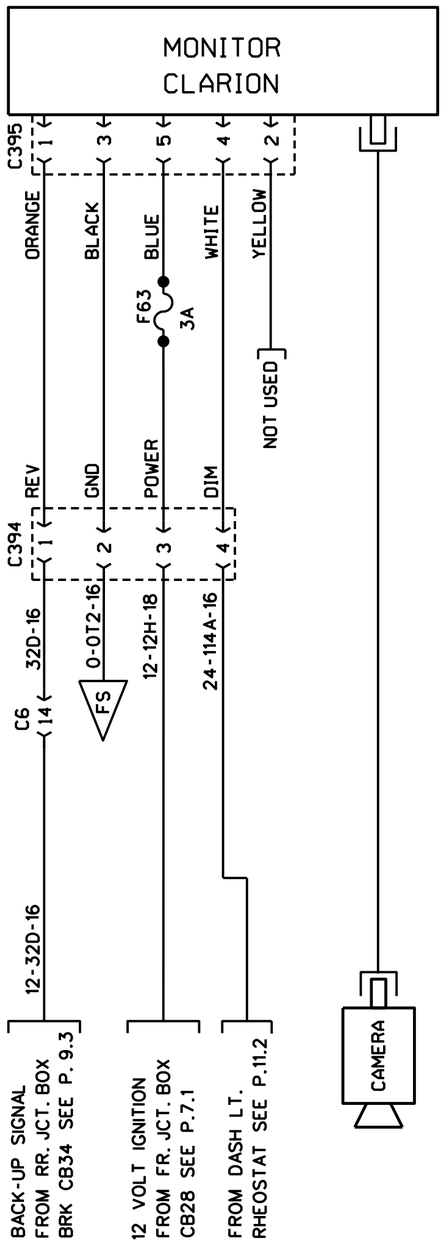


BACK-UP MONITOR (CLARION)

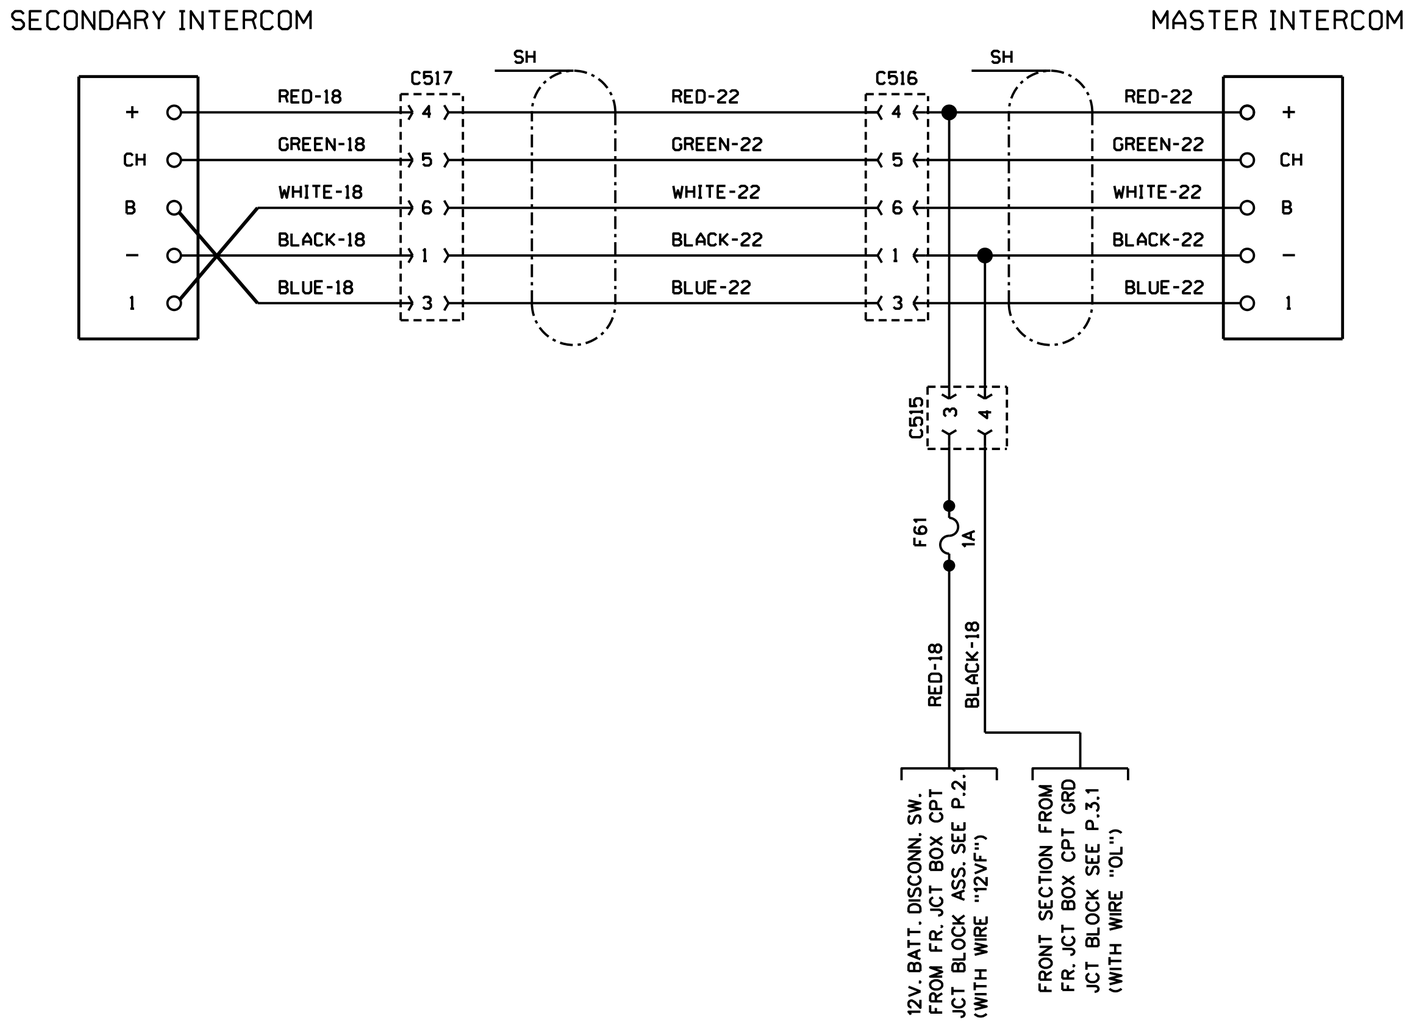


INTERCOM

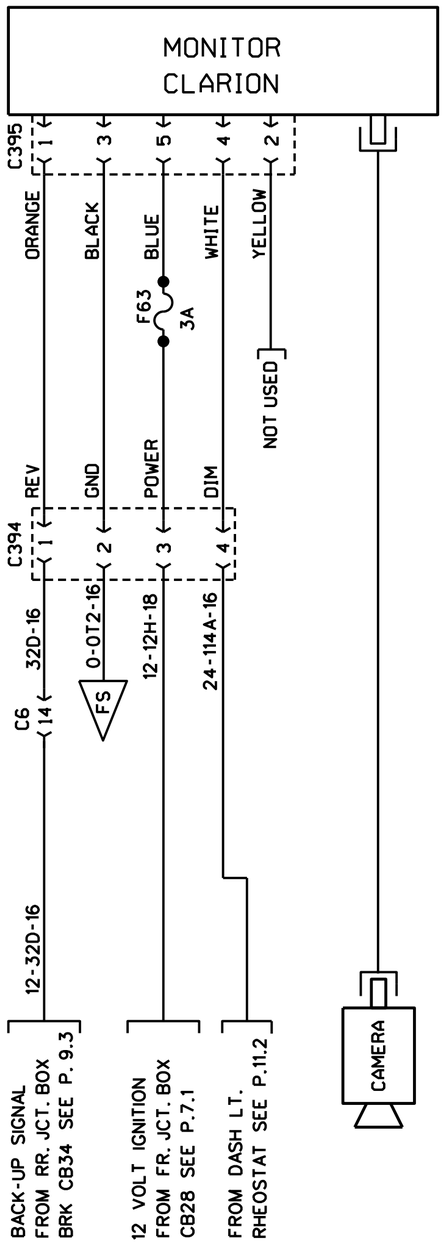

BACK-UP MONITOR (CLARION)

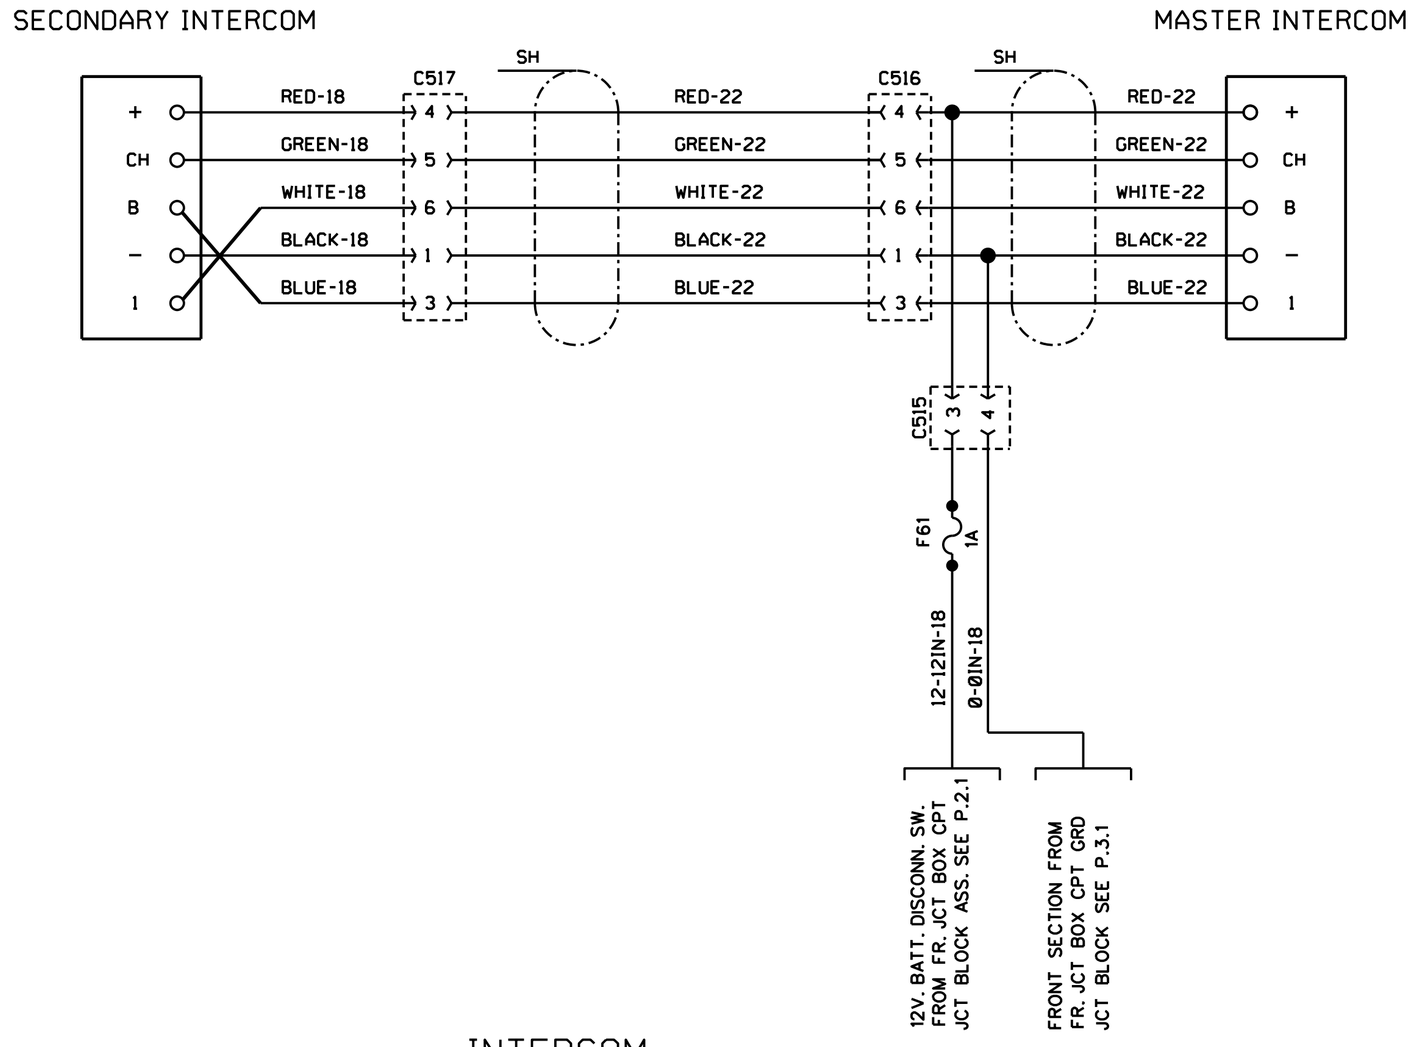


INTERCOM

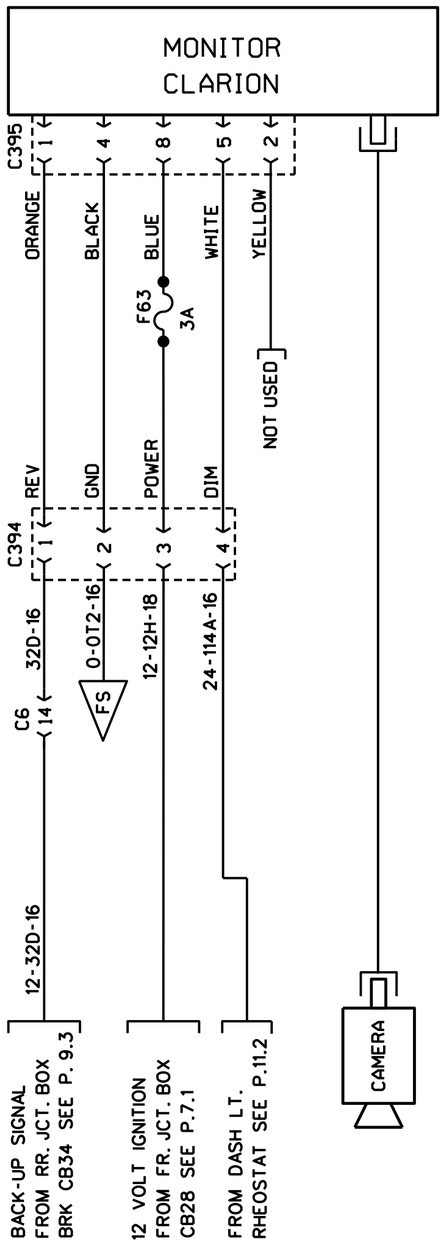


BACK-UP MONITOR (CLARION)


SECONDARY INTERCOM

MASTER INTERCOM

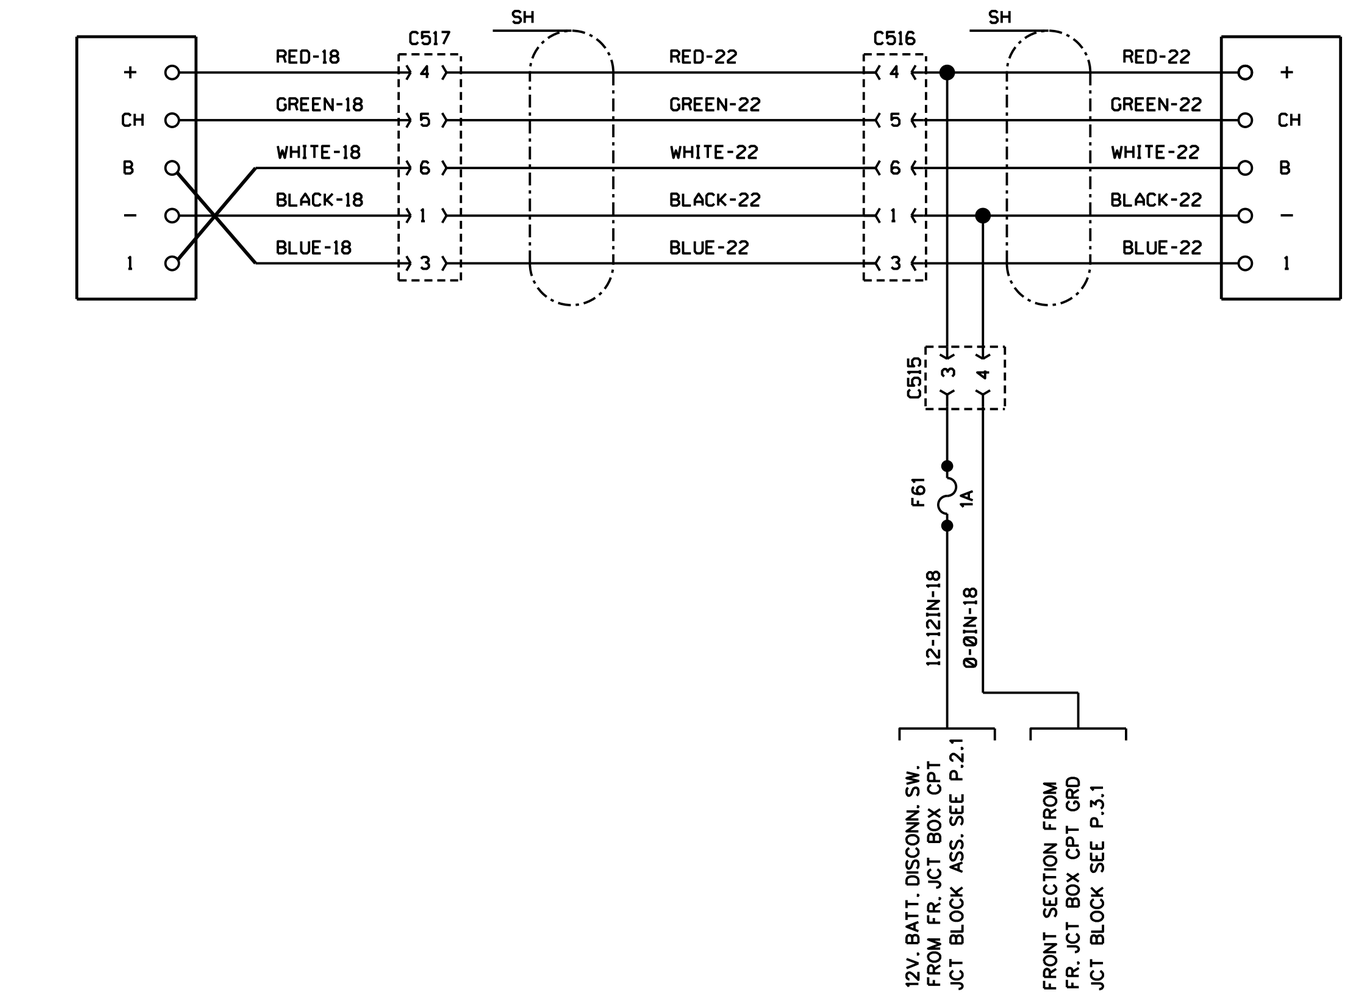

INTERCOM

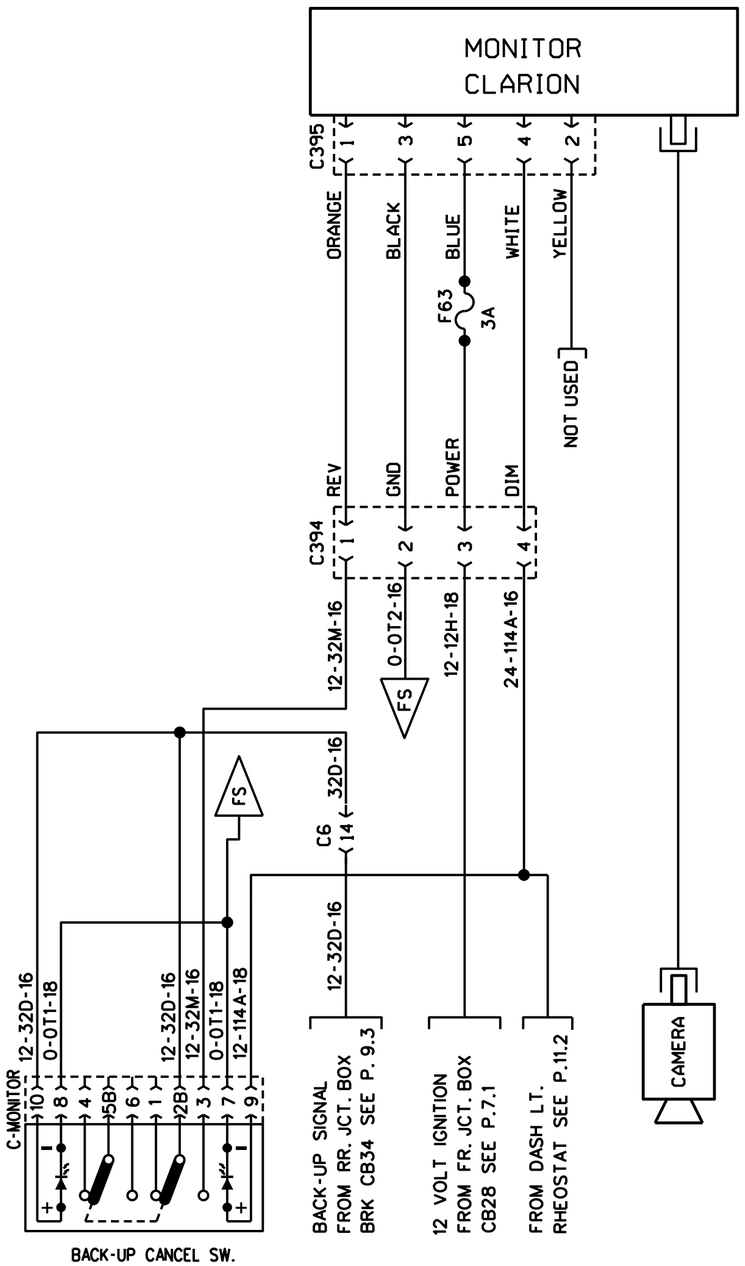


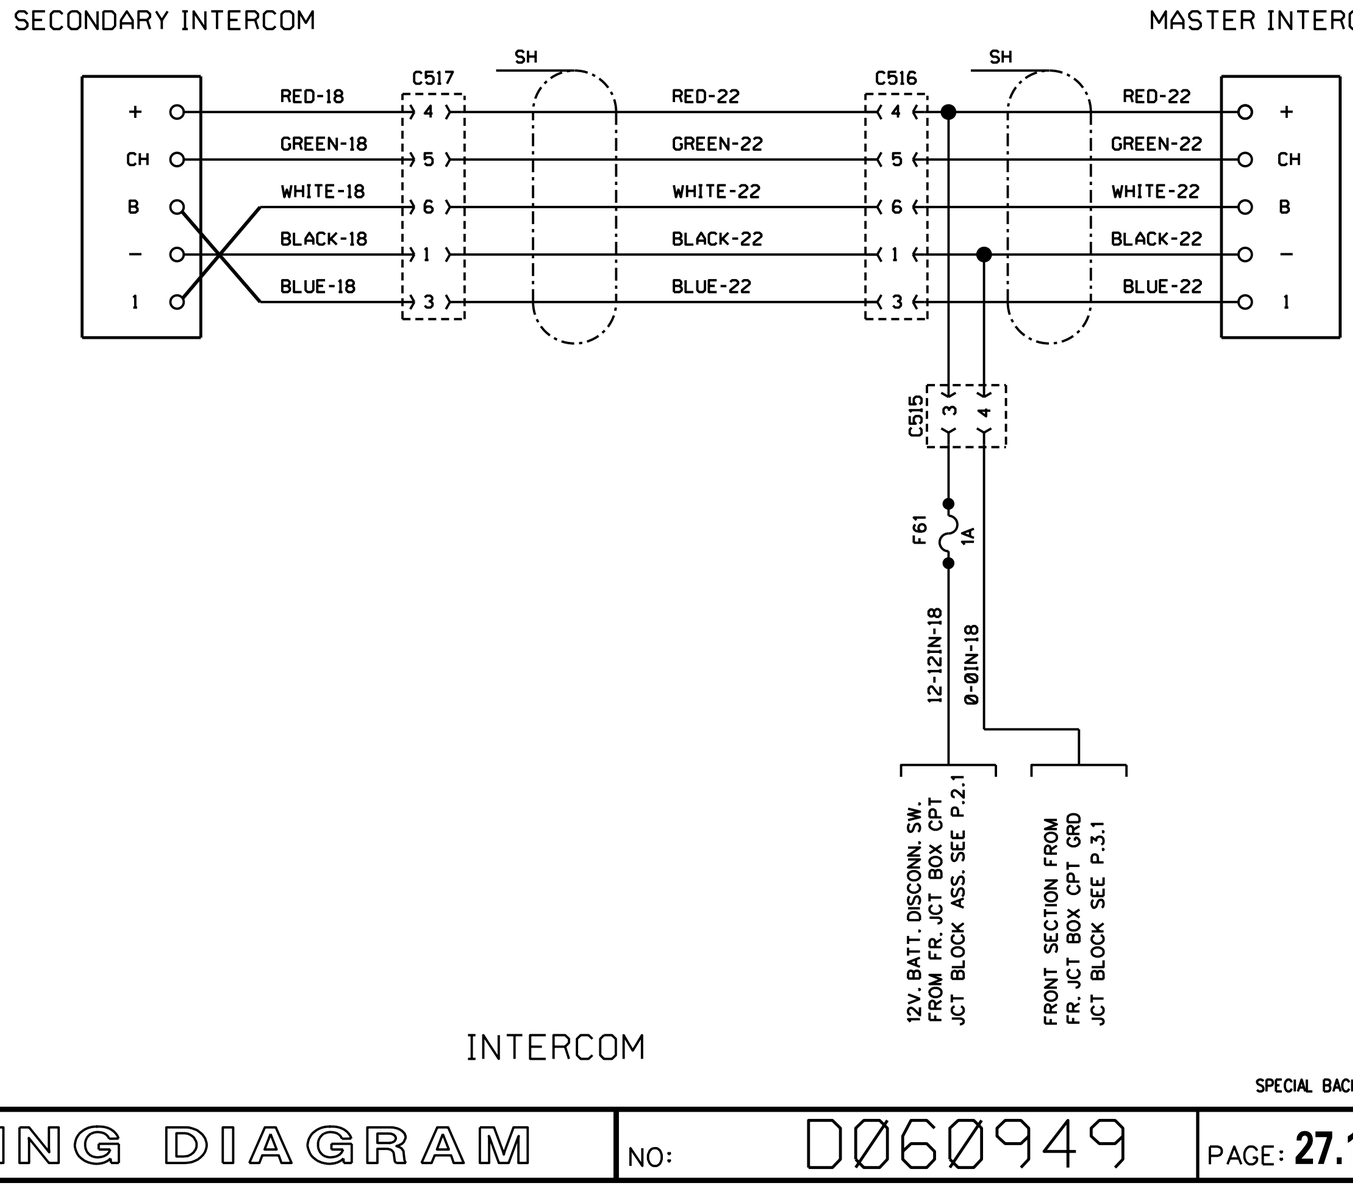


BACK-UP MONITOR (CLARION)

INTERCOM

SPECIAL BACK-UP SWITCH CANCEL ADDED

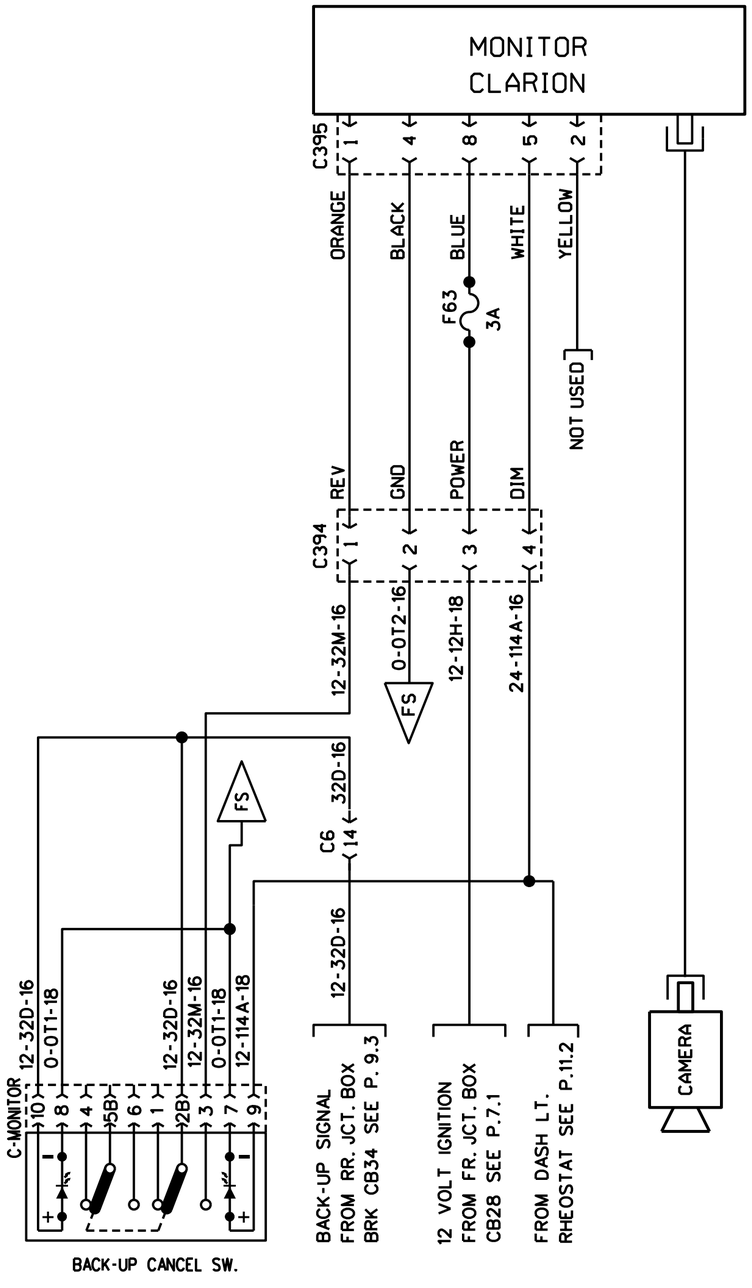

BACK-UP MONITOR (CLARION)

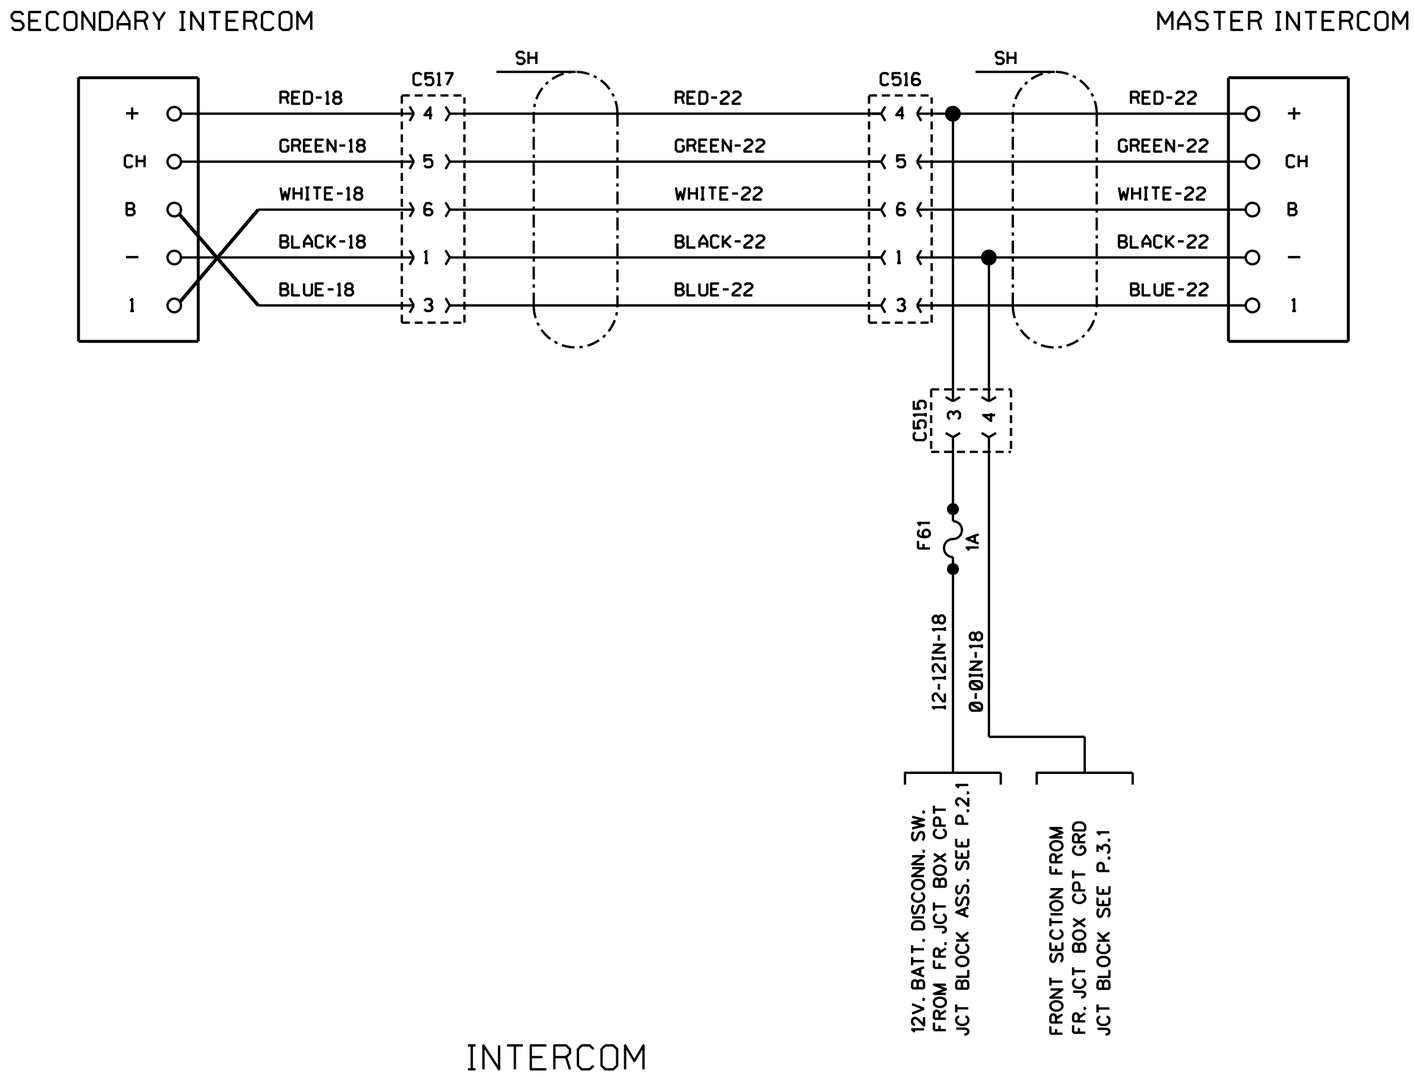

INTERCOM

SPECIAL BACK-UP SWITCH CANCEL ADDED

PREVOST | WIRING DIAGRAM | NO: D060949 | PAGE: 28.1 | REVISION 00

TELL TALE LIGHT MODULES

TELL TALE LIGHTS MODULE

REMOTE TEST SW.

C548
- 2B: 0-00A-18 → FBG
- 3: RT-18
- 7: 0-0T1-18 → FS
- 9: 0@12-114A-18 → FROM DASH LTS RHEOSTAT SEE P 11.2

C573
- 1
- 2
- 3
- 4
- TEMP. EXT. 1: 5 — 180-20
- TEMP. EXT. 2: 6 — 180A-20
- TEMP. EXT. 3: 7 — 180B-20
- TEMP. EXT. 4: 8 — 180C-20


  → OUTSIDE TEMPERATURE SIGNAL FROM HVAC DASH MODULE C540 (13,3,14,4) SEE P 13.1

C570
- SIGNAL_GND: 1 — 0-00A-18 → FBG
- TEST IN: 2 — RT-18
- CHS GRD: 3 — 0-0T2-18 → FS
- 12V IGN: 4 — 12-12H-18 → 12V IGNITION FROM CB28 SEE PAGE 7.1
- 5
- 12V PWR: 6 — 12-12DT-18 → C71 (12) → CB130 (6A) → 12-12K-14 → 12V POWER FROM FJB SEE PAGE 2.1


  → TO IDENTIFICATION LED INSIDE SWITCH SEE PAGES 1.2,5.1,8.1,11.3,12.1,17.1,23.1,24.1,24.2,25.1,25.2

C571
- GND: 1 — 0-0CS-18 → MASTER SW. ON SIGNAL FROM PAGE 1.1
- DC+: 2 — 24-86T-18 → STARTER SIGNAL FROM PAGE 4.2
- DC+: 3 — 24-126H-16 → KNEELING SIGNAL FROM PAGE 18.1
- GND: 4 — 0-93-20 → BATTERY LO/HI SIGNAL FROM PAGE 4.1
- DC+: 5 — 24-25A-18 → NOT GEN. (1) SIGNAL FROM PAGE 4.1
- DC+: 6 — 24-28T-18 → LO A/C PRESS SIGNAL FROM PAGE 13.1
- DC+: 7 — 24-28H-18 → HI A/C PRESS SIGNAL FROM PAGE 13.1
- GND: 8 — 0-540-20 → SIGNAL CRUISE ENABLE PAGE 5.1
- 9 → N.C.
- GND: 10 — → OPT. 2
- GND: 11 — 0-115W-18 → CHECK TRANS. SIGNAL FROM PAGE 6.1
- GND: 12 — 0-123B-18 → FIRE ALARM SIGNAL FROM PAGE 7.1
- GND: 13 — 0-105W-18 → TRANSMISSION HOT OIL SIGNAL FROM PAGE 19.1
- GND: 14 — → OPT. 4
- DC+: 15 — 24-25K-18 → NOT GEN. (2) SIGNAL FROM PAGE 4.2
- GND: 16 — 0-92-18 → BATTERY MONITOR BALANCE SIGNAL FROM PAGE 4.1
- GND: 17 — 0-76C-18 → LO FUEL SIGNAL FROM PAGE 7.1
- DC+: 18 — 12-197A-18 → FUEL WATER FILTER SIGNAL FROM PAGE 8.1
- DC+: 19 — → OPT.5
- DC+: 20 — 12-23-18 → RH FLASHER SIGNAL FROM PAGE 9.2


C572
- DC+: 1 — 24-301-16 → LIFT SYSTEM POWER ON SIGNAL FROM PAGE 25.1
- DC+: 2 — 24-302-20 → W.C.L. DOOR AJAR SIGNAL FROM PAGE 25.1
- DC+: 3 — 24-62-16 → LAVATORY OCCUPED SIGNAL FROM PAGE 17.1
- GND: 4 — 0-170C-18 → LUGGAGE DOOR UNLOCK SIGNAL FROM PAGE 19.1
- DC+: 5 — → OPT. 1
- GND: 6 — 0-85Y-18 → ABS SIGNAL FROM PAGE 21.1
- GND: 7 — 0-45W-20 → A/C DOOR AJAR SIGNAL FROM PAGE 13.2
- GND: 8 — 0-419-18 → CHECK ENGINE SIGNAL FROM PAGE 5.1
- DC+: 9 — 24-82-16 → STOP LTS. SIGNAL FROM PAGE 9.3
- DC+: 10 — 12-21-18 → LH FLASHER SIGNAL FROM PAGE 9.2
- GND: 11 — 0-260-18 → WINDOW AJAR SIGNAL FROM PAGE P. 7.2
- GND: 12 — 0-10R-20 → LUGGAGE DOOR AJAR SIGNAL FROM PAGE 11.1
- DC+: 13 — 12-9B-20 → ENGINE DOOR AJAR SIGNAL FROM PAGE 11.1
- GND: 14 — 0-181-20 → OUTSIDE FREESE POINT SIGNAL FROM P. 13.1
- GND: 15 — 0-160-16 → TAG AXLE SIGNAL FROM PAGE 7.1
- DC+: 16 — 24-91B-16 → PARKING BRAKE SIGNAL FROM PAGE 8.1
- GND: 17 — 0-509-18 → STOP ENGINE SIGNAL FROM PAGE 5.1
- DC+: 18 — 24-55-16 → HI BEAM SIGNAL FROM PAGE 9.2

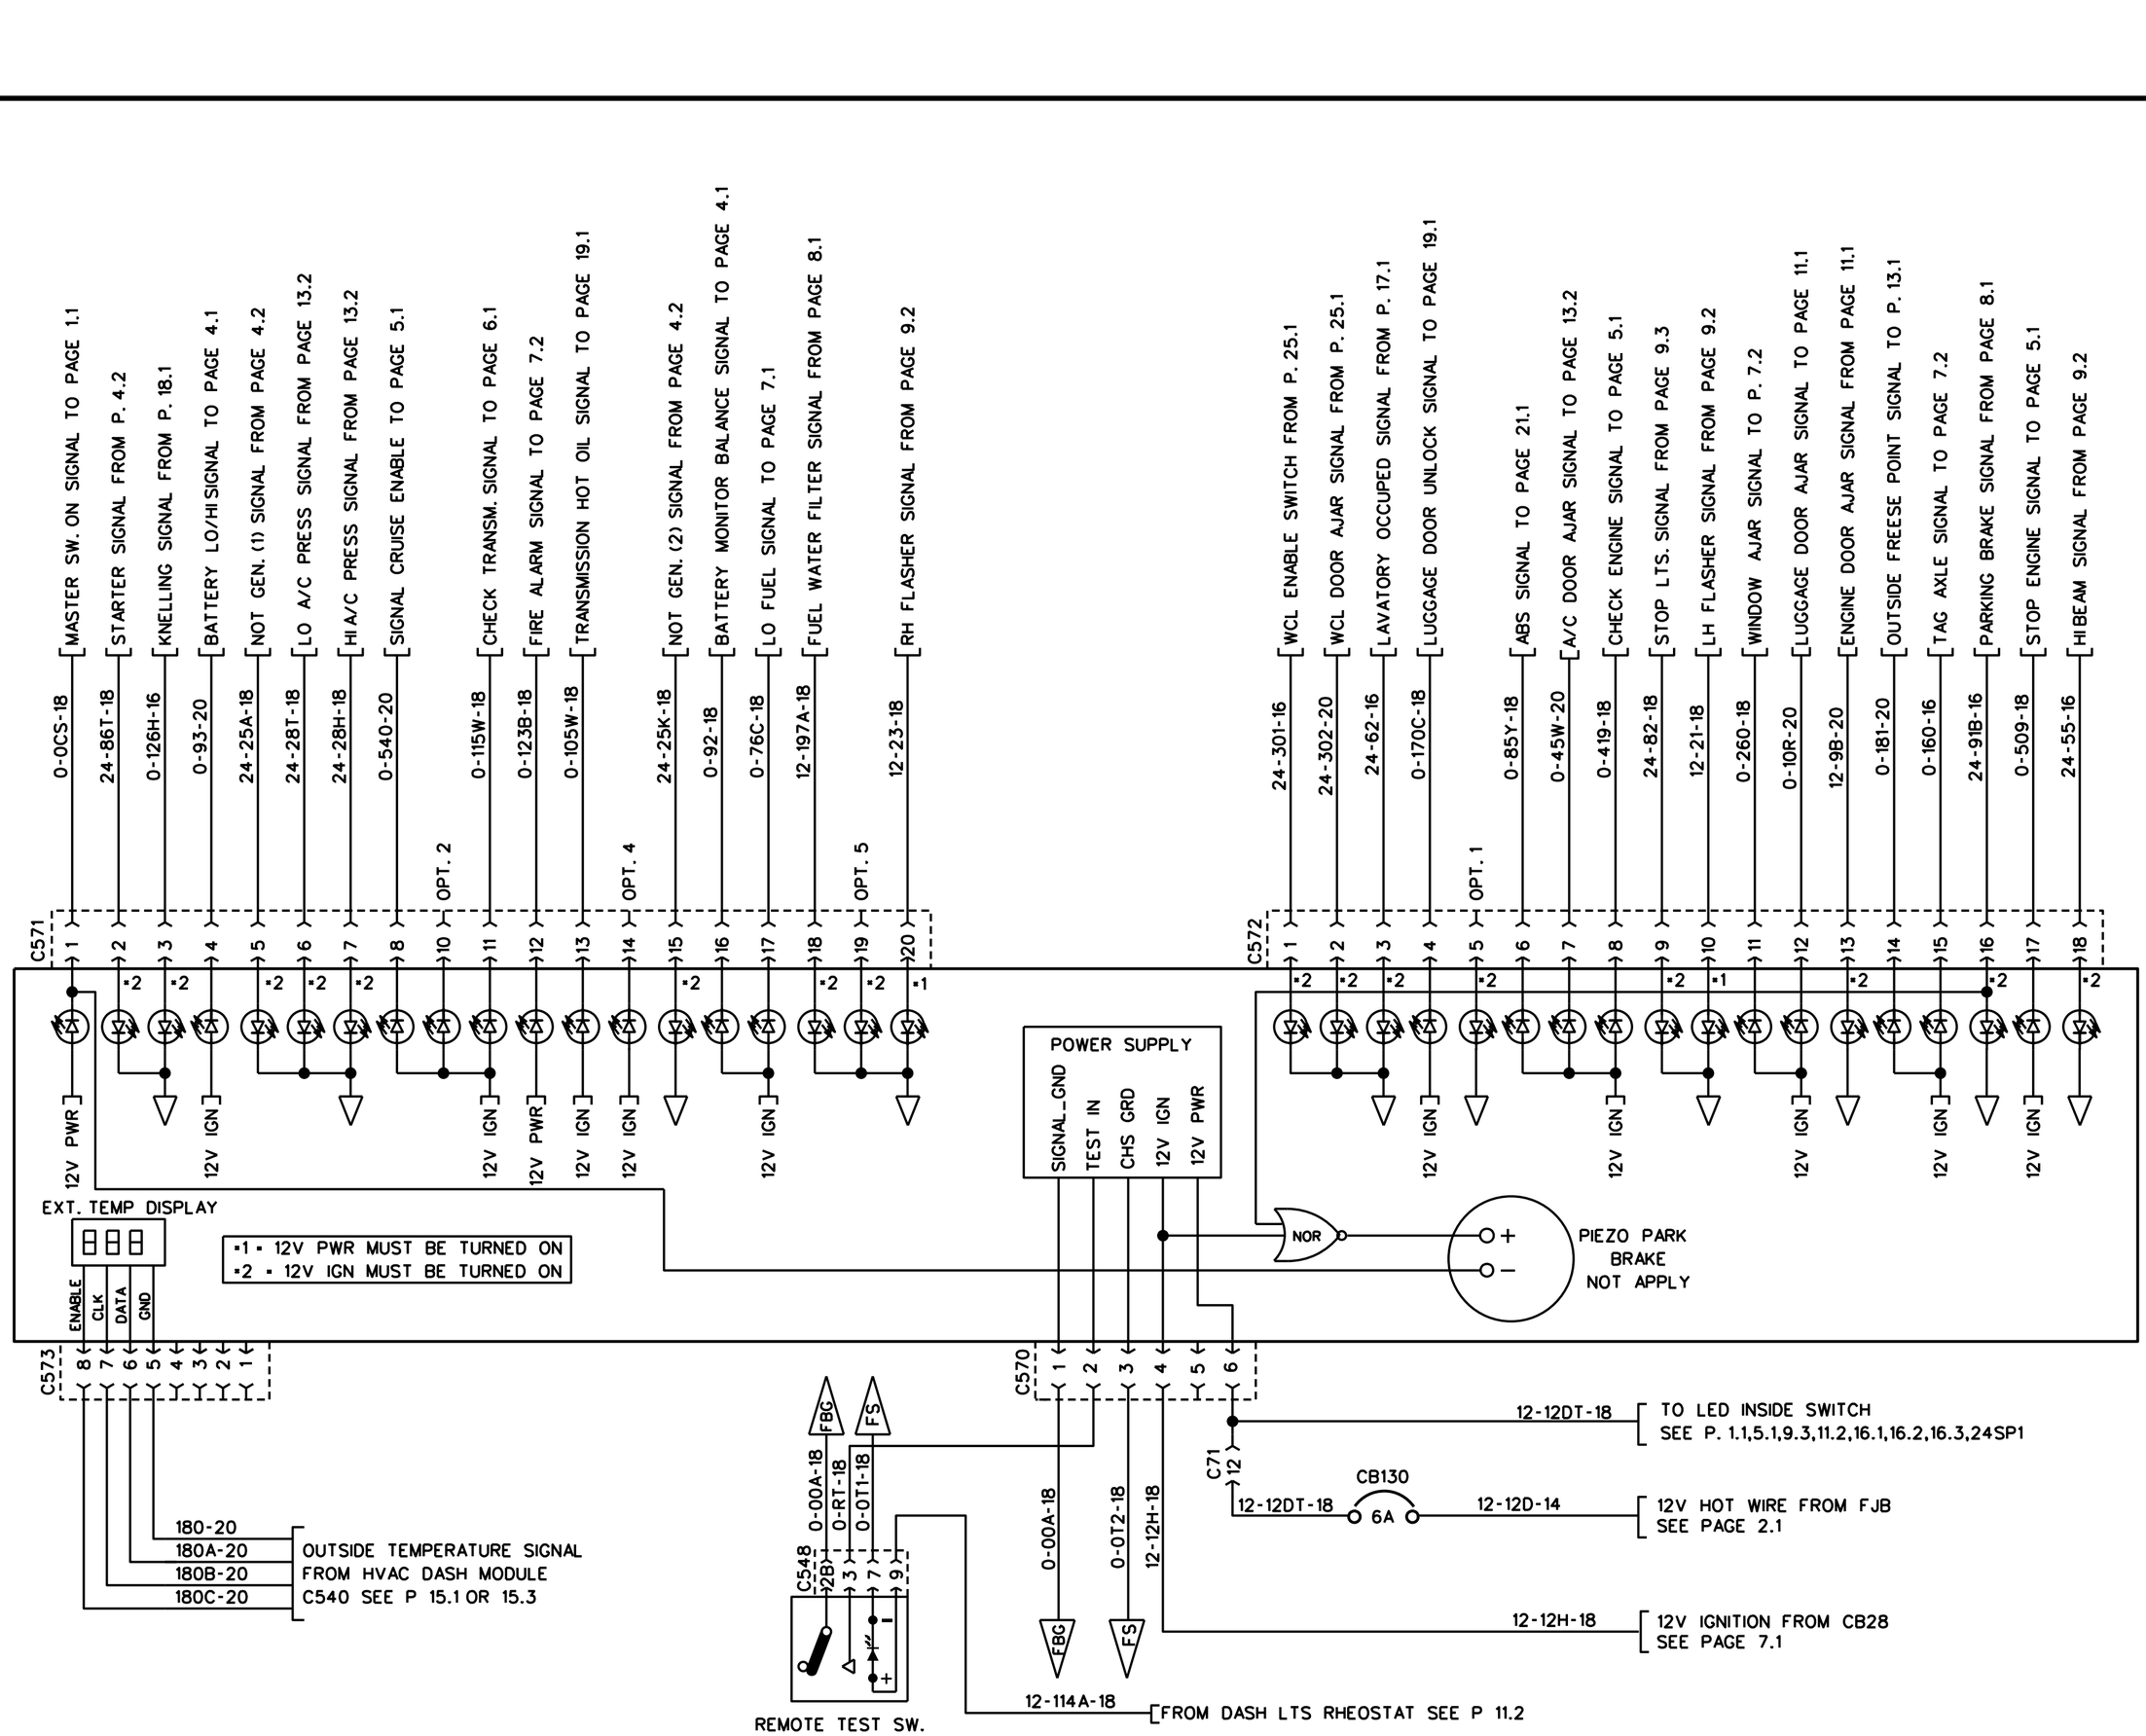


TELL TALE LIGHTS MODULE

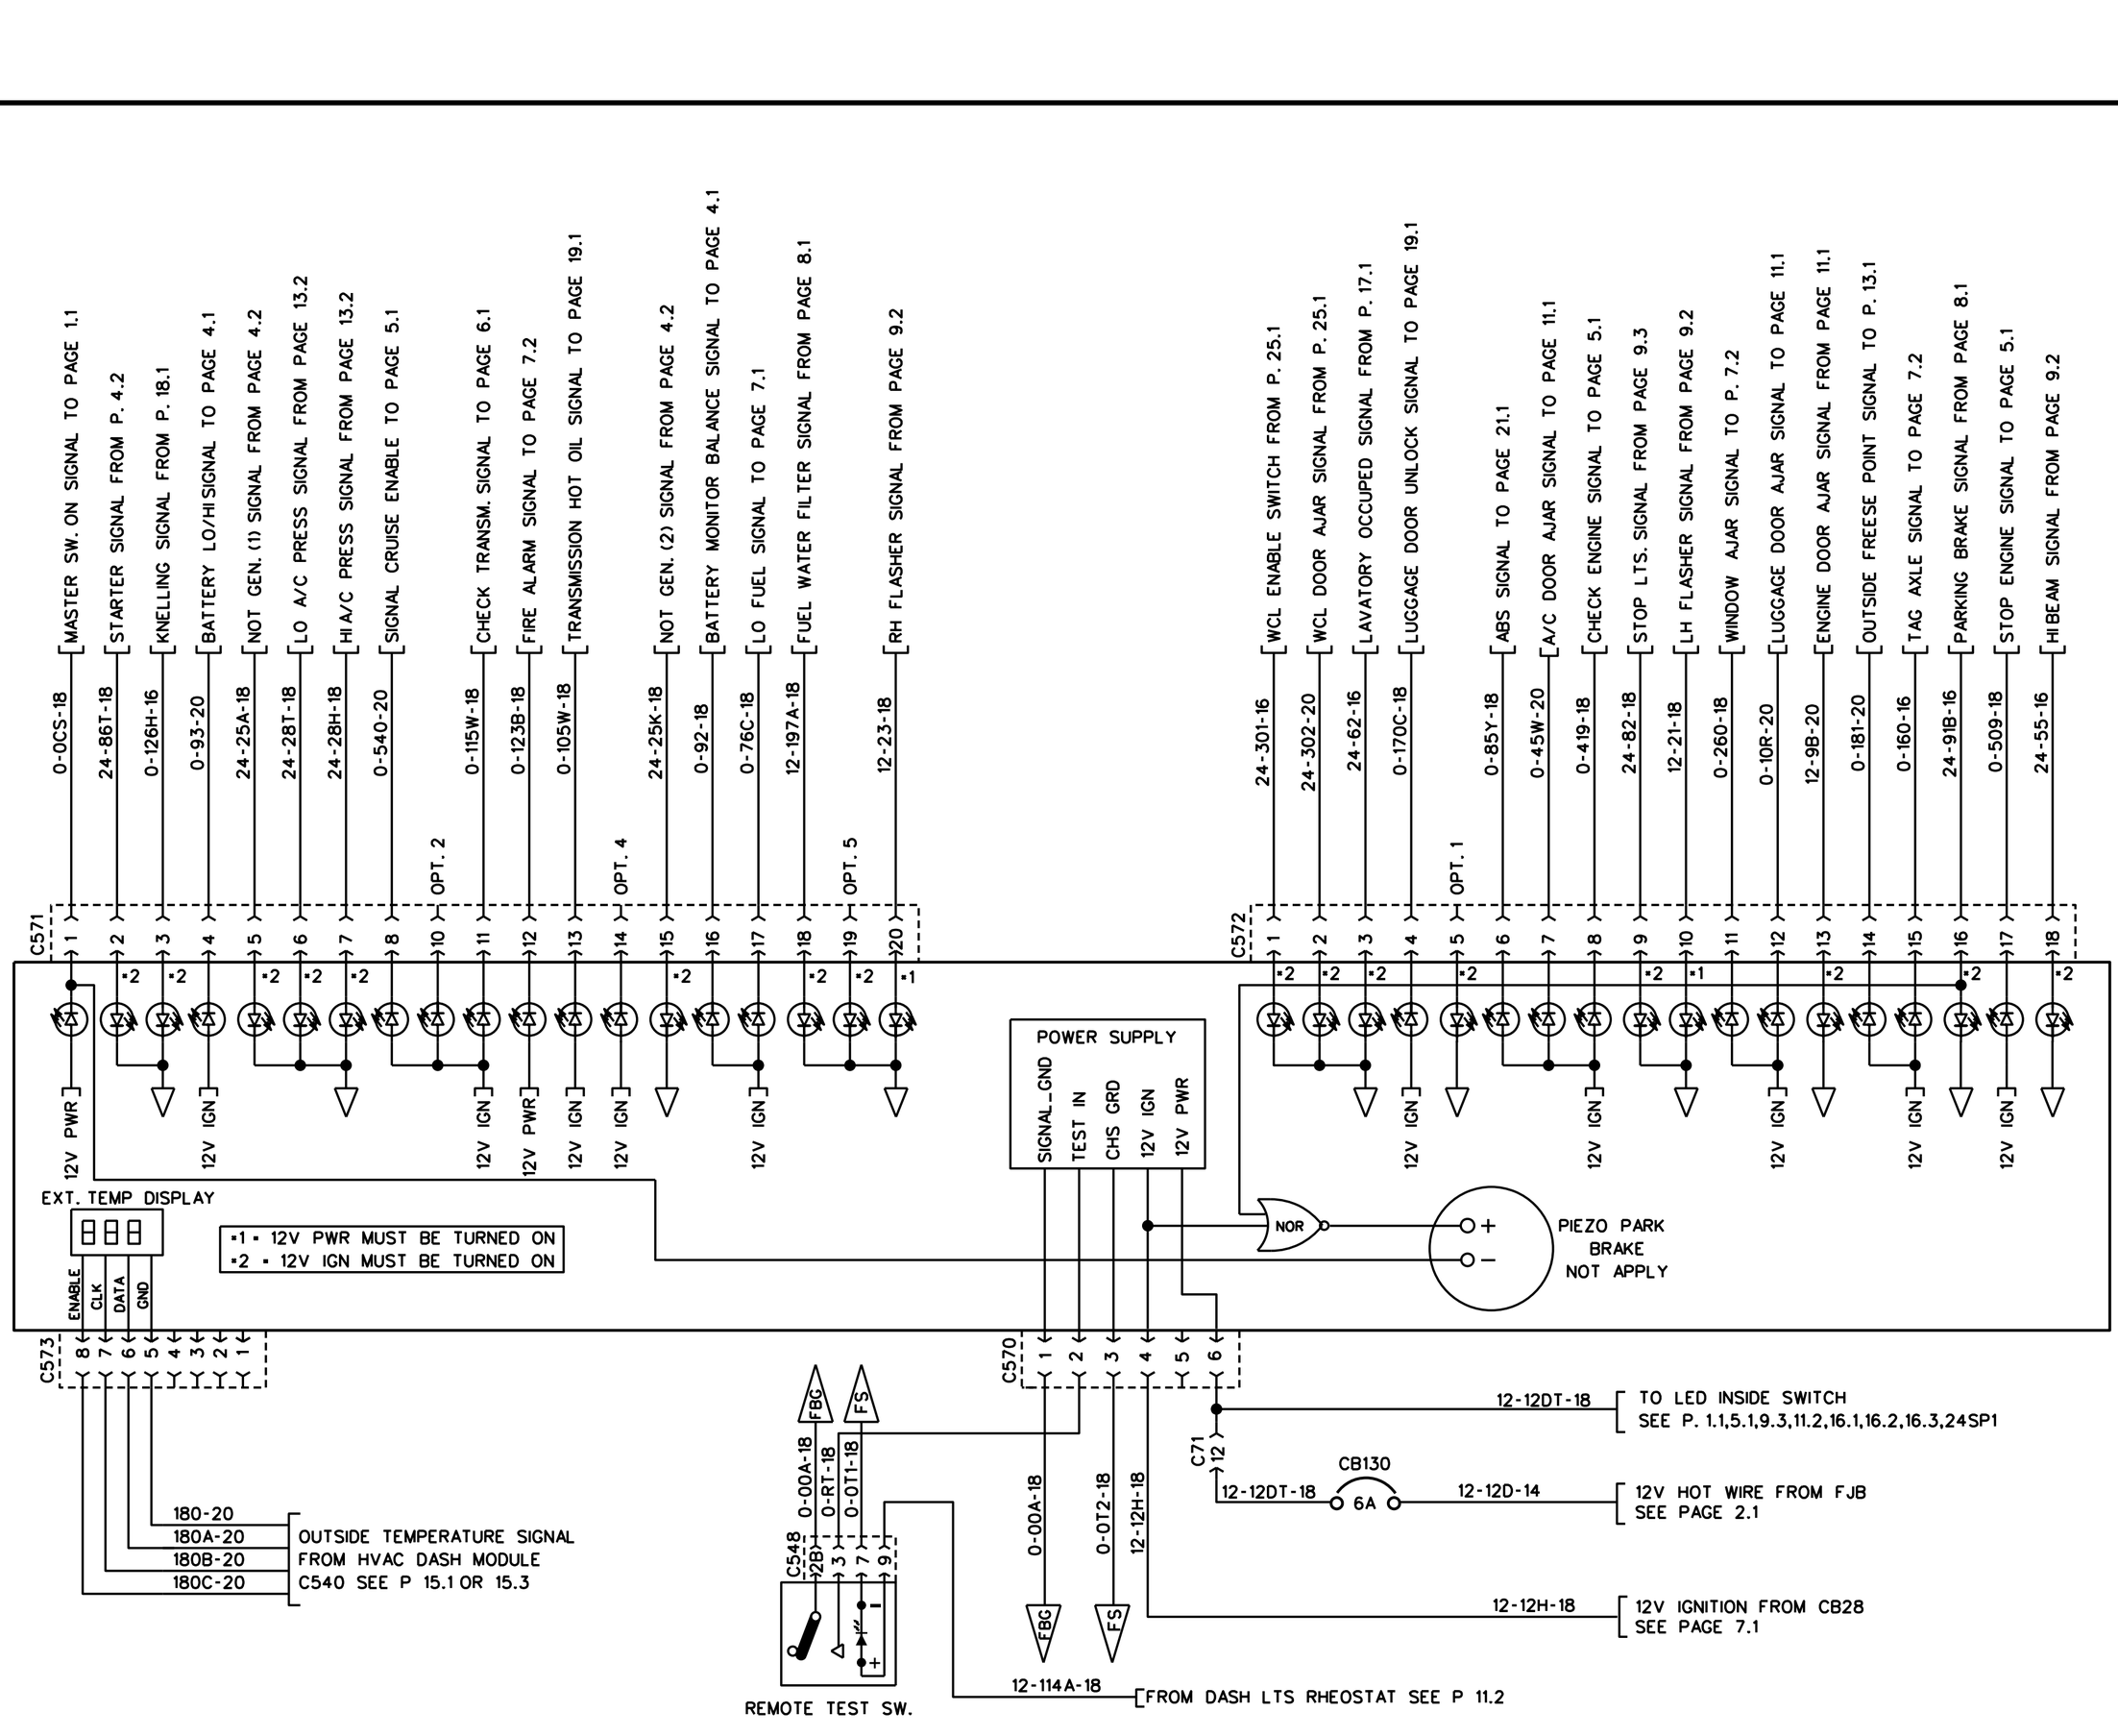


TELL TALE LIGHTS MODULE

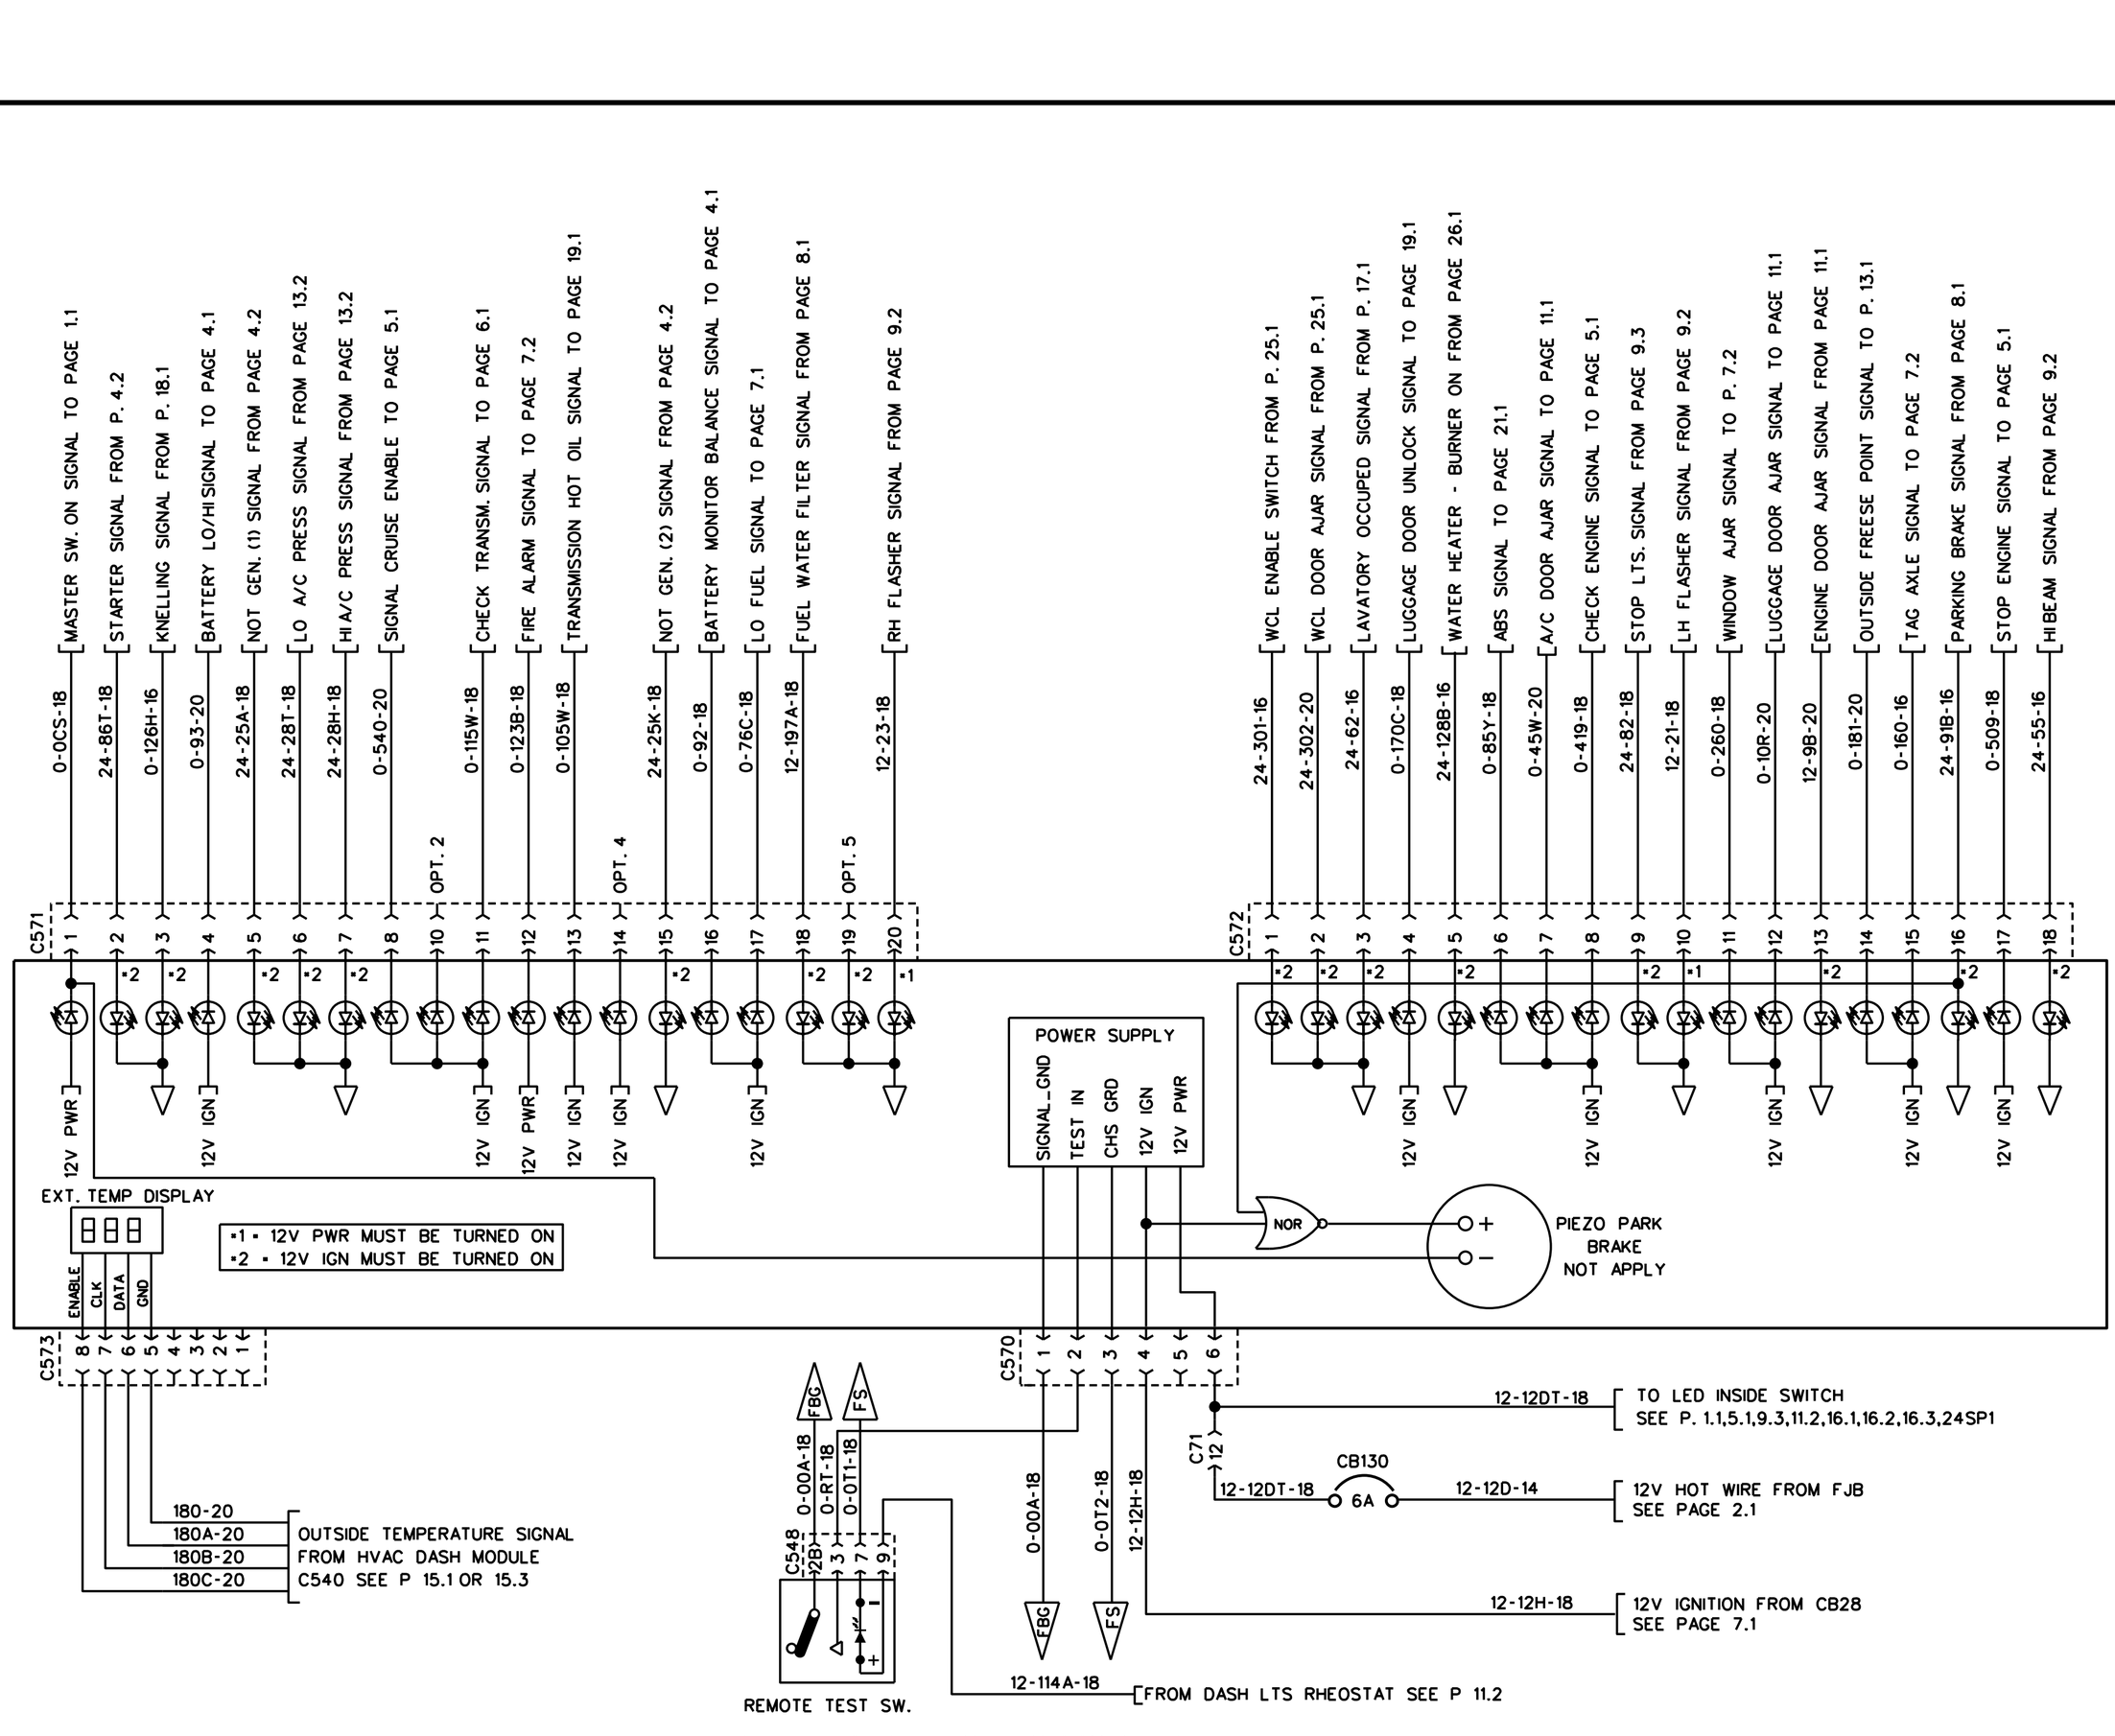

TELL TALE LIGHTS MODULE

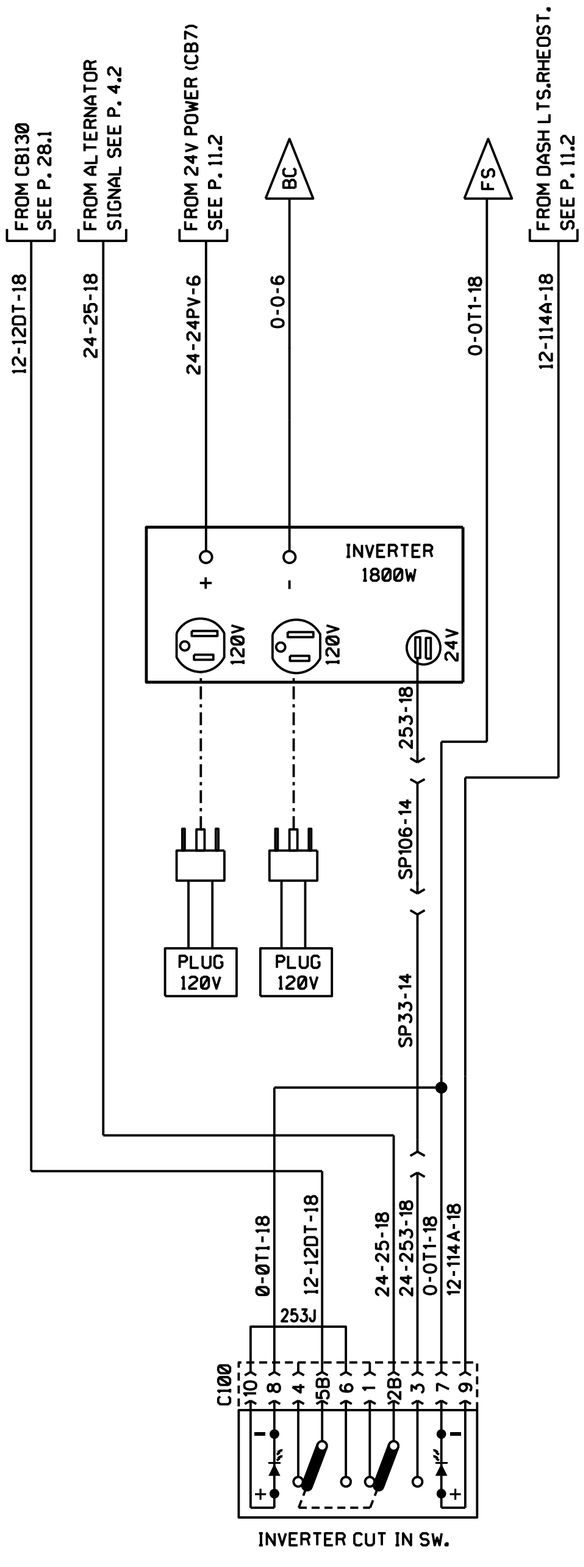

PLUG 120 VOLT

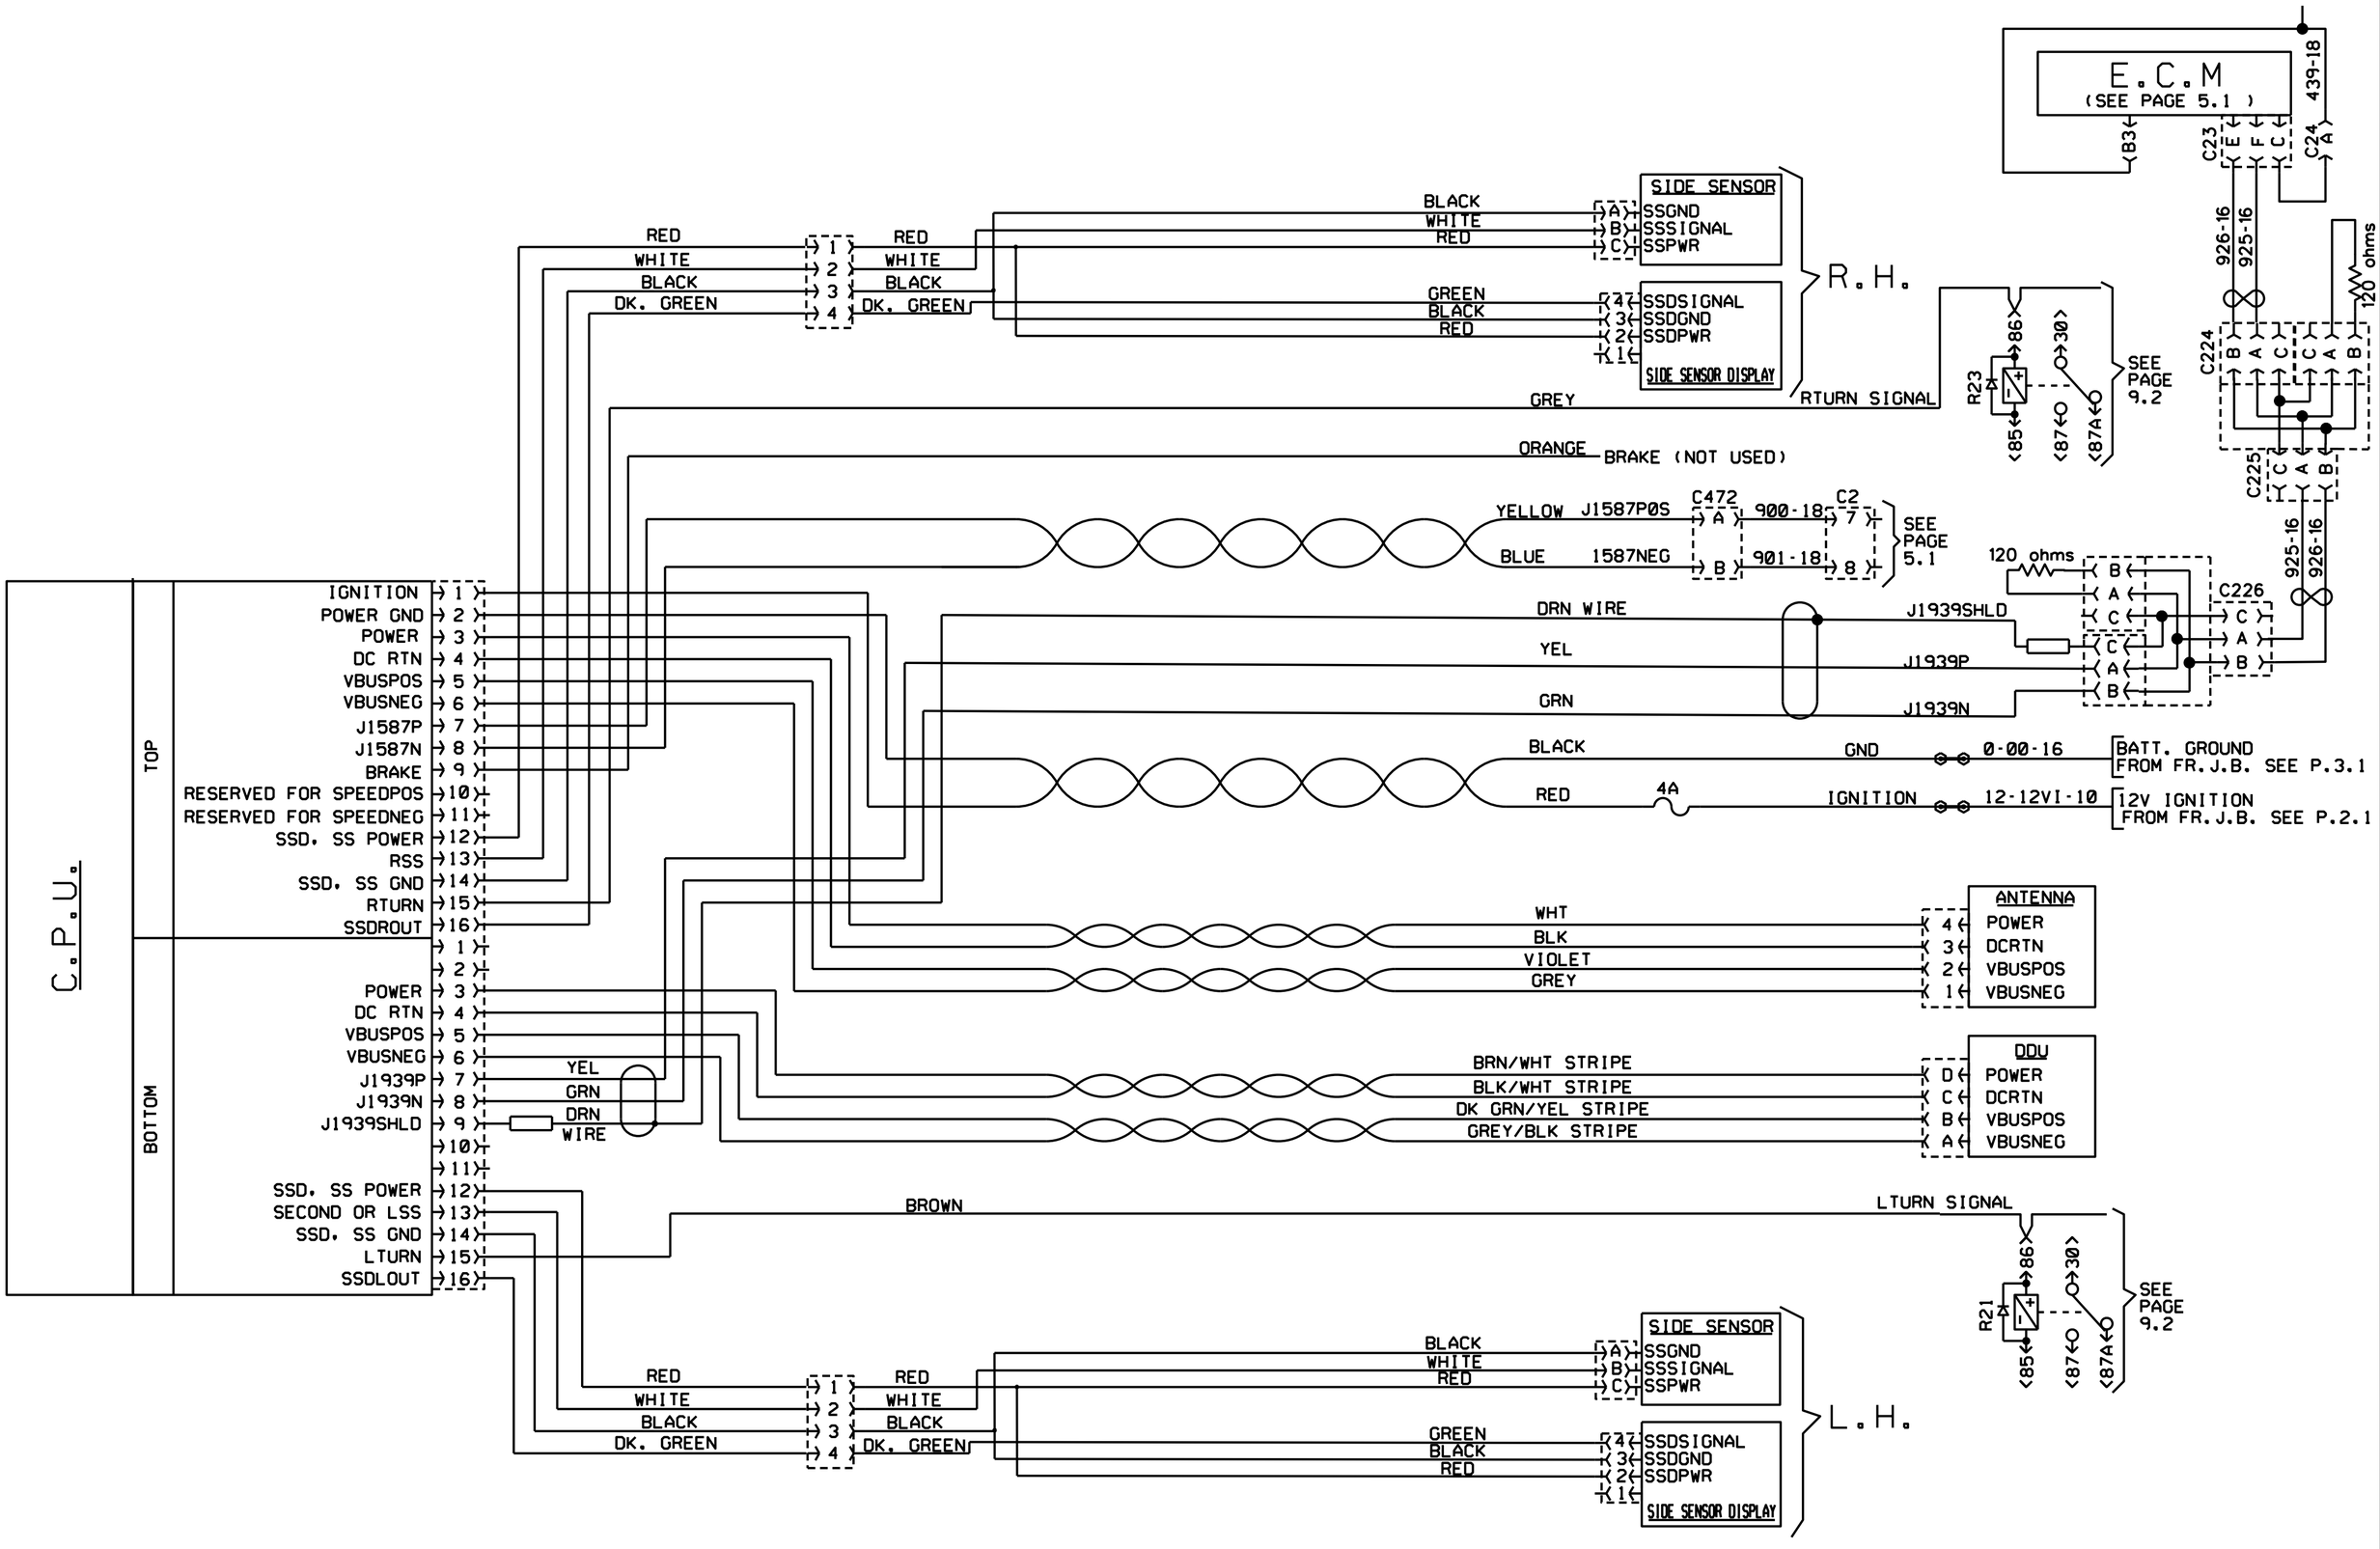

VORAD SMART CRUISE SYSTEM