WIRING DIAGRAM

PREVOST

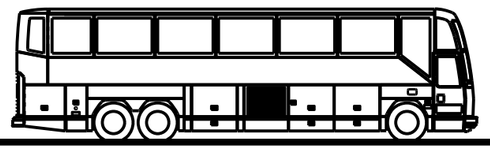

H3-41 & H3-45 BUS

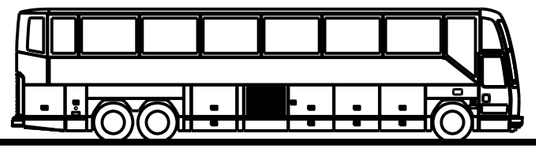

REFERENCE: MODEL STANDARD 2003

NO: D060976

EFF. W/ OC* 2000090 PRIOR TO / OC*

EFF. W/ VEH.* 4-4511,4-4705,4-4758 PRIOR TO / VEH.*

DR. SYLVAIN DESBIENS DATE: 02-04-15

CK. ERIC LANDRY APPR. ROLAND LAPOINTE

REV.	DATE	DESCRIPTION	PAGE	BY	CK.	APPR.
00	02-04-15	INTRODUCTION NEW COOLING SYSTEM		S.D.	E.L.	
01	03-02-27	ZF TRANSMISSION & GENERAL UPDATE	C1,E,F,G,H,I,L,2.1,5.1, 6.3,9.3,18.1,18.1SP2, 25.2	A.S.	E.L.	
02	03-06-05	ZF TRANSMISSION MODIFICATIONS & GENERAL UPDATE	B1,C1,C2,F,H,L,1.1,2.1, 4.1,4.1SP1,4.1SP2,5.1, 5.1SP1,5.1SP2,6.3,11.2, 13.2,16.1,17.1SP2,18.1, 20.1,20.2,28.1	A.S.	E.L.	
03	03-08-15	NEW VIDEO PANEL ARRANGEMENT - OC#2003038 EFF: 4-4821	C2, D, G3,20.1, 20.3, 20.3SP1, 20.3SP2,20.4 20.5, 20.6, 20.9, 20.10	M.L.	S.D.	
04	03-08-15	NEW FUSE BLOCK W/O LED - OC#2003033 EFF: 4-4811	E,G,L,2.1,5.1,6.1,6.3, 7.2,8.1,9.2,9.3,11.1, 11.2,11.3,11.4,12.1, 14.1,17.1,18.1,19.1, 20.5,22.1,23.1,24.2, 24.3,25.2,26.1+ 7.2SP1,17.1SP1, 17.1SP2,23.1SP1 26.2SP1	E.L.	S.D.	
		ENGINE CABLE SINGLE TO DOUBLE BRAIS OC#2003075 EFF:4-4831	NO PAGES MODIFIED	A.S.	S.D.	
		ELECT. FR. JCT BOX MODIF. OC#2003028 EFF:4-4834	C1	A.S.	S.D.	
05	03-09-09	VIDEO STABILIZER REMOVED AND NEW DISTRIBUTION AMPLIFIER (DUAL INPUT) WITH DVD OC#2003099 AND NEW DVD OC#2003098 EFF: 4-4826	L, 20.3, 20.3SP1 20.3SP2, 20.8, 20.8SP1 20.9, 20.10	M.L.	S.D.	
06	03-10-28	CORRECTION NEW DISTRIBUTION AMPLIFIER OC#2003099 EFF. 4-4826	20.3, 20.3SP1 20.3SP2, 20.10	M.L.	E.L.	

REV.	DATE	DESCRIPTION	PAGE	BY	CK.	APPR.
07	03-11-03	XENON LOW BEAM HEADLAMPS - OPTIONAL OC#2003030 EFF.#4-4852	C1,G,9.1,9.5	E.L.	S.D.	
		UPDATED PAGES : 1.1,4.1SP3,4.2,4.2SP1,7.2,7.2SP1,12.1,17.1SP1,20.1,20.1SP1	← SEE			
08	03-12-16	NEW COOLING 2004 DDEC V OC#2003055 PRELIM.#4-4829 EFF.#5-4867	B1,C1,E,G,H,I,1.1,1.2 3.1,5.1,5.1SP1,5.1SP2 6.1,6.3,9.3,19.1	S.D.	E.L.	
		PARKING BRAKE SR-7 VALVE - OC*2003063 PRELIM: 4-4863 EFF: 5-4867	8.1	E.L.	S.D.	
		A/C COMPRESSOR CONNECTOR - OC*2003089 PRELIM: NIL EFF: 5-4867	13.1	A.S.	E.L.	
		HEADLAMPS RESISTANCES - OC*2003108 PRELIM: NIL EFF: 5-4867	F,J,9.2,9.5	E.L.	S.D.	
		NEW HVAC PROGRAMMATION - OC*2003120 PRELIM: NIL EFF: 5-4867	N/A	E.L.	S.D.	
		UPDATED PAGES , SEE →	A, 21.1, 21.1 SP1	E.L.	S.D.	
09	04-01-12	SPECIAL PAGE REVISION ONLY - NO SPECIFIC EFF.	26.2SP1	A.S.	A.S.	
10	04-03-11	UPPER DEFROST RESISTOR OC#2003125 EFF.: 4-4884	J,22.1	E.L.		
		CLEARANCE LTS W/JIFFY SPLICES OC#2003118 EFF.: 4-4937	C1	E.L.	E.L.	
		UPDATED PAGES , SEE →	B1,4.2SP1,6.1,6.3, 13.2,20.2,	E.L.		
11	04-05-04	BOSCH ALT. C-399 ELIMINATED OC#2004020 EFF.: 4-4964	C1,G,4.2,4.2SP1	E.L.	E.L.	
		UPDATED PAGES , SEE →	C2, I,16.1,26.1			
12	04-06-01	INFO: NEW DVD & VIDEO DIST. BOX OC*2004036	NO PAGE	S.L.	E.L.	
		DRIVER'S DEFROST, DOUBLE MOTOR UNIT OC*2003144,OC*2003153	C1,E,F,G,H,1.1,13.1,13.1SP1	E.L.	E.L.	
		NEW HVAC CTRL MODULE OC*2004041 — EFF: 5-0017				
		KNEELING UP ALARME, ON NEW JERSEY ONLY OC*2004022	18.1			
13	04-06-18	PROGRAMMABLE DIGITAL CLOCK OC* 2004045	14.1,14.1SP1	S.L.	E.L.	
14	04-07-08	UPDATE DIGITAL CLOCK	14.1,14.1SP1	S.L.	E.L.	
15	04-09-07	JAKE ON BRAKE PEDAL (LATCHED) 5-4993	E3, 5.1SP3, 19.1SP1	S.L.	E.L.	
		WINDOW AJAR O.C 2004075 EFF: 5-4367	G5,C1	E.O		
16	04-09-21	A/C COMPRESSOR CLUTCH CUT-OUT PRESS. SWITCH (5-0115,0116,0118)	E3,G2,13.1SP2	S.L.		
		SUBWOOFER W/O SEAT AUDIO & CROSSOVER (5-0081)	20.1SP5	S.L.		

WIRING DIAGRAM INDEX

A	A/C, HEAT & VENT. SYSTEM	Page:	13.1
	ALARM & SIGNAL	Page:	7.2
	ABS	Page:	21.1
	ARRANGEMENT - CABLE	Page:	B
	ARRANGEMENT - HARNESS	Page:	C1,C2
	ARRANGEMENT - SPARE WIRE	Page:	D
B	BACK-UP ALARM	Page:	9.3
	BACK-UP MONITOR	Page:	27.1
	BATTERY CHARGER	Page:	11.4
	BATTERY STANDARD AND 8D	Page:	1.2
C	CLUSTER	Page:	7.1
	CHARGING SYSTEM	Page:	4.2
	CIGAR LIGHTER	Page:	14.1
	CODE - CIRCUIT NUMBER	Page:	E
	CODE - CIRCUIT BREAKER	Page:	F
	CODE - CONNECTOR	Page:	G
	CODE - DIODE	Page:	H
	CODE - RELAY	Page:	I
	CODE - RESISTOR	Page:	J
	CODE - WIRING KEY	Page:	K
	CODE - FUSE	Page:	L
	CODE - MODULE	Page:	M
	CRUISE CONTROL - DDEC	Page:	5.1
	CB OPTION	Page:	20.5
D	DDEC III & IV	Page:	5.1
	DIGITAL CLOCK	Page:	14.1
	DISTRIBUTION 12V, 24V	Page:	1.1
	DISTRIB. 12V DISC., IGN & HOT WIRE	Page:	2.1
	DRIVER'S WINDOW LIFTER	Page:	14.1
E	ENGINE BLOCK HEATER	Page:	12.1
	ENGINE BRAKE SYSTEM	Page:	19.1
	ENGINE CONTROL	Page:	4.1
	ENTRANCE DOOR SEDAN	Page:	16.1
	ETHER COLD START	Page:	8.1
	EXTERIOR LIGHTIHG	Page:	9.1
F	FAN-CLUTCH RADIATOR	Page:	8.1
	FAST IDLE - DDEC	Page:	5.1
	FIRE DETECTOR	Page:	7.2
	FRONT DESTINATION SIGN	Page:	17.1
	FRONT CAMERA	Page:	20.6
	FUEL FILTER WATER DETECTOR	Page:	8.1
	FUEL PRIME PUMP	Page:	12.1
G	GALLEY ACCESSORIES	Page:	23.1
	GROUND SYSTEM	Page:	3.1
H	HIGH BUOY	Page:	18.1
	HOTESS CHIME	Page:	12.1
I	INTERIOR LIGHTING	Page:	11.1
	INTERCOM	Page:	27.1
K	KNEELING SYSTEM	Page:	18.1
L	LAVATORY	Page:	17.1
	LOW BUOY	Page:	18.1
	LUGGAGE DOOR LOCK	Page:	19.1
M	MIRROR-REAR VIEW	Page:	24.2
P	PARKING BRAKE SWITCH	Page:	8.1
	POWER 12V OUTLET	Page:	14.1
	PRE-HEATER WATER HEATER	Page:	26.1
	PRODRIVER	Page:	8.1
R	RETARDER - WORLD TRANSM.	Page:	19.1
S	SEAT AUDIO SYSTEM	Page :	20.7
	SOUND & VIDEO SYSTEM	Page:	20.1
	SPEAKER PASSENGER	Page:	20.2
	SPEEDOMETER	Page :	7.1
	STEERING CONTROL	Page:	15.1
	SUN VISOR	Page:	14.1
T	TELL TALE LIGHT MODULES	Page	28.1
	TRANSMISSION - WORLD	Page:	6.1
	TRNSMISSION ZF	Page:	6.3
	TACHYMETER	Page :	7.1
W	WHEEL CHAIR LIFT - RICON 9000	Page:	25.2
	WHEEL CHAIR LIFT - STEW. & STEV.	Page:	25.1
	WINDOW AJAR	Page:	7.2
	WINDSHIELD (UP) FAN DEFROSTOR	Page:	22.1
	WIPER & WASHER	Page:	10.1

WIRING DIAGRAM INDEX

A	A/C, HEAT & VENT. SYSTEM	Page:	13.1
	ALARM & SIGNAL	Page:	7.2
	ABS	Page:	21.1
	ARRANGEMENT - CABLE	Page:	B
	ARRANGEMENT - HARNESS	Page:	C1,C2
	ARRANGEMENT - SPARE WIRE	Page:	D
B	BACK-UP ALARM	Page:	9.3
	BACK-UP MONITOR	Page:	27.1
	BATTERY CHARGER	Page:	11.4
	BATTERY STANDARD AND 8D	Page:	1.2
C	CLUSTER	Page:	7.1
	CHARGING SYSTEM	Page:	4.2
	CIGAR LIGHTER	Page:	14.1
	CODE - CIRCUIT NUMBER	Page:	E
	CODE - CIRCUIT BREAKER	Page:	F
	CODE - CONNECTOR	Page:	G
	CODE - DIODE	Page:	H
	CODE - RELAY	Page:	I
	CODE - RESISTOR	Page:	J
	CODE - WIRING KEY	Page:	K
	CODE - FUSE	Page:	L
	CODE - MODULE	Page:	M
	CRUISE CONTROL - DDEC	Page:	5.1
	CB OPTION	Page:	20.5
D	DDEC	Page:	5.1
	DIGITAL CLOCK	Page:	14.1
	DISTRIBUTION 12V, 24V	Page:	1.1
	DISTRIB. 12V DISC., IGN & HOT WIRE	Page:	2.1
	DRIVER'S WINDOW LIFTER	Page:	14.1
E	ENGINE BLOCK HEATER	Page:	12.1
	ENGINE BRAKE SYSTEM	Page:	19.1
	ENGINE CONTROL	Page:	4.1
	ENTRANCE DOOR SEDAN	Page:	16.1
	ETHER COLD START	Page:	8.1
	EXTERIOR LIGHTIHG	Page:	9.1
F	FAN-CLUTCH RADIATOR	Page:	8.1
	FAST IDLE - DDEC	Page:	5.1
	FIRE DETECTOR	Page:	7.2
	FRONT DESTINATION SIGN	Page:	17.1
	FRONT CAMERA	Page:	20.6
	FUEL FILTER WATER DETECTOR	Page:	8.1
	FUEL PRIME PUMP	Page:	12.1
G	GALLEY ACCESSORIES	Page:	23.1
	GROUND SYSTEM	Page:	3.1
H	HIGH BUOY	Page:	18.1
	HOSTESS CHIME	Page:	12.1
I	INTERIOR LIGHTING	Page:	11.1
	INTERCOM	Page:	27.1
K	KNEELING SYSTEM	Page:	18.1
L	LAVATORY	Page:	17.1
	LOW BUOY	Page:	18.1
	LUGGAGE DOOR LOCK	Page:	19.1
M	MIRROR-REAR VIEW	Page:	24.2
P	PARKING BRAKE SWITCH	Page:	8.1
	POWER 12V OUTLET	Page:	14.1
	PRE-HEATER WATER HEATER	Page:	26.1
	PRODRIVER	Page:	8.1
R	RETARDER - WORLD TRANSM.	Page:	19.1
S	SEAT AUDIO SYSTEM	Page :	20.7
	SOUND & VIDEO SYSTEM	Page:	20.1
	SPEAKER PASSENGER	Page:	20.2
	SPEEDOMETER	Page :	7.1
	STEERING CONTROL	Page:	15.1
	SUN VISOR	Page:	14.1
T	TELL TALE LIGHT MODULES	Page	28.1
	TRANSMISSION - WORLD	Page:	6.1
	TRNSMISSION ZF	Page:	6.3
	TACHYMETER	Page :	7.1
W	WHEEL CHAIR LIFT - RICON 9000	Page:	25.2
	WHEEL CHAIR LIFT - STEW. & STEV.	Page:	25.1
	WINDOW AJAR	Page:	7.2
	WINDSHIELD (UP) FAN DEFROSTOR	Page:	22.1
	WIPER & WASHER	Page:	10.1

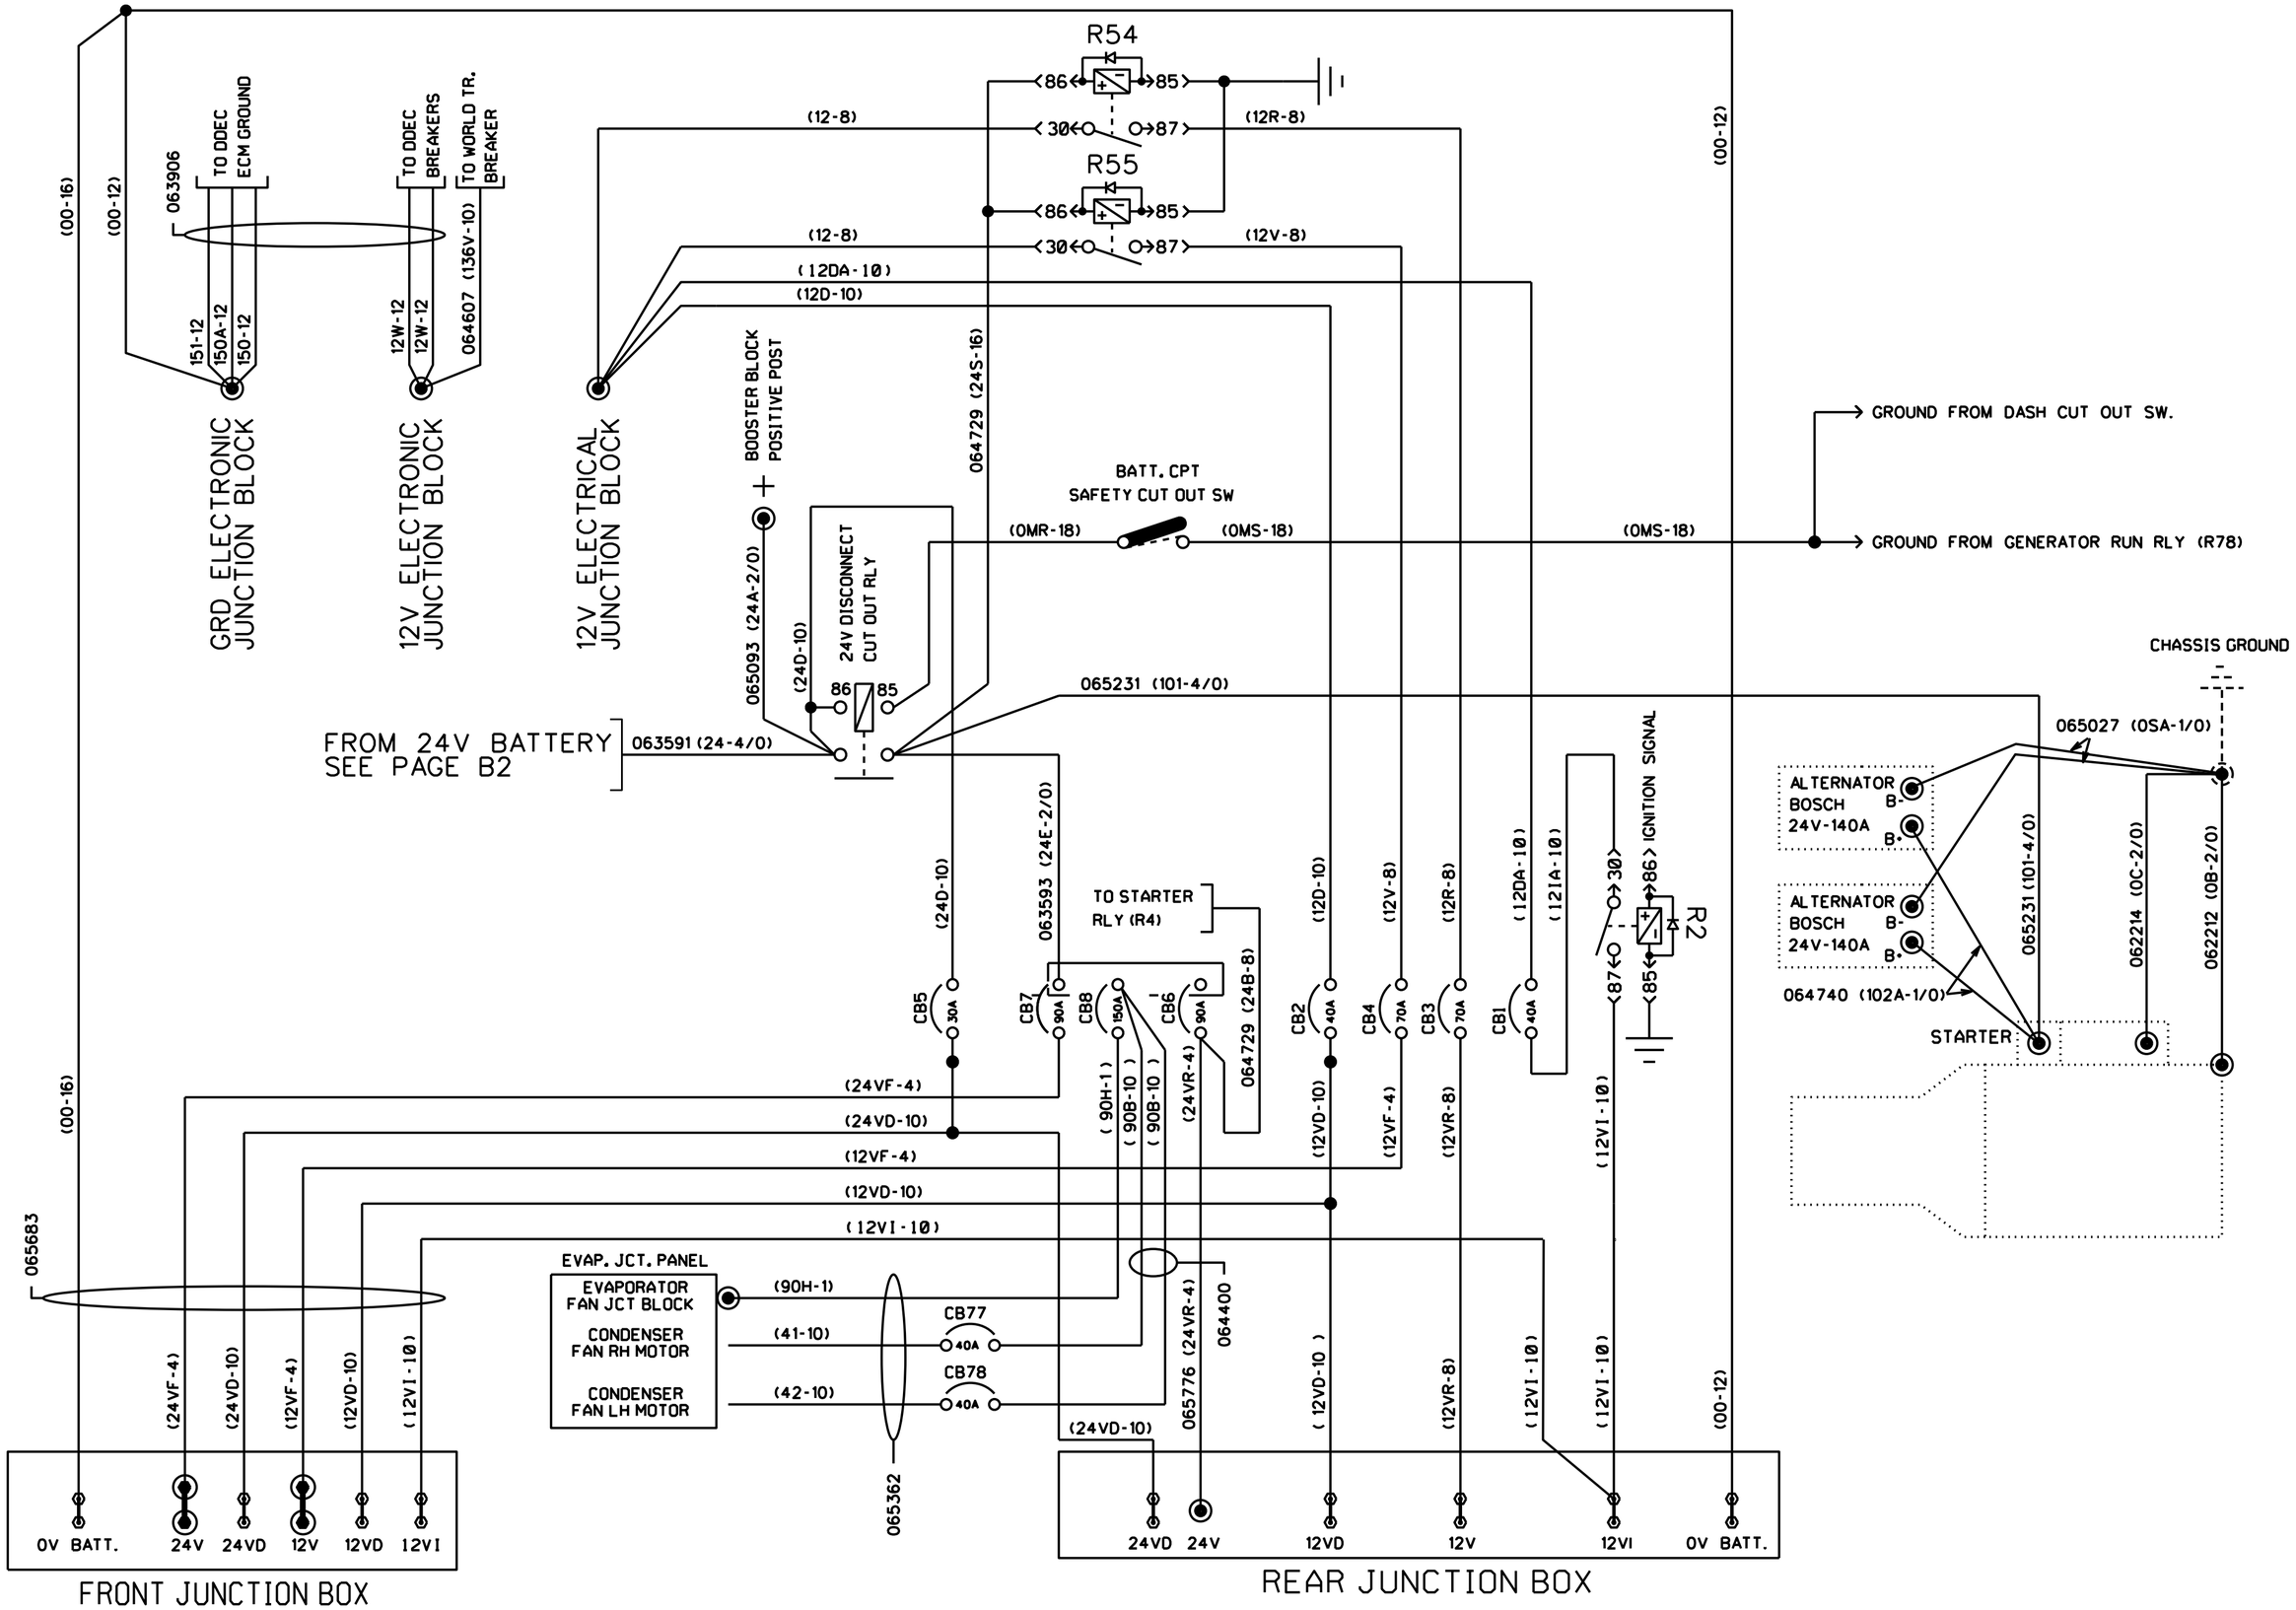

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: B1	REVISION 00

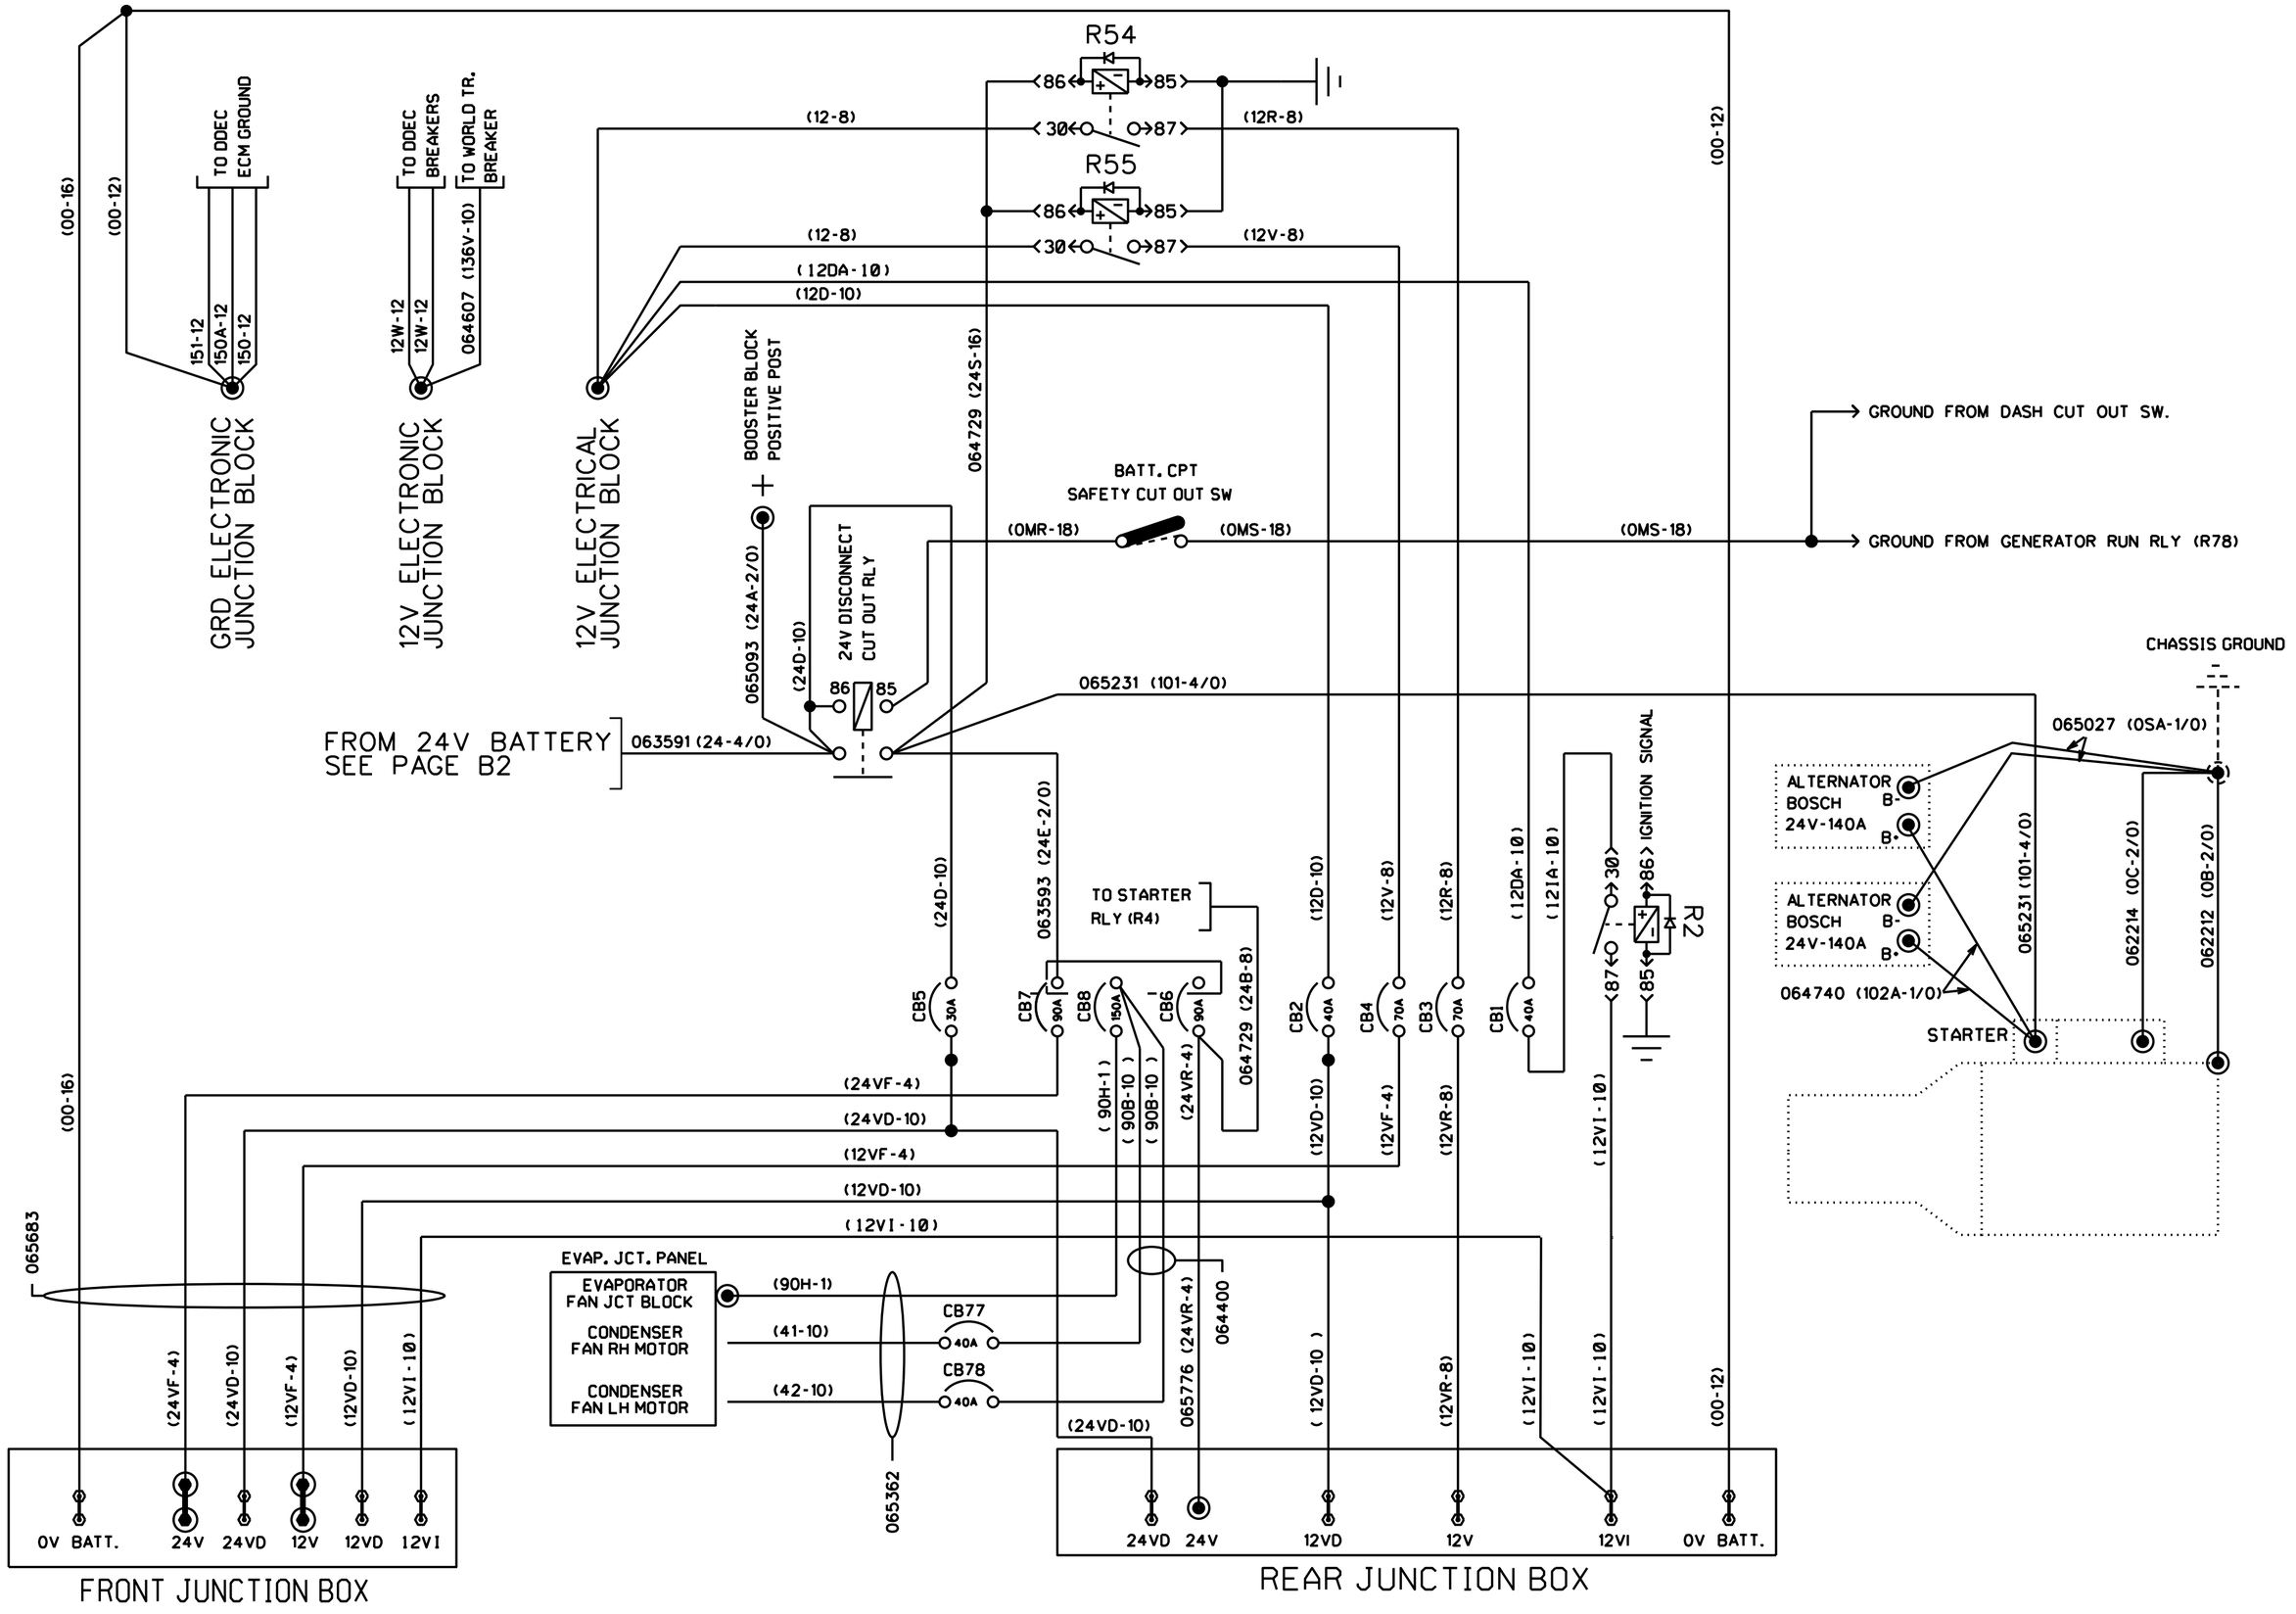

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: B1	REVISION 02

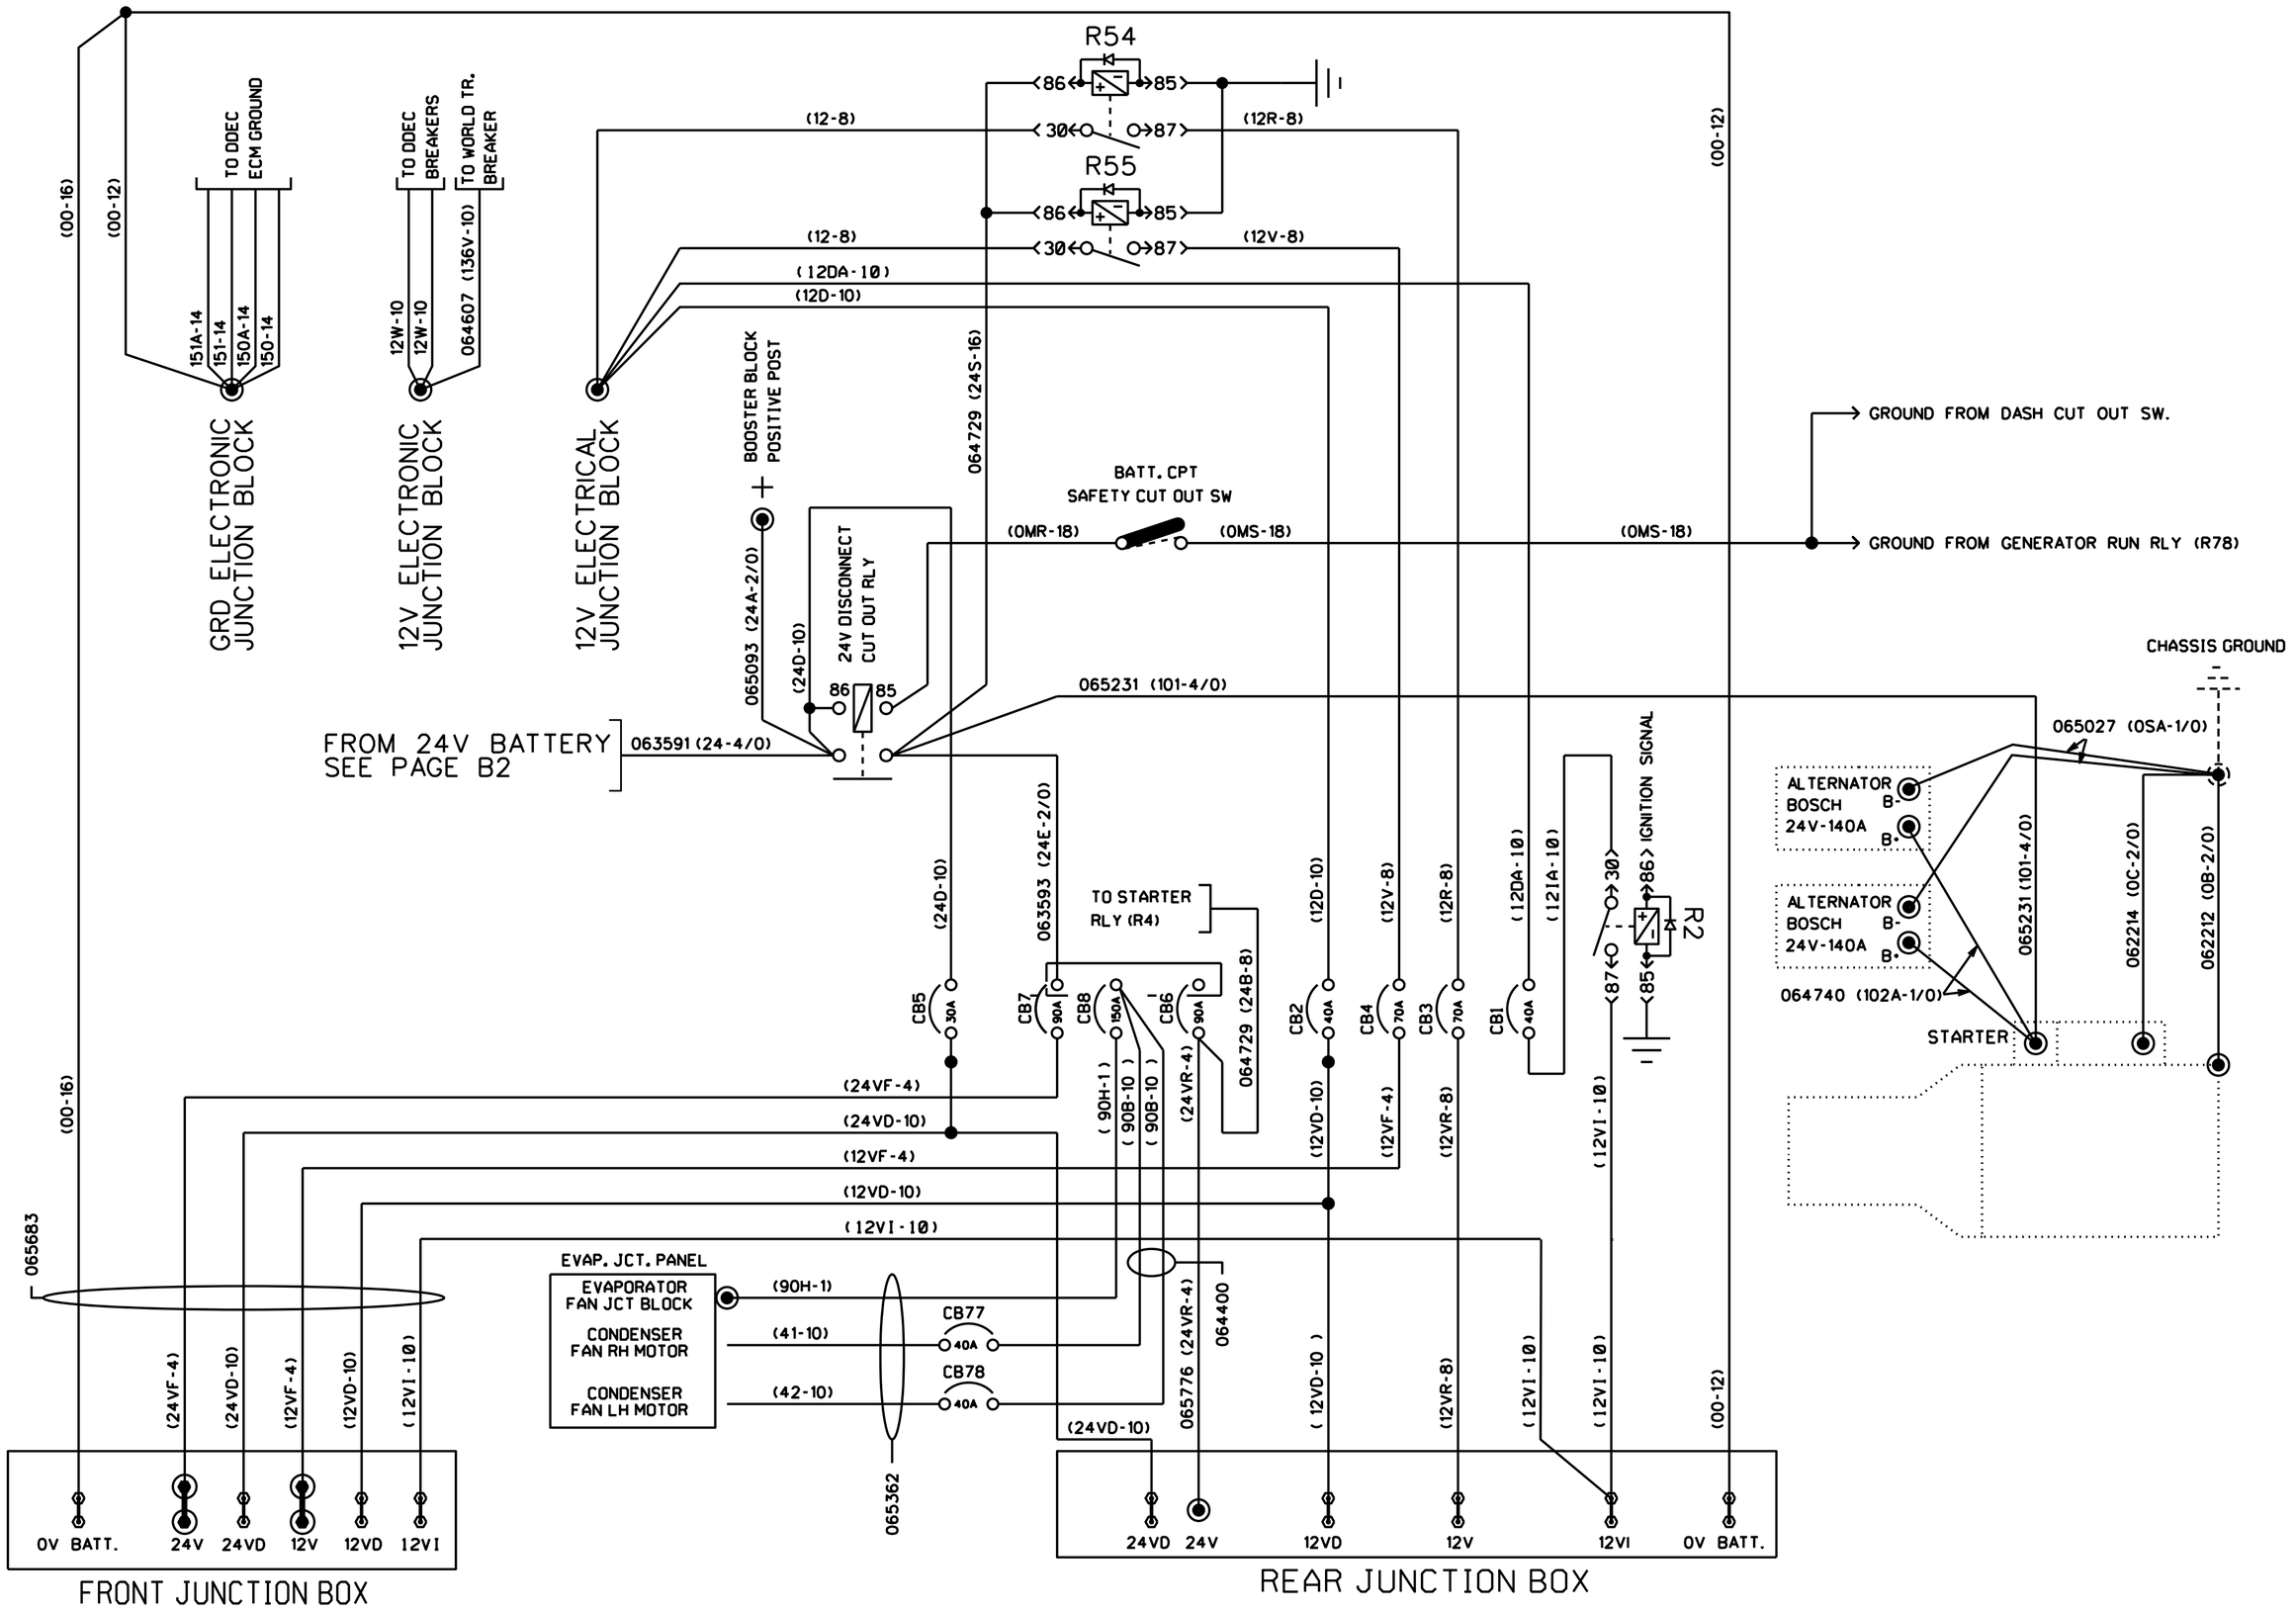

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: B1	REVISION 08

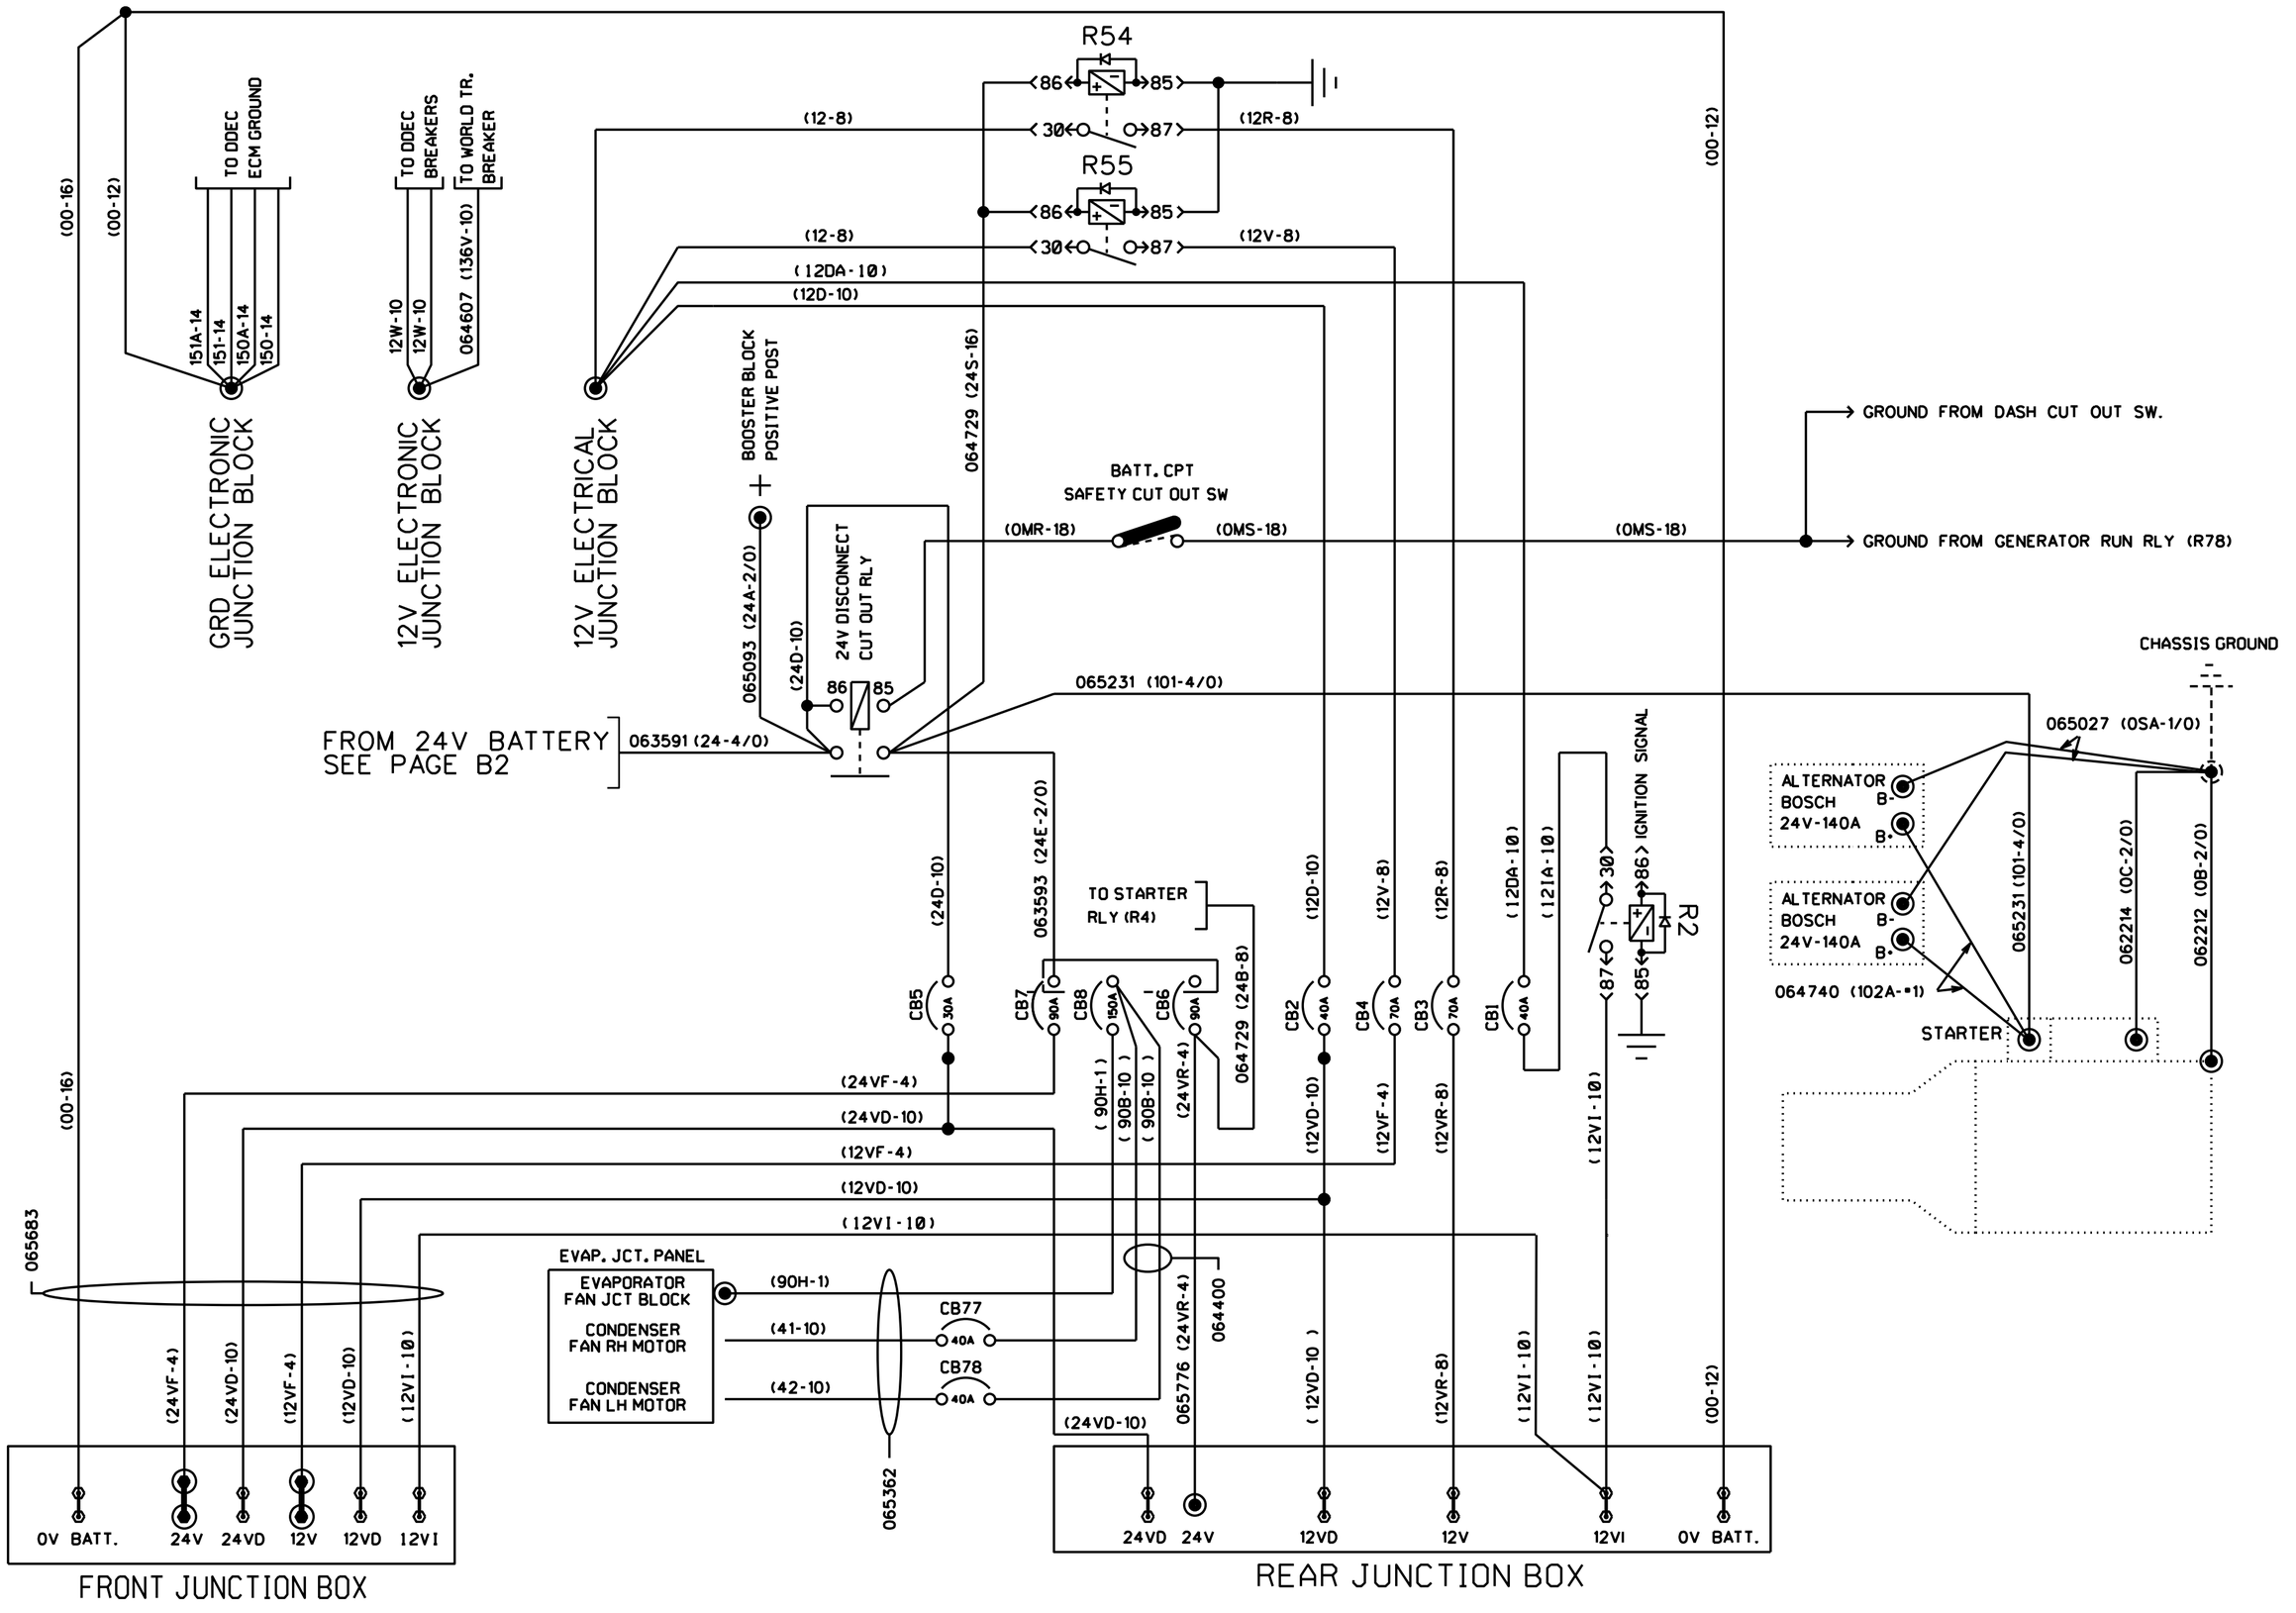

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: B1	REVISION 10

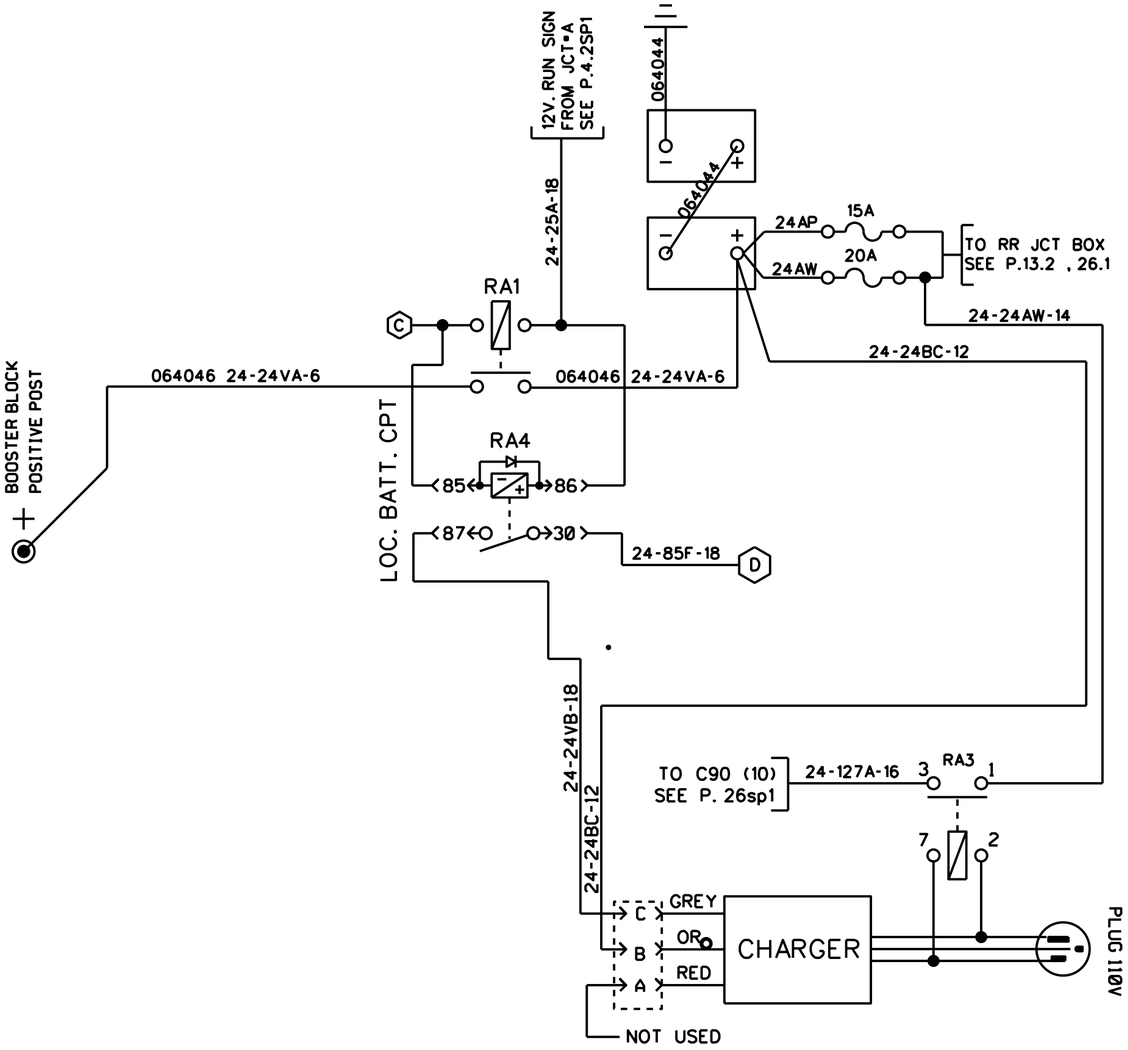

24V. BATTERY AUXILIARY WITH BATTERY CHARGER

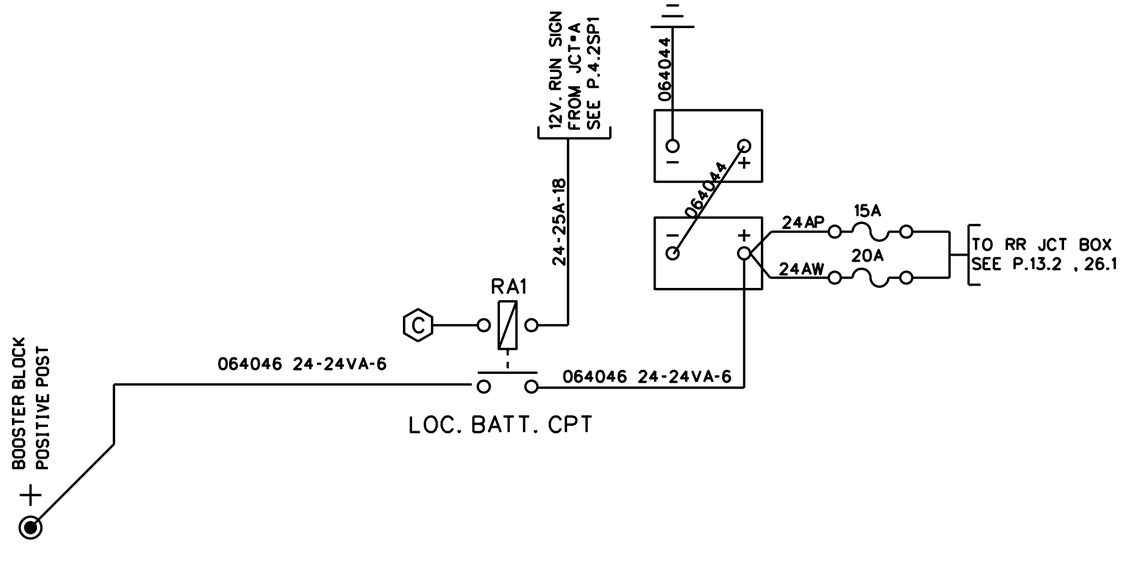

24V. BATTERY AUXILIARY

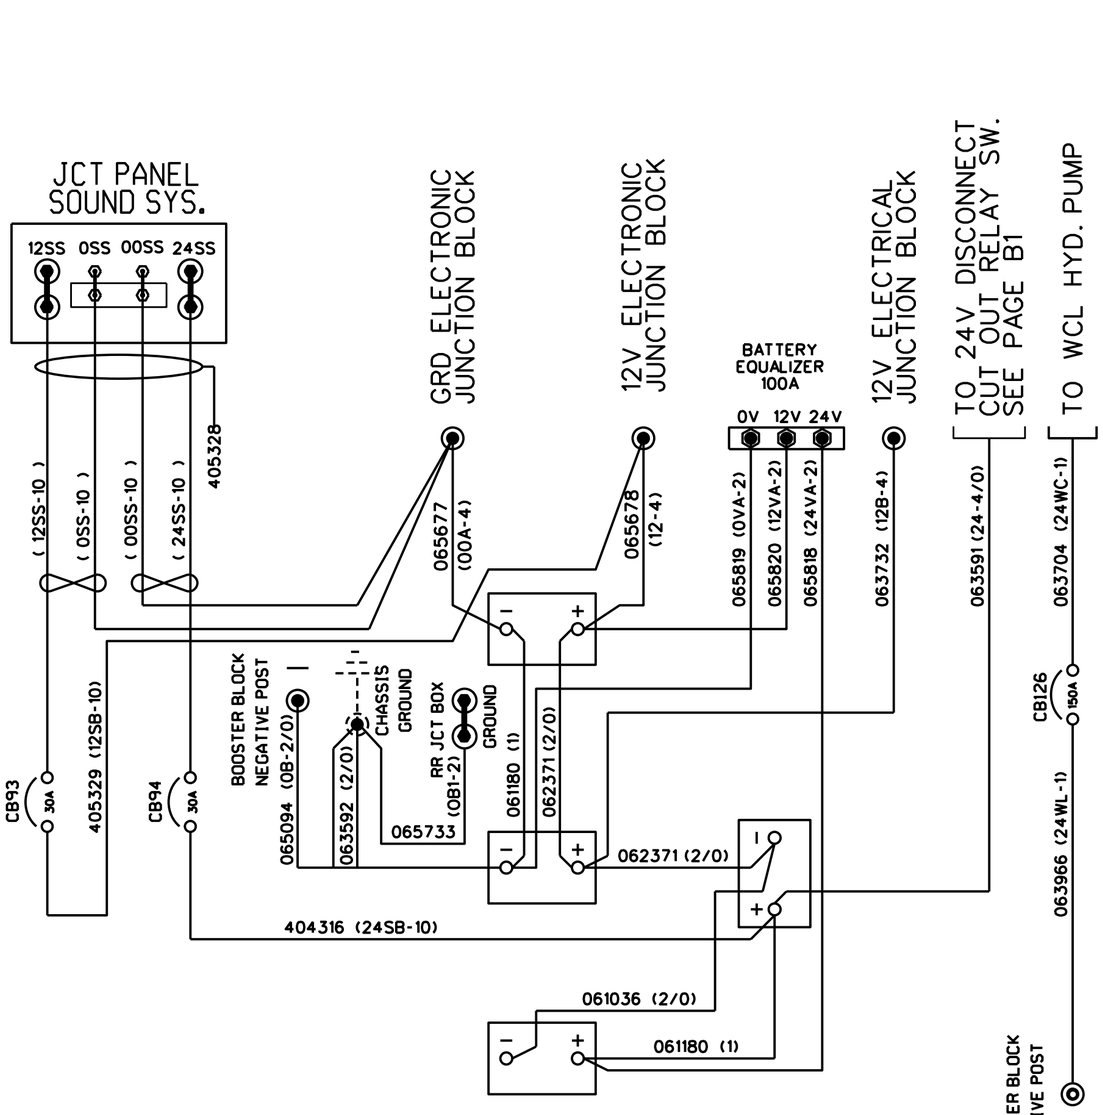

STANDARD BATTERIES

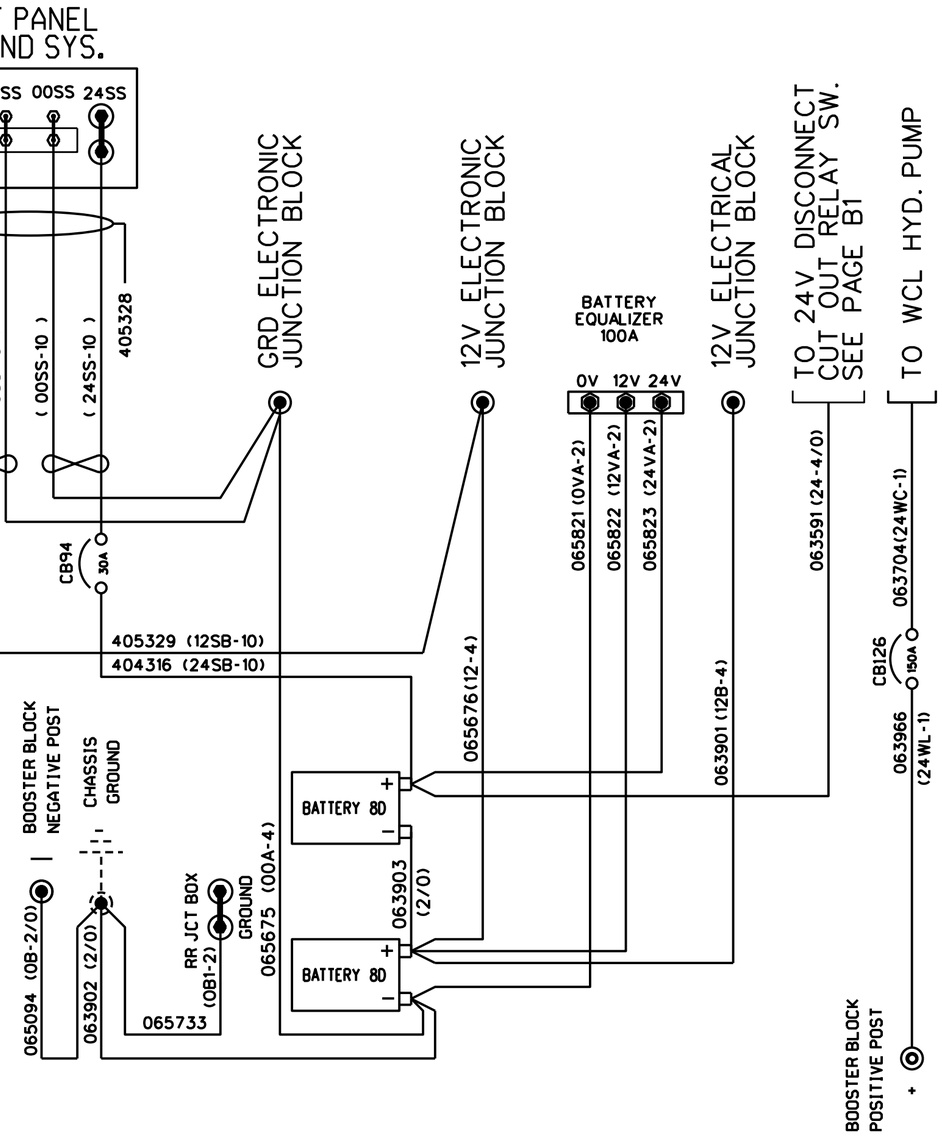

8D BATTERIES

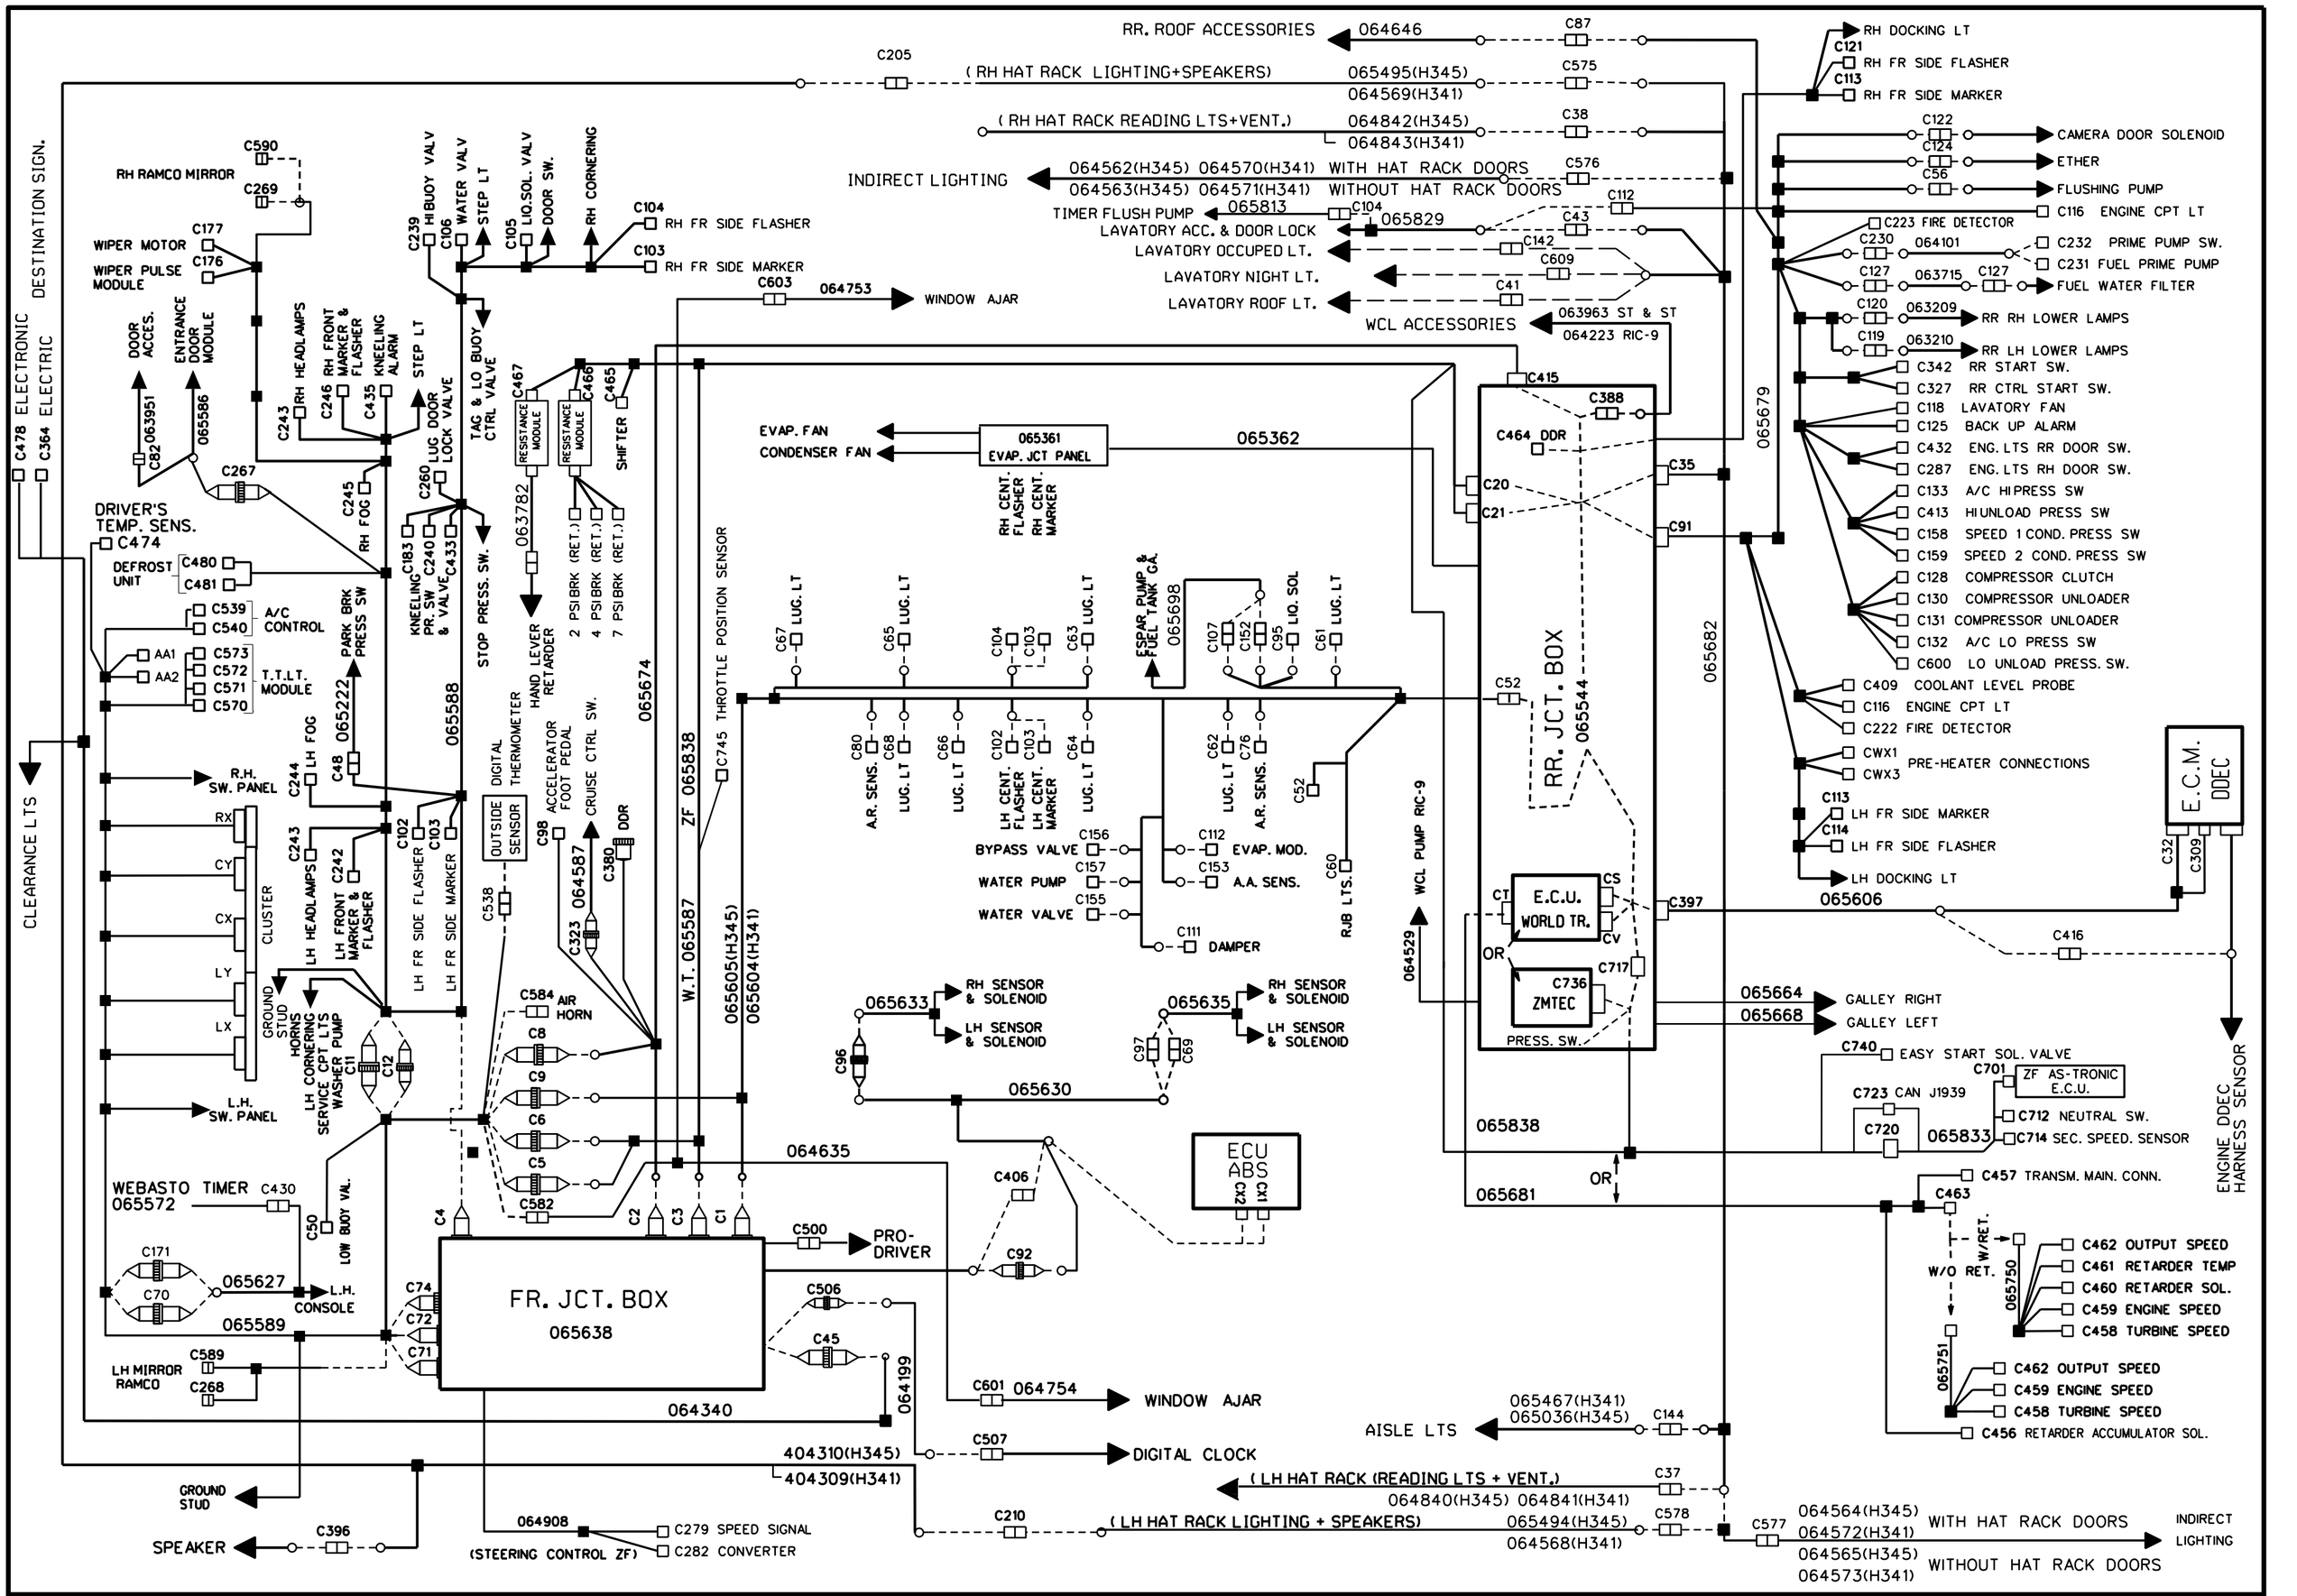

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: C1	REVISION 00

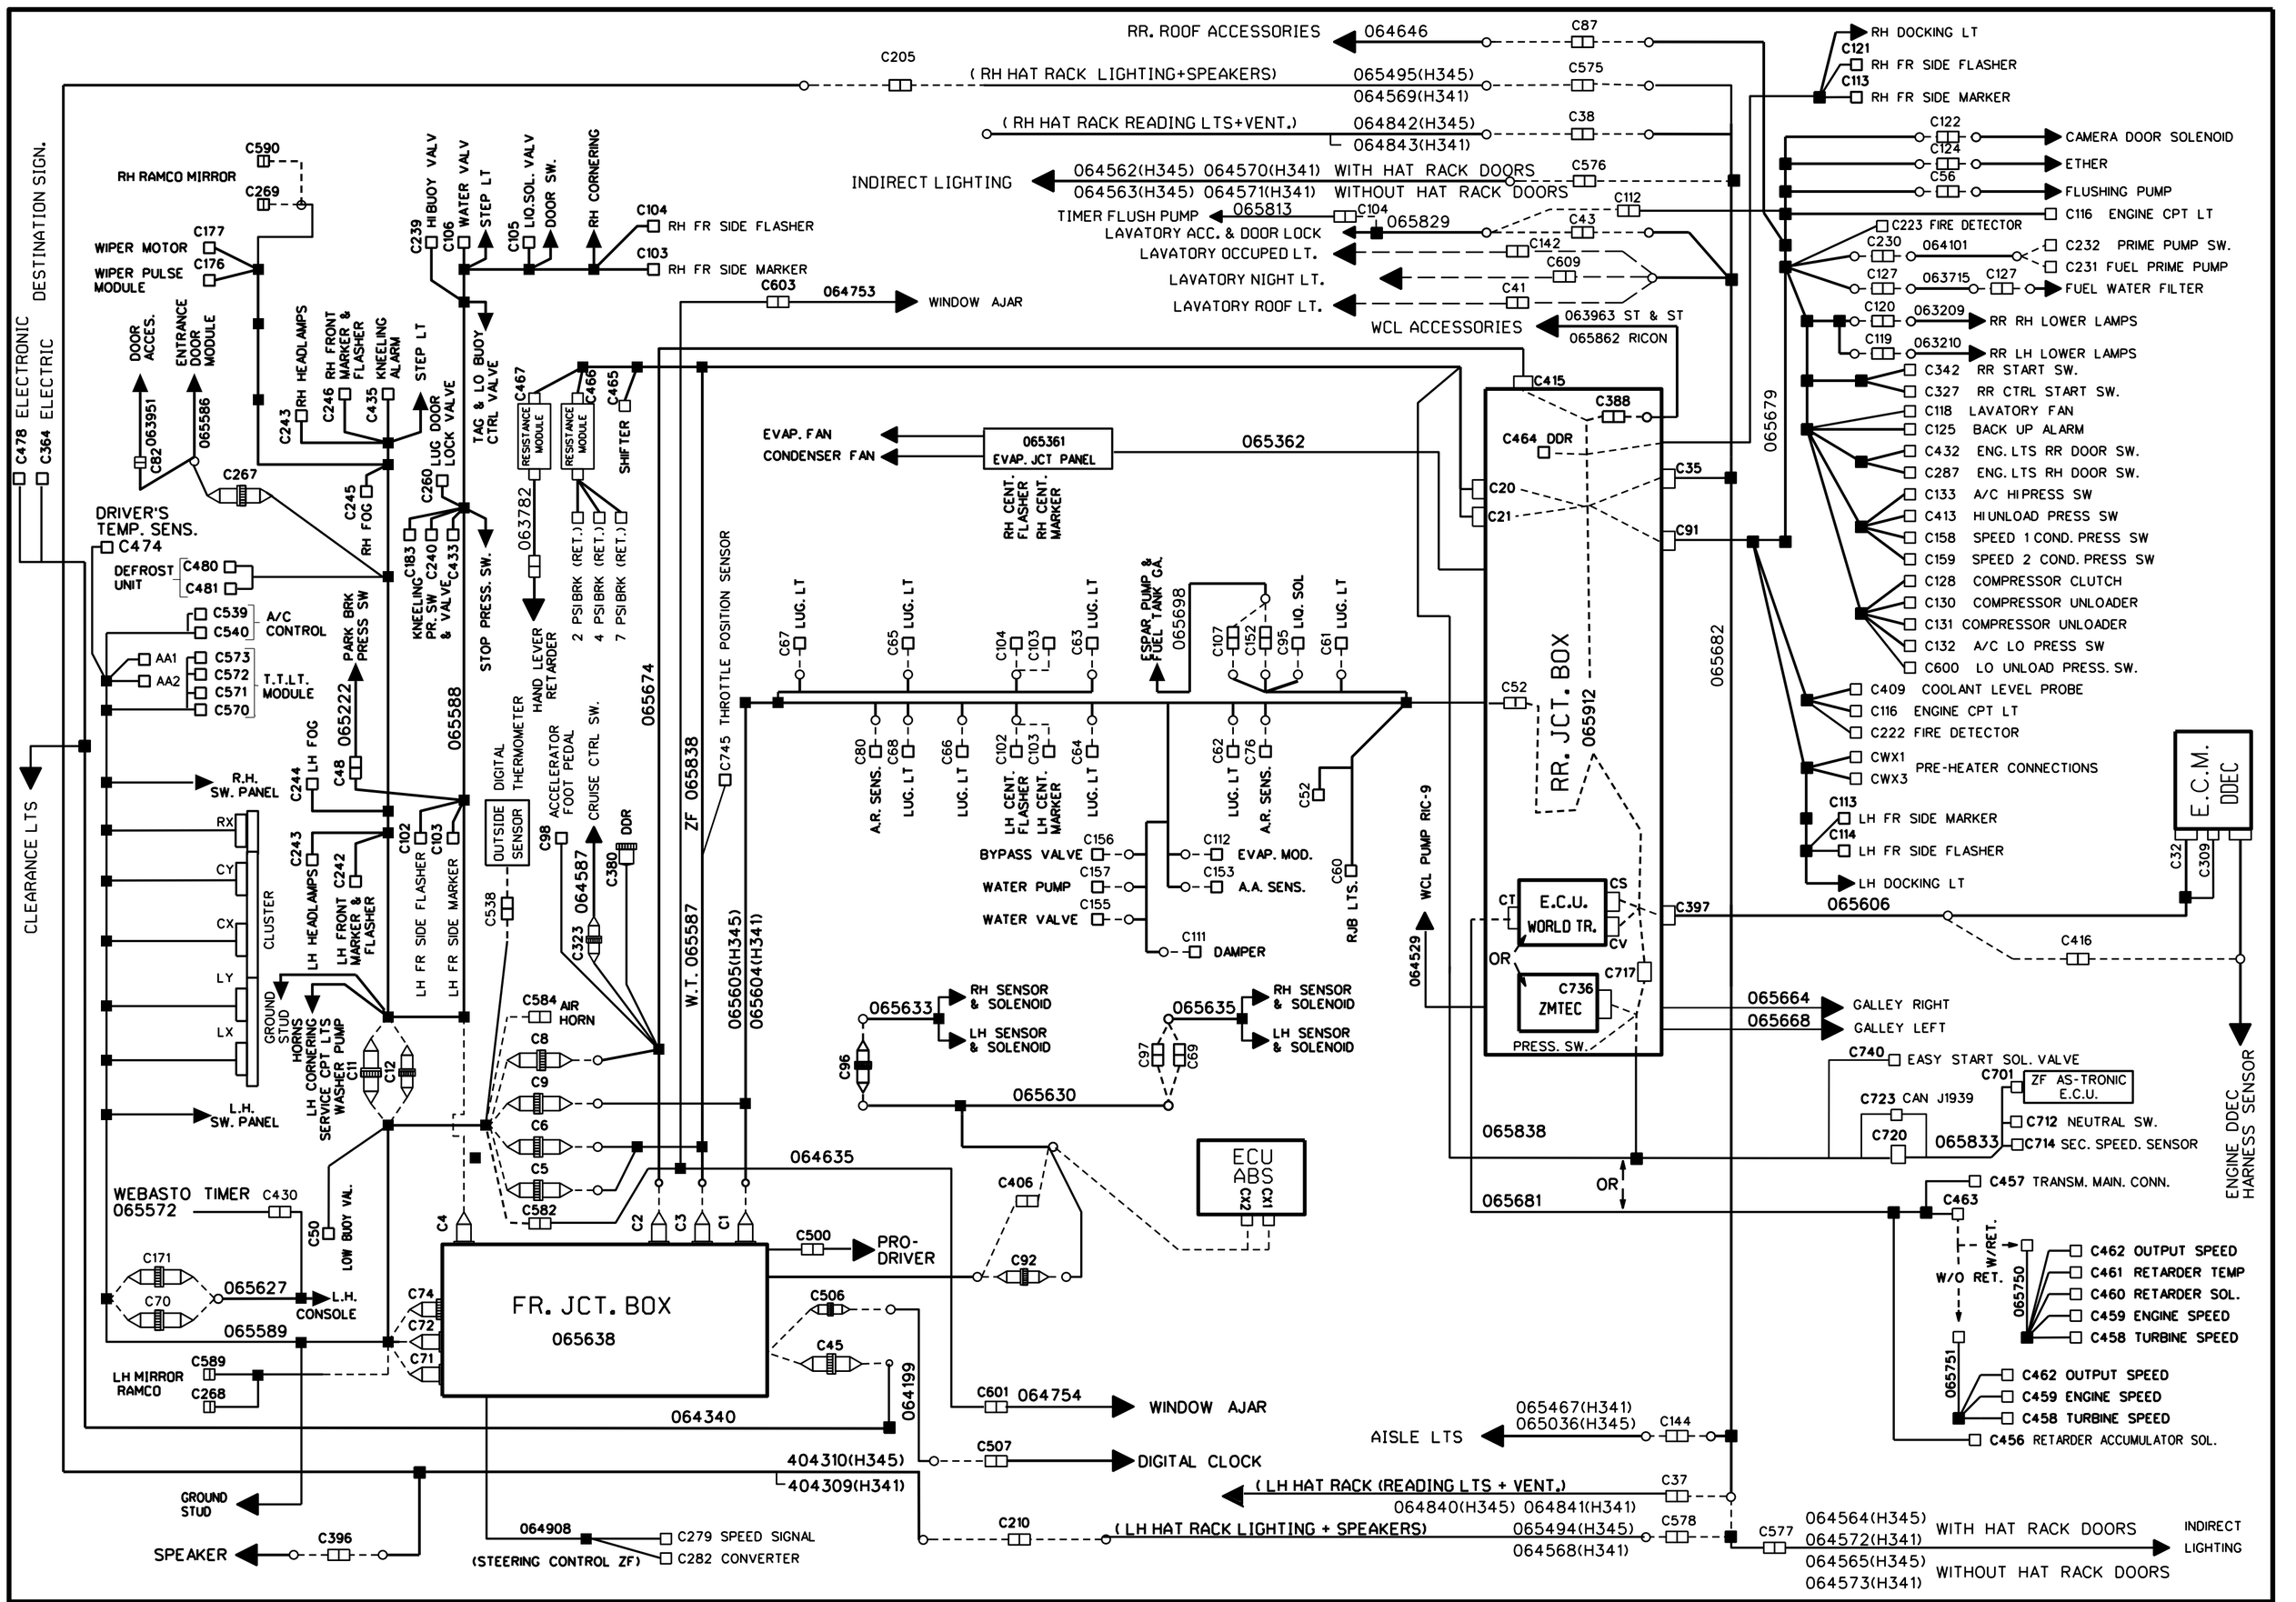
RR. ROOF ACCESSORIES 064646
(RH HAT RACK LIGHTING+SPEAKERS) 065495(H345) 064569(H341)
(RH HAT RACK READING LTS+VENT.) 064842(H345) 064843(H341)
INDIRECT LIGHTING 064562(H345) 064570(H341) WITH HAT RACK DOORS
064563(H345) 064571(H341) WITHOUT HAT RACK DOORS
TIMER FLUSH PUMP 065813
LAVATORY ACC. & DOOR LOCK 065829
LAVATORY OCCUPED LT.
LAVATORY NIGHT LT.
LAVATORY ROOF LT.
WCL ACCESSORIES 063963 ST & ST 065862 RICON
WINDOW AJAR 064753
RH DOCKING LT
RH FR SIDE FLASHER
RH FR SIDE MARKER
CAMERA DOOR SOLENOID
ETHER
FLUSHING PUMP
ENGINE CPT LT
PRIME PUMP SW.
FUEL PRIME PUMP
FUEL WATER FILTER
RR RH LOWER LAMPS
RR LH LOWER LAMPS
RR START SW.
RR CTRL START SW.
LAVATORY FAN
BACK UP ALARM
ENG. LTS RR DOOR SW.
ENG. LTS RH DOOR SW.
A/C HI PRESS SW
HI UNLOAD PRESS SW
SPEED 1 COND. PRESS SW
SPEED 2 COND. PRESS SW
COMPRESSOR CLUTCH
COMPRESSOR UNLOADER
COMPRESSOR UNLOADER
A/C LO PRESS SW
LO UNLOAD PRESS. SW.
COOLANT LEVEL PROBE
ENGINE CPT LT
FIRE DETECTOR
PRE-HEATER CONNECTIONS
LH FR SIDE MARKER
LH FR SIDE FLASHER
LH DOCKING LT
RR. JCT. BOX 065912
065679
065682
065606
E.C.M. DDEC
ENGINE DDEC HARNESS SENSOR
RH RAMCO MIRROR
WIPER MOTOR
WIPER PULSE MODULE
DOOR ACCES.
ENTRANCE DOOR MODULE
RH HEADLAMPS
RH FRONT MARKER & FLASHER
KNEELING ALARM
STEP LT
HI BUOY VALV
WATER VALV
LIO.SOL. VALV
DOOR SW.
RH CORNERING
TAG & LO BUOY CTRL VALVE
LUG DOOR LOCK VALVE
DRIVER'S TEMP. SENS.
DEFROST UNIT
A/C CONTROL
T.T.LT. MODULE
PARK BRK PRESS SW
STOP PRESS. SW.
KNEELING PR. SW & VALVE
RESISTANCE MODULE
SHIFTER
2 PSI BRK (RET.)
4 PSI BRK (RET.)
7 PSI BRK (RET.)
HAND LEVER RETARDER
DIGITAL THERMOMETER
OUTSIDE SENSOR
ACCELERATOR FOOT PEDAL
CRUISE CTRL SW.
DDR
EVAP. FAN
CONDENSER FAN
065361 EVAP. JCT PANEL
065362
RH CENT. FLASHER
RH CENT. MARKER
ESPAR PUMP & FUEL TANK GA. 065698
LIQ. SOL
LUG. LT
A.R. SENS.
LH CENT. FLASHER
LH CENT. MARKER
ZF 065838
C745 THROTTLE POSITION SENSOR
W.T. 065587
065605(H345)
065604(H341)
065674
065588
BYPASS VALVE
WATER PUMP
WATER VALVE
EVAP. MOD.
A.A. SENS.
DAMPER
RJB LTS.
WCL PUMP RIC-9
E.C.U. WORLD TR.
ZMTEC
PRESS. SW.
OR
065664
065668
GALLEY RIGHT
GALLEY LEFT
EASY START SOL. VALVE
ZF AS-TRONIC E.C.U.
CAN J1939
NEUTRAL SW.
SEC. SPEED. SENSOR
065838
065833
065681
TRANSM. MAIN. CONN.
W/RET.
W/O RET.
065750
065751
OUTPUT SPEED
RETARDER TEMP
RETARDER SOL.
ENGINE SPEED
TURBINE SPEED
RETARDER ACCUMULATOR SOL.
RH SENSOR & SOLENOID
LH SENSOR & SOLENOID
065633
065635
065630
ECU ABS
CX1
CX2
FR. JCT. BOX 065638
PRO-DRIVER
WEBASTO TIMER 065572
065627
065589
L.H. CONSOLE
L.H. SW. PANEL
R.H. SW. PANEL
CLUSTER
LH HEADLAMPS
LH FRONT MARKER & FLASHER
LH FR SIDE FLASHER
LH FR SIDE MARKER
LH CORNERING
SERVICE CPT LTS
WASHER PUMP
HORNS
AIR HORN
GROUND STUD
LOW BUOY VAL.
LH MIRROR RAMCO
WINDOW AJAR 064754
064340
064199
404310(H345)
404309(H341)
DIGITAL CLOCK
AISLE LTS 065467(H341) 065036(H345)
(LH HAT RACK (READING LTS + VENT.) 064840(H345) 064841(H341)
(LH HAT RACK LIGHTING + SPEAKERS) 065494(H345) 064568(H341)
064564(H345) 064572(H341) WITH HAT RACK DOORS
064565(H345) 064573(H341) WITHOUT HAT RACK DOORS
INDIRECT LIGHTING
SPEAKER
064908
(STEERING CONTROL ZF)
C279 SPEED SIGNAL
C282 CONVERTER
064529
065605
065606
065679
065682
065681
065750
065751
065838
065833
065589
065572
065627
065630
065633
065635
065638
065672
065587
065588
065674
065698
065912
065915
065916
065917
065918
065919
065920
065921
065922
065923
065924
065925
065926
065927
065928
065929
065930
065931
065932
065933
065934
065935
065936
065937
065938
065939
065940
065941
065942
065943
065944
065945
065946
065947
065948
065949
065950
065951
065952
065953
065954

RR. ROOF ACCESSORIES 064646 C87
(RH HAT RACK LIGHTING+SPEAKERS) 065495(H345) 064569(H341) C575
(RH HAT RACK READING LTS+VENT.) 064842(H345) 064843(H341) C38
INDIRECT LIGHTING 064562(H345) 064570(H341) 064563(H345) 064571(H341) WITH HAT RACK DOORS WITHOUT HAT RACK DOORS C576
TIMER FLUSH PUMP 065813 C104
LAVATORY ACC. & DOOR LOCK 065829 C43
LAVATORY OCCUPED LT. C142
LAVATORY NIGHT LT. C609
LAVATORY ROOF LT. C41
WCL ACCESSORIES 063963 ST & ST 065862 RICON
C205 C112

RH DOCKING LT C121
RH FR SIDE FLASHER
C113 RH FR SIDE MARKER
C122 CAMERA DOOR SOLENOID
C124 ETHER
C56 FLUSHING PUMP
C116 ENGINE CPT LT
C223 FIRE DETECTOR
C230 064101 C232 PRIME PUMP SW.
C231 FUEL PRIME PUMP
C127 063715 C127 FUEL WATER FILTER
C120 064334 RR RH LOWER LAMPS
C119 064335 RR LH LOWER LAMPS
C342 RR START SW.
C327 RR CTRL START SW.
C118 LAVATORY FAN
C125 BACK UP ALARM
C432 ENG. LTS RR DOOR SW.
C287 ENG. LTS RH DOOR SW.
C133 A/C HI PRESS SW
C413 HI UNLOAD PRESS SW
C158 SPEED 1 COND. PRESS SW
C159 SPEED 2 COND. PRESS SW
C128 COMPRESSOR CLUTCH
C130 COMPRESSOR UNLOADER
C131 COMPRESSOR UNLOADER
C132 A/C LO PRESS SW
C600 LO UNLOAD PRESS. SW.
C409 COOLANT LEVEL PROBE
C116 ENGINE CPT LT
C222 FIRE DETECTOR
CWX1 CWX3 PRE-HEATER CONNECTIONS
C113 LH FR SIDE MARKER
C114 LH FR SIDE FLASHER
LH DOCKING LT
065606
C416
C24
065679
065682
C415
C388
C464 DDR
C35
C91
C20
C21
C52
RR. JCT. BOX
065912
E.C.U. WORLD TR.
CT CS CV
C397
OR
C736 ZMTEC
C717
PRESS. SW.
065664 GALLEY RIGHT
065668 GALLEY LEFT
065877
C701 ZF AS-TRONIC E.C.U.
C723 CAN J1939
C720
C712 NEUTRAL SW.
065833
C714 SEC. SPEED. SENSOR
C740 EASY START SOL. VALVE
065838
OR
065681
C457 TRANSM. MAIN. CONN.
C463
W/RET.
W/O RET.
065750
C462 OUTPUT SPEED
C461 RETARDER TEMP
C460 RETARDER SOL.
C459 ENGINE SPEED
C458 TURBINE SPEED
065751
C462 OUTPUT SPEED
C459 ENGINE SPEED
C458 TURBINE SPEED
C456 RETARDER ACCUMULATOR SOL.
E.C.M. DDEC
C32 C309 C47
ENGINE DDEC HARNESS SENSOR
064529 WCL PUMP
RJB LTS.

RH RAMCO MIRROR
C590 C269
WIPER MOTOR C177
WIPER PULSE MODULE C176
C241 C242 C247
065477
C243 C246 C435
DOOR ACCES. C82 063951
ENTRANCE DOOR MODULE 065586
KNEELING ALARM
STEP LT
C239 HI BUOY VALV
C106 WATER VALV
C105 LIQ.SOL. VALV
DOOR SW.
RH CORNERING
C104 RH FR SIDE FLASHER
C103 RH FR SIDE MARKER
C603 064753 WINDOW AJAR
C478 ELECTRONIC
C364 ELECTRIC
DESTINATION SIGN.
C267
C245 RH FOG
C260 LUG DOOR LOCK VALVE
TAG & LO BUOY CTRL VALVE
C467 C466 C465
RESISTANCE MODULE
SHIFTER
DRIVER'S TEMP. SENS. C474
DEFROST UNIT C480 C481
C539 C540 A/C CONTROL
AA1 AA2 C573 C572 C571 C570 T.T.L.T. MODULE
PARK BRK PRESS SW
KNEELING PR. SW C183
& VALVE C240 C433
STOP PRESS. SW.
063782
2 PSI BRK (RET.)
4 PSI BRK (RET.)
7 PSI BRK (RET.)
HAND LEVER RETARDER
065674
C745 THROTTLE POSITION SENSOR
DOOR ZF 065838
EVAP. FAN
CONDENSER FAN
065361 EVAP. JCT PANEL
065362
RH CENT. FLASHER
RH CENT. MARKER
C67 LUG. LT
C65 LUG. LT
C104 C103 LUG. LT
C63 LUG. LT
ESPAR PUMP & FUEL TANK G.A. 065698
C107 C152 C95 LIQ. SOL
C61 LUG. LT
C80 A.R. SENS.
C68 LUG. LT
C66 LUG. LT
C102 LH CENT. FLASHER
C103 LH CENT. MARKER
C64 LUG. LT
C62 LUG. LT
C76 A.R. SENS.
C52
BYPASS VALVE C156
WATER PUMP C157
WATER VALVE C155
C112 EVAP. MOD.
C153 A.A. SENS.
C111 DAMPER
C60 RJB LTS.
WCL PUMP RIC-9
R.H. SW. PANEL
RX CY CX LY LX
CLUSTER
GROUND STUD
C241 C242 C247
065477
LH FRONT MARKER & FLASHER
C244 LH FOG
C48 065222
065588
DIGITAL OUTSIDE THERMOMETER SENSOR
ACCELERATOR FOOT PEDAL
CRUISE CTRL SW.
C538
C98
C323 064587
C380 DDR
LH FR SIDE FLASHER
LH FR SIDE MARKER
W.T. 065587 OR ZF
065605(H345)
065604(H341)
C584 AIR HORN
C8 C9 C6 C5 C582
C4 C2 C3 C1
HORNS
LH CORNERING
SERVICE CPT LTS
WASHER PUMP
C11 C12
L.H. SW. PANEL
065633 RH SENSOR & SOLENOID
LH SENSOR & SOLENOID
065635 RH SENSOR & SOLENOID
LH SENSOR & SOLENOID
C96 C97 C69
065630
ECU ABS CX2 CX1
064635
C406
C92
C500 PRO-DRIVER
WEBASTO TIMER C430
065572
C50 LOW BUOY VAL.
C171 C70
065627
L.H. CONSOLE
065589
FR. JCT. BOX
065638
C74 C72 C71
C506 C45
064199
C601 064754 WINDOW AJAR
064340
C507 DIGITAL CLOCK
404310(H345)
404309(H341)
LH MIRROR RAMCO C589 C246
GROUND STUD
SPEAKER C396
064908 C279 SPEED SIGNAL
C282 CONVERTER
(STEERING CONTROL ZF)
C210
(LH HAT RACK (READING LTS + VENT.) 064840(H345) 064841(H341) C37
(LH HAT RACK LIGHTING + SPEAKERS) 065494(H345) 064568(H341) C578
C577 064564(H345) 064572(H341) WITH HAT RACK DOORS
064565(H345) 064573(H341) WITHOUT HAT RACK DOORS
INDIRECT LIGHTING
AISLE LTS 065467(H341) 065036(H345) C144

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: C1	REVISION 02

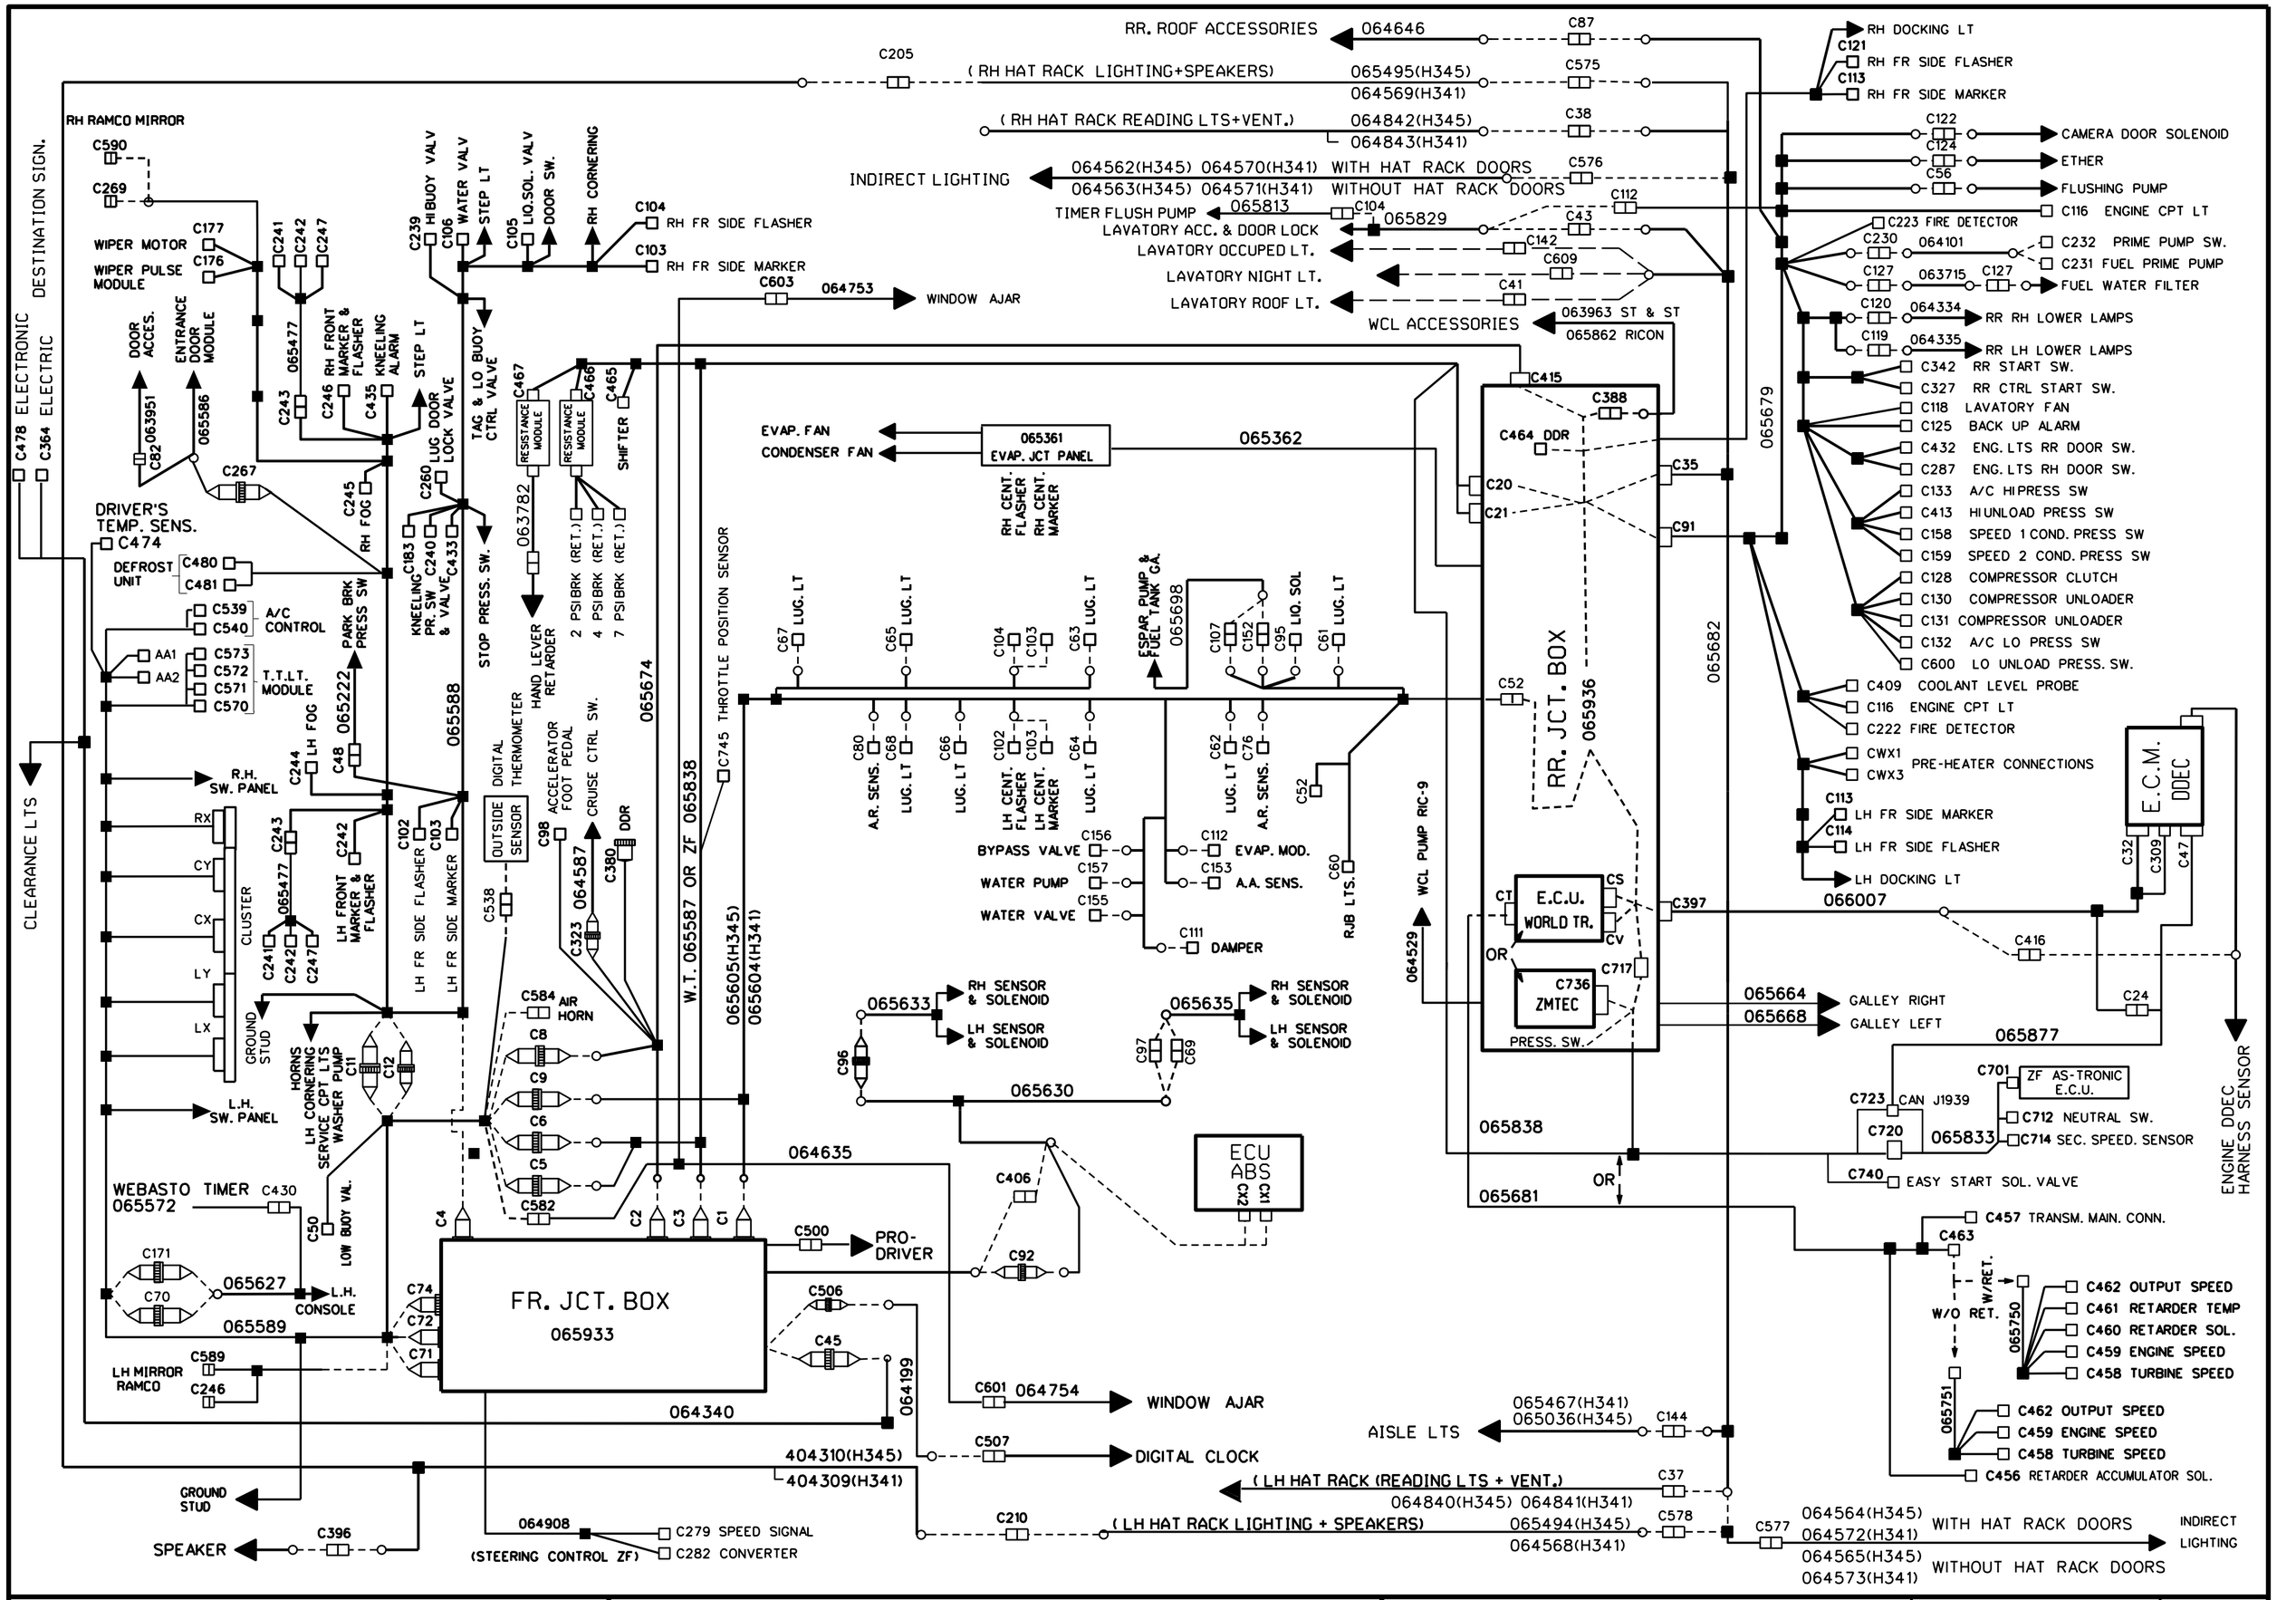

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: C1	REVISION 04

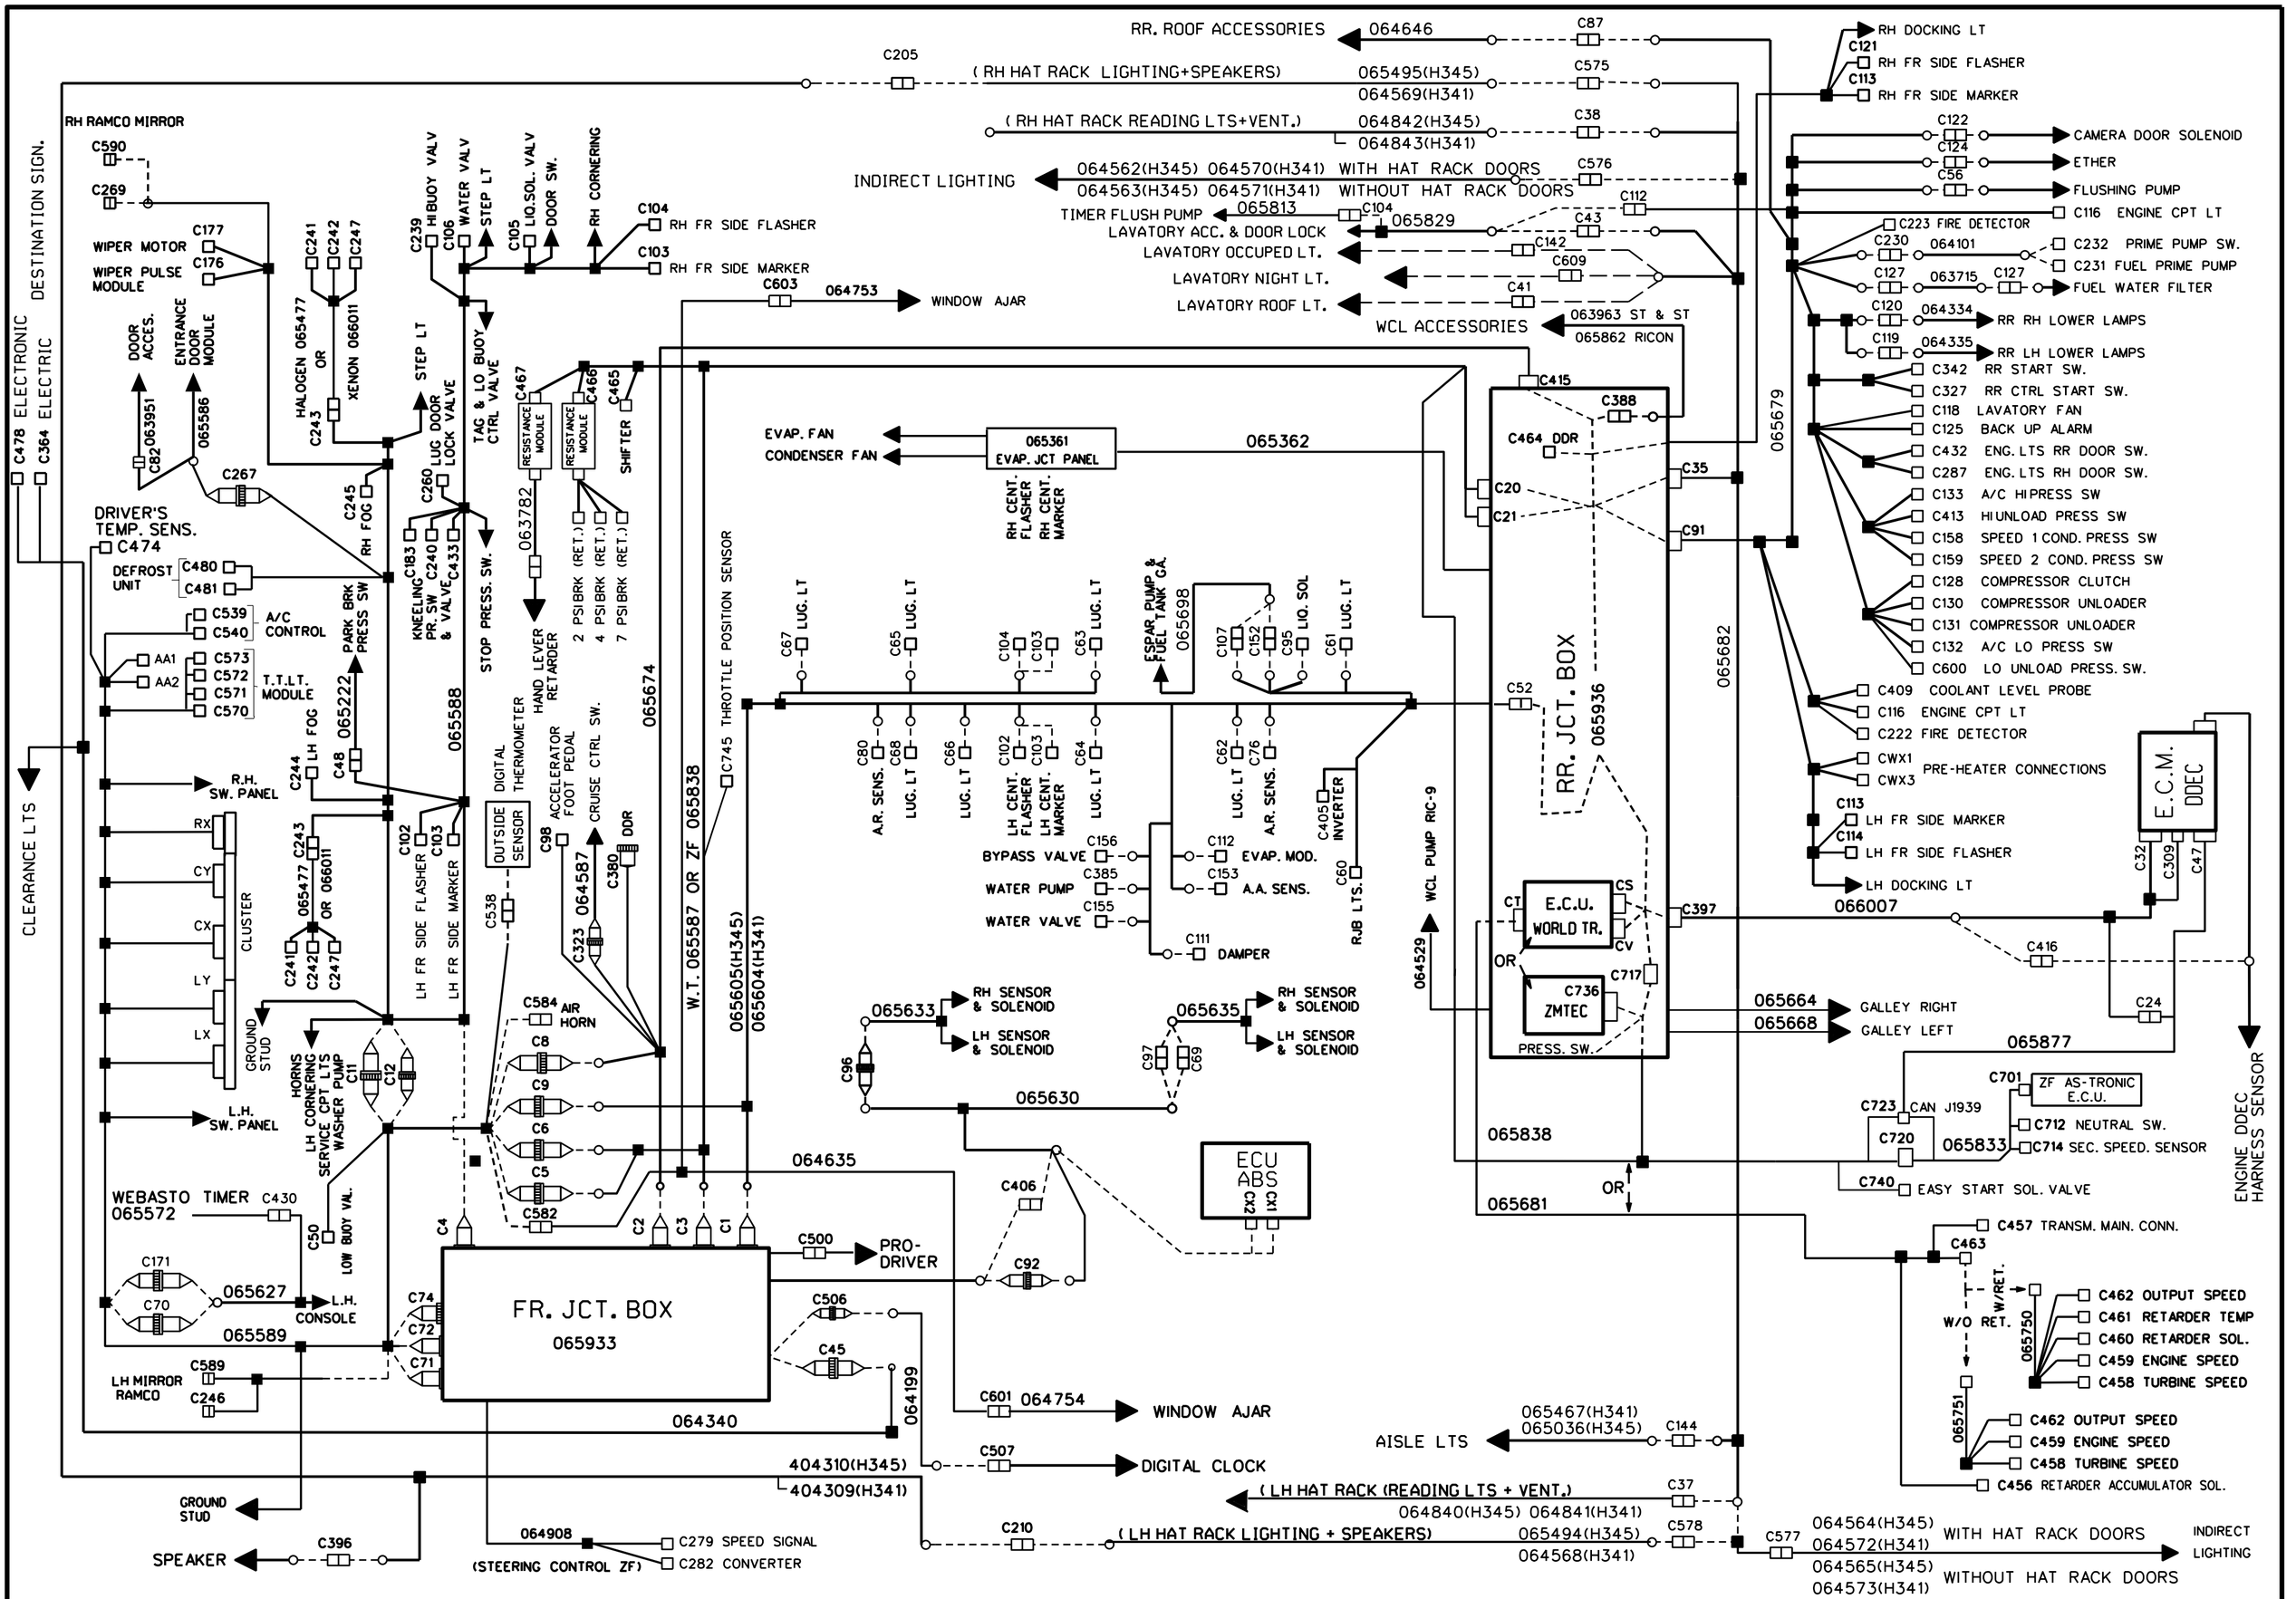

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: C1	REVISION 07

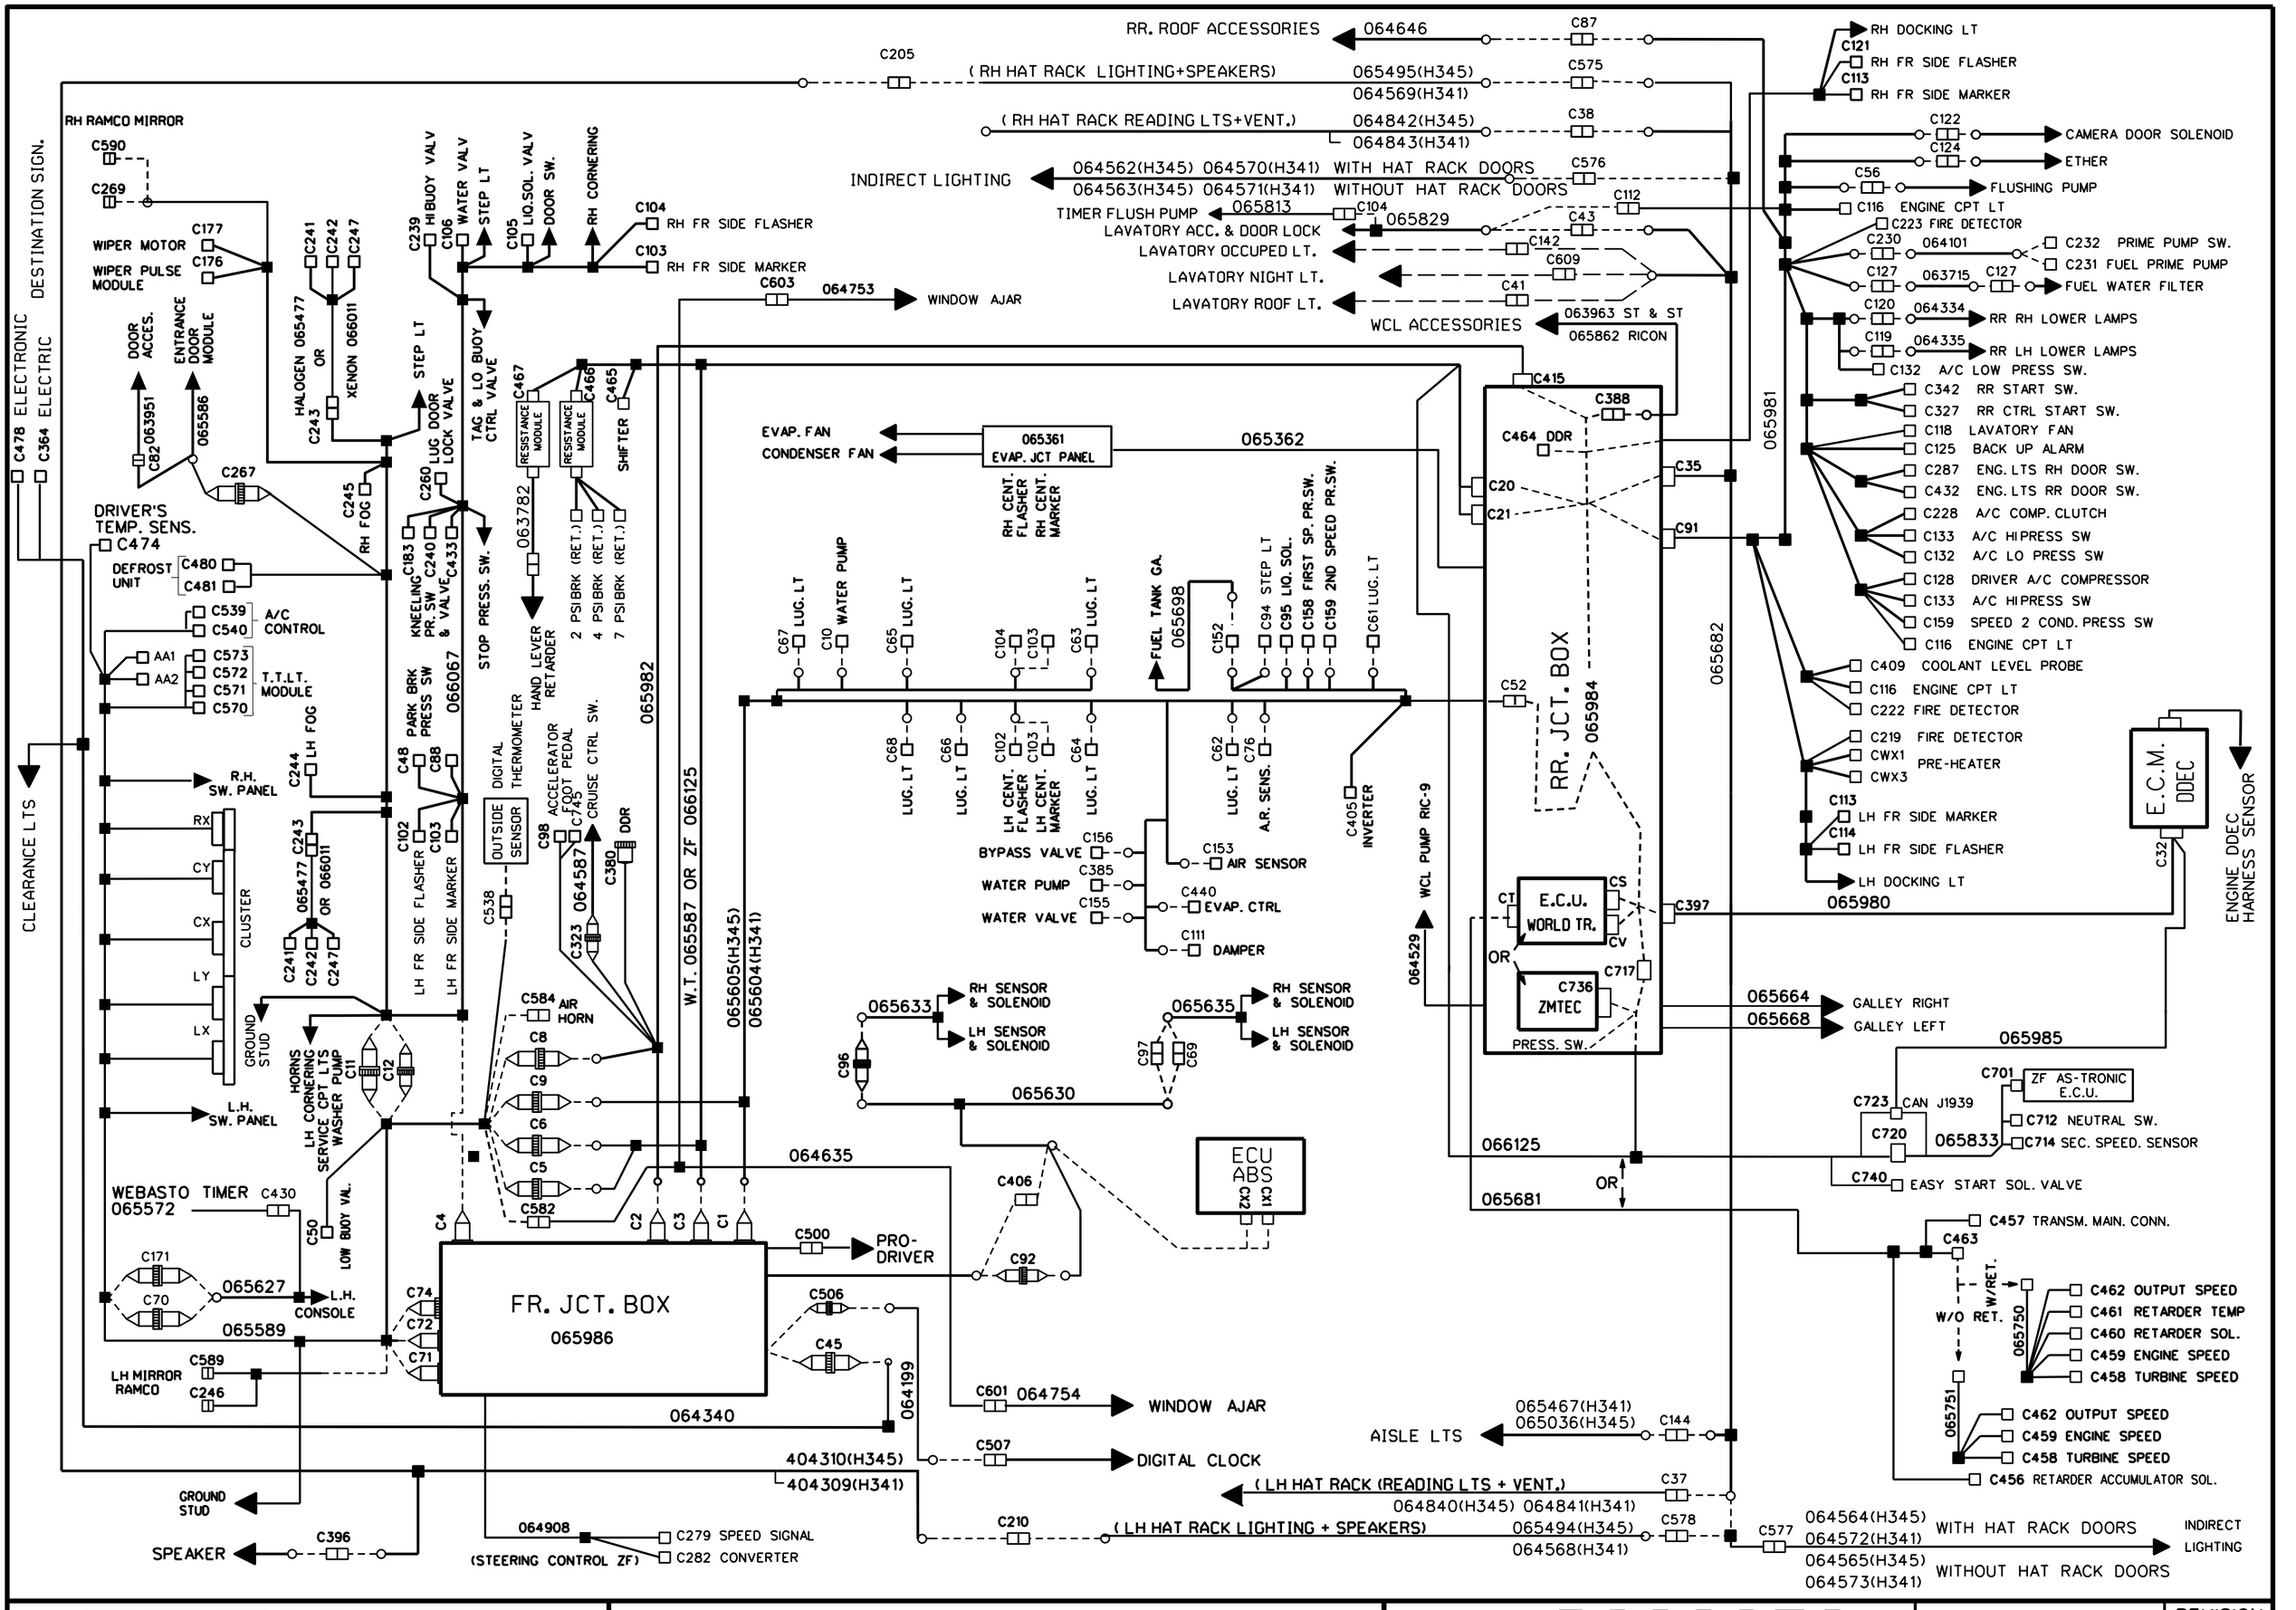

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: C1	REVISION 08

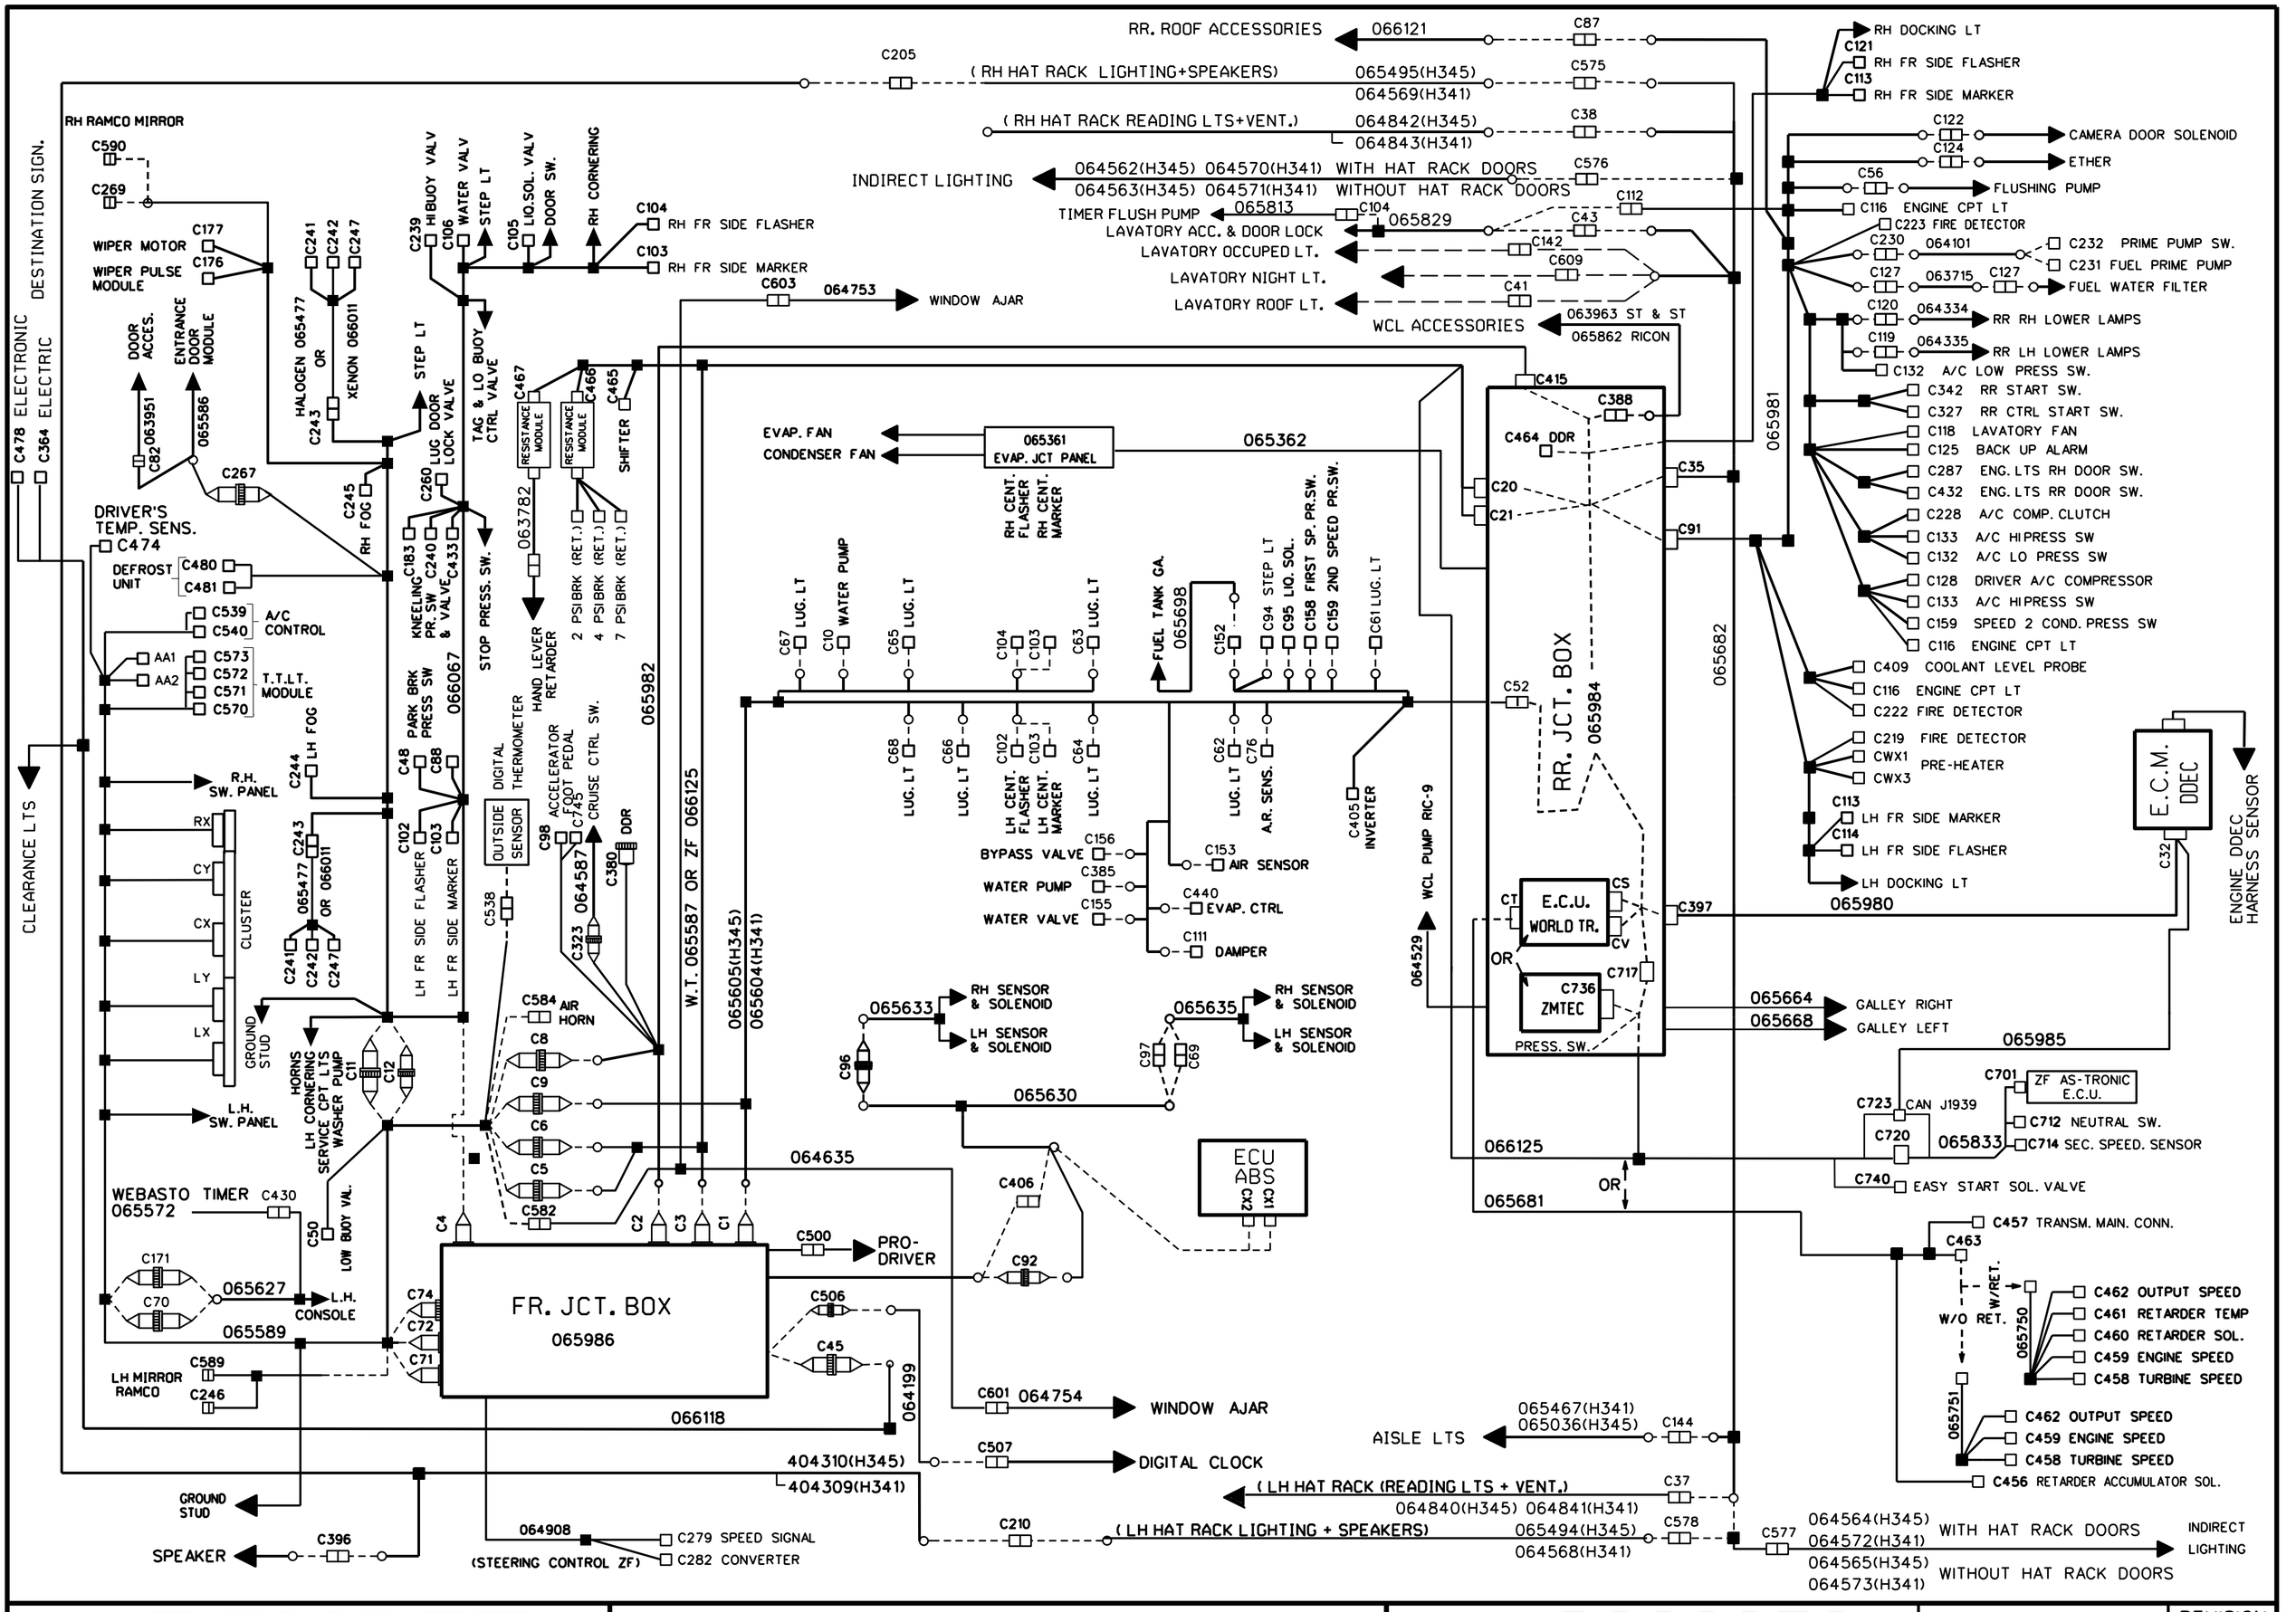

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: C1	REVISION 10

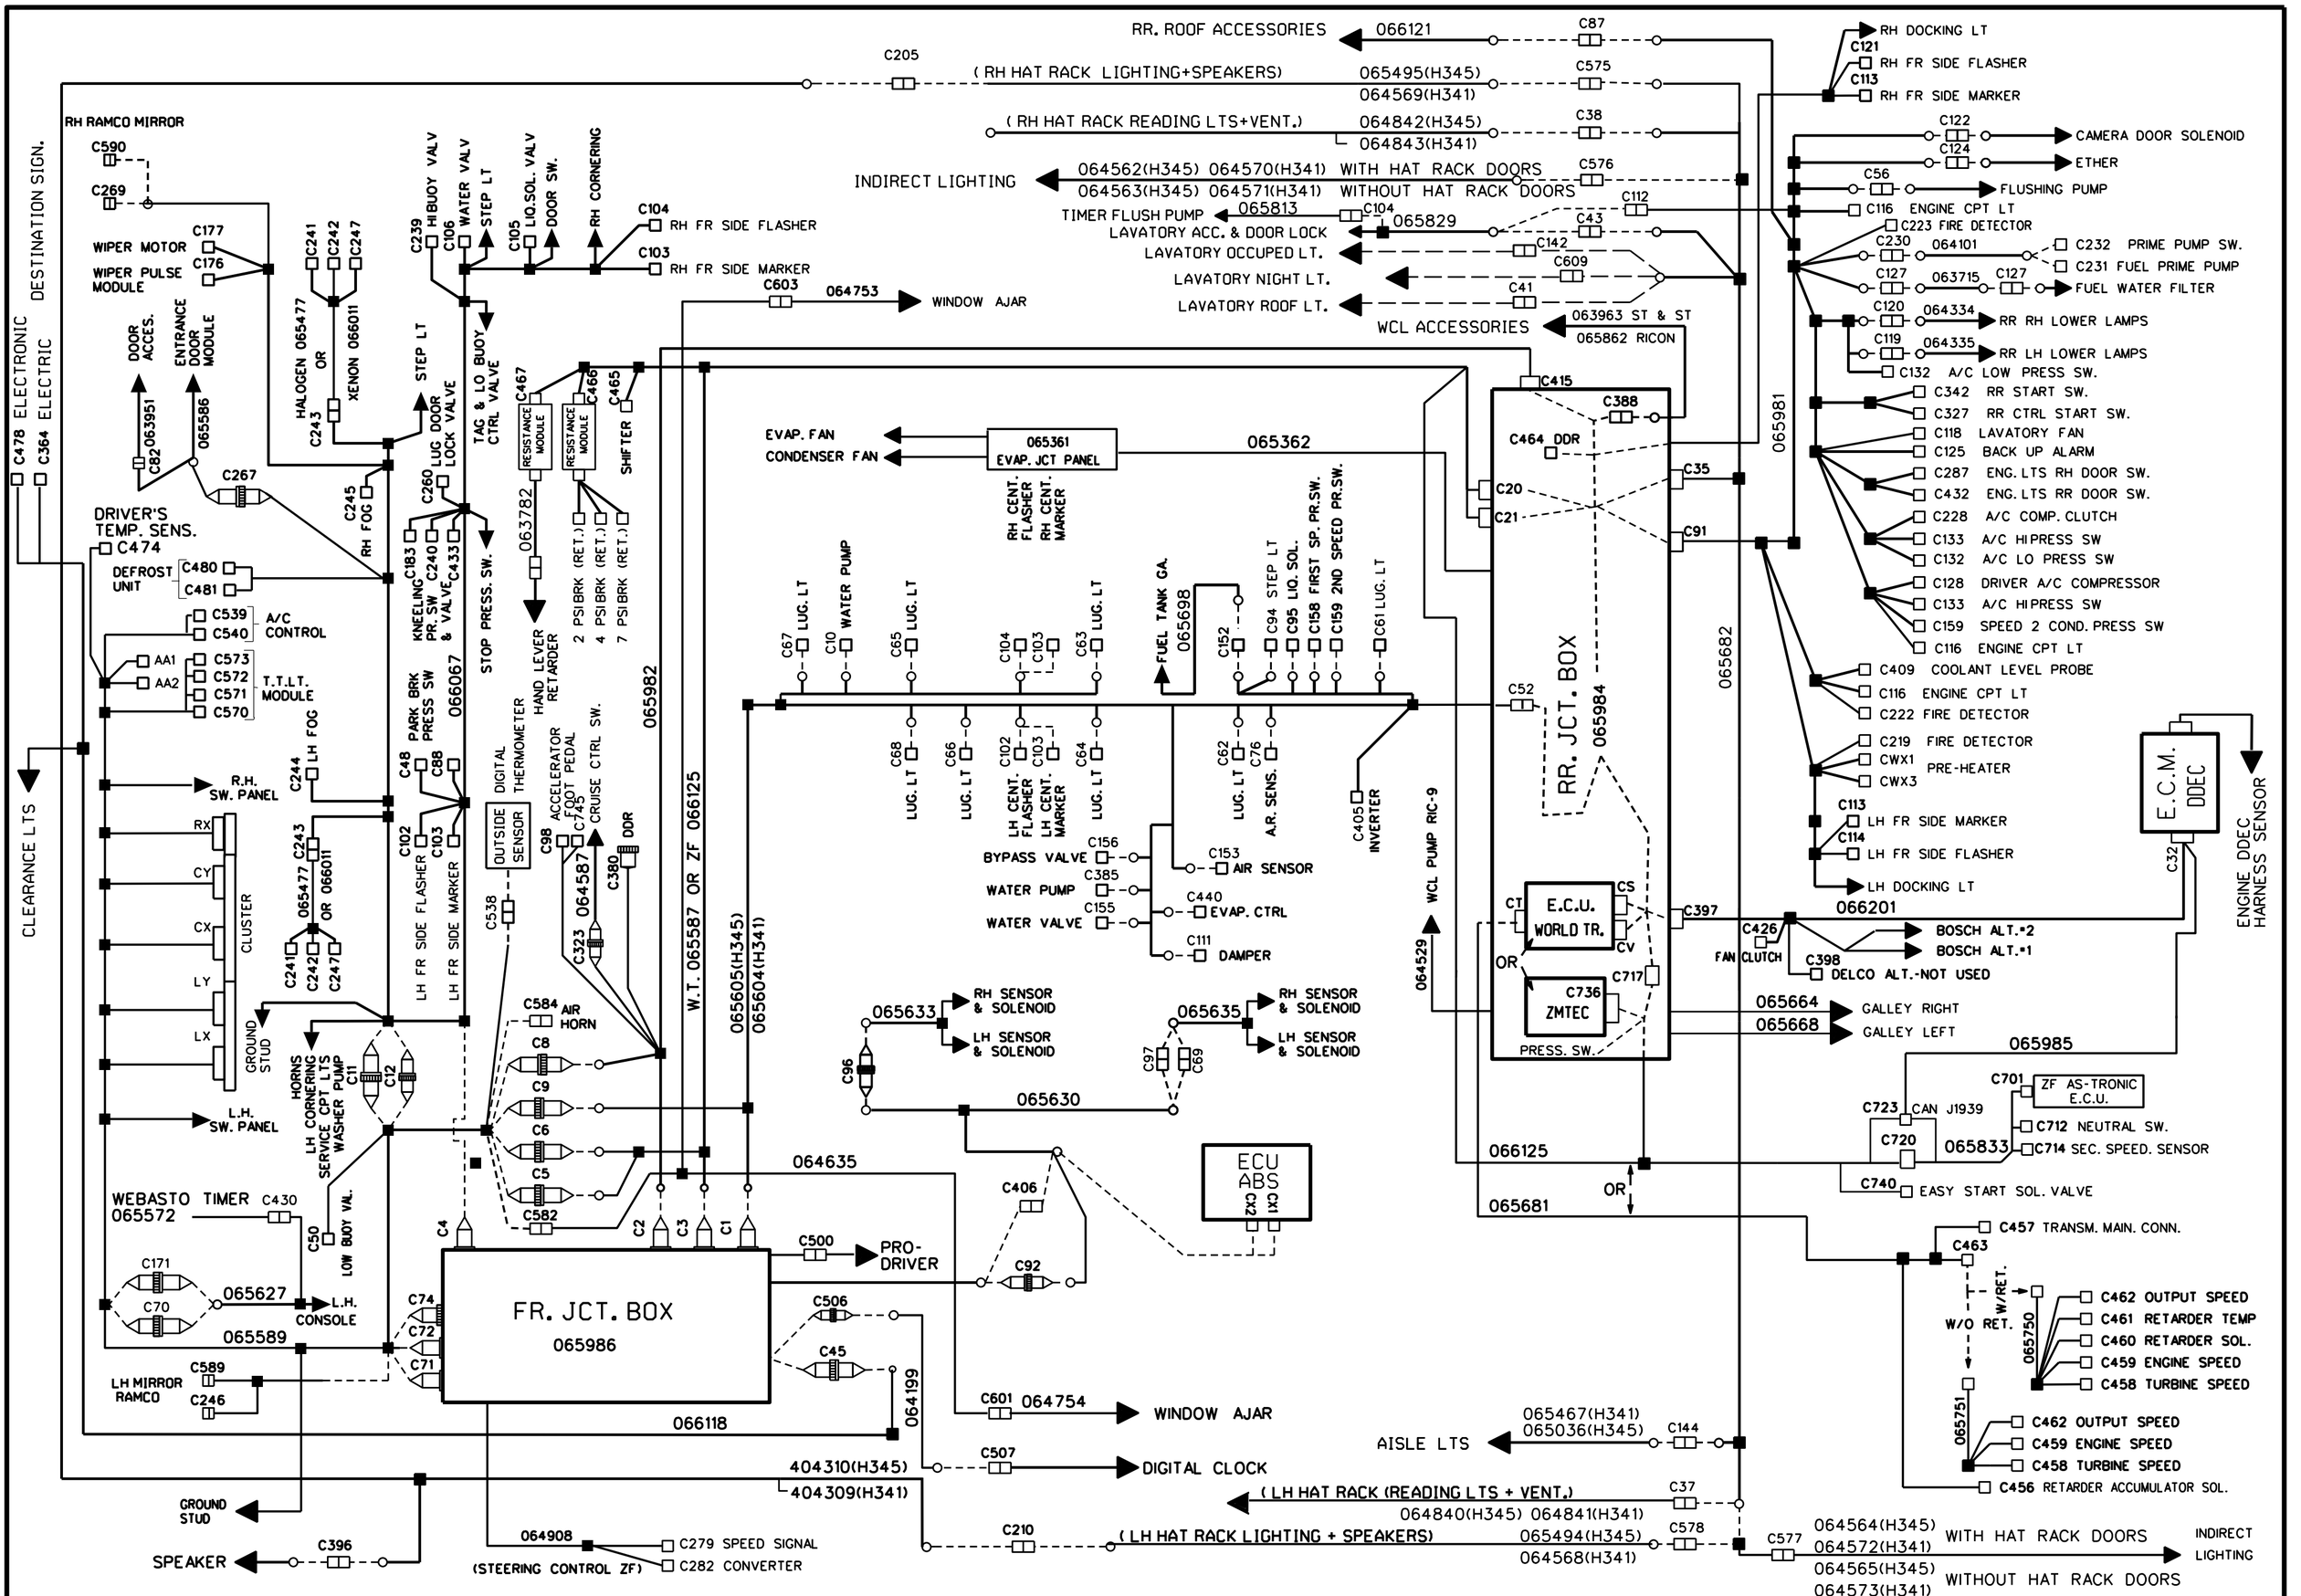

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: C1	REVISION 11

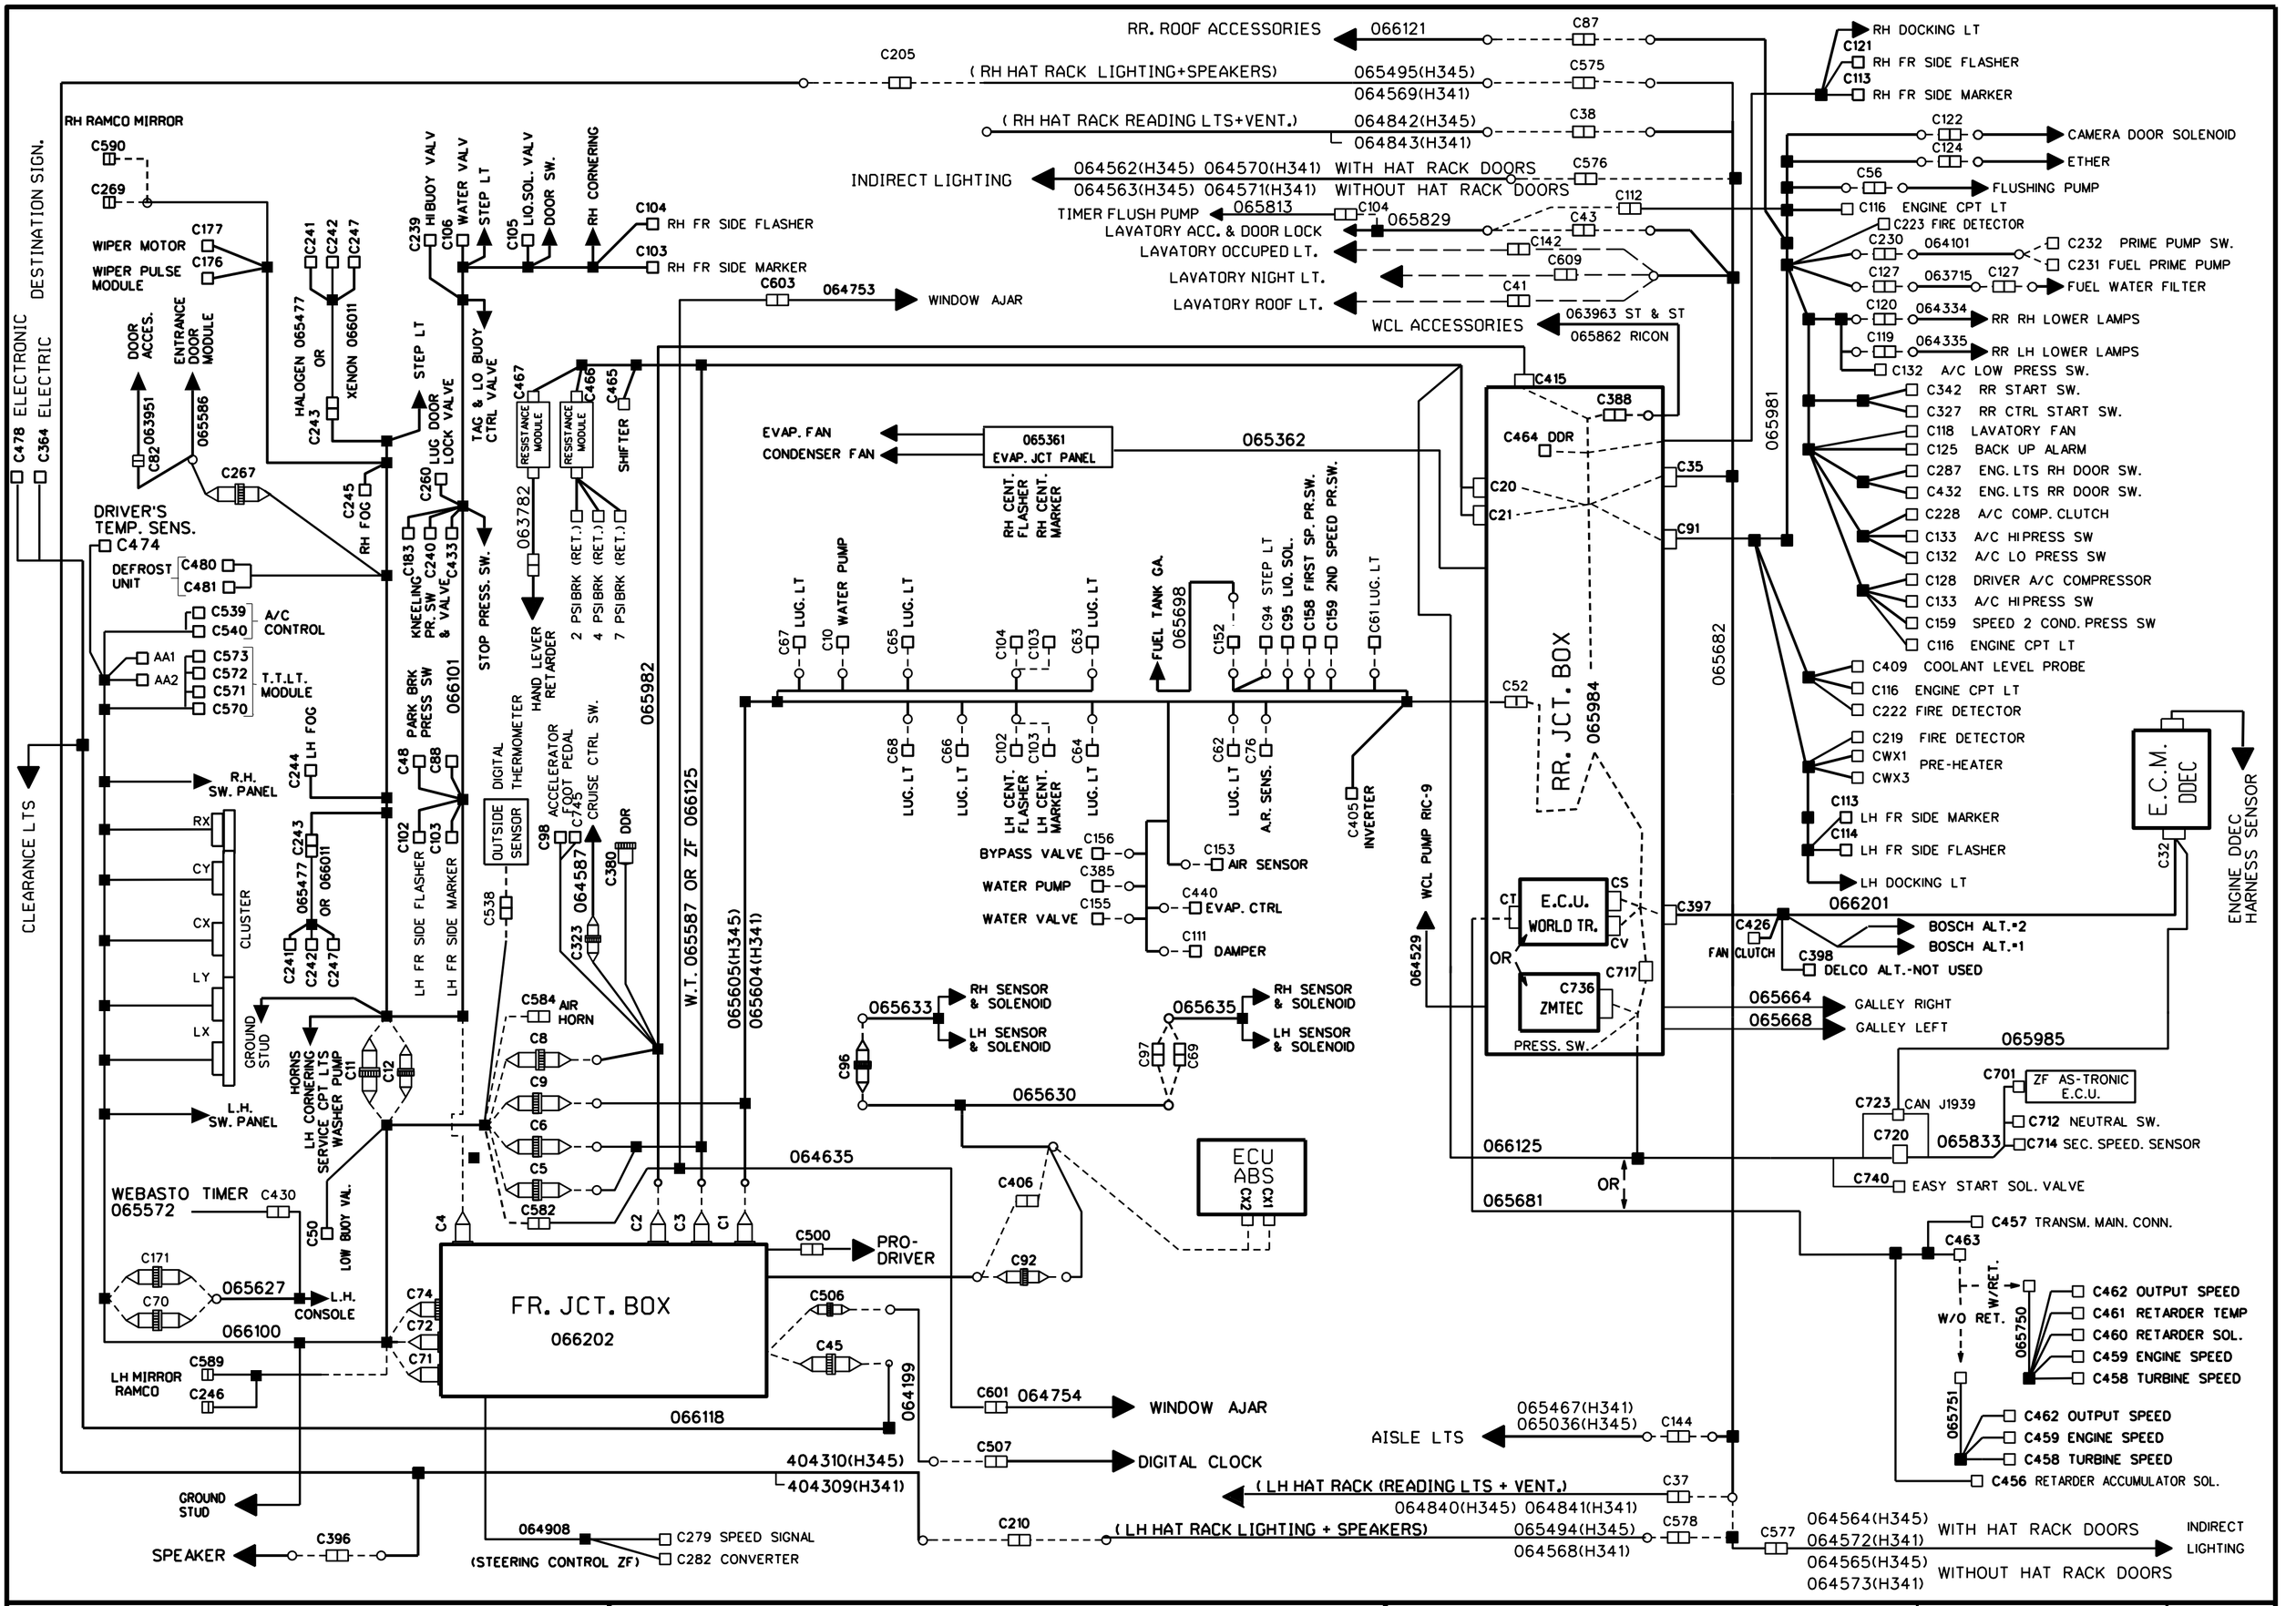

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: C1	REVISION 12

RR. ROOF ACCESSORIES 066121 C87
(RH HAT RACK LIGHTING+SPEAKERS) C205 065495(H345) 064569(H341) C575
(RH HAT RACK READING LTS+VENT.) 064842(H345) 064843(H341) C38
INDIRECT LIGHTING 064562(H345) 064570(H341) WITH HAT RACK DOORS 064563(H345) 064571(H341) WITHOUT HAT RACK DOORS C576
TIMER FLUSH PUMP 065813 C104
LAVATORY ACC. & DOOR LOCK
LAVATORY OCCUPED LT.
LAVATORY NIGHT LT.
LAVATORY ROOF LT.
065829 C112 C43 C142 C609 C41
WCL ACCESSORIES 063963 ST & ST 065862 RICON

RH RAMCO MIRROR C590 C269
WIPER MOTOR C177
WIPER PULSE MODULE C176
DOOR ACCES. C82 063951
ENTRANCE DOOR MODULE 065586
HALOGEN 065477 C243 OR XENON 066011 C241 C242 C247
C239 HI BUOY VALV C106 WATER VALV STEP LT C105 LIQ.SOL. VALV DOOR SW. RH CORNERING
C104 RH FR SIDE FLASHER
C103 RH FR SIDE MARKER
C603 066335 WINDOW AJAR
STEP LT
TAG & LO BUOY CTRL VALVE
LUG DOOR LOCK VALVE C260
C267 RH FOG C245
DRIVER'S TEMP. SENS. C474
DEFROST UNIT C480 C481
C539 C540 A/C CONTROL
AA1 AA2 C573 C572 C571 C570 T.T.LT. MODULE
KNEELING PR. SW & VALVE C183 C240 C433
PARK BRK PRESS SW C48 C88
STOP PRESS. SW. 066101
RESISTANCE MODULE C467 C466
C465 SHIFTER
063782
2 PSI BRK (RET.)
4 PSI BRK (RET.)
7 PSI BRK (RET.)
HAND LEVER RETARDER
DIGITAL THERMOMETER
OUTSIDE SENSOR
ACCELERATOR FOOT PEDAL C745
CRUISE CTRL SW. 064587 C323
C380 DDR
065982
C415 C388
C464 DDR
C20 C21
C35 C91
065361 EVAP. JCT PANEL
065362
EVAP. FAN
CONDENSER FAN
RH CENT. FLASHER
RH CENT. MARKER
C67 LUG. LT
C10 WATER PUMP
C65 LUG. LT
C104 C103 C63 LUG. LT
FUEL TANK GA. 065698
C152 C94 STEP LT
C95 LIQ. SOL.
C158 FIRST SP. PR.SW.
C159 2ND SPEED PR.SW.
C61 LUG. LT
C68 LUG. LT
C66 LUG. LT
C102 LH CENT. FLASHER
C103 LH CENT. MARKER
C64 LUG. LT
C62 LUG. LT
C76 A.R. SENS.
C405 INVERTER
C52
RR. JCT. BOX
065984
065981
065682
C156 BYPASS VALVE
C385 WATER PUMP
C155 WATER VALVE
C153 AIR SENSOR
C440 EVAP. CTRL
C111 DAMPER
WCL PUMP RIC-9
064529
E.C.U. WORLD TR.
CT CS CV
OR
C736 ZMTEC
C717
PRESS. SW.
C397
C426 FAN CLUTCH
C398 DELCO ALT.-NOT USED
BOSCH ALT.*2
BOSCH ALT.*1
066201
065664 GALLEY RIGHT
065668 GALLEY LEFT
065985
C701 ZF AS-TRONIC E.C.U.
C723 CAN J1939
C720
065833
C712 NEUTRAL SW.
C714 SEC. SPEED. SENSOR
C740 EASY START SOL. VALVE
066125
OR
065681
C457 TRANSM. MAIN. CONN.
C463
W/O RET.
W/RET.
065750
C462 OUTPUT SPEED
C461 RETARDER TEMP
C460 RETARDER SOL.
C459 ENGINE SPEED
C458 TURBINE SPEED
065751
C462 OUTPUT SPEED
C459 ENGINE SPEED
C458 TURBINE SPEED
C456 RETARDER ACCUMULATOR SOL.
E.C.M. DDEC
C32
ENGINE DDEC HARNESS SENSOR
RH DOCKING LT
C121 RH FR SIDE FLASHER
C113 RH FR SIDE MARKER
C122 CAMERA DOOR SOLENOID
C124 ETHER
C56 FLUSHING PUMP
C116 ENGINE CPT LT
C223 FIRE DETECTOR
C230 064101 C232 PRIME PUMP SW. C231 FUEL PRIME PUMP
C127 063715 C127 FUEL WATER FILTER
C120 064334 RR RH LOWER LAMPS
C119 064335 RR LH LOWER LAMPS
C132 A/C LOW PRESS SW.
C342 RR START SW.
C327 RR CTRL START SW.
C118 LAVATORY FAN
C125 BACK UP ALARM
C287 ENG. LTS RH DOOR SW.
C432 ENG. LTS RR DOOR SW.
C228 A/C COMP. CLUTCH
C133 A/C HI PRESS SW
C132 A/C LO PRESS SW
C128 DRIVER A/C COMPRESSOR
C133 A/C HI PRESS SW
C159 SPEED 2 COND. PRESS SW
C116 ENGINE CPT LT
C409 COOLANT LEVEL PROBE
C116 ENGINE CPT LT
C222 FIRE DETECTOR
C219 FIRE DETECTOR
CWX1 CWX3 PRE-HEATER
C113 LH FR SIDE MARKER
C114 LH FR SIDE FLASHER
LH DOCKING LT

CLEARANCE LTS
C478 ELECTRONIC
C364 ELECTRIC
DESTINATION SIGN.
R.H. SW. PANEL
RX CY CX LY LX
CLUSTER
GROUND STUD
L.H. SW. PANEL
C244 LH FOG
065477 C243 OR 066011
C241 C242 C247
LH FR SIDE FLASHER
LH FR SIDE MARKER
C538
C584 AIR HORN
C8 C9 C6 C5 C582
HORNS
LH CORNERING
SERVICE CPT LTS
WASHER PUMP
C11 C12
LOW BUOY VAL.
C50
WEBASTO TIMER C430
065572
C171 C70
065627
L.H. CONSOLE
066100
LH MIRROR RAMCO
C589 C246
C4 C2 C3 C1
FR. JCT. BOX
066202
C74 C72 C71
C500 PRO-DRIVER
C506 C45
064199
C406 C92
065633 RH SENSOR & SOLENOID LH SENSOR & SOLENOID
065635 RH SENSOR & SOLENOID LH SENSOR & SOLENOID
C96 C97 C69
065630
ECU ABS C32 C31
066337
W.T. 065587 OR ZF 066125
065605(H345) 065604(H341)
C601 066336 WINDOW AJAR
066118
404310(H345) 404309(H341)
C507 DIGITAL CLOCK
GROUND STUD
SPEAKER C396
064908 (STEERING CONTROL ZF)
C279 SPEED SIGNAL
C282 CONVERTER
C210
AISLE LTS 065467(H341) 065036(H345) C144
(LH HAT RACK (READING LTS + VENT.) C37 064840(H345) 064841(H341)
(LH HAT RACK LIGHTING + SPEAKERS) 065494(H345) 064568(H341) C578 C577
064564(H345) 064572(H341) WITH HAT RACK DOORS INDIRECT LIGHTING
064565(H345) 064573(H341) WITHOUT HAT RACK DOORS

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: C1	REVISION 15

LOC. DDR CONNECTOR
CENTER DASH PANEL
SP23-16
SP21-16
TW1-18
TW2-18
SP29-16
SP57-16
SP58-16
C8
SP59-16
SP68-16
SP105-18
C74
JONCTION BOX
FRONT
C2
C1
C4
C45
C3
C6
C74
C5
C92
C96
C415
C52
C397
C20
C91
C87
C35
C717
C702
C720
R.H. DASH PANEL
RH DASH PANEL
CENTER DASH PANEL
L.H. CONSOLE
FR. SERV. COMPT.
BEHIND TAG PANEL
U/DASH RH NEAR WIPER MOTOR
U/FLOOR NEAR RH HEADLAMP
FR. ROOF - LH ACCES.
FR. ROOF - LH ACCES.
FR. ROOF - RH ACCES.
FR. ROOF - RH ACCES.
CONDENSER COMPT.
EVAPAPORATOR COMPT.
FR. AXLE ACCES
RR. AXLE ACCES
L.H. LUGG. COMPT. NO:2
L.H. LUGG. COMPT. NO:1
R.H. LUGG. COMPT. NO:1
R.H. LUGG. COMPT. NO:2
L.H. LUGG. COMPT. NO:3
R.H. LUGG. COMPT. NO:3
NEAR STARTER SOL.
NEAR STARTER SOL.
NEAR C407 OR C408
NEAR FAN CLUTCH C426
NEAR FAN CLUTCH C426
NEAR FAN CLUTCH C426
RR. ROOF CENTER ACCES.
RR DOOR LOWER LTS C120
PRE-HEATER CONNECTION
PRE-HEATER CONNECTION
RR START SW C342
RR DOOR CPT LTS SW C432
ENGINE CPT LT C116
R.H. HAT RACK END C38
LAVATORY ROOF RR END C43
L.H. HAT RACK RR END C37
ONLY WITH ZF TRANSM. OPTION

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: D	REVISION 00

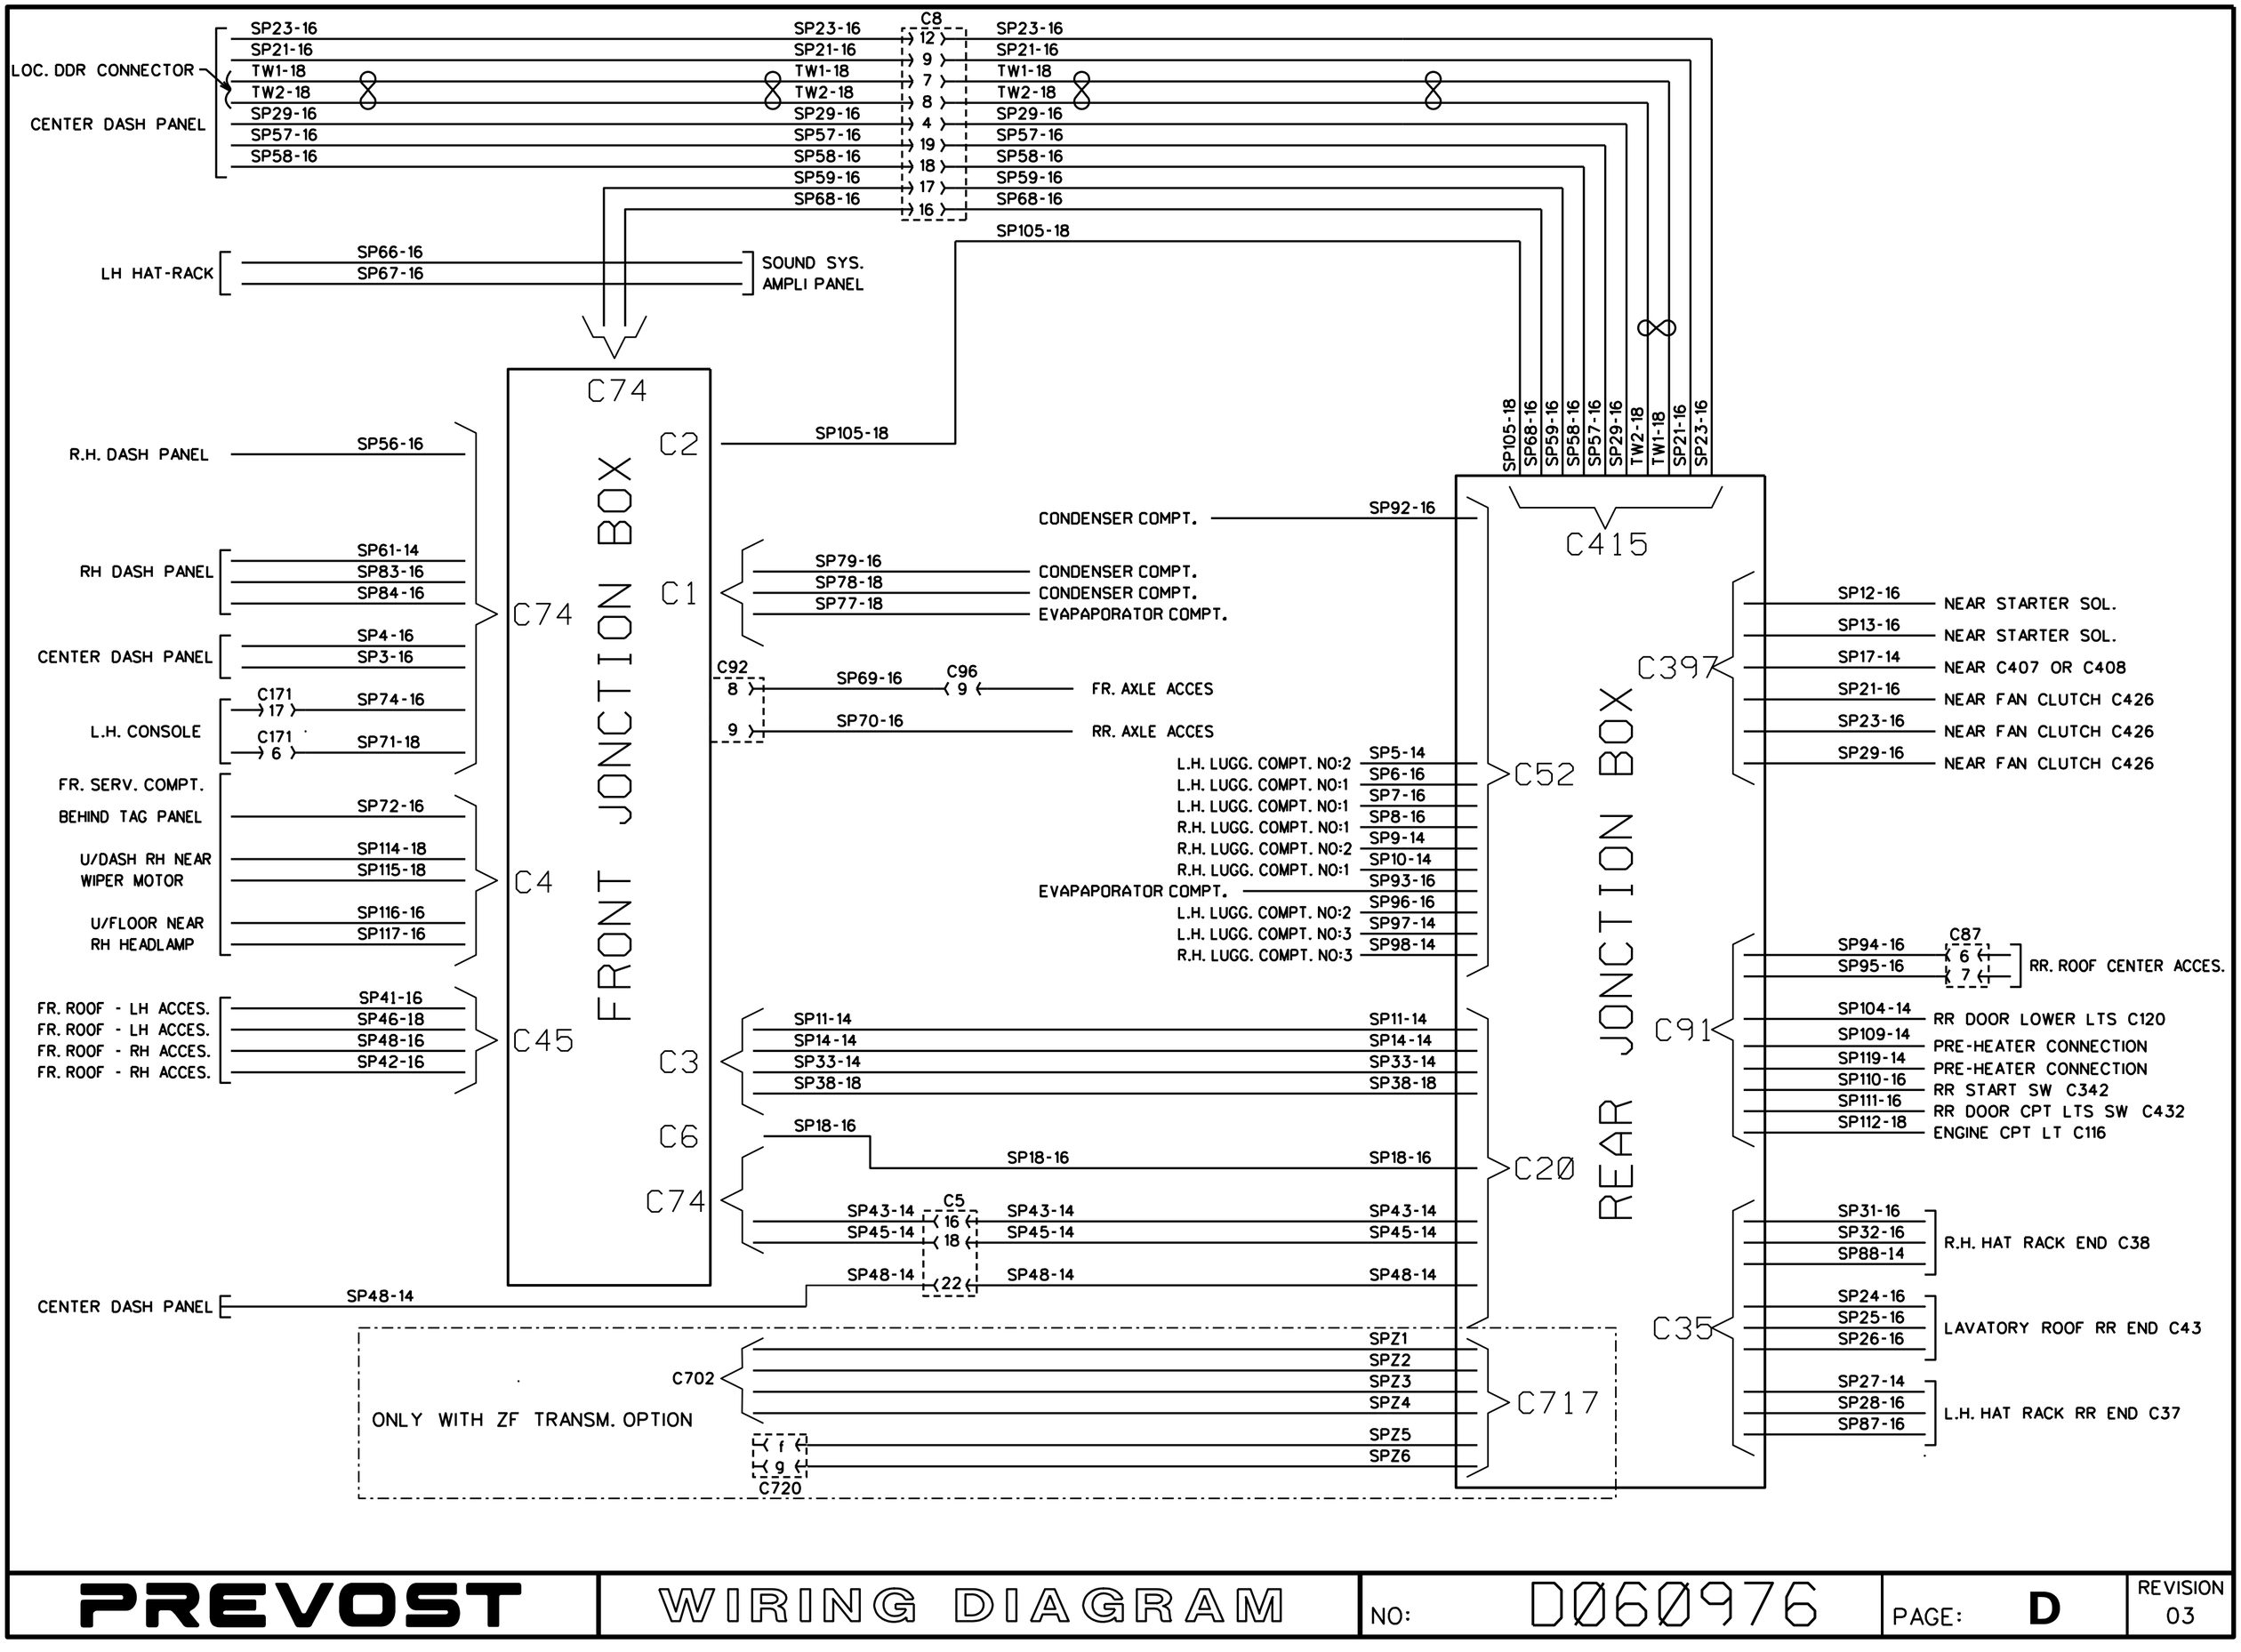
LOC. DDR CONNECTOR
CENTER DASH PANEL
SP23-16
SP21-16
TW1-18
TW2-18
SP29-16
SP57-16
SP58-16
SP59-16
SP68-16
C8
12
9
7
8
4
19
18
17
16
SP105-18
LH HAT-RACK
SP66-16
SP67-16
SOUND SYS. AMPLI PANEL
C74
JONCTION BOX
FRONT
C2
C1
C4
C45
C3
C6
C74
R.H. DASH PANEL
SP56-16
RH DASH PANEL
SP61-14
SP83-16
SP84-16
CENTER DASH PANEL
SP4-16
SP3-16
L.H. CONSOLE
C171
17
SP74-16
C171
6
SP71-18
FR. SERV. COMPT.
BEHIND TAG PANEL
SP72-16
U/DASH RH NEAR WIPER MOTOR
SP114-18
SP115-18
U/FLOOR NEAR RH HEADLAMP
SP116-16
SP117-16
FR. ROOF - LH ACCES.
FR. ROOF - LH ACCES.
FR. ROOF - RH ACCES.
FR. ROOF - RH ACCES.
SP41-16
SP46-18
SP48-16
SP42-16
CENTER DASH PANEL
SP48-14
SP105-18
SP68-16
SP59-16
SP58-16
SP57-16
SP29-16
TW2-18
TW1-18
SP21-16
SP23-16
C415
CONDENSER COMPT.
SP92-16
SP79-16
SP78-18
SP77-18
CONDENSER COMPT.
CONDENSER COMPT.
EVAPAPORATOR COMPT.
C92
8
9
SP69-16
SP70-16
C96
9
FR. AXLE ACCES
RR. AXLE ACCES
L.H. LUGG. COMPT. NO:2
L.H. LUGG. COMPT. NO:1
L.H. LUGG. COMPT. NO:1
R.H. LUGG. COMPT. NO:1
R.H. LUGG. COMPT. NO:2
R.H. LUGG. COMPT. NO:1
EVAPAPORATOR COMPT.
L.H. LUGG. COMPT. NO:2
L.H. LUGG. COMPT. NO:3
R.H. LUGG. COMPT. NO:3
SP5-14
SP6-16
SP7-16
SP8-16
SP9-14
SP10-14
SP93-16
SP96-16
SP97-14
SP98-14
C52
REAR JONCTION BOX
C397
SP12-16
SP13-16
SP17-14
SP21-16
SP23-16
SP29-16
NEAR STARTER SOL.
NEAR STARTER SOL.
NEAR C407 OR C408
NEAR FAN CLUTCH C426
NEAR FAN CLUTCH C426
NEAR FAN CLUTCH C426
C87
6
7
SP94-16
SP95-16
RR. ROOF CENTER ACCES.
C91
SP104-14
SP109-14
SP119-14
SP110-16
SP111-16
SP112-18
RR DOOR LOWER LTS C120
PRE-HEATER CONNECTION
PRE-HEATER CONNECTION
RR START SW C342
RR DOOR CPT LTS SW C432
ENGINE CPT LT C116
SP11-14
SP14-14
SP33-14
SP38-18
SP18-16
C5
16
18
22
SP43-14
SP45-14
SP48-14
C20
C35
SP31-16
SP32-16
SP88-14
R.H. HAT RACK END C38
SP24-16
SP25-16
SP26-16
LAVATORY ROOF RR END C43
SP27-14
SP28-16
SP87-16
L.H. HAT RACK RR END C37
C702
SPZ1
SPZ2
SPZ3
SPZ4
SPZ5
SPZ6
f
g
C720
C717
ONLY WITH ZF TRANSM. OPTION

CIRCUIT NUMBER CODE

No.	DESCRIPTION
B A	INTERIOR LTS-110V FLUORESCENT
B B	INTERIOR LTS-110V FLUORESCENT
D 1	SOUND SYSTEM-FR RH SPEAKER
D 2	SOUND SYSTEM-FR RH SPEAKER
D 3	SOUND SYSTEM-FR RH SPEAKER
D 4	SOUND SYSTEM-RR RH SPEAKER
D 5	SOUND SYSTEM-RR RH SPEAKER
D 6	SOUND SYSTEM-RR RH SPEAKER
D 7	SOUND SYSTEM-RR RH SPEAKER
D 8	SOUND SYSTEM-RR RH SPEAKER
D 3 4	SOUND SYSTEM-RR RH SPEAKER
D 6 7	SOUND SYSTEM-RR RH SPEAKER
G 1	SOUND SYSTEM-FR LH SPEAKER
G 2	SOUND SYSTEM-FR LH SPEAKER
G 3	SOUND SYSTEM-FR LH SPEAKER
G 4	SOUND SYSTEM-RR LH SPEAKER
G 5	SOUND SYSTEM-RR LH SPEAKER
G 6	SOUND SYSTEM-RR LH SPEAKER
G 7	SOUND SYSTEM-RR LH SPEAKER
G 8	SOUND SYSTEM-RR LH SPEAKER
G 3 4	SOUND SYSTEM-RR LH SPEAKER
G 6 7	SOUND SYSTEM-RR LH SPEAKER
L 1 A	INTERIOR LTS-110V FLUORESCENT
L 1 B	INTERIOR LTS-110V FLUORESCENT
L 2 A	INTERIOR LTS-110V FLUORESCENT
L 2 B	INTERIOR LTS-110V FLUORESCENT
L 0	110V RECEPTACLE- 110V FLUOR.
L 1	110V RECEPTACLE- 110V FLUOR.
L 2	110V RECEPTACLE- 110V FLUOR.
R A	INTERIOR LTS-110V FLUORESCENT
R B	INTERIOR LTS-110V FLUORESCENT
S H 1	SHIELD CHASSIS GRD
S H 2	SHIELD CHASSIS GRD
S H 3	SHIELD CHASSIS GRD
S H 4	SHIELD CHASSIS GRD
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 10	SPARE-RJB TO LUGG CPT #1
S P 11	SPARE-FJB TO RJB
S P 12	SPARE-RJB TO ENGINE
S P 13	SPARE-RJB TO ENGINE
S P 14	SPARE-FJB TO RJB
S P 15	SPARE-RJB TO ENGINE
S P 16	SPARE-RJB TO ENGINE
S P 17	SPARE-RJB TO ENGINE
S P 18	SPARE-FJB TO RJB
S P 24	SPARE-RJB TO LAVATORY ROOF
S P 25	SPARE-RJB TO LAVATORY ROOF
S P 26	SPARE-RJB TO LAVATORY ROOF
S P 27	SPARE-RJB TO LH HAT RACK
S P 28	SPARE-RJB TO LH HAT RACK
S P 31	SPARE-RJB TO RH HAT RACK
S P 32	SPARE-RJB TO RH HAT RACK
S P 33	SPARE-FJB TO RJB
S P 38	SPARE-FJB TO RJB
S P 43	SPARE-FJB TO RJB
S P 45	SPARE-FJB TO RJB
S P 46	SPARE-RJB TO LH FR ROOF
S P 48	SPARE-RJB TO DASH CENTER PANEL
S P 56	SPARE-ENGINE TO RH SW PANEL
S P 57	SPARE-DASH CENTER PANEL TO ENG.
S P 58	SPARE-DASH CENTER PANEL TO ENG.
S P 59	SPARE-FJB TO ENGINE
S P 61	SPARE-FJB TO DASH RH PANEL
S P 68	SPARE-FJB TO ENGINE
S P 69	SPARE-FJB TO FR AXLE
S P 70	SPARE-FJB TO FR AXLE
S P 71	SPARE-FJB TO RH SW PANEL
S P 72	SPARE-FJB TO FR SERV CPT
S P 74	SPARE-FJB TO LH CONSOLE
S P 77	SPARE-FJB TO EVAPORATOR CPT
S P 78	SPARE-FJB TO CONDENSER CPT
S P 79	SPARE-FJB TO CONDENSER CPT
S P 87	SPARE-RJB TO LH HAT RACK
S P 88	SPARE-RJB TO RH HAT RACK
S P 92	SPARE-RJB TO CONDENSER CPT
S P 93	SPARE-RJB TO EVAPORATOR CPT
S P 94	SPARE-RJB TO RR ROOF
S P 95	SPARE-RJB TO RR ROOF
S P 96	SPARE-RJB TO LUGG CPT #2
S P 97	SPARE-RJB TO LUGG CPT #3
S P 98	SPARE-RJB TO LUGG CPT #3
S P 104	SPARE-RJB TO ENGINE CPT
S P 105	SPARE-FJB TO ENGINE
S P 106	SPARE-RJB TO BATT. CPT.
S P 107	SPARE-RJB TO BATT. CPT.
S P 108	SPARE-RJB TO BATT. CPT.
S P 109	SPARE-RJB TO ENGINE CPT.
S P 110	SPARE-RJB TO ENGINE CPT.
S P 111	SPARE-RJB TO ENGINE CPT.
S P 112	SPARE-RJB TO ENGINE CPT.
S P 114	SPARE-FJB TO U/DASH WIPER
S P 115	SPARE-FJB TO U/DASH WIPER
S P 116	SPARE-FJB TO U/DASH FLOOR
S P 117	SPARE-FJB TO U/DASH FLOOR
S P 119	SPARE-RJB TO ENGINE CPT.
SPZ 1	SPARE WIRE-ZF TRANSM.
SPZ 2	SPARE WIRE-ZF TRANSM.
SPZ 3	SPARE WIRE-ZF TRANSM.
SPZ 4	SPARE WIRE-ZF TRANSM.
SPZ 5	SPARE WIRE-ZF TRANSM.
SPZ 6	SPARE WIRE-ZF TRANSM.
W C	A/C & HEAT SYST-EVAP CTR SIGN
Y C	INTERIOR LTS-110V FLUORESCENT
Y D	INTERIOR LTS-110V FLUORESCENT
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0	GALLEY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A	A/C SYSTEM-EVAP. GRD
0 A A	RS - VOLTAGE REGULATOR GRD
0 B 1	EC – RR JCT PANEL GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN EVAP. & CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D	RJB – IGNITION RELAY
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 E	RS - HAT RACK ACCES. LH GRD
0 E A	EATON TRANSMISSION GRD
0 F	RS - HAT RACK ACCES. RH GRD
0 G	RS - HAT RACK ACCES. RH GRD
0 H	RS - LAVATORY ACCES. GRD
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L 6	FS - FRONT SERVICE CPT LTS GRD
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR (SEDAN) GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 1	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	FS - SOUND SYS. JCT PANEL GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R E	RADIO &CTRL HEAD CHASSIS GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN - GND RELAY
0 S A	EC-BOSCH ALT. GROUND
0 S 2	SOUND SYSTEM RADIO GRD
0 S 3	SOUND SYSTEM VIDEO GRD
0 S S	SOUNS SYSTEM BATT. GRD
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 T 5	FS - HVAC DASH MODULE. GRD
O T 6	FS - HVAC DASH MODULE. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS SYSTEM - GRD
0 Y 2	ABS SYSTEM - GRD
0 Y 3	ABS SYSTEM - GRD
0 Y 4	ABS SYSTEM - GRD

CIRCUIT NUMBER CODE

No.	DESCRIPTION
0Y5	ABS SYSTEM - GRD
0Y6	ABS SYSTEM - GRD
0Z	RR JCT BOX CPT GRD STUD
0Z0	RR JCT BOX CPT GRD STUD
0Z1	ZF TRANSM. GRD
0Z2	ZF TRANSM. GRD
00	FJB & RJB BATT. GRD
00A	FBG - T.T.LT. MODULES BATT. GRD
00Y	FS - ABS MODULLE BATT. GRD
00SS	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2B	A/C & HEAT SYSTEM-COOL SIGN
2E	A/C & HEAT SYSTEM EVAP CONT
2F	A/C & HEAT SYSTEM EVAP CONT
4	HOSTESS & PASSENGER CHIME
4A	HOSTESS & PASSENGER CHIME
4B	PASSENGER CHIME
4C	HOSTESS CHIME
5	INTERIOR LTS-AISLE & EMERG. EXIT
5	UPPER WINDSHIELD DEFROSTER
5D	UPPER WINDSHIELD DEFROSTER
5E	UPPER WINDSHIELD DEFROSTER
5N	INTERIOR LTS-EMERGENCY EXIT
5NC	SPEED SIGNAL LOWER 5MPH
5NO	SPEED SIGNAL HIGHER 5MPH
6	INTERIOR LTS-AISLE
7B	ENTRANCE DOOR (SEDAN)
7D	ENTRANCE DOOR (SEDAN)
7DA	ENTRANCE DOOR (SEDAN)
9	INTERIOR LTS-ENGINE CPT
9A	INTERIOR LTS-ENGINE CPT
9B	INTERIOR LTS-ENGINE CPT
9E	INTERIOR LTS-FR SERVICE CPT
9F	INTERIOR LTS-FR SERVICE CPT
10	INTERIOR LTS-LUGGAGE CPT
10A	INTERIOR LTS-LUGGAGE CPT
10B	INTERIOR LTS-LUGGAGE CPT
10D	INTERIOR LTS-LUGGAGE CPT
10F	INTERIOR LTS-LUGGAGE CPT
10H	INTERIOR LTS-LUGGAGE CPT
10K	INTERIOR LTS-LUGGAGE CPT
10R	INTERIOR LTS-LUGGAGE DOOR AJAR
11	FR DESTINATION SIGN
11A	FR DESTINATION SIGN
11B	FR DESTINATION SIGN
11C	FR DESTINATION SIGN
11D	FR DESTINATION SIGN
11E	FR DESTINATION SIGN
11K	FR DESTINATION SIGN
12	12V BAT ELECTRONIC JCT BLOCK
12	BAT CPT 12V BATTERY
12A	FR JCT BOX 12V DISC SW
12A	RR JCT BOX 12V DISC SW
12B	12V BAT ELECTRICAL JCT BLOCK
12B	RR JCT BOX 12V DISC SW
12B	FR JCT BOX 12V DISC SW
12BE	BAT. EQUALIZER MONITOR
12C	FR JCT BOX 12V DISC SW
12C	RR JCT BOX 12V HOT WIRE
12CE	RR JCT BOX 12V HOT WIRE
12D	BAT CPT 12V BATTERY
12DA	12V IGNITION DISTRIBUTION
12DT	TTLT MODULE
12E	FR JCT BOX 12V DISC SW
12E	RR JCT BOX 12V DISC SW
12F	BAT CPT 12V FJB & IC
12F	FR JCT BOX 12V DISC SW
12G	FR JCT BOX 12V DISC SW
12H	12 V IGNITION D.T.RUN LIGHT
12J	FR JCT BOX 12V DISC SW
12I	12V IGNITION DISTRIBUTION
12I	RR JCT BOX 12V IGNITION
12K	12 VOLT IGN. TTLT & HVAC MODULE
12IA	12V IGNITION DISTRIBUTION
12IA	FR JCT BOX 12V IGNITION
12IB	FR JCT BOX 12V IGNITION
12IE	ABS-FR JCT BOX 12V IGNITION
12IF	FR JCT BOX 12V IGNITION
12IZ	12 V IGNITION FOR ZF TRANSM.
12LX	CLUSTER (12V HOT WIRE)
12M	ABS-FR JCT BOX 12V DISC. SW.
12P	LH CONSOLE POWER OUTLET
12R	BAT CPT 12V DISC RLY TO RJB
12R	MEMORY BATTERY RADIO
12S	SOUND SYSTEM 12V RADIO
12S1	SOUND SYSTEM 12V RADIO
12S1A	DVD KARAOKE FEEDING
12S2	SOUND SYSTEM 12V RADIO
12S2A	DVD KARAOKE FEEDING
12SB	SOUND SYSTEM 12V FEEDING
12SS	SOUND SYSTEM 12V FEEDING
12V	RR JCT BOX 12V DISC SW
12VA	BATTERY TO EQUALIZER 12V
12VD	12V HOT WIRE DISTRIBUTION
12VF	BAT CPT 12V FJB & IC
12VI	12V IGNITION DISTRIBUTION
12VR	BAT CPT 12V DISC RLY TO RJB
12W	12V BATTERY DDEC III
12W	ENTRANCE DOOR (SEDAN)
12WA	ENTRANCE DOOR (SEDAN)
12WB	ENTRANCE DOOR (SEDAN)
12X	FR JCT BOX 12V DISC SW
12X2	FR JCT BOX 12V DISC SW
12Y	FR JCT BOX 12V DISC SW
13A	ALARM & SIGNAL-LO AIR PRIM.
13B	ALARM & SIGNAL-LO AIR SEC.
14	LAVATORY-FLUSHING PUMP
14A	LAVATORY-FLUSHING PUMP
14P	LAVATORY-FLUSHING PUMP
15	EXTERIOR LTS-MULTI FUNC LEVEL
15A	WIPER & WASHER UPPER WINDSHIELD
16	SPEED - SIGNAL +
16A	SPEED - SIGNAL +
16T	SPEED - SIGNAL +
17	EXTERIOR LTS-FLASHER UNIT
17A	EXTERIOR LTS-FLASHER UNIT
19	DIFFERENTIAL OIL TEMP
20	SPEED - SIGNAL -
20T	SPEED - SIGNAL -
20W	SPEED - SIGNAL -
21	EXTERIOR LTS-DIRECTIONNAL LH
21A	EXTERIOR LTS-DIRECTIONNAL LH
21B	EXTERIOR LTS-HAZARD
21C	EXTERIOR LTS-CORNERING LH
21H	EXTERIOR LTS-DIRECTIONNAL LH
21K	EXTERIOR LTS-CORNERING
21N	EXTERIOR LTS-CORNERING LH
21P	EXTERIOR LTS-CORNERING LH
23	EXTERIOR LTS-DIRECTIONNAL RH
23	EXTERIOR LTS-DIRECTIONNAL RH
23A	EXTERIOR LTS-DIRECTIONNAL RH
23B	EXTERIOR LTS-DIRECTIONNAL RH
23C	EXTERIOR LTS-CORNERING RH
23N	EXTERIOR LTS-CORNERING RH
23P	EXTERIOR LTS-CORNERING RH
24	BAT CPT 24V BATTERY
24	FR JCT BOX 24V DISC SW
24A	BOOSTER BLOCK 24V DISC SW
24A	FR JCT BOX 24V DISC SW
24A	RR JCT BOX 24V DISC SW
24B	24V STARTER RLY FEEDING
24B	FR JCT BOX 24V DISC SW
24BA	RR JCT BOX 24V DISC SW
24BC	24 VOLT BATT. CHARGER
24BE	RJB CPT-BAT EQ MONITOR HOT WIRE
24C	FR JCT BOX 24V DISC SW
24C	RR JCT BOX 24V DISC SW
24D	BAT CPT 24V HOT WIRE
24D	FR JCT BOX 24V HOT WIRE
24D	RR JCT BOX 24V HOT WIRE
24DA	A/C JCT BOX 24V HOT WIRE
24DZ	24 V HOT WIRE FOR ZF TRANSM.
24E	BAT CPT 24V DISC SW
24E	FR JCT BOX 24V DISC SW
24E	RR JCT BOX 24V DISC SW
24F	FR JCT BOX 24V DISC SW
24F	RR JCT BOX 24V DISC SW
24G	FR JCT BOX 24V DISC SW
24G	RR JCT BOX 24V DISC SW
24H	FR JCT BOX 24V DISC SW
24H	RR JCT BOX 24V DISC SW
24I	FR JCT BOX 24V IGNITION
24I	RR JCT BOX 24V IGNITION
24IA	FR JCT BOX 24V IGNITION
24IB	FR JCT BOX 24V IGNITION
24IB	RR JCT BOX 24V IGNITION
24IC	FR JCT BOX 24V IGNITION
24IC	RR JCT BOX 24V IGNITION
24IF	FJB 24VOLT IGNITION
24P	FR JCT BOX 24V DISC SW
24S	24V DISC SW RLY SIGNAL
24S1	SOUND SYSTEM 24V AMPLIFIER
24S2	SOUND SYSTEM 24V AMPLIFIER
24S3	SOUND SYSTEM 24V VIDEO
24S4	SOUND SYSTEM 24V VIDEO
24SB	SOUND SYSTEM 24V FEEDING
24SS	SOUND SYSTEM 24V FEEDING
24R	24 VOLTS FRONT CAMERA SW.
24V2	RR JCT BOX 24V DISC SW
24V3	RR JCT BOX 24V DISC SW
24V4	RR JCT BOX 24V DISC SW
24V5	RR JCT BOX 24V DISC SW
24VD	24V HOT WIRE RR JCT BOX
24VF	BAT CPT 24V SW TO FJB & IC
24VA	BATTERY TO EQUALIZER 24V
24VI	RR JCT BOX 24V IGNITION
24VR	BAT CPT 24V DISC SW TO RJB
24W	RR JCT BOX 24V DISC SW (WCL)
24WC	BATT.CPT TO HYD. PUMP (WCL)
24WL	24V BATTERY-HYD. PUMP (WCL)
24ZZ	24 VOLT - ZF TRANSM. POWER
25	24 VOLT ALT.SIGNAL MODULE
25A1	PRE-EXITATION ALT. BOSCH #1
25A2	PRE-EXITATION ALT. BOSCH #2
25A	T.T. LT. ALTERNATOR #1
25B	12 VOLTS IGN. ALT. SIGNAL MODULE
25D	12 V. ENGINE RUN / HVAC SYSTEM
25E	USE ON VIP ONLY
25F	12 VOLT IGN. DISTRIBUTION
25H	24 VOLT IGN. ALT. BOSCH

CIRCUIT NUMBER CODE

No.	DESCRIPTION
25K	T.T. LT. ALTERNATOR #2
26A	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26B	DRIVER'S WINDOW LIFTER
26C	DRIVER'S WINDOW LIFTER
27	LAVATORY-EMERGENCY SONALERT
28A	A/C & HEAT SYSTEM-HI PRESSURE
28H	TTLT HI LO PRESS
28T	TTLT HI LO PRESS
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29A	A/C & HEAT SYSTEM-DRIVER'S HTR
29B	A/C & HEAT SYSTEM-DRIVER'S HTR
29H	HVAC DASH MODULE
30A	GALLEY
31A	A/C & HEAT SYSTEM-UNLOADER
31B	A/C & HEAT SYSTEM-UNLOADER
31B	WIPER & WASHER SYSTEM
31C	WIPER & WASHER SYSTEM
31D	WIPER & WASHER SYSTEM
31E	WIPER & WASHER SYSTEM
31J	WIPER & WASHER SYSTEM
31X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32B	EXTERIOR LTS-BACK-UP
32C	BACK-UP PWR & SIGNAL
32D	BACK-UP ALARM
35	ENTRANCE DOOR (SEDAN)
35B	ENTRANCE DOOR (SEDAN)
35BB	ENTRANCE DOOR (SEDAN)
35D	ENTRANCE DOOR (SEDAN)
36	JACOB BRAKE SYSREM
36A	JACOB BRAKE SYSREM
38	INTERIOR LTS-24V FLUORESCENT
38A	INTERIOR LTS-24V FLUORESCENT
38C	INTERIOR LTS-24V FLUORESCENT
38D	INTERIOR LTS-24V FLUORESCENT
39	INTERIOR LTS-24V LH CONSOLE SW
39A	INTERIOR LTS-DRIVER"S LTS
39P	READING LIGHTS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
43	HAT RACK FAN
43A	HAT RACK FAN
43B	HAT RACK FAN
43D	HAT RACK FAN
43E	HAT RACK FAN
43F	HAT RACK FAN
43G	HAT RACK FAN
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45A	A/C & HEAT SYSTEM-FULL AIR
45B	A/C & HEAT SYSTEM-WATER PUMP
45C	A/C & HEAT SYSTEM-WATER VALVE
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
48	ENTRANCE DOOR (SEDAN)
48A	ENTRANCE DOOR (SEDAN)
49	ENTRANCE DOOR (SEDAN)
49A	ENTRANCE DOOR (SEDAN)
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL- AIR HORN
52C	ALARM & SIGNAL- AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
62	LAVATORY-OCCUPIED LT
62A	LAVATORY-FLUOR LT
62B	LAVATORY-FLUOR LT
62E	LAVATORY-OCCUP & FLUOR LT
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVERS FAN
64B	DRIVERS FAN
64C	DRIVERS FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65D	DRIVER REC. DAMPER
66	O_PASS. ON/OFF
67	24 VOLT RUN DISTRIBUTION
67A	A/C & HEAT SYSTEM
67C	HEATING WINDSHIELD
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67X	A/C & HEAT SYSTEM
68	DASH & DEFROST DAMPER MOTOR
68A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH
72C	SUN VISOR-LH
72D	SUN VISOR-LH
73	LAVATORY-FEEDING
74	INTERIOR LTS-READING RH
74A	INTERIOR LTS-READING RH
74D	INTERIOR LTS-READING SIGNAL
75	INTERIOR LTS-READING LH
75A	INTERIOR LTS-READING LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85E	STOP LIGHT RLY
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85G	RADIATOR FAN CLUTCH
85X	12V IGN ABS
85Y	ABS SYSTEM
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
86F	ENGINE CTR-STARTER TTLT SIGN
86T	ENGINE CTR-STARTER TTLT SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
100	INTERIOR LTS-GENERAL
100A	INTERIOR LTS-GENERAL
100B	INTERIOR LTS-GENERAL
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	WORLD TRANSM-SOL. SUPPLY
102A	24V STARTER TO BOSCH ALTERNATOR
103	LOW BUOY
104	WORLD TRANSM-SOL. FORWARD
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO

CIRCUIT NUMBER CODE

No.	DESCRIPTION
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
113W	WORLD TR.-REVERSE WARNING
113Z	ZF TRANSM.- REVERSE SIGNAL
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
115W	ZF TRANSM. - CHECK TRANSM. TTLT
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125	GALLEY LAMP
125T	GALLEY LAMP
125W	WORLD TRANSM-RET. INDICATOR
126	KNEELING SYSTEM
126A	KNEELING SYSTEM
126B	KNEELING SYSTEM
126C	KNEELING SYSTEM
126D	KNEELING SYSTEM
126E	KNEELING SYSTEM
126F	KNEELING SYSTEM
126G	KNEELING SYSTEM
126H	KNEELING SYSTEM
126K	KNEELING SYSTEM
126P	KNEELING SYSTEM
126R	KNEELING SYSTEM
126W	5 MPH N.C. SIGNAL (WCL)
126S	KNEELING SYSTEM
126T	KNEELING SYSTEM
127	WORLD TRANSM-LUBE PRESS SW.
127	WORLD TRANSM-RETARDER FEED SOL.
127	POWER- PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT - BURNER ON SIGNAL
128	WORLD TRANSM-SOL. C2
129	POWER- PRE-HEAT WATER HEATER
129B	POWER- PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	A/C & HEAT SYSTEM-EVAP FAN MOTOR
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	GALLEY-HEAT CONTAINERS
133A	GALLEY-HEAT CONTAINERS
133B	GALLEY-HEAT CONTAINERS
133C	GALLEY-HEAT CONTAINERS
133	WORLD TRANSM-RET. ACTUATOR HI
134	GALLEY-HEAT CONTAINERS
134A	GALLEY-HEAT CONTAINERS
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135A	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	GALLEY-ACCESSORIES
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146A	TRANSMISSION-12V IGNITION
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	WORLD TRANSM-OIL TEMP
147A	ETHER COLD START & D.R.L.
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
152	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	WORLD TRANSM-SPARE INPUT (-)
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157B	ABS SYSTEM
157D	A.T.C. SYSTEM
157E	A.T.C. SYSTEM
157F	A.T.C. SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	W. TR.-OUT SPEED INTERLOCK
167Z	ZF- OUT SPEED INTERLOCK
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170	LUGGAGE DOOR LOCK
170C	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
225	LAVATORY FAN
225A	LAVATORY FAN
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
231Z	ZF NEUTRAL SIGNAL GRD
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251A	DDEC III - DATA LOGGER 12 H.W.
251	DDEC III - PRODRIVER 12V H.W.
253	GALLEY-MICROWAVE
254	GALLEY-12V FRIGO NORCOLD
254A	GALLEY-FRIGO
255	GALLEY-COFEEMAKER
255A	GALLEY-COFEEMAKER
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED

CIRCUIT NUMBER CODE

No.	DESCRIPTION
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
260	WINDOW AJAR
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
292	FAN CLUTCH RADIATOR SPD 2
300	DOOR AJAR MAGN.SW. (WCL)
300A	POWER SYSTEM SW. (WCL)
300B	DOOR AJAR ALARM (WCL)
301	POWER SYSTEM SW. (WCL)
302	DOOR AJAR T.T.LT. (WCL)
302A	DOOR AJAR ALARM SIGN.(WCL)
302B	DOOR AJAR MAGN.SW. (WCL)
303	REMOTE WALL SW. DWN (WCL)
304	REMOTE WALL SW. UP (WCL)
305	PARK. BRAKE SOL. VALVE (WCL)
305A	PARK. BRAKE SAFETY SW. (WCL)
306	CONTROL SYSTEM (WCL RICON)
307	CONTROL SYSTEM (WCL RICON)
308	CONTROL SYSTEM (WCL RICON)
309	CONTROL SYSTEM (WCL RICON)
310	EATON TRANSMISSION
311	EATON TRANSMISSION
312	EATON TRANSMISSION
313	EATON TRANSMISSION
314	EATON TRANSMISSION
315	EATON TRANSMISSIOM
316	EATON TRANSMISSION - EPL
317	EATON TRANSMISSION
318	EATON TRANSMISSION
319	EATON TRANSMISSION
320	EATON TRANSMISSION
321	EATON TRANSMISSION
322	EATON TRANSMISSIION
323	EATON TRANSMISSION
324	EATON TRANSMISSION
325	EATON TRANSMISSION
326	EATON TRANSMISSION
327	EATON TRANSMISSION
328	EATON TRANSMISSION
329	EATON TRANSMISSION
330	EATON TRANSMISSION - EPL
331	EATON TRANSMISSION - EPL
332	EATON TRANSMISSION
333	EATON TRANSMISSION - 12V BATTERY
334	EATON GENERATION 2
416	DDEV IV- SENSOR SUPPLY 5VDC
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
452	DDEC IV- SENSOR RETURN (ENGINE)
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
524B	ZF SIGNAL – AUX. SENSOR THROTTLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE
541	DDEC III-CRUISE SET SW
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
583	DDEC III-ENGINE BRAKE 4 CYL.
700	J1587(+)
701	J1587(-) – GROUND
705	ZF SIGNALS
706	ZF SIGNALS
707	ZF SIGNALS
717	ZF SIGNALS
718	ZF SIGNALS
719	ZF SIGNALS
720	ZF SIGNALS
740	EASY START VALVE
761	ZF SIGNALS
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
905	DDEC IV- AMBIANT AIR TEMPERATURE
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
925	J1939-HIGH
926	J1939-LOW
927	J1939-SHIELD
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
953A	THROTTLE INHIBIT
976	DDEC IV- RELATIVE HUMIDITY
979	DDEC III-ENGINE BRAKE 2 CYL.
988	DDEC III-CRUISE ENABLE LTS.

CIRCUIT NUMBER CODE

No.	DESCRIPTION
B A	INTERIOR LTS-110V FLUORESCENT
B B	INTERIOR LTS-110V FLUORESCENT
D 1	SOUND SYSTEM-FR RH SPEAKER
D 2	SOUND SYSTEM-FR RH SPEAKER
D 3	SOUND SYSTEM-FR RH SPEAKER
D 4	SOUND SYSTEM-RR RH SPEAKER
D 5	SOUND SYSTEM-RR RH SPEAKER
D 6	SOUND SYSTEM-RR RH SPEAKER
D 7	SOUND SYSTEM-RR RH SPEAKER
D 8	SOUND SYSTEM-RR RH SPEAKER
D 3 4	SOUND SYSTEM-RR RH SPEAKER
D 6 7	SOUND SYSTEM-RR RH SPEAKER
G 1	SOUND SYSTEM-FR LH SPEAKER
G 2	SOUND SYSTEM-FR LH SPEAKER
G 3	SOUND SYSTEM-FR LH SPEAKER
G 4	SOUND SYSTEM-RR LH SPEAKER
G 5	SOUND SYSTEM-RR LH SPEAKER
G 6	SOUND SYSTEM-RR LH SPEAKER
G 7	SOUND SYSTEM-RR LH SPEAKER
G 8	SOUND SYSTEM-RR LH SPEAKER
G 3 4	SOUND SYSTEM-RR LH SPEAKER
G 6 7	SOUND SYSTEM-RR LH SPEAKER
L 1 A	INTERIOR LTS-110V FLUORESCENT
L 1 B	INTERIOR LTS-110V FLUORESCENT
L 2 A	INTERIOR LTS-110V FLUORESCENT
L 2 B	INTERIOR LTS-110V FLUORESCENT
L 0	110V RECEPTACLE- 110V FLUOR.
L 1	110V RECEPTACLE- 110V FLUOR.
L 2	110V RECEPTACLE- 110V FLUOR.
R A	INTERIOR LTS-110V FLUORESCENT
R B	INTERIOR LTS-110V FLUORESCENT
S H 1	SHIELD CHASSIS GRD
S H 2	SHIELD CHASSIS GRD
S H 3	SHIELD CHASSIS GRD
S H 4	SHIELD CHASSIS GRD
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 10	SPARE-RJB TO LUGG CPT #1
S P 11	SPARE-FJB TO RJB
S P 12	SPARE-RJB TO ENGINE
S P 13	SPARE-RJB TO ENGINE
S P 14	SPARE-FJB TO RJB
S P 15	SPARE-RJB TO ENGINE
S P 16	SPARE-RJB TO ENGINE
S P 17	SPARE-RJB TO ENGINE
S P 18	SPARE-FJB TO RJB
S P 24	SPARE-RJB TO LAVATORY ROOF
S P 25	SPARE-RJB TO LAVATORY ROOF
S P 26	SPARE-RJB TO LAVATORY ROOF
S P 27	SPARE-RJB TO LH HAT RACK
S P 28	SPARE-RJB TO LH HAT RACK
S P 31	SPARE-RJB TO RH HAT RACK
S P 32	SPARE-RJB TO RH HAT RACK
S P 33	SPARE-FJB TO RJB
S P 38	SPARE-FJB TO RJB
S P 43	SPARE-FJB TO RJB
S P 45	SPARE-FJB TO RJB
S P 46	SPARE-RJB TO LH FR ROOF
S P 48	SPARE-RJB TO DASH CENTER PANEL
S P 56	SPARE-ENGINE TO RH SW PANEL
S P 57	SPARE-DASH CENTER PANEL TO ENG.
S P 58	SPARE-DASH CENTER PANEL TO ENG.
S P 59	SPARE-FJB TO ENGINE
S P 61	SPARE-FJB TO DASH RH PANEL
S P 68	SPARE-FJB TO ENGINE
S P 69	SPARE-FJB TO FR AXLE
S P 70	SPARE-FJB TO FR AXLE
S P 71	SPARE-FJB TO RH SW PANEL
S P 72	SPARE-FJB TO FR SERV CPT
S P 74	SPARE-FJB TO LH CONSOLE
S P 77	SPARE-FJB TO EVAPORATOR CPT
S P 78	SPARE-FJB TO CONDENSER CPT
S P 79	SPARE-FJB TO CONDENSER CPT
S P 87	SPARE-RJB TO LH HAT RACK
S P 88	SPARE-RJB TO RH HAT RACK
S P 92	SPARE-RJB TO CONDENSER CPT
S P 93	SPARE-RJB TO EVAPORATOR CPT
S P 94	SPARE-RJB TO RR ROOF
S P 95	SPARE-RJB TO RR ROOF
S P 96	SPARE-RJB TO LUGG CPT #2
S P 97	SPARE-RJB TO LUGG CPT #3
S P 98	SPARE-RJB TO LUGG CPT #3
S P 104	SPARE-RJB TO ENGINE CPT
S P 105	SPARE-FJB TO ENGINE
S P 106	SPARE-RJB TO BATT. CPT.
S P 107	SPARE-RJB TO BATT. CPT.
S P 108	SPARE-RJB TO BATT. CPT.
S P 109	SPARE-RJB TO ENGINE CPT.
S P 110	SPARE-RJB TO ENGINE CPT.
S P 111	SPARE-RJB TO ENGINE CPT.
S P 112	SPARE-RJB TO ENGINE CPT.
S P 114	SPARE-FJB TO U/DASH WIPER
S P 115	SPARE-FJB TO U/DASH WIPER
S P 116	SPARE-FJB TO U/DASH FLOOR
S P 117	SPARE-FJB TO U/DASH FLOOR
S P 119	SPARE-RJB TO ENGINE CPT.
SPZ 1	SPARE WIRE-ZF TRANSM.
SPZ 2	SPARE WIRE-ZF TRANSM.
SPZ 3	SPARE WIRE-ZF TRANSM.
SPZ 4	SPARE WIRE-ZF TRANSM.
SPZ 5	SPARE WIRE-ZF TRANSM.
SPZ 6	SPARE WIRE-ZF TRANSM.
W C	A/C & HEAT SYST-EVAP CTR SIGN
Y C	INTERIOR LTS-110V FLUORESCENT
Y D	INTERIOR LTS-110V FLUORESCENT
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0	GALLEY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A	A/C SYSTEM-EVAP. GRD
0 A A	RS - VOLTAGE REGULATOR GRD
0 B 1	EC – RR JCT PANEL GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN EVAP. & CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D	RJB – IGNITION RELAY
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 E	RS - HAT RACK ACCES. LH GRD
0 E A	EATON TRANSMISSION GRD
0 F	RS - HAT RACK ACCES. RH GRD
0 G	RS - HAT RACK ACCES. RH GRD
0 H	RS - LAVATORY ACCES. GRD
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L 6	FS - FRONT SERVICE CPT LTS GRD
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR (SEDAN) GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 1	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	FS - SOUND SYS. JCT PANEL GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R E	RADIO &CTRL HEAD CHASSIS GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN - GND RELAY
0 S A	EC-BOSCH ALT. GROUND
0 S 2	SOUND SYSTEM RADIO GRD
0 S 3	SOUND SYSTEM VIDEO GRD
0 S S	SOUNS SYSTEM BATT. GRD
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 T 5	FS - HVAC DASH MODULE. GRD
O T 6	FS - HVAC DASH MODULE. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS SYSTEM - GRD
0 Y 2	ABS SYSTEM - GRD
0 Y 3	ABS SYSTEM - GRD
0 Y 4	ABS SYSTEM - GRD

CIRCUIT NUMBER CODE

No.	DESCRIPTION
0 Y 5	ABS SYSTEM - GRD
0 Y 6	ABS SYSTEM - GRD
0 Z	RR JCT BOX CPT GRD STUD
0 Z 0	RR JCT BOX CPT GRD STUD
0Z 1	ZF TRANSM. GRD
0Z 2	ZF TRANSM. GRD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 E	A/C & HEAT SYSTEM EVAP CONT
2 F	A/C & HEAT SYSTEM EVAP CONT
4	HOSTESS & PASSENGER CHIME
4 A	HOSTESS & PASSENGER CHIME
4 B	PASSENGER CHIME
4 C	HOSTESS CHIME
5	INTERIOR LTS-AISLE & EMERG. EXIT
5	UPPER WINDSHIELD DEFROSTER
5 D	UPPER WINDSHIELD DEFROSTER
5 E	UPPER WINDSHIELD DEFROSTER
5 N	INTERIOR LTS-EMERGENCY EXIT
5 N C	SPEED SIGNAL LOWER 5MPH
5 N O	SPEED SIGNAL HIGHER 5MPH
6	INTERIOR LTS-AISLE
7 B	ENTRANCE DOOR (SEDAN)
7 D	ENTRANCE DOOR (SEDAN)
7 D A	ENTRANCE DOOR (SEDAN)
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
1 0	INTERIOR LTS-LUGGAGE CPT
1 0 A	INTERIOR LTS-LUGGAGE CPT
1 0 B	INTERIOR LTS-LUGGAGE CPT
1 0 D	INTERIOR LTS-LUGGAGE CPT
1 0 F	INTERIOR LTS-LUGGAGE CPT
1 0 H	INTERIOR LTS-LUGGAGE CPT
1 0 K	INTERIOR LTS-LUGGAGE CPT
1 0 R	INTERIOR LTS-LUGGAGE DOOR AJAR
1 1	FR DESTINATION SIGN
1 1 A	FR DESTINATION SIGN
1 1 B	FR DESTINATION SIGN
1 1 C	FR DESTINATION SIGN
1 1 D	FR DESTINATION SIGN
1 1 E	FR DESTINATION SIGN
1 1 K	FR DESTINATION SIGN
1 2	12V BAT ELECTRONIC JCT BLOCK
1 2	BAT CPT 12V BATTERY
1 2 A	FR JCT BOX 12V DISC SW
1 2 A	RR JCT BOX 12V DISC SW
1 2 B	12V BAT ELECTRICAL JCT BLOCK
1 2 B	RR JCT BOX 12V DISC SW
1 2 B	FR JCT BOX 12V DISC SW
1 2 B E	BAT. EQUALIZER MONITOR
1 2 C	FR JCT BOX 12V DISC SW
1 2 C	RR JCT BOX 12V HOT WIRE
1 2 C E	RR JCT BOX 12V HOT WIRE
1 2 D	BAT CPT 12V BATTERY
1 2 D A	12V IGNITION DISTRIBUTION
1 2 D T	TTLT MODULE
1 2 D Z	ZF TRANSM. HOTWIRE
1 2 E	FR JCT BOX 12V DISC SW
1 2 E	RR JCT BOX 12V DISC SW
1 2 F	BAT CPT 12V FJB & IC
1 2 F	FR JCT BOX 12V DISC SW
1 2 G	FR JCT BOX 12V DISC SW
1 2 H	12 V IGNITION D.T.RUN LIGHT
1 2 J	FR JCT BOX 12V DISC SW
1 2 I	12V IGNITION DISTRIBUTION
1 2 I	RR JCT BOX 12V IGNITION
1 2 K	12 VOLT IGN. TTLT & HVAC MODULE
1 2 I A	12V IGNITION DISTRIBUTION
1 2 I A	FR JCT BOX 12V IGNITION
1 2 I B	FR JCT BOX 12V IGNITION
1 2 I E	ABS-FR JCT BOX 12V IGNITION
1 2 I F	FR JCT BOX 12V IGNITION
1 2 I Z	12 V IGNITION FOR ZF TRANSM.
1 2 L X	CLUSTER (12V HOT WIRE)
1 2 M	ABS-FR JCT BOX 12V DISC. SW.
1 2 P	LH CONSOLE POWER OUTLET
1 2 R	BAT CPT 12V DISC RLY TO RJB
1 2 R	MEMORY BATTERY RADIO
1 2 S	SOUND SYSTEM 12V RADIO
1 2 S 1	SOUND SYSTEM 12V RADIO
1 2 S 1 A	DVD KARAOKE FEEDING
1 2 S 2	SOUND SYSTEM 12V RADIO
1 2 S 2 A	DVD KARAOKE FEEDING
1 2 S B	SOUND SYSTEM 12V FEEDING
1 2 S S	SOUND SYSTEM 12V FEEDING
1 2 V	RR JCT BOX 12V DISC SW
1 2 V A	BATTERY TO EQUALIZER 12V
1 2 V D	12V HOT WIRE DISTRIBUTION
1 2 V F	BAT CPT 12V FJB & IC
1 2 V I	12V IGNITION DISTRIBUTION
1 2 V R	BAT CPT 12V DISC RLY TO RJB
1 2 W	12V BATTERY DDEC III
1 2 W	ENTRANCE DOOR (SEDAN)
1 2 W A	ENTRANCE DOOR (SEDAN)
1 2 W B	ENTRANCE DOOR (SEDAN)
1 2 X	FR JCT BOX 12V DISC SW
1 2 X 2	FR JCT BOX 12V DISC SW
1 2 Y	FR JCT BOX 12V DISC SW
1 3 A	ALARM & SIGNAL-LO AIR PRIM.
1 3 B	ALARM & SIGNAL-LO AIR SEC.
1 4	LAVATORY-FLUSHING PUMP
1 4 A	LAVATORY-FLUSHING PUMP
1 4 P	LAVATORY-FLUSHING PUMP
1 5	EXTERIOR LTS-MULTI FUNC LEVEL
1 5 A	WIPER & WASHER UPPER WINDSHIELD
1 6	SPEED - SIGNAL +
1 6 A	SPEED - SIGNAL +
1 6 T	SPEED - SIGNAL +
1 7	EXTERIOR LTS-FLASHER UNIT
1 7 A	EXTERIOR LTS-FLASHER UNIT
1 9	DIFFERENTIAL OIL TEMP
2 0	SPEED - SIGNAL -
2 0 T	SPEED - SIGNAL -
2 0 W	SPEED - SIGNAL -
2 1	EXTERIOR LTS-DIRECTIONAL LH
2 1 A	EXTERIOR LTS-DIRECTIONAL LH
2 1 B	EXTERIOR LTS-HAZARD
2 1 C	EXTERIOR LTS-CORNERING LH
2 1 H	EXTERIOR LTS-DIRECTIONAL LH
2 1 K	EXTERIOR LTS-CORNERING
2 1 N	EXTERIOR LTS-CORNERING LH
2 1 P	EXTERIOR LTS-CORNERING LH
2 3	EXTERIOR LTS-DIRECTIONAL RH
2 3	EXTERIOR LTS-DIRECTIONAL RH
2 3 A	EXTERIOR LTS-DIRECTIONAL RH
2 3 B	EXTERIOR LTS-DIRECTIONAL RH
2 3 C	EXTERIOR LTS-CORNERING RH
2 3 N	EXTERIOR LTS-CORNERING RH
2 3 P	EXTERIOR LTS-CORNERING RH
2 4	BAT CPT 24V BATTERY
2 4	FR JCT BOX 24V DISC SW
2 4 A	BOOSTER BLOCK 24V DISC SW
2 4 A	FR JCT BOX 24V DISC SW
2 4 A	RR JCT BOX 24V DISC SW
2 4 B	24V STARTER RLY FEEDING
2 4 B	FR JCT BOX 24V DISC SW
2 4 B A	RR JCT BOX 24V DISC SW
2 4 B C	24 VOLT BATT. CHARGER
2 4 B E	RJB CPT-BAT EQ MONITOR HOT WIRE
2 4 C	FR JCT BOX 24V DISC SW
2 4 C	RR JCT BOX 24V DISC SW
2 4 D	BAT CPT 24V HOT WIRE
2 4 D	FR JCT BOX 24V HOT WIRE
2 4 D	RR JCT BOX 24V HOT WIRE
2 4 D A	A/C JCT BOX 24V HOT WIRE
2 4 D Z	24 V HOT WIRE FOR ZF TRANSM.
2 4 E	BAT CPT 24V DISC SW
2 4 E	FR JCT BOX 24V DISC SW
2 4 E	RR JCT BOX 24V DISC SW
2 4 F	FR JCT BOX 24V DISC SW
2 4 F	RR JCT BOX 24V DISC SW
2 4 G	FR JCT BOX 24V DISC SW
2 4 G	RR JCT BOX 24V DISC SW
2 4 H	FR JCT BOX 24V DISC SW
2 4 H	RR JCT BOX 24V DISC SW
2 4 I	FR JCT BOX 24V IGNITION
2 4 I	RR JCT BOX 24V IGNITION
2 4 I A	FR JCT BOX 24V IGNITION
2 4 I B	FR JCT BOX 24V IGNITION
2 4 I B	RR JCT BOX 24V IGNITION
2 4 I C	FR JCT BOX 24V IGNITION
2 4 I C	RR JCT BOX 24V IGNITION
2 4 I F	FJB 24VOLT IGNITION
2 4 I Z	ZF TANSM. IGNITION
2 4 P	FR JCT BOX 24V DISC SW
2 4 S	24V DISC SW RLY SIGNAL
2 4 S 1	SOUND SYSTEM 24V AMPLIFIER
2 4 S 2	SOUND SYSTEM 24V AMPLIFIER
2 4 S 3	SOUND SYSTEM 24V VIDEO
2 4 S 4	SOUND SYSTEM 24V VIDEO
2 4 S B	SOUND SYSTEM 24V FEEDING
2 4 S S	SOUND SYSTEM 24V FEEDING
2 4 R	24 VOLTS FRONT CAMERA SW.
2 4 V 2	RR JCT BOX 24V DISC SW
2 4 V 3	RR JCT BOX 24V DISC SW
2 4 V 4	RR JCT BOX 24V DISC SW
2 4 V 5	RR JCT BOX 24V DISC SW
2 4 V D	24V HOT WIRE RR JCT BOX
2 4 V F	BAT CPT 24V SW TO FJB & IC
2 4 V A	BATTERY TO EQUALIZER 24V
2 4 V I	RR JCT BOX 24V IGNITION
2 4 V R	BAT CPT 24V DISC SW TO RJB
2 4 W	RR JCT BOX 24V DISC SW (WCL)
2 4 W C	BATT.CPT TO HYD. PUMP (WCL)
2 4 W L	24V BATTERY-HYD. PUMP (WCL)
2 4 Z Z	24 VOLT - ZF TRANSM. POWER
2 5	24 VOLT ALT.SIGNAL MODULE
2 5 A 1	PRE-EXITATION ALT. BOSCH #1
2 5 A 2	PRE-EXITATION ALT. BOSCH #2
2 5 A	T.T. LT. ALTERNATOR #1
2 5 B	12 VOLTS IGN. ALT. SIGNAL MODULE
2 5 D	12 V. ENGINE RUN / HVAC SYSTEM
2 5 E	USE ON VIP ONLY

CIRCUIT NUMBER CODE

No.	DESCRIPTION
25F	12 VOLT IGN. DISTRIBUTION
25H	24 VOLT IGN. ALT. BOSCH
25K	T.T. LT. ALTERNATOR #2
26A	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26B	DRIVER'S WINDOW LIFTER
26C	DRIVER'S WINDOW LIFTER
27	LAVATORY-EMERGENCY SONALERT
28A	A/C & HEAT SYSTEM-HI PRESSURE
28H	TTLT HI LO PRESS
28T	TTLT HI LO PRESS
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29A	A/C & HEAT SYSTEM-DRIVER'S HTR
29B	A/C & HEAT SYSTEM-DRIVER'S HTR
29H	HVAC DASH MODULE
30A	GALLEY
31A	A/C & HEAT SYSTEM-UNLOADER
31B	A/C & HEAT SYSTEM-UNLOADER
31B	WIPER & WASHER SYSTEM
31C	WIPER & WASHER SYSTEM
31D	WIPER & WASHER SYSTEM
31E	WIPER & WASHER SYSTEM
31J	WIPER & WASHER SYSTEM
31X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32B	EXTERIOR LTS-BACK-UP
32C	BACK-UP PWR & SIGNAL
32D	BACK-UP ALARM
35	ENTRANCE DOOR (SEDAN)
35B	ENTRANCE DOOR (SEDAN)
35BB	ENTRANCE DOOR (SEDAN)
35D	ENTRANCE DOOR (SEDAN)
36	JACOB BRAKE SYSREM
36A	JACOB BRAKE SYSREM
38	INTERIOR LTS-24V FLUORESCENT
38A	INTERIOR LTS-24V FLUORESCENT
38C	INTERIOR LTS-24V FLUORESCENT
38D	INTERIOR LTS-24V FLUORESCENT
39	INTERIOR LTS-24V LH CONSOLE SW
39A	INTERIOR LTS-DRIVER"S LTS
39P	READING LIGHTS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
43	HAT RACK FAN
43A	HAT RACK FAN
43B	HAT RACK FAN
43D	HAT RACK FAN
43E	HAT RACK FAN
43F	HAT RACK FAN
43G	HAT RACK FAN
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45A	A/C & HEAT SYSTEM-FULL AIR
45B	A/C & HEAT SYSTEM-WATER PUMP
45C	A/C & HEAT SYSTEM-WATER VALVE
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
48	ENTRANCE DOOR (SEDAN)
48A	ENTRANCE DOOR (SEDAN)
49	ENTRANCE DOOR (SEDAN)
49A	ENTRANCE DOOR (SEDAN)
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL- AIR HORN
52C	ALARM & SIGNAL- AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
62	LAVATORY-OCCUPIED LT
62A	LAVATORY-FLUOR LT
62B	LAVATORY-FLUOR LT
62E	LAVATORY-OCCUP & FLUOR LT
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVERS FAN
64B	DRIVERS FAN
64C	DRIVERS FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65D	DRIVER REC. DAMPER
66	O_PASS. ON/OFF
67	24 VOLT RUN DISTRIBUTION
67A	A/C & HEAT SYSTEM
67C	HEATING WINDSHIELD
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67X	A/C & HEAT SYSTEM
68	DASH & DEFROST DAMPER MOTOR
68A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH
72C	SUN VISOR-LH
72D	SUN VISOR-LH
73	LAVATORY-FEEDING
74	INTERIOR LTS-READING RH
74A	INTERIOR LTS-READING RH
74D	INTERIOR LTS-READING SIGNAL
75	INTERIOR LTS-READING LH
75A	INTERIOR LTS-READING LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85E	STOP LIGHT RLY
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85G	RADIATOR FAN CLUTCH
85X	12V IGN ABS
85Y	ABS SYSTEM
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
86F	ENGINE CTR-STARTER TTLT SIGN
86T	ENGINE CTR-STARTER TTLT SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
100	INTERIOR LTS-GENERAL
100A	INTERIOR LTS-GENERAL
100B	INTERIOR LTS-GENERAL
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	WORLD TRANSM-SOL. SUPPLY
102A	24V STARTER TO BOSCH ALTERNATOR
103	LOW BUOY
104	WORLD TRANSM-SOL. FORWARD
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO

CIRCUIT NUMBER CODE

No.	DESCRIPTION
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
113W	WORLD TR.-REVERSE WARNING
113Z	ZF TRANSM.- REVERSE SIGNAL
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
115W	ZF TRANSM. - CHECK TRANSM. TTLT
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125	GALLEY LAMP
125T	GALLEY LAMP
125W	WORLD TRANSM-RET. INDICATOR
126	KNEELING SYSTEM
126A	KNEELING SYSTEM
126B	KNEELING SYSTEM
126C	KNEELING SYSTEM
126D	KNEELING SYSTEM
126E	KNEELING SYSTEM
126F	KNEELING SYSTEM
126G	KNEELING SYSTEM
126H	KNEELING SYSTEM
126K	KNEELING SYSTEM
126P	KNEELING SYSTEM
126R	KNEELING SYSTEM
126W	5 MPH N.C. SIGNAL (WCL)
126S	KNEELING SYSTEM
126T	KNEELING SYSTEM
127	WORLD TRANSM-LUBE PRESS SW.
127	WORLD TRANSM-RETARDER FEED SOL.
127	POWER- PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT - BURNER ON SIGNAL
128	WORLD TRANSM-SOL. C2
129	POWER- PRE-HEAT WATER HEATER
129B	POWER- PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	A/C & HEAT SYSTEM-EVAP FAN MOTOR
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	GALLEY-HEAT CONTAINERS
133A	GALLEY-HEAT CONTAINERS
133B	GALLEY-HEAT CONTAINERS
133C	GALLEY-HEAT CONTAINERS
133	WORLD TRANSM-RET. ACTUATOR HI
134	GALLEY-HEAT CONTAINERS
134A	GALLEY-HEAT CONTAINERS
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135A	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	GALLEY-ACCESSORIES
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146A	TRANSMISSION-12V IGNITION
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	WORLD TRANSM-OIL TEMP
147A	ETHER COLD START & D.R.L.
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
152	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	WORLD TRANSM-SPARE INPUT (-)
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157B	ABS SYSTEM
157D	A.T.C. SYSTEM
157E	A.T.C. SYSTEM
157F	A.T.C. SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	W. TR.-OUT SPEED INTERLOCK
167Z	ZF- OUT SPEED INTERLOCK
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170	LUGGAGE DOOR LOCK
170C	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
225	LAVATORY FAN
225A	LAVATORY FAN
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
231Z	ZF NEUTRAL SIGNAL GRD
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251A	DDEC III - DATA LOGGER 12 H.W.
251	DDEC III - PRODRIVER 12V H.W.
253	GALLEY-MICROWAVE
254	GALLEY-12V FRIGO NORCOLD
254A	GALLEY-FRIGO
255	GALLEY-COFEEMAKER
255A	GALLEY-COFEEMAKER
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED

CIRCUIT NUMBER CODE

No.	DESCRIPTION
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
260	WINDOW AJAR
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
292	FAN CLUTCH RADIATOR SPD 2
300	DOOR AJAR MAGN.SW. (WCL)
300A	POWER SYSTEM SW. (WCL)
300B	DOOR AJAR ALARM (WCL)
301	POWER SYSTEM SW. (WCL)
302	DOOR AJAR T.T.LT. (WCL)
302A	DOOR AJAR ALARM SIGN.(WCL)
302B	DOOR AJAR MAGN.SW. (WCL)
303	REMOTE WALL SW. DWN (WCL)
304	REMOTE WALL SW. UP (WCL)
305	PARK. BRAKE SOL. VALVE (WCL)
305A	PARK. BRAKE SAFETY SW. (WCL)
306	CONTROL SYSTEM (WCL RICON)
307	CONTROL SYSTEM (WCL RICON)
308	CONTROL SYSTEM (WCL RICON)
309	CONTROL SYSTEM (WCL RICON)
310	EATON TRANSMISSION
311	EATON TRANSMISSION
312	EATON TRANSMISSION
313	EATON TRANSMISSION
314	EATON TRANSMISSION
315	EATON TRANSMISSIOM
316	EATON TRANSMISSION - EPL
317	EATON TRANSMISSION
318	EATON TRANSMISSION
319	EATON TRANSMISSION
320	EATON TRANSMISSION
321	EATON TRANSMISSION
322	EATON TRANSMISSIION
323	EATON TRANSMISSION
324	EATON TRANSMISSION
325	EATON TRANSMISSION
326	EATON TRANSMISSION
327	EATON TRANSMISSION
328	EATON TRANSMISSION
329	EATON TRANSMISSION
330	EATON TRANSMISSION - EPL
331	EATON TRANSMISSION - EPL
332	EATON TRANSMISSION
333	EATON TRANSMISSION - 12V BATTERY
334	EATON GENERATION 2
416	DDEV IV- SENSOR SUPPLY 5VDC
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
452	DDEC IV- SENSOR RETURN (ENGINE)
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
524B	ZF SIGNAL – AUX. SENSOR THROTTLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE
541	DDEC III-CRUISE SET SW
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
565Z	DECELERATION LTS
583	DDEC III-ENGINE BRAKE 4 CYL.
700	J1587(+)
701	J1587(-) – GROUND
705	ZF SIGNALS
706	ZF SIGNALS
707	ZF SIGNALS
717	ZF SIGNALS
718	ZF SIGNALS
719	ZF SIGNALS
720	ZF SIGNALS
740	EASY START VALVE
761	ZF SIGNALS
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
905	DDEC IV- AMBIANT AIR TEMPERATURE
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
925	J1939-HIGH
926	J1939-LOW
927	J1939-SHIELD
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
953A	THROTTLE INHIBIT
976	DDEC IV- RELATIVE HUMIDITY
979	DDEC III-ENGINE BRAKE 2 CYL.
988	DDEC III-CRUISE ENABLE LTS.

CIRCUIT NUMBER CODE

No.	DESCRIPTION
B A	INTERIOR LTS-110V FLUORESCENT
B B	INTERIOR LTS-110V FLUORESCENT
D 1	SOUND SYSTEM-FR RH SPEAKER
D 2	SOUND SYSTEM-FR RH SPEAKER
D 3	SOUND SYSTEM-FR RH SPEAKER
D 4	SOUND SYSTEM-RR RH SPEAKER
D 5	SOUND SYSTEM-RR RH SPEAKER
D 6	SOUND SYSTEM-RR RH SPEAKER
D 7	SOUND SYSTEM-RR RH SPEAKER
D 8	SOUND SYSTEM-RR RH SPEAKER
D 3 4	SOUND SYSTEM-RR RH SPEAKER
D 6 7	SOUND SYSTEM-RR RH SPEAKER
G 1	SOUND SYSTEM-FR LH SPEAKER
G 2	SOUND SYSTEM-FR LH SPEAKER
G 3	SOUND SYSTEM-FR LH SPEAKER
G 4	SOUND SYSTEM-RR LH SPEAKER
G 5	SOUND SYSTEM-RR LH SPEAKER
G 6	SOUND SYSTEM-RR LH SPEAKER
G 7	SOUND SYSTEM-RR LH SPEAKER
G 8	SOUND SYSTEM-RR LH SPEAKER
G 3 4	SOUND SYSTEM-RR LH SPEAKER
G 6 7	SOUND SYSTEM-RR LH SPEAKER
L 1 A	INTERIOR LTS-110V FLUORESCENT
L 1 B	INTERIOR LTS-110V FLUORESCENT
L 2 A	INTERIOR LTS-110V FLUORESCENT
L 2 B	INTERIOR LTS-110V FLUORESCENT
L 0	110V RECEPTACLE- 110V FLUOR.
L 1	110V RECEPTACLE- 110V FLUOR.
L 2	110V RECEPTACLE- 110V FLUOR.
R A	INTERIOR LTS-110V FLUORESCENT
R B	INTERIOR LTS-110V FLUORESCENT
S H 1	SHIELD CHASSIS GRD
S H 2	SHIELD CHASSIS GRD
S H 3	SHIELD CHASSIS GRD
S H 4	SHIELD CHASSIS GRD
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 10	SPARE-RJB TO LUGG CPT #1
S P 11	SPARE-FJB TO RJB
S P 12	SPARE-RJB TO ENGINE
S P 13	SPARE-RJB TO ENGINE
S P 14	SPARE-FJB TO RJB
S P 15	SPARE-RJB TO ENGINE
S P 16	SPARE-RJB TO ENGINE
S P 17	SPARE-RJB TO ENGINE
S P 18	SPARE-FJB TO RJB
S P 24	SPARE-RJB TO LAVATORY ROOF
S P 25	SPARE-RJB TO LAVATORY ROOF
S P 26	SPARE-RJB TO LAVATORY ROOF
S P 27	SPARE-RJB TO LH HAT RACK
S P 28	SPARE-RJB TO LH HAT RACK
S P 31	SPARE-RJB TO RH HAT RACK
S P 32	SPARE-RJB TO RH HAT RACK
S P 33	SPARE-FJB TO RJB
S P 38	SPARE-FJB TO RJB
S P 43	SPARE-FJB TO RJB
S P 45	SPARE-FJB TO RJB
S P 46	SPARE-RJB TO LH FR ROOF
S P 48	SPARE-RJB TO DASH CENTER PANEL
S P 56	SPARE-ENGINE TO RH SW PANEL
S P 57	SPARE-DASH CENTER PANEL TO ENG.
S P 58	SPARE-DASH CENTER PANEL TO ENG.
S P 59	SPARE-FJB TO ENGINE
S P 61	SPARE-FJB TO DASH RH PANEL
S P 68	SPARE-FJB TO ENGINE
S P 69	SPARE-FJB TO FR AXLE
S P 70	SPARE-FJB TO FR AXLE
S P 71	SPARE-FJB TO RH SW PANEL
S P 72	SPARE-FJB TO FR SERV CPT
S P 74	SPARE-FJB TO LH CONSOLE
S P 77	SPARE-FJB TO EVAPORATOR CPT
S P 78	SPARE-FJB TO CONDENSER CPT
S P 79	SPARE-FJB TO CONDENSER CPT
S P 87	SPARE-RJB TO LH HAT RACK
S P 88	SPARE-RJB TO RH HAT RACK
S P 92	SPARE-RJB TO CONDENSER CPT
S P 93	SPARE-RJB TO EVAPORATOR CPT
S P 94	SPARE-RJB TO RR ROOF
S P 95	SPARE-RJB TO RR ROOF
S P 96	SPARE-RJB TO LUGG CPT #2
S P 97	SPARE-RJB TO LUGG CPT #3
S P 98	SPARE-RJB TO LUGG CPT #3
S P 104	SPARE-RJB TO ENGINE CPT
S P 105	SPARE-FJB TO ENGINE
S P 106	SPARE-RJB TO BATT. CPT.
S P 107	SPARE-RJB TO BATT. CPT.
S P 108	SPARE-RJB TO BATT. CPT.
S P 109	SPARE-RJB TO ENGINE CPT.
S P 110	SPARE-RJB TO ENGINE CPT.
S P 111	SPARE-RJB TO ENGINE CPT.
S P 112	SPARE-RJB TO ENGINE CPT.
S P 114	SPARE-FJB TO U/DASH WIPER
S P 115	SPARE-FJB TO U/DASH WIPER
S P 116	SPARE-FJB TO U/DASH FLOOR
S P 117	SPARE-FJB TO U/DASH FLOOR
S P 119	SPARE-RJB TO ENGINE CPT.
SPZ 1	SPARE WIRE-ZF TRANSM.
SPZ 2	SPARE WIRE-ZF TRANSM.
SPZ 3	SPARE WIRE-ZF TRANSM.
SPZ 4	SPARE WIRE-ZF TRANSM.
SPZ 5	SPARE WIRE-ZF TRANSM.
SPZ 6	SPARE WIRE-ZF TRANSM.
W C	A/C & HEAT SYST-EVAP CTR SIGN
Y C	INTERIOR LTS-110V FLUORESCENT
Y D	INTERIOR LTS-110V FLUORESCENT
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0	GALLEY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A	A/C SYSTEM-EVAP. GRD
0 A A	RS - VOLTAGE REGULATOR GRD
0 B 1	EC – RR JCT PANEL GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN EVAP. & CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D	RJB – IGNITION RELAY
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 E	RS - HAT RACK ACCES. LH GRD
0 E A	EATON TRANSMISSION GRD
0 F	RS - HAT RACK ACCES. RH GRD
0 G	RS - HAT RACK ACCES. RH GRD
0 H	RS - LAVATORY ACCES. GRD
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L 6	FS - FRONT SERVICE CPT LTS GRD
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR (SEDAN) GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 1	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	FS - SOUND SYS. JCT PANEL GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R E	RADIO &CTRL HEAD CHASSIS GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN - GND RELAY
0 S A	EC-BOSCH ALT. GROUND
0 S 2	SOUND SYSTEM RADIO GRD
0 S 3	SOUND SYSTEM VIDEO GRD
0 S S	SOUNS SYSTEM BATT. GRD
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 T 5	FS - HVAC DASH MODULE. GRD
O T 6	FS - HVAC DASH MODULE. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS SYSTEM - GRD
0 Y 2	ABS SYSTEM - GRD
0 Y 3	ABS SYSTEM - GRD
0 Y 4	ABS SYSTEM - GRD

CIRCUIT NUMBER CODE

No.	DESCRIPTION
0 Y 5	ABS SYSTEM - GRD
0 Y 6	ABS SYSTEM - GRD
0 Z	RR JCT BOX CPT GRD STUD
0 Z 0	RR JCT BOX CPT GRD STUD
0Z 1	ZF TRANSM. GRD
0Z 2	ZF TRANSM. GRD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 E	A/C & HEAT SYSTEM EVAP CONT
2 F	A/C & HEAT SYSTEM EVAP CONT
4	HOSTESS & PASSENGER CHIME
4 A	HOSTESS & PASSENGER CHIME
4 B	PASSENGER CHIME
4 C	HOSTESS CHIME
5	INTERIOR LTS-AISLE & EMERG. EXIT
5	UPPER WINDSHIELD DEFROSTER
5 D	UPPER WINDSHIELD DEFROSTER
5 E	UPPER WINDSHIELD DEFROSTER
5 N	INTERIOR LTS-EMERGENCY EXIT
5 N C	SPEED SIGNAL LOWER 5MPH
5 N O	SPEED SIGNAL HIGHER 5MPH
6	INTERIOR LTS-AISLE
7 B	ENTRANCE DOOR (SEDAN)
7 D	ENTRANCE DOOR (SEDAN)
7 D A	ENTRANCE DOOR (SEDAN)
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
1 0	INTERIOR LTS-LUGGAGE CPT
1 0 A	INTERIOR LTS-LUGGAGE CPT
1 0 B	INTERIOR LTS-LUGGAGE CPT
1 0 D	INTERIOR LTS-LUGGAGE CPT
1 0 F	INTERIOR LTS-LUGGAGE CPT
1 0 H	INTERIOR LTS-LUGGAGE CPT
1 0 K	INTERIOR LTS-LUGGAGE CPT
1 0 R	INTERIOR LTS-LUGGAGE DOOR AJAR
1 1	FR DESTINATION SIGN
1 1 A	FR DESTINATION SIGN
1 1 B	FR DESTINATION SIGN
1 1 C	FR DESTINATION SIGN
1 1 D	FR DESTINATION SIGN
1 1 E	FR DESTINATION SIGN
1 1 K	FR DESTINATION SIGN
1 2	12V BAT ELECTRONIC JCT BLOCK
1 2	BAT CPT 12V BATTERY
1 2 A	FR JCT BOX 12V DISC SW
1 2 A	RR JCT BOX 12V DISC SW
1 2 B	12V BAT ELECTRICAL JCT BLOCK
1 2 B	RR JCT BOX 12V DISC SW
1 2 B	FR JCT BOX 12V DISC SW
1 2 B E	BAT. EQUALIZER MONITOR
1 2 C	FR JCT BOX 12V DISC SW
1 2 C	RR JCT BOX 12V HOT WIRE
1 2 C E	RR JCT BOX 12V HOT WIRE
1 2 D	BAT CPT 12V BATTERY
1 2 D A	12V IGNITION DISTRIBUTION
1 2 D T	TTLT MODULE
1 2 D Z	ZF TRANSM. HOTWIRE
1 2 E	FR JCT BOX 12V DISC SW
1 2 E	RR JCT BOX 12V DISC SW
1 2 F	BAT CPT 12V FJB & IC
1 2 F	FR JCT BOX 12V DISC SW
1 2 G	FR JCT BOX 12V DISC SW
1 2 H	12 V IGNITION D.T.RUN LIGHT
1 2 J	FR JCT BOX 12V DISC SW
1 2 I	12V IGNITION DISTRIBUTION
1 2 I	RR JCT BOX 12V IGNITION
1 2 K	12 VOLT IGN. TTLT & HVAC MODULE
1 2 I A	12V IGNITION DISTRIBUTION
1 2 I A	FR JCT BOX 12V IGNITION
1 2 I B	FR JCT BOX 12V IGNITION
1 2 I E	ABS-FR JCT BOX 12V IGNITION
1 2 I F	FR JCT BOX 12V IGNITION
1 2 I Z	12 V IGNITION FOR ZF TRANSM.
1 2 L X	CLUSTER (12V HOT WIRE)
1 2 M	ABS-FR JCT BOX 12V DISC. SW.
1 2 P	LH CONSOLE POWER OUTLET
1 2 R	BAT CPT 12V DISC RLY TO RJB
1 2 R	MEMORY BATTERY RADIO
1 2 S	SOUND SYSTEM 12V RADIO
1 2 S 1	SOUND SYSTEM 12V RADIO
1 2 S 1 A	DVD KARAOKE FEEDING
1 2 S 2	SOUND SYSTEM 12V RADIO
1 2 S 2 A	DVD KARAOKE FEEDING
1 2 S B	SOUND SYSTEM 12V FEEDING
1 2 S S	SOUND SYSTEM 12V FEEDING
1 2 V	RR JCT BOX 12V DISC SW
1 2 V A	BATTERY TO EQUALIZER 12V
1 2 V D	12V HOT WIRE DISTRIBUTION
1 2 V F	BAT CPT 12V FJB & IC
1 2 V I	12V IGNITION DISTRIBUTION
1 2 V R	BAT CPT 12V DISC RLY TO RJB
1 2 W	12V BATTERY DDEC III
1 2 W	ENTRANCE DOOR (SEDAN)
1 2 W A	ENTRANCE DOOR (SEDAN)
1 2 W B	ENTRANCE DOOR (SEDAN)
1 2 X	FR JCT BOX 12V DISC SW
1 2 X 2	FR JCT BOX 12V DISC SW
1 2 Y	FR JCT BOX 12V DISC SW
1 3 A	ALARM & SIGNAL-LO AIR PRIM.
1 3 B	ALARM & SIGNAL-LO AIR SEC.
1 4	LAVATORY-FLUSHING PUMP
1 4 A	LAVATORY-FLUSHING PUMP
1 4 P	LAVATORY-FLUSHING PUMP
1 5	EXTERIOR LTS-MULTI FUNC LEVEL
1 5 A	WIPER & WASHER UPPER WINDSHIELD
1 6	SPEED - SIGNAL +
1 6 A	SPEED - SIGNAL +
1 6 T	SPEED - SIGNAL +
1 7	EXTERIOR LTS-FLASHER UNIT
1 7 A	EXTERIOR LTS-FLASHER UNIT
1 9	DIFFERENTIAL OIL TEMP
2 0	SPEED - SIGNAL -
2 0 T	SPEED - SIGNAL -
2 0 W	SPEED - SIGNAL -
2 1	EXTERIOR LTS-DIRECTIONAL LH
2 1 A	EXTERIOR LTS-DIRECTIONAL LH
2 1 B	EXTERIOR LTS-HAZARD
2 1 C	EXTERIOR LTS-CORNERING LH
2 1 H	EXTERIOR LTS-DIRECTIONAL LH
2 1 K	EXTERIOR LTS-CORNERING
2 1 N	EXTERIOR LTS-CORNERING LH
2 1 P	EXTERIOR LTS-CORNERING LH
2 3	EXTERIOR LTS-DIRECTIONAL RH
2 3	EXTERIOR LTS-DIRECTIONAL RH
2 3 A	EXTERIOR LTS-DIRECTIONAL RH
2 3 B	EXTERIOR LTS-DIRECTIONAL RH
2 3 C	EXTERIOR LTS-CORNERING RH
2 3 N	EXTERIOR LTS-CORNERING RH
2 3 P	EXTERIOR LTS-CORNERING RH
2 4	BAT CPT 24V BATTERY
2 4	FR JCT BOX 24V DISC SW
2 4 A	BOOSTER BLOCK 24V DISC SW
2 4 A	FR JCT BOX 24V DISC SW
2 4 A	RR JCT BOX 24V DISC SW
2 4 B	24V STARTER RLY FEEDING
2 4 B	FR JCT BOX 24V DISC SW
2 4 B A	RR JCT BOX 24V DISC SW
2 4 B C	24 VOLT BATT. CHARGER
2 4 B E	RJB CPT-BAT EQ MONITOR HOT WIRE
2 4 C	FR JCT BOX 24V DISC SW
2 4 C	RR JCT BOX 24V DISC SW
2 4 D	BAT CPT 24V HOT WIRE
2 4 D	FR JCT BOX 24V HOT WIRE
2 4 D	RR JCT BOX 24V HOT WIRE
2 4 D A	A/C JCT BOX 24V HOT WIRE
2 4 D Z	24 V HOT WIRE FOR ZF TRANSM.
2 4 E	BAT CPT 24V DISC SW
2 4 E	FR JCT BOX 24V DISC SW
2 4 E	RR JCT BOX 24V DISC SW
2 4 F	FR JCT BOX 24V DISC SW
2 4 F	RR JCT BOX 24V DISC SW
2 4 G	FR JCT BOX 24V DISC SW
2 4 G	RR JCT BOX 24V DISC SW
2 4 H	FR JCT BOX 24V DISC SW
2 4 H	RR JCT BOX 24V DISC SW
2 4 I	FR JCT BOX 24V IGNITION
2 4 I	RR JCT BOX 24V IGNITION
2 4 I A	FR JCT BOX 24V IGNITION
2 4 I B	FR JCT BOX 24V IGNITION
2 4 I B	RR JCT BOX 24V IGNITION
2 4 I C	FR JCT BOX 24V IGNITION
2 4 I C	RR JCT BOX 24V IGNITION
2 4 I F	FJB 24VOLT IGNITION
2 4 I Z	ZF TANSM. IGNITION
2 4 P	FR JCT BOX 24V DISC SW
2 4 S	24V DISC SW RLY SIGNAL
2 4 S 1	SOUND SYSTEM 24V AMPLIFIER
2 4 S 2	SOUND SYSTEM 24V AMPLIFIER
2 4 S 3	SOUND SYSTEM 24V VIDEO
2 4 S 4	SOUND SYSTEM 24V VIDEO
2 4 S B	SOUND SYSTEM 24V FEEDING
2 4 S S	SOUND SYSTEM 24V FEEDING
2 4 R	24 VOLTS FRONT CAMERA SW.
2 4 V 2	RR JCT BOX 24V DISC SW
2 4 V 3	RR JCT BOX 24V DISC SW
2 4 V 4	RR JCT BOX 24V DISC SW
2 4 V 5	RR JCT BOX 24V DISC SW
2 4 V D	24V HOT WIRE RR JCT BOX
2 4 V F	BAT CPT 24V SW TO FJB & IC
2 4 V A	BATTERY TO EQUALIZER 24V
2 4 V I	RR JCT BOX 24V IGNITION
2 4 V R	BAT CPT 24V DISC SW TO RJB
2 4 W	RR JCT BOX 24V DISC SW (WCL)
2 4 W C	BATT.CPT TO HYD. PUMP (WCL)
2 4 W L	24V BATTERY-HYD. PUMP (WCL)
2 4 Z Z	24 VOLT - ZF TRANSM. POWER
2 5	24 VOLT ALT.SIGNAL MODULE
2 5 A 1	PRE-EXITATION ALT. BOSCH #1
2 5 A 2	PRE-EXITATION ALT. BOSCH #2
2 5 A	T.T. LT. ALTERNATOR #1
2 5 B	12 VOLTS IGN. ALT. SIGNAL MODULE
2 5 D	12 V. ENGINE RUN / HVAC SYSTEM
2 5 E	USE ON VIP ONLY

CIRCUIT NUMBER CODE

No.	DESCRIPTION
25F	12 VOLT IGN. DISTRIBUTION
25H	24 VOLT IGN. ALT. BOSCH
25K	T.T. LT. ALTERNATOR #2
26A	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26B	DRIVER'S WINDOW LIFTER
26C	DRIVER'S WINDOW LIFTER
27	LAVATORY-EMERGENCY SONALERT
28A	A/C & HEAT SYSTEM-HI PRESSURE
28H	TTLT HI LO PRESS
28T	TTLT HI LO PRESS
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29A	A/C & HEAT SYSTEM-DRIVER'S HTR
29B	A/C & HEAT SYSTEM-DRIVER'S HTR
29H	HVAC DASH MODULE
30A	GALLEY
31A	A/C & HEAT SYSTEM-UNLOADER
31B	A/C & HEAT SYSTEM-UNLOADER
31B	WIPER & WASHER SYSTEM
31C	WIPER & WASHER SYSTEM
31D	WIPER & WASHER SYSTEM
31E	WIPER & WASHER SYSTEM
31J	WIPER & WASHER SYSTEM
31X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32B	EXTERIOR LTS-BACK-UP
32C	BACK-UP PWR & SIGNAL
32D	BACK-UP ALARM
35	ENTRANCE DOOR (SEDAN)
35B	ENTRANCE DOOR (SEDAN)
35BB	ENTRANCE DOOR (SEDAN)
35D	ENTRANCE DOOR (SEDAN)
36	JACOB BRAKE SYSREM
36A	JACOB BRAKE SYSREM
38	INTERIOR LTS-24V FLUORESCENT
38A	INTERIOR LTS-24V FLUORESCENT
38C	INTERIOR LTS-24V FLUORESCENT
38D	INTERIOR LTS-24V FLUORESCENT
39	INTERIOR LTS-24V LH CONSOLE SW
39A	INTERIOR LTS-DRIVER"S LTS
39P	READING LIGHTS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
43	HAT RACK FAN
43A	HAT RACK FAN
43B	HAT RACK FAN
43D	HAT RACK FAN
43E	HAT RACK FAN
43F	HAT RACK FAN
43G	HAT RACK FAN
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45A	A/C & HEAT SYSTEM-FULL AIR
45B	A/C & HEAT SYSTEM-WATER PUMP
45C	A/C & HEAT SYSTEM-WATER VALVE
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
48	ENTRANCE DOOR (SEDAN)
48A	ENTRANCE DOOR (SEDAN)
49	ENTRANCE DOOR (SEDAN)
49A	ENTRANCE DOOR (SEDAN)
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL- AIR HORN
52C	ALARM & SIGNAL- AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
62	LAVATORY-OCCUPIED LT
62A	LAVATORY-FLUOR LT
62B	LAVATORY-FLUOR LT
62E	LAVATORY-OCCUP & FLUOR LT
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVERS FAN
64B	DRIVERS FAN
64C	DRIVERS FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65D	DRIVER REC. DAMPER
66	O_PASS. ON/OFF
67	24 VOLT RUN DISTRIBUTION
67A	A/C & HEAT SYSTEM
67C	HEATING WINDSHIELD
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67X	A/C & HEAT SYSTEM
68	DASH & DEFROST DAMPER MOTOR
68A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH
72C	SUN VISOR-LH
72D	SUN VISOR-LH
73	LAVATORY-FEEDING
74	INTERIOR LTS-READING RH
74A	INTERIOR LTS-READING RH
74D	INTERIOR LTS-READING SIGNAL
75	INTERIOR LTS-READING LH
75A	INTERIOR LTS-READING LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85E	STOP LIGHT RLY
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85G	RADIATOR FAN CLUTCH
85X	12V IGN ABS
85Y	ABS SYSTEM
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
86F	ENGINE CTR-STARTER TTLT SIGN
86T	ENGINE CTR-STARTER TTLT SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
100	INTERIOR LTS-GENERAL
100A	INTERIOR LTS-GENERAL
100B	INTERIOR LTS-GENERAL
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	WORLD TRANSM-SOL. SUPPLY
102A	24V STARTER TO BOSCH ALTERNATOR
103	LOW BUOY
104	WORLD TRANSM-SOL. FORWARD
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO

CIRCUIT NUMBER CODE

No.	DESCRIPTION
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
113W	WORLD TR.-REVERSE WARNING
113Z	ZF TRANSM.- REVERSE SIGNAL
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
115W	ZF TRANSM. - CHECK TRANSM. TTLT
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125	GALLEY LAMP
125T	GALLEY LAMP
125W	WORLD TRANSM-RET. INDICATOR
126	KNEELING SYSTEM
126A	KNEELING SYSTEM
126B	KNEELING SYSTEM
126C	KNEELING SYSTEM
126D	KNEELING SYSTEM
126E	KNEELING SYSTEM
126F	KNEELING SYSTEM
126G	KNEELING SYSTEM
126H	KNEELING SYSTEM
126K	KNEELING SYSTEM
126P	KNEELING SYSTEM
126R	KNEELING SYSTEM
126W	5 MPH N.C. SIGNAL (WCL)
126S	KNEELING SYSTEM
126T	KNEELING SYSTEM
127	WORLD TRANSM-LUBE PRESS SW.
127	WORLD TRANSM-RETARDER FEED SOL.
127	POWER- PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT - BURNER ON SIGNAL
128	WORLD TRANSM-SOL. C2
129	POWER- PRE-HEAT WATER HEATER
129B	POWER- PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	A/C & HEAT SYSTEM-EVAP FAN MOTOR
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	GALLEY-HEAT CONTAINERS
133A	GALLEY-HEAT CONTAINERS
133B	GALLEY-HEAT CONTAINERS
133C	GALLEY-HEAT CONTAINERS
133	WORLD TRANSM-RET. ACTUATOR HI
134	GALLEY-HEAT CONTAINERS
134A	GALLEY-HEAT CONTAINERS
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135A	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	GALLEY-ACCESSORIES
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146A	TRANSMISSION-12V IGNITION
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	WORLD TRANSM-OIL TEMP
147A	ETHER COLD START & D.R.L.
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
152	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	WORLD TRANSM-SPARE INPUT (-)
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157B	ABS SYSTEM
157D	A.T.C. SYSTEM
157E	A.T.C. SYSTEM
157F	A.T.C. SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	W. TR.-OUT SPEED INTERLOCK
167Z	ZF- OUT SPEED INTERLOCK
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170	LUGGAGE DOOR LOCK
170C	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
225	LAVATORY FAN
225A	LAVATORY FAN
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
231Z	ZF NEUTRAL SIGNAL GRD
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251A	DDEC III - DATA LOGGER 12 H.W.
251	DDEC III - PRODRIVER 12V H.W.
253	GALLEY-MICROWAVE
254	GALLEY-12V FRIGO NORCOLD
254A	GALLEY-FRIGO
255	GALLEY-COFEEMAKER
255A	GALLEY-COFEEMAKER
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED

CIRCUIT NUMBER CODE

No.	DESCRIPTION
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
260	WINDOW AJAR
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
292	FAN CLUTCH RADIATOR SPD 2
300	DOOR AJAR MAGN.SW. (WCL)
300A	POWER SYSTEM SW. (WCL)
300B	DOOR AJAR ALARM (WCL)
301	POWER SYSTEM SW. (WCL)
302	DOOR AJAR T.T.LT. (WCL)
302A	DOOR AJAR ALARM SIGN.(WCL)
302B	DOOR AJAR MAGN.SW. (WCL)
303	REMOTE WALL SW. DWN (WCL)
304	REMOTE WALL SW. UP (WCL)
305	PARK. BRAKE SOL. VALVE (WCL)
305A	PARK. BRAKE SAFETY SW. (WCL)
305A1	DOOR AJAR - PARK. BRAKE (WCL)
306	CONTROL SYSTEM (WCL RICON)
307	CONTROL SYSTEM (WCL RICON)
308	CONTROL SYSTEM (WCL RICON)
309	CONTROL SYSTEM (WCL RICON)
310	EATON TRANSMISSION
311	EATON TRANSMISSION
312	EATON TRANSMISSION
313	EATON TRANSMISSION
314	EATON TRANSMISSION
315	EATON TRANSMISSIOM
316	EATON TRANSMISSION - EPL
317	EATON TRANSMISSION
318	EATON TRANSMISSION
319	EATON TRANSMISSION
320	EATON TRANSMISSION
321	EATON TRANSMISSION
322	EATON TRANSMISSIION
323	EATON TRANSMISSION
324	EATON TRANSMISSION
325	EATON TRANSMISSION
326	EATON TRANSMISSION
327	EATON TRANSMISSION
328	EATON TRANSMISSION
329	EATON TRANSMISSION
330	EATON TRANSMISSION - EPL
331	EATON TRANSMISSION - EPL
332	EATON TRANSMISSION
333	EATON TRANSMISSION - 12V BATTERY
334	EATON GENERATION 2
416	DDEV IV- SENSOR SUPPLY 5VDC
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
452	DDEC IV- SENSOR RETURN (ENGINE)
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
524B	ZF SIGNAL – AUX. SENSOR THROTTLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE
541	DDEC III-CRUISE SET SW
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
565Z	DECELERATION LTS
583	DDEC III-ENGINE BRAKE 4 CYL.
700	J1587(+)
701	J1587(-) – GROUND
705	ZF SIGNALS
706	ZF SIGNALS
707	ZF SIGNALS
717	ZF SIGNALS
718	ZF SIGNALS
719	ZF SIGNALS
720	ZF SIGNALS
740	EASY START VALVE
761	ZF SIGNALS
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
905	DDEC IV- AMBIANT AIR TEMPERATURE
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
925	J1939-HIGH
926	J1939-LOW
927	J1939-SHIELD
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
953A	THROTTLE INHIBIT
976	DDEC IV- RELATIVE HUMIDITY
979	DDEC III-ENGINE BRAKE 2 CYL.
988	DDEC III-CRUISE ENABLE LTS.

CIRCUIT NUMBER CODE

No.	DESCRIPTION
B A	INTERIOR LTS-110V FLUORESCENT
B B	INTERIOR LTS-110V FLUORESCENT
D 1	SOUND SYSTEM-FR RH SPEAKER
D 2	SOUND SYSTEM-FR RH SPEAKER
D 3	SOUND SYSTEM-FR RH SPEAKER
D 4	SOUND SYSTEM-RR RH SPEAKER
D 5	SOUND SYSTEM-RR RH SPEAKER
D 6	SOUND SYSTEM-RR RH SPEAKER
D 7	SOUND SYSTEM-RR RH SPEAKER
D 8	SOUND SYSTEM-RR RH SPEAKER
D 3 4	SOUND SYSTEM-RR RH SPEAKER
D 6 7	SOUND SYSTEM-RR RH SPEAKER
G 1	SOUND SYSTEM-FR LH SPEAKER
G 2	SOUND SYSTEM-FR LH SPEAKER
G 3	SOUND SYSTEM-FR LH SPEAKER
G 4	SOUND SYSTEM-RR LH SPEAKER
G 5	SOUND SYSTEM-RR LH SPEAKER
G 6	SOUND SYSTEM-RR LH SPEAKER
G 7	SOUND SYSTEM-RR LH SPEAKER
G 8	SOUND SYSTEM-RR LH SPEAKER
G 3 4	SOUND SYSTEM-RR LH SPEAKER
G 6 7	SOUND SYSTEM-RR LH SPEAKER
L 1 A	INTERIOR LTS-110V FLUORESCENT
L 1 B	INTERIOR LTS-110V FLUORESCENT
L 2 A	INTERIOR LTS-110V FLUORESCENT
L 2 B	INTERIOR LTS-110V FLUORESCENT
L 0	110V RECEPTACLE- 110V FLUOR.
L 1	110V RECEPTACLE- 110V FLUOR.
L 2	110V RECEPTACLE- 110V FLUOR.
R A	INTERIOR LTS-110V FLUORESCENT
R B	INTERIOR LTS-110V FLUORESCENT
S H 1	SHIELD CHASSIS GRD
S H 2	SHIELD CHASSIS GRD
S H 3	SHIELD CHASSIS GRD
S H 4	SHIELD CHASSIS GRD
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 10	SPARE-RJB TO LUGG CPT #1
S P 11	SPARE-FJB TO RJB
S P 12	SPARE-RJB TO ENGINE
S P 13	SPARE-RJB TO ENGINE
S P 14	SPARE-FJB TO RJB
S P 15	SPARE-RJB TO ENGINE
S P 16	SPARE-RJB TO ENGINE

No.	DESCRIPTION
S P 17	SPARE-RJB TO ENGINE
S P 18	SPARE-FJB TO RJB
S P 24	SPARE-RJB TO LAVATORY ROOF
S P 25	SPARE-RJB TO LAVATORY ROOF
S P 26	SPARE-RJB TO LAVATORY ROOF
S P 27	SPARE-RJB TO LH HAT RACK
S P 28	SPARE-RJB TO LH HAT RACK
S P 31	SPARE-RJB TO RH HAT RACK
S P 32	SPARE-RJB TO RH HAT RACK
S P 33	SPARE-FJB TO RJB
S P 38	SPARE-FJB TO RJB
S P 43	SPARE-FJB TO RJB
S P 45	SPARE-FJB TO RJB
S P 46	SPARE-RJB TO LH FR ROOF
S P 48	SPARE-RJB TO DASH CENTER PANEL
S P 56	SPARE-ENGINE TO RH SW PANEL
S P 57	SPARE-DASH CENTER PANEL TO ENG.
S P 58	SPARE-DASH CENTER PANEL TO ENG.
S P 59	SPARE-FJB TO ENGINE
S P 61	SPARE-FJB TO DASH RH PANEL
S P 68	SPARE-FJB TO ENGINE
S P 69	SPARE-FJB TO FR AXLE
S P 70	SPARE-FJB TO FR AXLE
S P 71	SPARE-FJB TO RH SW PANEL
S P 72	SPARE-FJB TO FR SERV CPT
S P 74	SPARE-FJB TO LH CONSOLE
S P 77	SPARE-FJB TO EVAPORATOR CPT
S P 78	SPARE-FJB TO CONDENSER CPT
S P 79	SPARE-FJB TO CONDENSER CPT
S P 87	SPARE-RJB TO LH HAT RACK
S P 88	SPARE-RJB TO RH HAT RACK
S P 92	SPARE-RJB TO CONDENSER CPT
S P 93	SPARE-RJB TO EVAPORATOR CPT
S P 94	SPARE-RJB TO RR ROOF
S P 95	SPARE-RJB TO RR ROOF
S P 96	SPARE-RJB TO LUGG CPT #2
S P 97	SPARE-RJB TO LUGG CPT #3
S P 98	SPARE-RJB TO LUGG CPT #3
S P 104	SPARE-RJB TO ENGINE CPT
S P 105	SPARE-FJB TO ENGINE
S P 106	SPARE-RJB TO BATT. CPT.
S P 107	SPARE-RJB TO BATT. CPT.
S P 108	SPARE-RJB TO BATT. CPT.
S P 109	SPARE-RJB TO ENGINE CPT.
S P 110	SPARE-RJB TO ENGINE CPT.
S P 111	SPARE-RJB TO ENGINE CPT.
S P 112	SPARE-RJB TO ENGINE CPT.
S P 114	SPARE-FJB TO U/DASH WIPER
S P 115	SPARE-FJB TO U/DASH WIPER
S P 116	SPARE-FJB TO U/DASH FLOOR

No.	DESCRIPTION
S P 117	SPARE-FJB TO U/DASH FLOOR
S P 119	SPARE-RJB TO ENGINE CPT.
SPZ 1	SPARE WIRE-ZF TRANSM.
SPZ 2	SPARE WIRE-ZF TRANSM.
SPZ 3	SPARE WIRE-ZF TRANSM.
SPZ 4	SPARE WIRE-ZF TRANSM.
SPZ 5	SPARE WIRE-ZF TRANSM.
SPZ 6	SPARE WIRE-ZF TRANSM.
W C	A/C & HEAT SYST-EVAP CTR SIGN
Y C	INTERIOR LTS-110V FLUORESCENT
Y D	INTERIOR LTS-110V FLUORESCENT
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0	GALLEY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A	A/C SYSTEM-EVAP. GRD
0 A A	RS - VOLTAGE REGULATOR GRD
0 B 1	EC – RR JCT PANEL GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN EVAP. & CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D	RJB – IGNITION RELAY
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 E	RS - HAT RACK ACCES. LH GRD
0 E A	EATON TRANSMISSION GRD
0 F	RS - HAT RACK ACCES. RH GRD
0 G	RS - HAT RACK ACCES. RH GRD
0 H	RS - LAVATORY ACCES. GRD
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD

No.	DESCRIPTION
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L 6	FS - FRONT SERVICE CPT LTS GRD
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR (SEDAN) GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 1	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	FS - SOUND SYS. JCT PANEL GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R E	RADIO &CTRL HEAD CHASSIS GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN - GND RELAY
0 S A	EC-BOSCH ALT. GROUND
0 S 2	SOUND SYSTEM RADIO GRD
0 S 3	SOUND SYSTEM VIDEO GRD
0 S S	SOUNS SYSTEM BATT. GRD
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 T 5	FS - HVAC DASH MODULE. GRD
O T 6	FS - HVAC DASH MODULE. GRD
O T 7	FS - DDDL GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS SYSTEM - GRD
0 Y 2	ABS SYSTEM - GRD
0 Y 3	ABS SYSTEM - GRD

CIRCUIT NUMBER CODE

No.	DESCRIPTION
0 Y 4	ABS SYSTEM - GRD
0 Y 5	ABS SYSTEM - GRD
0 Y 6	ABS SYSTEM - GRD
0 Z	RR JCT BOX CPT GRD STUD
0 Z 0	RR JCT BOX CPT GRD STUD
0Z 1	ZF TRANSM. GRD
0Z 2	ZF TRANSM. GRD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 E	A/C & HEAT SYSTEM EVAP CONT
2 F	A/C & HEAT SYSTEM EVAP CONT
4	HOSTESS & PASSENGER CHIME
4 A	HOSTESS & PASSENGER CHIME
4 B	PASSENGER CHIME
4 C	HOSTESS CHIME
5	INTERIOR LTS-AISLE & EMERG. EXIT
5	UPPER WINDSHIELD DEFROSTER
5 D	UPPER WINDSHIELD DEFROSTER
5 E	UPPER WINDSHIELD DEFROSTER
5 N	INTERIOR LTS-EMERGENCY EXIT
5 N C	SPEED SIGNAL LOWER 5MPH
5 N O	SPEED SIGNAL HIGHER 5MPH
6	INTERIOR LTS-AISLE
7 B	ENTRANCE DOOR (SEDAN)
7 D	ENTRANCE DOOR (SEDAN)
7 D A	ENTRANCE DOOR (SEDAN)
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
1 0	INTERIOR LTS-LUGGAGE CPT
1 0 A	INTERIOR LTS-LUGGAGE CPT
1 0 B	INTERIOR LTS-LUGGAGE CPT
1 0 D	INTERIOR LTS-LUGGAGE CPT
1 0 F	INTERIOR LTS-LUGGAGE CPT
1 0 H	INTERIOR LTS-LUGGAGE CPT
1 0 K	INTERIOR LTS-LUGGAGE CPT
1 0 R	INTERIOR LTS-LUGGAGE DOOR AJAR
1 1	FR DESTINATION SIGN
1 1 A	FR DESTINATION SIGN
1 1 B	FR DESTINATION SIGN
1 1 C	FR DESTINATION SIGN
1 1 D	FR DESTINATION SIGN
1 1 E	FR DESTINATION SIGN
1 1 K	FR DESTINATION SIGN

No.	DESCRIPTION
1 2	12V BAT ELECTRONIC JCT BLOCK
1 2	BAT CPT 12V BATTERY
1 2 A	FR JCT BOX 12V DISC SW
1 2 A	RR JCT BOX 12V DISC SW
1 2 B	12V BAT ELECTRICAL JCT BLOCK
1 2 B	RR JCT BOX 12V DISC SW
1 2 B	FR JCT BOX 12V DISC SW
1 2 B E	BAT. EQUALIZER MONITOR
1 2 C	FR JCT BOX 12V DISC SW
1 2 C	RR JCT BOX 12V HOT WIRE
1 2 C E	RR JCT BOX 12V HOT WIRE
1 2 D	BAT CPT 12V BATTERY
1 2 D A	12V IGNITION DISTRIBUTION
1 2 D T	TTLT MODULE
1 2 D Z	ZF TRANSM. HOTWIRE
1 2 E	FR JCT BOX 12V DISC SW
1 2 E	RR JCT BOX 12V DISC SW
1 2 F	BAT CPT 12V FJB & IC
1 2 F	FR JCT BOX 12V DISC SW
1 2 G	FR JCT BOX 12V DISC SW
1 2 H	12 V IGNITION D.T.RUN LIGHT
1 2 J	FR JCT BOX 12V DISC SW
1 2 I	12V IGNITION DISTRIBUTION
1 2 I	RR JCT BOX 12V IGNITION
1 2 K	12 VOLT IGN. TTLT & HVAC MODULE
1 2 I A	12V IGNITION DISTRIBUTION
1 2 I A	FR JCT BOX 12V IGNITION
1 2 I B	FR JCT BOX 12V IGNITION
1 2 I E	ABS-FR JCT BOX 12V IGNITION
1 2 I F	FR JCT BOX 12V IGNITION
1 2 I Z	12 V IGNITION FOR ZF TRANSM.
1 2 L X	CLUSTER (12V HOT WIRE)
1 2 M	ABS-FR JCT BOX 12V DISC. SW.
1 2 P	LH CONSOLE POWER OUTLET
1 2 R	BAT CPT 12V DISC RLY TO RJB
1 2 R	MEMORY BATTERY RADIO
1 2 S	SOUND SYSTEM 12V RADIO
1 2 S 1	SOUND SYSTEM 12V RADIO
1 2 S 1 A	DVD KARAOKE FEEDING
1 2 S 2	SOUND SYSTEM 12V RADIO
1 2 S 2 A	DVD KARAOKE FEEDING
1 2 S B	SOUND SYSTEM 12V FEEDING
1 2 S S	SOUND SYSTEM 12V FEEDING
1 2 V	RR JCT BOX 12V DISC SW
1 2 V A	BATTERY TO EQUALIZER 12V
1 2 V D	12V HOT WIRE DISTRIBUTION
1 2 V F	BAT CPT 12V FJB & IC
1 2 V I	12V IGNITION DISTRIBUTION
1 2 V R	BAT CPT 12V DISC RLY TO RJB
1 2 W	12V BATTERY DDEC III

No.	DESCRIPTION
1 2 W	ENTRANCE DOOR (SEDAN)
1 2 W A	ENTRANCE DOOR (SEDAN)
1 2 W B	ENTRANCE DOOR (SEDAN)
1 2 X	FR JCT BOX 12V DISC SW
1 2 X 2	FR JCT BOX 12V DISC SW
1 2 Y	FR JCT BOX 12V DISC SW
1 3 A	ALARM & SIGNAL-LO AIR PRIM.
1 3 B	ALARM & SIGNAL-LO AIR SEC.
1 4	LAVATORY-FLUSHING PUMP
1 4 A	LAVATORY-FLUSHING PUMP
1 4 P	LAVATORY-FLUSHING PUMP
1 5	EXTERIOR LTS-MULTI FUNC LEVEL
1 5 A	WIPER & WASHER UPPER WINDSHIELD
1 6	SPEED - SIGNAL +
1 6 A	SPEED - SIGNAL +
1 6 T	SPEED - SIGNAL +
1 7	EXTERIOR LTS-FLASHER UNIT
1 7 A	EXTERIOR LTS-FLASHER UNIT
1 9	DIFFERENTIAL OIL TEMP
2 0	SPEED - SIGNAL -
2 0 T	SPEED - SIGNAL -
2 0 W	SPEED - SIGNAL -
2 1	EXTERIOR LTS-DIRECTIONAL LH
2 1 A	EXTERIOR LTS-DIRECTIONAL LH
2 1 B	EXTERIOR LTS-HAZARD
2 1 C	EXTERIOR LTS-CORNERING LH
2 1 H	EXTERIOR LTS-DIRECTIONAL LH
2 1 K	EXTERIOR LTS-CORNERING
2 1 N	EXTERIOR LTS-CORNERING LH
2 1 P	EXTERIOR LTS-CORNERING LH
2 3	EXTERIOR LTS-DIRECTIONAL RH
2 3	EXTERIOR LTS-DIRECTIONAL RH
2 3 A	EXTERIOR LTS-DIRECTIONAL RH
2 3 B	EXTERIOR LTS-DIRECTIONAL RH
2 3 C	EXTERIOR LTS-CORNERING RH
2 3 N	EXTERIOR LTS-CORNERING RH
2 3 P	EXTERIOR LTS-CORNERING RH
2 4	BAT CPT 24V BATTERY
2 4	FR JCT BOX 24V DISC SW
2 4 A	BOOSTER BLOCK 24V DISC SW
2 4 A	FR JCT BOX 24V DISC SW
2 4 A	RR JCT BOX 24V DISC SW
2 4 B	24V STARTER RLY FEEDING
2 4 B	FR JCT BOX 24V DISC SW
2 4 B A	RR JCT BOX 24V DISC SW
2 4 B C	24 VOLT BATT. CHARGER
2 4 B E	RJB CPT-BAT EQ MONITOR HOT WIRE
2 4 C	FR JCT BOX 24V DISC SW
2 4 C	RR JCT BOX 24V DISC SW
2 4 D	BAT CPT 24V HOT WIRE

No.	DESCRIPTION
2 4 D	FR JCT BOX 24V HOT WIRE
2 4 D	RR JCT BOX 24V HOT WIRE
2 4 D A	A/C JCT BOX 24V HOT WIRE
2 4 D Z	24 V HOT WIRE FOR ZF TRANSM.
2 4 E	BAT CPT 24V DISC SW
2 4 E	FR JCT BOX 24V DISC SW
2 4 E	RR JCT BOX 24V DISC SW
2 4 F	FR JCT BOX 24V DISC SW
2 4 F	RR JCT BOX 24V DISC SW
2 4 G	FR JCT BOX 24V DISC SW
2 4 G	RR JCT BOX 24V DISC SW
2 4 H	FR JCT BOX 24V DISC SW
2 4 H	RR JCT BOX 24V DISC SW
2 4 I	FR JCT BOX 24V IGNITION
2 4 I	RR JCT BOX 24V IGNITION
2 4 I A	FR JCT BOX 24V IGNITION
2 4 I B	FR JCT BOX 24V IGNITION
2 4 I B	RR JCT BOX 24V IGNITION
2 4 I C	FR JCT BOX 24V IGNITION
2 4 I C	RR JCT BOX 24V IGNITION
2 4 I F	FJB 24VOLT IGNITION
2 4 I Z	ZF TANSM. IGNITION
2 4 P	FR JCT BOX 24V DISC SW
2 4 S	24V DISC SW RLY SIGNAL
2 4 S 1	SOUND SYSTEM 24V AMPLIFIER
2 4 S 2	SOUND SYSTEM 24V AMPLIFIER
2 4 S 3	SOUND SYSTEM 24V VIDEO
2 4 S 4	SOUND SYSTEM 24V VIDEO
2 4 S B	SOUND SYSTEM 24V FEEDING
2 4 S S	SOUND SYSTEM 24V FEEDING
2 4 R	24 VOLTS FRONT CAMERA SW.
2 4 V 2	RR JCT BOX 24V DISC SW
2 4 V 3	RR JCT BOX 24V DISC SW
2 4 V 4	RR JCT BOX 24V DISC SW
2 4 V 5	RR JCT BOX 24V DISC SW
2 4 V D	24V HOT WIRE RR JCT BOX
2 4 V F	BAT CPT 24V SW TO FJB & IC
2 4 V A	BATTERY TO EQUALIZER 24V
2 4 V I	RR JCT BOX 24V IGNITION
2 4 V R	BAT CPT 24V DISC SW TO RJB
2 4 W	RR JCT BOX 24V DISC SW (WCL)
2 4 W C	BATT.CPT TO HYD. PUMP (WCL)
2 4 W L	24V BATTERY-HYD. PUMP (WCL)
2 4 Z Z	24 VOLT - ZF TRANSM. POWER
2 5	24 VOLT ALT.SIGNAL MODULE
2 5 A 1	PRE-EXITATION ALT. BOSCH #1
2 5 A 2	PRE-EXITATION ALT. BOSCH #2
2 5 A	T.T. LT. ALTERNATOR #1
2 5 B	12 VOLTS IGN. ALT. SIGNAL MODULE
2 5 D	12 V. ENGINE RUN / HVAC SYSTEM

CIRCUIT NUMBER CODE

No.	DESCRIPTION
25E	USE ON VIP ONLY
25F	12 VOLT IGN. DISTRIBUTION
25H	24 VOLT IGN. ALT. BOSCH
25K	T.T. LT. ALTERNATOR #2
26A	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26B	DRIVER'S WINDOW LIFTER
26C	DRIVER'S WINDOW LIFTER
27	LAVATORY-EMERGENCY SONALERT
28A	A/C & HEAT SYSTEM-HI PRESSURE
28H	TTLT HI LO PRESS
28T	TTLT HI LO PRESS
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29A	A/C & HEAT SYSTEM-DRIVER'S HTR
29B	A/C & HEAT SYSTEM-DRIVER'S HTR
29H	HVAC DASH MODULE
30A	GALLEY
31A	A/C & HEAT SYSTEM-UNLOADER
31B	A/C & HEAT SYSTEM-UNLOADER
31B	WIPER & WASHER SYSTEM
31C	WIPER & WASHER SYSTEM
31D	WIPER & WASHER SYSTEM
31E	WIPER & WASHER SYSTEM
31J	WIPER & WASHER SYSTEM
31X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32B	EXTERIOR LTS-BACK-UP
32C	BACK-UP PWR & SIGNAL
32D	BACK-UP ALARM
35	ENTRANCE DOOR (SEDAN)
35B	ENTRANCE DOOR (SEDAN)
35BB	ENTRANCE DOOR (SEDAN)
35D	ENTRANCE DOOR (SEDAN)
36	JACOB BRAKE SYSREM
36A	JACOB BRAKE SYSREM
38	INTERIOR LTS-24V FLUORESCENT
38A	INTERIOR LTS-24V FLUORESCENT
38C	INTERIOR LTS-24V FLUORESCENT
38D	INTERIOR LTS-24V FLUORESCENT
39	INTERIOR LTS-24V LH CONSOLE SW
39A	INTERIOR LTS-DRIVER"S LTS
39P	READING LIGHTS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
43	HAT RACK FAN
43A	HAT RACK FAN
43B	HAT RACK FAN
43D	HAT RACK FAN
43E	HAT RACK FAN
43F	HAT RACK FAN
43G	HAT RACK FAN
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45A	A/C & HEAT SYSTEM-FULL AIR
45B	A/C & HEAT SYSTEM-WATER PUMP
45C	A/C & HEAT SYSTEM-WATER VALVE
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
48	ENTRANCE DOOR (SEDAN)
48A	ENTRANCE DOOR (SEDAN)
49	ENTRANCE DOOR (SEDAN)
49A	ENTRANCE DOOR (SEDAN)
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL- AIR HORN
52C	ALARM & SIGNAL- AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
62	LAVATORY-OCCUPIED LT
62A	LAVATORY-FLUOR LT
62B	LAVATORY-FLUOR LT
62E	LAVATORY-OCCUP & FLUOR LT
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVERS FAN
64B	DRIVERS FAN
64C	DRIVERS FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65D	DRIVER REC. DAMPER
66	O_PASS. ON/OFF
67	24 VOLT RUN DISTRIBUTION
67A	A/C & HEAT SYSTEM
67C	HEATING WINDSHIELD
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67X	A/C & HEAT SYSTEM
68	DASH & DEFROST DAMPER MOTOR
68A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH
72C	SUN VISOR-LH
72D	SUN VISOR-LH
73	LAVATORY-FEEDING
74	INTERIOR LTS-READING RH
74A	INTERIOR LTS-READING RH
74B	INTERIOR LTS-READING RH
74D	INTERIOR LTS-READING SIGNAL
75	INTERIOR LTS-READING LH
75A	INTERIOR LTS-READING LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85E	STOP LIGHT RLY
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85G	RADIATOR FAN CLUTCH
85X	12V IGN ABS
85Y	ABS SYSTEM
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
86F	ENGINE CTR-STARTER TTLT SIGN
86T	ENGINE CTR-STARTER TTLT SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
100	INTERIOR LTS-GENERAL
100A	INTERIOR LTS-GENERAL
100B	INTERIOR LTS-GENERAL
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	WORLD TRANSM-SOL. SUPPLY
102A	24V STARTER TO BOSCH ALTERNATOR
103	LOW BUOY
104	WORLD TRANSM-SOL. FORWARD
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	WORLD TRANSM-LOCKUP SOL. HI

CIRCUIT NUMBER CODE

No.	DESCRIPTION
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
113W	WORLD TR.-REVERSE WARNING
113Z	ZF TRANSM.- REVERSE SIGNAL
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
115W	ZF TRANSM. - CHECK TRANSM. TTLT
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125	GALLEY LAMP
125T	GALLEY LAMP
125W	WORLD TRANSM-RET. INDICATOR
126	KNEELING SYSTEM
126A	KNEELING SYSTEM
126B	KNEELING SYSTEM
126C	KNEELING SYSTEM
126D	KNEELING SYSTEM
126E	KNEELING SYSTEM
126F	KNEELING SYSTEM
126F1	KNEELING SYSTEM
126G	KNEELING SYSTEM
126H	KNEELING SYSTEM
126K	KNEELING SYSTEM
126P	KNEELING SYSTEM
126R	KNEELING SYSTEM
126W	5 MPH N.C. SIGNAL (WCL)
126S	KNEELING SYSTEM
126T	KNEELING SYSTEM
127	WORLD TRANSM-LUBE PRESS SW.
127	WORLD TRANSM-RETARDER FEED SOL.
127	POWER- PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT - BURNER ON SIGNAL
128	WORLD TRANSM-SOL. C2
129	POWER- PRE-HEAT WATER HEATER
129B	POWER- PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	A/C & HEAT SYSTEM-EVAP FAN MOTOR
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	GALLEY-HEAT CONTAINERS
133A	GALLEY-HEAT CONTAINERS
133B	GALLEY-HEAT CONTAINERS
133C	GALLEY-HEAT CONTAINERS
133	WORLD TRANSM-RET. ACTUATOR HI
134	GALLEY-HEAT CONTAINERS
134A	GALLEY-HEAT CONTAINERS
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135A	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	GALLEY-ACCESSORIES
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146A	TRANSMISSION-12V IGNITION
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	WORLD TRANSM-OIL TEMP
147A	ETHER COLD START & D.R.L.
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
152	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	WORLD TRANSM-SPARE INPUT (-)
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157B	ABS SYSTEM
157D	A.T.C. SYSTEM
157E	A.T.C. SYSTEM
157F	A.T.C. SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	W. TR.-OUT SPEED INTERLOCK
167Z	ZF- OUT SPEED INTERLOCK
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170	LUGGAGE DOOR LOCK
170C	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
225	LAVATORY FAN
225A	LAVATORY FAN
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
231Z	ZF NEUTRAL SIGNAL GRD
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251A	DDEC III - DATA LOGGER 12 H.W.
251	DDEC III - PRODRIVER 12V H.W.
253	GALLEY-MICROWAVE
254	GALLEY-12V FRIGO NORCOLD
254A	GALLEY-FRIGO
255	GALLEY-COFEEMAKER

CIRCUIT NUMBER CODE

No.	DESCRIPTION
255A	GALLEY-COFEEMAKER
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
260	WINDOW AJAR
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
292	FAN CLUTCH RADIATOR SPD 2
300	DOOR AJAR MAGN.SW. (WCL)
300A	POWER SYSTEM SW. (WCL)
300B	DOOR AJAR ALARM (WCL)
301	POWER SYSTEM SW. (WCL)
302	DOOR AJAR T.T.LT. (WCL)
302A	DOOR AJAR ALARM SIGN.(WCL)
302B	DOOR AJAR MAGN.SW. (WCL)
303	REMOTE WALL SW. DWN (WCL)
304	REMOTE WALL SW. UP (WCL)
305	PARK. BRAKE SOL. VALVE (WCL)
305A	PARK. BRAKE SAFETY SW. (WCL)
305A1	DOOR AJAR - PARK. BRAKE (WCL)
306	CONTROL SYSTEM (WCL RICON)
307	CONTROL SYSTEM (WCL RICON)
308	CONTROL SYSTEM (WCL RICON)
309	CONTROL SYSTEM (WCL RICON)
310	EATON TRANSMISSION
311	EATON TRANSMISSION
312	EATON TRANSMISSION
313	EATON TRANSMISSION
314	EATON TRANSMISSION
315	EATON TRANSMISSIOM
316	EATON TRANSMISSION - EPL
317	EATON TRANSMISSION
318	EATON TRANSMISSION
319	EATON TRANSMISSION
320	EATON TRANSMISSION
321	EATON TRANSMISSION
322	EATON TRANSMISSIION
323	EATON TRANSMISSION
324	EATON TRANSMISSION
325	EATON TRANSMISSION
326	EATON TRANSMISSION
327	EATON TRANSMISSION
328	EATON TRANSMISSION
329	EATON TRANSMISSION
330	EATON TRANSMISSION - EPL
331	EATON TRANSMISSION - EPL
332	EATON TRANSMISSION
333	EATON TRANSMISSION - 12V BATTERY
334	EATON GENERATION 2
416	DDEV IV- SENSOR SUPPLY 5VDC
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
452	DDEC IV- SENSOR RETURN (ENGINE)
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
524B	ZF SIGNAL – AUX. SENSOR THROTTLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE
541	DDEC III-CRUISE SET SW
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
564B	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
565Z	DECELERATION LTS
583	DDEC III-ENGINE BRAKE 4 CYL.
700	J1587(+)
701	J1587(-) – GROUND
705	ZF SIGNALS
706	ZF SIGNALS
707	ZF SIGNALS
717	ZF SIGNALS
718	ZF SIGNALS
719	ZF SIGNALS
720	ZF SIGNALS
740	EASY START VALVE
761	ZF SIGNALS
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
905	DDEC IV- AMBIANT AIR TEMPERATURE
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
925	J1939-HIGH
926	J1939-LOW
927	J1939-SHIELD
952	DDEC III-SENSOR RETURN #1
953	DDEC III-SENSOR RETURN #2
953A	THROTTLE INHIBIT
976	DDEC IV- RELATIVE HUMIDITY
979	DDEC III-ENGINE BRAKE 2 CYL.
988	DDEC III-CRUISE ENABLE LTS.

CIRCUIT NUMBER CODE

No.	DESCRIPTION
B A	INTERIOR LTS-110V FLUORESCENT
B B	INTERIOR LTS-110V FLUORESCENT
D 1	SOUND SYSTEM-FR RH SPEAKER
D 2	SOUND SYSTEM-FR RH SPEAKER
D 3	SOUND SYSTEM-FR RH SPEAKER
D 4	SOUND SYSTEM-RR RH SPEAKER
D 5	SOUND SYSTEM-RR RH SPEAKER
D 6	SOUND SYSTEM-RR RH SPEAKER
D 7	SOUND SYSTEM-RR RH SPEAKER
D 8	SOUND SYSTEM-RR RH SPEAKER
D 3 4	SOUND SYSTEM-RR RH SPEAKER
D 6 7	SOUND SYSTEM-RR RH SPEAKER
G 1	SOUND SYSTEM-FR LH SPEAKER
G 2	SOUND SYSTEM-FR LH SPEAKER
G 3	SOUND SYSTEM-FR LH SPEAKER
G 4	SOUND SYSTEM-RR LH SPEAKER
G 5	SOUND SYSTEM-RR LH SPEAKER
G 6	SOUND SYSTEM-RR LH SPEAKER
G 7	SOUND SYSTEM-RR LH SPEAKER
G 8	SOUND SYSTEM-RR LH SPEAKER
G 3 4	SOUND SYSTEM-RR LH SPEAKER
G 6 7	SOUND SYSTEM-RR LH SPEAKER
L 1 A	INTERIOR LTS-110V FLUORESCENT
L 1 B	INTERIOR LTS-110V FLUORESCENT
L 2 A	INTERIOR LTS-110V FLUORESCENT
L 2 B	INTERIOR LTS-110V FLUORESCENT
L 0	110V RECEPTACLE- 110V FLUOR.
L 1	110V RECEPTACLE- 110V FLUOR.
L 2	110V RECEPTACLE- 110V FLUOR.
R A	INTERIOR LTS-110V FLUORESCENT
R B	INTERIOR LTS-110V FLUORESCENT
S H 1	SHIELD CHASSIS GRD
S H 2	SHIELD CHASSIS GRD
S H 3	SHIELD CHASSIS GRD
S H 4	SHIELD CHASSIS GRD
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 10	SPARE-RJB TO LUGG CPT #1
S P 11	SPARE-FJB TO RJB
S P 12	SPARE-RJB TO ENGINE
S P 13	SPARE-RJB TO ENGINE
S P 14	SPARE-FJB TO RJB
S P 15	SPARE-RJB TO ENGINE
S P 16	SPARE-RJB TO ENGINE
S P 17	SPARE-RJB TO ENGINE
S P 18	SPARE-FJB TO RJB
S P 24	SPARE-RJB TO LAVATORY ROOF
S P 25	SPARE-RJB TO LAVATORY ROOF
S P 26	SPARE-RJB TO LAVATORY ROOF
S P 27	SPARE-RJB TO LH HAT RACK
S P 28	SPARE-RJB TO LH HAT RACK
S P 31	SPARE-RJB TO RH HAT RACK
S P 32	SPARE-RJB TO RH HAT RACK
S P 33	SPARE-FJB TO RJB
S P 38	SPARE-FJB TO RJB
S P 43	SPARE-FJB TO RJB
S P 45	SPARE-FJB TO RJB
S P 46	SPARE-RJB TO LH FR ROOF
S P 48	SPARE-RJB TO DASH CENTER PANEL
S P 56	SPARE-ENGINE TO RH SW PANEL
S P 57	SPARE-DASH CENTER PANEL TO ENG.
S P 58	SPARE-DASH CENTER PANEL TO ENG.
S P 59	SPARE-FJB TO ENGINE
S P 61	SPARE-FJB TO DASH RH PANEL
S P 68	SPARE-FJB TO ENGINE
S P 69	SPARE-FJB TO FR AXLE
S P 70	SPARE-FJB TO FR AXLE
S P 71	SPARE-FJB TO RH SW PANEL
S P 72	SPARE-FJB TO FR SERV CPT
S P 74	SPARE-FJB TO LH CONSOLE
S P 77	SPARE-FJB TO EVAPORATOR CPT
S P 78	SPARE-FJB TO CONDENSER CPT
S P 79	SPARE-FJB TO CONDENSER CPT
S P 87	SPARE-RJB TO LH HAT RACK
S P 88	SPARE-RJB TO RH HAT RACK
S P 92	SPARE-RJB TO CONDENSER CPT
S P 93	SPARE-RJB TO EVAPORATOR CPT
S P 94	SPARE-RJB TO RR ROOF
S P 95	SPARE-RJB TO RR ROOF
S P 96	SPARE-RJB TO LUGG CPT #2
S P 97	SPARE-RJB TO LUGG CPT #3
S P 98	SPARE-RJB TO LUGG CPT #3
S P 104	SPARE-RJB TO ENGINE CPT
S P 105	SPARE-FJB TO ENGINE
S P 106	SPARE-RJB TO BATT. CPT.
S P 107	SPARE-RJB TO BATT. CPT.
S P 108	SPARE-RJB TO BATT. CPT.
S P 109	SPARE-RJB TO ENGINE CPT.
S P 110	SPARE-RJB TO ENGINE CPT.
S P 111	SPARE-RJB TO ENGINE CPT.
S P 112	SPARE-RJB TO ENGINE CPT.
S P 114	SPARE-FJB TO U/DASH WIPER
S P 115	SPARE-FJB TO U/DASH WIPER
S P 116	SPARE-FJB TO U/DASH FLOOR
S P 117	SPARE-FJB TO U/DASH FLOOR
S P 119	SPARE-RJB TO ENGINE CPT.
SPZ 1	SPARE WIRE-ZF TRANSM.
SPZ 2	SPARE WIRE-ZF TRANSM.
SPZ 3	SPARE WIRE-ZF TRANSM.
SPZ 4	SPARE WIRE-ZF TRANSM.
SPZ 5	SPARE WIRE-ZF TRANSM.
SPZ 6	SPARE WIRE-ZF TRANSM.
W C	A/C & HEAT SYST-EVAP CTR SIGN
Y C	INTERIOR LTS-110V FLUORESCENT
Y D	INTERIOR LTS-110V FLUORESCENT
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0	GALLEY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A	A/C SYSTEM-EVAP. GRD
0 A A	RS - VOLTAGE REGULATOR GRD
0 B 1	EC – RR JCT PANEL GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN EVAP. & CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D	RJB – IGNITION RELAY
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 E	RS - HAT RACK ACCES. LH GRD
0 E A	EATON TRANSMISSION GRD
0 F	RS - HAT RACK ACCES. RH GRD
0 G	RS - HAT RACK ACCES. RH GRD
0 H	RS - LAVATORY ACCES. GRD
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L 6	FS - FRONT SERVICE CPT LTS GRD
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR (SEDAN) GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 1	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	FS - SOUND SYS. JCT PANEL GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R E	RADIO &CTRL HEAD CHASSIS GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN - GND RELAY
0 S A	EC-BOSCH ALT. GROUND
0 S 2	SOUND SYSTEM RADIO GRD
0 S 3	SOUND SYSTEM VIDEO GRD
0 S S	SOUNS SYSTEM BATT. GRD
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 T 5	FS - HVAC DASH MODULE. GRD
O T 6	FS - HVAC DASH MODULE. GRD
O T 7	FS - DDDL GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS SYSTEM - GRD
0 Y 2	ABS SYSTEM - GRD
0 Y 3	ABS SYSTEM - GRD

CIRCUIT NUMBER CODE

No.	DESCRIPTION
0 Y 4	ABS SYSTEM - GRD
0 Y 5	ABS SYSTEM - GRD
0 Y 6	ABS SYSTEM - GRD
0 Z	RR JCT BOX CPT GRD STUD
0 Z 0	RR JCT BOX CPT GRD STUD
0Z 1	ZF TRANSM. GRD
0Z 2	ZF TRANSM. GRD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 E	A/C & HEAT SYSTEM EVAP CONT
2 F	A/C & HEAT SYSTEM EVAP CONT
4	HOSTESS & PASSENGER CHIME
4 A	HOSTESS & PASSENGER CHIME
4 B	PASSENGER CHIME
4 C	HOSTESS CHIME
5	INTERIOR LTS-AISLE & EMERG. EXIT
5	UPPER WINDSHIELD DEFROSTER
5 D	UPPER WINDSHIELD DEFROSTER
5 E	UPPER WINDSHIELD DEFROSTER
5 N	INTERIOR LTS-EMERGENCY EXIT
5 N C	SPEED SIGNAL LOWER 5MPH
5 N O	SPEED SIGNAL HIGHER 5MPH
6	INTERIOR LTS-AISLE
7 B	ENTRANCE DOOR (SEDAN)
7 D	ENTRANCE DOOR (SEDAN)
7 D A	ENTRANCE DOOR (SEDAN)
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
1 0	INTERIOR LTS-LUGGAGE CPT
1 0 A	INTERIOR LTS-LUGGAGE CPT
1 0 B	INTERIOR LTS-LUGGAGE CPT
1 0 D	INTERIOR LTS-LUGGAGE CPT
1 0 F	INTERIOR LTS-LUGGAGE CPT
1 0 H	INTERIOR LTS-LUGGAGE CPT
1 0 K	INTERIOR LTS-LUGGAGE CPT
1 0 R	INTERIOR LTS-LUGGAGE DOOR AJAR
1 1	FR DESTINATION SIGN
1 1 A	FR DESTINATION SIGN
1 1 B	FR DESTINATION SIGN
1 1 C	FR DESTINATION SIGN
1 1 D	FR DESTINATION SIGN
1 1 E	FR DESTINATION SIGN
1 1 K	FR DESTINATION SIGN

No.	DESCRIPTION
1 2	12V BAT ELECTRONIC JCT BLOCK
1 2	BAT CPT 12V BATTERY
1 2 A	FR JCT BOX 12V DISC SW
1 2 A	RR JCT BOX 12V DISC SW
1 2 B	12V BAT ELECTRICAL JCT BLOCK
1 2 B	RR JCT BOX 12V DISC SW
1 2 B	FR JCT BOX 12V DISC SW
1 2 B E	BAT. EQUALIZER MONITOR
1 2 C	FR JCT BOX 12V DISC SW
1 2 C	RR JCT BOX 12V HOT WIRE
1 2 C E	RR JCT BOX 12V HOT WIRE
1 2 D	BAT CPT 12V BATTERY
1 2 D A	12V IGNITION DISTRIBUTION
1 2 D T	TTLT MODULE
1 2 D Z	ZF TRANSM. HOTWIRE
1 2 E	FR JCT BOX 12V DISC SW
1 2 E	RR JCT BOX 12V DISC SW
1 2 F	BAT CPT 12V FJB & IC
1 2 F	FR JCT BOX 12V DISC SW
1 2 G	FR JCT BOX 12V DISC SW
1 2 H	12 V IGNITION D.T.RUN LIGHT
1 2 J	FR JCT BOX 12V DISC SW
1 2 I	12V IGNITION DISTRIBUTION
1 2 I	RR JCT BOX 12V IGNITION
1 2 K	12 VOLT IGN. TTLT & HVAC MODULE
1 2 I A	12V IGNITION DISTRIBUTION
1 2 I A	FR JCT BOX 12V IGNITION
1 2 I B	FR JCT BOX 12V IGNITION
1 2 I E	ABS-FR JCT BOX 12V IGNITION
1 2 I F	FR JCT BOX 12V IGNITION
1 2 I Z	12 V IGNITION FOR ZF TRANSM.
1 2 L X	CLUSTER (12V HOT WIRE)
1 2 M	ABS-FR JCT BOX 12V DISC. SW.
1 2 P	LH CONSOLE POWER OUTLET
1 2 R	BAT CPT 12V DISC RLY TO RJB
1 2 R	MEMORY BATTERY RADIO
1 2 S	SOUND SYSTEM 12V RADIO
1 2 S 1	SOUND SYSTEM 12V RADIO
1 2 S 1 A	DVD KARAOKE FEEDING
1 2 S 2	SOUND SYSTEM 12V RADIO
1 2 S 2 A	DVD KARAOKE FEEDING
1 2 S B	SOUND SYSTEM 12V FEEDING
1 2 S S	SOUND SYSTEM 12V FEEDING
1 2 V	RR JCT BOX 12V DISC SW
1 2 V A	BATTERY TO EQUALIZER 12V
1 2 V D	12V HOT WIRE DISTRIBUTION
1 2 V F	BAT CPT 12V FJB & IC
1 2 V I	12V IGNITION DISTRIBUTION
1 2 V R	BAT CPT 12V DISC RLY TO RJB
1 2 W	12V BATTERY DDEC III

No.	DESCRIPTION
1 2 W	ENTRANCE DOOR (SEDAN)
1 2 W A	ENTRANCE DOOR (SEDAN)
1 2 W B	ENTRANCE DOOR (SEDAN)
1 2 X	FR JCT BOX 12V DISC SW
1 2 X 2	FR JCT BOX 12V DISC SW
1 2 Y	FR JCT BOX 12V DISC SW
1 3 A	ALARM & SIGNAL-LO AIR PRIM.
1 3 B	ALARM & SIGNAL-LO AIR SEC.
1 4	LAVATORY-FLUSHING PUMP
1 4 A	LAVATORY-FLUSHING PUMP
1 4 P	LAVATORY-FLUSHING PUMP
1 5	EXTERIOR LTS-MULTI FUNC LEVEL
1 5 A	WIPER & WASHER UPPER WINDSHIELD
1 6	SPEED - SIGNAL +
1 6 A	SPEED - SIGNAL +
1 6 T	SPEED - SIGNAL +
1 7	EXTERIOR LTS-FLASHER UNIT
1 7 A	EXTERIOR LTS-FLASHER UNIT
1 9	DIFFERENTIAL OIL TEMP
2 0	SPEED - SIGNAL -
2 0 T	SPEED - SIGNAL -
2 0 W	SPEED - SIGNAL -
2 1	EXTERIOR LTS-DIRECTIONAL LH
2 1 A	EXTERIOR LTS-DIRECTIONAL LH
2 1 B	EXTERIOR LTS-HAZARD
2 1 C	EXTERIOR LTS-CORNERING LH
2 1 H	EXTERIOR LTS-DIRECTIONAL LH
2 1 K	EXTERIOR LTS-CORNERING
2 1 N	EXTERIOR LTS-CORNERING LH
2 1 P	EXTERIOR LTS-CORNERING LH
2 3	EXTERIOR LTS-DIRECTIONAL RH
2 3	EXTERIOR LTS-DIRECTIONAL RH
2 3 A	EXTERIOR LTS-DIRECTIONAL RH
2 3 B	EXTERIOR LTS-DIRECTIONAL RH
2 3 C	EXTERIOR LTS-CORNERING RH
2 3 N	EXTERIOR LTS-CORNERING RH
2 3 P	EXTERIOR LTS-CORNERING RH
2 4	BAT CPT 24V BATTERY
2 4	FR JCT BOX 24V DISC SW
2 4 A	BOOSTER BLOCK 24V DISC SW
2 4 A	FR JCT BOX 24V DISC SW
2 4 A	RR JCT BOX 24V DISC SW
2 4 B	24V STARTER RLY FEEDING
2 4 B	FR JCT BOX 24V DISC SW
2 4 B A	RR JCT BOX 24V DISC SW
2 4 B C	24 VOLT BATT. CHARGER
2 4 B E	RJB CPT-BAT EQ MONITOR HOT WIRE
2 4 C	FR JCT BOX 24V DISC SW
2 4 C	RR JCT BOX 24V DISC SW
2 4 D	BAT CPT 24V HOT WIRE

No.	DESCRIPTION
2 4 D	FR JCT BOX 24V HOT WIRE
2 4 D	RR JCT BOX 24V HOT WIRE
2 4 D A	A/C JCT BOX 24V HOT WIRE
2 4 D Z	24 V HOT WIRE FOR ZF TRANSM.
2 4 E	BAT CPT 24V DISC SW
2 4 E	FR JCT BOX 24V DISC SW
2 4 E	RR JCT BOX 24V DISC SW
2 4 F	FR JCT BOX 24V DISC SW
2 4 F	RR JCT BOX 24V DISC SW
2 4 G	FR JCT BOX 24V DISC SW
2 4 G	RR JCT BOX 24V DISC SW
2 4 H	FR JCT BOX 24V DISC SW
2 4 H	RR JCT BOX 24V DISC SW
2 4 I	FR JCT BOX 24V IGNITION
2 4 I	RR JCT BOX 24V IGNITION
2 4 I A	FR JCT BOX 24V IGNITION
2 4 I B	FR JCT BOX 24V IGNITION
2 4 I B	RR JCT BOX 24V IGNITION
2 4 I C	FR JCT BOX 24V IGNITION
2 4 I C	RR JCT BOX 24V IGNITION
2 4 I F	FJB 24VOLT IGNITION
2 4 I Z	ZF TANSM. IGNITION
2 4 P	FR JCT BOX 24V DISC SW
2 4 S	24V DISC SW RLY SIGNAL
2 4 S 1	SOUND SYSTEM 24V AMPLIFIER
2 4 S 2	SOUND SYSTEM 24V AMPLIFIER
2 4 S 3	SOUND SYSTEM 24V VIDEO
2 4 S 4	SOUND SYSTEM 24V VIDEO
2 4 S B	SOUND SYSTEM 24V FEEDING
2 4 S S	SOUND SYSTEM 24V FEEDING
2 4 R	24 VOLTS FRONT CAMERA SW.
2 4 V 2	RR JCT BOX 24V DISC SW
2 4 V 3	RR JCT BOX 24V DISC SW
2 4 V 4	RR JCT BOX 24V DISC SW
2 4 V 5	RR JCT BOX 24V DISC SW
2 4 V D	24V HOT WIRE RR JCT BOX
2 4 V F	BAT CPT 24V SW TO FJB & IC
2 4 V A	BATTERY TO EQUALIZER 24V
2 4 V I	RR JCT BOX 24V IGNITION
2 4 V R	BAT CPT 24V DISC SW TO RJB
2 4 W	RR JCT BOX 24V DISC SW (WCL)
2 4 W C	BATT.CPT TO HYD. PUMP (WCL)
2 4 W L	24V BATTERY-HYD. PUMP (WCL)
2 4 Z Z	24 VOLT - ZF TRANSM. POWER
2 5	24 VOLT ALT.SIGNAL MODULE
2 5 A 1	PRE-EXITATION ALT. BOSCH #1
2 5 A 2	PRE-EXITATION ALT. BOSCH #2
2 5 A	T.T. LT. ALTERNATOR #1
2 5 B	12 VOLTS IGN. ALT. SIGNAL MODULE
2 5 D	12 V. ENGINE RUN / HVAC SYSTEM

CIRCUIT NUMBER CODE

No.	DESCRIPTION
25E	USE ON VIP ONLY
25F	12 VOLT IGN. DISTRIBUTION
25H	24 VOLT IGN. ALT. BOSCH
25K	T.T. LT. ALTERNATOR #2
26A	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26B	DRIVER'S WINDOW LIFTER
26C	DRIVER'S WINDOW LIFTER
27	LAVATORY-EMERGENCY SONALERT
28A	A/C & HEAT SYSTEM-HI PRESSURE
28H	TTLT HI LO PRESS
28T	TTLT HI LO PRESS
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29A	A/C & HEAT SYSTEM-DRIVER'S HTR
29B	A/C & HEAT SYSTEM-DRIVER'S HTR
29H	HVAC DASH MODULE
29X	A/C & HEAT SYSTEM-DRIVER'S HTR
30A	GALLEY
31A	A/C & HEAT SYSTEM-UNLOADER
31B	A/C & HEAT SYSTEM-UNLOADER
31B	WIPER & WASHER SYSTEM
31C	WIPER & WASHER SYSTEM
31D	WIPER & WASHER SYSTEM
31E	WIPER & WASHER SYSTEM
31J	WIPER & WASHER SYSTEM
31X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32B	EXTERIOR LTS-BACK-UP
32C	BACK-UP PWR & SIGNAL
32D	BACK-UP ALARM
35	ENTRANCE DOOR (SEDAN)
35B	ENTRANCE DOOR (SEDAN)
35BB	ENTRANCE DOOR (SEDAN)
35D	ENTRANCE DOOR (SEDAN)
36	JACOB BRAKE SYSREM
36A	JACOB BRAKE SYSREM
38	INTERIOR LTS-24V FLUORESCENT
38A	INTERIOR LTS-24V FLUORESCENT
38C	INTERIOR LTS-24V FLUORESCENT
38D	INTERIOR LTS-24V FLUORESCENT
39	INTERIOR LTS-24V LH CONSOLE SW
39A	INTERIOR LTS-DRIVER"S LTS
39P	READING LIGHTS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
43	HAT RACK FAN
43A	HAT RACK FAN
43B	HAT RACK FAN
43D	HAT RACK FAN
43E	HAT RACK FAN
43F	HAT RACK FAN
43G	HAT RACK FAN
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45A	A/C & HEAT SYSTEM-FULL AIR
45B	A/C & HEAT SYSTEM-WATER PUMP
45C	A/C & HEAT SYSTEM-WATER VALVE
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
48	ENTRANCE DOOR (SEDAN)
48A	ENTRANCE DOOR (SEDAN)
49	ENTRANCE DOOR (SEDAN)
49A	ENTRANCE DOOR (SEDAN)
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL- AIR HORN
52C	ALARM & SIGNAL- AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
62	LAVATORY-OCCUPIED LT
62A	LAVATORY-FLUOR LT
62B	LAVATORY-FLUOR LT
62E	LAVATORY-OCCUP & FLUOR LT
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVERS FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65D	DRIVER REC. DAMPER
66	O_PASS. ON/OFF
67	24 VOLT RUN DISTRIBUTION
67A	A/C & HEAT SYSTEM
67C	HEATING WINDSHIELD
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67X	A/C & HEAT SYSTEM
68	DASH & DEFROST DAMPER MOTOR
68A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH
72C	SUN VISOR-LH
72D	SUN VISOR-LH
73	LAVATORY-FEEDING
74	INTERIOR LTS-READING RH
74A	INTERIOR LTS-READING RH
74B	INTERIOR LTS-READING RH
74D	INTERIOR LTS-READING SIGNAL
75	INTERIOR LTS-READING LH
75A	INTERIOR LTS-READING LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85E	STOP LIGHT RLY
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85G	RADIATOR FAN CLUTCH
85X	12V IGN ABS
85Y	ABS SYSTEM
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
86F	ENGINE CTR-STARTER TTLT SIGN
86T	ENGINE CTR-STARTER TTLT SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
100	INTERIOR LTS-GENERAL
100A	INTERIOR LTS-GENERAL
100B	INTERIOR LTS-GENERAL
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	WORLD TRANSM-SOL. SUPPLY
102A	24V STARTER TO BOSCH ALTERNATOR
103	LOW BUOY
104	WORLD TRANSM-SOL. FORWARD
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP

CIRCUIT NUMBER CODE

No.	DESCRIPTION
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
113W	WORLD TR.-REVERSE WARNING
113Z	ZF TRANSM.- REVERSE SIGNAL
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
115W	ZF TRANSM. - CHECK TRANSM. TTLT
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125	GALLEY LAMP
125T	GALLEY LAMP
125W	WORLD TRANSM-RET. INDICATOR
126	KNEELING SYSTEM
126A	KNEELING SYSTEM
126B	KNEELING SYSTEM
126C	KNEELING SYSTEM
126D	KNEELING SYSTEM
126E	KNEELING SYSTEM
126F	KNEELING SYSTEM
126F1	KNEELING SYSTEM
126G	KNEELING SYSTEM
126H	KNEELING SYSTEM
126K	KNEELING SYSTEM
126P	KNEELING SYSTEM
126R	KNEELING SYSTEM
126W	5 MPH N.C. SIGNAL (WCL)
126S	KNEELING SYSTEM
126T	KNEELING SYSTEM
127	WORLD TRANSM-LUBE PRESS SW.
127	WORLD TRANSM-RETARDER FEED SOL.
127	POWER- PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT - BURNER ON SIGNAL
128	WORLD TRANSM-SOL. C2
129	POWER- PRE-HEAT WATER HEATER
129B	POWER- PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	A/C & HEAT SYSTEM-EVAP FAN MOTOR
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	GALLEY-HEAT CONTAINERS
133A	GALLEY-HEAT CONTAINERS
133B	GALLEY-HEAT CONTAINERS
133C	GALLEY-HEAT CONTAINERS
133	WORLD TRANSM-RET. ACTUATOR HI
134	GALLEY-HEAT CONTAINERS
134A	GALLEY-HEAT CONTAINERS
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135A	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	GALLEY-ACCESSORIES
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146A	TRANSMISSION-12V IGNITION
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	WORLD TRANSM-OIL TEMP
147A	ETHER COLD START & D.R.L.
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
152	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	WORLD TRANSM-SPARE INPUT (-)
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157B	ABS SYSTEM
157D	A.T.C. SYSTEM
157E	A.T.C. SYSTEM
157F	A.T.C. SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	W. TR.-OUT SPEED INTERLOCK
167Z	ZF- OUT SPEED INTERLOCK
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170	LUGGAGE DOOR LOCK
170C	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
225	LAVATORY FAN
225A	LAVATORY FAN
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
231Z	ZF NEUTRAL SIGNAL GRD
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251A	DDEC III - DATA LOGGER 12 H.W.
251	DDEC III - PRODRIVER 12V H.W.
253	GALLEY-MICROWAVE
254	GALLEY-12V FRIGO NORCOLD
254A	GALLEY-FRIGO
255	GALLEY-COFEEMAKER
255A	GALLEY-COFEEMAKER

CIRCUIT NUMBER CODE

No.	DESCRIPTION
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
260	WINDOW AJAR
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
292	FAN CLUTCH RADIATOR SPD 2
300	DOOR AJAR MAGN.SW. (WCL)
300A	POWER SYSTEM SW. (WCL)
300B	DOOR AJAR ALARM (WCL)
301	POWER SYSTEM SW. (WCL)
302	DOOR AJAR T.T.LT. (WCL)
302A	DOOR AJAR ALARM SIGN.(WCL)
302B	DOOR AJAR MAGN.SW. (WCL)
303	REMOTE WALL SW. DWN (WCL)
304	REMOTE WALL SW. UP (WCL)
305	PARK. BRAKE SOL. VALVE (WCL)
305A	PARK. BRAKE SAFETY SW. (WCL)
305A1	DOOR AJAR - PARK. BRAKE (WCL)
306	CONTROL SYSTEM (WCL RICON)
307	CONTROL SYSTEM (WCL RICON)
308	CONTROL SYSTEM (WCL RICON)
309	CONTROL SYSTEM (WCL RICON)
310	EATON TRANSMISSION
311	EATON TRANSMISSION
312	EATON TRANSMISSION
313	EATON TRANSMISSION
314	EATON TRANSMISSION
315	EATON TRANSMISSIOM
316	EATON TRANSMISSION - EPL
317	EATON TRANSMISSION
318	EATON TRANSMISSION
319	EATON TRANSMISSION
320	EATON TRANSMISSION
321	EATON TRANSMISSION
322	EATON TRANSMISSIION
323	EATON TRANSMISSION
324	EATON TRANSMISSION
325	EATON TRANSMISSION
326	EATON TRANSMISSION
327	EATON TRANSMISSION
328	EATON TRANSMISSION
329	EATON TRANSMISSION
330	EATON TRANSMISSION - EPL
331	EATON TRANSMISSION - EPL
332	EATON TRANSMISSION
333	EATON TRANSMISSION - 12V BATTERY
334	EATON GENERATION 2
416	DDEV IV- SENSOR SUPPLY 5VDC
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
452	DDEC IV- SENSOR RETURN (ENGINE)
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
524B	ZF SIGNAL – AUX. SENSOR THROTTLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE
541	DDEC III-CRUISE SET SW
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
564B	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
565Z	DECELERATION LTS
583	DDEC III-ENGINE BRAKE 4 CYL.
700	J1587(+)
701	J1587(-) – GROUND
705	ZF SIGNALS
706	ZF SIGNALS
707	ZF SIGNALS
717	ZF SIGNALS
718	ZF SIGNALS
719	ZF SIGNALS
720	ZF SIGNALS
740	EASY START VALVE
761	ZF SIGNALS
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
905	DDEC IV- AMBIANT AIR TEMPERATURE
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
925	J1939-HIGH
926	J1939-LOW
927	J1939-SHIELD
952	DDEC III-SENSOR RETURN #1
953	DDEC III-SENSOR RETURN #2
953A	THROTTLE INHIBIT
976	DDEC IV- RELATIVE HUMIDITY
979	DDEC III-ENGINE BRAKE 2 CYL.
988	DDEC III-CRUISE ENABLE LTS.

CIRCUIT NUMBER CODE

No.	DESCRIPTION
B A	INTERIOR LTS-110V FLUORESCENT
B B	INTERIOR LTS-110V FLUORESCENT
D 1	SOUND SYSTEM-FR RH SPEAKER
D 2	SOUND SYSTEM-FR RH SPEAKER
D 3	SOUND SYSTEM-FR RH SPEAKER
D 4	SOUND SYSTEM-RR RH SPEAKER
D 5	SOUND SYSTEM-RR RH SPEAKER
D 6	SOUND SYSTEM-RR RH SPEAKER
D 7	SOUND SYSTEM-RR RH SPEAKER
D 8	SOUND SYSTEM-RR RH SPEAKER
D 3 4	SOUND SYSTEM-RR RH SPEAKER
D 6 7	SOUND SYSTEM-RR RH SPEAKER
G 1	SOUND SYSTEM-FR LH SPEAKER
G 2	SOUND SYSTEM-FR LH SPEAKER
G 3	SOUND SYSTEM-FR LH SPEAKER
G 4	SOUND SYSTEM-RR LH SPEAKER
G 5	SOUND SYSTEM-RR LH SPEAKER
G 6	SOUND SYSTEM-RR LH SPEAKER
G 7	SOUND SYSTEM-RR LH SPEAKER
G 8	SOUND SYSTEM-RR LH SPEAKER
G 3 4	SOUND SYSTEM-RR LH SPEAKER
G 6 7	SOUND SYSTEM-RR LH SPEAKER
L 1 A	INTERIOR LTS-110V FLUORESCENT
L 1 B	INTERIOR LTS-110V FLUORESCENT
L 2 A	INTERIOR LTS-110V FLUORESCENT
L 2 B	INTERIOR LTS-110V FLUORESCENT
L 0	110V RECEPTACLE- 110V FLUOR.
L 1	110V RECEPTACLE- 110V FLUOR.
L 2	110V RECEPTACLE- 110V FLUOR.
R A	INTERIOR LTS-110V FLUORESCENT
R B	INTERIOR LTS-110V FLUORESCENT
S H 1	SHIELD CHASSIS GRD
S H 2	SHIELD CHASSIS GRD
S H 3	SHIELD CHASSIS GRD
S H 4	SHIELD CHASSIS GRD
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 10	SPARE-RJB TO LUGG CPT #1
S P 11	SPARE-FJB TO RJB
S P 12	SPARE-RJB TO ENGINE
S P 13	SPARE-RJB TO ENGINE
S P 14	SPARE-FJB TO RJB
S P 15	SPARE-RJB TO ENGINE
S P 16	SPARE-RJB TO ENGINE
S P 17	SPARE-RJB TO ENGINE
S P 18	SPARE-FJB TO RJB
S P 24	SPARE-RJB TO LAVATORY ROOF
S P 25	SPARE-RJB TO LAVATORY ROOF
S P 26	SPARE-RJB TO LAVATORY ROOF
S P 27	SPARE-RJB TO LH HAT RACK
S P 28	SPARE-RJB TO LH HAT RACK
S P 31	SPARE-RJB TO RH HAT RACK
S P 32	SPARE-RJB TO RH HAT RACK
S P 33	SPARE-FJB TO RJB
S P 38	SPARE-FJB TO RJB
S P 43	SPARE-FJB TO RJB
S P 45	SPARE-FJB TO RJB
S P 46	SPARE-RJB TO LH FR ROOF
S P 48	SPARE-RJB TO DASH CENTER PANEL
S P 56	SPARE-ENGINE TO RH SW PANEL
S P 57	SPARE-DASH CENTER PANEL TO ENG.
S P 58	SPARE-DASH CENTER PANEL TO ENG.
S P 59	SPARE-FJB TO ENGINE
S P 61	SPARE-FJB TO DASH RH PANEL
S P 68	SPARE-FJB TO ENGINE
S P 69	SPARE-FJB TO FR AXLE
S P 70	SPARE-FJB TO FR AXLE
S P 71	SPARE-FJB TO RH SW PANEL
S P 72	SPARE-FJB TO FR SERV CPT
S P 74	SPARE-FJB TO LH CONSOLE
S P 77	SPARE-FJB TO EVAPORATOR CPT
S P 78	SPARE-FJB TO CONDENSER CPT
S P 79	SPARE-FJB TO CONDENSER CPT
S P 87	SPARE-RJB TO LH HAT RACK
S P 88	SPARE-RJB TO RH HAT RACK
S P 92	SPARE-RJB TO CONDENSER CPT
S P 93	SPARE-RJB TO EVAPORATOR CPT
S P 94	SPARE-RJB TO RR ROOF
S P 95	SPARE-RJB TO RR ROOF
S P 96	SPARE-RJB TO LUGG CPT #2
S P 97	SPARE-RJB TO LUGG CPT #3
S P 98	SPARE-RJB TO LUGG CPT #3
S P 104	SPARE-RJB TO ENGINE CPT
S P 105	SPARE-FJB TO ENGINE
S P 106	SPARE-RJB TO BATT. CPT.
S P 107	SPARE-RJB TO BATT. CPT.
S P 108	SPARE-RJB TO BATT. CPT.
S P 109	SPARE-RJB TO ENGINE CPT.
S P 110	SPARE-RJB TO ENGINE CPT.
S P 111	SPARE-RJB TO ENGINE CPT.
S P 112	SPARE-RJB TO ENGINE CPT.
S P 114	SPARE-FJB TO U/DASH WIPER
S P 115	SPARE-FJB TO U/DASH WIPER
S P 116	SPARE-FJB TO U/DASH FLOOR
S P 117	SPARE-FJB TO U/DASH FLOOR
S P 119	SPARE-RJB TO ENGINE CPT.
SPZ 1	SPARE WIRE-ZF TRANSM.
SPZ 2	SPARE WIRE-ZF TRANSM.
SPZ 3	SPARE WIRE-ZF TRANSM.
SPZ 4	SPARE WIRE-ZF TRANSM.
SPZ 5	SPARE WIRE-ZF TRANSM.
SPZ 6	SPARE WIRE-ZF TRANSM.
W C	A/C & HEAT SYST-EVAP CTR SIGN
Y C	INTERIOR LTS-110V FLUORESCENT
Y D	INTERIOR LTS-110V FLUORESCENT
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0	GALLEY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A	A/C SYSTEM-EVAP. GRD
0 A A	RS - VOLTAGE REGULATOR GRD
0 B 1	EC – RR JCT PANEL GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN EVAP. & CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D	RJB – IGNITION RELAY
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 E	RS - HAT RACK ACCES. LH GRD
0 E A	EATON TRANSMISSION GRD
0 F	RS - HAT RACK ACCES. RH GRD
0 G	RS - HAT RACK ACCES. RH GRD
0 H	RS - LAVATORY ACCES. GRD
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L 6	FS - FRONT SERVICE CPT LTS GRD
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR (SEDAN) GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 1	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	FS - SOUND SYS. JCT PANEL GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R E	RADIO &CTRL HEAD CHASSIS GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN - GND RELAY
0 S A	EC-BOSCH ALT. GROUND
0 S 2	SOUND SYSTEM RADIO GRD
0 S 3	SOUND SYSTEM VIDEO GRD
0 S S	SOUNS SYSTEM BATT. GRD
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 T 5	FS - HVAC DASH MODULE. GRD
O T 6	FS - HVAC DASH MODULE. GRD
O T 7	FS - DDDL GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS SYSTEM - GRD
0 Y 2	ABS SYSTEM - GRD
0 Y 3	ABS SYSTEM - GRD

CIRCUIT NUMBER CODE

No.	DESCRIPTION
0 Y 4	ABS SYSTEM - GRD
0 Y 5	ABS SYSTEM - GRD
0 Y 6	ABS SYSTEM - GRD
0 Z	RR JCT BOX CPT GRD STUD
0 Z 0	RR JCT BOX CPT GRD STUD
0Z 1	ZF TRANSM. GRD
0Z 2	ZF TRANSM. GRD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 E	A/C & HEAT SYSTEM EVAP CONT
2 F	A/C & HEAT SYSTEM EVAP CONT
4	HOSTESS & PASSENGER CHIME
4 A	HOSTESS & PASSENGER CHIME
4 B	PASSENGER CHIME
4 C	HOSTESS CHIME
5	INTERIOR LTS-AISLE & EMERG. EXIT
5	UPPER WINDSHIELD DEFROSTER
5 D	UPPER WINDSHIELD DEFROSTER
5 E	UPPER WINDSHIELD DEFROSTER
5 N	INTERIOR LTS-EMERGENCY EXIT
5 N C	SPEED SIGNAL LOWER 5MPH
5 N O	SPEED SIGNAL HIGHER 5MPH
6	INTERIOR LTS-AISLE
7 B	ENTRANCE DOOR (SEDAN)
7 D	ENTRANCE DOOR (SEDAN)
7 D A	ENTRANCE DOOR (SEDAN)
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
1 0	INTERIOR LTS-LUGGAGE CPT
1 0 A	INTERIOR LTS-LUGGAGE CPT
1 0 B	INTERIOR LTS-LUGGAGE CPT
1 0 D	INTERIOR LTS-LUGGAGE CPT
1 0 F	INTERIOR LTS-LUGGAGE CPT
1 0 H	INTERIOR LTS-LUGGAGE CPT
1 0 K	INTERIOR LTS-LUGGAGE CPT
1 0 R	INTERIOR LTS-LUGGAGE DOOR AJAR
1 1	FR DESTINATION SIGN
1 1 A	FR DESTINATION SIGN
1 1 B	FR DESTINATION SIGN
1 1 C	FR DESTINATION SIGN
1 1 D	FR DESTINATION SIGN
1 1 E	FR DESTINATION SIGN
1 1 K	FR DESTINATION SIGN

No.	DESCRIPTION
1 2	12V BAT ELECTRONIC JCT BLOCK
1 2	BAT CPT 12V BATTERY
1 2 A	FR JCT BOX 12V DISC SW
1 2 A	RR JCT BOX 12V DISC SW
1 2 B	12V BAT ELECTRICAL JCT BLOCK
1 2 B	RR JCT BOX 12V DISC SW
1 2 B	FR JCT BOX 12V DISC SW
1 2 B E	BAT. EQUALIZER MONITOR
1 2 C	FR JCT BOX 12V DISC SW
1 2 C	RR JCT BOX 12V HOT WIRE
1 2 C E	RR JCT BOX 12V HOT WIRE
1 2 D	BAT CPT 12V BATTERY
1 2 D A	12V IGNITION DISTRIBUTION
1 2 D T	TTLT MODULE
1 2 D Z	ZF TRANSM. HOTWIRE
1 2 E	FR JCT BOX 12V DISC SW
1 2 E	RR JCT BOX 12V DISC SW
1 2 F	BAT CPT 12V FJB & IC
1 2 F	FR JCT BOX 12V DISC SW
1 2 G	FR JCT BOX 12V DISC SW
1 2 H	12 V IGNITION D.T.RUN LIGHT
1 2 J	FR JCT BOX 12V DISC SW
1 2 I	12V IGNITION DISTRIBUTION
1 2 I	RR JCT BOX 12V IGNITION
1 2 K	12 VOLT IGN. TTLT & HVAC MODULE
1 2 I A	12V IGNITION DISTRIBUTION
1 2 I A	FR JCT BOX 12V IGNITION
1 2 I B	FR JCT BOX 12V IGNITION
1 2 I E	ABS-FR JCT BOX 12V IGNITION
1 2 I F	FR JCT BOX 12V IGNITION
1 2 I Z	12 V IGNITION FOR ZF TRANSM.
1 2 L X	CLUSTER (12V HOT WIRE)
1 2 M	ABS-FR JCT BOX 12V DISC. SW.
1 2 P	LH CONSOLE POWER OUTLET
1 2 R	BAT CPT 12V DISC RLY TO RJB
1 2 R	MEMORY BATTERY RADIO
1 2 S	SOUND SYSTEM 12V RADIO
1 2 S 1	SOUND SYSTEM 12V RADIO
1 2 S 1 A	DVD KARAOKE FEEDING
1 2 S 2	SOUND SYSTEM 12V RADIO
1 2 S 2 A	DVD KARAOKE FEEDING
1 2 S B	SOUND SYSTEM 12V FEEDING
1 2 S S	SOUND SYSTEM 12V FEEDING
1 2 V	RR JCT BOX 12V DISC SW
1 2 V A	BATTERY TO EQUALIZER 12V
1 2 V D	12V HOT WIRE DISTRIBUTION
1 2 V F	BAT CPT 12V FJB & IC
1 2 V I	12V IGNITION DISTRIBUTION
1 2 V R	BAT CPT 12V DISC RLY TO RJB
1 2 W	12V BATTERY DDEC III

No.	DESCRIPTION
1 2 W	ENTRANCE DOOR (SEDAN)
1 2 W A	ENTRANCE DOOR (SEDAN)
1 2 W B	ENTRANCE DOOR (SEDAN)
1 2 X	FR JCT BOX 12V DISC SW
1 2 X 2	FR JCT BOX 12V DISC SW
1 2 Y	FR JCT BOX 12V DISC SW
1 3 A	ALARM & SIGNAL-LO AIR PRIM.
1 3 B	ALARM & SIGNAL-LO AIR SEC.
1 4	LAVATORY-FLUSHING PUMP
1 4 A	LAVATORY-FLUSHING PUMP
1 4 P	LAVATORY-FLUSHING PUMP
1 5	EXTERIOR LTS-MULTI FUNC LEVEL
1 5 A	WIPER & WASHER UPPER WINDSHIELD
1 6	SPEED - SIGNAL +
1 6 A	SPEED - SIGNAL +
1 6 T	SPEED - SIGNAL +
1 7	EXTERIOR LTS-FLASHER UNIT
1 7 A	EXTERIOR LTS-FLASHER UNIT
1 9	DIFFERENTIAL OIL TEMP
2 0	SPEED - SIGNAL -
2 0 T	SPEED - SIGNAL -
2 0 W	SPEED - SIGNAL -
2 1	EXTERIOR LTS-DIRECTIONAL LH
2 1 A	EXTERIOR LTS-DIRECTIONAL LH
2 1 B	EXTERIOR LTS-HAZARD
2 1 C	EXTERIOR LTS-CORNERING LH
2 1 H	EXTERIOR LTS-DIRECTIONAL LH
2 1 K	EXTERIOR LTS-CORNERING
2 1 N	EXTERIOR LTS-CORNERING LH
2 1 P	EXTERIOR LTS-CORNERING LH
2 3	EXTERIOR LTS-DIRECTIONAL RH
2 3	EXTERIOR LTS-DIRECTIONAL RH
2 3 A	EXTERIOR LTS-DIRECTIONAL RH
2 3 B	EXTERIOR LTS-DIRECTIONAL RH
2 3 C	EXTERIOR LTS-CORNERING RH
2 3 N	EXTERIOR LTS-CORNERING RH
2 3 P	EXTERIOR LTS-CORNERING RH
2 4	BAT CPT 24V BATTERY
2 4	FR JCT BOX 24V DISC SW
2 4 A	BOOSTER BLOCK 24V DISC SW
2 4 A	FR JCT BOX 24V DISC SW
2 4 A	RR JCT BOX 24V DISC SW
2 4 B	24V STARTER RLY FEEDING
2 4 B	FR JCT BOX 24V DISC SW
2 4 B A	RR JCT BOX 24V DISC SW
2 4 B C	24 VOLT BATT. CHARGER
2 4 B E	RJB CPT-BAT EQ MONITOR HOT WIRE
2 4 C	FR JCT BOX 24V DISC SW
2 4 C	RR JCT BOX 24V DISC SW
2 4 D	BAT CPT 24V HOT WIRE

No.	DESCRIPTION
2 4 D	FR JCT BOX 24V HOT WIRE
2 4 D	RR JCT BOX 24V HOT WIRE
2 4 D A	A/C JCT BOX 24V HOT WIRE
2 4 D Z	24 V HOT WIRE FOR ZF TRANSM.
2 4 E	BAT CPT 24V DISC SW
2 4 E	FR JCT BOX 24V DISC SW
2 4 E	RR JCT BOX 24V DISC SW
2 4 F	FR JCT BOX 24V DISC SW
2 4 F	RR JCT BOX 24V DISC SW
2 4 G	FR JCT BOX 24V DISC SW
2 4 G	RR JCT BOX 24V DISC SW
2 4 H	FR JCT BOX 24V DISC SW
2 4 H	RR JCT BOX 24V DISC SW
2 4 I	FR JCT BOX 24V IGNITION
2 4 I	RR JCT BOX 24V IGNITION
2 4 I A	FR JCT BOX 24V IGNITION
2 4 I B	FR JCT BOX 24V IGNITION
2 4 I B	RR JCT BOX 24V IGNITION
2 4 I C	FR JCT BOX 24V IGNITION
2 4 I C	RR JCT BOX 24V IGNITION
2 4 I F	FJB 24VOLT IGNITION
2 4 I Z	ZF TANSM. IGNITION
2 4 P	FR JCT BOX 24V DISC SW
2 4 S	24V DISC SW RLY SIGNAL
2 4 S 1	SOUND SYSTEM 24V AMPLIFIER
2 4 S 2	SOUND SYSTEM 24V AMPLIFIER
2 4 S 3	SOUND SYSTEM 24V VIDEO
2 4 S 4	SOUND SYSTEM 24V VIDEO
2 4 S B	SOUND SYSTEM 24V FEEDING
2 4 S S	SOUND SYSTEM 24V FEEDING
2 4 R	24 VOLTS FRONT CAMERA SW.
2 4 V 2	RR JCT BOX 24V DISC SW
2 4 V 3	RR JCT BOX 24V DISC SW
2 4 V 4	RR JCT BOX 24V DISC SW
2 4 V 5	RR JCT BOX 24V DISC SW
2 4 V D	24V HOT WIRE RR JCT BOX
2 4 V F	BAT CPT 24V SW TO FJB & IC
2 4 V A	BATTERY TO EQUALIZER 24V
2 4 V I	RR JCT BOX 24V IGNITION
2 4 V R	BAT CPT 24V DISC SW TO RJB
2 4 W	RR JCT BOX 24V DISC SW (WCL)
2 4 W C	BATT.CPT TO HYD. PUMP (WCL)
2 4 W L	24V BATTERY-HYD. PUMP (WCL)
2 4 Z Z	24 VOLT - ZF TRANSM. POWER
2 5	24 VOLT ALT.SIGNAL MODULE
2 5 A 1	PRE-EXITATION ALT. BOSCH #1
2 5 A 2	PRE-EXITATION ALT. BOSCH #2
2 5 A	T.T. LT. ALTERNATOR #1
2 5 B	12 VOLTS IGN. ALT. SIGNAL MODULE
2 5 D	12 V. ENGINE RUN / HVAC SYSTEM

CIRCUIT NUMBER CODE

No.	DESCRIPTION
25E	USE ON VIP ONLY
25F	12 VOLT IGN. DISTRIBUTION
25H	24 VOLT IGN. ALT. BOSCH
25K	T.T. LT. ALTERNATOR #2
26A	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26B	DRIVER'S WINDOW LIFTER
26C	DRIVER'S WINDOW LIFTER
27	LAVATORY-EMERGENCY SONALERT
28A	A/C & HEAT SYSTEM-HI PRESSURE
28H	TTLT HI LO PRESS
28T	TTLT HI LO PRESS
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29A	A/C & HEAT SYSTEM-DRIVER'S HTR
29B	A/C & HEAT SYSTEM-DRIVER'S HTR
29H	HVAC DASH MODULE
29X	A/C & HEAT SYSTEM-DRIVER'S HTR
30A	GALLEY
31A	A/C & HEAT SYSTEM-UNLOADER
31B	A/C & HEAT SYSTEM-UNLOADER
31B	WIPER & WASHER SYSTEM
31C	WIPER & WASHER SYSTEM
31D	WIPER & WASHER SYSTEM
31E	WIPER & WASHER SYSTEM
31J	WIPER & WASHER SYSTEM
31X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32B	EXTERIOR LTS-BACK-UP
32C	BACK-UP PWR & SIGNAL
32D	BACK-UP ALARM
35	ENTRANCE DOOR (SEDAN)
35B	ENTRANCE DOOR (SEDAN)
35BB	ENTRANCE DOOR (SEDAN)
35D	ENTRANCE DOOR (SEDAN)
36	JACOB BRAKE SYSREM
36A	JACOB BRAKE SYSREM
38	INTERIOR LTS-24V FLUORESCENT
38A	INTERIOR LTS-24V FLUORESCENT
38C	INTERIOR LTS-24V FLUORESCENT
38D	INTERIOR LTS-24V FLUORESCENT
39	INTERIOR LTS-24V LH CONSOLE SW
39A	INTERIOR LTS-DRIVER"S LTS
39P	READING LIGHTS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
43	HAT RACK FAN
43A	HAT RACK FAN
43B	HAT RACK FAN
43D	HAT RACK FAN
43E	HAT RACK FAN
43F	HAT RACK FAN
43G	HAT RACK FAN
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45A	A/C & HEAT SYSTEM-FULL AIR
45B	A/C & HEAT SYSTEM-WATER PUMP
45C	A/C & HEAT SYSTEM-WATER VALVE
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
48	ENTRANCE DOOR (SEDAN)
48A	ENTRANCE DOOR (SEDAN)
49	ENTRANCE DOOR (SEDAN)
49A	ENTRANCE DOOR (SEDAN)
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL- AIR HORN
52C	ALARM & SIGNAL- AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
62	LAVATORY-OCCUPIED LT
62A	LAVATORY-FLUOR LT
62B	LAVATORY-FLUOR LT
62E	LAVATORY-OCCUP & FLUOR LT
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVERS FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65D	DRIVER REC. DAMPER
66	O_PASS. ON/OFF
67	24 VOLT RUN DISTRIBUTION
67A	A/C & HEAT SYSTEM
67C	HEATING WINDSHIELD
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67X	A/C & HEAT SYSTEM
68	DASH & DEFROST DAMPER MOTOR
68A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH
72C	SUN VISOR-LH
72D	SUN VISOR-LH
73	LAVATORY-FEEDING
74	INTERIOR LTS-READING RH
74A	INTERIOR LTS-READING RH
74B	INTERIOR LTS-READING RH
74D	INTERIOR LTS-READING SIGNAL
75	INTERIOR LTS-READING LH
75A	INTERIOR LTS-READING LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85E	STOP LIGHT RLY
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85G	RADIATOR FAN CLUTCH
85X	12V IGN ABS
85Y	ABS SYSTEM
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
86F	ENGINE CTR-STARTER TTLT SIGN
86T	ENGINE CTR-STARTER TTLT SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
95B	ENGINE BRAKE & RETARDER SYSTEM
95C	ENGINE BRAKE & RETARDER SYSTEM
95D	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
100	INTERIOR LTS-GENERAL
100A	INTERIOR LTS-GENERAL
100B	INTERIOR LTS-GENERAL
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	WORLD TRANSM-SOL. SUPPLY
102A	24V STARTER TO BOSCH ALTERNATOR
103	LOW BUOY
104	WORLD TRANSM-SOL. FORWARD
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP

CIRCUIT NUMBER CODE

No.	DESCRIPTION
106	WORLD TRANSM-OIL LEVEL HI
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
113W	WORLD TR.-REVERSE WARNING
113Z	ZF TRANSM.- REVERSE SIGNAL
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
115W	ZF TRANSM. - CHECK TRANSM. TTLT
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125	GALLEY LAMP
125T	GALLEY LAMP
125W	WORLD TRANSM-RET. INDICATOR
126	KNEELING SYSTEM
126A	KNEELING SYSTEM
126B	KNEELING SYSTEM
126C	KNEELING SYSTEM
126D	KNEELING SYSTEM
126E	KNEELING SYSTEM
126F	KNEELING SYSTEM
126F1	KNEELING SYSTEM
126G	KNEELING SYSTEM
126H	KNEELING SYSTEM
126K	KNEELING SYSTEM
126P	KNEELING SYSTEM
126R	KNEELING SYSTEM
126W	5 MPH N.C. SIGNAL (WCL)
126S	KNEELING SYSTEM
126T	KNEELING SYSTEM
127	WORLD TRANSM-LUBE PRESS SW.
127	WORLD TRANSM-RETARDER FEED SOL.
127	POWER- PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT - BURNER ON SIGNAL
128	WORLD TRANSM-SOL. C2
129	POWER- PRE-HEAT WATER HEATER
129B	POWER- PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	A/C & HEAT SYSTEM-EVAP FAN MOTOR
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	GALLEY-HEAT CONTAINERS
133A	GALLEY-HEAT CONTAINERS
133B	GALLEY-HEAT CONTAINERS
133C	GALLEY-HEAT CONTAINERS
133	WORLD TRANSM-RET. ACTUATOR HI
134	GALLEY-HEAT CONTAINERS
134A	GALLEY-HEAT CONTAINERS
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135A	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	GALLEY-ACCESSORIES
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146A	TRANSMISSION-12V IGNITION
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	WORLD TRANSM-OIL TEMP
147A	ETHER COLD START & D.R.L.
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
152	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	WORLD TRANSM-SPARE INPUT (-)
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157B	ABS SYSTEM
157D	A.T.C. SYSTEM
157E	A.T.C. SYSTEM
157F	A.T.C. SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	W. TR.-OUT SPEED INTERLOCK
167Z	ZF- OUT SPEED INTERLOCK
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170	LUGGAGE DOOR LOCK
170C	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
225	LAVATORY FAN
225A	LAVATORY FAN
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
231Z	ZF NEUTRAL SIGNAL GRD
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251A	DDEC III - DATA LOGGER 12 H.W.
251	DDEC III - PRODRIVER 12V H.W.
253	GALLEY-MICROWAVE
254	GALLEY-12V FRIGO NORCOLD

CIRCUIT NUMBER CODE

No.	DESCRIPTION
254A	GALLEY-FRIGO
255	GALLEY-COFEEMAKER
255A	GALLEY-COFEEMAKER
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
260	WINDOW AJAR
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
292	FAN CLUTCH RADIATOR SPD 2
300	DOOR AJAR MAGN.SW. (WCL)
300A	POWER SYSTEM SW. (WCL)
300B	DOOR AJAR ALARM (WCL)
301	POWER SYSTEM SW. (WCL)
302	DOOR AJAR T.T.LT. (WCL)
302A	DOOR AJAR ALARM SIGN.(WCL)
302B	DOOR AJAR MAGN.SW. (WCL)
303	REMOTE WALL SW. DWN (WCL)
304	REMOTE WALL SW. UP (WCL)
305	PARK. BRAKE SOL. VALVE (WCL)
305A	PARK. BRAKE SAFETY SW. (WCL)
305A1	DOOR AJAR - PARK. BRAKE (WCL)
306	CONTROL SYSTEM (WCL RICON)
307	CONTROL SYSTEM (WCL RICON)
308	CONTROL SYSTEM (WCL RICON)
309	CONTROL SYSTEM (WCL RICON)
310	EATON TRANSMISSION
311	EATON TRANSMISSION
312	EATON TRANSMISSION
313	EATON TRANSMISSION
314	EATON TRANSMISSION
315	EATON TRANSMISSIOM
316	EATON TRANSMISSION - EPL
317	EATON TRANSMISSION
318	EATON TRANSMISSION
319	EATON TRANSMISSION
320	EATON TRANSMISSION
321	EATON TRANSMISSION
322	EATON TRANSMISSIION
323	EATON TRANSMISSION
324	EATON TRANSMISSION
325	EATON TRANSMISSION
326	EATON TRANSMISSION
327	EATON TRANSMISSION
328	EATON TRANSMISSION
329	EATON TRANSMISSION
330	EATON TRANSMISSION - EPL
331	EATON TRANSMISSION - EPL
332	EATON TRANSMISSION
333	EATON TRANSMISSION - 12V BATTERY
334	EATON GENERATION 2
416	DDEV IV- SENSOR SUPPLY 5VDC
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
452	DDEC IV- SENSOR RETURN (ENGINE)
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
524B	ZF SIGNAL – AUX. SENSOR THROTTLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE
541	DDEC III-CRUISE SET SW
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
564B	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
565Z	DECELERATION LTS
583	DDEC III-ENGINE BRAKE 4 CYL.
700	J1587(+)
701	J1587(-) – GROUND
705	ZF SIGNALS
706	ZF SIGNALS
707	ZF SIGNALS
717	ZF SIGNALS
718	ZF SIGNALS
719	ZF SIGNALS
720	ZF SIGNALS
740	EASY START VALVE
761	ZF SIGNALS
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
905	DDEC IV- AMBIANT AIR TEMPERATURE
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
925	J1939-HIGH
926	J1939-LOW
927	J1939-SHIELD
952	DDEC III-SENSOR RETURN #1
953	DDEC III-SENSOR RETURN #2
953A	THROTTLE INHIBIT
976	DDEC IV- RELATIVE HUMIDITY
979	DDEC III-ENGINE BRAKE 2 CYL.
988	DDEC III-CRUISE ENABLE LTS.

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 1	2	40A	562686	RR. JCT. BOX	12V IGNITION
CB 2	1.1	40A	870093	RR. JCT. BOX	12V HOT WIRE
CB 3	1.1	70A	562687	RR. JCT. BOX	12V FEED RR. JCT. BOX
CB 4	1.1	70A	562687	RR. JCT. BOX	12V FEED FR. JCT. BOX
CB 5	1.1	30A	870690	RR. JCT. BOX	24V HOT WIRE
CB 6	1.1	90A	562683	RR. JCT. BOX	24V FEED RR. JCT. BOX
CB 7	1.1	90A	562683	RR. JCT. BOX	24V FEED FR. JCT. BOX
CB 8	1.1	150A	560299	RR. JCT. BOX	24V EVAPORATOR FAN MOTOR
CB 10	4	8A	561791	FR. JCT. BOX	MASTER KEY SWITCH
CB 13	23.1	90A	562683	RR. JCT. BOX	INVERTER
CB 16	4	8A	561791	RR. JCT. BOX	ENGINE-RR. CTRL & START SW.
CB 18	4	6A	561790	RR. JCT. BOX	ENGINE-FR. CTRL SW.
CB 19	5	15A	561793	RR. JCT. BOX	E.C.M. DDEC 12V POWER
CB 20	5	15A	561793	RR. JCT. BOX	E.C.M. DDEC 12V POWER
CB 21	5	10A	561792	RR. JCT. BOX	E.C.M. DDEC and WTEC 12V IGNITION
CB 24	6	25A	561795	RR. JCT. BOX	WORLD TRANSMISSION
CB 26	9.3	8A	561791	RR. JCT. BOX	BACK-UP LTS
CB 27	7	8A	561791	FR. JCT. BOX	24V IGNITION DASH ACCESSORIES
CB 28	7	6A	561790	FR. JCT. BOX	12V IGNITION DASH ACCESSORIES
CB 34	9.3	6A	561792	RR. JCT. BOX	BACK-UP ALARM
CB 35	9.3	15A	561793	FR. JCT. BOX	FOG & HAZARD DASH SW.
CB 37	9.1	6A	561790	FR. JCT. BOX	HEAD & MULTI-FUNCTION LEVEL SW.
CB 38	9.1	3A	561797	FR. JCT. BOX	FR. MARKER LTS
CB 39	9.1	6A	561790	FR. JCT. BOX	CLEARANCE & IDENTIFICATION LTS
CB 40	9.1	3A	561797	FR. JCT. BOX	FR. CLEARANCE & IDENTIFICATION LTS
CB 41	9.1	3A	561797	RR. JCT. BOX	RR. CLEARANCE & IDENTIFICATION LTS
CB 42	9.1	8A	561791	RR. JCT. BOX	RR. TAIL & LICENCE LTS
CB 43	9.1	20A	561794	FR. JCT. BOX	HEADLAMP (HI)
CB 44	9.1	15A	561793	FR. JCT. BOX	HEADLAMP (LO)
CB 45	9.2	10A	561792	FR. JCT. BOX	WIPER CTRL MULTI-FUNCTION LEVEL SW.
CB 46	9.2	10A	561792	FR. JCT. BOX	FLASHER & HAZARD UNIT
CB 48	9.3	6A	561790	FR. JCT. BOX	STOP LTS PRESSURE SW.
CB 49	9.3	6A	561790	RR. JCT. BOX	STOP & CYCLOP LTS
CB 51	10	10A	561792	FR. JCT. BOX	UPPER WIPER CTRL SW.
CB 52	11.1	15A	561793	RR. JCT. BOX	LUGGAGE & DOOR AJAR LTS
CB 57	11.2	8A	561791	FR. JCT. BOX	DASH LTS RHEOSTAT
CB 58	13.1	6A	561790	FR. JCT. BOX	HVAC DASH MODULE
CB 63	11.4	8A	561791	FR. SERVICE.CPT	110V FLUORESCENT LH
CB 64	11.4	8A	561791	FR. SERVICE.CPT	110V FLUORESCENT RH
CB 70					
CB 71					
CB 72	13.2	10A	561792	RR. JCT. BOX	A/C COMPRESSOR CLUTCH
CB 73	13.2	15A	561793	RR. JCT. BOX	WATER PUMP
CB 77	13.1	40A	870093	RR. JCT. BOX	CONDENSER FAN MOTOR RH
CB 78	13.1	40A	870093	RR. JCT. BOX	CONDENSER FAN MOTOR LH
CB 79	13.2	15A	561793	FR. JCT. BOX	DRIVER'S HTR FAN SPEED CTRL MODULE
CB 85	16.1	10A	561790	FR. JCT. BOX	ENTRANCE DOOR (SEDAN) & STEP LTS
CB 93	1.2	30A	870690	RR. JCT. BOX	SOUND SYSTEM 12V FEEDING
CB 94	1.2	30A	870690	RR. JCT. BOX	SOUND SYSTEM 24V FEEDING
CB 95	20.1	10A	561792	S.S. JCT. PANEL	SOUND SYSTEM AMPLI
CB 96	20.1	10A	561792	S.S. JCT. PANEL	VIDEO SYSTEM
CB 97					
CB 98	20.1	15A	561793	S.S. JCT. PANEL	SOUND SYSTEM RADIO & CD
CB 99	20.7	15A	561793	S.S. JCT. PANEL	SEAT AUDIO SYSTEM
CB 105	21.1	6A	561790	FR. JCT. BOX	E.C.U. ABS
CB 106	21.1	15A	561793	FR. JCT. BOX	E.C.U. ABS
CB 124	8	6A	561790	RR. JCT. BOX	RADIATOR FAN CLUTCH
CB 126	25.1	150A	560299	RR. JCT. BOX	WHELL CHAIR LIFT MOTOR PUMP STE.

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 126	25.2	90A	560298	RR. JCT. BOX	WHELL CHAIR LIFT MOTOR PUMP RICON
CB 127	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN L.H.
CB 128	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN R.H.
CB 129	7.2	6A	561790	FR. JCT. BOX	CLUSTER
CB 130	28	6A	561790	FR. JCT. BOX	CLUSTER
CB 131					

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 1	2	40A	562686	RR. JCT. BOX	12V IGNITION
CB 2	1.1	40A	870093	RR. JCT. BOX	12V HOT WIRE
CB 3	1.1	70A	562687	RR. JCT. BOX	12V FEED RR. JCT. BOX
CB 4	1.1	70A	562687	RR. JCT. BOX	12V FEED FR. JCT. BOX
CB 5	1.1	30A	870690	RR. JCT. BOX	24V HOT WIRE
CB 6	1.1	90A	562683	RR. JCT. BOX	24V FEED RR. JCT. BOX
CB 7	1.1	90A	562683	RR. JCT. BOX	24V FEED FR. JCT. BOX
CB 8	1.1	150A	560299	RR. JCT. BOX	24V EVAPORATOR FAN MOTOR
CB 10	4	8A	561791	FR. JCT. BOX	MASTER KEY SWITCH
CB 13	23.1	90A	562683	RR. JCT. BOX	INVERTER
CB 16	4	8A	561791	RR. JCT. BOX	ENGINE-RR. CTRL & START SW.
CB 18	4	6A	561790	RR. JCT. BOX	ENGINE-FR. CTRL SW.
CB 19	5	15A	561793	RR. JCT. BOX	E.C.M. DDEC 12V POWER
CB 20	5	15A	561793	RR. JCT. BOX	E.C.M. DDEC 12V POWER
CB 21	5	10A	561792	RR. JCT. BOX	E.C.M. DDEC and WTEC 12V IGNITION
CB 24	6	25A	561795	RR. JCT. BOX	WORLD TRANSMISSION
CB 26	9.3	8A	561791	RR. JCT. BOX	BACK-UP LTS
CB 27	7	8A	561791	FR. JCT. BOX	24V IGNITION DASH ACCESSORIES
CB 28	7	6A	561790	FR. JCT. BOX	12V IGNITION DASH ACCESSORIES
CB 34	9.3	6A	561792	RR. JCT. BOX	BACK-UP ALARM
CB 35	9.3	15A	561793	FR. JCT. BOX	FOG & HAZARD DASH SW.
CB 37	9.1	6A	561790	FR. JCT. BOX	HEAD & MULTI-FUNCTION LEVEL SW.
CB 38	9.1	3A	561797	FR. JCT. BOX	FR. MARKER LTS
CB 39	9.1	6A	561790	FR. JCT. BOX	CLEARANCE & IDENTIFICATION LTS
CB 40	9.1	3A	561797	FR. JCT. BOX	FR. CLEARANCE & IDENTIFICATION LTS
CB 41	9.1	3A	561797	RR. JCT. BOX	RR. CLEARANCE & IDENTIFICATION LTS
CB 42	9.1	8A	561791	RR. JCT. BOX	RR. TAIL & LICENCE LTS
CB 43	9.1	20A	561794	FR. JCT. BOX	HEADLAMP (HI)
CB 44	9.1	15A	561793	FR. JCT. BOX	HEADLAMP (LO)
CB 45	9.2	10A	561792	FR. JCT. BOX	WIPER CTRL MULTI-FUNCTION LEVEL SW.
CB 46	9.2	10A	561792	FR. JCT. BOX	FLASHER & HAZARD UNIT
CB 48	9.3	6A	561790	FR. JCT. BOX	STOP LTS PRESSURE SW.
CB 49	9.3	6A	561790	RR. JCT. BOX	STOP & CYCLOP LTS
CB 51	10	10A	561792	FR. JCT. BOX	UPPER WIPER CTRL SW.
CB 52	11.1	15A	561793	RR. JCT. BOX	LUGGAGE & DOOR AJAR LTS
CB 57	11.2	8A	561791	FR. JCT. BOX	DASH LTS RHEOSTAT
CB 58	13.1	6A	561790	FR. JCT. BOX	HVAC DASH MODULE
CB 63	11.4	8A	561791	FR. SERVICE.CPT	110V FLUORESCENT LH
CB 64	11.4	8A	561791	FR. SERVICE.CPT	110V FLUORESCENT RH
CB 70					
CB 71					
CB 72	13.2	10A	561792	RR. JCT. BOX	A/C COMPRESSOR CLUTCH
CB 73	13.2	15A	561793	RR. JCT. BOX	WATER PUMP
CB 77	13.1	40A	870093	RR. JCT. BOX	CONDENSER FAN MOTOR RH
CB 78	13.1	40A	870093	RR. JCT. BOX	CONDENSER FAN MOTOR LH
CB 79	13.2	15A	561793	FR. JCT. BOX	DRIVER'S HTR FAN SPEED CTRL MODULE
CB 85	16.1	10A	561790	FR. JCT. BOX	ENTRANCE DOOR (SEDAN) & STEP LTS
CB 93	1.2	30A	870690	RR. JCT. BOX	SOUND SYSTEM 12V FEEDING
CB 94	1.2	30A	870690	RR. JCT. BOX	SOUND SYSTEM 24V FEEDING
CB 95	20.1	10A	561792	S.S. JCT. PANEL	SOUND SYSTEM AMPLI
CB 96	20.1	10A	561792	S.S. JCT. PANEL	VIDEO SYSTEM
CB 97					
CB 98	20.1	15A	561793	S.S. JCT. PANEL	SOUND SYSTEM RADIO & CD
CB 99	20.7	15A	561793	S.S. JCT. PANEL	SEAT AUDIO SYSTEM
CB 105	21.1	6A	561790	FR. JCT. BOX	E.C.U. ABS
CB 106	21.1	15A	561793	FR. JCT. BOX	E.C.U. ABS
CB 124	8	6A	561790	RR. JCT. BOX	RADIATOR FAN CLUTCH
CB 126	25.1	150A	560299	RR. JCT. BOX	WHEEL CHAIR LIFT MOTOR PUMP STE.

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 126	25.2	50A	563355	RR. JCT. BOX	WHEEL CHAIR LIFT MOTOR PUMP RICON
CB 127	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN L.H.
CB 128	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN R.H.
CB 129	7.2	6A	561790	FR. JCT. BOX	CLUSTER
CB 130	28	6A	561790	FR. JCT. BOX	CLUSTER
CB 131					

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 1	2	40A	562686	RR. JCT. BOX	12V IGNITION
CB 2	1.1	40A	870093	RR. JCT. BOX	12V HOT WIRE
CB 3	1.1	70A	562687	RR. JCT. BOX	12V FEED RR. JCT. BOX
CB 4	1.1	70A	562687	RR. JCT. BOX	12V FEED FR. JCT. BOX
CB 5	1.1	30A	870690	RR. JCT. BOX	24V HOT WIRE
CB 6	1.1	90A	562683	RR. JCT. BOX	24V FEED RR. JCT. BOX
CB 7	1.1	90A	562683	RR. JCT. BOX	24V FEED FR. JCT. BOX
CB 8	1.1	150A	560299	RR. JCT. BOX	24V EVAPORATOR FAN MOTOR
CB 10	4	8A	561791	FR. JCT. BOX	MASTER KEY SWITCH
CB 13					
CB 16	4	8A	561791	RR. JCT. BOX	ENGINE-RR. CTRL & START SW.
CB 18	4	6A	561790	RR. JCT. BOX	ENGINE-FR. CTRL SW.
CB 19	5	15A	561793	RR. JCT. BOX	E.C.M. DDEC 12V POWER
CB 20	5	15A	561793	RR. JCT. BOX	E.C.M. DDEC 12V POWER
CB 21	5	10A	561792	RR. JCT. BOX	E.C.M. DDEC and WTEC 12V IGNITION
CB 24	6	25A	561795	RR. JCT. BOX	WORLD TRANSMISSION
CB 26	9.3	8A	561791	RR. JCT. BOX	BACK-UP LTS
CB 27	7	8A	561791	FR. JCT. BOX	24V IGNITION DASH ACCESSORIES
CB 28	7	6A	561790	FR. JCT. BOX	12V IGNITION DASH ACCESSORIES
CB 34	9.3	6A	561792	RR. JCT. BOX	BACK-UP ALARM
CB 35	9.3	15A	561793	FR. JCT. BOX	FOG & HAZARD DASH SW.
CB 37	9.1	6A	561790	FR. JCT. BOX	HEAD & MULTI-FUNCTION LEVEL SW.
CB 38	9.1	3A	561797	FR. JCT. BOX	FR. MARKER LTS
CB 39	9.1	6A	561790	FR. JCT. BOX	CLEARANCE & IDENTIFICATION LTS
CB 40	9.1	3A	561797	FR. JCT. BOX	FR. CLEARANCE & IDENTIFICATION LTS
CB 41	9.1	3A	561797	RR. JCT. BOX	RR. CLEARANCE & IDENTIFICATION LTS
CB 42	9.1	8A	561791	RR. JCT. BOX	RR. TAIL & LICENCE LTS
CB 43	9.1	20A	561794	FR. JCT. BOX	HEADLAMP (HI)
CB 44	9.1	15A	561793	FR. JCT. BOX	HEADLAMP (LO)
CB 45	9.2	10A	561792	FR. JCT. BOX	WIPER CTRL MULTI-FUNCTION LEVEL SW.
CB 46	9.2	10A	561792	FR. JCT. BOX	FLASHER & HAZARD UNIT
CB 48	9.3	6A	561790	FR. JCT. BOX	STOP LTS PRESSURE SW.
CB 49	9.3	6A	561790	RR. JCT. BOX	STOP & CYCLOP LTS
CB 51	10	10A	561792	FR. JCT. BOX	UPPER WIPER CTRL SW.
CB 52	11.1	15A	561793	RR. JCT. BOX	LUGGAGE & DOOR AJAR LTS
CB 57	11.2	8A	561791	FR. JCT. BOX	DASH LTS RHEOSTAT
CB 58	13.1	6A	561790	FR. JCT. BOX	HVAC DASH MODULE
CB 63					
CB 64					
CB 70					
CB 71					
CB 72	13.2	10A	561792	RR. JCT. BOX	A/C COMPRESSOR CLUTCH
CB 73	13.2	15A	561793	RR. JCT. BOX	WATER PUMP
CB 77	13.1	40A	870093	RR. JCT. BOX	CONDENSER FAN MOTOR RH
CB 78	13.1	40A	870093	RR. JCT. BOX	CONDENSER FAN MOTOR LH
CB 79	13.2	15A	561793	FR. JCT. BOX	DRIVER'S HTR FAN SPEED CTRL MODULE
CB 85	16.1	10A	561792	FR. JCT. BOX	ENTRANCE DOOR (SEDAN) & STEP LTS
CB 93	1.2	30A	870690	RR. JCT. BOX	SOUND SYSTEM 12V FEEDING
CB 94	1.2	30A	870690	RR. JCT. BOX	SOUND SYSTEM 24V FEEDING
CB 95	20.1	10A	561792	S.S. JCT. PANEL	SOUND SYSTEM AMPLI
CB 96	20.1	10A	561792	S.S. JCT. PANEL	VIDEO SYSTEM
CB 97					
CB 98	20.1	15A	561793	S.S. JCT. PANEL	SOUND SYSTEM RADIO & CD
CB 99	20.7	15A	561793	S.S. JCT. PANEL	SEAT AUDIO SYSTEM
CB 105	21.1	6A	561790	FR. JCT. BOX	E.C.U. ABS
CB 106	21.1	15A	561793	FR. JCT. BOX	E.C.U. ABS
CB 124	8	6A	561790	RR. JCT. BOX	RADIATOR FAN CLUTCH
CB 126	25.1	150A	560299	RR. JCT. BOX	WHEEL CHAIR LIFT MOTOR PUMP STE.

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 126	25.2	50A	563355	RR. JCT. BOX	WHEEL CHAIR LIFT MOTOR PUMP RICON
CB 127	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN L.H.
CB 128	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN R.H.
CB 129	7.2	6A	561790	FR. JCT. BOX	CLUSTER
CB 130	28	6A	561790	FR. JCT. BOX	CLUSTER
CB 131					

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 1	2	40A	562686	RR. JCT. BOX	12V IGNITION
CB 2	1.1	40A	870093	RR. JCT. BOX	12V HOT WIRE
CB 3	1.1	70A	562687	RR. JCT. BOX	12V FEED RR. JCT. BOX
CB 4	1.1	70A	562687	RR. JCT. BOX	12V FEED FR. JCT. BOX
CB 5	1.1	30A	870690	RR. JCT. BOX	24V HOT WIRE
CB 6	1.1	90A	562683	RR. JCT. BOX	24V FEED RR. JCT. BOX
CB 7	1.1	90A	562683	RR. JCT. BOX	24V FEED FR. JCT. BOX
CB 8	1.1	150A	560299	RR. JCT. BOX	24V EVAPORATOR FAN MOTOR
CB 10	4	8A	561791	FR. JCT. BOX	MASTER KEY SWITCH
CB 13					
CB 16	4	8A	561791	RR. JCT. BOX	ENGINE-RR. CTRL & START SW.
CB 18	4	6A	561790	RR. JCT. BOX	ENGINE-FR. CTRL SW.
CB 19	5	15A	561793	RR. JCT. BOX	E.C.M. DDEC 12V POWER
CB 20	5	15A	561793	RR. JCT. BOX	E.C.M. DDEC 12V POWER
CB 21	5	10A	561792	RR. JCT. BOX	E.C.M. DDEC and WTEC 12V IGNITION
CB 24	6	25A	561795	RR. JCT. BOX	WORLD TRANSMISSION
CB 26	9.3	8A	561791	RR. JCT. BOX	BACK-UP LTS
CB 27	7	8A	561791	FR. JCT. BOX	24V IGNITION DASH ACCESSORIES
CB 28	7	6A	561790	FR. JCT. BOX	12V IGNITION DASH ACCESSORIES
CB 34	9.3	6A	561792	RR. JCT. BOX	BACK-UP ALARM
CB 35	9.3	15A	561793	FR. JCT. BOX	FOG & HAZARD DASH SW.
CB 37	9.1	6A	561790	FR. JCT. BOX	HEAD & MULTI-FUNCTION LEVEL SW.
CB 38	9.1	3A	561797	FR. JCT. BOX	FR. MARKER LTS
CB 39	9.1	6A	561790	FR. JCT. BOX	CLEARANCE & IDENTIFICATION LTS
CB 40	9.1	3A	561797	FR. JCT. BOX	FR. CLEARANCE & IDENTIFICATION LTS
CB 41	9.1	3A	561797	RR. JCT. BOX	RR. CLEARANCE & IDENTIFICATION LTS
CB 42	9.1	8A	561791	RR. JCT. BOX	RR. TAIL & LICENCE LTS
CB 43	9.1	15A	561793	FR. JCT. BOX	HEADLAMP (HI)
CB 44	9.1	15A	561793	FR. JCT. BOX	HEADLAMP (LO)
CB 45	9.2	10A	561792	FR. JCT. BOX	WIPER CTRL MULTI-FUNCTION LEVEL SW.
CB 46	9.2	10A	561792	FR. JCT. BOX	FLASHER & HAZARD UNIT
CB 48	9.3	6A	561790	FR. JCT. BOX	STOP LTS PRESSURE SW.
CB 49	9.3	6A	561790	RR. JCT. BOX	STOP & CYCLOP LTS
CB 51	10	10A	561792	FR. JCT. BOX	UPPER WIPER CTRL SW.
CB 52	11.1	15A	561793	RR. JCT. BOX	LUGGAGE & DOOR AJAR LTS
CB 57	11.2	8A	561791	FR. JCT. BOX	DASH LTS RHEOSTAT
CB 58	13.1	6A	561790	FR. JCT. BOX	HVAC DASH MODULE
CB 63					
CB 64					
CB 70					
CB 71					
CB 72	13.2	10A	561792	RR. JCT. BOX	A/C COMPRESSOR CLUTCH
CB 73	13.2	15A	561793	RR. JCT. BOX	WATER PUMP
CB 77	13.1	40A	870093	RR. JCT. BOX	CONDENSER FAN MOTOR RH
CB 78	13.1	40A	870093	RR. JCT. BOX	CONDENSER FAN MOTOR LH
CB 79	13.2	15A	561793	FR. JCT. BOX	DRIVER'S HTR FAN SPEED CTRL MODULE
CB 85	16.1	10A	561792	FR. JCT. BOX	ENTRANCE DOOR (SEDAN) & STEP LTS
CB 93	1.2	30A	870690	RR. JCT. BOX	SOUND SYSTEM 12V FEEDING
CB 94	1.2	30A	870690	RR. JCT. BOX	SOUND SYSTEM 24V FEEDING
CB 95	20.1	10A	561792	S.S. JCT. PANEL	SOUND SYSTEM AMPLI
CB 96	20.1	10A	561792	S.S. JCT. PANEL	VIDEO SYSTEM
CB 97					
CB 98	20.1	15A	561793	S.S. JCT. PANEL	SOUND SYSTEM RADIO & CD
CB 99	20.7	15A	561793	S.S. JCT. PANEL	SEAT AUDIO SYSTEM
CB 105	21.1	6A	561790	FR. JCT. BOX	E.C.U. ABS
CB 106	21.1	15A	561793	FR. JCT. BOX	E.C.U. ABS
CB 124	8	6A	561790	RR. JCT. BOX	RADIATOR FAN CLUTCH
CB 126	25.1	150A	560299	RR. JCT. BOX	WHEEL CHAIR LIFT MOTOR PUMP STE.

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 126	25.2	50A	563355	RR. JCT. BOX	WHEEL CHAIR LIFT MOTOR PUMP RICON
CB 127	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN L.H.
CB 128	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN R.H.
CB 129	7.2	6A	561790	FR. JCT. BOX	CLUSTER
CB 130	28	6A	561790	FR. JCT. BOX	CLUSTER
CB 131					

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 1	2	40A	562686	RR. JCT. BOX	12V IGNITION
CB 2	1.1	40A	870093	RR. JCT. BOX	12V HOT WIRE
CB 3	1.1	70A	562687	RR. JCT. BOX	12V FEED RR. JCT. BOX
CB 4	1.1	70A	562687	RR. JCT. BOX	12V FEED FR. JCT. BOX
CB 5	1.1	30A	870690	RR. JCT. BOX	24V HOT WIRE
CB 6	1.1	90A	562683	RR. JCT. BOX	24V FEED RR. JCT. BOX
CB 7	1.1	90A	562683	RR. JCT. BOX	24V FEED FR. JCT. BOX
CB 8	1.1	150A	560299	RR. JCT. BOX	24V EVAPORATOR FAN MOTOR
CB 10	4	8A	561791	FR. JCT. BOX	MASTER KEY SWITCH
CB 13					
CB 16	4	8A	561791	RR. JCT. BOX	ENGINE-RR. CTRL & START SW.
CB 18	4	6A	561790	RR. JCT. BOX	ENGINE-FR. CTRL SW.
CB 19	5	15A	561793	RR. JCT. BOX	E.C.M. DDEC 12V POWER
CB 20	5	15A	561793	RR. JCT. BOX	E.C.M. DDEC 12V POWER
CB 21	5	10A	561792	RR. JCT. BOX	E.C.M. DDEC and WTEC 12V IGNITION
CB 24	6	25A	561795	RR. JCT. BOX	WORLD TRANSMISSION
CB 26	9.3	8A	561791	RR. JCT. BOX	BACK-UP LTS
CB 27	7	8A	561791	FR. JCT. BOX	24V IGNITION DASH ACCESSORIES
CB 28	7	6A	561790	FR. JCT. BOX	12V IGNITION DASH ACCESSORIES
CB 34	9.3	6A	561792	RR. JCT. BOX	BACK-UP ALARM
CB 35	9.3	15A	561793	FR. JCT. BOX	FOG & HAZARD DASH SW.
CB 37	9.1	6A	561790	FR. JCT. BOX	HEAD & MULTI-FUNCTION LEVEL SW.
CB 38	9.1	3A	561797	FR. JCT. BOX	FR. MARKER LTS
CB 39	9.1	6A	561790	FR. JCT. BOX	CLEARANCE & IDENTIFICATION LTS
CB 40	9.1	3A	561797	FR. JCT. BOX	FR. CLEARANCE & IDENTIFICATION LTS
CB 41	9.1	3A	561797	RR. JCT. BOX	RR. CLEARANCE & IDENTIFICATION LTS
CB 42	9.1	8A	561791	RR. JCT. BOX	RR. TAIL & LICENCE LTS
CB 43	9.1	15A	561793	FR. JCT. BOX	HEADLAMP (HI)
CB 44	9.1	15A	561793	FR. JCT. BOX	HEADLAMP (LO)
CB 45	9.2	10A	561792	FR. JCT. BOX	WIPER CTRL MULTI-FUNCTION LEVEL SW.
CB 46	9.2	10A	561792	FR. JCT. BOX	FLASHER & HAZARD UNIT
CB 48	9.3	6A	561790	FR. JCT. BOX	STOP LTS PRESSURE SW.
CB 49	9.3	6A	561790	RR. JCT. BOX	STOP & CYCLOP LTS
CB 51	10	10A	561792	FR. JCT. BOX	UPPER WIPER CTRL SW.
CB 52	11.1	15A	561793	RR. JCT. BOX	LUGGAGE & DOOR AJAR LTS
CB 57	11.2	8A	561791	FR. JCT. BOX	DASH LTS RHEOSTAT
CB 58	13.1	6A	561790	FR. JCT. BOX	HVAC DASH MODULE
CB 63					
CB 64					
CB 70					
CB 71					
CB 72	13.2	10A	561792	RR. JCT. BOX	A/C COMPRESSOR CLUTCH
CB 73	13.2	15A	561793	RR. JCT. BOX	WATER PUMP
CB 77	13.1	40A	870093	RR. JCT. BOX	CONDENSER FAN MOTOR RH
CB 78	13.1	40A	870093	RR. JCT. BOX	CONDENSER FAN MOTOR LH
CB 79	13.2	25A	561795	FR. JCT. BOX	DRIVER'S HTR FAN SPEED CTRL MODULE
CB 85	16.1	10A	561792	FR. JCT. BOX	ENTRANCE DOOR (SEDAN) & STEP LTS
CB 93	1.2	30A	870690	RR. JCT. BOX	SOUND SYSTEM 12V FEEDING
CB 94	1.2	30A	870690	RR. JCT. BOX	SOUND SYSTEM 24V FEEDING
CB 95	20.1	10A	561792	S.S. JCT. PANEL	SOUND SYSTEM AMPLI
CB 96	20.1	10A	561792	S.S. JCT. PANEL	VIDEO SYSTEM
CB 97					
CB 98	20.1	15A	561793	S.S. JCT. PANEL	SOUND SYSTEM RADIO & CD
CB 99	20.7	15A	561793	S.S. JCT. PANEL	SEAT AUDIO SYSTEM
CB 105	21.1	6A	561790	FR. JCT. BOX	E.C.U. ABS
CB 106	21.1	15A	561793	FR. JCT. BOX	E.C.U. ABS
CB 124	8	6A	561790	RR. JCT. BOX	RADIATOR FAN CLUTCH
CB 126	25.1	150A	560299	RR. JCT. BOX	WHEEL CHAIR LIFT MOTOR PUMP STE.

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 126	25.2	50A	563355	RR. JCT. BOX	WHEEL CHAIR LIFT MOTOR PUMP RICON
CB 127	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN L.H.
CB 128	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN R.H.
CB 129	7.2	6A	561790	FR. JCT. BOX	CLUSTER
CB 130	28	6A	561790	FR. JCT. BOX	CLUSTER
CB 131					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
AA1	BEHIND DASH - SONALERT	BOSCH	5		561183
AA2	BEHIND DASH - SONALERT	BOSCH	5		561183
C X1	FR SERVICE COMPT- ECU ABS	AMP	15		563200
C X2	FR SERVICE COMPT- ECU ABS	AMP	18		563201
C RH	DDEC ENGINE- RELATIVE HUMIDITY SENS.	FCI	4		563277
C RXTX	HVAC DASN MODULE COMMUNICATION	MOLEX	3	563206	562873
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
		AMP CPC	9	561636	561637
C WX1	ENGINE CPT-WEBASTO PRE-HEAT WATER	AMP SEALED	7		563135
C WX3	ENGINE CPT-WEBASTO PRE-HEAT WATER	AMP SEALED	7	563136	
C Y	CLUSTER	JAE	30	---	562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 7					
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10	LUGGAGE COMPT. WATER BOOSTER PUMP	PED	2	562348	562471
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	A/C CLUTCH	PED WP	2	561566	561690
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	DEUTSCH	70	562282	562285
C 21	RR JCT BOX	DEUTSCH	24	562280	562283
C 22	RR JCT BOX - EATON TRANSM.	AMP MNL	6	561552	561515
C 23	DDEC ENGINE-ECM J1939	PED MP	6	-------	561962
C 24					
C 25	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690
C 28	EATON TRANSMISSION	DEUTCH	3	562877	562884
C 29	EATON TRANSMISSION	PED MP	6	562878	------
C 30	RR JCT BOX - ECU EATON TRANSM.	PED MP	32	------	562866
C 31	RR JCT BOX - ECU EATON TRANSM.	PED MP	24	------	562865
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33	RR JCT BOX - EATON TRANSM.	DEUTCH	9	562531	------
C 34	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	3	------	562871
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	24	------	562874
C 37	RR SECTION-LH HAT RACK	MOLEX	6	562558	562557
C 38	RR SECTION-RH HAT RACK	MOLEX	6	562558	562557
C 39	LH CONSOLE - EATON TRANSM. DISPLAY	AMP MNL	4	561551	561668
C 40	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 41	LAVATORY ROOF LIGHT	LEECRAFT	2	-----	562803
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662
C 44	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERVICE CMPT.PRESS SW PARKBREAK	DEUTCH	4	562479	562477
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577
C 51					
C 52	RR JCT BOX	AMP CPC	24	561642	561643
C 53	SPARE TIRE COMPT ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 54	SPARE TIRE COMPT ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56	HAT RACK- MOTOR FAN	MOLEX	6	562558	562557
C 57	HAT RACK- MOTOR FAN	MOLEX	6	562558	562557
C 58	RR JCT BOX AC PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX AC PANEL	AMP CPC	14	561584	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	16	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	SERV CPT. RXT. ENT. DOOR SW	DEUTSCH	4	562479	562477
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 78					
C 79					
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100	------	562248	------
C 86					
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88					
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS		35	------	641094
C 94	RH CONSOLE ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 95	CONDENSOR CPT - LIQ. SOL. VALVE	PED WP	2	561566	561690
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100	LH CONSOLE – 120 VOLTS SWITCH	EATON	8	------	562763
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	LAVATORY TRAP-FLUSH PUMP SW.	DEUTSCH	4	562479	562477
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107					
C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	LAVATORY BACK WALL-FLUSH PUMP SW.	DEUTSCH	4	562479	562477
C 113	RR MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115					
C 116	ENGINE COMPT. LTS	GROTE	2		563268
C 117	RR JCT BOX MARKER LT	GROTE	2	------	562155
C 117	FR SRV. COMPT. KNEELING UP SOL VALVE	PED WP	2	561761	
C 118	ENGINE COMPT-LAVATORY FAN	PED WP	2	561566	561690
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122					
C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129					
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX - A/C PANEL DIODE CONN.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 143					
C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150					
C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PNEUMAC	4	563204	
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157					
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	641132	------
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172					
C 173					
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080
C 185					
C 186					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					
C 189	ENGINE CPT RR DOOR B/U LT	TRUCK-LITE	2	------	562755
C 190	ENGINE CPT RR DOOR TAIL/ STOP LT	SUPER SEAL	3		562601
C 191	ENGINE CPT RR DOOR RH TAIL/STOP LT	SUPER SEAL	3		562601
C 192	ENGINE CPT RR DOOR DIR. LT	SUPER SEAL	3		562601
C 193					
C 194					
C 195					
C 198	ENGINE CPT RR DOOR LICENCE LT	PED WP	2	562348	562471
C 199					
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 202	RH HAT RACK-INDIRECT LIGHTING	MOLEX	2	---------	562758
C 203	RH HAT RACK-INDIRECT LIGHTING	MOLEX	6	---------	562759
C 204	RH HAT RACK-GENERAL LT	AMP MNL	2	560900	560898
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 206	RH HAT RACK-READING LT	AMP FF	4	----------	562756
C 207	LH HAT RACK-READING LT	AMP FF	4	----------	562756
C 208	LH HAT RACK-BALLAST	MOLEX	2	----------	562758
C 209	LH HAT RACK HOTESS CHIME	AMP MNL	3	561667	561550
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214	ENGINE CPT J1922				
C 215	TAG AXLE - A.T.C. SYSTEM				
C 216	TAG AXLE - A.T.C. SYSTEM				
C 217	RH DASH PANEL-FRONT CAMERA SW	EATON	8	--------	562763
C 218	RH DASH PANEL-FRONT CAMERA SW	AMP MNL	2	560900	560898
C 219	ENGINE CMPT. – FIRE DETECTOR	DEUTSCH	2	562486	562485
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 224	ENGINE CMPT. -VORAD J1939	DEUTSCH	3	562877	562884
C 225	ENGINE CMPT. -VORAD J1939	DEUTSCH	3	562877	562884
C 226	FR LH UPPER WHEEL CPT-VORAD J1939	DEUTSCH	3	562677	562884
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233	FR. SERVICE COMPT.	VDO	8		562043
C 234	FR. SERVICE COMPT.	VDO	8		562044
C 235	FR. SERVICE COMPT.	VDO	8		562041
C 236	LUGGAGE COMPARTEMENT	AMP MNL	4	560851	560852
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C 238	UNDER DASH LH-PASS. REC. DAMPER SW	EATON	8	------	562763
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	3	561781	562428
C 241	HEADLAMPS HI BEAM	HELLA	2		562623
C 242	HEADLAMPS LO BEAM	HELLA	2		562623
C 243	FR SERVICE CPT. HEADLAMPS	DEUTCH	3	565131	562789
C 244	FR SERVICE CPT-LH FOG LAMP	DEUTCH	2	562902	562901
C 245	FR SERVICE CPT-RH FOG LAMP	DEUTCH	2	562902	562901
C 246	FR SERVICE CPT. MIRROR	CONXALL	5	563091	563090
C 247	HEADLAMPS MARK & DIR LTS	AMP SUPER S	3		562601
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250	LH CONSOL PANEL- LOW BOY	PED	2	561566	561690
C 251	LH DASH PANEL-FAST IDLE SW	EATON	8	------	562763
C 252					
C 253	LH DASH PANEL-ETHER SW	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH DASH PANEL-JACOB & RETARDER SW	EATON	8	------	562763
C 256					
C 257					
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274	RR. JCT. BOX – SIGNAL ALT. MODULE	AMP MNL	12	561735	561734
C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 277					
C 278					
C 279 *	FR SERVICE CPT.- STEERING ZF	DEUTCH	2		562486
C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 280	LH CONSOLE-UNLOAD TAG SW.	NGR	10	------	562763
C 281					
C 282					
C 283					
C 284					
C 285					
C 286	RH SW PANEL-A/C & HEAT	EATON	8	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	8	------	562763
C 289					
C 290					
C 291					
C 292					
C 293					
C 294					
C 295					
C 296					
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299	RH DASH PANEL SW-GALLEY	EATON	8	------	562763
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH DASH PANEL -LUG. DOOR LCK SW	EATON	8	------	562763
C 311	RH DASH PANEL -HOS & PAS CHIME SW	EATON	8	------	562763
C 312	RH DASH PANEL -READING LTS SW	EATON	8	------	562763
C 313	RH DASH PANEL -GEN & FLUOR LTS SW	EATON	8	------	562763
C 314	LH DASH PANEL-FR DEST. SIGN SW	EATON	8	------	562763
C 315	LH DASH PANEL-LH STORE SW	EATON	8	------	562763
C 316	LH CONSOLE SPARE SWITCH	EATON	8	------	562763
C 317	LH DASH PANEL-RH STORE SW	EATON	8	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	8	------	562763
C 319					
C 320	RH DASH PANEL-DRIVER'S LTS SW	EATON	8	------	562763
C 321	READING LTS TEST				
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637
C 324					
C 325	LH DASH PANEL-KNEELING SW	EATON	8	------	562763
C 326	ENGINE CMPT.	PED	4	------	561610
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331	GALLEY MICROWAVE SW	EATON	8	------	562763
C 332					
C 333	GALLEY RH CONTAINER SW	EATON	8	------	562763
C 334	GALLEY LH CONTAINER SW	EATON	8	------	562763
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346					
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360					
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376					
C 377	LH DASH PANEL-STOP ENG.OVERIDE SW	EATON	8	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381					
C 382					
C 383					
C 384					
C 385	EVAPOTATOR COMP WATER PUMP	PED WP	2	561566	561690
C 386	LH DASH PANEL-WCL POWER SYSTEM SW	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734
C 389	WCL REAR DOOR	MOLEX	4	561477	561476
C 390	LAVATORY WALL-WCL REMOTE CTR	EATON	8	------	562763
C 391	LAVATORY WALL-WCL LAMP	EATON	8	------	562763
C 392	LAVATORY WALL-WCL SW. LT.	EATON	2	------	561835
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	------	------
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. – PRE-EXITATION ALT.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402					
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247
C 404	GALLEY LAMP	AMP MNL	2	561248	561247
C 405	LAST LUGGAGE COMP.- INVERTER SIGNAL	AMP MNL	2	561248	561247
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407					
C 408					
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH DASH PANEL-MASTER SWITCH SW	EATON	8	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414					
C 415	RR JCT BOX – ENGINE SIGNAL	DEUTSCH	24	562280	562283
C 416	ENGINE CRADLE-ENGINE SIGNAL	FCI	10	563207	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	LH DASH PANEL-HTR WINDSH.SW	EATON	8	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420					
C 421					
C 422					
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427	PRO-HEAT	PED-WP	2	561566	561680
C 428	PRO-HEAT	PED WP	6	561606	561607
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	PED-WP	2	561566	561680
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 438	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 439	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 440	EVAP CMPT- A/C CONTROL	DEUTSCH	4	562479	562477
C 441	FR JCT BOX- DIODES	AMP MNL	15	561987	561986
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 455	WIRELESS MICRO-LH HAT-RACK	MOLEX	6	------	562464
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDR CONNECTOR	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468			8		
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	DEUTSCH	2	562486	562485
C 476					
C 477					
C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 479	HVAC MODULE	MOLEX	3		562783
C 480	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	4	561889	561890
C 481	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	------	562237
C 484	UNDER DASH LH.-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH.-DASH & DEFR. DAM.MOT.	AMP MNL	3	561667	561550
C 486					
C 487	S.S.PANEL – AUDIO IN AMPLI	MOLEX	4	------	563071
C 488	S.S.PANEL – AMPLI SIGNAL	MOLEX	8	------	562465
C 489	S.S.PANEL – SPEAKER OUTLET	MOLEX	6	------	562464
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER	PED MP	7	562433	------
C 502	LH DASH PANEL-PRE HEATER SW.	EATON	8	------	562763
C 503	LH CONSOLE-PRE HEATER SW.	EATON	2	------	561837
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	9	------	562681
C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	562580
C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 522					
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 543					
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 546	WIRELESS MIC. CHARGING SYSTEM	MOLEX	2	--------	563025
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	8	------	562763
C 549	LH DASH PANEL-FAN CLUTCH OVERR. SW	EATON	8	------	562763
C 550	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 551	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 552	LAST LUGG. CPT. -WCL RICON	AMP CPC	9	561636	561637
C 553	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 554	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 555	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 556	UNDER DASH R.H. - RADIO ACC.	MOLEX	2	562550	562549
C 557	UNDER DASH R.H. - RADIO ACC.	MOLEX	9	562556	562555
C 558	UNDER DASH R.H. - RADIO ACC.	MOLEX	4	562507	562503
C 559	SOUND SYS. JCT. PANEL – FILTER AMPLI	PED WP	2	561566	561690
C 560	SOUND SYS. JCT. PANEL – POWER AMPLI	MOLEX	4	562507	562503
C 561	L.H. HAT RACK - WIRELESS MICRO	MOLEX	8		562465
C 562	L.H. HAT RACK - VCP	MOLEX	12	562556	563070
C 563	L.H MODESTY PANEL - DRIVERS SPK.	MOLEX	4	562507	562503
C 564	L.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 565	R.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 566	L.H. CONSOLE - BOOM MICRO	MOLEX	4	562507	562503
C 567	L.H. CONSOLE - DRIVERS MICRO	MOLEX	4	562507	562503
C 568	SOUND SYS. JCT. PANEL - PASS. SPK	CINCH	4	562553	562552
C 569	SOUND SYS. JCT. PANEL - POWER AMPLI.	MOLEX	9	562556	562555
C 570	UNDER DASH PANEL TTLT	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT	MOLEX	8		562465
C 574	HAT -RACK FLUOR. INDIRECT LIGHTING	MOLEX	6	----------	562759
C 575	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 576	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 577	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 578	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 579	L.H HAT RACK – VCP POWER	MOLEX	4		563071
C 580	RH DASH PANEL-HAT RACK FAN SW	EATON	8	--------	562763
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587	LH PARCEL RACK DVD UNIT	MOLEX	4	563040	563071
C 588	FRONT SERVICE CPT. CENTER SOUND SYS.	AMP. CPC	37	561645	561646

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593	BATTERY CMPT. - CHARGER	PED WP	3	561781	561782
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476
C 596	DASH CENTER MODULE - CLOSE DOOR	MOLEX	4	561477	561476
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601	L.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 602	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 603	R.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 604	LH PARCEL RACK DVD VIDEO STABILIZER	SWITCHCRAFT	1	563074	
C 605	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 606	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 607					
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
C 609	LAVATORY - NIGHT LIGHT				
C 610					
C 611	HAT RACK READING LTS RICON	MOLEX	6	562558	562557
C 612	HAT -RACK FLUOR. INSTATION LTS RICON	MOLEX	4	562507	562503
C 613	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 614	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 615	LH PARCEL RACK DVD SING ALONG ADAPT.	MOLEX	2	562550	562549
C 616					
C 701	ZF TRANSMISSION ECU	KOSTAL	20		
C 702	SHIFT SELECTOR – LH CONSOLE	AMP	14		563338
C 712	NEUTRAL SWITCH ON ZF TRANSM. (TOP)	AMP	4		563340
C 714	OUTPUT SENSOR ON ZF TRANSM. (BOTTOM)	AMP	4		563340
C 717	BATT. CPT - MAIN CONNECTOR	AMP CPC	22	561642	561643
C 720	ENGINE COMPT – BLKHD CONNECTOR	DEUTSCH	31	563359	563358
C 721	LH CONSOLE – ZF TESTMAN DIAGNOSTIC	AMP MNL	6	563356	
C 723	ENGINE COMPT – FOR TRANSM.	DEUTSCH	3		562884
C 736	ENGINE COMPT – ZMTEC MODULE	PACKARD	30	563053	
C 740	DRIVE AXLE – EASY START SOL VALVE	LEONI	2	--	641949
C 742	BATT. CPT – FUSE BLOCK	AMP	8	562446	
C 745	FR SERV.COMPT – THROTTLE POS. SENSOR	PED WP	3	561781	
C 760	FR SERV. COMPT – TO J1939	DEUTSCH	3		
C 761	FR SERV. COMPT – TO J1939	DEUTSCH	3		562884
C 762	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 763	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 764	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 765	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 766	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C X	CLUSTER	JAE	22		562766
C Y	CLUSTER	JAE	30		562767
L X	CLUSTER	JAE	22		562764
L					
R					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
AA1	BEHIND DASH - SONALERT	BOSCH	5		561183
AA2	BEHIND DASH - SONALERT	BOSCH	5		561183
C X1	FR SERVICE COMPT- ECU ABS	AMP	15		563200
C X2	FR SERVICE COMPT- ECU ABS	AMP	18		563201
C RH	DDEC ENGINE- RELATIVE HUMIDITY SENS.	FCI	4		563277
C RXTX	HVAC DASN MODULE COMMUNICATION	MOLEX	3	563206	562873
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
		AMP CPC	9	561636	561637
C WX1	ENGINE CPT-WEBASTO PRE-HEAT WATER	AMP SEALED	7		563135
C WX3	ENGINE CPT-WEBASTO PRE-HEAT WATER	AMP SEALED	7	563136	
C Y	CLUSTER	JAE	30	---	562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 7					
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10	LUGGAGE COMPT. WATER BOOSTER PUMP	PED	2	562348	562471
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	A/C CLUTCH	PED WP	2	561566	561690
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	DEUTSCH	70	562282	562285
C 21	RR JCT BOX	DEUTSCH	24	562280	562283
C 22	RR JCT BOX - EATON TRANSM.	AMP MNL	6	561552	561515
C 23	DDEC ENGINE-ECM J1939	PED MP	6	-------	561962
C 24	DDEC ENGINE-12Vi FOR OPTION	PED WP	1	-------	561577
C 25					
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690
C 28	EATON TRANSMISSION	DEUTCH	3	562877	562884
C 29	EATON TRANSMISSION	PED MP	6	562878	------
C 30	RR JCT BOX - ECU EATON TRANSM.	PED MP	32	------	562866
C 31	RR JCT BOX - ECU EATON TRANSM.	PED MP	24	------	562865
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33	RR JCT BOX - EATON TRANSM.	DEUTCH	9	562531	------
C 34	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	3	------	562871
C 35	RR JCT BOX	DEUTCH	40	562281	562284
C 36	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	24	------	562874
C 37	RR SECTION-LH HAT RACK	MOLEX	6	562558	562557
C 38	RR SECTION-RH HAT RACK	MOLEX	6	562558	562557
C 39	LH CONSOLE - EATON TRANSM. DISPLAY	AMP MNL	4	561551	561668
C 40	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 41	LAVATORY ROOF LIGHT	LEECRAFT	2	-----	562803
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662
C 44	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERVICE CMPT.PRESS SW PARKBREAK	DEUTCH	4	562479	562477
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577
C 51					
C 52	RR JCT BOX	AMP CPC	24	561642	561643
C 53	SPARE TIRE COMPT ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 54	SPARE TIRE COMPT ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56	HAT RACK- MOTOR FAN	MOLEX	6	562558	562557
C 57	HAT RACK- MOTOR FAN	MOLEX	6	562558	562557
C 58	RR JCT BOX AC PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX AC PANEL	AMP CPC	14	561584	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	16	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	SERV CPT. RXT. ENT. DOOR SW	DEUTSCH	4	562479	562477
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 78					
C 79					
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100	------	562248	------
C 86					
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88					
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS		35	------	641094
C 94	RH CONSOLE ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 95	CONDENSOR CPT - LIQ. SOL. VALVE	PED WP	2	561566	561690
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100	LH CONSOLE – 120 VOLTS SWITCH	EATON	8	------	562763
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	LAVATORY TRAP-FLUSH PUMP SW.	DEUTSCH	4	562479	562477
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107					
C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	LAVATORY BACK WALL-FLUSH PUMP SW.	DEUTSCH	4	562479	562477
C 113	RR MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115					
C 116	ENGINE COMPT. LTS	GROTE	2		563268
C 117	RR JCT BOX MARKER LT	GROTE	2	------	562155
C 117	FR SRV. COMPT. KNEELING UP SOL VALVE	PED WP	2	561761	
C 118	ENGINE COMPT-LAVATORY FAN	PED WP	2	561566	561690
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122					
C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129					
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX - A/C PANEL DIODE CONN.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 143					
C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150					
C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PNEUMAC	4	563204	
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157					
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	641132	------
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172					
C 173					
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080
C 185					
C 186					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					
C 189	ENGINE CPT RR DOOR B/U LT	TRUCK-LITE	2	------	562755
C 190	ENGINE CPT RR DOOR TAIL/ STOP LT	SUPER SEAL	3		562601
C 191	ENGINE CPT RR DOOR RH TAIL/STOP LT	SUPER SEAL	3		562601
C 192	ENGINE CPT RR DOOR DIR. LT	SUPER SEAL	3		562601
C 193					
C 194					
C 195					
C 198	ENGINE CPT RR DOOR LICENCE LT	PED WP	2	562348	562471
C 199					
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 202	RH HAT RACK-INDIRECT LIGHTING	MOLEX	2	---------	562758
C 203	RH HAT RACK-INDIRECT LIGHTING	MOLEX	6	---------	562759
C 204	RH HAT RACK-GENERAL LT	AMP MNL	2	560900	560898
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 206	RH HAT RACK-READING LT	AMP FF	4	----------	562756
C 207	LH HAT RACK-READING LT	AMP FF	4	----------	562756
C 208	LH HAT RACK-BALLAST	MOLEX	2	----------	562758
C 209	LH HAT RACK HOTESS CHIME	AMP MNL	3	561667	561550
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214	ENGINE CPT J1922				
C 215	TAG AXLE - A.T.C. SYSTEM				
C 216	TAG AXLE - A.T.C. SYSTEM				
C 217	RH DASH PANEL-FRONT CAMERA SW	EATON	8	--------	562763
C 218	RH DASH PANEL-FRONT CAMERA SW	AMP MNL	2	560900	560898
C 219	ENGINE CMPT. – FIRE DETECTOR	DEUTSCH	2	562486	562485
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 224	ENGINE CMPT. -VORAD J1939	DEUTSCH	3	562877	562884
C 225	ENGINE CMPT. -VORAD J1939	DEUTSCH	3	562877	562884
C 226	FR LH UPPER WHEEL CPT-VORAD J1939	DEUTSCH	3	562677	562884
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233	FR. SERVICE COMPT.	VDO	8		562043
C 234	FR. SERVICE COMPT.	VDO	8		562044
C 235	FR. SERVICE COMPT.	VDO	8		562041
C 236	LUGGAGE COMPARTEMENT	AMP MNL	4	560851	560852
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C 238	UNDER DASH LH-PASS. REC. DAMPER SW	EATON	8	------	562763
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	3	561781	562428
C 241	HEADLAMPS HI BEAM	HELLA	2		562623
C 242	HEADLAMPS LO BEAM	HELLA	2		562623
C 243	FR SERVICE CPT. HEADLAMPS	DEUTCH	3	565131	562789
C 244	FR SERVICE CPT-LH FOG LAMP	DEUTCH	2	562902	562901
C 245	FR SERVICE CPT-RH FOG LAMP	DEUTCH	2	562902	562901
C 246	FR SERVICE CPT. MIRROR	CONXALL	5	563091	563090
C 247	HEADLAMPS MARK & DIR LTS	AMP SUPER S	3		562601
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250	LH CONSOL PANEL- LOW BOY	PED	2	561566	561690
C 251	LH DASH PANEL-FAST IDLE SW	EATON	8	------	562763
C 252					
C 253	LH DASH PANEL-ETHER SW	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH DASH PANEL-JACOB & RETARDER SW	EATON	8	------	562763
C 256					
C 257					
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274	RR. JCT. BOX – SIGNAL ALT. MODULE	AMP MNL	12	561735	561734
C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 277					
C 278					
C 279 *	FR SERVICE CPT.- STEERING ZF	DEUTCH	2		562486
C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 280	LH CONSOLE-UNLOAD TAG SW.	NGR	10	------	562763
C 281					
C 282					
C 283					
C 284					
C 285					
C 286	RH SW PANEL-A/C & HEAT	EATON	8	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	8	------	562763
C 289					
C 290					
C 291					
C 292					
C 293					
C 294					
C 295					
C 296					
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299	RH DASH PANEL SW-GALLEY	EATON	8	------	562763
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH DASH PANEL -LUG. DOOR LCK SW	EATON	8	------	562763
C 311	RH DASH PANEL -HOS & PAS CHIME SW	EATON	8	------	562763
C 312	RH DASH PANEL -READING LTS SW	EATON	8	------	562763
C 313	RH DASH PANEL -GEN & FLUOR LTS SW	EATON	8	------	562763
C 314	LH DASH PANEL-FR DEST. SIGN SW	EATON	8	------	562763
C 315	LH DASH PANEL-LH STORE SW	EATON	8	------	562763
C 316	LH CONSOLE SPARE SWITCH	EATON	8	------	562763
C 317	LH DASH PANEL-RH STORE SW	EATON	8	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	8	------	562763
C 319					
C 320	RH DASH PANEL-DRIVER'S LTS SW	EATON	8	------	562763
C 321	READING LTS TEST				
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637
C 324					
C 325	LH DASH PANEL-KNEELING SW	EATON	8	------	562763
C 326	ENGINE CMPT.	PED	4	------	561610
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331	GALLEY MICROWAVE SW	EATON	8	------	562763
C 332					
C 333	GALLEY RH CONTAINER SW	EATON	8	------	562763
C 334	GALLEY LH CONTAINER SW	EATON	8	------	562763
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346					
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360					
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376					
C 377	LH DASH PANEL-STOP ENG.OVERIDE SW	EATON	8	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381					
C 382					
C 383					
C 384					
C 385	EVAPOTATOR COMP WATER PUMP	PED WP	2	561566	561690
C 386	LH DASH PANEL-WCL POWER SYSTEM SW	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734
C 389	WCL REAR DOOR	MOLEX	4	561477	561476
C 390	LAVATORY WALL-WCL REMOTE CTR	EATON	8	------	562763
C 391	LAVATORY WALL-WCL LAMP	EATON	8	------	562763
C 392	LAVATORY WALL-WCL SW. LT.	EATON	2	------	561835
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	------	------
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. – PRE-EXITATION ALT.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402					
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247
C 404	GALLEY LAMP	AMP MNL	2	561248	561247
C 405	LAST LUGGAGE COMP.- INVERTER SIGNAL	AMP MNL	2	561248	561247
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407					
C 408					
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH DASH PANEL-MASTER SWITCH SW	EATON	8	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414					
C 415	RR JCT BOX – ENGINE SIGNAL	DEUTSCH	24	562280	562283
C 416	ENGINE CRADLE-ENGINE SIGNAL	FCI	10	563207	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	LH DASH PANEL-HTR WINDSH.SW	EATON	8	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420					
C 421					
C 422					
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427	PRO-HEAT	PED-WP	2	561566	561680
C 428	PRO-HEAT	PED WP	6	561606	561607
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	PED-WP	2	561566	561680
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 438	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 439	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 440	EVAP CMPT- A/C CONTROL	DEUTSCH	4	562479	562477
C 441	FR JCT BOX- DIODES	AMP MNL	15	561987	561986
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 455	WIRELESS MICRO-LH HAT-RACK	MOLEX	6	------	562464
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDR CONNECTOR	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468			8		
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	DEUTSCH	2	562486	562485
C 476					
C 477					
C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 479	HVAC MODULE	MOLEX	3		562783
C 480	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	4	561889	561890
C 481	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	------	562237
C 484	UNDER DASH LH.-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH.-DASH & DEFR. DAM.MOT.	AMP MNL	3	561667	561550
C 486					
C 487	S.S.PANEL – AUDIO IN AMPLI	MOLEX	4	------	563071
C 488	S.S.PANEL – AMPLI SIGNAL	MOLEX	8	------	562465
C 489	S.S.PANEL – SPEAKER OUTLET	MOLEX	6	------	562464
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER	PED MP	7	562433	------
C 502	LH DASH PANEL-PRE HEATER SW.	EATON	8	------	562763
C 503	LH CONSOLE-PRE HEATER SW.	EATON	2	------	561837
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	9	------	562681
C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	562580
C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 522					
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 543					
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 546	WIRELESS MIC. CHARGING SYSTEM	MOLEX	2	--------	563025
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	8	------	562763
C 549	LH DASH PANEL-FAN CLUTCH OVERR. SW	EATON	8	------	562763
C 550	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 551	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 552	LAST LUGG. CPT. -WCL RICON	AMP CPC	9	561636	561637
C 553	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 554	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 555	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 556	UNDER DASH R.H. - RADIO ACC.	MOLEX	2	562550	562549
C 557	UNDER DASH R.H. - RADIO ACC.	MOLEX	9	562556	562555
C 558	UNDER DASH R.H. - RADIO ACC.	MOLEX	4	562507	562503
C 559	SOUND SYS. JCT. PANEL – FILTER AMPLI	PED WP	2	561566	561690
C 560	SOUND SYS. JCT. PANEL – POWER AMPLI	MOLEX	4	562507	562503
C 561	L.H. HAT RACK - WIRELESS MICRO	MOLEX	8		562465
C 562	L.H. HAT RACK - VCP	MOLEX	12	562556	563070
C 563	L.H MODESTY PANEL - DRIVERS SPK.	MOLEX	4	562507	562503
C 564	L.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 565	R.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 566	L.H. CONSOLE - BOOM MICRO	MOLEX	4	562507	562503
C 567	L.H. CONSOLE - DRIVERS MICRO	MOLEX	4	562507	562503
C 568	SOUND SYS. JCT. PANEL - PASS. SPK	CINCH	4	562553	562552
C 569	SOUND SYS. JCT. PANEL - POWER AMPLI.	MOLEX	9	562556	562555
C 570	UNDER DASH PANEL TTLT	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT	MOLEX	8		562465
C 574	HAT -RACK FLUOR. INDIRECT LIGHTING	MOLEX	6	----------	562759
C 575	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 576	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 577	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 578	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 579	L.H HAT RACK – VCP POWER	MOLEX	4		563071
C 580	RH DASH PANEL-HAT RACK FAN SW	EATON	8	--------	562763
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587	LH PARCEL RACK DVD UNIT	MOLEX	4	563040	563071
C 588	FRONT SERVICE CPT. CENTER SOUND SYS.	AMP. CPC	37	561645	561646

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593	BATTERY CMPT. - CHARGER	PED WP	3	561781	561782
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476
C 596	DASH CENTER MODULE - CLOSE DOOR	MOLEX	4	561477	561476
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601	L.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 602	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 603	R.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 604	LH PARCEL RACK DVD VIDEO STABILIZER	SWITCHCRAFT	1	563074	
C 605	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 606	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 607					
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
C 609	LAVATORY - NIGHT LIGHT				
C 610					
C 611	HAT RACK READING LTS RICON	MOLEX	6	562558	562557
C 612	HAT -RACK FLUOR. INSTATION LTS RICON	MOLEX	4	562507	562503
C 613	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 614	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 615	LH PARCEL RACK DVD SING ALONG ADAPT.	MOLEX	2	562550	562549
C 616					
C 701	ZF TRANSMISSION ECU	KOSTAL	20		
C 702	SHIFT SELECTOR – LH CONSOLE	AMP	14		563338
C 712	NEUTRAL SWITCH ON ZF TRANSM. (TOP)	AMP	4		563340
C 714	OUTPUT SENSOR ON ZF TRANSM. (BOTTOM)	AMP	4		563340
C 717	BATT. CPT - MAIN CONNECTOR	AMP CPC	22	561642	561643
C 720	ENGINE COMPT – BLKHD CONNECTOR	DEUTSCH	31	563359	563358
C 721	LH CONSOLE – ZF TESTMAN DIAGNOSTIC	AMP MNL	6	563356	
C 723	ENGINE COMPT – FOR TRANSM.	DEUTSCH	3		562884
C 736	ENGINE COMPT – ZMTEC MODULE	PACKARD	30	563053	
C 740	DRIVE AXLE – EASY START SOL VALVE	LEONI	2	--	641949
C 742	BATT. CPT – FUSE BLOCK	AMP	8	562446	
C 745	FR SERV.COMPT – THROTTLE POS. SENSOR	PED WP	3	561781	
C 760	FR SERV. COMPT – TO J1939	DEUTSCH	3		
C 761	FR SERV. COMPT – TO J1939	DEUTSCH	3		562884
C 762	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 763	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 764	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 765	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 766	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C X	CLUSTER	JAE	22		562766
C Y	CLUSTER	JAE	30		562767
L X	CLUSTER	JAE	22		562764
L					
R					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
AA1	BEHIND DASH - SONALERT	BOSCH	5		561183
AA2	BEHIND DASH - SONALERT	BOSCH	5		561183
C X1	FR SERVICE COMPT- ECU ABS	AMP	15		563200
C X2	FR SERVICE COMPT- ECU ABS	AMP	18		563201
C RH	DDEC ENGINE- RELATIVE HUMIDITY SENS.	FCI	4		563277
C RXTX	HVAC DASN MODULE COMMUNICATION	MOLEX	3	563206	562873
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
		AMP CPC	9	561636	561637
C WX1	ENGINE CPT-WEBASTO PRE-HEAT WATER	AMP SEALED	7		563135
C WX3	ENGINE CPT-WEBASTO PRE-HEAT WATER	AMP SEALED	7	563136	
C Y	CLUSTER	JAE	30	---	562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 7					
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10	LUGGAGE COMPT. WATER BOOSTER PUMP	PED	2	562348	562471
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	A/C CLUTCH	PED WP	2	561566	561690
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	DEUTSCH	70	562282	562285
C 21	RR JCT BOX	DEUTSCH	24	562280	562283
C 22	RR JCT BOX - EATON TRANSM.	AMP MNL	6	561552	561515
C 23	DDEC ENGINE-ECM J1939	PED MP	6	-------	561962
C 24	DDEC ENGINE-12Vi FOR OPTION	PED WP	1	-------	561577
C 25					
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690
C 28	EATON TRANSMISSION	DEUTCH	3	562877	562884
C 29	EATON TRANSMISSION	PED MP	6	562878	------
C 30	RR JCT BOX - ECU EATON TRANSM.	PED MP	32	------	562866
C 31	RR JCT BOX - ECU EATON TRANSM.	PED MP	24	------	562865
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33	RR JCT BOX - EATON TRANSM.	DEUTCH	9	562531	------
C 34	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	3	------	562871
C 35	RR JCT BOX	DEUTCH	40	562281	562284
C 36	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	24	------	562874
C 37	RR SECTION-LH HAT RACK	MOLEX	6	562558	562557
C 38	RR SECTION-RH HAT RACK	MOLEX	6	562558	562557
C 39	LH CONSOLE - EATON TRANSM. DISPLAY	AMP MNL	4	561551	561668
C 40	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 41	LAVATORY ROOF LIGHT	LEECRAFT	2	-----	562803
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662
C 44	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERVICE CMPT.PRESS SW PARKBREAK	DEUTCH	4	562479	562477
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577
C 51					
C 52	RR JCT BOX	AMP CPC	24	561642	561643
C 53	SPARE TIRE COMPT ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 54	SPARE TIRE COMPT ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56	HAT RACK- MOTOR FAN	MOLEX	6	562558	562557
C 57	HAT RACK- MOTOR FAN	MOLEX	6	562558	562557
C 58	RR JCT BOX AC PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX AC PANEL	AMP CPC	14	561584	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	16	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	SERV CPT. RXT. ENT. DOOR SW	DEUTSCH	4	562479	562477
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 78					
C 79					
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100	------	562248	------
C 86					
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88					
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS		35	------	641094
C 94	RH CONSOLE ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 95	CONDENSOR CPT - LIQ. SOL. VALVE	PED WP	2	561566	561690
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100	LH CONSOLE – 120 VOLTS SWITCH	EATON	8	------	562763
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	LAVATORY TRAP-FLUSH PUMP SW.	DEUTSCH	4	562479	562477
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107					
C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	LAVATORY BACK WALL-FLUSH PUMP SW.	DEUTSCH	4	562479	562477
C 113	RR MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115					
C 116	ENGINE COMPT. LTS	GROTE	2		563268
C 117	RR JCT BOX MARKER LT	GROTE	2	------	562155
C 117	FR SRV. COMPT. KNEELING UP SOL VALVE	PED WP	2	561761	
C 118	ENGINE COMPT-LAVATORY FAN	PED WP	2	561566	561690
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122					
C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129					
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX - A/C PANEL DIODE CONN.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 143					
C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150					
C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PNEUMAC	4	563204	
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157					
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	641132	------
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172					
C 173					
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080
C 185					
C 186					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					
C 189	ENGINE CPT RR DOOR B/U LT	TRUCK-LITE	2	------	562755
C 190	ENGINE CPT RR DOOR TAIL/ STOP LT	SUPER SEAL	3		562601
C 191	ENGINE CPT RR DOOR RH TAIL/STOP LT	SUPER SEAL	3		562601
C 192	ENGINE CPT RR DOOR DIR. LT	SUPER SEAL	3		562601
C 193					
C 194					
C 195					
C 198	ENGINE CPT RR DOOR LICENCE LT	PED WP	2	562348	562471
C 199					
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 202	RH HAT RACK-INDIRECT LIGHTING	MOLEX	2	---------	562758
C 203	RH HAT RACK-INDIRECT LIGHTING	MOLEX	6	---------	562759
C 204	RH HAT RACK-GENERAL LT	AMP MNL	2	560900	560898
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 206	RH HAT RACK-READING LT	AMP FF	4	----------	562756
C 207	LH HAT RACK-READING LT	AMP FF	4	----------	562756
C 208	LH HAT RACK-BALLAST	MOLEX	2	----------	562758
C 209	LH HAT RACK HOTESS CHIME	AMP MNL	3	561667	561550
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214	ENGINE CPT J1922				
C 215	TAG AXLE - A.T.C. SYSTEM				
C 216	TAG AXLE - A.T.C. SYSTEM				
C 217	RH DASH PANEL-FRONT CAMERA SW	EATON	8	--------	562763
C 218	RH DASH PANEL-FRONT CAMERA SW	AMP MNL	2	560900	560898
C 219	ENGINE CMPT. – FIRE DETECTOR	DEUTSCH	2	562486	562485
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 224	ENGINE CMPT. -VORAD J1939	DEUTSCH	3	562877	562884
C 225	ENGINE CMPT. -VORAD J1939	DEUTSCH	3	562877	562884
C 226	FR LH UPPER WHEEL CPT-VORAD J1939	DEUTSCH	3	562677	562884
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233	FR. SERVICE COMPT.	VDO	8		562043
C 234	FR. SERVICE COMPT.	VDO	8		562044
C 235	FR. SERVICE COMPT.	VDO	8		562041
C 236	LUGGAGE COMPARTEMENT	AMP MNL	4	560851	560852
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C 238	UNDER DASH LH-PASS. REC. DAMPER SW	EATON	8	------	562763
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	3	561781	562428
C 241	HEADLAMPS HI BEAM	HELLA	2		562623
C 242	HEADLAMPS LO BEAM	HELLA	2		562623
C 243	FR SERVICE CPT. HEADLAMPS	DEUTCH	3	565131	562789
C 244	FR SERVICE CPT-LH FOG LAMP	DEUTCH	2	562902	562901
C 245	FR SERVICE CPT-RH FOG LAMP	DEUTCH	2	562902	562901
C 246	FR SERVICE CPT. MIRROR	CONXALL	5	563091	563090
C 247	HEADLAMPS MARK & DIR LTS	AMP SUPER S	3		562601
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250	LH CONSOL PANEL- LOW BOY	PED	2	561566	561690
C 251	LH DASH PANEL-FAST IDLE SW	EATON	8	------	562763
C 252					
C 253	LH DASH PANEL-ETHER SW	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH DASH PANEL-JACOB & RETARDER SW	EATON	8	------	562763
C 256					
C 257					
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274	RR. JCT. BOX – SIGNAL ALT. MODULE	AMP MNL	12	561735	561734
C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 277					
C 278					
C 279 *	FR SERVICE CPT.- STEERING ZF	DEUTCH	2		562486
C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 280	LH CONSOLE-UNLOAD TAG SW.	NGR	10	------	562763
C 281					
C 282					
C 283					
C 284	LH DR'S ROOF - MONITOR FEED	PED WP	3	561781	561782
C 285	LH DR'S ROOF – SOUND SYSTEM	AMP CPC	24	561642	561643
C 286	RH SW PANEL-A/C & HEAT	EATON	8	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	8	------	562763
C 289					
C 290					
C 291					
C 292	LH PARCEL RACK VIDEO PANEL– MONITOR	MOLEX	4	563040	563071
C 293	LH PARCEL RACK VIDEO PAN. – RCA RELAY	AMP MNL	2	561248	561247
C 294	LH PARCEL RACK VIDEO PAN.– RCA RELAY	AMP MNL	2	561248	561247
C 295	LH PARCEL RACK VID. PANEL– AMPLI VIDEO	MOLEX	4	563040	563071
C 296	LH PARCEL RACK VIDEO PAN. – MICRO SIGNAL	MOLEX	4	562507	562503
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299	RH DASH PANEL SW-GALLEY	EATON	8	------	562763
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH DASH PANEL -LUG. DOOR LCK SW	EATON	8	------	562763
C 311	RH DASH PANEL -HOS & PAS CHIME SW	EATON	8	------	562763
C 312	RH DASH PANEL -READING LTS SW	EATON	8	------	562763
C 313	RH DASH PANEL -GEN & FLUOR LTS SW	EATON	8	------	562763
C 314	LH DASH PANEL-FR DEST. SIGN SW	EATON	8	------	562763
C 315	LH DASH PANEL-LH STORE SW	EATON	8	------	562763
C 316	LH CONSOLE SPARE SWITCH	EATON	8	------	562763
C 317	LH DASH PANEL-RH STORE SW	EATON	8	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	8	------	562763
C 319					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 320	RH DASH PANEL-DRIVER'S LTS SW	EATON	8	------	562763
C 321	READING LTS TEST				
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637
C 324					
C 325	LH DASH PANEL-KNEELING SW	EATON	8	------	562763
C 326	ENGINE CMPT.	PED	4	------	561610
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331	GALLEY MICROWAVE SW	EATON	8	------	562763
C 332					
C 333	GALLEY RH CONTAINER SW	EATON	8	------	562763
C 334	GALLEY LH CONTAINER SW	EATON	8	------	562763
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346					
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360					
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376					
C 377	LH DASH PANEL-STOP ENG.OVERIDE SW	EATON	8	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381					
C 382					
C 383					
C 384					
C 385	EVAPOTATOR COMP WATER PUMP	PED WP	2	561566	561690
C 386	LH DASH PANEL-WCL POWER SYSTEM SW	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734
C 389	WCL REAR DOOR	MOLEX	4	561477	561476
C 390	LAVATORY WALL-WCL REMOTE CTR	EATON	8	------	562763
C 391	LAVATORY WALL-WCL LAMP	EATON	8	------	562763
C 392	LAVATORY WALL-WCL SW. LT.	EATON	2	------	561835
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	------	------
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. – PRE-EXITATION ALT.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402					
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247
C 404	GALLEY LAMP	AMP MNL	2	561248	561247
C 405	LAST LUGGAGE COMP.- INVERTER SIGNAL	AMP MNL	2	561248	561247
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407					
C 408					
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH DASH PANEL-MASTER SWITCH SW	EATON	8	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414					
C 415	RR JCT BOX – ENGINE SIGNAL	DEUTSCH	24	562280	562283
C 416	ENGINE CRADLE-ENGINE SIGNAL	FCI	10	563207	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	LH DASH PANEL-HTR WINDSH.SW	EATON	8	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420					
C 421					
C 422					
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427	PRO-HEAT	PED-WP	2	561566	561680
C 428	PRO-HEAT	PED WP	6	561606	561607
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	PED-WP	2	561566	561680
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 438	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 439	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 440	EVAP CMPT- A/C CONTROL	DEUTSCH	4	562479	562477
C 441	FR JCT BOX- DIODES	AMP MNL	15	561987	561986
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 455	WIRELESS MICRO-LH HAT-RACK	MOLEX	6	------	562464
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDR CONNECTOR	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468			8		
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	DEUTSCH	2	562486	562485
C 476					
C 477					
C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 479	HVAC MODULE	MOLEX	3		562783
C 480	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	4	561889	561890
C 481	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	------	562237
C 484	UNDER DASH LH.-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH.-DASH & DEFR. DAM.MOT.	AMP MNL	3	561667	561550
C 486					
C 487	S.S.PANEL – AUDIO IN AMPLI	MOLEX	4	------	563071
C 488	S.S.PANEL – AMPLI SIGNAL	MOLEX	8	------	562465
C 489	S.S.PANEL – SPEAKER OUTLET	MOLEX	6	------	562464
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER	PED MP	7	562433	------
C 502	LH DASH PANEL-PRE HEATER SW.	EATON	8	------	562763
C 503	LH CONSOLE-PRE HEATER SW.	EATON	2	------	561837
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	9	------	562681
C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	562580
C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 522					
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562610	---
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562610	---
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 543					
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 546	WIRELESS MIC. CHARGING SYSTEM	MOLEX	2	--------	563025
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	8	------	562763
C 549	LH DASH PANEL-FAN CLUTCH OVERR. SW	EATON	8	------	562763
C 550	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 551	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 552	LAST LUGG. CPT. -WCL RICON	AMP CPC	9	561636	561637
C 553	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 554	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 555	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 556	UNDER DASH R.H. - RADIO ACC.	MOLEX	2	562550	562549
C 557	UNDER DASH R.H. - RADIO ACC.	MOLEX	9	562556	562555
C 558	UNDER DASH R.H. - RADIO ACC.	MOLEX	4	562507	562503
C 559	SOUND SYS. JCT. PANEL – FILTER AMPLI	PED WP	2	561566	561690
C 560	SOUND SYS. JCT. PANEL – POWER AMPLI	MOLEX	4	562507	562503
C 561	L.H. HAT RACK - WIRELESS MICRO	MOLEX	8		562465
C 562	L.H. HAT RACK - VCP	MOLEX	12	562556	563070
C 563	L.H MODESTY PANEL - DRIVERS SPK.	MOLEX	4	562507	562503
C 564	L.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 565	R.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 566	L.H. CONSOLE - BOOM MICRO	MOLEX	4	562507	562503
C 567	L.H. CONSOLE - DRIVERS MICRO	MOLEX	4	562507	562503
C 568	SOUND SYS. JCT. PANEL - PASS. SPK	CINCH	4	562553	562552
C 569	SOUND SYS. JCT. PANEL - POWER AMPLI.	MOLEX	9	562556	562555
C 570	UNDER DASH PANEL TTLT	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT	MOLEX	8		562465
C 574	HAT -RACK FLUOR. INDIRECT LIGHTING	MOLEX	6	----------	562759
C 575	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 576	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 577	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 578	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 579	L.H HAT RACK – VCP POWER	MOLEX	4		563071
C 580	RH DASH PANEL-HAT RACK FAN SW	EATON	8	--------	562763
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587	LH PARCEL RACK DVD UNIT	MOLEX	4	563040	563071
C 588	FRONT SERVICE CPT. CENTER SOUND SYS.	AMP. CPC	37	561645	561646

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593	BATTERY CMPT. - CHARGER	PED WP	3	561781	561782
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476
C 596	DASH CENTER MODULE - CLOSE DOOR	MOLEX	4	561477	561476
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601	L.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 602	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 603	R.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 604	LH PARCEL RACK DVD VIDEO STABILIZER	SWITCHCRAFT	1	563074	
C 605	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 606	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 607					
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
C 609	LAVATORY - NIGHT LIGHT				
C 610					
C 611	HAT RACK READING LTS RICON	MOLEX	6	562558	562557
C 612	HAT -RACK FLUOR. INSTATION LTS RICON	MOLEX	4	562507	562503
C 613	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 614	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 615	LH PARCEL RACK DVD SING ALONG ADAPT.	MOLEX	2	562550	562549
C 616					
C 701	ZF TRANSMISSION ECU	KOSTAL	20		
C 702	SHIFT SELECTOR – LH CONSOLE	AMP	14		563338
C 712	NEUTRAL SWITCH ON ZF TRANSM. (TOP)	AMP	4		563340
C 714	OUTPUT SENSOR ON ZF TRANSM. (BOTTOM)	AMP	4		563340
C 717	BATT. CPT - MAIN CONNECTOR	AMP CPC	22	561642	561643
C 720	ENGINE COMPT – BLKHD CONNECTOR	DEUTSCH	31	563359	563358
C 721	LH CONSOLE – ZF TESTMAN DIAGNOSTIC	AMP MNL	6	563356	
C 723	ENGINE COMPT – FOR TRANSM.	DEUTSCH	3		562884
C 736	ENGINE COMPT – ZMTEC MODULE	PACKARD	30	563053	
C 740	DRIVE AXLE – EASY START SOL VALVE	LEONI	2	--	641949
C 742	BATT. CPT – FUSE BLOCK	AMP	8	562446	
C 745	FR SERV.COMPT – THROTTLE POS. SENSOR	PED WP	3	561781	
C 760	FR SERV. COMPT – TO J1939	DEUTSCH	3		
C 761	FR SERV. COMPT – TO J1939	DEUTSCH	3		562884
C 762	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 763	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 764	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 765	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 766	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C X	CLUSTER	JAE	22		562766
C Y	CLUSTER	JAE	30		562767
L X	CLUSTER	JAE	22		562764
L					
R					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
AA1	BEHIND DASH - SONALERT	BOSCH	5		561183
AA2	BEHIND DASH - SONALERT	BOSCH	5		561183
C X1	FR SERVICE COMPT- ECU ABS	AMP	15		563200
C X2	FR SERVICE COMPT- ECU ABS	AMP	18		563201
C RH	DDEC ENGINE- RELATIVE HUMIDITY SENS.	FCI	4		563277
C RXTX	HVAC DASN MODULE COMMUNICATION	MOLEX	3	563206	562873
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
		AMP CPC	9	561636	561637
C WX1	ENGINE CPT-WEBASTO PRE-HEAT WATER	AMP SEALED	7		563135
C WX3	ENGINE CPT-WEBASTO PRE-HEAT WATER	AMP SEALED	7	563136	
C Y	CLUSTER	JAE	30	---	562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 7					
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10	LUGGAGE COMPT. WATER BOOSTER PUMP	PED	2	562348	562471
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	A/C CLUTCH	PED WP	2	561566	561690
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	DEUTSCH	70	562282	562285
C 21	RR JCT BOX	DEUTSCH	24	562280	562283
C 22	RR JCT BOX - EATON TRANSM.	AMP MNL	6	561552	561515
C 23	DDEC ENGINE-ECM J1939	PED MP	6	-------	561962
C 24	DDEC ENGINE-12Vi FOR OPTION	PED WP	1	-------	561577
C 25					
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690
C 28	EATON TRANSMISSION	DEUTCH	3	562877	562884
C 29	EATON TRANSMISSION	PED MP	6	562878	------
C 30	RR JCT BOX - ECU EATON TRANSM.	PED MP	32	------	562866
C 31	RR JCT BOX - ECU EATON TRANSM.	PED MP	24	------	562865
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33	RR JCT BOX - EATON TRANSM.	DEUTCH	9	562531	------
C 34	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	3	------	562871
C 35	RR JCT BOX	DEUTCH	40	562281	562284
C 36	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	24	------	562874
C 37	RR SECTION-LH HAT RACK	MOLEX	6	562558	562557
C 38	RR SECTION-RH HAT RACK	MOLEX	6	562558	562557
C 39	LH CONSOLE - EATON TRANSM. DISPLAY	AMP MNL	4	561551	561668
C 40	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 41	LAVATORY ROOF LIGHT	LEECRAFT	2	-----	562803
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662
C 44	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERVICE CMPT.PRESS SW PARKBREAK	DEUTCH	4	562479	562477
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577
C 51					
C 52	RR JCT BOX	AMP CPC	24	561642	561643
C 53	SPARE TIRE COMPT ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 54	SPARE TIRE COMPT ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56	HAT RACK- MOTOR FAN	MOLEX	6	562558	562557
C 57	HAT RACK- MOTOR FAN	MOLEX	6	562558	562557
C 58	RR JCT BOX AC PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX AC PANEL	AMP CPC	14	561584	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	16	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	SERV CPT. RXT. ENT. DOOR SW	DEUTSCH	4	562479	562477
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 78					
C 79					
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100	------	562248	------
C 86					
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88					
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS		35	------	641094
C 94	RH CONSOLE ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 95	CONDENSOR CPT - LIQ. SOL. VALVE	PED WP	2	561566	561690
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100	LH CONSOLE – 120 VOLTS SWITCH	EATON	8	------	562763
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	LAVATORY TRAP-FLUSH PUMP SW.	DEUTSCH	4	562479	562477
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107					
C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	LAVATORY BACK WALL-FLUSH PUMP SW.	DEUTSCH	4	562479	562477
C 113	RR MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115					
C 116	ENGINE COMPT. LTS	GROTE	2		563268
C 117	RR JCT BOX MARKER LT	GROTE	2	------	562155
C 117	FR SRV. COMPT. KNEELING UP SOL VALVE	PED WP	2	561761	
C 118	ENGINE COMPT-LAVATORY FAN	PED WP	2	561566	561690
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122					
C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129					
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX - A/C PANEL DIODE CONN.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 143					
C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150					
C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PNEUMAC	4	563204	
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157					
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	641132	------
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172					
C 173					
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080
C 185					
C 186					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					
C 189	ENGINE CPT RR DOOR B/U LT	TRUCK-LITE	2	------	562755
C 190	ENGINE CPT RR DOOR TAIL/ STOP LT	SUPER SEAL	3		562601
C 191	ENGINE CPT RR DOOR RH TAIL/STOP LT	SUPER SEAL	3		562601
C 192	ENGINE CPT RR DOOR DIR. LT	SUPER SEAL	3		562601
C 193					
C 194					
C 195					
C 198	ENGINE CPT RR DOOR LICENCE LT	PED WP	2	562348	562471
C 199					
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 202	RH HAT RACK-INDIRECT LIGHTING	MOLEX	2	---------	562758
C 203	RH HAT RACK-INDIRECT LIGHTING	MOLEX	6	---------	562759
C 204	RH HAT RACK-GENERAL LT	AMP MNL	2	560900	560898
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 206	RH HAT RACK-READING LT	AMP FF	4	----------	562756
C 207	LH HAT RACK-READING LT	AMP FF	4	----------	562756
C 208	LH HAT RACK-BALLAST	MOLEX	2	----------	562758
C 209	LH HAT RACK HOTESS CHIME	AMP MNL	3	561667	561550
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214	ENGINE CPT J1922				
C 215	TAG AXLE - A.T.C. SYSTEM				
C 216	TAG AXLE - A.T.C. SYSTEM				
C 217	RH DASH PANEL-FRONT CAMERA SW	EATON	8	--------	562763
C 218	RH DASH PANEL-FRONT CAMERA SW	AMP MNL	2	560900	560898
C 219	ENGINE CMPT. – FIRE DETECTOR	DEUTSCH	2	562486	562485
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 224	ENGINE CMPT. -VORAD J1939	DEUTSCH	3	562877	562884
C 225	ENGINE CMPT. -VORAD J1939	DEUTSCH	3	562877	562884
C 226	FR LH UPPER WHEEL CPT-VORAD J1939	DEUTSCH	3	562677	562884
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233	FR. SERVICE COMPT.	VDO	8		562043
C 234	FR. SERVICE COMPT.	VDO	8		562044
C 235	FR. SERVICE COMPT.	VDO	8		562041
C 236	LUGGAGE COMPARTEMENT	AMP MNL	4	560851	560852
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C 238	UNDER DASH LH-PASS. REC. DAMPER SW	EATON	8	------	562763
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	3	561781	562428
C 241	HEADLAMPS HI BEAM	HELLA	2		562623
C 242	HALOGEN HEAHLAMPS LO BEAM	HELLA	2		562623
C 242	XENON HEADLAMPS LO BEAM	DELPHI	2		563366
C 243	FRONT CAP- HEADLIGHTS MAIN CONN	DEUTCH	6	565131	562789
C 244	FR SERVICE CPT-LH FOG LAMP	DEUTCH	2	562902	562901
C 245	FR SERVICE CPT-RH FOG LAMP	DEUTCH	2	562902	562901
C 246	UNDER DASH - L.H. MIRROR	CONNXALL	5	563196	563090
C 247	HEADLAMPS MARK & DIR LTS	AMP SUPER S	3		562601
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250	LH CONSOL PANEL- LOW BOY	PED	2	561566	561690
C 251	LH DASH PANEL-FAST IDLE SW	EATON	8	------	562763
C 252					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 253	LH DASH PANEL-ETHER SW	EATON	8	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH DASH PANEL-JACOB & RETARDER SW	EATON	8	------	562763
C 256					
C 257					
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268					
C 269	UNDER DASH - R.H. MIRROR	CONNXALL	5	563196	563090
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274	RR. JCT. BOX – SIGNAL ALT. MODULE	AMP MNL	12	561735	561734
C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 277					
C 278					
C 279 *	FR SERVICE CPT.- STEERING ZF	DEUTCH	2		562486
C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 280	LH CONSOLE-UNLOAD TAG SW.	NGR	10	------	562763
C 281					
C 282					
C 283					
C 284	LH DR'S ROOF - MONITOR FEED	PED WP	3	561781	561782
C 285	LH DR'S ROOF – SOUND SYSTEM	AMP CPC	24	561642	561643
C 286	RH SW PANEL-A/C & HEAT	EATON	8	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	8	------	562763
C 289					
C 290					
C 291					
C 292	LH PARCEL RACK VIDEO PANEL– MONITOR	MOLEX	4	563040	563071
C 293	LH PARCEL RACK VIDEO PAN. – RCA RELAY	AMP MNL	2	561248	561247
C 294	LH PARCEL RACK VIDEO PAN.– RCA RELAY	AMP MNL	2	561248	561247
C 295	LH PARCEL RACK VID. PANEL– AMPLI VIDEO	MOLEX	4	563040	563071
C 296	LH PARCEL RACK VIDEO PAN. – MICRO SIGNAL	MOLEX	4	562507	562503
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299	RH DASH PANEL SW-GALLEY	EATON	8	------	562763
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH DASH PANEL -LUG. DOOR LCK SW	EATON	8	------	562763
C 311	RH DASH PANEL -HOS & PAS CHIME SW	EATON	8	------	562763
C 312	RH DASH PANEL -READING LTS SW	EATON	8	------	562763
C 313	RH DASH PANEL -GEN & FLUOR LTS SW	EATON	8	------	562763
C 314	LH DASH PANEL-FR DEST. SIGN SW	EATON	8	------	562763
C 315	LH DASH PANEL-LH STORE SW	EATON	8	------	562763
C 316	LH CONSOLE SPARE SWITCH	EATON	8	------	562763
C 317	LH DASH PANEL-RH STORE SW	EATON	8	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	8	------	562763

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 319					
C 320	RH DASH PANEL-DRIVER'S LTS SW	EATON	8	------	562763
C 321	READING LTS TEST				
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637
C 324					
C 325	LH DASH PANEL-KNEELING SW	EATON	8	------	562763
C 326	ENGINE CMPT.	PED	4	------	561610
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331	GALLEY MICROWAVE SW	EATON	8	------	562763
C 332					
C 333	GALLEY RH CONTAINER SW	EATON	8	------	562763
C 334	GALLEY LH CONTAINER SW	EATON	8	------	562763
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346					
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360					
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376					
C 377	LH DASH PANEL-STOP ENG.OVERIDE SW	EATON	8	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381					
C 382					
C 383					
C 384					
C 385	EVAPOTATOR COMP WATER PUMP	PED WP	2	561566	561690

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 386	LH DASH PANEL-WCL POWER SYSTEM SW	EATON	8	------	562763
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734
C 389	WCL REAR DOOR	MOLEX	4	561477	561476
C 390	LAVATORY WALL-WCL REMOTE CTR	EATON	8	------	562763
C 391	LAVATORY WALL-WCL LAMP	EATON	8	------	562763
C 392	LAVATORY WALL-WCL SW. LT.	EATON	2	------	561835
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	------	------
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. – PRE-EXITATION ALT.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402					
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247
C 404	GALLEY LAMP	AMP MNL	2	561248	561247
C 405	LAST LUGGAGE COMP.- INVERTER SIGNAL	AMP MNL	2	561248	561247
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407					
C 408					
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH DASH PANEL-MASTER SWITCH SW	EATON	8	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414					
C 415	RR JCT BOX – ENGINE SIGNAL	DEUTSCH	24	562280	562283
C 416	ENGINE CRADLE-ENGINE SIGNAL	FCI	10	563207	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	LH DASH PANEL-HTR WINDSH.SW	EATON	8	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420					
C 421					
C 422					
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427	PRO-HEAT	PED-WP	2	561566	561680
C 428	PRO-HEAT	PED WP	6	561606	561607
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	PED-WP	2	561566	561680
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 438	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 439	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 440	EVAP CMPT- A/C CONTROL	DEUTSCH	4	562479	562477
C 441	FR JCT BOX- DIODES	AMP MNL	15	561987	561986
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680
C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 455	WIRELESS MICRO-LH HAT-RACK	MOLEX	6	------	562464
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDR CONNECTOR	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468			8		
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	DEUTSCH	2	562486	562485
C 476					
C 477					
C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 479	HVAC MODULE	MOLEX	3		562783
C 480	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	4	561889	561890
C 481	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	------	562237
C 484	UNDER DASH LH.-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH.-DASH & DEFR. DAM.MOT.	AMP MNL	3	561667	561550
C 486					
C 487	S.S.PANEL – AUDIO IN AMPLI	MOLEX	4	------	563071
C 488	S.S.PANEL – AMPLI SIGNAL	MOLEX	8	------	562465
C 489	S.S.PANEL – SPEAKER OUTLET	MOLEX	6	------	562464
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER	PED MP	7	562433	------
C 502	LH DASH PANEL-PRE HEATER SW.	EATON	8	------	562763
C 503	LH CONSOLE-PRE HEATER SW.	EATON	2	------	561837
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	9	------	562681
C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	562580
C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 522					
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562610	---
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562610	---
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 543					
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 546	WIRELESS MIC. CHARGING SYSTEM	MOLEX	2	--------	563025
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	8	------	562763
C 549	LH DASH PANEL-FAN CLUTCH OVERR. SW	EATON	8	------	562763
C 550	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 551	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 552	LAST LUGG. CPT. -WCL RICON	AMP CPC	9	561636	561637
C 553	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 554	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 555	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 556	UNDER DASH R.H. - RADIO ACC.	MOLEX	2	562550	562549
C 557	UNDER DASH R.H. - RADIO ACC.	MOLEX	9	562556	562555
C 558	UNDER DASH R.H. - RADIO ACC.	MOLEX	4	562507	562503
C 559	SOUND SYS. JCT. PANEL – FILTER AMPLI	PED WP	2	561566	561690
C 560	SOUND SYS. JCT. PANEL – POWER AMPLI	MOLEX	4	562507	562503
C 561	L.H. HAT RACK - WIRELESS MICRO	MOLEX	8		562465
C 562	L.H. HAT RACK - VCP	MOLEX	12	562556	563070
C 563	L.H MODESTY PANEL - DRIVERS SPK.	MOLEX	4	562507	562503
C 564	L.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 565	R.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 566	L.H. CONSOLE - BOOM MICRO	MOLEX	4	562507	562503
C 567	L.H. CONSOLE - DRIVERS MICRO	MOLEX	4	562507	562503
C 568	SOUND SYS. JCT. PANEL - PASS. SPK	CINCH	4	562553	562552
C 569	SOUND SYS. JCT. PANEL - POWER AMPLI.	MOLEX	9	562556	562555
C 570	UNDER DASH PANEL TTLT	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT	MOLEX	8		562465
C 574	HAT -RACK FLUOR. INDIRECT LIGHTING	MOLEX	6	----------	562759
C 575	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 576	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 577	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 578	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 579	L.H HAT RACK – VCP POWER	MOLEX	4		563071
C 580	RH DASH PANEL-HAT RACK FAN SW	EATON	8	--------	562763
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587	LH PARCEL RACK DVD UNIT	MOLEX	4	563040	563071

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 588	FRONT SERVICE CPT. CENTER SOUND SYS.	CONNXALL	9	563163	563089
C 589	UNDER DASH - L.H. MIRROR	CONNXALL	9	563163	563089
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593	BATTERY CMPT. - CHARGER	PED WP	3	561781	561782
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476
C 596	DASH CENTER MODULE - CLOSE DOOR	MOLEX	4	561477	561476
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 599	UND.DASH-MAGN.SW.CTR POS. DR'S AIR	AMP MNL	2	561248	561247
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601	L.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 602	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 603	R.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 604	LH PARCEL RACK DVD VIDEO STABILIZER	SWITCHCRAFT	1	563074	
C 605	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 606	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 607					
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
C 609	LAVATORY - NIGHT LIGHT				
C 610					
C 611	HAT RACK READING LTS RICON	MOLEX	6	562558	562557
C 612	HAT -RACK FLUOR. INSTATION LTS RICON	MOLEX	4	562507	562503
C 613	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 614	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 615	LH PARCEL RACK DVD SING ALONG ADAPT.	MOLEX	2	562550	562549
C 616					
C 701	ZF TRANSMISSION ECU	KOSTAL	20		
C 702	SHIFT SELECTOR – LH CONSOLE	AMP	14		563338
C 712	NEUTRAL SWITCH ON ZF TRANSM. (TOP)	AMP	4		563340
C 714	OUTPUT SENSOR ON ZF TRANSM. (BOTTOM)	AMP	4		563340
C 717	BATT. CPT - MAIN CONNECTOR	AMP CPC	22	561642	561643
C 720	ENGINE COMPT – BLKHD CONNECTOR	DEUTSCH	31	563359	563358
C 721	LH CONSOLE – ZF TESTMAN DIAGNOSTIC	AMP MNL	6	563356	
C 723	ENGINE COMPT – FOR TRANSM.	DEUTSCH	3		562884
C 736	ENGINE COMPT – ZMTEC MODULE	PACKARD	30	563053	
C 740	DRIVE AXLE – EASY START SOL VALVE	LEONI	2	--	641949
C 742	BATT. CPT – FUSE BLOCK	AMP	8	562446	
C 745	FR SERV.COMPT – THROTTLE POS. SENSOR	PED WP	3	561781	
C 760	FR SERV. COMPT – TO J1939	DEUTSCH	3		
C 761	FR SERV. COMPT – TO J1939	DEUTSCH	3		562884
C 762	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 763	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 764	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 765	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 766	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C X	CLUSTER	JAE	22		562766
C Y	CLUSTER	JAE	30		562767
L X	CLUSTER	JAE	22		562764
L					
R					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
AA1	BEHIND DASH - SONALERT	BOSCH	5		561183
AA2	BEHIND DASH - SONALERT	BOSCH	5		561183
C X1	FR SERVICE COMPT- ECU ABS	AMP	15		563200
C X2	FR SERVICE COMPT- ECU ABS	AMP	18		563201
C RXTX	HVAC DASN MODULE COMMUNICATION	MOLEX	3	563206	562873
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C TCI	ENGINE CPT – DDEC V TURBO TEMP.	FCI	2		563404
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
C WX1	ENGINE CPT-WEBASTO PRE-HEAT WATER	AMP SEALED	7		563135
C WX3	ENGINE CPT-WEBASTO PRE-HEAT WATER	AMP SEALED	7	563134	
C Y	CLUSTER	JAE	30	---	562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 7					
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10	LUGGAGE COMPT. WATER BOOSTER PUMP	PED	2	562348	562471
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	A/C CLUTCH	PED WP	2	561566	561690
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	DEUTSCH	70	562282	562285
C 21	RR JCT BOX	DEUTSCH	24	562280	562283
C 22	RR JCT BOX - EATON TRANSM.	AMP MNL	6	561552	561515
C 23					
C 24					
C 25					
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690
C 28	EATON TRANSMISSION	DEUTCH	3	562877	562884
C 29	EATON TRANSMISSION	PED MP	6	562878	------
C 30	RR JCT BOX - ECU EATON TRANSM.	PED MP	32	------	562866
C 31	RR JCT BOX - ECU EATON TRANSM.	PED MP	24	------	562865
C 32	DDEC ENGINE-ECM	AMP	68	------	563403
C 33	RR JCT BOX - EATON TRANSM.	DEUTCH	9	562531	------
C 34	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	3	------	562871
C 35	RR JCT BOX	DEUTCH	40	562281	562284
C 36	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	24	------	562874
C 37	RR SECTION-LH HAT RACK	MOLEX	6	562558	562557
C 38	RR SECTION-RH HAT RACK	MOLEX	6	562558	562557
C 39	LH CONSOLE - EATON TRANSM. DISPLAY	AMP MNL	4	561551	561668
C 40	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 41	LAVATORY ROOF LIGHT	LEECRAFT	2	-----	562803
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662
C 44	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERVICE CMPT.PRESS SW PARKBREAK	PED WP	2	561566	561690
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577
C 51					
C 52	RR JCT BOX	AMP CPC	24	561642	561643
C 53	SPARE TIRE COMPT ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 54	SPARE TIRE COMPT ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56	HAT RACK- MOTOR FAN	MOLEX	6	562558	562557
C 57	HAT RACK- MOTOR FAN	MOLEX	6	562558	562557
C 58	RR JCT BOX AC PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX AC PANEL	AMP CPC	14	561584	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	16	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	SERV CPT. RXT. ENT. DOOR SW	DEUTSCH	4	562479	562477
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 78					
C 79					
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100	------	562248	------
C 86					
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88	FR. SERVICE CMPT.PRESS SW PARK BRAKE	PED WP	2	561566	561690
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS		35	------	641094
C 94	RH CONSOLE ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 95	CONDENSOR CPT - LIQ. SOL. VALVE	PED WP	2	561566	561690
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100	LH CONSOLE – 120 VOLTS SWITCH	EATON	8	------	562763
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	SIDE (LH/FR & CENTER) DIR. LTS	GROTE	2	------	562155
C 103	SIDE (LH/FR & CENTER) MARKER LTS	GROTE	2	------	562155
C 104	SIDE (RH/FR & CENTER) DIR. LTS	DEUTSCH	4	562479	562477
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107					
C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	LAVATORY BACK WALL-FLUSH PUMP SW.	DEUTSCH	4	562479	562477
C 113	SIDE (LH/RR) MARKER LTS	GROTE	2	------	562155
C 114	SIDE (LH/RR) DIR LTS	GROTE	2	------	562155
C 115					
C 116	ENGINE COMPT. LTS	GROTE	2		563268
C 117	SIDE (RH/RR) MARKER LTS	GROTE	2	------	562155
C 117	FR SRV. COMPT. KNEELING UP SOL VALVE	PED WP	2	561761	
C 118	ENGINE COMPT-LAVATORY FAN	PED WP	2	561566	561690
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 121	SIDE (RH/RR) DIR. LTS	GROTE	2	------	562155
C 122					
C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129					
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX - A/C PANEL DIODE CONN.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 143					
C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150					
C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PNEUMAC	4	563204	
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157					
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	641132	------
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172					
C 173					
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080
C 185					
C 186					
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					
C 189	ENGINE CPT RR DOOR B/U LT	TRUCK-LITE	2	------	562755
C 190	ENGINE CPT RR DOOR TAIL/ STOP LT	SUPER SEAL	3		562601
C 191	ENGINE CPT RR DOOR RH TAIL/STOP LT	SUPER SEAL	3		562601
C 192	ENGINE CPT RR DOOR DIR. LT	SUPER SEAL	3		562601
C 193					
C 194					
C 195					
C 198	ENGINE CPT RR DOOR LICENCE LT	PED WP	2	562348	562471
C 199					
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 202	RH HAT RACK-INDIRECT LIGHTING	MOLEX	2	---------	562758
C 203	RH HAT RACK-INDIRECT LIGHTING	MOLEX	6	---------	562759
C 204	RH HAT RACK-GENERAL LT	AMP MNL	2	560900	560898
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 206	RH HAT RACK-READING LT	AMP FF	4	----------	562756
C 207	LH HAT RACK-READING LT	AMP FF	4	----------	562756
C 208	LH HAT RACK-BALLAST	MOLEX	2	----------	562758
C 209	LH HAT RACK HOTESS CHIME	AMP MNL	3	561667	561550
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214	ENGINE CPT J1922				
C 215	TAG AXLE - A.T.C. SYSTEM				
C 216	TAG AXLE - A.T.C. SYSTEM				
C 217	RH DASH PANEL-FRONT CAMERA SW	EATON	8	--------	562763
C 218	RH DASH PANEL-FRONT CAMERA SW	AMP MNL	2	560900	560898
C 219	ENGINE CMPT. – FIRE DETECTOR	DEUTSCH	2	562486	562485
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 224	ENGINE CMPT. -VORAD J1939	DEUTSCH	3	562877	562884
C 225	ENGINE CMPT. -VORAD J1939	DEUTSCH	3	562877	562884
C 226	FR LH UPPER WHEEL CPT-VORAD J1939	DEUTSCH	3	562677	562884
C 227					
C 228	ENG.CPT.- A/C COMPRESSOR	PED WP	2	561566	561690
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233	FR. SERVICE COMPT.	VDO	8		562043
C 234	FR. SERVICE COMPT.	VDO	8		562044
C 235	FR. SERVICE COMPT.	VDO	8		562041
C 236	LUGGAGE COMPARTEMENT	AMP MNL	4	560851	560852
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C 238	UNDER DASH LH-PASS. REC. DAMPER SW	EATON	8	------	562763
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	3	561781	562428
C 241	HEADLAMPS HI BEAM	HELLA	2		562623
C 242	HALOGEN HEAHLAMPS LO BEAM	HELLA	2		562623
C 242	XENON HEADLAMPS LO BEAM	DELPHI	2		563366
C 243	FRONT CAP- HEADLIGHTS MAIN CONN	DEUTCH	6	565131	562789
C 244	FR SERVICE CPT-LH FOG LAMP	DEUTCH	2	562902	562901
C 245	FR SERVICE CPT-RH FOG LAMP	DEUTCH	2	562902	562901
C 246	UNDER DASH - L.H. MIRROR	CONNXALL	5	563196	563090
C 247	HEADLAMPS MARK & DIR LTS	AMP SUPER S	3		562601
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250	LH CONSOL PANEL- LOW BOY	PED	2	561566	561690
C 251	LH DASH PANEL-FAST IDLE SW	EATON	8	------	562763
C 252					
C 253	LH DASH PANEL-ETHER SW	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH DASH PANEL-JACOB & RETARDER SW	EATON	8	------	562763
C 256					
C 257					
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268					
C 269	UNDER DASH - R.H. MIRROR	CONNXALL	5	563196	563090
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274	RR. JCT. BOX – SIGNAL ALT. MODULE	AMP MNL	12	561735	561734
C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 277					
C 278					
C 279 *	FR SERVICE CPT.- STEERING ZF	DEUTCH	2		562486
C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 280	LH CONSOLE-UNLOAD TAG SW.	NGR	10	------	562763
C 281					
C 282					
C 283					
C 284	LH DR'S ROOF - MONITOR FEED	PED WP	3	561781	561782
C 285	LH DR'S ROOF – SOUND SYSTEM	AMP CPC	24	561642	561643
C 286	RH SW PANEL-A/C & HEAT	EATON	8	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	8	------	562763
C 289					
C 290					
C 291					
C 292	LH PARCEL RACK VIDEO PANEL– MONITOR	MOLEX	4	563040	563071
C 293	LH PARCEL RACK VIDEO PAN. – RCA RELAY	AMP MNL	2	561248	561247
C 294	LH PARCEL RACK VIDEO PAN.– RCA RELAY	AMP MNL	2	561248	561247
C 295	LH PARCEL RACK VID. PANEL– AMPLI VIDEO	MOLEX	4	563040	563071
C 296	LH PARCEL RACK VIDEO PAN. – MICRO SIGNAL	MOLEX	4	562507	562503
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299	RH DASH PANEL SW-GALLEY	EATON	8	------	562763
C 300	FR SERVICE CPT.- LOW BEAM RESISTORS	PED WP	2	561566	561690
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309					
C 310	LH DASH PANEL -LUG. DOOR LCK SW	EATON	8	------	562763
C 311	RH DASH PANEL -HOS & PAS CHIME SW	EATON	8	------	562763
C 312	RH DASH PANEL -READING LTS SW	EATON	8	------	562763
C 313	RH DASH PANEL -GEN & FLUOR LTS SW	EATON	8	------	562763
C 314	LH DASH PANEL-FR DEST. SIGN SW	EATON	8	------	562763
C 315	LH DASH PANEL-LH STORE SW	EATON	8	------	562763
C 316	LH CONSOLE SPARE SWITCH	EATON	8	------	562763
C 317	LH DASH PANEL-RH STORE SW	EATON	8	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	8	------	562763
C 319					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 320	RH DASH PANEL-DRIVER'S LTS SW	EATON	8	------	562763
C 321	READING LTS TEST				
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637
C 324					
C 325	LH DASH PANEL-KNEELING SW	EATON	8	------	562763
C 326	ENGINE CMPT.	PED	4	------	561610
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331	GALLEY MICROWAVE SW	EATON	8	------	562763
C 332					
C 333	GALLEY RH CONTAINER SW	EATON	8	------	562763
C 334	GALLEY LH CONTAINER SW	EATON	8	------	562763
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346					
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360					
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376					
C 377	LH DASH PANEL-STOP ENG.OVERIDE SW	EATON	8	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381					
C 382					
C 383					
C 384					
C 385	EVAPOTATOR COMP WATER PUMP	PED WP	2	561566	561690
C 386	LH DASH PANEL-WCL POWER SYSTEM SW	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734
C 389	WCL REAR DOOR	MOLEX	4	561477	561476
C 390	LAVATORY WALL-WCL REMOTE CTR	EATON	8	------	562763
C 391	LAVATORY WALL-WCL LAMP	EATON	8	------	562763
C 392	LAVATORY WALL-WCL SW. LT.	EATON	2	------	561835
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	------	------
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398	ENGINE COMPT. – PRE-EXITATION ALT.	PED WP	2	561566	561690
C 399	ENGINE COMPT. – PRE-EXITATION ALT.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402					
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247
C 404	GALLEY LAMP	AMP MNL	2	561248	561247
C 405	LAST LUGGAGE COMP.- INVERTER SIGNAL	AMP MNL	2	561248	561247
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407					
C 408					
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH DASH PANEL-MASTER SWITCH SW	EATON	8	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414					
C 415	RR JCT BOX – ENGINE SIGNAL	DEUTSCH	24	562280	562283
C 416					
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	LH DASH PANEL-HTR WINDSH.SW	EATON	8	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420					
C 421					
C 422					
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427	PRO-HEAT	PED-WP	2	561566	561680
C 428	PRO-HEAT	PED WP	6	561606	561607
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	PED-WP	2	561566	561680
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 438	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 439	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 440	EVAP CMPT- A/C CONTROL	DEUTSCH	4	562479	562477
C 441	FR JCT BOX- DIODES	AMP MNL	15	561987	561986
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 455	WIRELESS MICRO-LH HAT-RACK	MOLEX	6	------	562464
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDR CONNECTOR	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468			8		
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	DEUTSCH	2	562486	562485
C 476					
C 477					
C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 479	HVAC MODULE	MOLEX	3		562783
C 480	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	4	561889	561890
C 481	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	------	562237
C 484	UNDER DASH LH.-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH.-DASH & DEFR. DAM.MOT.	AMP MNL	3	561667	561550
C 486					
C 487	S.S.PANEL – AUDIO IN AMPLI	MOLEX	4	------	563071
C 488	S.S.PANEL – AMPLI SIGNAL	MOLEX	8	------	562465
C 489	S.S.PANEL – SPEAKER OUTLET	MOLEX	6	------	562464
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER	PED MP	7	562433	------
C 502	LH DASH PANEL-PRE HEATER SW.	EATON	8	------	562763
C 503	LH CONSOLE-PRE HEATER SW.	EATON	2	------	561837
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	9	------	562681
C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	562580
C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 522					
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562610	---
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562610	---
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 543					
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 546	WIRELESS MIC. CHARGING SYSTEM	MOLEX	2	--------	563025
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	8	------	562763
C 549	LH DASH PANEL-FAN CLUTCH OVERR. SW	EATON	8	------	562763
C 550	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 551	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 552	LAST LUGG. CPT. -WCL RICON	AMP CPC	9	561636	561637
C 553	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 554	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 555	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 556	UNDER DASH R.H. - RADIO ACC.	MOLEX	2	562550	562549
C 557	UNDER DASH R.H. - RADIO ACC.	MOLEX	9	562556	562555
C 558	UNDER DASH R.H. - RADIO ACC.	MOLEX	4	562507	562503
C 559	SOUND SYS. JCT. PANEL – FILTER AMPLI	PED WP	2	561566	561690
C 560	SOUND SYS. JCT. PANEL – POWER AMPLI	MOLEX	4	562507	562503
C 561	L.H. HAT RACK - WIRELESS MICRO	MOLEX	8		562465
C 562	L.H. HAT RACK - VCP	MOLEX	12	562556	563070
C 563	L.H MODESTY PANEL - DRIVERS SPK.	MOLEX	4	562507	562503
C 564	L.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 565	R.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 566	L.H. CONSOLE - BOOM MICRO	MOLEX	4	562507	562503
C 567	L.H. CONSOLE - DRIVERS MICRO	MOLEX	4	562507	562503
C 568	SOUND SYS. JCT. PANEL - PASS. SPK	CINCH	4	562553	562552
C 569	SOUND SYS. JCT. PANEL - POWER AMPLI.	MOLEX	9	562556	562555
C 570	UNDER DASH PANEL TTLT	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT	MOLEX	8		562465
C 574	HAT -RACK FLUOR. INDIRECT LIGHTING	MOLEX	6	----------	562759
C 575	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 576	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 577	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 578	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 579	L.H HAT RACK – VCP POWER	MOLEX	4		563071
C 580	RH DASH PANEL-HAT RACK FAN SW	EATON	8	--------	562763
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587	LH PARCEL RACK DVD UNIT	MOLEX	4	563040	563071
C 588	FRONT SERVICE CPT. CENTER SOUND SYS.	CONNXALL	9	563163	563089

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 589	UNDER DASH - L.H. MIRROR	CONNXALL	9	563163	563089
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593	BATTERY CMPT. - CHARGER	PED WP	3	561781	561782
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476
C 596	DASH CENTER MODULE - CLOSE DOOR	MOLEX	4	561477	561476
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 599	UND.DASH-MAGN.SW.CTR POS. DR'S AIR	AMP MNL	2	561248	561247
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601	L.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 602	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 603	R.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 604	LH PARCEL RACK DVD VIDEO STABILIZER	SWITCHCRAFT	1	563074	
C 605	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 606	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 607					
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
C 609	LAVATORY - NIGHT LIGHT				
C 610					
C 611	HAT RACK READING LTS RICON	MOLEX	6	562558	562557
C 612	HAT -RACK FLUOR. INSTATION LTS RICON	MOLEX	4	562507	562503
C 613	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 614	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 615	LH PARCEL RACK DVD SING ALONG ADAPT.	MOLEX	2	562550	562549
C 616					
C 701	ZF TRANSMISSION ECU	KOSTAL	20		
C 702	SHIFT SELECTOR – LH CONSOLE	AMP	14		563338
C 712	NEUTRAL SWITCH ON ZF TRANSM. (TOP)	AMP	4		563340
C 714	OUTPUT SENSOR ON ZF TRANSM. (BOTTOM)	AMP	4		563340
C 717	BATT. CPT - MAIN CONNECTOR	AMP CPC	22	561642	561643
C 720	ENGINE COMPT – BLKHD CONNECTOR	DEUTSCH	31	563359	563358
C 721	LH CONSOLE – ZF TESTMAN DIAGNOSTIC	AMP MNL	6	563356	
C 723	ENGINE COMPT – FOR TRANSM.	DEUTSCH	3		562884
C 736	ENGINE COMPT – ZMTEC MODULE	PACKARD	30	563053	
C 740	DRIVE AXLE – EASY START SOL VALVE	LEONI	2	--	641949
C 742	BATT. CPT – FUSE BLOCK	AMP	8	562446	
C 745	FR SERV.COMPT – THROTTLE POS. SENSOR	PED WP	3	561781	
C 760	FR SERV. COMPT – TO J1939	DEUTSCH	3		
C 761	FR SERV. COMPT – TO J1939	DEUTSCH	3		562884
C 762	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 763	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 764	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 765	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 766	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C X	CLUSTER	JAE	22		562766
C Y	CLUSTER	JAE	30		562767
L X	CLUSTER	JAE	22		562764
L					
R					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
AA1	BEHIND DASH - SONALERT	BOSCH	5		561183
AA2	BEHIND DASH - SONALERT	BOSCH	5		561183
C X1	FR SERVICE COMPT- ECU ABS	AMP	15		563200
C X2	FR SERVICE COMPT- ECU ABS	AMP	18		563201
C RXTX	HVAC DASN MODULE COMMUNICATION	MOLEX	3	563206	562873
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C TCI	ENGINE CPT – DDEC V TURBO TEMP.	FCI	2		563404
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
C WX1	ENGINE CPT-WEBASTO PRE-HEAT WATER	AMP SEALED	7		563135
C WX3	ENGINE CPT-WEBASTO PRE-HEAT WATER	AMP SEALED	7	563134	
C Y	CLUSTER	JAE	30	---	562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 7					
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10	LUGGAGE COMPT. WATER BOOSTER PUMP	PED	2	562348	562471
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	A/C CLUTCH	PED WP	2	561566	561690
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	DEUTSCH	70	562282	562285
C 21	RR JCT BOX	DEUTSCH	24	562280	562283
C 22	RR JCT BOX - EATON TRANSM.	AMP MNL	6	561552	561515
C 23					
C 24					
C 25					
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690
C 28	EATON TRANSMISSION	DEUTCH	3	562877	562884
C 29	EATON TRANSMISSION	PED MP	6	562878	------
C 30	RR JCT BOX - ECU EATON TRANSM.	PED MP	32	------	562866
C 31	RR JCT BOX - ECU EATON TRANSM.	PED MP	24	------	562865
C 32	DDEC ENGINE-ECM	AMP	68	------	563403
C 33	RR JCT BOX - EATON TRANSM.	DEUTCH	9	562531	------
C 34	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	3	------	562871
C 35	RR JCT BOX	DEUTCH	40	562281	562284
C 36	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	24	------	562874
C 37	RR SECTION-LH HAT RACK	MOLEX	6	562558	562557
C 38	RR SECTION-RH HAT RACK	MOLEX	6	562558	562557
C 39	LH CONSOLE - EATON TRANSM. DISPLAY	AMP MNL	4	561551	561668
C 40	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 41	LAVATORY ROOF LIGHT	LEECRAFT	2	-----	562803
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662
C 44	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERVICE CMPT.PRESS SW PARKBREAK	PED WP	2	561566	561690
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577
C 51					
C 52	RR JCT BOX	AMP CPC	24	561642	561643
C 53	SPARE TIRE COMPT ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 54	SPARE TIRE COMPT ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 56	HAT RACK- MOTOR FAN	MOLEX	6	562558	562557
C 57	HAT RACK- MOTOR FAN	MOLEX	6	562558	562557
C 58	RR JCT BOX AC PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX AC PANEL	AMP CPC	14	561584	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	16	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	SERV CPT. RXT. ENT. DOOR SW	DEUTSCH	4	562479	562477
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 78					
C 79					
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100	------	562248	------
C 86					
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88	FR. SERVICE CMPT.PRESS SW PARK BRAKE	PED WP	2	561566	561690
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS		35	------	641094
C 94	RH CONSOLE ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 95	CONDENSOR CPT - LIQ. SOL. VALVE	PED WP	2	561566	561690
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100	LH CONSOLE – 120 VOLTS SWITCH	EATON	8	------	562763
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	SIDE (LH/FR & CENTER) DIR. LTS	GROTE	2	------	562155
C 103	SIDE (LH/FR & CENTER) MARKER LTS	GROTE	2	------	562155
C 104	SIDE (RH/FR & CENTER) DIR. LTS	DEUTSCH	4	562479	562477
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107					
C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	LAVATORY BACK WALL-FLUSH PUMP SW.	DEUTSCH	4	562479	562477
C 113	SIDE (LH/RR) MARKER LTS	GROTE	2	------	562155
C 114	SIDE (LH/RR) DIR LTS	GROTE	2	------	562155
C 115					
C 116	ENGINE COMPT. LTS	GROTE	2		563268
C 117	SIDE (RH/RR) MARKER LTS	GROTE	2	------	562155
C 117	FR SRV. COMPT. KNEELING UP SOL VALVE	PED WP	2	561761	
C 118	ENGINE COMPT-LAVATORY FAN	PED WP	2	561566	561690
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 121	SIDE (RH/RR) DIR. LTS	GROTE	2	------	562155
C 122					
C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129					
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX - A/C PANEL DIODE CONN.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 143					
C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150					
C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PNEUMAC	4	563204	
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157					
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	641132	------
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172					
C 173					
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080
C 185					
C 186					
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					
C 189	ENGINE CPT RR DOOR B/U LT	TRUCK-LITE	2	------	562755
C 190	ENGINE CPT RR DOOR TAIL/ STOP LT	SUPER SEAL	3		562601
C 191	ENGINE CPT RR DOOR RH TAIL/STOP LT	SUPER SEAL	3		562601
C 192	ENGINE CPT RR DOOR DIR. LT	SUPER SEAL	3		562601
C 193					
C 194					
C 195					
C 198	ENGINE CPT RR DOOR LICENCE LT	PED WP	2	562348	562471
C 199					
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 202	RH HAT RACK-INDIRECT LIGHTING	MOLEX	2	---------	562758
C 203	RH HAT RACK-INDIRECT LIGHTING	MOLEX	6	---------	562759
C 204	RH HAT RACK-GENERAL LT	AMP MNL	2	560900	560898
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 206	RH HAT RACK-READING LT	AMP FF	4	----------	562756
C 207	LH HAT RACK-READING LT	AMP FF	4	----------	562756
C 208	LH HAT RACK-BALLAST	MOLEX	2	----------	562758
C 209	LH HAT RACK HOTESS CHIME	AMP MNL	3	561667	561550
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214	ENGINE CPT J1922				
C 215	TAG AXLE - A.T.C. SYSTEM				
C 216	TAG AXLE - A.T.C. SYSTEM				
C 217	RH DASH PANEL-FRONT CAMERA SW	EATON	8	--------	562763
C 218	RH DASH PANEL-FRONT CAMERA SW	AMP MNL	2	560900	560898
C 219	ENGINE CMPT. – FIRE DETECTOR	DEUTSCH	2	562486	562485
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 224	ENGINE CMPT. -VORAD J1939	DEUTSCH	3	562877	562884
C 225	ENGINE CMPT. -VORAD J1939	DEUTSCH	3	562877	562884
C 226	FR LH UPPER WHEEL CPT-VORAD J1939	DEUTSCH	3	562677	562884
C 227					
C 228	ENG.CPT.- A/C COMPRESSOR	PED WP	2	561566	561690
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233	FR. SERVICE COMPT.	VDO	8		562043
C 234	FR. SERVICE COMPT.	VDO	8		562044
C 235	FR. SERVICE COMPT.	VDO	8		562041
C 236	LUGGAGE COMPARTEMENT	AMP MNL	4	560851	560852
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C 238	UNDER DASH LH-PASS. REC. DAMPER SW	EATON	8	------	562763
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	3	561781	562428
C 241	HEADLAMPS HI BEAM	HELLA	2		562623
C 242	HALOGEN HEAHLAMPS LO BEAM	HELLA	2		562623
C 242	XENON HEADLAMPS LO BEAM	DELPHI	2		563366
C 243	FRONT CAP- HEADLIGHTS MAIN CONN	DEUTCH	6	565131	562789
C 244	FR SERVICE CPT-LH FOG LAMP	DEUTCH	2	562902	562901
C 245	FR SERVICE CPT-RH FOG LAMP	DEUTCH	2	562902	562901
C 246	UNDER DASH - L.H. MIRROR	CONNXALL	5	563196	563090
C 247	HEADLAMPS MARK & DIR LTS	AMP SUPER S	3		562601
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250	LH CONSOL PANEL- LOW BOY	PED	2	561566	561690
C 251	LH DASH PANEL-FAST IDLE SW	EATON	8	------	562763
C 252					
C 253	LH DASH PANEL-ETHER SW	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH DASH PANEL-JACOB & RETARDER SW	EATON	8	------	562763
C 256					
C 257					
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268					
C 269	UNDER DASH - R.H. MIRROR	CONNXALL	5	563196	563090
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274	RR. JCT. BOX – SIGNAL ALT. MODULE	AMP MNL	12	561735	561734
C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 277					
C 278					
C 279 *	FR SERVICE CPT.- STEERING ZF	DEUTCH	2		562486
C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 280	LH CONSOLE-UNLOAD TAG SW.	NGR	10	------	562763
C 281					
C 282					
C 283					
C 284	LH DR'S ROOF - MONITOR FEED	PED WP	3	561781	561782
C 285	LH DR'S ROOF – SOUND SYSTEM	AMP CPC	24	561642	561643
C 286	RH SW PANEL-A/C & HEAT	EATON	8	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	8	------	562763
C 289					
C 290					
C 291					
C 292	LH PARCEL RACK VIDEO PANEL– MONITOR	MOLEX	4	563040	563071
C 293	LH PARCEL RACK VIDEO PAN. – RCA RELAY	AMP MNL	2	561248	561247
C 294	LH PARCEL RACK VIDEO PAN.– RCA RELAY	AMP MNL	2	561248	561247
C 295	LH PARCEL RACK VID. PANEL– AMPLI VIDEO	MOLEX	4	563040	563071
C 296	LH PARCEL RACK VIDEO PAN. – MICRO SIGNAL	MOLEX	4	562507	562503
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299	RH DASH PANEL SW-GALLEY	EATON	8	------	562763
C 300	FR SERVICE CPT.- LOW BEAM RESISTORS	PED WP	2	561566	561690
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309					
C 310	LH DASH PANEL -LUG. DOOR LCK SW	EATON	8	------	562763
C 311	RH DASH PANEL -HOS & PAS CHIME SW	EATON	8	------	562763
C 312	RH DASH PANEL -READING LTS SW	EATON	8	------	562763
C 313	RH DASH PANEL -GEN & FLUOR LTS SW	EATON	8	------	562763
C 314	LH DASH PANEL-FR DEST. SIGN SW	EATON	8	------	562763
C 315	LH DASH PANEL-LH STORE SW	EATON	8	------	562763
C 316	LH CONSOLE SPARE SWITCH	EATON	8	------	562763
C 317	LH DASH PANEL-RH STORE SW	EATON	8	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	8	------	562763
C 319					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 320	RH DASH PANEL-DRIVER'S LTS SW	EATON	8	------	562763
C 321	READING LTS TEST				
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637
C 324					
C 325	LH DASH PANEL-KNEELING SW	EATON	8	------	562763
C 326	ENGINE CMPT.	PED	4	------	561610
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331	GALLEY MICROWAVE SW	EATON	8	------	562763
C 332					
C 333	GALLEY RH CONTAINER SW	EATON	8	------	562763
C 334	GALLEY LH CONTAINER SW	EATON	8	------	562763
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346					
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360					
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376					
C 377	LH DASH PANEL-STOP ENG.OVERIDE SW	EATON	8	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381					
C 382					
C 383					
C 384					
C 385	EVAPOTATOR COMP WATER PUMP	PED WP	2	561566	561690
C 386	LH DASH PANEL-WCL POWER SYSTEM SW	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734
C 389	WCL REAR DOOR	MOLEX	4	561477	561476
C 390	LAVATORY WALL-WCL REMOTE CTR	EATON	8	------	562763
C 391	LAVATORY WALL-WCL LAMP	EATON	8	------	562763
C 392	LAVATORY WALL-WCL SW. LT.	EATON	2	------	561835
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	------	------
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398	ENGINE COMPT. – PRE-EXITATION ALT.	PED WP	2	561566	561690
C 399					
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402					
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247
C 404	GALLEY LAMP	AMP MNL	2	561248	561247
C 405	LAST LUGGAGE COMP.- INVERTER SIGNAL	AMP MNL	2	561248	561247
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407					
C 408					
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH DASH PANEL-MASTER SWITCH SW	EATON	8	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414					
C 415	RR JCT BOX – ENGINE SIGNAL	DEUTSCH	24	562280	562283
C 416					
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	LH DASH PANEL-HTR WINDSH.SW	EATON	8	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420					
C 421					
C 422					
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427	PRO-HEAT	PED-WP	2	561566	561680
C 428	PRO-HEAT	PED WP	6	561606	561607
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	PED-WP	2	561566	561680
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 438	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 439	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 440	EVAP CMPT- A/C CONTROL	DEUTSCH	4	562479	562477
C 441	FR JCT BOX- DIODES	AMP MNL	15	561987	561986
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 455	WIRELESS MICRO-LH HAT-RACK	MOLEX	6	------	562464
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDR CONNECTOR	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468			8		
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	DEUTSCH	2	562486	562485
C 476					
C 477					
C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 479	HVAC MODULE	MOLEX	3		562783
C 480	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	4	561889	561890
C 481	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	------	562237
C 484	UNDER DASH LH.-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH.-DASH & DEFR. DAM.MOT.	AMP MNL	3	561667	561550
C 486					
C 487	S.S.PANEL – AUDIO IN AMPLI	MOLEX	4	------	563071
C 488	S.S.PANEL – AMPLI SIGNAL	MOLEX	8	------	562465
C 489	S.S.PANEL – SPEAKER OUTLET	MOLEX	6	------	562464
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER	PED MP	7	562433	------
C 502	LH DASH PANEL-PRE HEATER SW.	EATON	8	------	562763
C 503	LH CONSOLE-PRE HEATER SW.	EATON	2	------	561837
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	9	------	562681
C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	562580
C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 522					
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562610	---
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562610	---
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 543					
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 546	WIRELESS MIC. CHARGING SYSTEM	MOLEX	2	--------	563025
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	8	------	562763
C 549	LH DASH PANEL-FAN CLUTCH OVERR. SW	EATON	8	------	562763
C 550	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 551	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 552	LAST LUGG. CPT. -WCL RICON	AMP CPC	9	561636	561637
C 553	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 554	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 555	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 556	UNDER DASH R.H. - RADIO ACC.	MOLEX	2	562550	562549
C 557	UNDER DASH R.H. - RADIO ACC.	MOLEX	9	562556	562555
C 558	UNDER DASH R.H. - RADIO ACC.	MOLEX	4	562507	562503
C 559	SOUND SYS. JCT. PANEL – FILTER AMPLI	PED WP	2	561566	561690
C 560	SOUND SYS. JCT. PANEL – POWER AMPLI	MOLEX	4	562507	562503
C 561	L.H. HAT RACK - WIRELESS MICRO	MOLEX	8		562465
C 562	L.H. HAT RACK - VCP	MOLEX	12	562556	563070
C 563	L.H MODESTY PANEL - DRIVERS SPK.	MOLEX	4	562507	562503
C 564	L.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 565	R.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 566	L.H. CONSOLE - BOOM MICRO	MOLEX	4	562507	562503
C 567	L.H. CONSOLE - DRIVERS MICRO	MOLEX	4	562507	562503
C 568	SOUND SYS. JCT. PANEL - PASS. SPK	CINCH	4	562553	562552
C 569	SOUND SYS. JCT. PANEL - POWER AMPLI.	MOLEX	9	562556	562555
C 570	UNDER DASH PANEL TTLT	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT	MOLEX	8		562465
C 574	HAT -RACK FLUOR. INDIRECT LIGHTING	MOLEX	6	----------	562759
C 575	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 576	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 577	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 578	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 579	L.H HAT RACK – VCP POWER	MOLEX	4		563071
C 580	RH DASH PANEL-HAT RACK FAN SW	EATON	8	--------	562763
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587	LH PARCEL RACK DVD UNIT	MOLEX	4	563040	563071
C 588	FRONT SERVICE CPT. CENTER SOUND SYS.	CONNXALL	9	563163	563089

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 589	UNDER DASH - L.H. MIRROR	CONNXALL	9	563163	563089
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593	BATTERY CMPT. - CHARGER	PED WP	3	561781	561782
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476
C 596	DASH CENTER MODULE - CLOSE DOOR	MOLEX	4	561477	561476
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 599	UND.DASH-MAGN.SW.CTR POS. DR'S AIR	AMP MNL	2	561248	561247
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601	L.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 602	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 603	R.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 604	LH PARCEL RACK DVD VIDEO STABILIZER	SWITCHCRAFT	1	563074	
C 605	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 606	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 607					
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
C 609	LAVATORY - NIGHT LIGHT				
C 610					
C 611	HAT RACK READING LTS RICON	MOLEX	6	562558	562557
C 612	HAT -RACK FLUOR. INSTATION LTS RICON	MOLEX	4	562507	562503
C 613	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 614	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 615	LH PARCEL RACK DVD SING ALONG ADAPT.	MOLEX	2	562550	562549
C 616					
C 701	ZF TRANSMISSION ECU	KOSTAL	20		
C 702	SHIFT SELECTOR – LH CONSOLE	AMP	14		563338
C 712	NEUTRAL SWITCH ON ZF TRANSM. (TOP)	AMP	4		563340
C 714	OUTPUT SENSOR ON ZF TRANSM. (BOTTOM)	AMP	4		563340
C 717	BATT. CPT - MAIN CONNECTOR	AMP CPC	22	561642	561643
C 720	ENGINE COMPT – BLKHD CONNECTOR	DEUTSCH	31	563359	563358
C 721	LH CONSOLE – ZF TESTMAN DIAGNOSTIC	AMP MNL	6	563356	
C 723	ENGINE COMPT – FOR TRANSM.	DEUTSCH	3		562884
C 736	ENGINE COMPT – ZMTEC MODULE	PACKARD	30	563053	
C 740	DRIVE AXLE – EASY START SOL VALVE	LEONI	2	--	641949
C 742	BATT. CPT – FUSE BLOCK	AMP	8	562446	
C 745	FR SERV.COMPT – THROTTLE POS. SENSOR	PED WP	3	561781	
C 760	FR SERV. COMPT – TO J1939	DEUTSCH	3		
C 761	FR SERV. COMPT – TO J1939	DEUTSCH	3		562884
C 762	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 763	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 764	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 765	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 766	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C X	CLUSTER	JAE	22		562766
C Y	CLUSTER	JAE	30		562767
L X	CLUSTER	JAE	22		562764
L					
R					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
AA1	BEHIND DASH - SONALERT	BOSCH	5		561183
AA2	BEHIND DASH - SONALERT	BOSCH	5		561183
C X1	FR SERVICE COMPT- ECU ABS	AMP	15		563200
C X2	FR SERVICE COMPT- ECU ABS	AMP	18		563201
C RXTX	HVAC DASN MODULE COMMUNICATION	MOLEX	3	563206	562873
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C TCI	ENGINE CPT – DDEC V TURBO TEMP.	FCI	2		563404
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
C WX1	ENGINE CPT-WEBASTO PRE-HEAT WATER	AMP SEALED	7		563135
C WX3	ENGINE CPT-WEBASTO PRE-HEAT WATER	AMP SEALED	7	563134	
C Y	CLUSTER	JAE	30	---	562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 7					
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10	LUGGAGE COMPT. WATER BOOSTER PUMP	PED	2	562348	562471
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	A/C CLUTCH	PED WP	2	561566	561690
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	DEUTSCH	70	562282	562285
C 21	RR JCT BOX	DEUTSCH	24	562280	562283
C 22	RR JCT BOX - EATON TRANSM.	AMP MNL	6	561552	561515
C 23					
C 24					
C 25					
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690
C 28	EATON TRANSMISSION	DEUTCH	3	562877	562884
C 29	EATON TRANSMISSION	PED MP	6	562878	------
C 30	RR JCT BOX - ECU EATON TRANSM.	PED MP	32	------	562866
C 31	RR JCT BOX - ECU EATON TRANSM.	PED MP	24	------	562865
C 32	DDEC ENGINE-ECM	AMP	68	------	563403
C 33	RR JCT BOX - EATON TRANSM.	DEUTCH	9	562531	------
C 34	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	3	------	562871
C 35	RR JCT BOX	DEUTCH	40	562281	562284
C 36	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	24	------	562874
C 37	RR SECTION-LH HAT RACK	MOLEX	6	562558	562557
C 38	RR SECTION-RH HAT RACK	MOLEX	6	562558	562557
C 39	LH CONSOLE - EATON TRANSM. DISPLAY	AMP MNL	4	561551	561668
C 40	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 41	LAVATORY ROOF LIGHT	LEECRAFT	2	-----	562803
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662
C 44	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERVICE CMPT.PRESS SW PARKBREAK	PED WP	2	561566	561690
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577
C 51					
C 52	RR JCT BOX	AMP CPC	24	561642	561643
C 53	SPARE TIRE COMPT ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 54	SPARE TIRE COMPT ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 56	HAT RACK- MOTOR FAN	MOLEX	6	562558	562557
C 57	HAT RACK- MOTOR FAN	MOLEX	6	562558	562557
C 58	RR JCT BOX AC PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX AC PANEL	AMP CPC	14	561584	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	16	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	SERV CPT. RXT. ENT. DOOR SW	DEUTSCH	4	562479	562477
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 78					
C 79					
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100	------	562248	------
C 86					
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88	FR. SERVICE CMPT.PRESS SW PARK BRAKE	PED WP	2	561566	561690
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS		35	------	641094
C 94	RH CONSOLE ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 95	CONDENSOR CPT - LIQ. SOL. VALVE	PED WP	2	561566	561690
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100	LH CONSOLE – 120 VOLTS SWITCH	EATON	8	------	562763
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	SIDE (LH/FR & CENTER) DIR. LTS	GROTE	2	------	562155
C 103	SIDE (LH/FR & CENTER) MARKER LTS	GROTE	2	------	562155
C 104	SIDE (RH/FR & CENTER) DIR. LTS	DEUTSCH	4	562479	562477
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107					
C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	LAVATORY BACK WALL-FLUSH PUMP SW.	DEUTSCH	4	562479	562477
C 113	SIDE (LH/RR) MARKER LTS	GROTE	2	------	562155
C 114	SIDE (LH/RR) DIR LTS	GROTE	2	------	562155
C 115					
C 116	ENGINE COMPT. LTS	GROTE	2		563268
C 117	SIDE (RH/RR) MARKER LTS	GROTE	2	------	562155
C 117	FR SRV. COMPT. KNEELING UP SOL VALVE	PED WP	2	561761	
C 118	ENGINE COMPT-LAVATORY FAN	PED WP	2	561566	561690
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 121	SIDE (RH/RR) DIR. LTS	GROTE	2	------	562155
C 122					
C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129					
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX - A/C PANEL DIODE CONN.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 143					
C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150					
C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PNEUMAC	4	563204	
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157					
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	641132	------
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172					
C 173					
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080
C 185					
C 186					
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188	KNEELING UP ALARM – NJ COACHE ONLY	AMP MNL	15	561987	561986
C 189	ENGINE CPT RR DOOR B/U LT	TRUCK-LITE	2	------	562755
C 190	ENGINE CPT RR DOOR TAIL/ STOP LT	SUPER SEAL	3		562601
C 191	ENGINE CPT RR DOOR RH TAIL/STOP LT	SUPER SEAL	3		562601
C 192	ENGINE CPT RR DOOR DIR. LT	SUPER SEAL	3		562601
C 193					
C 194					
C 195					
C 198	ENGINE CPT RR DOOR LICENCE LT	PED WP	2	562348	562471
C 199					
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 202	RH HAT RACK-INDIRECT LIGHTING	MOLEX	2	---------	562758
C 203	RH HAT RACK-INDIRECT LIGHTING	MOLEX	6	---------	562759
C 204	RH HAT RACK-GENERAL LT	AMP MNL	2	560900	560898
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 206	RH HAT RACK-READING LT	AMP FF	4	----------	562756
C 207	LH HAT RACK-READING LT	AMP FF	4	----------	562756
C 208	LH HAT RACK-BALLAST	MOLEX	2	----------	562758
C 209	LH HAT RACK HOTESS CHIME	AMP MNL	3	561667	561550
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214	ENGINE CPT J1922				
C 215	TAG AXLE - A.T.C. SYSTEM				
C 216	TAG AXLE - A.T.C. SYSTEM				
C 217	RH DASH PANEL-FRONT CAMERA SW	EATON	8	--------	562763
C 218	RH DASH PANEL-FRONT CAMERA SW	AMP MNL	2	560900	560898
C 219	ENGINE CMPT. – FIRE DETECTOR	DEUTSCH	2	562486	562485
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 224	ENGINE CMPT. -VORAD J1939	DEUTSCH	3	562877	562884
C 225	ENGINE CMPT. -VORAD J1939	DEUTSCH	3	562877	562884
C 226	FR LH UPPER WHEEL CPT-VORAD J1939	DEUTSCH	3	562677	562884
C 227					
C 228	ENG.CPT.- A/C COMPRESSOR	PED WP	2	561566	561690
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233	FR. SERVICE COMPT.	VDO	8		562043
C 234	FR. SERVICE COMPT.	VDO	8		562044
C 235	FR. SERVICE COMPT.	VDO	8		562041
C 236	LUGGAGE COMPARTEMENT	AMP MNL	4	560851	560852
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C 238	UNDER DASH LH-PASS. REC. DAMPER SW	EATON	8	------	562763
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	3	561781	562428
C 241	HEADLAMPS HI BEAM	HELLA	2		562623
C 242	HALOGEN HEAHLAMPS LO BEAM	HELLA	2		562623
C 242	XENON HEADLAMPS LO BEAM	DELPHI	2		563366
C 243	FRONT CAP- HEADLIGHTS MAIN CONN	DEUTCH	6	565131	562789
C 244	FR SERVICE CPT-LH FOG LAMP	DEUTCH	2	562902	562901
C 245	FR SERVICE CPT-RH FOG LAMP	DEUTCH	2	562902	562901
C 246	UNDER DASH - L.H. MIRROR	CONNXALL	5	563196	563090
C 247	HEADLAMPS MARK & DIR LTS	AMP SUPER S	3		562601
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250	LH CONSOL PANEL- LOW BOY	PED	2	561566	561690
C 251	LH DASH PANEL-FAST IDLE SW	EATON	8	------	562763
C 252					
C 253	LH DASH PANEL-ETHER SW	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH DASH PANEL-JACOB & RETARDER SW	EATON	8	------	562763
C 256					
C 257					
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268					
C 269	UNDER DASH - R.H. MIRROR	CONNXALL	5	563196	563090
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274	RR. JCT. BOX – SIGNAL ALT. MODULE	AMP MNL	12	561735	561734
C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 277					
C 278					
C 279 *	FR SERVICE CPT.- STEERING ZF	DEUTCH	2		562486
C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 280	LH CONSOLE-UNLOAD TAG SW.	NGR	10	------	562763
C 281					
C 282					
C 283					
C 284	LH DR'S ROOF - MONITOR FEED	PED WP	3	561781	561782
C 285	LH DR'S ROOF – SOUND SYSTEM	AMP CPC	24	561642	561643
C 286	RH SW PANEL-A/C & HEAT	EATON	8	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	8	------	562763
C 289					
C 290					
C 291					
C 292	LH PARCEL RACK VIDEO PANEL– MONITOR	MOLEX	4	563040	563071
C 293	LH PARCEL RACK VIDEO PAN. – RCA RELAY	AMP MNL	2	561248	561247
C 294	LH PARCEL RACK VIDEO PAN.– RCA RELAY	AMP MNL	2	561248	561247
C 295	LH PARCEL RACK VID. PANEL– AMPLI VIDEO	MOLEX	4	563040	563071
C 296	LH PARCEL RACK VIDEO PAN. – MICRO SIGNAL	MOLEX	4	562507	562503
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299	RH DASH PANEL SW-GALLEY	EATON	8	------	562763
C 300	FR SERVICE CPT.- LOW BEAM RESISTORS	PED WP	2	561566	561690
C 301	FR SERVICE CPT.- DR'S FAN SPEED	PED WP	1	561605	561577
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309					
C 310	LH DASH PANEL -LUG. DOOR LCK SW	EATON	8	------	562763
C 311	RH DASH PANEL -HOS & PAS CHIME SW	EATON	8	------	562763
C 312	RH DASH PANEL -READING LTS SW	EATON	8	------	562763
C 313	RH DASH PANEL -GEN & FLUOR LTS SW	EATON	8	------	562763
C 314	LH DASH PANEL-FR DEST. SIGN SW	EATON	8	------	562763
C 315	LH DASH PANEL-LH STORE SW	EATON	8	------	562763
C 316	LH CONSOLE SPARE SWITCH	EATON	8	------	562763
C 317	LH DASH PANEL-RH STORE SW	EATON	8	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	8	------	562763
C 319					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 320	RH DASH PANEL-DRIVER'S LTS SW	EATON	8	------	562763
C 321	READING LTS TEST				
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637
C 324					
C 325	LH DASH PANEL-KNEELING SW	EATON	8	------	562763
C 326	ENGINE CMPT.	PED	4	------	561610
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331	GALLEY MICROWAVE SW	EATON	8	------	562763
C 332					
C 333	GALLEY RH CONTAINER SW	EATON	8	------	562763
C 334	GALLEY LH CONTAINER SW	EATON	8	------	562763
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346					
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360					
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376					
C 377	LH DASH PANEL-STOP ENG.OVERIDE SW	EATON	8	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381					
C 382					
C 383					
C 384					
C 385	EVAPOTATOR COMP WATER PUMP	PED WP	2	561566	561690
C 386	LH DASH PANEL-WCL POWER SYSTEM SW	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734
C 389	WCL REAR DOOR	MOLEX	4	561477	561476
C 390	LAVATORY WALL-WCL REMOTE CTR	EATON	8	------	562763
C 391	LAVATORY WALL-WCL LAMP	EATON	8	------	562763
C 392	LAVATORY WALL-WCL SW. LT.	EATON	2	------	561835
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	------	------
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398	ENGINE COMPT. – PRE-EXITATION ALT.	PED WP	2	561566	561690
C 399					
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402					
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247
C 404	GALLEY LAMP	AMP MNL	2	561248	561247
C 405	LAST LUGGAGE COMP.- INVERTER SIGNAL	AMP MNL	2	561248	561247
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407					
C 408					
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH DASH PANEL-MASTER SWITCH SW	EATON	8	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414					
C 415	RR JCT BOX – ENGINE SIGNAL	DEUTSCH	24	562280	562283
C 416					
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	LH DASH PANEL-HTR WINDSH.SW	EATON	8	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420					
C 421					
C 422					
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427	PRO-HEAT	PED-WP	2	561566	561680
C 428	PRO-HEAT	PED WP	6	561606	561607
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	PED-WP	2	561566	561680
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 438	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 439	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 440	EVAP CMPT- A/C CONTROL	DEUTSCH	4	562479	562477
C 441	FR JCT BOX- DIODES	AMP MNL	15	561987	561986
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680
C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 455	WIRELESS MICRO-LH HAT-RACK	MOLEX	6	------	562464
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDR CONNECTOR	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468			8		
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	DEUTSCH	2	562486	562485
C 476					
C 477					
C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 479	HVAC MODULE	MOLEX	3		562783
C 480	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	4	561889	561890
C 481	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	------	562237
C 484	UNDER DASH LH.-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH.-DASH & DEFR. DAM.MOT.	AMP MNL	3	561667	561550
C 486					
C 487	S.S.PANEL – AUDIO IN AMPLI	MOLEX	4	------	563071
C 488	S.S.PANEL – AMPLI SIGNAL	MOLEX	8	------	562465
C 489	S.S.PANEL – SPEAKER OUTLET	MOLEX	6	------	562464
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER	PED MP	7	562433	------
C 502	LH DASH PANEL-PRE HEATER SW.	EATON	8	------	562763
C 503	LH CONSOLE-PRE HEATER SW.	EATON	2	------	561837
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	9	------	562681
C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	562580
C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 522					
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562610	---
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562610	---
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 543					
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 546	WIRELESS MIC. CHARGING SYSTEM	MOLEX	2	--------	563025
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	8	------	562763
C 549	LH DASH PANEL-FAN CLUTCH OVERR. SW	EATON	8	------	562763
C 550	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 551	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 552	LAST LUGG. CPT. -WCL RICON	AMP CPC	9	561636	561637
C 553	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 554	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 555	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 556	UNDER DASH R.H. - RADIO ACC.	MOLEX	2	562550	562549
C 557	UNDER DASH R.H. - RADIO ACC.	MOLEX	9	562556	562555
C 558	UNDER DASH R.H. - RADIO ACC.	MOLEX	4	562507	562503
C 559	SOUND SYS. JCT. PANEL – FILTER AMPLI	PED WP	2	561566	561690
C 560	SOUND SYS. JCT. PANEL – POWER AMPLI	MOLEX	4	562507	562503
C 561	L.H. HAT RACK - WIRELESS MICRO	MOLEX	8		562465
C 562	L.H. HAT RACK - VCP	MOLEX	12	562556	563070
C 563	L.H MODESTY PANEL - DRIVERS SPK.	MOLEX	4	562507	562503
C 564	L.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 565	R.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 566	L.H. CONSOLE - BOOM MICRO	MOLEX	4	562507	562503
C 567	L.H. CONSOLE - DRIVERS MICRO	MOLEX	4	562507	562503
C 568	SOUND SYS. JCT. PANEL - PASS. SPK	CINCH	4	562553	562552
C 569	SOUND SYS. JCT. PANEL - POWER AMPLI.	MOLEX	9	562556	562555
C 570	UNDER DASH PANEL TTLT	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT	MOLEX	8		562465
C 574	HAT -RACK FLUOR. INDIRECT LIGHTING	MOLEX	6	----------	562759
C 575	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 576	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 577	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 578	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 579	L.H HAT RACK – VCP POWER	MOLEX	4		563071
C 580	RH DASH PANEL-HAT RACK FAN SW	EATON	8	--------	562763
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587	LH PARCEL RACK DVD UNIT	MOLEX	4	563040	563071
C 588	FRONT SERVICE CPT. CENTER SOUND SYS.	CONNXALL	9	563163	563089

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 589	UNDER DASH - L.H. MIRROR	CONNXALL	9	563163	563089
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593	BATTERY CMPT. - CHARGER	PED WP	3	561781	561782
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476
C 596	DASH CENTER MODULE - CLOSE DOOR	MOLEX	4	561477	561476
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 599	UND.DASH-MAGN.SW.CTR POS. DR'S AIR	AMP MNL	2	561248	561247
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601	L.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 602	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 603	R.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 604	LH PARCEL RACK DVD VIDEO STABILIZER	SWITCHCRAFT	1	563074	
C 605	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 606	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 607					
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
C 609	LAVATORY - NIGHT LIGHT				
C 610					
C 611	HAT RACK READING LTS RICON	MOLEX	6	562558	562557
C 612	HAT -RACK FLUOR. INSTATION LTS RICON	MOLEX	4	562507	562503
C 613	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 614	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 615	LH PARCEL RACK DVD SING ALONG ADAPT.	MOLEX	2	562550	562549
C 616					
C 701	ZF TRANSMISSION ECU	KOSTAL	20		
C 702	SHIFT SELECTOR – LH CONSOLE	AMP	14		563338
C 712	NEUTRAL SWITCH ON ZF TRANSM. (TOP)	AMP	4		563340
C 714	OUTPUT SENSOR ON ZF TRANSM. (BOTTOM)	AMP	4		563340
C 717	BATT. CPT - MAIN CONNECTOR	AMP CPC	22	561642	561643
C 720	ENGINE COMPT – BLKHD CONNECTOR	DEUTSCH	31	563359	563358
C 721	LH CONSOLE – ZF TESTMAN DIAGNOSTIC	AMP MNL	6	563356	
C 723	ENGINE COMPT – FOR TRANSM.	DEUTSCH	3		562884
C 736	ENGINE COMPT – ZMTEC MODULE	PACKARD	30	563053	
C 740	DRIVE AXLE – EASY START SOL VALVE	LEONI	2	--	641949
C 742	BATT. CPT – FUSE BLOCK	AMP	8	562446	
C 745	FR SERV.COMPT – THROTTLE POS. SENSOR	PED WP	3	561781	
C 760	FR SERV. COMPT – TO J1939	DEUTSCH	3		
C 761	FR SERV. COMPT – TO J1939	DEUTSCH	3		562884
C 762	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 763	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 764	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 765	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 766	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C X	CLUSTER	JAE	22		562766
C Y	CLUSTER	JAE	30		562767
L X	CLUSTER	JAE	22		562764
L					
R					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
AA1	BEHIND DASH - SONALERT	BOSCH	5		561183
AA2	BEHIND DASH - SONALERT	BOSCH	5		561183
C X1	FR SERVICE COMPT- ECU ABS	AMP	15		563200
C X2	FR SERVICE COMPT- ECU ABS	AMP	18		563201
C RXTX	HVAC DASN MODULE COMMUNICATION	MOLEX	3	563206	562873
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C TCI	ENGINE CPT – DDEC V TURBO TEMP.	FCI	2		563404
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
C WX1	ENGINE CPT-WEBASTO PRE-HEAT WATER	AMP SEALED	7		563135
C WX3	ENGINE CPT-WEBASTO PRE-HEAT WATER	AMP SEALED	7	563134	
C Y	CLUSTER	JAE	30	---	562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 7					
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10	LUGGAGE COMPT. WATER BOOSTER PUMP	PED	2	562348	562471
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	A/C CLUTCH	PED WP	2	561566	561690
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	DEUTSCH	70	562282	562285
C 21	RR JCT BOX	DEUTSCH	24	562280	562283
C 22	RR JCT BOX - EATON TRANSM.	AMP MNL	6	561552	561515
C 23					
C 24					
C 25					
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690
C 28	EATON TRANSMISSION	DEUTCH	3	562877	562884
C 29	EATON TRANSMISSION	PED MP	6	562878	------
C 30	RR JCT BOX - ECU EATON TRANSM.	PED MP	32	------	562866
C 31	RR JCT BOX - ECU EATON TRANSM.	PED MP	24	------	562865
C 32	DDEC ENGINE-ECM	AMP	68	------	563403
C 33	RR JCT BOX - EATON TRANSM.	DEUTCH	9	562531	------
C 34	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	3	------	562871
C 35	RR JCT BOX	DEUTCH	40	562281	562284
C 36	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	24	------	562874
C 37	RR SECTION-LH HAT RACK	MOLEX	6	562558	562557
C 38	RR SECTION-RH HAT RACK	MOLEX	6	562558	562557
C 39	LH CONSOLE - EATON TRANSM. DISPLAY	AMP MNL	4	561551	561668
C 40	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 41	LAVATORY ROOF LIGHT	LEECRAFT	2	-----	562803
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662
C 44	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERVICE CMPT.PRESS SW PARKBREAK	PED WP	2	561566	561690
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577
C 51					
C 52	RR JCT BOX	AMP CPC	24	561642	561643
C 53	SPARE TIRE COMPT ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 54	SPARE TIRE COMPT ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56	HAT RACK- MOTOR FAN	MOLEX	6	562558	562557
C 57	HAT RACK- MOTOR FAN	MOLEX	6	562558	562557
C 58	RR JCT BOX AC PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX AC PANEL	AMP CPC	14	561584	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	16	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	SERV CPT. RXT. ENT. DOOR SW	DEUTSCH	4	562479	562477
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 78					
C 79					
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100	------	562248	------
C 86					
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88	FR. SERVICE CMPT.PRESS SW PARK BRAKE	PED WP	2	561566	561690
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS		35	------	641094
C 94	RH CONSOLE ENTRANCE STEP LIGHT	DEUTCH	2	562486	562485
C 95	CONDENSOR CPT - LIQ. SOL. VALVE	PED WP	2	561566	561690
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100	LH CONSOLE – 120 VOLTS SWITCH	EATON	8	------	562763
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	SIDE (LH/FR & CENTER) DIR. LTS	GROTE	2	------	562155
C 103	SIDE (LH/FR & CENTER) MARKER LTS	GROTE	2	------	562155
C 104	SIDE (RH/FR & CENTER) DIR. LTS	DEUTSCH	4	562479	562477
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107					
C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	LAVATORY BACK WALL-FLUSH PUMP SW.	DEUTSCH	4	562479	562477
C 113	SIDE (LH/RR) MARKER LTS	GROTE	2	------	562155
C 114	SIDE (LH/RR) DIR LTS	GROTE	2	------	562155
C 115					
C 116	ENGINE COMPT. LTS	GROTE	2		563268
C 117	SIDE (RH/RR) MARKER LTS	GROTE	2	------	562155
C 117	FR SRV. COMPT. KNEELING UP SOL VALVE	PED WP	2	561761	
C 118	ENGINE COMPT-LAVATORY FAN	PED WP	2	561566	561690
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 121	SIDE (RH/RR) DIR. LTS	GROTE	2	------	562155
C 122					
C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129					
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX - A/C PANEL DIODE CONN.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 143					
C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150					
C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PNEUMAC	4	563204	
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157					
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	641132	------
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172					
C 173					
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080
C 185					
C 186					
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188	KNEELING UP ALARM – NJ COACHE ONLY	AMP MNL	15	561987	561986
C 189	ENGINE CPT RR DOOR B/U LT	TRUCK-LITE	2	------	562755
C 190	ENGINE CPT RR DOOR TAIL/ STOP LT	SUPER SEAL	3		562601
C 191	ENGINE CPT RR DOOR RH TAIL/STOP LT	SUPER SEAL	3		562601
C 192	ENGINE CPT RR DOOR DIR. LT	SUPER SEAL	3		562601
C 193					
C 194					
C 195					
C 198	ENGINE CPT RR DOOR LICENCE LT	PED WP	2	562348	562471
C 199					
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 202	RH HAT RACK-INDIRECT LIGHTING	MOLEX	2	---------	562758
C 203	RH HAT RACK-INDIRECT LIGHTING	MOLEX	6	---------	562759
C 204	RH HAT RACK-GENERAL LT	AMP MNL	2	560900	560898
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 206	RH HAT RACK-READING LT	AMP FF	4	----------	562756
C 207	LH HAT RACK-READING LT	AMP FF	4	----------	562756
C 208	LH HAT RACK-BALLAST	MOLEX	2	----------	562758
C 209	LH HAT RACK HOTESS CHIME	AMP MNL	3	561667	561550
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214	ENGINE CPT J1922				
C 215	TAG AXLE - A.T.C. SYSTEM				
C 216	TAG AXLE - A.T.C. SYSTEM				
C 217	RH DASH PANEL-FRONT CAMERA SW	EATON	8	--------	562763
C 218	RH DASH PANEL-FRONT CAMERA SW	AMP MNL	2	560900	560898
C 219	ENGINE CMPT. – FIRE DETECTOR	DEUTSCH	2	562486	562485
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETCTOR	DEUTSCH	2	562486	562485
C 224	ENGINE CMPT. -VORAD J1939	DEUTSCH	3	562877	562884
C 225	ENGINE CMPT. -VORAD J1939	DEUTSCH	3	562877	562884
C 226	FR LH UPPER WHEEL CPT-VORAD J1939	DEUTSCH	3	562677	562884
C 227					
C 228	ENG.CPT.- A/C COMPRESSOR	PED WP	2	561566	561690
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233	FR. SERVICE COMPT.	VDO	8		562043
C 234	FR. SERVICE COMPT.	VDO	8		562044
C 235	FR. SERVICE COMPT.	VDO	8		562041
C 236	LUGGAGE COMPARTEMENT	AMP MNL	4	560851	560852
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C 238	UNDER DASH LH-PASS. REC. DAMPER SW	EATON	8	------	562763
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	3	561781	562428
C 241	HEADLAMPS HI BEAM	HELLA	2		562623
C 242	HALOGEN HEAHLAMPS LO BEAM	HELLA	2		562623
C 242	XENON HEADLAMPS LO BEAM	DELPHI	2		563366
C 243	FRONT CAP- HEADLIGHTS MAIN CONN	DEUTCH	6	565131	562789
C 244	FR SERVICE CPT-LH FOG LAMP	DEUTCH	2	562902	562901
C 245	FR SERVICE CPT-RH FOG LAMP	DEUTCH	2	562902	562901
C 246	UNDER DASH - L.H. MIRROR	CONNXALL	5	563196	563090
C 247	HEADLAMPS MARK & DIR LTS	AMP SUPER S	3		562601
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250	LH CONSOL PANEL- LOW BOY	PED	2	561566	561690
C 251	LH DASH PANEL-FAST IDLE SW	EATON	8	------	562763
C 252					
C 253	LH DASH PANEL-ETHER SW	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH DASH PANEL-JACOB & RETARDER SW	EATON	8	------	562763
C 256					
C 257					
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268					
C 269	UNDER DASH - R.H. MIRROR	CONNXALL	5	563196	563090
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274	RR. JCT. BOX – SIGNAL ALT. MODULE	AMP MNL	12	561735	561734
C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 277					
C 278					
C 279 *	FR SERVICE CPT.- STEERING ZF	DEUTCH	2		562486
C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 280	LH CONSOLE-UNLOAD TAG SW.	NGR	10	------	562763
C 281					
C 282					
C 283					
C 284	LH DR'S ROOF - MONITOR FEED	PED WP	3	561781	561782
C 285	LH DR'S ROOF – SOUND SYSTEM	AMP CPC	24	561642	561643
C 286	RH SW PANEL-A/C & HEAT	EATON	8	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	8	------	562763
C 289					
C 290					
C 291					
C 292	LH PARCEL RACK VIDEO PANEL– MONITOR	MOLEX	4	563040	563071
C 293	LH PARCEL RACK VIDEO PAN. – RCA RELAY	AMP MNL	2	561248	561247
C 294	LH PARCEL RACK VIDEO PAN.– RCA RELAY	AMP MNL	2	561248	561247
C 295	LH PARCEL RACK VID. PANEL– AMPLI VIDEO	MOLEX	4	563040	563071
C 296	LH PARCEL RACK VIDEO PAN. – MICRO SIGNAL	MOLEX	4	562507	562503
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299	RH DASH PANEL SW-GALLEY	EATON	8	------	562763
C 300	FR SERVICE CPT.- LOW BEAM RESISTORS	PED WP	2	561566	561690
C 301	FR SERVICE CPT.- DR'S FAN SPEED	PED WP	1	561605	561577
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309					
C 310	LH DASH PANEL -LUG. DOOR LCK SW	EATON	8	------	562763
C 311	RH DASH PANEL -HOS & PAS CHIME SW	EATON	8	------	562763
C 312	RH DASH PANEL -READING LTS SW	EATON	8	------	562763
C 313	RH DASH PANEL -GEN & FLUOR LTS SW	EATON	8	------	562763
C 314	LH DASH PANEL-FR DEST. SIGN SW	EATON	8	------	562763
C 315	LH DASH PANEL-LH STORE SW	EATON	8	------	562763
C 316	LH CONSOLE SPARE SWITCH	EATON	8	------	562763
C 317	LH DASH PANEL-RH STORE SW	EATON	8	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	8	------	562763
C 319					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 320	RH DASH PANEL-DRIVER'S LTS SW	EATON	8	------	562763
C 321	READING LTS TEST				
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637
C 324					
C 325	LH DASH PANEL-KNEELING SW	EATON	8	------	562763
C 326	ENGINE CMPT.	PED	4	------	561610
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331	GALLEY MICROWAVE SW	EATON	8	------	562763
C 332					
C 333	GALLEY RH CONTAINER SW	EATON	8	------	562763
C 334	GALLEY LH CONTAINER SW	EATON	8	------	562763
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346					
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360					
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376					
C 377	LH DASH PANEL-STOP ENG.OVERIDE SW	EATON	8	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381					
C 382					
C 383					
C 384					
C 385	EVAPOTATOR COMP WATER PUMP	PED WP	2	561566	561690
C 386	LH DASH PANEL-WCL POWER SYSTEM SW	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734
C 389	WCL REAR DOOR	MOLEX	4	561477	561476
C 390	LAVATORY WALL-WCL REMOTE CTR	EATON	8	------	562763
C 391	LAVATORY WALL-WCL LAMP	EATON	8	------	562763
C 392	LAVATORY WALL-WCL SW. LT.	EATON	2	------	561835
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	------	------
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398	ENGINE COMPT. – PRE-EXITATION ALT.	PED WP	2	561566	561690
C 399					
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401	EVAPORATOR COMP.	PED WP	1	561605	561577
C 401	EVAPORATOR COMP.	PED WP	1	561605	561577
C 402					
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247
C 404	GALLEY LAMP	AMP MNL	2	561248	561247
C 405	LAST LUGGAGE COMP.- INVERTER SIGNAL	AMP MNL	2	561248	561247
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407					
C 408					
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH DASH PANEL-MASTER SWITCH SW	EATON	8	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414					
C 415	RR JCT BOX – ENGINE SIGNAL	DEUTSCH	24	562280	562283
C 416					
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	LH DASH PANEL-HTR WINDSH.SW	EATON	8	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420					
C 421					
C 422					
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427	PRO-HEAT	PED-WP	2	561566	561680
C 428	PRO-HEAT	PED WP	6	561606	561607
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	PED-WP	2	561566	561680
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 438	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 439	EVAP CMPT- A/C CONTROL	AMP MNL	2	561248	561247
C 440	EVAP CMPT- A/C CONTROL	DEUTSCH	4	562479	562477
C 441	FR JCT BOX- DIODES	AMP MNL	15	561987	561986
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680
C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 455	WIRELESS MICRO-LH HAT-RACK	MOLEX	6	------	562464
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDR CONNECTOR	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468			8		
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	DEUTSCH	2	562486	562485
C 476					
C 477					
C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 479	HVAC MODULE	MOLEX	3		562783
C 480	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	4	561889	561890
C 481	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	------	562237
C 484	UNDER DASH LH.-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH.-DASH & DEFR. DAM.MOT.	AMP MNL	3	561667	561550
C 486					
C 487	S.S.PANEL – AUDIO IN AMPLI	MOLEX	4	------	563071
C 488	S.S.PANEL – AMPLI SIGNAL	MOLEX	8	------	562465
C 489	S.S.PANEL – SPEAKER OUTLET	MOLEX	6	------	562464
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER	PED MP	7	562433	------
C 502	LH DASH PANEL-PRE HEATER SW.	EATON	8	------	562763
C 503	LH CONSOLE-PRE HEATER SW.	EATON	2	------	561837
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	9	------	562681
C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	562580
C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 522					
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562610	---
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562610	---
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 543	EVAPORATOR COMP.	PED WP	1	561605	561577
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 546	WIRELESS MIC. CHARGING SYSTEM	MOLEX	2	--------	563025
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	8	------	562763
C 549	LH DASH PANEL-FAN CLUTCH OVERR. SW	EATON	8	------	562763
C 550	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 551	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 552	LAST LUGG. CPT. -WCL RICON	AMP CPC	9	561636	561637
C 553	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 554	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 555	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 556	UNDER DASH R.H. - RADIO ACC.	MOLEX	2	562550	562549
C 557	UNDER DASH R.H. - RADIO ACC.	MOLEX	9	562556	562555
C 558	UNDER DASH R.H. - RADIO ACC.	MOLEX	4	562507	562503
C 559	SOUND SYS. JCT. PANEL – FILTER AMPLI	PED WP	2	561566	561690
C 560	SOUND SYS. JCT. PANEL – POWER AMPLI	MOLEX	4	562507	562503
C 561	L.H. HAT RACK - WIRELESS MICRO	MOLEX	8		562465
C 562	L.H. HAT RACK - VCP	MOLEX	12	562556	563070
C 563	L.H MODESTY PANEL - DRIVERS SPK.	MOLEX	4	562507	562503
C 564	L.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 565	R.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 566	L.H. CONSOLE - BOOM MICRO	MOLEX	4	562507	562503
C 567	L.H. CONSOLE - DRIVERS MICRO	MOLEX	4	562507	562503
C 568	SOUND SYS. JCT. PANEL - PASS. SPK	CINCH	4	562553	562552
C 569	SOUND SYS. JCT. PANEL - POWER AMPLI.	MOLEX	9	562556	562555
C 570	UNDER DASH PANEL TTLT	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT	MOLEX	8		562465
C 574	HAT -RACK FLUOR. INDIRECT LIGHTING	MOLEX	6	----------	562759
C 575	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 576	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 577	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 578	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 579	L.H HAT RACK – VCP POWER	MOLEX	4		563071
C 580	RH DASH PANEL-HAT RACK FAN SW	EATON	8	--------	562763
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587	LH PARCEL RACK DVD UNIT	MOLEX	4	563040	563071

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 588	FRONT SERVICE CPT. CENTER SOUND SYS.	CONNXALL	9	563163	563089
C 589	UNDER DASH - L.H. MIRROR	CONNXALL	9	563163	563089
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593	BATTERY CMPT. - CHARGER	PED WP	3	561781	561782
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476
C 596	DASH CENTER MODULE - CLOSE DOOR	MOLEX	4	561477	561476
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 599	UND.DASH-MAGN.SW.CTR POS. DR'S AIR	AMP MNL	2	561248	561247
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 602	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 603	R.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 604	LH PARCEL RACK DVD VIDEO STABILIZER	SWITCHCRAFT	1	563074	
C 605	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 606	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 607					
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
C 609	LAVATORY - NIGHT LIGHT				
C 610					
C 611	HAT RACK READING LTS RICON	MOLEX	6	562558	562557
C 612	HAT -RACK FLUOR. INSTATION LTS RICON	MOLEX	4	562507	562503
C 613	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 614	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 615	LH PARCEL RACK DVD SING ALONG ADAPT.	MOLEX	2	562550	562549
C 616					
C 701	ZF TRANSMISSION ECU	KOSTAL	20		
C 702	SHIFT SELECTOR – LH CONSOLE	AMP	14		563338
C 712	NEUTRAL SWITCH ON ZF TRANSM. (TOP)	AMP	4		563340
C 714	OUTPUT SENSOR ON ZF TRANSM. (BOTTOM)	AMP	4		563340
C 717	BATT. CPT - MAIN CONNECTOR	AMP CPC	22	561642	561643
C 720	ENGINE COMPT – BLKHD CONNECTOR	DEUTSCH	31	563359	563358
C 721	LH CONSOLE – ZF TESTMAN DIAGNOSTIC	AMP MNL	6	563356	
C 723	ENGINE COMPT – FOR TRANSM.	DEUTSCH	3		562884
C 736	ENGINE COMPT – ZMTEC MODULE	PACKARD	30	563053	
C 740	DRIVE AXLE – EASY START SOL VALVE	LEONI	2	--	641949
C 742	BATT. CPT – FUSE BLOCK	AMP	8	562446	
C 745	FR SERV.COMPT – THROTTLE POS. SENSOR	PED WP	3	561781	
C 760	FR SERV. COMPT – TO J1939	DEUTSCH	3		
C 761	FR SERV. COMPT – TO J1939	DEUTSCH	3		562884
C 762	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 763	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 764	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 765	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C 766	ENGINE COMPT – TO J1939	DEUTSCH	3		562884
C X	CLUSTER	JAE	22		562766
C Y	CLUSTER	JAE	30		562767
L X	CLUSTER	JAE	22		562764
L					
R					

DIODES NUMBER CODE

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 1	13.1	3A	560931	EVAP.COMP.	BYPASS VALVE
D 2					
D 3	1.1	3A	561740	RR JCT BOX	24V DISC. CUT OUT RLY
D 4	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 5	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 6	5	3A	561740	FR JCT BOX	WCL NEUT. SIGN INTERFACE TO PARK BRK TTLT
D 7					
D 8	9.1	3A	561740	FR JCT BOX	HI/LO BEAMS
D 9	12	3A	561740	FR L.H. HAT-RACK	HOSTESS & PASSENGER CHIME
D 10	9.1	3A	561740	FR JCT BOX	DAY-TIME RUN LIGHT –ENGINE NOT RUN
D 11	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D 12	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D 13	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D 14	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D 15	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-UP
D 16	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-DOWN
D 17	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 18	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 19	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-PARK BRK CALL SW.
D 20	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-HEAD LT SW
D 21	18	3A	561740	FR JCT BOX	KNEELING SYSTEM FEED BACK
D 22	4.2	3A	561740	FR JCT BOX	ALTERNATOR POWER IGNITION
D 23					
D 24					
D 25	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 26	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 27	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 28	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 29	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 30	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 31					
D 32					
D 33					
D 34					
D 35	25	3A	561740	RR JCT BOX	WCL DOOR AJAR ALARM T.T.LT.
D 36	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 37	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 38	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 39					
D 40					
D 41					
D 42					
D 43	10	3A	561740	LOWER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 44	10	3A	561740	LOWER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 45	10	3A	561740	UPPER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 46	9.3	3A	561740	RR JCT BOX	PARK BRAKE STOP LIGHT
D 47	9.3	3A	561740	RR JCT BOX	CYCLOP LTS
D 48					
D 49					
D 50					
D 51					
D 52					
D 53					
D 54					
D 55	25	3A	561740	RR JCT BOX	SHIFTER INHIBIT R109
D 56	9.3	3A	561740	RR JCT BOX	PARK BRAKE STOP LTS SIGNAL BLOCKED
D 57					

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 58	17	3A	561740	FR JCT BOX	RR HIGH BUOY - KNEELING
D 59	13.2	3A	561740	RR JCT BOX	A/C & HEAT BYPASS SWITCH
D 60	13.1	3A	561740	RR JCT BOX	A/C PASS. LIQ. SOL. VALVE
D 61	9.2	3A	561740	FR JCT BOX	KNEELING SIDE FR RH DIRECTIONNAL LT
D 62	13.2	3A	561740	RR JCT BOX	WATER PUMP FEED
D 63	17	3A	561740	FR JCT BOX	LAVATORY SONALERT
D 64	17	3A	561740	FR JCT BOX	WCL DOOR ALARM
D 65	13.2	3A	561740	RR JCT BOX	WATER PUMP - PRE-HEAT FEED
D 66	13.2	3A	561740	RR JCT BOX	WATER VALVE - HEAT SW. FEED
D 67	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - RH
D 68	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - LH
D 69					
D 70	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 71	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 72	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 73	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 74					
D 75	4	3A	381351	RR JCT BOX	STARTER-SUPPRESSOR COIL RLY
D 76	9.3	3A	561740	RR JCT BOX	STOP LIGHT RLY
D 77	18	3A	561740	FR JCT BOX	PARKING BRAKE - KNEELING
D 78	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 79	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 80					
D 81	18	3A	561740	FR JCT BOX	PIEZO-KNEELING
D 82	8.1	3A	561740	RR JCT BOX	FAN CLUTCH
D 83	8	3A	561740	RR JCT BOX	FAN CLUTCH W/RETARDER
D 84	13.2	3A	561740	RR JCT BOX	WATER VALVE
D 85	16.1	3A	561740	FR JCT BOX	ENTRANCE DOOR SEDAN
D 86	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 87	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 88	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 89	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 90	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 91	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D F1	8.1	3A	561740	RR. JCT. BOX	FAN CLUTCH - SUPPRESSOR
D F2	8.1	3A	561740	RR. JCT. BOX	FAN CLUTCH - SUPPRESSOR

DIODES NUMBER CODE

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 1	13.1	3A	560931	EVAP.COMP.	BYPASS VALVE
D 2					
D 3	1.1	3A	561740	RR JCT BOX	24V DISC. CUT OUT RLY
D 4	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 5	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 6	5	3A	561740	FR JCT BOX	WCL NEUT. SIGN INTERFACE TO PARK BRK TTLT
D 7					
D 8	9.1	3A	561740	FR JCT BOX	HI/LO BEAMS
D 9	12	3A	561740	FR L.H. HAT-RACK	HOSTESS & PASSENGER CHIME
D 10	9.1	3A	561740	FR JCT BOX	DAY-TIME RUN LIGHT –ENGINE NOT RUN
D 11	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D 12	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D 13	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D 14	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D 15	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-UP
D 16	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-DOWN
D 17	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 18	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 19	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-PARK BRK CALL SW.
D 20	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-HEAD LT SW
D 21	18	3A	561740	FR JCT BOX	KNEELING SYSTEM FEED BACK
D 22	4.2	3A	561740	FR JCT BOX	ALTERNATOR POWER IGNITION
D 23					
D 24					
D 25	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 26	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 27	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 28	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 29	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 30	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 31					
D 32					
D 33					
D 34					
D 35	25	3A	561740	RR JCT BOX	WCL DOOR AJAR ALARM T.T.LT.
D 36	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 37	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 38	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 39					
D 40					
D 41					
D 42					
D 43	10	3A	561740	LOWER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 44	10	3A	561740	LOWER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 45	10	3A	561740	UPPER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 46	9.3	3A	561740	RR JCT BOX	PARK BRAKE STOP LIGHT
D 47	9.3	3A	561740	RR JCT BOX	CYCLOP LTS
D 48					
D 49					
D 50					
D 51					
D 52					
D 53					
D 54					
D 55	25	3A	561740	RR JCT BOX	SHIFTER INHIBIT R109
D 56	9.3	3A	561740	RR JCT BOX	PARK BRAKE STOP LTS SIGNAL BLOCKED
D 57					

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 58	17	3A	561740	FR JCT BOX	RR HIGH BUOY - KNEELING
D 59	13.2	3A	561740	RR JCT BOX	A/C & HEAT BYPASS SWITCH
D 60	13.1	3A	561740	RR JCT BOX	A/C PASS. LIQ. SOL. VALVE
D 61	9.2	3A	561740	FR JCT BOX	KNEELING SIDE FR RH DIRECTIONNAL LT
D 62	13.2	3A	561740	RR JCT BOX	WATER PUMP FEED
D 63	17	3A	561740	FR JCT BOX	LAVATORY SONALERT
D 64	17	3A	561740	FR JCT BOX	WCL DOOR ALARM
D 65	13.2	3A	561740	RR JCT BOX	WATER PUMP - PRE-HEAT FEED
D 66	13.2	3A	561740	RR JCT BOX	WATER VALVE - HEAT SW. FEED
D 67	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - RH
D 68	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - LH
D 69					
D 70	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 71	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 72	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 73	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 74					
D 75	4	3A	381351	RR JCT BOX	STARTER-SUPPRESSOR COIL RLY
D 76	9.3	3A	561740	RR JCT BOX	STOP LIGHT RLY
D 77	18	3A	561740	FR JCT BOX	PARKING BRAKE - KNEELING
D 78	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 79	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 80					
D 81	18	3A	561740	FR JCT BOX	PIEZO-KNEELING
D 82	8.1	3A	561740	RR JCT BOX	FAN CLUTCH
D 83	8	3A	561740	RR JCT BOX	FAN CLUTCH W/RETARDER
D 84	13.2	3A	561740	RR JCT BOX	WATER VALVE
D 85	16.1	3A	561740	FR JCT BOX	ENTRANCE DOOR SEDAN
D 86	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 87	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 88	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 89	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 90	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 91	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 92	6.3	3A	561740	RR JCT. BOX	ZF TRANSMISSION
D 93	6.3	3A	561740	RR JCT. BOX	ZF TRANSMISSION
D F1	8.1	3A	561740	RR. JCT. BOX	FAN CLUTCH - SUPPRESSOR
D F2	8.1	3A	561740	RR. JCT. BOX	FAN CLUTCH - SUPPRESSOR

DIODES NUMBER CODE

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 1	13.1	3A	560931	EVAP.COMP.	BYPASS VALVE
D 2					
D 3	1.1	3A	561740	RR JCT BOX	24V DISC. CUT OUT RLY
D 4	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 5	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 6	5	3A	561740	FR JCT BOX	WCL NEUT. SIGN INTERFACE TO PARK BRK TTLT
D 7					
D 8	9.1	3A	561740	FR JCT BOX	HI/LO BEAMS
D 9	12	3A	561740	FR L.H. HAT-RACK	HOSTESS & PASSENGER CHIME
D 10	9.1	3A	561740	FR JCT BOX	DAY-TIME RUN LIGHT –ENGINE NOT RUN
D 11	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D 12	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D 13	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D 14	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D 15	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-UP
D 16	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-DOWN
D 17	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 18	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 19	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-PARK BRK CALL SW.
D 20	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-HEAD LT SW
D 21	18	3A	561740	FR JCT BOX	KNEELING SYSTEM FEED BACK
D 22	4.2	3A	561740	FR JCT BOX	ALTERNATOR POWER IGNITION
D 23					
D 24					
D 25	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 26	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 27	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 28	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 29	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 30	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 31					
D 32					
D 33	13.2	3A	561740	UNDER DASH	PASS. REC. DAMPER SW.
D 34					
D 35	25	3A	561740	RR JCT BOX	WCL DOOR AJAR ALARM T.T.LT.
D 36	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 37	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 38	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 39					
D 40					
D 41					
D 42					
D 43	10	3A	561740	LOWER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 44	10	3A	561740	LOWER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 45	10	3A	561740	UPPER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 46	9.3	3A	561740	RR JCT BOX	PARK BRAKE STOP LIGHT
D 47	9.3	3A	561740	RR JCT BOX	CYCLOP LTS
D 48					
D 49					
D 50					
D 51					
D 52					
D 53					
D 54					
D 55	25	3A	561740	RR JCT BOX	SHIFTER INHIBIT R109
D 56	9.3	3A	561740	RR JCT BOX	PARK BRAKE STOP LTS SIGNAL BLOCKED
D 57					

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 58	17	3A	561740	FR JCT BOX	RR HIGH BUOY - KNEELING
D 59	13.2	3A	561740	RR JCT BOX	A/C & HEAT BYPASS SWITCH
D 60	13.1	3A	561740	RR JCT BOX	A/C PASS. LIQ. SOL. VALVE
D 61	9.2	3A	561740	FR JCT BOX	KNEELING SIDE FR RH DIRECTIONNAL LT
D 62	13.2	3A	561740	RR JCT BOX	WATER PUMP FEED
D 63	17	3A	561740	FR JCT BOX	LAVATORY SONALERT
D 64	17	3A	561740	FR JCT BOX	WCL DOOR ALARM
D 65	13.2	3A	561740	RR JCT BOX	WATER PUMP - PRE-HEAT FEED
D 66	13.2	3A	561740	RR JCT BOX	WATER VALVE - HEAT SW. FEED
D 67	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - RH
D 68	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - LH
D 69					
D 70	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 71	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 72	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 73	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 74					
D 75	4	3A	381351	RR JCT BOX	STARTER-SUPPRESSOR COIL RLY
D 76	9.3	3A	561740	RR JCT BOX	STOP LIGHT RLY
D 77	18	3A	561740	FR JCT BOX	PARKING BRAKE - KNEELING
D 78	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 79	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 80					
D 81	18	3A	561740	FR JCT BOX	PIEZO-KNEELING
D 82	8.1	3A	561740	RR JCT BOX	FAN CLUTCH
D 83	8	3A	561740	RR JCT BOX	FAN CLUTCH W/RETARDER
D 84	13.2	3A	561740	RR JCT BOX	WATER VALVE
D 85	16.1	3A	561740	FR JCT BOX	ENTRANCE DOOR SEDAN
D 86	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 87	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 88	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 89	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 90	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 91	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 92	6.3	3A	561740	RR JCT. BOX	ZF TRANSMISSION
D 93	6.3	3A	561740	RR JCT. BOX	ZF TRANSMISSION
D F1	8.1	3A	561740	RR. JCT. BOX	FAN CLUTCH - SUPPRESSOR
D F2	8.1	3A	561740	RR. JCT. BOX	FAN CLUTCH - SUPPRESSOR

DIODES NUMBER CODE

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 1	13.1	3A	560931	EVAP.COMP.	BYPASS VALVE
D 2					
D 3	1.1	3A	561740	RR JCT BOX	24V DISC. CUT OUT RLY
D 4	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 5	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 6	5	3A	561740	FR JCT BOX	WCL NEUT. SIGN INTERFACE TO PARK BRK TTLT
D 7					
D 8	9.5	3A	561740	FR JCT BOX	HI / LO BEAMS
D 9	12	3A	561740	FR L.H. HAT-RACK	HOSTESS & PASSENGER CHIME
D 10	9.1	3A	561740	FR JCT BOX	DAY-TIME RUN LIGHT –ENGINE NOT RUN
D 11	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D 12	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D 13	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D 14	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D 15	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-UP
D 16	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-DOWN
D 17	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 18	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 19	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-PARK BRK CALL SW.
D 20	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-HEAD LT SW
D 21	18	3A	561740	FR JCT BOX	KNEELING SYSTEM FEED BACK
D 22	4.2	3A	561740	FR JCT BOX	ALTERNATOR POWER IGNITION
D 23					
D 24					
D 25	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 26	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 27	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 28	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 29	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 30	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 31					
D 32					
D 33	13.2	3A	561740	UNDER DASH	PASS. REC. DAMPER SW.
D 34					
D 35	25	3A	561740	RR JCT BOX	WCL DOOR AJAR ALARM T.T.LT.
D 36	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 37	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 38	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 39					
D 40					
D 41					
D 42					
D 43	10	3A	561740	LOWER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 44	10	3A	561740	LOWER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 45	10	3A	561740	UPPER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 46	9.3	3A	561740	RR JCT BOX	PARK BRAKE STOP LIGHT
D 47	9.3	3A	561740	RR JCT BOX	CYCLOP LTS
D 48					
D 49					
D 50					
D 51					
D 52					
D 53					
D 54					
D 55	25	3A	561740	RR JCT BOX	SHIFTER INHIBIT R109
D 56	9.3	3A	561740	RR JCT BOX	PARK BRAKE STOP LTS SIGNAL BLOCKED
D 57					

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 58	17	3A	561740	FR JCT BOX	RR HIGH BUOY - KNEELING
D 59	13.2	3A	561740	RR JCT BOX	A/C & HEAT BYPASS SWITCH
D 60	13.1	3A	561740	RR JCT BOX	A/C PASS. LIQ. SOL. VALVE
D 61	9.2	3A	561740	FR JCT BOX	KNEELING SIDE FR RH DIRECTIONNAL LT
D 62	13.2	3A	561740	RR JCT BOX	WATER PUMP FEED
D 63	17	3A	561740	FR JCT BOX	LAVATORY SONALERT
D 64	17	3A	561740	FR JCT BOX	WCL DOOR ALARM
D 65	13.2	3A	561740	RR JCT BOX	WATER PUMP - PRE-HEAT FEED
D 66	13.2	3A	561740	RR JCT BOX	WATER VALVE - HEAT SW. FEED
D 67	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - RH
D 68	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - LH
D 69	19.1	3A	561740	FR JCT BOX	ENGINE BRAKE – LEAKAGE SUPPRESSOR
D 70	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 71	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 72	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 73	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 74					
D 75	4	3A	381351	RR JCT BOX	STARTER-SUPPRESSOR COIL RLY
D 76	9.3	3A	561740	RR JCT BOX	STOP LIGHT RLY
D 77	18	3A	561740	FR JCT BOX	PARKING BRAKE - KNEELING
D 78	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 79	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 80					
D 81	18	3A	561740	FR JCT BOX	PIEZO-KNEELING
D 82	8.1	3A	561740	RR JCT BOX	FAN CLUTCH
D 83	8	3A	561740	RR JCT BOX	FAN CLUTCH W/RETARDER
D 84	13.2	3A	561740	RR JCT BOX	WATER VALVE
D 85	16.1	3A	561740	FR JCT BOX	ENTRANCE DOOR SEDAN
D 86	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 87	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 88	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 89	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 90	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 91	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 92	6.3	3A	561740	RR JCT. BOX	ZF TRANSMISSION
D 93	6.3	3A	561740	RR JCT. BOX	ZF TRANSMISSION
D F1	8.1	3A	561740	RR. JCT. BOX	FAN CLUTCH - SUPPRESSOR
D F2	8.1	3A	561740	RR. JCT. BOX	FAN CLUTCH - SUPPRESSOR

DIODES NUMBER CODE

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 1	13.1	3A	560931	EVAP.COMP.	BYPASS VALVE
D 2					
D 3	1.1	3A	561740	RR JCT BOX	24V DISC. CUT OUT RLY
D 4	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 5	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 6	5	3A	561740	FR JCT BOX	WCL NEUT. SIGN INTERFACE TO PARK BRK TTLT
D 7					
D 8	9.5	3A	561740	FR JCT BOX	HI / LO BEAMS
D 9	12	3A	561740	FR L.H. HAT-RACK	HOSTESS & PASSENGER CHIME
D 10	9.1	3A	561740	FR JCT BOX	DAY-TIME RUN LIGHT –ENGINE NOT RUN
D 11	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D 12	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D 13	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D 14	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D 15	18.1	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-UP
D 16	18.1	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-DOWN
D 17	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 18	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 19	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-PARK BRK CALL SW.
D 20	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-HEAD LT SW
D 21	18	3A	561740	FR JCT BOX	KNEELING SYSTEM FEED BACK
D 22	4.2	3A	561740	FR JCT BOX	ALTERNATOR POWER IGNITION
D 23	18.1	3A	561740	FR JCT BOX	KNEELING SYSTEM UP ALARM – NY ONLY
D 24					
D 25	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 26	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 27	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 28	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 29	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 30	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 31					
D 32					
D 33	13.2	3A	561740	UNDER DASH	PASS. REC. DAMPER SW.
D 34					
D 35	25	3A	561740	RR JCT BOX	WCL DOOR AJAR ALARM T.T.LT.
D 36	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 37	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 38	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 39					
D 40					
D 41					
D 42					
D 43	10	3A	561740	LOWER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 44	10	3A	561740	LOWER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 45	10	3A	561740	UPPER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 46	9.3	3A	561740	RR JCT BOX	PARK BRAKE STOP LIGHT
D 47	9.3	3A	561740	RR JCT BOX	CYCLOP LTS
D 48					
D 49					
D 50					
D 51					
D 52					
D 53					
D 54					
D 55	25	3A	561740	RR JCT BOX	SHIFTER INHIBIT R109
D 56	9.3	3A	561740	RR JCT BOX	PARK BRAKE STOP LTS SIGNAL BLOCKED
D 57					

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 58	17	3A	561740	FR JCT BOX	RR HIGH BUOY - KNEELING
D 59	13.2	3A	561740	RR JCT BOX	A/C & HEAT BYPASS SWITCH
D 60	13.1	3A	561740	RR JCT BOX	A/C PASS. LIQ. SOL. VALVE
D 61	9.2	3A	561740	FR JCT BOX	KNEELING SIDE FR RH DIRECTIONNAL LT
D 62	13.2	3A	561740	RR JCT BOX	WATER PUMP FEED
D 63	17	3A	561740	FR JCT BOX	LAVATORY SONALERT
D 64	17	3A	561740	FR JCT BOX	WCL DOOR ALARM
D 65	13.2	3A	561740	RR JCT BOX	WATER PUMP - PRE-HEAT FEED
D 66	13.2	3A	561740	RR JCT BOX	WATER VALVE - HEAT SW. FEED
D 67	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - RH
D 68	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - LH
D 69	19.1	3A	561740	FR JCT BOX	ENGINE BRAKE – LEAKAGE SUPPRESSOR
D 70	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 71	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 72	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 73	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 74					
D 75	4	3A	381351	RR JCT BOX	STARTER-SUPPRESSOR COIL RLY
D 76	9.3	3A	561740	RR JCT BOX	STOP LIGHT RLY
D 77	18	3A	561740	FR JCT BOX	PARKING BRAKE - KNEELING
D 78	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 79	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 80					
D 81	18	3A	561740	FR JCT BOX	PIEZO-KNEELING
D 82	8.1	3A	561740	RR JCT BOX	FAN CLUTCH
D 83	8	3A	561740	RR JCT BOX	FAN CLUTCH W/RETARDER
D 84	13.2	3A	561740	RR JCT BOX	WATER VALVE
D 85	16.1	3A	561740	FR JCT BOX	ENTRANCE DOOR SEDAN
D 86	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 87	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 88	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 89	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 90	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 91	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 92	6.3	3A	561740	RR JCT. BOX	ZF TRANSMISSION
D 93	6.3	3A	561740	RR JCT. BOX	ZF TRANSMISSION
D F1	8.1	3A	561740	RR. JCT. BOX	FAN CLUTCH - SUPPRESSOR
D F2	8.1	3A	561740	RR. JCT. BOX	FAN CLUTCH - SUPPRESSOR

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R F2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2
R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY
R LA	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LATCH)
R LO	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (PRESS. SW.)
R LT	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LIGHT)
R LV	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (VALVE)
R 1	1.1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R 2	2.1	24V	561991	RR JCT BOX	ENGINE RUN (12) FR & RR
R 3					
R 4	4.1	24V	560407	RR JCT BOX	STARTING MOTOR
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.
R 6					
R 7	5.1	24V	561707	FR JCT BOX	FAST IDLE
R 8					
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS
R 10					
R 11					
R 12	7.2	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS
R 14	9.1	24V	561707	FR JCT BOX	BLINKER
R 15	9.1	24V	561707	FR JCT BOX	FR MARKER LTS
R 16	9.1	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R 17	9.1	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS
R 18	9.1	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-OUT
R 19	9.1	24V	561707	FR JCT BOX	HEADLAMPS (HI)
R 20	9.1	24V	561707	FR JCT BOX	HEADLAMPS (LO)
R 21	9.2	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT
R 22					
R 23	9.2	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT
R 24	9.2	24V	561707	FR JCT BOX	R.H. CORNERING LT
R 25	9.2	24V	561707	FR JCT BOX	L.H. CORNERING LT
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS
R 27	11.2	24V	561707	RR JCT BOX	AISLE & EMERG.EXIT - LTS
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R 29	11.3	24V	561707	RR JCT BOX	READING LTS R.H.
R 30	11.3	24V	561707	RR JCT BOX	READING LTS L.H.
R 31	11.3	24V	561707	RR JCT BOX	GENERAL LTS
R 32	11.4	24V	561707	RR JCT BOX	24V FLUORESCENT
R 34	13.1	24V	561707	RR JCT BOX	A/C SYSTEM
R 35	13.1	24V	561707	RR JCT BOX	A/C SYSTEM
R 36	13.1	24V	561707	RR JCT BOX	A/C SYSTEM
R 37	9.2	24V	561707	FR JCT BOX	KNEELING LT
R 38	13.2	24v	561707	RR JCT BOX	A/C SYSTEM
R 39	13.2	24V	561005	EVAP. CPT.	CONDENSER FAN MOTOR
R 40	13.2	24V	561014	EVAP. CPT.	CONDENSER SPEED CTR HI
R 41	13.2	24V	561005	EVAP. CPT.	CONDENSER SPEED CTR HI
R 42					
R 43	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 44	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 45	13.2	24V	561707	RR JCT BOX	A/C SYSTEM
R 46					
R 47	23.1	24V	561707	GALLEY COMPT	GALLEY-LIQUID CONTAINERS
R 48	23.1	24V	561707	GALLEY COMPT	GALLEY-COFFEE MAKER
R 49	21.1	12V	562092	FR JCT BOX	ABS - SERVICE BRK RLY
R 50	13.2	24V	561005	EVAP CPT	EVAP FAN MOTOR 1ST SPEED
R 51	11.3	24V	562092	FR JCT BOX	DRIVER'S LTS RLY- ENT. DOOR SIGN.
R 52	21.1	12V	562092	FR JCT BOX	ABS - W/TR SIGN. RETARDER
R 53	1.1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR
R 54	1.1	24V	561991	RR JCT BOX	12V CUT OUT RLY RR
R 55	1.1	24V	561991	RR JCT BOX	12V CUT OUT RLY FR
R 56	21.1				ATC LAMP
R 57	9.1	24V	561707	FR JCT BOX	DAY'S BLINKER
R 58	21.1sp1	12V	562092	FR JCT BOX	ATC TAG AXLE BREAK
R 59	9.3	12V	562092	RR JCT BOX	DOCKING LTS

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 60	13.2	24V	561707	EVAP CPT	EVAP FAN CONTROL SPEED 2
R 61	9.3	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL
R 62	5.1	24V	561707	FR JCT BOX	DDEC PARKING BRAKE RELAY
R 63	13.2	24V	560772	EVAP. CPT.	TIME DELAY EVAP. FAN
R 64					
R 65					
R 66	20.3	24V	561707	SS JCT PANEL	SOUND SYSTEM VIDEO
R 67	20.1	12V	562092	SS JCT PANEL	SOUND SYSTEM RADIO
R 68	20.1	24V	561991	SS JCT PANEL	SOUND SYSTEM AMPLIFIER
R 69					
R 70					
R 71					
R 72	23.1	24V	561005	LAST LUGG. CPT.	INVERTER CUT OFF
R 73	23.1SP	24V	561005	LAST LUGG. CPT.	INVERTER CUT OFF
R 74					
R 75					
R 76					
R 77					
R 78	1.1	12V	562092	FR JCT BOX	MASTER SWITCH
R 79	23	24V	561707	GALLEY CPT.	GALLEY-REFRIGERATOR
R 80	11.1	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R 81	17.1	24V	561707	LAVATORY SW.	LAVATORY TIMER PUMP
R 82	19	24V	561707	FR JCT BOX	RETARDER WT
R 83	26	24V	561707	RR JCT BOX	PRE-HEAT WATER HEATER
R 84	8	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R 85	8	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R 86					
R 87	19	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R 88					
R 89					
R 90	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 91					
R 92					
R 93					
R 94	25	24V	561707	RR JCT BOX	WCL - SYSTEM
R 95	25	24V	561707	RR JCT BOX	WCL - MAGNETIC SW. SIGN.
R 96	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR ALARM
R 97	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR PARK. BRAKE
R 98	25	24V	561707	RR JCT BOX	WCL -.ALTERNATOR SIGNAL
R 99	8	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 100					
R 101				RR JCT BOX	FUEL FILTER HEATER
R 102	17	24V	561707	RR JCT BOX	LAVATORY DOME
R 103	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN
R 104	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - L.H.
R 105	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - R.H.
R 106	17.1	24V	561707	RR JCT BOX	LAVATORY FAN
R 107					
R 109	25	24V	561707	RR JCT BOX	THROTTLE INHIBIT
R 119					
R PS	4.1SP1	24V	561707	FR JCT BOX	IDLE POWER SHUT DOWN
R ZF1	15.1	12V	563033	FR JCT BOX	STEERING CTL UNIT - OPTIONNAL
R ZF2	6.3	12V	562092	RR JCT BOX	EASY START CTL – ZF TRANSM. OPTION
V IMN	6	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
V IMR	6	12V	562092	RR JCT BOX	VIM WORLD TR.-B/U SIGNAL
V IM1	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
V IM2	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
V IM3	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
V IM4	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT4 RETARD. ON SIGNAL

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION	No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R F2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2
R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY
R LA	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LATCH)
R LO	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (PRESS. SW.)
R LT	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LIGHT)
R LV	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (VALVE)
R 1	1.1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R 2	2.1	24V	561991	RR JCT BOX	ENGINE RUN (12) FR & RR
R 3					
R 4	4.1	24V	560407	RR JCT BOX	STARTING MOTOR
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.
R 6					
R 7	5.1	24V	561707	FR JCT BOX	FAST IDLE
R 8					
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS
R 10					
R 11					
R 12	7.2	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS
R 14	9.1	24V	561707	FR JCT BOX	BLINKER
R 15	9.1	24V	561707	FR JCT BOX	FR MARKER LTS
R 16	9.1	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R 17	9.1	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS
R 18	9.1	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-OUT
R 19	9.1	24V	561707	FR JCT BOX	HEADLAMPS (HI)
R 20	9.1	24V	561707	FR JCT BOX	HEADLAMPS (LO)
R 21	9.2	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT
R 22					
R 23	9.2	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT
R 24	9.2	24V	561707	FR JCT BOX	R.H. CORNERING LT
R 25	9.2	24V	561707	FR JCT BOX	L.H. CORNERING LT
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS
R 27	11.2	24V	561707	RR JCT BOX	AISLE & EMERG.EXIT - LTS
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R 29	11.3	24V	561707	RR JCT BOX	READING LTS R.H.
R 30	11.3	24V	561707	RR JCT BOX	READING LTS L.H.
R 31	11.3	24V	561707	RR JCT BOX	GENERAL LTS
R 32	11.4	24V	561707	RR JCT BOX	24V FLUORESCENT
R 34	13.1	24V	561707	RR JCT BOX	A/C SYSTEM
R 35	13.1	24V	561707	RR JCT BOX	A/C SYSTEM
R 36	13.1	24V	561707	RR JCT BOX	A/C SYSTEM
R 37	9.2	24V	561707	FR JCT BOX	KNEELING LT
R 38	13.2	24v	561707	RR JCT BOX	A/C SYSTEM
R 39	13.2	24V	561005	EVAP. CPT.	CONDENSER FAN MOTOR
R 40	13.2	24V	561014	EVAP. CPT.	CONDENSER SPEED CTR HI
R 41	13.2	24V	561005	EVAP. CPT.	CONDENSER SPEED CTR HI
R 42					
R 43	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 44	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 45	13.2	24V	561707	RR JCT BOX	A/C SYSTEM
R 46					
R 47	23.1	24V	561707	GALLEY COMPT	GALLEY-LIQUID CONTAINERS
R 48	23.1	24V	561707	GALLEY COMPT	GALLEY-COFFEE MAKER
R 49	21.1	12V	562092	FR JCT BOX	ABS - SERVICE BRK RLY
R 50	13.2	24V	561005	EVAP CPT	EVAP FAN MOTOR 1ST SPEED
R 51	11.3	24V	562092	FR JCT BOX	DRIVER'S LTS RLY- ENT. DOOR SIGN.
R 52	21.1	12V	562092	FR JCT BOX	ABS - W/TR SIGN. RETARDER
R 53	1.1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR
R 54	1.1	24V	561991	RR JCT BOX	12V CUT OUT RLY RR
R 55	1.1	24V	561991	RR JCT BOX	12V CUT OUT RLY FR
R 56	21.1				ATC LAMP
R 57	9.1	24V	561707	FR JCT BOX	DAY'S BLINKER
R 58	21.1sp1	12V	562092	FR JCT BOX	ATC TAG AXLE BREAK
R 59	9.3	12V	562092	RR JCT BOX	DOCKING LTS

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 60	13.2	24V	561707	EVAP CPT	EVAP FAN CONTROL SPEED 2
R 61	9.3	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL
R 62	5.1	24V	561707	FR JCT BOX	DDEC PARKING BRAKE RELAY
R 63	13.2	24V	560772	EVAP. CPT.	TIME DELAY EVAP. FAN
R 64					
R 65					
R 66	20.3	24V	561707	SS JCT PANEL	SOUND SYSTEM VIDEO
R 67	20.1	12V	562092	SS JCT PANEL	SOUND SYSTEM RADIO
R 68	20.1	24V	561991	SS JCT PANEL	SOUND SYSTEM AMPLIFIER
R 69					
R 70					
R 71					
R 72	23.1	24V	561005	LAST LUGG. CPT.	INVERTER CUT OFF
R 73	23.1SP	24V	561005	LAST LUGG. CPT.	INVERTER CUT OFF
R 74					
R 75					
R 76					
R 77					
R 78	1.1	12V	562092	FR JCT BOX	MASTER SWITCH
R 79	23	24V	561707	GALLEY CPT.	GALLEY-REFRIGERATOR
R 80	11.1	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R 81	17.1	24V	561707	LAVATORY SW.	LAVATORY TIMER PUMP
R 82	19	24V	561707	FR JCT BOX	RETARDER WT
R 83	26	24V	561707	RR JCT BOX	PRE-HEAT WATER HEATER
R 84	8	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R 85	8	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R 86					
R 87	19	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R 88					
R 89					
R 90	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 91					
R 92					
R 93					
R 94	25	24V	561707	RR JCT BOX	WCL - SYSTEM
R 95	25	24V	561707	RR JCT BOX	WCL - MAGNETIC SW. SIGN.
R 96	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR ALARM
R 97	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR PARK. BRAKE
R 98	25	24V	561707	RR JCT BOX	WCL -.ALTERNATOR SIGNAL
R 99	8	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 100					
R 101				RR JCT BOX	FUEL FILTER HEATER
R 102	17	24V	561707	RR JCT BOX	LAVATORY DOME
R 103	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN
R 104	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - L.H.
R 105	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - R.H.
R 106	17.1	24V	561707	RR JCT BOX	LAVATORY FAN
R 107					
R 109	25	24V	561707	RR JCT BOX	THROTTLE INHIBIT
R 119					
R PS	4.1SP1	24V	561707	FR JCT BOX	IDLE POWER SHUT DOWN
R ZF1	15.1	12V	563033	FR JCT BOX	STEERING CTL UNIT - OPTIONNAL
R ZF2	6.3	24V	561707	RR JCT BOX	EASY START CTL – ZF TRANSM. OPTION
R ZF3	6.3	24V	561707	RR JCT BOX	DECELERATION LTS – ZF TRANSM. OPTION
V IMN	6	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
V IMR	6	12V	562092	RR JCT BOX	VIM WORLD TR.-B/U SIGNAL
V IM1	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
V IM2	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
V IM3	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
V IM4	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT4 RETARD. ON SIGNAL

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION	No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R F2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2
R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY
R LA	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LATCH)
R LO	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (PRESS. SW.)
R LT	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LIGHT)
R LV	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (VALVE)
R 1	1.1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R 2	2.1	24V	561991	RR JCT BOX	ENGINE RUN (12) FR & RR
R 3					
R 4	4.1	24V	560407	RR JCT BOX	STARTING MOTOR
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.
R 6					
R 7	5.1	24V	561707	FR JCT BOX	FAST IDLE
R 8					
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS
R 10					
R 11	6.1	24V	561707	RR JCT BOX	TRANSMISSION INHIBIT
R 12	7.2	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS
R 14	9.1	24V	561707	FR JCT BOX	BLINKER
R 15	9.1	24V	561707	FR JCT BOX	FR MARKER LTS
R 16	9.1	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R 17	9.1	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS
R 18	9.1	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-OUT
R 19	9.1	24V	561707	FR JCT BOX	HEADLAMPS (HI)
R 20	9.1	24V	561707	FR JCT BOX	HEADLAMPS (LO)
R 21	9.2	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT
R 22					
R 23	9.2	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT
R 24	9.2	24V	561707	FR JCT BOX	R.H. CORNERING LT
R 25	9.2	24V	561707	FR JCT BOX	L.H. CORNERING LT
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS
R 27	11.2	24V	561707	RR JCT BOX	AISLE & EMERG.EXIT - LTS
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R 29	11.3	24V	561707	RR JCT BOX	READING LTS R.H.
R 30	11.3	24V	561707	RR JCT BOX	READING LTS L.H.
R 31	11.3	24V	561707	RR JCT BOX	GENERAL LTS
R 32	11.4	24V	561707	RR JCT BOX	24V FLUORESCENT
R 34	13.1	24V	561707	RR JCT BOX	A/C SYSTEM
R 35	13.1	24V	561707	RR JCT BOX	A/C SYSTEM
R 36	13.1	24V	561707	RR JCT BOX	A/C SYSTEM
R 37	9.2	24V	561707	FR JCT BOX	KNEELING LT
R 38	13.2	24v	561707	RR JCT BOX	A/C SYSTEM
R 39	13.2	24V	561005	EVAP. CPT.	CONDENSER FAN MOTOR
R 40	13.2	24V	561014	EVAP. CPT.	CONDENSER SPEED CTR HI
R 41	13.2	24V	561005	EVAP. CPT.	CONDENSER SPEED CTR HI
R 42					
R 43	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 44	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 45	13.2	24V	561707	RR JCT BOX	A/C SYSTEM
R 46					
R 47	23.1	24V	561707	GALLEY COMPT	GALLEY-LIQUID CONTAINERS
R 48	23.1	24V	561707	GALLEY COMPT	GALLEY-COFFEE MAKER
R 49	21.1	12V	562092	FR JCT BOX	ABS - SERVICE BRK RLY
R 50	13.2	24V	561005	EVAP CPT	EVAP FAN MOTOR 1ST SPEED
R 51	11.3	24V	562092	FR JCT BOX	DRIVER'S LTS RLY- ENT. DOOR SIGN.
R 52	21.1	12V	562092	FR JCT BOX	ABS - W/TR SIGN. RETARDER
R 53	1.1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR
R 54	1.1	24V	561991	RR JCT BOX	12V CUT OUT RLY RR
R 55	1.1	24V	561991	RR JCT BOX	12V CUT OUT RLY FR
R 56	21.1				ATC LAMP
R 57	9.1	24V	561707	FR JCT BOX	DAY'S BLINKER
R 58	21.1sp1	12V	562092	FR JCT BOX	ATC TAG AXLE BREAK
R 59	9.3	12V	562092	RR JCT BOX	DOCKING LTS

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 60	13.2	24V	561707	EVAP CPT	EVAP FAN CONTROL SPEED 2
R 61	9.3	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL
R 62	5.1	24V	561707	FR JCT BOX	DDEC PARKING BRAKE RELAY
R 63	13.2	24V	560772	EVAP. CPT.	TIME DELAY EVAP. FAN
R 64					
R 65					
R 66	20.3	24V	561707	SS JCT PANEL	SOUND SYSTEM VIDEO
R 67	20.1	12V	562092	SS JCT PANEL	SOUND SYSTEM RADIO
R 68	20.1	24V	561991	SS JCT PANEL	SOUND SYSTEM AMPLIFIER
R 69					
R 70					
R 71					
R 72	23.1	24V	561005	LAST LUGG. CPT.	INVERTER CUT OFF
R 73	23.1SP	24V	561005	LAST LUGG. CPT.	INVERTER CUT OFF
R 74					
R 75					
R 76					
R 77					
R 78	1.1	12V	562092	FR JCT BOX	MASTER SWITCH
R 79	23	24V	561707	GALLEY CPT.	GALLEY-REFRIGERATOR
R 80	11.1	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R 81	17.1	24V	561707	LAVATORY SW.	LAVATORY TIMER PUMP
R 82	19	24V	561707	FR JCT BOX	RETARDER WT
R 83	26	24V	561707	RR JCT BOX	PRE-HEAT WATER HEATER
R 84	8	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R 85	8	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R 86					
R 87	19	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R 88					
R 89					
R 90	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 91					
R 92					
R 93					
R 94	25	24V	561707	RR JCT BOX	WCL - SYSTEM
R 95	25	24V	561707	RR JCT BOX	WCL - MAGNETIC SW. SIGN.
R 96	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR ALARM
R 97	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR PARK. BRAKE
R 98	25	24V	561707	RR JCT BOX	WCL -.ALTERNATOR SIGNAL
R 99	8	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 100					
R 101				RR JCT BOX	FUEL FILTER HEATER
R 102	17	24V	561707	RR JCT BOX	LAVATORY DOME
R 103	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN
R 104	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - L.H.
R 105	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - R.H.
R 106	17.1	24V	561707	RR JCT BOX	LAVATORY FAN
R 107					
R 109	25	24V	561707	RR JCT BOX	THROTTLE INHIBIT
R 119					
R PS	4.1SP1	24V	561707	FR JCT BOX	IDLE POWER SHUT DOWN
R ZF1	15.1	12V	563033	FR JCT BOX	STEERING CTL UNIT - OPTIONNAL
R ZF2	6.3	24V	561707	RR JCT BOX	EASY START CTL – ZF TRANSM. OPTION
R ZF3	6.3	24V	561707	RR JCT BOX	DECELERATION LTS – ZF TRANSM. OPTION
V IMN	6	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
V IMR	6	12V	562092	RR JCT BOX	VIM WORLD TR.-B/U SIGNAL
V IM1	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
V IM2	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
V IM3	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
V IM4	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT4 RETARD. ON SIGNAL

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION	No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R F2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2
R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY
R LA	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LATCH)
R LO	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (PRESS. SW.)
R LT	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LIGHT)
R LV	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (VALVE)
R 1	1.1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R 2	2.1	24V	561991	RR JCT BOX	ENGINE RUN (12) FR & RR
R 3					
R 4	4.1	24V	560407	RR JCT BOX	STARTING MOTOR
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.
R 6					
R 7	5.1	24V	561707	FR JCT BOX	FAST IDLE
R 8					
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS
R 10					
R 11	6.1	24V	561707	RR JCT BOX	TRANSMISSION INHIBIT
R 12	7.2	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS
R 14	9.1	24V	561707	FR JCT BOX	BLINKER
R 15	9.1	24V	561707	FR JCT BOX	FR MARKER LTS
R 16	9.1	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R 17	9.1	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS
R 18	9.1	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-OUT
R 19	9.1	24V	561707	FR JCT BOX	HEADLAMPS (HI)
R 20	9.1	24V	561707	FR JCT BOX	HEADLAMPS (LO)
R 21	9.2	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT
R 22					
R 23	9.2	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT
R 24	9.2	24V	561707	FR JCT BOX	R.H. CORNERING LT
R 25	9.2	24V	561707	FR JCT BOX	L.H. CORNERING LT
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS
R 27	11.2	24V	561707	RR JCT BOX	AISLE & EMERG.EXIT - LTS
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R 29	11.3	24V	561707	RR JCT BOX	READING LTS R.H.
R 30	11.3	24V	561707	RR JCT BOX	READING LTS L.H.
R 31	11.3	24V	561707	RR JCT BOX	GENERAL LTS
R 32	11.4	24V	561707	RR JCT BOX	24V FLUORESCENT
R 34	13.1	24V	561707	RR JCT BOX	A/C SYSTEM
R 35	13.1	24V	561707	RR JCT BOX	A/C SYSTEM
R 36	13.1	24V	561707	RR JCT BOX	A/C SYSTEM
R 37	9.2	24V	561707	FR JCT BOX	KNEELING LT
R 38	13.2	24v	561707	RR JCT BOX	A/C SYSTEM
R 39	13.2	24V	561005	EVAP. CPT.	CONDENSER FAN MOTOR
R 40	13.2	24V	561014	EVAP. CPT.	CONDENSER SPEED CTR HI
R 41	13.2	24V	561005	EVAP. CPT.	CONDENSER SPEED CTR HI
R 42					
R 43	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 44	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 45	13.2	24V	561707	RR JCT BOX	A/C SYSTEM
R 46					
R 47	23.1	24V	561707	GALLEY COMPT	GALLEY-LIQUID CONTAINERS
R 48	23.1	24V	561707	GALLEY COMPT	GALLEY-COFFEE MAKER
R 49	21.1	12V	562092	FR JCT BOX	ABS - SERVICE BRK RLY
R 50	13.2	24V	561005	EVAP CPT	EVAP FAN MOTOR 1ST SPEED
R 51	11.3	24V	562092	FR JCT BOX	DRIVER'S LTS RLY- ENT. DOOR SIGN.
R 52	21.1	12V	562092	FR JCT BOX	ABS - W/TR SIGN. RETARDER
R 53	1.1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR
R 54	1.1	24V	561991	RR JCT BOX	12V CUT OUT RLY RR
R 55	1.1	24V	561991	RR JCT BOX	12V CUT OUT RLY FR
R 56	21.1				ATC LAMP
R 57	9.1	24V	561707	FR JCT BOX	DAY'S BLINKER
R 58	21.1sp1	12V	562092	FR JCT BOX	ATC TAG AXLE BREAK
R 59	9.3	12V	562092	RR JCT BOX	DOCKING LTS

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 60	13.2	24V	561707	EVAP CPT	EVAP FAN CONTROL SPEED 2
R 61	9.3	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL
R 62	5.1	24V	561707	FR JCT BOX	DDEC PARKING BRAKE RELAY
R 63	13.2	24V	560772	EVAP. CPT.	TIME DELAY EVAP. FAN
R 64					
R 65					
R 66	20.3	24V	561707	SS JCT PANEL	SOUND SYSTEM VIDEO
R 67	20.1	12V	562092	SS JCT PANEL	SOUND SYSTEM RADIO
R 68	20.1	24V	561991	SS JCT PANEL	SOUND SYSTEM AMPLIFIER
R 69					
R 70					
R 71					
R 72	23.1	24V	561005	LAST LUGG. CPT.	INVERTER CUT OFF
R 73	23.1SP	24V	561005	LAST LUGG. CPT.	INVERTER CUT OFF
R 74					
R 75					
R 76					
R 77					
R 78	1.1	12V	562092	FR JCT BOX	MASTER SWITCH
R 79	23	24V	561707	GALLEY CPT.	GALLEY-REFRIGERATOR
R 80	11.1	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R 81	17.1	24V	561707	LAVATORY SW.	LAVATORY TIMER PUMP
R 82	19	24V	561707	FR JCT BOX	RETARDER WT
R 83	26	24V	561707	RR JCT BOX	PRE-HEAT WATER HEATER
R 84	8	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R 85	8	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R 86					
R 87	19	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R 88					
R 89					
R 90	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 91					
R 92					
R 93					
R 94	25	24V	561707	RR JCT BOX	WCL - SYSTEM
R 95	25	24V	561707	RR JCT BOX	WCL - MAGNETIC SW. SIGN.
R 96	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR ALARM
R 97	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR PARK. BRAKE
R 98	25	24V	561707	RR JCT BOX	WCL -.ALTERNATOR SIGNAL
R 99	8	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 100					
R 101				RR JCT BOX	FUEL FILTER HEATER
R 102	17	24V	561707	RR JCT BOX	LAVATORY DOME
R 103	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN
R 104	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - L.H.
R 105	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - R.H.
R 106	17.1	24V	561707	RR JCT BOX	LAVATORY FAN
R 107					
R 109	25	24V	561707	RR JCT BOX	THROTTLE INHIBIT
R 119					
R PS	4.1SP1	24V	561707	FR JCT BOX	IDLE POWER SHUT DOWN
R ZF1	15.1	12V	563033	FR JCT BOX	STEERING CTL UNIT - OPTIONNAL
R ZF2	6.3	24V	561707	RR JCT BOX	EASY START CTL – ZF TRANSM. OPTION
R ZF3	9.3	24V	561707	RR JCT BOX	DECELERATION LTS – ZF TRANSM. OPTION
V IMN	6	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
V IMR	6	12V	562092	RR JCT BOX	VIM WORLD TR.-B/U SIGNAL
V IM1	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
V IM2	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
V IM3	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
V IM4	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT4 RETARD. ON SIGNAL

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION	No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

RESISTORS NUMBER CODE

No.	PAGE	OHM(S)	#PREV.	LOCATION	FUNCTION
RS 1	5	11 K	561898	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 2	5	3.6 K	561897	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 3	9.3	1 (2)	561537	FR JCT BOX	FOG LT - RH
RS 4	9.3	1 (2)	561537	FR JCT BOX	FOG LT - LH
RS 5	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - LH
RS 6	16.1	5	563006	RH UNDER DASH	VOLTAGE DIV. OPEN DOOR SOL.
RS 7	9.3	.82 (2)	060806	RR JCT BOX	PARKING BRAKE STOP LTS
RS 8	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - RH
RS 9	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - RH
RS 10	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - LH
RS 11	22	12	561191	FR TOP	DEFROSTER SPEED
RS 12	22	12	561191	FR TOP	DEFROSTER SPEED
RS 13	17	80 (2)	562108	FR TOP	FR DESTINATION SIGN
RS 14					
RS 15					
RS 16					
RS 17	7	220	562498	FR JCT BOX	FIRE ALARM
RS 18	8	75 K	064208	RR JCT BOX	FAN CLUTCH W/RETARDER
RS 19	13.2	330K	065755	EVAP. CPT.	TIME DELAY RELAY EVAP. FAN
RS 20	15	1 K	562470	RR JCT BOX	WORLD TR. SPEED TO DDEC III
RS 21	22	15K	562908	DASH	CURRENT LIMIT FOR LED
RS 24	9.1	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 25	9.3	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 26	10	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 28	26.1	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 29	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 30	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 31	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 32	13.3	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 33	4.2	30	562948	RR JCT BOX	CURRENT LOAD FOR RELAY CONTACT
RS 33	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 34	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 35	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 36	13.2	10	064907	EVAP. CPT.	CURRENT LIMIT FOR RELAY
RS 37	13.2	5	064907	EVAP. CPT.	CURRENT LIMIT FOR RELAY
RS 38	21.1	620	563205	FR. SERV. COMPT	ABS
RS 39	21.1	620	563205	FR. SERV. COMPT	TRAILER ABS
RS 40					
RS 41	17.1	1M	065830	LAVATORY TRAP SW.	FLUSH PUMP TIME DELAY

RESISTORS NUMBER CODE

No.	PAGE	OHM(S)	#PREV.	LOCATION	FUNCTION
RS 1	5	11 K	561898	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 2	5	3.6 K	561897	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 3	9.3	1 (2)	561537	FR JCT BOX	FOG LT - RH
RS 4	9.3	1 (2)	561537	FR JCT BOX	FOG LT - LH
RS 5	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - LH
RS 6	16.1	5	563006	RH UNDER DASH	VOLTAGE DIV. OPEN DOOR SOL.
RS 7	9.3	.82 (2)	060806	RR JCT BOX	PARKING BRAKE STOP LTS
RS 8	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - RH
RS 9	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - RH
RS 10	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - LH
RS 11	22	12	561191	FR TOP	DEFROSTER SPEED
RS 12	22	12	561191	FR TOP	DEFROSTER SPEED
RS 13	17	80 (2)	562108	FR TOP	FR DESTINATION SIGN
RS 14					
RS 15					
RS 16					
RS 17	7	220	562498	FR JCT BOX	FIRE ALARM
RS 18	8	75 K	064208	RR JCT BOX	FAN CLUTCH W/RETARDER
RS 19	13.2	330K	065755	EVAP. CPT.	TIME DELAY RELAY EVAP. FAN
RS 20	15	1 K	562470	RR JCT BOX	WORLD TR. SPEED TO DDEC III
RS 21	22	15K	562908	DASH	CURRENT LIMIT FOR LED
RS 24	9.1	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 25	9.3	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 26	10	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 28	26.1	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 29	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 30	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 31	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 32	13.3	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 33	4.2	30	562948	RR JCT BOX	CURRENT LOAD FOR RELAY CONTACT
RS 33	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 34	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 35	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 36	13.2	10	064907	EVAP. CPT.	CURRENT LIMIT FOR RELAY
RS 37	13.2	5	064907	EVAP. CPT.	CURRENT LIMIT FOR RELAY
RS 38	21.1	620	563205	FR. SERV. COMPT	ABS
RS 39	21.1	620	563205	FR. SERV. COMPT	TRAILER ABS
RS 40					
RS 41	17.1	1M	065830	LAVATORY TRAP SW.	FLUSH PUMP TIME DELAY
RS 42	9.5	0.2	066001	FR JCT BOX	RH LOW BEAM (HALOGEN ONLY)
RS 43	9.5	0.2	066001	FR JCT BOX	LH LOW BEAM (HALOGEN ONLY)

RESISTORS NUMBER CODE

No.	PAGE	OHM(S)	#PREV.	LOCATION	FUNCTION
RS 1	5	11 K	561898	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 2	5	3.6 K	561897	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 3	9.3	1 (2)	561537	FR JCT BOX	FOG LT - RH
RS 4	9.3	1 (2)	561537	FR JCT BOX	FOG LT - LH
RS 5	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - LH
RS 6	16.1	5	563006	RH UNDER DASH	VOLTAGE DIV. OPEN DOOR SOL.
RS 7	9.3	.82 (2)	060806	RR JCT BOX	PARKING BRAKE STOP LTS
RS 8	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - RH
RS 9	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - RH
RS 10	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - LH
RS 11					
RS 12	22	6	563436	FR TOP	DEFROSTER SPEED
RS 13	17	80 (2)	562108	FR TOP	FR DESTINATION SIGN
RS 14					
RS 15					
RS 16					
RS 17	7	220	562498	FR JCT BOX	FIRE ALARM
RS 18	8	75 K	064208	RR JCT BOX	FAN CLUTCH W/RETARDER
RS 19	13.2	330K	065755	EVAP. CPT.	TIME DELAY RELAY EVAP. FAN
RS 20	15	1 K	562470	RR JCT BOX	WORLD TR. SPEED TO DDEC III
RS 21	22	15K	562908	DASH	CURRENT LIMIT FOR LED
RS 24	9.1	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 25	9.3	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 26	10	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 28	26.1	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 29	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 30	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 31	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 32	13.3	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 33	4.2	30	562948	RR JCT BOX	CURRENT LOAD FOR RELAY CONTACT
RS 33	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 34	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 35	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 36	13.2	10	064907	EVAP. CPT.	CURRENT LIMIT FOR RELAY
RS 37	13.2	5	064907	EVAP. CPT.	CURRENT LIMIT FOR RELAY
RS 38	21.1	620	563205	FR. SERV. COMPT	ABS
RS 39	21.1	620	563205	FR. SERV. COMPT	TRAILER ABS
RS 40					
RS 41	17.1	1M	065830	LAVATORY TRAP SW.	FLUSH PUMP TIME DELAY
RS 42	9.5	0.2	066001	FR JCT BOX	RH LOW BEAM (HALOGEN ONLY)
RS 43	9.5	0.2	066001	FR JCT BOX	LH LOW BEAM (HALOGEN ONLY)

WIRING DIAGRAM KEYS




WIRE CROSSING


WIRE SOLDERING JOINT

SHIELDED WIRES

TWISTED WIRES

STUD TERMINAL

JUNCTION BLOCK

DUMMY




CHASSIS GROUND

ACCESSORY CHASSIS GROUND

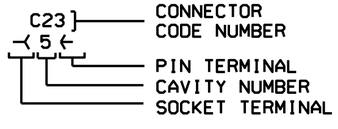

L.E.D.

ILLUMINATING LAMP

FLUORESCENT LAMP





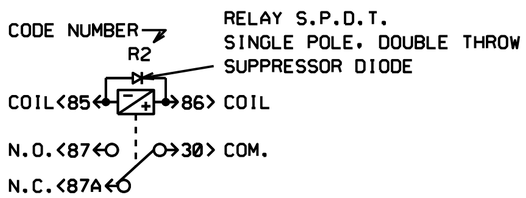

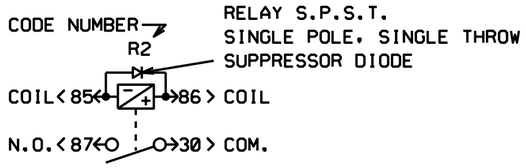

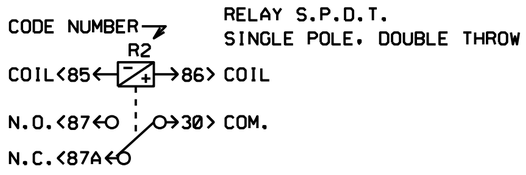

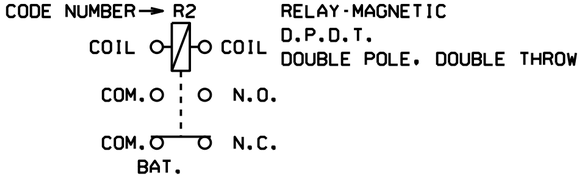

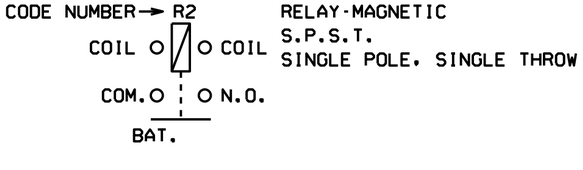



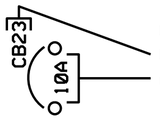




PRESSURE SWITCH N.C.


PRESSURE SWITCH N.O.

SWITCH MOMENTARY CONTACT


SWITCH PUSH BUTTON




110V EXTERIOR PLUG RECEPTACLE


ELECTRIC HORN

THERMOSTAT


HEATER

SOLENOID VALVE

FR. JCT BOX - JUNCTION BLOCK

RR. JCT BOX - JUNCTION BLOCK

BLK	BLACK
YEL	YELLOW
RED	RED
WH	WHITE
GRY	GREY
ORA	ORANGE
BLU	BLUE
GRN	GREEN
BRN	BROWN
PUR	PURPLE
PK	PINK

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V BATTERY
F 2	6.1	10A	562407	RR. JCT. BOX	WORLD TRANS.& EATON TRANS.12V IGNITION
F 3	7.2	20A	562605	FR. JCT. BOX	ELECTRICAL HORNS
F 4	7.2	5A	562259	FR. JCT. BOX	FIRE ALARM
F 5					
F 6	5.1	5A	562602	FR. JCT. BOX	CRUISE DECEL SW.
F 7	8.1	5A	562602	FR. JCT. BOX	PARKING BRAKE PRESSURE SW.
F 8	9.2	10A	562407	FR. JCT. BOX	CORNERING LTS
F 9	9.3	15A	562604	RR. JCT. BOX	DOCKING LTS
F 10	9.3	15A	562604	FR. JCT. BOX	FOG LTS
F 11	11.1	5A	562259	FR. JCT. BOX	FRONT SERVICE CPT LTS
F 12	11.2	10A	562407	RR. JCT. BOX	AISLE LTS
F 13	11.2	7.5A	562602	RR. JCT. BOX	EMERGENCY EXIT LTS
F 14	11.3	15A	562602	FR. JCT. BOX	DRIVER'S LTS
F 15	11.3	15A	562604	RR. JCT. BOX	READING LTS RH
F 16	11.3	15A	562604	RR. JCT. BOX	READING LTS LH
F 17	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING R.H.
F 18	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT RH
F 19	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT LH
F 20	11.3	5A	562599	FR. JCT. BOX	GENERAL & READING LTS. SW.
F 21	12.1	10A	560061	RR. JCT. BOX	PRIME PUMP
F 22	14.1	10A	562407	FR. JCT. BOX	POWER 12V OUTLET
F 23	14.1	15A	562604	FR. JCT. BOX	DRIVER'S WINDOW LIFTER
F 24	14.1	15A	562604	FR. JCT. BOX	CIGAR LIGHTER
F 25	14.1	3A	562599	FR. JCT. BOX	SUN VISOR
F 26	26.1	7.5A	562259	FR. JCT. BOX	WATER HTR WEBASTO TIMER
F 27	17.1	5A	562259	RR. JCT. BOX	GALLEY LAMP & LAVATORY NIGHT LTS.
F 28	17.1	10A	562407	RR. JCT. BOX	LAVATORY PUMP
F 29	17.1	7.5A	562602	RR. JCT. BOX	LAVATORY LTS
F 31	17.1	5A	562259	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRONIC
F 31	17.1	7.5A	562602	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRIC
F 32	11.3	5A	562259	FR. JCT. BOX	PASSENGER NO SMOKING LTS
F 33	18.1	5A	562259	FR. JCT. BOX	KNEELING SYSTEM
F 34	19.1	3A	562599	FR. JCT. BOX	LUGGAGE DOOR LOCK
F 39	22.1	20A	562605	FR. JCT. BOX	UPPER WINDSHIELD FAN AND PUMP DEFROST
F 40					
F 41					
F 42	20.5	3A			WIRELESS MIC CHARGER
F 43	1.2	3A	562599	FR. JCT. BOX	12V SIGNAL TO BATT MONITOR
F 44	1.2	3A	562599	FR. JCT. BOX	24V SIGNAL TO BATT MONITOR
F 46	24.1	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 24V SPARTAN
F 47	24.3	7.5A	562407	FR. JCT. BOX	MIRROR ADJUST & HEATED 12V RAMCO
F 48	25.2	10A	562407	RR. JCT. BOX	WHEEL CHAIR LIFT POWER CONTROL
F 49	26.1	15A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 50	26.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 51	11.2	7.5A	562602	RR. JCT. BOX	HAR RACK CPT LTS
F 57	17.1	5A	562259	RR. JCT. BOX	LAVATORY FLUORESCENT
F 58	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING L.H.
F 59					
F 60	17.1	10A	562407	RR. JCT. BOX	LAVATORY FAN
F 61	27.1	1A	560893	FR. JCT. BOX	INTERCOM
F 62	2.1	3A	562599	RR. JCT. BOX	PRO-LINK & FIRE ALARM
F 63	27.1	3A	560893	MON. CLARION	BACK-UP MONITOR CLARION
F 70	23.1	7.5A	562602	GALLEY PANEL	GALLEY RH CONTAINER
F 71	23.1	7.5A	562602	GALLEY PANEL	GALLEY LH CONTAINER
F 72	23.1	10A	562407	GALLEY PANEL	GALLEY REFRIGERATOR COMPRESSOR
F 73	23.1	35A	562608	GALLEY PANEL	GALLEY COFFEMAKER
F 74	23.1	7.5	560598	BAT. CPT.	GALLEY REFRIGERATOR
F 75					
F 76	20.8	1A	562597	SOUND SYS JC	DVD KARAOKE
F 77	20.8	3A	562599	SOUND SYS JC	DVD KARAOKE
F 81	6.3	10A	562407	RR. JCT. BOX	Z F TRANSM.
F 82	6.3	10A	562407	RR. JCT. BOX	ZF TRANSM.
F 83	6.3	10A	562407	RR. JCT. BOX	ZF TRANSM.
F ZF1	15.1	3A	560893	FR.JCT.BOX	STEERING CONTROL

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION	No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V BATTERY
F 2	6.1	10A	562407	RR. JCT. BOX	WORLD TRANS.& EATON TRANS.12V IGNITION
F 3	7.2	20A	562605	FR. JCT. BOX	ELECTRICAL HORNS
F 4	7.2	5A	562259	FR. JCT. BOX	FIRE ALARM
F 5					
F 6	5.1	5A	562602	FR. JCT. BOX	CRUISE DECEL SW.
F 7	8.1	5A	562602	FR. JCT. BOX	PARKING BRAKE PRESSURE SW.
F 8	9.2	10A	562407	FR. JCT. BOX	CORNERING LTS
F 9	9.3	15A	562604	RR. JCT. BOX	DOCKING LTS
F 10	9.3	15A	562604	FR. JCT. BOX	FOG LTS
F 11	11.1	5A	562259	FR. JCT. BOX	FRONT SERVICE CPT LTS
F 12	11.2	10A	562407	RR. JCT. BOX	AISLE LTS
F 13	11.2	7.5A	562602	RR. JCT. BOX	EMERGENCY EXIT LTS
F 14	11.3	15A	562602	FR. JCT. BOX	DRIVER'S LTS
F 15	11.3	15A	562604	RR. JCT. BOX	READING LTS RH
F 16	11.3	15A	562604	RR. JCT. BOX	READING LTS LH
F 17	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING R.H.
F 18	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT RH
F 19	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT LH
F 20	11.3	5A	562599	FR. JCT. BOX	GENERAL & READING LTS. SW.
F 21	12.1	10A	560061	RR. JCT. BOX	PRIME PUMP
F 22	14.1	10A	562407	FR. JCT. BOX	POWER 12V OUTLET
F 23	14.1	15A	562604	FR. JCT. BOX	DRIVER'S WINDOW LIFTER
F 24	14.1	15A	562604	FR. JCT. BOX	CIGAR LIGHTER
F 25	14.1	3A	562599	FR. JCT. BOX	SUN VISOR
F 26	26.1	7.5A	562259	FR. JCT. BOX	WATER HTR WEBASTO TIMER
F 27	17.1	5A	562259	RR. JCT. BOX	GALLEY LAMP & LAVATORY NIGHT LTS.
F 28	17.1	10A	562407	RR. JCT. BOX	LAVATORY PUMP
F 29	17.1	7.5A	562602	RR. JCT. BOX	LAVATORY LTS
F 31	17.1	5A	562259	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRONIC
F 31	17.1	7.5A	562602	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRIC
F 32	11.3	5A	562259	FR. JCT. BOX	PASSENGER NO SMOKING LTS
F 33	18.1	5A	562259	FR. JCT. BOX	KNEELING SYSTEM
F 34	19.1	3A	562599	FR. JCT. BOX	LUGGAGE DOOR LOCK
F 39	22.1	20A	562605	FR. JCT. BOX	UPPER WINDSHIELD FAN AND PUMP DEFROST
F 40					
F 41					
F 42	20.5	3A			WIRELESS MIC CHARGER
F 43	1.2	3A	562599	FR. JCT. BOX	12V SIGNAL TO BATT MONITOR
F 44	1.2	3A	562599	FR. JCT. BOX	24V SIGNAL TO BATT MONITOR
F 46	24.1	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 24V SPARTAN
F 47	24.3	7.5A	562407	FR. JCT. BOX	MIRROR ADJUST & HEATED 12V RAMCO
F 48	25.2	10A	562407	RR. JCT. BOX	WHEEL CHAIR LIFT POWER CONTROL
F 49	26.1	15A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 50	26.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 51	11.2	7.5A	562602	RR. JCT. BOX	HAR RACK CPT LTS
F 57	17.1	5A	562259	RR. JCT. BOX	LAVATORY FLUORESCENT
F 58	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING L.H.
F 59					
F 60	17.1	10A	562407	RR. JCT. BOX	LAVATORY FAN
F 61	27.1	1A	560893	FR. JCT. BOX	INTERCOM
F 62	2.1	3A	562599	RR. JCT. BOX	PRO-LINK & FIRE ALARM
F 63	27.1	3A	560893	MON. CLARION	BACK-UP MONITOR CLARION
F 70	23.1	7.5A	562602	GALLEY PANEL	GALLEY RH CONTAINER
F 71	23.1	7.5A	562602	GALLEY PANEL	GALLEY LH CONTAINER
F 72	23.1	10A	562407	GALLEY PANEL	GALLEY REFRIGERATOR COMPRESSOR
F 73	23.1	35A	562608	GALLEY PANEL	GALLEY COFFEMAKER
F 74	23.1	7.5	560598	BAT. CPT.	GALLEY REFRIGERATOR
F 75					
F 76	20.8	1A	562597	SOUND SYS JC	DVD KARAOKE
F 77	20.8	3A	562599	SOUND SYS JC	DVD KARAOKE
F 81	6.3	10A	562407	RR. JCT. BOX	Z F TRANSM.
F 82	6.3	10A	562407	RR. JCT. BOX	ZF TRANSM.
F 83	6.3	10A	562407	RR. JCT. BOX	ZF TRANSM.
F 84	6.3	10A	562407	RR. JCT. BOX	ZF TRANSM.
F ZF1	15.1	3A	560893	FR.JCT.BOX	STEERING CONTROL

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION	No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V BATTERY
F 2	6.1	10A	562407	RR. JCT. BOX	WORLD TRANS.& EATON TRANS.12V IGNITION
F 3	7.2	20A	562605	FR. JCT. BOX	ELECTRICAL HORNS
F 4	7.2	5A	562259	FR. JCT. BOX	FIRE ALARM
F 5					
F 6	5.1	5A	562602	FR. JCT. BOX	CRUISE DECEL SW.
F 7	8.1	5A	562602	FR. JCT. BOX	PARKING BRAKE PRESSURE SW.
F 8	9.2	10A	562407	FR. JCT. BOX	CORNERING LTS
F 9	9.3	15A	562604	RR. JCT. BOX	DOCKING LTS
F 10	9.3	15A	562604	FR. JCT. BOX	FOG LTS
F 11	11.1	5A	562259	FR. JCT. BOX	FRONT SERVICE CPT LTS
F 12	11.2	10A	562407	RR. JCT. BOX	AISLE LTS
F 13	11.2	7.5A	562602	RR. JCT. BOX	EMERGENCY EXIT LTS
F 14	11.3	15A	562602	FR. JCT. BOX	DRIVER'S LTS
F 15	11.3	15A	562604	RR. JCT. BOX	READING LTS RH
F 16	11.3	15A	562604	RR. JCT. BOX	READING LTS LH
F 17	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING R.H.
F 18	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT RH
F 19	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT LH
F 20	11.3	5A	562599	FR. JCT. BOX	GENERAL & READING LTS. SW.
F 21	12.1	10A	560061	RR. JCT. BOX	PRIME PUMP
F 22	14.1	10A	562407	FR. JCT. BOX	POWER 12V OUTLET
F 23	14.1	15A	562604	FR. JCT. BOX	DRIVER'S WINDOW LIFTER
F 24	14.1	15A	562604	FR. JCT. BOX	CIGAR LIGHTER
F 25	14.1	3A	562599	FR. JCT. BOX	SUN VISOR
F 26	26.1	7.5A	562259	FR. JCT. BOX	WATER HTR WEBASTO TIMER
F 27	17.1	5A	562259	RR. JCT. BOX	GALLEY LAMP & LAVATORY NIGHT LTS.
F 28	17.1	10A	562407	RR. JCT. BOX	LAVATORY PUMP
F 29	17.1	7.5A	562602	RR. JCT. BOX	LAVATORY LTS
F 31	17.1	5A	562259	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRONIC
F 31	17.1	7.5A	562602	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRIC
F 32	11.3	5A	562259	FR. JCT. BOX	PASSENGER NO SMOKING LTS
F 33	18.1	5A	562259	FR. JCT. BOX	KNEELING SYSTEM
F 34	19.1	3A	562599	FR. JCT. BOX	LUGGAGE DOOR LOCK
F 39	22.1	20A	562605	FR. JCT. BOX	UPPER WINDSHIELD FAN AND PUMP DEFROST
F 40					
F 41					
F 42	20.5	3A			WIRELESS MIC CHARGER
F 43	1.2	3A	562599	FR. JCT. BOX	12V SIGNAL TO BATT MONITOR
F 44	1.2	3A	562599	FR. JCT. BOX	24V SIGNAL TO BATT MONITOR
F 46	24.1	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 24V SPARTAN
F 47	24.3	7.5A	562407	FR. JCT. BOX	MIRROR ADJUST & HEATED 12V RAMCO
F 48	25.2	10A	562407	RR. JCT. BOX	WHEEL CHAIR LIFT POWER CONTROL
F 49	26.1	15A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 50	26.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 51	11.2	7.5A	562602	RR. JCT. BOX	HAT RACK CPT LTS
F 57	17.1	5A	562259	RR. JCT. BOX	LAVATORY FLUORESCENT
F 58	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING L.H.
F 59					
F 60	17.1	10A	562407	RR. JCT. BOX	LAVATORY FAN
F 61	27.1	1A	560893	FR. JCT. BOX	INTERCOM
F 62	2.1	3A	562599	RR. JCT. BOX	PRO-LINK & FIRE ALARM
F 63	27.1	3A	560893	MON. CLARION	BACK-UP MONITOR CLARION
F 70	23.1	7.5A	562602	GALLEY PANEL	GALLEY RH CONTAINER
F 71	23.1	7.5A	562602	GALLEY PANEL	GALLEY LH CONTAINER
F 72	23.1	10A	562407	GALLEY PANEL	GALLEY REFRIGERATOR COMPRESSOR
F 73	23.1	35A	562608	GALLEY PANEL	GALLEY COFFEMAKER
F 74	23.1	7.5	560598	BAT. CPT.	GALLEY REFRIGERATOR
F 75					
F 76	20.8	1A	562597	SOUND SYS JC	DVD KARAOKE
F 77	20.8	3A	562599	SOUND SYS JC	DVD KARAOKE
F 81	6.3	10A	562407	RR. JCT. BOX	Z F TRANSM.
F 82	6.3	10A	562407	RR. JCT. BOX	ZF TRANSM.
F 83	6.3	10A	562407	RR. JCT. BOX	ZF TRANSM.
F 84	6.3	10A	562407	RR. JCT. BOX	ZF TRANSM.
F ZF1	15.1	3A	560893	FR.JCT.BOX	STEERING CONTROL

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V BATTERY
F 2	6.1	10A	562407	RR. JCT. BOX	WORLD TRANS.& EATON TRANS.12V IGNITION
F 3	7.2	20A	562605	FR. JCT. BOX	ELECTRICAL HORNS
F 4	7.2	5A	562259	FR. JCT. BOX	FIRE ALARM
F 5					
F 6	5.1	5A	562602	FR. JCT. BOX	CRUISE DECEL SW.
F 7	8.1	5A	562602	FR. JCT. BOX	PARKING BRAKE PRESSURE SW.
F 7S	4.2	3A	560893	STARTER	STARTER « ON » TTLT
F 8	9.2	10A	562407	FR. JCT. BOX	CORNERING LTS
F 9	9.3	15A	562604	RR. JCT. BOX	DOCKING LTS
F 10	9.3	15A	562604	FR. JCT. BOX	FOG LTS
F 11	11.1	5A	562259	FR. JCT. BOX	FRONT SERVICE CPT LTS
F 12	11.2	10A	562407	RR. JCT. BOX	AISLE LTS
F 13	11.2	7.5A	562602	RR. JCT. BOX	EMERGENCY EXIT LTS
F 14	11.3	15A	562602	FR. JCT. BOX	DRIVER'S LTS
F 15	11.3	15A	562604	RR. JCT. BOX	READING LTS RH
F 16	11.3	15A	562604	RR. JCT. BOX	READING LTS LH
F 17	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING R.H.
F 18	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT RH
F 19	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT LH
F 20	11.3	5A	562599	FR. JCT. BOX	GENERAL & READING LTS. SW.
F 21	12.1	10A	560061	RR. JCT. BOX	PRIME PUMP
F 22	14.1	10A	562407	FR. JCT. BOX	POWER 12V OUTLET
F 23	14.1	15A	562604	FR. JCT. BOX	DRIVER'S WINDOW LIFTER
F 24	14.1	15A	562604	FR. JCT. BOX	CIGAR LIGHTER
F 25	14.1	3A	562599	FR. JCT. BOX	SUN VISOR
F 26	26.1	7.5A	562259	FR. JCT. BOX	WATER HTR WEBASTO TIMER
F 27	17.1	5A	562259	RR. JCT. BOX	GALLEY LAMP & LAVATORY NIGHT LTS.
F 28	17.1	10A	562407	RR. JCT. BOX	LAVATORY PUMP
F 29	17.1	7.5A	562602	RR. JCT. BOX	LAVATORY LTS
F 31	17.1	5A	562259	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRONIC
F 31	17.1	7.5A	562602	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRIC
F 32	11.3	5A	562259	FR. JCT. BOX	PASSENGER NO SMOKING LTS
F 33	18.1	5A	562259	FR. JCT. BOX	KNEELING SYSTEM
F 34	19.1	3A	562599	FR. JCT. BOX	LUGGAGE DOOR LOCK
F 39	22.1	20A	562605	FR. JCT. BOX	UPPER WINDSHIELD FAN AND PUMP DEFROST
F 40					
F 41					
F 42	20.5	3A	562599	FR. JCT. BOX	WIRELESS MIC CHARGER
F 43	1.2	3A	562599	FR. JCT. BOX	12V SIGNAL TO BATT MONITOR
F 44	1.2	3A	562599	FR. JCT. BOX	24V SIGNAL TO BATT MONITOR
F 46					
F 47	24.2,24.3	7.5A	562407	FR. JCT. BOX	MIRROR ADJUST & HEATED 12V RAMCO
F 48	25.2	10A	562407	RR. JCT. BOX	WHEEL CHAIR LIFT POWER CONTROL
F 49	26.1	15A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 50	26.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 51	11.2	7.5A	562602	RR. JCT. BOX	HAT RACK CPT LTS
F 57	17.1	5A	562259	RR. JCT. BOX	LAVATORY FLUORESCENT
F 58	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING L.H.
F 59					
F 60	17.1	10A	562407	RR. JCT. BOX	LAVATORY FAN
F 61	27.1	1A	560893	FR. JCT. BOX	INTERCOM
F 62	2.1	3A	562599	RR. JCT. BOX	PRO-LINK & FIRE ALARM
F 63	27.1	3A	560893	MON. CLARION	BACK-UP MONITOR CLARION
F 70	23.1	7.5A	562602	GALLEY PANEL	GALLEY RH CONTAINER
F 71	23.1	7.5A	562602	GALLEY PANEL	GALLEY LH CONTAINER
F 72	23.1	10A	562407	GALLEY PANEL	GALLEY REFRIGERATOR COMPRESSOR
F 73	23.1	35A	562608	GALLEY PANEL	GALLEY COFFEMAKER
F 74	23.1	7.5	560598	BAT. CPT.	GALLEY REFRIGERATOR
F 75					
F 76	20.8	1A	562597	SOUND SYS JC	DVD KARAOKE
F 77	20.8	3A	562599	SOUND SYS JC	DVD KARAOKE
F 81	6.3	10A	562407	RR. JCT. BOX	Z F TRANSM.
F 82	6.3	10A	562407	RR. JCT. BOX	ZF TRANSM.
F 83	6.3	10A	562407	RR. JCT. BOX	ZF TRANSM.
F 84	6.3	10A	562407	RR. JCT. BOX	ZF TRANSM.
F ZF1	15.1	3A	560893	FR.JCT.BOX	STEERING CONTROL

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION	No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V BATTERY
F 2	6.1	10A	562407	RR. JCT. BOX	WORLD TRANS.& EATON TRANS.12V IGNITION
F 3	7.2	20A	562605	FR. JCT. BOX	ELECTRICAL HORNS
F 4	7.2	5A	562259	FR. JCT. BOX	FIRE ALARM
F 5					
F 6	5.1	5A	562602	FR. JCT. BOX	CRUISE DECEL SW.
F 7	8.1	5A	562602	FR. JCT. BOX	PARKING BRAKE PRESSURE SW.
F 7S	4.2	3A	560893	STARTER	STARTER « ON » TTLT
F 8	9.2	10A	562407	FR. JCT. BOX	CORNERING LTS
F 9	9.3	15A	562604	RR. JCT. BOX	DOCKING LTS
F 10	9.3	15A	562604	FR. JCT. BOX	FOG LTS
F 11	11.1	5A	562259	FR. JCT. BOX	FRONT SERVICE CPT LTS
F 12	11.2	10A	562407	RR. JCT. BOX	AISLE LTS
F 13	11.2	7.5A	562602	RR. JCT. BOX	EMERGENCY EXIT LTS
F 14	11.3	15A	562602	FR. JCT. BOX	DRIVER'S LTS
F 15	11.3	15A	562604	RR. JCT. BOX	READING LTS RH
F 16	11.3	15A	562604	RR. JCT. BOX	READING LTS LH
F 17	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING R.H.
F 18	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT RH
F 19	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT LH
F 20	11.3	5A	562599	FR. JCT. BOX	GENERAL & READING LTS. SW.
F 21	12.1	10A	560061	RR. JCT. BOX	PRIME PUMP
F 22	14.1	10A	562407	FR. JCT. BOX	POWER 12V OUTLET
F 23	14.1	15A	562604	FR. JCT. BOX	DRIVER'S WINDOW LIFTER
F 24	14.1	15A	562604	FR. JCT. BOX	CIGAR LIGHTER
F 25	14.1	3A	562599	FR. JCT. BOX	SUN VISOR
F 26	26.1	7.5A	562259	FR. JCT. BOX	WATER HTR WEBASTO TIMER
F 27	17.1	5A	562259	RR. JCT. BOX	GALLEY LAMP & LAVATORY NIGHT LTS.
F 28	17.1	10A	562407	RR. JCT. BOX	LAVATORY PUMP
F 29	17.1	7.5A	562602	RR. JCT. BOX	LAVATORY LTS
F 31	17.1	5A	562259	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRONIC
F 31	17.1	7.5A	562602	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRIC
F 32	11.3	5A	562259	FR. JCT. BOX	PASSENGER NO SMOKING LTS
F 33	18.1	5A	562259	FR. JCT. BOX	KNEELING SYSTEM
F 34	19.1	3A	562599	FR. JCT. BOX	LUGGAGE DOOR LOCK
F 39	22.1	20A	562605	FR. JCT. BOX	UPPER WINDSHIELD FAN AND PUMP DEFROST
F 40					
F 41					
F 42	20.5	3A	562599	FR. JCT. BOX	WIRELESS MIC CHARGER
F 43	1.2	3A	562599	FR. JCT. BOX	12V SIGNAL TO BATT MONITOR
F 44	1.2	3A	562599	FR. JCT. BOX	24V SIGNAL TO BATT MONITOR
F 46					
F 47	24.2,24.3	7.5A	562407	FR. JCT. BOX	MIRROR ADJUST & HEATED 12V RAMCO
F 48	25.2	10A	562407	RR. JCT. BOX	WHEEL CHAIR LIFT POWER CONTROL
F 49	26.1	15A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 50	26.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 51	11.2	7.5A	562602	RR. JCT. BOX	HAT RACK CPT LTS
F 57	17.1	5A	562259	RR. JCT. BOX	LAVATORY FLUORESCENT
F 58	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING L.H.
F 59					
F 60	17.1	10A	562407	RR. JCT. BOX	LAVATORY FAN
F 61	27.1	1A	560893	FR. JCT. BOX	INTERCOM
F 62	2.1	3A	562599	RR. JCT. BOX	PRO-LINK & FIRE ALARM
F 63	27.1	3A	560893	MON. CLARION	BACK-UP MONITOR CLARION
F 70	23.1	7.5A	562602	GALLEY PANEL	GALLEY RH CONTAINER
F 71	23.1	7.5A	562602	GALLEY PANEL	GALLEY LH CONTAINER

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 72	23.1	10A	562407	GALLEY PANEL	GALLEY REFRIGERATOR COMPRESSOR
F 73	23.1	35A	562608	GALLEY PANEL	GALLEY COFFEMAKER
F 74	23.1	7.5	560598	BAT. CPT.	GALLEY REFRIGERATOR
F 75					
F 76	20.8	3A	562599	SOUND SYS JC	DVD KARAOKE
F 77					
F 81	6.3	10A	562407	RR. JCT. BOX	Z F TRANSM.
F 82	6.3	10A	562407	RR. JCT. BOX	ZF TRANSM.
F 83	6.3	10A	562407	RR. JCT. BOX	ZF TRANSM.
F 84	6.3	10A	562407	RR. JCT. BOX	ZF TRANSM.
F ZF1	15.1	3A	560893	FR.JCT.BOX	STEERING CONTROL

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION

LOGIC GATE

TRUTH TABLE

AND GATE



INPUT		OUT
A	B	C
Ø	Ø	Ø
Ø	1	Ø
1	Ø	Ø
1	1	1

*OUTPUT IS 1 WHEN ALL INPUT IS 1

NAND GATE



INPUT		OUT
A	B	C
Ø	Ø	1
Ø	1	1
1	Ø	1
1	1	Ø

* OUTPUT IS Ø WHEN ALL INPUT IS 1

OR GATE



INPUT		OUT
A	B	C
Ø	Ø	Ø
Ø	1	1
1	Ø	1
1	1	1

* OUTPUT IS 1 WHEN EITHER INPUT IS 1

NOR GATE



INPUT		OUT
A	B	C
Ø	Ø	1
Ø	1	Ø
1	Ø	Ø
1	1	Ø

* OUTPUT IS 1 WHEN NONE INPUT IS 1

NOT GATE



INPUT	OUT
A	B
Ø	1
1	Ø

* OUTPUT IS REVERSE OF INPUT

ON-DELAY

XX SECOND
AFTER A=1
THAN B=1

OFF-DELAY

XX SECOND
AFTER A=Ø
THAN B=Ø

INPUT OR OUTPUT LEVEL
LEVEL 1 = 12 VOLTS OR 24 VOLTS
LEVEL Ø = Ø VOLT (TO GROUND)

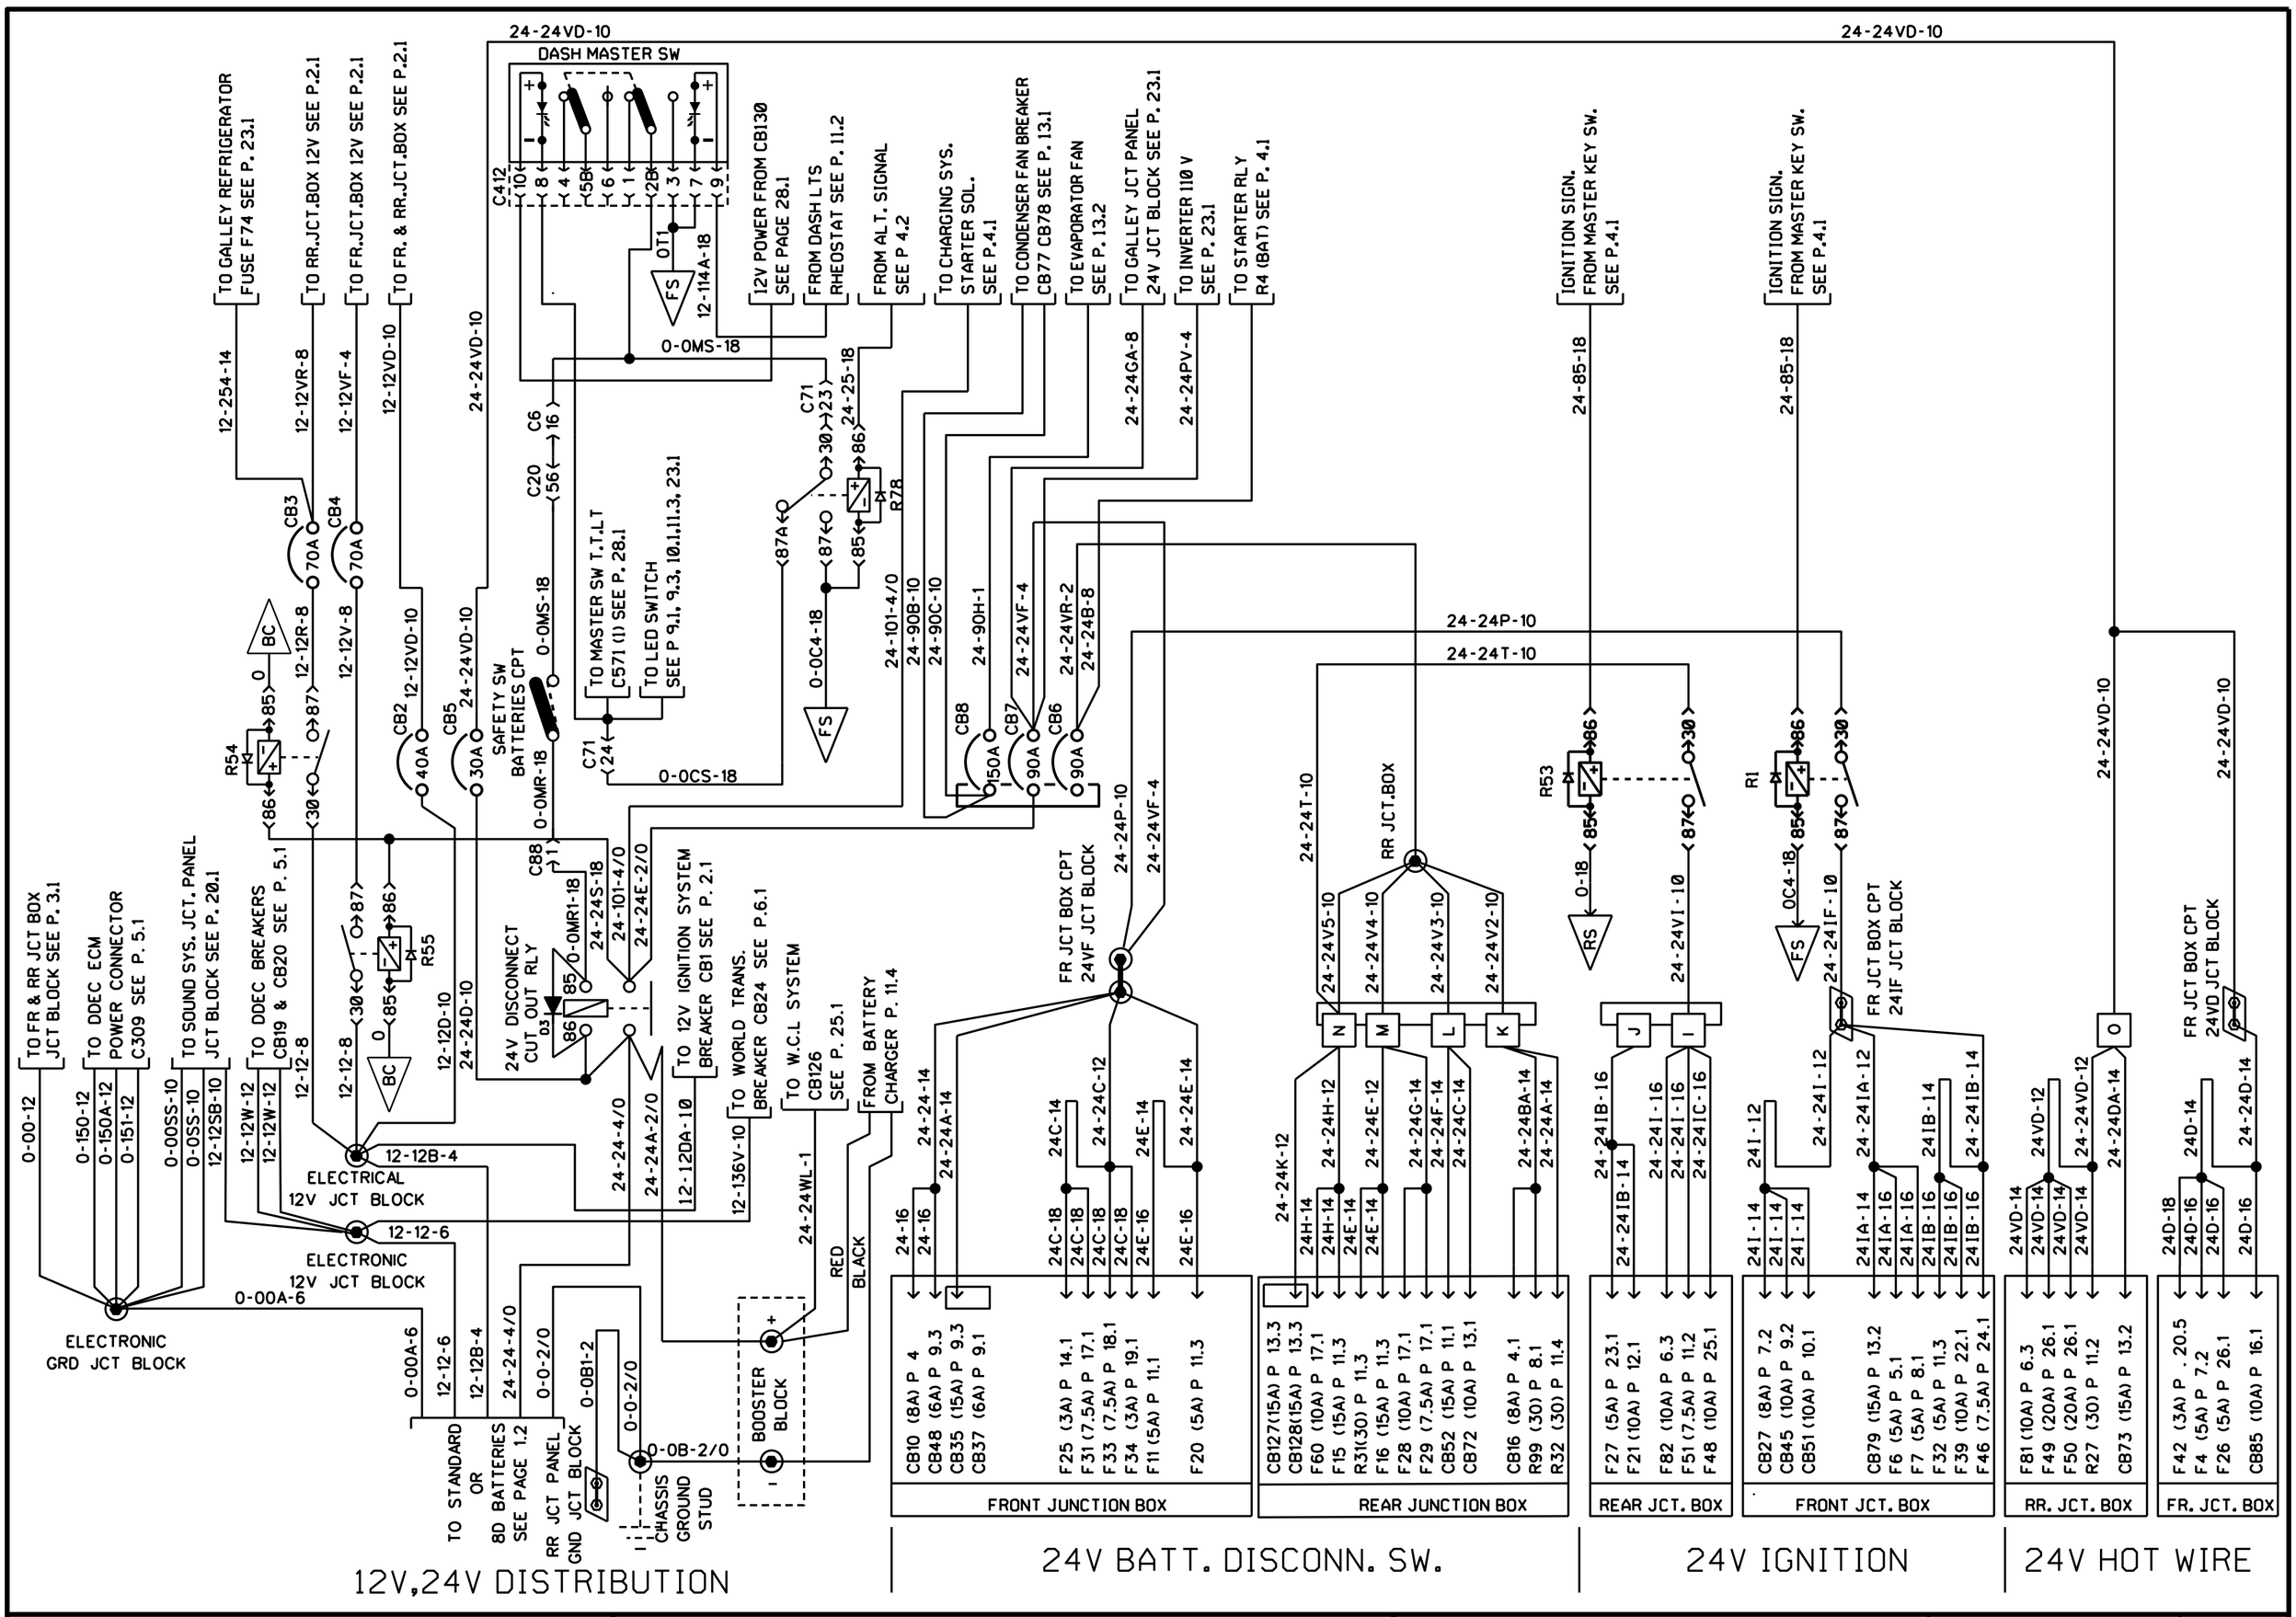

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 1.1	REVISION 00

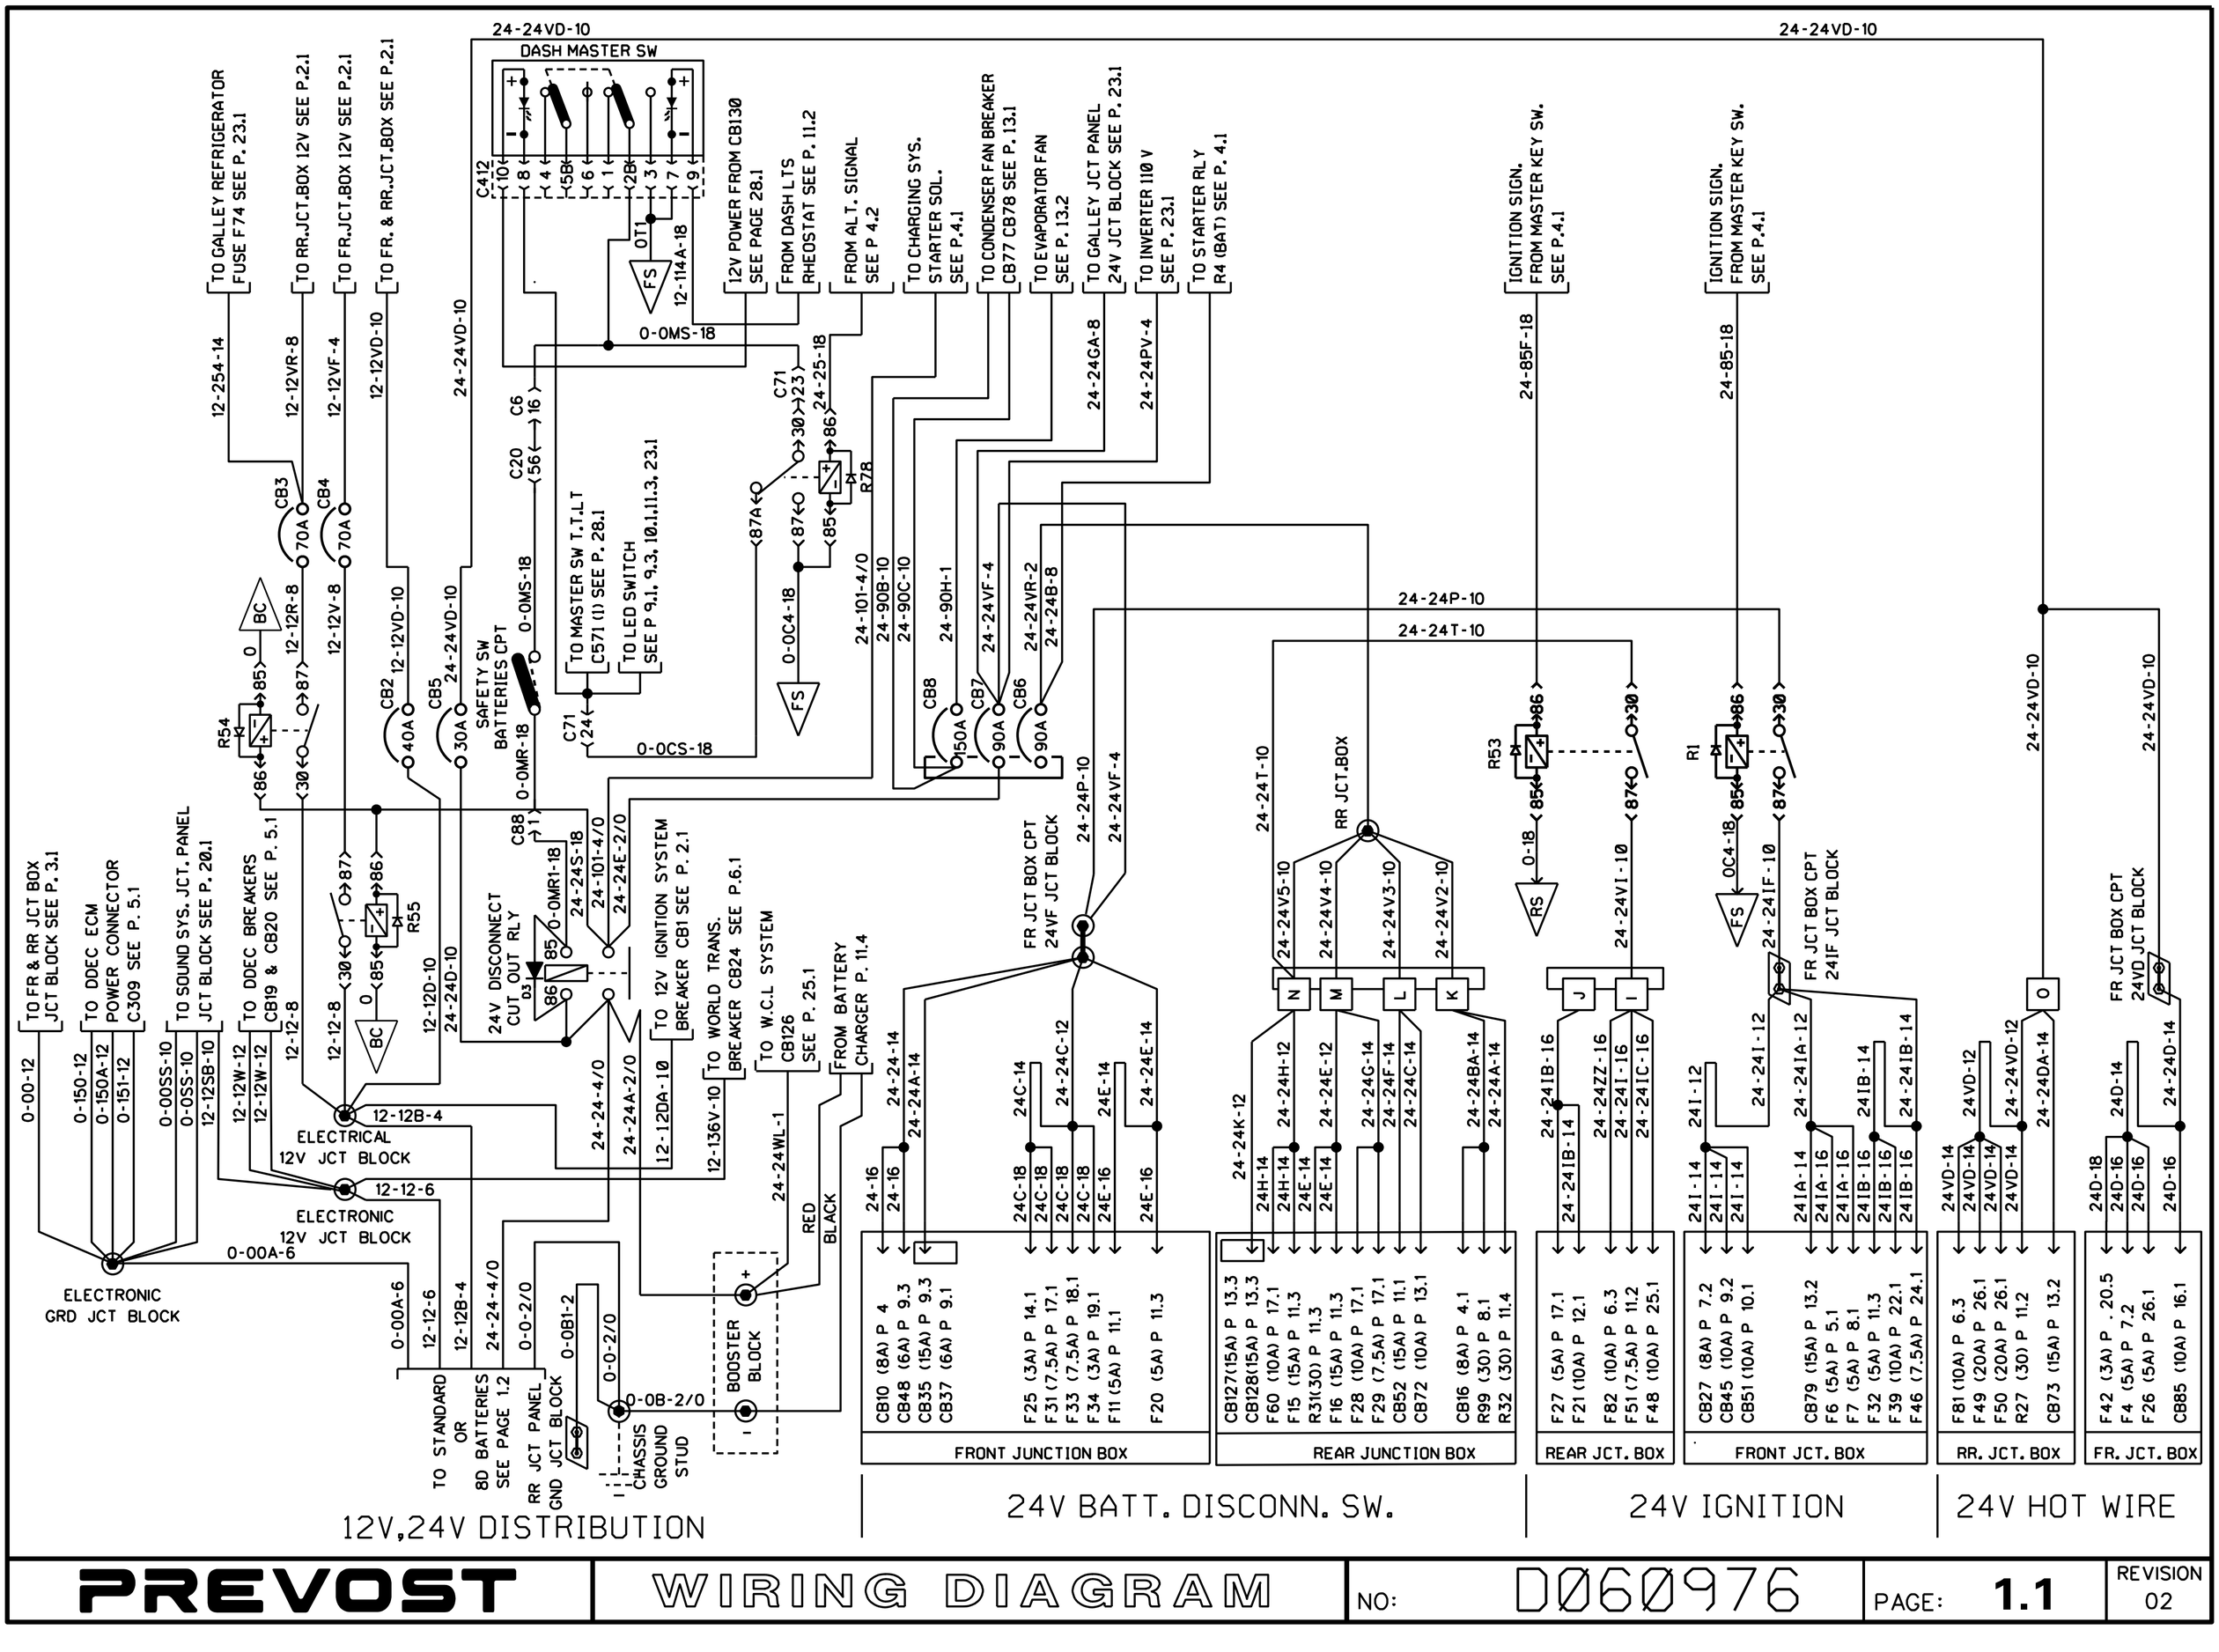

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 1.1	REVISION 02

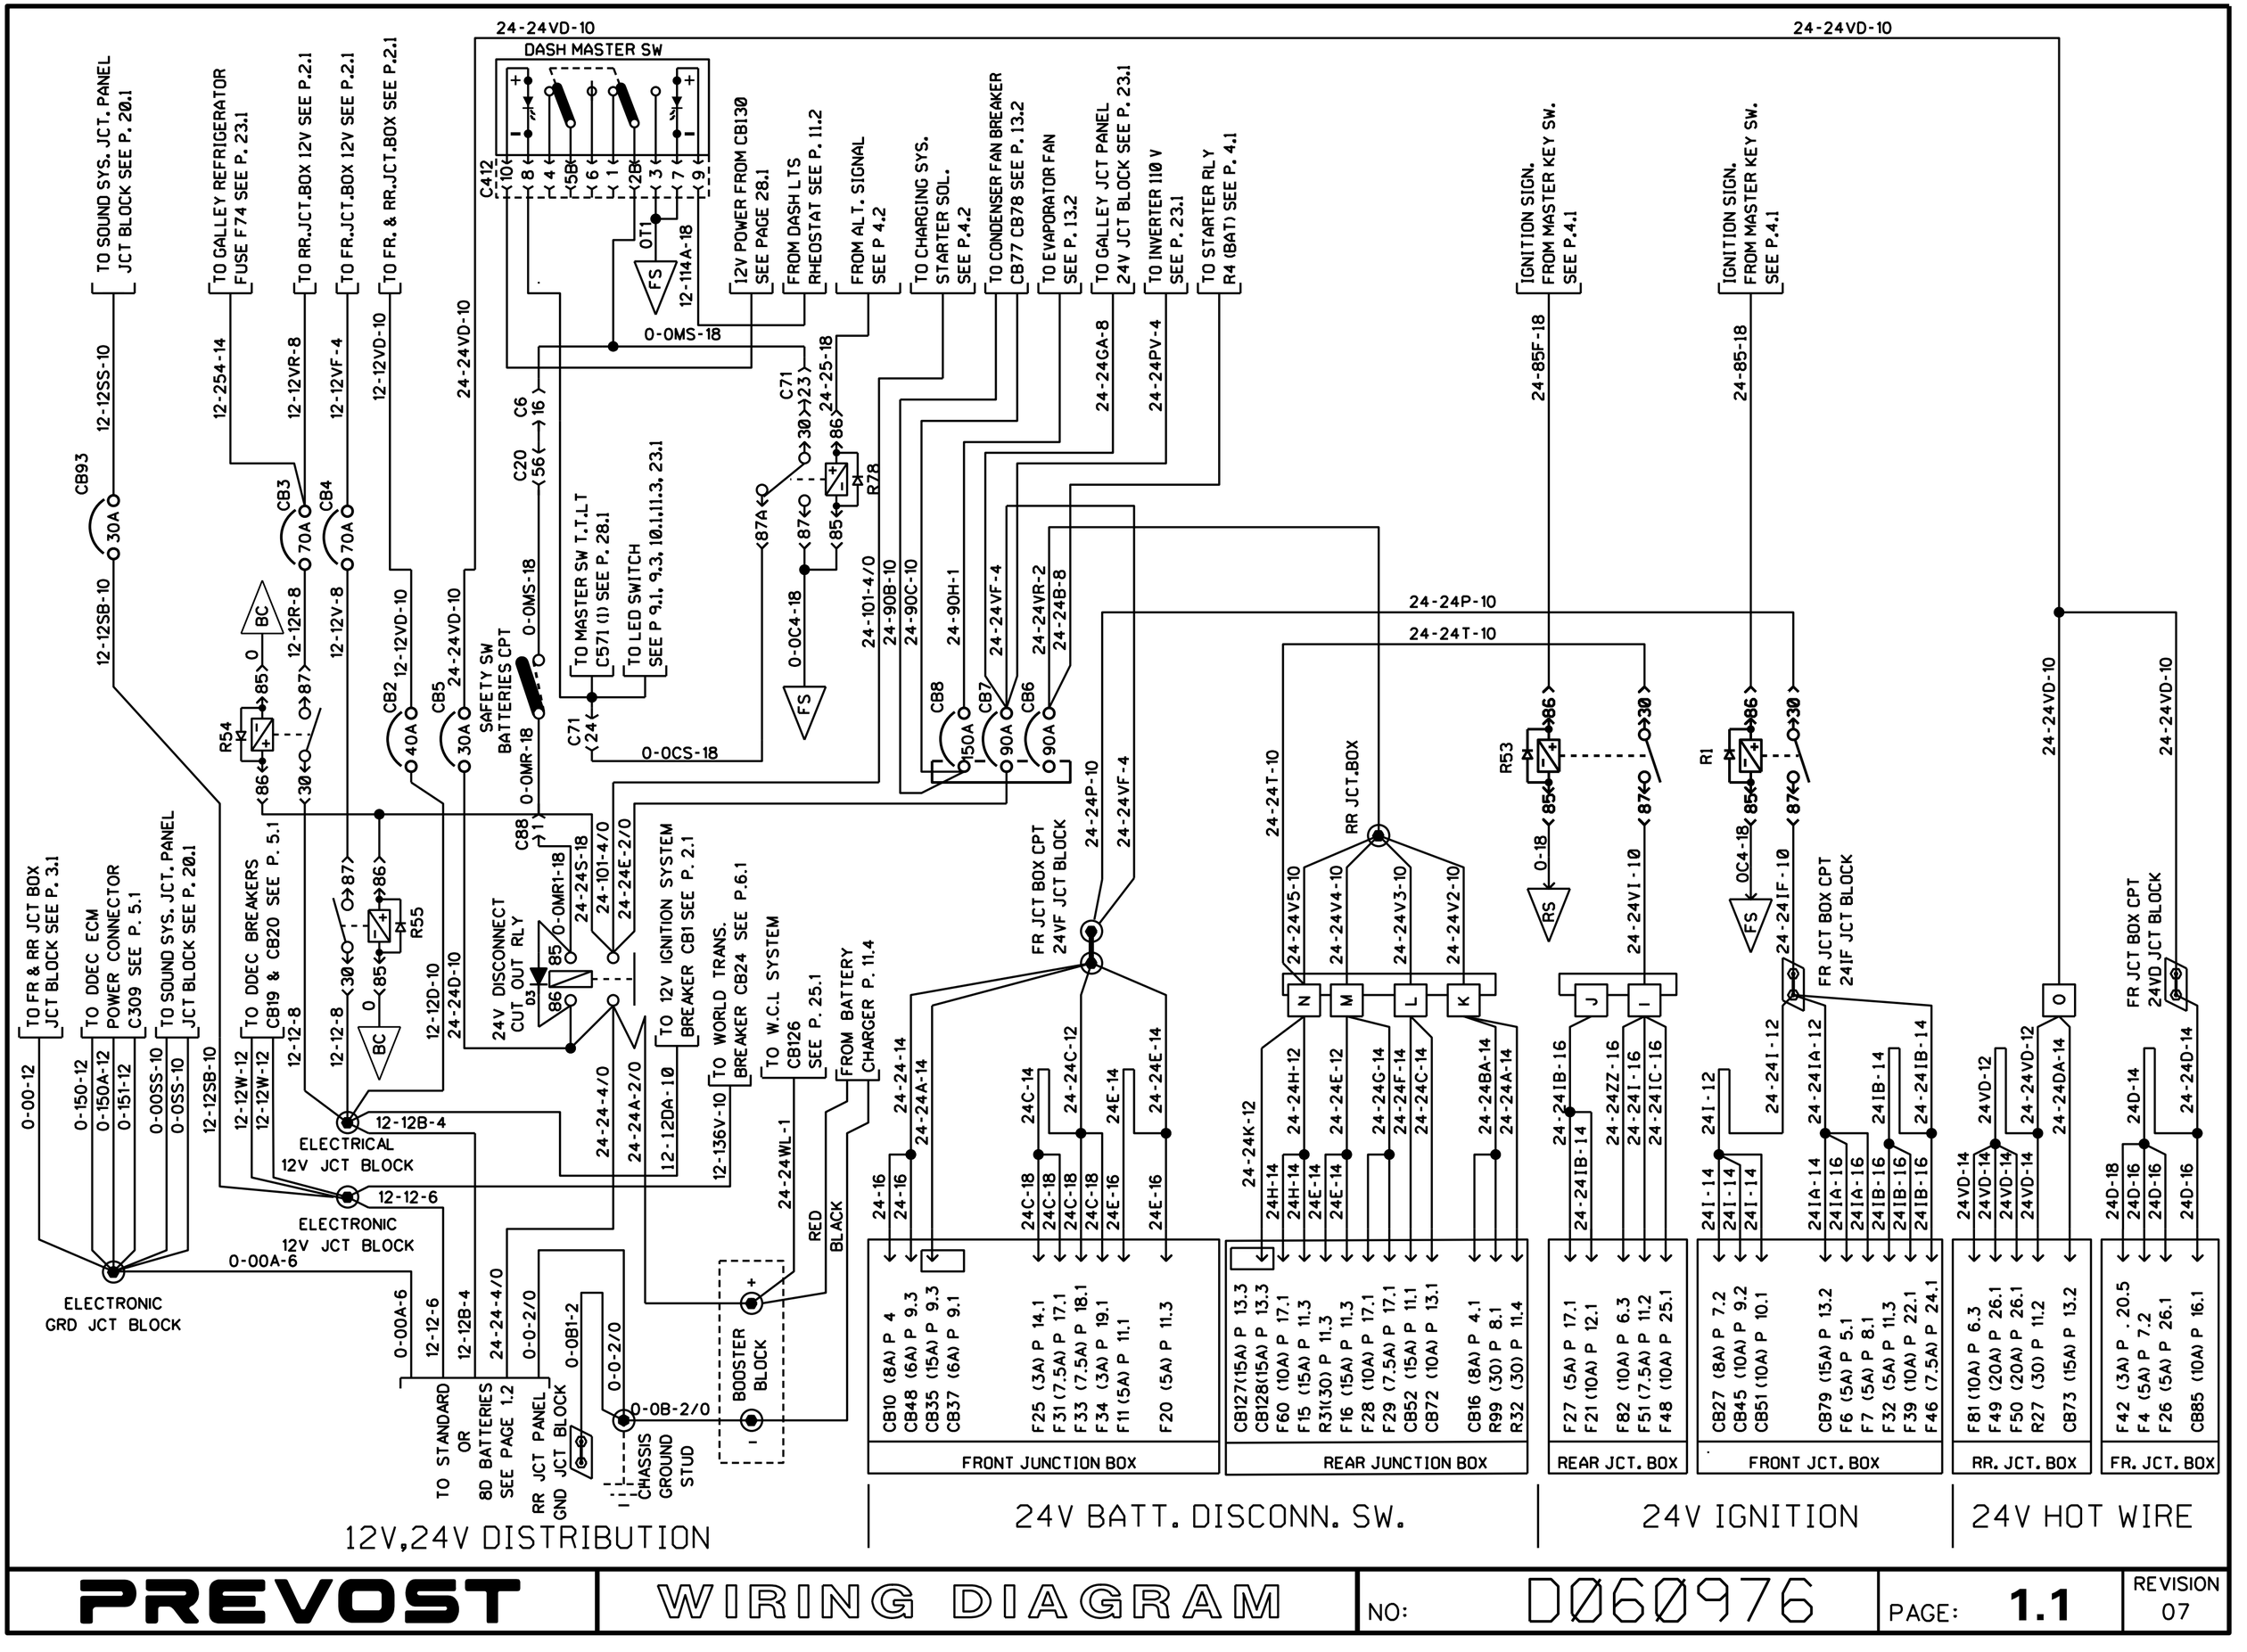

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 1.1	REVISION 07

PREVOST

WIRING DIAGRAM

12V,24V DISTRIBUTION

24V BATT. DISCONN. SW.

24V IGNITION

24V HOT WIRE

NO: D060976

PAGE: 1.1

REVISION 08

ELECTRONIC GRD JCT BLOCK

0-00-12 TO FR & RR JCT BOX JCT BLOCK SEE P. 3.1

0-150-14
0-150A-14
0-151-14
0-151A-14 TO DDEC ECM POWER CONNECTOR C32 SEE P. 5.1

0-00SS-10
0-0SS-10 TO SOUND SYS. JCT. PANEL JCT BLOCK SEE P. 20.1

12-12SB-10 CB93 30A 12-12SS-10 TO SOUND SYS. JCT. PANEL JCT BLOCK SEE P. 20.1

0-00A-6 ELECTRONIC 12V JCT BLOCK

12-12W-10
12-12W-10 TO DDEC BREAKERS CB19 & CB20 SEE P. 5.1

12-12-8 ELECTRICAL 12V JCT BLOCK

12-12B-4

R54 86 85 0 BC

12-12-8 30 87 12-12R-8 CB3 70A 12-254-14 TO GALLEY REFRIGERATOR FUSE F74 SEE P. 23.1

12-12VR-8 TO RR.JCT.BOX 12V SEE P.2.1

12-12-8 30 87 12-12V-8 CB4 70A 12-12VF-4 TO FR.JCT.BOX 12V SEE P.2.1

BC 0 85 86 R55

12-12VD-10 TO FR. & RR.JCT.BOX SEE P.2.1

0-00A-6
TO STANDARD OR 8D BATTERIES SEE PAGE 1.2
12-12-6
12-12B-4
24-24-4/0
RR JCT PANEL GND JCT BLOCK
0-0-2/0
0-0B1-2
0-0-2/0
0-0B-2/0
CHASSIS GROUND STUD

CB2 40A 12-12VD-10

12-12D-10
CB5 30A 24-24D-10 24-24VD-10

24V DISCONNECT CUT OUT RLY D3 86 85 C88 1 0-0MR1-18

SAFETY SW BATTERIES CPT 0-0MR-18 0-0MS-18 C20 56 C6 16

C412 DASH MASTER SW 10 8 4 5B 6 1 2B 3 7 9

24-24VD-10

C71 24 TO MASTER SW T.T.LT C571 (1) SEE P. 28.1

TO LED SWITCH SEE P 9.1, 9.3, 10.1,11.3, 23.1

0-0CS-18

FS 0T1 12-114A-18

0-0MS-18

24-24S-18
24-24-4/0
24-24A-2/0
24-101-4/0
24-24E-2/0

12-12DA-10 TO 12V IGNITION SYSTEM BREAKER CB1 SEE P. 2.1

12-136V-10 TO WORLD TRANS. BREAKER CB24 SEE P.6.1

BOOSTER BLOCK

24-24WL-1 TO W.C.L SYSTEM CB126 SEE P. 25.1

RED
BLACK
FROM BATTERY CHARGER P. 11.4

12V POWER FROM CB130 SEE PAGE 28.1

87A

FS 0-0C4-18 87 30 C71 23

85 86 24-25-18 R78

FROM DASH LTS RHEOSTAT SEE P. 11.2

FROM ALT. SIGNAL SEE P 4.2

24-101-4/0
24-90B-10
24-90C-10

TO CHARGING SYS. STARTER SOL. SEE P.4.2

CB8 150A 24-90H-1 TO CONDENSER FAN BREAKER CB77 CB78 SEE P. 13.2

CB7 90A 24-24VF-4 TO EVAPORATOR FAN SEE P. 13.2

CB6 90A 24-24VR-2
24-24B-8

24-24GA-8 TO GALLEY JCT PANEL 24V JCT BLOCK SEE P. 23.1

24-24PV-4 TO INVERTER 110 V SEE P. 23.1

TO STARTER RLY R4 (BAT) SEE P. 4.1

FRONT JUNCTION BOX

CB10 (8A) P 4 — 24-16
CB48 (6A) P 9.3 — 24-16
CB35 (15A) P 9.3 — 24-24-14
CB37 (6A) P 9.1 — 24-24A-14

F25 (3A) P 14.1 — 24C-18
F31 (7.5A) P 17.1 — 24C-18
F33 (7.5A) P 18.1 — 24C-18
F34 (3A) P 19.1 — 24C-18
F11 (5A) P 11.1 — 24E-16
F20 (5A) P 11.3 — 24E-16

24C-14
24-24C-12
24E-14
24-24E-14

FR JCT BOX CPT 24VF JCT BLOCK

24-24P-10
24-24VF-4

REAR JUNCTION BOX

CB127(15A) P 13.3
CB128(15A) P 13.3
F60 (10A) P 17.1
F15 (15A) P 11.3
R31(30) P 11.3
F16 (15A) P 11.3
F28 (10A) P 17.1
F29 (7.5A) P 17.1
CB52 (15A) P 11.1
CB72 (10A) P 13.1
CB16 (8A) P 4.1
R99 (30) P 8.1
R32 (30) P 11.4

24-24K-12
24H-14
24E-14
24-24H-12
24-24E-12
24-24G-14
24-24F-14
24-24C-14
24-24BA-14
24-24A-14

N M L K

24-24V5-10
24-24V4-10
24-24V3-10
24-24V2-10

RR JCT.BOX

24-24T-10
24-24T-10
24-24P-10

R53 RS 0-18 85 86 24-85F-18 IGNITION SIGN. FROM MASTER KEY SW. SEE P.4.1

REAR JCT. BOX

F27 (5A) P 17.1 — 24-24IB-16
F21 (10A) P 12.1 — 24-24IB-14
F82 (10A) P 6.3 — 24-24ZZ-16
F51 (7.5A) P 11.2 — 24-24I-16
F48 (10A) P 25.1 — 24-24IC-16

J I

24-24VI-10 87 30

FRONT JCT. BOX

CB27 (8A) P 7.2 — 24I-14
CB45 (10A) P 9.2 — 24I-14
CB51 (10A) P 10.1 — 24I-14
CB79 (15A) P 13.2 — 24IA-14
F6 (5A) P 5.1 — 24IA-16
F7 (5A) P 8.1 — 24IA-16
F32 (5A) P 11.3 — 24IB-16
F39 (10A) P 22.1 — 24IB-16
F46 (7.5A) P 24.1 — 24IB-16

24I-12
24-24I-12
24IA-12
24-24IA-12
24IB-14
24-24IB-14

R1 FS 0C4-18 85 86 24-85-18 IGNITION SIGN. FROM MASTER KEY SW. SEE P.4.1

24-24IF-10 87 30

FR JCT BOX CPT 24IF JCT BLOCK

RR. JCT. BOX

F81 (10A) P 6.3 — 24VD-14
F49 (20A) P 26.1 — 24VD-14
F50 (20A) P 26.1 — 24VD-14
R27 (30) P 11.2 — 24VD-14
CB73 (15A) P 13.2 — 24-24DA-14

24VD-12
24-24VD-12

O

24-24VD-10

FR. JCT. BOX

F42 (3A) P . 20.5 — 24D-18
F4 (5A) P 7.2 — 24D-16
F26 (5A) P 26.1 — 24D-16
CB85 (10A) P 16.1 — 24D-16

24D-14
24-24D-14

FR JCT BOX CPT 24VD JCT BLOCK

24-24VD-10

24-24VD-10

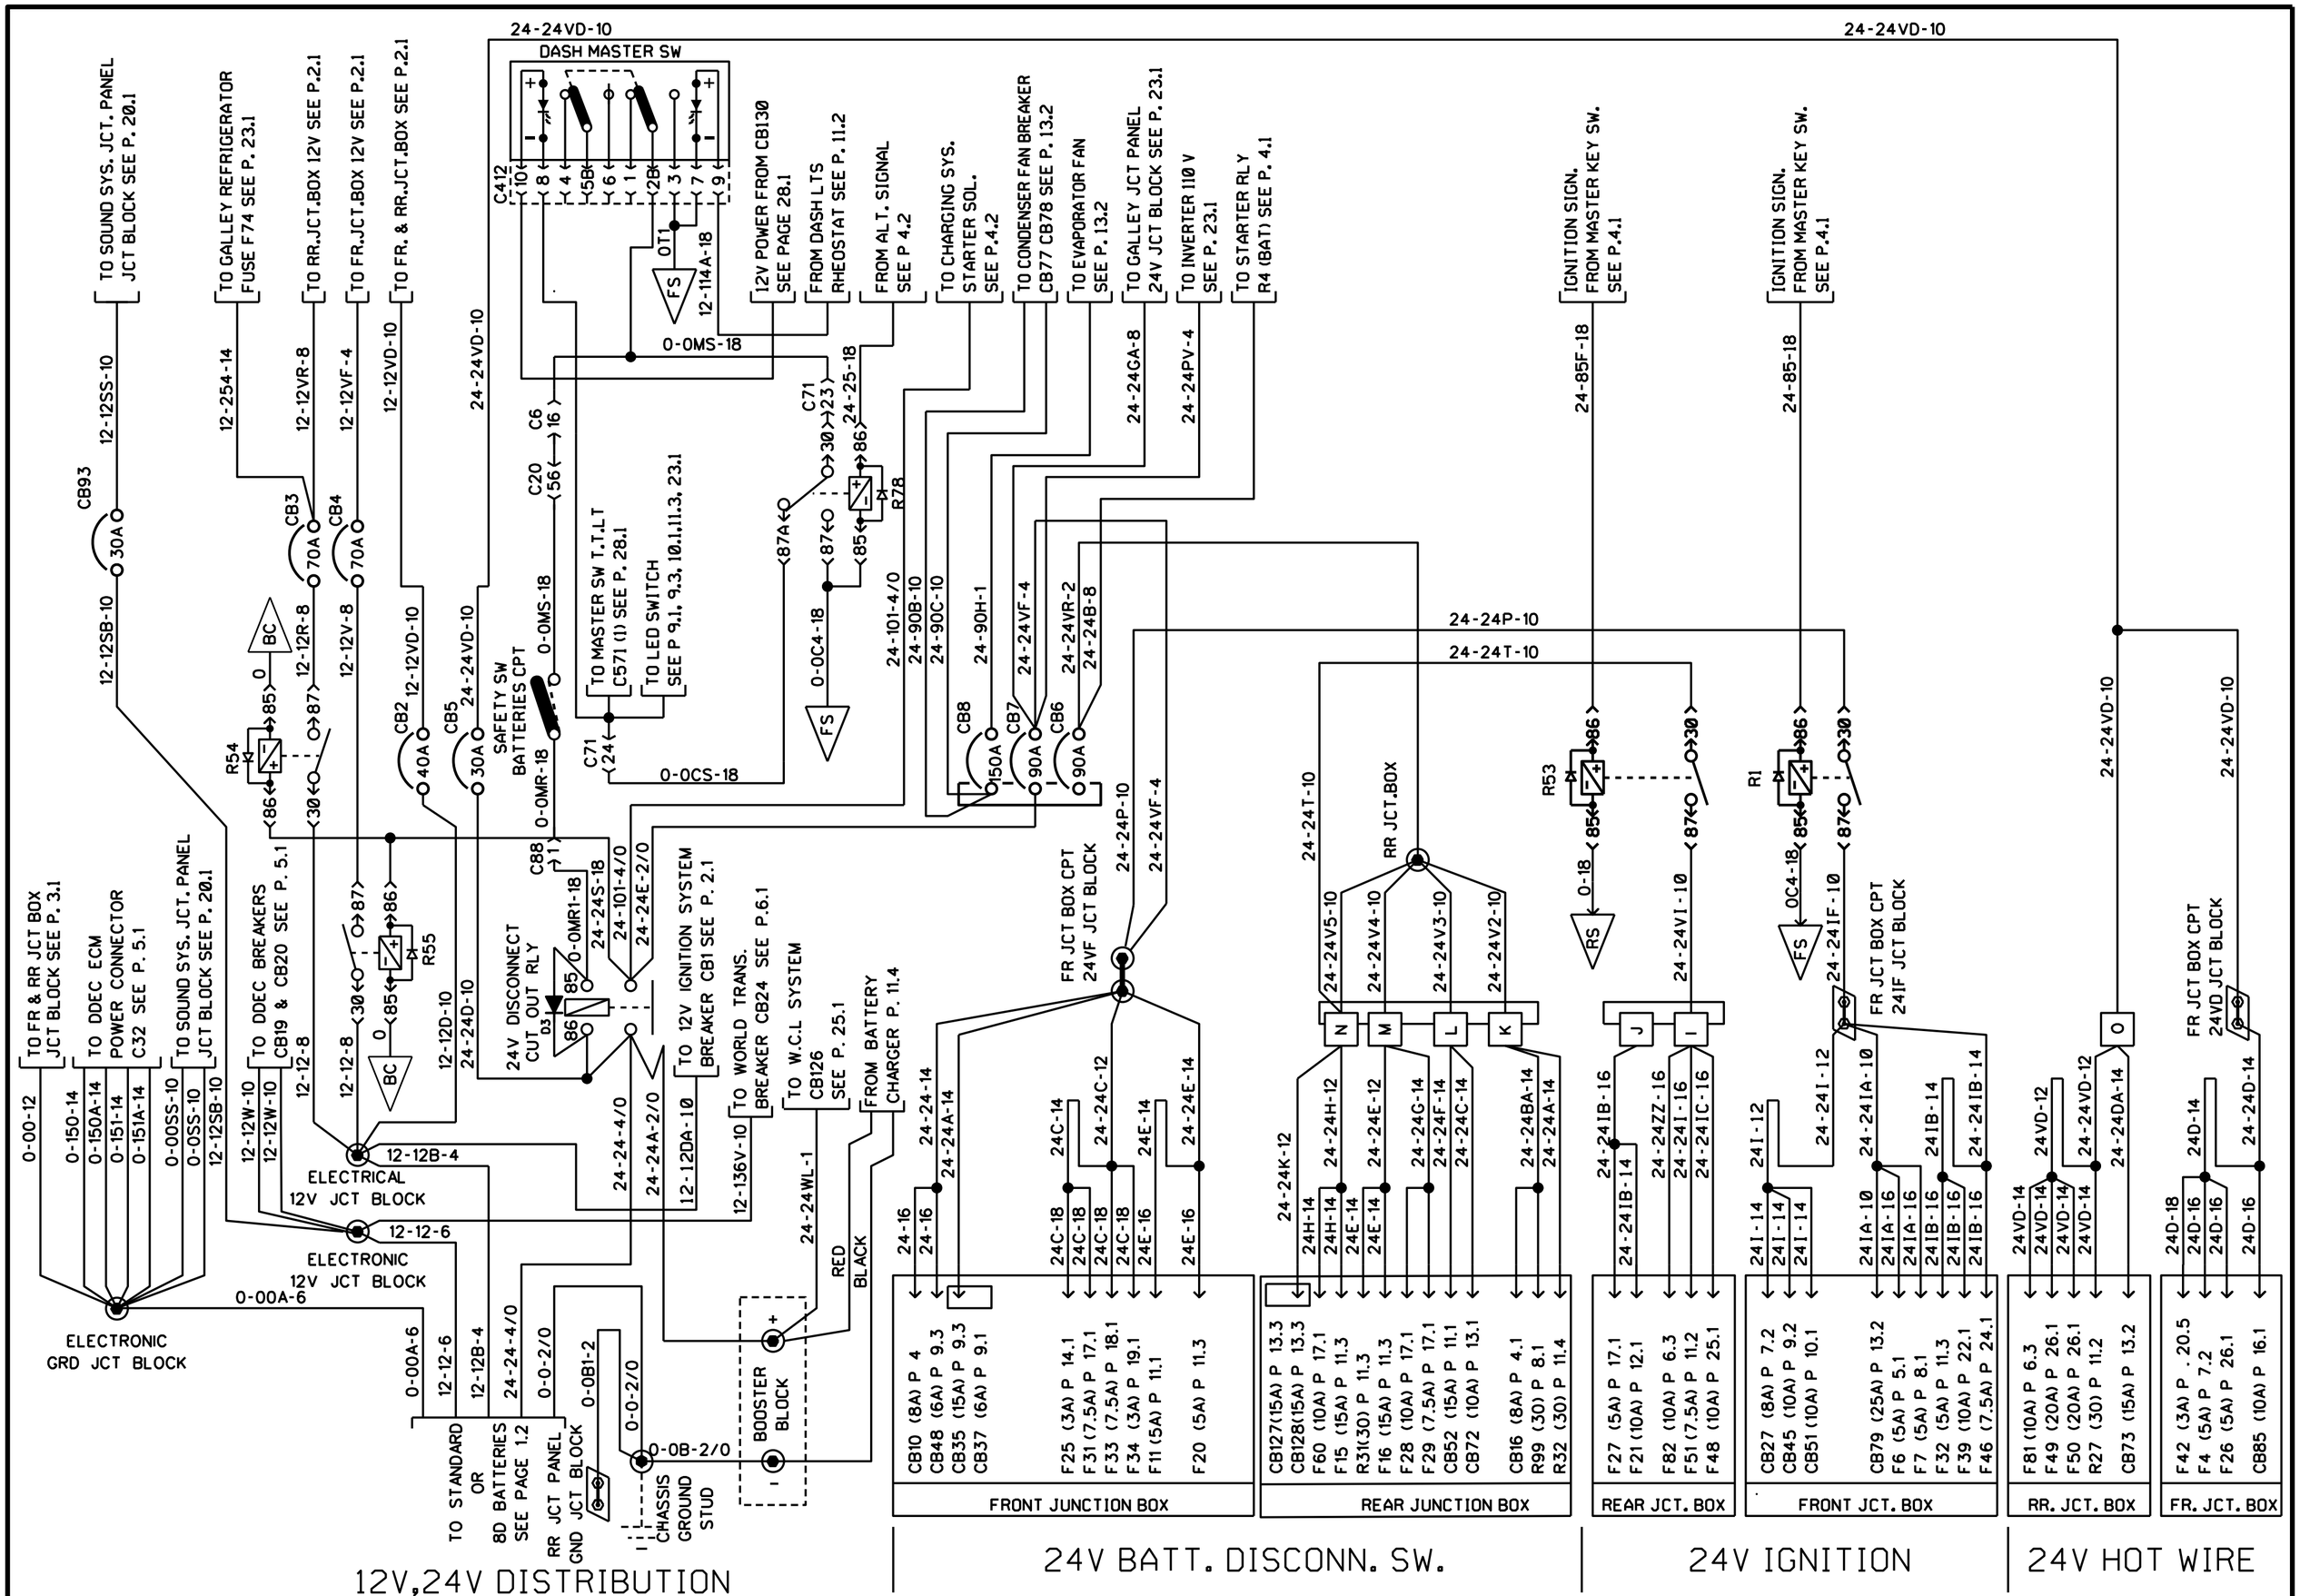
12V,24V DISTRIBUTION
24V BATT. DISCONN. SW.
24V IGNITION
24V HOT WIRE
DASH MASTER SW
FRONT JUNCTION BOX
REAR JUNCTION BOX
REAR JCT. BOX
FRONT JCT. BOX
RR. JCT. BOX
FR. JCT. BOX
ELECTRONIC GRD JCT BLOCK
ELECTRONIC 12V JCT BLOCK
ELECTRICAL 12V JCT BLOCK
FR JCT BOX CPT 24VF JCT BLOCK
RR JCT.BOX
FR JCT BOX CPT 24IF JCT BLOCK
FR JCT BOX CPT 24VD JCT BLOCK
BOOSTER BLOCK
CHASSIS GROUND STUD
SAFETY SW BATTERIES CPT
24V DISCONNECT CUT OUT RLY
TO STANDARD OR 8D BATTERIES SEE PAGE 1.2
RR JCT PANEL GND JCT BLOCK
TO SOUND SYS. JCT. PANEL JCT BLOCK SEE P. 20.1
TO GALLEY REFRIGERATOR FUSE F74 SEE P. 23.1
TO RR.JCT.BOX 12V SEE P.2.1
TO FR.JCT.BOX 12V SEE P.2.1
TO FR. & RR.JCT.BOX SEE P.2.1
TO MASTER SW T.T.LT C571 (1) SEE P. 28.1
TO LED SWITCH SEE P 9.1, 9.3, 10.1,11.3, 23.1
12V POWER FROM CB130 SEE PAGE 28.1
FROM DASH LTS RHEOSTAT SEE P. 11.2
FROM ALT. SIGNAL SEE P 4.2
TO CHARGING SYS. STARTER SOL. SEE P.4.2
TO CONDENSER FAN BREAKER CB77 CB78 SEE P. 13.2
TO EVAPORATOR FAN SEE P. 13.2
TO GALLEY JCT PANEL 24V JCT BLOCK SEE P. 23.1
TO INVERTER 110 V SEE P. 23.1
TO STARTER RLY R4 (BAT) SEE P. 4.1
IGNITION SIGN. FROM MASTER KEY SW. SEE P.4.1
IGNITION SIGN. FROM MASTER KEY SW. SEE P.4.1
TO 12V IGNITION SYSTEM BREAKER CB1 SEE P. 2.1
TO WORLD TRANS. BREAKER CB24 SEE P.6.1
TO W.C.L SYSTEM CB126 SEE P. 25.1
FROM BATTERY CHARGER P. 11.4
TO FR & RR JCT BOX JCT BLOCK SEE P. 3.1
TO DDEC ECM POWER CONNECTOR C32 SEE P. 5.1
TO SOUND SYS. JCT. PANEL JCT BLOCK SEE P. 20.1
TO DDEC BREAKERS CB19 & CB20 SEE P. 5.1
24-24VD-10
12-12SS-10
12-12SB-10
12-254-14
12-12VR-8
12-12VF-4
12-12VD-10
12-12R-8
12-12V-8
12-12W-10
12-12D-10
24-24D-10
12-12B-4
12-12B-6
12-12B-10
12-12B-8
24-24VF-4
24-24VR-2
24-24B-8
24-24GA-8
24-24PV-4
24-24T-10
24-24P-10
24-24P-4
24-24VF-10
24-24VR-10
24-24B-10
24-24GA-10
24-24PV-10
24-24T-4
24-24P-2
24-24VF-2
24-24VR-4
24-24B-4
24-24GA-4
24-24PV-2
24-24T-2
24-24P-8
24-24VF-8
24-24VR-8
24-24B-2
24-24GA-2
24-24PV-8
24-24T-8
24-24P-12
24-24VF-12
24-24VR-12
24-24B-12
24-24GA-12
24-24PV-12
24-24T-12
24-24P-14
24-24VF-14
24-24VR-14
24-24B-14
24-24GA-14
24-24PV-14
24-24T-14
24-24P-16
24-24VF-16
24-24VR-16
24-24B-16
24-24GA-16
24-24PV-16
24-24T-16
24-24P-18
24-24VF-18
24-24VR-18
24-24B-18
24-24GA-18
24-24PV-18
24-24T-18
24-24P-20
24-24VF-20
24-24VR-20
24-24B-20
24-24GA-20
24-24PV-20
24-24T-20

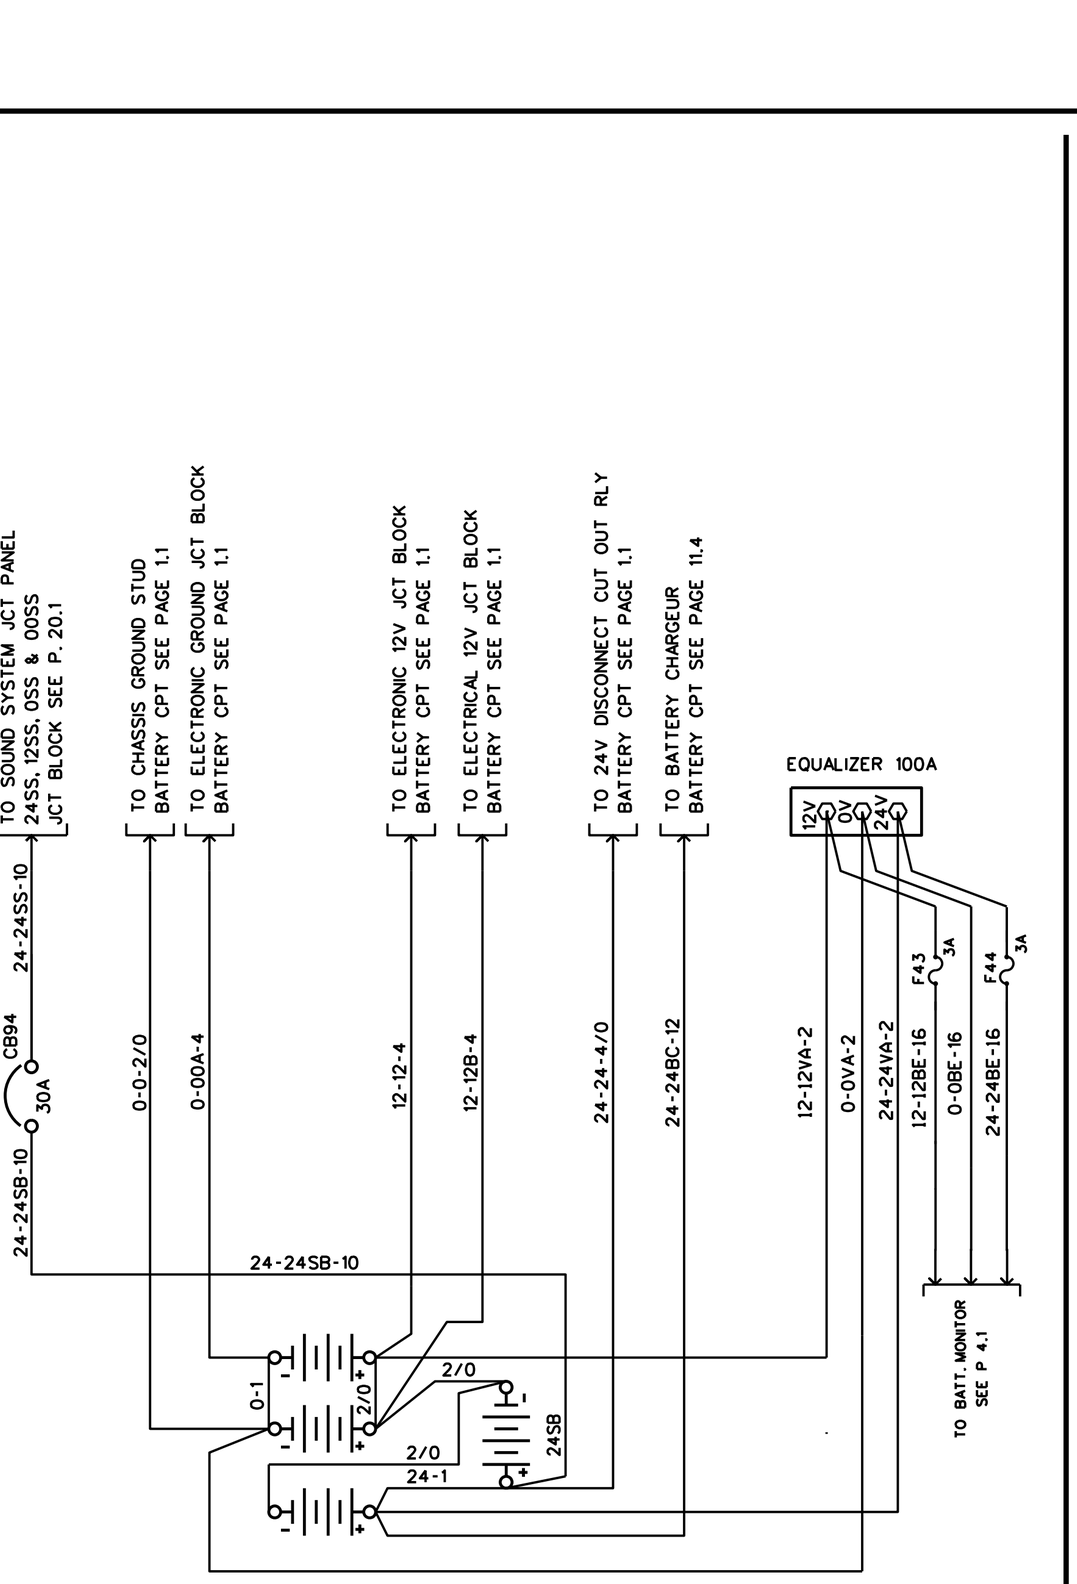

STANDARD BATTERIES

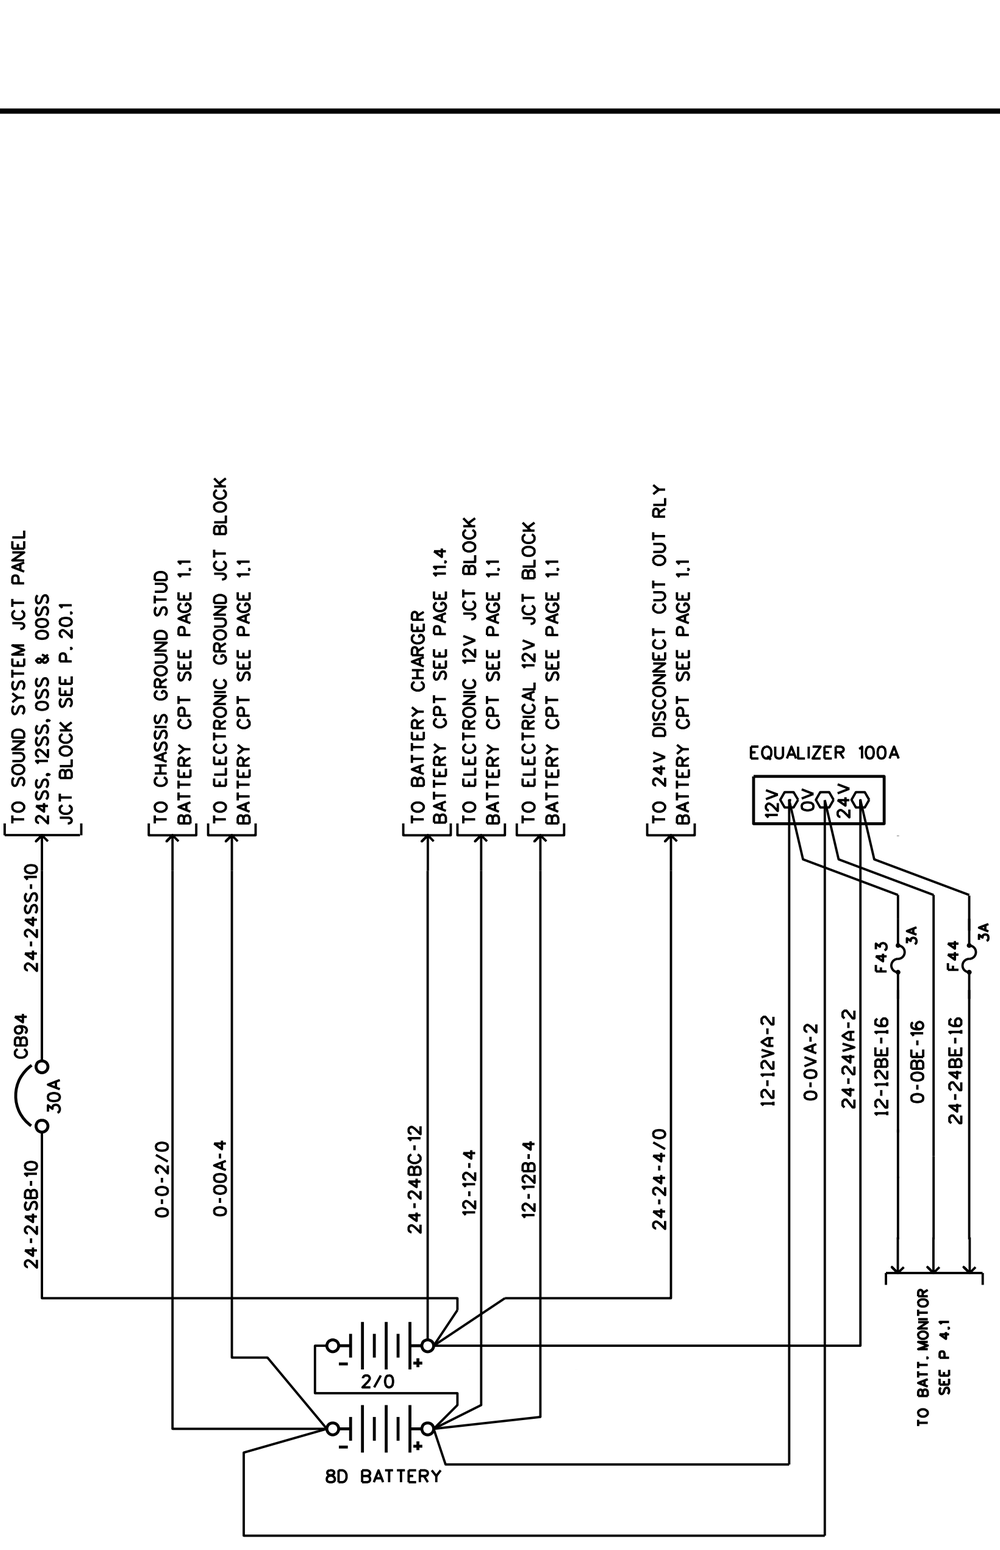

8D BATTERIES

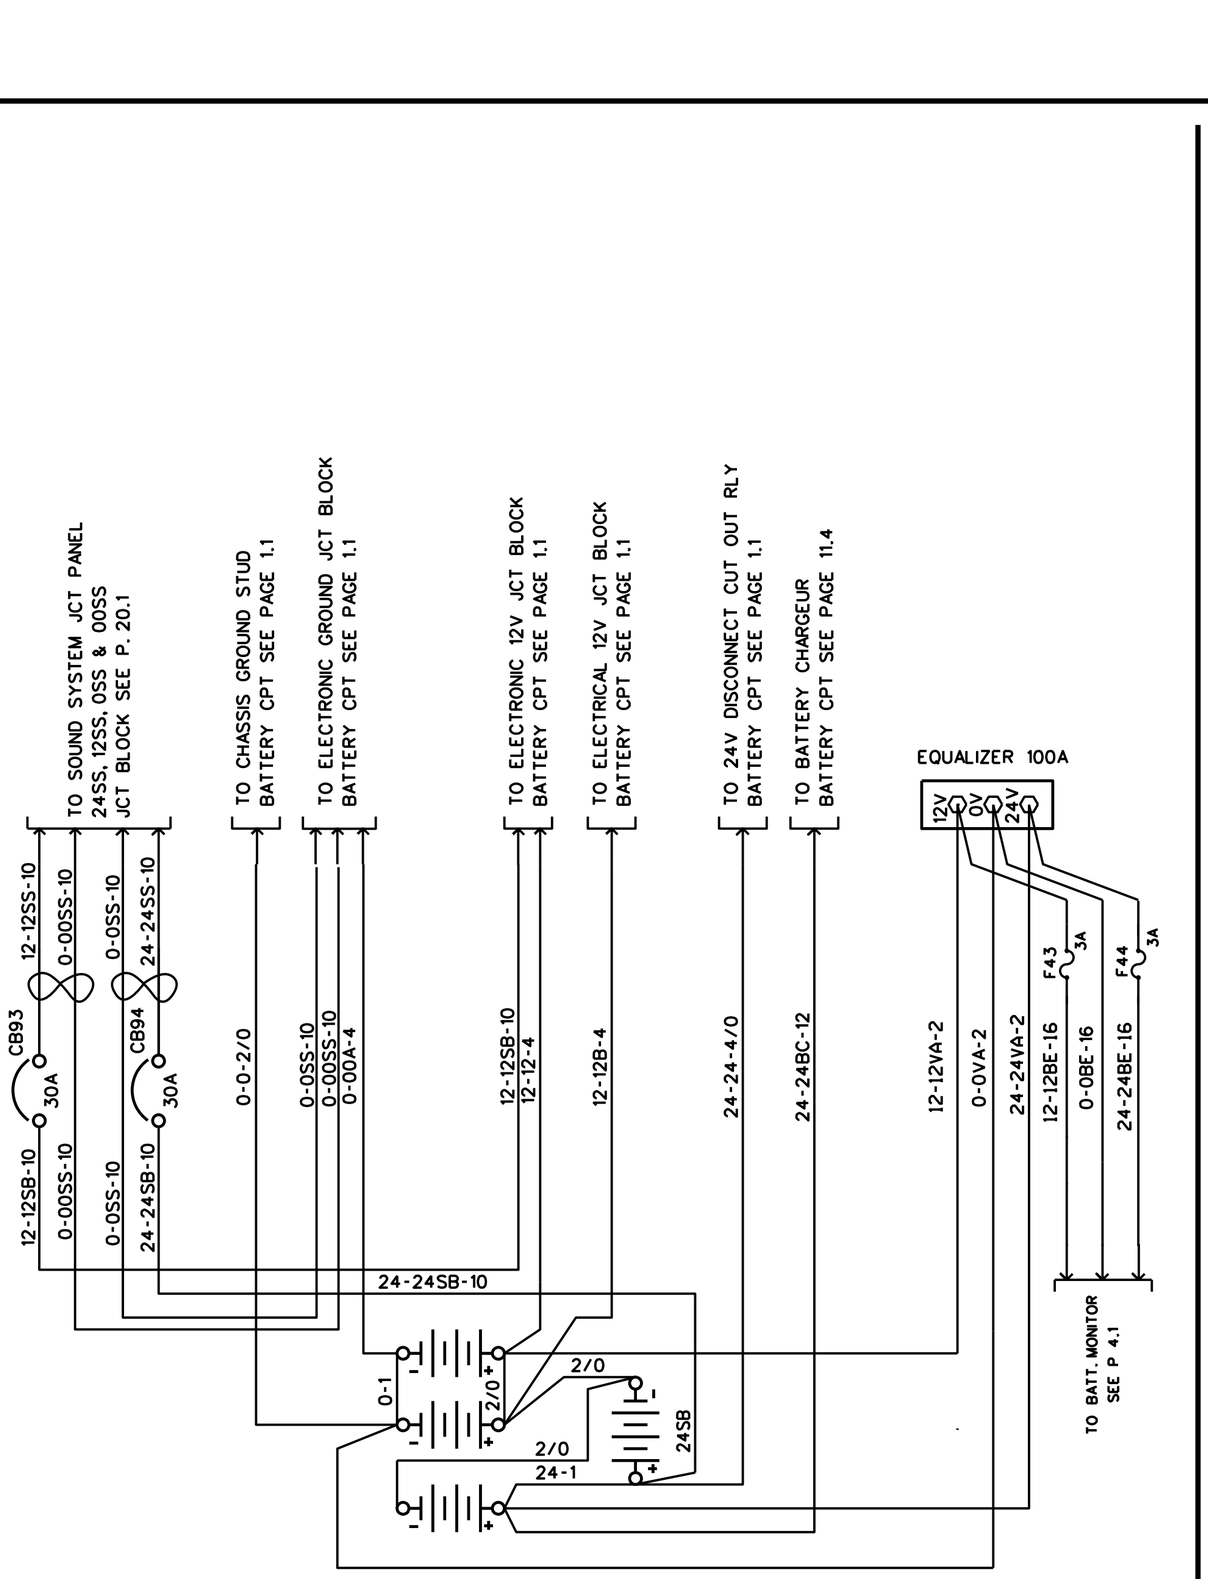

STANDARD BATTERIES

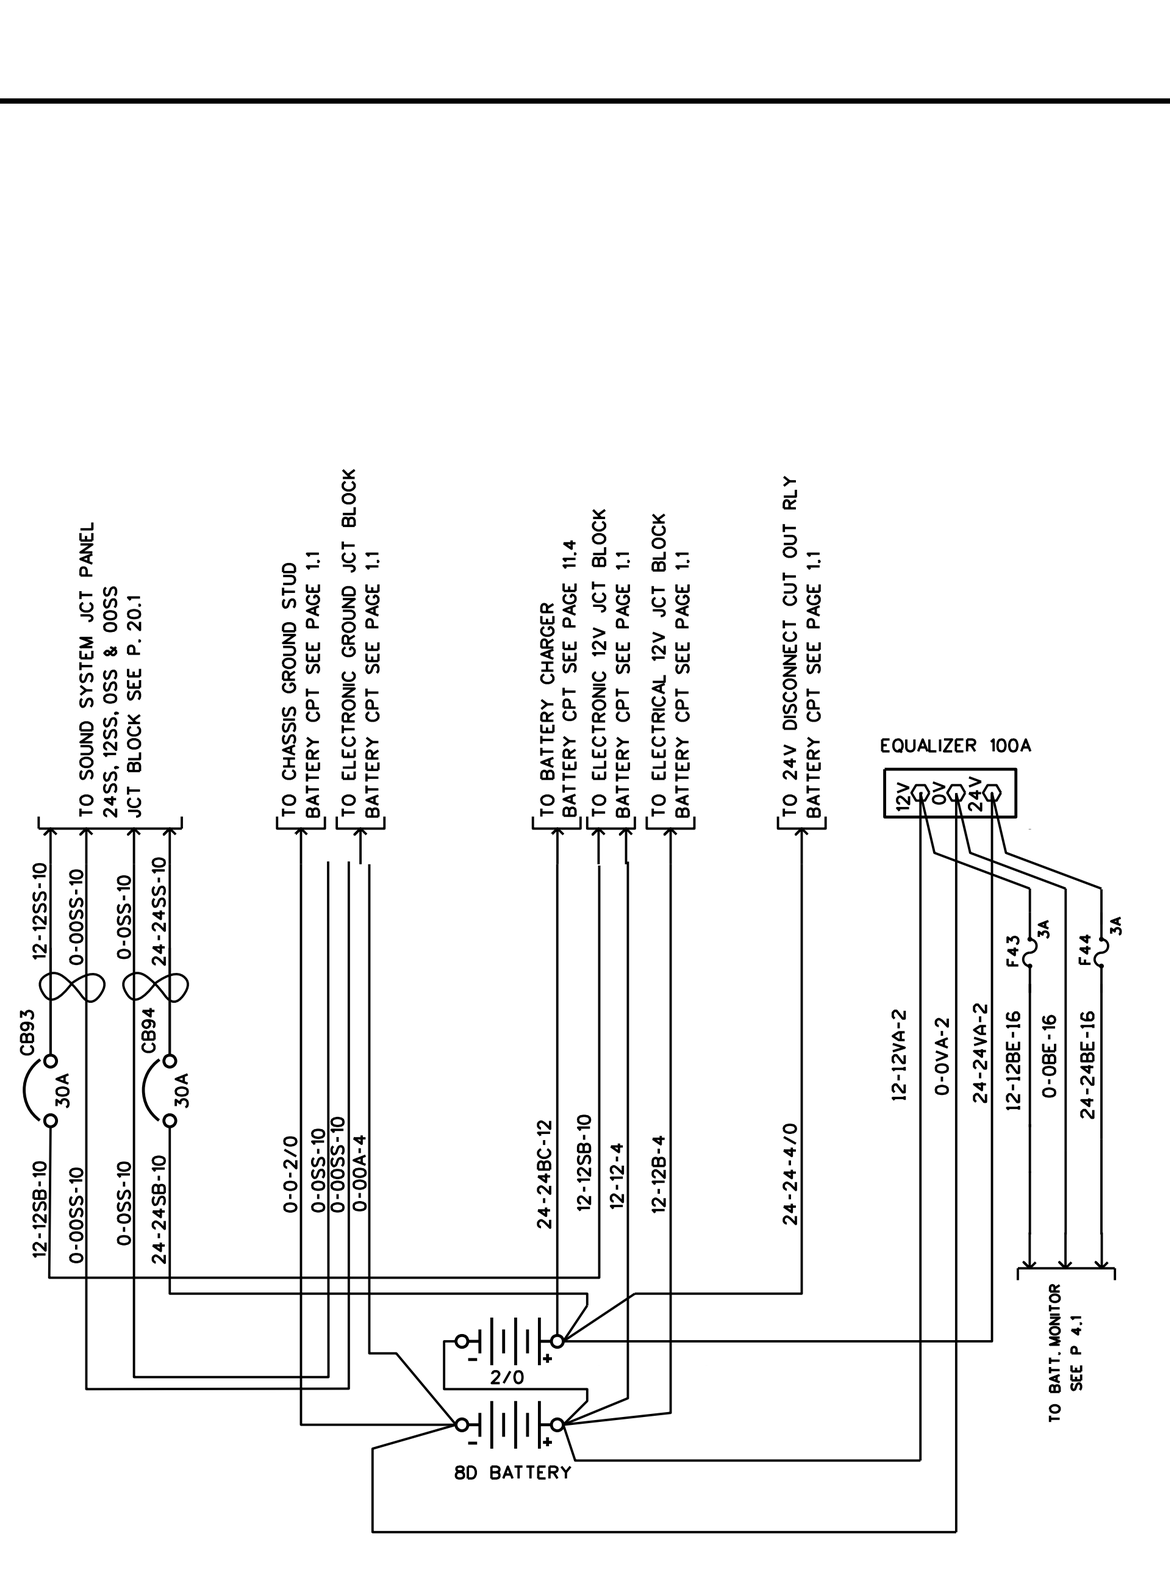

8D BATTERIES

PREVOST | WIRING DIAGRAM | NO: D060976 | PAGE: 2.1 | REVISION 00

12V BATT. DISCONN. SW.

FRONT JUNCTION BOX

CB38 (10A) P 9.1
CB39 (20A) P 9.1
CB43 (20A) P 9.1
CB44 (15A) P 9.1
CB46 (20A) P 9.2
F8 (10A) P 9.2
F10 (15A) P 9.3
F3 (20A) P 7.2
F22 (10A) P 14.1
F24 (15A) P 14.1
F14 (15A) P 11.3
F23 (15A) P 14.1
CB130 (6A) P.28.1
CB57 (10A) P.11.2
CB58 (6A) P.13.1
CB106 (15A) P.21.1

12-12A-12
12-12B-12
12-12C-12
12E-14
12-12E-12
12E-14
12-12F-12
12G-14
12-12G-12
12G-14
12-12G-14
12-12J-14
12-12K-12
12-12K-12
12-12M-14

FR. JCT BOX CPT
12VF JCT BLOCK

12-12012V-16 → TO POWER 12V CB SEE P. 20.5

12-12VF-4 → FROM 12V DITRIBUTION BREAKER CB4 SEE P.1.1

REAR JUNCTION BOX

CB42 (8A) P 9.1
CB49 (6A) P 9.3
F57 (5A) P.17.1
F9 (15A) P 9.3
R9 (30) P 9.3

12-12A-16
12-12E-14
12-12F-14
12-32B-14

D
E

12-12VR-8 → FROM 12V DITRIBUTION BREAKER CB3 SEE P.1.1

12V IGNITION

REAR JCT.BOX

F83 (10A) P6.3
C43 (7) P4.2
CB21 (10A) P.5.1

12-12I-14
12-12I-14
12-12I-14

C

12-12VI-10

R2

BC — 0-16 — 85 — 86 — 24-85F-18 → 24V IGN. ENG. CTRL SW FROM BATTERIES CPT JCT• D SEE P.4.1

12-12VI-10 — 87 — 30 — 12-12IA-10 — CB1 40A — 12-12DA-10 → FROM 12V DITRIBUTION 12V BATTERY POST SEE P.1.1

12-12VI-10

FRONT JCT.BOX

F47 (7.5A) P 24.1
CB28 (6A) P 7.1
CB105 (6A) P 21.1

12-12I-16
12-12IA-16
12-12IE-16

12V HOT WIRE

TO DDR CONNECTOR SEE P. 6.1

12-12CE-18 — C579 (6 D) — F62 3A — (A 3) C579 — 12-12C-18 — F — 12-12VD-10 — 12-12VD-10 → FROM 12V DISTRIBUTION BREAKER CB2 SEE P.1.1

FRONT JCT.BOX

CB129 SEE P 7.1

12-12D-18

12-12VD-10

12-251-18 → TO PRODRIVER SEE P.8.1

TO RADIO BATTERY YELLOW WIRE SEE P 20.1

12-12R-18

12-251A-18 → TO DATA LOGGER

PREVOST | WIRING DIAGRAM

12V BATT. DISCONN. SW.

FRONT JUNCTION BOX
- CB38 (10A) P 9.1
- CB39 (20A) P 9.1
- CB43 (20A) P 9.1
- CB44 (15A) P 9.1
- CB46 (20A) P 9.2
- F8 (10A) P 9.2
- F10 (15A) P 9.3
- F3 (20A) P 7.2
- F22 (10A) P 14.1
- F24 (15A) P 14.1
- F14 (15A) P 11.3
- F23 (15A) P 14.1
- CB130 (6A) P.28.1
- CB57 (10A) P.11.2
- CB58 (6A) P.13.1
- CB106 (15A) P.21.1

12-12A-12
12-12B-12
12-12C-12
12E-14
12-12E-12
12E-14
12-12F-12
12G-14
12-12G-12
12G-14
12-12G-14
12-12J-14
12-12K-12
12-12K-12
12-12M-14

FR. JCT BOX CPT
12VF JCT BLOCK

12-12012V-16 → TO POWER 12V CB SEE P. 20.5

12-12VF-4 → FROM 12V DITRIBUTION BREAKER CB4 SEE P.1.1

REAR JUNCTION BOX
- CB42 (8A) P 9.1
- CB49 (6A) P 9.3
- F57 (5A) P.17.1
- F9 (15A) P 9.3
- R9 (30) P 9.3

12-12A-16
12-12E-14
12-12F-14
12-32B-14

D
E

12-12VR-8 → 12-12VR-8 → FROM 12V DITRIBUTION BREAKER CB3 SEE P.1.1

12V IGNITION

REAR JCT.BOX
- F83 (10A) P6.3
- C43 (7) P4.2
- CB21 (10A) P.5.1

12-12I-14
12-12I-14
12-12I-14

C

12-12VI-10

R2
BC → 0-16 → 85 / 86 → 24-85F-18 → 24V IGN. ENG. CTRL SW FROM BATTERIES CPT JCT• D SEE P.4.1

12-12VI-10 → 87 / 30 → 12-12IA-10 → CB1 40A → 12-12DA-10 → FROM 12V DITRIBUTION 12V BATTERY POST SEE P.1.1

12-12I-10

FRONT JCT.BOX
- F47 (7.5A) P 24.1
- CB28 (6A) P 7.1
- CB105 (6A) P 21.1

12-12I-16
12-12IA-16
12-12IE-16

12V HOT WIRE

TO DDR CONNECTOR SEE P. 6.1 → 12-12CE-18 → C579 (6 D) → F62 3A → C579 (A 3) → 12-12C-18 → F → 12-12VD-10 → 12-12VD-10 → FROM 12V DISTRIBUTION BREAKER CB2 SEE P.1.1

FRONT JCT.BOX
- CB129 SEE P 7. 1
- F84 (10A) SEE P 6.3

12-12D-18
12-12VD-10
12-251-18 → TO PRODRIVER SEE P.8.1
12-251A-18 → TO DATA LOGGER

TO RADIO BATTERY YELLOW WIRE SEE P 20.1 → 12-12R-18

NO: D060976

PAGE: 2.1

REVISION 01

PREVOST | WIRING DIAGRAM | NO: D060976 | PAGE: 2.1 | REVISION 02

12V BATT. DISCONN. SW.

FRONT JUNCTION BOX

CB38 (10A) P 9.1
CB39 (20A) P 9.1
CB43 (20A) P 9.1
CB44 (15A) P 9.1
CB46 (20A) P 9.2
F8 (10A) P 9.2
F10 (15A) P 9.3
F3 (20A) P 7.2
F22 (10A) P 14.1
F24 (15A) P 14.1
F14 (15A) P 11.3
F23 (15A) P 14.1
CB130 (6A) P.28.1
CB57 (10A) P.11.2
CB58 (6A) P.13.1
CB106 (15A) P.21.1

12-12A-12
12-12B-12
12-12C-12
12E-14
12-12E-12
12E-14
12-12F-12
12G-14
12-12G-12
12G-14
12-12G-14
12-12J-14
12-12K-12
12-12K-12
12-12M-14

FR. JCT BOX CPT
12VF JCT BLOCK

12-12012V-16 → TO POWER 12V CB SEE P. 20.5

12-12VF-4 → FROM 12V DITRIBUTION BREAKER CB4 SEE P.1.1

REAR JUNCTION BOX

CB42 (8A) P 9.1
CB49 (6A) P 9.3
F57 (5A) P.17.1
F9 (15A) P 9.3
R9 (30) P 9.3

12-12A-16
12-12E-14
12-12F-14
12-32B-14

D
E

12-12VR-8 → 12-12VR-8 → FROM 12V DITRIBUTION BREAKER CB3 SEE P.1.1

12V IGNITION

REAR JCT.BOX

F83 (10A) P6.3
C43 (7) P4.2
CB21 (10A) P.5.1

12-12I-14
12-12I-14
12-12I-14

C

R2

BC — 0-16 — 85 — 86 — 24-85F-18 → 24V IGN. ENG. CTRL SW FROM BATTERIES CPT SEE P.4.1

12-12VI-10 — 87 — 30 — 12-12IA-10 — CB1 40A — 12-12DA-10 → FROM 12V DITRIBUTION 12V BATTERY POST SEE P.1.1

12-12VI-10

FRONT JCT.BOX

F47 (7.5A) P 24.1
CB28 (6A) P 7.1
CB105 (6A) P 21.1

12-12I-16
12-12IA-16
12-12IE-16

12V HOT WIRE

TO DDR CONNECTOR SEE P. 6.1

12-12CE-18 — C579 (6 D) — F62 3A — C579 (A 3) — 12-12C-18 — F — 12-12VD-10 → 12-12VD-10 → FROM 12V DISTRIBUTION BREAKER CB2 SEE P.1.1

FRONT JCT.BOX

CB129 SEE P 7.1
F84 (10A) SEE P 6.3

12-12D-18
12-12VD-10
12-251-18 → TO PRODRIVER SEE P.8.1

TO RADIO BATTERY YELLOW WIRE SEE P 20.1

12-12R-18
12-251A-18 → TO DATA LOGGER

PREVOST | WIRING DIAGRAM

NO: D060976

PAGE: 2.1

REVISION 04

12V BATT. DISCONN. SW.

FRONT JUNCTION BOX

CB38 (10A) P 9.1
CB39 (20A) P 9.1
CB43 (20A) P 9.1
CB44 (15A) P 9.1
CB46 (20A) P 9.2
F8 (10A) P 9.2
F10 (15A) P 9.3
F3 (20A) P 7.2
F22 (10A) P 14.1
F24 (15A) P 14.1
F14 (15A) P 11.3
F23 (15A) P 14.1
CB130 (6A) P.28.1
CB57 (10A) P.11.2
CB58 (6A) P.13.1
CB106 (15A) P.21.1

12-12A-12
12-12B-12
12-12C-12
12E-14
12-12E-12
12E-14
12-12F-12
12G-14
12-12G-12
12G-14
12-12G-14
12-12J-14
12-12K-12
12-12K-12
12-12M-14

FR. JCT BOX CPT
12VF JCT BLOCK

12-12012V-16 → TO POWER 12V CB SEE P. 20.5

12-12VF-4 → FROM 12V DITRIBUTION BREAKER CB4 SEE P.1.1

REAR JUNCTION BOX

CB42 (8A) P 9.1
CB49 (6A) P 9.3
F57 (5A) P.17.1
F9 (15A) P 9.3
R9 (30) P 9.3

12-12A-16
12-12E-14
12-12F-14
12-32B-14

D
E

12-12VR-8 → 12-12VR-8 → FROM 12V DITRIBUTION BREAKER CB3 SEE P.1.1

12V IGNITION

REAR JCT.BOX

F83 (10A) P6.3
C43 (7) P4.2
CB21 (10A) P.5.1

12-12I-14
12-12I-14
12-12I-14

C

12-12I-10

R2

BC 0-16 85 86 24-85F-18 → 24V IGN. ENG. CTRL SW FROM BATTERIES CPT SEE P.4.1

12-12VI-10 87 30 12-12IA-10 CB1 40A 12-12DA-10 → FROM 12V DITRIBUTION 12V BATTERY POST SEE P.1.1

FRONT JCT.BOX

F47 (7.5A) P 24.1
CB28 (6A) P 7.1
CB105 (6A) P 21.1

12-12I-16
12-12IA-16
12-12IE-16

12V HOT WIRE

TO DDR CONNECTOR SEE P. 6.1

12-12CE-18 C579 (6 F62 3A C579 (3 12-12C-18 F 12-12VD-10 12-12VD-10 → FROM 12V DISTRIBUTION BREAKER CB2 SEE P.1.1

FRONT JCT.BOX

CB129 SEE P 7.1
F84 (10A) SEE P 6.3

12-12D-18
12-12VD-10
12-251-18 → TO PRODRIVER SEE P.8.1

TO RADIO BATTERY YELLOW WIRE SEE P 20.1

12-12R-18
12-251A-18 → TO DATA LOGGER

PREVOST

WIRING DIAGRAM

CHASSIS GROUND

NO: D060976

PAGE: 3.1

REVISION 00

FRONT JUNCTION BOX COMPARTMENT

FRONT SECTION (FS)

- FRONT SERVICE CPT C105 (B), C106 (B), C239 (B), C260 (A&B), C183 (A)
- FRONT SERVICE CPT C267 (7), C536 (4)
- FRONT SERVICE CPT C323 (1), SH1, SH3
- BEHIND DASH RH PANEL C452 (1), AA2 (85)
- FRONT JCT. BOX - RELAYS & C522 (87)

0-0C-14, 0-0C1-18, 0-0C1-14, 0-0C2-18, 0-0C3-18, 0-0C4-18, C3 15, 0-0C4-14 → FRONT JCT BOX 0C GROUND STUD

- FRONT SERVICE CPT C435 (2), C246 (3), C242 (3) & STEP LT
- FRONT SERVICE CPT C102 (GRD), C103 (GRD), C104 (GRD), LO BUOY SW & STEP LT
- FRONT SERVICE CPT HEADLAMP CON C243
- FRONT JCT. BOX - CORNERING LTS RESISTORS
- FRONT JCT. BOX - FOG LTS RESISTORS
- LH CONSOLE

0-0L-14, 0-0L1-14, 0-0L2-12, 0-0L3-14, C3 22, 0-0L3-14, 0-0L4-14, C3 16, 0-0L4-14, 0-0L5-14, 24 C171 → FRONT JCT BOX 0L GROUND STUD

- WIPER MOTOR C177 (1) & PULSE MOD. C176 (1) & RH MIRROR C269 (3)
- DRIVER'S HTR FAN SPEED CTRL MOD. C175 (5)
- FR. SERV. CPT-HORNS C101 (B), & WASHER PUMP
- RADIATOR FAN CLUTCH SPEED 2 C549
- FR. JCT. BOX - WIPER PULSE MOD. C248 (1)
- LH CONSOLE SWITCH
- FRONT SERVICE CPT - LH MIRROR C268 (3)

0-0M-14, 0-0M3-12, 0-0M4-14, 0-0M5-14, 0-0M6-14, C3 14, 0-0M6-14, 0-0M7-14, C171 21, 0-0M7-14, 0-0M7-14 → FRONT JCT BOX 0M GROUND STUD

- FR. SERV. CPT- TAG PRESSURE SW.
- LH SWITCH PANEL
- DASH LH PANEL
- BEHIND DASH PANEL-AUDIBLE FLASHER C424 (1)
- BEHIND DASH PANEL - B/U MONITOR C394 (2)
- CLUSTER
- WIRELESS MIC.CHARGER P.20.5
- FR. JCT BOX - GROUND JCT BLOCK - SHIFTER & DDR CONNECTOR
- STEERING CONTROL ZF P. 15.1
- 12V POWER OUTLET
- HVAC DASH MODULE SEE P. 13.1

0-0T-18, 0-0T1-18, 0-0T2-18, C3 23, 0-0T3-14, 0-0T3-14, 0-0T4-16, 0-0T5-14 → FRONT JCT BOX 0T GROUND STUD

FRONT ROOF SECTION (FRS)

- ROOF ACCES. CLEARANCE LTS C213(1), FAN DEFROST C365(1), DEST. SIGN. C364(1) C478(3), WARNING C362(1) C363(1) C373(1), WIPER MOT. C361(1) & DRIVER'S LTS
- HEATING UPPER WINDSHIELD

0-0A-18, 0-0A-18, 0-0A-14, 0-0A-14, 0-0B-12 → FRONT LH ROOF GROUND STUD

REAR JUNCTION BOX COMPARTMENT

REAR SECTION (RS)

- VOLTAGE REGULATOR - C464(E)
- RR JCT. BOX - RELAYS,C136(1),C274(5)(6) R84, R85, C221(2)
- VIMN(87), VIMR(87), VIM4(30)
- RETARDER FAN CLUTCH RF2
- DOCKING LTS RESISTORS
- AISLE LTS C83(1)
- LH READ LTS C207(1), PASS & HOST CHIME SW
- RH READ LTS C206(1), PASS & HOST CHIME SW
- LAV. OCC. LT C143(3), GAL. LT C328(1) FLUOR C41(1)
- WCL RELAY R94,R96,R98,C388(9)
- LUGGAGE CPT WCL PUMP
- RELAY R55,R54,R2
- RR, LH SIDE MARK. AND FLASH C117,C121
- RR, RH SIDE MARK. AND FLASH C113,C114
- RR END LAMPS RH C119 (A)
- RR END LAMPS LH C120 (A)
- ENG CPT C126(B), C128(2), C129(2), C130(2), C131(2), C422(1)
- ENG CPT C230(2), C127(B), C122(B), C124(A)
- RR ROOF CAMERA C87(1)
- RR ROOF CLEARANCE LTS C87(2) & ENGINE CPT C287(A), C432(2) & C115(B)
- ENG CPT C125(B)
- ZF TANSMISSION MAIN GROUND
- LUG CPT RH SIDE MARKER C103, FLASHER C104
- LUG CPT FUEL TANK C152(A), DAMPER C111(2), WATER VALVE C155(D), BYPASS VALVE C156(B), LH SIDE FLASHER C102, LH SIDE MARKER C103
- GALLEY INVERTER JUNCTION BLOCK
- GALLEY COFFEMAKER
- GALLEY R47 R48 R79, C403 LAMP, SW LT, HEAT CONT

0-0AA-12, 0-0-18, 0-0A-16, 0-0W-18, 0-0R-16, 0-0DR-14 → P; 0-0B-10, 0-0A-14

C35 2, 0-0E-14 → Q

C35 4, 0-0G-14; C35 15, 0-0H-16, 0-0WC-16 → R; 0-0C-10

0-0W-8, 0-0D-16, 0-0DF-16 → BATTERY COMPARTMENT GROUND STUD

C91 51, 0-0RH-16; C91 52, 0-0LH-16 → 0-0X-12

C91 55, 0-0P-14; C91 54, 0-0R-14; C91 53, 0-0J-16 → 0-0XA-12, 0-0Y-12

C91 57, 0-0K-14; C91 56, 0-0N-14, 0-0Z0-14 → 0-0YA-12

C52 21, 0-0B-14 → 0-0Z-12

C52 20, 0-0A-14 → 0-0Z-12

0-0B1-2 → BATTERY COMPARTMENT GROUND STUD

0-0-6, 0-0-10, 0-0-16

LAVATO WALL (LW)

- HAT RACK C577,C578
- HAT RACK C575,C576
- HAT RACK C56
- HAT RACK C57

0-0D-12, 0-0F-12, 0-0J-10, 0-0K-10 → LAVATORY WALL GROUND STUD

EVAP. COMPT. (EC)

- CONDENSER FAN SPEED. RLY R39, R40, R41 P. 13.4
- CONDENSER FAN RELAY P. 13.4
- CONDENSER FAN LH P. 13.4
- EVAP. FAN P. 13.4

0-0C-16, 0-0D-10, 0-0D-10, 0-0-1 → EVAP. COMPARTMENT GROUND STUD

RR JCT BOX (RBG)

- DDEC ACCES. BATTERY GROUND SEE PAGE 5.1
- WORLD TRANS. ACCES. BAT. GRD SEE PAGE 6.1

0-953-18, 0-143W-12 → S; 0-00-12, 0-00-12 → FROM BATTERY COMPARTMENT ELECTRONIC GROUND JCT BLOCK SEE PAGE 1.1

FR JCT BOX (FBG)

- TELL TALE LIGHT MODULE SEE PAGE 28.1
- CLUSTER SEE P.7.1
- WIRELESS MIC. CHARGER P. 20.5

C74 36, 0-00A-18, 0-00-16

BATTERY GROUND

PREVOST | WIRING DIAGRAM | NO: D060976 | PAGE: 3.1 | REVISION 08

CHASSIS GROUND

FRONT JUNCTION BOX COMPARTMENT

FRONT SECTION (FS)

- FRONT SERVICE CPT C105 (B), C106 (B), C239 (B), C260 (A&B), C183 (A)
- FRONT SERVICE CPT C267 (7), C536 (4)
- FRONT SERVICE CPT C323 (1), SH1, SH3
- BEHIND DASH RH PANEL C452 (1), AA2 (85)
- FRONT JCT. BOX - RELAYS & C522 (87)

→ 0-0C-14, 0-0C1-18, 0-0C1-14, 0-0C2-18, 0-0C3-18, 0-0C4-18, C3 (15), 0-0C4-14 → FRONT JCT BOX 0C GROUND STUD

- FRONT SERVICE CPT C435 (2), C246 (3), C242 (3) & STEP LT
- FRONT SERVICE CPT C102 (GRD), C103 (GRD), C104 (GRD), LO BUOY SW & STEP LT
- FRONT SERVICE CPT HEADLAMP CON C243
- FRONT JCT. BOX - CORNERING LTS RESISTORS
- FRONT JCT. BOX - FOG LTS RESISTORS
- LH CONSOLE

→ 0-0L-14, 0-0L1-14, 0-0L2-12, 0-0L3-14, 0-0L4-14, C3 (22), (16), 0-0L3-14, 0-0L4-14, 0-0L5-14, (24) C171 → FRONT JCT BOX 0L GROUND STUD

- WIPER MOTOR C177 (1) & PULSE MOD. C176 (1) & RH MIRROR C269 (3)
- DRIVER'S HTR FAN SPEED CTRL MOD. C175 (5)
- FR. SERV. CPT-HORNS C101 (B), & WASHER PUMP
- RADIATOR FAN CLUTCH SPEED 2 C549
- FR. JCT. BOX - WIPER PULSE MOD. C248 (1)
- LH CONSOLE SWITCH
- FRONT SERVICE CPT - LH MIRROR C268 (3)

→ 0-0M-14, 0-0M3-12, 0-0M4-14, 0-0M5-14, 0-0M6-14, C3 (14), 0-0M6-14, 0-0M7-14, C171 (21), 0-0M7-14, 0-0M7-14 → FRONT JCT BOX 0M GROUND STUD

- FR. SERV. CPT- TAG PRESSURE SW.
- LH SWITCH PANEL
- DASH LH PANEL
- BEHIND DASH PANEL-AUDIBLE FLASHER C424 (1)
- BEHIND DASH PANEL - B/U MONITOR C394 (2)
- CLUSTER
- WIRELESS MIC.CHARGER P.20.5
- FR. JCT BOX - GROUND JCT BLOCK - SHIFTER & DDR CONNECTOR
- STEERING CONTROL ZF P. 15.1
- 12V POWER OUTLET
- HVAC DASH MODULE SEE P. 13.1
- DDR CONNECTOR SEE P5.1

→ 0-0T-18, 0-0T1-18, 0-0T2-18, C3 (23), 0-0T3-14, 0-0T3-14, 0-0T4-16, 0-0T5-14, 0-0T7-14 → FRONT JCT BOX 0T GROUND STUD

FRONT ROOF SECTION (FRS)

- ROOF ACCES. CLEARANCE LTS C213(1), FAN DEFROST C365(1), DEST. SIGN. C364(1) C478(3), WARNING C362(1) C363(1) C373(1), WIPER MOT. C361(1) & DRIVER'S LTS
- HEATING UPPER WINDSHIELD

→ 0-0A-18, 0-0A-18, 0-0A-14, 0-0A-14, 0-0B-12 → FRONT LH ROOF GROUND STUD

REAR JUNCTION BOX COMPARTMENT

REAR SECTION (RS)

- VOLTAGE REGULATOR - C464(E)
- RR JCT. BOX - RELAYS,C136(1),C274(5)(6) R84, R85, C221(2)
- VIMN(87), VIMR(87), VIM4(30)
- RETARDER FAN CLUTCH RF2
- DOCKING LTS RESISTORS
- AISLE LTS C83(1)
- LH READ LTS C207(1), PASS & HOST CHIME SW
- RH READ LTS C206(1), PASS & HOST CHIME SW
- LAV. OCC. LT C143(3), GAL. LT C328(1) FLUOR C41(1)
- WCL RELAY R94,R96,R98,C388(9)
- LUGGAGE CPT WCL PUMP RELAY R55,R54,R2
- RR, LH SIDE MARK. AND FLASH C117,C121
- RR, RH SIDE MARK. AND FLASH C113,C114
- RR END LAMPS RH C119 (A)
- RR END LAMPS LH C120 (A)
- ENG CPT C126(B), C128(2), C129(2), C130(2), C131(2), C422(1)
- ENG CPT C230(2), C127(B), C122(B), C124(A)
- RR ROOF CAMERA C87(1)
- RR ROOF CLEARANCE LTS C87(2) & ENGINE CPT C287(A), C432(2) & C115(B)
- ENG CPT C125(B)
- ZF TANSMISSION MAIN GROUND
- LUG CPT RH SIDE MARKER C103, FLASHER C104
- LUG CPT FUEL TANK C152(A), DAMPER C111(2), WATER VALVE C155(D), BYPASS VALVE C156(B), LH SIDE FLASHER C102, LH SIDE MARKER C103
- GALLEY INVERTER JUNCTION BLOCK
- GALLEY COFFEMAKER
- GALLEY R47 R48 R79, C403 LAMP, SW LT, HEAT CONT

→ 0-0AA-12, 0-0-18, 0-0A-16, P, 0-0B-10, 0-0A-14, 0-0W-18, 0-0R-16, 0-0DR-14, C35 (2), 0-0E-14, Q, (4), 0-0G-14, (15), 0-0H-16, 0-0WC-16, R, 0-0C-10, 0-0W-8, 0-0D-16, 0-0DF-16, C91 (51), 0-0RH-16, (52), 0-0LH-16, 0-0X-12, (55), 0-0P-14, (54), 0-0R-14, 0-0XA-12, (53), 0-0J-16, 0-0Y-12, (57), 0-0K-14, (56), 0-0N-14, 0-0YA-12, 0-0Z0-14, C52 (21), 0-0B-14, 0-0Z-12, (20), 0-0A-14, 0-0Z-12, 0-0-6, 0-0-10, 0-0-16 → BATTERY COMPARTMENT GROUND STUD; 0-0B1-2

LAVATORY WALL (LW)

- HAT RACK C577,C578
- HAT RACK C575,C576
- HAT RACK C56
- HAT RACK C57

→ 0-0D-12, 0-0F-12, 0-0J-10, 0-0K-10 → LAVATORY WALL GROUND STUD

EVAP. COMPT. (EC)

- CONDENSER FAN SPEED. RLY R39, R40, R41 P. 13.4
- CONDENSER FAN RELAY P. 13.4
- CONDENSER FAN LH P. 13.4
- EVAP. FAN P. 13.4

→ 0-0C-16, 0-0D-10, 0-0D-10, 0-0-1 → EVAP. COMPARTMENT GROUND STUD

RR JCT BOX (RBG)

- WORLD TRANS. ACCES. BAT. GRD SEE PAGE 6.1

0-143W-12, S, 0-00-12, 0-00-12 → FROM BATTERY COMPARTMENT ELECTRONIC GROUND JCT BLOCK SEE PAGE 1.1

FR JCT BOX (FBG)

- TELL TALE LIGHT MODULE SEE PAGE 28.1
- CLUSTER SEE P.7.1
- WIRELESS MIC. CHARGER P. 20.5

C74 (36), 0-00A-18, 0-00-16

BATTERY GROUND

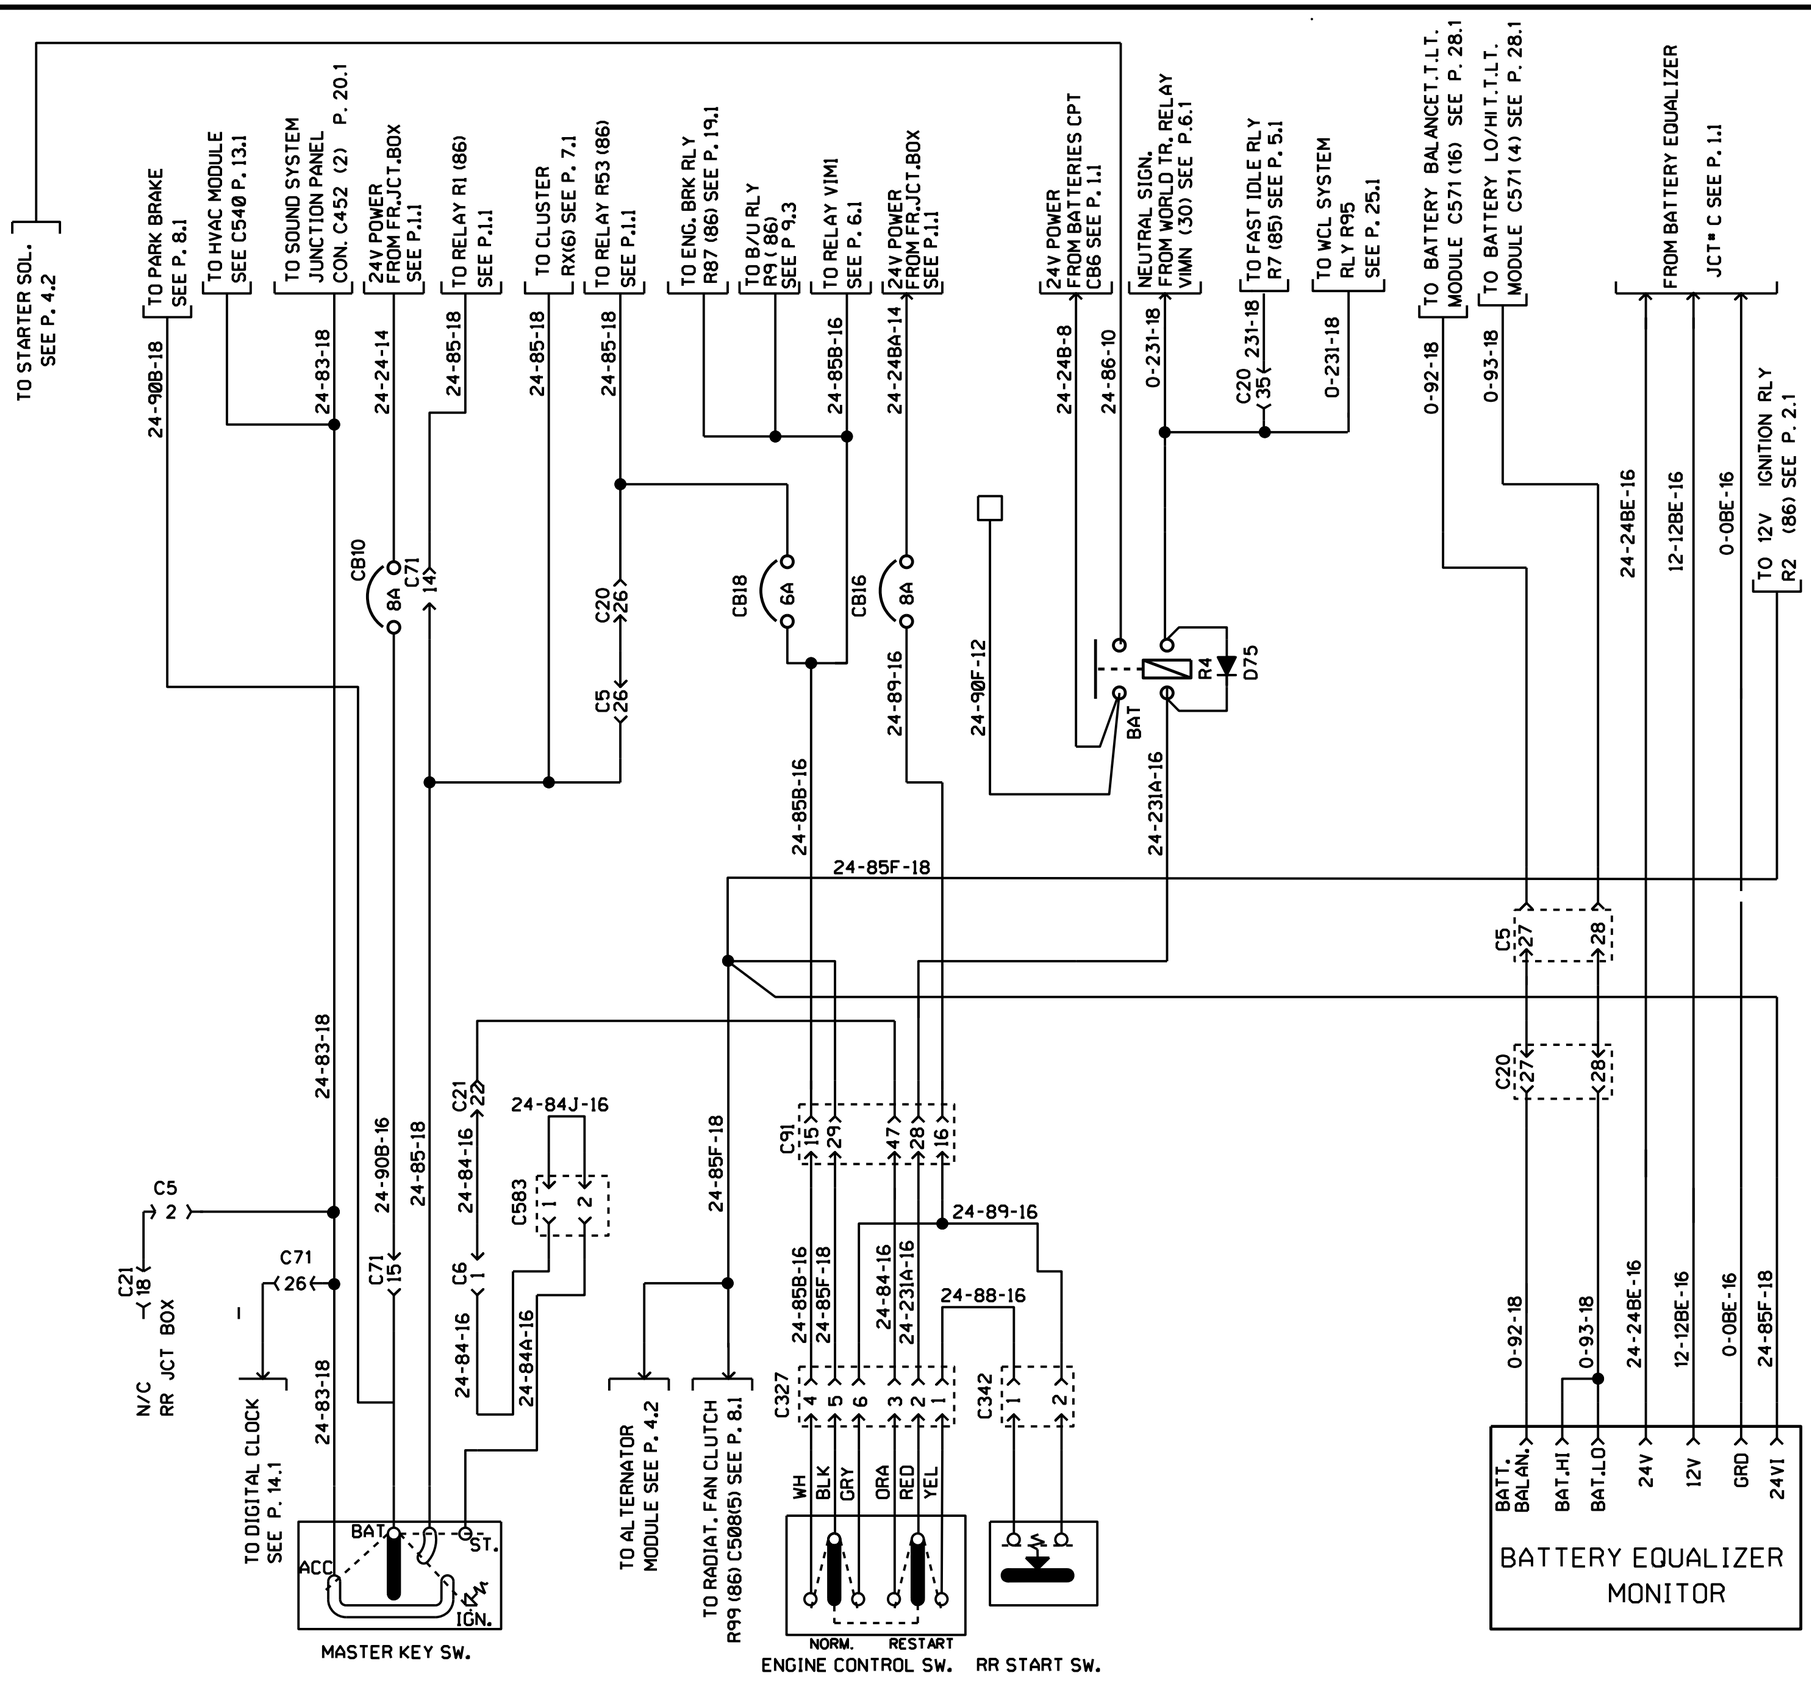

ENGINE CONTROL

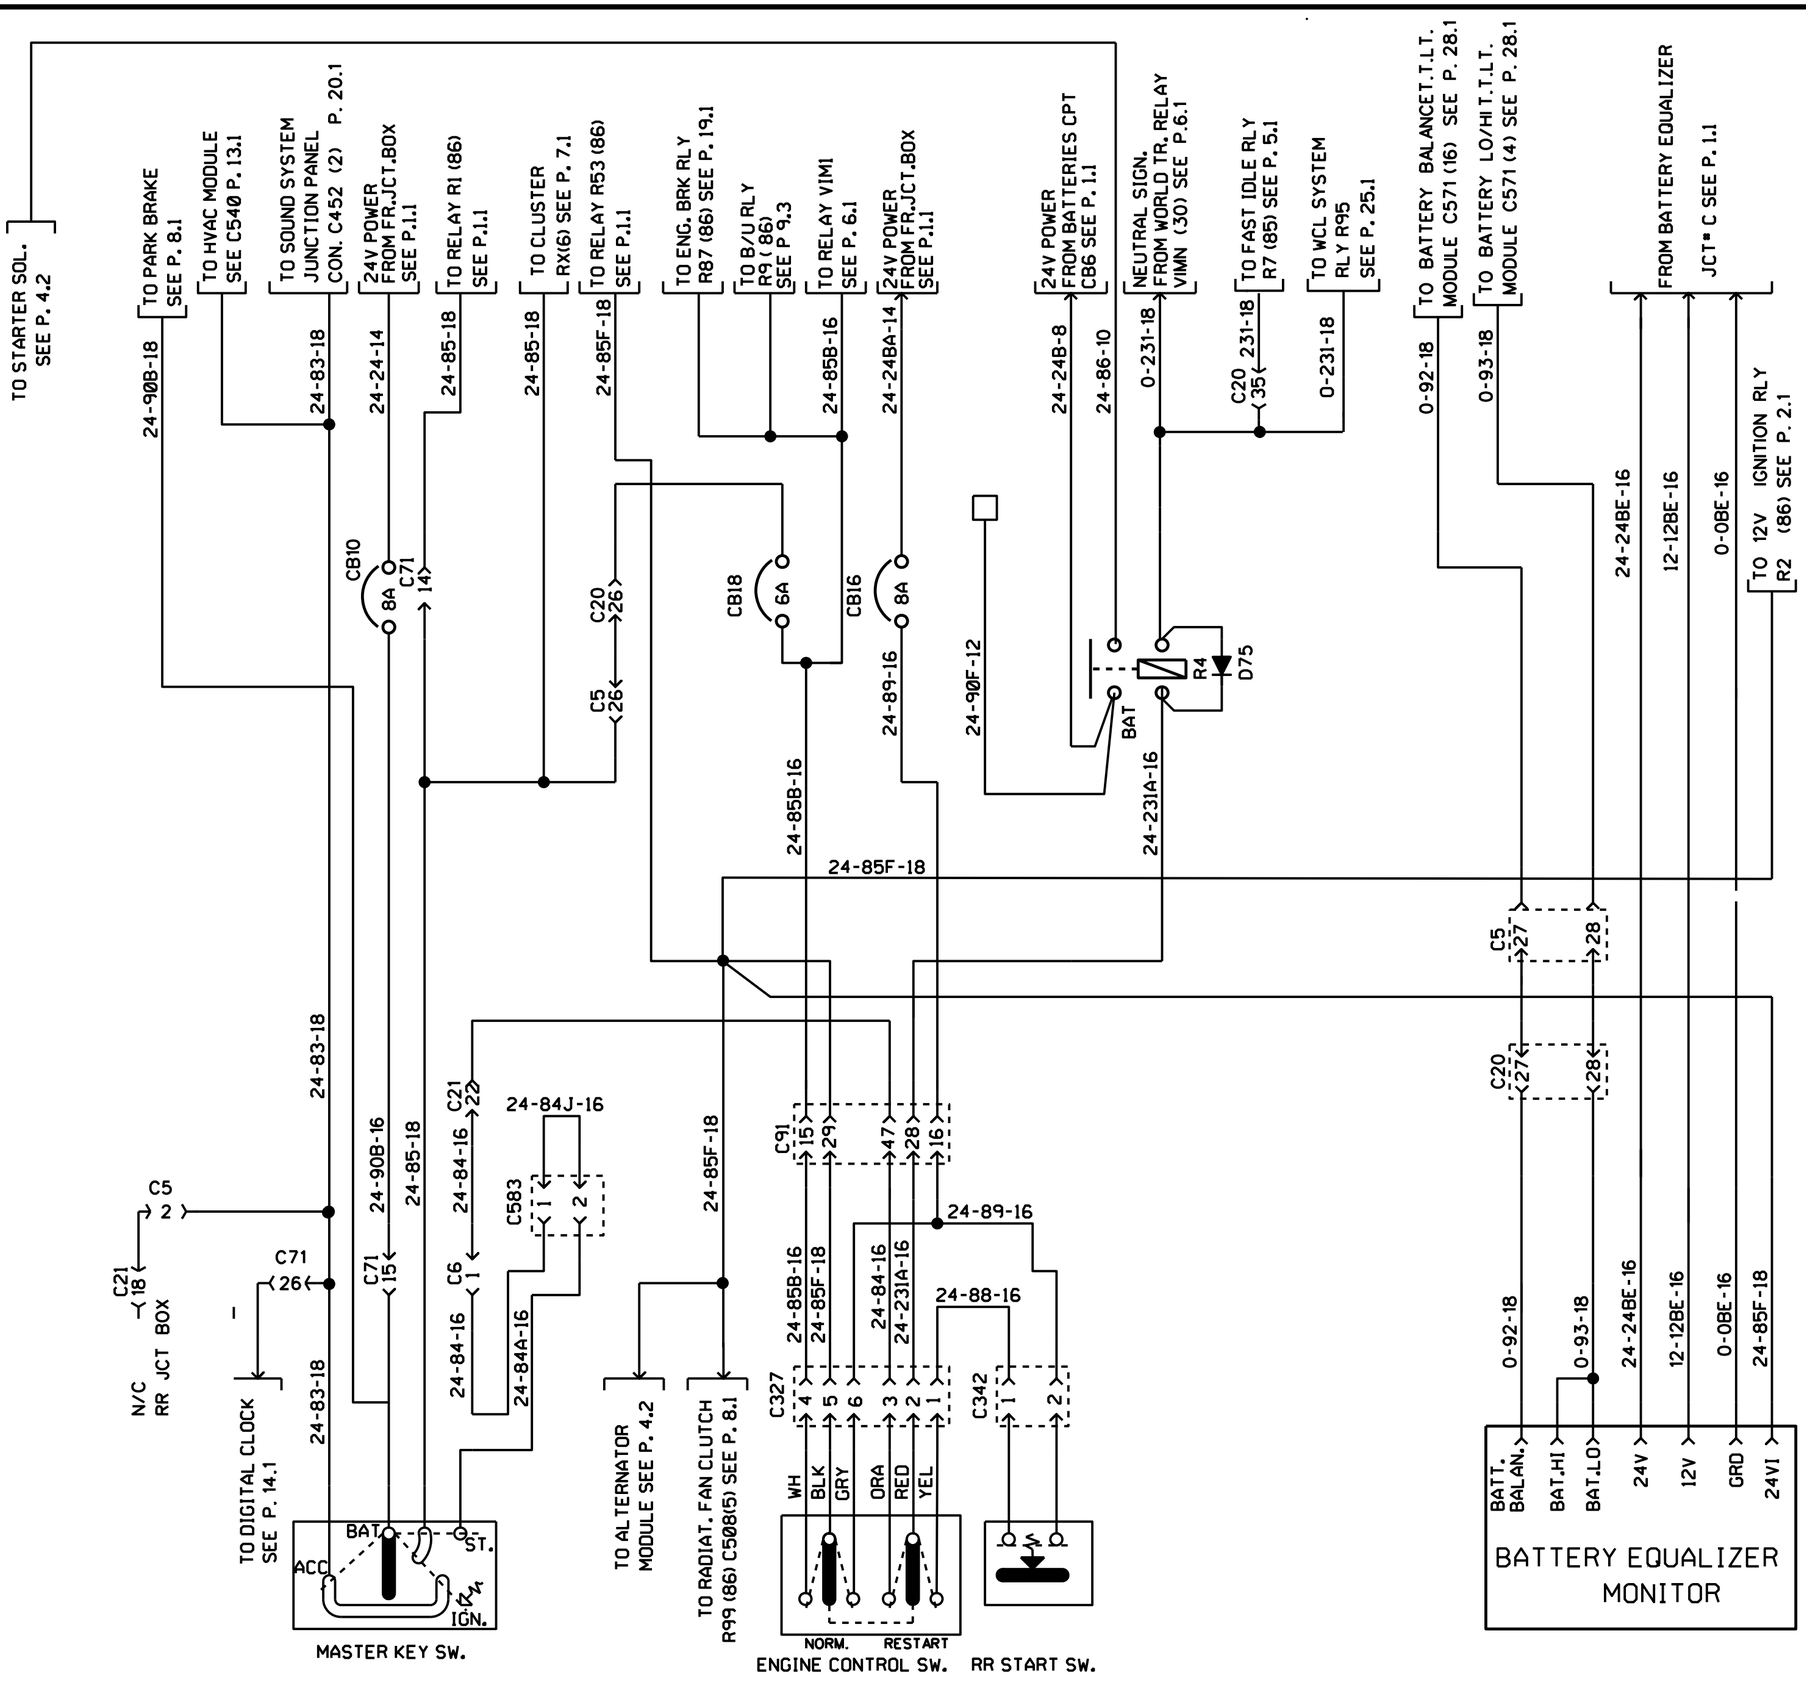

ENGINE CONTROL

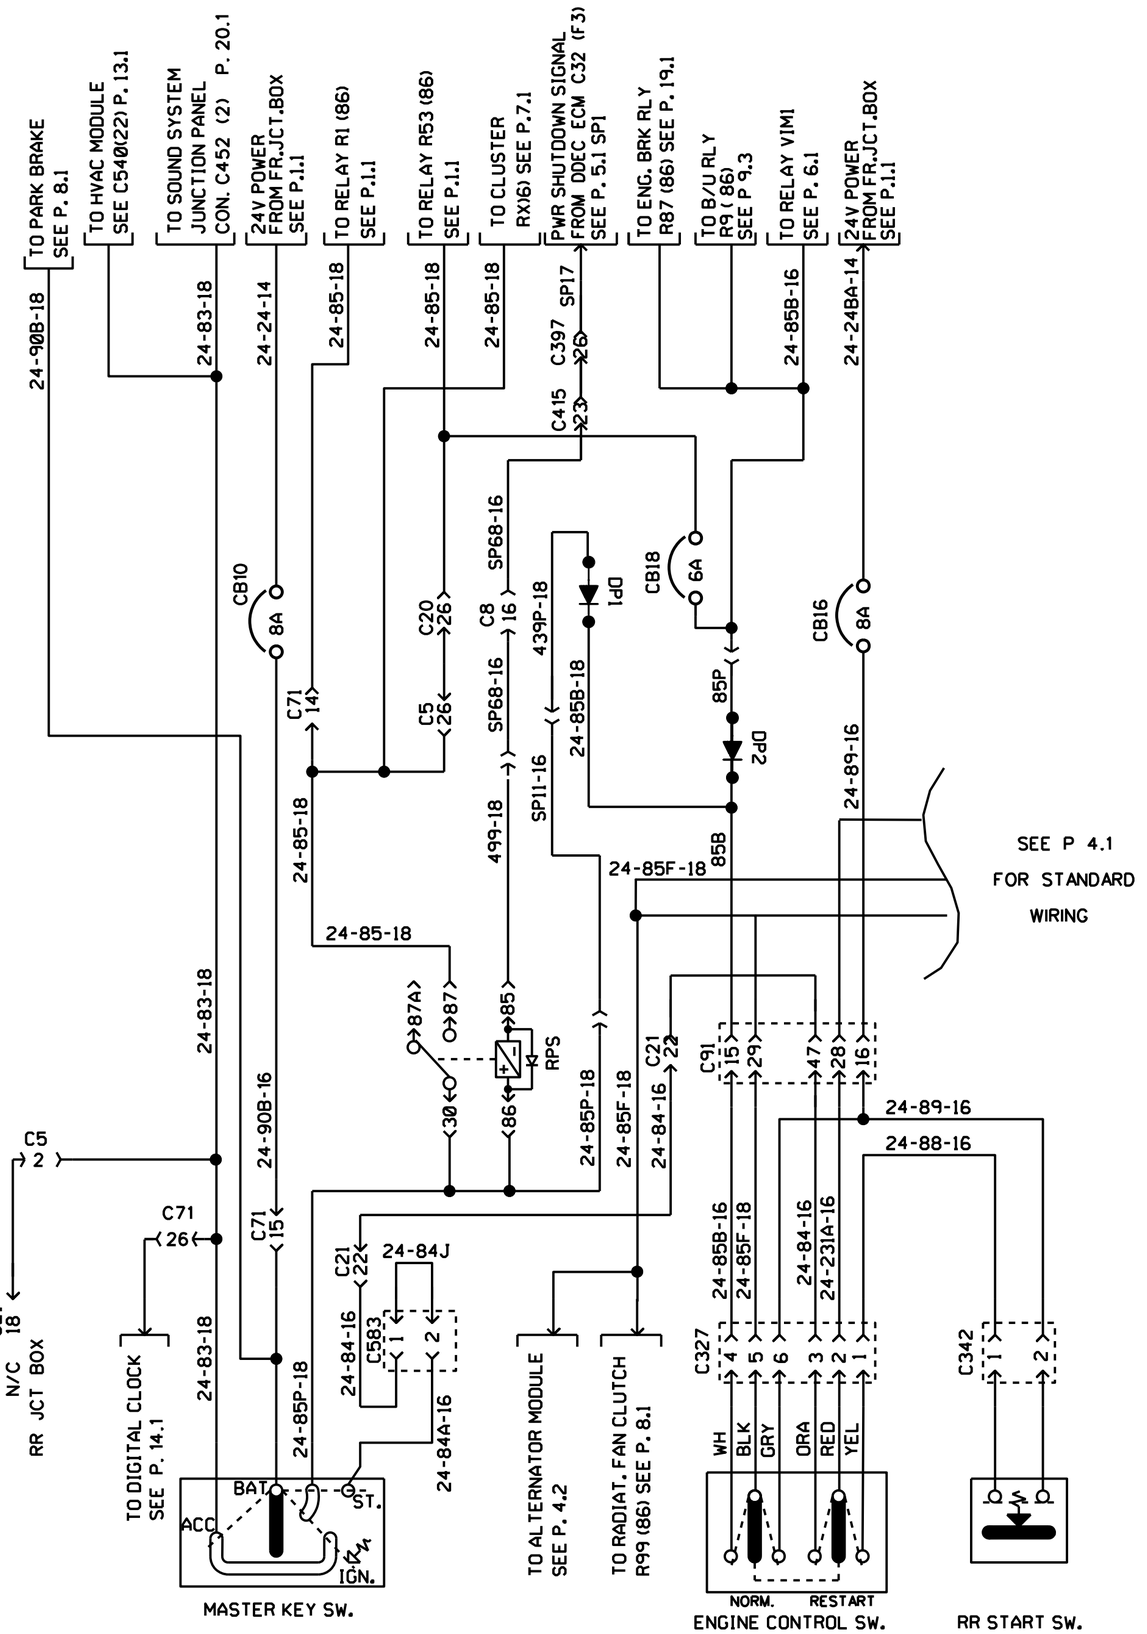

ENGINE CONTROL WITH POWER SHUTDOWN & IDLER TIMER

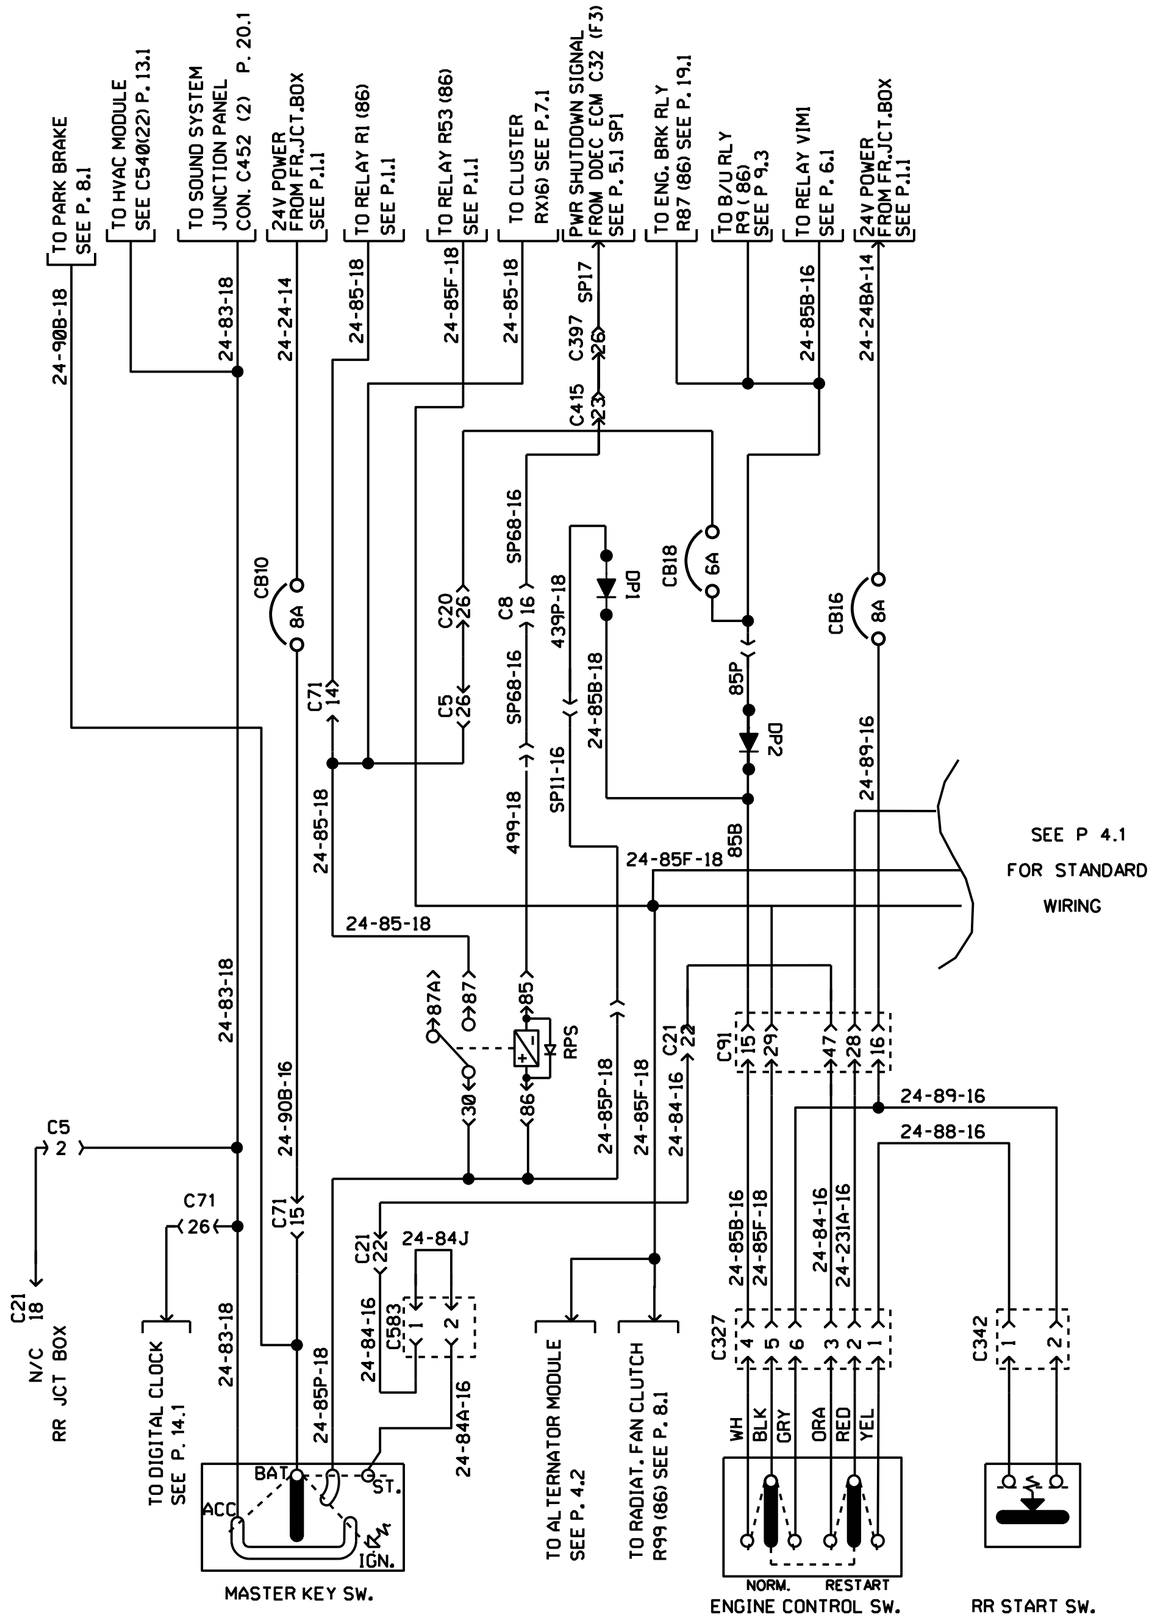

ENGINE CONTROL WITH POWER SHUTDOWN & IDLER TIMER

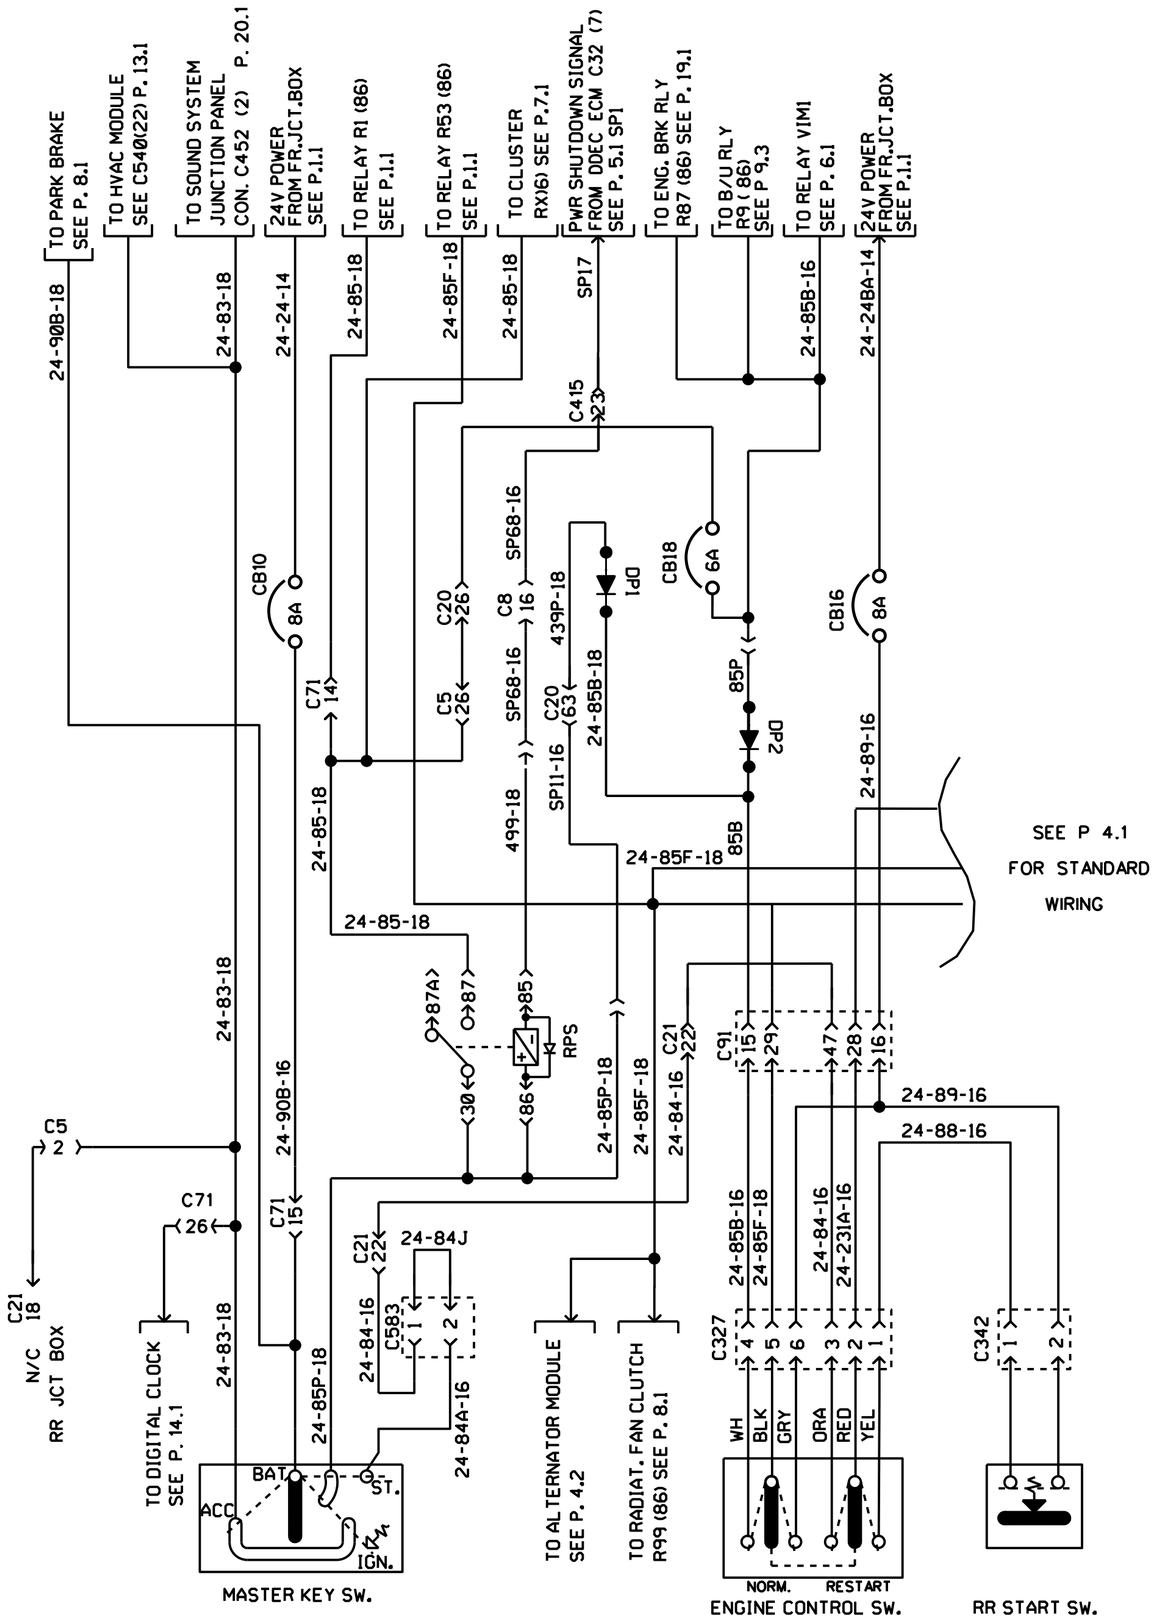

ENGINE CONTROL WITH POWER SHUTDOWN & IDLER TIMER

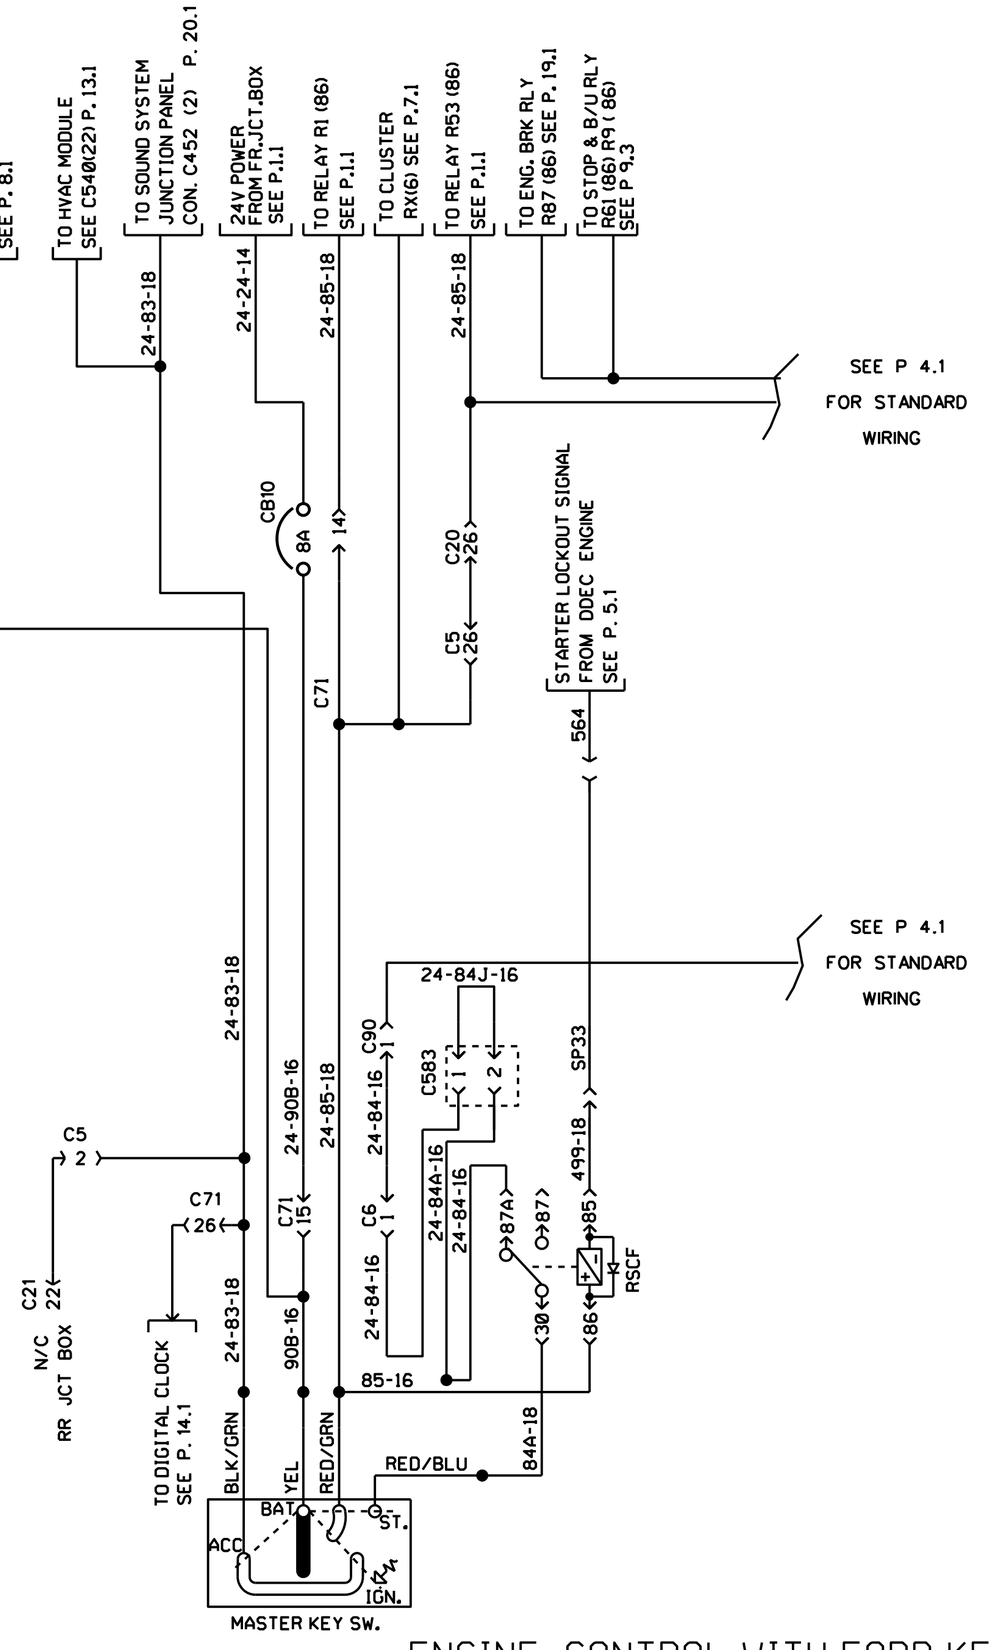

ENGINE CONTROL WITH FORD KEY

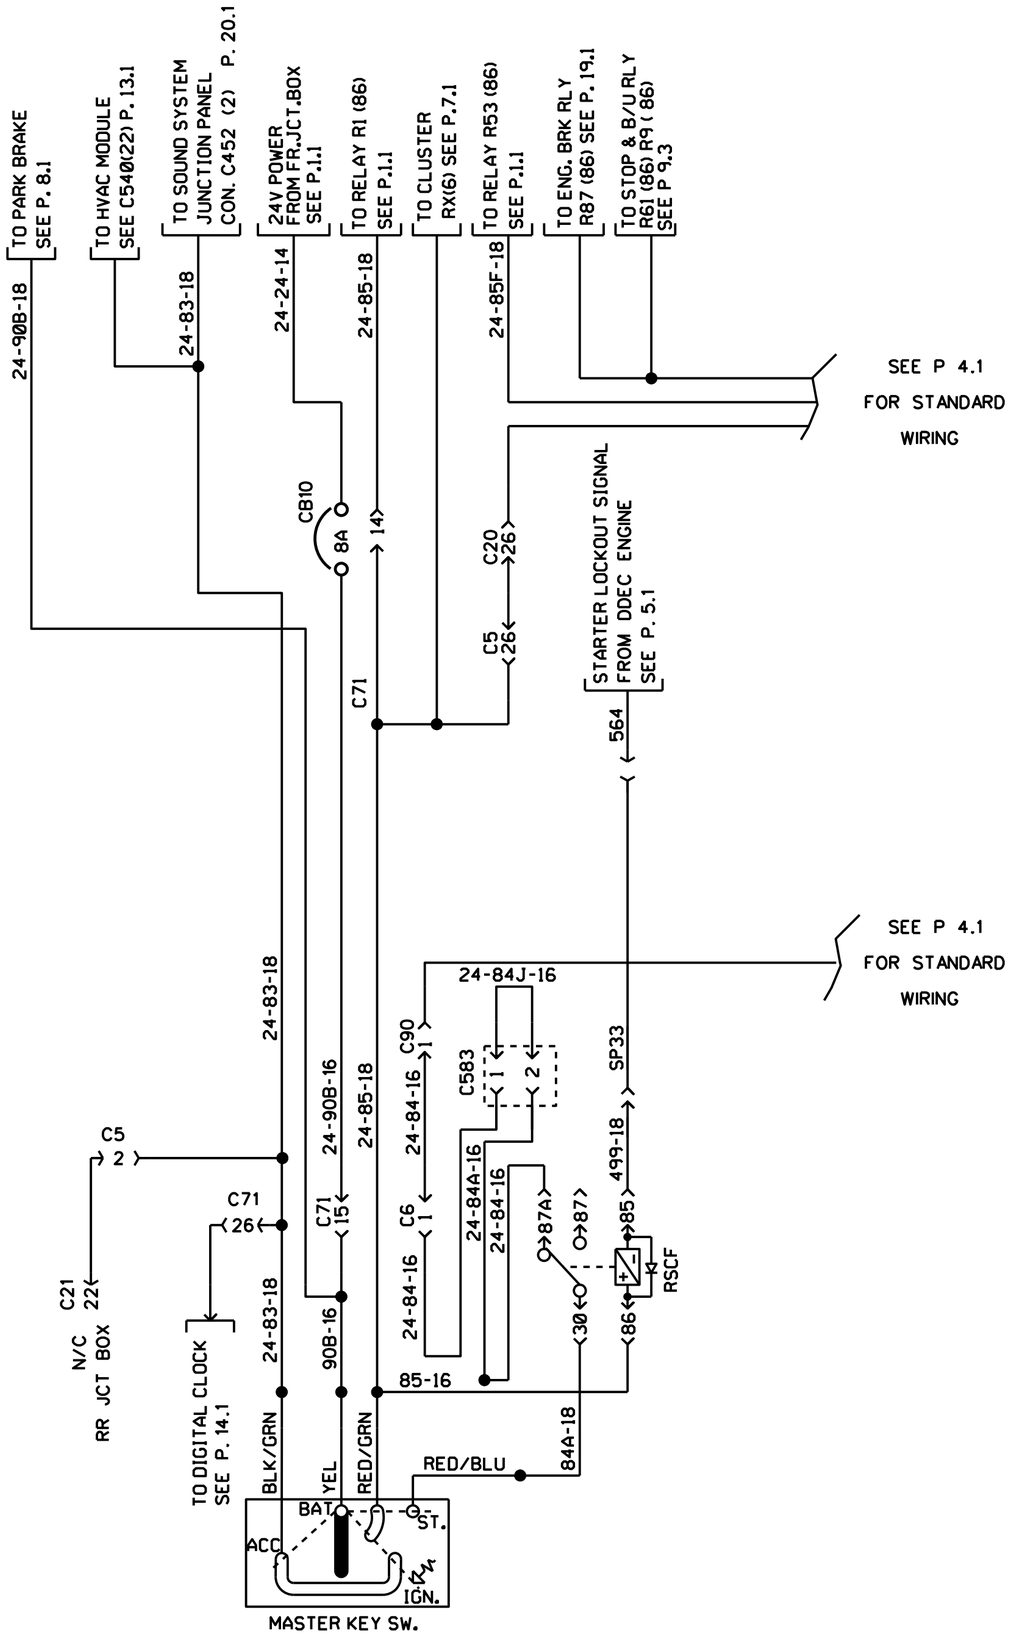

ENGINE CONTROL WITH FORD KEY

PREVOST | WIRING DIAGRAM | NO: D0609 76 | PAGE: 4.1sp3 | REVISION 00

PRE-HEATER ON WITH CHARGER ON

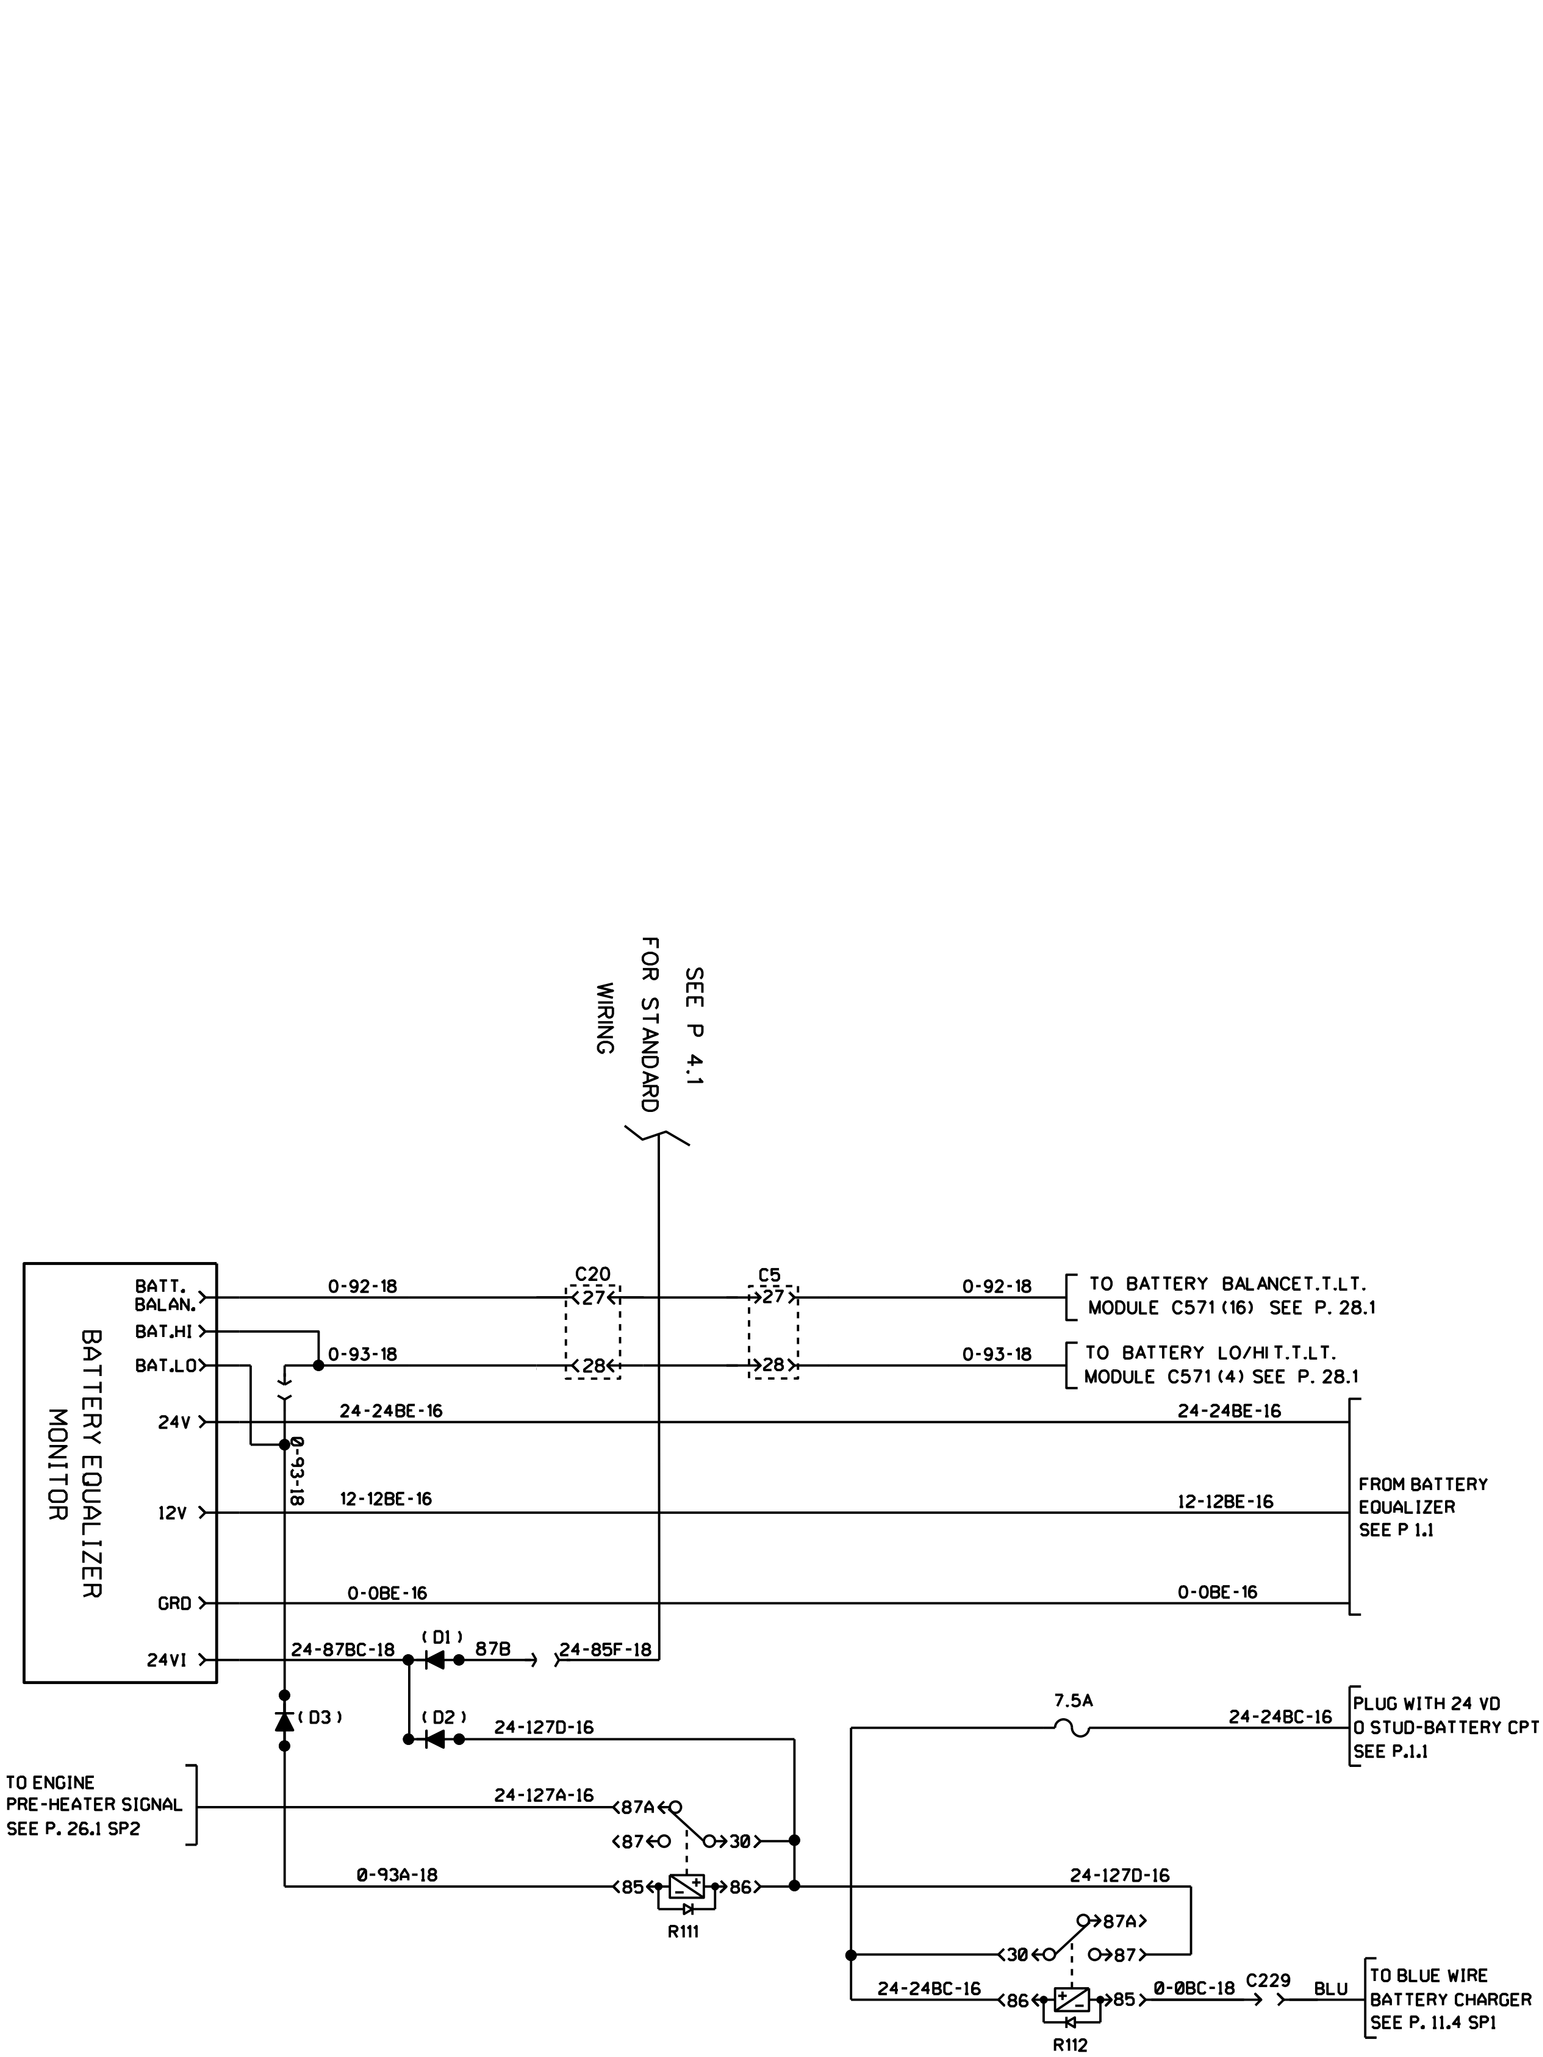

PREVOST | WIRING DIAGRAM | NO: D0609 76 | PAGE: 4.1sp3 | REVISION 07

PRE-HEATER ON WITH CHARGER ON

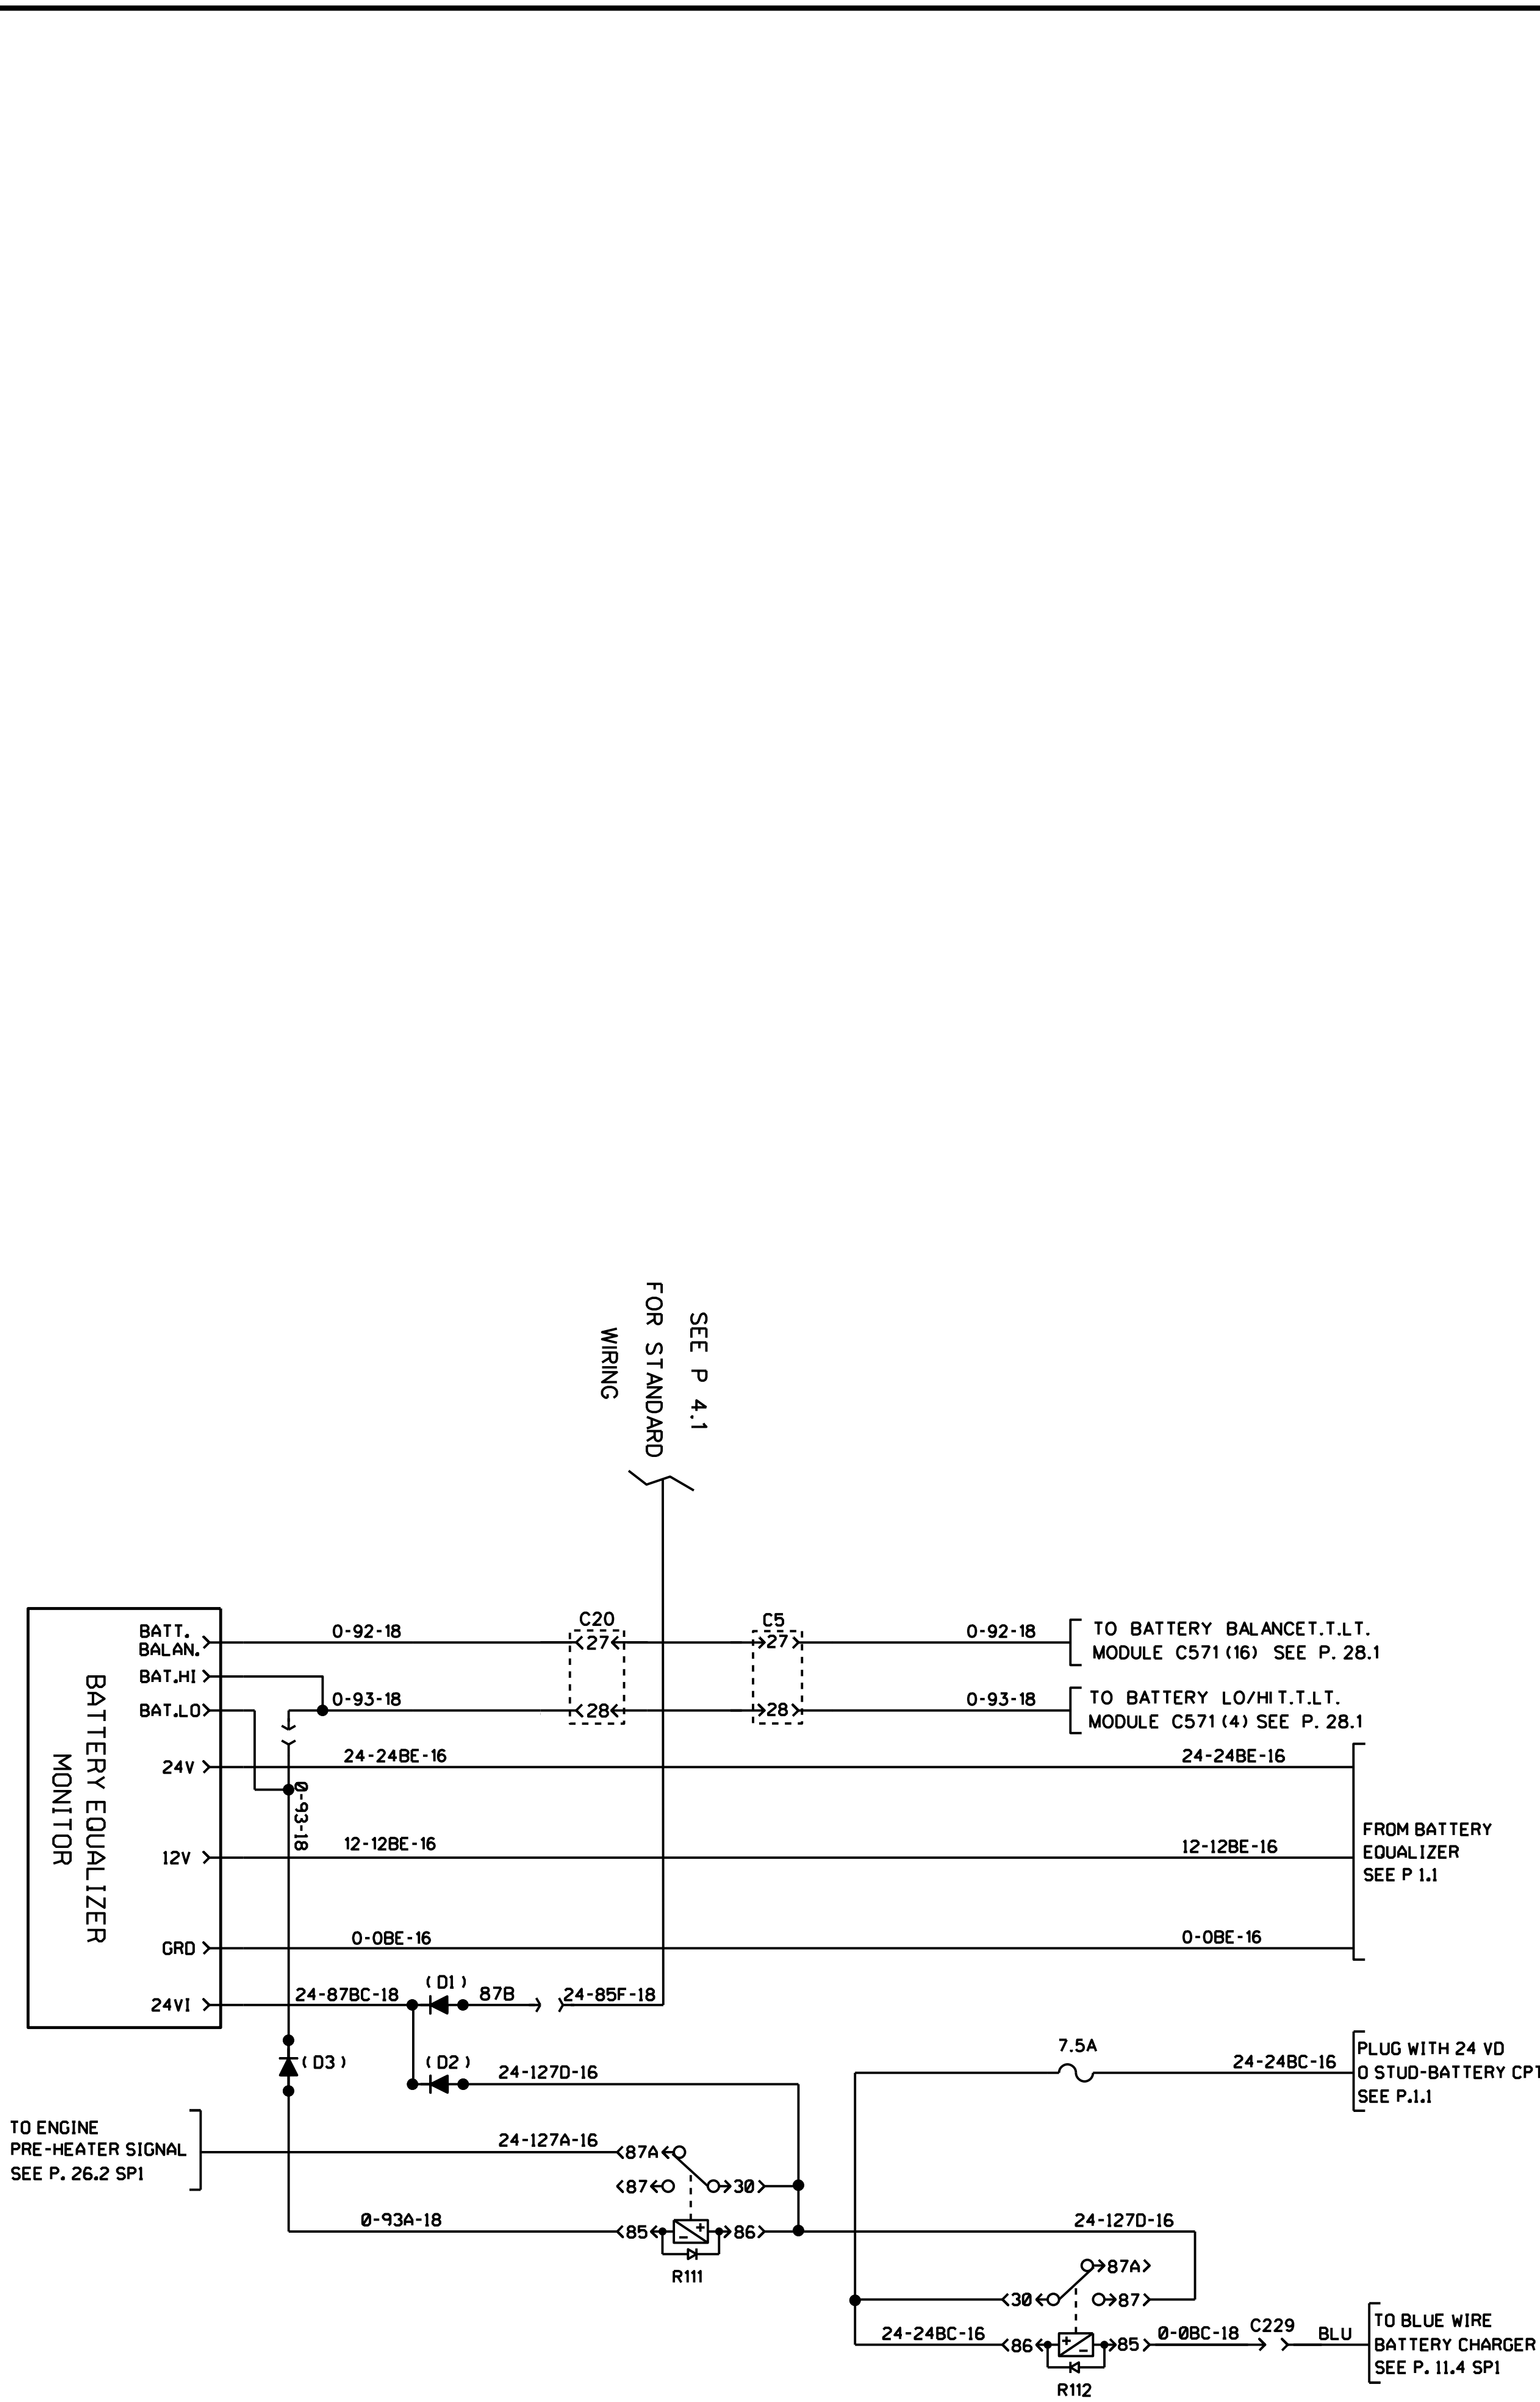

PREVOST

WIRING DIAGRAM

ENGINE CONTROL

NO: D06097 6

PAGE: 4.1sp4

REVISION 00

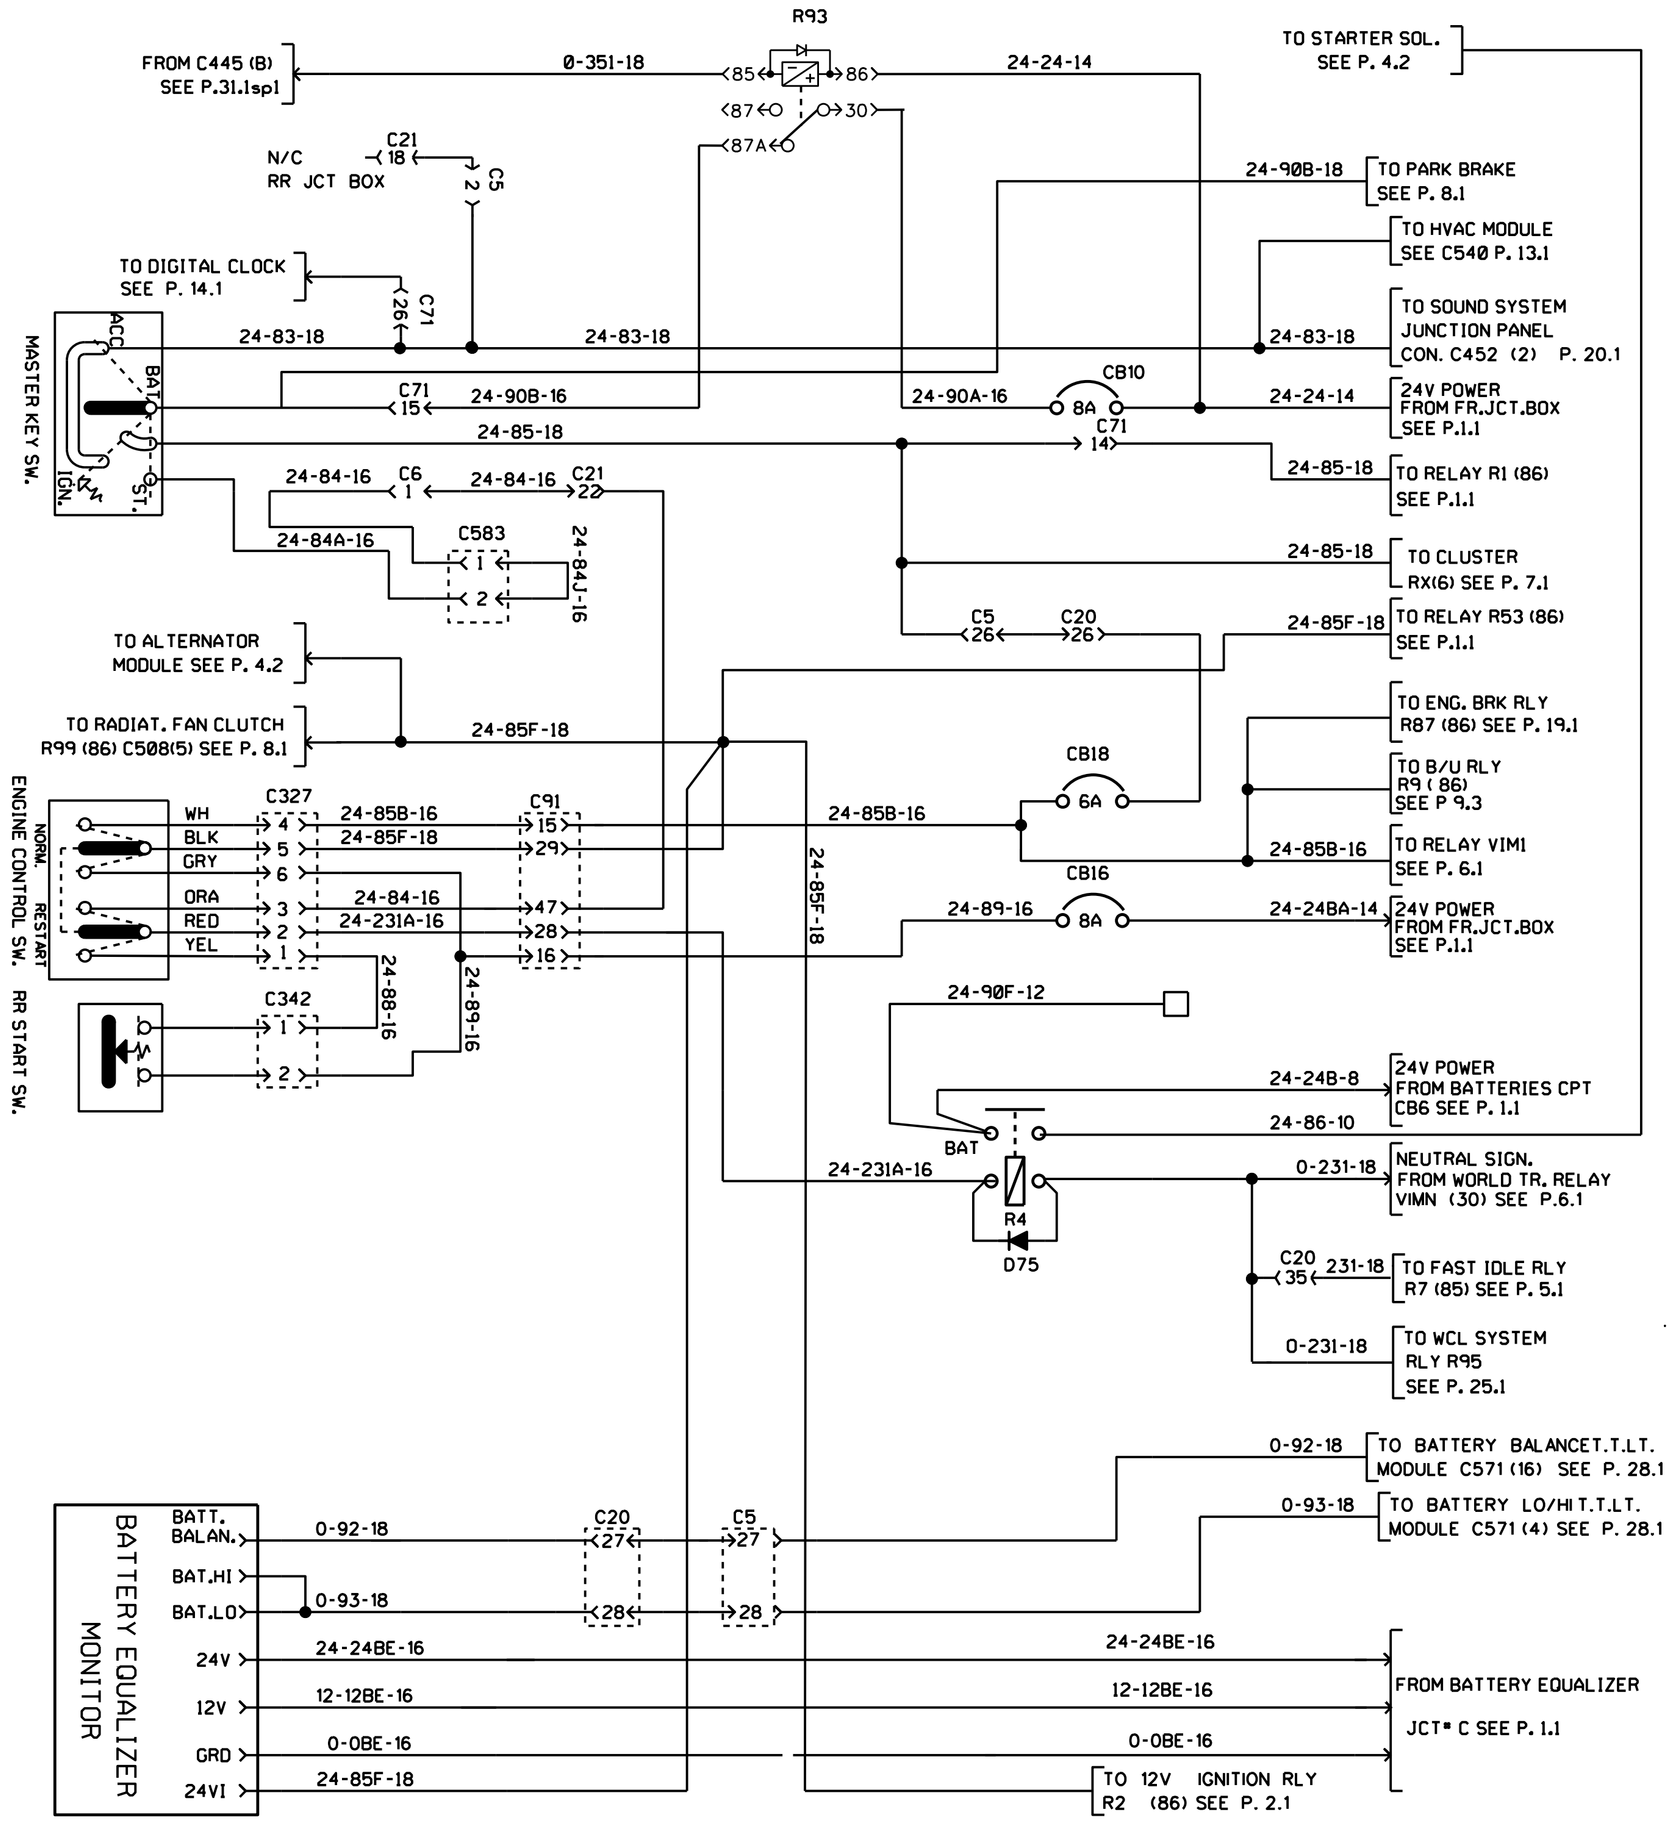

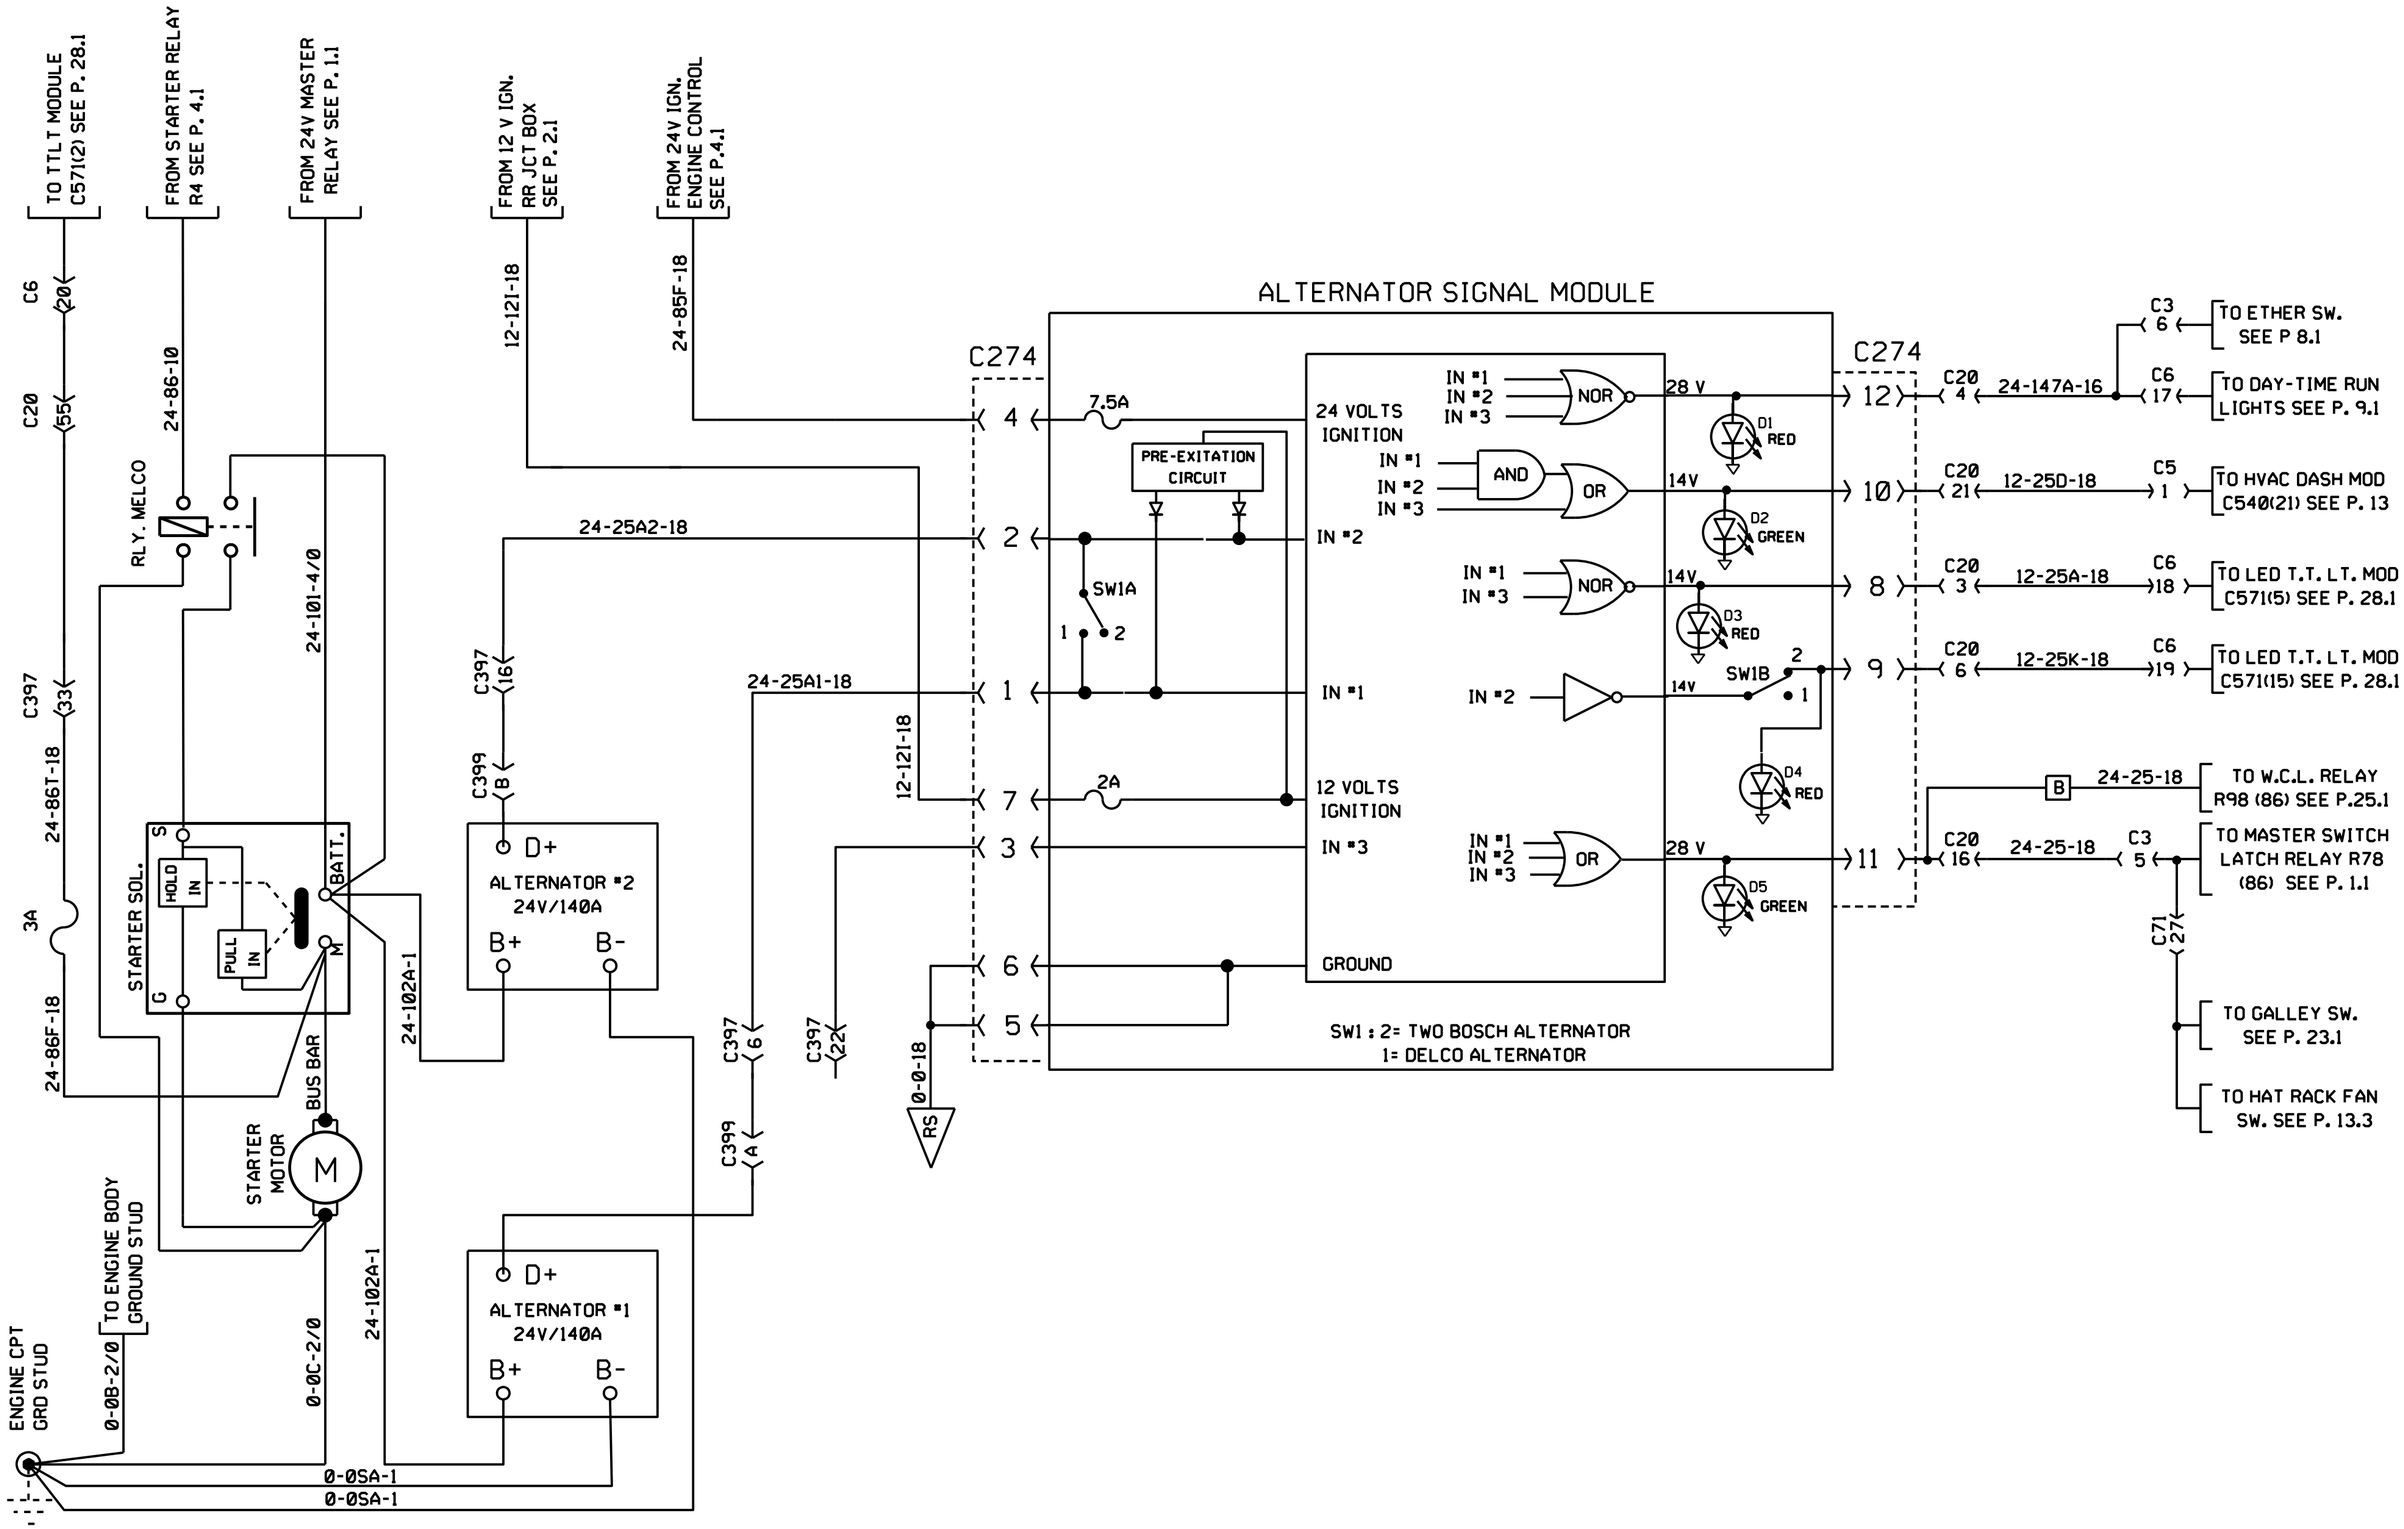

STARTER & BOSCH ALTERNATOR

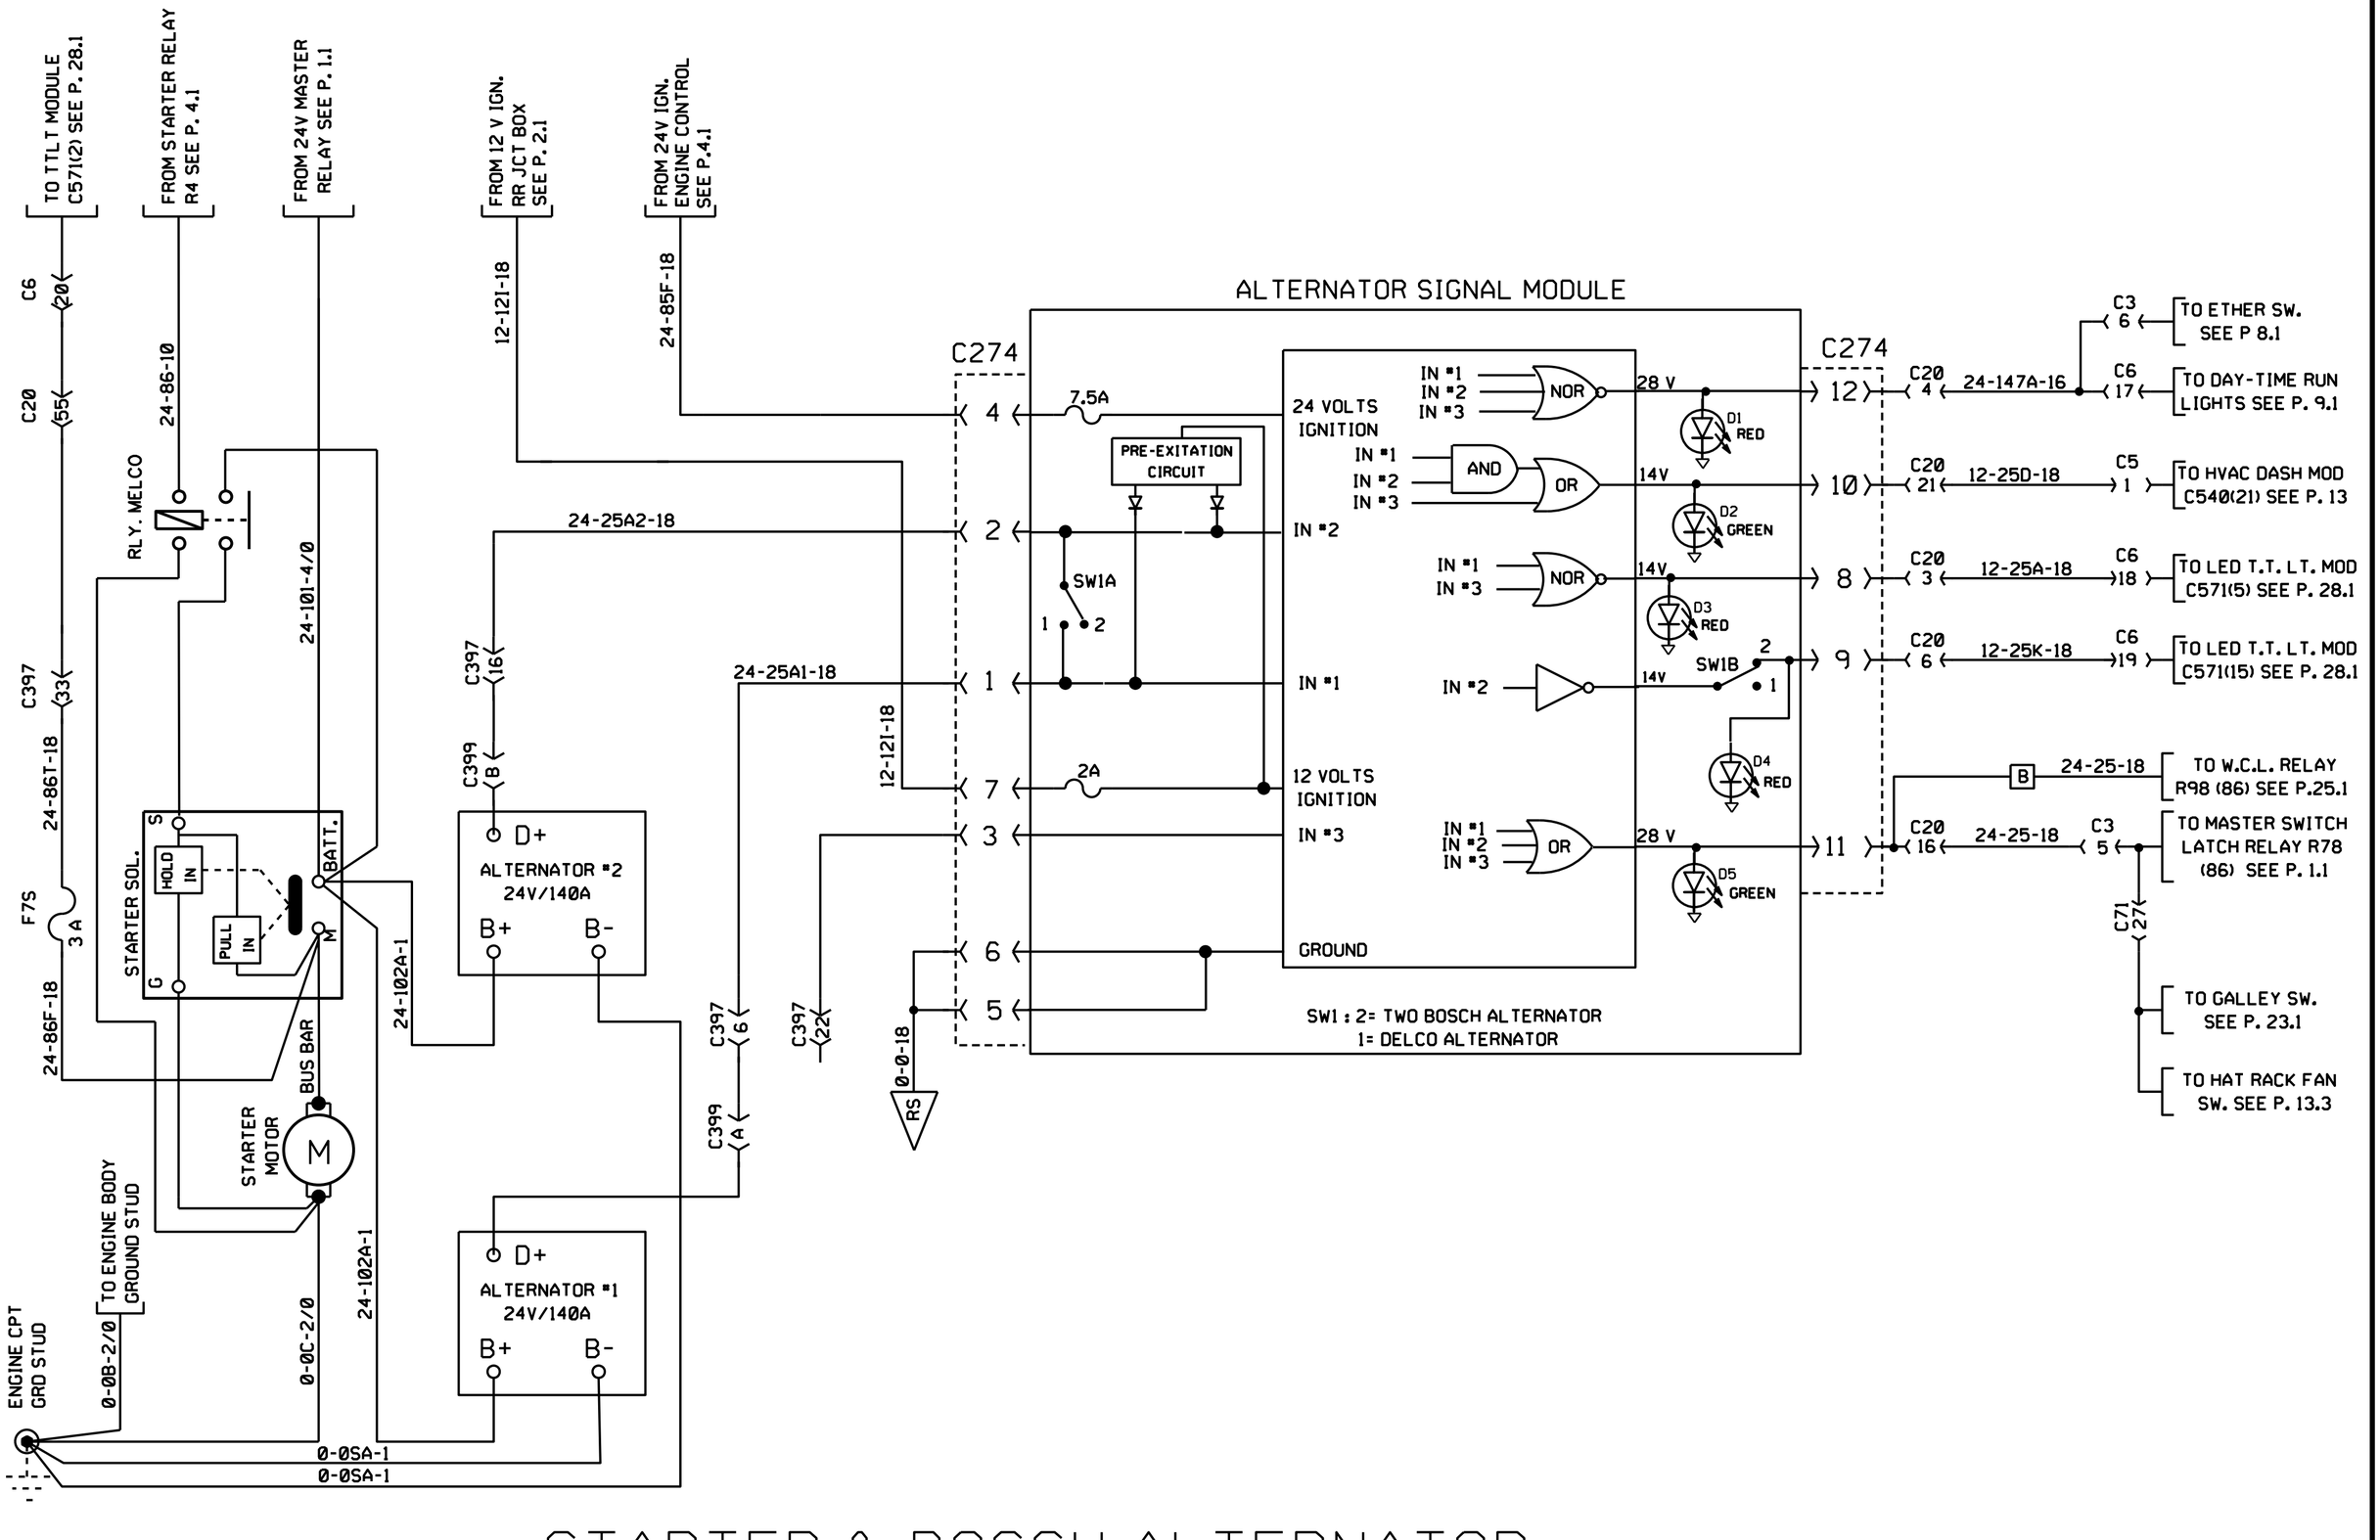

STARTER & BOSCH ALTERNATOR

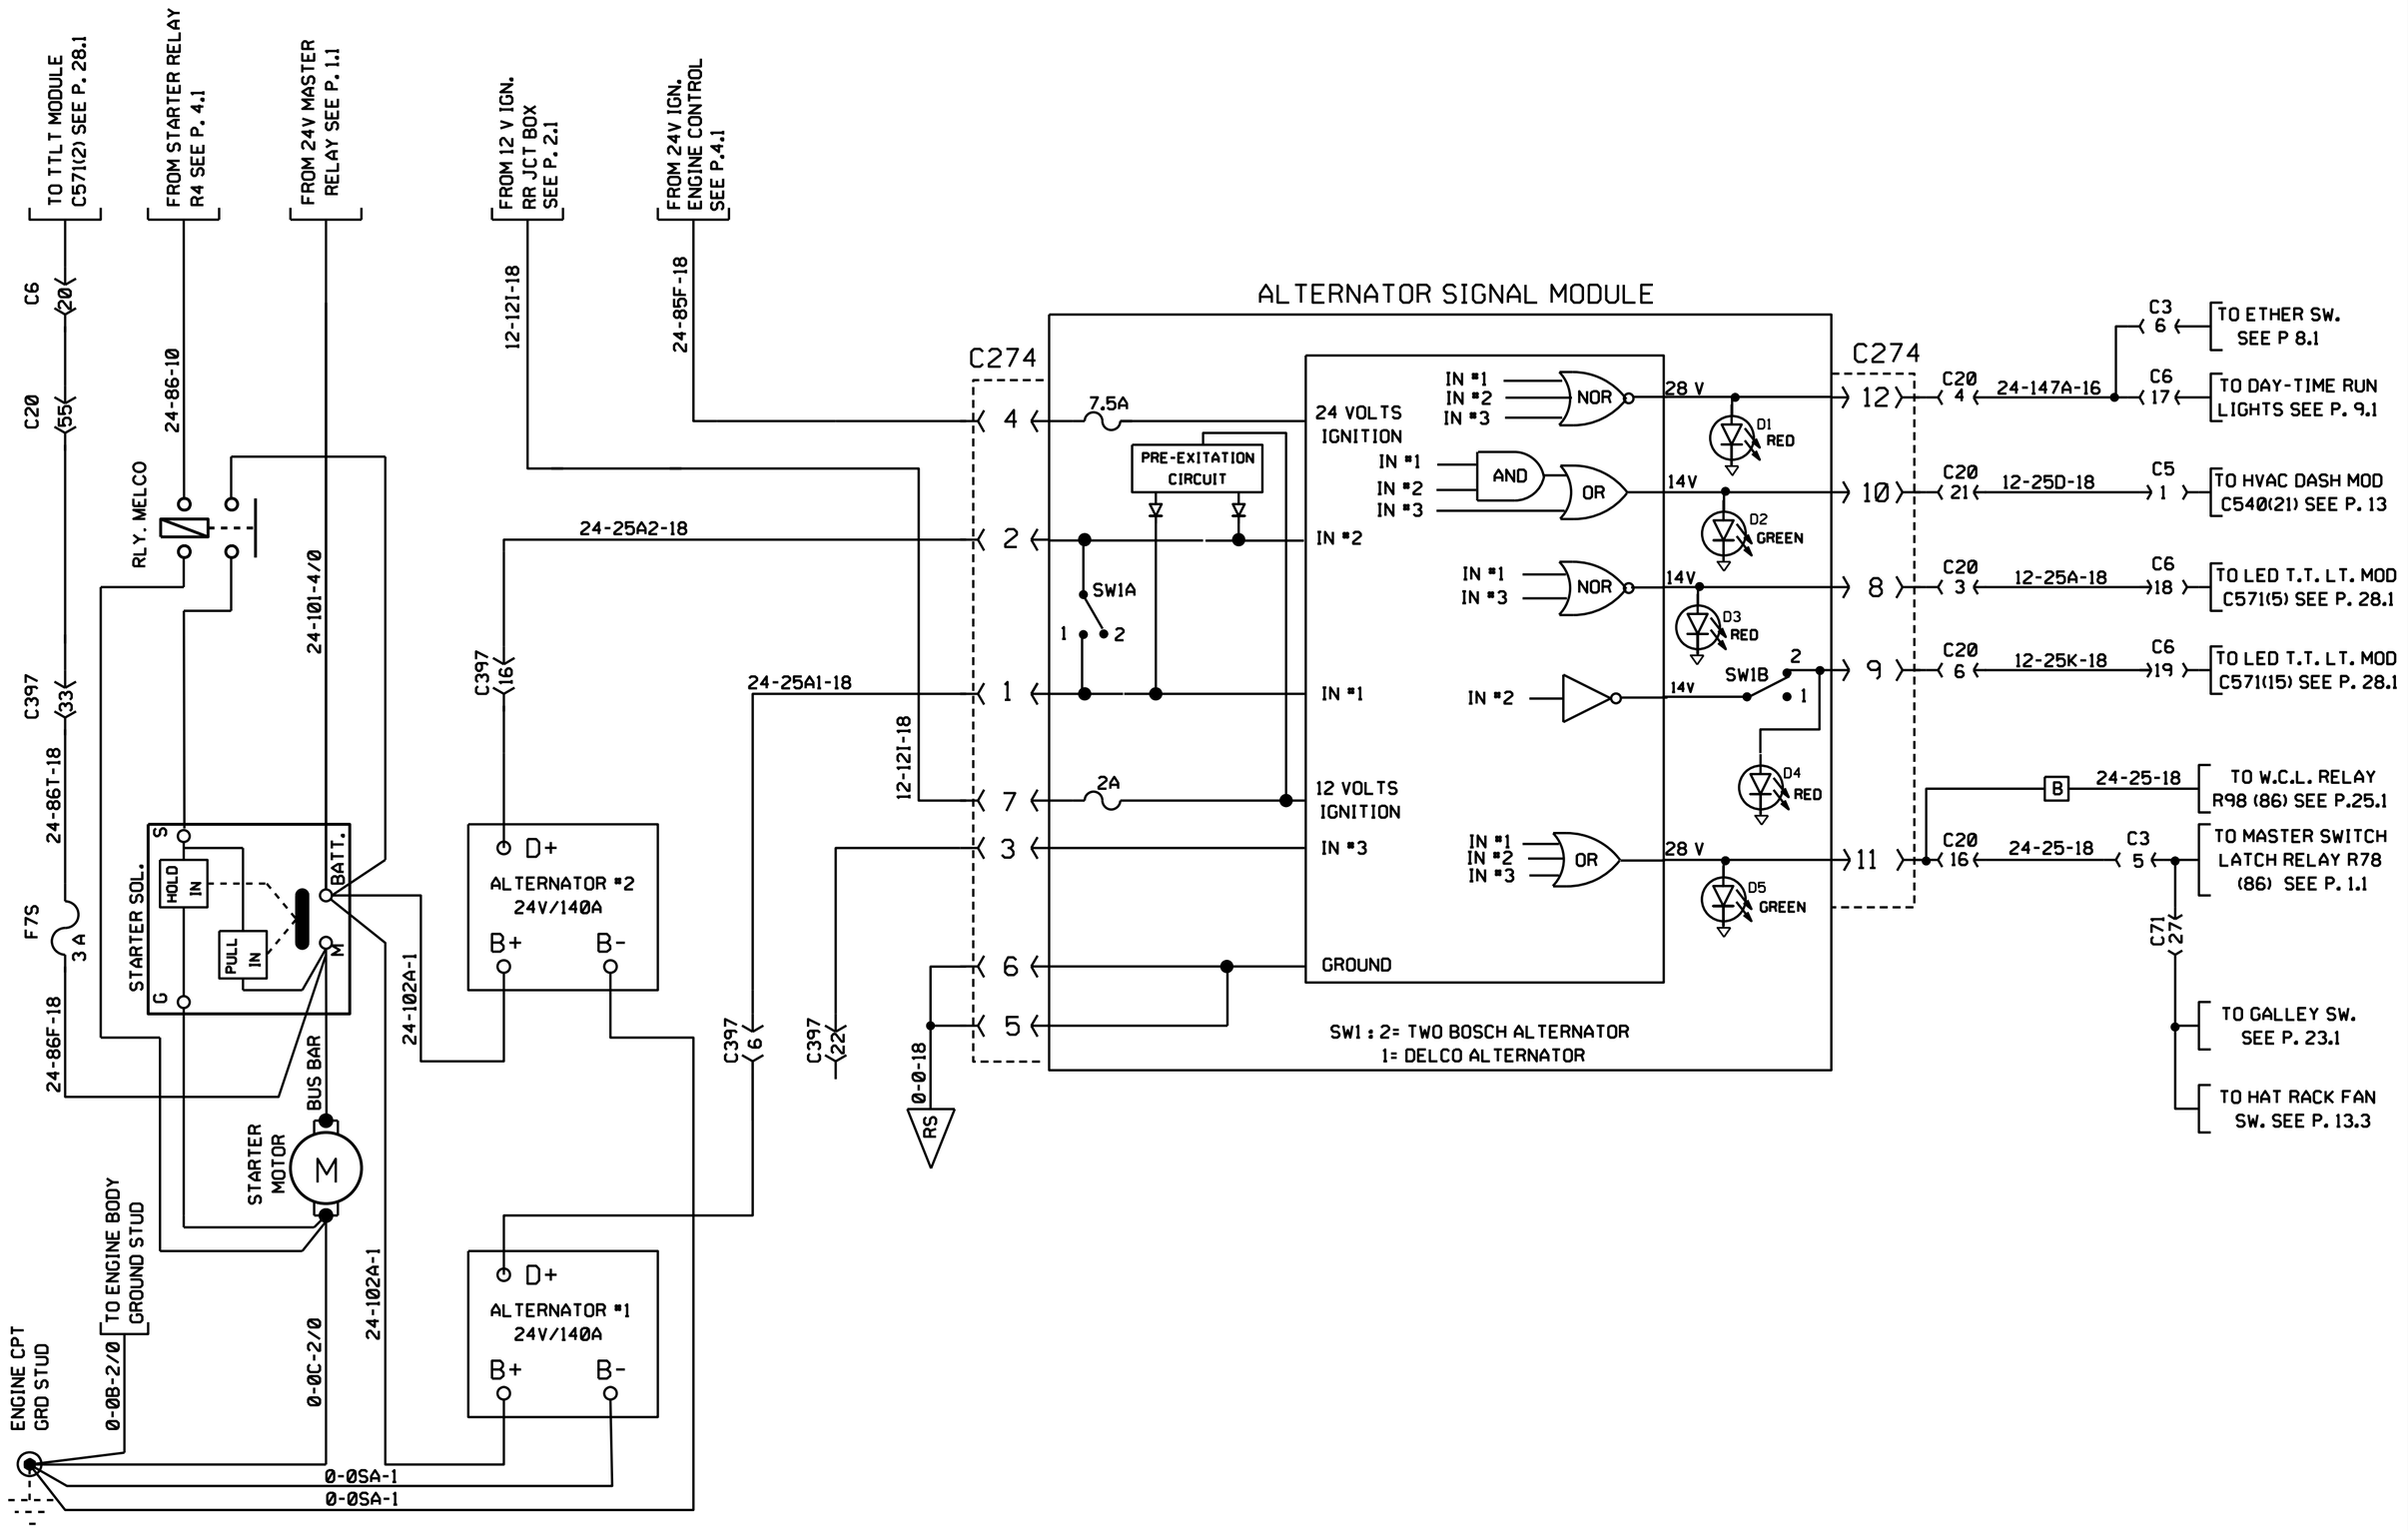

STARTER & BOSCH ALTERNATOR

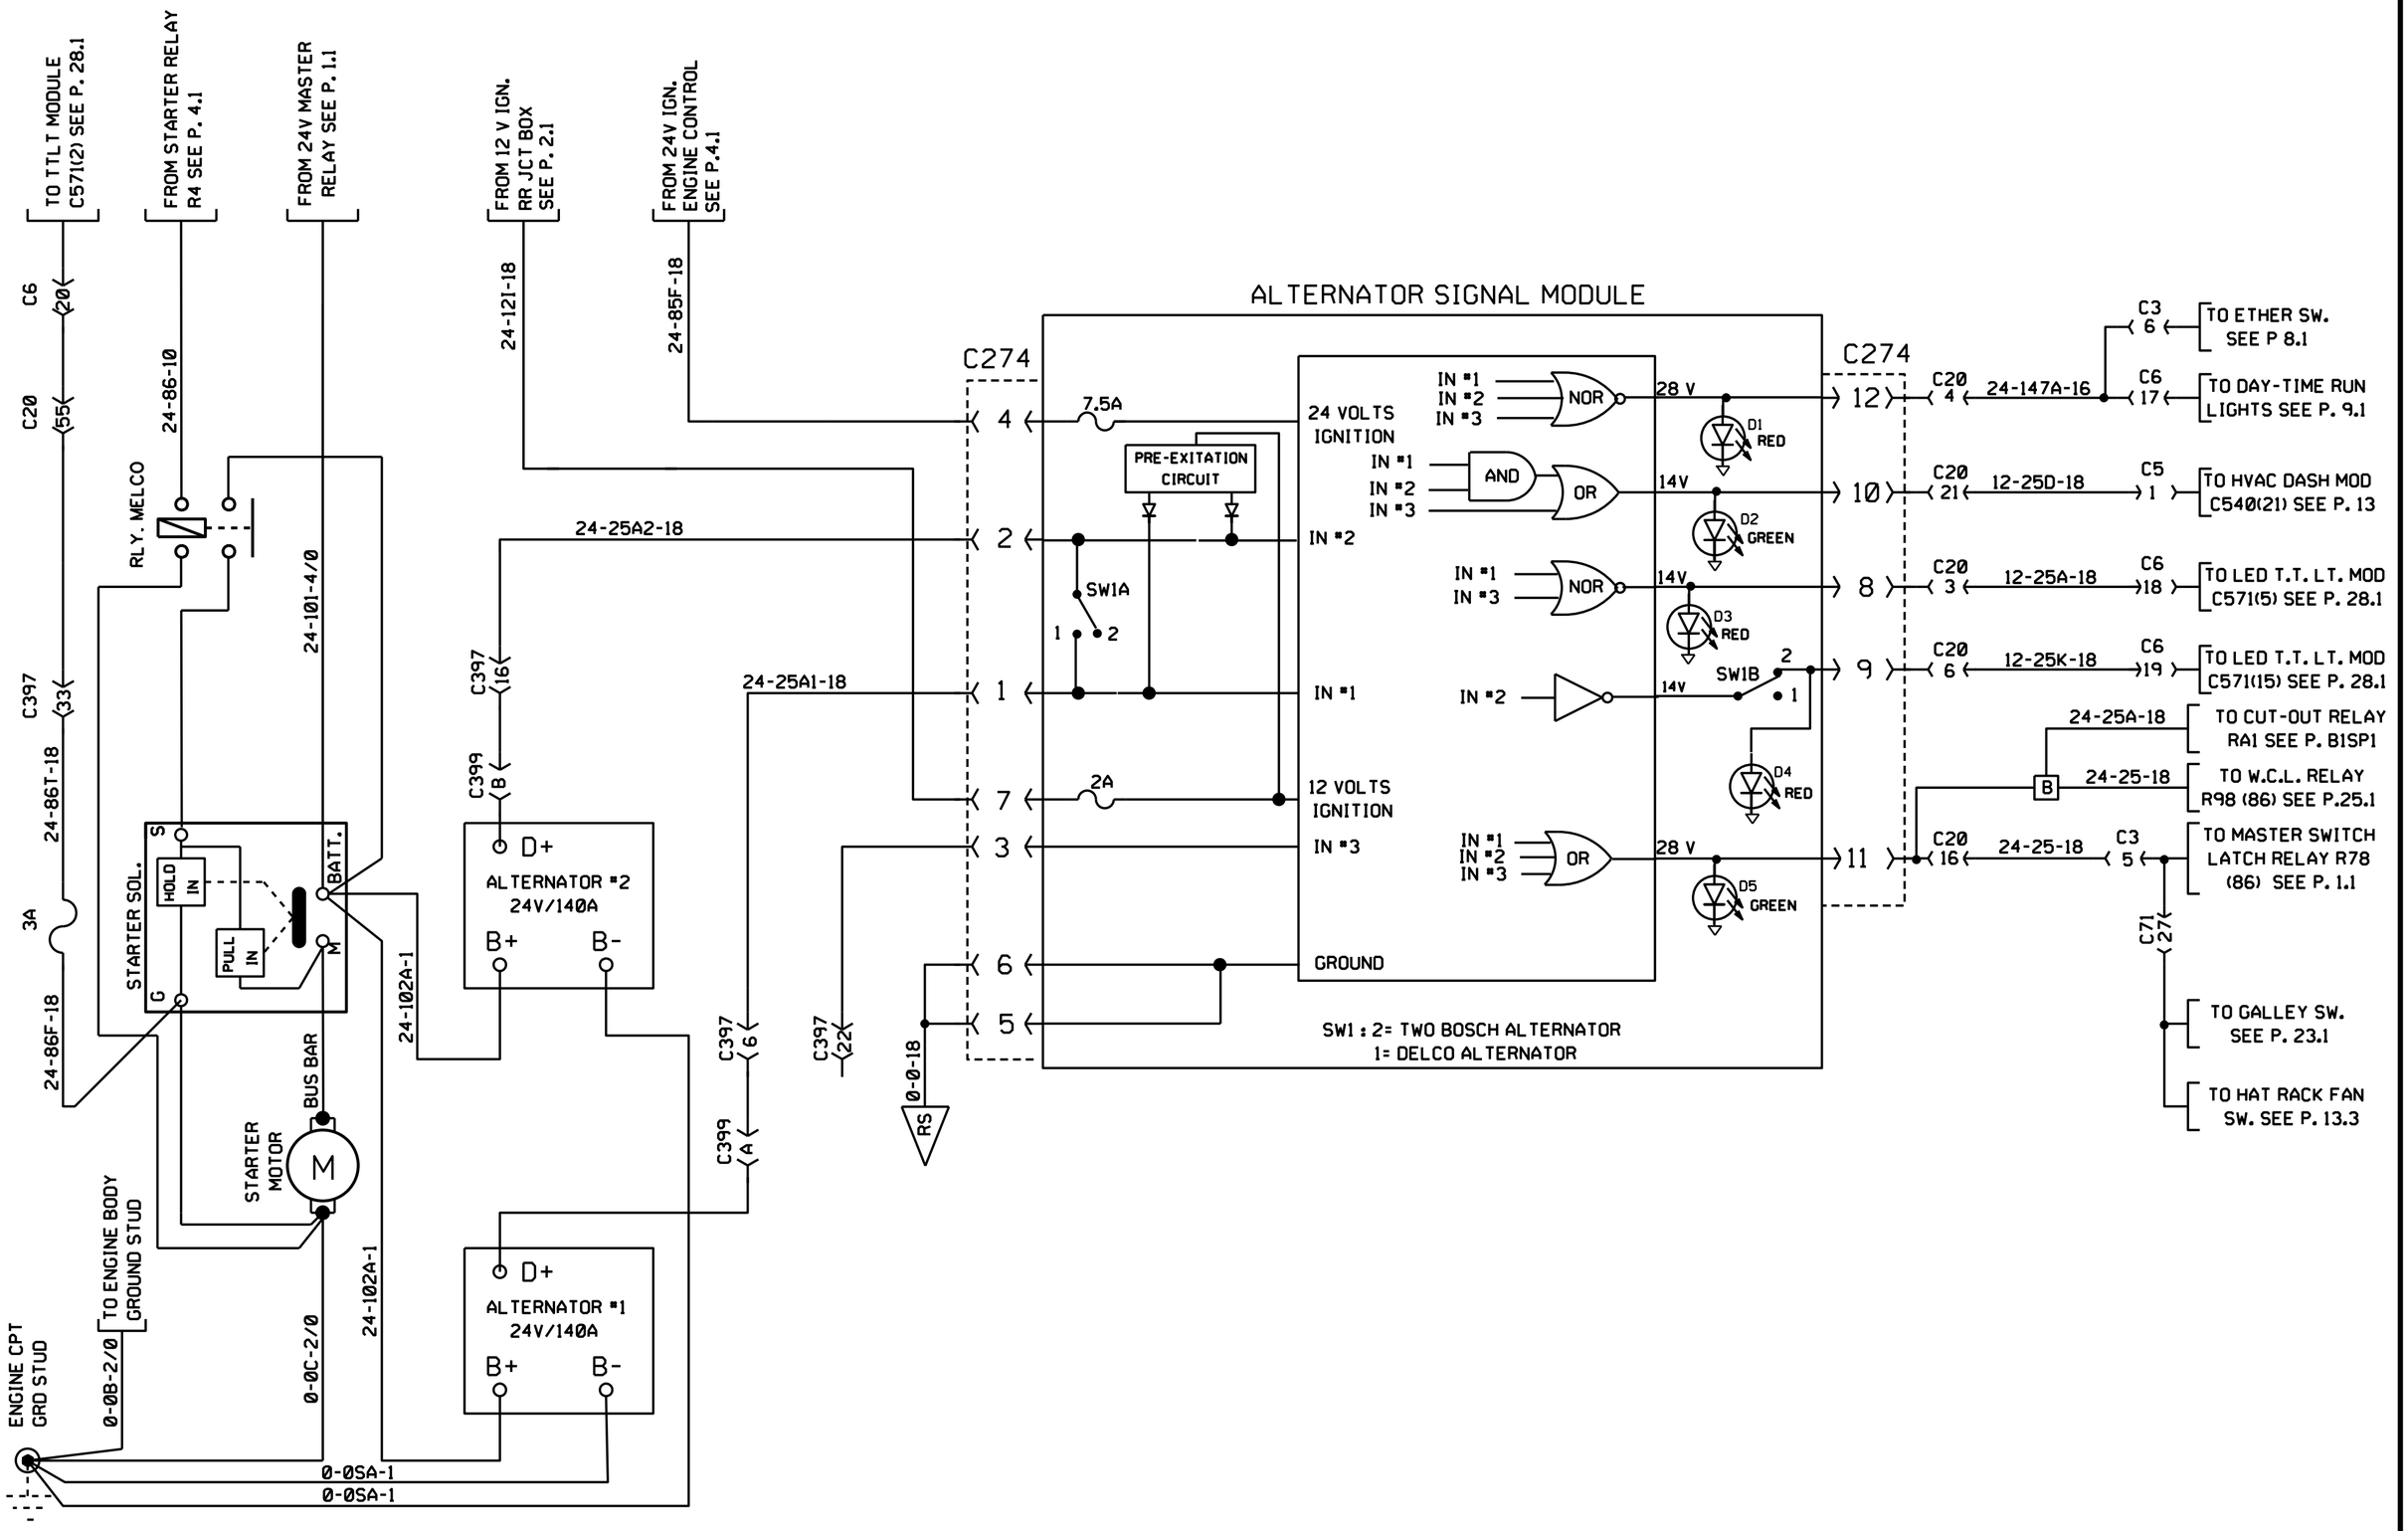

STARTER & BOSCH ALTERNATOR

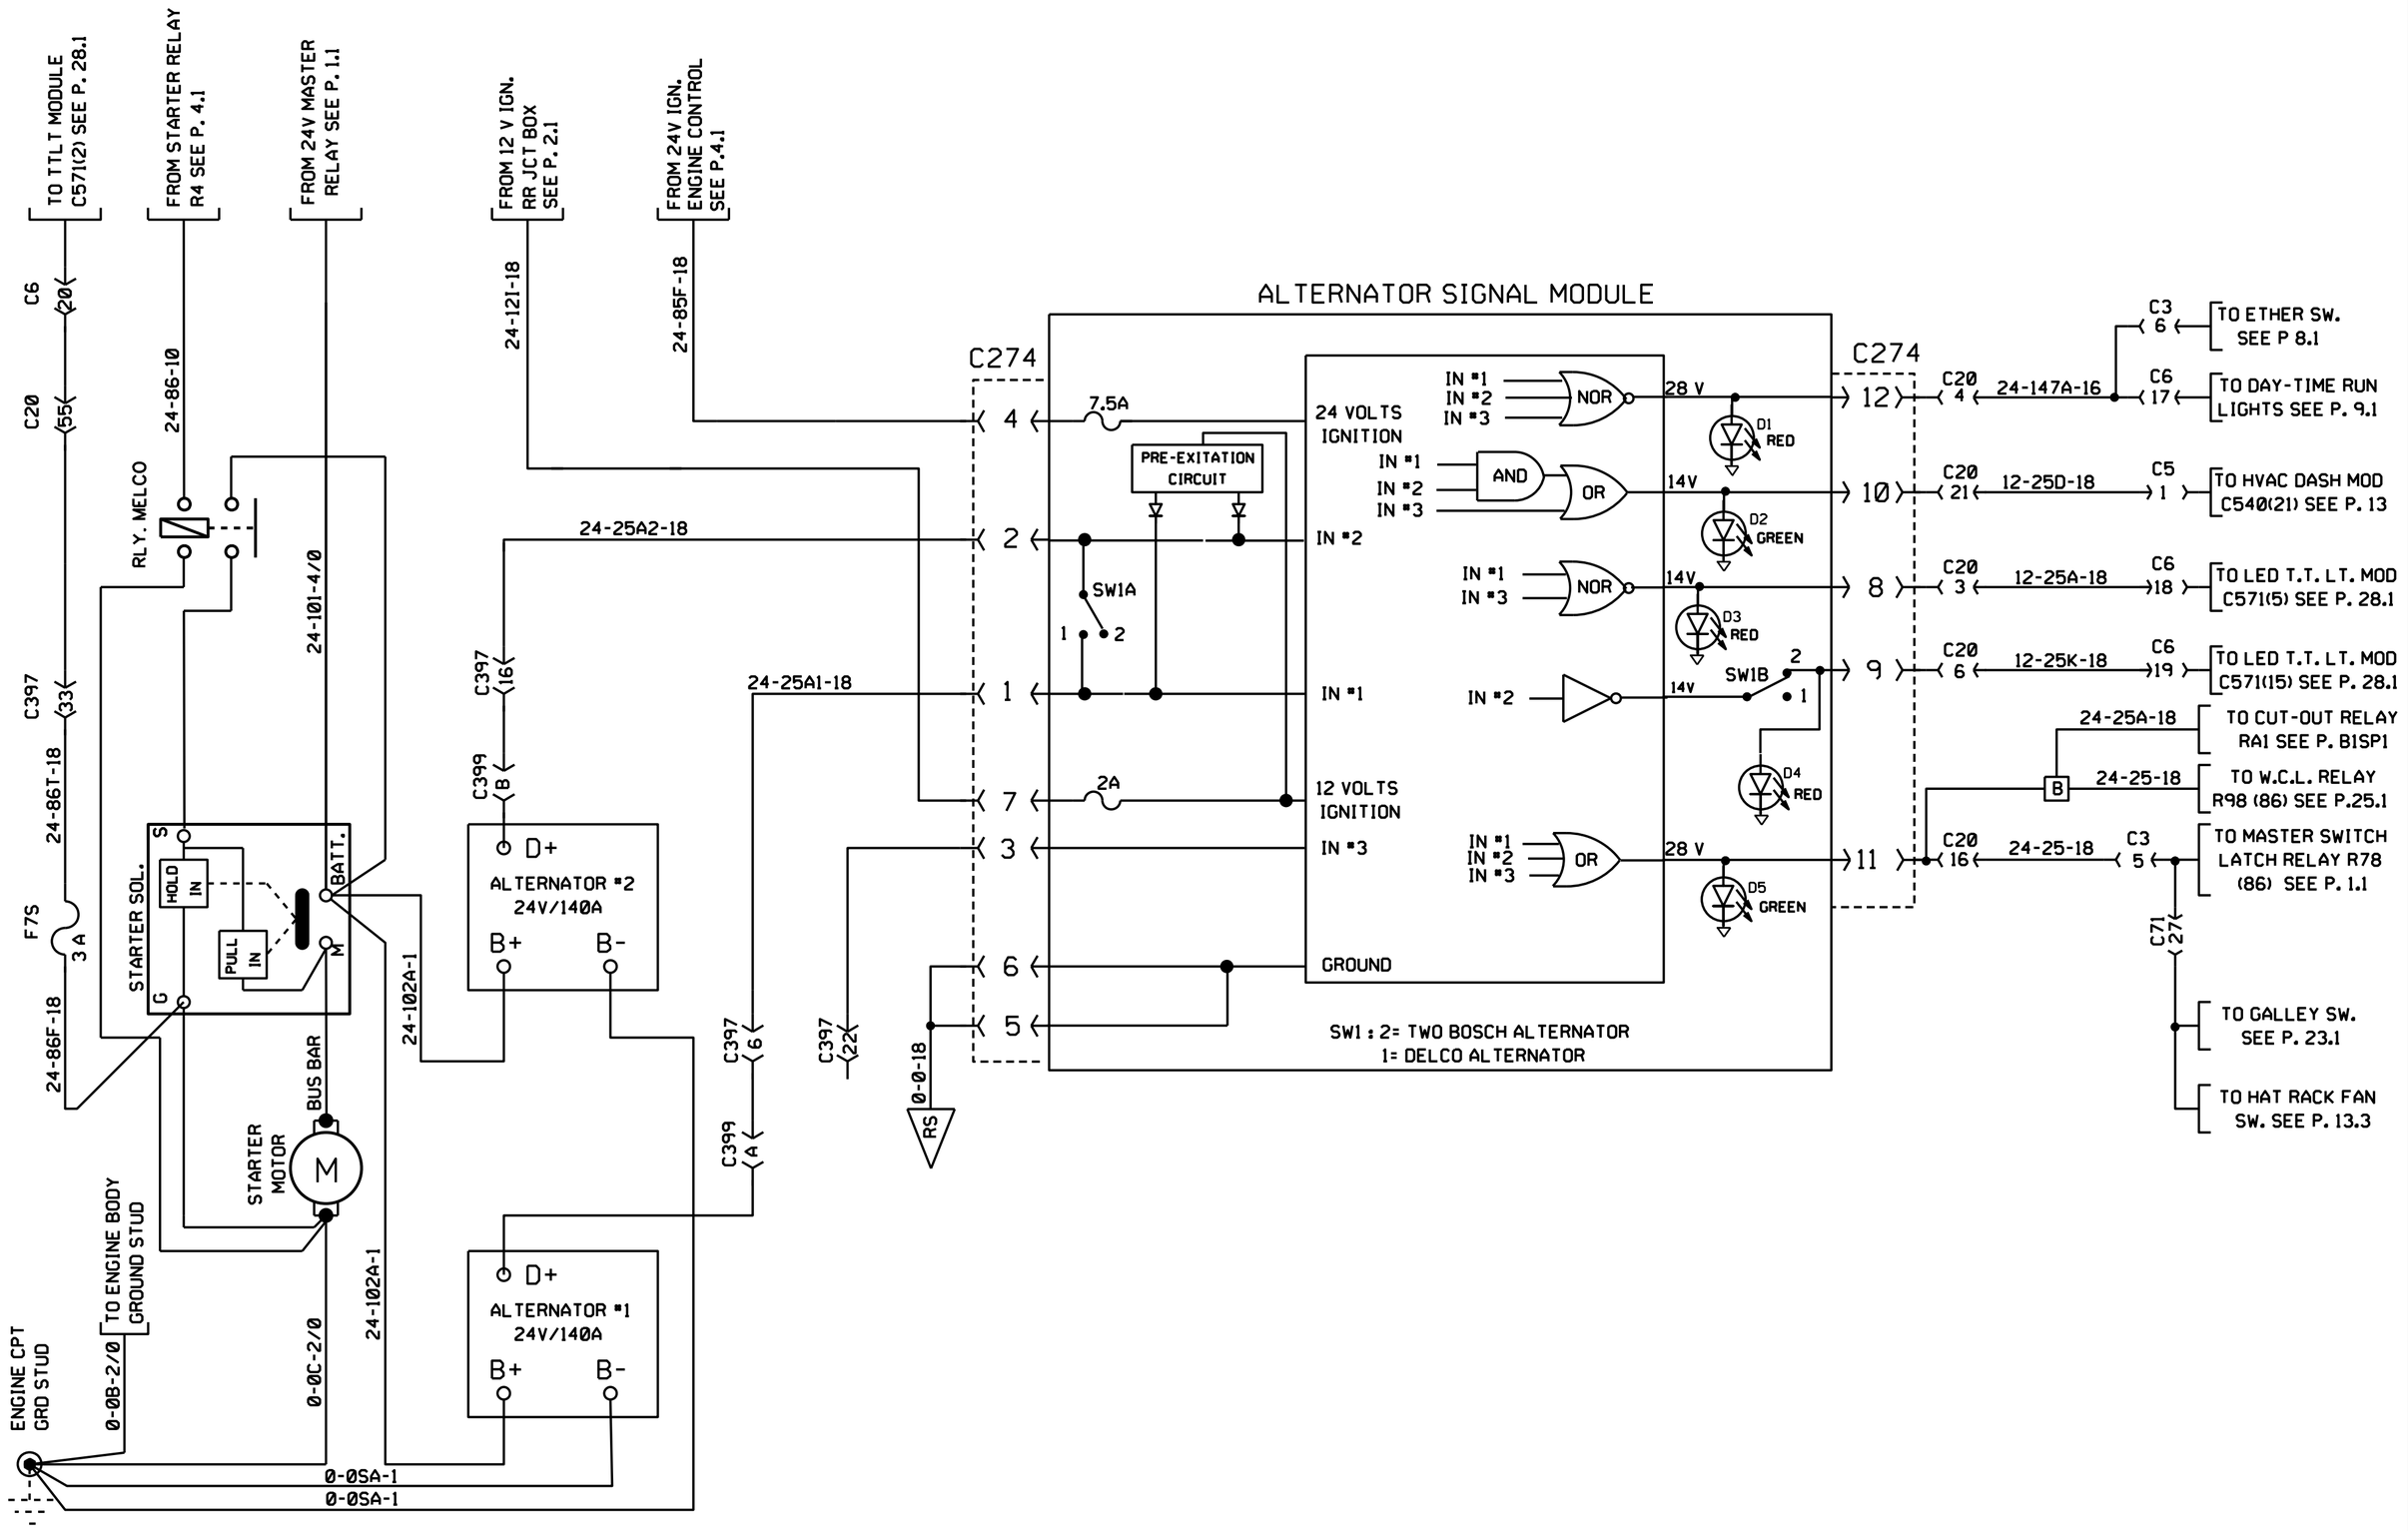

STARTER & BOSCH ALTERNATOR

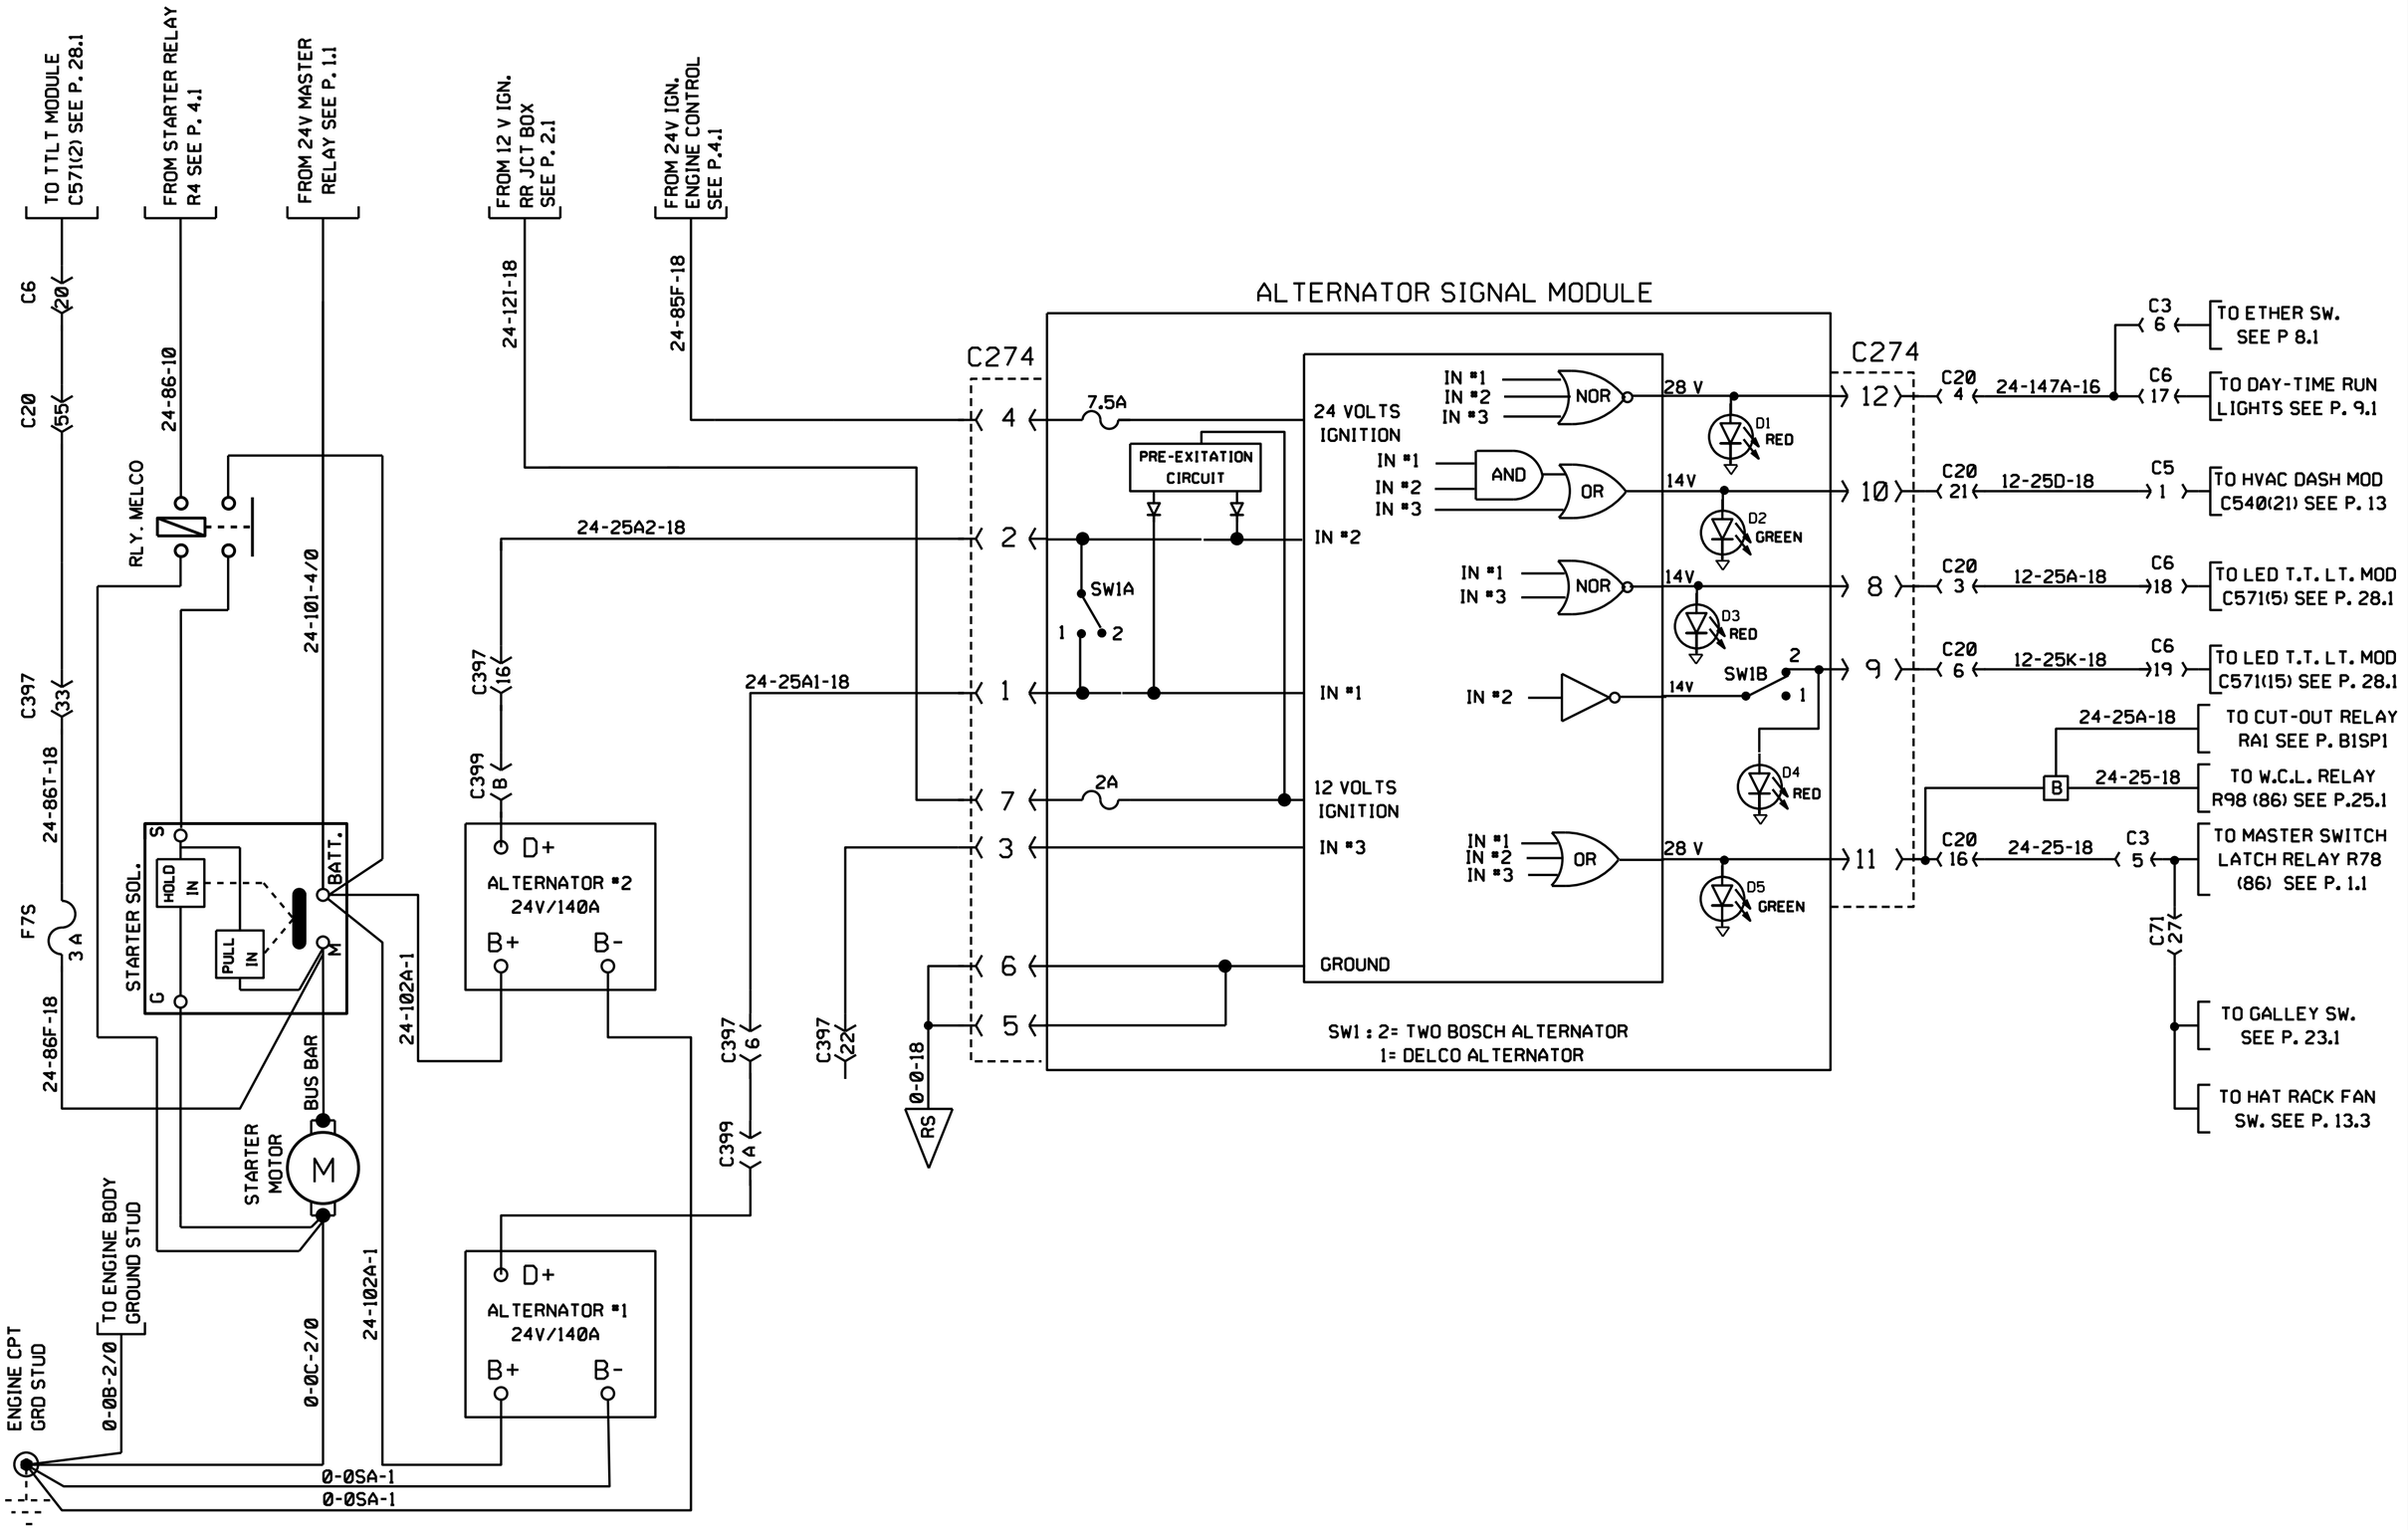

STARTER & BOSCH ALTERNATOR

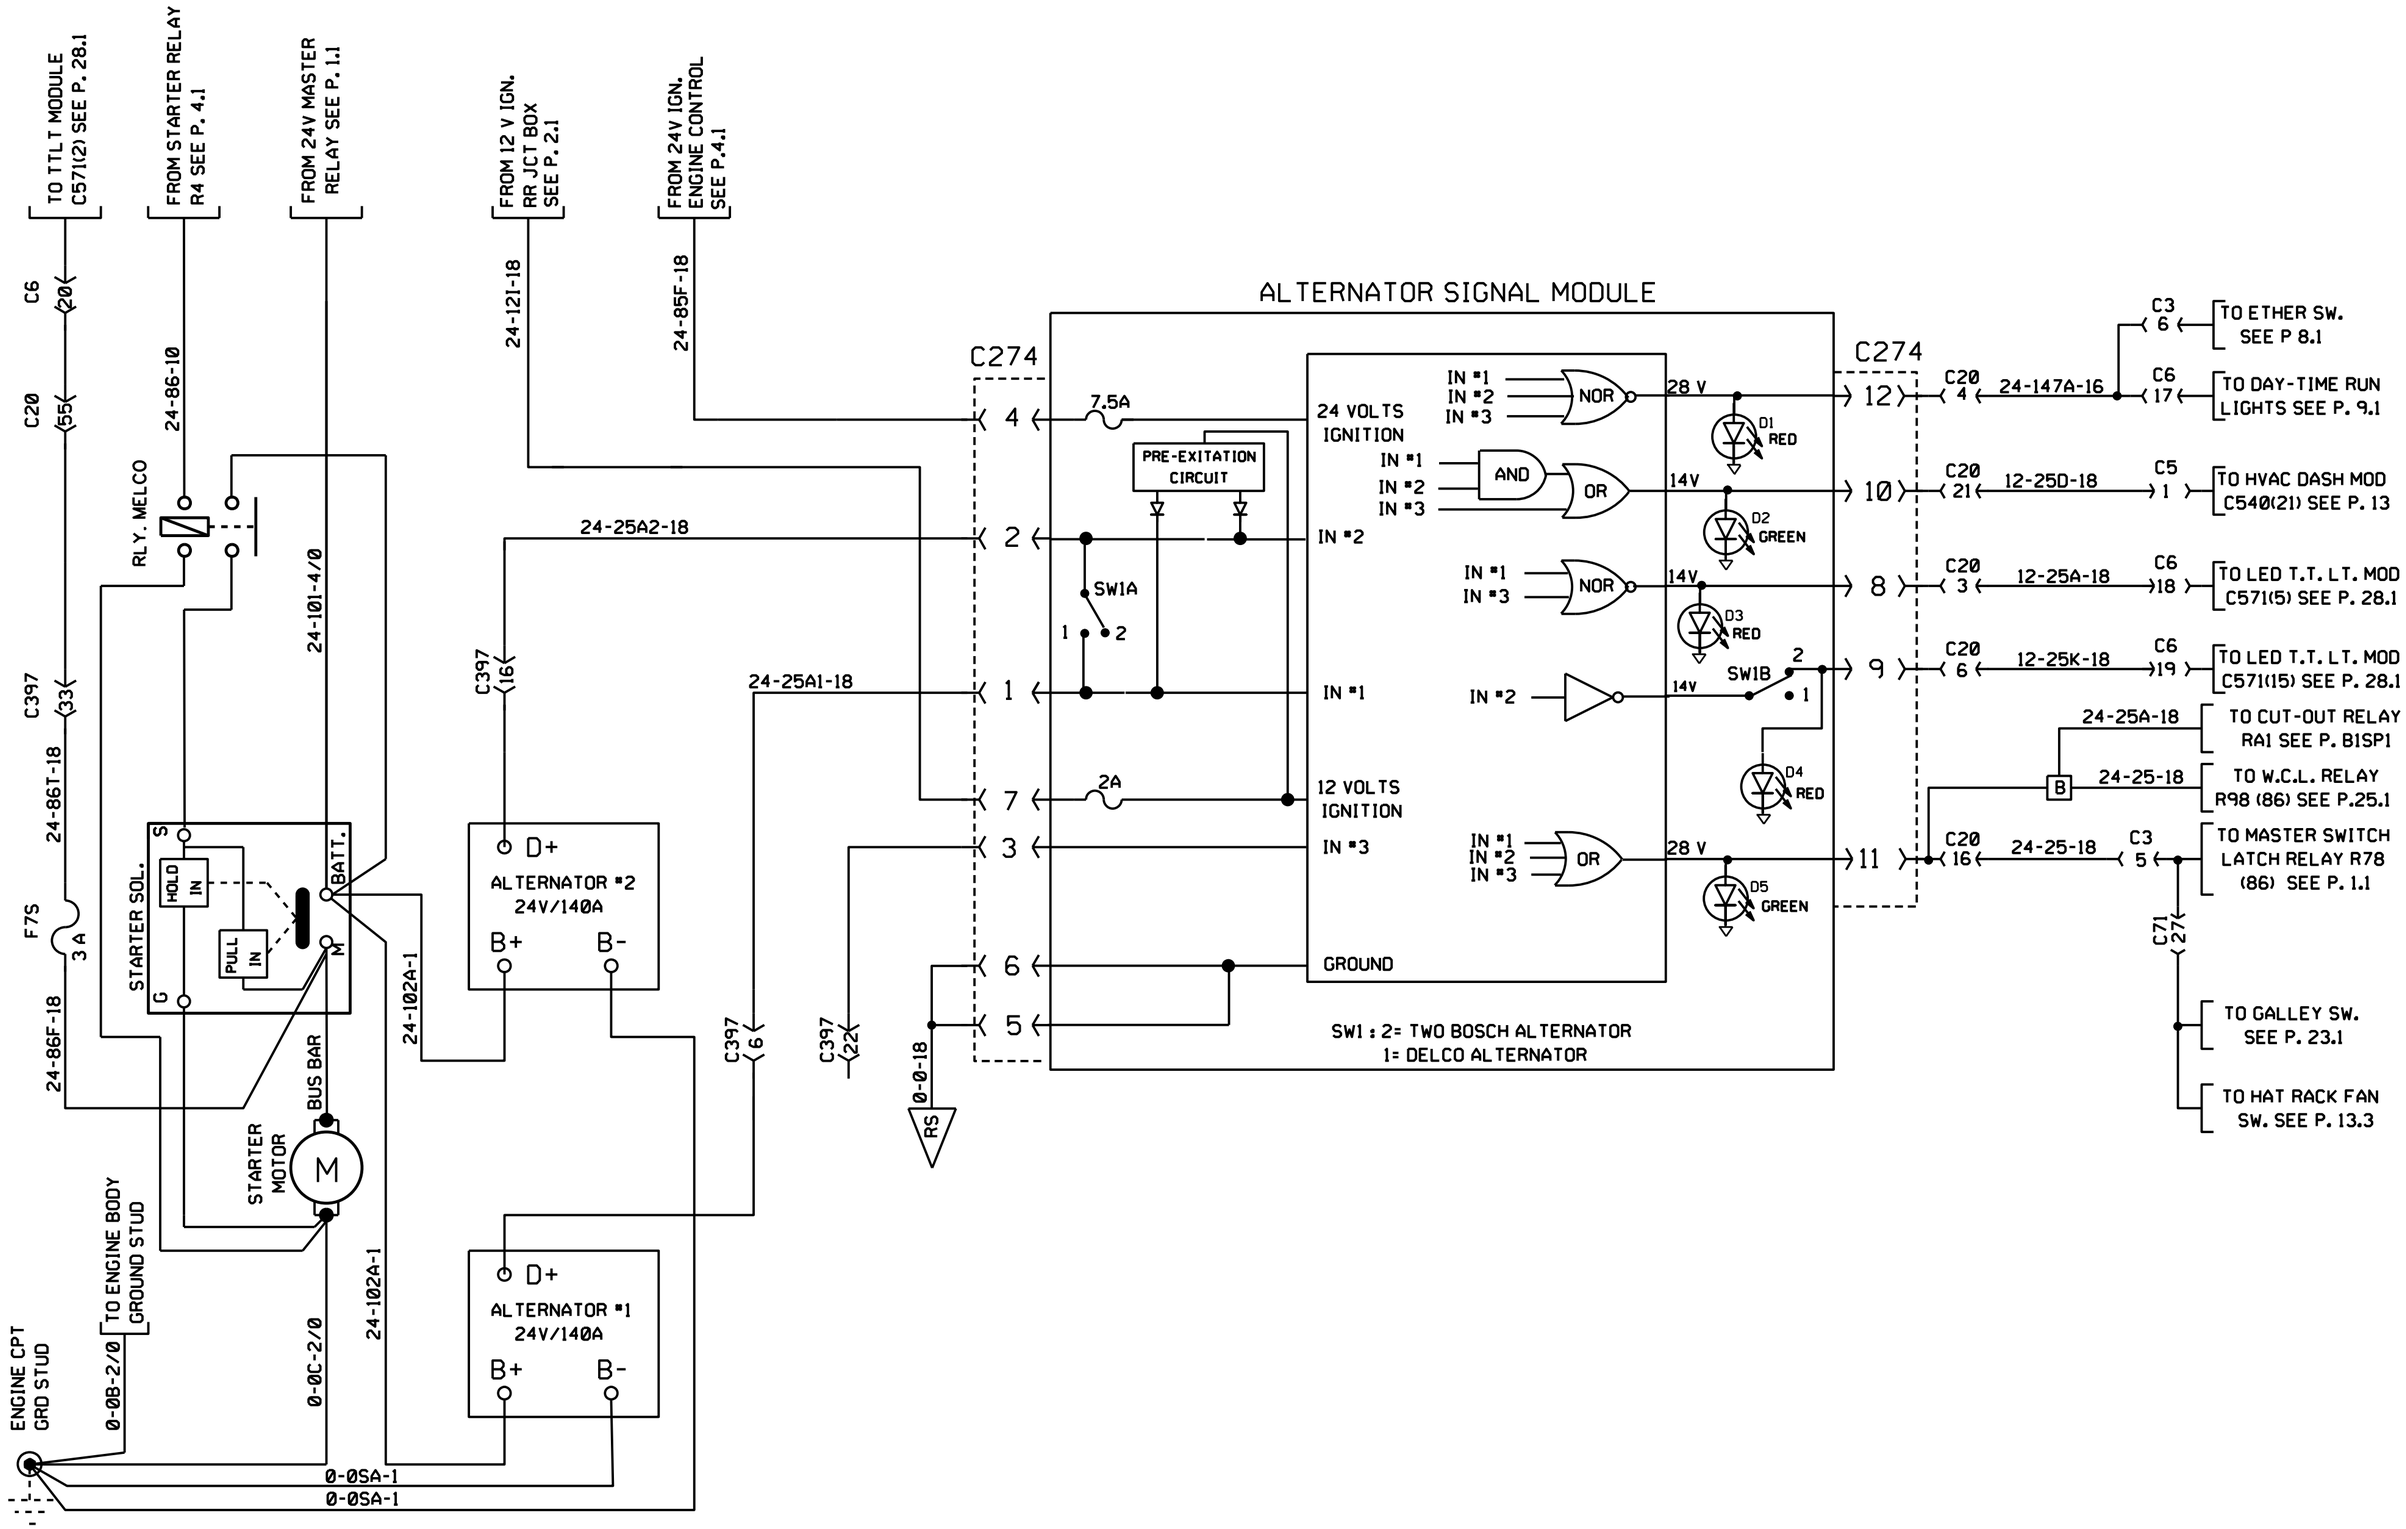

STARTER & BOSCH ALTERNATOR

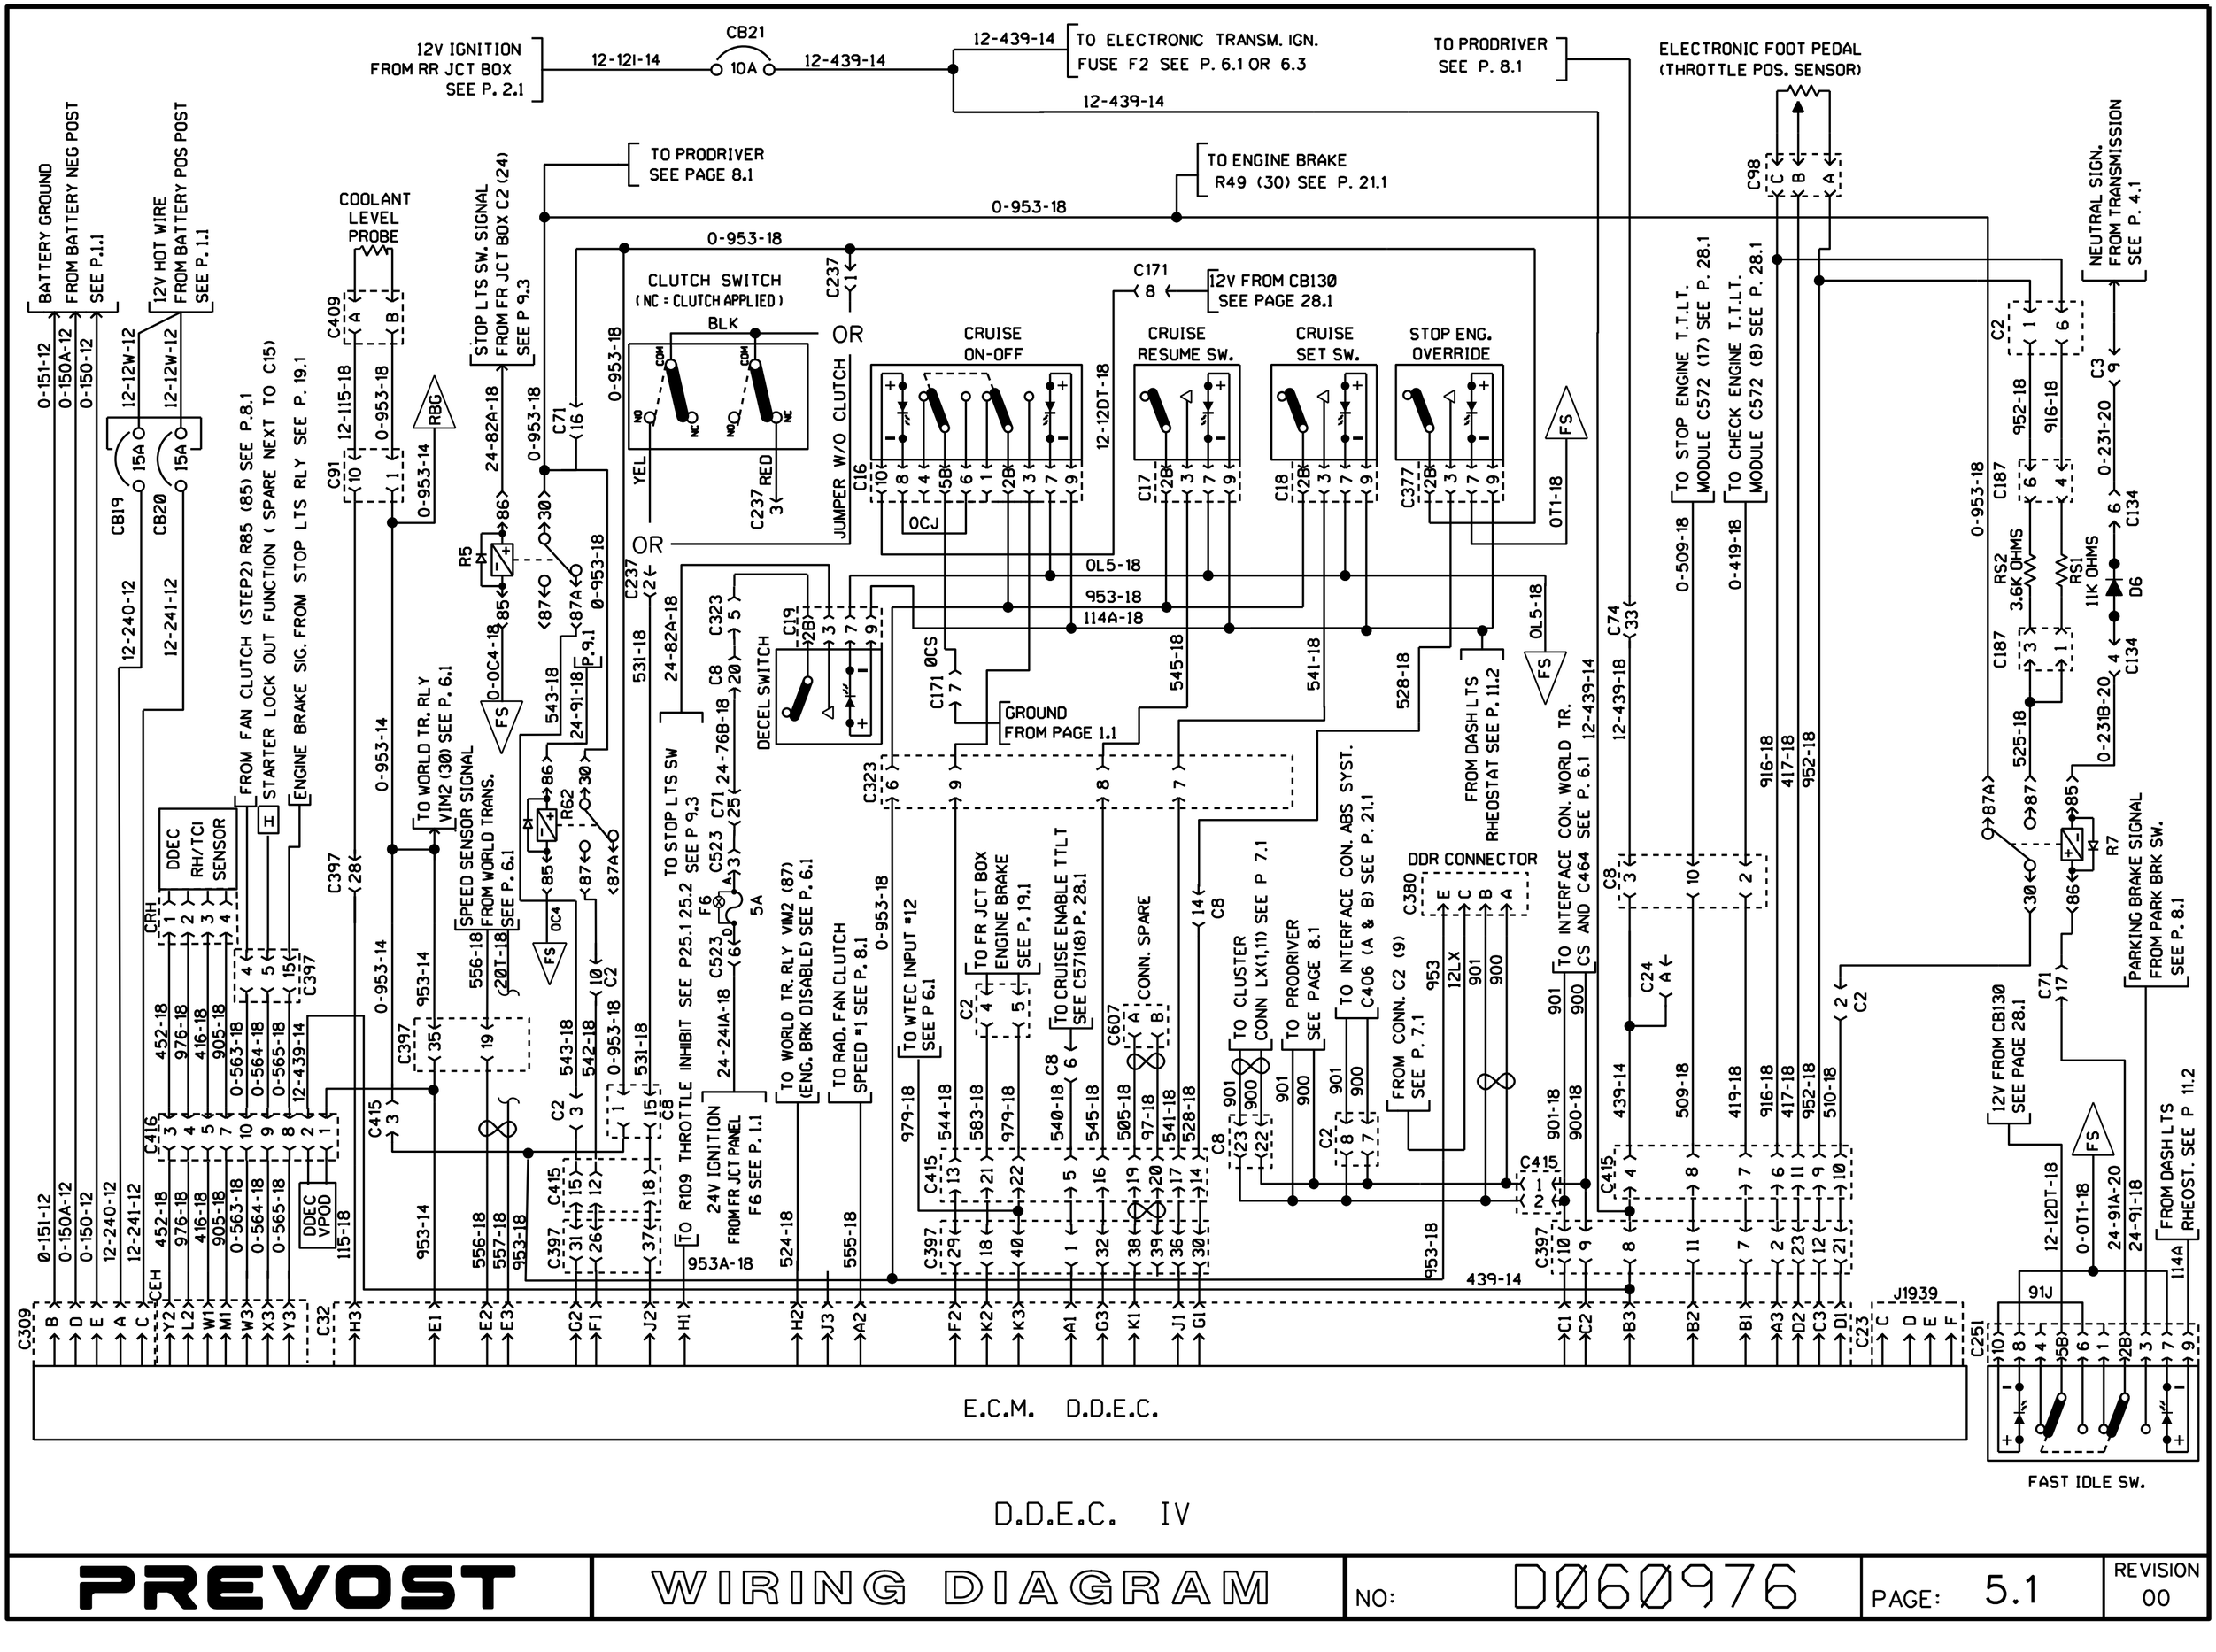

D.D.E.C. IV

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 5.1	REVISION 00

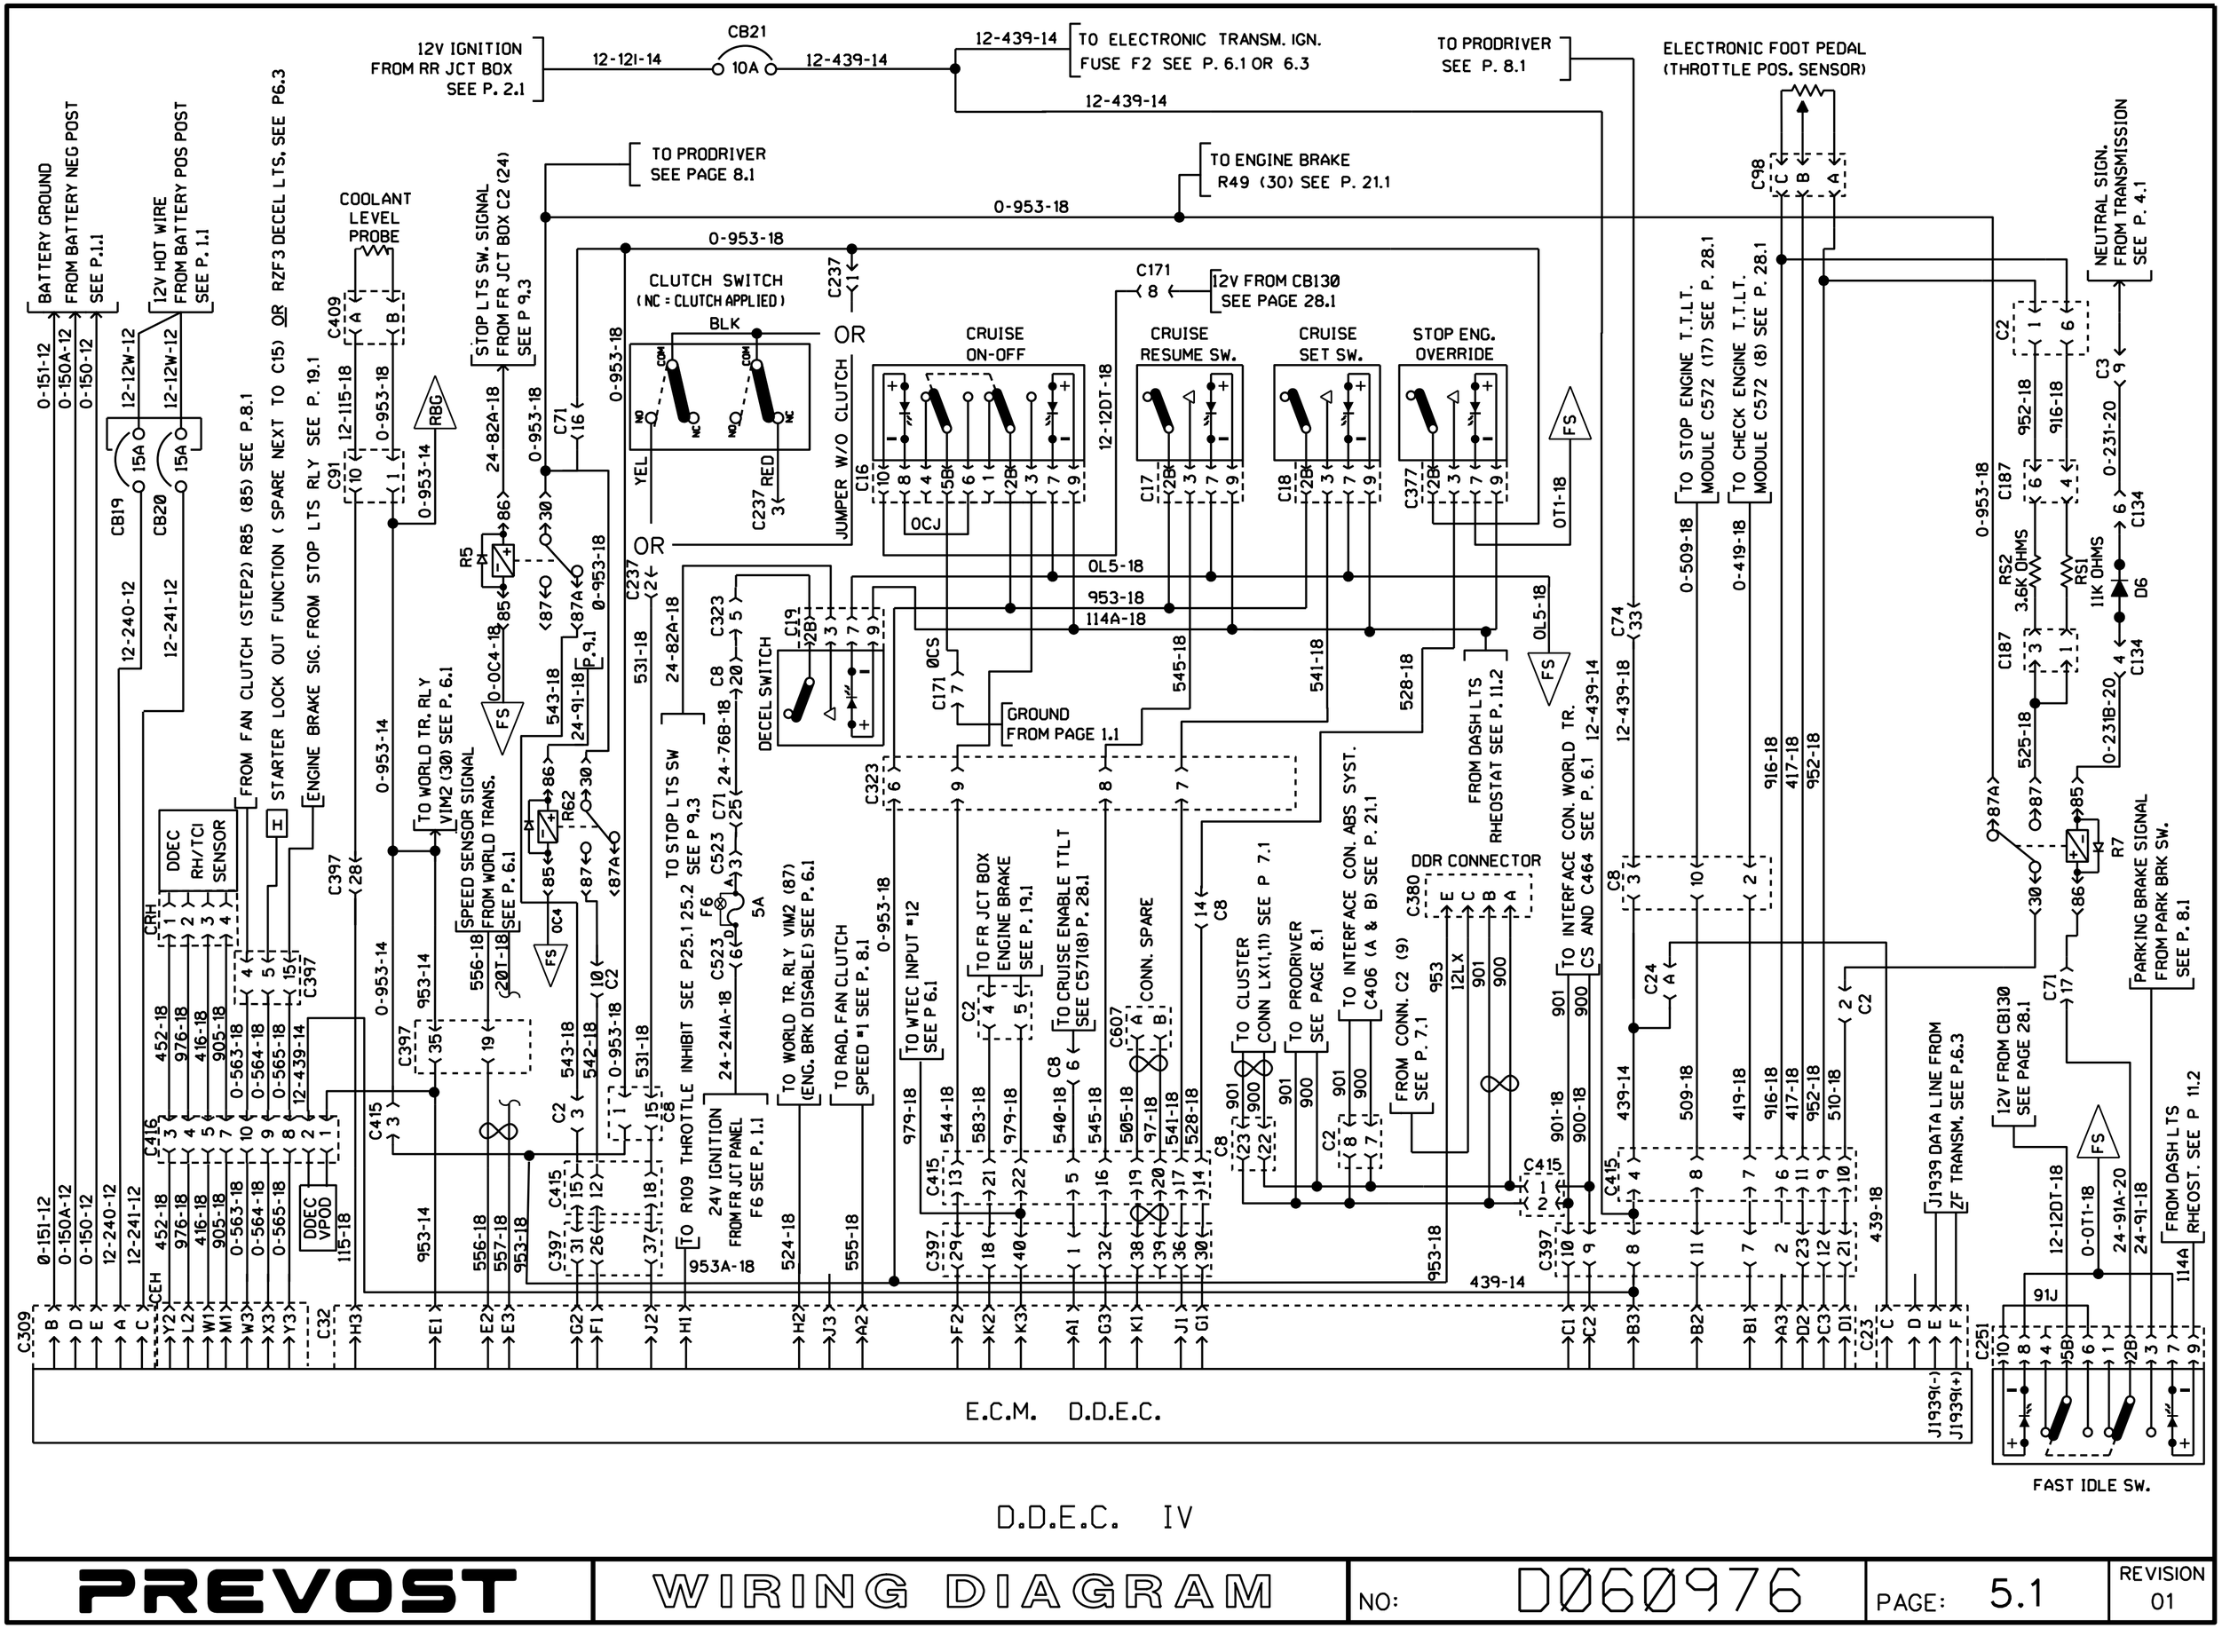

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 5.1	REVISION 01

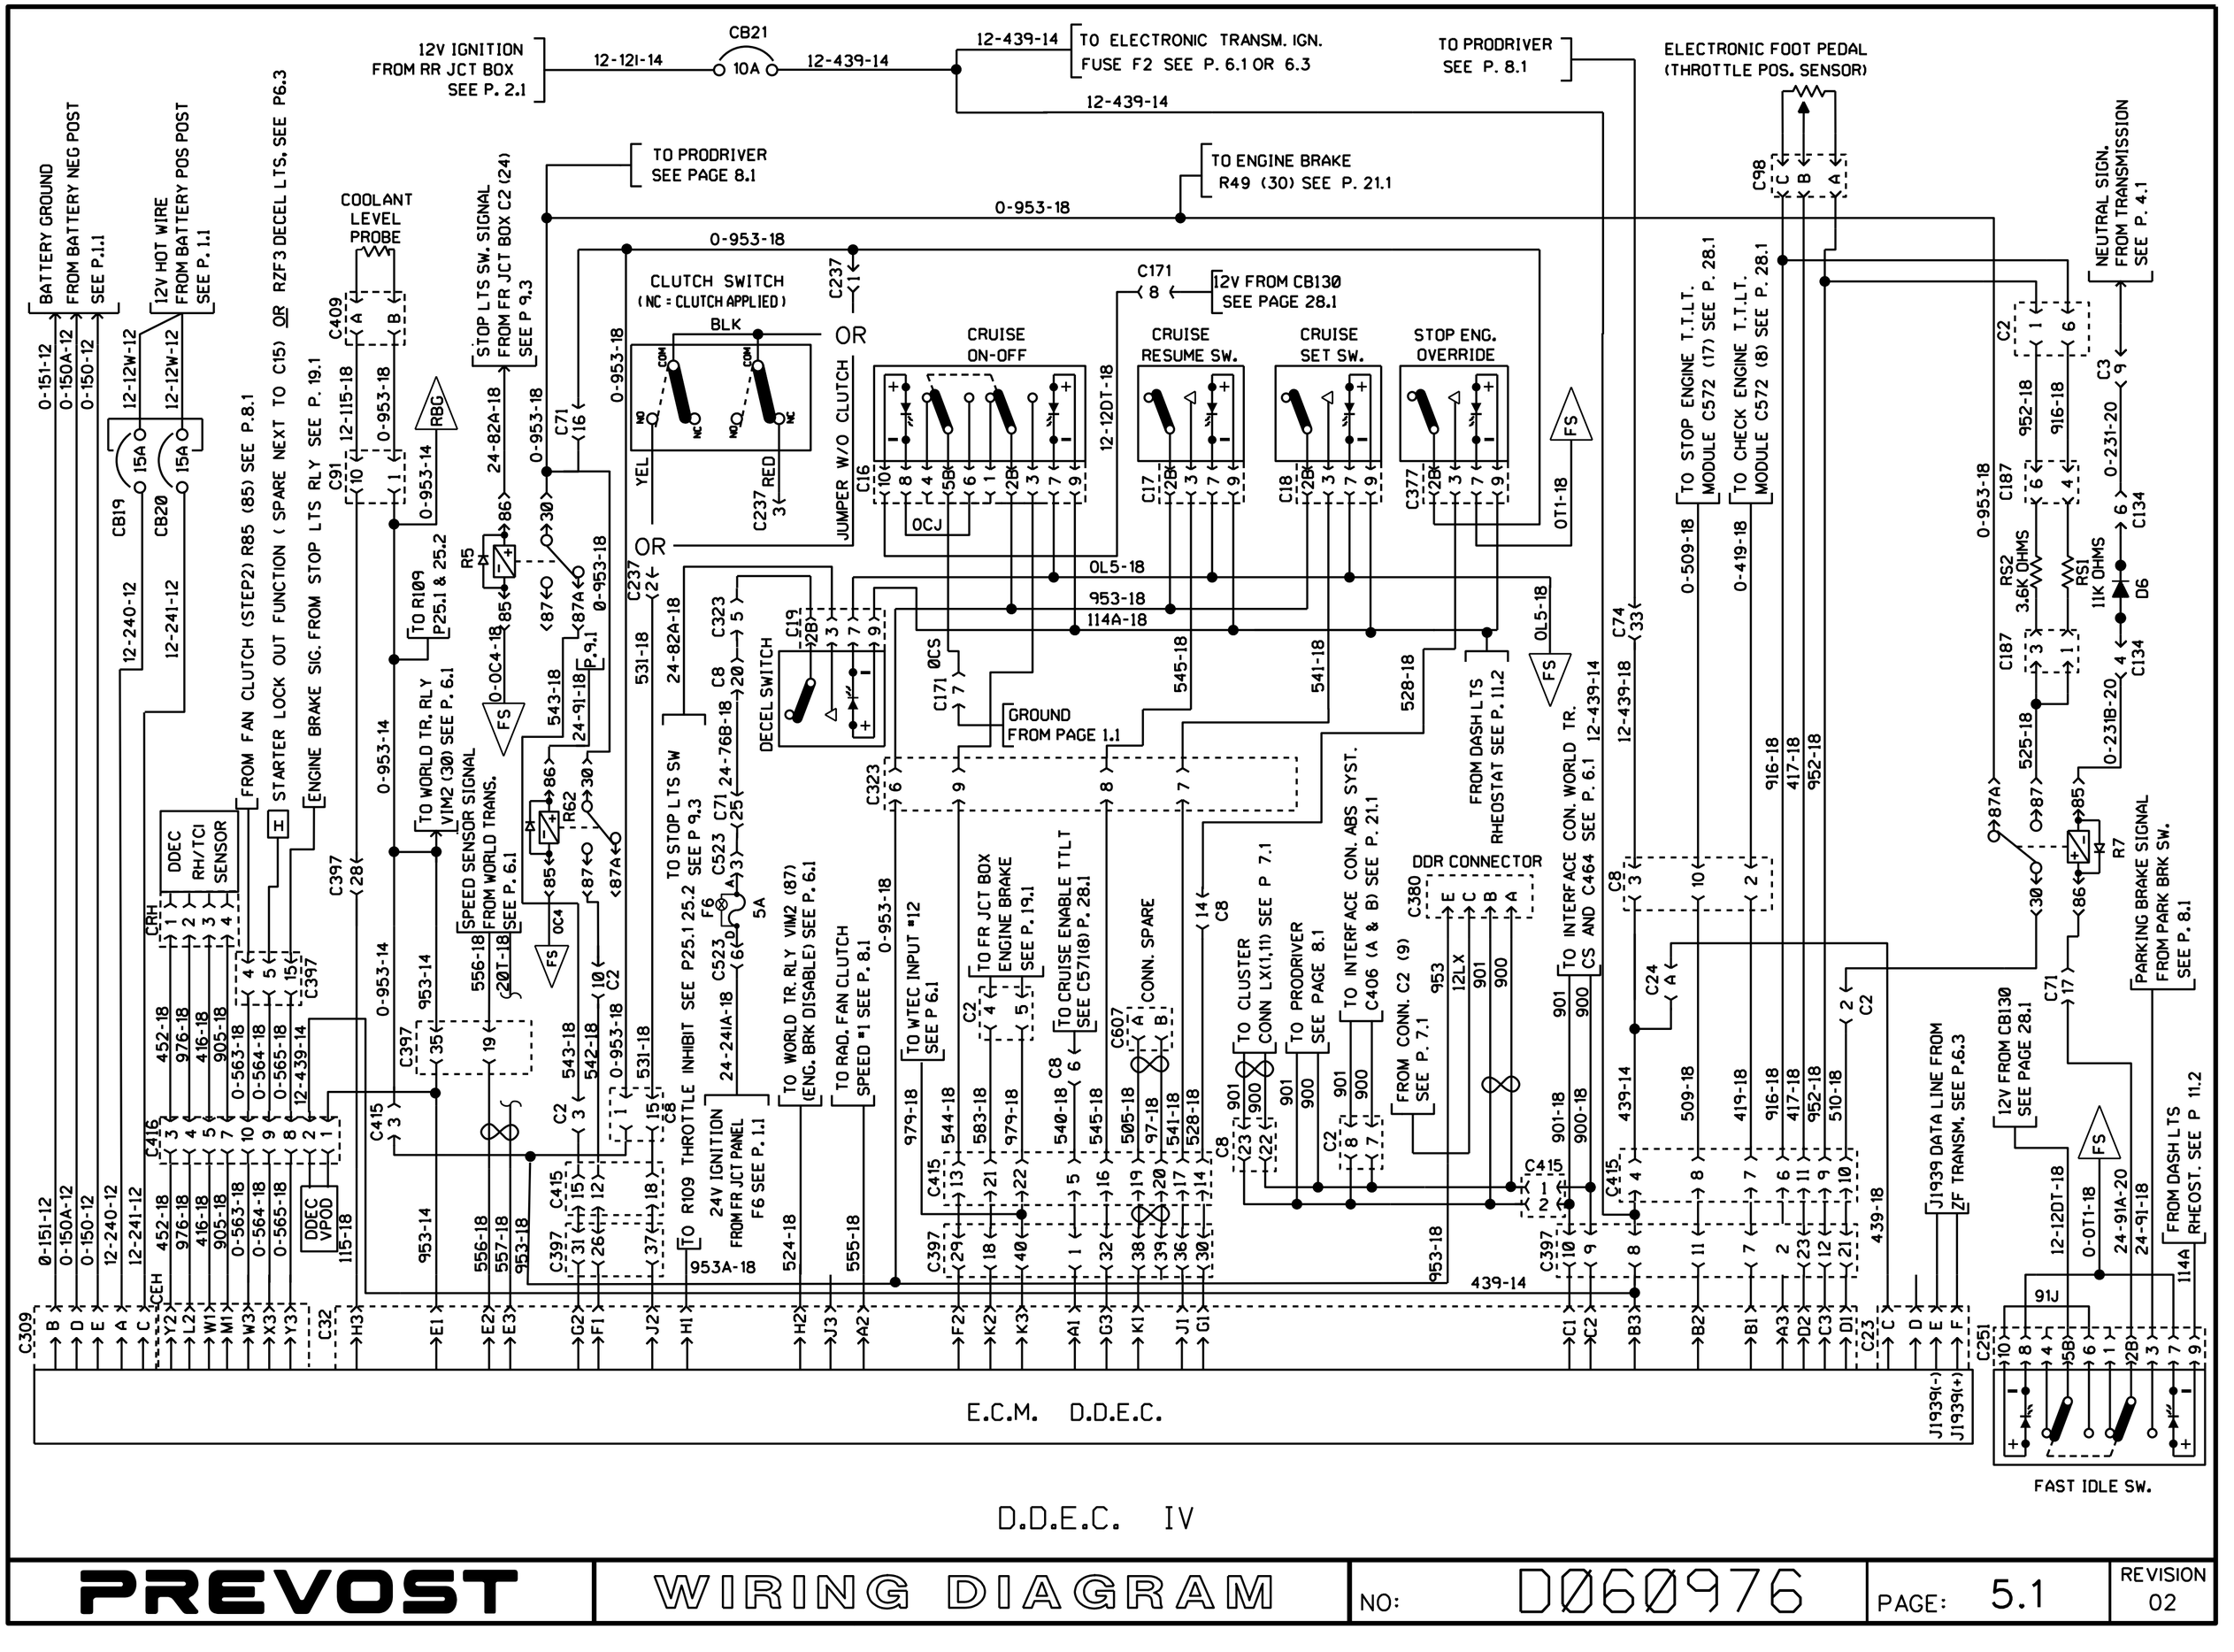

D.D.E.C. IV

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 5.1	REVISION 02

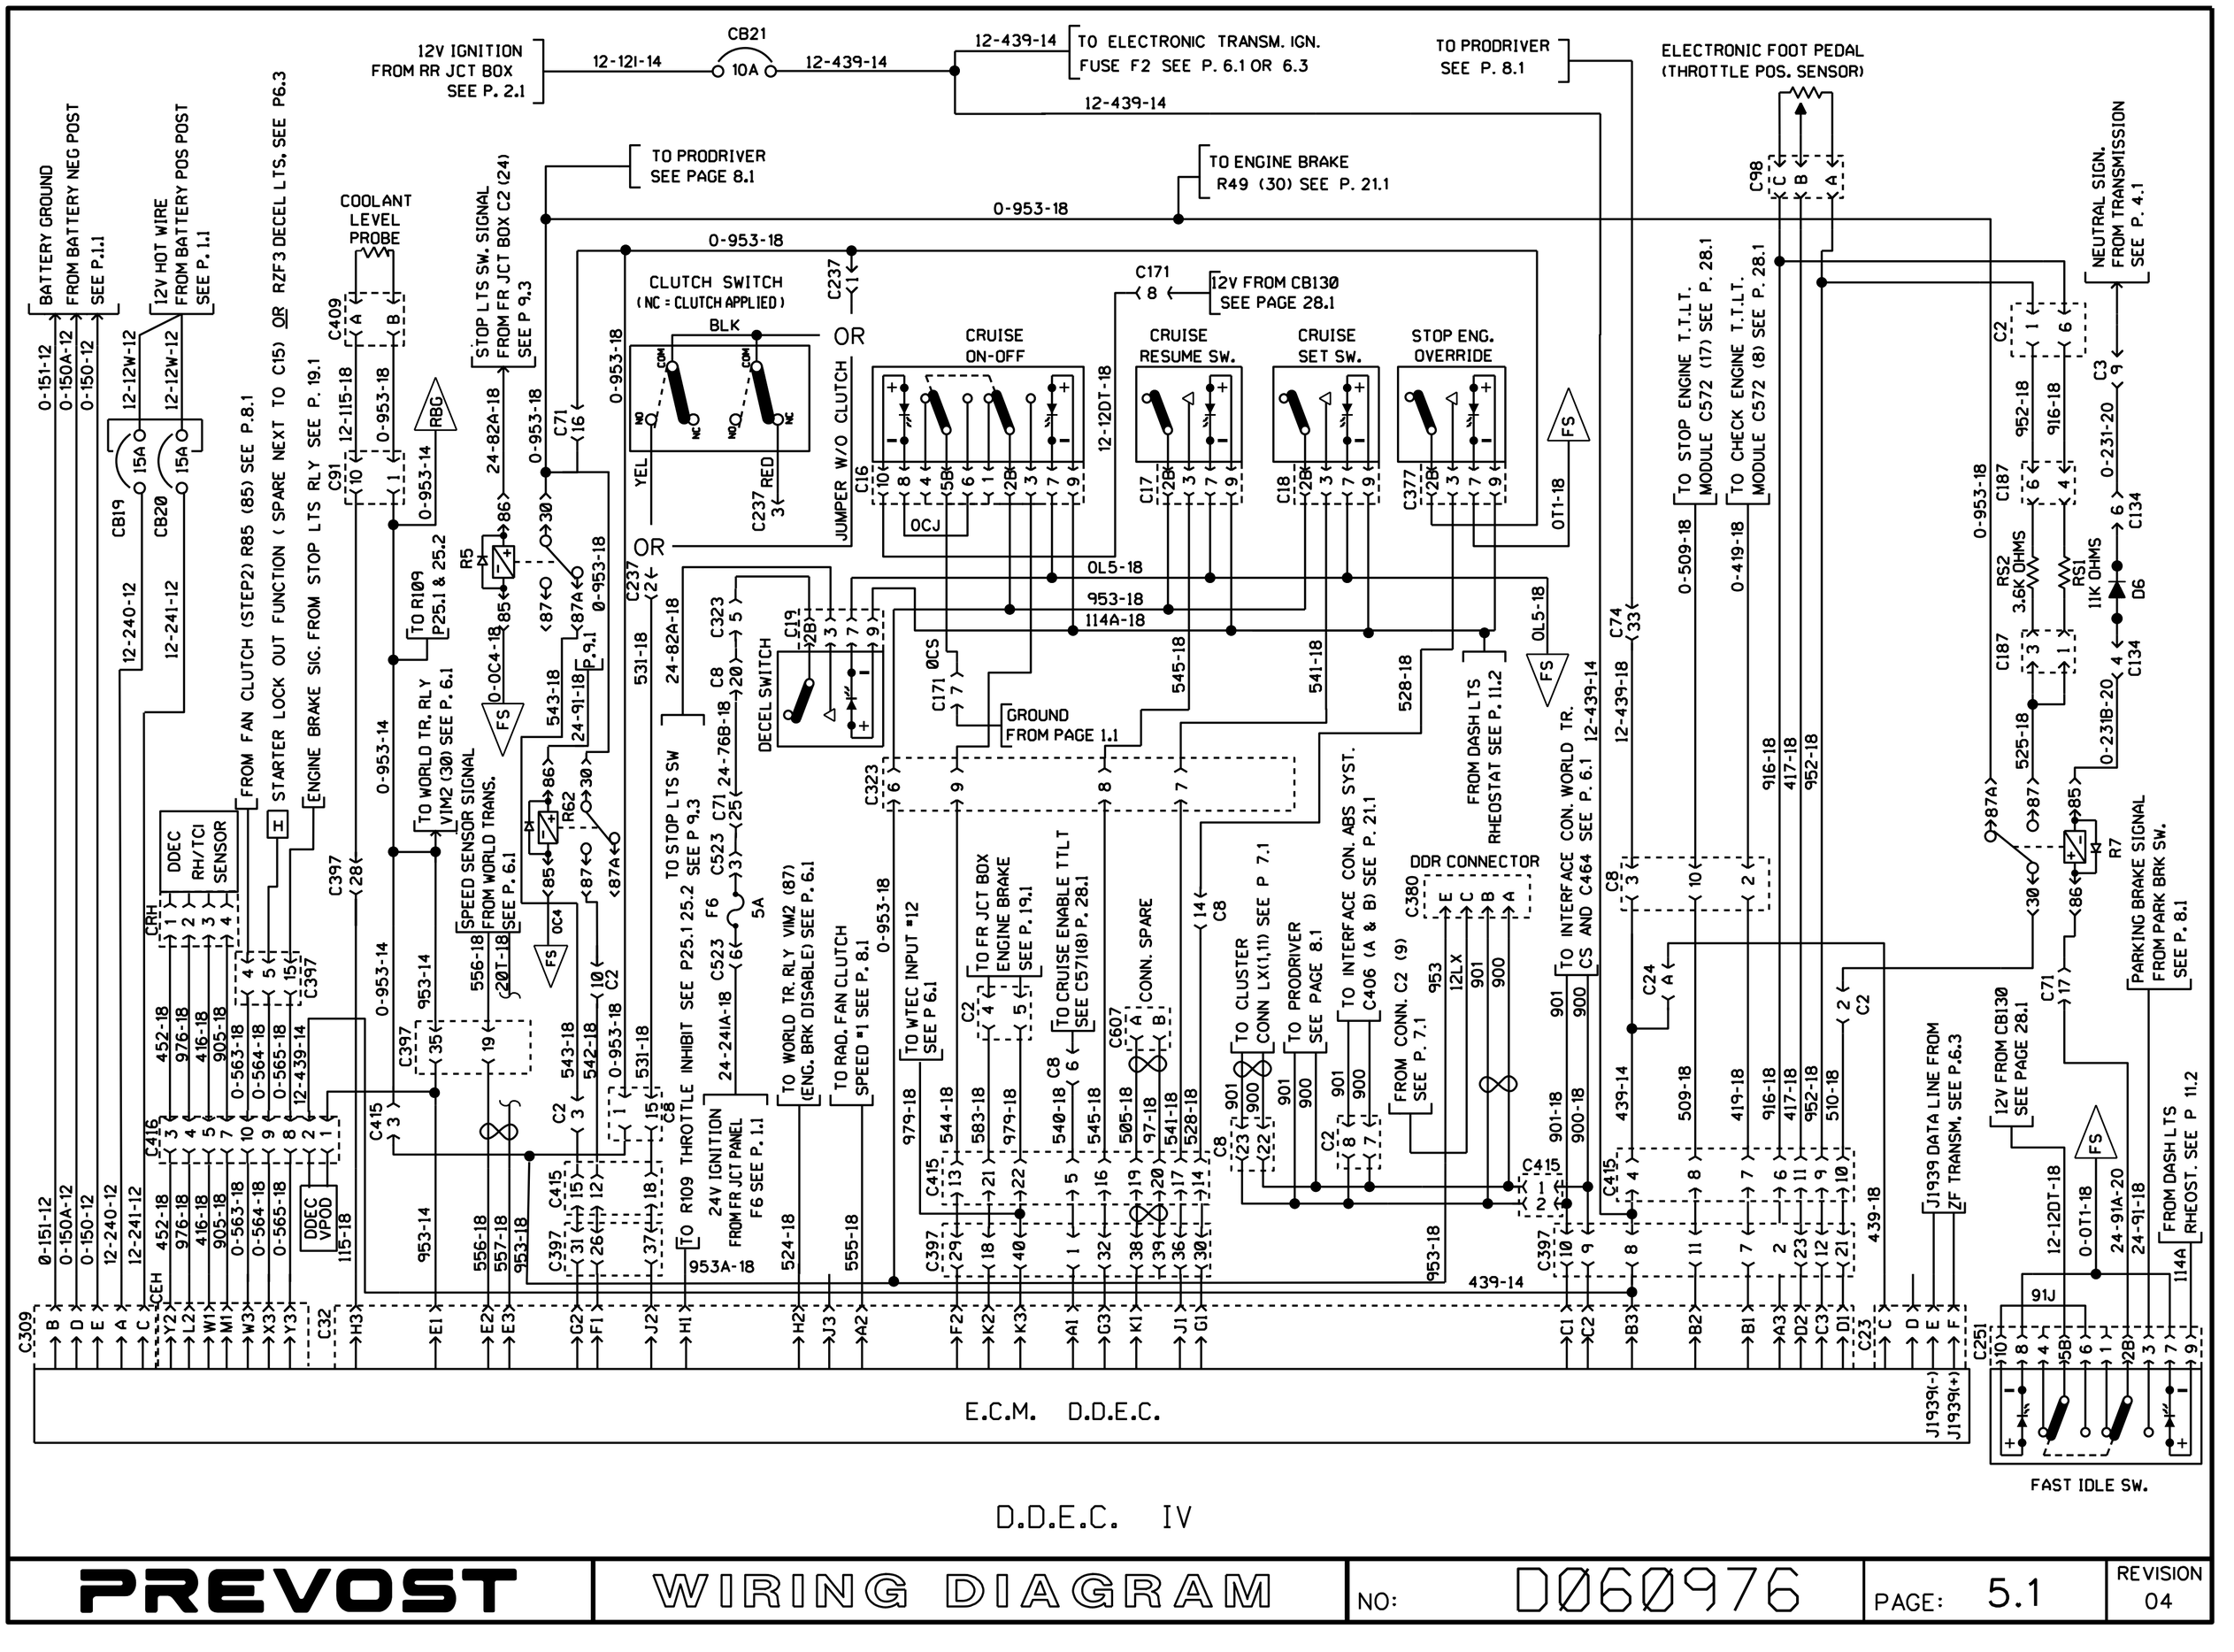

D.D.E.C. IV

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 5.1	REVISION 04

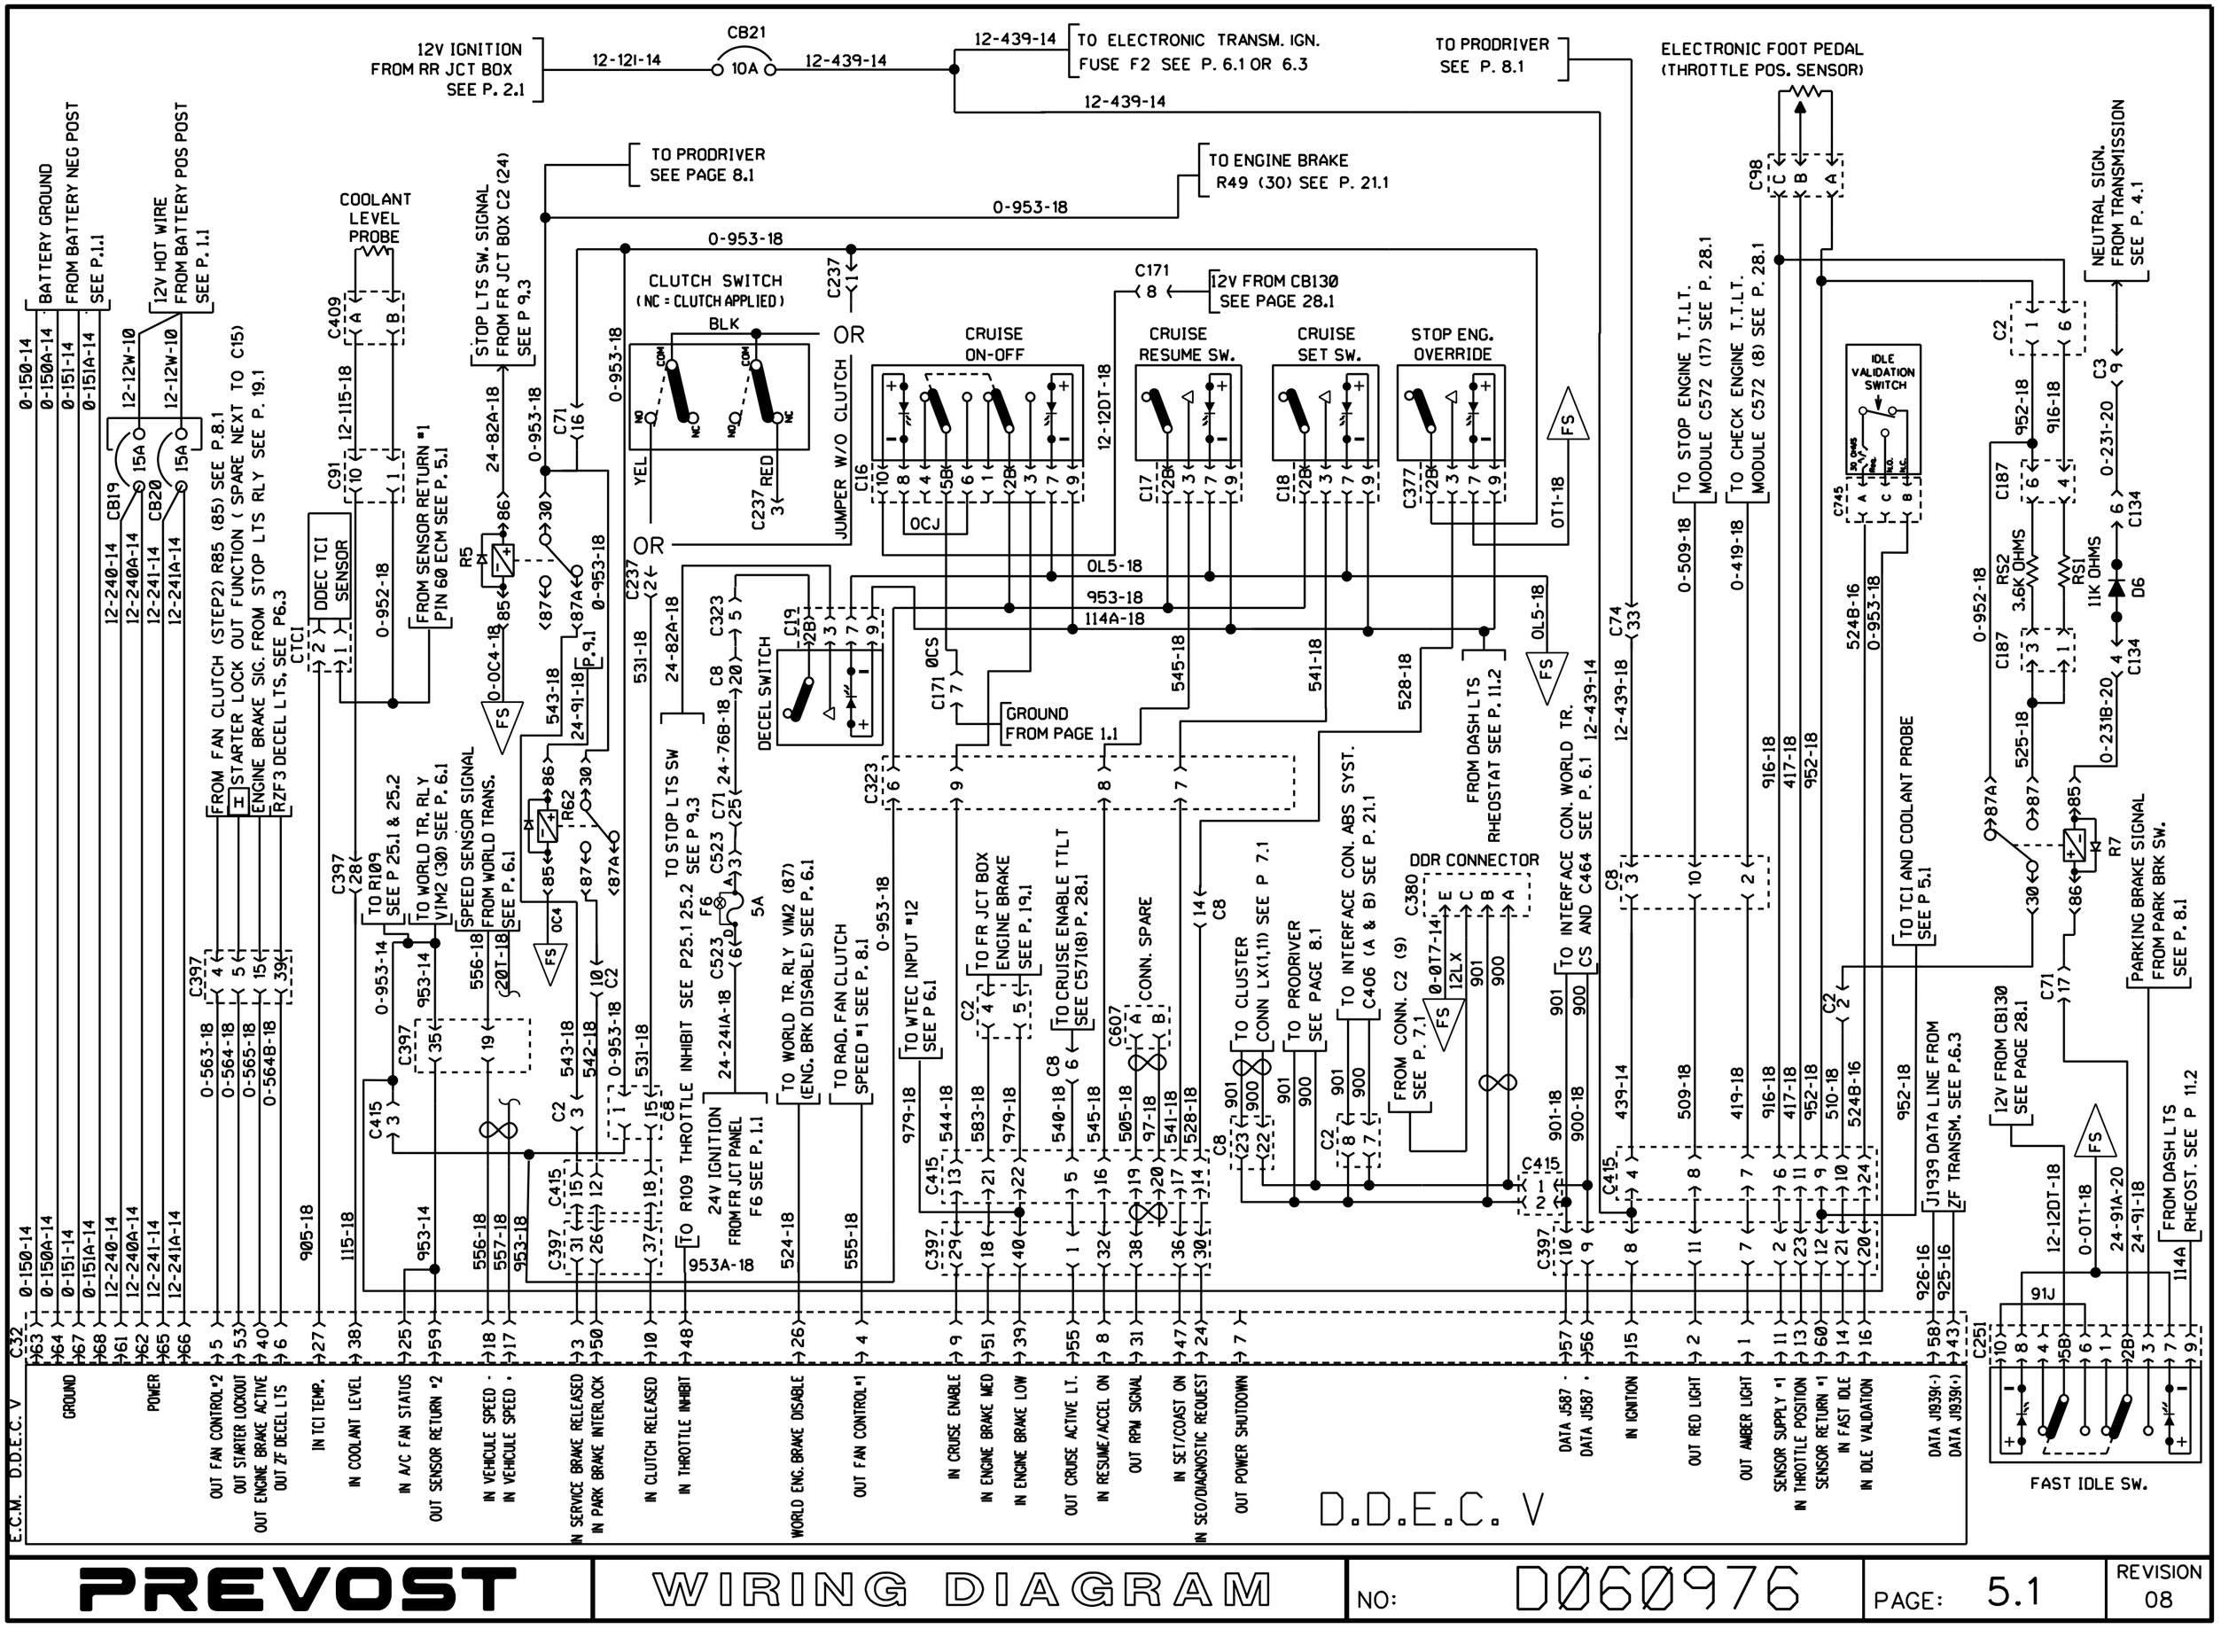

PREVOST | WIRING DIAGRAM | NO: D060976 | PAGE: 5.1 | REVISION 08

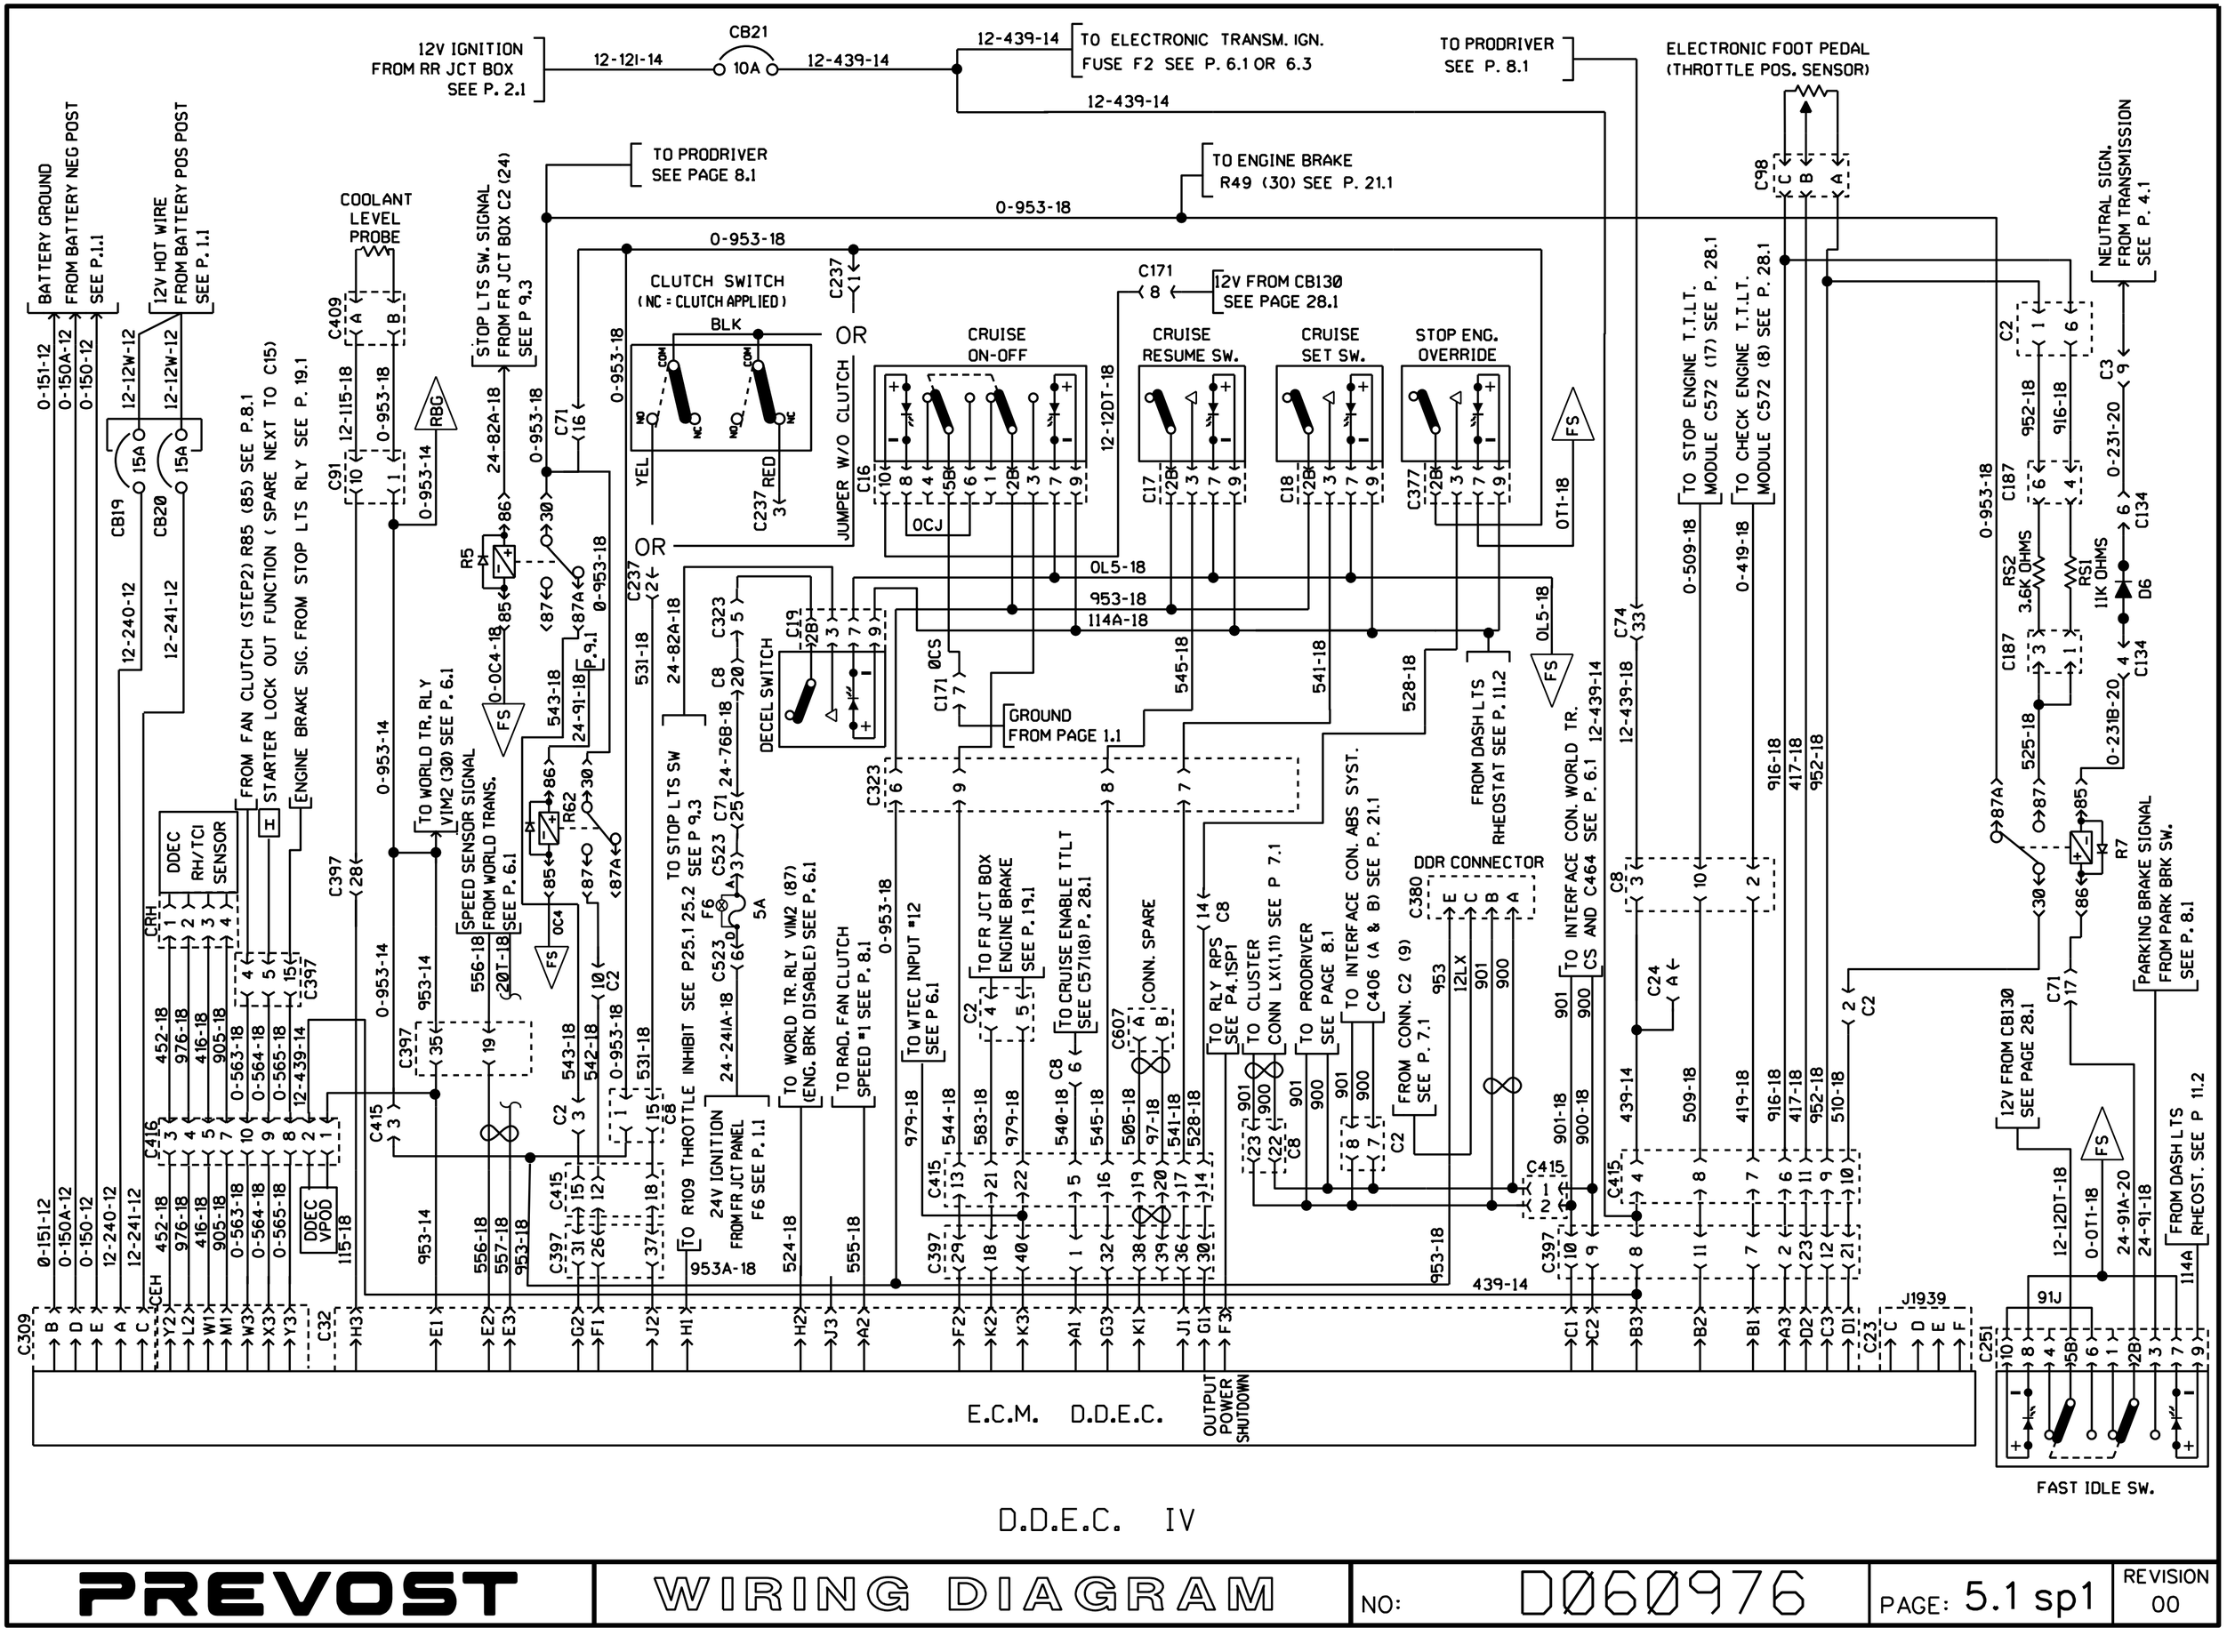

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 5.1 sp1	REVISION 00

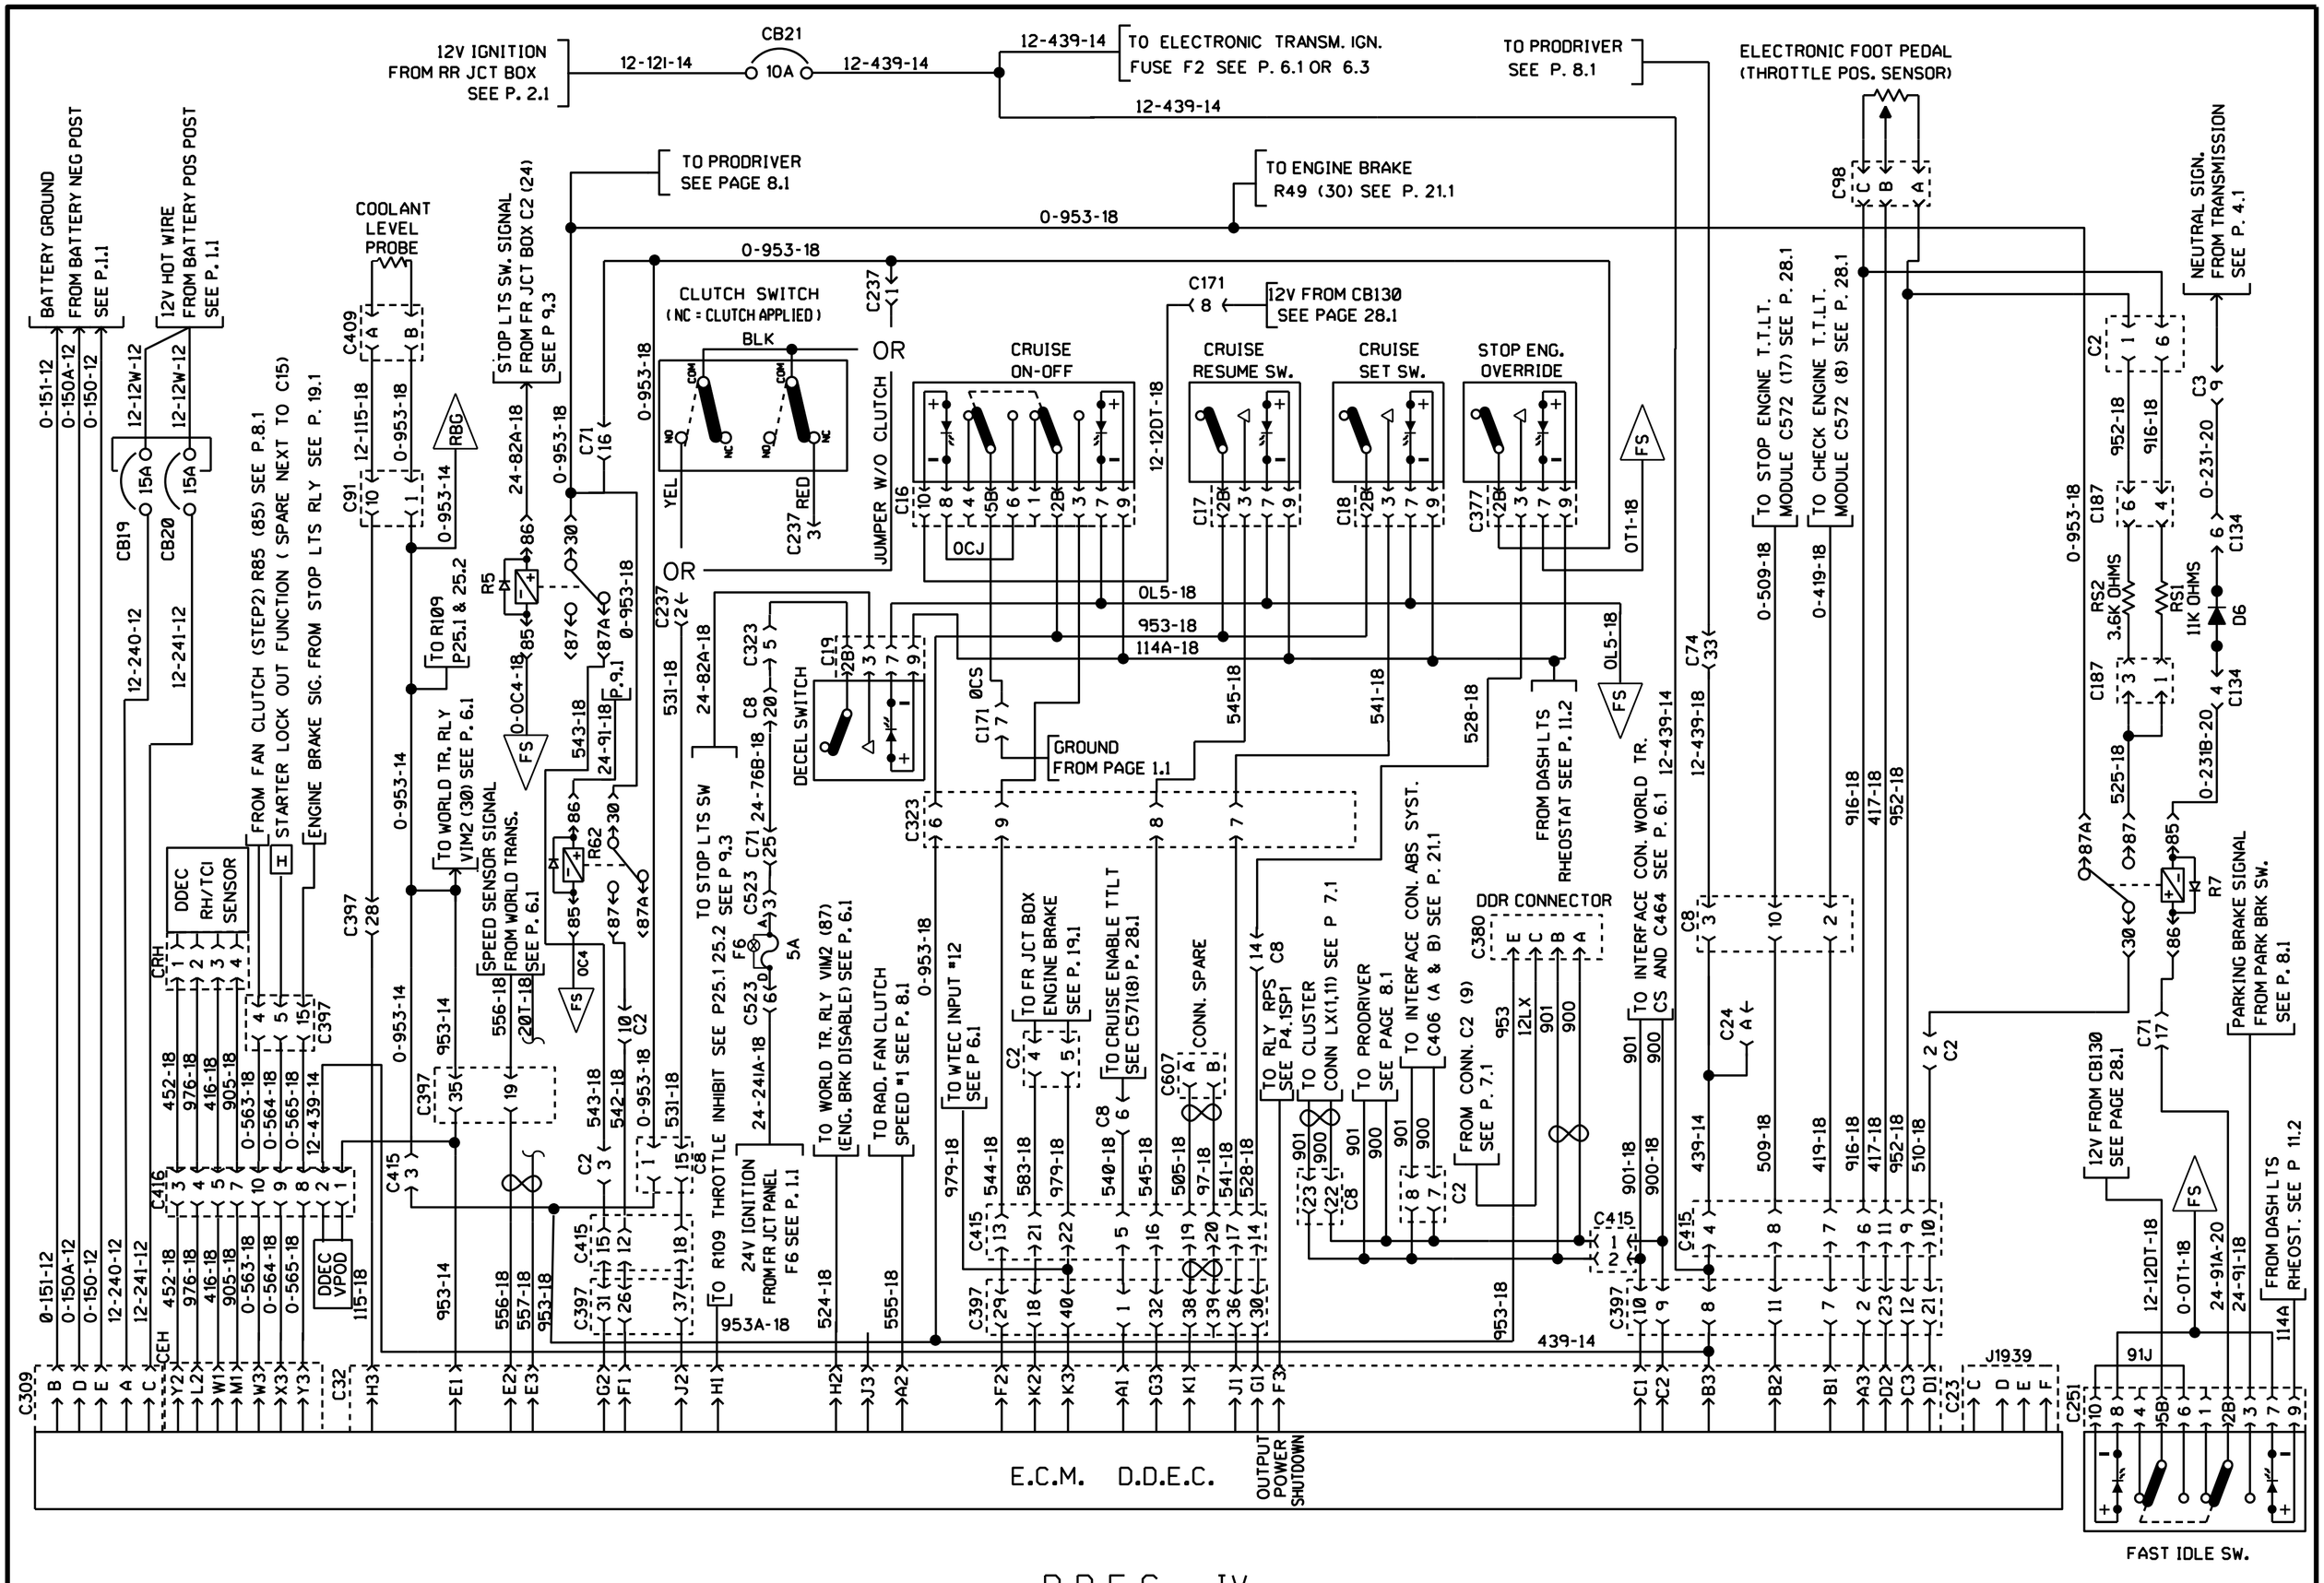

D.D.E.C. IV

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 5.1 sp1	REVISION 02

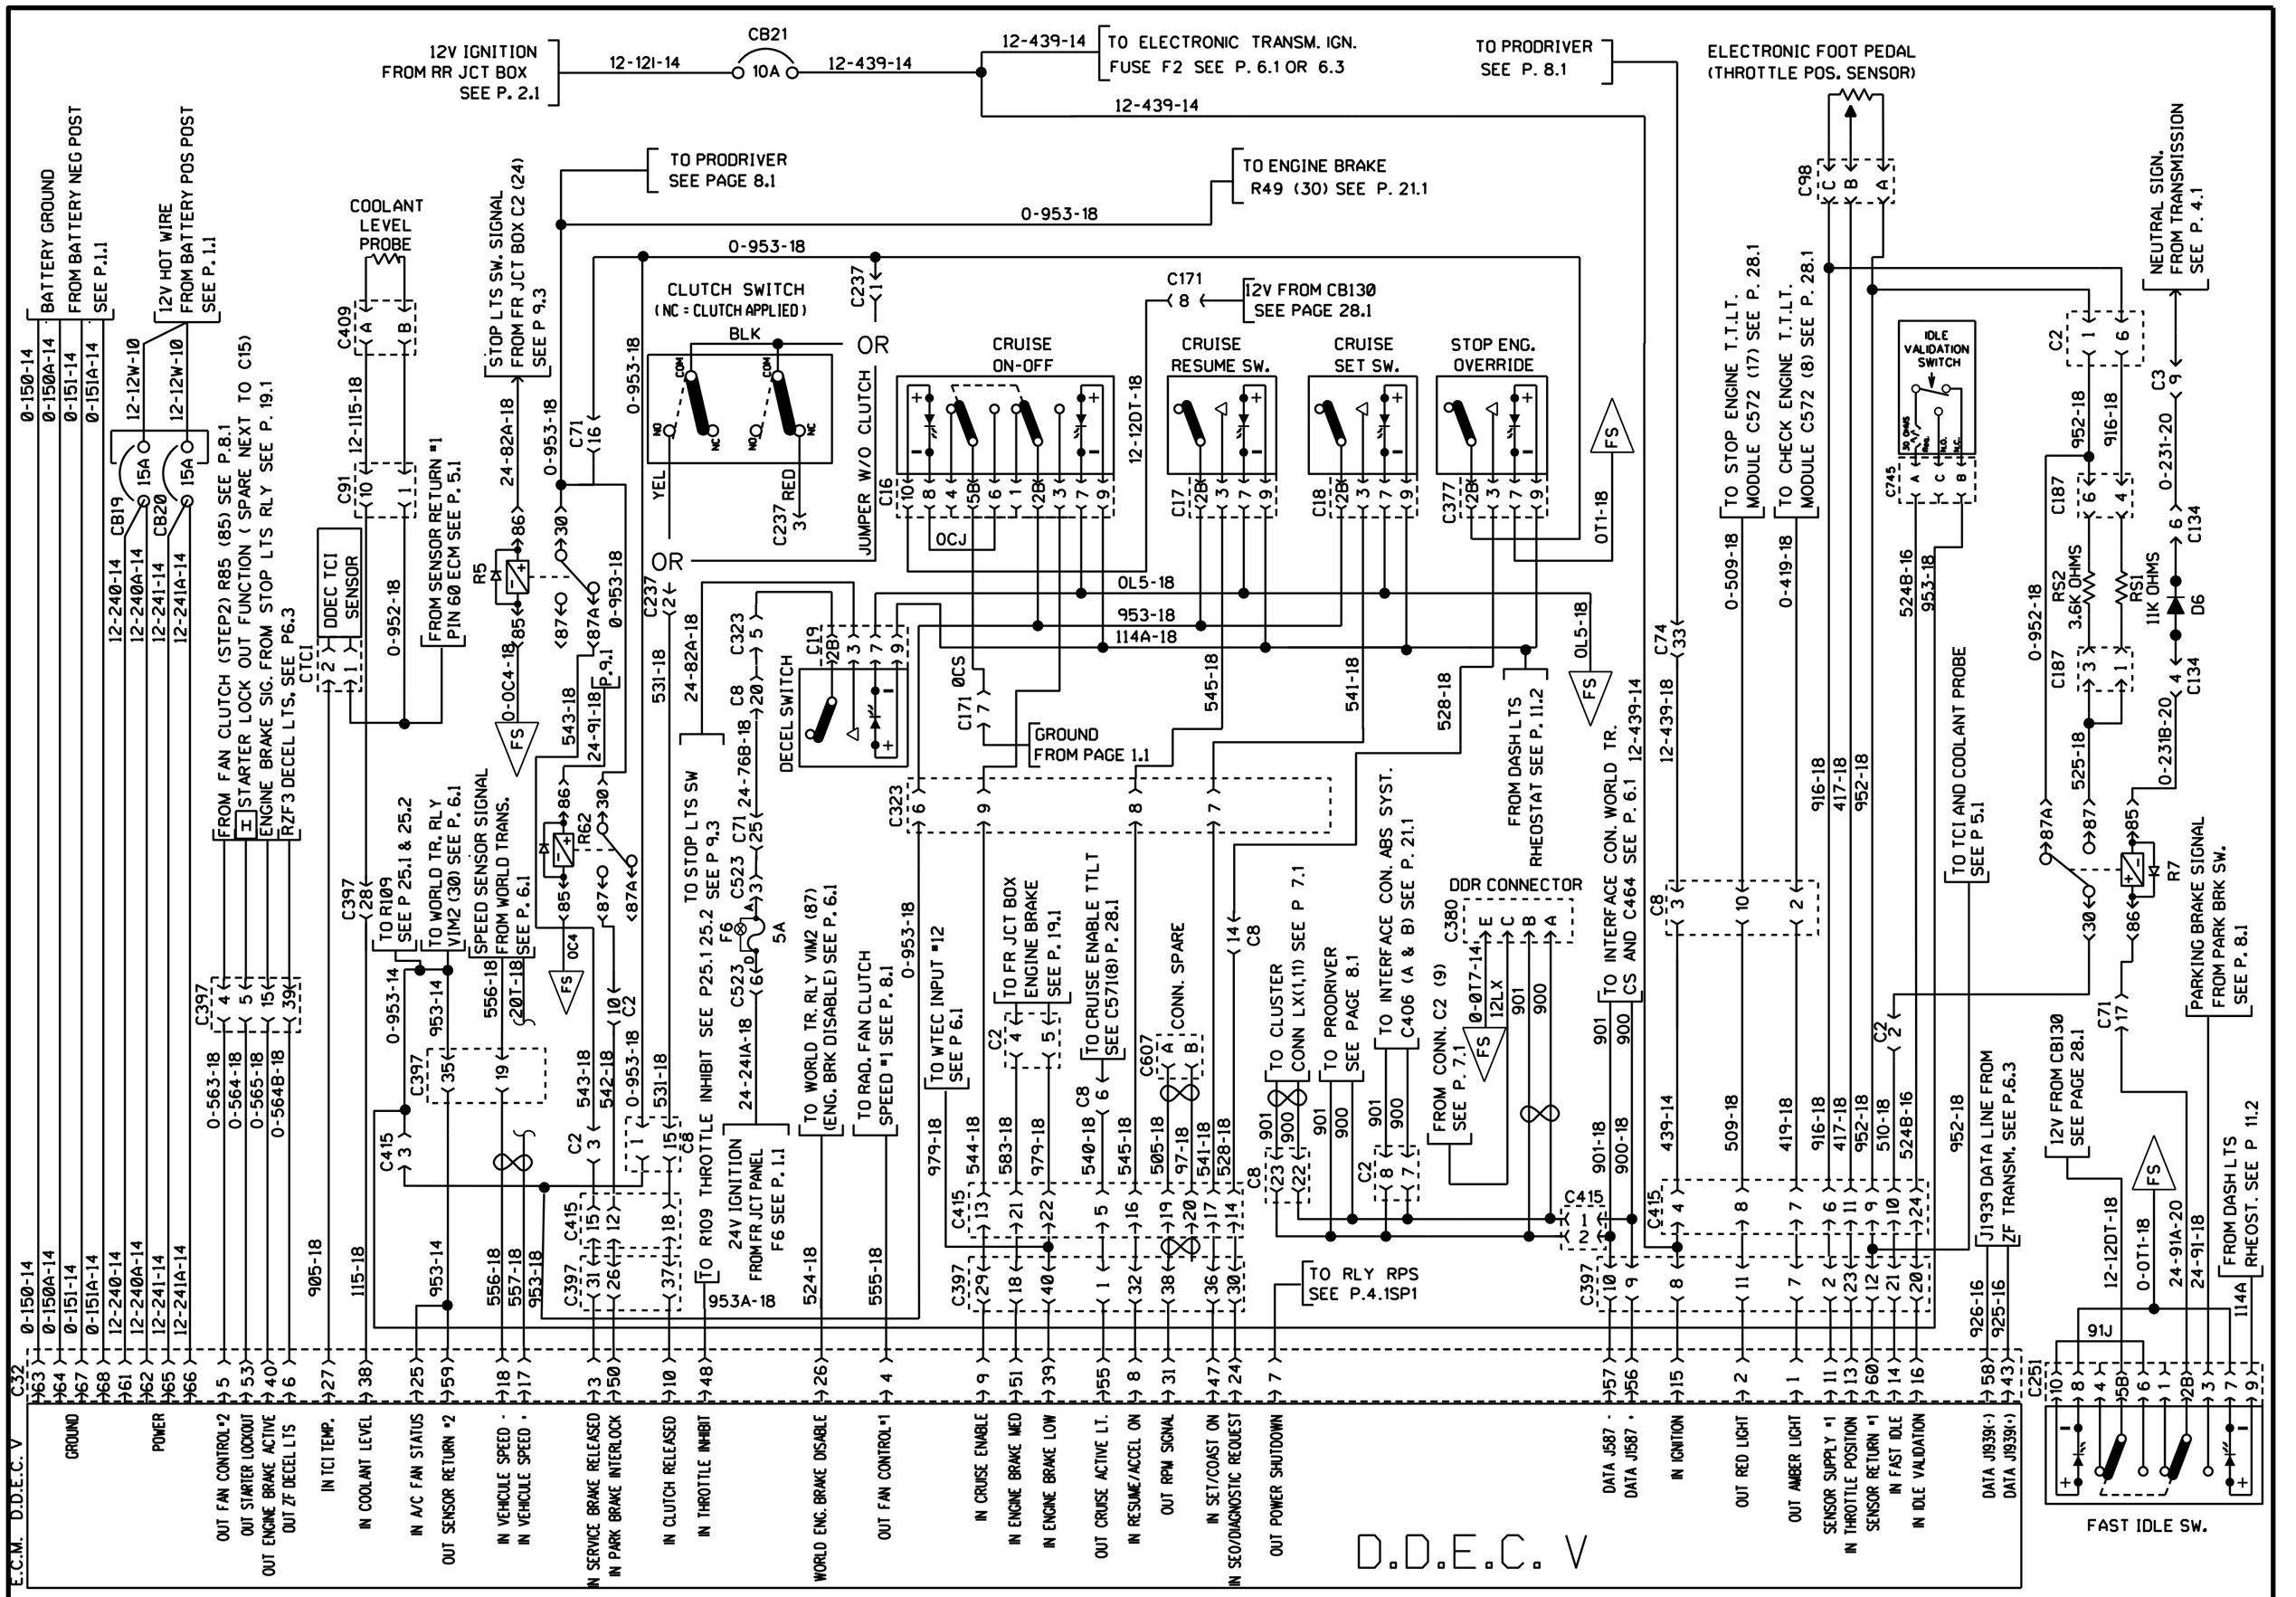

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 5.1sp1	REVISION 08

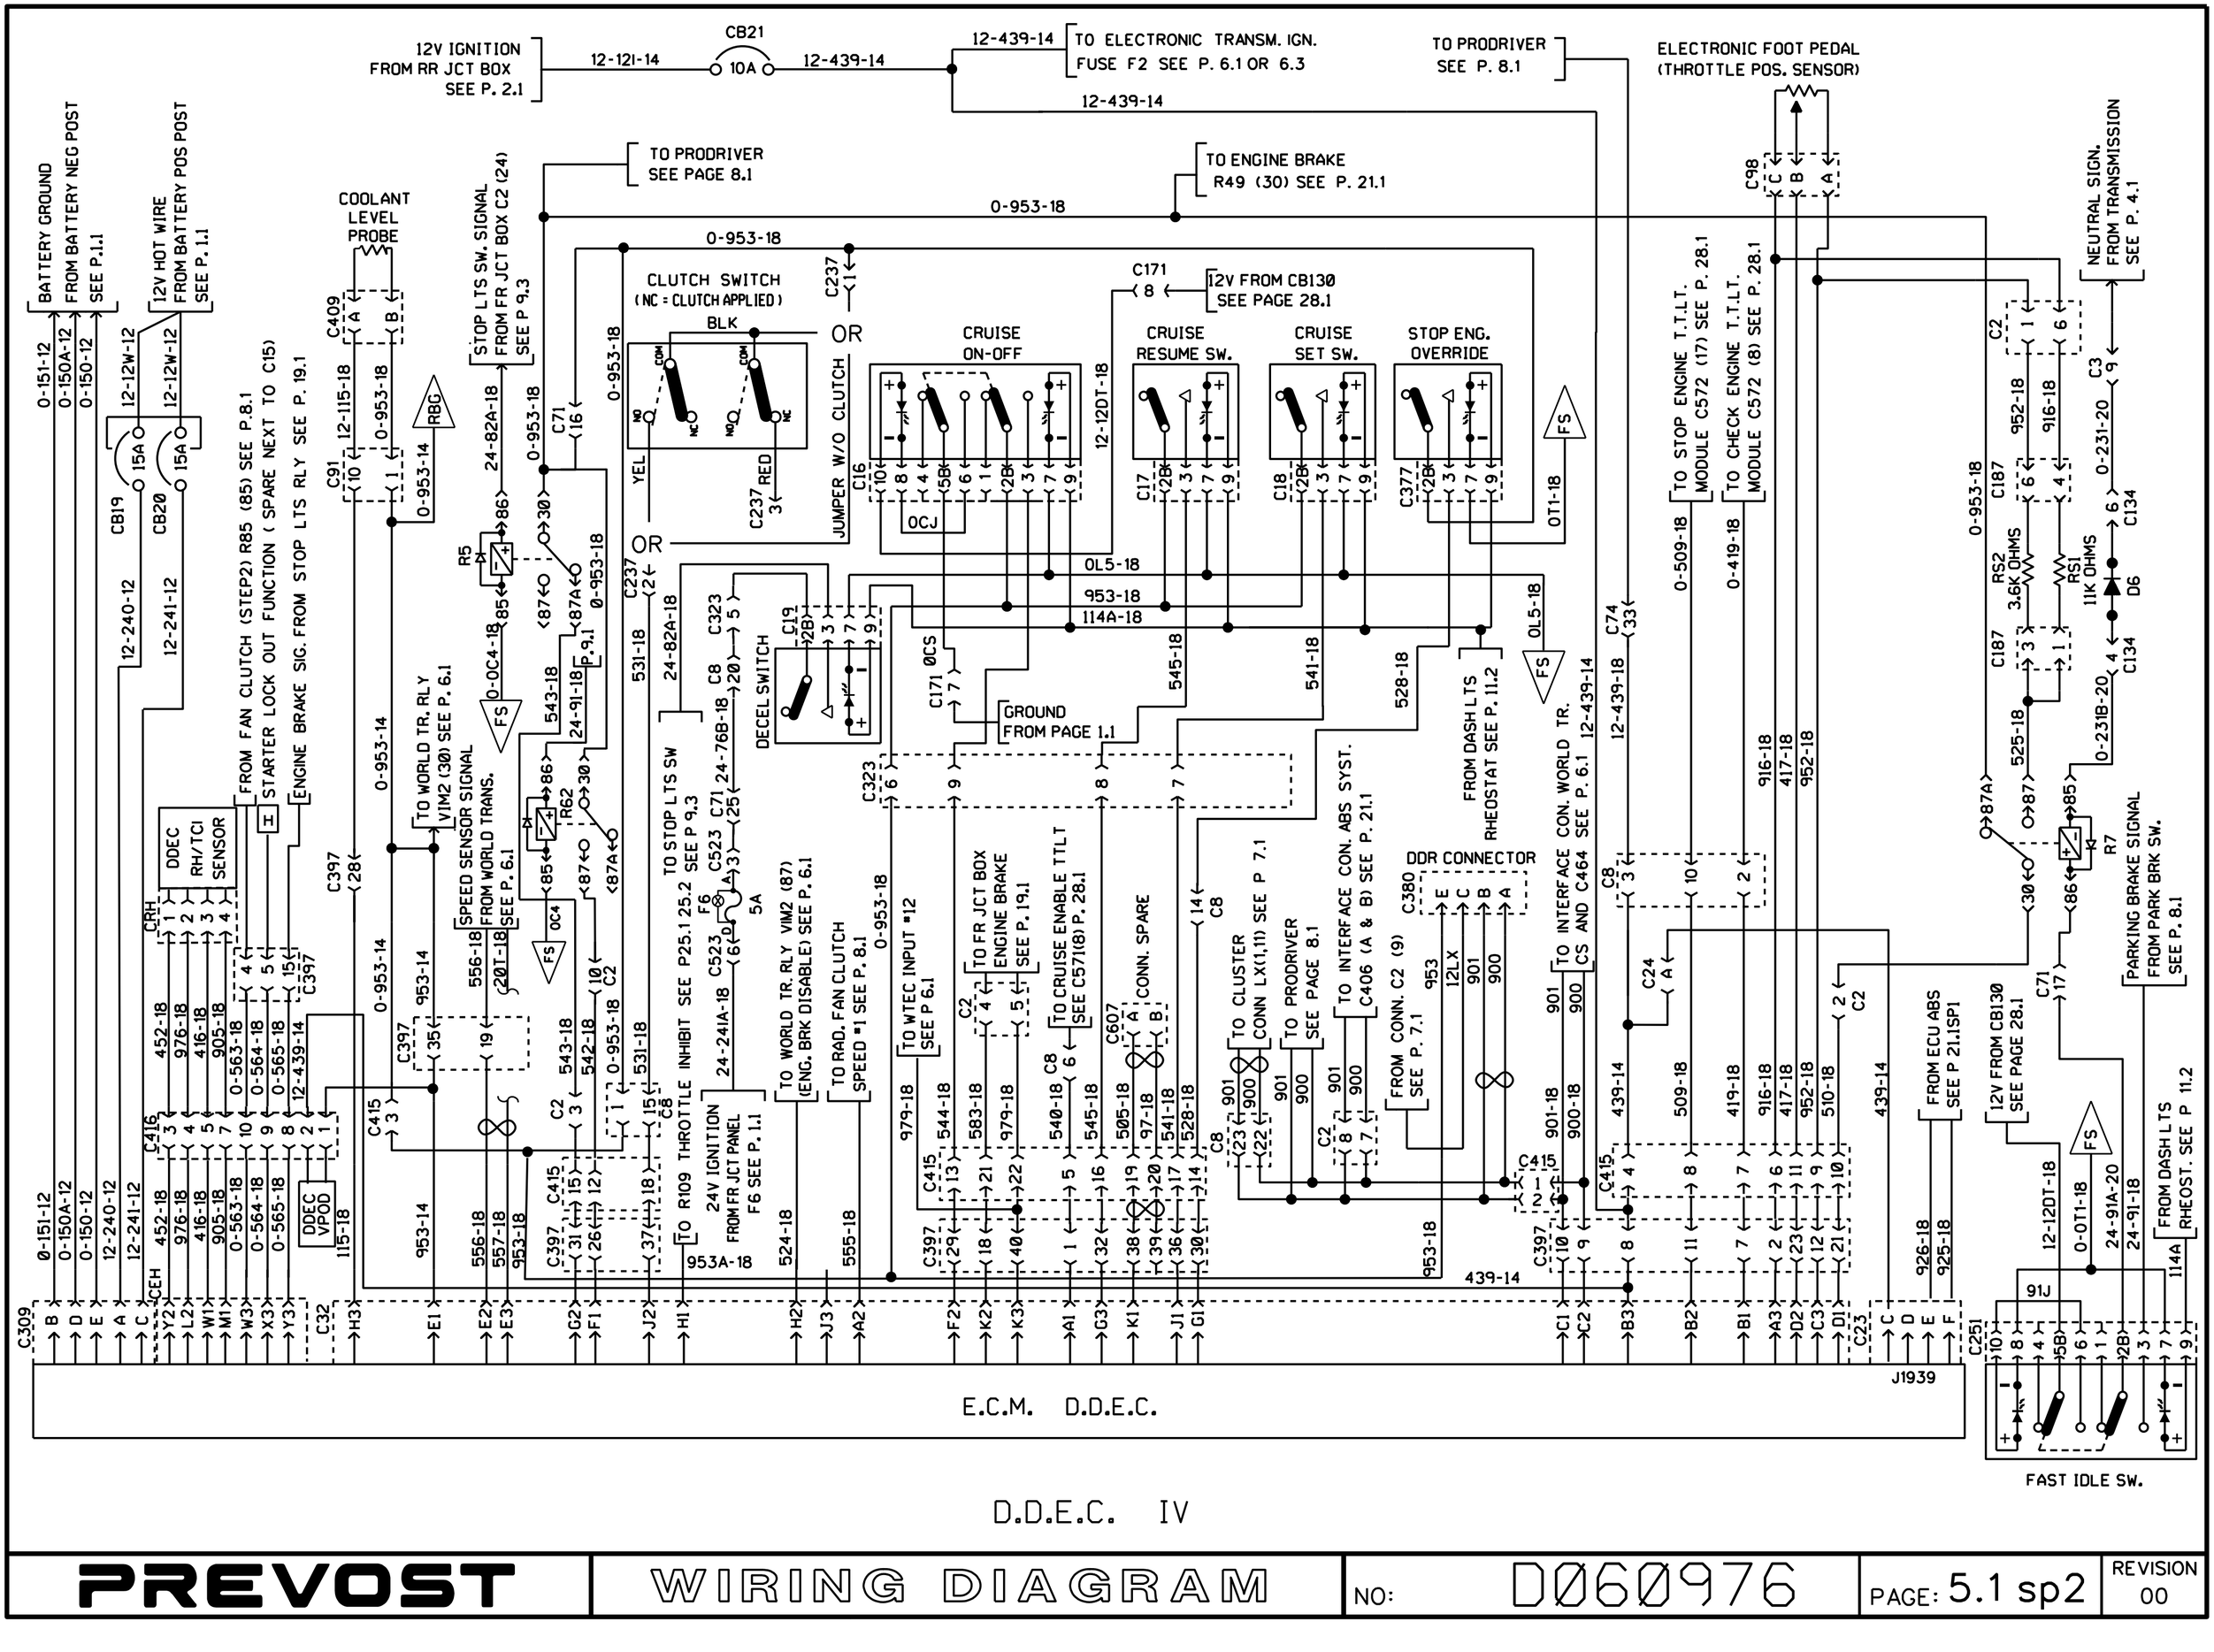
12V IGNITION FROM RR JCT BOX SEE P. 2.1
CB21
10A
12-121-14
12-439-14
TO ELECTRONIC TRANSM. IGN. FUSE F2 SEE P. 6.1 OR 6.3
TO PRODRIVER SEE P. 8.1
ELECTRONIC FOOT PEDAL (THROTTLE POS. SENSOR)
BATTERY GROUND
FROM BATTERY NEG POST
SEE P.1.1
12V HOT WIRE FROM BATTERY POS POST SEE P. 1.1
CB19
CB20
15A
12-12W-12
12-240-12
12-241-12
FROM FAN CLUTCH (STEP2) R85 (85) SEE P.8.1
STARTER LOCK OUT FUNCTION (SPARE NEXT TO C15)
ENGINE BRAKE SIG. FROM STOP LTS RLY SEE P. 19.1
COOLANT LEVEL PROBE
C409
C91
12-115-18
0-953-18
0-953-14
RBG
TO WORLD TR. RLY VIM2 (30) SEE P. 6.1
OR SIGNAL TRANS.
DDEC
RH/TCI SENSOR
STOP LTS SW. SIGNAL FROM FR JCT BOX C2 (24) SEE P 9.3
24-82A-18
0-953-18
C71
C237
CLUTCH SWITCH (NC = CLUTCH APPLIED)
BLK
YEL
RED
OR
JUMPER W/O CLUTCH
CRUISE ON-OFF
CRUISE RESUME SW.
CRUISE SET SW.
STOP ENG. OVERRIDE
C171
12V FROM CB130 SEE PAGE 28.1
12-12DT-18
OT1-18
FS
TO ENGINE BRAKE R49 (30) SEE P. 21.1
TO STOP ENGINE T.T.L.T. MODULE C572 (17) SEE P. 28.1
TO CHECK ENGINE T.T.L.T. MODULE C572 (8) SEE P. 28.1
0-509-18
0-419-18
C98
C2
C187
952-18
916-18
NEUTRAL SIGN. FROM TRANSMISSION SEE P. 4.1
C3
0-231-20
C134
D6
RS1
11K OHMS
RS2
3.6K OHMS
R5
R62
0C4
0C5
0C3
0C6
0C7
0C8
0L5-18
953-18
114A-18
545-18
541-18
528-18
543-18
24-91-18
531-18
24-76B-18
C323
C19
DECEL SWITCH
GROUND FROM PAGE 1.1
FROM DASH LTS RHEOSTAT SEE P. 11.2
TO WORLD TR. RLY VIM2 (87) (ENG. BRK DISABLE) SEE P. 6.1
TO RAD. FAN CLUTCH SPEED "1 SEE P. 8.1
TO WTEC INPUT "12 SEE P 6.1
TO FR JCT BOX ENGINE BRAKE SEE P. 19.1
TO CRUISE ENABLE TTLT SEE C571(8) P. 28.1
CONN. SPARE
TO CLUSTER CONN LX(1,11) SEE P 7.1
TO PRODRIVER SEE PAGE 8.1
TO INTERFACE CON. ABS SYST. C406 (A & B) SEE P. 21.1
FROM CONN. C2 (9) SEE P. 7.1
DDR CONNECTOR
C380
TO INTERFACE CON. WORLD TR. CS AND C464 SEE P. 6.1
12-439-14
12-439-18
C74
33
SPEED SENSOR SIGNAL FROM WORLD TRANS. SEE P. 6.1
556-18
20T-18
C397
953-14
0-953-14
C415
C416
452-18
976-18
416-18
905-18
0-563-18
0-564-18
0-565-18
12-439-14
DDEC VPOD
115-18
C32
C309
TO R109 THROTTLE INHIBIT SEE P25.1 25.2 SEE P 9.3
24V IGNITION FROM FR JCT PANEL F6 SEE P. 1.1
24-241A-18
C523
F6
5A
953A-18
524-18
555-18
557-18
542-18
544-18
583-18
979-18
540-18
545-18
505-18
97-18
541-18
528-18
C8
C2
C24
509-18
419-18
417-18
510-18
439-14
926-18
925-18
FROM ECU ABS SEE P 21.1SP1
12V FROM CB130 SEE PAGE 28.1
C71
17
PARKING BRAKE SIGNAL FROM PARK BRK SW. SEE P. 8.1
R7
FROM DASH LTS RHEOST. SEE P 11.2
12-12DT-18
0-0T1-18
24-91A-20
24-91-18
C251
91J
J1939
E.C.M. D.D.E.C.
FAST IDLE SW.

D.D.E.C. IV

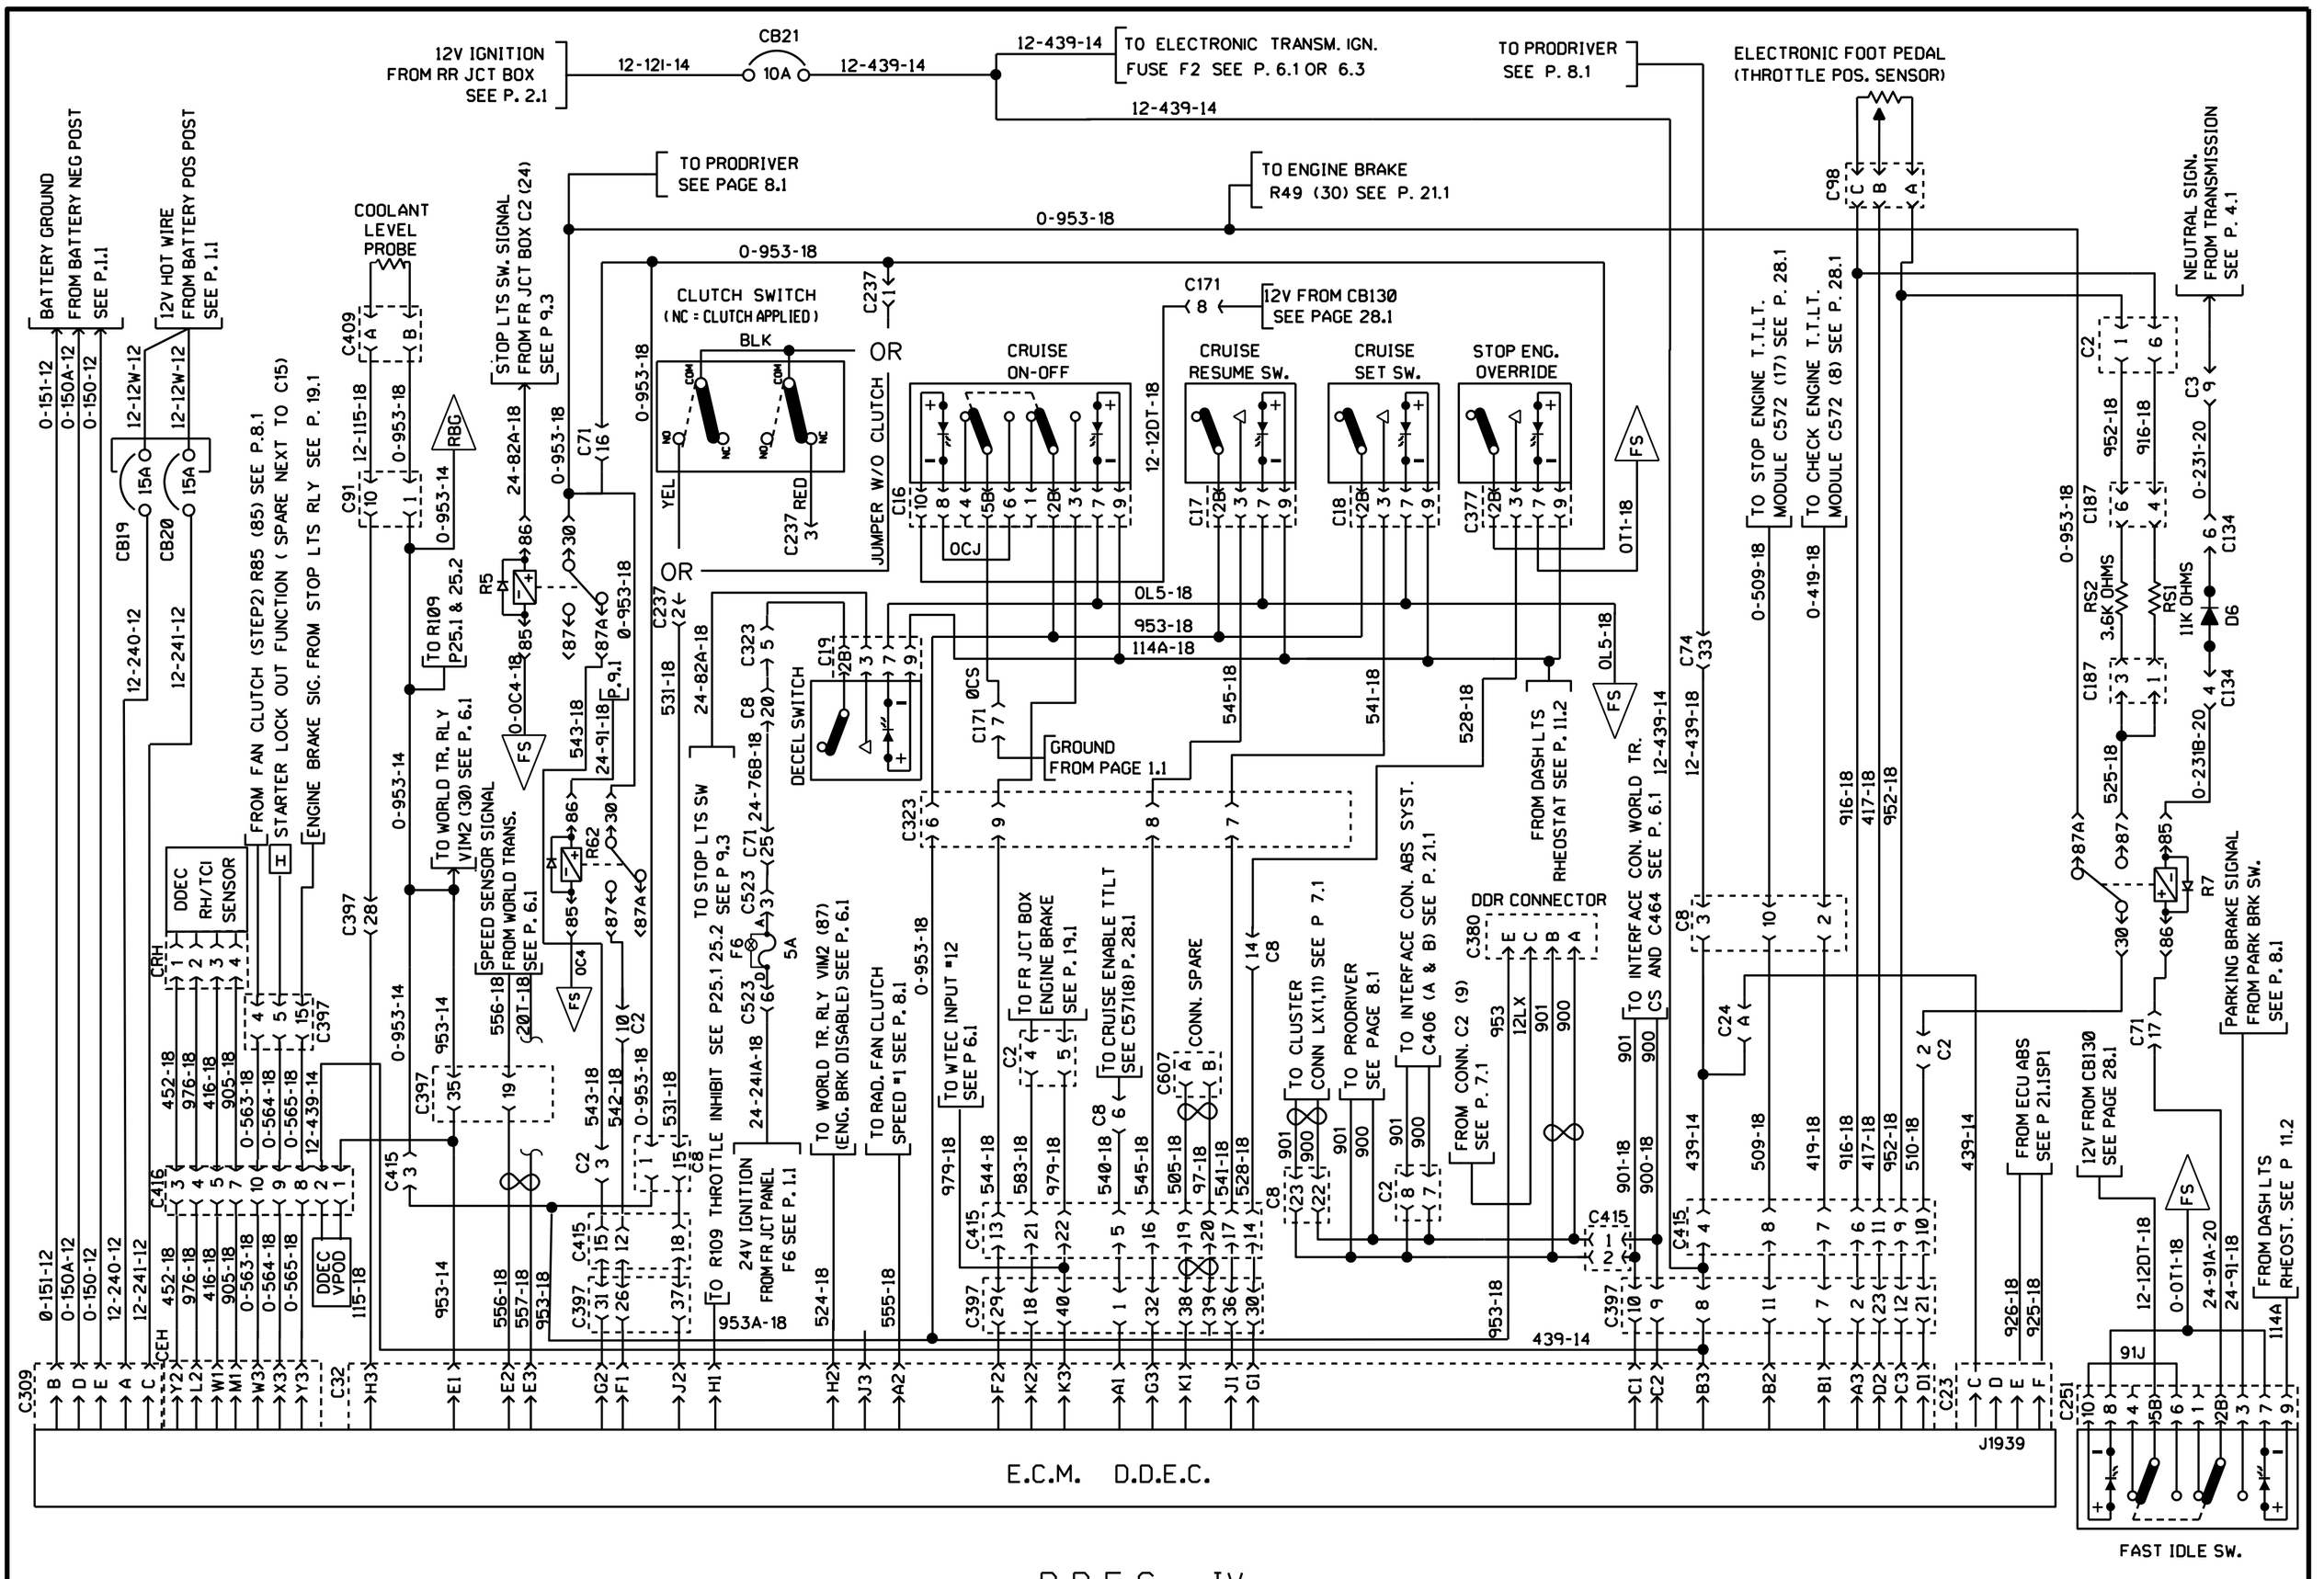

D.D.E.C. IV

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 5.1 sp2	REVISION 02

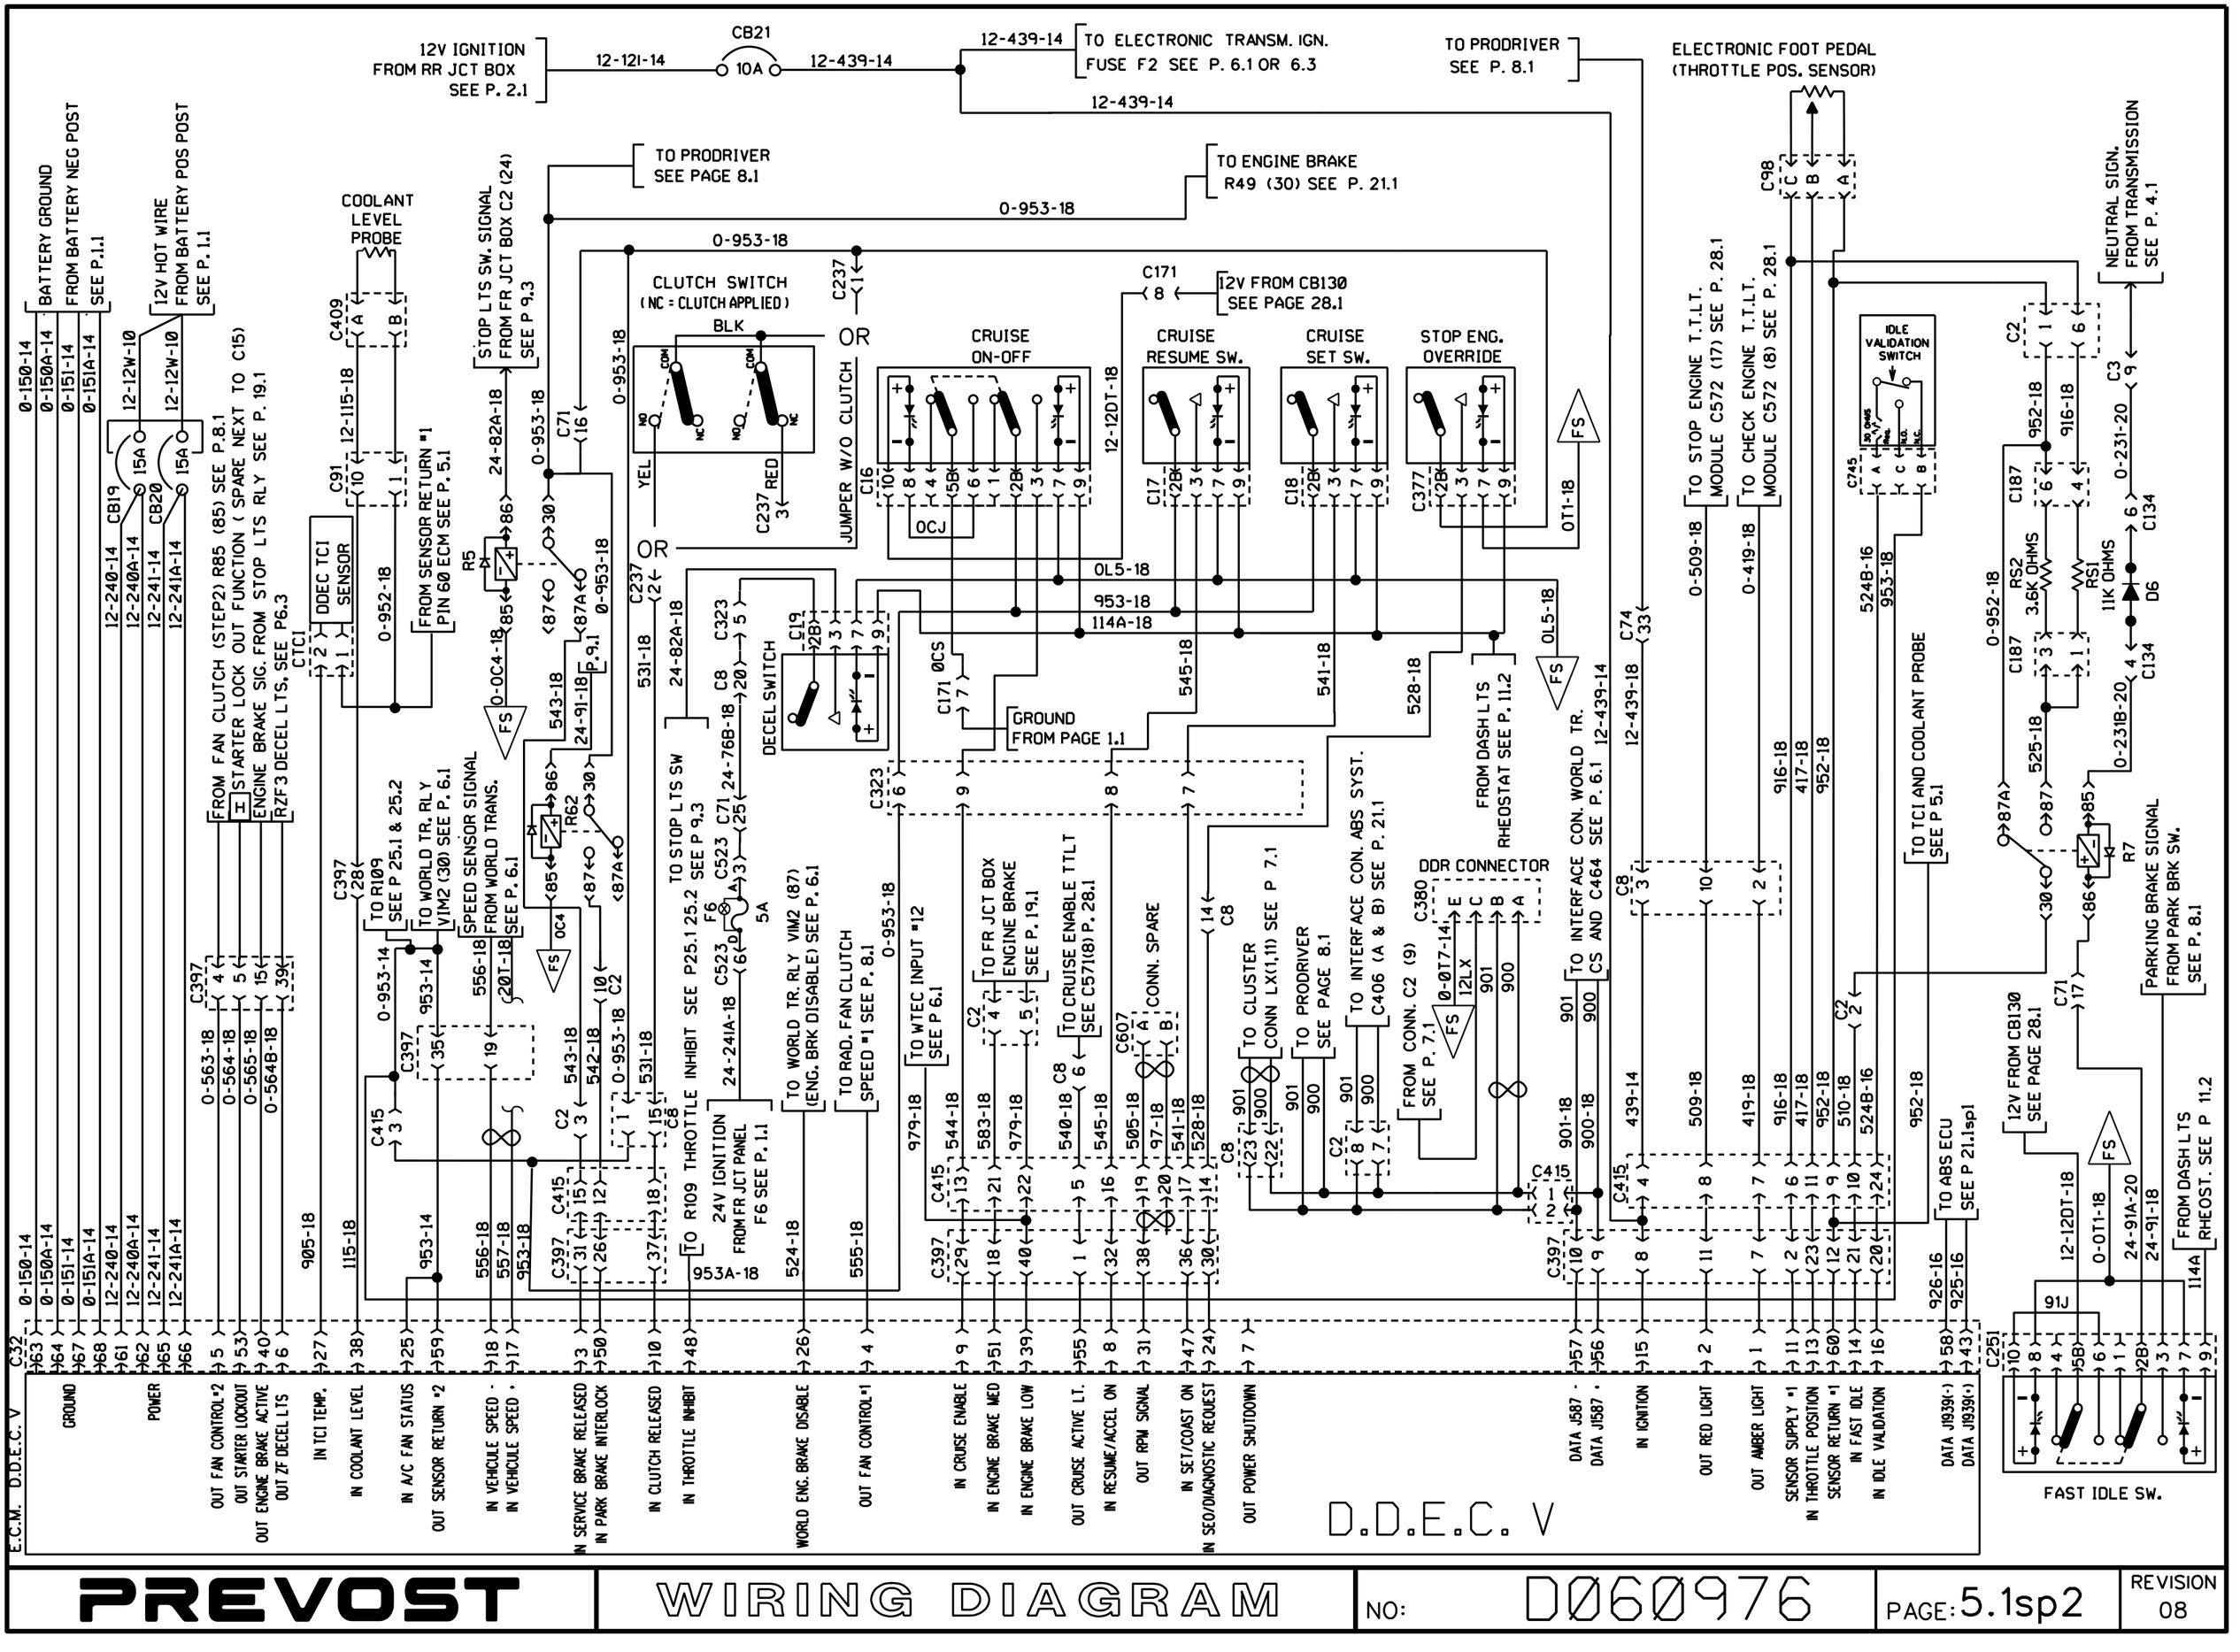
E.C.M. D.D.E.C. V
D.D.E.C. V
12V IGNITION FROM RR JCT BOX SEE P. 2.1
CB21
10A
TO ELECTRONIC TRANSM. IGN. FUSE F2 SEE P. 6.1 OR 6.3
TO PRODRIVER SEE P. 8.1
ELECTRONIC FOOT PEDAL (THROTTLE POS. SENSOR)
BATTERY GROUND
FROM BATTERY NEG POST SEE P.1.1
12V HOT WIRE FROM BATTERY POS POST SEE P. 1.1
COOLANT LEVEL PROBE
DDEC TCI SENSOR
FROM SENSOR RETURN #1 PIN 60 ECM SEE P. 5.1
STOP LTS SW. SIGNAL FROM FR JCT BOX C2 (24) SEE P 9.3
TO PRODRIVER SEE PAGE 8.1
TO ENGINE BRAKE R49 (30) SEE P. 21.1
CLUTCH SWITCH (NC = CLUTCH APPLIED)
JUMPER W/O CLUTCH
CRUISE ON-OFF
CRUISE RESUME SW.
CRUISE SET SW.
STOP ENG. OVERRIDE
12V FROM CB130 SEE PAGE 28.1
DECEL SWITCH
GROUND FROM PAGE 1.1
TO STOP ENGINE T.T.L.T. MODULE C572 (17) SEE P. 28.1
TO CHECK ENGINE T.T.L.T. MODULE C572 (8) SEE P. 28.1
IDLE VALIDATION SWITCH
NEUTRAL SIGN. FROM TRANSMISSION SEE P. 4.1
TO R109 SEE P 25.1 & 25.2
TO WORLD TR. RLY VIM2 (30) SEE P. 6.1
SPEED SENSOR SIGNAL FROM WORLD TRANS. SEE P. 6.1
TO STOP LTS SW SEE P 9.3
TO R109 THROTTLE INHIBIT SEE P25.1 25.2 SEE P 9.3
24V IGNITION FROM FR JCT PANEL F6 SEE P. 1.1
TO WORLD TR. RLY VIM2 (87) (ENG. BRK DISABLE) SEE P. 6.1
TO RAD. FAN CLUTCH SPEED #1 SEE P. 8.1
TO WTEC INPUT #12 SEE P 6.1
TO FR JCT BOX ENGINE BRAKE SEE P. 19.1
TO CRUISE ENABLE TTLT SEE C57(18) P. 28.1
CONN. SPARE
TO CLUSTER CONN LX(1,11) SEE P 7.1
TO PRODRIVER SEE PAGE 8.1
TO INTERFACE CON. ABS SYST. C406 (A & B) SEE P. 21.1
DDR CONNECTOR
FROM CONN. C2 (9) SEE P. 7.1
TO INTERFACE CON. WORLD TR. CS AND C464 SEE P. 6.1
FROM DASH LTS RHEOSTAT SEE P. 11.2
TO TCI AND COOLANT PROBE SEE P 5.1
TO ABS ECU SEE P 21.1spl
PARKING BRAKE SIGNAL FROM PARK BRK SW. SEE P. 8.1
12V FROM CB130 SEE PAGE 28.1
FROM DASH LTS RHEOST. SEE P 11.2
FAST IDLE SW.
PREVOST
WIRING DIAGRAM
NO: D060976
PAGE: 5.1sp2
REVISION 08

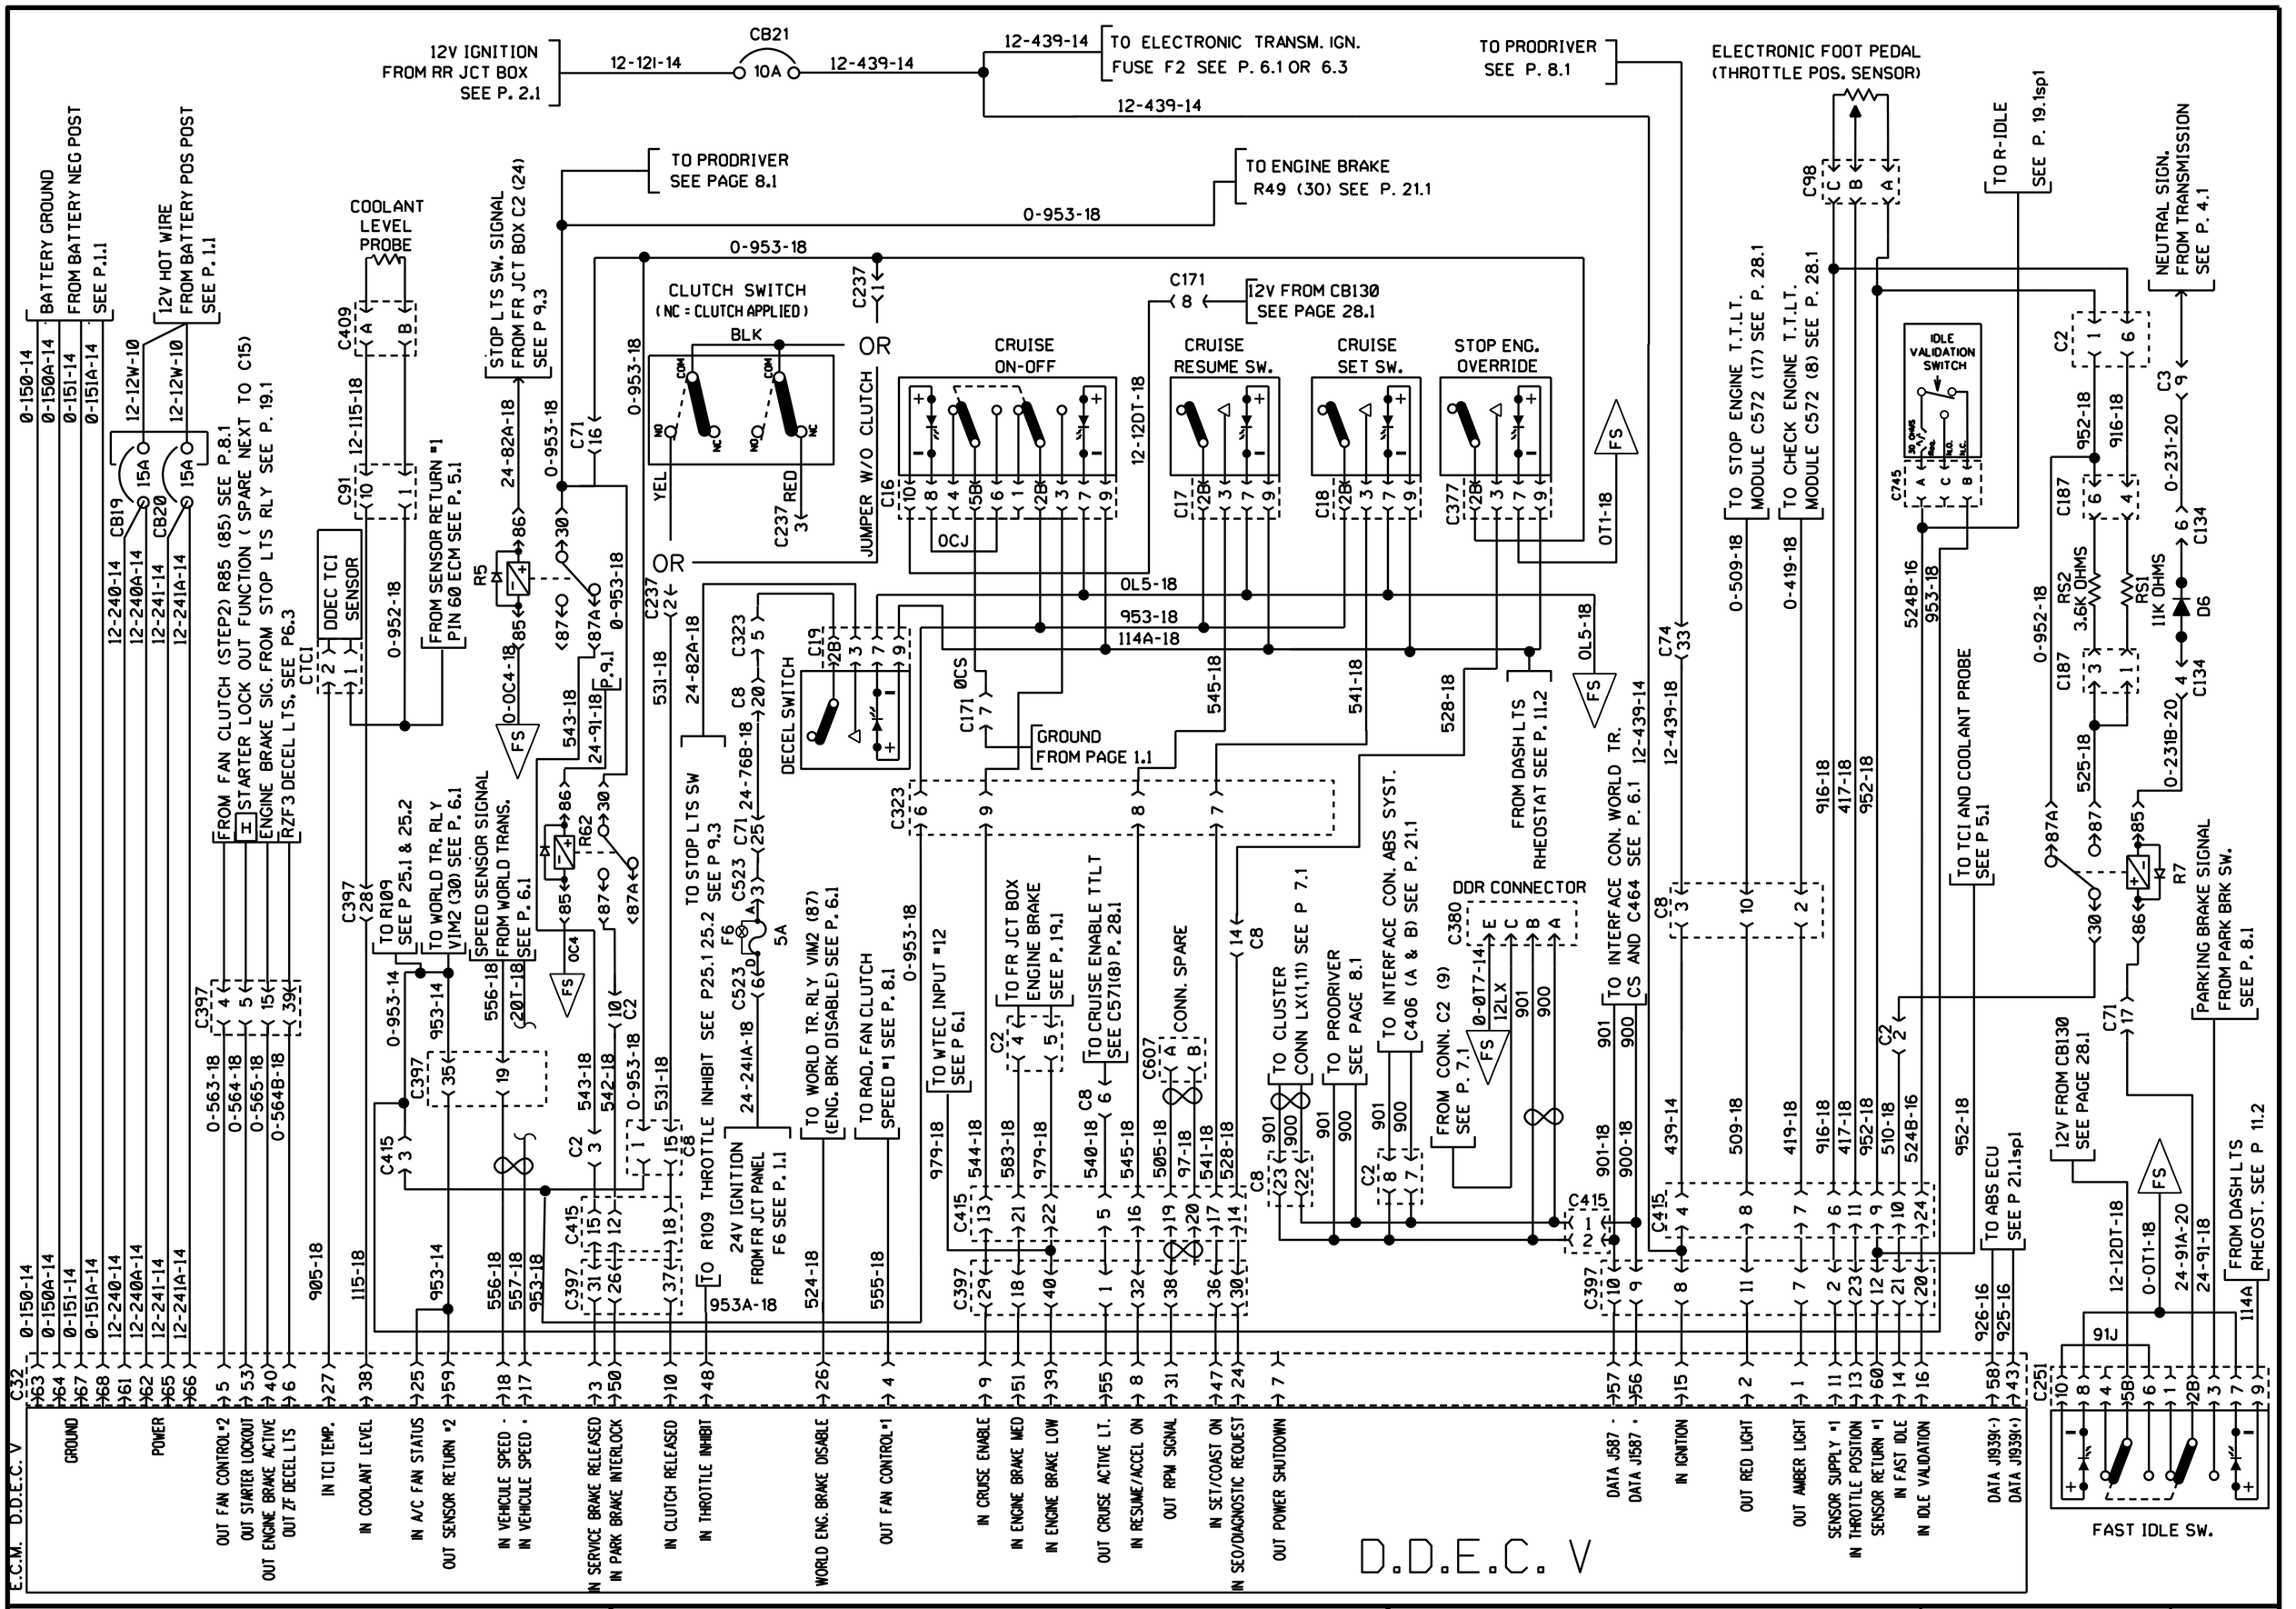

PREVOST | WIRING DIAGRAM | NO: D060976 | PAGE: 5.1sp3 | REVISION 15

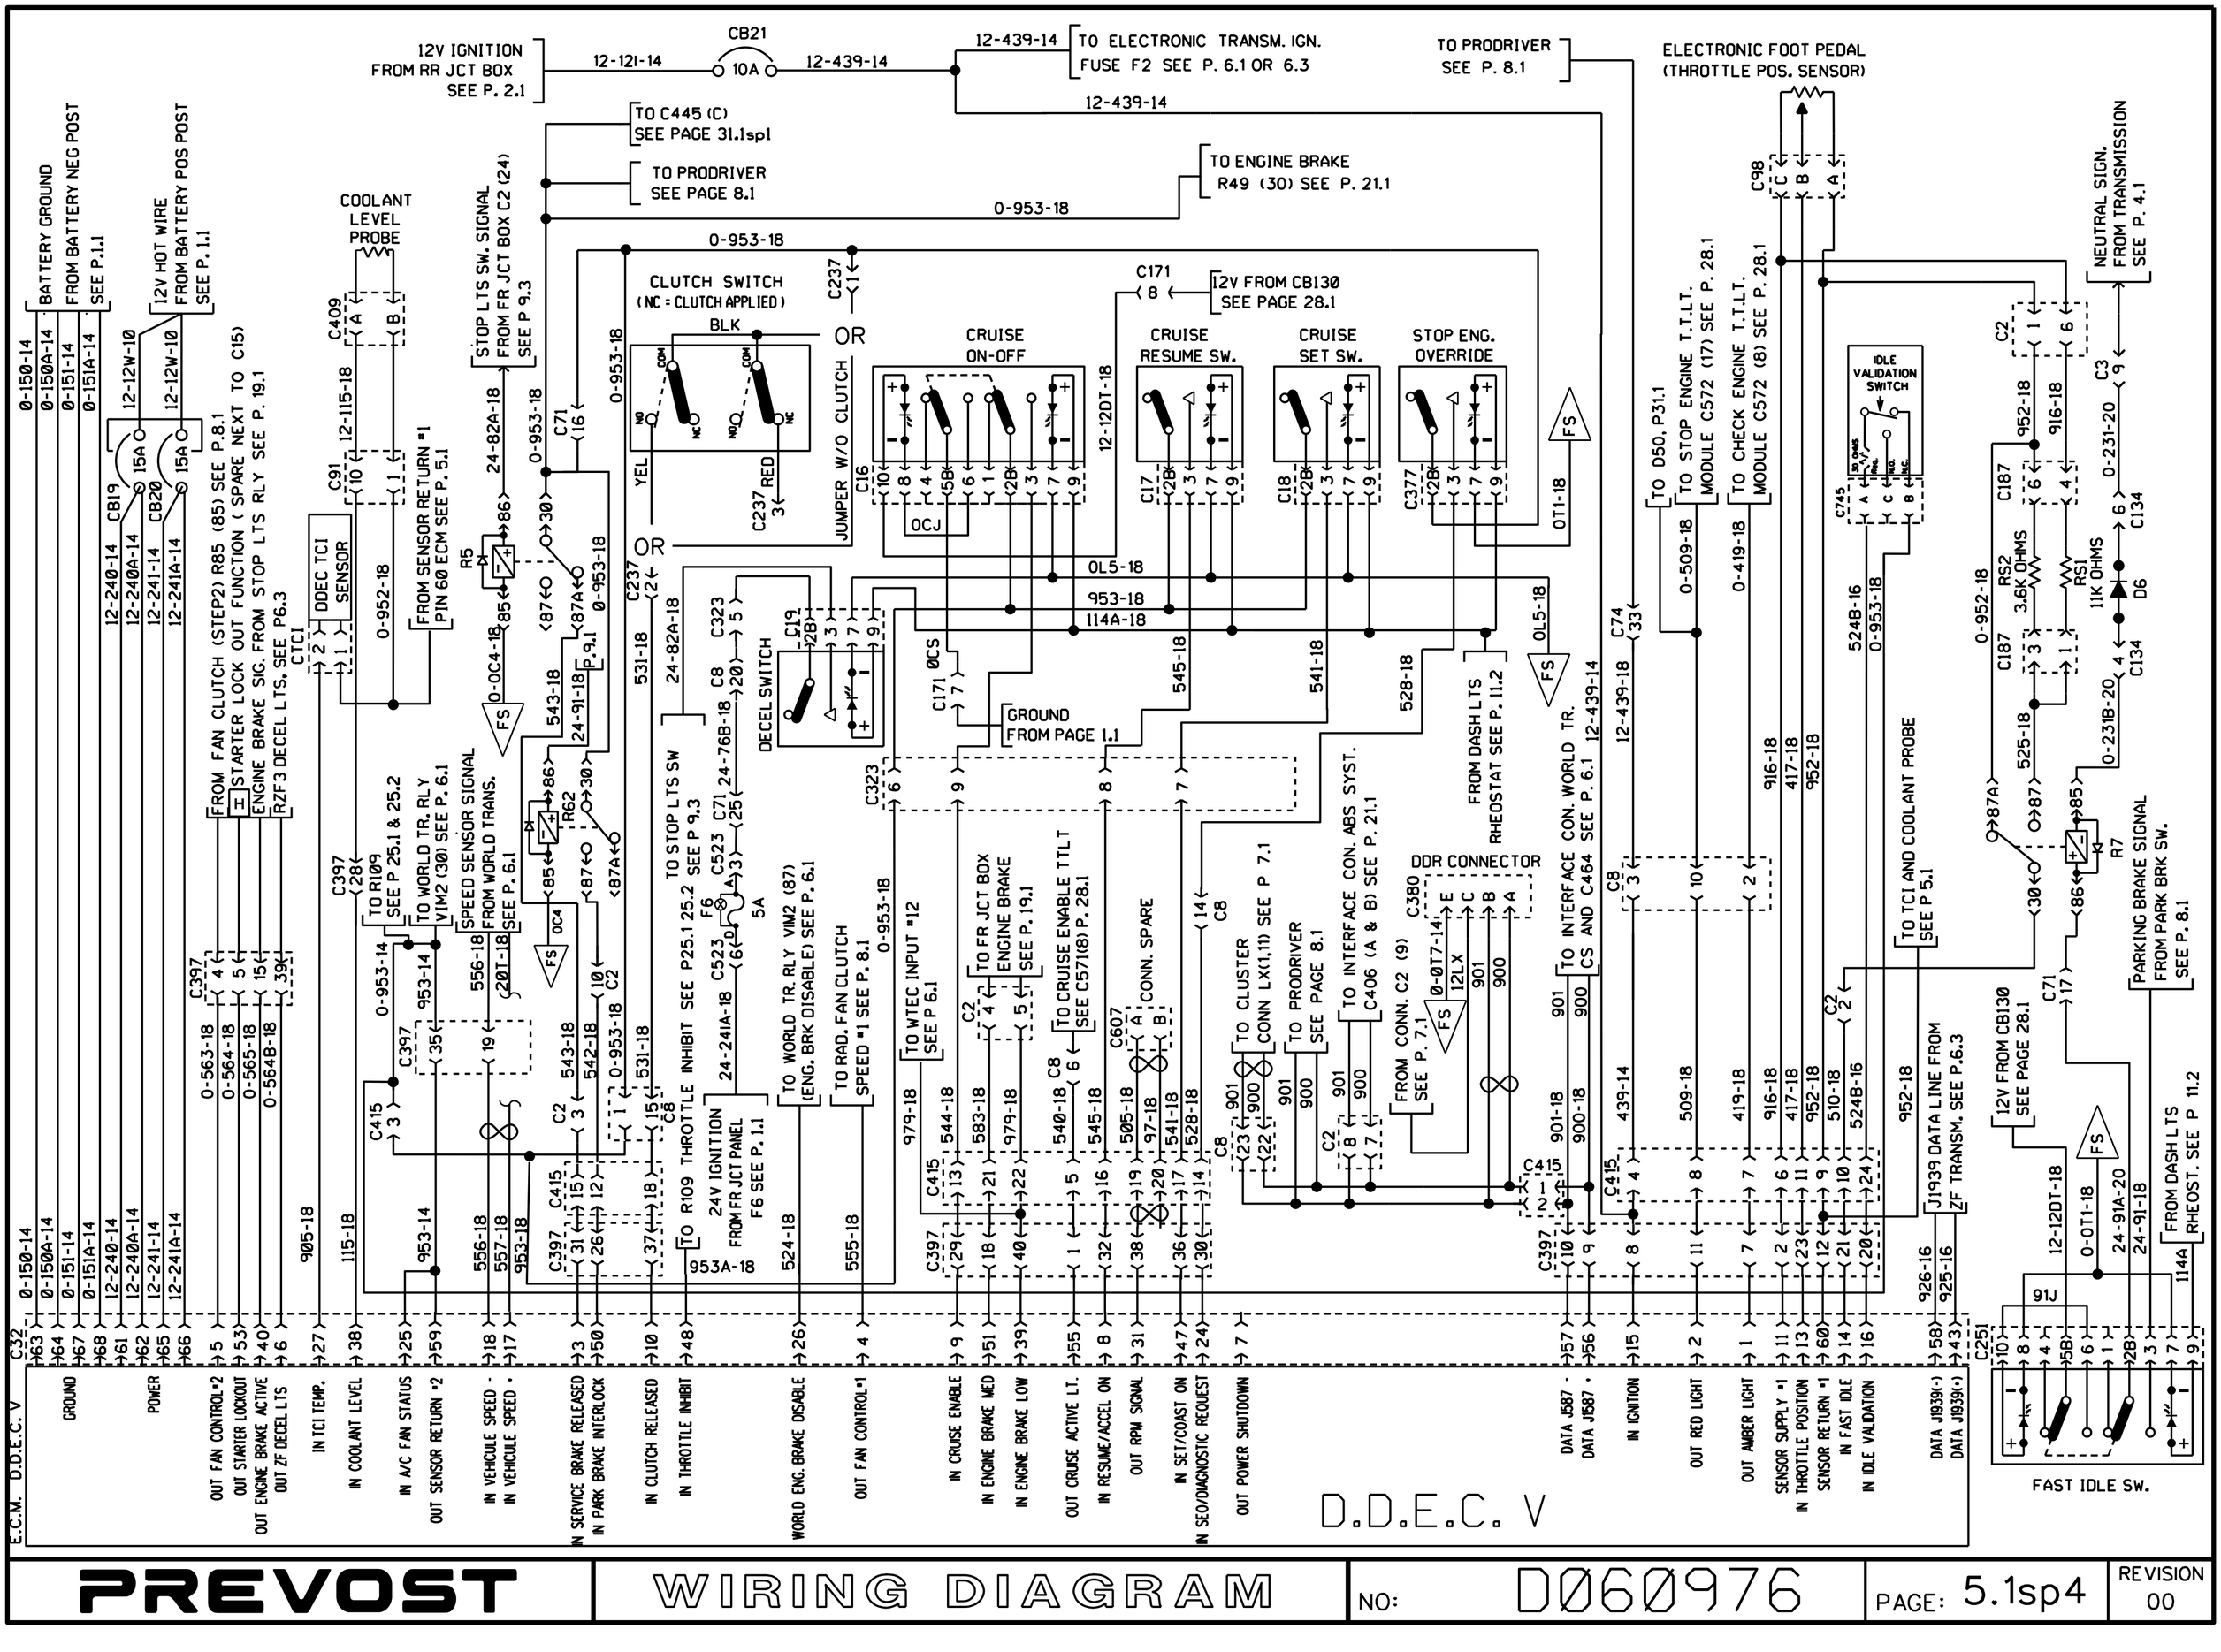

PREVOST | WIRING DIAGRAM | NO: D060976 | PAGE: 5.1sp4 | REVISION 00

PREVOST

WIRING DIAGRAM

WORLD TRANSMISSION E.C.U.

NO: D060976

PAGE: 6.1

REVISION 00

CV
GRAY

NEUTRAL → 6
REVERSE → 4
VEH. SPEED → 20
OUT (1) → 5
OUT (2) → 3
OUT (3) → 22
OUT (4) → 18
IGNITION → 26
BAT. GND. → 17
BAT. GND. → 32
BAT. PWR → 1
BAT. PWR → 16
TEMP. SIGN → 19
RETARDER IN → 29
ABS IN → 27
SIG. GND → 31
(WIRE 155) INPUT - → 11

123-18
113W-18
16T-18
167-18
132-18
112-18
125-18
146A-18
143W-18
143W-18
136A-18
136A-18
105W-18
137-18
154-18
161B-18
161B-18

VIMN
VIMR
VIM1
VIM2
VIM3
VIM4
86 85 30 87 87A

0-0W-18 → RS
113W-18 → TO ZF TRANSM. SEE P 6.3
214-18
RS20 1 KΩ
556-18
20T-18
167-18 → ZF TRANSM. SEE P 6.3
5NO
5NC ← (5 MPH SIGNAL)
24-126-18
24-85B-16
0-524-18
0-953-18 → BATTERY GROUND FROM RR JCT BOX SEE P. 5.1
ZF TRANSM. SEE P 6.3
125W-18
12-439-16
125W-18
0-143W-20
0-0W-18
20 GA
12-146A-16 C530 2 F2 10A C530 7
12-439-16
0-143W-12
0-143W-12 → RBG
12-136A-12 C530 1 F1 10A C530 8
12-136W-12
12-136W-12 CB24 25A 12-136V-10
105W-18
137-18
TO RETARDER SYSTEM SEE P. 19.1 C20(5)

231-18 → TO NEUTRAL SENSOR ZF TRANSM. P 6.3
231-18 → TO NEUTRAL SIGNAL SEE P. 4.1
214-18 → TO BACK UP RLY RR JCT BOX R9 (85) SEE P 9.3
RS
TO ZF STEERING CTR SEE P. 15.1
556-18 → TO DDEC VSS SEE P. 5.1
20T-18
C20 2 1
C608 B A
20T-18
16T-18
CONNECTOR SPARE FRONT SERV. COMP.
24-126-18 → TO WCL SYS R 97 SEE P 25.1
24-126-18 → TO KNEELING SYS SEE P18.1
24-85B-16 → 24VI FROM RR JCT BOX CB 18 SEE P 4.1
C397 25
0-524-18 → ENG. BRK DISABLE FROM ECM DDEC C32 (H2) SEE P. 5.1
125W-18 → TO RETARDER SYS SEE P. 19.1
12-439-16 → TO ENG. BRAKE SYS R87 (30) SEE P. 19.1
12-439-16 → FROM 12V IGNITION CB 21 SEE P. 5.1
12-136V-10 → FROM 12V BATTERY POST SEE P. 1.1
154-18 → TO ABS SYSTEM SEE P. 21.1
161B-18 → TO RETARDER SYSTEM SEE P. 19.1

CS
BLACK

DATA + → 1
DATA - → 17
INPUT 4 → 11
INPUT 9 → 28
ENGINE BRAKE & PRE-SELECT #2 → 26
OUTPUT 7 → 18
DIAGNOSTIC → 2
VEH. SPEED → 30
TRANS. TTLT → 31
INPUT 6 → 27
BATT_GND → 32
IGN. SENSE → 4
ANALOG GND → 19
RET MOD REQ → 20
GEN PURP OUT 6 → 15
P.S.S. DATA BIT 1 → 5
P.S.S. DATA BIT 2 → 6
P.S.S. DATA BIT 4 → 7
SEL DATA BIT 8 → 8
SEL DATA PAR → 9
SELEC. DISPLAY → 14
SHIFT SEL MODE IN → 10
SENSOR PWR → 3
BATT. PWR → 16

900-18
901-18
12-12CE-18
119-18
979-18
0-115W-18
C21 1
163-18
C21 2
143A-18
C21 3
135A-18
C21 4
164-18
C21 5
176-18
C21 6
170-18
C21 7
171-18
C21 8
172-18
C21 9
173-18
C21 10
174-18
C21 11
180A-18
175A-18
124A-18
136AA-18
C21 15

900-18
901-18
TO ZF TRANSM. SEE P 6.3 DDEC DATA LINK
900-18
901-18
DDEC DATA LINK FROM ECM C32 (C1 & C2) SEE P. 5.1
12-12CE-18 → FROM 12V HOT WIRE RR JCT BOX FUSE F62 SEE P. 2.1
119-18 → TO ENGINE BRAKE SYS. R87(87) SEE P. 19.1
FROM ECM DDEC SEE P 5.1
0-115W-18 → FROM ZF TRANSM. CHECK TRANSM. SEE P 6.3
C5 6 → 0-115W-18 → TO CHECK TRANS. T.T.LT. MODULE C571 (11) SEE P. 28.1
163-18 → FROM RETARDER SYS. C3(1) SEE P. 19.1

C467 RESISTOR MODULE
A B C
3 2 1 5 6 7 4 8
174 175 176 173 172 171 124
HAND LEVER
POS. 1=15%
POS. 2=30%
POS. 3=45%
POS. 4=60%
POS. 5=85%
POS. 6=100%
OFF

C464 BATTERY COMP. DIAGNOSTIC TOOL CONNECTOR
E C B A
0-0AA-18
RS

C466 RESISTOR MODULE
A B C
135A-18
164-18
124A-18
BLU WHT 2 PSI. BRK PRES. SW.
ORA WHT 4 PSI. BRK PRES. SW.
PUR/WHT WHT 6 PSI. BRK. PRES. SW.

C465 PRIMARY SHIFTER SELECTOR
P L A B C D E S M N R T U V

12-114A-18
FROM DIMMER SW. SEE P. 11.2
FS
0-0T3-18

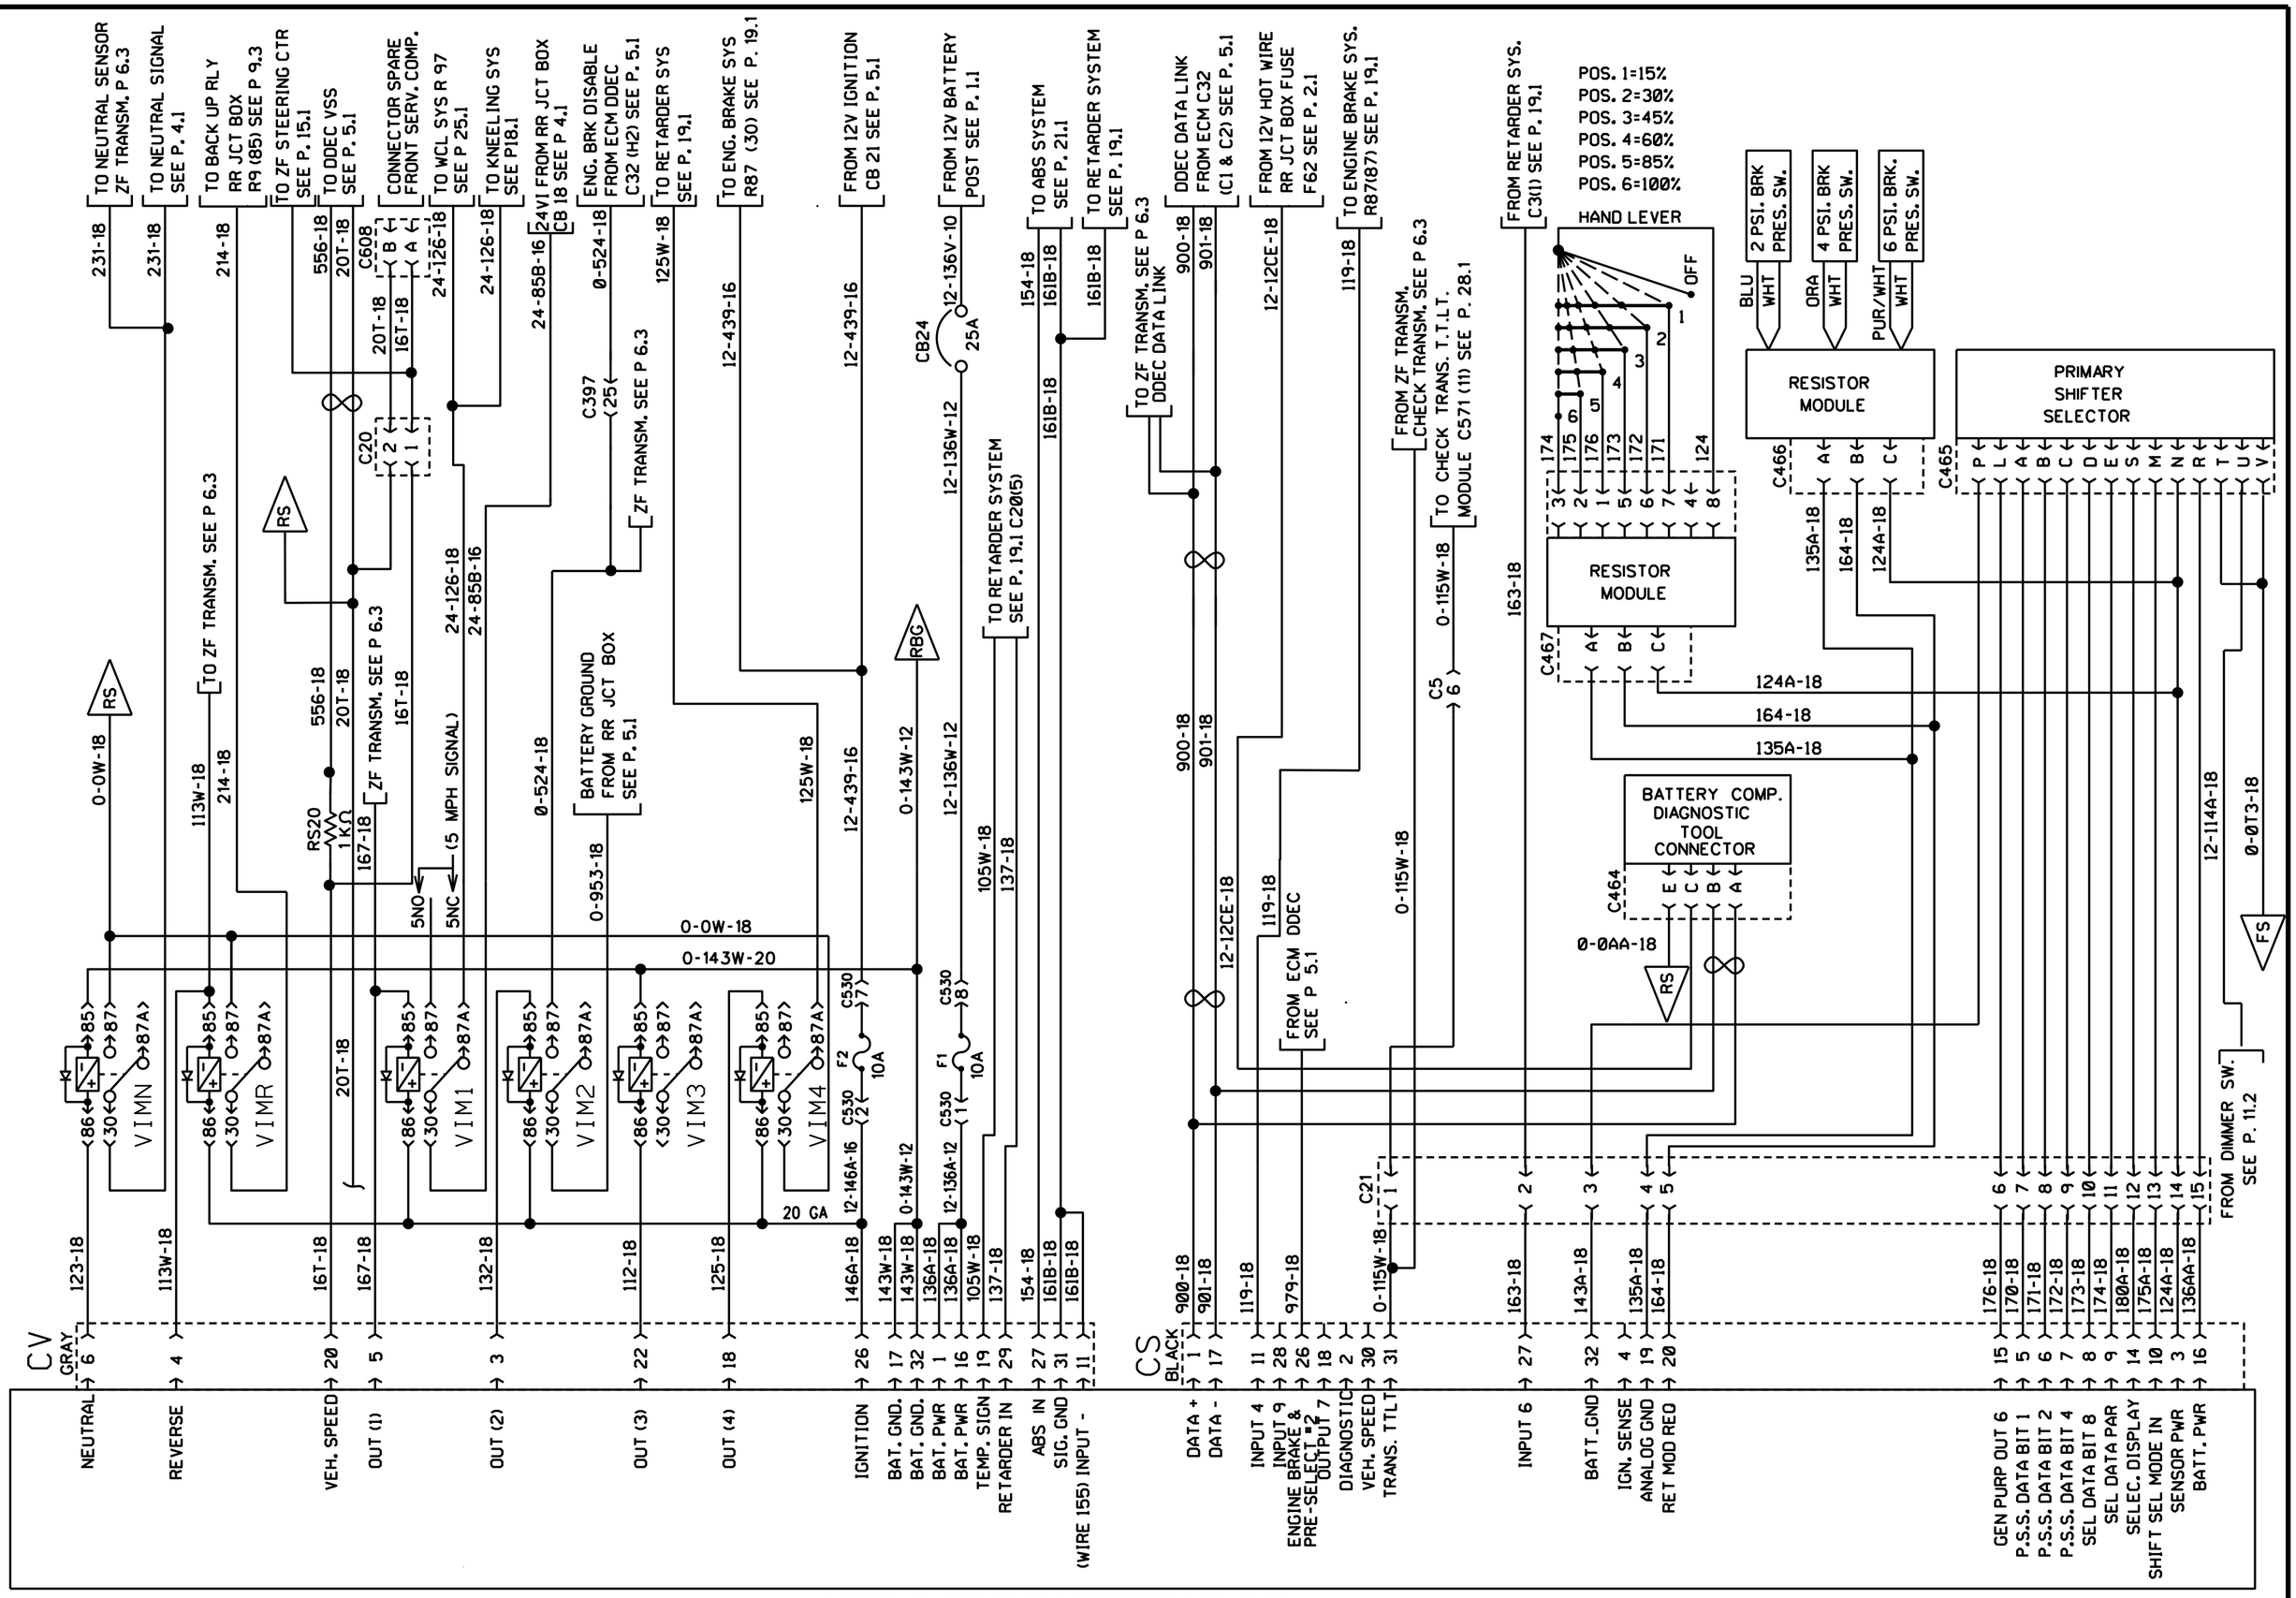

WORLD TRANSMISSION E.C.U.

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 6.1	REVISION 04

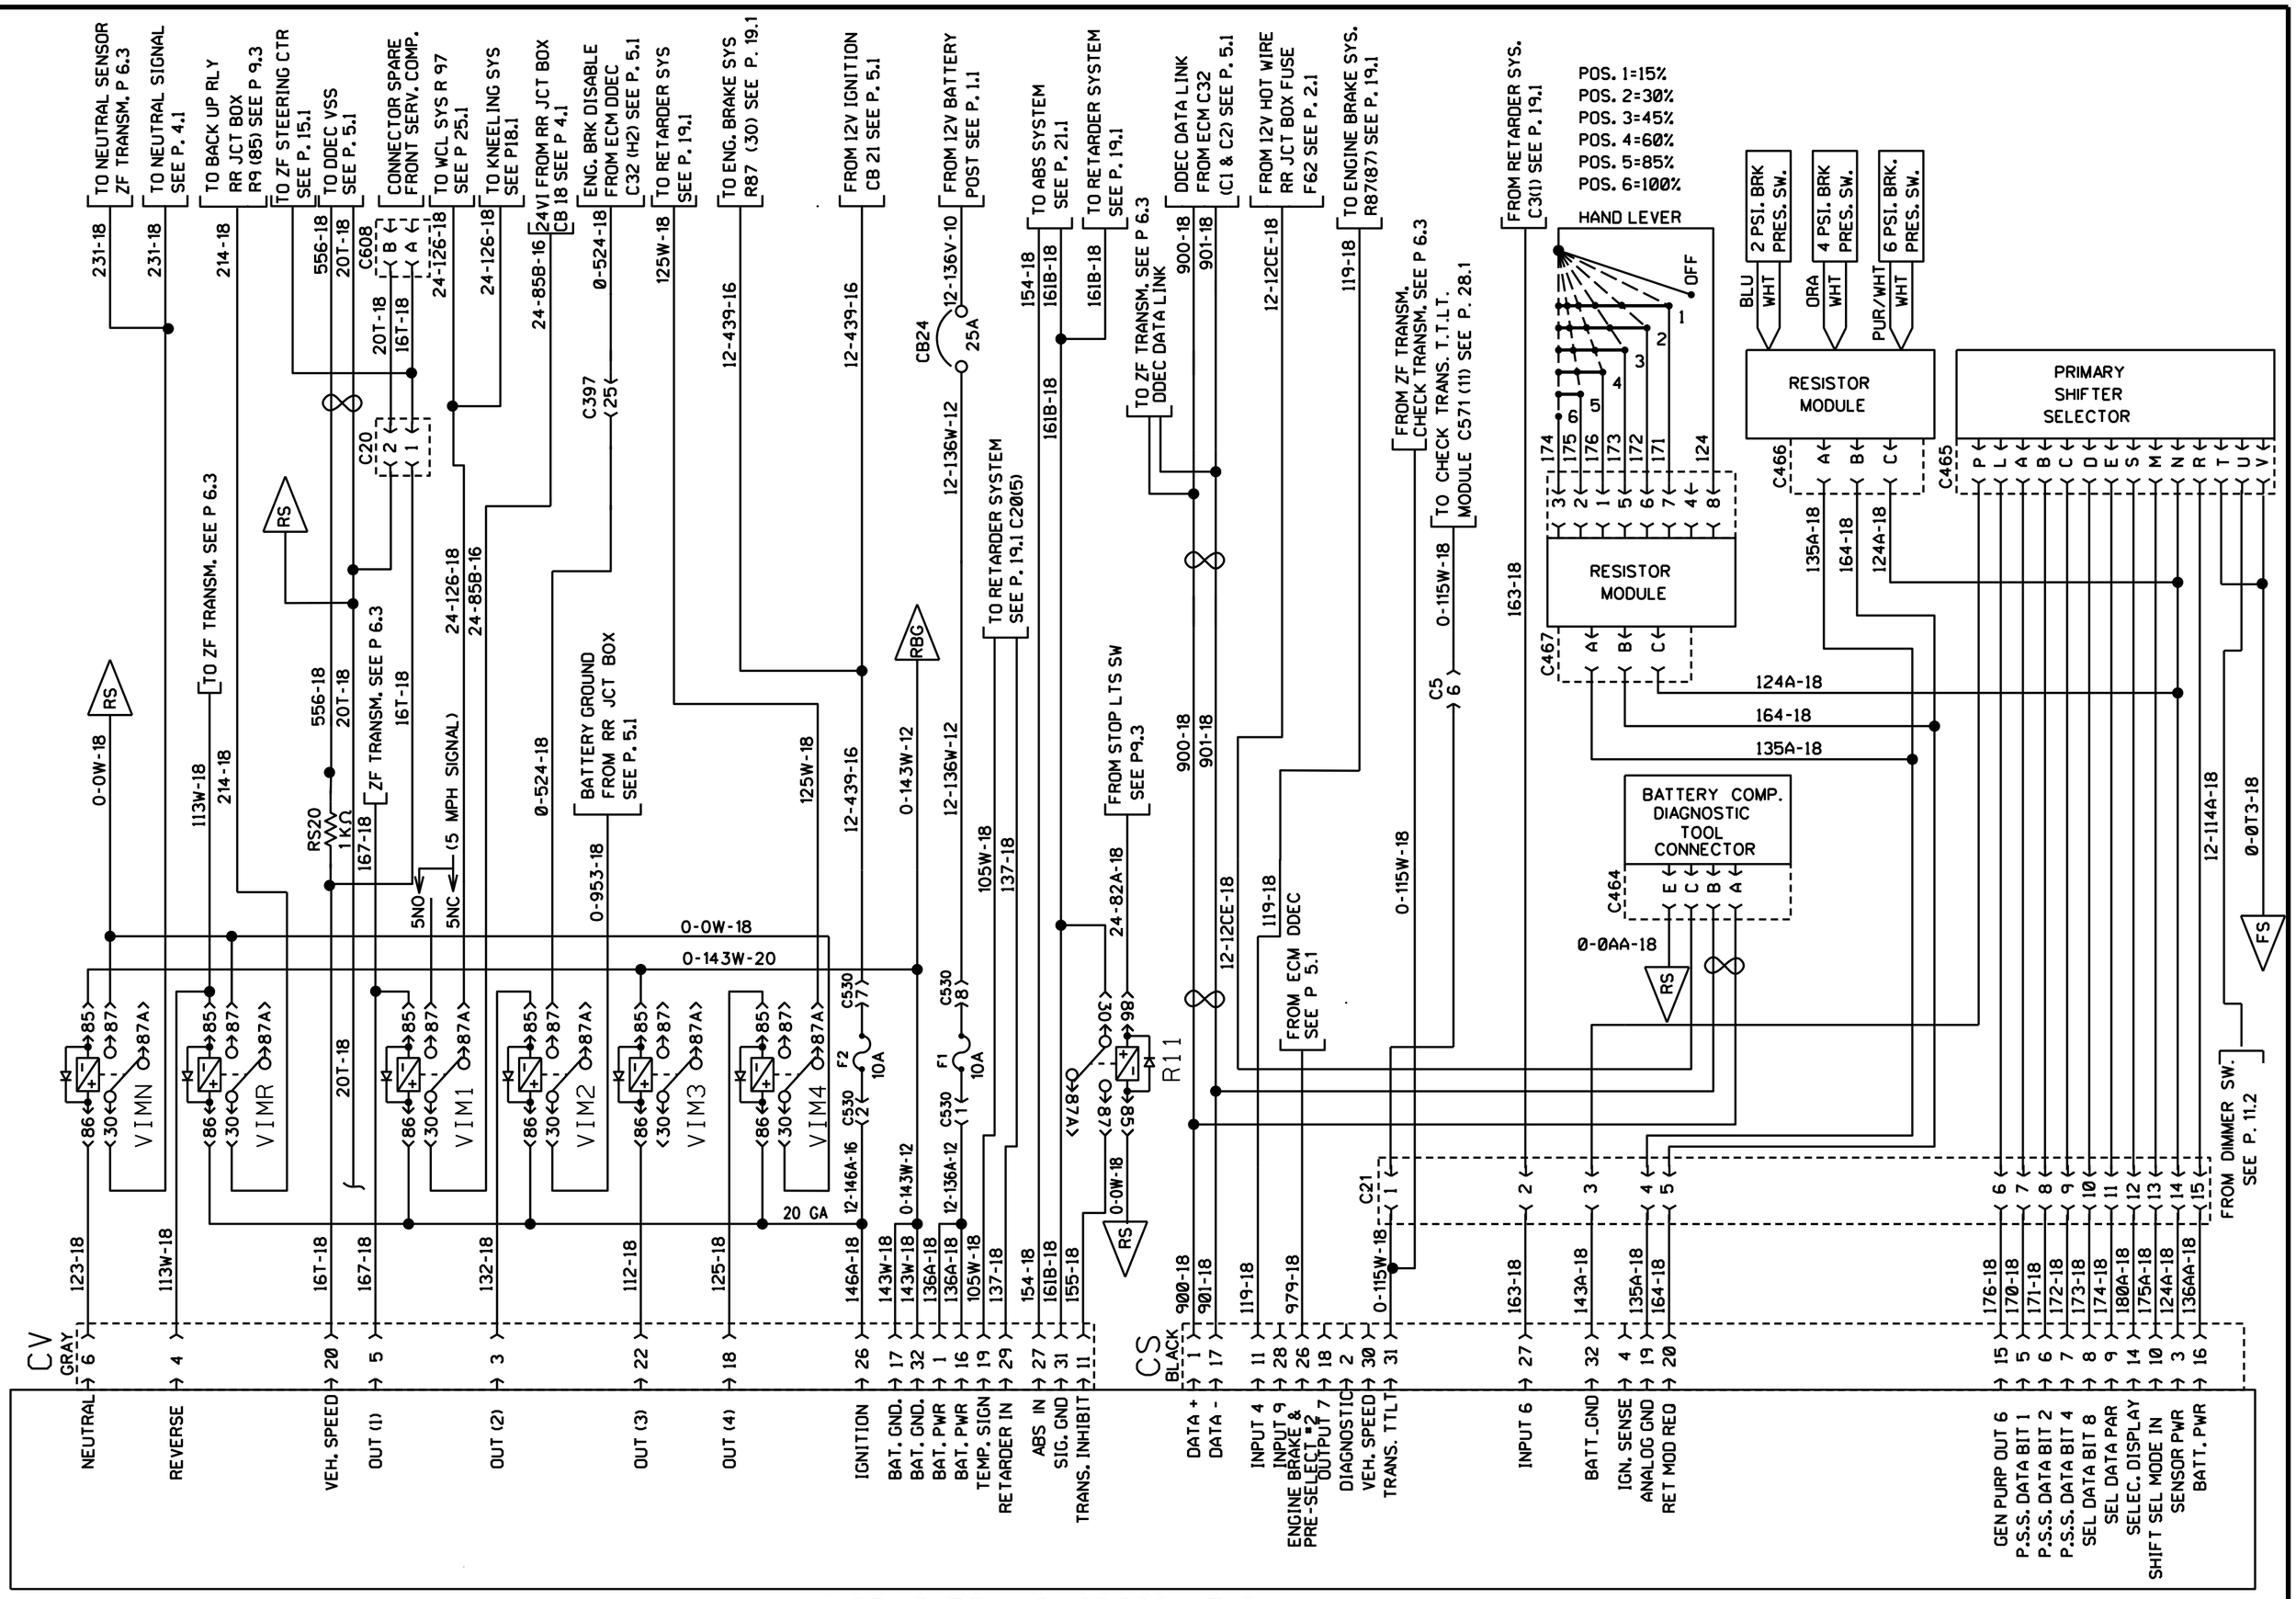

WIRING DIAGRAM

NO: D060976

PAGE: 6.1

REVISION 08

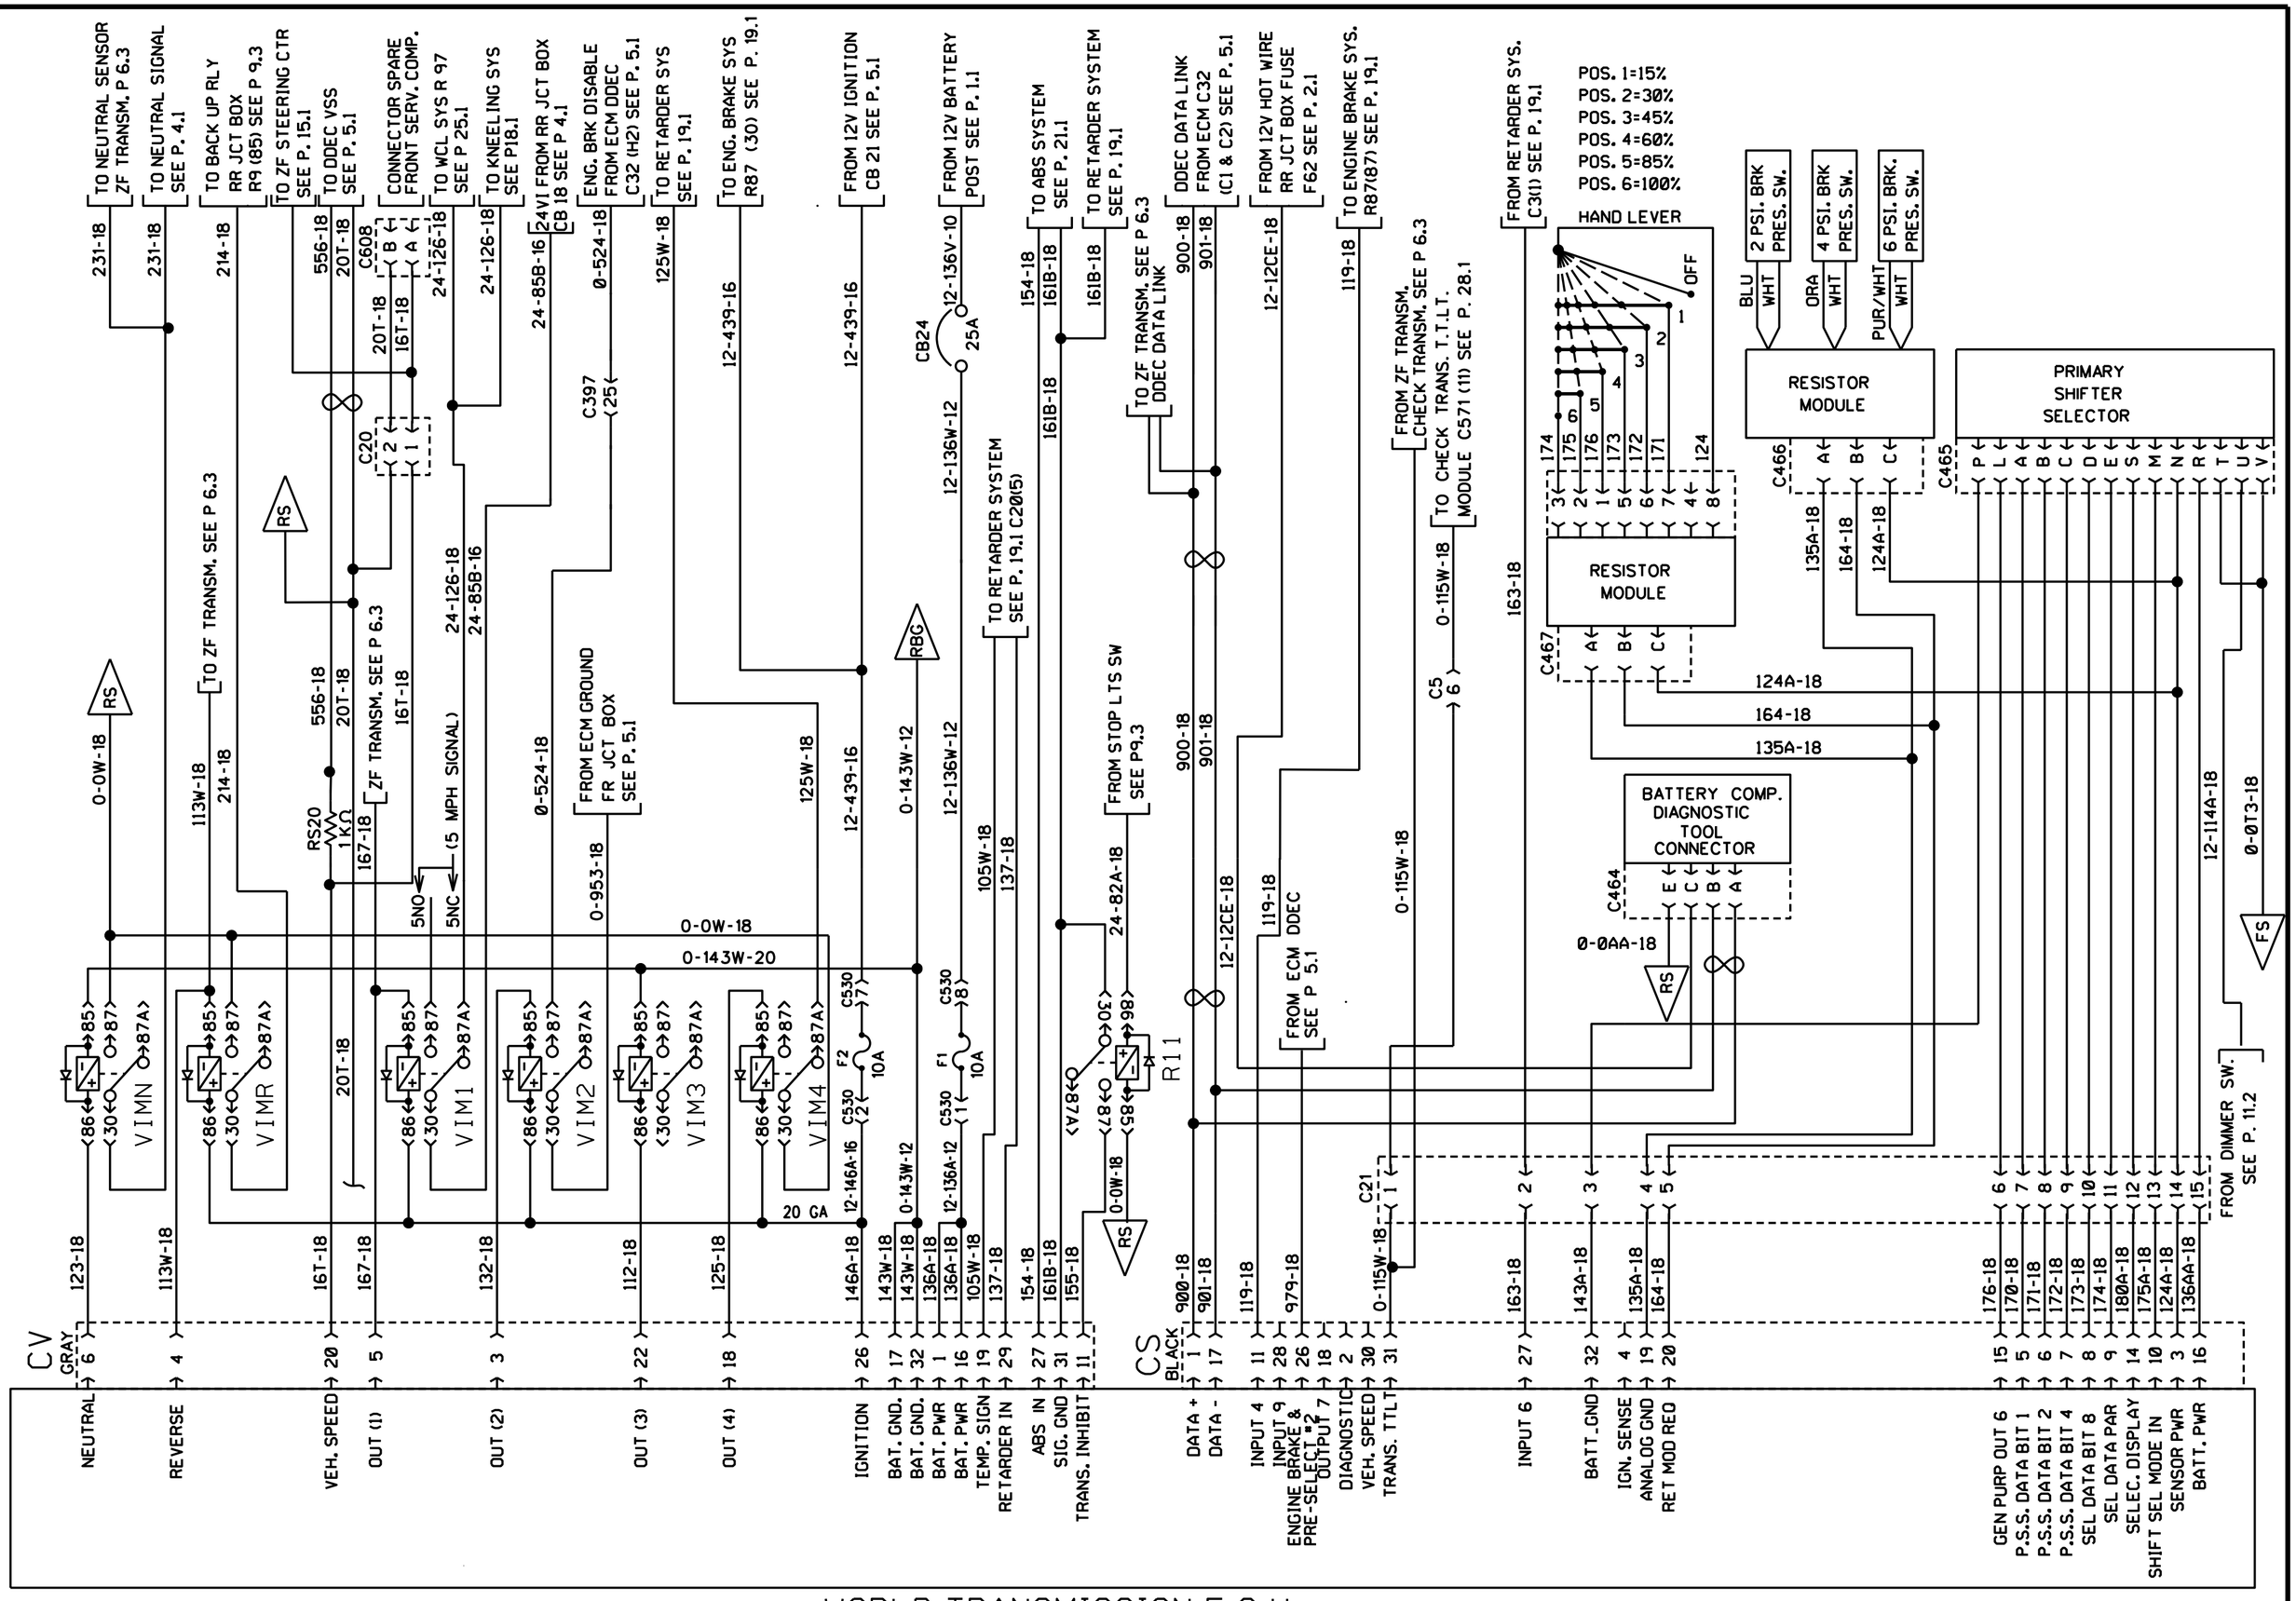

WORLD TRANSMISSION E.C.U.

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 6.1	REVISION 10

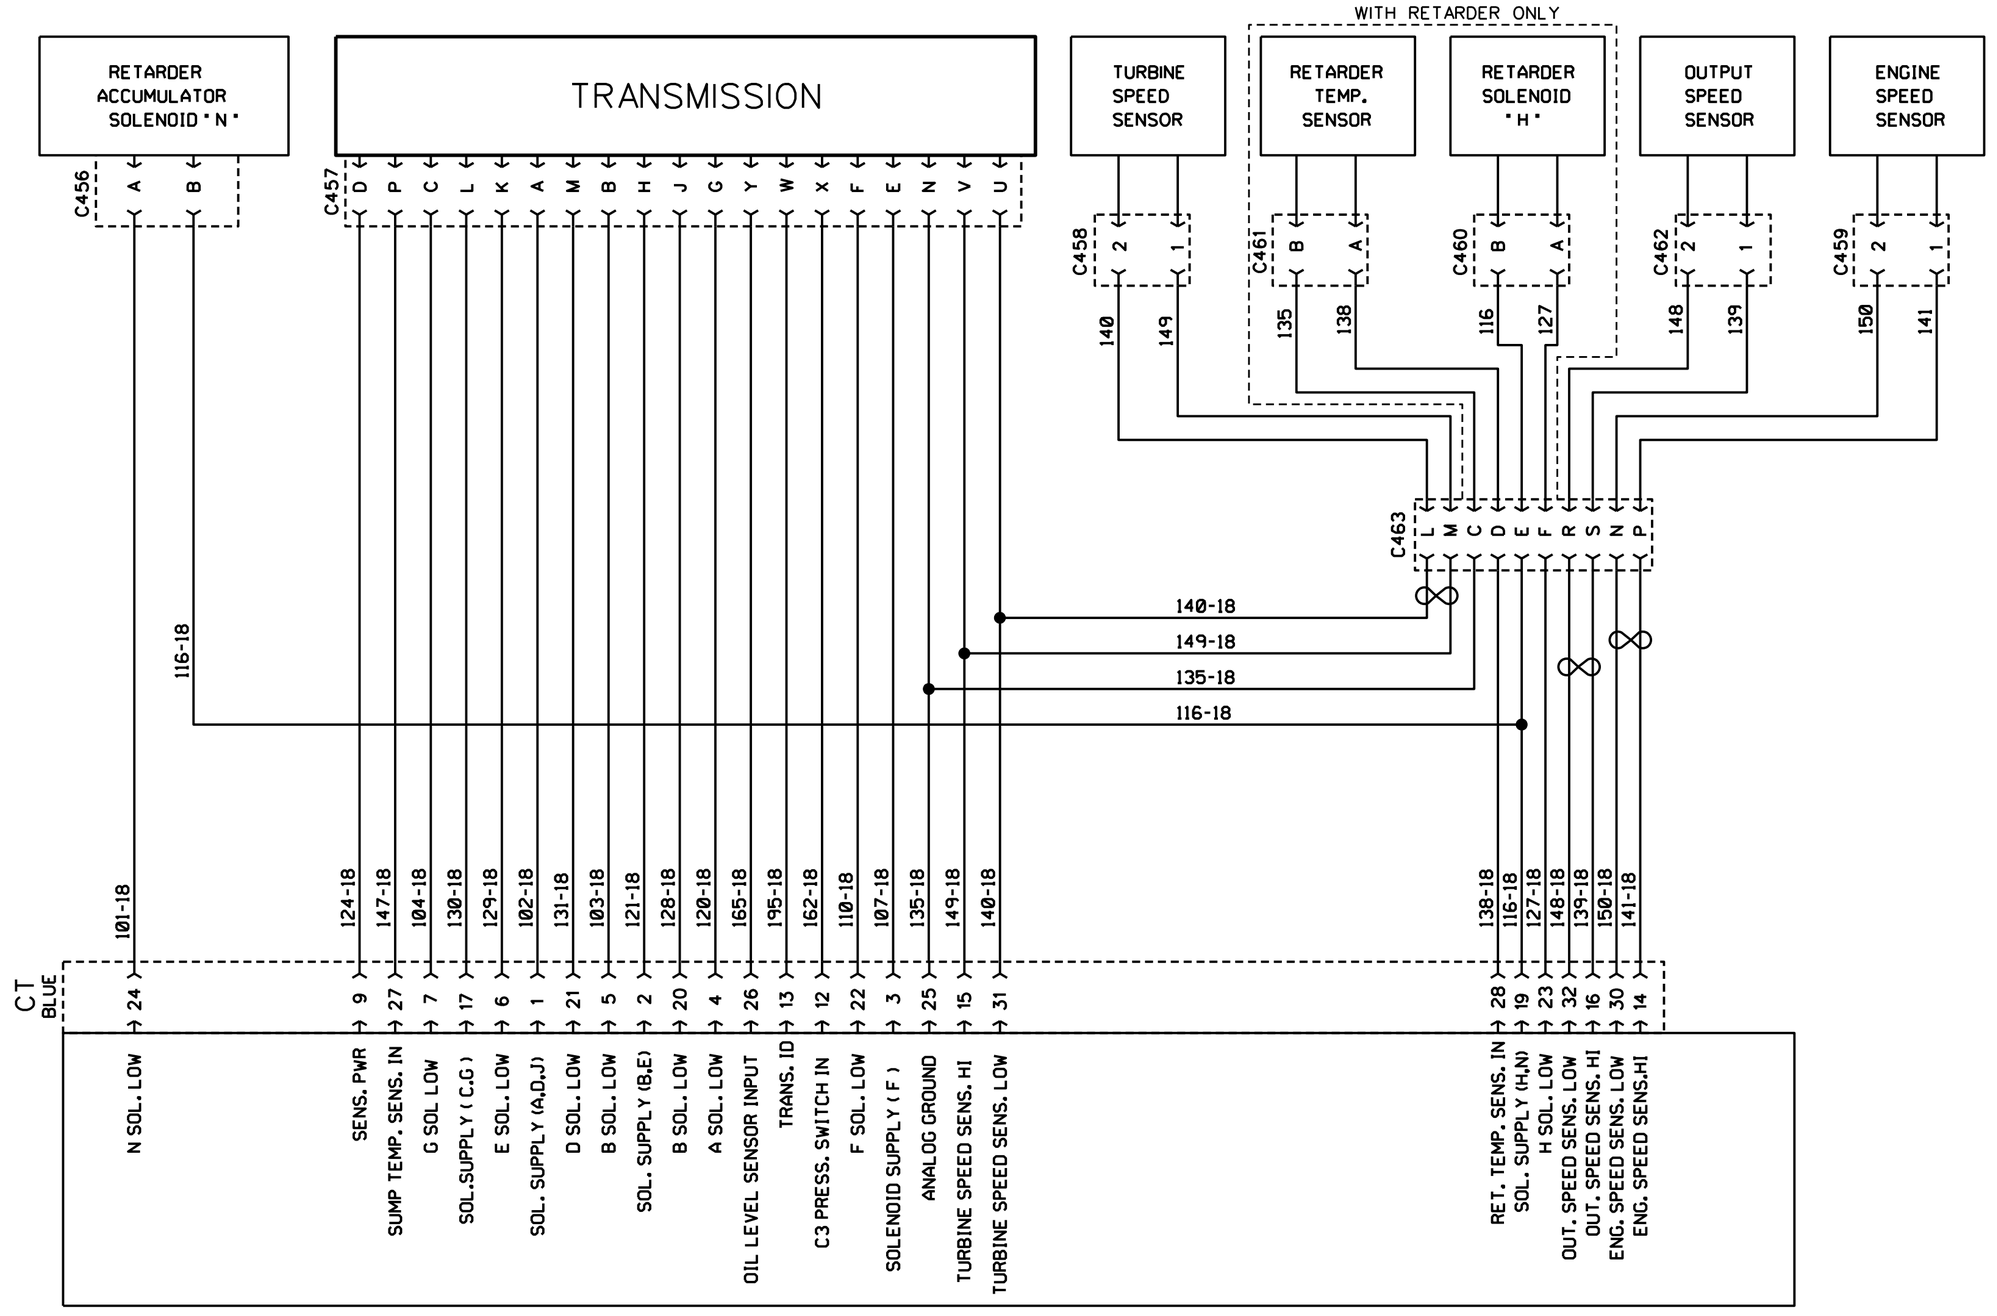

WORLD TRANSMISSION E.C.U. (SUITE)

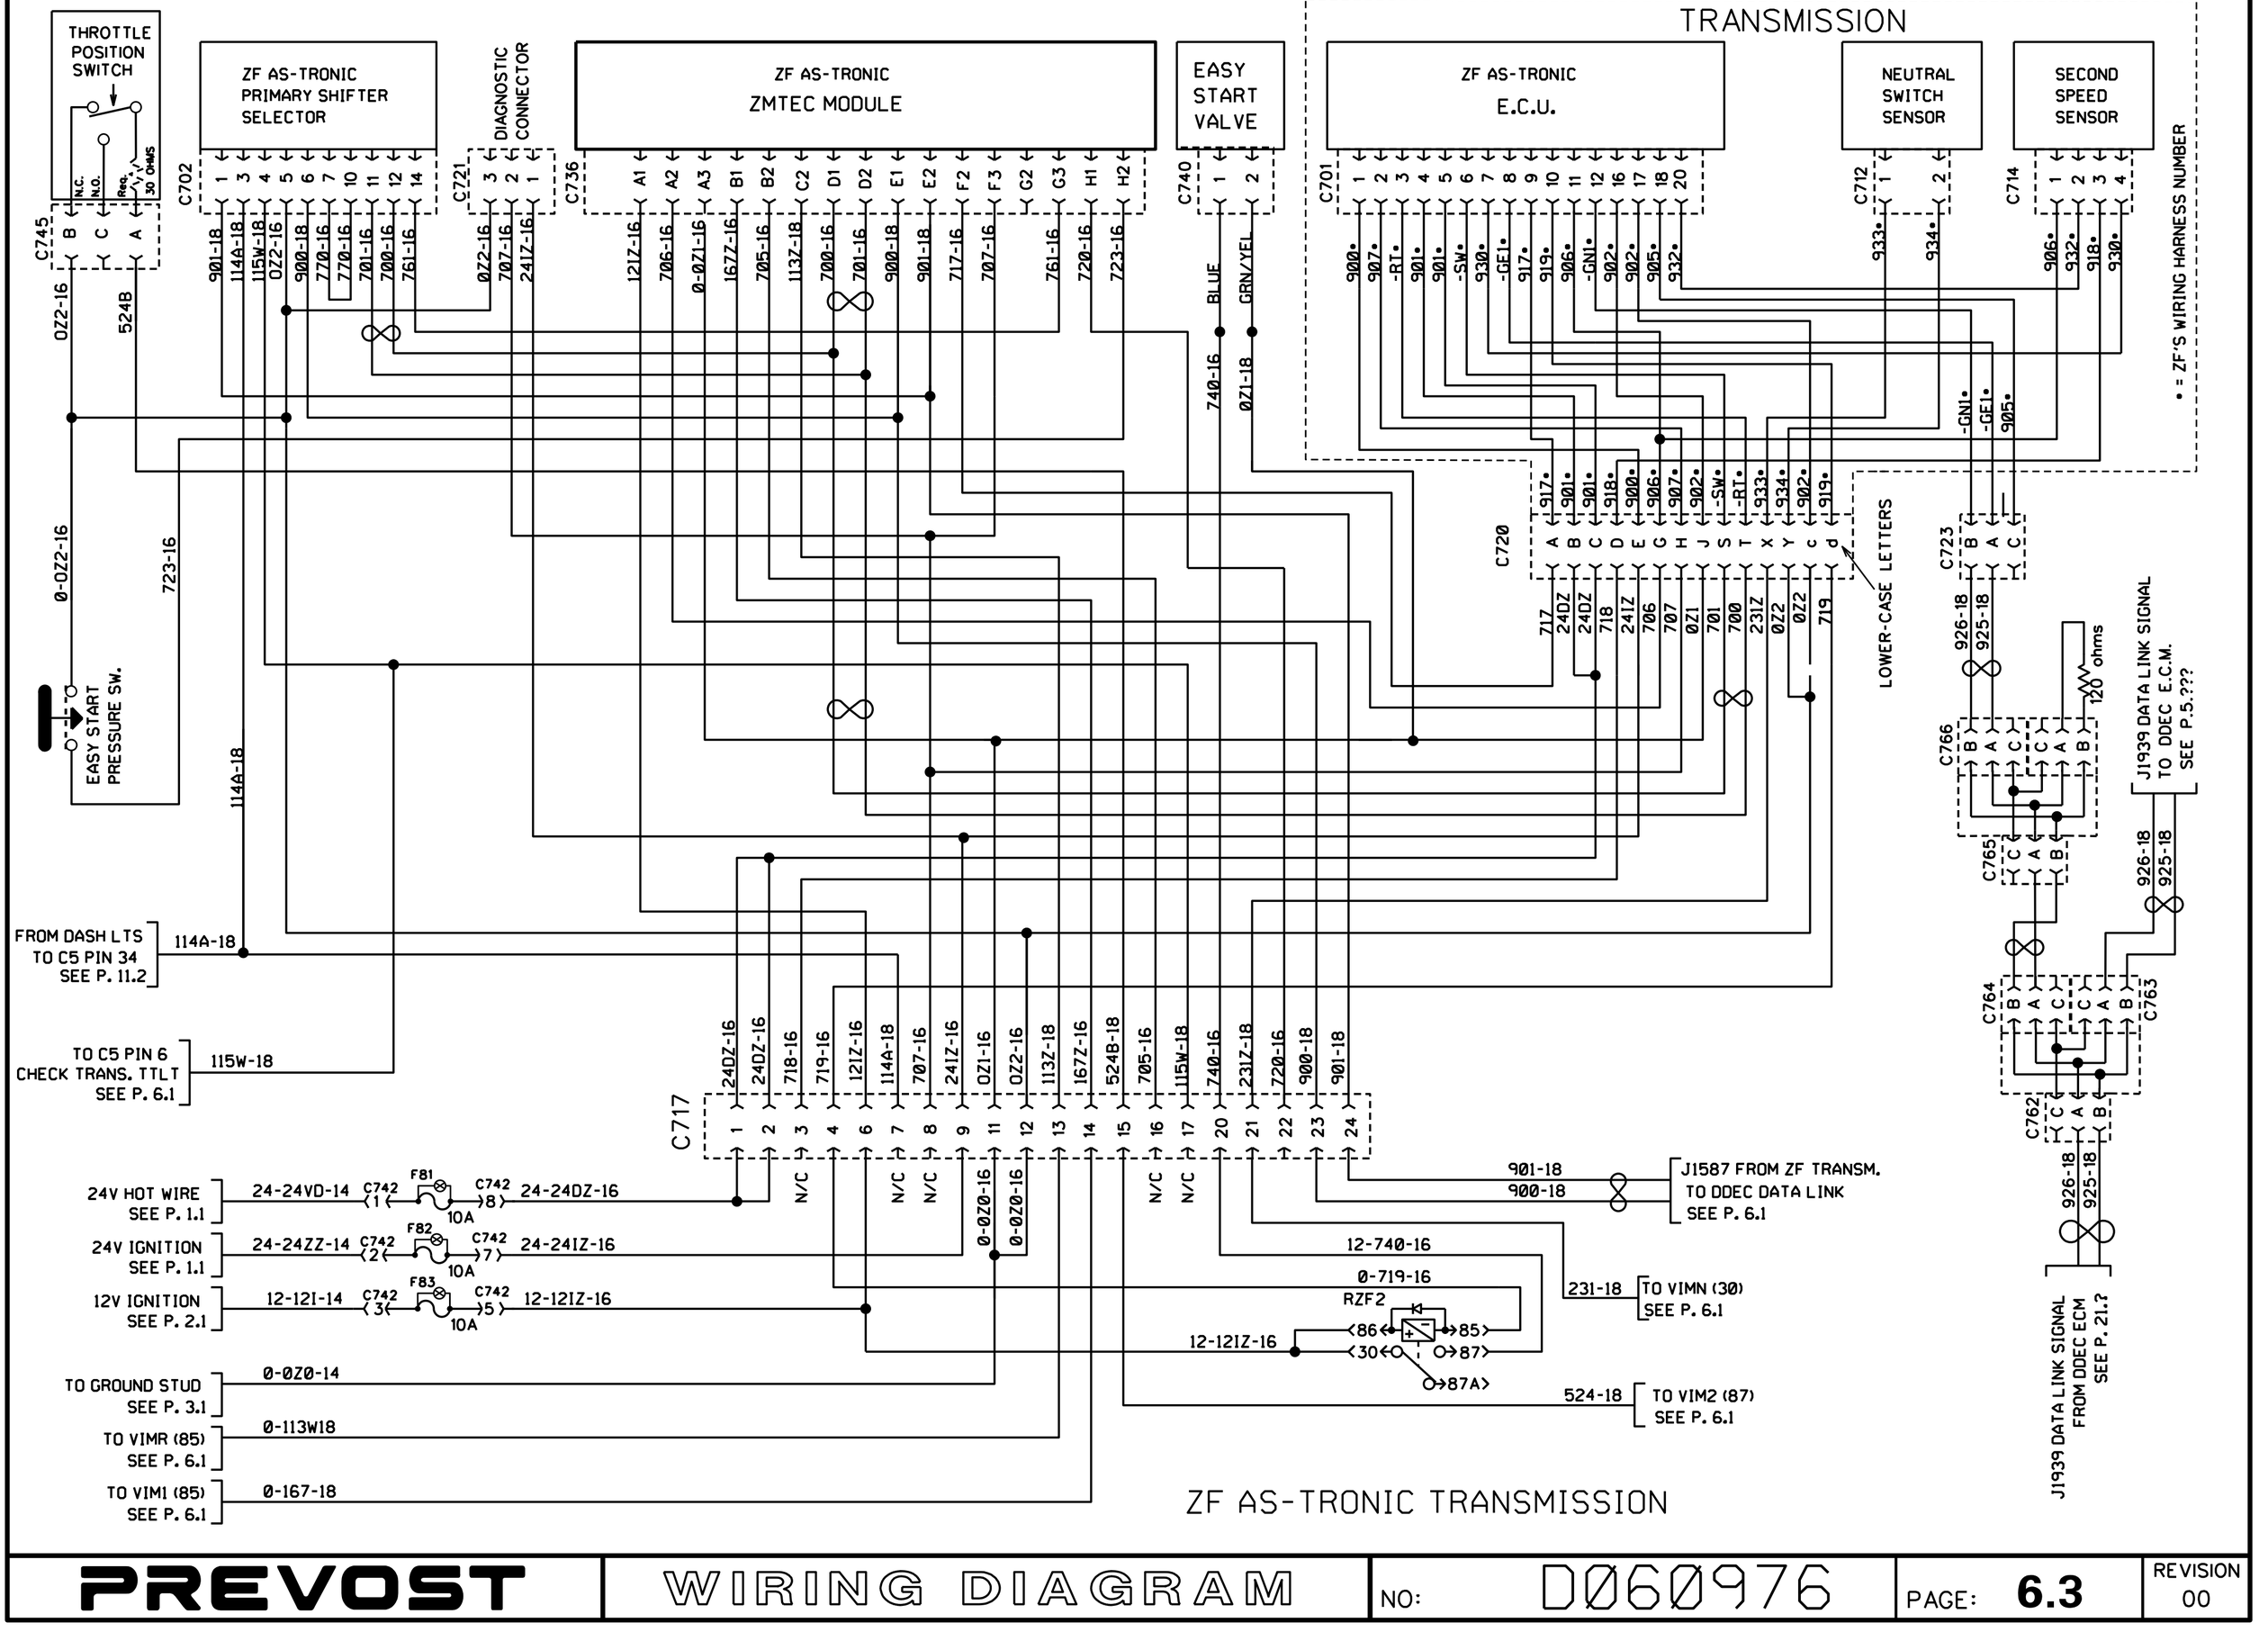
THROTTLE POSITION SWITCH
N.C.
N.O.
Res. 30 OHMS
C745
ZF AS-TRONIC PRIMARY SHIFTER SELECTOR
C702
DIAGNOSTIC CONNECTOR
C721
ZF AS-TRONIC ZMTEC MODULE
C736
EASY START VALVE
C740
TRANSMISSION
ZF AS-TRONIC E.C.U.
C701
NEUTRAL SWITCH SENSOR
C712
SECOND SPEED SENSOR
C714
• = ZF'S WIRING HARNESS NUMBER
C720
LOWER-CASE LETTERS
C723
EASY START PRESSURE SW.
0Z2-16
524B
0-0Z2-16
723-16
114A-18
115W-18
BLUE
GRN/YEL
740-16
0Z1-18
FROM DASH LTS TO C5 PIN 34 SEE P. 11.2
TO C5 PIN 6 CHECK TRANS. TTLT SEE P. 6.1
C717
24V HOT WIRE SEE P. 1.1
24-24VD-14
F81
10A
24-24DZ-16
24V IGNITION SEE P. 1.1
24-24ZZ-14
F82
10A
24-24IZ-16
12V IGNITION SEE P. 2.1
12-12I-14
F83
10A
12-12IZ-16
TO GROUND STUD SEE P. 3.1
0-0Z0-14
TO VIMR (85) SEE P. 6.1
0-113W18
TO VIM1 (85) SEE P. 6.1
0-167-18
N/C
0-0Z0-16
901-18
900-18
J1587 FROM ZF TRANSM. TO DDEC DATA LINK SEE P. 6.1
12-740-16
0-719-16
RZF2
231-18
TO VIMN (30) SEE P. 6.1
524-18
TO VIM2 (87) SEE P. 6.1
C766
C765
C764
C763
C762
926-18
925-18
120 ohms
J1939 DATA LINK SIGNAL TO DDEC E.C.M. SEE P. 5.???
J1939 DATA LINK SIGNAL FROM DDEC ECM SEE P. 21.?
ZF AS-TRONIC TRANSMISSION

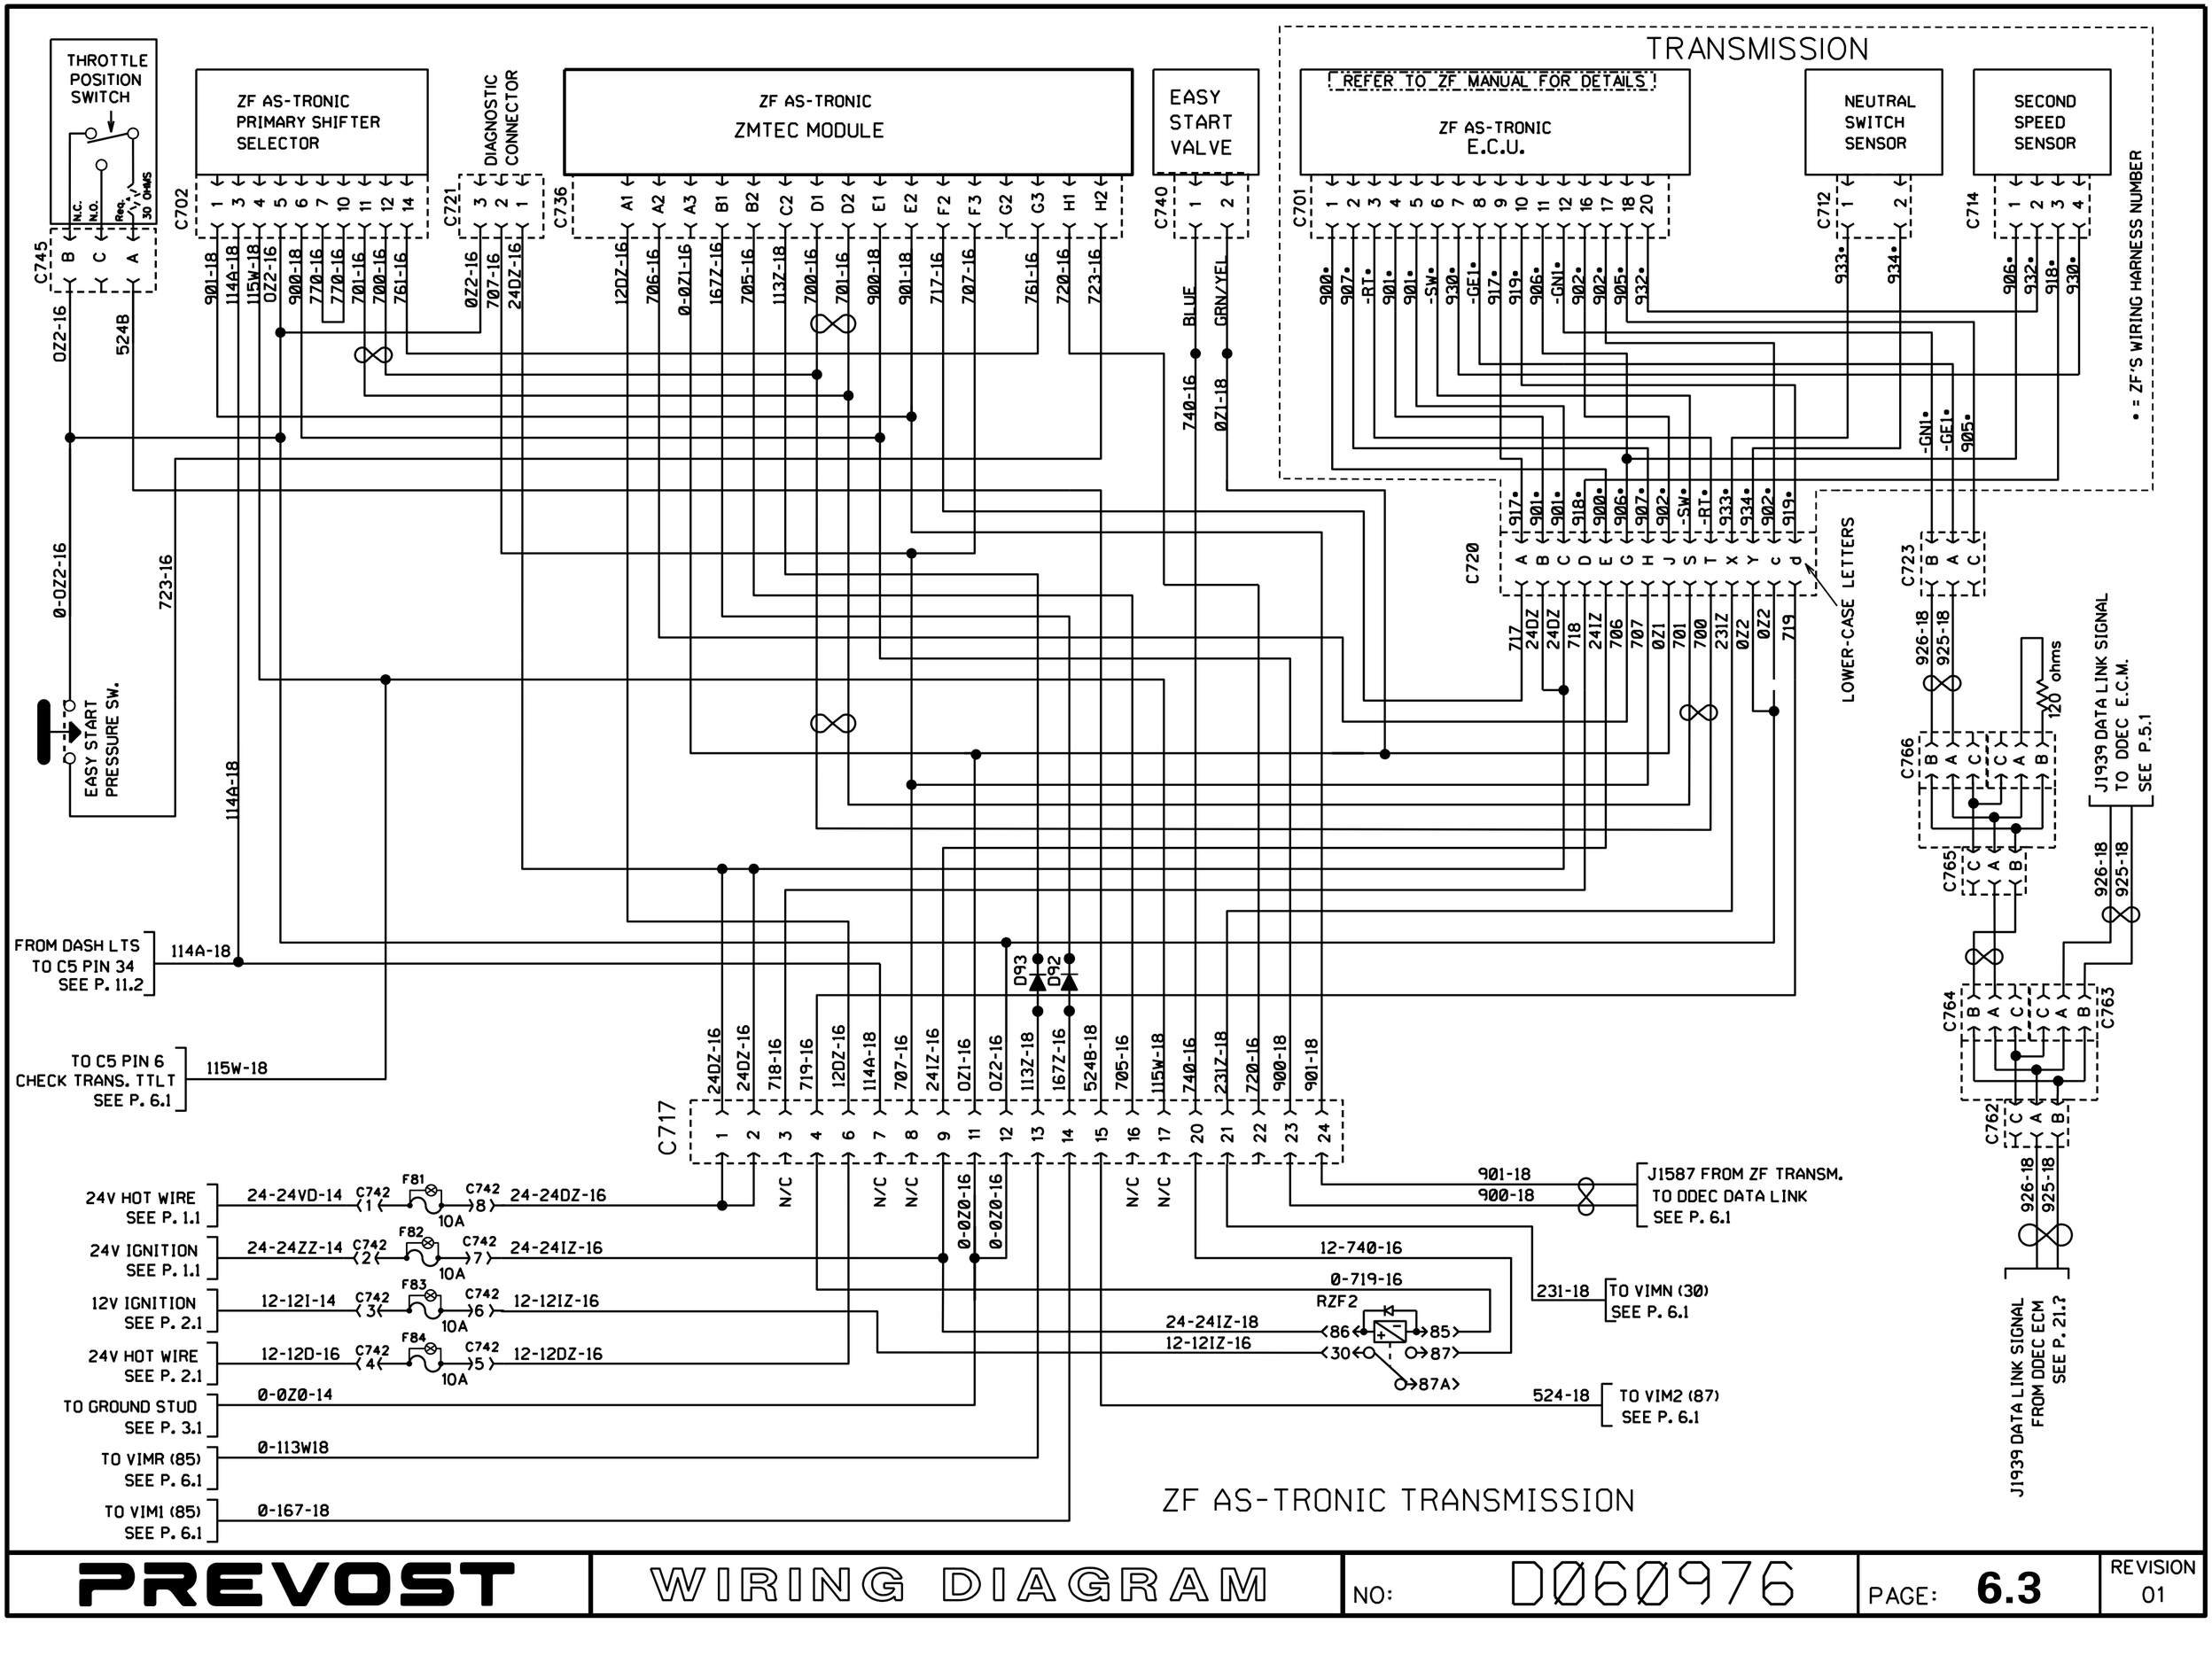

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 6.3	REVISION 01

ZF AS-TRONIC TRANSMISSION

THROTTLE POSITION SWITCH

ZF AS-TRONIC PRIMARY SHIFTER SELECTOR

DIAGNOSTIC CONNECTOR

ZF AS-TRONIC ZMTEC MODULE

EASY START VALVE

TRANSMISSION

REFER TO ZF MANUAL FOR DETAILS

ZF AS-TRONIC E.C.U.

NEUTRAL SWITCH SENSOR

SECOND SPEED SENSOR

• = ZF'S WIRING HARNESS NUMBER

LOWER-CASE LETTERS

EASY START PRESSURE SW.

FROM DASH LTS TO C5 PIN 34 SEE P. 11.2

TO C5 PIN 6 CHECK TRANS. TTLT SEE P. 6.1

24V HOT WIRE SEE P. 1.1

24V IGNITION SEE P. 1.1

12V IGNITION SEE P. 2.1

12V HOT WIRE SEE P. 2.1

TO GROUND STUD SEE P. 3.1

TO VIMR (85) SEE P. 6.1

TO VIM1 (85) SEE P. 6.1

J1587 FROM ZF TRANSM. TO DDEC DATA LINK SEE P. 6.1

TO VIMN (30) SEE P. 6.1

TO VIM2 (87) SEE P. 6.1

J1939 DATA LINK SIGNAL TO DDEC E.C.M. SEE P. 5.1

J1939 DATA LINK SIGNAL FROM DDEC ECM SEE P. 21.?

RZF2

D93 D92

120 ohms

ZF AS-TRONIC TRANSMISSION

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 6.3	REVISION 02

THROTTLE POSITION SWITCH

N.C. N.O. Res. 30 OHMS

ZF AS-TRONIC PRIMARY SHIFTER SELECTOR

DIAGNOSTIC CONNECTOR

ZF AS-TRONIC ZMTEC MODULE

EASY START VALVE

TRANSMISSION

REFER TO ZF MANUAL FOR DETAILS

ZF AS-TRONIC E.C.U.

NEUTRAL SWITCH SENSOR

SECOND SPEED SENSOR

• = ZF'S WIRING HARNESS NUMBER

C745 C702 C721 C736 C740 C701 C712 C714 C720 C723

EASY START PRESSURE SW.

LOWER-CASE LETTERS

C766 C765 C764 C763 C762

120 ohms

J1939 DATA LINK SIGNAL TO DDEC E.C.M. SEE P.5.1

J1939 DATA LINK SIGNAL FROM DDEC ECM SEE P. 21.2

C717

D93 D92

FROM DASH LTS TO C5 PIN 34 SEE P. 11.2 — 114A-18

TO C5 PIN 6 CHECK TRANS. TTLT SEE P. 6.1 — 115W-18

24V HOT WIRE SEE P. 1.1 — 24-24VD-14 — F81 10A — 24-24DZ-16

24V IGNITION SEE P. 1.1 — 24-24ZZ-14 — F82 10A — 24-24IZ-16

12V IGNITION SEE P. 2.1 — 12-12I-14 — F83 10A — 12-12IZ-16

12V HOT WIRE SEE P. 2.1 — 12-12D-16 — F84 10A — 12-12DZ-16

TO GROUND STUD SEE P. 3.1 — 0-0Z0-14

TO VIMR (85) SEE P. 6.1 — 0-113W18

TO VIM1 (85) SEE P. 6.1 — 0-167-18

901-18 / 900-18 — J1587 FROM ZF TRANSM. TO DDEC DATA LINK SEE P. 6.1

12-740-16

0-719-16

RZF2

24-24IZ-18 / 12-12IZ-18

231-18 — TO VIMN (30) SEE P. 6.1

524-18 — TO VIM2 (87) SEE P. 6.1

ZF AS-TRONIC TRANSMISSION

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 6.3	REVISION 04

TRANSMISSION

ZF AS-TRONIC PRIMARY SHIFTER SELECTOR — C702

DIAGNOSTIC CONNECTOR — C721

ZF AS-TRONIC ZMTEC MODULE — C736

EASY START VALVE — C740

REFER TO ZF MANUAL FOR DETAILS

ZF AS-TRONIC E.C.U. — C701

NEUTRAL SWITCH SENSOR — C712

SECOND SPEED SENSOR — C714

• = ZF'S WIRING HARNESS NUMBER

LOWER-CASE LETTERS

C720

C723

C766 C765 C764 C763 C762

120 ohms

J1939 DATA LINK SIGNAL TO DDEC E.C.M. SEE P.5.1

J1939 DATA LINK SIGNAL FROM DDEC ECM SEE P. 21.2

EASY START PRESSURE SW.

FROM DASH LTS TO C5 PIN 34 SEE P. 11.2

TO C5 PIN 6 CHECK TRANS. TTLT SEE P. 6.1

C717

D93 D92

24V HOT WIRE SEE P. 1.1 — F81 10A

24V IGNITION SEE P. 1.1 — F82 10A

12V IGNITION SEE P. 2.1 — F83 10A

12V HOT WIRE SEE P. 2.1 — F84 10A

TO GROUND STUD SEE P. 3.1

TO VIMR (85) SEE P. 6.1

TO VIM1 (85) SEE P. 6.1

J1587 FROM ZF TRANSM. TO DDEC DATA LINK SEE P. 6.1

TO VIMN (30) SEE P. 6.1

RZF2

ZF AS-TRONIC TRANSMISSION

TRANSMISSION

ZF AS-TRONIC PRIMARY SHIFTER SELECTOR

DIAGNOSTIC CONNECTOR

ZF AS-TRONIC ZMTEC MODULE

EASY START VALVE

REFER TO ZF MANUAL FOR DETAILS

ZF AS-TRONIC E.C.U.

NEUTRAL SWITCH SENSOR

SECOND SPEED SENSOR

• = ZF'S WIRING HARNESS NUMBER

LOWER-CASE LETTERS

EASY START PRESSURE SW.

FROM DASH LTS TO C5 PIN 34 SEE P. 11.2

TO C5 PIN 6 CHECK TRANS. TTLT SEE P. 6.1

24V HOT WIRE SEE P. 1.1

24V IGNITION SEE P. 1.1

12V IGNITION SEE P. 2.1

12V HOT WIRE SEE P. 2.1

TO GROUND STUD SEE P. 3.1

TO VIMR (85) SEE P. 6.1

TO VIM1 (85) SEE P. 6.1

J1587 FROM ZF TRANSM. TO DDEC DATA LINK SEE P. 6.1

TO VIMN (30) SEE P. 6.1

J1939 DATA LINK SIGNAL TO DDEC E.C.M. SEE P. 5.1

J1939 DATA LINK SIGNAL FROM DDEC ECM SEE P. 21.1

120 ohms

ZF AS-TRONIC TRANSMISSION

PREVOST

WIRING DIAGRAM

CLUSTER

NO: D060976

PAGE: 7.1

REVISION 00

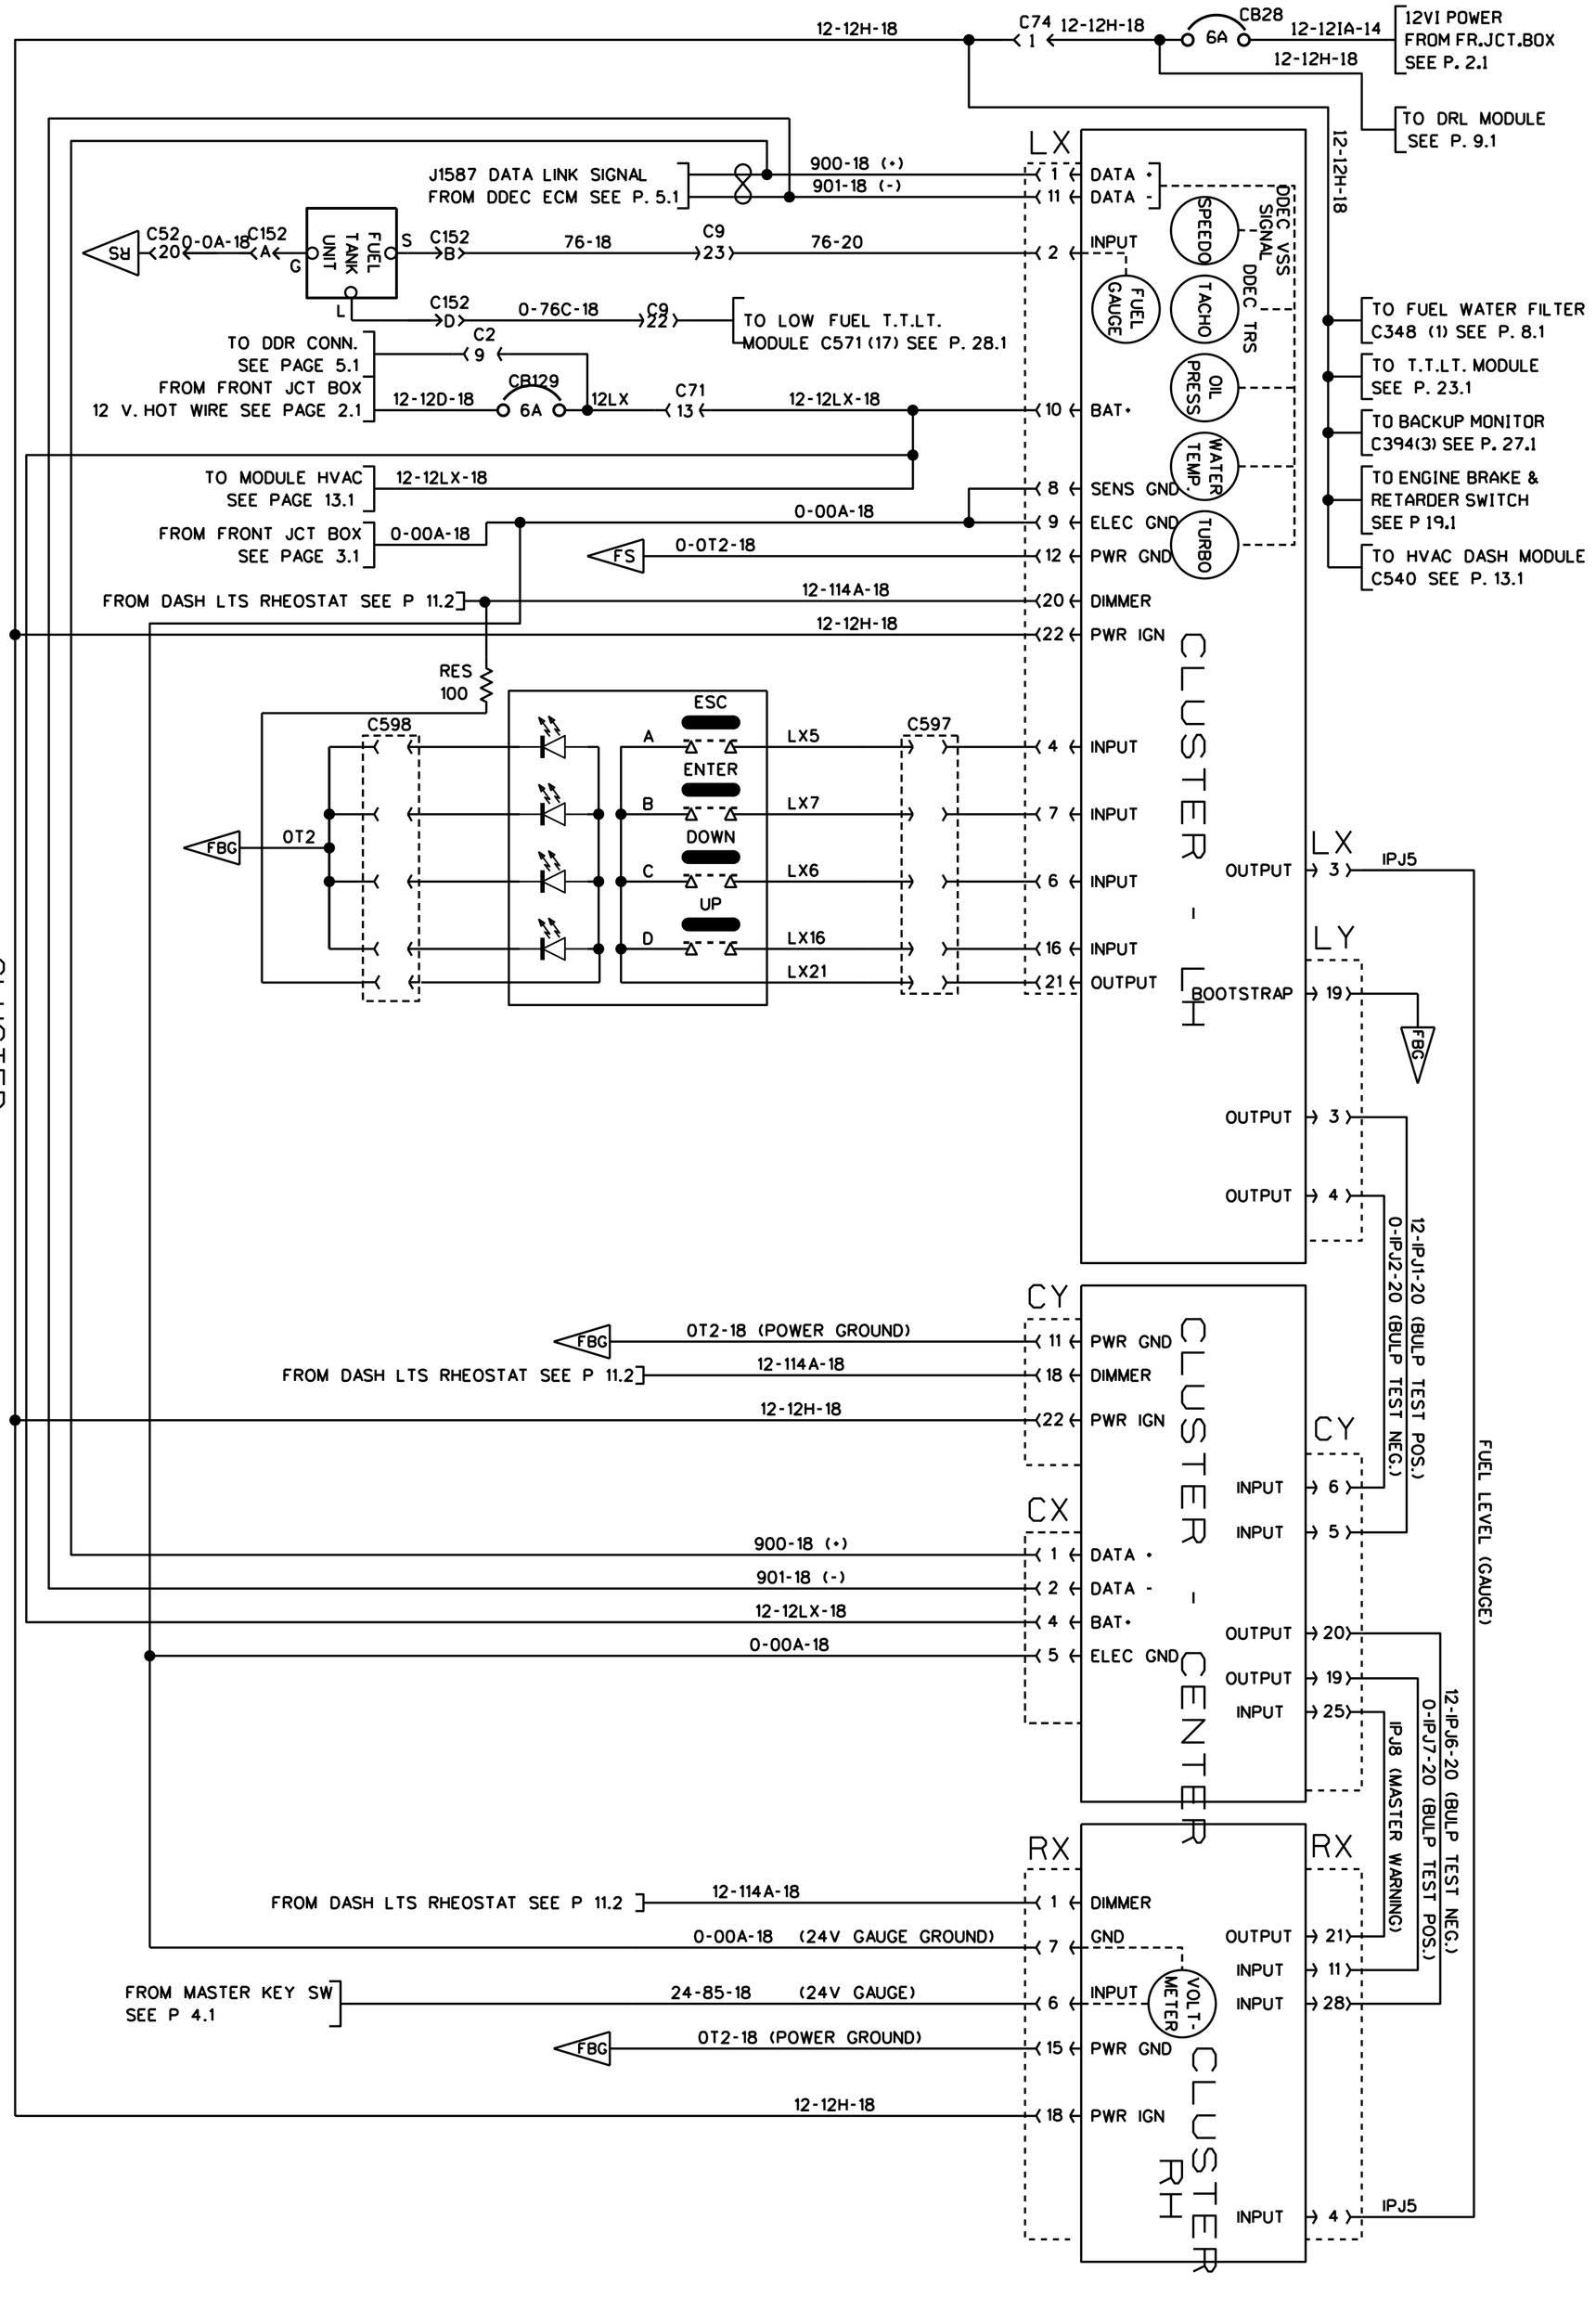

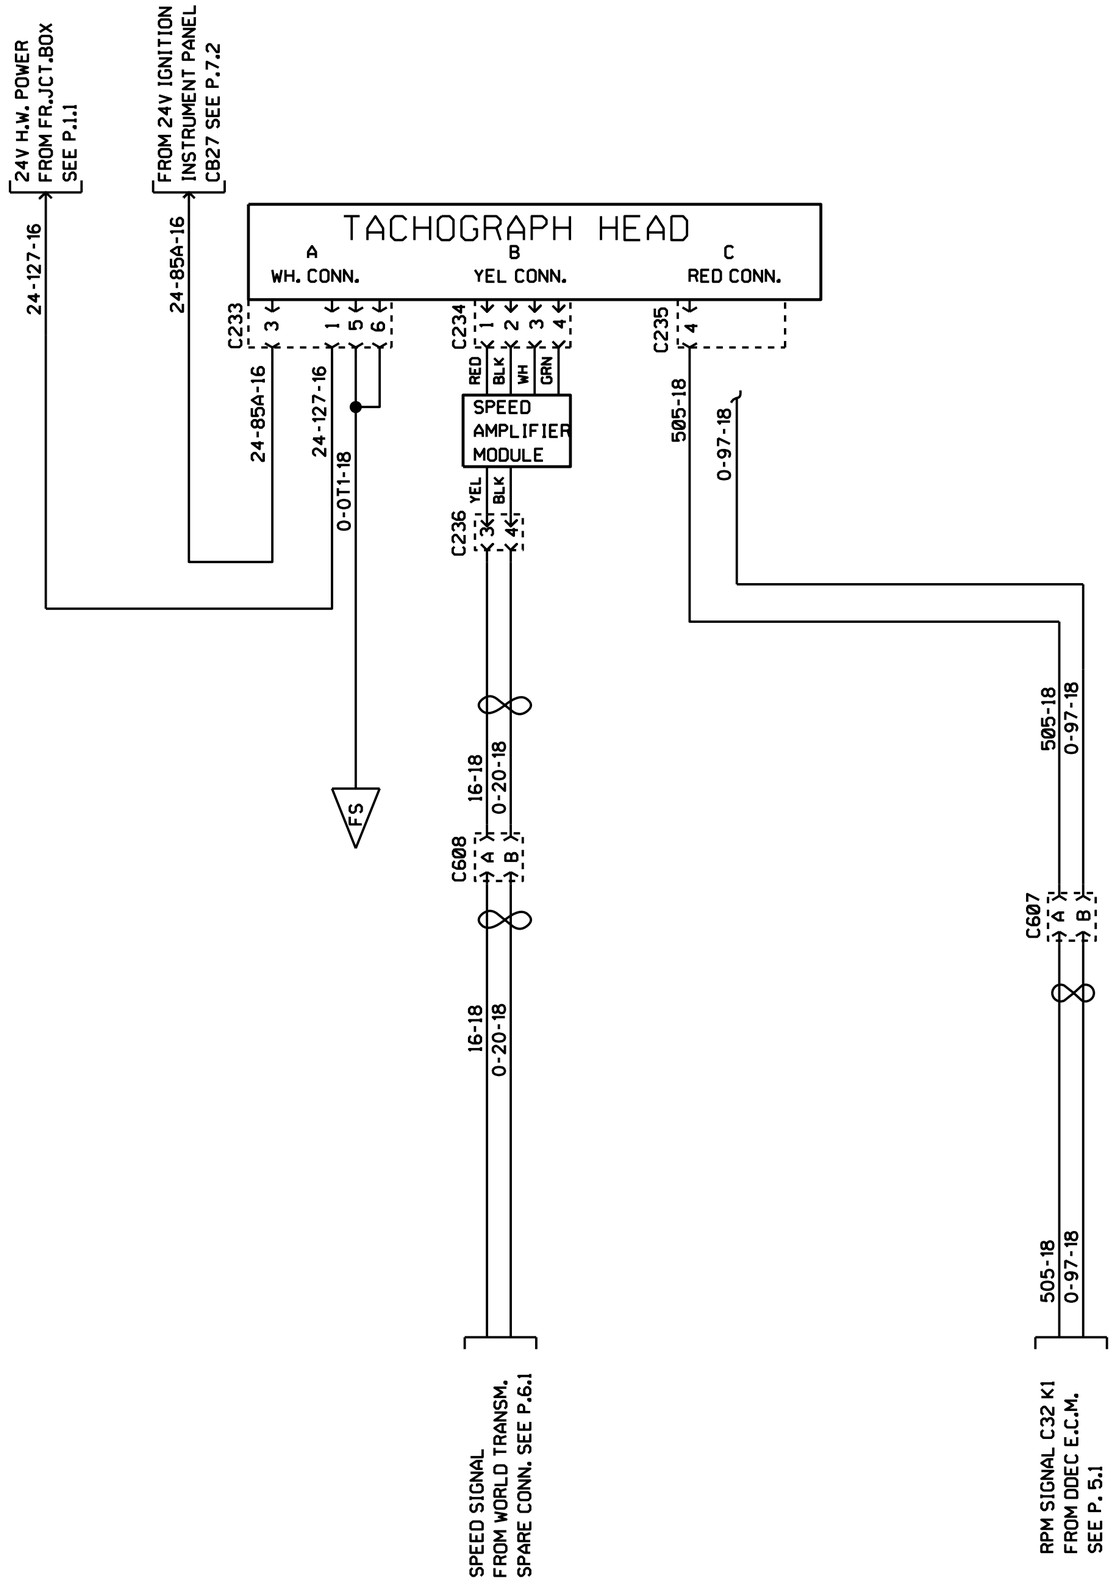

ELECTRONIC TACHOGRAPH

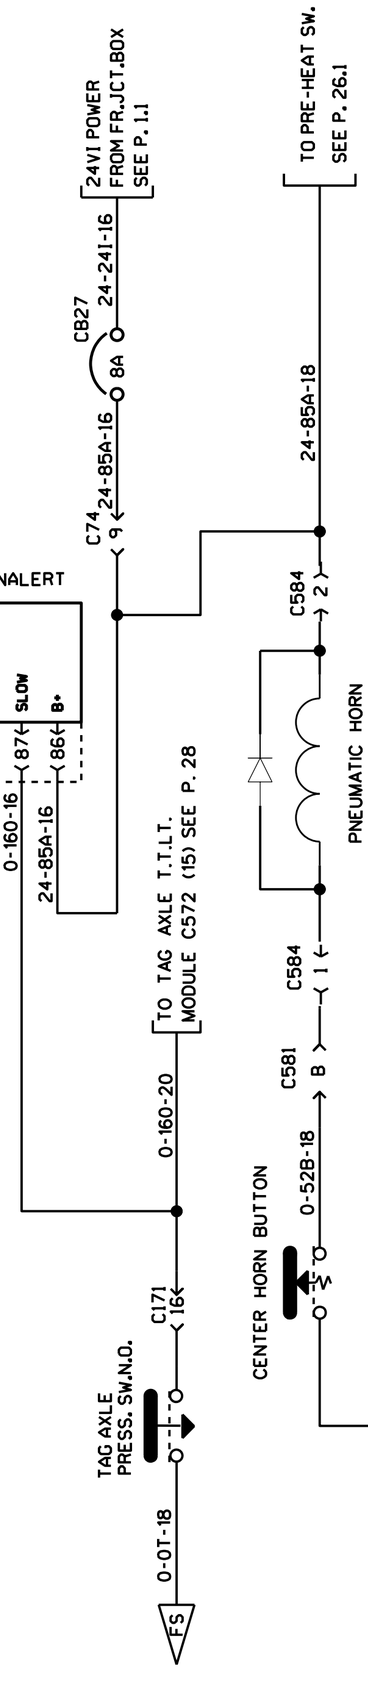
SONALERT
AA1
85
FAST
87
SLOW
86
B+
0-160-16
24-85A-16
TO TAG AXLE T.T.L.T.
MODULE C572 (15) SEE P. 28
0-160-20
C171
16
TAG AXLE
PRESS. SW.N.O.
0-0T-18
FS
C74
9
24-85A-16
CB27
8A
24-241-16
24VI POWER
FROM FR.JCT.BOX
SEE P. 1.1
C584
2
24-85A-18
TO PRE-HEAT SW.
SEE P. 26.1
PNEUMATIC HORN
C584
1
C581
B
0-52B-18
CENTER HORN BUTTON
LEFT HORN BUTTON
RIGHT HORN BUTTON
0-0J-18
C581
A
0-53-20
C101
A
12-52A-14
ELECTRICAL
HORNS
C101
B
0-0M4-14
R12
86
85
87
30
87A
C71
22
0-53-20
C4
5
12-52A-14
C523
8
12-52-14
F3
20A
C523
A4
1
12-12F-18
12V POWER
FROM FR.JCT.BOX
SEE P. 2.1
C523
7
24-123A-18
F4
5A
C523
A3
2
24-24D-14
24V HOT WIRE
FROM FR.JCT.BOX
SEE P. 1.1
RS17
220 OHMS
C340
1
24-123A-18
TO DIGITAL CLOCK
SEE P. 14.1
PIEZO
RED
BLK
C340
2
0-123B-18
TO FIRE ALARM T.T.L.T.
MODULE C571 (12) SEE P. 28
C71
4
C340
BR
C6
4
C20
22
0-123B-18
0-123B-18
C91
3
0-123B-18
BATT. CMPT.
C221
1
SENSOR
C221
2
0A-18
RS
PRE HEATER CMPT.
C219
1
SENSOR
C219
2
ENG. CMPT.
C222
1
SENSOR
C222
2
ENG. CMPT.
C223
1
SENSOR
C223
2
0P-18
C91
55
0XA-18
RS
ALARM AND SIGNAL
TO TTLT WINDOW AJAR
C572 (11) SEE PAGE. 28.1
C582
A
B
0T2
RS
C603
1
2
C601
2
1
0-260-20
0-0T2-20
0-0T2-20
0-260-20
C602
2
1
MAGNETIC SWITCH
N.C. - WINDOW OPEN
ONLY ON H3-45
R.H.
L.H.
WINDOW AJAR

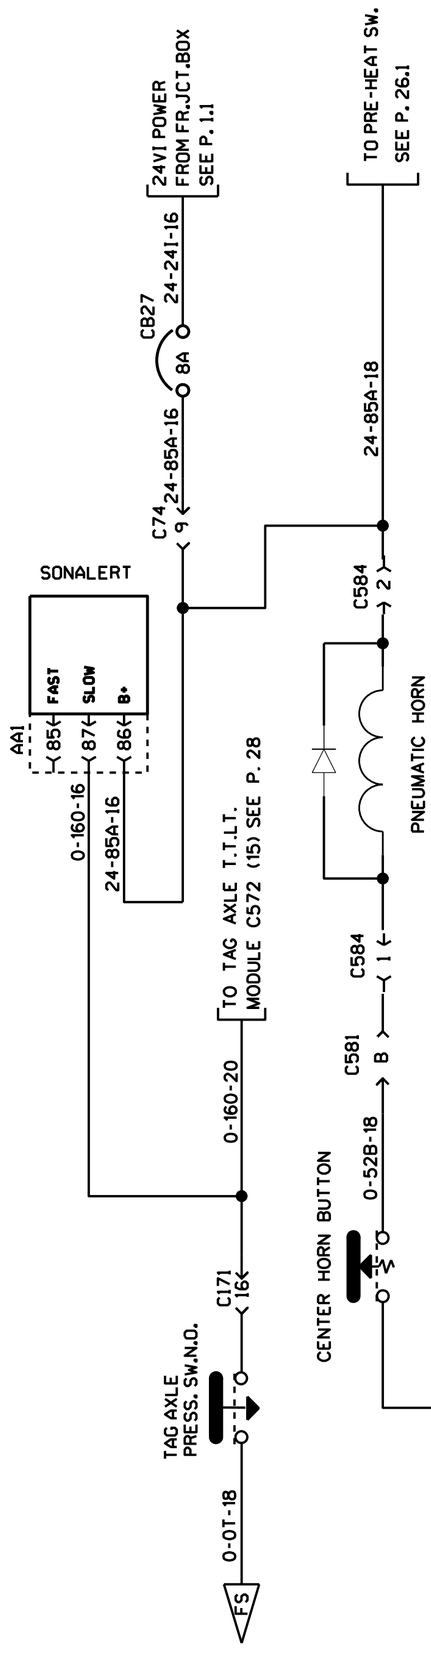
SONALERT
AA1
85
87
86
FAST
SLOW
B+
0-160-16
24-85A-16
TO TAG AXLE T.T.L.T.
MODULE C572 (15) SEE P. 28
0-160-20
C171
16
TAG AXLE
PRESS. SW.N.O.
0-0T-18
FS
C74
9
24-85A-16
CB27
8A
24-241-16
24VI POWER
FROM FR.JCT.BOX
SEE P. 1.1
24-85A-18
TO PRE-HEAT SW.
SEE P. 26.1
C584
2
1
PNEUMATIC HORN
C581
B
0-52B-18
CENTER HORN BUTTON
LEFT HORN BUTTON
RIGHT HORN BUTTON
0-0J-18
C581
A
0-53-20
C101
A
12-52A-14
ELECTRICAL
HORNS
C101
B
0-0M4-14
R12
86
85
87
30
87A
C71
22
0-20
C4
5
14
C523
8
12-52-14
F3
20A
C523
1
12-12F-12
12V POWER
FROM FR.JCT.BOX
SEE P. 2.1
F4
5A
C523
7
24-123A-18
C523
2
24-24D-14
24V HOT WIRE
FROM FR.JCT.BOX
SEE P. 1.1
TO DIGITAL CLOCK
SEE P. 14.1
24-123A-18
C340
1
RS17
220 OHMS
RED
PIEZO
BLK
TO FIRE ALARM T.T.L.T.
MODULE C571 (12) SEE P. 28
C71
4
C340
2
0-123B-18
C6
4
C20
22
0-123B-18
BATT. CMPT.
C221
1
SENSOR
C221
2
0A-18
RS
PRE HEATER CMPT.
C219
1
SENSOR
C219
2
ENG. CMPT.
C222
1
SENSOR
C222
2
ENG. CMPT.
C223
1
SENSOR
C223
2
0P-18
0-123B-18
C91
3
C91
55
0XA-18
RS
ALARM AND SIGNAL
C582
A
B
TO TTLT WINDOW AJAR
C572 (11) SEE PAGE. 28.1
0T2
RS
C603
1
2
C601
2
1
0-260-20
0-0T2-20
0-0T2-20
0-260-20
C602
2
1
MAGNETIC SWITCH
N.C. - WINDOW OPEN
ONLY ON H3-45
R.H.
L.H.
WINDOW AJAR

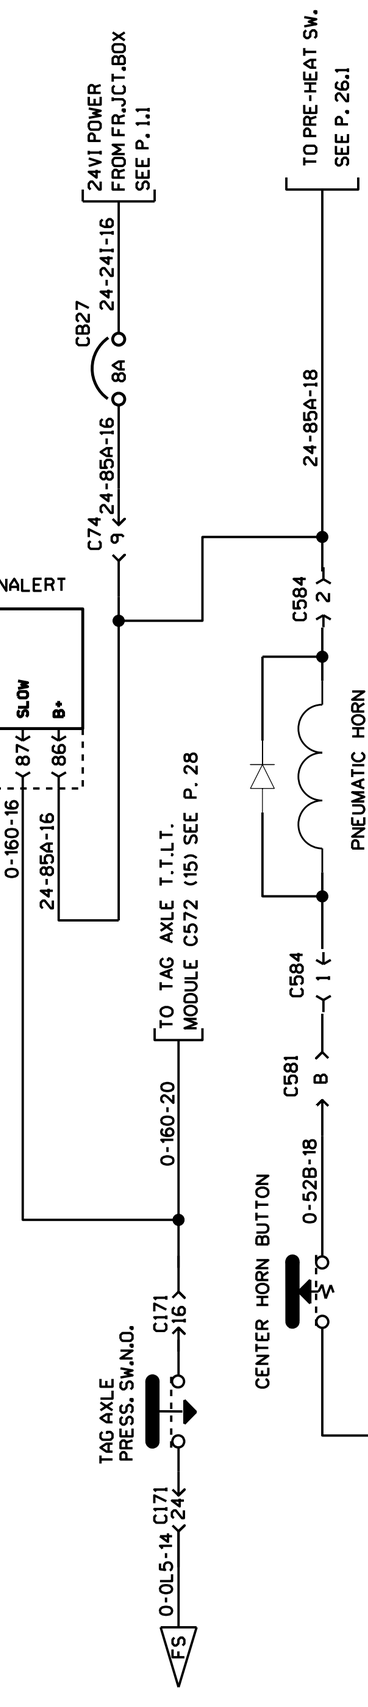

ALARM AND SIGNAL

WINDOW AJAR

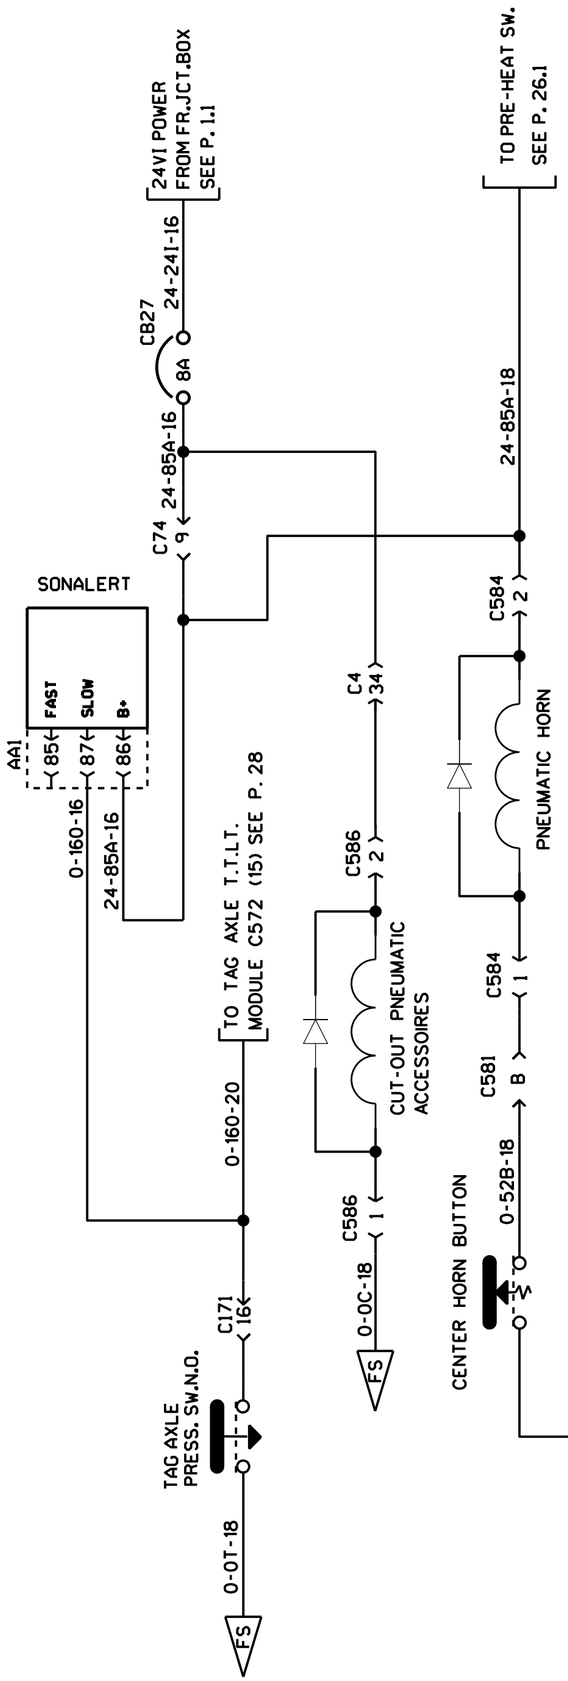

ALARM AND SIGNAL

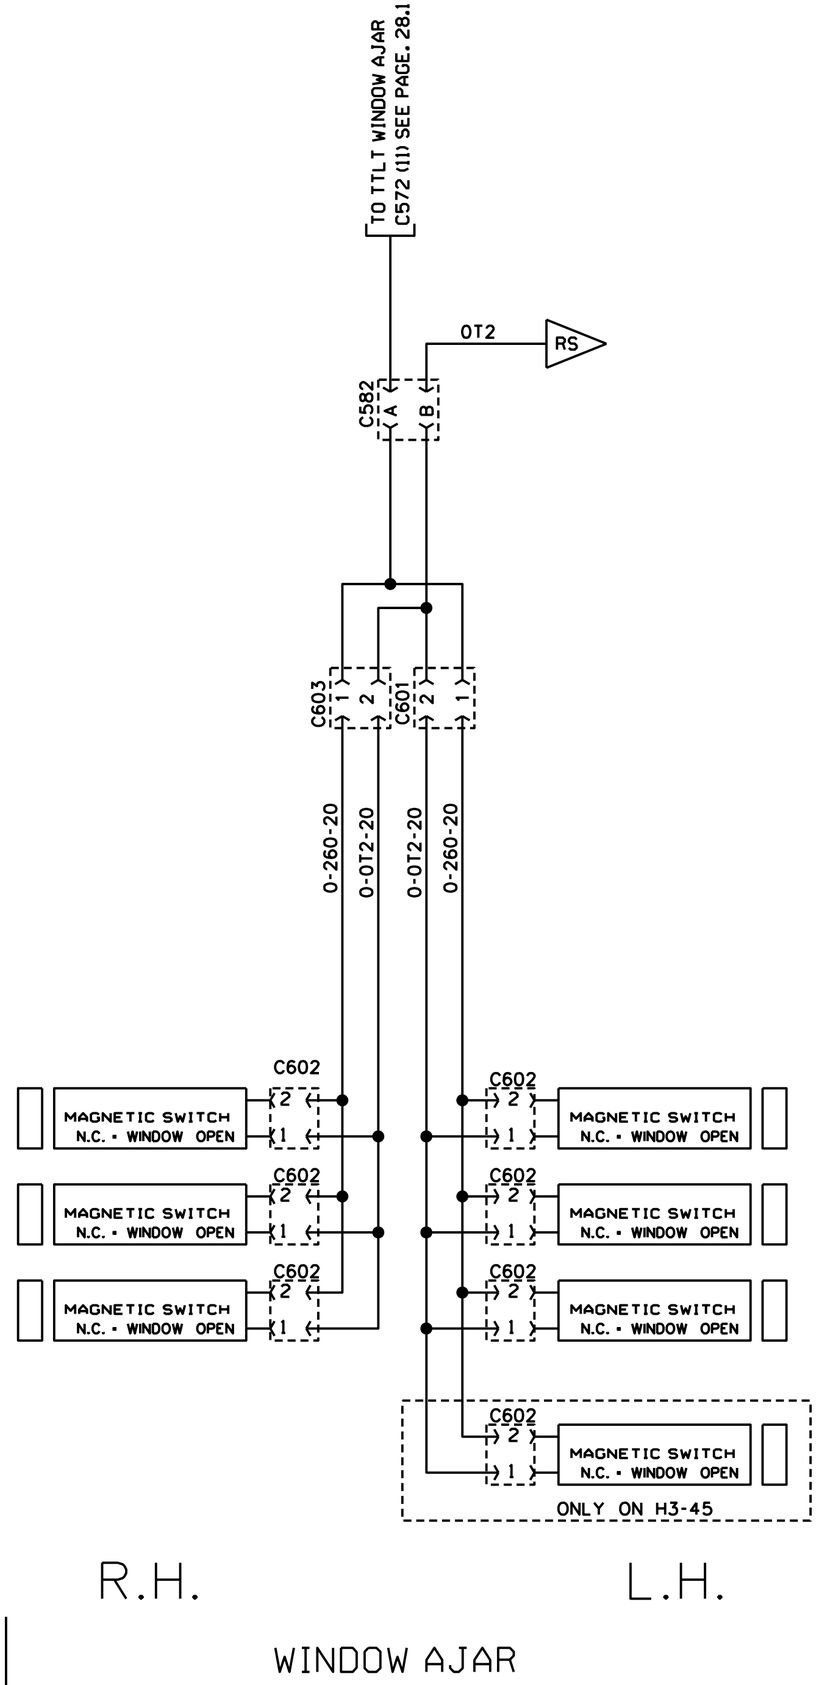

R.H. L.H.

WINDOW AJAR

CUT-OUT PNEU. ACC.

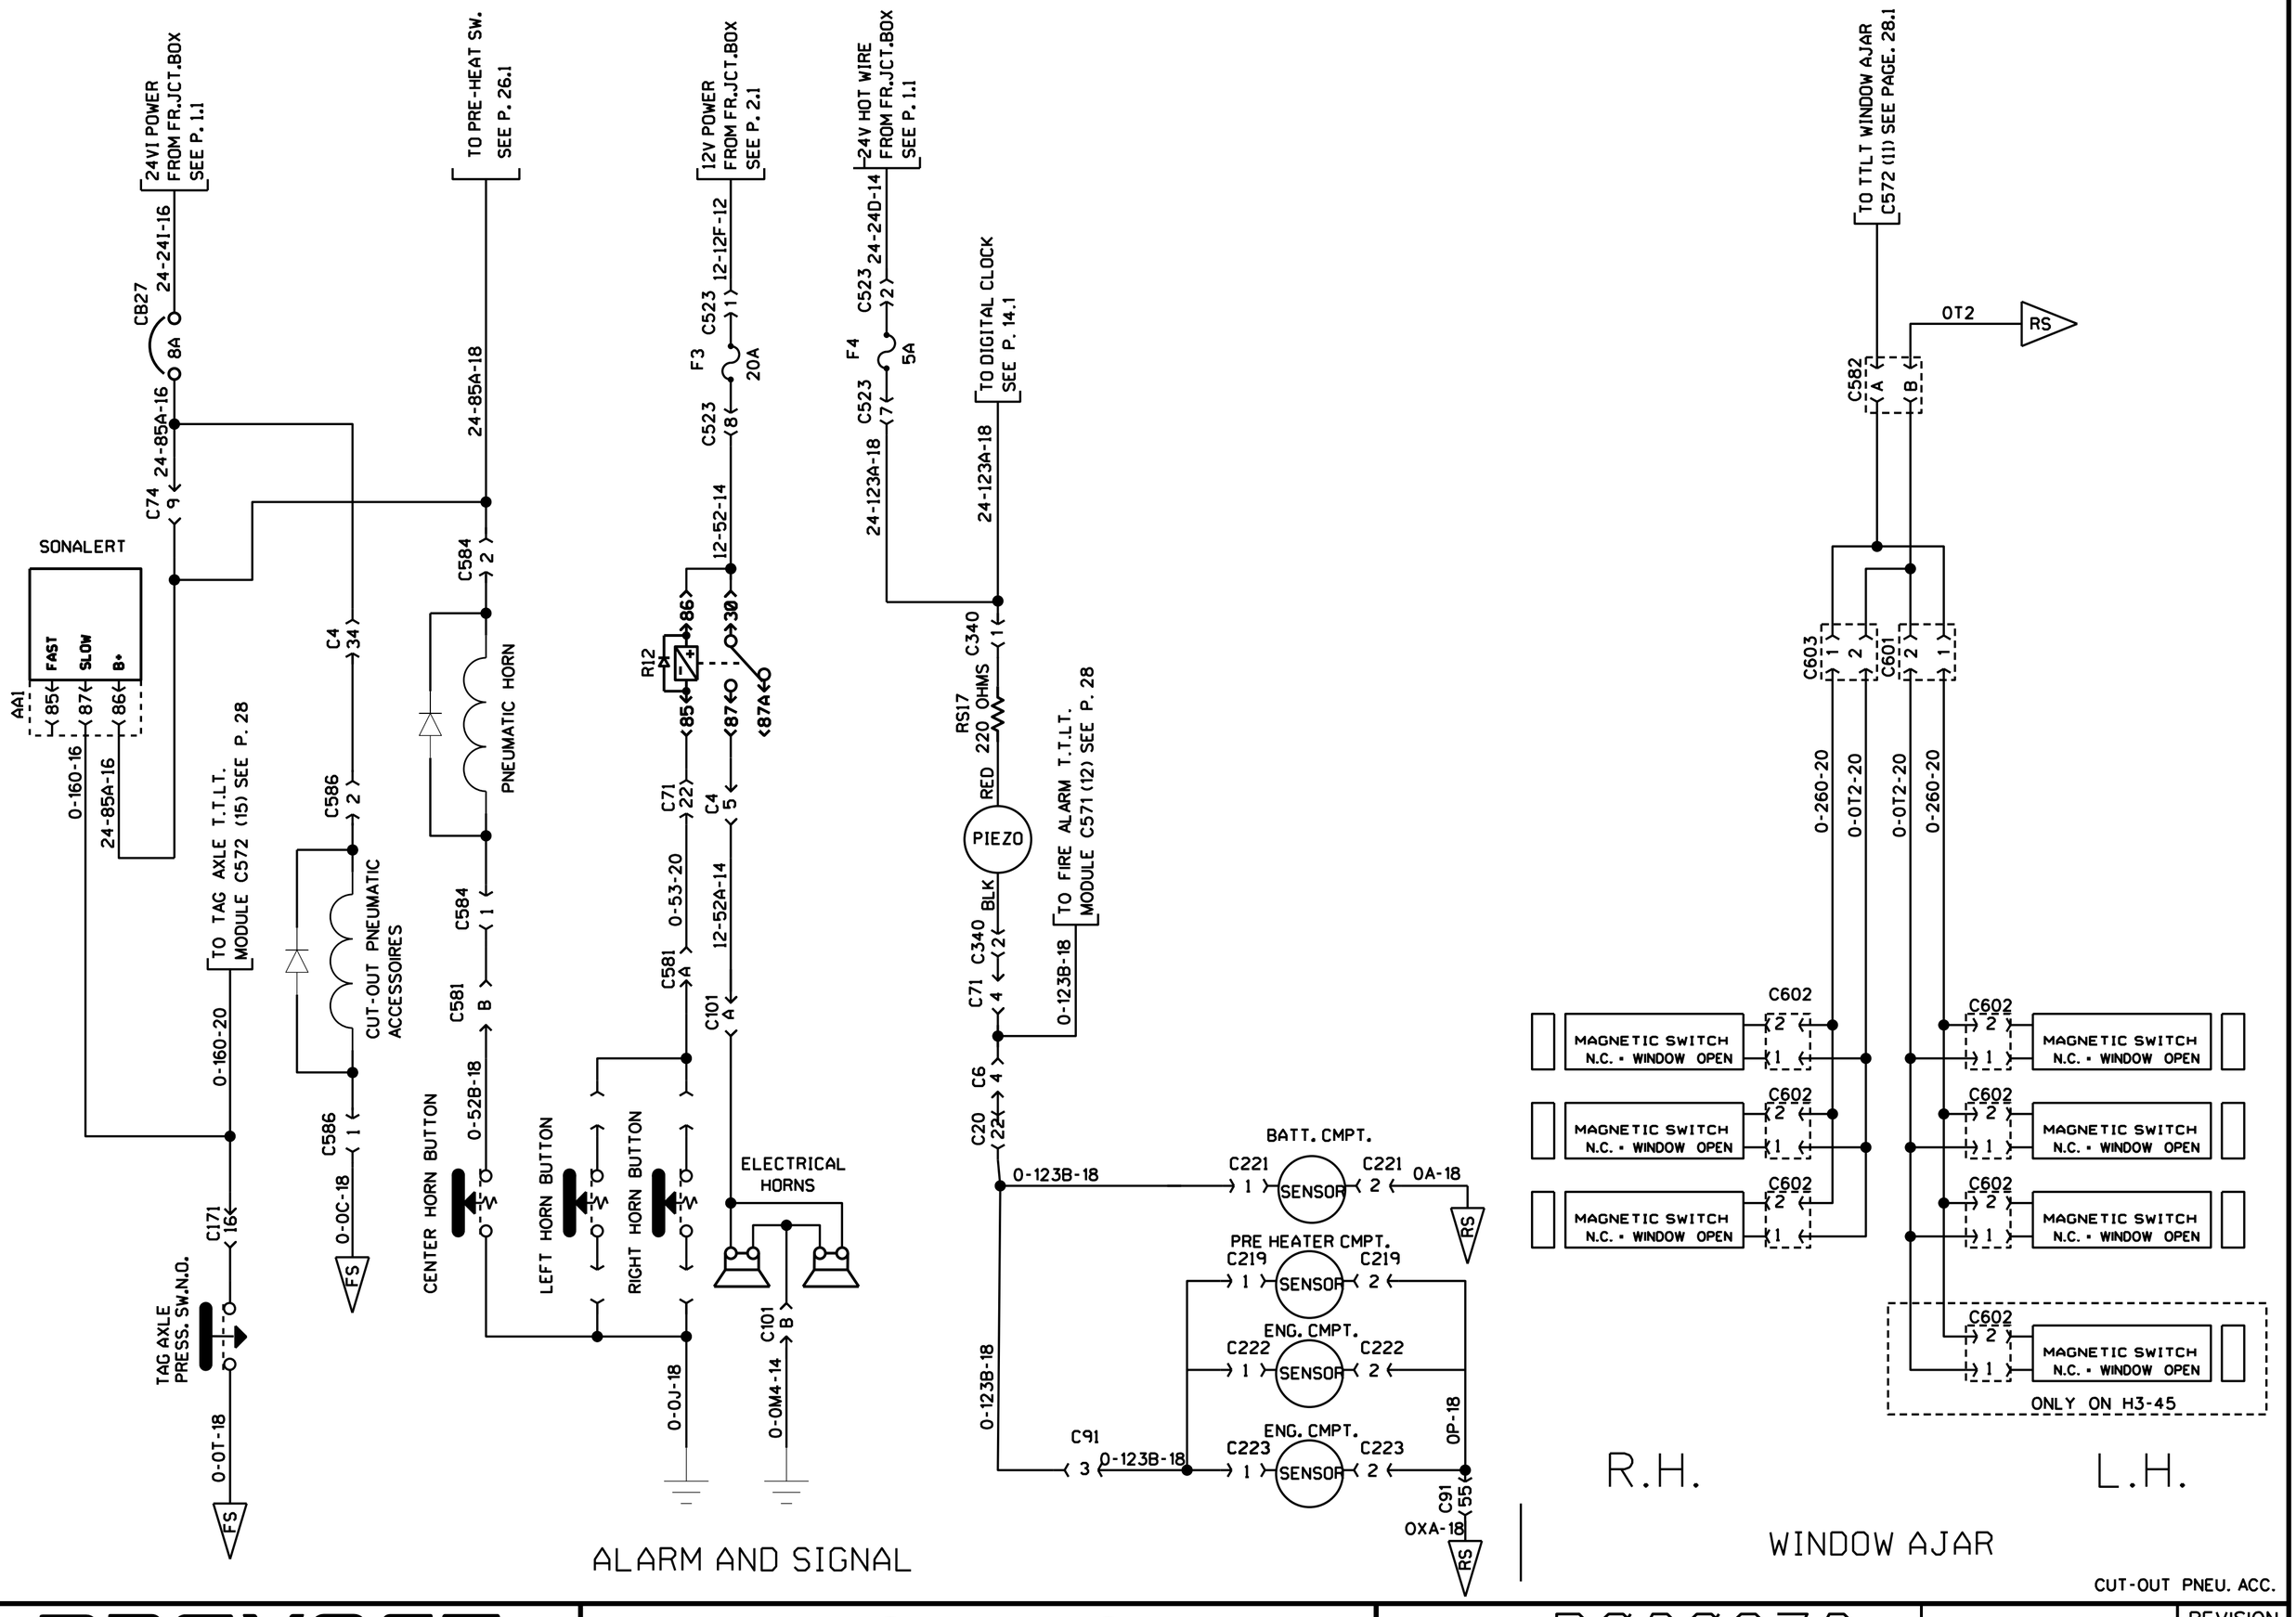
SONALERT
AA1
FAST
SLOW
B+
85
87
86
0-160-16
24-85A-16
24-85A-16
C74
9
24-85A-16
CB27
8A
24-241-16
24VI POWER
FROM FR.JCT.BOX
SEE P. 1.1
24-85A-18
TO PRE-HEAT SW.
SEE P. 26.1
C584
2
C4
34
TO TAG AXLE T.T.L.T.
MODULE C572 (15) SEE P. 28
0-160-20
C171
16
TAG AXLE
PRESS. SW.N.O.
0-0T-18
FS
C586
2
CUT-OUT PNEUMATIC
ACCESSOIRES
C586
1
0-0C-18
FS
PNEUMATIC HORN
C584
1
C581
B
0-52B-18
CENTER HORN BUTTON
LEFT HORN BUTTON
RIGHT HORN BUTTON
0-0J-18
C581
A
0-53-20
C71
22
C4
5
12-52A-14
C101
A
ELECTRICAL
HORNS
C101
B
0-0M4-14
R12
86
85
87
30
87A
12-52-14
C523
8
F3
20A
C523
1
12-12F-12
12V POWER
FROM FR.JCT.BOX
SEE P. 2.1
24-123A-18
C523
7
F4
5A
C523
2
24-24D-14
24V HOT WIRE
FROM FR.JCT.BOX
SEE P. 1.1
24-123A-18
C340
1
TO DIGITAL CLOCK
SEE P. 14.1
RS17
220 OHMS
RED
PIEZO
BLK
C340
2
C71
4
TO FIRE ALARM T.T.L.T.
MODULE C571 (12) SEE P. 28
0-123B-18
C6
4
C20
22
0-123B-18
BATT. CMPT.
C221
1
SENSOR
C221
2
0A-18
RS
PRE HEATER CMPT.
C219
1
SENSOR
C219
2
ENG. CMPT.
C222
1
SENSOR
C222
2
0-123B-18
C91
3
ENG. CMPT.
C223
1
SENSOR
C223
2
0P-18
C91
55
OXA-18
RS
TO TTLT WINDOW AJAR
C572 (11) SEE PAGE. 28.1
OT2
RS
C582
A
B
C603
1
2
C601
2
1
0-260-20
0-0T2-20
0-0T2-20
0-260-20
C602
2
1
MAGNETIC SWITCH
N.C. - WINDOW OPEN
ONLY ON H3-45
R.H.
L.H.
ALARM AND SIGNAL
WINDOW AJAR
CUT-OUT PNEU. ACC.

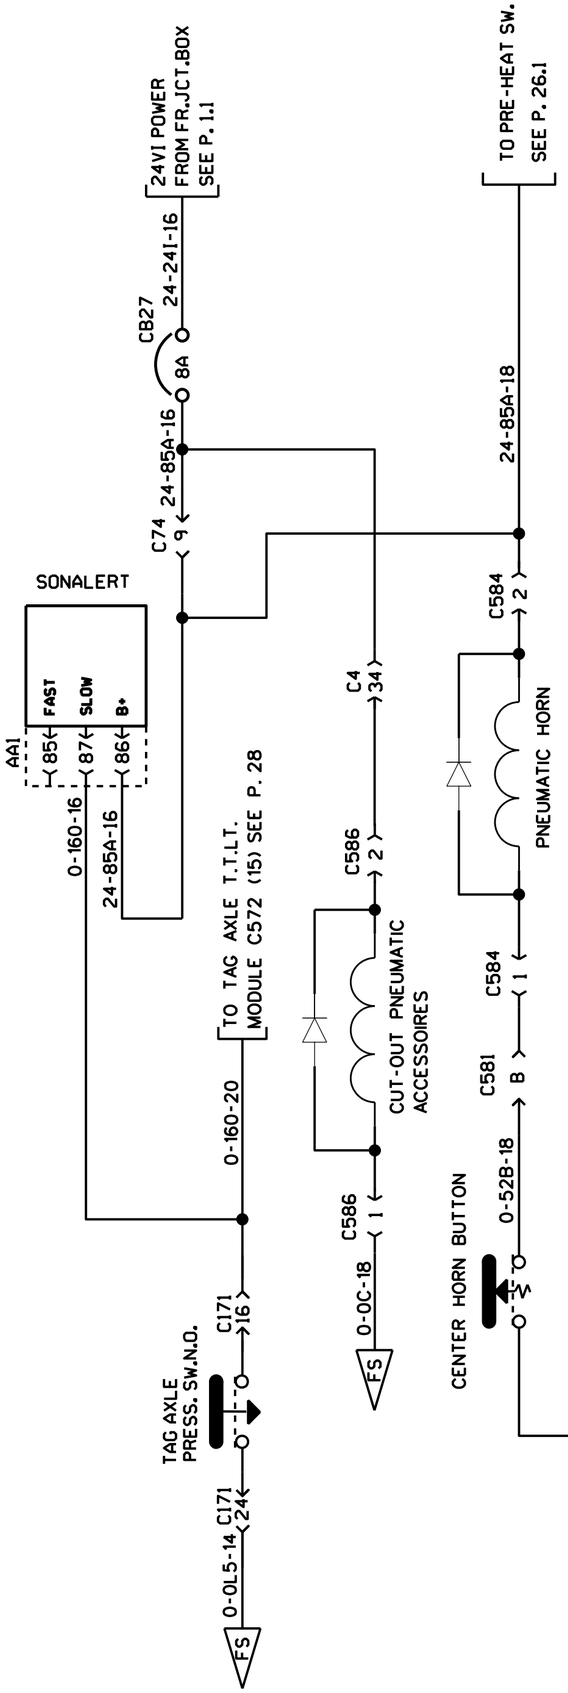
SONALERT
AA1
85
87
86
FAST
SLOW
B+
0-160-16
24-85A-16
24VI POWER
FROM FR.JCT.BOX
SEE P. 1.1
CB27
24-241-16
8A
C74
9
24-85A-18
TO PRE-HEAT SW.
SEE P. 26.1
C584
2
C4
34
TO TAG AXLE T.T.L.T.
MODULE C572 (15) SEE P. 28
0-160-20
C586
2
CUT-OUT PNEUMATIC
ACCESSOIRES
C586
1
0-0C-18
FS
C171
16
TAG AXLE
PRESS. SW.N.O.
C171
24
0-0L5-14
FS
PNEUMATIC HORN
C584
1
C581
B
0-52B-18
CENTER HORN BUTTON
LEFT HORN BUTTON
RIGHT HORN BUTTON
0-0J-18
C581
A
0-53-20
C71
22
C4
5
C101
A
12-52A-14
ELECTRICAL
HORNS
C101
B
0-0M4-14
F3
C523
1
12-12F-12
20A
12V POWER
FROM FR.JCT.BOX
SEE P. 2.1
C523
8
12-52-14
R12
85
86
87
30
87A
F4
C523
2
24-24D-14
5A
24V HOT WIRE
FROM FR.JCT.BOX
SEE P. 1.1
C523
7
24-123A-18
TO DIGITAL CLOCK
SEE P. 14.1
24-123A-18
C340
1
RS17
220 OHMS
RED
PIEZO
BLK
C340
2
TO FIRE ALARM T.T.L.T.
MODULE C571 (12) SEE P. 28
C71
4
0-123B-18
C6
4
C20
22
0-123B-18
BATT. CMPT.
C221
1
SENSOR
C221
2
0A-18
RS
PRE HEATER CMPT.
C219
1
SENSOR
C219
2
ENG. CMPT.
C222
1
SENSOR
C222
2
0P-18
C91
3
0-123B-18
ENG. CMPT.
C223
1
SENSOR
C223
2
C91
55
0XA-18
RS
ALARM AND SIGNAL
TO TTLT WINDOW AJAR
C572 (11) SEE PAGE. 28.1
OT2
RS
C582
A
B
C603
1
2
C601
2
1
0-260-20
0-OT2-20
0-OT2-20
0-260-20
C602
2
1
MAGNETIC SWITCH
N.C. - WINDOW OPEN
ONLY ON H3-45
R.H.
L.H.
WINDOW AJAR
CUT-OUT PNEU. ACC.

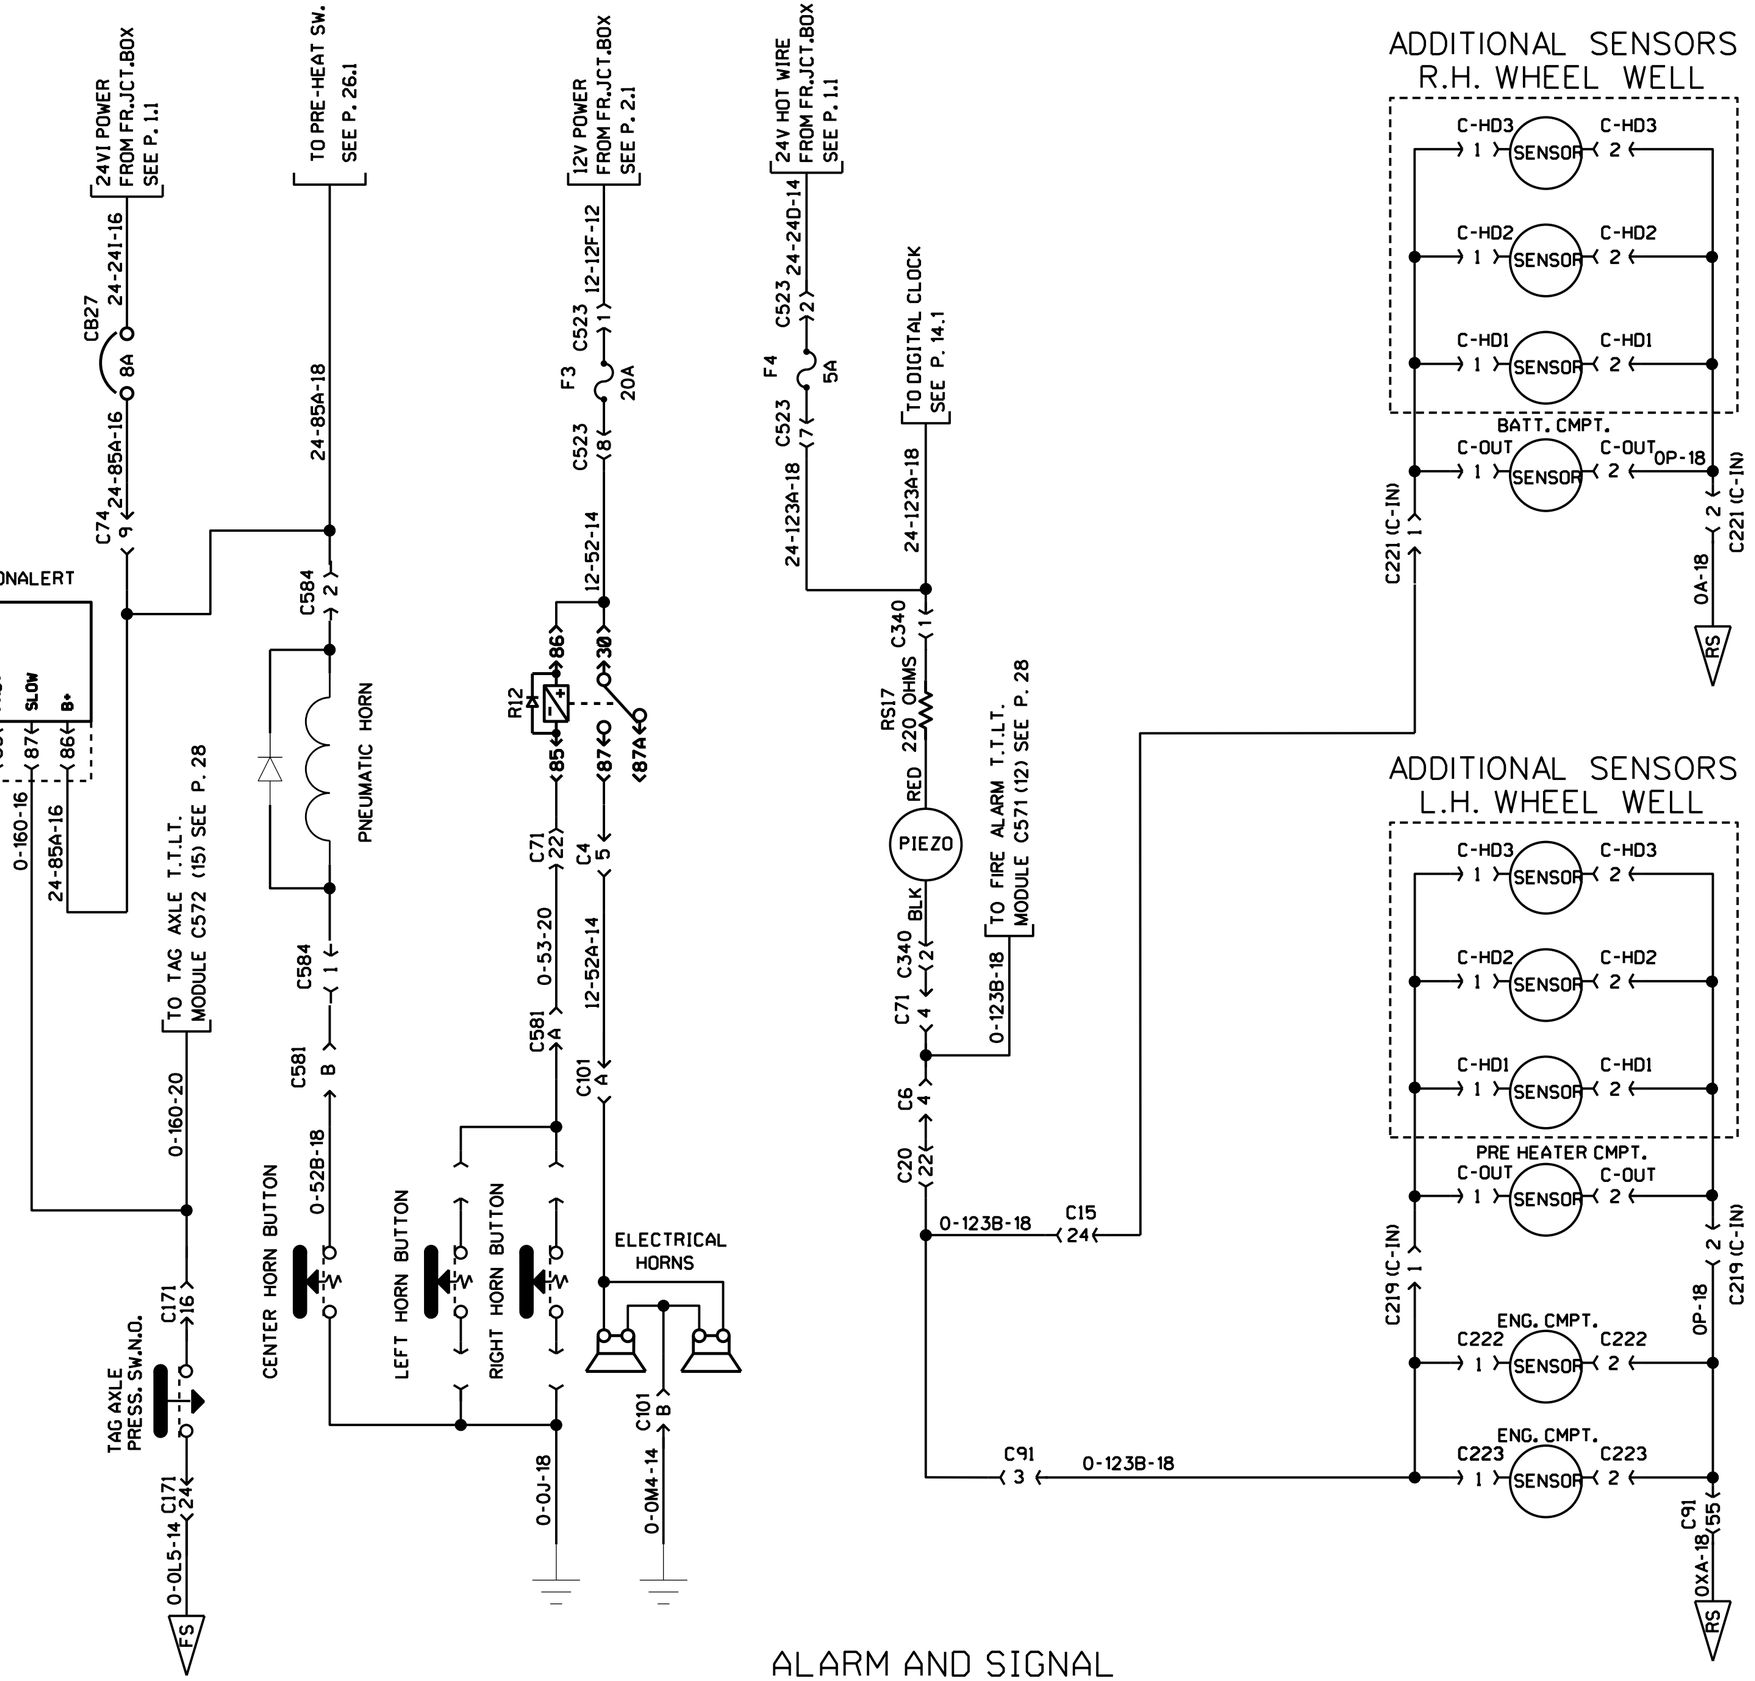

ALARM AND SIGNAL

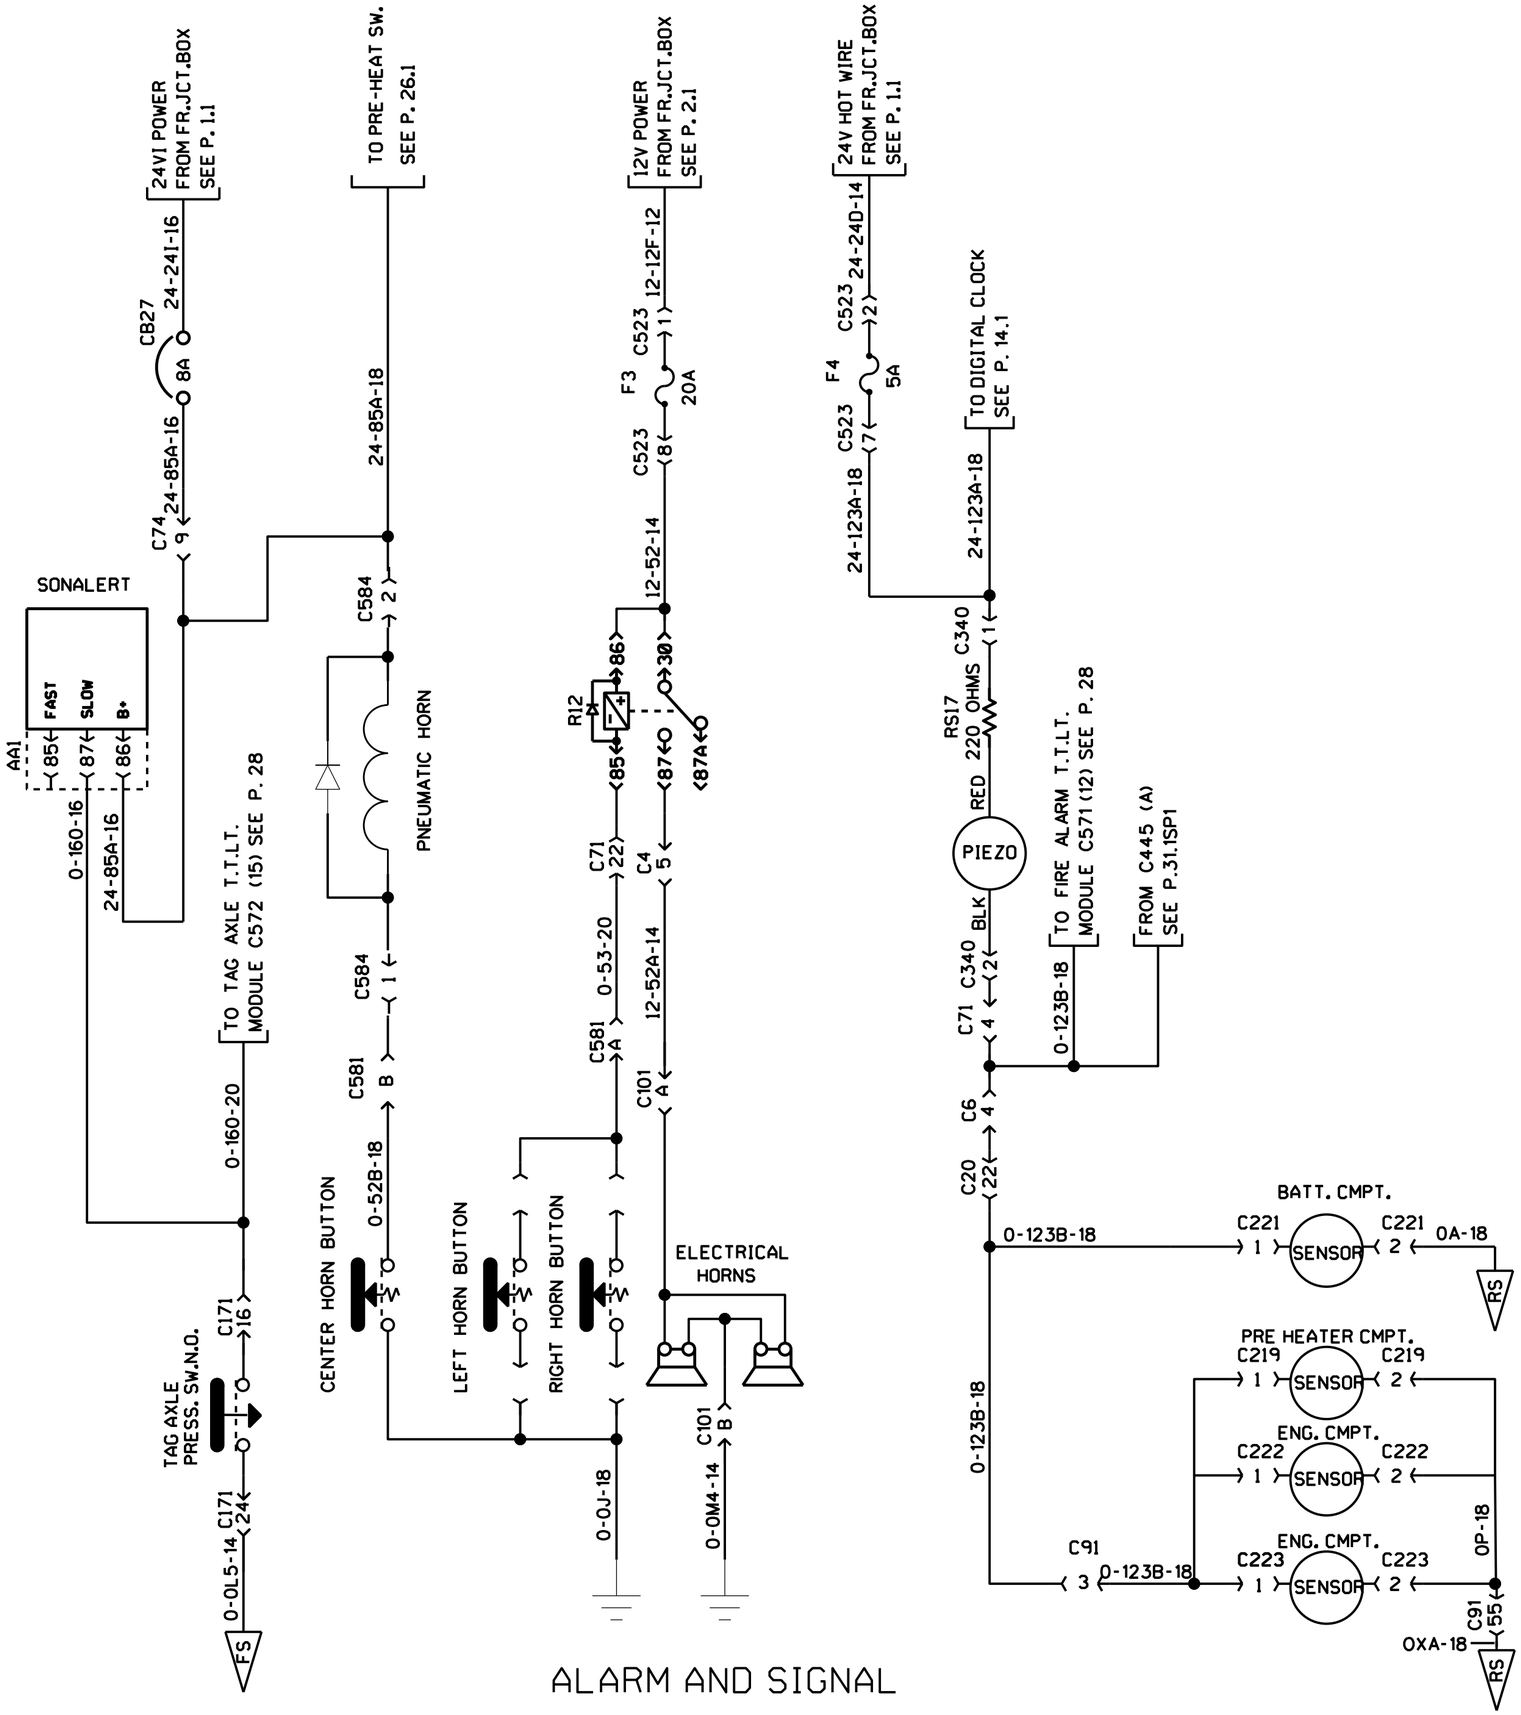

ALARM AND SIGNAL

PREVOST

WIRING DIAGRAM

FUEL WATER FILTER

ETHER COLD START

PARKING BRAKE SWITCH

RADIATOR FAN CLUTCH

PRODRIVER

NO: D060976

PAGE: 8.1

REVISION 00

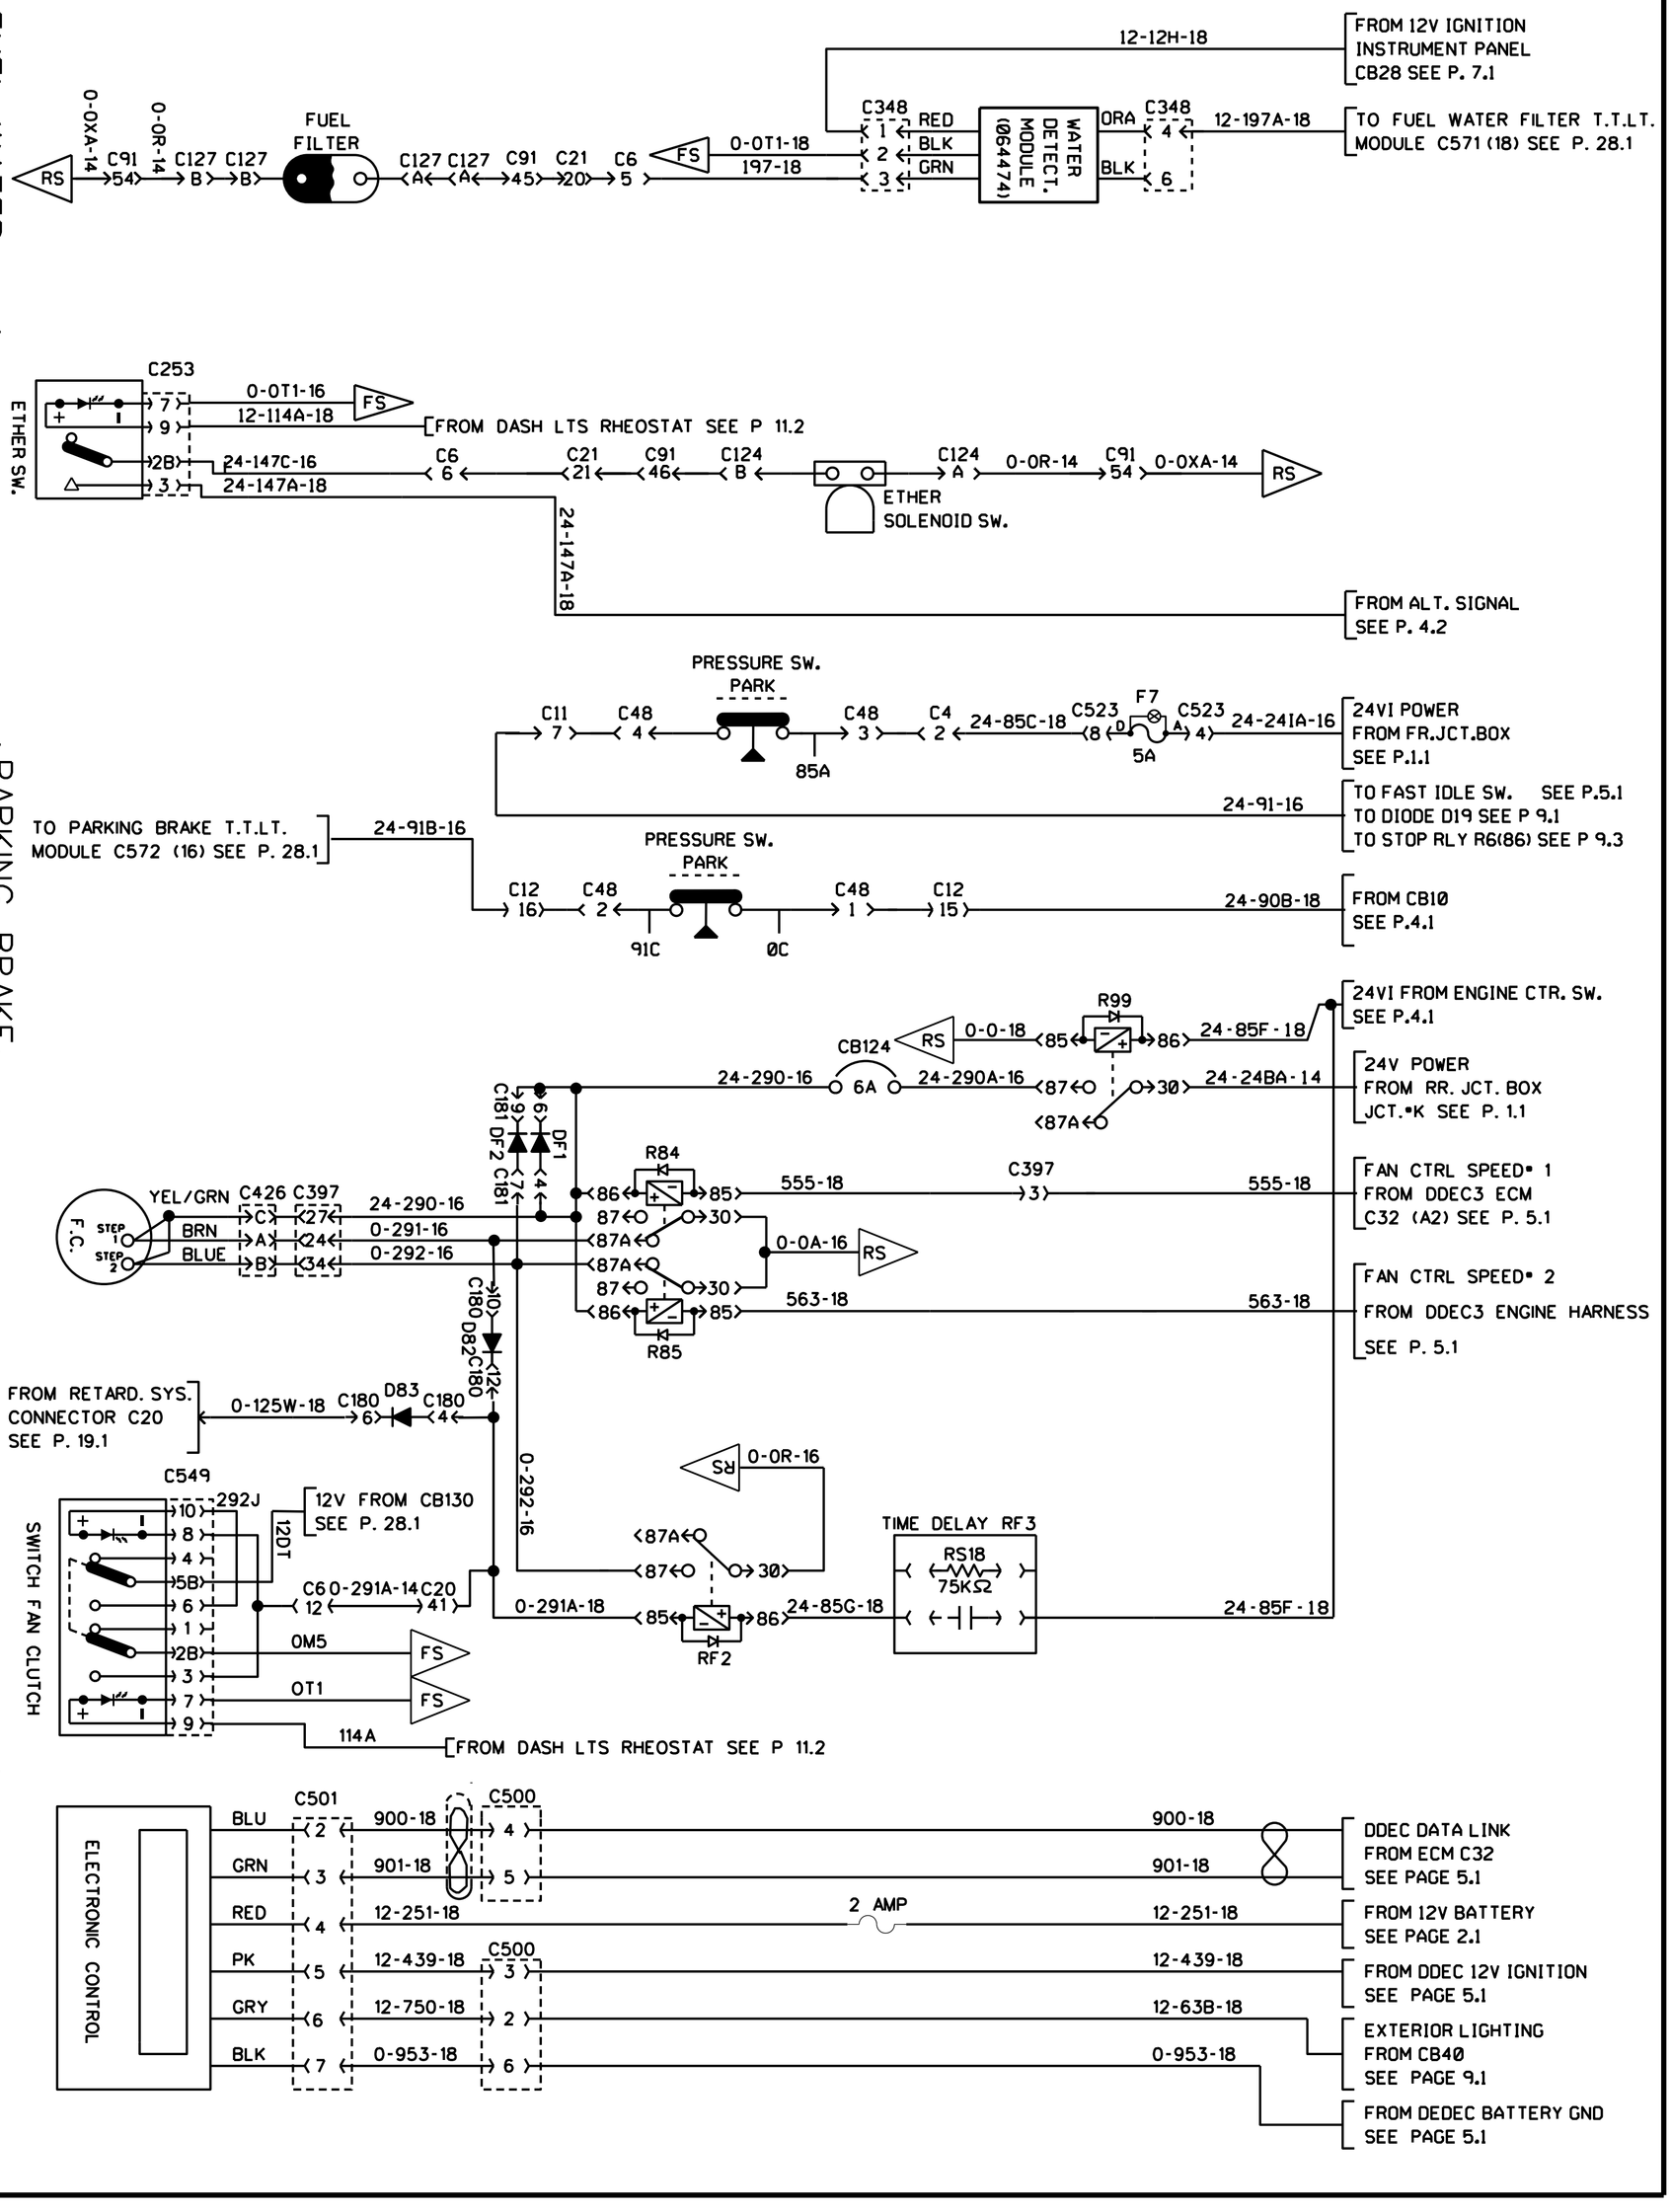

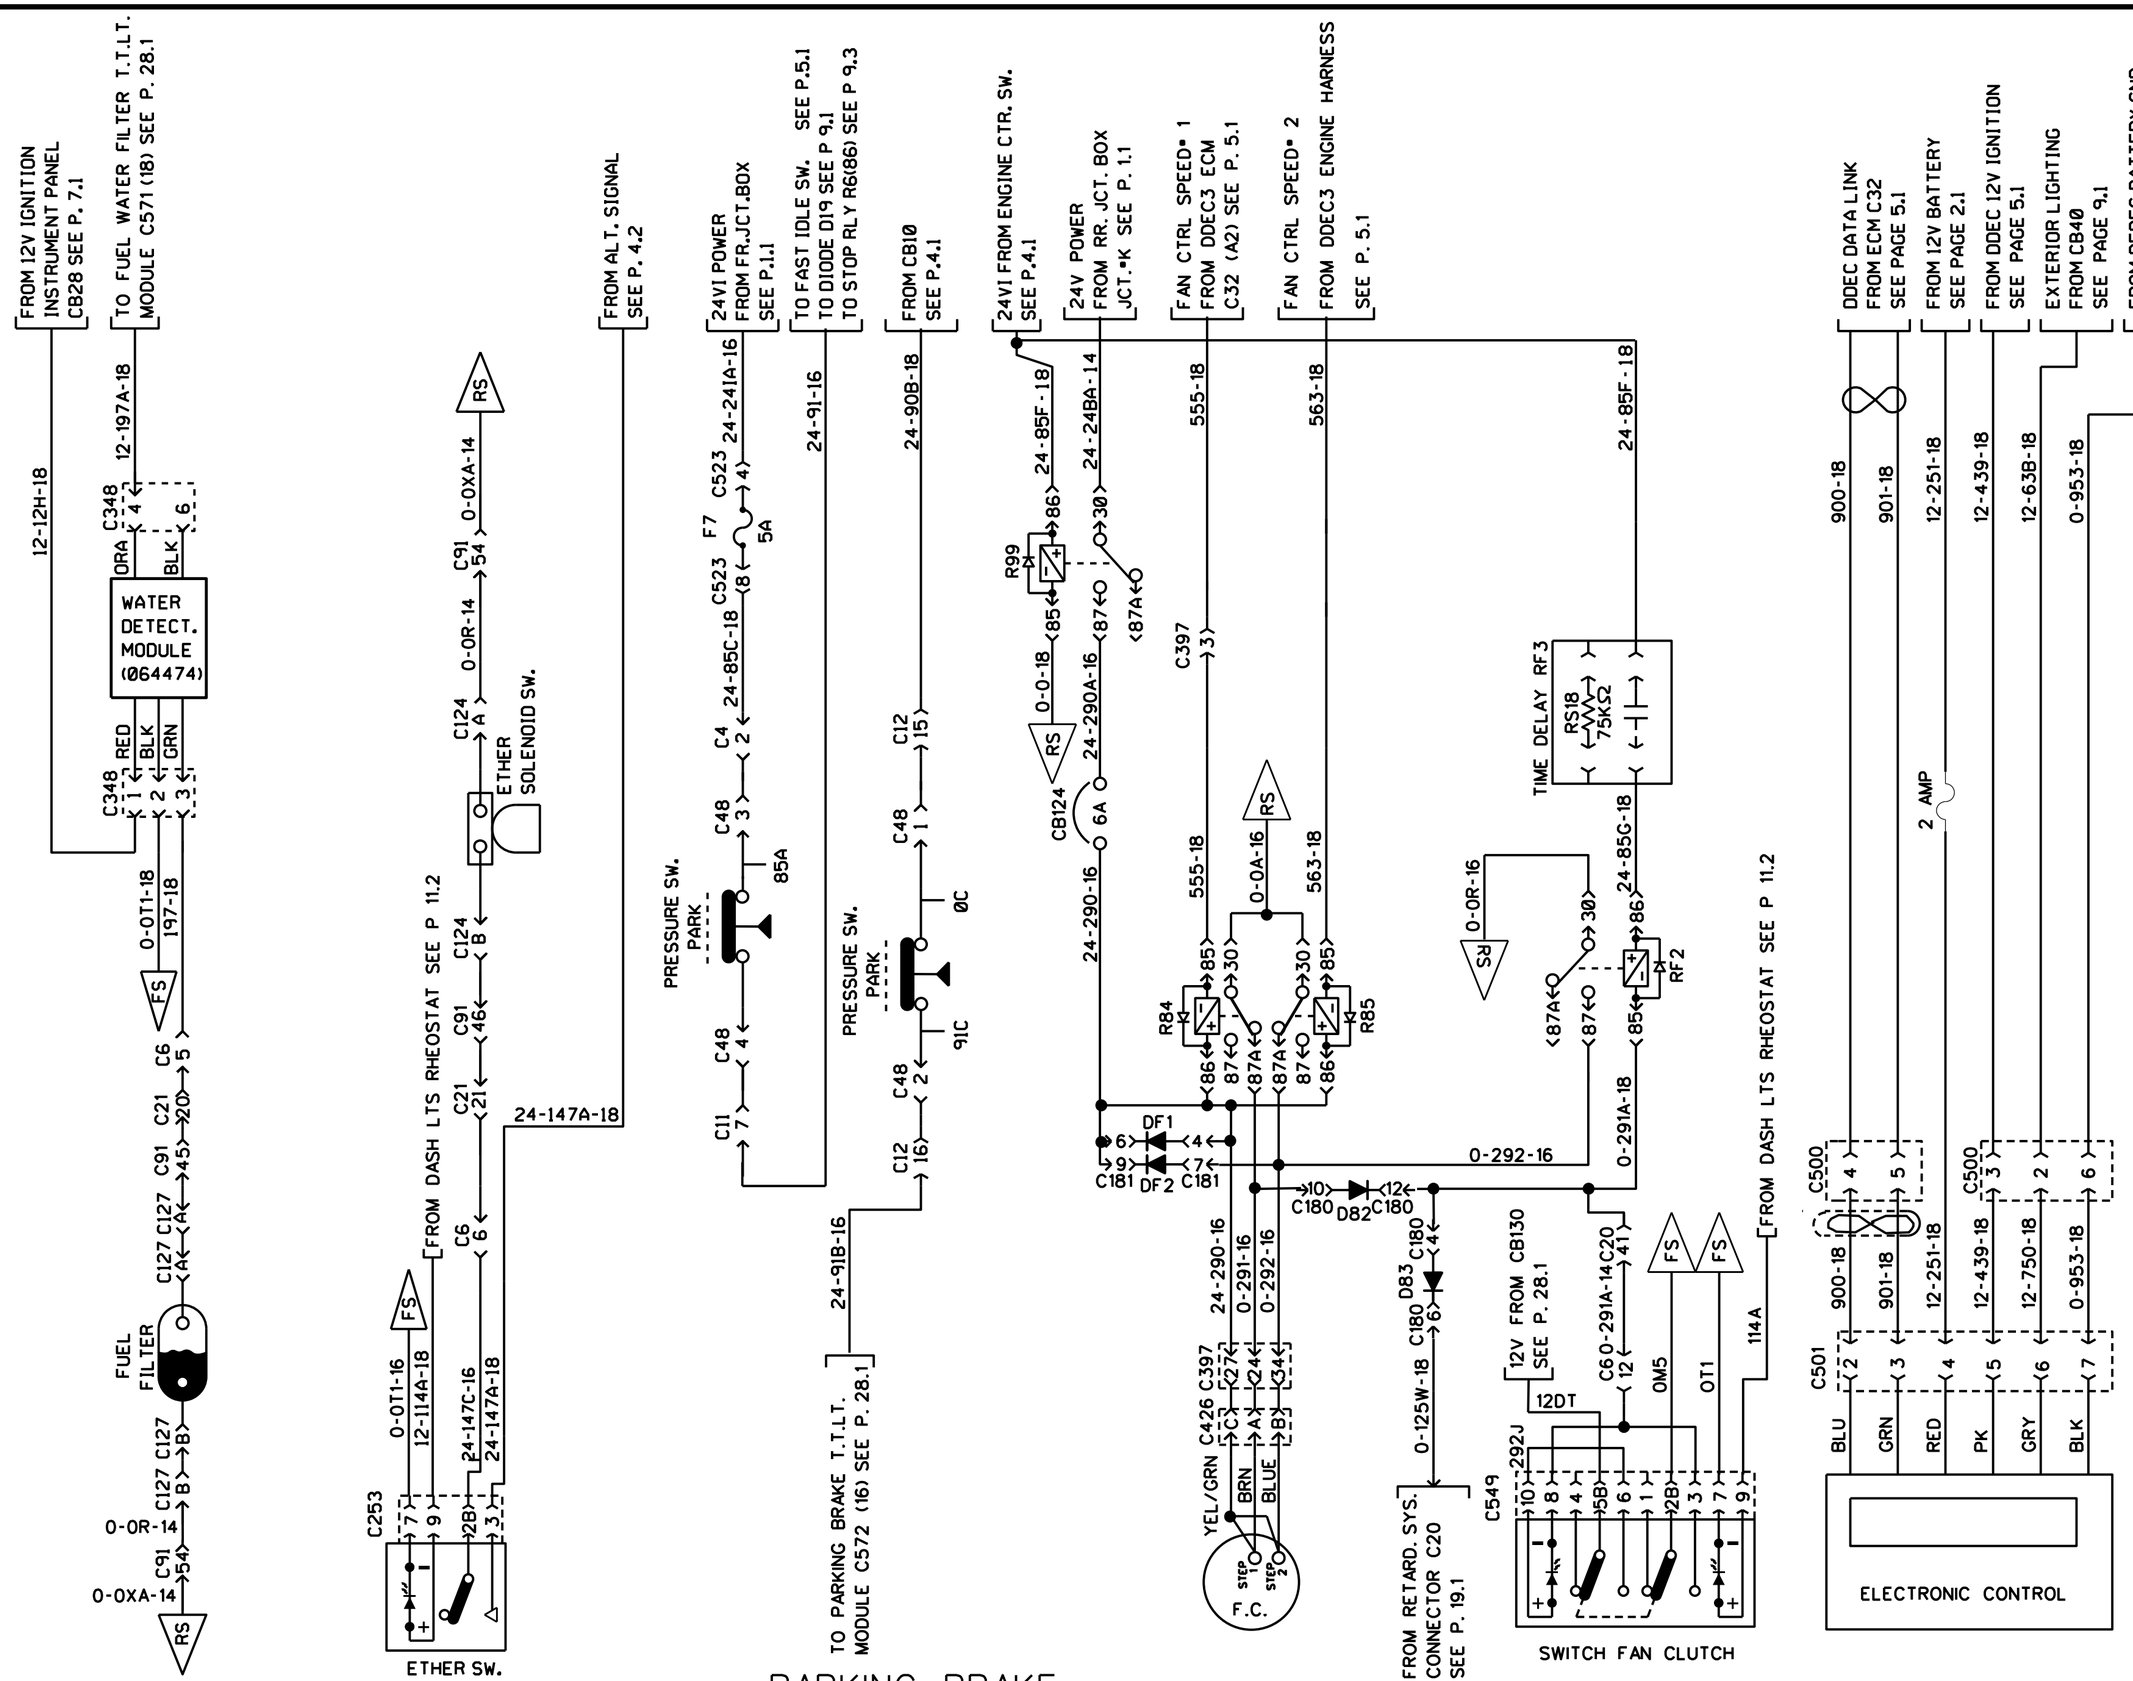

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 8.1	REVISION 04

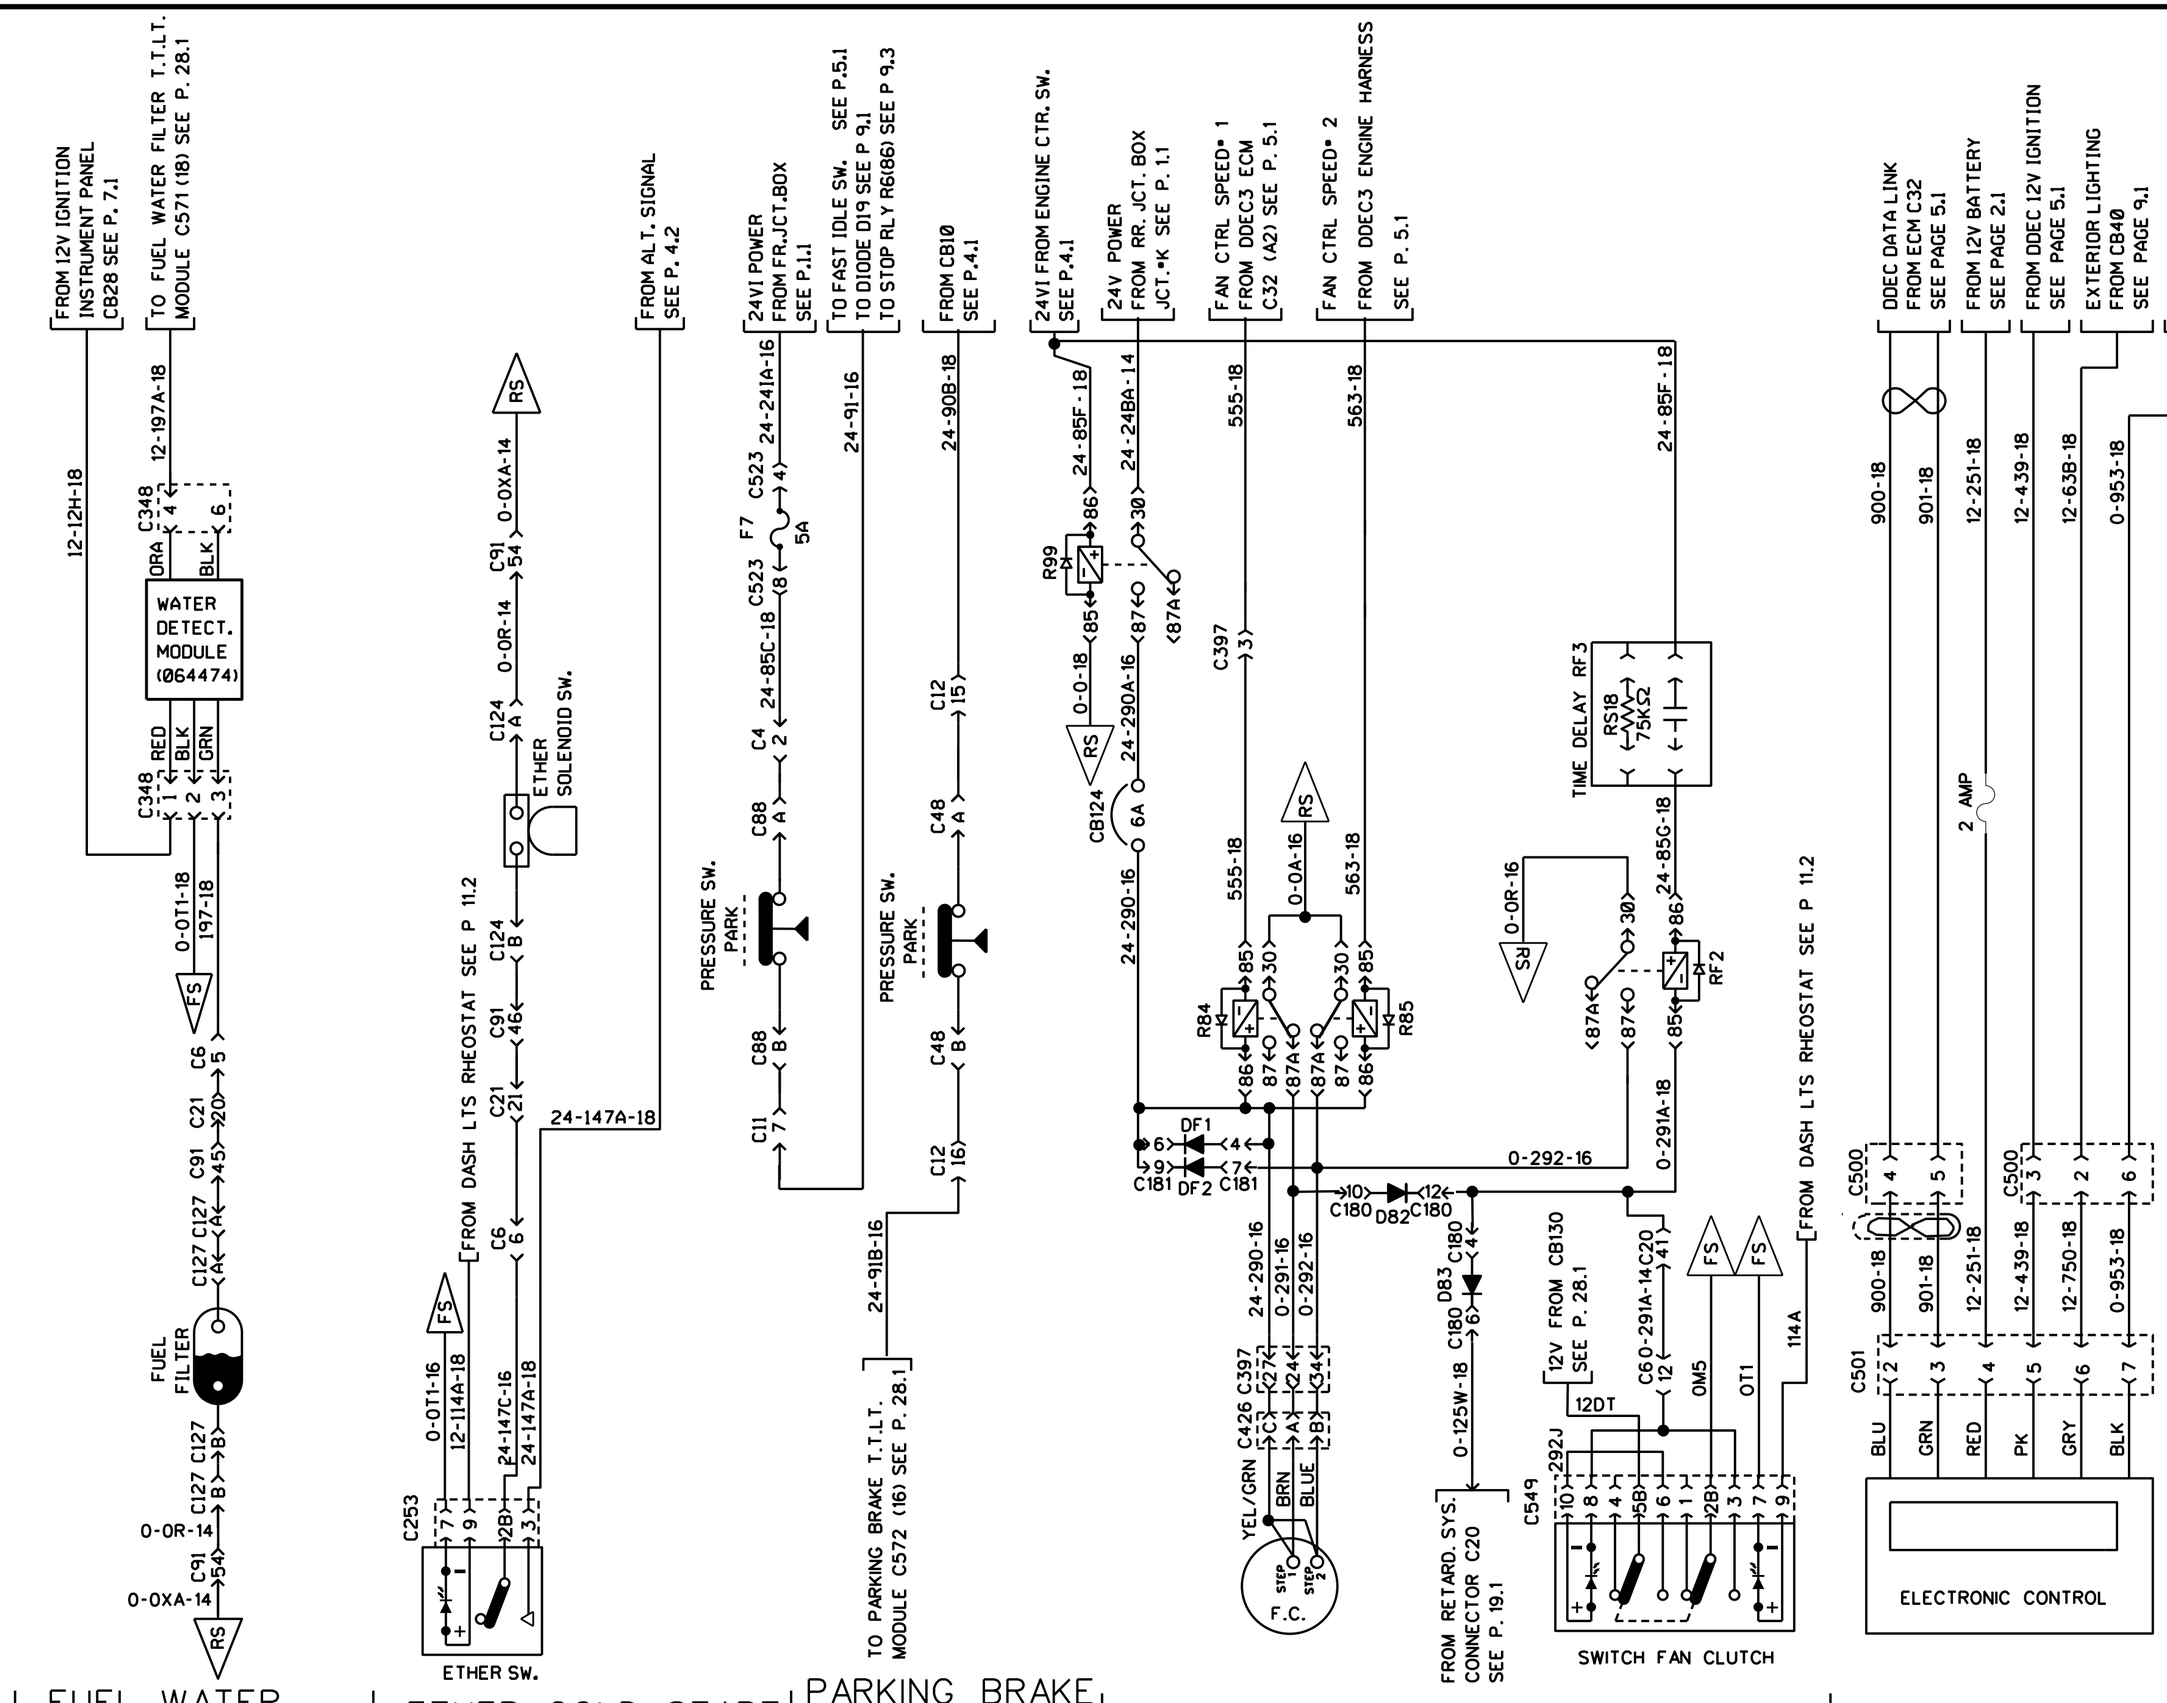
FROM 12V IGNITION
INSTRUMENT PANEL
CB28 SEE P. 7.1
TO FUEL WATER FILTER T.T.L.T.
MODULE C571 (18) SEE P. 28.1
12-12H-18
12-197A-18
C348
ORA
BLK
WATER
DETECT.
MODULE
(064474)
RED
BLK
GRN
0-0T1-18
197-18
FS
FUEL
FILTER
0-0R-14
0-0XA-14
RS
FUEL WATER
FILTER
FROM ALT. SIGNAL
SEE P. 4.2
C124
0-0R-14
C91
0-0XA-14
ETHER
SOLENOID SW.
FROM DASH LTS RHEOSTAT SEE P 11.2
0-0T1-16
12-114A-18
24-147C-16
24-147A-18
C253
ETHER SW.
ETHER COLD START
PRESSURE SW.
PARK
TO PARKING BRAKE T.T.L.T.
MODULE C572 (16) SEE P. 28.1
24-91B-16
PARKING BRAKE
SWITCH
24VI POWER
FROM FR.JCT.BOX
SEE P.1.1
C523
24-241A-16
F7
5A
TO FAST IDLE SW. SEE P.5.1
TO DIODE D19 SEE P 9.1
TO STOP RLY R6(86) SEE P 9.3
24-91-16
FROM CB10
SEE P.4.1
24-90B-18
C88
C4
24-85C-18
C48
C12
24VI FROM ENGINE CTR. SW.
SEE P.4.1
24-85F-18
R99
CB124
24-290A-16
24-290-16
24V POWER
FROM RR. JCT. BOX
JCT.•K SEE P. 1.1
24-24BA-14
FAN CTRL SPEED• 1
FROM DDEC3 ECM
C32 (A2) SEE P. 5.1
555-18
C397
0-0A-16
FAN CTRL SPEED• 2
FROM DDEC3 ENGINE HARNESS
SEE P. 5.1
563-18
TIME DELAY RF3
RS18
75KΩ
24-85G-18
24-85F-18
R84
R85
RF1
RF2
DF1
DF2
C181
C180
D82
D83
0-292-16
0-291A-18
0-0R-16
0-125W-18
FROM RETARD. SYS.
CONNECTOR C20
SEE P. 19.1
12V FROM CB130
SEE P. 28.1
12DT
C549
C292J
C60-291A-14C20
0M5
0T1
114A
FROM DASH LTS RHEOSTAT SEE P 11.2
YEL/GRN
BRN
BLUE
C426 C397
F.C.
STEP 1
STEP 2
SWITCH FAN CLUTCH
RADIATOR FAN CLUTCH
DDEC DATA LINK
FROM ECM C32
SEE PAGE 5.1
900-18
901-18
FROM 12V BATTERY
SEE PAGE 2.1
12-251-18
2 AMP
FROM DDEC 12V IGNITION
SEE PAGE 5.1
12-439-18
12-63B-18
EXTERIOR LIGHTING
FROM CB40
SEE PAGE 9.1
0-953-18
FROM DEDEC BATTERY GND
SEE PAGE 5.1
12-750-18
C500
C501
BLU
GRN
RED
PK
GRY
BLK
ELECTRONIC CONTROL
PRODRIVER

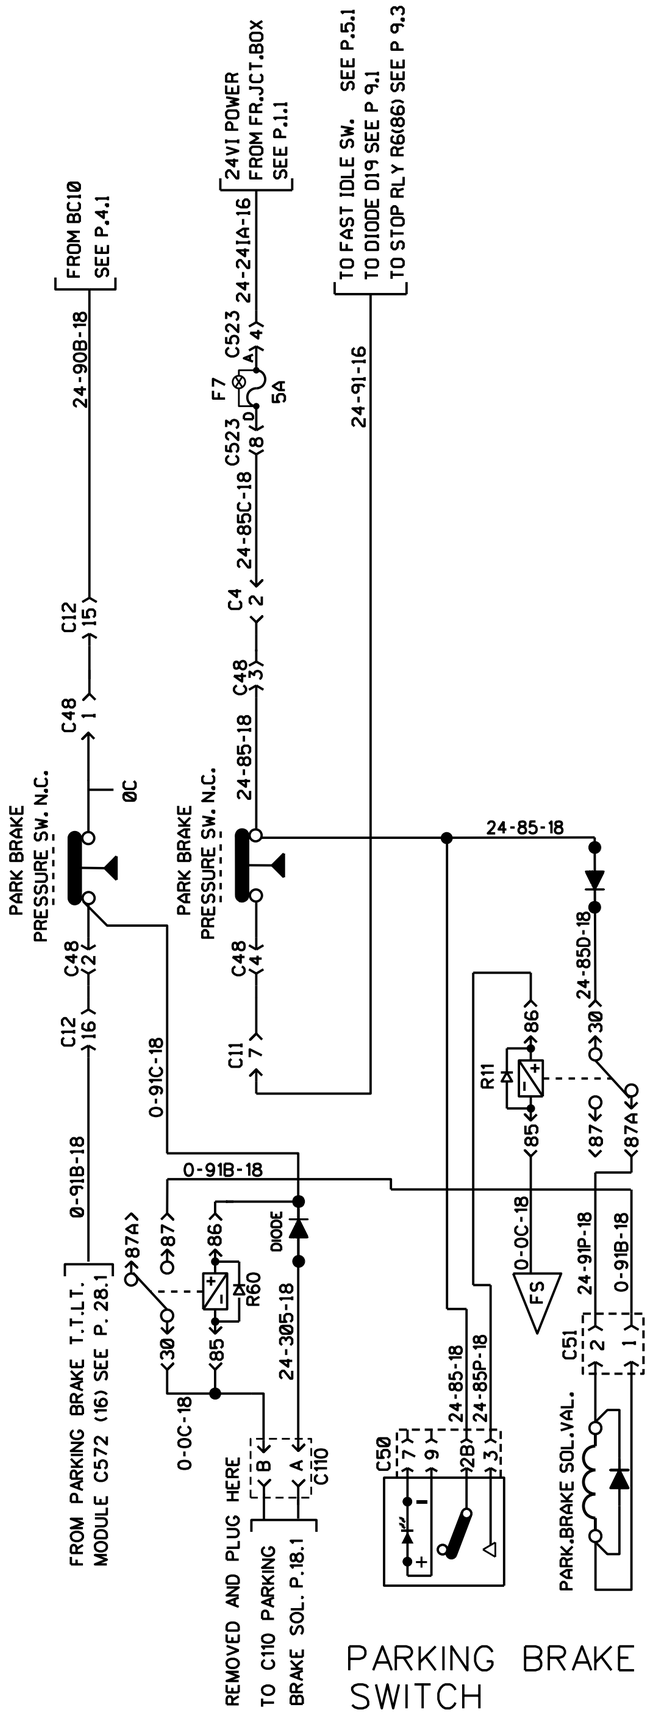

PARKING BRAKE SWITCH

PARKING BRAKE SAFETY SWITCH WITH WCL

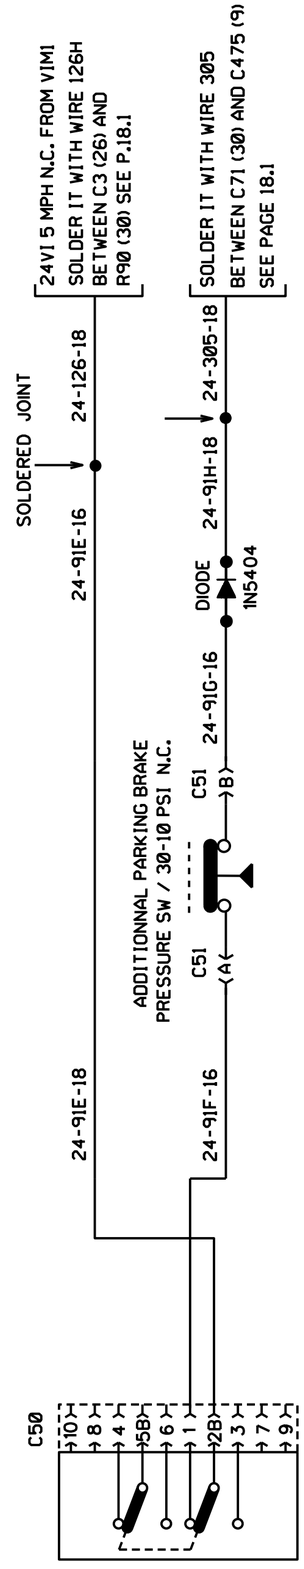

PARKING BRAKE
SAFETY SWITCH

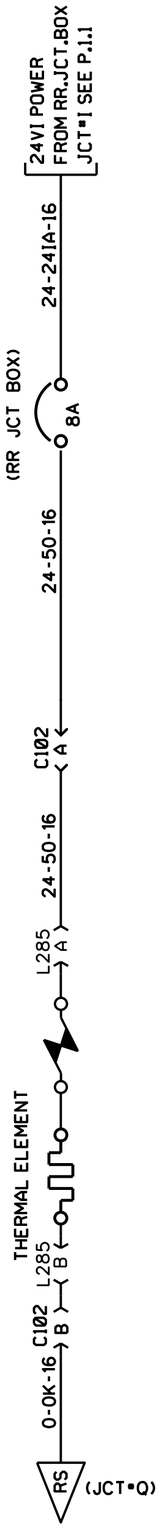
24VI POWER
FROM RR.JCT.BOX
JCT"I SEE P.1.1
24-241A-16
(RR JCT BOX)
8A
24-50-16
C102
A
L285
A
THERMAL ELEMENT
L285
B
C102
B
0-0K-16
RS
(JCT"Q)

AIR DRYER

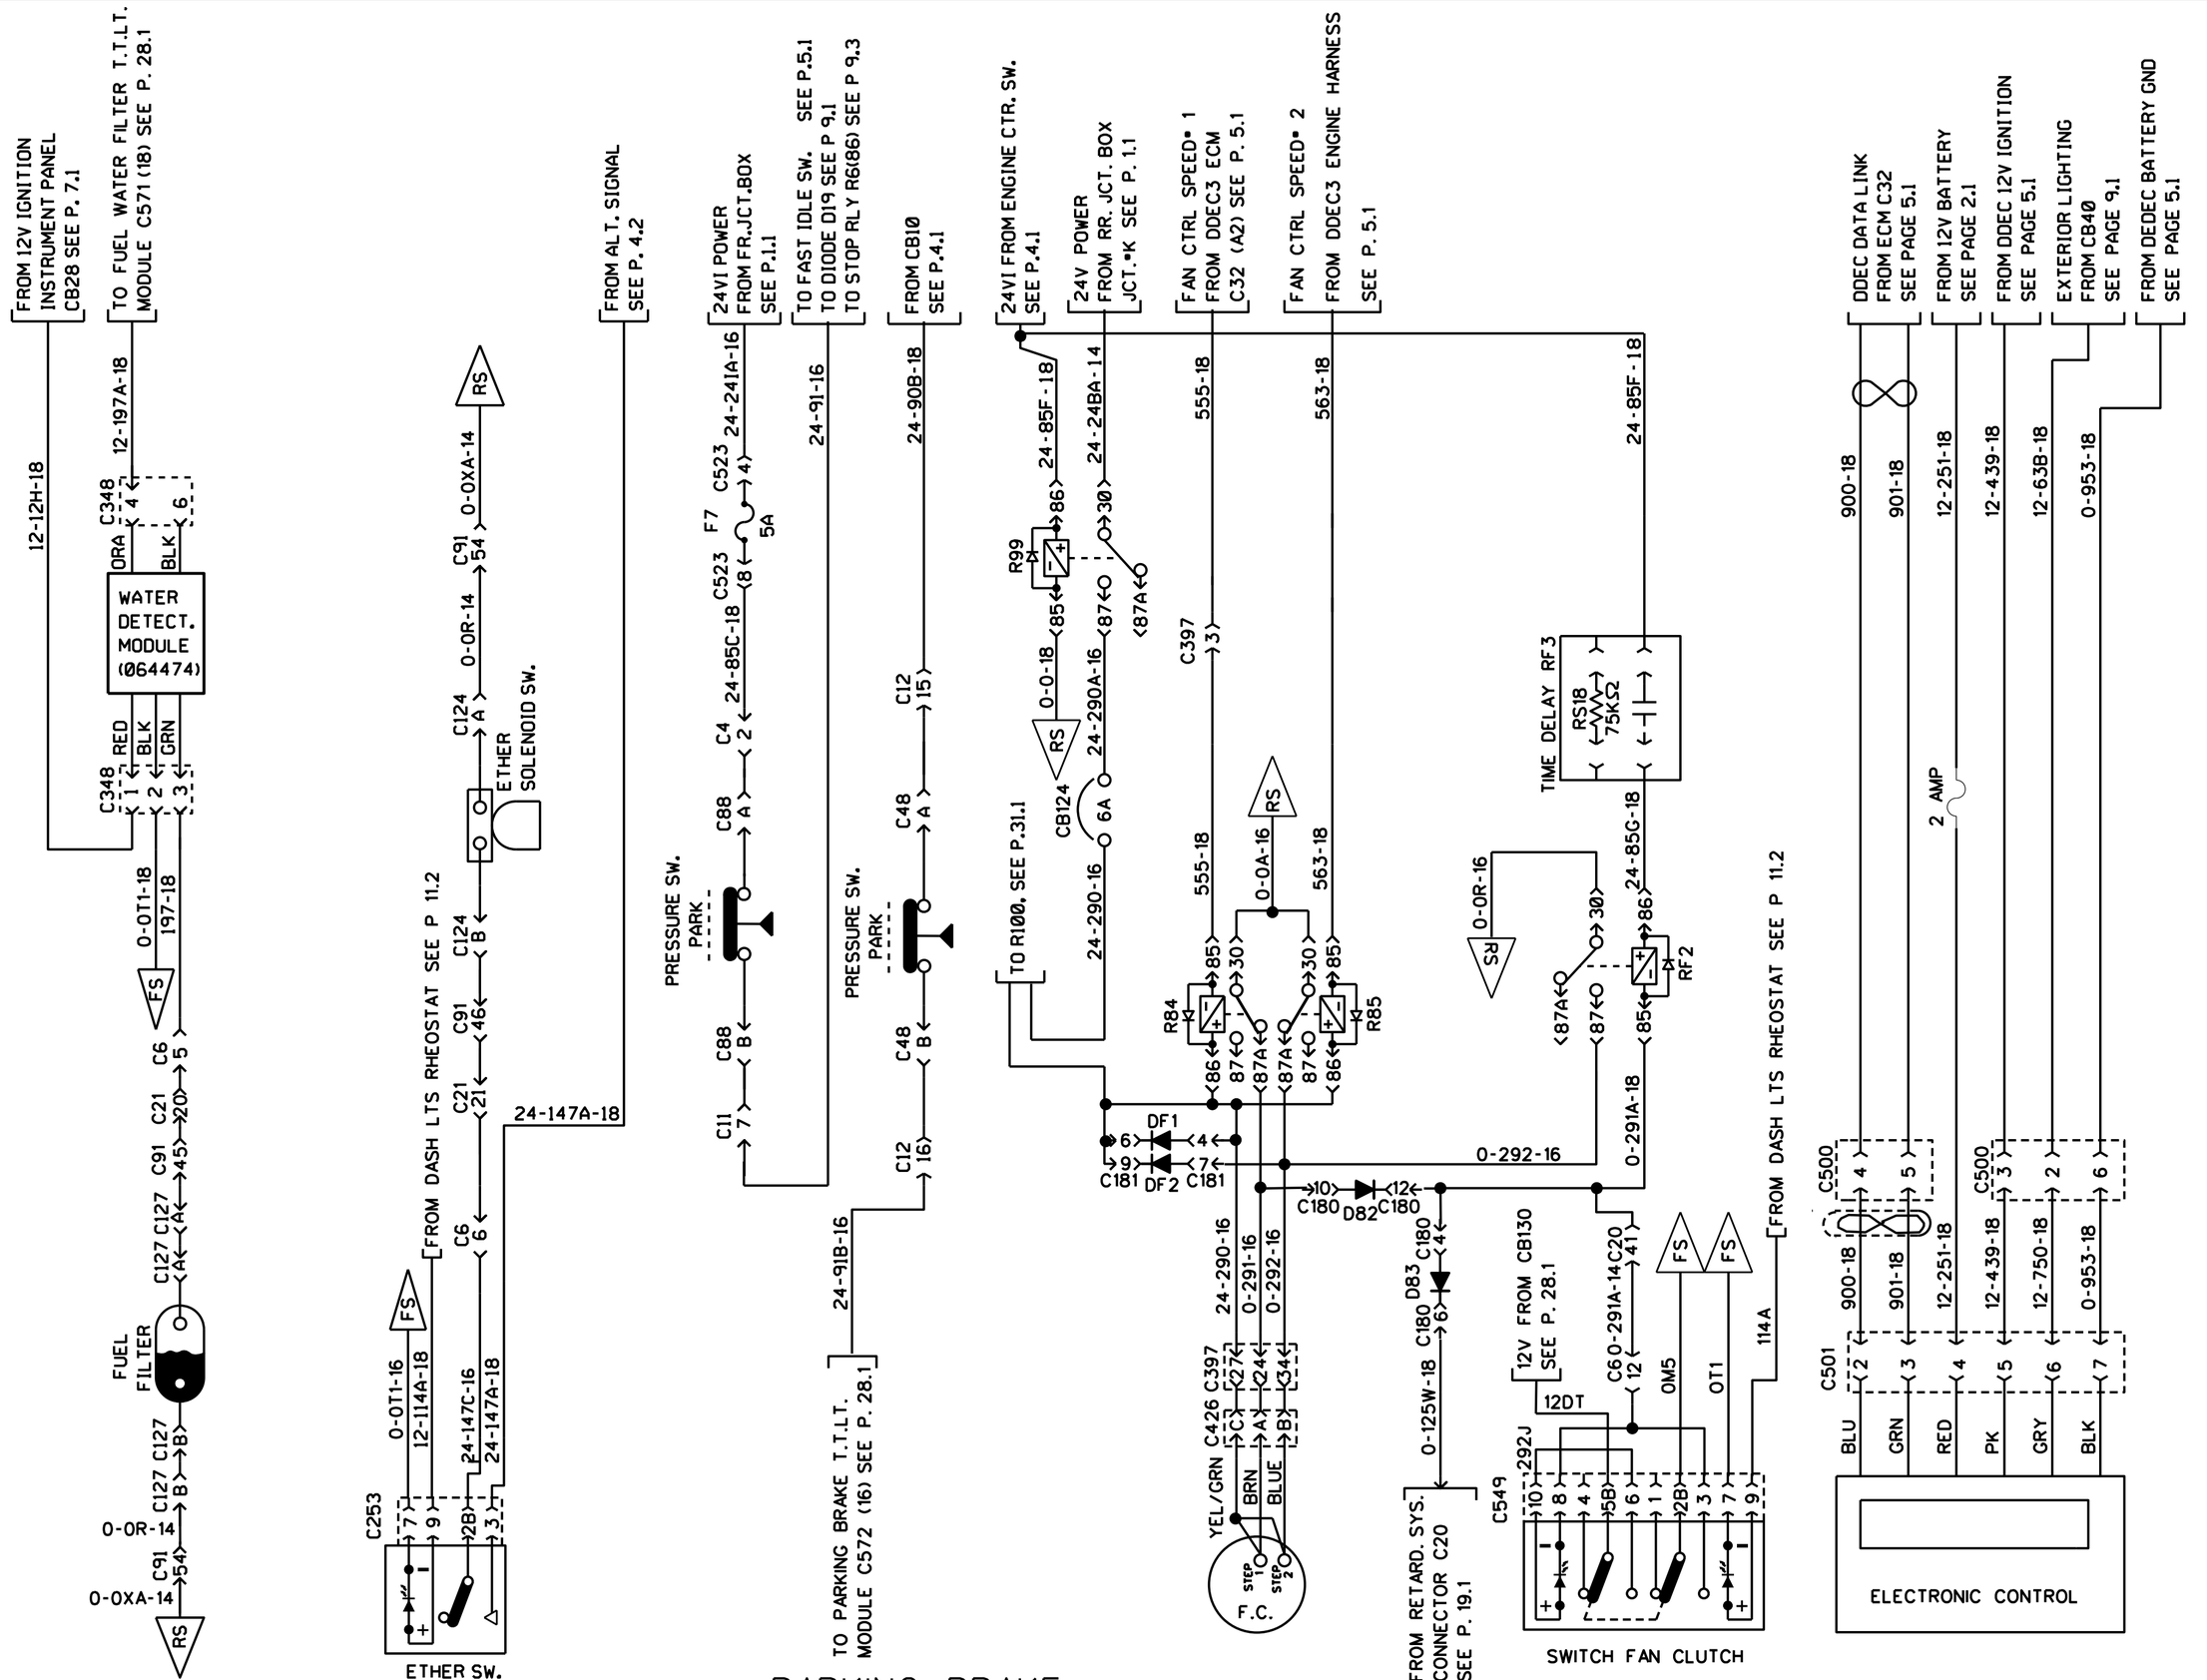

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 8.1SP3	REVISION 00

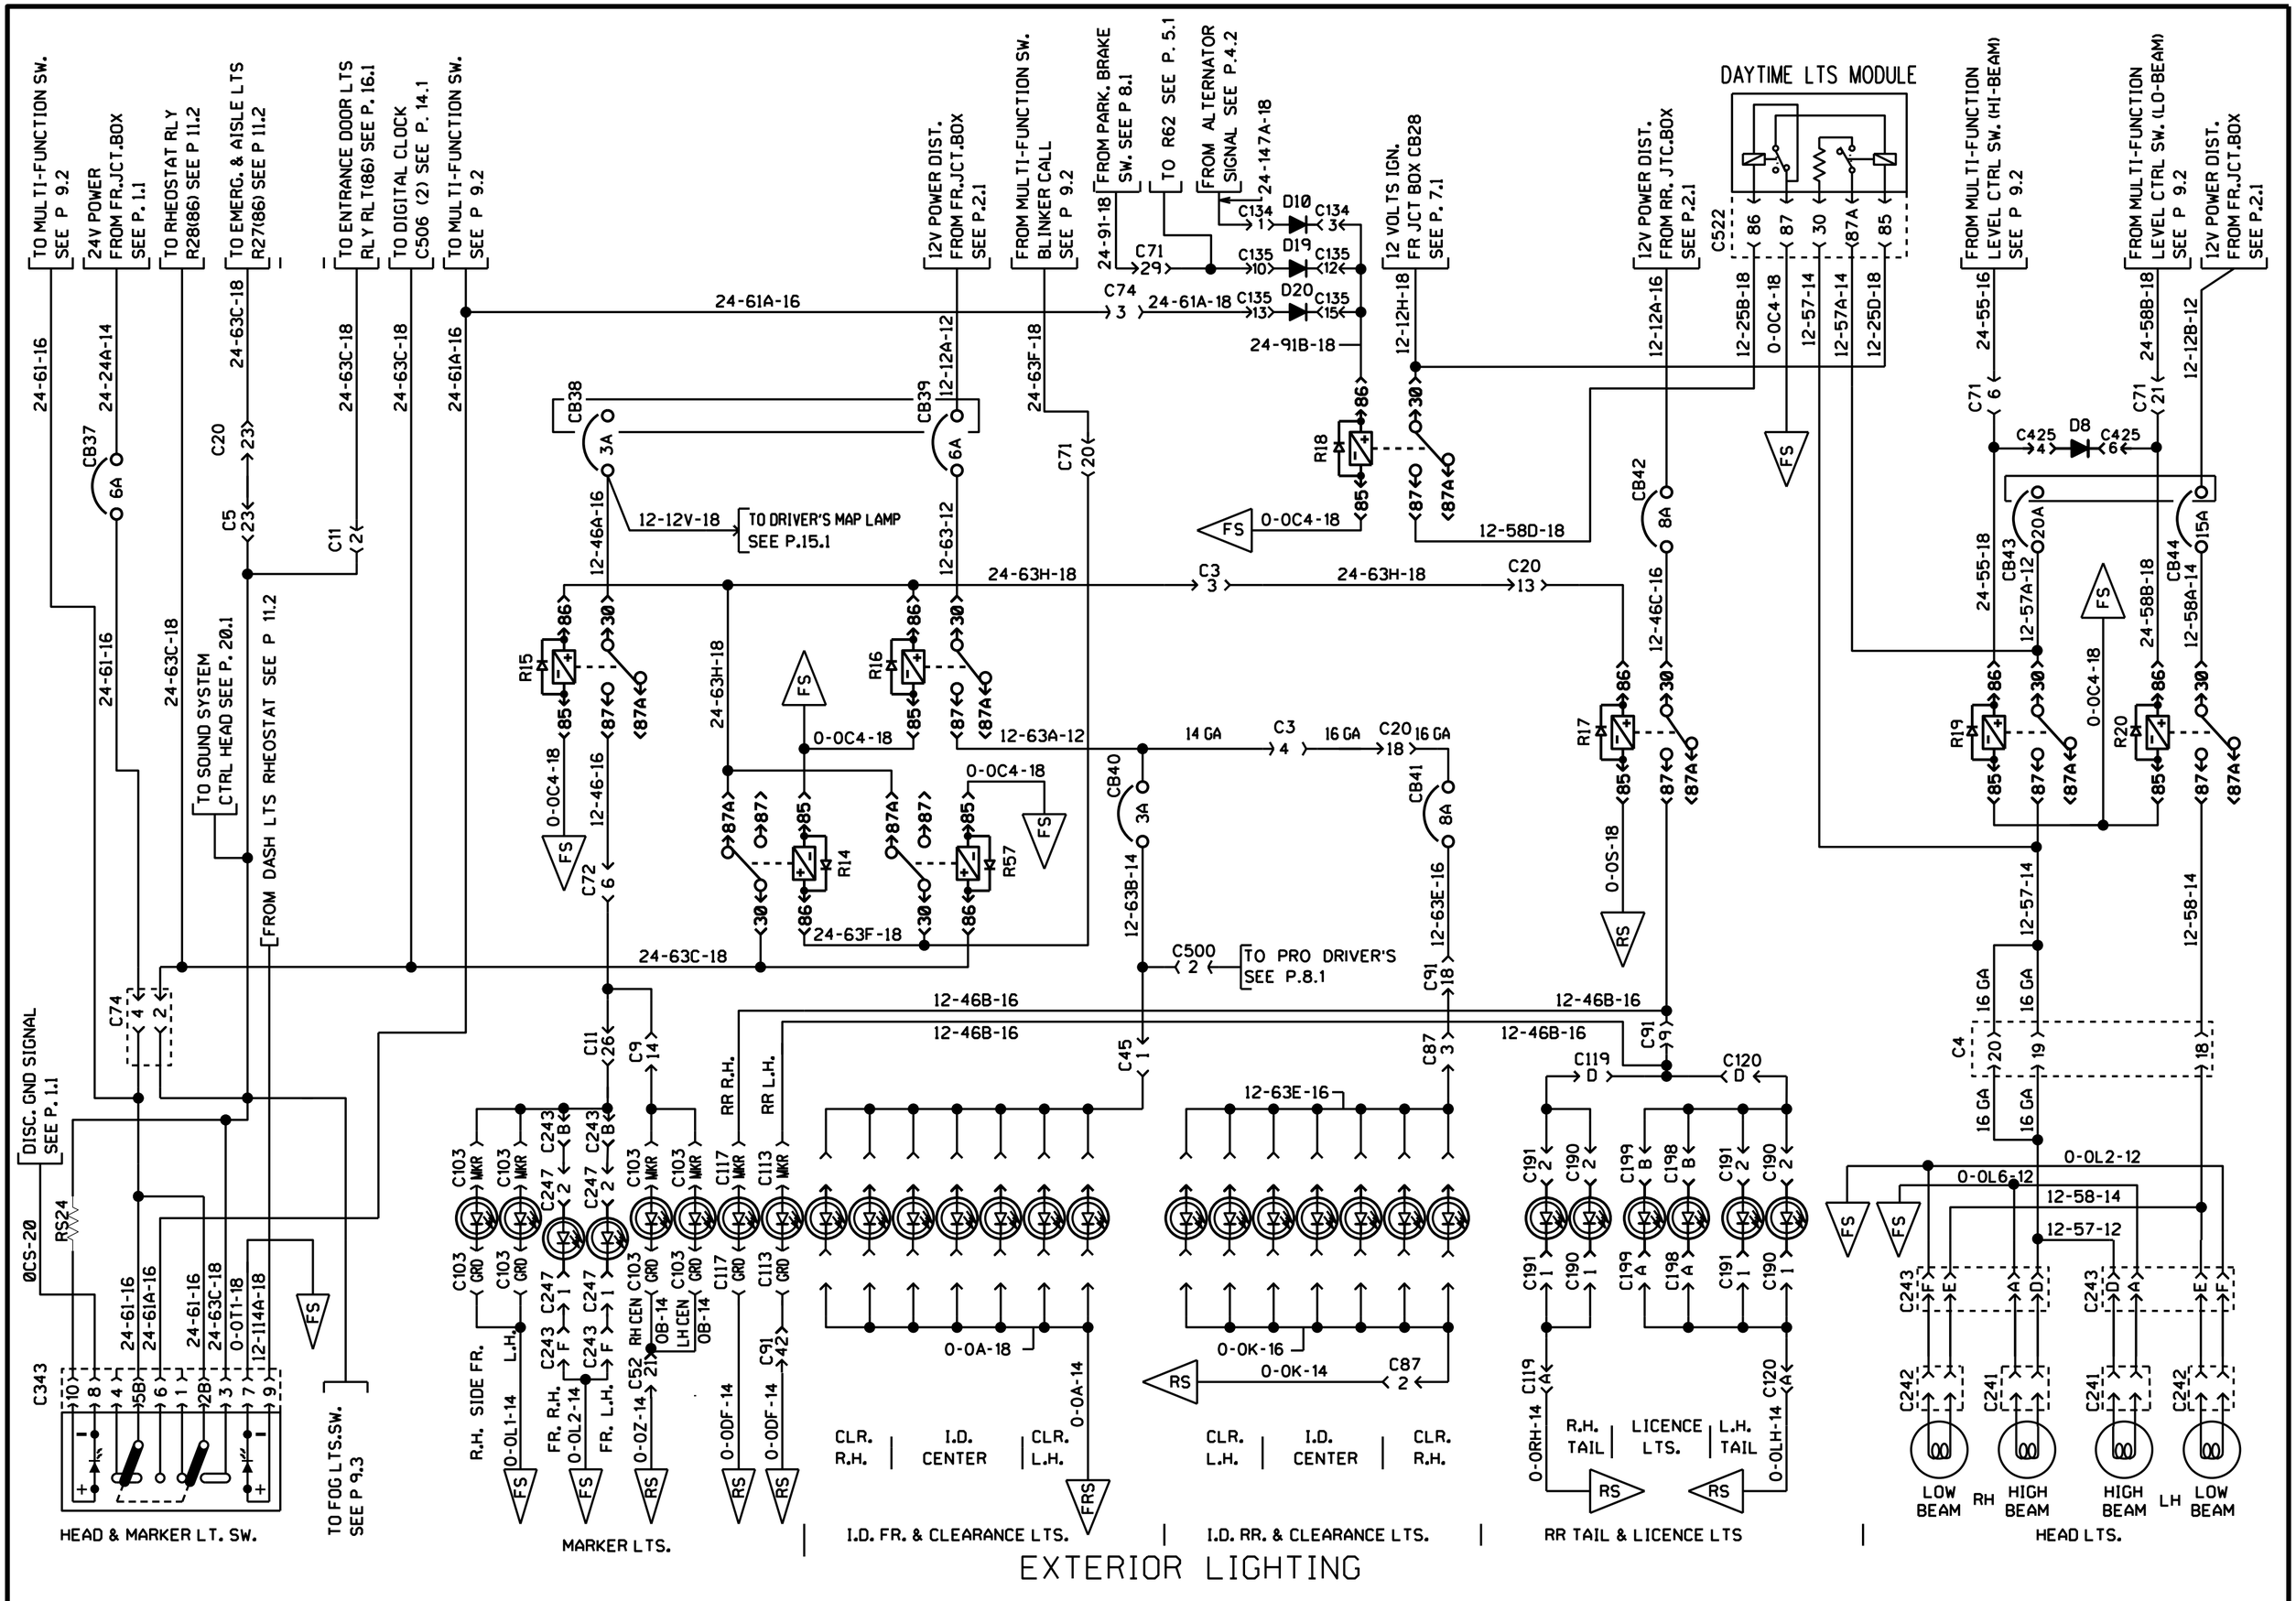

EXTERIOR LIGHTING

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 9.1	REVISION 00

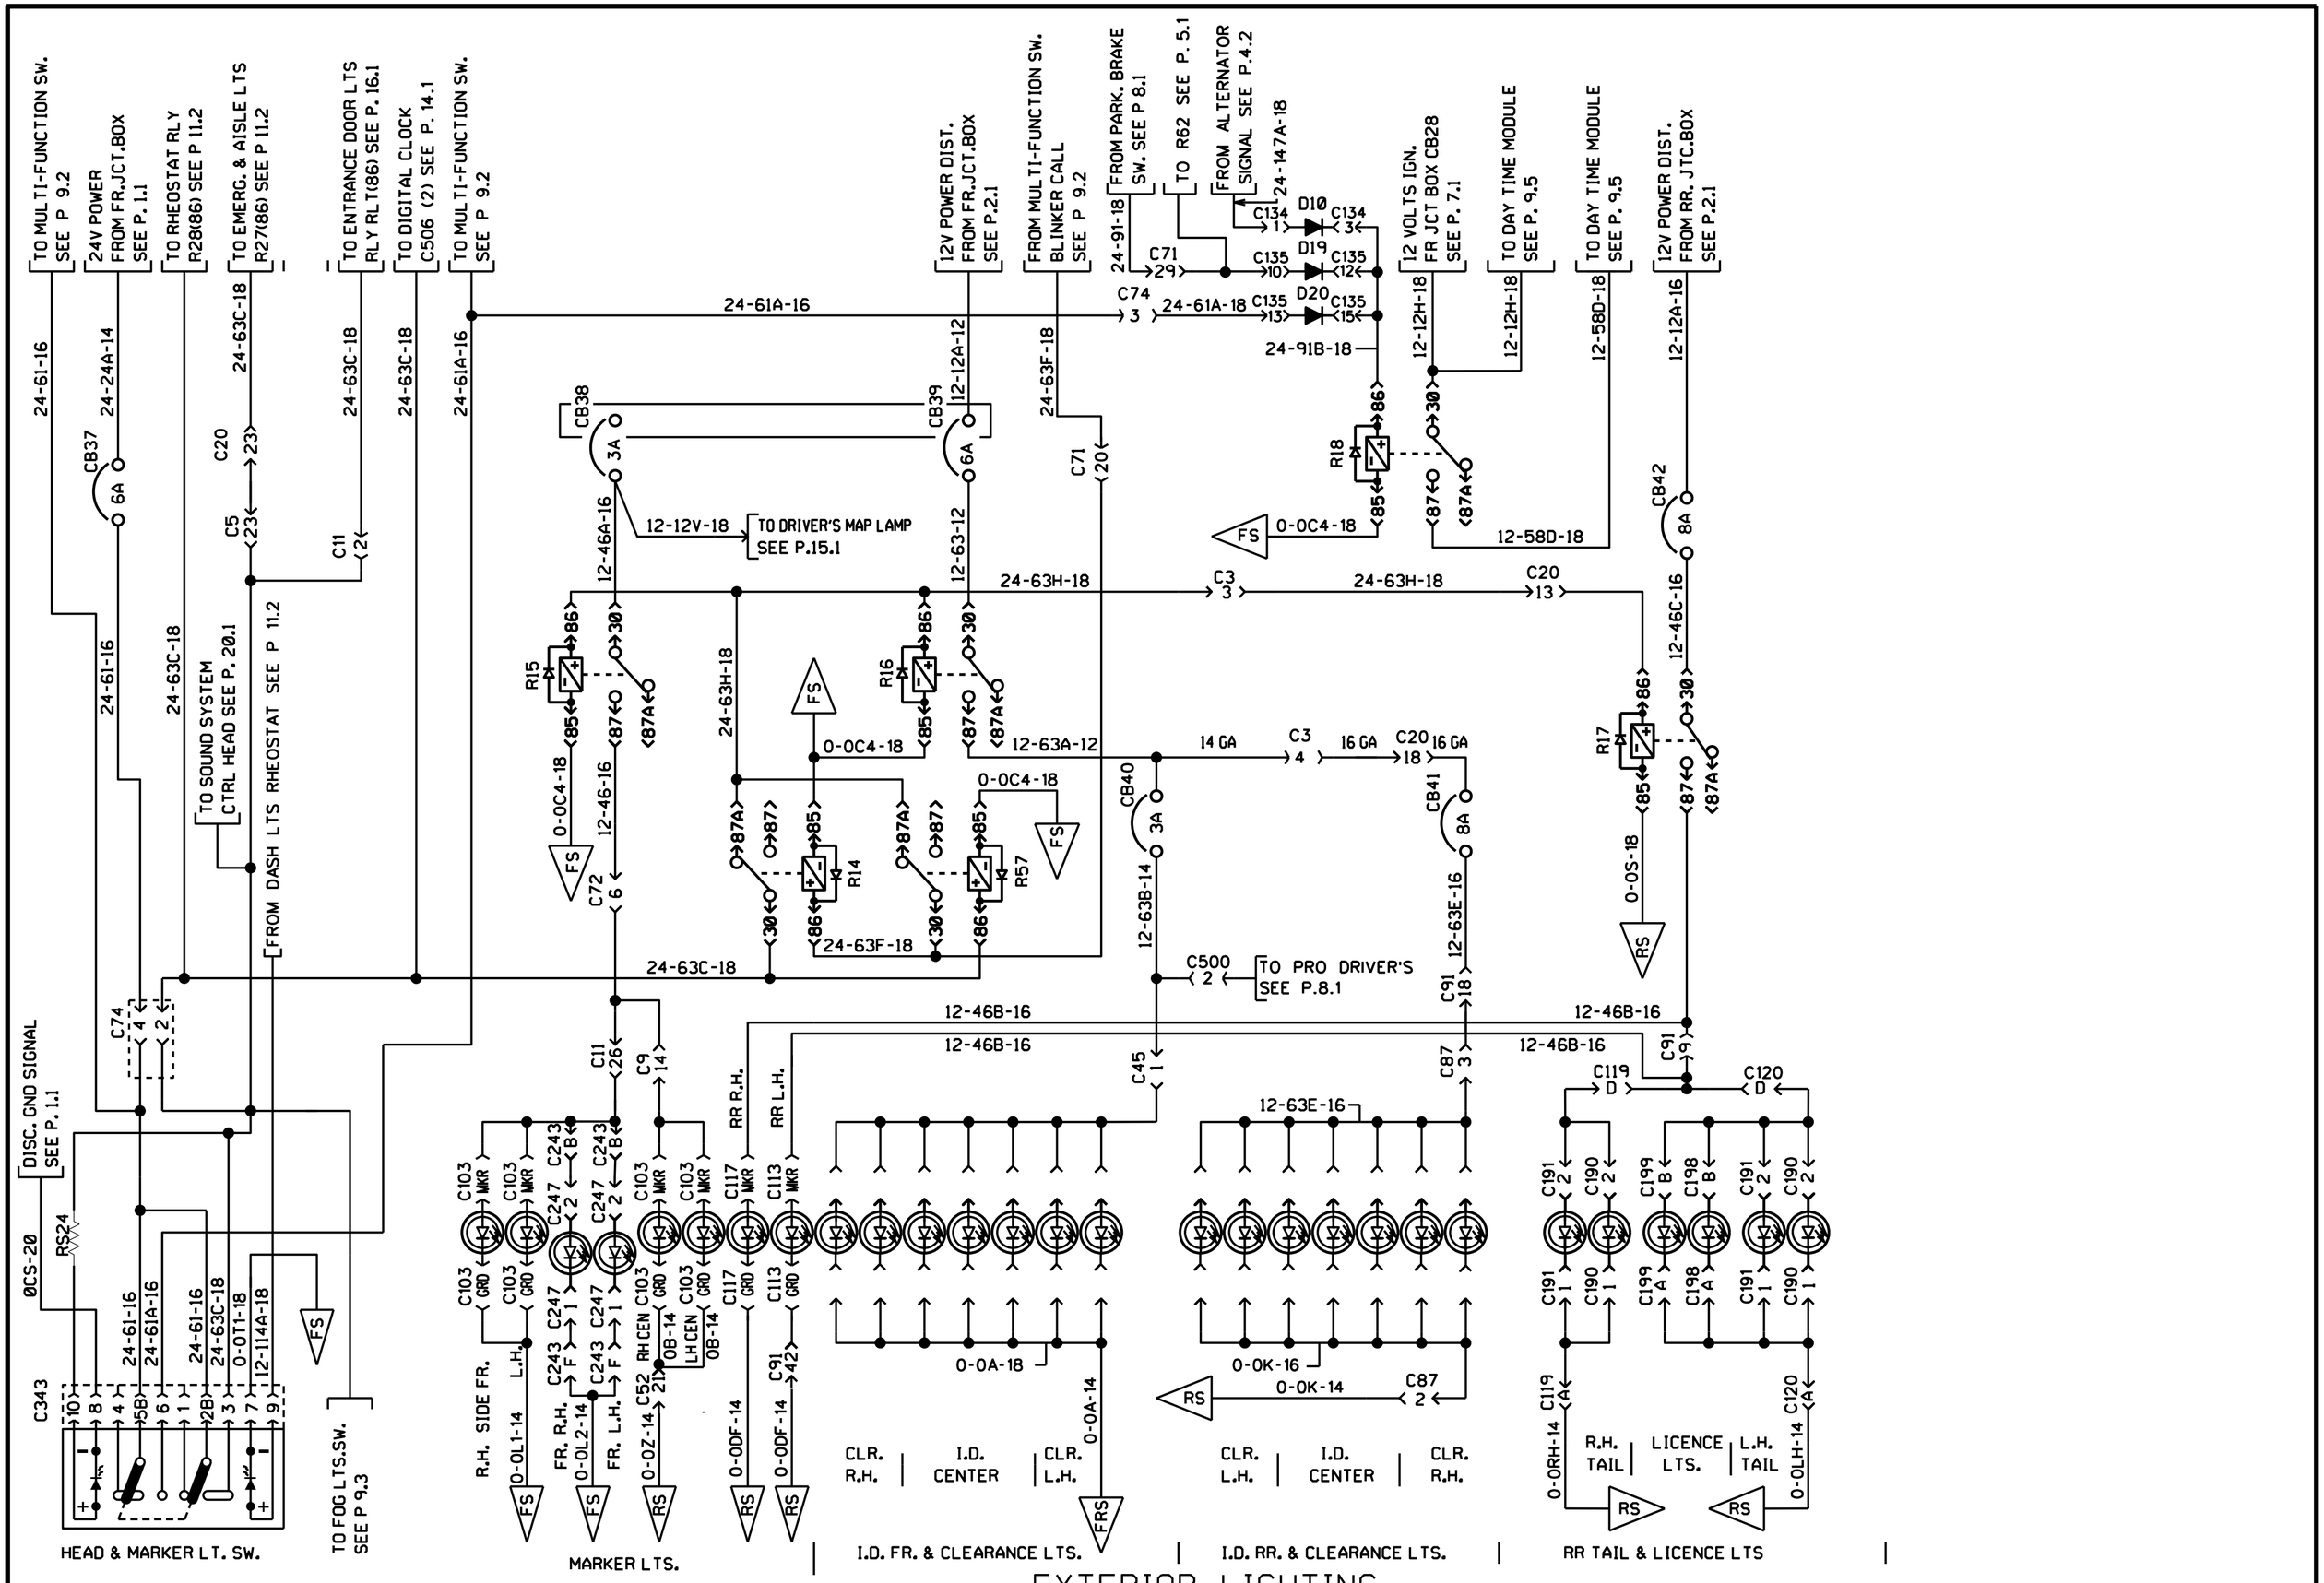

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 9.1	REVISION 07

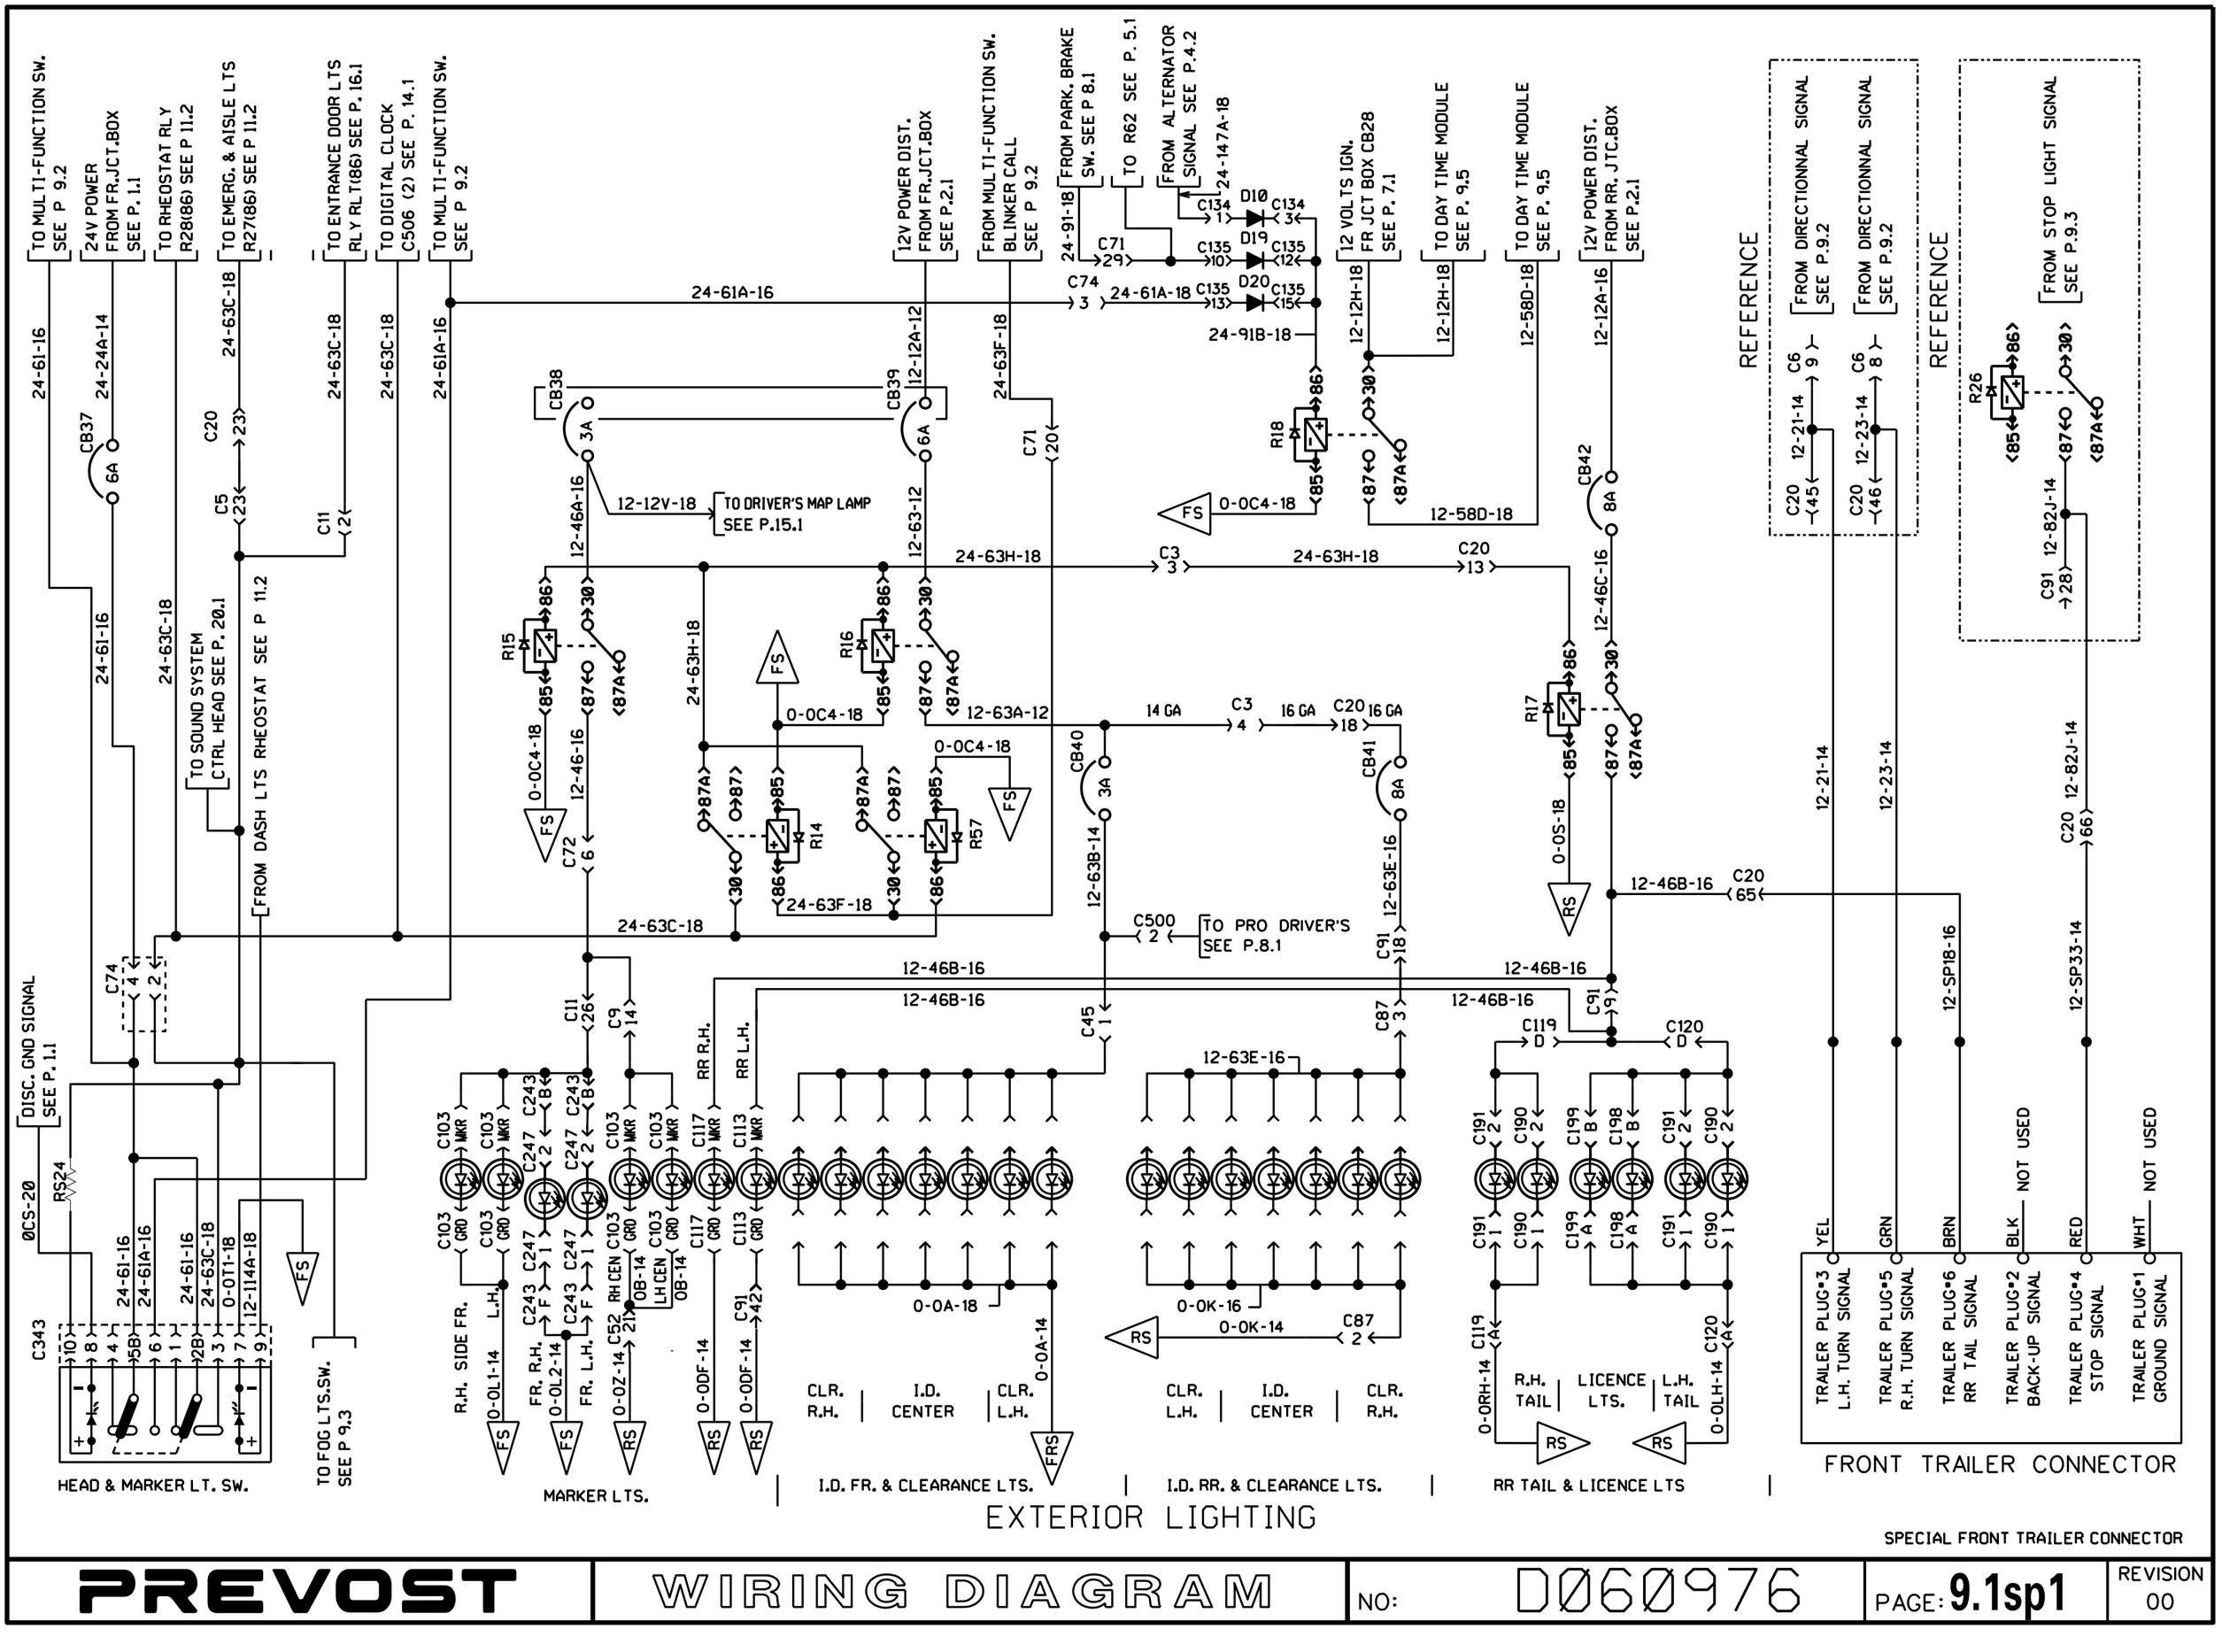

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 9.1sp1	REVISION 00

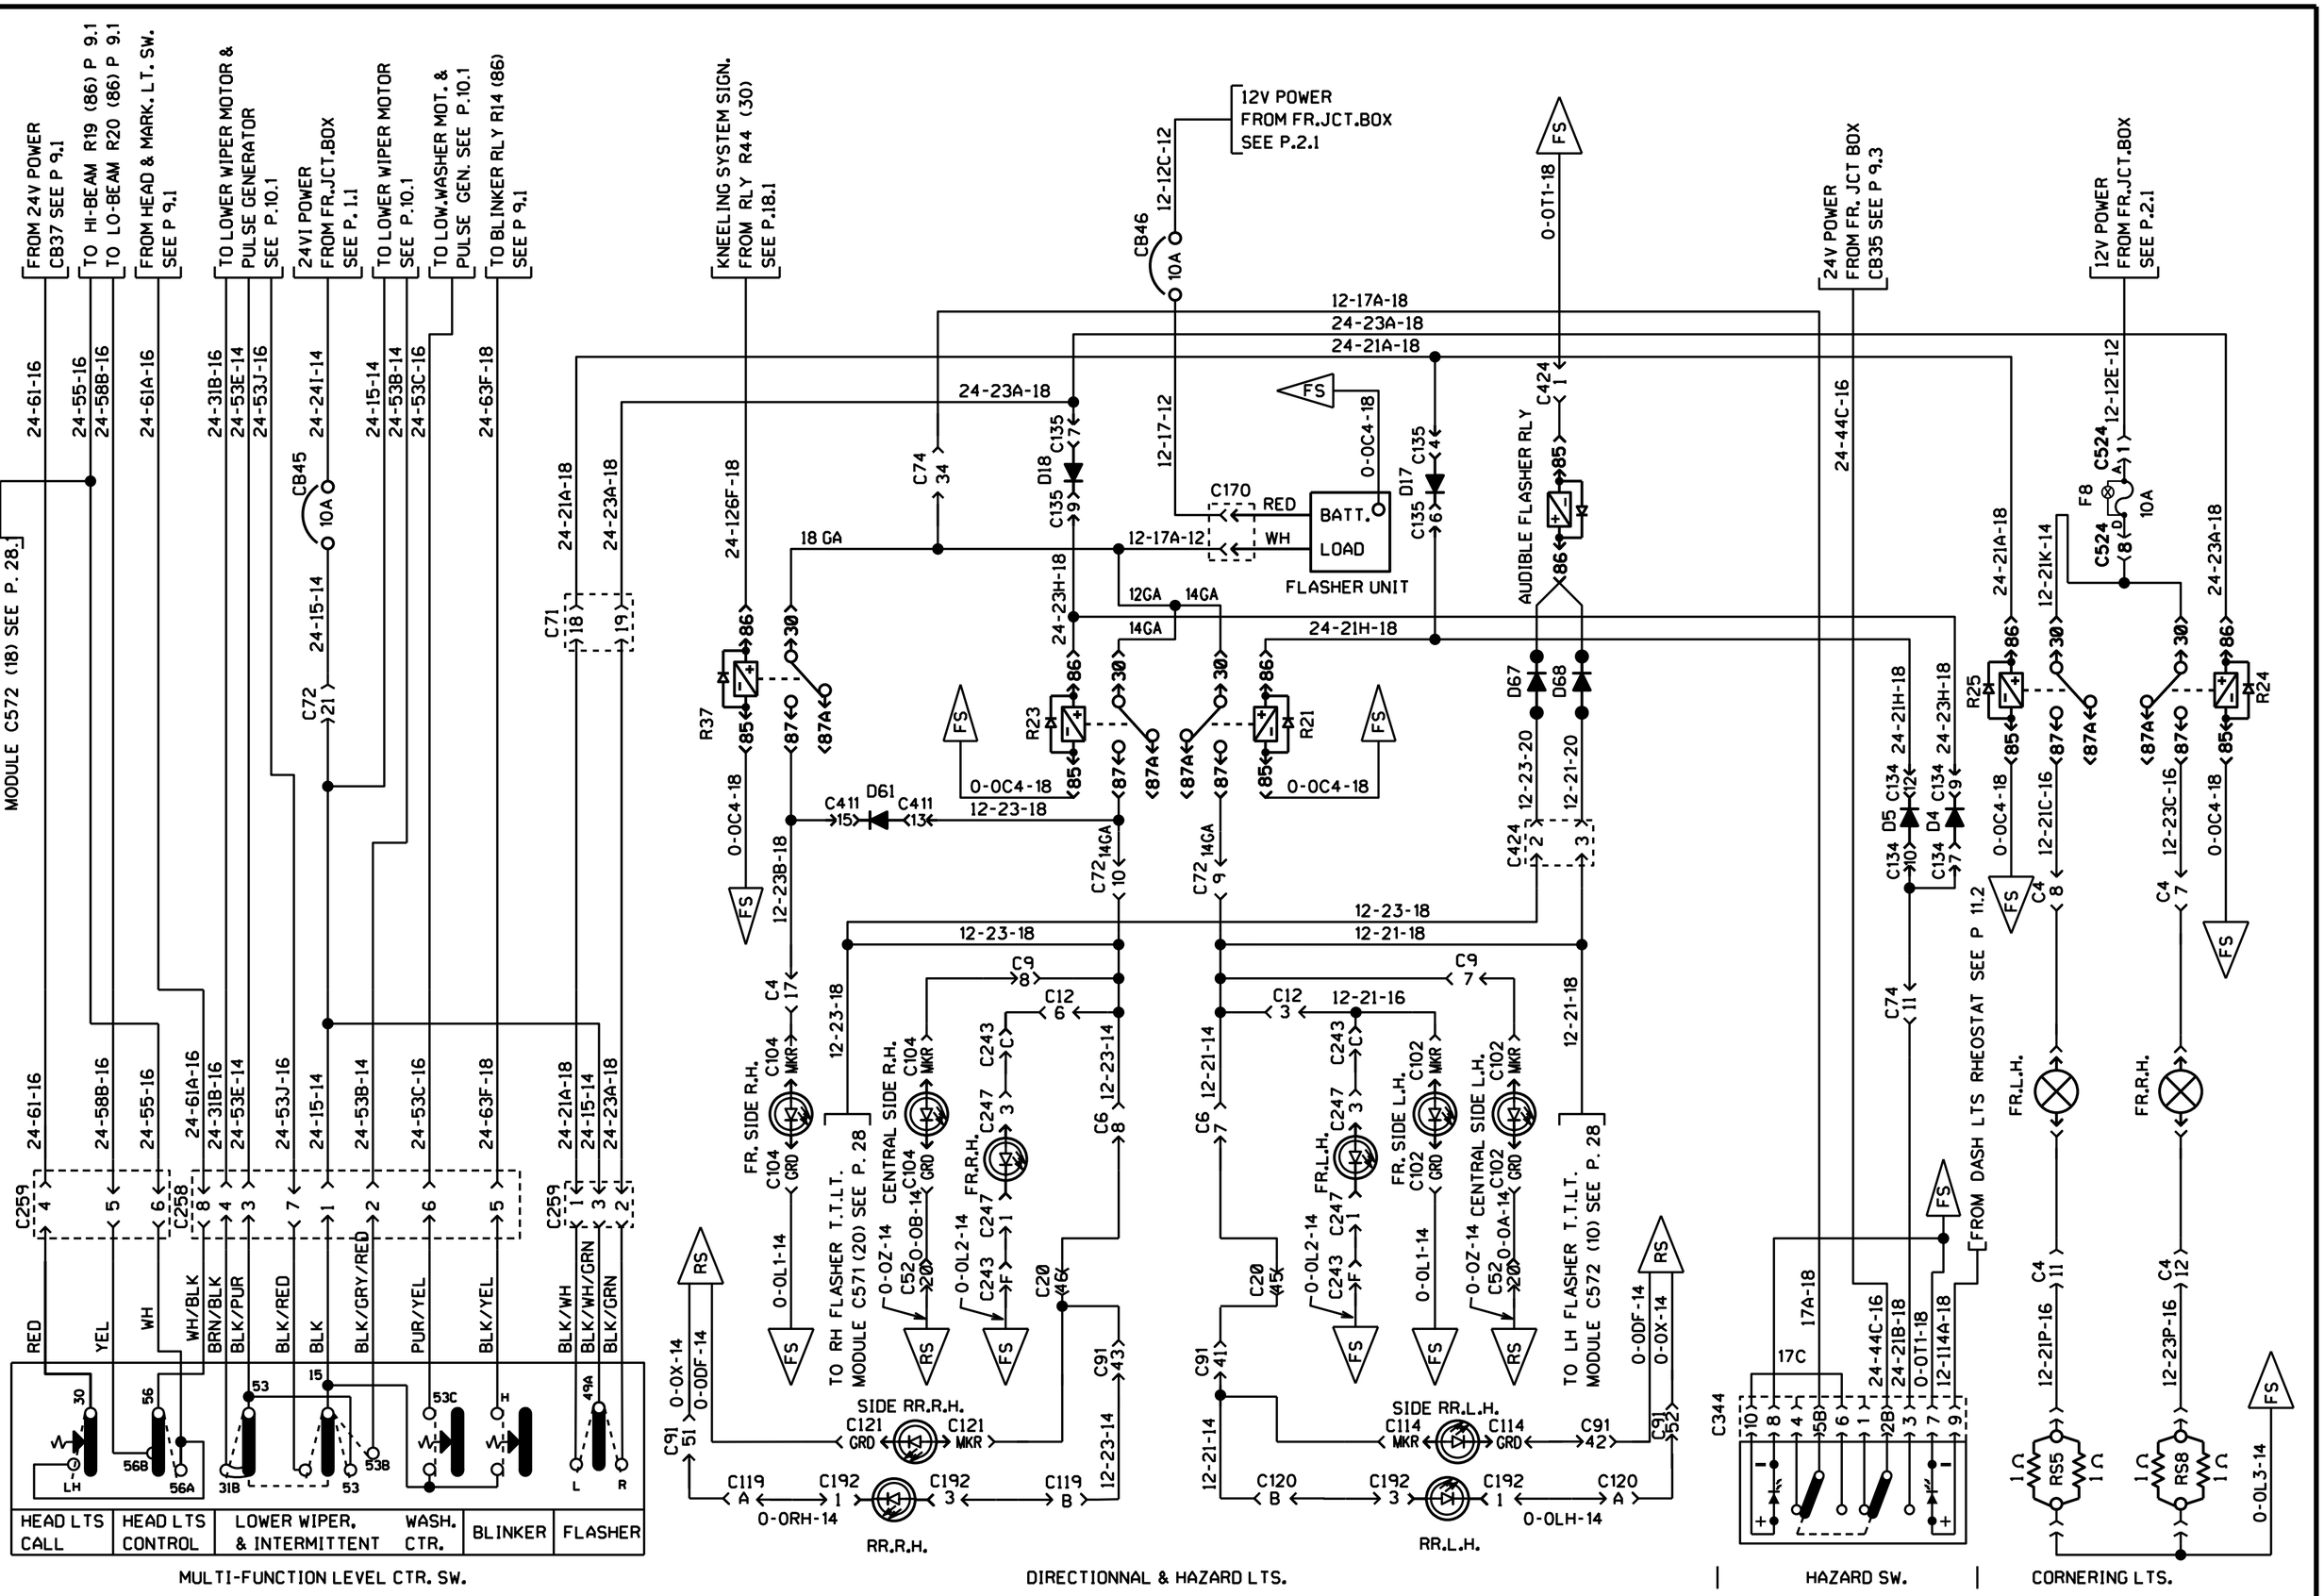
TO HIBEAM T.T.LT. MODULE C572 (18) SEE P. 28.
FROM 24V POWER CB37 SEE P 9.1
TO HI-BEAM R19 (86) P 9.1
TO LO-BEAM R20 (86) P 9.1
FROM HEAD & MARK. LT. SW. SEE P 9.1
TO LOWER WIPER MOTOR & PULSE GENERATOR SEE P.10.1
24VI POWER FROM FR.JCT.BOX SEE P. 1.1
TO LOWER WIPER MOTOR SEE P.10.1
TO LOW.WASHER MOT. & PULSE GEN. SEE P.10.1
TO BLINKER RLY R14 (86) SEE P 9.1
KNEELING SYSTEM SIGN. FROM RLY R44 (30) SEE P.18.1
12V POWER FROM FR.JCT.BOX SEE P.2.1
24V POWER FROM FR. JCT BOX CB35 SEE P 9.3
12V POWER FROM FR.JCT.BOX SEE P.2.1
CB45
CB46
10A
C72
C71
C74
C424
AUDIBLE FLASHER RLY
C170
RED
WH
BATT.
LOAD
FLASHER UNIT
18 GA
12GA
14GA
R37
R23
R21
R25
R24
D61
D67
D68
D18
D17
F8
C524
C259
C258
C104
C102
C247
C243
C134
C411
C4
C9
C12
C6
C20
C91
C121
C114
C119
C192
C120
C344
RED
YEL
WH
WH/BLK
BRN/BLK
BLK/PUR
BLK/RED
BLK
BLK/GRY/RED
PUR/YEL
BLK/YEL
BLK/WH
BLK/WH/GRN
BLK/GRN
HEAD LTS CALL
HEAD LTS CONTROL
LOWER WIPER, & INTERMITTENT
WASH. CTR.
BLINKER
FLASHER
MULTI-FUNCTION LEVEL CTR. SW.
FR. SIDE R.H.
FR.L.H.
CENTRAL SIDE R.H.
CENTRAL SIDE L.H.
FR. SIDE L.H.
FR.R.H.
TO RH FLASHER T.T.LT. MODULE C571 (20) SEE P. 28
TO LH FLASHER T.T.LT. MODULE C572 (10) SEE P. 28
SIDE RR.R.H.
SIDE RR.L.H.
RR.R.H.
RR.L.H.
DIRECTIONNAL & HAZARD LTS.
HAZARD SW.
CORNERING LTS.
FROM DASH LTS RHEOSTAT SEE P 11.2
RS5
RS8
1Ω
EXTERIOR LIGHTING

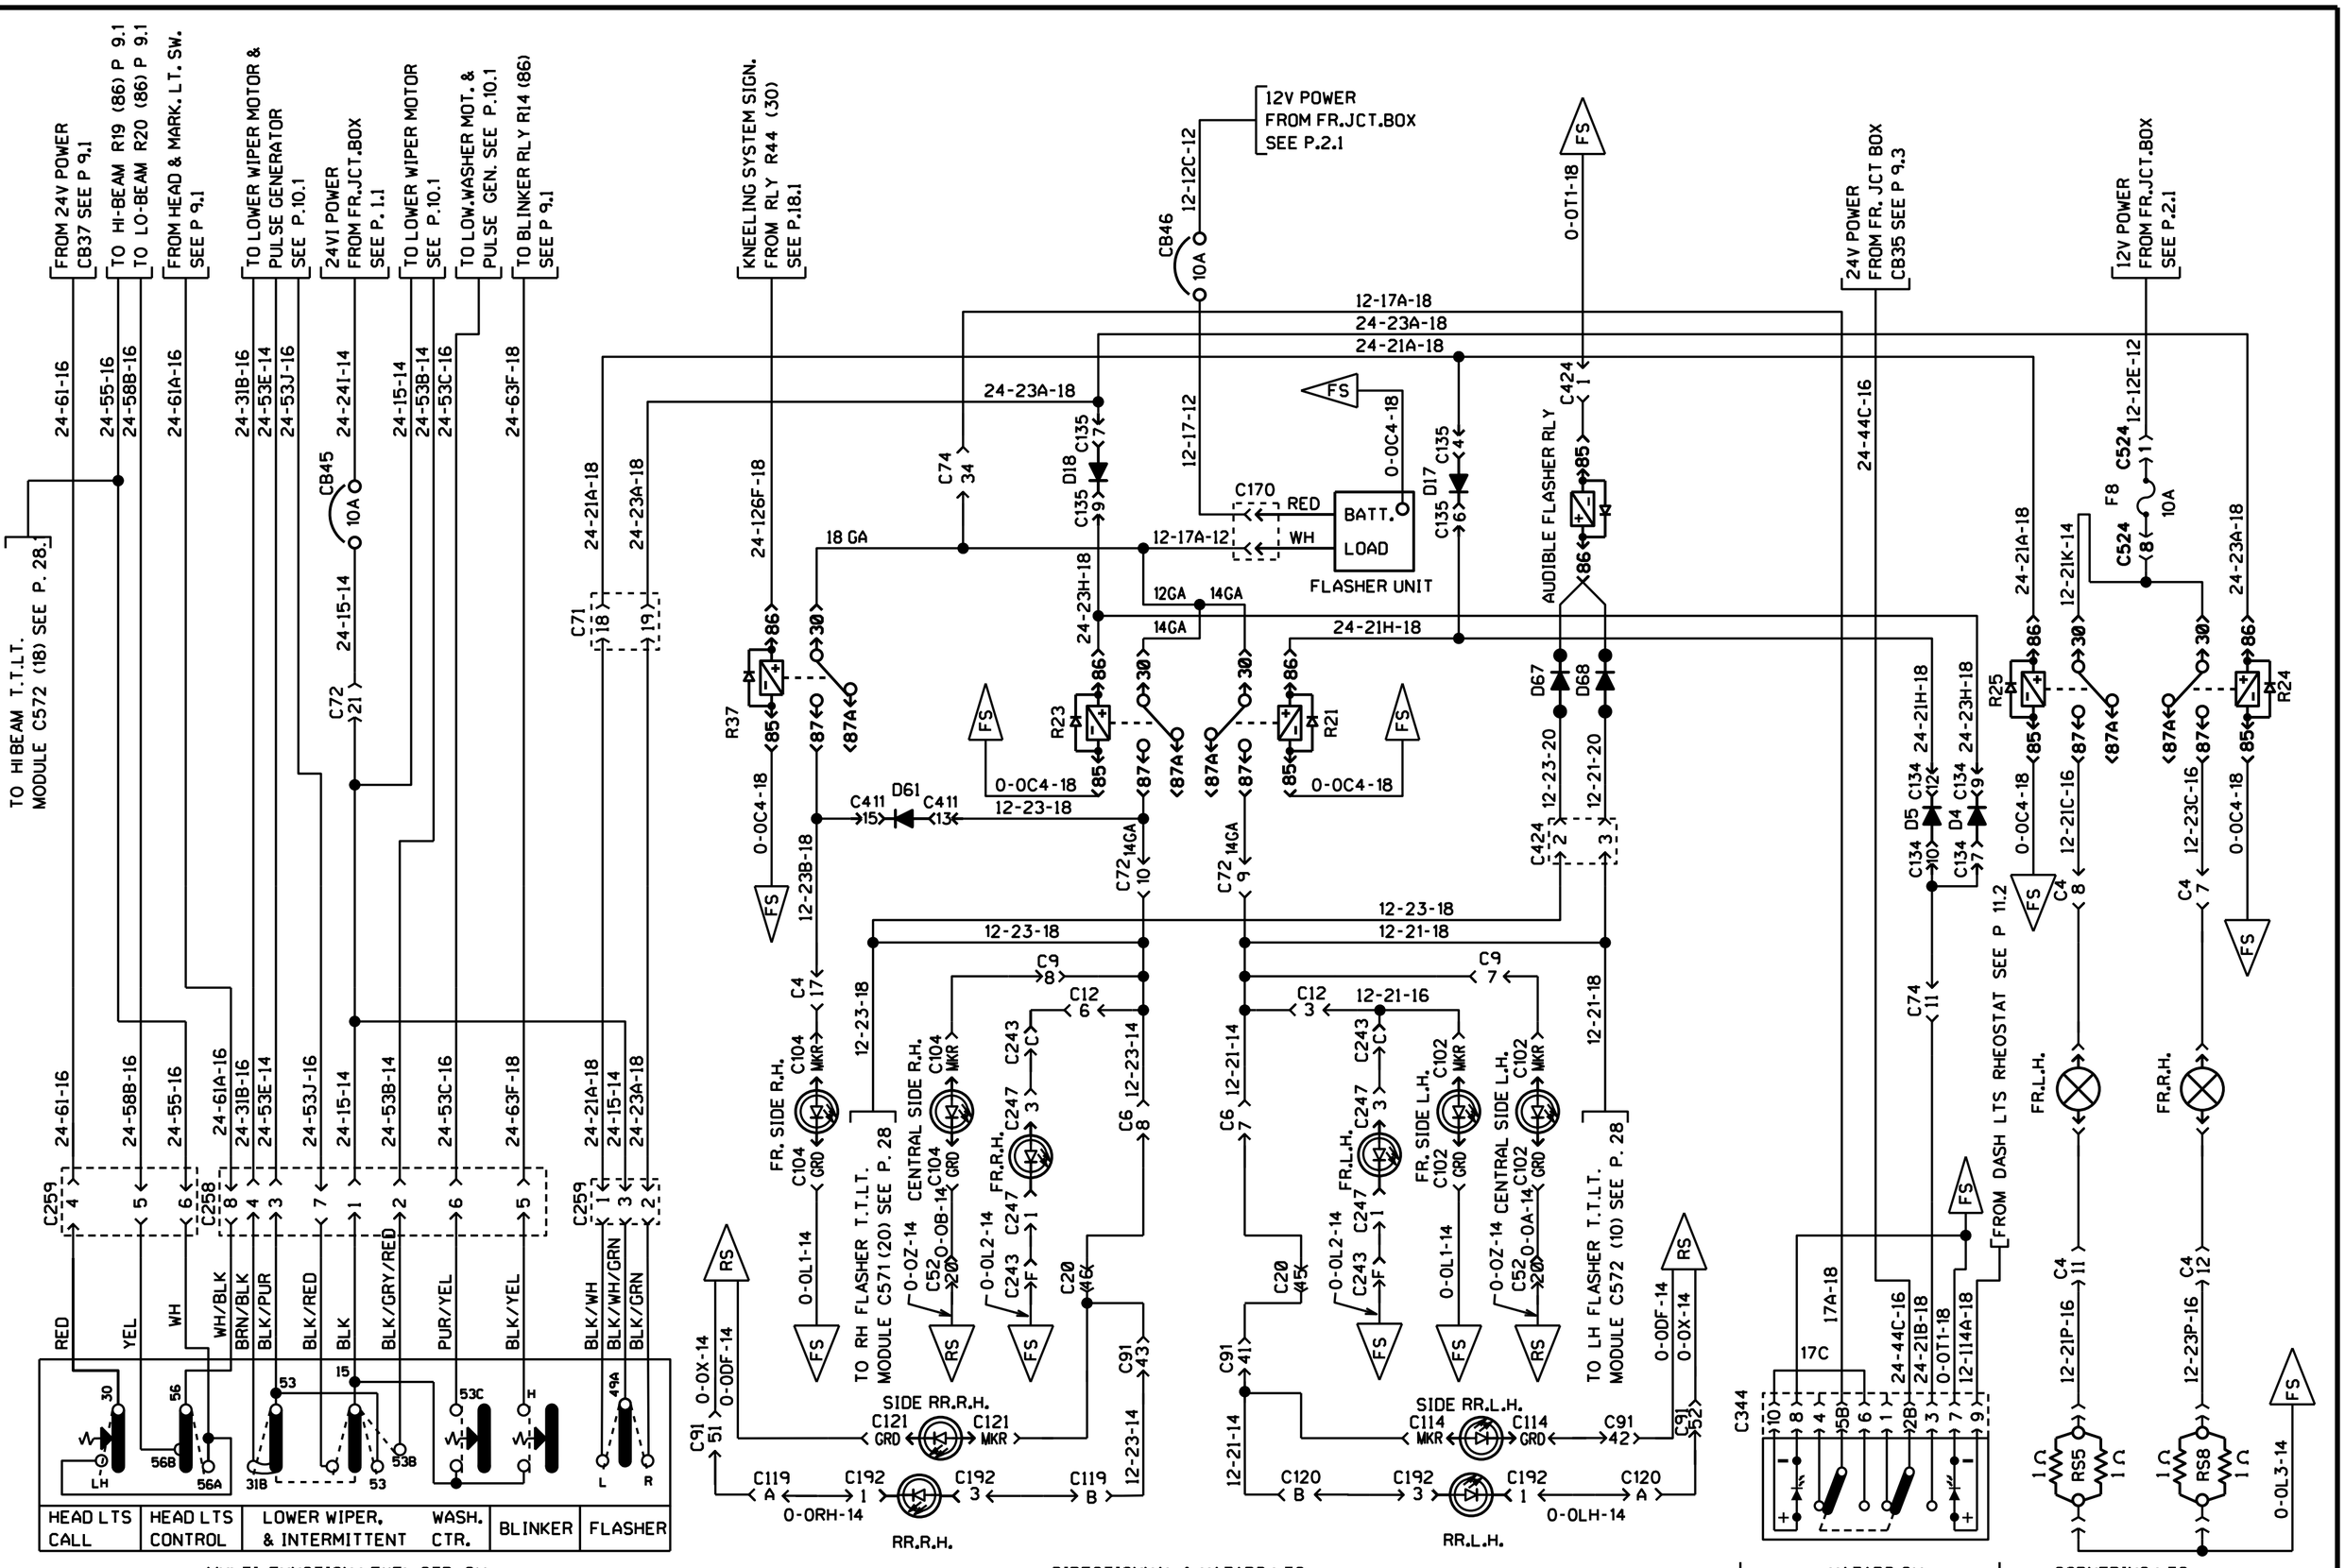

EXTERIOR LIGHTING

EXTERIOR LIGHTING

MULTI-FUNCTION LEVEL CTR. SW.

DIRECTIONNAL & HAZARD LTS.

HAZARD SW.

CORNERING LTS.

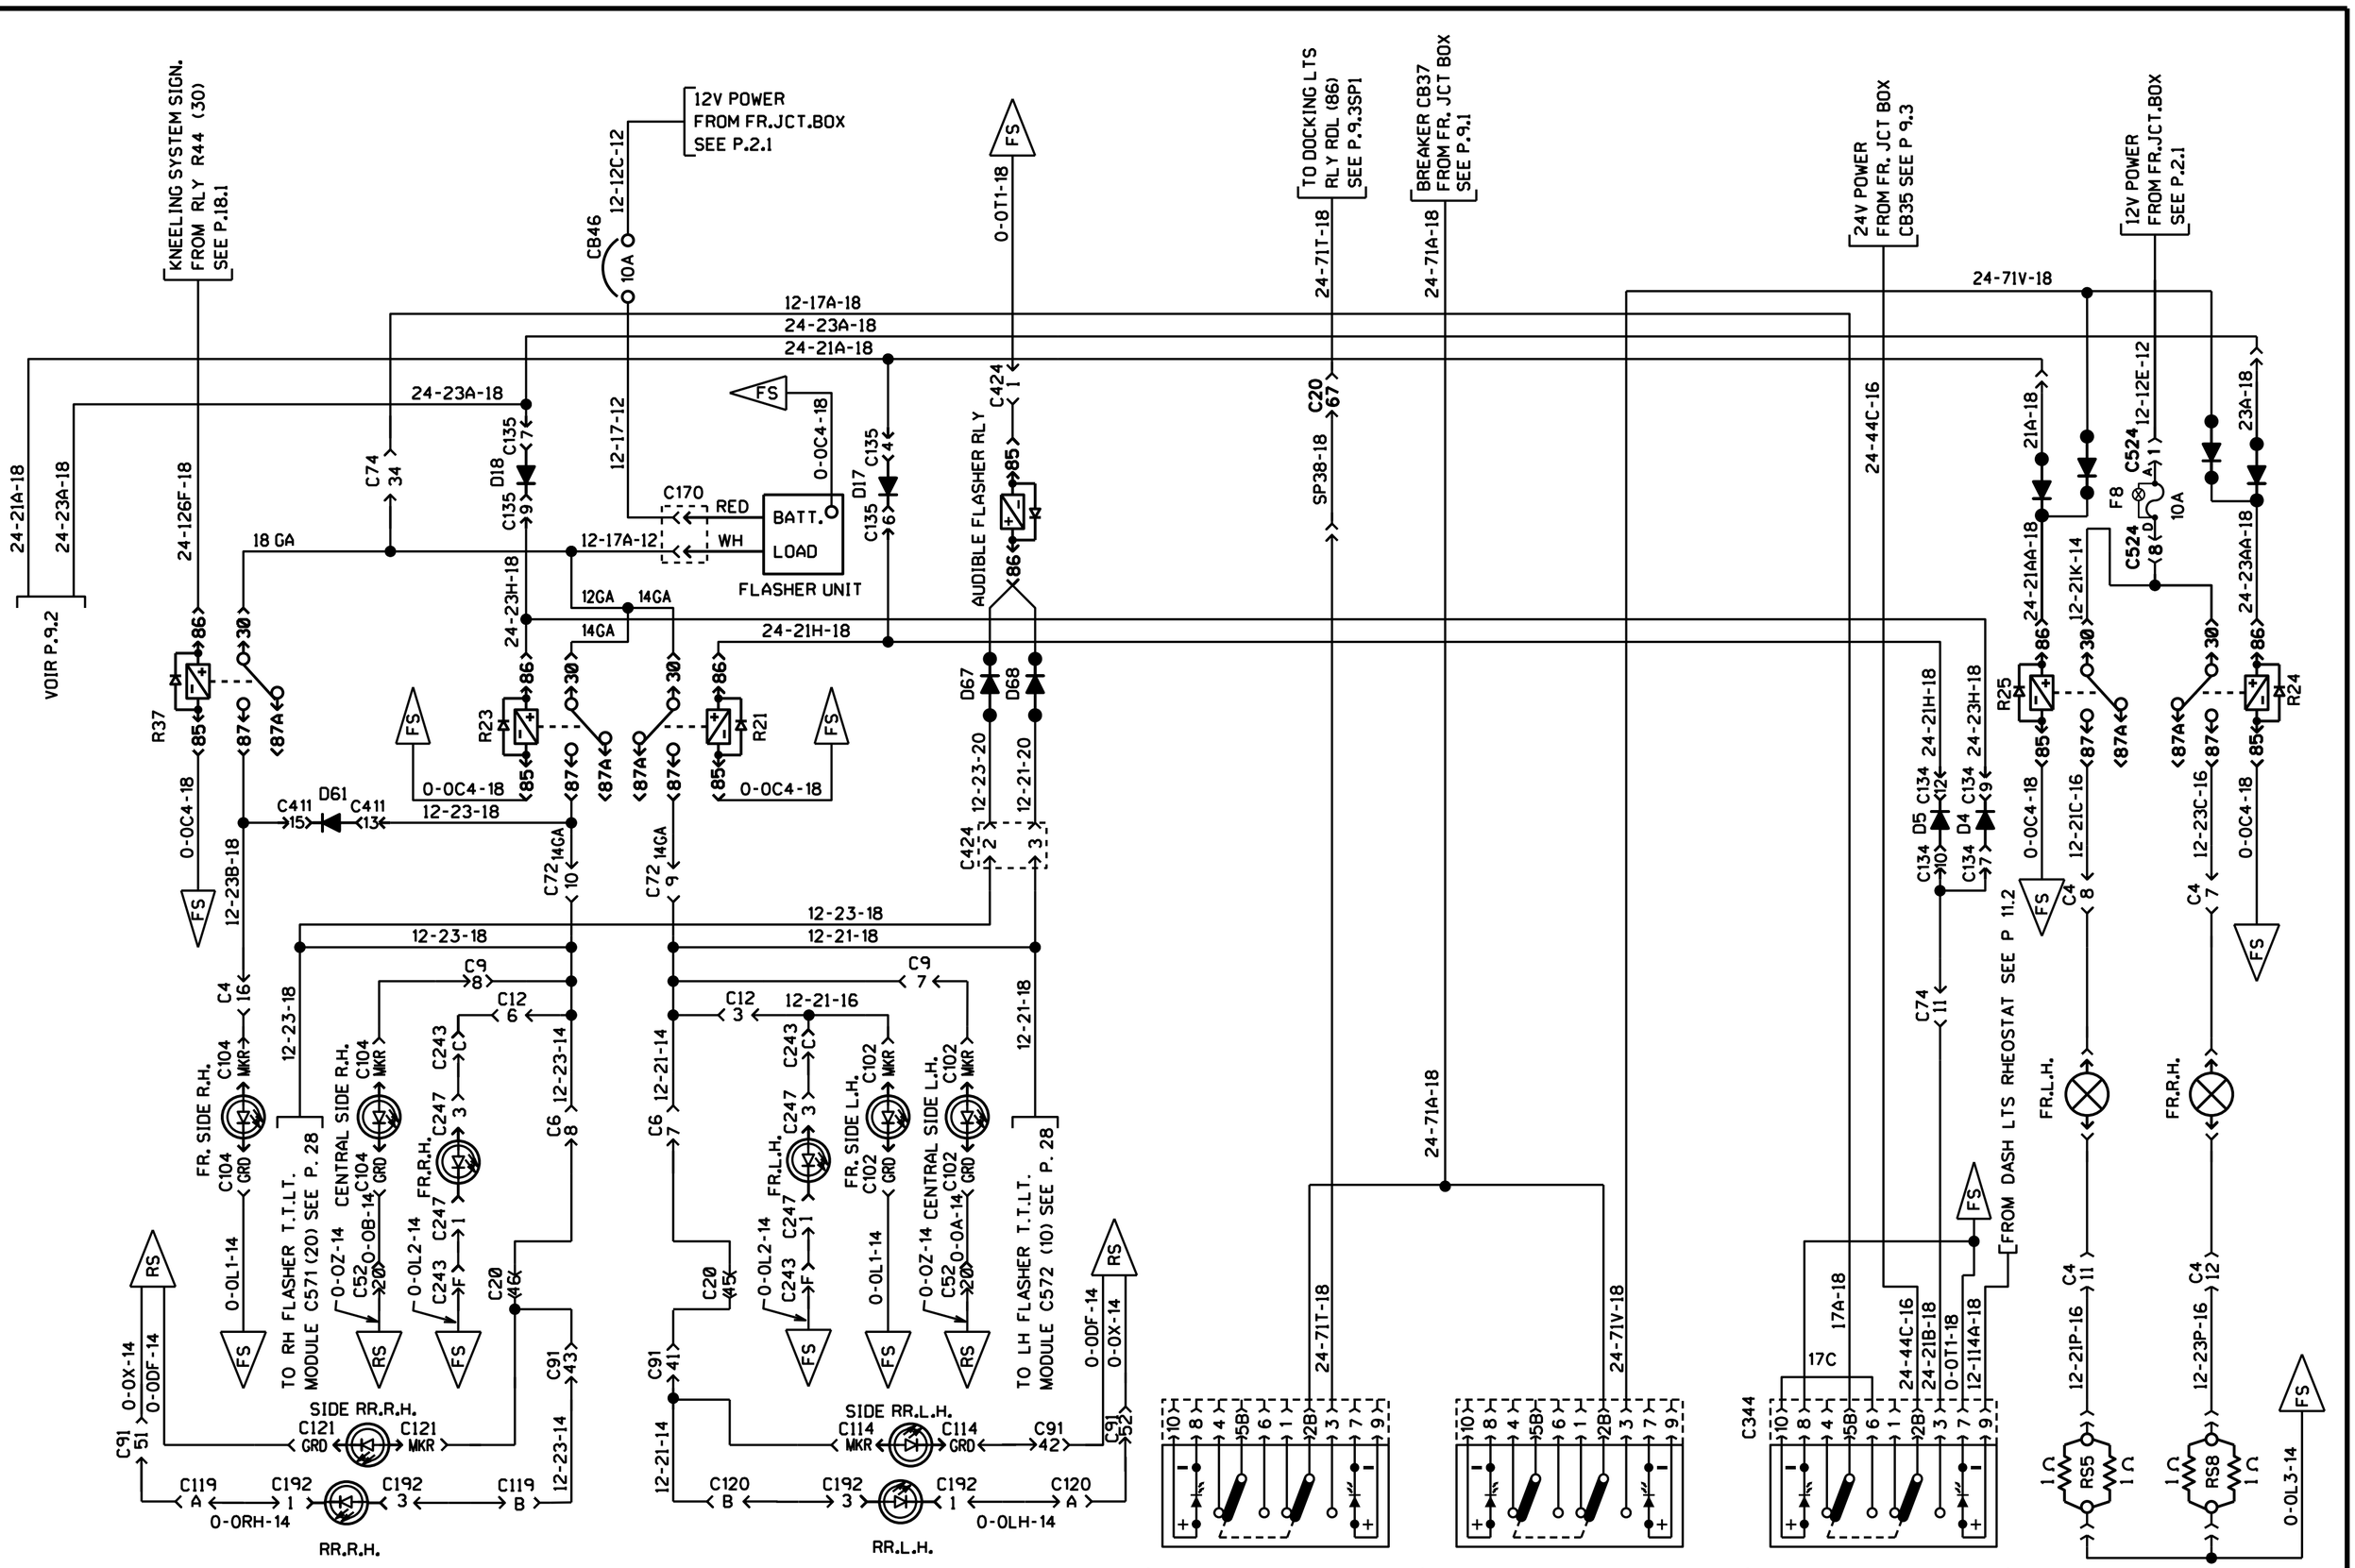

EXTERIOR LIGHTING

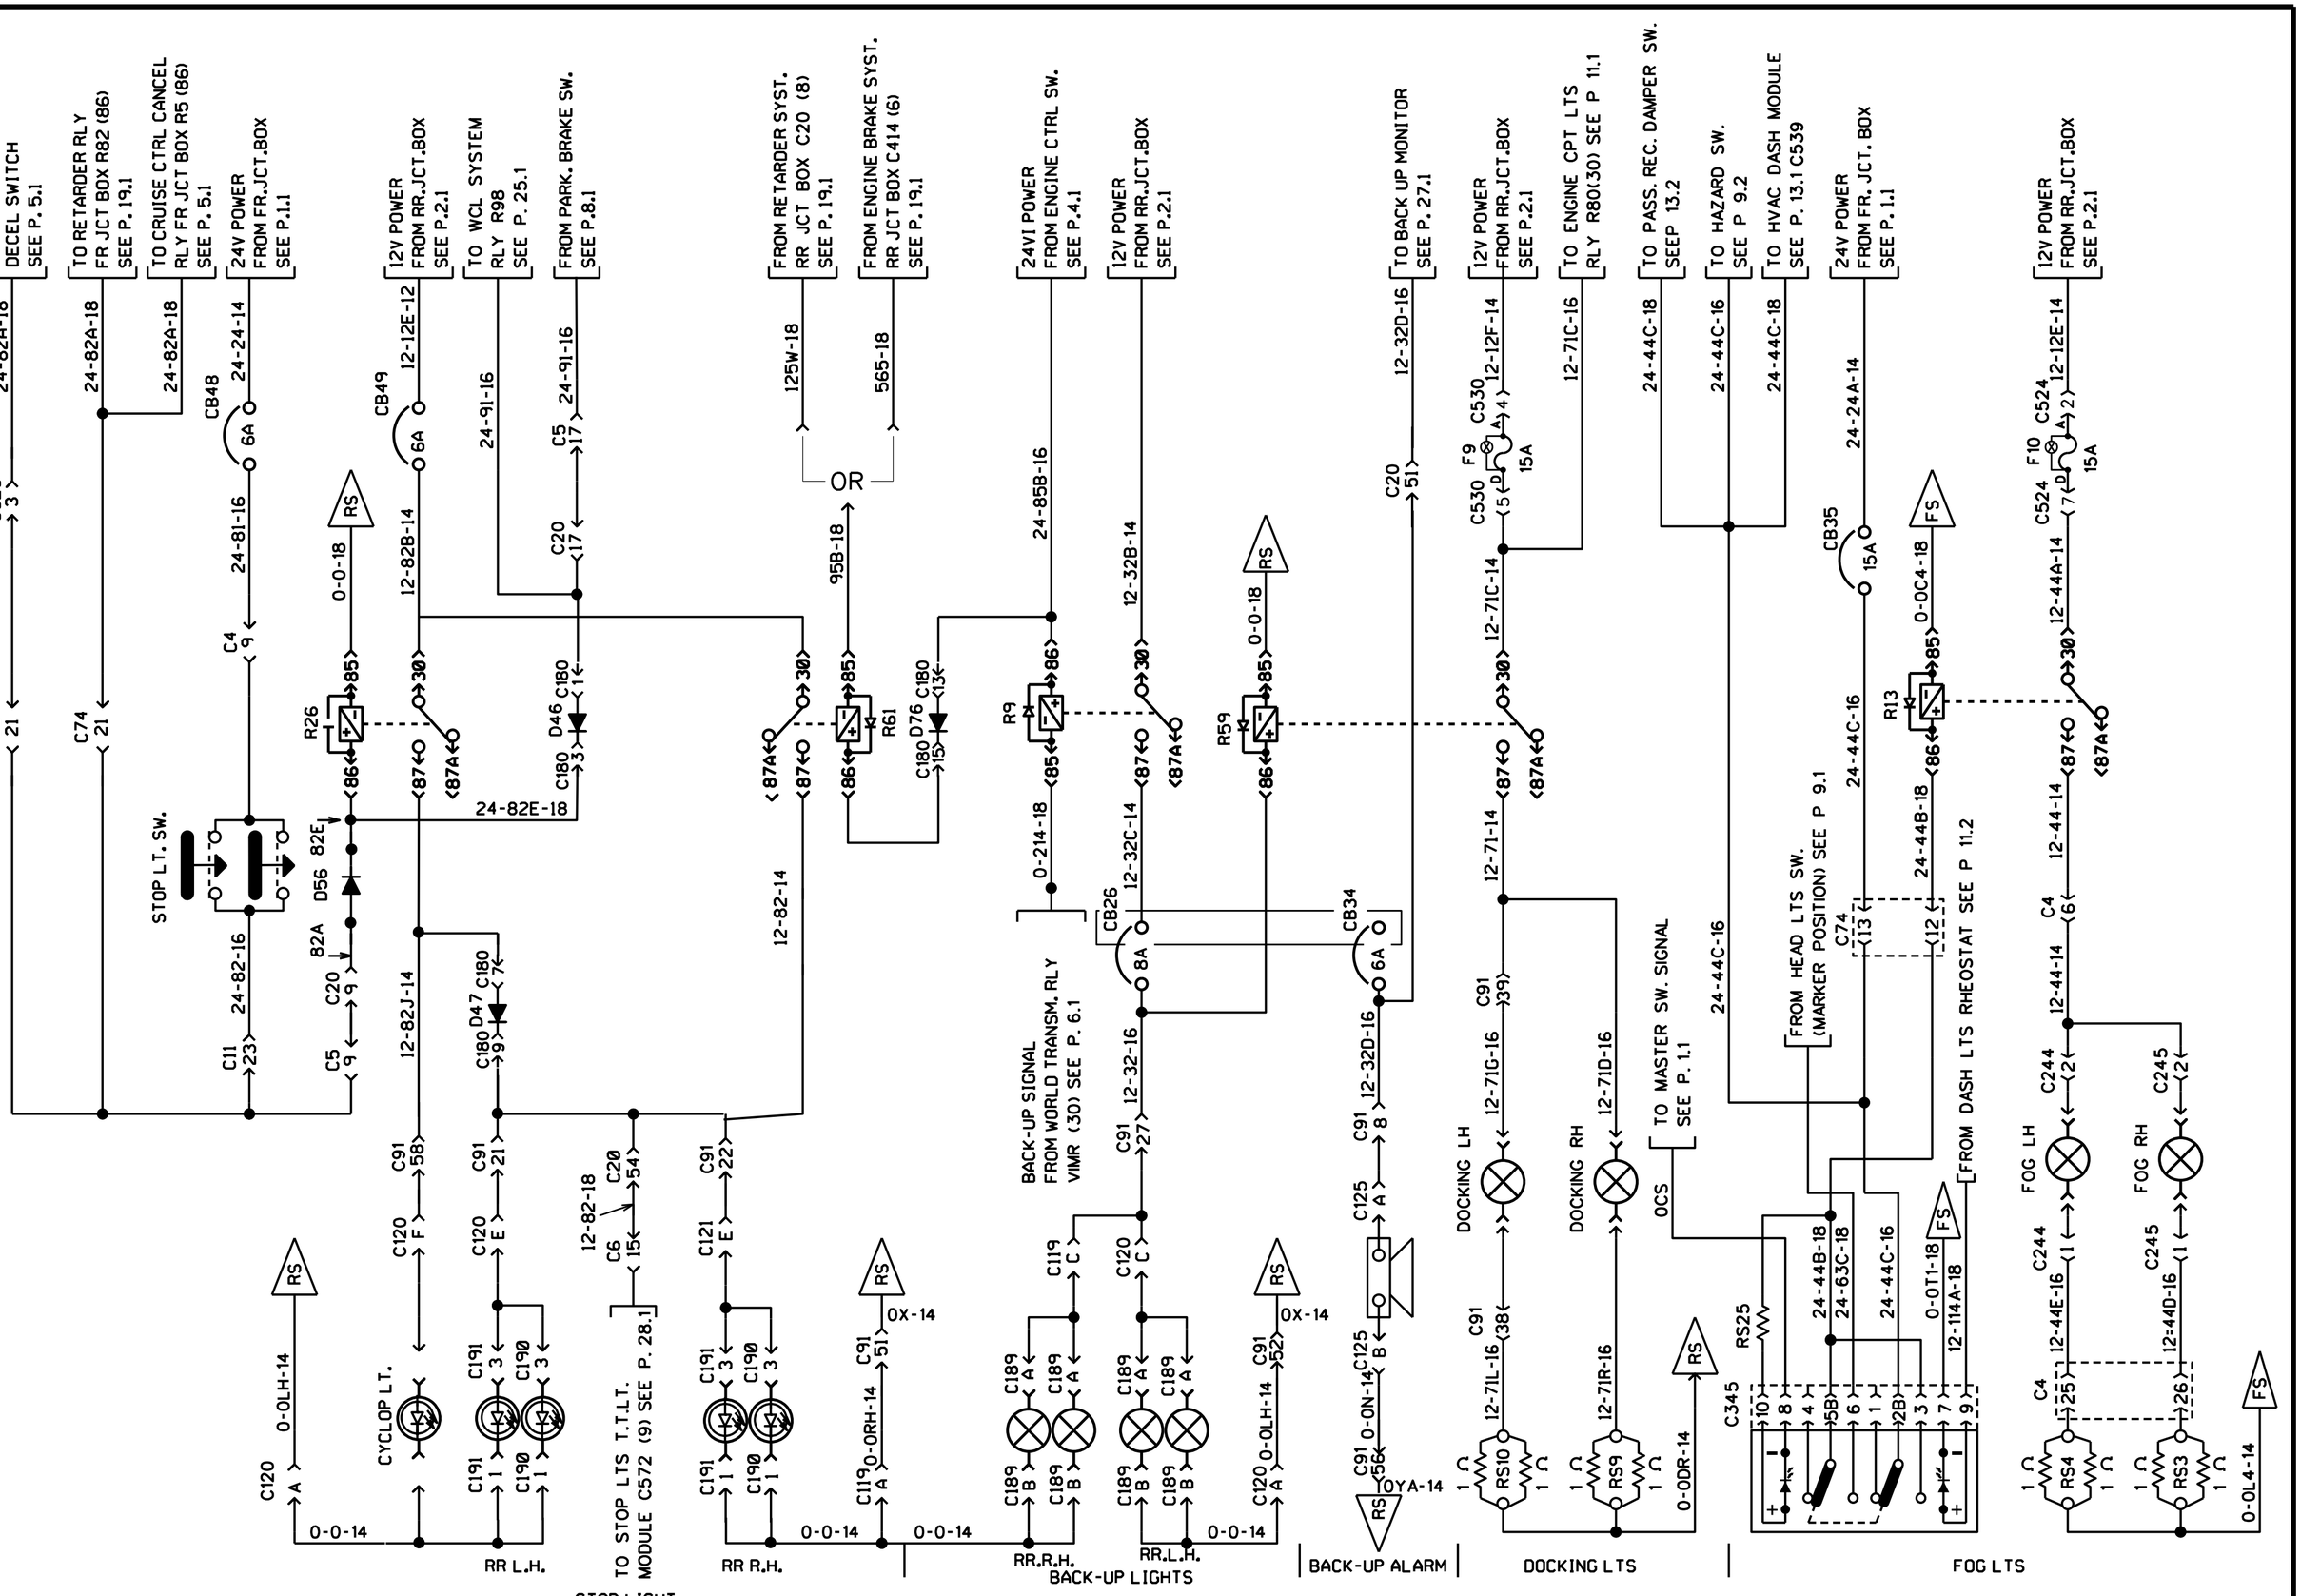

EXTERIOR LIGHTING

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 9.3	REVISION 00

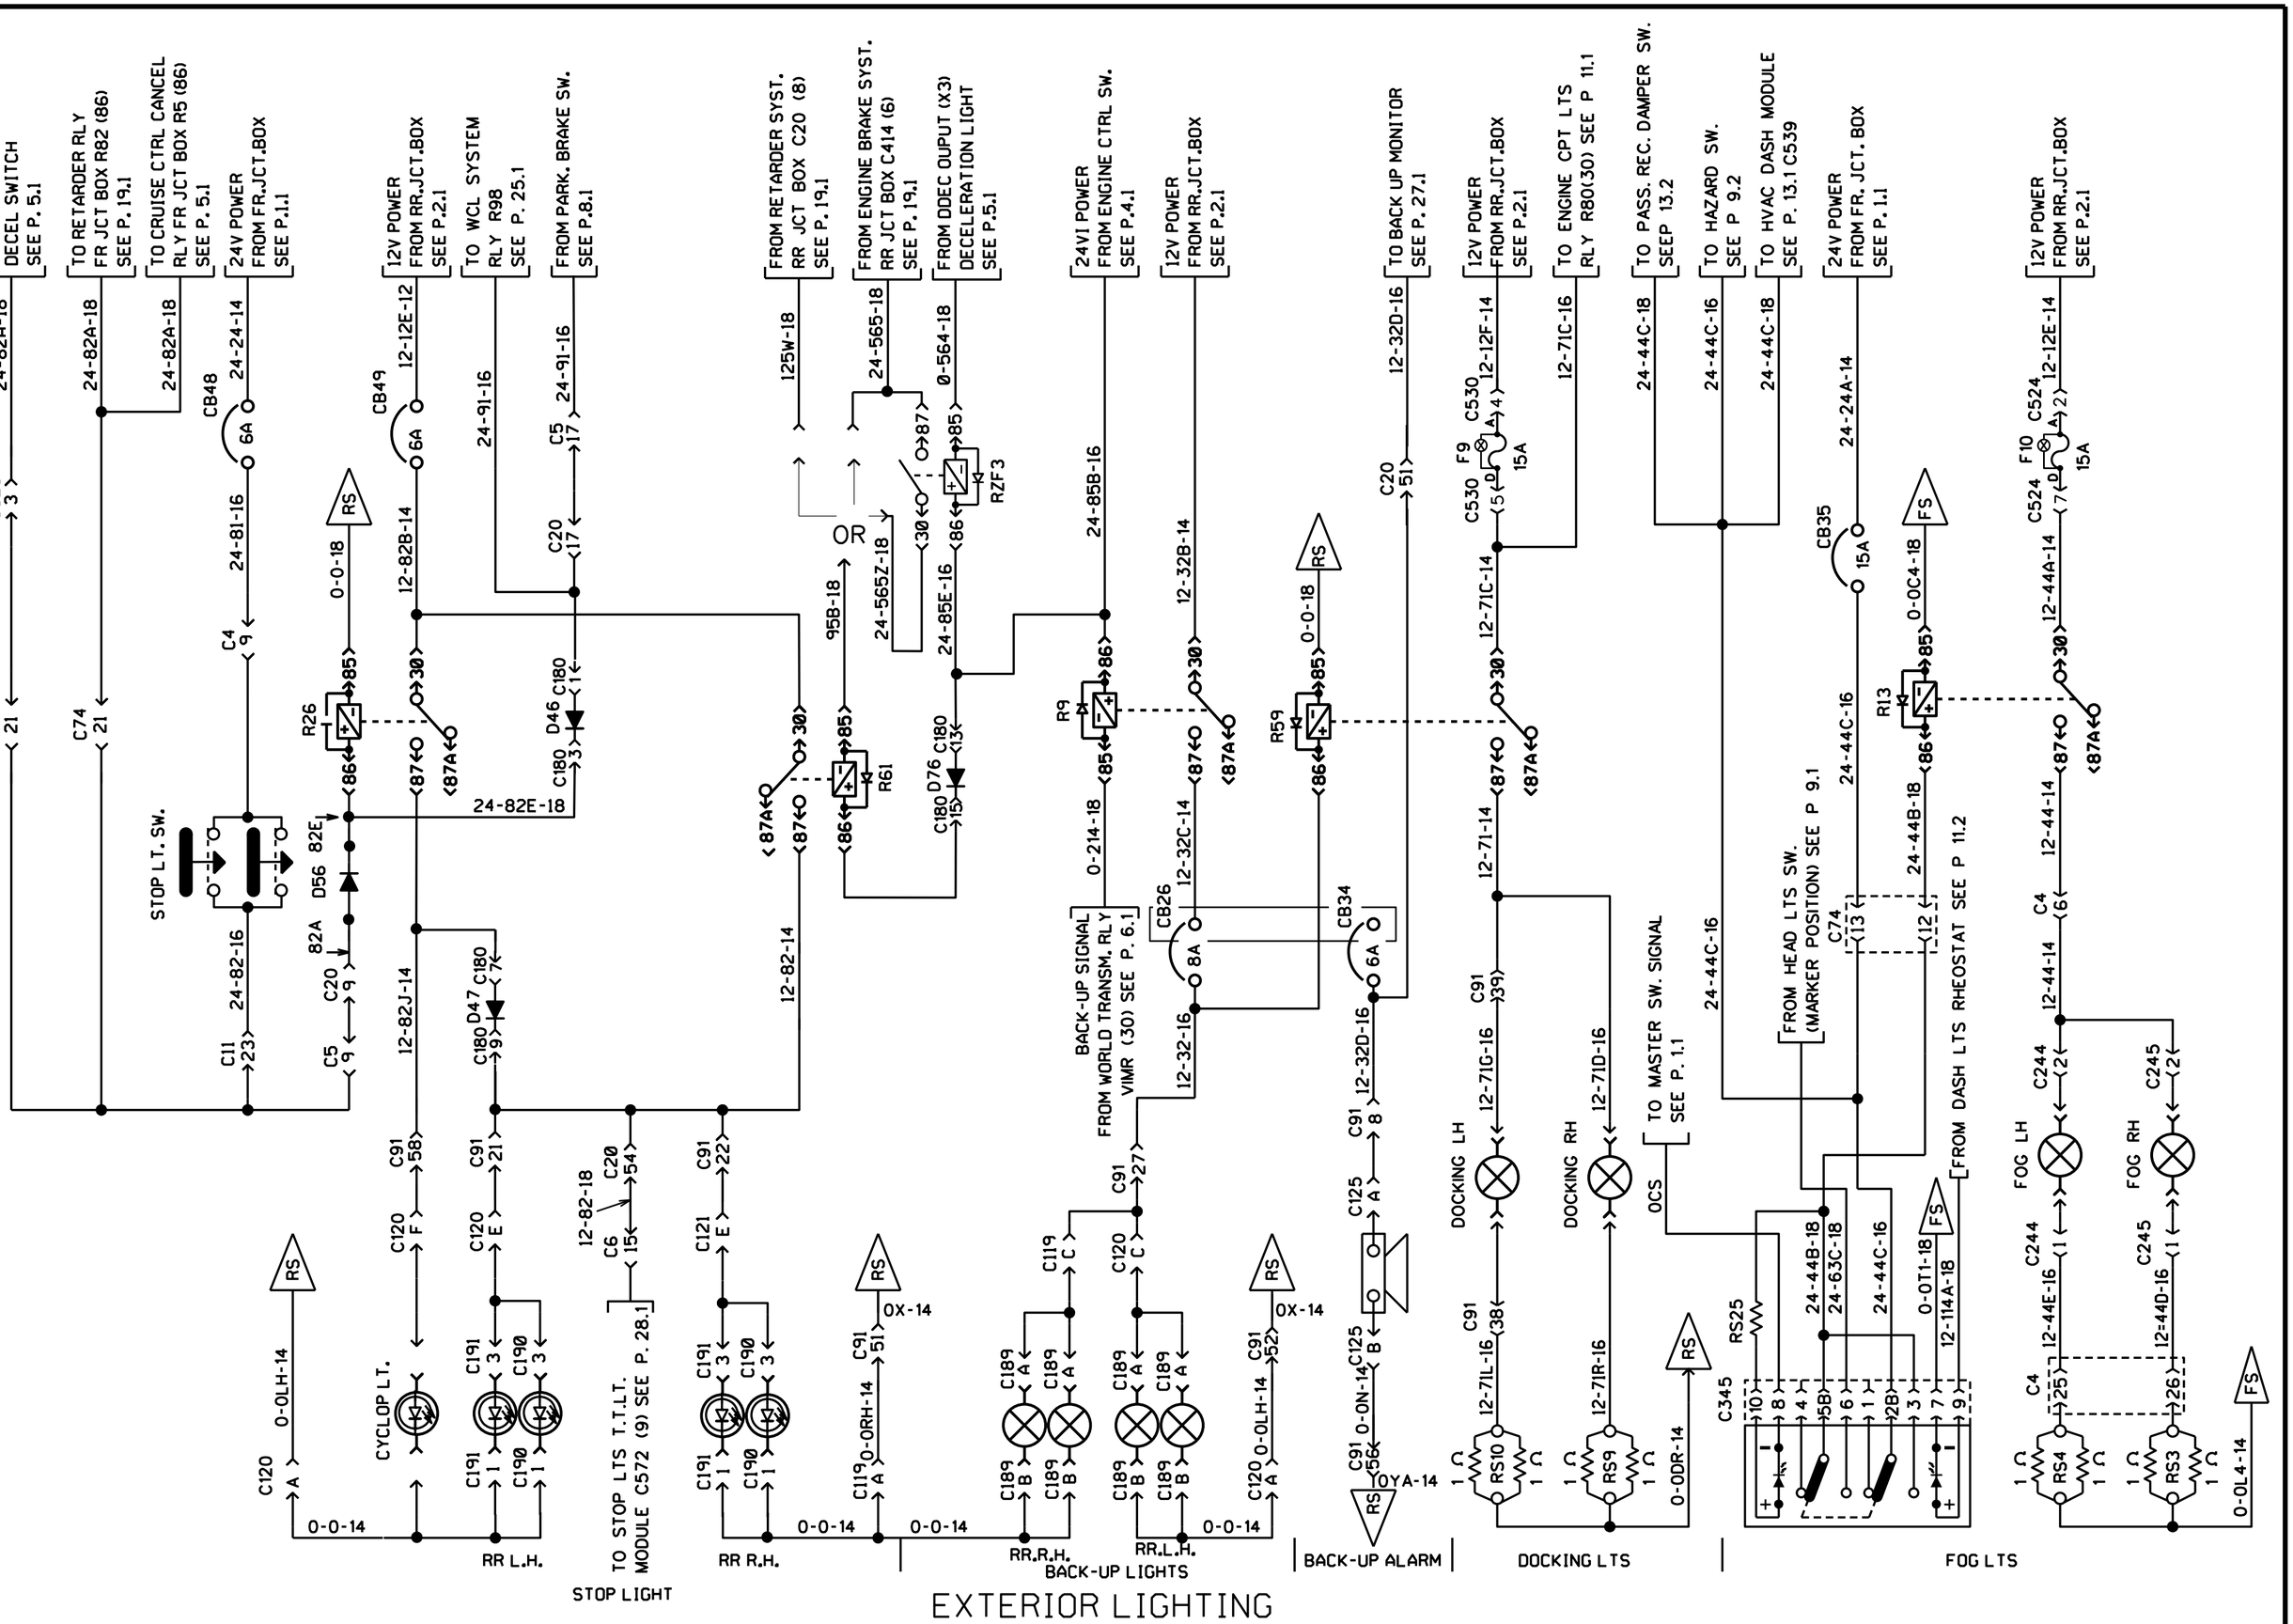
STOP LT. SW.
STOP LIGHT
RR L.H.
RR R.H.
BACK-UP LIGHTS
BACK-UP ALARM
DOCKING LTS
FOG LTS
OR
EXTERIOR LIGHTING

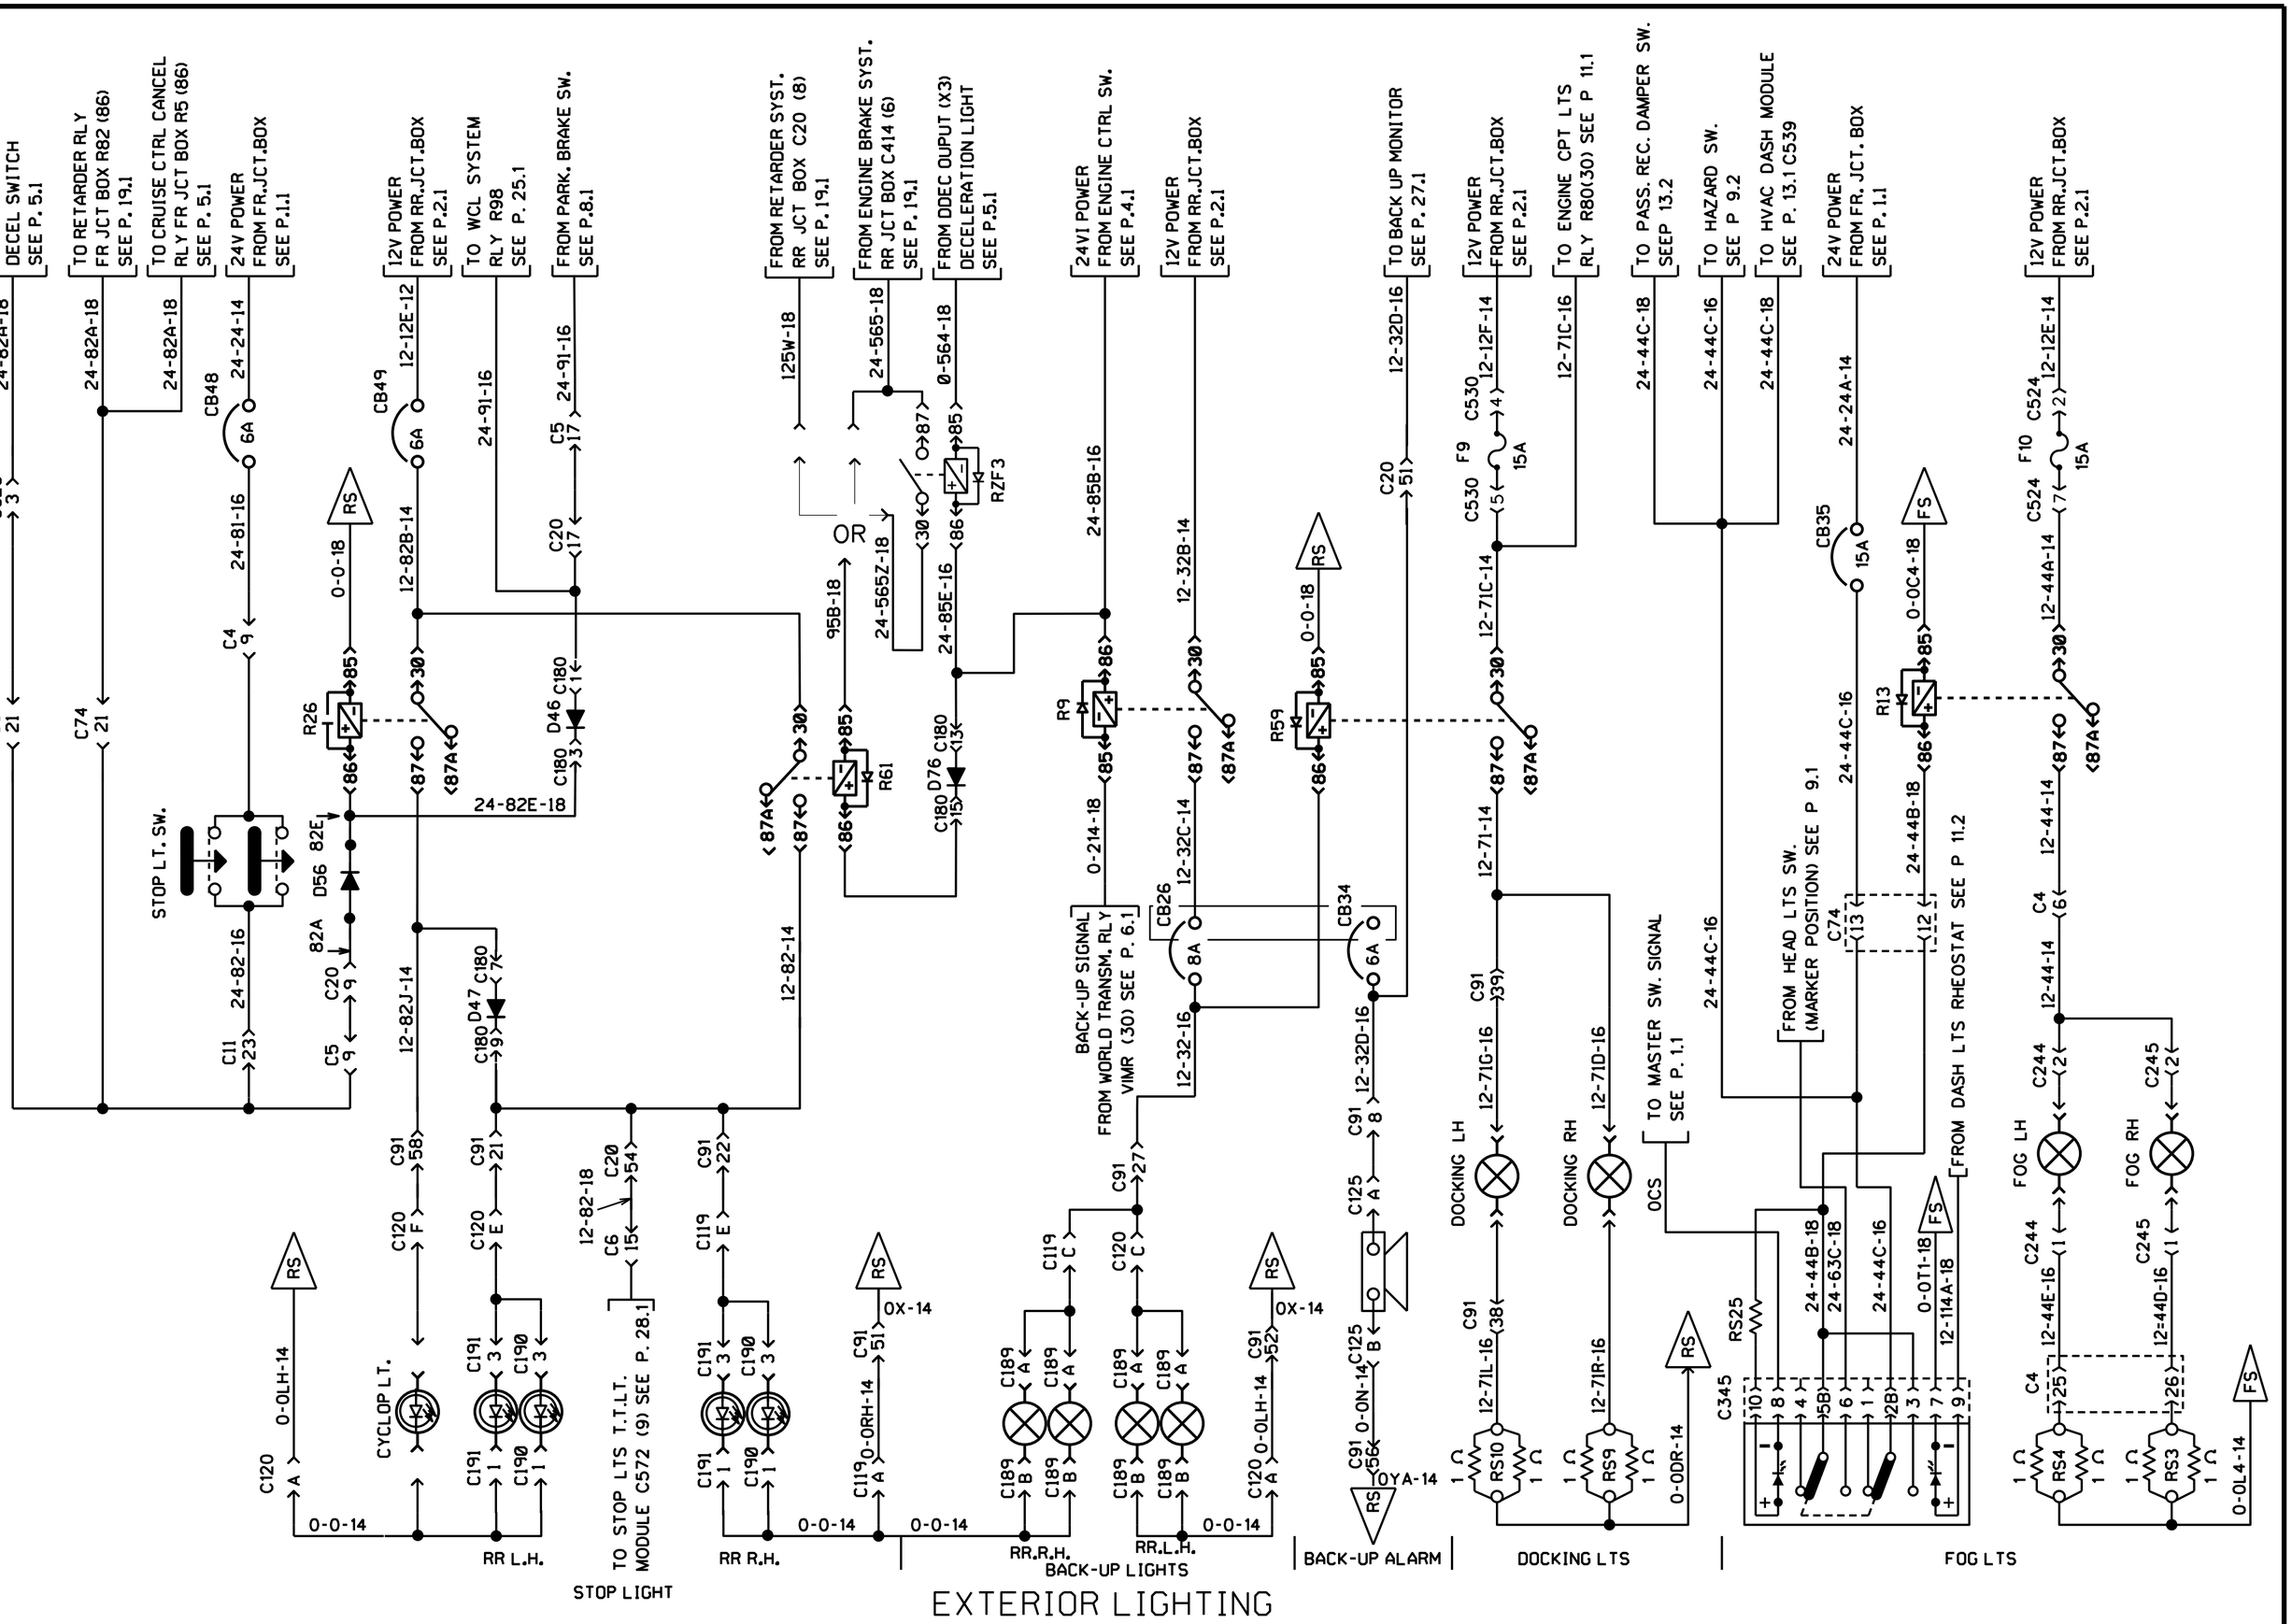

EXTERIOR LIGHTING

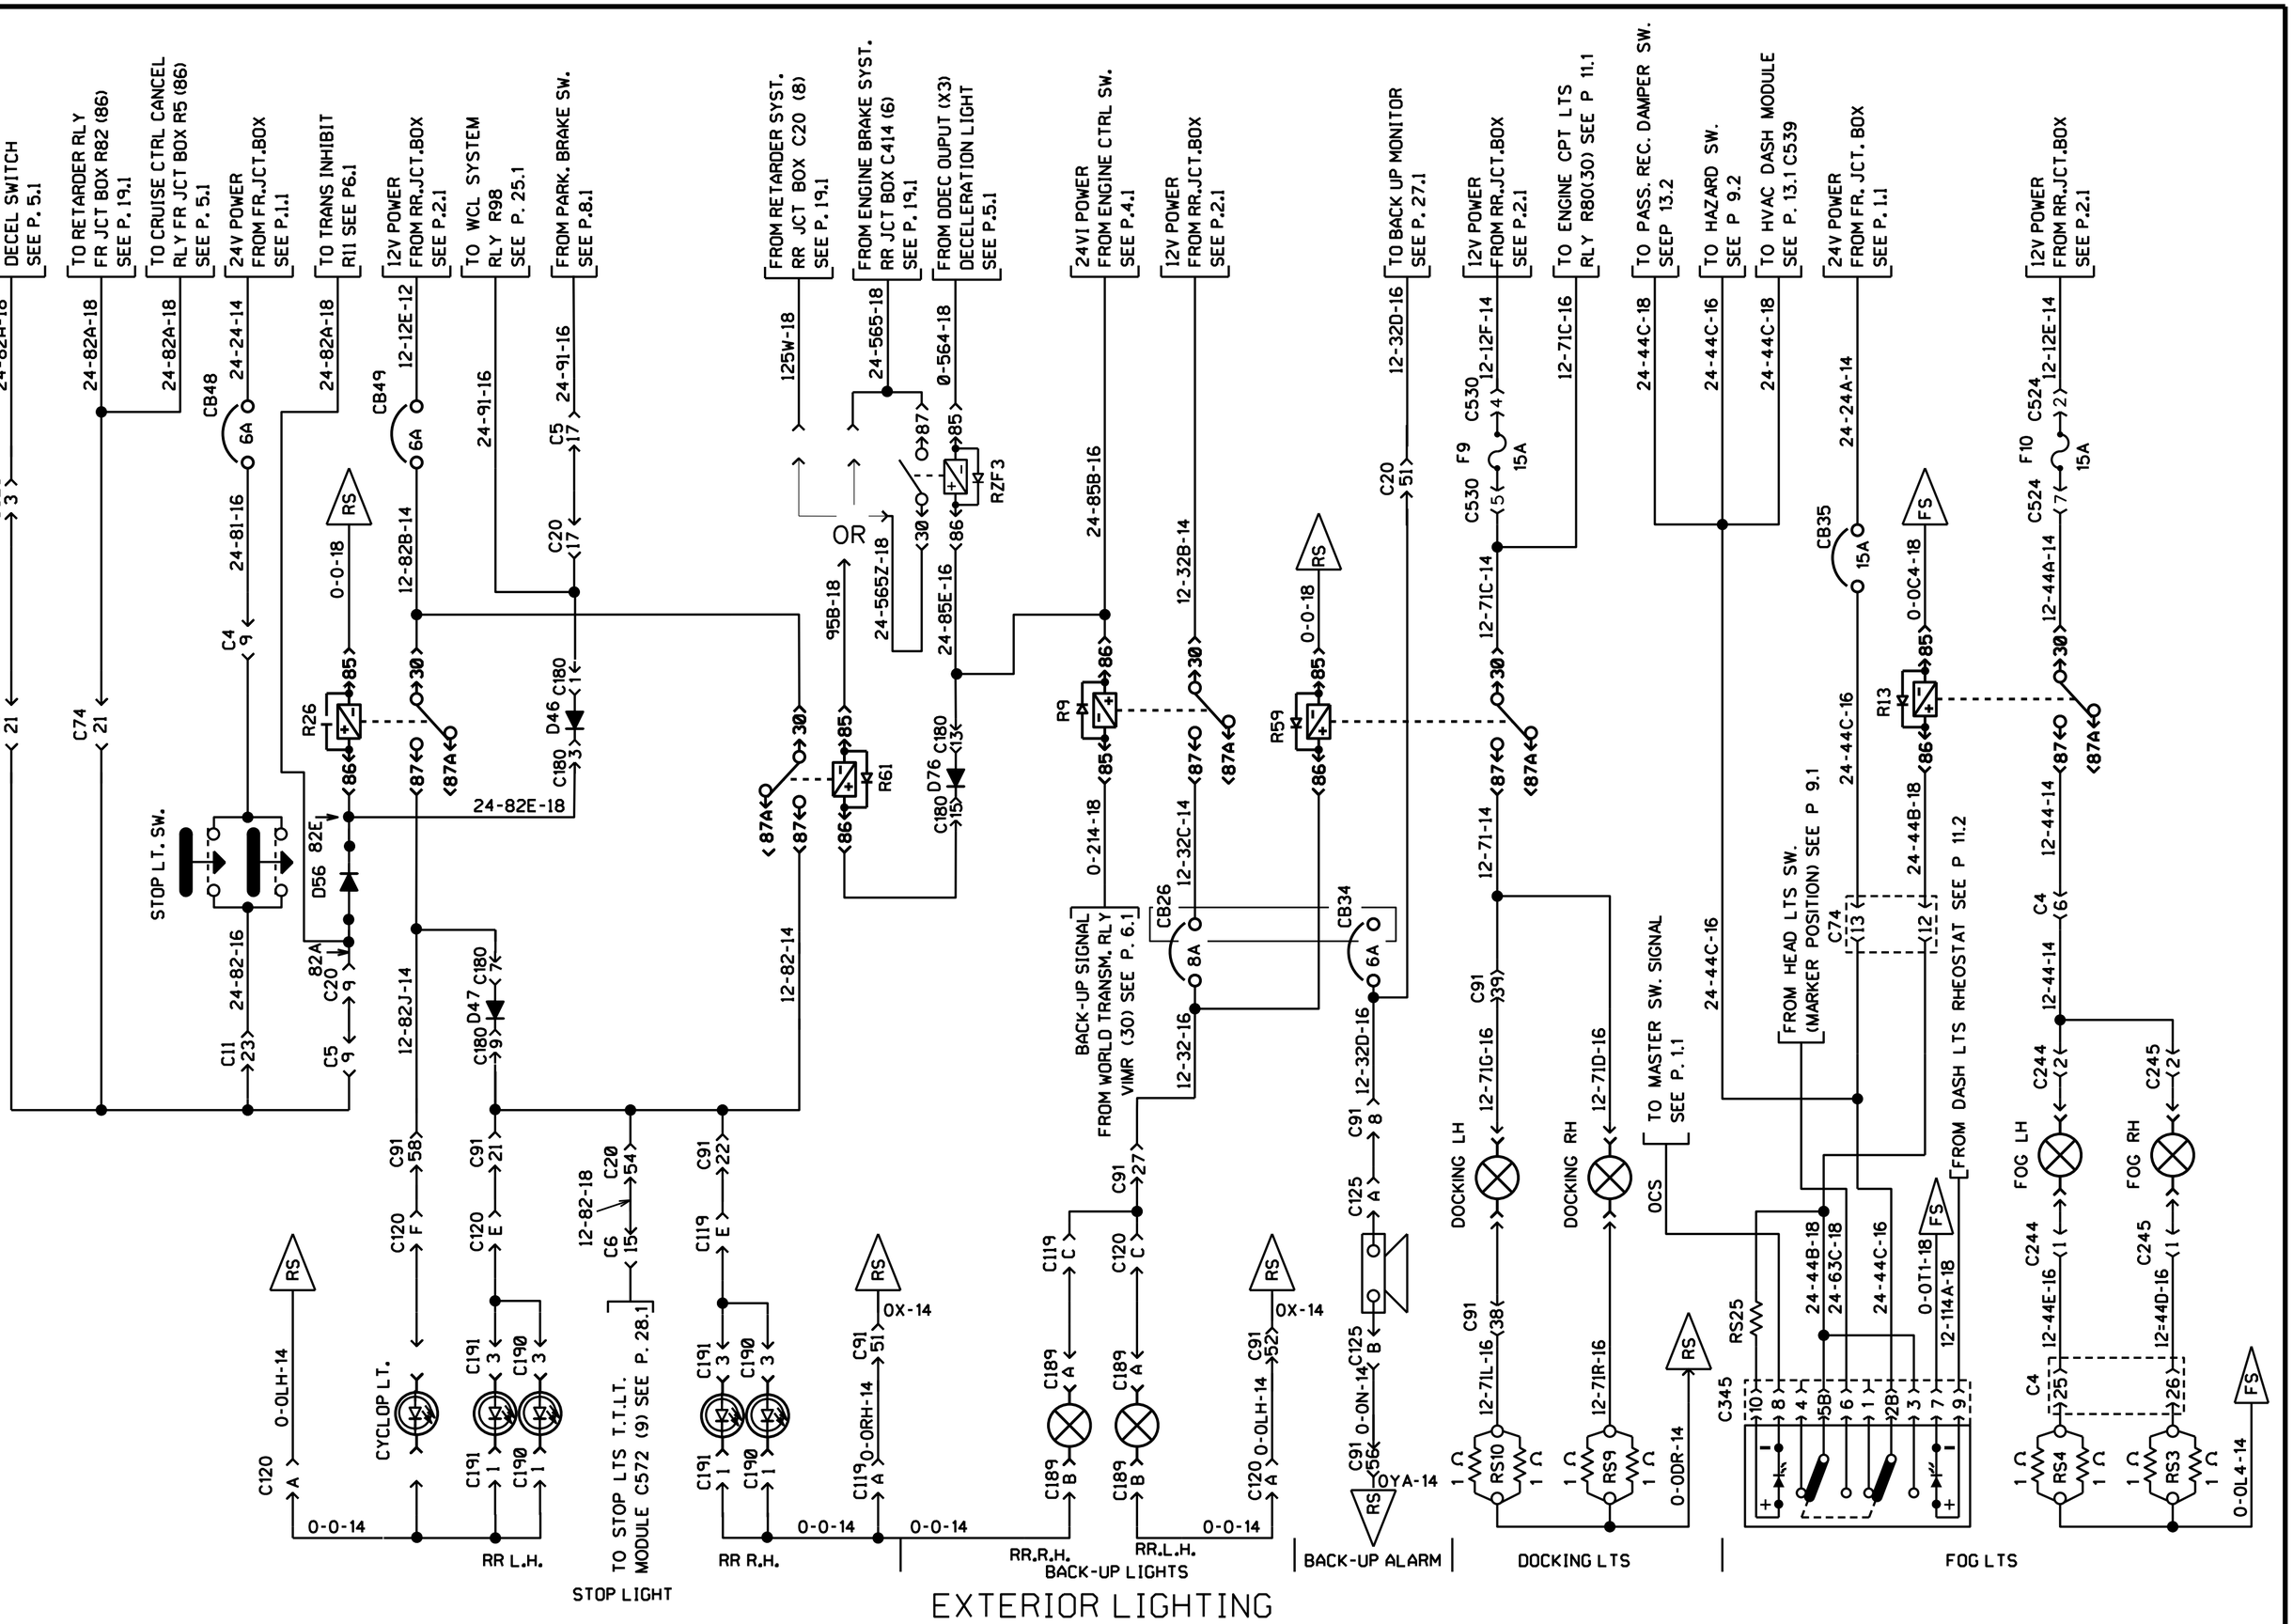

EXTERIOR LIGHTING

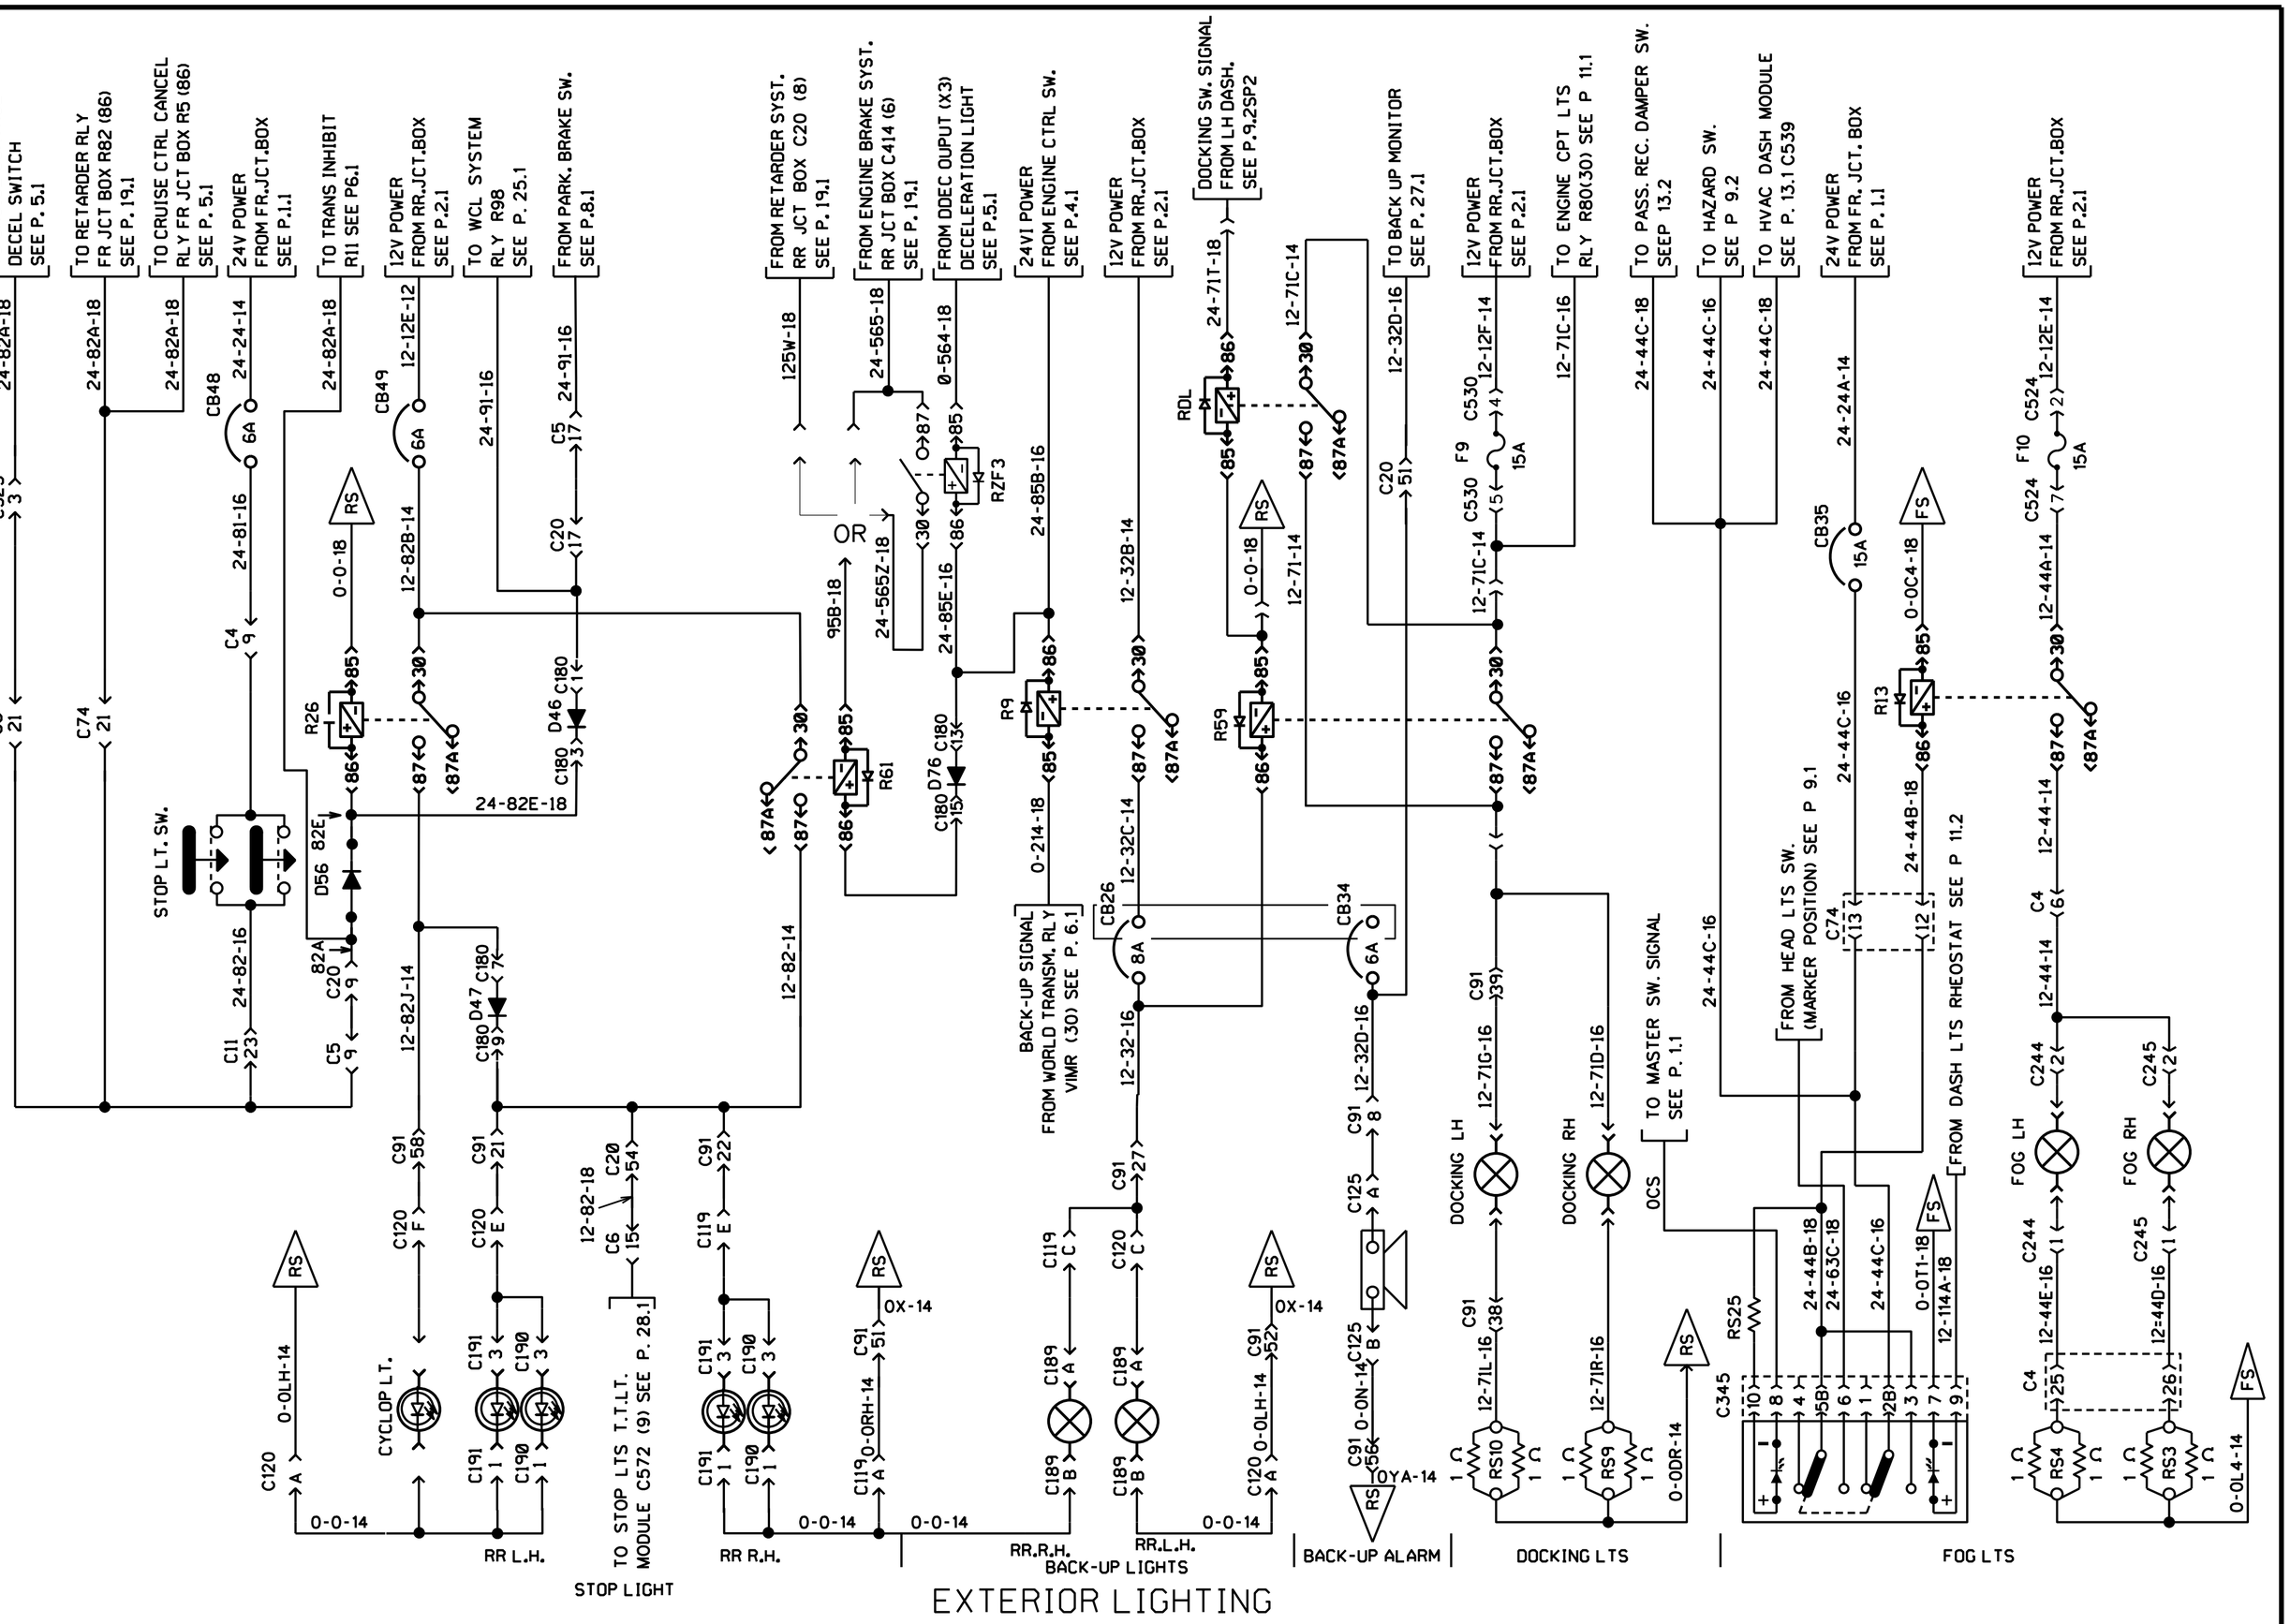

EXTERIOR LIGHTING

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 9.3sp1	REVISION 00

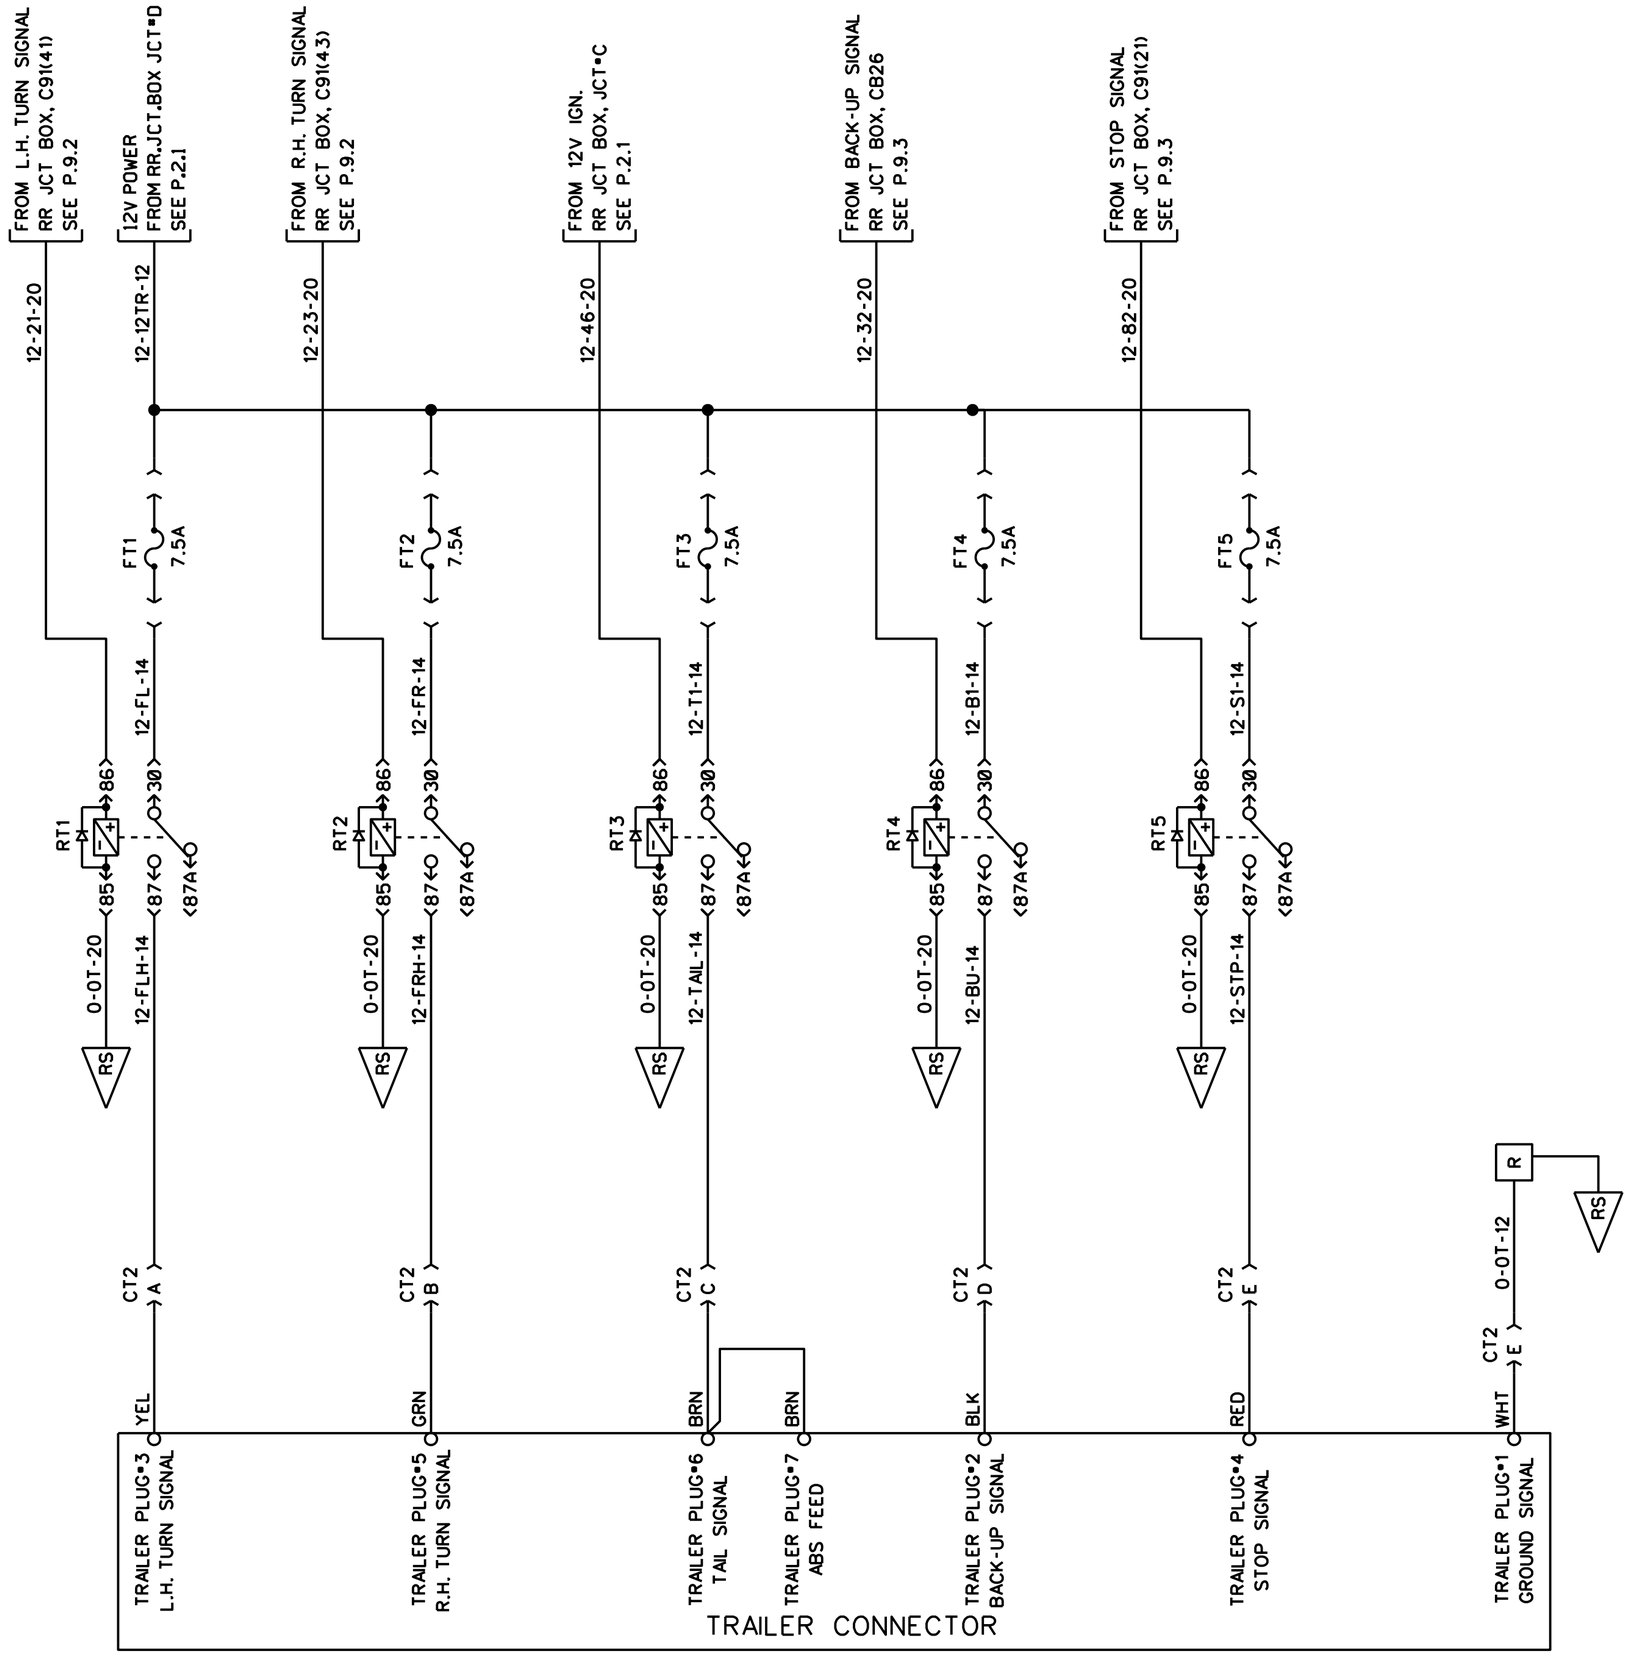

EXTERIOR TRAILER LED LIGHTING

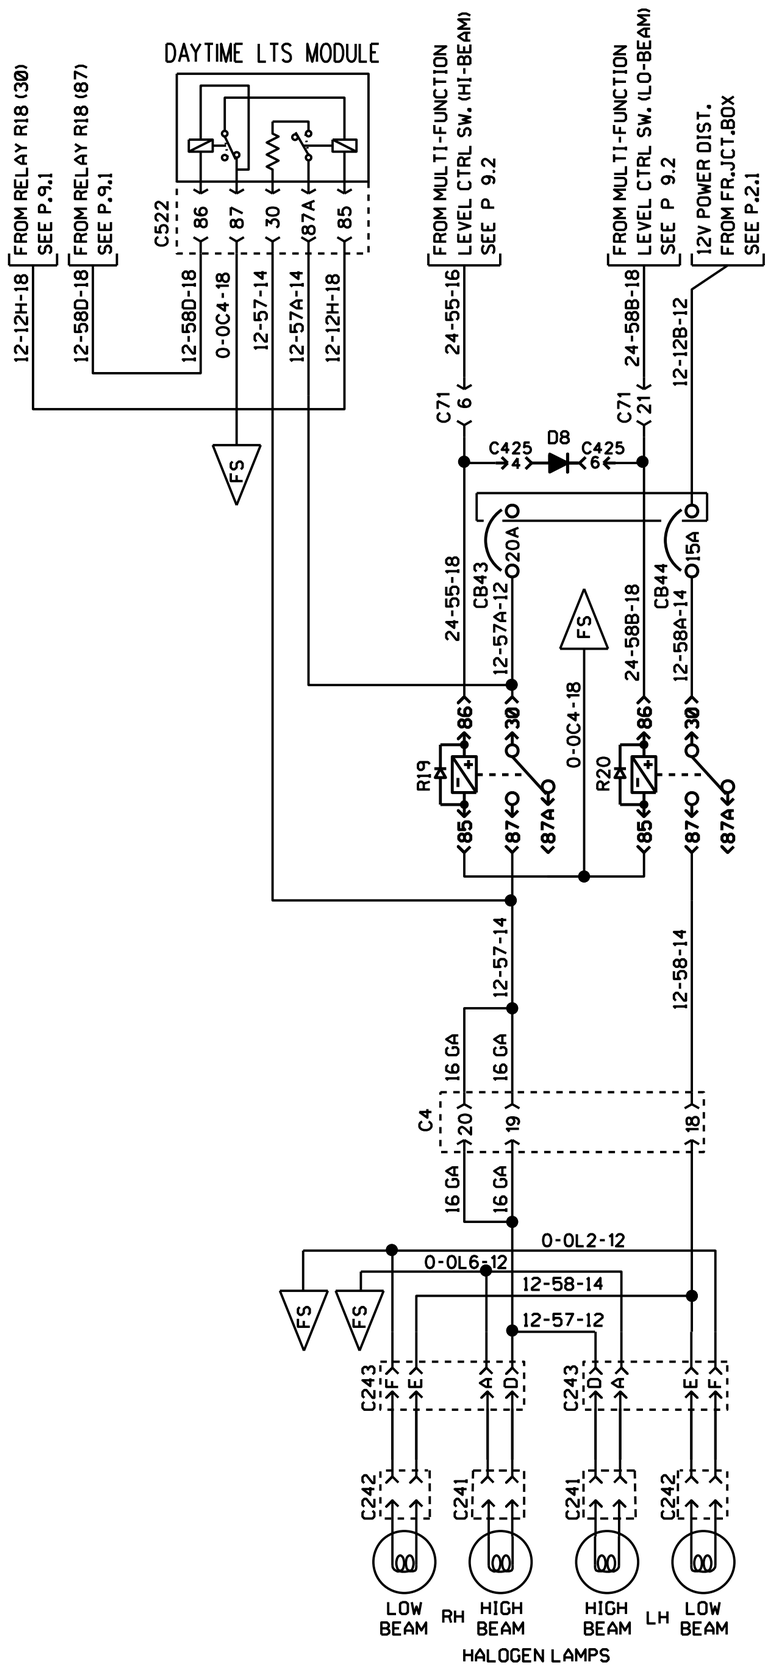

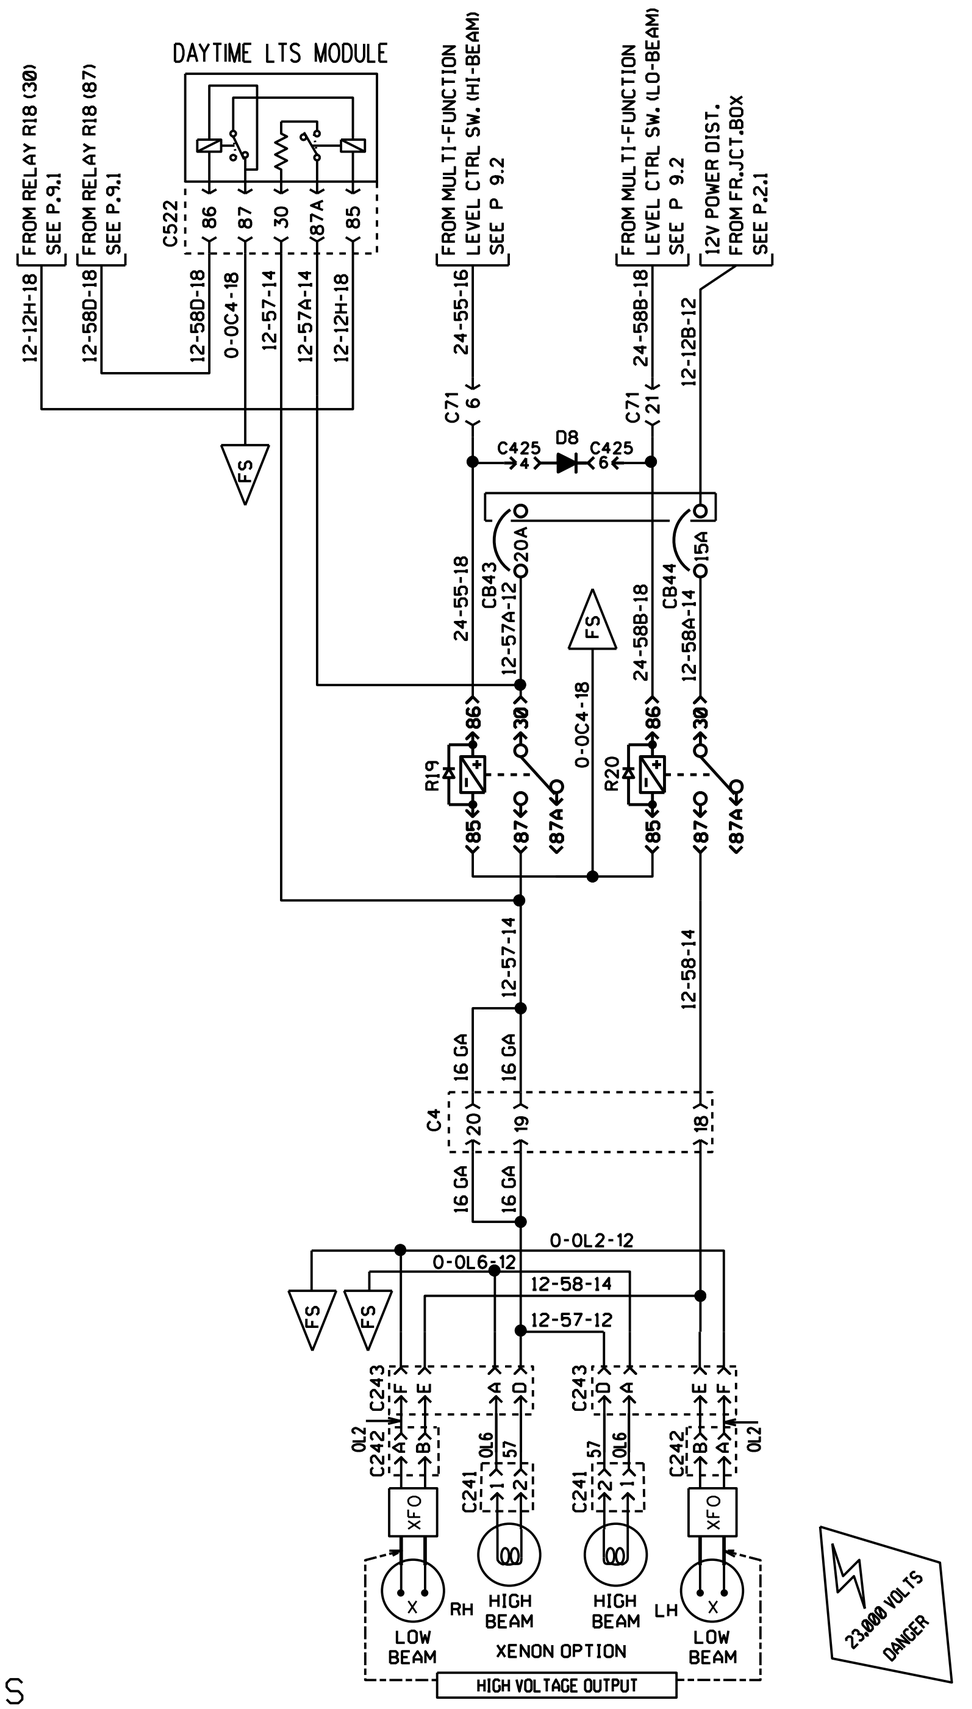

EXTERIOR HEADLIGHTS

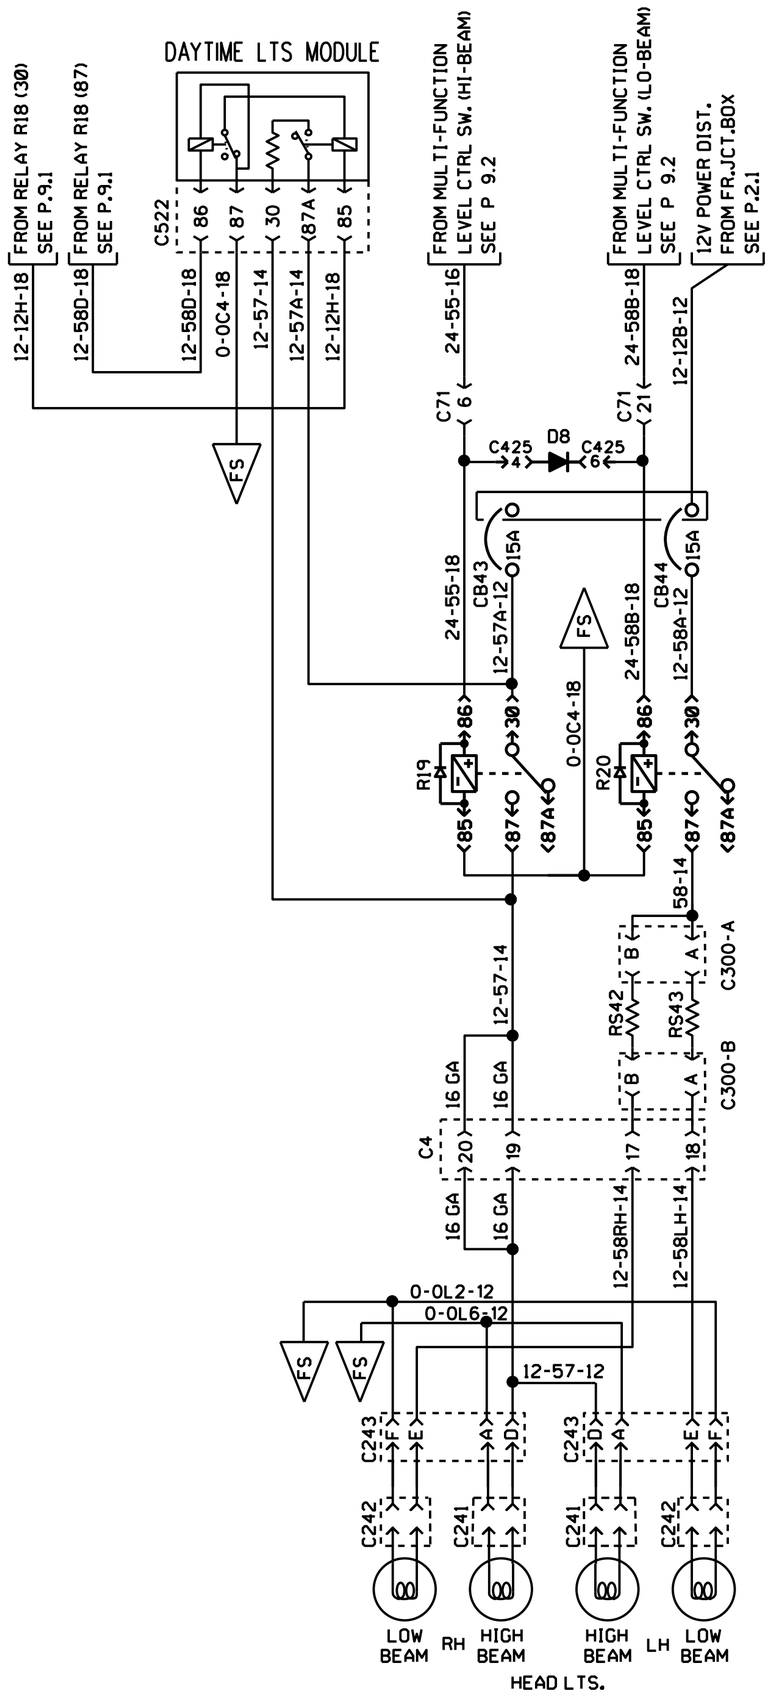

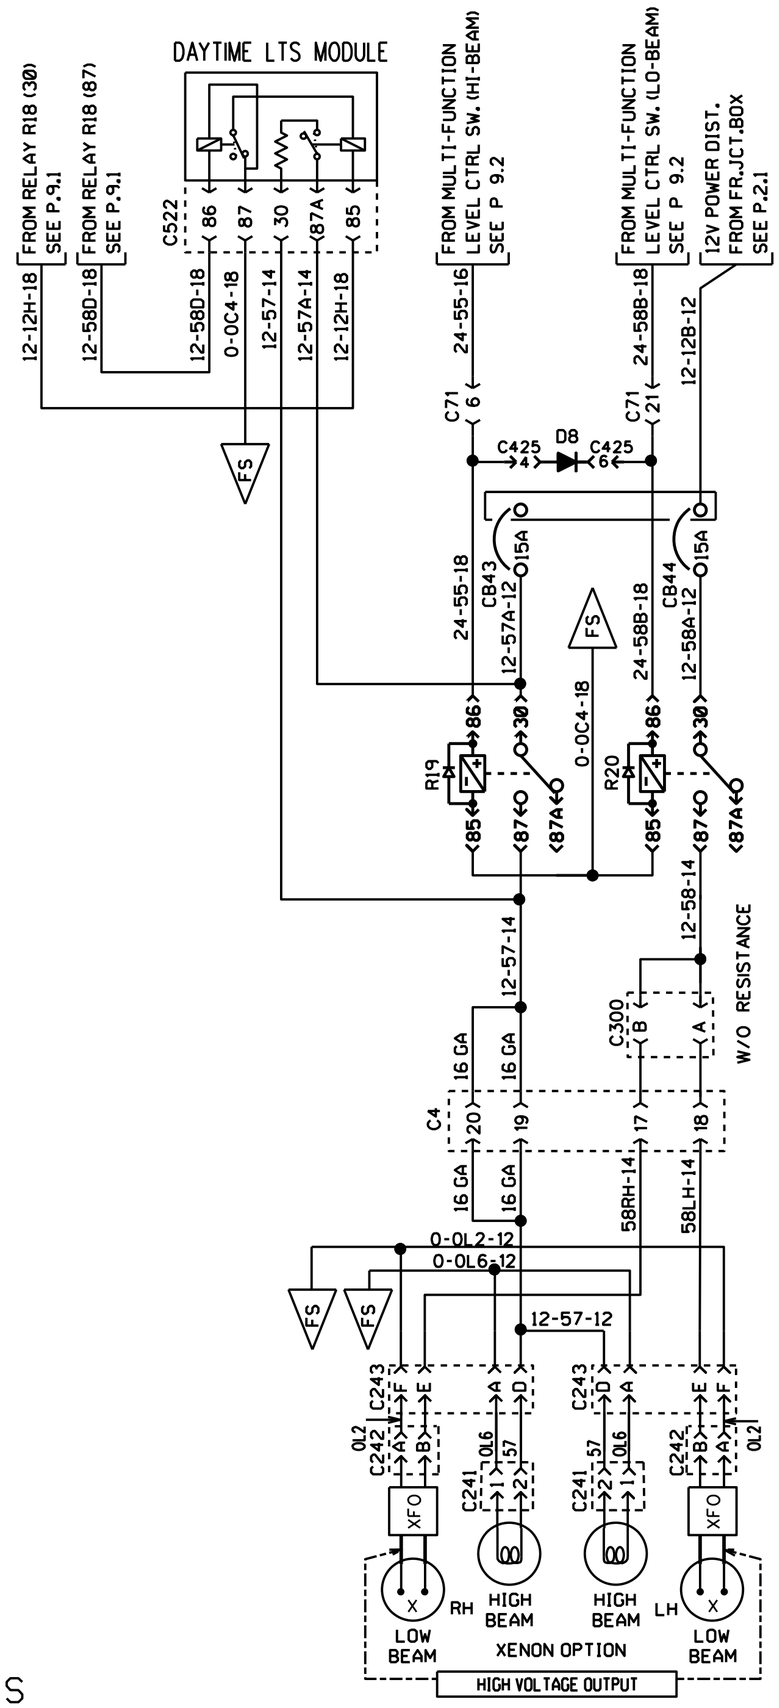

EXTERIOR HEADLIGHTS

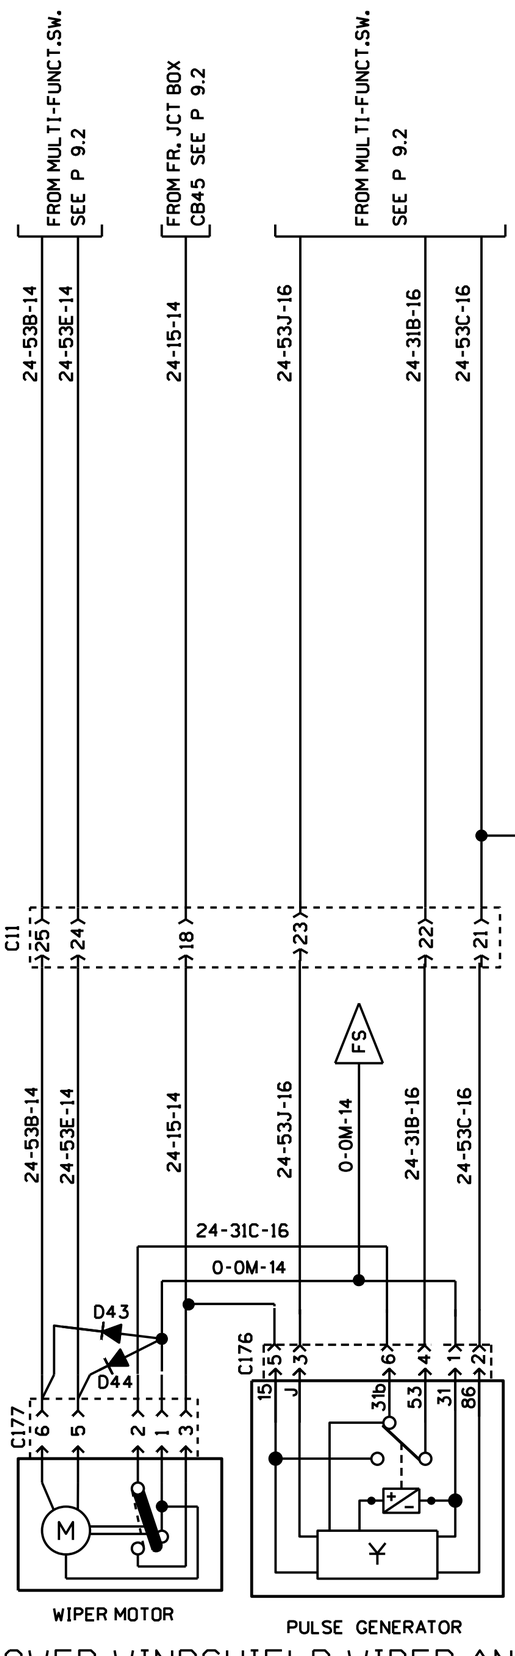

LOWER WINDSHIELD WIPER AND WASHER

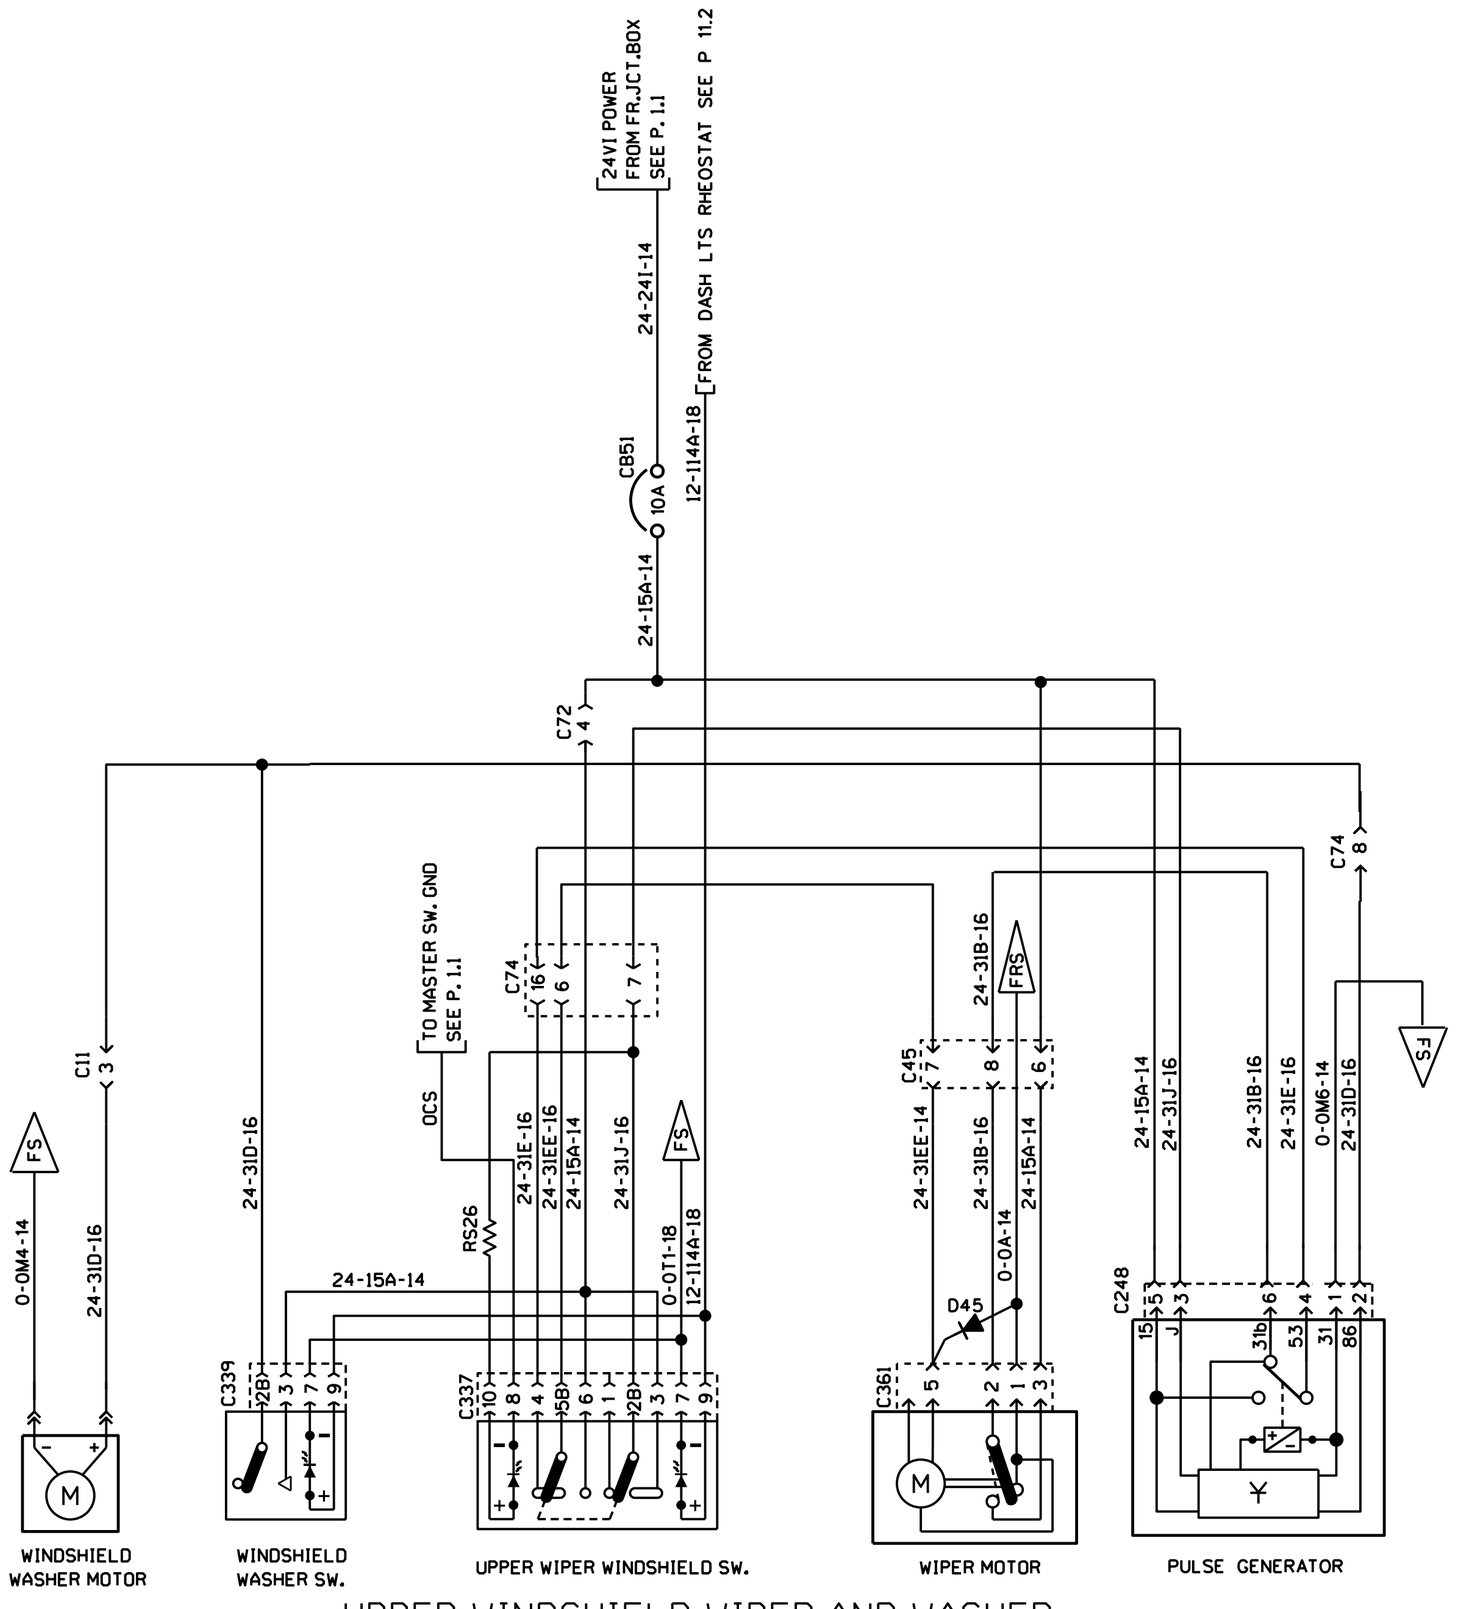

UPPER WINDSHIELD WIPER AND WASHER

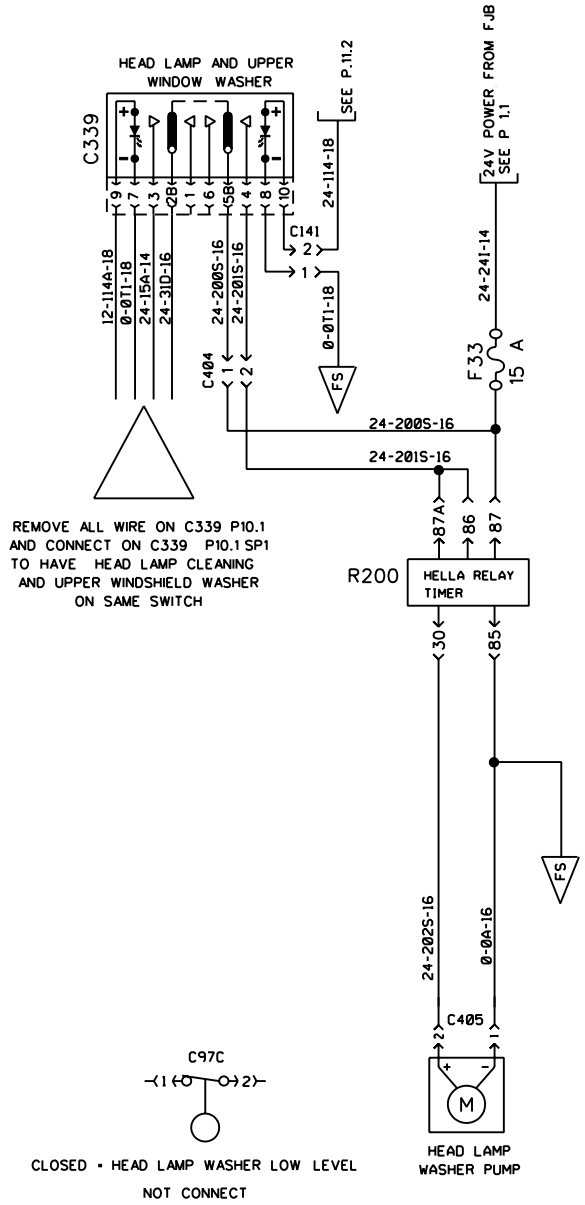

HEAD LAMP CLEANING SYSTEM

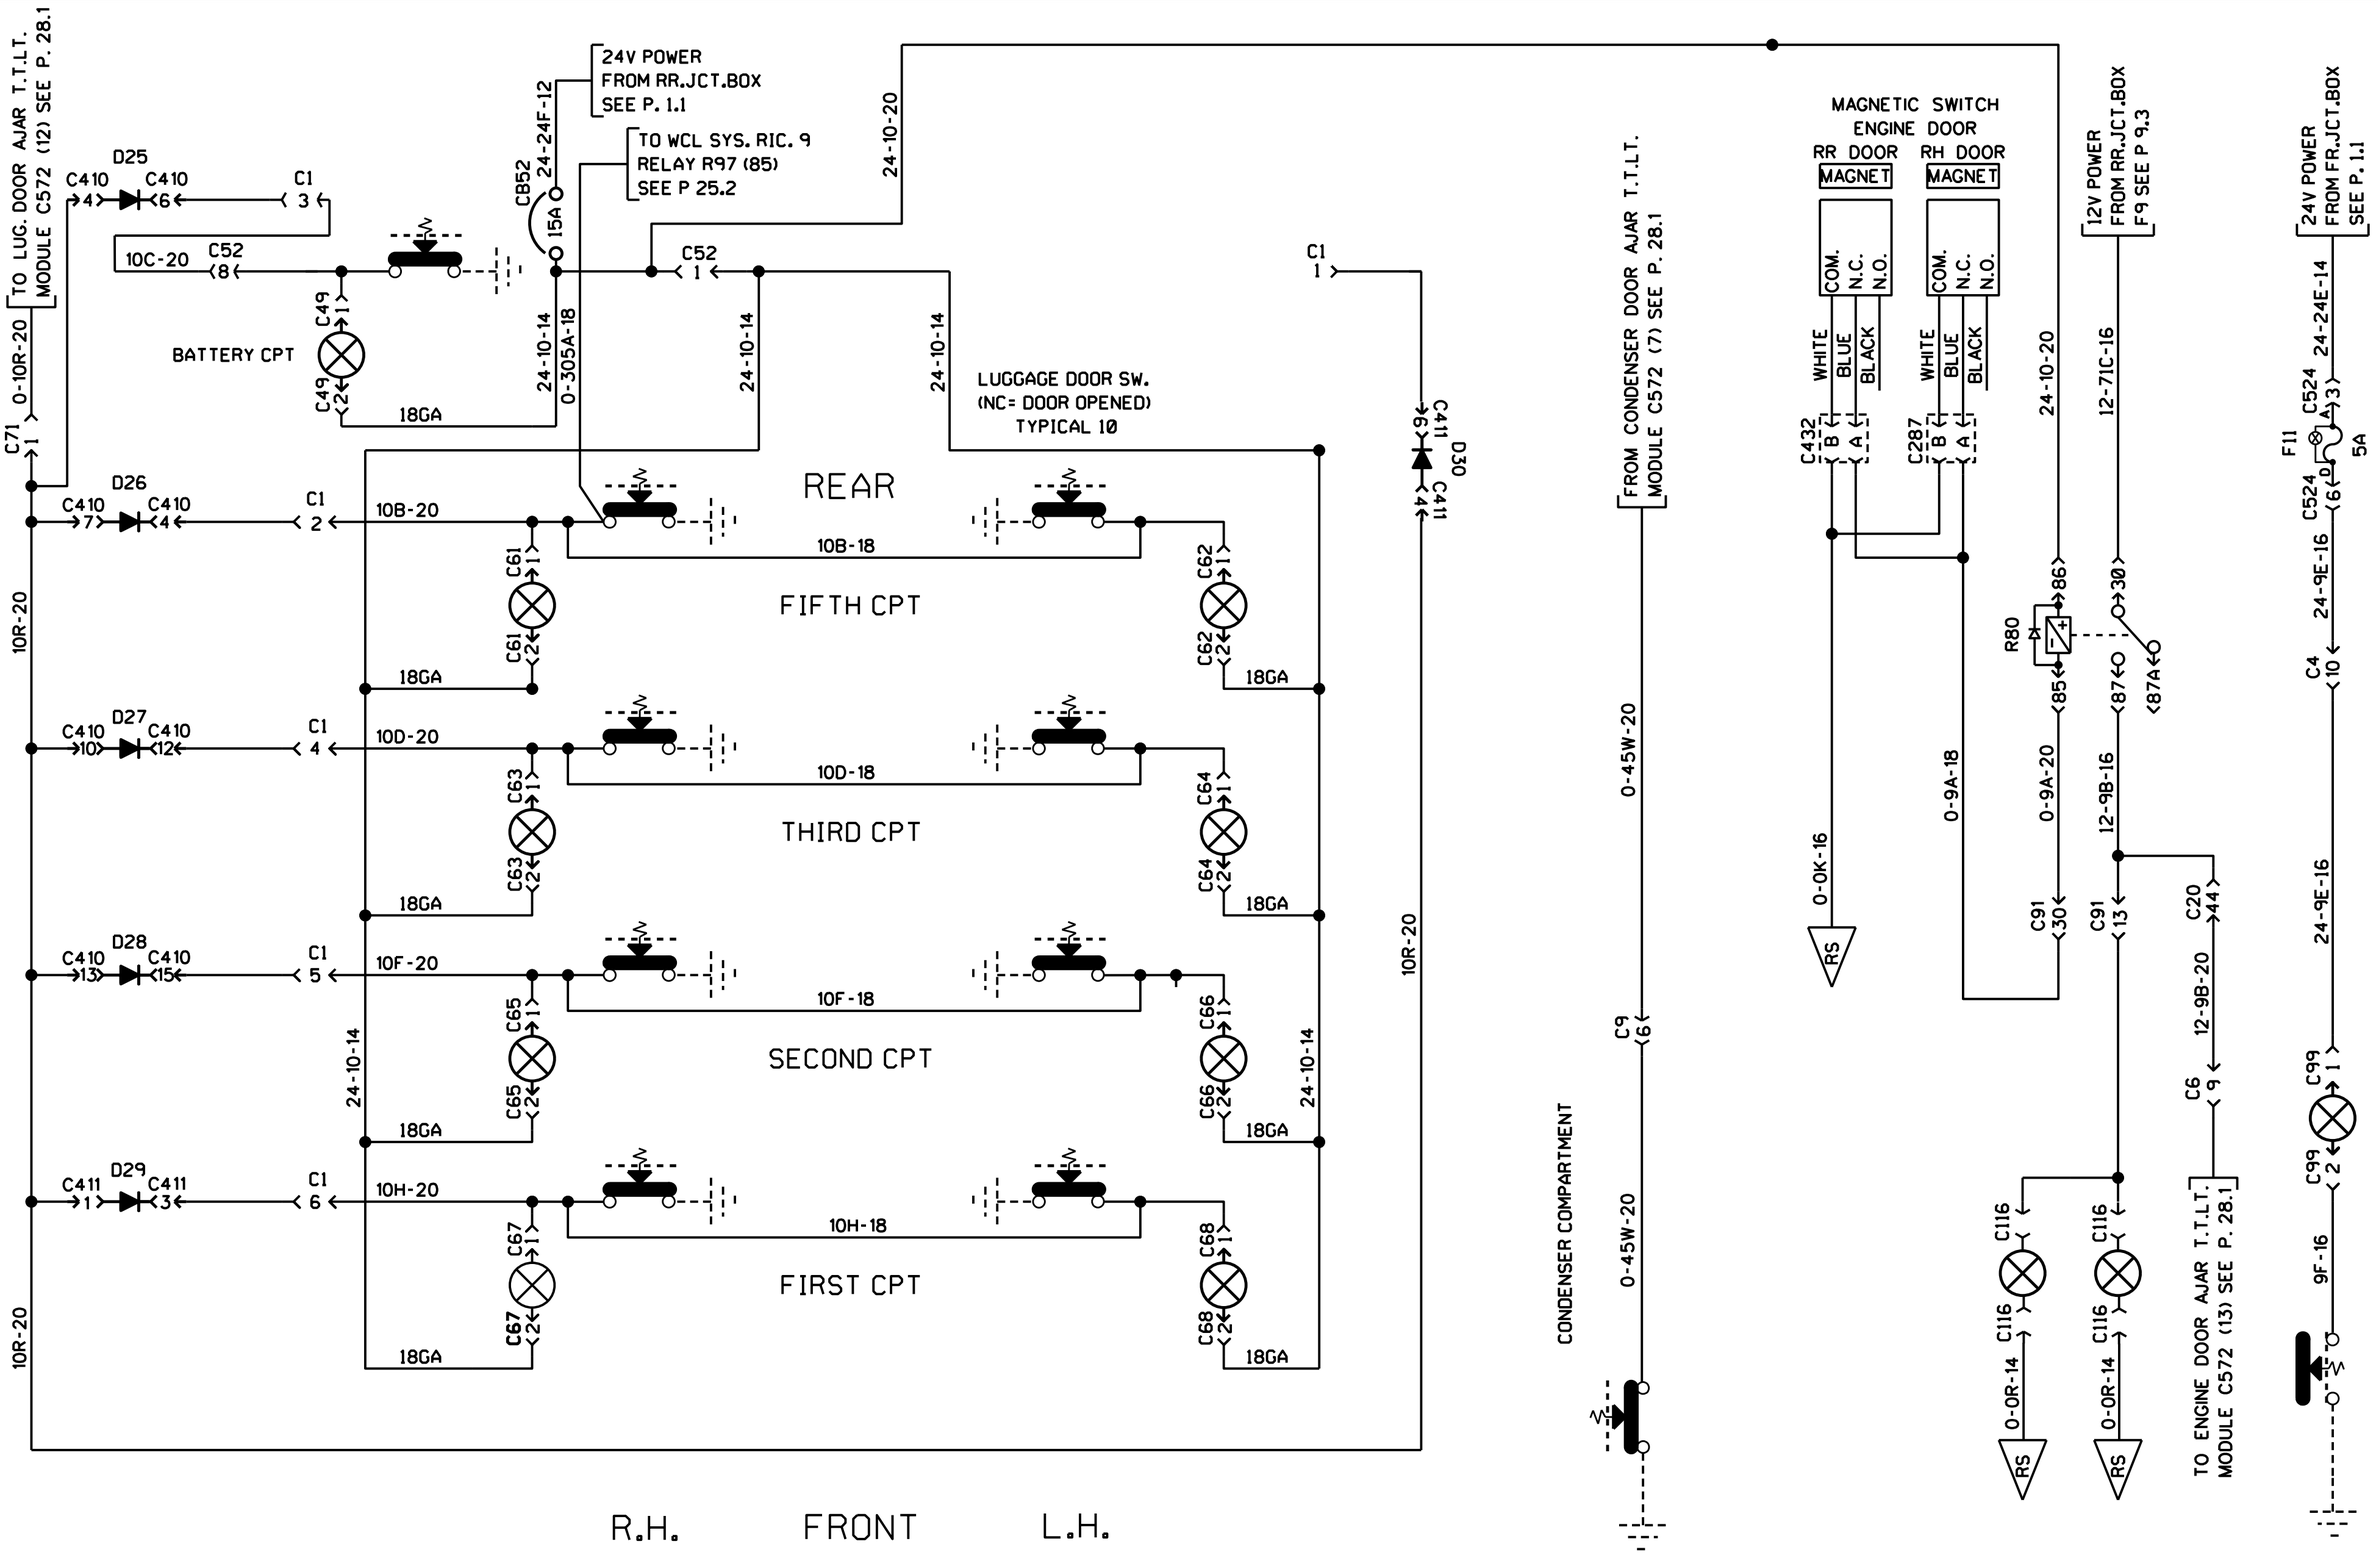

LUGGAGE COMPARTMENT AND DOOR AJAR LTS | DOOR AJAR SWITCH CONDENSER COMPT. | ENGINE COMPT. LTS. | FRONT SEVICE COMPT. LT.

INTERIOR LIGHTING

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 11.1	REVISION 00

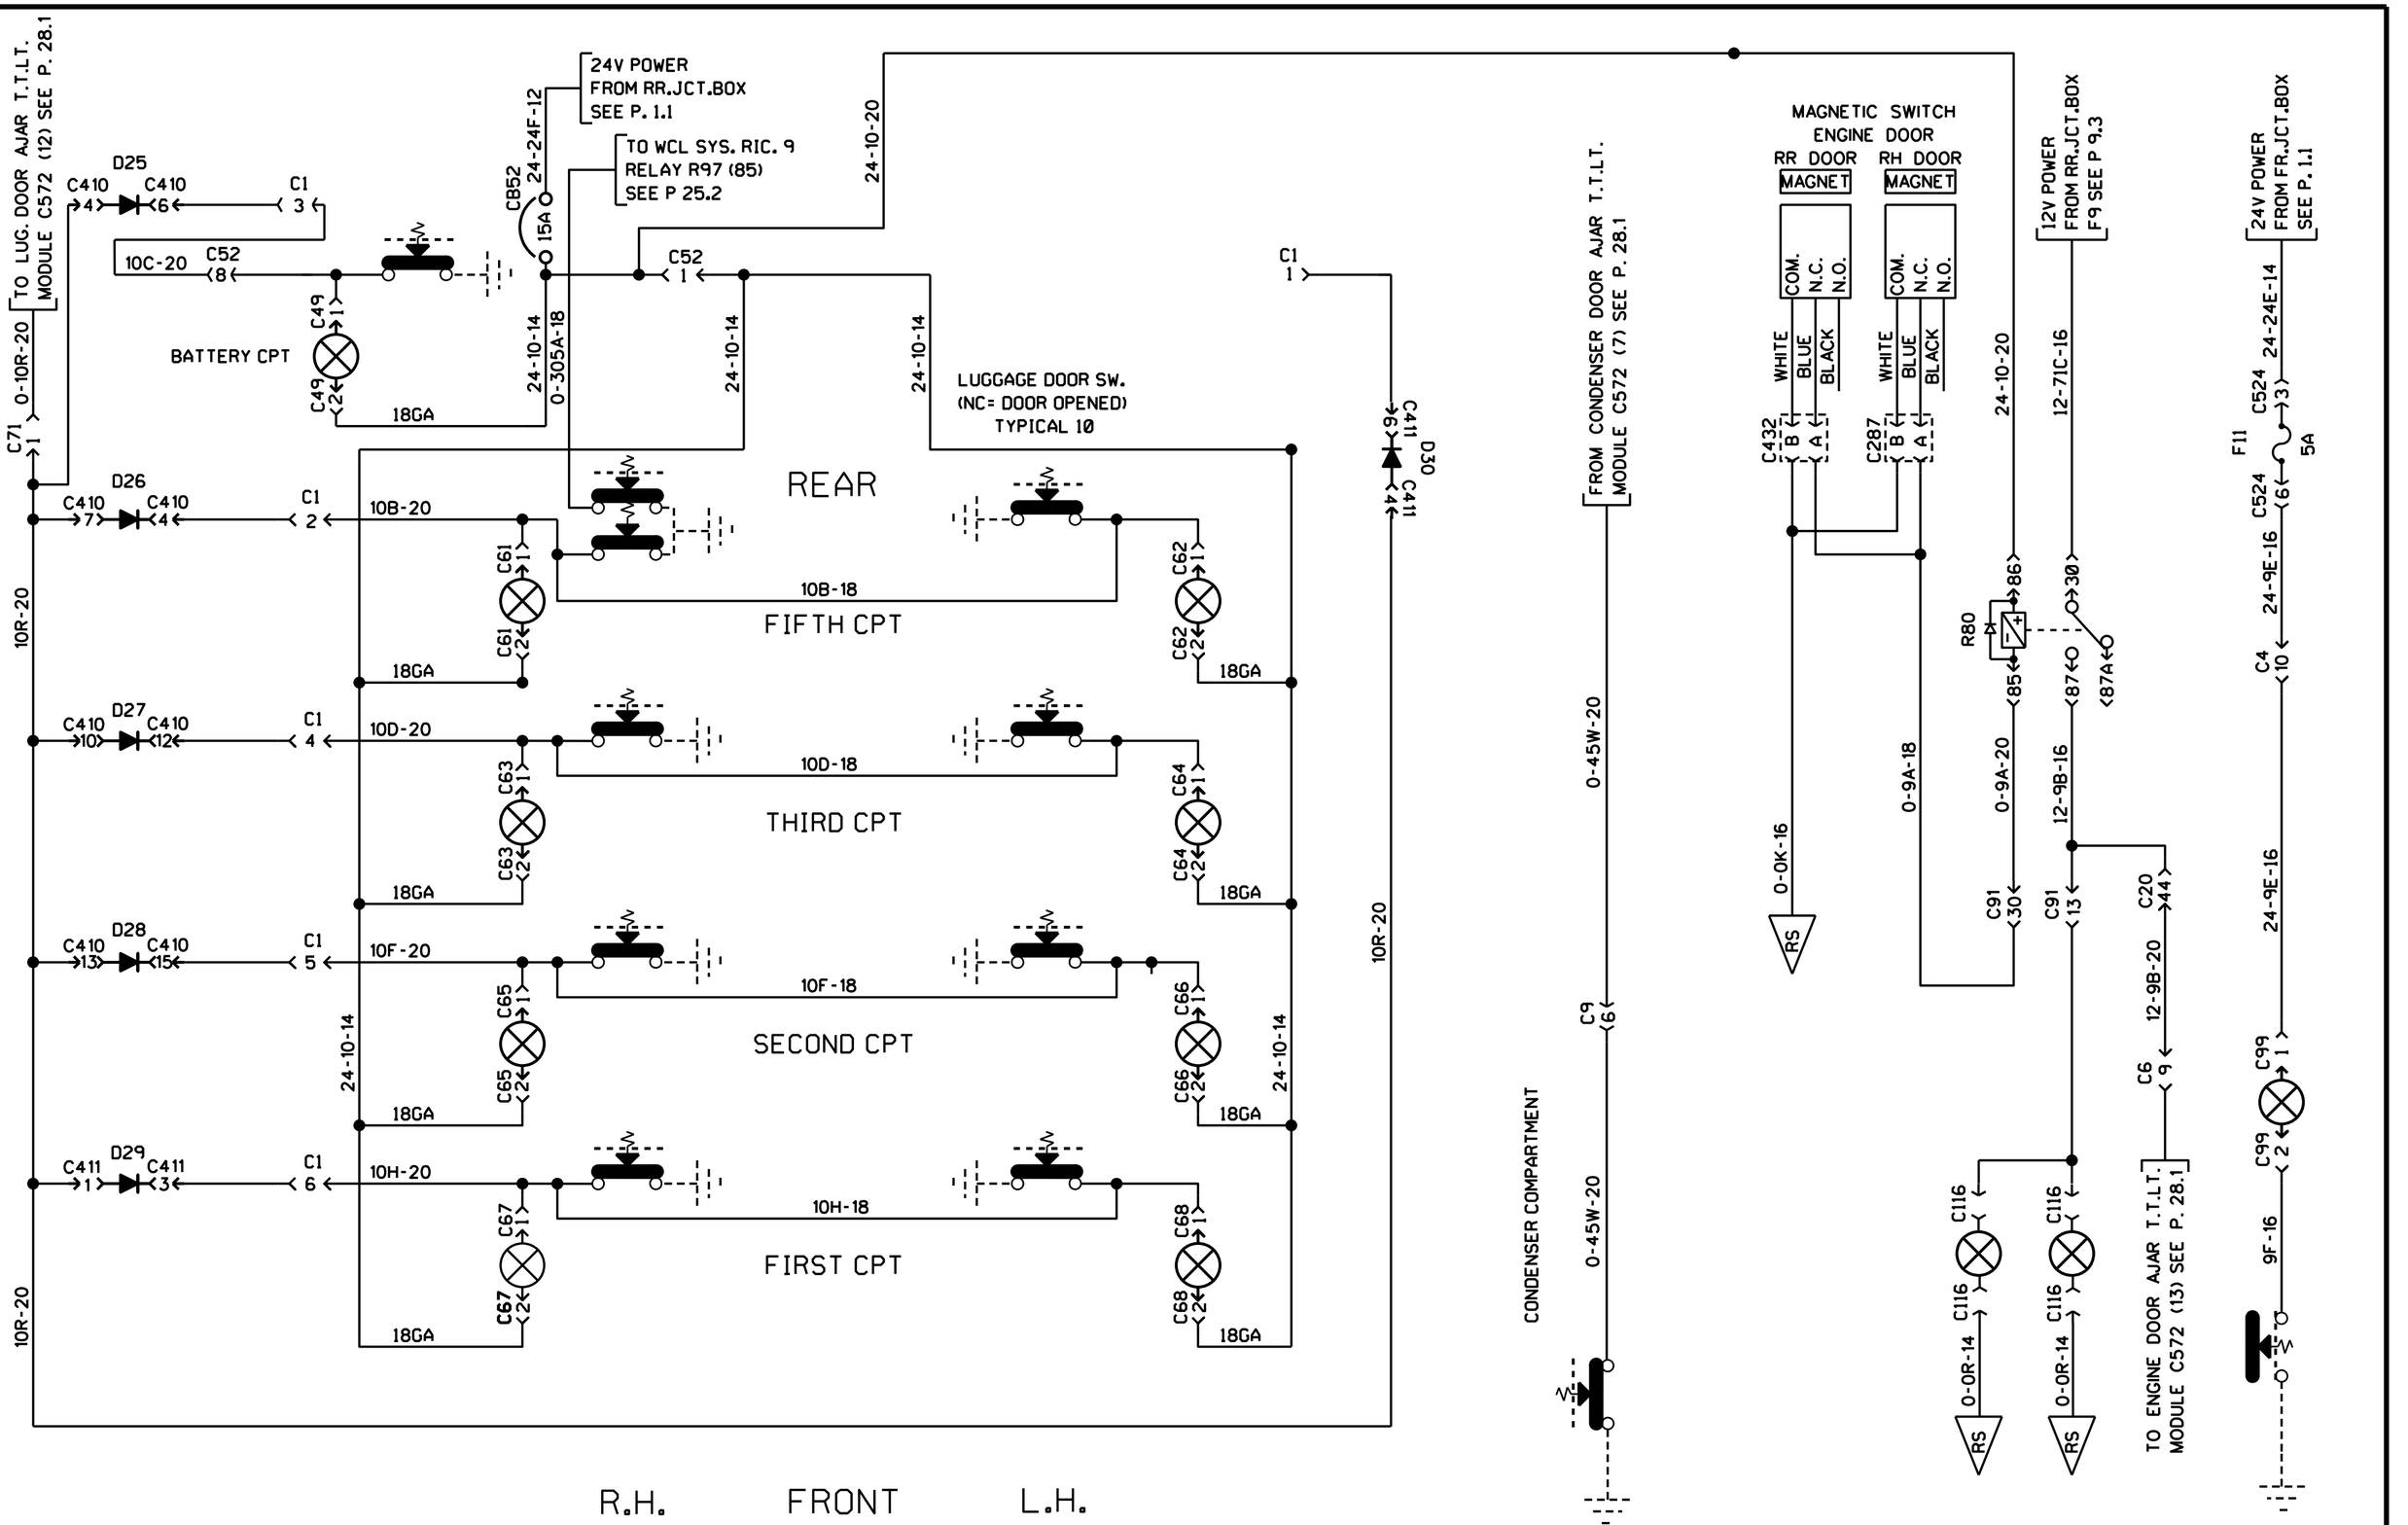

LUGGAGE COMPARTMENT AND DOOR AJAR LTS | DOOR AJAR SWITCH CONDENSER COMPT. | ENGINE COMPT. LTS. | FRONT SEVICE COMPT. LT.

INTERIOR LIGHTING

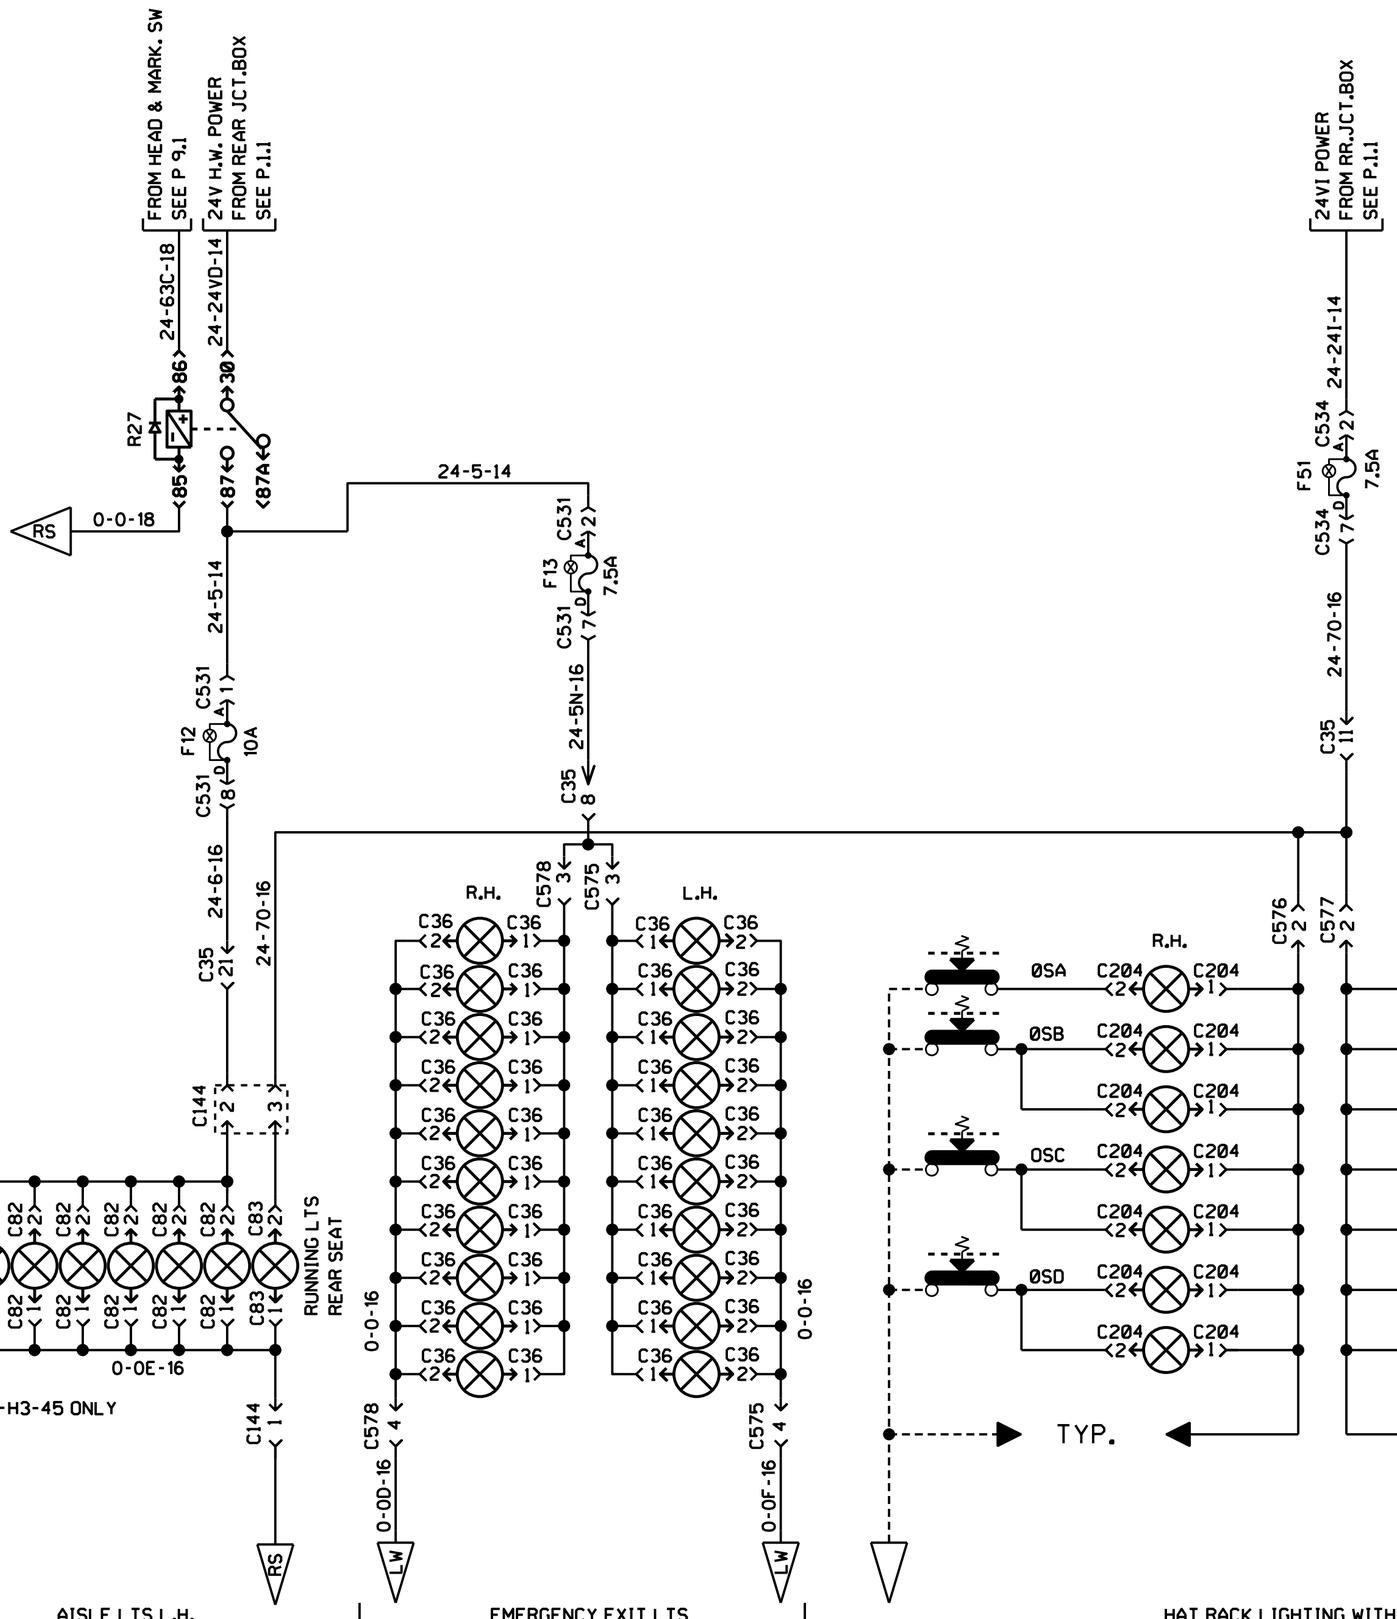

INTERIOR LIGHTING

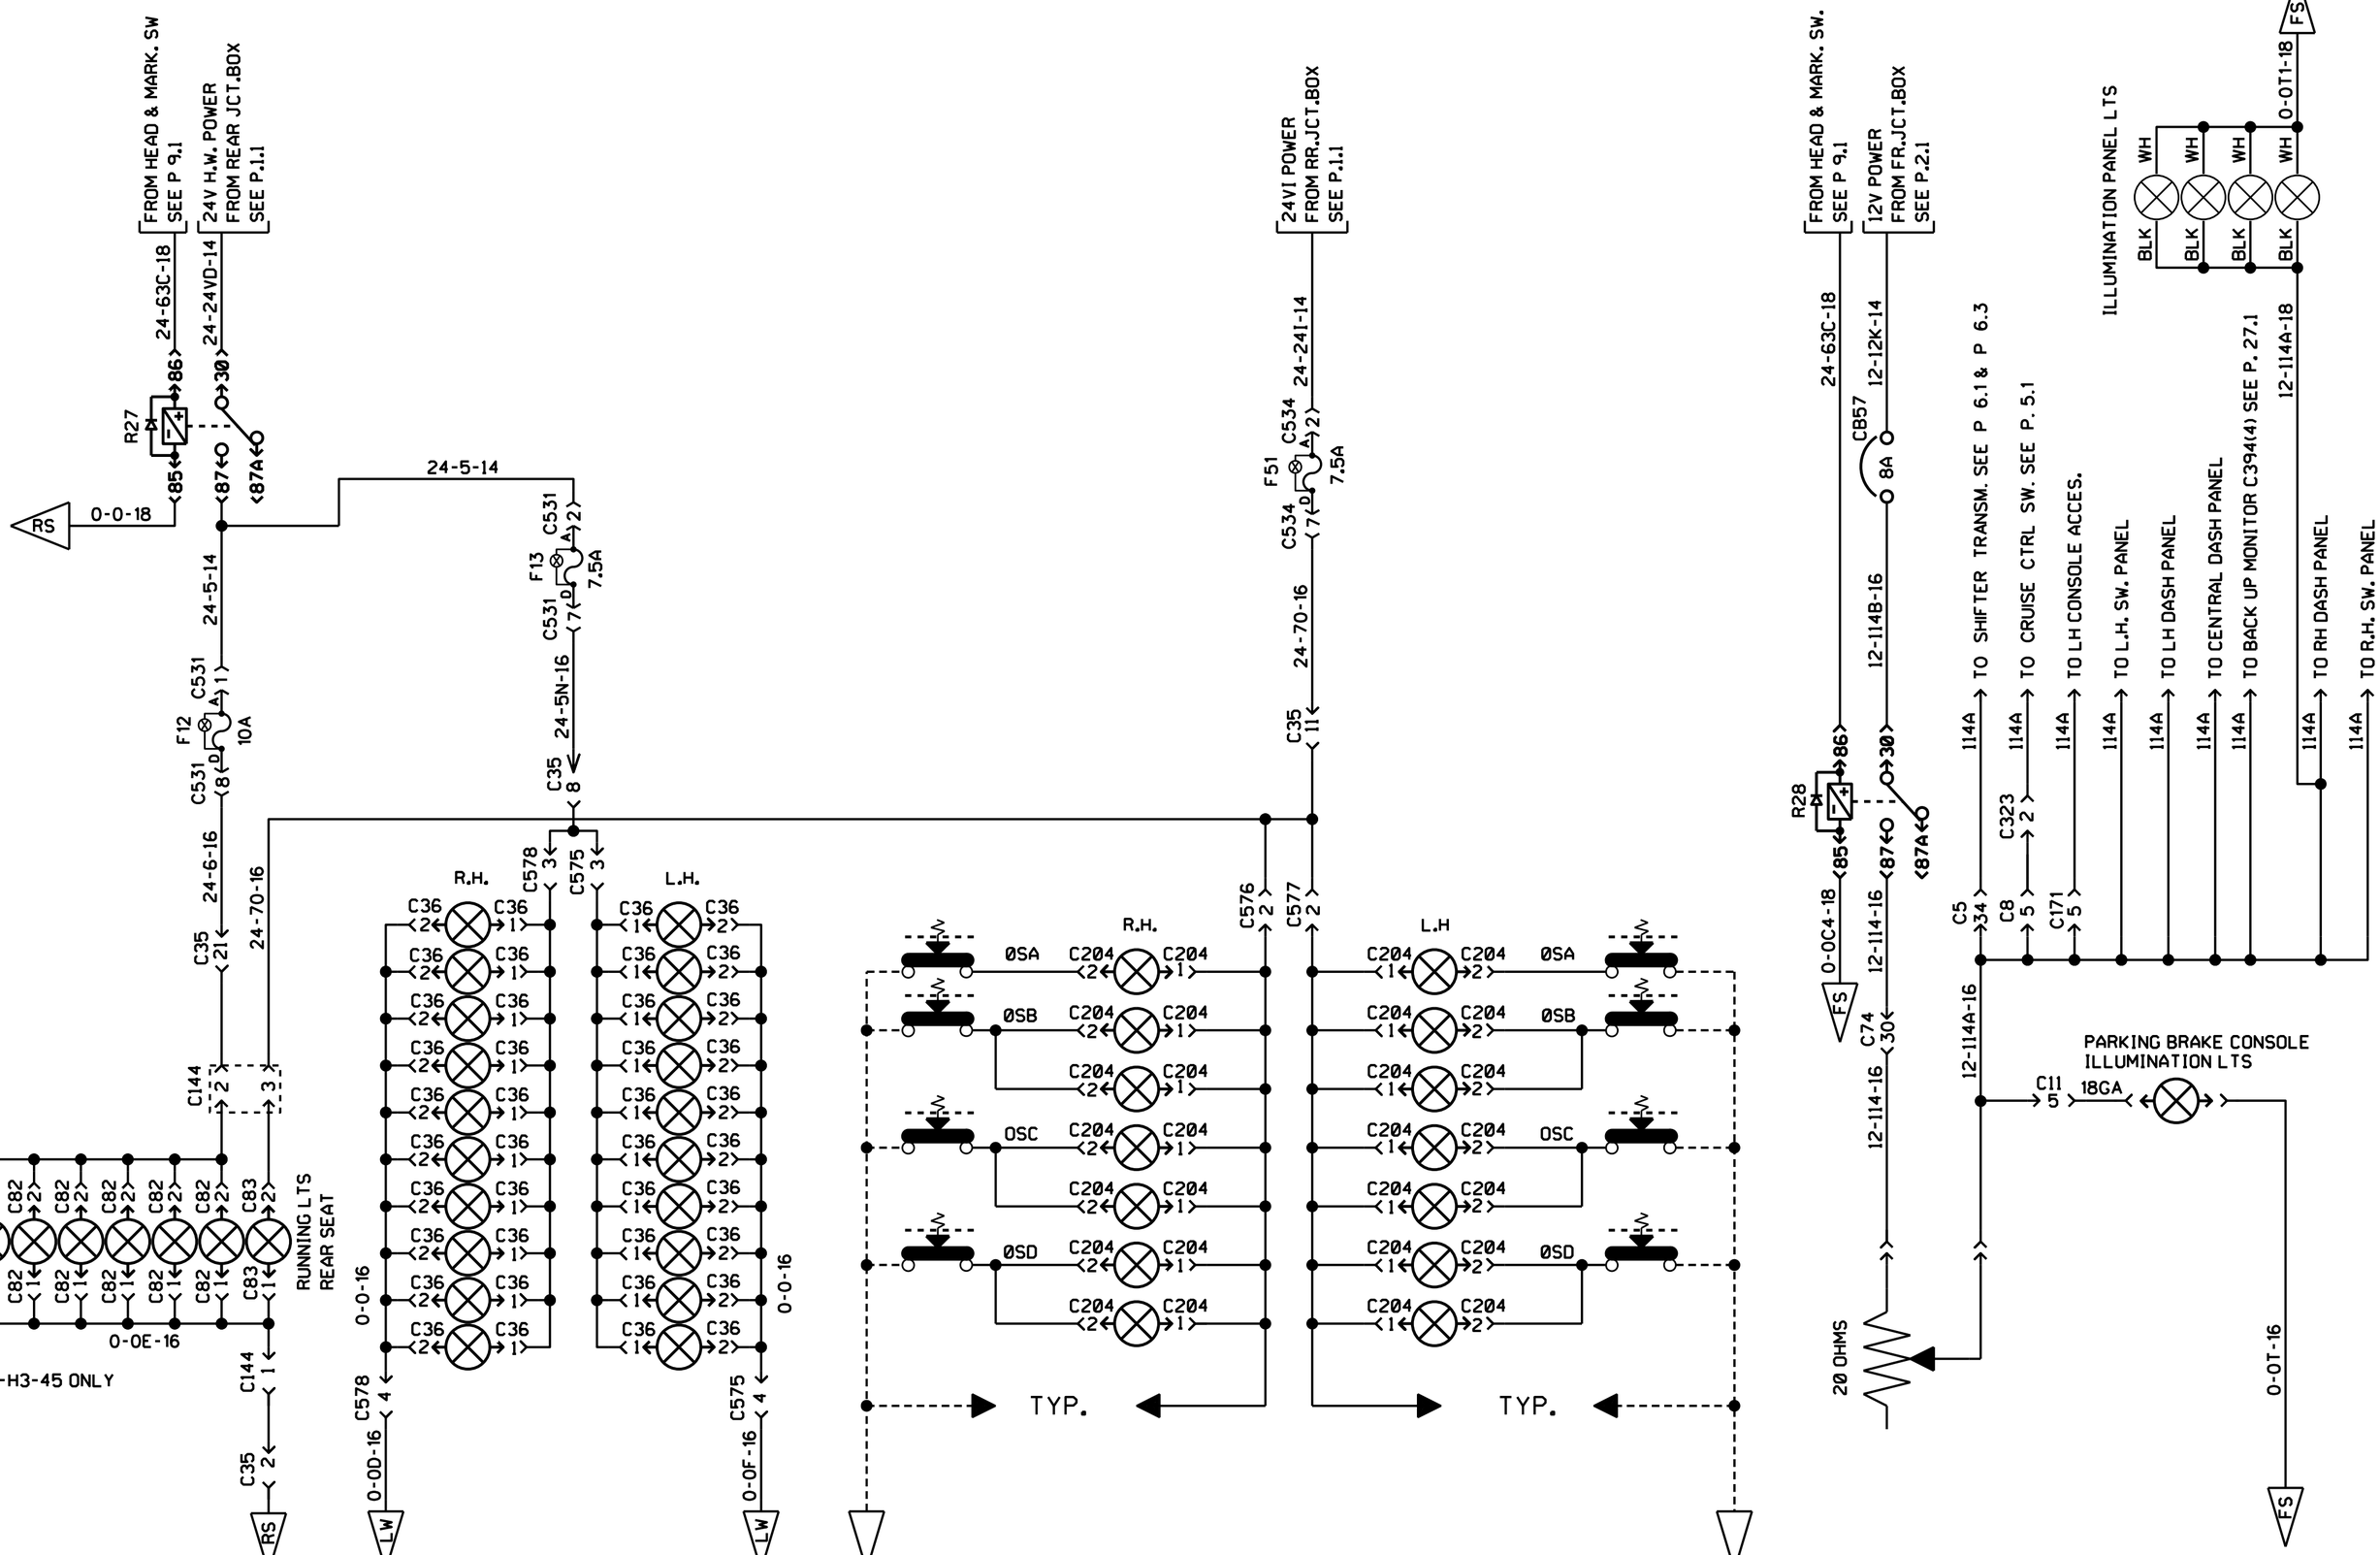
AISLE LTS L.H.
EMERGENCY EXIT LTS
HAT RACK LIGHTING WITH DOOR ONLY
RHEOSTATDASH LTS. RHEOSTAT
INTERIOR LIGHTING
FROM HEAD & MARK. SW SEE P 9.1
24V H.W. POWER FROM REAR JCT.BOX SEE P.1.1
24VI POWER FROM RR.JCT.BOX SEE P.1.1
12V POWER FROM FR.JCT.BOX SEE P.2.1
RUNNING LTS REAR SEAT
H3-45 ONLY
R.H.
L.H.
TYP.
ILLUMINATION PANEL LTS
PARKING BRAKE CONSOLE ILLUMINATION LTS
20 OHMS
TO SHIFTER TRANSM. SEE P 6.1 & P 6.3
TO CRUISE CTRL SW. SEE P. 5.1
TO LH CONSOLE ACCES.
TO L.H. SW. PANEL
TO LH DASH PANEL
TO CENTRAL DASH PANEL
TO BACK UP MONITOR C3944) SEE P. 27.1
TO RH DASH PANEL
TO R.H. SW. PANEL

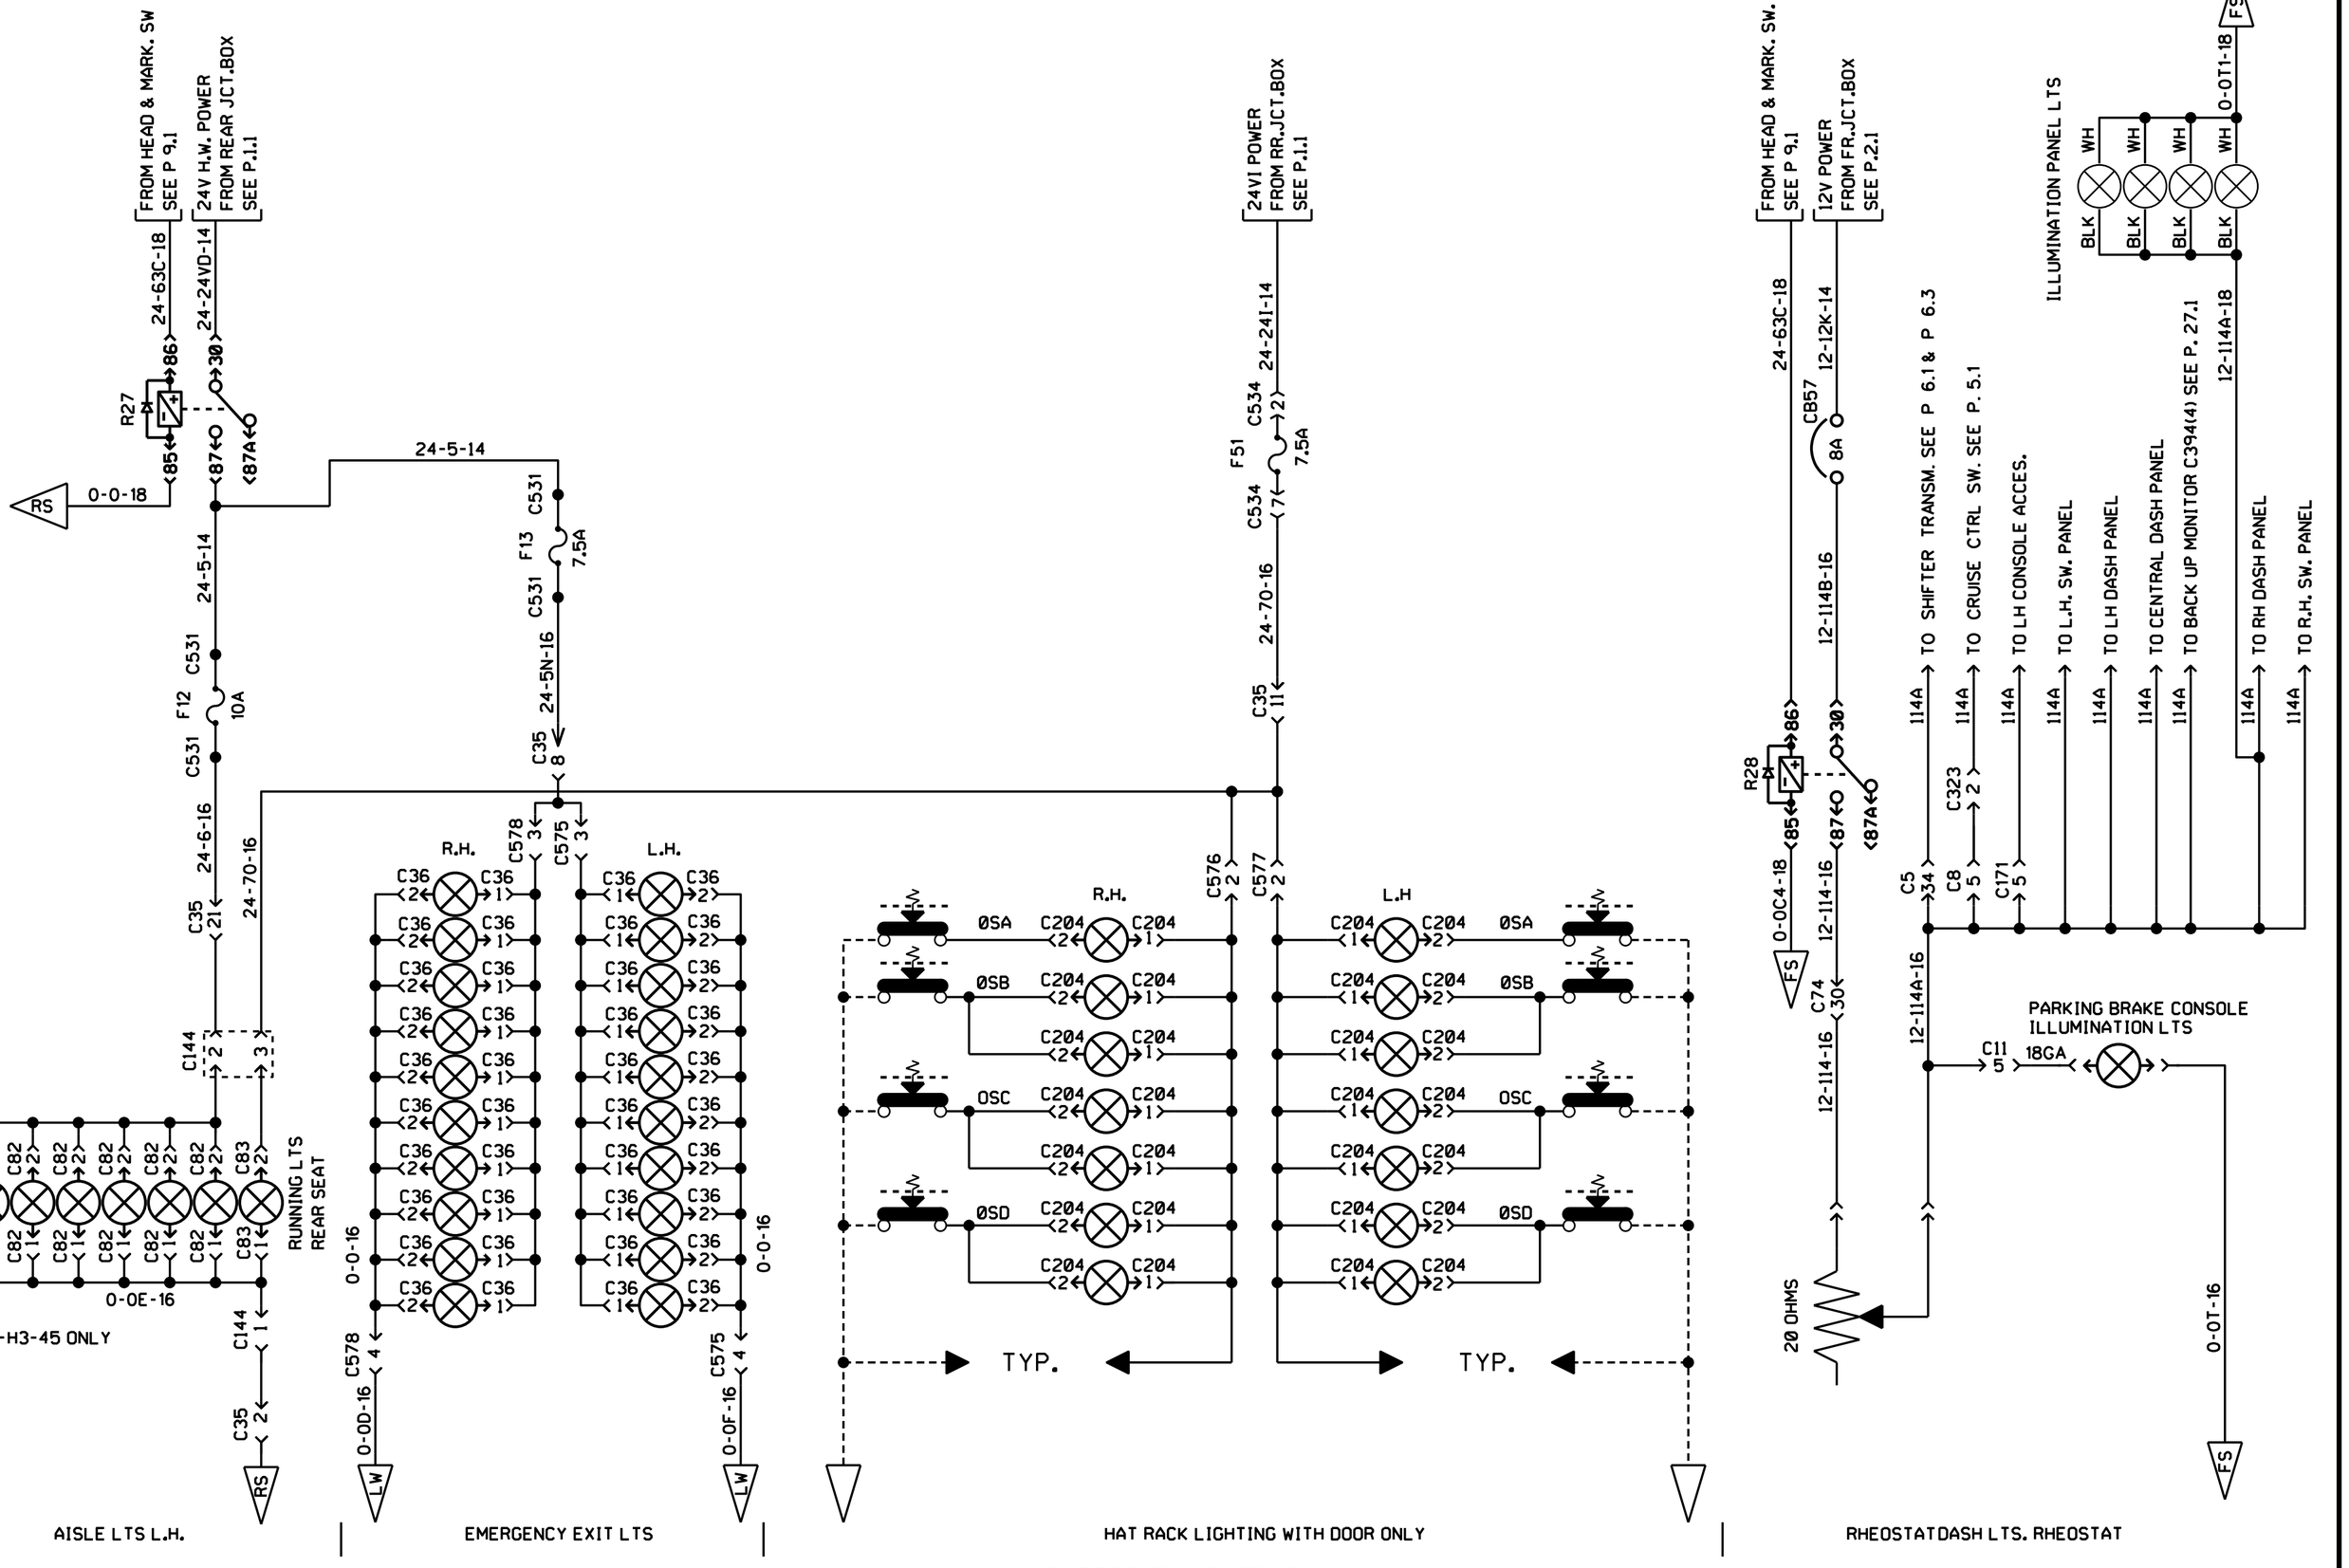
AISLE LTS L.H.
EMERGENCY EXIT LTS
HAT RACK LIGHTING WITH DOOR ONLY
RHEOSTATDASH LTS. RHEOSTAT
INTERIOR LIGHTING
FROM HEAD & MARK. SW SEE P 9.1
24V H.W. POWER FROM REAR JCT.BOX SEE P.1.1
24VI POWER FROM RR.JCT.BOX SEE P.1.1
12V POWER FROM FR.JCT.BOX SEE P.2.1
ILLUMINATION PANEL LTS
RUNNING LTS REAR SEAT
H3-45 ONLY
R.H.
L.H.
TYP.
20 OHMS
PARKING BRAKE CONSOLE ILLUMINATION LTS
TO SHIFTER TRANSM. SEE P 6.1 & P 6.3
TO CRUISE CTRL SW. SEE P. 5.1
TO LH CONSOLE ACCES.
TO L.H. SW. PANEL
TO LH DASH PANEL
TO CENTRAL DASH PANEL
TO BACK UP MONITOR C394(4) SEE P. 27.1
TO RH DASH PANEL
TO R.H. SW. PANEL

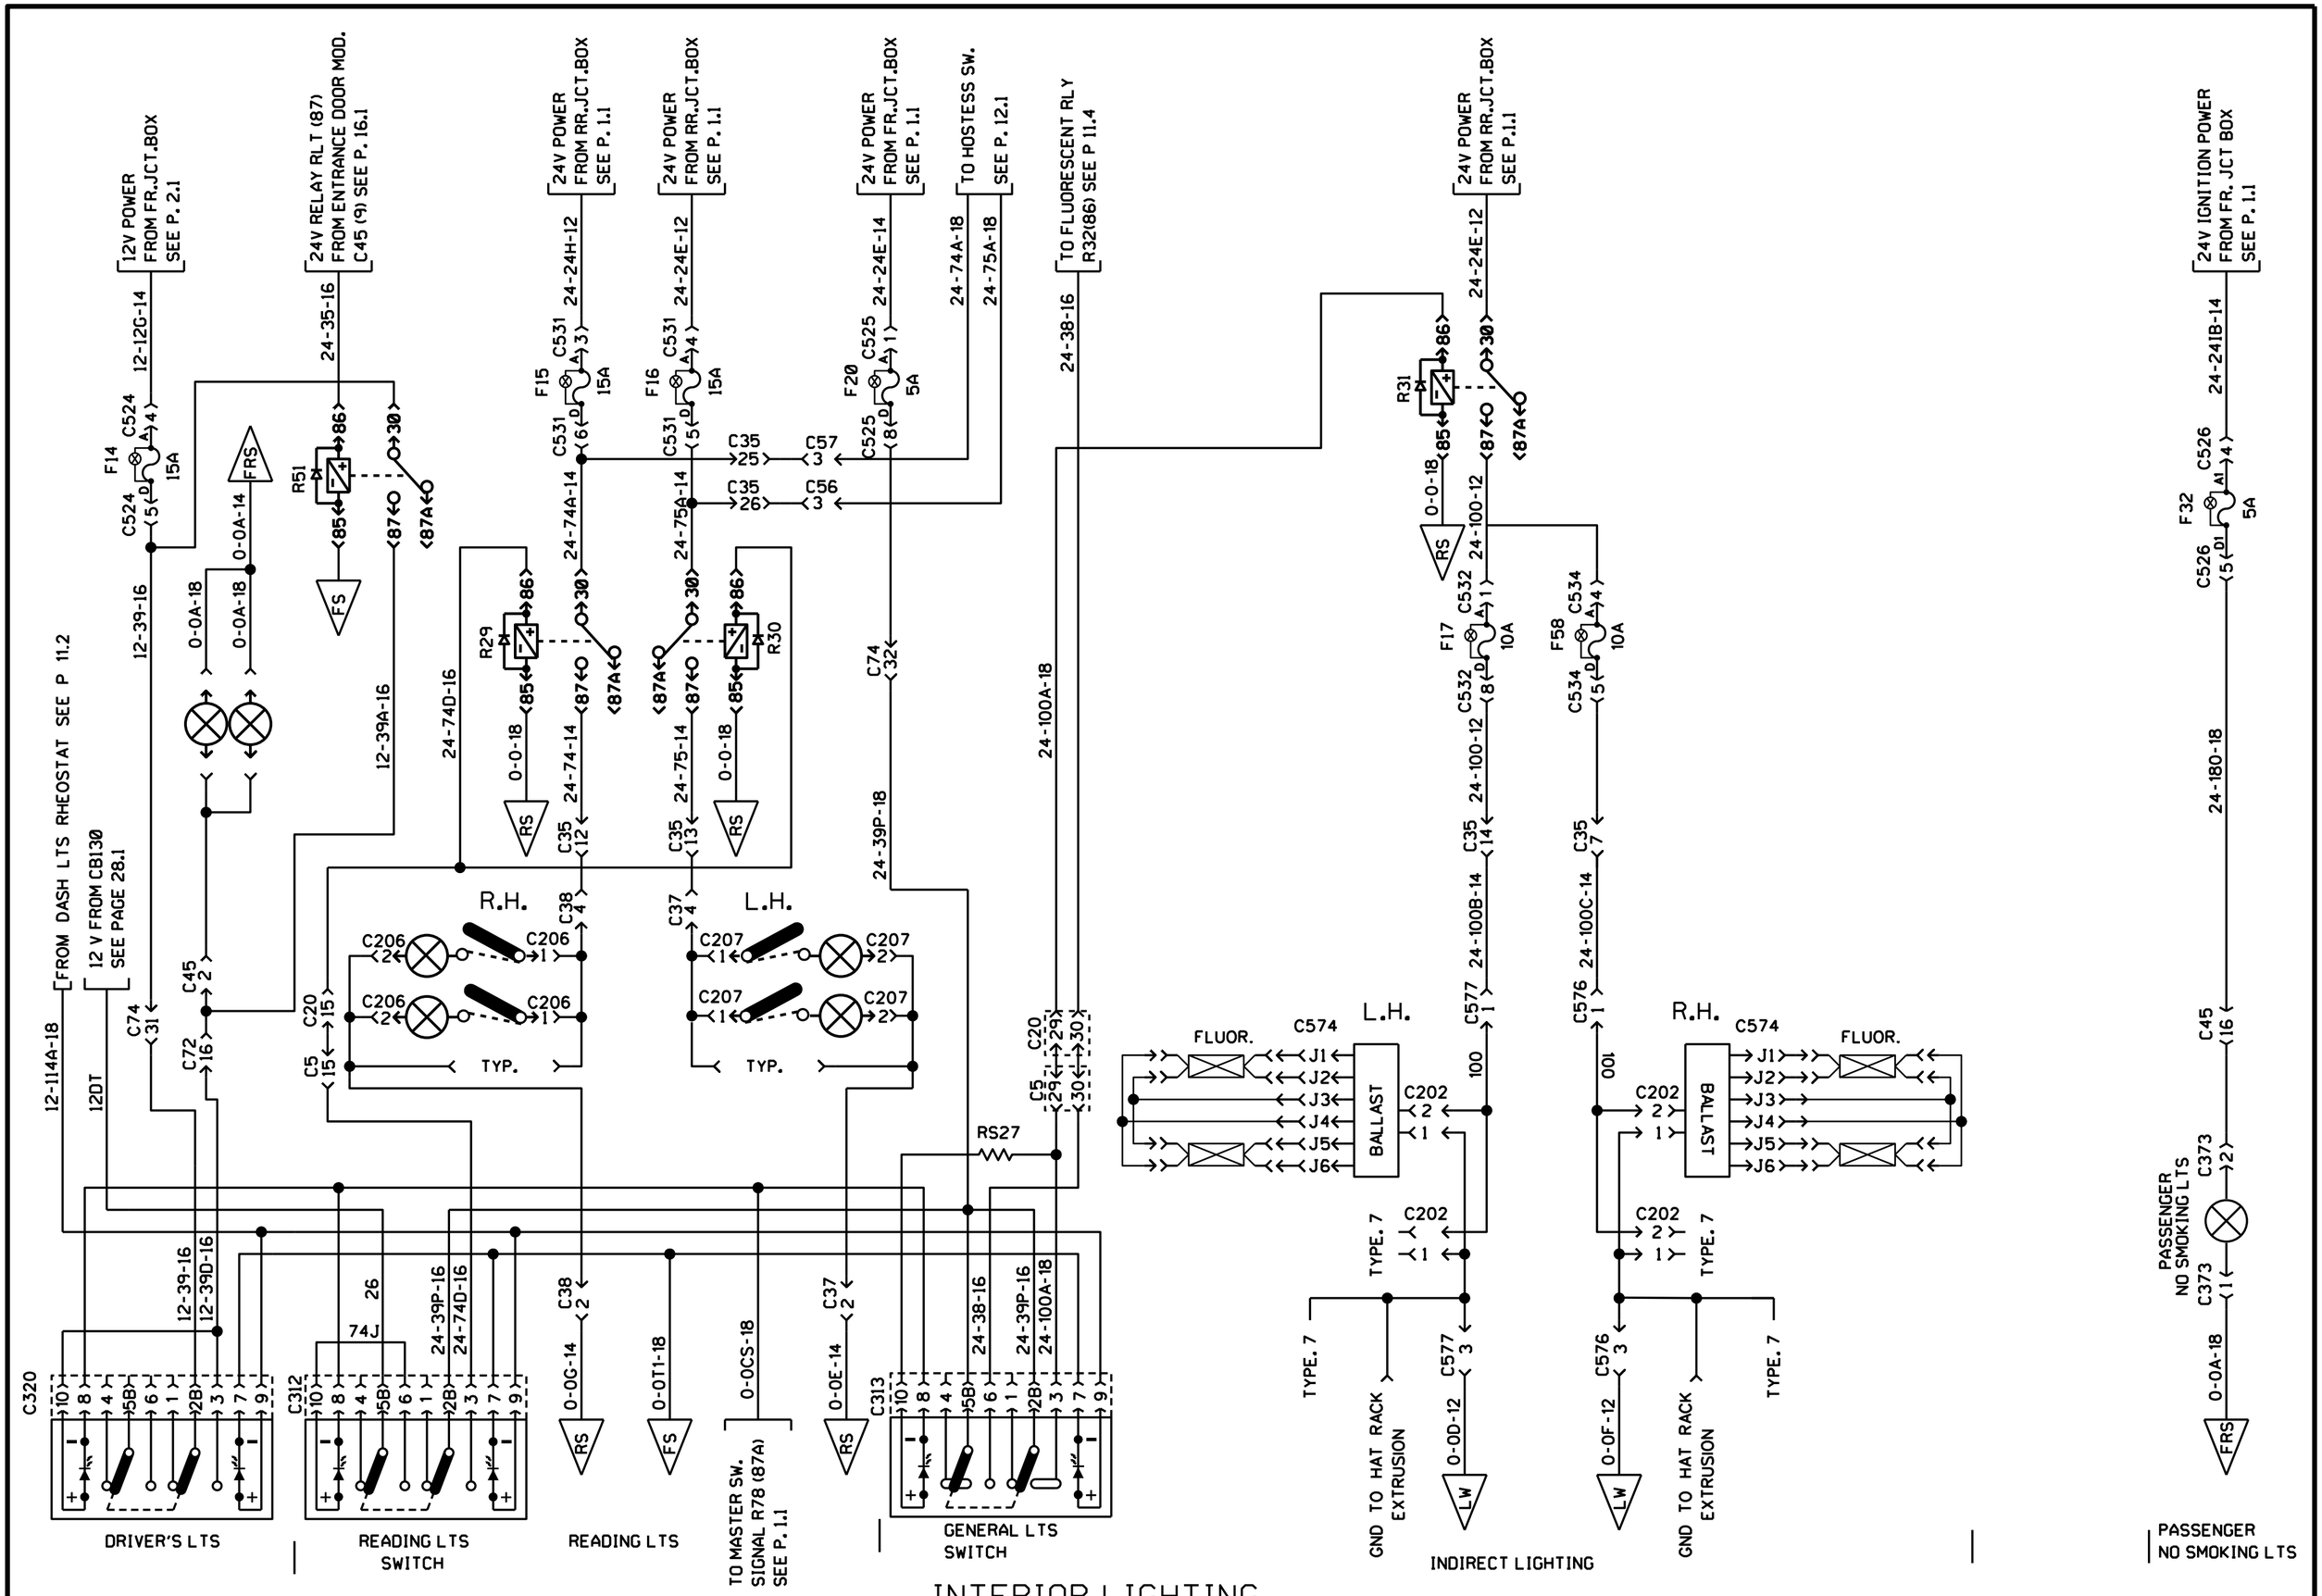

INTERIOR LIGHTING

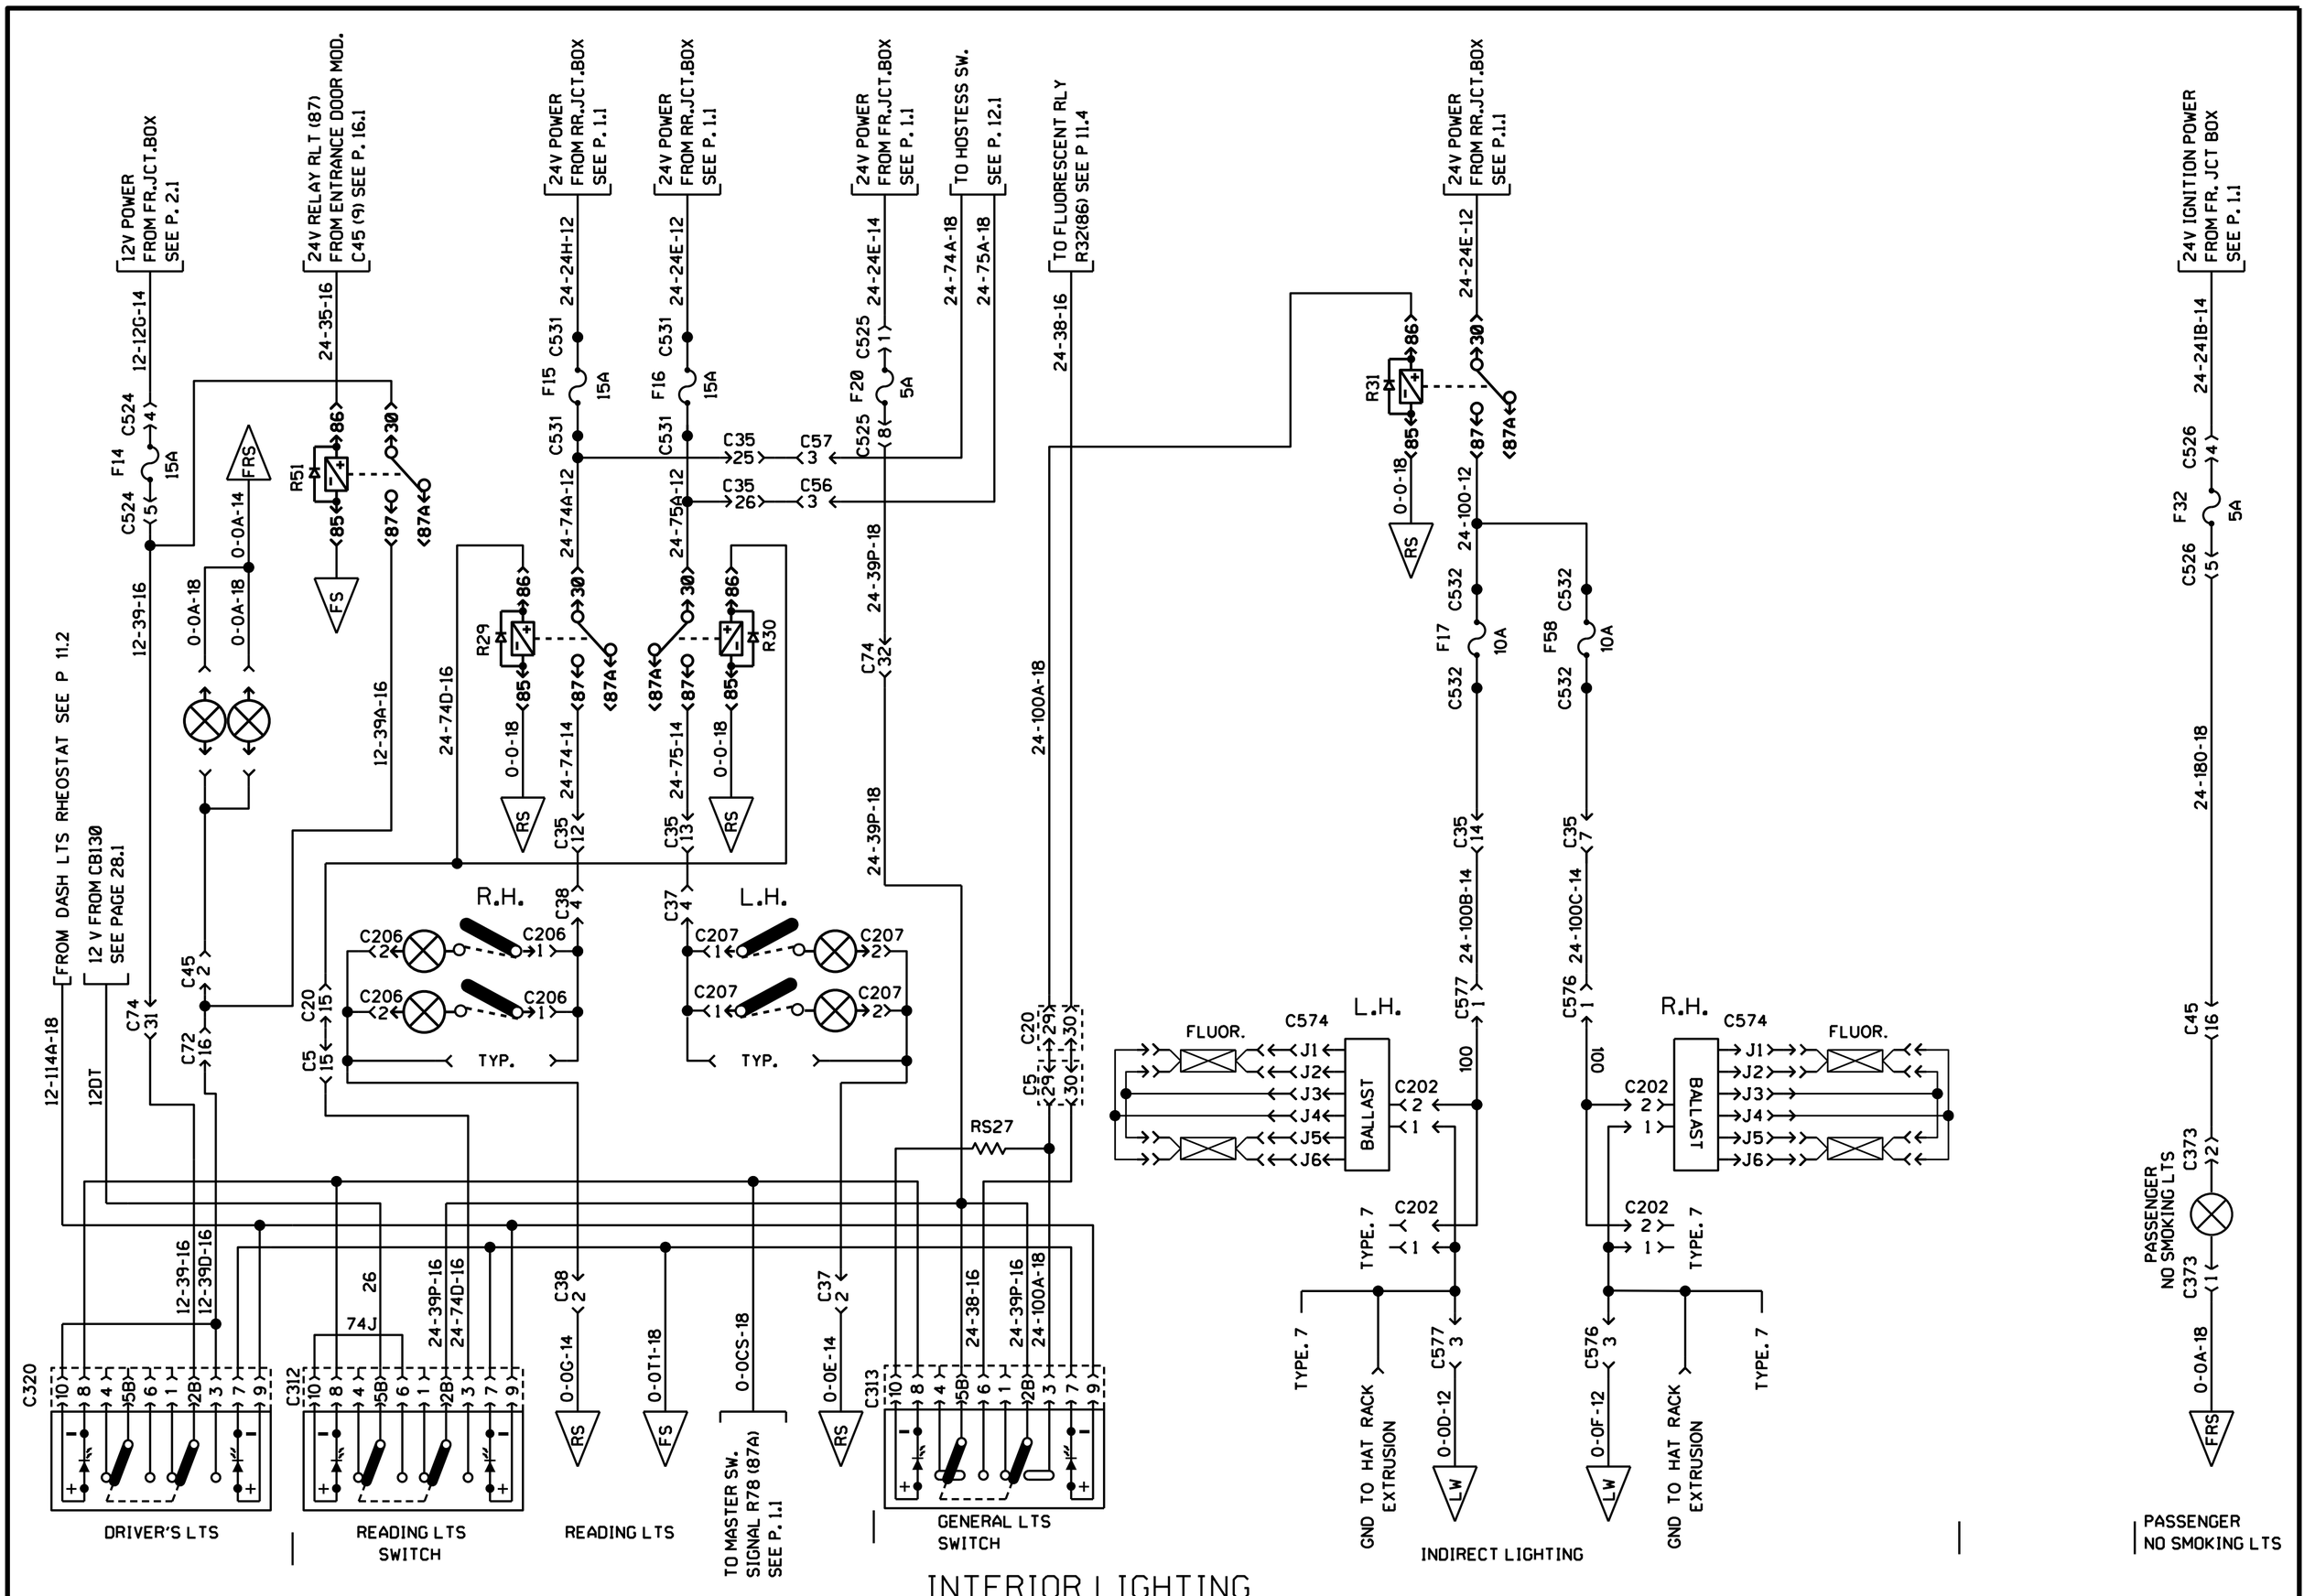
FROM DASH LTS RHEOSTAT SEE P 11.2
12 V FROM CB130 SEE PAGE 28.1
12V POWER FROM FR.JCT.BOX SEE P. 2.1
24V RELAY RLT (87) FROM ENTRANCE DOOR MOD. C45 (9) SEE P. 16.1
24V POWER FROM RR.JCT.BOX SEE P. 1.1
24V POWER FROM RR.JCT.BOX SEE P. 1.1
24V POWER FROM FR.JCT.BOX SEE P. 1.1
TO HOSTESS SW. SEE P. 12.1
TO FLUORESCENT RLY R32(86) SEE P 11.4
24V POWER FROM RR.JCT.BOX SEE P.1.1
24V IGNITION POWER FROM FR. JCT BOX SEE P. 1.1
R.H.
L.H.
TYP.
TYP.
FLUOR.
BALLAST
TYPE. 7
GND TO HAT RACK EXTRUSION
INDIRECT LIGHTING
PASSENGER NO SMOKING LTS
DRIVER'S LTS
READING LTS SWITCH
READING LTS
TO MASTER SW. SIGNAL R78 (87A) SEE P. 1.1
GENERAL LTS SWITCH
INTERIOR LIGHTING

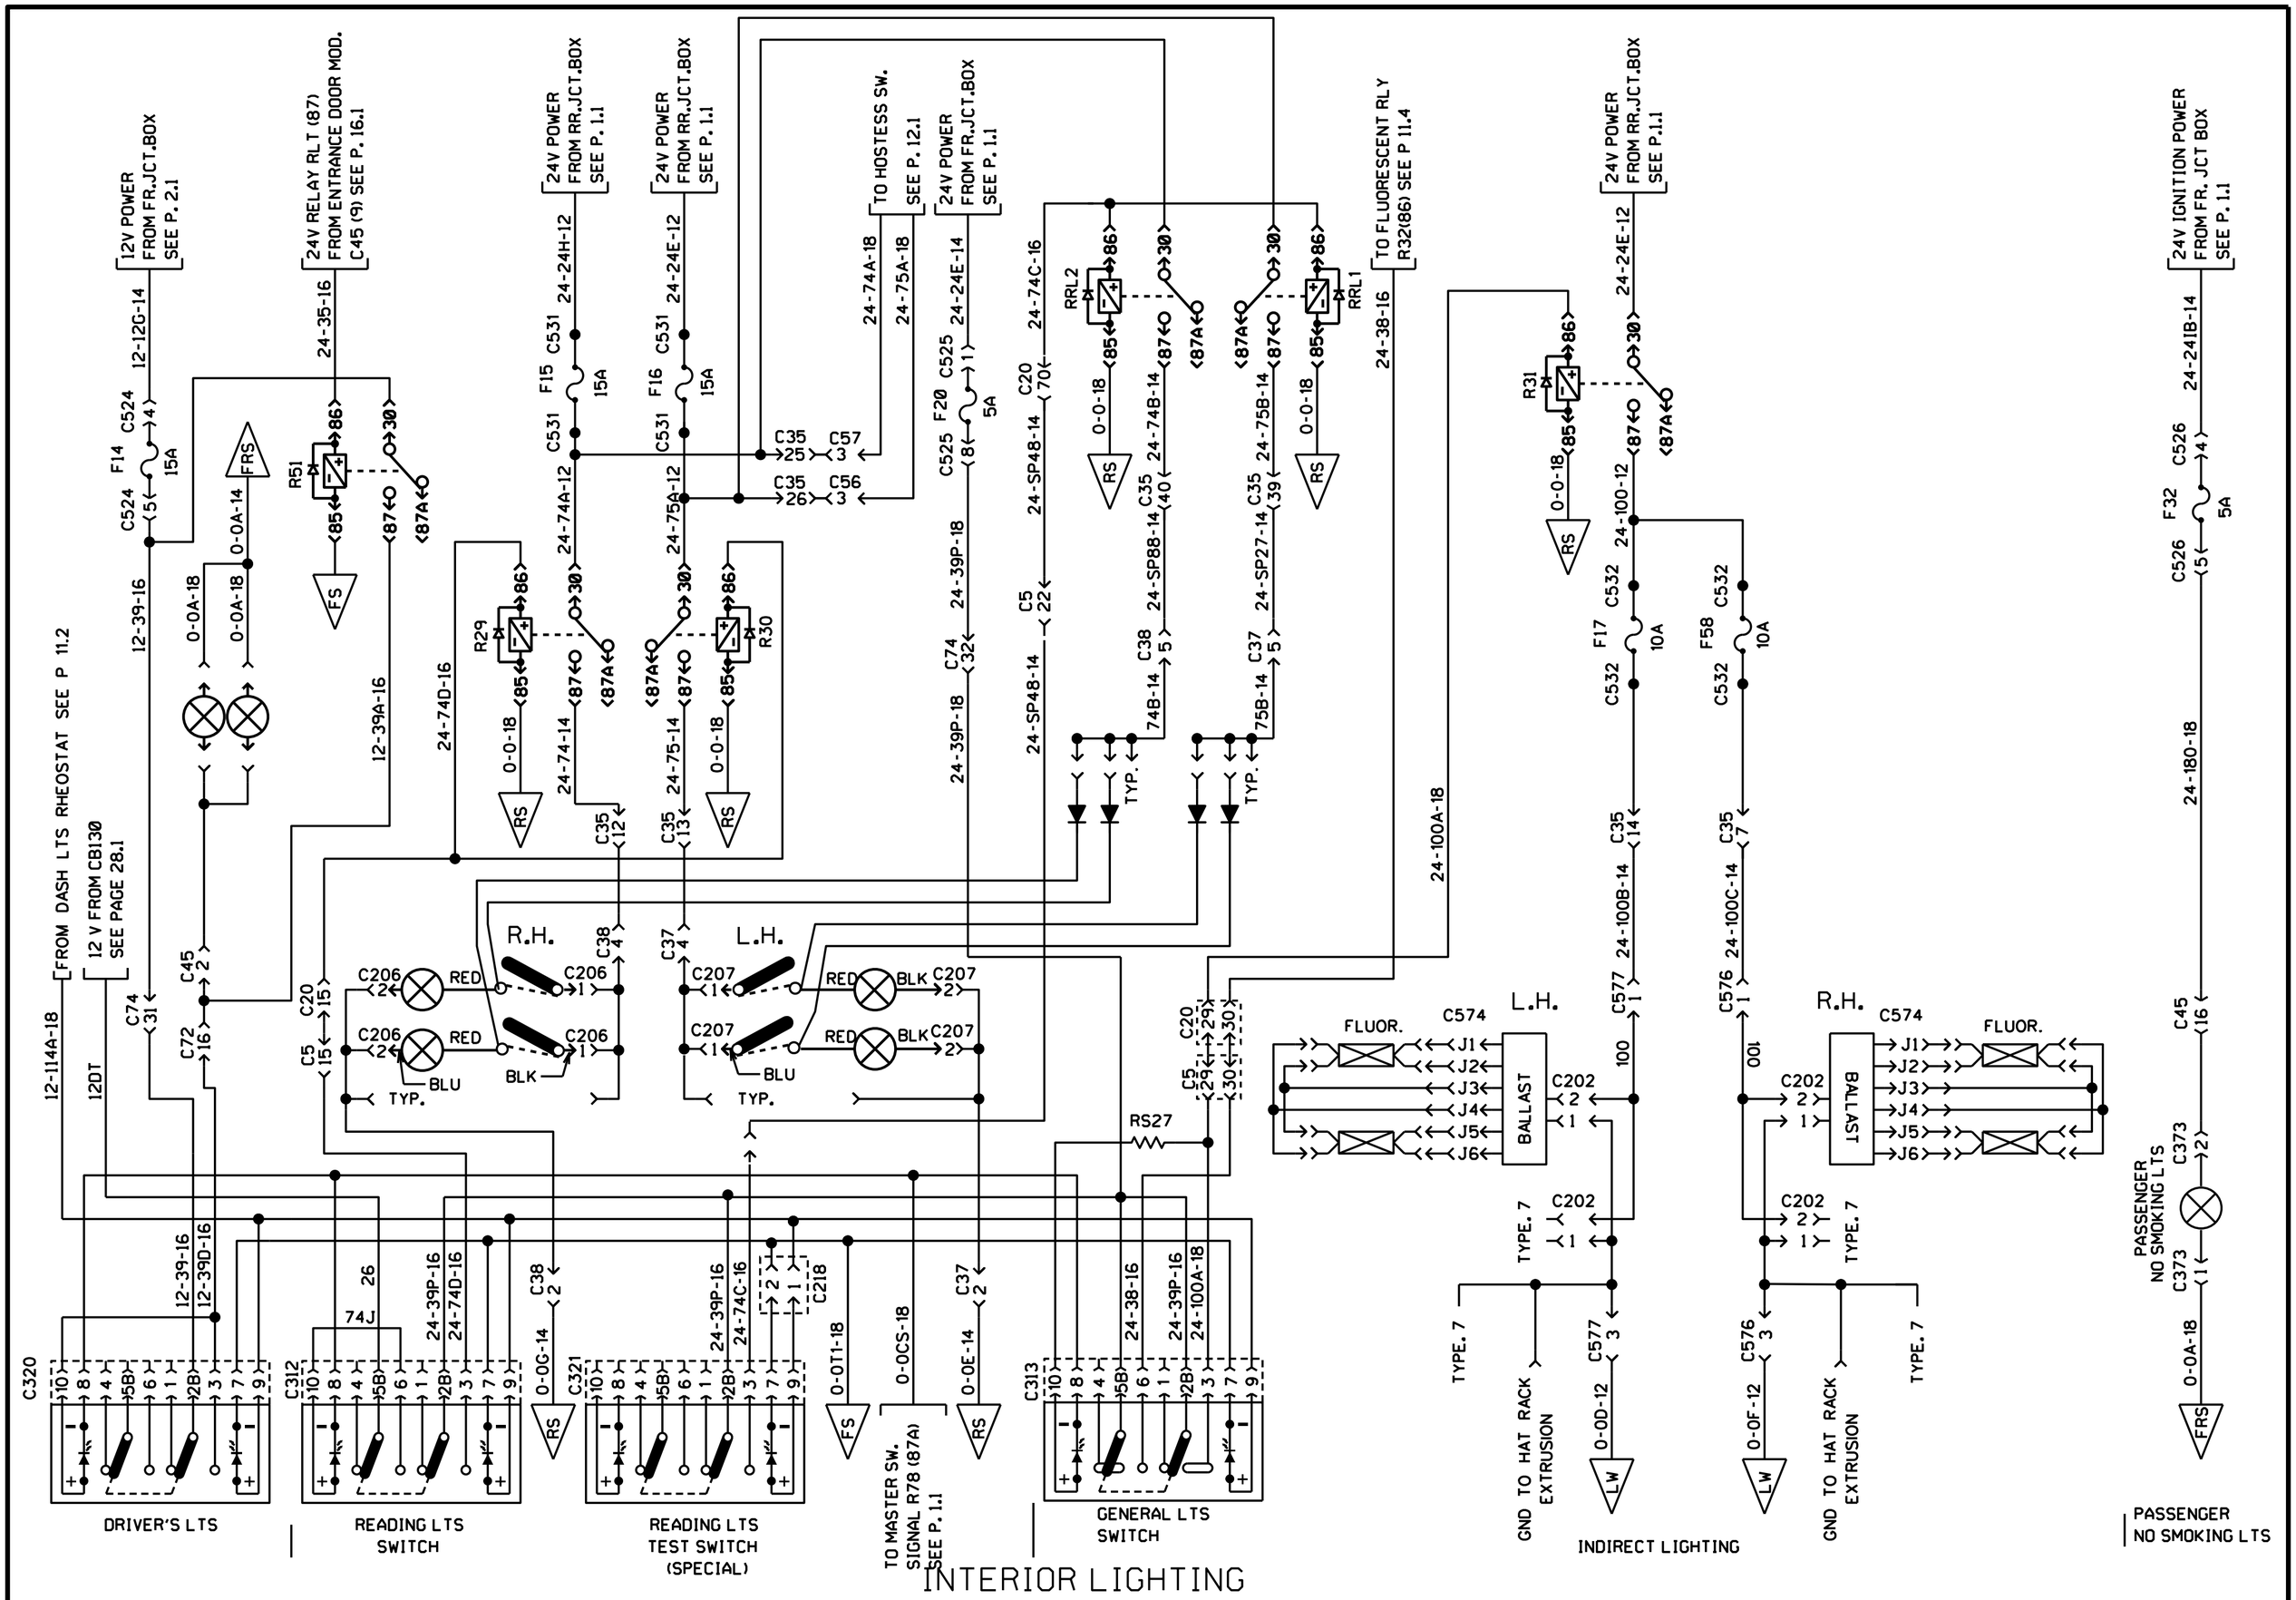
FROM DASH LTS
12 V FROM CB130
SEE PAGE 28.1
12V POWER
FROM FR.JCT.BOX
SEE P. 2.1
24V RELAY RLT (87)
FROM ENTRANCE DOOR MOD.
C45 (9) SEE P. 16.1
24V POWER
FROM RR.JCT.BOX
SEE P. 1.1
TO HOSTESS SW.
SEE P. 12.1
24V POWER
FROM FR.JCT.BOX
SEE P. 1.1
TO FLUORESCENT RLY
R32(86) SEE P 11.4
24V POWER
FROM RR.JCT.BOX
SEE P.1.1
24V IGNITION POWER
FROM FR. JCT BOX
SEE P. 1.1
R.H.
L.H.
RED
BLK
BLU
TYP.
FLUOR.
BALLAST
RS27
DRIVER'S LTS
READING LTS
SWITCH
READING LTS
TEST SWITCH
(SPECIAL)
TO MASTER SW.
SIGNAL R78 (87A)
SEE P. 1.1
GENERAL LTS
SWITCH
GND TO HAT RACK
EXTRUSION
INDIRECT LIGHTING
PASSENGER
NO SMOKING LTS
INTERIOR LIGHTING

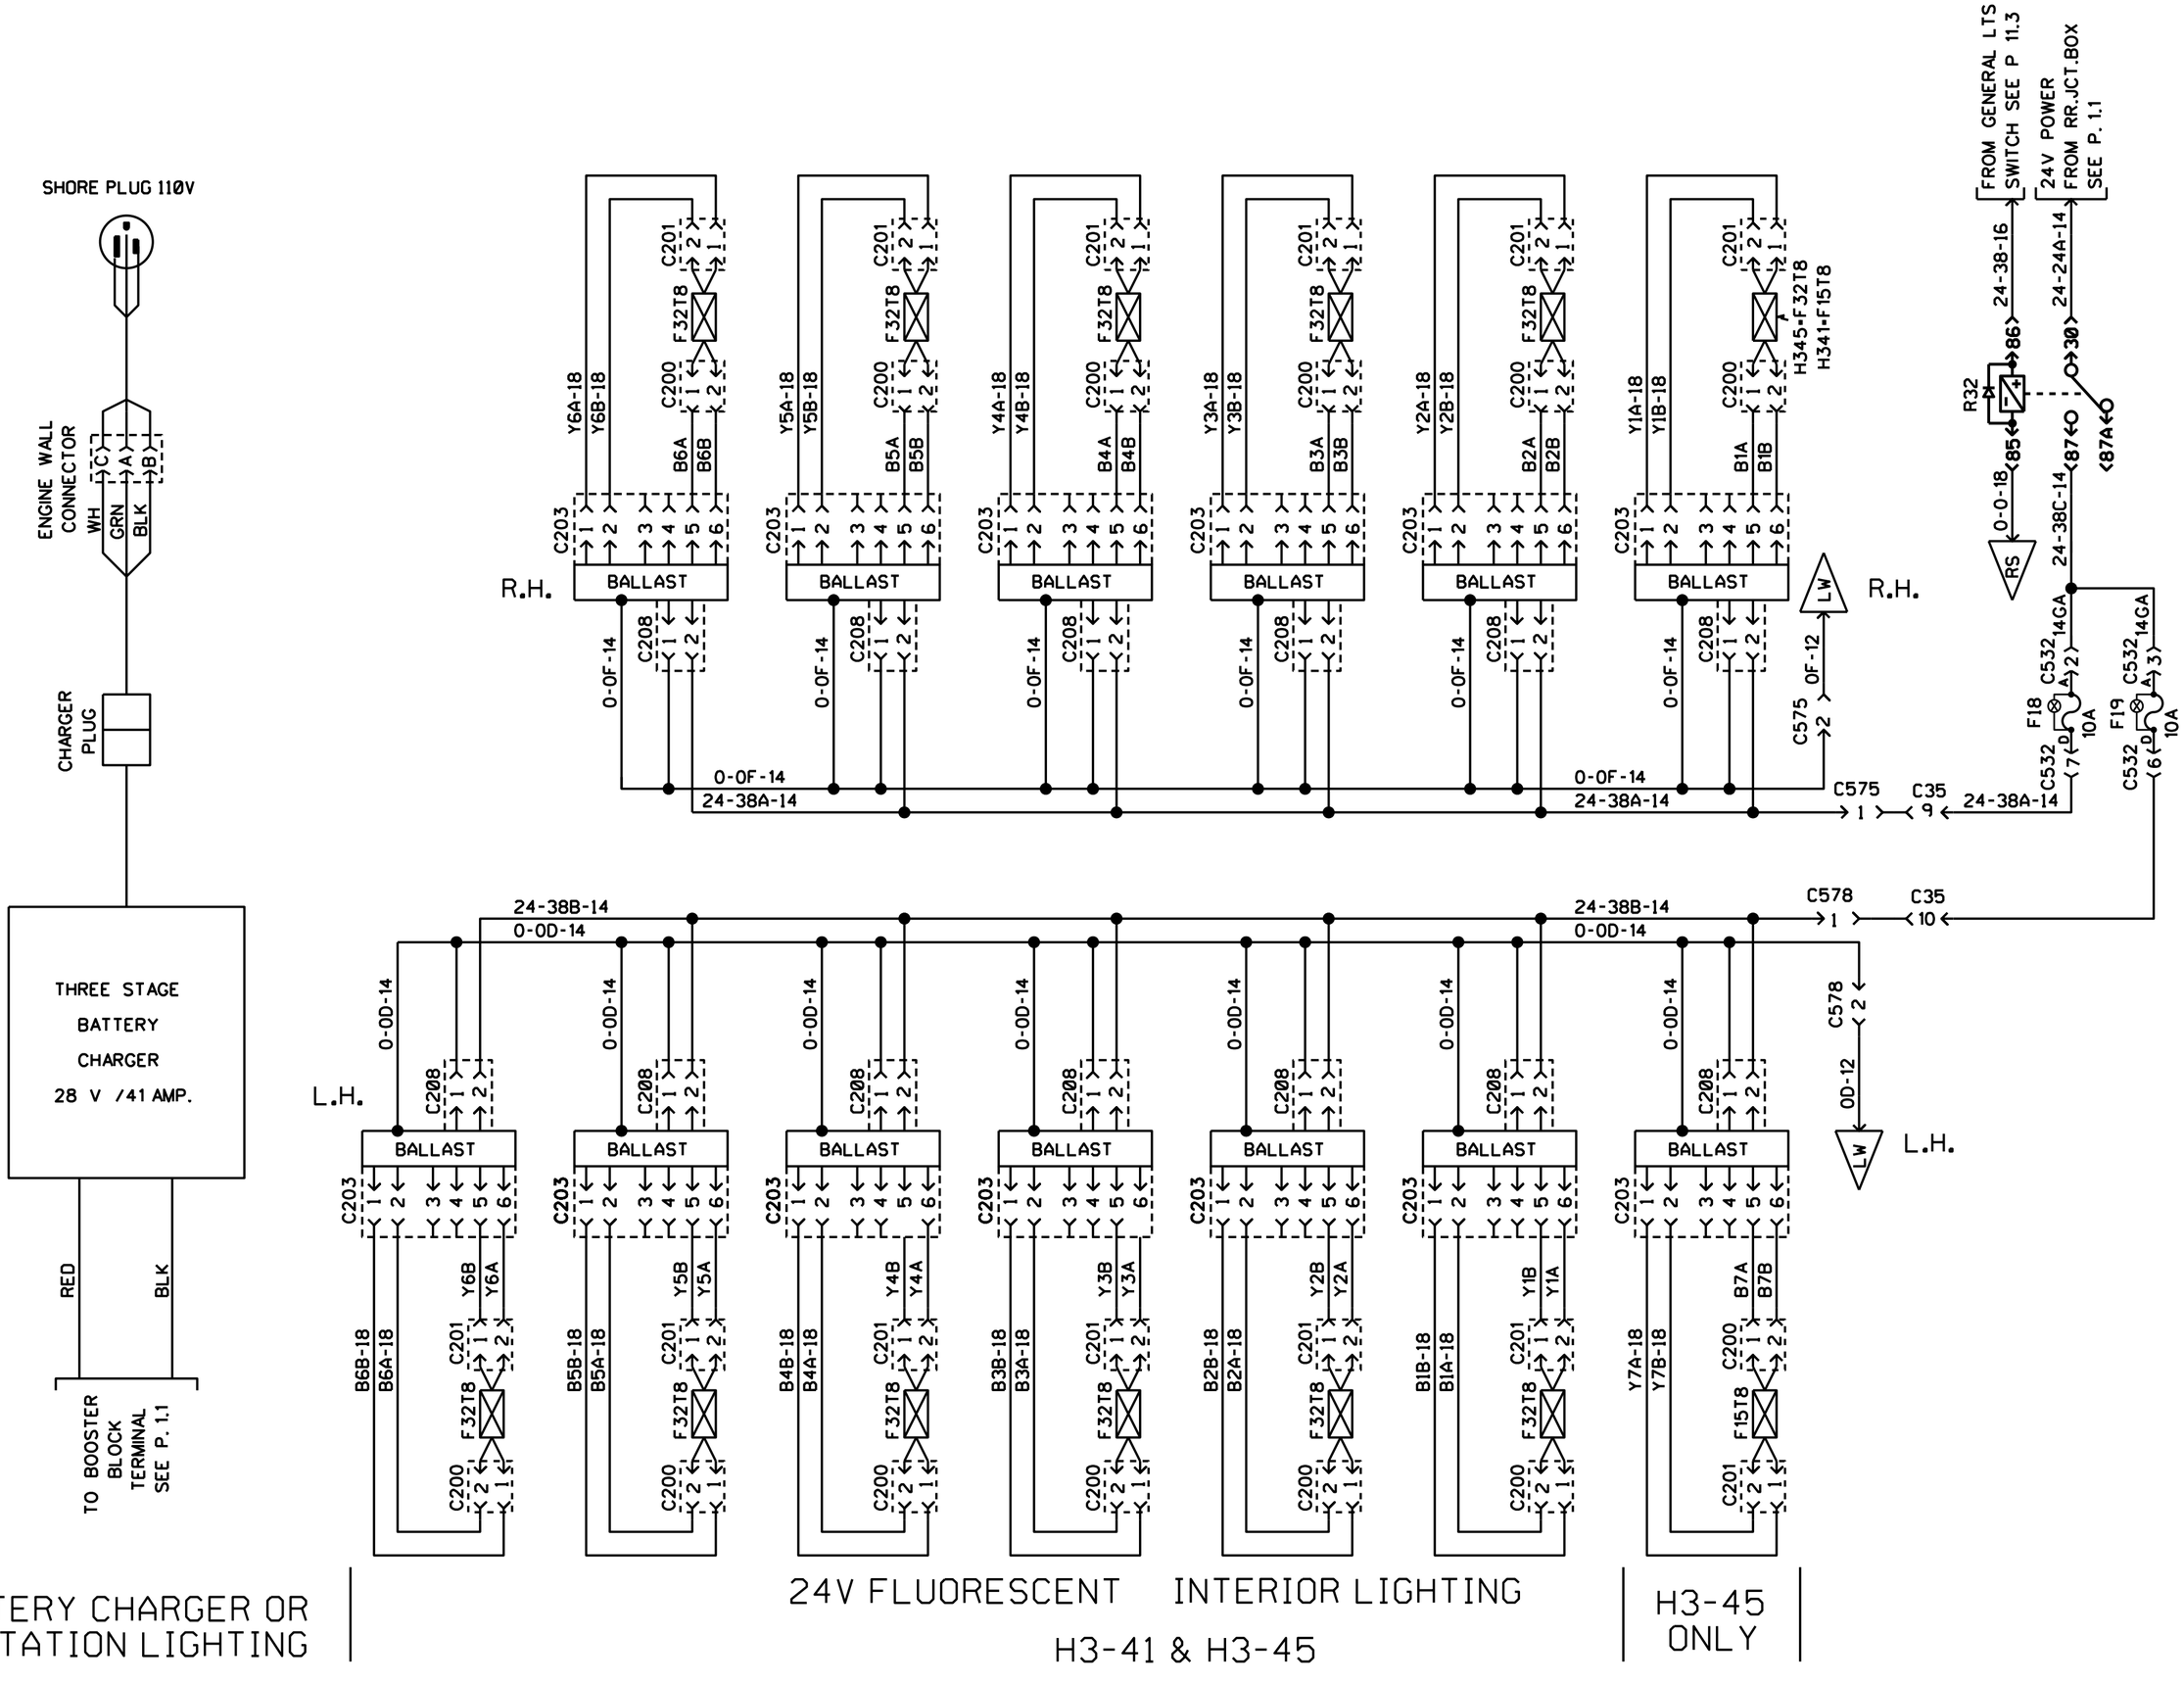
SHORE PLUG 110V
ENGINE WALL CONNECTOR
WH C
GRN A
BLK B
CHARGER PLUG
THREE STAGE BATTERY CHARGER 28 V /41 AMP.
RED
BLK
TO BOOSTER BLOCK TERMINAL SEE P. 1.1
R.H.
L.H.
BALLAST
C203
C208
C200
C201
F32T8
F15T8
H345-F32T8
H341-F15T8
Y6A-18
Y6B-18
Y5A-18
Y5B-18
Y4A-18
Y4B-18
Y3A-18
Y3B-18
Y2A-18
Y2B-18
Y1A-18
Y1B-18
B6A
B6B
B5A
B5B
B4A
B4B
B3A
B3B
B2A
B2B
B1A
B1B
B7A
B7B
Y7A-18
Y7B-18
0-0F-14
0-0D-14
24-38A-14
24-38B-14
0F-12
0D-12
C575
C578
C35
LW
FROM GENERAL LTS SWITCH SEE P 11.3
24V POWER FROM RR.JCT.BOX SEE P. 1.1
24-38-16
24-24A-14
R32
86
85
87
30
87A
0-0-18
RS
24-38C-14
C532
14GA
F18
F19
10A
BATTERY CHARGER OR IN-STATION LIGHTING
24V FLUORESCENT INTERIOR LIGHTING
H3-41 & H3-45
H3-45 ONLY

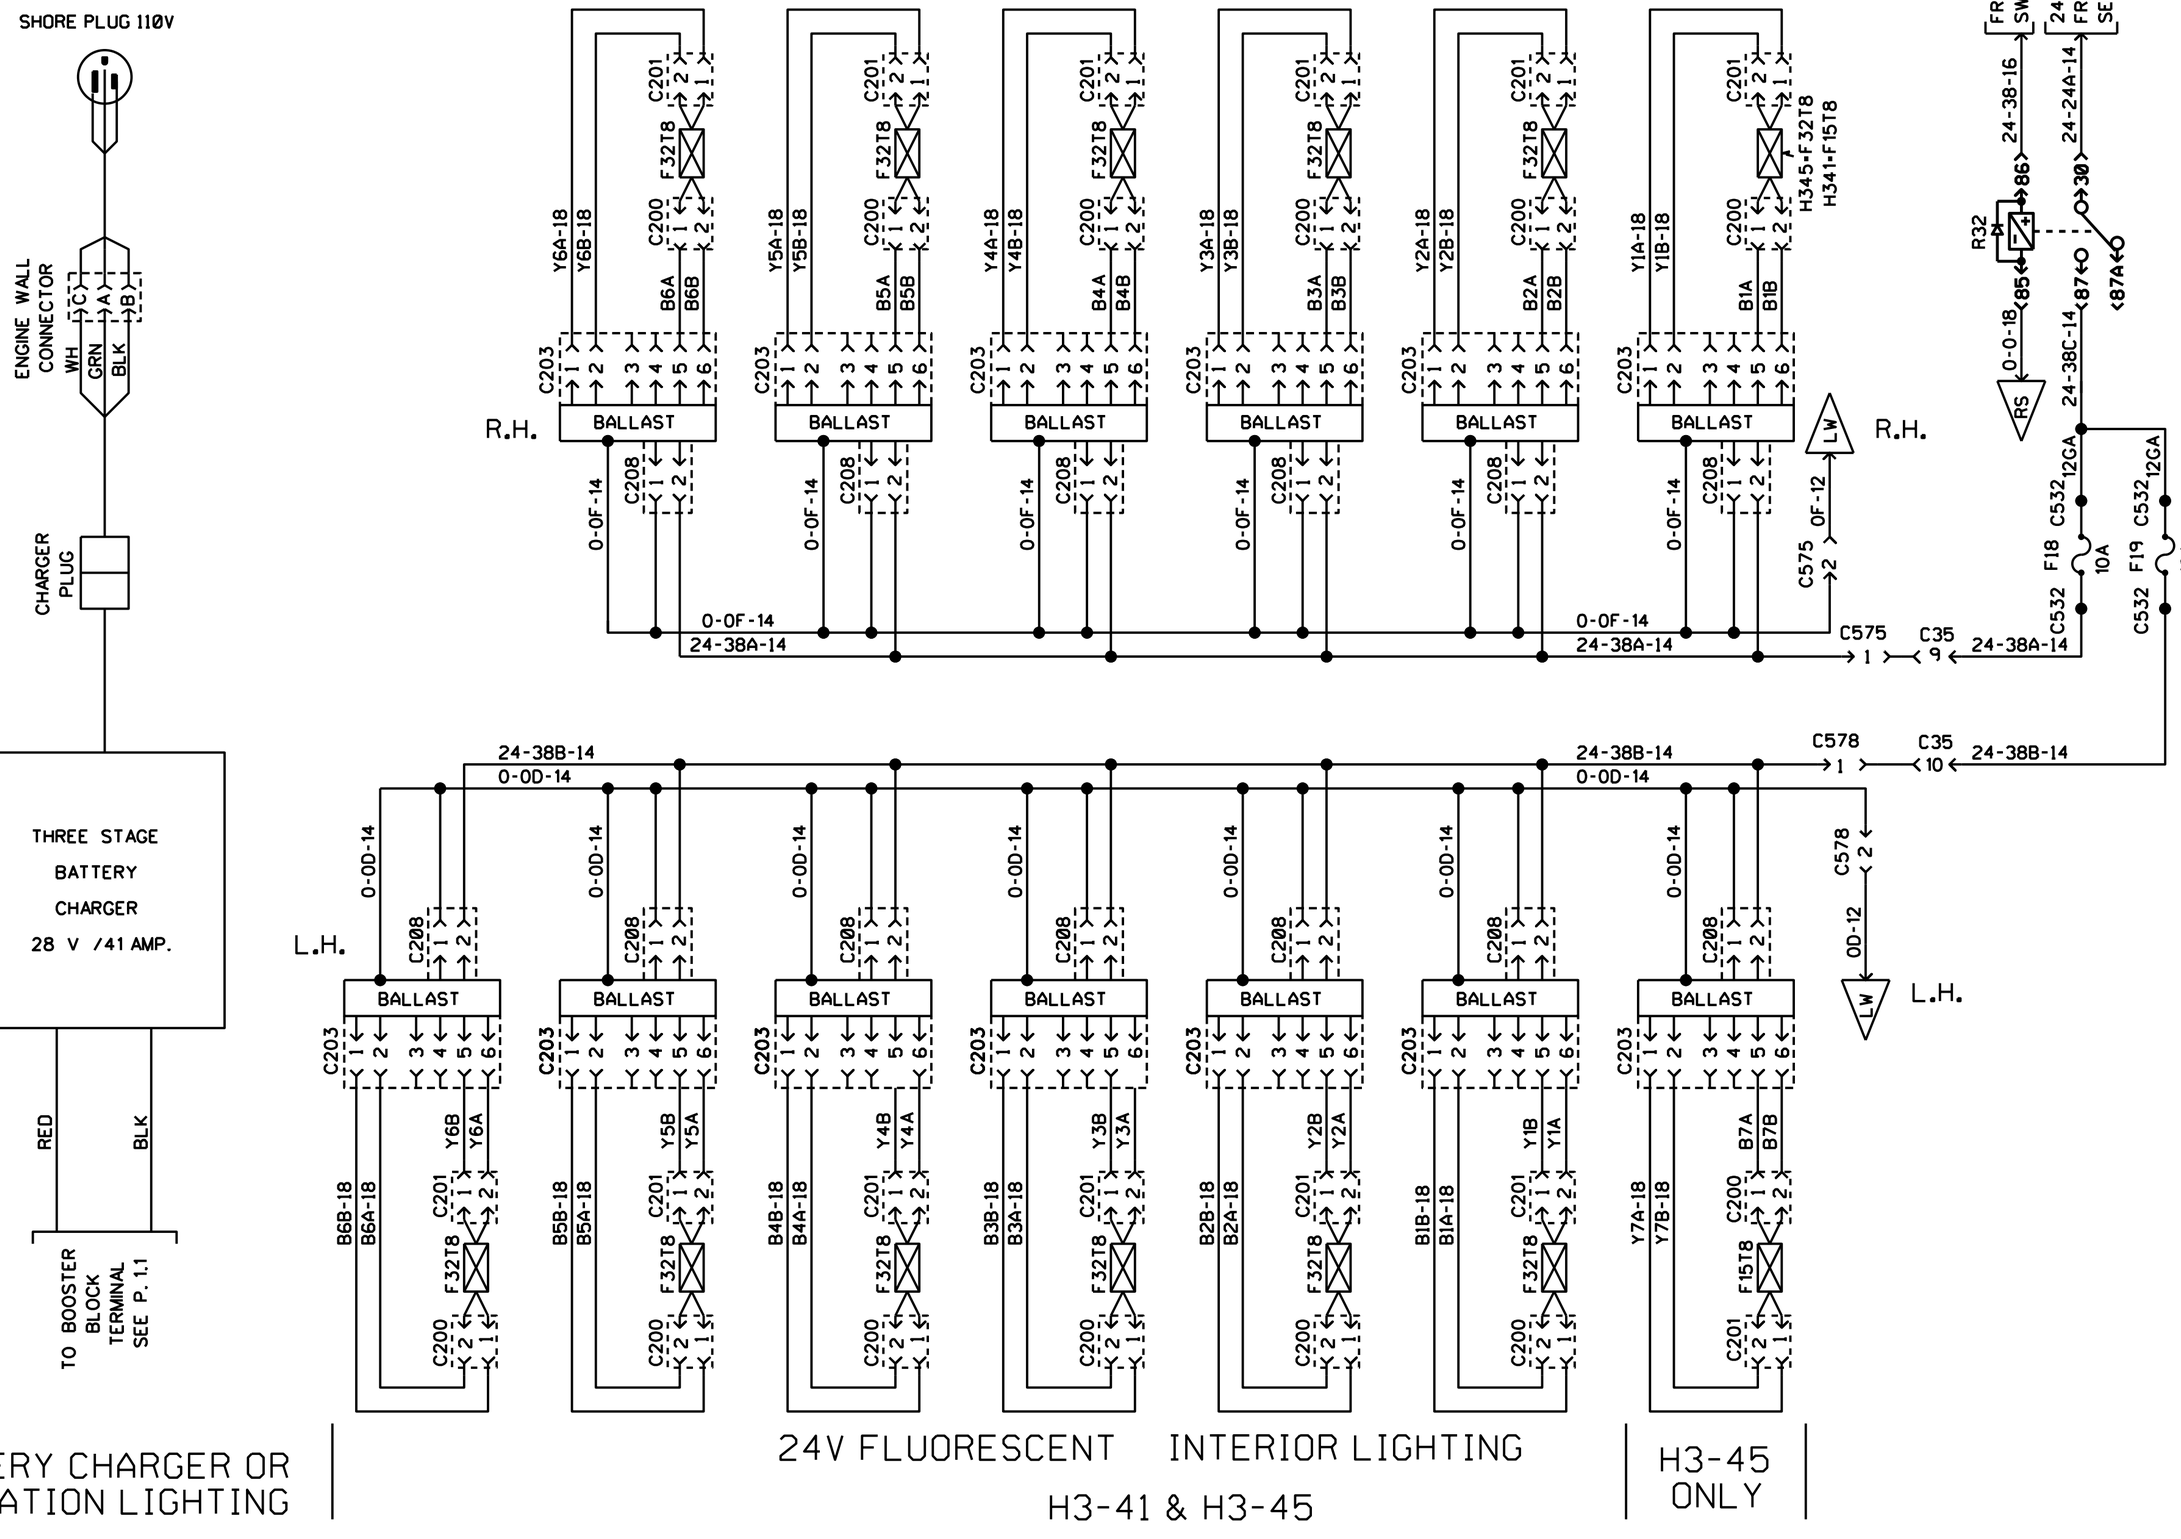

BATTERY CHARGER OR IN-STATION LIGHTING

24V FLUORESCENT INTERIOR LIGHTING

H3-41 & H3-45

H3-45 ONLY

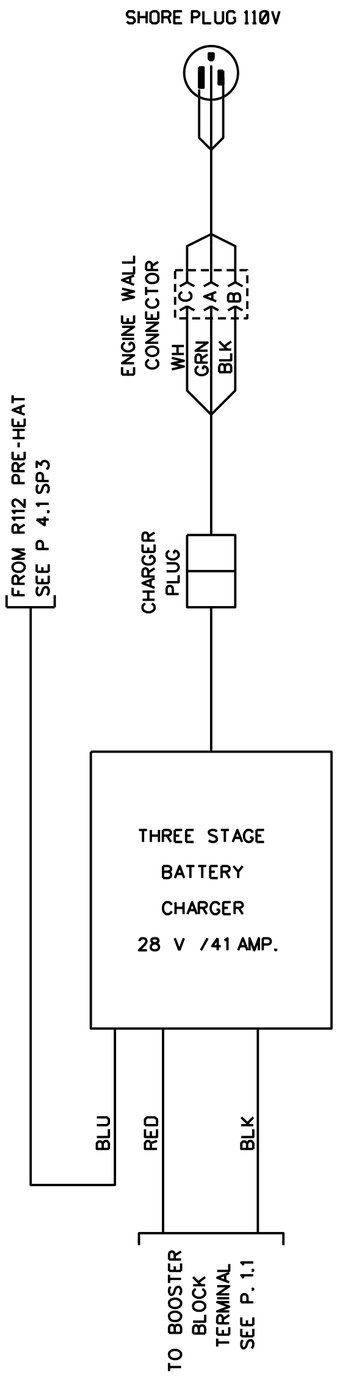

BATTERY CHARGER OR
IN-STATION LIGHTING

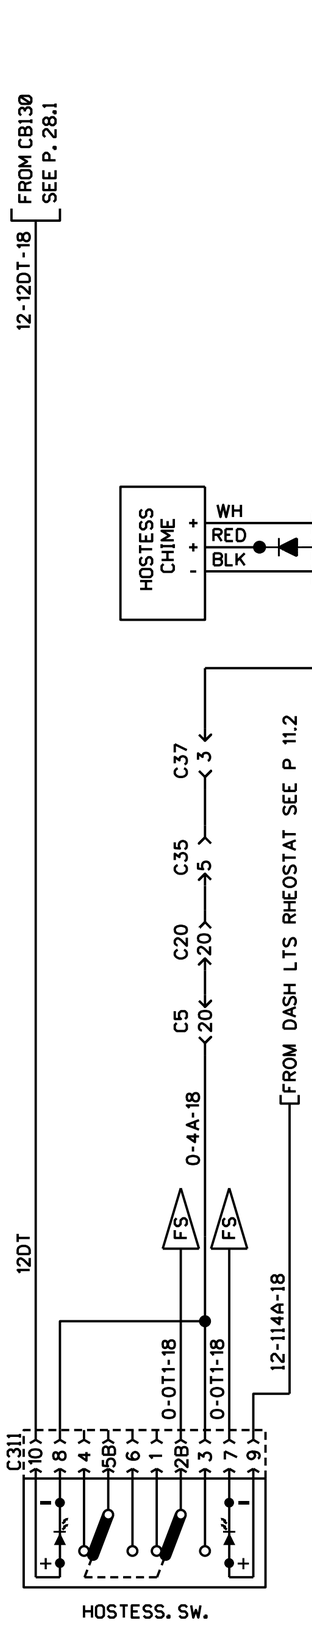

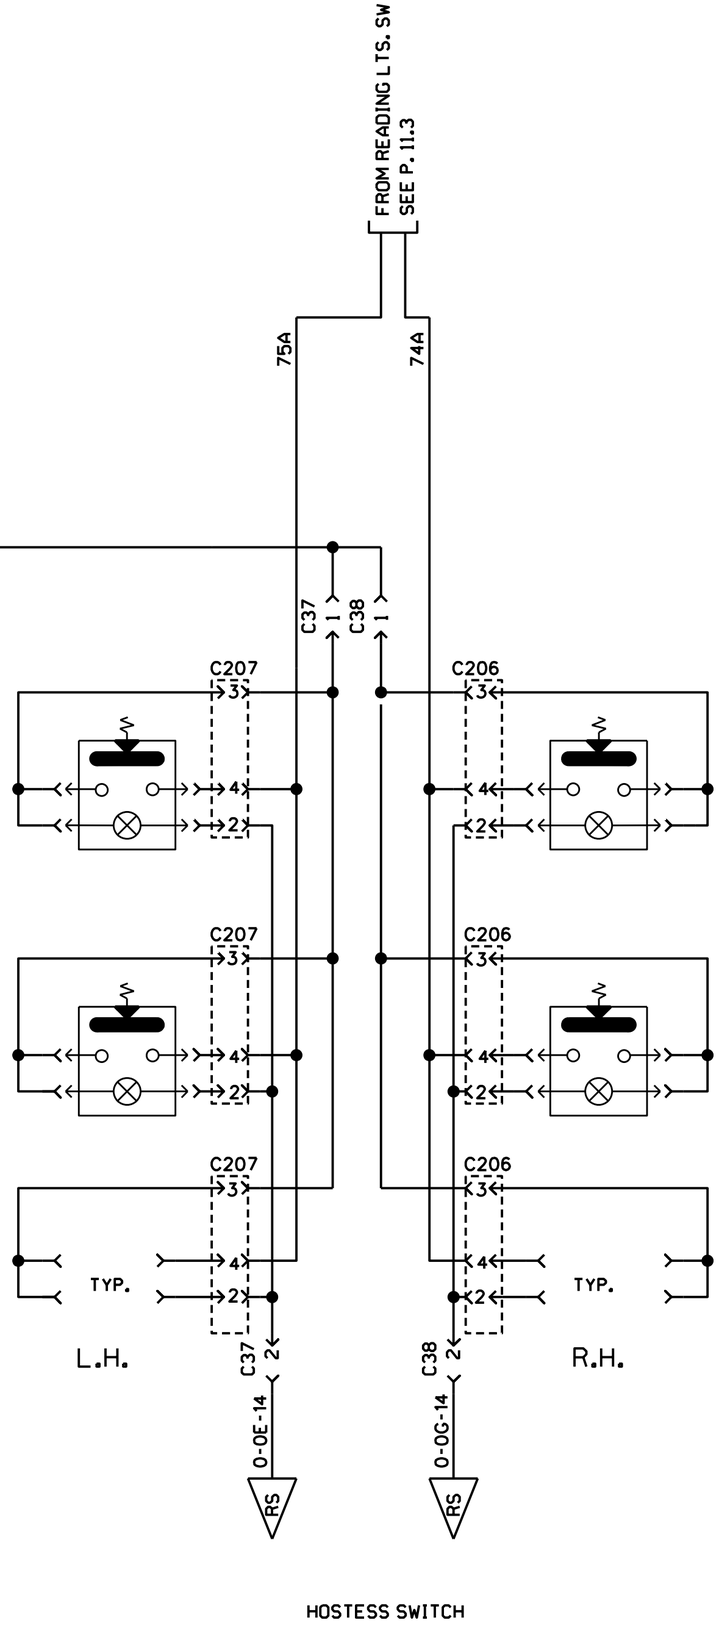

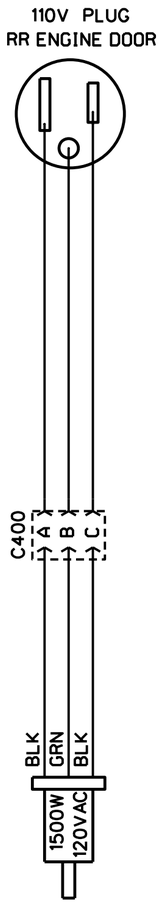

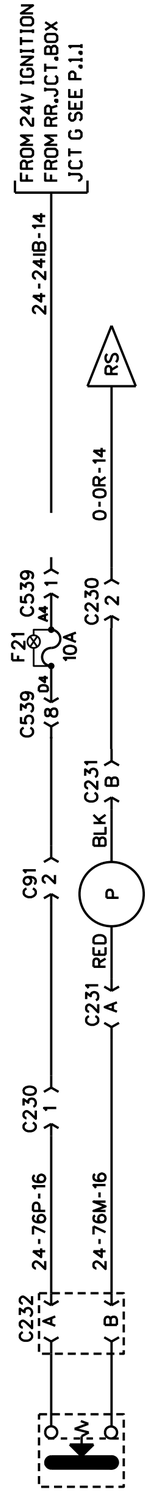

HOSTESS CHIME

ENGINE BLOCK HEATER

FUEL PRIME PUMP

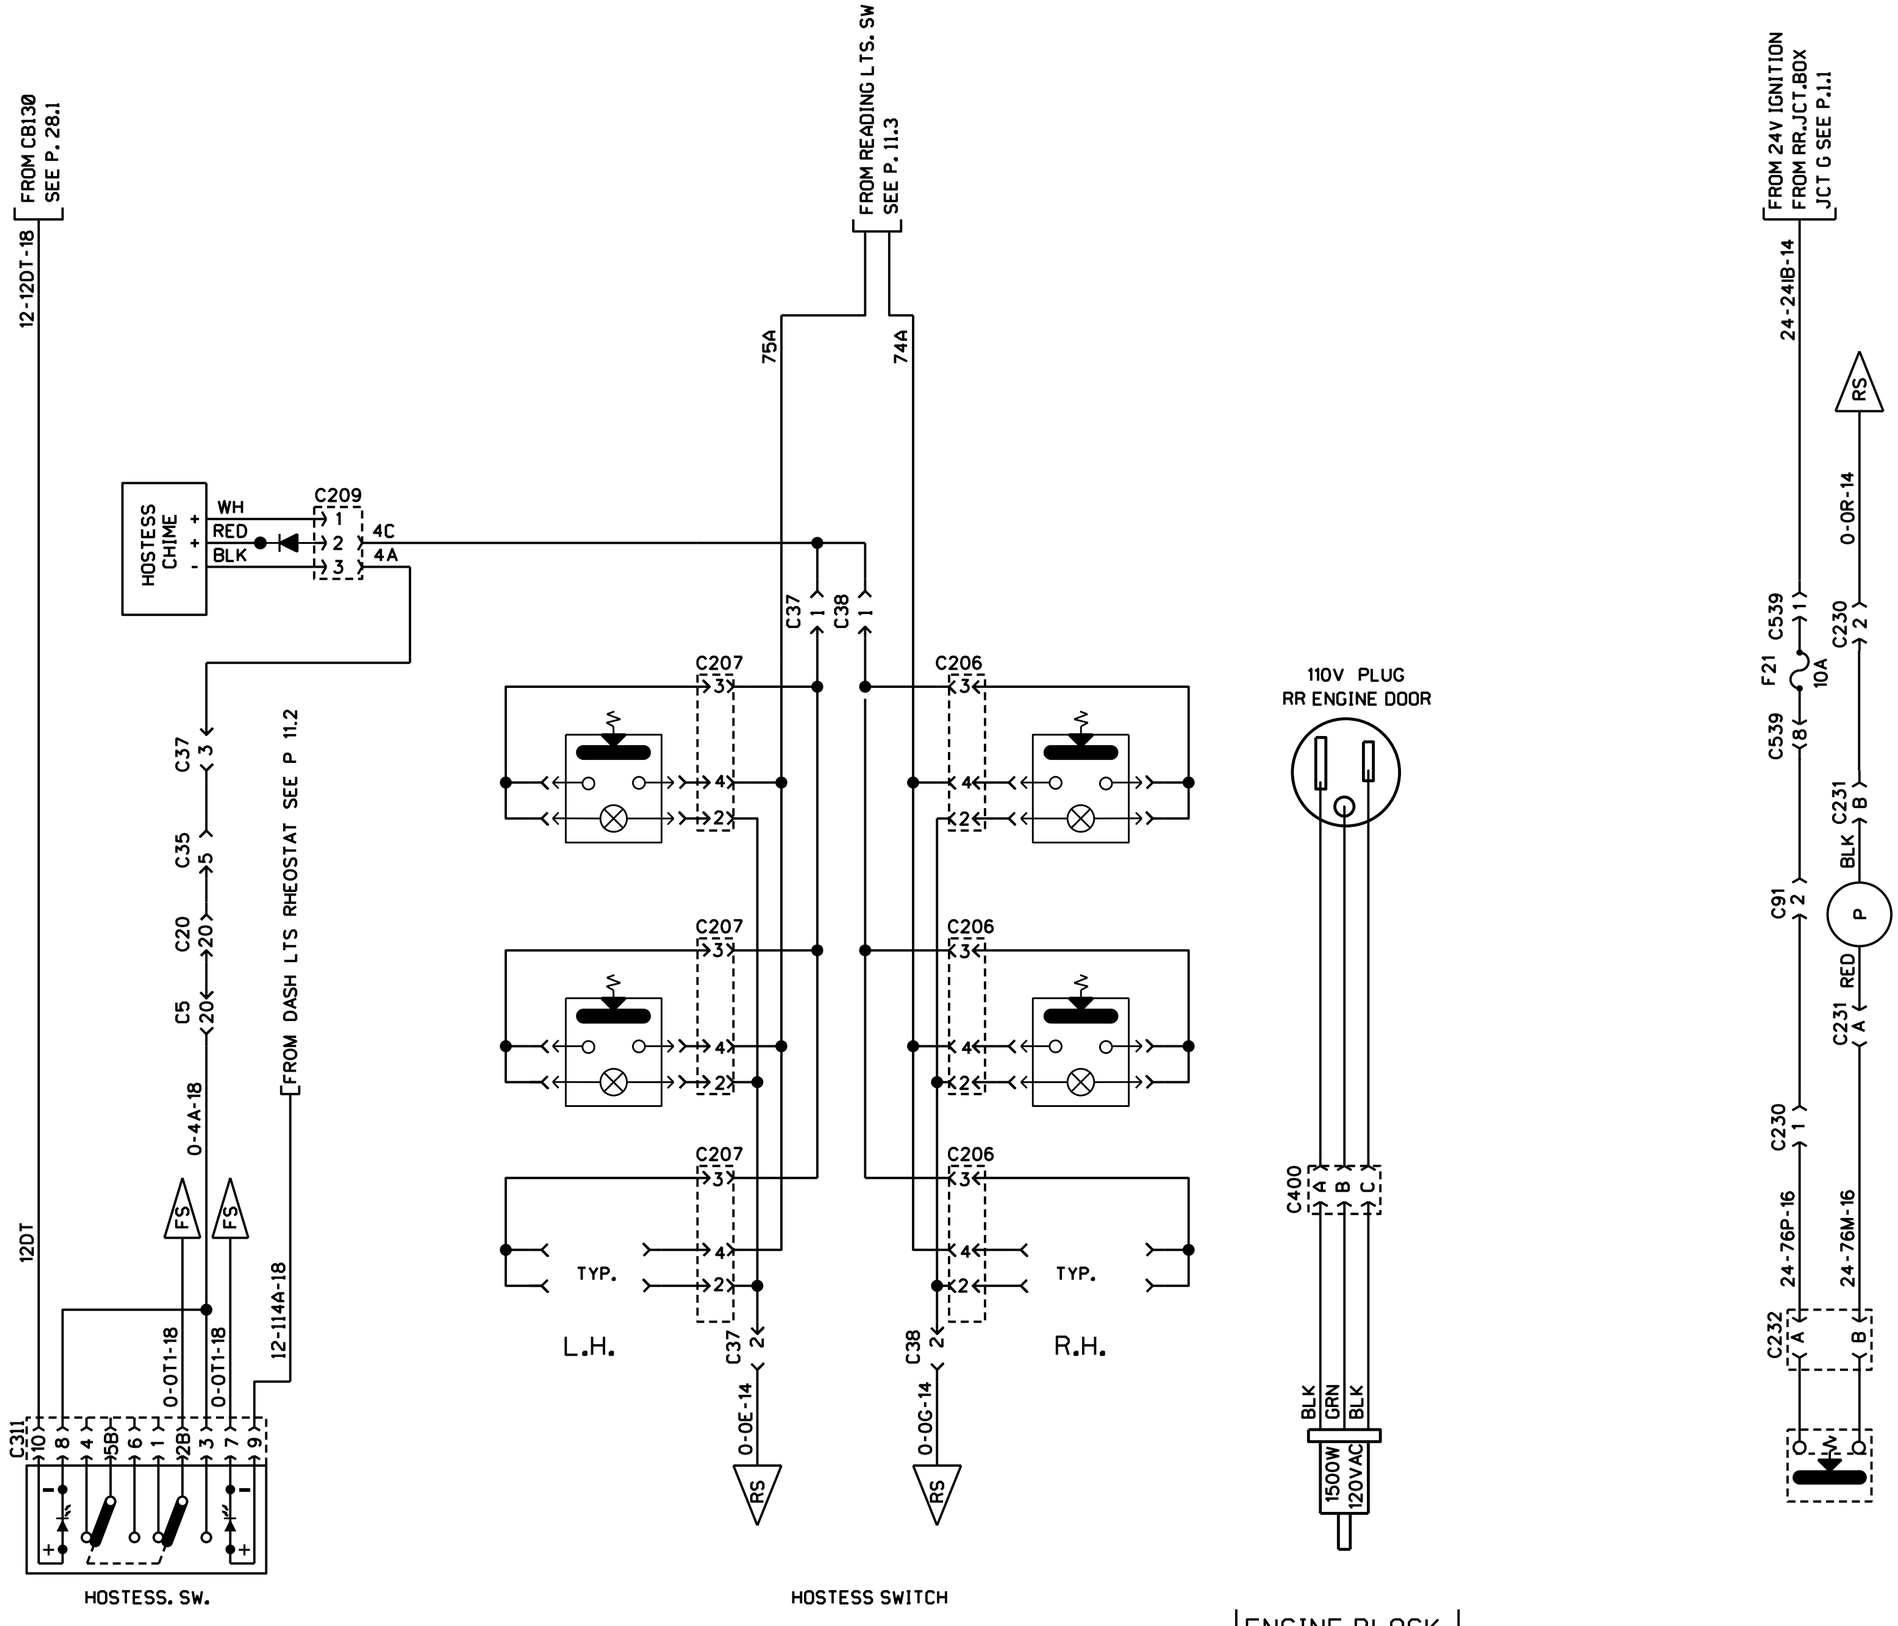

HOSTESS CHIME

ENGINE BLOCK HEATER

FUEL PRIME PUMP

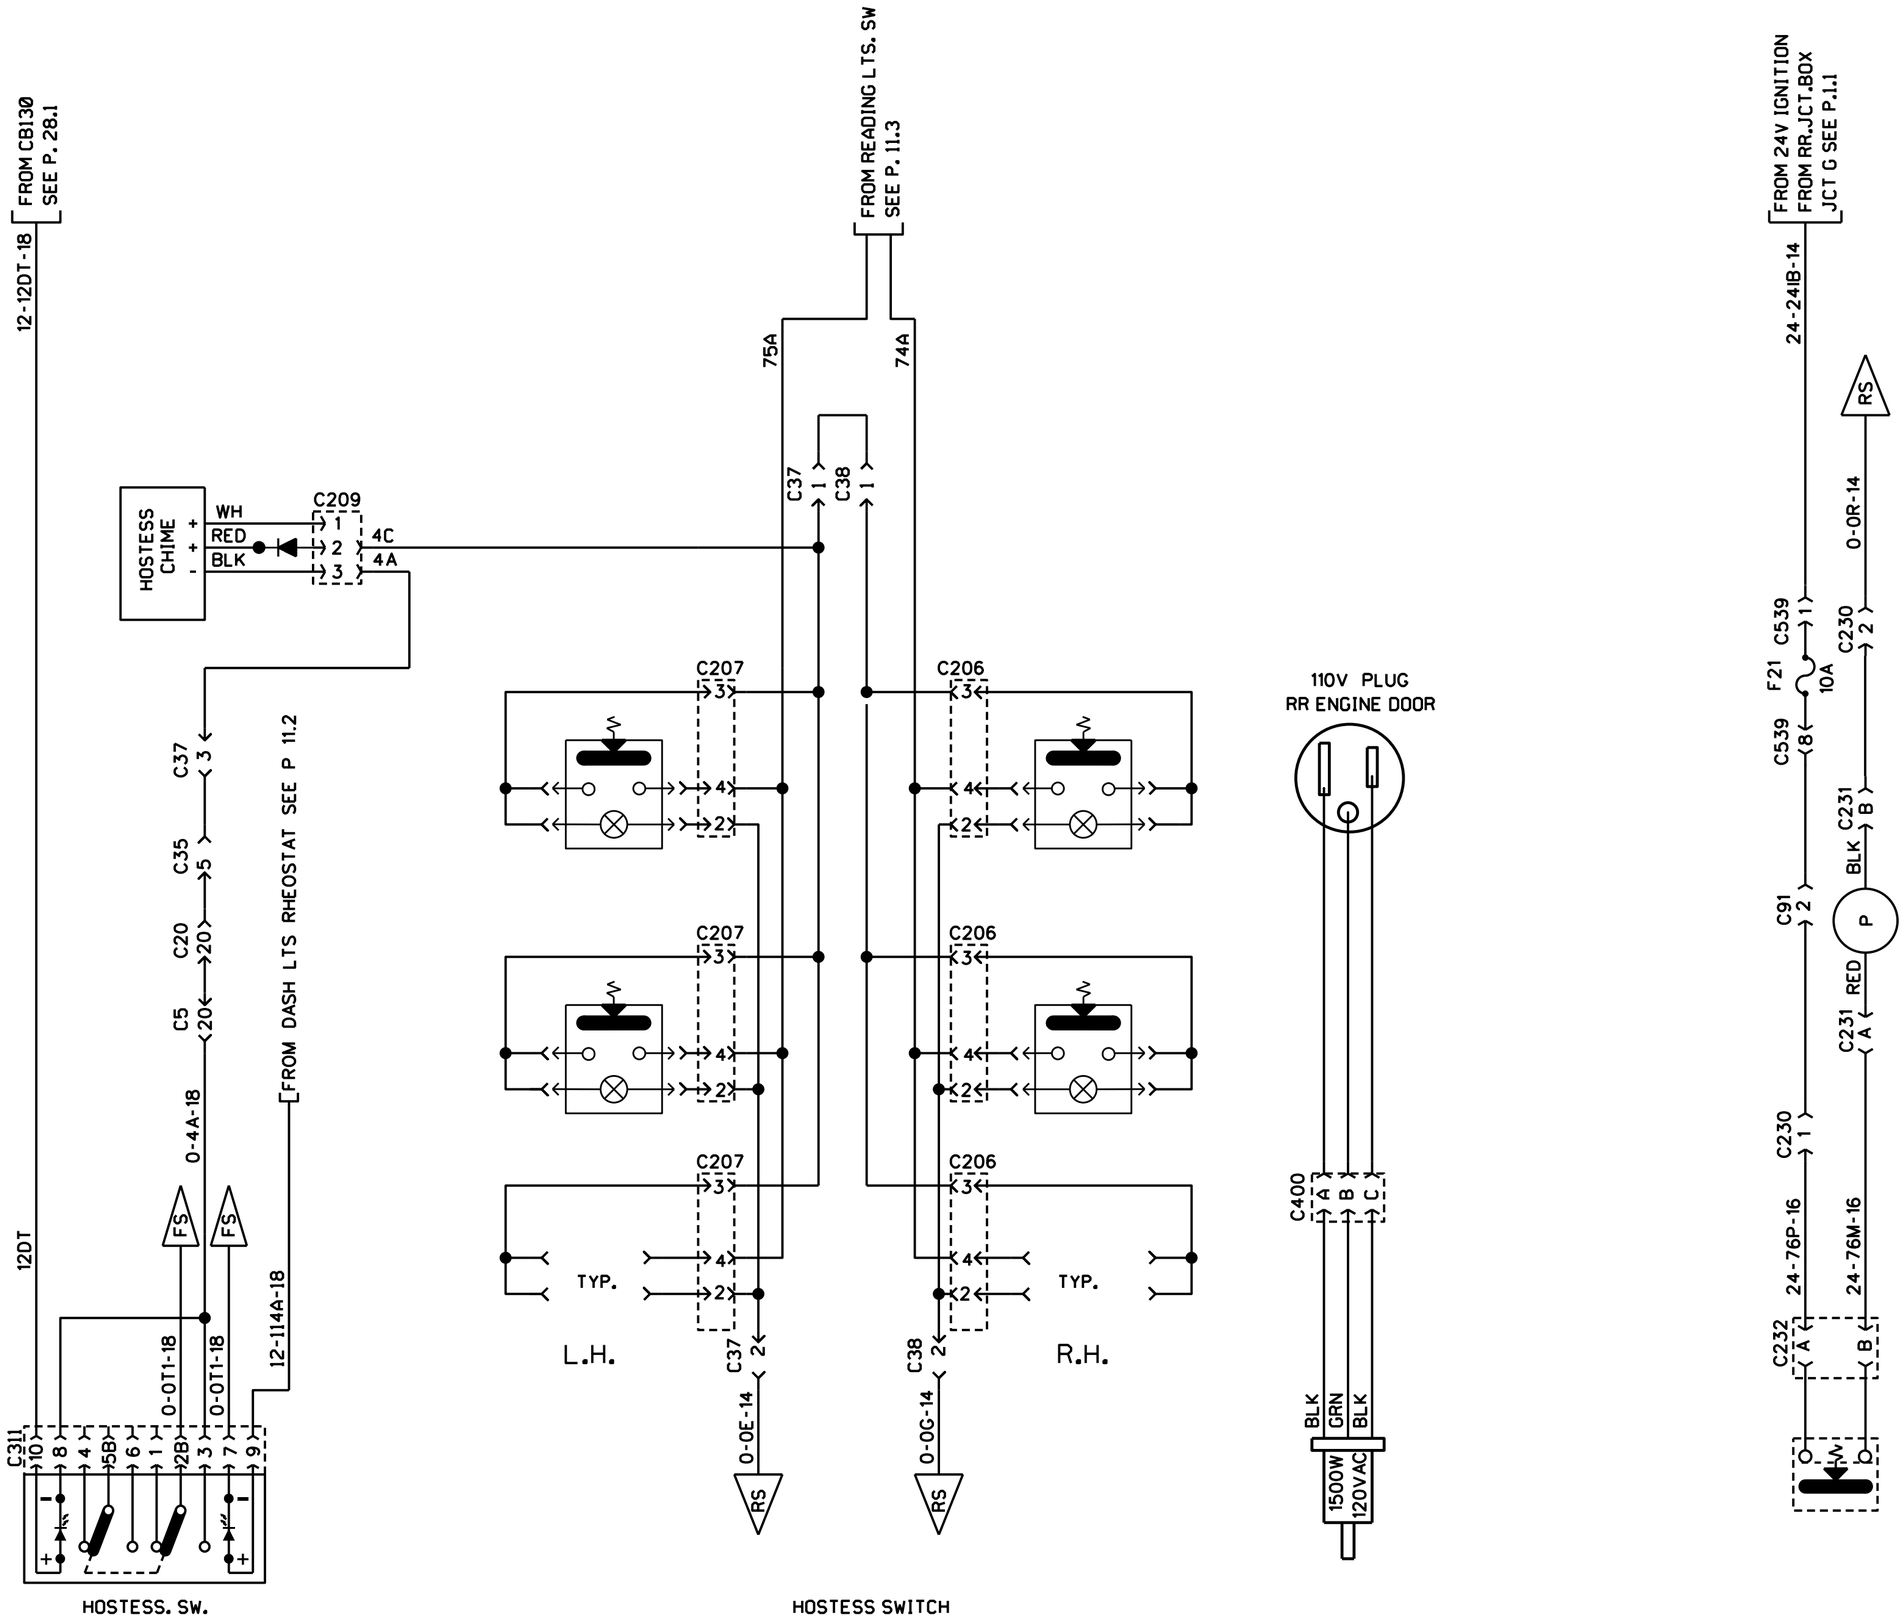

HOSTESS CHIME

ENGINE BLOCK HEATER

FUEL PRIME PUMP

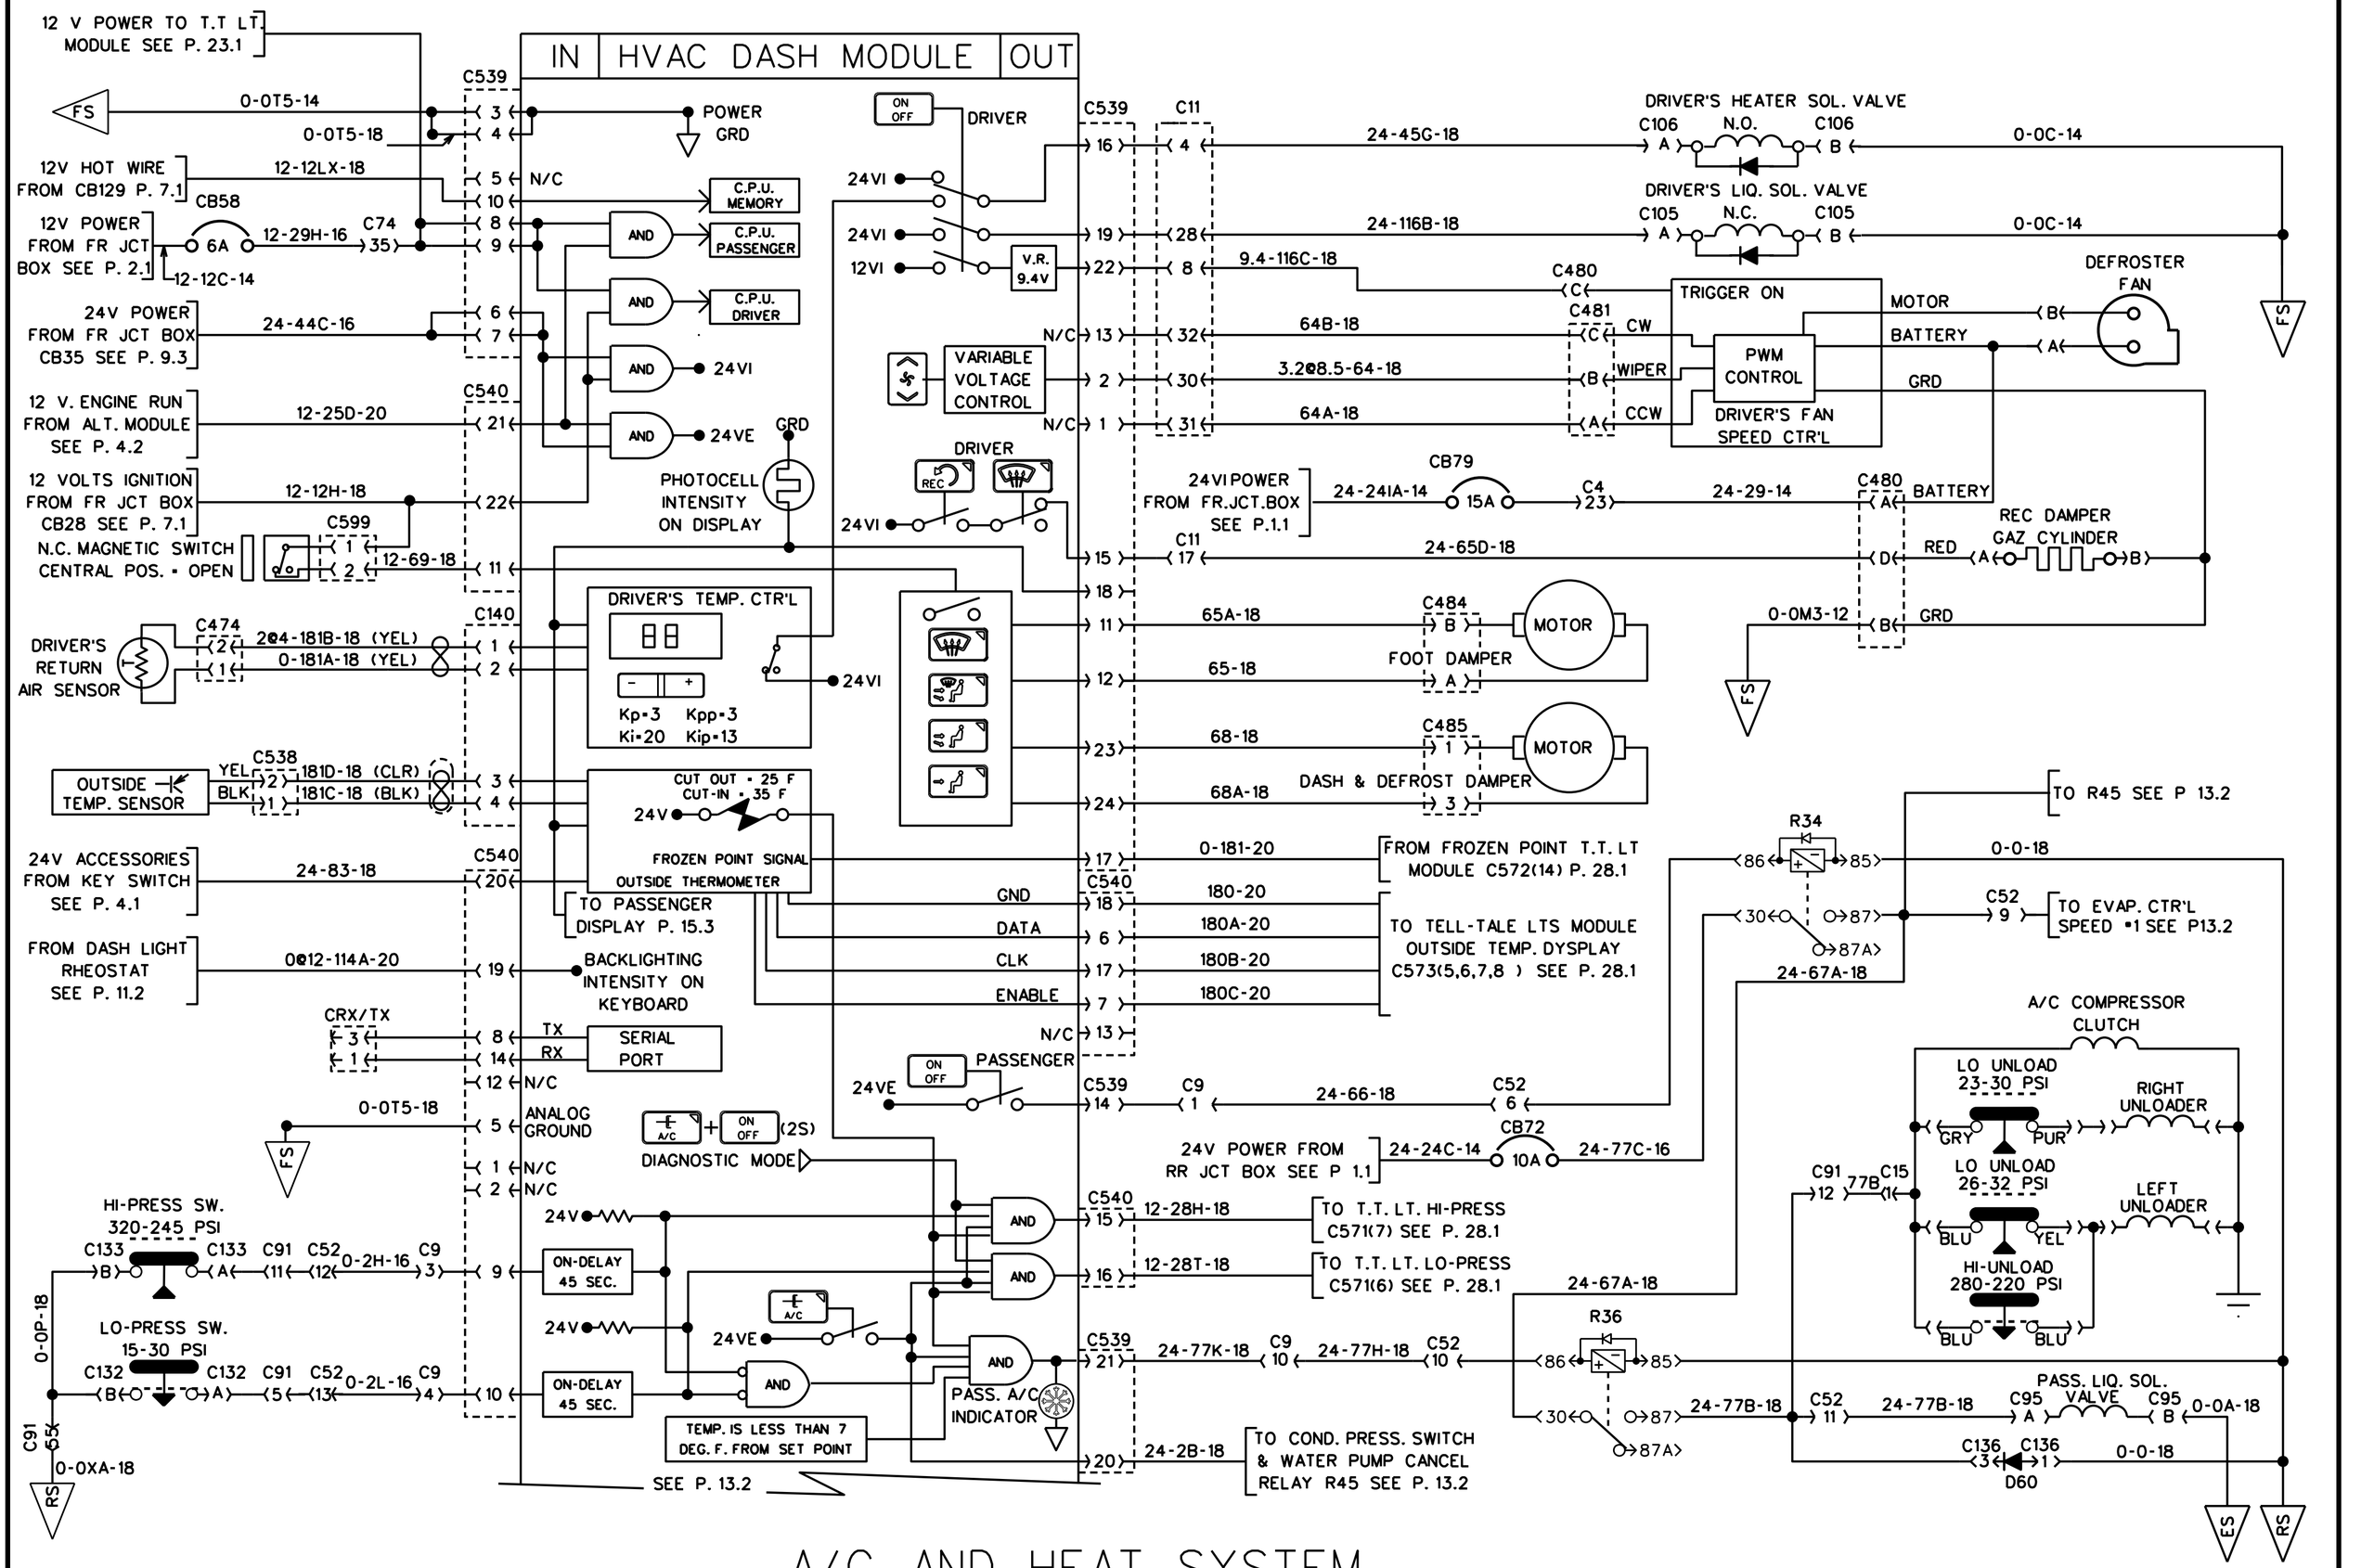

A/C AND HEAT SYSTEM

FAIT A PARTIR DE D060938 P15.2 REV 12

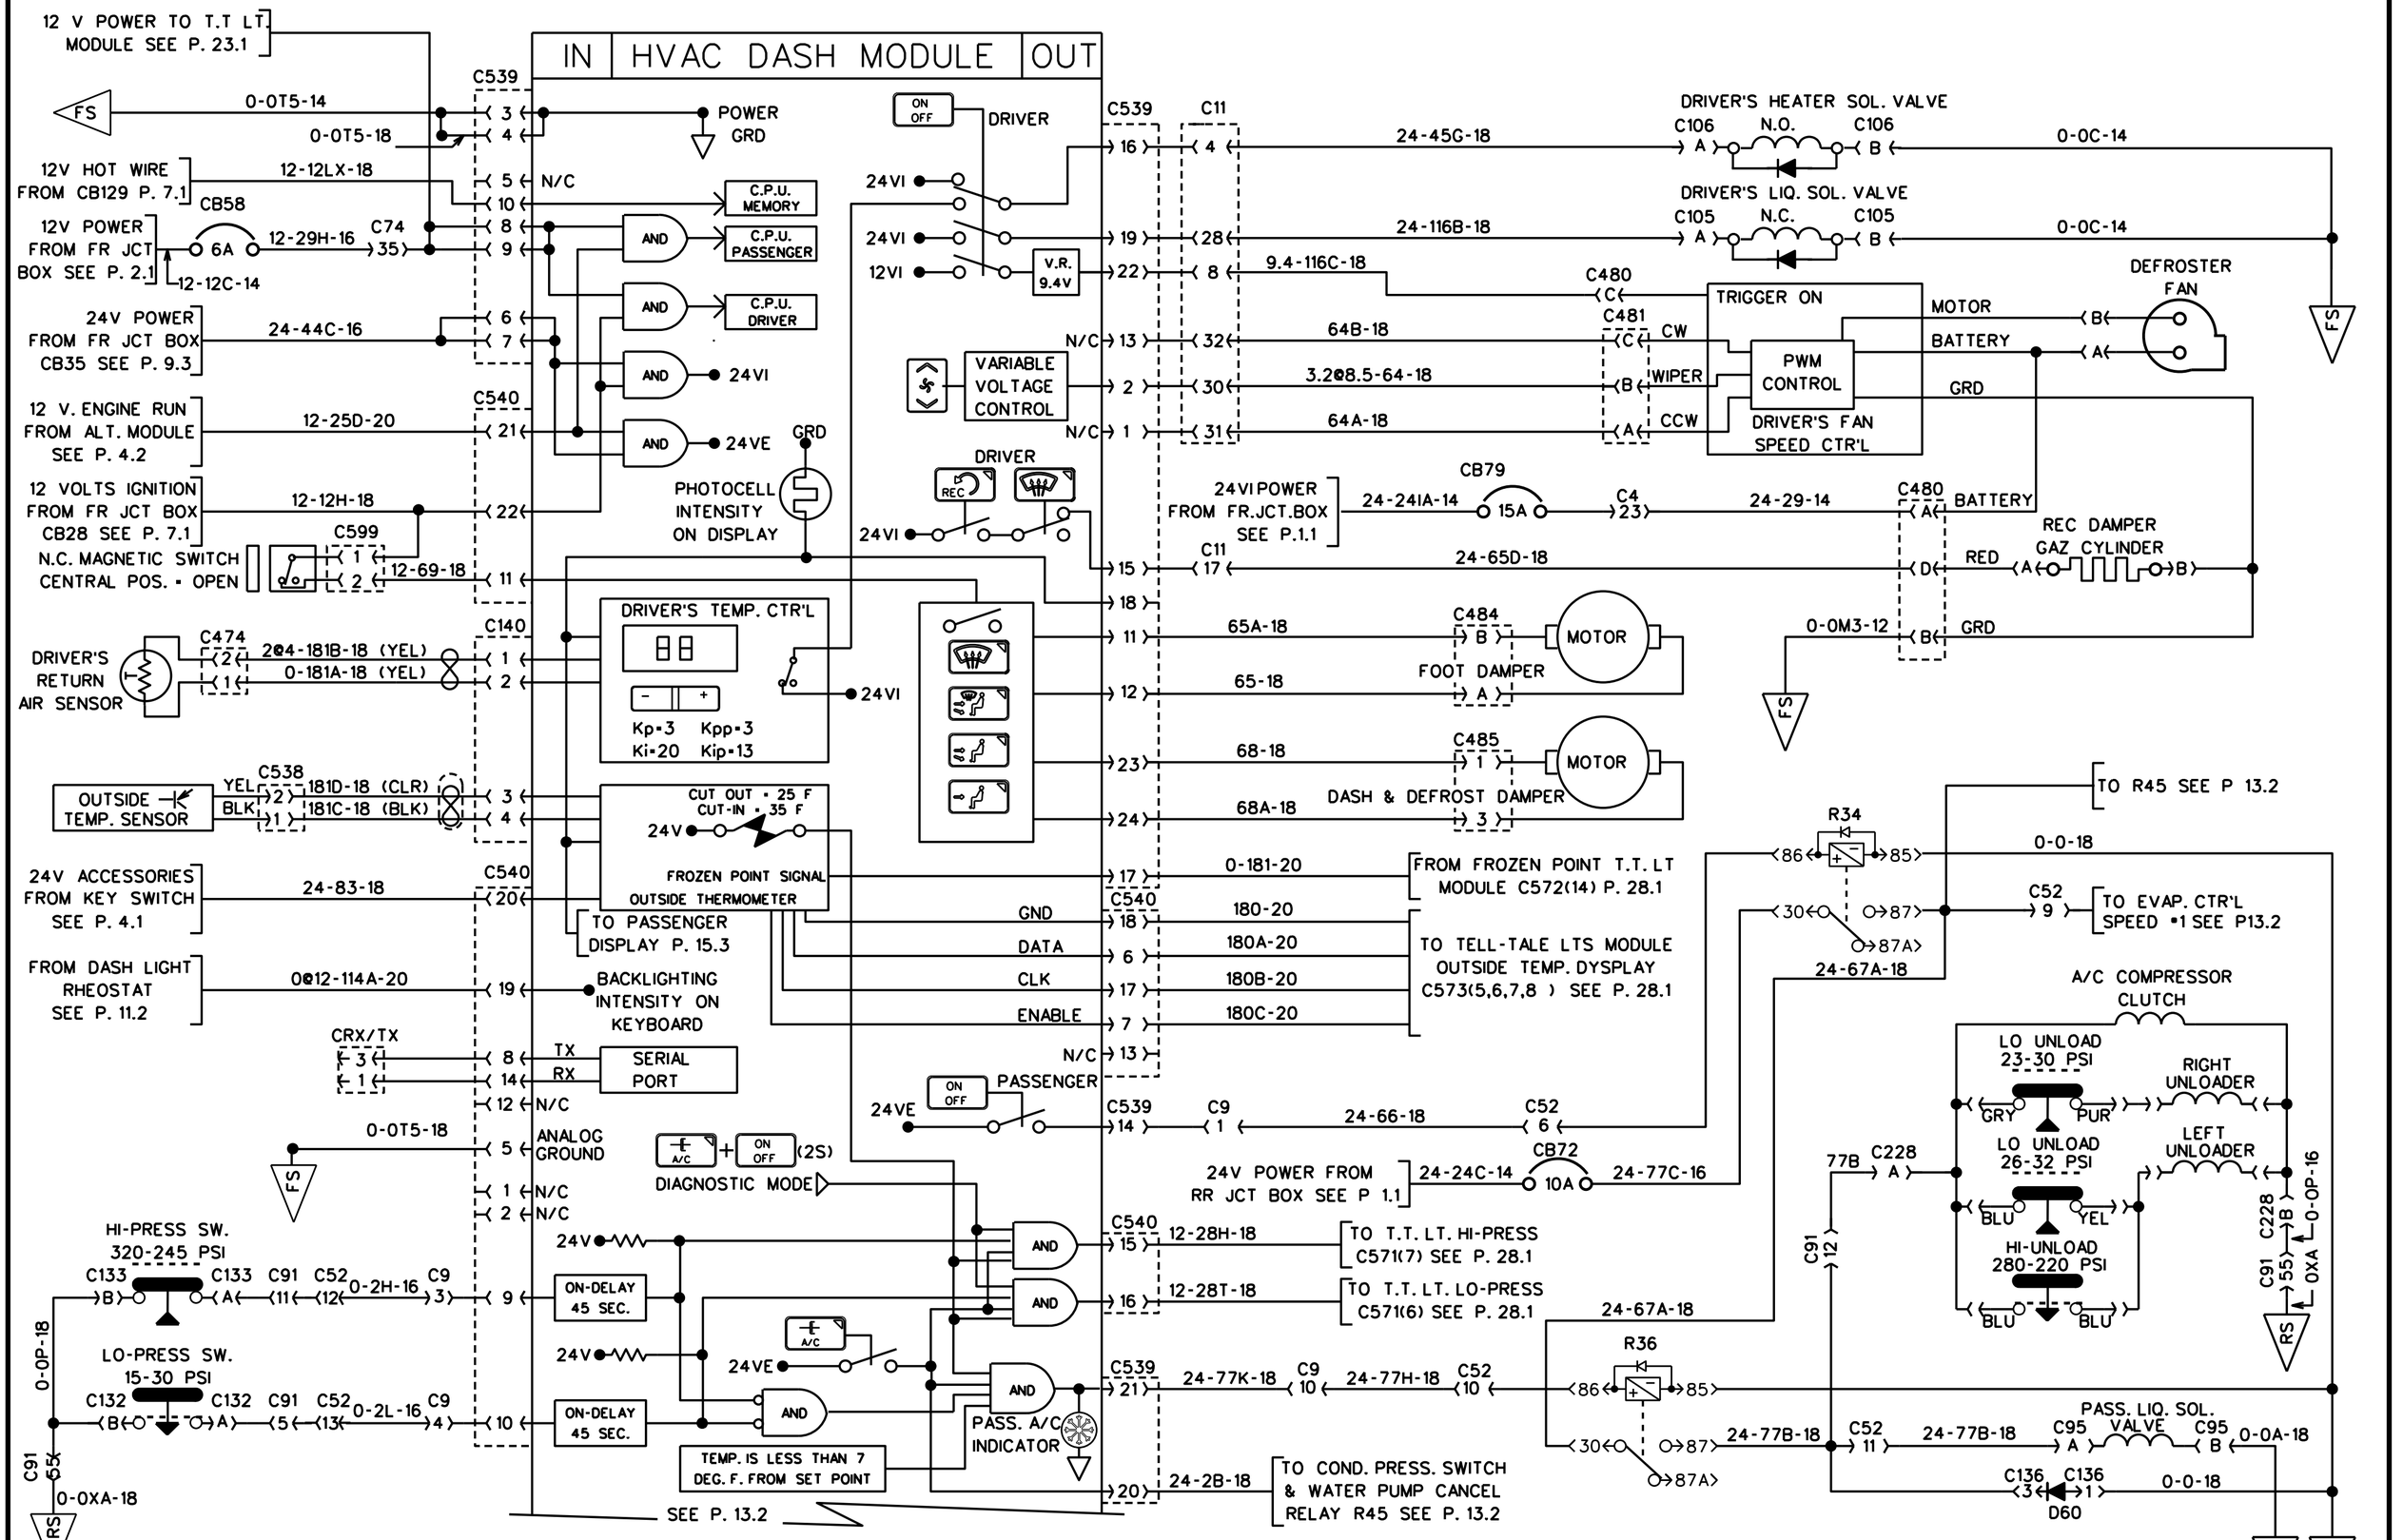

A/C AND HEAT SYSTEM

FAIT A PARTIR DE D060938 P15.2 REV 12

A/C AND HEAT SYSTEM

FAIT A PARTIR DE D060938 P15.2 REV 12

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 13.1	REVISION 12

A/C AND HEAT SYSTEM

SPECIAL A/C HOUR METER

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 13.1sp1	REVISION 00

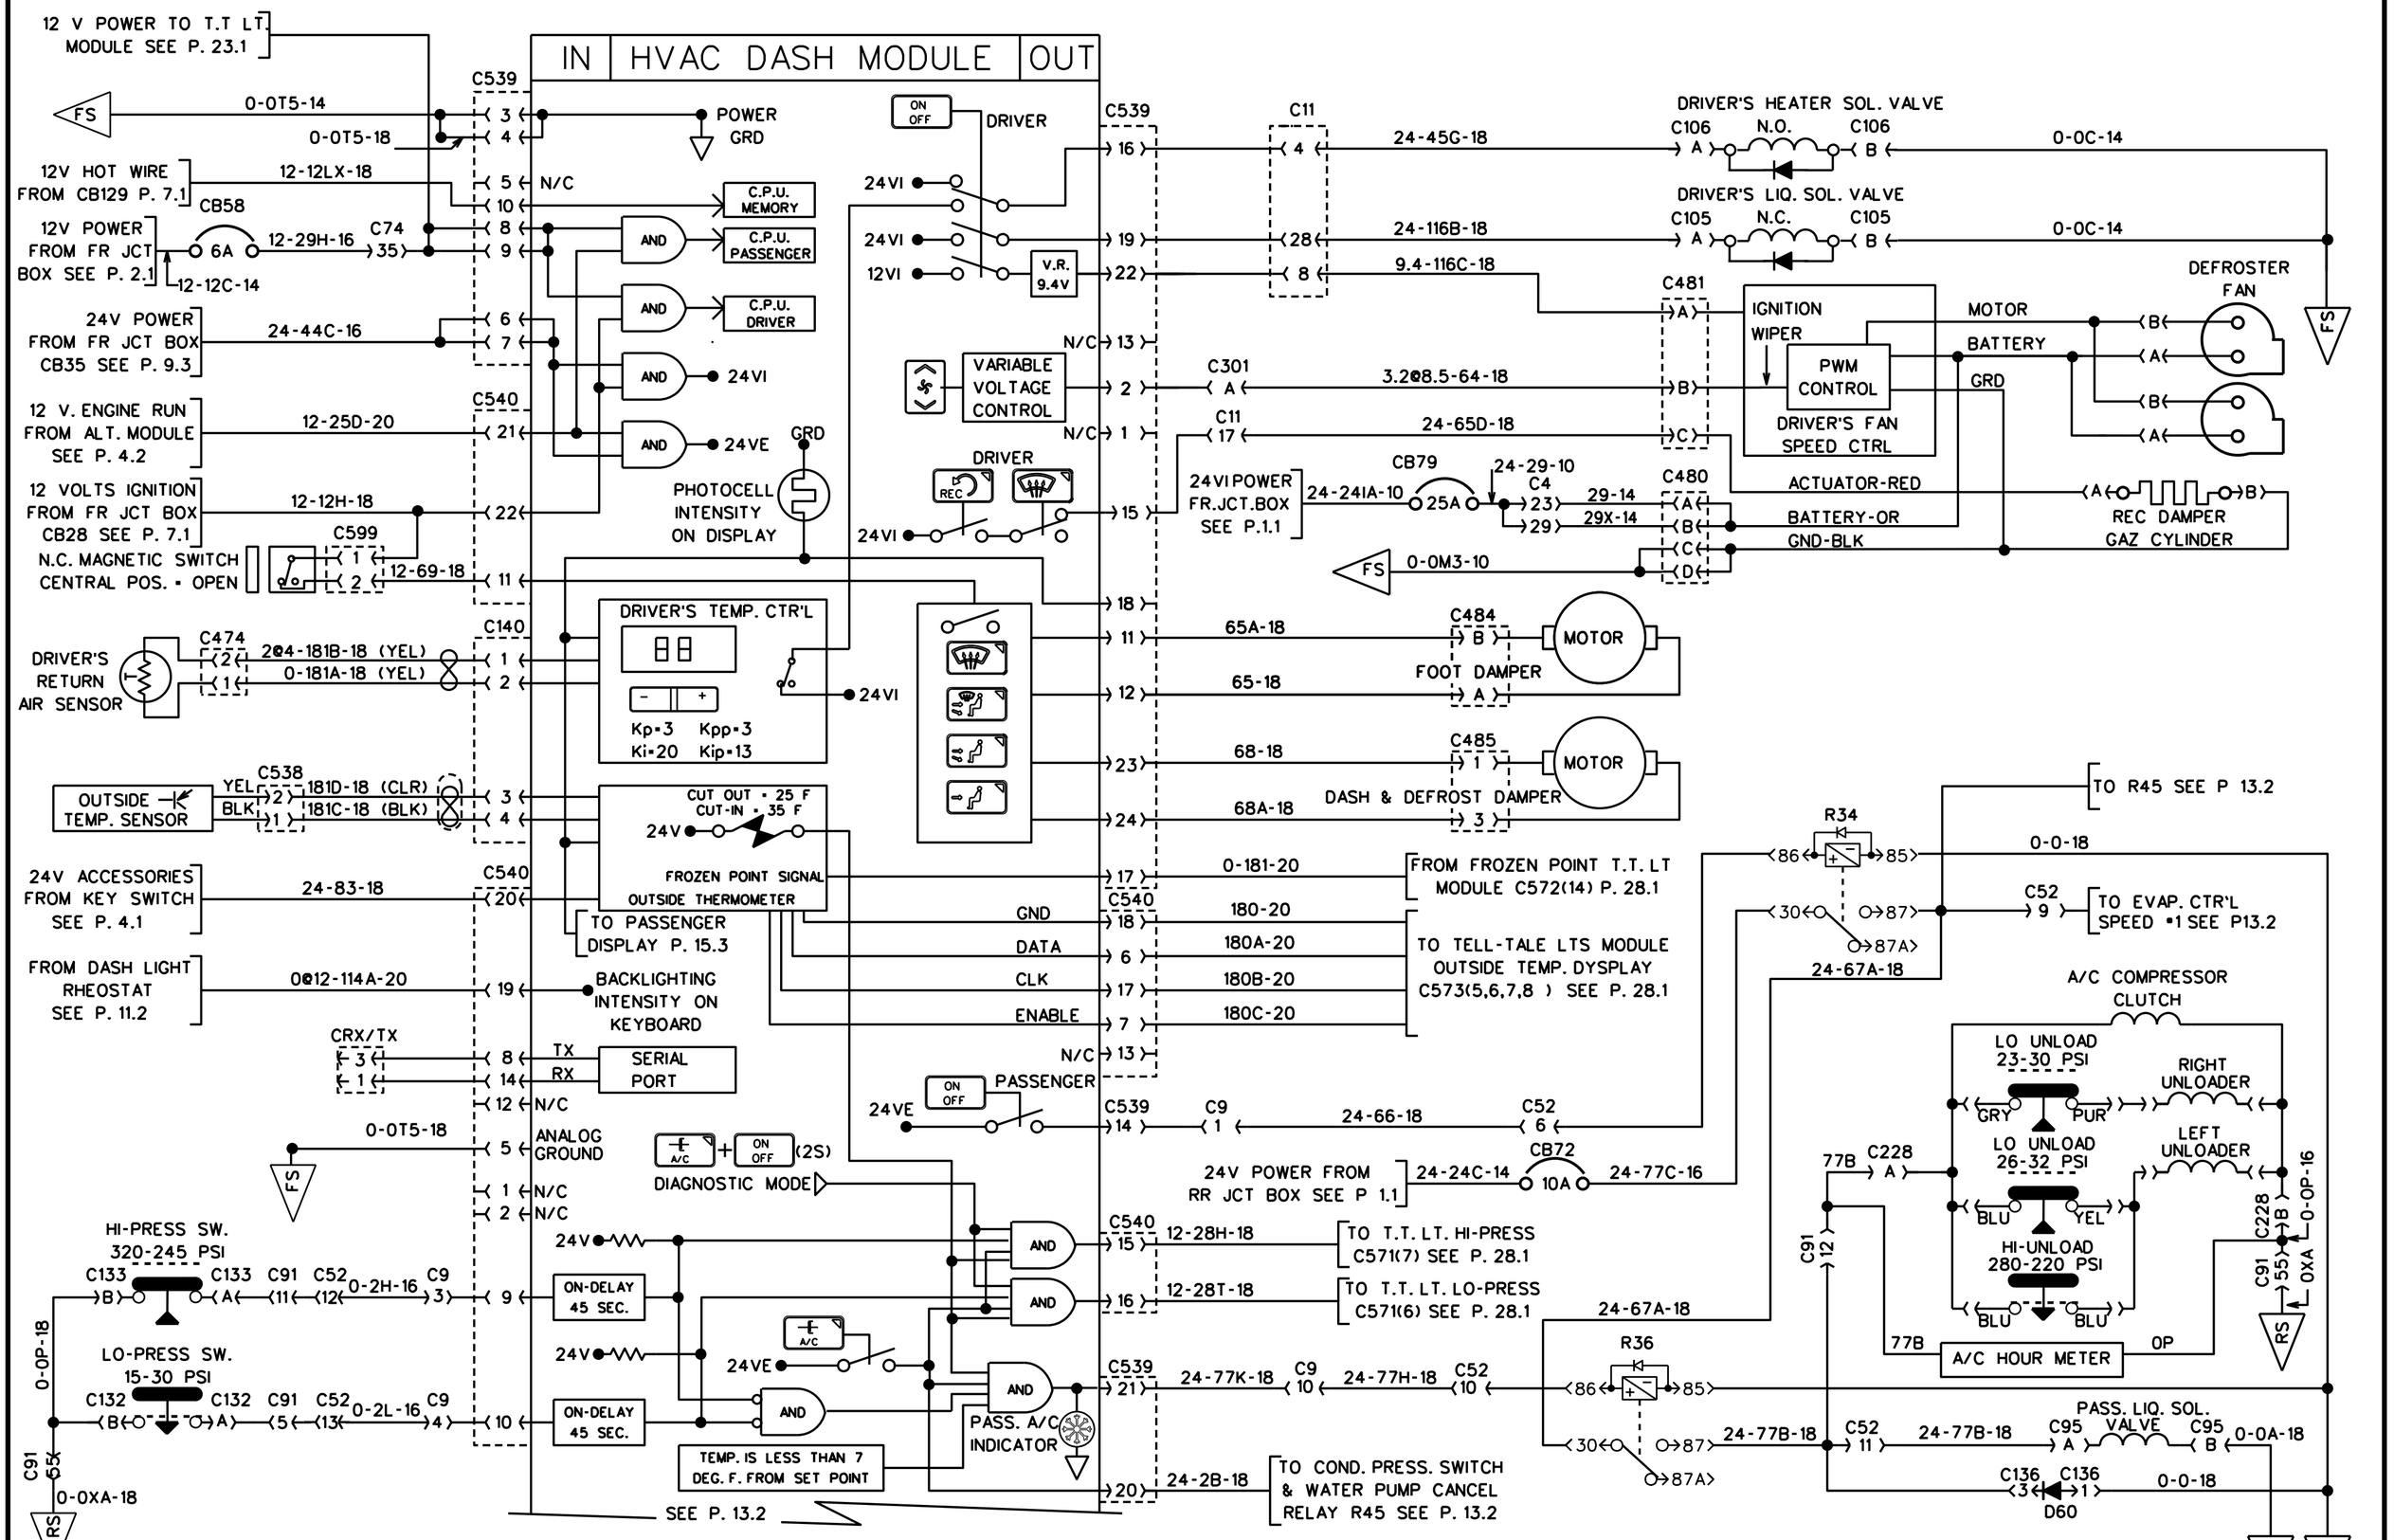

A/C AND HEAT SYSTEM

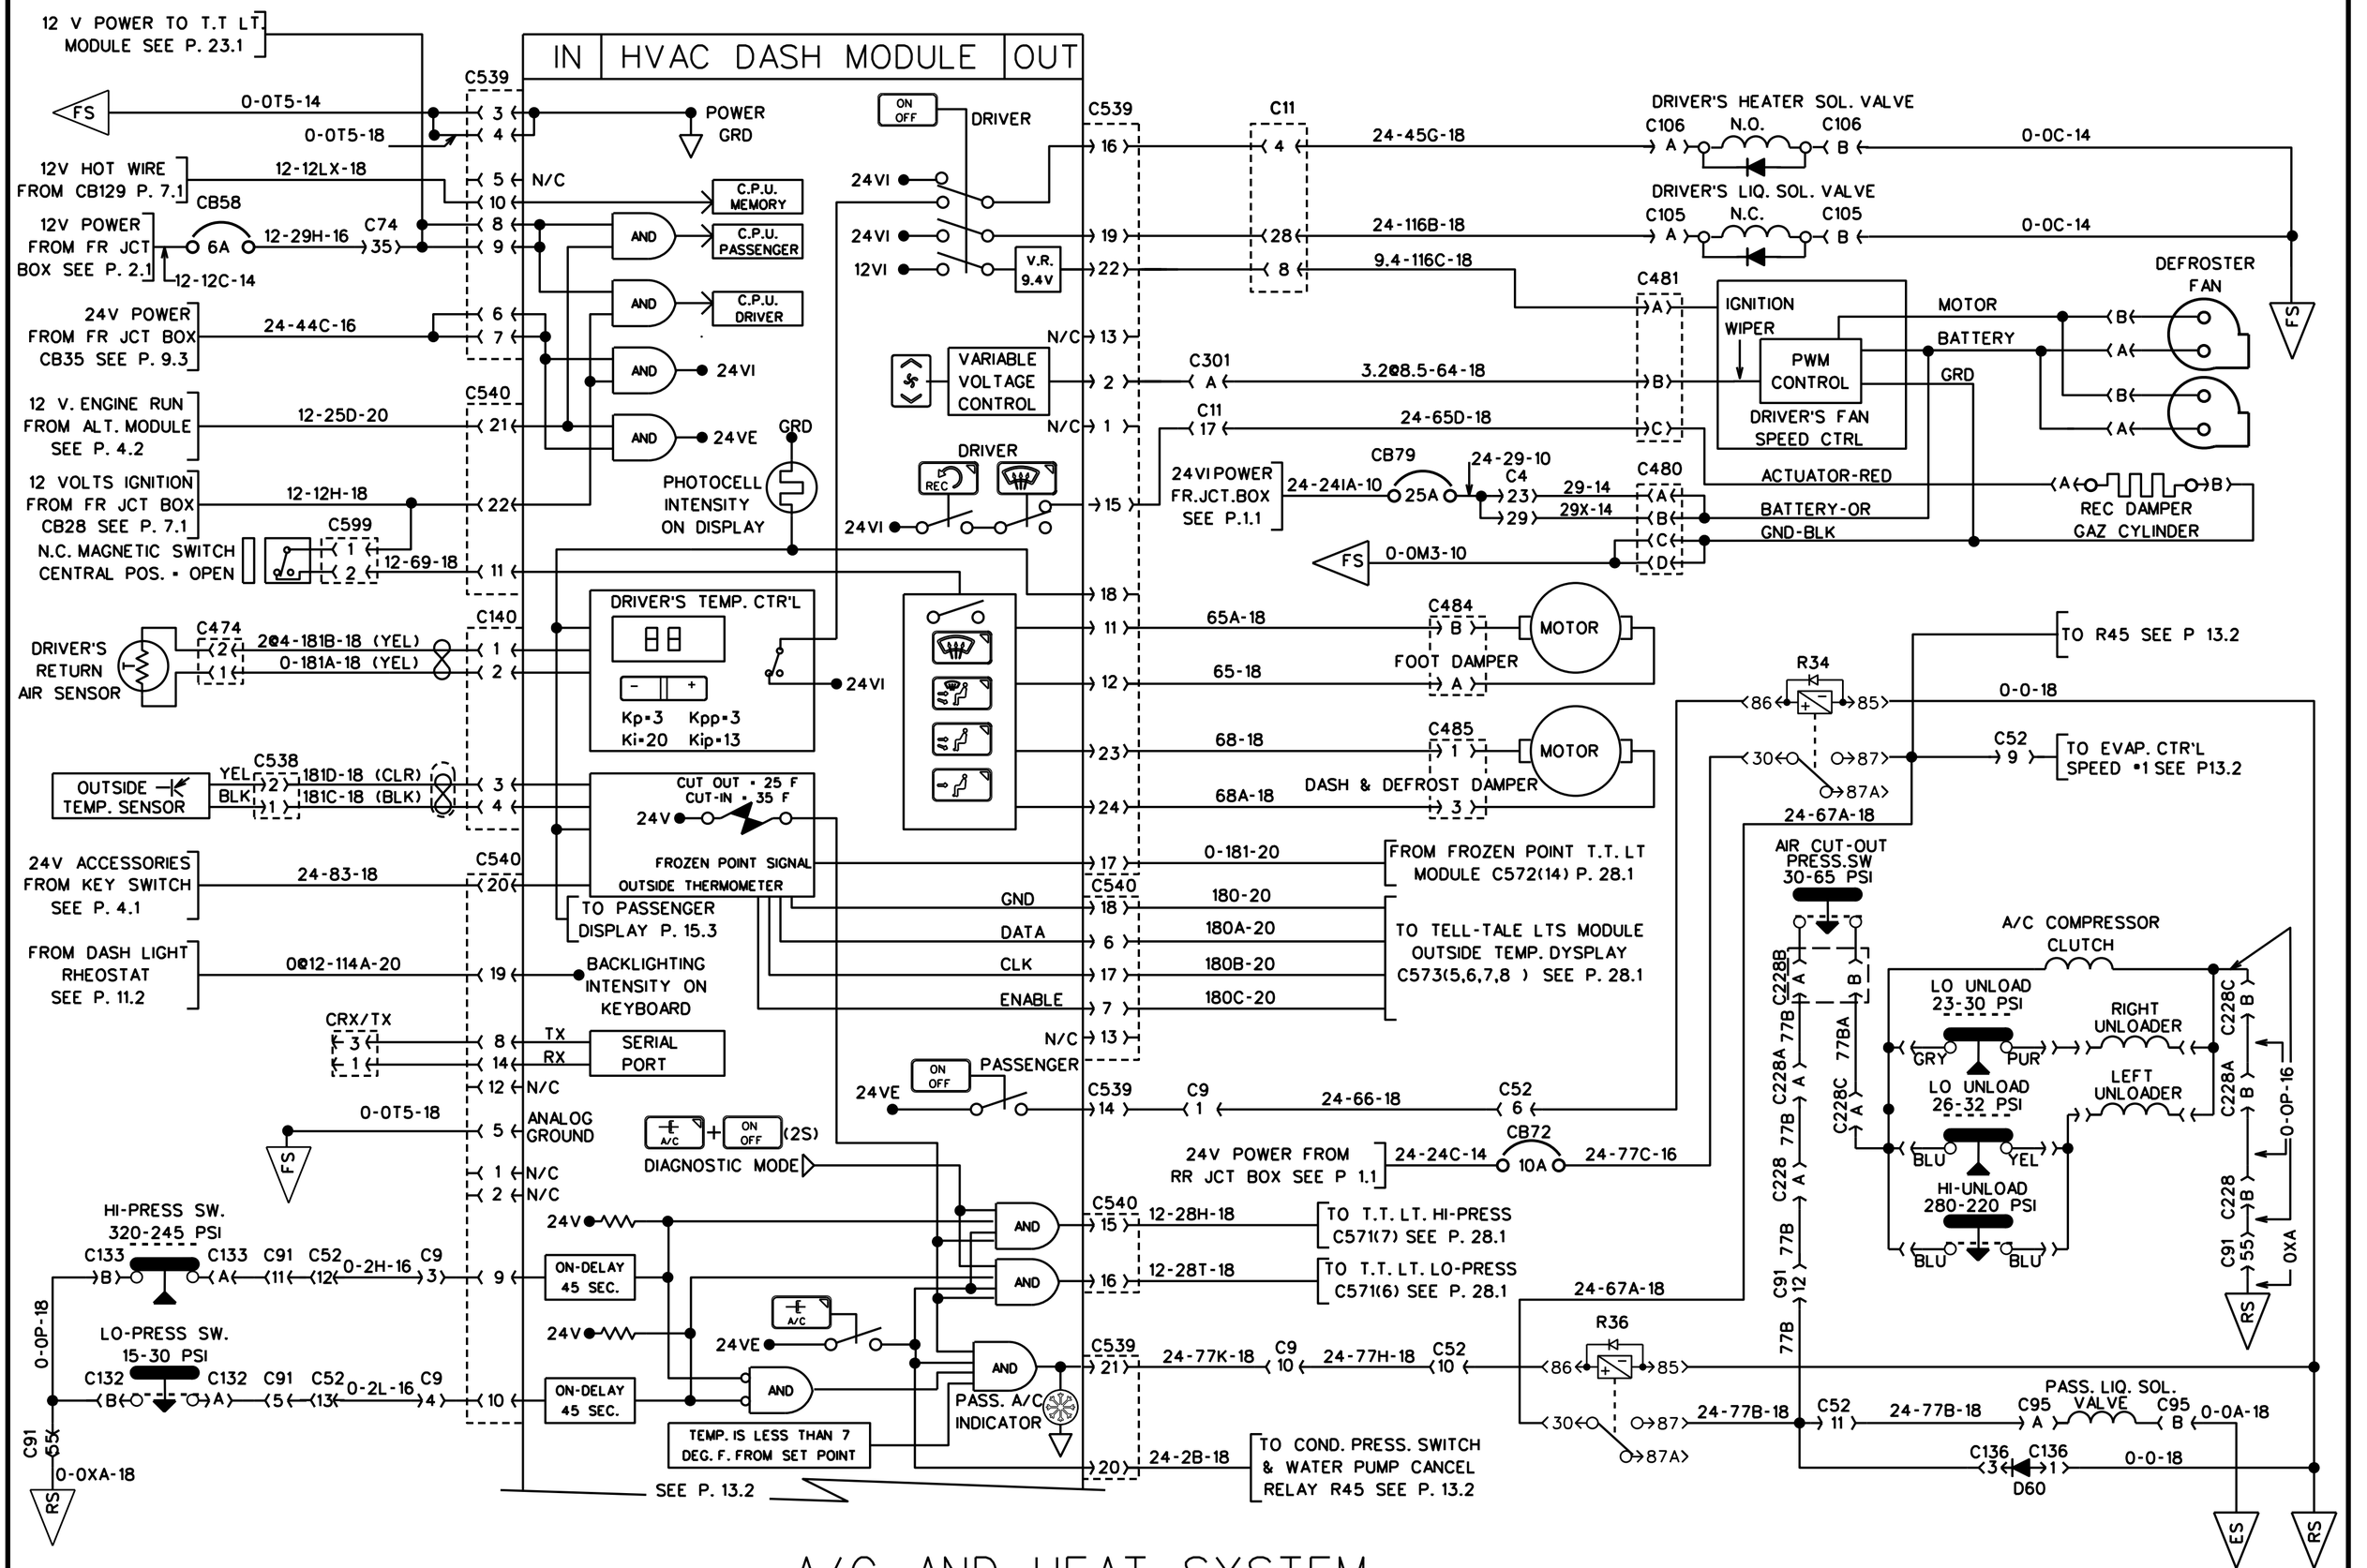

A/C AND HEAT SYSTEM

A/C AND HEAT SYSTEM

FAIT A PARTIR DE D060938 P15.2 REV 12

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 13.1 SP3	REVISION 00

IN | HVAC DASH MODULE | OUT

PASSENGER'S TEMP. CTR'L

Kp=3 Kpp=1
Ki=20 Kip=20

Kpp,Kip ENABLE

FROM PHOTOCELL P. 13.1

24V

PASS. HEATING INDICATOR

PASSENGER RETURN AIR SENSOR

C153 2 — 2@3-135A-18 — C9 17
C153 1 — 0-135B-18 — C9 16
C479 1, 2, 3

C540 3 — C9 15 — 24-57E-18 — C52 16

C540 4 — Kpp,Kip ENABLE

C9 2 — 24-45B-18 — C52 17

24-67A-18

R38
86 — 85 — 0-0-18
30 — 87
87A — C52 15 — 24-45D-18 — C155 1 — C155 2 — PASS. WATER VALVE (N.O.)
C155 A — C155 B — BYPASS VALVE (N.C.)
C156 — C156 — 0-0-18 — D1
TO TIME DELAY R63 SECOND SPEED EVAP. FAN SEE P 13.2

24-67A-18 — C136 D62 C136 — 4 — 6 — 24-45C-18 — 30 — 87
C136 D65 C136 — 7 — 9

FROM HVAC DASH MODULE C539 (20) SEE P. 13.1 — C9 21 — C52 14 — 24-2B-18 — 86 — 85 — 0-0-18 — RS

R45

FROM PRE-HEATER SIGNAL SEE P. 26.1 — 24-57C-18 — C134 D66 C134 — 10 — 12 — 24-45B-18

R35
86 — 85 — 0-0-18

FROM R34 SEE P.13 1 — 24-67A-18 — 30 — 87
87A — 24-45A-18 — C134 D84 C134 — 13 — 15

24-2B-18

24V HOT WIRE FROM RR JCT BOX SEE P. 1.1 — 24-24DA-14 — CB73 15A — 24-57A-14

30 — 87 — C52 18 — 24-57B-14 — C22 6 — C385 A — WATER PUMP — C385 B
87A

RS

FIRST SPEED PRESSURE 138-105

C158 A — C158 B — C52 23 — 24-67K-18 — C537 2 — C439 2 — 10Ω RS36 — C438 2 — 67Y — R39 — 0-0C-16 — EC

BAT

R41
24-67L-18 — 0-0C-16 — EC

COND. FAN MOTOR R.H.

24V POWER FROM 24 V CUT-OUT SWITCH SEE P 1.1 — 24-90B-10 — CB77 40A — 24-41-10 — BAT — 24-41A-10

24-41B-10 — BAT — 0-0D-10 — EC

24-67X-18

SECOND SPEED PRESSURE 195-150

24-67A-16 — C159 A — C159 B — C52 22 — 24-67L-18 — C537 1 — C439 1 — 5Ω RS37 — C438 1 — 67X — R40 — 0-0C-16 — EC

COND. FAN MOTOR L.H.

24V POWER FROM 24 V CUT-OUT SWITCH SEE P 1.1 — 24-90C-10 — CB78 40A — 24-42-10 — BAT — N.O. — 24-42A-10 — 0-0D-10 — EC
N.C.

24-41B-10

CONDENSER FAN (2 SPEED)

EVAP. FAN
A1 E1
A2 E2

24V POWER FROM CB8 SEE P.1.1 — 24-90H-1 — 24-130-2 — 24-130-2

R50 — 0-0C-16 — EC
EC — 0-0A-2

24V HVAC SW. FROM R34(87) SEE P. 13.1 — 24-67A-18 — C440 1

24-2F-18

87A — 24-2F-18 — C440 3
30 — 87

TIME DELAY R63

FROM R38 (87A) SEE P. 13.2 — 24-45D-18 — C440 2 — 24-2E-18 — RS19 330KΩ — 24-2EE-18 — 86 — 85 — R60 — 0-0C-16 — EC

NOTE:
A1 & E1 : (INTERNAL JUMPER)
E2 : 24 VOLTS = LOW SPEED
E2 : OPEN = HI SPEED

EVAPORATOR FAN (2 SPEED)

FROM CB28 SEE P 7.1 — 12-12H-18
24V POWER FROM FR. JCT BOX CB35 SEE P 9.3 — 24-44C-18
GAZ CYLINDER — C111 1 — C111 2 — 0-0A-18 — RS
FROM ENTRANCE DOOR OPEN SIGNAL SEE P 16.1 — C9 5
FROM DASH LTS RHEOSTAT SEE P 11.2 — 0Ø12-114A-20
24-12WBJ-18 — FS — OT1 — 24-12WB-18

C238 10 8 4 5B 6 1 2B 3 7 9

PASS. REC DAMPER SW

A/C AND HEAT SYSTEM

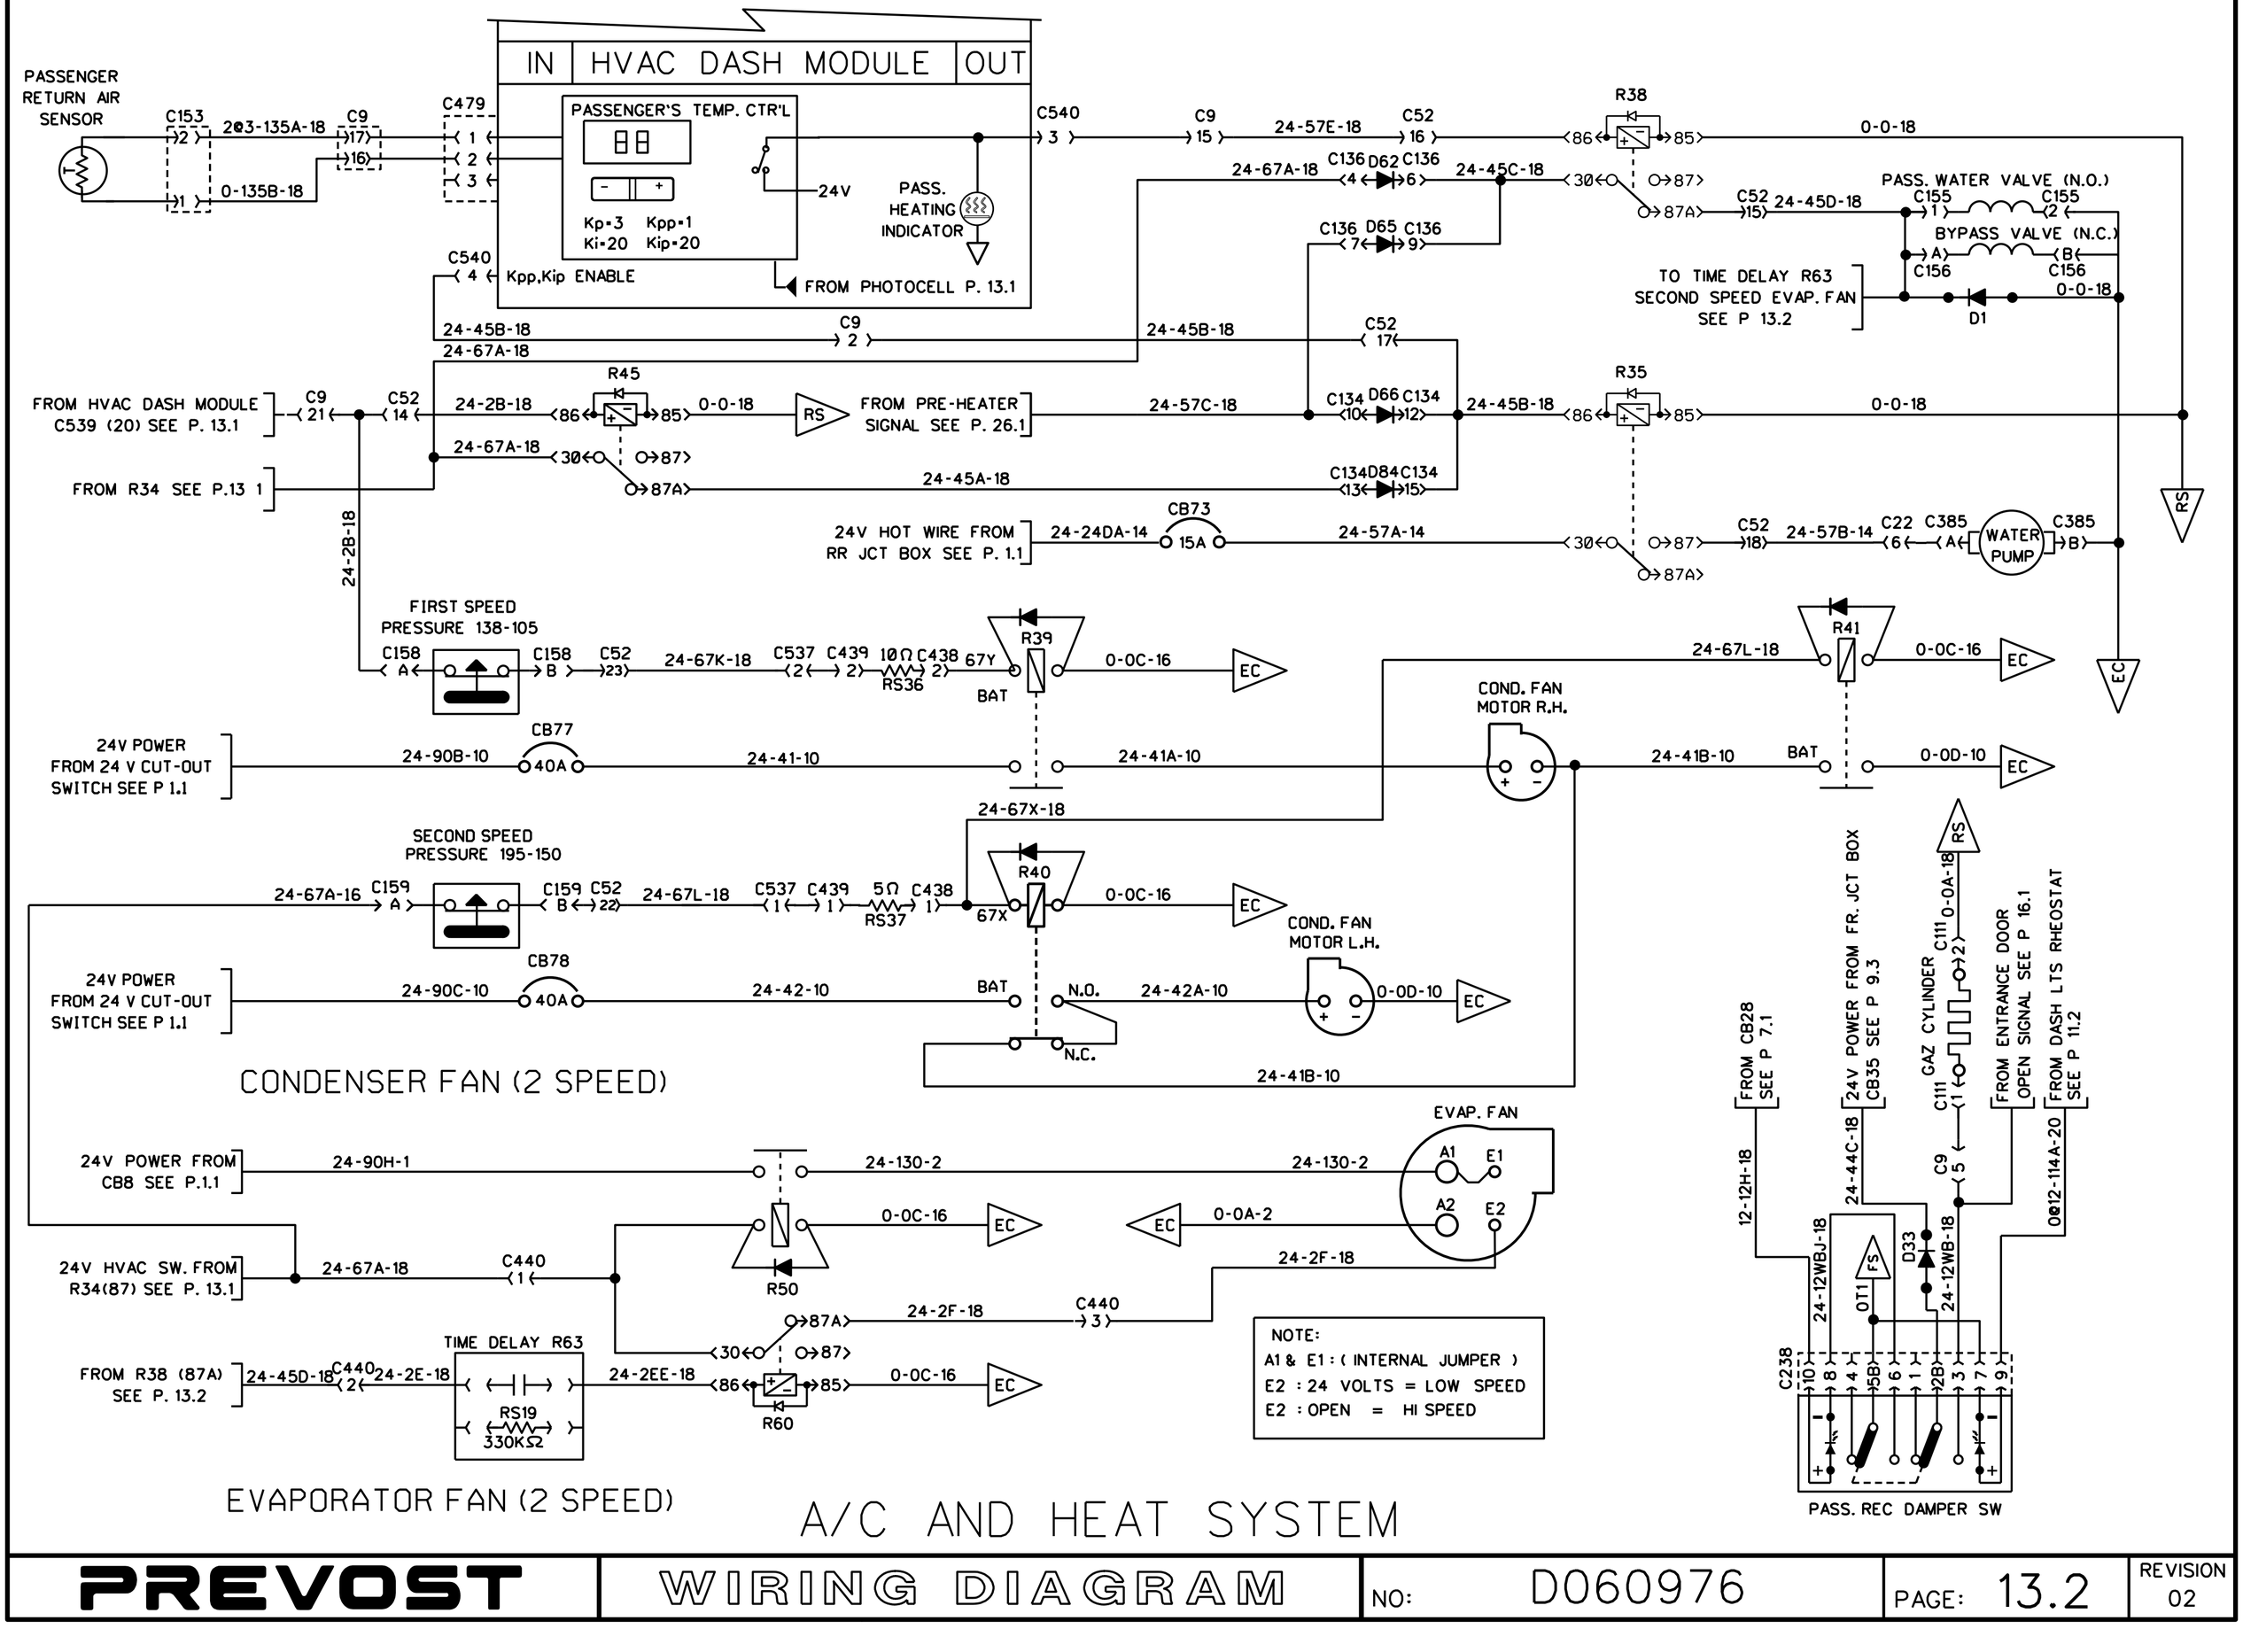

A/C AND HEAT SYSTEM

IN | HVAC DASH MODULE | OUT

PASSENGER'S TEMP. CTR'L

Kp=3 Kpp=1
Ki=20 Kip=20

Kpp,Kip ENABLE

FROM PHOTOCELL P. 13.1

PASSENGER RETURN AIR SENSOR

C153 2 — 2@3-135A-18 — C9 17 / 16 — C479 1 2 3

0-135B-18

C540 3

24V

PASS. HEATING INDICATOR

C540 4

C9 15 — 24-57E-18 — C52 16

R38 86 85

0-0-18

24-67A-18 — C136 D62 C136 4 6 — 24-45C-18 — 30 87 87A

C136 D65 C136 7 9

C52 15 — 24-45D-18 — C155 1 — C155 2 — PASS. WATER VALVE (N.O.)

BYPASS VALVE (N.C.) A B — C156 C156

TO TIME DELAY R63 SECOND SPEED EVAP. FAN SEE P 13.2

D1

0-0-18

24-45B-18

24-67A-18

C9 2

24-45B-18

C52 17

FROM HVAC DASH MODULE C539 (20) SEE P. 13.1

C9 21 — C52 14 — 24-2B-18 — R45 86 85 — 0-0-18 — RS

FROM PRE-HEATER SIGNAL SEE P. 26.1

24-57C-18

C134 D66 C134 10 12

24-45B-18 — R35 86 85 — 0-0-18

FROM R34 SEE P.13 1

24-67A-18 — 30 87 87A

24-45A-18

C134 D84 C134 13 15

24-2B-18

24V HOT WIRE FROM RR JCT BOX SEE P. 1.1

24-24DA-14 — CB73 15A — 24-57A-14

C52 18 — 24-57B-14 — C22 C385 6 A — WATER PUMP — C385 B

RS

FIRST SPEED PRESSURE 138-105

C158 A — C158 B — C52 23 — 24-67K-18 — C537 C439 2 2 — 10Ω RS36 — C438 2 — 67Y — BAT — R39 — 0-0C-16 — EC

24-67L-18 — R41 — 0-0C-16 — EC

EC

COND. FAN MOTOR R.H.

24V POWER FROM 24 V CUT-OUT SWITCH SEE P 1.1

CB77 40A

24-90B-10 — 24-41-10 — BAT — 24-41A-10

24-41B-10 — BAT — 0-0D-10 — EC

24-67X-18

SECOND SPEED PRESSURE 195-150

24-67A-16 — C159 A — C159 C52 B 22 — 24-67L-18 — C537 C439 1 1 — 5Ω RS37 — C438 1 — 67X — R40 — 0-0C-16 — EC

COND. FAN MOTOR L.H.

24V POWER FROM 24 V CUT-OUT SWITCH SEE P 1.1

CB78 40A

24-90C-10 — 24-42-10 — BAT — N.O. — 24-42A-10 — 0-0D-10 — EC

N.C.

24-41B-10

CONDENSER FAN (2 SPEED)

EVAP. FAN

24V POWER FROM CB8 SEE P.1.1

24-90H-1 — 24-130-2 — 24-130-2 — A1 E1 A2 E2

0-0C-16 — EC — R50

EC — 0-0A-2

24V HVAC SW. FROM R34(87) SEE P. 13.1

24-67A-18 — C440 1

24-2F-18

C440 3

87A — 24-2F-18

30 87

TIME DELAY R63

FROM R38 (87A) SEE P. 13.2

24-45D-18 — C440 2 — 24-2E-18 — RS19 330KΩ — 24-2EE-18 — 86 85 — R60 — 0-0C-16 — EC

NOTE:
A1 & E1 : (INTERNAL JUMPER)
E2 : 24 VOLTS = LOW SPEED
E2 : OPEN = HI SPEED

EVAPORATOR FAN (2 SPEED)

FROM CB28 SEE P 7.1 — 12-12H-18

24V POWER FROM FR. JCT BOX CB35 SEE P 9.3 — 24-44C-18

GAZ CYLINDER C111 1 — C111 2 — 0-0A-18 — RS

C9 5

FROM ENTRANCE DOOR OPEN SIGNAL SEE P 16.1

FROM DASH LTS RHEOSTAT SEE P 11.2 — 0@12-114A-20

24-12WBJ-18 — OT1 FS — D33 — 24-12WB-18

C238 10 8 4 5B 6 1 2B 3 7 9

PASS. REC DAMPER SW

A/C AND HEAT SYSTEM

A/C AND HEAT SYSTEM

IN | HVAC DASH MODULE | OUT

PASSENGER'S TEMP. CTR'L

Kp=3 Kpp=1
Ki=20 Kip=20

Kpp,Kip ENABLE

FROM PHOTOCELL P. 13.1

24V

PASS. HEATING INDICATOR

PASSENGER RETURN AIR SENSOR

C153 2 — 2@3-135A-18 — C9 17 — C479 1
C153 1 — 0-135B-18 — C9 16 — C479 2
C479 3

C540 3 — C9 15 — 24-57E-18 — C52 16

C540 4 — Kpp,Kip ENABLE

24-45B-18 — C9 2 — C52 17

24-67A-18

R38 86 — 85 — 0-0-18

24-67A-18 — C136 D62 C136 — 24-45C-18 — R38 30 — 87 / 87A

C136 D65 C136

C52 15 — 24-45D-18 — PASS. WATER VALVE (N.O.) C155 1 / C155 2

BYPASS VALVE (N.C.) A / B

TO TIME DELAY R63
SECOND SPEED EVAP. FAN
SEE P 13.2

C156 — D1 — C156 — 0-0-18

FROM HVAC DASH MODULE
C539 (20) SEE P. 13.1

C9 21 — C52 14 — 24-2B-18 — R45 86 — 85 — 0-0-18 — RS

FROM PRE-HEATER
SIGNAL SEE P. 26.1

24-57C-18 — C134 D66 C134 — 24-45B-18 — R35 86 — 85 — 0-0-18

24-67A-18 — R45 30 — 87 / 87A

FROM R34 SEE P.13 1

24-45A-18 — C134 D84 C134

24-2B-18

24V HOT WIRE FROM
RR JCT BOX SEE P. 1.1

24-24DA-14 — CB73 15A — 24-57A-14 — R35 30 — 87 / 87A

C52 18 — 24-57B-14 — C22 C385 6 / A — WATER PUMP — C385 B

RS

EC

FIRST SPEED
PRESSURE 138-105

C158 A — C158 B — C52 23 — C537 2 — C439 2 — 24-67K-18

10Ω C438 2 — RS36 — 67Y — R39 — 0-0C-16 — EC

BAT

NOTE:
A1 & RED : (EXTERNAL JUMPER)
WHITE : 24 VOLTS LOW SPEED
WHITE : OPEN HI SPEED

COND. FAN
MOTOR R.H.

24V POWER
FROM 24 V CUT-OUT
SWITCH SEE P 1.1

24-90B-10 — CB77 40A — 24-41-10 — 24-41A-10 — A1 RED / A2 WHITE — C401A 1

EC

CONDENSER FAN (2 SPEED)

24V POWER
FROM 24 V CUT-OUT
SWITCH SEE P 1.1

24-90C-10 — CB78 40A

5Ω C438 1 — RS37 — 67X — R40 — 0-0C-16 — EC

COND. FAN
MOTOR L.H.

SECOND SPEED
PRESSURE 195-150

24-67A-16 — C159 A — C159 B — C52 22 — C537 1 — C439 1 — 24-67L-18 — R108 86 — 85 — 30 — 87 / 87A

24-42-10 — BAT — N.O. — 24-42A-10 — A1 RED / A2 WHITE — C401B 1

N.C.

EC

24-24ND-18

EVAP. FAN

24V POWER FROM
CB8 SEE P.1.1

24-90H-1 — 24-130-2 — 24-130-2 — A1 RED / A2 WHITE

0-0C-16 — EC — R50

EC — 0-0A-2

24V HVAC SW. FROM
R34(87) SEE P. 13.1

24-67A-18 — C440 1

24-2F-18 — C543 1

24-2F-18 — C440 3 — 87A

TIME DELAY R63

FROM R38 (87A)
SEE P. 13.2

24-45D-18 — C440 2 — 24-2E-18 — RS19 330KΩ — 24-2EE-18 — 86 — 85 — 0-0C-16 — EC — R60

EVAPORATOR FAN (2 SPEED)

FROM CB28
SEE P 7.1

12-12H-18

24V POWER FROM FR. JCT BOX
CB35 SEE P 9.3

24-44C-18

GAZ CYLINDER C111 1 / C111 2 — 0-0A-18 — RS

C9 5

FROM ENTRANCE DOOR
OPEN SIGNAL SEE P 16.1

FROM DASH LTS RHEOSTAT
SEE P 11.2

0@12-114A-20

24-12WBJ-18 — FS — OT1 — D33 — 24-12WB-18

C238 10 / 8 / 4 / 5B / 6 / 1 / 2B / 3 / 7 / 9

PASS. REC DAMPER SW

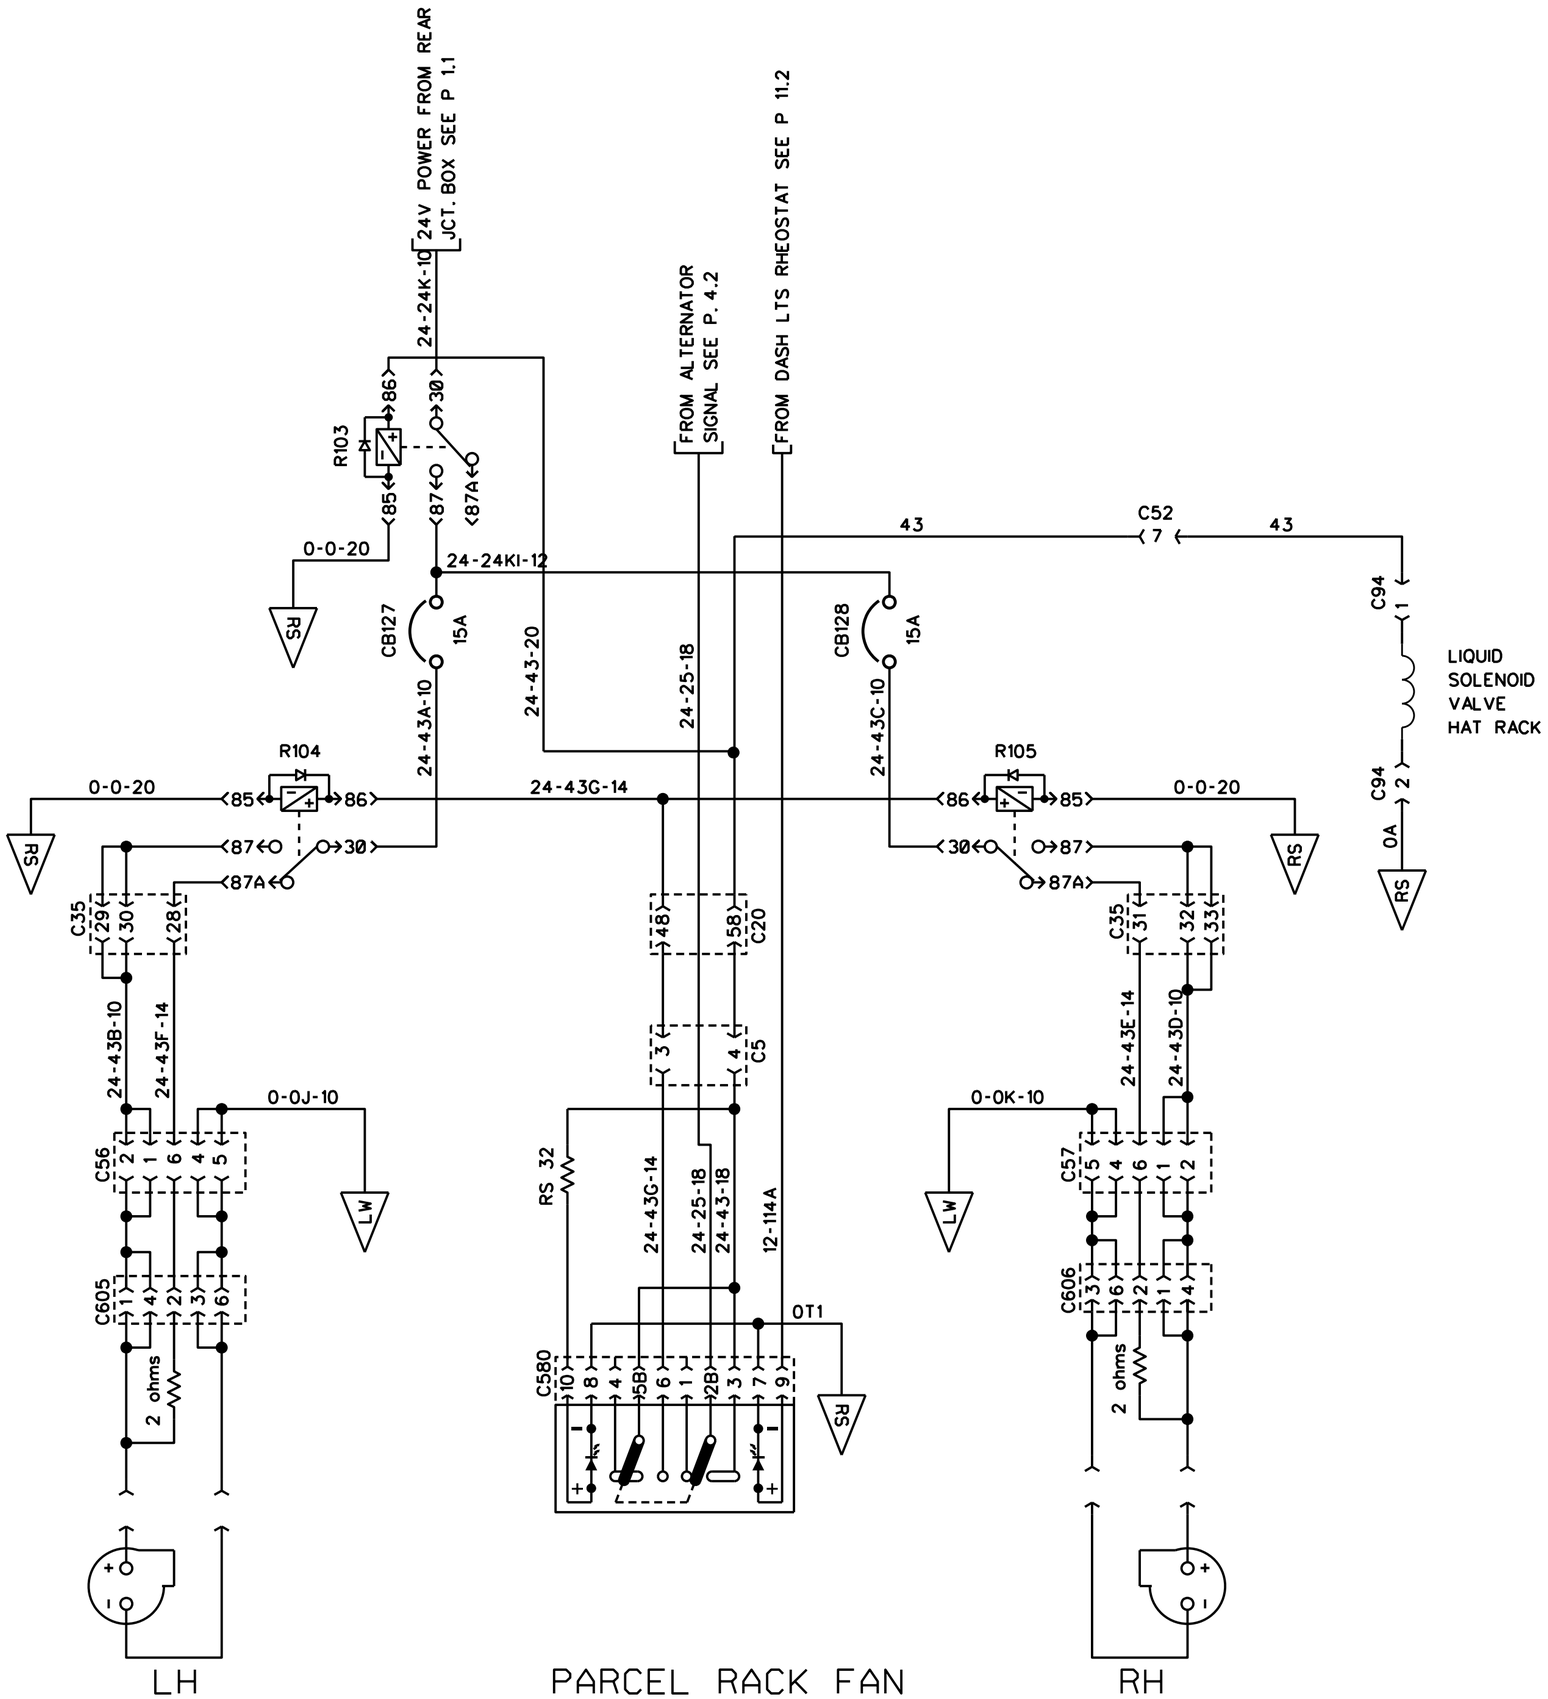
24V POWER FROM REAR JCT. BOX SEE P 1.1
24-24K-10
FROM ALTERNATOR SIGNAL SEE P. 4.2
FROM DASH LTS RHEOSTAT SEE P 11.2
R103
86
30
85
87
87A
0-0-20
RS
24-24KI-12
CB127
15A
CB128
15A
24-43-20
24-25-18
24-43A-10
24-43C-10
43
C52
7
C94
1
LIQUID SOLENOID VALVE HAT RACK
R104
R105
24-43G-14
C94
2
0A
C35
29
30
28
48
58
C20
3
4
C5
24-43B-10
24-43F-14
24-43E-14
24-43D-10
0-0J-10
0-0K-10
C56
2
1
6
4
5
LW
C605
1
4
2
3
6
2 ohms
RS 32
24-43G-14
24-25-18
24-43-18
12-114A
0T1
C580
10
8
4
5B
6
1
2B
3
7
9
C57
5
4
6
1
2
C606
3
6
2
1
4
LH
PARCEL RACK FAN
RH

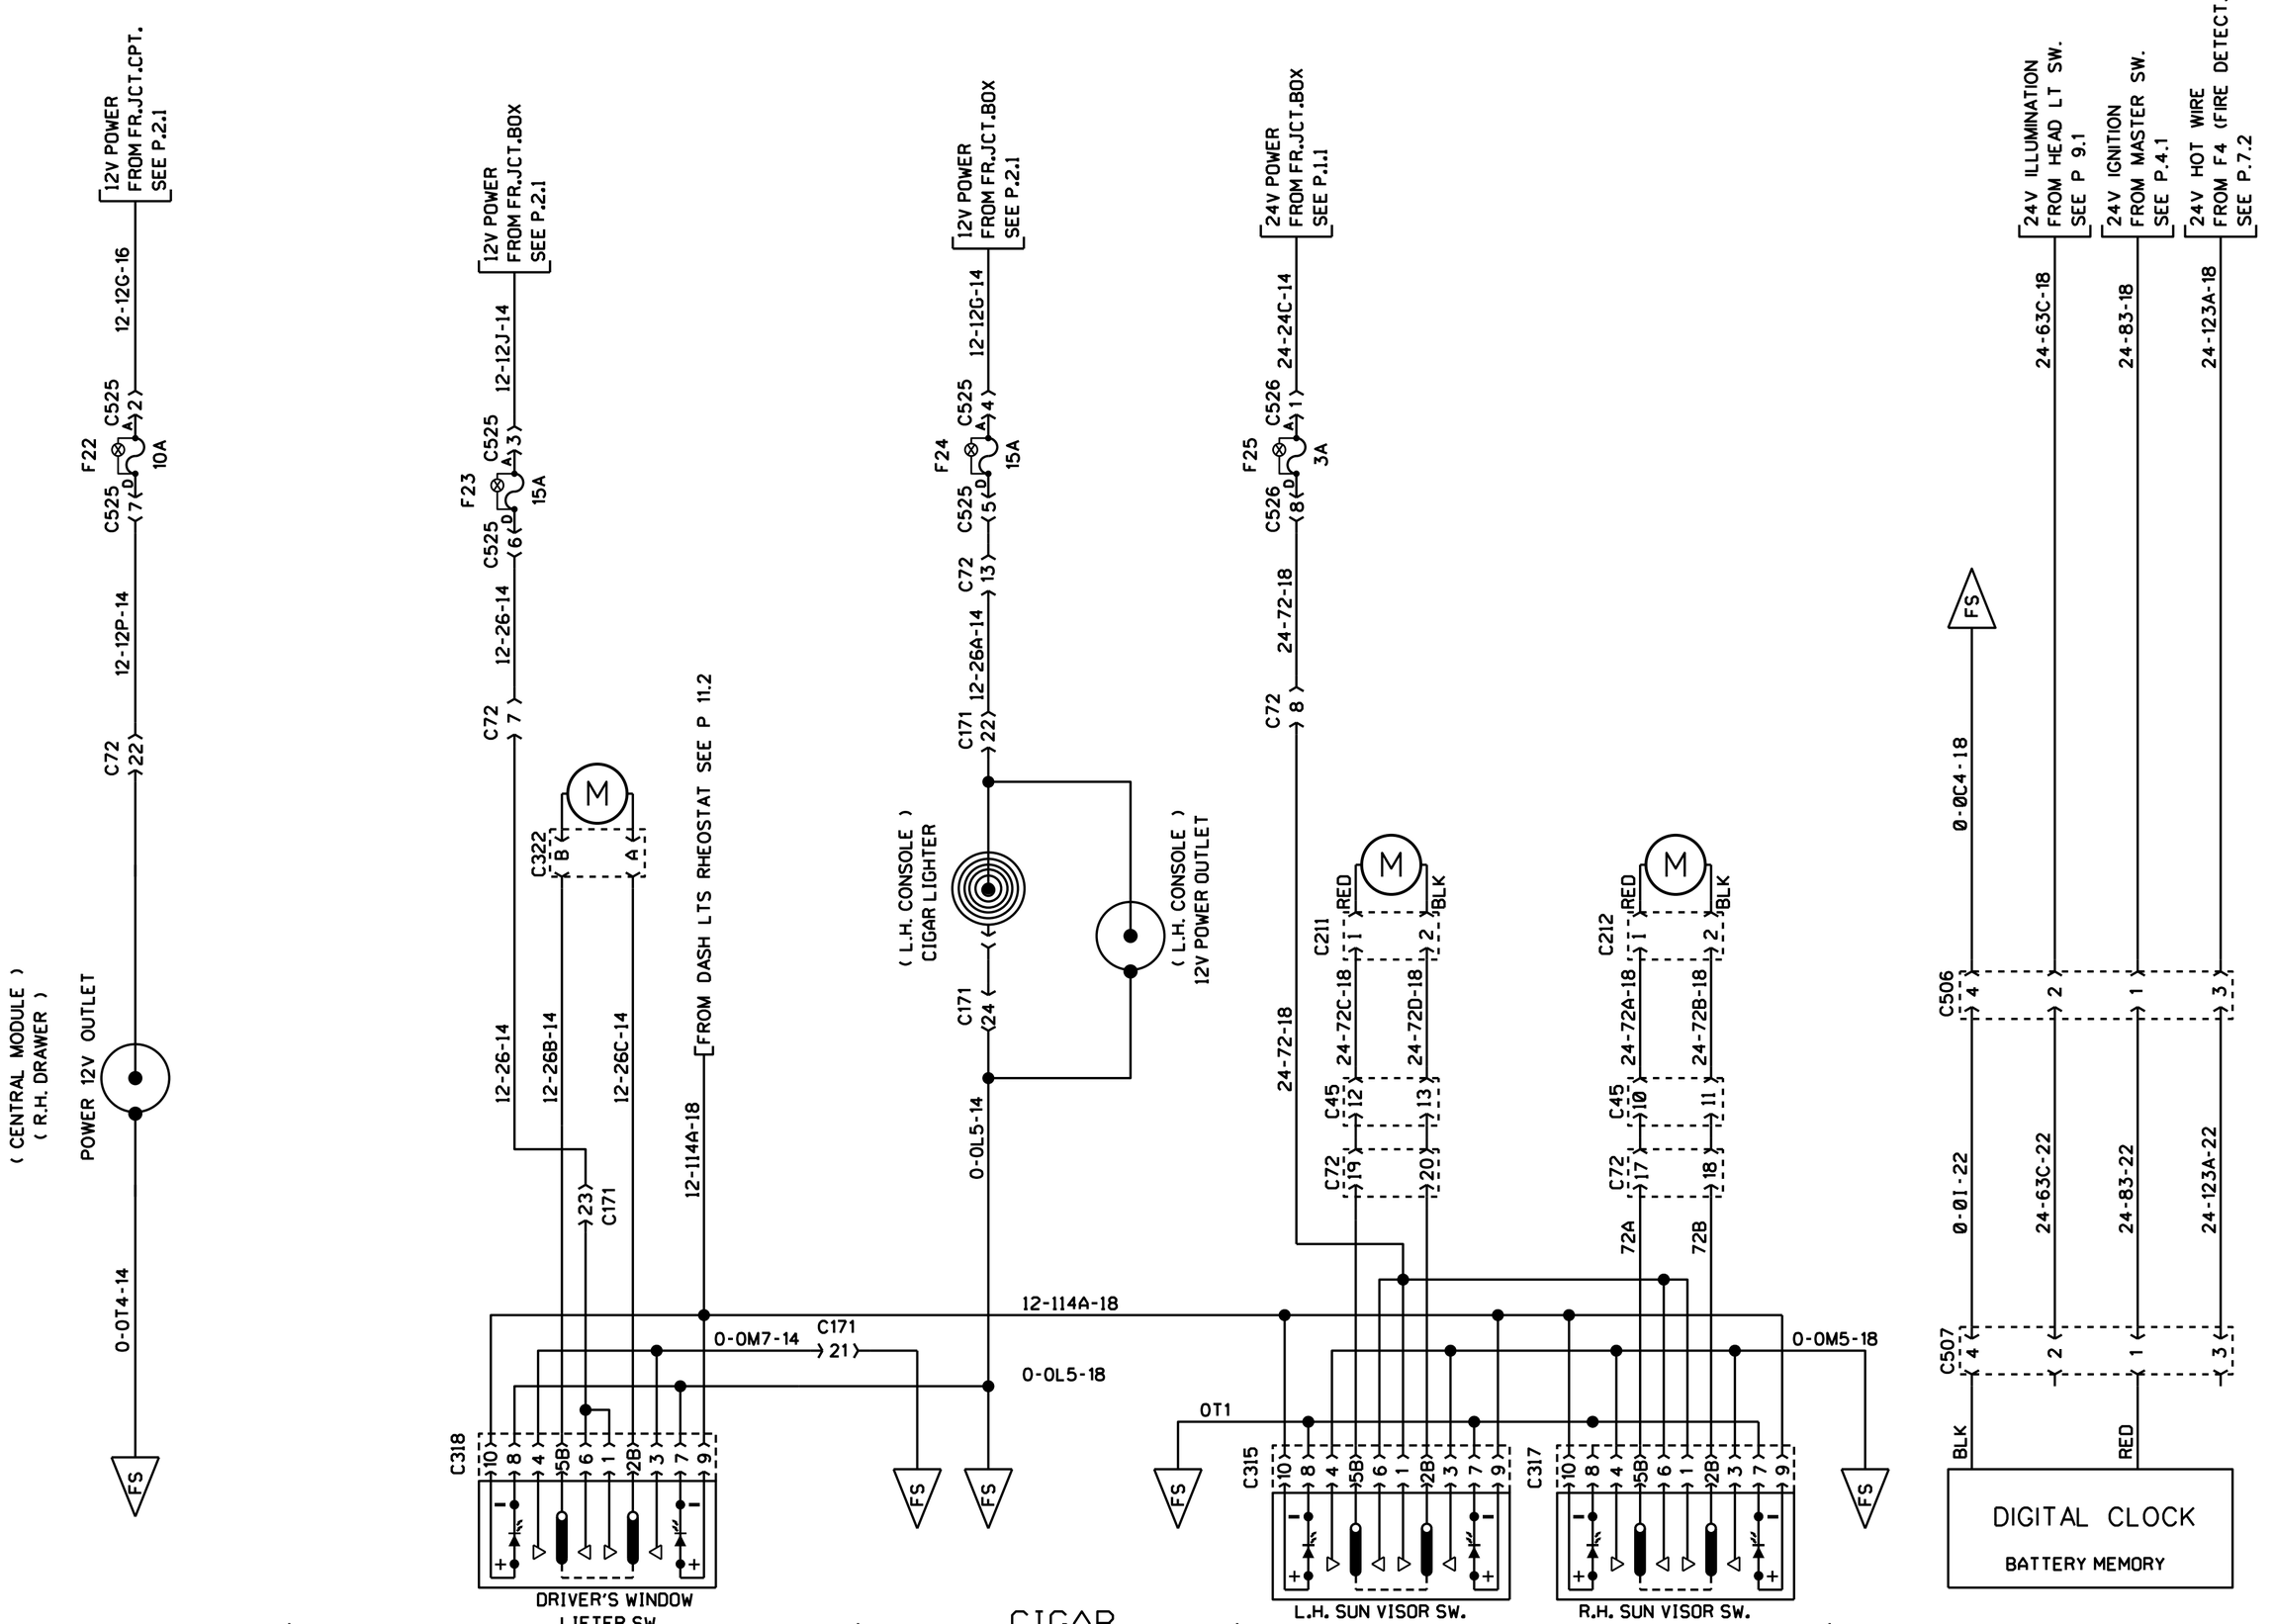

POWER 12V OUTLET | DRIVER'S WINDOW LIFTER | CIGAR LIGHTER | SUN VISOR | DIGITAL CLOCK

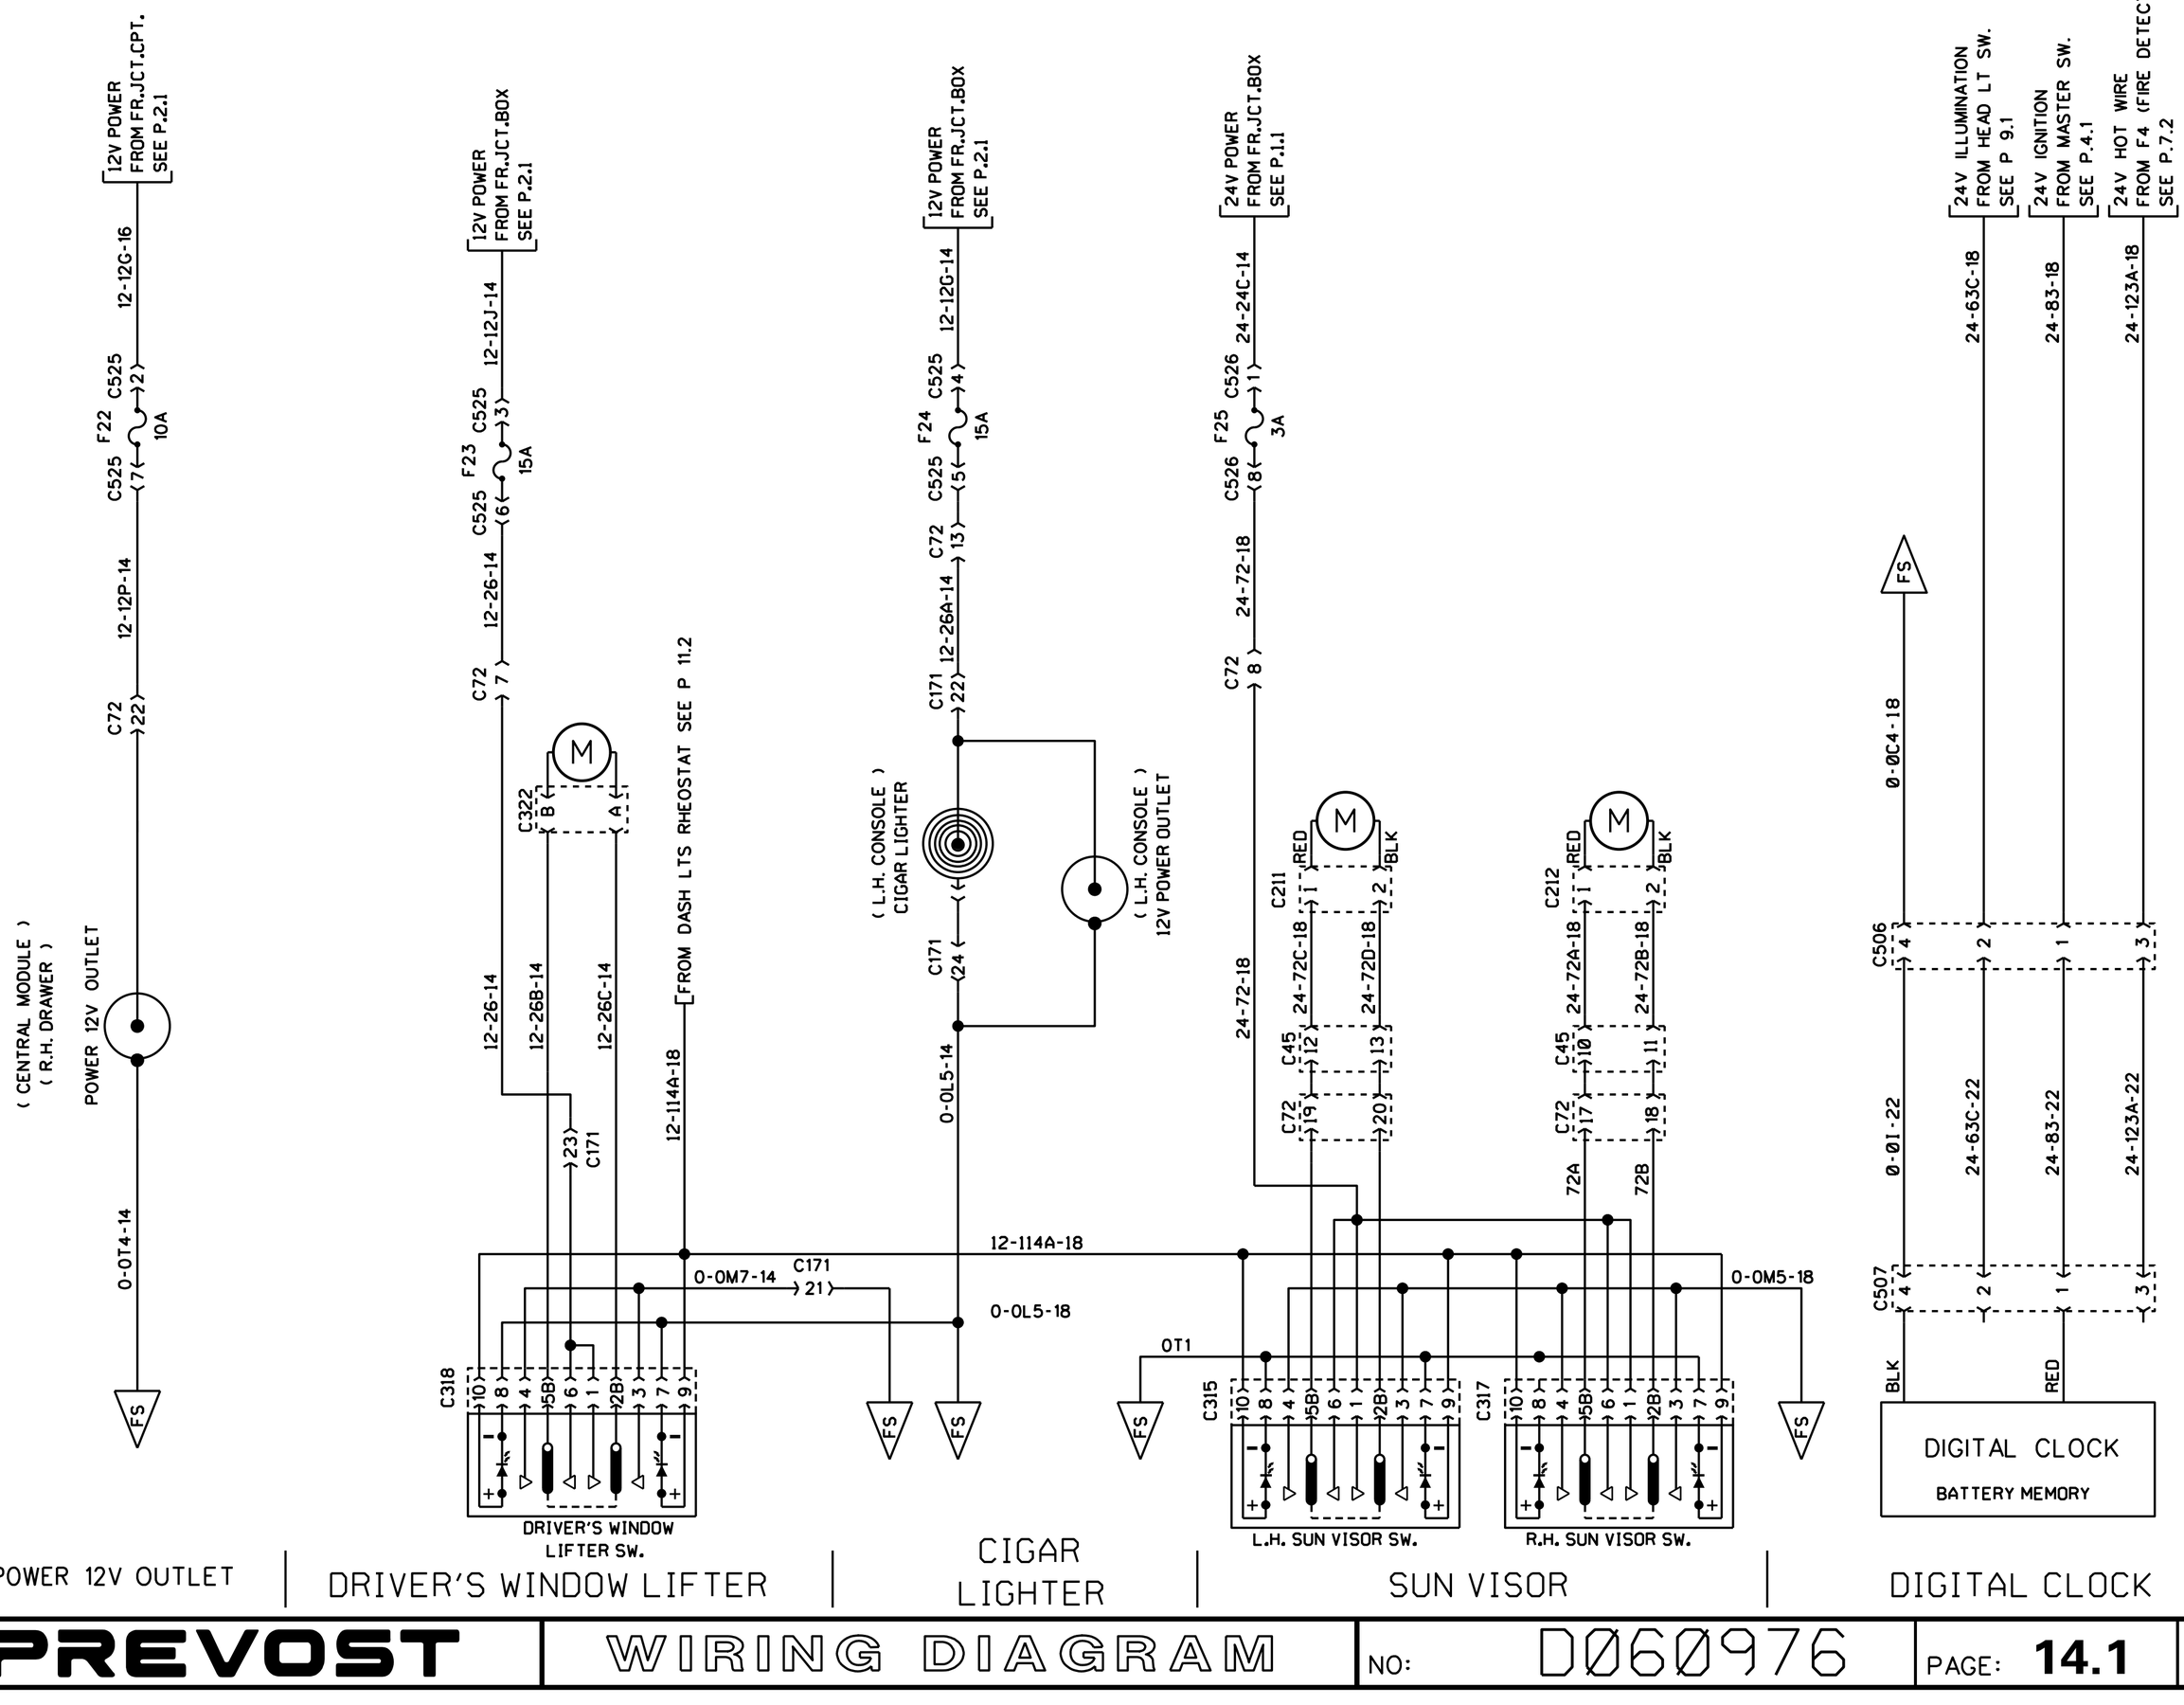

POWER 12V OUTLET | DRIVER'S WINDOW LIFTER | CIGAR LIGHTER | SUN VISOR | DIGITAL CLOCK

POWER 12V OUTLET | DRIVER'S WINDOW LIFTER | CIGAR LIGHTER | SUN VISOR | DIGITAL CLOCK

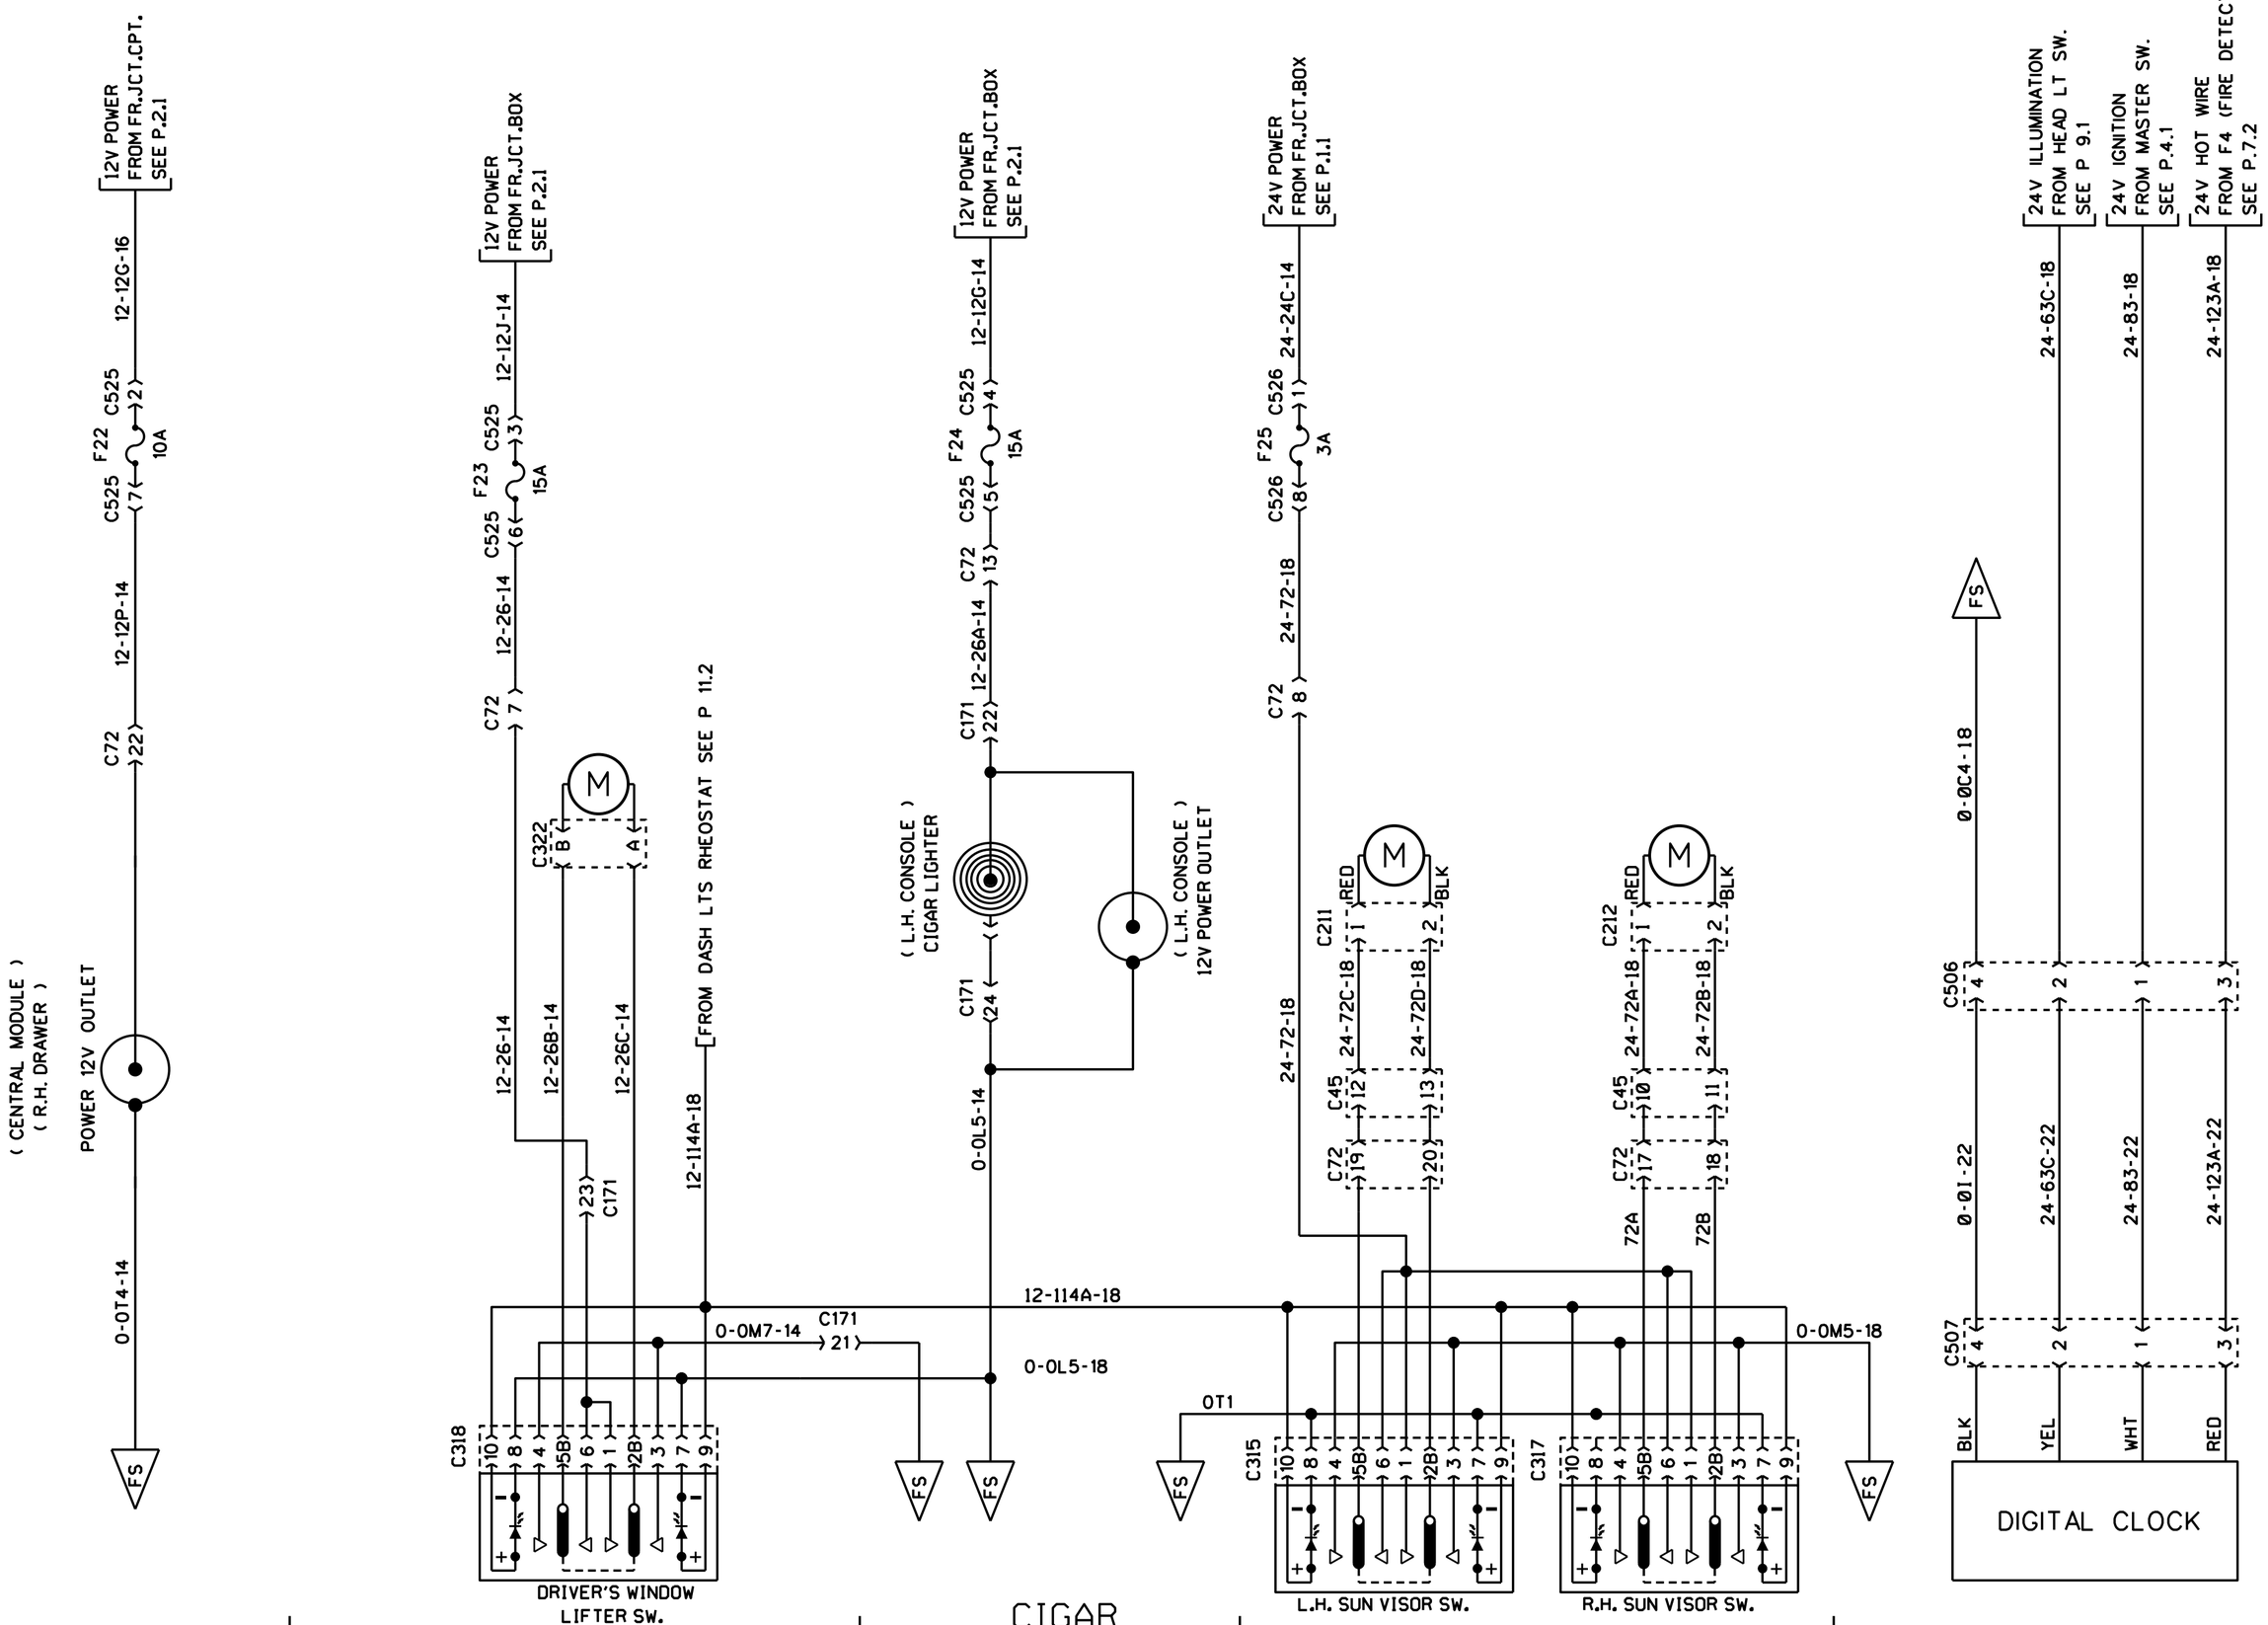

POWER 12V OUTLET | DRIVER'S WINDOW LIFTER | CIGAR LIGHTER | SUN VISOR | DIGITAL CLOCK

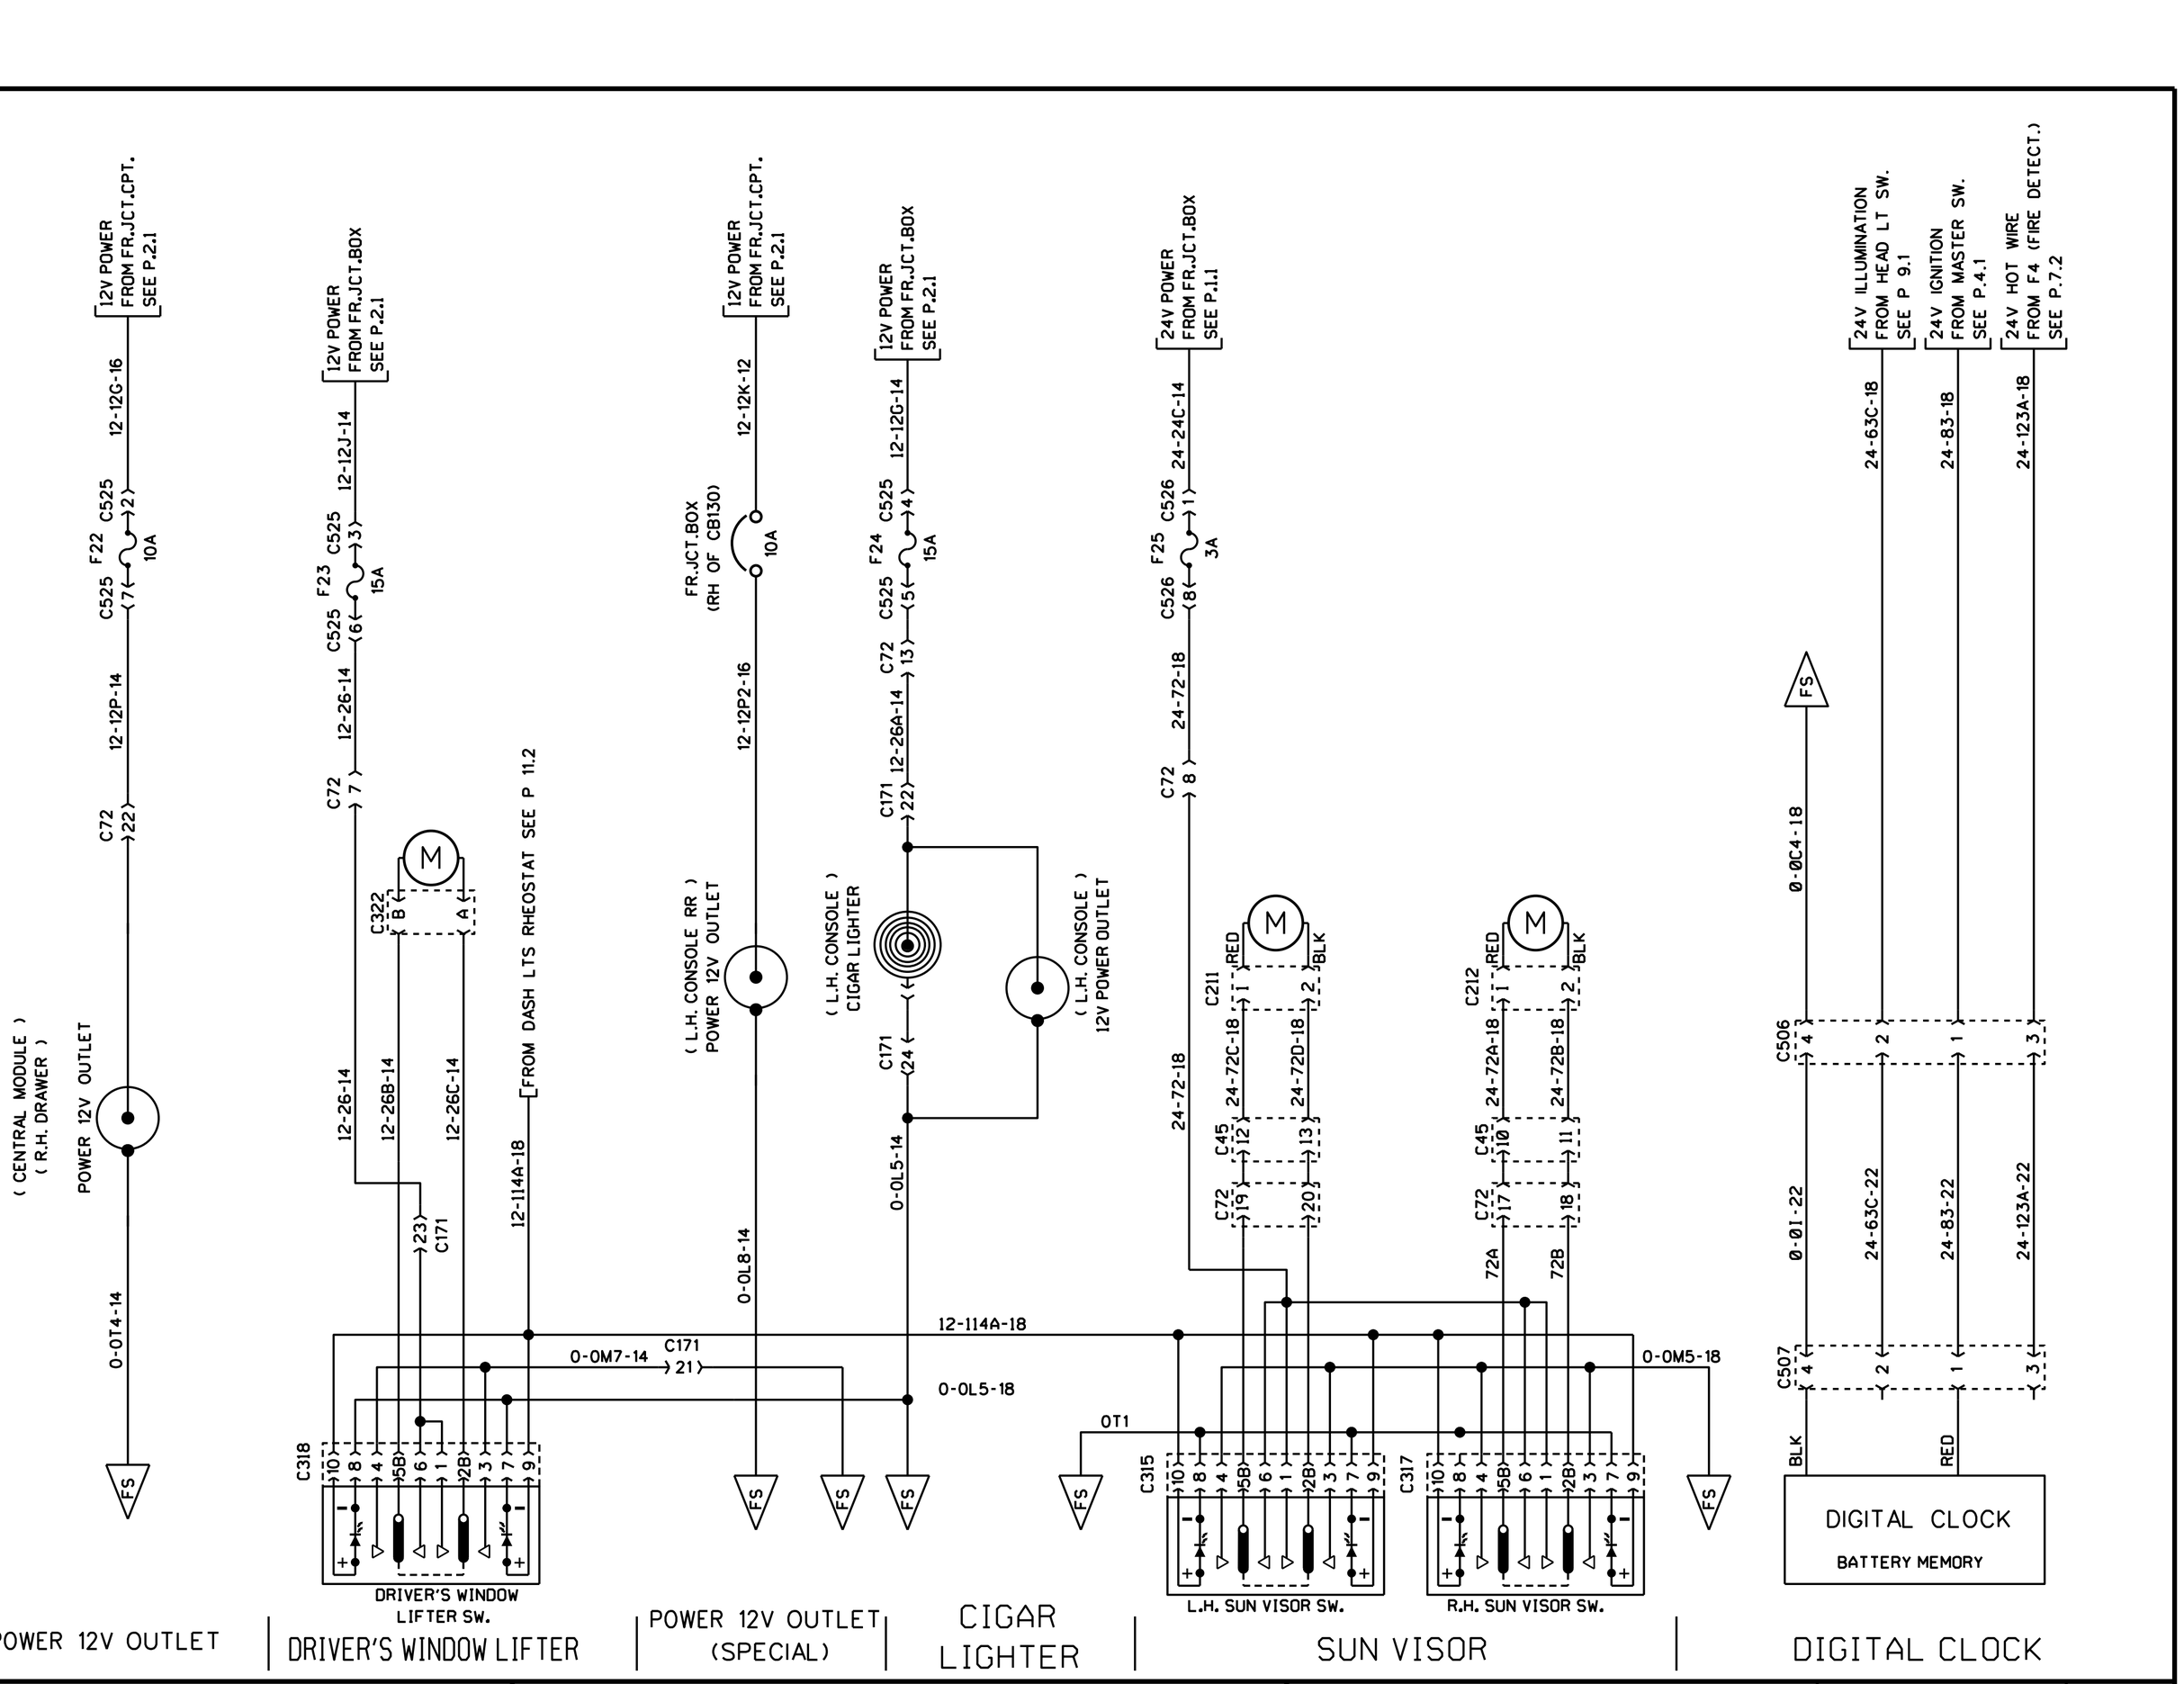
(CENTRAL MODULE)
(R.H. DRAWER)
POWER 12V OUTLET
C72
22
12-12P-14
C525
7
F22
10A
C525
2
12-12G-16
12V POWER
FROM FR.JCT.CPT.
SEE P.2.1
0-0T4-14
FS
C72
7
12-26-14
C525
6
F23
15A
C525
3
12-12J-14
12V POWER
FROM FR.JCT.BOX
SEE P.2.1
M
C322
B
A
12-26-14
12-26B-14
12-26C-14
23
C171
12-114A-18
FROM DASH LTS RHEOSTAT SEE P 11.2
C318
10
8
4
5B
6
1
2B
3
7
9
DRIVER'S WINDOW
LIFTER SW.
FR.JCT.BOX
(RH OF CB130)
12-12P2-16
10A
12-12K-12
12V POWER
FROM FR.JCT.CPT.
SEE P.2.1
(L.H. CONSOLE RR)
POWER 12V OUTLET
0-0L8-14
C72
13
12-26A-14
C171
22
C525
5
F24
15A
C525
4
12-12G-14
12V POWER
FROM FR.JCT.BOX
SEE P.2.1
(L.H. CONSOLE)
CIGAR LIGHTER
C171
24
0-0L5-14
(L.H. CONSOLE)
12V POWER OUTLET
C72
8
24-72-18
C526
8
F25
3A
C526
1
24-24C-14
24V POWER
FROM FR.JCT.BOX
SEE P.1.1
24-72-18
C211
RED
BLK
1
2
24-72C-18
24-72D-18
C45
12
13
C72
19
20
M
C212
RED
BLK
1
2
24-72A-18
24-72B-18
C45
10
11
C72
17
18
72A
72B
12-114A-18
0-0M7-14
C171
21
0-0M5-18
0-0L5-18
0T1
C315
10
8
4
5B
6
1
2B
3
7
9
L.H. SUN VISOR SW.
C317
10
8
4
5B
6
1
2B
3
7
9
R.H. SUN VISOR SW.
FS
24V ILLUMINATION
FROM HEAD LT SW.
SEE P 9.1
24-63C-18
24V IGNITION
FROM MASTER SW.
SEE P.4.1
24-83-18
24V HOT WIRE
FROM F4 (FIRE DETECT.)
SEE P.7.2
24-123A-18
0-0C4-18
C506
4
2
1
3
0-01-22
24-63C-22
24-83-22
24-123A-22
C507
4
2
1
3
BLK
RED
DIGITAL CLOCK
BATTERY MEMORY
POWER 12V OUTLET
DRIVER'S WINDOW LIFTER
POWER 12V OUTLET
(SPECIAL)
CIGAR
LIGHTER
SUN VISOR
DIGITAL CLOCK

(CENTRAL MODULE)
(R.H. DRAWER)

POWER 12V OUTLET

0-0T4-14

FS

C72 22 → 12-12P-14 → C525 7 → F22 10A C525 2 → 12-12G-16 → 12V POWER FROM FR.JCT.CPT. SEE P.2.1

C72 7 → 12-26-14 → C525 6 → F23 15A C525 3 → 12-12J-14 → 12V POWER FROM FR.JCT.BOX SEE P.2.1

FROM DASH LTS RHEOSTAT SEE P 11.2

C322 B / A

12-26-14
12-26B-14
12-26C-14
12-114A-18
23 C171

C318
10 8 4 5B 6 1 2B 3 7 9

DRIVER'S WINDOW LIFTER SW.

(L.H. CONSOLE RR)
POWER 12V OUTLET

0-0L8-14

FR.JCT.BOX (RH OF CB130) 10A

12-12P2-16 → 12-12K-12 → 12V POWER FROM FR.JCT.CPT. SEE P.2.1

(L.H. CONSOLE)
CIGAR LIGHTER

C171 24

0-0L5-14

C171 22 → 12-26A-14 → C72 13 → C525 5 → F24 15A C525 4 → 12-12G-14 → 12V POWER FROM FR.JCT.BOX SEE P.2.1

(L.H. CONSOLE)
12V POWER OUTLET

C72 8 → 24-72-18 → C526 8 → F25 3A C526 1 → 24-24C-14 → 24V POWER FROM FR.JCT.BOX SEE P.1.1

24-72-18

C211
1 RED
2 BLK
12 24-72C-18
13 24-72D-18
C45
C72 19 20

C212
1 RED
2 BLK
10 24-72A-18
11 24-72B-18
C45
C72 17 18

72A
72B

12-114A-18

0-0M7-14 C171 21

0-0L5-18

0-0M5-18

0T1

C315
10 8 4 5B 6 1 2B 3 7 9

L.H. SUN VISOR SW.

C317
10 8 4 5B 6 1 2B 3 7 9

R.H. SUN VISOR SW.

FS

FS

FS

FS

FS

FS

FS

FS

FS

0-0C4-18

24-63C-18

24-83-18

24-123A-18

24V ILLUMINATION FROM HEAD LT SW. SEE P 9.1

24V IGNITION FROM MASTER SW. SEE P. 4.1

24V HOT WIRE FROM F4 (FIRE DETECT.) SEE P.7.2

C506
4 2 1 3

0-01-22
24-63C-22
24-83-22
24-123A-22

C507
4 2 1 3

BLK WHT YEL RED

DIGITAL CLOCK

POWER 12V OUTLET

DRIVER'S WINDOW LIFTER

POWER 12V OUTLET (SPECIAL)

CIGAR LIGHTER

SUN VISOR

DIGITAL CLOCK

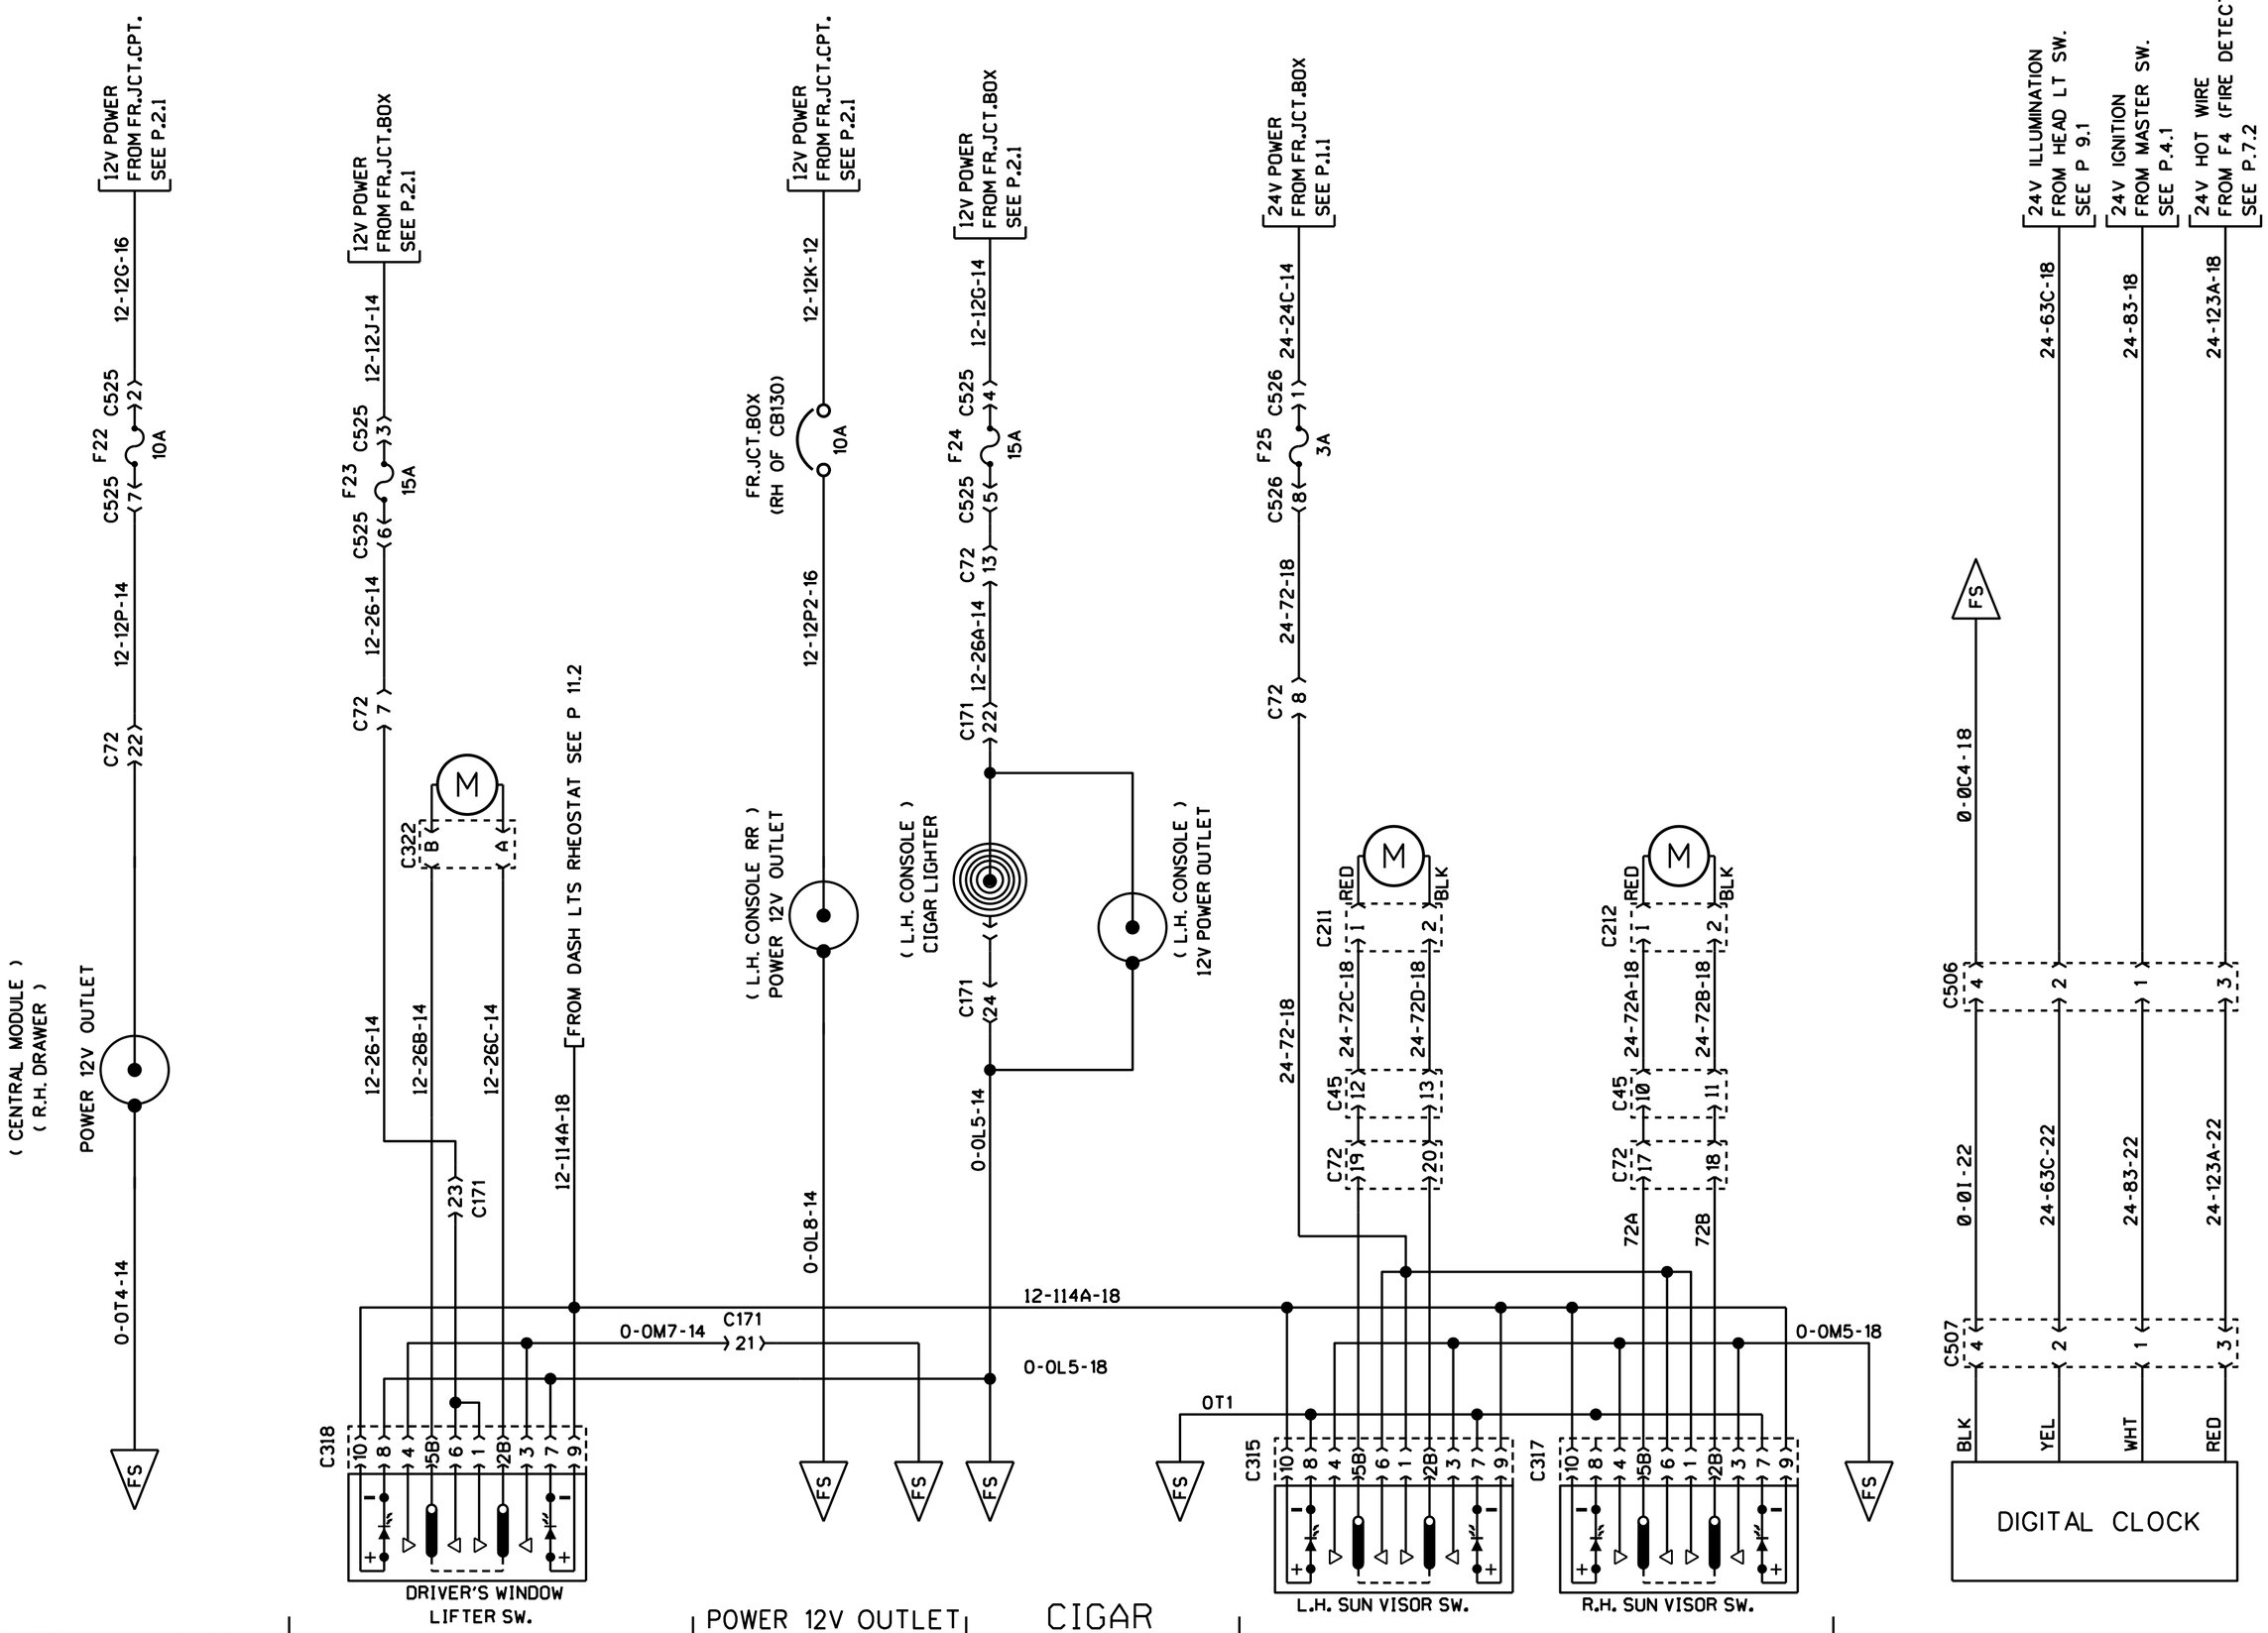

POWER 12V OUTLET | DRIVER'S WINDOW LIFTER | POWER 12V OUTLET (SPECIAL) | CIGAR LIGHTER | SUN VISOR | DIGITAL CLOCK

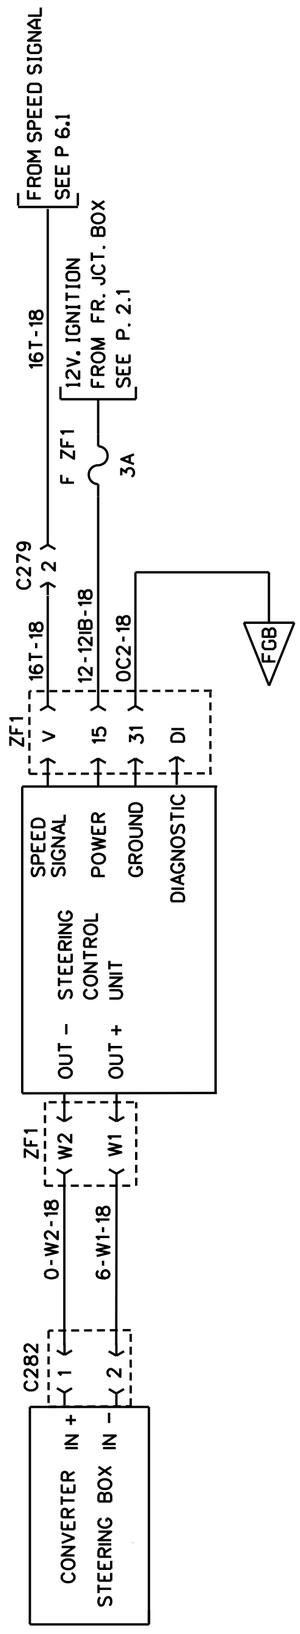

STEERING CONTOL ZF

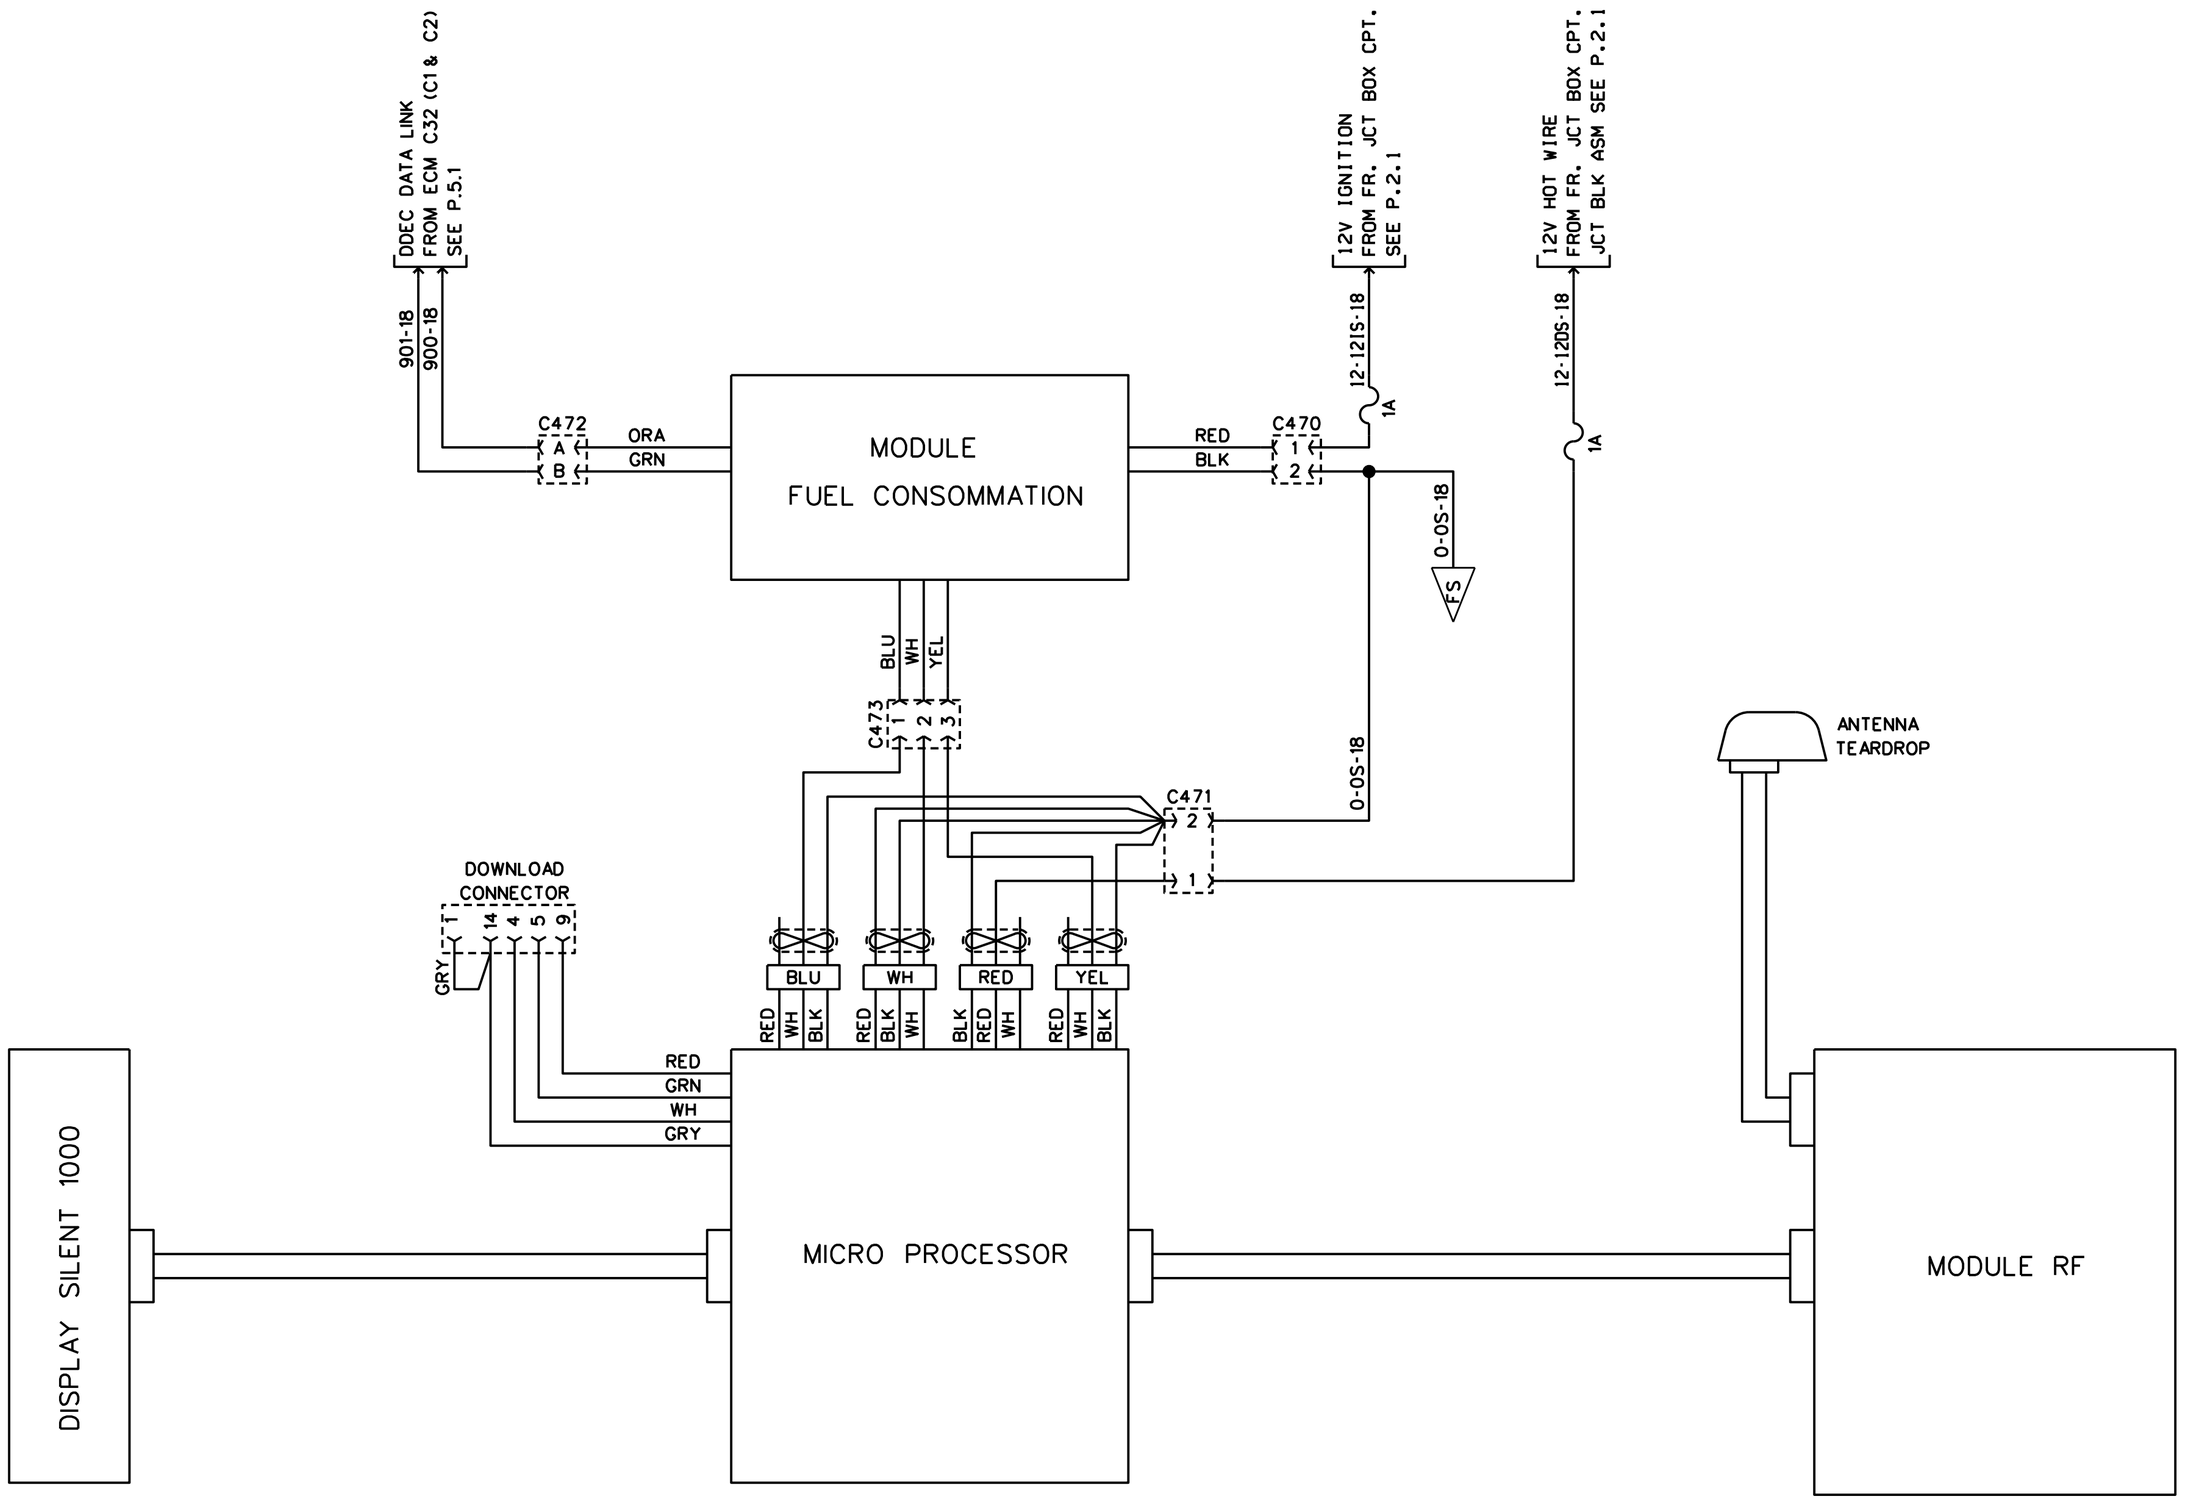
DDEC DATA LINK
FROM ECM C32 (C1 & C2)
SEE P.5.1
12V IGNITION
FROM FR. JCT BOX CPT.
SEE P.2.1
12V HOT WIRE
FROM FR. JCT BOX CPT.
JCT BLK ASM SEE P.2.1
901-18
900-18
12-12IS-18
12-12OS-18
1A
C472
A
B
ORA
GRN
MODULE
FUEL CONSOMMATION
RED
BLK
C470
1
2
0-0S-18
FS
BLU
WH
YEL
C473
C471
DOWNLOAD
CONNECTOR
GRY
T
14
4
5
9
RED
WH
BLK
GRN
DISPLAY SILENT 1000
MICRO PROCESSOR
MODULE RF
ANTENNA
TEARDROP

SILENT 1000

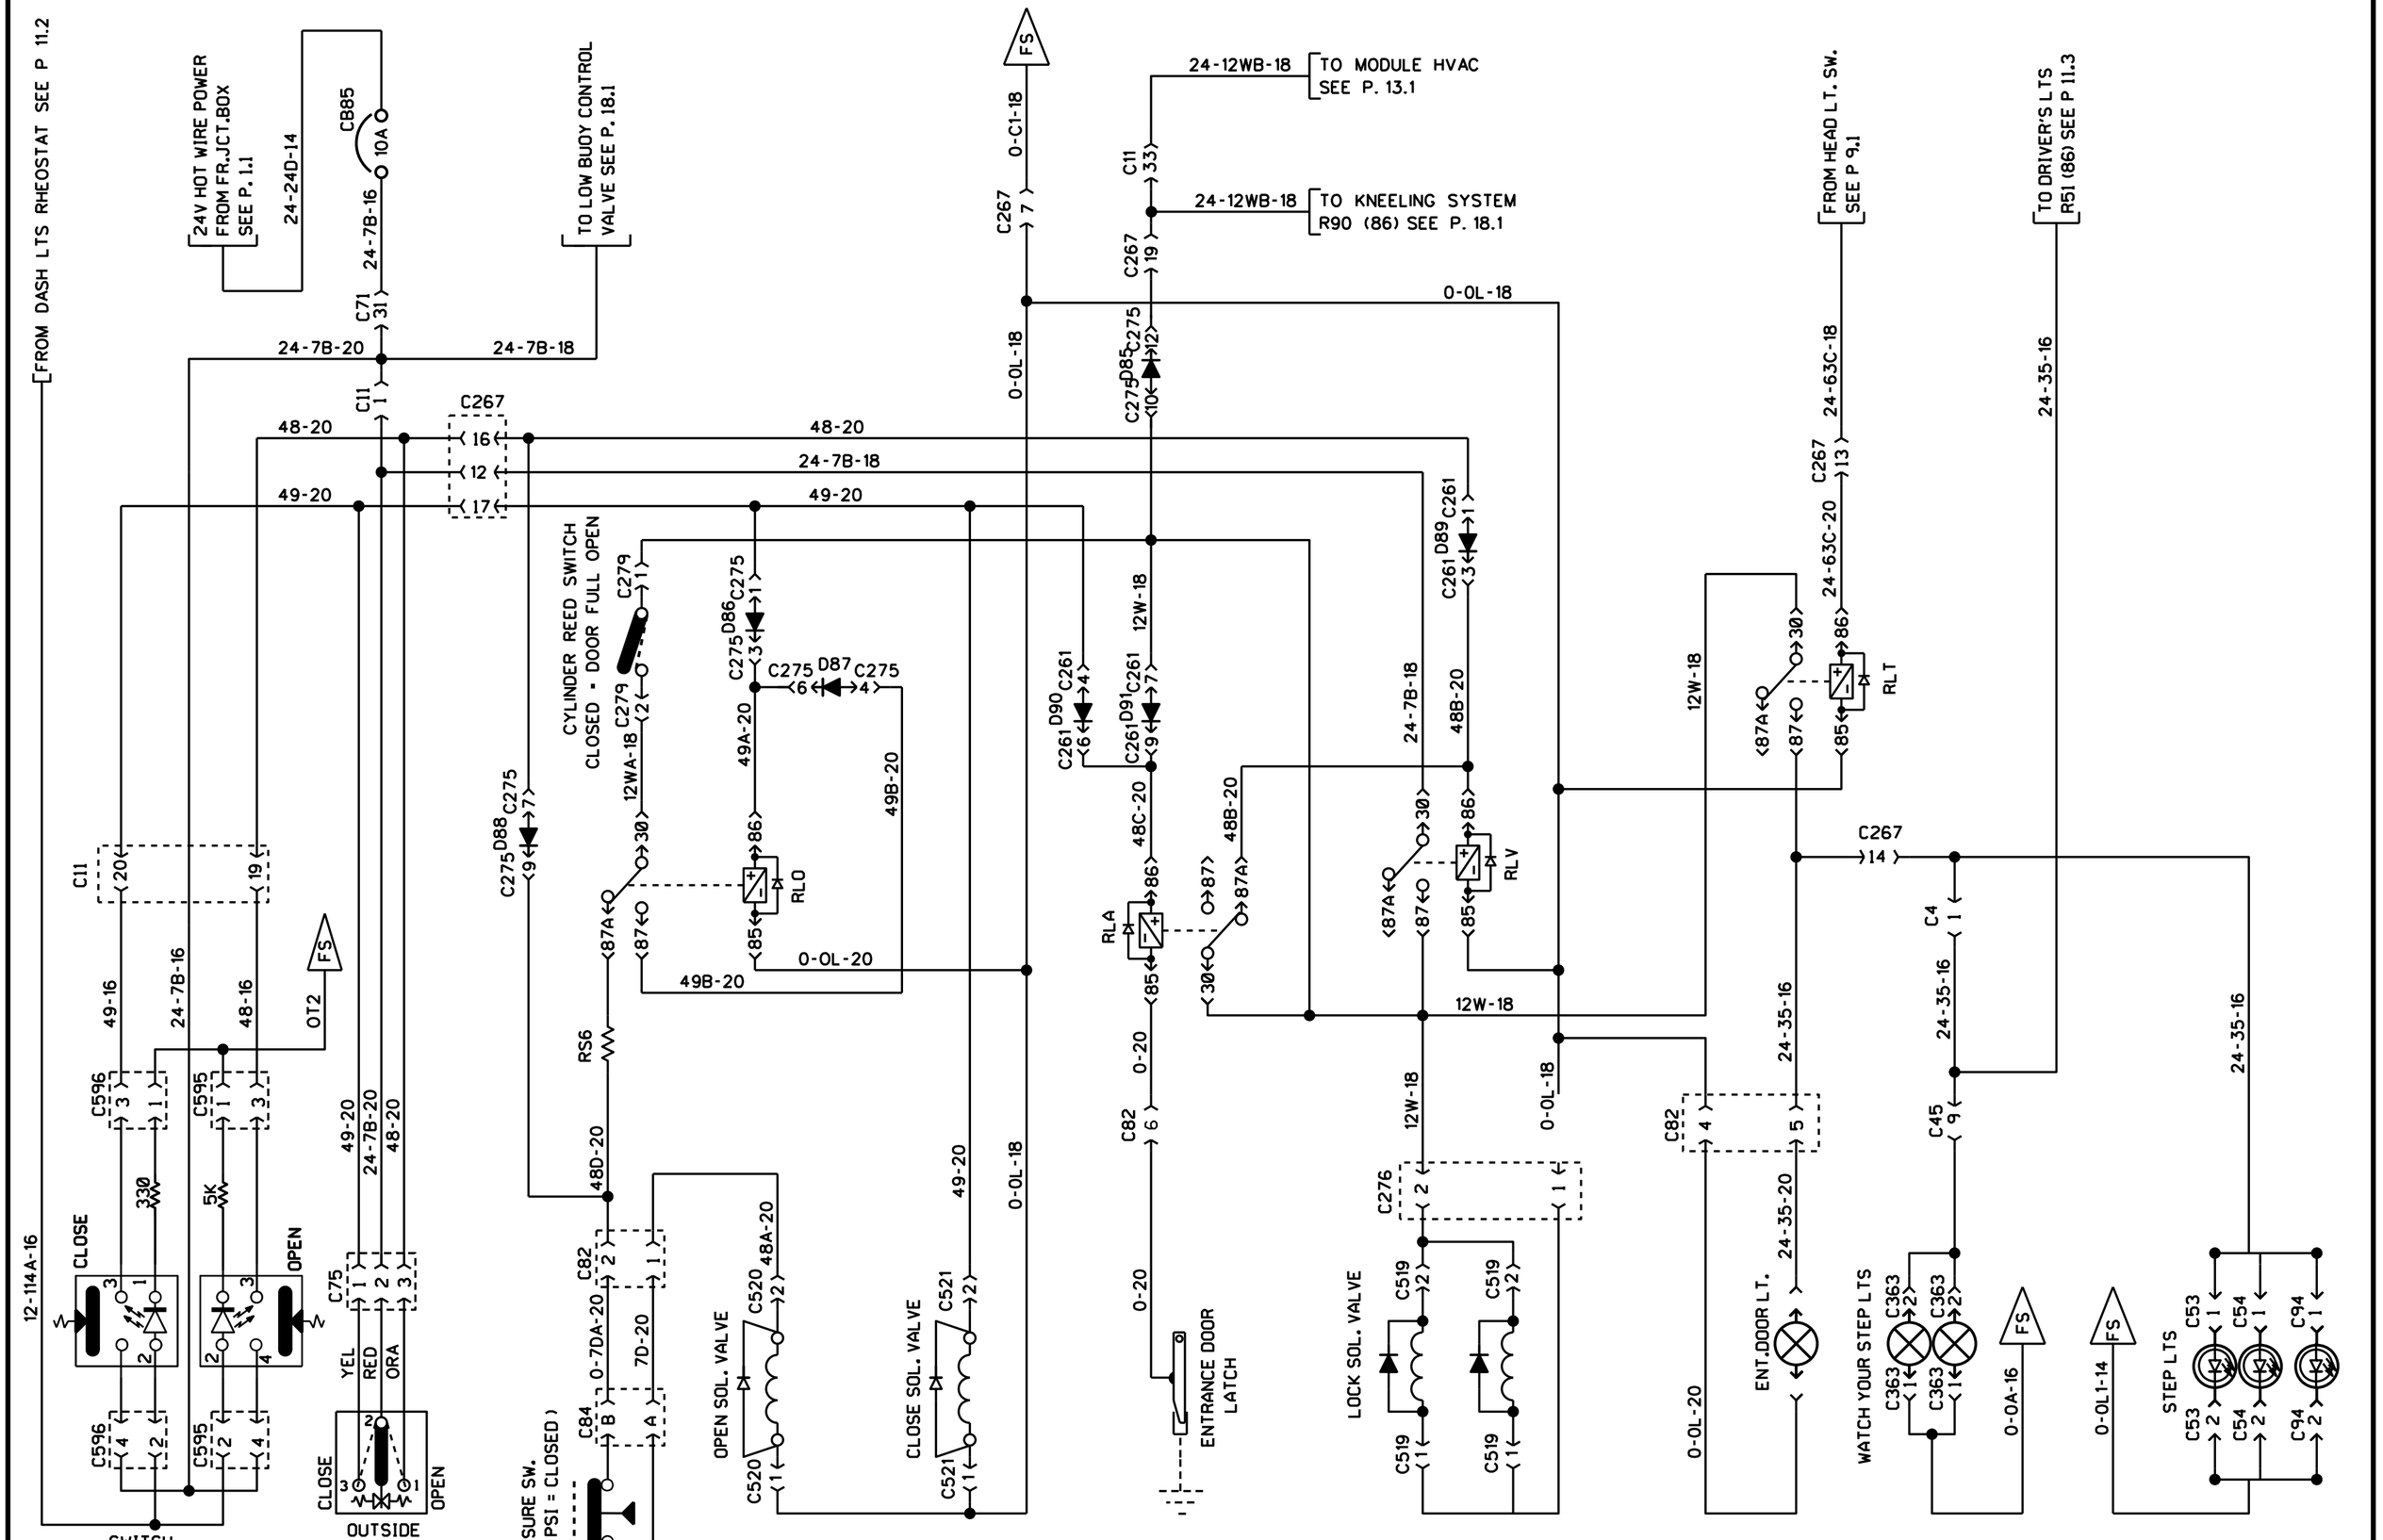

ENTRANCE DOOR (SEDAN)

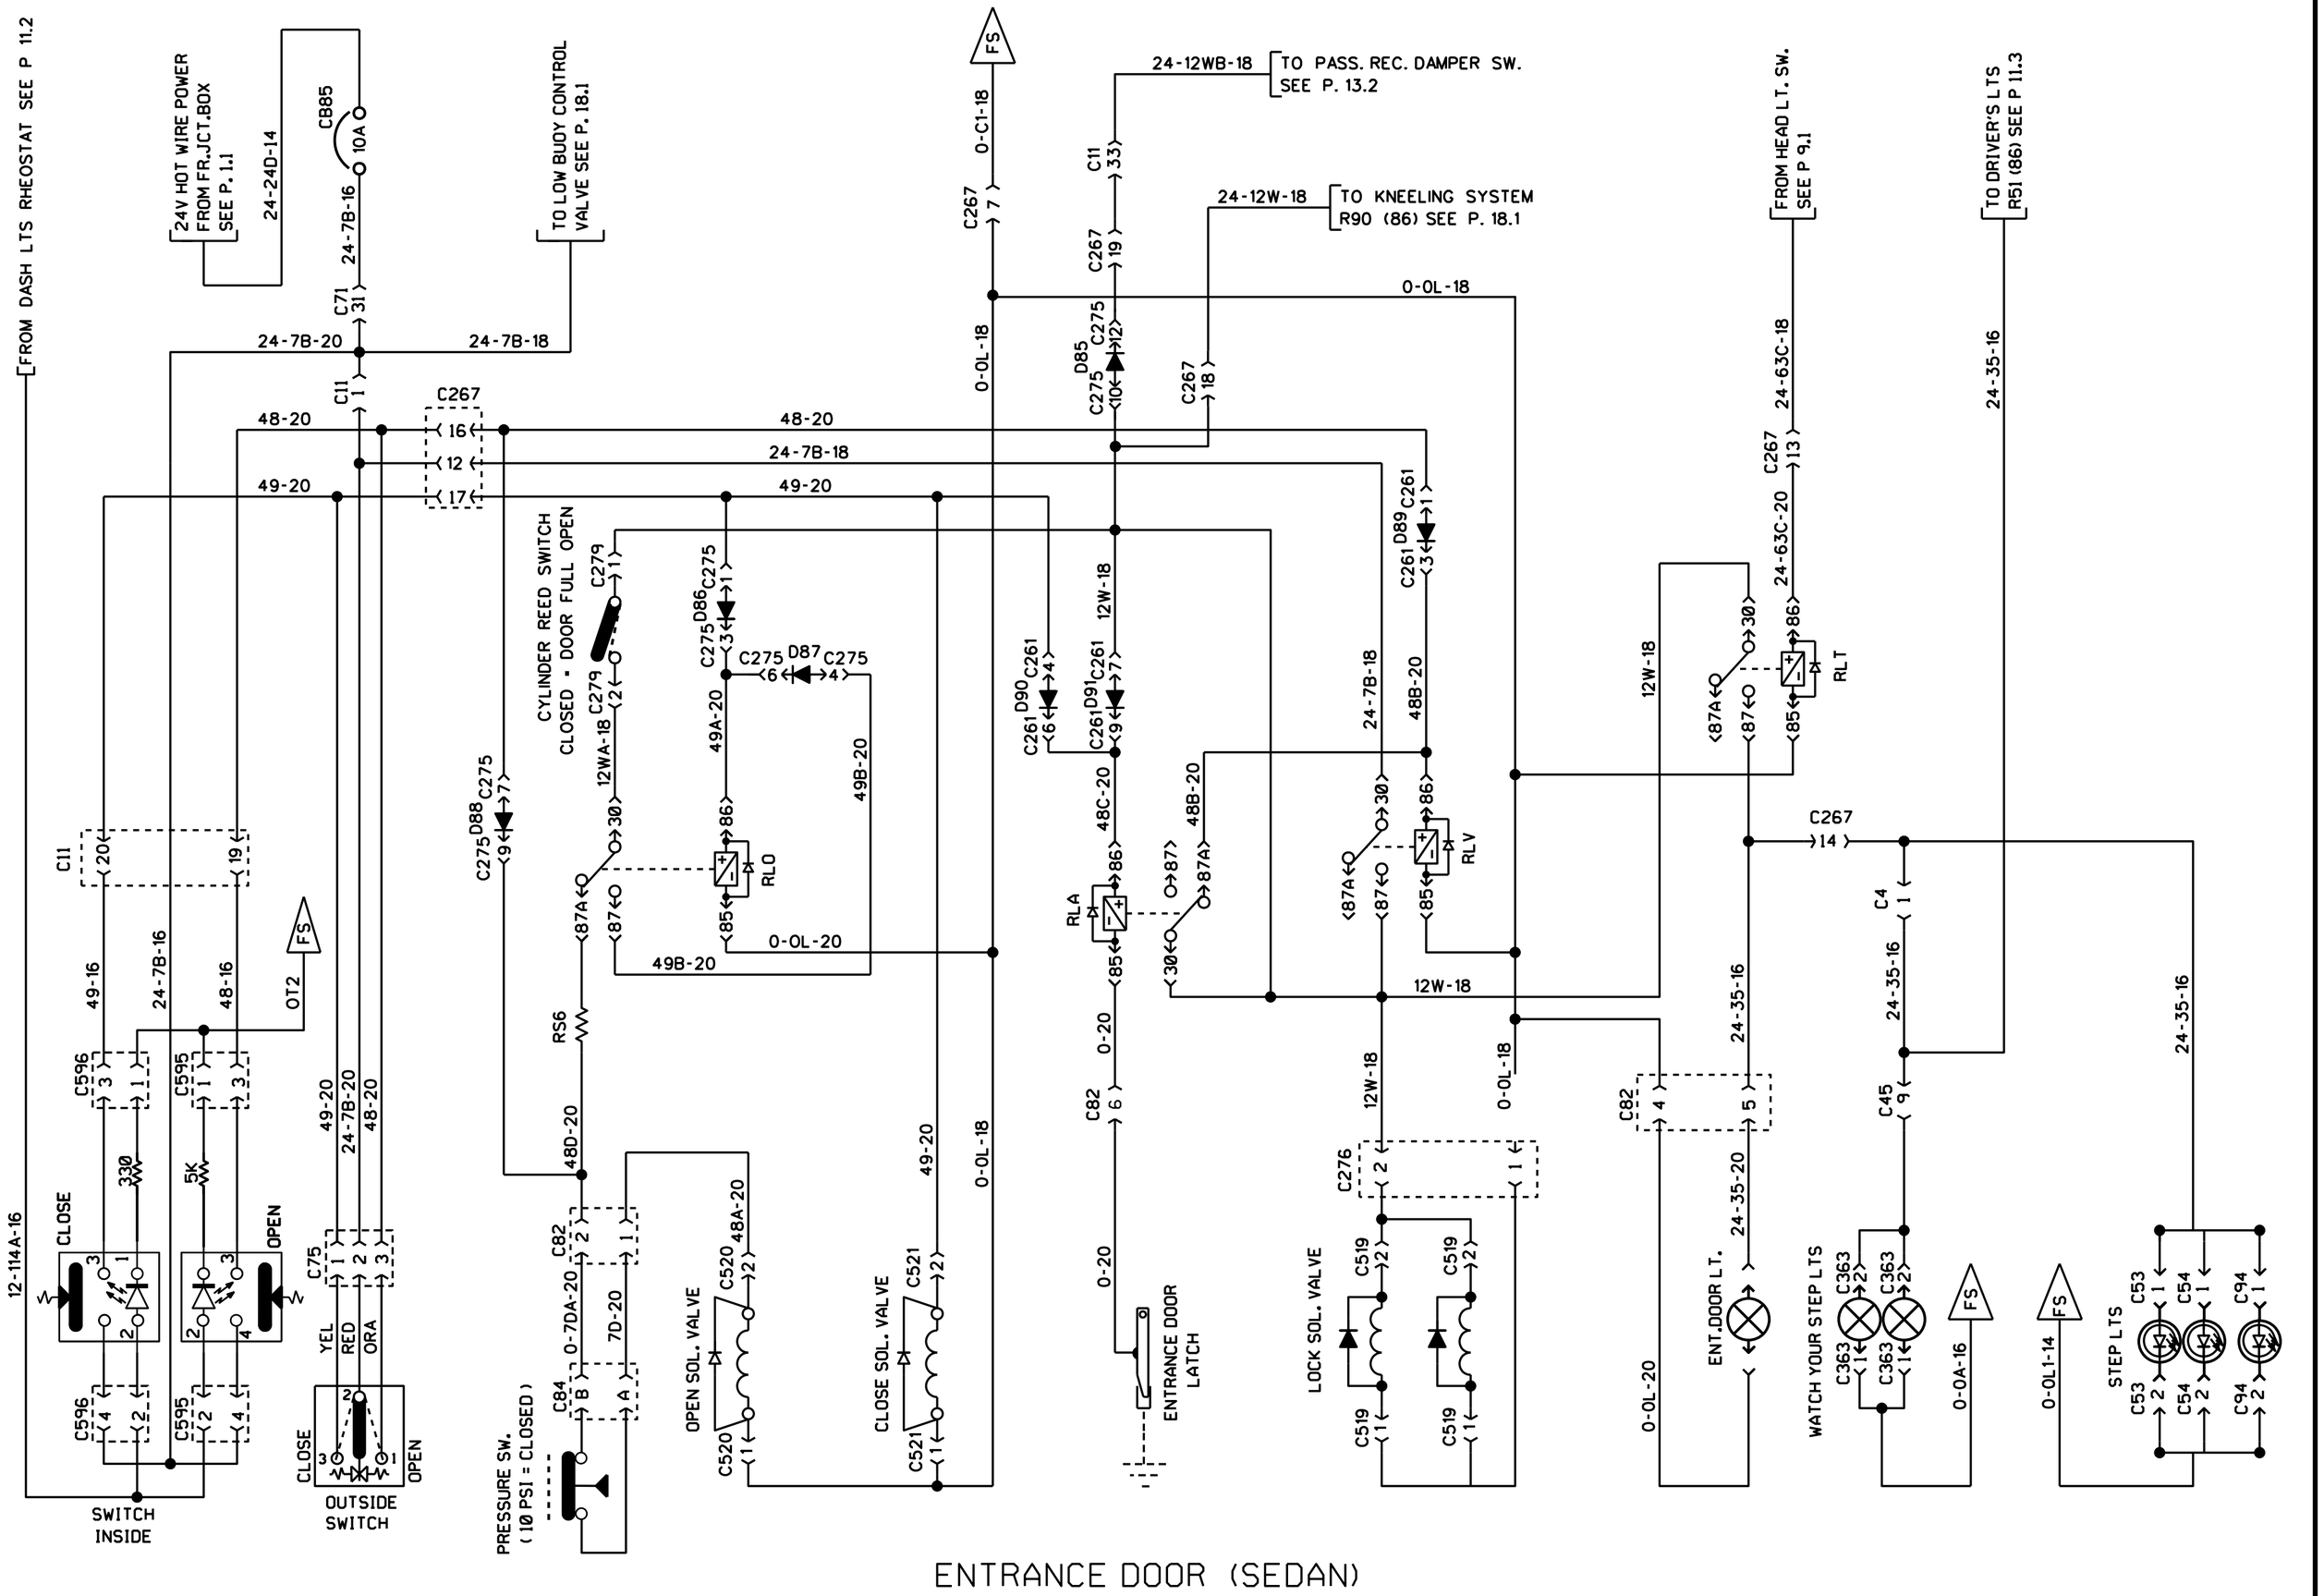

ENTRANCE DOOR (SEDAN)

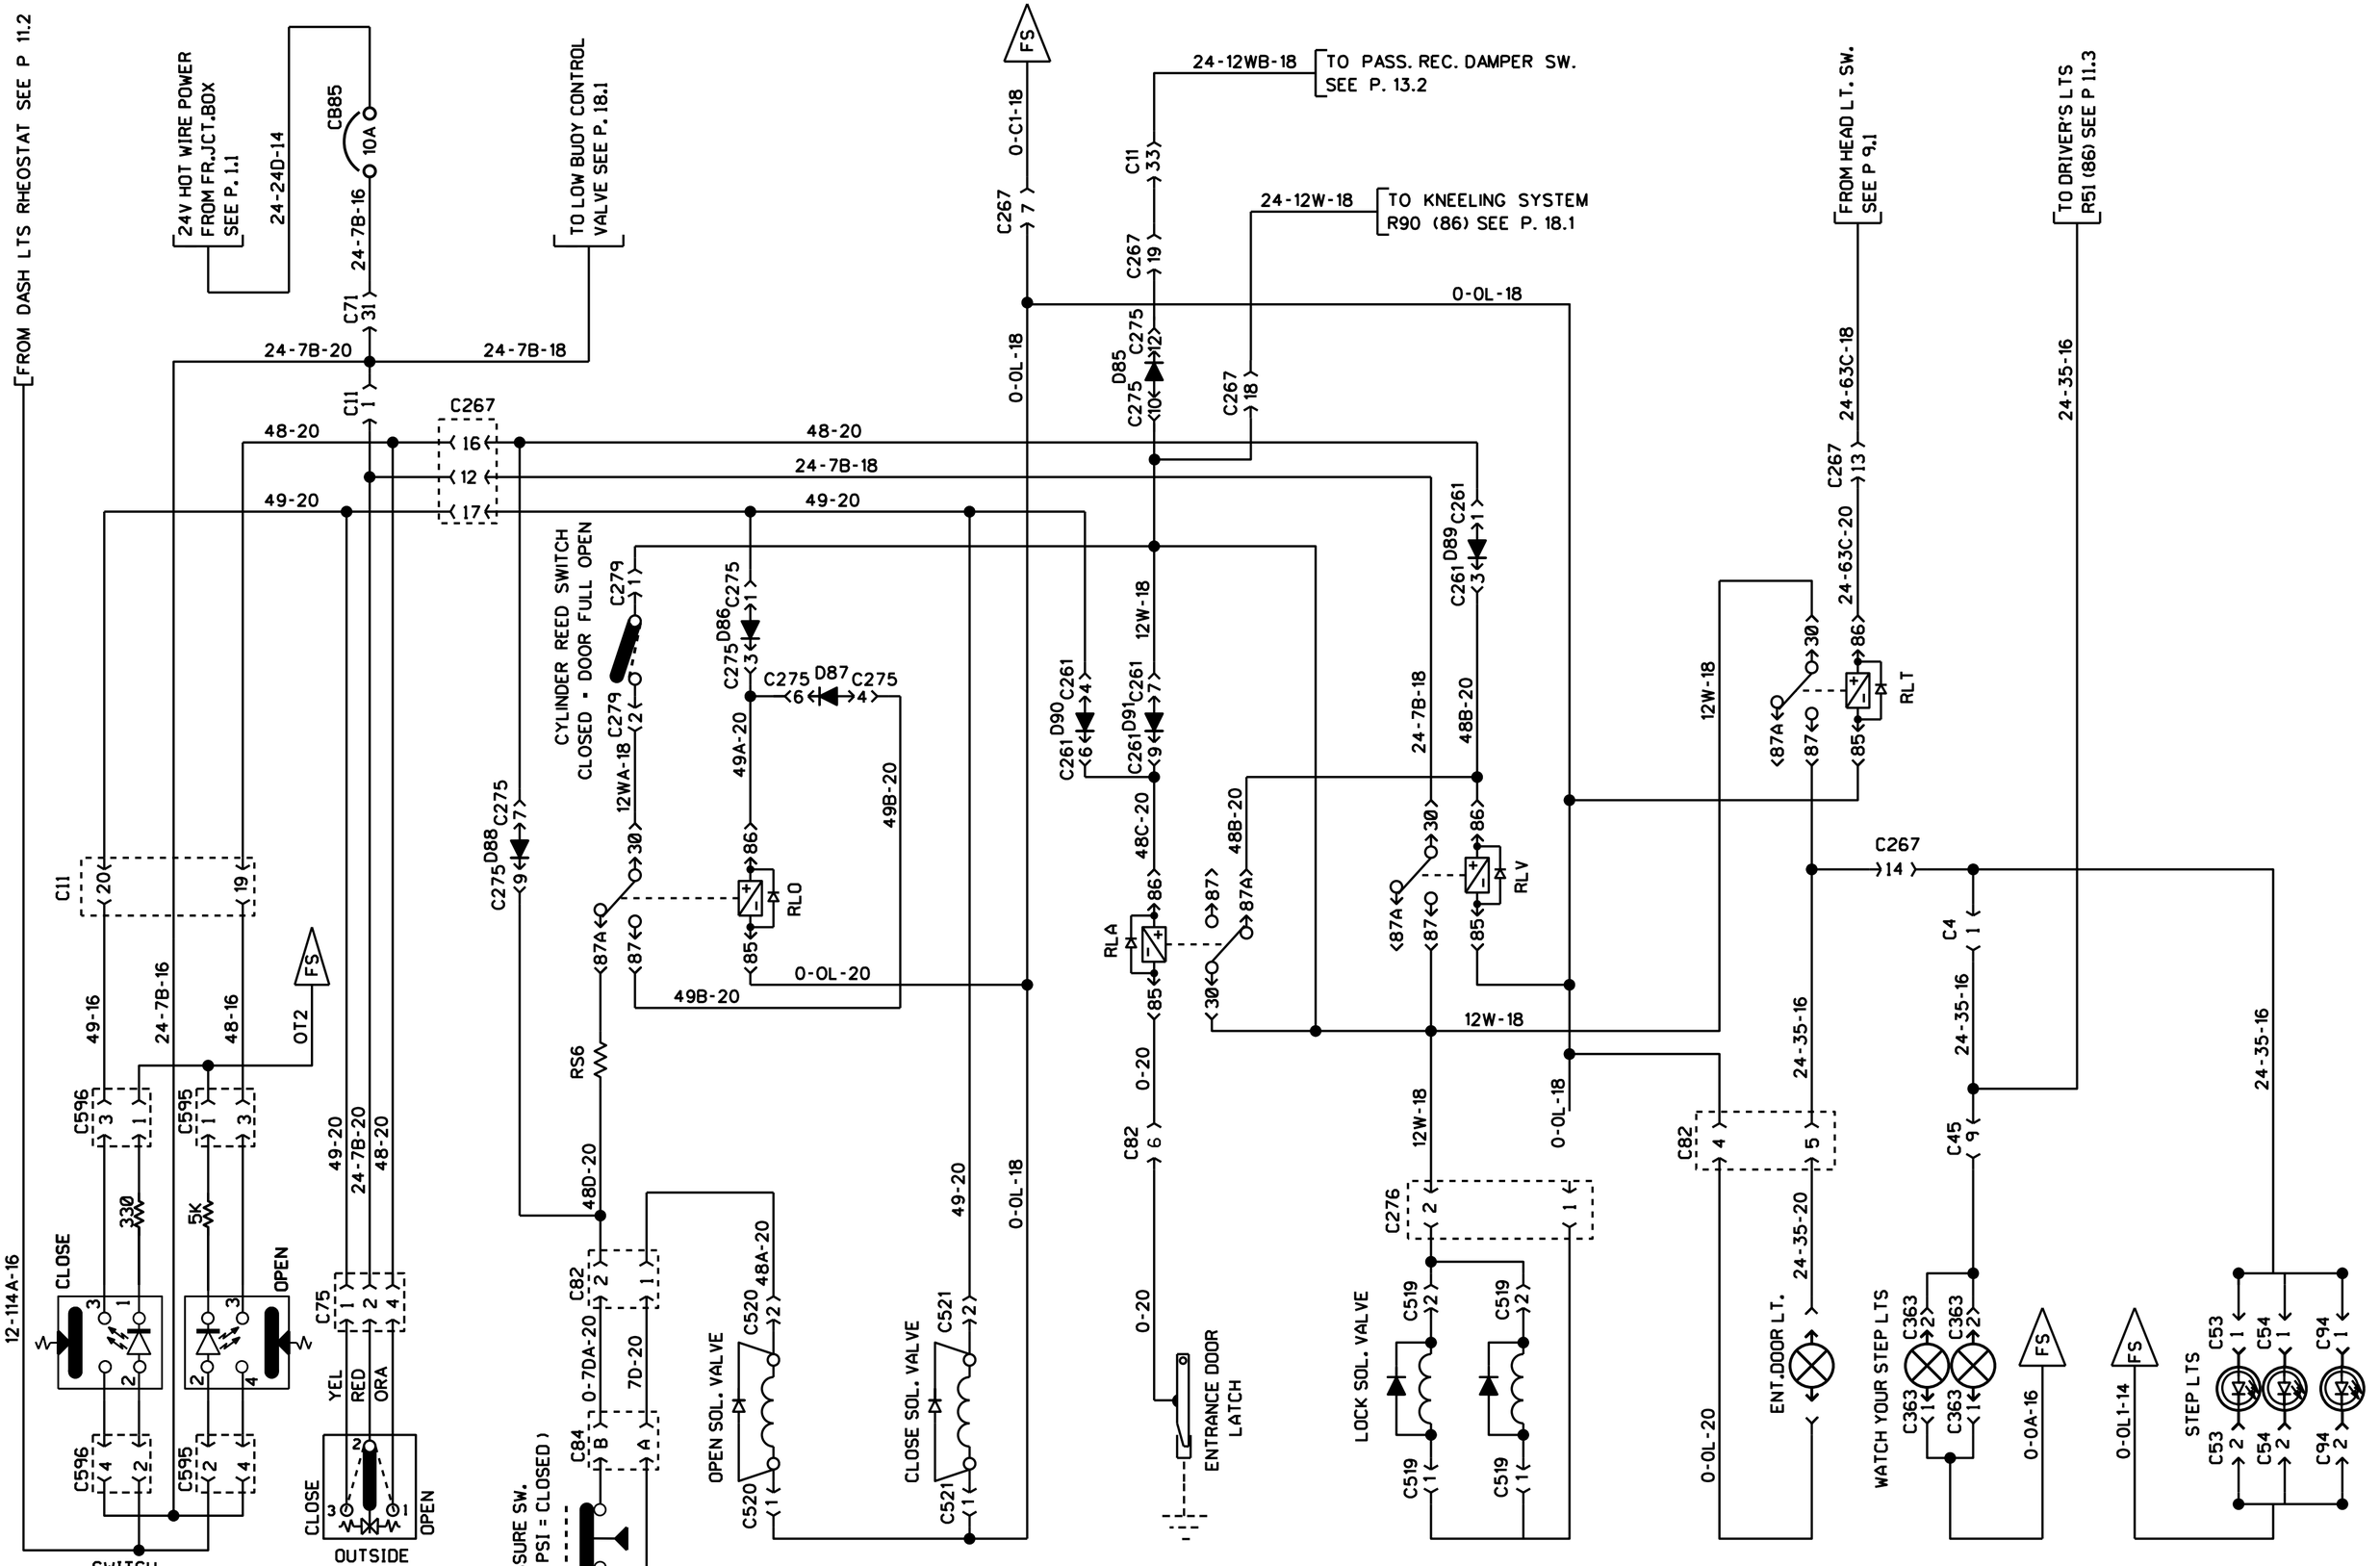

ENTRANCE DOOR (SEDAN)

PREVOST

WIRING DIAGRAM

LAVATORY

FRONT DESTINATION SIGN

ELECTRICAL DESTINATION SIGN

ELECTRONIC DEST. SIGN

NO: D06097G

PAGE: 17.1

REVISION 04

0-0T1-18
R81
24-14-18
0-0T-18
C104 3
C43 1
C126 B
BLK
PUMP
BRN
C126 A
C112 1
TAB
24-14P-14
85
86
87
30
87A
C104 1
RS
0-0H-14
C35 15
TIME DELAY
RS41 1MΩ
0-0P-14
RS
0XA
C91 55
24-14A-18
FLUSHING PUSH BUTTON (ENG.CPT.)
C104 2
C112 2
C56 B
C56 A
C112 4
C104 4
FLUSHING SW.
24-14B-18
C43 2
C35 20
24-14-16
C533 8
F28
10A
C533 1
24-24G-14
24V POWER FROM RR.JCT.BOX SEE P. 1.1
24-125T-16
RS
0YA
C91 56
0-0N-18
C118 B
FAN
C118 A
C91 40
24-225-16
R106
RS
0-0-18
85
86
87
30
87A
24-225A-16
7
F60
10A
2
24-24H-14
24V POWER FROM RR.JCT.BOX SEE P. 1.1
FS
0-0C3-18
EMERGENCY SW.
AA2
SONALERT
FAST
B+
SLOW
85
86
24-27A-18
C71 8
C20 33
C35 18
C43 4
24-27-16
C181 10
D12
C181 12
D64
D63
24-300B-18
C417 4
C417 6
C417 3
C417 1
24-27-18
C3 8
FR.OCCUPIED LT.
FRS
0-0A-18
C362 1
C362 2
C45 3
C71 10
24-62-18
C5 32
C20 32
24-73-16
TO LAVATORY OCCUPED T.T.LT. MODULE C516 (4) SEE P. 28.1
24-62E-18
C181 13
D11
C181 15
24-62-18
DOOR LOCK SW.
C35 17
C43 8
C43 5
C35 23
24-73-16
C533 7
F29
7.5A
C533 2
24-24G-14
24V POWER FROM RR.JCT.BOX SEE P. 1.1
24-62E-18
RR.OCCUP.LT.
C142 2
C142 1
24-62E-18
RS
0-0-18
R102
85
86
ROOF LT.
RS
0-0H-14
C35 15
C41
C41
C35 16
12-62B-18
87
30
87A
12-62A-18
C534 6
F57
5A
C534 3
12-12E-14
12V POWER FROM RR.JCT.BOX SEE P.2.1
24-300B-18
C3 12
C20 39
24-300B-18
FROM WCL SYSTEM DOOR AJAR SIGNAL R96(87) SEE P.25.1
FS
0T1
LAVATORY NIGHT LTS.
24-125-16
24-125T-16
C609
C609
0-0H-16
C35 24
C534 5
F27
5A
C534 4
24IB-14
24VI PWR FROM RJB SEE P. 1.1
C314
11J
12-12DT
TO CB130 SEE P. 28.1
TO GALLEY LAMP SEE P. 23.1
LIGHT SW.
10
8
4
5B
6
1
2B
3
7
9
C72 15
24-11A-16
C526 6
F31
5A ELECTRONIC
7.5A ELECTRIC
C526 3
24-24C-14
24V POWER FROM RR.JCT.BOX
24-11-16
14
19
C72
C45
24-11-16
FLUORESCENT
C364 3
24-11-16
C370 1
2
C371 1
2
WH
WH
FS
0-T1-18
12-114A-16
FROM DASH LTS RHEOSTAT SEE P 11.2
SPEED SW.
C372 1
2
3
24-11A-16
24-11K-18
RS13 80 OHMS
80 OHMS
C364 1
C45 15
0-0A-18
C368 3
RED
BALLAST
WH
C368 1
2
BLK
24-11P-16
D13
C369
OPERATING SW.
2
1
3
5
4
24-11B-16
0-0A-18
24-11C-16
N.O.
N.C. COM.
24-11D-20
COM. N.C.
N.O.
24-11E-20
M
FRS
0-0A-18
C364 2
D14
C478
FRONT ELECTRONIC DESTINATION SIGN
1
3
24-11-16
0-0A-18
FRS

PREVOST | WIRING DIAGRAM

LAVATORY

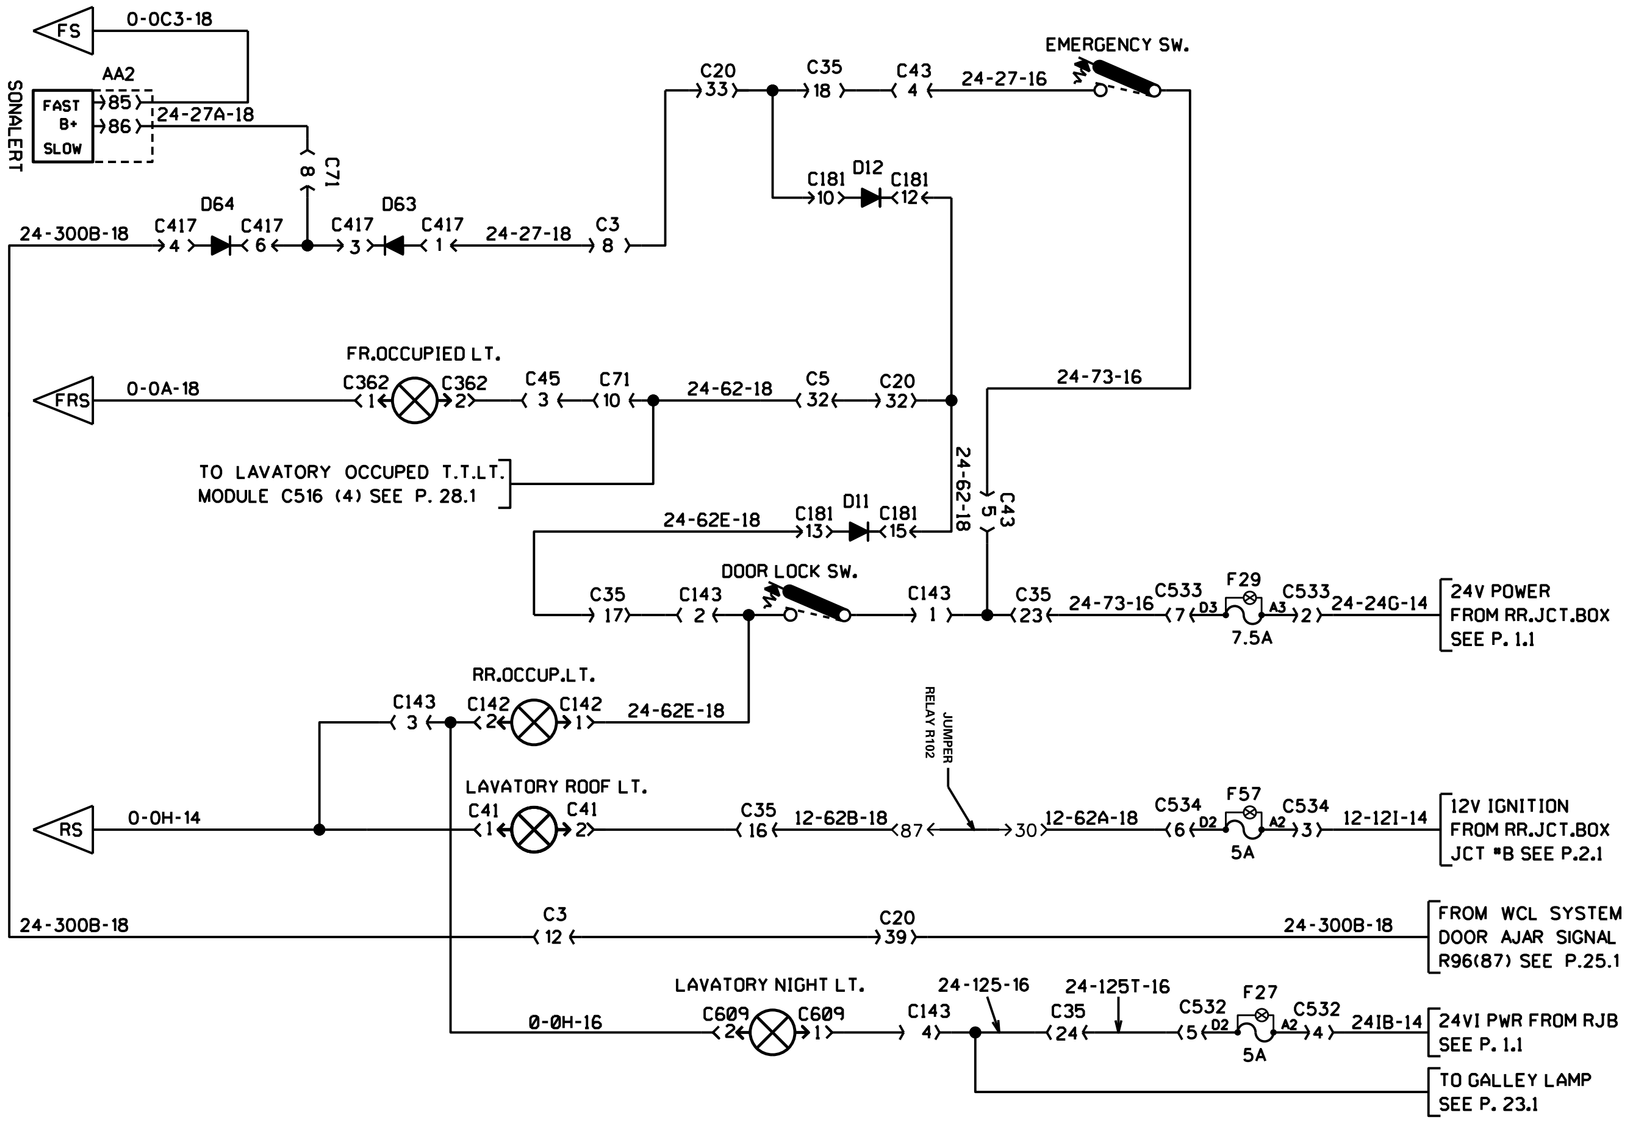

NO: D060976

PAGE: **17.1 sp1**

REVISION 00

PREVOST

WIRING DIAGRAM

LAVATORY

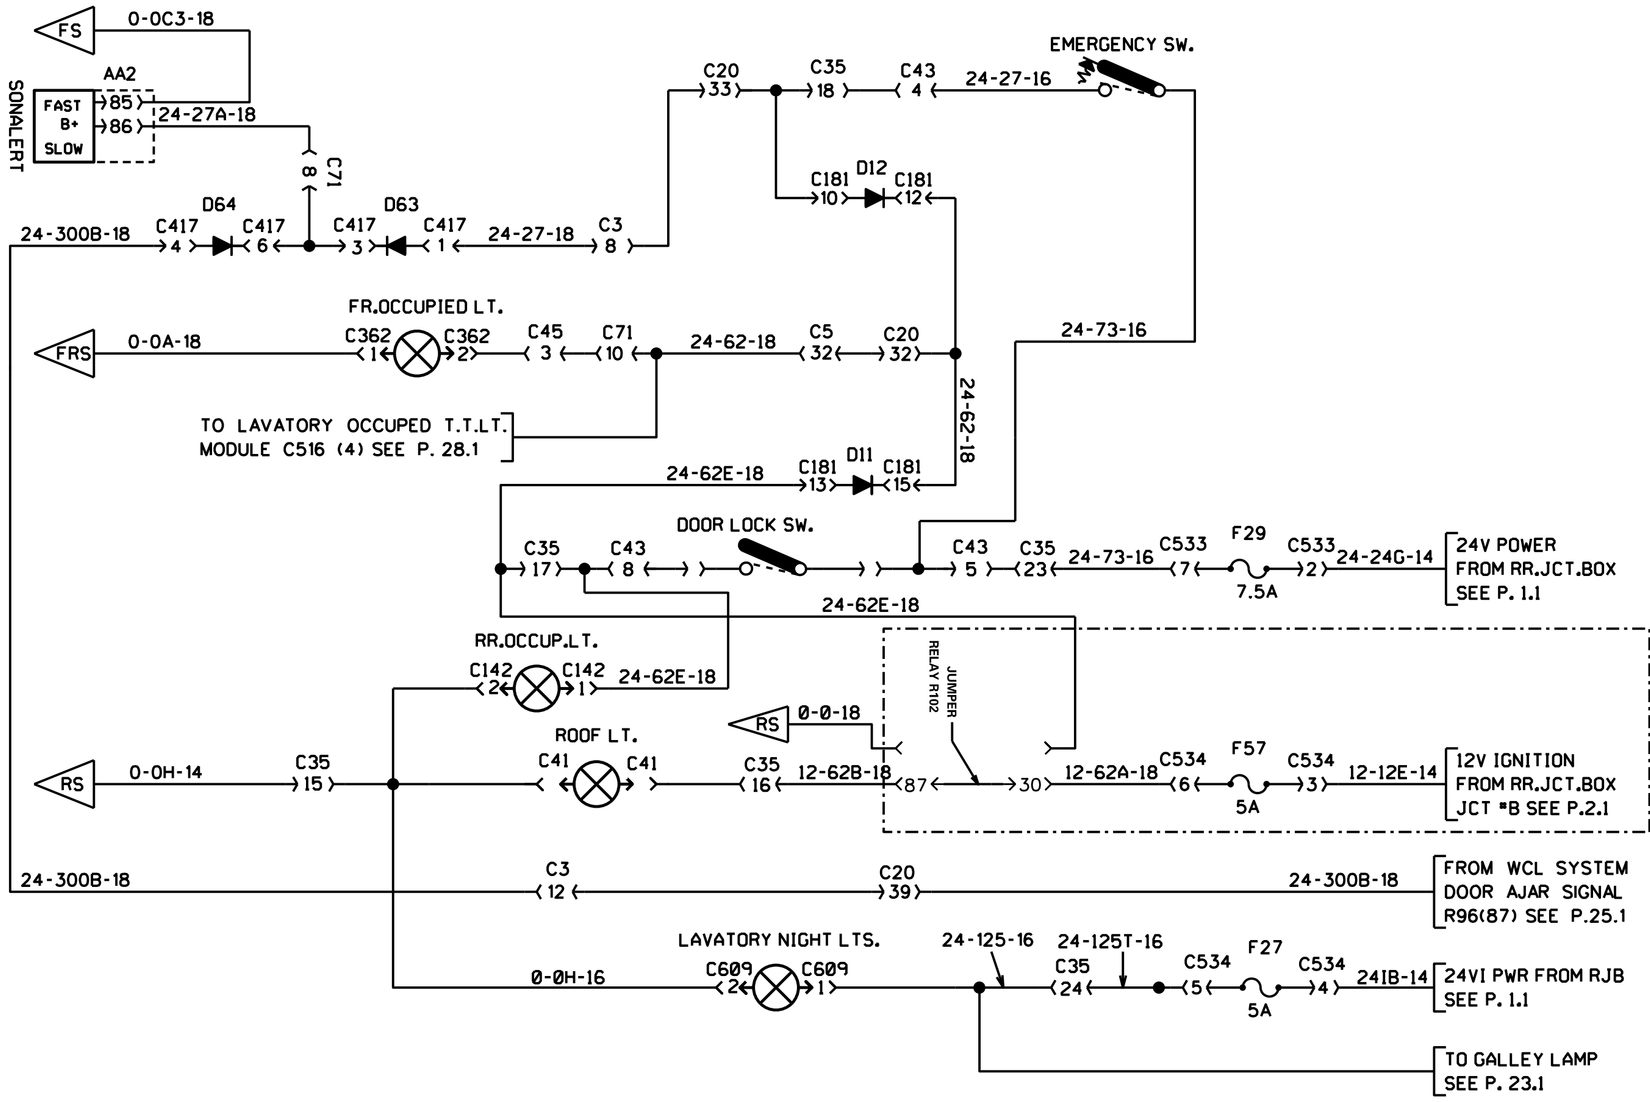

ROOF LTS "ON" WITH IGN.

NO: D060976

PAGE: **17.1 sp1**

REVISION 04

PREVOST | WIRING DIAGRAM | NO: D06097G | PAGE: 17.1 sp1 | REVISION 07

LAVATORY

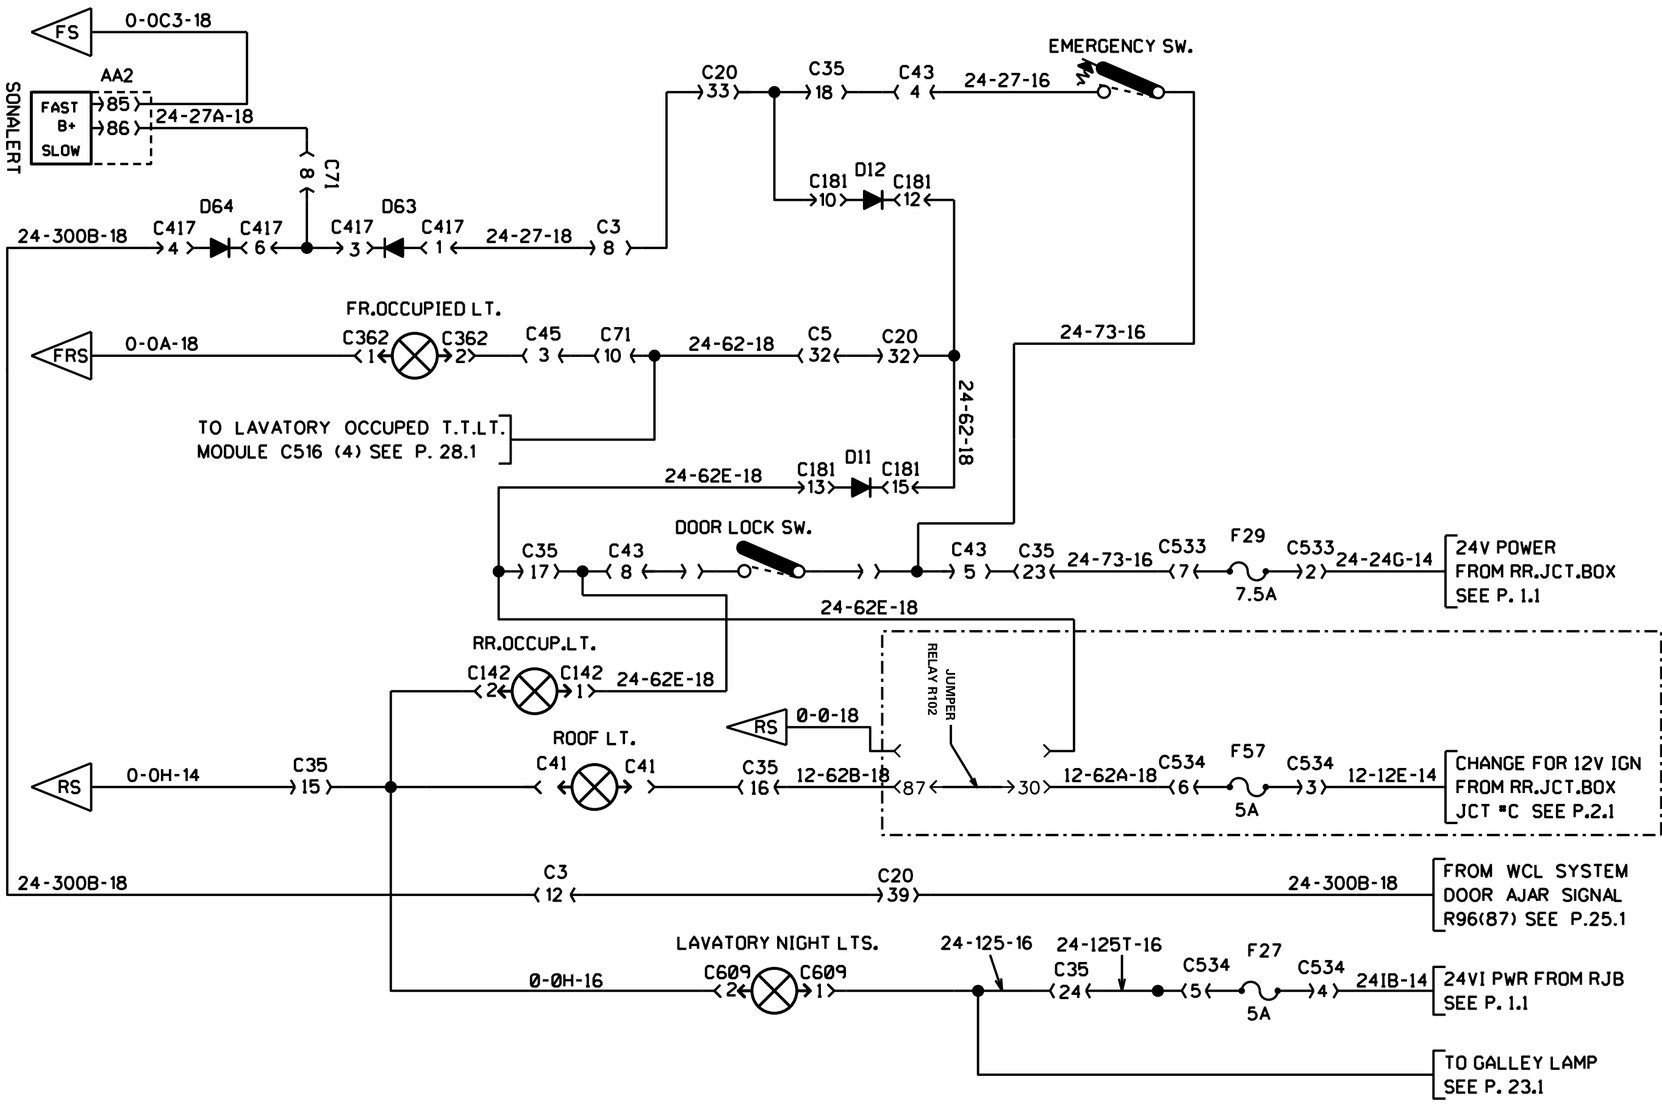

ROOF LTS "ON" WITH IGN.

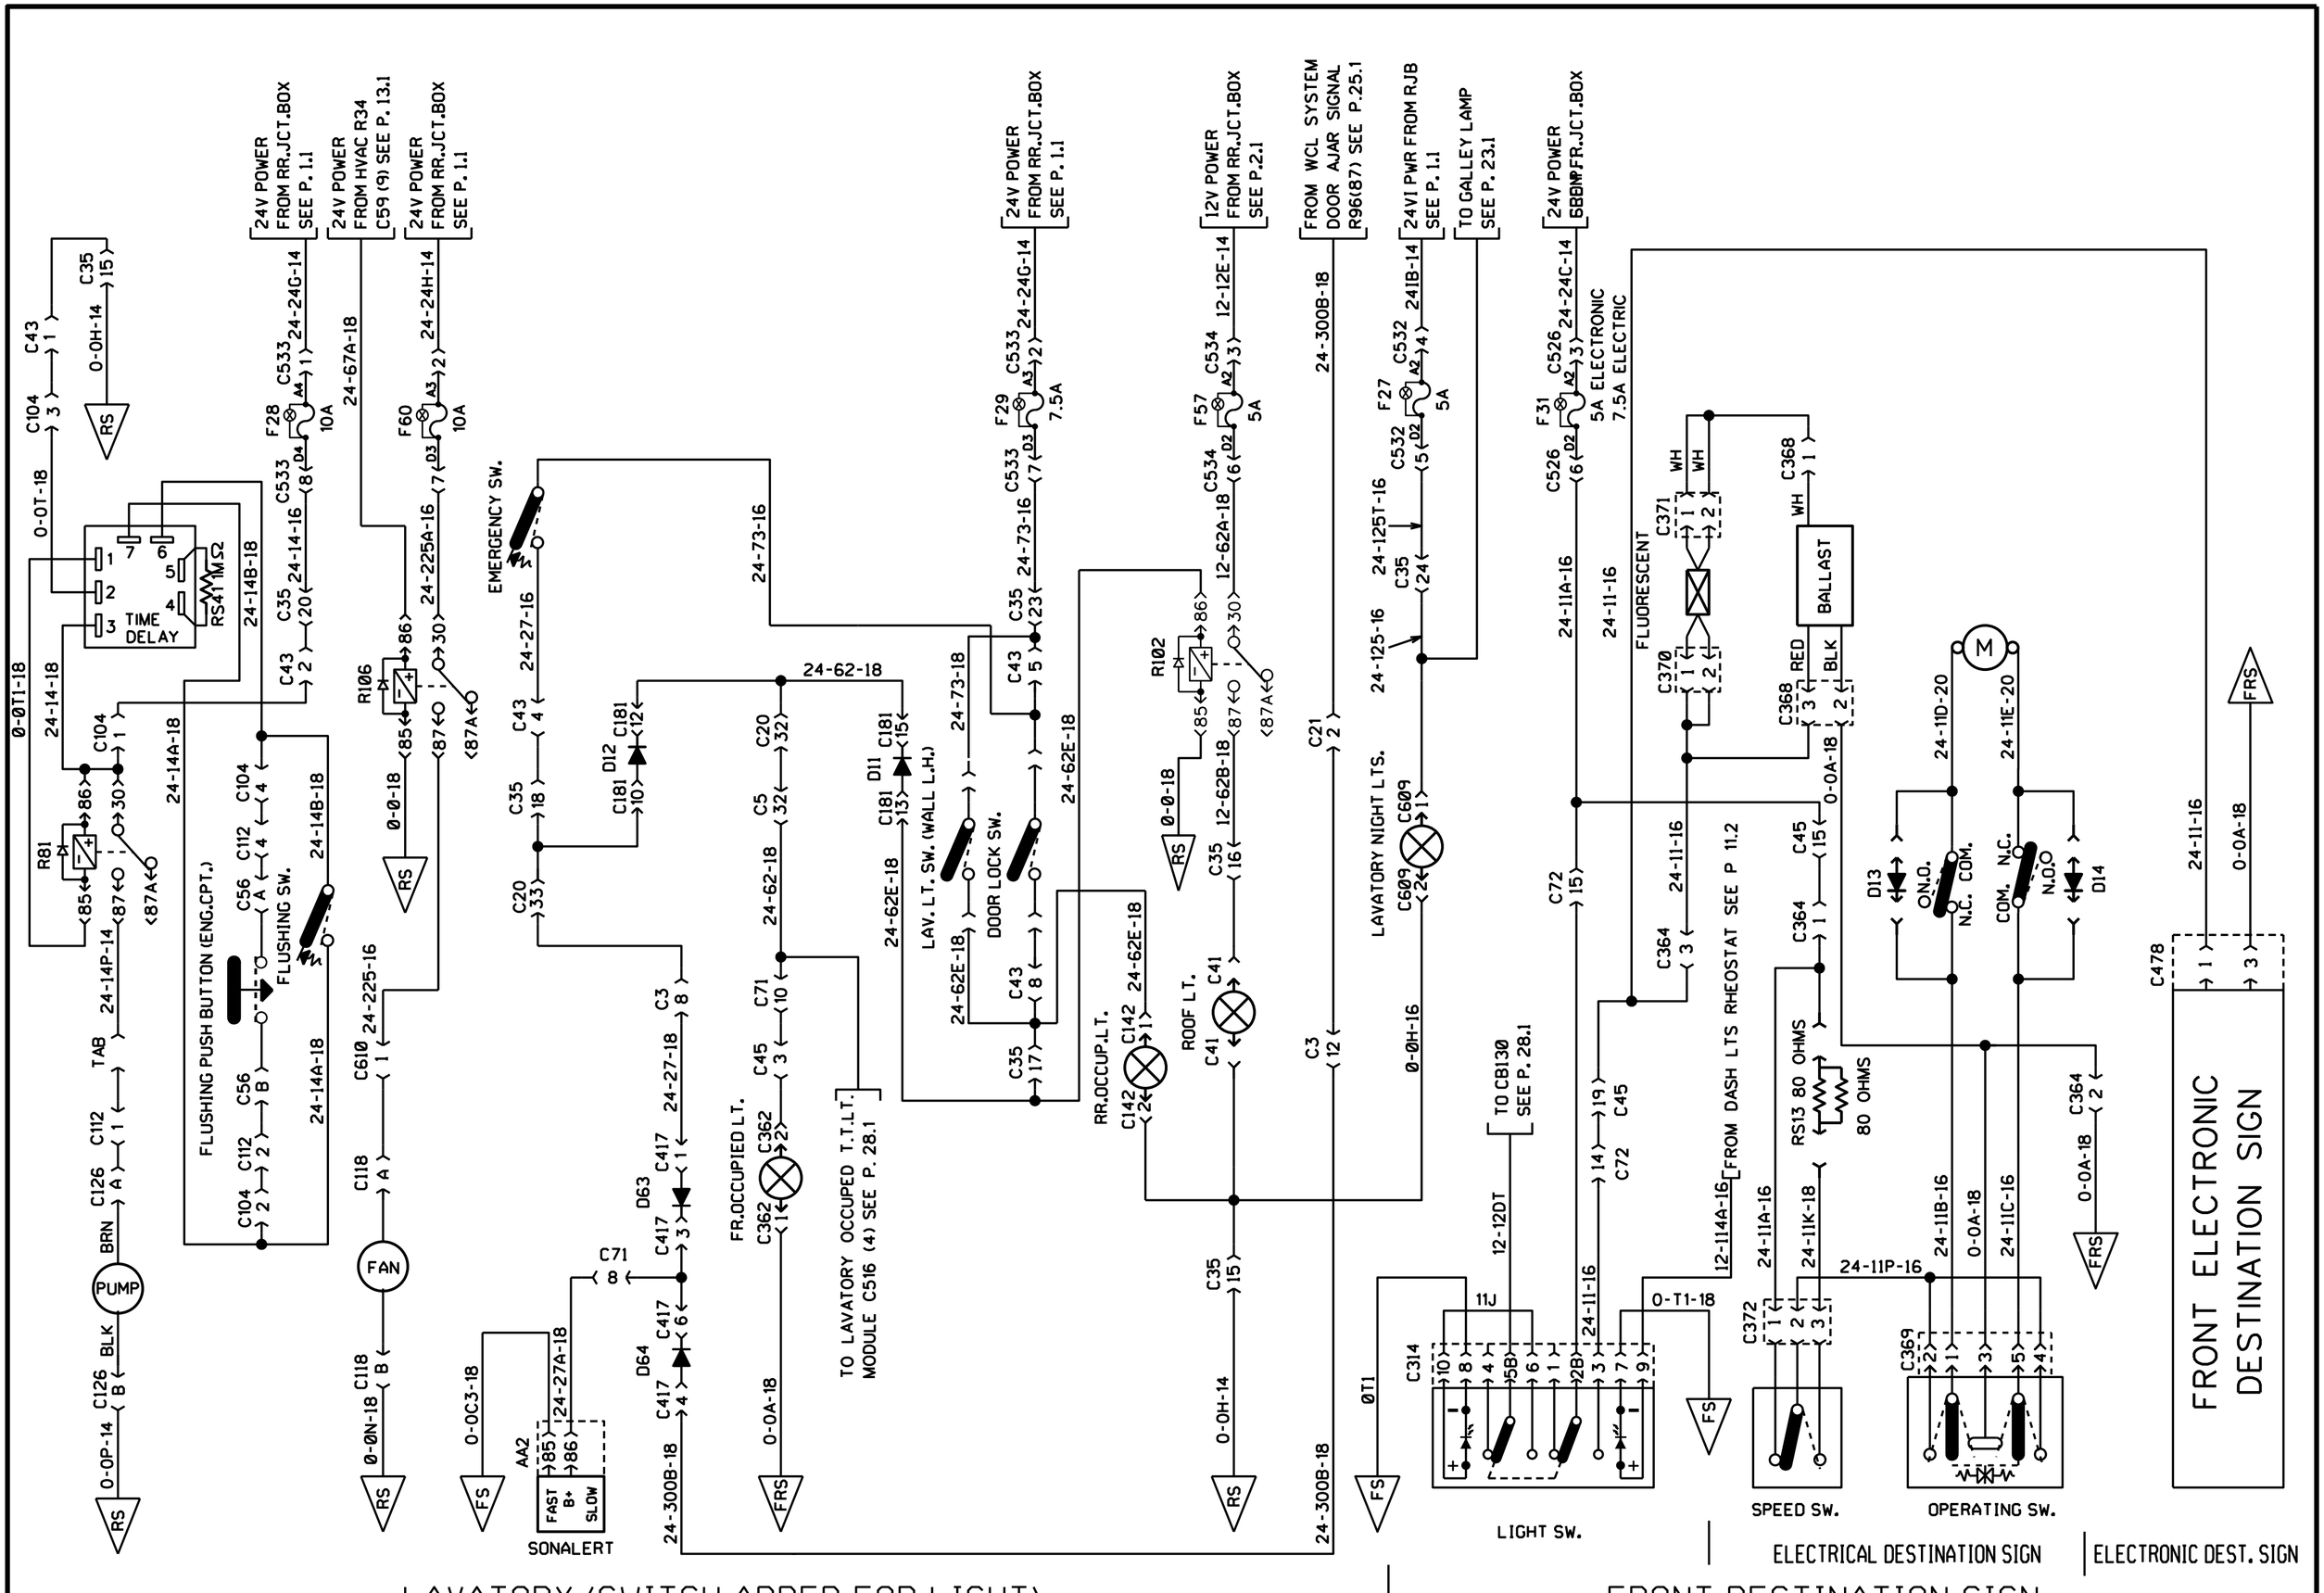

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 17.1sp2	REVISION 00

PREVOST

WIRING DIAGRAM

LAVATORY (SWITCH ADDED FOR LIGHT)

FRONT DESTINATION SIGN

ELECTRICAL DESTINATION SIGN

ELECTRONIC DEST. SIGN

NO: D60976

PAGE: 17.1sp2

REVISION 02

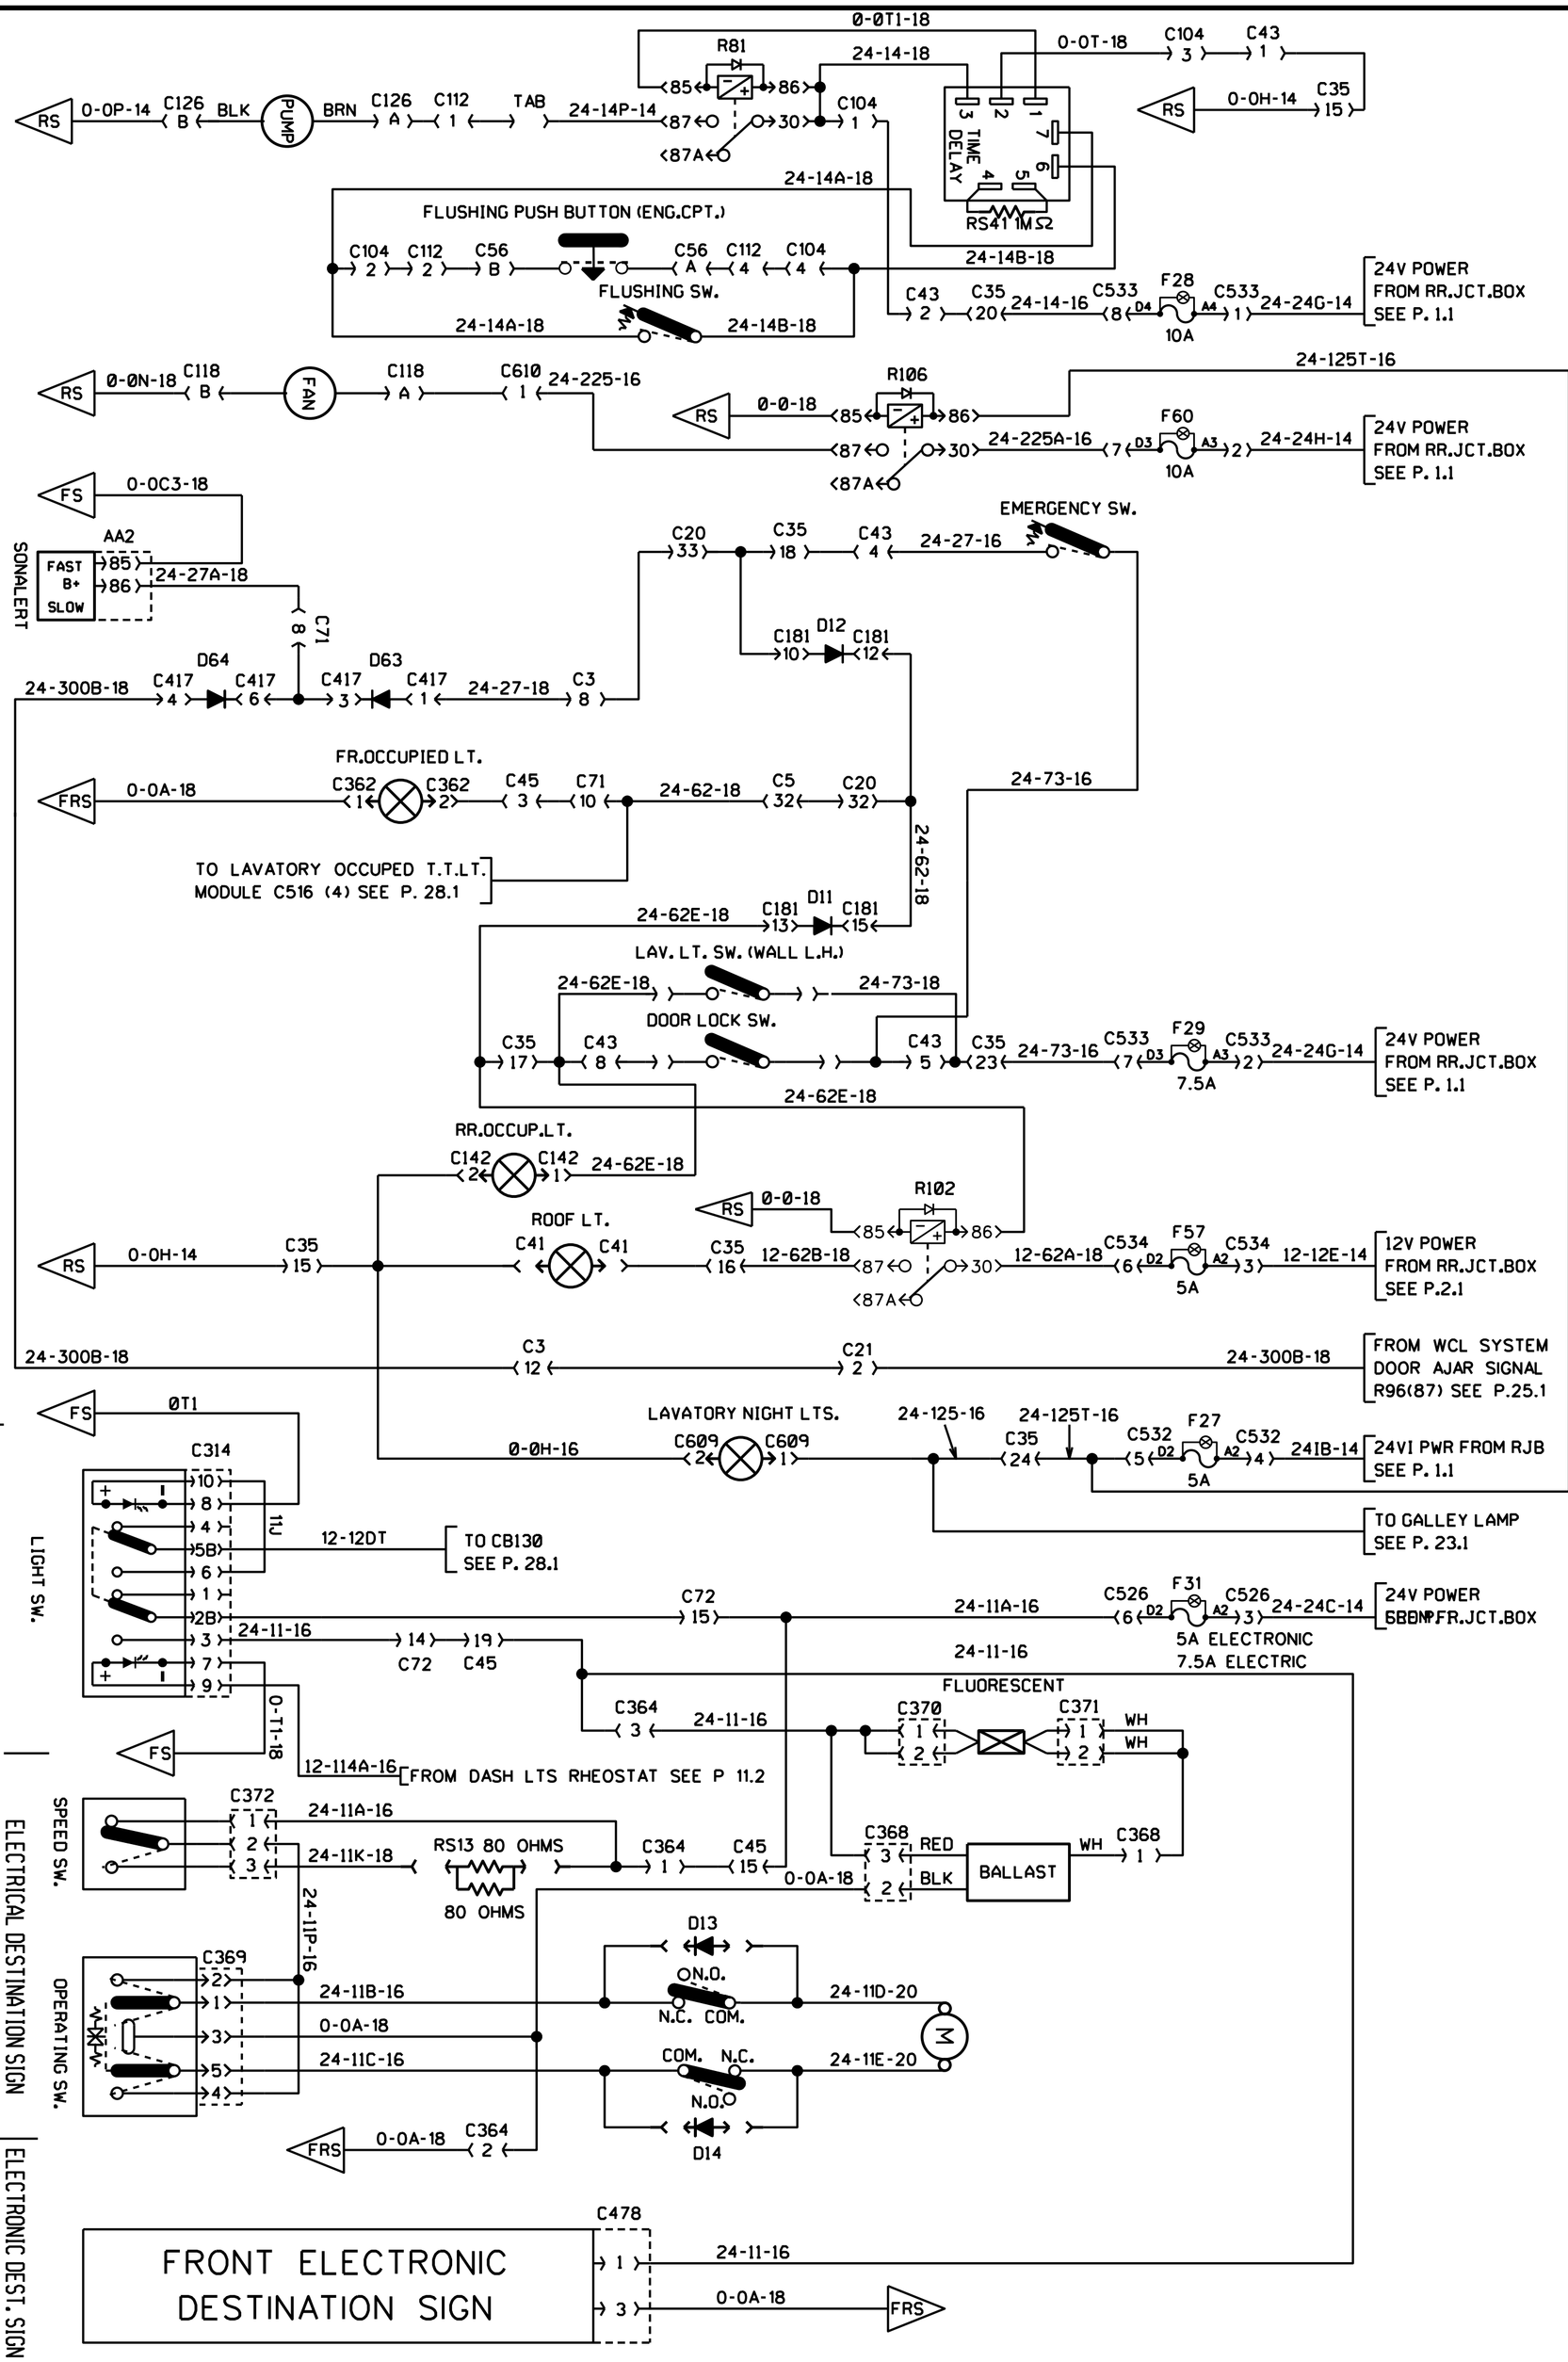

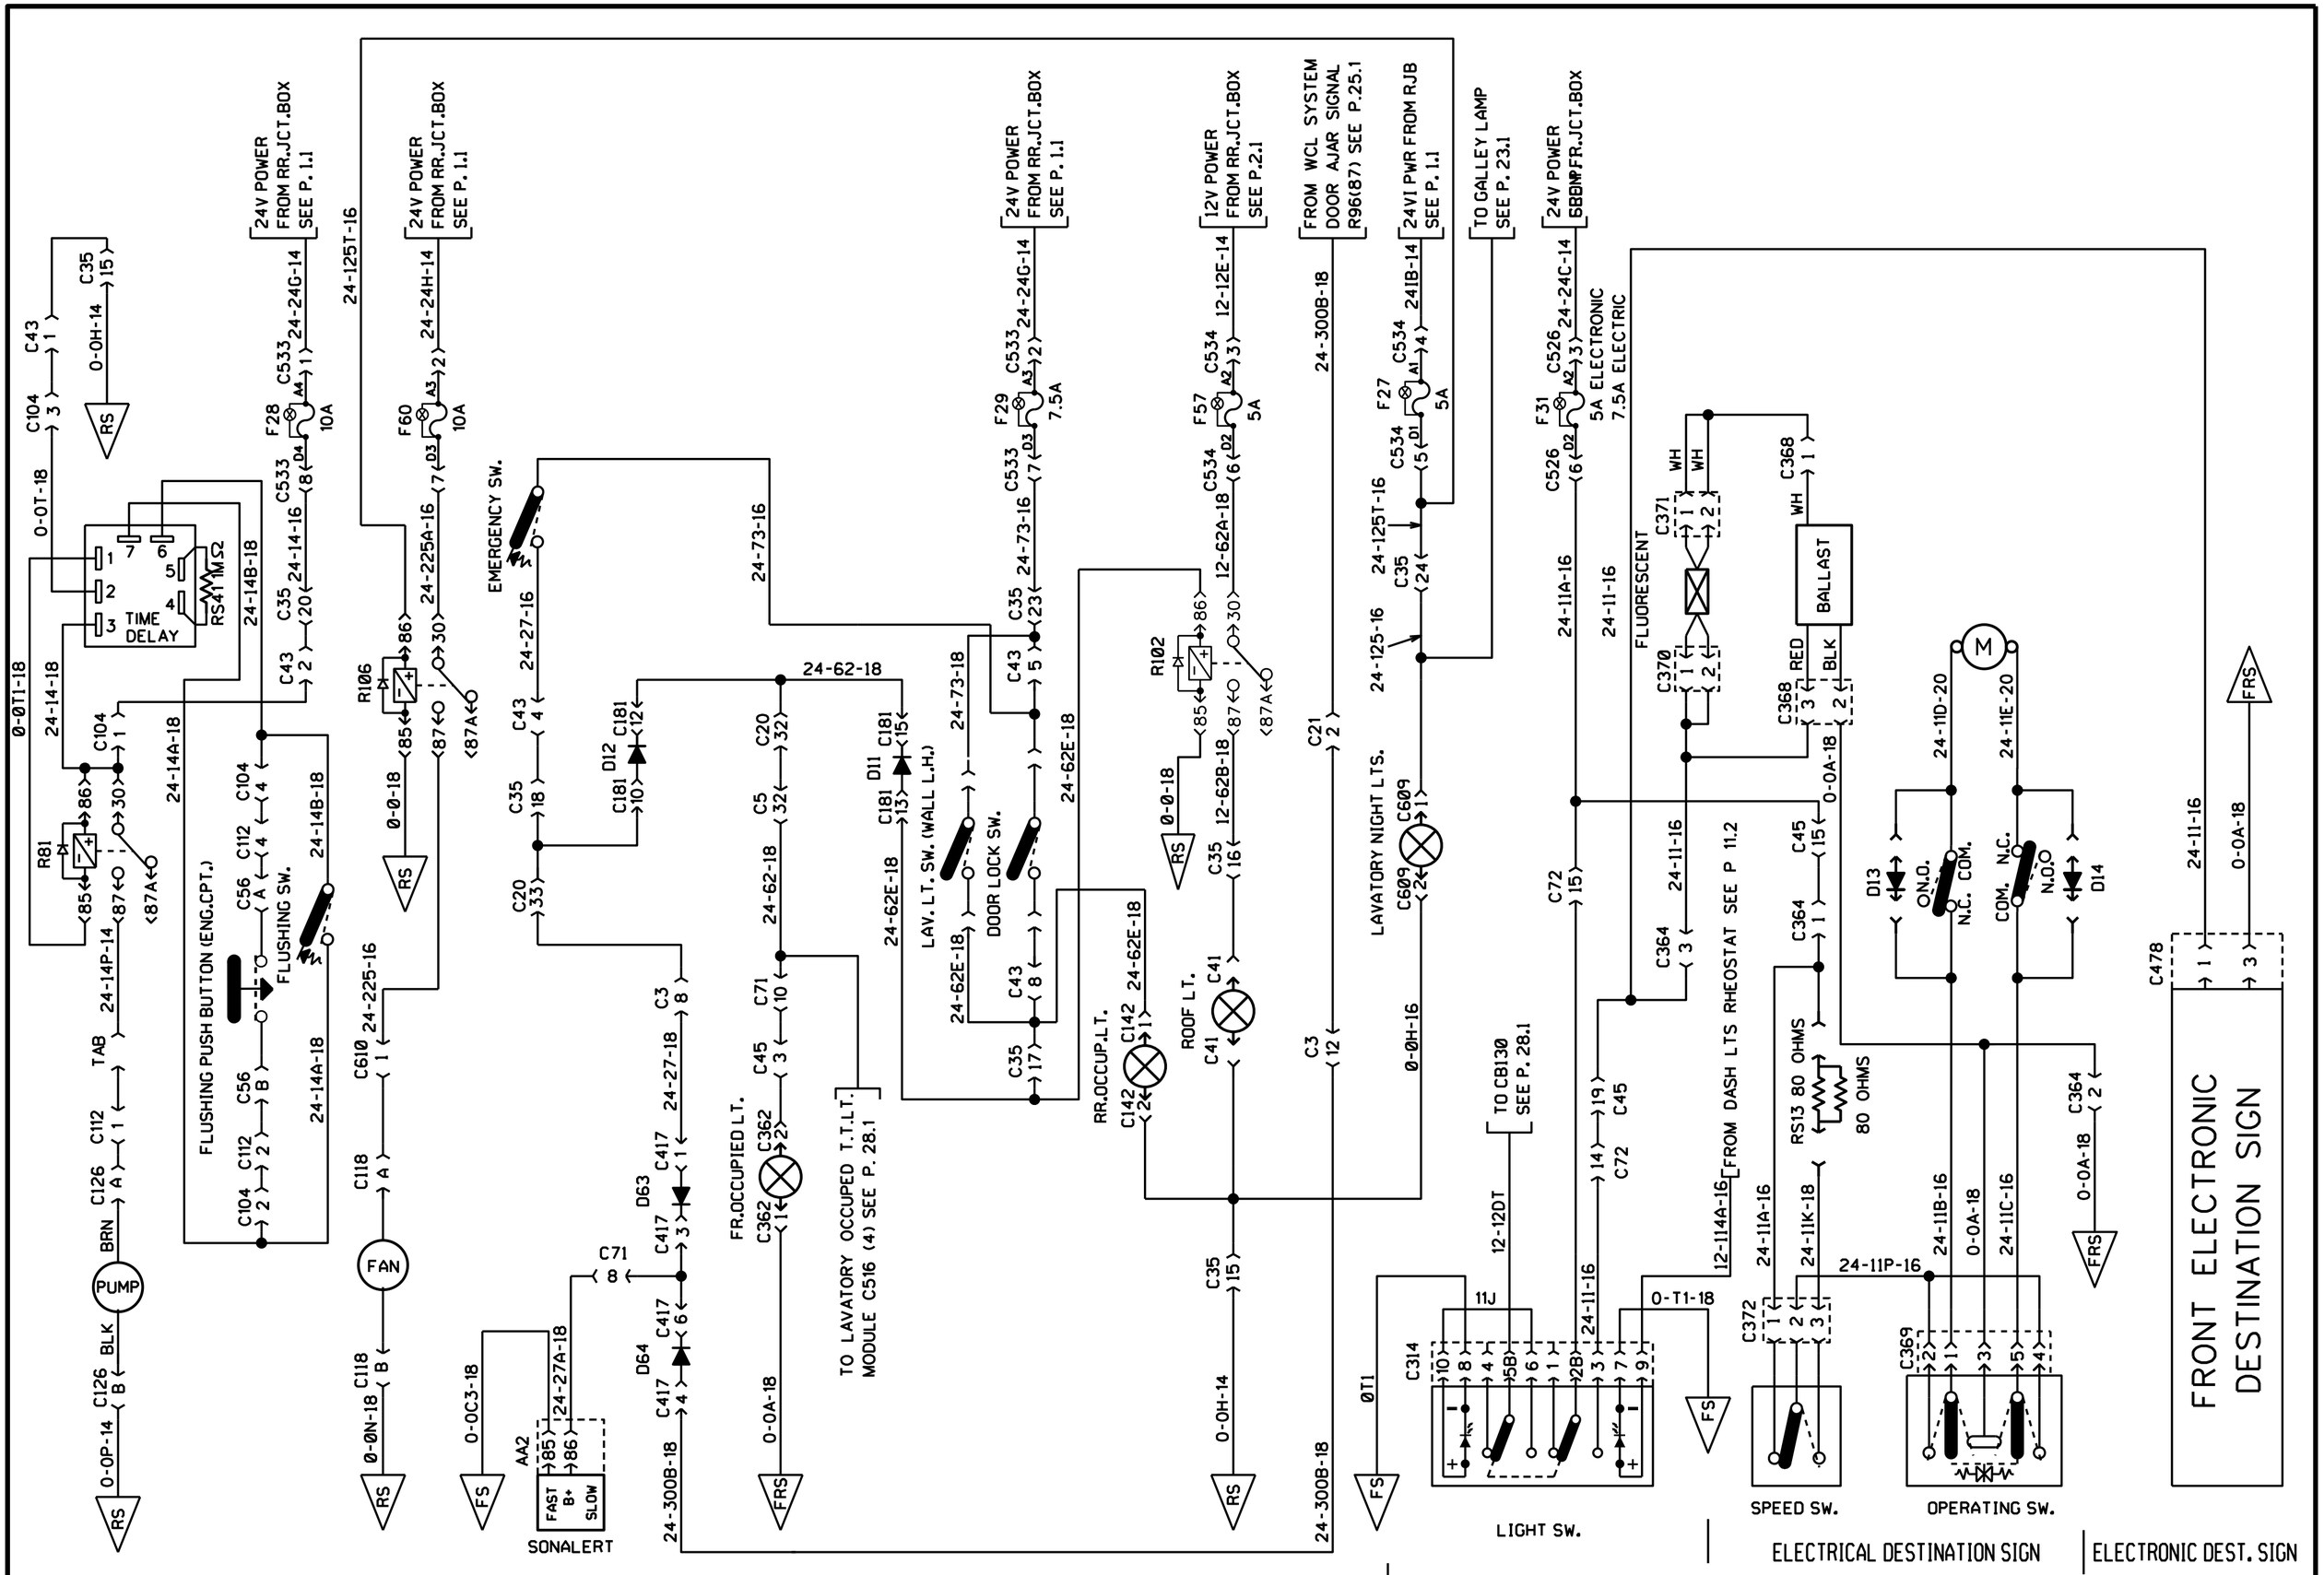
TIME DELAY
RS41MΩ
FLUSHING PUSH BUTTON (ENG.CPT.)
FLUSHING SW.
EMERGENCY SW.
PUMP
FAN
SONALERT
FAST B+ SLOW
FR.OCCUPIED LT.
TO LAVATORY OCCUPED T.T.L.T. MODULE C516 (4) SEE P. 28.1
LAV. LT. SW. (WALL L.H.)
DOOR LOCK SW.
RR.OCCUP.LT.
ROOF LT.
LAVATORY NIGHT LTS.
TO CB130 SEE P. 28.1
12-12DT
11J
LIGHT SW.
FROM DASH LTS RHEOSTAT SEE P 11.2
RS13 80 OHMS
80 OHMS
SPEED SW.
OPERATING SW.
FLUORESCENT
BALLAST
5A ELECTRONIC
7.5A ELECTRIC
FRONT ELECTRONIC DESTINATION SIGN
24V POWER FROM RR.JCT.BOX SEE P. 1.1
12V POWER FROM RR.JCT.BOX SEE P.2.1
FROM WCL SYSTEM DOOR AJAR SIGNAL R96(87) SEE P.25.1
24V PWR FROM RJB SEE P. 1.1
TO GALLEY LAMP SEE P. 23.1
24V POWER FROM FR.JCT.BOX
LAVATORY (SWITCH ADDED FOR LIGHT)
FRONT DESTINATION SIGN
ELECTRICAL DESTINATION SIGN
ELECTRONIC DEST. SIGN

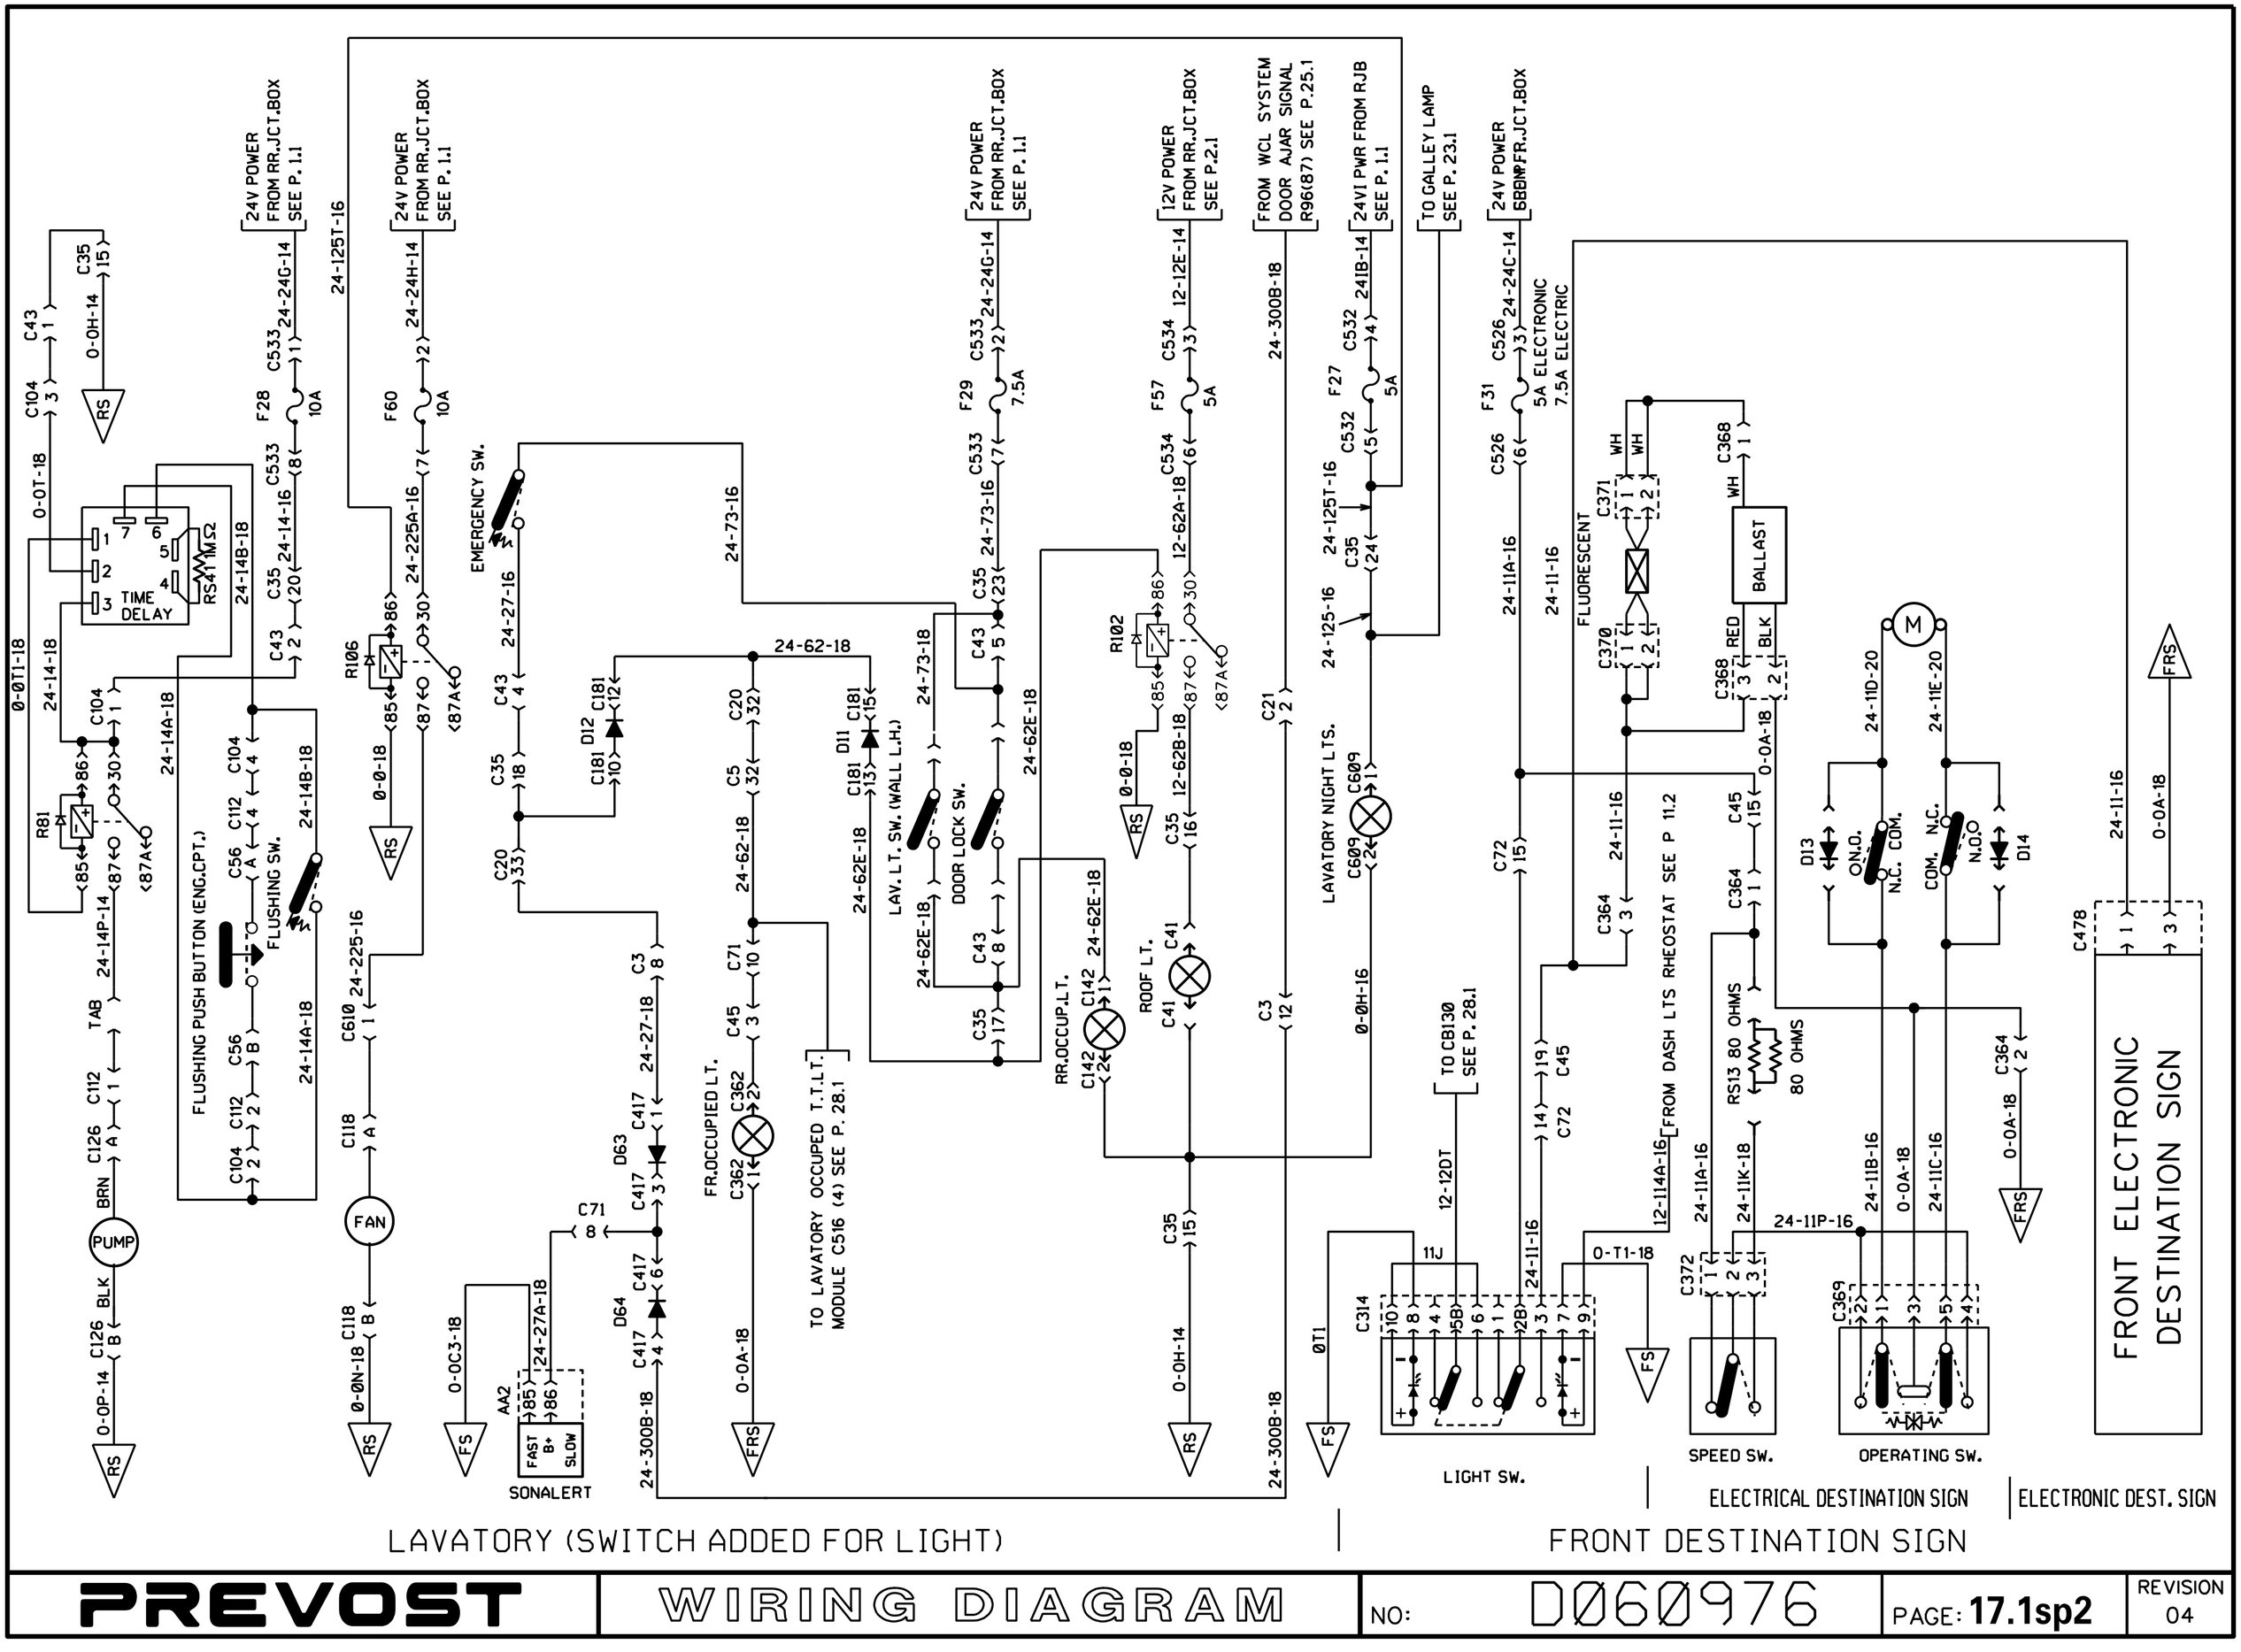
24V POWER FROM RR.JCT.BOX SEE P. 1.1
24V POWER FROM RR.JCT.BOX SEE P. 1.1
24V POWER FROM RR.JCT.BOX SEE P. 1.1
12V POWER FROM RR.JCT.BOX SEE P.2.1
FROM WCL SYSTEM DOOR AJAR SIGNAL R96(87) SEE P.25.1
24VI PWR FROM RJB SEE P. 1.1
TO GALLEY LAMP SEE P. 23.1
24V POWER FROM RR.JCT.BOX
5A ELECTRONIC
7.5A ELECTRIC
24-125T-16
EMERGENCY SW.
TIME DELAY
RS41 1MΩ
FLUSHING PUSH BUTTON (ENG.CPT.)
FLUSHING SW.
PUMP
FAN
SONALERT
FAST B+ SLOW
FR.OCCUPIED LT.
TO LAVATORY OCCUPED T.T.LT. MODULE C516 (4) SEE P. 28.1
LAV. LT. SW. (WALL L.H.)
DOOR LOCK SW.
RR.OCCUP.LT.
ROOF LT.
LAVATORY NIGHT LTS.
FLUORESCENT
BALLAST
TO CB130 SEE P. 28.1
12-12DT
FROM DASH LTS RHEOSTAT SEE P 11.2
RS13 80 OHMS
80 OHMS
LIGHT SW.
SPEED SW.
OPERATING SW.
N.O. N.C. COM.
FRONT ELECTRONIC DESTINATION SIGN
LAVATORY (SWITCH ADDED FOR LIGHT)
ELECTRICAL DESTINATION SIGN
ELECTRONIC DEST. SIGN
FRONT DESTINATION SIGN

PREVOST

WIRING DIAGRAM

NO: D060976

PAGE: 17.1SP3

REVISION 00

LAVATORY

FRONT DESTINATION SIGN (BALIOS)

ELECTRICAL DESTINATION SIGN

ELECTRONIC DEST. SIGN

0-0T1-18
R81
24-14-18
0-0T-18
C104 3
C43 1
C126 B
BLK
PUMP
BRN
C126 A
C112 1
TAB
24-14P-14
85
86
87
30
87A
C104 1
TIME DELAY
RS
0-0H-14
C35 15
0-0P-14
RS
0XA
C91 55
24-14A-18
FLUSHING PUSH BUTTON (ENG.CPT.)
RS41 1MΩ
C104 2
C112 2
C56 B
C56 A
C112 4
C104 4
FLUSHING SW.
24-14B-18
C43 2
C35 20
24-14-16
C533 8
F28
10A
C533 1
24-24G-14
24V POWER FROM RR.JCT.BOX SEE P. 1.1
24-125T-16
RS
0YA
C91 56
0-0N-18
C118 B
FAN
C118 A
C91 40
24-225-16
R106
RS
0-0-18
85
86
87
30
87A
24-225A-16
7
F60
10A
2
24-24H-14
24V POWER FROM RR.JCT.BOX SEE P. 1.1
FS
0-0C3-18
EMERGENCY SW.
AA2
SONALERT
FAST
B+
SLOW
85
86
24-27A-18
C71 8
C20 33
C35 18
C43 4
24-27-16
C181 10
D12
C181 12
D64
D63
24-300B-18
C417 4
C417 6
C417 3
C417 1
24-27-18
C3 8
FR.OCCUPIED LT.
FRS
0-0A-18
C362 1
C362 2
C45 3
C71 10
24-62-18
C5 32
C20 32
24-73-16
TO LAVATORY OCCUPED T.T.LT. MODULE C516 (4) SEE P. 28.1
24-62-18
24-62E-18
C181 13
D11
C181 15
DOOR LOCK SW.
C35 17
C43 8
C43 5
C35 23
24-73-16
C533 7
F29
7.5A
C533 2
24-24G-14
24V POWER FROM RR.JCT.BOX SEE P. 1.1
24-62E-18
RR.OCCUP.LT.
C142 2
C142 1
24-62E-18
RS
0-0-18
R102
85
86
ROOF LT.
RS
0-0H-14
C35 15
C41
C41
C35 16
12-62B-18
87
30
87A
12-62A-18
C534 6
F57
5A
C534 3
12-12E-14
12V POWER FROM RR.JCT.BOX SEE P.2.1
24-300B-18
C3 12
C20 39
24-300B-18
FROM WCL SYSTEM DOOR AJAR SIGNAL R96(87) SEE P.25.1
FS
0T1
C314
EMERGENCY SW.
10
8
4
5B
6
1
2B
3
7
9
11J
12-12DT
TO CB130 SEE P. 28.1
LAVATORY NIGHT LTS.
24-125-16
24-125T-16
0-0H-16
C609 2
C609 1
C35 24
C534 5
F27
5A
C534 4
24IB-14
24VI PWR FROM RJB SEE P. 1.1
TO GALLEY LAMP SEE P. 23.1
0-11-16
14
C72
19
C45
C45 15
24-11A-16
C526 6
F31
10A
C526 3
24-24D-14
24V HOT WIRE FROM FR.JCT.BOX JCT BLOCK SEE P. 1
0-11-16
24-83
C5 2
24-83
FROM MASTER KEY SW. SEE P. 4.1
SP42-16
0-T1-18
FS
12-114A-16
FROM DASH LTS RHEOSTAT SEE P 11.2
24-11A-16
24-83-16
FRS
0-0A-18
0-J5
24-J4
24-J6
FRONT ELECTRONIC DESTINATION SIGN
HARNESS •940069
0-J3
HARNESS •940070
SIDE ELECTRONIC DESTINATION SIGN
CONSOL

PREVOST | WIRING DIAGRAM | KNEELING SYSTEM | HI BUOY | LOW BUOY | NO: D060976 | PAGE: 18.1 | REVISION 00

ENTRANCE DOOR OPEN SIGNAL SEE P. 16.1

24VI 5 MPH NC SIGNAL FROM RR. JCT. BOX SPEED CON. C475(5) SEE P.15.1

FROM DASH LTS RHEOST. SEE P 11.2

24V POWER FROM FR.JCT.BOX SEE P.1.1

WCL DOOR AJAR SIGNAL FROM RR JCT BOX RLY R97(87) SEE P. 25.1

TO RH FR. SIDE DIRECT. LT R37 (86) SEE P.9.2

TO KNEELING T.T.LT. MODULE C516 (11) SEE P. 28.1

24V HOT WIRE POWER FROM FR. JCT BOX CB85 SEE P. 22.1

KNEELING SW.

PROXIMITY SWITCH
N.O.: NORMAL & UP POSITION
N.C.: WHEN DOWN

PRESS.SW 15-30

PARK.BRAKE SOL.VAL.

UP SOL.VAL.

EXHAUST SOL.VAL. (DOWN)

KNEELING CTR.SOL.VAL. (BELLOWS)

REAR HIGH BUOY SOL. VALVE

LOW BUOY CONTROL VALVE

KNEEL. WARN. AUDIBLE

PIEZO

F33 5A

R90 R43 R44

D58 D16 D21 D81 D77 D15 D70 D71 D73 D72

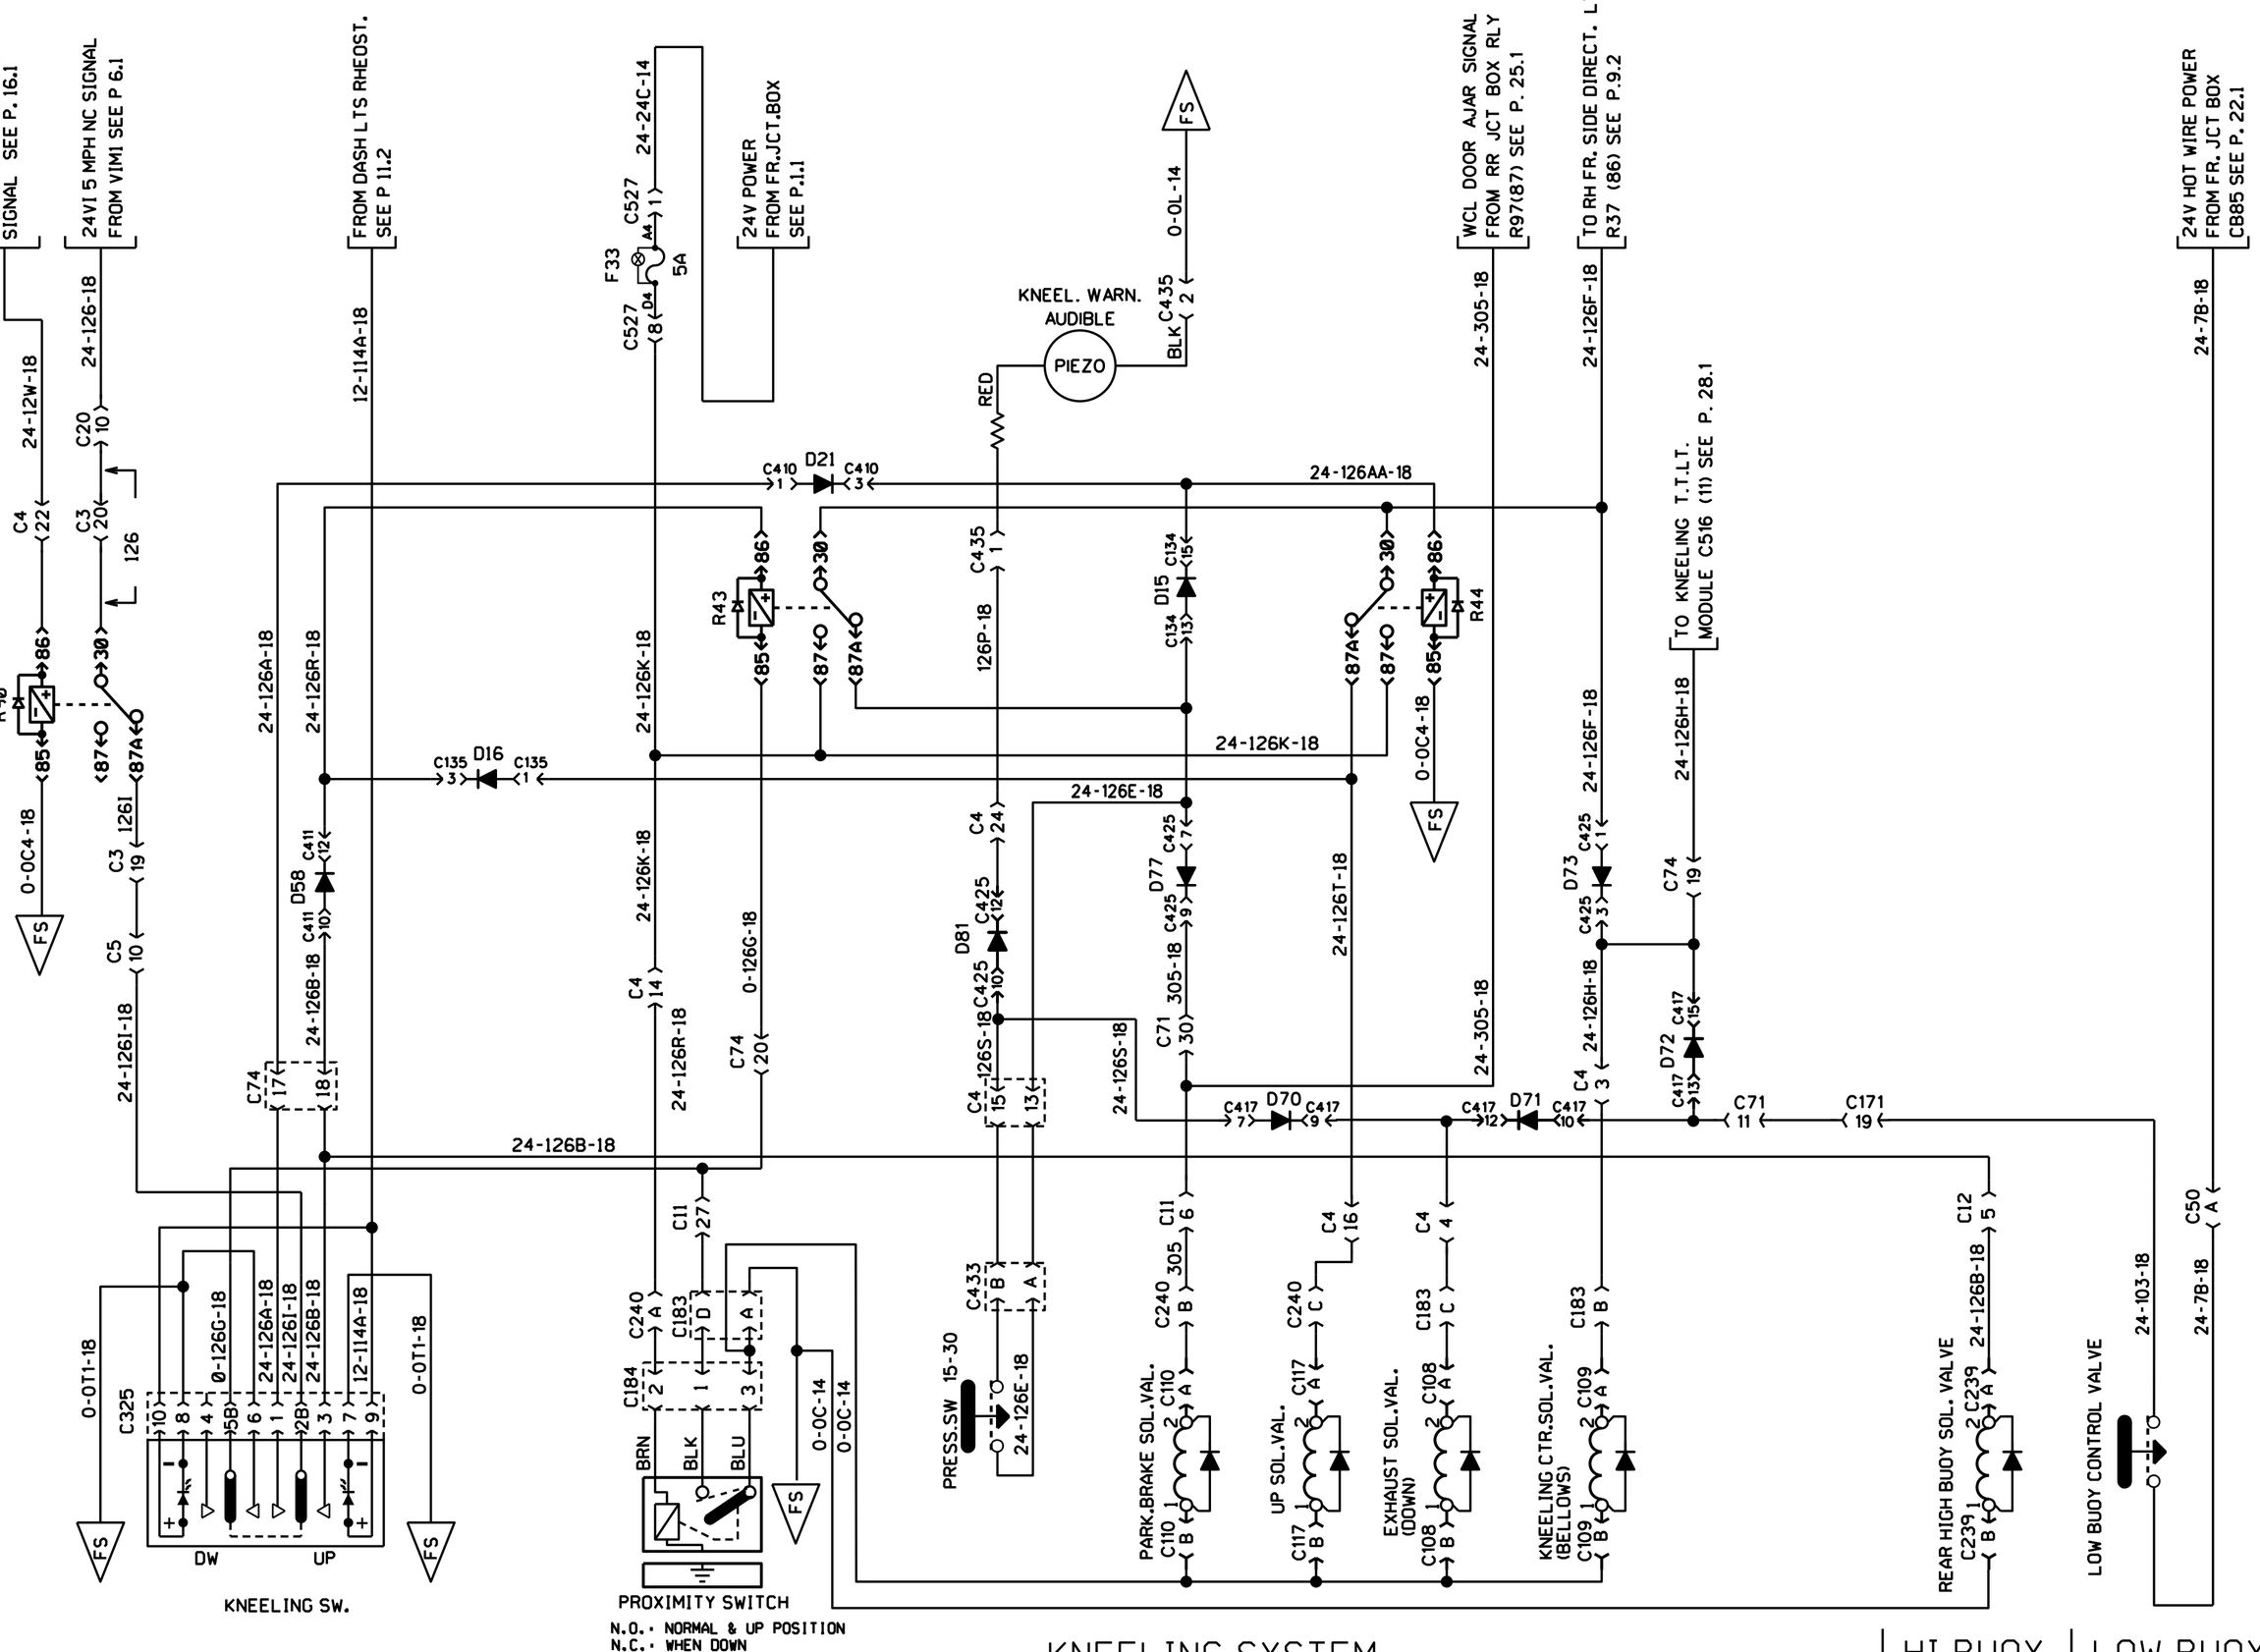
ENTRANCE DOOR OPEN SIGNAL SEE P. 16.1
24VI 5 MPH NC SIGNAL FROM VIMI SEE P 6.1
FROM DASH LTS RHEOST. SEE P 11.2
24V POWER FROM FR.JCT.BOX SEE P.1.1
WCL DOOR AJAR SIGNAL FROM RR JCT BOX RLY R97(87) SEE P. 25.1
TO RH FR. SIDE DIRECT. LT R37 (86) SEE P.9.2
24V HOT WIRE POWER FROM FR. JCT BOX CB85 SEE P. 22.1
TO KNEELING T.T.L.T. MODULE C516 (11) SEE P. 28.1
KNEEL. WARN. AUDIBLE
PIEZO
F33
5A
R90
R43
R44
D15
D16
D21
D58
D81
D77
D73
D72
D70
D71
24-24C-14
24-12W-18
24-126-18
12-114A-18
24-126A-18
24-126R-18
24-126K-18
24-126AA-18
24-126E-18
24-126T-18
24-126F-18
24-126H-18
24-126S-18
24-126I-18
24-126B-18
24-305-18
24-7B-18
0-OC4-18
0-OL-14
0-126G-18
0-OC-14
0-OT1-18
126P-18
24-103-18
KNEELING SW.
DW
UP
PROXIMITY SWITCH
N.O.: NORMAL & UP POSITION
N.C.: WHEN DOWN
PRESS.SW 15-30
PARK.BRAKE SOL.VAL.
UP SOL.VAL.
EXHAUST SOL.VAL. (DOWN)
KNEELING CTR.SOL.VAL. (BELLOWS)
REAR HIGH BUOY SOL. VALVE
LOW BUOY CONTROL VALVE
KNEELING SYSTEM
HI BUOY
LOW BUOY

ENTRANCE DOOR OPEN SIGNAL SEE P. 16.1

24VI 5 MPH NC SIGNAL FROM VIM1 SEE P 6.1

FROM DASH LTS RHEOST. SEE P 11.2

24V POWER FROM FR.JCT.BOX SEE P.1.1

WCL DOOR AJAR SIGNAL FROM RR JCT BOX RLY R97(87) SEE P. 25.1

TO RH FR. SIDE DIRECT. LT R37 (86) SEE P.9.2

24V HOT WIRE POWER FROM FR. JCT BOX CB85 SEE P. 22.1

TO KNEELING T.T.LT. MODULE C516 (11) SEE P. 28.1

KNEEL. WARN. AUDIBLE

PIEZO

RED

F33 5A

R90

R43

R44

D21

D16

D58

D81

D15

D77

D73

D72

D70

D71

24-24C-14

24-12W-18

24-126-18

24-126A-18

24-126R-18

24-126K-18

24-126B-18

24-126E-18

24-126T-18

24-126S-18

24-126AA-18

24-126H-18

24-305-18

24-126F-18

24-126G-18

24-126I-18

24-12I-18

24-7B-18

24-103-18

12-114A-18

0-0C4-18

0-0L-14

0-0T1-18

0-0C-14

126P-18

126D

126I

305-18

PARK.BRAKE PRESS. SW NC SEE P 8.1SP1

PRESS.SW 15-30

KNEELING SW.

DW

UP

PROXIMITY SWITCH

N.O.- NORMAL & UP POSITION
N.C.- WHEN DOWN

PARK.BRAKE SOL.VAL.

UP SOL.VAL.

EXHAUST SOL.VAL. (DOWN)

KNEELING CTR.SOL.VAL. (BELLOWS)

REAR HIGH BUOY SOL. VALVE

LOW BUOY CONTROL VALVE

FS

KNEELING SYSTEM

HI BUOY | LOW BUOY

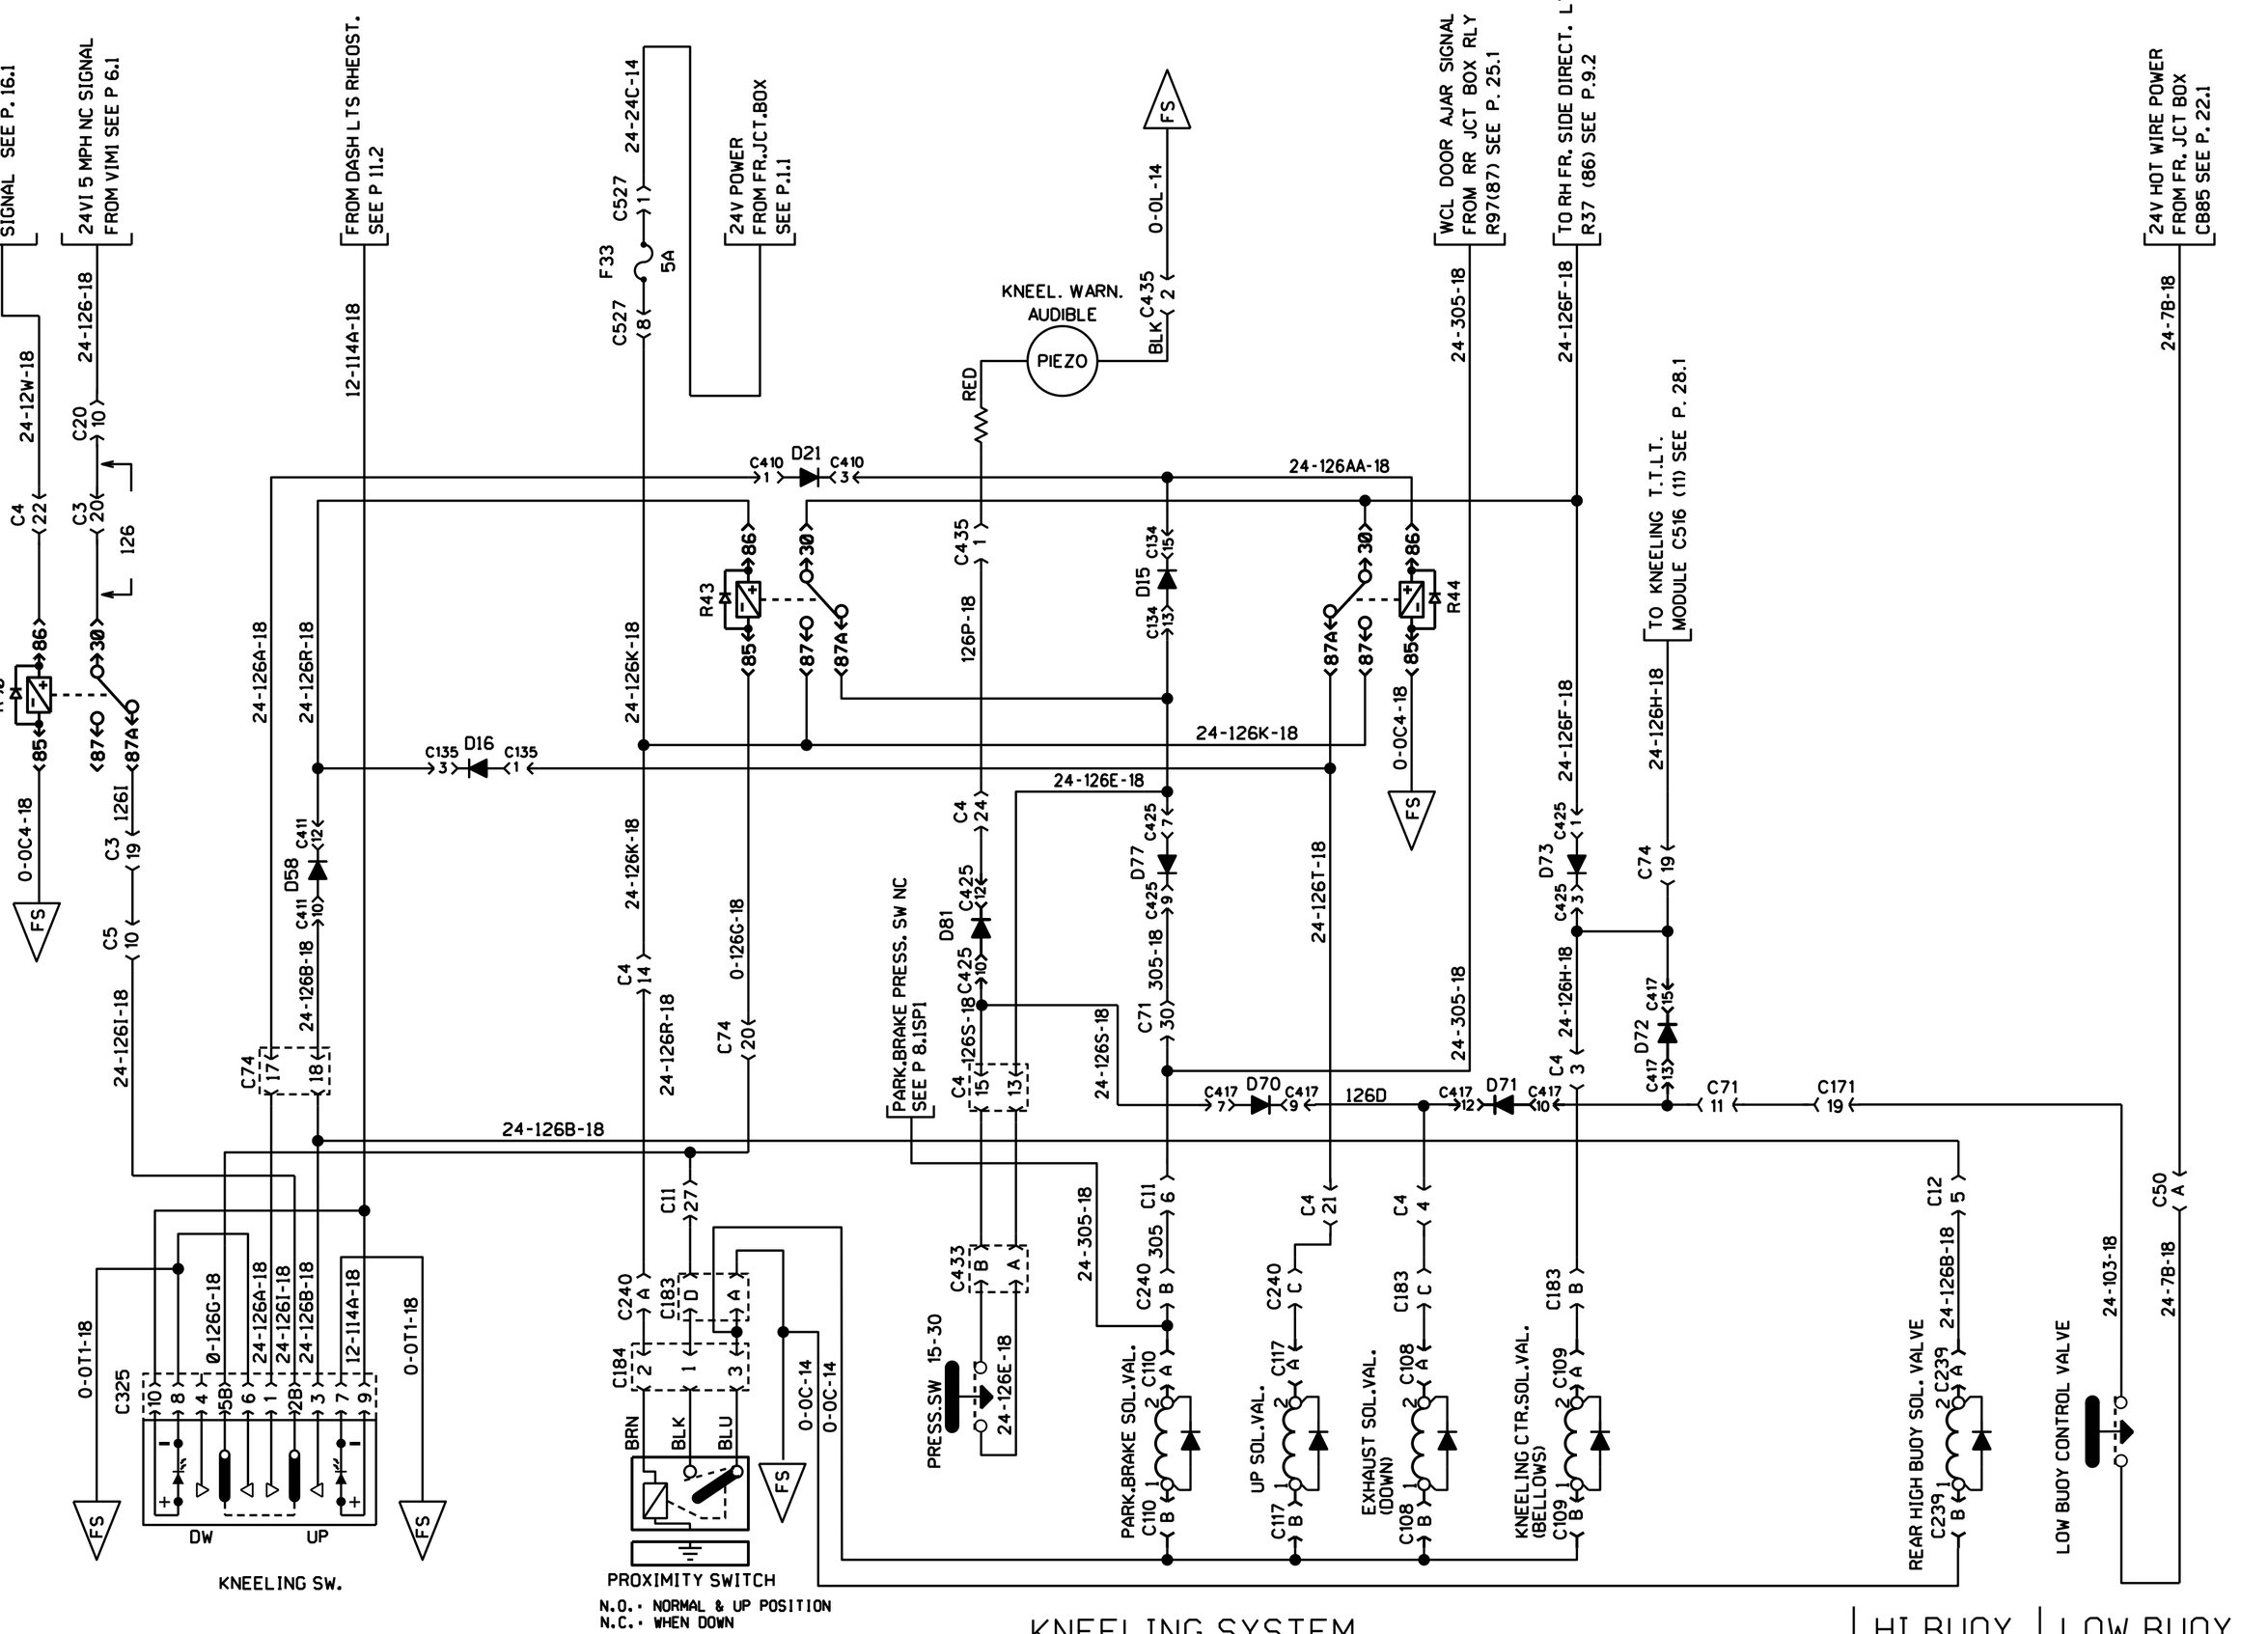
ENTRANCE DOOR OPEN SIGNAL SEE P. 16.1
24VI 5 MPH NC SIGNAL FROM VIMI SEE P 6.1
FROM DASH LTS RHEOST. SEE P 11.2
24V POWER FROM FR.JCT.BOX SEE P.1.1
KNEEL. WARN. AUDIBLE
PIEZO
WCL DOOR AJAR SIGNAL FROM RR JCT BOX RLY R97(87) SEE P. 25.1
TO RH FR. SIDE DIRECT. LT R37 (86) SEE P.9.2
24V HOT WIRE POWER FROM FR. JCT BOX CB85 SEE P. 22.1
TO KNEELING T.T.L.T. MODULE C516 (11) SEE P. 28.1
PARK.BRAKE PRESS. SW NC SEE P 8.1SP1
KNEELING SW.
PROXIMITY SWITCH
N.O.- NORMAL & UP POSITION
N.C.- WHEN DOWN
PRESS.SW
PARK.BRAKE SOL.VAL.
UP SOL.VAL.
EXHAUST SOL.VAL. (DOWN)
KNEELING CTR.SOL.VAL. (BELLOWS)
REAR HIGH BUOY SOL. VALVE
LOW BUOY CONTROL VALVE
KNEELING SYSTEM
HI BUOY
LOW BUOY

FROM 24 VI
CB 27
SEE P.1.1

C608 (B) (A) CONNECTOR SPARE C608
SEE P 6.1

0-20T-20
16T-20
24-188-20
24-24VI-18

C169 (14) (4) (15) (13) (1) (9) (6) (12)
GROUND
SIGNAL IN
20 MPH N/C
SIGNAL OUT
5 MPH N/O
5 MPH N/C
24DC
24DC
SPEED SWITCH

24-188-28
24-188A-18
0L5-18
12-114A-18

C280 (10) (8) (4) (5B) (6) (1) (2B) (3) (7) (9)
TAG UNLOAD SW.

PITMAN ARM SW.
COM. N.O.

24-188B-18
24-SP11-16
24-188B-18
C91 (26)

C141 (2) (1)
114A-18
0L5-18
FS
DASH LTS. RHEOSTAT
SEE P.11.2

C122 (A) (B)
24-175C-18
OR-14
OR-18
24-175C-18

C123 UNLOAD VALVE C123
RED (A) 2
BLK (B) 1

CHASSIS GROUND
CHASSIS GROUND

UNLOAD TAG SYSTEM

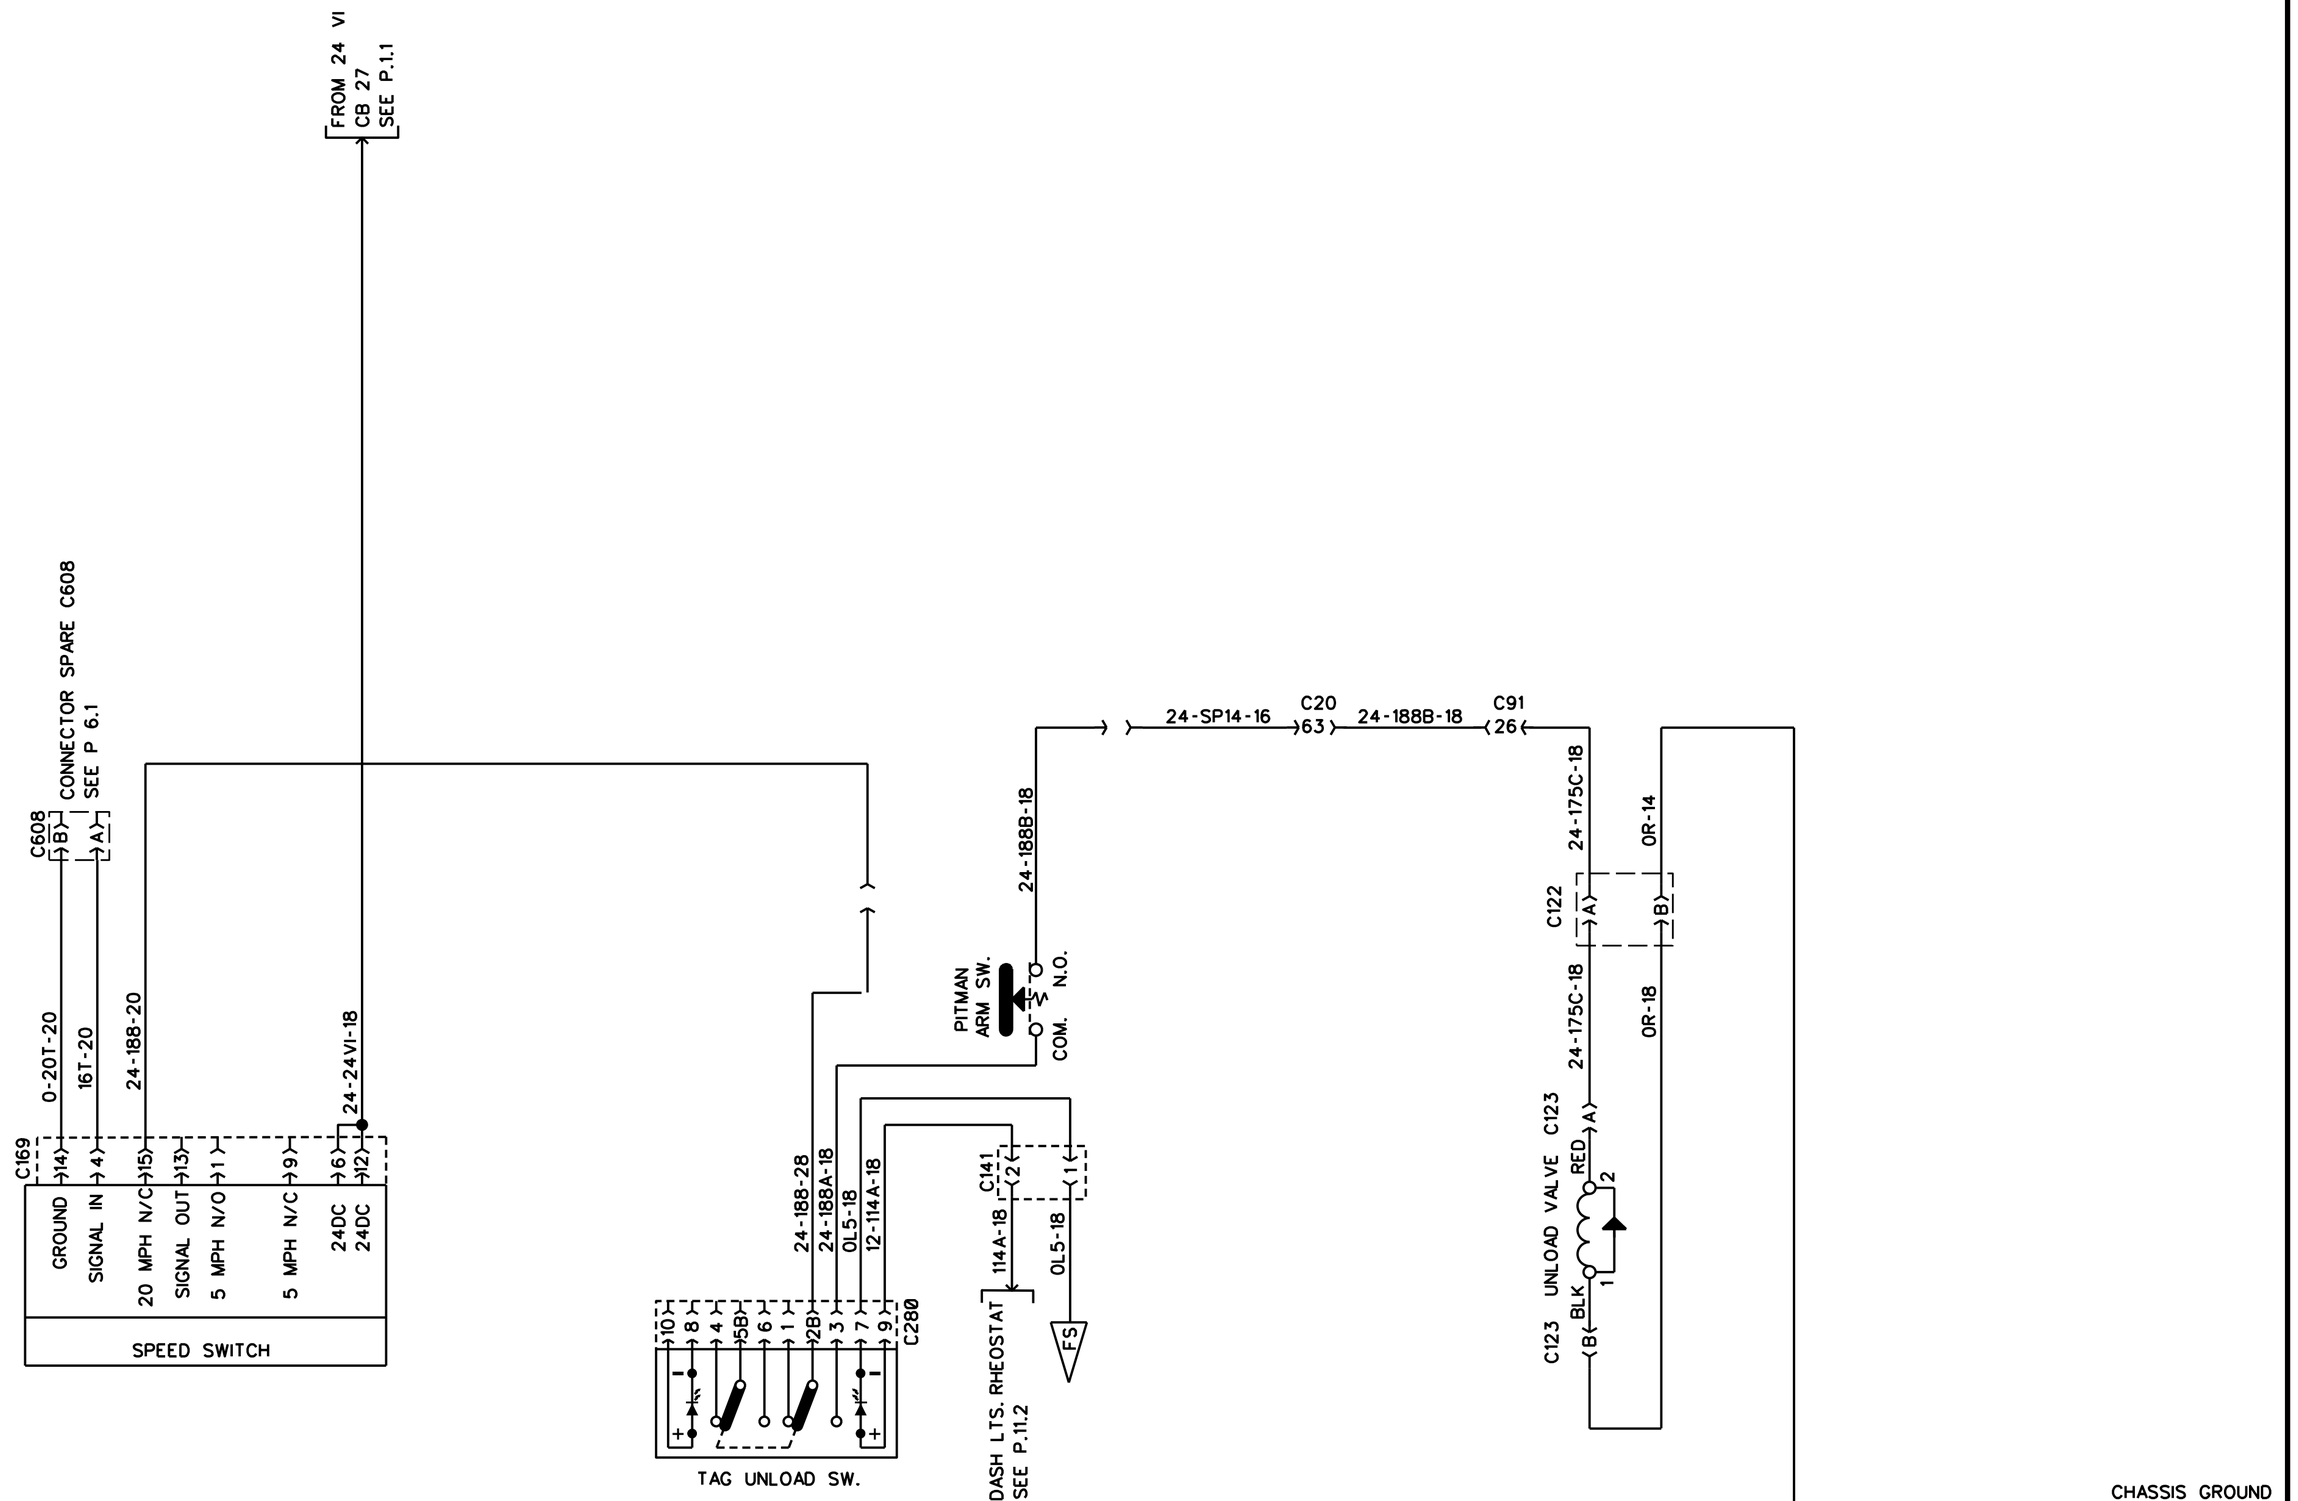

UNLOAD TAG SYSTEM

C310

LOCKED UNLOCKED

24-170E-18
24-170-18
24-170H-18

12-114A-18

FS

LUGGAGE DOOR LOCK

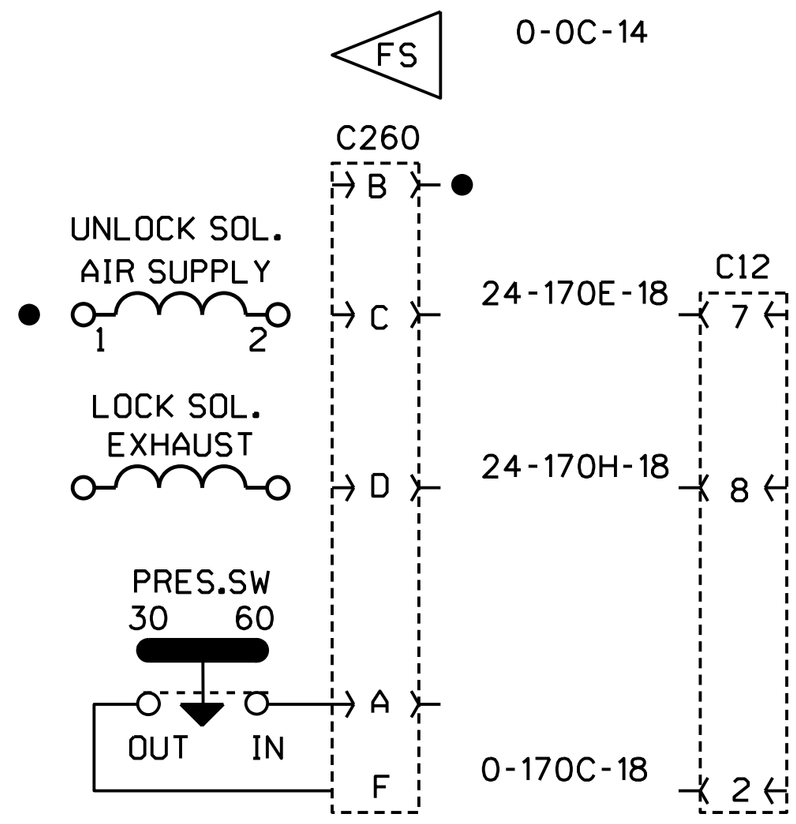

12-114A-18

0-0T1-18

37

3A

24-24C-14

24V POWER
FROM FR.JCT.BOX

LUGGAGE DOOR LOCK

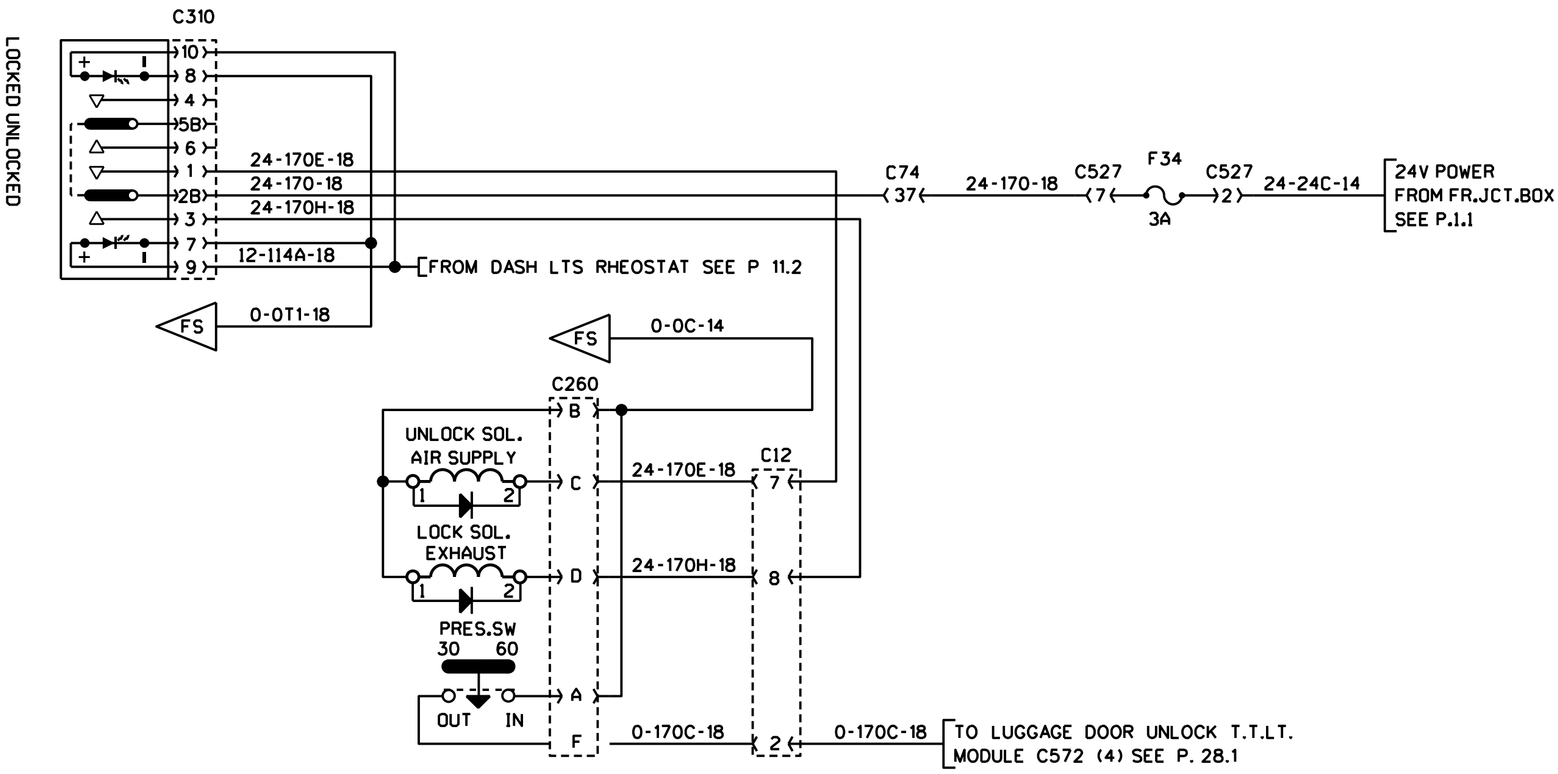

ENGINE BRAKE SYSTEM

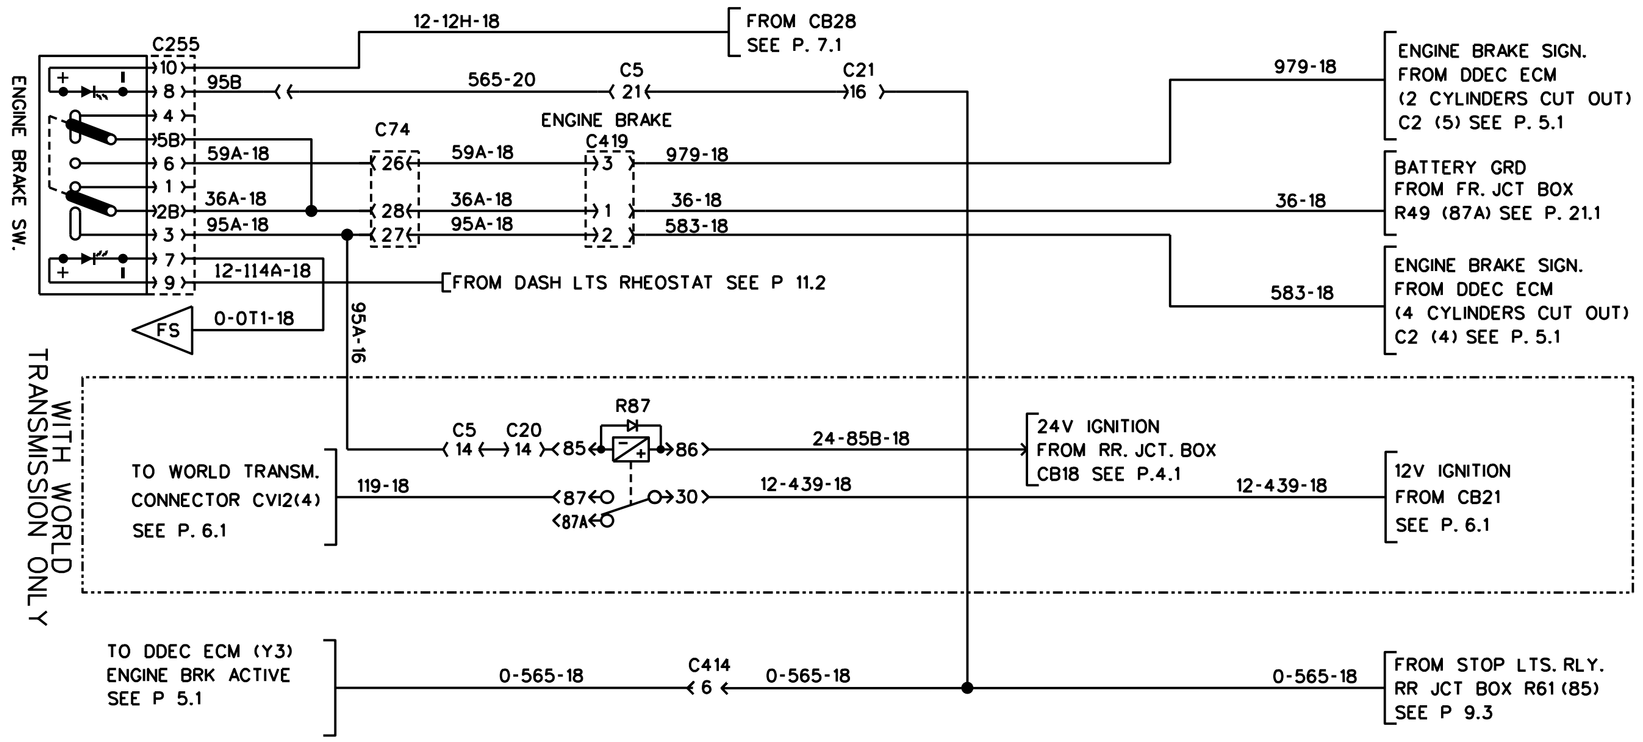

RETARDER SYSTEM (WORLD TRANSMISSION)

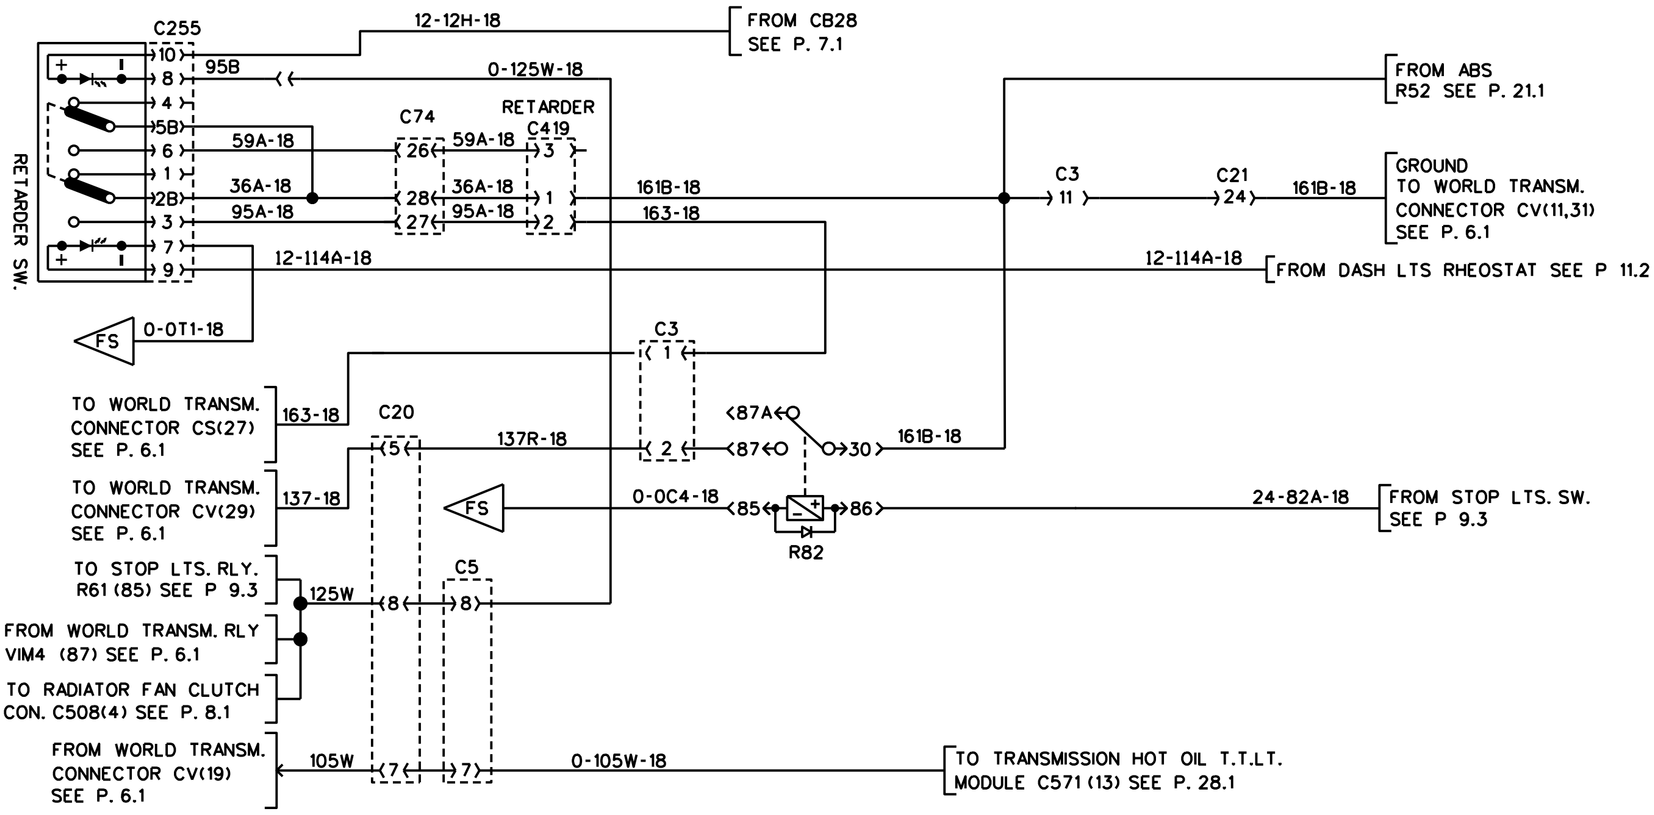

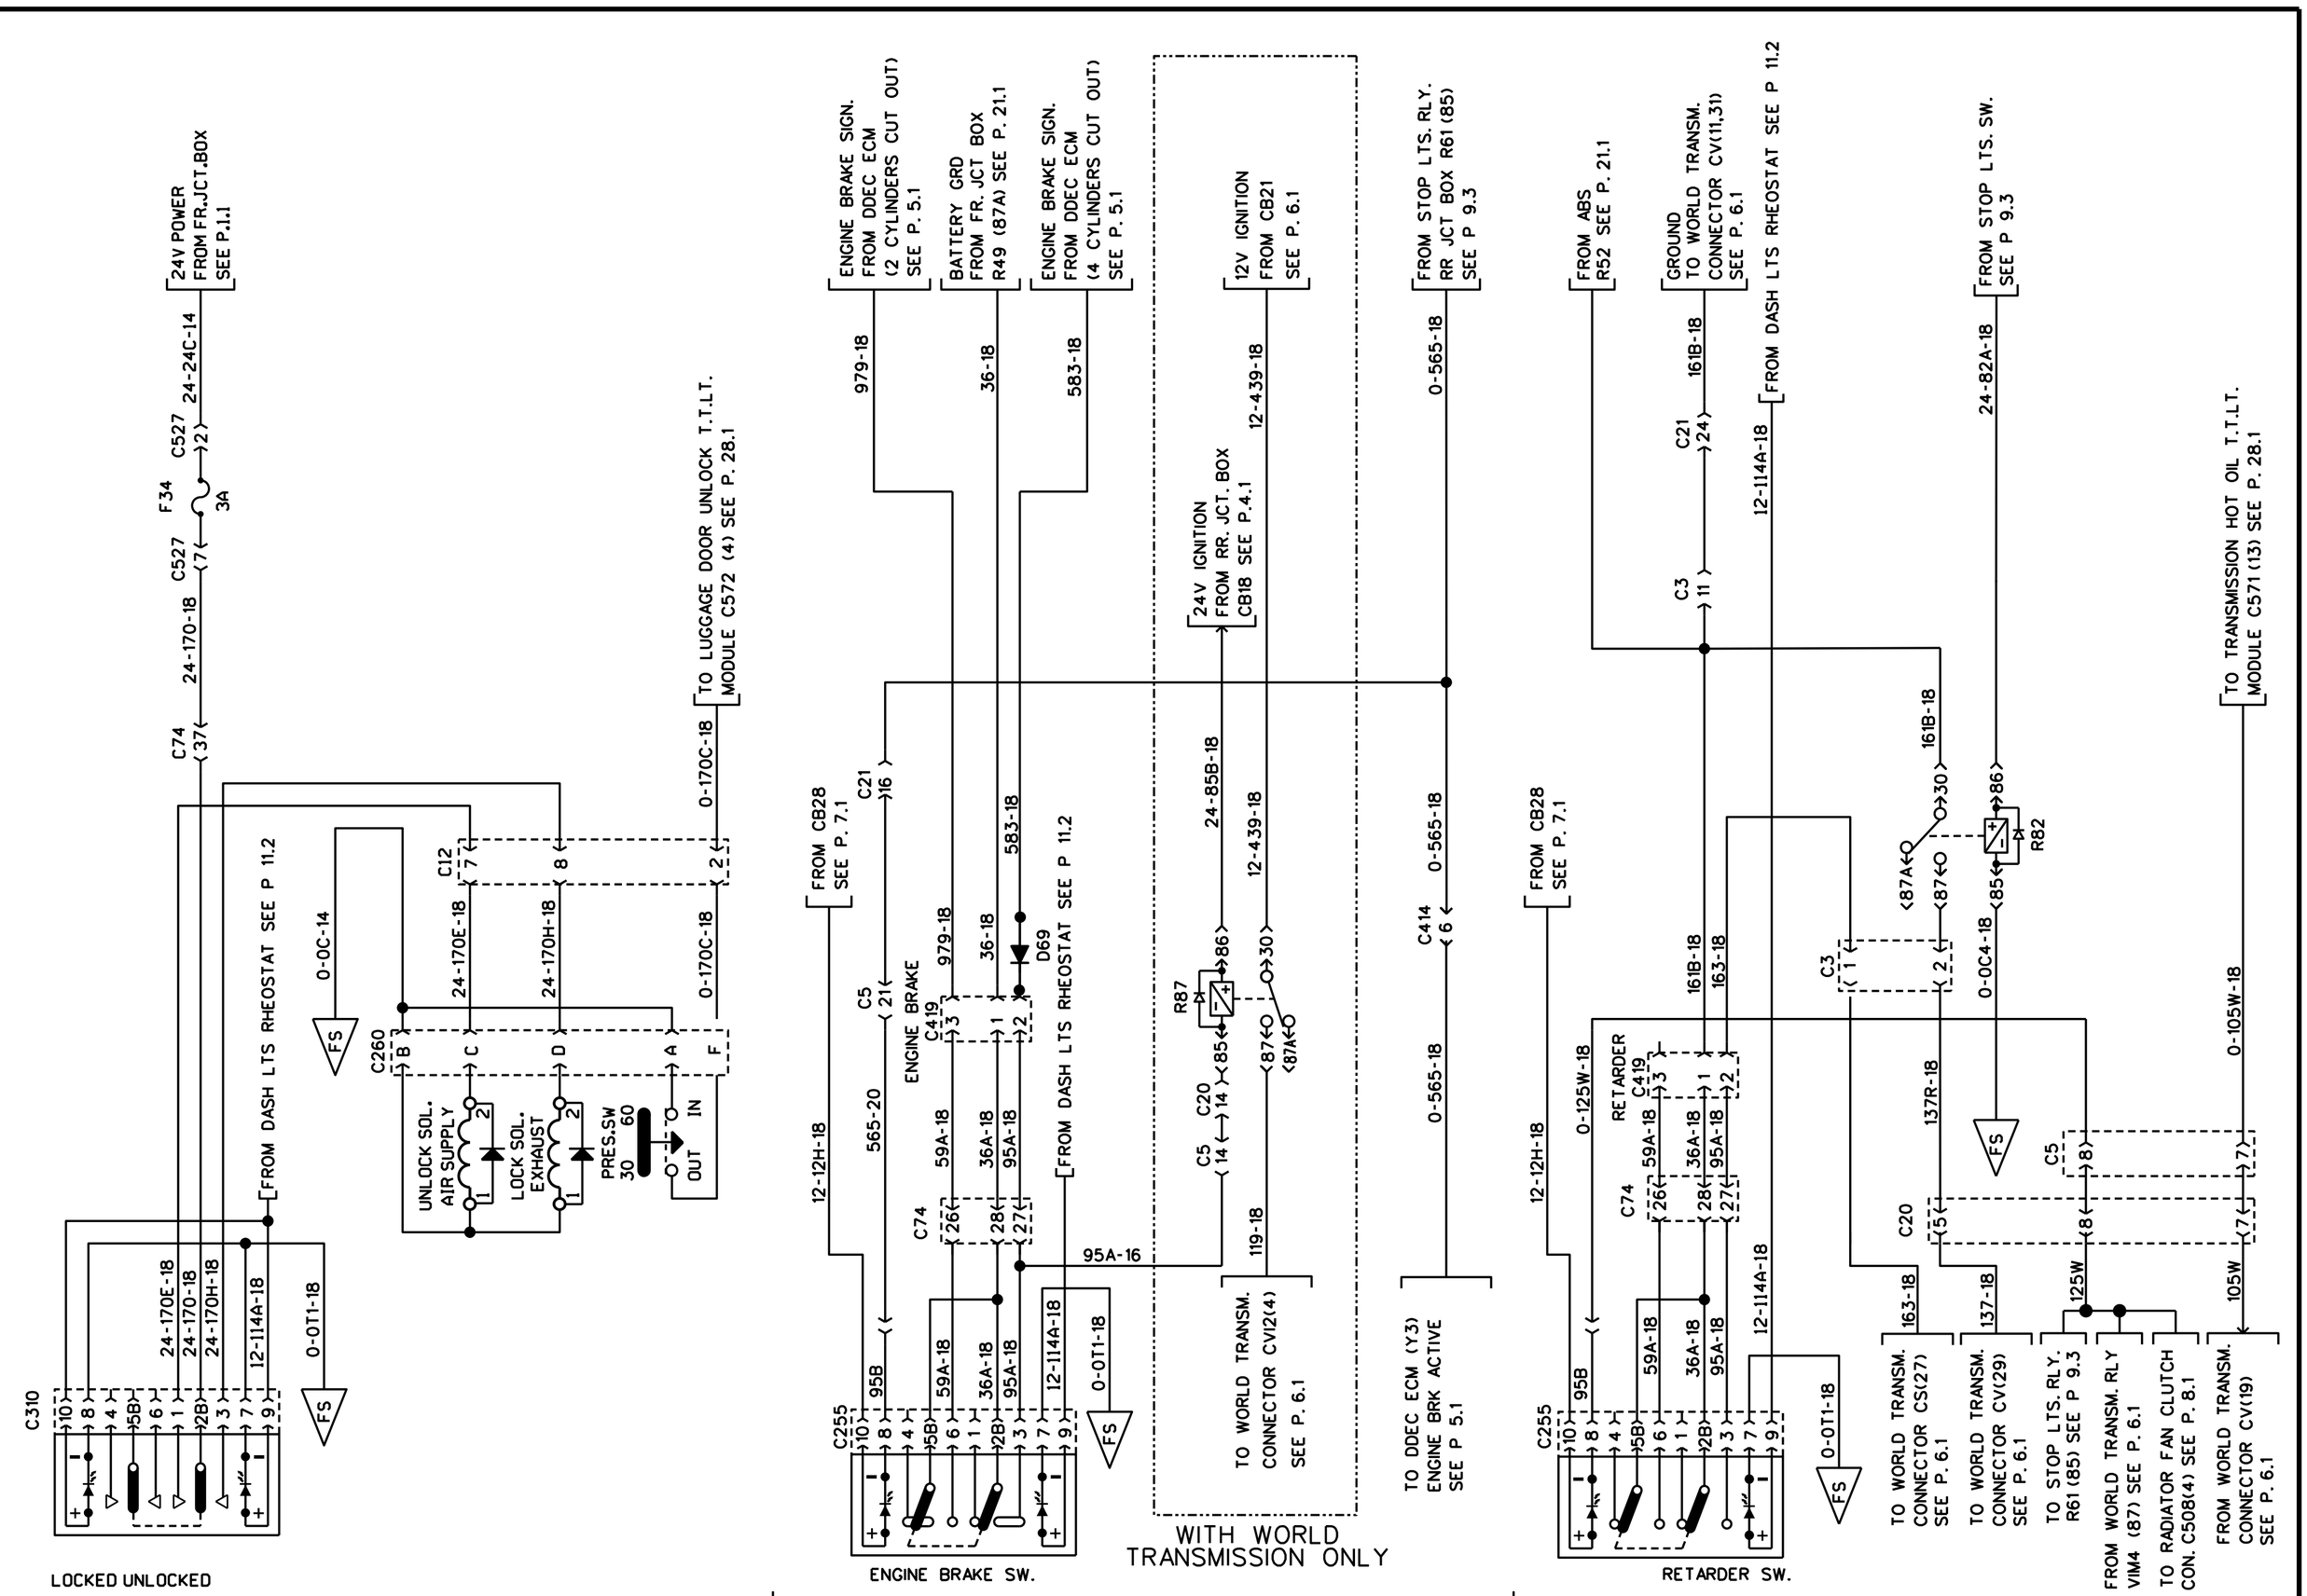
LUGGAGE DOOR LOCK
ENGINE BRAKE SYSTEM
RETARDER SYSTEM
(WORLD TRANSMISSION)
LOCKED UNLOCKED
ENGINE BRAKE SW.
RETARDER SW.
WITH WORLD TRANSMISSION ONLY
FROM DASH LTS RHEOSTAT SEE P 11.2
TO LUGGAGE DOOR UNLOCK T.T.LT. MODULE C572 (4) SEE P. 28.1
24V POWER FROM FR.JCT.BOX SEE P.1.1
ENGINE BRAKE SIGN. FROM DDEC ECM (2 CYLINDERS CUT OUT) SEE P. 5.1
BATTERY GRD FROM FR. JCT BOX R49 (87A) SEE P. 21.1
ENGINE BRAKE SIGN. FROM DDEC ECM (4 CYLINDERS CUT OUT) SEE P. 5.1
24V IGNITION FROM RR. JCT. BOX CB18 SEE P.4.1
12V IGNITION FROM CB21 SEE P. 6.1
FROM STOP LTS. RLY. RR JCT BOX R61 (85) SEE P 9.3
FROM ABS R52 SEE P. 21.1
GROUND TO WORLD TRANSM. CONNECTOR CV(11,31) SEE P. 6.1
FROM STOP LTS. SW. SEE P 9.3
TO TRANSMISSION HOT OIL T.T.LT. MODULE C571 (13) SEE P. 28.1
FROM CB28 SEE P. 7.1
TO WORLD TRANSM. CONNECTOR CV12(4) SEE P. 6.1
TO DDEC ECM (Y3) ENGINE BRK ACTIVE SEE P 5.1
TO WORLD TRANSM. CONNECTOR CS(27) SEE P. 6.1
TO WORLD TRANSM. CONNECTOR CV(29) SEE P. 6.1
TO STOP LTS. RLY. R61 (85) SEE P 9.3
FROM WORLD TRANSM. RLY VIM4 (87) SEE P. 6.1
TO RADIATOR FAN CLUTCH CON. C508(4) SEE P. 8.1
FROM WORLD TRANSM. CONNECTOR CV(19) SEE P. 6.1

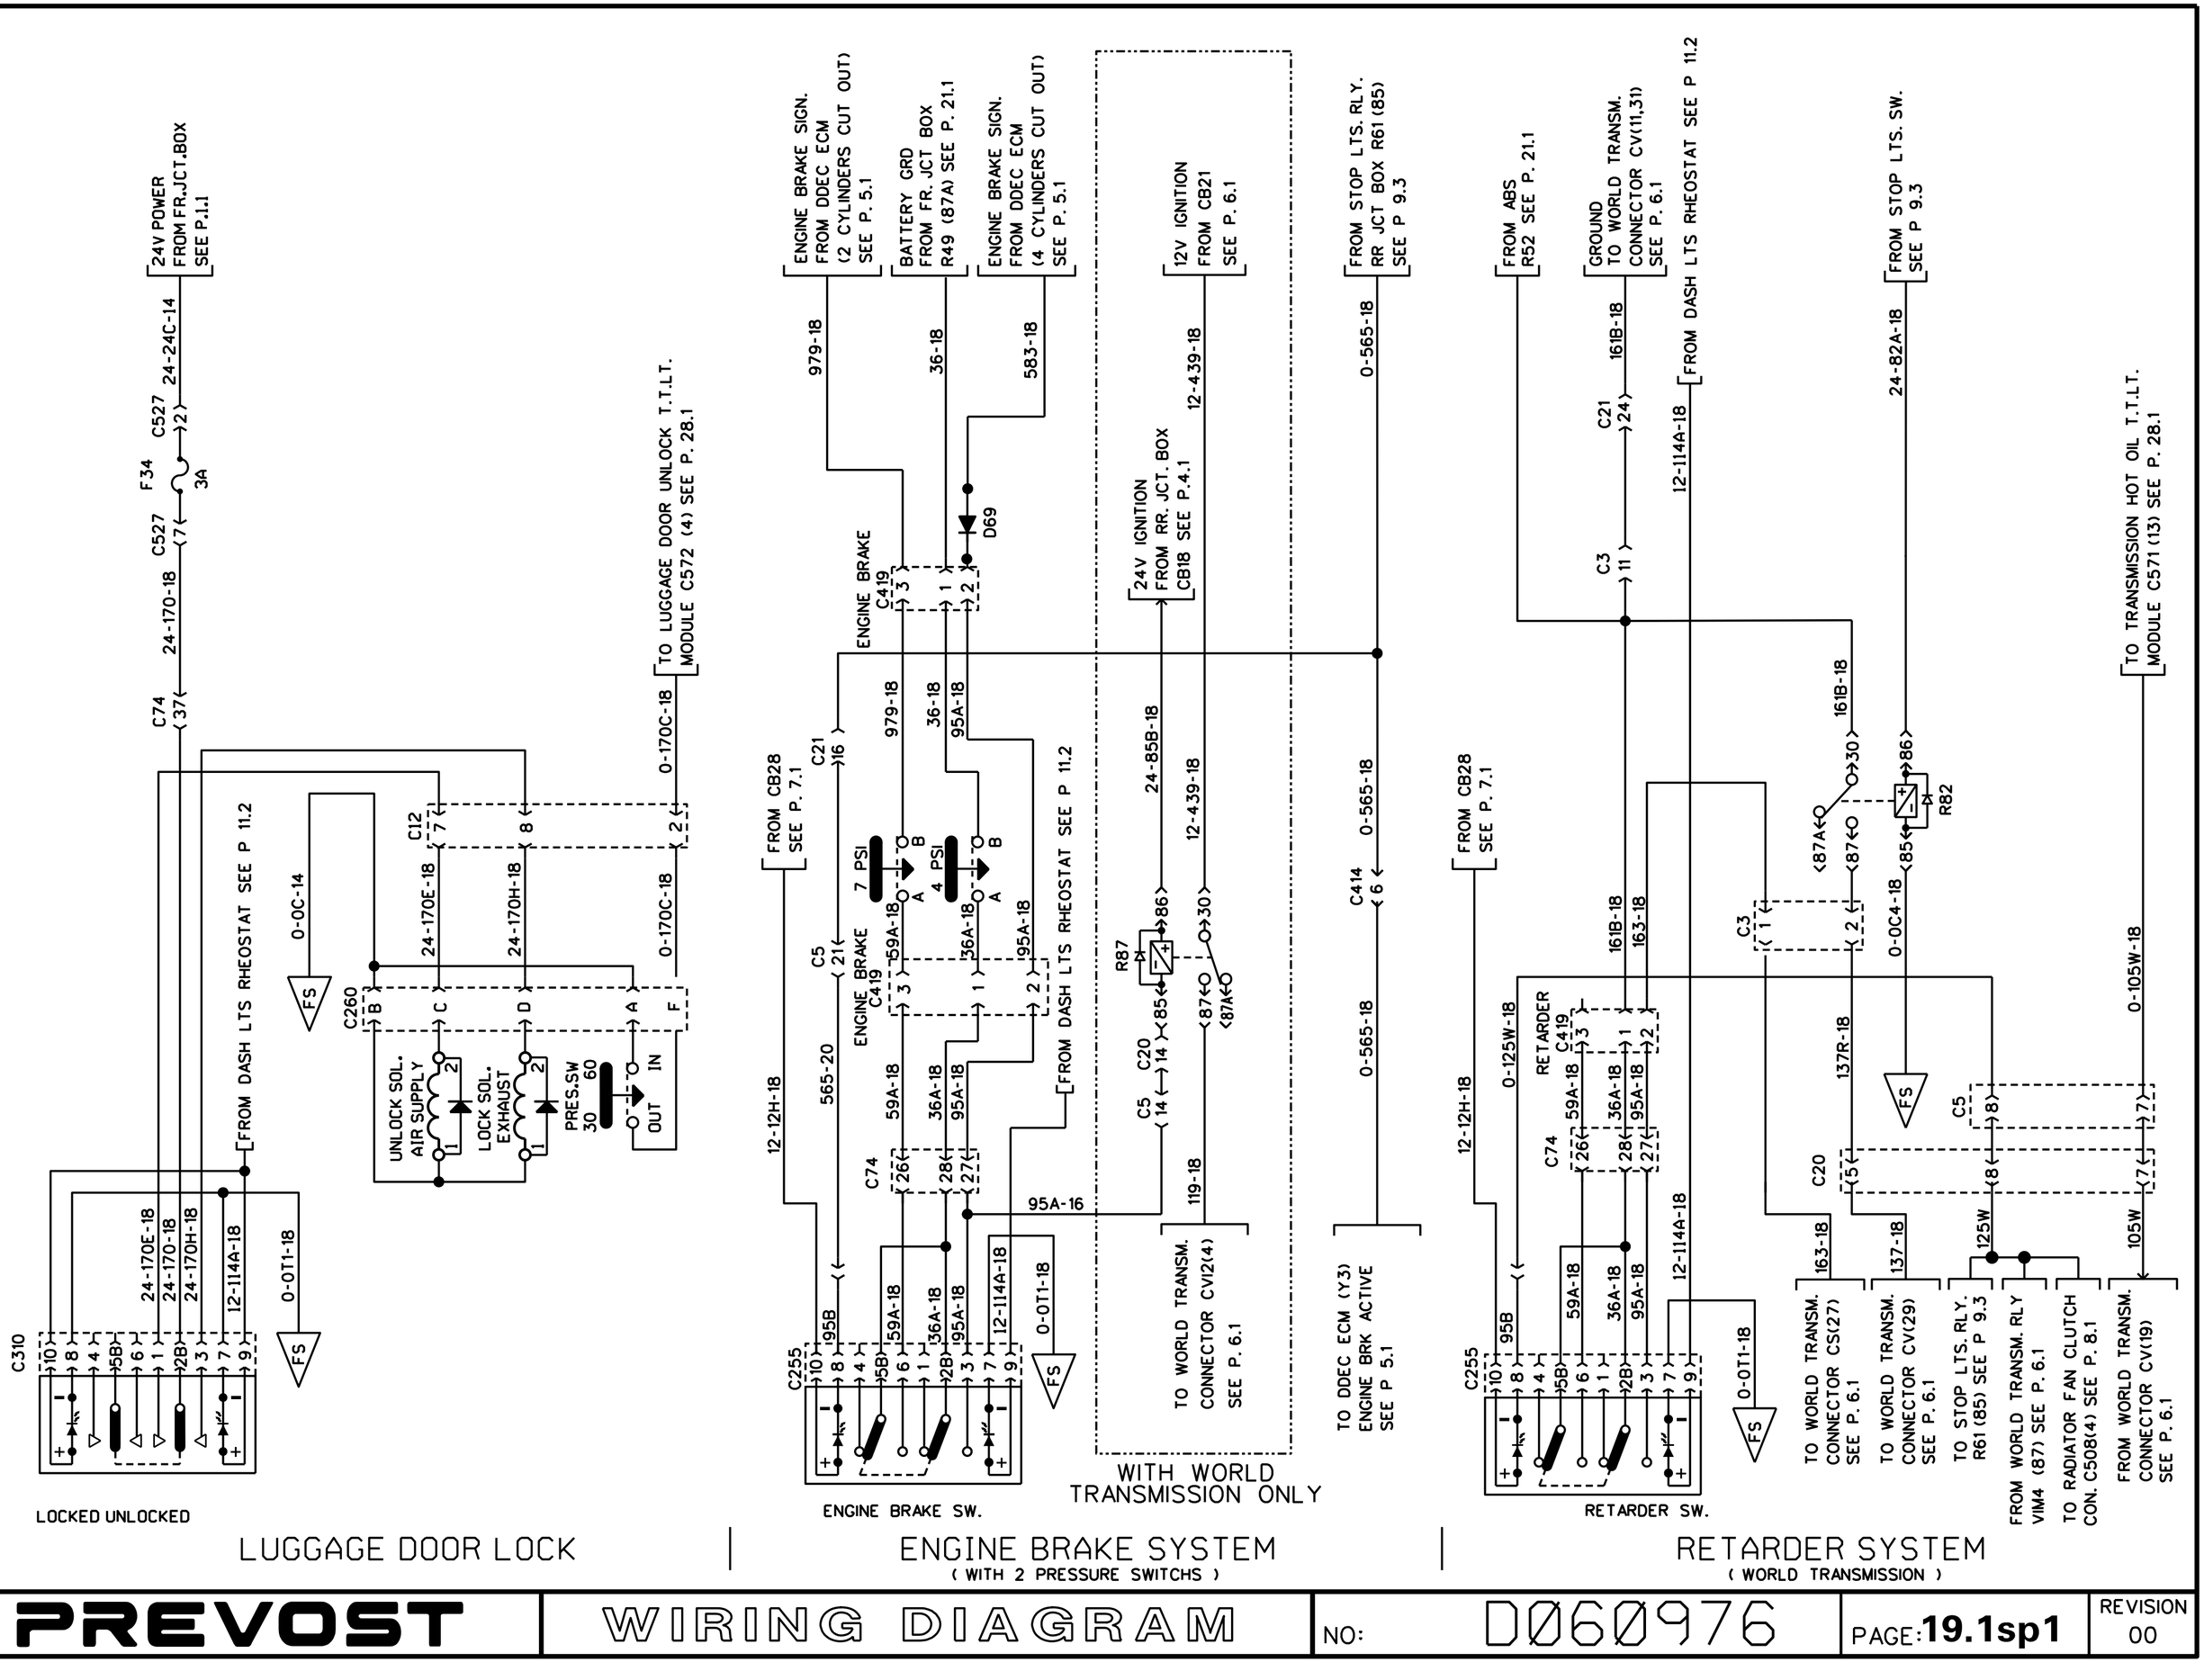
24V POWER FROM FR.JCT.BOX SEE P.1.1
24-24C-14
C527
F34
3A
24-170-18
C74
TO LUGGAGE DOOR UNLOCK T.T.LT. MODULE C572 (4) SEE P. 28.1
0-170C-18
FROM DASH LTS RHEOSTAT SEE P 11.2
0-0C-14
C12
24-170E-18
24-170H-18
0-170C-18
C260
UNLOCK SOL. AIR SUPPLY
LOCK SOL. EXHAUST
PRES.SW 30 60
OUT IN
C310
24-170E-18
24-170-18
24-170H-18
12-114A-18
0-0T1-18
FS
LOCKED UNLOCKED
LUGGAGE DOOR LOCK
ENGINE BRAKE SIGN. FROM DDEC ECM (2 CYLINDERS CUT OUT) SEE P. 5.1
BATTERY GRD FROM FR. JCT BOX R49 (87A) SEE P. 21.1
ENGINE BRAKE SIGN. FROM DDEC ECM (4 CYLINDERS CUT OUT) SEE P. 5.1
979-18
36-18
583-18
D69
ENGINE BRAKE
C419
95A-18
12V IGNITION FROM CB21 SEE P. 6.1
24V IGNITION FROM RR. JCT. BOX CB18 SEE P.4.1
24-85B-18
12-439-18
FROM STOP LTS. RLY. RR JCT BOX R61 (85) SEE P 9.3
0-565-18
FROM CB28 SEE P. 7.1
C21
565-20
C5
7 PSI
4 PSI
59A-18
36A-18
95A-18
FROM DASH LTS RHEOSTAT SEE P 11.2
12-12H-18
C74
95A-16
119-18
R87
C20
C414
TO WORLD TRANSM. CONNECTOR CVI2(14) SEE P. 6.1
TO DDEC ECM (Y3) ENGINE BRK ACTIVE SEE P 5.1
C255
95B
0-0T1-18
FS
ENGINE BRAKE SW.
WITH WORLD TRANSMISSION ONLY
ENGINE BRAKE SYSTEM
(WITH 2 PRESSURE SWITCHES)
FROM ABS R52 SEE P. 21.1
GROUND TO WORLD TRANSM. CONNECTOR CV(11,31) SEE P. 6.1
161B-18
C21
C3
FROM DASH LTS RHEOSTAT SEE P 11.2
12-114A-18
24-82A-18
FROM STOP LTS. SW. SEE P 9.3
TO TRANSMISSION HOT OIL T.T.LT. MODULE C571 (13) SEE P. 28.1
0-105W-18
RETARDER
0-125W-18
161B-18
163-18
137R-18
R82
0-0C4-18
125W
105W
163-18
137-18
TO WORLD TRANSM. CONNECTOR CS(27) SEE P. 6.1
TO WORLD TRANSM. CONNECTOR CV(29) SEE P. 6.1
TO STOP LTS. RLY. R61 (85) SEE P 9.3
FROM WORLD TRANSM. RLY VIM4 (87) SEE P. 6.1
TO RADIATOR FAN CLUTCH CON. C508(4) SEE P. 8.1
FROM WORLD TRANSM. CONNECTOR CV(19) SEE P. 6.1
RETARDER SW.
RETARDER SYSTEM
(WORLD TRANSMISSION)

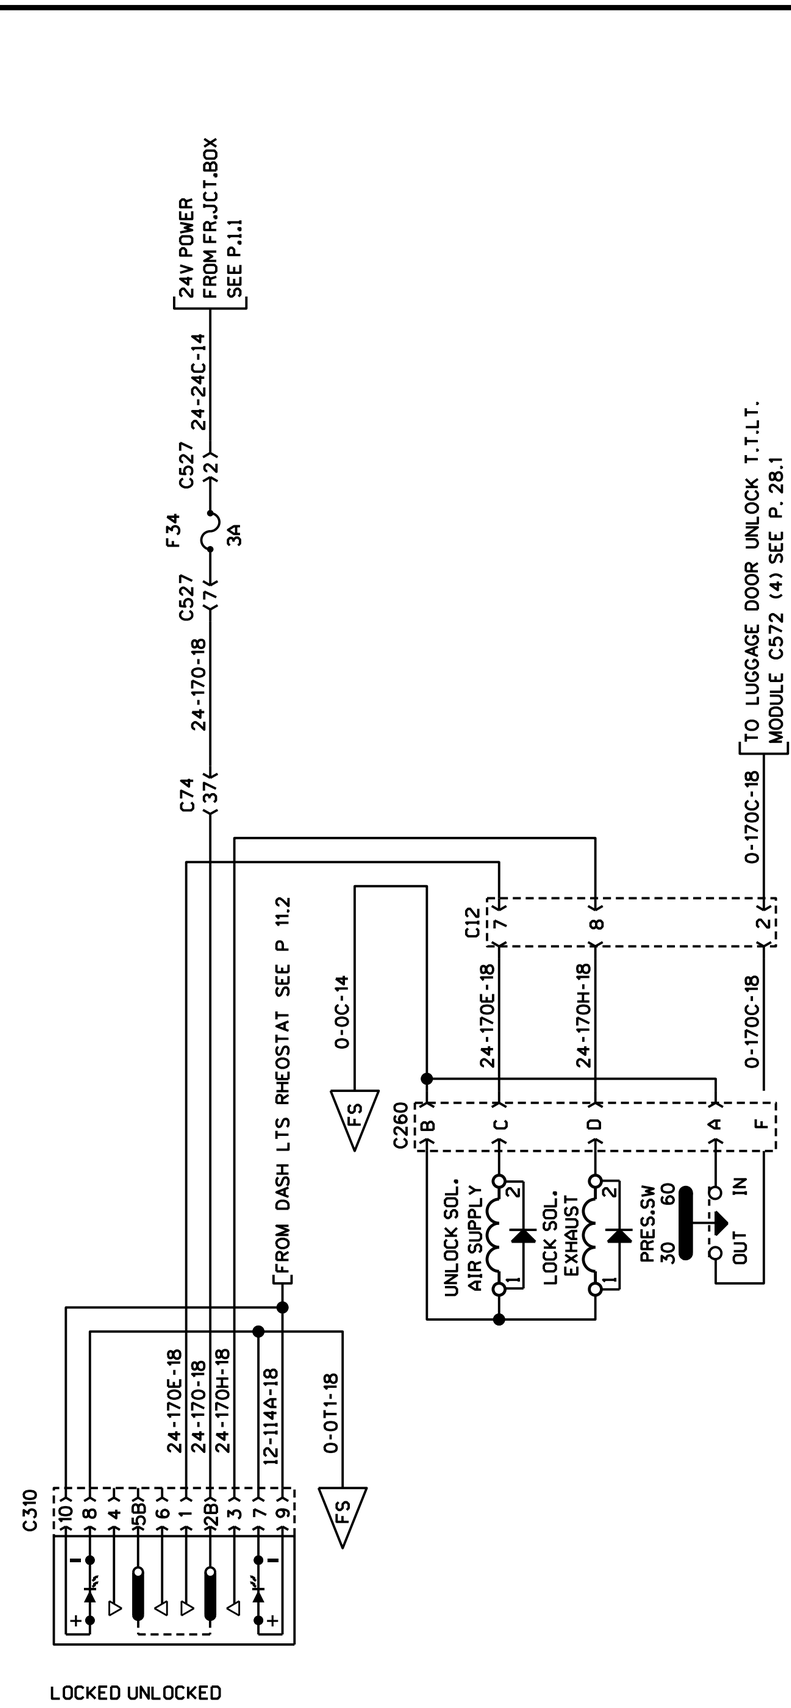
C74
24-170-18
C527
F34
24-24C-14
24V POWER
FROM FR.JCT.BOX
SEE P.1.1
TO LUGGAGE DOOR UNLOCK T.T.LT.
MODULE C572 (4) SEE P. 28.1
0-170C-18
C12
24-170E-18
24-170H-18
0-0C-14
FROM DASH LTS RHEOSTAT SEE P 11.2
C260
UNLOCK SOL.
AIR SUPPLY
LOCK SOL.
EXHAUST
PRES.SW
OUT
IN
C310
0-0T1-18
LOCKED UNLOCKED
LUGGAGE DOOR LOCK
ENGINE BRAKE SIGN.
FROM DDEC ECM
(2 CYLINDERS CUT OUT)
SEE P. 5.1
BATTERY GRD
FROM FR. JCT BOX
R49 (87A) SEE P. 21.1
ENGINE BRAKE SIGN.
FROM DDEC ECM
(4 CYLINDERS CUT OUT)
SEE P. 5.1
12V IGNITION
FROM CB21
SEE P. 6.1
FROM STOP LTS. RLY.
RR JCT BOX R61 (85)
SEE P 9.3
24V IGNITION
FROM RR. JCT. BOX
CB18 SEE P.4.1
ENGINE BRAKE
C419
D69
979-18
36-18
95A-18
583-18
12-439-18
24-85B-18
0-565-18
FROM CB28
SEE P. 7.1
C21
C5
565-20
12-12H-18
7 PSI
4 PSI
59A-18
36A-18
95A-16
C74
C255
95B
12-114A-18
R87
C20
119-18
TO WORLD TRANSM.
CONNECTOR CVI2(4)
SEE P. 6.1
TO DDEC ECM (Y3)
ENGINE BRK ACTIVE
SEE P 5.1
ENGINE BRAKE SW.
WITH WORLD
TRANSMISSION ONLY
ENGINE BRAKE SYSTEM
(WITH 2 PRESSURE SWITCHES)
FROM ABS
R52 SEE P. 21.1
GROUND
TO WORLD TRANSM.
CONNECTOR CV(11,31)
SEE P. 6.1
C21
161B-18
C3
FROM DASH LTS RHEOSTAT SEE P 11.2
24-82A-18
FROM STOP LTS. SW.
SEE P 9.3
TO TRANSMISSION HOT OIL T.T.LT.
MODULE C571 (13) SEE P. 28.1
0-105W-18
161B-18
163-18
0-125W-18
RETARDER
C419
0-0C4-18
R82
137R-18
TO WORLD TRANSM.
CONNECTOR CS(27)
SEE P. 6.1
TO WORLD TRANSM.
CONNECTOR CV(29)
SEE P. 6.1
TO STOP LTS. RLY.
R61 (85) SEE P 9.3
FROM WORLD TRANSM. RLY
VIM4 (87) SEE P. 6.1
TO RADIATOR FAN CLUTCH
CON. C508(4) SEE P. 8.1
FROM WORLD TRANSM.
CONNECTOR CV(19)
SEE P. 6.1
125W
105W
137-18
163-18
RETARDER SW.
RETARDER SYSTEM
(WORLD TRANSMISSION)

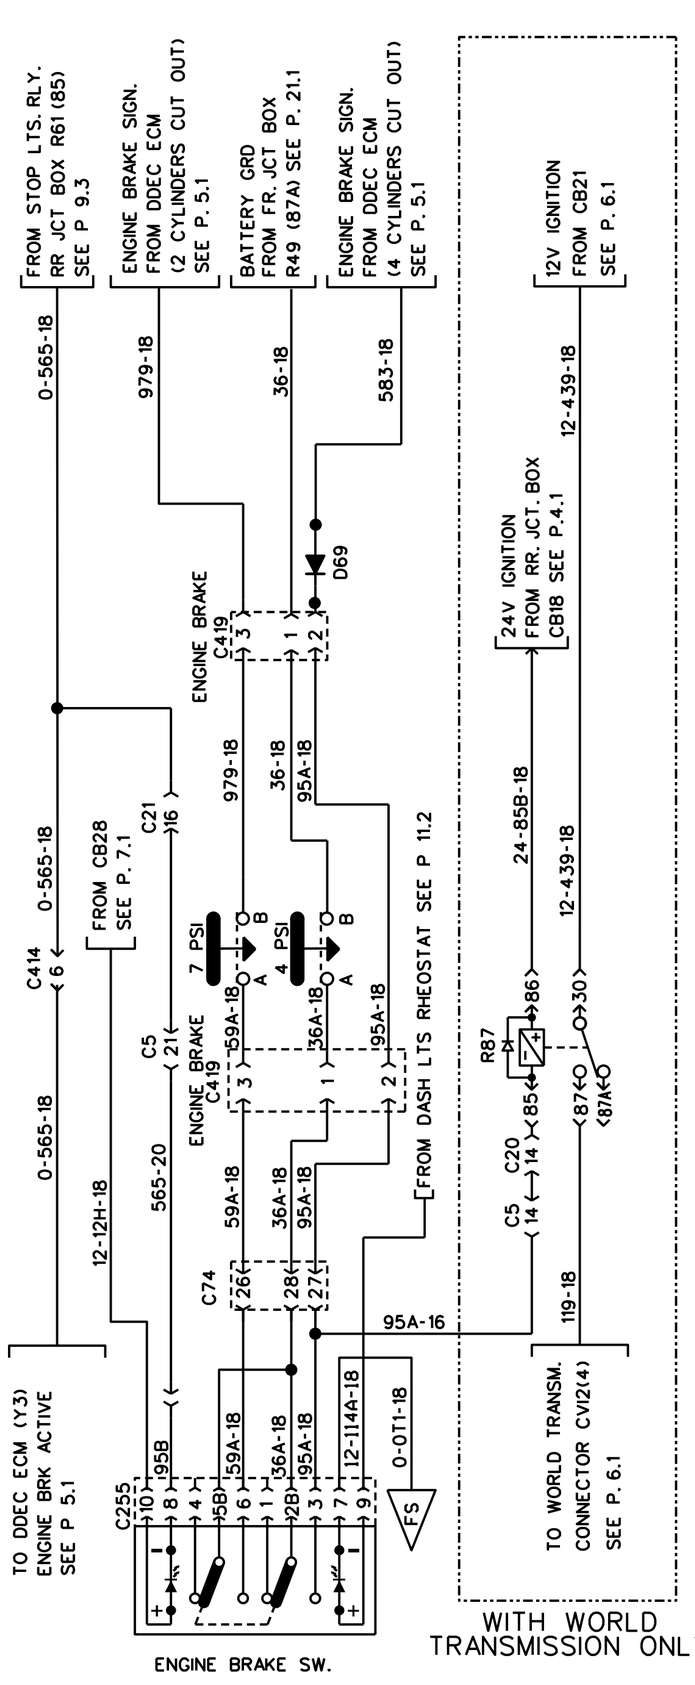

ENGINE BRAKE SYSTEM
(WITH 2 PRESSURE SWITCHS)

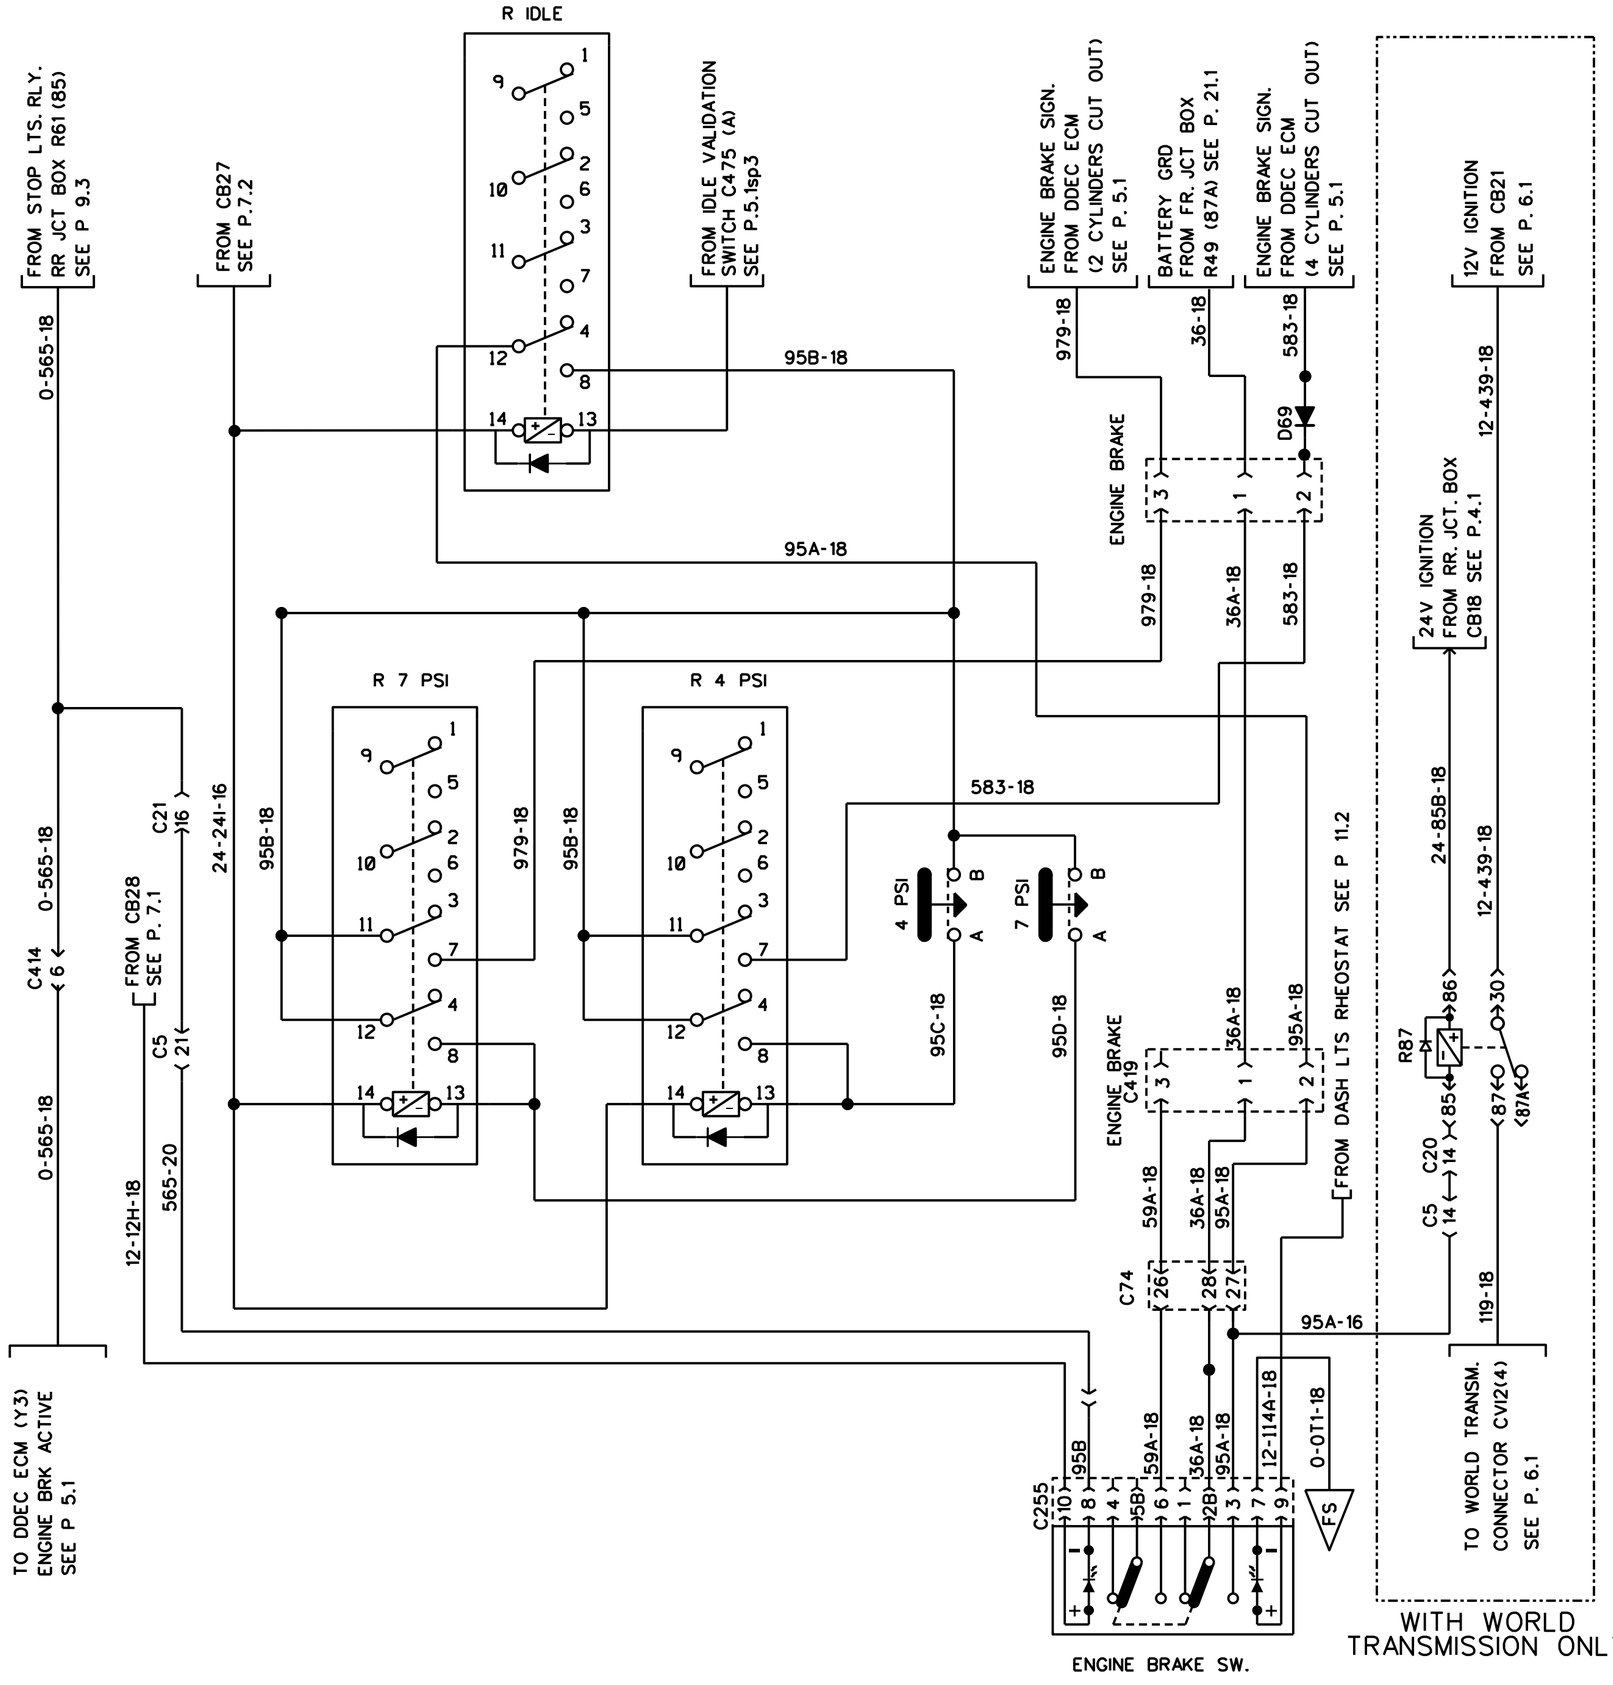

ENGINE BRAKE SYSTEM
(WITH 2 PRESSURE SWITCHS LATCHED)

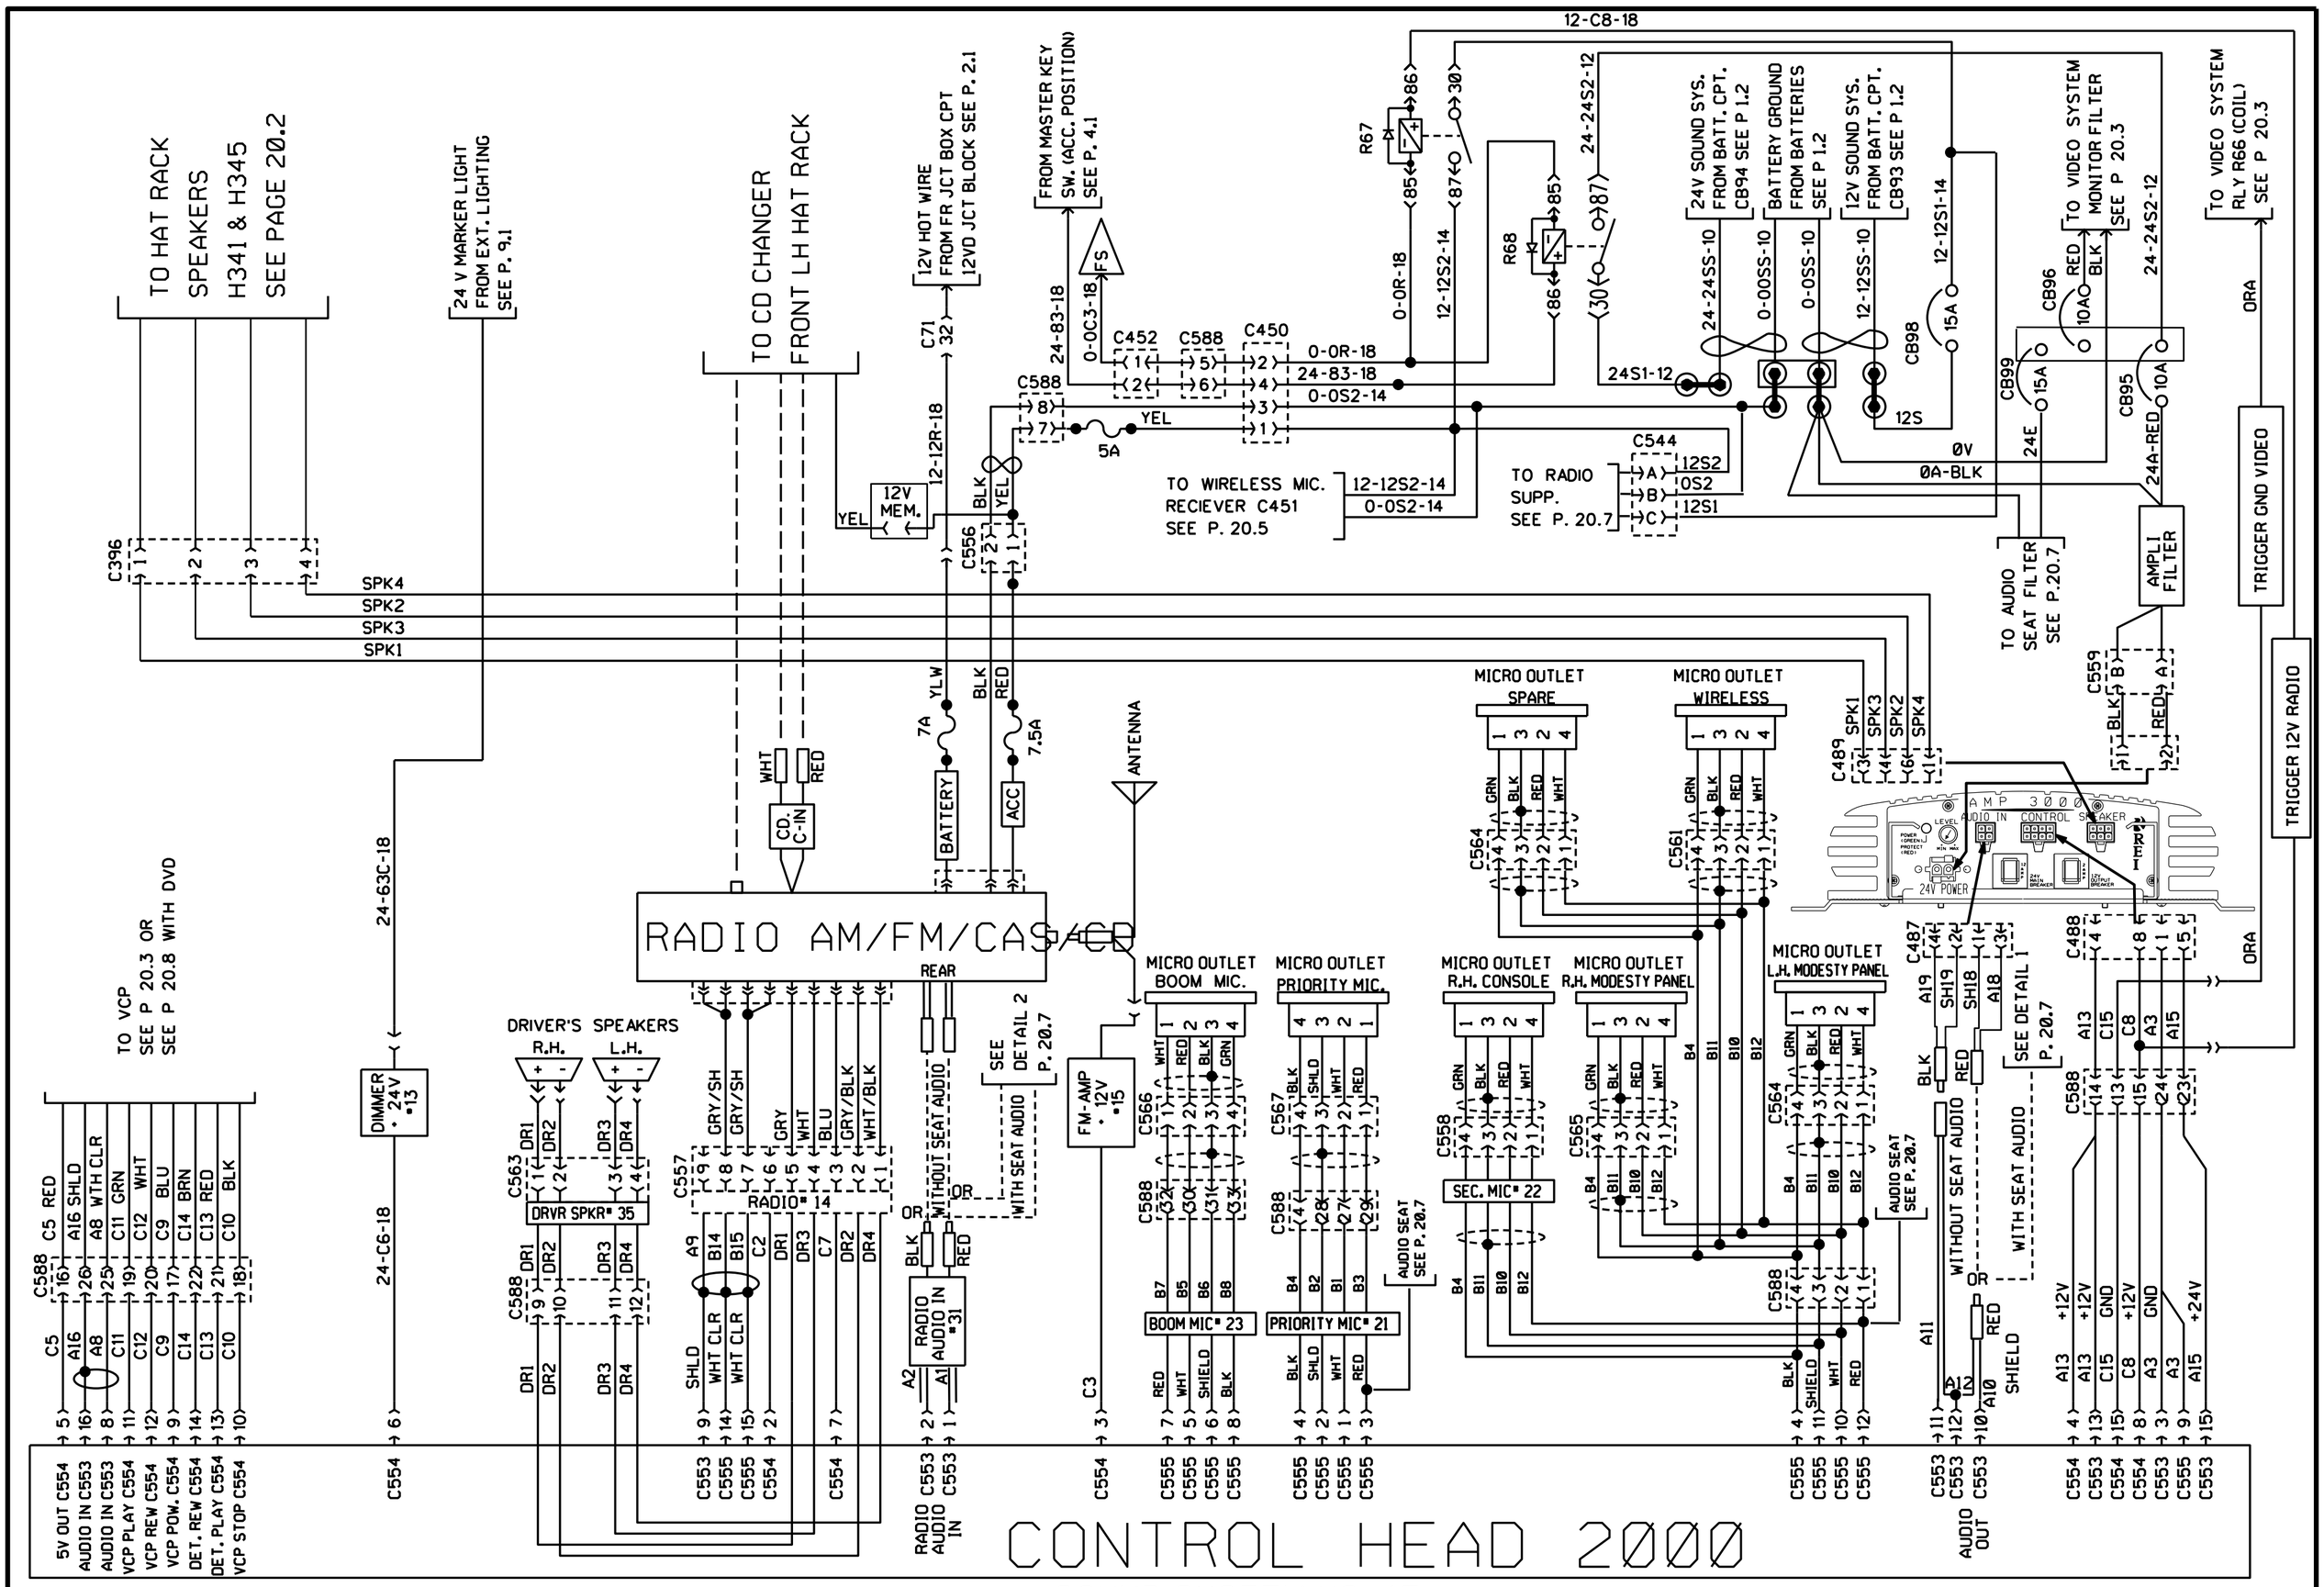

SOUND SYSTEM H3-45

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 20.1	REVISION 00

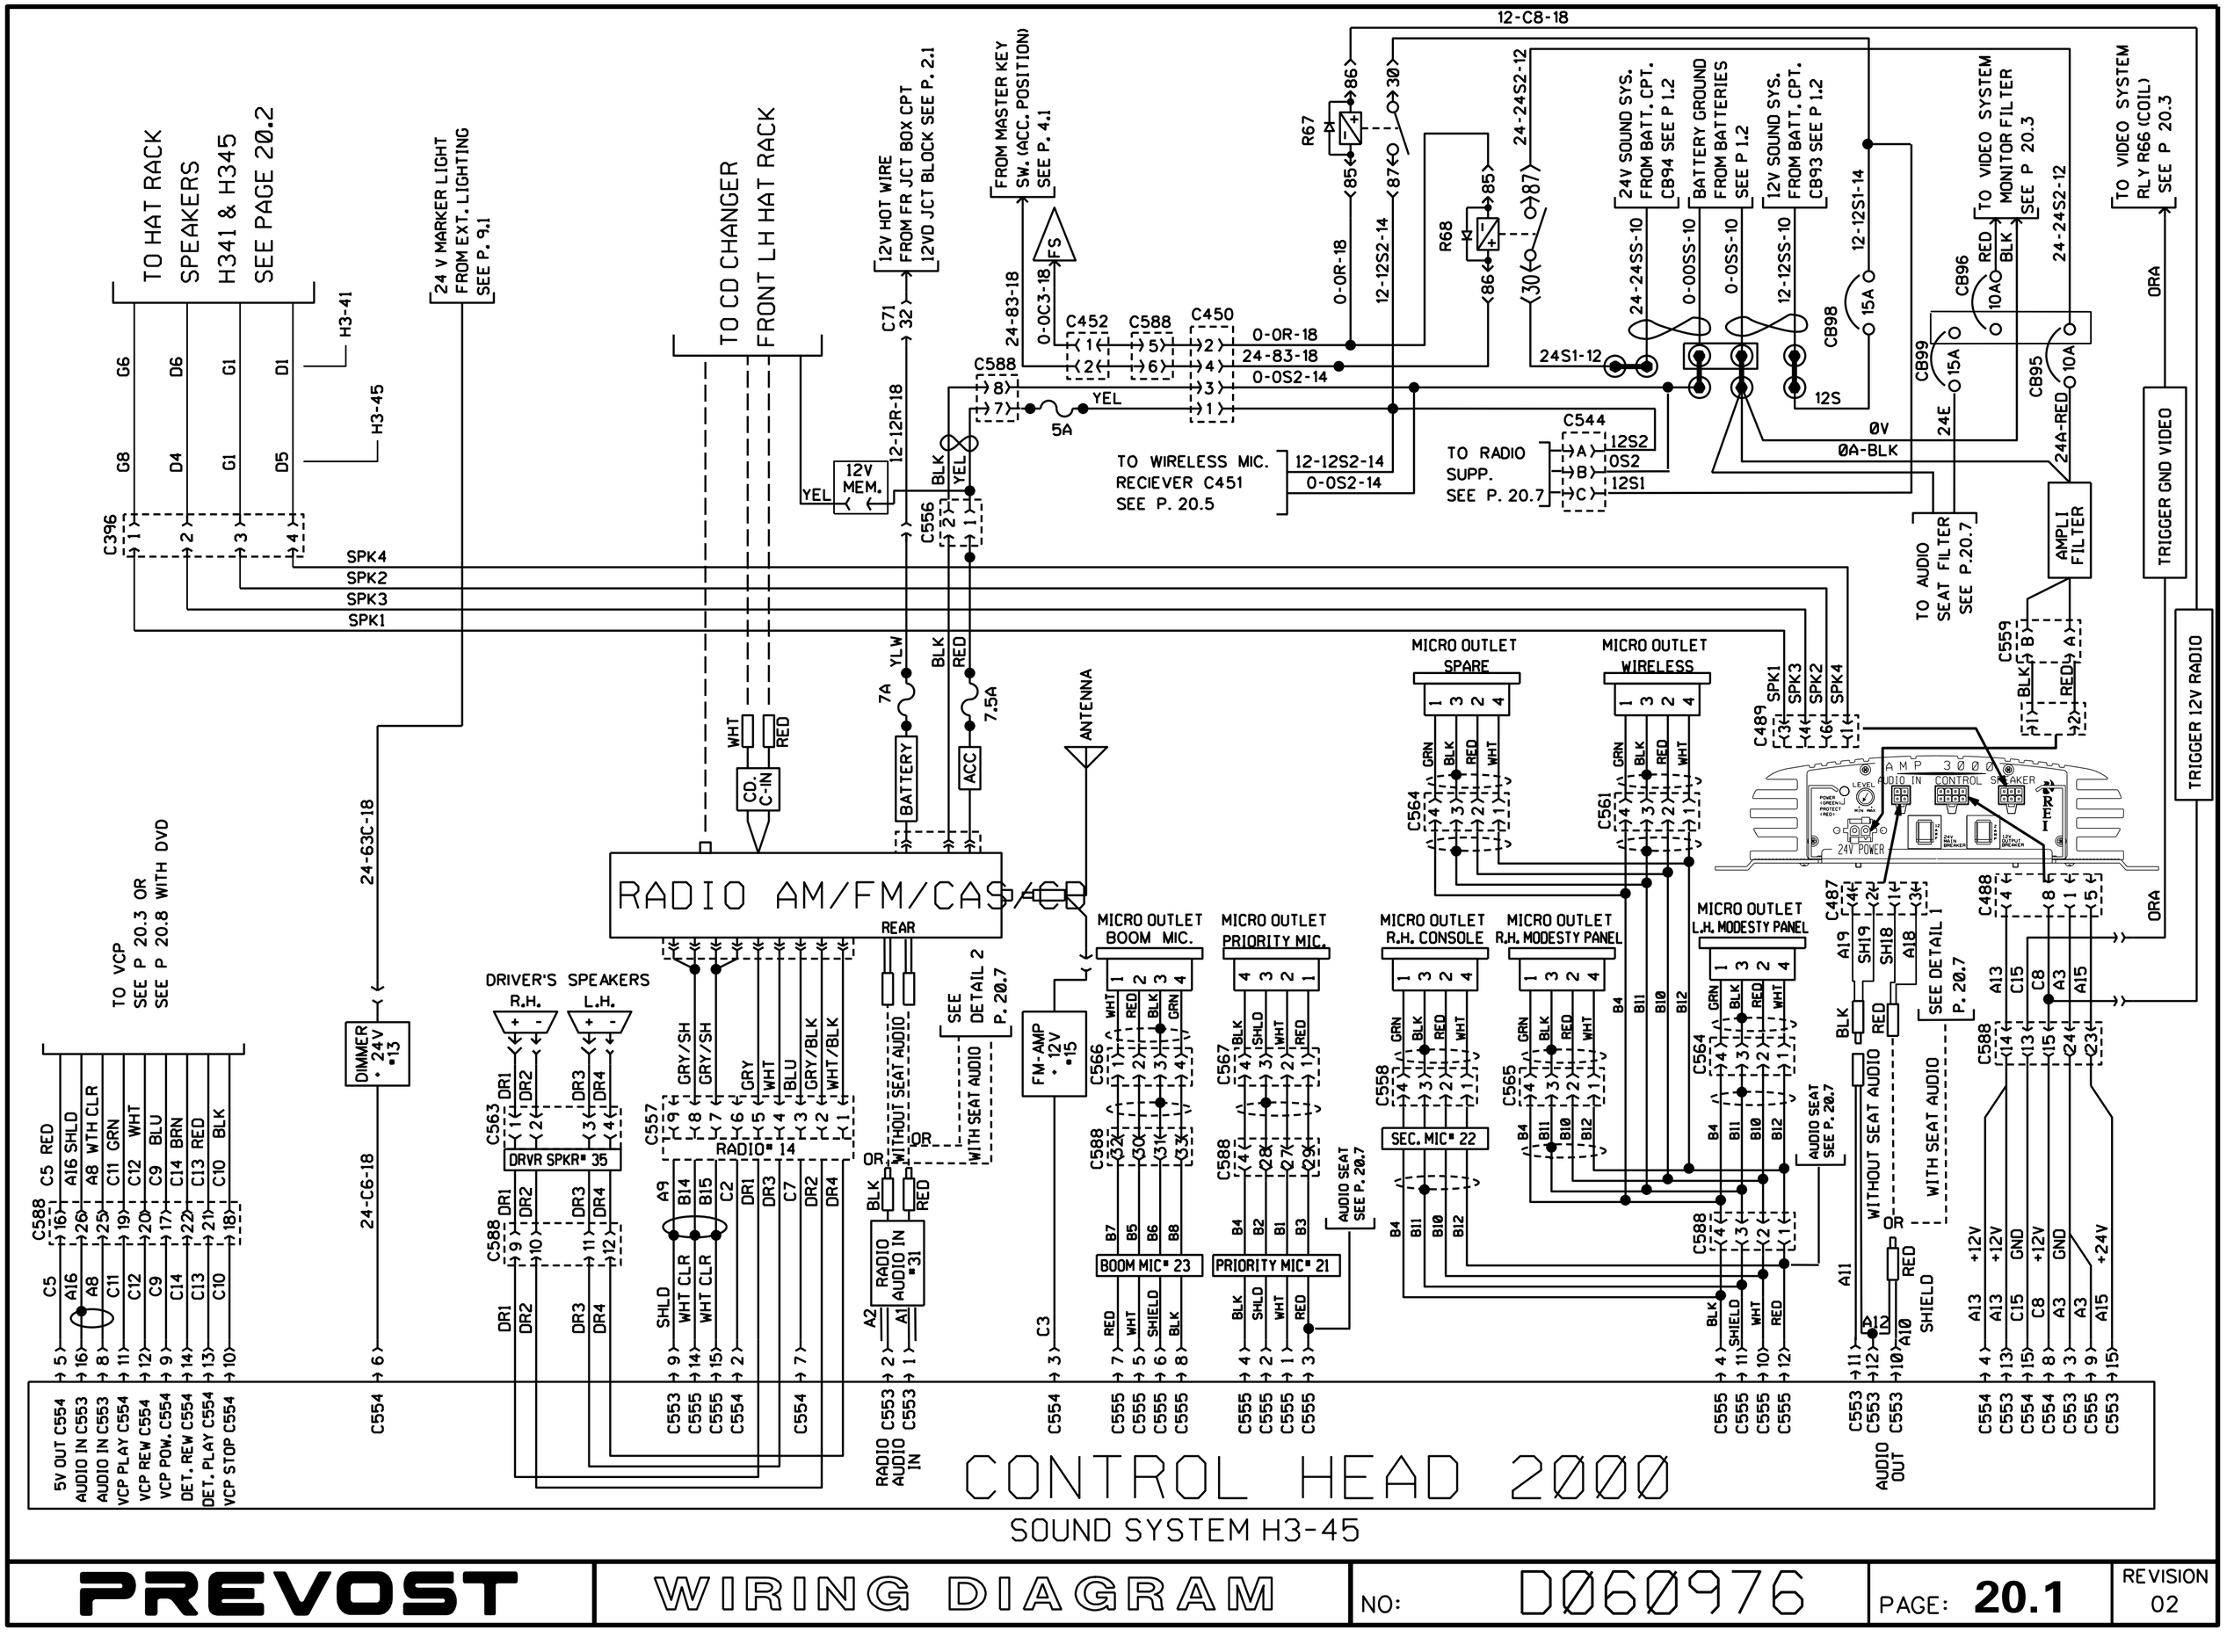
CONTROL HEAD 2000
SOUND SYSTEM H3-45
RADIO AM/FM/CASS/CD
TO HAT RACK SPEAKERS H341 & H345 SEE PAGE 20.2
24 V MARKER LIGHT FROM EXT. LIGHTING SEE P. 9.1
TO CD CHANGER FRONT LH HAT RACK
12V HOT WIRE FROM FR JCT BOX CPT 12VD JCT BLOCK SEE P. 2.1
FROM MASTER KEY SW. (ACC. POSITION) SEE P. 4.1
12-C8-18
24V SOUND SYS. FROM BATT. CPT. CB94 SEE P 1.2
BATTERY GROUND FROM BATTERIES SEE P 1.2
12V SOUND SYS. FROM BATT. CPT. CB93 SEE P 1.2
TO VIDEO SYSTEM MONITOR FILTER SEE P 20.3
TO VIDEO SYSTEM RLY R66 (COIL) SEE P 20.3
TRIGGER GND VIDEO
TRIGGER 12V RADIO
TO WIRELESS MIC. RECIEVER C451 SEE P. 20.5
TO RADIO SUPP. SEE P. 20.7
TO AUDIO SEAT FILTER SEE P.20.7
AMPLI FILTER
MICRO OUTLET SPARE
MICRO OUTLET WIRELESS
MICRO OUTLET BOOM MIC.
MICRO OUTLET PRIORITY MIC.
MICRO OUTLET R.H. CONSOLE
MICRO OUTLET R.H. MODESTY PANEL
MICRO OUTLET L.H. MODESTY PANEL
DRIVER'S SPEAKERS R.H. L.H.
DRVR SPKR • 35
RADIO • 14
BOOM MIC • 23
PRIORITY MIC • 21
SEC. MIC • 22
FM-AMP • 12V • 15
DIMMER • 24V • 13
ANTENNA
BATTERY
ACC
CD. C-IN
12V MEM.
WITHOUT SEAT AUDIO
WITH SEAT AUDIO
AUDIO SEAT SEE P. 20.7
SEE DETAIL 2 P. 20.7
SEE DETAIL 1 P. 20.7
TO VCP SEE P 20.3 OR SEE P 20.8 WITH DVD
5V OUT C554
AUDIO IN C553
AUDIO IN C553
VCP PLAY C554
VCP REW C554
VCP POW. C554
DET. REW C554
DET. PLAY C554
VCP STOP C554
RADIO C553 AUDIO IN
AUDIO OUT C553

CONTROL HEAD 2000

SOUND SYSTEM H3-45

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 20.1	REVISION 03

CONTROL HEAD 2000

SOUND SYSTEM H3-45

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 20.1	REVISION 07

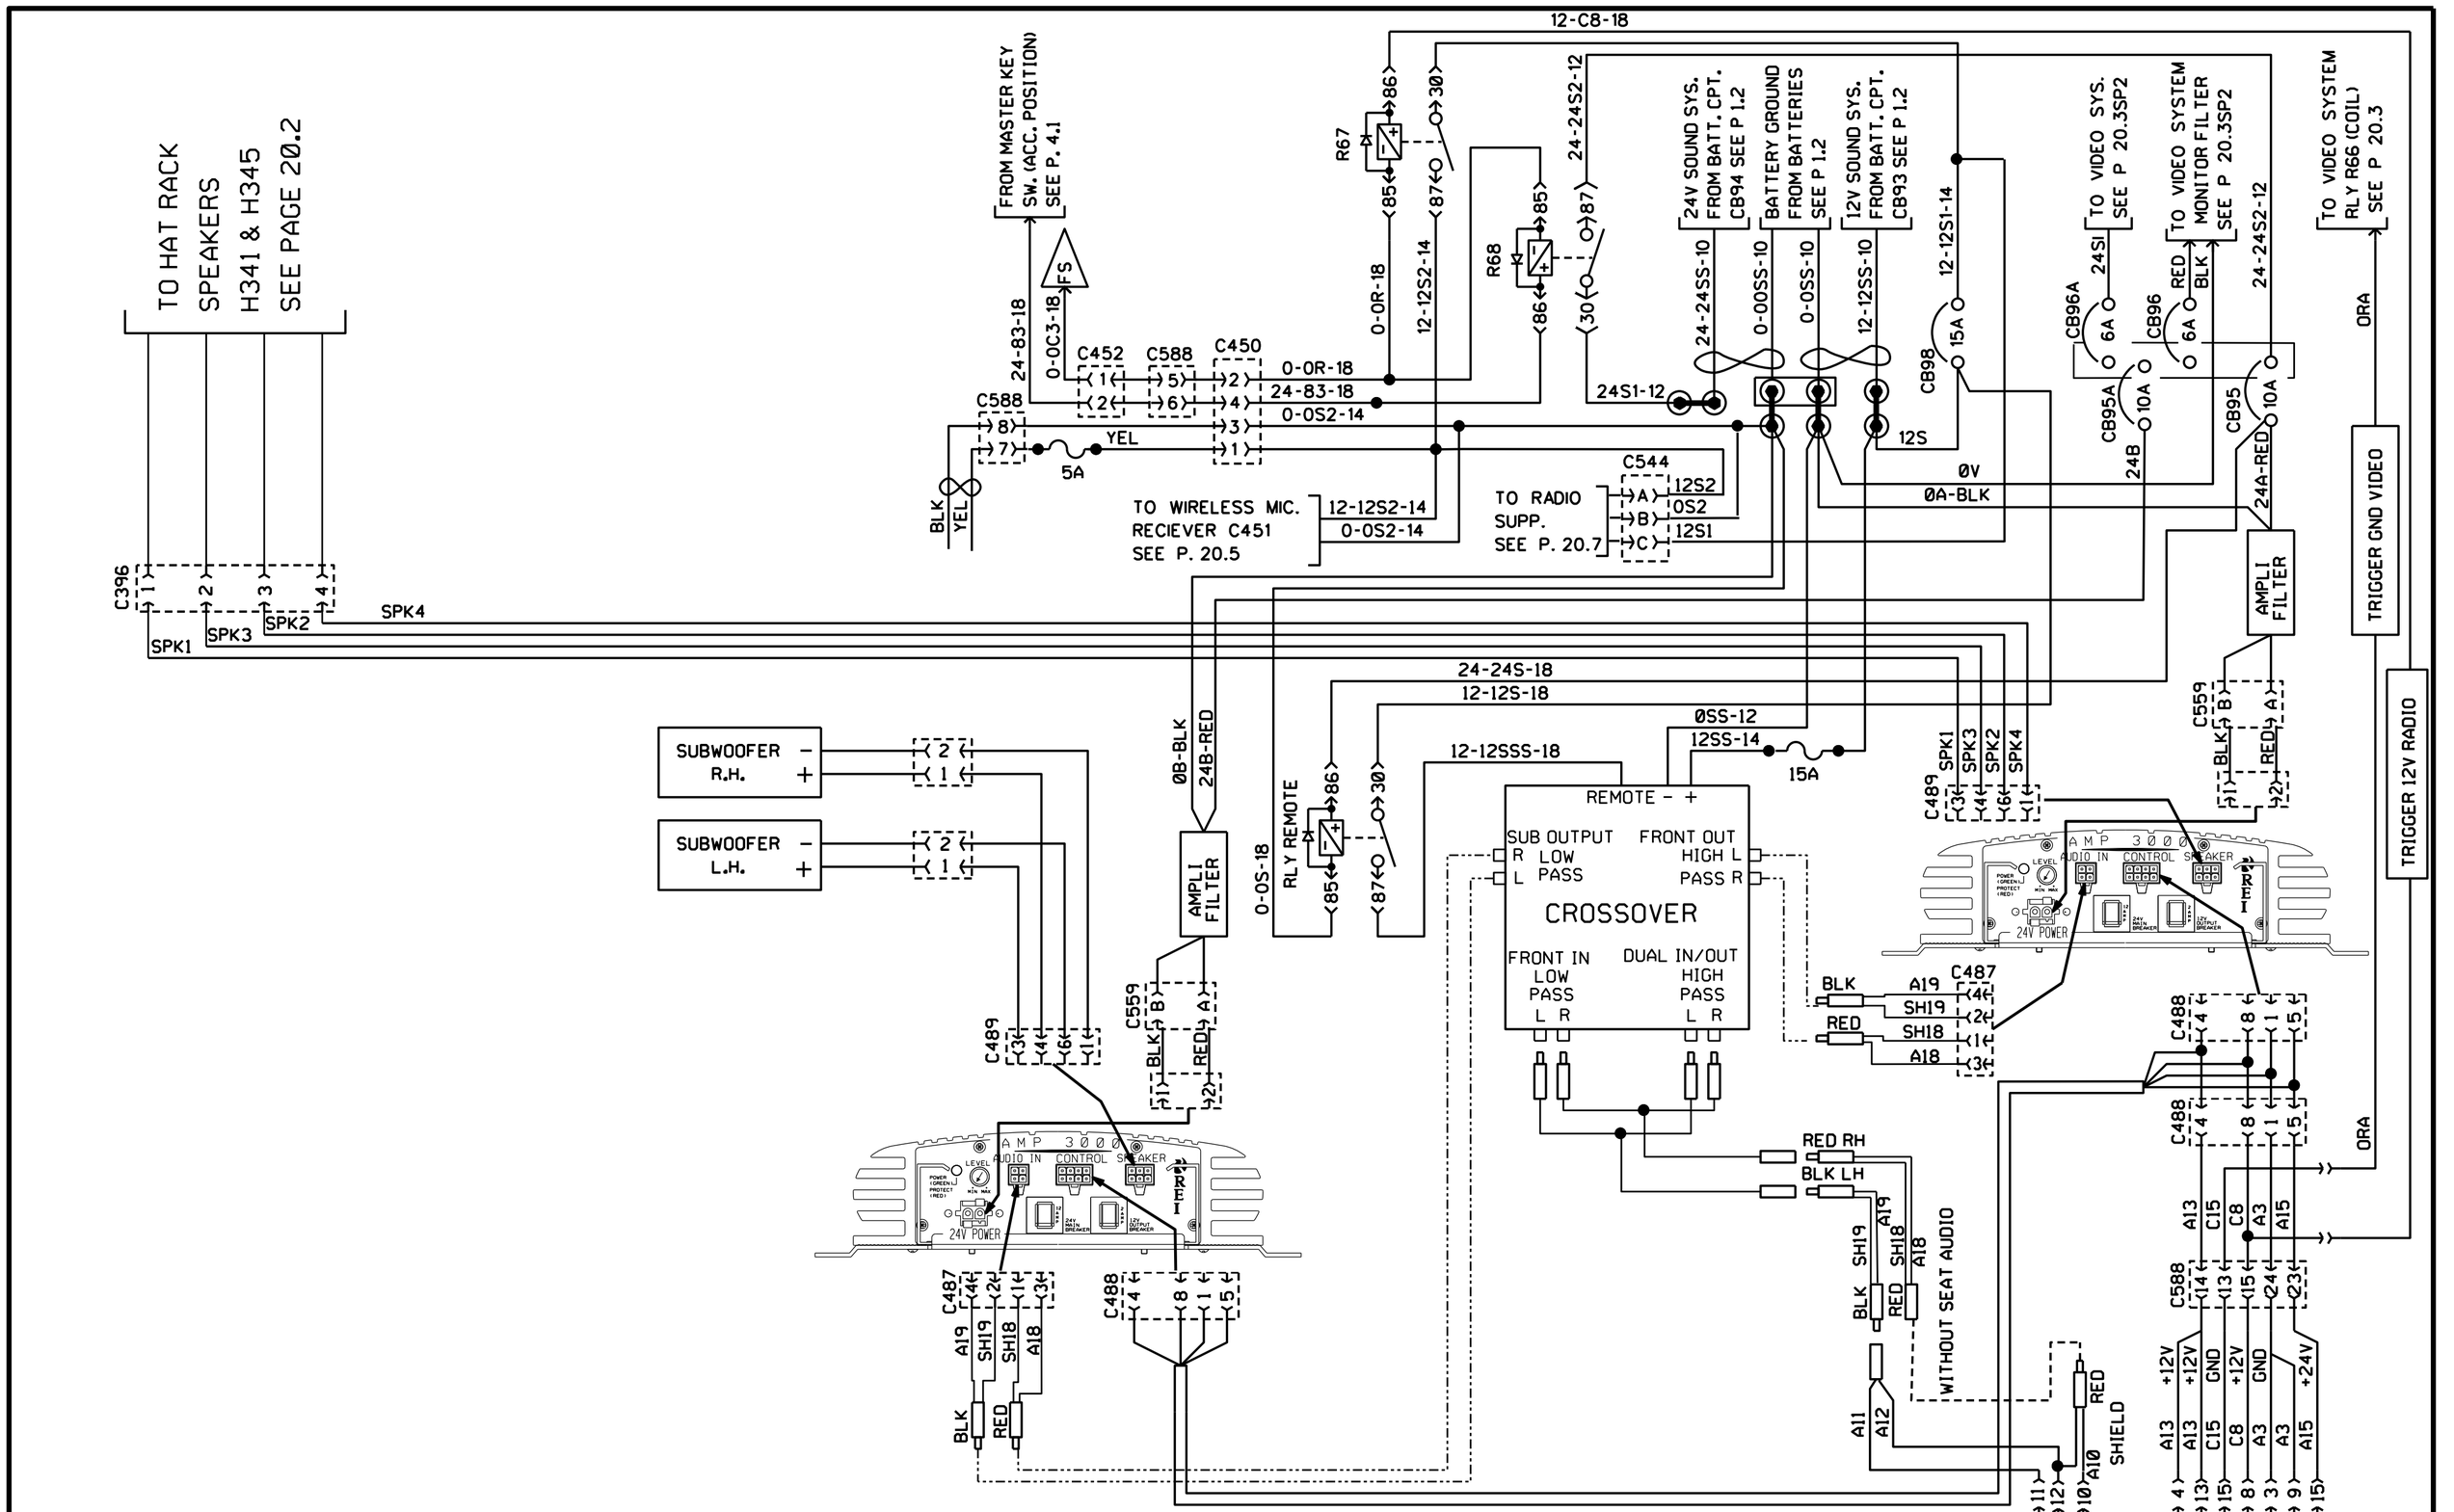

CONTROL HEAD 2000

SOUND SYSTEM H3-45 W/SUBWOOFER W/O SEAT AUDIO

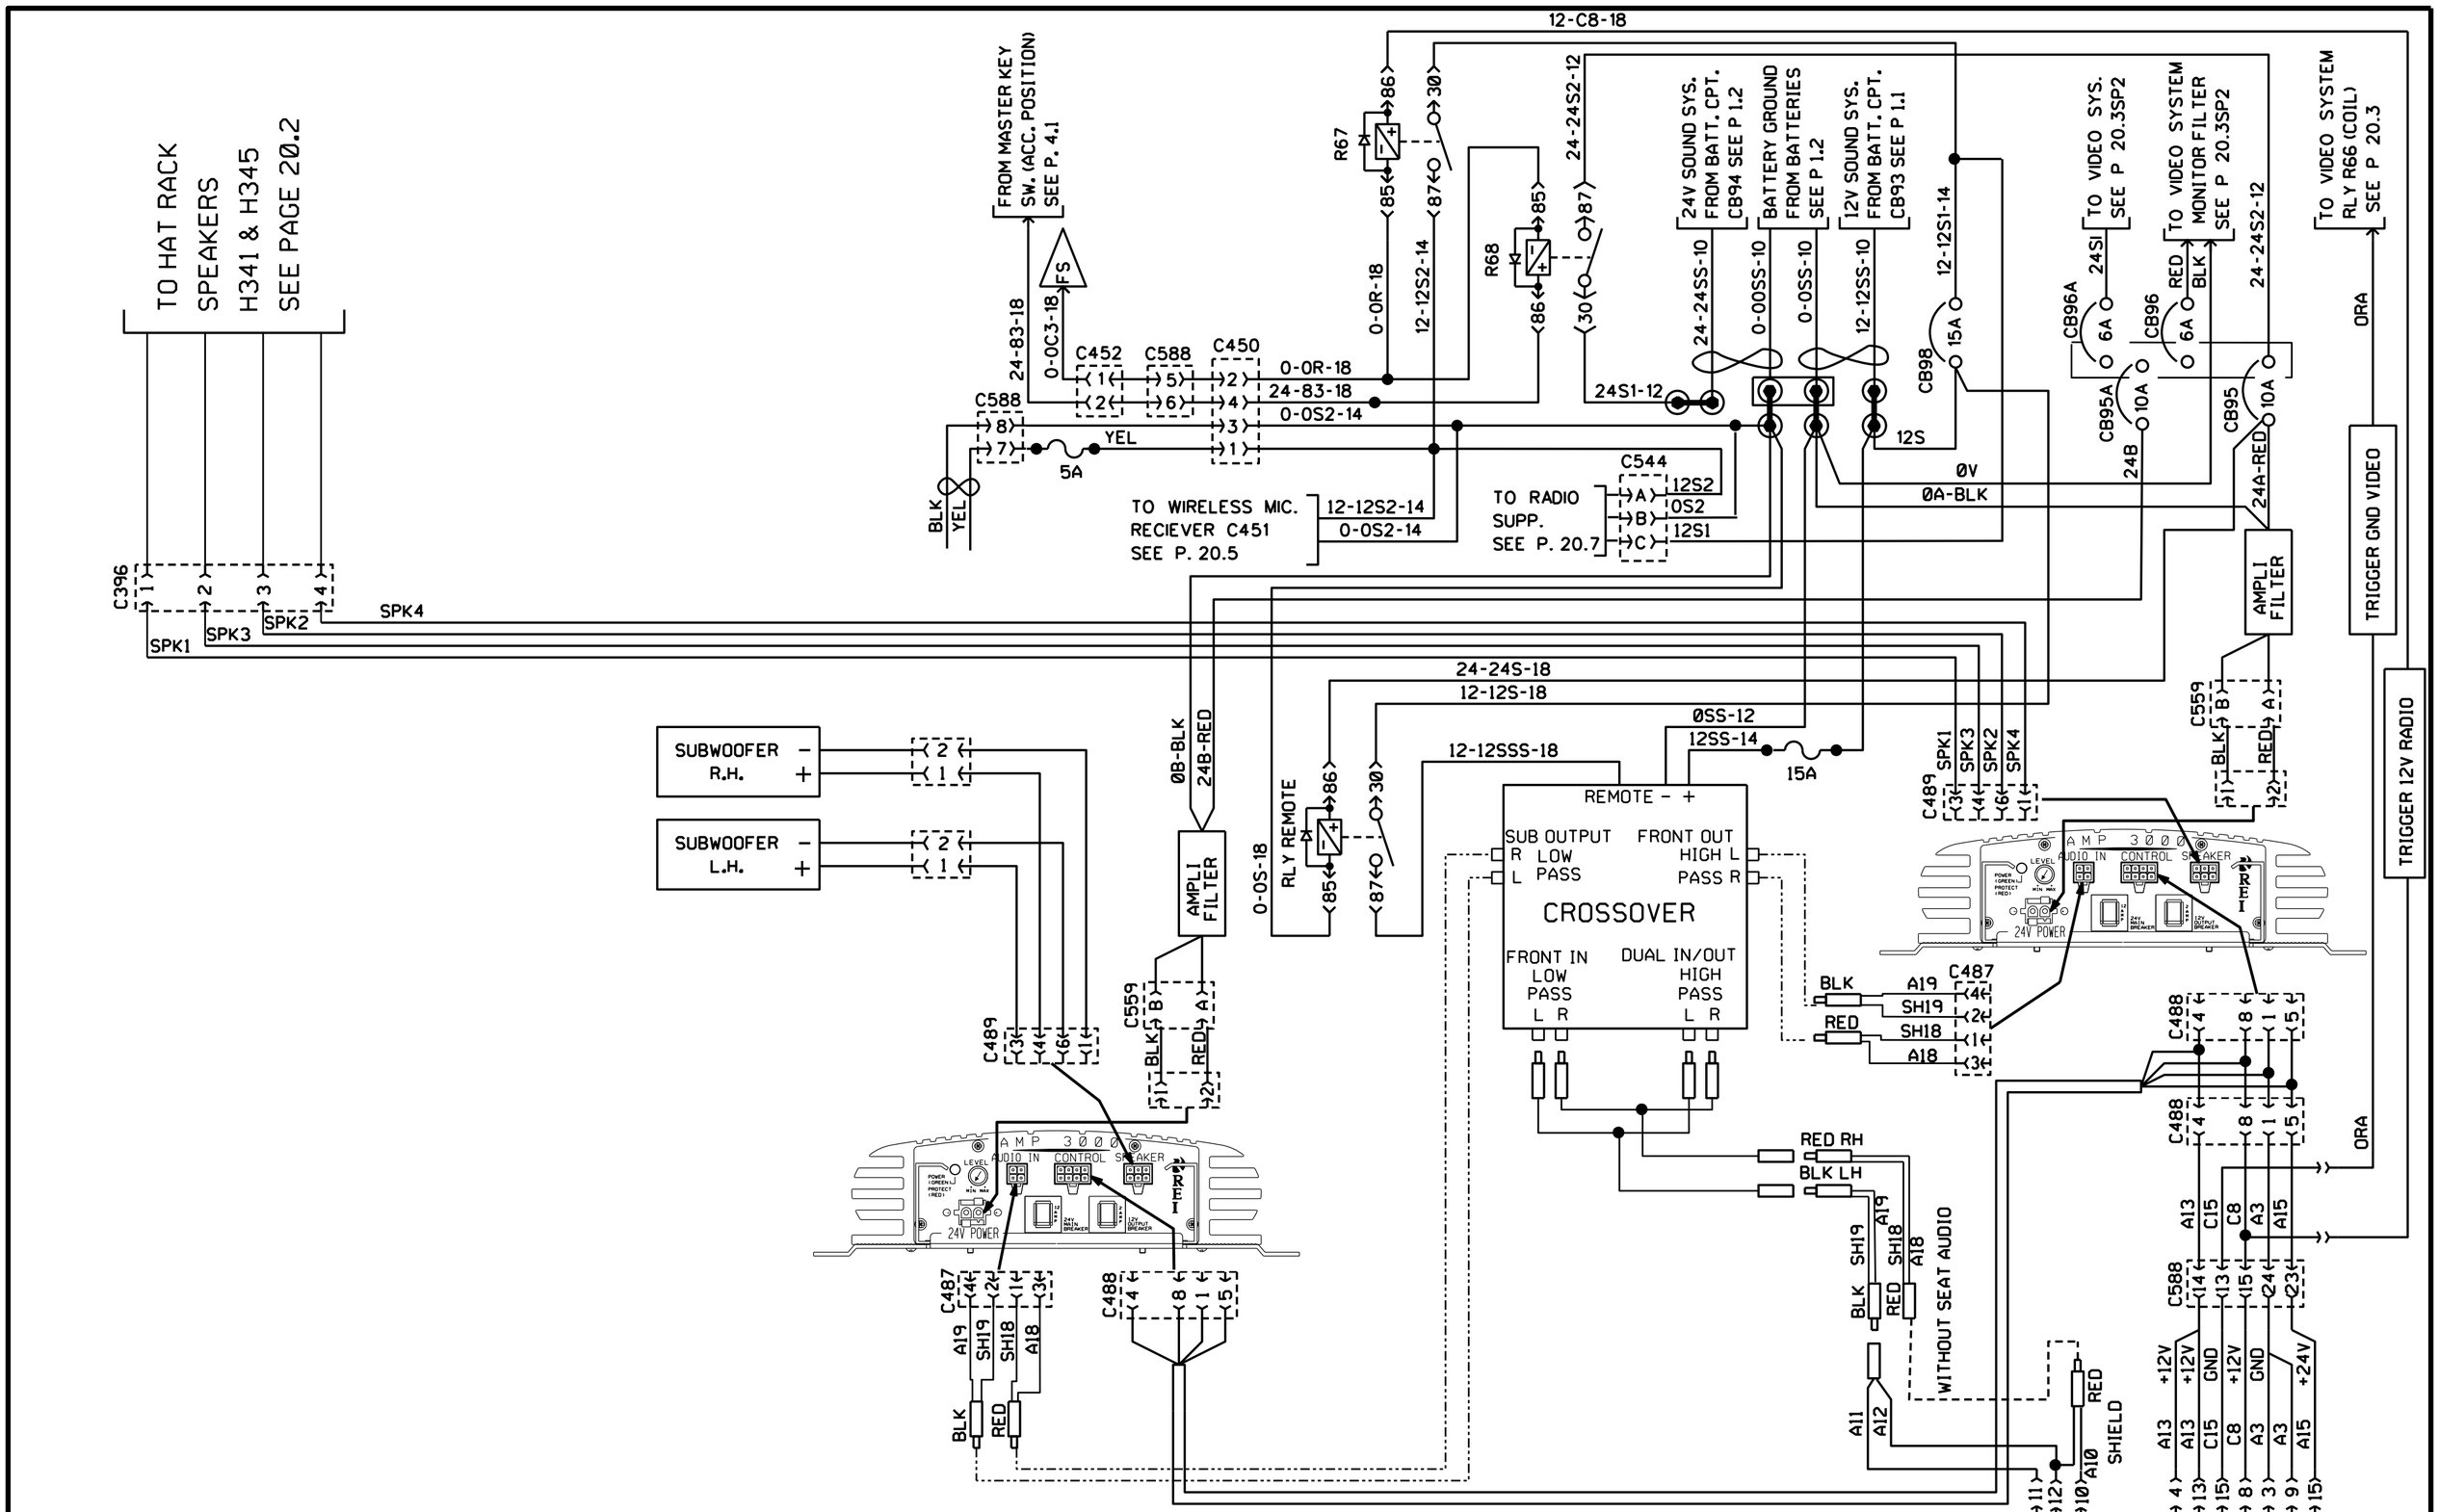

CONTROL HEAD 2000

SOUND SYSTEM H3-45 W/SUBWOOFER W/O SEAT AUDIO

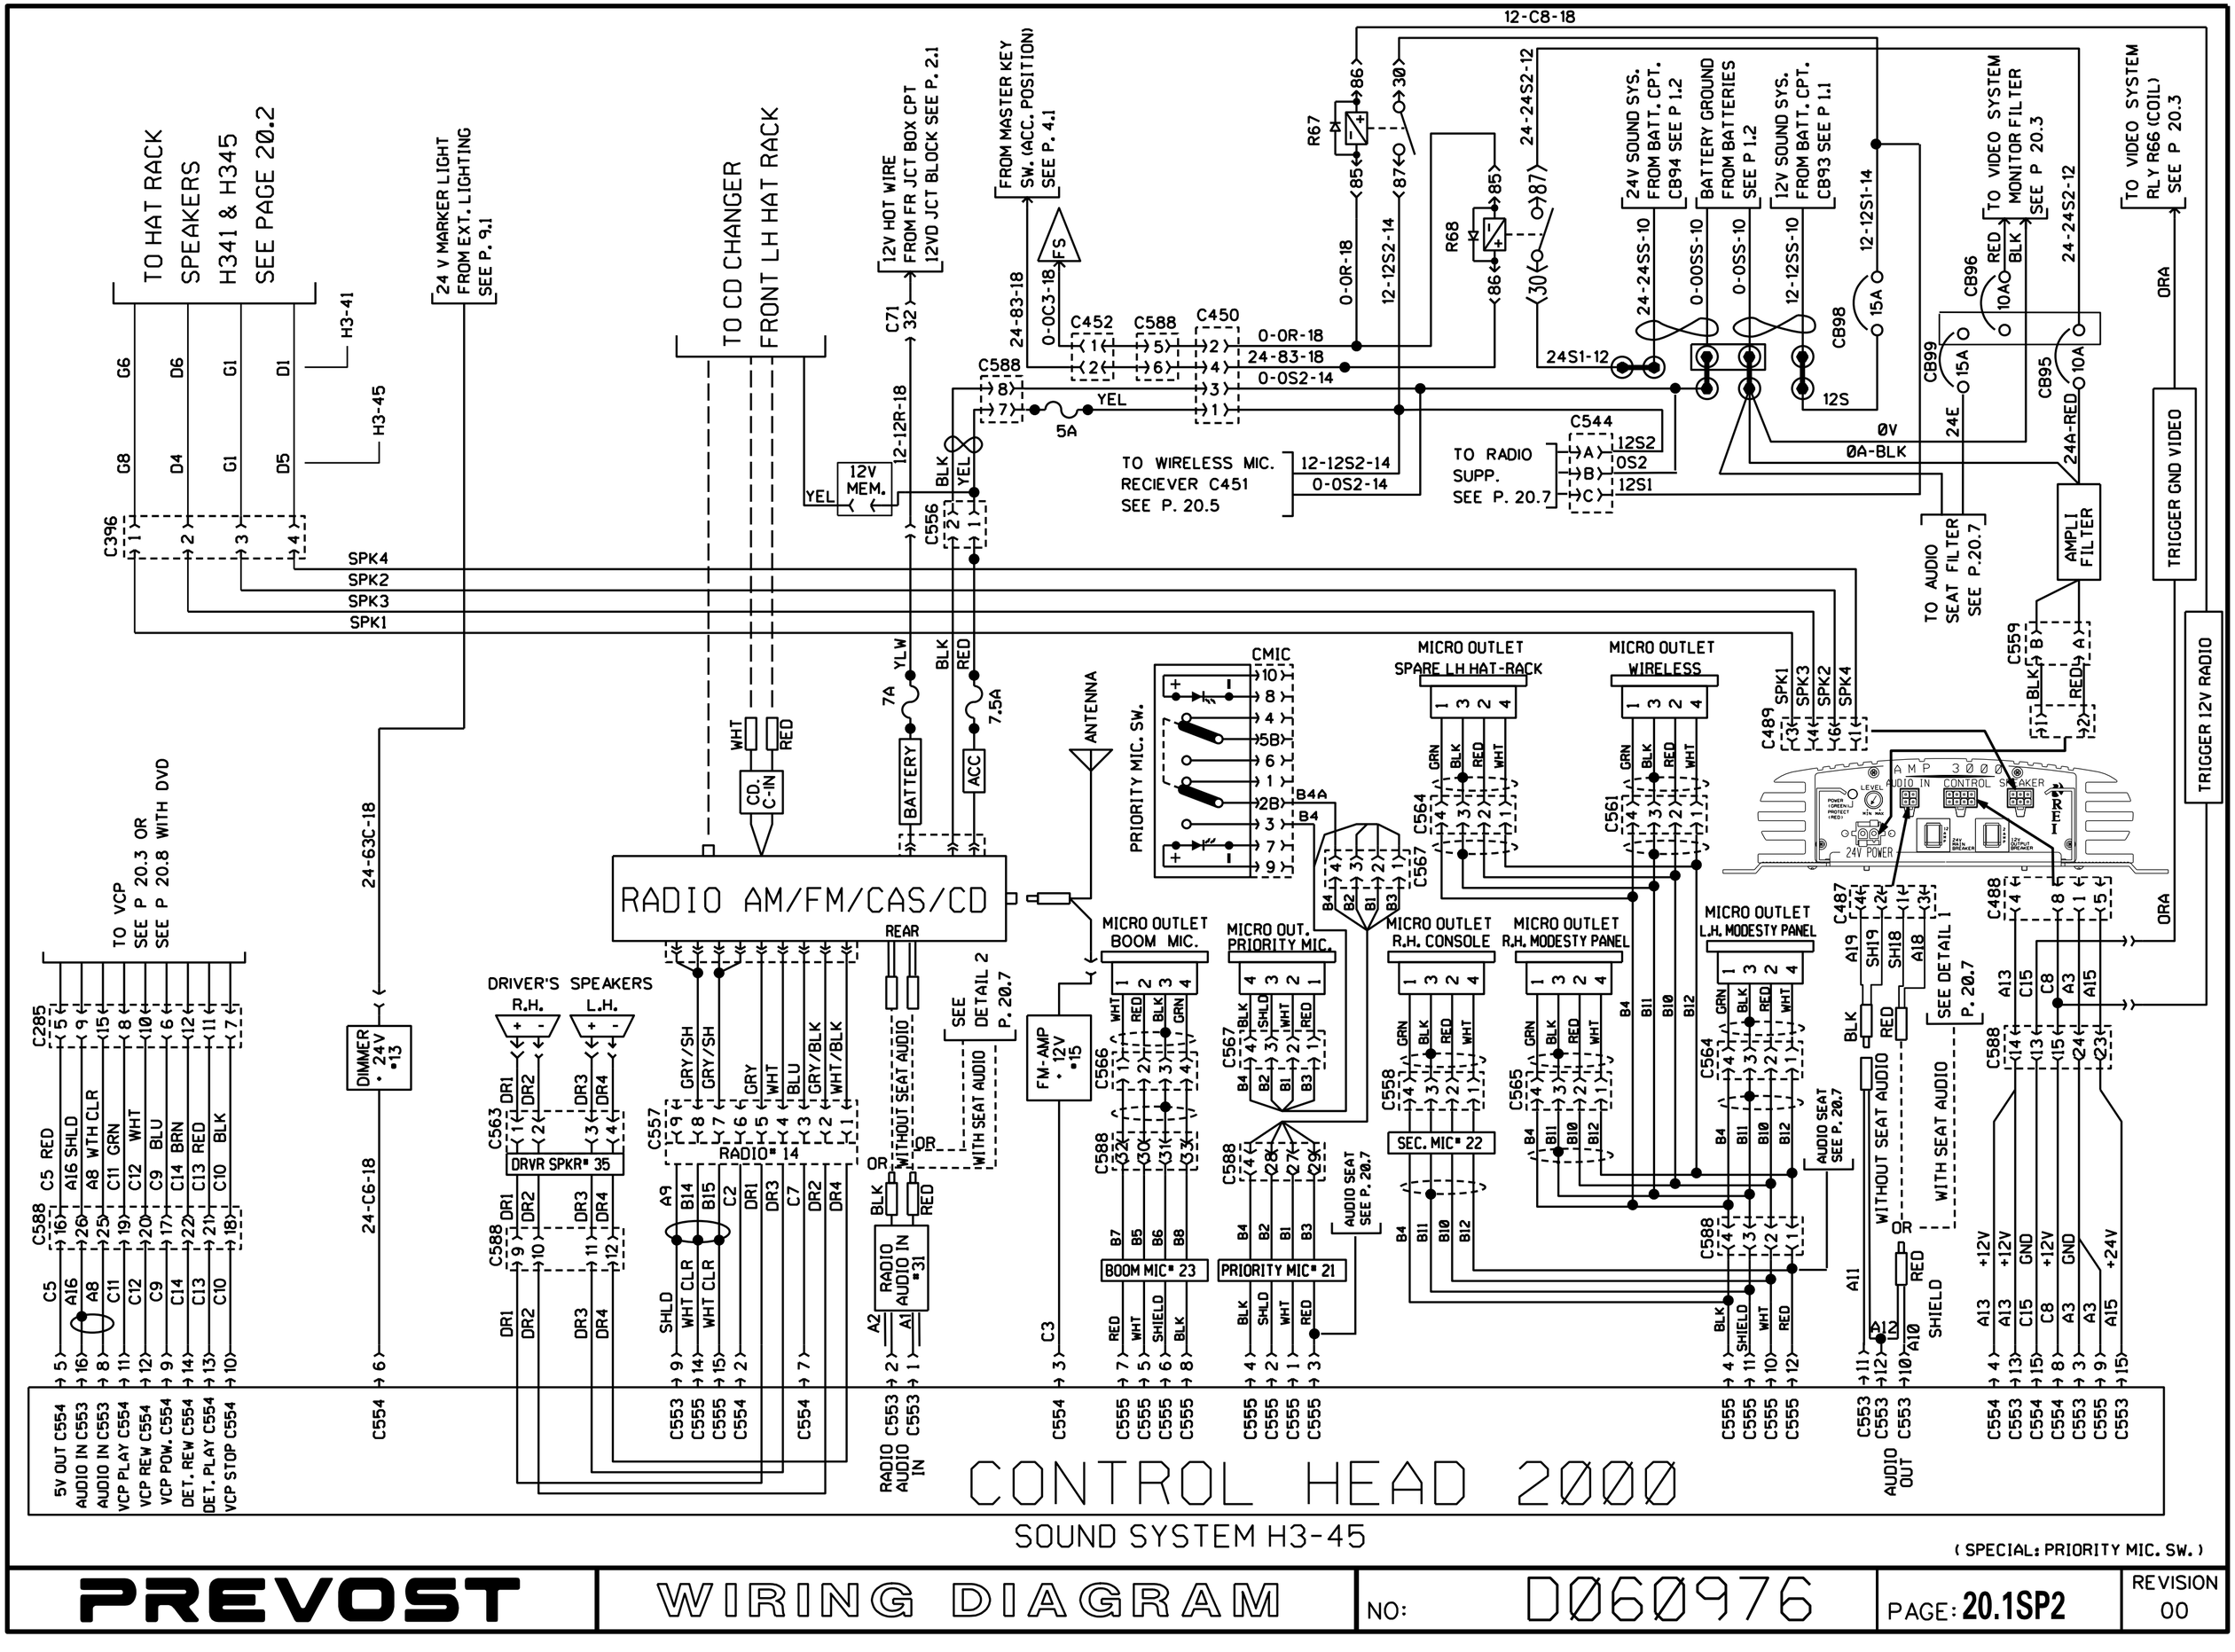

SOUND SYSTEM H3-45

(SPECIAL: PRIORITY MIC. SW.)

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 20.1SP2	REVISION 00

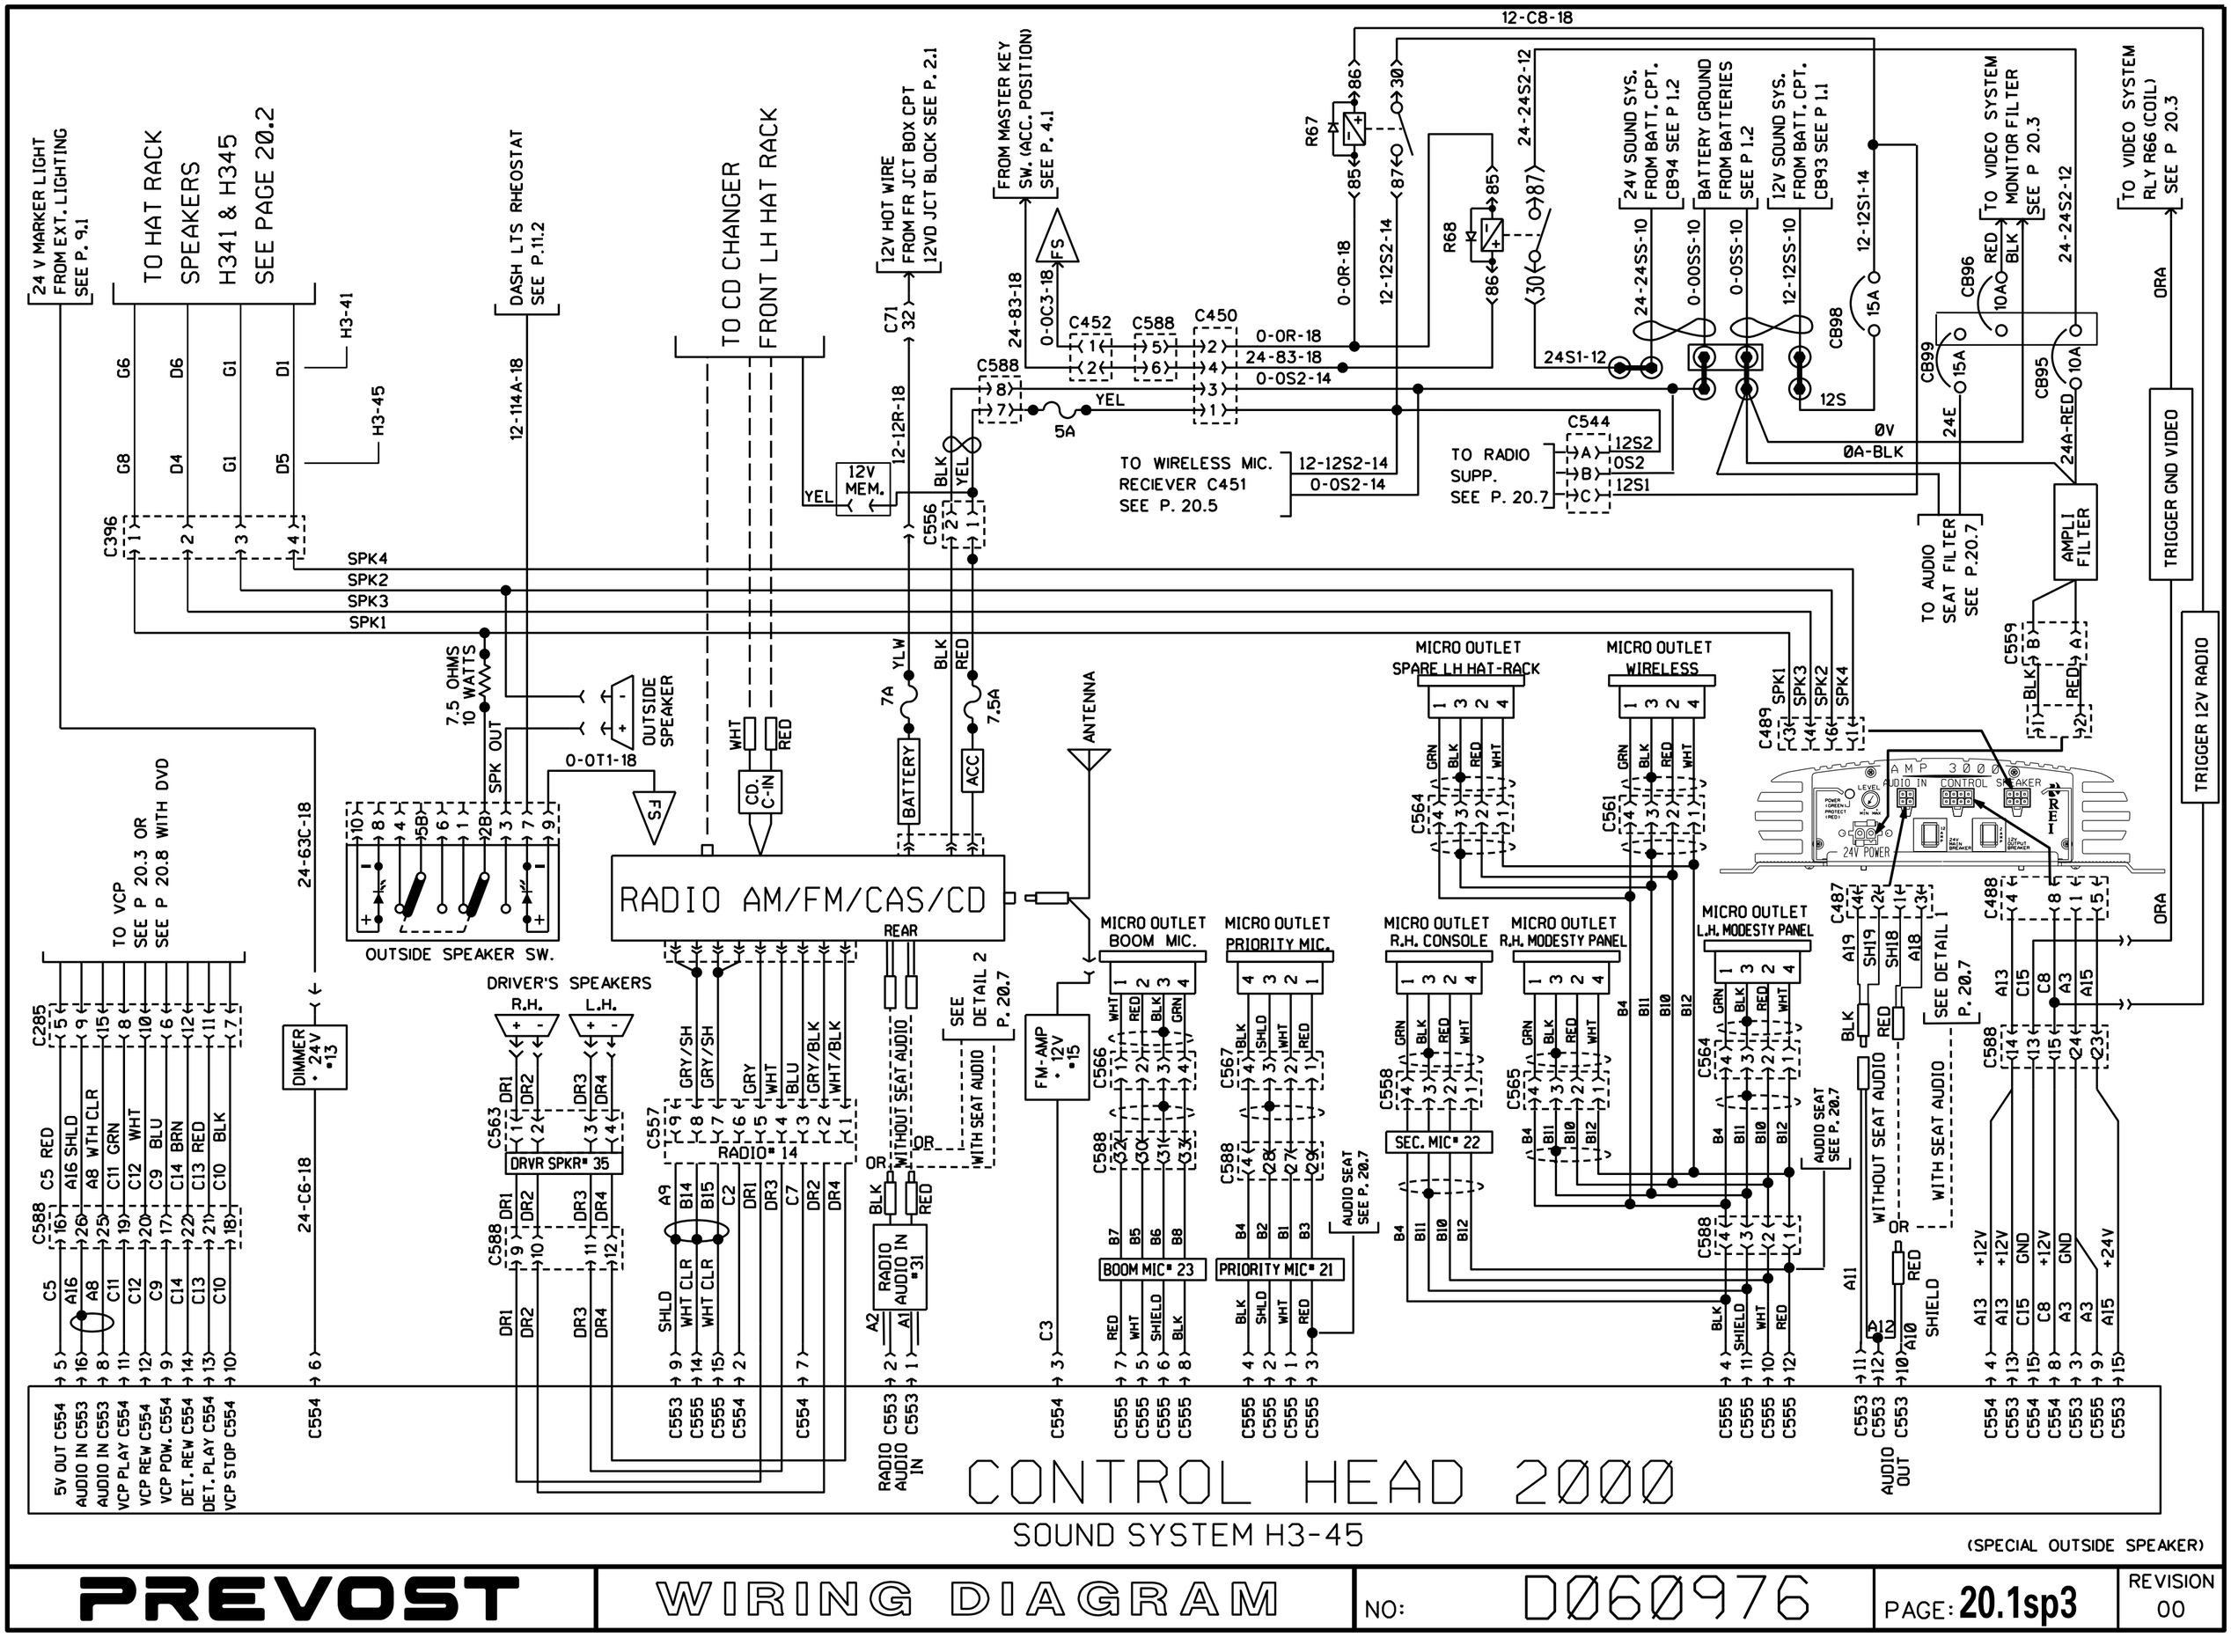

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 20.1sp3	REVISION 00

VEH. 4-4936

MISSISSIPPI STATE (2004) VIDEO/AUDIO SYSTEM

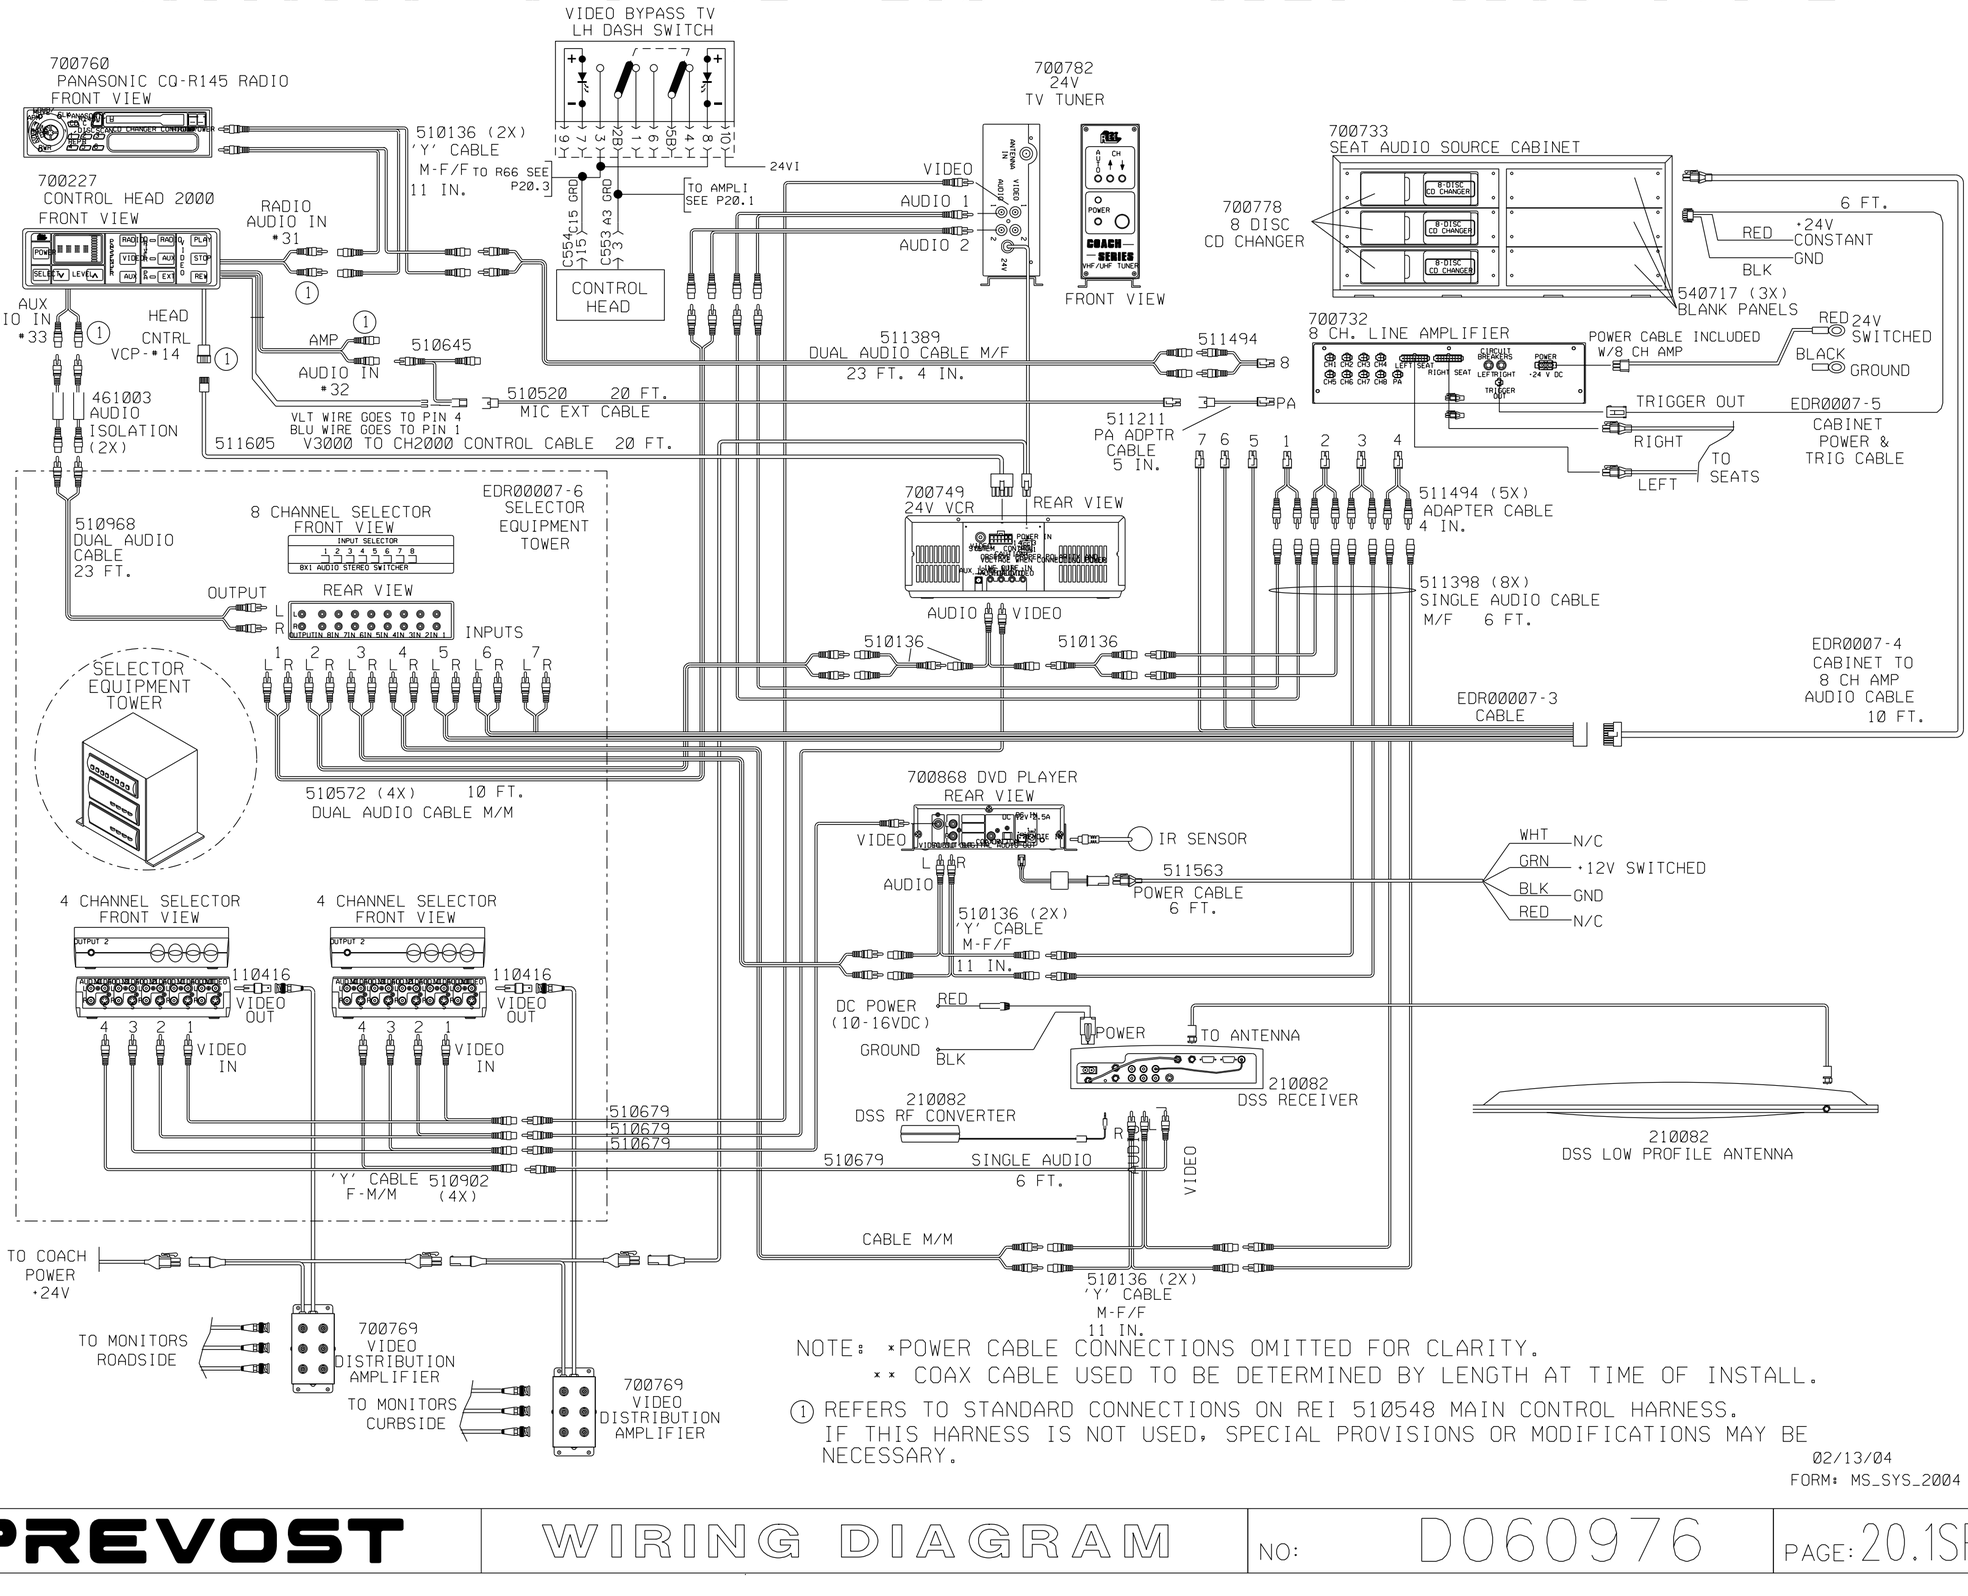

NOTE: *POWER CABLE CONNECTIONS OMITTED FOR CLARITY.
** COAX CABLE USED TO BE DETERMINED BY LENGTH AT TIME OF INSTALL.

① REFERS TO STANDARD CONNECTIONS ON REI 510548 MAIN CONTROL HARNESS. IF THIS HARNESS IS NOT USED, SPECIAL PROVISIONS OR MODIFICATIONS MAY BE NECESSARY.

02/13/04
FORM: MS_SYS_2004

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 20.1SP4	REVISION 00

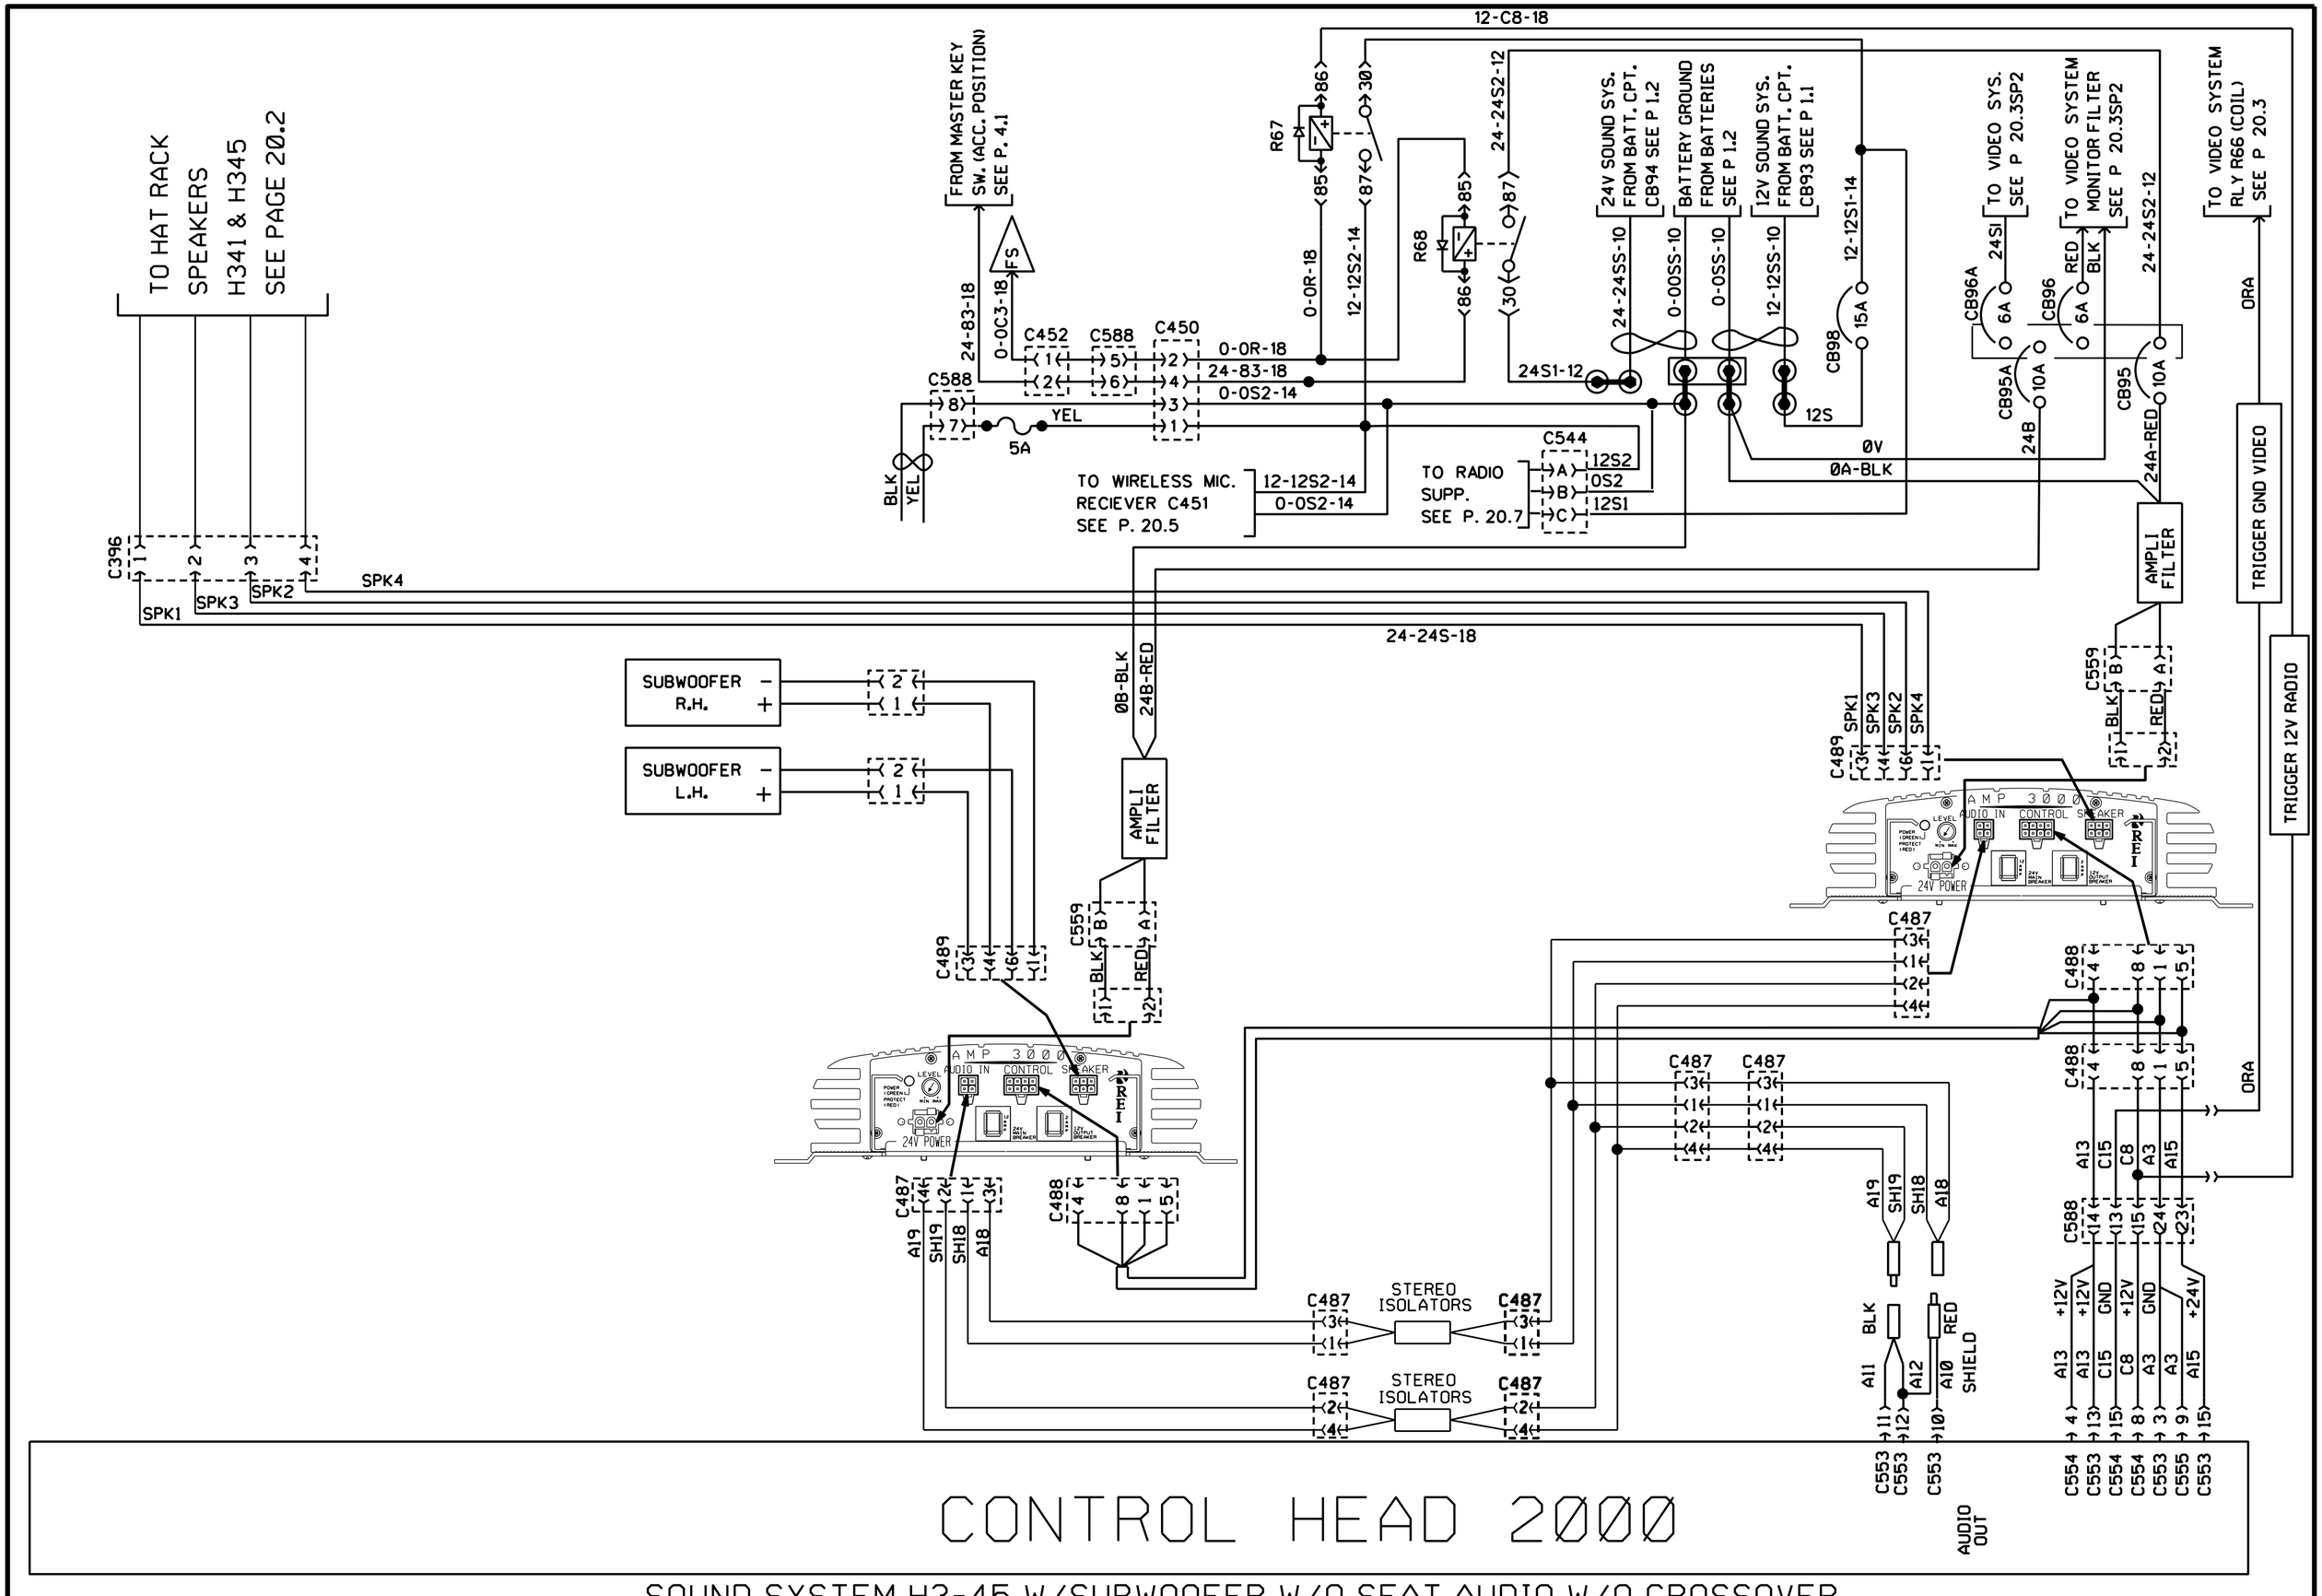

CONTROL HEAD 2000

SOUND SYSTEM H3-45 W/SUBWOOFER W/O SEAT AUDIO W/O CROSSOVER

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 20.1SP5	REVISION 00

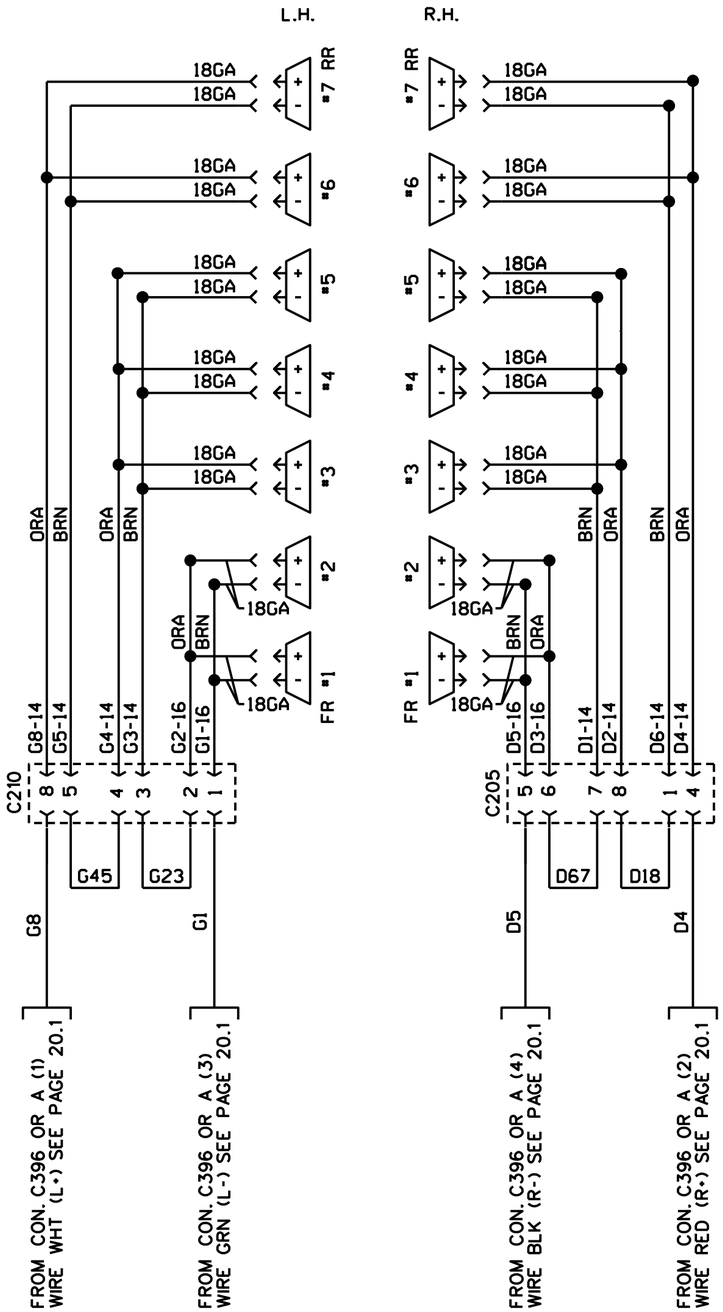

HAT RACK SPEAKERS H3-45

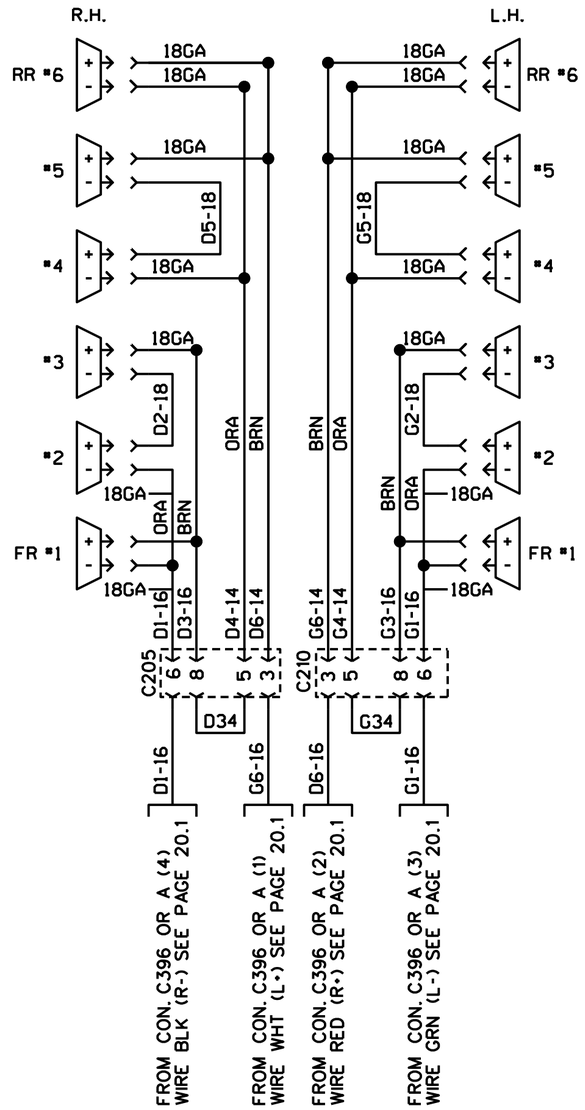

HAT RACK SPEAKERS H3-41

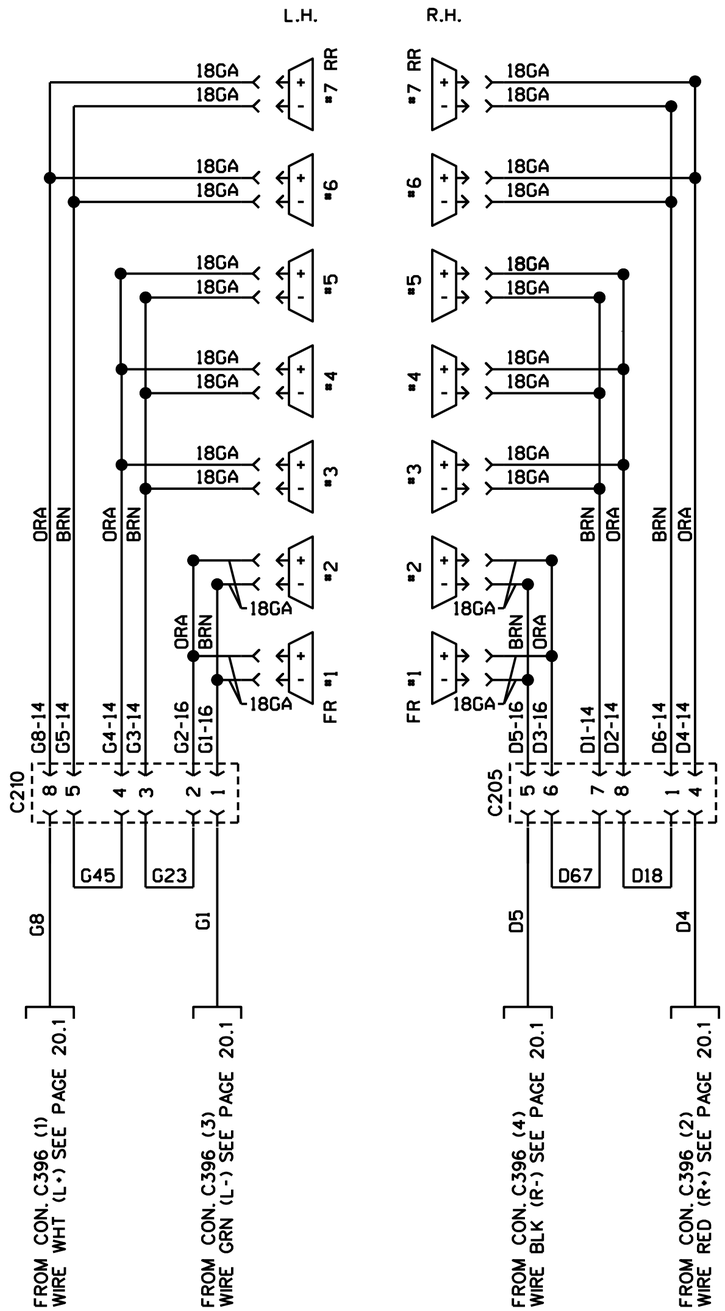

HAT RACK SPEAKERS H3-45

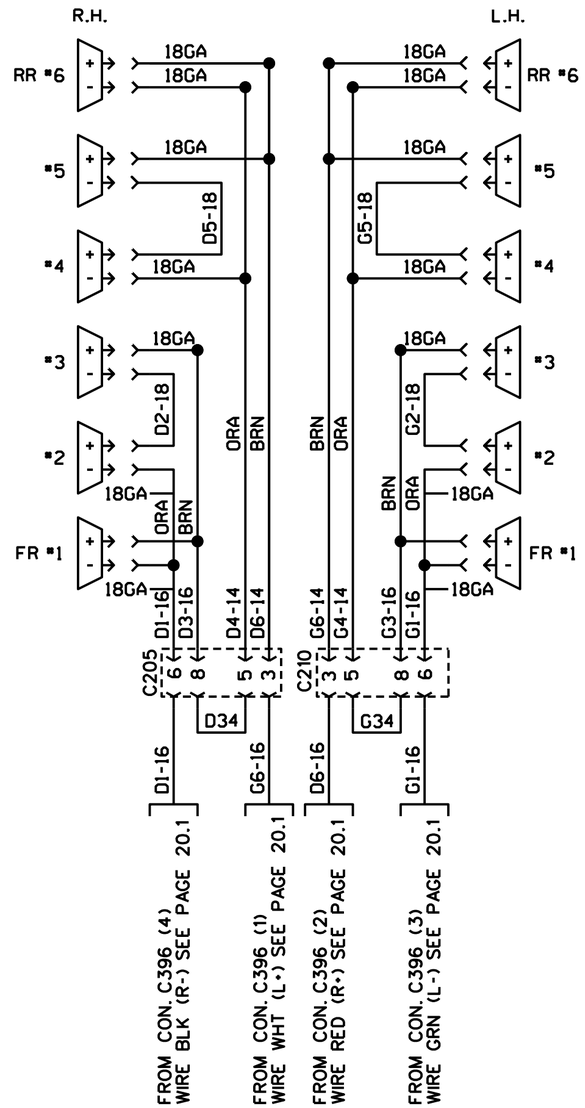

HAT RACK SPEAKERS H3-41

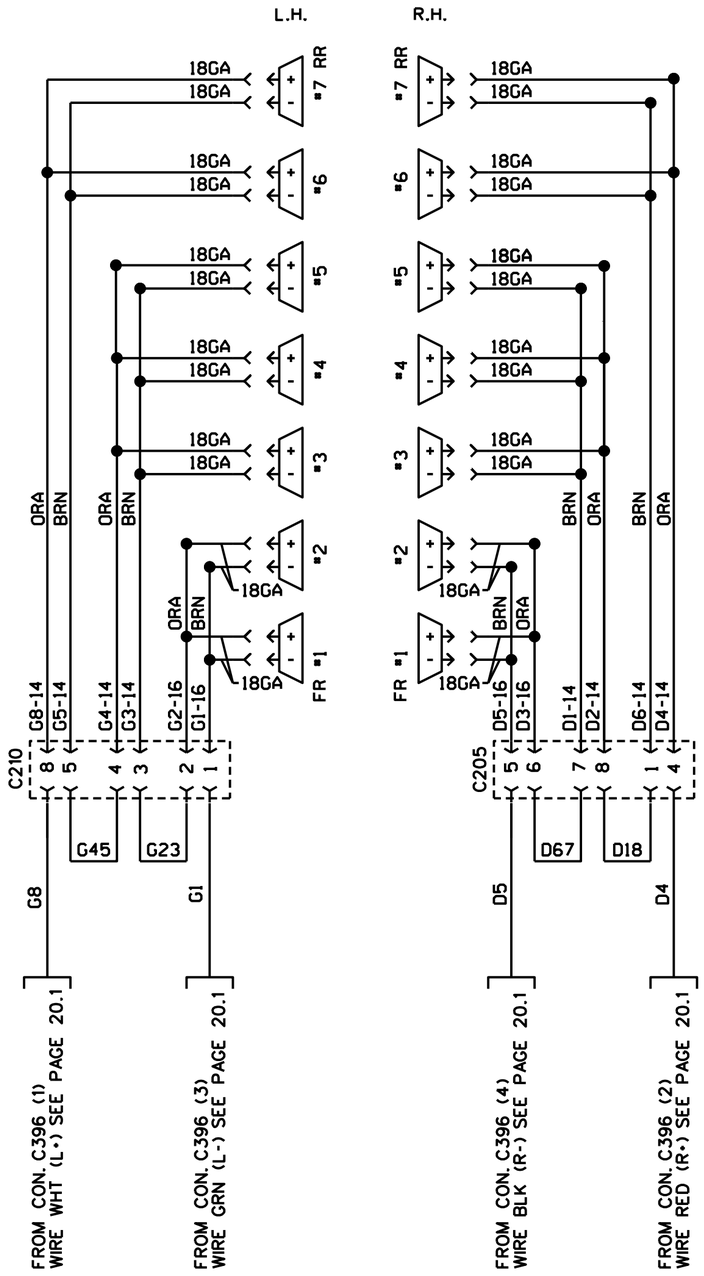

HAT RACK SPEAKERS H3-45

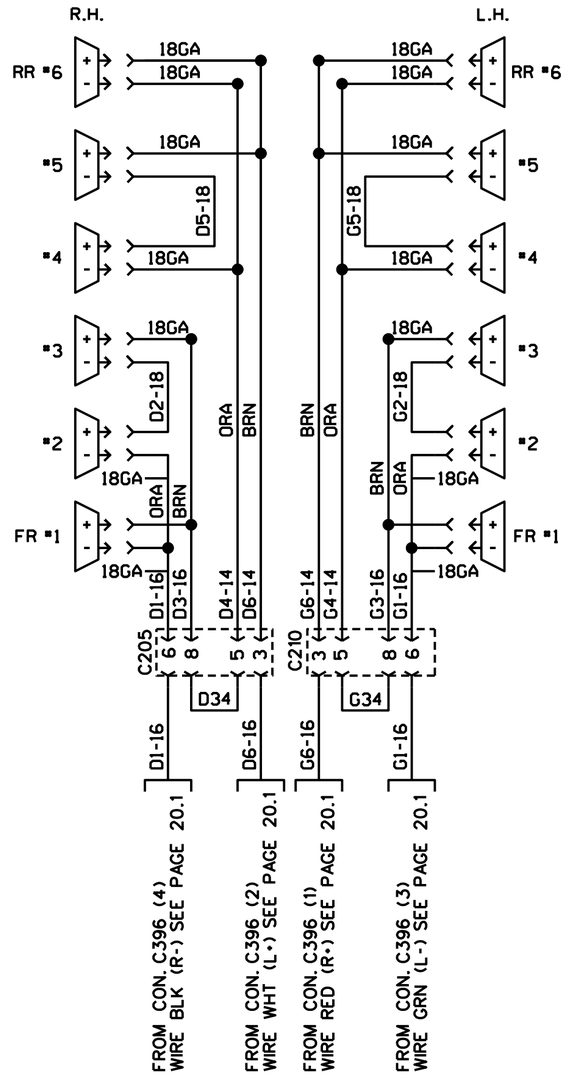

HAT RACK SPEAKERS H3-41

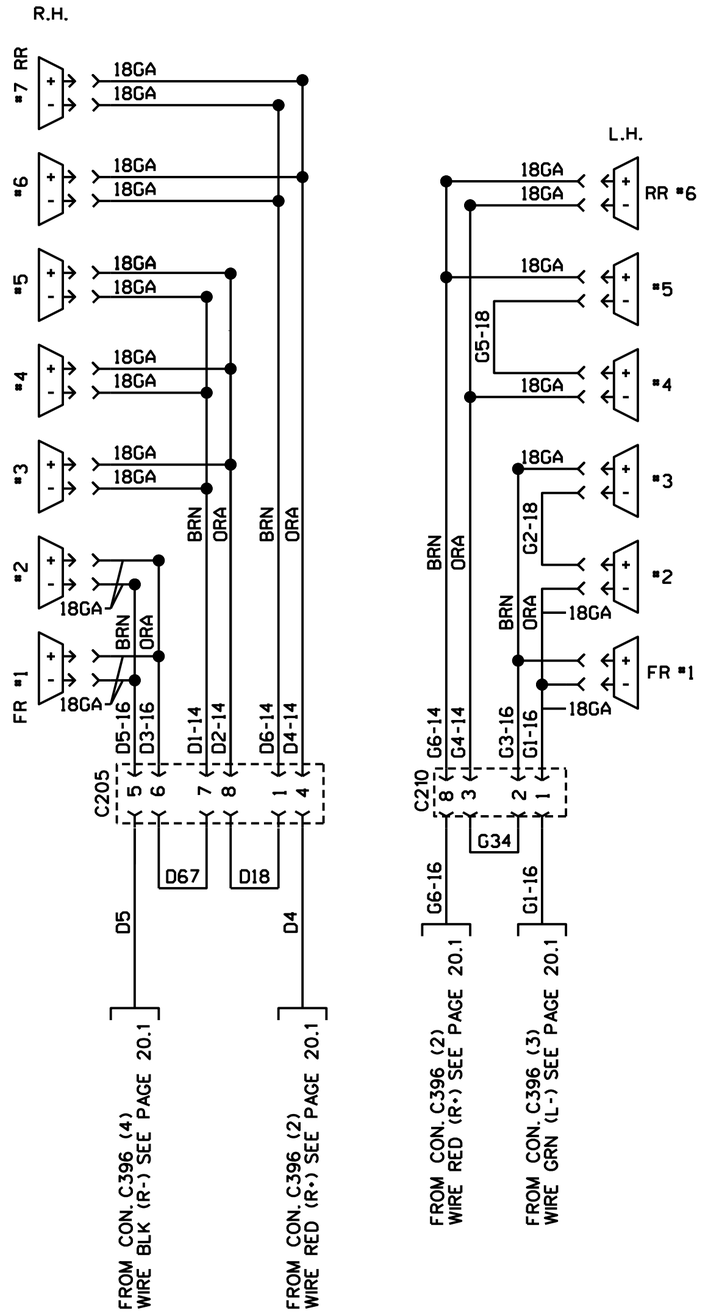

HAT RACK SPEAKERS H3-45

(L.H. HAT RACK SPECIAL ARRANGEMENT H341)

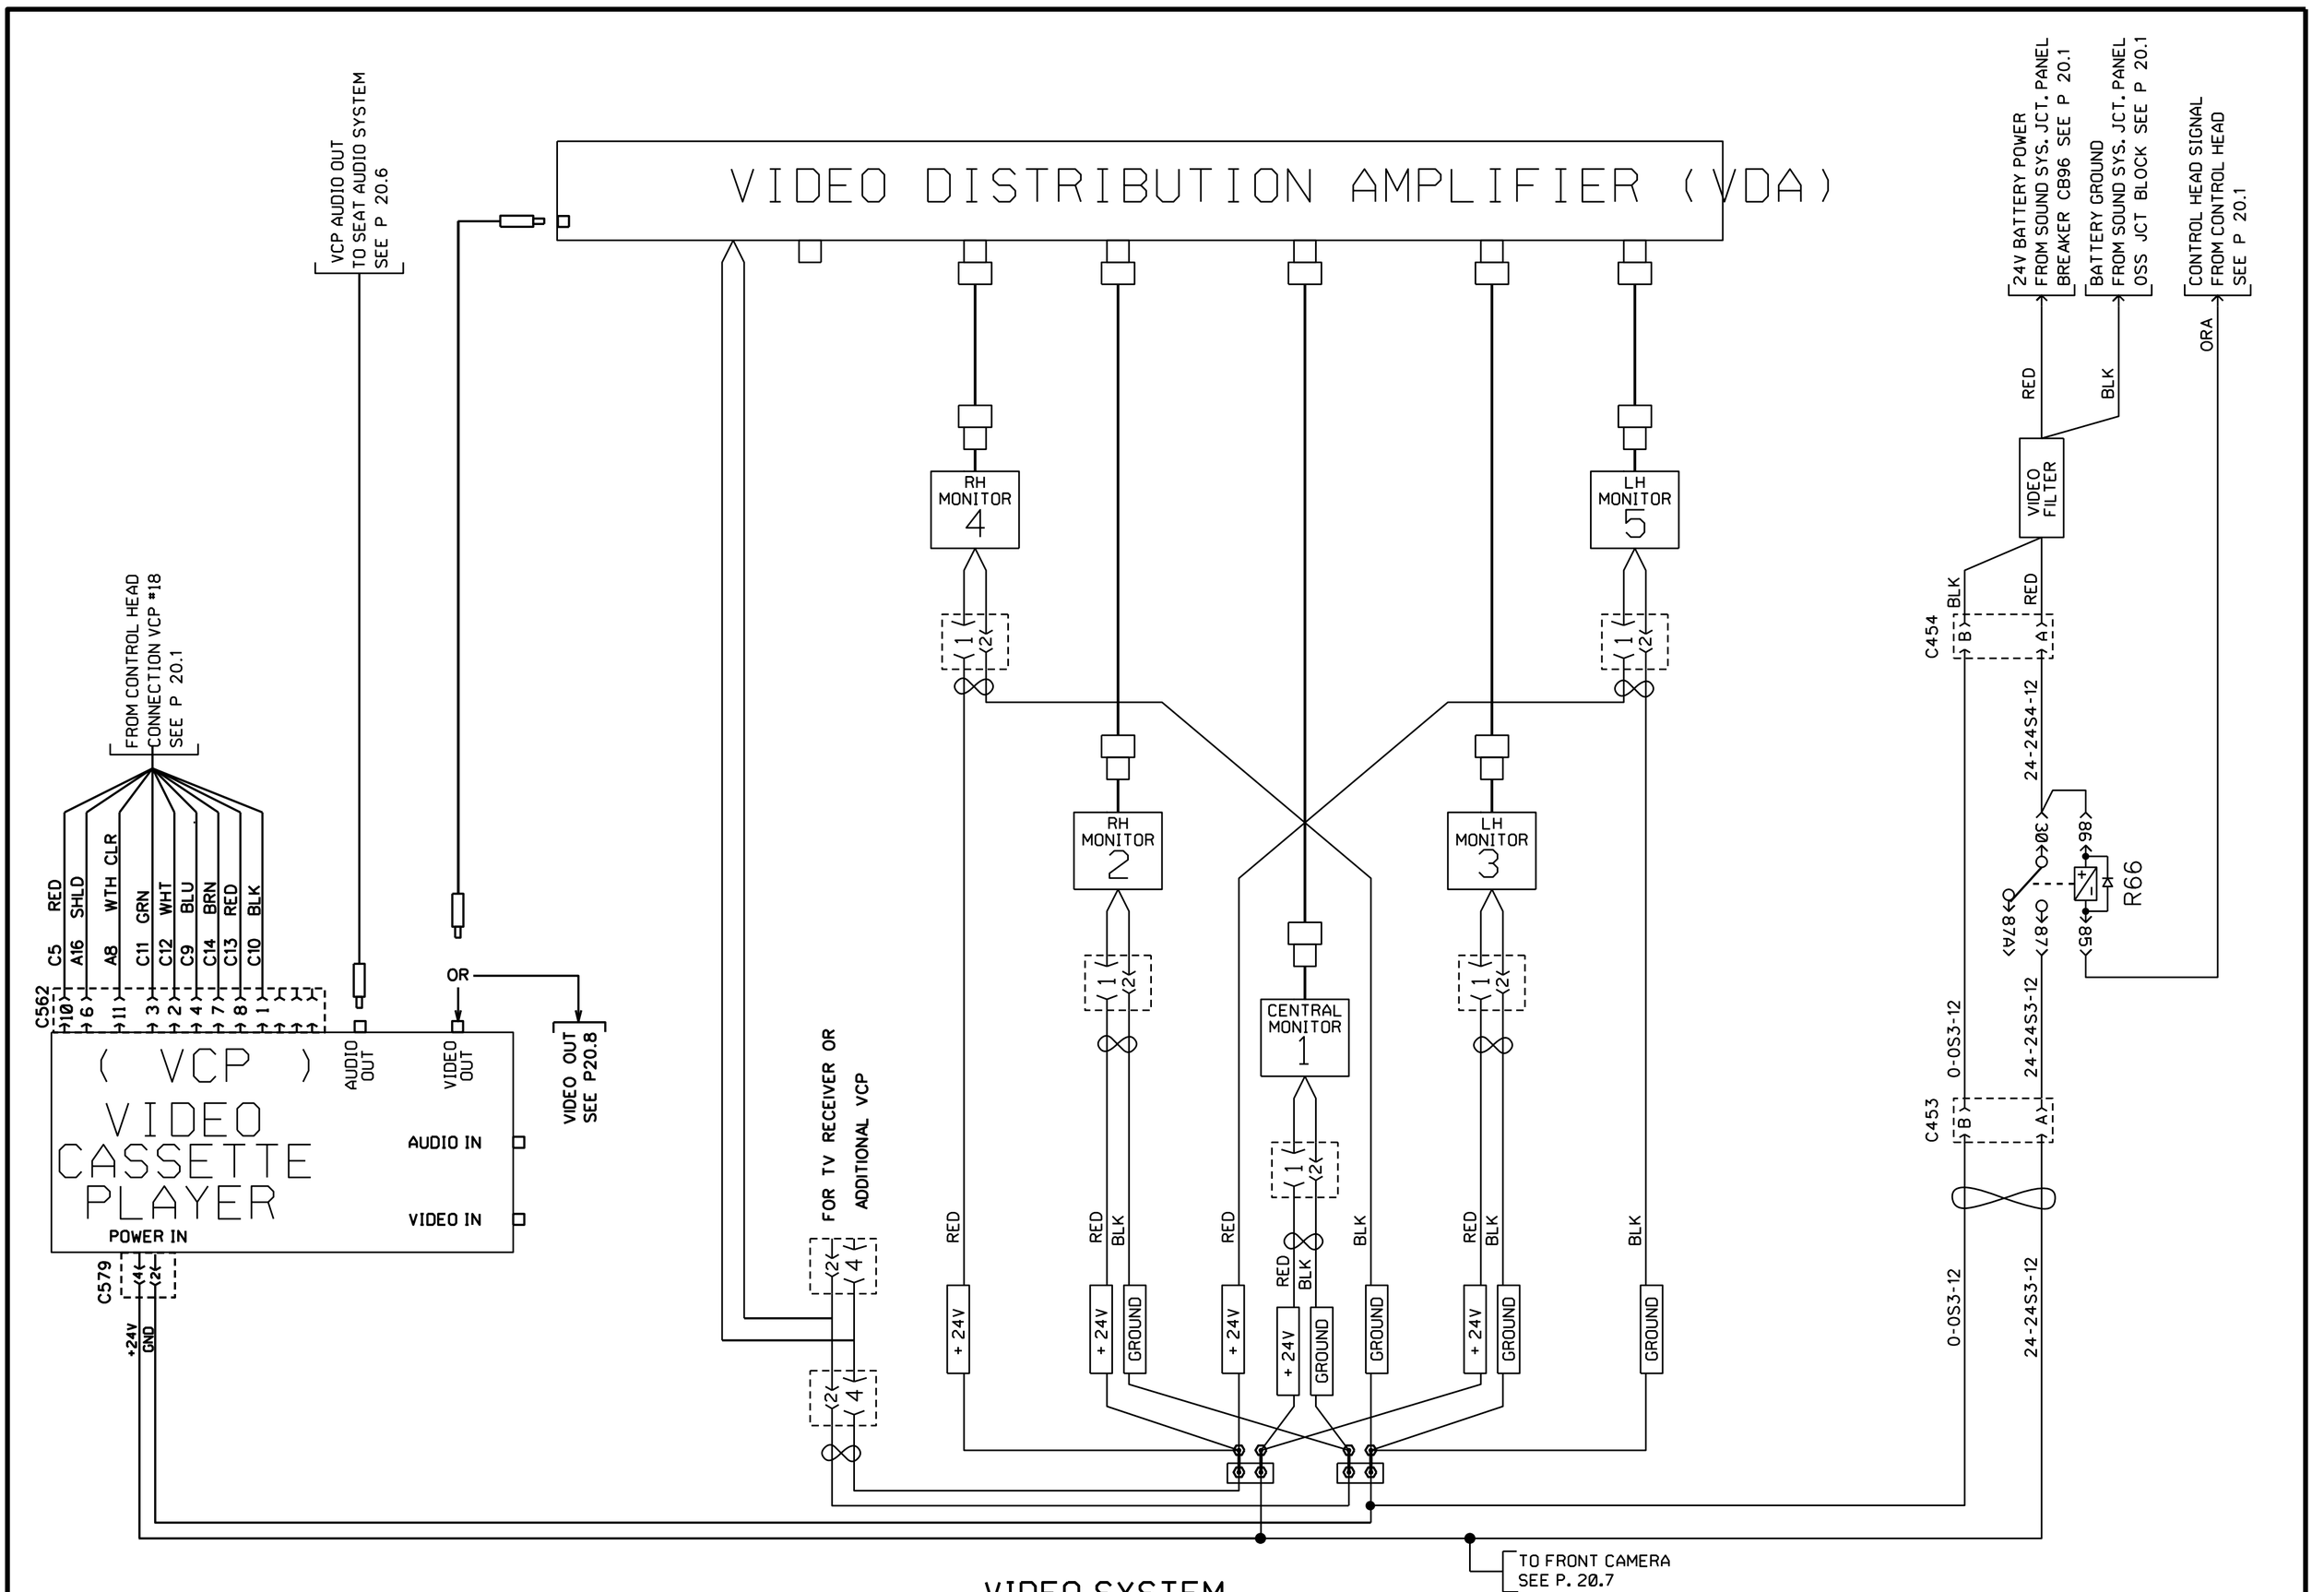

VIDEO SYSTEM

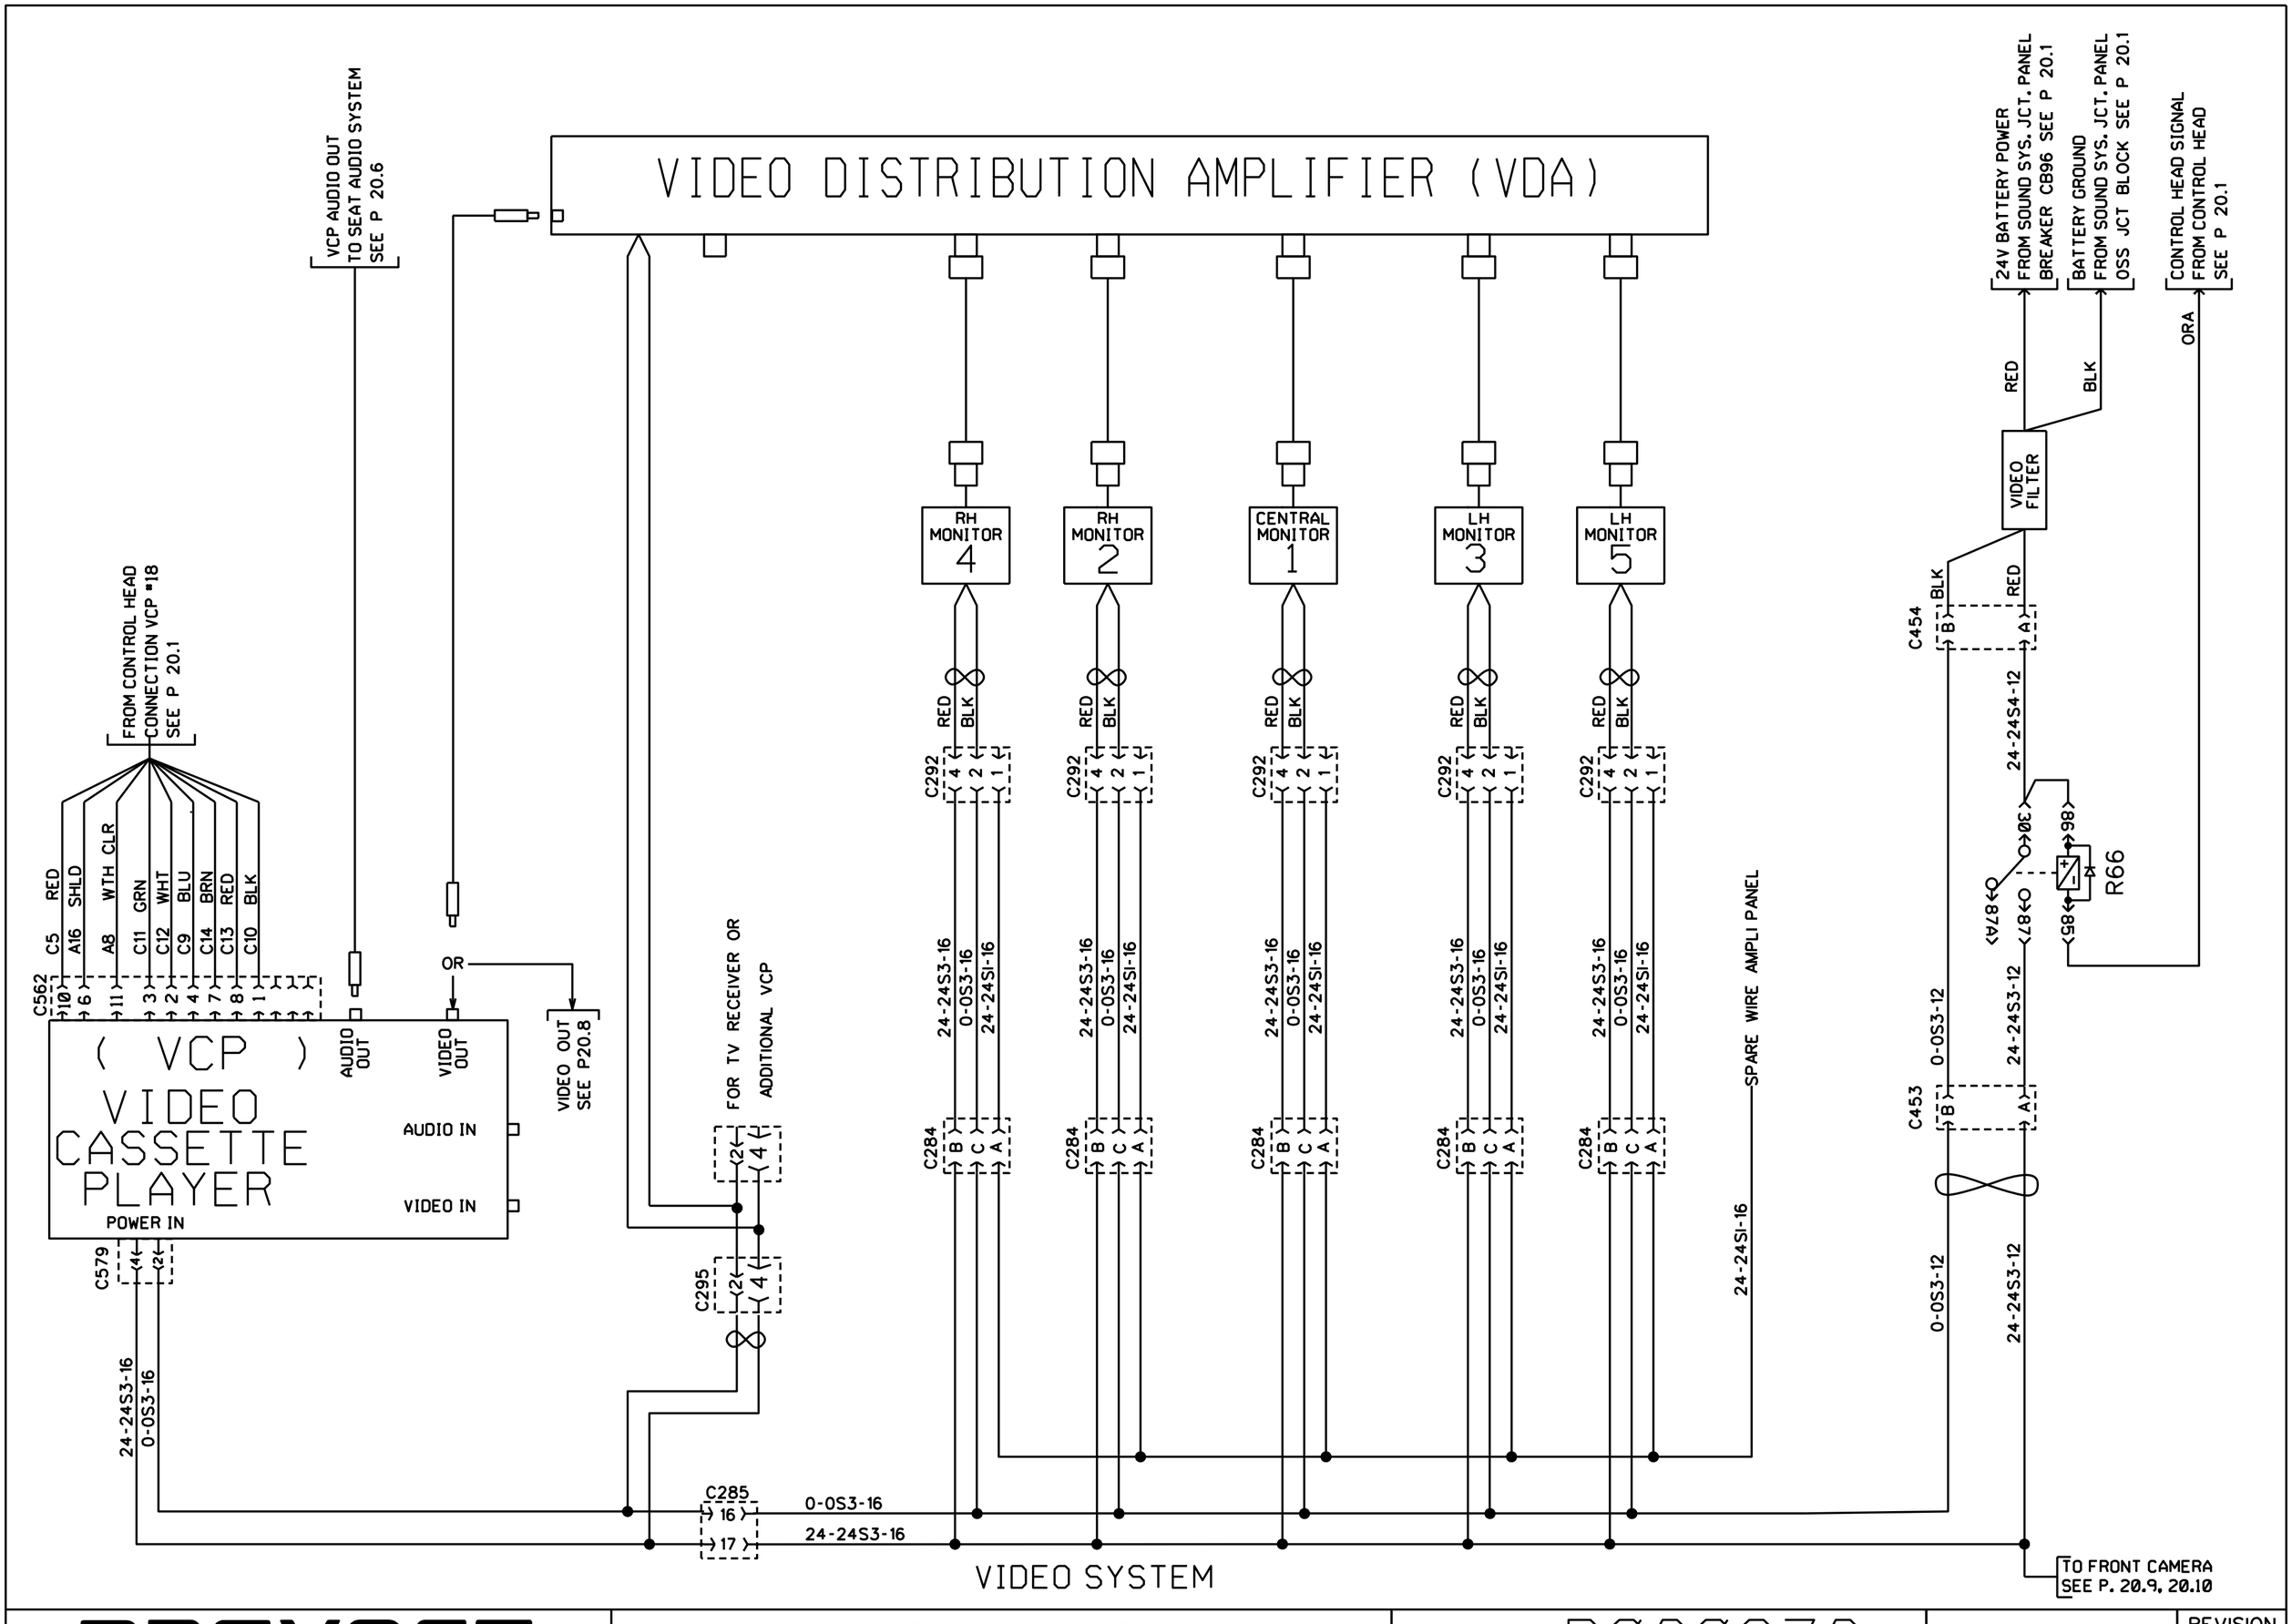

VIDEO SYSTEM

FROM DVD (VIDEO OUT) SEE P.20.8, 20.9
FROM RELAY RCA DVD (VIDEO OUT) SEE P.20.10

VCP AUDIO OUT
TO SEAT AUDIO SYSTEM
SEE P 20.6

WITH DVD ONLY

VIDEO DISTRIBUTION AMPLIFIER (VDA)

RH MONITOR 4
RH MONITOR 2
CENTRAL MONITOR 1
LH MONITOR 3
LH MONITOR 5

FROM CONTROL HEAD
CONNECTION VCP #18
SEE P 20.1

C562: RED, SHLD, WTH CLR, GRN, WHT, BLU, BRN, RED, BLK
C5: A16, A8, C11, C12, C9, C14, C13, C10

(VCP)
VIDEO CASSETTE PLAYER
POWER IN
AUDIO IN
VIDEO IN
AUDIO OUT
VIDEO OUT

OR

VIDEO OUT
SEE P20.8

FOR TV RECEIVER OR
ADDITIONAL VCP

C579
0-0S3-16
24-24S3-16
C295
C285
16
17

C292, C284
24-24S3-16
0-0S3-16
24-24SI-16
RED
BLK

SPARE WIRE AMPLI PANEL

24V BATTERY POWER
FROM SOUND SYS. JCT. PANEL
BREAKER CB96 SEE P 20.1

BATTERY GROUND
FROM SOUND SYS. JCT. PANEL
OSS JCT BLOCK SEE P 20.1

CONTROL HEAD SIGNAL
FROM CONTROL HEAD
SEE P 20.1

ORA

VIDEO FILTER
RED
BLK
C454
24-24S4-12
R66
30
86
87A
87
85

C453
0-0S3-12
24-24S3-12

TO FRONT CAMERA
SEE P. 20.9, 20.10

VIDEO SYSTEM

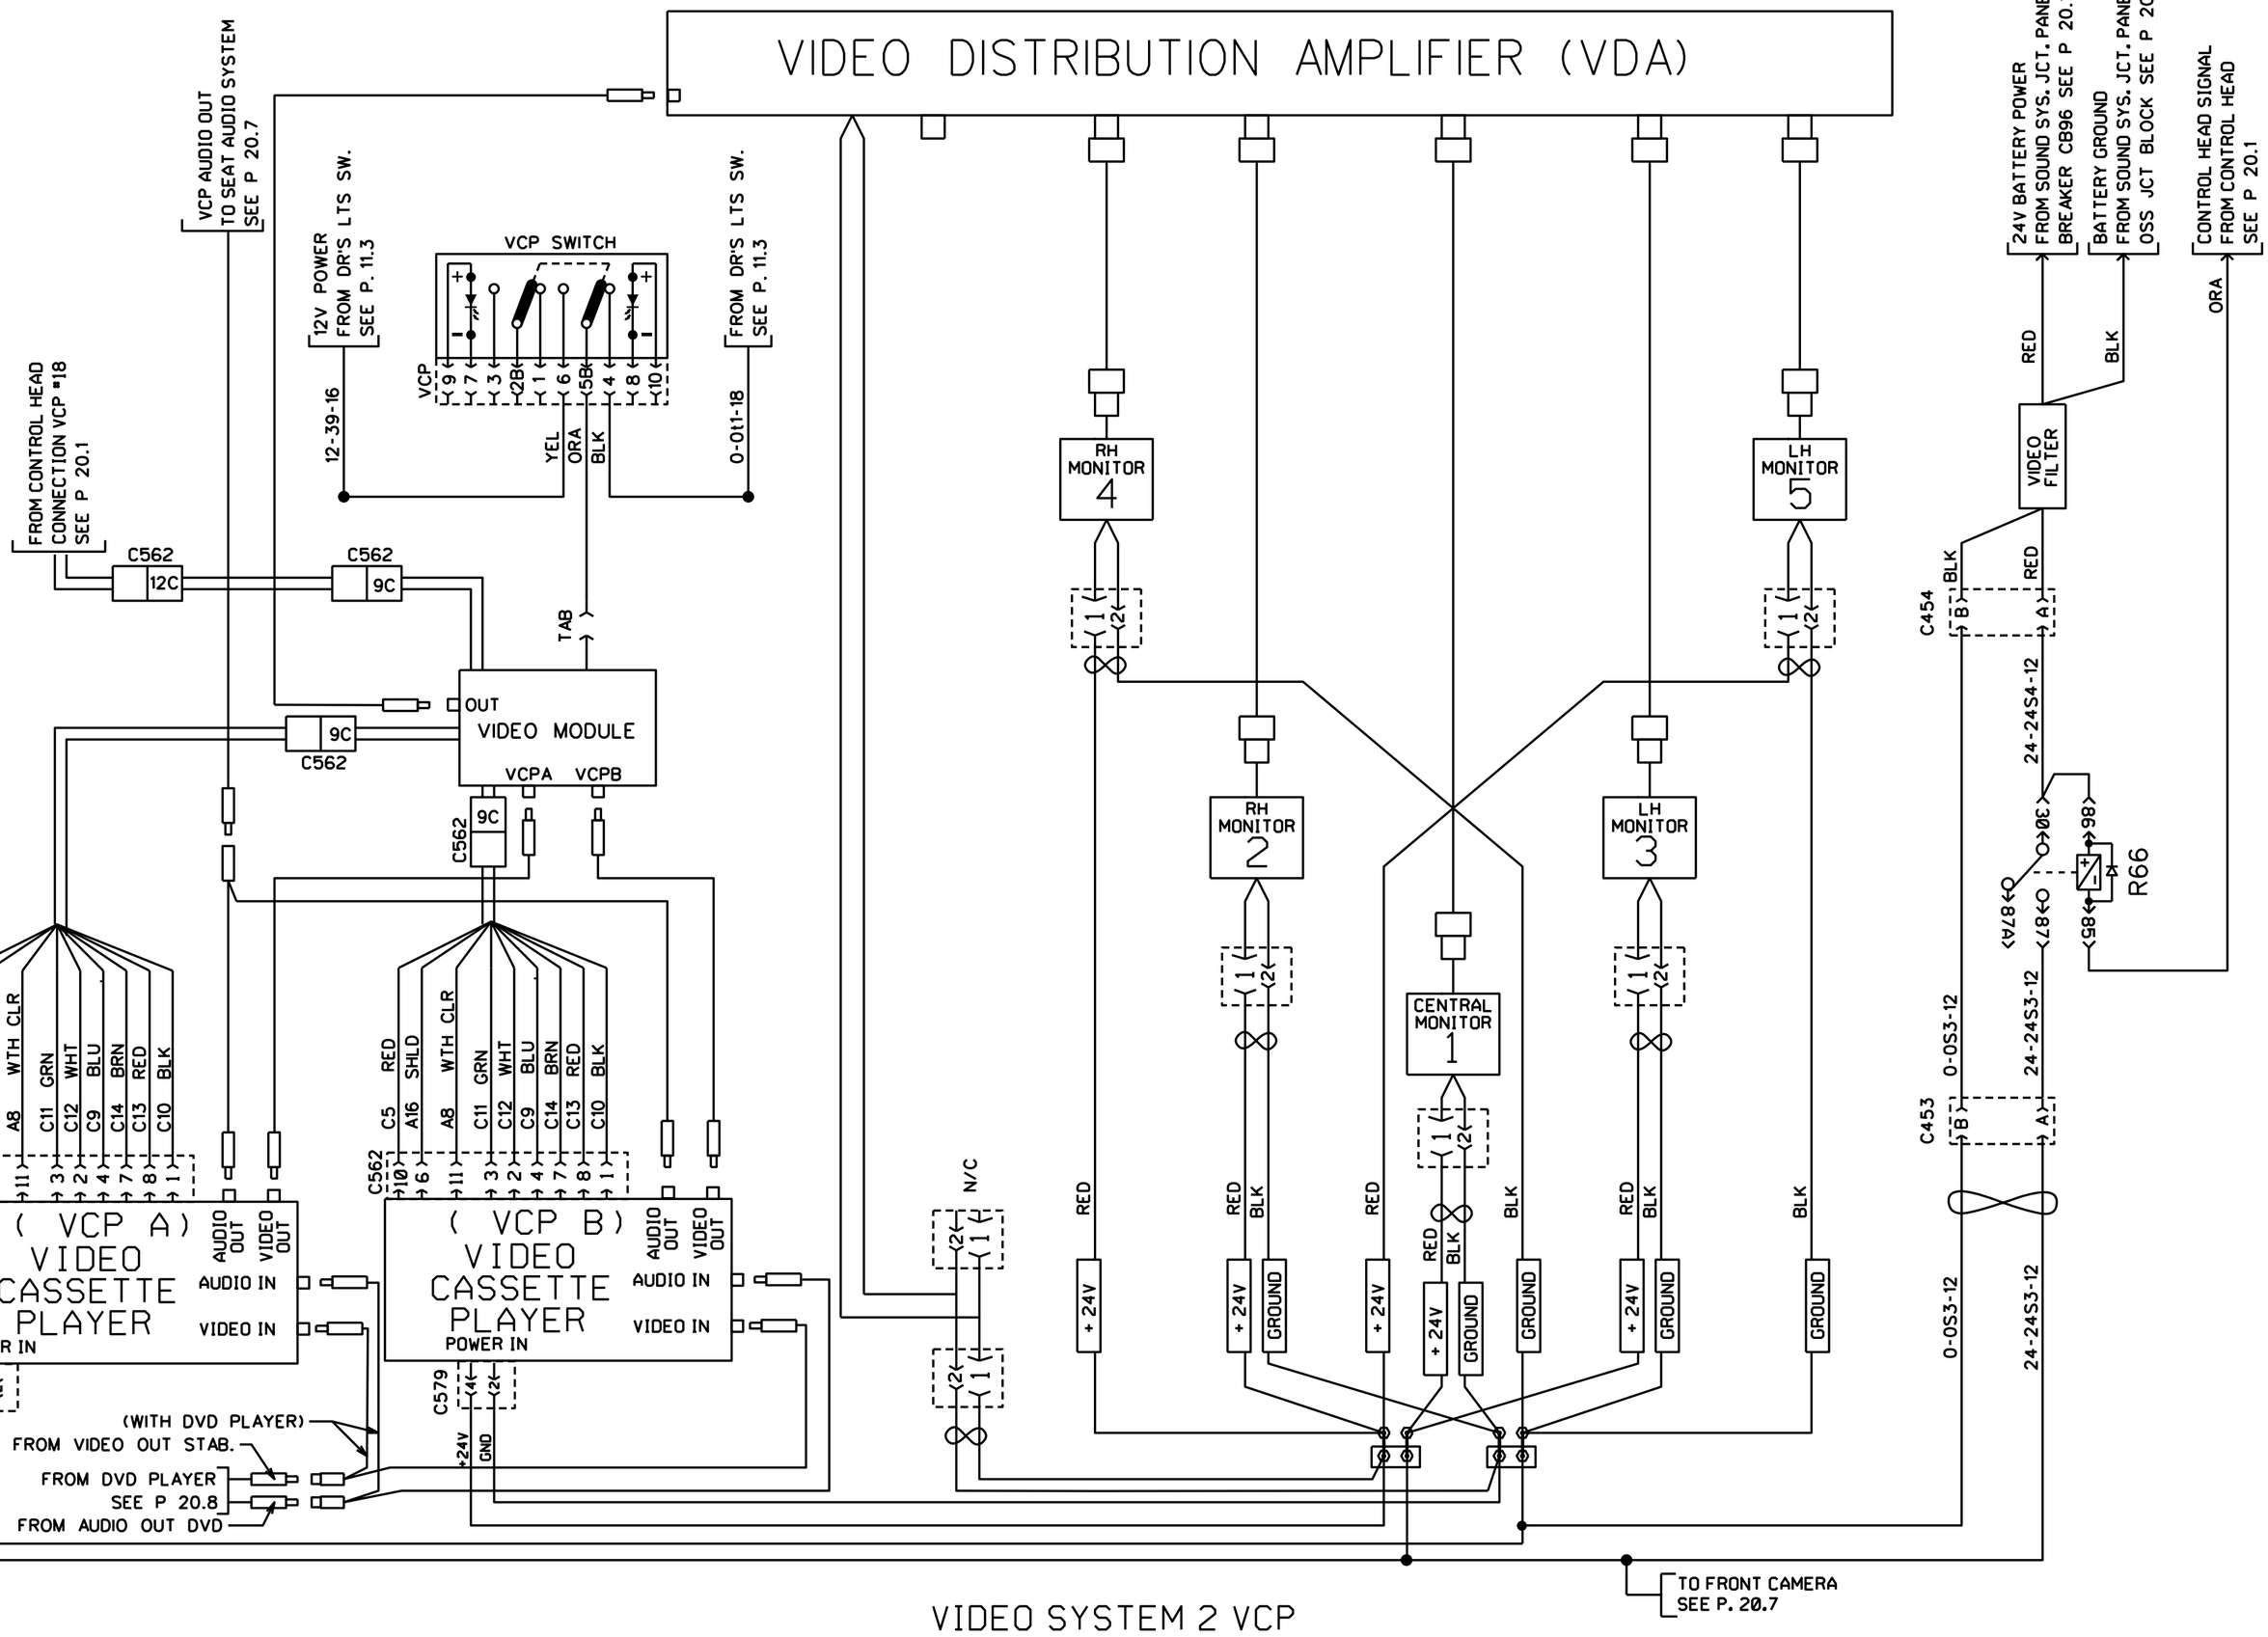

VIDEO SYSTEM 2 VCP

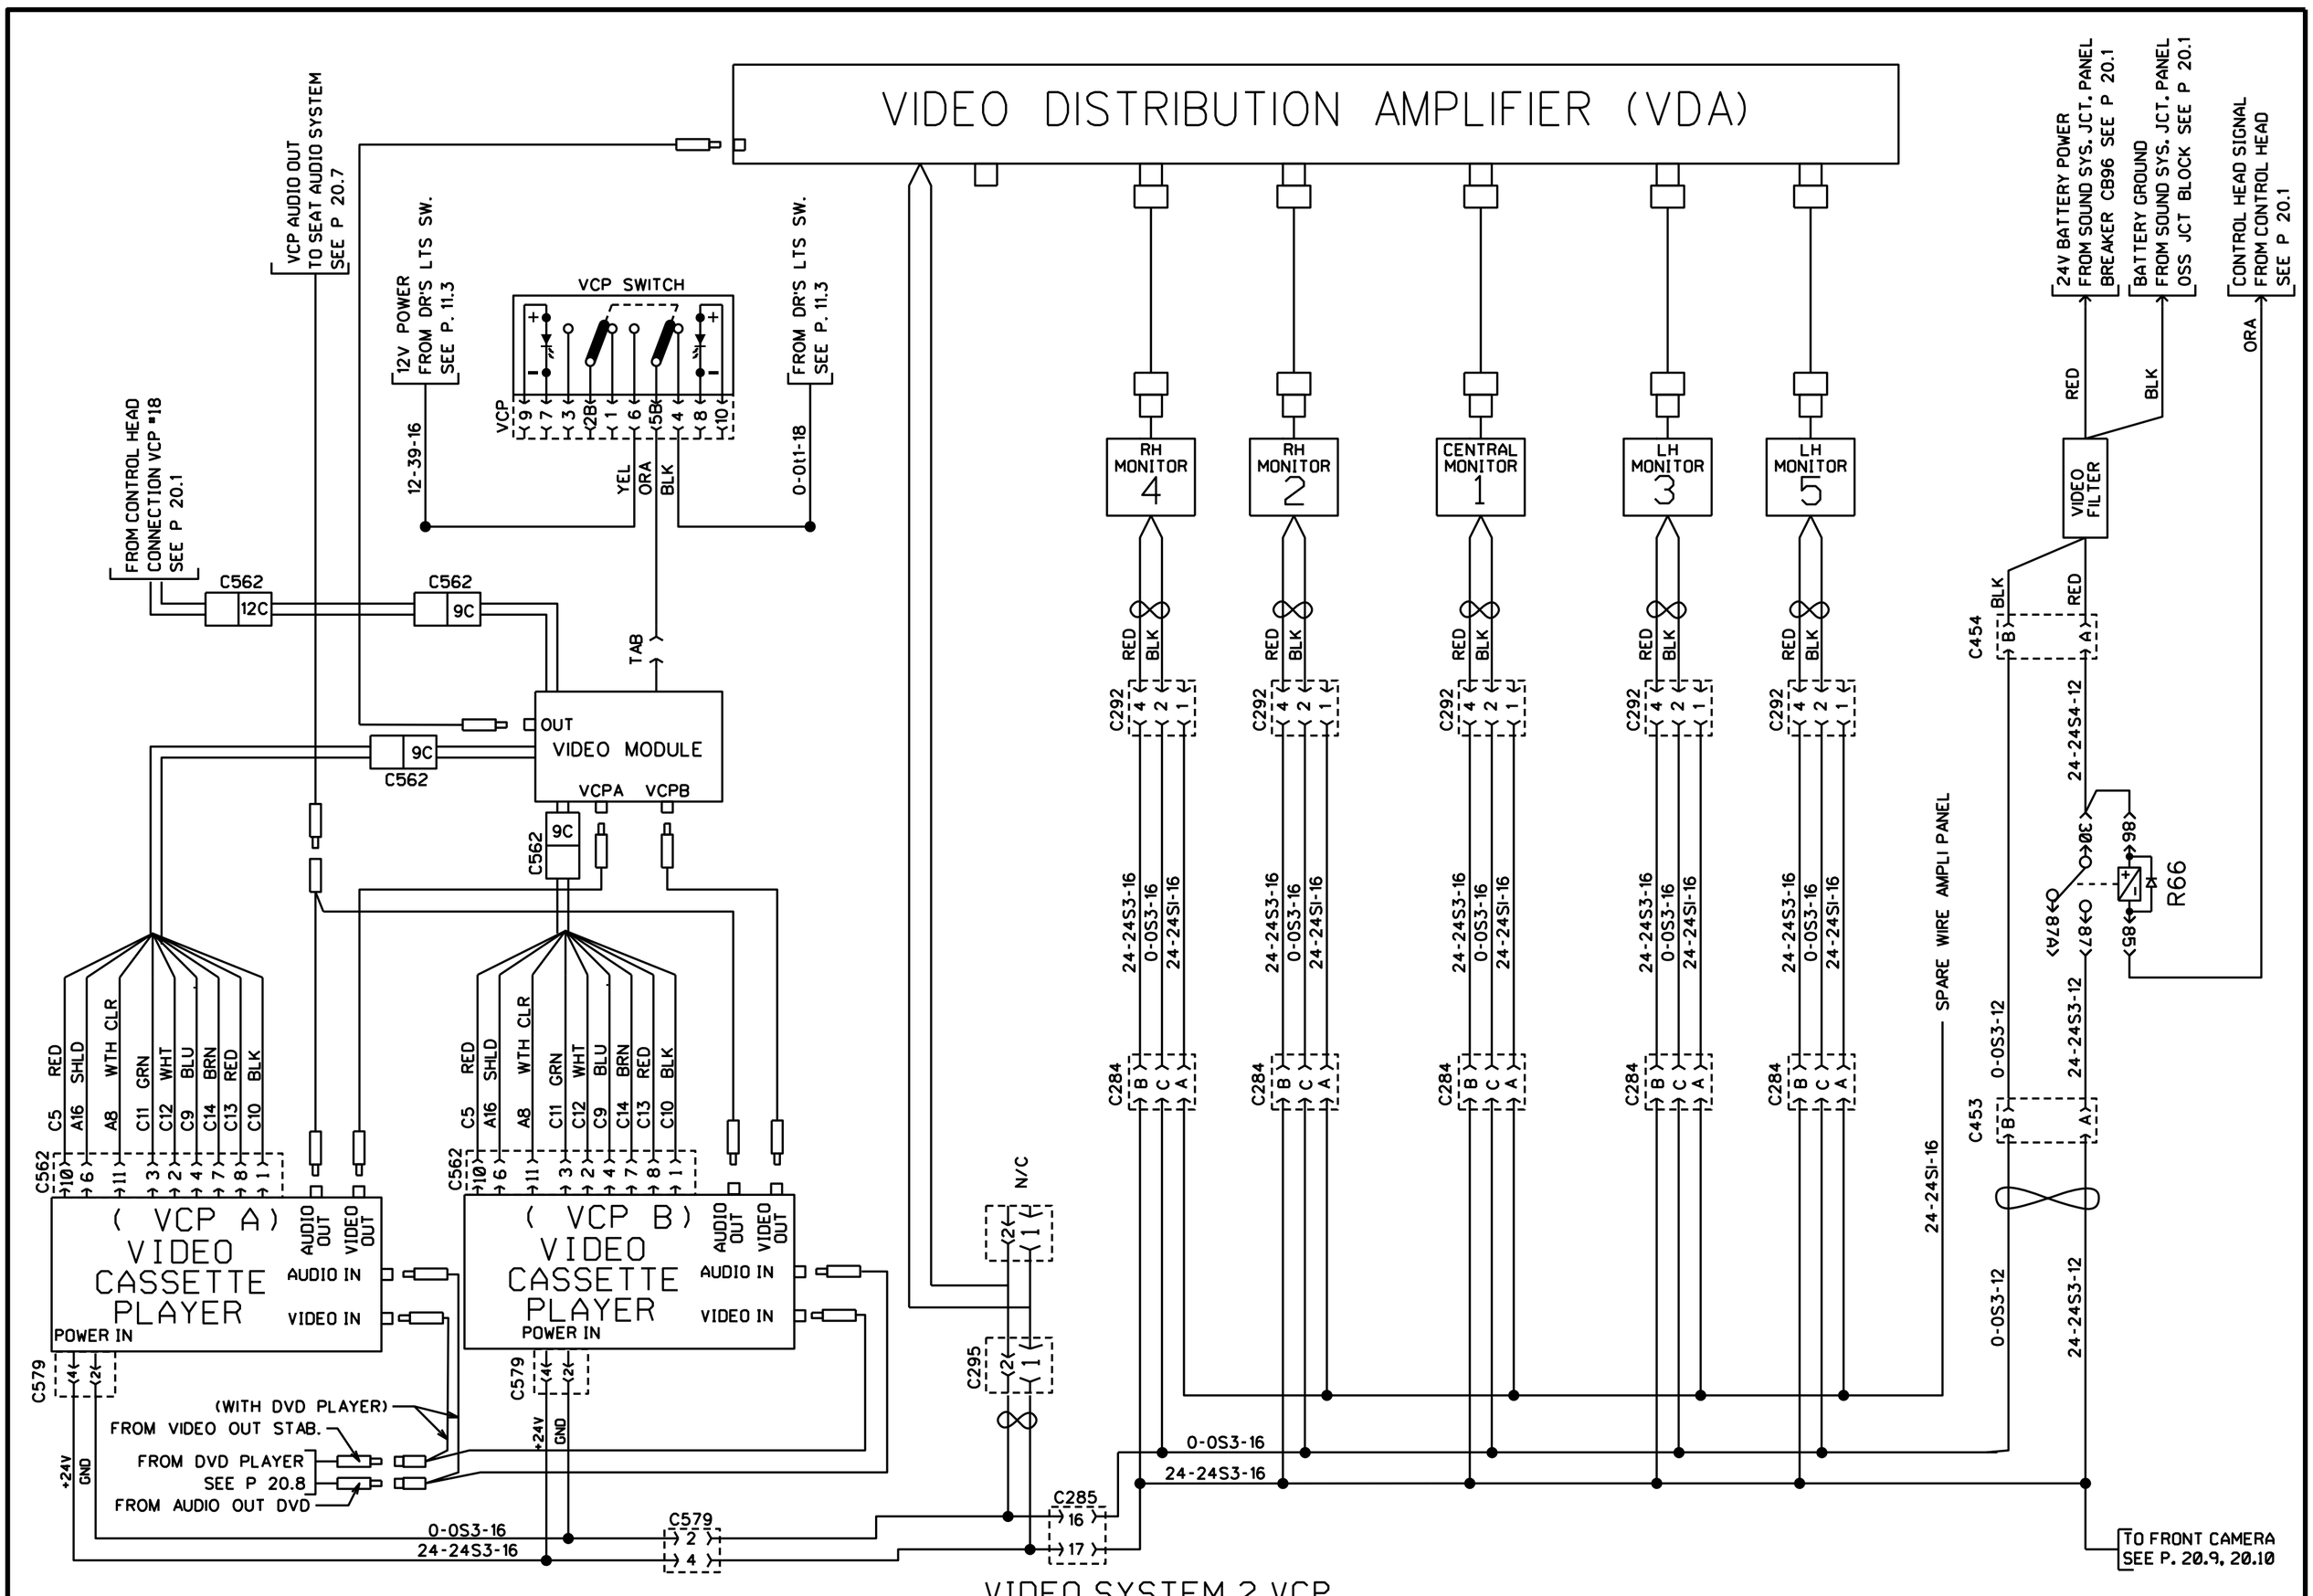

VIDEO SYSTEM 2 VCP

FROM DVD (VIDEO OUT) SEE P.20.8, 20.9
FRON RELAY RCA (VIDEO OUT) SEE P.20.10

WITH DVD ONLY

VIDEO DISTRIBUTION AMPLIFIER (VDA)

VCP AUDIO OUT TO SEAT AUDIO SYSTEM SEE P 20.7

12V POWER FROM DR'S LTS SW. SEE P. 11.3

FROM DR'S LTS SW. SEE P. 11.3

VCP SWITCH

VCP 9 7 3 2B 1 6 5B 4 8 10

12-39-16

YEL ORA BLK

0-011-18

FROM CONTROL HEAD CONNECTION VCP #18 SEE P 20.1

C562 12C

C562 9C

TAB

OUT

VIDEO MODULE

VCPA VCPB

C562 9C

C562 9C

C5 RED A16 SHLD A8 WTH CLR C11 GRN C12 WHT C9 BLU C14 BRN C13 RED C10 BLK

C562 10 6 11 3 2 4 7 8 1

(VCP A) VIDEO CASSETTE PLAYER

AUDIO OUT VIDEO OUT AUDIO IN VIDEO IN POWER IN

C5 RED A16 SHLD A8 WTH CLR C11 GRN C12 WHT C9 BLU C14 BRN C13 RED C10 BLK

C562 10 6 11 3 2 4 7 8 1

(VCP B) VIDEO CASSETTE PLAYER

AUDIO OUT VIDEO OUT AUDIO IN VIDEO IN POWER IN

C579 4 2

+24V GND

(WITH DVD PLAYER)

FROM DVD PLAYER SEE P 20.8

FROM AUDIO OUT DVD

0-0S3-16

24-24S3-16

C579 2 4

C295 2 1

C285 16 17

RH MONITOR 4

RH MONITOR 2

CENTRAL MONITOR 1

LH MONITOR 3

LH MONITOR 5

RED BLK

C292 4 2 1

C284 B C A

24-24S3-16 0-0S3-16 24-24SI-16

0-0S3-16

24-24S3-16

24V BATTERY POWER FROM SOUND SYS. JCT. PANEL BREAKER CB96 SEE P 20.1

BATTERY GROUND FROM SOUND SYS. JCT. PANEL OSS JCT BLOCK SEE P 20.1

CONTROL HEAD SIGNAL FROM CONTROL HEAD SEE P 20.1

RED BLK

VIDEO FILTER

C454 B A

24-24S4-12

30 86 87A 87 85

R66

SPARE WIRE AMPLI PANEL

C453 B A

0-0S3-12 24-24S3-12

24-24SI-16

TO FRONT CAMERA SEE P. 20.9, 20.10

VIDEO SYSTEM 2 VCP

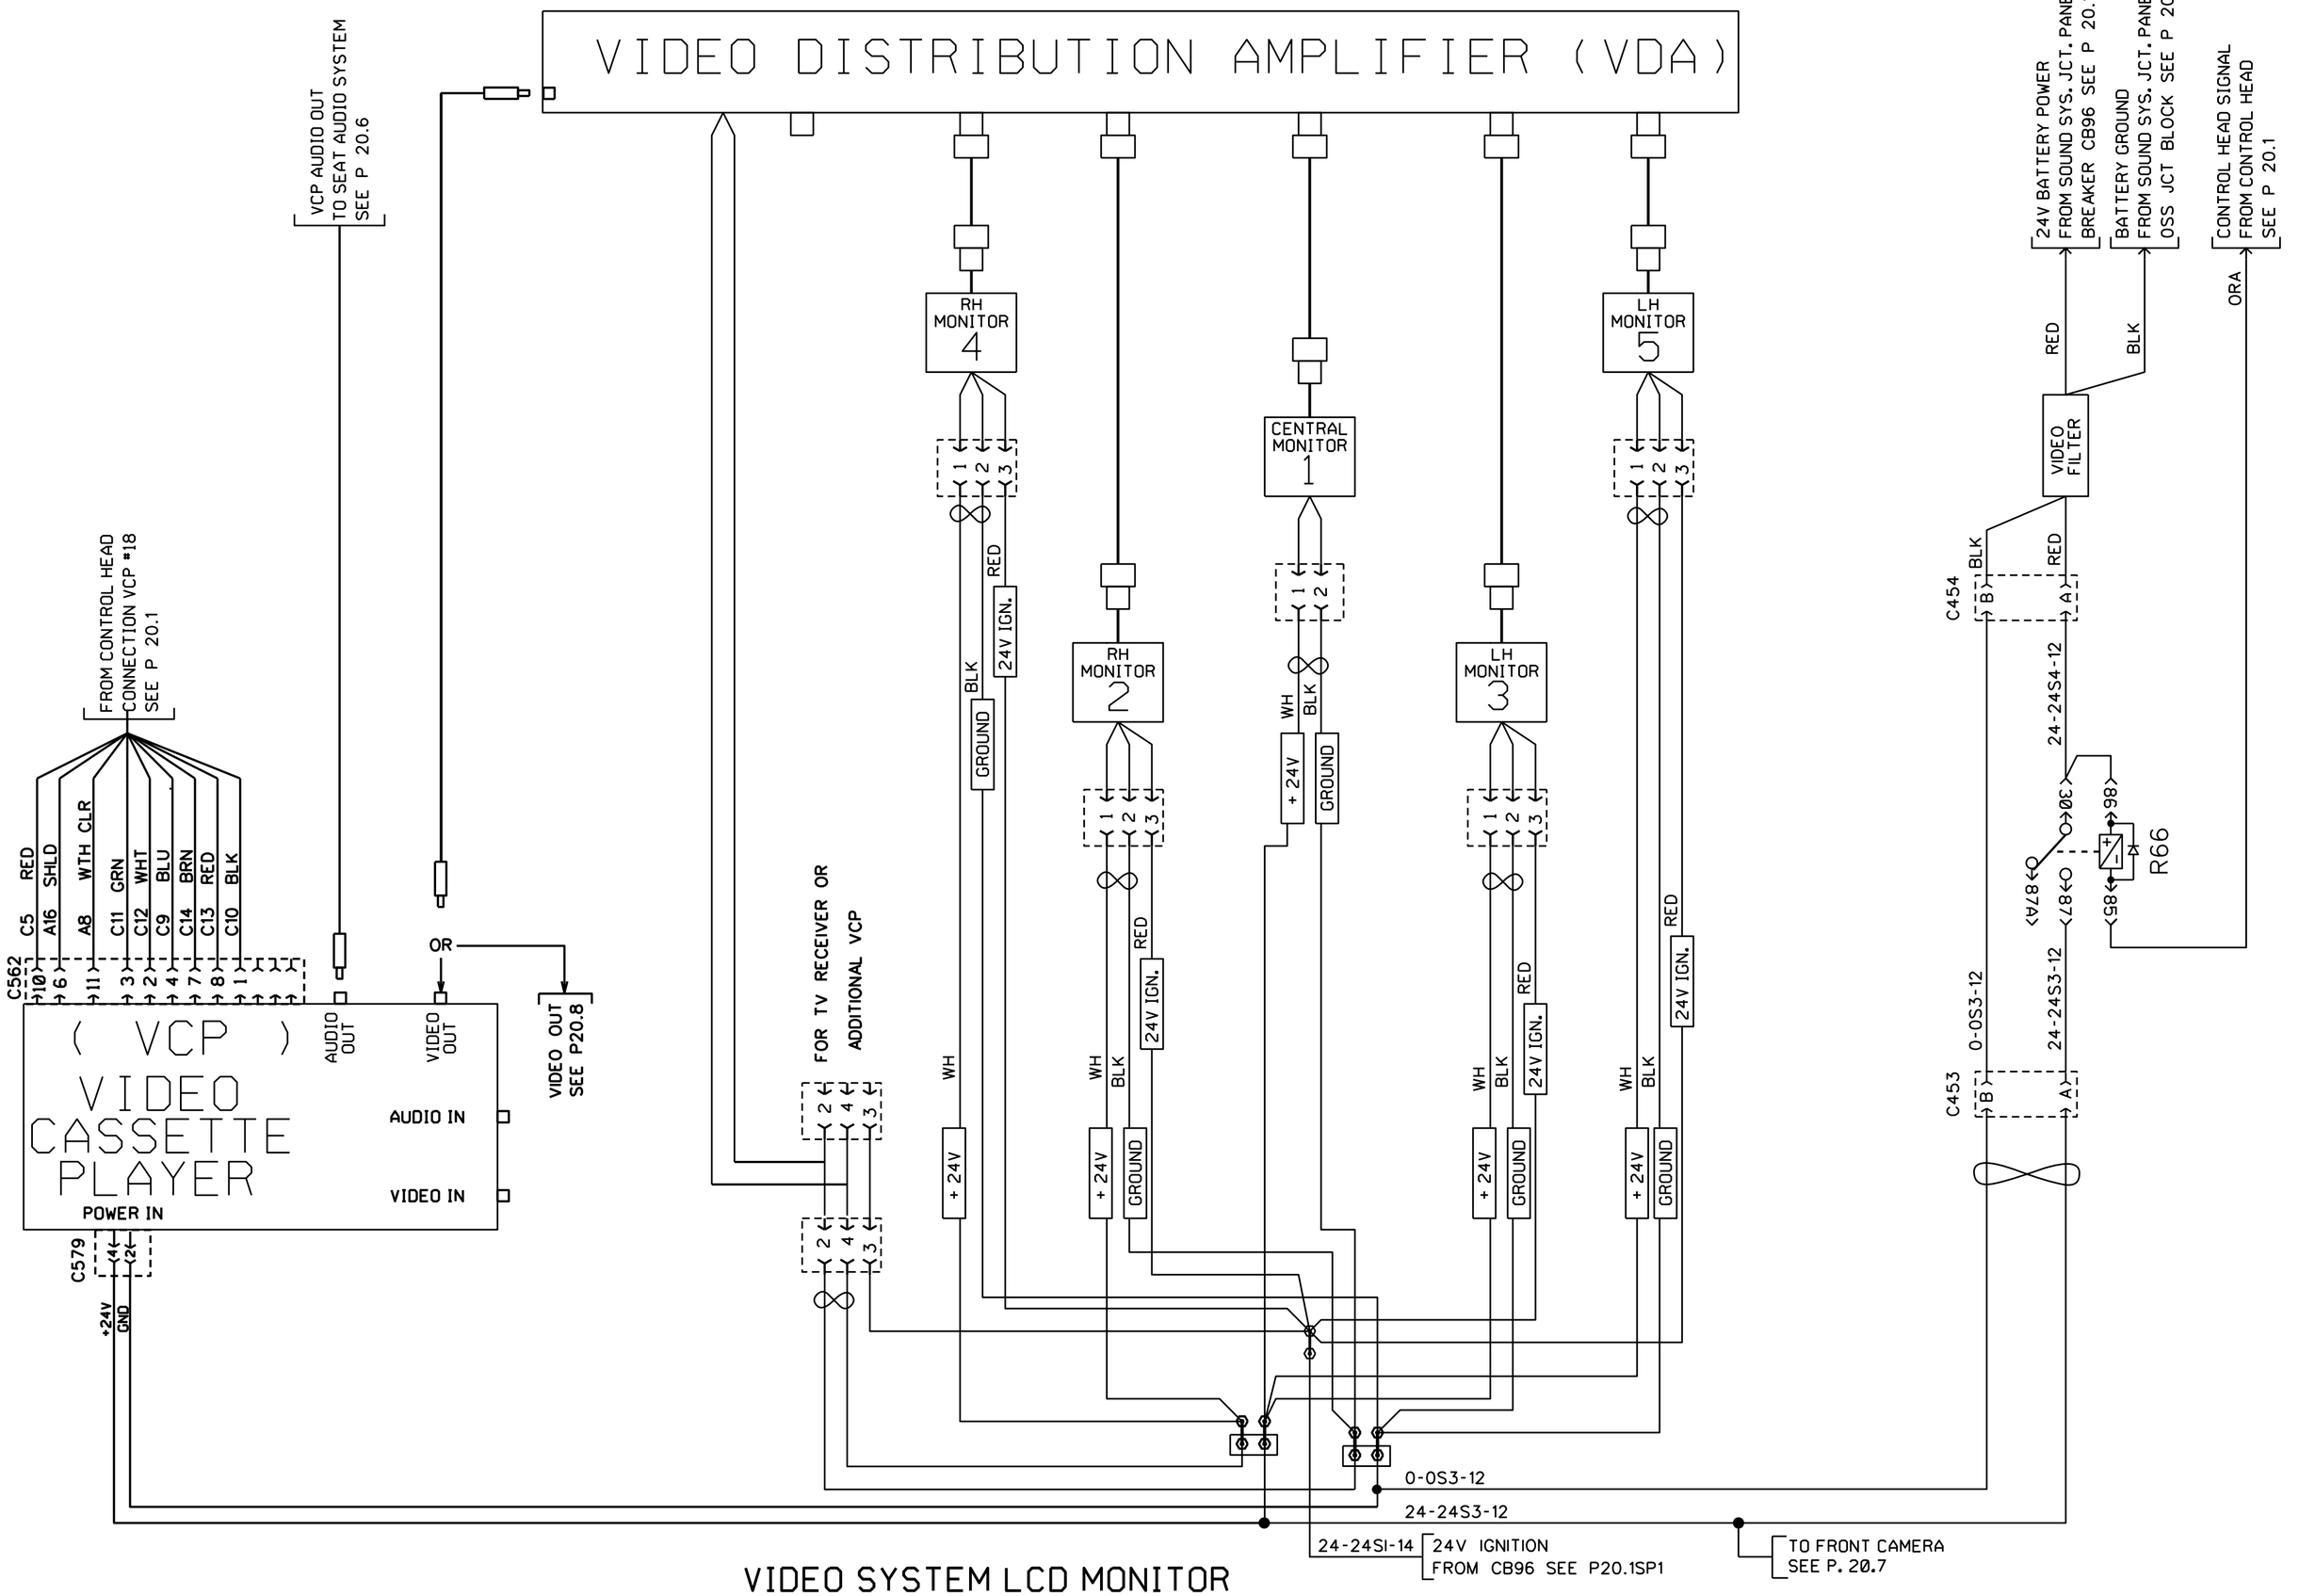

VIDEO SYSTEM LCD MONITOR

VIDEO DISTRIBUTION AMPLIFIER (VDA)

VCP AUDIO OUT
TO SEAT AUDIO SYSTEM
SEE P 20.6

FROM CONTROL HEAD
CONNECTION VCP #18
SEE P 20.1

C562 (10, 6, 11, 3, 2, 4, 7, 8, 1)
C5 RED
A16 SHLD
A8 WTH CLR
C11 GRN
C12 WHT
C9 BLU
C14 BRN
C13 RED
C10 BLK

(VCP)
VIDEO CASSETTE PLAYER
POWER IN
AUDIO OUT
VIDEO OUT
AUDIO IN
VIDEO IN

OR
VIDEO OUT
SEE P20.8

FOR TV RECEIVER OR ADDITIONAL VCP

C579 (4, 2)
C295 (2, 4)
C285 (16, 17)
24-24S3-16
0-0S3-16

RH MONITOR 4
RH MONITOR 2
CENTRAL MONITOR 1
LH MONITOR 3
LH MONITOR 5

C292 (4, 2, 1)
C284 (B, C, A)
RED
BLK
24-24S3-16
0-0S3-16
24-24SI-16

24V BATTERY POWER
FROM SOUND SYS. JCT. PANEL
BREAKER CB96 SEE P 20.1

BATTERY GROUND
FROM SOUND SYS. JCT. PANEL
OSS JCT BLOCK SEE P 20.1

CONTROL HEAD SIGNAL
FROM CONTROL HEAD
SEE P 20.1
ORA

VIDEO FILTER
C454 (B, A)
24-24S4-12

R66 (30, 98, 87A, 87, 85)

24V IGNITION
FROM CB96 SEE P20.1SP1

C453 (B, A)
0-0S3-12
24-24S3-12

TO FRONT CAMERA
SEE P. 20.9, 20.10

VIDEO SYSTEM

FROM DVD (VIDEO OUT)
SEE P. 20.8,20.9,20.10

VCP AUDIO OUT
TO SEAT AUDIO SYSTEM
SEE P 20.6

WITH DVD ONLY

VIDEO DISTRIBUTION AMPLIFIER (VDA)

RH MONITOR 4
RH MONITOR 2
CENTRAL MONITOR 1
LH MONITOR 3
LH MONITOR 5

24V BATTERY POWER
FROM SOUND SYS. JCT. PANEL
BREAKER CB96 SEE P 20.1

BATTERY GROUND
FROM SOUND SYS. JCT. PANEL
OSS JCT BLOCK SEE P 20.1

CONTROL HEAD SIGNAL
FROM CONTROL HEAD
SEE P 20.1

FROM CONTROL HEAD
CONNECTION VCP #18
SEE P 20.1

C562: 10 RED, 6 A16 SHLD, 11 A8 WTH CLR, 3 C11 GRN, 2 C12 WHT, 4 C9 BLU, 7 C14 BRN, 8 C13 RED, 1 C10 BLK

(VCP)
VIDEO CASSETTE PLAYER
AUDIO IN
VIDEO IN
POWER IN
AUDIO OUT
VIDEO OUT

OR
VIDEO OUT
SEE P20.8

FOR TV RECEIVER OR
ADDITIONAL VCP

C579: 4, 2
C295: 2, 4
24-24S3-16
0-0S3-16

C285: 16, 17
0-0S3-16
24-24S3-16

C292: 4, 2, 1
RED
BLK
24-24S3-16
0-0S3-16
24-24SI-16

C284: B, C, A

VIDEO FILTER
RED
BLK

C454: B, A
24-24S4-12

R66
30, 98, 87A, 87, 86

24V IGNITION
FROM CB96 SEE P20.1SP1

C453: B, A
0-0S3-12
24-24S3-12

ORA

TO FRONT CAMERA
SEE P. 20.9, 20.10

VIDEO SYSTEM

FROM DVD (VIDEO OUT) SEE P.20.8, 20.9
FROM RELAY RCA DVD (VIDEO OUT) SEE P.20.10

WITH DVD ONLY

VIDEO DISTRIBUTION AMPLIFIER (VDA)

VCP AUDIO OUT
TO SEAT AUDIO SYSTEM
SEE P 20.6

RH MONITOR 4
RH MONITOR 2
CENTRAL MONITOR 1
LH MONITOR 3
LH MONITOR 5

24V BATTERY POWER
FROM SOUND SYS. JCT. PANEL
BREAKER CB96 SEE P 20.1

BATTERY GROUND
FROM SOUND SYS. JCT. PANEL
OSS JCT BLOCK SEE P 20.1

CONTROL HEAD SIGNAL
FROM CONTROL HEAD
SEE P 20.1

VIDEO FILTER

FROM CONTROL HEAD
CONNECTION VCP #18
SEE P 20.1

C562: RED, SHLD, WTH CLR, GRN, WHT, BLU, BRN, RED, BLK

(VCP)
VIDEO CASSETTE PLAYER
POWER IN
AUDIO OUT
VIDEO OUT
AUDIO IN
VIDEO IN

OR

VIDEO OUT
SEE P20.8

FOR TV RECEIVER OR
ADDITIONAL VCP

C579
C295
C285

0-0S3-16
24-24S3-16
24-24SI-16

C292
C284
C453
C454

24V IGNITION
FROM CB96 SEE P20.1SP1

R66

TO FRONT CAMERA
SEE P. 20.9, 20.10

VIDEO SYSTEM

VIDEO DISTRIBUTION AMPLIFIER (VDA)

FROM CONTROL HEAD CONNECTION VCP #18 SEE P 20.1

C562 C5 RED A16 SHLD A8 WTH CLR C11 GRN C12 WHT C9 BLU C14 BRN C13 RED C10 BLK

BLACK WHITE

FROM C544 SEE P.28.1

F76 3A

C587

C579

POWER IN

AUDIO OUT

VIDEO OUT

VIDEO OUT SEE P20.8

OR

MOBILE DVD PLAYER

C295

FOR TV RECEIVER OR ADDITIONAL VCP

C285 16 17 0-0S3-16 24-24S3-16

RH MONITOR 4

RH MONITOR 2

CENTRAL MONITOR 1

LH MONITOR 3

LH MONITOR 5

C292 RED BLK

C284 24-24S3-16 0-0S3-16 24-24SI-16

SPARE WIRE AMPLI PANEL 24-24SI-16

24V BATTERY POWER FROM SOUND SYS. JCT. PANEL BREAKER CB96 SEE P 20.1

BATTERY GROUND FROM SOUND SYS. JCT. PANEL OSS JCT BLOCK SEE P 20.1

CONTROL HEAD SIGNAL FROM CONTROL HEAD SEE P 20.1

ORA

VIDEO FILTER

C454 BLK RED

24-24S4-12

R66

C453 0-0S3-12 24-24S3-12

TO FRONT CAMERA SEE P. 20.9, 20.10

VIDEO SYSTEM

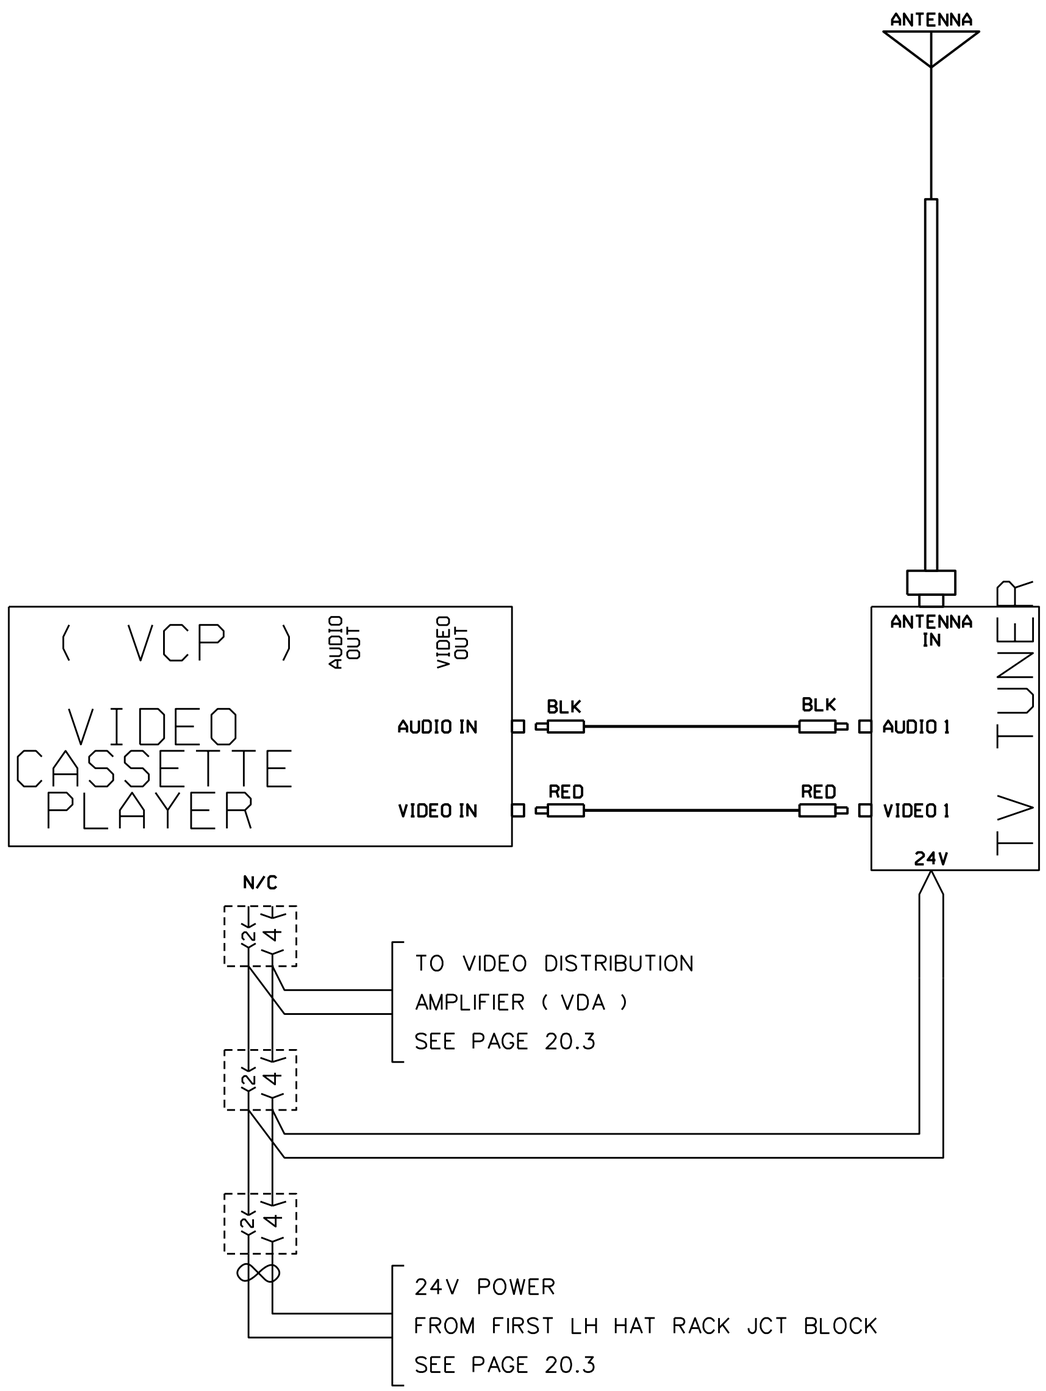
ANTENNA
(VCP)
AUDIO OUT
VIDEO OUT
VIDEO CASSETTE PLAYER
AUDIO IN
VIDEO IN
BLK
BLK
RED
RED
ANTENNA IN
AUDIO 1
VIDEO 1
24V
TV TUNER
N/C
J2
J4
TO VIDEO DISTRIBUTION
AMPLIFIER (VDA)
SEE PAGE 20.3
24V POWER
FROM FIRST LH HAT RACK JCT BLOCK
SEE PAGE 20.3

TV RECEIVER

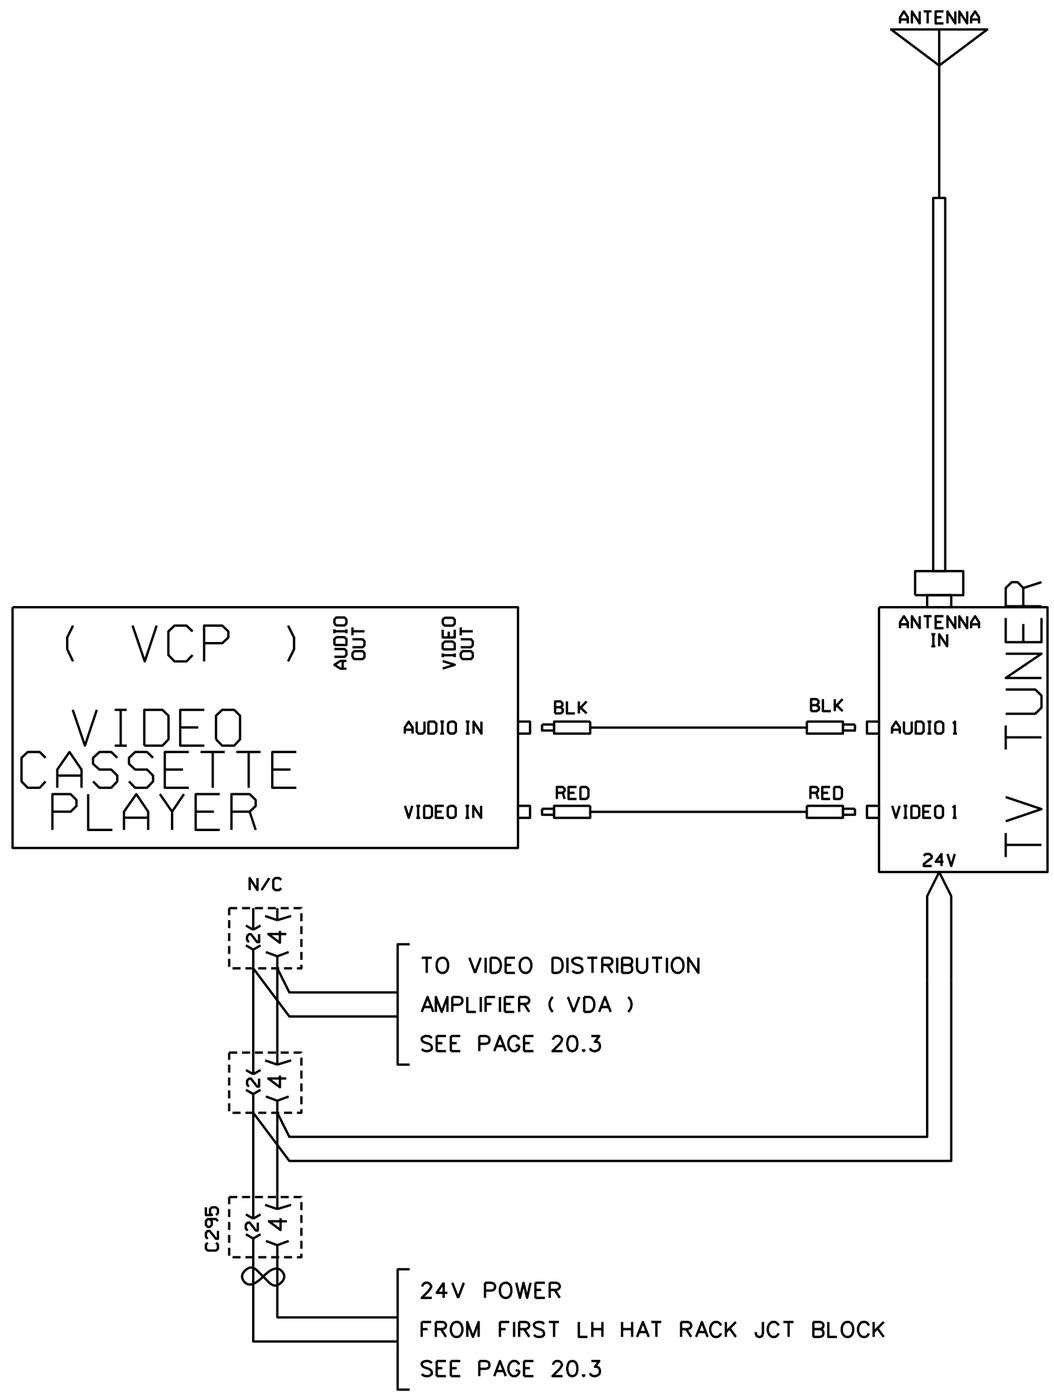
ANTENNA
(VCP)
AUDIO OUT
VIDEO OUT
VIDEO CASSETTE PLAYER
AUDIO IN
VIDEO IN
BLK
BLK
RED
RED
ANTENNA IN
AUDIO 1
VIDEO 1
24V
TV TUNER
N/C
C295
TO VIDEO DISTRIBUTION
AMPLIFIER (VDA)
SEE PAGE 20.3
24V POWER
FROM FIRST LH HAT RACK JCT BLOCK
SEE PAGE 20.3

TV RECEIVER

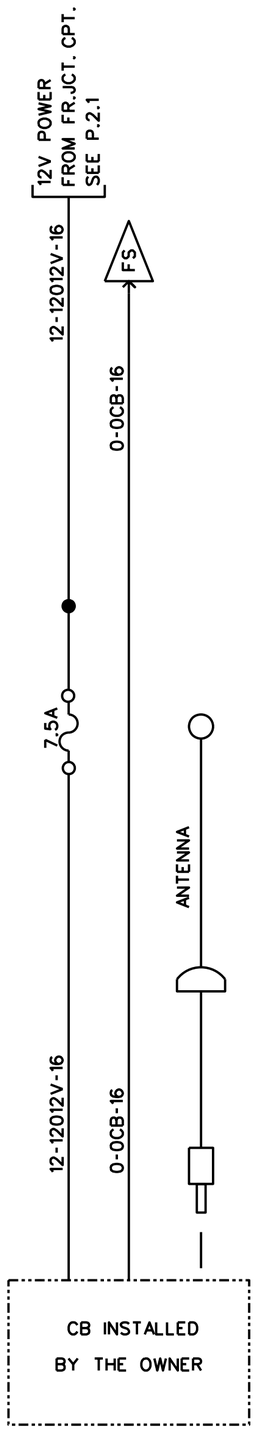

CB OPTION

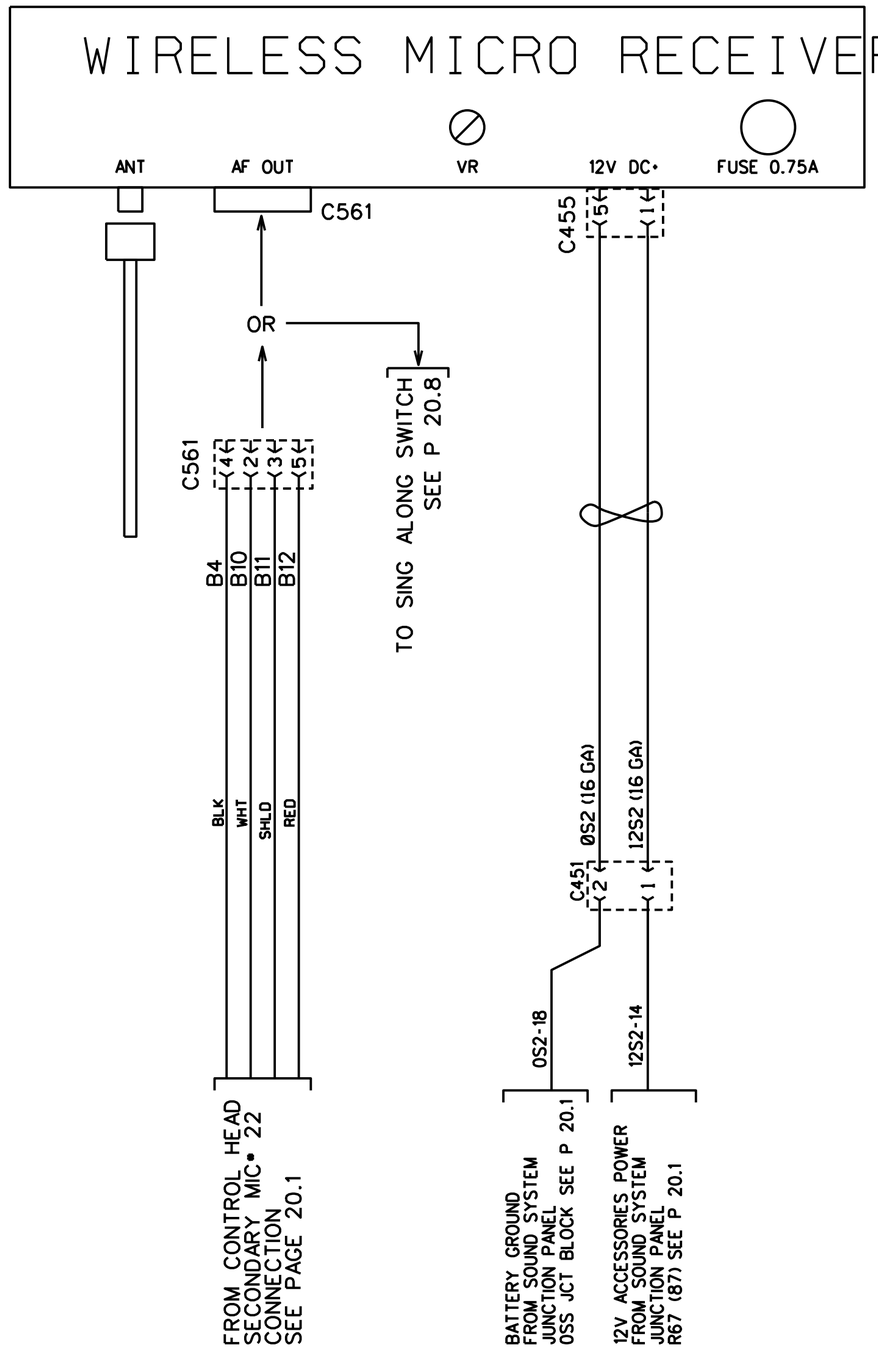

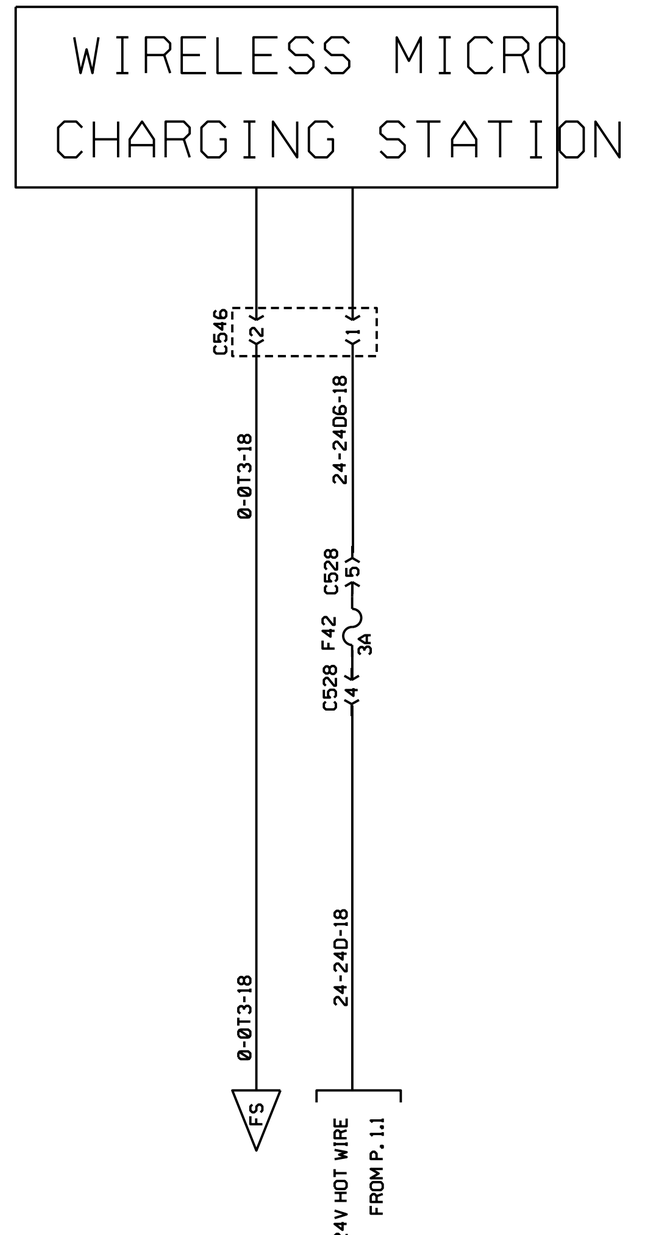

WIRELESS MICROPHONE

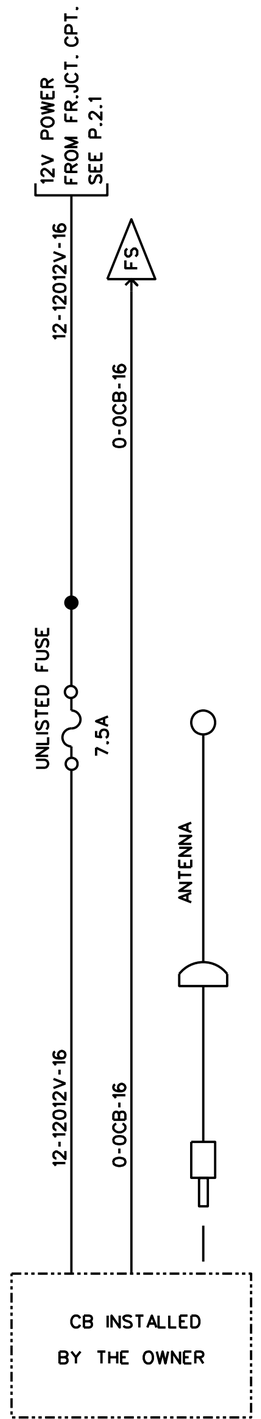

CB OPTION

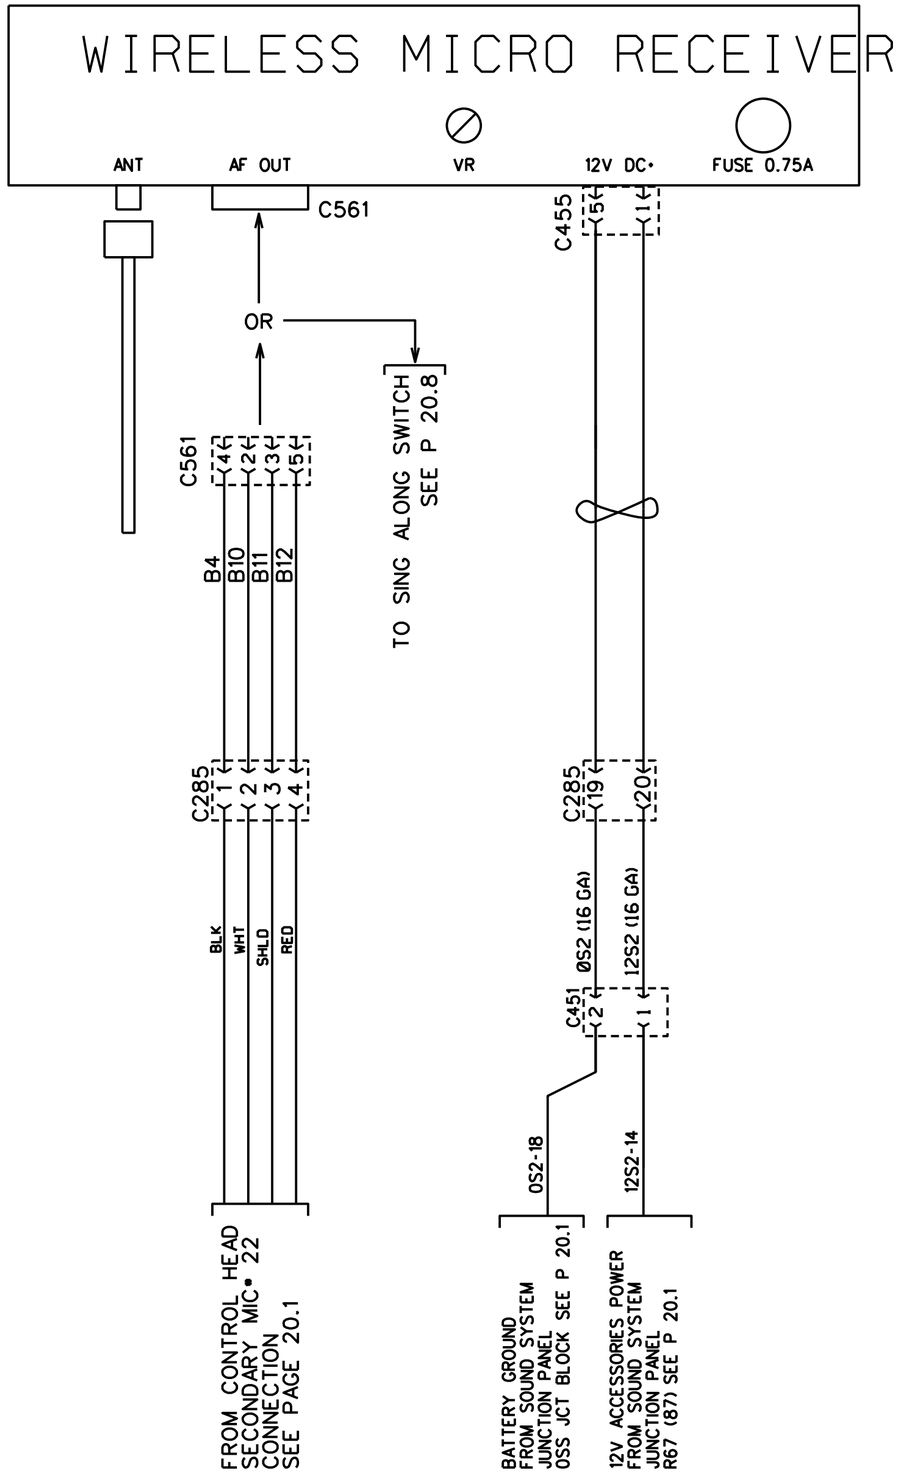

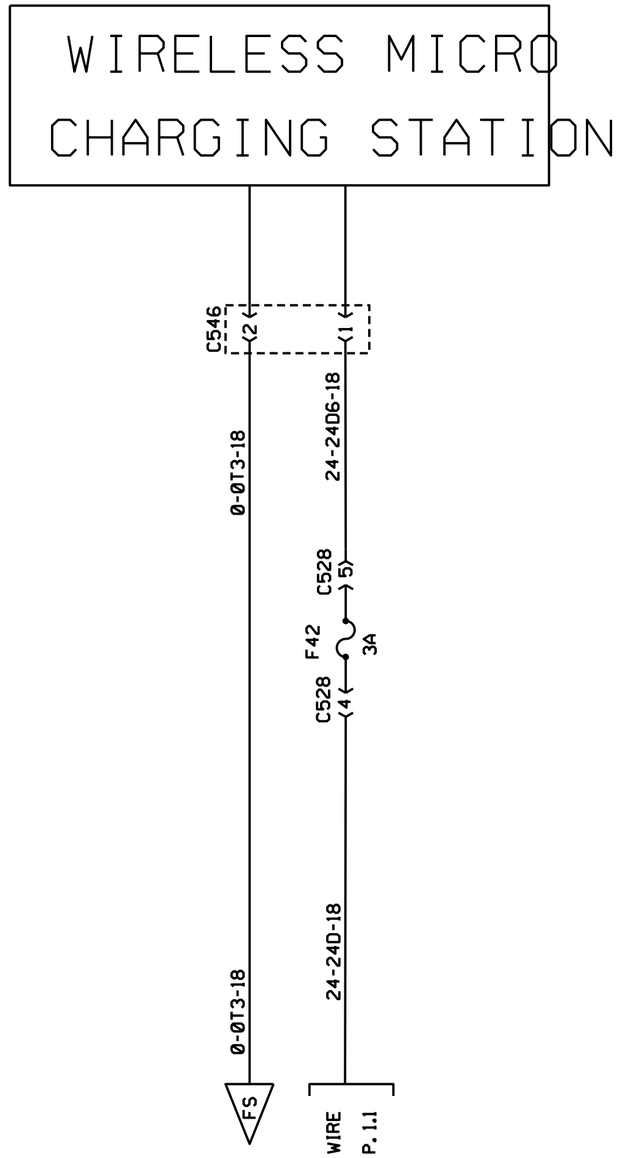

WIRELESS MICROPHONE

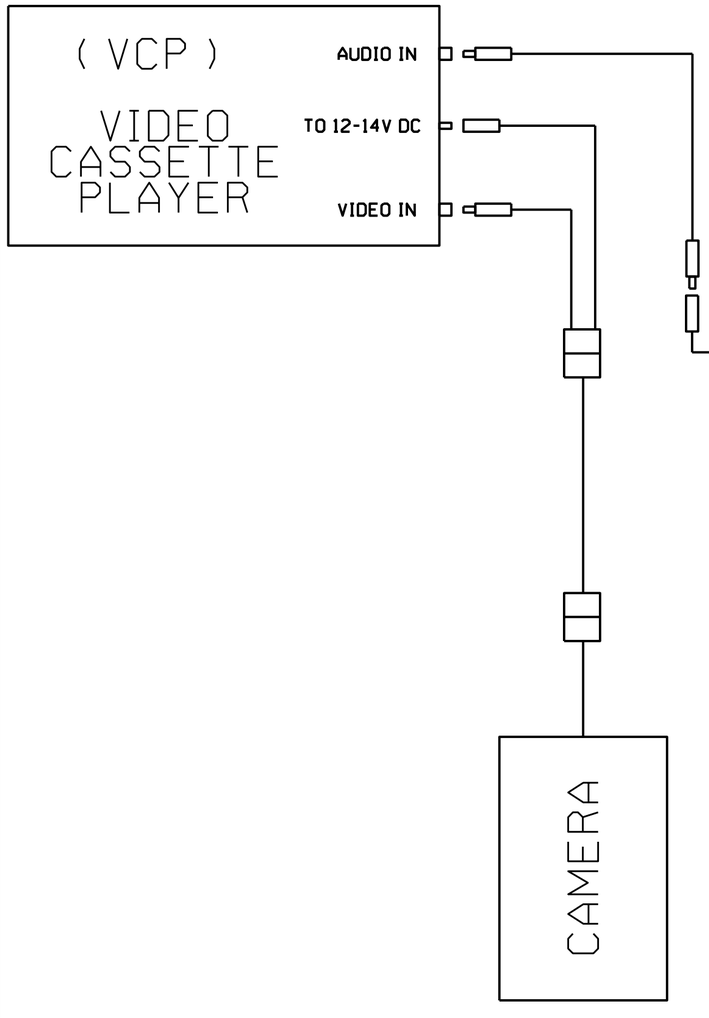

FRONT CAMERA WITHOUT TV RECEIVER

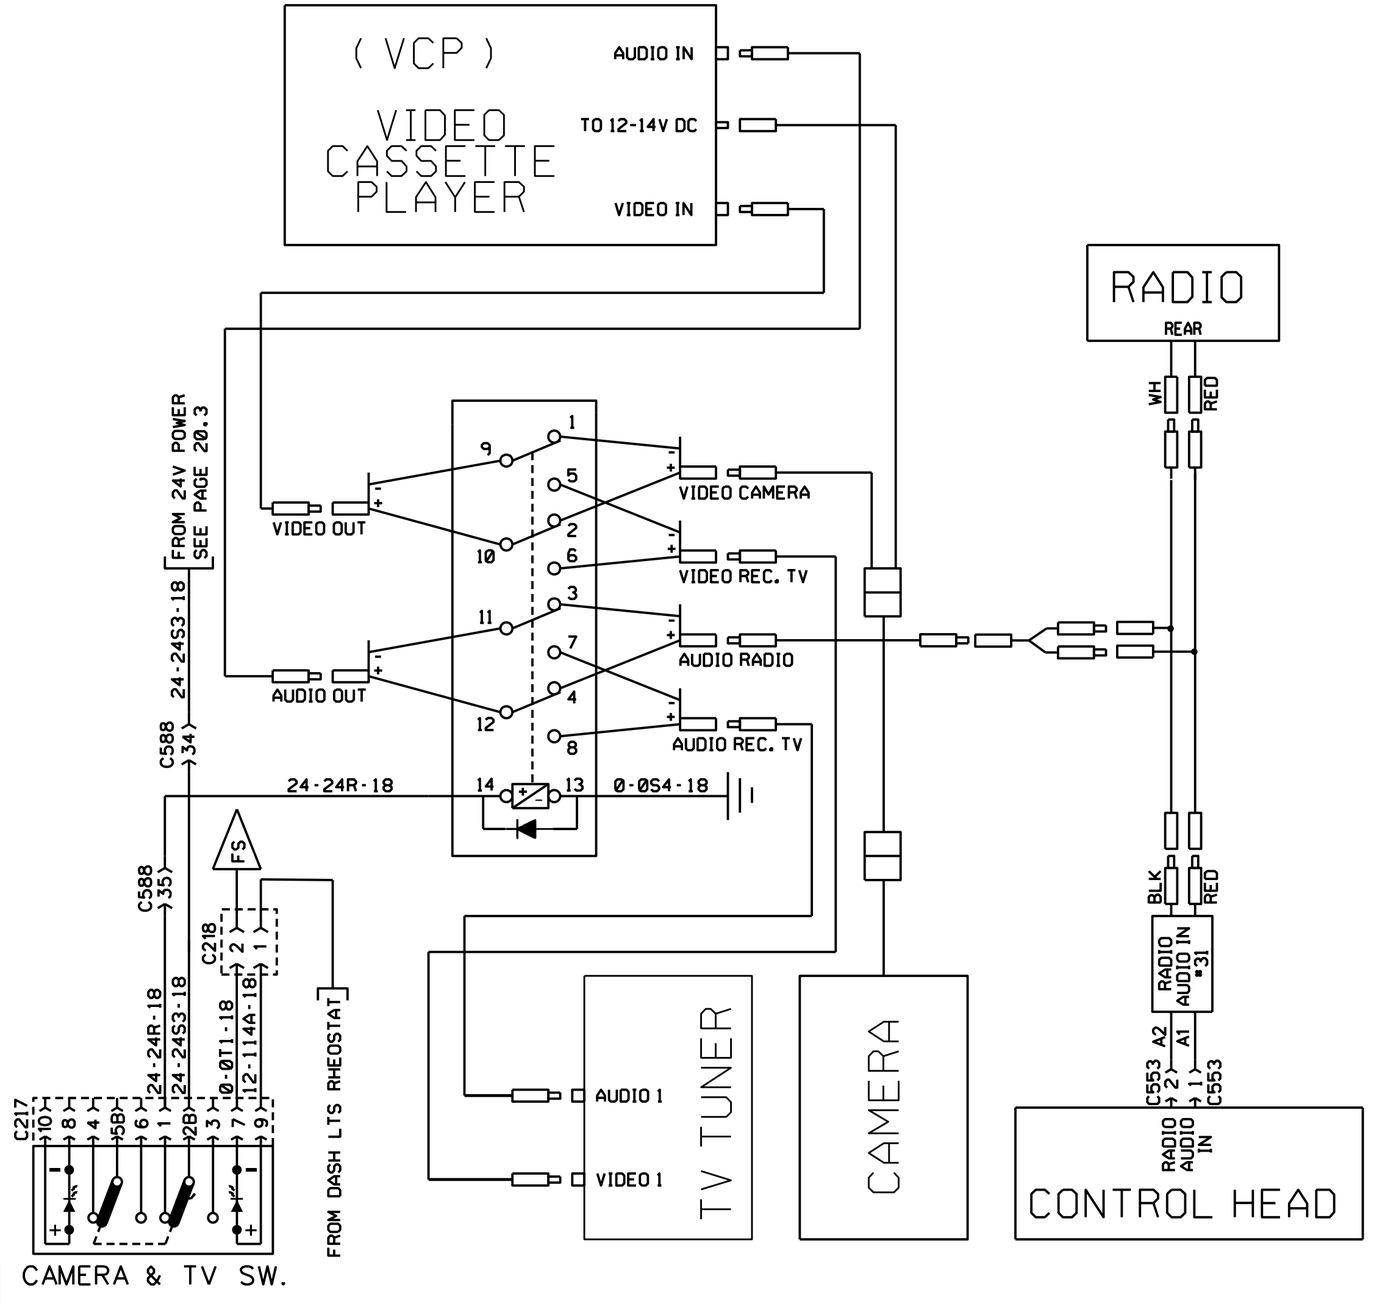

FRONT CAMERA WITH TV RECEIVER

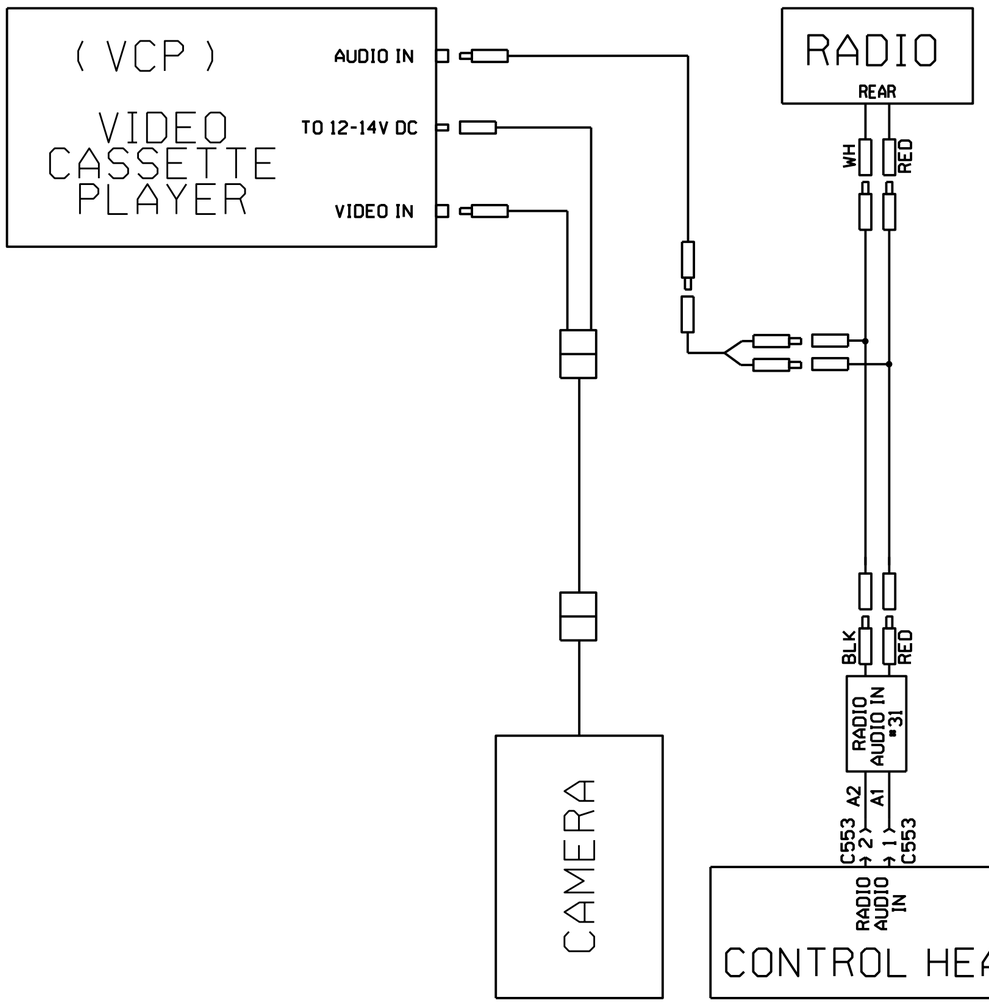

FRONT CAMERA WITHOUT TV RECEIVER

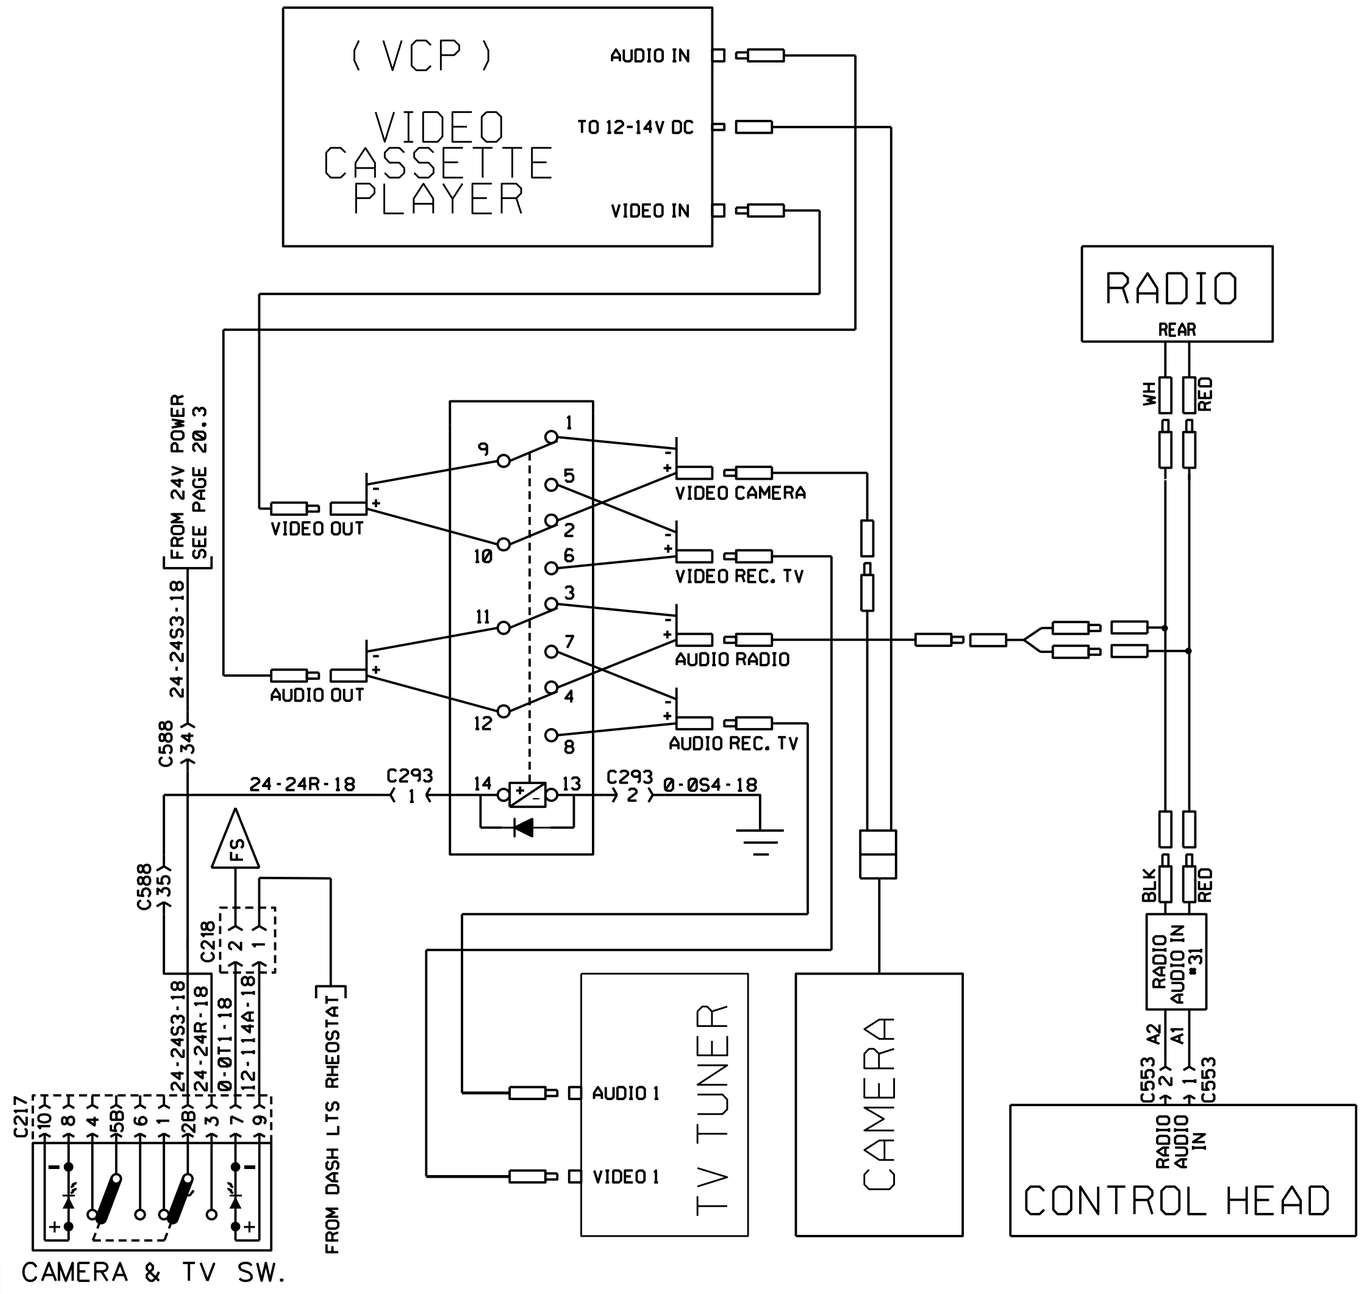

VCP, FRONT CAMERA WITH TV RECEIVER

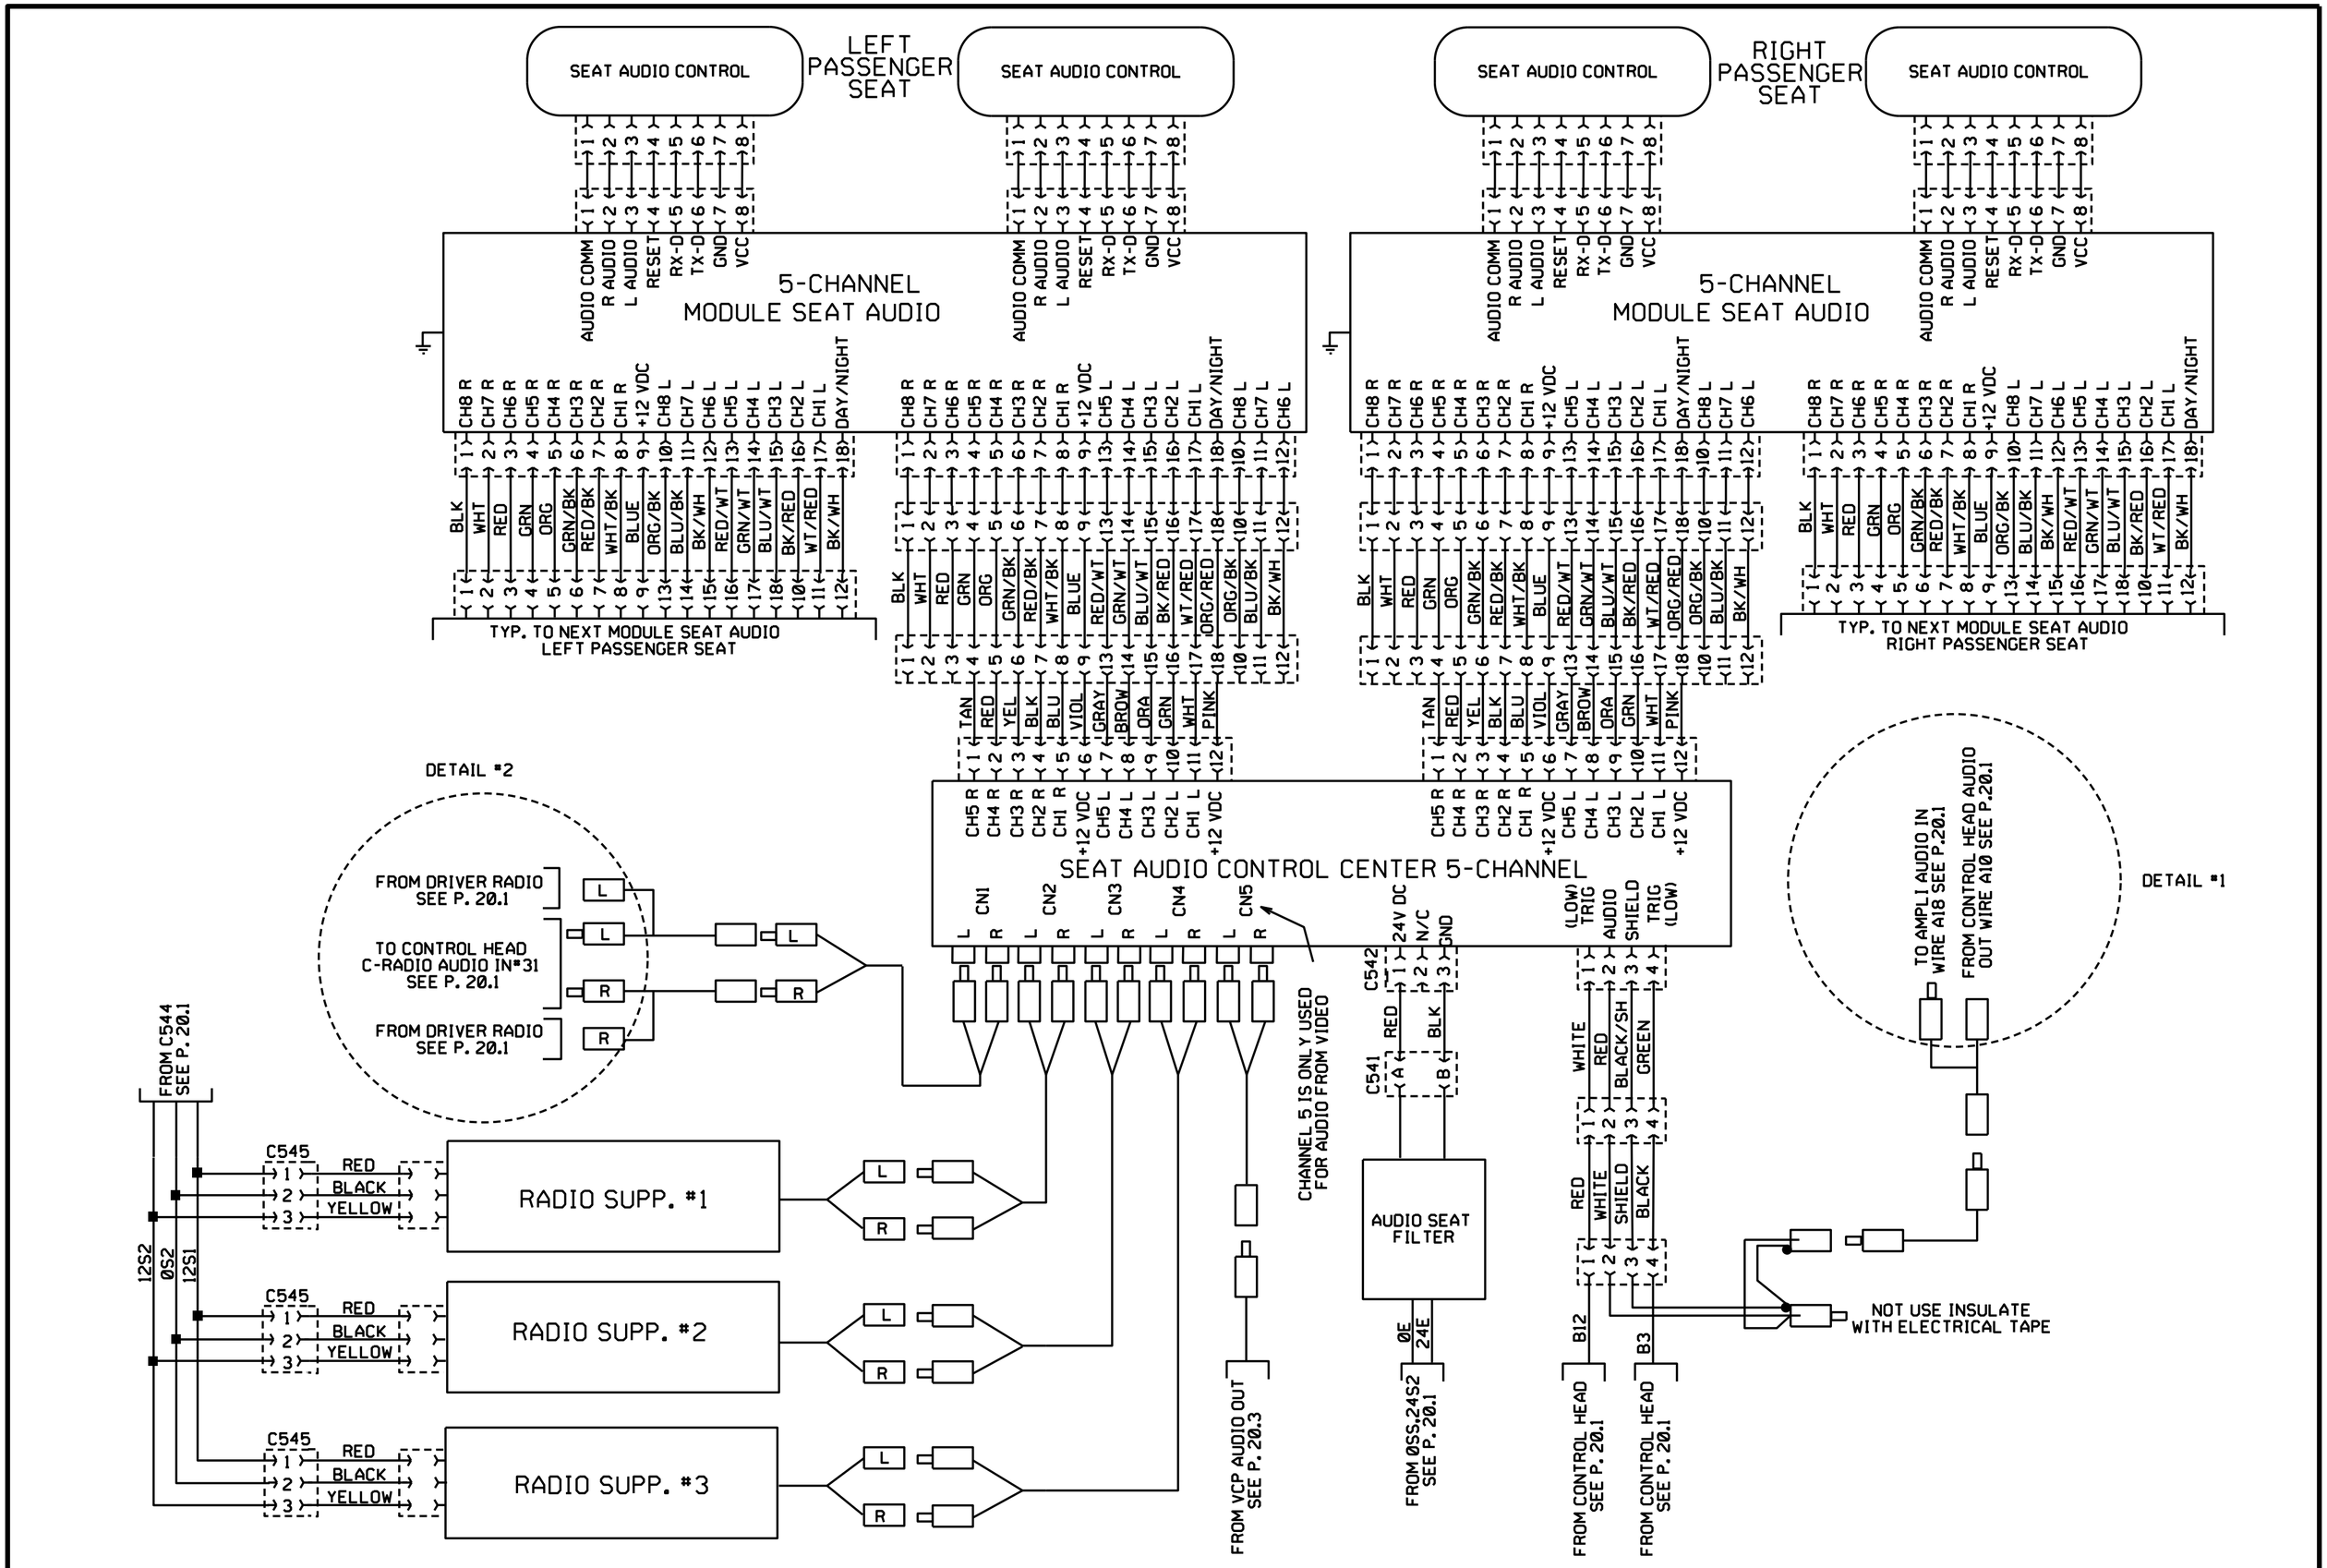

5-CHANNEL SLIM-LINE SEAT AUDIO SYSTEM

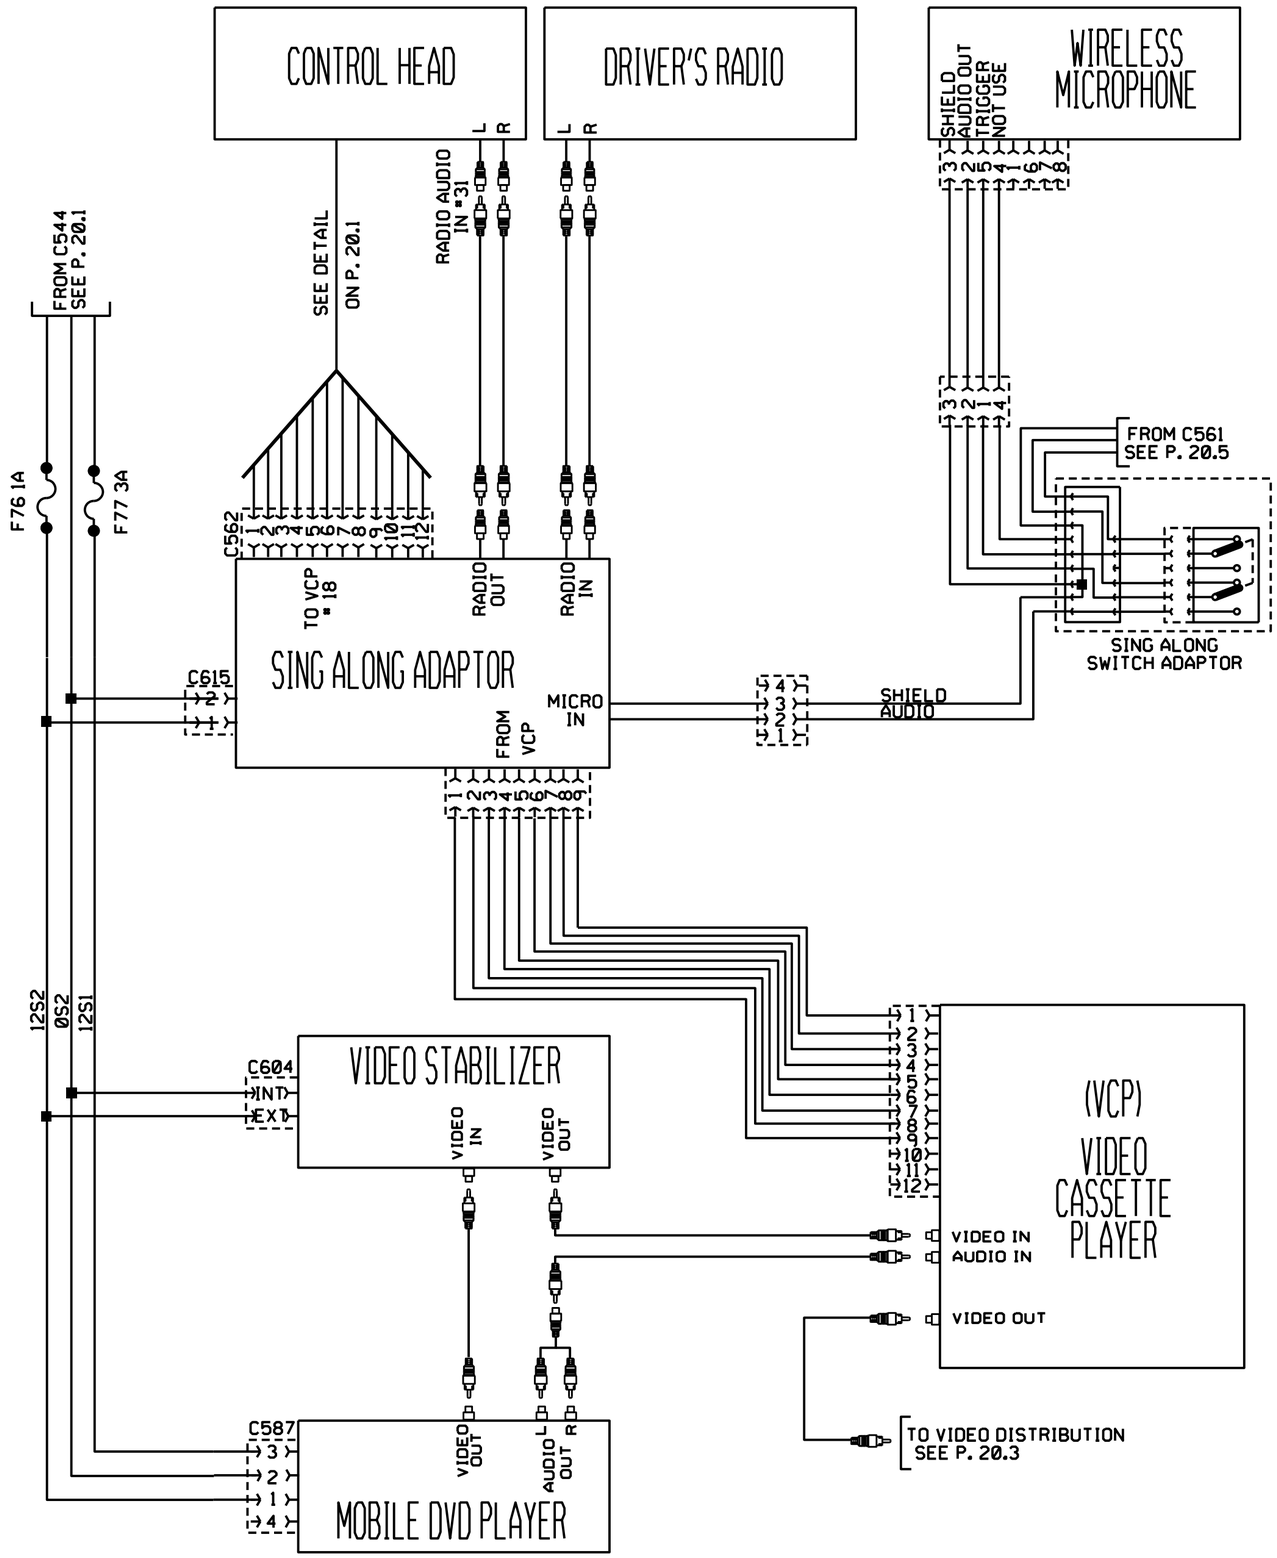

VCP AND DVD WITH KARAOKE

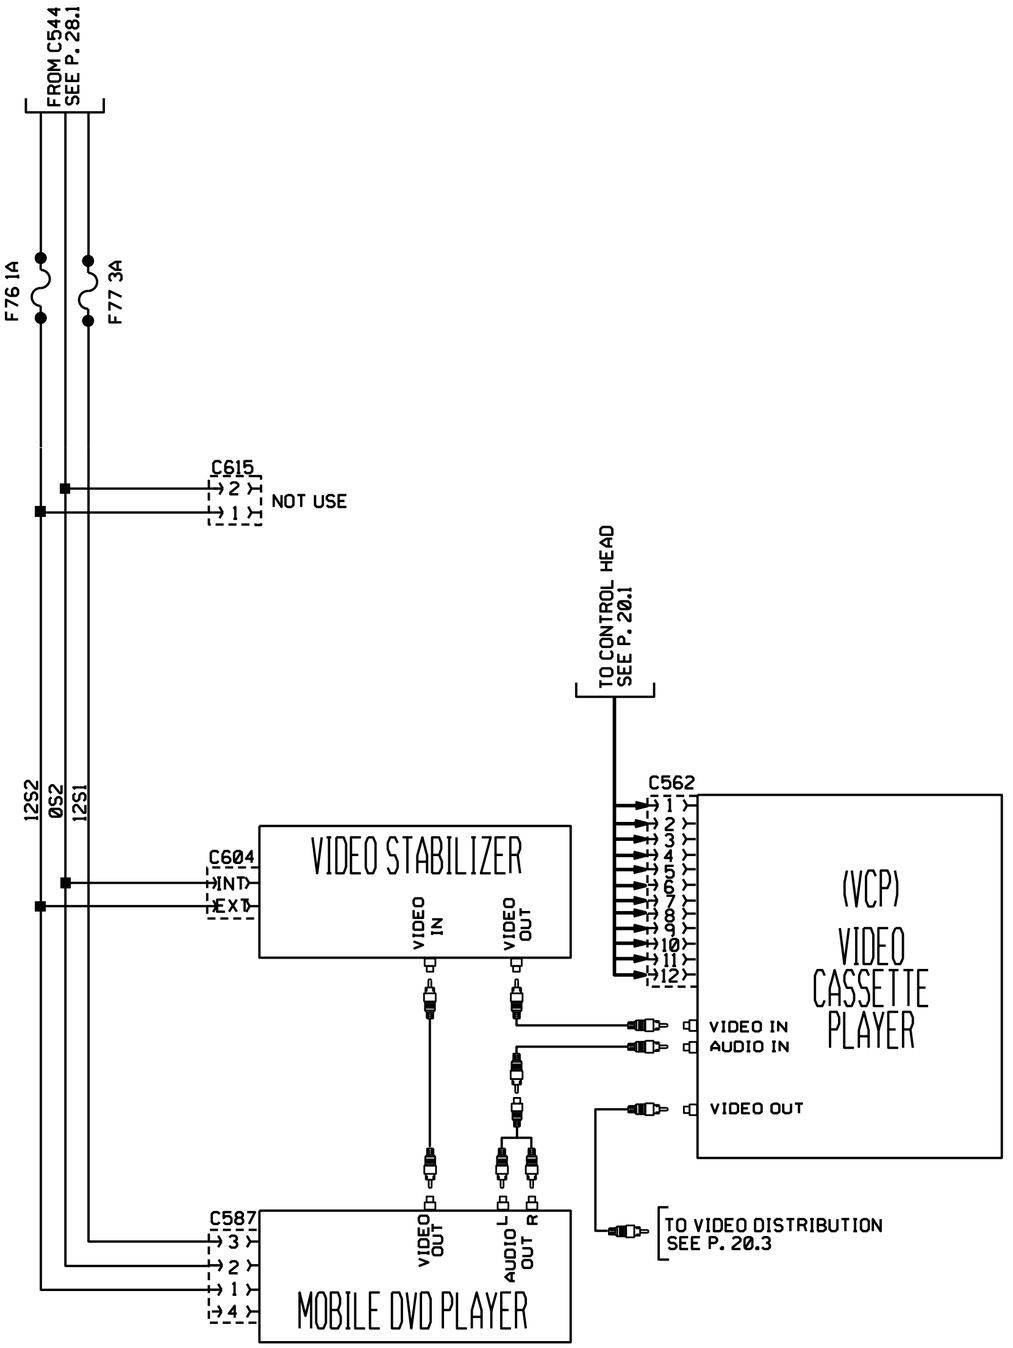

VCP AND DVD

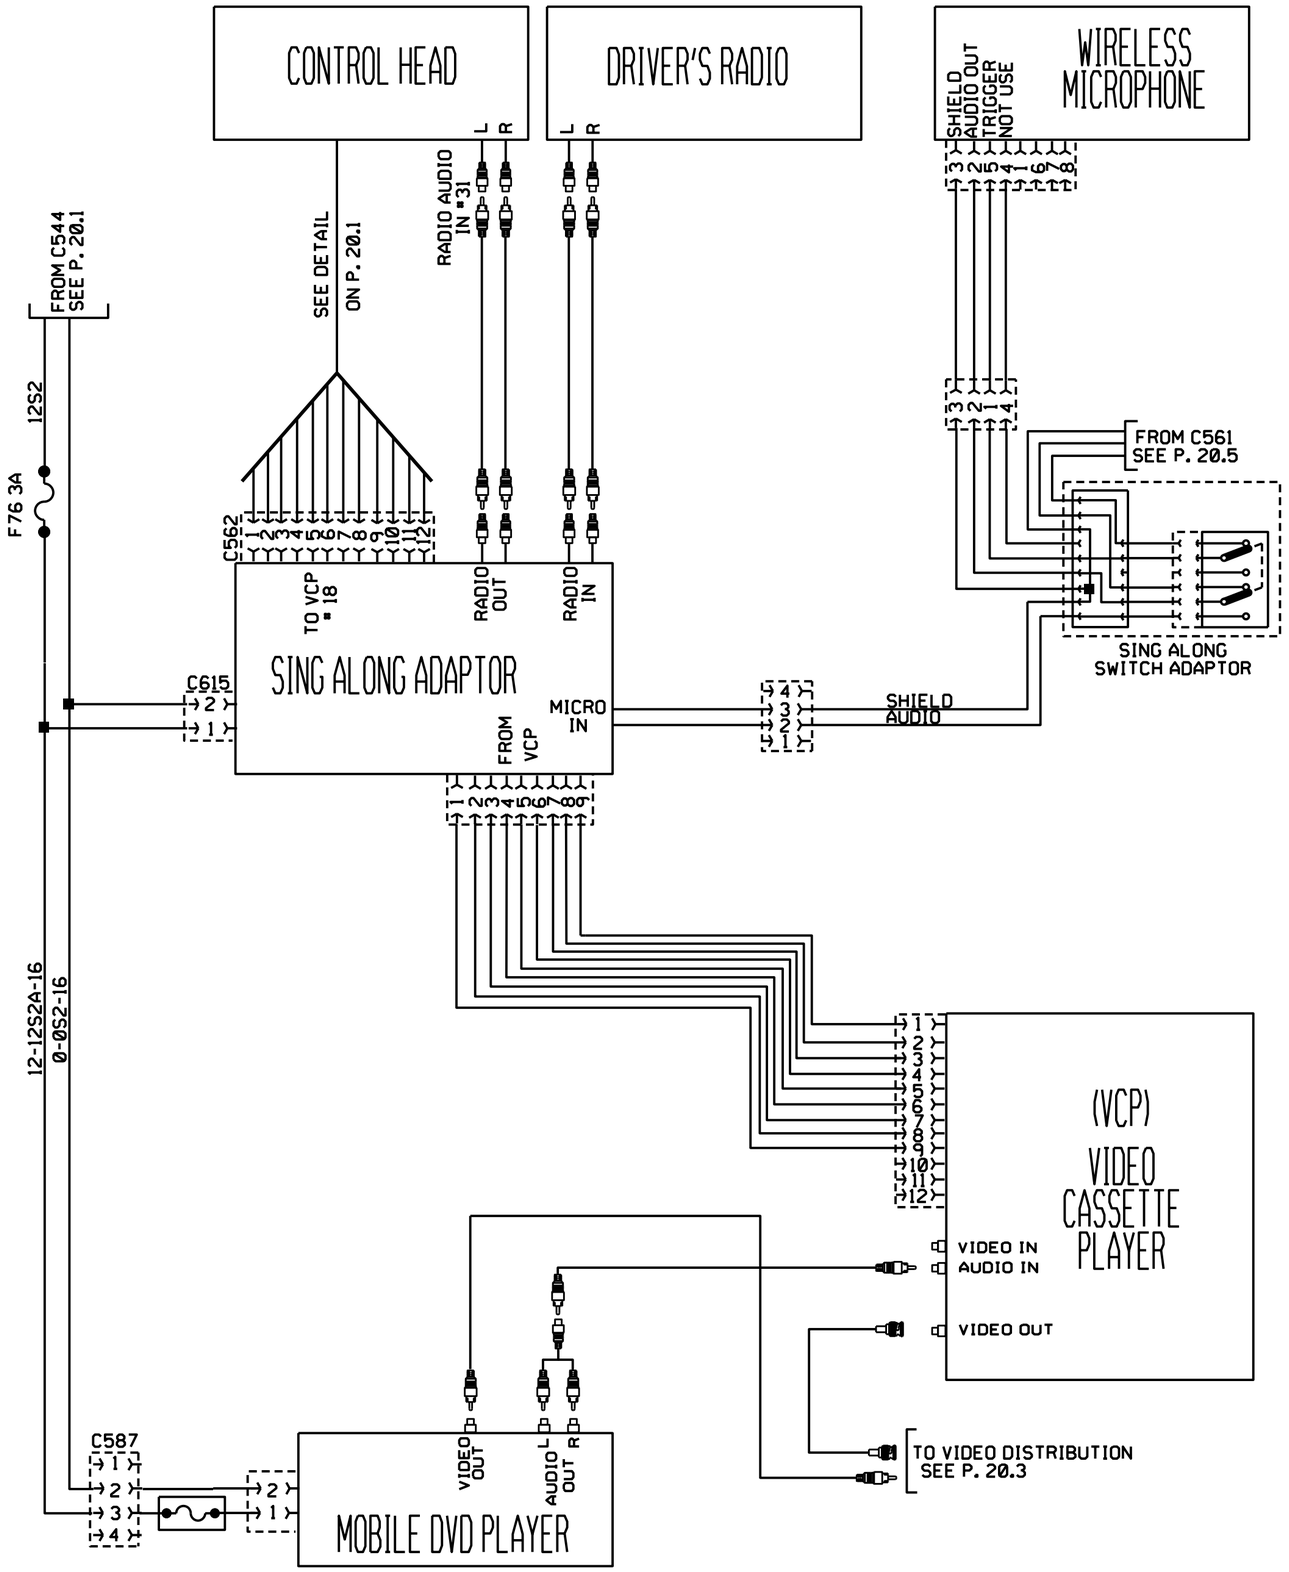

VCP AND DVD WITH KARAOKE

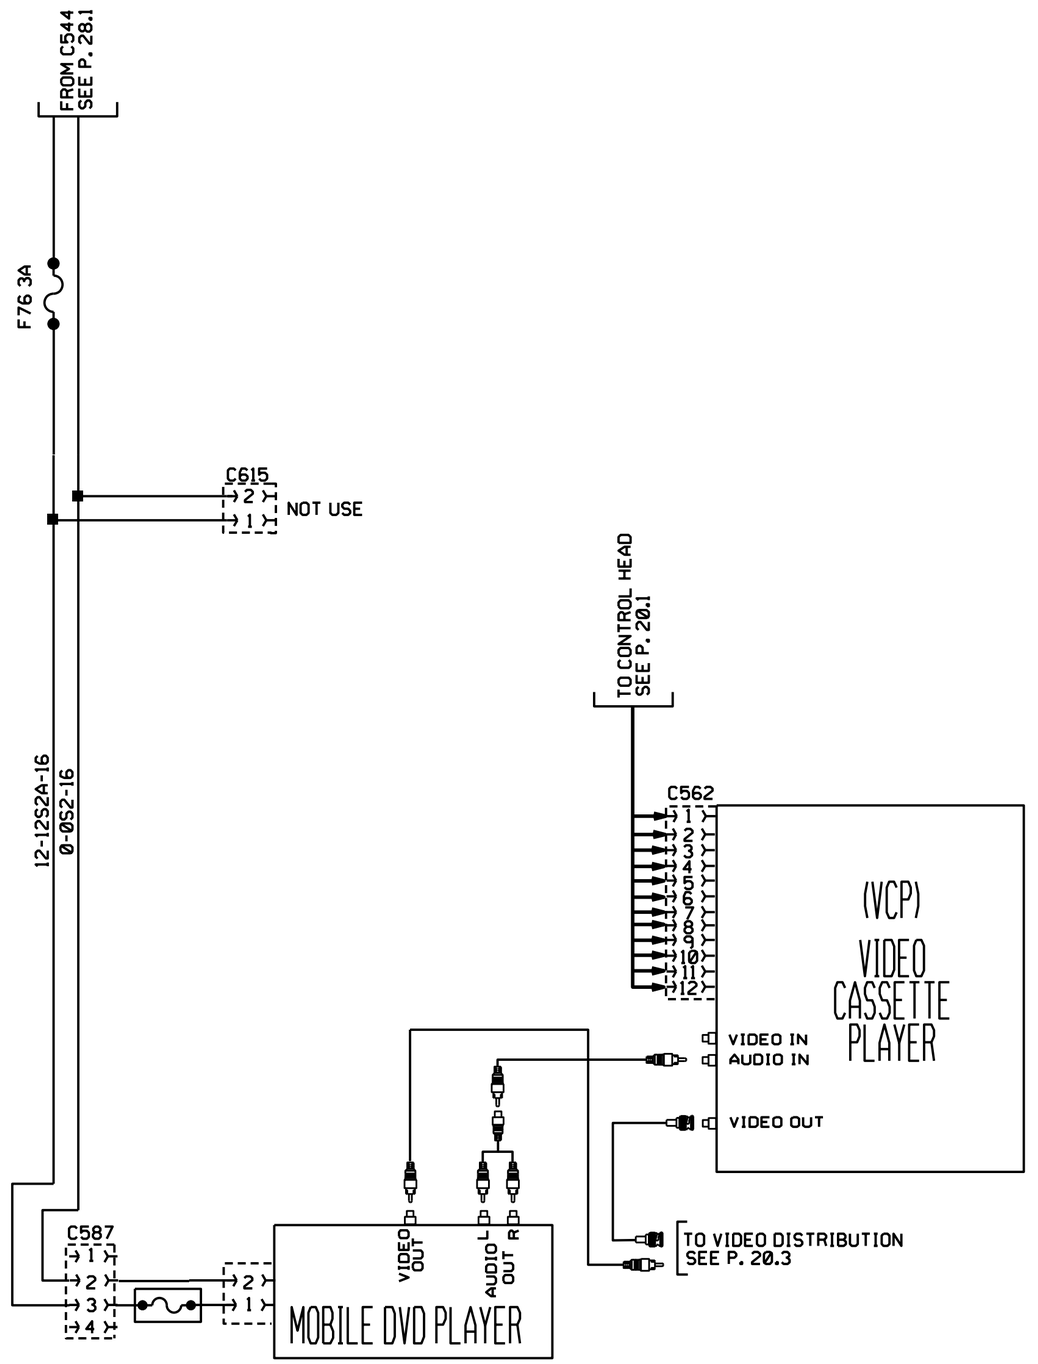

VCP AND DVD

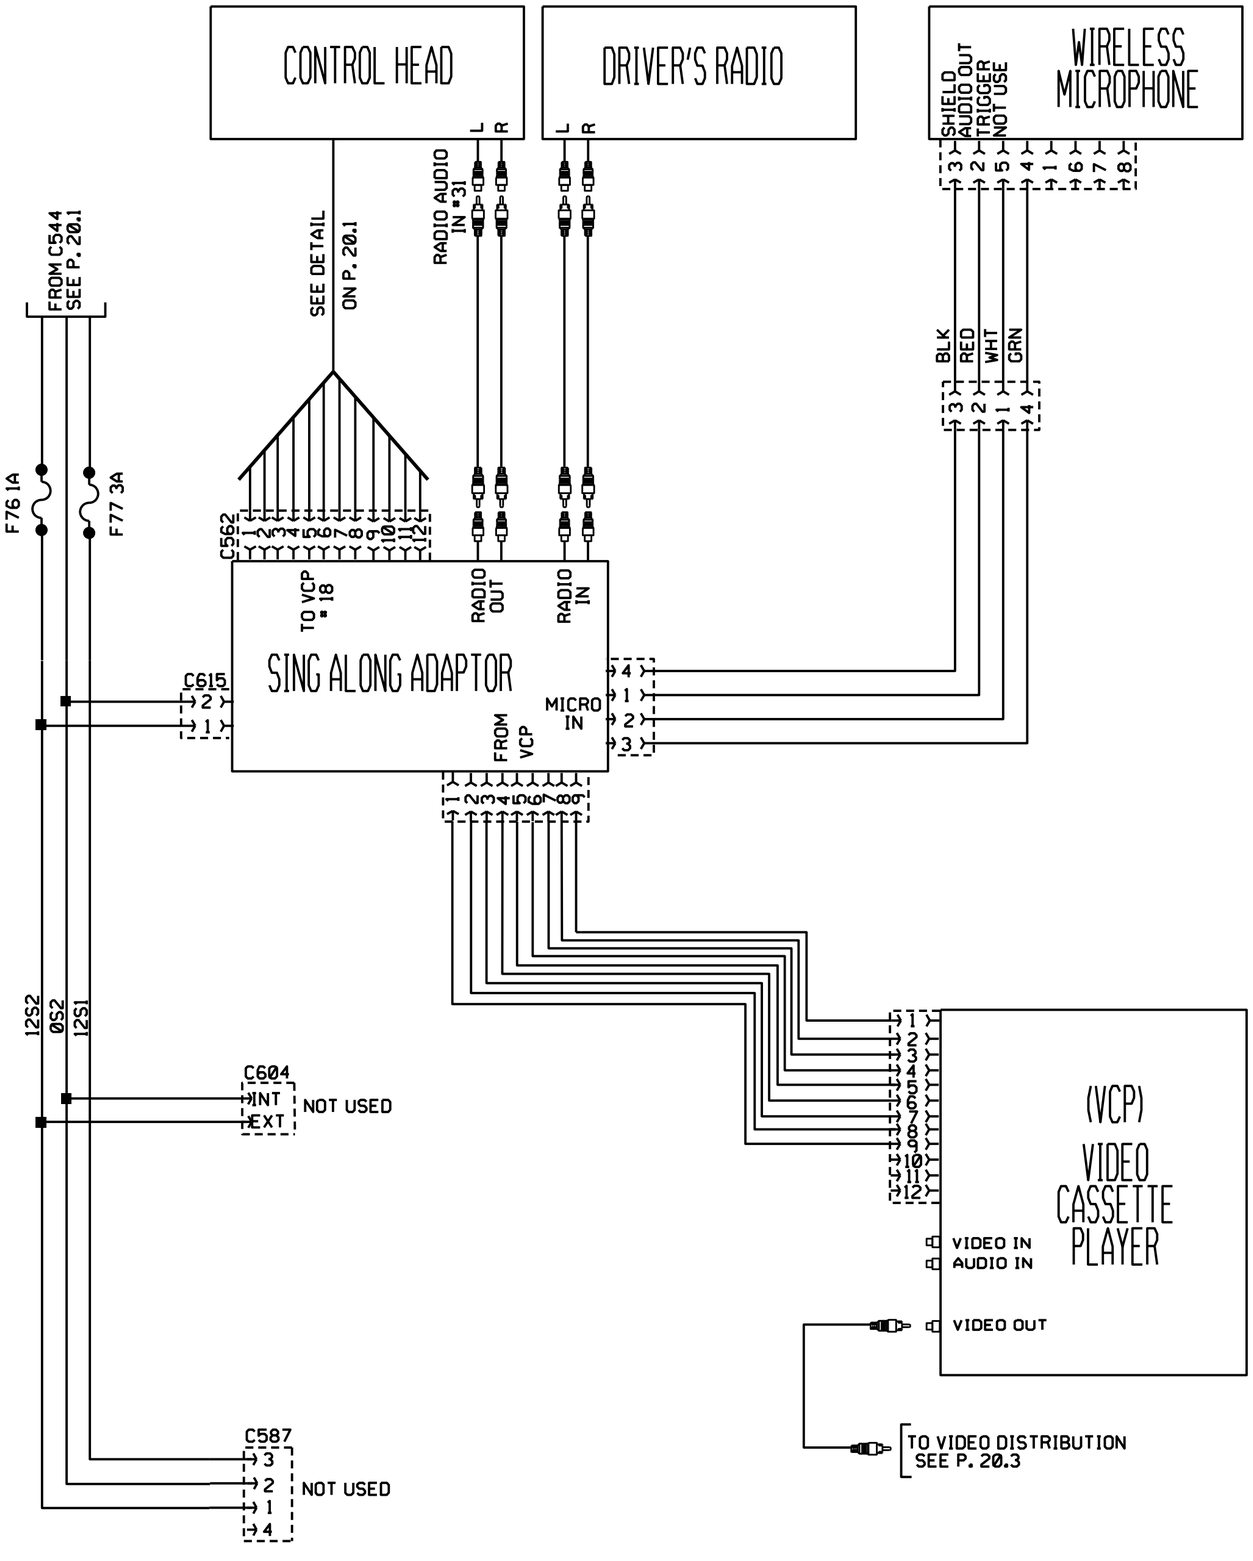

VCP AND SING ALONG ADAPTOR

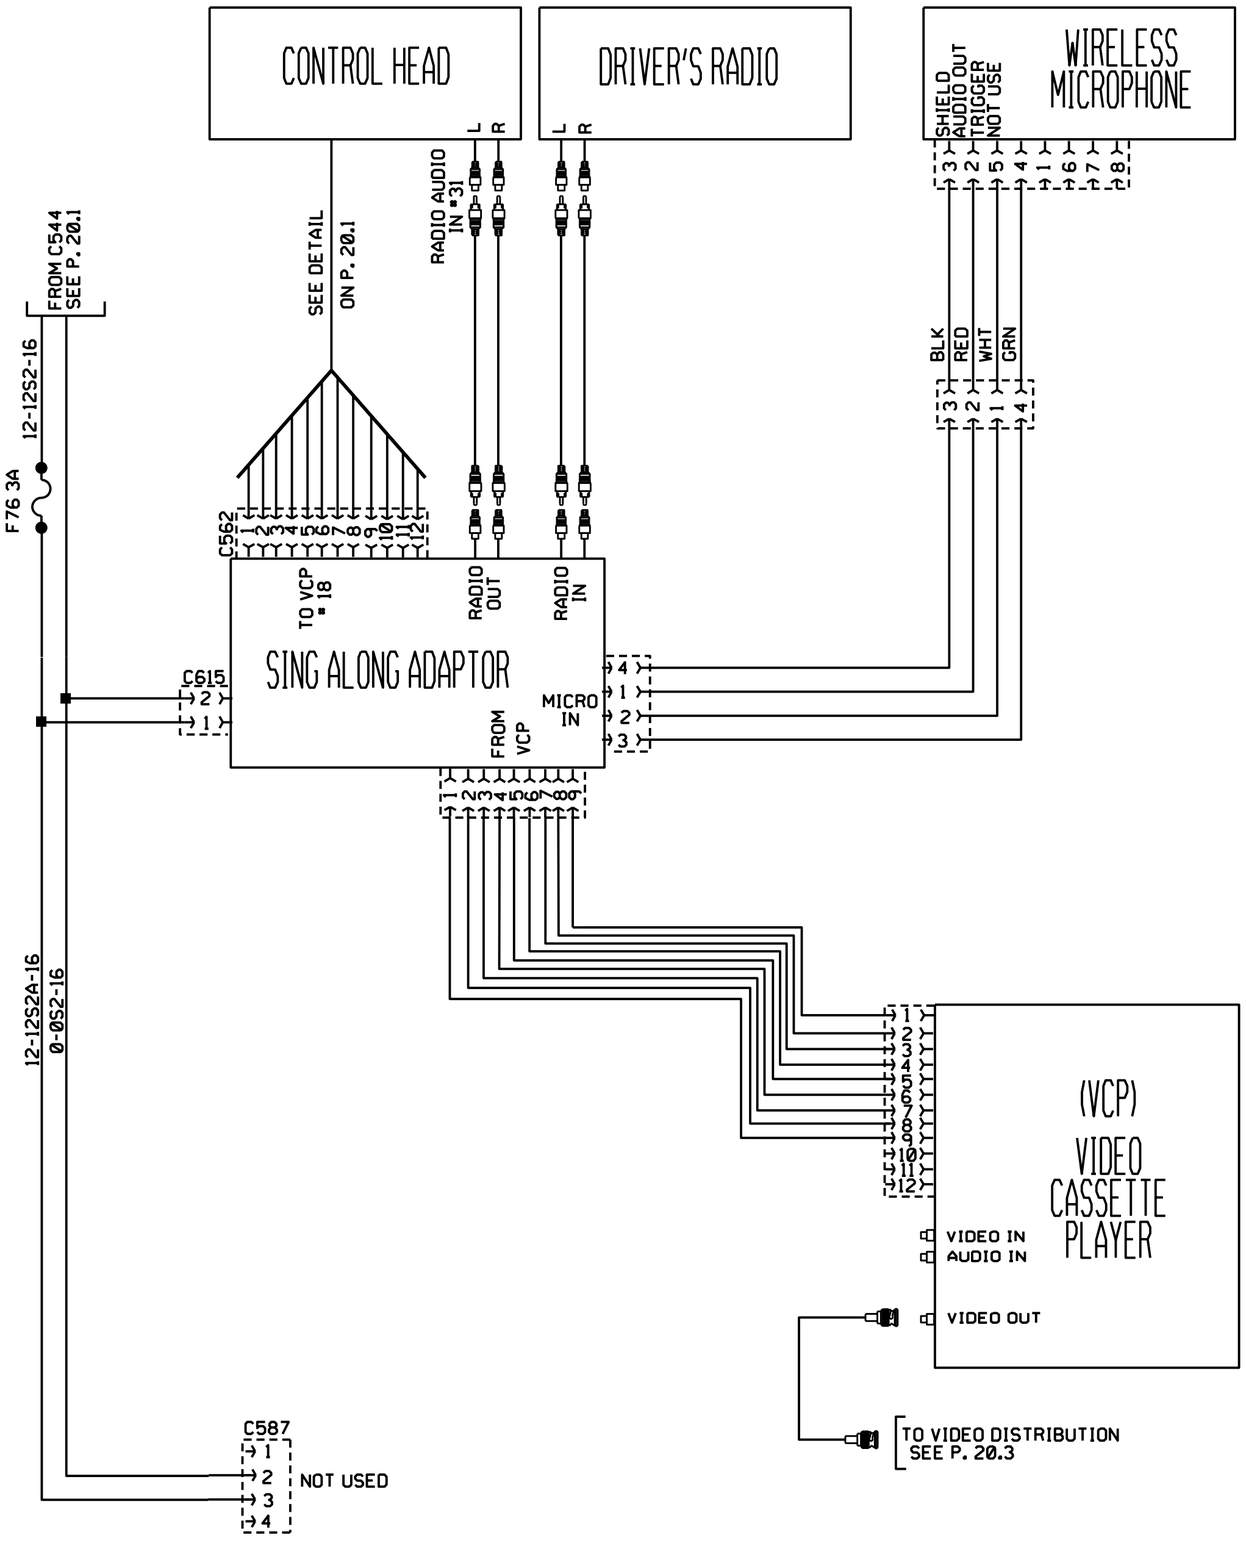

VCP AND SING ALONG ADAPTOR

E.C.U. - ABS

FROM ENGINE BRAKE SW. SEE PAGE 19.1 — 36-18 — 87A / 87 / 30 — R49 (ENGINE BRK) — 85 / 86

CX1 — C92

14 — 0-157B-18 — C92 1
8 — 12-156A-14 — C92 2
9 — 0-0Y1-14
4 — 0-0Y2-14
7 — 12-85X-18 — C92 5
15 — 0-85Y-18 — C92 6
2 — 0-85Z-18 — C92 3
10 — 901-18
11 — 900-18

C3 10 — 0-953-18 — BATTERY GROUND TO FR. JCT BOX SEE P. 5.1

C20 60 — 0-154-18 — FROM WORLD TRANSMISSION CV (27) SEE P. 6.1

C20 61 — 0-161B-18 — GND FROM WORLD TRANS. CONN. CV (11,31) SEE P. 6.1

12-156A-14 — CB106 15A — 12-12M-14 — 12V POWER FROM FR JCT BOX SEE P. 2.1

R52 — 85 / 86 — 87 / 30 — C3 11

12-85X-18 — CB105 6A — 12-12IE-16 — 12V IGNITION FROM FR JCT BOX SEE P. 2.1

RS38

RS39

C74 22 — 0-85Y-18 — FROM ABS T.T. LT. MODULE C572 (6) SEE P. 28.1

TWISTED 30/METER

10 — 901-18 — 901-18 — J1587 DATA LINK SIGNAL FROM DDEC ECM C249 SEE P. 5.1
11 — 900-18 — 900-18

C761 B / A / C — C760 C / A / B — C / A / B

3 — 925-18 YEL — 926-18 — 925-18 — J1939 DATA LINK SIGNAL TO ZF TRANSMISSION SEE P. 6.3
1 — 926-18 GRN

120 ohms

ONLY WITH ZF TRANSMISSION OPTION

CX2 — C96 — C163 — SENSOR

12 — 138-18 — 3 — BRN
15 — 138A-18 — 2 — BLK

C162

6 — 12-139-16 — 1 — BLU — 1 — OUTLET VALVE / INLET VALVE
3 — 12-140-16 — 7 — BRN — 3
0-0Y3-16 — 8 — GRN/YEL — 2
0-0Y4-16 — 4 — GRN/YEL — 2 — OUTLET VALVE / INLET VALVE
4 — 12-141-16 — 6 — BLU — 1
1 — 12-142-16 — 5 — BRN — 3

C161

10 — 143A-18 — 10 — BLK
13 — 143-18 — 11 — BRN — C160 — SENSOR

7 — 151-16 — 151-16 — C97 B — C168 A
16 — 152-16 — 152-16 — A — B

11 — 144-18 — C69 F — C164 2 — SENSOR
14 — 144A-18 — E — 1

C165

5 — 12-145-16 — D — BLU — 1 — OUTLET VALVE / INLET VALVE
2 — 12-146-16 — C — BRN — 3

0-0Y5-16 — C97 F — GRN/YEL — 2
0-0Y6-16 — C — GRN/YEL

C166

9 — 12-147-16 — C69 B — BLU — 1 — OUTLET VALVE / INLET VALVE
8 — 12-148-16 — A — BRN — 3

17 — 149A-18 — C97 E — C167 1 — SENSOR
18 — 149-18 — D — 2

FRONT AXLE — LH WHEEL "L2" — RH WHEEL "L1"

DRIVE AXLE — LH WHEEL "A1" — RH WHEEL "A2"

NO: D060976 | PAGE: 21.1 | REVISION 00

PREVOST

WIRING DIAGRAM

E.C.U. - ABS

FROM ENGINE BRAKE SW. SEE PAGE 19.1

36-18

CX1

C3 10

C20 60

0-154-18

FROM WORLD TRANSMISSION CV (27) SEE P. 6.1

87A

87

30

0-953-18

BATTERY GROUND TO FR. JCT BOX SEE P. 5.1

C20 61

0-161B-18

GND FROM WORLD TRANS. CONN. CV (11,31) SEE P. 6.1

14 0-157B-18

C92 1

85

86

R49 (ENGINE BRK)

CB106

8 12-156A-14

C92 2

12-156A-14

15A

12-12M-14

12V POWER FROM FR JCT BOX SEE P. 2.1

R52

85

86

87

30

C3 11

9 0-0Y1-14

4 0-0Y2-14

CB105

7 12-85X-18

C92 5

12-85X-18

6A

12-12IE-16

12V IGNITION FROM FR JCT BOX SEE P. 2.1

RS38

RS39

15 0-85Y-18

C92 6

C74 22

0-85Y-18

FROM ABS T.T. LT. MODULE C572 (6) SEE P. 28.1

2 0-85Z-18

C92 3

TWISTED 30/METER

C406

10 901-18

B

901-18

J1587 DATA LINK SIGNAL FROM DDEC ECM SEE P. 5.1

11 900-18

A

900-18

C761

C760

3 925-18 YEL

1 926-18 GRN

B

A

C

926-18

925-18

J1939 DATA LINK SIGNAL TO ZF TRANSMISSION SEE P. 6.3

120 ohms

ONLY WITH ZF TRANSMISSION OPTION

CX2

C96

C163

12 138-18

3 BRN

15 138A-18

2 BLK

SENSOR

C162

6 12-139-16

1 BLU

OUTLET VALVE

INLET VALVE

3 12-140-16

7 BRN

0-0Y3-16

8 GRN/YEL

0-0Y4-16

4 GRN/YEL

4 12-141-16

6 BLU

1 12-142-16

5 BRN

10 143A-18

10 BLK

13 143-18

11 BRN

SENSOR

C161

C160

LH WHEEL "L2"

RH WHEEL "L1"

FRONT AXLE

7 151-16

151-16

C97

C168

16 152-16

152-16

A

B

11 144-18

C69

C164

14 144A-18

F

E

2

1

SENSOR

C165

5 12-145-16

D

BLU

OUTLET VALVE

2 12-146-16

C

BRN

INLET VALVE

LH WHEEL "A1"

0-0Y5-16

C97

F

GRN/YEL

2

0-0Y6-16

C

GRN/YEL

C166

9 12-147-16

C69

B

BLU

OUTLET VALVE

8 12-148-16

A

BRN

INLET VALVE

RH WHEEL "A2"

17 149A-18

C97

E

C167

1

18 149-18

D

2

SENSOR

DRIVE AXLE

NO: D060976

PAGE: 21.1

REVISION 08

PREVOST

E.C.U. - ABS

WIRING DIAGRAM

NO: D060976

PAGE: 21.1 SP1

REVISION 00

FROM ENGINE BRAKE SW. SEE PAGE 19.1 — 36-18

CX1

C92

R49 (ENGINE BRK)

0-953-18 — BATTERY GROUND TO FR. JCT BOX SEE P. 5.1

C3 10 — C20 60 — 0-154-18 — FROM WORLD TRANSMISSION CV (27) SEE P. 6.1

C20 61 — 0-161B-18 — GND FROM WORLD TRANS. CONN. CV (11,31) SEE P. 6.1

CB106 15A — 12-156A-14 — 12-12M-14 — 12V POWER FROM FR JCT BOX SEE P. 2.1

R52

C3 11

CB105 6A — 12-12IE-16 — 12V IGNITION FROM FR JCT BOX SEE P. 2.1

RS38

RS39

C74 22 — 0-85Y-18 — FROM ABS T.T. LT. MODULE C572 (6) SEE P. 28.1

R56 (ATC LAMP)

12-157E-18 — FROM ATC T.T. LT. MODULE C571 (19) SEE P. 28.1

TWISTED 30/METER

901-18 — 900-18 — J1587 DATA LINK SIGNAL FROM DDEC ECM C249 SEE P. 5.1

926-18 GRN J1939 LOW — 925-18 YEL J1939 HIGH — 120 ohms — C226 — C224 — C225 — 926-18 — 925-18 — J1939 DATA LINK SIGNAL FROM DDEC ECM C249 SEE P. 5.1 SP2

24-82A-18 — FROM STOP LTS SW. R82 (86) SEE P. 19.1

R58

0-0-18 — FS

CX2

C96

C163 — SENSOR

C162 — OUTLET VALVE — INLET VALVE — LH WHEEL "L2"

C161 — OUTLET VALVE — INLET VALVE — RH WHEEL "L1"

C160 — SENSOR

C97

C168 — SOL. ATC — C215 — BRN

SOL. TAG AXLE BRAKE DISABLE — C216 — BRN

24-157F-18 — BLU — 0-0Y8-18

C69

C164 — SENSOR

C165 — OUTLET VALVE — INLET VALVE — LH WHEEL "A1"

C166 — OUTLET VALVE — INLET VALVE — RH WHEEL "A2"

C167 — SENSOR

FRONT AXLE

DRIVE AXLE

E.C.U. - ABS

FRONT AXLE

LH WHEEL "L2" — RH WHEEL "L1"

DRIVE AXLE

LH WHEEL "A1" — RH WHEEL "A2"

FROM WORLD TRANSMISSION CV (27) SEE P. 6.1 — 0-154-18 — C20 60

GND FROM WORLD TRANS. CONN. CV (11,31) SEE P. 6.1 — 0-161B-18 — C20 61

12V POWER FROM FR JCT BOX SEE P. 2.1 — 12-12M-14 — CB106 15A — 12-156A-14

12V IGNITION FROM FR JCT BOX SEE P. 2.1 — 12-121E-16 — CB105 6A — 12-85X-18

FROM ABS T.T. LT. MODULE C572 (6) SEE P. 28.1 — 0-85Y-18 — C74 22

FROM ATC T.T. LT. MODULE C571 (19) SEE P. 28.1 — 12-157E-18

J1587 DATA LINK SIGNAL FROM DDEC ECM SEE P. 5.1 — 901-18 / 900-18 — C406

J1939 DATA LINK SIGNAL FROM DDEC ECM SEE P. 5.1 SP2 — 926-18 / 925-18 — C224 — 120 ohms

FROM STOP LTS SW. R82 (86) SEE P. 19.1 — 24-82A-18

BATTERY GROUND TO FR. JCT BOX SEE P. 5.1 — 0-953-18

C3 10 — C3 11

R52 — R56 (ATC LAMP) — R58 — R49 (ENGINE BRK)

TWISTED 30/METER

FS — 0-0-18

SENSOR — C163 — C162 — C161 — C160

OUTLET VALVE — INLET VALVE

SOL. ATC — C215 — C168

SOL. TAG AXLE BRAKE DISABLE — C216

C165 — C166 — C164 — C167 — C69 — C97

0-0Y5-16 — 0-0Y6-16 — 0-0Y3-16 — 0-0Y4-16

C92 — C226 — C96

RS38 — RS39

FROM ENGINE BRAKE SW. SEE PAGE 19.1 — 36-18

CX1 — CX2

0-157B-18	138-18
12-156A-14	138A-18
0-0Y1-14	12-139-16
0-0Y2-14	12-140-16
12-85X-18	12-141-16
0-85Y-18	12-142-16
0-85Z-18	143A-18
0-157D-18	143-18
901-18	151-16
900-18	152-16
926-18 GRN J1939 LOW	144-18
925-18 YEL J1939 HIGH	144A-18
	12-145-16
	12-146-16
	12-147-16
	12-148-16
	149A-18
	149-18

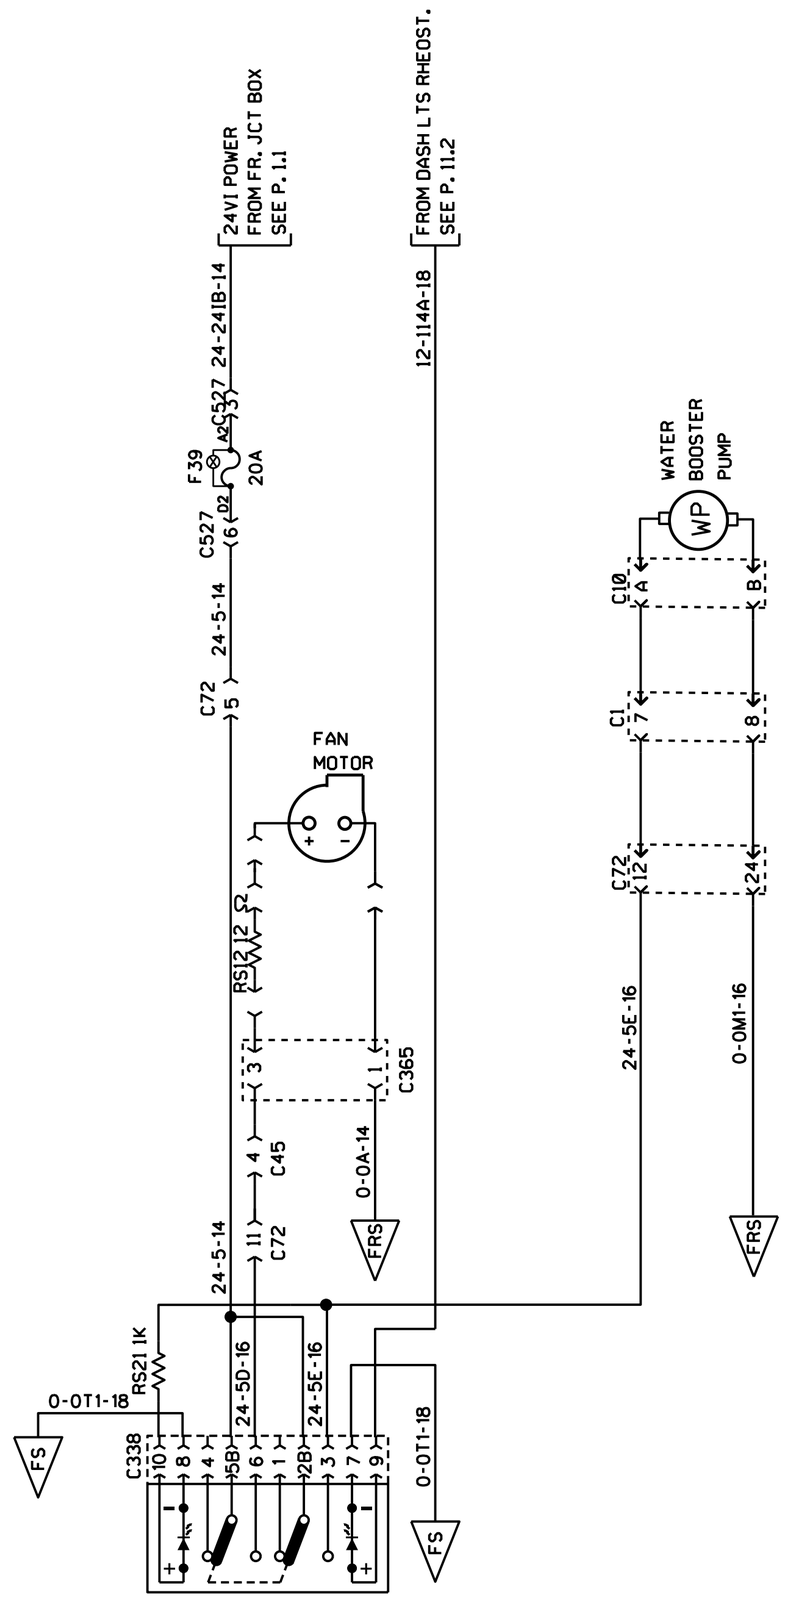

UPPER WINDSHIELD DEFROST

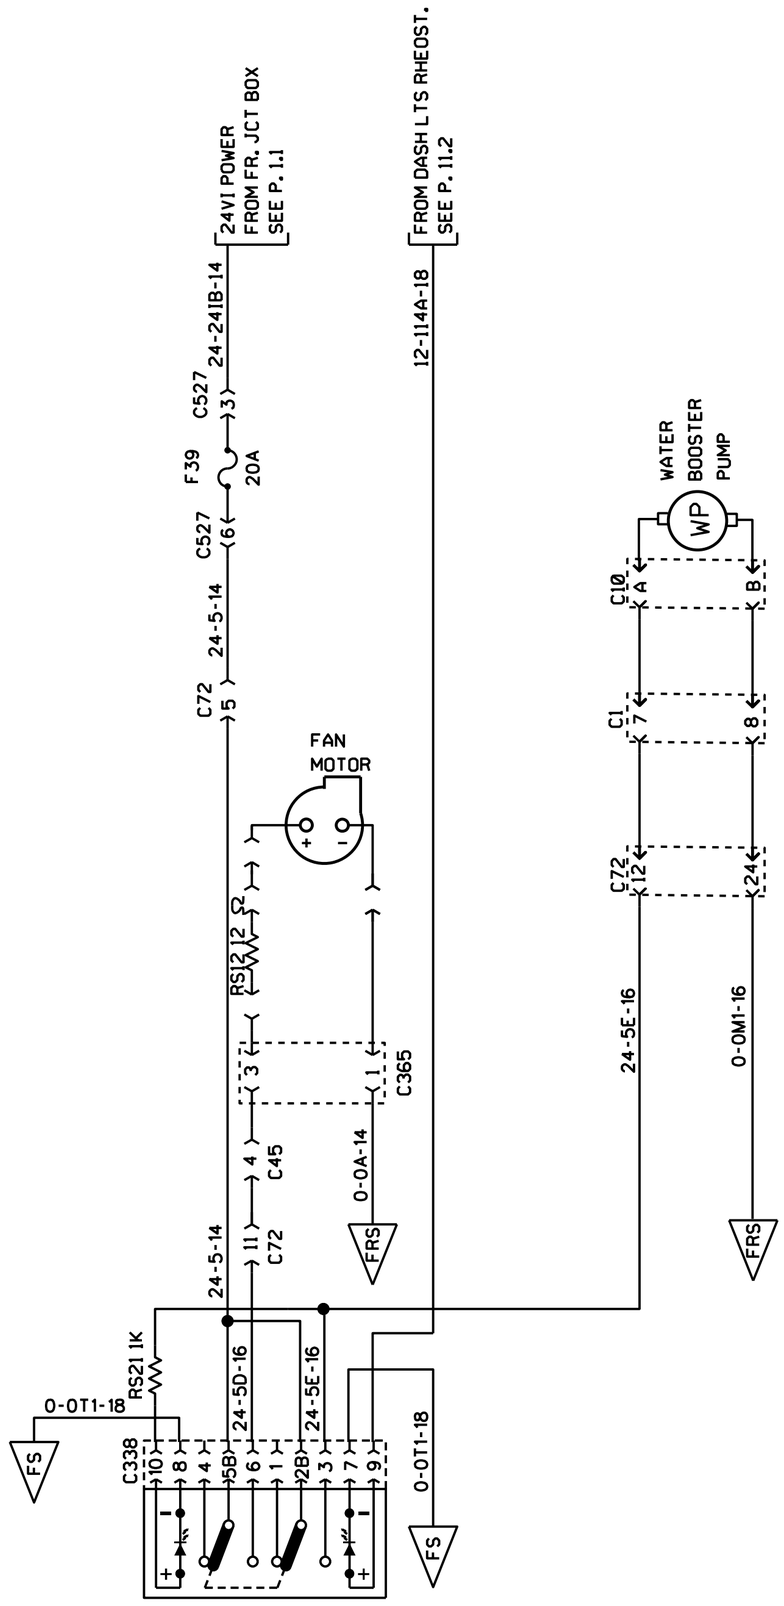

DEFROSTER SW.

UPPER WINDSHIELD DEFROST

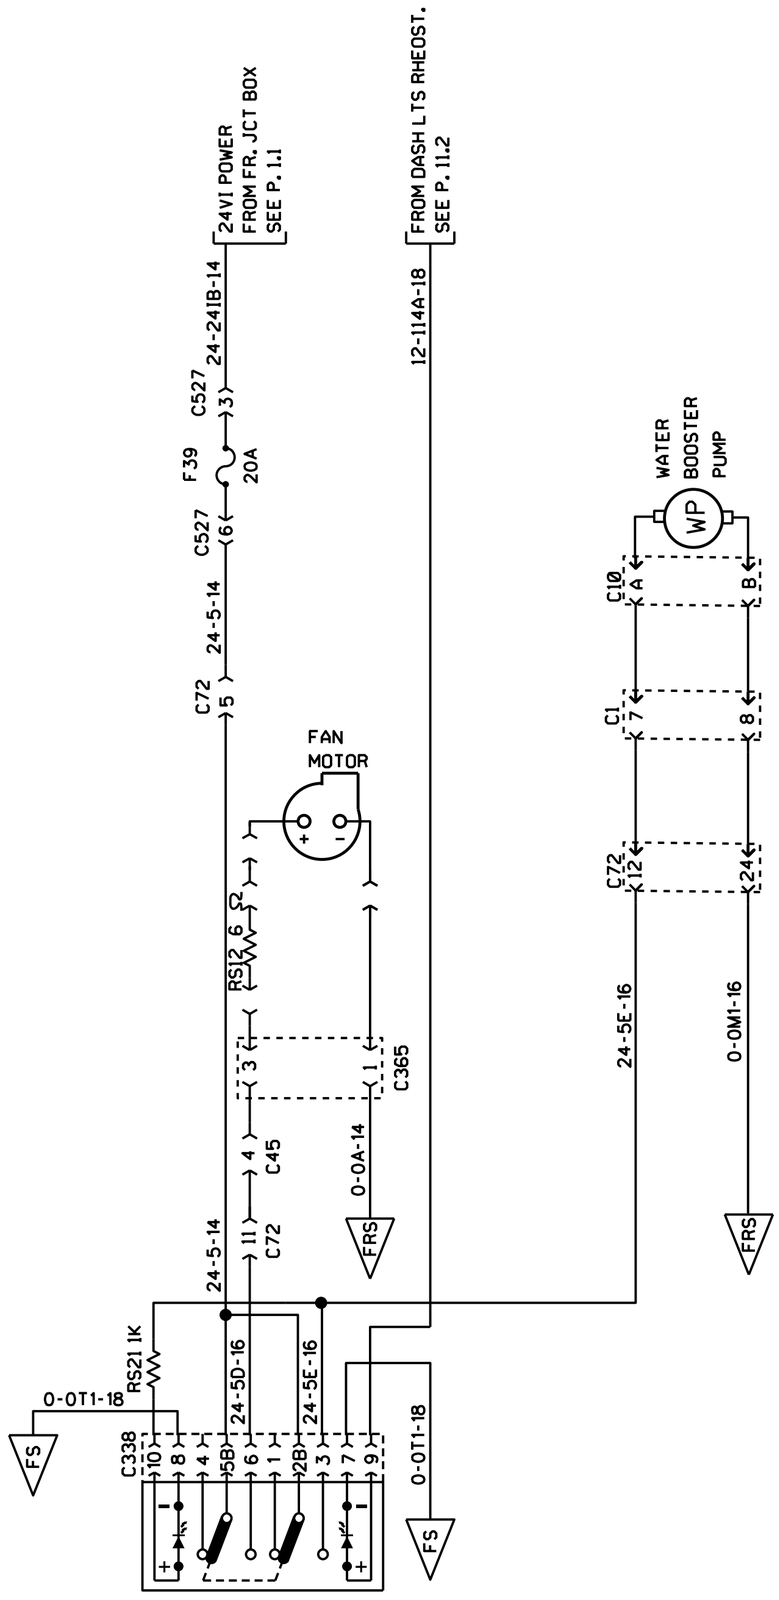

DEFROSTER SW.

UPPER WINDSHIELD DEFROST

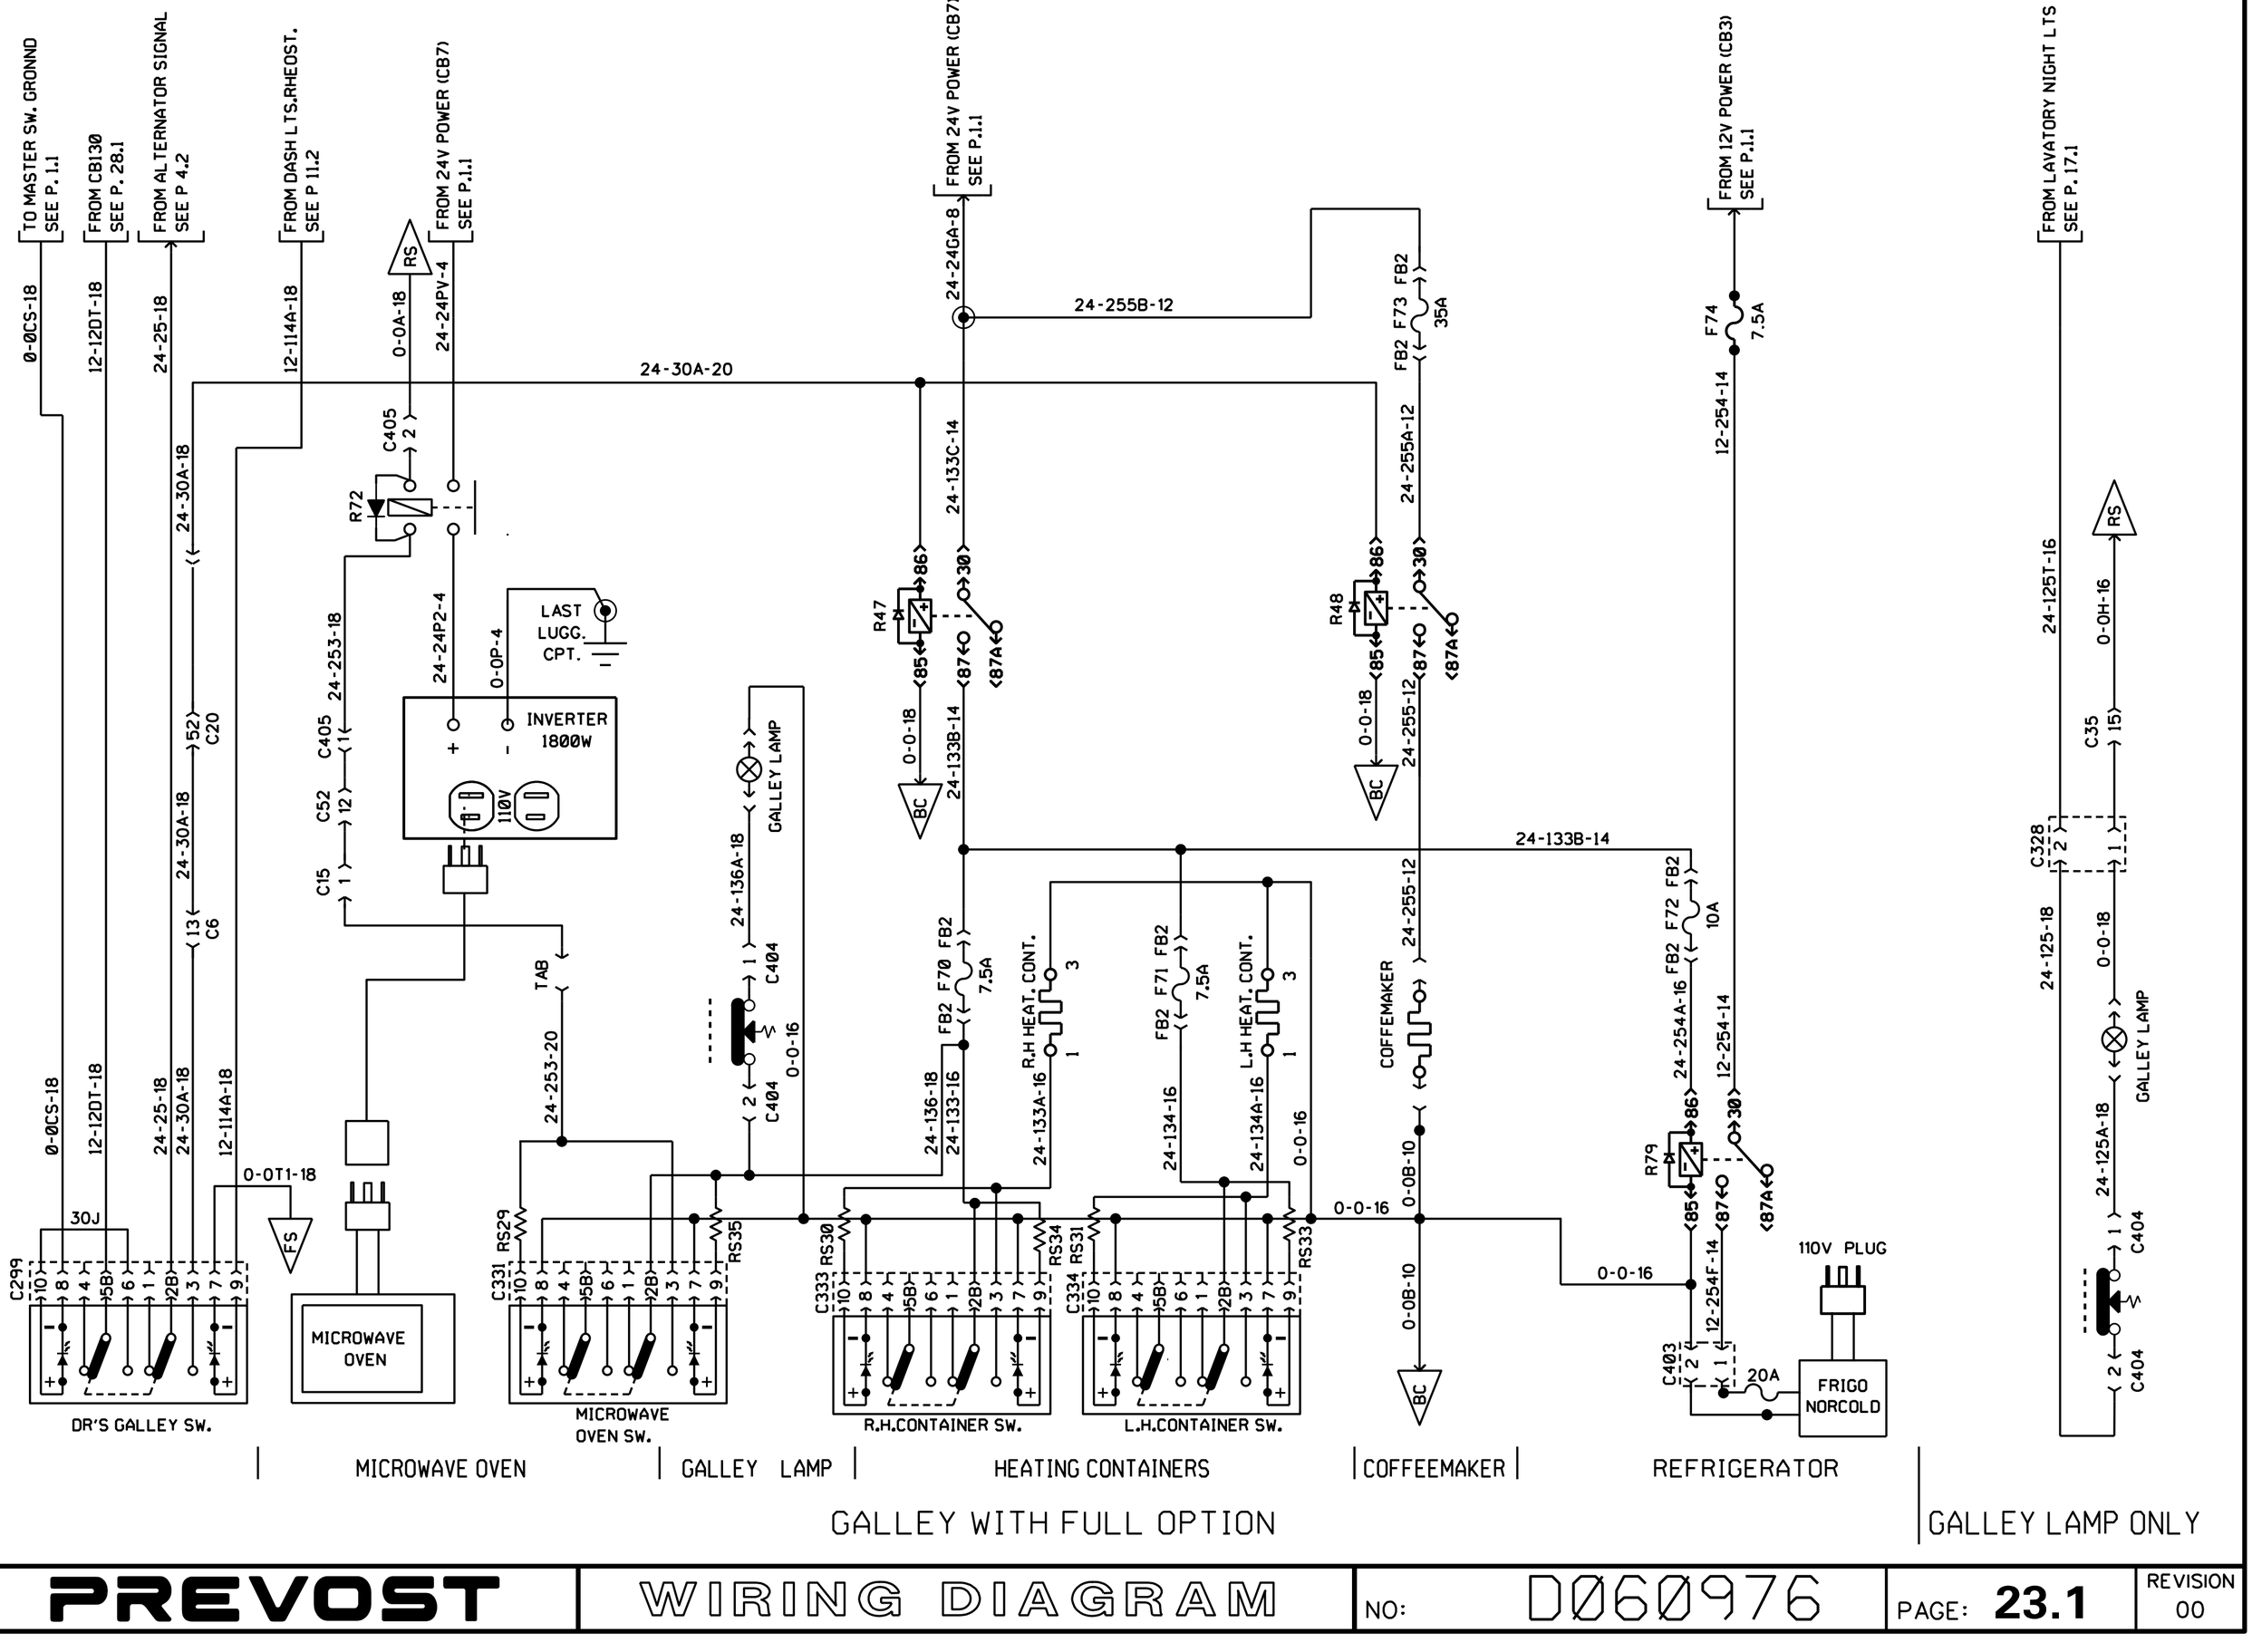

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 23.1	REVISION 00

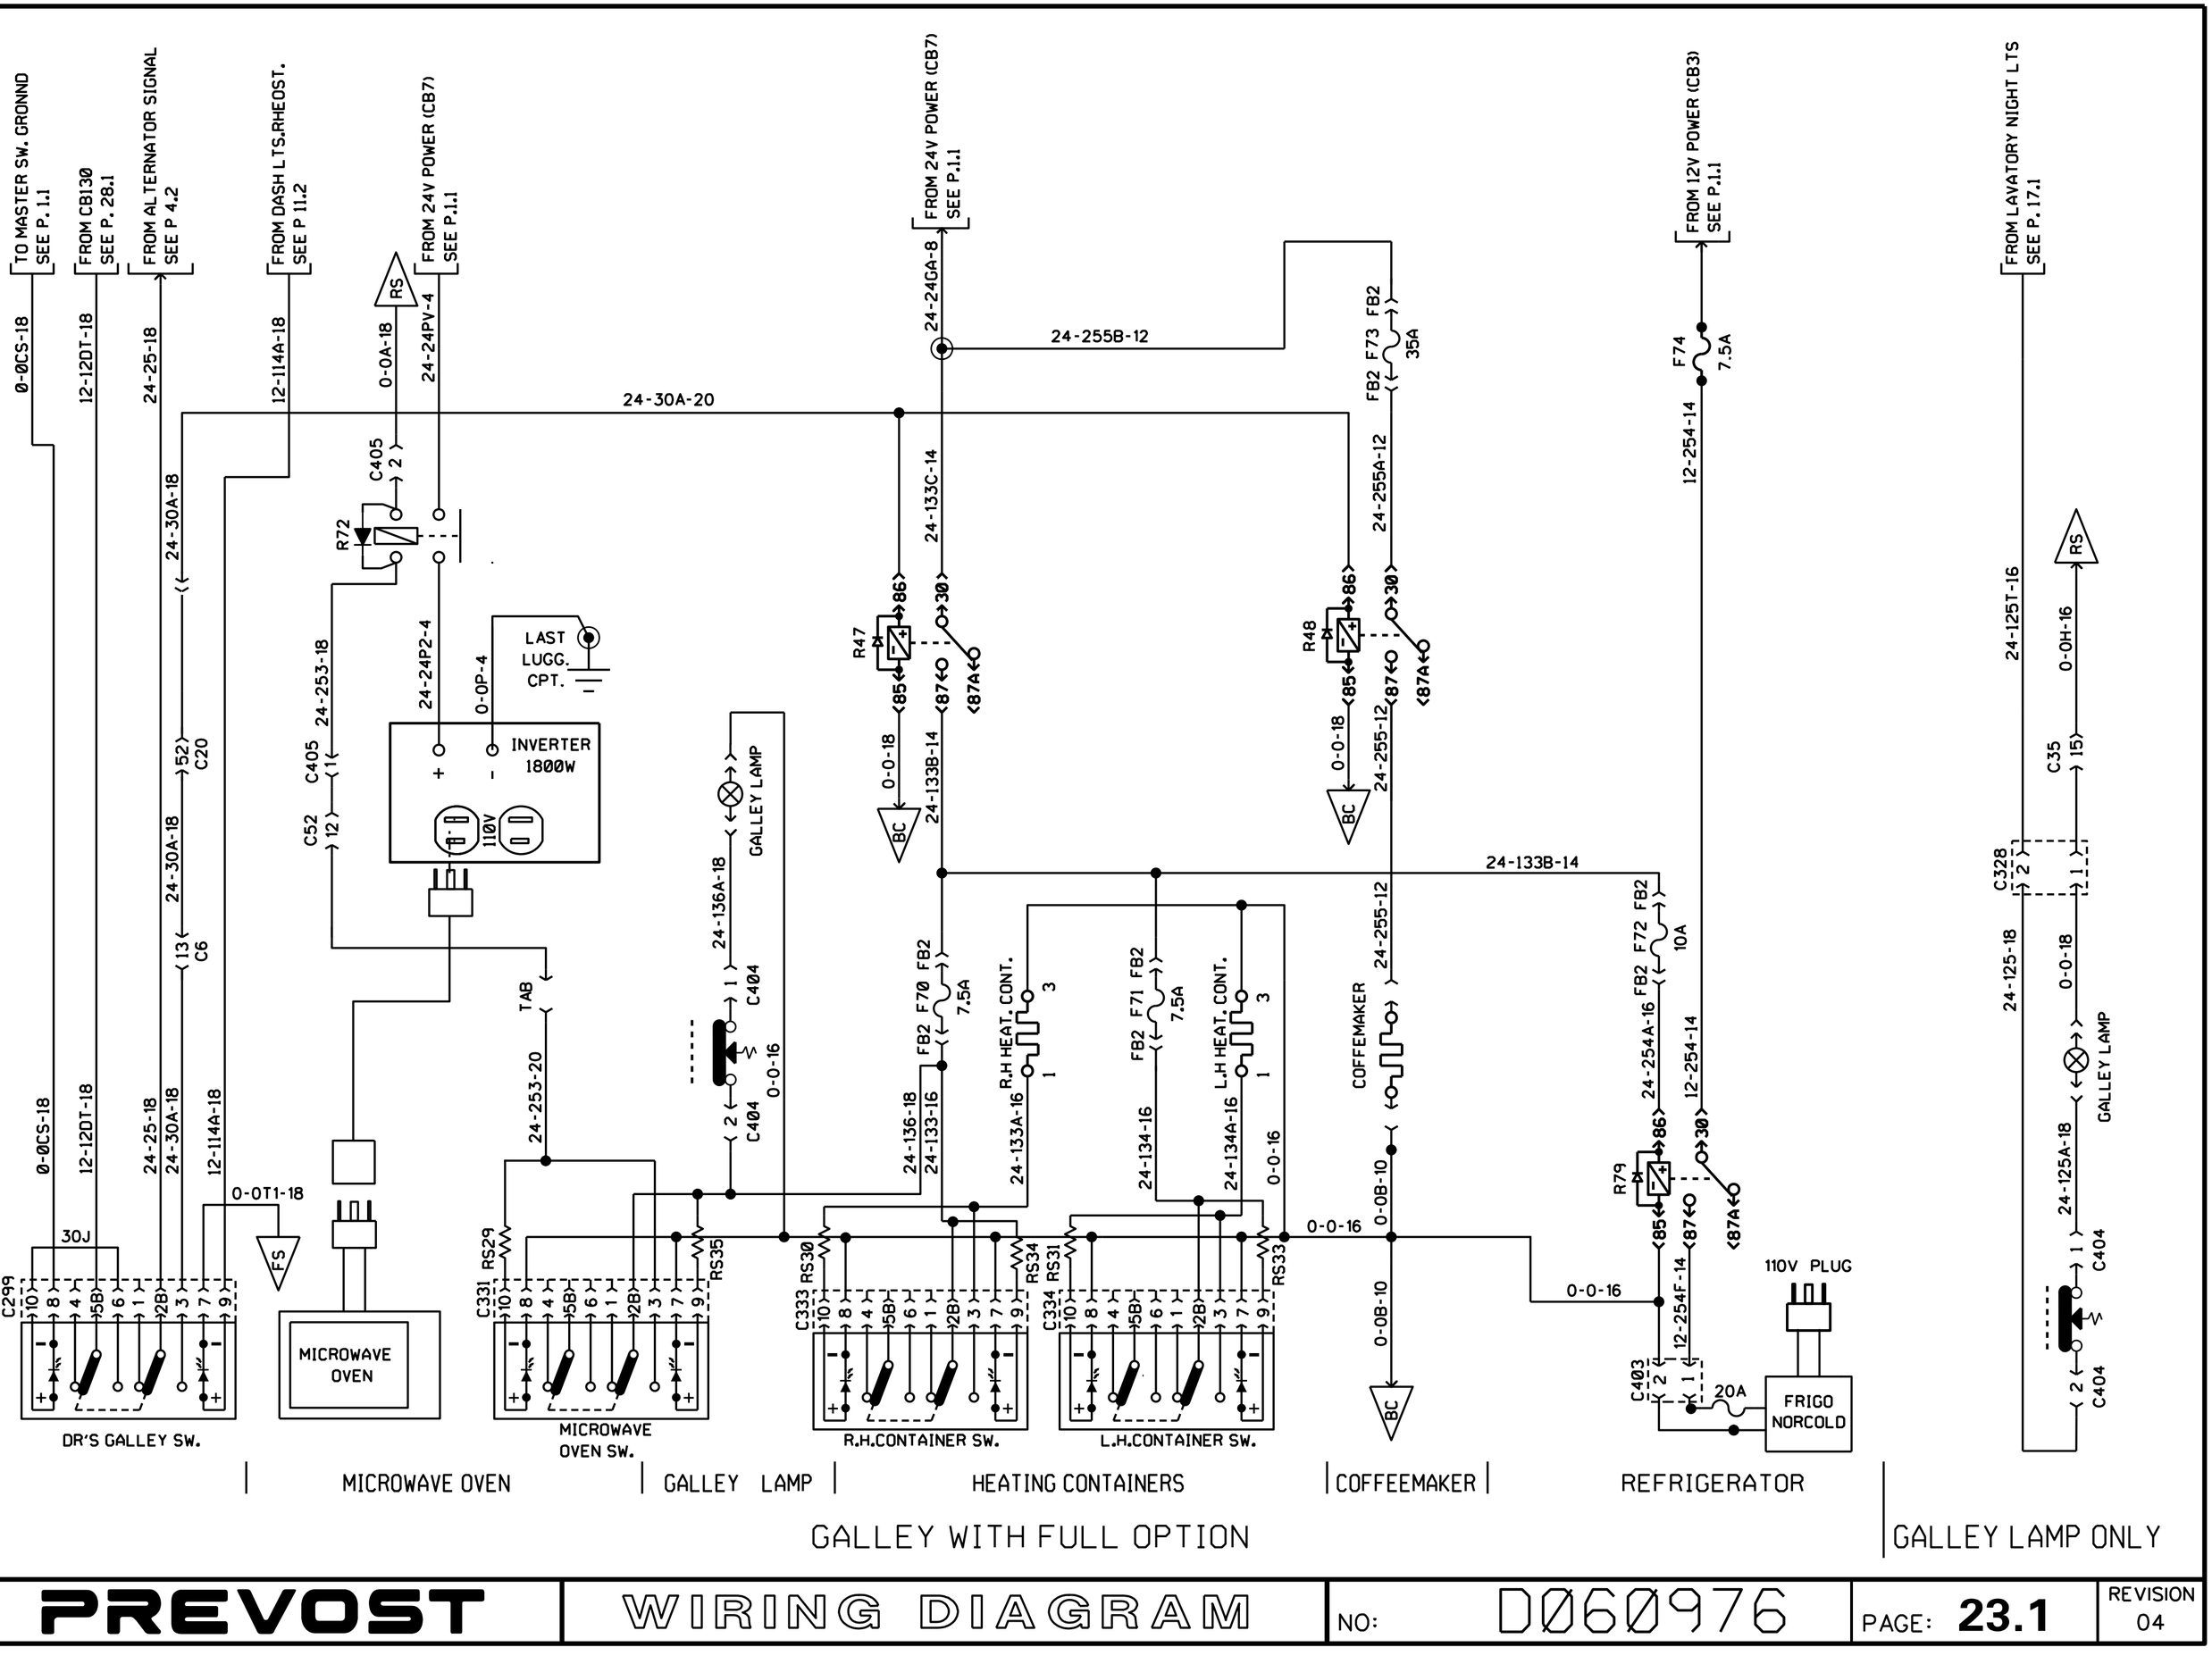

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 23.1	REVISION 04

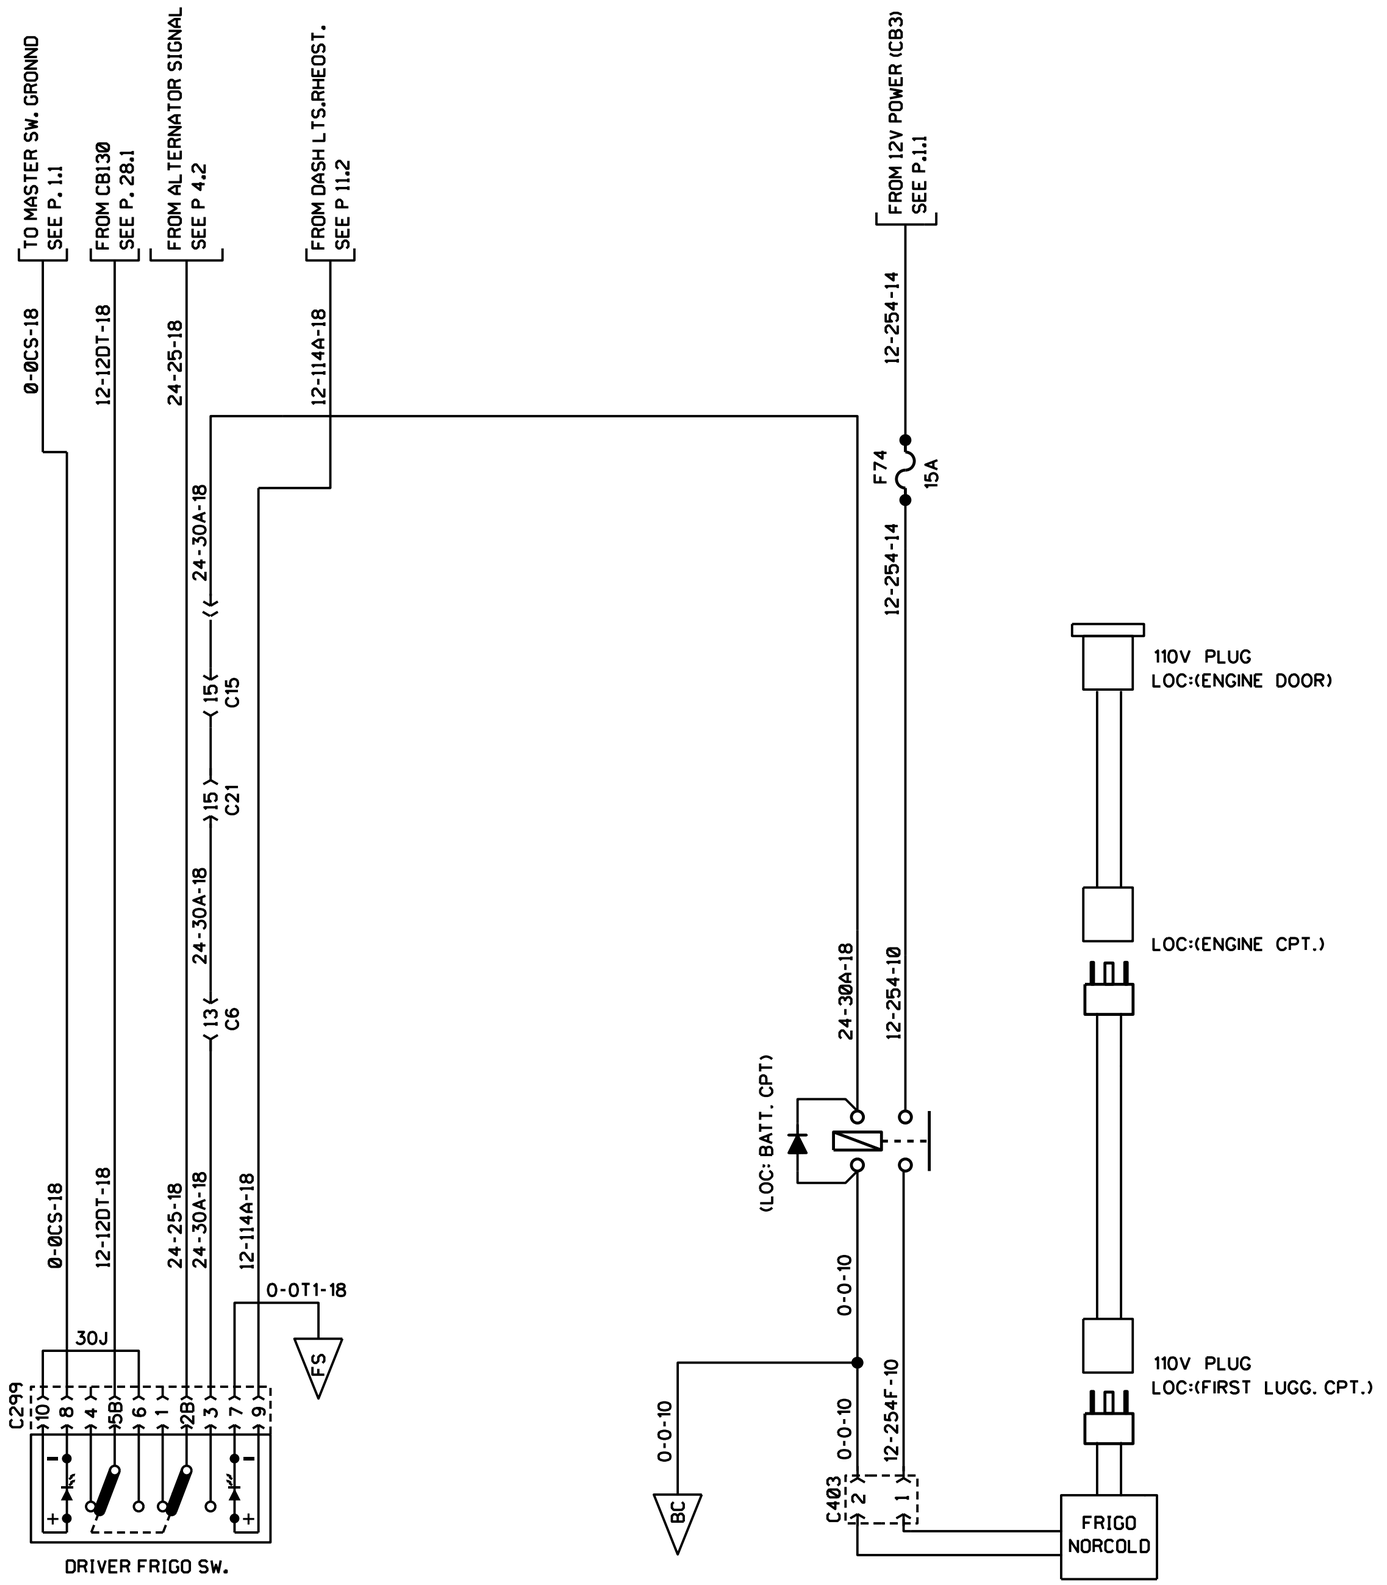

REFRIGERATOR FIRST LUGGAGE CPT.

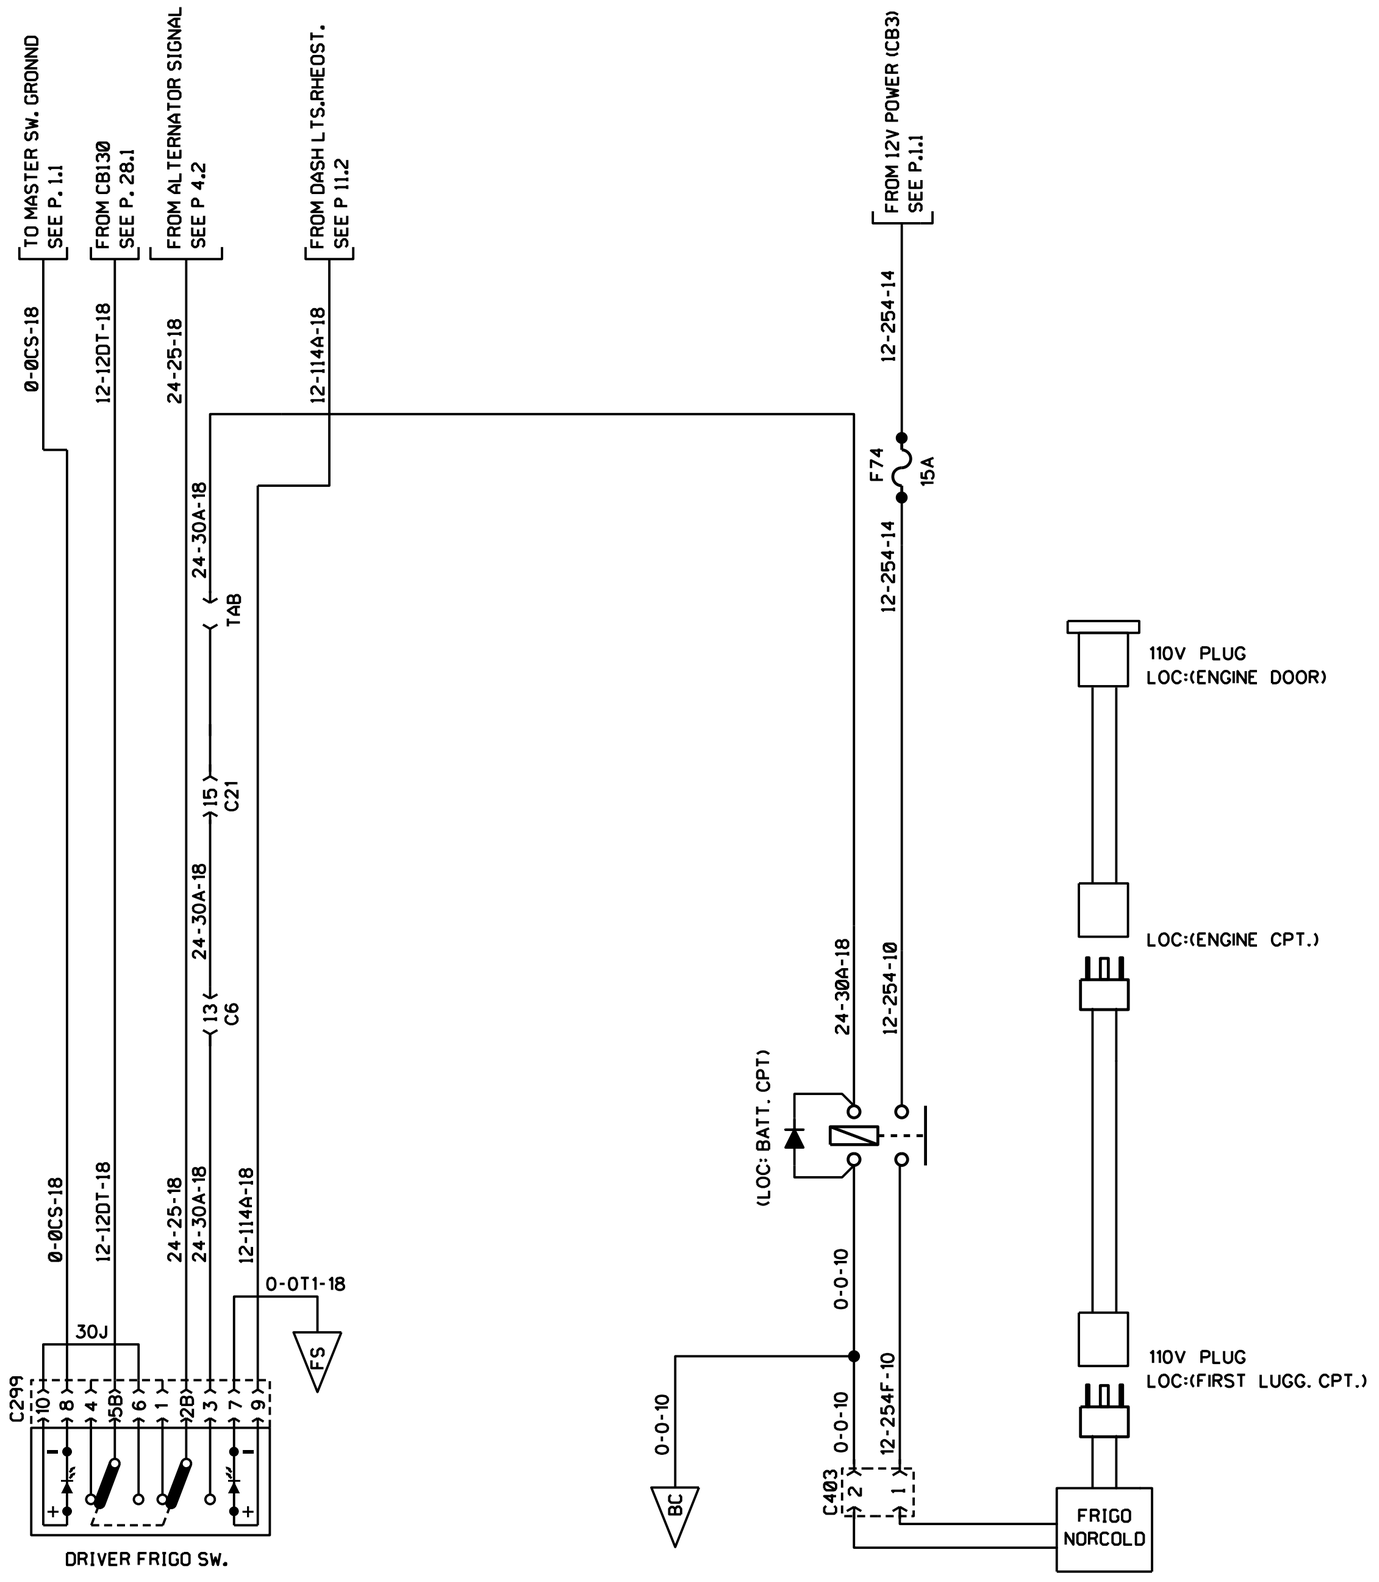

REFRIGERATOR FIRST LUGGAGE CPT.

SANS RELAIS

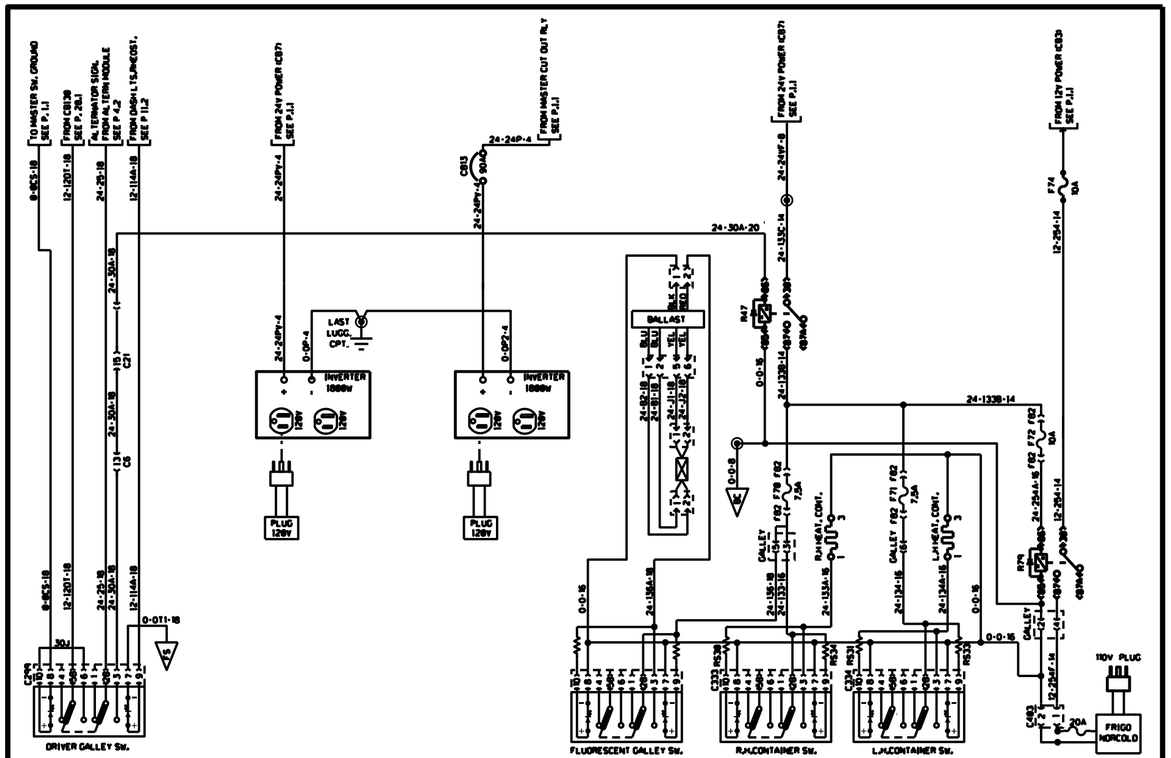

GALLEY & 110V OUTLET

3-0041

PREVOST	WIRING DIAGRAM	NO: D060976	PAGE: 23.1sp3	REVISION 00

AVEC RELAIS

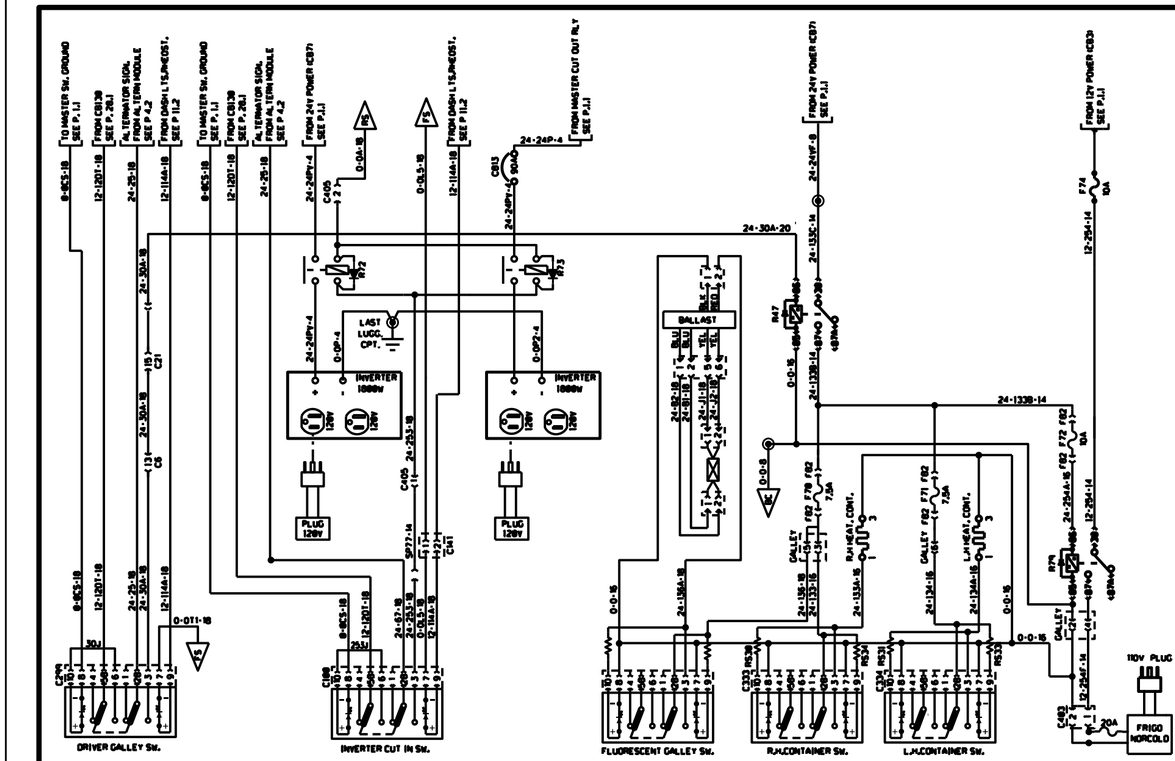

GALLEY & 110V OUTLET

PREVOST	WIRING DIAGRAM	NO: D060949	PAGE: 23.1spX	REVISION 00

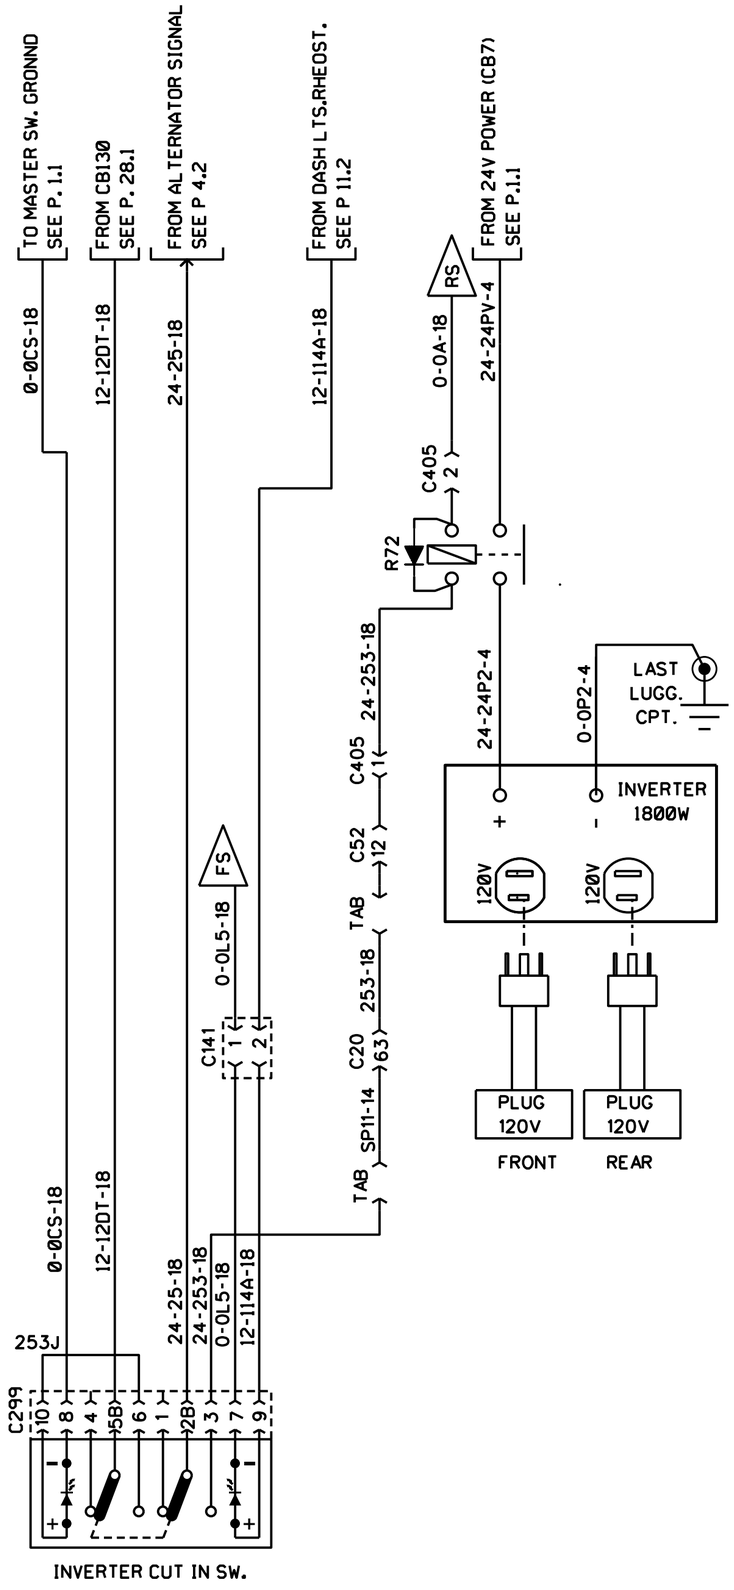
TO MASTER SW. GRONND
SEE P. 1.1
FROM CB130
SEE P. 28.1
FROM ALTERNATOR SIGNAL
SEE P 4.2
FROM DASH LTS.RHEOST.
SEE P 11.2
FROM 24V POWER (CB7)
SEE P.1.1
0-0CS-18
12-12DT-18
24-25-18
12-114A-18
0-0A-18
24-24PV-4
RS
C405
2
R72
24-253-18
C405
1
24-24P2-4
0-0P2-4
LAST
LUGG.
CPT.
INVERTER
1800W
+
-
120V
120V
C52
12
TAB
8
0-0L5-18
FS
C141
1
2
253-18
C20
63
SP11-14
TAB
PLUG
120V
PLUG
120V
FRONT
REAR
0-0CS-18
12-12DT-18
24-25-18
24-253-18
0-0L5-18
12-114A-18
253J
C299
10
8
4
5B
6
1
2B
3
7
9
INVERTER CUT IN SW.

120V OUTLET

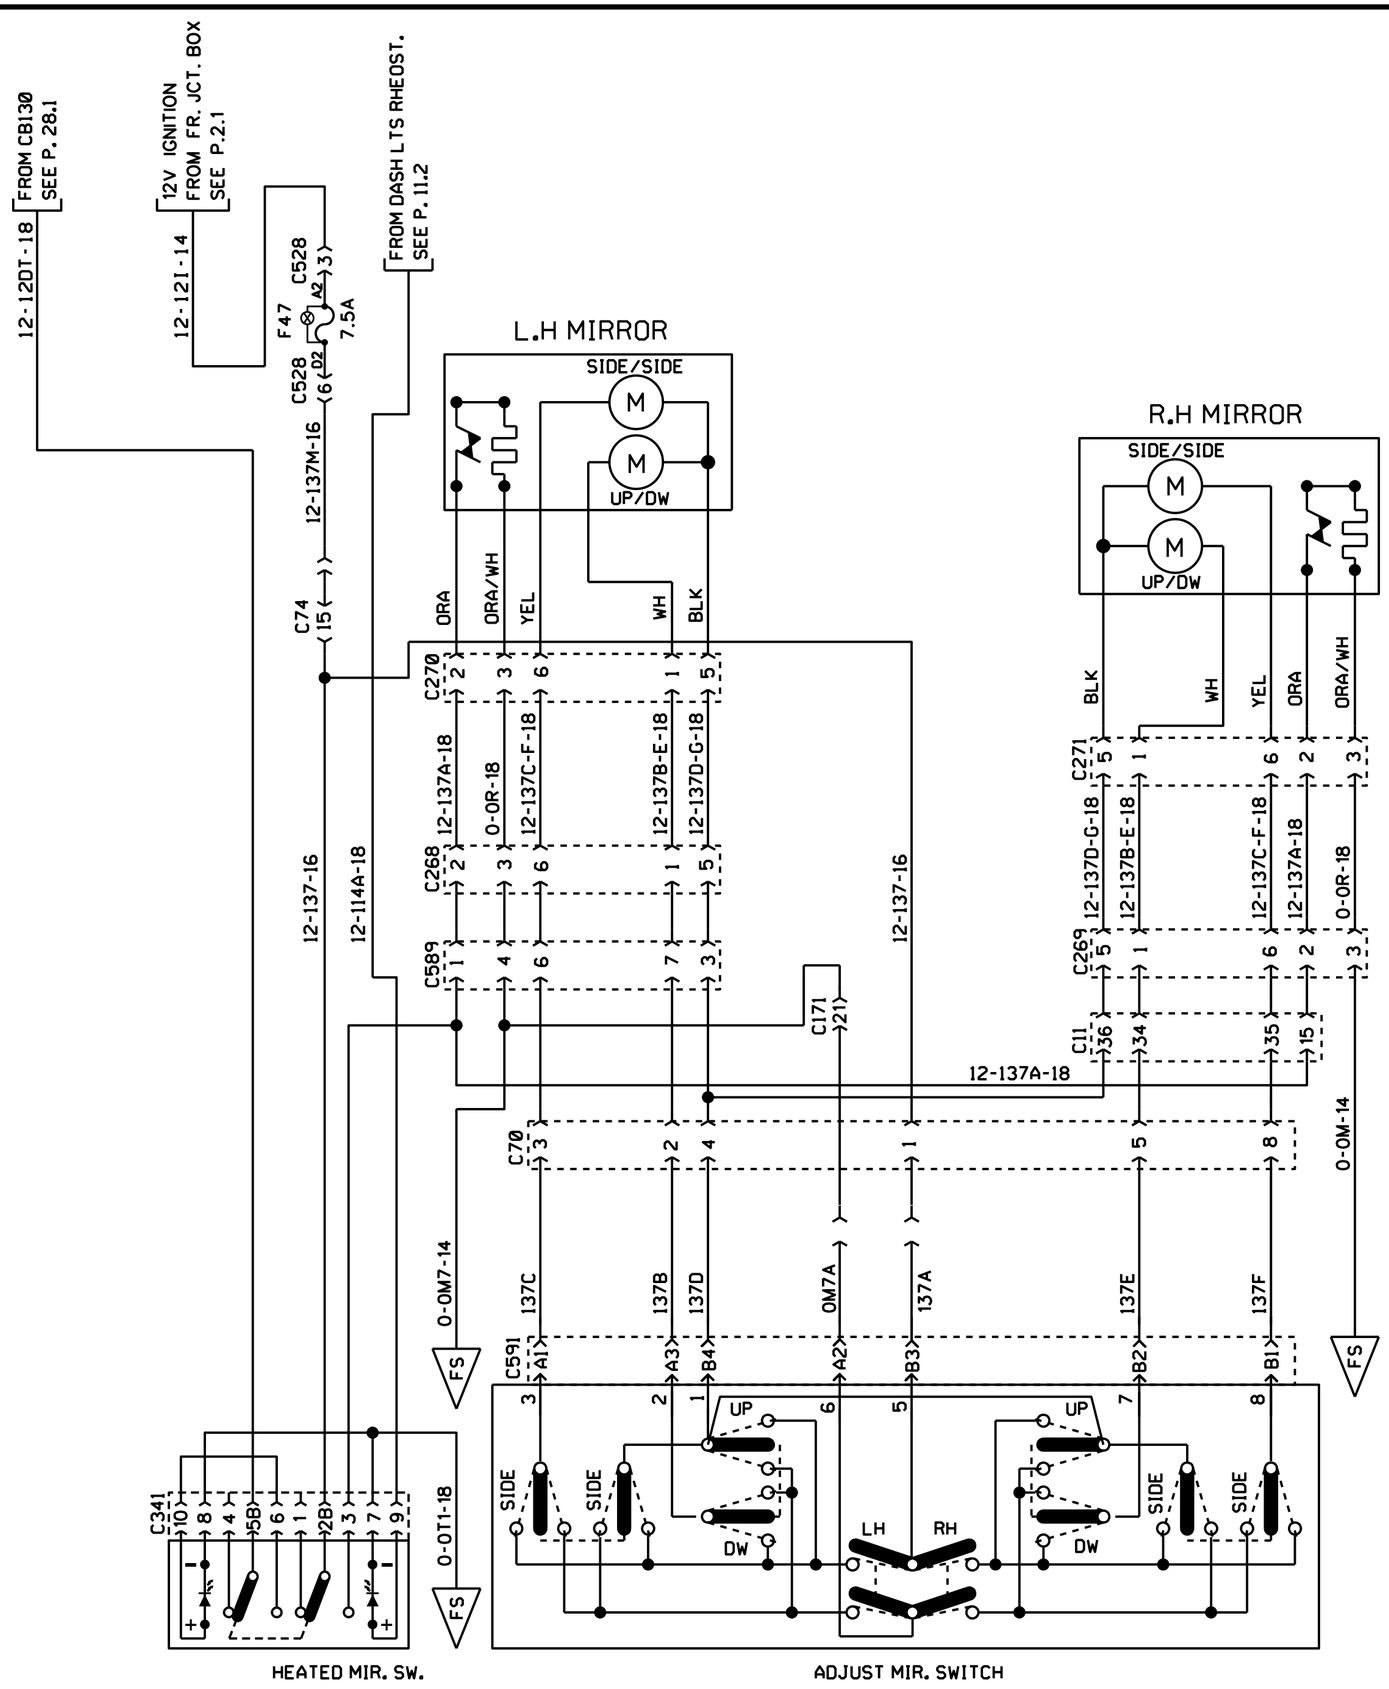

REAR VIEW MIRROR RAMCO FLAT - 1 ADJUSTMENT SW. & 1 HEATED SW.

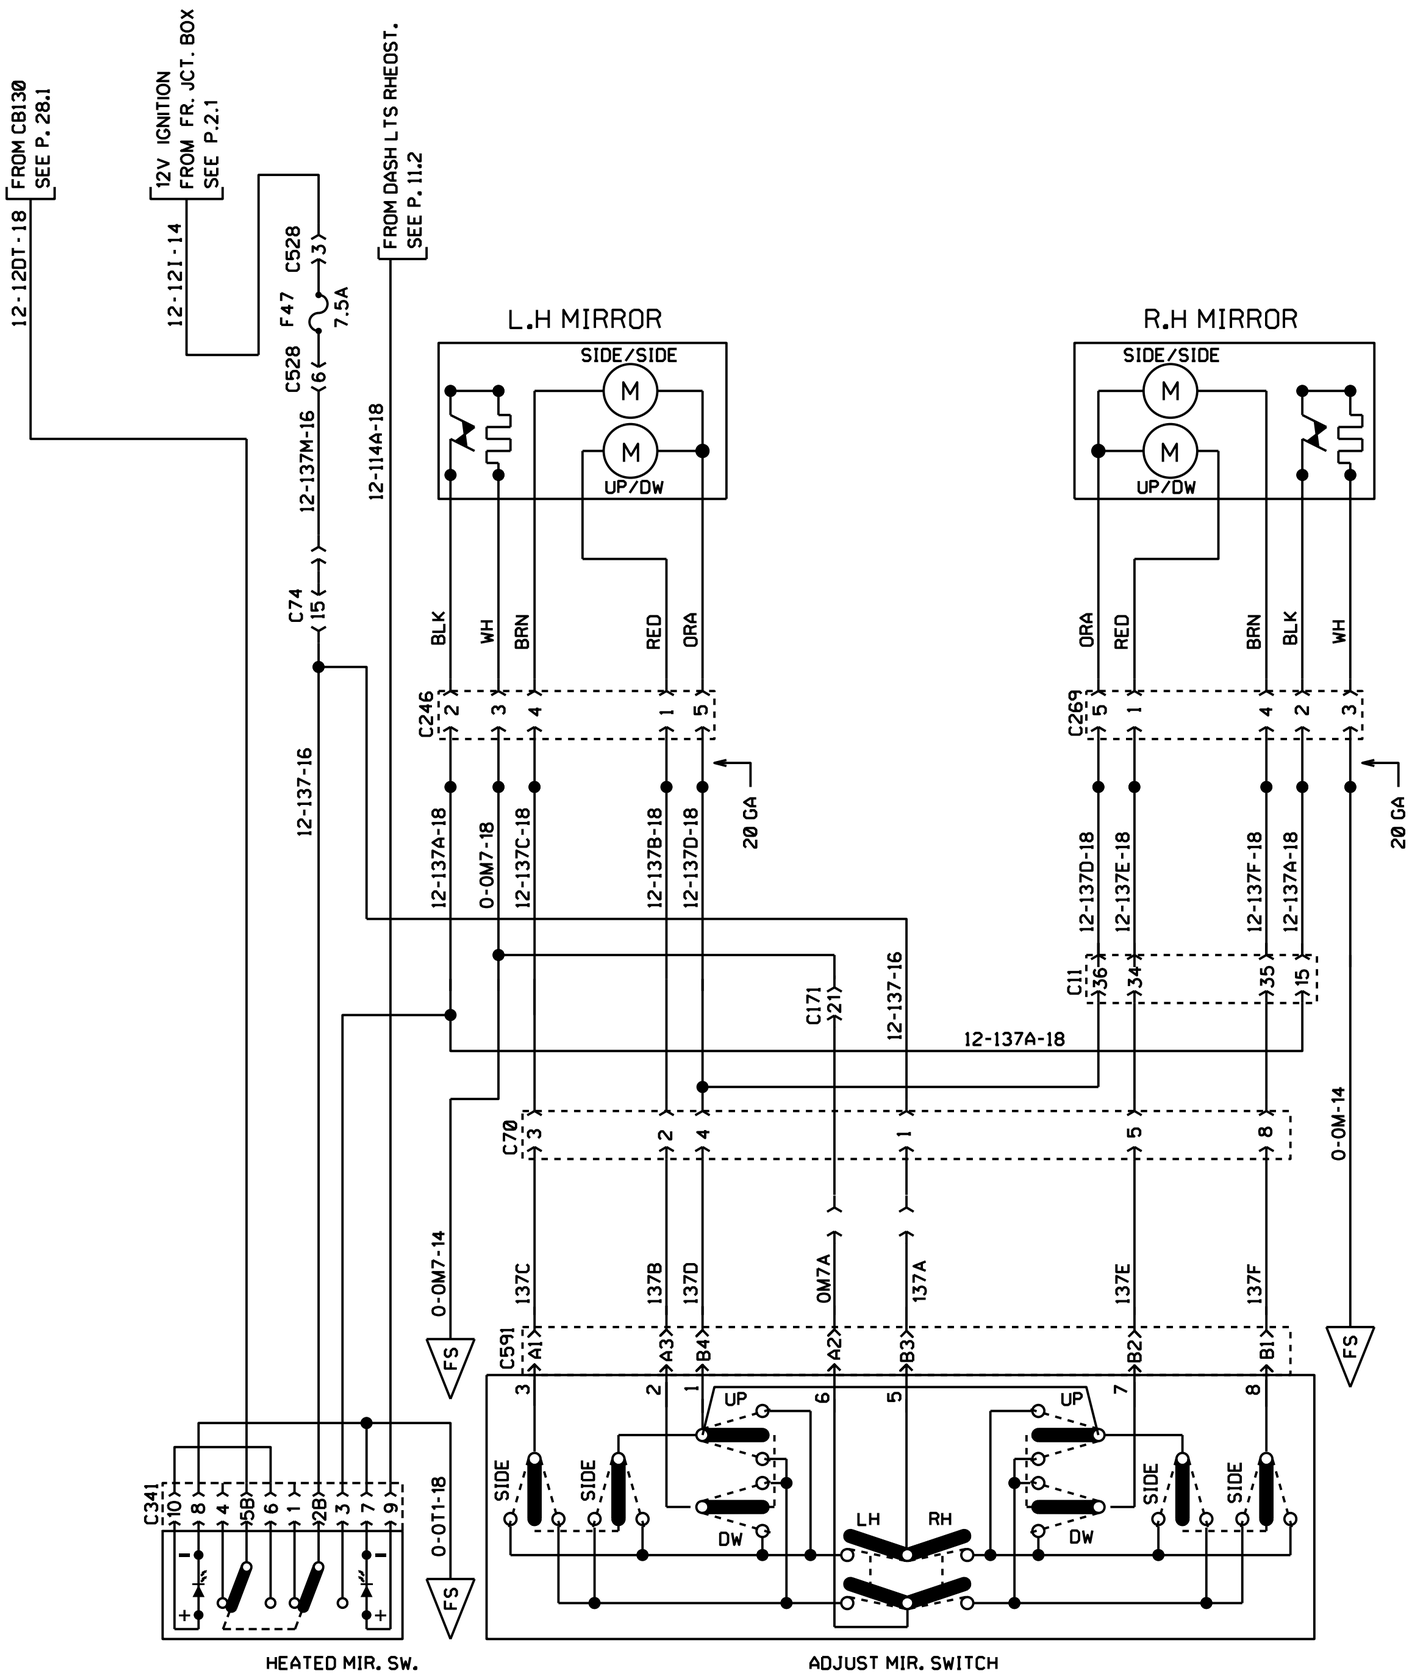

REAR VIEW MIRROR RAMCO FLAT - 1 ADJUSTMENT SW. & 1 HEATED SW.

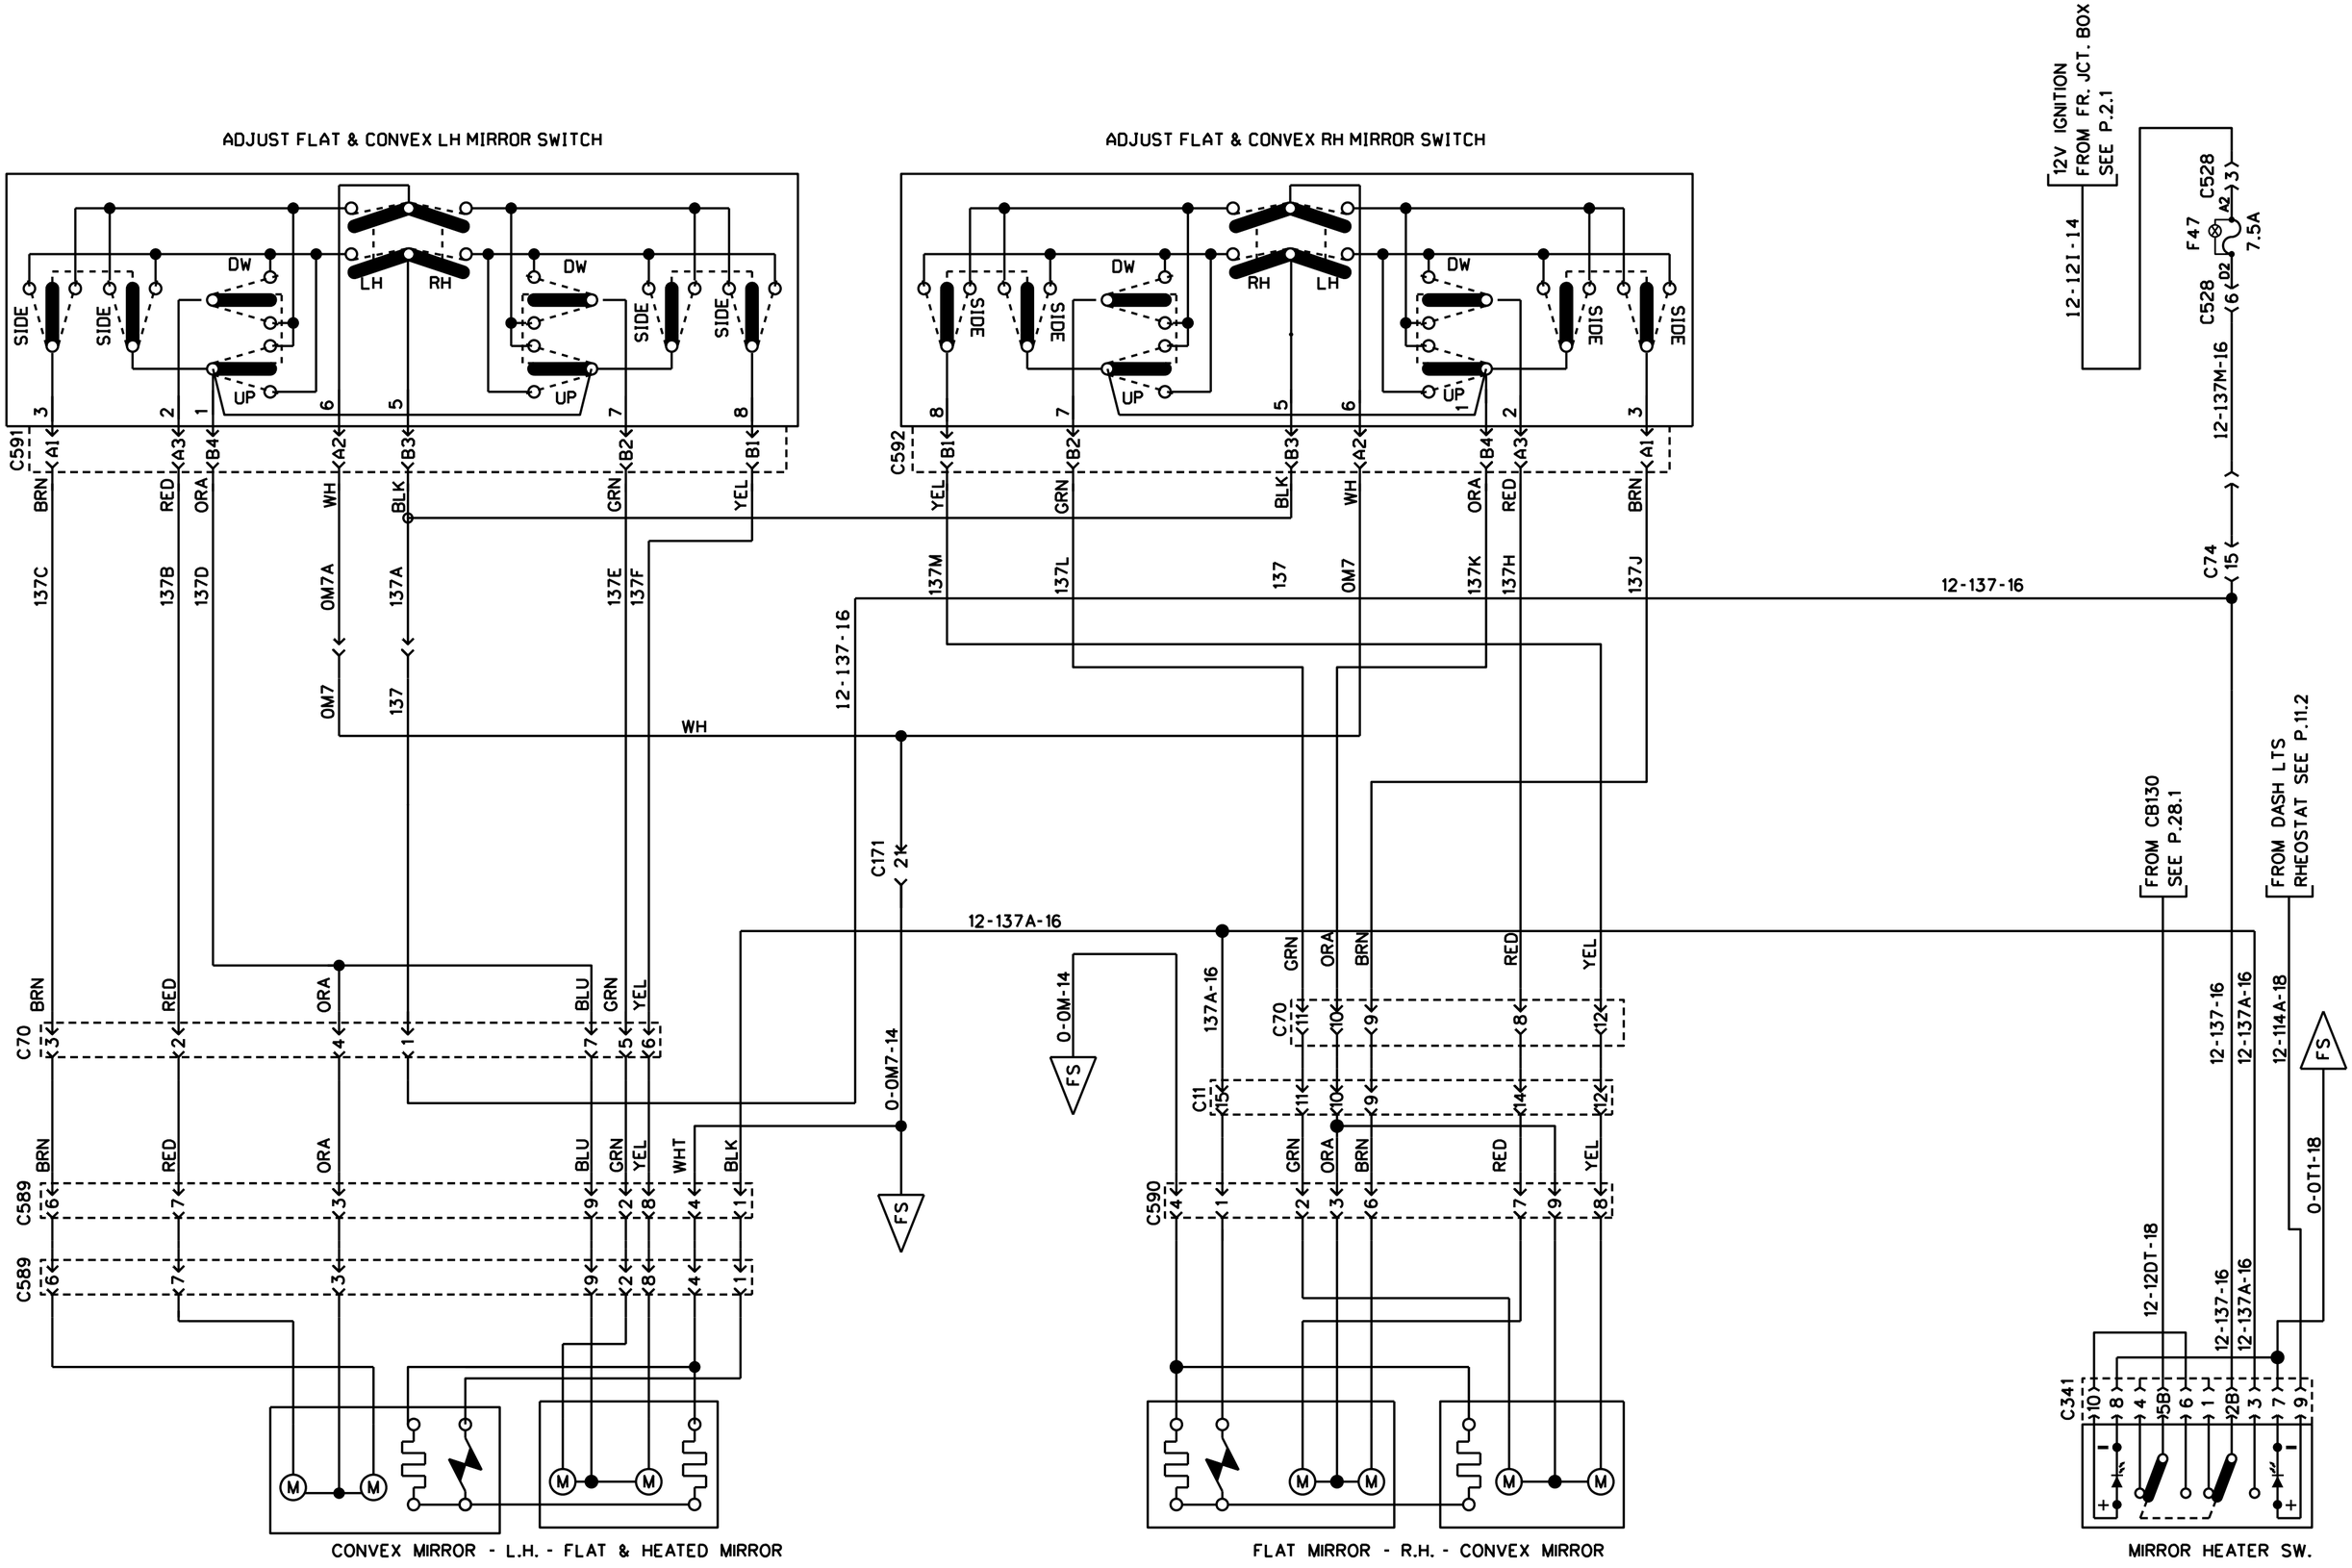

REAR VIEW MIRROR RAMCO FLAT & CONVEX - 2 ADJUSTMENT SW. & 1 HEATED SW.

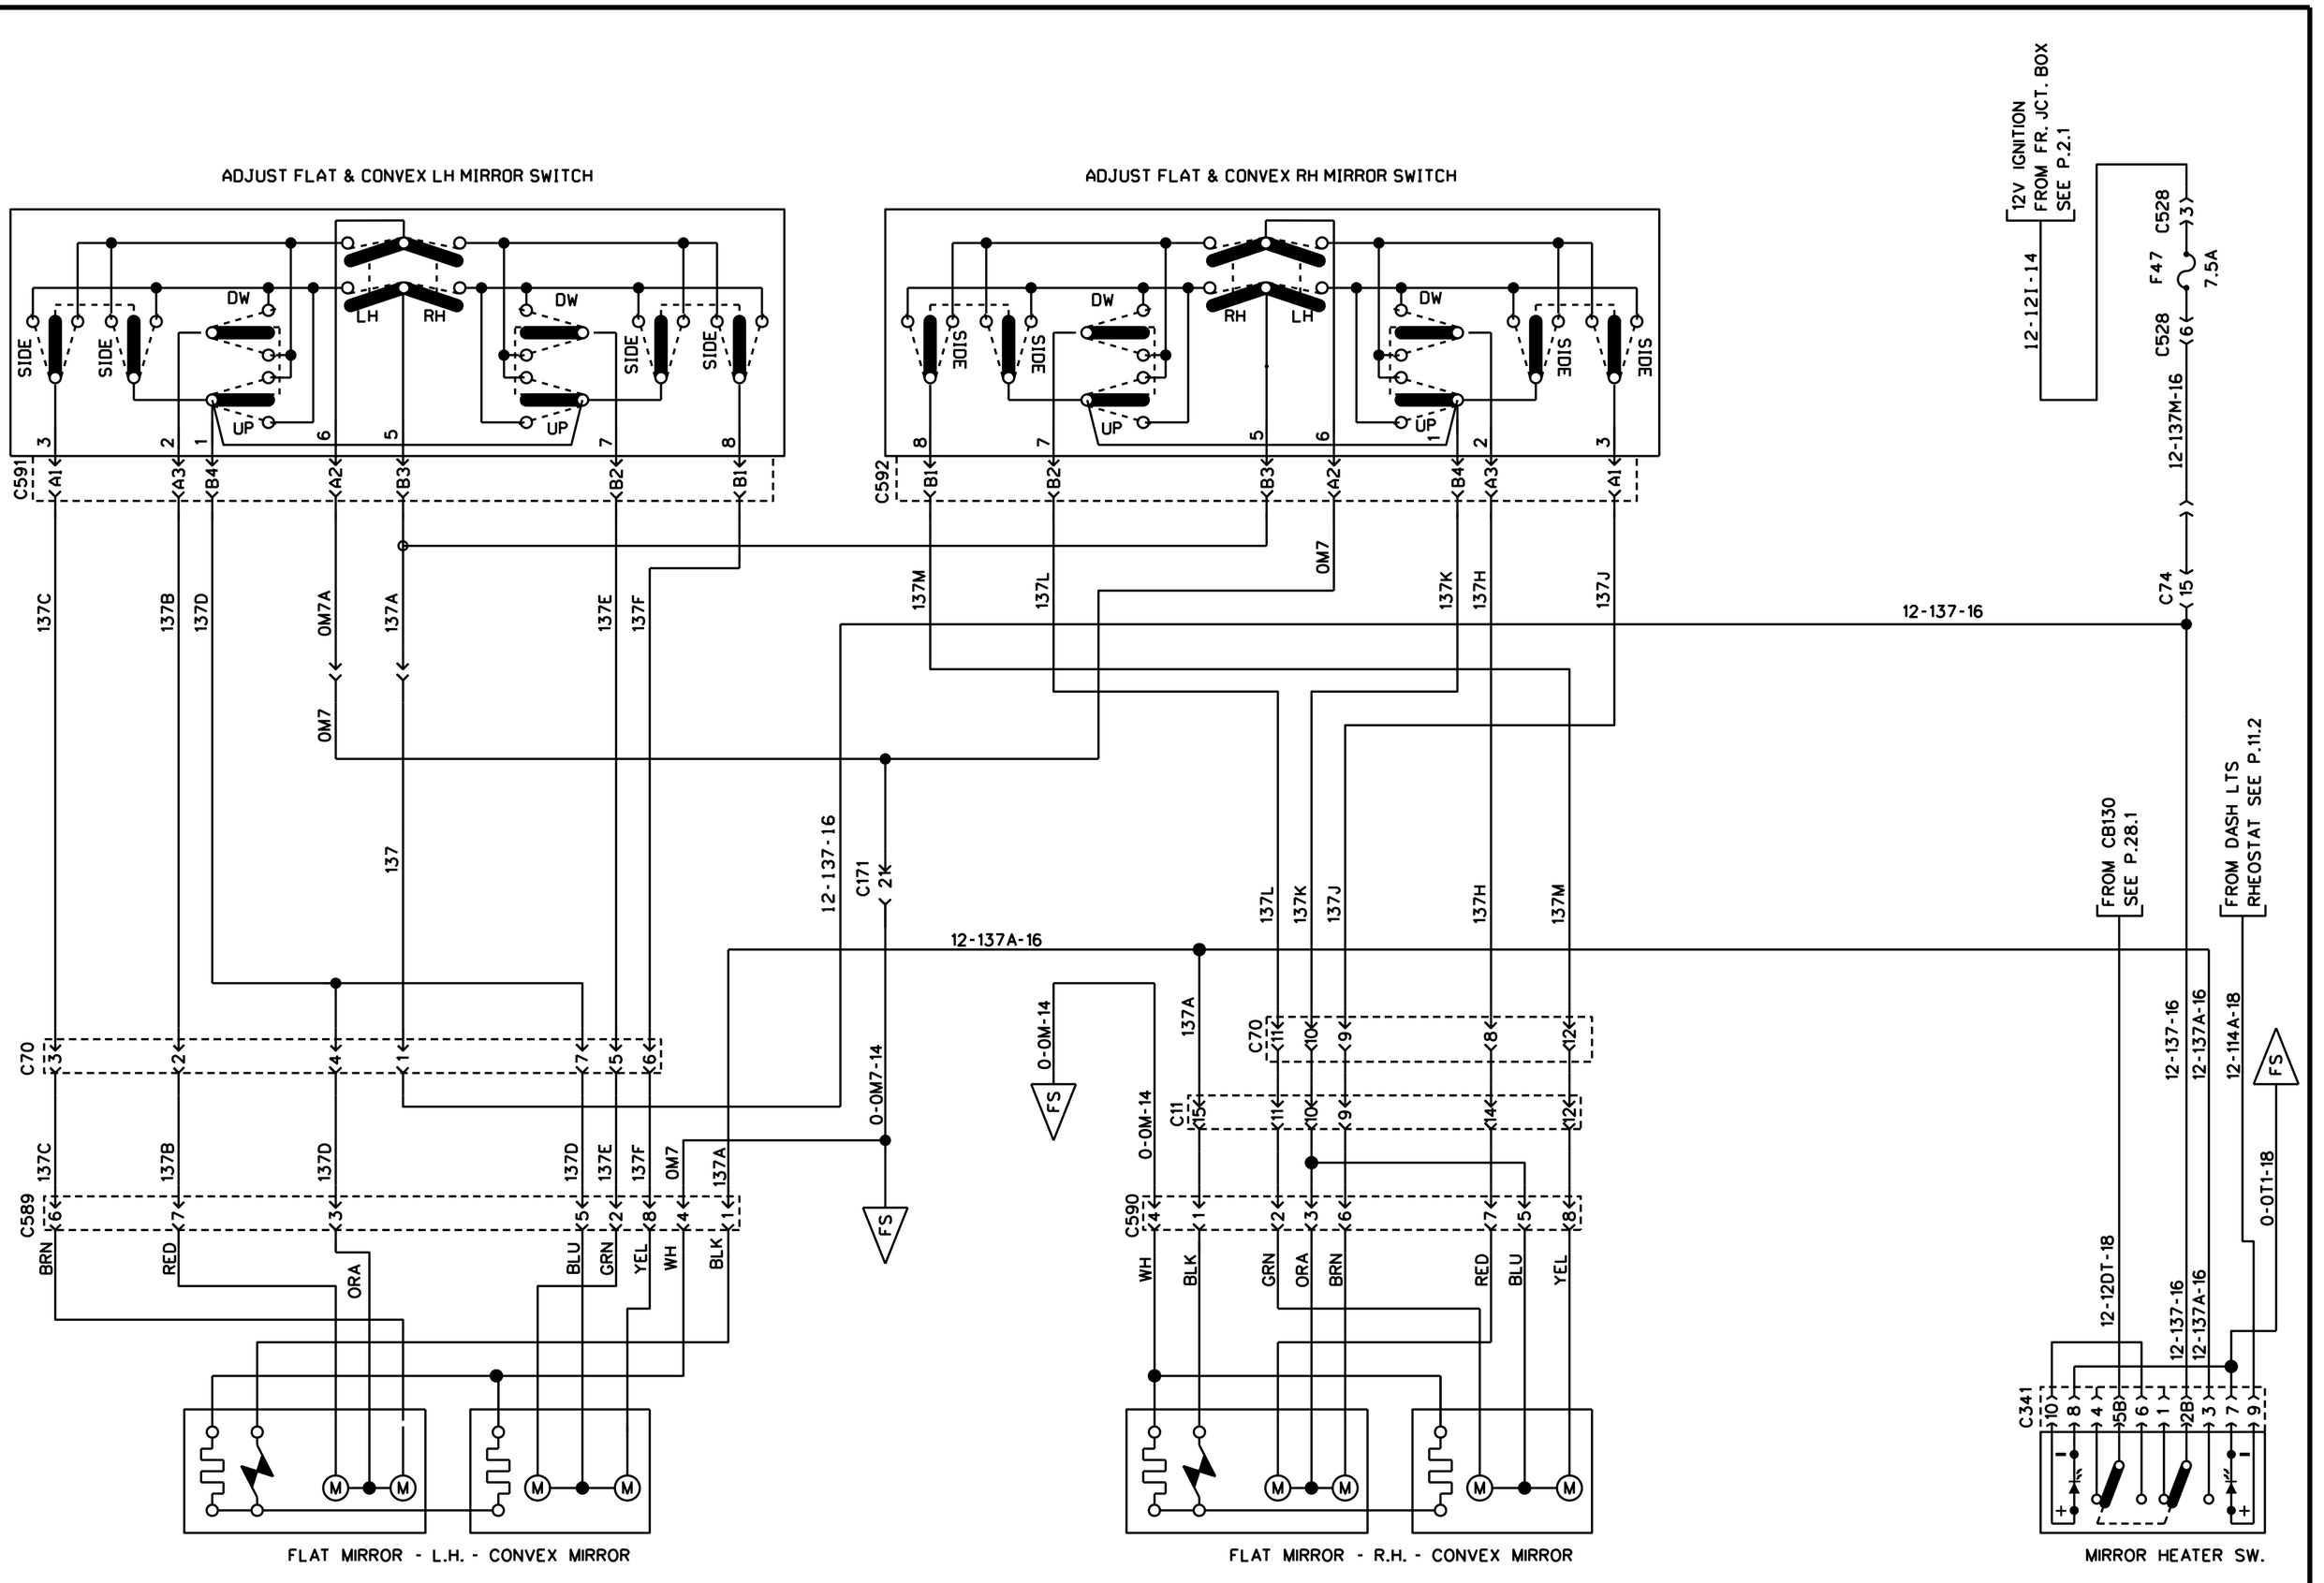

REAR VIEW MIRROR RAMCO FLAT & CONVEX - 2 ADJUSTMENT SW. & 1 HEATED SW.

PREVOST

W.C.L. SYSTEM STEWART & STEVENSON WIRING DIAGRAM

NO: D0609769

PAGE: 25.1

REVISION 00

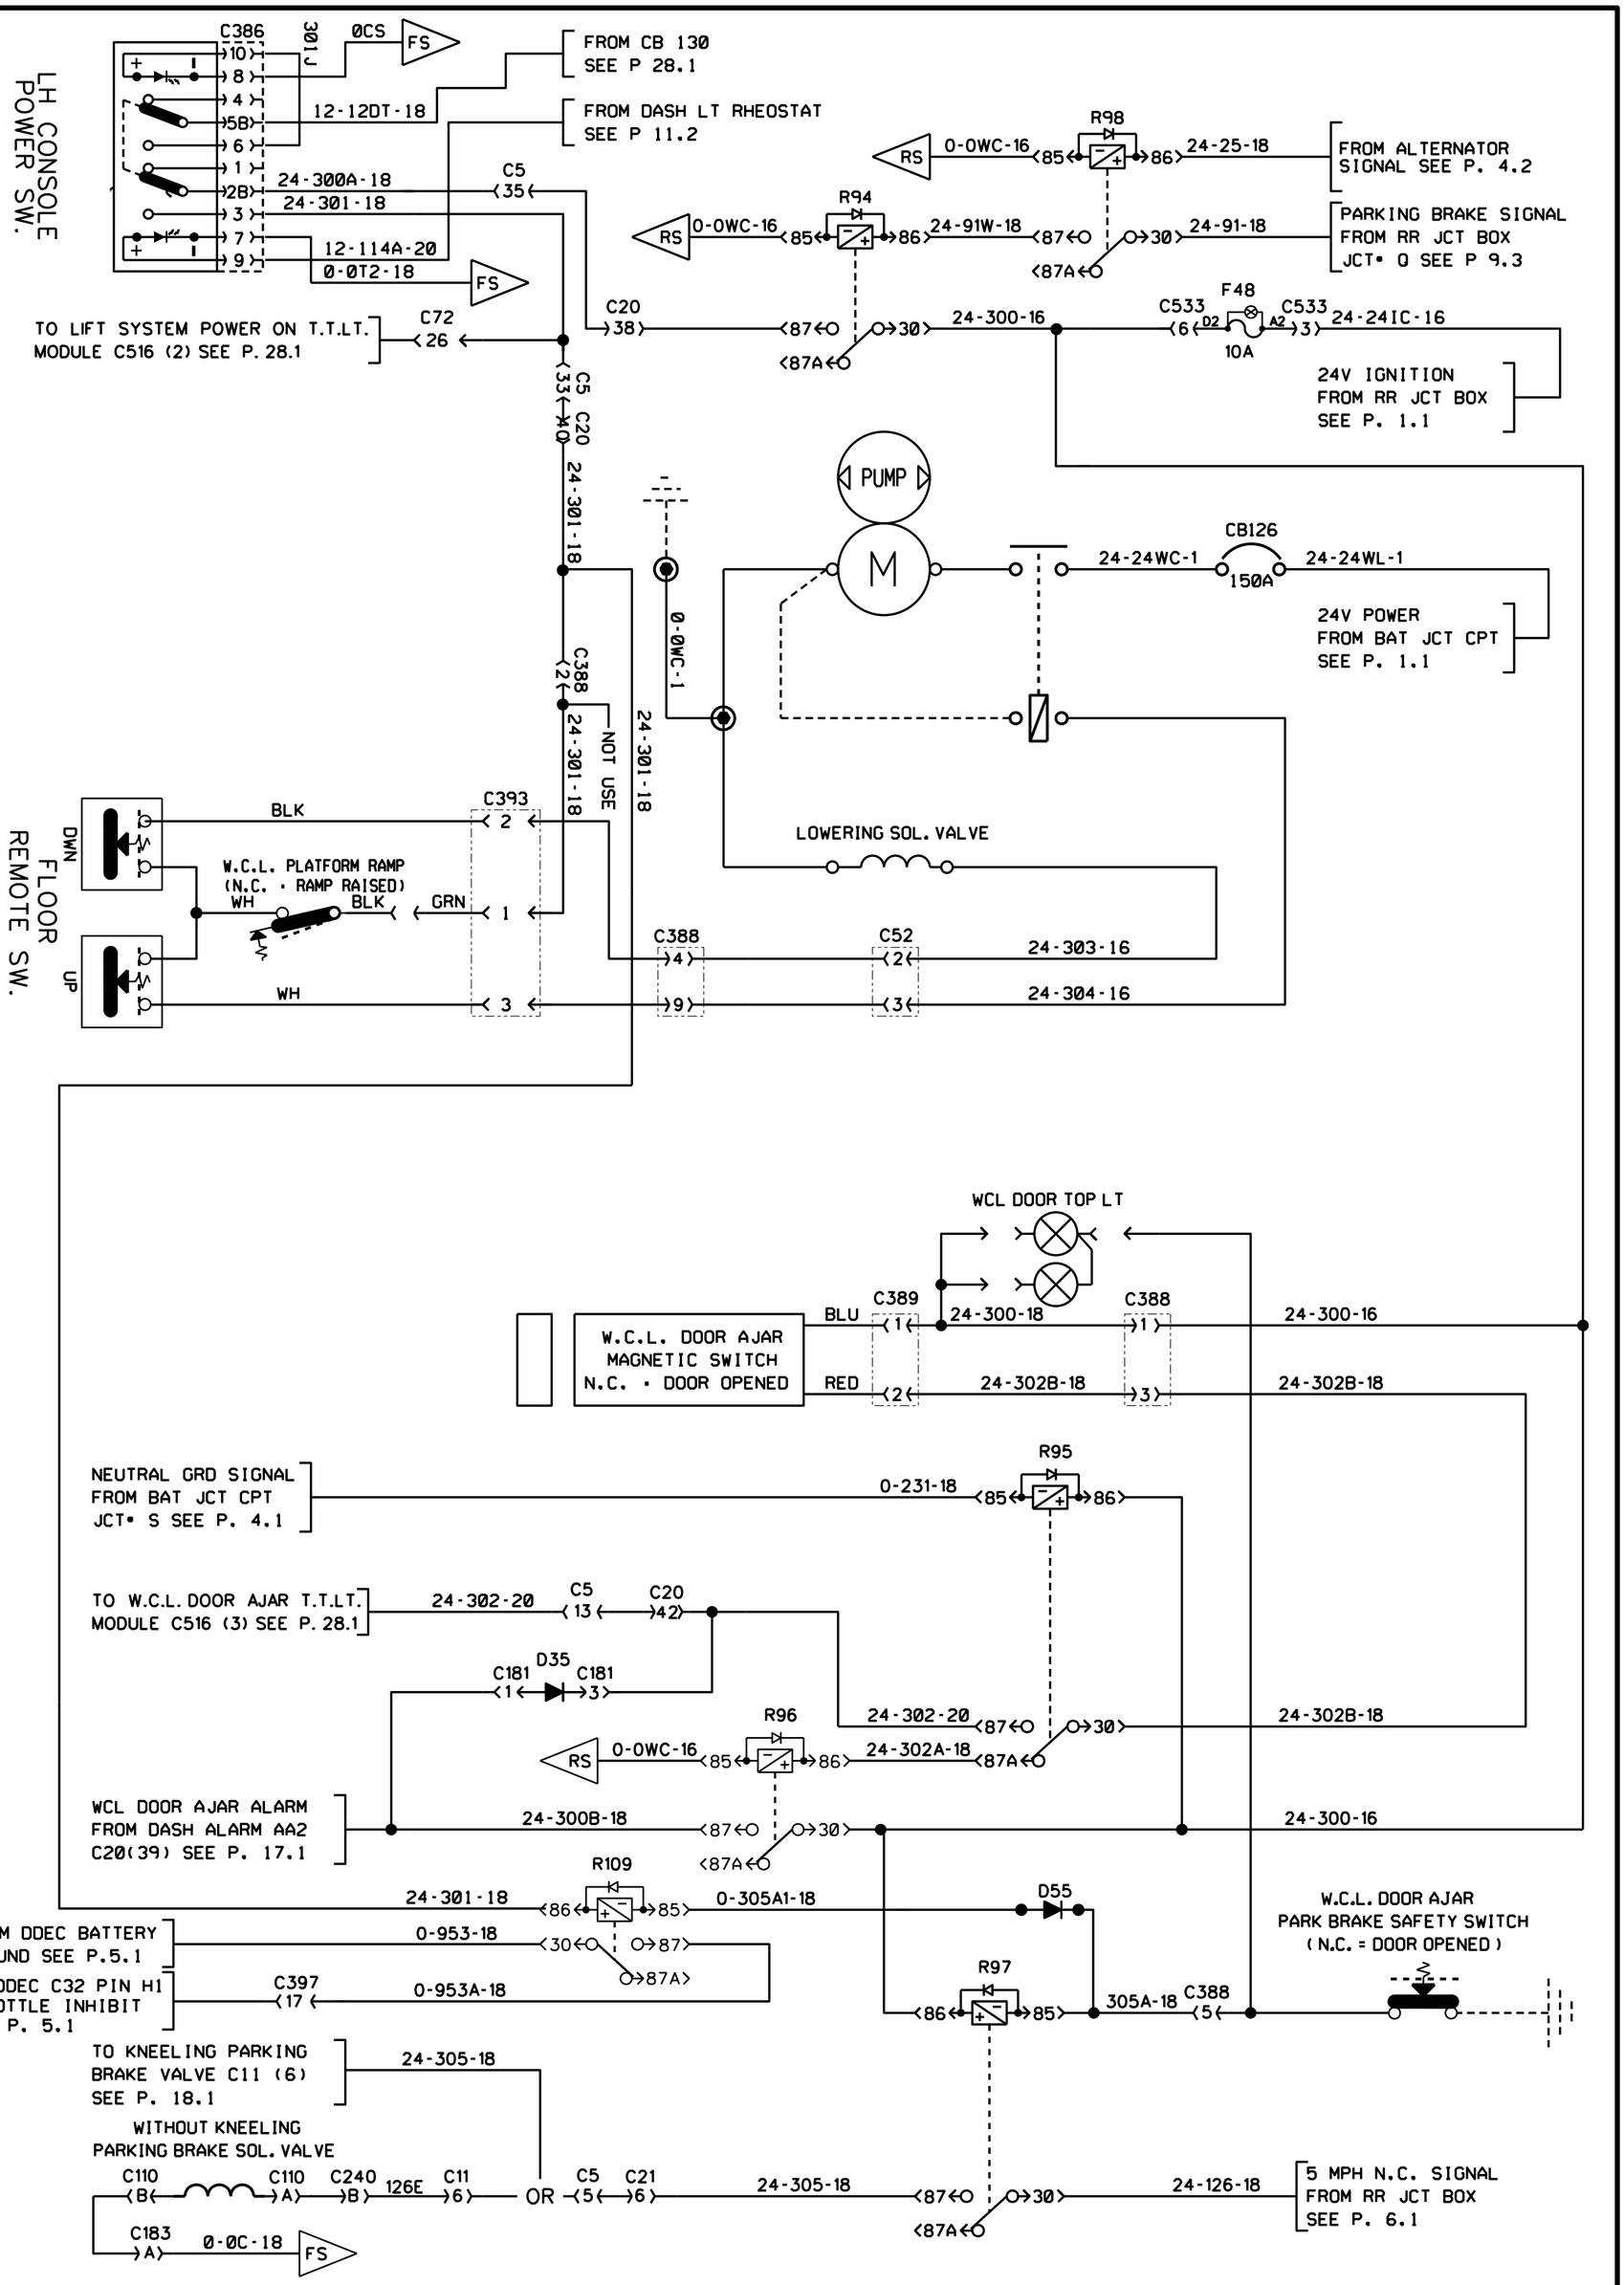

W.C.L. SYSTEM RICON F9T

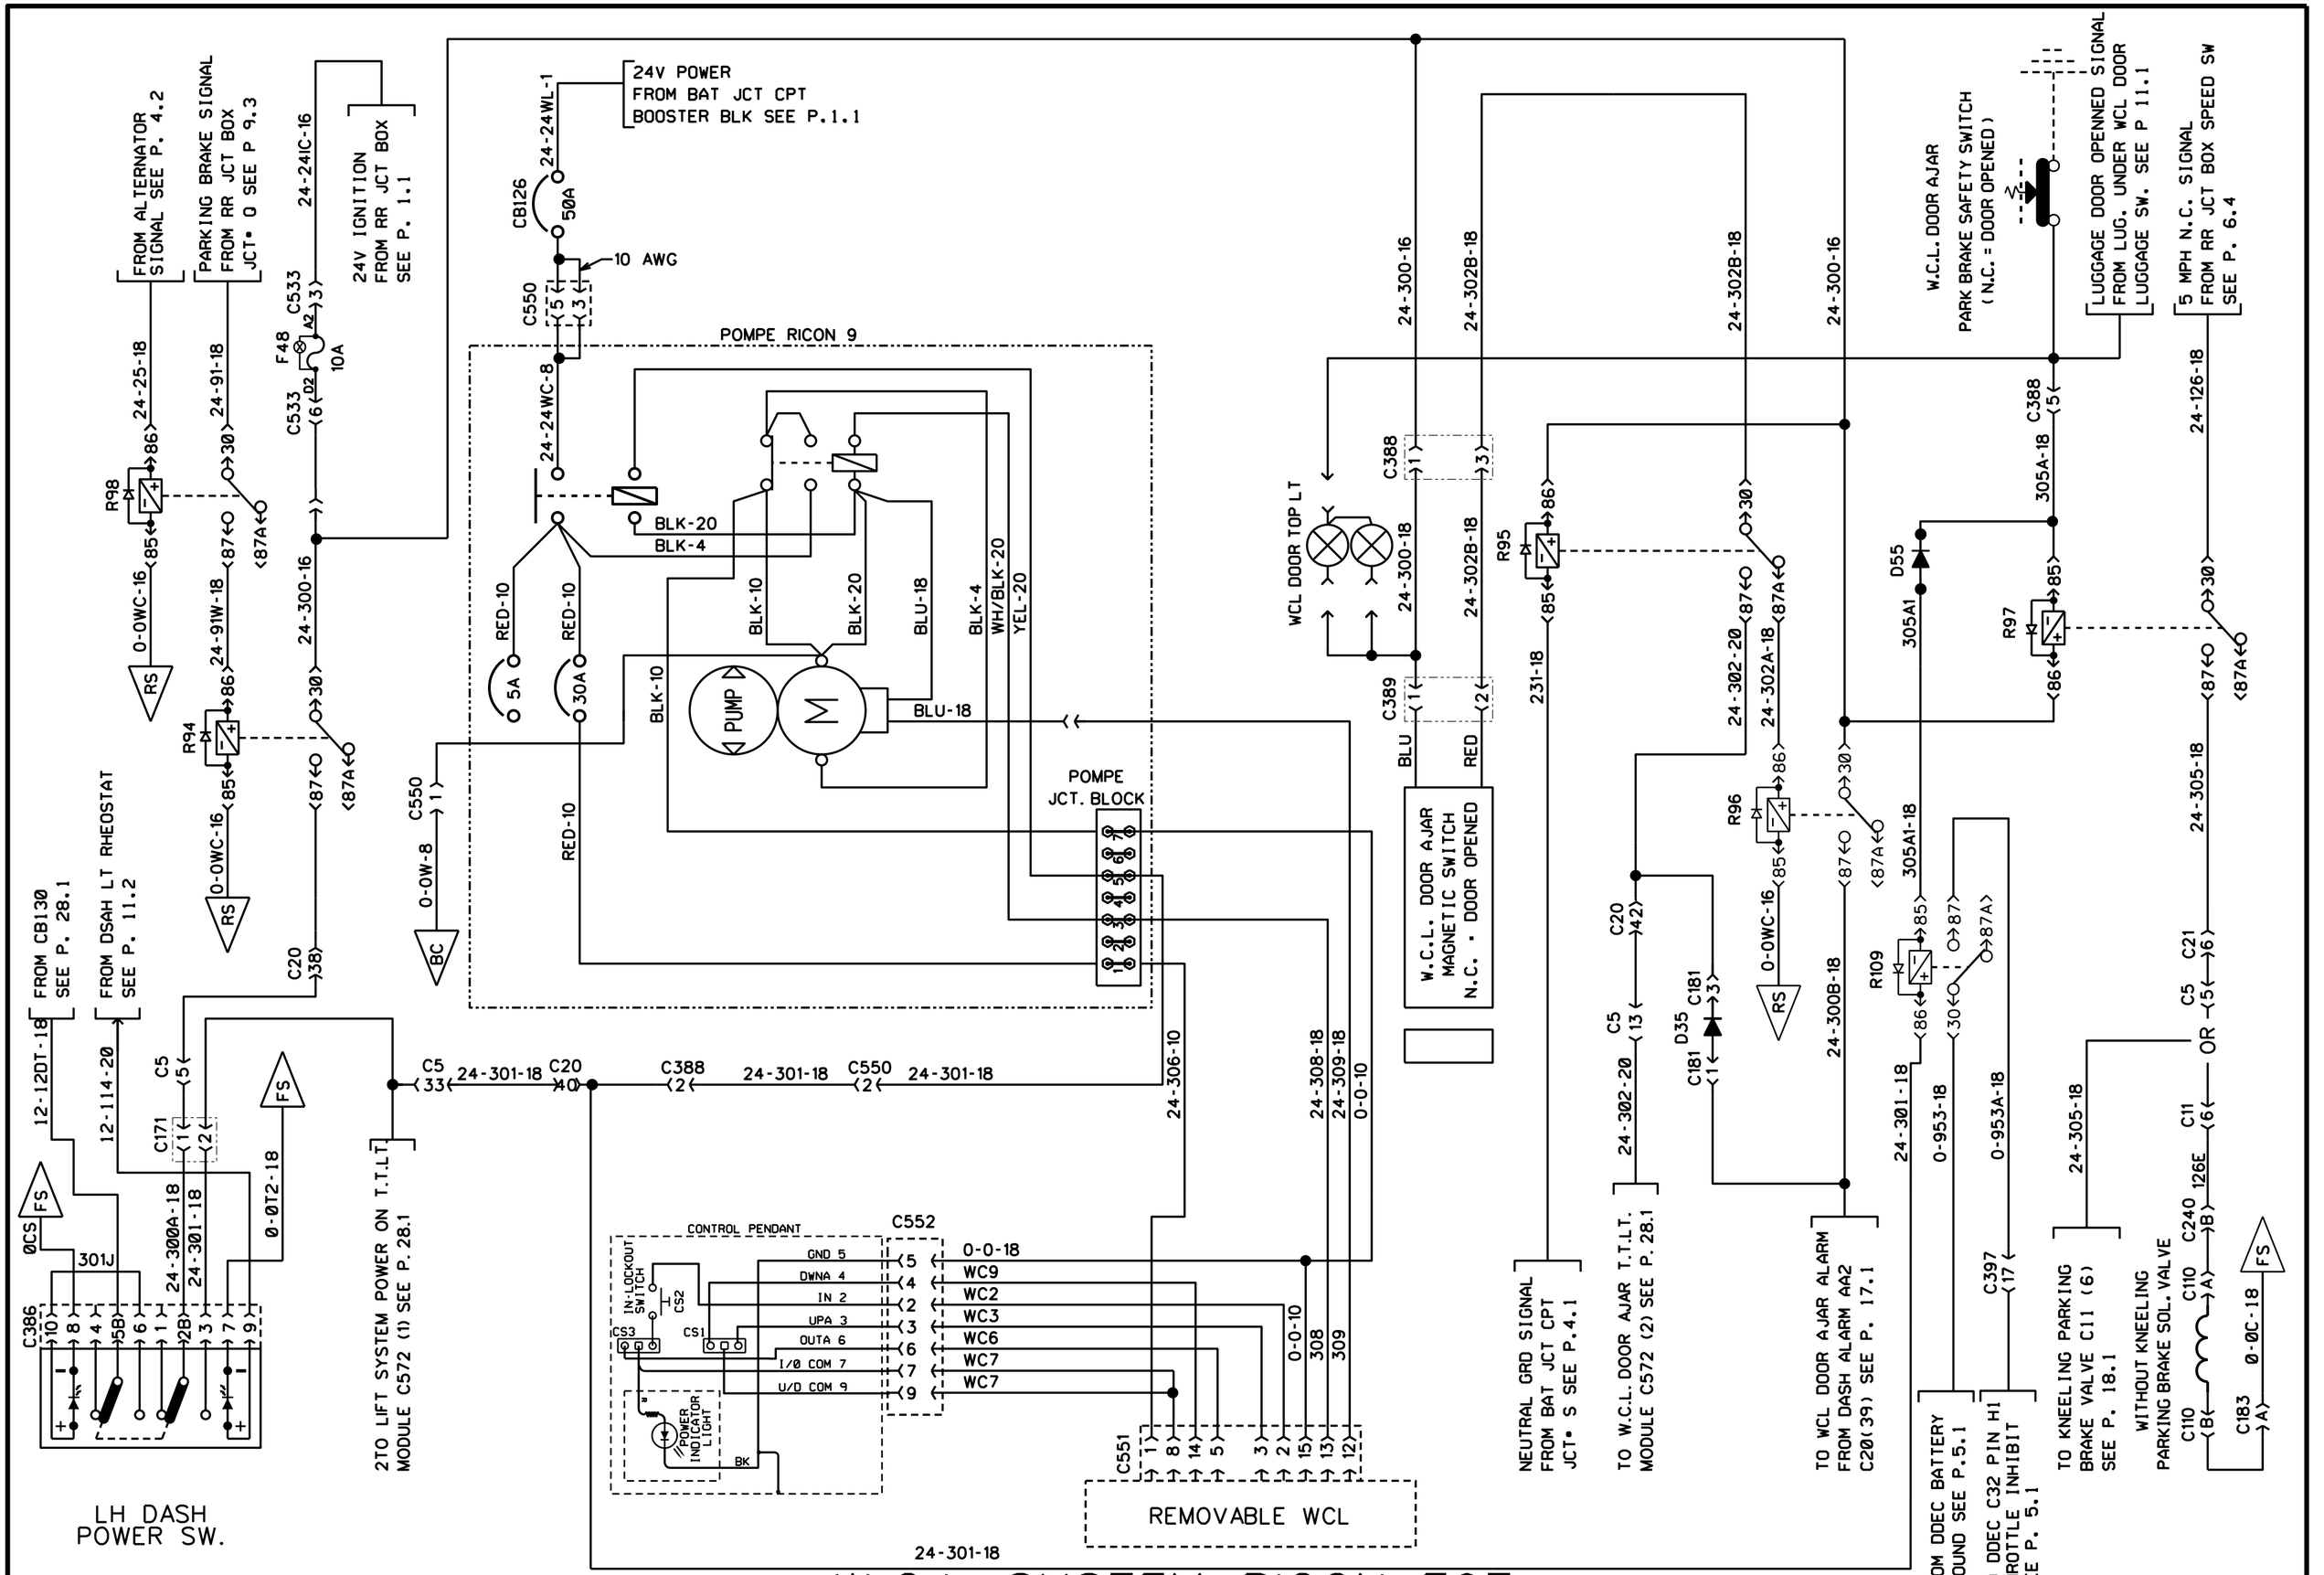

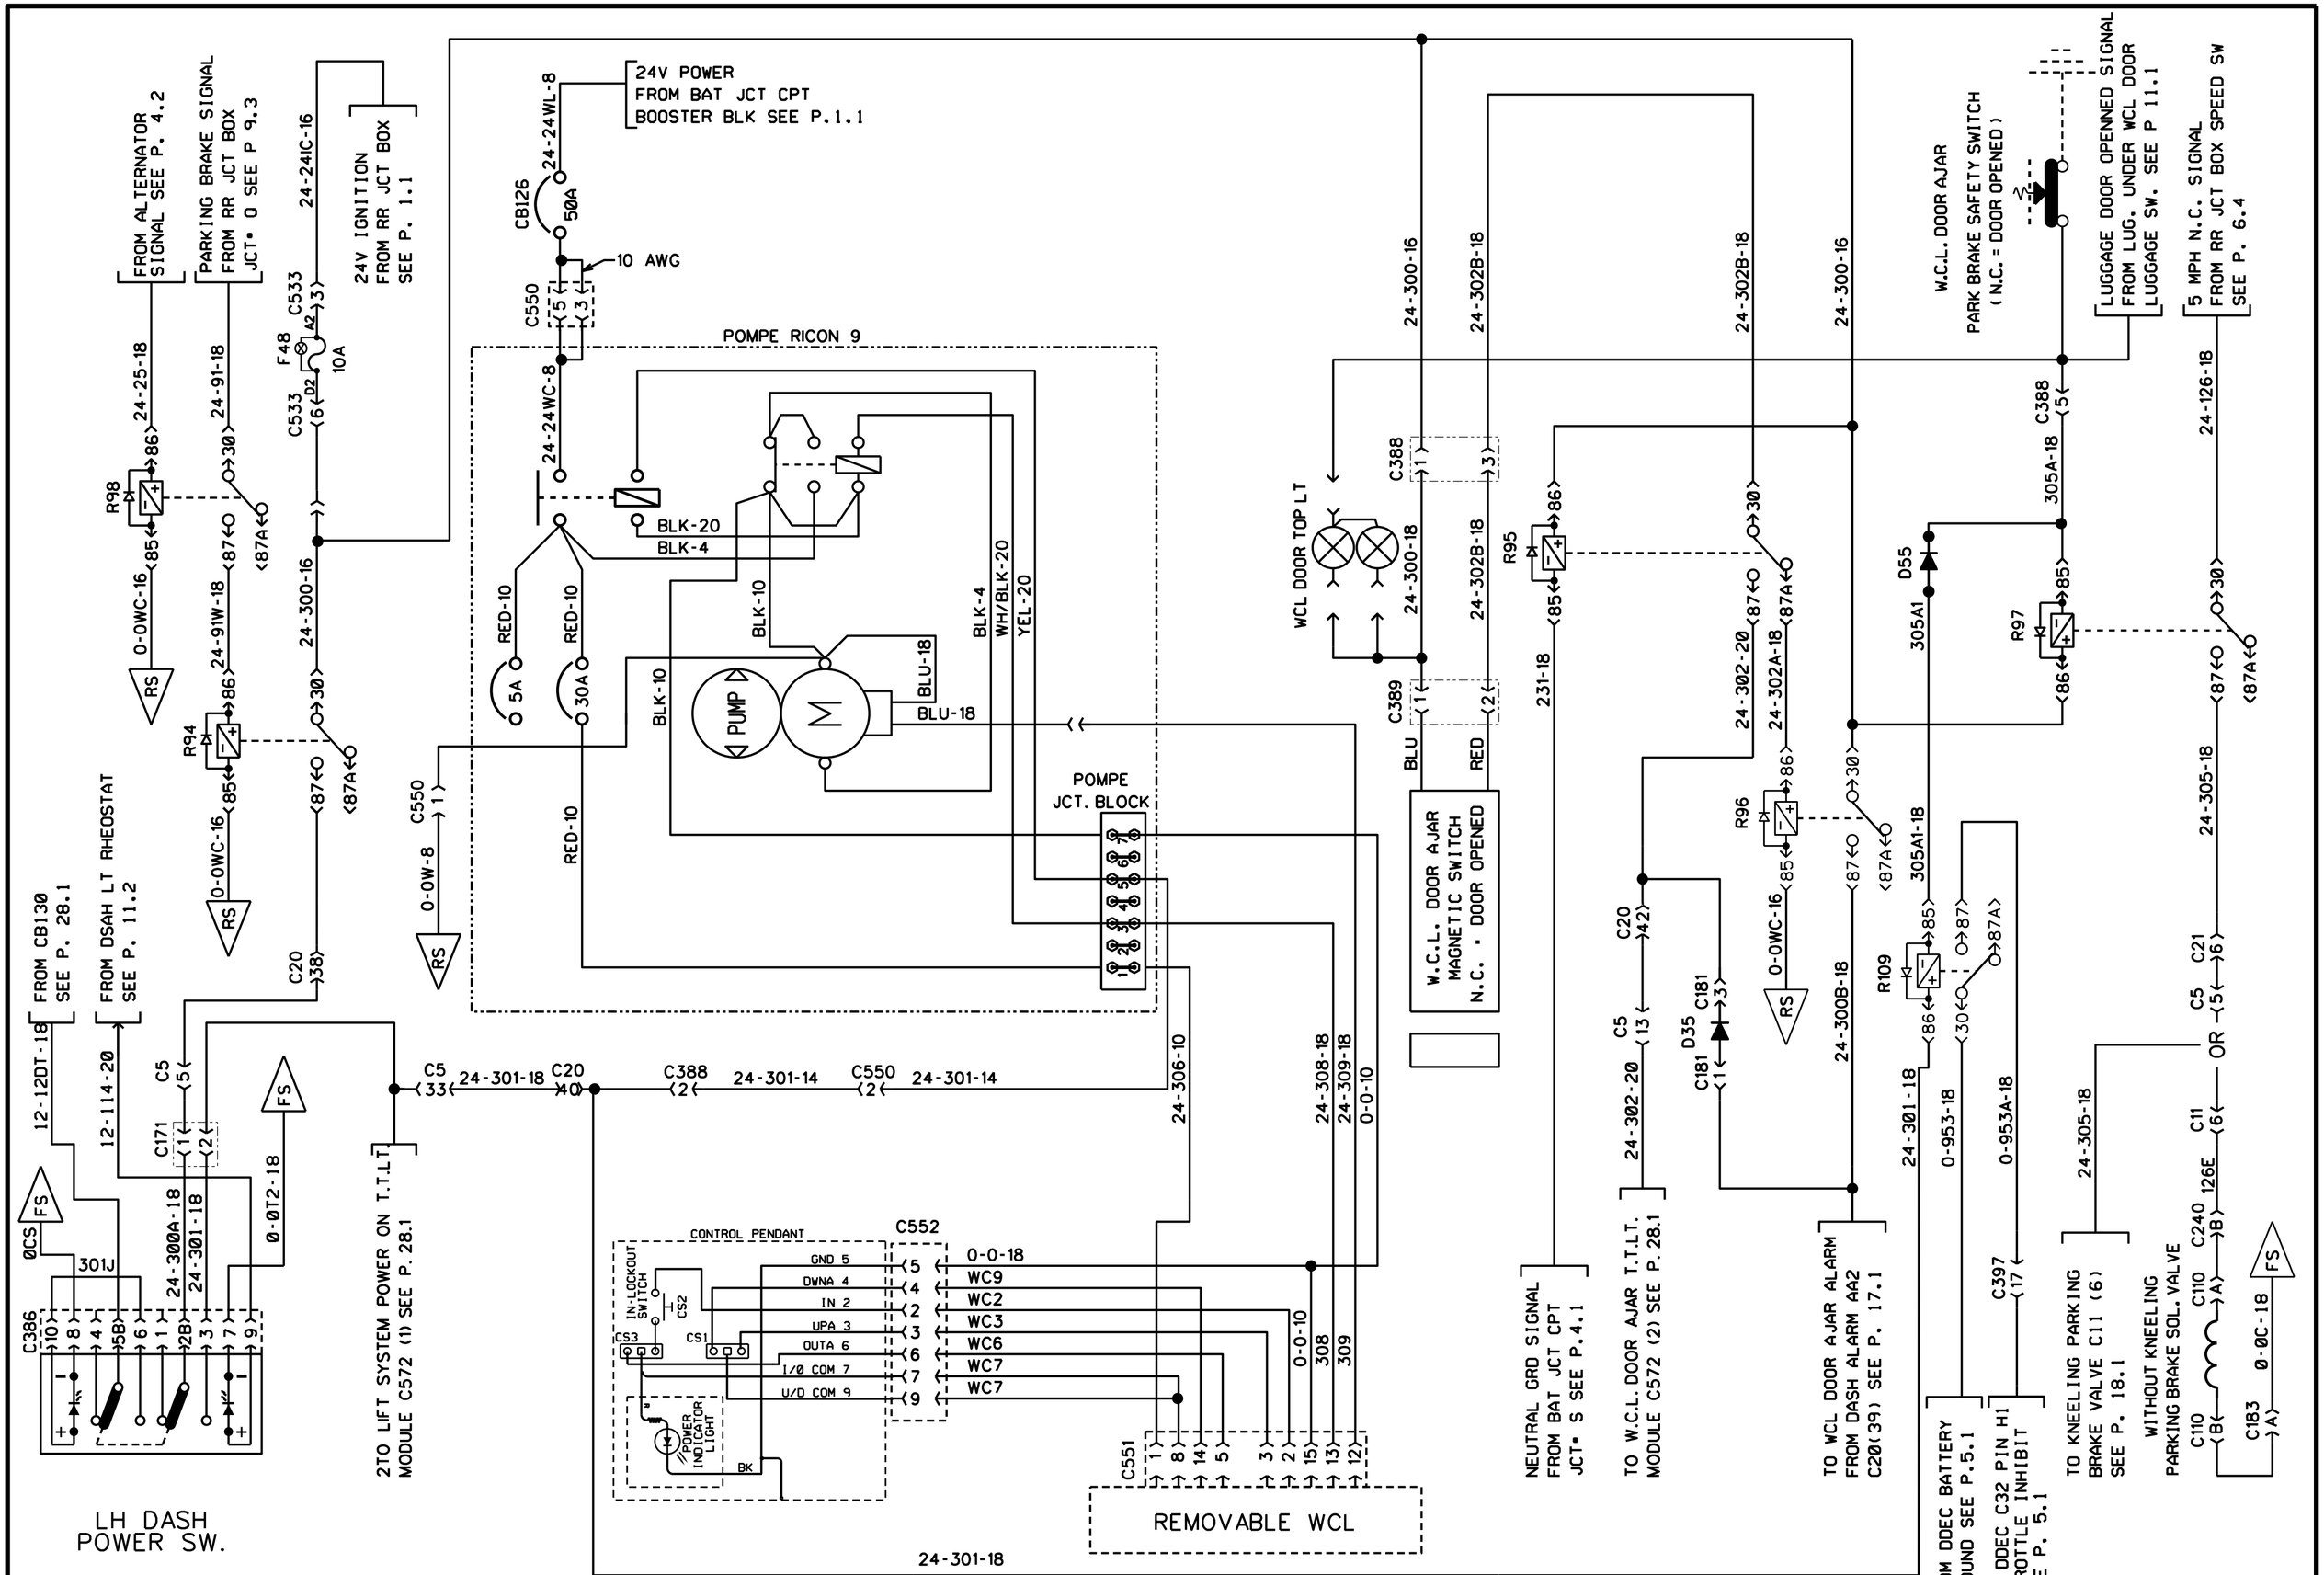

W.C.L. SYSTEM RICON F9T

W.C.L. SYSTEM RICON F9T

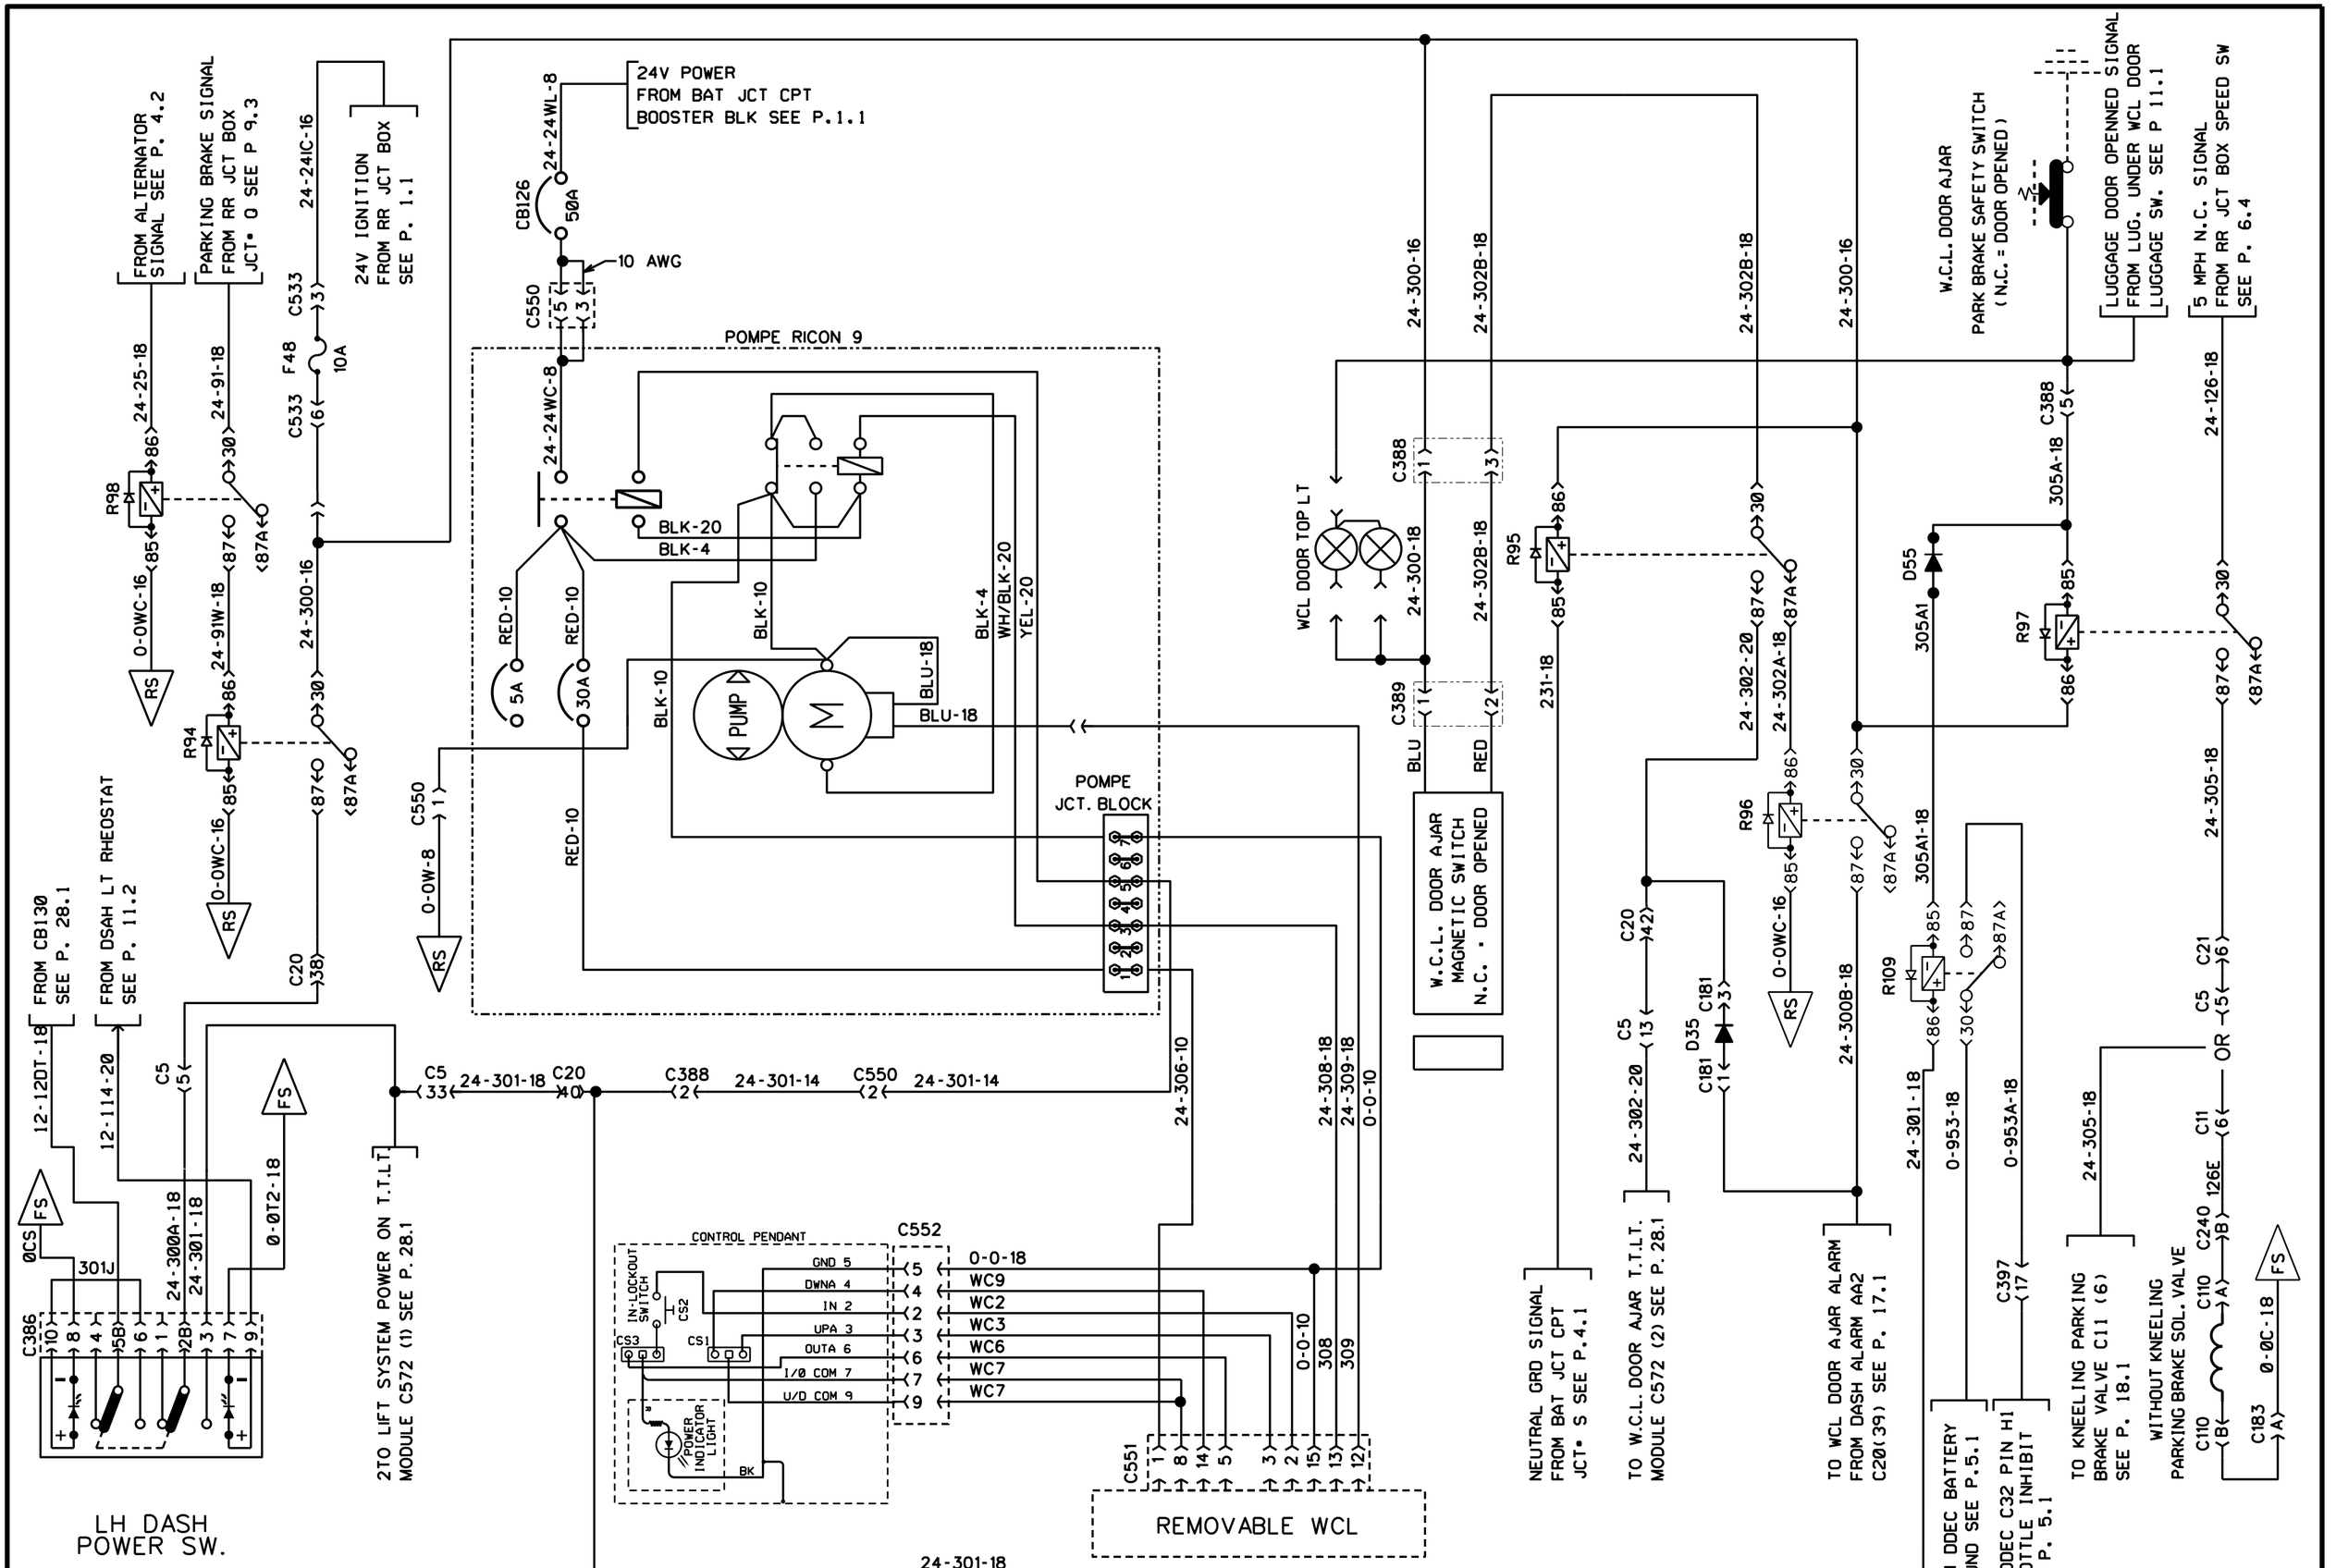

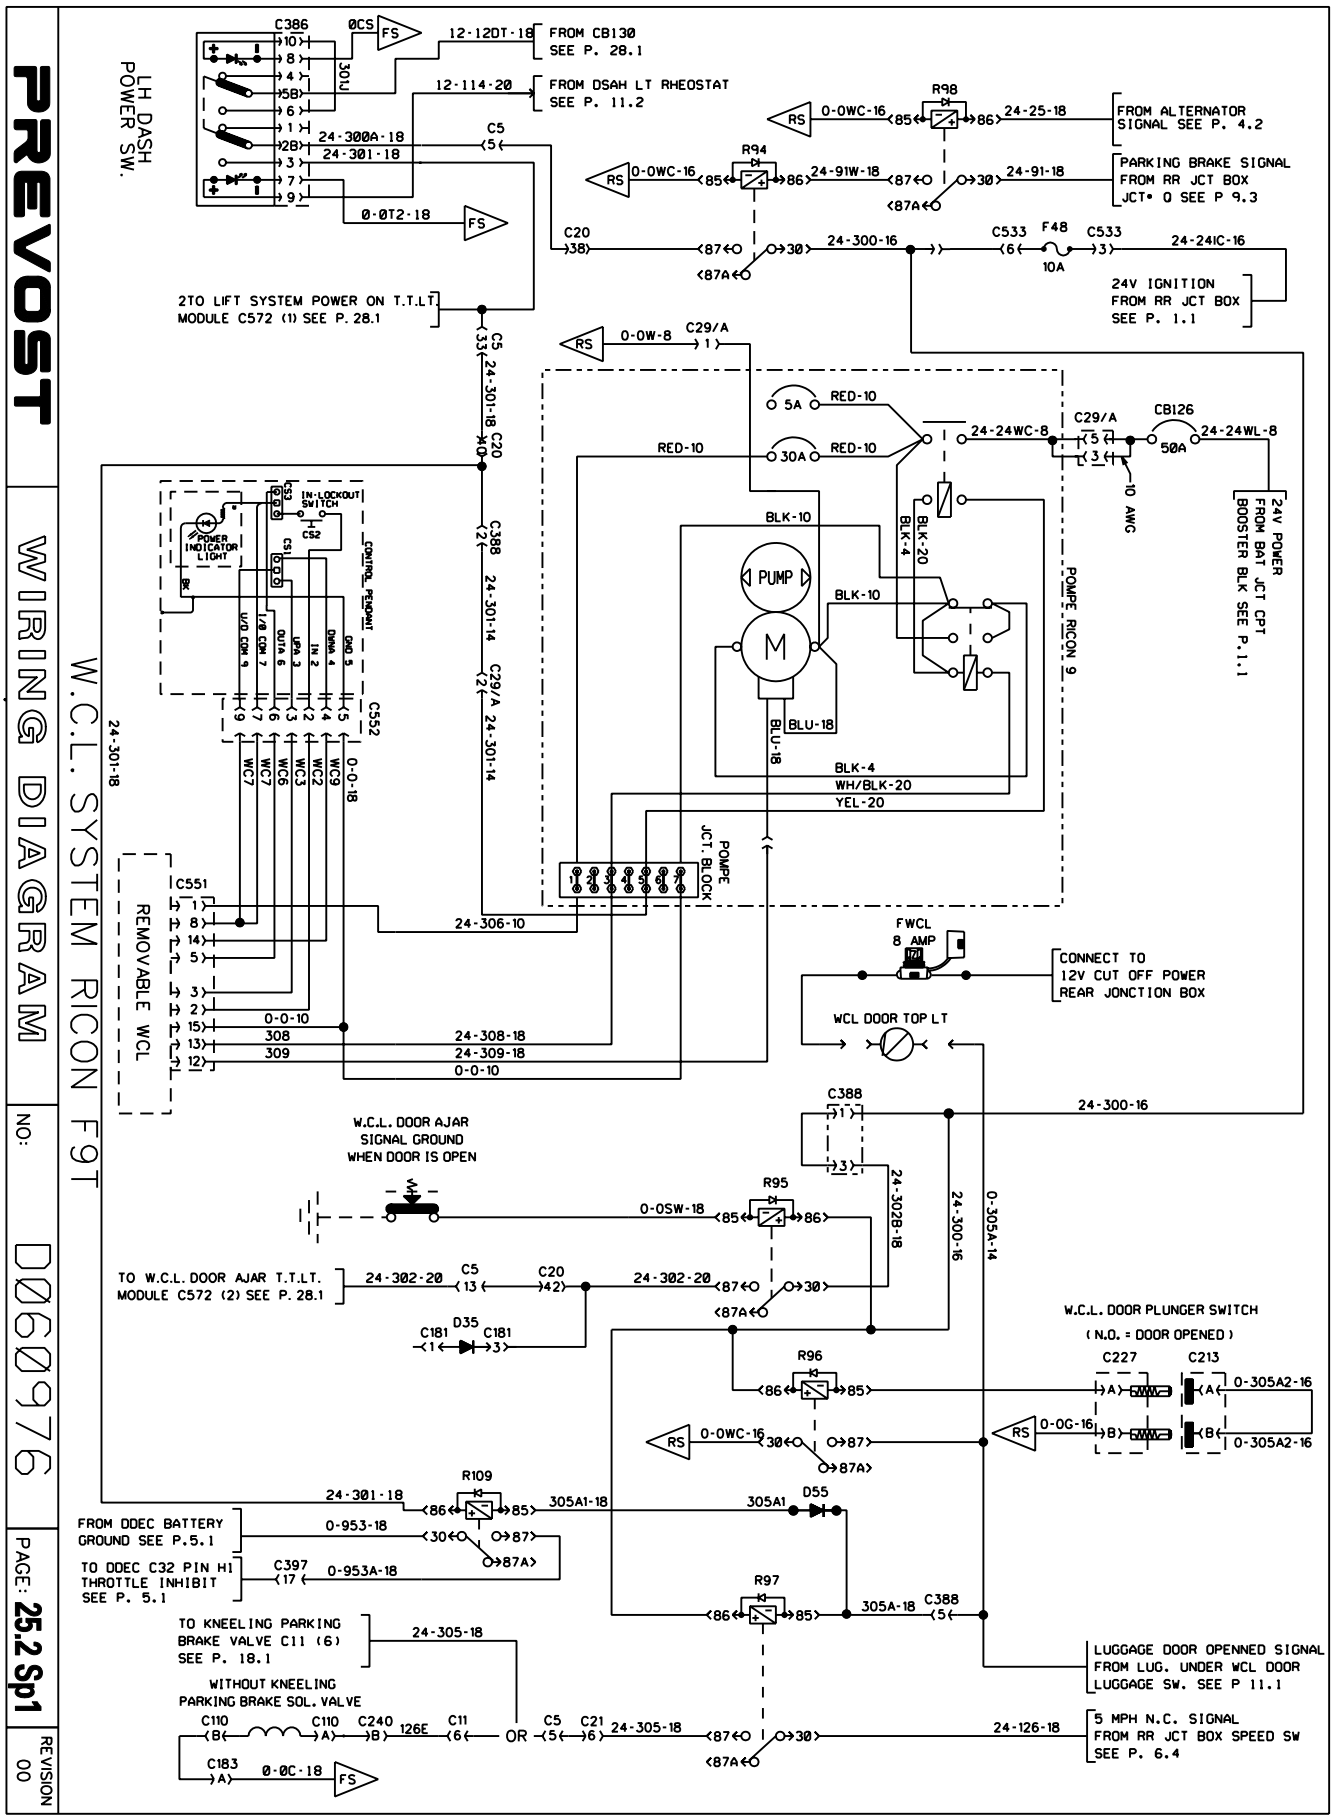

TRAVAIL A FAIRE LORS DU BRANCHEMENT DE LA NOUVELLE COUETTE ACCESSOIRE WCL DANS LA BOITE DE JONCTION ARRIERE.

-BRANCHER FIL 0SW (DOOR OPEN SIGNAL) SUR LA PIN 85 DE R95 A LA PALCE DU FIL 231. ELIMINER FIL 231.
-BRANCHER FUSIBLE FWCL SUR UN 12V COUTEAU BORNE D OU E.
-MODIFIER LE BRANCHEMENT DE R96 COMME SUIT:
1-ELIMINER LES FILS 302A PIN 86 ET 300B PIN 87.
2-PRENDRE LE FIL 300 QUI EST DANS LA PIN 30 ET LE BRANCHER A LA PIN 86.
3-PRENDRE LE FIL 0WC QUI EST DANS LA PIN 85 ET LE BRANCHER A LA PIN 30.
4-PRENDRE LE FIL 305A DE LA NOUVELLE COUETTE ACCESSOIRE WCL ET LE BRANCHER A LA PIN 87.
4-PRENDRE LE FIL 305A2 DE LA NOUVELLE COUETTE ACCESSOIRE WCL ET LE BRANCHER A LA PIN 85.

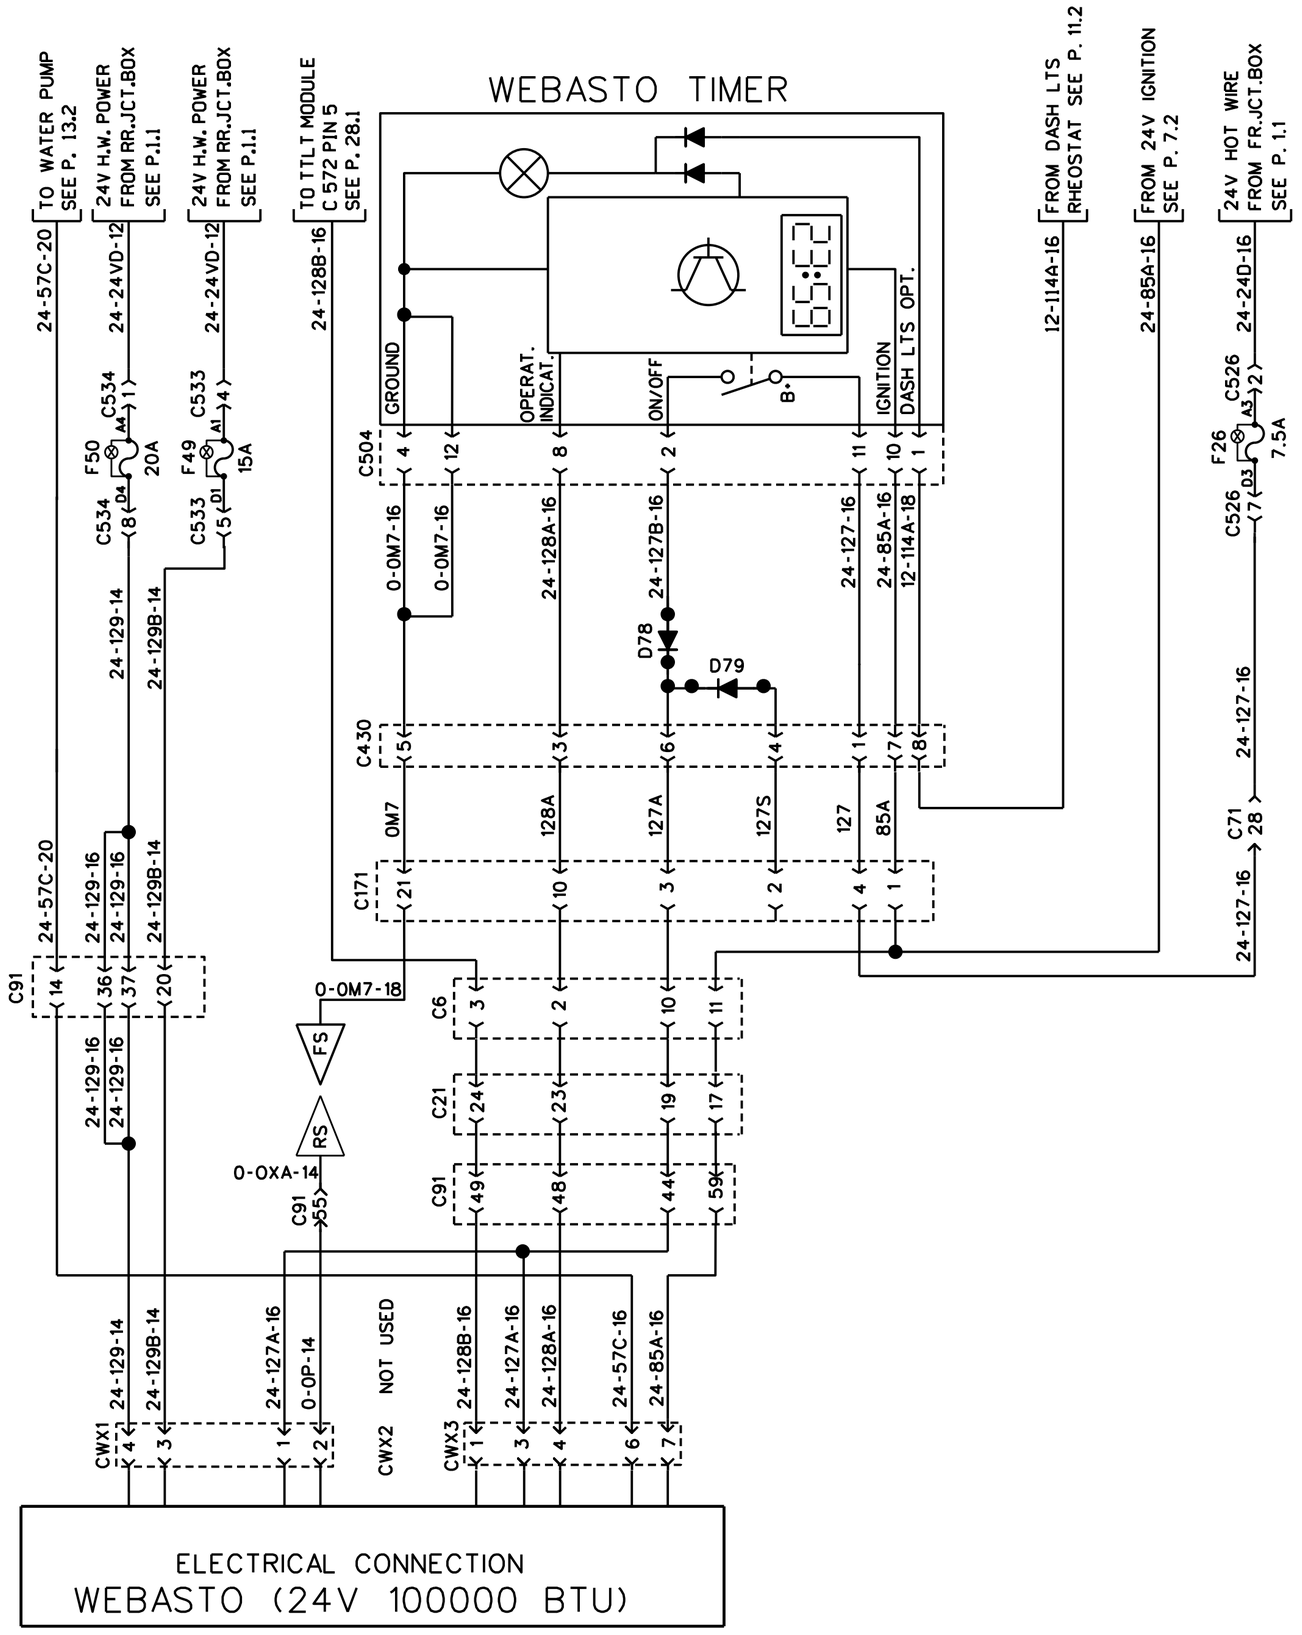

PRE-HEAT WATER HEATER (WEBASTO THERMO 300)

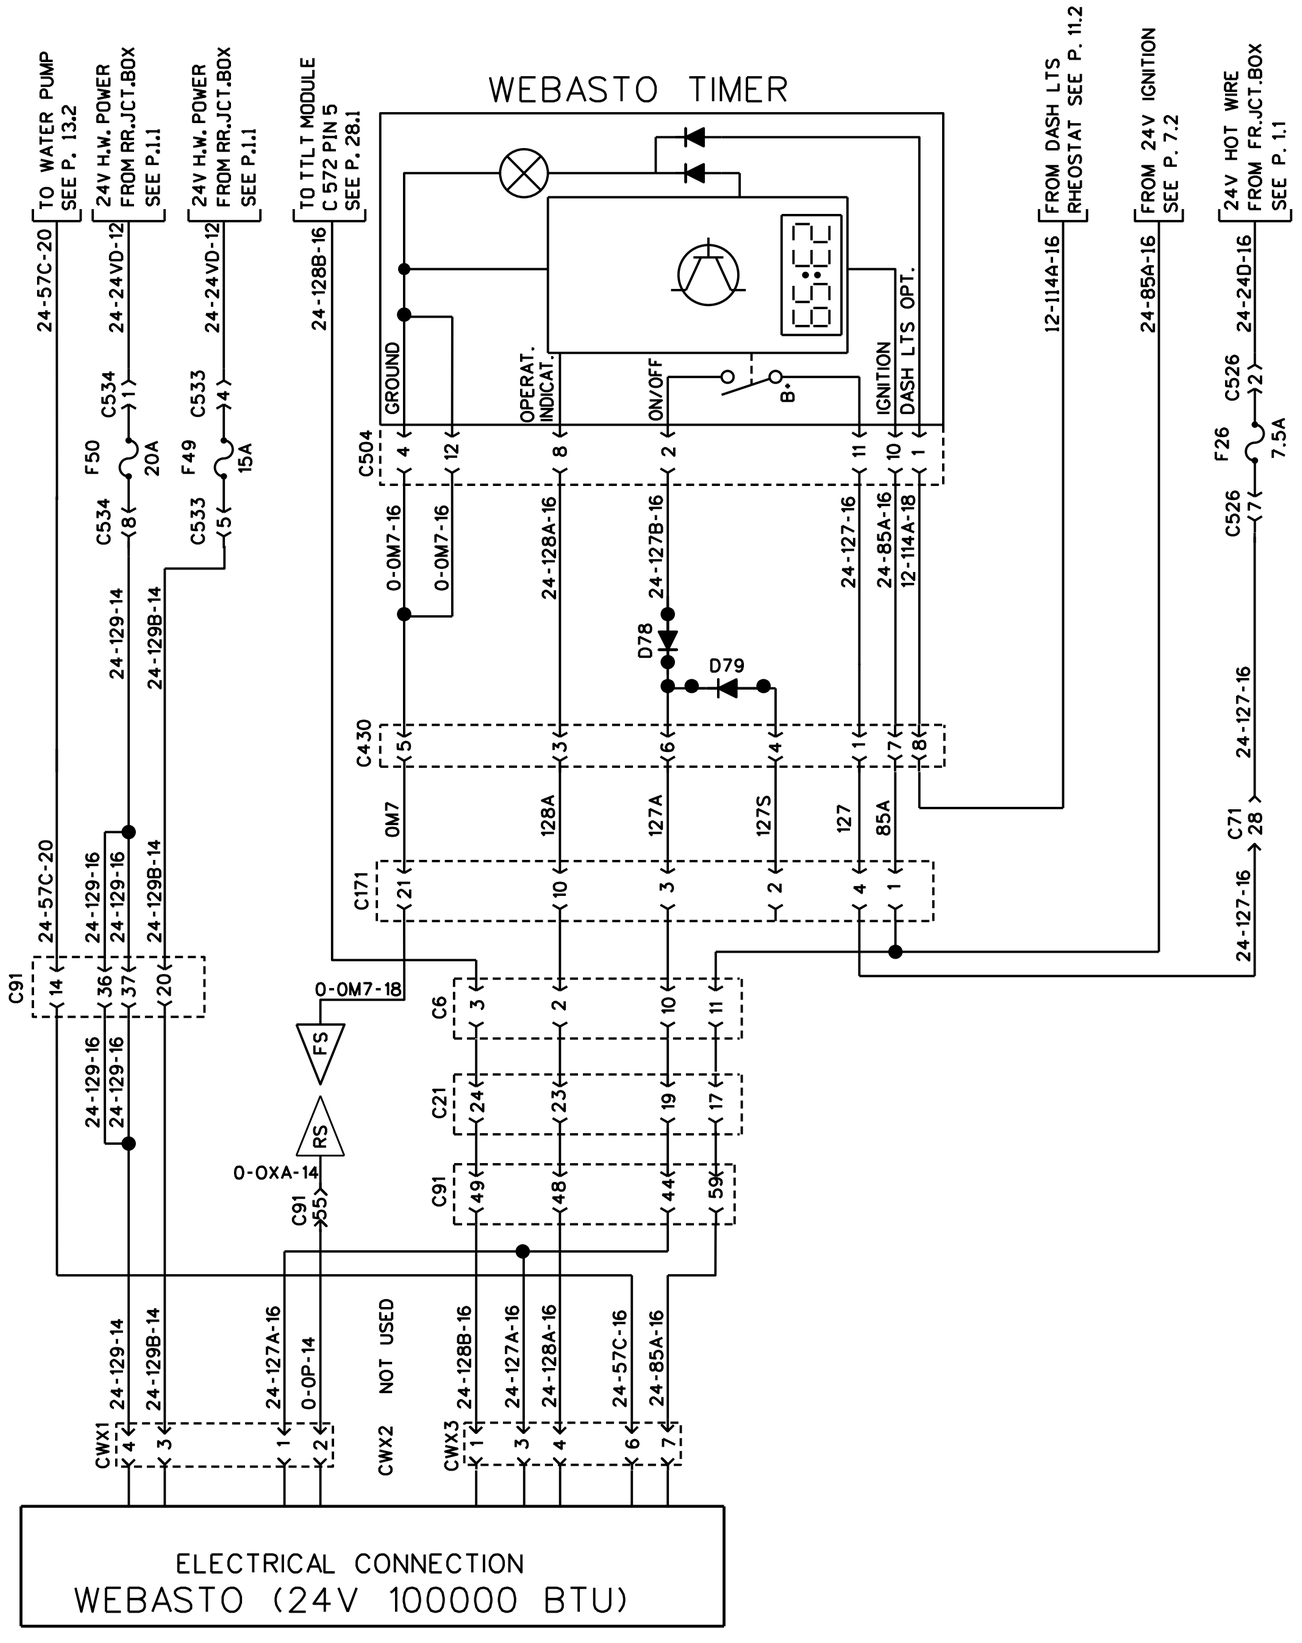

PRE-HEAT WATER HEATER (WEBASTO THERMO 300)

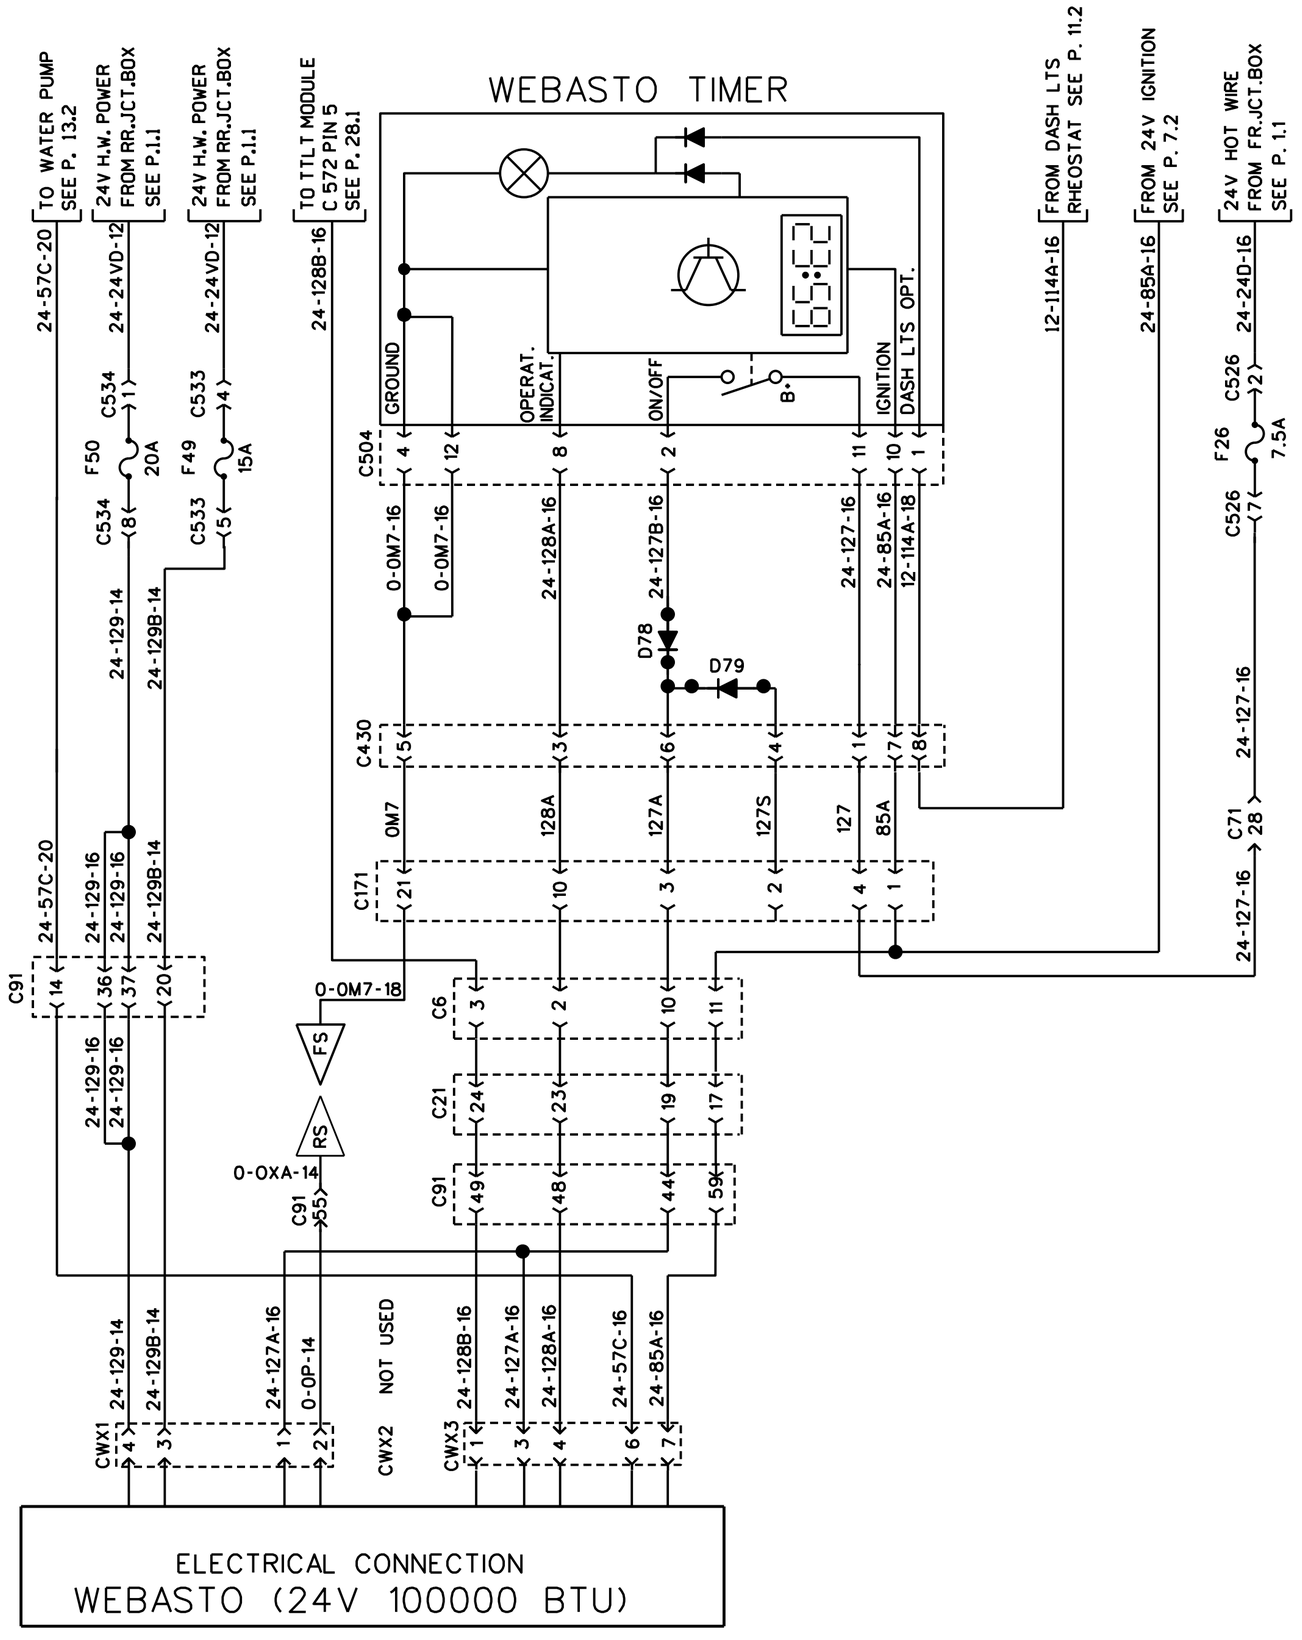

PRE-HEAT WATER HEATER (WEBASTO THERMO 300)

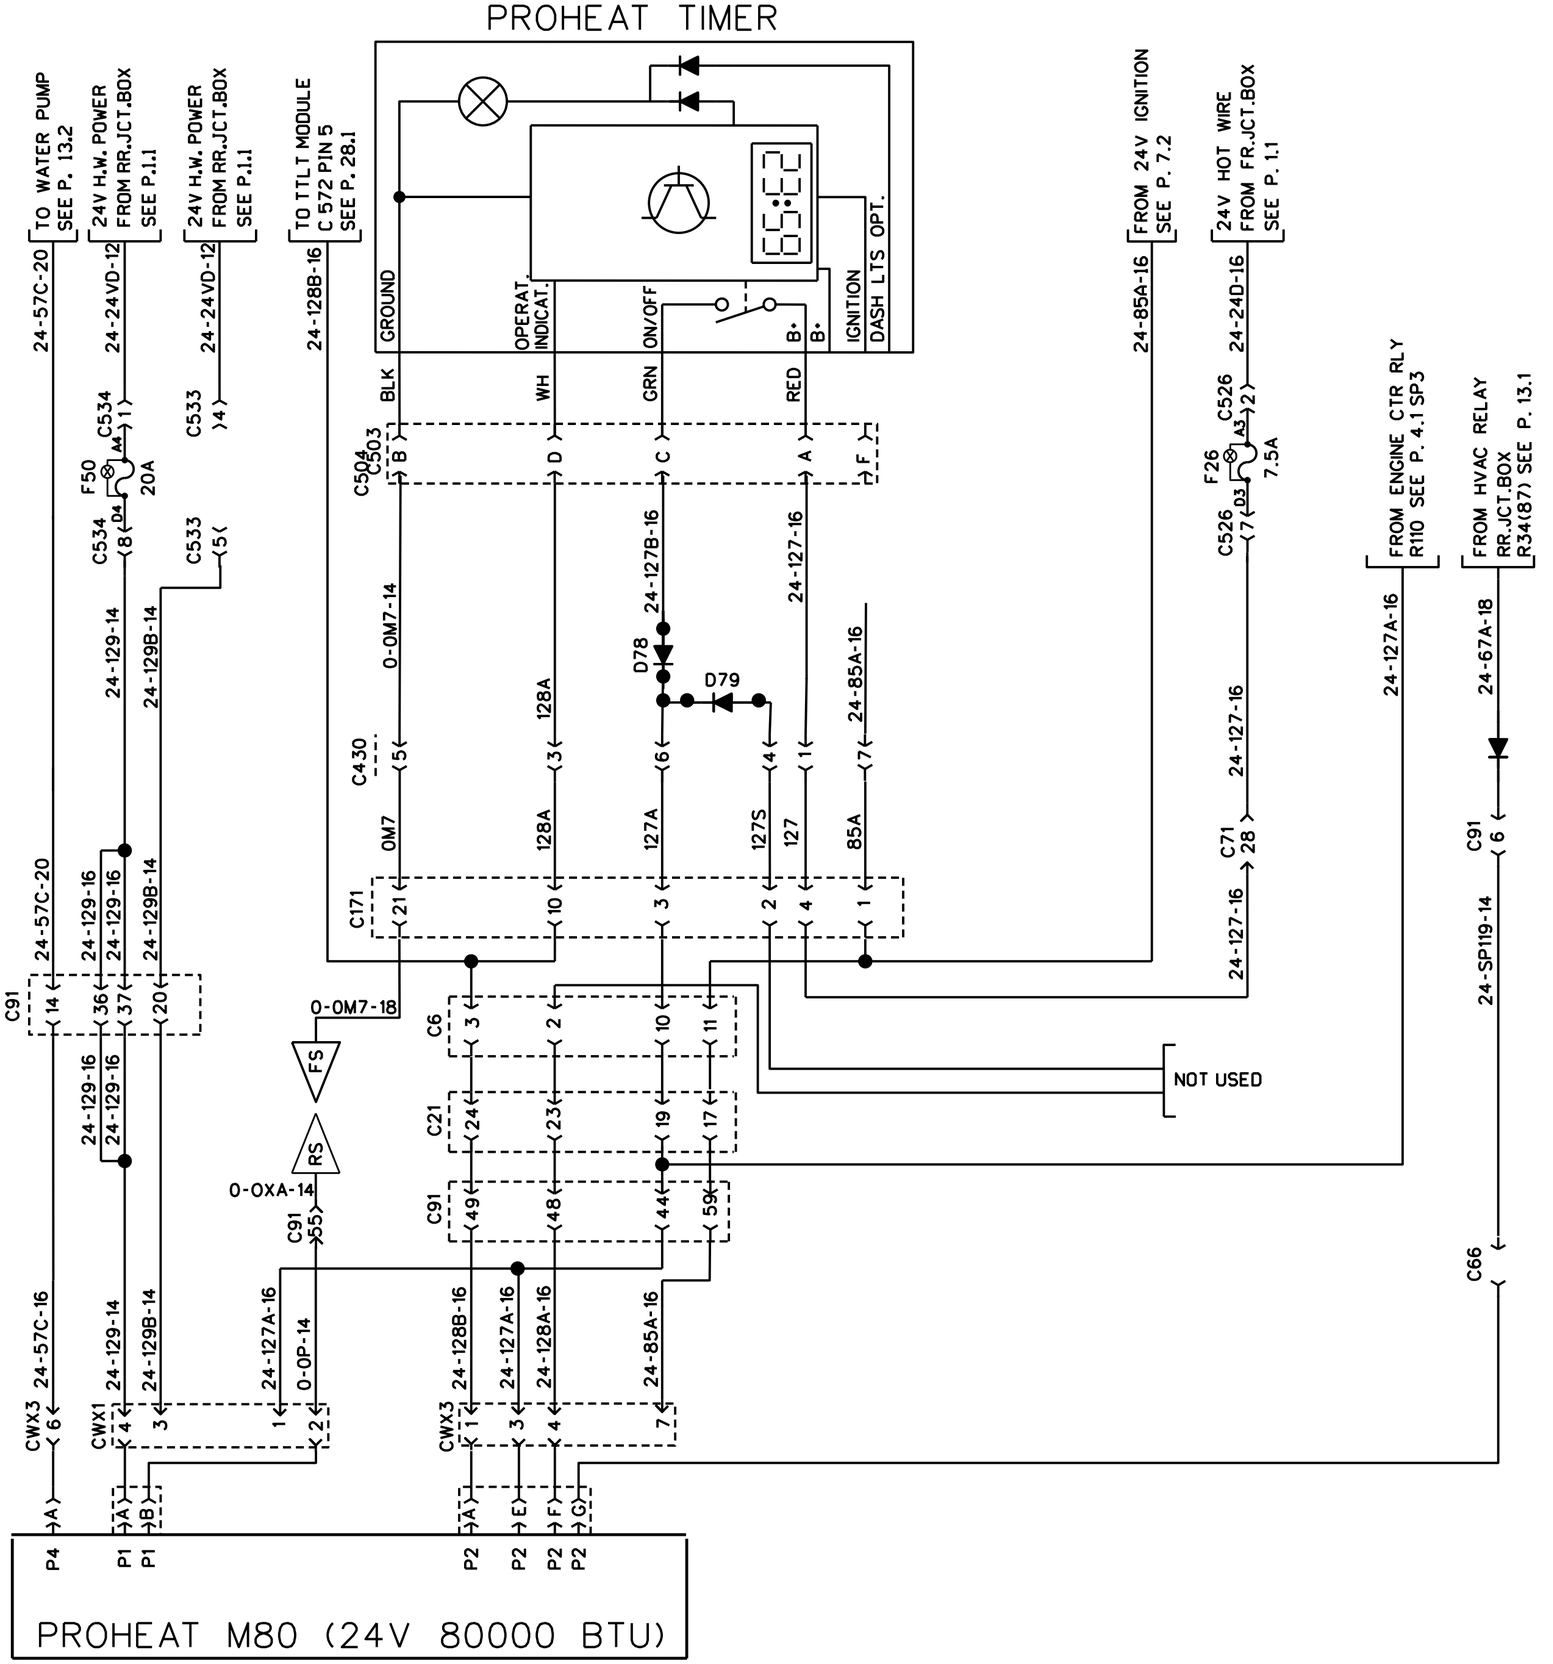

PRE-HEAT WATER HEATER (PROHEAT M80 AUTOMATIC ON A/C AND BATTERY CHARGER)

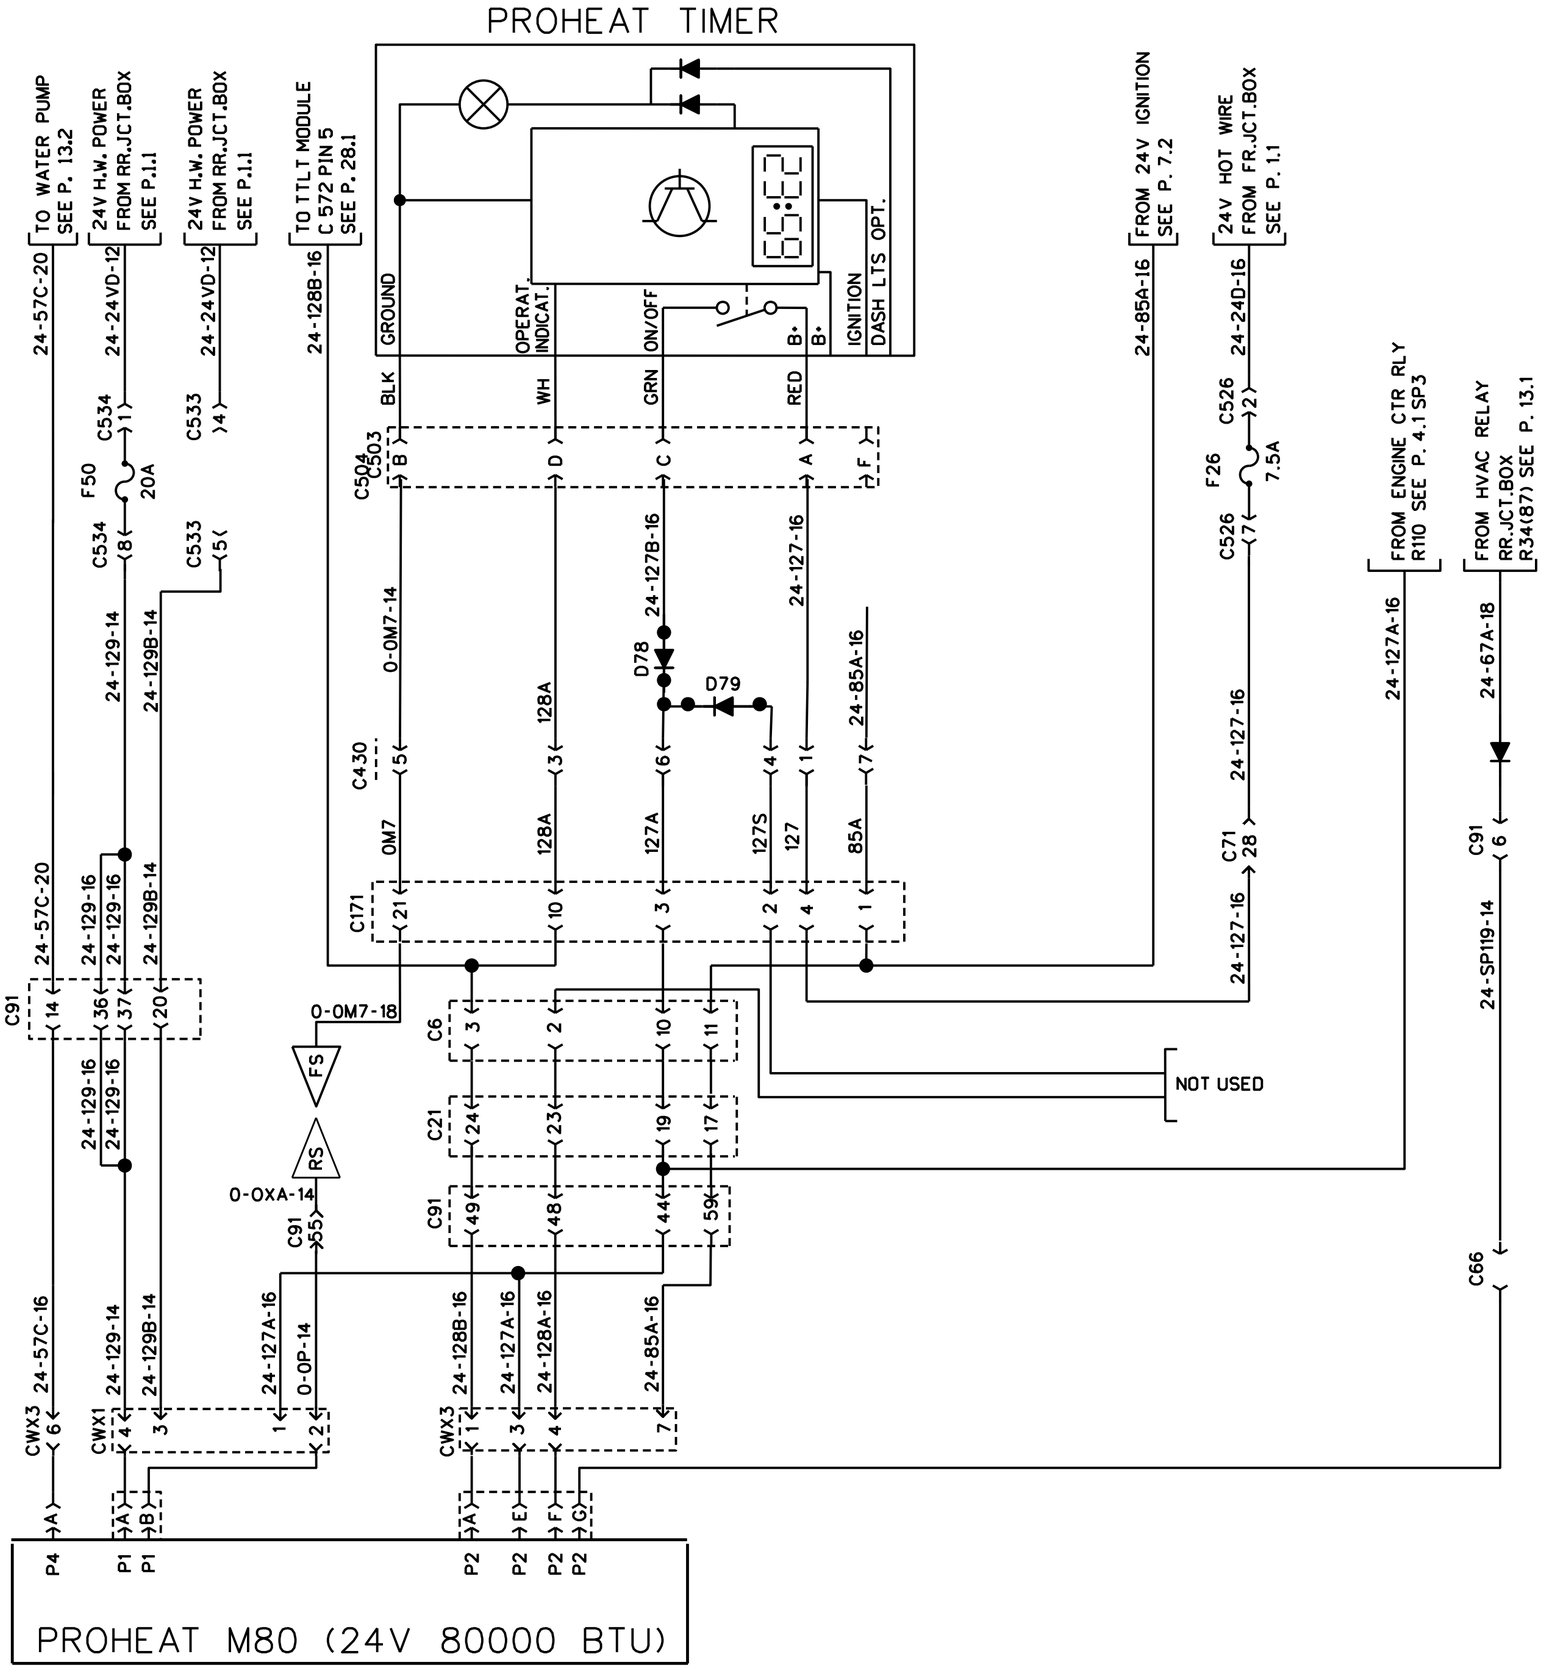

PRE-HEAT WATER HEATER (PROHEAT M80 AUTOMATIC ON A/C AND BATTERY CHARGER)

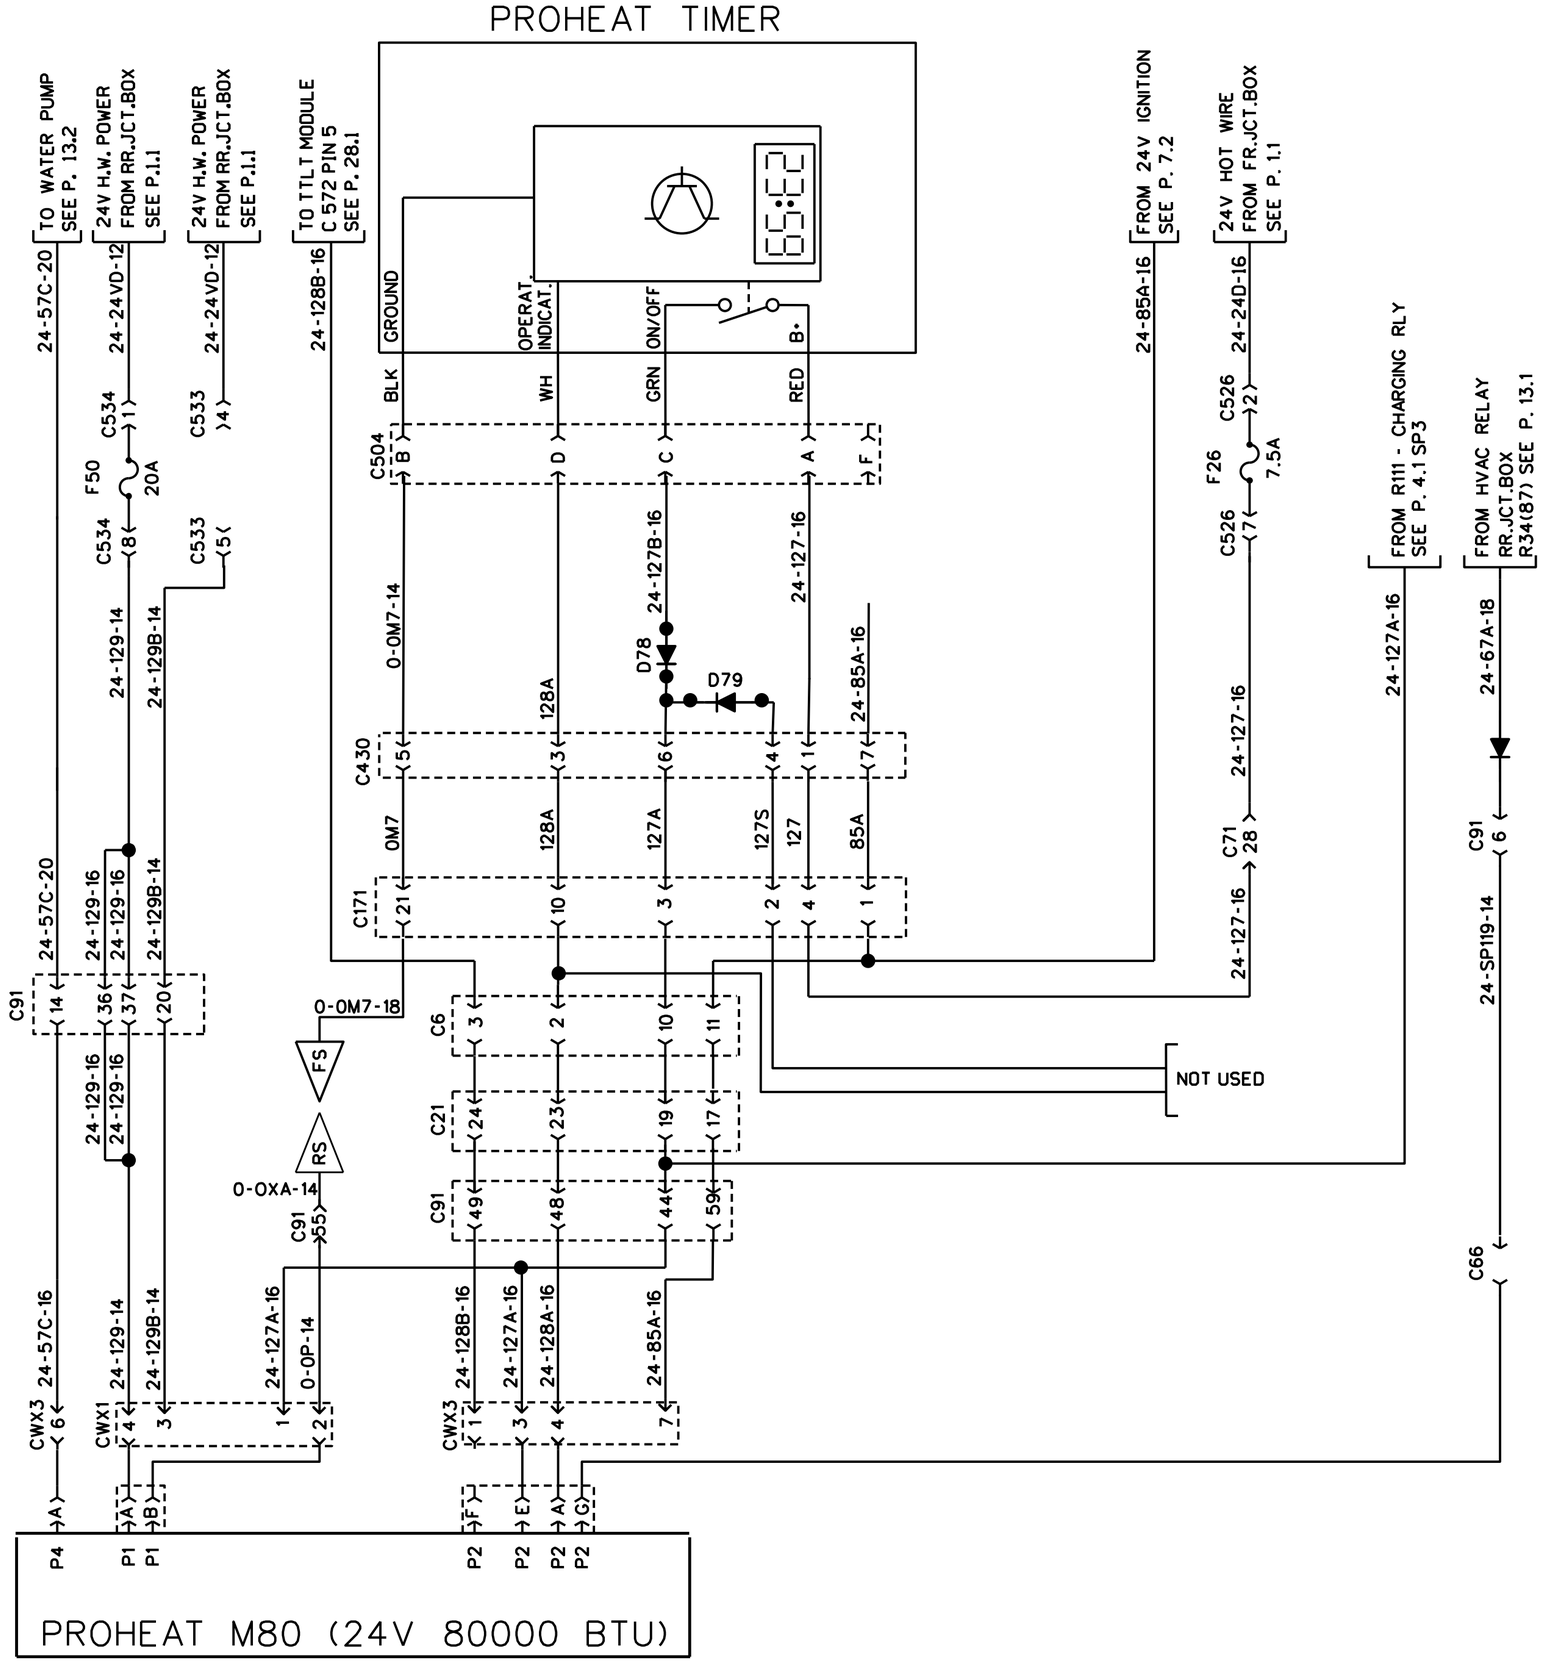

PRE-HEAT WATER HEATER (PROHEAT M80 AUTOMATIC ON A/C AND BATTERY CHARGER)

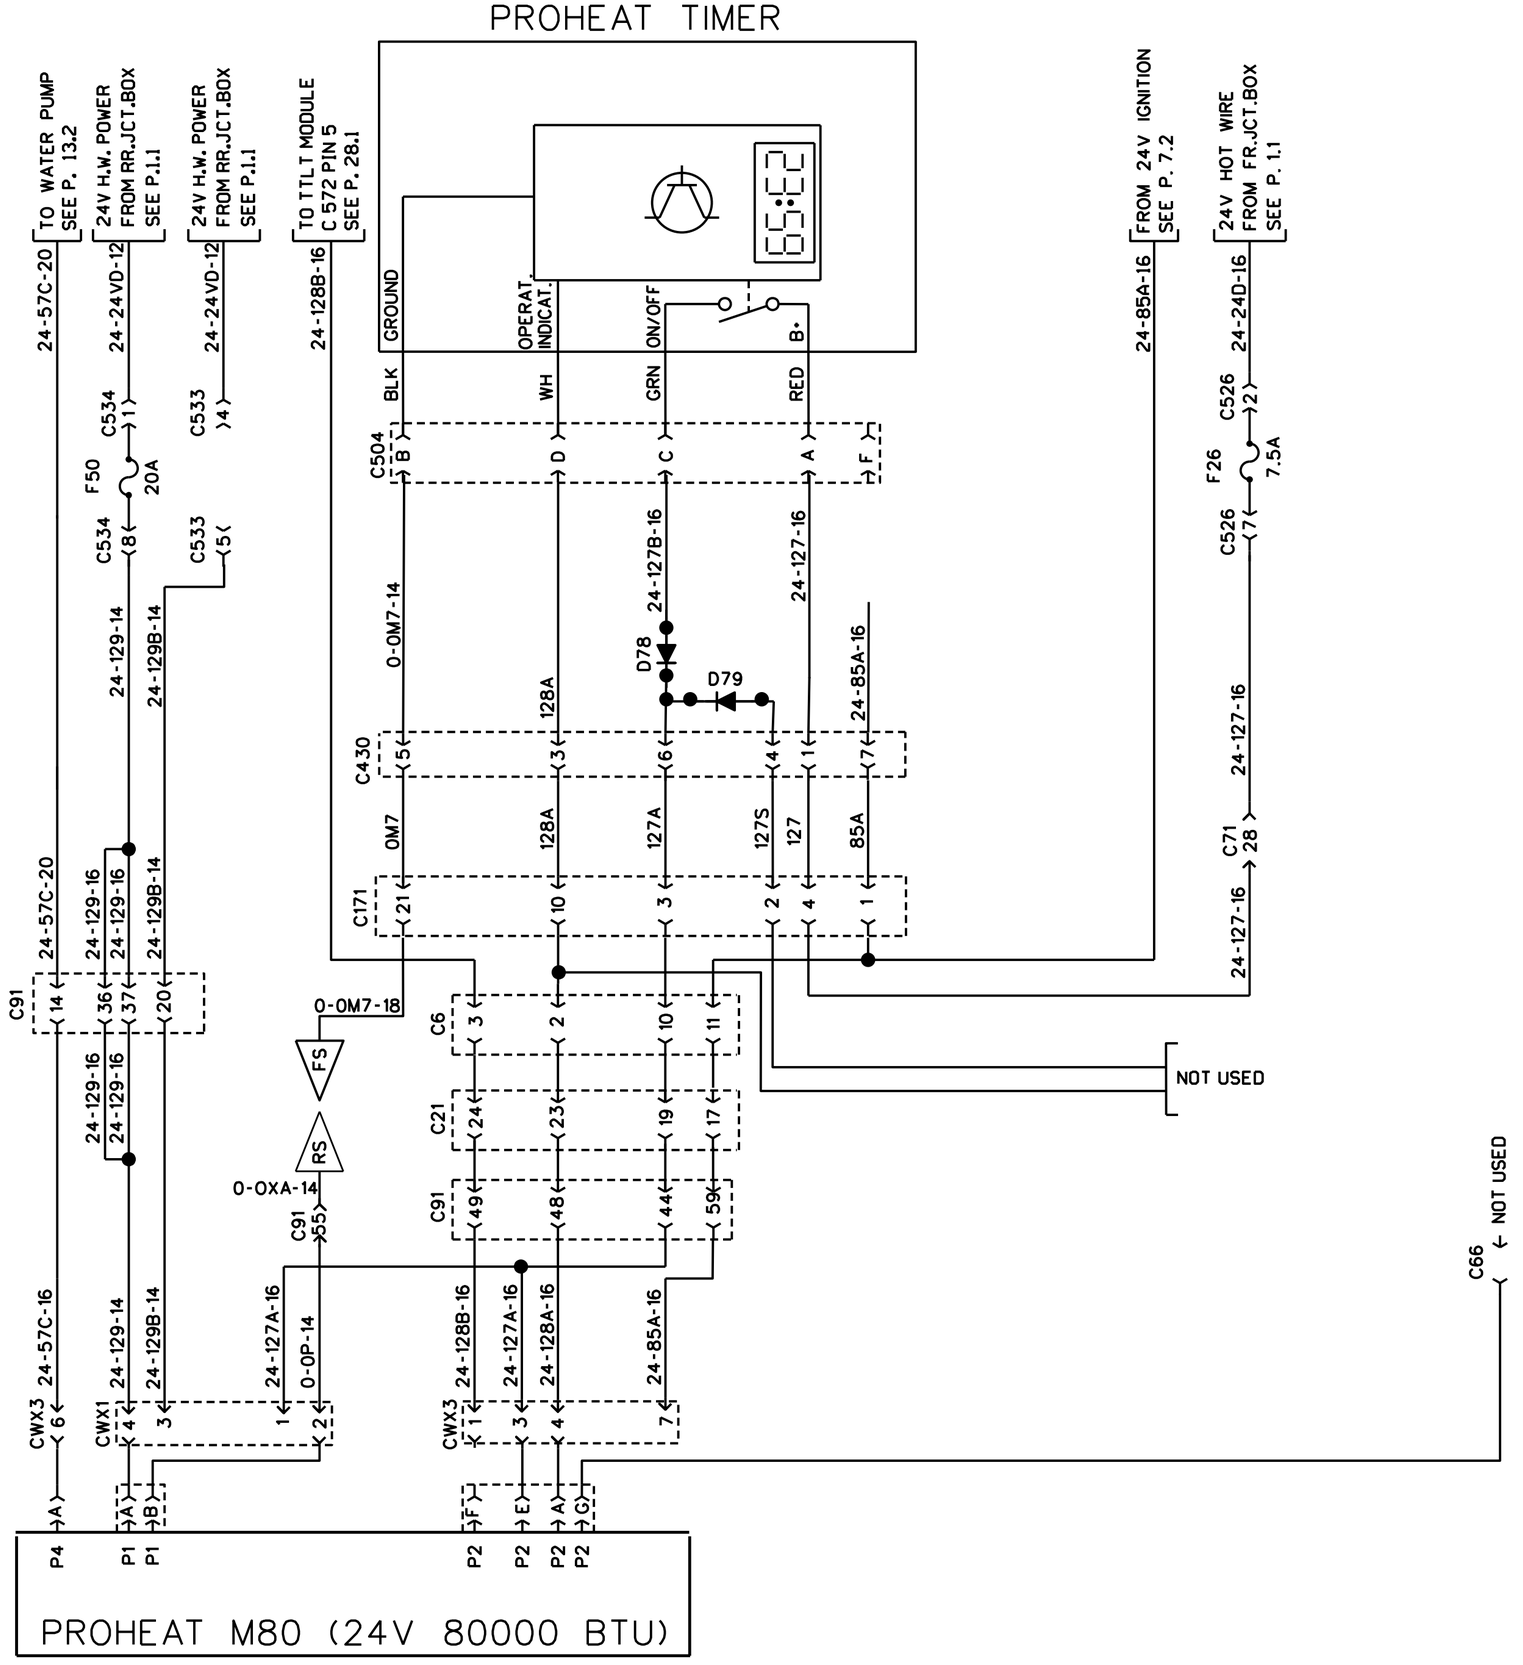

PRE-HEAT WATER HEATER PROHEAT M80

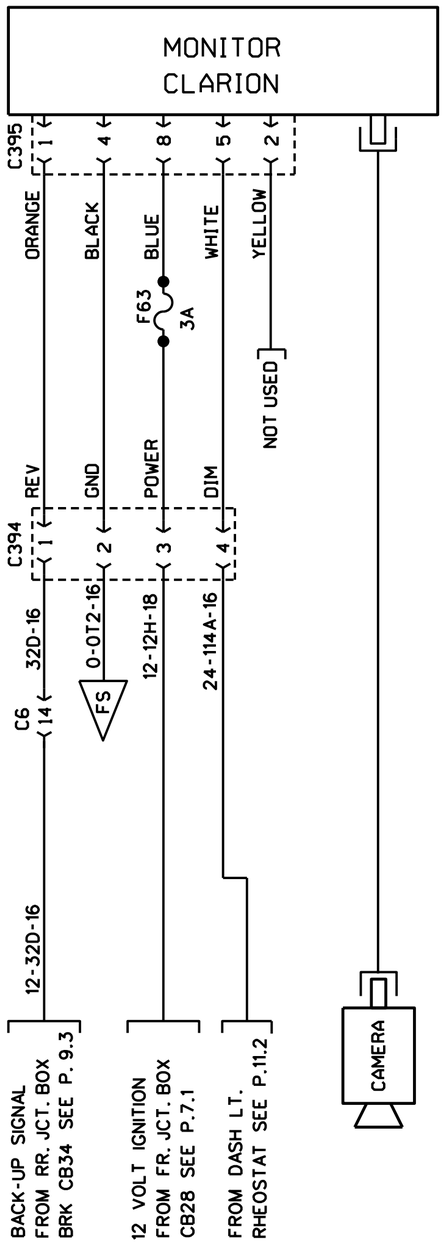

BACK-UP MONITOR (CLARION)

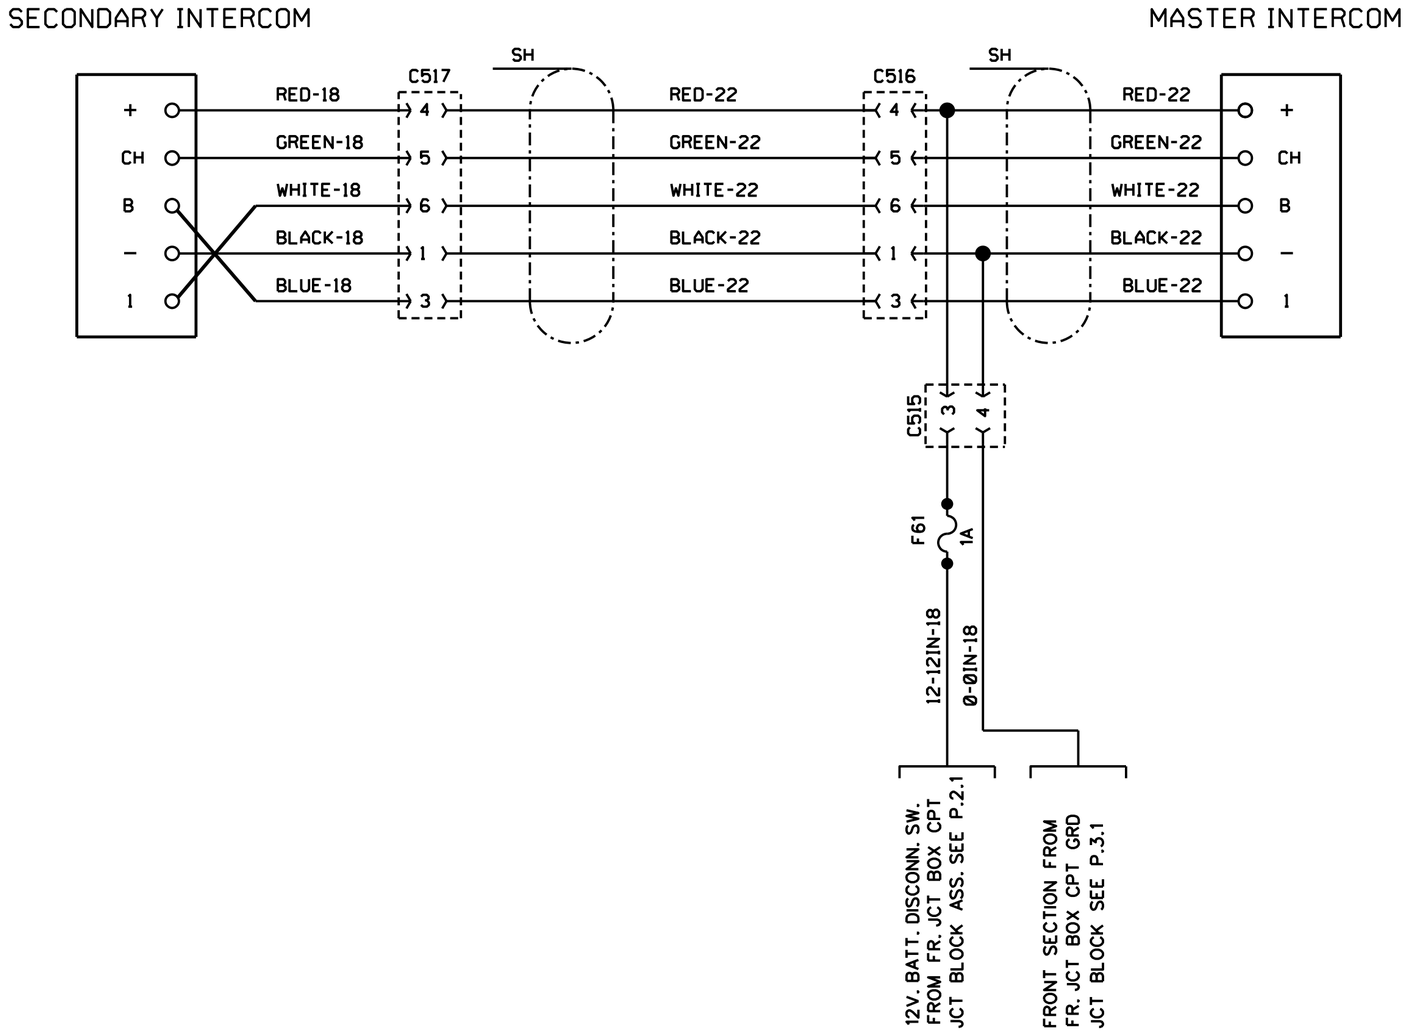

INTERCOM

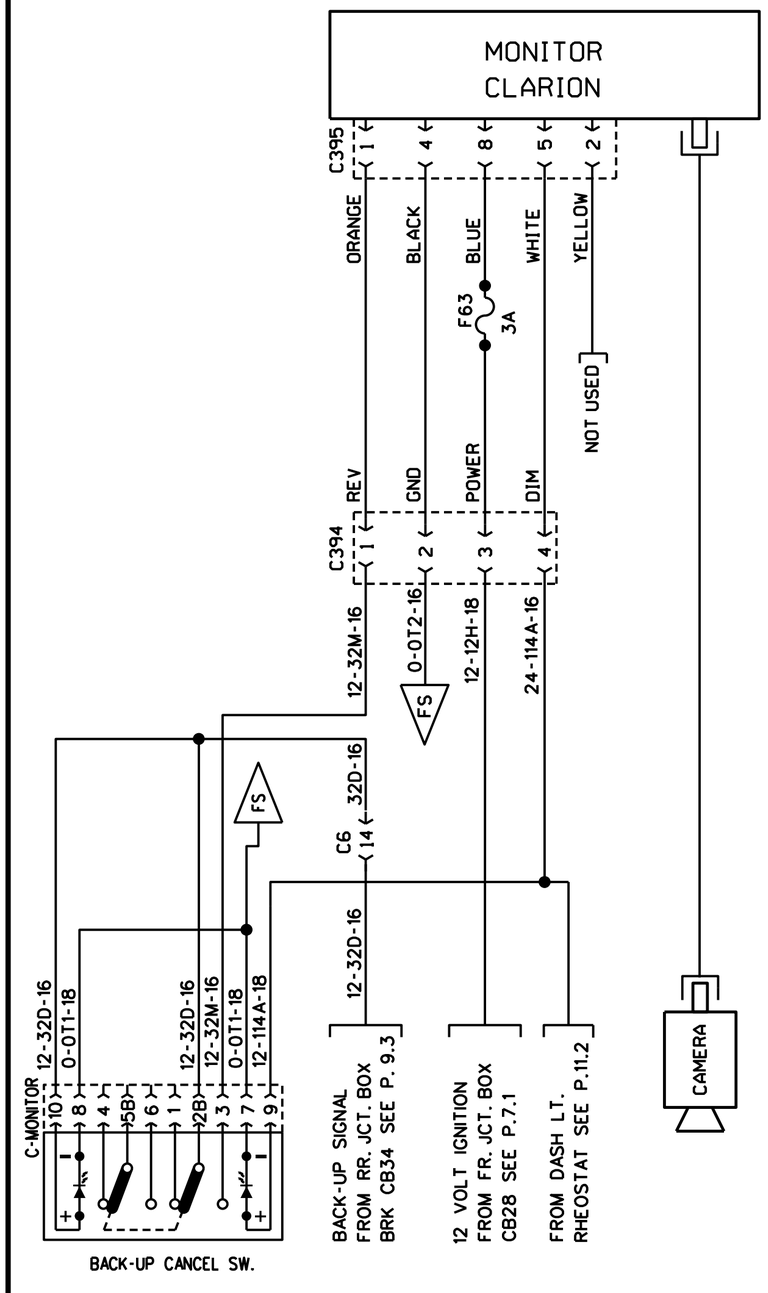

BACK-UP MONITOR (CLARION)

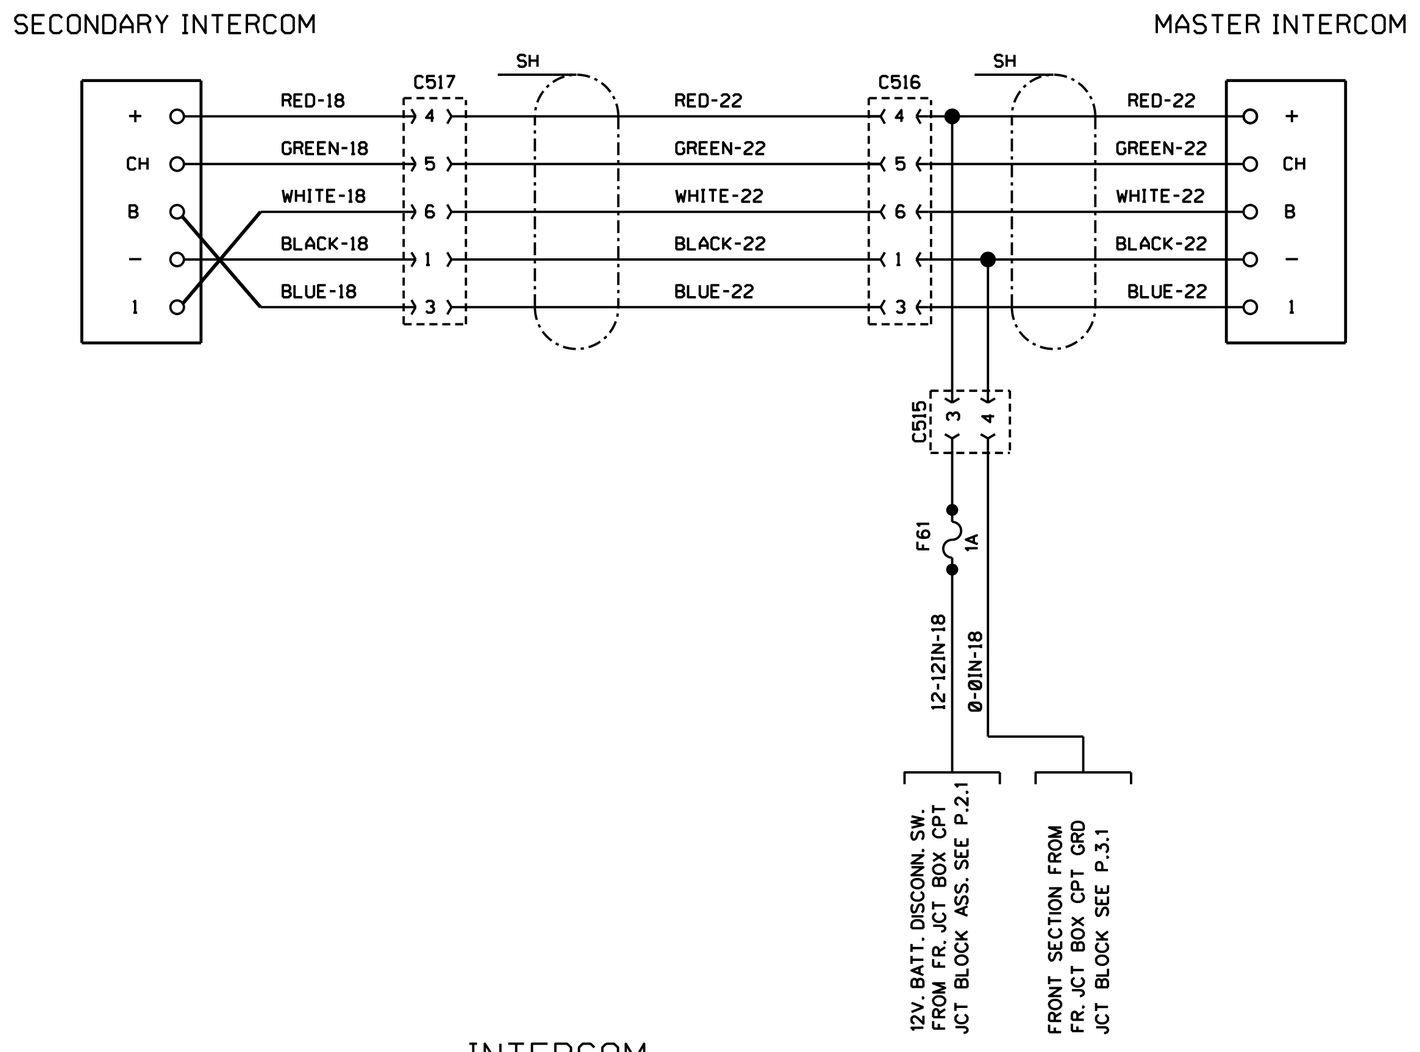

INTERCOM

SPECIAL BACK-UP SWITCH CANCEL ADDED

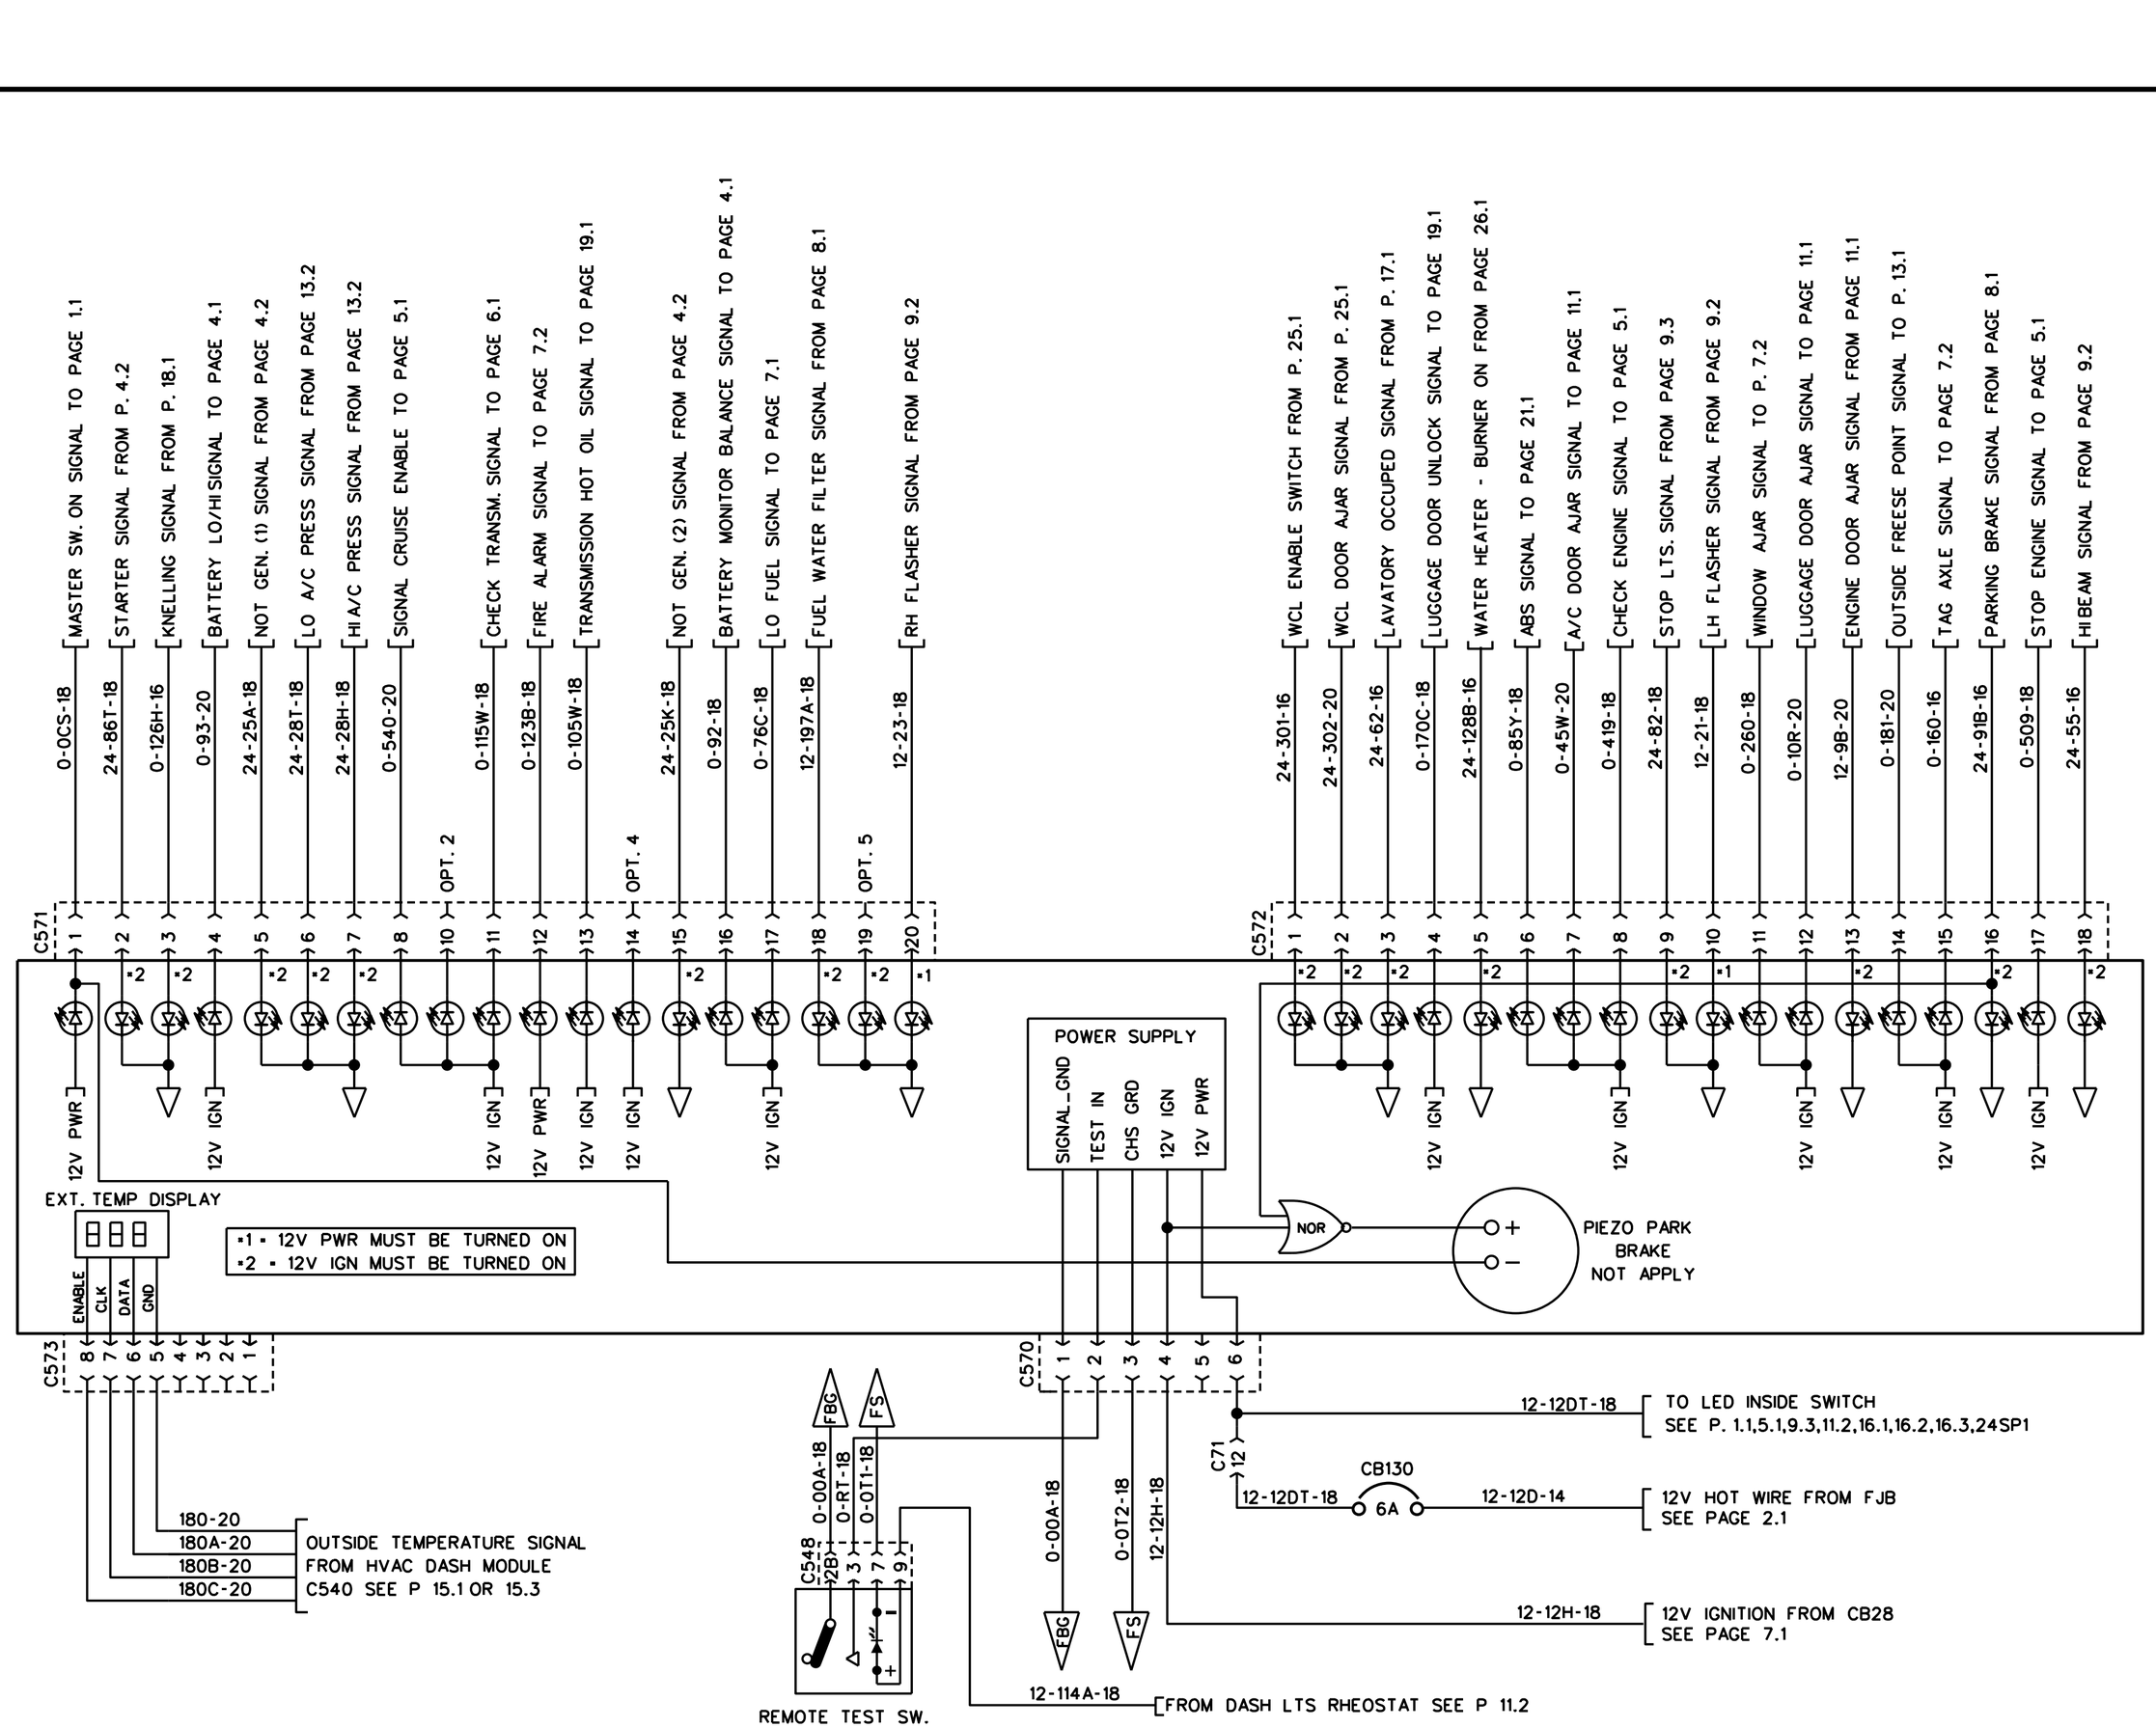

TELL TALE LIGHTS MODULE

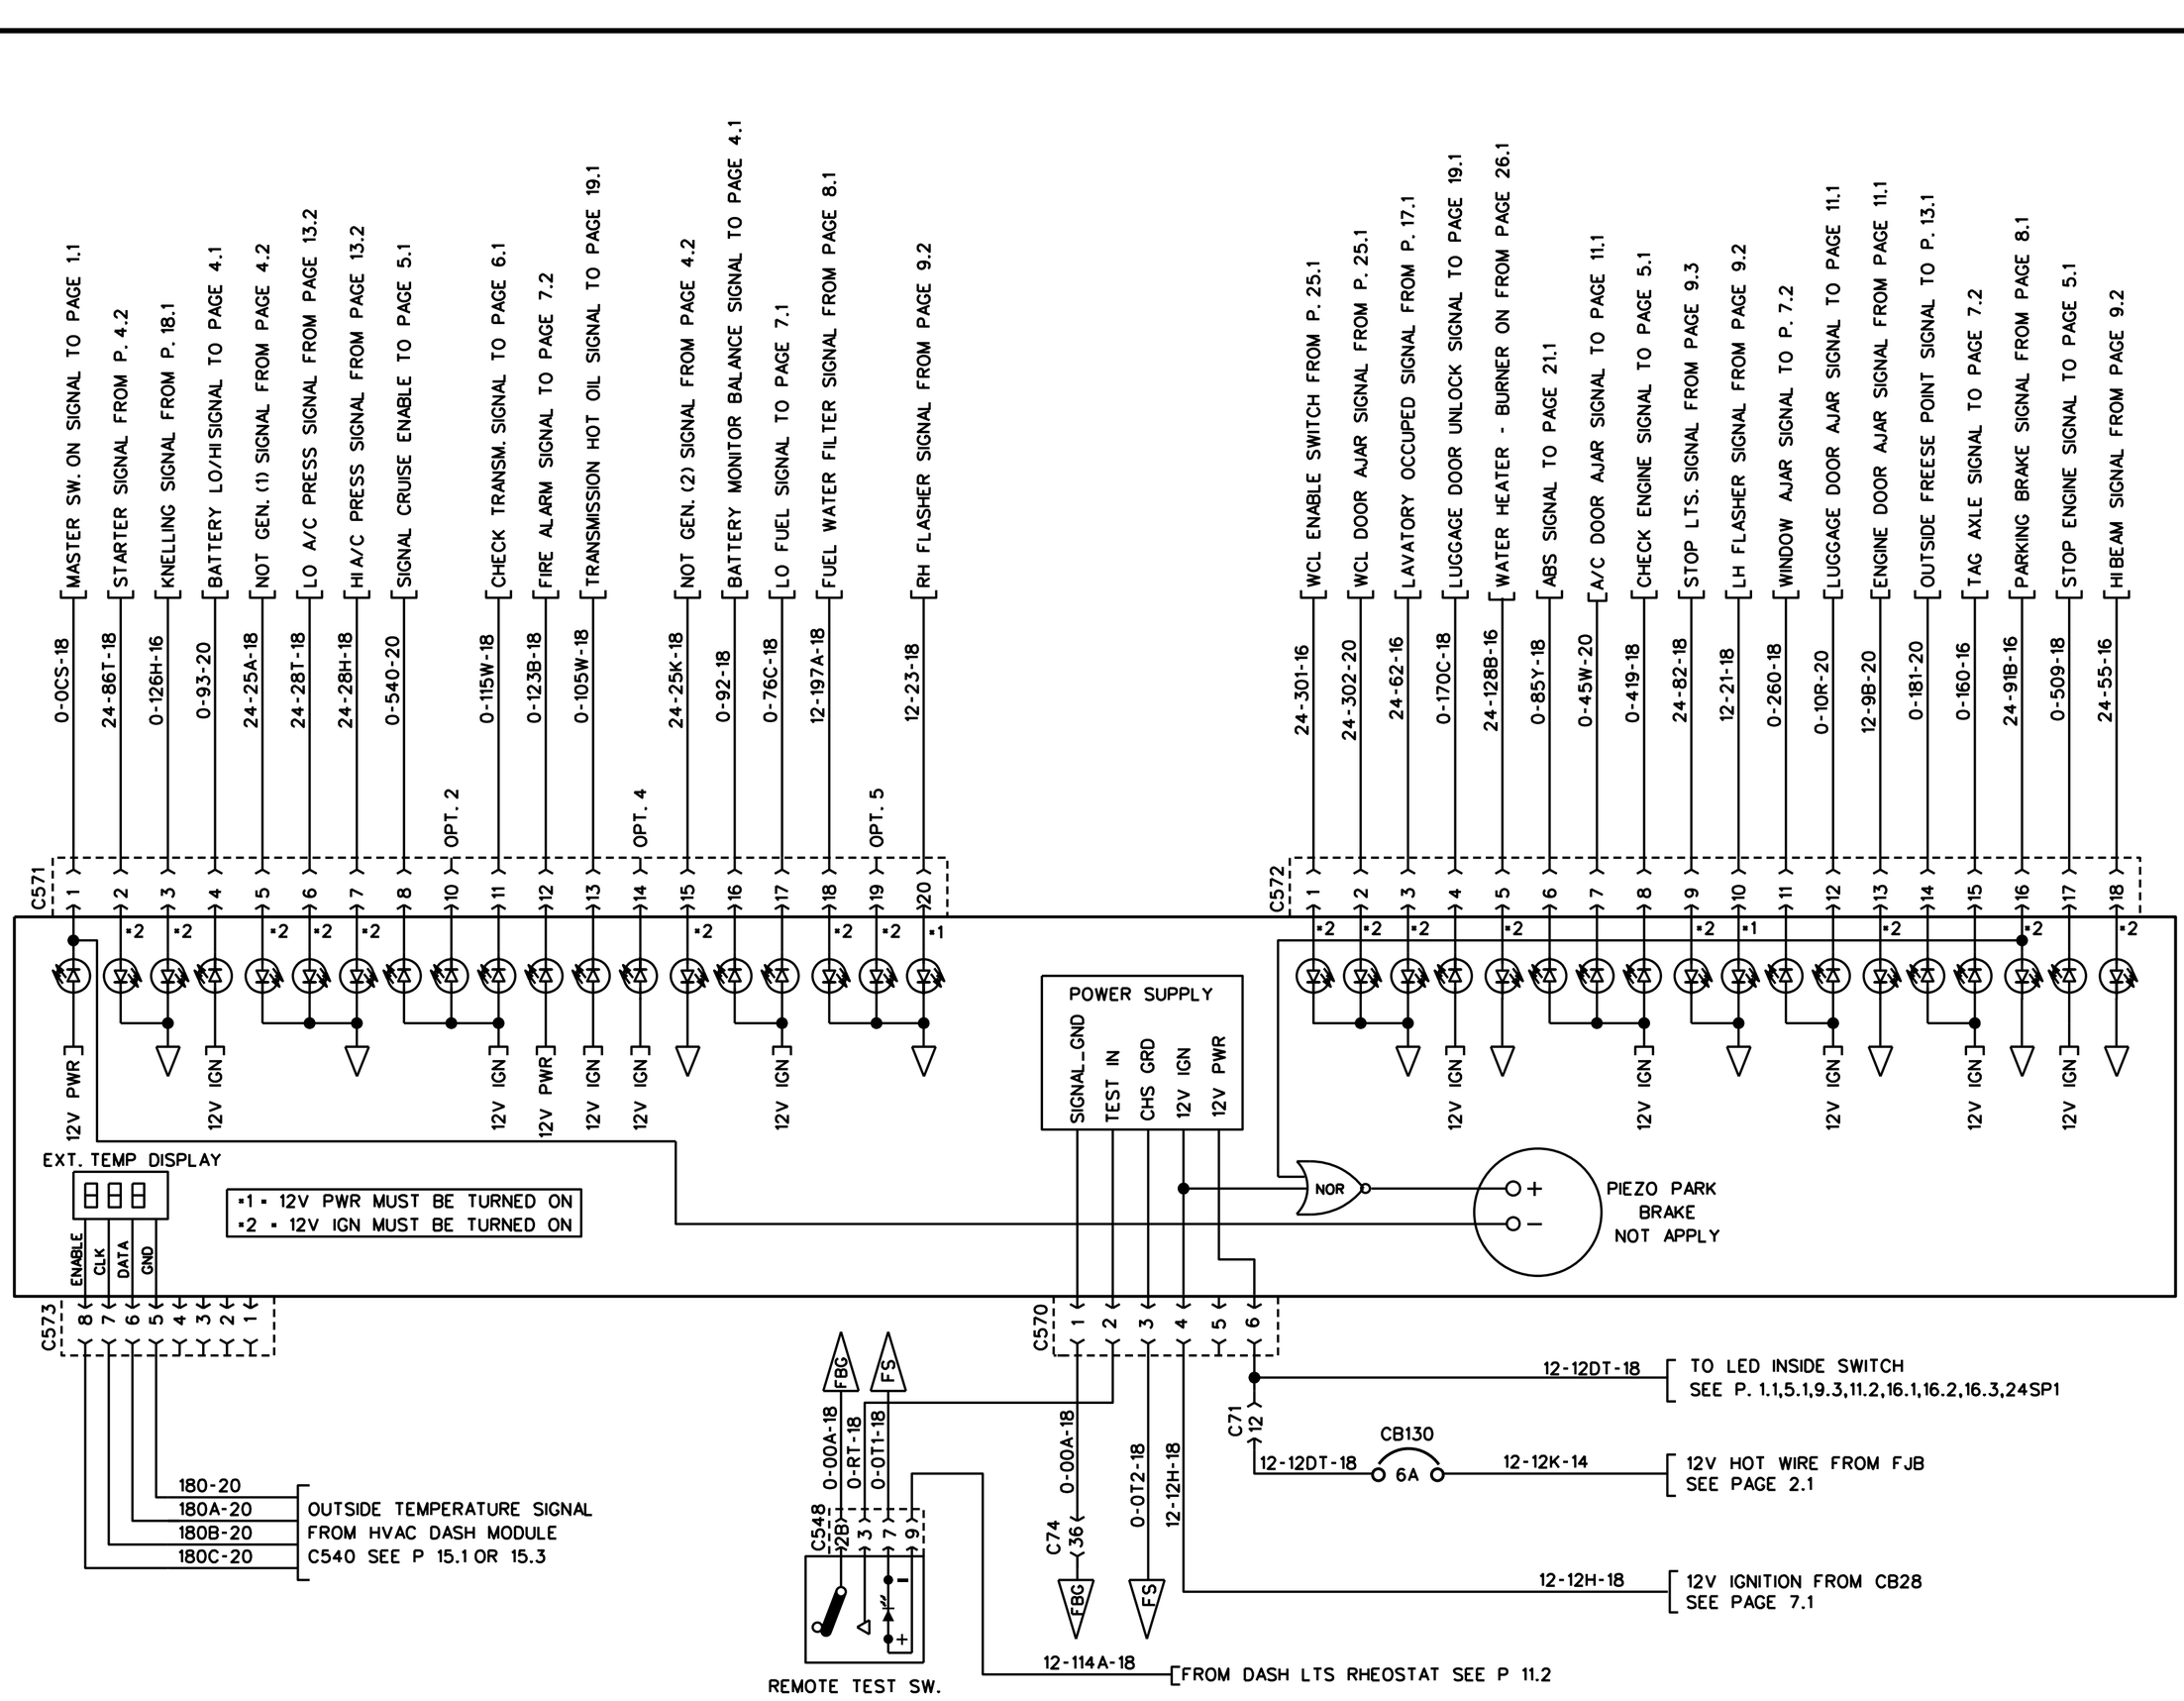

TELL TALE LIGHTS MODULE

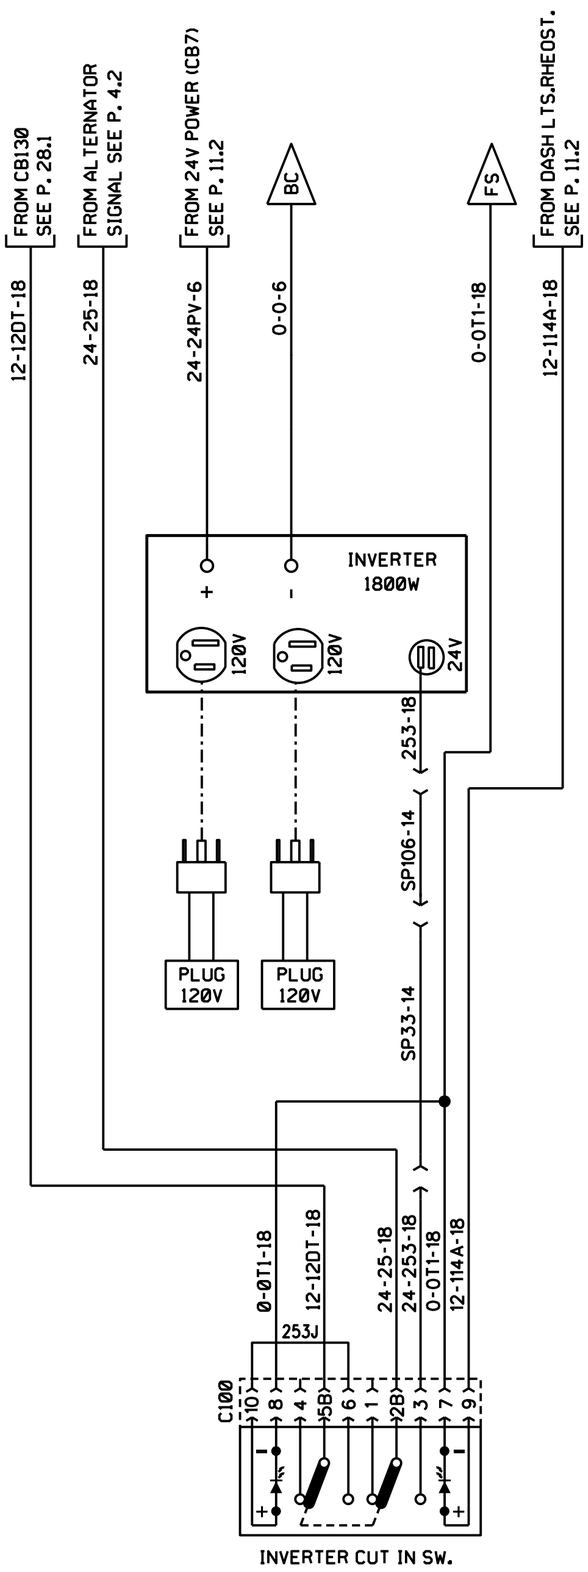

PLUG 120 VOLT

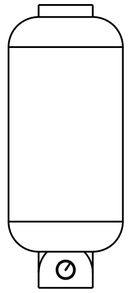

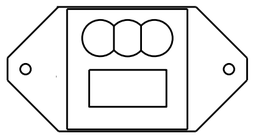

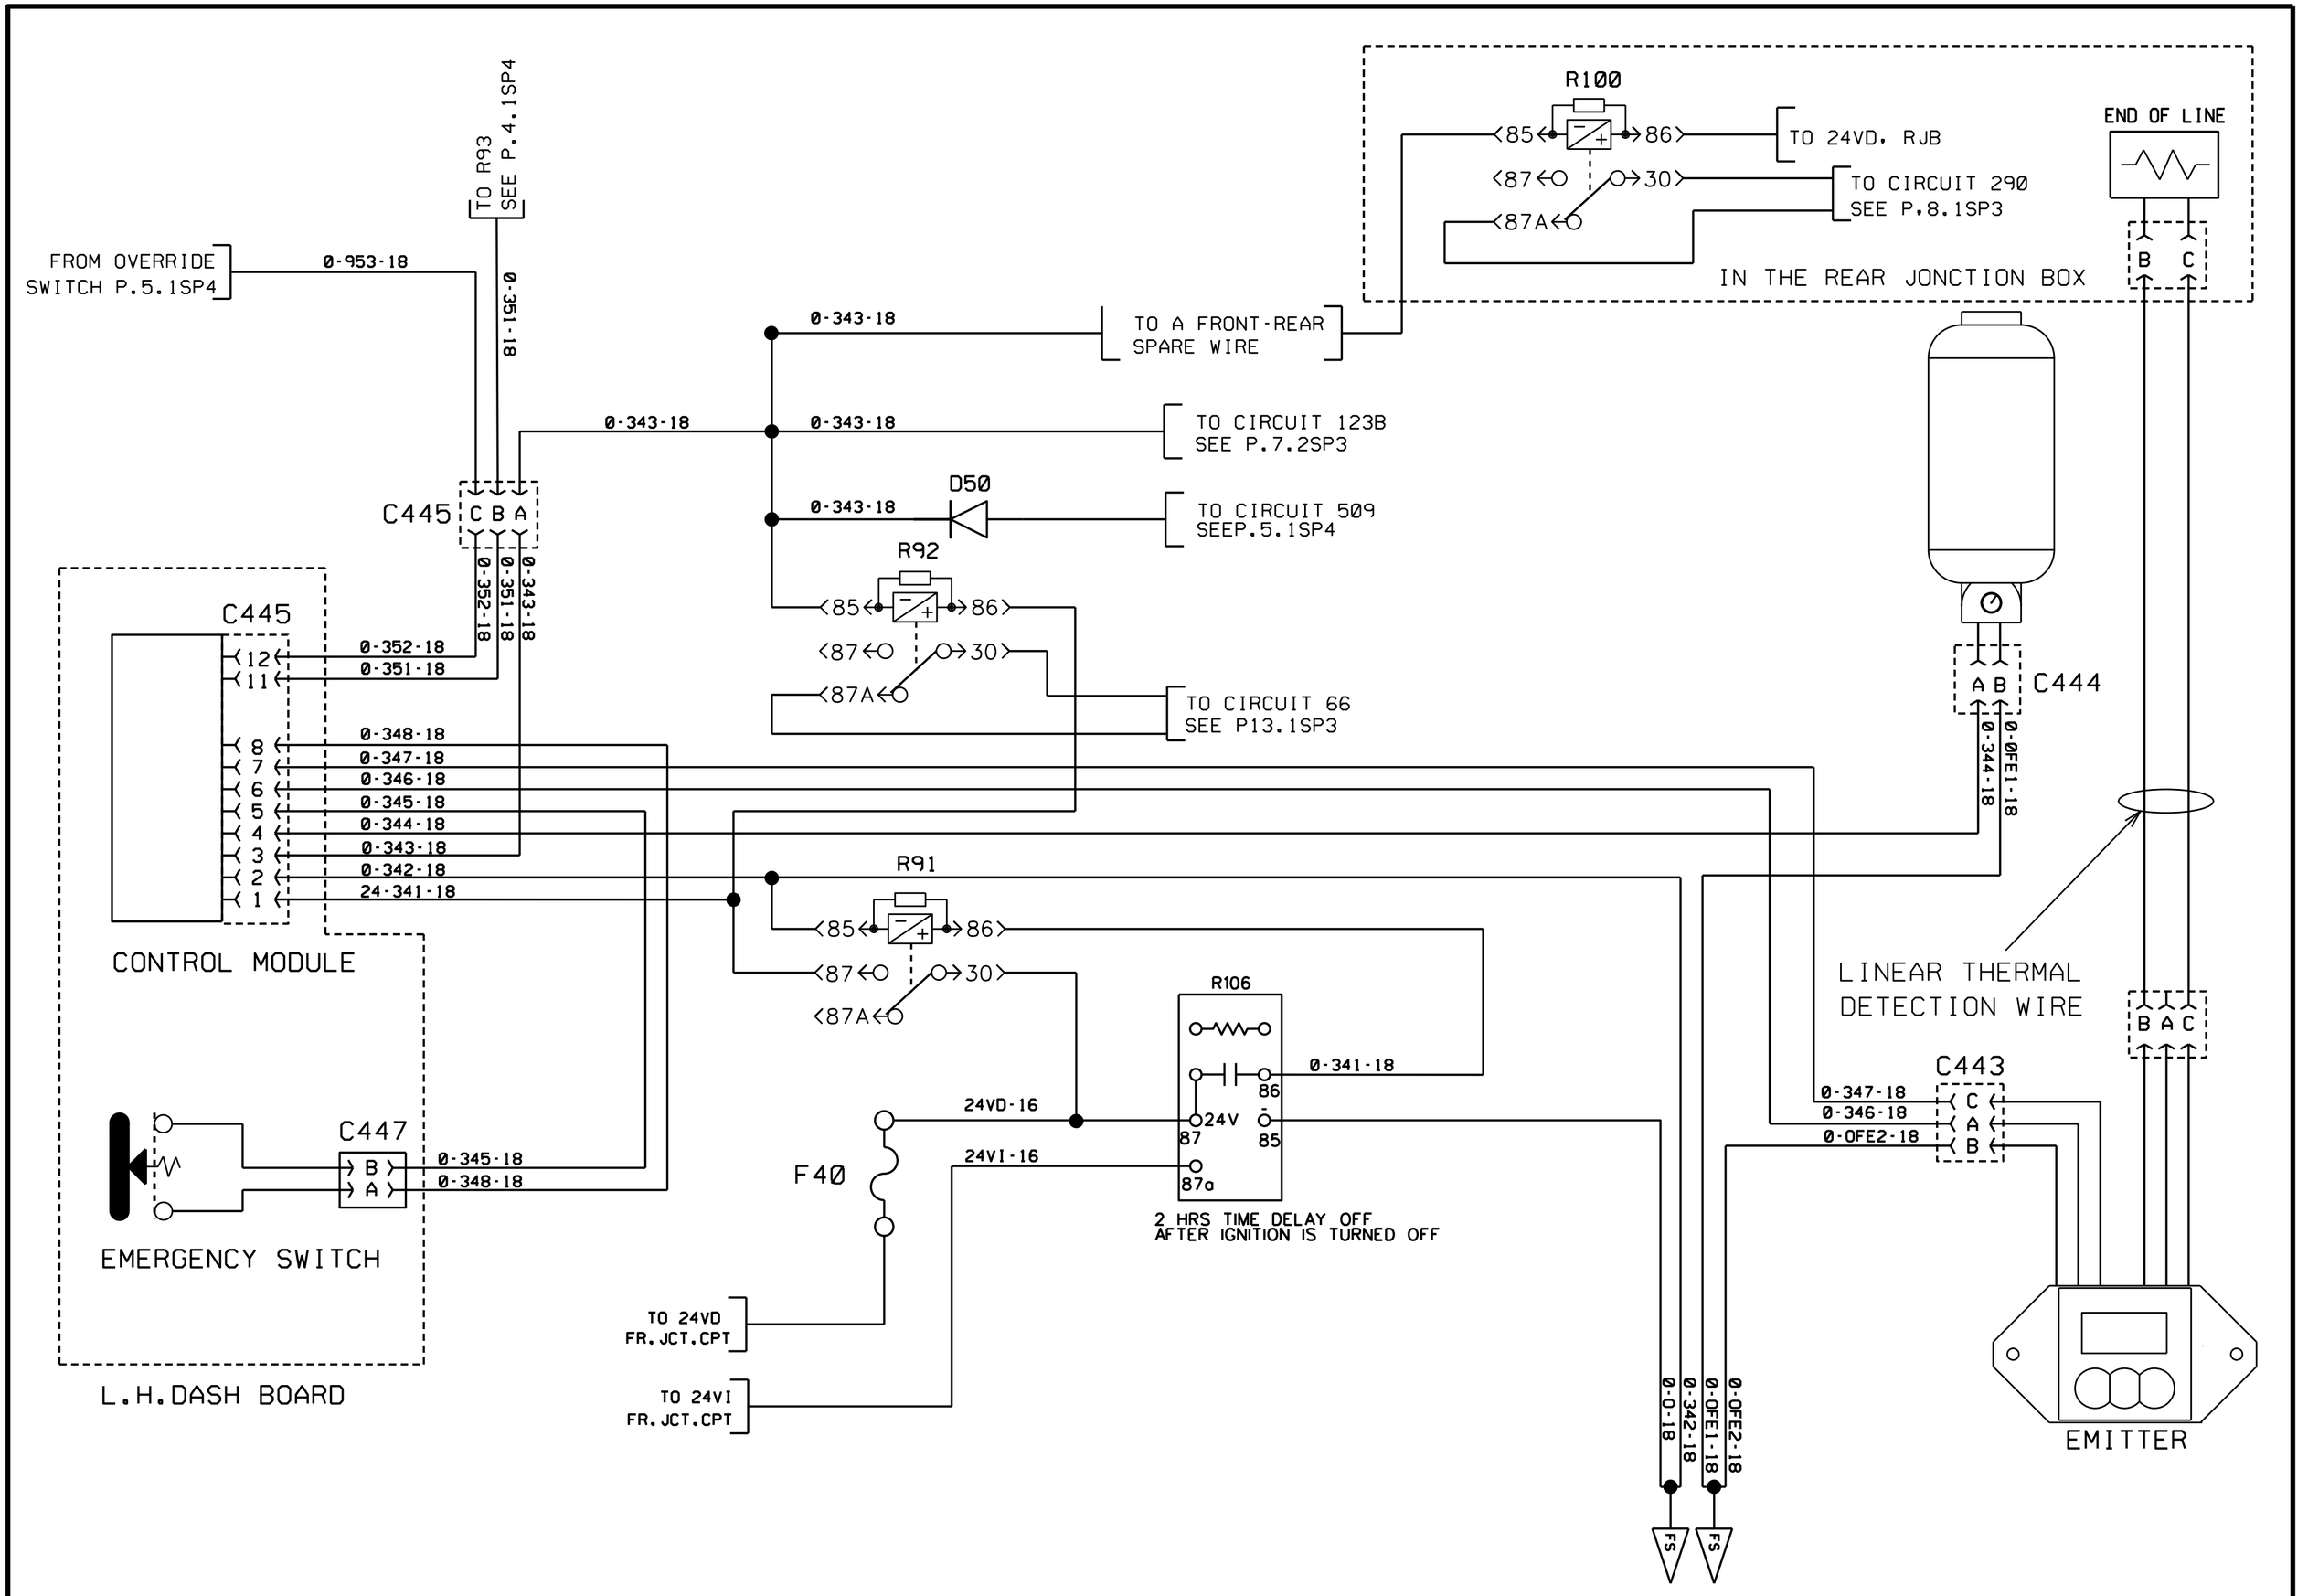
TO R93
SEE P.4.1SP4
FROM OVERRIDE
SWITCH P.5.1SP4
0-953-18
0-351-18
0-343-18
TO A FRONT-REAR
SPARE WIRE
R100
85
86
87
30
87A
TO 24VD, RJB
TO CIRCUIT 290
SEE P.8.1SP3
IN THE REAR JONCTION BOX
END OF LINE
B
C
TO CIRCUIT 123B
SEE P.7.2SP3
D50
TO CIRCUIT 509
SEEP.5.1SP4
R92
TO CIRCUIT 66
SEE P13.1SP3
C445
C B A
0-352-18
0-351-18
0-343-18
12
11
0-352-18
0-351-18
8
7
6
5
4
3
2
1
0-348-18
0-347-18
0-346-18
0-345-18
0-344-18
0-343-18
0-342-18
24-341-18
CONTROL MODULE
C444
A B
0-344-18
0-0FE1-18
R91
R106
0-341-18
86
24V
87
85
87a
24VD-16
24VI-16
F40
2 HRS TIME DELAY OFF
AFTER IGNITION IS TURNED OFF
TO 24VD
FR.JCT.CPT
TO 24VI
FR.JCT.CPT
LINEAR THERMAL
DETECTION WIRE
B A C
C443
0-347-18
0-346-18
0-0FE2-18
C
A
B
C447
B
A
0-345-18
0-348-18
EMERGENCY SWITCH
L.H.DASH BOARD
EMITTER
0-0-18
0-342-18
0-0FE1-18
0-0FE2-18
FS
FS

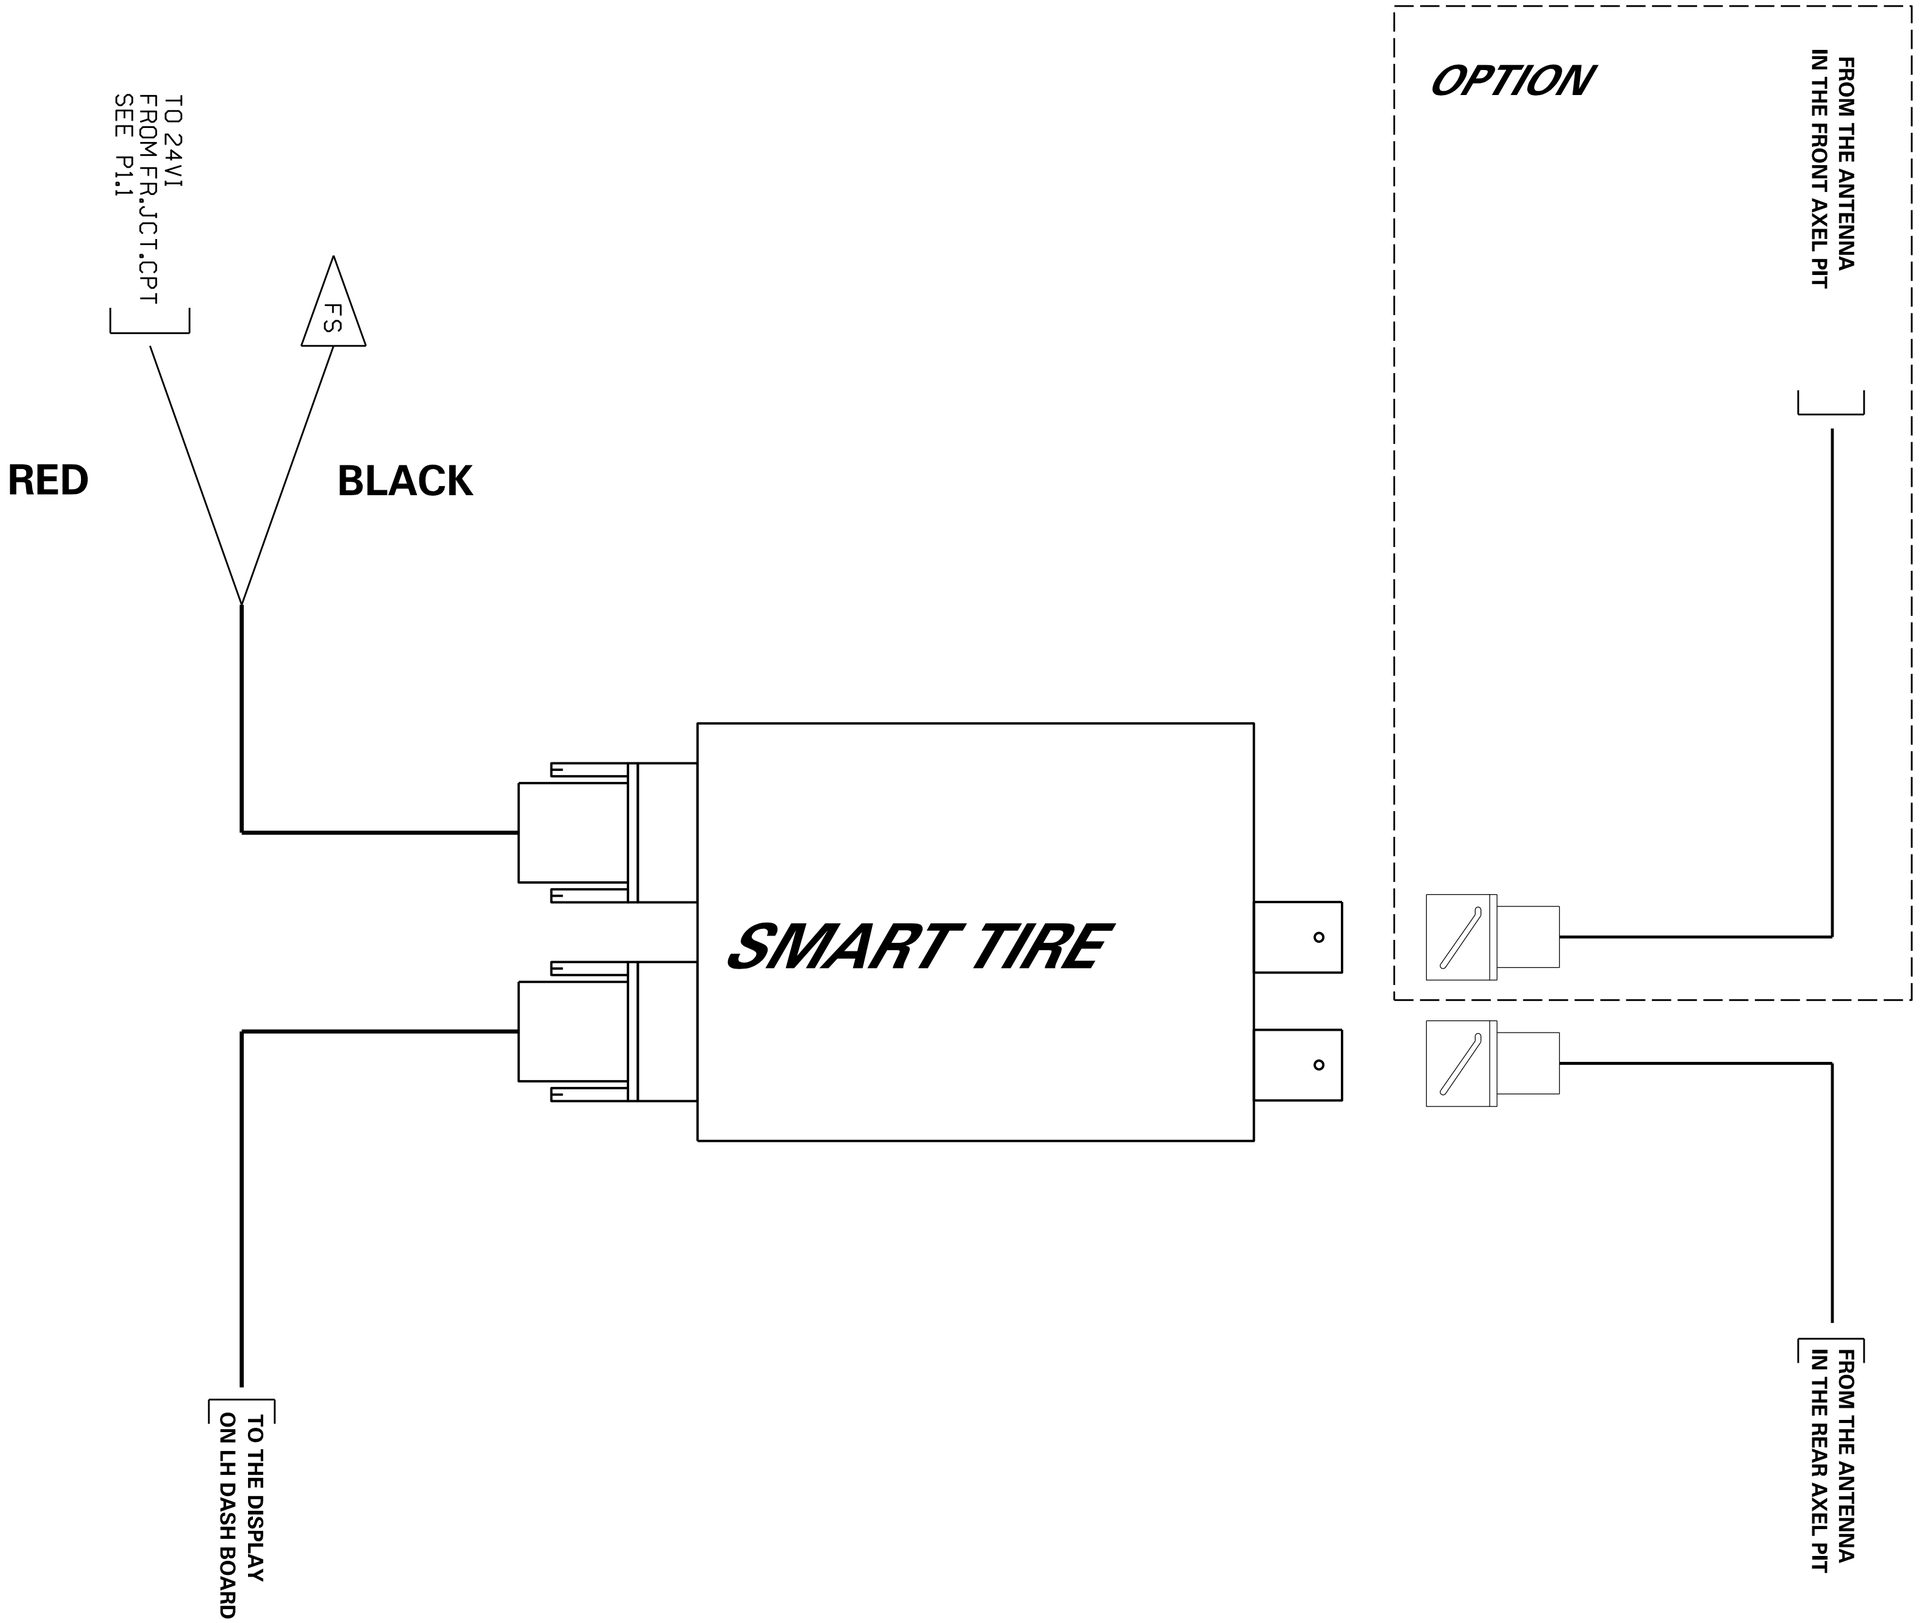
TO 24VI
FROM FR.JCT.CPT
SEE P1.1
FS
RED
BLACK
SMART TIRE
OPTION
FROM THE ANTENNA
IN THE FRONT AXEL PIT
TO THE DISPLAY
ON LH DASH BOARD
FROM THE ANTENNA
IN THE REAR AXEL PIT