WIRING DIAGRAM

PREVOST

H3-41 & H3-45 BUS

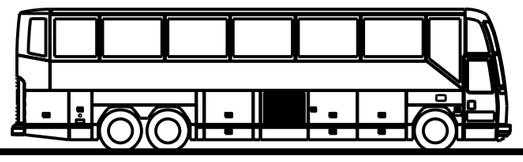

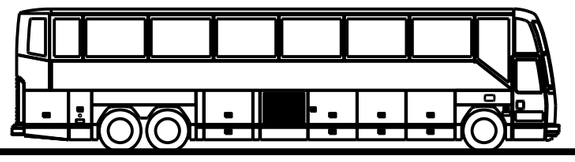

REFERENCE:	MODEL 98	NO:	D060902
EFF. W/ OC* 97048	PRIOR TO / OC*	DR. PATRICE GAGNON	DATE: 97-12-01
EFF. W/ VEH.* W 2234, 2285	PRIOR TO / VEH.*	CK. JEAN RUEL	APPR. ROLAND LAPOINTE

REV.	DATE	DESCRIPTION	PAGE	BY	CK.	APPR.
01	97-12-08	NEW HOSTESS CHIME EFF.W/W2301 OC#97150	C, H, 12.1	MJ	JR	
		UPDATE:P. A,C,D,G,H,J,1.1,3.1,4.1,5.1,6.1,7.1,7.2,8.1,9.1,9.2,9.3,10.1,11.1,11.2,11.3,11.4,11.5,12.1,13.1, 13.2,13.3,14.1,15.1,16.1,17.1,18.1,19.1,20.1,20.3,20.5,21.1,22.1,24.2,25.2,26.1,26.2,28.1.		JR	MJ	
02	98-01-08	UPDATE: P. C,7.1,13.1,21.1.		JR	MJ	
03	98-02-02	NEW TEMP. SENSOR ON WTEC III EFF.W/W2338 OC#98009	C	MJ	JR	
04	98-02-05	NEW WEBASTO TIMER EFF.W/W2372 OC#97154	C, 26.1, 26.2	MJ	JR	
05	98-02-17	OPTION CB ADDED	A, 2.1, 20.5, J	S.G.	JR	
		UPDATE	C, 13.3, 23.1	MJ	JR	
06	98-02-19	NEW ARRANGEMENT THERMISTOR HVAC EFF. W/W2459 OC #97152				
		ADD LIQUID SOL. VALVE ON HVAC CENTRAL EFF. W/W2459 OC #98001	C,13.1,13.2	JR	MJ	
07	98-03-11	NEW LOCK SOL. VALVE ON ENTRANCE DOOR SEDAN EFF. W/W2390 OC #97133	16.1	MJ	JR	
		UPDATE	8.1, 12.1	MJ	JR	
08	98-05-05	NEW TRANSMISSION EATON EFF. W/W2589 OC #98031 PAGE: A,E,F,G,H,I,L,1.1,2.1,3.1,4.1, PAGE: 5.1,6.1,6.3,7.1,7.2,15.1		S.G.	JR	
		UPDATE PAGE: B1,B1sp1,B1sp2,K,4.1sp1,4.1sp2,5.1sp1,5.1sp2,8.1,9.1,9.2,9.3,11.2,11.3,13.1,14.1, 15.1sp1,18.1,18.1sp1,18.1sp3,19.1,20.1,22.1,21.1sp1,24.1,24.2,24.3,25.1,25.2,27.1,28.1		S.G.	JR	
09	98-07-02	NEW WIRING HARNESS FOR CLEARANCE LIGHT OC #98028 EFF. W/ X-2638	C	JR	JR	
		RELAY R8 AND R11 REMOVED . OC # 98048 EFF. W/X-2657	C,F,I,2.1,4.1,4.1SP1, 4.1SP2,4.1SP3,5.1, 5.1SP1, 5.1SP2, 6.1 6.3, 8.1,19.1,4.1SP4			
10	98-07-02	NEW WIRING HARNESS FOR A/C IN PARCEL RACK OC #98073 EFF. W/ X-2670	13.3	P.G.	JR	
		NEW WIRING HARNESS FOR 2 SPDS IN HAT RACK BLOWER OC #98069 EFF. W/ X-2726	C, I, 11.3, 13.3	P.G.		
11	98-07-14	HUMIDISTAT REMOVED O.C. #98090 EFF. W/ X-2814	C,13.2	JR	JR	

REV.	DATE	DESCRIPTION	PAGE	BY	CK.	APPR.
12	98-09-17	NEW OPTION FRONT CAMERA O.C.#98117 EFF. W/X2639	A, G, 20.7	S.G.	JR	
		UPDATE PAGE: J,1.1,1.2,2.1,3.1,8.1,13.2SP1,13.2SP2,13.3,20.1,21.1,21.1SP1,23.1		S.G.		
13	98-09	LIQ. SOL. VALVE ADDED ON PASSENGER A/C SYSTEM WB 98-33 EFF. W2285 TO W2457	P. 13.2	J.R.	JR	
14	98-10	RESISTOR ADDED IN SERIAL WITH COIL OF CONDENSER RELAY OC#98112 EFF. X2811	P. J,13.1	J.R.	JR	
15	98-10	CABLE 12VF AND BREAKER CB4 WERE INCREASE OC # 98133 EFF.: X-2871	P. B1,B1SP1,B1SP2,F 1.1,2.1	J.R.	JR	
16	98-11	INTRODUCTION TWO ALTERNAROR BOSCH OC#98012 EFF. X-2831, X-2901...	P. A,B1,C,E,F,G,H,I,J, 1.1,2.1,4.1,4.2,6.1 7.1,8.1,9.1,13.1,13.3, 22.1,23.1,25.1,25.2	J.R.	JR	
17	98-11	UPDATE PAGE: D, 2.1, 5.1SP1, 5.1SP2, 20.3, 20.7, 23.1		S.G.	JR	
17	98-11	ABS DIFFERENTIEL SENSOR EFF. W/X2886 OC#98075	C, G	S.G.	JR	
17	98-11	NEW DRIVER SPEAKER EFF.W/X2946 OC#98161	20.1	S.G.	JR	
18	98-12	UPDATE	4.1 sp4	S.G.	JR	
19	99-01	UPDATE BOSCH ALTERNATOR CIRCUIT	P. 1.1, 4.1, 4.2	J.R.	JR	
20	99-01	ENGINE DOOR SW. REPLACED O.C. # 98135 EFF. / X3022	P. C, 11.1	J.R.	JR	
21	99-01	INTRODUCTION ELECTRONIC CONTROL FOR BOSCH ALTERNATOR EFF./ X3033	P. 4.2 , M	J.R.	JR	
22	99-01	UPDTATE	9.2sp2, 11.3sp2	S.G.	JR	
23	99-04	RESISTOR ADDED ON OPEN ENT. DOOR SOLENOID O.C.#99050 EFF. X-3190	P. J,16.1	J.R.	JR	
24	99-04	INTRODUCTION NEW CHARGER VANNER 41 AMP. 0C# 99008 EFF./ X3213	P. B1,B1sp1,B1sp2, B2,C,2.1,4.2,5.1, 8.1,11.4	J.R.	JR	

WIRING DIAGRAM INDEX

A	A/C, HEAT & VENT. SYSTEM	Page:	13.1
	AIR DRYER	Page:	8.1
	ALARM & SIGNAL	Page:	7.2
	ABS	Page:	21.1
	ARRANGEMENT - CABLE	Page:	B
	ARRANGEMENT - HARNESS	Page:	C
	ARRANGEMENT - SPARE WIRE	Page:	D
B	BACK-UP ALARM	Page:	9.3
	BACK-UP MONITOR	Page:	27.1
	BATTERY STANDARD AND 8D	Page:	1.2
C	CLUSTER	Page:	7.1
	CHARGING SYSTEM	Page:	4.1
	CIGAR LIGHTER	Page:	14.1
	CODE - CIRCUIT NUMBER	Page:	E
	CODE - CIRCUIT BREAKER	Page:	F
	CODE - CONNECTOR	Page:	G
	CODE - DIODE	Page:	H
	CODE - RELAY	Page:	I
	CODE - RESISTOR	Page:	J
	CODE - WIRING KEY	Page:	K
	CODE - FUSE	Page:	L
	CODE - MODULE	Page:	M
	CRUISE CONTROL - DDEC	Page:	5.1
D	DDEC III	Page:	5.1
	DIGITAL CLOCK	Page:	14.1
	DISTRIBUTION 12V, 24V	Page:	1.1
	DISTRIB. 12V DISC., IGN & HOT WIRE	Page:	2.1
	DRIVER'S WINDOW LIFTER	Page:	14.1
E	ENGINE BLOCK HEATER	Page:	12.1
	ENGINE BREAKE SYSTEM	Page:	19.1
	ENGINE CONTROL	Page:	4.1
	ENTRANCE DOOR SEDAN	Page:	16.1
	ETHER COLD START	Page:	8.1
	EXTERIOR LIGHTIHG	Page:	9.1
F	FAN-CLUTCH RADIATOR	Page:	8.1
	FAST IDLE - DDEC	Page:	5.1
	FIRE DETECTOR	Page:	7.2
	FRONT DESTINATION SIGN	Page:	17.1
	FUEL WATER FILTER	Page:	8.1
	FUEL PRIME PUMP	Page:	12.1
G	GALLEY ACCESSORIES	Page:	23.1
	GROUND SYSTEM	Page:	3.1
H	HIGH BUOY	Page:	18.1
	HOTESS CHIME	Page:	12.1
I	INTERIOR LIGHTING	Page:	11.1
	INTERCOM	Page:	27.1
K	KNEELING SYSTEM	Page:	18.1
L	LAVATORY	Page:	17.1
	LOW BUOY	Page:	18.1
	LUGGAGE DOOR LOCK	Page:	19.1
M	MIRROR-REAR VIEW	Page:	24.1
P	PARKING BREAKE SWITCH	Page:	8.1
	POWER 12V OUTLET	Page:	14.1
	PRODRIVER	Page:	8.1
R	RETARDER - WORLD TRANSM.	Page:	19.1
S	SOUND & VIDEO SYSTEM	Page:	20.1
	SUN VISOR	Page:	14.1
T	TELL TALE LIGHT MODULES	Page	28.1
	TRANSMISSION - MANUAL	Page:	22.1
	TRANSMISSION - WORLD	Page:	6.1
W	WATER HEATER PRE-HEAT	Page:	26.1
	WATER TANK HEATER LAVATORY	Page:	12.1
	WHEEL CHAIR LIFT - RICHON 9000	Page:	25.2
	WHEEL CHAIR LIFT - STEW. & STEV.	Page:	25.1
	WINDOW AJAR	Page:	7.2
	WINDSHIELD (UP) FAN DEFROSTOR	Page:	22.1
	WINDSHIELD (UP) HEATED	Page:	22.1
	WIPER & WASHER	Page:	10.1

WIRING DIAGRAM INDEX

A	A/C, HEAT & VENT. SYSTEM	Page:	13.1
	AIR DRYER	Page:	8.1
	ALARM & SIGNAL	Page:	7.2
	ABS	Page:	21.1
	ARRANGEMENT - CABLE	Page:	B
	ARRANGEMENT - HARNESS	Page:	C
	ARRANGEMENT - SPARE WIRE	Page:	D
B	BACK-UP ALARM	Page:	9.3
	BACK-UP MONITOR	Page:	27.1
	BATTERY CHARGER	Page:	11.4
	BATTERY STANDARD AND 8D	Page:	1.2
C	CLUSTER	Page:	7.1
	CHARGING SYSTEM	Page:	4.1
	CIGAR LIGHTER	Page:	14.1
	CODE - CIRCUIT NUMBER	Page:	E
	CODE - CIRCUIT BREAKER	Page:	F
	CODE - CONNECTOR	Page:	G
	CODE - DIODE	Page:	H
	CODE - RELAY	Page:	I
	CODE - RESISTOR	Page:	J
	CODE - WIRING KEY	Page:	K
	CODE - FUSE	Page:	L
	CODE - MODULE	Page:	M
	CRUISE CONTROL - DDEC	Page:	5.1
D	DDEC III & IV	Page:	5.1
	DIGITAL CLOCK	Page:	14.1
	DISTRIBUTION 12V, 24V	Page:	1.1
	DISTRIB. 12V DISC., IGN & HOT WIRE	Page:	2.1
	DRIVER'S WINDOW LIFTER	Page:	14.1
E	ENGINE BLOCK HEATER	Page:	12.1
	ENGINE BRAKE SYSTEM	Page:	19.1
	ENGINE CONTROL	Page:	4.1
	ENTRANCE DOOR SEDAN	Page:	16.1
	ETHER COLD START	Page:	8.1
	EXTERIOR LIGHTIHG	Page:	9.1
F	FAN-CLUTCH RADIATOR	Page:	8.1
	FAST IDLE - DDEC	Page:	5.1
	FIRE DETECTOR	Page:	7.2
	FRONT DESTINATION SIGN	Page:	17.1
	FUEL WATER FILTER	Page:	8.1
	FUEL PRIME PUMP	Page:	12.1
G	GALLEY ACCESSORIES	Page:	23.1
	GROUND SYSTEM	Page:	3.1
H	HIGH BUOY	Page:	18.1
	HOTESS CHIME	Page:	12.1
I	INTERIOR LIGHTING	Page:	11.1
	INTERCOM	Page:	27.1
K	KNEELING SYSTEM	Page:	18.1
L	LAVATORY	Page:	17.1
	LOW BUOY	Page:	18.1
	LUGGAGE DOOR LOCK	Page:	19.1
M	MIRROR-REAR VIEW	Page:	24.1
P	PARKING BRAKE SWITCH	Page:	8.1
	POWER 12V OUTLET	Page:	14.1
	PRODRIVER	Page:	8.1
R	RETARDER - WORLD TRANSM.	Page:	19.1
S	SPEED SWITCH (MANUAL TRANS.)		15.1
	SOUND & VIDEO SYSTEM	Page:	20.1
	SPEAKER PASSENGER	Page:	20.2
	SUN VISOR	Page:	14.1
T	TELL TALE LIGHT MODULES	Page	28.1
	TRANSMISSION - MANUAL	Page:	15.1
	TRANSMISSION - WORLD	Page:	6.1
W	WATER HEATER PRE-HEAT	Page:	26.1
	WATER TANK HEATER LAVATORY	Page:	12.1
	WHEEL CHAIR LIFT - RICHON 9000	Page:	25.2
	WHEEL CHAIR LIFT - STEW. & STEV.	Page:	25.1
	WINDOW AJAR	Page:	7.2
	WINDSHIELD (UP) FAN DEFROSTOR	Page:	22.1
	WINDSHIELD (UP) HEATED	Page:	22.1
	WIPER & WASHER	Page:	10.1

WIRING DIAGRAM INDEX

A	A/C, HEAT & VENT. SYSTEM	Page:	13.1
	AIR DRYER	Page:	8.1
	ALARM & SIGNAL	Page:	7.2
	ABS	Page:	21.1
	ARRANGEMENT - CABLE	Page:	B
	ARRANGEMENT - HARNESS	Page:	C
	ARRANGEMENT - SPARE WIRE	Page:	D
B	BACK-UP ALARM	Page:	9.3
	BACK-UP MONITOR	Page:	27.1
	BATTERY CHARGER	Page:	11.4
	BATTERY STANDARD AND 8D	Page:	1.2
C	CLUSTER	Page:	7.1
	CHARGING SYSTEM	Page:	4.1
	CIGAR LIGHTER	Page:	14.1
	CODE - CIRCUIT NUMBER	Page:	E
	CODE - CIRCUIT BREAKER	Page:	F
	CODE - CONNECTOR	Page:	G
	CODE - DIODE	Page:	H
	CODE - RELAY	Page:	I
	CODE - RESISTOR	Page:	J
	CODE - WIRING KEY	Page:	K
	CODE - FUSE	Page:	L
	CODE - MODULE	Page:	M
	CRUISE CONTROL - DDEC	Page:	5.1
	CB OPTION	Page:	20.5
D	DDEC III & IV	Page:	5.1
	DIGITAL CLOCK	Page:	14.1
	DISTRIBUTION 12V, 24V	Page:	1.1
	DISTRIB. 12V DISC., IGN & HOT WIRE	Page:	2.1
	DRIVER'S WINDOW LIFTER	Page:	14.1
E	ENGINE BLOCK HEATER	Page:	12.1
	ENGINE BRAKE SYSTEM	Page:	19.1
	ENGINE CONTROL	Page:	4.1
	ENTRANCE DOOR SEDAN	Page:	16.1
	ETHER COLD START	Page:	8.1
	EXTERIOR LIGHTIHG	Page:	9.1
F	FAN-CLUTCH RADIATOR	Page:	8.1
	FAST IDLE - DDEC	Page:	5.1
	FIRE DETECTOR	Page:	7.2
	FRONT DESTINATION SIGN	Page:	17.1
	FUEL WATER FILTER	Page:	8.1
	FUEL PRIME PUMP	Page:	12.1
G	GALLEY ACCESSORIES	Page:	23.1
	GROUND SYSTEM	Page:	3.1
H	HIGH BUOY	Page:	18.1
	HOTESS CHIME	Page:	12.1
I	INTERIOR LIGHTING	Page:	11.1
	INTERCOM	Page:	27.1
K	KNEELING SYSTEM	Page:	18.1
L	LAVATORY	Page:	17.1
	LOW BUOY	Page:	18.1
	LUGGAGE DOOR LOCK	Page:	19.1
M	MIRROR-REAR VIEW	Page:	24.1
P	PARKING BRAKE SWITCH	Page:	8.1
	POWER 12V OUTLET	Page:	14.1
	PRODRIVER	Page:	8.1
R	RETARDER - WORLD TRANSM.	Page:	19.1
S	SPEED SWITCH (MANUAL TRANS.)		15.1
	SOUND & VIDEO SYSTEM	Page:	20.1
	SPEAKER PASSENGER	Page:	20.2
	SUN VISOR	Page:	14.1
T	TELL TALE LIGHT MODULES	Page	28.1
	TRANSMISSION - MANUAL	Page:	15.1
	TRANSMISSION - WORLD	Page:	6.1
W	WATER HEATER PRE-HEAT	Page:	26.1
	WATER TANK HEATER LAVATORY	Page:	12.1
	WHEEL CHAIR LIFT - RICHON 9000	Page:	25.2
	WHEEL CHAIR LIFT - STEW. & STEV.	Page:	25.1
	WINDOW AJAR	Page:	7.2
	WINDSHIELD (UP) FAN DEFROSTOR	Page:	22.1
	WINDSHIELD (UP) HEATED	Page:	22.1
	WIPER & WASHER	Page:	10.1

WIRING DIAGRAM INDEX

A	A/C, HEAT & VENT. SYSTEM	Page:	13.1
	AIR DRYER	Page:	8.1
	ALARM & SIGNAL	Page:	7.2
	ABS	Page:	21.1
	ARRANGEMENT - CABLE	Page:	B
	ARRANGEMENT - HARNESS	Page:	C
	ARRANGEMENT - SPARE WIRE	Page:	D
B	BACK-UP ALARM	Page:	9.3
	BACK-UP MONITOR	Page:	27.1
	BATTERY CHARGER	Page:	11.4
	BATTERY STANDARD AND 8D	Page:	1.2
C	CLUSTER	Page:	7.1
	CHARGING SYSTEM	Page:	4.1
	CIGAR LIGHTER	Page:	14.1
	CODE - CIRCUIT NUMBER	Page:	E
	CODE - CIRCUIT BREAKER	Page:	F
	CODE - CONNECTOR	Page:	G
	CODE - DIODE	Page:	H
	CODE - RELAY	Page:	I
	CODE - RESISTOR	Page:	J
	CODE - WIRING KEY	Page:	K
	CODE - FUSE	Page:	L
	CODE - MODULE	Page:	M
	CRUISE CONTROL - DDEC	Page:	5.1
	CB OPTION	Page:	20.5
D	DDEC III & IV	Page:	5.1
	DIGITAL CLOCK	Page:	14.1
	DISTRIBUTION 12V, 24V	Page:	1.1
	DISTRIB. 12V DISC., IGN & HOT WIRE	Page:	2.1
	DRIVER'S WINDOW LIFTER	Page:	14.1
E	ENGINE BLOCK HEATER	Page:	12.1
	ENGINE BRAKE SYSTEM	Page:	19.1
	ENGINE CONTROL	Page:	4.1
	ENTRANCE DOOR SEDAN	Page:	16.1
	ETHER COLD START	Page:	8.1
	EXTERIOR LIGHTIHG	Page:	9.1
F	FAN-CLUTCH RADIATOR	Page:	8.1
	FAST IDLE - DDEC	Page:	5.1
	FIRE DETECTOR	Page:	7.2
	FRONT DESTINATION SIGN	Page:	17.1
	FUEL WATER FILTER	Page:	8.1
	FUEL PRIME PUMP	Page:	12.1
G	GALLEY ACCESSORIES	Page:	23.1
	GROUND SYSTEM	Page:	3.1
H	HIGH BUOY	Page:	18.1
	HOTESS CHIME	Page:	12.1
I	INTERIOR LIGHTING	Page:	11.1
	INTERCOM	Page:	27.1
K	KNEELING SYSTEM	Page:	18.1
L	LAVATORY	Page:	17.1
	LOW BUOY	Page:	18.1
	LUGGAGE DOOR LOCK	Page:	19.1
M	MIRROR-REAR VIEW	Page:	24.1
P	PARKING BRAKE SWITCH	Page:	8.1
	POWER 12V OUTLET	Page:	14.1
	PRODRIVER	Page:	8.1
R	RETARDER - WORLD TRANSM.	Page:	19.1
S	SPEED SWITCH (MANUAL TRANS.)		15.1
	SOUND & VIDEO SYSTEM	Page:	20.1
	SPEAKER PASSENGER	Page:	20.2
	SUN VISOR	Page:	14.1
T	TELL TALE LIGHT MODULES	Page	28.1
	TRANSMISSION - MANUAL	Page:	15.1
	TRANSMISSION - WORLD	Page:	6.1
	TRANSMISSION - EATON	Page:	6.3
W	WATER HEATER PRE-HEAT	Page:	26.1
	WATER TANK HEATER LAVATORY	Page:	12.1
	WHEEL CHAIR LIFT - RICON 9000	Page:	25.2
	WHEEL CHAIR LIFT - STEW. & STEV.	Page:	25.1
	WINDOW AJAR	Page:	7.2
	WINDSHIELD (UP) FAN DEFROSTOR	Page:	22.1
	WINDSHIELD (UP) HEATED	Page:	22.1
	WIPER & WASHER	Page:	10.1

WIRING DIAGRAM INDEX

A	A/C, HEAT & VENT. SYSTEM	Page:	13.1
	AIR DRYER	Page:	8.1
	ALARM & SIGNAL	Page:	7.2
	ABS	Page:	21.1
	ARRANGEMENT - CABLE	Page:	B
	ARRANGEMENT - HARNESS	Page:	C
	ARRANGEMENT - SPARE WIRE	Page:	D
B	BACK-UP ALARM	Page:	9.3
	BACK-UP MONITOR	Page:	27.1
	BATTERY CHARGER	Page:	11.4
	BATTERY STANDARD AND 8D	Page:	1.2
C	CLUSTER	Page:	7.1
	CHARGING SYSTEM	Page:	4.1
	CIGAR LIGHTER	Page:	14.1
	CODE - CIRCUIT NUMBER	Page:	E
	CODE - CIRCUIT BREAKER	Page:	F
	CODE - CONNECTOR	Page:	G
	CODE - DIODE	Page:	H
	CODE - RELAY	Page:	I
	CODE - RESISTOR	Page:	J
	CODE - WIRING KEY	Page:	K
	CODE - FUSE	Page:	L
	CODE - MODULE	Page:	M
	CRUISE CONTROL - DDEC	Page:	5.1
	CB OPTION	Page:	20.5
D	DDEC III & IV	Page:	5.1
	DIGITAL CLOCK	Page:	14.1
	DISTRIBUTION 12V, 24V	Page:	1.1
	DISTRIB. 12V DISC., IGN & HOT WIRE	Page:	2.1
	DRIVER'S WINDOW LIFTER	Page:	14.1
E	ENGINE BLOCK HEATER	Page:	12.1
	ENGINE BRAKE SYSTEM	Page:	19.1
	ENGINE CONTROL	Page:	4.1
	ENTRANCE DOOR SEDAN	Page:	16.1
	ETHER COLD START	Page:	8.1
	EXTERIOR LIGHTIHG	Page:	9.1
F	FAN-CLUTCH RADIATOR	Page:	8.1
	FAST IDLE - DDEC	Page:	5.1
	FIRE DETECTOR	Page:	7.2
	FRONT DESTINATION SIGN	Page:	17.1
	FRONT CAMERA	Page:	20.7
	FUEL WATER FILTER	Page:	8.1
	FUEL PRIME PUMP	Page:	12.1
G	GALLEY ACCESSORIES	Page:	23.1
	GROUND SYSTEM	Page:	3.1
H	HIGH BUOY	Page:	18.1
	HOTESS CHIME	Page:	12.1
I	INTERIOR LIGHTING	Page:	11.1
	INTERCOM	Page:	27.1
K	KNEELING SYSTEM	Page:	18.1
L	LAVATORY	Page:	17.1
	LOW BUOY	Page:	18.1
	LUGGAGE DOOR LOCK	Page:	19.1
M	MIRROR-REAR VIEW	Page:	24.1
P	PARKING BRAKE SWITCH	Page:	8.1
	POWER 12V OUTLET	Page:	14.1
	PRODRIVER	Page:	8.1
R	RETARDER - WORLD TRANSM.	Page:	19.1
S	SPEED SWITCH (MANUAL TRANS.)		15.1
	SOUND & VIDEO SYSTEM	Page:	20.1
	SPEAKER PASSENGER	Page:	20.2
	SUN VISOR	Page:	14.1
T	TELL TALE LIGHT MODULES	Page	28.1
	TRANSMISSION - MANUAL	Page:	15.1
	TRANSMISSION - WORLD	Page:	6.1
	TRANSMISSION - EATON	Page:	6.3
W	WATER HEATER PRE-HEAT	Page:	26.1
	WATER TANK HEATER LAVATORY	Page:	12.1
	WHEEL CHAIR LIFT - RICON 9000	Page:	25.2
	WHEEL CHAIR LIFT - STEW. & STEV.	Page:	25.1
	WINDOW AJAR	Page:	7.2
	WINDSHIELD (UP) FAN DEFROSTOR	Page:	22.1
	WINDSHIELD (UP) HEATED	Page:	22.1
	WIPER & WASHER	Page:	10.1

WIRING DIAGRAM INDEX

A	A/C, HEAT & VENT. SYSTEM	Page:	13.1
	AIR DRYER	Page:	8.1
	ALARM & SIGNAL	Page:	7.2
	ABS	Page:	21.1
	ARRANGEMENT - CABLE	Page:	B
	ARRANGEMENT - HARNESS	Page:	C
	ARRANGEMENT - SPARE WIRE	Page:	D
B	BACK-UP ALARM	Page:	9.3
	BACK-UP MONITOR	Page:	27.1
	BATTERY CHARGER	Page:	11.4
	BATTERY STANDARD AND 8D	Page:	1.2
C	CLUSTER	Page:	7.1
	CHARGING SYSTEM	Page:	4.2
	CIGAR LIGHTER	Page:	14.1
	CODE - CIRCUIT NUMBER	Page:	E
	CODE - CIRCUIT BREAKER	Page:	F
	CODE - CONNECTOR	Page:	G
	CODE - DIODE	Page:	H
	CODE - RELAY	Page:	I
	CODE - RESISTOR	Page:	J
	CODE - WIRING KEY	Page:	K
	CODE - FUSE	Page:	L
	CODE - MODULE	Page:	M
	CRUISE CONTROL - DDEC	Page:	5.1
	CB OPTION	Page:	20.5
D	DDEC III & IV	Page:	5.1
	DIGITAL CLOCK	Page:	14.1
	DISTRIBUTION 12V, 24V	Page:	1.1
	DISTRIB. 12V DISC., IGN & HOT WIRE	Page:	2.1
	DRIVER'S WINDOW LIFTER	Page:	14.1
E	ENGINE BLOCK HEATER	Page:	12.1
	ENGINE BRAKE SYSTEM	Page:	19.1
	ENGINE CONTROL	Page:	4.1
	ENTRANCE DOOR SEDAN	Page:	16.1
	ETHER COLD START	Page:	8.1
	EXTERIOR LIGHTIHG	Page:	9.1
F	FAN-CLUTCH RADIATOR	Page:	8.1
	FAST IDLE - DDEC	Page:	5.1
	FIRE DETECTOR	Page:	7.2
	FRONT DESTINATION SIGN	Page:	17.1
	FRONT CAMERA	Page:	20.7
	FUEL WATER FILTER	Page:	8.1
	FUEL PRIME PUMP	Page:	12.1
G	GALLEY ACCESSORIES	Page:	23.1
	GROUND SYSTEM	Page:	3.1
H	HIGH BUOY	Page:	18.1
	HOTESS CHIME	Page:	12.1
I	INTERIOR LIGHTING	Page:	11.1
	INTERCOM	Page:	27.1
K	KNEELING SYSTEM	Page:	18.1
L	LAVATORY	Page:	17.1
	LOW BUOY	Page:	18.1
	LUGGAGE DOOR LOCK	Page:	19.1
M	MIRROR-REAR VIEW	Page:	24.1
P	PARKING BRAKE SWITCH	Page:	8.1
	POWER 12V OUTLET	Page:	14.1
	PRODRIVER	Page:	8.1
R	RETARDER - WORLD TRANSM.	Page:	19.1
S	SPEED SWITCH (MANUAL TRANS.)		15.1
	SOUND & VIDEO SYSTEM	Page:	20.1
	SPEAKER PASSENGER	Page:	20.2
	SUN VISOR	Page:	14.1
T	TELL TALE LIGHT MODULES	Page	28.1
	TRANSMISSION - MANUAL	Page:	15.1
	TRANSMISSION - WORLD	Page:	6.1
	TRANSMISSION - EATON	Page:	6.3
W	WATER HEATER PRE-HEAT	Page:	26.1
	WATER TANK HEATER LAVATORY	Page:	12.1
	WHEEL CHAIR LIFT - RICON 9000	Page:	25.2
	WHEEL CHAIR LIFT - STEW. & STEV.	Page:	25.1
	WINDOW AJAR	Page:	7.2
	WINDSHIELD (UP) FAN DEFROSTOR	Page:	22.1
	WINDSHIELD (UP) HEATED	Page:	22.1
	WIPER & WASHER	Page:	10.1

BATT. CPT
JCT BLOCK "C

(00-16)
(00-12)

063906
TO DDEC
ECM GROUND
TO DDEC
BREAKERS
TO WORLD TR.
BREAKER

151-12
150A-12
150-12
12W-12
12W-12
063907 (136V-10)

GRD ELECTRONIC
JUNCTION BLOCK
12V ELECTRONIC
JUNCTION BLOCK
12V ELECTRICAL
JUNCTION BLOCK

R54
86
85
30
87
063907 (12-10)
063907 (12R-10)
R55
063907 (12-10)
063907 (12F-10)
063907 (12I-10)
063907 (12D-10)

(00-12)

BOOSTER BLOCK
POSITIVE POST
063907 (24S-16)

GROUND FROM DASH CUT OUT SW.
GROUND FROM GENERATOR RUN RLY (R78)

BATT. CPT
SAFETY CUT OUT SW
(0MR-18)
(0MS-18)
(0MS-18)

063595 (24A-2/0)
063907 (24D-10)
24V DISCONNECT
CUT OUT RLY
86
85

CHASSIS GROUND

063621 (101-4/0)

FROM 24V BATTERY
SEE PAGE B2
063591 (24-4/0)

063907 (24D-10)
063593 (24E-2/0)

BATT. CPT
12V HOT WIRE
JCT BLOCK "A

TO STARTER
RLY (R4)

063907 (12D-10)
063907 (12F-10)
063907 (12R-10)
063907 (12I-10)
063907 (12IA-10)
IGNITION SIGNAL
30
86
87
85
R2

BATT. CPT
24V HOT WIRE
JCT BLOCK "B

063907 (24B-8)

GENERATOR
24V-270
DC+
063297
(102-270)
STARTER
063621 (101-4/0)
062214 (0C-2/0)
062212 (0B-2/0)

CB5 30A
CB7 90A
CB8 150A
CB6 90A
CB2 30A
CB4 40A
CB3 40A
CB1 40A

(24VD-10)
(24VF-4)
(24VD-10)
(12VF-8)
(12VD-10)
(12VI-10)

(90D-1)
(90B-10)
(90C-10)
(24VR-4)
(12VD-10)
(12VF-8)
(12VR-4)

BATT. CPT
12V IGNITION
JCT BLOCK "E

063907 (12VI-10)

(00-16)

064402

EVAPORATOR
FAN JCT BLOCK
(90D-1)
CONDENSER
FAN RH MOTOR
(41-10)
CONDENSER
FAN LH MOTOR
(42-10)

CB77 40A
CB78 40A

064401

064488 (24VR-4)

(24VD-10)
(12VD-10)
(12VR-10)
(12VI-10)
(00-12)

(24VF-4)
(24VD-10)
(12VF-8)
(12VD-10)
(12VI-10)

0V BATT.
24V
24VD
12V
12VD
12VI

FRONT JUNCTION BOX

24VD
24V
12VD
12V
12VI
0V BATT.

REAR JUNCTION BOX

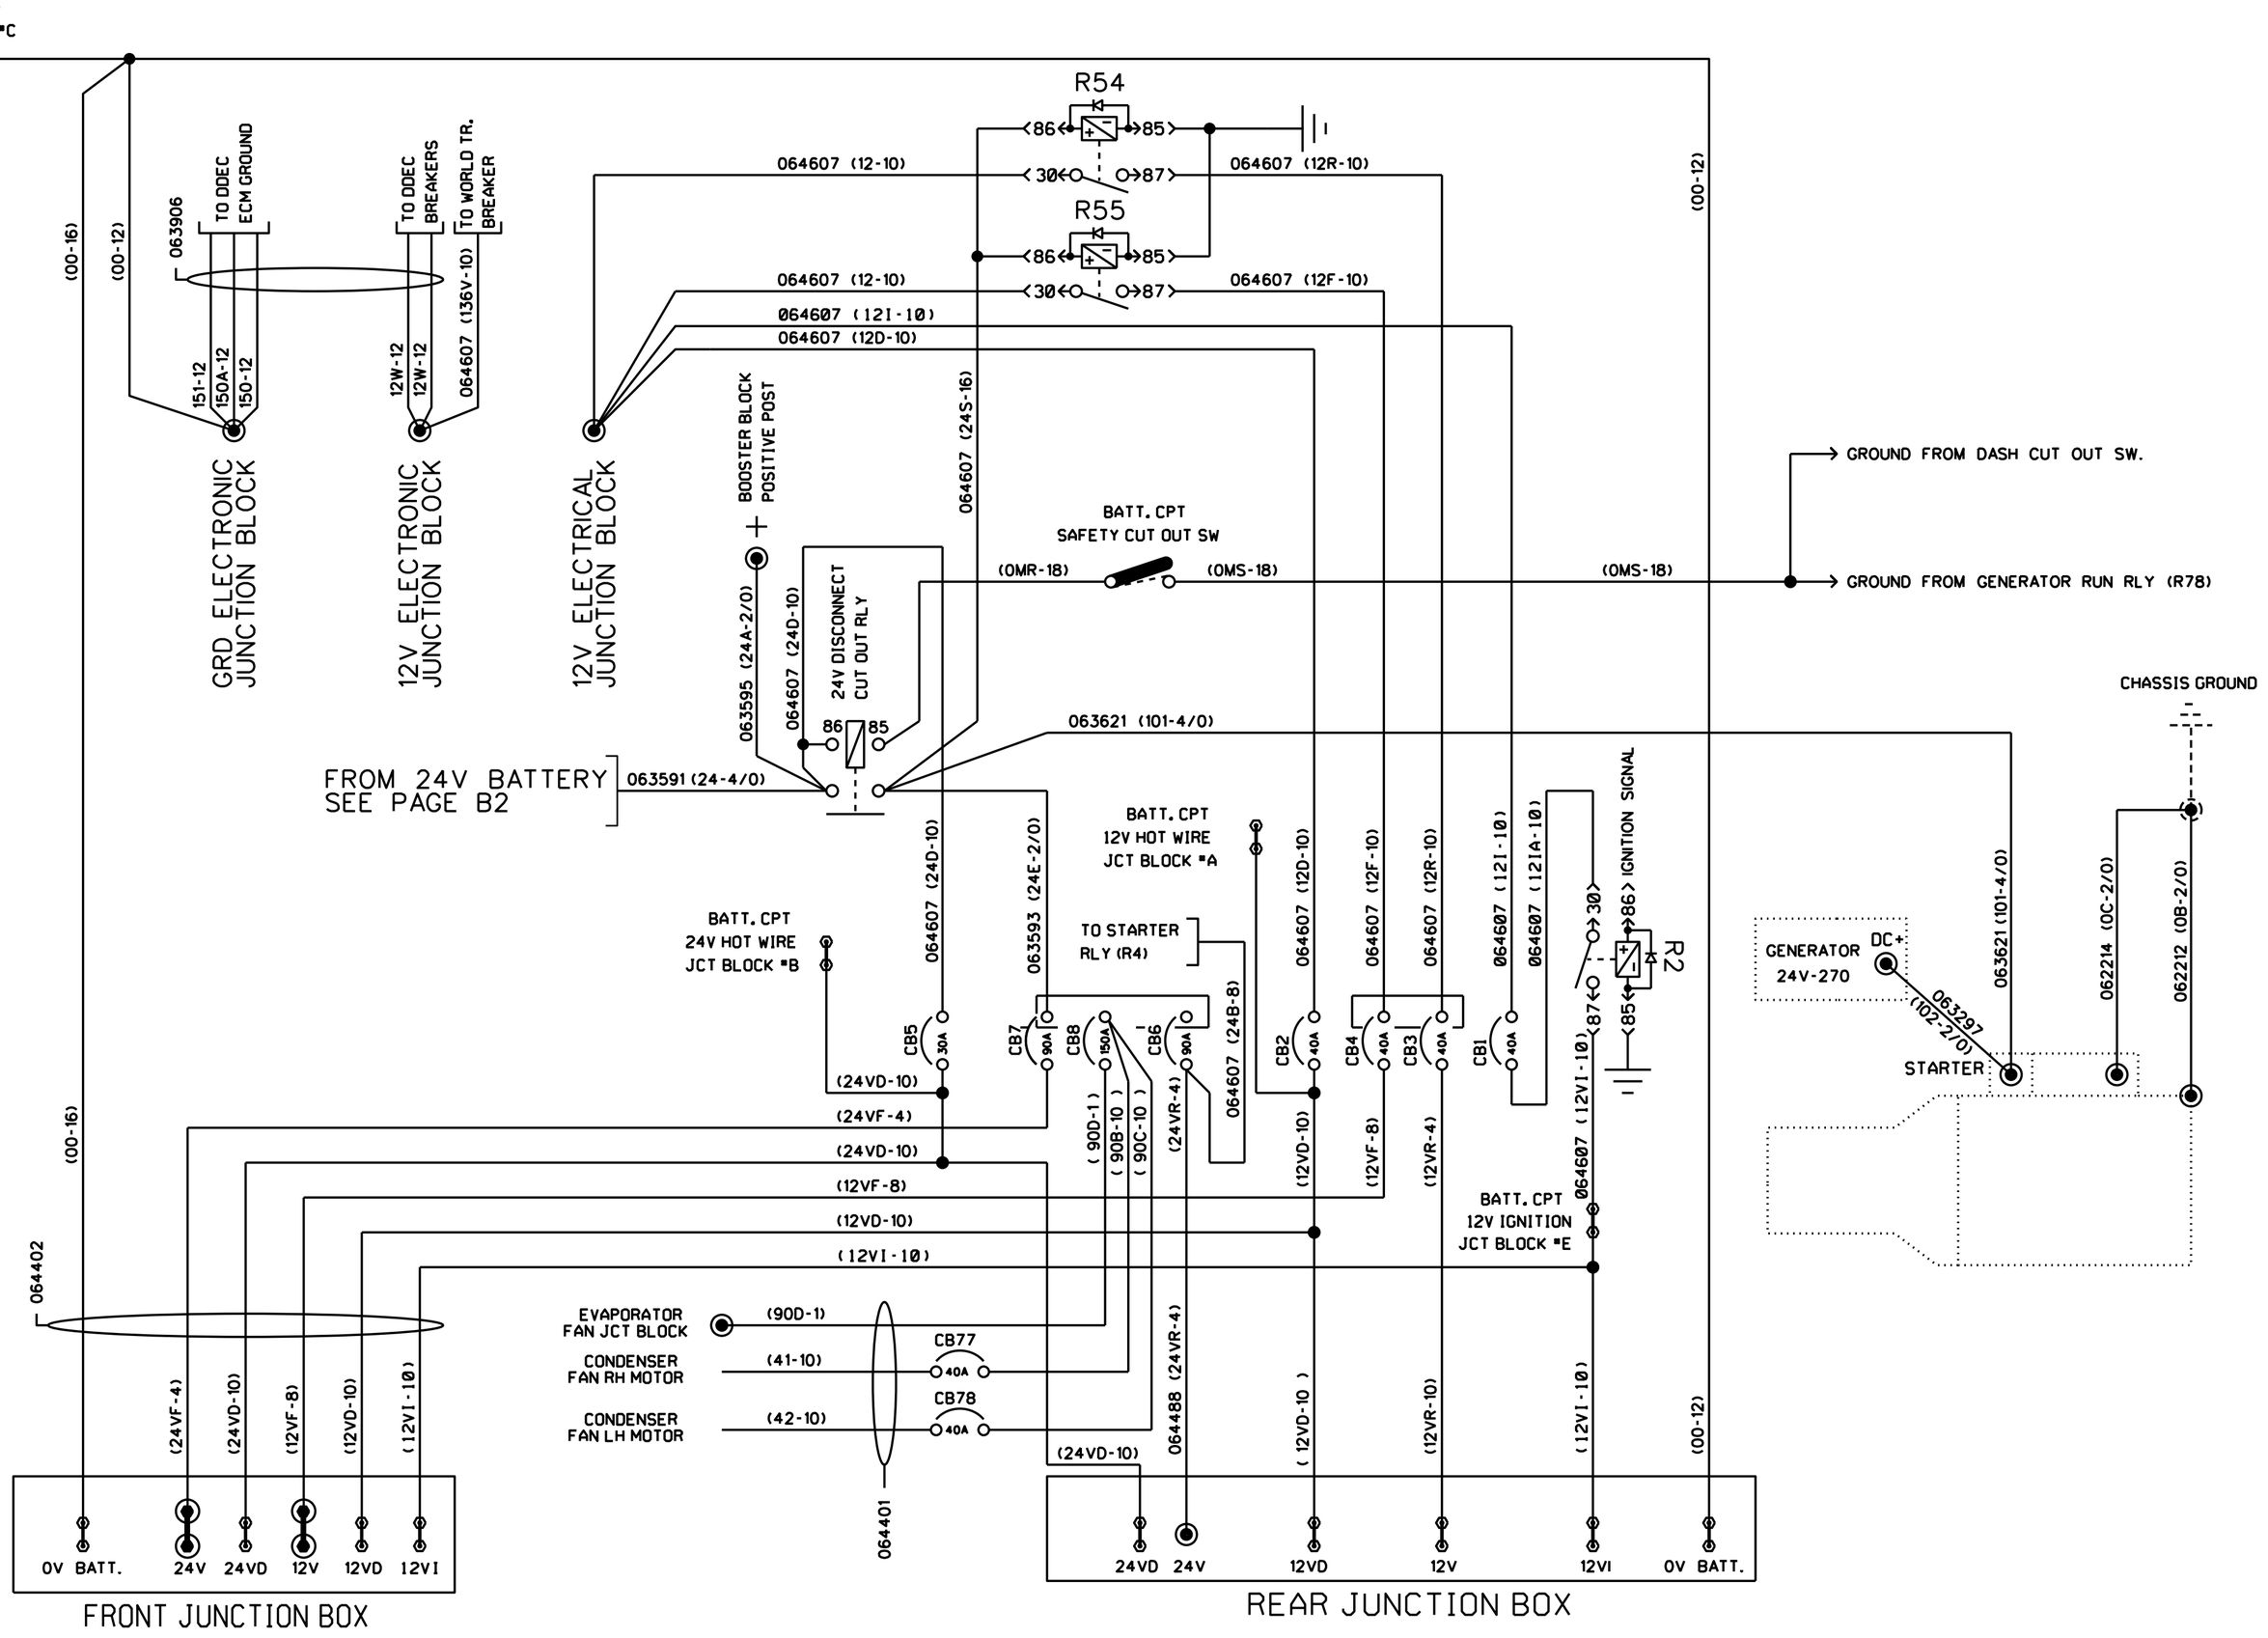

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: B1	REVISION 08

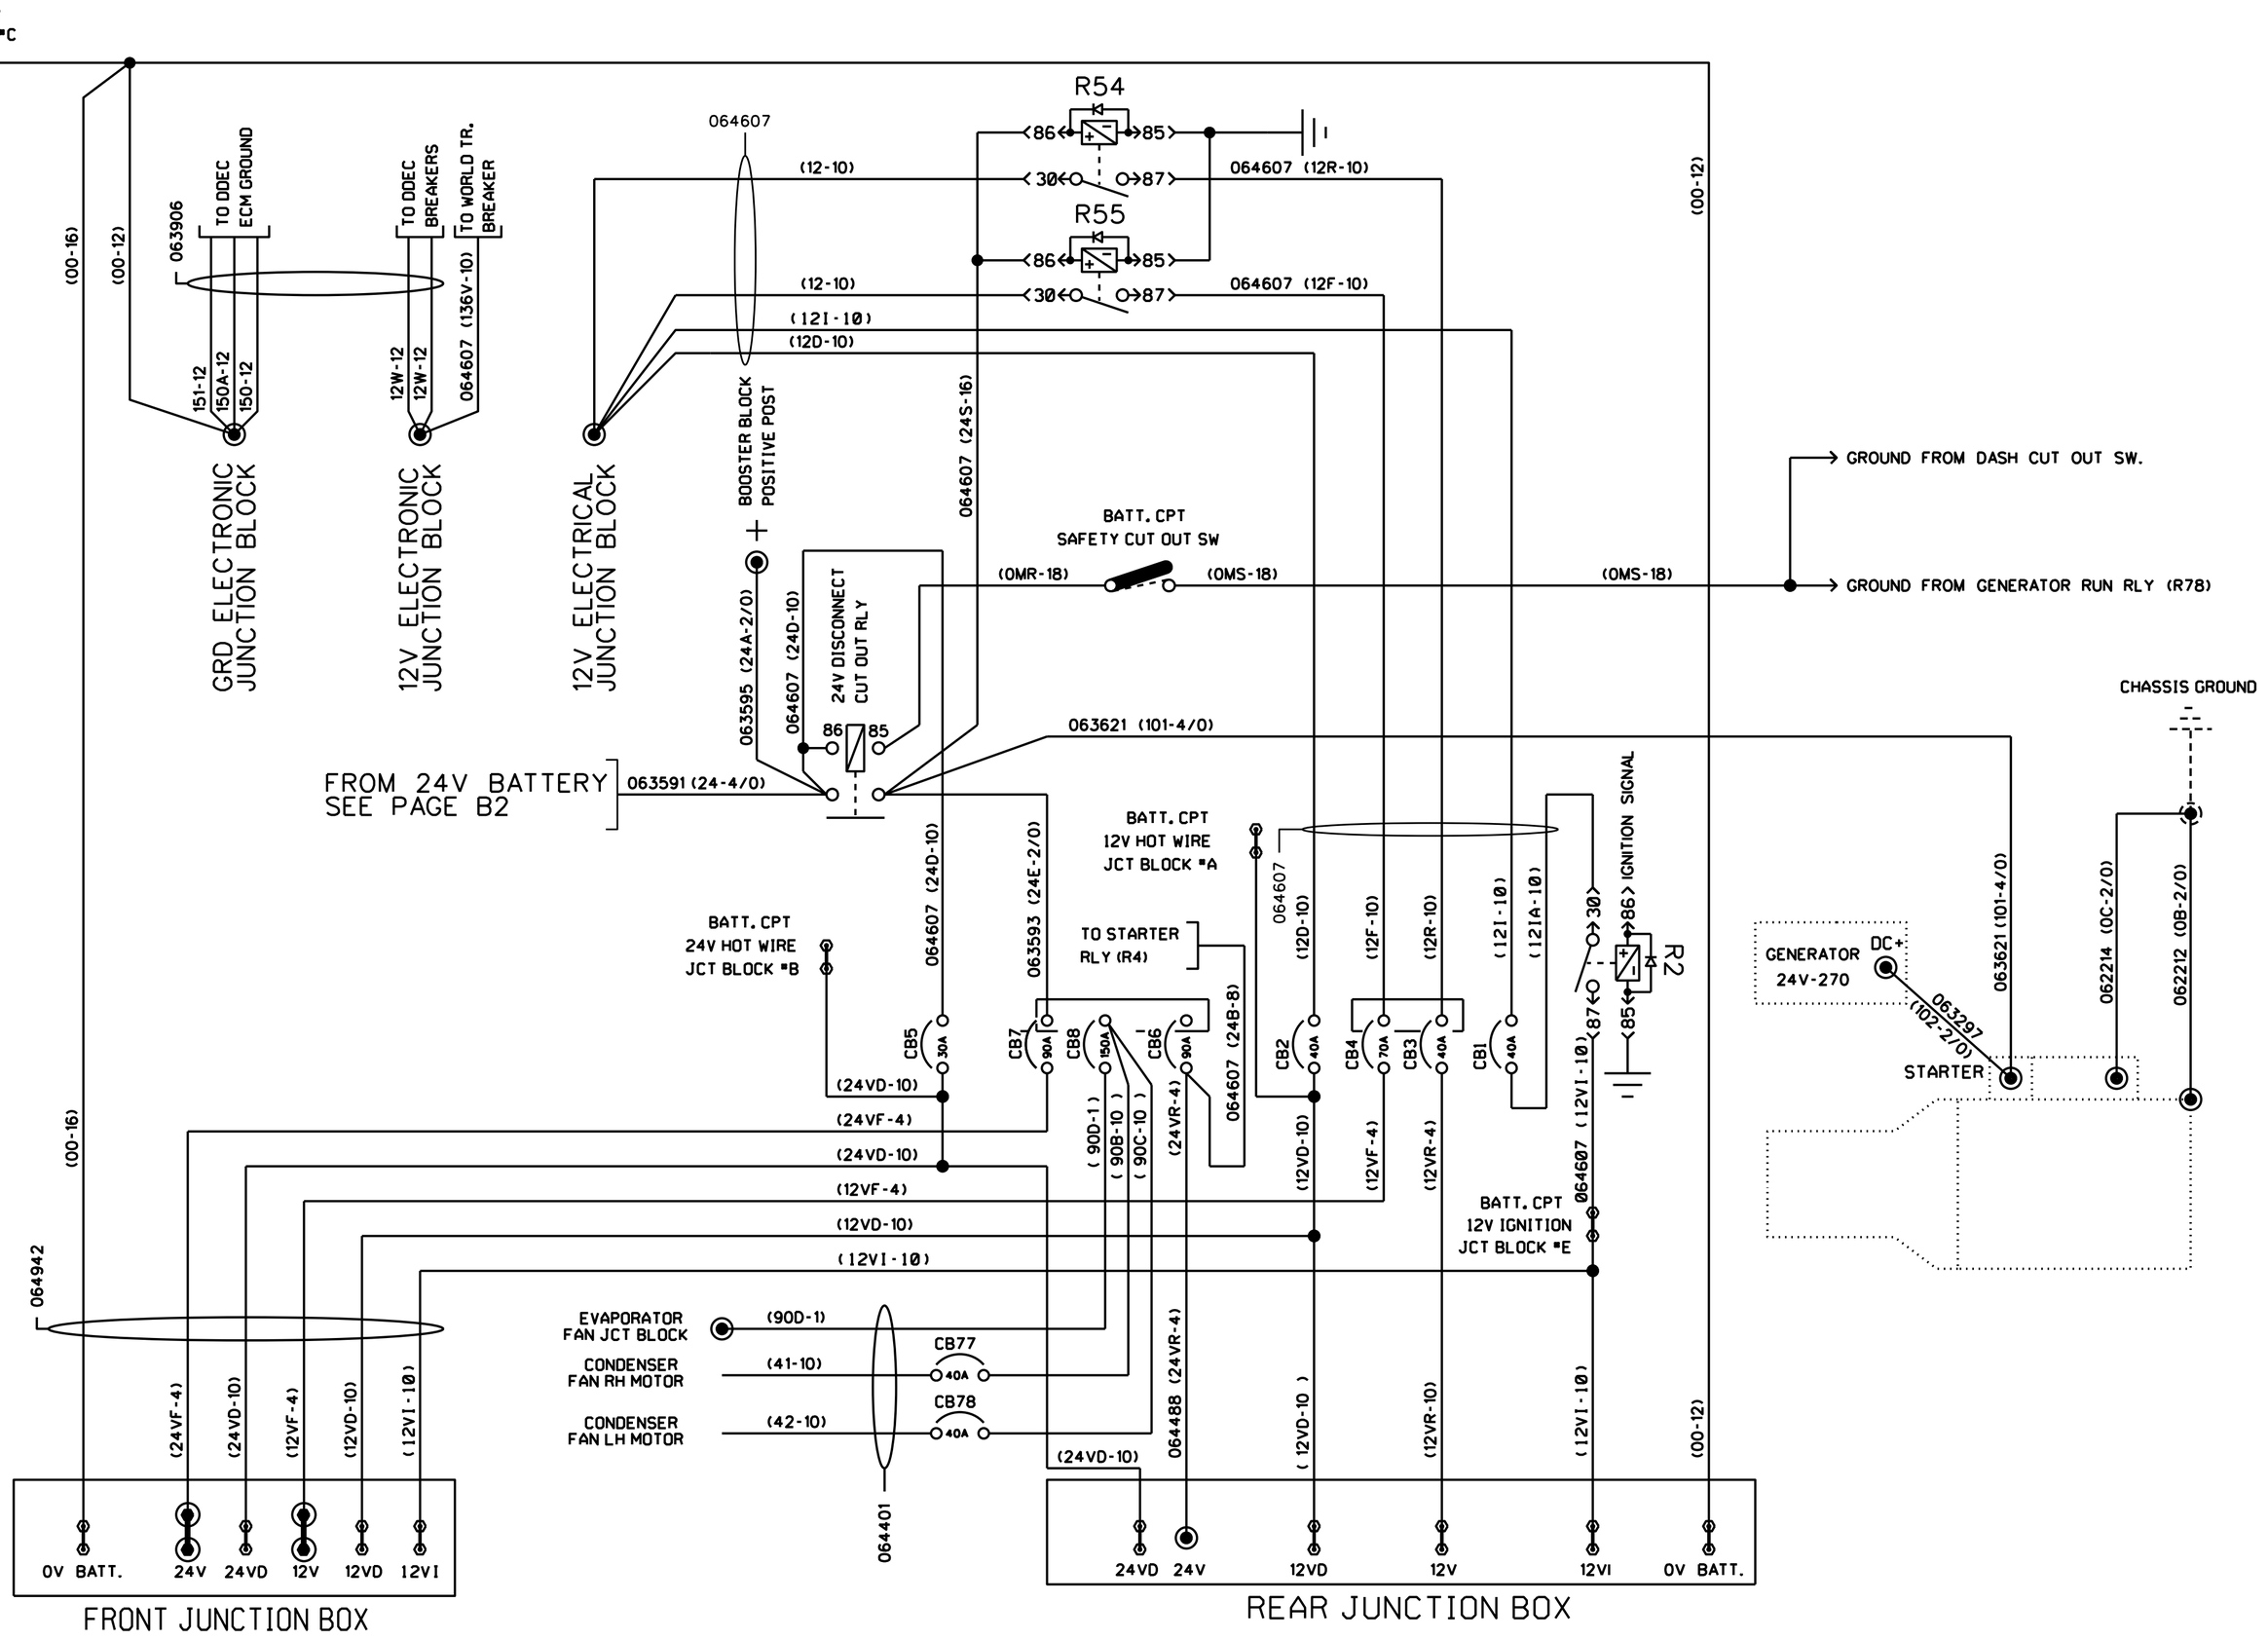
BATT. CPT
JCT BLOCK "C
(00-16)
(00-12)
063906
TO DDEC
ECM GROUND
151-12
150A-12
150-12
GRD ELECTRONIC
JUNCTION BLOCK
TO DDEC
BREAKERS
TO WORLD TR.
BREAKER
12W-12
12W-12
064607 (136V-10)
12V ELECTRONIC
JUNCTION BLOCK
064607
(12-10)
(12I-10)
(12D-10)
12V ELECTRICAL
JUNCTION BLOCK
BOOSTER BLOCK
POSITIVE POST
064607 (24S-16)
R54
86
85
30
87
064607 (12R-10)
R55
064607 (12F-10)
(00-12)
GROUND FROM DASH CUT OUT SW.
GROUND FROM GENERATOR RUN RLY (R78)
BATT. CPT
SAFETY CUT OUT SW
(OMR-18)
(OMS-18)
(OMS-18)
063595 (24A-2/0)
064607 (24D-10)
24V DISCONNECT
CUT OUT RLY
CHASSIS GROUND
063621 (101-4/0)
FROM 24V BATTERY
SEE PAGE B2
063591 (24-4/0)
BATT. CPT
12V HOT WIRE
JCT BLOCK "A
IGNITION SIGNAL
064607 (24D-10)
063593 (24E-2/0)
BATT. CPT
24V HOT WIRE
JCT BLOCK "B
TO STARTER
RLY (R4)
064607 (12D-10)
(12F-10)
(12R-10)
(12I-10)
(12IA-10)
R2
GENERATOR
24V-270
DC+
063297
(102-2/0)
063621 (101-4/0)
062214 (0C-2/0)
062212 (0B-2/0)
STARTER
CB5
30A
CB7
90A
CB8
150A
CB6
90A
CB2
40A
CB4
70A
CB3
40A
CB1
40A
064607 (24B-8)
(24VD-10)
(24VF-4)
(24VD-10)
(12VF-4)
(12VD-10)
(12VI-10)
(90D-1)
(90B-10)
(90C-10)
(24VR-4)
(12VD-10)
(12VF-4)
(12VR-4)
(12VI-10)
064607 (12VI-10)
BATT. CPT
12V IGNITION
JCT BLOCK "E
064942
EVAPORATOR
FAN JCT BLOCK
(90D-1)
CONDENSER
FAN RH MOTOR
(41-10)
CONDENSER
FAN LH MOTOR
(42-10)
CB77
40A
CB78
40A
064401
064488 (24VR-4)
(12VD-10)
(12VR-10)
(12VI-10)
(00-12)
(24VD-10)
0V BATT.
24V
24VD
12V
12VD
12VI
FRONT JUNCTION BOX
24VD
24V
12VD
12V
12VI
0V BATT.
REAR JUNCTION BOX

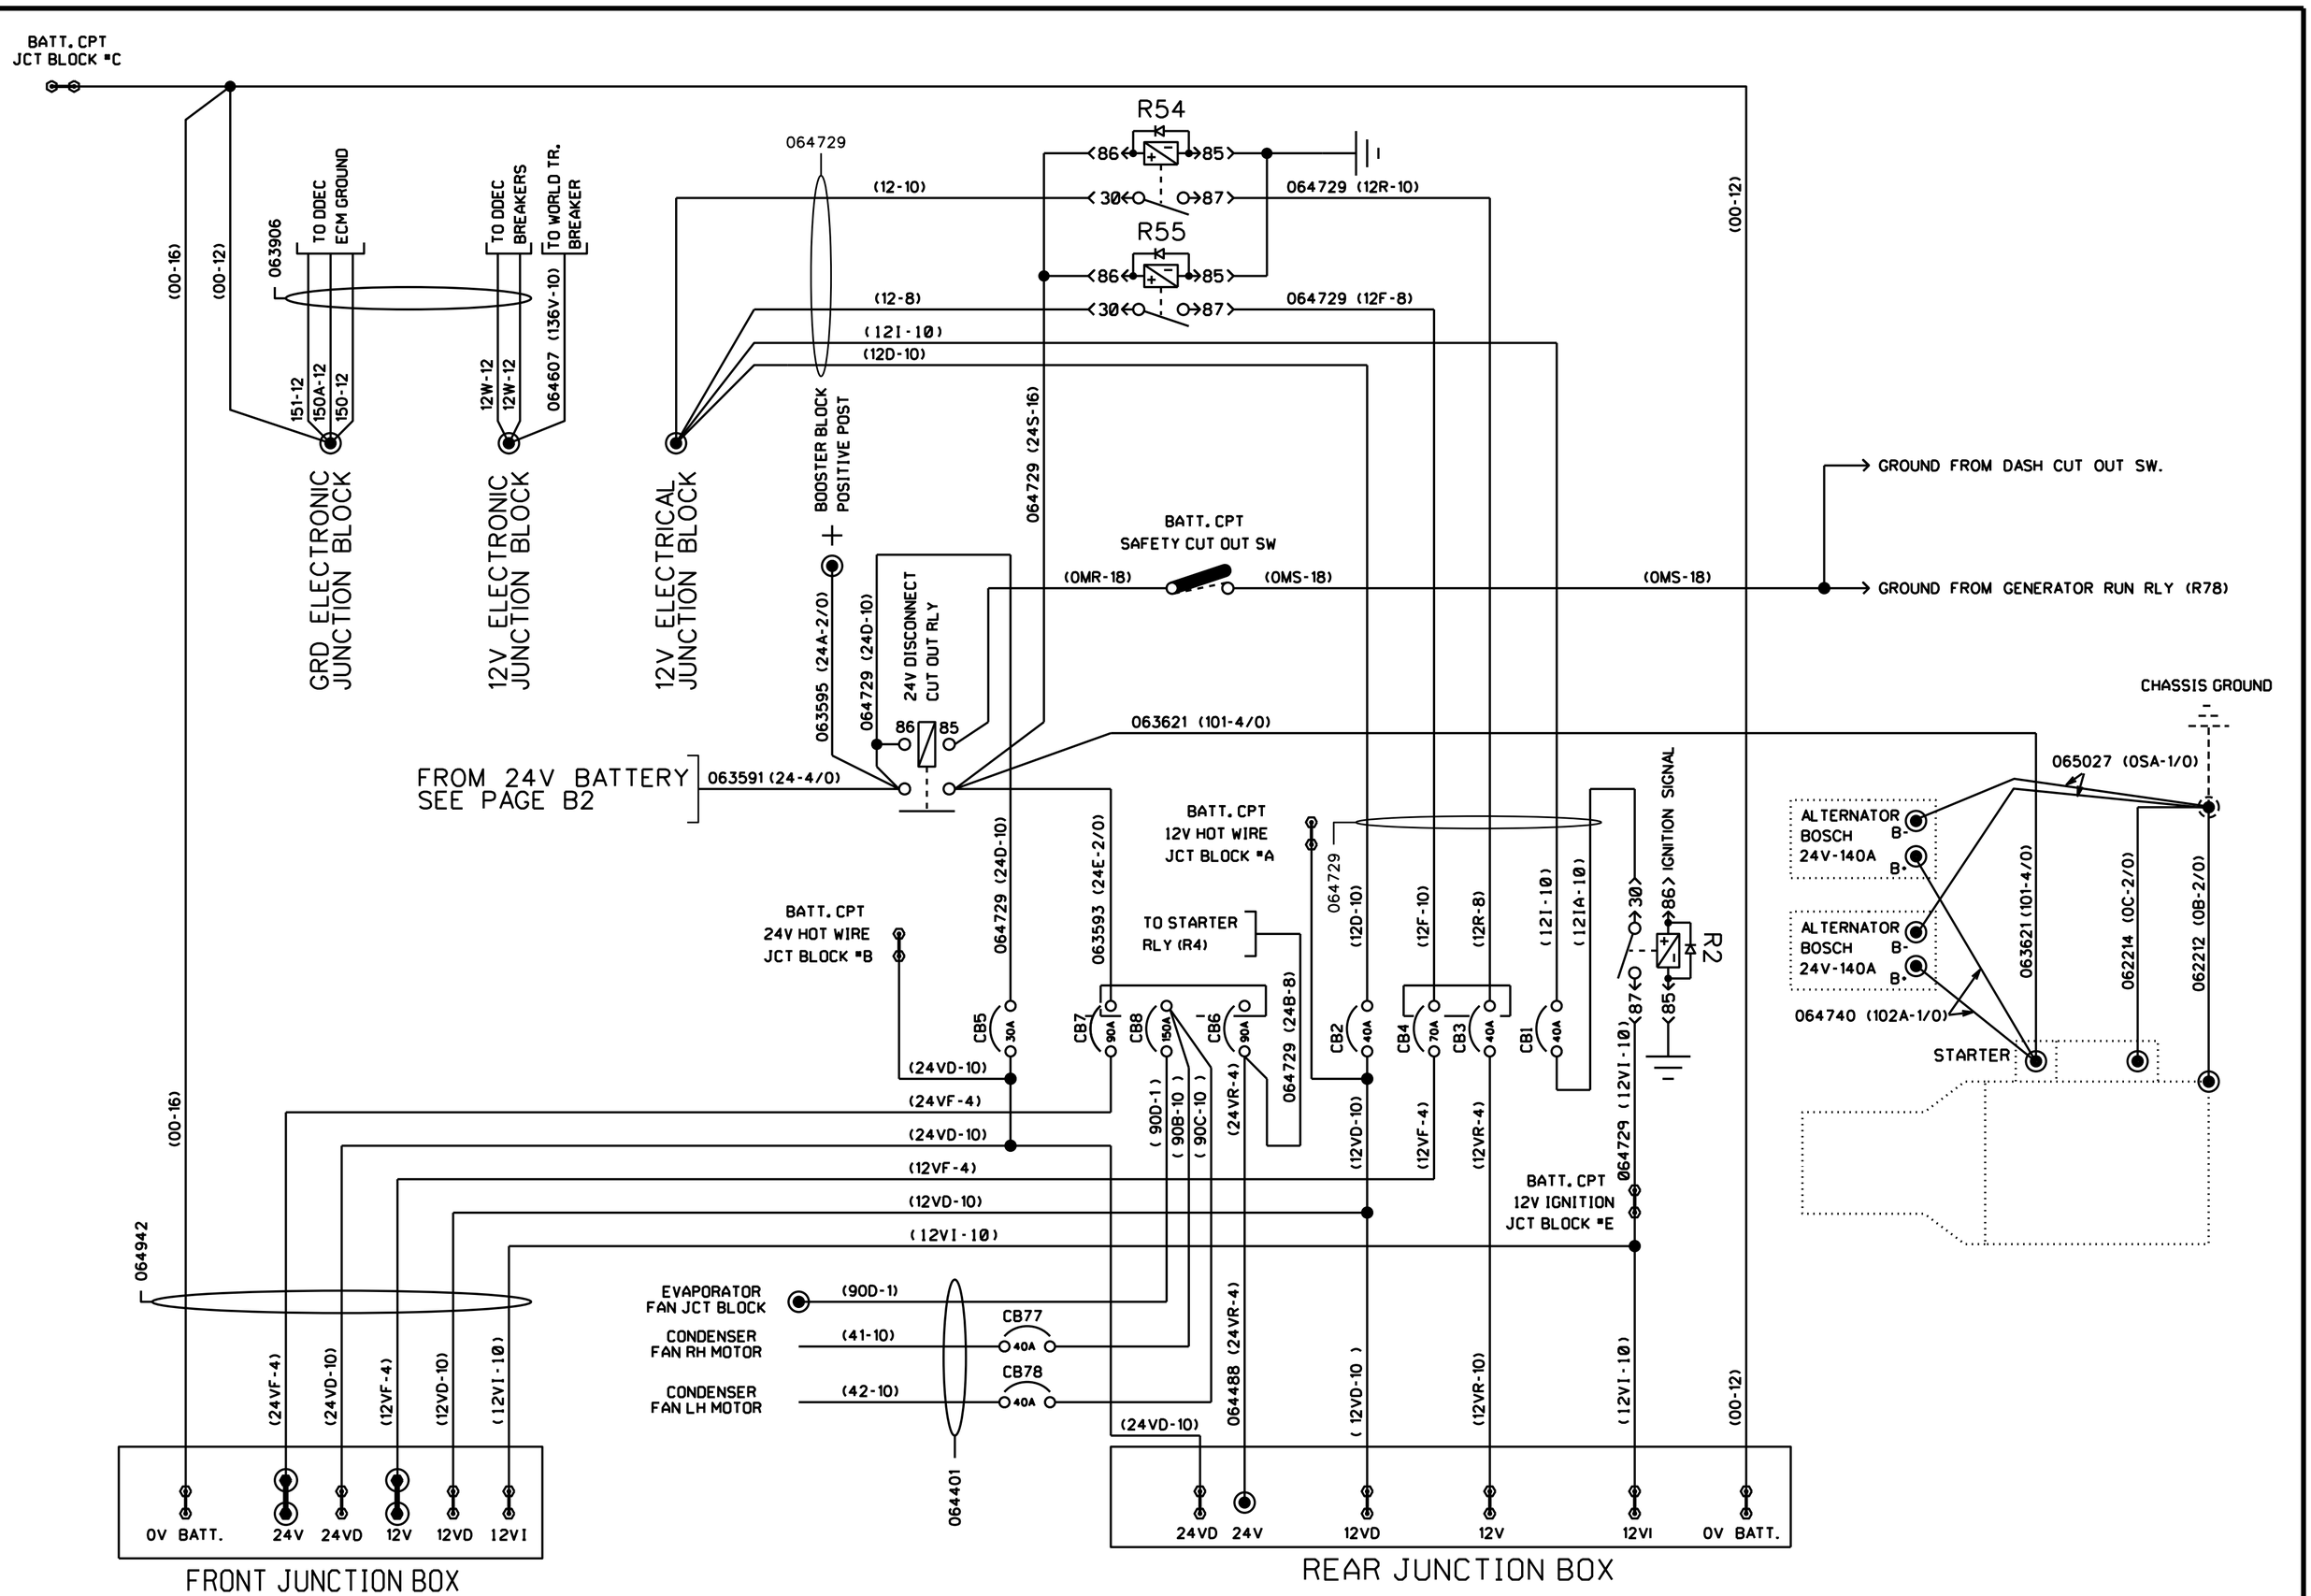
BATT. CPT
JCT BLOCK "C
(00-16)
(00-12)
063906
TO DDEC
ECM GROUND
TO DDEC
BREAKERS
TO WORLD TR.
BREAKER
151-12
150A-12
150-12
12W-12
12W-12
064607 (136V-10)
GRD ELECTRONIC
JUNCTION BLOCK
12V ELECTRONIC
JUNCTION BLOCK
12V ELECTRICAL
JUNCTION BLOCK
064729
R54
R55
86
85
30
87
(12-10)
064729 (12R-10)
(12-8)
064729 (12F-8)
(12I-10)
(12D-10)
(00-12)
BOOSTER BLOCK
POSITIVE POST
064729 (24S-16)
BATT. CPT
SAFETY CUT OUT SW
(0MR-18)
(0MS-18)
(0MS-18)
GROUND FROM DASH CUT OUT SW.
GROUND FROM GENERATOR RUN RLY (R78)
063595 (24A-2/0)
064729 (24D-10)
24V DISCONNECT
CUT OUT RLY
CHASSIS GROUND
063621 (101-4/0)
065027 (0SA-1/0)
FROM 24V BATTERY
SEE PAGE B2
063591 (24-4/0)
BATT. CPT
12V HOT WIRE
JCT BLOCK "A
063593 (24E-2/0)
064729 (24D-10)
BATT. CPT
24V HOT WIRE
JCT BLOCK "B
TO STARTER
RLY (R4)
064729
(12D-10)
(12F-10)
(12R-8)
(12I-10)
(12IA-10)
IGNITION SIGNAL
30
86
85
87
R2
ALTERNATOR
BOSCH
24V-140A
B-
B+
ALTERNATOR
BOSCH
24V-140A
B-
B+
063621 (101-4/0)
062214 (0C-2/0)
062212 (0B-2/0)
064740 (102A-1/0)
STARTER
CB5
30A
CB7
90A
CB8
150A
CB6
90A
CB2
40A
CB4
70A
CB3
40A
CB1
40A
064729 (24B-8)
(24VD-10)
(24VF-4)
(24VD-10)
(12VF-4)
(12VD-10)
(12VI-10)
(90D-1)
(90B-10)
(90C-10)
(24VR-4)
(12VD-10)
(12VF-4)
(12VR-4)
(12VI-10)
BATT. CPT
12V IGNITION
JCT BLOCK "E
064729 (12VI-10)
064942
EVAPORATOR
FAN JCT BLOCK
CONDENSER
FAN RH MOTOR
CONDENSER
FAN LH MOTOR
(90D-1)
(41-10)
(42-10)
CB77
40A
CB78
40A
064401
064488 (24VR-4)
(24VD-10)
(12VD-10)
(12VR-10)
(12VI-10)
(00-12)
0V BATT.
24V
24VD
12V
12VD
12VI
FRONT JUNCTION BOX
24VD
24V
12VD
12V
12VI
0V BATT.
REAR JUNCTION BOX

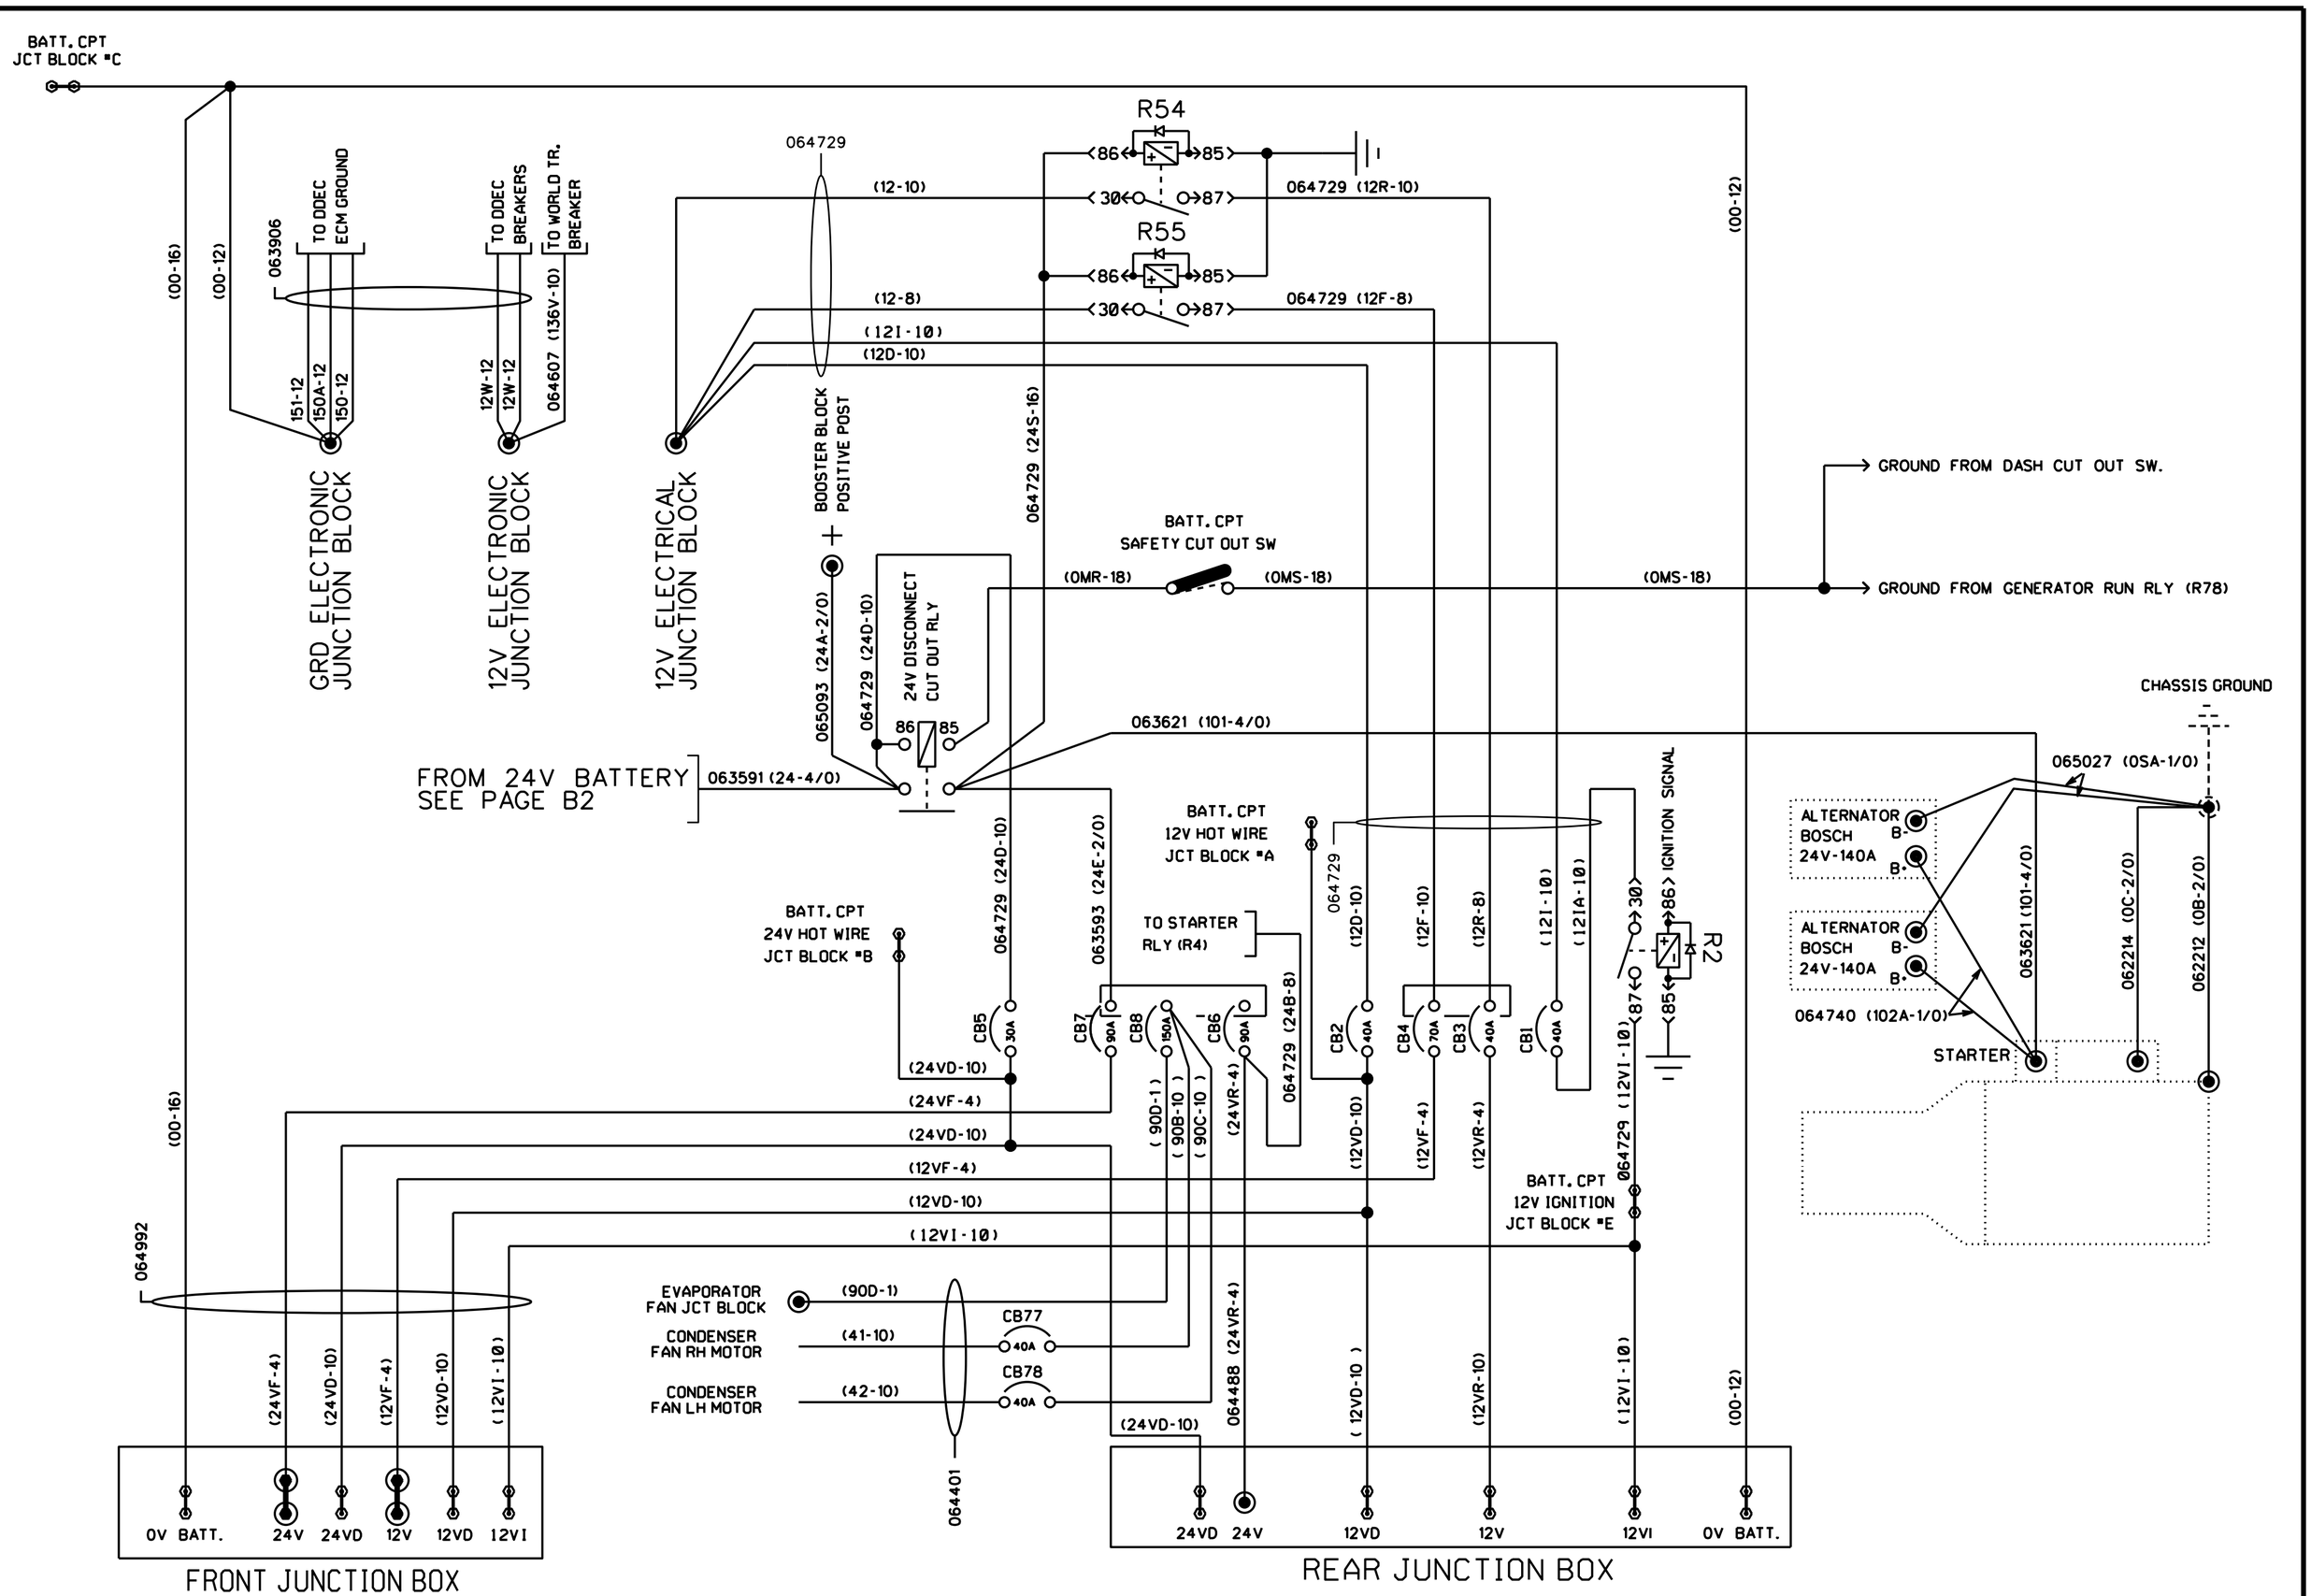

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: B1	REVISION 24

BATT. CPT JCT BLOCK "C

(00-16)

(00-12)

063906

TO DDEC ECM GROUND

TO DDEC BREAKERS

TO WORLD TR. BREAKER

151-12 150A-12 150-12

12W-12 12W-12 063907 (136V-10)

GRD ELECTRONIC JUNCTION BLOCK

12V ELECTRONIC JUNCTION BLOCK

12V ELECTRICAL JUNCTION BLOCK

R54

R55

063907 (12-10)

063907 (12R-10)

063907 (12F-10)

063907 (121-10)

063907 (12D-10)

(00-12)

12V. RUN SIGN FROM JCT "A SEE P.4.1SP3

12-25A-18

064044

064044

24AP 15A

24AW 20A

TO RR JCT BOX SEE P.13.2 , 26.1

24-24AW-14

24-24BC-12

RA1

064046 24-24VA-6

064046 24-24VA-6

24V. BATTERY AUXILIARY

LOC. BATT. CPT

RA4

24-85F-18

D

BOOSTER BLOCK POSITIVE POST

063907 (24S-16)

BATT. CPT SAFETY CUT OUT SW

(0MR-18)

(0MS-18)

(0MS-18)

GROUND FROM DASH CUT OUT SW.

GROUND FROM GENERATOR RUN RLY (R78)

CHASSIS GROUND

063595 (24A-2/0)

063907 (24D-10)

24V DISCONNECT CUT OUT RLY

063621 (101-4/0)

FROM 24V BATTERY SEE PAGE B2

063591 (24-4/0)

063907 (24D-10)

063593 (24E-2/0)

BATT. CPT 12V HOT WIRE JCT BLOCK "A

TO STARTER RLY (R4)

063907 (12D-10)

063907 (12F-10)

063907 (12R-10)

063907 (121-10)

063907 (121A-10)

063907 (12VI-10)

R2

IGNITION SIGNAL

GENERATOR 24V-270

DC+

063297 (10Z-2/0)

063621 (101-4/0)

062214 (0C-2/0)

062212 (0B-2/0)

STARTER

BATT. CPT 24V HOT WIRE JCT BLOCK "B

063907 (24B-8)

CB5 30A

CB7 90A

CB8 150A

CB6 90A

CB2 30A

CB4 40A

CB3 40A

CB1 40A

(24VD-10)

(24VF-4)

(24VD-10)

(12VF-8)

(12VD-10)

(12VI-10)

(90D-1)

(90B-10)

(90C-10)

(24VR-4)

(12VD-10)

(12VF-8)

(12VR-4)

BATT. CPT 12V IGNITION JCT BLOCK "E

063907 (12VI-10)

064402

EVAPORATOR FAN JCT BLOCK

(90D-1)

CONDENSER FAN RH MOTOR

(41-10)

CB77 40A

CONDENSER FAN LH MOTOR

(42-10)

CB78 40A

064401

064488 (24VR-4)

24-24VB-18

24-24BC-12

TO C90 (10) SEE P. 26sp1

24-127A-16

RA3

GREY

OR

RED

CHARGER

PLUG 110V

NOT USED

0V BATT. 24V 24VD 12V 12VD 12VI

FRONT JUNCTION BOX

24VD 24V 12VD 12V 12VI 0V BATT.

REAR JUNCTION BOX

ORLEANS

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: B1sp1	REVISION 00

BATT. CPT
JCT BLOCK "C

(00-16)
(00-12)

063906
TO DDEC ECM GROUND
TO DDEC BREAKERS
TO WORLD TR. BREAKER
151-12
150A-12
150-12
12W-12
12W-12
064607 (136V-10)

GRD ELECTRONIC JUNCTION BLOCK
12V ELECTRONIC JUNCTION BLOCK
12V ELECTRICAL JUNCTION BLOCK

R54
R55
064607 (12-10)
064607 (12R-10)
064607 (12-10)
064607 (12F-10)
064607 (12I-10)
064607 (12D-10)
064046 24-24VA-6

BOOSTER BLOCK POSITIVE POST
064607 (24S-16)
BATT. CPT SAFETY CUT OUT SW
(OMR-18)
(OMS-18)
063595 (24A-2/0)
064607 (24D-10)
24V DISCONNECT CUT OUT RLY
063621 (101-4/0)

FROM 24V BATTERY SEE PAGE B2
063591 (24-4/0)

BATT. CPT 12V HOT WIRE JCT BLOCK "A
BATT. CPT 24V HOT WIRE JCT BLOCK "B
TO STARTER RLY (R4)
063593 (24E-2/0)
064607 (24B-8)
064607 (12D-10)
064607 (12F-10)
064607 (12R-10)
064607 (12I-10)
064607 (12IA-10)

CB5 30A
CB7 90A
CB8 150A
CB6 90A
CB2 40A
CB4 40A
CB3 40A
CB1 40A

(24VD-10)
(24VF-4)
(24VD-10)
(12VF-8)
(12VD-10)
(12VI-10)
(90D-1)
(90B-10)
(90C-10)
(24VR-4)
(12VD-10)
(12VF-8)
(12VR-4)

R2
064607 (12VI-10)
12V. RUN SIGN FROM JCT"A SEE P.4.1SP3
12-25A-18
064044
064044
RA1
RA4
24AP 15A
24AW 20A
TO RR JCT BOX SEE P.13.2 , 26.1
24-24AW-14
24-24BC-12
24V. BATTERY AUXILIARY
LOC. BATT. CPT
24-85F-18
D
GROUND FROM DASH CUT OUT SW.
GROUND FROM GENERATOR RUN RLY (R78)
CHASSIS GROUND
IGNITION SIGNAL

GENERATOR 24V-270
DC+
063297 (10Z-2/0)
062214 (0C-2/0)
062212 (0B-2/0)
STARTER

BATT. CPT 12V IGNITION JCT BLOCK "E

064402
EVAPORATOR FAN JCT BLOCK
CONDENSER FAN RH MOTOR
CONDENSER FAN LH MOTOR
(90D-1)
(41-10)
(42-10)
CB77 40A
CB78 40A
064401
064488 (24VR-4)
(00-12)
24-24VB-18
24-24BC-12

TO C90 (10) SEE P. 26sp1
24-127A-16
RA3
GREY
OR
RED
CHARGER
PLUG 110V
NOT USED

0V BATT. 24V 24VD 12V 12VD 12VI
FRONT JUNCTION BOX

24VD 24V 12VD 12V 12VI 0V BATT.
REAR JUNCTION BOX

ORLEANS

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: B1sp1	REVISION 08

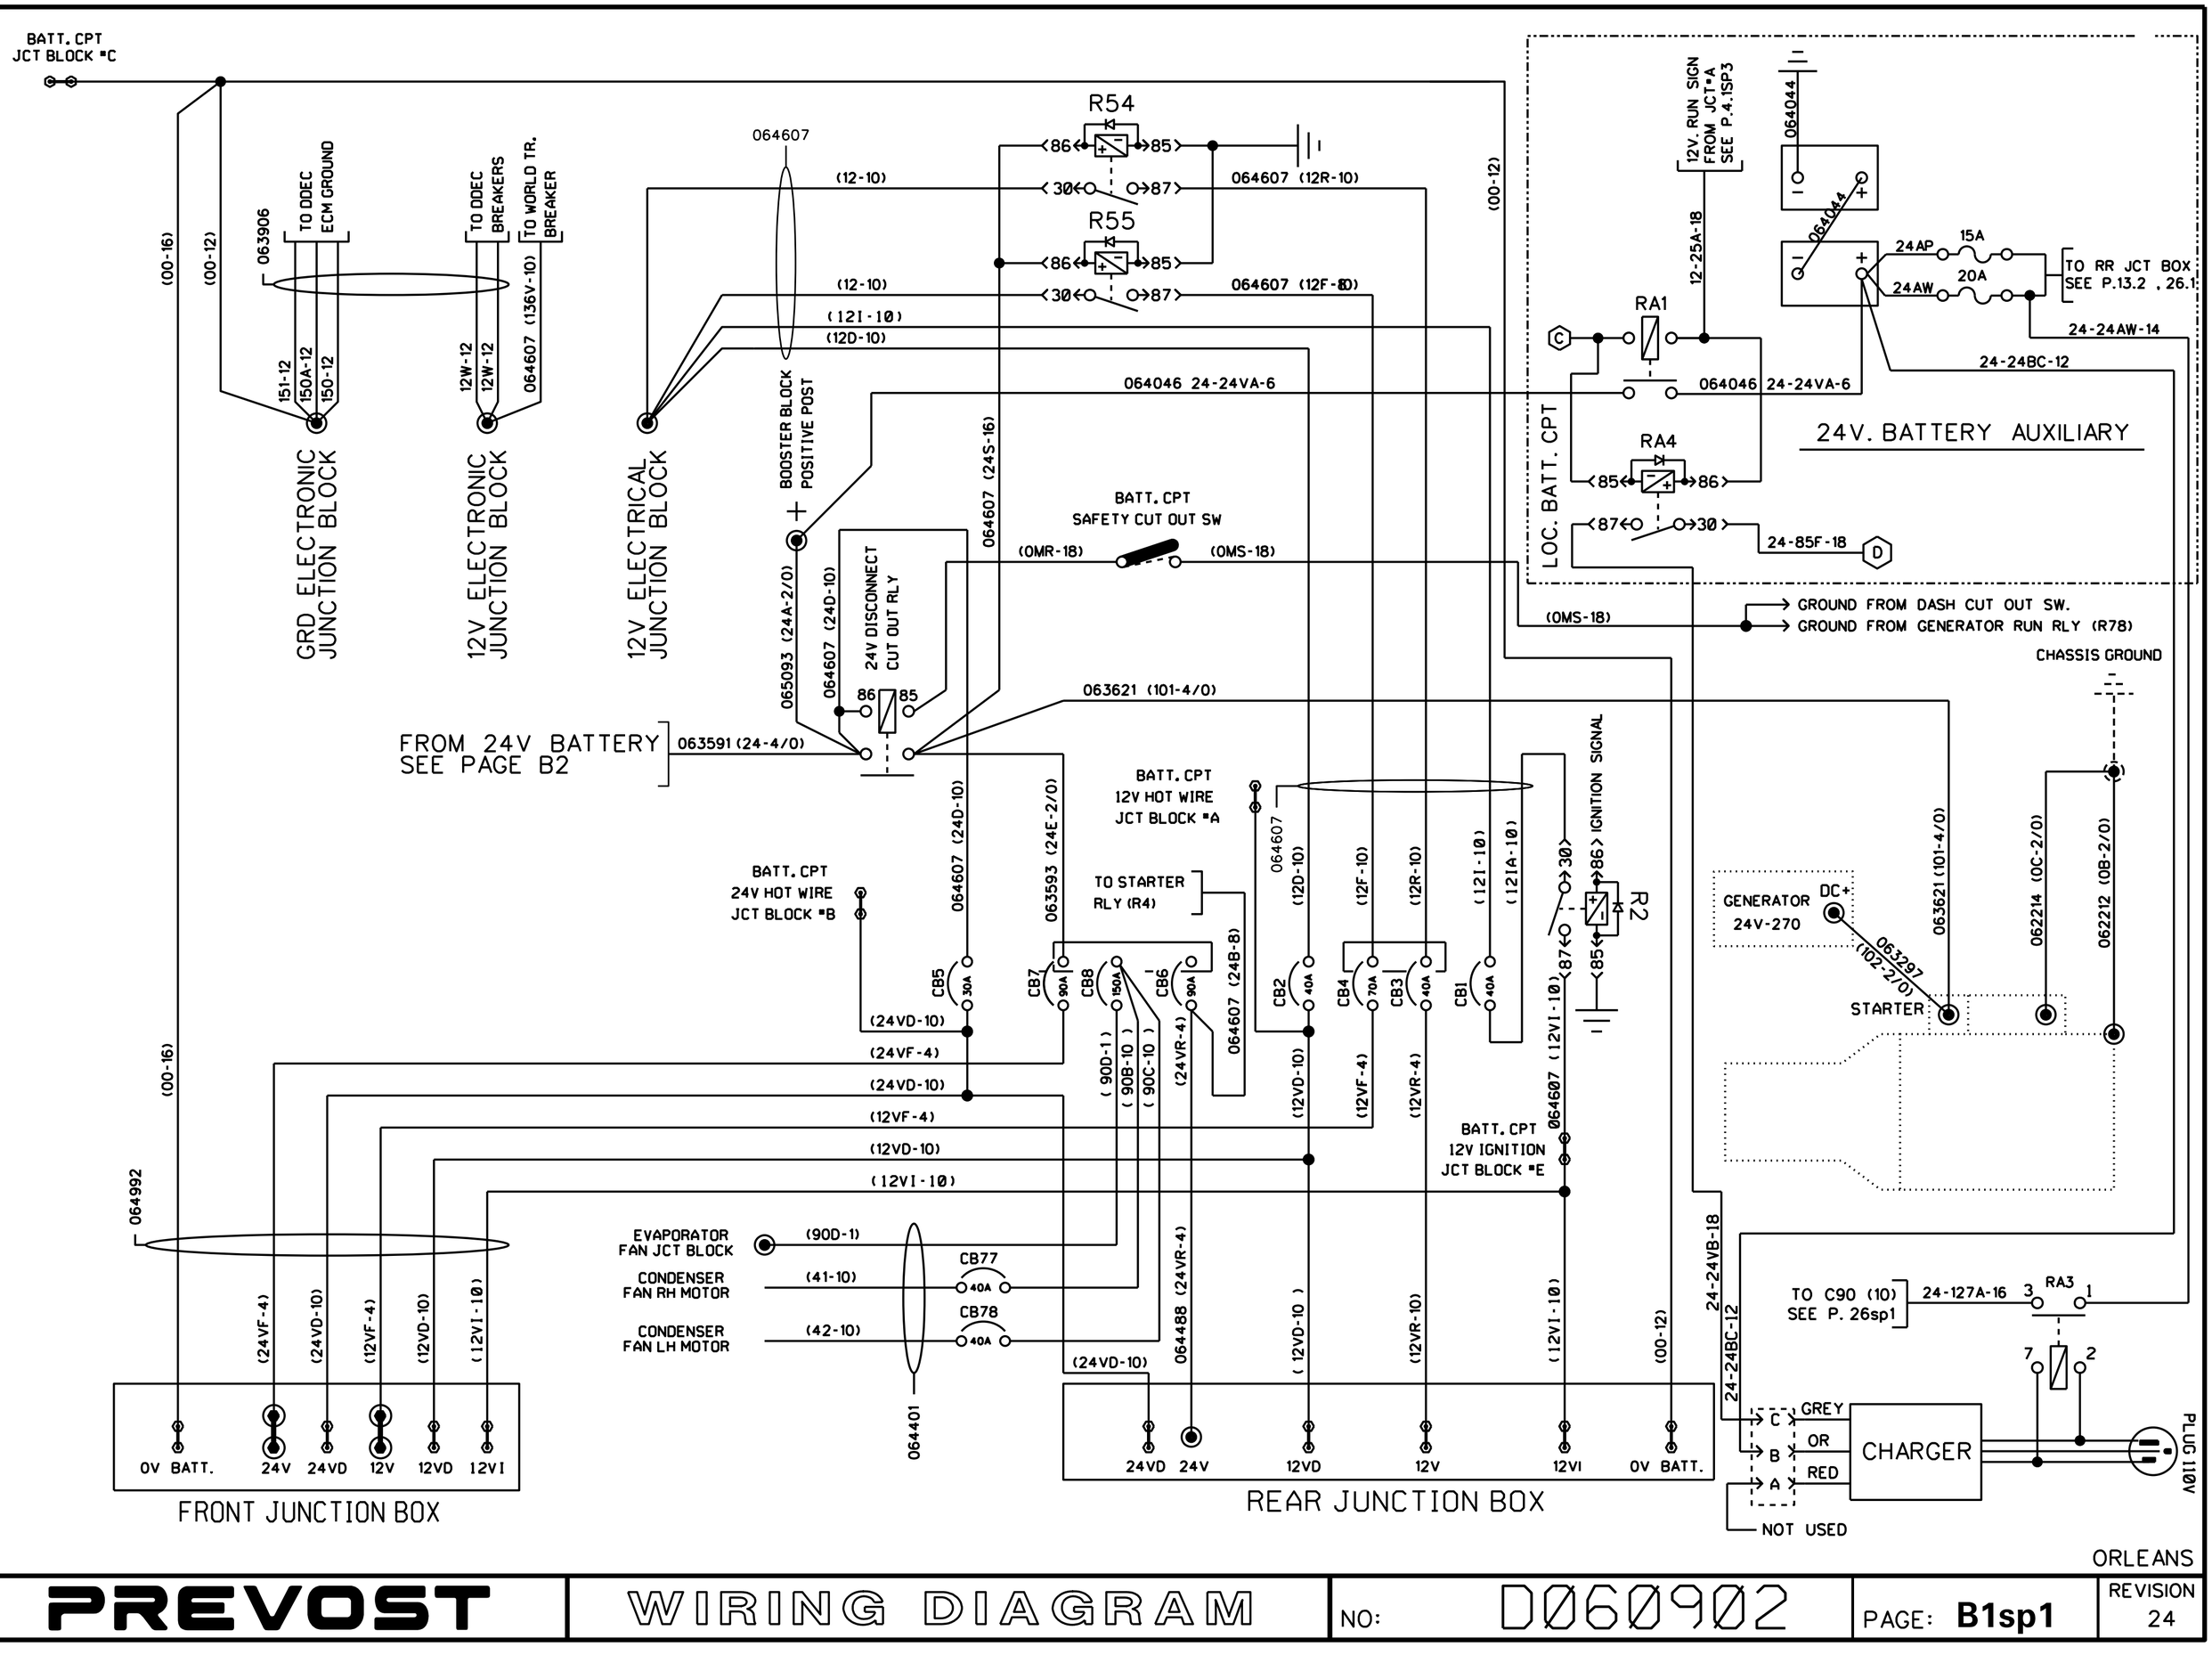

ORLEANS

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: B1sp1	REVISION 24

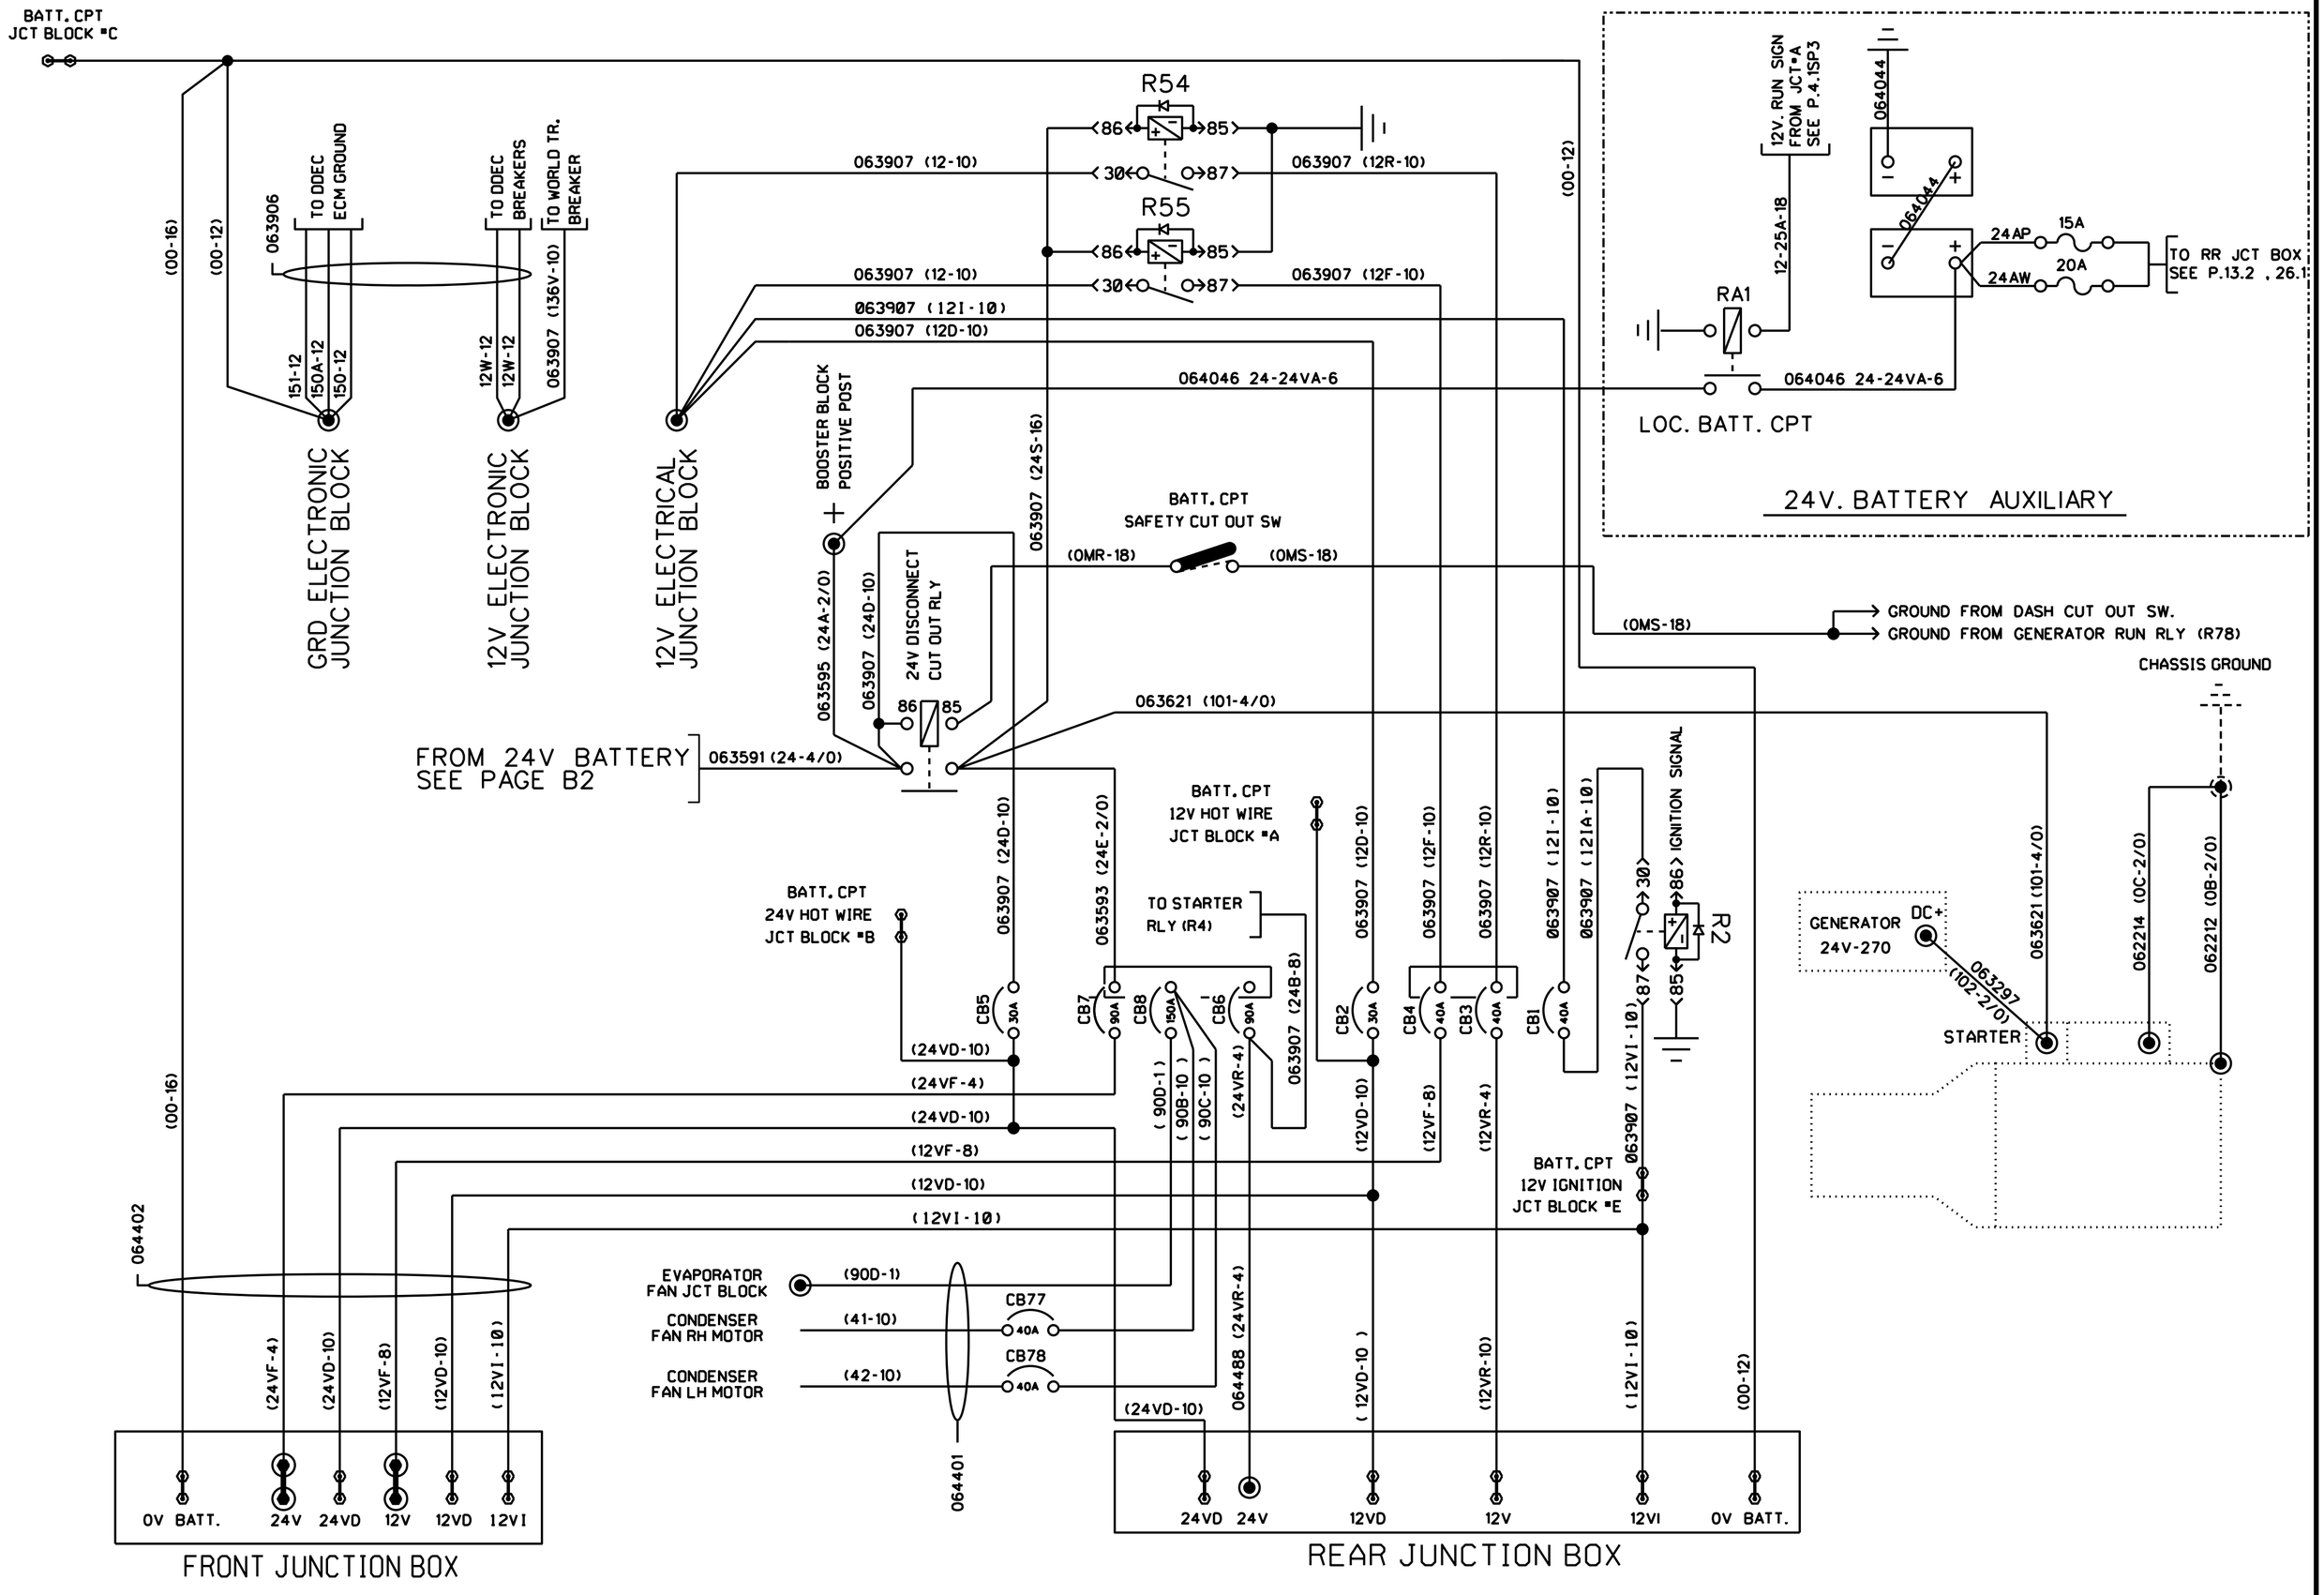

ADIRONDACK

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: B1sp2	REVISION 00

BATT. CPT
JCT BLOCK "C

(00-16)
(00-12)

063906
TO DDEC ECM GROUND
TO DDEC BREAKERS
TO WORLD TR. BREAKER

151-12
150A-12
150-12
12W-12
12W-12
064607 (136V-10)

GRD ELECTRONIC JUNCTION BLOCK
12V ELECTRONIC JUNCTION BLOCK
12V ELECTRICAL JUNCTION BLOCK

R54
R55
86 85 30 87

064607 (12-10)
064607 (12R-10)
064607 (12-10)
064607 (12F-10)
064607 (12I-10)
064607 (12D-10)
064046 24-24VA-6

BOOSTER BLOCK POSITIVE POST
064607 (24S-16)

BATT. CPT
SAFETY CUT OUT SW
(0MR-18)
(0MS-18)

063595 (24A-2/0)
064607 (24D-10)
24V DISCONNECT CUT OUT RLY
86 85

063621 (101-4/0)

FROM 24V BATTERY
SEE PAGE B2
063591 (24-4/0)

BATT. CPT
12V HOT WIRE
JCT BLOCK "A

BATT. CPT
24V HOT WIRE
JCT BLOCK "B

TO STARTER RLY (R4)

064607 (24D-10)
063593 (24E-2/0)
064607 (24B-8)
064607 (12D-10)
064607 (12F-10)
064607 (12R-10)
064607 (12I-10)
064607 (12IA-10)

CB5 30A
CB7 90A
CB8 150A
CB6 90A
CB2 40A
CB4 40A
CB3 40A
CB1 40A

(24VD-10)
(24VF-4)
(24VD-10)
(12VF-8)
(12VD-10)
(12VI-10)

(90D-1)
(90B-10)
(90C-10)
(24VR-4)
(12VD-10)
(12VF-8)
(12VR-4)

R2
30 87 86 85
IGNITION SIGNAL
064607 (12VI-10)

BATT. CPT
12V IGNITION
JCT BLOCK "E

064402

EVAPORATOR FAN JCT BLOCK
(90D-1)
CONDENSER FAN RH MOTOR
(41-10)
CB77 40A
CONDENSER FAN LH MOTOR
(42-10)
CB78 40A

064401

064488 (24VR-4)

(24VD-10)
(12VD-10)
(12VR-10)
(12VI-10)
(00-12)

0V BATT. 24V 24VD 12V 12VD 12VI
FRONT JUNCTION BOX

24VD 24V 12VD 12V 12VI 0V BATT.
REAR JUNCTION BOX

12V. RUN SIGN FROM JCT "A SEE P.4.1SP3
12-25A-18
RA1
C
064046 24-24VA-6
LOC. BATT. CPT

064044
064044
24AP 15A
24AW 20A
TO RR JCT BOX SEE P.13.2 , 26.1

24V. BATTERY AUXILIARY

(0MS-18)
GROUND FROM DASH CUT OUT SW.
GROUND FROM GENERATOR RUN RLY (R78)

CHASSIS GROUND

GENERATOR 24V-270
DC+
063297 (102-270)
STARTER

063621 (101-4/0)
062214 (0C-2/0)
062212 (0B-2/0)

ADIRONDACK

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: B1sp2	REVISION 08

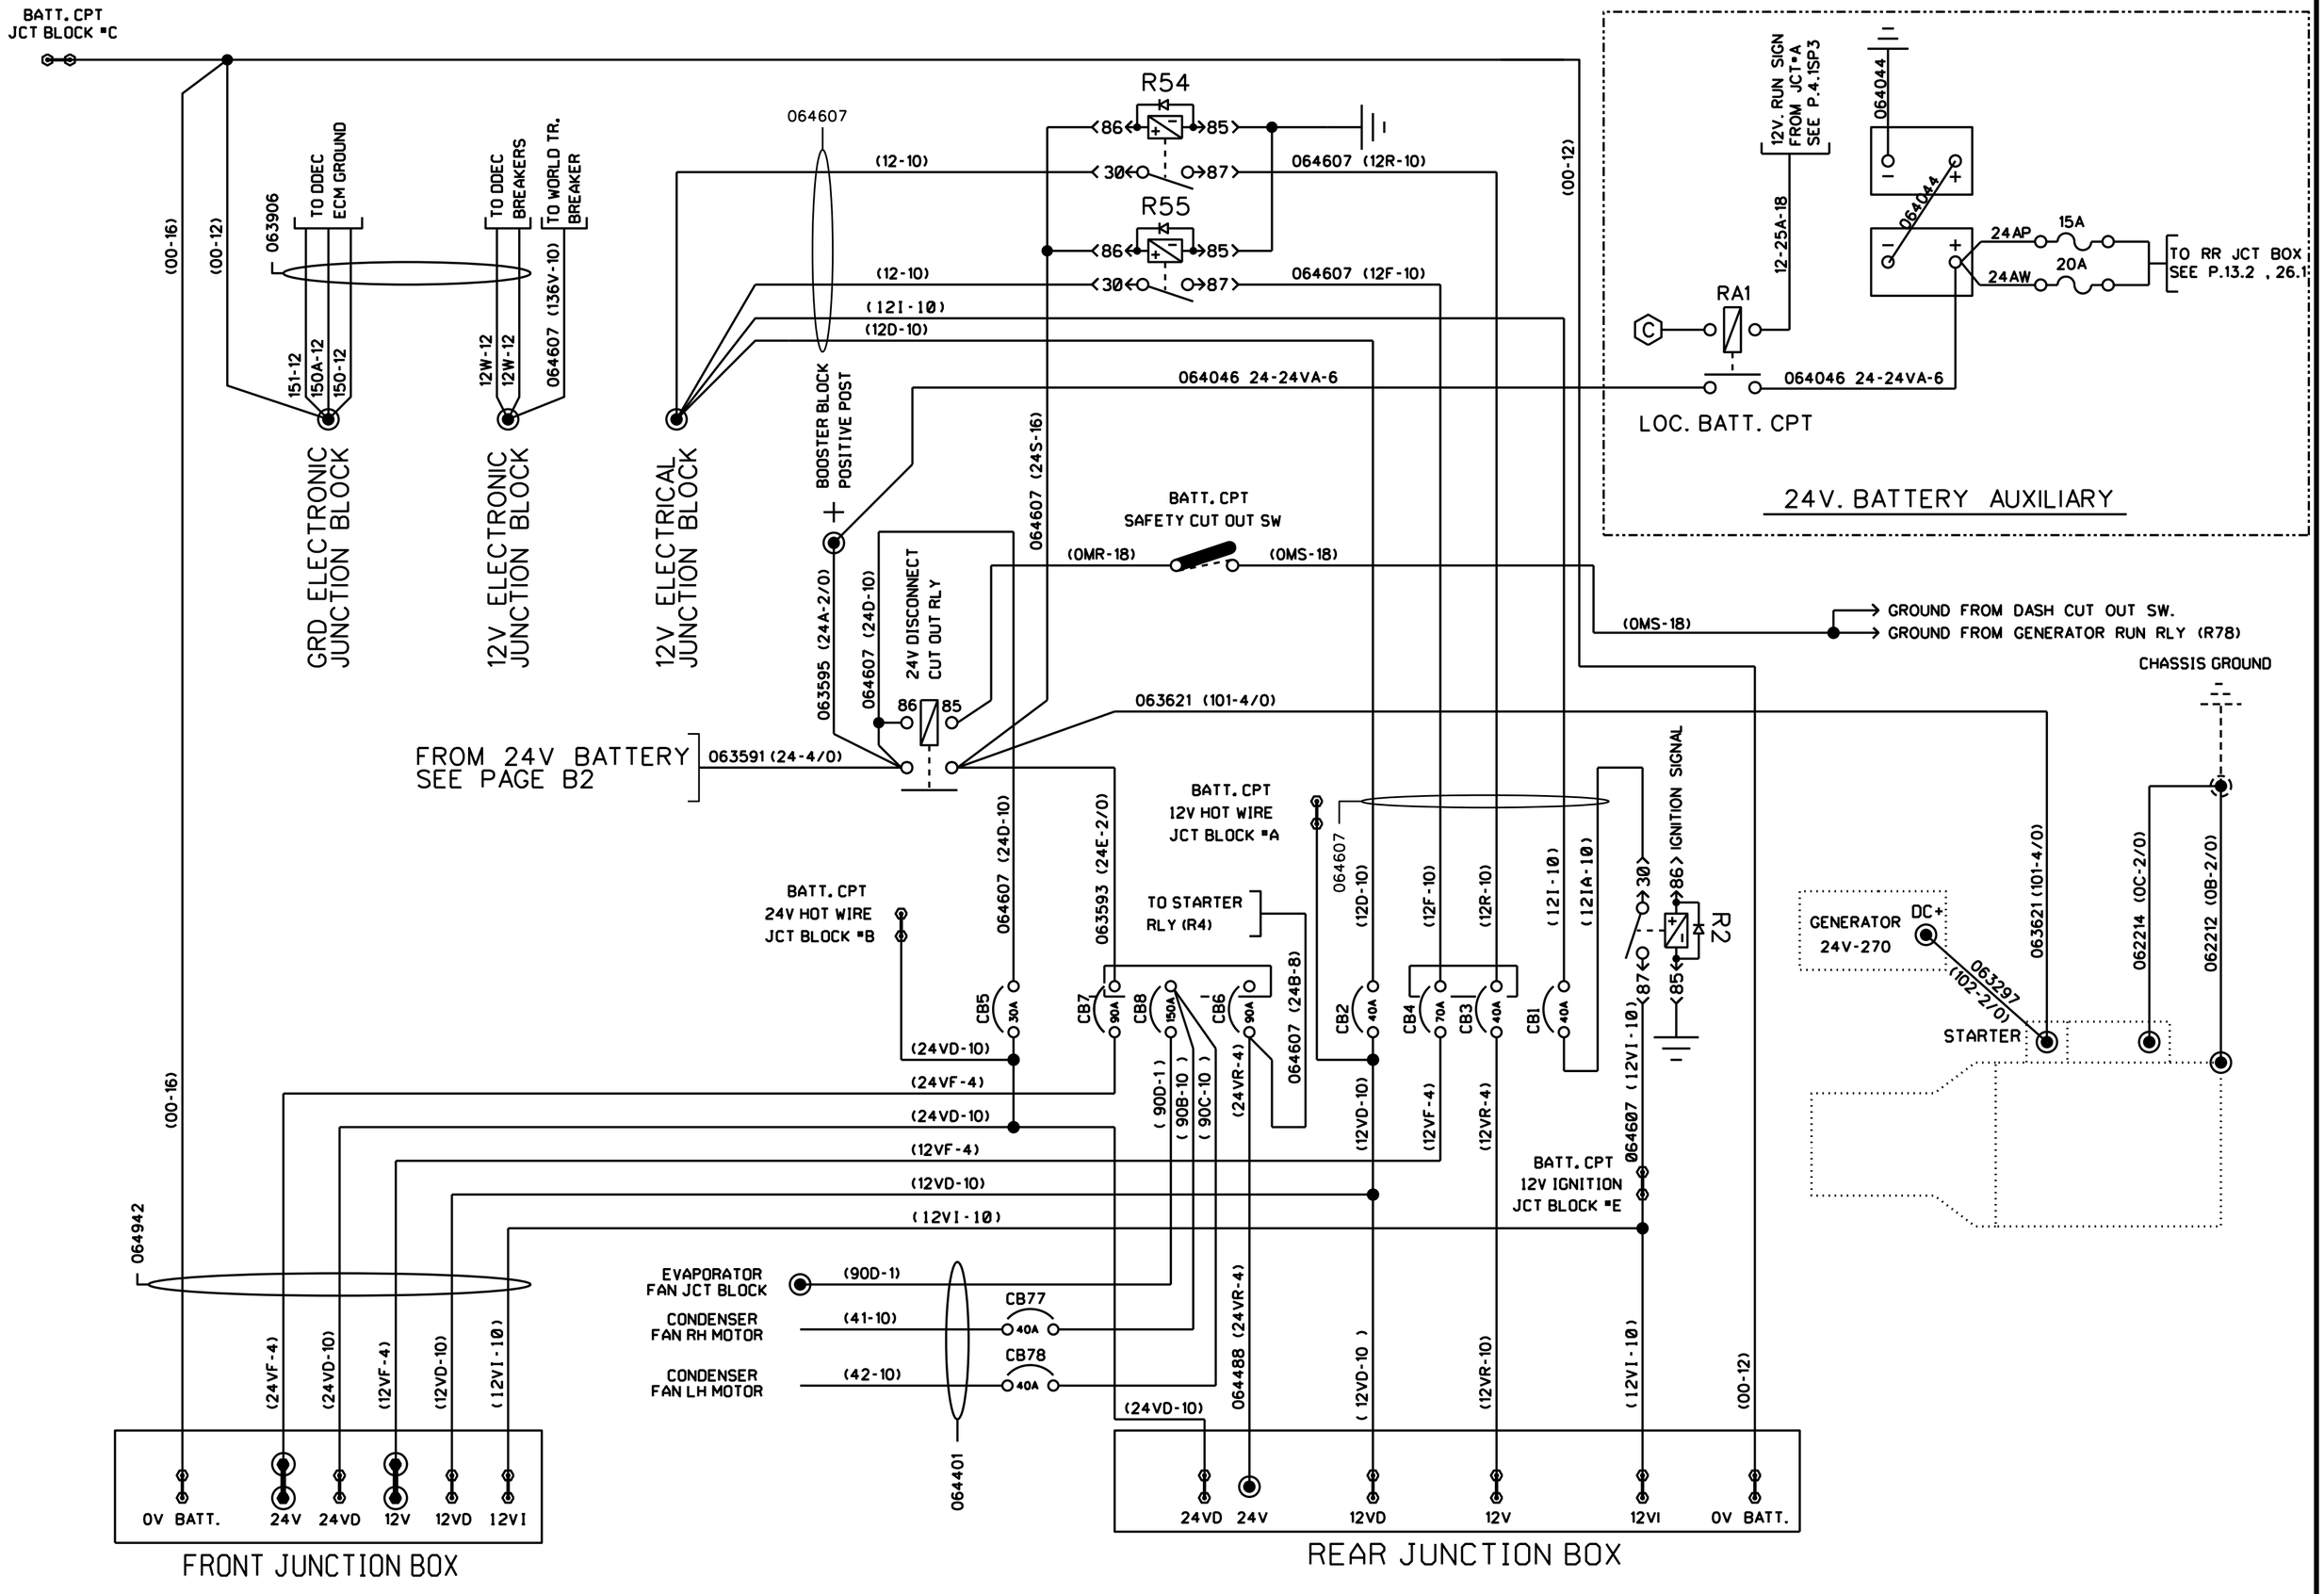

ADIRONDACK

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: B1sp2	REVISION 15

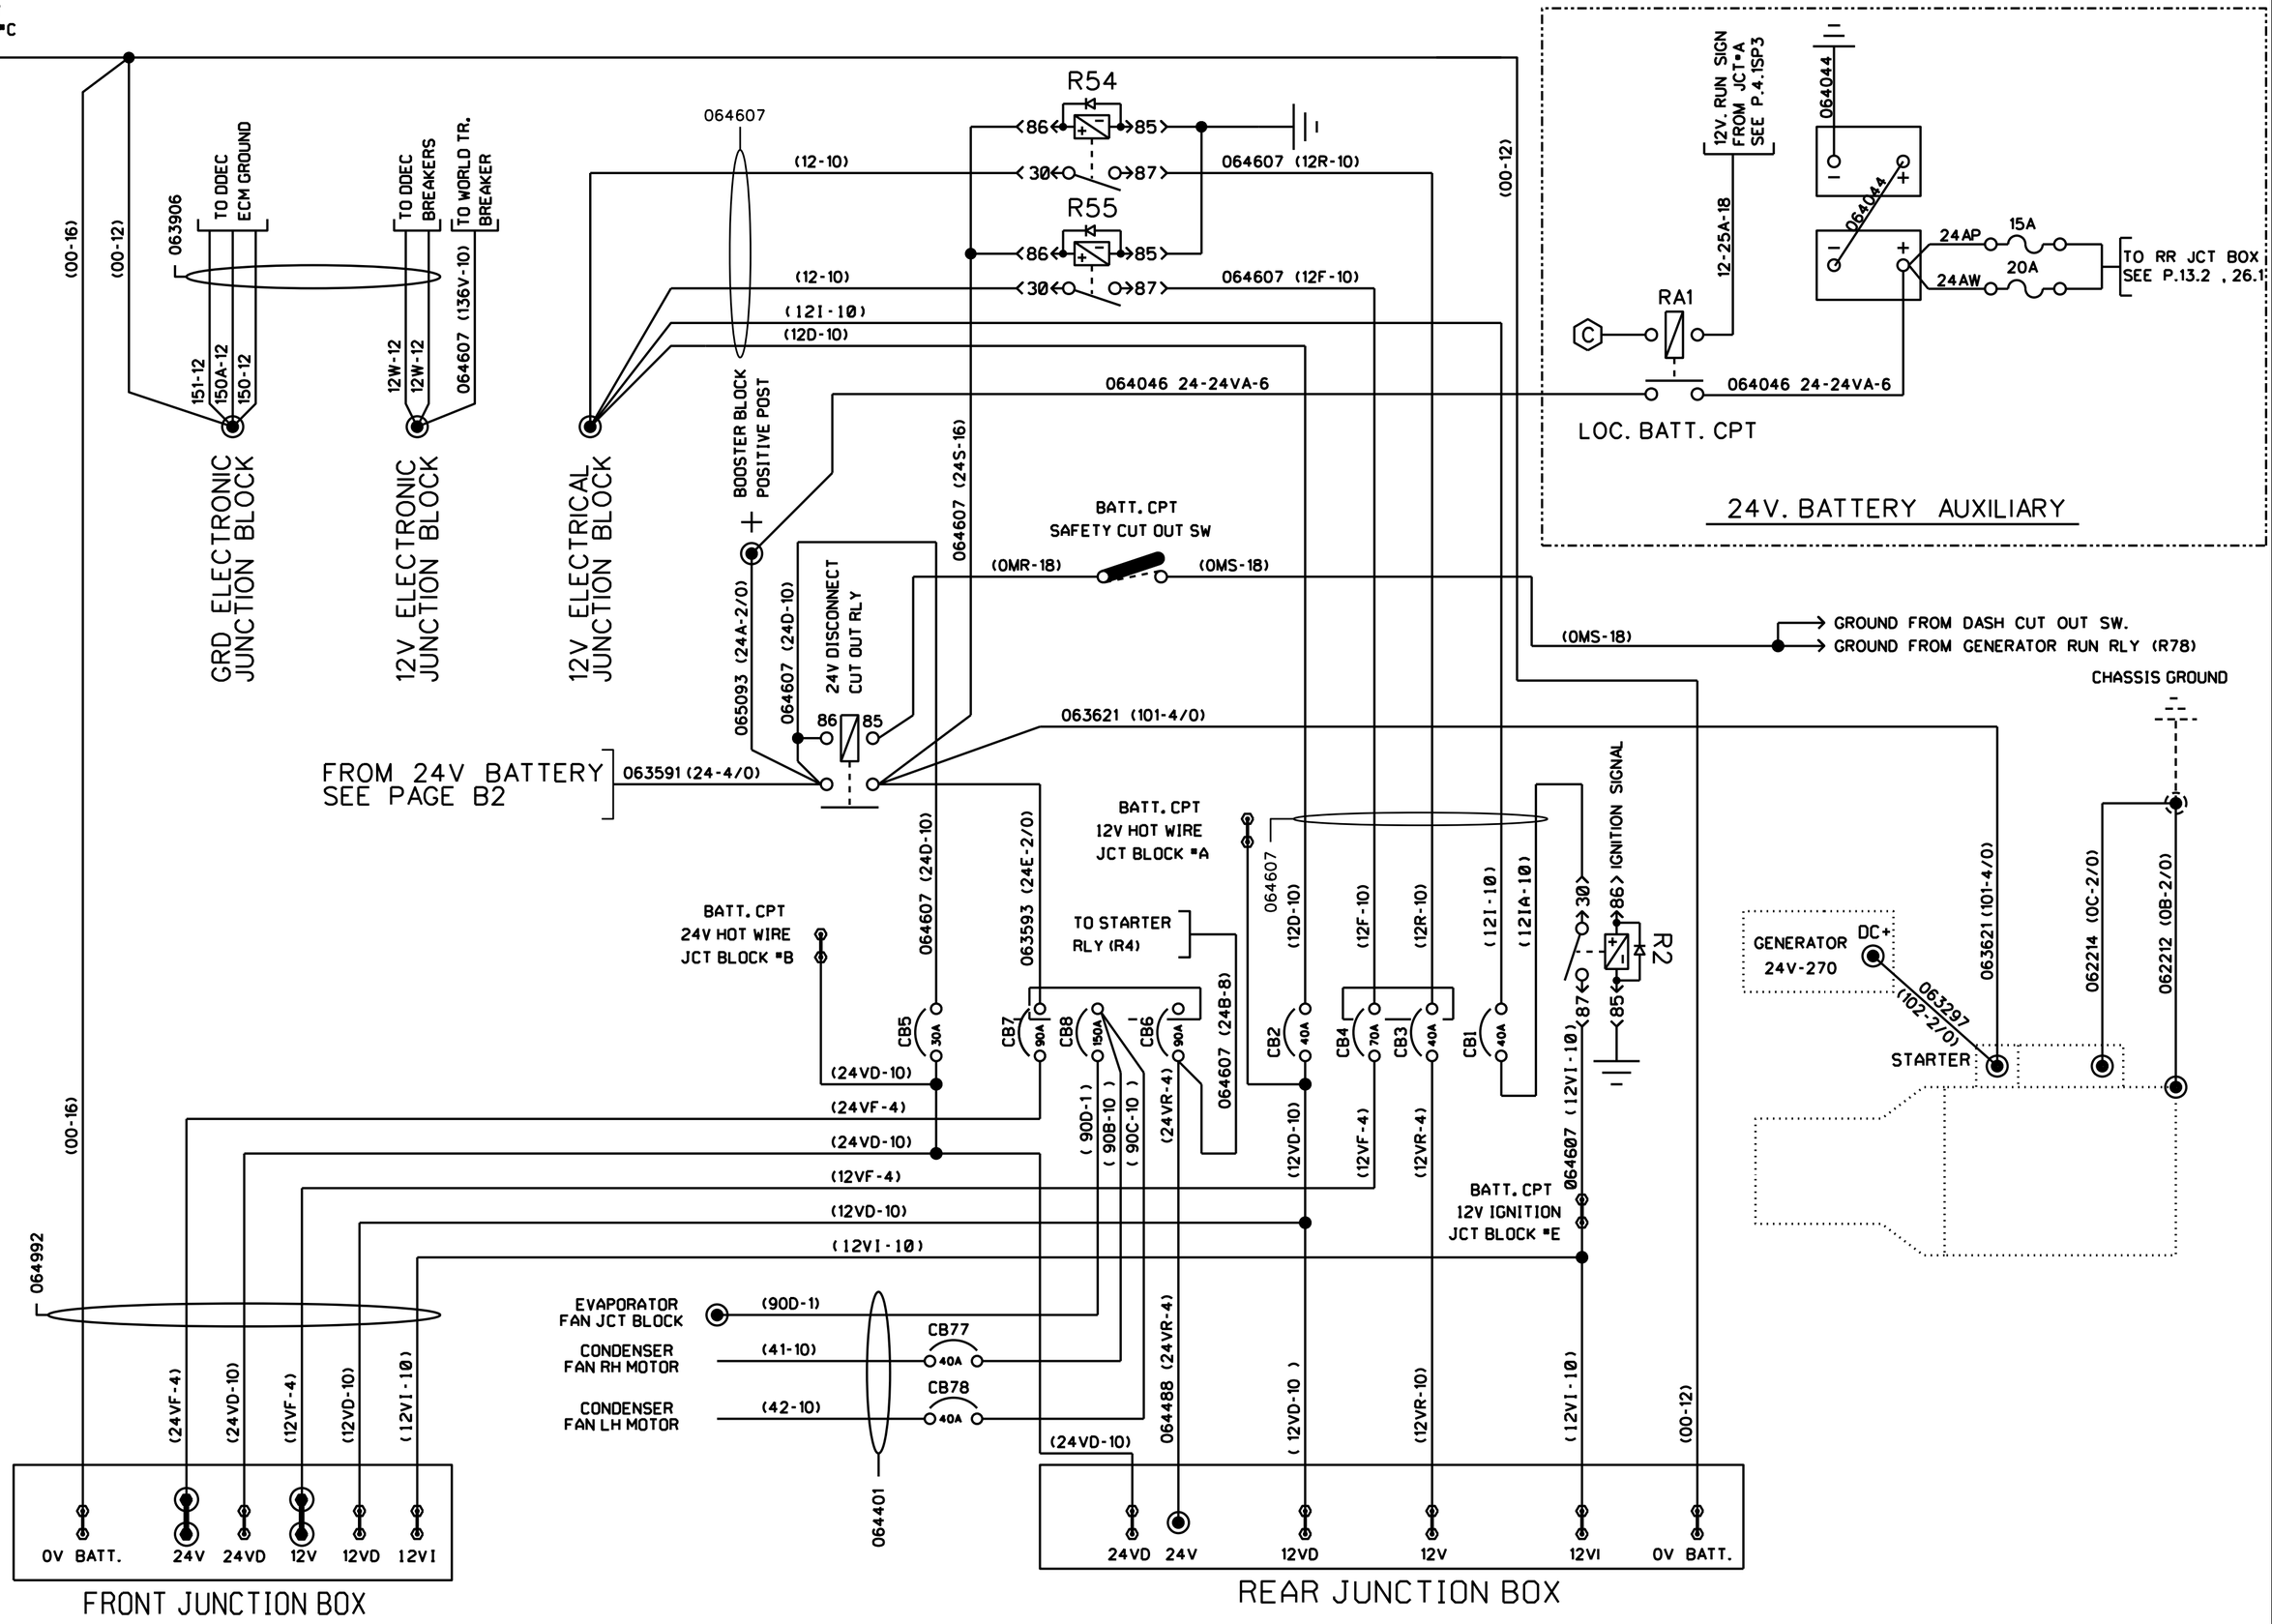

ADIRONDACK

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: B1sp2	REVISION 24

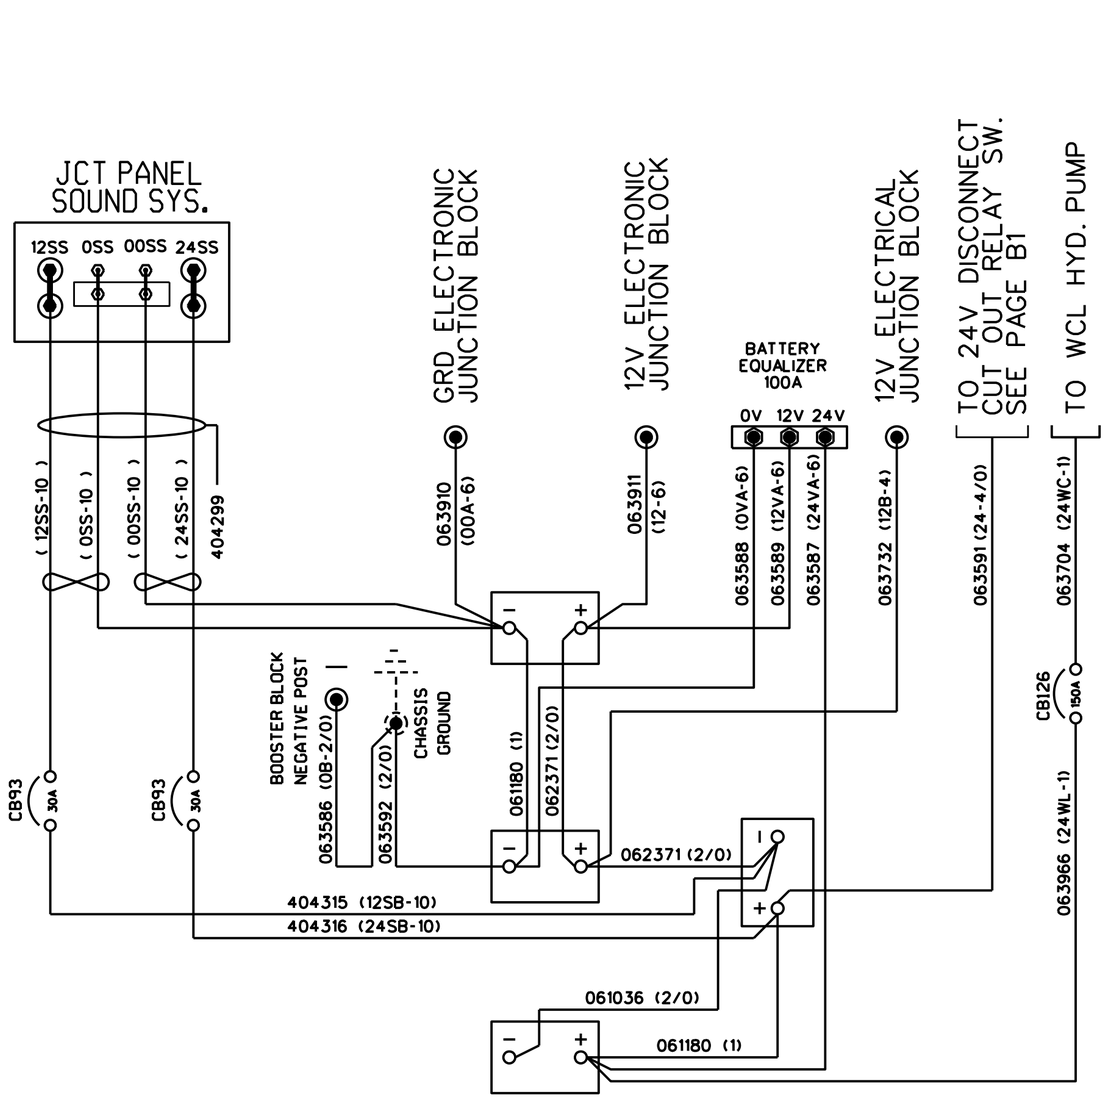

STANDARD BATTERIES

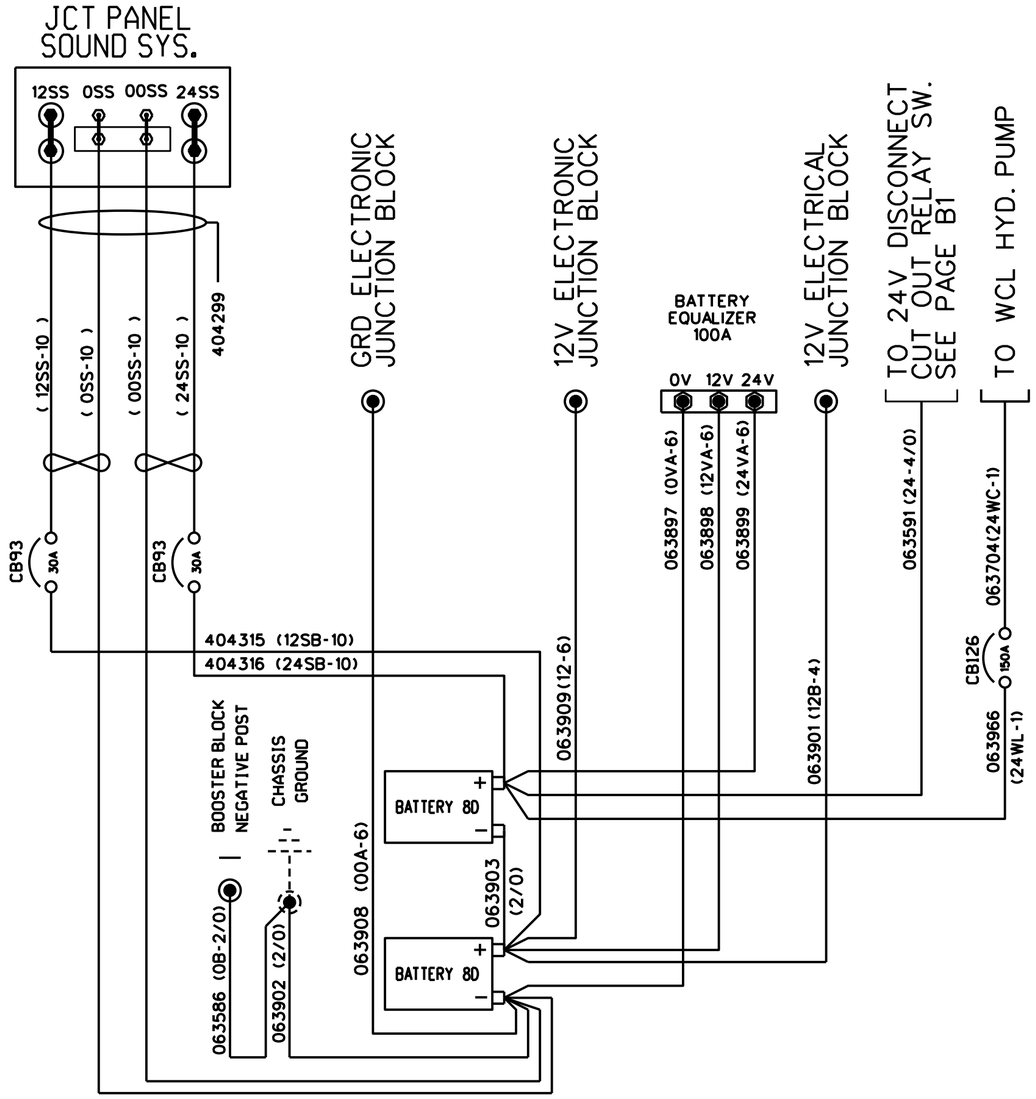

8D BATTERIES

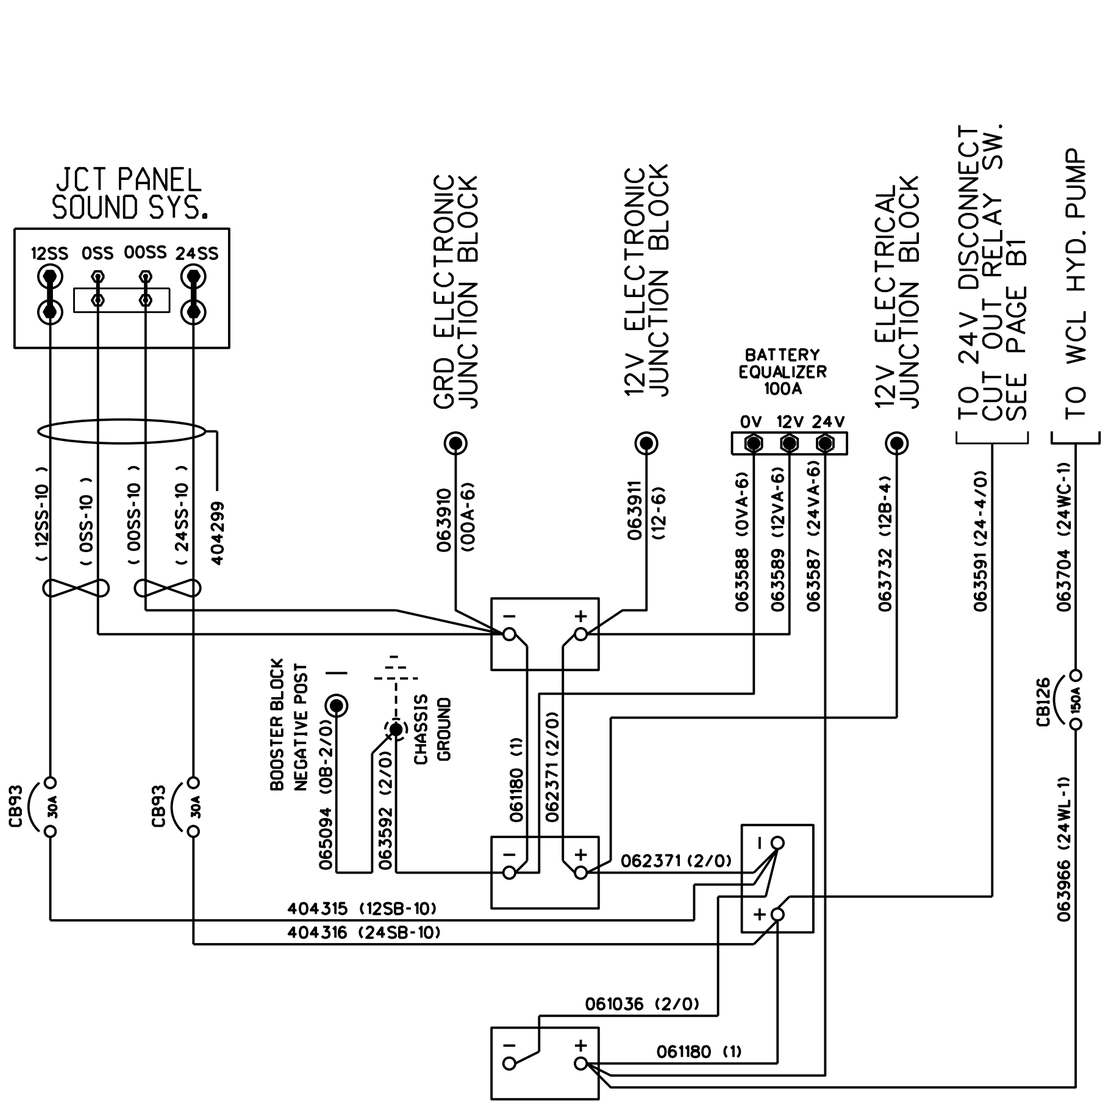

STANDARD BATTERIES

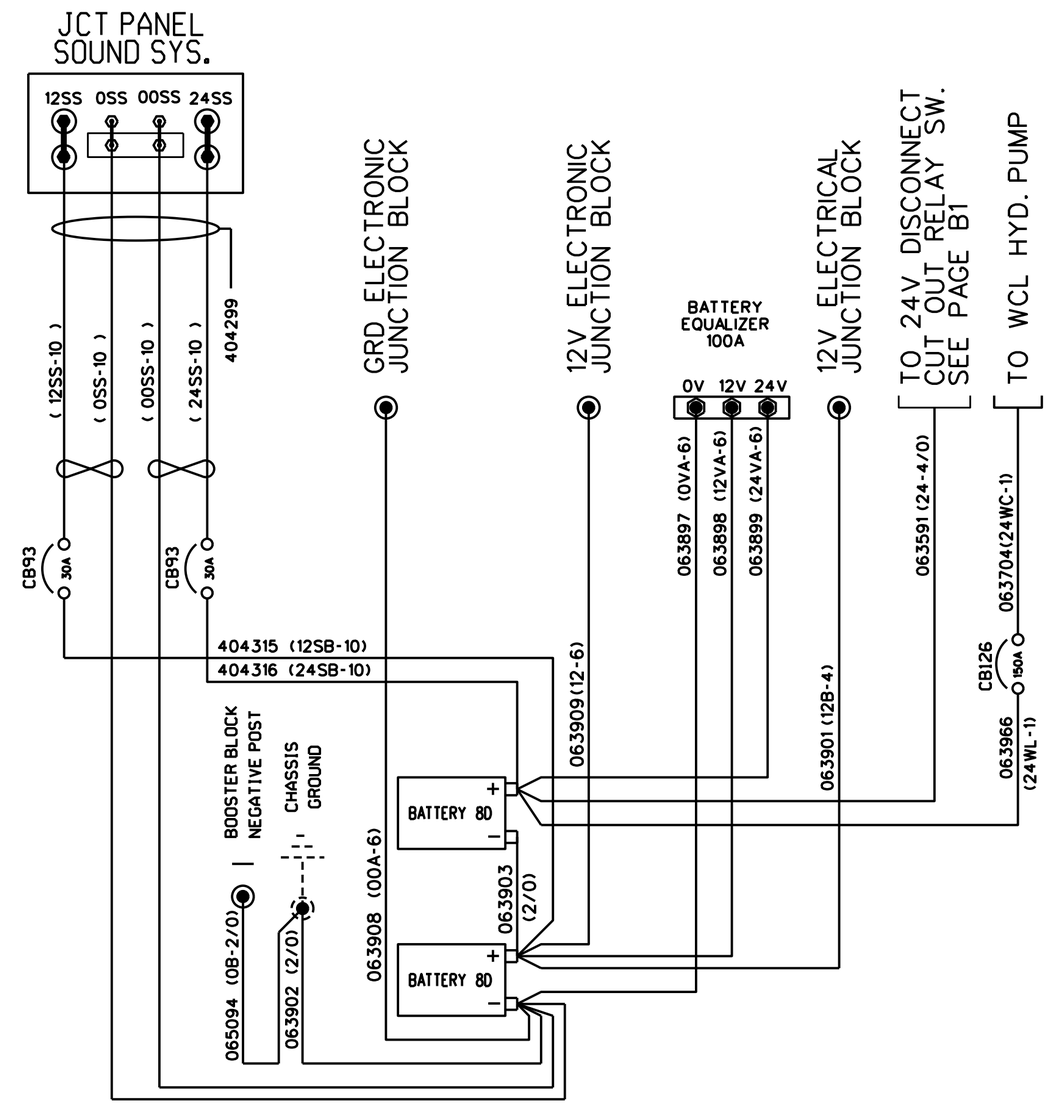

8D BATTERIES

RR. ROOF ACCESSORIES 062482 C87
C205 (RH HAT RACK STOP LIGHTING+SPEAKERS) 064561(H345) 064569(H341) C575
(RH HAT RACK READING LTS+VENT.) 064559(H345) 064567(H341) C38
INDIRECT LIGHTING 064562(H345) 064570(H341) WITH HAT RACK DOORS 064563(H345) 064571(H341) WITHOUT HAT RACK DOORS C576
LAVATORY ACCESSORIES 064306 C43
LAVATORY DOOR LOCK SW. AND NIGHT LIGHT 064574 C143
WCL ACCESSORIES 063963 ST & ST 064223 RIC-9

C122 CAMERA DOOR SOLENOID
C124 ETHER
C126 FLUSHING PUMP
C116 ENGINE CPT LT
C230 064101 C232 PRIME PUMP SW.
C231 FUEL PRIME PUMP
C127 063715 C127 FUEL WATER FILTER
C120 063209 RR RH LOWER LAMPS
C119 063210 RR LH LOWER LAMPS
064665
C342 RR START SW.
C327 RR CTRL START SW.
C118 LAVATORY FAN
C125 BACK UP ALARM
C432 ENG. LTS RR DOOR SW.
C287 ENG. LTS RH DOOR SW.
C133 A/C HI PRESS SW
C413 HI UNLOAD PRESS SW
C158 SPEED 1 COND. PRESS SW
C159 SPEED 2 COND. PRESS SW
C128 COMPRESSOR CLUTCH
C130 COMPRESSOR UNLOADER
C131 COMPRESSOR UNLOADER
C132 A/C LO PRESS SW
C600 LO UNLOAD PRESS. SW.
C409 COOLANT LEVEL PROBE
C116 ENGINE CPT LT
C115 063331 AIR DRYER
PRE-HEATER CONNECTION
064601
C32 C309 E.C.M. DDEC

RAMCO MIRROR C590
SPARTAN MIRROR C269
WIPER MOTOR C177
WIPER PULSE MODULE C176
C239 HI BUOY VALV
C106 WATER VALV
STEP LT
C105 LIQ.SOL. VALV
DOOR SW.
RH CORNERING
C104 RH FR SIDE FLASHER
C103 RH FR SIDE MARKER
C603 064636 WINDOW AJAR
064601
064591
CONDENSER FAN 064401
DOOR ACCES. C82 063951
ENTRANCE DOOR MODULE 064653
C267
C243 RH HEADLAMPS
C246 RH FRONT MARKER & FLASHER
C435 KNEELING ALARM
STEP LT
LUG DOOR LOCK VALVE
TAG & LO BUOY CTRL VALVE
C467 C466 C465 RESISTANCE MODULE
SHIFTER
C245 RH FOG
C260 C183 C240 C433
063782 STOP PRESS. SW.
2 PSI BRK (RET.)
4 PSI BRK (RET.)
7 PSI BRK (RET.)
DEFROST UNIT C480 C481
C539 C540 A/C CONTROL
AA1 AA2 C573 C572 C571 C570 T.T.L.T. MODULE
CONTROL HEAD
R.H. SW. PANEL
L.H. SW. PANEL
C244 LH FOG
PARK BRK PRESS SW
KNEELING PRESS SW & VALVE
064590
DIGITAL THERMOMETER
HAND LEVER RETARDER
ACCELERATOR FOOT PEDAL
CRUISE CTRL SW.
OUTSIDE SENSOR
C102 LH FR SIDE FLASHER
C103 LH FR SIDE MARKER
C538 REI PANEL UPPER FRONT AXLE
063650 C323
C380 DDR
C98
064601
064591
064592(H345) 064609(H341)
404572
C584 AIR HORN
C8 C9 C6 C5 C582
C4 C2 C3 C1
C500 PRO-DRIVER
C406
C92
404635
C50 LOW BUOY VAL.
C171 C70 064587 L.H. CONSOLE
064575
C74 C72 C71
FR. JCT. BOX 064576
C506 C45 064199
C601 404637 WINDOW AJAR
064606
C507 DIGITAL CLOCK
404310(H345) 404309(H341)
GROUND STUD
TO BACK UP P.A. AMPLIFIER C396
C210
404572 PARCEL RACK (SOUND SYS.)
RAMCO C589 064656 C589
SPARTAN C268
CLEARANCE LTS
C478 ELECTRONIC
C364 ELECTRIC
DESTINATION SIGN.

CLUSTER: RX CY LY LX GROUND STUD
LH HEADLAMPS C243
LH FRONT MARKER & FLASHER C242
HORNS
LH CORNERING
SERVICE CPT LTS
WASHER PUMP C11 C12
404571 C588

C67 LUG. LT
C65 LUG. LT
C104 RH CENT. FLASHER
C103 RH CENT. MARKER
C63 LUG. LT
ESPAR PUMP & FUEL TANK GA. 064116
C107 C152
C61 LUG. LT
C77 A.R. SENS.
C80 A.R. SENS.
C68 LUG. LT
C66 LUG. LT
C102 LH CENT. FLASHER
C103 LH CENT. MARKER
C64 LUG. LT
C62 LUG. LT
C76 A.R. SENS.
C52
C156 BYPASS VALVE
C157 WATER PUMP
C155 WATER VALVE
C112 EVAP. MOD.
C153 A.A. SENS.
C111 DAMPER
C60 R.J.B LTS.
WCL PUMP RIC-9
064242
BATTERY COMPT. ACCESSORIES
064401
C397 064618 ENGINE CRADLE ACCESSORIES
C407 C408 C415

064590 RH SENSOR & SOLENOID LH SENSOR & SOLENOID
064595 RH SENSOR & SOLENOID LH SENSOR & SOLENOID
C96 C97 C69
064588
ECU ABS CX1 CX2 CX3 CX4
ABS BLINK CODE SW.
064592(H345) 064609(H341) 064591 064594 064665 064558
BAT. JCT. CPT 064607 063630
ENGINE DDEC HARNESS SENSOR
064597
C457 TRANSM. MAIN. CONN.
C463 064582
C462 OUTPUT SPEED
C461 RETARDER TEMP
C460 RETARDER SOLENOID
C459 ENGINE SPEED
C458 TURBINE SPEED
C456 RETARDER ACCUMULATOR SOL.

CVI2 C464 DDR
C414 C186 C90 C220 C388
C21 C20 C15 C610 064128 C91 C35
CS CT E.C.U. WORLD TR. CV
C58 C59 A/C & HEAT JUNCTION PANEL 064593
RR. JCT. BOX 064664 064398(WCL)
PRIME PUMP
C145
RH DOCKING LT
C121 RH FR SIDE FLASHER
C113 RH FR SIDE MARKER
C49 BATTERIES CPT LT
064399
C113 LH FR SIDE MARKER
C114 LH FR SIDE FLASHER
LH DOCKING LT
AISLE LTS 063536 C144
(LH HAT RACK (READING LTS + VENT.) 064556(H345) 064566(H341) C37
(LH HAT RACK STOP LIGHTING + SPEAKERS) 064560(H345) 064568(H341) C578
C577 064564(H345) 064572(H341) WITH HAT RACK DOORS 064565(H345) 064573(H341) WITHOUT HAT RACK DOORS
INDIRECT LIGHTING

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: C	REVISION 01

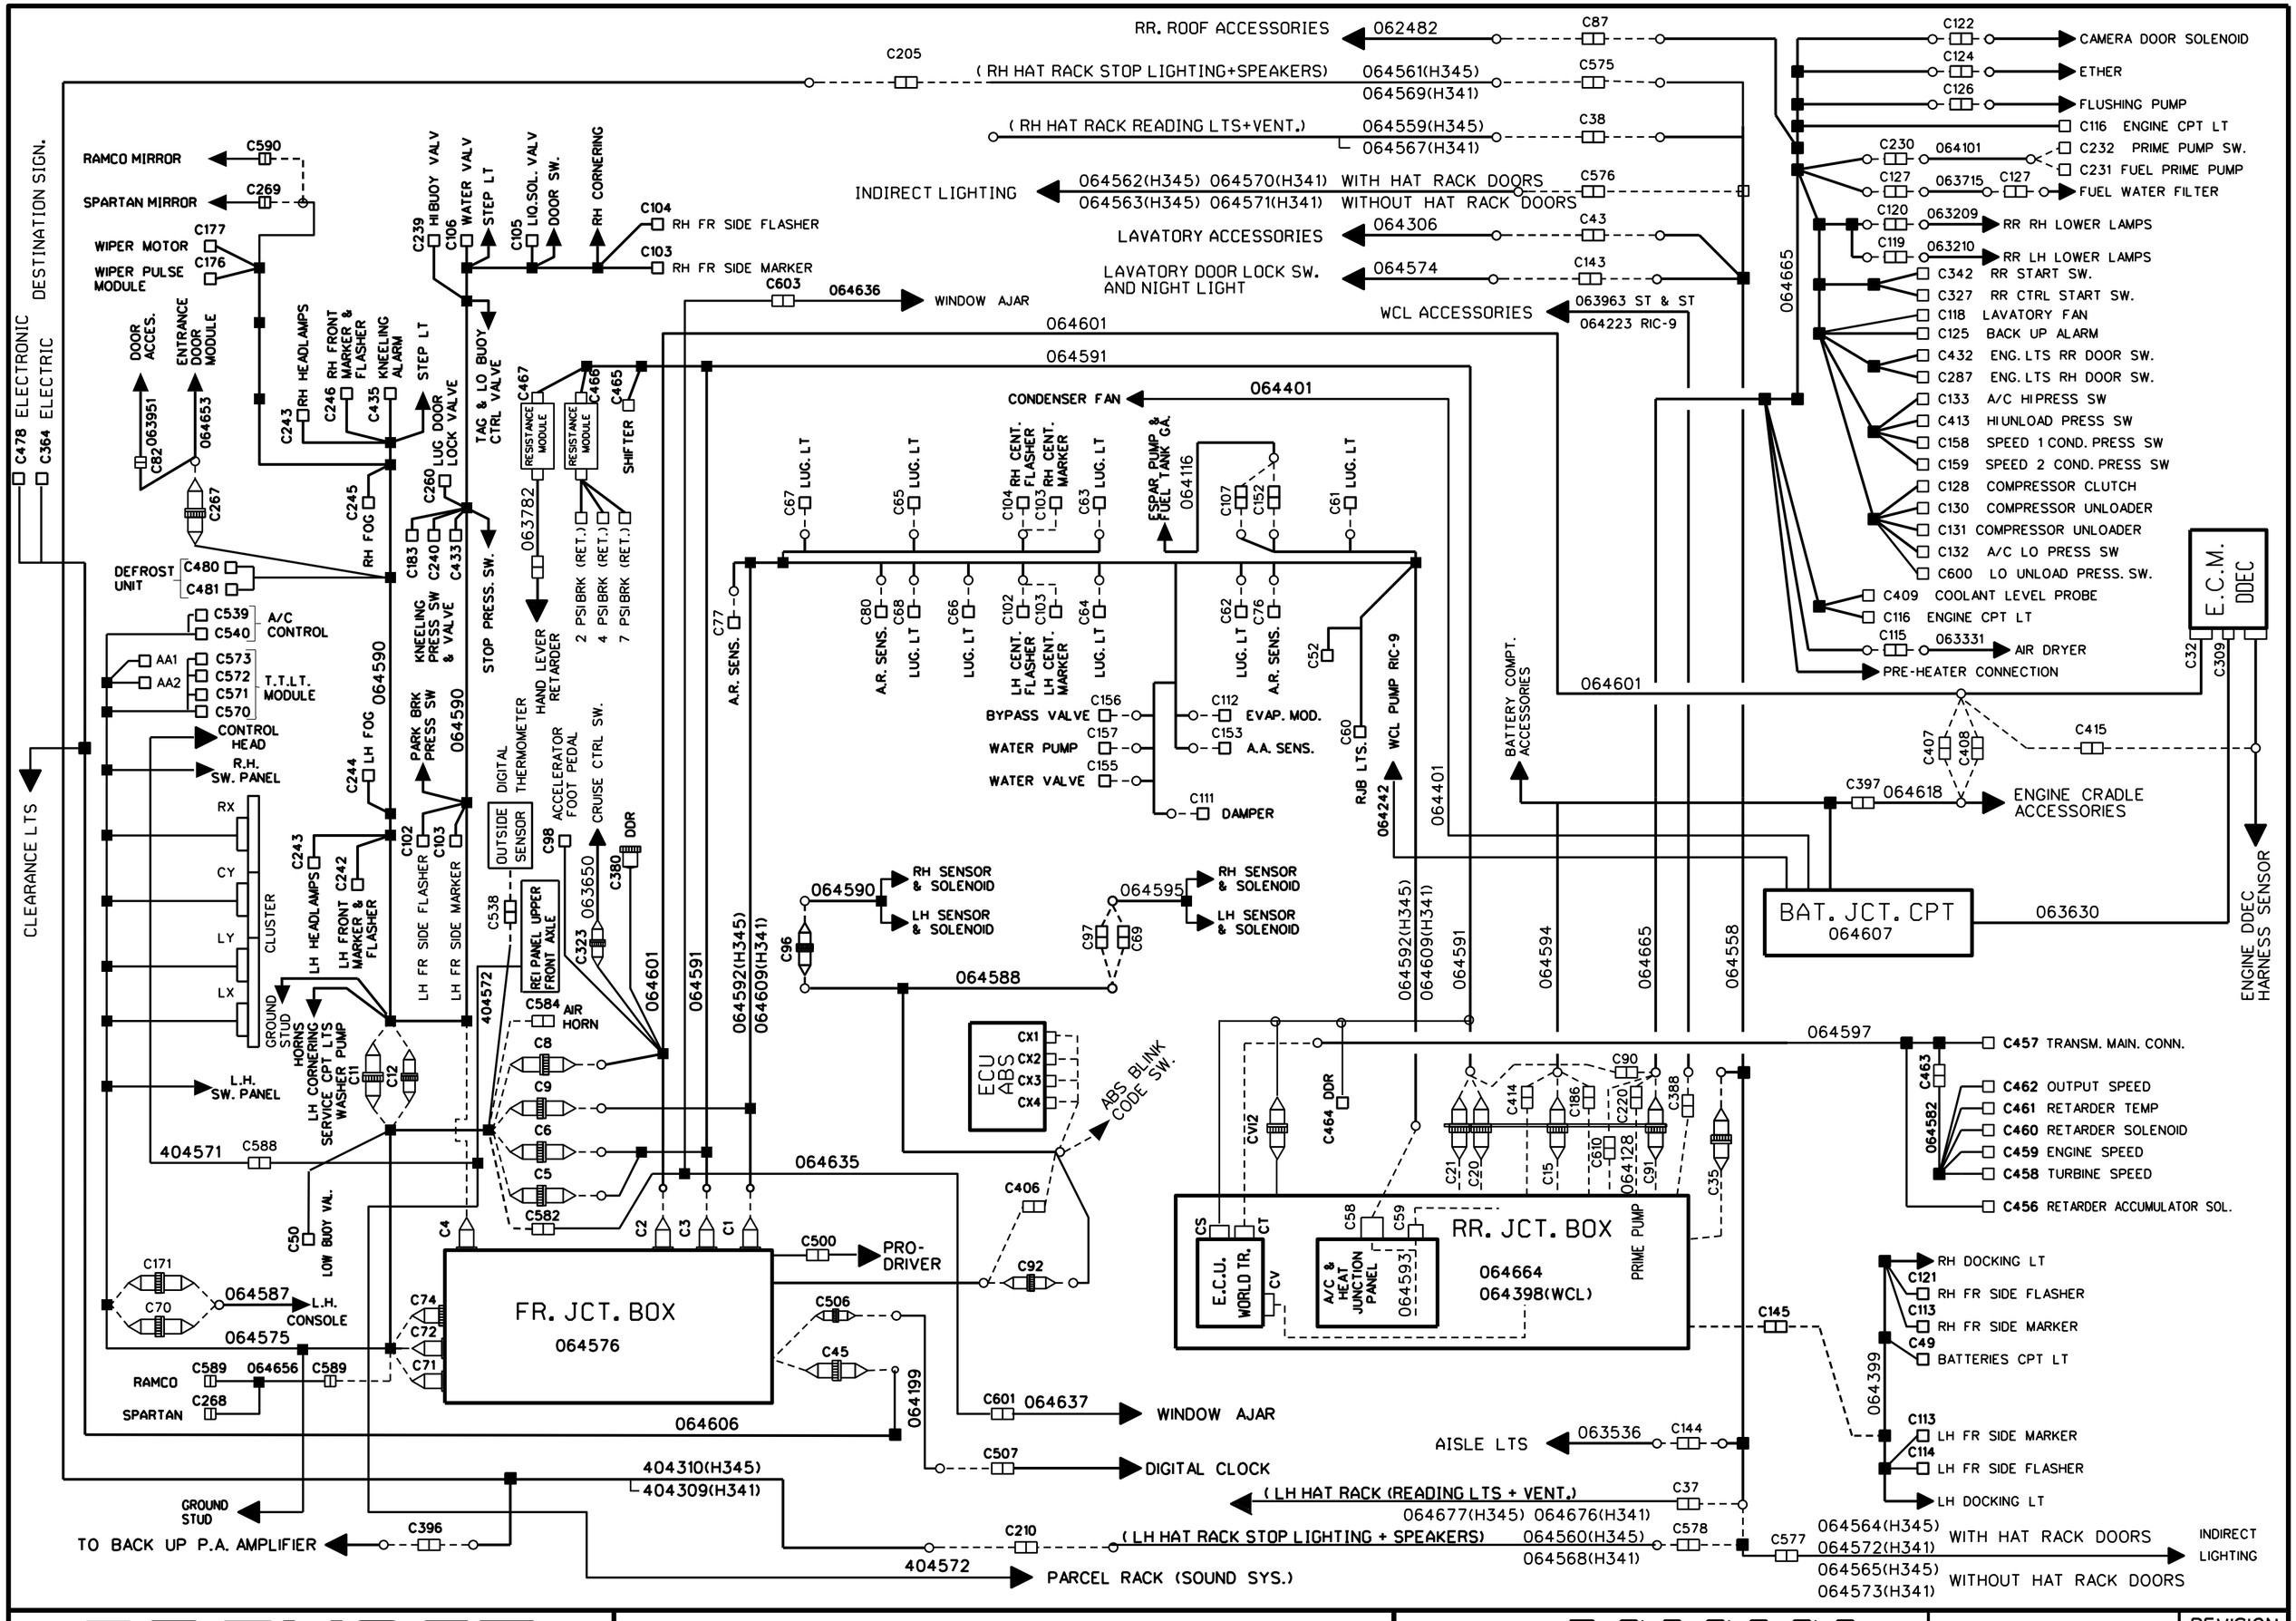

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: C	REVISION 01

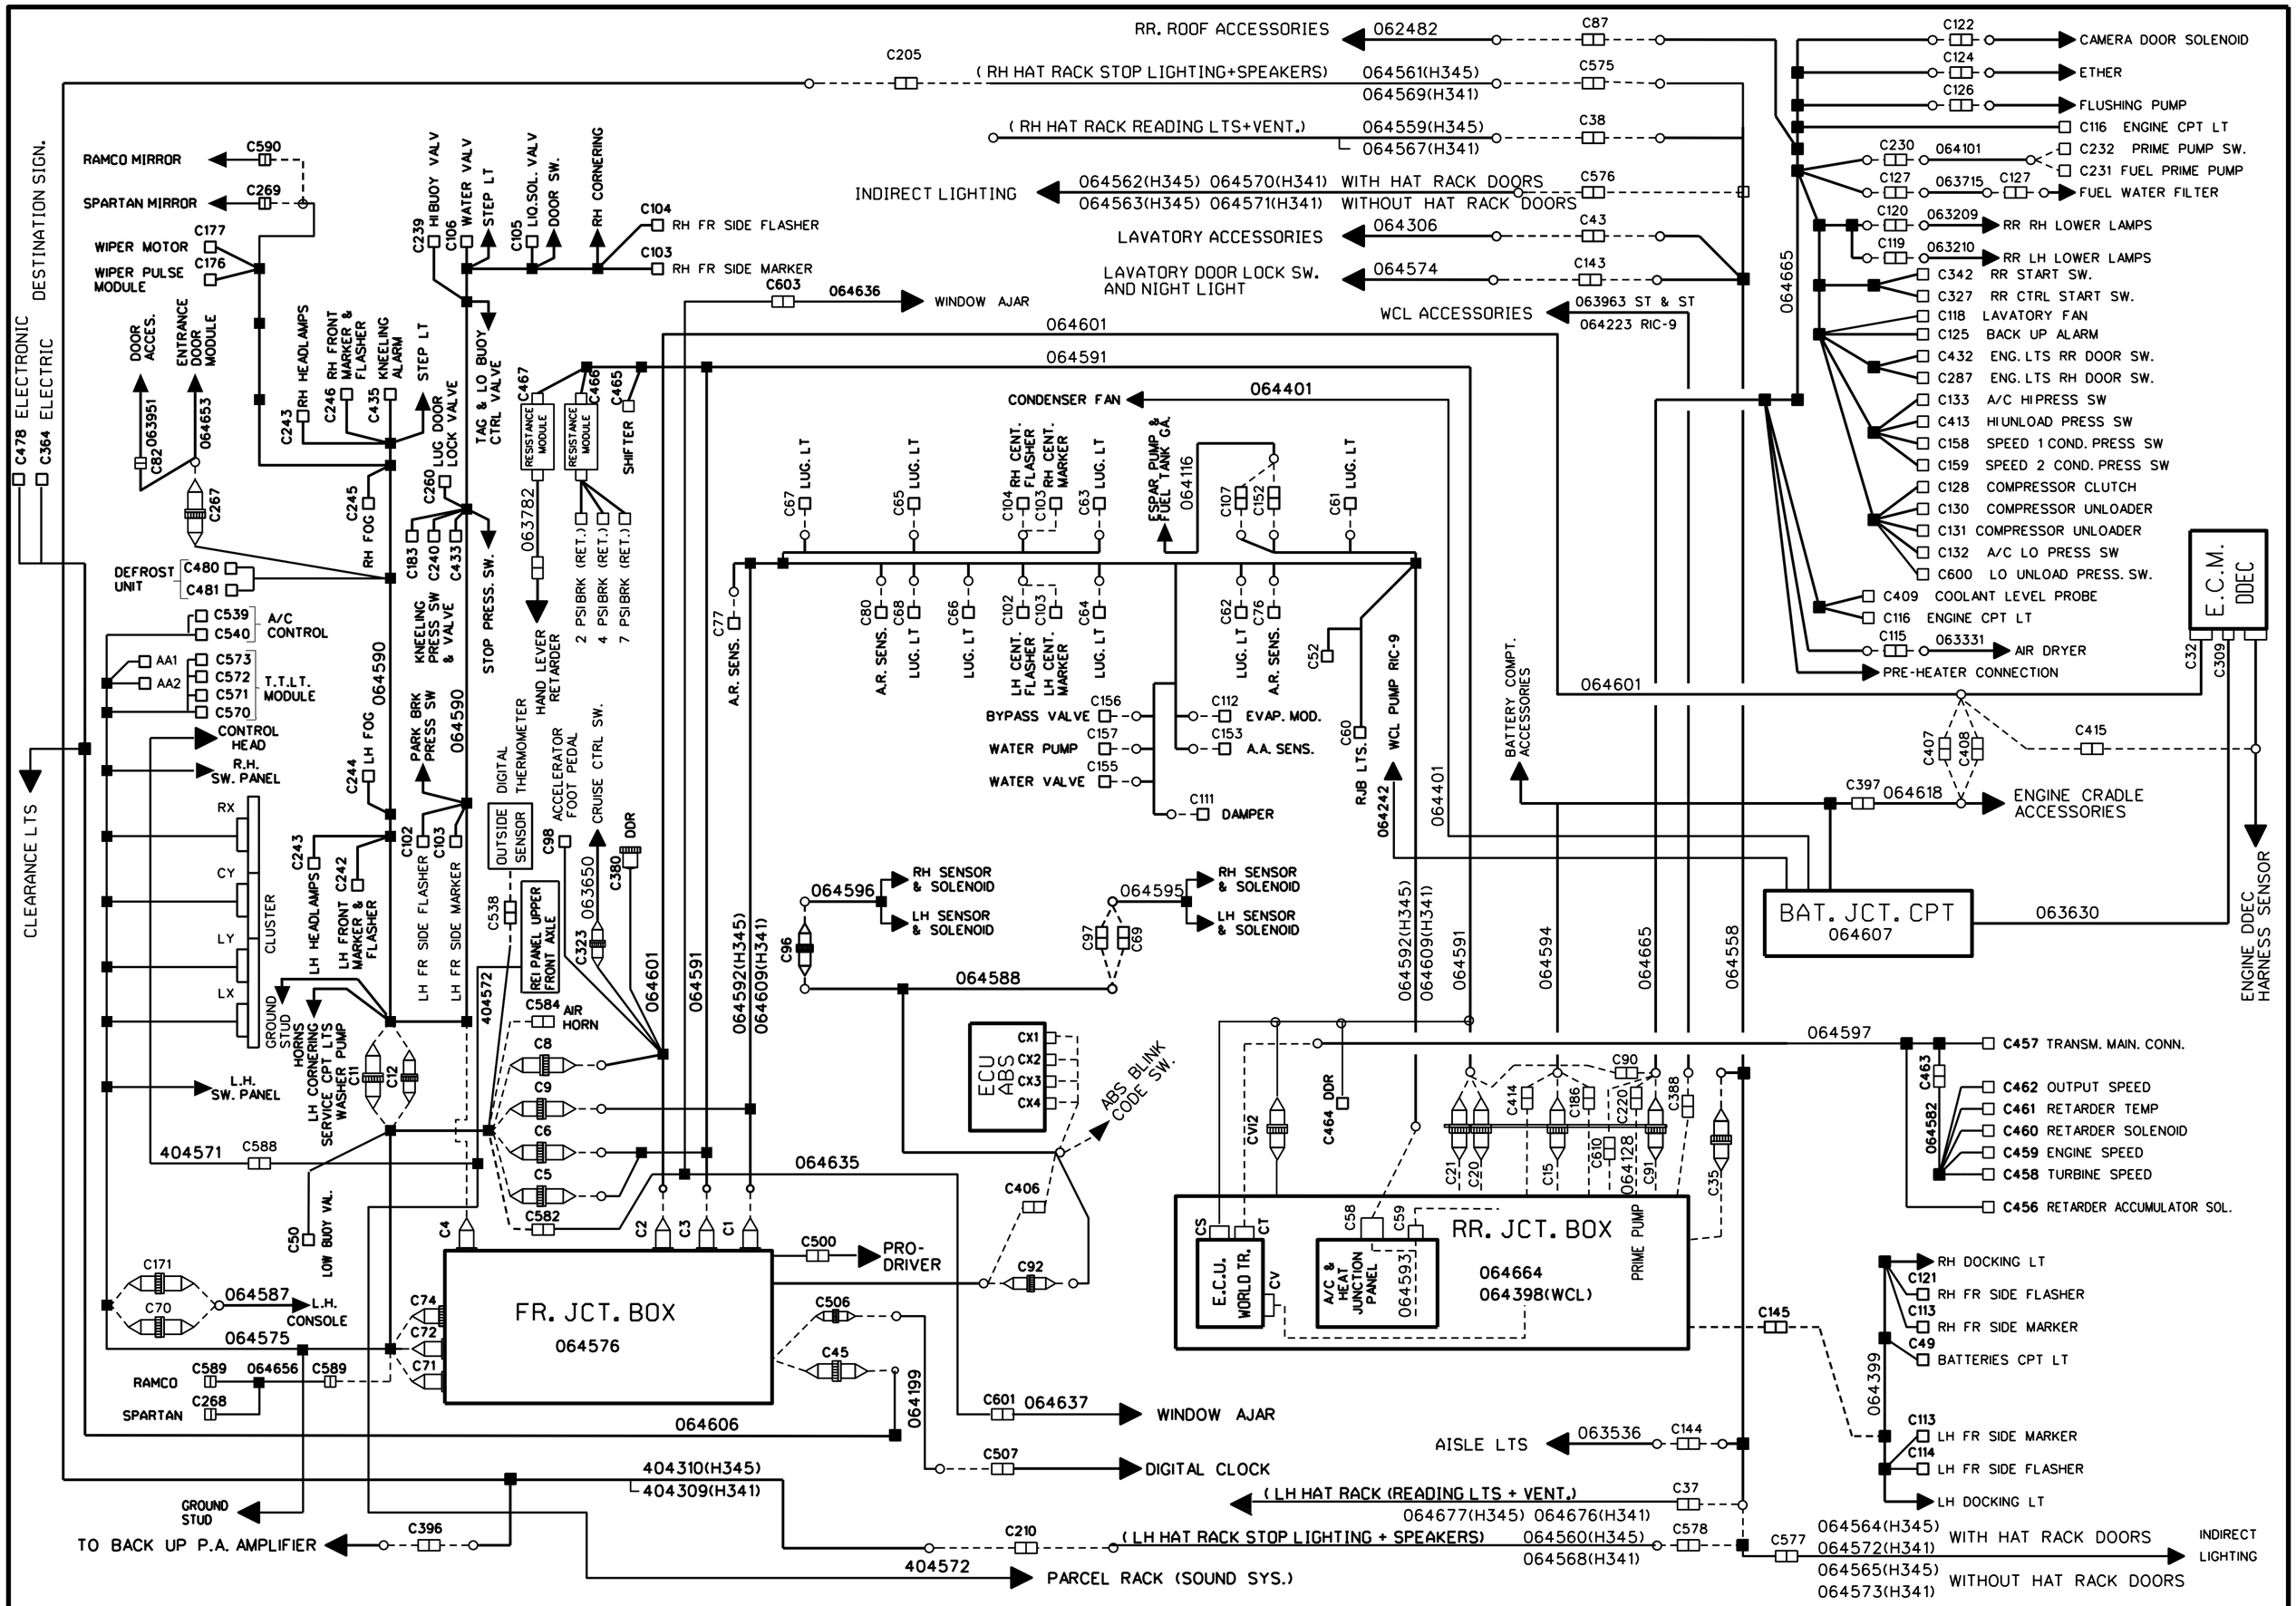

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: C	REVISION 02

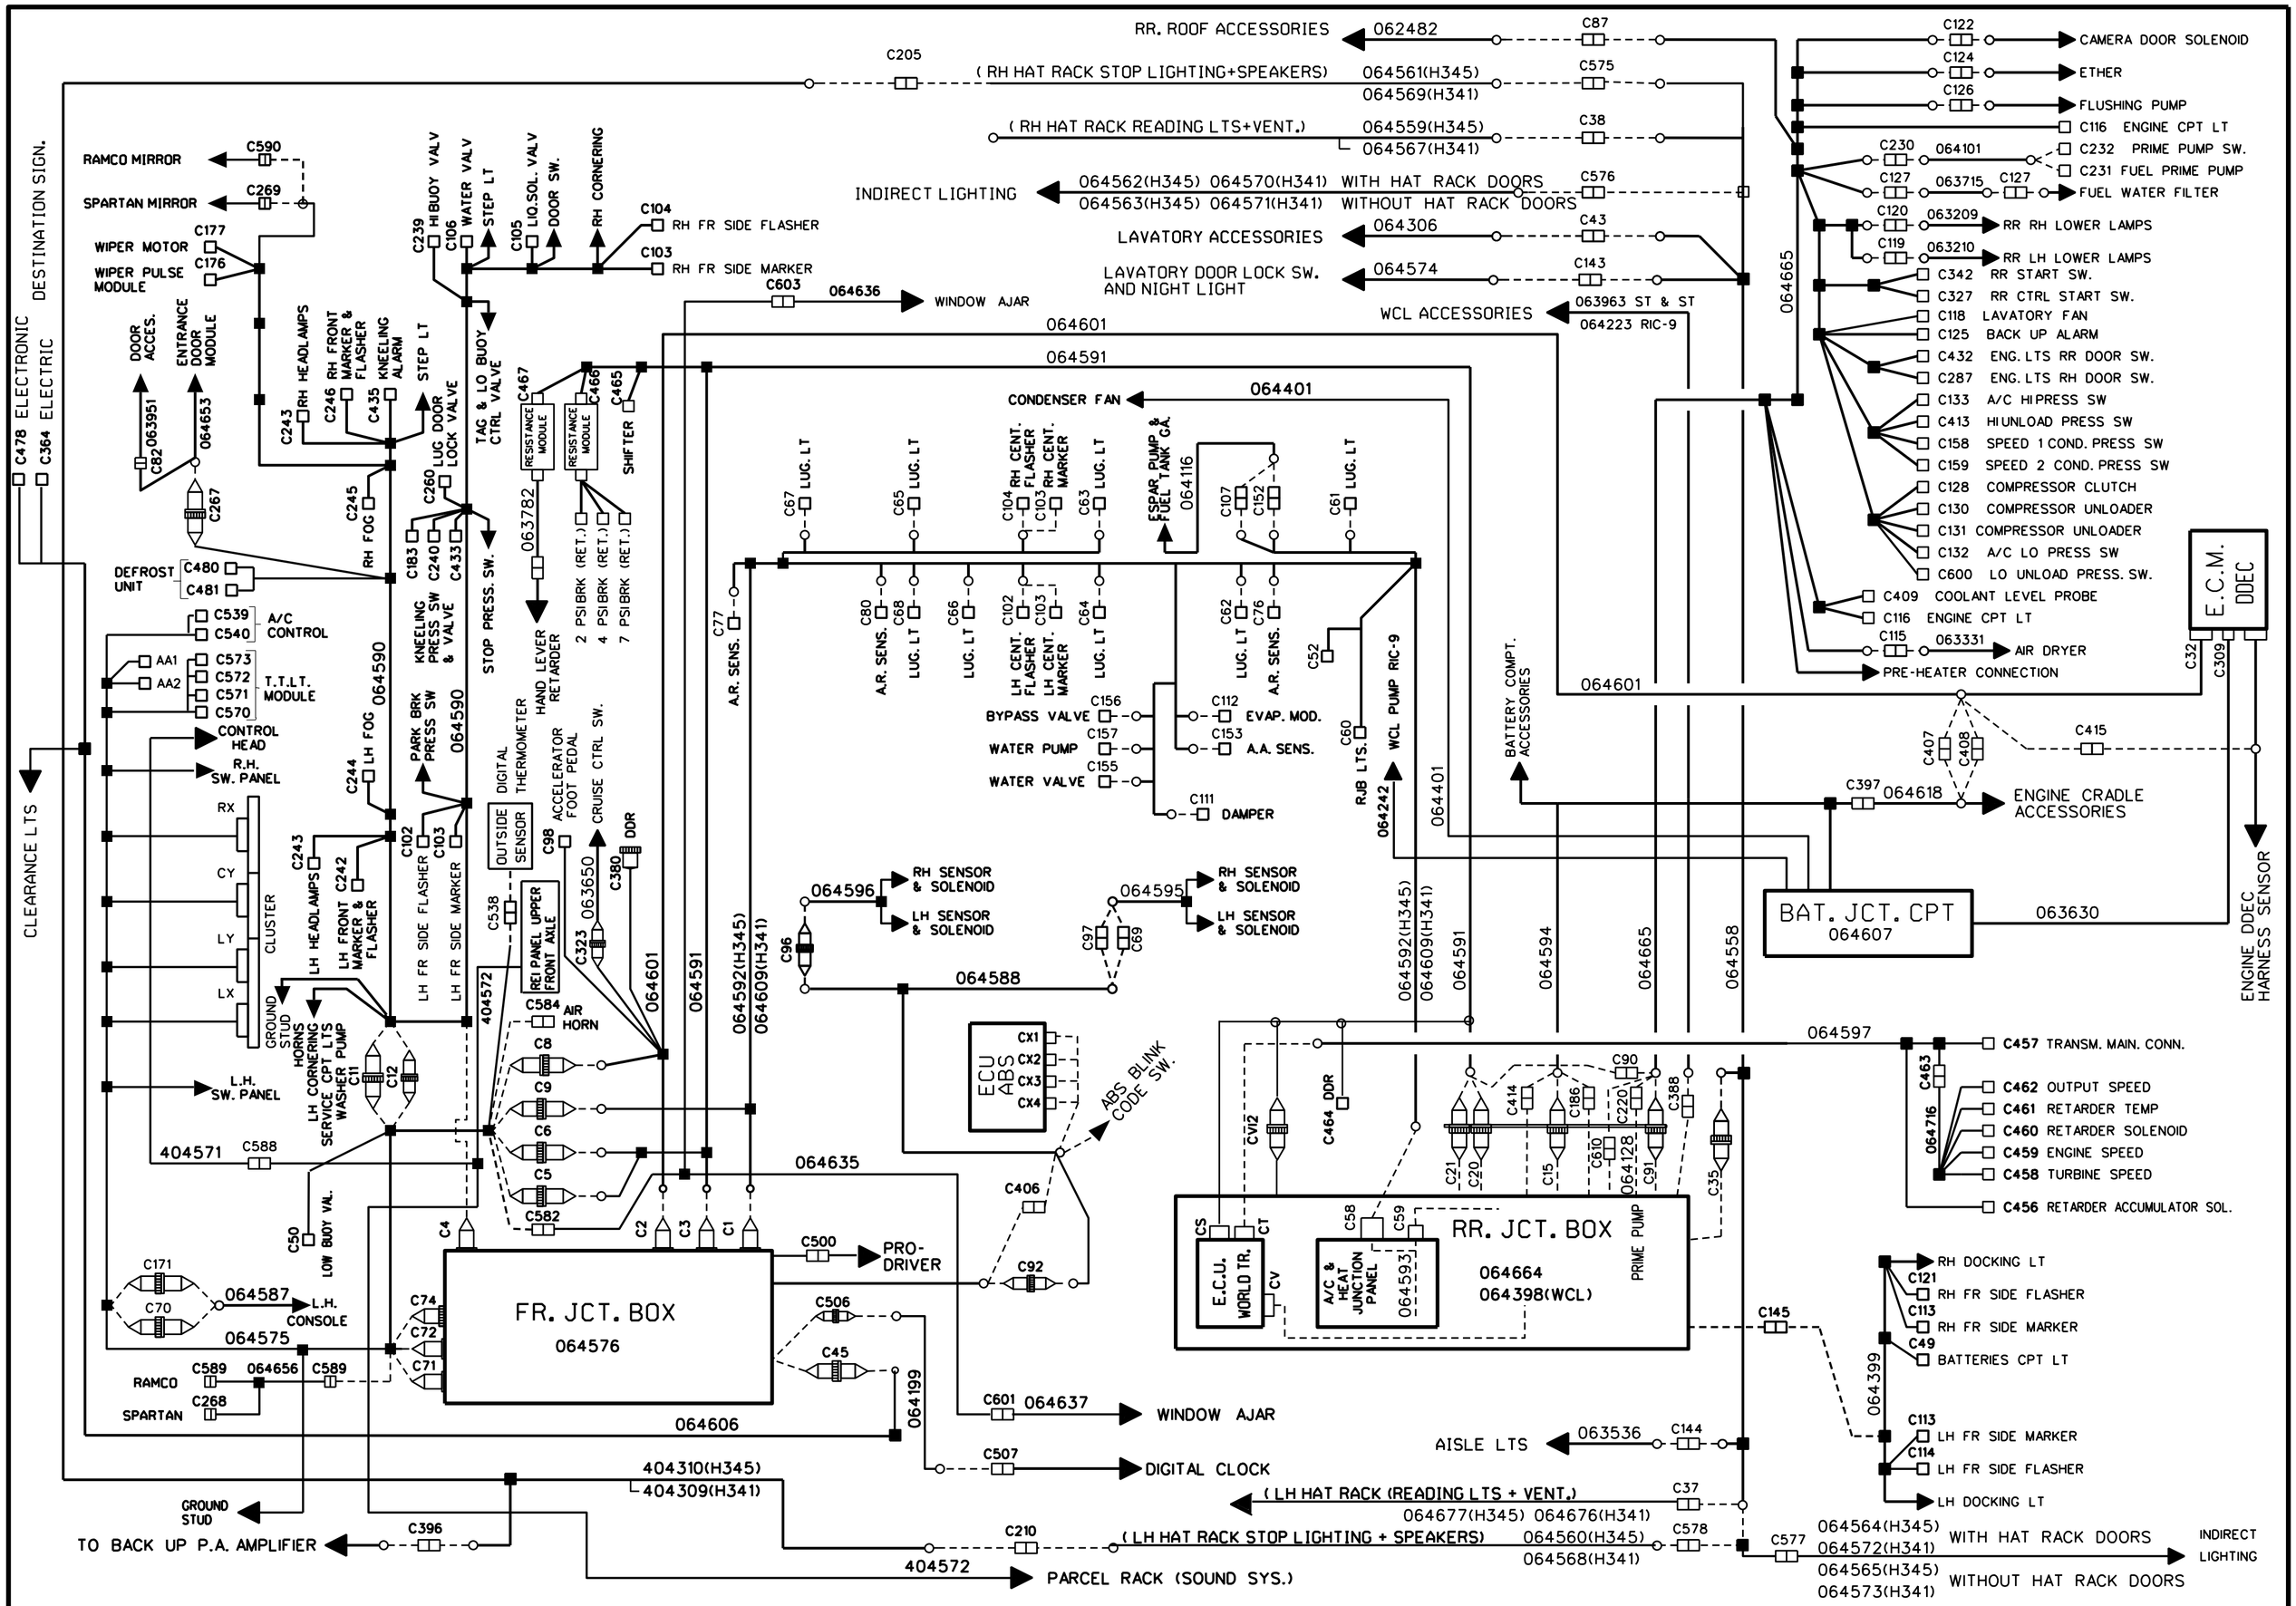

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: C	REVISION 03

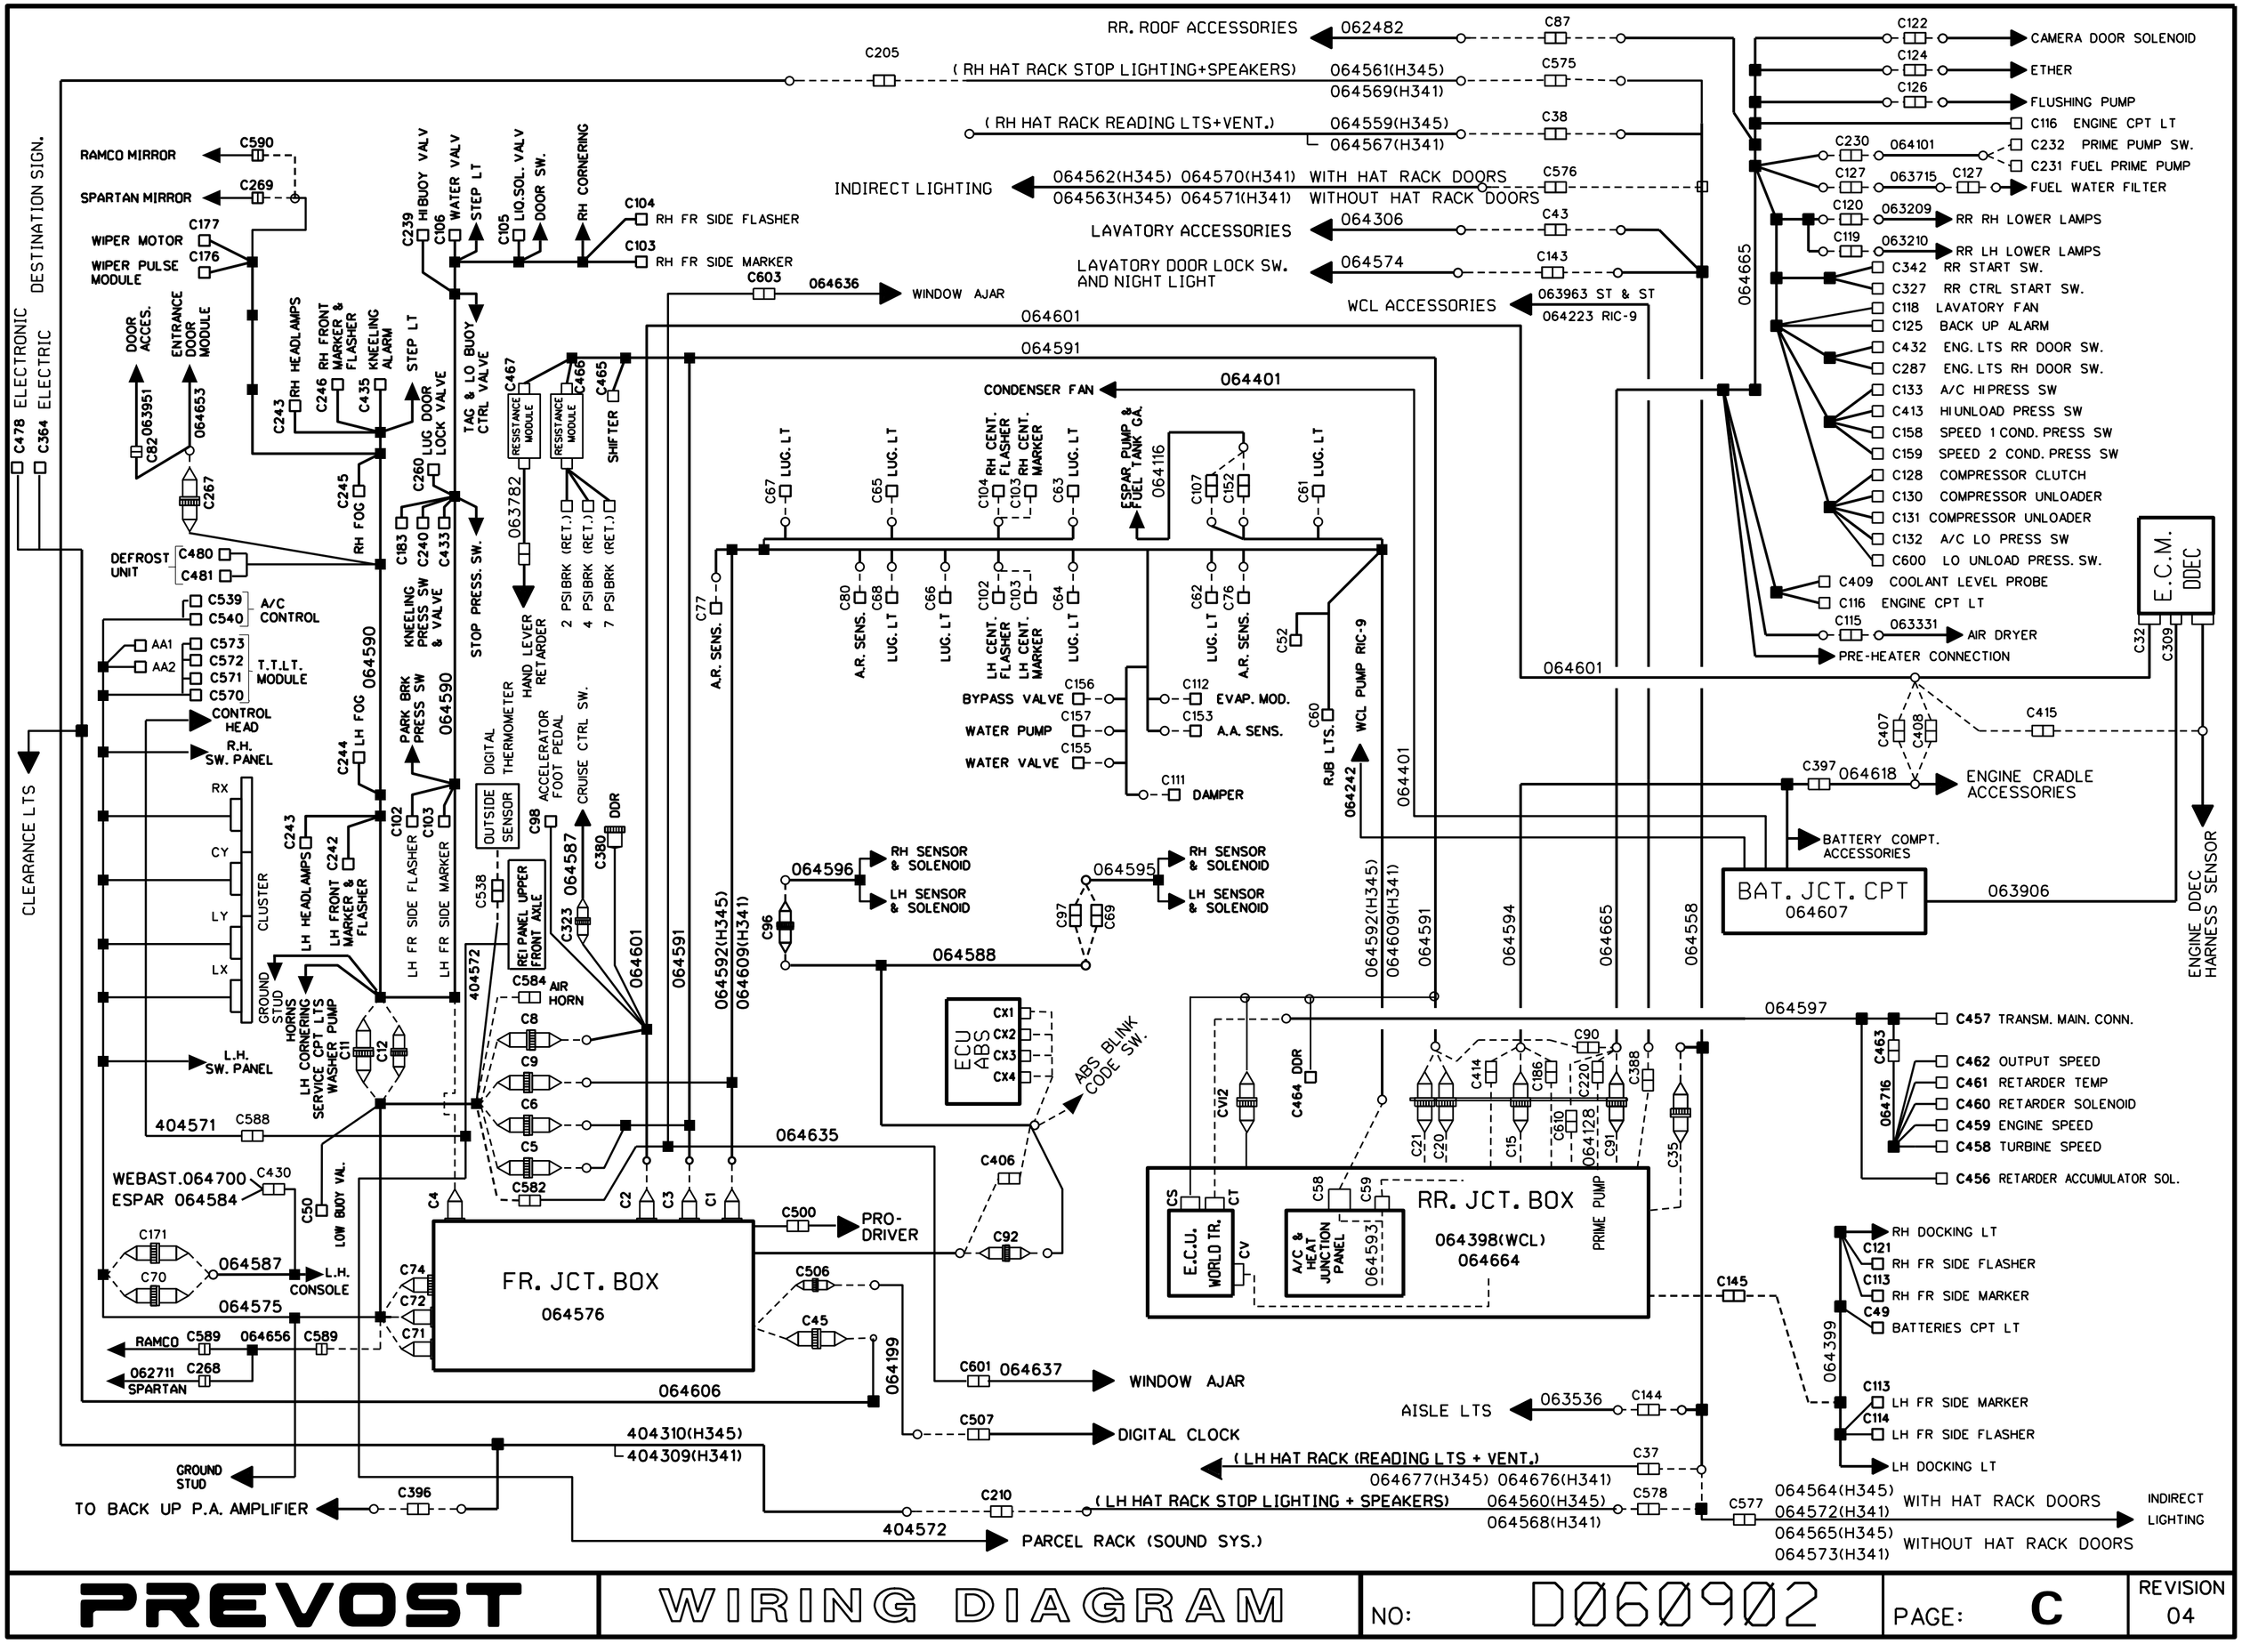

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: C	REVISION 04

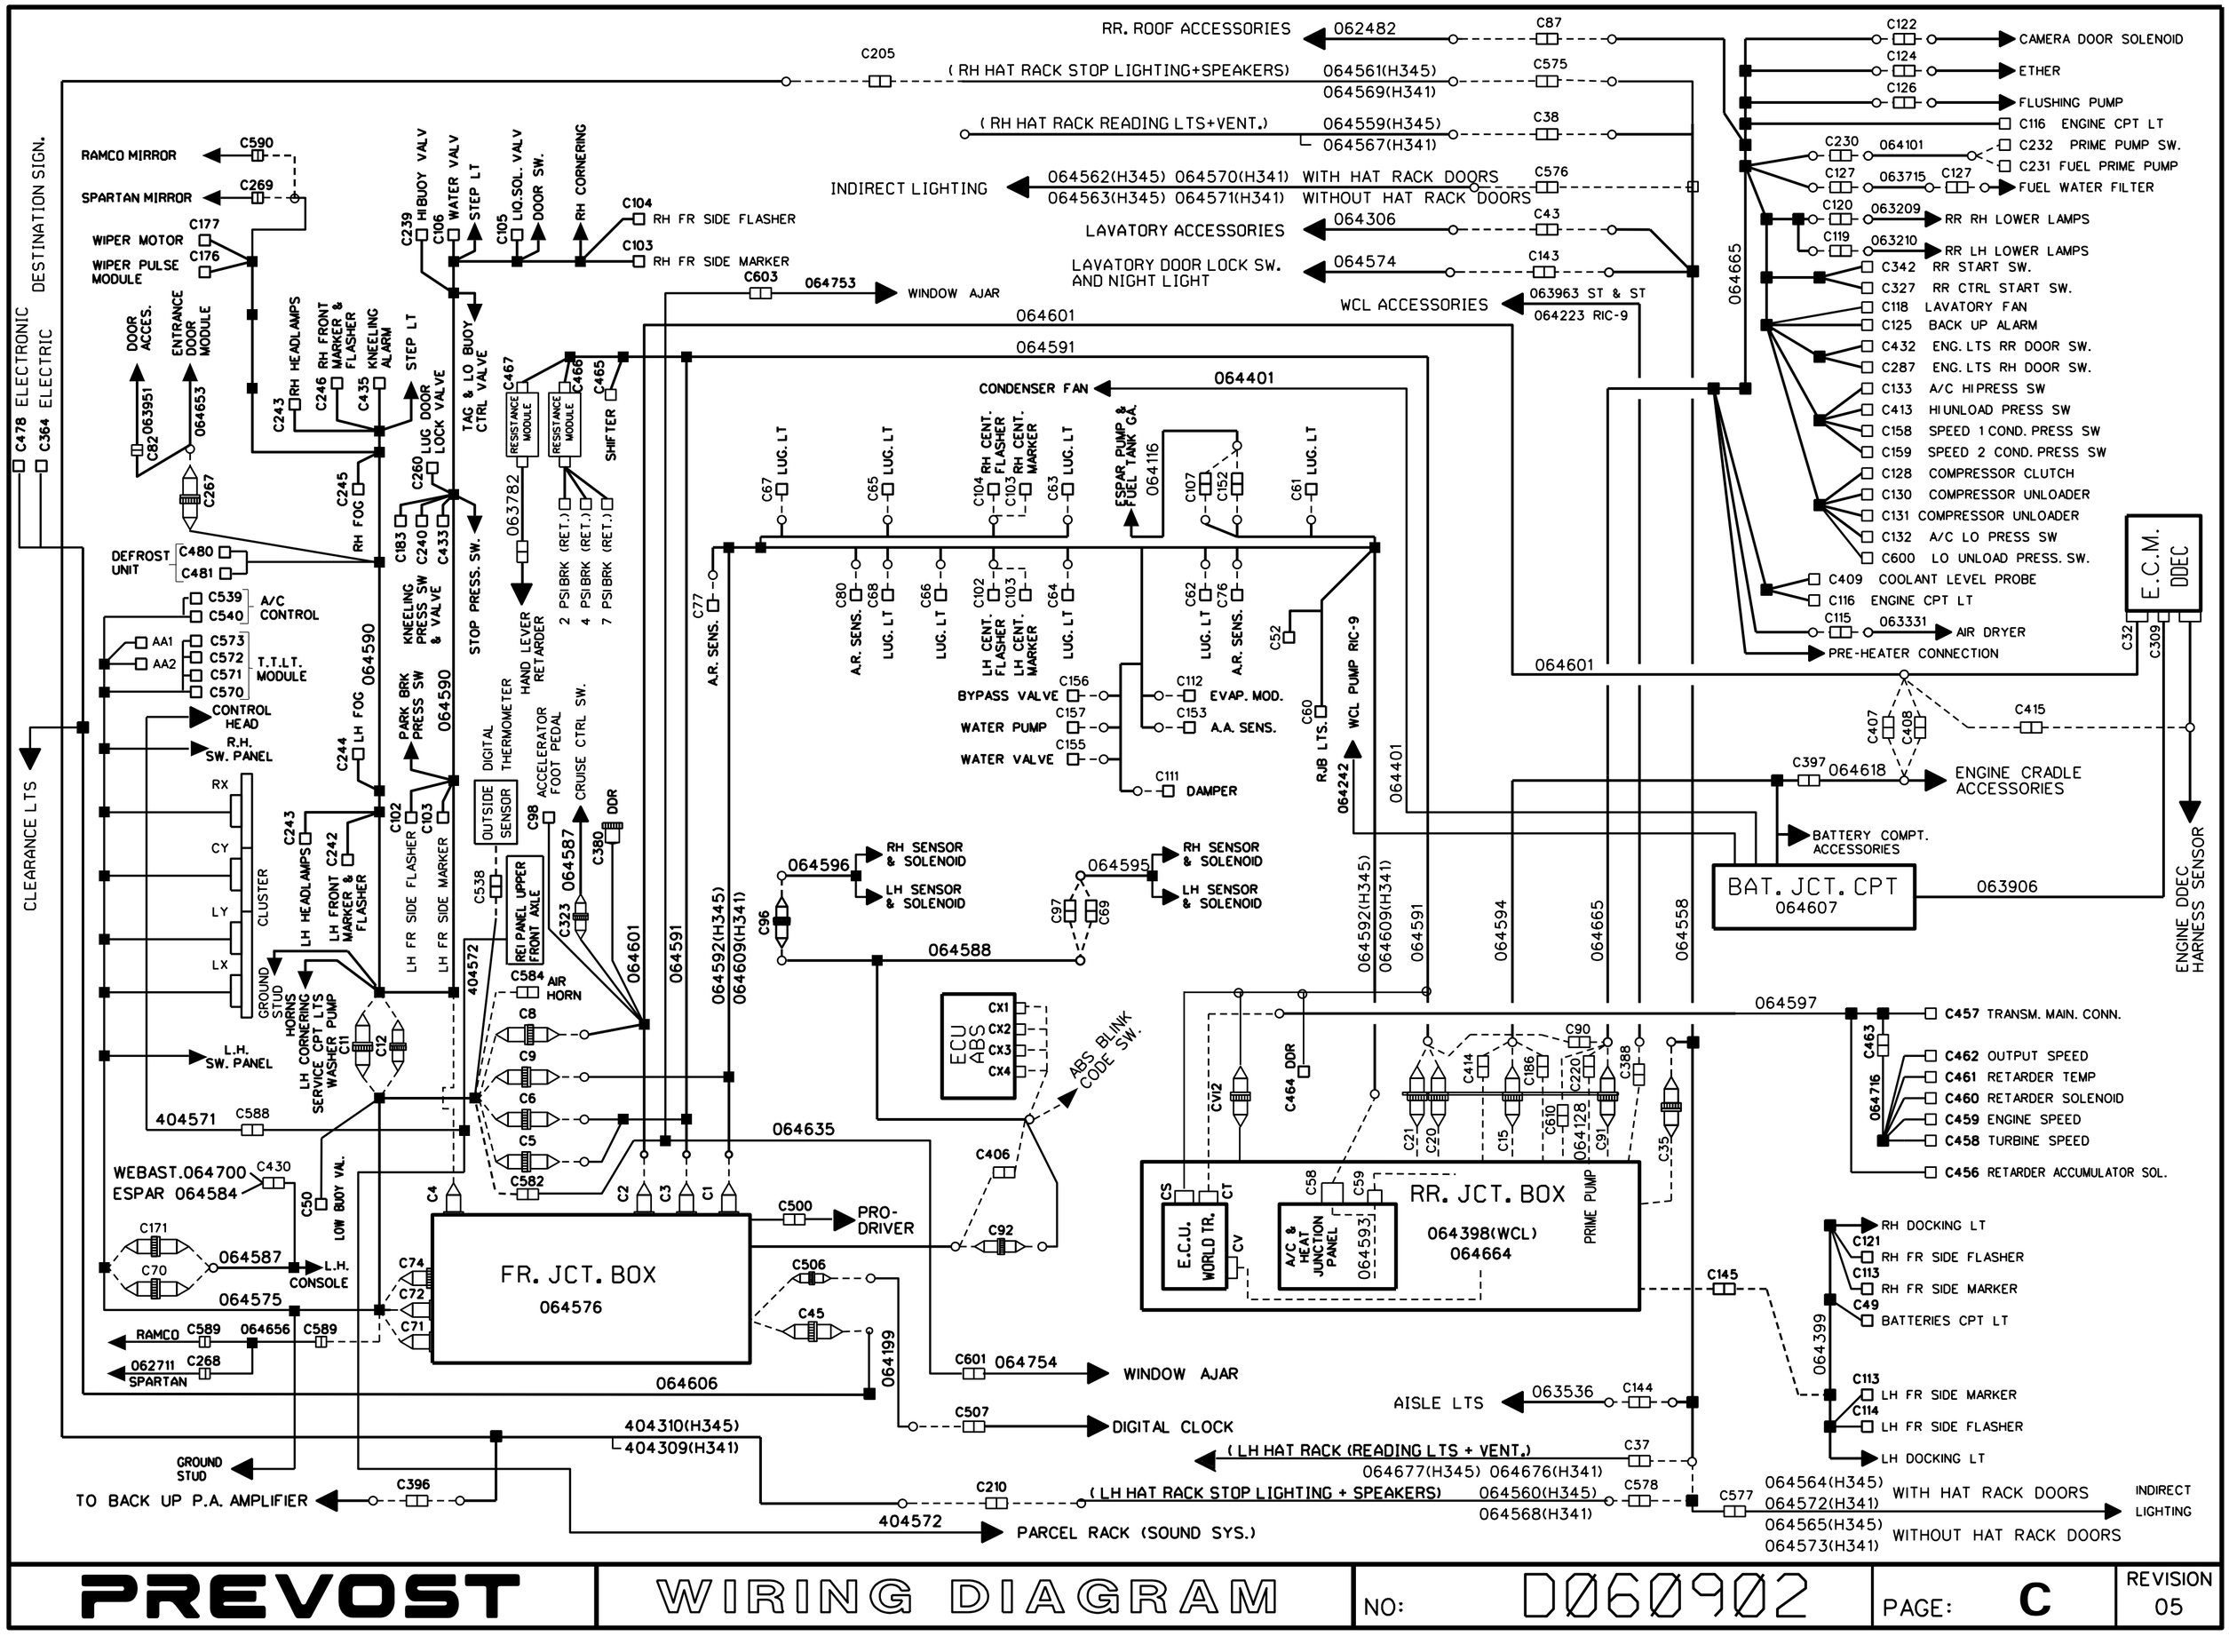

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: C	REVISION 05

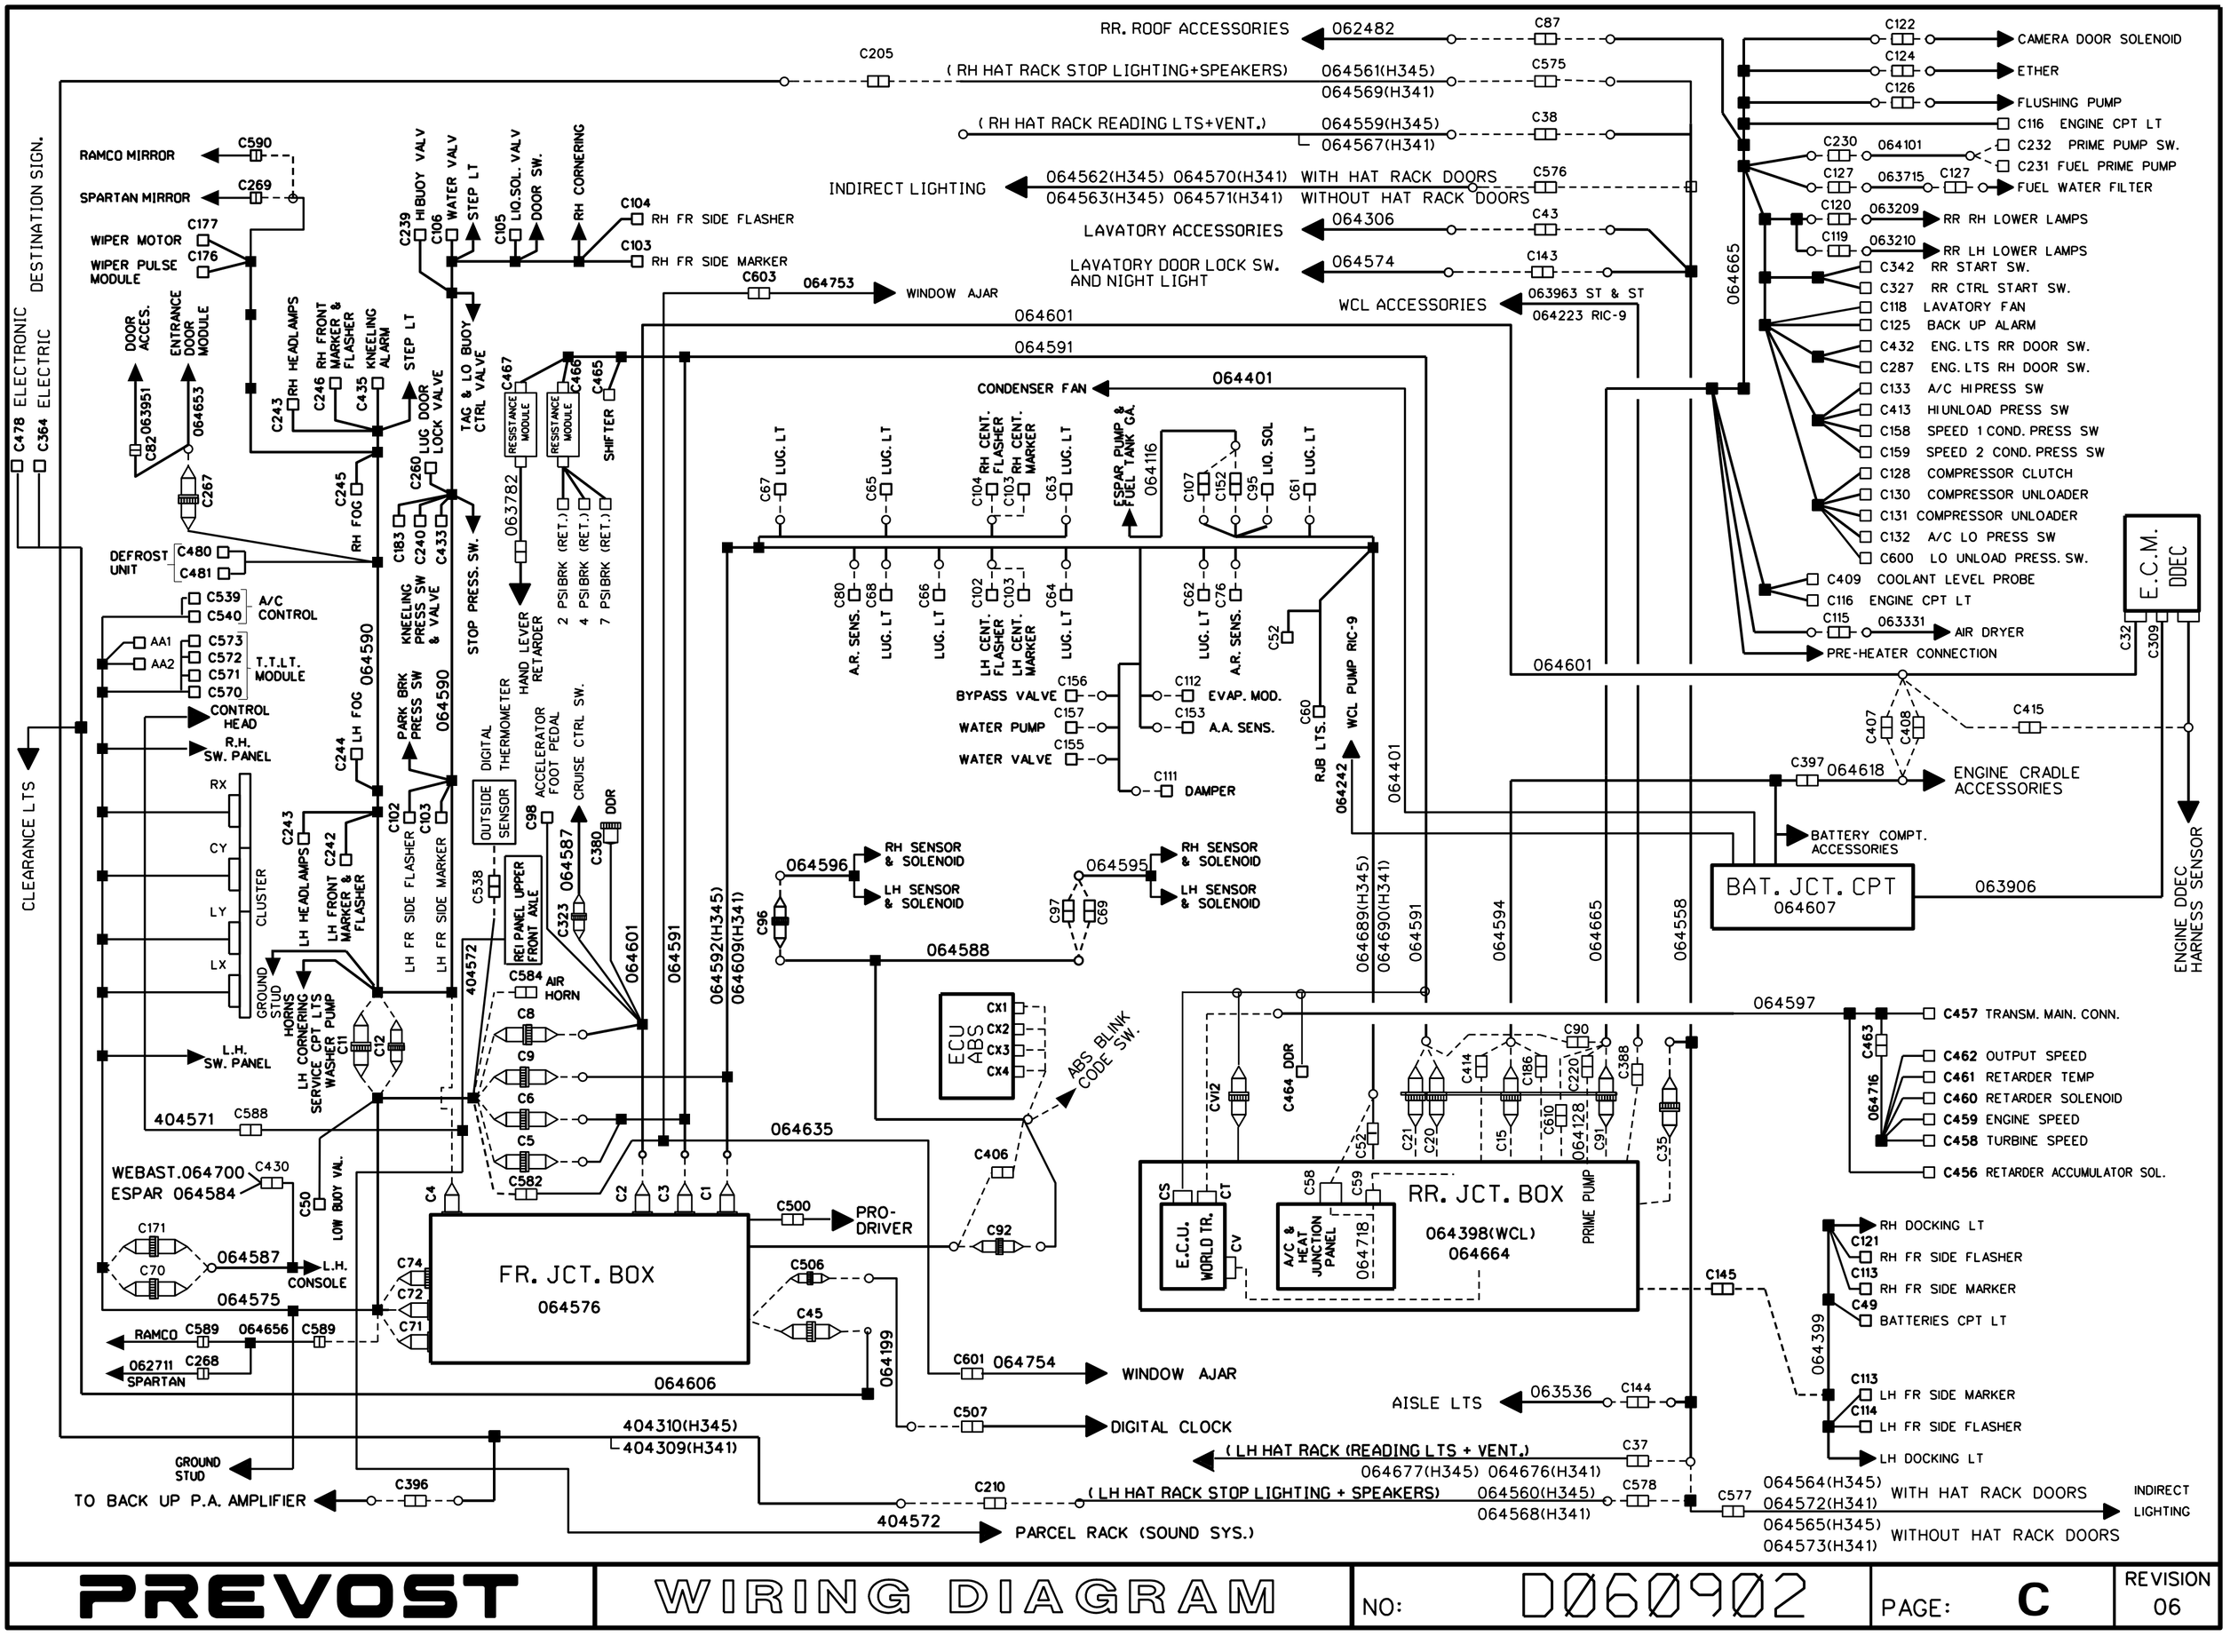

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: C	REVISION 06

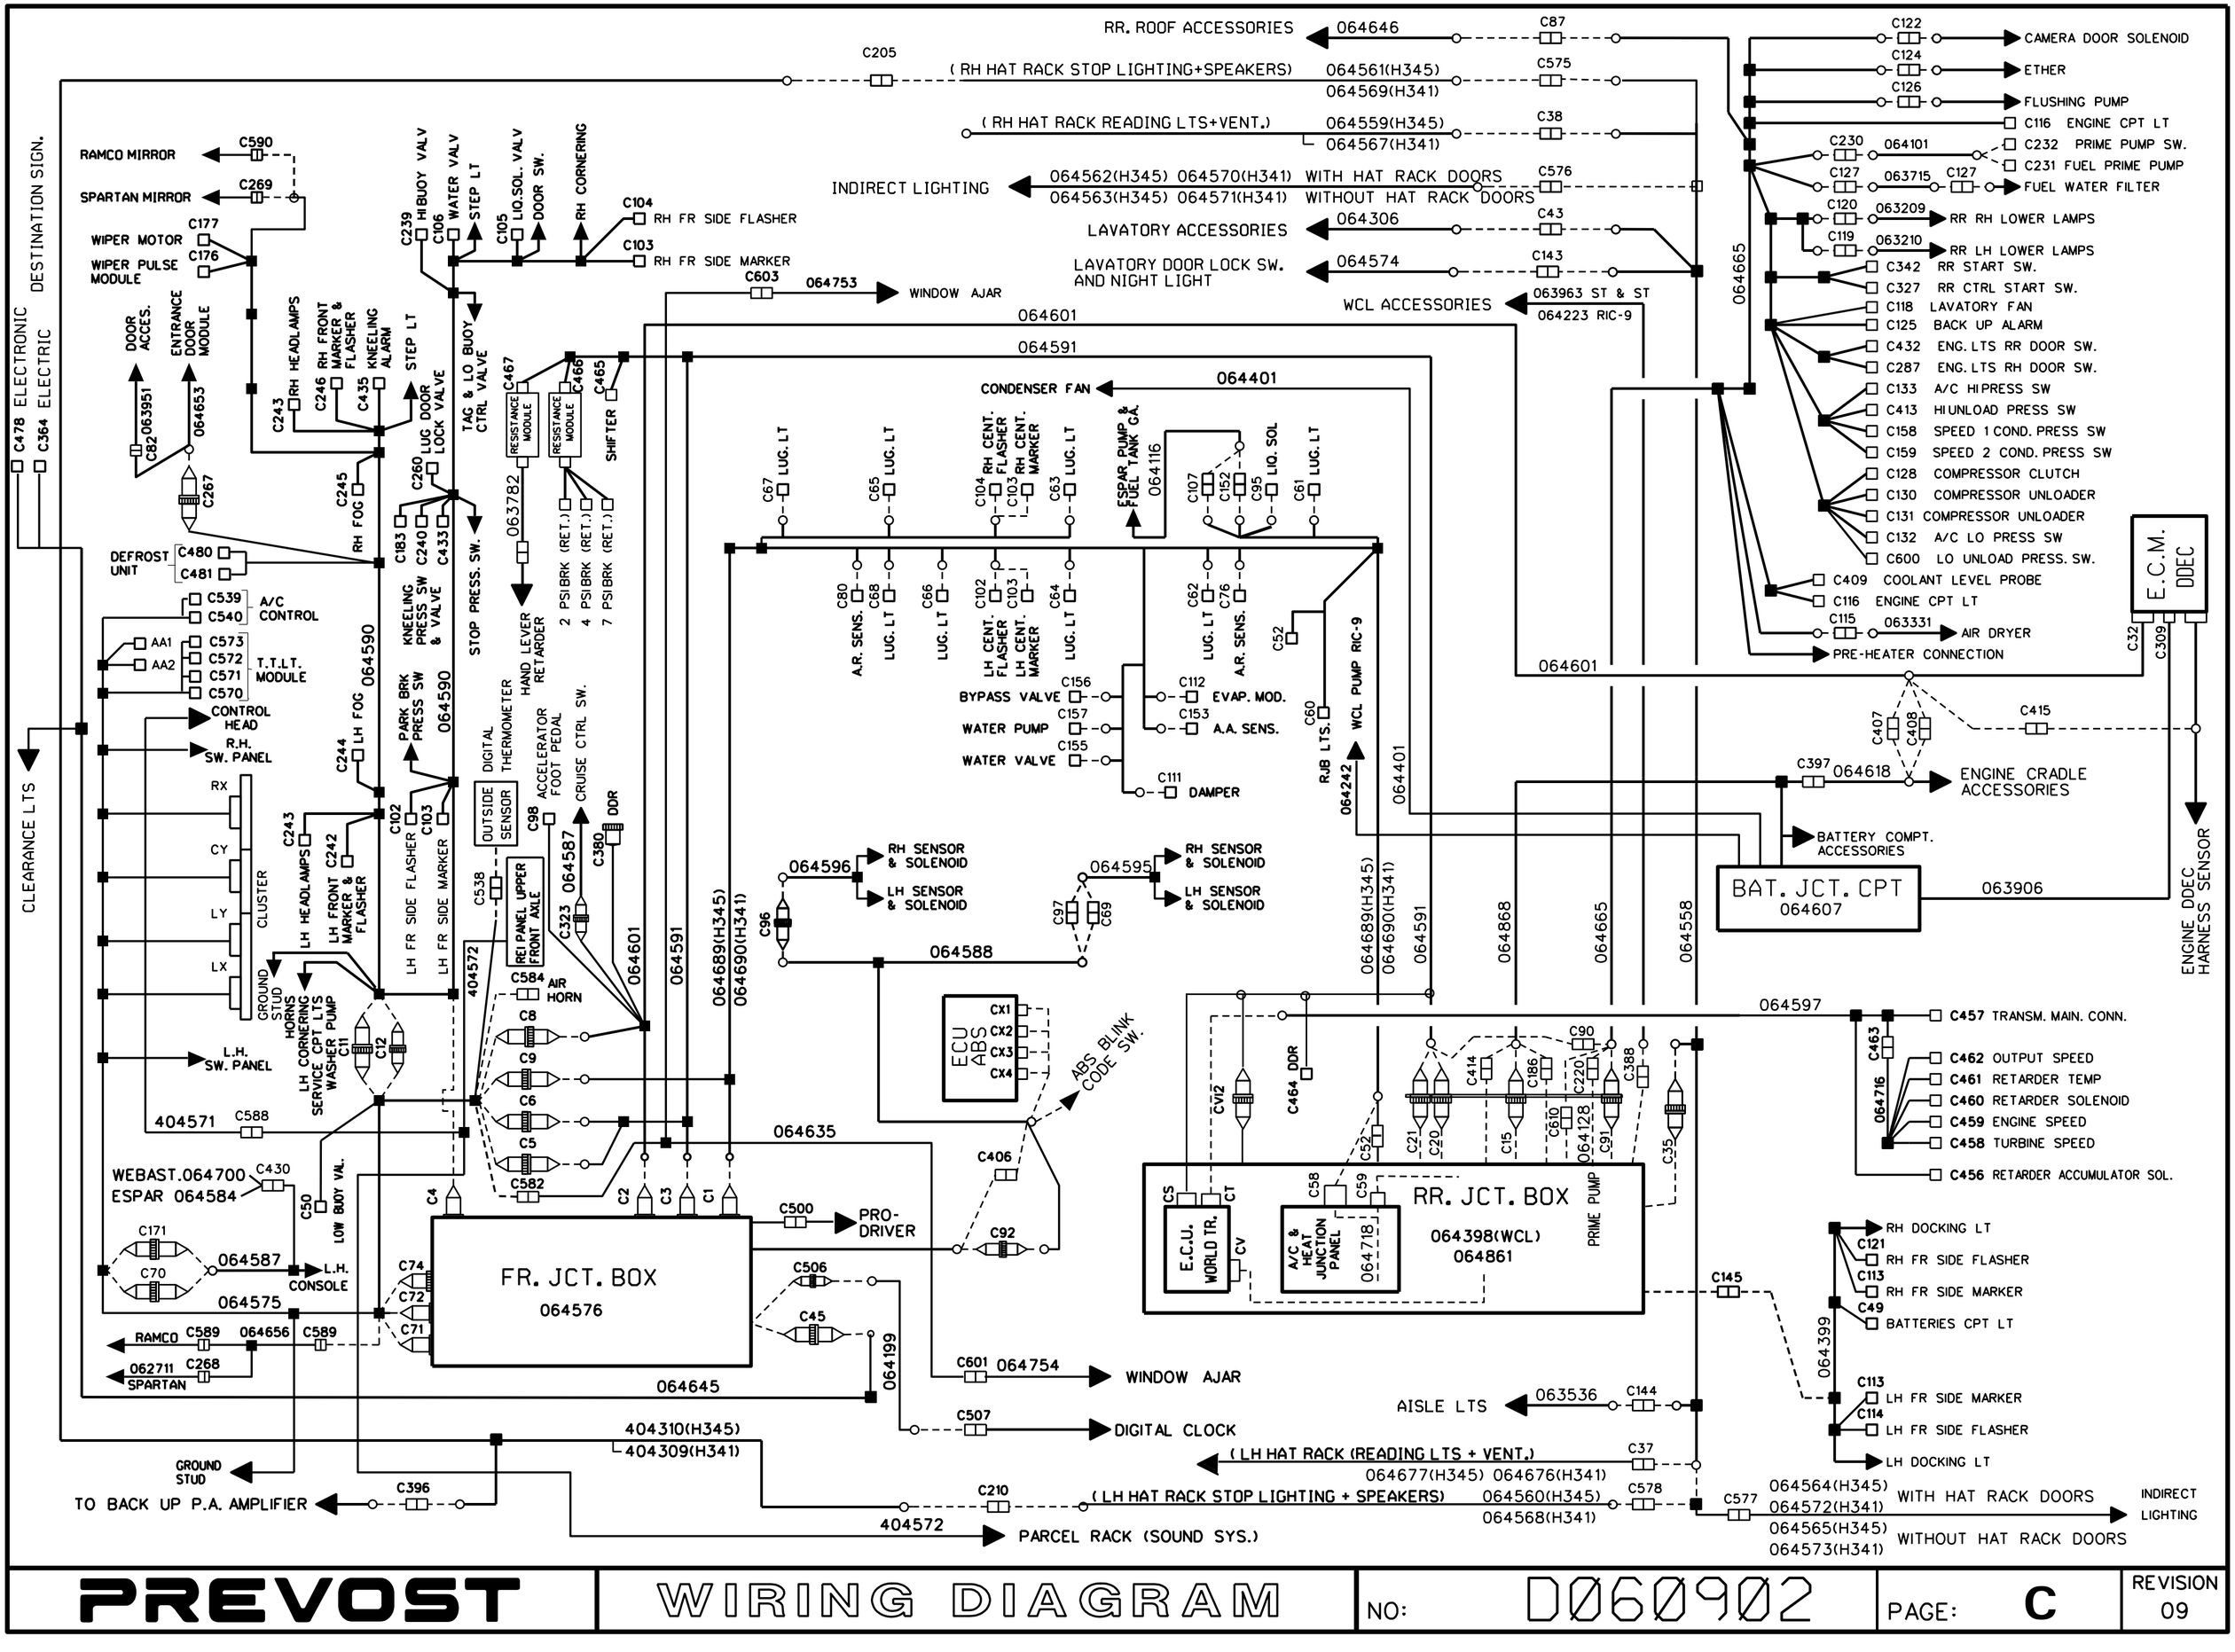

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: C	REVISION 09

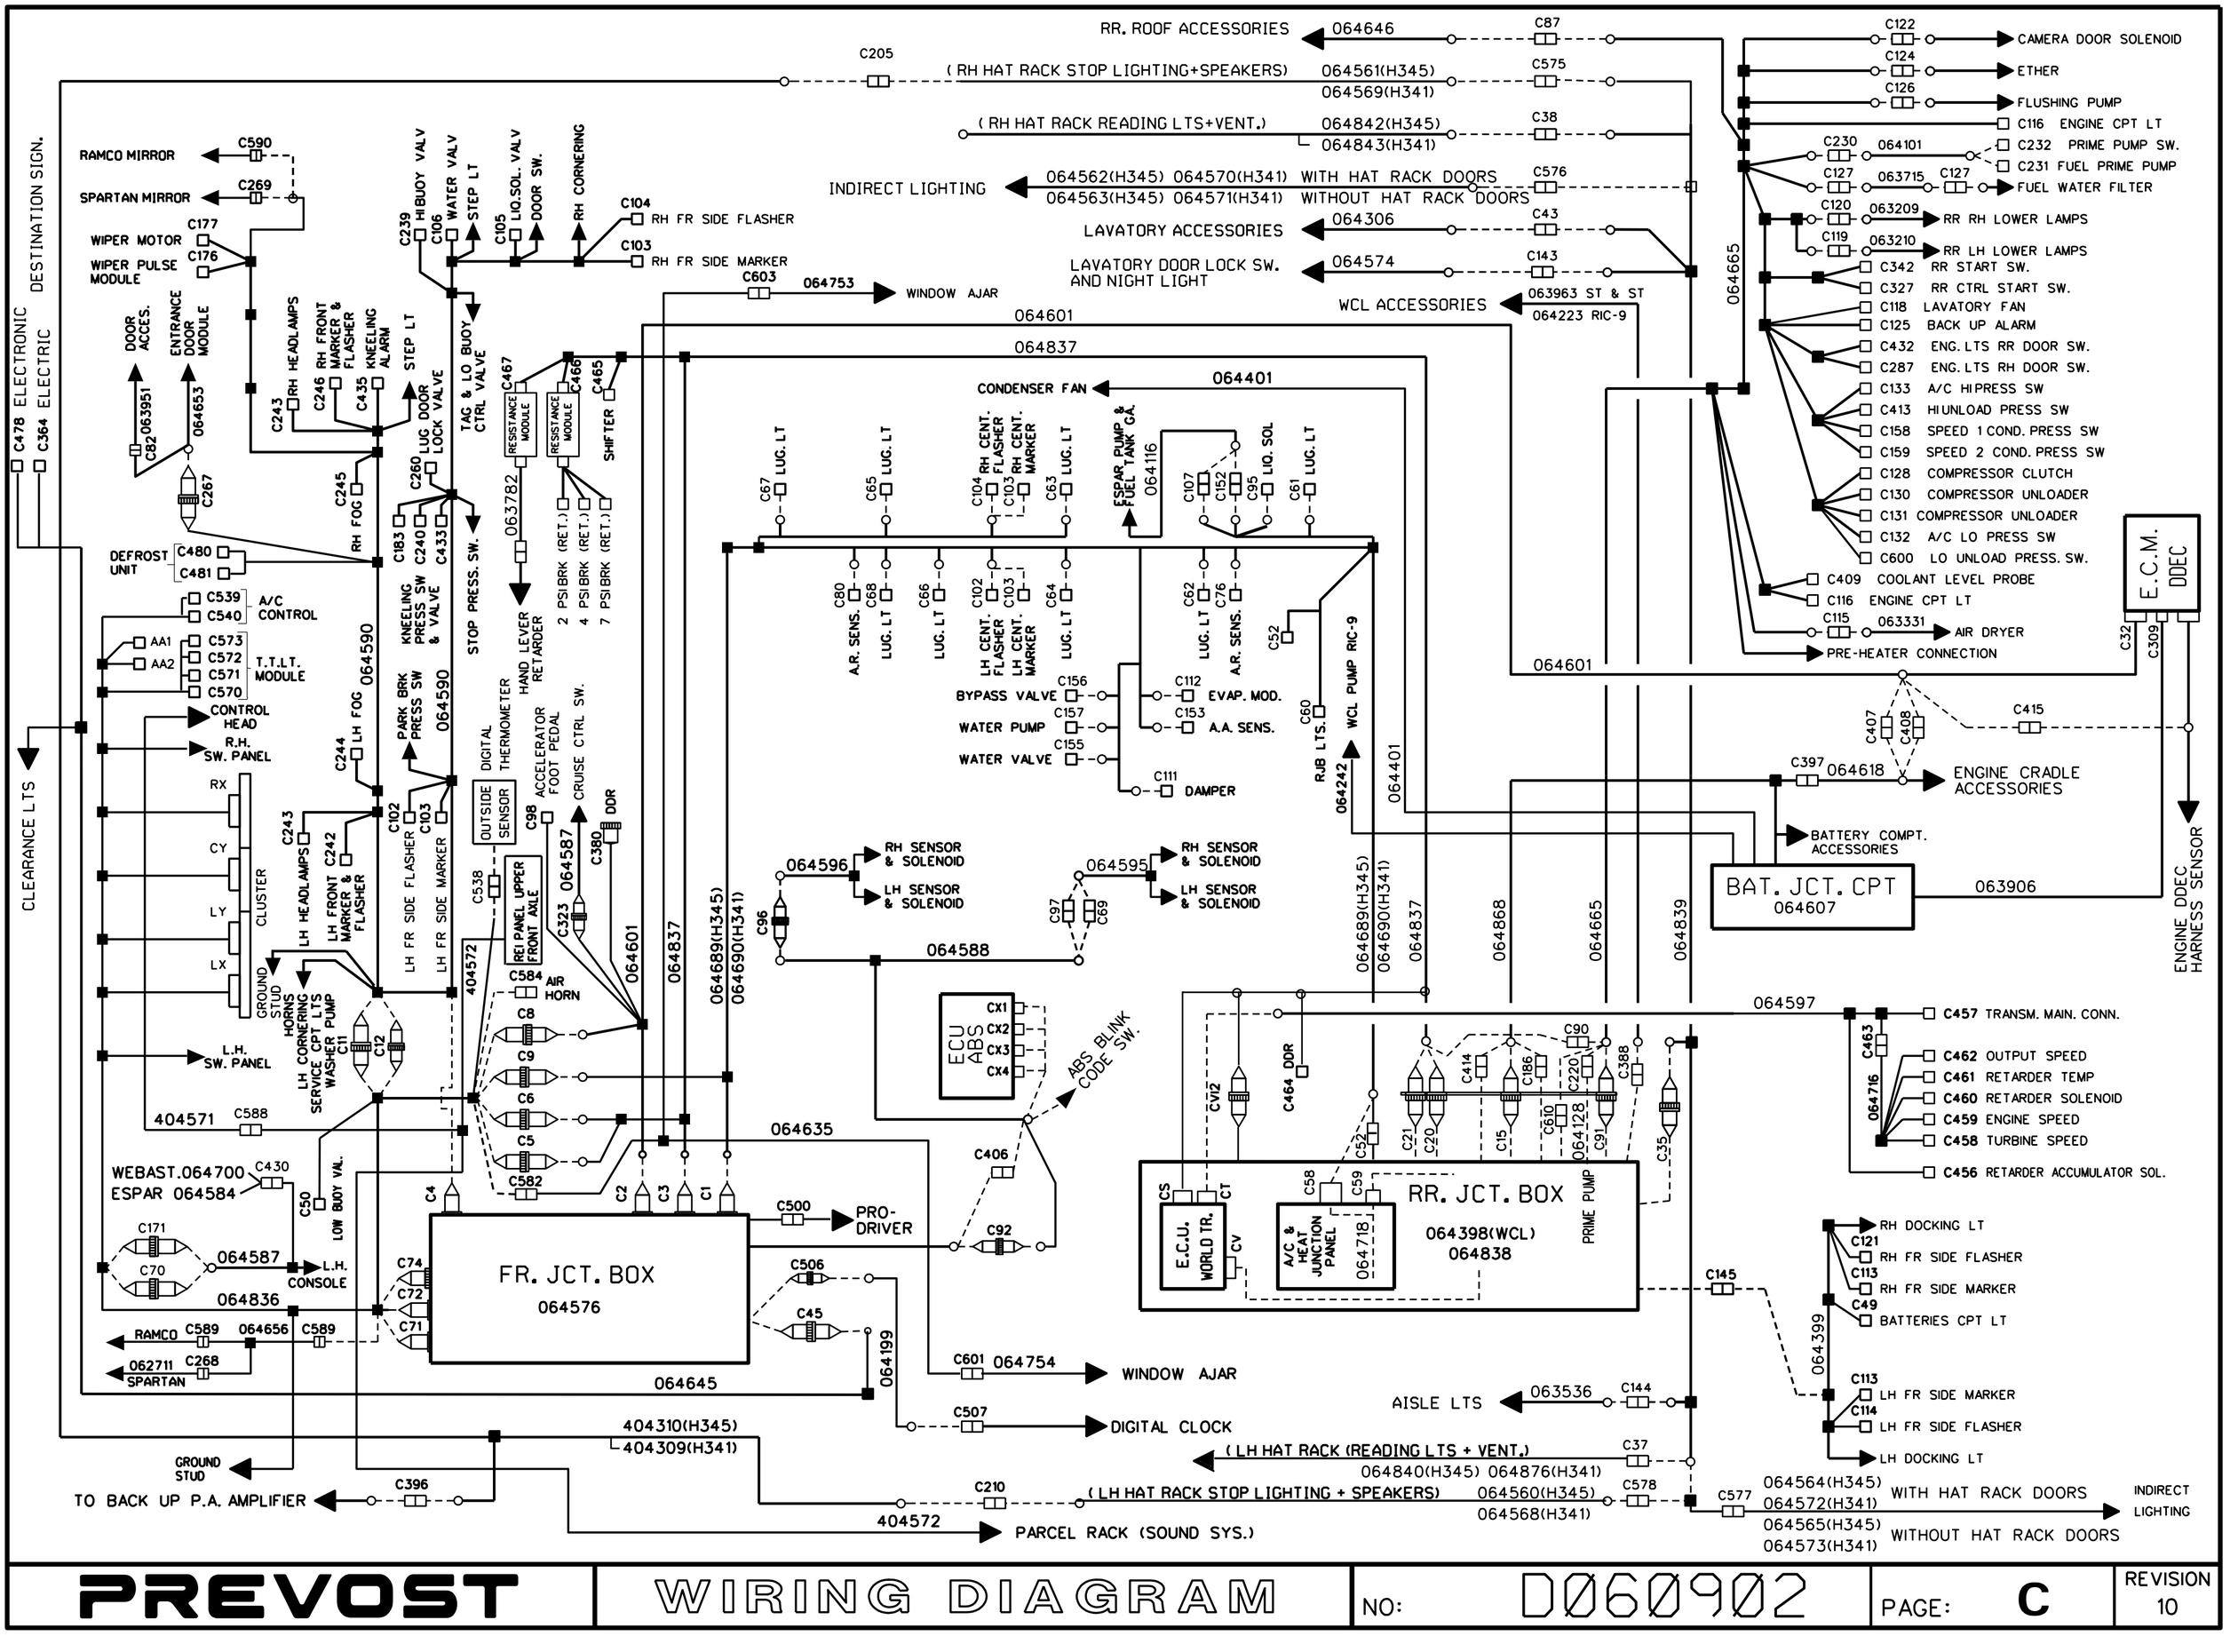

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: C	REVISION 10

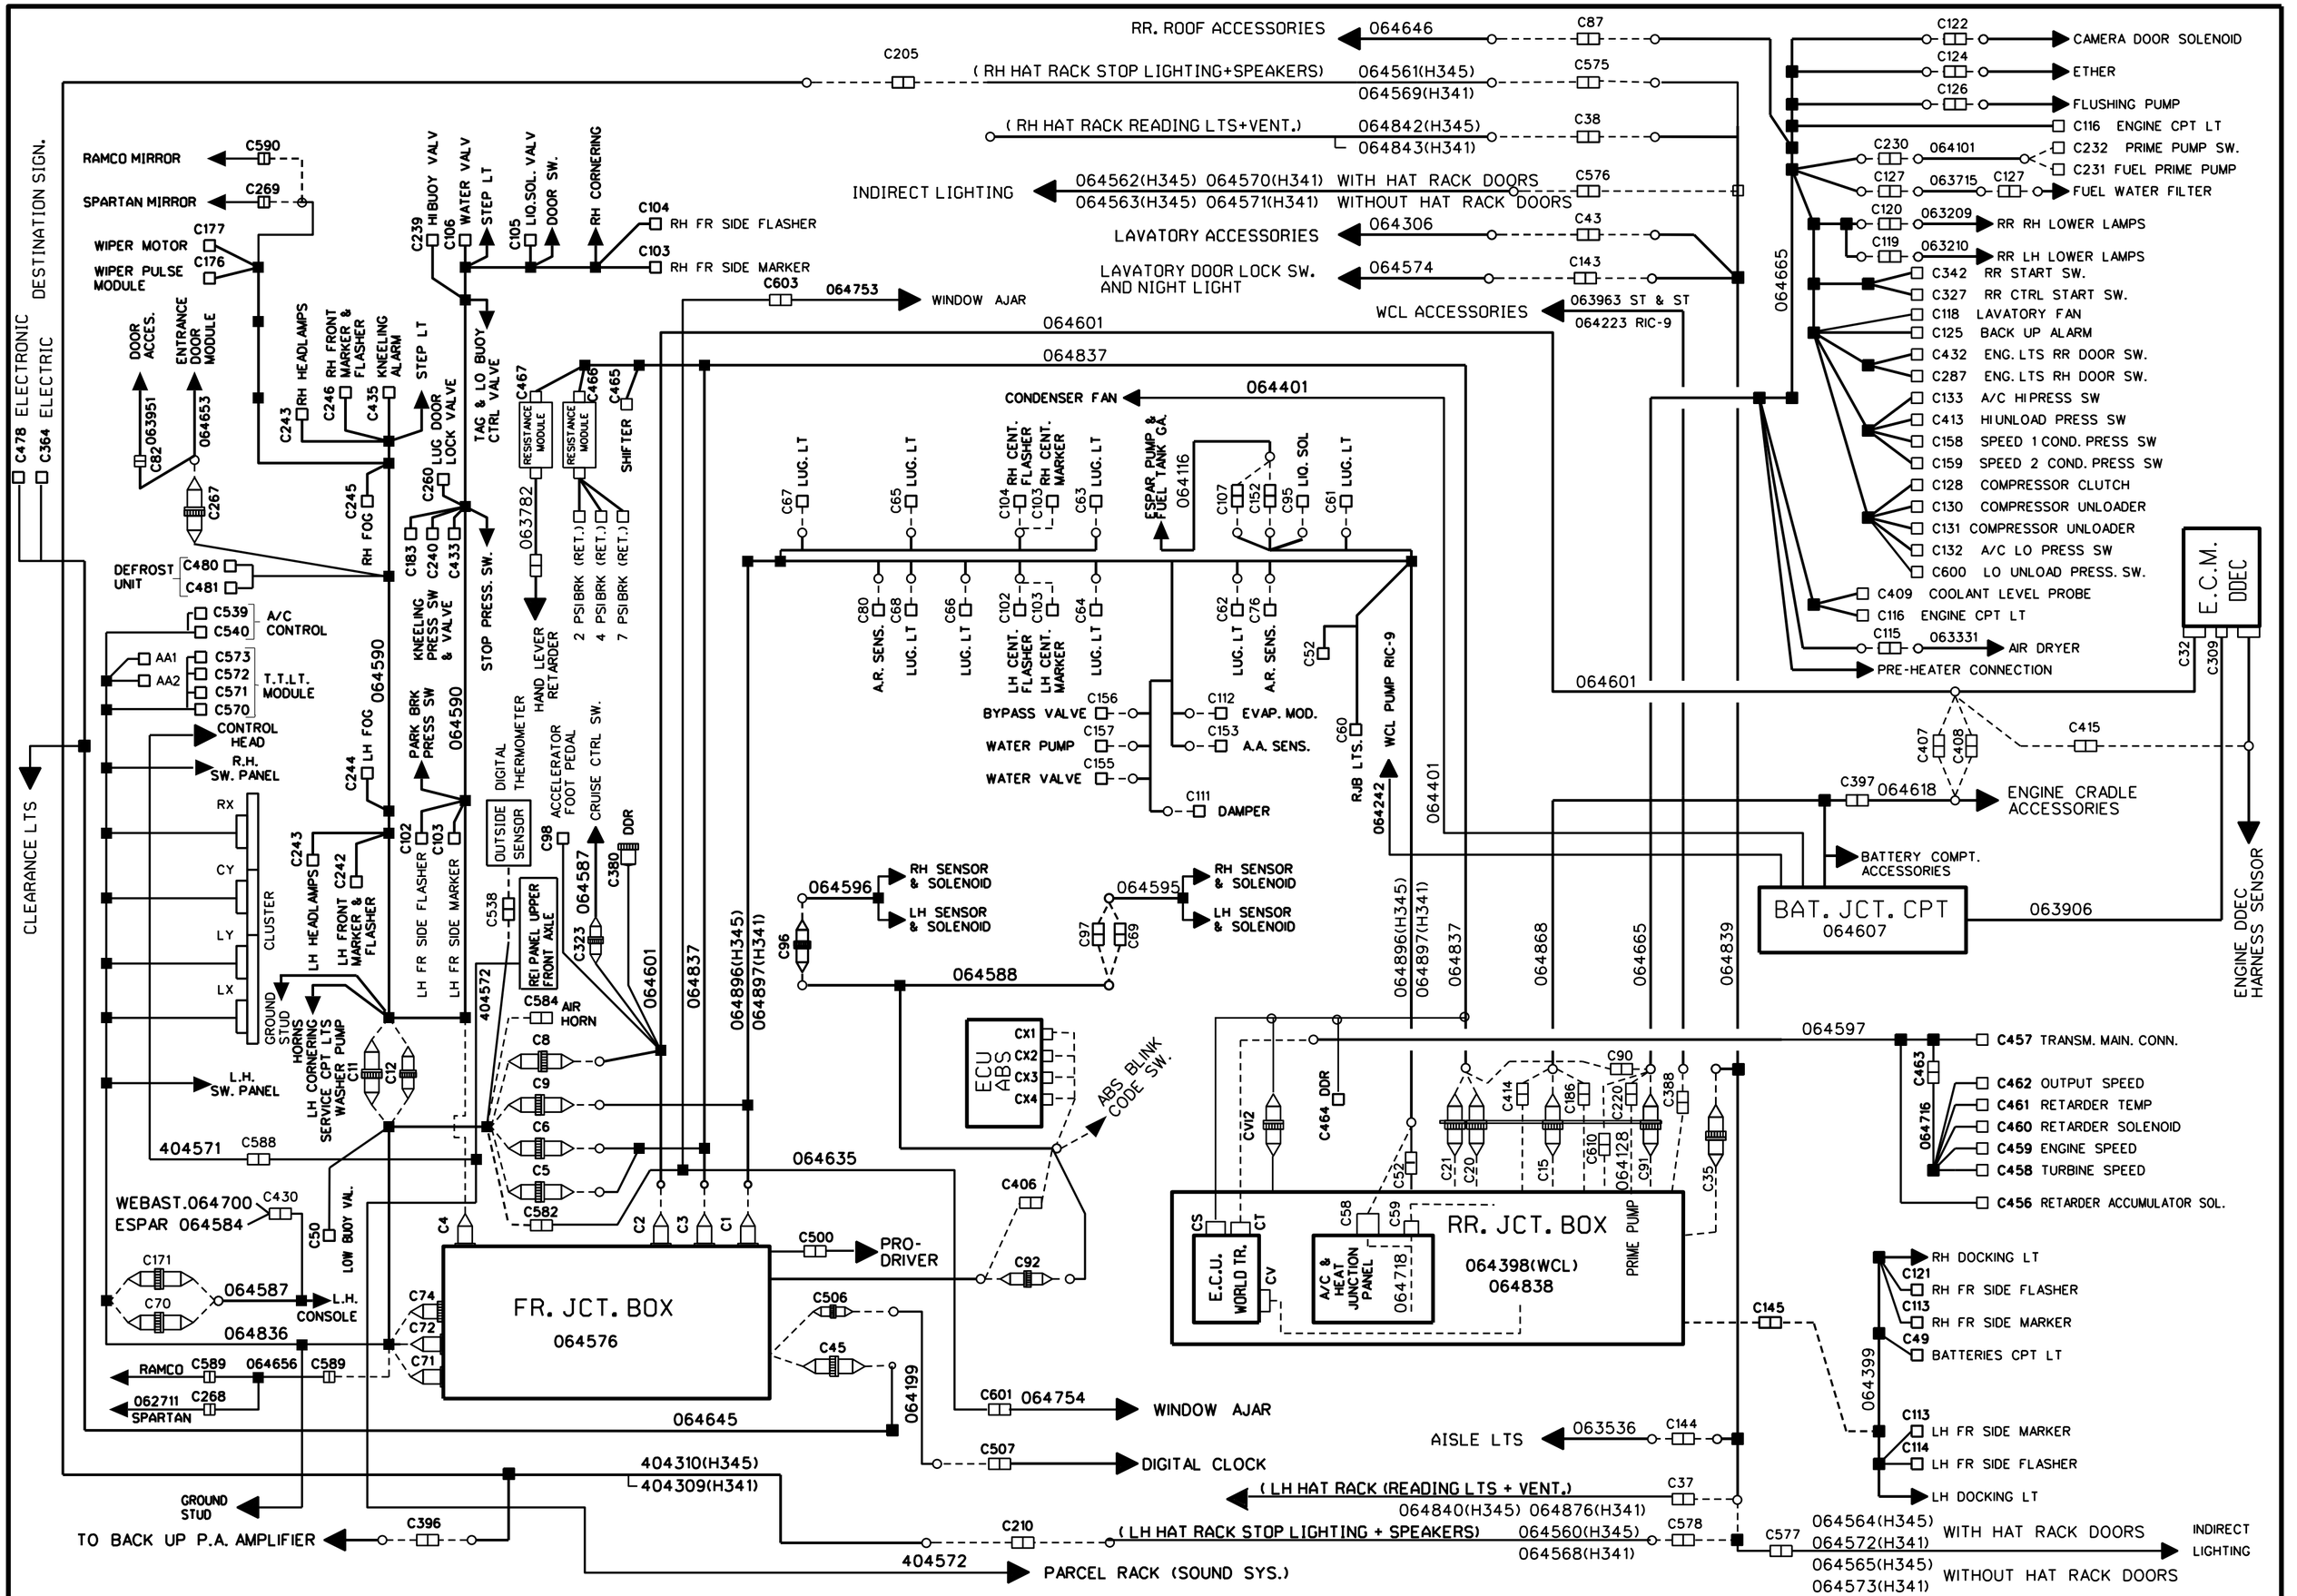
RR. ROOF ACCESSORIES 064646 C87
(RH HAT RACK STOP LIGHTING+SPEAKERS) 064561(H345) 064569(H341) C575
(RH HAT RACK READING LTS+VENT.) 064842(H345) 064843(H341) C38
INDIRECT LIGHTING 064562(H345) 064570(H341) WITH HAT RACK DOORS 064563(H345) 064571(H341) WITHOUT HAT RACK DOORS C576
LAVATORY ACCESSORIES 064306 C43
LAVATORY DOOR LOCK SW. AND NIGHT LIGHT 064574 C143
WCL ACCESSORIES 063963 ST & ST 064223 RIC-9
C603 064753 WINDOW AJAR
064665
C122 CAMERA DOOR SOLENOID
C124 ETHER
C126 FLUSHING PUMP
C116 ENGINE CPT LT
C230 064101 C232 PRIME PUMP SW.
C231 FUEL PRIME PUMP
C127 063715 C127 FUEL WATER FILTER
C120 063209 RR RH LOWER LAMPS
C119 063210 RR LH LOWER LAMPS
C342 RR START SW.
C327 RR CTRL START SW.
C118 LAVATORY FAN
C125 BACK UP ALARM
C432 ENG. LTS RR DOOR SW.
C287 ENG. LTS RH DOOR SW.
C133 A/C HI PRESS SW
C413 HI UNLOAD PRESS SW
C158 SPEED 1 COND. PRESS SW
C159 SPEED 2 COND. PRESS SW
C128 COMPRESSOR CLUTCH
C130 COMPRESSOR UNLOADER
C131 COMPRESSOR UNLOADER
C132 A/C LO PRESS SW
C600 LO UNLOAD PRESS. SW.
C409 COOLANT LEVEL PROBE
C116 ENGINE CPT LT
C115 063331 AIR DRYER
PRE-HEATER CONNECTION
E.C.M. DDEC
C32
C309
064601
064837
064401
CONDENSER FAN
C67 LUG. LT
C65 LUG. LT
C104 RH CENT. FLASHER
C103 RH CENT. MARKER
C63 LUG. LT
ESPAR PUMP & FUEL TANK GA. 064116
C107
C152
C95 LIQ. SOL
C61 LUG. LT
C80 A.R. SENS.
C68 LUG. LT
C66 LUG. LT
C102 LH CENT. FLASHER
C103 LH CENT. MARKER
C64 LUG. LT
C62 LUG. LT
C76 A.R. SENS.
C52
C156 BYPASS VALVE
C157 WATER PUMP
C155 WATER VALVE
C112 EVAP. MOD.
C153 A.A. SENS.
C111 DAMPER
C60 R.J.B LTS.
WCL PUMP RIC-9
064242
064401
C397 064618 ENGINE CRADLE ACCESSORIES
BATTERY COMPT. ACCESSORIES
BAT. JCT. CPT 064607
063906
064896(H345) 064897(H341) 064837 064868 064665 064839
ENGINE DDEC HARNESS SENSOR
C478 ELECTRONIC
C364 ELECTRIC
DESTINATION SIGN.
CLEARANCE LTS
RAMCO MIRROR C590
SPARTAN MIRROR C269
WIPER MOTOR C177
WIPER PULSE MODULE C176
DOOR ACCES. C82 063951
ENTRANCE DOOR MODULE 064653
C267
C239 HI BUOY VALV
C106 WATER VALV
STEP LT
C105 LIQ.SOL. VALV
DOOR SW.
RH CORNERING
C104 RH FR SIDE FLASHER
C103 RH FR SIDE MARKER
C243 RH HEADLAMPS
C246 RH FRONT MARKER & FLASHER
C435 KNEELING ALARM
STEP LT
LUG DOOR LOCK VALVE
TAG & LO BUOY CTRL VALVE
C467
C466
C465
RESISTANCE MODULE
SHIFTER
C260
C245 RH FOG
C183
C240
C433
STOP PRESS. SW.
063782
2 PSI BRK (RET.)
4 PSI BRK (RET.)
7 PSI BRK (RET.)
DEFROST UNIT C480 C481
C539 C540 A/C CONTROL
AA1 AA2 C573 C572 C571 C570 T.T.LT. MODULE
CONTROL HEAD
R.H. SW. PANEL
L.H. SW. PANEL
RX CY LY LX CLUSTER
GROUND STUD
HORNS
LH CORNERING
SERVICE CPT LTS
WASHER PUMP
C11 C12
LH HEADLAMPS
LH FRONT MARKER & FLASHER
C244 LH FOG
064590
PARK BRK PRESS SW
KNEELING PRESS SW & VALVE
DIGITAL THERMOMETER
HAND LEVER RETARDER
ACCELERATOR FOOT PEDAL
CRUISE CTRL SW.
OUTSIDE SENSOR
C102 LH FR SIDE FLASHER
C103 LH FR SIDE MARKER
C538
REI PANEL UPPER FRONT AXLE
C98
C323 064587
C380 DDR
064601
064837
064896(H345)
064897(H341)
404572
C584 AIR HORN
C8
C9
C6
C5
C582
404571 C588
C4 C2 C3 C1
C500 PRO-DRIVER
C406
C92
064635
WEBAST.064700 C430
ESPAR 064584
C50 LOW BUOY VAL.
C171
C70
064587
L.H. CONSOLE
064836
C74
C72
C71
FR. JCT. BOX 064576
C506
C45
064199
C601 064754 WINDOW AJAR
064645
C507 DIGITAL CLOCK
RAMCO C589 064656 C589
062711 C268 SPARTAN
GROUND STUD
TO BACK UP P.A. AMPLIFIER
C396
404310(H345)
404309(H341)
C210
404572
PARCEL RACK (SOUND SYS.)
064596 RH SENSOR & SOLENOID LH SENSOR & SOLENOID
064595 RH SENSOR & SOLENOID LH SENSOR & SOLENOID
C96
C97
C69
064588
ECU ABS
CX1 CX2 CX3 CX4
ABS BLINK CODE SW.
064597
C457 TRANSM. MAIN. CONN.
C462 OUTPUT SPEED
C461 RETARDER TEMP
C460 RETARDER SOLENOID
C459 ENGINE SPEED
C458 TURBINE SPEED
C456 RETARDER ACCUMULATOR SOL.
C463
064716
CVI2
C464 DDR
C414
C186
C90
C220
C388
C610
064128
C91
C35
C21
C20
C15
C52
C58
C59
E.C.U. WORLD TR.
CS CT CV
A/C & HEAT JUNCTION PANEL 064718
RR. JCT. BOX 064398(WCL) 064838
PRIME PUMP
C145
RH DOCKING LT
C121 RH FR SIDE FLASHER
C113 RH FR SIDE MARKER
C49 BATTERIES CPT LT
064399
C113 LH FR SIDE MARKER
C114 LH FR SIDE FLASHER
LH DOCKING LT
AISLE LTS 063536 C144
(LH HAT RACK (READING LTS + VENT.) 064840(H345) 064876(H341) C37
(LH HAT RACK STOP LIGHTING + SPEAKERS) 064560(H345) 064568(H341) C578
C577
064564(H345) 064572(H341) WITH HAT RACK DOORS
064565(H345) 064573(H341) WITHOUT HAT RACK DOORS
INDIRECT LIGHTING
C415
C407 C408

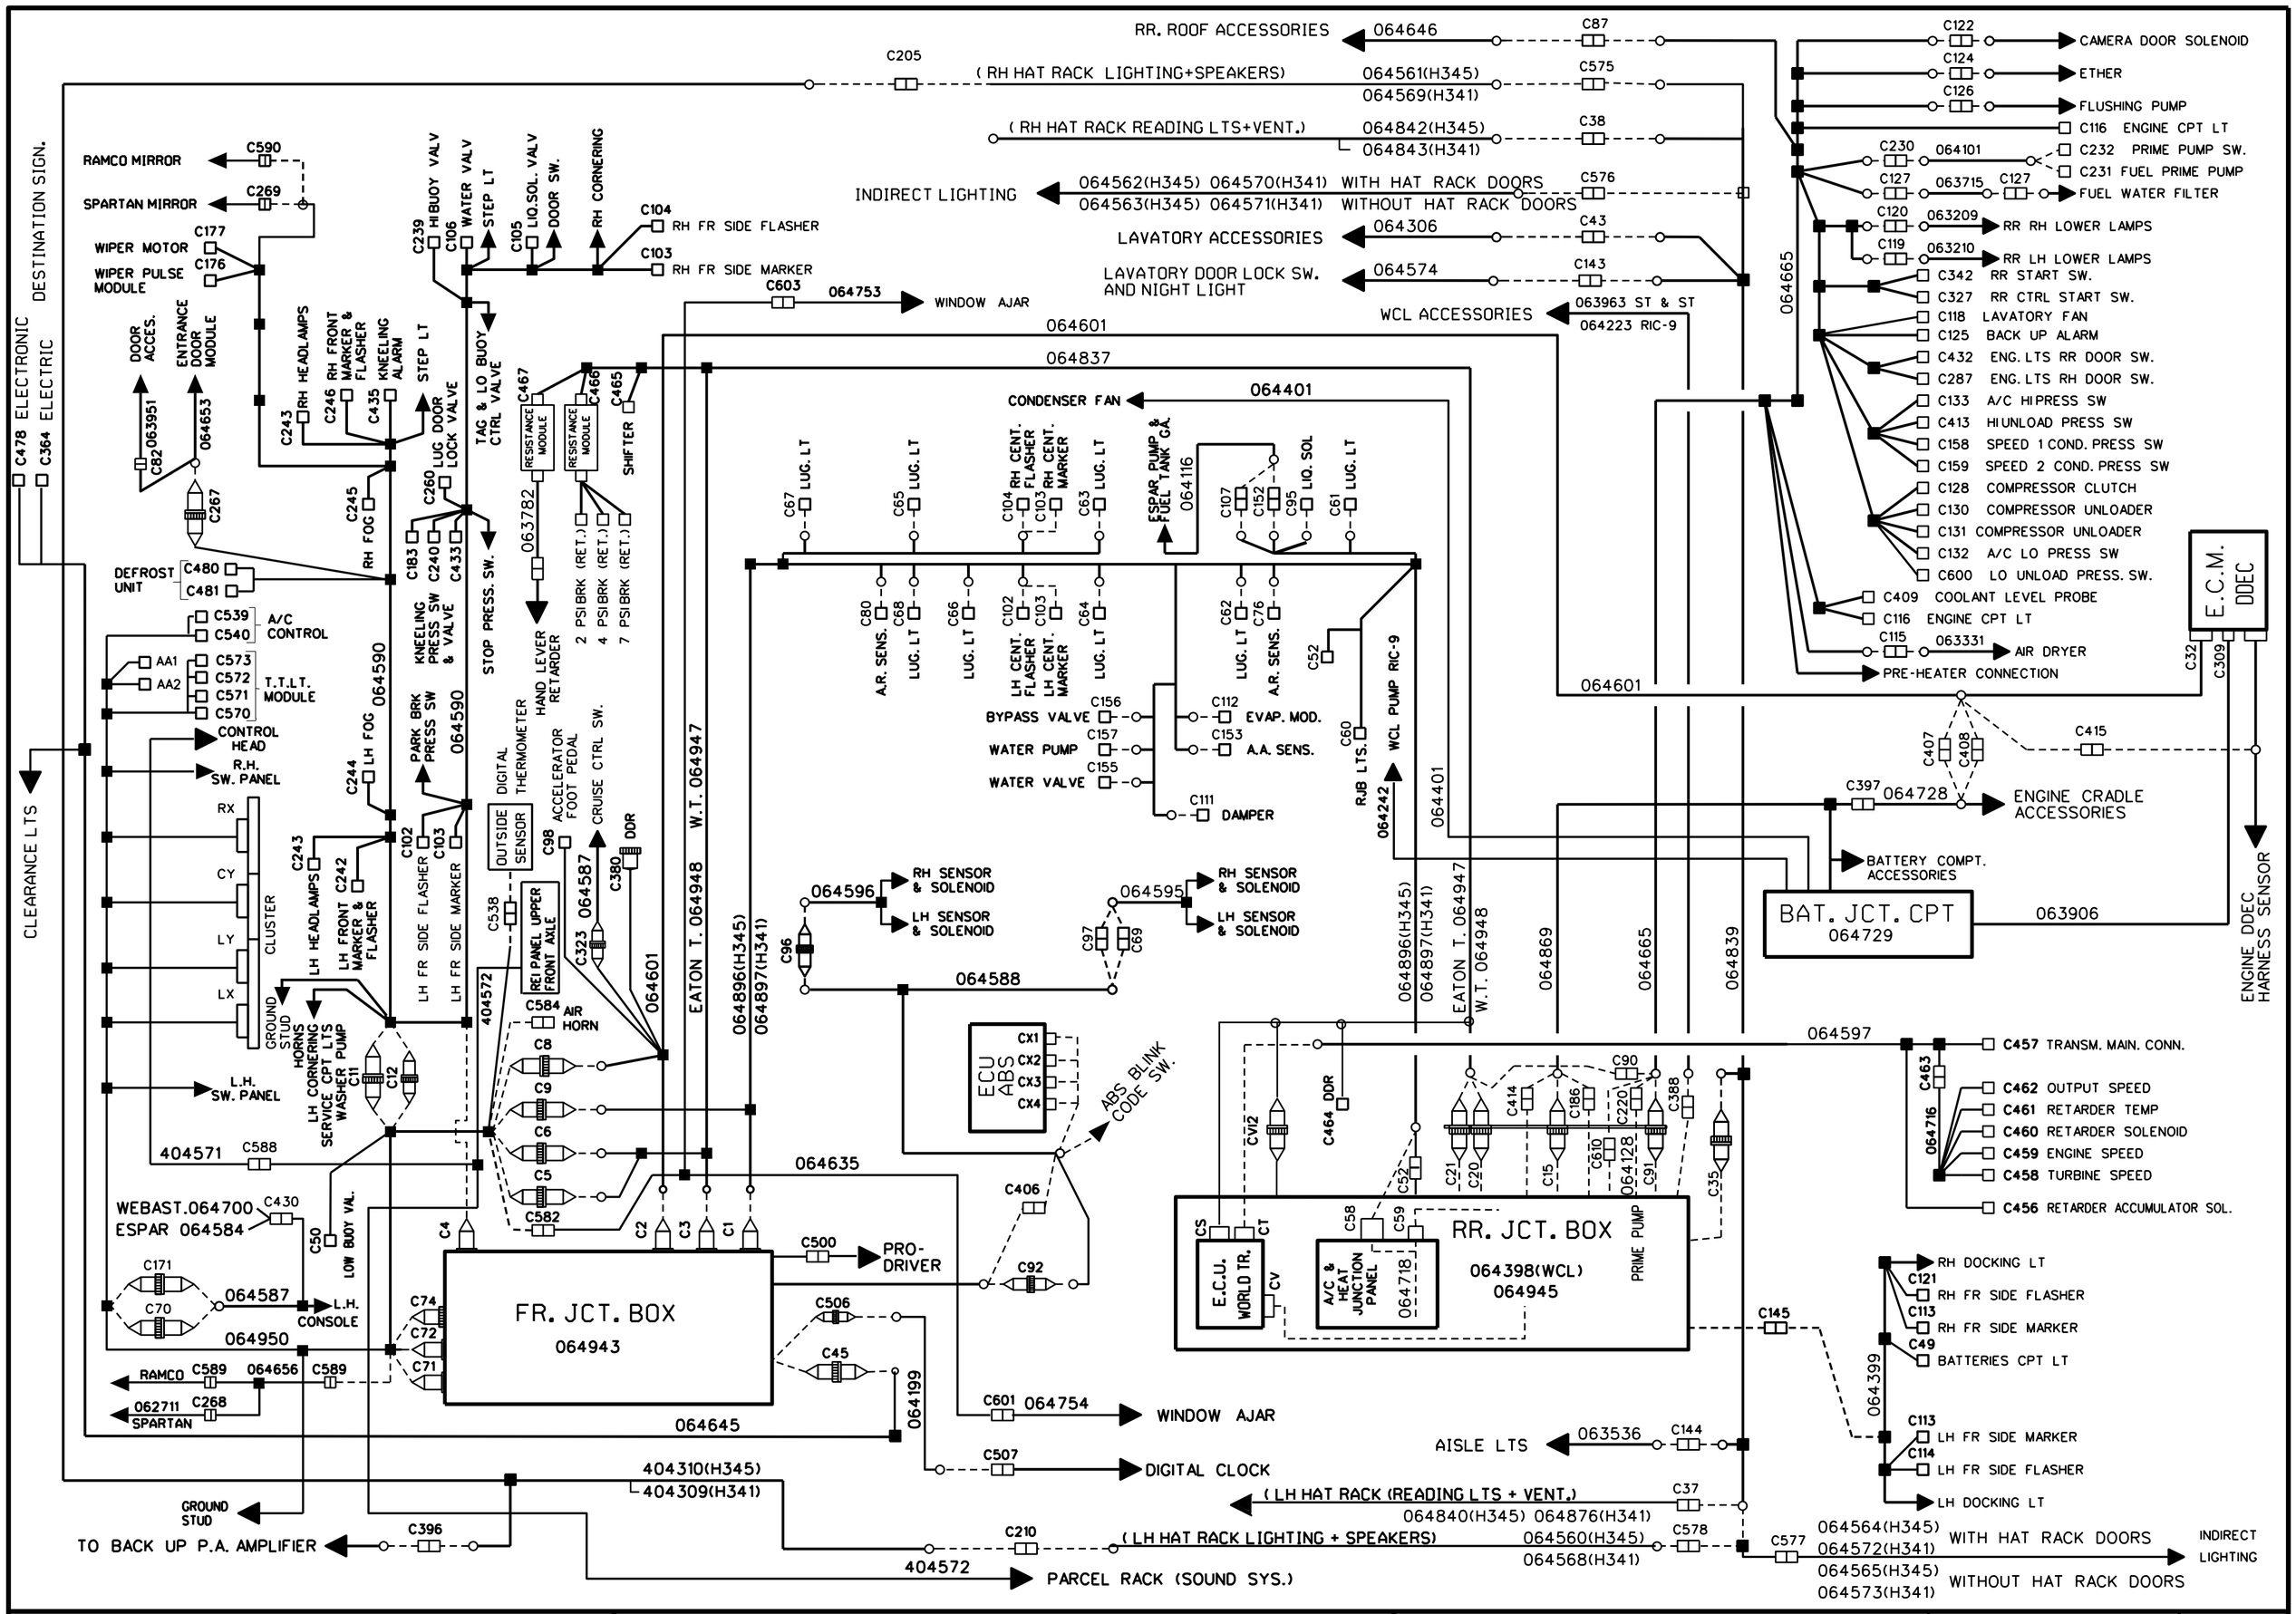

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: C	REVISION 16

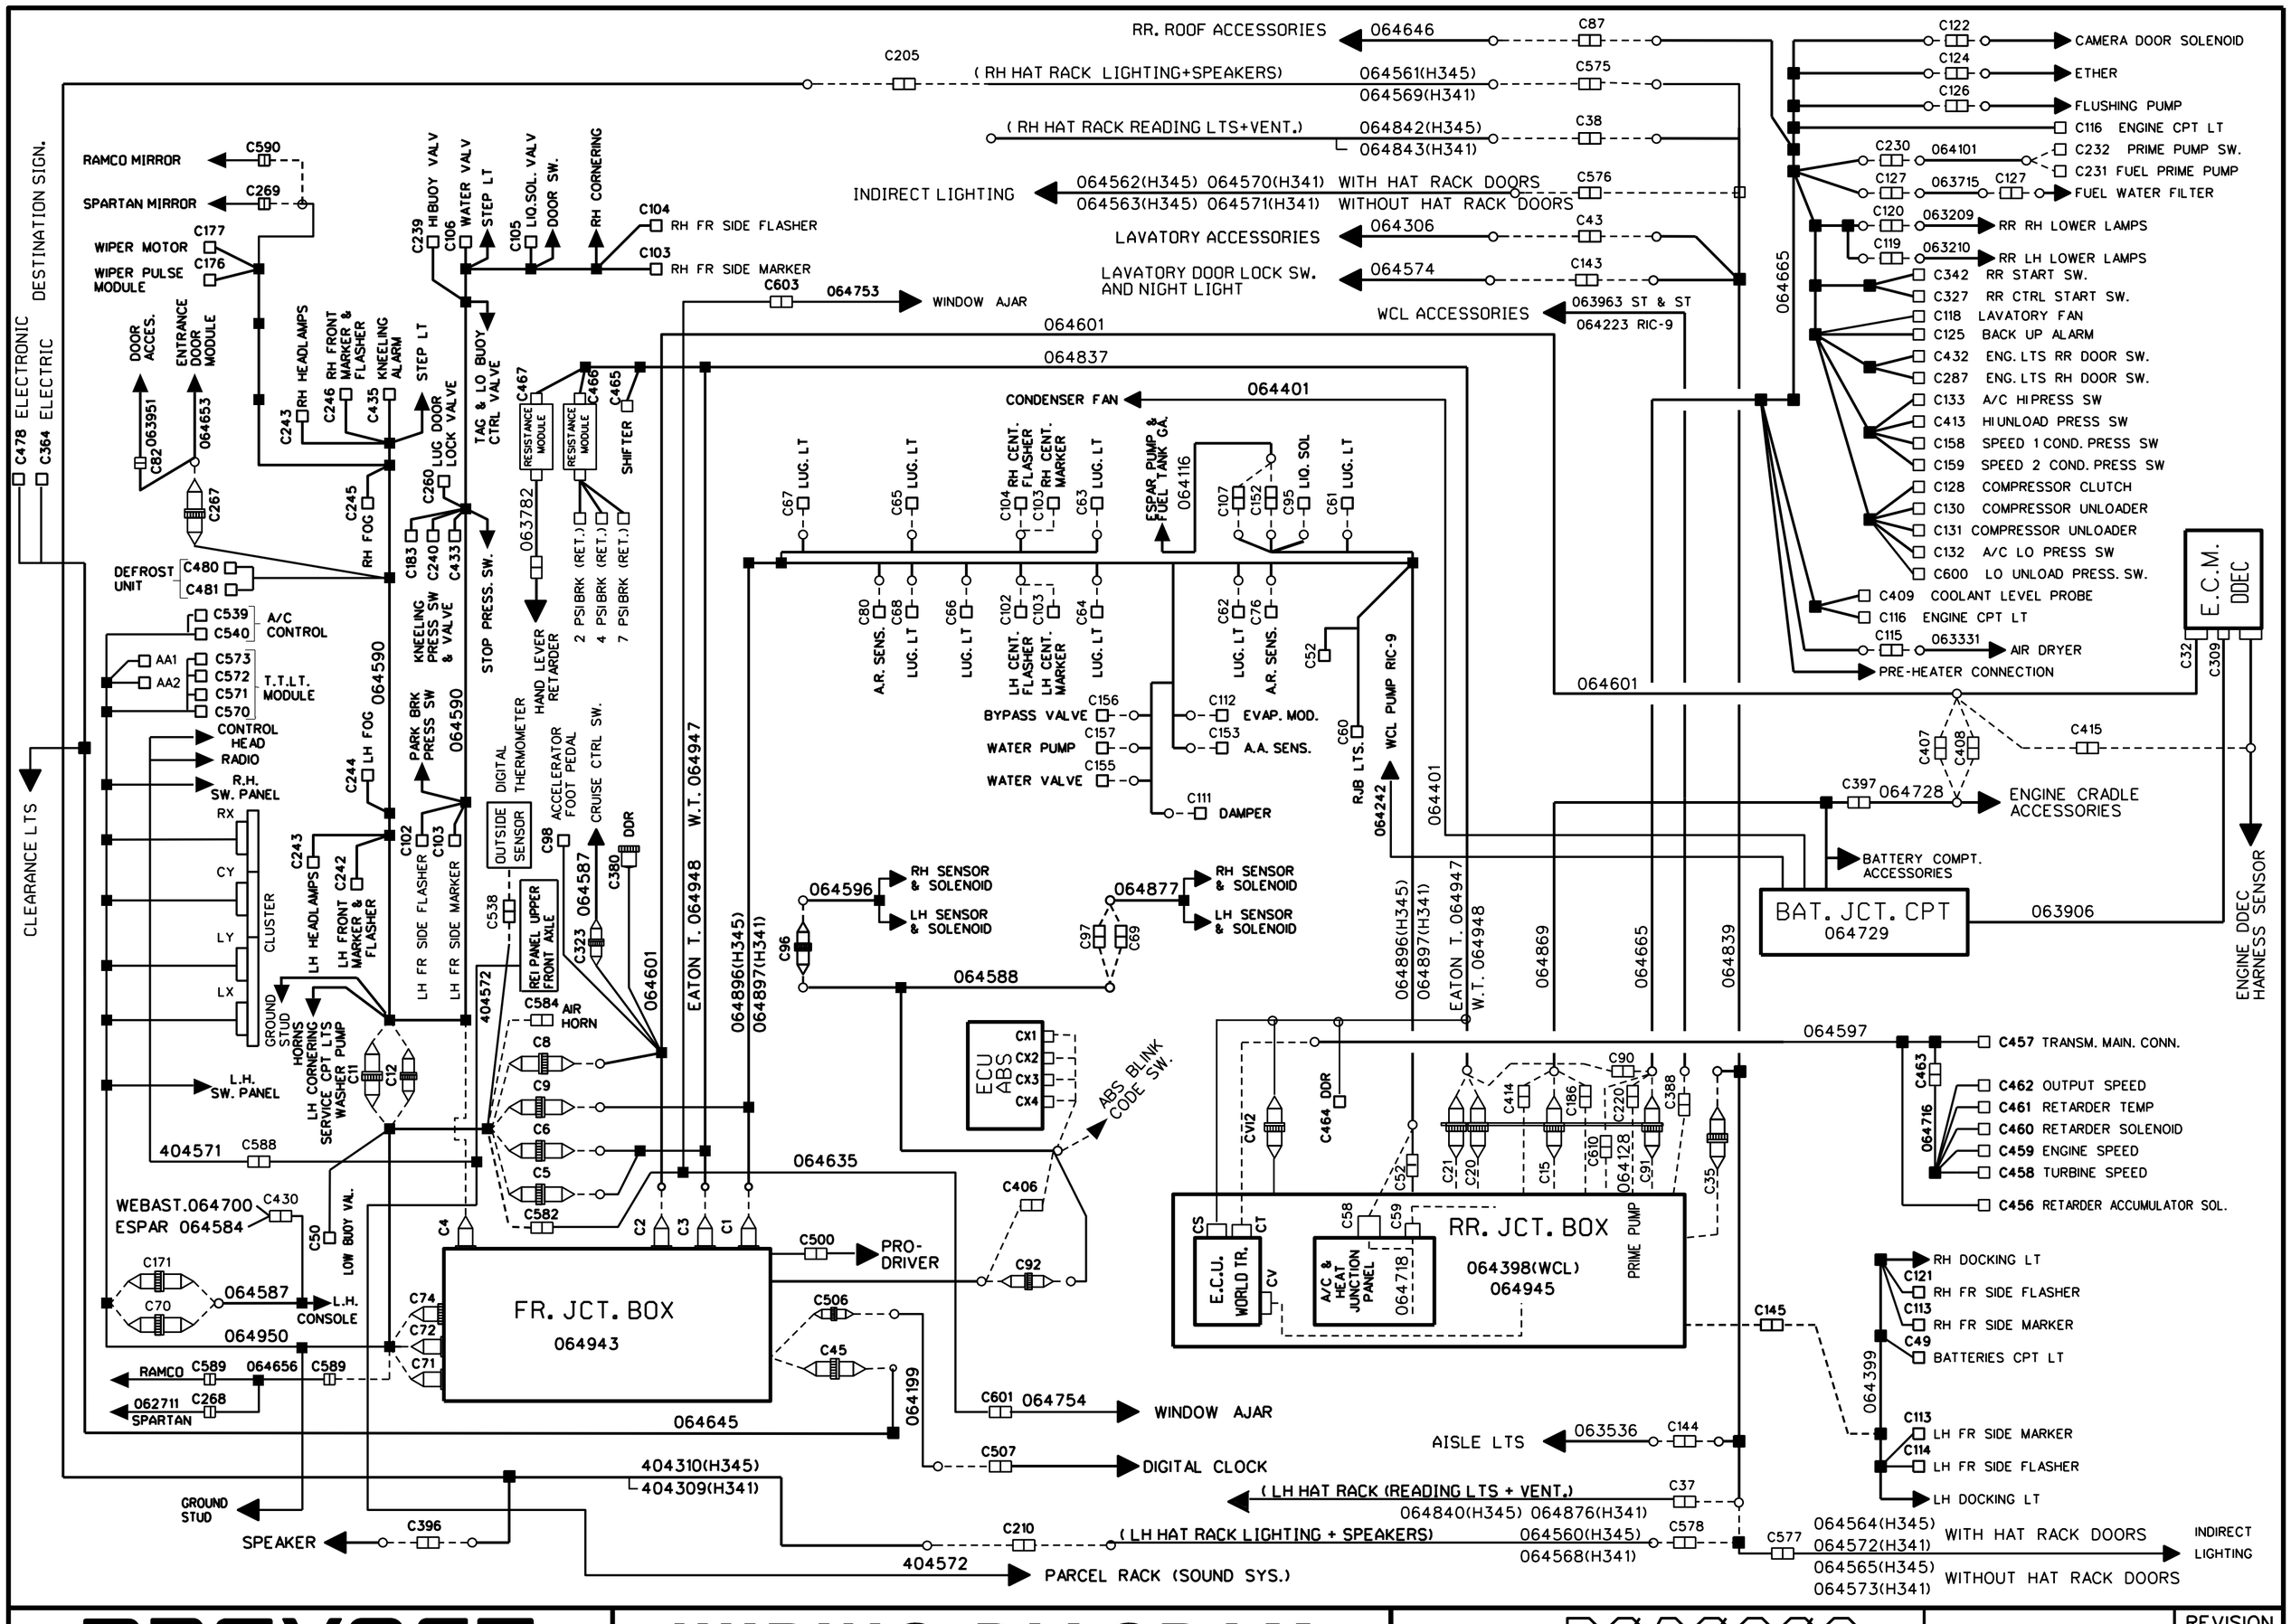

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: C	REVISION 17

RR. ROOF ACCESSORIES 064646 C87
(RH HAT RACK LIGHTING+SPEAKERS) 064561(H345) 064569(H341) C575
(RH HAT RACK READING LTS+VENT.) 064842(H345) 064843(H341) C38
INDIRECT LIGHTING 064562(H345) 064570(H341) WITH HAT RACK DOORS 064563(H345) 064571(H341) WITHOUT HAT RACK DOORS C576
LAVATORY ACCESSORIES 064306 C43
LAVATORY DOOR LOCK SW. AND NIGHT LIGHT 064574 C143
WCL ACCESSORIES 063963 ST & ST 064223 RIC-9
C205
065012
C122 CAMERA DOOR SOLENOID
C124 ETHER
C126 FLUSHING PUMP
C116 ENGINE CPT LT
C230 064101 C232 PRIME PUMP SW. C231 FUEL PRIME PUMP
C127 063715 C127 FUEL WATER FILTER
C120 063209 RR RH LOWER LAMPS
C119 063210 RR LH LOWER LAMPS
C342 RR START SW.
C327 RR CTRL START SW.
C118 LAVATORY FAN
C125 BACK UP ALARM
C432 ENG. LTS RR DOOR SW.
C287 ENG. LTS RH DOOR SW.
C133 A/C HI PRESS SW
C413 HI UNLOAD PRESS SW
C158 SPEED 1 COND. PRESS SW
C159 SPEED 2 COND. PRESS SW
C128 COMPRESSOR CLUTCH
C130 COMPRESSOR UNLOADER
C131 COMPRESSOR UNLOADER
C132 A/C LO PRESS SW
C600 LO UNLOAD PRESS. SW.
C409 COOLANT LEVEL PROBE
C116 ENGINE CPT LT
C115 063331 AIR DRYER
PRE-HEATER CONNECTION
E.C.M. DDEC
C32
C309
064601
C415
C407 C408
C397 064728 ENGINE CRADLE ACCESSORIES
BATTERY COMPT. ACCESSORIES
BAT. JCT. CPT 064729
063906
ENGINE DDEC HARNESS SENSOR
064401
064242
064896(H345) 064897(H341) EATON T. 064948 W.T. 064947
064869
065012
064839
C478 ELECTRONIC
C364 ELECTRIC
DESTINATION SIGN.
RAMCO MIRROR C590
SPARTAN MIRROR C269
WIPER MOTOR C177
WIPER PULSE MODULE C176
DOOR ACCES. C82 063951
ENTRANCE DOOR MODULE 064653 C267
RH HEADLAMPS C243
RH FRONT MARKER & FLASHER C246
KNEELING ALARM C435
STEP LT
LUG DOOR LOCK VALVE C260
TAG & LO BUOY CTRL VALVE
C239 HI BUOY VALV
C106 WATER VALV
STEP LT
C105 LIO.SOL. VALV
DOOR SW.
RH CORNERING
C104 RH FR SIDE FLASHER
C103 RH FR SIDE MARKER
C603 064753 WINDOW AJAR
064601
C467 C466 C465
RESISTANCE MODULE
SHIFTER
063782
HAND LEVER RETARDER
2 PSI BRK (RET.)
4 PSI BRK (RET.)
7 PSI BRK (RET.)
CONDENSER FAN 064401
C67 LUG. LT
C65 LUG. LT
C104 RH CENT. FLASHER
C103 RH CENT. MARKER
C63 LUG. LT
ESPAR PUMP FUEL TANK GA. 064116
C107
C152
C95 LIQ. SOL
C61 LUG. LT
C80 A.R. SENS.
C68 LUG. LT
C66 LUG. LT
C102 LH CENT. FLASHER
C103 LH CENT. MARKER
C64 LUG. LT
C62 LUG. LT
C76 A.R. SENS.
C52
C156 BYPASS VALVE
C157 WATER PUMP
C155 WATER VALVE
C112 EVAP. MOD.
C153 A.A. SENS.
C111 DAMPER
C60 RJB LTS.
WCL PUMP RIC-9
064242
064401
064946
064947
W.T. 064948
EATON T. 064948
W.T. 064947
064896(H345)
064897(H341)
064596 RH SENSOR & SOLENOID LH SENSOR & SOLENOID
064877 RH SENSOR & SOLENOID LH SENSOR & SOLENOID
C96
C97
C69
064588
ECU ABS CX1 CX2 CX3 CX4
ABS BLINK CODE SW.
064597
C457 TRANSM. MAIN. CONN.
C463
064716
C462 OUTPUT SPEED
C461 RETARDER TEMP
C460 RETARDER SOLENOID
C459 ENGINE SPEED
C458 TURBINE SPEED
C456 RETARDER ACCUMULATOR SOL.
C414 C186 C220 C388 C90
C610 064128 C91 C35
C21 C20 C15
C52
CV12
C464 DDR
CS E.C.U. WORLD TR. CT CV
C58 C59 A/C & HEAT JUNCTION PANEL 064718
RR. JCT. BOX 064398(WCL) 064945
PRIME PUMP
C145
RH DOCKING LT
C121 RH FR SIDE FLASHER
C113 RH FR SIDE MARKER
C49 BATTERIES CPT LT
064399
C113 LH FR SIDE MARKER
C114 LH FR SIDE FLASHER
LH DOCKING LT
AISLE LTS 063536 C144
(LH HAT RACK (READING LTS + VENT.) 064840(H345) 064841(H341) C37
(LH HAT RACK LIGHTING + SPEAKERS) 064560(H345) 064568(H341) C578
C577
064564(H345) 064572(H341) WITH HAT RACK DOORS
064565(H345) 064573(H341) WITHOUT HAT RACK DOORS
INDIRECT LIGHTING
C210
404572
PARCEL RACK (SOUND SYS.)
404310(H345) 404309(H341)
SPEAKER C396
GROUND STUD
CLEARANCE LTS
DEFROST UNIT C480 C481
C539 C540 A/C CONTROL
AA1 AA2 C573 C572 C571 C570 T.T.L.T. MODULE
CONTROL HEAD
RADIO
R.H. SW. PANEL
L.H. SW. PANEL
RX CY LY LX CLUSTER
GROUND STUD
HORNS
LH CORNERING
SERVICE CPT LTS
WASHER PUMP
C11 C12
LH HEADLAMPS C243
LH FRONT MARKER & FLASHER C242
C244 LH FOG
RH FOG C245
C183 C240 C433
KNEELING PRESS SW & VALVE
PARK BRK PRESS SW
064590
LH FR SIDE FLASHER C102
LH FR SIDE MARKER C103
STOP PRESS. SW.
DIGITAL THERMOMETER
OUTSIDE SENSOR
ACCELERATOR FOOT PEDAL C98
CRUISE CTRL SW.
C323 064587
C380 DDR
REI PANEL UPPER FRONT AXLE
C538
404572
C584 AIR HORN
C8 C9 C6 C5
C582
C588
404571
C430
WEBAST.064700
ESPAR 064584
C50 LOW BUOY VAL.
C171 C70
064587 L.H. CONSOLE
064950
RAMCO C589 064656 C589
062711 SPARTAN C268
C4 C2 C3 C1
FR. JCT. BOX 064943
C74 C72 C71
C500 PRO-DRIVER
C92
C406
C506
C45
064199
064645
C601 064754 WINDOW AJAR
C507 DIGITAL CLOCK
064635
WEBASTO

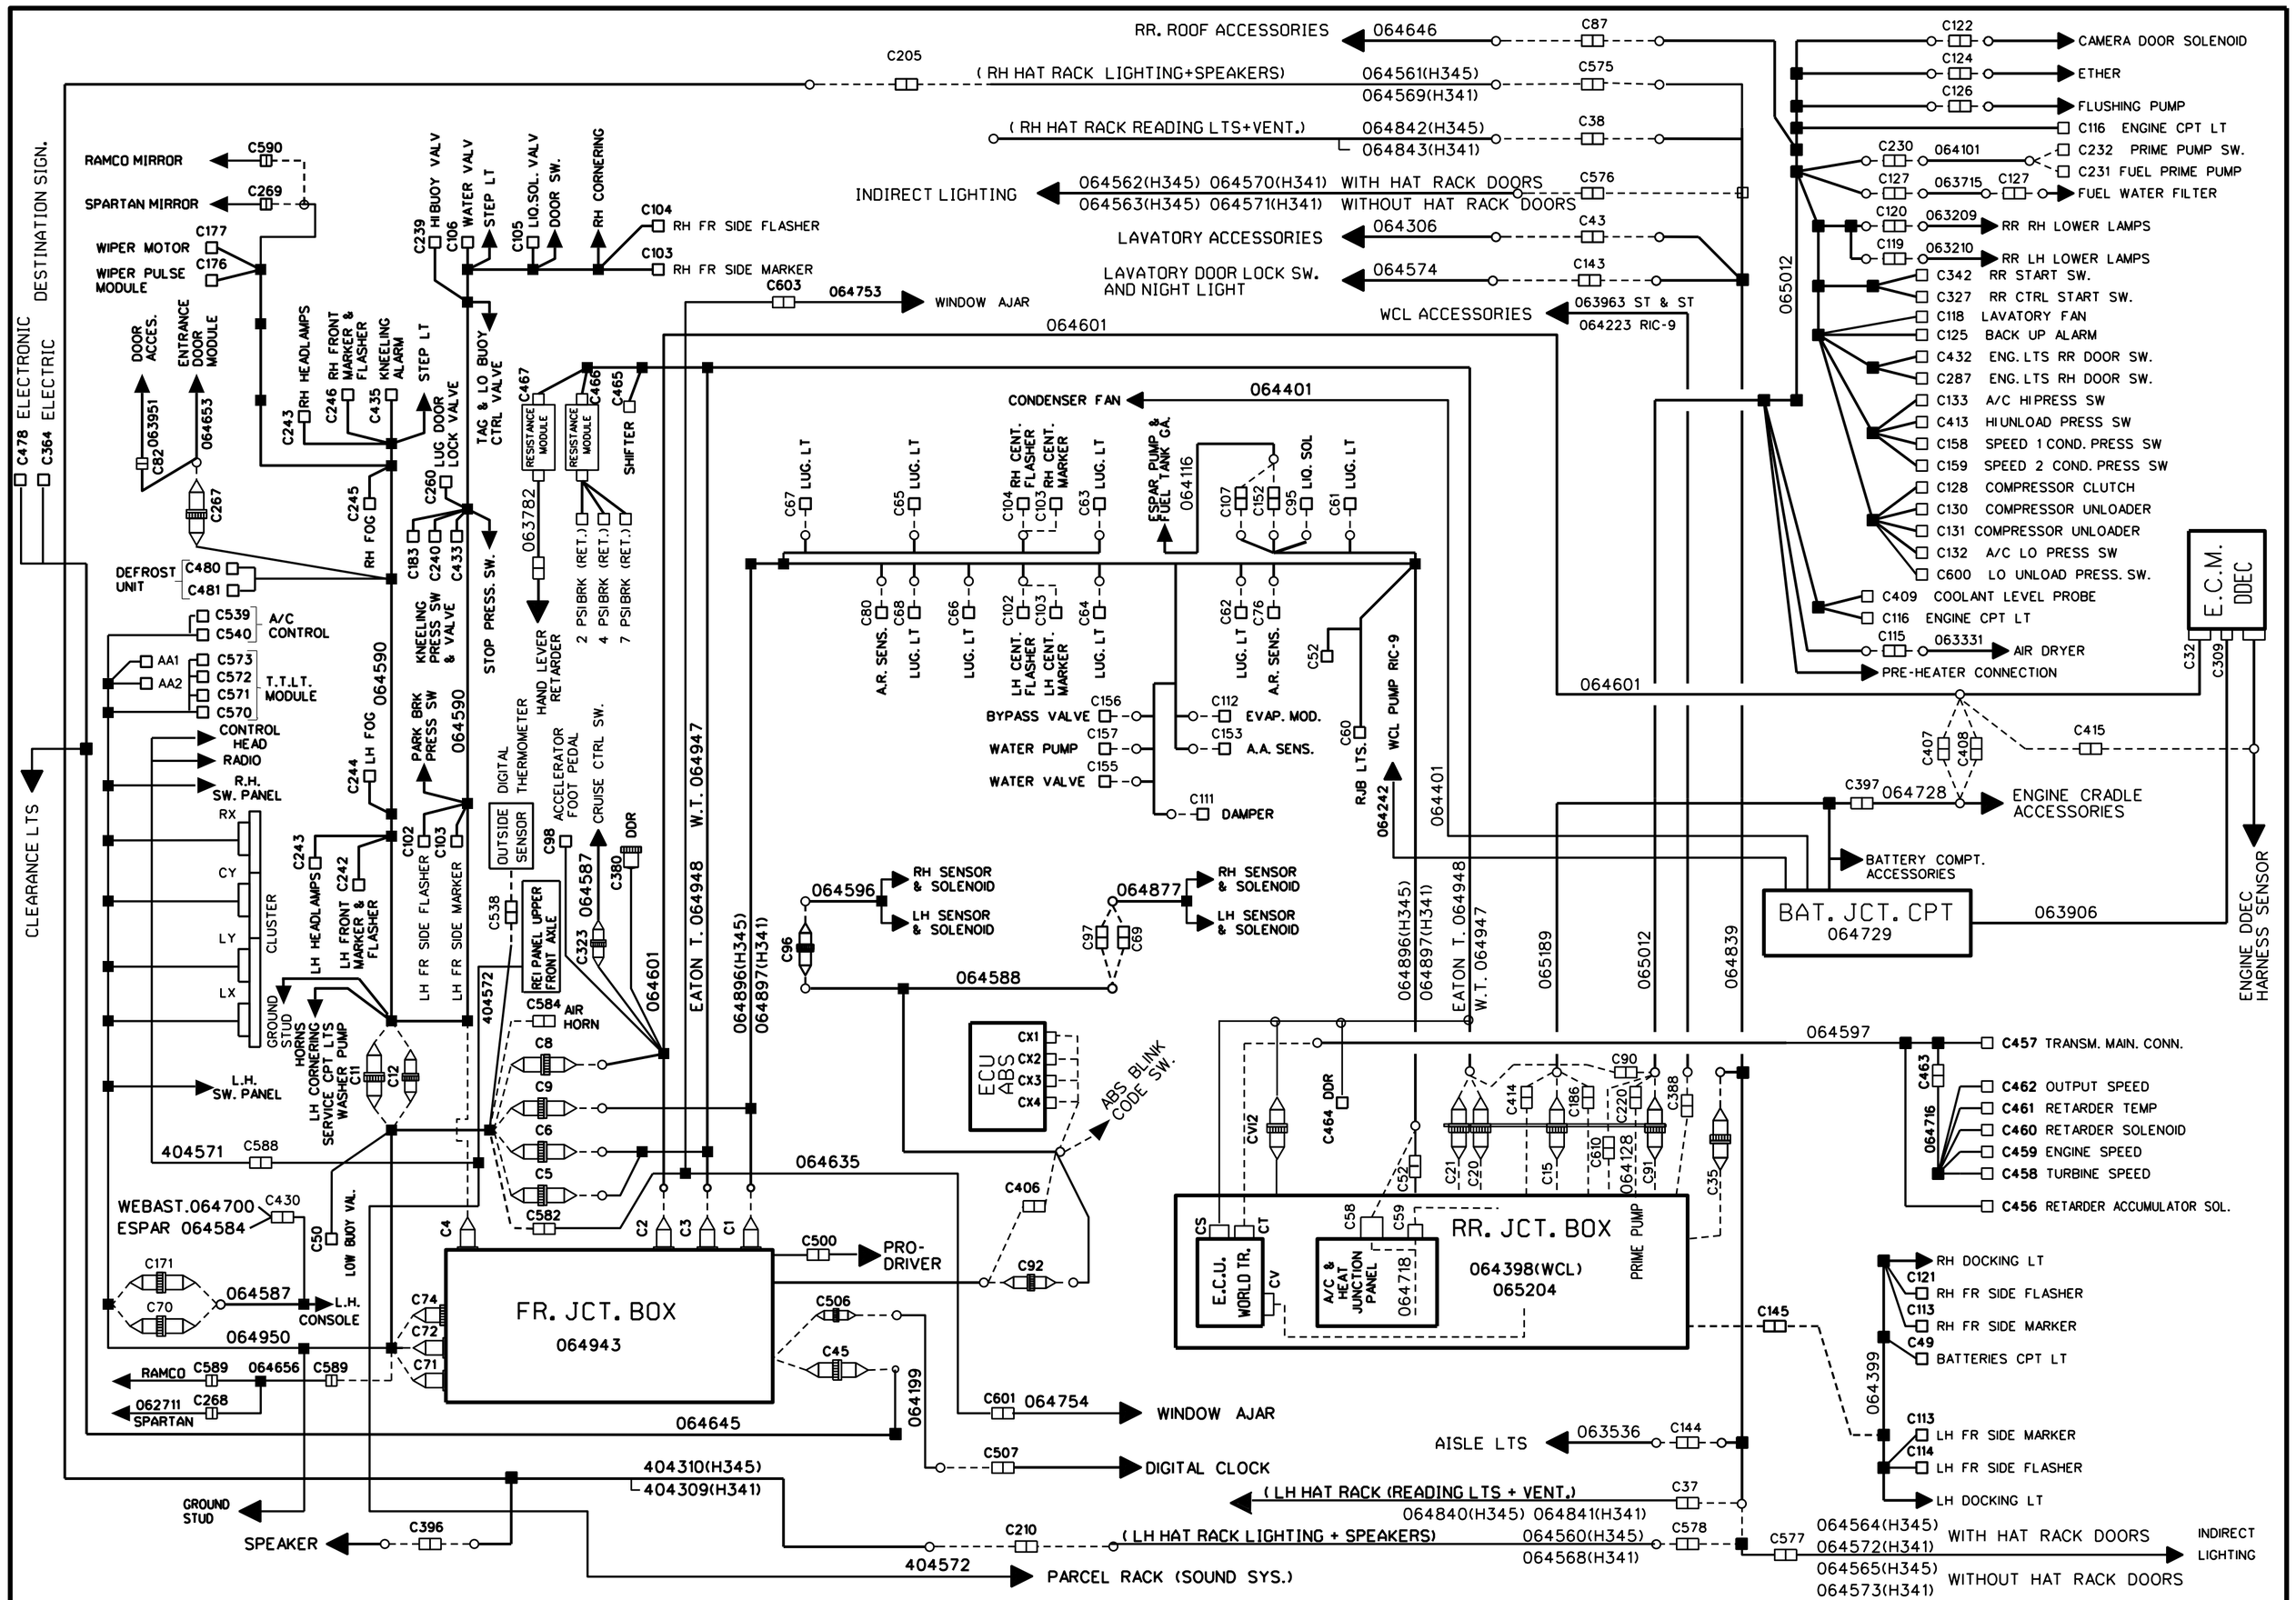

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: C	REVISION 01

CENTER DASH PANEL
SP23-16
SP21-16
SP19
SP20
SP29-16
SP57-16
SP58-16
SP23-16
SP21-16
SP19
SP20
SP29-16
SP57-16
SP58-16
SP59-16
SP68-16
C8
12
9
7
8
4
19
18
17
16
SP23-16
SP21-16
SP19
SP20
SP29-16
SP57-16
SP58-16
SP59-16
SP68-16
SP105-18
C8
B
F
E
SP23-16
SP21-16
SP19
SP20
SP29-16
SP57-16
SP58-16
SP59-16
SP68-16
SP105-18
ENGINE CRADLE ACCES.
SP59-16
SP68-16
C74
JONCTION BOX
C2
SP105-18
R.H. DASH PANEL
SP56-16
RH DASH PANEL
SP61-14
SP83-16
SP84-16
CENTER DASH PANEL
SP4-16
SP3-16
L.H. CONSOLE
C171
34
SP74-16
C17
16
SP71-18
FR. SERV. COMPT.
BEHIND TAG PANEL
SP72-16
U/DASH RH NEAR
WIPER MOTOR
SP114-18
SP115-18
U/FLOOR NEAR
RH HEADLAMP
SP116-16
SP117-16
C74
C4
FRONT JONCTION BOX
FR. ROOF - LH ACCES.
FR. ROOF - LH ACCES.
FR. ROOF - RH ACCES.
FR. ROOF - RH ACCES.
SP41-16
SP46-18
SP48-16
SP42-16
C45
C1
SP79-16
SP78-18
SP77-18
CONDENSER COMPT.
CONDENSER COMPT.
EVAPAPORATOR COMPT.
C92
8
9
SP69-16
C96
9
FR. AXLE ACCES
SP70-16
RR. AXLE ACCES
CONDENSER COMPT.
SP92-16
L.H. LUGG. COMPT. NO:2
L.H. LUGG. COMPT. NO:1
L.H. LUGG. COMPT. NO:1
R.H. LUGG. COMPT. NO:1
R.H. LUGG. COMPT. NO:2
R.H. LUGG. COMPT. NO:1
EVAPAPORATOR COMPT.
L.H. LUGG. COMPT. NO:2
L.H. LUGG. COMPT. NO:3
R.H. LUGG. COMPT. NO:3
SP5-14
SP6-16
SP7-16
SP8-16
SP9-14
SP10-14
SP93-16
SP96-16
SP97-14
SP98-14
C52
REAR JONCTION BOX
C15
SP106-14
SP108-14
SP108-14
BATTERY CPT JCT BLOCK
BATTERY CPT JCT BLOCK
BATTERY CPT JCT BLOCK
C397
SP12-16
SP13-16
SP15-14
SP16-16
SP17-14
2
31
23
32
39
NEAR STARTER SOL.
NEAR STARTER SOL.
MANUAL NEUTRAL C326
MANUAL NEUTRAL C326
NEAR C407 OR C408
C87
SP94-16
SP95-16
6
7
RR. ROOF CENTER ACCES.
C91
SP104-14
SP109-14
SP110-16
SP111-16
SP112-18
RR DOOR LOWER LTS C120
PRE-HEATER CONNECTION
RR START SW C342
RR DOOR CPT LTS SW C432
ENGINE CPT LT C116
C3
SP11-14
SP14-14
SP33-14
SP38-18
SP11-14
SP14-14
SP33-14
SP38-18
C74
SP18-16
C6
15
SP18-16
SP18-16
SP43-14
SP45-14
C5
16
18
SP43-14
SP45-14
SP43-14
SP45-14
C20
SP31-16
SP32-16
SP88-14
R.H. HAT RACK END C38
C35
SP24-16
SP25-16
SP26-16
LAVATORY ROOF RR END C43
SP27-14
SP28-16
SP87-16
L.H. HAT RACK RR END C37
CENTER DASH PANEL
SP48-14
SP48-14
22
SP48-14
SP48-14

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: D	REVISION 00

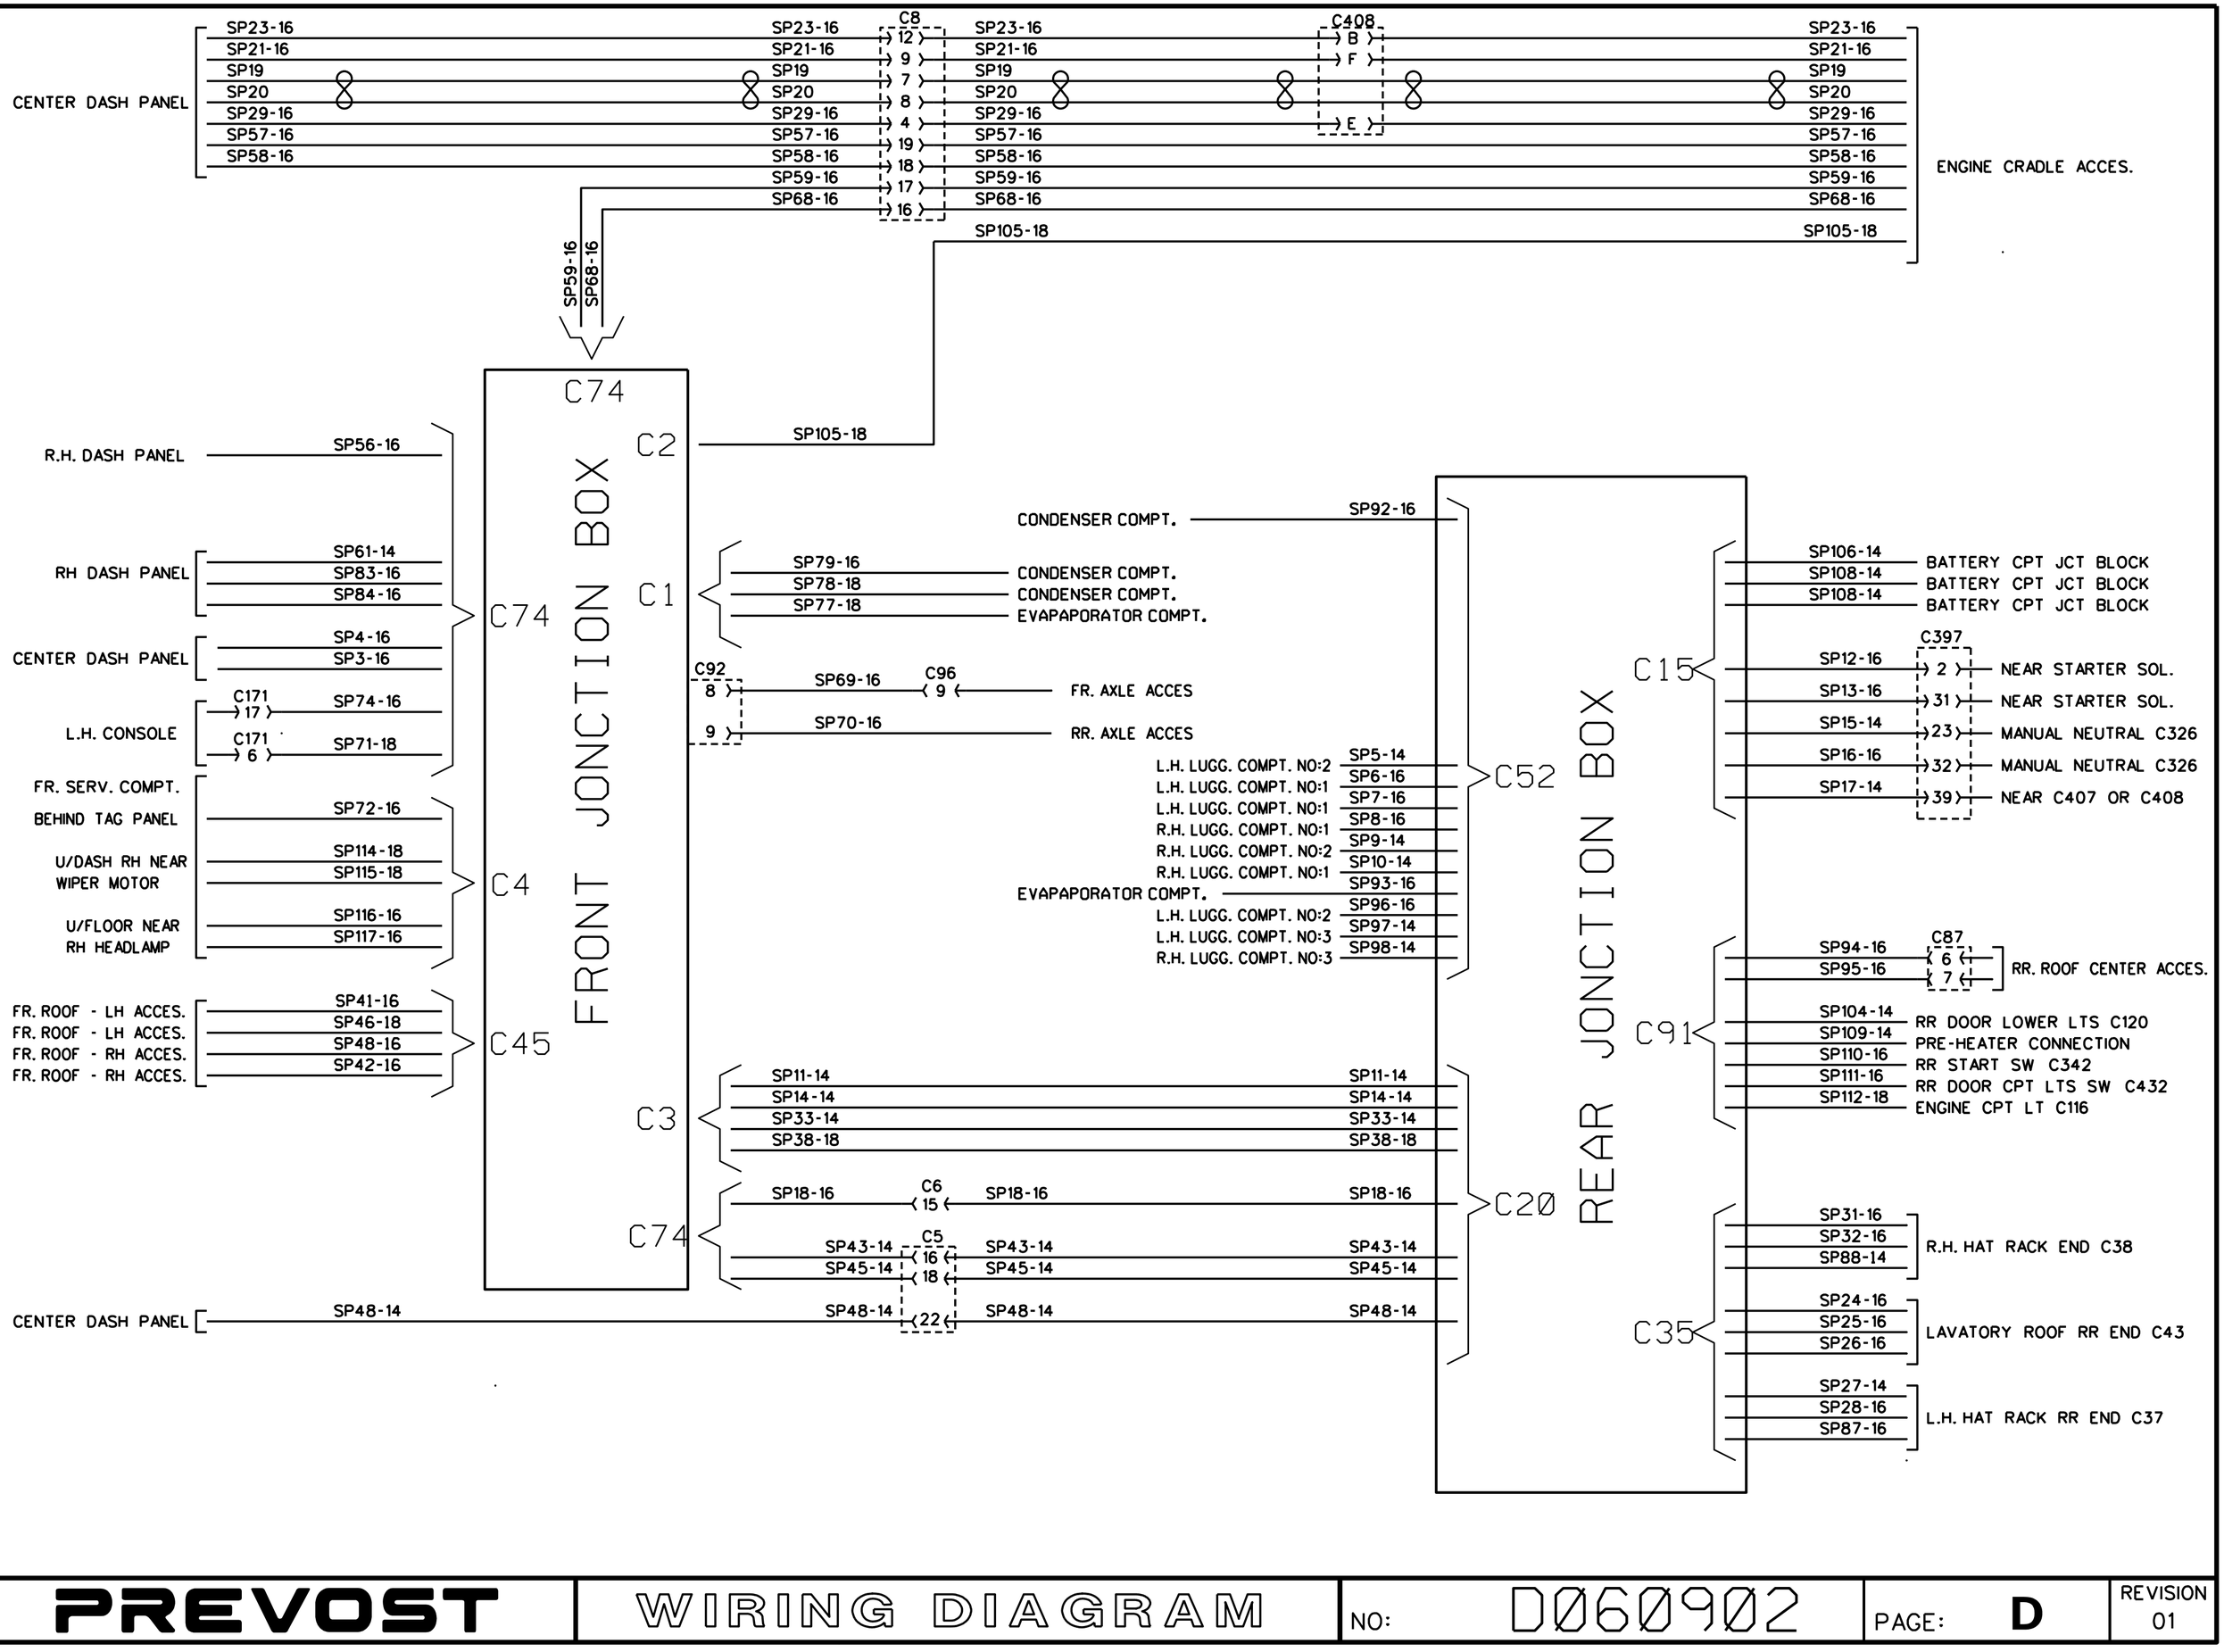
CENTER DASH PANEL
SP23-16
SP21-16
SP19
SP20
SP29-16
SP57-16
SP58-16
C8
12
9
7
8
4
19
18
17
16
SP59-16
SP68-16
C408
B
F
E
ENGINE CRADLE ACCES.
SP105-18
C74
JONCTION BOX
FRONT
C2
C1
C4
C45
C3
C74
C20
C52
C15
C91
C35
REAR JONCTION BOX
R.H. DASH PANEL
SP56-16
RH DASH PANEL
SP61-14
SP83-16
SP84-16
CENTER DASH PANEL
SP4-16
SP3-16
L.H. CONSOLE
C171
17
SP74-16
C171
6
SP71-18
FR. SERV. COMPT.
BEHIND TAG PANEL
SP72-16
U/DASH RH NEAR
WIPER MOTOR
SP114-18
SP115-18
U/FLOOR NEAR
RH HEADLAMP
SP116-16
SP117-16
FR. ROOF - LH ACCES.
SP41-16
FR. ROOF - LH ACCES.
SP46-18
FR. ROOF - RH ACCES.
SP48-16
FR. ROOF - RH ACCES.
SP42-16
CONDENSER COMPT.
SP92-16
SP79-16
CONDENSER COMPT.
SP78-18
CONDENSER COMPT.
SP77-18
EVAPAPORATOR COMPT.
C92
8
SP69-16
C96
9
FR. AXLE ACCES
9
SP70-16
RR. AXLE ACCES
L.H. LUGG. COMPT. NO:2
SP5-14
L.H. LUGG. COMPT. NO:1
SP6-16
L.H. LUGG. COMPT. NO:1
SP7-16
R.H. LUGG. COMPT. NO:1
SP8-16
R.H. LUGG. COMPT. NO:2
SP9-14
R.H. LUGG. COMPT. NO:1
SP10-14
EVAPAPORATOR COMPT.
SP93-16
L.H. LUGG. COMPT. NO:2
SP96-16
L.H. LUGG. COMPT. NO:3
SP97-14
R.H. LUGG. COMPT. NO:3
SP98-14
SP106-14
BATTERY CPT JCT BLOCK
SP108-14
BATTERY CPT JCT BLOCK
SP108-14
BATTERY CPT JCT BLOCK
C397
SP12-16
2
NEAR STARTER SOL.
SP13-16
31
NEAR STARTER SOL.
SP15-14
23
MANUAL NEUTRAL C326
SP16-16
32
MANUAL NEUTRAL C326
SP17-14
39
NEAR C407 OR C408
C87
SP94-16
6
SP95-16
7
RR. ROOF CENTER ACCES.
SP104-14
RR DOOR LOWER LTS C120
SP109-14
PRE-HEATER CONNECTION
SP110-16
RR START SW C342
SP111-16
RR DOOR CPT LTS SW C432
SP112-18
ENGINE CPT LT C116
SP11-14
SP14-14
SP33-14
SP38-18
SP18-16
C6
15
C5
16
18
22
SP43-14
SP45-14
SP48-14
CENTER DASH PANEL
SP31-16
SP32-16
SP88-14
R.H. HAT RACK END C38
SP24-16
SP25-16
SP26-16
LAVATORY ROOF RR END C43
SP27-14
SP28-16
SP87-16
L.H. HAT RACK RR END C37

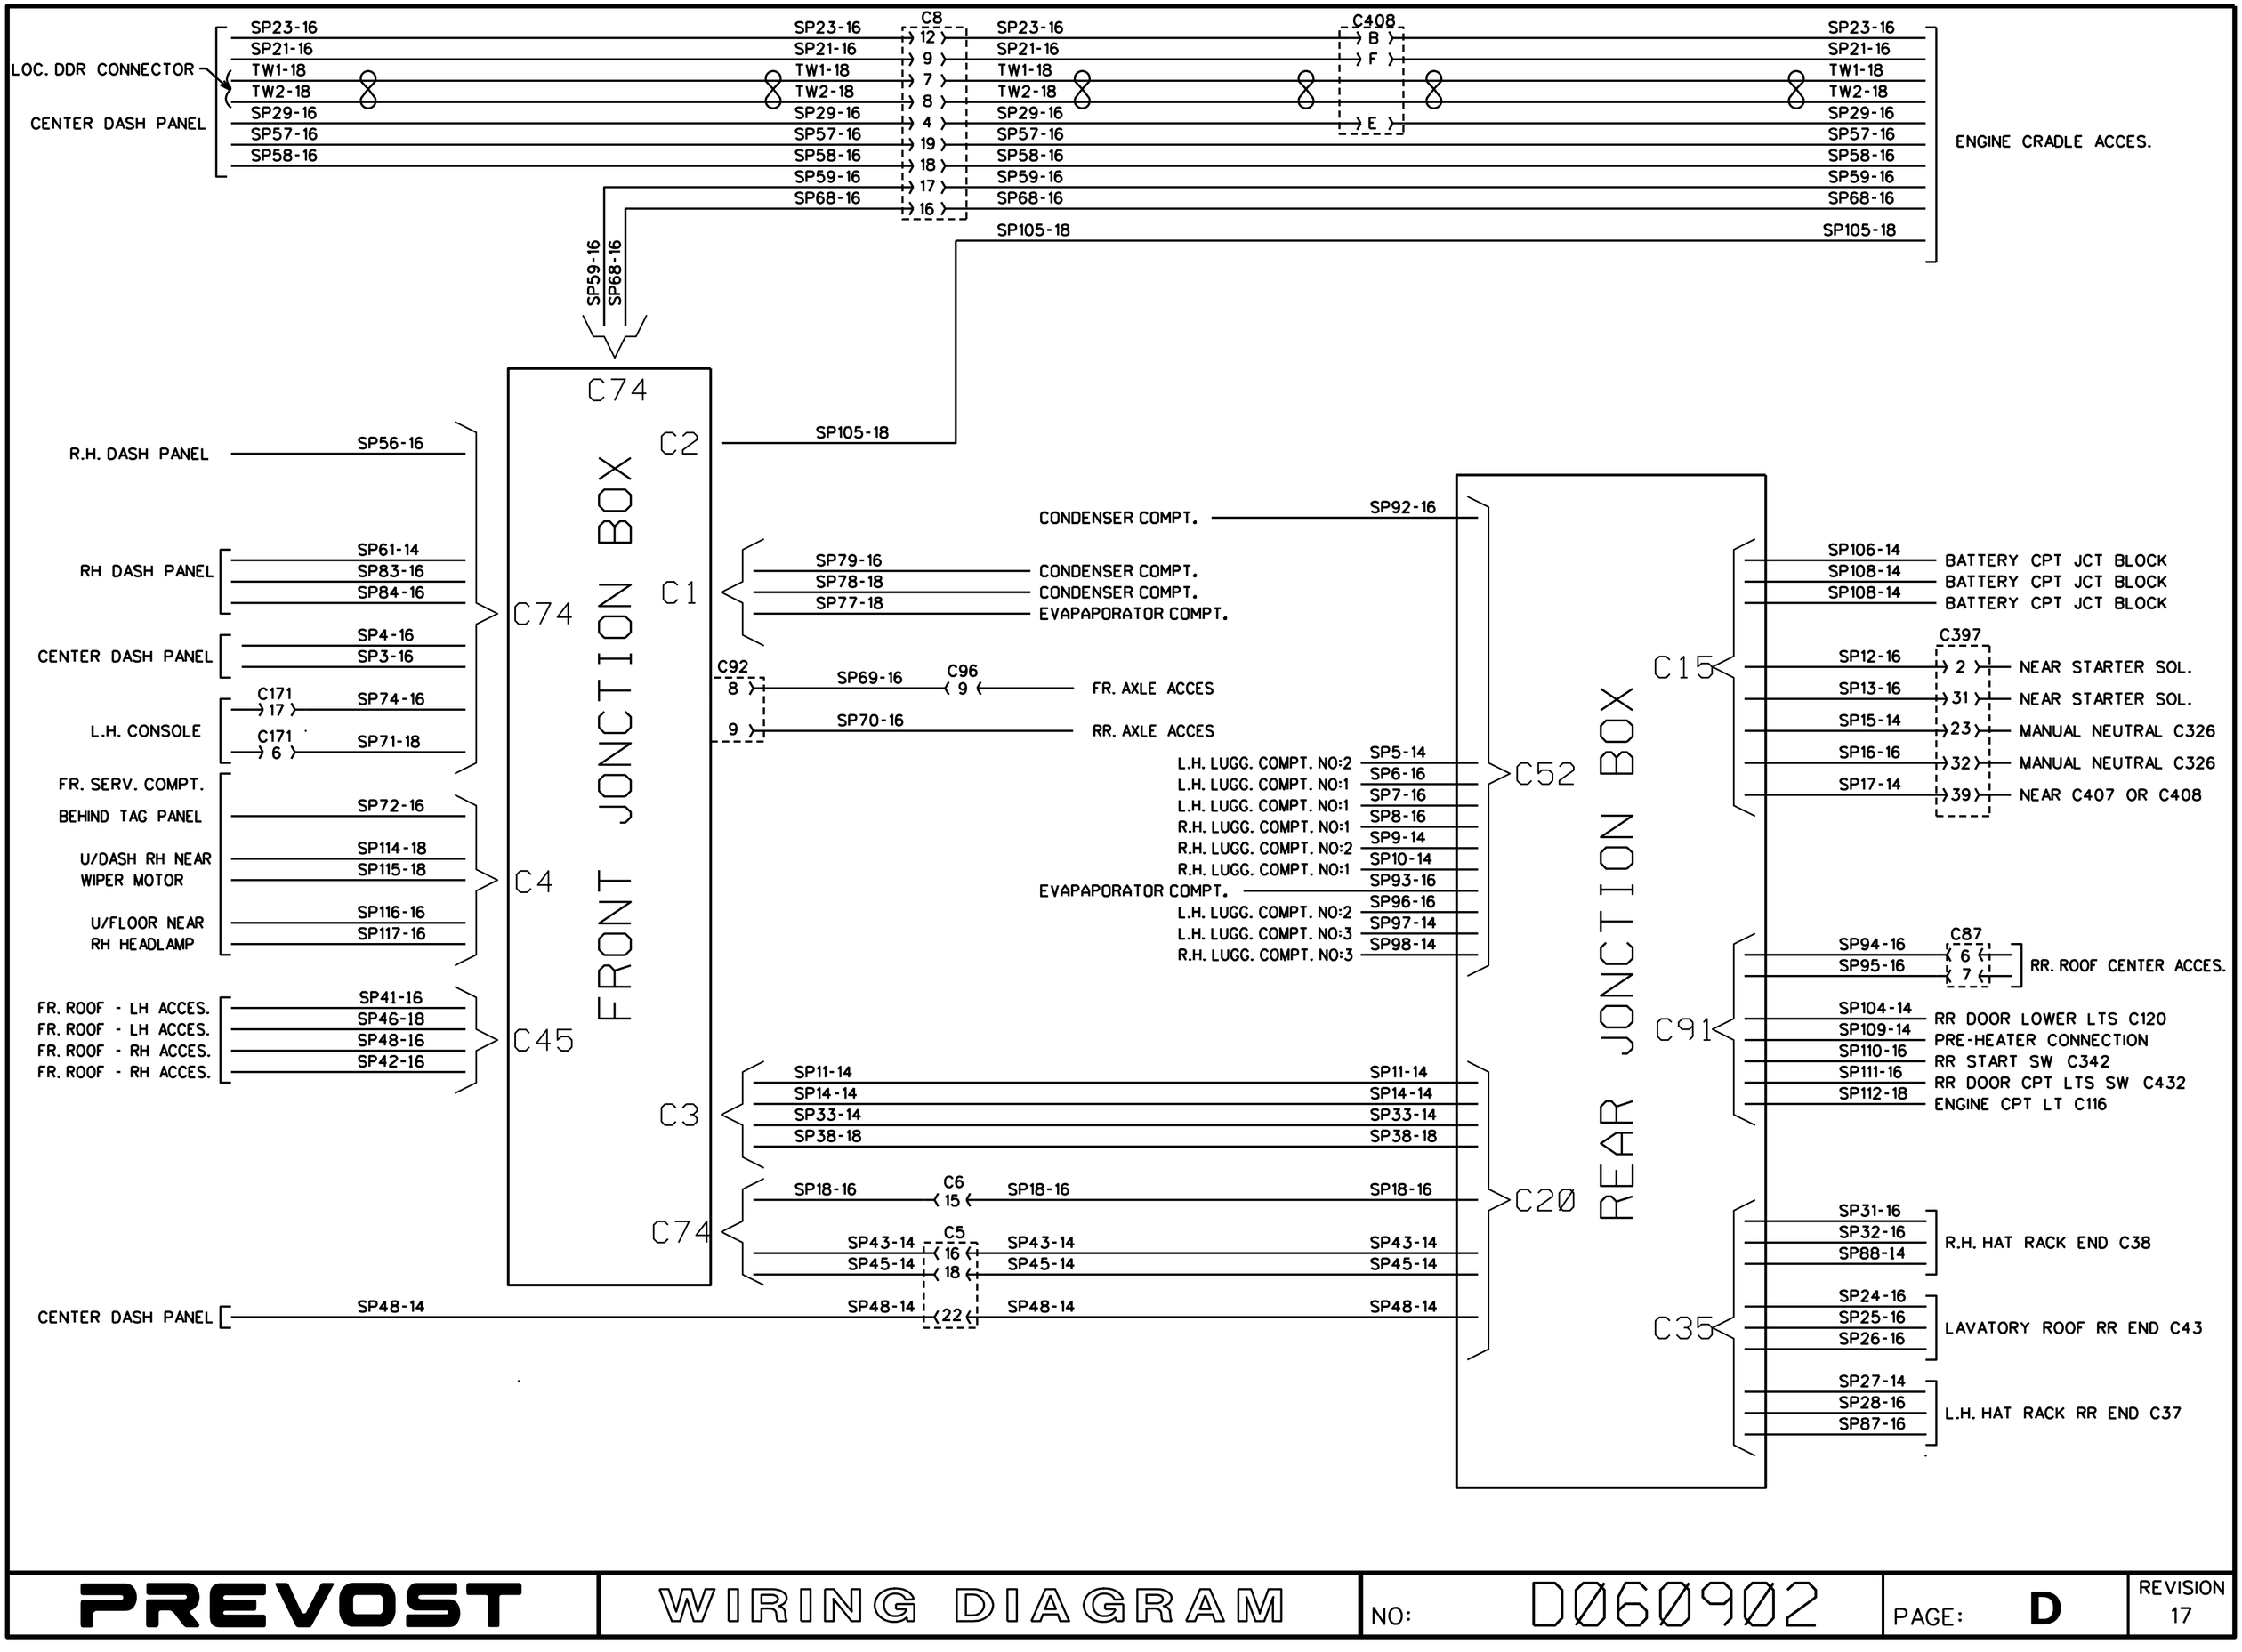
LOC. DDR CONNECTOR
CENTER DASH PANEL
SP23-16
SP21-16
TW1-18
TW2-18
SP29-16
SP57-16
SP58-16
SP59-16
SP68-16
SP105-18
C8
12
9
7
8
4
19
18
17
16
C408
B
F
E
ENGINE CRADLE ACCES.
C74
JONCTION BOX
FRONT
C2
C1
C4
C45
C3
C74
C5
C6
C92
C96
R.H. DASH PANEL
SP56-16
RH DASH PANEL
SP61-14
SP83-16
SP84-16
CENTER DASH PANEL
SP4-16
SP3-16
L.H. CONSOLE
C171
17
6
SP74-16
SP71-18
FR. SERV. COMPT.
BEHIND TAG PANEL
SP72-16
U/DASH RH NEAR
WIPER MOTOR
SP114-18
SP115-18
U/FLOOR NEAR
RH HEADLAMP
SP116-16
SP117-16
FR. ROOF - LH ACCES.
SP41-16
SP46-18
FR. ROOF - LH ACCES.
SP48-16
FR. ROOF - RH ACCES.
SP42-16
FR. ROOF - RH ACCES.
CENTER DASH PANEL
SP48-14
CONDENSER COMPT.
SP92-16
SP79-16
SP78-18
SP77-18
CONDENSER COMPT.
CONDENSER COMPT.
EVAPAPORATOR COMPT.
SP69-16
FR. AXLE ACCES
SP70-16
RR. AXLE ACCES
L.H. LUGG. COMPT. NO:2
SP5-14
L.H. LUGG. COMPT. NO:1
SP6-16
L.H. LUGG. COMPT. NO:1
SP7-16
R.H. LUGG. COMPT. NO:1
SP8-16
R.H. LUGG. COMPT. NO:2
SP9-14
R.H. LUGG. COMPT. NO:1
SP10-14
EVAPAPORATOR COMPT.
SP93-16
L.H. LUGG. COMPT. NO:2
SP96-16
L.H. LUGG. COMPT. NO:3
SP97-14
R.H. LUGG. COMPT. NO:3
SP98-14
C52
C20
REAR JONCTION BOX
C15
C91
C35
C397
C87
SP11-14
SP14-14
SP33-14
SP38-18
SP18-16
SP43-14
SP45-14
SP48-14
SP106-14
SP108-14
SP108-14
BATTERY CPT JCT BLOCK
BATTERY CPT JCT BLOCK
BATTERY CPT JCT BLOCK
SP12-16
SP13-16
SP15-14
SP16-16
SP17-14
2
31
23
32
39
NEAR STARTER SOL.
NEAR STARTER SOL.
MANUAL NEUTRAL C326
MANUAL NEUTRAL C326
NEAR C407 OR C408
SP94-16
SP95-16
6
7
RR. ROOF CENTER ACCES.
SP104-14
SP109-14
SP110-16
SP111-16
SP112-18
RR DOOR LOWER LTS C120
PRE-HEATER CONNECTION
RR START SW C342
RR DOOR CPT LTS SW C432
ENGINE CPT LT C116
SP31-16
SP32-16
SP88-14
R.H. HAT RACK END C38
SP24-16
SP25-16
SP26-16
LAVATORY ROOF RR END C43
SP27-14
SP28-16
SP87-16
L.H. HAT RACK RR END C37

CIRCUIT NUMBER CODE

No.	DESCRIPTION
B A	INTERIOR LTS-110V FLUORESCENT
B B	INTERIOR LTS-110V FLUORESCENT
D 1	SOUND SYSTEM-FR RH SPEAKER
D 2	SOUND SYSTEM-FR RH SPEAKER
D 3	SOUND SYSTEM-FR RH SPEAKER
D 4	SOUND SYSTEM-RR RH SPEAKER
D 5	SOUND SYSTEM-RR RH SPEAKER
D 6	SOUND SYSTEM-RR RH SPEAKER
D 7	SOUND SYSTEM-RR RH SPEAKER
D 8	SOUND SYSTEM-RR RH SPEAKER
D 3 4	SOUND SYSTEM-RR RH SPEAKER
D 6 7	SOUND SYSTEM-RR RH SPEAKER
G 1	SOUND SYSTEM-FR LH SPEAKER
G 2	SOUND SYSTEM-FR LH SPEAKER
G 3	SOUND SYSTEM-FR LH SPEAKER
G 4	SOUND SYSTEM-RR LH SPEAKER
G 5	SOUND SYSTEM-RR LH SPEAKER
G 6	SOUND SYSTEM-RR LH SPEAKER
G 7	SOUND SYSTEM-RR LH SPEAKER
G 8	SOUND SYSTEM-RR LH SPEAKER
G 3 4	SOUND SYSTEM-RR LH SPEAKER
G 6 7	SOUND SYSTEM-RR LH SPEAKER
L 1 A	INTERIOR LTS-110V FLUORESCENT
L 1 B	INTERIOR LTS-110V FLUORESCENT
L 2 A	INTERIOR LTS-110V FLUORESCENT
L 2 B	INTERIOR LTS-110V FLUORESCENT
L 8	ENG. BLK & WATER TANK-HEATER
L 9	ENG. BLK & WATER TANK-HEATER
L 0	110V RECEPTACLE- 110V FLUOR.
L 1	110V RECEPTACLE- 110V FLUOR.
L 2	110V RECEPTACLE- 110V FLUOR.
R A	INTERIOR LTS-110V FLUORESCENT
R B	INTERIOR LTS-110V FLUORESCENT
S H 1	SHIELD CHASSIS GRD
S H 2	SHIELD CHASSIS GRD
S H 3	SHIELD CHASSIS GRD
S H 4	SHIELD CHASSIS GRD
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 1 0	SPARE-RJB TO LUGG CPT #1
S P 1 1	SPARE-FJB TO RJB
S P 1 2	SPARE-RJB TO ENGINE
S P 1 3	SPARE-RJB TO ENGINE
S P 1 4	SPARE-FJB TO RJB
S P 1 5	SPARE-RJB TO ENGINE
S P 1 6	SPARE-RJB TO ENGINE
S P 1 7	SPARE-RJB TO ENGINE
S P 1 8	SPARE-FJB TO RJB
S P 2 4	SPARE-RJB TO LAVATORY ROOF
S P 2 5	SPARE-RJB TO LAVATORY ROOF
S P 2 6	SPARE-RJB TO LAVATORY ROOF
S P 2 7	SPARE-RJB TO LH HAT RACK
S P 2 8	SPARE-RJB TO LH HAT RACK
S P 3 1	SPARE-RJB TO RH HAT RACK
S P 3 2	SPARE-RJB TO RH HAT RACK
S P 3 3	SPARE-FJB TO RJB
S P 3 8	SPARE-FJB TO RJB
S P 4 3	SPARE-FJB TO RJB
S P 4 5	SPARE-FJB TO RJB
S P 4 6	SPARE-RJB TO LH FR ROOF
S P 4 8	SPARE-RJB TO DASH CENTER PANEL
S P 5 6	SPARE-ENGINE TO RH SW PANEL
S P 5 7	SPARE-DASH CENTER PANEL TO ENG.
S P 5 8	SPARE-DASH CENTER PANEL TO ENG.
S P 5 9	SPARE-FJB TO ENGINE
S P 6 1	SPARE-FJB TO DASH RH PANEL
S P 6 8	SPARE-FJB TO ENGINE
S P 6 9	SPARE-FJB TO FR AXLE
S P 7 0	SPARE-FJB TO FR AXLE
S P 7 1	SPARE-FJB TO RH SW PANEL
S P 7 2	SPARE-FJB TO FR SERV CPT
S P 7 4	SPARE-FJB TO LH CONSOLE
S P 7 7	SPARE-FJB TO EVAPORATOR CPT
S P 7 8	SPARE-FJB TO CONDENSER CPT
S P 7 9	SPARE-FJB TO CONDENSER CPT
S P 8 7	SPARE-RJB TO LH HAT RACK
S P 8 8	SPARE-RJB TO RH HAT RACK
S P 9 2	SPARE-RJB TO CONDENSER CPT
S P 9 3	SPARE-RJB TO EVAPORATOR CPT
S P 9 4	SPARE-RJB TO RR ROOF
S P 9 5	SPARE-RJB TO RR ROOF
S P 9 6	SPARE-RJB TO LUGG CPT #2
S P 9 7	SPARE-RJB TO LUGG CPT #3
S P 9 8	SPARE-RJB TO LUGG CPT #3
S P 1 0 4	SPARE-RJB TO ENGINE CPT
S P 1 0 5	SPARE-FJB TO ENGINE
S P 1 0 6	SPARE-RJB TO BATT. CPT.
S P 1 0 7	SPARE-RJB TO BATT. CPT.
S P 1 0 8	SPARE-RJB TO BATT. CPT.
S P 1 0 9	SPARE-RJB TO ENGINE CPT.
S P 1 1 0	SPARE-RJB TO ENGINE CPT.
S P 1 1 1	SPARE-RJB TO ENGINE CPT.
S P 1 1 2	SPARE-RJB TO ENGINE CPT.
S P 1 1 4	SPARE-FJB TO U/DASH WIPER
S P 1 1 5	SPARE-FJB TO U/DASH WIPER
S P 1 1 6	SPARE-FJB TO U/DASH FLOOR
S P 1 1 7	SPARE-FJB TO U/DASH FLOOR
W C	A/C & HEAT SYST-EVAP CTR SIGN
Y C	INTERIOR LTS-110V FLUORESCENT
Y D	INTERIOR LTS-110V FLUORESCENT
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0	GALLEY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A A	RS - VOLTAGE REGULATOR GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 E	RS - HAT RACK ACCES. LH GRD
0 F	RS - HAT RACK ACCES. RH GRD
0 G	RS - HAT RACK ACCES. RH GRD
0 H	RS - LAVATORY ACCES. GRD
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR (SEDAN) GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	FS - SOUND SYS. JCT PANEL GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R E	RADIO &CTRL HEAD CHASSIS GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN - GND RELAY
0 S 2	SOUND SYSTEM RADIO GRD
0 S 3	SOUND SYSTEM VIDEO GRD
0 S S	SOUNS SYSTEM BATT. GRD
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS FR JCT BOX CPT GRD STUD
0 Z	RR JCT BOX CPT GRD STUD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 A	A/C & HEAT SYSTEM-COOL 1 SIGN
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 H	A/C & HEAT SYSTEM-HI PRESS SW
2 H L	A/C & HEAT SYSTEM-LO & HI PRESS SW
2 L	A/C & HEAT SYSTEM-LO PRESS SW
4	HOSTESS & PASSENGER CHIME
4 A	HOSTESS & PASSENGER CHIME
4 B	PASSENGER CHIME
4 C	HOSTESS CHIME
5	INTERIOR LTS-AISLE & EMERG. EXIT
5	UPPER WINDSHIELD DEFROSTER

CIRCUIT NUMBER CODE

No.	DESCRIPTION
5 D	UPPER WINDSHIELD DEFROSTER
5 E	UPPER WINDSHIELD DEFROSTER
5 N	INTERIOR LTS-EMERGENCY EXIT
5 NC	SPEED SIGNAL LOWER 5MPH
5 NO	SPEED SIGNAL HIGHER 5MPH
6	INTERIOR LTS-AISLE
7 B	ENTRANCE DOOR (SEDAN)
7 D	ENTRANCE DOOR (SEDAN)
7 DA	ENTRANCE DOOR (SEDAN)
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
10	INTERIOR LTS-LUGGAGE CPT
10 A	INTERIOR LTS-LUGGAGE CPT
10 B	INTERIOR LTS-LUGGAGE CPT
10 D	INTERIOR LTS-LUGGAGE CPT
10 F	INTERIOR LTS-LUGGAGE CPT
10 H	INTERIOR LTS-LUGGAGE CPT
10 K	INTERIOR LTS-LUGGAGE CPT
10 R	INTERIOR LTS-LUGGAGE DOOR AJAR
11	FR DESTINATION SIGN
11 A	FR DESTINATION SIGN
11 B	FR DESTINATION SIGN
11 C	FR DESTINATION SIGN
11 D	FR DESTINATION SIGN
11 E	FR DESTINATION SIGN
11 K	FR DESTINATION SIGN
12	12V BAT ELECTRONIC JCT BLOCK
12	BAT CPT 12V BATTERY
12 A	FR JCT BOX 12V DISC SW
12 A	RR JCT BOX 12V DISC SW
12 B	12V BAT ELECTRICAL JCT BLOCK
12 B	RR JCT BOX 12V DISC SW
12 B	FR JCT BOX 12V DISC SW
12 BE	BAT. EQUALIZER MONITOR
12 C	FR JCT BOX 12V DISC SW
12 C	RR JCT BOX 12V DISC SW
12 D	BAT CPT 12V BATTERY
12 DT	TTLT MODULE
12 E	FR JCT BOX 12V DISC SW
12 E	RR JCT BOX 12V DISC SW
12 F	BAT CPT 12V FJB & IC
12 F	FR JCT BOX 12V DISC SW
12 F	RR JCT BOX 12V DISC SW
12 G	FR JCT BOX 12V DISC SW
12 J	FR JCT BOX 12V DISC SW
12 I	12V IGNITION DISTRIBUTION
12 I	RR JCT BOX 12V IGNITION
12 K	12 VOLT IGN. TTLT & HVAC MODULE
12 IA	12V IGNITION DISTRIBUTION
12 IA	FR JCT BOX 12V IGNITION
12 IB	FR JCT BOX 12V IGNITION
12 IF	FR JCT BOX 12V IGNITION
12 LX	CLUSTER
12 P	LH CONSOLE POWER OUTLET
12 R	BAT CPT 12V DISC RLY TO RJB
12 R	MEMORY BATTERY RADIO
12 S	SOUND SYSTEM 12V RADIO
12 S1	SOUND SYSTEM 12V RADIO
12 S2	SOUND SYSTEM 12V RADIO
12 SB	SOUND SYSTEM 12V FEEDING
12 SS	SOUND SYSTEM 12V FEEDING
12 VA	BATTERY TO EQUALIZER 12V
12 VD	12V HOT WIRE DISTRIBUTION
12 VF	BAT CPT 12V FJB & IC
12 VI	12V IGNITION DISTRIBUTION
12 VR	BAT CPT 12V DISC RLY TO RJB
12 W	12V BATTERY DDEC III
12 W	ENTRANCE DOOR (SEDAN)
12 WA	ENTRANCE DOOR (SEDAN)
12 X	FR JCT BOX 12V DISC SW
12 X2	FR JCT BOX 12V DISC SW
12 Y	FR JCT BOX 12V DISC SW
13 A	ALARM & SIGNAL-LO AIR PRIM.
13 B	ALARM & SIGNAL-LO AIR SEC.
14	LAVATORY-FLUSHING PUMP
14 A	LAVATORY-FLUSHING PUMP
15	EXTERIOR LTS-MULTI FUNC LEVEL
15 A	WIPER & WASHER UPPER WINDSHIELD
16	SPEED - SIGNAL +
16 A	SPEED - SIGNAL +
16 T	SPEED - SIGNAL +
17	EXTERIOR LTS-FLASHER UNIT
17 A	EXTERIOR LTS-FLASHER UNIT
19	DIFFERENTIAL OIL TEMP
20	SPEED - SIGNAL -
20 T	SPEED - SIGNAL -
20 W	SPEED - SIGNAL -
21	EXTERIOR LTS-DIRECTIONNAL LH
21 A	EXTERIOR LTS-DIRECTIONNAL LH
21 B	EXTERIOR LTS-HAZARD
21 C	EXTERIOR LTS-CORNERING LH
21 H	EXTERIOR LTS-DIRECTIONNAL LH
21 K	EXTERIOR LTS-CORNERING
21 N	EXTERIOR LTS-CORNERING LH
21 P	EXTERIOR LTS-CORNERING LH
23	EXTERIOR LTS-DIRECTIONNAL RH
23	EXTERIOR LTS-DIRECTIONNAL RH
23 A	EXTERIOR LTS-DIRECTIONNAL RH
23 B	EXTERIOR LTS-DIRECTIONNAL RH
23 C	EXTERIOR LTS-CORNERING RH
23 N	EXTERIOR LTS-CORNERING RH
23 P	EXTERIOR LTS-CORNERING RH
24	BAT CPT 24V BATTERY
24	FR JCT BOX 24V DISC SW
24 A	BOOSTER BLOCK 24V DISC SW
24 A	FR JCT BOX 24V DISC SW
24 A	RR JCT BOX 24V DISC SW
24 B	24V STARTER RLY FEEDING
24 B	FR JCT BOX 24V DISC SW
24 B	RR JCT BOX 24V DISC SW
24 BC	24 VOLT BATT. CHARGER
24 BE	RJB CPT-BAT EQ MONITOR HOT WIRE
24 C	FR JCT BOX 24V DISC SW
24 C	RR JCT BOX 24V DISC SW
24 D	BAT CPT 24V HOT WIRE
24 D	FR JCT BOX 24V HOT WIRE
24 D	RR JCT BOX 24V HOT WIRE
24 DA	A/C JCT BOX 24V HOT WIRE
24 E	BAT CPT 24V DISC SW
24 E	FR JCT BOX 24V DISC SW
24 E	RR JCT BOX 24V DISC SW
24 F	FR JCT BOX 24V DISC SW
24 F	RR JCT BOX 24V DISC SW
24 G	FR JCT BOX 24V DISC SW
24 G	RR JCT BOX 24V DISC SW
24 H	FR JCT BOX 24V DISC SW
24 H	RR JCT BOX 24V DISC SW
24 I	FR JCT BOX 24V IGNITION
24 I	RR JCT BOX 24V IGNITION
24 IA	FR JCT BOX 24V IGNITION
24 IA	RR JCT BOX 24V IGNITION
24 IB	FR JCT BOX 24V IGNITION
24 IB	RR JCT BOX 24V IGNITION
24 IC	FR JCT BOX 24V IGNITION
24 IF	FJB 24VOLT IGNITION
24 P	FR JCT BOX 24V DISC SW
24 S	24V DISC SW RLY SIGNAL
24 S1	SOUND SYSTEM 24V AMPLIFIER
24 S2	SOUND SYSTEM 24V AMPLIFIER
24 S3	SOUND SYSTEM 24V VIDEO
24 S4	SOUND SYSTEM 24V VIDEO
24 SB	SOUND SYSTEM 24V FEEDING
24 SS	SOUND SYSTEM 24V FEEDING
24 T	RR JCT BOX 24V DISC SW
24 V2	RR JCT BOX 24V DISC SW
24 V3	RR JCT BOX 24V DISC SW
24 V4	RR JCT BOX 24V DISC SW
24 V5	RR JCT BOX 24V DISC SW
24 VD	24V HOT WIRE DISTRIBUTION
24 VF	BAT CPT 24V SW TO FJB & IC
24 VA	BATTERY TO EQUALIZER 24V
24 VI	RR JCT BOX 24V IGNITION
24 VR	BAT CPT 24V DISC SW TO RJB
24 W	RR JCT BOX 24V DISC SW (WCL)
24 WC	BATT.CPT TO HYD. PUMP (WCL)
24 WL	24V BATTERY-HYD. PUMP (WCL)
25	12VAC GEN RLY ON SIGNAL
25	12VAC GEN RLY ON SIGNAL
25 A	NOT GENERATOR-WARNING LT
25 A	ETHER SWITCH
25 B	EXTERIOR LTS-DAYTIME RUN LTS
25 F	12 VOLT IGN. DISTRIBUTION
26 A	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26 B	DRIVER'S WINDOW LIFTER
26 C	DRIVER'S WINDOW LIFTER
27	LAVATORY-EMERGENCY SONALERT
28 A	A/C & HEAT SYSTEM-HI PRESSURE
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29 A	A/C & HEAT SYSTEM-DRIVER'S HTR
29 B	A/C & HEAT SYSTEM-DRIVER'S HTR
29 H	HVAC DASH MODULE
30 A	GALLEY
31 A	A/C & HEAT SYSTEM-UNLOADER
31 B	A/C & HEAT SYSTEM-UNLOADER
31 B	WIPER & WASHER SYSTEM
31 C	WIPER & WASHER SYSTEM
31 D	WIPER & WASHER SYSTEM
31 E	WIPER & WASHER SYSTEM
31 J	WIPER & WASHER SYSTEM
31 X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32 B	EXTERIOR LTS-BACK-UP
32 C	BACK-UP PWR & SIGNAL
32 D	BACK-UP ALARM
35	ENTRANCE DOOR (SEDAN)
35 B	ENTRANCE DOOR (SEDAN)
35 BB	ENTRANCE DOOR (SEDAN)
35 D	ENTRANCE DOOR (SEDAN)
36	JACOB BRAKE SYSREM
36 A	JACOB BRAKE SYSREM
38	INTERIOR LTS-24V FLUORESCENT
38 A	INTERIOR LTS-24V FLUORESCENT
38 C	INTERIOR LTS-24V FLUORESCENT
38 D	INTERIOR LTS-24V FLUORESCENT
39	INTERIOR LTS-24V LH CONSOLE SW
39 A	INTERIOR LTS-DRIVER"S LTS

CIRCUIT NUMBER CODE

No.	DESCRIPTION
39P	READING LIGHTS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
43	A/C & HEAT SYSTEM-COND FAN MOT
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45B	A/C & HEAT SYSTEM-HEAT SIGN
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
48	ENTRANCE DOOR (SEDAN)
48A	ENTRANCE DOOR (SEDAN)
49	ENTRANCE DOOR (SEDAN)
49A	ENTRANCE DOOR (SEDAN)
50	AIR DRYER
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL- AIR HORN
52C	ALARM & SIGNAL- AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
57CA	A/C & HEAT SYSTEM-HEAT SIGN
57CC	A/C & HEAT SYSTEM-HEAT SIGN
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58E	EXTERIOR LTS-LO BEAM

No.	DESCRIPTION
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
62	LAVATORY-OCCUPIED LT
62A	LAVATORY-FLUOR LT
62B	LAVATORY-FLUOR LT
62E	LAVATORY-OCCUP & FLUOR LT
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVERS FAN
64B	DRIVERS FAN
64C	DRIVERS FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65P	PASSENGER REC. DAMPER
65D	DRIVER REC. DAMPER
66	O_PASS. ON/OFF
67	24 VOLT RUN DISTRIBUTION
67A	A/C & HEAT SYSTEM
67B	A/C & HEAT SYSTEM
67C	HEATING WINDSHIELD
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67V	A/C & HEAT SYSTEM-WATER VALVE
68	DASH & DEFROST DAMPER MOTOR
68A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH
72C	SUN VISOR-LH
72D	SUN VISOR-LH
73	LAVATORY-FEEDING
74	INTERIOR LTS-READING RH
74A	INTERIOR LTS-READING RH
74D	INTERIOR LTS-READING SIGNAL
75	INTERIOR LTS-READING LH
75A	INTERIOR LTS-READING LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77	A/C & HEAT SYSTEM-HI PRESSURE

No.	DESCRIPTION
77A	A/C & HEAT SYSTEM-DRIVER'S HTR
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85W	24V IGN ANTI SKID
85X	24V IGN ANTI SKID
85Y	ANTI SKID-WARNING LT
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
90J	A/C & HEAT SYSTEM-COND FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
100	INTERIOR LTS-GENERAL
100A	INTERIOR LTS-GENERAL
100B	INTERIOR LTS-GENERAL
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	24V STARTER TO GENERATOR
102	WORLD TRANSM-SOL. GRD 1
102	WORLD TRANSM-SOL. C3
103	LOW BUOY

No.	DESCRIPTION
104	WORLD TRANSM-SOL. FORWARD
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	CHARG SYST-VOLTAGE REGUL. "F"
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125	GALLEY LAMP
125T	GALLEY LAMP
125W	WORLD TRANSM-RET. INDICATOR
126	KNEELING SYSTEM
126A	KNEELING SYSTEM
126B	KNEELING SYSTEM
126C	KNEELING SYSTEM

CIRCUIT NUMBER CODE

No.	DESCRIPTION
126D	KNEELING SYSTEM
126E	KNEELING SYSTEM
126F	KNEELING SYSTEM
126G	KNEELING SYSTEM
126H	KNEELING SYSTEM
126K	KNEELING SYSTEM
126P	KNEELING SYSTEM
126R	KNEELING SYSTEM
126W	5 MPH N.C. SIGNAL (WCL)
126S	KNEELING SYSTEM
126T	KNEELING SYSTEM
127	WORLD TRANSM-LUBE PRESS SW.
127	PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
127B	PRE-HEAT WATER HEATER
127	WORLD TRANSM-RETARDER FEED SOL.
127S	PRE-HEAT WATER HEATER
127W	PRE-HEAT WATER HEATER
128	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT WATER HEATER
128W	PRE-HEAT WATER HEATER
128	WORLD TRANSM-SOL. C2
129	PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	GALLEY-HEAT CONTAINERS
133A	GALLEY-HEAT CONTAINERS
133B	GALLEY-HEAT CONTAINERS
133C	GALLEY-HEAT CONTAINERS
133	WORLD TRANSM-RET. ACTUATOR HI
134	GALLEY-HEAT CONTAINERS
134A	GALLEY-HEAT CONTAINERS
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135A	A/C & HEAT SYSTEM-AIR SENSOR
135D	A/C & HEAT SYSTEM-AIR SENSOR
135C	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	GALLEY-ACCESSORIES
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
143X	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	ETHER COLD START
147	WORLD TRANSM-OIL TEMP
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
151A	ABS SYSTEM
152	ABS SYSTEM
152A	ABS SYSTEM
153	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	ABS SYSTEM
155	WORLD TRANSM-SPARE INPUT (-)
156	ABS SYSTEM
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157A	ABS SYSTEM
157B	ABS SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
165A	A/C & HEAT SYSTEM-TRANSMITER
165B	A/C & HEAT SYSTEM-TRANSMITER
165C	A/C & HEAT SYSTEM-TRANSMITER
165D	A/C & HEAT SYSTEM-TRANSMITER
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	A/C & HEAT SYSTEM-TEMP. CTR
167A	A/C & HEAT SYSTEM-TEMP. CTR
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170	LUGGAGE DOOR LOCK
170C	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
225	LAVATORY FAN
225A	LAVATORY FAN
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251A	DDEC III - DATA LOGGER 12 H.W.
251	DDEC III - PRODRIVER 12V H.W.
253	GALLEY-MICROWAVE
254	GALLEY-12V FRIGO NORCOLD
254A	GALLEY-FRIGO
255	GALLEY-COFEEMAKER
255A	GALLEY-COFEEMAKER
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
260	WINDOW AJAR
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
292	FAN CLUTCH RADIATOR SPD 2
300	DOOR AJAR MAGN.SW. (WCL)
300A	POWER SYSTEM SW. (WCL)
300B	DOOR AJAR ALARM (WCL)
301	POWER SYSTEM SW. (WCL)
302	DOOR AJAR T.T.LT. (WCL)
302A	DOOR AJAR ALARM SIGN.(WCL)
302B	DOOR AJAR MAGN.SW. (WCL)
303	REMOTE WALL SW. DWN (WCL)
304	REMOTE WALL SW. UP (WCL)
305	PARK. BRAKE SOL. VALVE (WCL)
305A	PARK. BRAKE SAFETY SW. (WCL)
306	CONTROL SYSTEM (WCL RICON)
307	CONTROL SYSTEM (WCL RICON)
308	CONTROL SYSTEM (WCL RICON)
309	CONTROL SYSTEM (WCL RICON)
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION

CIRCUIT NUMBER CODE

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
451	DDEC III-A/C FAN CLUTCH						
505	DDEC III-TACHOMETER DRIVE						
509	DDEC III-STOP ENGINE LIGHT						
510	DDEC III-FAST IDLE SIGNAL						
524	DDEC III-ENGINE BRAKE DISABLE						
525	DDEC III-FAST IDLE SIGNAL						
528	DDEC III-STOP ENG. OVERRIDE						
531	DDEC III-CRUISE CLUTCH RELEASE						
540	DDEC III-CRUISE ENABLE LTS.						
541	DDEC III-CRUISE SET SW						
543	DDEC III-CRUISE STOP SW CUT IN						
544	DDEC III-CRUISE ON/OFF SW						
545	DDEC III-CRUISE RESUME SW						
555	DDEC III-FAN CLUTCH SPEED# 1						
556	DDEC III-VEHICLE SPEED (+)						
557	DDEC III-VEHICLE SPEED (-)						
563	DDEC III-FAN CLUTCH SPEED# 2						
564	DDEC III-DIGITAL OUTPUT						
565	DDEC III-ENGINE BRAKE ACTIVE						
583	DDEC III-ENGINE BRAKE 4 CYL.						
900	DDEC III-DATA LINK (+)						
901	DDEC III-DATA LINK (-)						
908	DDEC III-HYDRAULIC PWM#1 OUTPUT						
916	DDEC III-SENSOR SUPPLY (5VDC)						
952	DDEC III-SENSOR RETURN						
953	DDEC III-BATTERY GRD						
979	DDEC III-ENGINE BRAKE 2 CYL.						

CIRCUIT NUMBER CODE

No.	DESCRIPTION
B A	INTERIOR LTS-110V FLUORESCENT
B B	INTERIOR LTS-110V FLUORESCENT
D 1	SOUND SYSTEM-FR RH SPEAKER
D 2	SOUND SYSTEM-FR RH SPEAKER
D 3	SOUND SYSTEM-FR RH SPEAKER
D 4	SOUND SYSTEM-RR RH SPEAKER
D 5	SOUND SYSTEM-RR RH SPEAKER
D 6	SOUND SYSTEM-RR RH SPEAKER
D 7	SOUND SYSTEM-RR RH SPEAKER
D 8	SOUND SYSTEM-RR RH SPEAKER
D 3 4	SOUND SYSTEM-RR RH SPEAKER
D 6 7	SOUND SYSTEM-RR RH SPEAKER
G 1	SOUND SYSTEM-FR LH SPEAKER
G 2	SOUND SYSTEM-FR LH SPEAKER
G 3	SOUND SYSTEM-FR LH SPEAKER
G 4	SOUND SYSTEM-RR LH SPEAKER
G 5	SOUND SYSTEM-RR LH SPEAKER
G 6	SOUND SYSTEM-RR LH SPEAKER
G 7	SOUND SYSTEM-RR LH SPEAKER
G 8	SOUND SYSTEM-RR LH SPEAKER
G 3 4	SOUND SYSTEM-RR LH SPEAKER
G 6 7	SOUND SYSTEM-RR LH SPEAKER
L 1 A	INTERIOR LTS-110V FLUORESCENT
L 1 B	INTERIOR LTS-110V FLUORESCENT
L 2 A	INTERIOR LTS-110V FLUORESCENT
L 2 B	INTERIOR LTS-110V FLUORESCENT
L 8	ENG. BLK & WATER TANK-HEATER
L 9	ENG. BLK & WATER TANK-HEATER
L 0	110V RECEPTACLE- 110V FLUOR.
L 1	110V RECEPTACLE- 110V FLUOR.
L 2	110V RECEPTACLE- 110V FLUOR.
R A	INTERIOR LTS-110V FLUORESCENT
R B	INTERIOR LTS-110V FLUORESCENT
S H 1	SHIELD CHASSIS GRD
S H 2	SHIELD CHASSIS GRD
S H 3	SHIELD CHASSIS GRD
S H 4	SHIELD CHASSIS GRD
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 10	SPARE-RJB TO LUGG CPT #1
S P 11	SPARE-FJB TO RJB
S P 12	SPARE-RJB TO ENGINE
S P 13	SPARE-RJB TO ENGINE
S P 14	SPARE-FJB TO RJB
S P 15	SPARE-RJB TO ENGINE
S P 16	SPARE-RJB TO ENGINE
S P 17	SPARE-RJB TO ENGINE
S P 18	SPARE-FJB TO RJB
S P 24	SPARE-RJB TO LAVATORY ROOF
S P 25	SPARE-RJB TO LAVATORY ROOF
S P 26	SPARE-RJB TO LAVATORY ROOF
S P 27	SPARE-RJB TO LH HAT RACK
S P 28	SPARE-RJB TO LH HAT RACK
S P 31	SPARE-RJB TO RH HAT RACK
S P 32	SPARE-RJB TO RH HAT RACK
S P 33	SPARE-FJB TO RJB
S P 38	SPARE-FJB TO RJB
S P 43	SPARE-FJB TO RJB
S P 45	SPARE-FJB TO RJB
S P 46	SPARE-RJB TO LH FR ROOF
S P 48	SPARE-RJB TO DASH CENTER PANEL
S P 56	SPARE-ENGINE TO RH SW PANEL
S P 57	SPARE-DASH CENTER PANEL TO ENG.
S P 58	SPARE-DASH CENTER PANEL TO ENG.
S P 59	SPARE-FJB TO ENGINE
S P 61	SPARE-FJB TO DASH RH PANEL
S P 68	SPARE-FJB TO ENGINE
S P 69	SPARE-FJB TO FR AXLE
S P 70	SPARE-FJB TO FR AXLE
S P 71	SPARE-FJB TO RH SW PANEL
S P 72	SPARE-FJB TO FR SERV CPT
S P 74	SPARE-FJB TO LH CONSOLE
S P 77	SPARE-FJB TO EVAPORATOR CPT
S P 78	SPARE-FJB TO CONDENSER CPT
S P 79	SPARE-FJB TO CONDENSER CPT
S P 87	SPARE-RJB TO LH HAT RACK
S P 88	SPARE-RJB TO RH HAT RACK
S P 92	SPARE-RJB TO CONDENSER CPT
S P 93	SPARE-RJB TO EVAPORATOR CPT
S P 94	SPARE-RJB TO RR ROOF
S P 95	SPARE-RJB TO RR ROOF
S P 96	SPARE-RJB TO LUGG CPT #2
S P 97	SPARE-RJB TO LUGG CPT #3
S P 98	SPARE-RJB TO LUGG CPT #3
S P 104	SPARE-RJB TO ENGINE CPT
S P 105	SPARE-FJB TO ENGINE
S P 106	SPARE-RJB TO BATT. CPT.
S P 107	SPARE-RJB TO BATT. CPT.
S P 108	SPARE-RJB TO BATT. CPT.
S P 109	SPARE-RJB TO ENGINE CPT.
S P 110	SPARE-RJB TO ENGINE CPT.
S P 111	SPARE-RJB TO ENGINE CPT.
S P 112	SPARE-RJB TO ENGINE CPT.
S P 114	SPARE-FJB TO U/DASH WIPER
S P 115	SPARE-FJB TO U/DASH WIPER
S P 116	SPARE-FJB TO U/DASH FLOOR
S P 117	SPARE-FJB TO U/DASH FLOOR
W C	A/C & HEAT SYST-EVAP CTR SIGN
Y C	INTERIOR LTS-110V FLUORESCENT
Y D	INTERIOR LTS-110V FLUORESCENT
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0	GALLEY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A A	RS - VOLTAGE REGULATOR GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 E	RS - HAT RACK ACCES. LH GRD
0 E A	EATON TRANSMISSION GRD
0 F	RS - HAT RACK ACCES. RH GRD
0 G	RS - HAT RACK ACCES. RH GRD
0 H	RS - LAVATORY ACCES. GRD
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR (SEDAN) GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	FS - SOUND SYS. JCT PANEL GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R E	RADIO &CTRL HEAD CHASSIS GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN - GND RELAY
0 S 2	SOUND SYSTEM RADIO GRD
0 S 3	SOUND SYSTEM VIDEO GRD
0 S S	SOUNS SYSTEM BATT. GRD
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS FR JCT BOX CPT GRD STUD
0 Z	RR JCT BOX CPT GRD STUD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 A	A/C & HEAT SYSTEM-COOL 1 SIGN
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 B B	A/C & HEAT SYSTEM-COOL SIGN
2 H	A/C & HEAT SYSTEM-HI PRESS SW
2 H L	A/C & HEAT SYSTEM-LO & HI PRESS SW
2 L	A/C & HEAT SYSTEM-LO PRESS SW
4	HOSTESS & PASSENGER CHIME
4 A	HOSTESS & PASSENGER CHIME
4 B	PASSENGER CHIME
4 C	HOSTESS CHIME

CIRCUIT NUMBER CODE

No.	DESCRIPTION
5	INTERIOR LTS-AISLE & EMERG. EXIT
5	UPPER WINDSHIELD DEFROSTER
5 D	UPPER WINDSHIELD DEFROSTER
5 E	UPPER WINDSHIELD DEFROSTER
5 N	INTERIOR LTS-EMERGENCY EXIT
5 NC	SPEED SIGNAL LOWER 5MPH
5 NO	SPEED SIGNAL HIGHER 5MPH
6	INTERIOR LTS-AISLE
7 B	ENTRANCE DOOR (SEDAN)
7 D	ENTRANCE DOOR (SEDAN)
7 DA	ENTRANCE DOOR (SEDAN)
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
10	INTERIOR LTS-LUGGAGE CPT
10 A	INTERIOR LTS-LUGGAGE CPT
10 B	INTERIOR LTS-LUGGAGE CPT
10 D	INTERIOR LTS-LUGGAGE CPT
10 F	INTERIOR LTS-LUGGAGE CPT
10 H	INTERIOR LTS-LUGGAGE CPT
10 K	INTERIOR LTS-LUGGAGE CPT
10 R	INTERIOR LTS-LUGGAGE DOOR AJAR
11	FR DESTINATION SIGN
11 A	FR DESTINATION SIGN
11 B	FR DESTINATION SIGN
11 C	FR DESTINATION SIGN
11 D	FR DESTINATION SIGN
11 E	FR DESTINATION SIGN
11 K	FR DESTINATION SIGN
12	12V BAT ELECTRONIC JCT BLOCK
12	BAT CPT 12V BATTERY
12 A	FR JCT BOX 12V DISC SW
12 A	RR JCT BOX 12V DISC SW
12 B	12V BAT ELECTRICAL JCT BLOCK
12 B	RR JCT BOX 12V DISC SW
12 B	FR JCT BOX 12V DISC SW
12 BE	BAT. EQUALIZER MONITOR
12 C	FR JCT BOX 12V DISC SW
12 C	RR JCT BOX 12V HOT WIRE
12 CE	RR JCT BOX 12V HOT WIRE
12 D	BAT CPT 12V BATTERY
12 DT	TTLT MODULE
12 E	FR JCT BOX 12V DISC SW
12 E	RR JCT BOX 12V DISC SW
12 F	BAT CPT 12V FJB & IC
12 F	FR JCT BOX 12V DISC SW
12 F	RR JCT BOX 12V DISC SW
12 G	FR JCT BOX 12V DISC SW
12 J	FR JCT BOX 12V DISC SW
12 I	12V IGNITION DISTRIBUTION
12 I	RR JCT BOX 12V IGNITION
12 K	12 VOLT IGN. TTLT & HVAC MODULE
12 IA	12V IGNITION DISTRIBUTION
12 IA	FR JCT BOX 12V IGNITION
12 IB	FR JCT BOX 12V IGNITION
12 IF	FR JCT BOX 12V IGNITION
12 LX	CLUSTER (12V HOT WIRE)
12 P	LH CONSOLE POWER OUTLET
12 R	BAT CPT 12V DISC RLY TO RJB
12 R	MEMORY BATTERY RADIO
12 S	SOUND SYSTEM 12V RADIO
12 S1	SOUND SYSTEM 12V RADIO
12 S2	SOUND SYSTEM 12V RADIO
12 SB	SOUND SYSTEM 12V FEEDING
12 SS	SOUND SYSTEM 12V FEEDING
12 VA	BATTERY TO EQUALIZER 12V
12 VD	12V HOT WIRE DISTRIBUTION
12 VF	BAT CPT 12V FJB & IC
12 VI	12V IGNITION DISTRIBUTION
12 VR	BAT CPT 12V DISC RLY TO RJB
12 W	12V BATTERY DDEC III
12 W	ENTRANCE DOOR (SEDAN)
12 WA	ENTRANCE DOOR (SEDAN)
12 X	FR JCT BOX 12V DISC SW
12 X2	FR JCT BOX 12V DISC SW
12 Y	FR JCT BOX 12V DISC SW
13 A	ALARM & SIGNAL-LO AIR PRIM.
13 B	ALARM & SIGNAL-LO AIR SEC.
14	LAVATORY-FLUSHING PUMP
14 A	LAVATORY-FLUSHING PUMP
15	EXTERIOR LTS-MULTI FUNC LEVEL
15 A	WIPER & WASHER UPPER WINDSHIELD
16	SPEED - SIGNAL +
16 A	SPEED - SIGNAL +
16 T	SPEED - SIGNAL +
17	EXTERIOR LTS-FLASHER UNIT
17 A	EXTERIOR LTS-FLASHER UNIT
19	DIFFERENTIAL OIL TEMP
20	SPEED - SIGNAL -
20 T	SPEED - SIGNAL -
20 W	SPEED - SIGNAL -
21	EXTERIOR LTS-DIRECTIONNAL LH
21 A	EXTERIOR LTS-DIRECTIONNAL LH
21 B	EXTERIOR LTS-HAZARD
21 C	EXTERIOR LTS-CORNERING LH
21 H	EXTERIOR LTS-DIRECTIONNAL LH
21 K	EXTERIOR LTS-CORNERING
21 N	EXTERIOR LTS-CORNERING LH
21 P	EXTERIOR LTS-CORNERING LH
23	EXTERIOR LTS-DIRECTIONNAL RH
23	EXTERIOR LTS-DIRECTIONNAL RH
23 A	EXTERIOR LTS-DIRECTIONNAL RH
23 B	EXTERIOR LTS-DIRECTIONNAL RH
23 C	EXTERIOR LTS-CORNERING RH
23 N	EXTERIOR LTS-CORNERING RH
23 P	EXTERIOR LTS-CORNERING RH
24	BAT CPT 24V BATTERY
24	FR JCT BOX 24V DISC SW
24 A	BOOSTER BLOCK 24V DISC SW
24 A	FR JCT BOX 24V DISC SW
24 A	RR JCT BOX 24V DISC SW
24 B	24V STARTER RLY FEEDING
24 B	FR JCT BOX 24V DISC SW
24 B	RR JCT BOX 24V DISC SW
24 BC	24 VOLT BATT. CHARGER
24 BE	RJB CPT-BAT EQ MONITOR HOT WIRE
24 C	FR JCT BOX 24V DISC SW
24 C	RR JCT BOX 24V DISC SW
24 D	BAT CPT 24V HOT WIRE
24 D	FR JCT BOX 24V HOT WIRE
24 D	RR JCT BOX 24V HOT WIRE
24 DA	A/C JCT BOX 24V HOT WIRE
24 E	BAT CPT 24V DISC SW
24 E	FR JCT BOX 24V DISC SW
24 E	RR JCT BOX 24V DISC SW
24 F	FR JCT BOX 24V DISC SW
24 F	RR JCT BOX 24V DISC SW
24 G	FR JCT BOX 24V DISC SW
24 G	RR JCT BOX 24V DISC SW
24 H	FR JCT BOX 24V DISC SW
24 H	RR JCT BOX 24V DISC SW
24 I	FR JCT BOX 24V IGNITION
24 I	RR JCT BOX 24V IGNITION
24 IA	FR JCT BOX 24V IGNITION
24 IA	RR JCT BOX 24V IGNITION
24 IB	FR JCT BOX 24V IGNITION
24 IB	RR JCT BOX 24V IGNITION
24 IC	FR JCT BOX 24V IGNITION
24 IF	FJB 24VOLT IGNITION
24 P	FR JCT BOX 24V DISC SW
24 S	24V DISC SW RLY SIGNAL
24 S1	SOUND SYSTEM 24V AMPLIFIER
24 S2	SOUND SYSTEM 24V AMPLIFIER
24 S3	SOUND SYSTEM 24V VIDEO
24 S4	SOUND SYSTEM 24V VIDEO
24 SB	SOUND SYSTEM 24V FEEDING
24 SS	SOUND SYSTEM 24V FEEDING
24 T	RR JCT BOX 24V DISC SW
24 V2	RR JCT BOX 24V DISC SW
24 V3	RR JCT BOX 24V DISC SW
24 V4	RR JCT BOX 24V DISC SW
24 V5	RR JCT BOX 24V DISC SW
24 VD	24V HOT WIRE DISTRIBUTION
24 VF	BAT CPT 24V SW TO FJB & IC
24 VA	BATTERY TO EQUALIZER 24V
24 VI	RR JCT BOX 24V IGNITION
24 VR	BAT CPT 24V DISC SW TO RJB
24 W	RR JCT BOX 24V DISC SW (WCL)
24 WC	BATT.CPT TO HYD. PUMP (WCL)
24 WL	24V BATTERY-HYD. PUMP (WCL)
25	12VAC GEN RLY ON SIGNAL
25	12VAC GEN RLY ON SIGNAL
25 A	NOT GENERATOR-WARNING LT
25 A	ETHER SWITCH
25 B	EXTERIOR LTS-DAYTIME RUN LTS
25 F	12 VOLT IGN. DISTRIBUTION
26 A	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26 B	DRIVER'S WINDOW LIFTER
26 C	DRIVER'S WINDOW LIFTER
27	LAVATORY-EMERGENCY SONALERT
28 A	A/C & HEAT SYSTEM-HI PRESSURE
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29 A	A/C & HEAT SYSTEM-DRIVER'S HTR
29 B	A/C & HEAT SYSTEM-DRIVER'S HTR
29 H	HVAC DASH MODULE
30 A	GALLEY
31 A	A/C & HEAT SYSTEM-UNLOADER
31 B	A/C & HEAT SYSTEM-UNLOADER
31 B	WIPER & WASHER SYSTEM
31 C	WIPER & WASHER SYSTEM
31 D	WIPER & WASHER SYSTEM
31 E	WIPER & WASHER SYSTEM
31 J	WIPER & WASHER SYSTEM
31 X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32 B	EXTERIOR LTS-BACK-UP
32 C	BACK-UP PWR & SIGNAL
32 D	BACK-UP ALARM
35	ENTRANCE DOOR (SEDAN)
35 B	ENTRANCE DOOR (SEDAN)
35 BB	ENTRANCE DOOR (SEDAN)
35 D	ENTRANCE DOOR (SEDAN)
36	JACOB BRAKE SYSREM
36 A	JACOB BRAKE SYSREM
38	INTERIOR LTS-24V FLUORESCENT
38 A	INTERIOR LTS-24V FLUORESCENT
38 C	INTERIOR LTS-24V FLUORESCENT

CIRCUIT NUMBER CODE

No.	DESCRIPTION
38D	INTERIOR LTS-24V FLUORESCENT
39	INTERIOR LTS-24V LH CONSOLE SW
39A	INTERIOR LTS-DRIVER"S LTS
39P	READING LIGHTS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
43	A/C & HEAT SYSTEM-COND FAN MOT
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45B	A/C & HEAT SYSTEM-HEAT SIGN
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
48	ENTRANCE DOOR (SEDAN)
48A	ENTRANCE DOOR (SEDAN)
49	ENTRANCE DOOR (SEDAN)
49A	ENTRANCE DOOR (SEDAN)
50	AIR DRYER
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL- AIR HORN
52C	ALARM & SIGNAL- AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
57CA	A/C & HEAT SYSTEM-HEAT SIGN
57CC	A/C & HEAT SYSTEM-HEAT SIGN
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
62	LAVATORY-OCCUPIED LT
62A	LAVATORY-FLUOR LT
62B	LAVATORY-FLUOR LT
62E	LAVATORY-OCCUP & FLUOR LT
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVERS FAN
64B	DRIVERS FAN
64C	DRIVERS FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65P	PASSENGER REC. DAMPER
65D	DRIVER REC. DAMPER
66	O_PASS. ON/OFF
67	24 VOLT RUN DISTRIBUTION
67A	A/C & HEAT SYSTEM
67B	A/C & HEAT SYSTEM
67C	HEATING WINDSHIELD
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67V	A/C & HEAT SYSTEM-WATER VALVE
68	DASH & DEFROST DAMPER MOTOR
68A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH
72C	SUN VISOR-LH
72D	SUN VISOR-LH
73	LAVATORY-FEEDING
74	INTERIOR LTS-READING RH
74A	INTERIOR LTS-READING RH
74D	INTERIOR LTS-READING SIGNAL
75	INTERIOR LTS-READING LH
75A	INTERIOR LTS-READING LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77	A/C & HEAT SYSTEM-HI PRESSURE
77A	A/C & HEAT SYSTEM-DRIVER'S HTR
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85W	24V IGN ANTI SKID
85X	24V IGN ANTI SKID
85Y	ANTI SKID-WARNING LT
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
90J	A/C & HEAT SYSTEM-COND FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
100	INTERIOR LTS-GENERAL
100A	INTERIOR LTS-GENERAL
100B	INTERIOR LTS-GENERAL
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	24V STARTER TO GENERATOR
102	WORLD TRANSM-SOL. GRD 1
102	WORLD TRANSM-SOL. C3
103	LOW BUOY
104	WORLD TRANSM-SOL. FORWARD
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	CHARG SYST-VOLTAGE REGUL. "F"
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125	GALLEY LAMP
125T	GALLEY LAMP
125W	WORLD TRANSM-RET. INDICATOR
126	KNEELING SYSTEM

CIRCUIT NUMBER CODE

No.	DESCRIPTION
126A	KNEELING SYSTEM
126B	KNEELING SYSTEM
126C	KNEELING SYSTEM
126D	KNEELING SYSTEM
126E	KNEELING SYSTEM
126F	KNEELING SYSTEM
126G	KNEELING SYSTEM
126H	KNEELING SYSTEM
126K	KNEELING SYSTEM
126P	KNEELING SYSTEM
126R	KNEELING SYSTEM
126W	5 MPH N.C. SIGNAL (WCL)
126S	KNEELING SYSTEM
126T	KNEELING SYSTEM
127	WORLD TRANSM-LUBE PRESS SW.
127	PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
127B	PRE-HEAT WATER HEATER
127	WORLD TRANSM-RETARDER FEED SOL.
127S	PRE-HEAT WATER HEATER
127W	PRE-HEAT WATER HEATER
128	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT WATER HEATER
128W	PRE-HEAT WATER HEATER
128	WORLD TRANSM-SOL. C2
129	PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	GALLEY-HEAT CONTAINERS
133A	GALLEY-HEAT CONTAINERS
133B	GALLEY-HEAT CONTAINERS
133C	GALLEY-HEAT CONTAINERS
133	WORLD TRANSM-RET. ACTUATOR HI
134	GALLEY-HEAT CONTAINERS
134A	GALLEY-HEAT CONTAINERS
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135A	A/C & HEAT SYSTEM-AIR SENSOR
135D	A/C & HEAT SYSTEM-AIR SENSOR
135C	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	GALLEY-ACCESSORIES
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146A	TRANSMISSION-12V IGNITION
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	ETHER COLD START
147	WORLD TRANSM-OIL TEMP
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
151A	ABS SYSTEM
152	ABS SYSTEM
152A	ABS SYSTEM
153	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	ABS SYSTEM
155	WORLD TRANSM-SPARE INPUT (-)
156	ABS SYSTEM
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157A	ABS SYSTEM
157B	ABS SYSTEM
157D	A.T.C. SYSTEM
157E	A.T.C. SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
165A	A/C & HEAT SYSTEM-TRANSMITER
165B	A/C & HEAT SYSTEM-TRANSMITER
165C	A/C & HEAT SYSTEM-TRANSMITER
165D	A/C & HEAT SYSTEM-TRANSMITER
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	A/C & HEAT SYSTEM-TEMP. CTR
167A	A/C & HEAT SYSTEM-TEMP. CTR
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170	LUGGAGE DOOR LOCK
170C	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
225	LAVATORY FAN
225A	LAVATORY FAN
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251A	DDEC III - DATA LOGGER 12 H.W.
251	DDEC III - PRODRIVER 12V H.W.
253	GALLEY-MICROWAVE
254	GALLEY-12V FRIGO NORCOLD
254A	GALLEY-FRIGO
255	GALLEY-COFEEMAKER
255A	GALLEY-COFEEMAKER
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
260	WINDOW AJAR
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
292	FAN CLUTCH RADIATOR SPD 2
300	DOOR AJAR MAGN.SW. (WCL)
300A	POWER SYSTEM SW. (WCL)
300B	DOOR AJAR ALARM (WCL)
301	POWER SYSTEM SW. (WCL)
302	DOOR AJAR T.T.LT. (WCL)
302A	DOOR AJAR ALARM SIGN.(WCL)
302B	DOOR AJAR MAGN.SW. (WCL)
303	REMOTE WALL SW. DWN (WCL)
304	REMOTE WALL SW. UP (WCL)
305	PARK. BRAKE SOL. VALVE (WCL)
305A	PARK. BRAKE SAFETY SW. (WCL)
306	CONTROL SYSTEM (WCL RICON)
307	CONTROL SYSTEM (WCL RICON)
308	CONTROL SYSTEM (WCL RICON)
309	CONTROL SYSTEM (WCL RICON)

CIRCUIT NUMBER CODE

No.	DESCRIPTION
310	EATON TRANSMISSION
311	EATON TRANSMISSION
312	EATON TRANSMISSION
313	EATON TRANSMISSION
314	EATON TRANSMISSION
315	EATON TRANSMISSIOM
316	EATON TRANSMISSION - EPL
317	EATON TRANSMISSION
318	EATON TRANSMISSION
319	EATON TRANSMISSION
320	EATON TRANSMISSION
321	EATON TRANSMISSION
322	EATON TRANSMISSIION
323	EATON TRANSMISSION
324	EATON TRANSMISSION
325	EATON TRANSMISSION
326	EATON TRANSMISSION
327	EATON TRANSMISSION
328	EATON TRANSMISSION
329	EATON TRANSMISSION
330	EATON TRANSMISSION - EPL
331	EATON TRANSMISSION - EPL
332	EATON TRANSMISSION
333	EATON TRANSMISSION - 12V BATTERY
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE
540	DDEC III-CRUISE ENABLE LTS.
541	DDEC III-CRUISE SET SW
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
583	DDEC III-ENGINE BRAKE 4 CYL.
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
925	J1939-HIGH
926	J1939-LOW
927	J1939-SHIELD
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
979	DDEC III-ENGINE BRAKE 2 CYL.

No.	DESCRIPTION

No.	DESCRIPTION

CIRCUIT NUMBER CODE

No.	DESCRIPTION
B A	INTERIOR LTS-110V FLUORESCENT
B B	INTERIOR LTS-110V FLUORESCENT
D 1	SOUND SYSTEM-FR RH SPEAKER
D 2	SOUND SYSTEM-FR RH SPEAKER
D 3	SOUND SYSTEM-FR RH SPEAKER
D 4	SOUND SYSTEM-RR RH SPEAKER
D 5	SOUND SYSTEM-RR RH SPEAKER
D 6	SOUND SYSTEM-RR RH SPEAKER
D 7	SOUND SYSTEM-RR RH SPEAKER
D 8	SOUND SYSTEM-RR RH SPEAKER
D 3 4	SOUND SYSTEM-RR RH SPEAKER
D 6 7	SOUND SYSTEM-RR RH SPEAKER
G 1	SOUND SYSTEM-FR LH SPEAKER
G 2	SOUND SYSTEM-FR LH SPEAKER
G 3	SOUND SYSTEM-FR LH SPEAKER
G 4	SOUND SYSTEM-RR LH SPEAKER
G 5	SOUND SYSTEM-RR LH SPEAKER
G 6	SOUND SYSTEM-RR LH SPEAKER
G 7	SOUND SYSTEM-RR LH SPEAKER
G 8	SOUND SYSTEM-RR LH SPEAKER
G 3 4	SOUND SYSTEM-RR LH SPEAKER
G 6 7	SOUND SYSTEM-RR LH SPEAKER
L 1 A	INTERIOR LTS-110V FLUORESCENT
L 1 B	INTERIOR LTS-110V FLUORESCENT
L 2 A	INTERIOR LTS-110V FLUORESCENT
L 2 B	INTERIOR LTS-110V FLUORESCENT
L 8	ENG. BLK & WATER TANK-HEATER
L 9	ENG. BLK & WATER TANK-HEATER
L 0	110V RECEPTACLE- 110V FLUOR.
L 1	110V RECEPTACLE- 110V FLUOR.
L 2	110V RECEPTACLE- 110V FLUOR.
R A	INTERIOR LTS-110V FLUORESCENT
R B	INTERIOR LTS-110V FLUORESCENT
S H 1	SHIELD CHASSIS GRD
S H 2	SHIELD CHASSIS GRD
S H 3	SHIELD CHASSIS GRD
S H 4	SHIELD CHASSIS GRD
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 10	SPARE-RJB TO LUGG CPT #1
S P 11	SPARE-FJB TO RJB
S P 12	SPARE-RJB TO ENGINE
S P 13	SPARE-RJB TO ENGINE
S P 14	SPARE-FJB TO RJB
S P 15	SPARE-RJB TO ENGINE
S P 16	SPARE-RJB TO ENGINE
S P 17	SPARE-RJB TO ENGINE
S P 18	SPARE-FJB TO RJB
S P 24	SPARE-RJB TO LAVATORY ROOF
S P 25	SPARE-RJB TO LAVATORY ROOF
S P 26	SPARE-RJB TO LAVATORY ROOF
S P 27	SPARE-RJB TO LH HAT RACK
S P 28	SPARE-RJB TO LH HAT RACK
S P 31	SPARE-RJB TO RH HAT RACK
S P 32	SPARE-RJB TO RH HAT RACK
S P 33	SPARE-FJB TO RJB
S P 38	SPARE-FJB TO RJB
S P 43	SPARE-FJB TO RJB
S P 45	SPARE-FJB TO RJB
S P 46	SPARE-RJB TO LH FR ROOF
S P 48	SPARE-RJB TO DASH CENTER PANEL
S P 56	SPARE-ENGINE TO RH SW PANEL
S P 57	SPARE-DASH CENTER PANEL TO ENG.
S P 58	SPARE-DASH CENTER PANEL TO ENG.
S P 59	SPARE-FJB TO ENGINE
S P 61	SPARE-FJB TO DASH RH PANEL
S P 68	SPARE-FJB TO ENGINE
S P 69	SPARE-FJB TO FR AXLE
S P 70	SPARE-FJB TO FR AXLE
S P 71	SPARE-FJB TO RH SW PANEL
S P 72	SPARE-FJB TO FR SERV CPT
S P 74	SPARE-FJB TO LH CONSOLE
S P 77	SPARE-FJB TO EVAPORATOR CPT
S P 78	SPARE-FJB TO CONDENSER CPT
S P 79	SPARE-FJB TO CONDENSER CPT
S P 87	SPARE-RJB TO LH HAT RACK
S P 88	SPARE-RJB TO RH HAT RACK
S P 92	SPARE-RJB TO CONDENSER CPT
S P 93	SPARE-RJB TO EVAPORATOR CPT
S P 94	SPARE-RJB TO RR ROOF
S P 95	SPARE-RJB TO RR ROOF
S P 96	SPARE-RJB TO LUGG CPT #2
S P 97	SPARE-RJB TO LUGG CPT #3
S P 98	SPARE-RJB TO LUGG CPT #3
S P 104	SPARE-RJB TO ENGINE CPT
S P 105	SPARE-FJB TO ENGINE
S P 106	SPARE-RJB TO BATT. CPT.
S P 107	SPARE-RJB TO BATT. CPT.
S P 108	SPARE-RJB TO BATT. CPT.
S P 109	SPARE-RJB TO ENGINE CPT.
S P 110	SPARE-RJB TO ENGINE CPT.
S P 111	SPARE-RJB TO ENGINE CPT.
S P 112	SPARE-RJB TO ENGINE CPT.
S P 114	SPARE-FJB TO U/DASH WIPER
S P 115	SPARE-FJB TO U/DASH WIPER
S P 116	SPARE-FJB TO U/DASH FLOOR
S P 117	SPARE-FJB TO U/DASH FLOOR
W C	A/C & HEAT SYST-EVAP CTR SIGN
Y C	INTERIOR LTS-110V FLUORESCENT
Y D	INTERIOR LTS-110V FLUORESCENT
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0	GALLEY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A A	RS - VOLTAGE REGULATOR GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 E	RS - HAT RACK ACCES. LH GRD
0 E A	EATON TRANSMISSION GRD
0 F	RS - HAT RACK ACCES. RH GRD
0 G	RS - HAT RACK ACCES. RH GRD
0 H	RS - LAVATORY ACCES. GRD
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR (SEDAN) GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	FS - SOUND SYS. JCT PANEL GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R E	RADIO &CTRL HEAD CHASSIS GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN - GND RELAY
0 S A	EC-BOSCH ALT. GROUND
0 S 2	SOUND SYSTEM RADIO GRD
0 S 3	SOUND SYSTEM VIDEO GRD
0 S S	SOUNS SYSTEM BATT. GRD
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS FR JCT BOX CPT GRD STUD
0 Z	RR JCT BOX CPT GRD STUD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 A	A/C & HEAT SYSTEM-COOL 1 SIGN
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 B B	A/C & HEAT SYSTEM-COOL SIGN
2 H	A/C & HEAT SYSTEM-HI PRESS SW
2 H L	A/C & HEAT SYSTEM-LO & HI PRESS SW
2 L	A/C & HEAT SYSTEM-LO PRESS SW
4	HOSTESS & PASSENGER CHIME
4 A	HOSTESS & PASSENGER CHIME
4 B	PASSENGER CHIME

CIRCUIT NUMBER CODE

No.	DESCRIPTION
4 C	HOSTESS CHIME
5	INTERIOR LTS-AISLE & EMERG. EXIT
5	UPPER WINDSHIELD DEFROSTER
5 D	UPPER WINDSHIELD DEFROSTER
5 E	UPPER WINDSHIELD DEFROSTER
5 N	INTERIOR LTS-EMERGENCY EXIT
5 NC	SPEED SIGNAL LOWER 5MPH
5 NO	SPEED SIGNAL HIGHER 5MPH
6	INTERIOR LTS-AISLE
7 B	ENTRANCE DOOR (SEDAN)
7 D	ENTRANCE DOOR (SEDAN)
7 DA	ENTRANCE DOOR (SEDAN)
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
10	INTERIOR LTS-LUGGAGE CPT
10 A	INTERIOR LTS-LUGGAGE CPT
10 B	INTERIOR LTS-LUGGAGE CPT
10 D	INTERIOR LTS-LUGGAGE CPT
10 F	INTERIOR LTS-LUGGAGE CPT
10 H	INTERIOR LTS-LUGGAGE CPT
10 K	INTERIOR LTS-LUGGAGE CPT
10 R	INTERIOR LTS-LUGGAGE DOOR AJAR
11	FR DESTINATION SIGN
11 A	FR DESTINATION SIGN
11 B	FR DESTINATION SIGN
11 C	FR DESTINATION SIGN
11 D	FR DESTINATION SIGN
11 E	FR DESTINATION SIGN
11 K	FR DESTINATION SIGN
12	12V BAT ELECTRONIC JCT BLOCK
12	BAT CPT 12V BATTERY
12 A	FR JCT BOX 12V DISC SW
12 A	RR JCT BOX 12V DISC SW
12 B	12V BAT ELECTRICAL JCT BLOCK
12 B	RR JCT BOX 12V DISC SW
12 B	FR JCT BOX 12V DISC SW
12 BE	BAT. EQUALIZER MONITOR
12 C	FR JCT BOX 12V DISC SW
12 C	RR JCT BOX 12V HOT WIRE
12 CE	RR JCT BOX 12V HOT WIRE
12 D	BAT CPT 12V BATTERY
12 DT	TTLT MODULE
12 E	FR JCT BOX 12V DISC SW
12 E	RR JCT BOX 12V DISC SW
12 F	BAT CPT 12V FJB & IC
12 F	FR JCT BOX 12V DISC SW
12 F	RR JCT BOX 12V DISC SW
12 G	FR JCT BOX 12V DISC SW
12 H	12 V IGNITION D.T.RUN LIGHT
12 J	FR JCT BOX 12V DISC SW
12 I	12V IGNITION DISTRIBUTION
12 I	RR JCT BOX 12V IGNITION
12 K	12 VOLT IGN. TTLT & HVAC MODULE
12 IA	12V IGNITION DISTRIBUTION
12 IA	FR JCT BOX 12V IGNITION
12 IB	FR JCT BOX 12V IGNITION
12 IF	FR JCT BOX 12V IGNITION
12 LX	CLUSTER (12V HOT WIRE)
12 P	LH CONSOLE POWER OUTLET
12 R	BAT CPT 12V DISC RLY TO RJB
12 R	MEMORY BATTERY RADIO
12 S	SOUND SYSTEM 12V RADIO
12 S1	SOUND SYSTEM 12V RADIO
12 S2	SOUND SYSTEM 12V RADIO
12 SB	SOUND SYSTEM 12V FEEDING
12 SS	SOUND SYSTEM 12V FEEDING
12 VA	BATTERY TO EQUALIZER 12V
12 VD	12V HOT WIRE DISTRIBUTION
12 VF	BAT CPT 12V FJB & IC
12 VI	12V IGNITION DISTRIBUTION
12 VR	BAT CPT 12V DISC RLY TO RJB
12 W	12V BATTERY DDEC III
12 W	ENTRANCE DOOR (SEDAN)
12 WA	ENTRANCE DOOR (SEDAN)
12 X	FR JCT BOX 12V DISC SW
12 X2	FR JCT BOX 12V DISC SW
12 Y	FR JCT BOX 12V DISC SW
13 A	ALARM & SIGNAL-LO AIR PRIM.
13 B	ALARM & SIGNAL-LO AIR SEC.
14	LAVATORY-FLUSHING PUMP
14 A	LAVATORY-FLUSHING PUMP
15	EXTERIOR LTS-MULTI FUNC LEVEL
15 A	WIPER & WASHER UPPER WINDSHIELD
16	SPEED - SIGNAL +
16 A	SPEED - SIGNAL +
16 T	SPEED - SIGNAL +
17	EXTERIOR LTS-FLASHER UNIT
17 A	EXTERIOR LTS-FLASHER UNIT
19	DIFFERENTIAL OIL TEMP
20	SPEED - SIGNAL -
20 T	SPEED - SIGNAL -
20 W	SPEED - SIGNAL -
21	EXTERIOR LTS-DIRECTIONNAL LH
21 A	EXTERIOR LTS-DIRECTIONNAL LH
21 B	EXTERIOR LTS-HAZARD
21 C	EXTERIOR LTS-CORNERING LH
21 H	EXTERIOR LTS-DIRECTIONNAL LH
21 K	EXTERIOR LTS-CORNERING
21 N	EXTERIOR LTS-CORNERING LH
21 P	EXTERIOR LTS-CORNERING LH
23	EXTERIOR LTS-DIRECTIONNAL RH
23	EXTERIOR LTS-DIRECTIONNAL RH
23 A	EXTERIOR LTS-DIRECTIONNAL RH
23 B	EXTERIOR LTS-DIRECTIONNAL RH
23 C	EXTERIOR LTS-CORNERING RH
23 N	EXTERIOR LTS-CORNERING RH
23 P	EXTERIOR LTS-CORNERING RH
24	BAT CPT 24V BATTERY
24	FR JCT BOX 24V DISC SW
24 A	BOOSTER BLOCK 24V DISC SW
24 A	FR JCT BOX 24V DISC SW
24 A	RR JCT BOX 24V DISC SW
24 B	24V STARTER RLY FEEDING
24 B	FR JCT BOX 24V DISC SW
24 B	RR JCT BOX 24V DISC SW
24 BC	24 VOLT BATT. CHARGER
24 BE	RJB CPT-BAT EQ MONITOR HOT WIRE
24 C	FR JCT BOX 24V DISC SW
24 C	RR JCT BOX 24V DISC SW
24 D	BAT CPT 24V HOT WIRE
24 D	FR JCT BOX 24V HOT WIRE
24 D	RR JCT BOX 24V HOT WIRE
24 DA	A/C JCT BOX 24V HOT WIRE
24 E	BAT CPT 24V DISC SW
24 E	FR JCT BOX 24V DISC SW
24 E	RR JCT BOX 24V DISC SW
24 F	FR JCT BOX 24V DISC SW
24 F	RR JCT BOX 24V DISC SW
24 G	FR JCT BOX 24V DISC SW
24 G	RR JCT BOX 24V DISC SW
24 H	FR JCT BOX 24V DISC SW
24 H	RR JCT BOX 24V DISC SW
24 I	FR JCT BOX 24V IGNITION
24 I	RR JCT BOX 24V IGNITION
24 IA	FR JCT BOX 24V IGNITION
24 IA	RR JCT BOX 24V IGNITION
24 IB	FR JCT BOX 24V IGNITION
24 IB	RR JCT BOX 24V IGNITION
24 IC	FR JCT BOX 24V IGNITION
24 IF	FJB 24VOLT IGNITION
24 P	FR JCT BOX 24V DISC SW
24 S	24V DISC SW RLY SIGNAL
24 S1	SOUND SYSTEM 24V AMPLIFIER
24 S2	SOUND SYSTEM 24V AMPLIFIER
24 S3	SOUND SYSTEM 24V VIDEO
24 S4	SOUND SYSTEM 24V VIDEO
24 SB	SOUND SYSTEM 24V FEEDING
24 SS	SOUND SYSTEM 24V FEEDING
24 T	RR JCT BOX 24V DISC SW
24 V2	RR JCT BOX 24V DISC SW
24 V3	RR JCT BOX 24V DISC SW
24 V4	RR JCT BOX 24V DISC SW
24 V5	RR JCT BOX 24V DISC SW
24 VD	24V HOT WIRE DISTRIBUTION
24 VF	BAT CPT 24V SW TO FJB & IC
24 VA	BATTERY TO EQUALIZER 24V
24 VI	RR JCT BOX 24V IGNITION
24 VR	BAT CPT 24V DISC SW TO RJB
24 W	RR JCT BOX 24V DISC SW (WCL)
24 WC	BATT.CPT TO HYD. PUMP (WCL)
24 WL	24V BATTERY-HYD. PUMP (WCL)
25 A1	PRE-EXITATION ALT. BOSCH #1
25 A2	PRE-EXITATION ALT. BOSCH #2
25 A	T.T. LT. ALTERNATOR #1
25 B	12 VOLTS IGN. ALT. SIGNAL MODULE
25 D	12 V. ENGINE RUN / HVAC SYSTEM
25 F	12 VOLT IGN. DISTRIBUTION
25 H	24 VOLT IGN. ALT. BOSCH
25 K	T.T. LT. ALTERNATOR #2
26 A	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26 B	DRIVER'S WINDOW LIFTER
26 C	DRIVER'S WINDOW LIFTER
27	LAVATORY-EMERGENCY SONALERT
28 A	A/C & HEAT SYSTEM-HI PRESSURE
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29 A	A/C & HEAT SYSTEM-DRIVER'S HTR
29 B	A/C & HEAT SYSTEM-DRIVER'S HTR
29 H	HVAC DASH MODULE
30 A	GALLEY
31 A	A/C & HEAT SYSTEM-UNLOADER
31 B	A/C & HEAT SYSTEM-UNLOADER
31 B	WIPER & WASHER SYSTEM
31 C	WIPER & WASHER SYSTEM
31 D	WIPER & WASHER SYSTEM
31 E	WIPER & WASHER SYSTEM
31 J	WIPER & WASHER SYSTEM
31 X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32 B	EXTERIOR LTS-BACK-UP
32 C	BACK-UP PWR & SIGNAL
32 D	BACK-UP ALARM
35	ENTRANCE DOOR (SEDAN)
35 B	ENTRANCE DOOR (SEDAN)
35 BB	ENTRANCE DOOR (SEDAN)
35 D	ENTRANCE DOOR (SEDAN)
36	JACOB BRAKE SYSREM

CIRCUIT NUMBER CODE

No.	DESCRIPTION
36A	JACOB BRAKE SYSREM
38	INTERIOR LTS-24V FLUORESCENT
38A	INTERIOR LTS-24V FLUORESCENT
38C	INTERIOR LTS-24V FLUORESCENT
38D	INTERIOR LTS-24V FLUORESCENT
39	INTERIOR LTS-24V LH CONSOLE SW
39A	INTERIOR LTS-DRIVER"S LTS
39P	READING LIGHTS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
43	HAT RACK FAN
43A	HAT RACK FAN
43B	HAT RACK FAN
43D	HAT RACK FAN
43E	HAT RACK FAN
43F	HAT RACK FAN
43G	HAT RACK FAN
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45B	A/C & HEAT SYSTEM-HEAT SIGN
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
48	ENTRANCE DOOR (SEDAN)
48A	ENTRANCE DOOR (SEDAN)
49	ENTRANCE DOOR (SEDAN)
49A	ENTRANCE DOOR (SEDAN)
50	AIR DRYER
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL- AIR HORN
52C	ALARM & SIGNAL- AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
57CA	A/C & HEAT SYSTEM-HEAT SIGN
57CC	A/C & HEAT SYSTEM-HEAT SIGN
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
62	LAVATORY-OCCUPIED LT
62A	LAVATORY-FLUOR LT
62B	LAVATORY-FLUOR LT
62E	LAVATORY-OCCUP & FLUOR LT
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVERS FAN
64B	DRIVERS FAN
64C	DRIVERS FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65P	PASSENGER REC. DAMPER
65D	DRIVER REC. DAMPER
66	O_PASS. ON/OFF
67	24 VOLT RUN DISTRIBUTION
67A	A/C & HEAT SYSTEM
67B	A/C & HEAT SYSTEM
67C	HEATING WINDSHIELD
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67V	A/C & HEAT SYSTEM-WATER VALVE
68	DASH & DEFROST DAMPER MOTOR
68A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH
72C	SUN VISOR-LH
72D	SUN VISOR-LH
73	LAVATORY-FEEDING
74	INTERIOR LTS-READING RH
74A	INTERIOR LTS-READING RH
74D	INTERIOR LTS-READING SIGNAL
75	INTERIOR LTS-READING LH
75A	INTERIOR LTS-READING LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77	A/C & HEAT SYSTEM-HI PRESSURE
77A	A/C & HEAT SYSTEM-DRIVER'S HTR
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85W	24V IGN ANTI SKID
85X	24V IGN ANTI SKID
85Y	ANTI SKID-WARNING LT
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
90J	A/C & HEAT SYSTEM-COND FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
100	INTERIOR LTS-GENERAL
100A	INTERIOR LTS-GENERAL
100B	INTERIOR LTS-GENERAL
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	WORLD TRANSM-SOL. SUPPLY
102A	24V STARTER TO BOSCH ALTERNATOR
103	LOW BUOY
104	WORLD TRANSM-SOL. FORWARD
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START

CIRCUIT NUMBER CODE

No.	DESCRIPTION
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125	GALLEY LAMP
125T	GALLEY LAMP
125W	WORLD TRANSM-RET. INDICATOR
126	KNEELING SYSTEM
126A	KNEELING SYSTEM
126B	KNEELING SYSTEM
126C	KNEELING SYSTEM
126D	KNEELING SYSTEM
126E	KNEELING SYSTEM
126F	KNEELING SYSTEM
126G	KNEELING SYSTEM
126H	KNEELING SYSTEM
126K	KNEELING SYSTEM
126P	KNEELING SYSTEM
126R	KNEELING SYSTEM
126W	5 MPH N.C. SIGNAL (WCL)
126S	KNEELING SYSTEM
126T	KNEELING SYSTEM
127	WORLD TRANSM-LUBE PRESS SW.
127	PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
127B	PRE-HEAT WATER HEATER
127	WORLD TRANSM-RETARDER FEED SOL.
127S	PRE-HEAT WATER HEATER
127W	PRE-HEAT WATER HEATER
128	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT WATER HEATER
128W	PRE-HEAT WATER HEATER
128	WORLD TRANSM-SOL. C2
129	PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	GALLEY-HEAT CONTAINERS
133A	GALLEY-HEAT CONTAINERS
133B	GALLEY-HEAT CONTAINERS
133C	GALLEY-HEAT CONTAINERS
133	WORLD TRANSM-RET. ACTUATOR HI
134	GALLEY-HEAT CONTAINERS
134A	GALLEY-HEAT CONTAINERS
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135A	A/C & HEAT SYSTEM-AIR SENSOR
135D	A/C & HEAT SYSTEM-AIR SENSOR
135C	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	GALLEY-ACCESSORIES
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146A	TRANSMISSION-12V IGNITION
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	WORLD TRANSM-OIL TEMP
147A	ETHER COLD START & D.R.L.
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
151A	ABS SYSTEM
152	ABS SYSTEM
152A	ABS SYSTEM
153	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	ABS SYSTEM
155	WORLD TRANSM-SPARE INPUT (-)
156	ABS SYSTEM
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157A	ABS SYSTEM
157B	ABS SYSTEM
157D	A.T.C. SYSTEM
157E	A.T.C. SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
165A	A/C & HEAT SYSTEM-TRANSMITER
165B	A/C & HEAT SYSTEM-TRANSMITER
165C	A/C & HEAT SYSTEM-TRANSMITER
165D	A/C & HEAT SYSTEM-TRANSMITER
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	A/C & HEAT SYSTEM-TEMP. CTR
167A	A/C & HEAT SYSTEM-TEMP. CTR
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170	LUGGAGE DOOR LOCK
170C	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
225	LAVATORY FAN
225A	LAVATORY FAN
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251A	DDEC III - DATA LOGGER 12 H.W.
251	DDEC III - PRODRIVER 12V H.W.
253	GALLEY-MICROWAVE
254	GALLEY-12V FRIGO NORCOLD
254A	GALLEY-FRIGO
255	GALLEY-COFEEMAKER
255A	GALLEY-COFEEMAKER
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
260	WINDOW AJAR
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
292	FAN CLUTCH RADIATOR SPD 2
300	DOOR AJAR MAGN.SW. (WCL)
300A	POWER SYSTEM SW. (WCL)
300B	DOOR AJAR ALARM (WCL)
301	POWER SYSTEM SW. (WCL)
302	DOOR AJAR T.T.LT. (WCL)
302A	DOOR AJAR ALARM SIGN.(WCL)
302B	DOOR AJAR MAGN.SW. (WCL)

CIRCUIT NUMBER CODE

No.	DESCRIPTION
303	REMOTE WALL SW. DWN (WCL)
304	REMOTE WALL SW. UP (WCL)
305	PARK. BRAKE SOL. VALVE (WCL)
305A	PARK. BRAKE SAFETY SW. (WCL)
306	CONTROL SYSTEM (WCL RICON)
307	CONTROL SYSTEM (WCL RICON)
308	CONTROL SYSTEM (WCL RICON)
309	CONTROL SYSTEM (WCL RICON)
310	EATON TRANSMISSION
311	EATON TRANSMISSION
312	EATON TRANSMISSION
313	EATON TRANSMISSION
314	EATON TRANSMISSION
315	EATON TRANSMISSIOM
316	EATON TRANSMISSION - EPL
317	EATON TRANSMISSION
318	EATON TRANSMISSION
319	EATON TRANSMISSION
320	EATON TRANSMISSION
321	EATON TRANSMISSION
322	EATON TRANSMISSIION
323	EATON TRANSMISSION
324	EATON TRANSMISSION
325	EATON TRANSMISSION
326	EATON TRANSMISSION
327	EATON TRANSMISSION
328	EATON TRANSMISSION
329	EATON TRANSMISSION
330	EATON TRANSMISSION - EPL
331	EATON TRANSMISSION - EPL
332	EATON TRANSMISSION
333	EATON TRANSMISSION - 12V BATTERY
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE
540	DDEC III-CRUISE ENABLE LTS.
541	DDEC III-CRUISE SET SW
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW

No.	DESCRIPTION
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
583	DDEC III-ENGINE BRAKE 4 CYL.
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
925	J1939-HIGH
926	J1939-LOW
927	J1939-SHIELD
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
979	DDEC III-ENGINE BRAKE 2 CYL.

No.	DESCRIPTION

No.	DESCRIPTION

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 1	2	40A	560703	BAT. CPT.	12V IGNITION
CB 2	1.1	30A	870690	BAT. CPT.	12V HOT WIRE
CB 3	1.1	40A	560703	BAT. CPT.	12V FEED RR. JCT. BOX
CB 4	1.1	40A	560703	BAT. CPT.	12V FEED FR. JCT. BOX
CB 5	1.1	30A	870690	BAT. CPT.	24V HOT WIRE
CB 6	1.1	90A	560298	BAT. CPT.	24V FEED RR. JCT. BOX
CB 7	1.1	90A	560298	BAT. CPT.	24V FEED FR. JCT. BOX
CB 8	1.1	150A	560299	BAT. CPT.	24V EVAPORATOR FAN MOTOR
CB 10	4	8A	561791	FR. JCT. BOX	MASTER KEY SWITCH
CB 16	4	8A	561791	RR. JCT. BOX	ENGINE-RR. CTRL & START SW.
CB 18	4	6A	561790	RR. JCT. BOX	ENGINE-FR. CTRL SW.
CB 19	5	15A	561793	BAT. CPT.	E.C.M. DDEC III 12V POWER
CB 20	5	15A	561793	BAT. CPT.	E.C.M. DDEC III 12V POWER
CB 21	5	6A	561790	BAT. CPT.	E.C.M. DDEC III 12V IGNITION
CB 24	6	20A	561794	BAT. CPT.	WORLD TRANSMISSION 12V POWER
CB 26	9.3	10A	561792	RR. JCT. BOX	BACK-UP LTS
CB 27	7	8A	561791	FR. JCT. BOX	24V IGNITION DASH ACCESSORIES
CB 28	7	6A	561790	FR. JCT. BOX	12V IGNITION DASH ACCESSORIES
CB 34	9.3	6A	561792	RR. JCT. BOX	BACK-UP ALARM
CB 35	9.3	15A	561790	FR. JCT. BOX	FOG & HAZARD DASH SW.
CB 37	9.1	6A	561790	FR. JCT. BOX	HEAD & MULTI-FUNCTION LEVEL SW.
CB 38	9.1	10A	561792	FR. JCT. BOX	FR. MARKER LTS
CB 39	9.1	20A	561794	FR. JCT. BOX	CLEARANCE & IDENTIFICATION LTS
CB 40	9.1	8A	561791	FR. JCT. BOX	FR. CLEARANCE & IDENTIFICATION LTS
CB 41	9.1	8A	561791	RR. JCT. BOX	RR. CLEARANCE & IDENTIFICATION LTS
CB 42	9.1	8A	561791	RR. JCT. BOX	RR. TAIL & LICENCE LTS
CB 43	9.1	20A	561794	FR. JCT. BOX	HEADLAMP (HI)
CB 44	9.1	15A	561793	FR. JCT. BOX	HEADLAMP (LO)
CB 45	9.2	10A	561792	FR. JCT. BOX	WIPER CTRL MULTI-FUNCTION LEVEL SW.
CB 46	9.2	20A	561794	FR. JCT. BOX	FLASHER & HAZARD UNIT
CB 48	9.3	6A	561790	FR. JCT. BOX	STOP LTS PRESSURE SW.
CB 49	9.3	15A	561793	RR. JCT. BOX	STOP & CYCLOP LTS
CB 51	10	10A	561792	FR. JCT. BOX	UPPER WIPER CTRL SW.
CB 52	11.1	15A	561793	RR. JCT. BOX	LUGGAGE & DOOR AJAR LTS
CB 57	11.2	8A	561791	FR. JCT. BOX	DASH LTS RHEOSTAT
CB 58	13.1	6A	561790	FR. JCT. BOX	HVAC DASH MODULE
CB 63	11.4	8A	561791	FR. SERVICE.CPT	110V FLUORESCENT LH
CB 64	11.4	8A	561791	FR. SERVICE.CPT	110V FLUORESCENT RH
CB 70	13.1	6A	561790	FR. JCT. BOX	A/C & HEAT SW.
CB 71	13.1	10A	561792	RR. JCT. BOX	A/C & HEAT LOGIC PANEL
CB 72	13.1	10A	561792	RR. JCT. BOX	A/C COMPRESSOR CLUTCH
CB 73	13.1	15A	561793	RR. JCT. BOX	WATER PUMP
CB 77	13.2	40A	560703	BAT. CPT.	CONDENSER FAN MOTOR RH
CB 78	13.2	40A	560703	BAT. CPT.	CONDENSER FAN MOTOR LH
CB 79	13.2	15A	561793	FR. JCT. BOX	DRIVER'S HTR FAN SPEED CTRL MODULE
CB 85	11.2	10A	561790	FR. JCT. BOX	ENTRANCE DOOR (SEDAN) & STEP LTS
CB 93	1.2	30A	870690	BAT. CPT.	SOUND SYSTEM 12V FEEDING
CB 94	1.2	30A	870690	BAT. CPT.	SOUND SYSTEM 12V FEEDING
CB 95	20.1	10A	561792	S.S. JCT. PANEL	SOUND SYSTEM AMPLI
CB 96	20.1	10A	561792	S.S. JCT. PANEL	VIDEO SYSTEM
CB 97	20.1	10A	561792	S.S. JCT. PANEL	SOUND SYSTEM B/U P.A. AMPLI
CB 98	20.1	15A	561793	S.S. JCT. PANEL	SOUND SYSTEM RADIO & CD
CB 99	20.7	15A	561793	S.S. JCT. PANEL	SEAT AUDIO SYSTEM
CB 105	21	6A	561790	FR. JCT. BOX	E.C.U. ABS
CB 106	21	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 107	21	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 124	8	6A	561790	RR. JCT. BOX	RADIATOR FAN CLUTCH
CB 126	25.1	150A	560299	BAT. CPT.	WHELL CHAIR LIFT MOTOR PUMP STE.

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 126	25.2	90A	560298	BAT. CPT.	WHELL CHAIR LIFT MOTOR PUMP RICON
CB 127	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN L.H.
CB 128	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN R.H.
CB 129	7.2	6A	561790	FR. JCT. BOX	CLUSTER
CB 130	28	6A	561790	FR. JCT. BOX	CLUSTER

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 1	2	40A	560703	BAT. CPT.	12V IGNITION
CB 2	1.1	40A	870093	BAT. CPT.	12V HOT WIRE
CB 3	1.1	40A	560703	BAT. CPT.	12V FEED RR. JCT. BOX
CB 4	1.1	40A	560703	BAT. CPT.	12V FEED FR. JCT. BOX
CB 5	1.1	30A	870690	BAT. CPT.	24V HOT WIRE
CB 6	1.1	90A	560298	BAT. CPT.	24V FEED RR. JCT. BOX
CB 7	1.1	90A	560298	BAT. CPT.	24V FEED FR. JCT. BOX
CB 8	1.1	150A	560299	BAT. CPT.	24V EVAPORATOR FAN MOTOR
CB 10	4	8A	561791	FR. JCT. BOX	MASTER KEY SWITCH
CB 16	4	8A	561791	RR. JCT. BOX	ENGINE-RR. CTRL & START SW.
CB 18	4	6A	561790	RR. JCT. BOX	ENGINE-FR. CTRL SW.
CB 19	5	15A	561793	BAT. CPT.	E.C.M. DDEC 12V POWER
CB 20	5	15A	561793	BAT. CPT.	E.C.M. DDEC 12V POWER
CB 21	5	6A	561790	BAT. CPT.	E.C.M. DDEC 12V IGNITION
CB 24	6	25A	561794	BAT. CPT.	WORLD TRANSMISSION & EATON 12V POWER
CB 26	9.3	10A	561792	RR. JCT. BOX	BACK-UP LTS
CB 27	7	8A	561791	FR. JCT. BOX	24V IGNITION DASH ACCESSORIES
CB 28	7	6A	561790	FR. JCT. BOX	12V IGNITION DASH ACCESSORIES
CB 34	9.3	6A	561792	RR. JCT. BOX	BACK-UP ALARM
CB 35	9.3	15A	561790	FR. JCT. BOX	FOG & HAZARD DASH SW.
CB 37	9.1	6A	561790	FR. JCT. BOX	HEAD & MULTI-FUNCTION LEVEL SW.
CB 38	9.1	10A	561792	FR. JCT. BOX	FR. MARKER LTS
CB 39	9.1	20A	561794	FR. JCT. BOX	CLEARANCE & IDENTIFICATION LTS
CB 40	9.1	8A	561791	FR. JCT. BOX	FR. CLEARANCE & IDENTIFICATION LTS
CB 41	9.1	8A	561791	RR. JCT. BOX	RR. CLEARANCE & IDENTIFICATION LTS
CB 42	9.1	8A	561791	RR. JCT. BOX	RR. TAIL & LICENCE LTS
CB 43	9.1	20A	561794	FR. JCT. BOX	HEADLAMP (HI)
CB 44	9.1	15A	561793	FR. JCT. BOX	HEADLAMP (LO)
CB 45	9.2	10A	561792	FR. JCT. BOX	WIPER CTRL MULTI-FUNCTION LEVEL SW.
CB 46	9.2	20A	561794	FR. JCT. BOX	FLASHER & HAZARD UNIT
CB 48	9.3	6A	561790	FR. JCT. BOX	STOP LTS PRESSURE SW.
CB 49	9.3	15A	561793	RR. JCT. BOX	STOP & CYCLOP LTS
CB 51	10	10A	561792	FR. JCT. BOX	UPPER WIPER CTRL SW.
CB 52	11.1	15A	561793	RR. JCT. BOX	LUGGAGE & DOOR AJAR LTS
CB 57	11.2	8A	561791	FR. JCT. BOX	DASH LTS RHEOSTAT
CB 58	13.1	6A	561790	FR. JCT. BOX	HVAC DASH MODULE
CB 63	11.4	8A	561791	FR. SERVICE.CPT	110V FLUORESCENT LH
CB 64	11.4	8A	561791	FR. SERVICE.CPT	110V FLUORESCENT RH
CB 70	22.1	6A	561790	FR. JCT. BOX	UPPER HEATING WINDSHIELD SW.
CB 71	13.1	10A	561792	RR. JCT. BOX	A/C & HEAT LOGIC PANEL
CB 72	13.2	10A	561792	RR. JCT. BOX	A/C COMPRESSOR CLUTCH
CB 73	13.2	15A	561793	RR. JCT. BOX	WATER PUMP
CB 77	13.1	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR RH
CB 78	13.1	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR LH
CB 79	13.2	15A	561793	FR. JCT. BOX	DRIVER'S HTR FAN SPEED CTRL MODULE
CB 85	11.2	10A	561790	FR. JCT. BOX	ENTRANCE DOOR (SEDAN) & STEP LTS
CB 93	1.2	30A	870690	BAT. CPT.	SOUND SYSTEM 12V FEEDING
CB 94	1.2	30A	870690	BAT. CPT.	SOUND SYSTEM 12V FEEDING
CB 95	20.1	10A	561792	S.S. JCT. PANEL	SOUND SYSTEM AMPLI
CB 96	20.1	10A	561792	S.S. JCT. PANEL	VIDEO SYSTEM
CB 97	20.1	10A	561792	S.S. JCT. PANEL	SOUND SYSTEM B/U P.A. AMPLI
CB 98	20.1	15A	561793	S.S. JCT. PANEL	SOUND SYSTEM RADIO & CD
CB 99	20.7	15A	561793	S.S. JCT. PANEL	SEAT AUDIO SYSTEM
CB 105	21	6A	561790	FR. JCT. BOX	E.C.U. ABS
CB 106	21	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 107	21	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 124	8	6A	561790	RR. JCT. BOX	RADIATOR FAN CLUTCH
CB 126	25.1	150A	560299	BAT. CPT.	WHELL CHAIR LIFT MOTOR PUMP STE.

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 126	25.2	90A	560298	BAT. CPT.	WHELL CHAIR LIFT MOTOR PUMP RICON
CB 127	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN L.H.
CB 128	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN R.H.
CB 129	7.2	6A	561790	FR. JCT. BOX	CLUSTER
CB 130	28	6A	561790	FR. JCT. BOX	CLUSTER

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 1	2	40A	560703	BAT. CPT.	12V IGNITION
CB 2	1.1	40A	870093	BAT. CPT.	12V HOT WIRE
CB 3	1.1	40A	560703	BAT. CPT.	12V FEED RR. JCT. BOX
CB 4	1.1	40A	560703	BAT. CPT.	12V FEED FR. JCT. BOX
CB 5	1.1	30A	870690	BAT. CPT.	24V HOT WIRE
CB 6	1.1	90A	560298	BAT. CPT.	24V FEED RR. JCT. BOX
CB 7	1.1	90A	560298	BAT. CPT.	24V FEED FR. JCT. BOX
CB 8	1.1	150A	560299	BAT. CPT.	24V EVAPORATOR FAN MOTOR
CB 10	4	8A	561791	FR. JCT. BOX	MASTER KEY SWITCH
CB 16	4	8A	561791	RR. JCT. BOX	ENGINE-RR. CTRL & START SW.
CB 18	4	6A	561790	RR. JCT. BOX	ENGINE-FR. CTRL SW.
CB 19	5	15A	561793	BAT. CPT.	E.C.M. DDEC 12V POWER
CB 20	5	15A	561793	BAT. CPT.	E.C.M. DDEC 12V POWER
CB 21	5	10A	561792	RR. JCT. BOX	E.C.M. DDEC and WTEC 12V IGNITION
CB 24	6	25A	561794	BAT. CPT.	WORLD TRANSMISSION & EATON 12V POWER
CB 26	9.3	10A	561792	RR. JCT. BOX	BACK-UP LTS
CB 27	7	8A	561791	FR. JCT. BOX	24V IGNITION DASH ACCESSORIES
CB 28	7	6A	561790	FR. JCT. BOX	12V IGNITION DASH ACCESSORIES
CB 34	9.3	6A	561792	RR. JCT. BOX	BACK-UP ALARM
CB 35	9.3	15A	561790	FR. JCT. BOX	FOG & HAZARD DASH SW.
CB 37	9.1	6A	561790	FR. JCT. BOX	HEAD & MULTI-FUNCTION LEVEL SW.
CB 38	9.1	10A	561792	FR. JCT. BOX	FR. MARKER LTS
CB 39	9.1	20A	561794	FR. JCT. BOX	CLEARANCE & IDENTIFICATION LTS
CB 40	9.1	8A	561791	FR. JCT. BOX	FR. CLEARANCE & IDENTIFICATION LTS
CB 41	9.1	8A	561791	RR. JCT. BOX	RR. CLEARANCE & IDENTIFICATION LTS
CB 42	9.1	8A	561791	RR. JCT. BOX	RR. TAIL & LICENCE LTS
CB 43	9.1	20A	561794	FR. JCT. BOX	HEADLAMP (HI)
CB 44	9.1	15A	561793	FR. JCT. BOX	HEADLAMP (LO)
CB 45	9.2	10A	561792	FR. JCT. BOX	WIPER CTRL MULTI-FUNCTION LEVEL SW.
CB 46	9.2	20A	561794	FR. JCT. BOX	FLASHER & HAZARD UNIT
CB 48	9.3	6A	561790	FR. JCT. BOX	STOP LTS PRESSURE SW.
CB 49	9.3	15A	561793	RR. JCT. BOX	STOP & CYCLOP LTS
CB 51	10	10A	561792	FR. JCT. BOX	UPPER WIPER CTRL SW.
CB 52	11.1	15A	561793	RR. JCT. BOX	LUGGAGE & DOOR AJAR LTS
CB 57	11.2	8A	561791	FR. JCT. BOX	DASH LTS RHEOSTAT
CB 58	13.1	6A	561790	FR. JCT. BOX	HVAC DASH MODULE
CB 63	11.4	8A	561791	FR. SERVICE.CPT	110V FLUORESCENT LH
CB 64	11.4	8A	561791	FR. SERVICE.CPT	110V FLUORESCENT RH
CB 70	22.1	6A	561790	FR. JCT. BOX	UPPER HEATING WINDSHIELD SW.
CB 71	13.1	10A	561792	RR. JCT. BOX	A/C & HEAT LOGIC PANEL
CB 72	13.2	10A	561792	RR. JCT. BOX	A/C COMPRESSOR CLUTCH
CB 73	13.2	15A	561793	RR. JCT. BOX	WATER PUMP
CB 77	13.1	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR RH
CB 78	13.1	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR LH
CB 79	13.2	15A	561793	FR. JCT. BOX	DRIVER'S HTR FAN SPEED CTRL MODULE
CB 85	11.2	10A	561790	FR. JCT. BOX	ENTRANCE DOOR (SEDAN) & STEP LTS
CB 93	1.2	30A	870690	BAT. CPT.	SOUND SYSTEM 12V FEEDING
CB 94	1.2	30A	870690	BAT. CPT.	SOUND SYSTEM 12V FEEDING
CB 95	20.1	10A	561792	S.S. JCT. PANEL	SOUND SYSTEM AMPLI
CB 96	20.1	10A	561792	S.S. JCT. PANEL	VIDEO SYSTEM
CB 97	20.1	10A	561792	S.S. JCT. PANEL	SOUND SYSTEM B/U P.A. AMPLI
CB 98	20.1	15A	561793	S.S. JCT. PANEL	SOUND SYSTEM RADIO & CD
CB 99	20.7	15A	561793	S.S. JCT. PANEL	SEAT AUDIO SYSTEM
CB 105	21	6A	561790	FR. JCT. BOX	E.C.U. ABS
CB 106	21	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 107	21	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 124	8	6A	561790	RR. JCT. BOX	RADIATOR FAN CLUTCH
CB 126	25.1	150A	560299	BAT. CPT.	WHELL CHAIR LIFT MOTOR PUMP STE.

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 126	25.2	90A	560298	BAT. CPT.	WHELL CHAIR LIFT MOTOR PUMP RICON
CB 127	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN L.H.
CB 128	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN R.H.
CB 129	7.2	6A	561790	FR. JCT. BOX	CLUSTER
CB 130	28	6A	561790	FR. JCT. BOX	CLUSTER

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 1	2	40A	562686	BAT. CPT.	12V IGNITION
CB 2	1.1	40A	870093	BAT. CPT.	12V HOT WIRE
CB 3	1.1	40A	562686	BAT. CPT.	12V FEED RR. JCT. BOX
CB 4	1.1	70A	562687	BAT. CPT.	12V FEED FR. JCT. BOX
CB 5	1.1	30A	870690	BAT. CPT.	24V HOT WIRE
CB 6	1.1	90A	562683	BAT. CPT.	24V FEED RR. JCT. BOX
CB 7	1.1	90A	562683	BAT. CPT.	24V FEED FR. JCT. BOX
CB 8	1.1	150A	560299	BAT. CPT.	24V EVAPORATOR FAN MOTOR
CB 10	4	8A	561791	FR. JCT. BOX	MASTER KEY SWITCH
CB 16	4	8A	561791	RR. JCT. BOX	ENGINE-RR. CTRL & START SW.
CB 18	4	6A	561790	RR. JCT. BOX	ENGINE-FR. CTRL SW.
CB 19	5	15A	561793	BAT. CPT.	E.C.M. DDEC 12V POWER
CB 20	5	15A	561793	BAT. CPT.	E.C.M. DDEC 12V POWER
CB 21	5	10A	561792	RR. JCT. BOX	E.C.M. DDEC and WTEC 12V IGNITION
CB 24	6	25A	561794	BAT. CPT.	WORLD TRANSMISSION & EATON 12V POWER
CB 26	9.3	10A	561792	RR. JCT. BOX	BACK-UP LTS
CB 27	7	8A	561791	FR. JCT. BOX	24V IGNITION DASH ACCESSORIES
CB 28	7	6A	561790	FR. JCT. BOX	12V IGNITION DASH ACCESSORIES
CB 34	9.3	6A	561792	RR. JCT. BOX	BACK-UP ALARM
CB 35	9.3	15A	561790	FR. JCT. BOX	FOG & HAZARD DASH SW.
CB 37	9.1	6A	561790	FR. JCT. BOX	HEAD & MULTI-FUNCTION LEVEL SW.
CB 38	9.1	10A	561792	FR. JCT. BOX	FR. MARKER LTS
CB 39	9.1	20A	561794	FR. JCT. BOX	CLEARANCE & IDENTIFICATION LTS
CB 40	9.1	8A	561791	FR. JCT. BOX	FR. CLEARANCE & IDENTIFICATION LTS
CB 41	9.1	8A	561791	RR. JCT. BOX	RR. CLEARANCE & IDENTIFICATION LTS
CB 42	9.1	8A	561791	RR. JCT. BOX	RR. TAIL & LICENCE LTS
CB 43	9.1	20A	561794	FR. JCT. BOX	HEADLAMP (HI)
CB 44	9.1	15A	561793	FR. JCT. BOX	HEADLAMP (LO)
CB 45	9.2	10A	561792	FR. JCT. BOX	WIPER CTRL MULTI-FUNCTION LEVEL SW.
CB 46	9.2	20A	561794	FR. JCT. BOX	FLASHER & HAZARD UNIT
CB 48	9.3	6A	561790	FR. JCT. BOX	STOP LTS PRESSURE SW.
CB 49	9.3	15A	561793	RR. JCT. BOX	STOP & CYCLOP LTS
CB 51	10	10A	561792	FR. JCT. BOX	UPPER WIPER CTRL SW.
CB 52	11.1	15A	561793	RR. JCT. BOX	LUGGAGE & DOOR AJAR LTS
CB 57	11.2	8A	561791	FR. JCT. BOX	DASH LTS RHEOSTAT
CB 58	13.1	6A	561790	FR. JCT. BOX	HVAC DASH MODULE
CB 63	11.4	8A	561791	FR. SERVICE.CPT	110V FLUORESCENT LH
CB 64	11.4	8A	561791	FR. SERVICE.CPT	110V FLUORESCENT RH
CB 70	22.1	6A	561790	FR. JCT. BOX	UPPER HEATING WINDSHIELD SW.
CB 71	13.1	10A	561792	RR. JCT. BOX	A/C & HEAT LOGIC PANEL
CB 72	13.2	10A	561792	RR. JCT. BOX	A/C COMPRESSOR CLUTCH
CB 73	13.2	15A	561793	RR. JCT. BOX	WATER PUMP
CB 77	13.1	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR RH
CB 78	13.1	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR LH
CB 79	13.2	15A	561793	FR. JCT. BOX	DRIVER'S HTR FAN SPEED CTRL MODULE
CB 85	11.2	10A	561790	FR. JCT. BOX	ENTRANCE DOOR (SEDAN) & STEP LTS
CB 93	1.2	30A	870690	BAT. CPT.	SOUND SYSTEM 12V FEEDING
CB 94	1.2	30A	870690	BAT. CPT.	SOUND SYSTEM 12V FEEDING
CB 95	20.1	10A	561792	S.S. JCT. PANEL	SOUND SYSTEM AMPLI
CB 96	20.1	10A	561792	S.S. JCT. PANEL	VIDEO SYSTEM
CB 97	20.1	10A	561792	S.S. JCT. PANEL	SOUND SYSTEM B/U P.A. AMPLI
CB 98	20.1	15A	561793	S.S. JCT. PANEL	SOUND SYSTEM RADIO & CD
CB 99	20.7	15A	561793	S.S. JCT. PANEL	SEAT AUDIO SYSTEM
CB 105	21	6A	561790	FR. JCT. BOX	E.C.U. ABS
CB 106	21	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 107	21	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 124	8	6A	561790	RR. JCT. BOX	RADIATOR FAN CLUTCH
CB 126	25.1	150A	560299	BAT. CPT.	WHELL CHAIR LIFT MOTOR PUMP STE.

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 126	25.2	90A	560298	BAT. CPT.	WHELL CHAIR LIFT MOTOR PUMP RICON
CB 127	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN L.H.
CB 128	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN R.H.
CB 129	7.2	6A	561790	FR. JCT. BOX	CLUSTER
CB 130	28	6A	561790	FR. JCT. BOX	CLUSTER

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 1	2	40A	562686	BAT. CPT.	12V IGNITION
CB 2	1.1	40A	870093	BAT. CPT.	12V HOT WIRE
CB 3	1.1	40A	562686	BAT. CPT.	12V FEED RR. JCT. BOX
CB 4	1.1	70A	562687	BAT. CPT.	12V FEED FR. JCT. BOX
CB 5	1.1	30A	870690	BAT. CPT.	24V HOT WIRE
CB 6	1.1	90A	562683	BAT. CPT.	24V FEED RR. JCT. BOX
CB 7	1.1	90A	562683	BAT. CPT.	24V FEED FR. JCT. BOX
CB 8	1.1	150A	560299	BAT. CPT.	24V EVAPORATOR FAN MOTOR
CB 10	4	8A	561791	FR. JCT. BOX	MASTER KEY SWITCH
CB 16	4	8A	561791	RR. JCT. BOX	ENGINE-RR. CTRL & START SW.
CB 18	4	6A	561790	RR. JCT. BOX	ENGINE-FR. CTRL SW.
CB 19	5	15A	561793	BAT. CPT.	E.C.M. DDEC 12V POWER
CB 20	5	15A	561793	BAT. CPT.	E.C.M. DDEC 12V POWER
CB 21	5	10A	561792	RR. JCT. BOX	E.C.M. DDEC and WTEC 12V IGNITION
CB 24	6	25A	561794	BAT. CPT.	WORLD TRANSMISSION & EATON 12V POWER
CB 26	9.3	10A	561792	RR. JCT. BOX	BACK-UP LTS
CB 27	7	8A	561791	FR. JCT. BOX	24V IGNITION DASH ACCESSORIES
CB 28	7	6A	561790	FR. JCT. BOX	12V IGNITION DASH ACCESSORIES
CB 34	9.3	6A	561792	RR. JCT. BOX	BACK-UP ALARM
CB 35	9.3	15A	561790	FR. JCT. BOX	FOG & HAZARD DASH SW.
CB 37	9.1	6A	561790	FR. JCT. BOX	HEAD & MULTI-FUNCTION LEVEL SW.
CB 38	9.1	10A	561792	FR. JCT. BOX	FR. MARKER LTS
CB 39	9.1	20A	561794	FR. JCT. BOX	CLEARANCE & IDENTIFICATION LTS
CB 40	9.1	8A	561791	FR. JCT. BOX	FR. CLEARANCE & IDENTIFICATION LTS
CB 41	9.1	8A	561791	RR. JCT. BOX	RR. CLEARANCE & IDENTIFICATION LTS
CB 42	9.1	8A	561791	RR. JCT. BOX	RR. TAIL & LICENCE LTS
CB 43	9.1	20A	561794	FR. JCT. BOX	HEADLAMP (HI)
CB 44	9.1	15A	561793	FR. JCT. BOX	HEADLAMP (LO)
CB 45	9.2	10A	561792	FR. JCT. BOX	WIPER CTRL MULTI-FUNCTION LEVEL SW.
CB 46	9.2	20A	561794	FR. JCT. BOX	FLASHER & HAZARD UNIT
CB 48	9.3	6A	561790	FR. JCT. BOX	STOP LTS PRESSURE SW.
CB 49	9.3	15A	561793	RR. JCT. BOX	STOP & CYCLOP LTS
CB 51	10	10A	561792	FR. JCT. BOX	UPPER WIPER CTRL SW.
CB 52	11.1	15A	561793	RR. JCT. BOX	LUGGAGE & DOOR AJAR LTS
CB 57	11.2	8A	561791	FR. JCT. BOX	DASH LTS RHEOSTAT
CB 58	13.1	6A	561790	FR. JCT. BOX	HVAC DASH MODULE
CB 63	11.4	8A	561791	FR. SERVICE.CPT	110V FLUORESCENT LH
CB 64	11.4	8A	561791	FR. SERVICE.CPT	110V FLUORESCENT RH
CB 70	22.1	6A	561790	FR. JCT. BOX	UPPER HEATING WINDSHIELD SW.
CB 71	13.1	10A	561792	RR. JCT. BOX	A/C & HEAT LOGIC PANEL
CB 72	13.2	10A	561792	RR. JCT. BOX	A/C COMPRESSOR CLUTCH
CB 73	13.2	15A	561793	RR. JCT. BOX	WATER PUMP
CB 77	13.1	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR RH
CB 78	13.1	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR LH
CB 79	13.2	15A	561793	FR. JCT. BOX	DRIVER'S HTR FAN SPEED CTRL MODULE
CB 85	11.2	10A	561790	FR. JCT. BOX	ENTRANCE DOOR (SEDAN) & STEP LTS
CB 93	1.2	30A	870690	BAT. CPT.	SOUND SYSTEM 12V FEEDING
CB 94	1.2	30A	870690	BAT. CPT.	SOUND SYSTEM 12V FEEDING
CB 95	20.1	10A	561792	S.S. JCT. PANEL	SOUND SYSTEM AMPLI
CB 96	20.1	10A	561792	S.S. JCT. PANEL	VIDEO SYSTEM
CB 97	20.1	10A	561792	S.S. JCT. PANEL	SOUND SYSTEM B/U P.A. AMPLI
CB 98	20.1	15A	561793	S.S. JCT. PANEL	SOUND SYSTEM RADIO & CD
CB 99	20.7	15A	561793	S.S. JCT. PANEL	SEAT AUDIO SYSTEM
CB 105	21	6A	561790	FR. JCT. BOX	E.C.U. ABS
CB 106	21	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 107	21	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 124	8	6A	561790	RR. JCT. BOX	RADIATOR FAN CLUTCH
CB 126	25.1	150A	560299	BAT. CPT.	WHELL CHAIR LIFT MOTOR PUMP STE.

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 126	25.2	90A	560298	BAT. CPT.	WHELL CHAIR LIFT MOTOR PUMP RICON
CB 127	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN L.H.
CB 128	13.3	15A	561793	RR. JCT. BOX	HAT-RACK FAN R.H.
CB 129	7.2	6A	561790	FR. JCT. BOX	CLUSTER
CB 130	28	6A	561790	FR. JCT. BOX	CLUSTER
CB 131	4.2	6A	561790	RR. JCT. BOX	ALT. BOSCH
CB 132	4.2	6A	561790	RR. JCT. BOX	ALT. BOSCH

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	
C X1	FR LH UPPER WHELL CPT-ABS	WABCO	34			X
C X2	FR LH UPPER WHELL CPT-ABS	WABCO	34			X
C X3	FR LH UPPER WHELL CPT-ABS	WABCO				X
C X4	FR LH UPPER WHELL CPT-ABS	WABCO				X
C S	RR JCT BOX ECU WORLD TR.	T & BET				X
C T	RR JCT BOX ECU WORLD TR.	T & BET				X
C V	RR JCT BOX ECU WORLD TR.	T & BET				X
CV I2	RR JCT BOX-WORLD TRANS. SHIFT & RET.					
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584	
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640	
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643	
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646	
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646	
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640	
C 7						
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643	
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643	
C 10						
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646	
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640	
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515	
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662	
C 15	RR JCT BOX	AMP CPC	24	561641	561643	
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763	
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763	
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763	
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763	
C 20	RR JCT BOX	AMP CPC	37	561644	561646	
C 21	RR JCT BOX	AMP CPC	24	561641	561643	
C 22						
C 23						
C 24						
C 25						
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611	
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690	
C 28						
C 29						
C 30						
C 31						
C 32	DDEC ENGINE-ECM	PED	30	------	561600	
C 33						
C 34						
C 35	RR JCT BOX	AMP CPC	24	561642	561643	
C 36						
C 37	RR SECTION-LH HAT RACK	MOLEX	6	562507	562503	
C 38	RR SECTION-RH HAT RACK	MOLEX	6	562507	562503	
C 39						
C 40						
C 41	LAVATORY ROOF FLUORESCENT	AMP MNL	2	560900	560898	
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898	
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662	
C 44						
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643	
C 46						
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695	
C 48						
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247	
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577	
C 51						
C 52	RR JCT BOX	AMP CPC	22	561709	561710	
C 53						
C 54						
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637	
C 56						
C 57						

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 58	RR JCT BOX AC PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX AC PANEL	AMP CPC	14	561584	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	16	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75					
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 78					
C 79					
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100 8	------	562248	------
C 86					
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88	RR END ROOF-CLEARANCE LTS	AMP MNL	2	560900	560898
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS		35	------	641094
C 94					
C 95					
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100					
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	EVAPORATOR COMPT-SPEED MOT CTRL	DEUTSCH	5	------	562566
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115	ENGINE COMPT-AIR DRYER	PED WP	2	561566	561690
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117					
C 118	ENGINE COMPT-LAVATORY FAN	PED WP	2	561566	561690
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155	
C 122	ENGINE CPT-UNLOAD TAG SYSTEM	PED WP	2	561566	561690	
C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690	
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690	
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690	
C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690	
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690	
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812	
C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186	
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812	
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812	
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690	
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690	
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986	
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986	
C 136						
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898	
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012	
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------	
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4			X
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247	
C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247	
C 143	LAVATORY DOOR WALL	AMP MNL	3	560908	562006	
C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852	
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669	
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412	
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690	
C 148						
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001	
C 150						
C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159	
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611	
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247	
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812	
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611	
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690	
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690	
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690	
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690	
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------	
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098	
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098	
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------	
C 164	RR AXLE-ABS LH SENSOR	DEUTSCH	2	562486	562485	
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098	
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098	
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	562486	562485	
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690	
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012	
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940	
C 171	LH CONSOLE	AMP CPC	24			X
C 172	ENGINE COMPT-WATER TANK HEAT.	PED WP	2	561566	561690	
C 173	LAV.POTABLE-WATER TANK HEAT.	AMP MNL	2	560900	560898	
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669	
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669	
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186	
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186	
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997	
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997	
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986	
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986	
C 182						
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611	
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080	

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C 190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690
C 191	ENGINE CPT RR DOOR RH STOP LT	PED WP	2	561566	561690
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C 193					
C 194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690
C 195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690
C 196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690
C 199	ENGINE CPT RR DOOR LICENCE LT	DOM AUTO	2	930210	------
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 202	RH HAT RACK-INDIRECT LIGHTING	MOLEX	2	---------	562758
C 203	RH HAT RACK-INDIRECT LIGHTING	MOLEX	6	---------	562759
C 204	RH HAT RACK-GENERAL LT	AMP MNL	2	560900	560898
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 206	RH HAT RACK-READING LT	AMP FF	4	----------	562756
C 207	LH HAT RACK-READING LT	AMP FF	4	----------	562756
C 208	LH HAT RACK-BALLAST	MOLEX	2	----------	562758
C 209					
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213	FR ROOF-CLEARANCE LT	AMP MNL	2	560900	560898
C 214					
C 215					
C 216					
C 217					
C 218					
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221					
C 222					
C 223					
C 224					
C 225					
C 226					
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233					
C 234					
C 235					
C 236					
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	2	561566	561690
C 241					
C 242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 243	FR SERVICE CPT-HEADLAMPS	TC	3	------	561071
C 244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812
C 245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812
C 246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 247					
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 249					
C 250					
C 251	LH SW PANEL-FAST IDLE	SWF	8	------	561107
C 252	LH SW PANEL-SWITCH LT	SWF	2	------	561837
C 253	LH SW PANEL-ETHER	SWF	8	------	561107
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH SW PANEL-JACOB	SWF	8	------	561107
C 256					
C 257					
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274					
C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 277					
C 278					
C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 280	LH CONSOLE-UNLOAD TAG SW.	NGR	10	------	562763
C 281					
C 282					
C 283					
C 284					
C 285					
C 286	RH SW PANEL-A/C & HEAT	SWF	8	------	561107
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	SWF	8	------	561107
C 289	RH SW PANEL-SWITCH LT	SWF	2	------	561837
C 290					
C 291					
C 292					
C 293					
C 294					
C 295					
C 296					
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299	LH CONSOLE SW-GALLEY	SWF	8	------	561107
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH CONSOLE SW-LUG. DOOR LCK	SWF	8	------	561107
C 311	LH CONSOLE SW-HOS & PAS CHIME	SWF	8	------	561107
C 312	LH CONSOLE SW-READING LTS	SWF	8	------	561107
C 313	LH CONSOLE SW-GEN & FLUOR LTS	SWF	8	------	561107
C 314	LH CONSOLE SW-FR DEST. SIGN	SWF	8	------	561107
C 315	LH CONSOLE SW-LH STORE	SWF	8	------	561107
C 316	LH CONSOLE SPARE SWITCH	SWF	8	------	561107
C 317	LH CONSOLE SW-RH STORE	SWF	8	------	561107
C 318	LH CONSOLE SW-DRV WINDOW LIFT	SWF	8	------	561107
C 319					
C 320	LH CONSOLE SW-DRIVER'S LTS	SWF	8	------	561107
C 321					
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637
C 324					
C 325	LH CONSOLE SW-KNEELING	SWF	8	------	561107
C 326	LH CONSOLE SW-SPARE	SWF	8	------	561107
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330	GALLEY MICROWAVE SW LT	SWF	2	------	561837
C 331	GALLEY MICROWAVE SW	SWF	8	------	561107
C 332	GALLEY RH CONTAINER SW LT	SWF	2	------	561837
C 333	GALLEY RH CONTAINER SW	SWF	8	------	561107
C 334	GALLEY LH CONTAINER SW	SWF	8	------	561107
C 335	GALLEY LH CONTAINER SW LT	SWF	2	------	561837
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	SWF	8	------	561107
C 338	INSTR PANEL LH-UP DEFROST SW	SWF	8	------	561107
C 339	INSTR PANEL LH-UP WASHER SW	SWF	8	------	561107
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	SWF	8	------	561107
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	SWF	8	------	561107
C 344	INSTR PANEL LH-HAZARD LT SW	SWF	8	------	561107
C 345	INSTR PANEL LH-FOG LT SW	SWF	8	------	561107
C 346	INSTR PANEL LH-SWITCH LTS	SWF	2	------	561837
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360					
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375	JUMPER CONNECTOR	DEUTSCH	2		X
C 376					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 377	LH SW PANEL-STOP ENG.OVERIDE	SWF	8	------	561107
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381					
C 382					
C 383					
C 384					
C 385					
C 386	LH CONSOLE-WCL POWER SYSTEM	SWF	8	------	561107
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734
C 389	WCL REAR DOOR	MOLEX	4	561477	561476
C 390	LAVATORY WALL-WCL REMOTE CTR	SWF	8	------	561107
C 391	LAVATORY WALL-WCL LAMP	SWF	8	------	561107
C 392	LAVATORY WALL-WCL SW. LT.	SWF	2	------	561835
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	------	------
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399					
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402	RR DRIVE AXLE-AIR DRYER	PED MP	2	------	562251
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247
C 404	GALLEY LAMP	AMP MNL	2	561248	561247
C 405					
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH SW PANEL-MASTER SWITCH	SWF	8	------	561107
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9	561670	561669
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562237	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	INSTR. PANEL LH-HTR WINDSH.SW	SWF	8	------	561107
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	------
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427					
C 428					
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	DEUTSCH	4	562479	562477
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 438					
C 439					
C 440					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	
C 441						
C 442						
C 443						
C 444						
C 445						
C 446						
C 447						
C 448						
C 449						
C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503	
C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549	
C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549	
C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680	
C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680	
C 455	WIRELESS MICRO-LH HAT-RACK	CINCH	2	562554	562551	
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427	
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536	
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426	
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426	
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541	
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680	
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426	
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571	
C 464	RR JCT BOX-DDR CONN W.T.	DEUTSCH	12	------	562574	X
C 465	LH CONSOLE-SHIFTER SELECTOR	T & BET	10	------	562429	X
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428	
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428	
C 468			8			
C 469						
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247	
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247	
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690	
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550	
C 474	DRIVER CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248	
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247	
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069	
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069	
C 476						
C 477						X
C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637	
C 479	HVAC MODULE					X
C 480						X
C 481						X
C 482						X
C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	------	562237	X
C 384						X
C 385						X
C 386						
C 387						
C 388						
C 389						
C 390						
C 391						
C 392						
C 393						
C 394						
C 395						
C 396						
C 397						
C 398						
C 399						
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069	
C 501	FR LH UPPER WHELL CPT -PRODRIVER MOD	PED MP	7	562433	------	

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	
C 502	LH CONSOLE-PRE HEATER SW.	SWF	8	------	561107	
C 503	LH CONSOLE-PRE HEATER SW.	SWF	2	------	561837	
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	561188	562363	
C 505	LH CONSOLE ESPAR TIMER	AMP	9	------	562681	
C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687	
C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476	
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515	
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530	
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------	
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------	
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------	
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550	
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417	
C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476	
C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069	
C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069	
C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	562580	
C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385	
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385	
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	------	561183	
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646	
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646	
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646	
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646	
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646	
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646	
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248	
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646	
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646	
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646	
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646	
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646	
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550	
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515	
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247	
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247	
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24			X
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22			X
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690	
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550	
C 543	RR JCT BOX-PARK. BRAKE STOP LTS RESIS.	PED WP	2	561566	561690	
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428	
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550	
C 546						
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646	
C 548	LH DASH PANEL-T.T. LT. TEST SW.	SWF	8	------	561107	
C 549	LH CONSOLE-FAN CLUTCH OVERRIDE SW.	SWF	8	------	561107	
C 550	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695	
C 551	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695	
C 552	LAST LUGG. CPT. -WCL RICON	AMP CPC	9	561636	561637	
C 553	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	--------	562559	
C 554	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	--------	562559	
C 555	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	--------	562559	
C 556	UNDER DASH R.H. - RADIO ACC.	MOLEX	2	562550	562549	
C 557	UNDER DASH R.H. - RADIO ACC.	MOLEX	9	562556	562555	
C 558	UNDER DASH R.H. - RADIO ACC.	MOLEX	4	562507	562503	
C 559	L.H. HAT RACK - PASSENGER SPK.	MOLEX	4	562507	562503	
C 560	SOUND SYS. JCT. PANEL - POWER AMPLI	MOLEX	4	562507	562503	
C 561	L.H. HAT RACK - WIRELESS MICRO	MOLEX	4	562507	562503	
C 562	L.H. HAT RACK - VCP	MOLEX	9	562556	562555	
C 563	L.H MODESTY PANEL - DRIVERS SPK.	MOLEX	4	562507	562503	
C 564	L.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503	
C 565	R.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503	
C 566	L.H. CONSOLE - BOOM MICRO	MOLEX	4	562507	562503	
C 567	L.H. CONSOLE - DRIVERS MICRO	MOLEX	4	562507	562503	

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	
C 568	SOUND SYS. JCT. PANEL - PASS. SPK	CINCH	4	562553	562552	
C 569	SOUND SYS. JCT. PANEL - POWER AMPLI.	MOLEX	9	562556	562555	
C 570	UNDER DASH PANEL TTLT	MOLEX	6	56	562464	X
C 571	UNDER DASH PANEL TTLT	MOLEX	20	56	56	X
C 572	UNDER DASH PANEL TTLT	MOLEX	18	56	56	X
C 573	UNDER DASH PANEL TTLT	MOLEX	16	56	562465	X
C 574	HAT -RACK FLUOR. INDIRECT LIGHTING	MOLEX	6	----------	562759	
C 575						
C 576						
C 577						
C 578						
C 579						
C 580						
C 581						
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690	
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485	
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385	
C 585						
C 586	L.H. DASH PANEL - DISPLAY SET SW.					X
C 587						X
C 588	FRONT SERVICE CMPT. CENTER	AMP. CPC	37	561645	561646	
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669	
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669	
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799	
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799	
C 593	BATTERY CMPT. - CHARGER	PED WP	3	561781	561782	
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803	X
C 595	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476	
C 596	DASH CENTER MODULE - CLOSE DOOR	MOLEX	4	561477	561476	
C 597	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476	
C 598	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476	
C 599	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476	
C 600	ENGINE CMPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471	
C 601	L.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247	
C 602	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476	
C 603	R.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247	
C 604						
C 605	HAT RACK - MOTOR FAN	PED	2	560997	561030	
C 606						
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690	
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690	
C 609	LAVATORY - NIGHT LIGHT					X
C 610	RR JCT BOX	CPC	6	561552	561515	
C 611						
C 612						
C 613						
C 614						
C 615						
C 616						
C 617						
C 618						
C 619						

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C X1	FR LH UPPER WHELL CPT-ABS	WABCO	18		562792
C X2	FR LH UPPER WHELL CPT-ABS	WABCO	6		562793
C X3	FR LH UPPER WHELL CPT-ABS	WABCO	9		562794
C X4	FR LH UPPER WHELL CPT-ABS	WABCO	15		562795`
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
CV I2	RR JCT BOX-WORLD TRANS. SHIFT & RET.	AMP CPC	9	561636	561637
C Y	CLUSTER	JAE	30		562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 7					
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10					
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22					
C 23					
C 24					
C 25					
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690
C 28					
C 29					
C 30					
C 31					
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33					
C 34					
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36					
C 37	RR SECTION-LH HAT RACK	MOLEX	6	562507	562503
C 38	RR SECTION-RH HAT RACK	MOLEX	6	562507	562503
C 39					
C 40					
C 41	LAVATORY ROOF FLUORESCENT	AMP MNL	2	560900	560898
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662
C 44					
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46					
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48					
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577
C 51					
C 52	RR JCT BOX	AMP CPC	22	561709	561710
C 53					
C 54					
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 57					
C 58	RR JCT BOX AC PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX AC PANEL	AMP CPC	14	561584	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	16	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75					
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 78					
C 79					
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100 8	------	562248	------
C 86					
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88	RR END ROOF-CLEARANCE LTS	AMP MNL	2	560900	560898
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS		35	------	641094
C 94					
C 95					
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100					
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	EVAPORATOR COMPT-SPEED MOT CTRL	DEUTSCH	5	------	562566
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115	ENGINE COMPT-AIR DRYER	PED WP	2	561566	561690
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117					
C 118	ENGINE COMPT-LAVATORY FAN	PED WP	2	561566	561690
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-UNLOAD TAG SYSTEM	PED WP	2	561566	561690
C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136					
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 143	LAVATORY DOOR WALL	AMP MNL	3	560908	562006
C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150					
C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	DEUTSCH	2	562486	562485
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	562486	562485
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172	ENGINE COMPT-WATER TANK HEAT.	PED WP	2	561566	561690
C 173	LAV.POTABLE-WATER TANK HEAT.	AMP MNL	2	560900	560898
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C 190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690
C 191	ENGINE CPT RR DOOR RH STOP LT	PED WP	2	561566	561690
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C 193					
C 194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690
C 195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690
C 196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690
C 199	ENGINE CPT RR DOOR LICENCE LT	DOM AUTO	2	930210	------
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 202	RH HAT RACK-INDIRECT LIGHTING	MOLEX	2	---------	562758
C 203	RH HAT RACK-INDIRECT LIGHTING	MOLEX	6	---------	562759
C 204	RH HAT RACK-GENERAL LT	AMP MNL	2	560900	560898
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 206	RH HAT RACK-READING LT	AMP FF	4	----------	562756
C 207	LH HAT RACK-READING LT	AMP FF	4	----------	562756
C 208	LH HAT RACK-BALLAST	MOLEX	2	----------	562758
C 209	LH HAT RACK HOTESS CHIME	AMP MNL	3	561667	561550
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213	FR ROOF-CLEARANCE LT	AMP MNL	2	560900	560898
C 214					
C 215					
C 216					
C 217					
C 218					
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221					
C 222					
C 223					
C 224					
C 225					
C 226					
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233	FR. SERVICE COMPT.	VDO	8		562043
C 234	FR. SERVICE COMPT.	VDO	8		562044
C 235	FR. SERVICE COMPT.	VDO	8		562041
C 236	LUGGAGE COMPARTEMENT	AMP MNL	4	560851	560852
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	2	561566	561690
C 241					
C 242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 243	FR SERVICE CPT-HEADLAMPS	TC	3	------	561071
C 244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812
C 245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812
C 246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 247					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250					
C 251	LH SW PANEL-FAST IDLE	SWF	8	------	561107
C 252	LH SW PANEL-SWITCH LT	SWF	2	------	561837
C 253	LH SW PANEL-ETHER	SWF	8	------	561107
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH SW PANEL-JACOB	SWF	8	------	561107
C 256					
C 257					
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274					
C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 277					
C 278					
C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 280	LH CONSOLE-UNLOAD TAG SW.	NGR	10	------	562763
C 281					
C 282					
C 283					
C 284					
C 285					
C 286	RH SW PANEL-A/C & HEAT	SWF	8	------	561107
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	SWF	8	------	561107
C 289	RH SW PANEL-SWITCH LT	SWF	2	------	561837
C 290					
C 291					
C 292					
C 293					
C 294					
C 295					
C 296					
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299	LH CONSOLE SW-GALLEY	SWF	8	------	561107
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH CONSOLE SW-LUG. DOOR LCK	SWF	8	------	561107
C 311	LH CONSOLE SW-HOS & PAS CHIME	SWF	8	------	561107

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 312	LH CONSOLE SW-READING LTS	SWF	8	------	561107
C 313	LH CONSOLE SW-GEN & FLUOR LTS	SWF	8	------	561107
C 314	LH CONSOLE SW-FR DEST. SIGN	SWF	8	------	561107
C 315	LH CONSOLE SW-LH STORE	SWF	8	------	561107
C 316	LH CONSOLE SPARE SWITCH	SWF	8	------	561107
C 317	LH CONSOLE SW-RH STORE	SWF	8	------	561107
C 318	LH CONSOLE SW-DRV WINDOW LIFT	SWF	8	------	561107
C 319					
C 320	LH CONSOLE SW-DRIVER'S LTS	SWF	8	------	561107
C 321					
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637
C 324					
C 325	LH CONSOLE SW-KNEELING	SWF	8	------	561107
C 326	LH CONSOLE SW-SPARE	SWF	8	------	561107
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330	GALLEY MICROWAVE SW LT	SWF	2	------	561837
C 331	GALLEY MICROWAVE SW	SWF	8	------	561107
C 332	GALLEY RH CONTAINER SW LT	SWF	2	------	561837
C 333	GALLEY RH CONTAINER SW	SWF	8	------	561107
C 334	GALLEY LH CONTAINER SW	SWF	8	------	561107
C 335	GALLEY LH CONTAINER SW LT	SWF	2	------	561837
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	SWF	8	------	561107
C 338	INSTR PANEL LH-UP DEFROST SW	SWF	8	------	561107
C 339	INSTR PANEL LH-UP WASHER SW	SWF	8	------	561107
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	SWF	8	------	561107
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	SWF	8	------	561107
C 344	INSTR PANEL LH-HAZARD LT SW	SWF	8	------	561107
C 345	INSTR PANEL LH-FOG LT SW	SWF	8	------	561107
C 346	INSTR PANEL LH-SWITCH LTS	SWF	2	------	561837
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360					
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 376					
C 377	LH SW PANEL-STOP ENG.OVERIDE	SWF	8	------	561107
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381					
C 382					
C 383					
C 384					
C 385					
C 386	LH CONSOLE-WCL POWER SYSTEM	SWF	8	------	561107
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734
C 389	WCL REAR DOOR	MOLEX	4	561477	561476
C 390	LAVATORY WALL-WCL REMOTE CTR	SWF	8	------	561107
C 391	LAVATORY WALL-WCL LAMP	SWF	8	------	561107
C 392	LAVATORY WALL-WCL SW. LT.	SWF	2	------	561835
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	------	------
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399					
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402	RR DRIVE AXLE-AIR DRYER	PED MP	2	------	562251
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247
C 404	GALLEY LAMP	AMP MNL	2	561248	561247
C 405					
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH SW PANEL-MASTER SWITCH	SWF	8	------	561107
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9	561670	561669
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562237	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	INSTR. PANEL LH-HTR WINDSH.SW	SWF	8	------	561107
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	------
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427					
C 428					
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	DEUTSCH	4	562479	562477
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 438					
C 439					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 440					
C 441					
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680
C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 455	WIRELESS MICRO-LH HAT-RACK	CINCH	2	562554	562551
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDR CONN W.T.	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468			8		
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 479	HVAC MODULE				
C 480					
C 481					
C 482					
C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	------	562237
C 384					
C 385					
C 386					
C 387					
C 388					
C 389					
C 390					
C 391					
C 392					
C 393					
C 394					
C 395					
C 396					
C 397					
C 398					
C 399					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER	PED MP	7	562433	------

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 502	LH CONSOLE-PRE HEATER SW.	SWF	8	------	561107
C 503	LH CONSOLE-PRE HEATER SW.	SWF	2	------	561837
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	561188	562363
C 505	LH CONSOLE ESPAR TIMER	AMP	9	------	562681
C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	562580
C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	------	561183
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 543	RR JCT BOX-PARK. BRAKE STOP LTS RESIS.	PED WP	2	561566	561690
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 546					
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	SWF	8	------	561107
C 549	LH CONSOLE-FAN CLUTCH OVERRIDE SW.	SWF	8	------	561107
C 550	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 551	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 552	LAST LUGG. CPT. -WCL RICON	AMP CPC	9	561636	561637
C 553	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 554	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 555	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 556	UNDER DASH R.H. - RADIO ACC.	MOLEX	2	562550	562549
C 557	UNDER DASH R.H. - RADIO ACC.	MOLEX	9	562556	562555
C 558	UNDER DASH R.H. - RADIO ACC.	MOLEX	4	562507	562503
C 559	L.H. HAT RACK - PASSENGER SPK.	MOLEX	4	562507	562503
C 560	SOUND SYS. JCT. PANEL - POWER AMPLI	MOLEX	4	562507	562503
C 561	L.H. HAT RACK - WIRELESS MICRO	MOLEX	4	562507	562503
C 562	L.H. HAT RACK - VCP	MOLEX	9	562556	562555
C 563	L.H MODESTY PANEL - DRIVERS SPK.	MOLEX	4	562507	562503
C 564	L.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 565	R.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 566	L.H. CONSOLE - BOOM MICRO	MOLEX	4	562507	562503
C 567	L.H. CONSOLE - DRIVERS MICRO	MOLEX	4	562507	562503

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 568	SOUND SYS. JCT. PANEL - PASS. SPK	CINCH	4	562553	562552
C 569	SOUND SYS. JCT. PANEL - POWER AMPLI.	MOLEX	9	562556	562555
C 570	UNDER DASH PANEL TTLT	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT	MOLEX	16		562465
C 574	HAT -RACK FLUOR. INDIRECT LIGHTING	MOLEX	6	----------	562759
C 575					
C 576					
C 577					
C 578					
C 579					
C 580					
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587					
C 588	FRONT SERVICE CPT. CENTER SOUND SYS.	AMP. CPC	37	561645	561646
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593	BATTERY CMPT. - CHARGER	PED WP	3	561781	561782
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476
C 596	DASH CENTER MODULE - CLOSE DOOR	MOLEX	4	561477	561476
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601	L.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 602	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 603	R.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 604					
C 605	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 606	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
C 609	LAVATORY - NIGHT LIGHT				
C 610	RR JCT BOX	AMP MNL	6	561552	561515
C 611					
C 612					
C 613					
C 614					
C 615					
C 616					
L X	CLUSTER	JAE	22		562766
L Y	CLUSTER	JAE	30		562767
R X	CLUSTER	JAE	22		562764

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C AA1	BEHIND DASH - SONALERT	BOSCH	5		561183
C AA2	BEHIND DASH - SONALERT	BOSCH	5		561183
C X1	FR LH UPPER WHELL CPT-ABS	WABCO	18		562792
C X2	FR LH UPPER WHELL CPT-ABS	WABCO	6		562793
C X3	FR LH UPPER WHELL CPT-ABS	WABCO	9		562794
C X4	FR LH UPPER WHELL CPT-ABS	WABCO	15		562795`
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
CV I2	RR JCT BOX-WORLD TRANSM. & EATON	AMP CPC	9	561636	561637
C Y	CLUSTER	JAE	30		562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 7					
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10					
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22	RR JCT BOX - EATON TRANSM.	AMP MNL	6	561552	561515
C 23	DDEC ENGINE-ECM J1939	PED MP	6	-------	561962
C 24	DDEC ENGINE	PED WP	1	561605	561577
C 25	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690
C 28	EATON TRANSMISSION	DEUTCH	3	562877	562884
C 29	EATON TRANSMISSION	PED MP	6	562878	------
C 30	RR JCT BOX - ECU EATON TRANSM.	PED MP	32	------	562866
C 31	RR JCT BOX - ECU EATON TRANSM.	PED MP	24	------	562865
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33	RR JCT BOX - EATON TRANSM.	DEUTCH	9	562531	------
C 34	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	3	------	562871
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	24	------	562874
C 37	RR SECTION-LH HAT RACK	MOLEX	6	562558	562557
C 38	RR SECTION-RH HAT RACK	MOLEX	6	562558	562557
C 39	LH CONSOLE - EATON TRANSM. DISPLAY	AMP MNL	4	561551	561668
C 40	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 41	LAVATORY ROOF FLUORESCENT	AMP MNL	2	560900	560898
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662
C 44	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48					
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577
C 51					
C 52	RR JCT BOX	AMP CPC	22	561709	561710
C 53					
C 54					
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 57					
C 58	RR JCT BOX AC PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX AC PANEL	AMP CPC	14	561584	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	16	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75					
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 78					
C 79					
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100	------	562248	------
C 86					
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88	RR END ROOF-CLEARANCE LTS	AMP MNL	2	560900	560898
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS		35	------	641094
C 94					
C 95	CONDENSOR CPT - LIQ. SOL. VALVE	PED WP	2	561566	561690
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100					
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	EVAPORATOR COMPT-SPEED MOT CTRL	DEUTSCH	5	------	562566
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115	ENGINE COMPT-AIR DRYER	PED WP	2	561566	561690
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117					
C 118	ENGINE COMPT-LAVATORY FAN	PED WP	2	561566	561690
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-UNLOAD TAG SYSTEM	PED WP	2	561566	561690
C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX - A/C PANEL DIODE CONN.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 143	LAVATORY DOOR WALL	AMP MNL	3	560908	562006
C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150					
C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	DEUTSCH	2	562486	562485
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	562486	562485
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172	ENGINE COMPT-WATER TANK HEAT.	PED WP	2	561566	561690
C 173	LAV.POTABLE-WATER TANK HEAT.	AMP MNL	2	560900	560898
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C 190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690
C 191	ENGINE CPT RR DOOR RH STOP LT	PED WP	2	561566	561690
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C 193					
C 194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690
C 195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690
C 196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690
C 199	ENGINE CPT RR DOOR LICENCE LT	DOM AUTO	2	930210	------
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 202	RH HAT RACK-INDIRECT LIGHTING	MOLEX	2	---------	562758
C 203	RH HAT RACK-INDIRECT LIGHTING	MOLEX	6	---------	562759
C 204	RH HAT RACK-GENERAL LT	AMP MNL	2	560900	560898
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 206	RH HAT RACK-READING LT	AMP FF	4	----------	562756
C 207	LH HAT RACK-READING LT	AMP FF	4	----------	562756
C 208	LH HAT RACK-BALLAST	MOLEX	2	----------	562758
C 209	LH HAT RACK HOTESS CHIME	AMP MNL	3	561667	561550
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213	FR ROOF-CLEARANCE LT	AMP MNL	2	560900	560898
C 214	ENGINE CPT J1922				
C 215	TAG AXLE - A.T.C. SYSTEM				
C 216	TAG AXLE - A.T.C. SYSTEM				
C 217					
C 218					
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221					
C 222					
C 223					
C 224					
C 225					
C 226					
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233	FR. SERVICE COMPT.	VDO	8		562043
C 234	FR. SERVICE COMPT.	VDO	8		562044
C 235	FR. SERVICE COMPT.	VDO	8		562041
C 236	LUGGAGE COMPARTEMENT	AMP MNL	4	560851	560852
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	2	561566	561690
C 241					
C 242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 243	FR SERVICE CPT-HEADLAMPS	TC	3	------	561071
C 244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812
C 245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812
C 246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 247					
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250					
C 251	LH SW PANEL-FAST IDLE	EATON	8	------	562763
C 252					
C 253	LH SW PANEL-ETHER	EATON	8	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH SW PANEL-JACOB	EATON	8	------	562763
C 256					
C 257					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274					
C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 277					
C 278					
C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 280	LH CONSOLE-UNLOAD TAG SW.	NGR	10	------	562763
C 281					
C 282					
C 283					
C 284					
C 285					
C 286	RH SW PANEL-A/C & HEAT	EATON	8	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	8	------	562763
C 289					
C 290					
C 291					
C 292					
C 293					
C 294					
C 295					
C 296					
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299	LH CONSOLE SW-GALLEY	EATON	8	------	562763
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH CONSOLE SW-LUG. DOOR LCK	EATON	8	------	562763
C 311	LH CONSOLE SW-HOS & PAS CHIME	EATON	8	------	562763
C 312	LH CONSOLE SW-READING LTS	EATON	8	------	562763
C 313	LH CONSOLE SW-GEN & FLUOR LTS	EATON	8	------	562763
C 314	LH CONSOLE SW-FR DEST. SIGN	EATON	8	------	562763
C 315	LH CONSOLE SW-LH STORE	EATON	8	------	562763
C 316	LH CONSOLE SPARE SWITCH	EATON	8	------	562763
C 317	LH CONSOLE SW-RH STORE	EATON	8	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	8	------	562763
C 319					
C 320	LH CONSOLE SW-DRIVER'S LTS	EATON	8	------	562763
C 321					
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637
C 324					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 325	LH CONSOLE SW-KNEELING	EATON	8	------	562763
C 326	LH CONSOLE SW-SPARE	EATON	8	------	562763
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331	GALLEY MICROWAVE SW	EATON	8	------	562763
C 332					
C 333	GALLEY RH CONTAINER SW	EATON	8	------	562763
C 334	GALLEY LH CONTAINER SW	EATON	8	------	562763
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346					
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360					
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376					
C 377	LH SW PANEL-STOP ENG.OVERIDE	EATON	8	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381					
C 382					
C 383					
C 384					
C 385					
C 386	LH CONSOLE-WCL POWER SYSTEM	EATON	8	------	562763
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734
C 389	WCL REAR DOOR	MOLEX	4	561477	561476
C 390	LAVATORY WALL-WCL REMOTE CTR	EATON	8	------	562763
C 391	LAVATORY WALL-WCL LAMP	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 392	LAVATORY WALL-WCL SW. LT.	EATON	2	------	561835
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	------	------
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399					
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402	RR DRIVE AXLE-AIR DRYER	PED MP	2	------	562251
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247
C 404	GALLEY LAMP	AMP MNL	2	561248	561247
C 405					
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH SW PANEL-MASTER SWITCH	EATON	8	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9	561670	561669
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562237	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	INSTR. PANEL LH-HTR WINDSH.SW	EATON	8	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	------
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427					
C 428					
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	DEUTSCH	4	562479	562477
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 438					
C 439					
C 440					
C 441					
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680
C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 455	WIRELESS MICRO-LH HAT-RACK	CINCH	2	562554	562551
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDR CONNECTOR	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468			8		
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 479	HVAC MODULE				
C 480	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	4	561889	561890
C 481	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	------	562237
C 484	UNDER DASH LH.-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH.-DASH & DEFR. DAM.MOT.	AMP MNL	3	561667	561550
C 486					
C 487					
C 488					
C 489					
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER	PED MP	7	562433	------
C 502	LH CONSOLE-PRE HEATER SW.	EATON	8	------	562763
C 503	LH CONSOLE-PRE HEATER SW.	EATON	2	------	561837
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	9	------	562681
C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	562580
C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	------	561183
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 543	RR JCT BOX-PARK. BRAKE STOP LTS RESIS.	PED WP	2	561566	561690
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 546					
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	8	------	562763
C 549	LH CONSOLE-FAN CLUTCH OVERRIDE SW.	EATON	8	------	562763
C 550	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 551	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 552	LAST LUGG. CPT. -WCL RICON	AMP CPC	9	561636	561637
C 553	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 554	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 555	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 556	UNDER DASH R.H. - RADIO ACC.	MOLEX	2	562550	562549
C 557	UNDER DASH R.H. - RADIO ACC.	MOLEX	9	562556	562555
C 558	UNDER DASH R.H. - RADIO ACC.	MOLEX	4	562507	562503
C 559	L.H. HAT RACK - PASSENGER SPK.	MOLEX	4	562507	562503
C 560	SOUND SYS. JCT. PANEL - POWER AMPLI	MOLEX	4	562507	562503
C 561	L.H. HAT RACK - WIRELESS MICRO	MOLEX	4	562507	562503
C 562	L.H. HAT RACK - VCP	MOLEX	9	562556	562555
C 563	L.H MODESTY PANEL - DRIVERS SPK.	MOLEX	4	562507	562503
C 564	L.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 565	R.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 566	L.H. CONSOLE - BOOM MICRO	MOLEX	4	562507	562503
C 567	L.H. CONSOLE - DRIVERS MICRO	MOLEX	4	562507	562503
C 568	SOUND SYS. JCT. PANEL - PASS. SPK	CINCH	4	562553	562552
C 569	SOUND SYS. JCT. PANEL - POWER AMPLI.	MOLEX	9	562556	562555
C 570	UNDER DASH PANEL TTLT	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT	MOLEX	16		562465
C 574	HAT -RACK FLUOR. INDIRECT LIGHTING	MOLEX	6	----------	562759
C 575	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 576	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 577	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 578	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 579					
C 580					
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587					
C 588	FRONT SERVICE CPT. CENTER SOUND SYS.	AMP. CPC	37	561645	561646
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593	BATTERY CMPT. - CHARGER	PED WP	3	561781	561782
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476
C 596	DASH CENTER MODULE - CLOSE DOOR	MOLEX	4	561477	561476
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601	L.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 602	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 603	R.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 604					
C 605	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 606	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
C 609	LAVATORY - NIGHT LIGHT				
C 610	RR JCT BOX	AMP MNL	6	561552	561515
C 611	HAT RACK READING LTS RICON	MOLEX	6	562558	562557
C 612	HAT -RACK FLUOR. INSTATION LTS RICON	MOLEX	4	562507	562503
C 613	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 614	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 615					
C 616					
L X	CLUSTER	JAE	22		562766
L Y	CLUSTER	JAE	30		562767
R X	CLUSTER	JAE	22		562764

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C AA1	BEHIND DASH - SONALERT	BOSCH	5		561183
C AA2	BEHIND DASH - SONALERT	BOSCH	5		561183
C X1	FR LH UPPER WHELL CPT-ABS	WABCO	18		562792
C X2	FR LH UPPER WHELL CPT-ABS	WABCO	6		562793
C X3	FR LH UPPER WHELL CPT-ABS	WABCO	9		562794
C X4	FR LH UPPER WHELL CPT-ABS	WABCO	15		562795`
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
CV I2	RR JCT BOX-WORLD TRANSM. & EATON	AMP CPC	9	561636	561637
C Y	CLUSTER	JAE	30		562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 7					
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10					
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22	RR JCT BOX - EATON TRANSM.	AMP MNL	6	561552	561515
C 23	DDEC ENGINE-ECM J1939	PED MP	6	-------	561962
C 24	DDEC ENGINE	PED WP	1	561605	561577
C 25	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690
C 28	EATON TRANSMISSION	DEUTCH	3	562877	562884
C 29	EATON TRANSMISSION	PED MP	6	562878	------
C 30	RR JCT BOX - ECU EATON TRANSM.	PED MP	32	------	562866
C 31	RR JCT BOX - ECU EATON TRANSM.	PED MP	24	------	562865
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33	RR JCT BOX - EATON TRANSM.	DEUTCH	9	562531	------
C 34	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	3	------	562871
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	24	------	562874
C 37	RR SECTION-LH HAT RACK	MOLEX	6	562558	562557
C 38	RR SECTION-RH HAT RACK	MOLEX	6	562558	562557
C 39	LH CONSOLE - EATON TRANSM. DISPLAY	AMP MNL	4	561551	561668
C 40	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 41	LAVATORY ROOF FLUORESCENT	AMP MNL	2	560900	560898
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662
C 44	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48					
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577
C 51					
C 52	RR JCT BOX	AMP CPC	22	561709	561710
C 53					
C 54					
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 57					
C 58	RR JCT BOX AC PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX AC PANEL	AMP CPC	14	561584	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	16	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75					
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 78					
C 79					
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100	------	562248	------
C 86					
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88	RR END ROOF-CLEARANCE LTS	AMP MNL	2	560900	560898
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS		35	------	641094
C 94					
C 95	CONDENSOR CPT - LIQ. SOL. VALVE	PED WP	2	561566	561690
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100					
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	EVAPORATOR COMPT-SPEED MOT CTRL	DEUTSCH	5	------	562566
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115	ENGINE COMPT-AIR DRYER	PED WP	2	561566	561690
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117					
C 118	ENGINE COMPT-LAVATORY FAN	PED WP	2	561566	561690
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-UNLOAD TAG SYSTEM	PED WP	2	561566	561690
C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX - A/C PANEL DIODE CONN.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 143	LAVATORY DOOR WALL	AMP MNL	3	560908	562006
C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150					
C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	DEUTSCH	2	562486	562485
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	562486	562485
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172	ENGINE COMPT-WATER TANK HEAT.	PED WP	2	561566	561690
C 173	LAV.POTABLE-WATER TANK HEAT.	AMP MNL	2	560900	560898
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C 190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690
C 191	ENGINE CPT RR DOOR RH STOP LT	PED WP	2	561566	561690
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C 193					
C 194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690
C 195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690
C 196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690
C 199	ENGINE CPT RR DOOR LICENCE LT	DOM AUTO	2	930210	------
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 202	RH HAT RACK-INDIRECT LIGHTING	MOLEX	2	---------	562758
C 203	RH HAT RACK-INDIRECT LIGHTING	MOLEX	6	---------	562759
C 204	RH HAT RACK-GENERAL LT	AMP MNL	2	560900	560898
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 206	RH HAT RACK-READING LT	AMP FF	4	----------	562756
C 207	LH HAT RACK-READING LT	AMP FF	4	----------	562756
C 208	LH HAT RACK-BALLAST	MOLEX	2	----------	562758
C 209	LH HAT RACK HOTESS CHIME	AMP MNL	3	561667	561550
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213	FR ROOF-CLEARANCE LT	AMP MNL	2	560900	560898
C 214	ENGINE CPT J1922				
C 215	TAG AXLE - A.T.C. SYSTEM				
C 216	TAG AXLE - A.T.C. SYSTEM				
C 217	RH DASH PANEL-FRONT CAMERA SW	EATON	8	--------	562763
C 218	RH DASH PANEL-FRONT CAMERA SW	AMP MNL	2	560900	560898
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221					
C 222					
C 223					
C 224					
C 225					
C 226					
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233	FR. SERVICE COMPT.	VDO	8		562043
C 234	FR. SERVICE COMPT.	VDO	8		562044
C 235	FR. SERVICE COMPT.	VDO	8		562041
C 236	LUGGAGE COMPARTEMENT	AMP MNL	4	560851	560852
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	2	561566	561690
C 241					
C 242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 243	FR SERVICE CPT-HEADLAMPS	TC	3	------	561071
C 244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812
C 245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812
C 246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 247					
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250					
C 251	LH DASH PANEL-FAST IDLE SW	EATON	8	------	562763
C 252					
C 253	LH DASH PANEL-ETHER SW	EATON	8	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH DASH PANEL-JACOB & RETARDER SW	EATON	8	------	562763
C 256					
C 257					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274					
C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 277					
C 278					
C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 280	LH CONSOLE-UNLOAD TAG SW.	NGR	10	------	562763
C 281					
C 282					
C 283					
C 284					
C 285					
C 286	RH SW PANEL-A/C & HEAT	EATON	8	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	8	------	562763
C 289					
C 290					
C 291					
C 292					
C 293					
C 294					
C 295					
C 296					
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299	RH DASH PANEL SW-GALLEY	EATON	8	------	562763
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH DASH PANEL -LUG. DOOR LCK SW	EATON	8	------	562763
C 311	RH DASH PANEL -HOS & PAS CHIME SW	EATON	8	------	562763
C 312	RH DASH PANEL -READING LTS SW	EATON	8	------	562763
C 313	RH DASH PANEL -GEN & FLUOR LTS SW	EATON	8	------	562763
C 314	LH DASH PANEL-FR DEST. SIGN SW	EATON	8	------	562763
C 315	LH DASH PANEL-LH STORE SW	EATON	8	------	562763
C 316	LH CONSOLE SPARE SWITCH	EATON	8	------	562763
C 317	LH DASH PANEL-RH STORE SW	EATON	8	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	8	------	562763
C 319					
C 320	RH DASH PANEL-DRIVER'S LTS SW	EATON	8	------	562763
C 321					
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637
C 324					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 325	LH DASH PANEL-KNEELING SW	EATON	8	------	562763
C 326	LH CONSOLE SW-SPARE	EATON	8	------	562763
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331	GALLEY MICROWAVE SW	EATON	8	------	562763
C 332					
C 333	GALLEY RH CONTAINER SW	EATON	8	------	562763
C 334	GALLEY LH CONTAINER SW	EATON	8	------	562763
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346					
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360					
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376					
C 377	LH DASH PANEL-STOP ENG.OVERIDE SW	EATON	8	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381					
C 382					
C 383					
C 384					
C 385					
C 386	LH DASH PANEL-WCL POWER SYSTEM SW	EATON	8	------	562763
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734
C 389	WCL REAR DOOR	MOLEX	4	561477	561476
C 390	LAVATORY WALL-WCL REMOTE CTR	EATON	8	------	562763
C 391	LAVATORY WALL-WCL LAMP	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 392	LAVATORY WALL-WCL SW. LT.	EATON	2	------	561835
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	------	------
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399					
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402	RR DRIVE AXLE-AIR DRYER	PED MP	2	------	562251
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247
C 404	GALLEY LAMP	AMP MNL	2	561248	561247
C 405					
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH DASH PANEL-MASTER SWITCH SW	EATON	8	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9	561670	561669
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562237	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	LH DASH PANEL-HTR WINDSH.SW	EATON	8	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	------
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427					
C 428					
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	DEUTSCH	4	562479	562477
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 438					
C 439					
C 440					
C 441					
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680
C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 455	WIRELESS MICRO-LH HAT-RACK	CINCH	2	562554	562551
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDR CONNECTOR	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468			8		
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 479	HVAC MODULE				
C 480	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	4	561889	561890
C 481	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	------	562237
C 484	UNDER DASH LH.-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH.-DASH & DEFR. DAM.MOT.	AMP MNL	3	561667	561550
C 486					
C 487					
C 488					
C 489					
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER	PED MP	7	562433	------
C 502	LH DASH PANEL-PRE HEATER SW.	EATON	8	------	562763
C 503	LH CONSOLE-PRE HEATER SW.	EATON	2	------	561837
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	9	------	562681
C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	562580
C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	------	561183
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 543	RR JCT BOX-PARK. BRAKE STOP LTS RESIS.	PED WP	2	561566	561690
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 546					
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	8	------	562763
C 549	LH DASH PANEL-FAN CLUTCH OVERR. SW	EATON	8	------	562763
C 550	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 551	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 552	LAST LUGG. CPT. -WCL RICON	AMP CPC	9	561636	561637
C 553	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 554	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 555	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 556	UNDER DASH R.H. - RADIO ACC.	MOLEX	2	562550	562549
C 557	UNDER DASH R.H. - RADIO ACC.	MOLEX	9	562556	562555
C 558	UNDER DASH R.H. - RADIO ACC.	MOLEX	4	562507	562503
C 559	L.H. HAT RACK - PASSENGER SPK.	MOLEX	4	562507	562503
C 560	SOUND SYS. JCT. PANEL - POWER AMPLI	MOLEX	4	562507	562503
C 561	L.H. HAT RACK - WIRELESS MICRO	MOLEX	4	562507	562503
C 562	L.H. HAT RACK - VCP	MOLEX	9	562556	562555
C 563	L.H MODESTY PANEL - DRIVERS SPK.	MOLEX	4	562507	562503
C 564	L.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 565	R.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 566	L.H. CONSOLE - BOOM MICRO	MOLEX	4	562507	562503
C 567	L.H. CONSOLE - DRIVERS MICRO	MOLEX	4	562507	562503
C 568	SOUND SYS. JCT. PANEL - PASS. SPK	CINCH	4	562553	562552
C 569	SOUND SYS. JCT. PANEL - POWER AMPLI.	MOLEX	9	562556	562555
C 570	UNDER DASH PANEL TTLT	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT	MOLEX	16		562465
C 574	HAT -RACK FLUOR. INDIRECT LIGHTING	MOLEX	6	----------	562759
C 575	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 576	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 577	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 578	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 579					
C 580	RH DASH PANEL-HAT RACK FAN SW	EATON	8	--------	562763
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587					
C 588	FRONT SERVICE CPT. CENTER SOUND SYS.	AMP. CPC	37	561645	561646
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593	BATTERY CMPT. - CHARGER	PED WP	3	561781	561782
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476
C 596	DASH CENTER MODULE - CLOSE DOOR	MOLEX	4	561477	561476
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601	L.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 602	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 603	R.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 604					
C 605	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 606	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
C 609	LAVATORY - NIGHT LIGHT				
C 610	RR JCT BOX	AMP MNL	6	561552	561515
C 611	HAT RACK READING LTS RICON	MOLEX	6	562558	562557
C 612	HAT -RACK FLUOR. INSTATION LTS RICON	MOLEX	4	562507	562503
C 613	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 614	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 615					
C 616					
L X	CLUSTER	JAE	22		562766
L Y	CLUSTER	JAE	30		562767
R X	CLUSTER	JAE	22		562764

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C AA1	BEHIND DASH - SONALERT	BOSCH	5		561183
C AA2	BEHIND DASH - SONALERT	BOSCH	5		561183
C X1	FR LH UPPER WHELL CPT-ABS	WABCO	18		562792
C X2	FR LH UPPER WHELL CPT-ABS	WABCO	6		562793
C X3	FR LH UPPER WHELL CPT-ABS	WABCO	9		562794
C X4	FR LH UPPER WHELL CPT-ABS	WABCO	15		562795`
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
CV I2	RR JCT BOX-WORLD TRANSM. & EATON	AMP CPC	9	561636	561637
C Y	CLUSTER	JAE	30		562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 7					
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10					
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22	RR JCT BOX - EATON TRANSM.	AMP MNL	6	561552	561515
C 23	DDEC ENGINE-ECM J1939	PED MP	6	-------	561962
C 24	DDEC ENGINE	PED WP	1	561605	561577
C 25	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690
C 28	EATON TRANSMISSION	DEUTCH	3	562877	562884
C 29	EATON TRANSMISSION	PED MP	6	562878	------
C 30	RR JCT BOX - ECU EATON TRANSM.	PED MP	32	------	562866
C 31	RR JCT BOX - ECU EATON TRANSM.	PED MP	24	------	562865
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33	RR JCT BOX - EATON TRANSM.	DEUTCH	9	562531	------
C 34	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	3	------	562871
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	24	------	562874
C 37	RR SECTION-LH HAT RACK	MOLEX	6	562558	562557
C 38	RR SECTION-RH HAT RACK	MOLEX	6	562558	562557
C 39	LH CONSOLE - EATON TRANSM. DISPLAY	AMP MNL	4	561551	561668
C 40	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 41	LAVATORY ROOF FLUORESCENT	AMP MNL	2	560900	560898
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662
C 44	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48					
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577
C 51					
C 52	RR JCT BOX	AMP CPC	22	561709	561710
C 53					
C 54					
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 57					
C 58	RR JCT BOX AC PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX AC PANEL	AMP CPC	14	561584	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	16	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75					
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 78					
C 79					
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100	------	562248	------
C 86					
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88	RR END ROOF-CLEARANCE LTS	AMP MNL	2	560900	560898
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS		35	------	641094
C 94					
C 95	CONDENSOR CPT - LIQ. SOL. VALVE	PED WP	2	561566	561690
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100	LH CONSOLE – 120 VOLTS SWITCH	EATON	8	------	562763
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	EVAPORATOR COMPT-SPEED MOT CTRL	DEUTSCH	5	------	562566
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115	ENGINE COMPT-AIR DRYER	PED WP	2	561566	561690
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117					
C 118	ENGINE COMPT-LAVATORY FAN	PED WP	2	561566	561690
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-UNLOAD TAG SYSTEM	PED WP	2	561566	561690
C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX - A/C PANEL DIODE CONN.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 143	LAVATORY DOOR WALL	AMP MNL	3	560908	562006
C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150					
C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	DEUTSCH	2	562486	562485
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	562486	562485
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172	ENGINE COMPT-WATER TANK HEAT.	PED WP	2	561566	561690
C 173	LAV.POTABLE-WATER TANK HEAT.	AMP MNL	2	560900	560898
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C 190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690
C 191	ENGINE CPT RR DOOR RH STOP LT	PED WP	2	561566	561690
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C 193					
C 194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690
C 195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690
C 196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690
C 199	ENGINE CPT RR DOOR LICENCE LT	DOM AUTO	2	930210	------
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 202	RH HAT RACK-INDIRECT LIGHTING	MOLEX	2	---------	562758
C 203	RH HAT RACK-INDIRECT LIGHTING	MOLEX	6	---------	562759
C 204	RH HAT RACK-GENERAL LT	AMP MNL	2	560900	560898
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 206	RH HAT RACK-READING LT	AMP FF	4	----------	562756
C 207	LH HAT RACK-READING LT	AMP FF	4	----------	562756
C 208	LH HAT RACK-BALLAST	MOLEX	2	----------	562758
C 209	LH HAT RACK HOTESS CHIME	AMP MNL	3	561667	561550
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213	FR ROOF-CLEARANCE LT	AMP MNL	2	560900	560898
C 214	ENGINE CPT J1922				
C 215	TAG AXLE - A.T.C. SYSTEM				
C 216	TAG AXLE - A.T.C. SYSTEM				
C 217	RH DASH PANEL-FRONT CAMERA SW	EATON	8	--------	562763
C 218	RH DASH PANEL-FRONT CAMERA SW	AMP MNL	2	560900	560898
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221					
C 222					
C 223					
C 224					
C 225					
C 226					
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233	FR. SERVICE COMPT.	VDO	8		562043
C 234	FR. SERVICE COMPT.	VDO	8		562044
C 235	FR. SERVICE COMPT.	VDO	8		562041
C 236	LUGGAGE COMPARTEMENT	AMP MNL	4	560851	560852
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	2	561566	561690
C 241					
C 242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 243	FR SERVICE CPT-HEADLAMPS	TC	3	------	561071
C 244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812
C 245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812
C 246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 247					
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250					
C 251	LH DASH PANEL-FAST IDLE SW	EATON	8	------	562763
C 252					
C 253	LH DASH PANEL-ETHER SW	EATON	8	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH DASH PANEL-JACOB & RETARDER SW	EATON	8	------	562763
C 256					
C 257					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274	RR. JCT. BOX – SIGNAL ALT. MODULE				
C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 277					
C 278					
C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 280	LH CONSOLE-UNLOAD TAG SW.	NGR	10	------	562763
C 281					
C 282					
C 283					
C 284					
C 285					
C 286	RH SW PANEL-A/C & HEAT	EATON	8	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	8	------	562763
C 289					
C 290					
C 291					
C 292					
C 293					
C 294					
C 295					
C 296					
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299	RH DASH PANEL SW-GALLEY	EATON	8	------	562763
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH DASH PANEL -LUG. DOOR LCK SW	EATON	8	------	562763
C 311	RH DASH PANEL -HOS & PAS CHIME SW	EATON	8	------	562763
C 312	RH DASH PANEL -READING LTS SW	EATON	8	------	562763
C 313	RH DASH PANEL -GEN & FLUOR LTS SW	EATON	8	------	562763
C 314	LH DASH PANEL-FR DEST. SIGN SW	EATON	8	------	562763
C 315	LH DASH PANEL-LH STORE SW	EATON	8	------	562763
C 316	LH CONSOLE SPARE SWITCH	EATON	8	------	562763
C 317	LH DASH PANEL-RH STORE SW	EATON	8	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	8	------	562763
C 319					
C 320	RH DASH PANEL-DRIVER'S LTS SW	EATON	8	------	562763
C 321					
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637
C 324					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 325	LH DASH PANEL-KNEELING SW	EATON	8	------	562763
C 326	LH CONSOLE SW-SPARE	EATON	8	------	562763
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331	GALLEY MICROWAVE SW	EATON	8	------	562763
C 332					
C 333	GALLEY RH CONTAINER SW	EATON	8	------	562763
C 334	GALLEY LH CONTAINER SW	EATON	8	------	562763
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346					
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360					
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376					
C 377	LH DASH PANEL-STOP ENG.OVERIDE SW	EATON	8	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381					
C 382					
C 383					
C 384					
C 385					
C 386	LH DASH PANEL-WCL POWER SYSTEM SW	EATON	8	------	562763
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734
C 389	WCL REAR DOOR	MOLEX	4	561477	561476
C 390	LAVATORY WALL-WCL REMOTE CTR	EATON	8	------	562763
C 391	LAVATORY WALL-WCL LAMP	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 392	LAVATORY WALL-WCL SW. LT.	EATON	2	------	561835
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	------	------
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. – PRE-EXITATION ALT.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402	RR DRIVE AXLE-AIR DRYER	PED MP	2	------	562251
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247
C 404	GALLEY LAMP	AMP MNL	2	561248	561247
C 405					
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH DASH PANEL-MASTER SWITCH SW	EATON	8	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9	561670	561669
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562237	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	LH DASH PANEL-HTR WINDSH.SW	EATON	8	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	------
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427					
C 428					
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	DEUTSCH	4	562479	562477
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 438					
C 439					
C 440					
C 441					
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680
C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 455	WIRELESS MICRO-LH HAT-RACK	CINCH	2	562554	562551
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDR CONNECTOR	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468			8		
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 479	HVAC MODULE				
C 480	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	4	561889	561890
C 481	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	------	562237
C 484	UNDER DASH LH.-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH.-DASH & DEFR. DAM.MOT.	AMP MNL	3	561667	561550
C 486					
C 487					
C 488					
C 489					
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER	PED MP	7	562433	------
C 502	LH DASH PANEL-PRE HEATER SW.	EATON	8	------	562763
C 503	LH CONSOLE-PRE HEATER SW.	EATON	2	------	561837
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	9	------	562681
C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	562580
C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	------	561183
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 543	RR JCT BOX-PARK. BRAKE STOP LTS RESIS.	PED WP	2	561566	561690
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 546					
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	8	------	562763
C 549	LH DASH PANEL-FAN CLUTCH OVERR. SW	EATON	8	------	562763
C 550	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 551	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 552	LAST LUGG. CPT. -WCL RICON	AMP CPC	9	561636	561637
C 553	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 554	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 555	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 556	UNDER DASH R.H. - RADIO ACC.	MOLEX	2	562550	562549
C 557	UNDER DASH R.H. - RADIO ACC.	MOLEX	9	562556	562555
C 558	UNDER DASH R.H. - RADIO ACC.	MOLEX	4	562507	562503
C 559	L.H. HAT RACK - PASSENGER SPK.	MOLEX	4	562507	562503
C 560	SOUND SYS. JCT. PANEL - POWER AMPLI	MOLEX	4	562507	562503
C 561	L.H. HAT RACK - WIRELESS MICRO	MOLEX	4	562507	562503
C 562	L.H. HAT RACK - VCP	MOLEX	9	562556	562555
C 563	L.H MODESTY PANEL - DRIVERS SPK.	MOLEX	4	562507	562503
C 564	L.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 565	R.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 566	L.H. CONSOLE - BOOM MICRO	MOLEX	4	562507	562503
C 567	L.H. CONSOLE - DRIVERS MICRO	MOLEX	4	562507	562503
C 568	SOUND SYS. JCT. PANEL - PASS. SPK	CINCH	4	562553	562552
C 569	SOUND SYS. JCT. PANEL - POWER AMPLI.	MOLEX	9	562556	562555
C 570	UNDER DASH PANEL TTLT	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT	MOLEX	16		562465
C 574	HAT -RACK FLUOR. INDIRECT LIGHTING	MOLEX	6	----------	562759
C 575	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 576	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 577	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 578	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 579					
C 580	RH DASH PANEL-HAT RACK FAN SW	EATON	8	--------	562763
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587					
C 588	FRONT SERVICE CPT. CENTER SOUND SYS.	AMP. CPC	37	561645	561646
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593	BATTERY CMPT. - CHARGER	PED WP	3	561781	561782
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476
C 596	DASH CENTER MODULE - CLOSE DOOR	MOLEX	4	561477	561476
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601	L.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 602	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 603	R.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 604					
C 605	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 606	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
C 609	LAVATORY - NIGHT LIGHT				
C 610	RR JCT BOX	AMP MNL	6	561552	561515
C 611	HAT RACK READING LTS RICON	MOLEX	6	562558	562557
C 612	HAT -RACK FLUOR. INSTATION LTS RICON	MOLEX	4	562507	562503
C 613	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 614	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 615					
C 616					
L X	CLUSTER	JAE	22		562766
L Y	CLUSTER	JAE	30		562767
R X	CLUSTER	JAE	22		562764

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C AA1	BEHIND DASH - SONALERT	BOSCH	5		561183
C AA2	BEHIND DASH - SONALERT	BOSCH	5		561183
C X1	FR LH UPPER WHELL CPT-ABS	WABCO	18		562792
C X2	FR LH UPPER WHELL CPT-ABS	WABCO	6		562793
C X3	FR LH UPPER WHELL CPT-ABS	WABCO	9		562794
C X4	FR LH UPPER WHELL CPT-ABS	WABCO	15		562795`
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
CV I2	RR JCT BOX-WORLD TRANSM. & EATON	AMP CPC	9	561636	561637
C Y	CLUSTER	JAE	30		562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 7					
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10					
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22	RR JCT BOX - EATON TRANSM.	AMP MNL	6	561552	561515
C 23	DDEC ENGINE-ECM J1939	PED MP	6	-------	561962
C 24	DDEC ENGINE	PED WP	1	561605	561577
C 25	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611
C 27	HYD & MAN TRANSM.-SPEED SENS.	PED WP	2	561566	561690
C 28	EATON TRANSMISSION	DEUTCH	3	562877	562884
C 29	EATON TRANSMISSION	PED MP	6	562878	------
C 30	RR JCT BOX - ECU EATON TRANSM.	PED MP	32	------	562866
C 31	RR JCT BOX - ECU EATON TRANSM.	PED MP	24	------	562865
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33	RR JCT BOX - EATON TRANSM.	DEUTCH	9	562531	------
C 34	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	3	------	562871
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36	RH. CONSOLE - EATON TRANSM. SHIFTER	PED MP	24	------	562874
C 37	RR SECTION-LH HAT RACK	MOLEX	6	562558	562557
C 38	RR SECTION-RH HAT RACK	MOLEX	6	562558	562557
C 39	LH CONSOLE - EATON TRANSM. DISPLAY	AMP MNL	4	561551	561668
C 40	RR JCT BOX - EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 41	LAVATORY ROOF FLUORESCENT	AMP MNL	2	560900	560898
C 42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898
C 43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662
C 44	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 45	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46	EATON TRANSM. J1939	DEUTCH	3	562877	562884
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48					
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50	FR SERVICE COMPT.-LOW BUOY	PED WP	1	561605	561577
C 51					
C 52	RR JCT BOX	AMP CPC	22	561709	561710
C 53					
C 54					
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 57					
C 58	RR JCT BOX AC PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX AC PANEL	AMP CPC	14	561584	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	16	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 73	DASH CENTER PANEL	AMP CPC	16	561639	561640
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75					
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 78					
C 79					
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	PASSENGER COMPT.-AISLE LTS	AMP MNL	2	560900	560898
C 82	ENTRANCE DOOR	MOLEX	6	562070	562069
C 83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C 84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C 85	UNDER INSTRUMENT PANEL LH	AMP MTA-100	------	562248	------
C 86					
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88	RR END ROOF-CLEARANCE LTS	AMP MNL	2	560900	560898
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS		35	------	641094
C 94					
C 95	CONDENSOR CPT - LIQ. SOL. VALVE	PED WP	2	561566	561690
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100	LH CONSOLE – 120 VOLTS SWITCH	EATON	8	------	562763
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 109	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 110	FR SERVICE COMPT-KNEEL.SYS	PED WP	2	561566	561690
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	EVAPORATOR COMPT-SPEED MOT CTRL	DEUTSCH	5	------	562566
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115	ENGINE COMPT-AIR DRYER	PED WP	2	561566	561690
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117					
C 118	ENGINE COMPT-LAVATORY FAN	PED WP	2	561566	561690
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-UNLOAD TAG SYSTEM	PED WP	2	561566	561690
C 123	TAG AXLE-UNLOAD TAG RH VALVE	PED WP	2	561566	561690

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX - A/C PANEL DIODE CONN.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C 143	LAVATORY DOOR WALL	AMP MNL	3	560908	562006
C 144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150					
C 151	EVAPORATOR CPT-THERMOSTAT	ITT SS	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	641132	------
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172	ENGINE COMPT-WATER TANK HEAT.	PED WP	2	561566	561690
C 173	LAV.POTABLE-WATER TANK HEAT.	AMP MNL	2	560900	560898
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611
C 184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C 190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690
C 191	ENGINE CPT RR DOOR RH STOP LT	PED WP	2	561566	561690
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C 193					
C 194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690
C 195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690
C 196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690
C 199	ENGINE CPT RR DOOR LICENCE LT	DOM AUTO	2	930210	------
C 200	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 201	RH HAT RACK-FLUORESCENT	AMP MNL	2	561248	561247
C 202	RH HAT RACK-INDIRECT LIGHTING	MOLEX	2	---------	562758
C 203	RH HAT RACK-INDIRECT LIGHTING	MOLEX	6	---------	562759
C 204	RH HAT RACK-GENERAL LT	AMP MNL	2	560900	560898
C 205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 206	RH HAT RACK-READING LT	AMP FF	4	----------	562756
C 207	LH HAT RACK-READING LT	AMP FF	4	----------	562756
C 208	LH HAT RACK-BALLAST	MOLEX	2	----------	562758
C 209	LH HAT RACK HOTESS CHIME	AMP MNL	3	561667	561550
C 210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	9	561661	561662
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213	FR ROOF-CLEARANCE LT	AMP MNL	2	560900	560898
C 214	ENGINE CPT J1922				
C 215	TAG AXLE - A.T.C. SYSTEM				
C 216	TAG AXLE - A.T.C. SYSTEM				
C 217	RH DASH PANEL-FRONT CAMERA SW	EATON	8	--------	562763
C 218	RH DASH PANEL-FRONT CAMERA SW	AMP MNL	2	560900	560898
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221					
C 222					
C 223					
C 224					
C 225					
C 226					
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233	FR. SERVICE COMPT.	VDO	8		562043
C 234	FR. SERVICE COMPT.	VDO	8		562044
C 235	FR. SERVICE COMPT.	VDO	8		562041
C 236	LUGGAGE COMPARTEMENT	AMP MNL	4	560851	560852
C 237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C 240	FR SERVICE CPT-KNEEL PROX SW	PED WP	2	561566	561690
C 241					
C 242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 243	FR SERVICE CPT-HEADLAMPS	TC	3	------	561071
C 244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812
C 245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812
C 246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 247					
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250					
C 251	LH DASH PANEL-FAST IDLE SW	EATON	8	------	562763
C 252					
C 253	LH DASH PANEL-ETHER SW	EATON	8	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH DASH PANEL-JACOB & RETARDER SW	EATON	8	------	562763
C 256					
C 257					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C 261	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C 263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C 265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274	RR. JCT. BOX – SIGNAL ALT. MODULE				
C 275	UNDER DASH RH-DOOR MODULE	AMP MNL	9	561670	561669
C 276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C 277					
C 278					
C 279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561247
C 280	LH CONSOLE-UNLOAD TAG SW.	NGR	10	------	562763
C 281					
C 282					
C 283					
C 284					
C 285					
C 286	RH SW PANEL-A/C & HEAT	EATON	8	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	8	------	562763
C 289					
C 290					
C 291					
C 292					
C 293					
C 294					
C 295					
C 296					
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299	RH DASH PANEL SW-GALLEY	EATON	8	------	562763
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH DASH PANEL -LUG. DOOR LCK SW	EATON	8	------	562763
C 311	RH DASH PANEL -HOS & PAS CHIME SW	EATON	8	------	562763
C 312	RH DASH PANEL -READING LTS SW	EATON	8	------	562763
C 313	RH DASH PANEL -GEN & FLUOR LTS SW	EATON	8	------	562763
C 314	LH DASH PANEL-FR DEST. SIGN SW	EATON	8	------	562763
C 315	LH DASH PANEL-LH STORE SW	EATON	8	------	562763
C 316	LH CONSOLE SPARE SWITCH	EATON	8	------	562763
C 317	LH DASH PANEL-RH STORE SW	EATON	8	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	8	------	562763
C 319					
C 320	RH DASH PANEL-DRIVER'S LTS SW	EATON	8	------	562763
C 321					
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN. AMP	CPC	9	561636	561637
C 324					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 325	LH DASH PANEL-KNEELING SW	EATON	8	------	562763
C 326	LH CONSOLE SW-SPARE	EATON	8	------	562763
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328	GALLEY-LAMP	AMP MNL	2	561248	561247
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331	GALLEY MICROWAVE SW	EATON	8	------	562763
C 332					
C 333	GALLEY RH CONTAINER SW	EATON	8	------	562763
C 334	GALLEY LH CONTAINER SW	EATON	8	------	562763
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346					
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360					
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C 363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C 364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C 365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C 368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C 369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C 370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376					
C 377	LH DASH PANEL-STOP ENG.OVERIDE SW	EATON	8	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381					
C 382					
C 383					
C 384					
C 385					
C 386	LH DASH PANEL-WCL POWER SYSTEM SW	EATON	8	------	562763
C 387	RR JCT BOX (WCL)	AMP MNL	9	561661	561662
C 388	RR JCT BOX (WCL)	AMP MNL	12	561735	561734
C 389	WCL REAR DOOR	MOLEX	4	561477	561476
C 390	LAVATORY WALL-WCL REMOTE CTR	EATON	8	------	562763
C 391	LAVATORY WALL-WCL LAMP	EATON	8	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 392	LAVATORY WALL-WCL SW. LT.	EATON	2	------	561835
C 393	LAVATORY WALL-WCL REMOTE SYS.	AMP CPC	4	561686	561687
C 394	UNDER INSTR. PANEL- B/U MONITOR	AMP MNL	4	560851	560852
C 395	DRIVER'S COMPT. - B/U MONITOR	AMP	5	------	------
C 396	FR SECT. LH HAT RACK-SPEAKER	MOLEX	4	562507	562503
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. – PRE-EXITATION ALT.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402	RR DRIVE AXLE-AIR DRYER	PED MP	2	------	562251
C 403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247
C 404	GALLEY LAMP	AMP MNL	2	561248	561247
C 405					
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH DASH PANEL-MASTER SWITCH SW	EATON	8	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9	561670	561669
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562237	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	LH DASH PANEL-HTR WINDSH.SW	EATON	8	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	------
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427					
C 428					
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	DEUTSCH	4	562479	562477
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437	RH HAT RACK-WCL FR & RR SECT.	AMP CPC	24	561642	561643
C 438					
C 439					
C 440					
C 441					
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C 451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C 452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C 453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561680
C 454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561680
C 455	WIRELESS MICRO-LH HAT-RACK	CINCH	2	562554	562551
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561680
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDR CONNECTOR	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468			8		
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561636	561637
C 479	HVAC MODULE				
C 480	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	4	561889	561890
C 481	UNDER DASH LH-DR. FAN SPEED CTR. MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. (NOT USED)	PED PC	2	------	562237
C 484	UNDER DASH LH.-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH.-DASH & DEFR. DAM.MOT.	AMP MNL	3	561667	561550
C 486					
C 487					
C 488					
C 489					
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER	PED MP	7	562433	------
C 502	LH DASH PANEL-PRE HEATER SW.	EATON	8	------	562763
C 503	LH CONSOLE-PRE HEATER SW.	EATON	2	------	561837
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	9	------	562681
C 506	FR JCT BOX CPT. DIGITAL CLOCK	AMP	4	561685	561687
C 507	FR SECT. LH HAT-RACK DIG. CLOCK	MOLEX	4	561477	561476
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515	FR JCT BOX CPT.-INTERCOM	MOLEX	4	561477	561476
C 516	FR JCT BOX CPT.-INTERCOM	MOLEX	6	562070	562069
C 517	LAVATORY WALL-INTERCOM	MOLEX	6	562070	562069
C 519	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	562580
C 520	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	------	641385
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	------	561183
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	PED WP	2	561566	561690
C 542	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 543	RR JCT BOX-PARK. BRAKE STOP LTS RESIS.	PED WP	2	561566	561690
C 544	SOUND SYS JCT PANEL-AUDIO SEAT SYS.	PED WP	3	561781	562428
C 545	LH HAT RACK-AUDIO SEAT SYSTEM	AMP MNL	3	561667	561550
C 546					
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	8	------	562763
C 549	LH DASH PANEL-FAN CLUTCH OVERR. SW	EATON	8	------	562763
C 550	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 551	LAST LUGG. CPT. -WCL RICON	AMP CPC	16	561694	561695
C 552	LAST LUGG. CPT. -WCL RICON	AMP CPC	9	561636	561637
C 553	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 554	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 555	UNDER DASH R.H. - CONTROL. HEAD	MOLEX	16	---------	562559
C 556	UNDER DASH R.H. - RADIO ACC.	MOLEX	2	562550	562549
C 557	UNDER DASH R.H. - RADIO ACC.	MOLEX	9	562556	562555
C 558	UNDER DASH R.H. - RADIO ACC.	MOLEX	4	562507	562503
C 559	SOUND SYS. JCT. PANEL – FILTER AMPLI	PED WP	2	561566	561690
C 560	SOUND SYS. JCT. PANEL - POWER AMPLI	MOLEX	4	562507	562503
C 561	L.H. HAT RACK - WIRELESS MICRO	MOLEX	4	562507	562503
C 562	L.H. HAT RACK - VCP	MOLEX	9	562556	562555
C 563	L.H MODESTY PANEL - DRIVERS SPK.	MOLEX	4	562507	562503
C 564	L.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 565	R.H MODESTY PANEL - MICRO	MOLEX	4	562507	562503
C 566	L.H. CONSOLE - BOOM MICRO	MOLEX	4	562507	562503
C 567	L.H. CONSOLE - DRIVERS MICRO	MOLEX	4	562507	562503
C 568	SOUND SYS. JCT. PANEL - PASS. SPK	CINCH	4	562553	562552
C 569	SOUND SYS. JCT. PANEL - POWER AMPLI.	MOLEX	9	562556	562555
C 570	UNDER DASH PANEL TTLT	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT	MOLEX	8		562465
C 574	HAT -RACK FLUOR. INDIRECT LIGHTING	MOLEX	6	----------	562759
C 575	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 576	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 577	HAT -RACK FLUOR. INDIRECT LIGHTING	AMP MNL	3	561667	561550
C 578	HAT -RACK FLUOR. INSTATION LIGHT	MOLEX	4	562507	562503
C 579					
C 580	RH DASH PANEL-HAT RACK FAN SW	EATON	8	--------	562763
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587					
C 588	FRONT SERVICE CPT. CENTER SOUND SYS.	AMP. CPC	37	561645	561646
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593	BATTERY CMPT. - CHARGER	PED WP	3	561781	561782
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595	DASH CENTER MODULE - OPEN DOOR	MOLEX	4	561477	561476
C 596	DASH CENTER MODULE - CLOSE DOOR	MOLEX	4	561477	561476
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5		562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601	L.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 602	L.H. ROOF - WINDOW AJAR	MOLEX	4	561477	561476
C 603	R.H. ROOF - WINDOW AJAR	AMP MNL	2	561248	561247
C 604					
C 605	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 606	HAT RACK - MOTOR FAN	PED	2	560997	561030
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
C 609	LAVATORY - NIGHT LIGHT				
C 610	RR JCT BOX	AMP MNL	6	561552	561515
C 611	HAT RACK READING LTS RICON	MOLEX	6	562558	562557
C 612	HAT -RACK FLUOR. INSTATION LTS RICON	MOLEX	4	562507	562503
C 613	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 614	HAT -RACK INDIRECT LTS RICON	AMP MNL	3	561667	561550
C 615					
C 616					
L X	CLUSTER	JAE	22		562766
L Y	CLUSTER	JAE	30		562767
R X	CLUSTER	JAE	22		562764

DIODES NUMBER CODE

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 1					
D 2					
D 3					
D 4	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 5	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 6	5	3A	561740	FR JCT BOX	WCL NEUT. SIGN INTERFACE TO PARK BRK TTLT
D 7					
D 8					
D 9	12	3A	561740	FR L.H. HAT-RACK	HOSTESS & PASSENGER CHIME
D 10					
D 11	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D 12	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D 13	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D 14	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D 15	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-UP
D 16	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-DOWN
D 17	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 18	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 19	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-PARK BRK CALL SW.
D 20	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-HEAD LT SW
D 21	18	3A	561740	FR JCT BOX	KNEELING SYSTEM FEED BACK
D 22					
D 23					
D 24					
D 25	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 26	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 27	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 28	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 29	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 30	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 31					
D 32					
D 33					
D 34					
D 35	25	3A	561740	RR JCT BOX	WCL DOOR AJAR ALARM T.T.LT.
D 36	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 37	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 38	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 39					
D 40					
D 41					
D 42					
D 43	10	3A	561740	LOWER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 44	10	3A	561740	LOWER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 45	10	3A	561740	UPPER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 46					
D 47					
D 48					
D 49					
D 50					
D 51					
D 52					
D 53					
D 54					
D 55					
D 56					
D 57					

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 58	17	3A	561740	FR JCT BOX	RR HIGH BUOY - KNEELING
D 59	13.2	3A	561740	RJB A/C JCT PANEL	A/C & HEAT BYPASS SWITCH
D 60	13.2	3A	561740	RJB A/C JCT PANEL	A/C COMPR.CLUTCH SUPPRESSOR
D 61	9.2	3A	561740	FR JCT BOX	KNEELING SIDE FR RH DIRECTIONNAL LT
D 62	13.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP FEED
D 63	17	3A	561740	FR JCT BOX	LAVATORY SONALERT
D 64	17	3A	561740	FR JCT BOX	WCL DOOR ALARM
D 65	13.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP - PRE-HEAT FEED
D 66	13.2	3A	561740	RJB A/C JCT PANEL	WATER VALVE - HEAT SW. FEED
D 67	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - RH
D 68	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - LH
D 69					
D 70	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 71	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 72	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 73	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 74					
D 75	4	3A	381351	BAT CPT	STARTER-SUPPRESSOR COIL RLY
D 76					
D 77	18	3A	561740	FR JCT BOX	PARKING BRAKE - KNEELING
D 78	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 79	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 80					
D 81	18	3A	561740	FR JCT BOX	PIEZO-KNEELING
D 82	18	3A	561740	FR JCT BOX	PIEZO-KNEELING
D 83	8	3A	561740	RR JCT BOX	FAN CLUTCH W/RETARDER
D 84	13.2	3A	561740	RJB A/C JCT PANEL	WATER VALVE
D 85	13.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP
D 86	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 87	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 88	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 89	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 90	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 91	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN

DIODES NUMBER CODE

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 1					
D 2					
D 3					
D 4	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 5	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 6	5	3A	561740	FR JCT BOX	WCL NEUT. SIGN INTERFACE TO PARK BRK TTLT
D 7					
D 8					
D 9					
D 10					
D 11	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D 12	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D 13	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D 14	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D 15	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-UP
D 16	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-DOWN
D 17	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 18	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 19	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-PARK BRK CALL SW.
D 20	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-HEAD LT SW
D 21	18	3A	561740	FR JCT BOX	KNEELING SYSTEM FEED BACK
D 22					
D 23					
D 24					
D 25	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 26	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 27	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 28	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 29	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 30	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 31					
D 32					
D 33					
D 34					
D 35	25	3A	561740	RR JCT BOX	WCL DOOR AJAR ALARM T.T.LT.
D 36	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 37	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 38	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 39					
D 40					
D 41					
D 42					
D 43	10	3A	561740	LOWER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 44	10	3A	561740	LOWER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 45	10	3A	561740	UPPER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 46					
D 47					
D 48					
D 49					
D 50					
D 51					
D 52					
D 53					
D 54					
D 55					
D 56					
D 57					
D 58	17	3A	561740	FR JCT BOX	RR HIGH BUOY - KNEELING
D 59	13.2	3A	561740	RJB A/C JCT PANEL	A/C & HEAT BYPASS SWITCH
D 60	13.2	3A	561740	RJB A/C JCT PANEL	A/C COMPR.CLUTCH SUPPRESSOR
D 61	9.2	3A	561740	FR JCT BOX	KNEELING SIDE FR RH DIRECTIONNAL LT
D 62	13.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP FEED
D 63	17	3A	561740	FR JCT BOX	LAVATORY SONALERT
D 64	17	3A	561740	FR JCT BOX	WCL DOOR ALARM
D 65	13.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP - PRE-HEAT FEED
D 66	13.2	3A	561740	RJB A/C JCT PANEL	WATER VALVE - HEAT SW. FEED
D 67	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - RH
D 68	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - LH
D 69					
D 70	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 71	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 72	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 73	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 74					
D 75	4	3A	381351	BAT CPT	STARTER-SUPPRESSOR COIL RLY
D 76					
D 77	18	3A	561740	FR JCT BOX	PARKING BRAKE - KNEELING
D 78	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 79	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 80					
D 81	18	3A	561740	FR JCT BOX	PIEZO-KNEELING
D 82	18	3A	561740	FR JCT BOX	PIEZO-KNEELING
D 83	8	3A	561740	RR JCT BOX	FAN CLUTCH W/RETARDER
D 84	13.2	3A	561740	RJB A/C JCT PANEL	WATER VALVE
D 85	13.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP
D 86	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 87	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 88	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 89	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 90	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 91	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN

DIODES NUMBER CODE

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 1	13.1	3A	561740	RJB A/C JCT PANEL	LIQ. SOL. VALVE SUPPRESSOR
D 2	4.1	3A	561740	BATT. CPT.	EATON TRANSMISSION
D 3	1.1	3A	561740	BATT. CPT.	24V DISC. CUT OUT RLY
D 4	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 5	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 6	5	3A	561740	FR JCT BOX	WCL NEUT. SIGN INTERFACE TO PARK BRK TTLT
D 7					
D 8					
D 9	12	3A	561740	FR L.H. HAT-RACK	HOSTESS & PASSENGER CHIME
D 10					
D 11	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D 12	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D 13	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D 14	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D 15	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-UP
D 16	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-DOWN
D 17	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 18	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 19	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-PARK BRK CALL SW.
D 20	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-HEAD LT SW
D 21	18	3A	561740	FR JCT BOX	KNEELING SYSTEM FEED BACK
D 22					
D 23					
D 24					
D 25	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 26	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 27	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 28	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 29	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 30	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 31					
D 32					
D 33					
D 34					
D 35	25	3A	561740	RR JCT BOX	WCL DOOR AJAR ALARM T.T.LT.
D 36	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 37	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 38	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 39					
D 40					
D 41					
D 42					
D 43	10	3A	561740	LOWER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 44	10	3A	561740	LOWER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 45	10	3A	561740	UPPER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 46					
D 47					
D 48					
D 49					
D 50					
D 51					
D 52					
D 53					
D 54					
D 55					
D 56					
D 57					

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 58	17	3A	561740	FR JCT BOX	RR HIGH BUOY - KNEELING
D 59	13.2	3A	561740	RJB A/C JCT PANEL	A/C & HEAT BYPASS SWITCH
D 60	13.2	3A	561740	RJB A/C JCT PANEL	A/C COMPR.CLUTCH SUPPRESSOR
D 61	9.2	3A	561740	FR JCT BOX	KNEELING SIDE FR RH DIRECTIONNAL LT
D 62	13.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP FEED
D 63	17	3A	561740	FR JCT BOX	LAVATORY SONALERT
D 64	17	3A	561740	FR JCT BOX	WCL DOOR ALARM
D 65	13.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP - PRE-HEAT FEED
D 66	13.2	3A	561740	RJB A/C JCT PANEL	WATER VALVE - HEAT SW. FEED
D 67	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - RH
D 68	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - LH
D 69					
D 70	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 71	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 72	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 73	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 74					
D 75	4	3A	381351	BAT CPT	STARTER-SUPPRESSOR COIL RLY
D 76					
D 77	18	3A	561740	FR JCT BOX	PARKING BRAKE - KNEELING
D 78	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 79	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 80					
D 81	18	3A	561740	FR JCT BOX	PIEZO-KNEELING
D 82	18	3A	561740	FR JCT BOX	PIEZO-KNEELING
D 83	8	3A	561740	RR JCT BOX	FAN CLUTCH W/RETARDER
D 84	13.2	3A	561740	RJB A/C JCT PANEL	WATER VALVE
D 85	13.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP
D 86	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 87	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 88	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 89	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 90	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 91	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN

DIODES NUMBER CODE

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 1	13.1	3A	561740	RJB A/C JCT PANEL	LIQ. SOL. VALVE SUPPRESSOR
D 2	4.1	3A	561740	BATT. CPT.	EATON TRANSMISSION
D 3	1.1	3A	561740	BATT. CPT.	24V DISC. CUT OUT RLY
D 4	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 5	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 6	5	3A	561740	FR JCT BOX	WCL NEUT. SIGN INTERFACE TO PARK BRK TTLT
D 7					
D 8					
D 9	12	3A	561740	FR L.H. HAT-RACK	HOSTESS & PASSENGER CHIME
D 10	9.1	3A	561740	FR JCT BOX	DAY-TIME RUN LIGHT –ENGINE NOT RUN
D 11	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D 12	17	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D 13	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D 14	17	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D 15	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-UP
D 16	18	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-DOWN
D 17	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 18	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 19	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-PARK BRK CALL SW.
D 20	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-HEAD LT SW
D 21	18	3A	561740	FR JCT BOX	KNEELING SYSTEM FEED BACK
D 22					
D 23					
D 24					
D 25	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 26	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 27	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 28	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 29	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 30	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 31					
D 32					
D 33					
D 34					
D 35	25	3A	561740	RR JCT BOX	WCL DOOR AJAR ALARM T.T.LT.
D 36	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 37	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 38	11.4	3A	561740	RR JCT BOX	CHARGEUR 24V/110V
D 39					
D 40					
D 41					
D 42					
D 43	10	3A	561740	LOWER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 44	10	3A	561740	LOWER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 45	10	3A	561740	UPPER WIPER MOT.	WIPER MOTOR SUPRESSOR
D 46					
D 47					
D 48					
D 49					
D 50					
D 51					
D 52					
D 53					
D 54					
D 55					
D 56					
D 57					

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 58	17	3A	561740	FR JCT BOX	RR HIGH BUOY - KNEELING
D 59	13.2	3A	561740	RJB A/C JCT PANEL	A/C & HEAT BYPASS SWITCH
D 60	13.2	3A	561740	RJB A/C JCT PANEL	A/C COMPR.CLUTCH SUPPRESSOR
D 61	9.2	3A	561740	FR JCT BOX	KNEELING SIDE FR RH DIRECTIONNAL LT
D 62	13.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP FEED
D 63	17	3A	561740	FR JCT BOX	LAVATORY SONALERT
D 64	17	3A	561740	FR JCT BOX	WCL DOOR ALARM
D 65	13.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP - PRE-HEAT FEED
D 66	13.2	3A	561740	RJB A/C JCT PANEL	WATER VALVE - HEAT SW. FEED
D 67	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - RH
D 68	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - LH
D 69					
D 70	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 71	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 72	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 73	18	3A	561740	FR JCT BOX	FR HIGH BUOY - KNEELING
D 74					
D 75	4	3A	381351	BAT CPT	STARTER-SUPPRESSOR COIL RLY
D 76					
D 77	18	3A	561740	FR JCT BOX	PARKING BRAKE - KNEELING
D 78	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 79	26	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 80					
D 81	18	3A	561740	FR JCT BOX	PIEZO-KNEELING
D 82	18	3A	561740	FR JCT BOX	PIEZO-KNEELING
D 83	8	3A	561740	RR JCT BOX	FAN CLUTCH W/RETARDER
D 84	13.2	3A	561740	RJB A/C JCT PANEL	WATER VALVE
D 85	13.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP
D 86	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 87	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 88	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 89	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 90	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D 91	16	3A	561740	UNDER DASH RH	ENTRANCE DOOR SEDAN
D F1	8.1	3A	561740	RR. JCT. BOX	FAN CLUTCH - SUPPRESSOR
D F2	8.1	3A	561740	RR. JCT. BOX	FAN CLUTCH - SUPPRESSOR

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R F1	8	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 1
R F2	8	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2
R F3	8	24V	560772	RR JCT BOX	TIME DELAY
R LA	16	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LATCH)
R LO	16	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (PRESS. SW.)
R LT	16	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LIGHT)
R LV	16	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (VALVE)
R 1	1.1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R 2	2	24V	561991	BATT. CPT.	ENGINE RUN (12) FR & RR
R 3	4	24V	561707	BATT. CPT.	FIELD RELAY
R 4	4	24V	561005	BATT. CPT.	STARTING MOTOR
R 5	5	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.
R 6	9.3	24V	561707	RR JCT BOX	STOP LTS-PARKING BRAKE
R 7	5	24V	561707	FR JCT BOX	FAST IDLE
R 8	6	24V	561707	RR JCT BOX	12V IGNITION WT
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS
R 10					
R 11	5	24V	561707	RR JCT BOX	12V IGNITION DDEC3
R 12	7	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS
R 14	9.1	24V	561707	FR JCT BOX	BLINKER
R 15	9.1	24V	561707	FR JCT BOX	FR MARKER LTS
R 16	9.1	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R 17	9.1	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS
R 18	9.1	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-IN
R 19	9.1	24V	561707	FR JCT BOX	HEADLAMPS (HI)
R 20	9.1	24V	561707	FR JCT BOX	HEADLAMPS (LO)
R 21	9.2	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT
R 22					
R 23	9.2	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT
R 24	9.2	24V	561707	FR JCT BOX	R.H. CORNERING LT
R 25	9.2	24V	561707	FR JCT BOX	L.H. CORNERING LT
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS
R 27	11.2	24V	561707	RR JCT BOX	AISLE & EMERG.EXIT - LTS
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R 29	11.3	24V	561707	RR JCT BOX	READING LTS R.H.
R 30	11.3	24V	561707	RR JCT BOX	READING LTS L.H.
R 31	11.3	24V	561707	RR JCT BOX	GENERAL LTS
R 32	11.4	24V	561707	RR JCT BOX	24V FLUORESCENT
R 33	13.1	12V	562092	FR JCT BOX	BLOWER CUT-IN RLY
R 34	13.1	24V	561707	RJB A/C JCT PANEL	A/C LOGIC PANEL
R 35	13.1	24V	561707	RJB A/C JCT PANEL	WATER PUMP
R 36	13.1	24V	561707	RJB A/C JCT PANEL	A/C COMPRESSOR CLUTCH
R 37	10	24V	561707	FR JCT BOX	KNEELING LT
R 38					
R 39	13.2	24V	561005	BATT. CPT.	CONDENSER FAN MOTOR
R 40	13.2	24V	561014	BATT. CPT.	CONDENSER SPEED CTR HI
R 41	13.2	24V	561005	BATT. CPT.	CONDENSER SPEED CTR HI
R 42					
R 43	18	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 44	18	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 45					
R 46					
R 47	23	24V	561707	GALLEY COMPT	GALLEY-LIQUID CONTAINERS
R 48	23	24V	561707	GALLEY COMPT	COFFEE MAKER
R 49	21	24V	561707	FR JCT BOX	ABS - SERVICE BRK RLY
R 50	10	24V	561707	FR JCT BOX	UPPER WINDSHIELD WIPER
R 51	11.3	12V	562092	FR JCT BOX	DRIVER'S LTS RLY- ENT. DOOR SIGN.
R 52	21	24V	561707	FR JCT BOX	ABS - W/TR SIGN. RETARDER
R 53	1.1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR
R 54	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY RR
R 55	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY FR
R 56					
R 57	9.1	24V	561707	FR JCT BOX	DAY'S BLINKER

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 58					
R 59	9.3	12V	562092	RR JCT BOX	DOCKING LTS
R 60					
R 61	9.3	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL
R 62					
R 63					
R 64					
R 65					
R 66	20.3	24V	561707	SS JCT PANEL	SOUND SYSTEM VIDEO
R 67	20.1	24V	561707	SS JCT PANEL	SOUND SYSTEM RADIO
R 68	20.1	24V	561991	SS JCT PANEL	SOUND SYSTEM AMPLIFIER
R 69					
R 70					
R 71					
R 72					
R 73					
R 74					
R 75					
R 76					
R 77					
R 78	1.1	12V	562092	FR JCT BOX	MASTER SWITCH
R 79	23	24V	561707	GALLEY CPT.	GALLEY-REFRIGERATOR
R 80	11.1	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R 81					
R 82	19	24V	561707	FR JCT BOX	RETARDER WT
R 83					
R 84	8	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R 85	8	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R 86					
R 87	19	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R 88					
R 89	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 90	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 91	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 92	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 93	26	24V	561707	RR JCT BOX	PRE-HEAT WATER HEATER (WEBASTO)
R 94	25	24V	561707	RR JCT BOX	WCL - SYSTEM
R 95	25	24V	561707	RR JCT BOX	WCL - MAGNETIC SW. SIGN.
R 96	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR ALARM
R 97	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR PARK. BRAKE
R 98	25	12V	561538	RR JCT BOX	WCL -.
R 99	8	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 100	4	12V	561538	RR JCT BOX	GENERATOR SIGNAL
R 101				RR JCT BOX	FUEL FILTER HEATER
R 102	17	24V	561707	RR JCT BOX	LAVATORY FLUORESCENT
R 103					
R 104	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - L.H.
R 105	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - R.H.
R 106	17.1	24V	561707	RR JCT BOX	LAVATORY FAN
R 107					
R 2010	26.2	24V	561230	WEBASTO PRE-HEAT	WEBASTO
V IMN	6	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
V IMR	6	12V	562092	RR JCT BOX	VIM WORLD TR.-B/U SIGNAL
V IM1	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
V IM2	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
V IM3	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
V IM4	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 4 RETARD. ON SIGNAL

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION	No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R F1	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 1
R F2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2
R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY
R LA	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LATCH)
R LO	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (PRESS. SW.)
R LT	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LIGHT)
R LV	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (VALVE)
R 1	1.1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R 2	2.1	24V	561991	BATT. CPT.	ENGINE RUN (12) FR & RR
R 3					
R 4	4.1	24V	561005	BATT. CPT.	STARTING MOTOR
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.
R 6	9.3	24V	561707	RR JCT BOX	STOP LTS-PARKING BRAKE
R 7	5.1	24V	561707	FR JCT BOX	FAST IDLE
R 8					
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS
R 10	4.1	12V	562092	BATT. CPT.	NEUTRAL SIGNAL EATON TRANSM.
R 11					
R 12	7.2	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS
R 14	9.1	24V	561707	FR JCT BOX	BLINKER
R 15	9.1	24V	561707	FR JCT BOX	FR MARKER LTS
R 16	9.1	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R 17	9.1	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS
R 18	9.1	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-OUT
R 19	9.1	24V	561707	FR JCT BOX	HEADLAMPS (HI)
R 20	9.1	24V	561707	FR JCT BOX	HEADLAMPS (LO)
R 21	9.2	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT
R 22	4.1	24V	561707	BATT. CPT	NEUTRAL SIGNAL EATON TRANSM.
R 23	9.2	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT
R 24	9.2	24V	561707	FR JCT BOX	R.H. CORNERING LT
R 25	9.2	24V	561707	FR JCT BOX	L.H. CORNERING LT
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS
R 27	11.2	24V	561707	RR JCT BOX	AISLE & EMERG.EXIT - LTS
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R 29	11.3	24V	561707	RR JCT BOX	READING LTS R.H.
R 30	11.3	24V	561707	RR JCT BOX	READING LTS L.H.
R 31	11.3	24V	561707	RR JCT BOX	GENERAL LTS
R 32	11.4	24V	561707	RR JCT BOX	24V FLUORESCENT
R 33	4.1	12V	562092	FR JCT BOX	BLOWER CUT-IN RLY
R 34	13.1	24V	561707	RJB A/C JCT PANEL	A/C LOGIC PANEL
R 35	13.2	24V	561707	RJB A/C JCT PANEL	WATER PUMP
R 36	13.2	24V	561707	RJB A/C JCT PANEL	A/C COMPRESSOR CLUTCH
R 37	9.2	24V	561707	FR JCT BOX	KNEELING LT
R 38	13.1	24v	561707	RJB A/C JCT PANEL	A/C LIQ. SOL. VALVE
R 39	13.1	24V	561005	BATT. CPT.	CONDENSER FAN MOTOR
R 40	13.1	24V	561014	BATT. CPT.	CONDENSER SPEED CTR HI
R 41	13.1	24V	561005	BATT. CPT.	CONDENSER SPEED CTR HI
R 42	6.3	12V	562092	BATT. CPT	EATON TRANSM.
R 43	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 44	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 45					
R 46					
R 47	23.1	24V	561707	GALLEY COMPT	GALLEY-LIQUID CONTAINERS
R 48	23.1	24V	561707	GALLEY COMPT	GALLEY-COFFEE MAKER
R 49	21.1	24V	561707	FR JCT BOX	ABS - SERVICE BRK RLY
R 50					
R 51	11.3	24V	562092	FR JCT BOX	DRIVER'S LTS RLY- ENT. DOOR SIGN.
R 52	21.1	24V	561707	FR JCT BOX	ABS - W/TR SIGN. RETARDER
R 53	1.1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR
R 54	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY RR
R 55	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY FR
R 56					
R 57	9.1	24V	561707	FR JCT BOX	DAY'S BLINKER

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 58					
R 59	9.3	12V	562092	RR JCT BOX	DOCKING LTS
R 60					
R 61	9.3	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL
R 62					
R 63					
R 64					
R 65					
R 66	20.3	24V	561707	SS JCT PANEL	SOUND SYSTEM VIDEO
R 67	20.1	12V	562092	SS JCT PANEL	SOUND SYSTEM RADIO
R 68	20.1	24V	561991	SS JCT PANEL	SOUND SYSTEM AMPLIFIER
R 69					
R 70					
R 71					
R 72					
R 73					
R 74					
R 75					
R 76					
R 77					
R 78	1.1	12V	562092	FR JCT BOX	MASTER SWITCH
R 79	23	24V	561707	GALLEY CPT.	GALLEY-REFRIGERATOR
R 80	11.1	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R 81					
R 82	19	24V	561707	FR JCT BOX	RETARDER WT
R 83					
R 84	8	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R 85	8	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R 86					
R 87	19	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R 88					
R 89	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 90	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 91	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 92	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 93	26	24V	561707	RR JCT BOX	PRE-HEAT WATER HEATER (WEBASTO)
R 94	25	24V	561707	RR JCT BOX	WCL - SYSTEM
R 95	25	24V	561707	RR JCT BOX	WCL - MAGNETIC SW. SIGN.
R 96	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR ALARM
R 97	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR PARK. BRAKE
R 98	25	12V	561538	RR JCT BOX	WCL -.
R 99	8	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 100	4	12V	561538	RR JCT BOX	GENERATOR SIGNAL
R 101				RR JCT BOX	FUEL FILTER HEATER
R 102	17	24V	561707	RR JCT BOX	LAVATORY FLUORESCENT
R 103					
R 104	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - L.H.
R 105	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - R.H.
R 106	17.1	24V	561707	RR JCT BOX	LAVATORY FAN
R 107					
R 2010	26.2	24V	561230	WEBASTO PRE-HEAT	WEBASTO
R PS	4.1SP1	24V	561707	FR JCT BOX	IDLE POWER SHUT DOWN
R TS	5.1SP1	24V	561707	FR JCT BOX	IDLE POWER SHUT DOWN
V IMN	6	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
V IMR	6	12V	562092	RR JCT BOX	VIM WORLD TR.-B/U SIGNAL
V IM1	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
V IM2	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
V IM3	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
V IM4	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT4 RETARD. ON SIGNAL

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R F1	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 1
R F2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2
R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY
R LA	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LATCH)
R LO	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (PRESS. SW.)
R LT	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LIGHT)
R LV	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (VALVE)
R 1	1.1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R 2	2.1	24V	561991	BATT. CPT.	ENGINE RUN (12) FR & RR
R 3					
R 4	4.1	24V	561005	BATT. CPT.	STARTING MOTOR
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.
R 6	9.3	24V	561707	RR JCT BOX	STOP LTS-PARKING BRAKE
R 7	5.1	24V	561707	FR JCT BOX	FAST IDLE
R 8					
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS
R 10	4.1	12V	562092	BATT. CPT.	NEUTRAL SIGNAL EATON TRANSM.
R 11					
R 12	7.2	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS
R 14	9.1	24V	561707	FR JCT BOX	BLINKER
R 15	9.1	24V	561707	FR JCT BOX	FR MARKER LTS
R 16	9.1	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R 17	9.1	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS
R 18	9.1	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-OUT
R 19	9.1	24V	561707	FR JCT BOX	HEADLAMPS (HI)
R 20	9.1	24V	561707	FR JCT BOX	HEADLAMPS (LO)
R 21	9.2	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT
R 22	4.1	24V	561707	BATT. CPT	NEUTRAL SIGNAL EATON TRANSM.
R 23	9.2	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT
R 24	9.2	24V	561707	FR JCT BOX	R.H. CORNERING LT
R 25	9.2	24V	561707	FR JCT BOX	L.H. CORNERING LT
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS
R 27	11.2	24V	561707	RR JCT BOX	AISLE & EMERG.EXIT - LTS
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R 29	11.3	24V	561707	RR JCT BOX	READING LTS R.H.
R 30	11.3	24V	561707	RR JCT BOX	READING LTS L.H.
R 31	11.3	24V	561707	RR JCT BOX	GENERAL LTS
R 32	11.4	24V	561707	RR JCT BOX	24V FLUORESCENT
R 33	4.1	12V	562092	FR JCT BOX	BLOWER CUT-IN RLY
R 34	13.1	24V	561707	RJB A/C JCT PANEL	A/C LOGIC PANEL
R 35	13.2	24V	561707	RJB A/C JCT PANEL	WATER PUMP
R 36	13.2	24V	561707	RJB A/C JCT PANEL	A/C COMPRESSOR CLUTCH
R 37	9.2	24V	561707	FR JCT BOX	KNEELING LT
R 38	13.1	24v	561707	RJB A/C JCT PANEL	A/C LIQ. SOL. VALVE
R 39	13.1	24V	561005	BATT. CPT.	CONDENSER FAN MOTOR
R 40	13.1	24V	561014	BATT. CPT.	CONDENSER SPEED CTR HI
R 41	13.1	24V	561005	BATT. CPT.	CONDENSER SPEED CTR HI
R 42	6.3	12V	562092	BATT. CPT	EATON TRANSM.
R 43	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 44	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 45					
R 46					
R 47	23.1	24V	561707	GALLEY COMPT	GALLEY-LIQUID CONTAINERS
R 48	23.1	24V	561707	GALLEY COMPT	GALLEY-COFFEE MAKER
R 49	21.1	24V	561707	FR JCT BOX	ABS - SERVICE BRK RLY
R 50					
R 51	11.3	24V	562092	FR JCT BOX	DRIVER'S LTS RLY- ENT. DOOR SIGN.
R 52	21.1	24V	561707	FR JCT BOX	ABS - W/TR SIGN. RETARDER
R 53	1.1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR
R 54	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY RR
R 55	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY FR
R 56					
R 57	9.1	24V	561707	FR JCT BOX	DAY'S BLINKER

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 58					
R 59	9.3	12V	562092	RR JCT BOX	DOCKING LTS
R 60					
R 61	9.3	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL
R 62					
R 63					
R 64					
R 65					
R 66	20.3	24V	561707	SS JCT PANEL	SOUND SYSTEM VIDEO
R 67	20.1	12V	562092	SS JCT PANEL	SOUND SYSTEM RADIO
R 68	20.1	24V	561991	SS JCT PANEL	SOUND SYSTEM AMPLIFIER
R 69					
R 70					
R 71					
R 72					
R 73					
R 74					
R 75					
R 76					
R 77					
R 78	1.1	12V	562092	FR JCT BOX	MASTER SWITCH
R 79	23	24V	561707	GALLEY CPT.	GALLEY-REFRIGERATOR
R 80	11.1	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R 81					
R 82	19	24V	561707	FR JCT BOX	RETARDER WT
R 83					
R 84	8	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R 85	8	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R 86					
R 87	19	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R 88					
R 89	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 90	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 91	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 92	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 93	26	24V	561707	RR JCT BOX	PRE-HEAT WATER HEATER (WEBASTO)
R 94	25	24V	561707	RR JCT BOX	WCL - SYSTEM
R 95	25	24V	561707	RR JCT BOX	WCL - MAGNETIC SW. SIGN.
R 96	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR ALARM
R 97	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR PARK. BRAKE
R 98	25	12V	561538	RR JCT BOX	WCL -.
R 99	8	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 100	4	12V	561538	RR JCT BOX	GENERATOR SIGNAL
R 101				RR JCT BOX	FUEL FILTER HEATER
R 102	17	24V	561707	RR JCT BOX	LAVATORY FLUORESCENT
R 103	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN
R 104	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - L.H.
R 105	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - R.H.
R 106	17.1	24V	561707	RR JCT BOX	LAVATORY FAN
R 107					
R 2010	26.2	24V	561230	WEBASTO PRE-HEAT	WEBASTO
R PS	4.1SP1	24V	561707	FR JCT BOX	IDLE POWER SHUT DOWN
R TS	5.1SP1	24V	561707	FR JCT BOX	IDLE POWER SHUT DOWN
V IMN	6	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
V IMR	6	12V	562092	RR JCT BOX	VIM WORLD TR.-B/U SIGNAL
V IM1	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
V IM2	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
V IM3	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
V IM4	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT4 RETARD. ON SIGNAL

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R F1	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 1
R F2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2
R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY
R LA	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LATCH)
R LO	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (PRESS. SW.)
R LT	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LIGHT)
R LV	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (VALVE)
R 1	1.1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R 2	2.1	24V	561991	BATT. CPT.	ENGINE RUN (12) FR & RR
R 3					
R 4	4.1	24V	561005	BATT. CPT.	STARTING MOTOR
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.
R 6	9.3	24V	561707	RR JCT BOX	STOP LTS-PARKING BRAKE
R 7	5.1	24V	561707	FR JCT BOX	FAST IDLE
R 8					
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS
R 10	4.1	12V	562092	BATT. CPT.	NEUTRAL SIGNAL EATON TRANSM.
R 11					
R 12	7.2	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS
R 14	9.1	24V	561707	FR JCT BOX	BLINKER
R 15	9.1	24V	561707	FR JCT BOX	FR MARKER LTS
R 16	9.1	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R 17	9.1	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS
R 18	9.1	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-OUT
R 19	9.1	24V	561707	FR JCT BOX	HEADLAMPS (HI)
R 20	9.1	24V	561707	FR JCT BOX	HEADLAMPS (LO)
R 21	9.2	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT
R 22	4.1	24V	561707	BATT. CPT	NEUTRAL SIGNAL EATON TRANSM.
R 23	9.2	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT
R 24	9.2	24V	561707	FR JCT BOX	R.H. CORNERING LT
R 25	9.2	24V	561707	FR JCT BOX	L.H. CORNERING LT
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS
R 27	11.2	24V	561707	RR JCT BOX	AISLE & EMERG.EXIT - LTS
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R 29	11.3	24V	561707	RR JCT BOX	READING LTS R.H.
R 30	11.3	24V	561707	RR JCT BOX	READING LTS L.H.
R 31	11.3	24V	561707	RR JCT BOX	GENERAL LTS
R 32	11.4	24V	561707	RR JCT BOX	24V FLUORESCENT
R 34	13.1	24V	561707	RJB A/C JCT PANEL	A/C LOGIC PANEL
R 35	13.2	24V	561707	RJB A/C JCT PANEL	WATER PUMP
R 36	13.2	24V	561707	RJB A/C JCT PANEL	A/C COMPRESSOR CLUTCH
R 37	9.2	24V	561707	FR JCT BOX	KNEELING LT
R 38	13.1	24v	561707	RJB A/C JCT PANEL	A/C LIQ. SOL. VALVE
R 39	13.1	24V	561005	BATT. CPT.	CONDENSER FAN MOTOR
R 40	13.1	24V	561014	BATT. CPT.	CONDENSER SPEED CTR HI
R 41	13.1	24V	561005	BATT. CPT.	CONDENSER SPEED CTR HI
R 42	6.3	12V	562092	BATT. CPT	EATON TRANSM.
R 43	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 44	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM
R 45					
R 46					
R 47	23.1	24V	561707	GALLEY COMPT	GALLEY-LIQUID CONTAINERS
R 48	23.1	24V	561707	GALLEY COMPT	GALLEY-COFFEE MAKER
R 49	21.1	24V	561707	FR JCT BOX	ABS - SERVICE BRK RLY
R 50					
R 51	11.3	24V	562092	FR JCT BOX	DRIVER'S LTS RLY- ENT. DOOR SIGN.
R 52	21.1	24V	561707	FR JCT BOX	ABS - W/TR SIGN. RETARDER
R 53	1.1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR
R 54	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY RR
R 55	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY FR
R 56					
R 57	9.1	24V	561707	FR JCT BOX	DAY'S BLINKER
R 58					

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 59	9.3	12V	562092	RR JCT BOX	DOCKING LTS
R 60					
R 61	9.3	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL
R 62					
R 63					
R 64					
R 65					
R 66	20.3	24V	561707	SS JCT PANEL	SOUND SYSTEM VIDEO
R 67	20.1	12V	562092	SS JCT PANEL	SOUND SYSTEM RADIO
R 68	20.1	24V	561991	SS JCT PANEL	SOUND SYSTEM AMPLIFIER
R 69					
R 70					
R 71					
R 72					
R 73					
R 74					
R 75					
R 76					
R 77					
R 78	1.1	12V	562092	FR JCT BOX	MASTER SWITCH
R 79	23	24V	561707	GALLEY CPT.	GALLEY-REFRIGERATOR
R 80	11.1	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R 81					
R 82	19	24V	561707	FR JCT BOX	RETARDER WT
R 83					
R 84	8	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R 85	8	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R 86					
R 87	19	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R 88					
R 89	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 90	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 91	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 92	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 93	26	24V	561707	RR JCT BOX	PRE-HEAT WATER HEATER (WEBASTO)
R 94	25	24V	561707	RR JCT BOX	WCL - SYSTEM
R 95	25	24V	561707	RR JCT BOX	WCL - MAGNETIC SW. SIGN.
R 96	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR ALARM
R 97	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR PARK. BRAKE
R 98	25	24V	561707	RR JCT BOX	WCL -.ALTERNATOR SIGNAL
R 99	8	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 100					
R 101				RR JCT BOX	FUEL FILTER HEATER
R 102	17	24V	561707	RR JCT BOX	LAVATORY FLUORESCENT
R 103	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN
R 104	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - L.H.
R 105	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - R.H.
R 106	17.1	24V	561707	RR JCT BOX	LAVATORY FAN
R 107					
R 2010	26.2	24V	561230	WEBASTO PRE-HEAT	WEBASTO
R A1	4.2	24V	561707	RR JCT BOX	PRE-EXITATION RELAY BOSCH ALT.
R A2	4.2	24V	561707	RR JCT BOX	PRE-EXITATION RELAY BOSCH ALT.
R A3	4.2	24V	561707	RR JCT BOX	ALT. 1 OR ALT.2 RUN RELAY
R A4	4.2	24V	561707	RR JCT BOX	ALT. 1 AND ALT. 2 RUN RELAY
R PS	4.1SP1	24V	561707	FR JCT BOX	IDLE POWER SHUT DOWN
R TS	5.1SP1	24V	561707	FR JCT BOX	IDLE POWER SHUT DOWN
V IMN	6	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
V IMR	6	12V	562092	RR JCT BOX	VIM WORLD TR.-B/U SIGNAL
V IM1	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
V IM2	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
V IM3	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
V IM4	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT4 RETARD. ON SIGNAL

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

RESISTORS NUMBER CODE

No.	PAGE	OHM(S)	#PREV.	LOCATION	FUNCTION
RS 1	5	11 K	561898	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 2	5	3.6 K	561897	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 3	9.3	1 (2)	561537	FR JCT BOX	FOG LT - RH
RS 4	9.3	1 (2)	561537	FR JCT BOX	FOG LT - LH
RS 5	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - LH
RS 7	9.3	.82 (2)	060806	RR JCT BOX	PARKING BRAKE STOP LTS
RS 8	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - RH
RS 11	22	12	561191	FR TOP	DEFROSTER SPEED
RS 12	22	12	561191	FR TOP	DEFROSTER SPEED
RS 13	17	80 (2)	562108	FR TOP	FR DESTINATION SIGN
RS 9	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - RH
RS 10	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - LH
RS 17	7	220	562498	FR JCT BOX	FIRE ALARM
RS 18	8	75 K	064208	RR JCT BOX	FAN CLUTCH W/RETARDER
RS 20	15	1 K	562470	RR JCT BOX	WORLD TR. SPEED TO DDEC III

RESISTORS NUMBER CODE

No.	PAGE	OHM(S)	#PREV.	LOCATION	FUNCTION
RS 1	5	11 K	561898	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 2	5	3.6 K	561897	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 3	9.3	1 (2)	561537	FR JCT BOX	FOG LT - RH
RS 4	9.3	1 (2)	561537	FR JCT BOX	FOG LT - LH
RS 5	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - LH
RS 7	9.3	.82 (2)	060806	RR JCT BOX	PARKING BRAKE STOP LTS
RS 8	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - RH
RS 11	22	12	561191	FR TOP	DEFROSTER SPEED
RS 12	22	12	561191	FR TOP	DEFROSTER SPEED
RS 13	17	80 (2)	562108	FR TOP	FR DESTINATION SIGN
RS 9	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - RH
RS 10	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - LH
RS 17	7	220	562498	FR JCT BOX	FIRE ALARM
RS 18	8	75 K	064208	RR JCT BOX	FAN CLUTCH W/RETARDER
RS 20	15	1 K	562470	RR JCT BOX	WORLD TR. SPEED TO DDEC III
RS 21	22	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 24	9.1	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 25	9.3	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 26	10	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 28	26.1	1K	562470	DASH	DIVIDER VOLTAGE FOR LED

RESISTORS NUMBER CODE

No.	PAGE	OHM(S)	#PREV.	LOCATION	FUNCTION
RS 1	5	11 K	561898	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 2	5	3.6 K	561897	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 3	9.3	1 (2)	561537	FR JCT BOX	FOG LT - RH
RS 4	9.3	1 (2)	561537	FR JCT BOX	FOG LT - LH
RS 5	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - LH
RS 7	9.3	.82 (2)	060806	RR JCT BOX	PARKING BRAKE STOP LTS
RS 8	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - RH
RS 11	22	12	561191	FR TOP	DEFROSTER SPEED
RS 12	22	12	561191	FR TOP	DEFROSTER SPEED
RS 13	17	80 (2)	562108	FR TOP	FR DESTINATION SIGN
RS 9	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - RH
RS 10	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - LH
RS 17	7	220	562498	FR JCT BOX	FIRE ALARM
RS 18	8	75 K	064208	RR JCT BOX	FAN CLUTCH W/RETARDER
RS 20	15	1 K	562470	RR JCT BOX	WORLD TR. SPEED TO DDEC III
RS 21	22	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 24	9.1	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 25	9.3	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 26	10	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 28	26.1	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 29	23.1	1K	562470	GALLEY	DIVIDER VOLTAGE FOR LED
RS 30	23.1	1K	562470	GALLEY	DIVIDER VOLTAGE FOR LED
RS 31	23.1	1K	562470	GALLEY	DIVIDER VOLTAGE FOR LED

RESISTORS NUMBER CODE

No.	PAGE	OHM(S)	#PREV.	LOCATION	FUNCTION
RS 1	5	11 K	561898	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 2	5	3.6 K	561897	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 3	9.3	1 (2)	561537	FR JCT BOX	FOG LT - RH
RS 4	9.3	1 (2)	561537	FR JCT BOX	FOG LT - LH
RS 5	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - LH
RS 7	9.3	.82 (2)	060806	RR JCT BOX	PARKING BRAKE STOP LTS
RS 8	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - RH
RS 11	22	12	561191	FR TOP	DEFROSTER SPEED
RS 12	22	12	561191	FR TOP	DEFROSTER SPEED
RS 13	17	80 (2)	562108	FR TOP	FR DESTINATION SIGN
RS 9	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - RH
RS 10	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - LH
RS 17	7	220	562498	FR JCT BOX	FIRE ALARM
RS 18	8	75 K	064208	RR JCT BOX	FAN CLUTCH W/RETARDER
RS 20	15	1 K	562470	RR JCT BOX	WORLD TR. SPEED TO DDEC III
RS 21	22	15K	562908	DASH	CURRENT LIMIT FOR LED
RS 24	9.1	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 25	9.3	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 26	10	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 28	26.1	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 29	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 30	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 31	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 32	13.3	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 33	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 34	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 35	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED

RESISTORS NUMBER CODE

No.	PAGE	OHM(S)	#PREV.	LOCATION	FUNCTION
RS 1	5	11 K	561898	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 2	5	3.6 K	561897	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 3	9.3	1 (2)	561537	FR JCT BOX	FOG LT - RH
RS 4	9.3	1 (2)	561537	FR JCT BOX	FOG LT - LH
RS 5	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - LH
RS 7	9.3	.82 (2)	060806	RR JCT BOX	PARKING BRAKE STOP LTS
RS 8	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - RH
RS 11	22	12	561191	FR TOP	DEFROSTER SPEED
RS 12	22	12	561191	FR TOP	DEFROSTER SPEED
RS 13	17	80 (2)	562108	FR TOP	FR DESTINATION SIGN
RS 9	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - RH
RS 10	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - LH
RS 17	7	220	562498	FR JCT BOX	FIRE ALARM
RS 18	8	75 K	064208	RR JCT BOX	FAN CLUTCH W/RETARDER
RS 20	15	1 K	562470	RR JCT BOX	WORLD TR. SPEED TO DDEC III
RS 21	22	15K	562908	DASH	CURRENT LIMIT FOR LED
RS 24	9.1	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 25	9.3	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 26	10	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 28	26.1	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 29	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 30	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 31	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 32	13.3	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 33	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 34	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 35	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 36	13.1	10	064907	BATT. COMPT.	CURRENT LIMIT FOR RELAY
RS 37	13.1	5	064907	BATT. COMPT.	CURRENT LIMIT FOR RELAY

RESISTORS NUMBER CODE

No.	PAGE	OHM(S)	#PREV.	LOCATION	FUNCTION
RS 1	5	11 K	561898	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 2	5	3.6 K	561897	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 3	9.3	1 (2)	561537	FR JCT BOX	FOG LT - RH
RS 4	9.3	1 (2)	561537	FR JCT BOX	FOG LT - LH
RS 5	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - LH
RS 7	9.3	.82 (2)	060806	RR JCT BOX	PARKING BRAKE STOP LTS
RS 8	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - RH
RS 11	22	12	561191	FR TOP	DEFROSTER SPEED
RS 12	22	12	561191	FR TOP	DEFROSTER SPEED
RS 13	17	80 (2)	562108	FR TOP	FR DESTINATION SIGN
RS 9	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - RH
RS 10	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - LH
RS 17	7	220	562498	FR JCT BOX	FIRE ALARM
RS 18	8	75 K	064208	RR JCT BOX	FAN CLUTCH W/RETARDER
RS 20	15	1 K	562470	RR JCT BOX	WORLD TR. SPEED TO DDEC III
RS 21	22	15K	562908	DASH	CURRENT LIMIT FOR LED
RS 24	9.1	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 25	9.3	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 26	10	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 28	26.1	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 29	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 30	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 31	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 32	13.3	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 33	4.2	30	562948	RR JCT BOX	CURRENT LOAD FOR RELAY CONTACT
RS 33	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 34	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 35	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 36	13.1	10	064907	BATT. COMPT.	CURRENT LIMIT FOR RELAY
RS 37	13.1	5	064907	BATT. COMPT.	CURRENT LIMIT FOR RELAY

RESISTORS NUMBER CODE

No.	PAGE	OHM(S)	#PREV.	LOCATION	FUNCTION
RS 1	5	11 K	561898	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 2	5	3.6 K	561897	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 3	9.3	1 (2)	561537	FR JCT BOX	FOG LT - RH
RS 4	9.3	1 (2)	561537	FR JCT BOX	FOG LT - LH
RS 5	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - LH
RS 6	16.1	5	563006	RH UNDER DASH	VOLTAGE DIV. OPEN DOOR SOL.
RS 7	9.3	.82 (2)	060806	RR JCT BOX	PARKING BRAKE STOP LTS
RS 8	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - RH
RS 11	22	12	561191	FR TOP	DEFROSTER SPEED
RS 12	22	12	561191	FR TOP	DEFROSTER SPEED
RS 13	17	80 (2)	562108	FR TOP	FR DESTINATION SIGN
RS 9	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - RH
RS 10	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - LH
RS 17	7	220	562498	FR JCT BOX	FIRE ALARM
RS 18	8	75 K	064208	RR JCT BOX	FAN CLUTCH W/RETARDER
RS 20	15	1 K	562470	RR JCT BOX	WORLD TR. SPEED TO DDEC III
RS 21	22	15K	562908	DASH	CURRENT LIMIT FOR LED
RS 24	9.1	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 25	9.3	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 26	10	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 28	26.1	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 29	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 30	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 31	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 32	13.3	1.5K	562908	DASH	CURRENT LIMIT FOR LED
RS 33	4.2	30	562948	RR JCT BOX	CURRENT LOAD FOR RELAY CONTACT
RS 33	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 34	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 35	23.1	1.5K	562908	GALLEY	CURRENT LIMIT FOR LED
RS 36	13.1	10	064907	BATT. COMPT.	CURRENT LIMIT FOR RELAY
RS 37	13.1	5	064907	BATT. COMPT.	CURRENT LIMIT FOR RELAY

WIRING DIAGRAM KEYS

24-85B-16
- GAUGE
- CIRCUIT NUMBER
- CIRCUIT VOLTAGE

WIRE CROSSING

WIRE SOLDERING JOINT

SHIELDED WIRES

TWISTED WIRES

STUD TERMINAL

JUNCTION BLOCK

DUMMY

FS — FROM GROUND STUD GROUND SECTION

CHASSIS GROUND

ACCESSORY CHASSIS GROUND

C23 — CONNECTOR CODE NUMBER
5 — PIN TERMINAL / CAVITY NUMBER / SOCKET TERMINAL

ILLUMINATING LAMP

FLUORESCENT LAMP

D3 — CODE NUMBER
ANODE — CATHODE — DIODE/RECTIFIER

RS2 — CODE NUMBER
4.3 KΩ — OHMS

CODE NUMBER R2 — RELAY S.P.D.T. SINGLE POLE, DOUBLE THROW, SUPPRESSOR DIODE
COIL <85 — 86> COIL
N.O. <87 — 30> COM.
N.C. <87A

CODE NUMBER R2 — RELAY S.P.S.T. SINGLE POLE, SINGLE THROW, SUPPRESSOR DIODE
COIL <85 — 86> COIL
N.O. <87 — 30> COM.

CODE NUMBER R2 — RELAY S.P.D.T. SINGLE POLE, DOUBLE THROW
COIL <85 — 86> COIL
N.O. <87 — 30> COM.
N.C. <87A

CODE NUMBER → R2 — RELAY-MAGNETIC D.P.D.T. DOUBLE POLE, DOUBLE THROW
COIL — COIL
COM. — N.O.
COM. — N.C.
BAT.

CODE NUMBER → R2 — RELAY-MAGNETIC S.P.S.T. SINGLE POLE, SINGLE THROW
COIL — COIL
COM. — N.O.
BAT.

7.5 — AMPACITY FUSE

CB23 / 10A — CIRCUIT BREAKER, CODE NUMBER, AMPACITY

SWITCH S.P.D.T. SINGLE POLE, DOUBLE THROW (N.O. / N.C. COM.)

PRESSURE SWITCH N.C.

PRESSURE SWITCH N.O.

SWITCH MOMENTARY CONTACT

SWITCH PUSH BUTTON

SWITCH MECHANICAL LOCK (LOCK)

M — ELECTRIC MOTOR

110V EXTERIOR PLUG RECEPTACLE

ELECTRIC HORN

THERMOSTAT

HEATER

SOLENOID VALVE

BATTERY

FR. JCT BOX - JUNCTION BLOCK

RR. JCT BOX - JUNCTION BLOCK

BAT. JCT PANEL - JUNCTION BLOCK

BLK	BLACK
YEL	YELLOW
RED	RED
WH	WHITE
GRY	GREY
ORA	ORANGE
BLU	BLUE
GRN	GREEN
BRN	BROWN
PUR	PURPLE
PK	PINK

WIRING DIAGRAM KEYS




WIRE CROSSING


WIRE SOLDERING JOINT

SHIELDED WIRES

TWISTED WIRES

STUD TERMINAL

JUNCTION BLOCK

DUMMY




CHASSIS GROUND

ACCESSORY CHASSIS GROUND

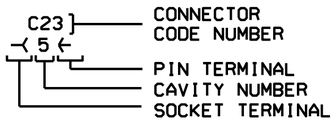

ILLUMINATING LAMP

FLUORESCENT LAMP





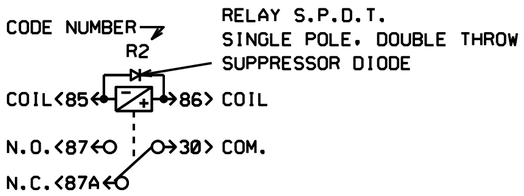

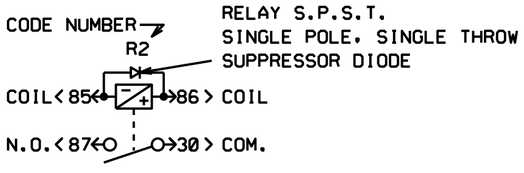

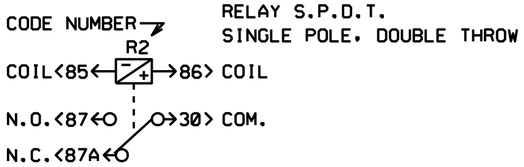

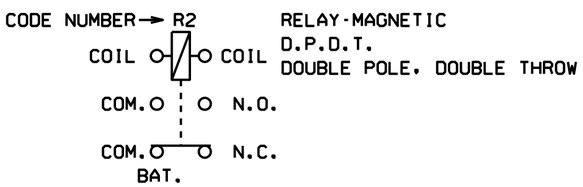

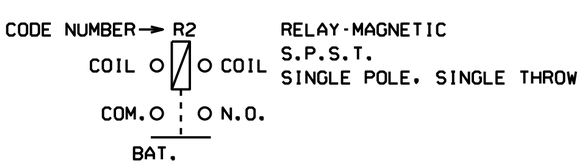



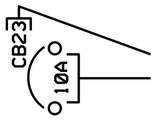


PRESSURE SWITCH N.C.


PRESSURE SWITCH N.O.

SWITCH MOMENTARY CONTACT


SWITCH PUSH BUTTON



110V EXTERIOR PLUG RECEPTACLE

ELECTRIC HORN

THERMOSTAT


HEATER

SOLENOID VALVE

FR. JCT BOX - JUNCTION BLOCK

RR. JCT BOX - JUNCTION BLOCK

BAT. JCT PANEL - JUNCTION BLOCK

BLK	BLACK
YEL	YELLOW
RED	RED
WH	WHITE
GRY	GREY
ORA	ORANGE
BLU	BLUE
GRN	GREEN
BRN	BROWN
PUR	PURPLE
PK	PINK

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V BATTERY
F 2	6	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V IGNITION
F 3	7	20A	562605	FR. JCT. BOX	ELECTRICAL HORNS
F 4	7	5A	562259	FR. JCT. BOX	FIRE ALARM
F 5	8	10A	562407	RR. JCT. BOX	AIR DRYER
F 6	8	5A	562602	FR. JCT. BOX	ETHER COLD START & CRUISE DECEL SW.
F 7	8	5A	562602	FR. JCT. BOX	PARKING BRAKE PRESSURE SW.
F 8	9.2	10A	562407	FR. JCT. BOX	CORNERING LTS
F 9	9.3	15A	562604	RR. JCT. BOX	DOCKING LTS
F 10	9.3	15A	562604	FR. JCT. BOX	FOG LTS
F 11	11.1	5A	562259	FR. JCT. BOX	FRONT SERVICE CPT LTS
F 12	11.2	10A	562407	RR. JCT. BOX	AISLE LTS
F 13	11.2	7.5A	562602	RR. JCT. BOX	EMERGENCY EXIT LTS
F 14	11.3	7.5A	562602	FR. JCT. BOX	DRIVER'S LTS
F 15	11.3	15A	562604	RR. JCT. BOX	READING LTS RH
F 16	11.3	15A	562604	RR. JCT. BOX	READING LTS LH
F 17	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING R.H.
F 18	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT RH
F 19	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT LH
F 20	11.3	3A	562599	FR. JCT. BOX	GENERAL & READING LTS. SW.
F 21	12	10A	560061	RR. JCT. BOX	PRIME PUMP
F 22	14	10A	562407	FR. JCT. BOX	POWER 12V OUTLET
F 23	14	15A	562604	FR. JCT. BOX	DRIVER'S WINDOW LIFTER
F 24	14	15A	562604	FR. JCT. BOX	CIGAR LIGHTER
F 25	14	3A	562599	FR. JCT. BOX	SUN VISOR
F 26	15	5A	562259	FR. JCT. BOX	WATER HTR TIMER
F 27	23	5A	562259	RR. JCT. BOX	GALLEY LAMP & LAVATORY NIGHT LTS.
F 28	17	10A	562407	RR. JCT. BOX	LAVATORY PUMP
F 29	17	7.5A	562602	RR. JCT. BOX	LAVATORY LTS
F 31	17	5A	562259	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRONIC
F 31	17	7.5A	562602	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRIC
F 32	11.3	5A	562259	FR. JCT. BOX	PASSENGER NO SMOKING LTS
F 33	18	5A	562259	FR. JCT. BOX	KNEELING SYSTEM
F 34	19	3A	562599	FR. JCT. BOX	LUGGAGE DOOR LOCK
F 39	22	10A	562407	FR. JCT. BOX	UPPER WINDSHIELD FAN DEFROST
F 40	22	20A	562605	FR. JCT. BOX	HEATED WINDSCHIELD LH
F 41	22	20A	562605	FR. JCT. BOX	HEATED WINDSCHIELD RH
F 46	24	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 24V SPARTAN
F 47	24	7.5A	562407	FR. JCT. BOX	MIRROR ADJUST & HEATED 12V RAMCO
F 48	25	10A	562407	RR. JCT. BOX	WHEEL CHAIR LIFT POWER CONTROL
F 49	26	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 50	26	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER
F 51	11.2	7.5A	562602	RR. JCT. BOX	HAR RACK CPT LTS
F 57	17	5A	562259	RR. JCT. BOX	LAVATORY FLUORESCENT
F 58	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING L.H.
F 59	17.1	3A	562599	RR. JCT. BOX	GENERATOR RUN RLY.
F 60	17.1	10A	562407	RR. JCT. BOX	LAVATORY FAN
F 61	27	1A	560893	FR. JCT. BOX	INTERCOM
F 70	23	7.5A	562602	GALLEY PANEL	GALLEY RH CONTAINER
F 71	23	7.5A	562602	GALLEY PANEL	GALLEY LH CONTAINER
F 72	23	10A	562407	GALLEY PANEL	GALLEY REFRIGERATOR COMPRESSOR
F 73	23	35A	562608	GALLEY PANEL	GALLEY COFFEMAKER
F 74	23	7.5	560598	BAT. CPT.	GALLEY REFRIGERATOR

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V BATTERY
F 2	6.1	10A	562407	RR. JCT. BOX	WORLD TRANS.& EATON TRANS.12V IGNITION
F 3	7.2	20A	562605	FR. JCT. BOX	ELECTRICAL HORNS
F 4	7.2	5A	562259	FR. JCT. BOX	FIRE ALARM
F 5	8.1	10A	562407	RR. JCT. BOX	AIR DRYER
F 6	5.1	5A	562602	FR. JCT. BOX	CRUISE DECEL SW.
F 7	8.1	5A	562602	FR. JCT. BOX	PARKING BRAKE PRESSURE SW.
F 8	9.2	10A	562407	FR. JCT. BOX	CORNERING LTS
F 9	9.3	15A	562604	RR. JCT. BOX	DOCKING LTS
F 10	9.3	15A	562604	FR. JCT. BOX	FOG LTS
F 11	11.1	5A	562259	FR. JCT. BOX	FRONT SERVICE CPT LTS
F 12	11.2	10A	562407	RR. JCT. BOX	AISLE LTS
F 13	11.2	7.5A	562602	RR. JCT. BOX	EMERGENCY EXIT LTS
F 14	11.3	15A	562602	FR. JCT. BOX	DRIVER'S LTS
F 15	11.3	15A	562604	RR. JCT. BOX	READING LTS RH
F 16	11.3	15A	562604	RR. JCT. BOX	READING LTS LH
F 17	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING R.H.
F 18	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT RH
F 19	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT LH
F 20	11.3	5A	562599	FR. JCT. BOX	GENERAL & READING LTS. SW.
F 21	12.1	10A	560061	RR. JCT. BOX	PRIME PUMP
F 22	14.1	10A	562407	FR. JCT. BOX	POWER 12V OUTLET
F 23	14.1	15A	562604	FR. JCT. BOX	DRIVER'S WINDOW LIFTER
F 24	14.1	15A	562604	FR. JCT. BOX	CIGAR LIGHTER
F 25	14.1	3A	562599	FR. JCT. BOX	SUN VISOR
F 26	26.1	5A	562259	FR. JCT. BOX	WATER HTR TIMER
F 27	17.1	5A	562259	RR. JCT. BOX	GALLEY LAMP & LAVATORY NIGHT LTS.
F 28	17.1	10A	562407	RR. JCT. BOX	LAVATORY PUMP
F 29	17.1	7.5A	562602	RR. JCT. BOX	LAVATORY LTS
F 31	17.1	5A	562259	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRONIC
F 31	17.1	7.5A	562602	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRIC
F 32	11.3	5A	562259	FR. JCT. BOX	PASSENGER NO SMOKING LTS
F 33	18.1	5A	562259	FR. JCT. BOX	KNEELING SYSTEM
F 34	19.1	3A	562599	FR. JCT. BOX	LUGGAGE DOOR LOCK
F 39	22.1	10A	562407	FR. JCT. BOX	UPPER WINDSHIELD FAN DEFROST
F 40	22.1	20A	562605	FR. JCT. BOX	HEATED WINDSCHIELD LH
F 41	22.1	20A	562605	FR. JCT. BOX	HEATED WINDSCHIELD RH
F 46	24.1	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 24V SPARTAN
F 47	24.3	7.5A	562407	FR. JCT. BOX	MIRROR ADJUST & HEATED 12V RAMCO
F 48	25.2	10A	562407	RR. JCT. BOX	WHEEL CHAIR LIFT POWER CONTROL
F 49	26.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 50	26.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER
F 51	11.2	7.5A	562602	RR. JCT. BOX	HAR RACK CPT LTS
F 57	17.1	5A	562259	RR. JCT. BOX	LAVATORY FLUORESCENT
F 58	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING L.H.
F 59	4.1	3A	562599	RR. JCT. BOX	GENERATOR RUN RLY.
F 60	17.1	10A	562407	RR. JCT. BOX	LAVATORY FAN
F 61	27.1	1A	560893	FR. JCT. BOX	INTERCOM
F 62	2.1	3A	562599	RR. JCT. BOX	PRO-LINK & FIRE ALARM
F 63	27.1	3A	560893	MON. CLARION	BACK-UP MONITOR CLARION
F 70	23.1	7.5A	562602	GALLEY PANEL	GALLEY RH CONTAINER
F 71	23.1	7.5A	562602	GALLEY PANEL	GALLEY LH CONTAINER
F 72	23.1	10A	562407	GALLEY PANEL	GALLEY REFRIGERATOR COMPRESSOR
F 73	23.1	35A	562608	GALLEY PANEL	GALLEY COFFEMAKER
F 74	23.1	7.5	560598	BAT. CPT.	GALLEY REFRIGERATOR

LOGIC GATE

TRUTH TABLE

AND GATE



INPUT		OUT
A	B	C
Ø	Ø	Ø
Ø	1	Ø
1	Ø	Ø
1	1	1

▪OUTPUT IS 1 WHEN ALL INPUT IS 1

NAND GATE



INPUT		OUT
A	B	C
Ø	Ø	1
Ø	1	1
1	Ø	1
1	1	Ø

▪ OUTPUT IS Ø WHEN ALL INPUT IS Ø

OR GATE



INPUT		OUT
A	B	C
Ø	Ø	Ø
Ø	1	1
1	Ø	1
1	1	1

▪ OUTPUT IS 1 WHEN EITHER INPUT IS 1

NOR GATE



INPUT		OUT
A	B	C
Ø	Ø	1
Ø	1	Ø
1	Ø	Ø
1	1	Ø

▪ OUTPUT IS 1 WHEN NONE INPUT IS 1

NOT GATE



INPUT	OUT
A	B
Ø	1
1	Ø

▪ OUTPUT IS REVERSE OF INPUT

ON-DELAY

XX SECOND
AFTER A=1
THAN B=1

OFF-DELAY

XX SECOND
AFTER A=Ø
THAN B=Ø

POSITIVE INPUT



INPUT CONNECTED WITH SIGNAL 12 VOLTS OR 24 VOLTS WHEN ACTIVATING

SINKING INPUT



INPUT CONNECTED WITH SIGNAL GROUND WHEN ACTIVATING

INPUT OR OUTPUT LEVEL

LEVEL 1 = 12 VOLTS OR 24 VOLTS

LEVEL Ø = Ø VOLT (TO GROUND)

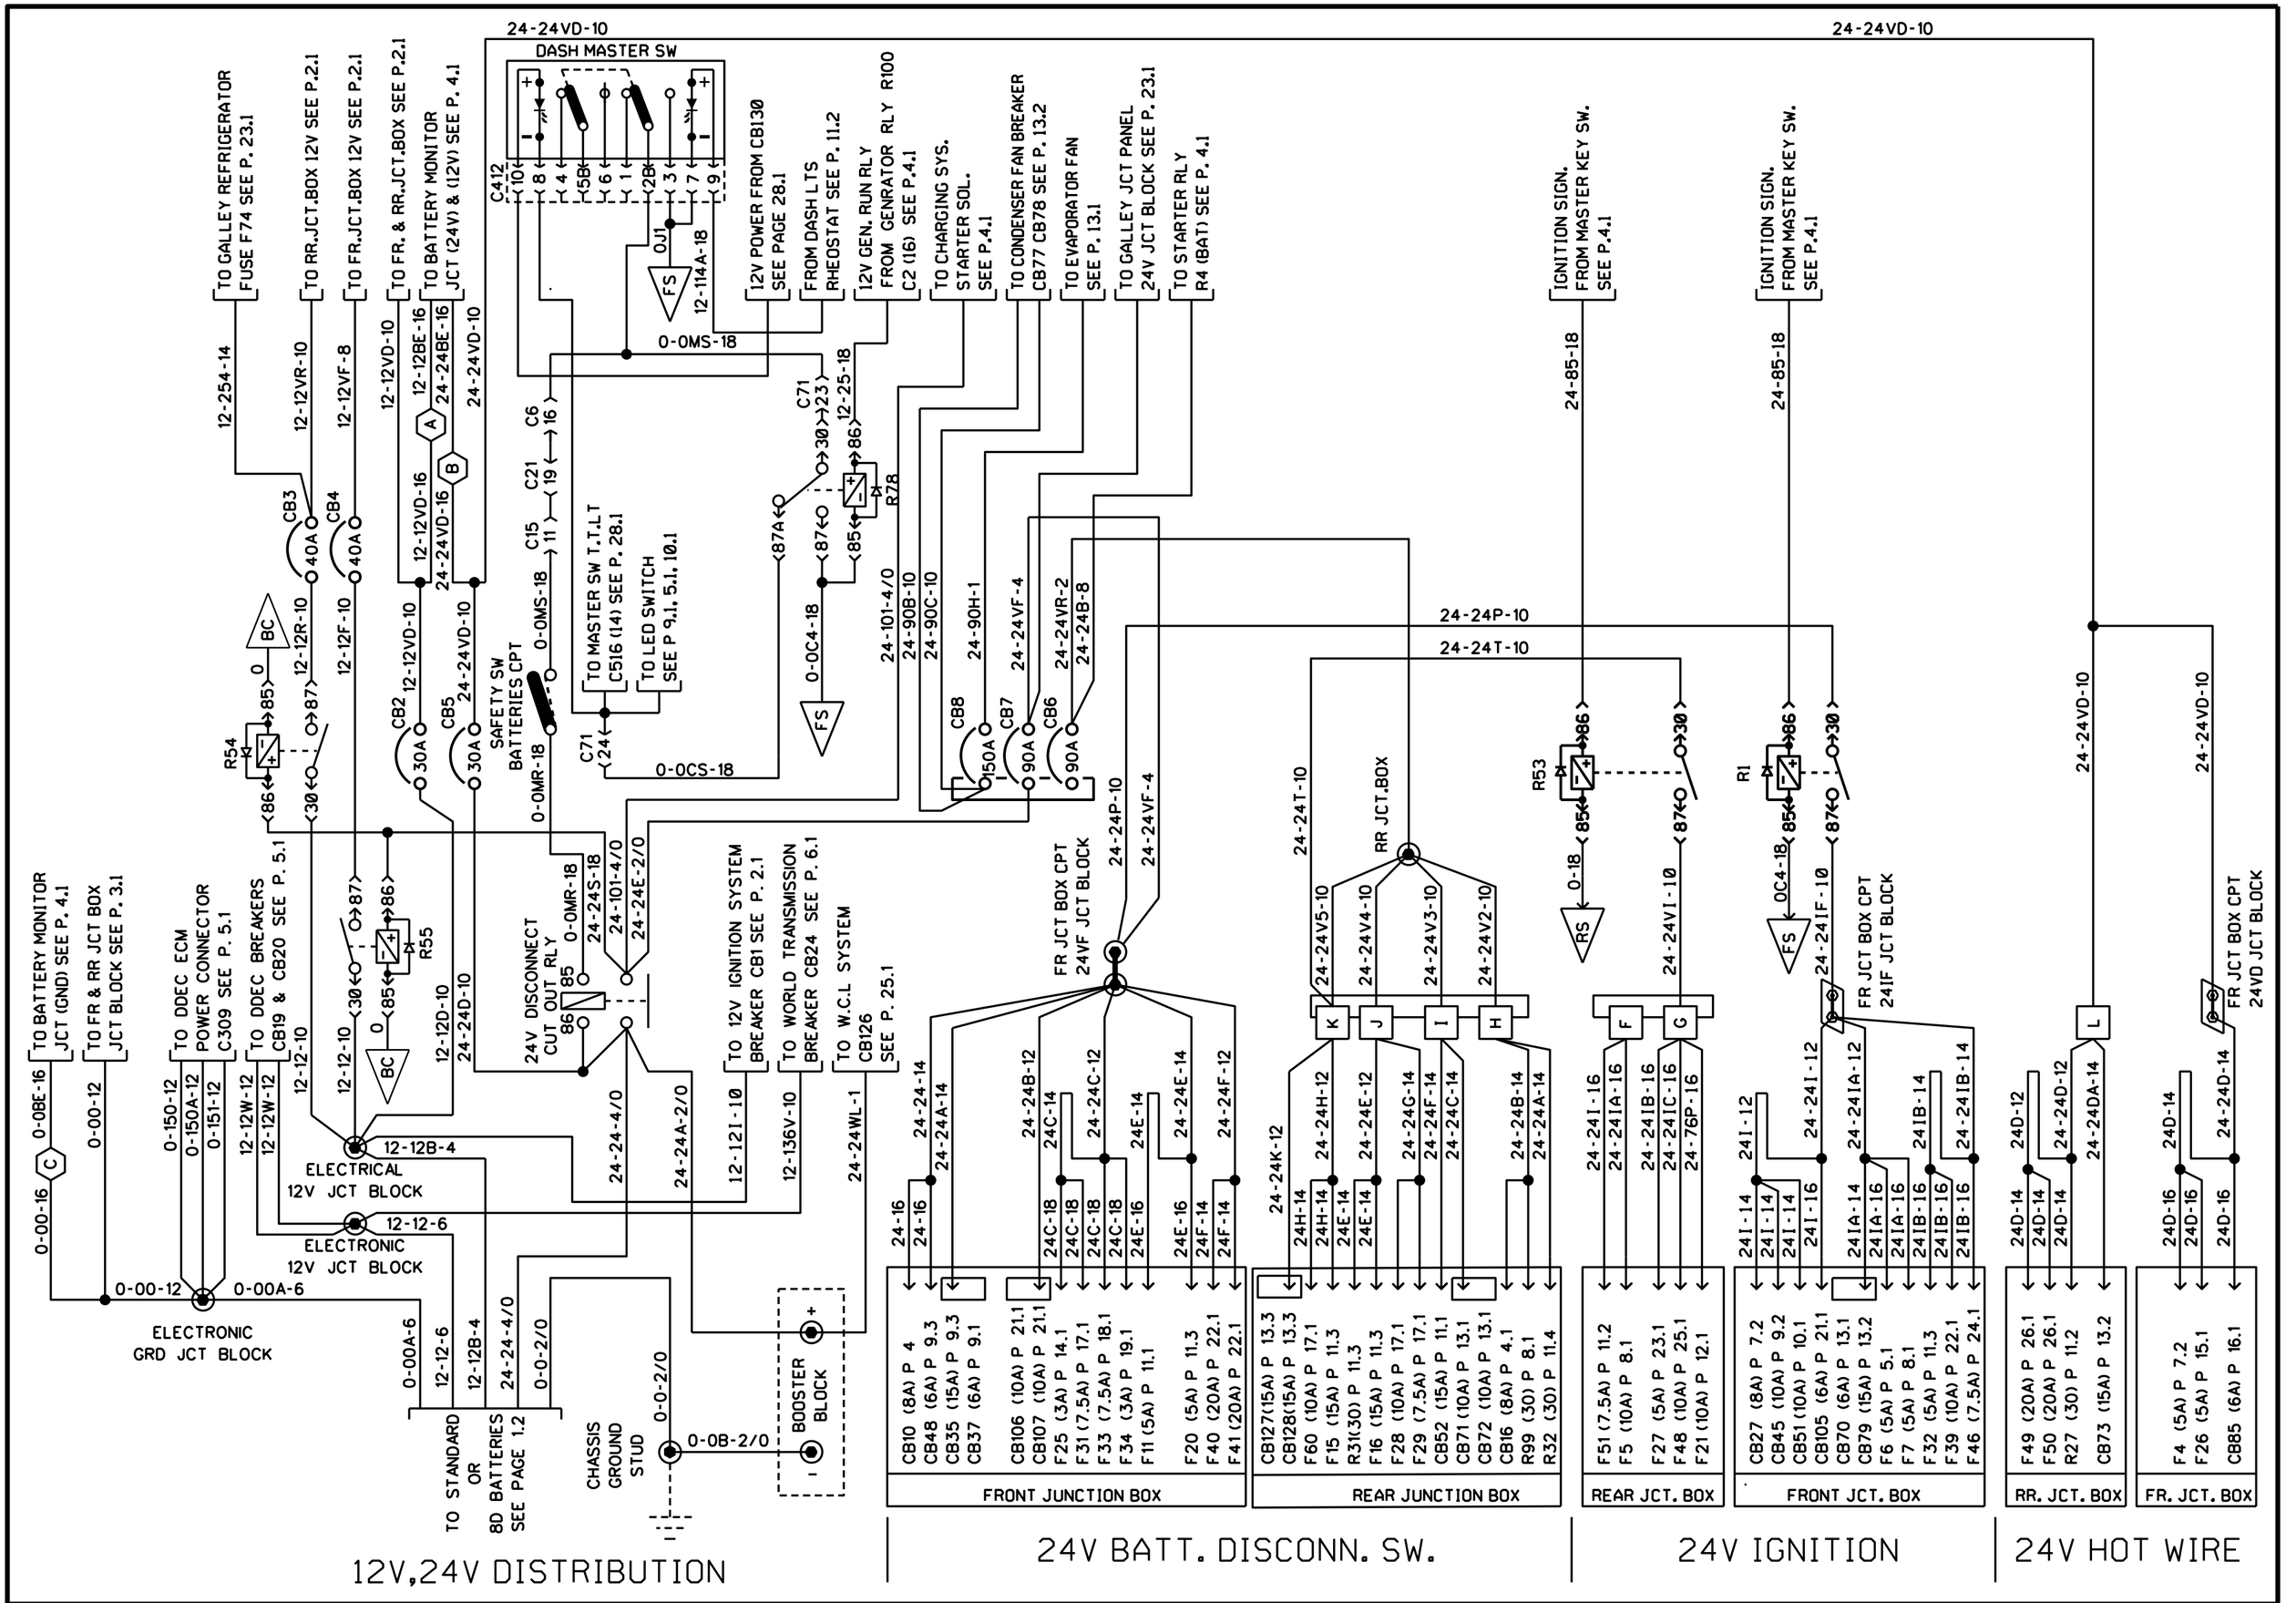

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 1.1	REVISION 00

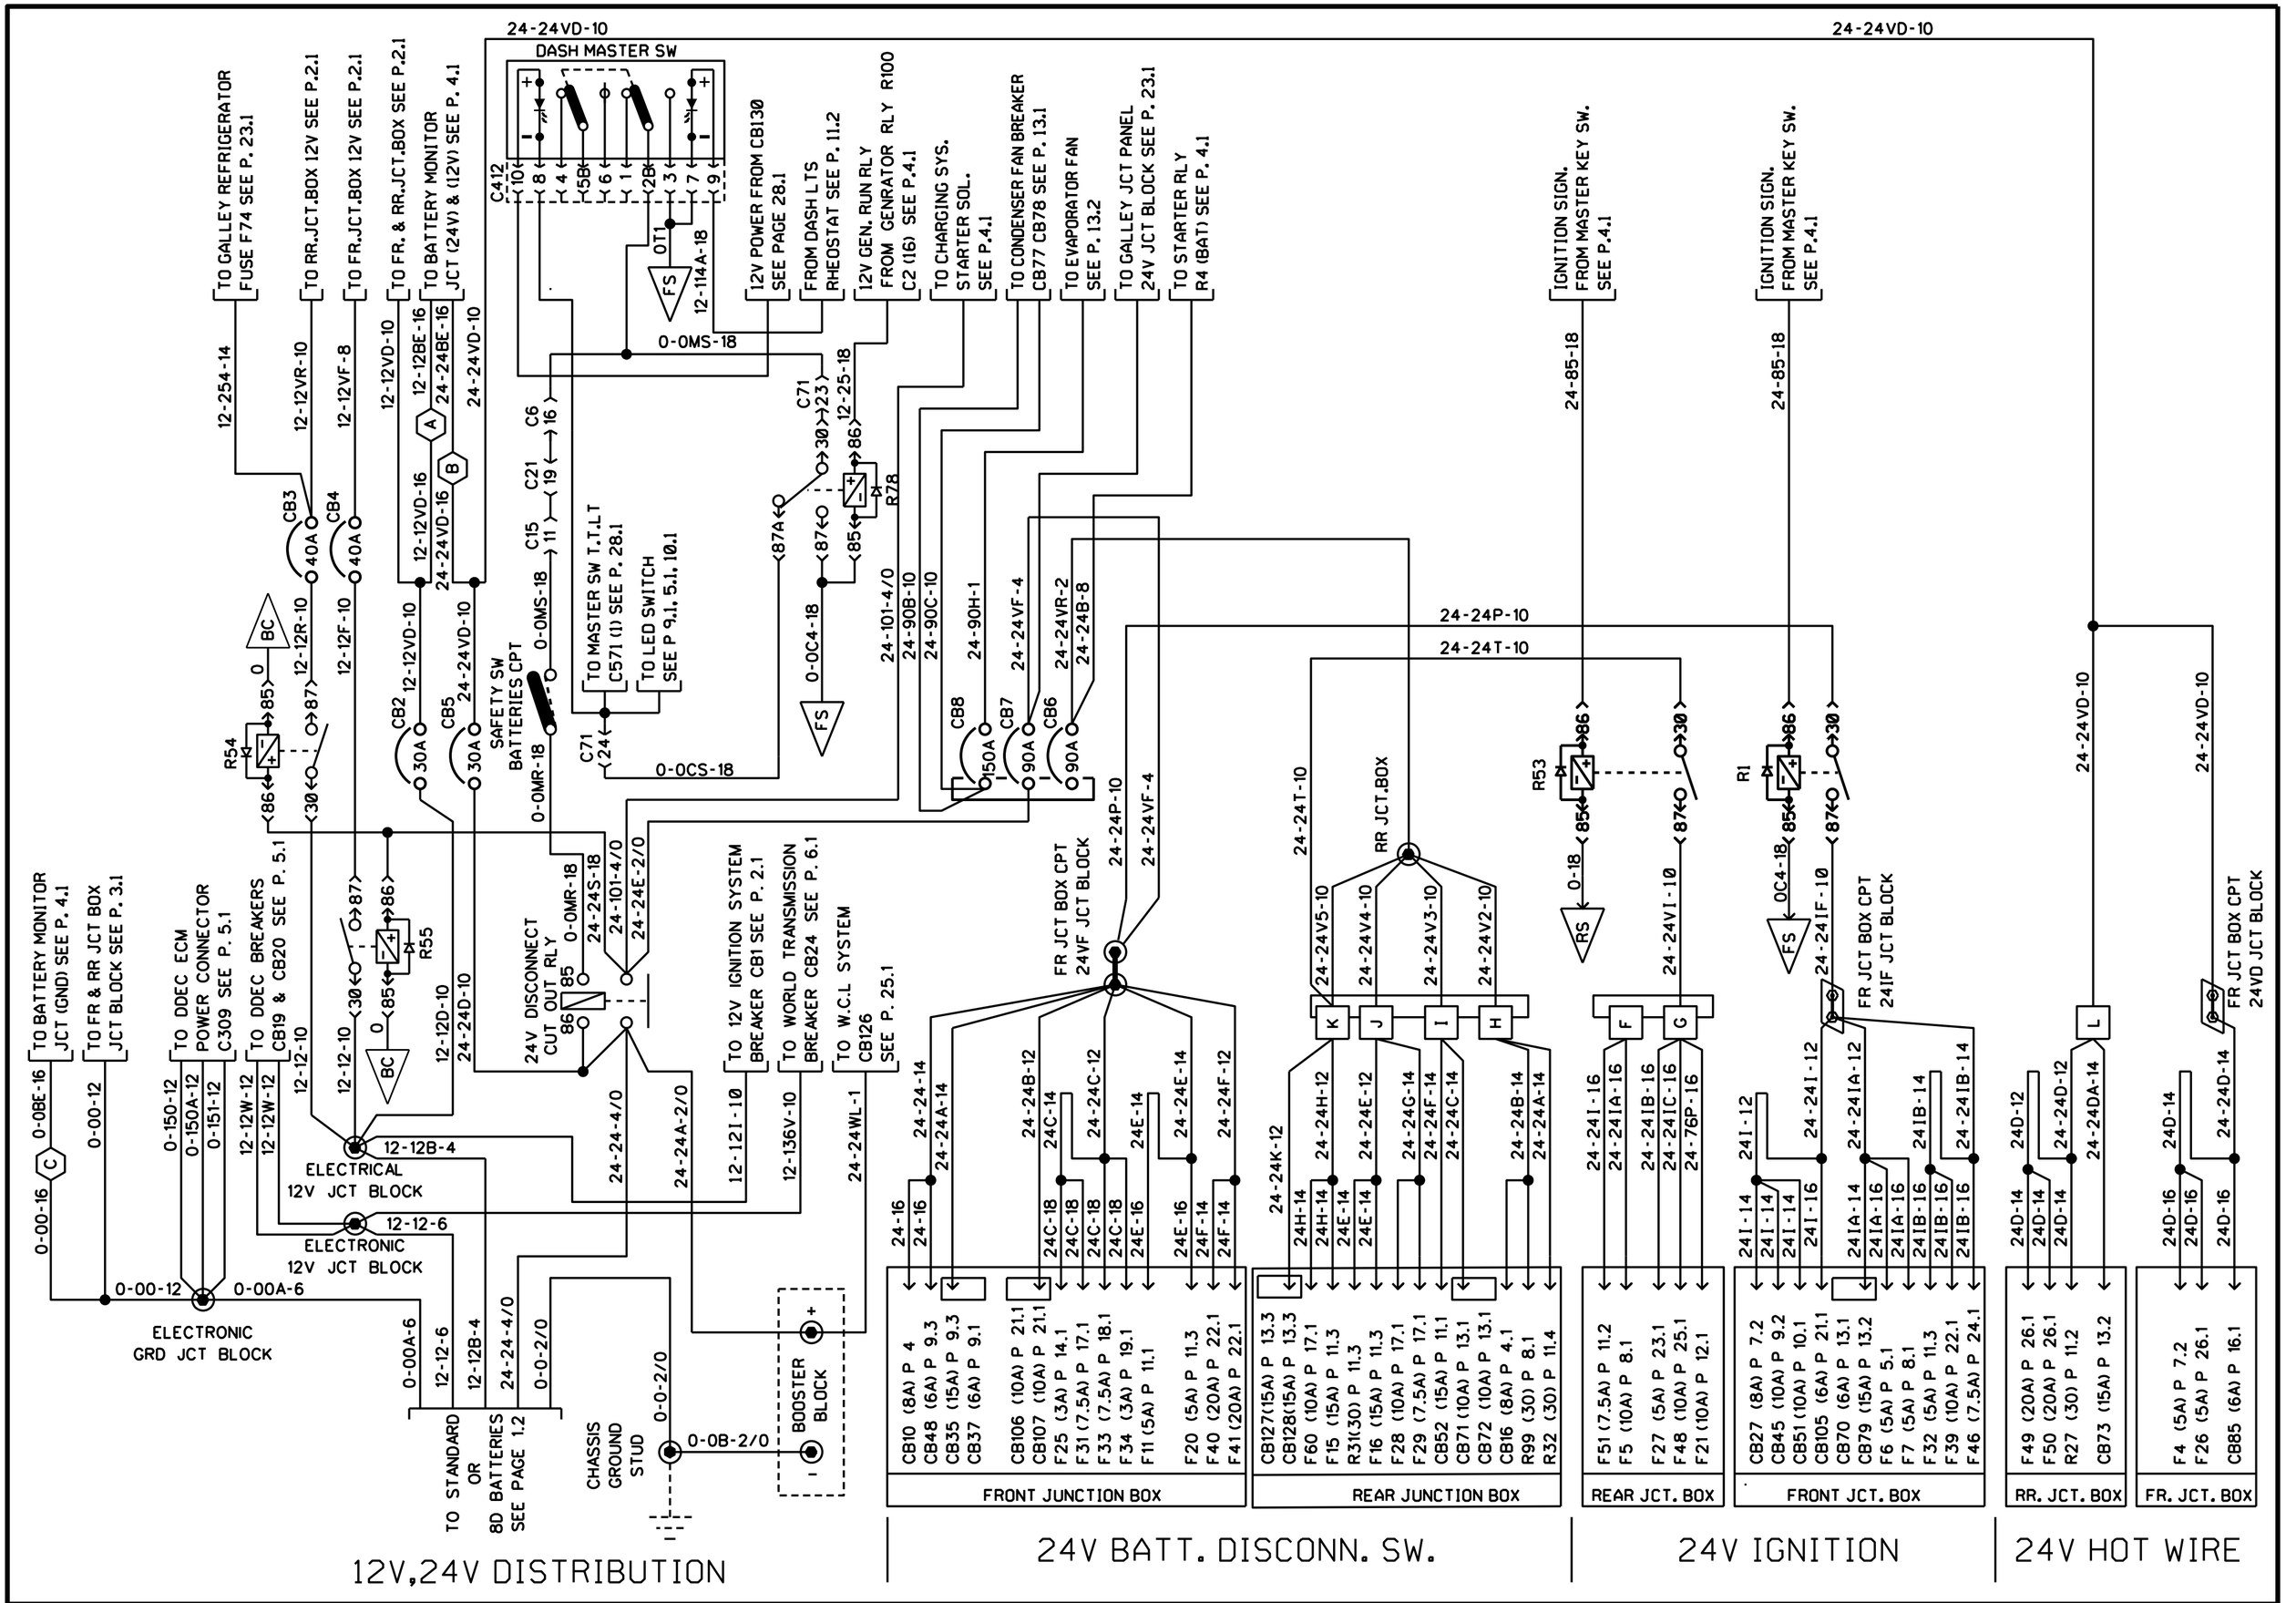

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 1.1	REVISION 01

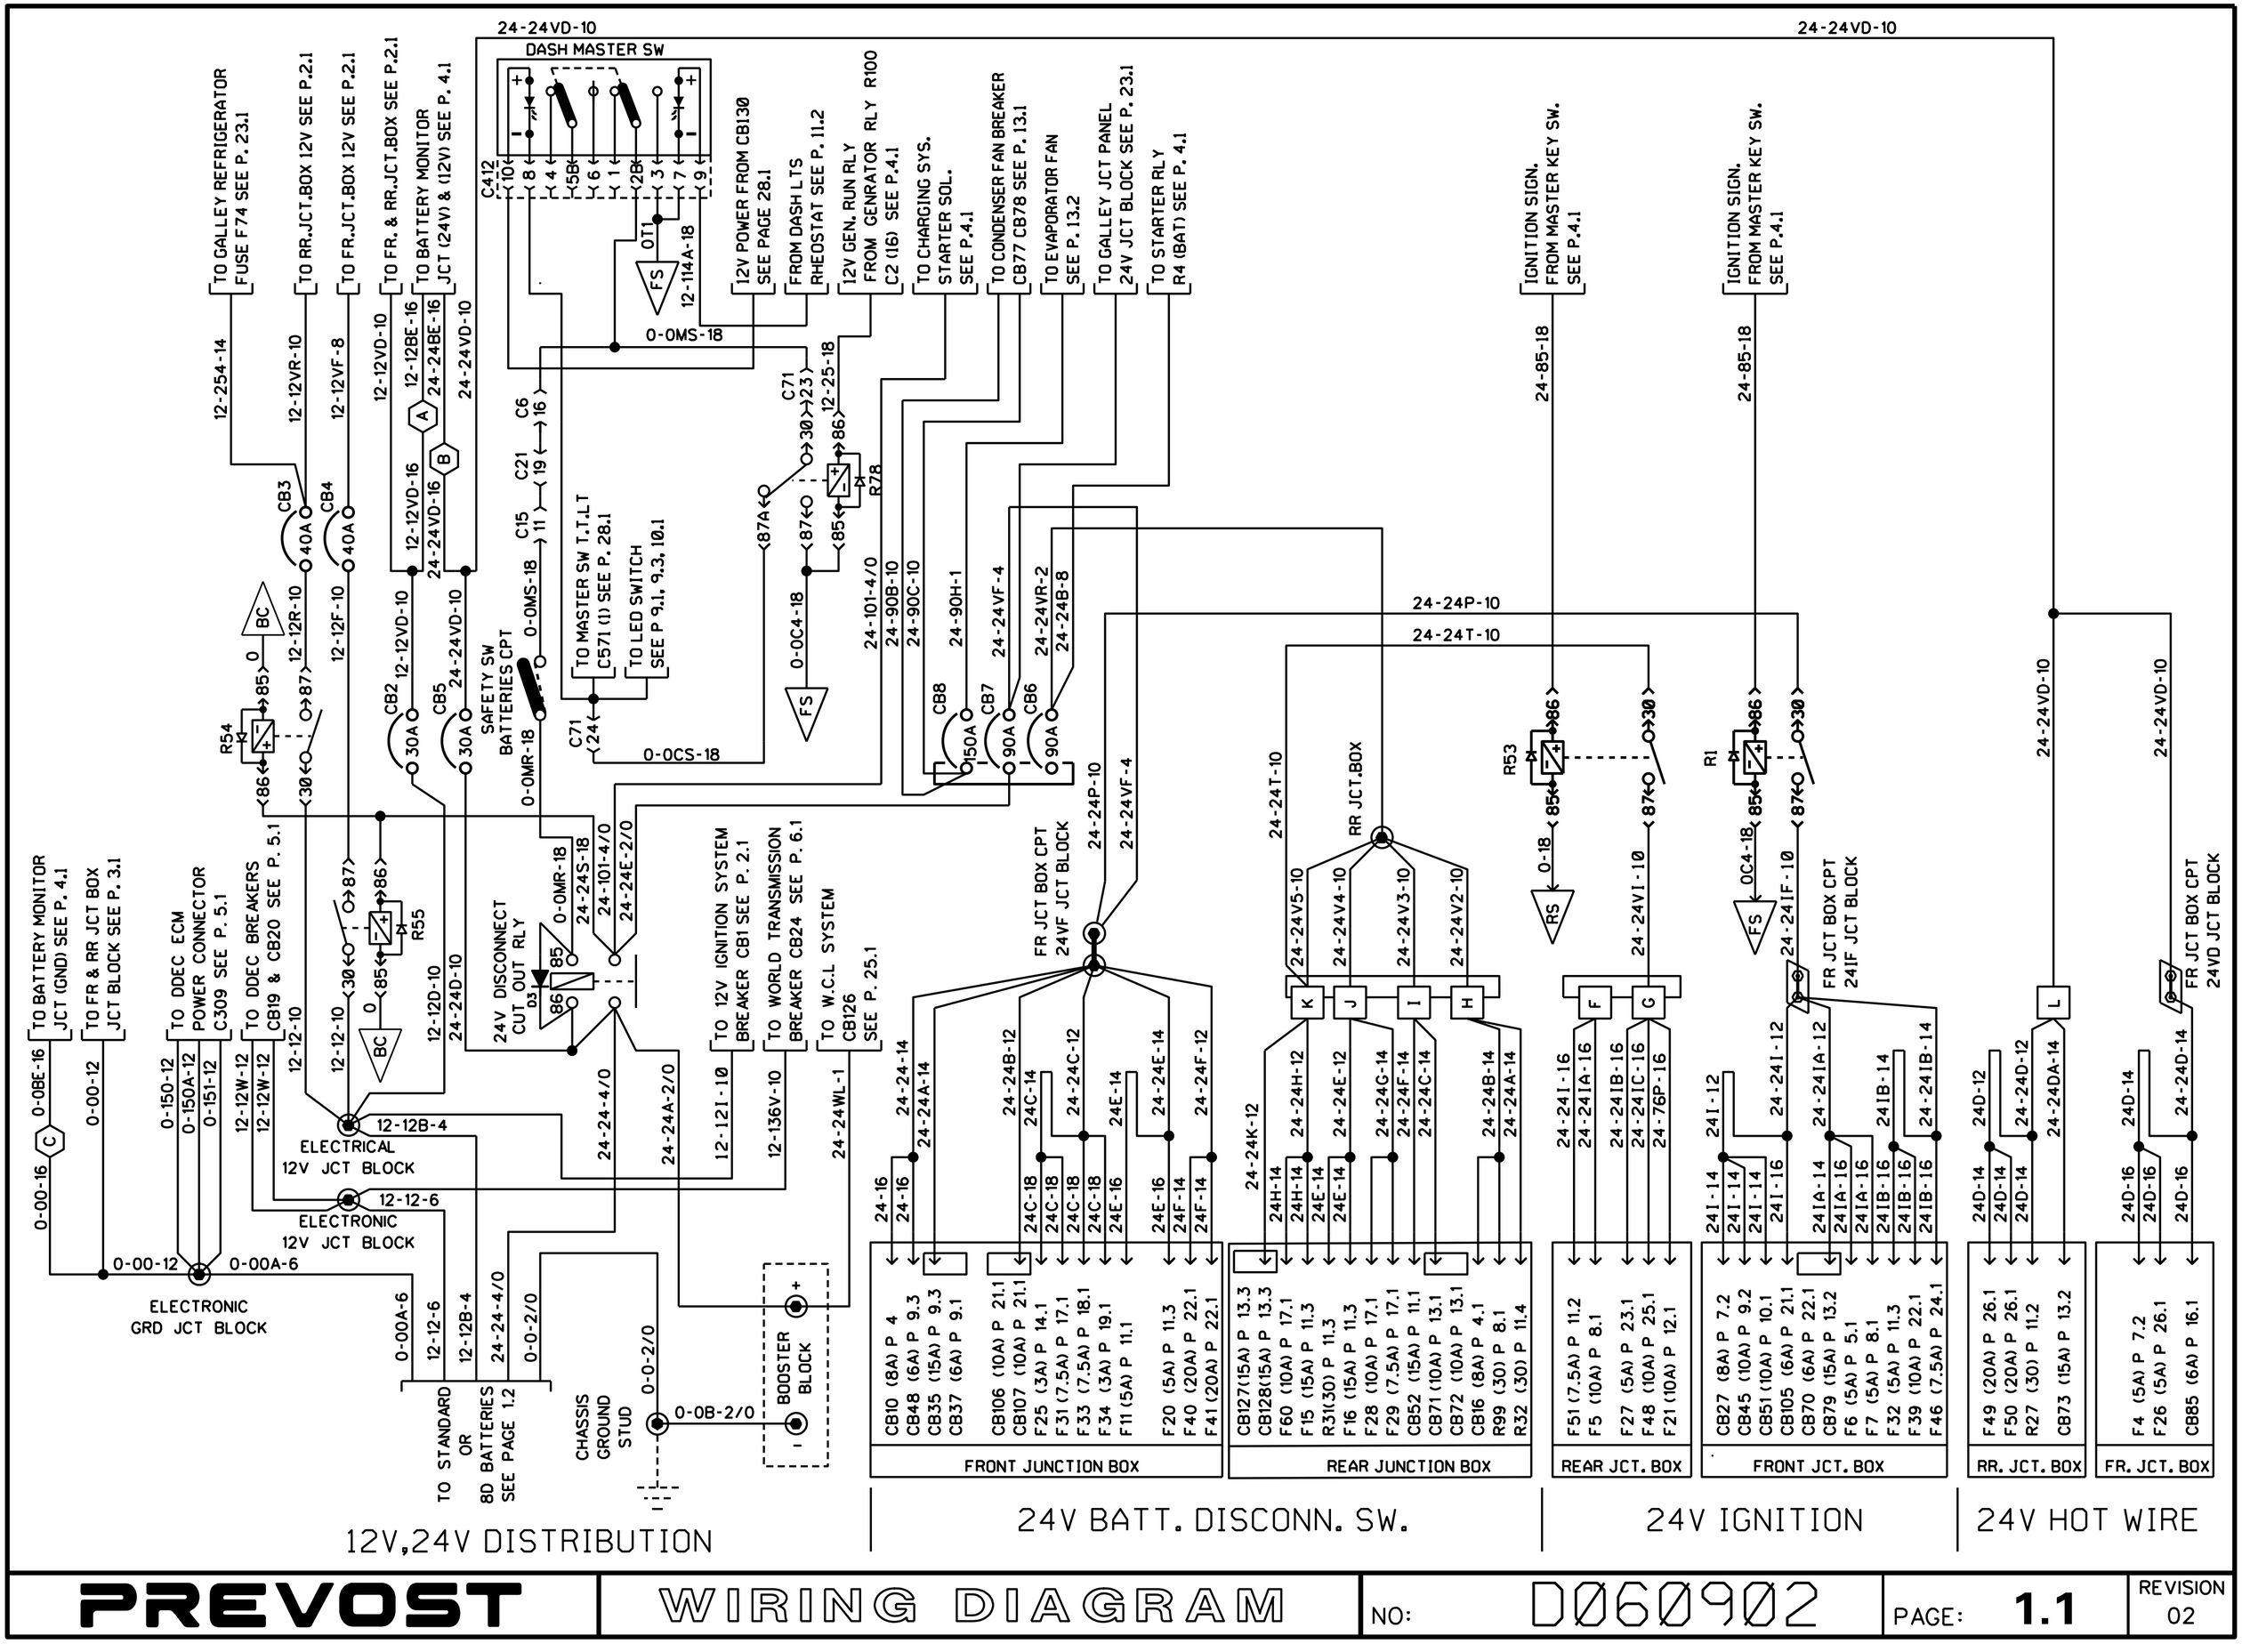

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 1.1	REVISION 02

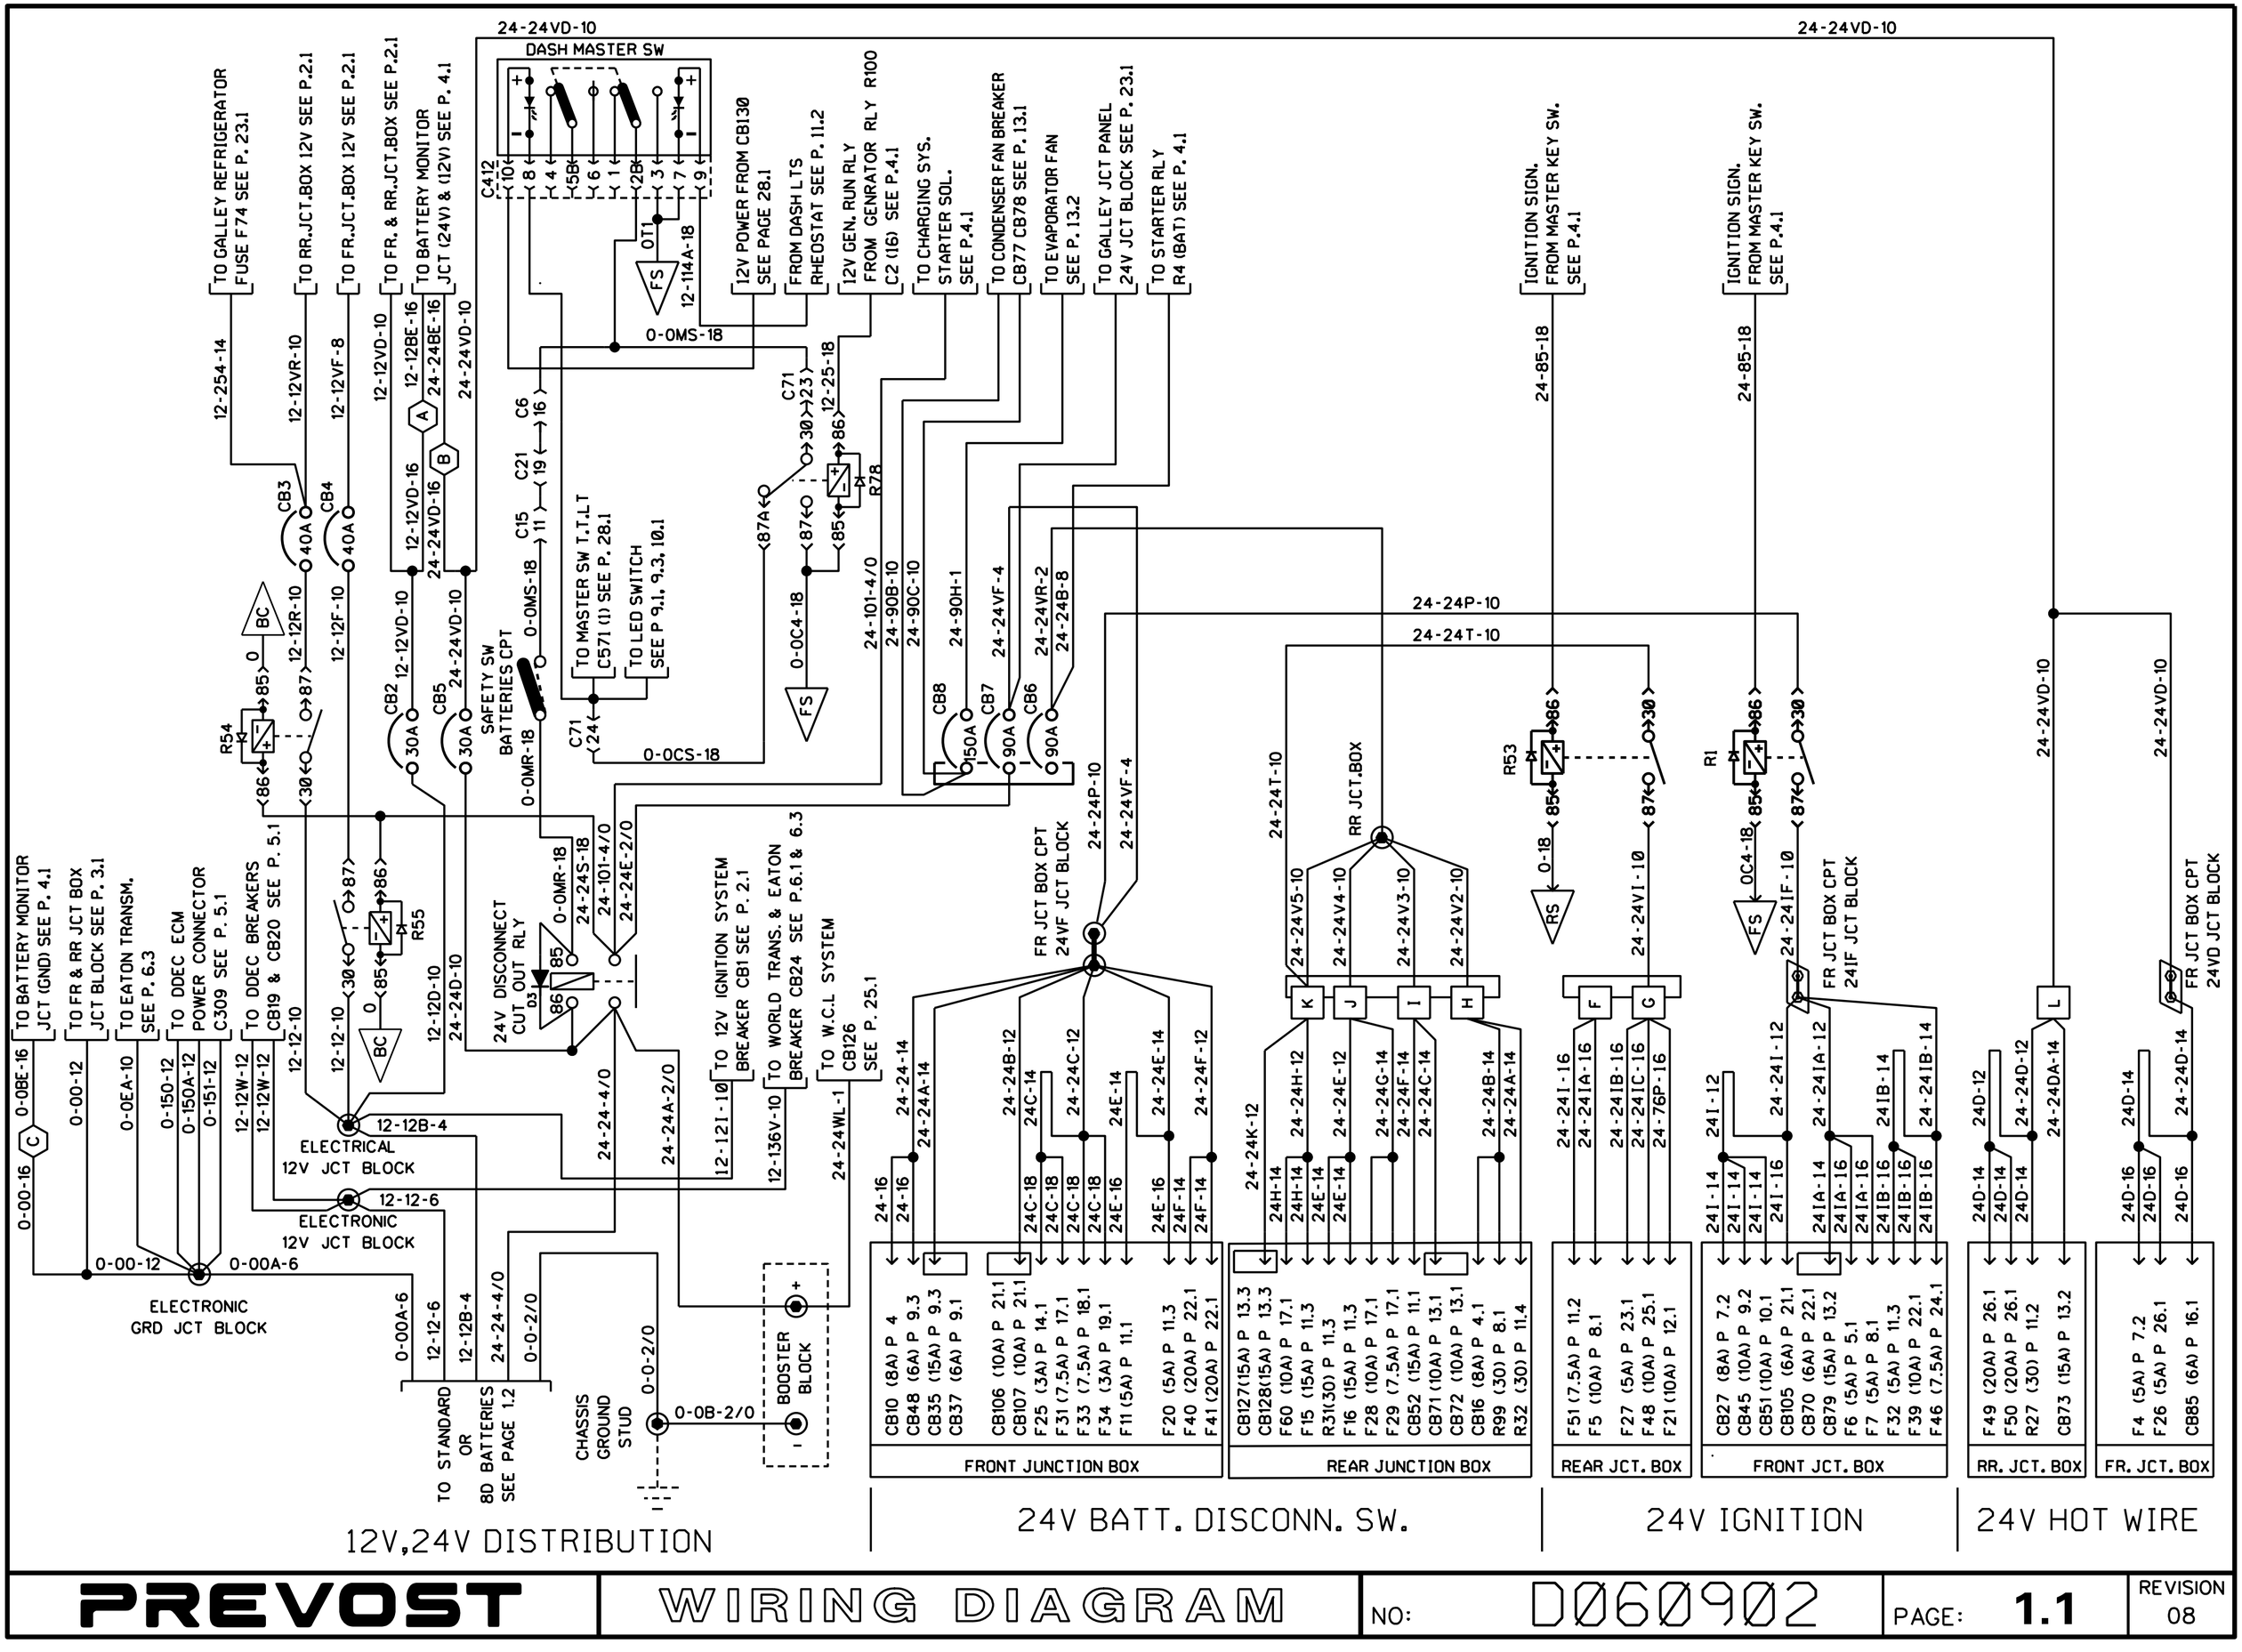

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 1.1	REVISION 08

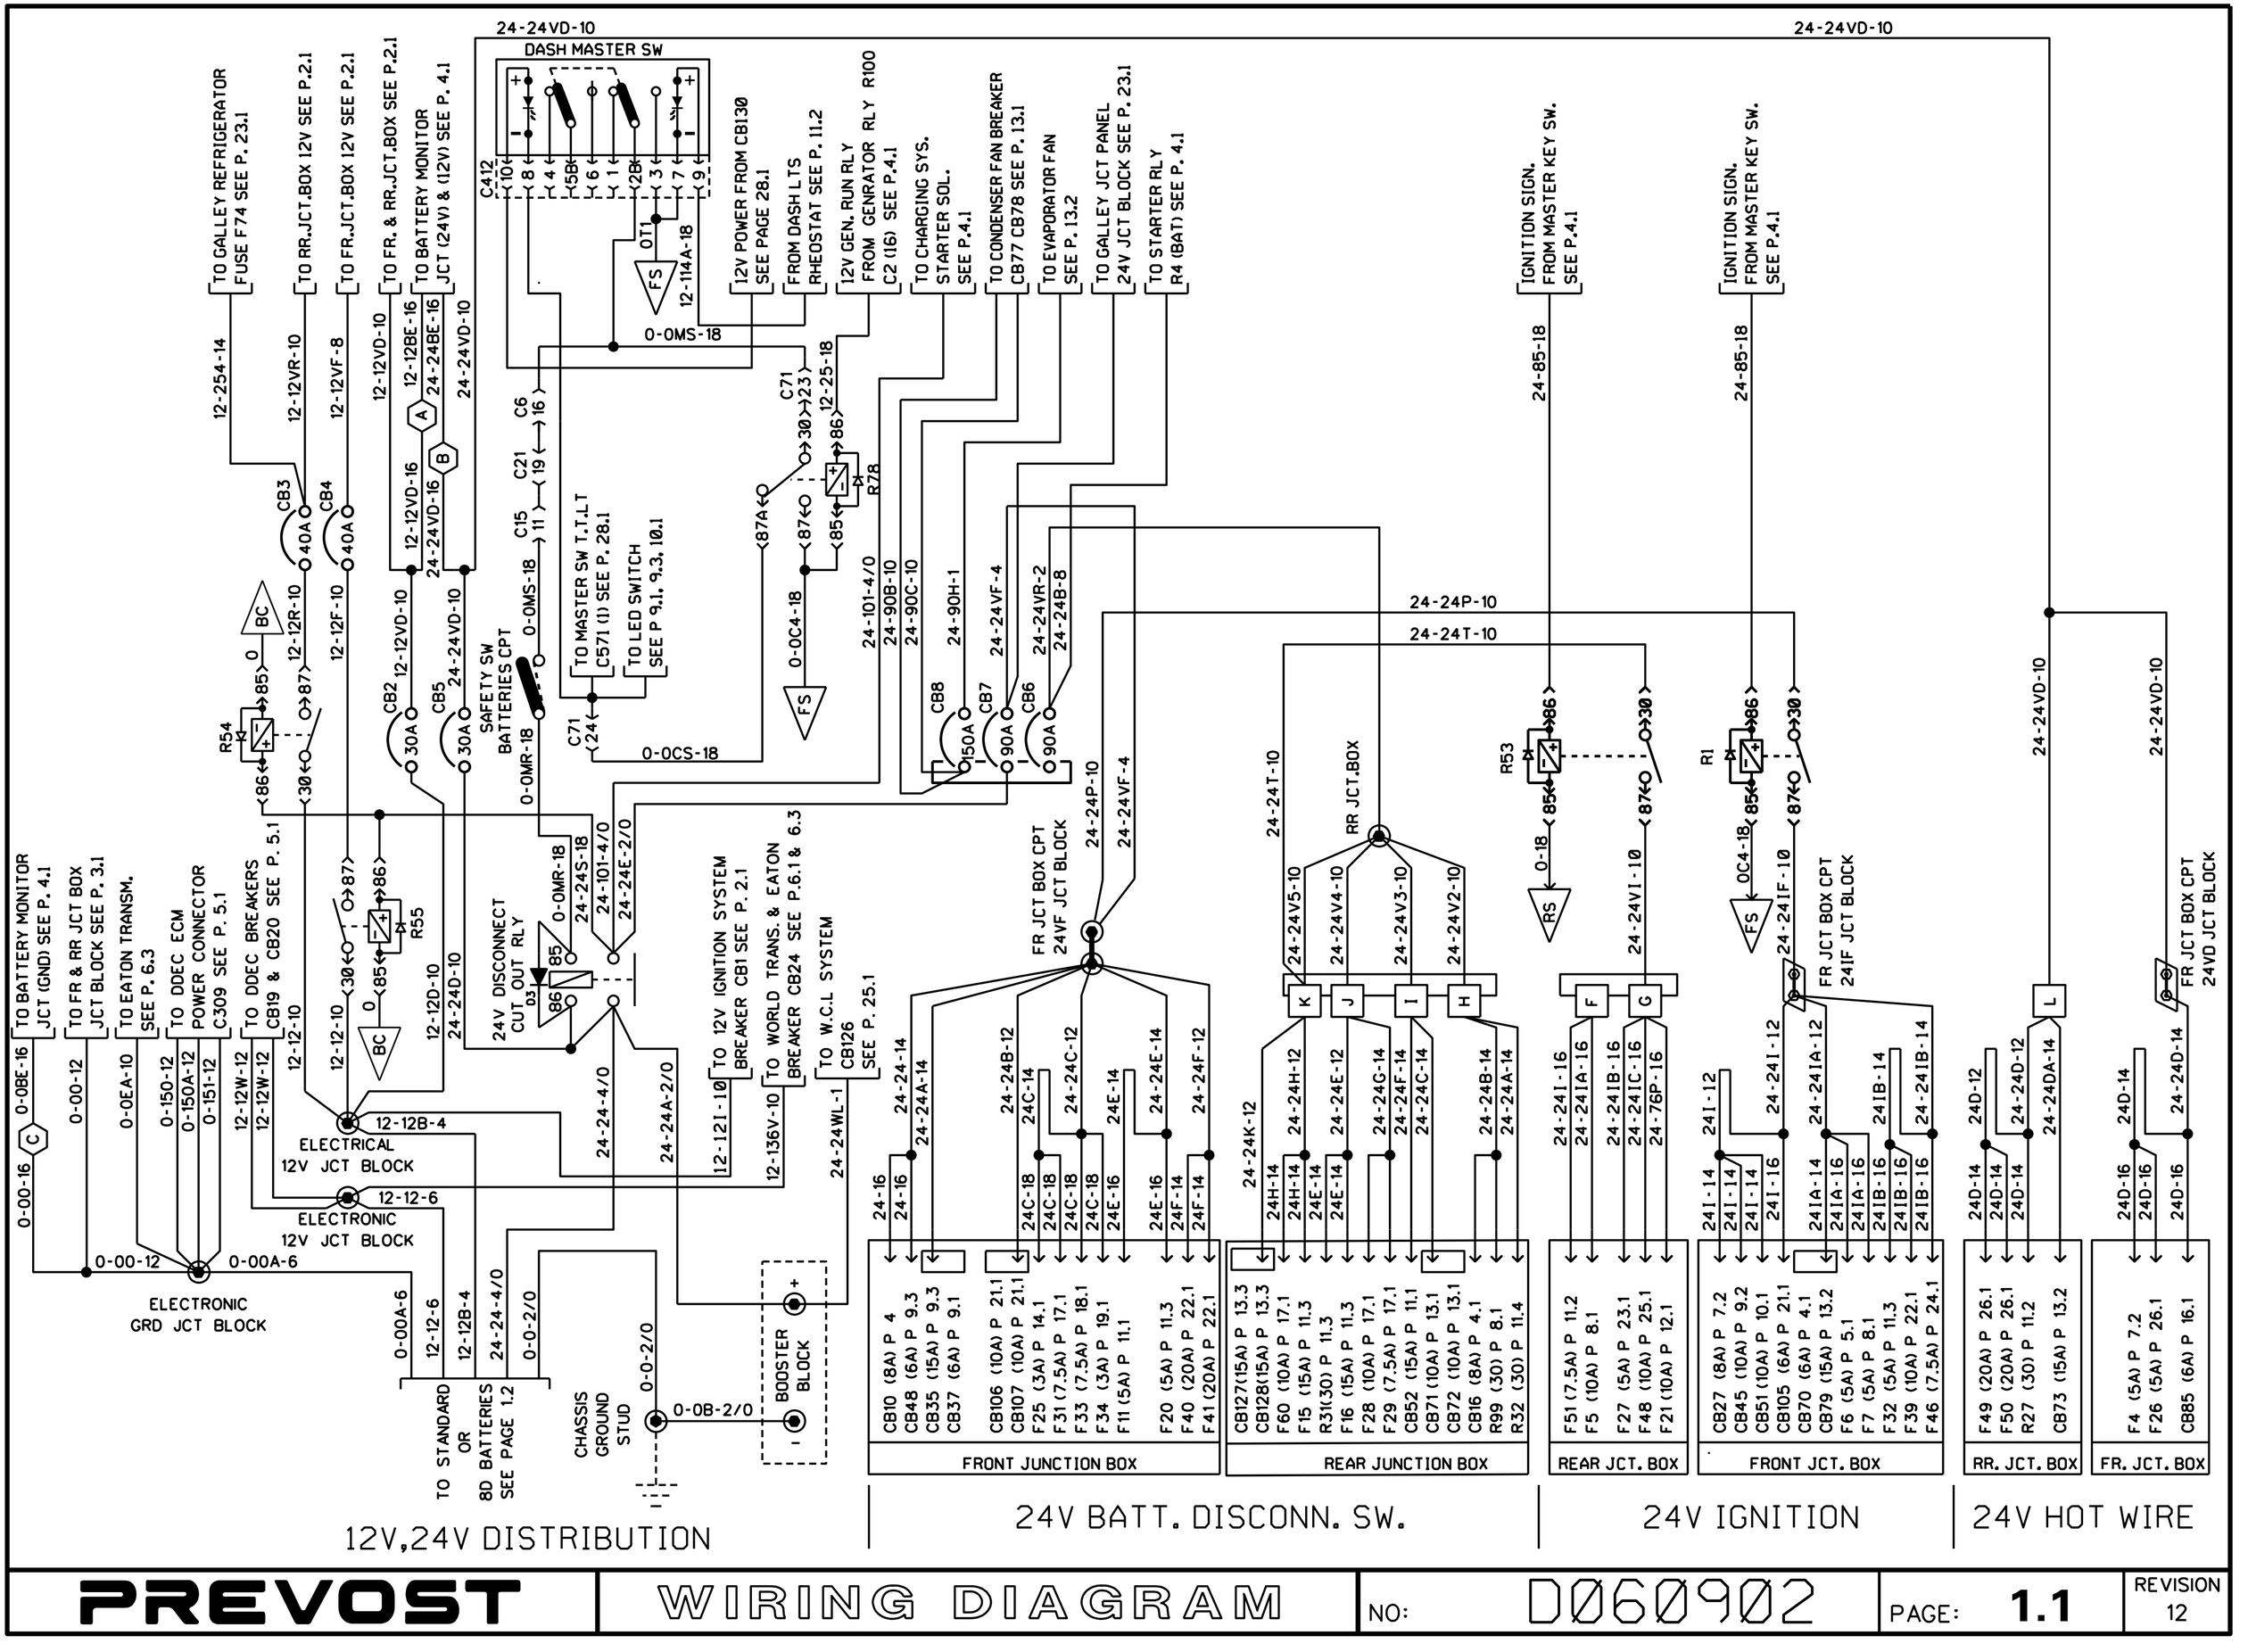

PREVOST | WIRING DIAGRAM | NO: D060902 | PAGE: 1.1 | REVISION 12

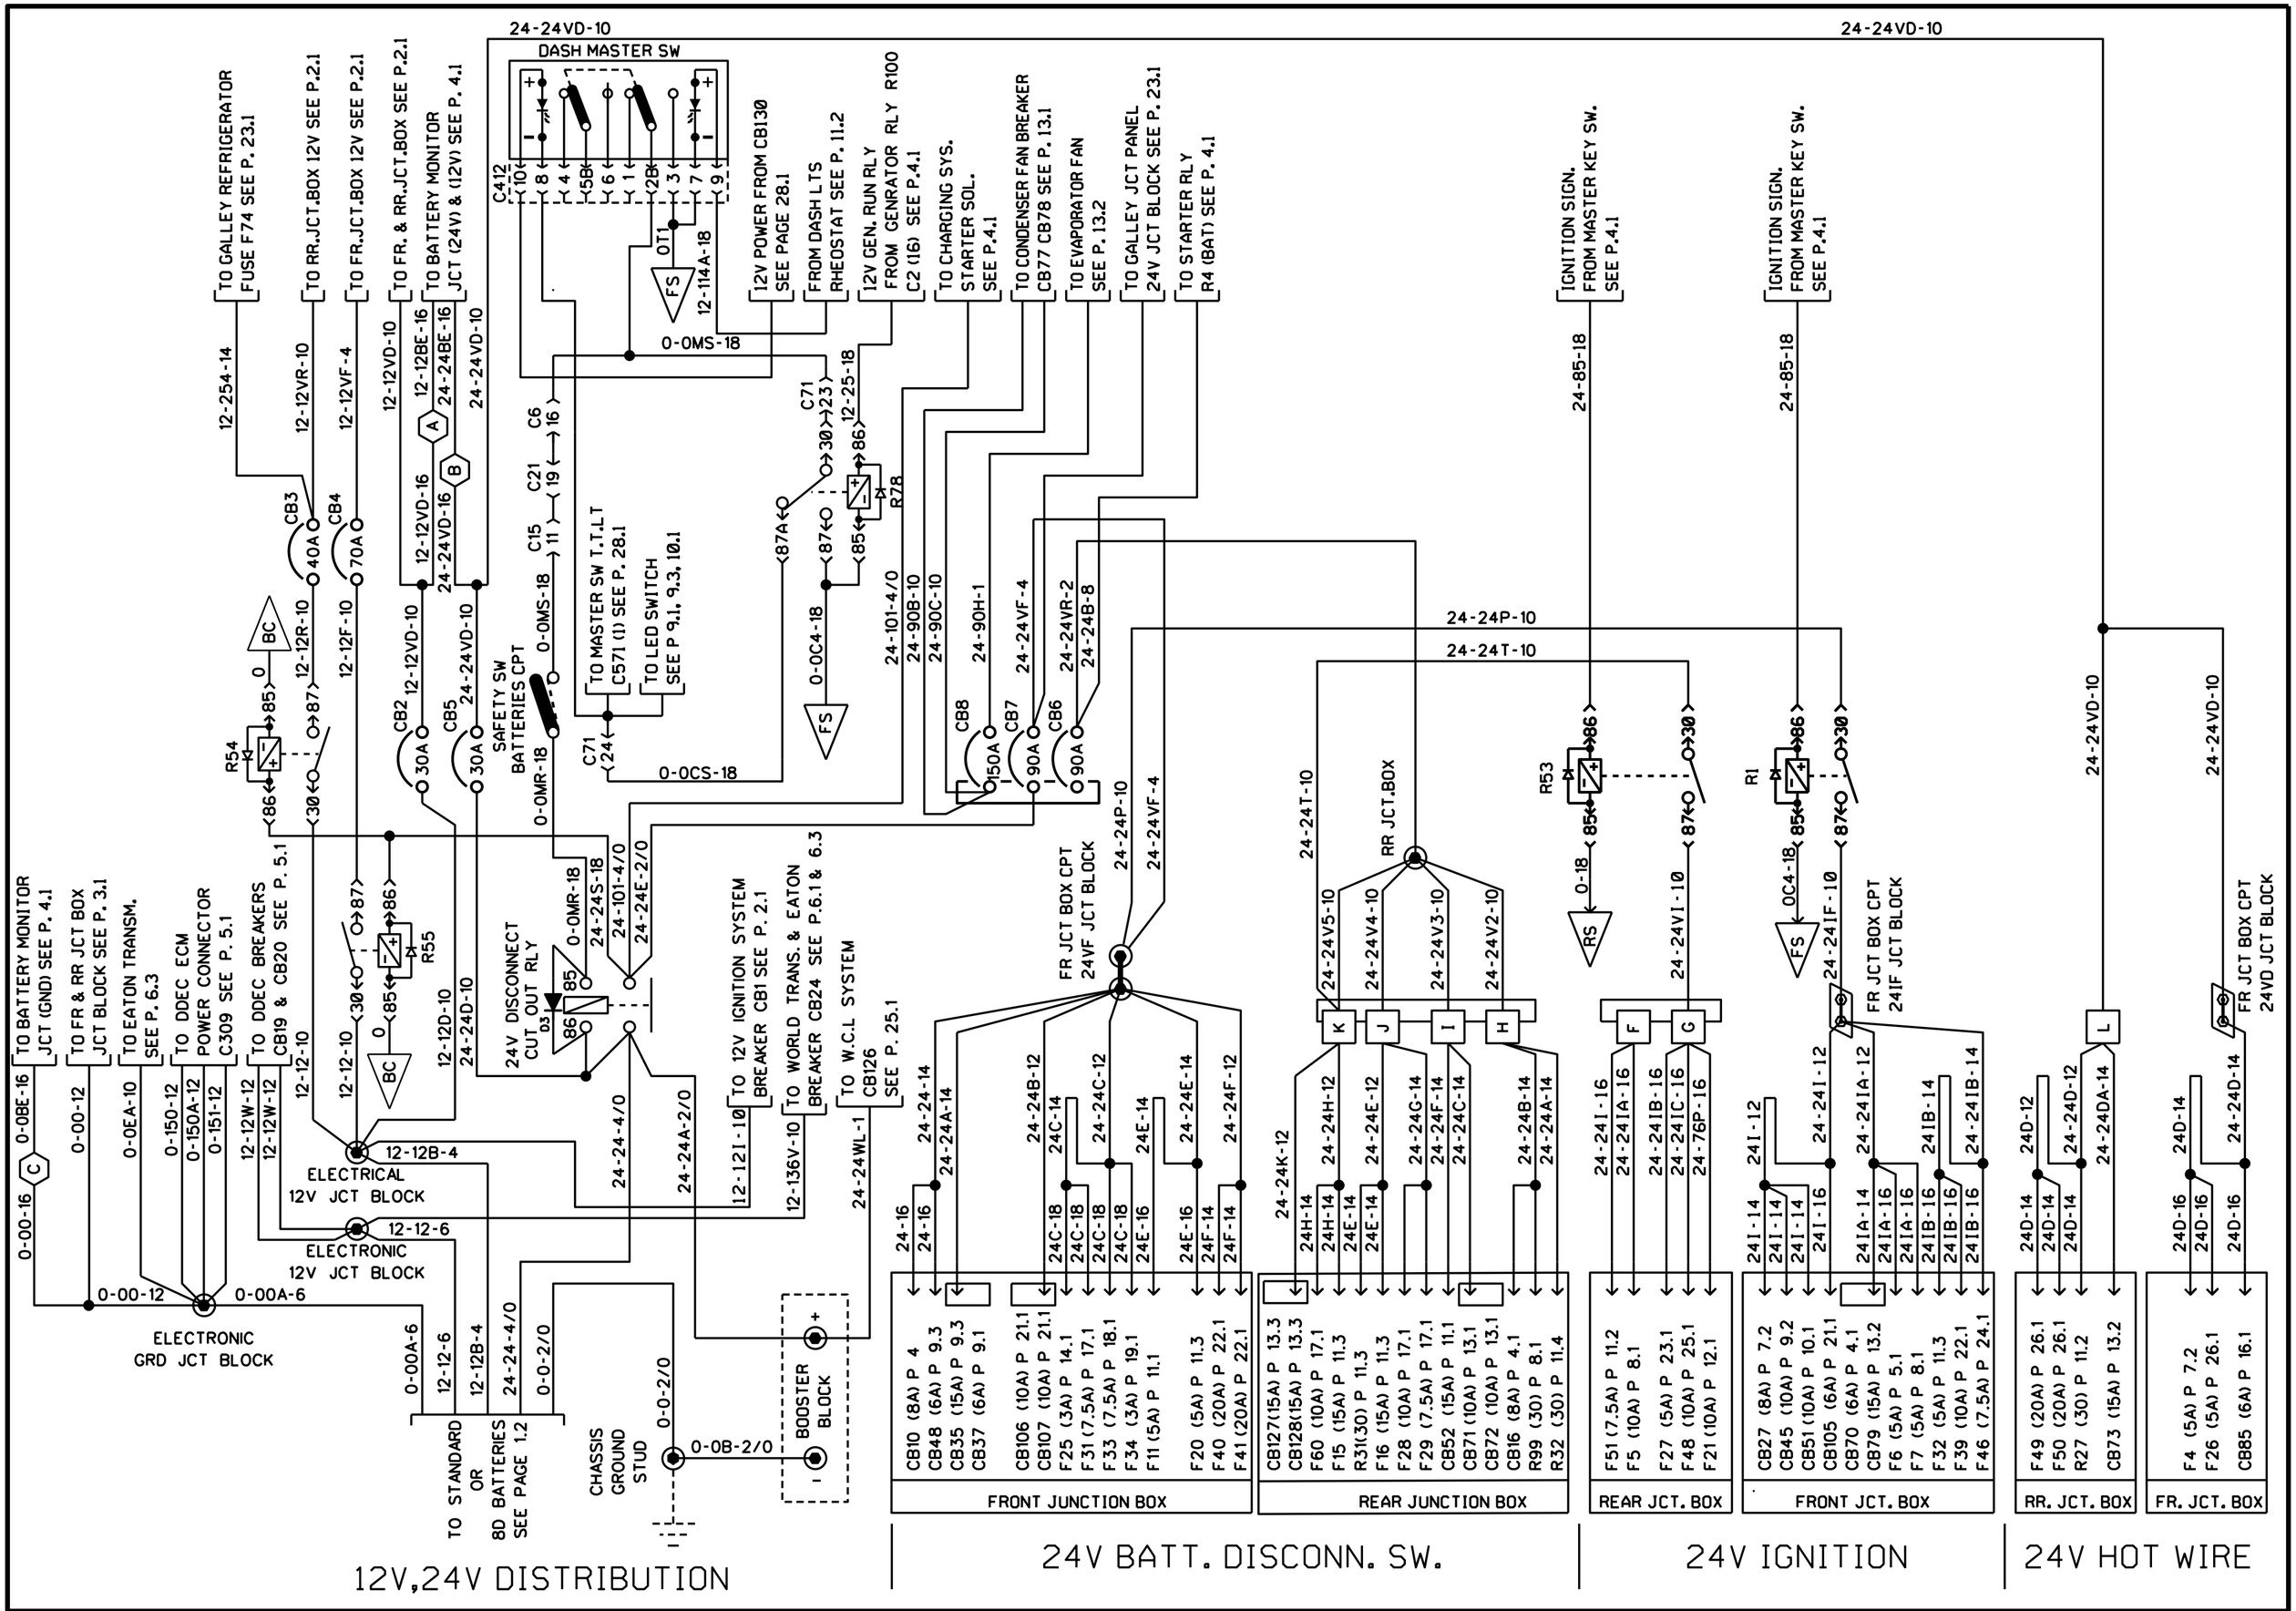

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 1.1	REVISION 15

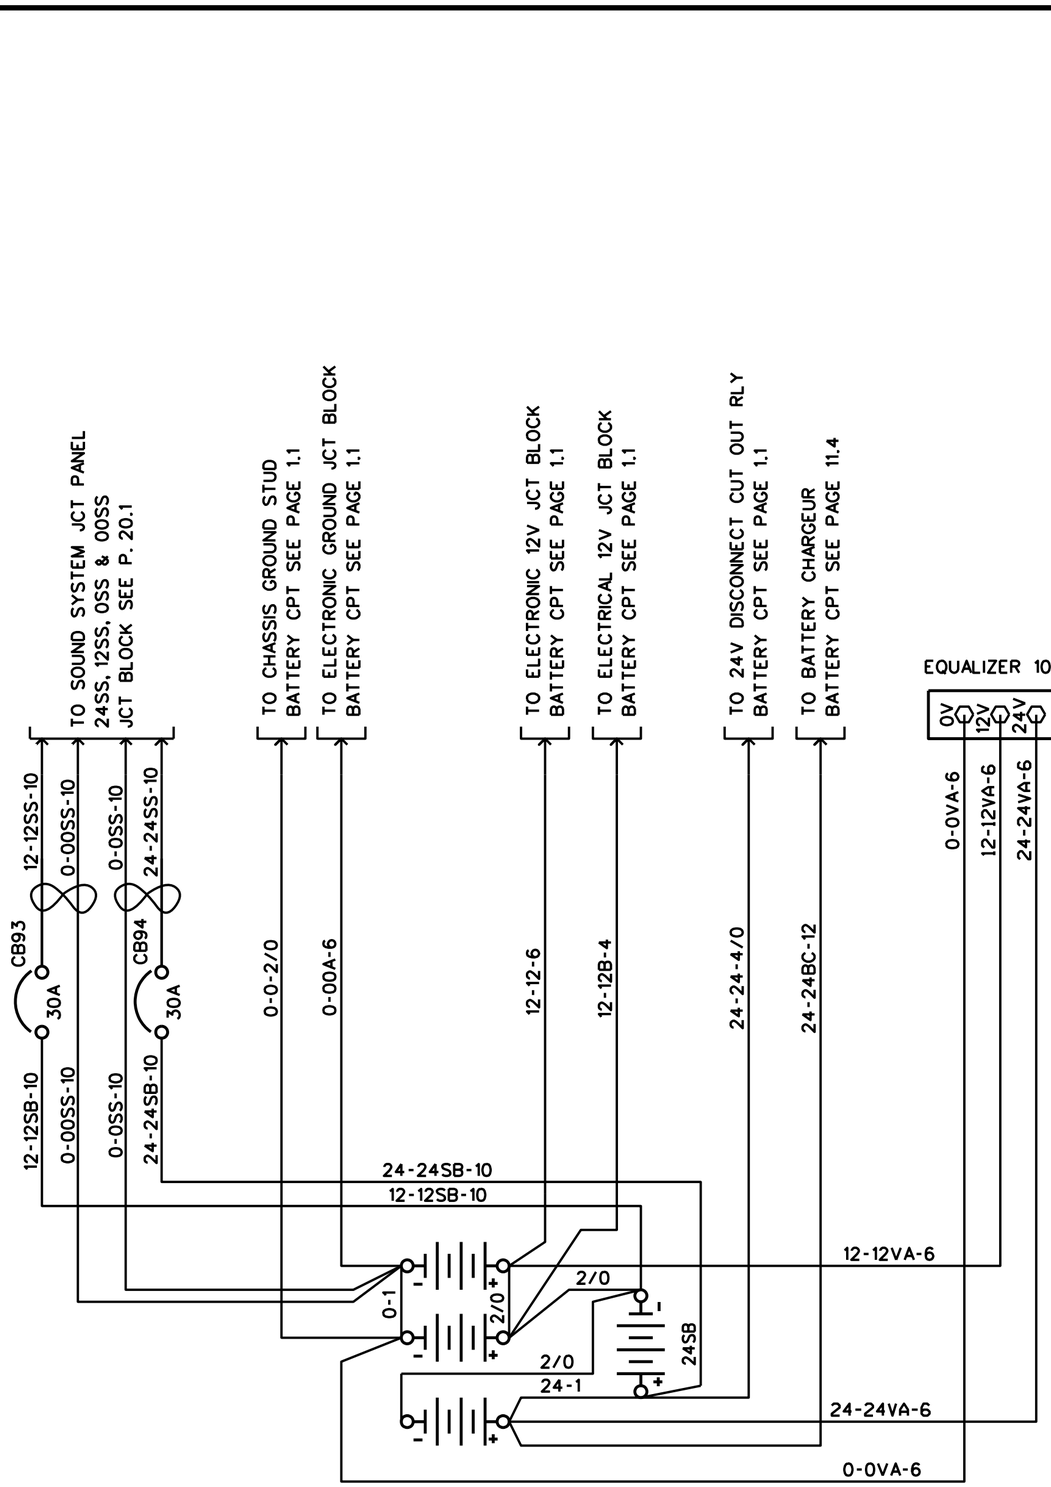

STANDARD BATTERIES

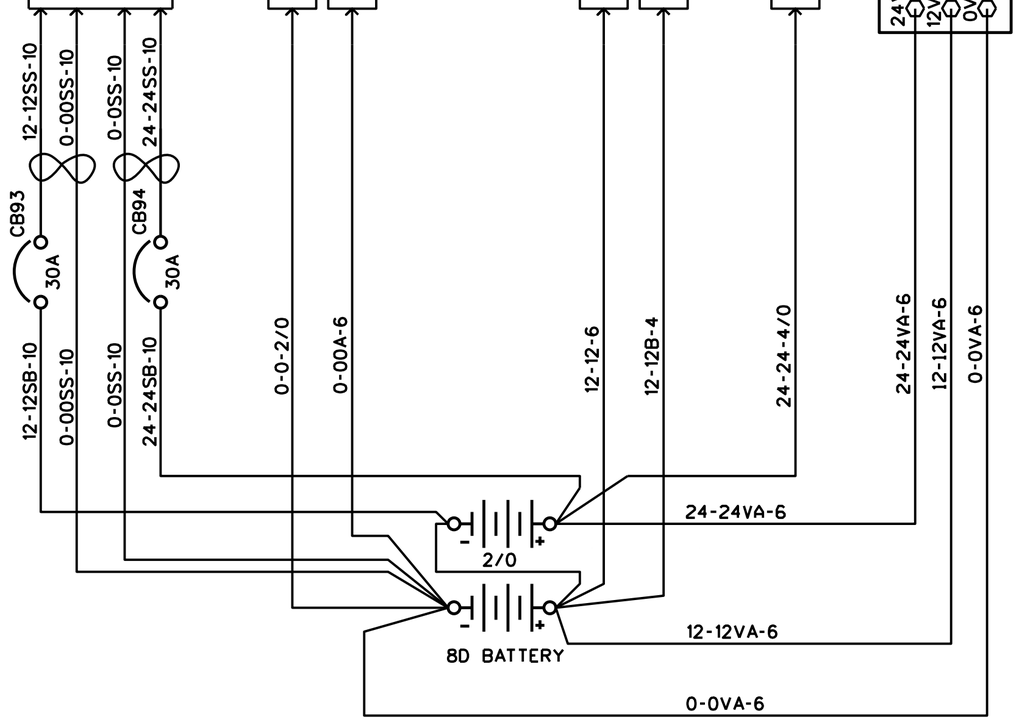

8D BATTERIES

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 1.2	REVISION 00

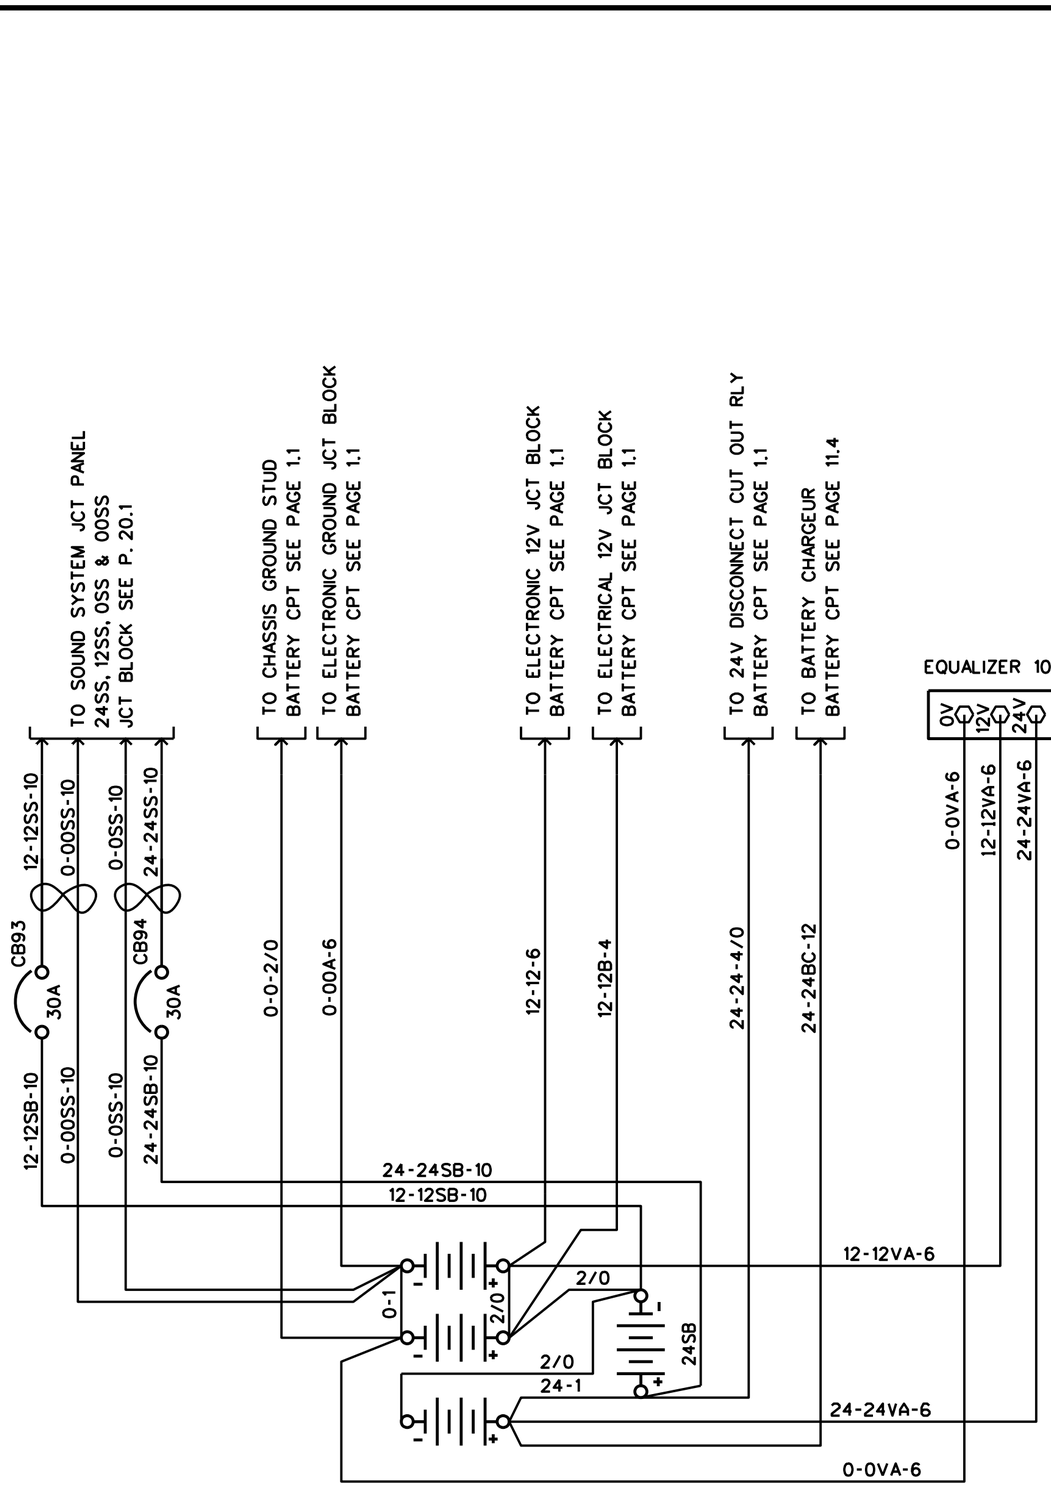

STANDARD BATTERIES

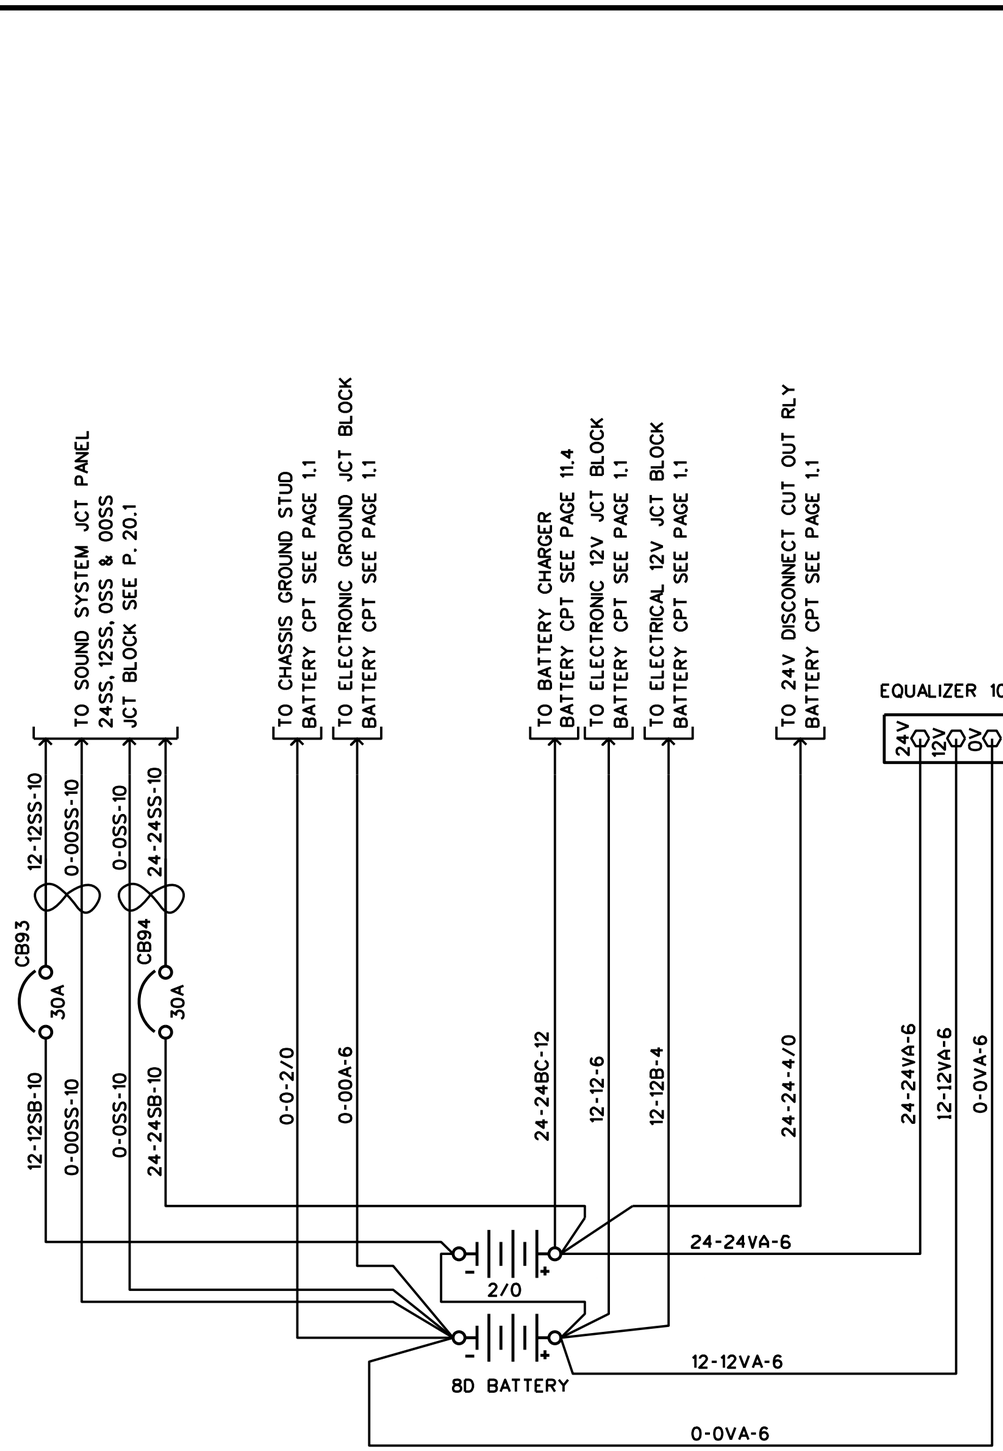

8D BATTERIES

PREVOST | WIRING DIAGRAM

12V BATT. DISCONN. SW.

FRONT JUNCTION BOX

CB38 (10A) P 9.1
CB39 (20A) P 9.1
CB43 (20A) P 9.1
CB44 (15A) P 9.1
CB46 (20A) P 9.2
F8 (10A) P 9.2
F10 (15A) P 9.3
F3 (20A) P 7.2
F22 (10A) P 14.1
F24 (15A) P 14.1
F14 (15A) P 11.3
F23 (15A) P 14.1
CB130 (6A) P.28.1
CB57 (10A) P.11.2
CB58 (6A) P.13.1

12-12A-12
12-12B-12
12-12C-12
12E-14
12-12E-12
12E-14
12-12F-12
12G-14
12-12G-12
12G-14
12-12G-14
12-12J-14
12-12K-12
12-12K-12

FR. JCT BOX CPT
12VF JCT BLOCK

12-12P-16 → TO POWER 12V OUTLET SEE P. 14.1

12-12VF-8 → FROM 12V DITRIBUTION BREAKER CB4 SEE P.1.1

REAR JUNCTION BOX

CB42 (8A) P 9.1
CB49 (15A) P 9.3
F57 (5A) P.17.1
F9 (15A) P 9.3
R9 (30) P 9.3

12-12A-16
12-12E-14
12-12F-14
12-32B-14
C
D

12-12VR-10 → 12-12VR-10 → FROM 12V DITRIBUTION BREAKER CB3 SEE P.1.1

12V IGNITION

REAR JCT.BOX

F59 (3A) P4.1

12-12I-18
B
E
12-12VI-10
87
30
12-12IA-10
CB1
40A
12-12I-10

R2
BC
0-16
85
86
24-85F-18

24V IGN. ENG. CTRL SW FROM BATTERIES CPT JCT• D SEE P.4.1

FROM 12V DITRIBUTION 12V BATTERY POST SEE P.1.1

12-12VI-10

FRONT JCT.BOX

F47 (7.5A) P 24.1
CB28 (6A) P 7.1

12-12I-16
12-12IA-16

FR. JCT BOX CPT
12VI JCT BLOCK

12V HOT WIRE

REAR JCT.BOX

C523 (2) P 7.2

12-12C-18
E
12-12VD-10
12-12VD-10 → FROM 12V DISTRIBUTION BREAKER CB2 SEE P.1.1

FRONT JCT.BOX

CB129 SEE P 7.2

12-12D-18
12-12VD-10
12-251-18 → TO PRODRIVER SEE P.8.1
12-251A-18 → TO DATA LOGGER

TO RADIO BATTERY YELLOW WIRE SEE P 20.1
12-12R-18

NO: D060902
PAGE: 2.1
REVISION 00

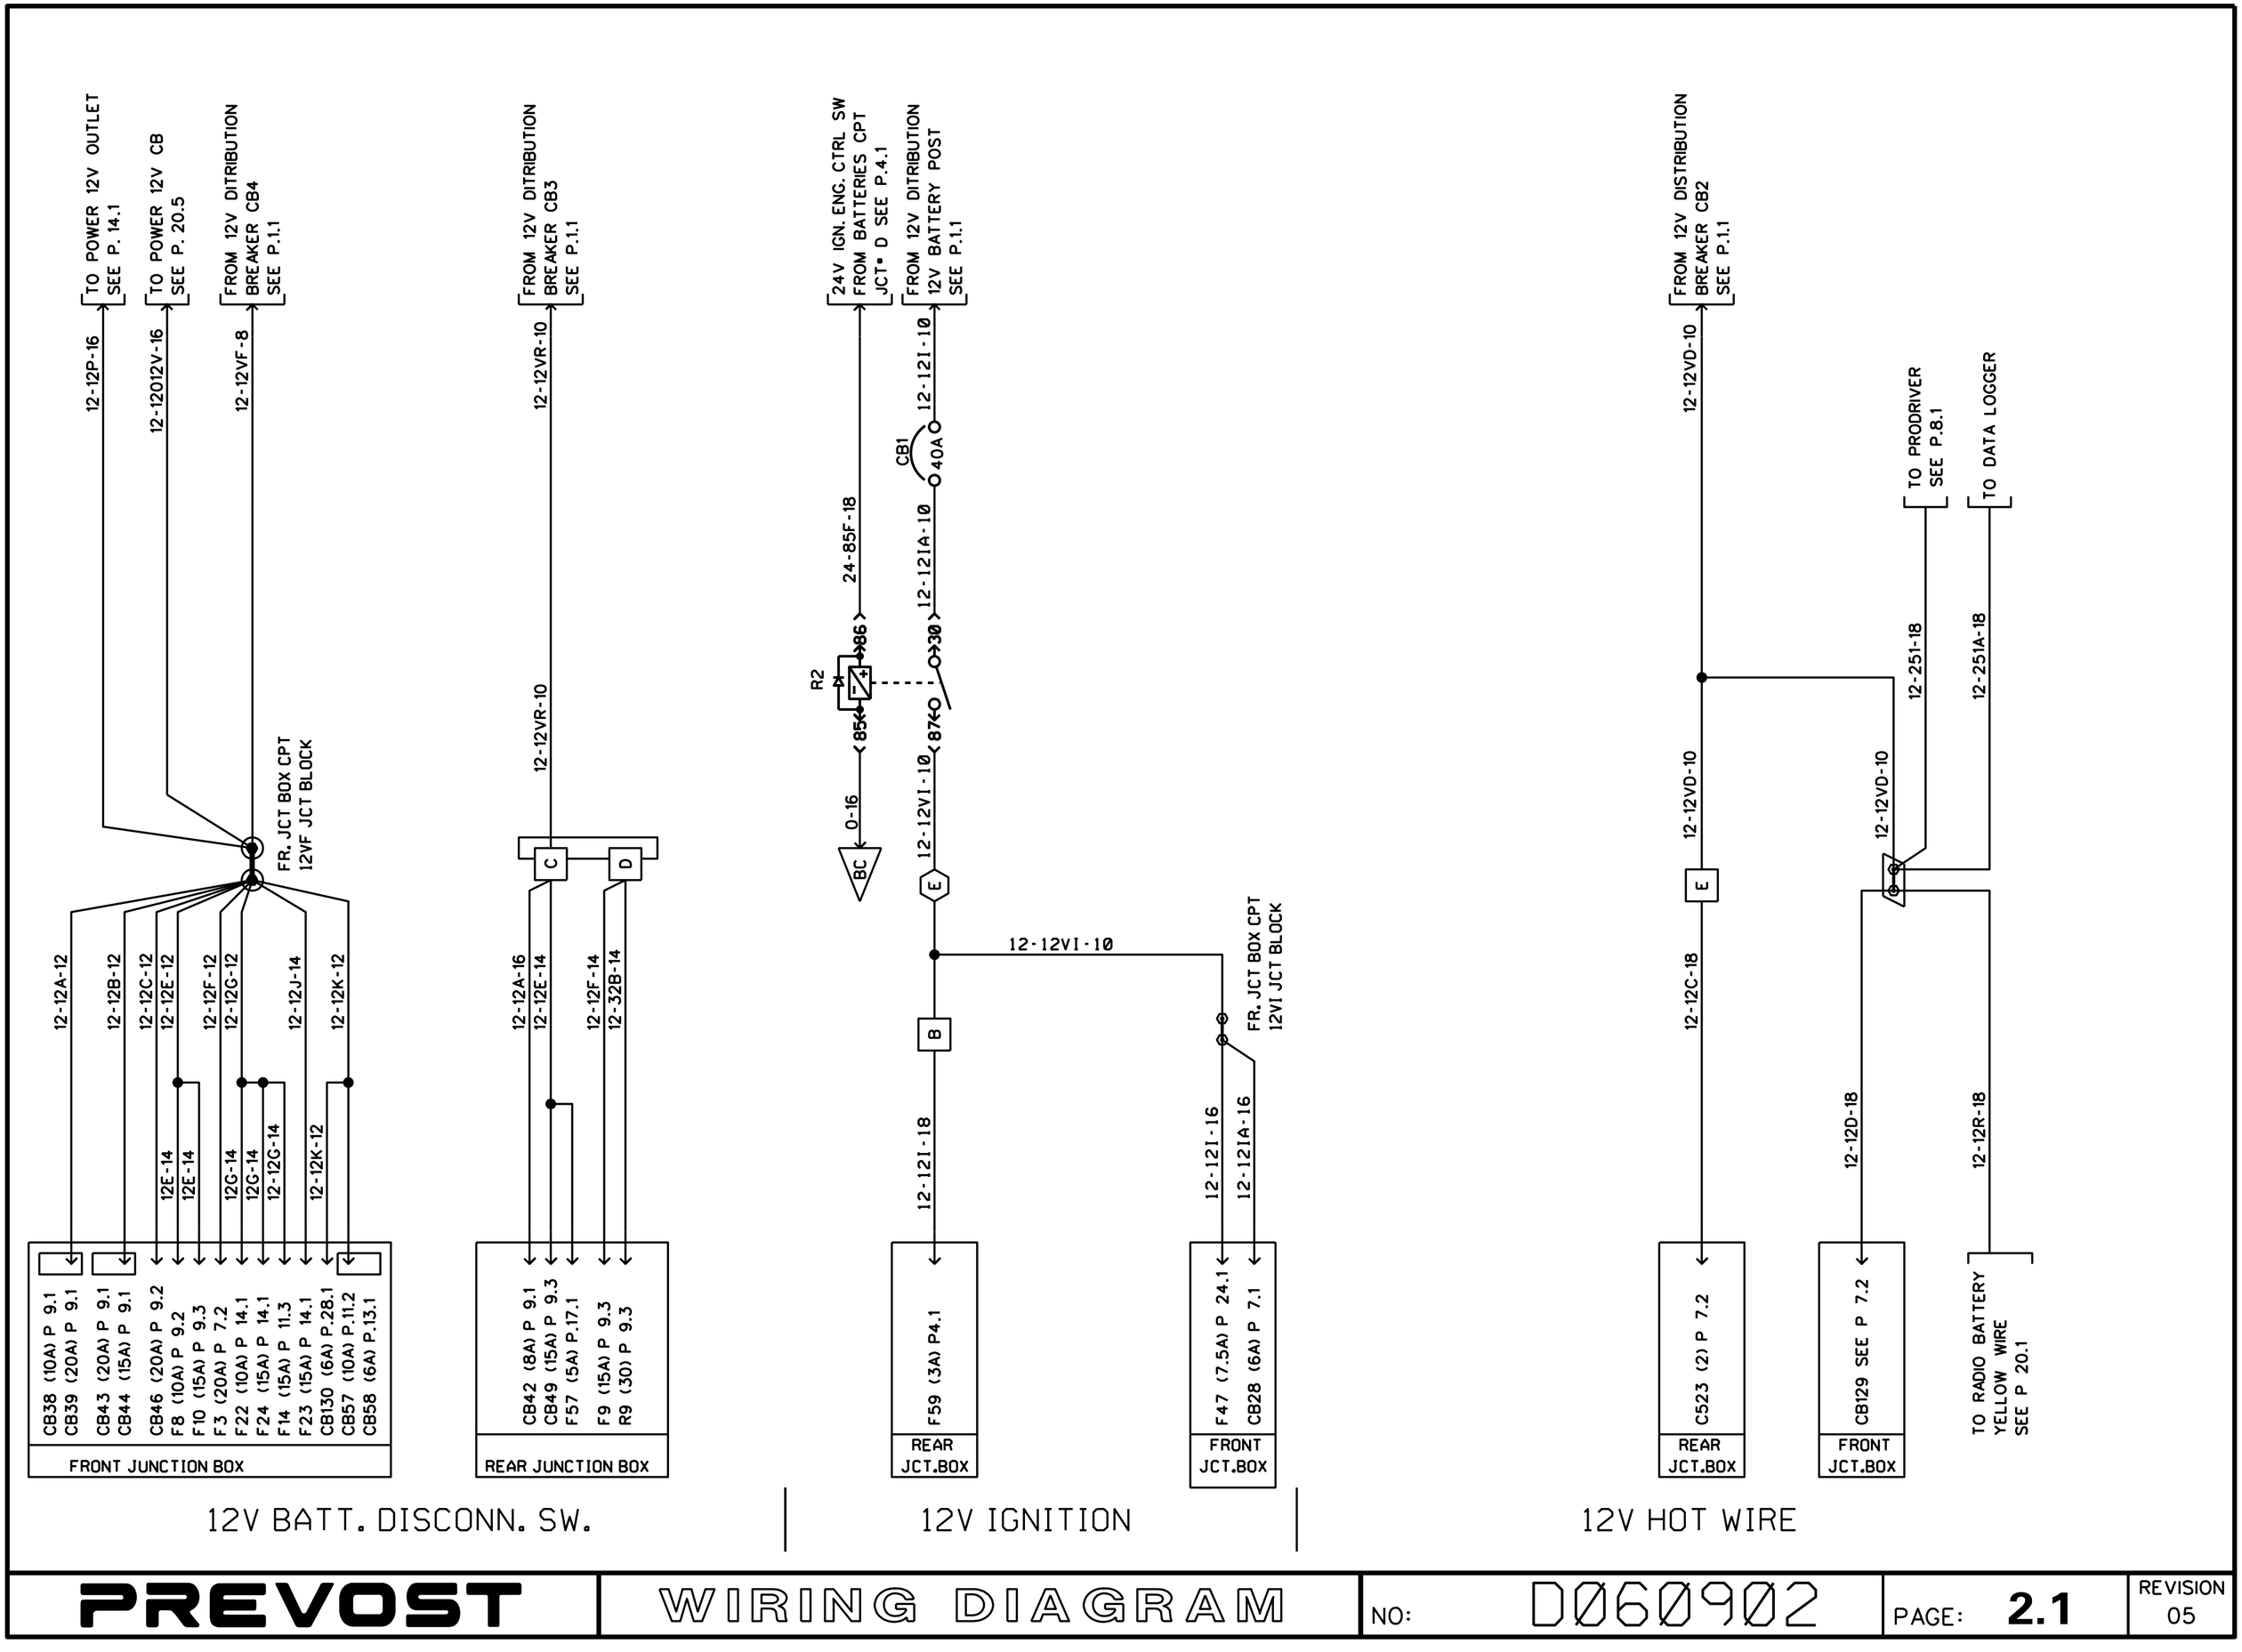

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 2.1	REVISION 05

PREVOST

WIRING DIAGRAM

NO: D060902

PAGE: 2.1

REVISION 08

12V BATT. DISCONN. SW.

FRONT JUNCTION BOX

CB38 (10A) P 9.1
CB39 (20A) P 9.1
CB43 (20A) P 9.1
CB44 (15A) P 9.1
CB46 (20A) P 9.2
F8 (10A) P 9.2
F10 (15A) P 9.3
F3 (20A) P 7.2
F22 (10A) P 14.1
F24 (15A) P 14.1
F14 (15A) P 11.3
F23 (15A) P 14.1
CB130 (6A) P.28.1
CB57 (10A) P.11.2
CB58 (6A) P.13.1

12-12A-12
12-12B-12
12-12C-12
12E-14
12-12E-12
12E-14
12-12F-12
12G-14
12-12G-12
12G-14
12-12G-14
12-12J-14
12-12K-12
12-12K-12

FR. JCT BOX CPT
12VF JCT BLOCK

12-12P-16 → TO POWER 12V OUTLET SEE P. 14.1

12-12012V-16 → TO POWER 12V CB SEE P. 20.5

12-12VF-8 → FROM 12V DITRIBUTION BREAKER CB4 SEE P.1.1

REAR JUNCTION BOX

CB42 (8A) P 9.1
CB49 (15A) P 9.3
F57 (5A) P.17.1
F9 (15A) P 9.3
R9 (30) P 9.3

12-12A-16
12-12E-14
12-12F-14
12-32B-14

C
D

12-12VR-10 → 12-12VR-10 → FROM 12V DITRIBUTION BREAKER CB3 SEE P.1.1

12V IGNITION

REAR JCT.BOX

F59 (3A) P4.1

12-12I-18 → B → 12-12VI-10 (vertical) → E

R2

BC — 0-16 — 85 — 86 — 24-85F-18 → 24V IGN. ENG. CTRL SW FROM BATTERIES CPT JCT• D SEE P.4.1

E — 12-12VI-10 — 87 — 30 — 12-12IA-10 — CB1 40A — 12-12I-10 → FROM 12V DITRIBUTION 12V BATTERY POST SEE P.1.1

FRONT JCT.BOX

F47 (7.5A) P 24.1
CB28 (6A) P 7.1

12-12I-16
12-12IA-16

12V HOT WIRE

TO DDR CONNECTOR CVI2 (3) SEE P. 6.3

TO HOT TEMP. DETECT. C535 (2) SEE P. 7.2

12-12CE-18 — C579 (6 D) — F62 3A — C579 (A 3) — 12-12C-18 — E — 12-12VD-10 → 12-12VD-10 → FROM 12V DISTRIBUTION BREAKER CB2 SEE P.1.1

FRONT JCT.BOX

CB129 SEE P 7.1

12-12D-18
12-12VD-10
12-251-18 → TO PRODRIVER SEE P.8.1
12-251A-18 → TO DATA LOGGER

TO RADIO BATTERY YELLOW WIRE SEE P 20.1

12-12R-18

PREVOST | WIRING DIAGRAM

NO: D060902

PAGE: 2.1

REVISION 09

12V BATT. DISCONN. SW.

FRONT JUNCTION BOX

CB38 (10A) P 9.1
CB39 (20A) P 9.1
CB43 (20A) P 9.1
CB44 (15A) P 9.1
CB46 (20A) P 9.2
F8 (10A) P 9.2
F10 (15A) P 9.3
F3 (20A) P 7.2
F22 (10A) P 14.1
F24 (15A) P 14.1
F14 (15A) P 11.3
F23 (15A) P 14.1
CB130 (6A) P.28.1
CB57 (10A) P.11.2
CB58 (6A) P.13.1

12-12A-12
12-12B-12
12-12C-12
12E-14
12-12E-12
12E-14
12-12F-12
12G-14
12-12G-12
12G-14
12-12G-14
12-12J-14
12-12K-12
12-12K-12

FR. JCT BOX CPT
12VF JCT BLOCK

12-12P-16 → TO POWER 12V OUTLET SEE P. 14.1

12-12012V-16 → TO POWER 12V CB SEE P. 20.5

12-12VF-8 → FROM 12V DITRIBUTION BREAKER CB4 SEE P.1.1

REAR JUNCTION BOX

CB42 (8A) P 9.1
CB49 (15A) P 9.3
F57 (5A) P.17.1
F9 (15A) P 9.3
R9 (30) P 9.3

12-12A-16
12-12E-14
12-12F-14
12-32B-14
C
D
12-12VR-10

12-12VR-10 → FROM 12V DITRIBUTION BREAKER CB3 SEE P.1.1

12V IGNITION

REAR JCT.BOX

F59 (3A) P4.1
CB21 (10A) P.5.1

12-12I-14
B
E
12-12VI-10
12-12VI-10

R2
BC
0-16
85
86
24-85F-18 → 24V IGN. ENG. CTRL SW FROM BATTERIES CPT JCT• D SEE P.4.1

87
30
12-12IA-10
CB1
40A
12-12I-10 → FROM 12V DITRIBUTION 12V BATTERY POST SEE P.1.1

FRONT JCT.BOX

F47 (7.5A) P 24.1
CB28 (6A) P 7.1

12-12I-16
12-12IA-16

12V HOT WIRE

TO DDR CONNECTOR CVI2 (3) SEE P. 6.3

TO HOT TEMP. DETECT. C535 (2) SEE P. 7.2

12-12CE-18
C579 (6, D)
F62
3A
C579 (A, 3)
12-12C-18
E
12-12VD-10
12-12VD-10 → FROM 12V DISTRIBUTION BREAKER CB2 SEE P.1.1

FRONT JCT.BOX

CB129 SEE P 7. 1

12-12D-18
12-12VD-10
12-251-18 → TO PRODRIVER SEE P.8.1

TO RADIO BATTERY YELLOW WIRE SEE P 20.1

12-12R-18
12-251A-18 → TO DATA LOGGER

PREVOST | WIRING DIAGRAM | NO: D060902 | PAGE: 2.1 | REVISION 12

12V BATT. DISCONN. SW.

FRONT JUNCTION BOX

CB38 (10A) P 9.1
CB39 (20A) P 9.1
CB43 (20A) P 9.1
CB44 (15A) P 9.1
CB46 (20A) P 9.2
F8 (10A) P 9.2
F10 (15A) P 9.3
F3 (20A) P 7.2
F22 (10A) P 14.1
F24 (15A) P 14.1
F14 (15A) P 11.3
F23 (15A) P 14.1
CB130 (6A) P.28.1
CB57 (10A) P.11.2
CB58 (6A) P.13.1

12-12A-12
12-12B-12
12-12C-12
12E-14
12-12E-12
12E-14
12-12F-12
12G-14
12-12G-12
12G-14
12-12G-14
12-12J-14
12-12K-12
12-12K-12

FR. JCT BOX CPT
12VF JCT BLOCK

12-12012V-16 → TO POWER 12V CB SEE P. 20.5

12-12VF-8 → FROM 12V DITRIBUTION BREAKER CB4 SEE P.1.1

REAR JUNCTION BOX

CB42 (8A) P 9.1
CB49 (15A) P 9.3
F57 (5A) P.17.1
F9 (15A) P 9.3
R9 (30) P 9.3

12-12A-16
12-12E-14
12-12F-14
12-32B-14

C
D

12-12VR-10 → 12-12VR-10 → FROM 12V DITRIBUTION BREAKER CB3 SEE P.1.1

12V IGNITION

REAR JCT.BOX

F59 (3A) P4.1
CB21 (10A) P.5.1

12-12I-14

B

12-12VI-10

E

R2

BC — 0-16 — 85 — 86 — 24-85F-18 → 24V IGN. ENG. CTRL SW FROM BATTERIES CPT JCT• D SEE P.4.1

12-12VI-10 — 87 — 30 — 12-12IA-10 — CB1 40A — 12-12I-10 → FROM 12V DITRIBUTION 12V BATTERY POST SEE P.1.1

12-12VI-10

FRONT JCT.BOX

F47 (7.5A) P 24.1
CB28 (6A) P 7.1

12-12I-16
12-12IA-16

12V HOT WIRE

TO DDR CONNECTOR CVI2 (3) SEE P. 6.3

TO HOT TEMP. DETECT. C535 (2) SEE P. 7.2

12-12CE-18 — C579 (6 D) — F62 3A — C579 (A 3) — 12-12C-18 — E — 12-12VD-10 → 12-12VD-10 → FROM 12V DISTRIBUTION BREAKER CB2 SEE P.1.1

FRONT JCT.BOX

CB129 SEE P 7.1

12-12D-18

12-12VD-10

12-251-18 → TO PRODRIVER SEE P.8.1

TO RADIO BATTERY YELLOW WIRE SEE P 20.1

12-12R-18

12-251A-18 → TO DATA LOGGER

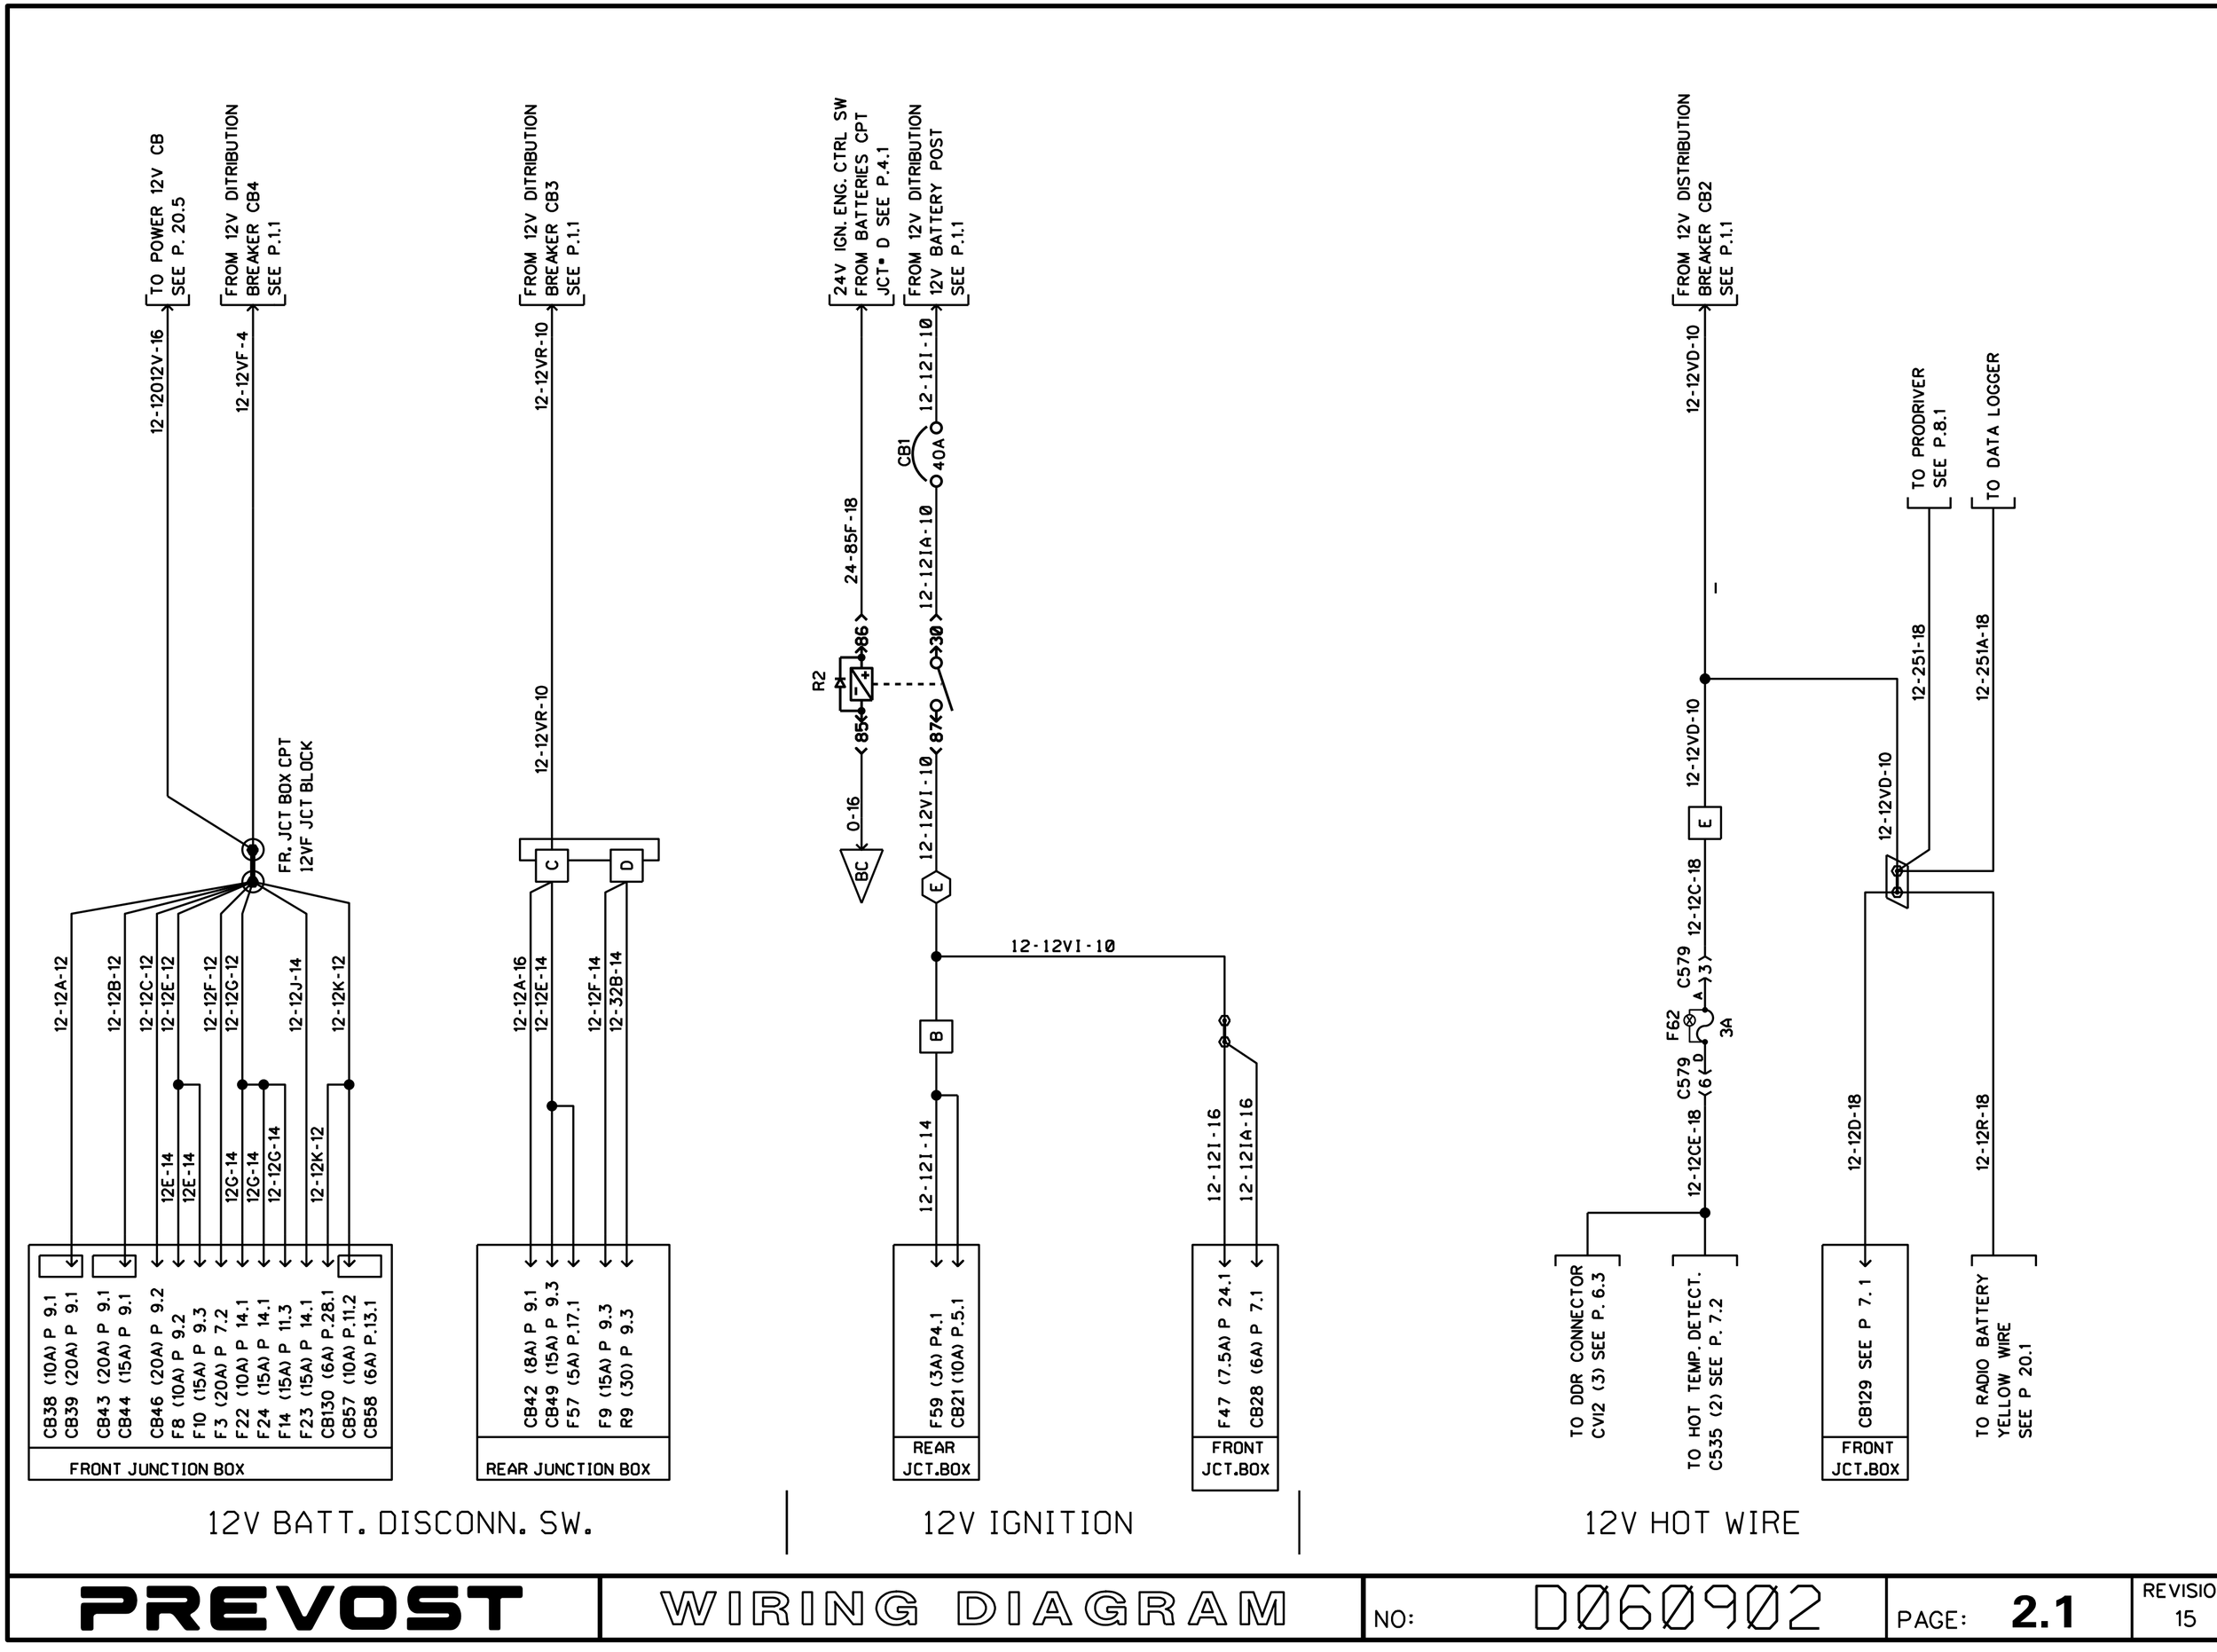
TO POWER 12V CB
SEE P. 20.5
12-12012V-16
FROM 12V DITRIBUTION
BREAKER CB4
SEE P.1.1
12-12VF-4
FR. JCT BOX CPT
12VF JCT BLOCK
12-12A-12
12-12B-12
12-12C-12
12-12E-12
12-12F-12
12-12G-12
12-12J-14
12-12K-12
12E-14
12E-14
12G-14
12G-14
12-12G-14
12-12K-12
CB38 (10A) P 9.1
CB39 (20A) P 9.1
CB43 (20A) P 9.1
CB44 (15A) P 9.1
CB46 (20A) P 9.2
F8 (10A) P 9.2
F10 (15A) P 9.3
F3 (20A) P 7.2
F22 (10A) P 14.1
F24 (15A) P 14.1
F14 (15A) P 11.3
F23 (15A) P 14.1
CB130 (6A) P.28.1
CB57 (10A) P.11.2
CB58 (6A) P.13.1
FRONT JUNCTION BOX
FROM 12V DITRIBUTION
BREAKER CB3
SEE P.1.1
12-12VR-10
12-12VR-10
C
D
12-12A-16
12-12E-14
12-12F-14
12-32B-14
CB42 (8A) P 9.1
CB49 (15A) P 9.3
F57 (5A) P.17.1
F9 (15A) P 9.3
R9 (30) P 9.3
REAR JUNCTION BOX
24V IGN. ENG. CTRL SW
FROM BATTERIES CPT
JCT• D SEE P.4.1
24-85F-18
FROM 12V DITRIBUTION
12V BATTERY POST
SEE P.1.1
12-12I-10
CB1
40A
12-12IA-10
R2
85
86
87
30
87A
0-16
BC
12-12VI-10
E
12-12VI-10
B
12-12I-14
12-12I-16
12-12IA-16
F59 (3A) P4.1
CB21 (10A) P.5.1
REAR
JCT.BOX
F47 (7.5A) P 24.1
CB28 (6A) P 7.1
FRONT
JCT.BOX
FROM 12V DISTRIBUTION
BREAKER CB2
SEE P.1.1
12-12VD-10
12-12VD-10
E
12-12C-18
C579
3
A
F62
3A
D
C579
6
12-12CE-18
TO DDR CONNECTOR
CVI2 (3) SEE P. 6.3
TO HOT TEMP. DETECT.
C535 (2) SEE P. 7.2
TO PRODRIVER
SEE P.8.1
12-251-18
12-12VD-10
12-12D-18
CB129 SEE P 7.1
FRONT
JCT.BOX
TO DATA LOGGER
12-251A-18
12-12R-18
TO RADIO BATTERY
YELLOW WIRE
SEE P 20.1
12V BATT. DISCONN. SW.
12V IGNITION
12V HOT WIRE

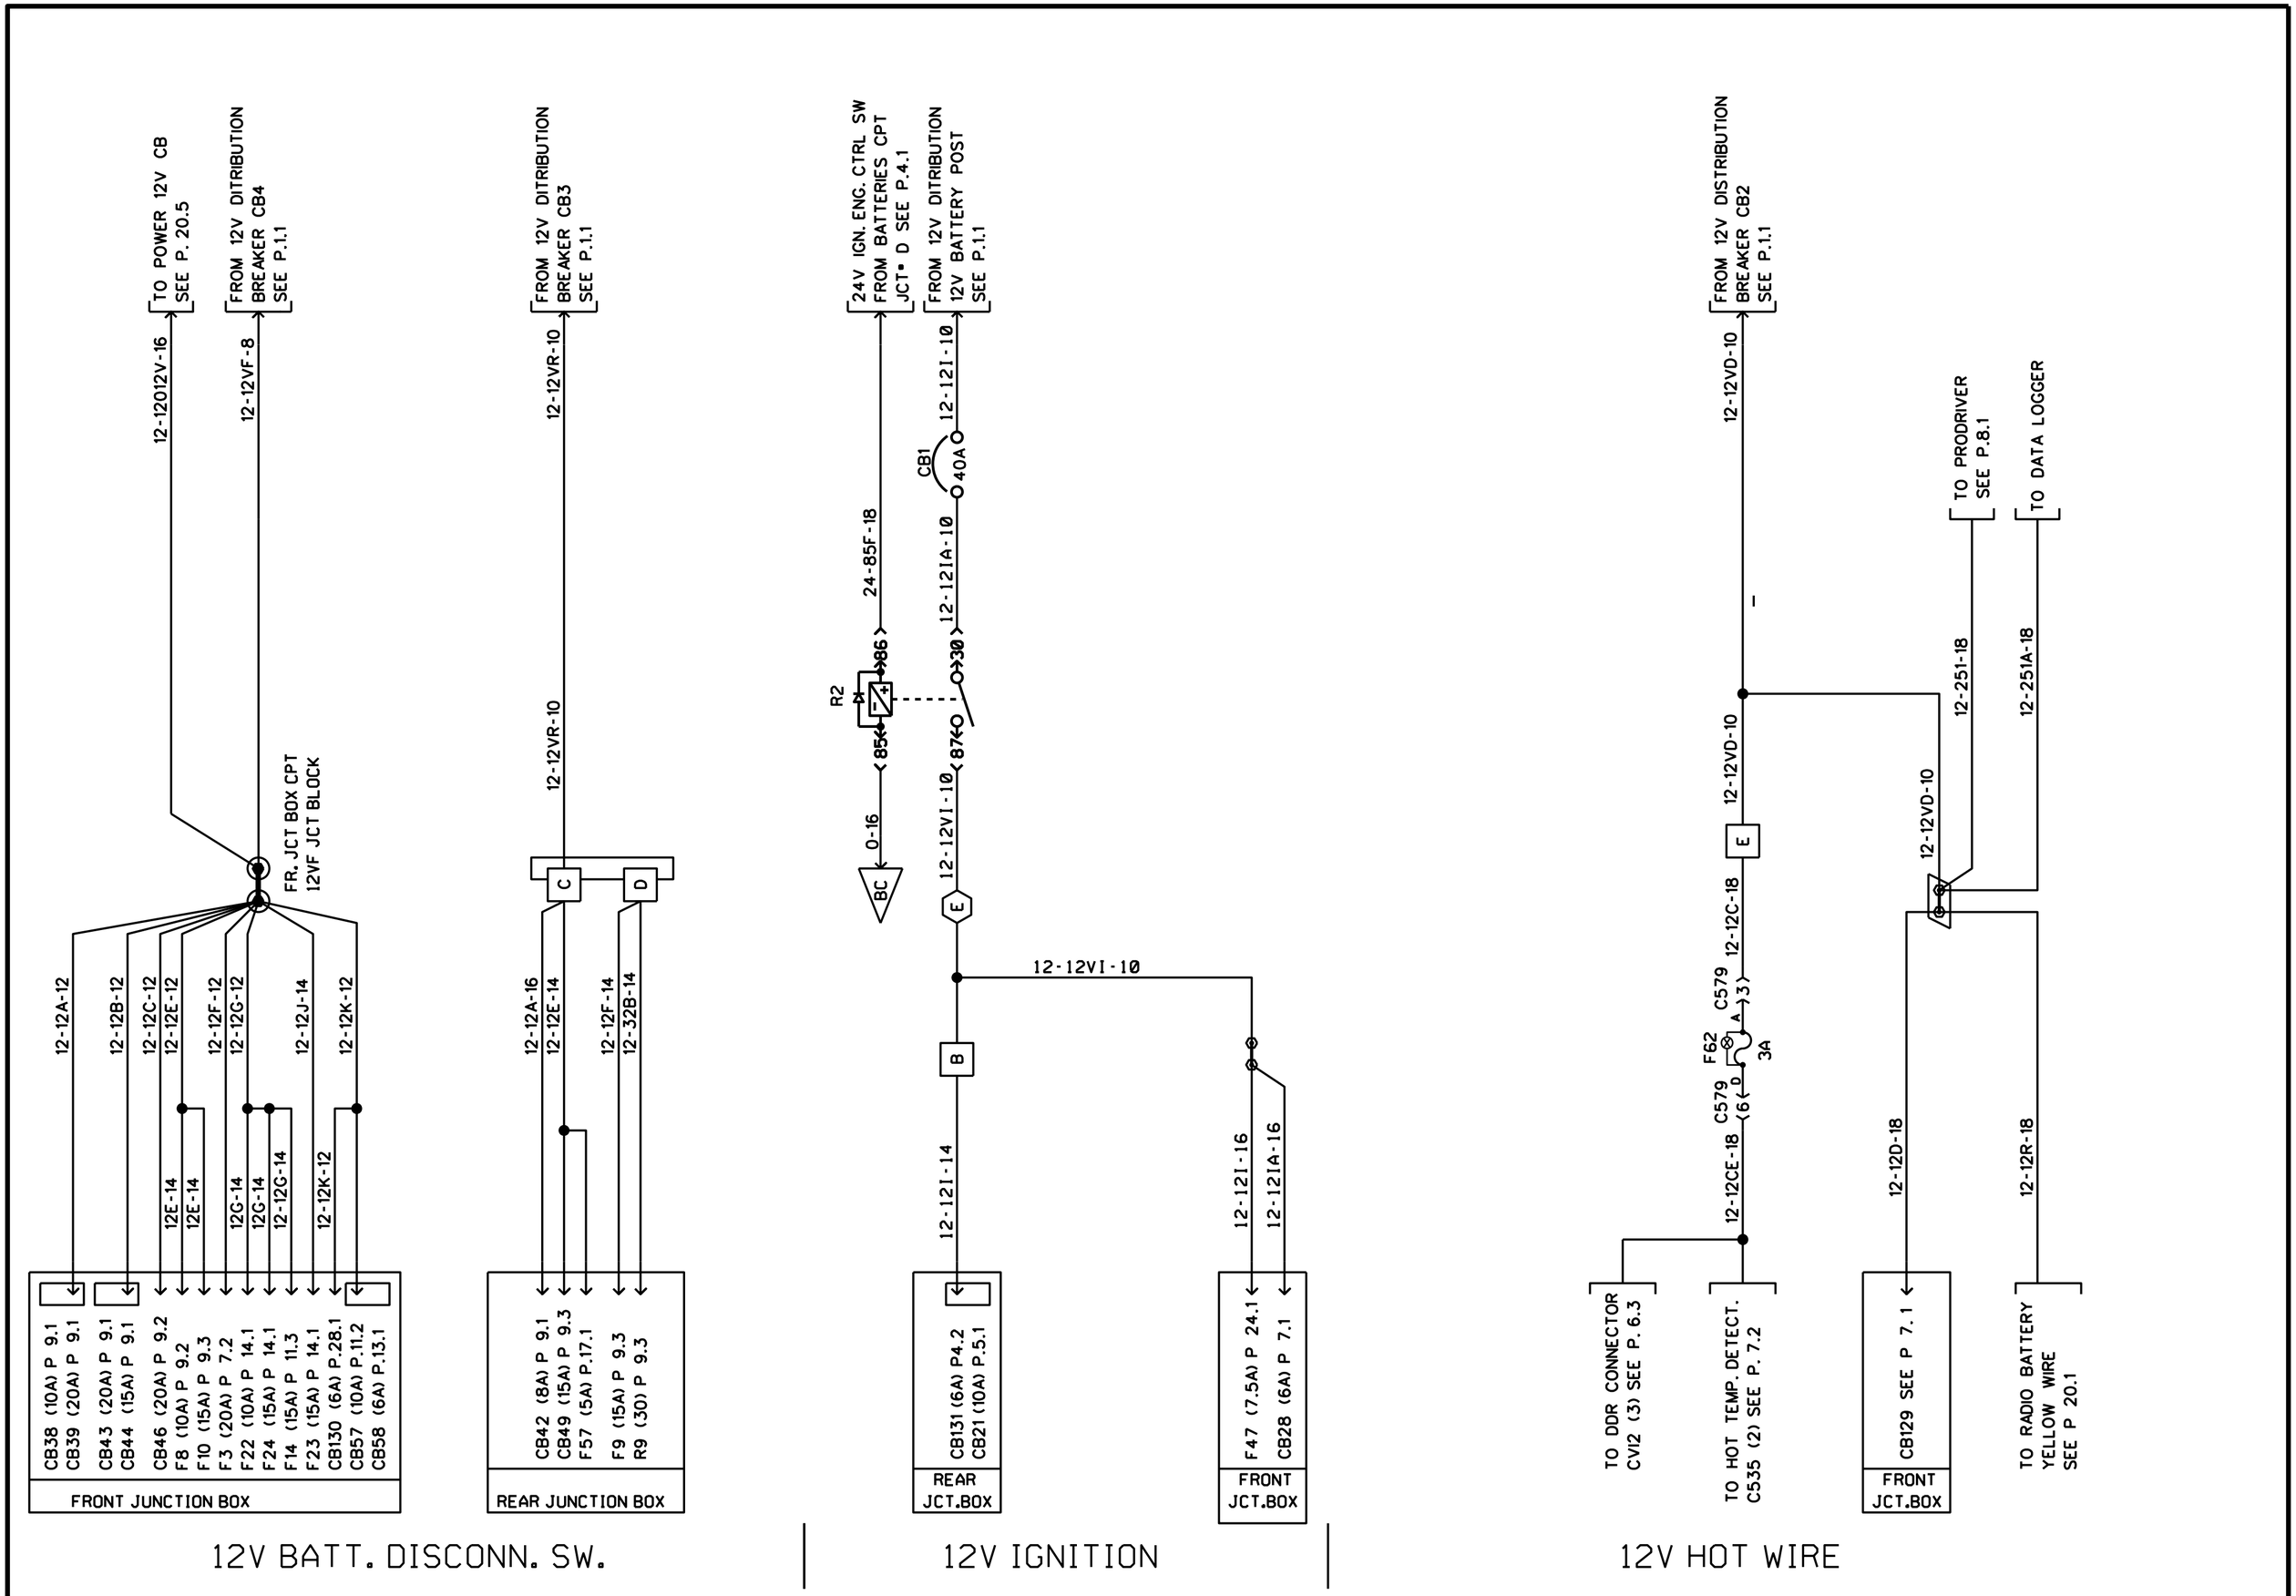
12-12012V-16
TO POWER 12V CB
SEE P. 20.5
12-12VF-8
FROM 12V DITRIBUTION
BREAKER CB4
SEE P.1.1
12-12VR-10
FROM 12V DITRIBUTION
BREAKER CB3
SEE P.1.1
FR. JCT BOX CPT
12VF JCT BLOCK
12-12A-12
12-12B-12
12-12C-12
12-12E-12
12-12F-12
12-12G-12
12-12J-14
12-12K-12
12E-14
12E-14
12G-14
12G-14
12-12G-14
12-12K-12
CB38 (10A) P 9.1
CB39 (20A) P 9.1
CB43 (20A) P 9.1
CB44 (15A) P 9.1
CB46 (20A) P 9.2
F8 (10A) P 9.2
F10 (15A) P 9.3
F3 (20A) P 7.2
F22 (10A) P 14.1
F24 (15A) P 14.1
F14 (15A) P 11.3
F23 (15A) P 14.1
CB130 (6A) P.28.1
CB57 (10A) P.11.2
CB58 (6A) P.13.1
FRONT JUNCTION BOX
12-12A-16
12-12E-14
12-12F-14
12-32B-14
C
D
CB42 (8A) P 9.1
CB49 (15A) P 9.3
F57 (5A) P.17.1
F9 (15A) P 9.3
R9 (30) P 9.3
REAR JUNCTION BOX
12V BATT. DISCONN. SW.
24V IGN. ENG. CTRL SW
FROM BATTERIES CPT
JCT" D SEE P.4.1
FROM 12V DITRIBUTION
12V BATTERY POST
SEE P.1.1
24-85F-18
CB1
12-121-10
40A
12-121A-10
R2
86
85
30
87
0-16
BC
12-12VI-10
E
12-12VI-10
B
12-121-14
12-121-16
12-121A-16
CB131 (6A) P4.2
CB21 (10A) P.5.1
REAR
JCT.BOX
F47 (7.5A) P 24.1
CB28 (6A) P 7.1
FRONT
JCT.BOX
12V IGNITION
FROM 12V DISTRIBUTION
BREAKER CB2
SEE P.1.1
12-12VD-10
12-12VD-10
E
12-12C-18
C579
3
A
F62
3A
C579
6
D
12-12CE-18
TO DDR CONNECTOR
CV12 (3) SEE P. 6.3
TO HOT TEMP. DETECT.
C535 (2) SEE P. 7.2
TO PRODRIVER
SEE P.8.1
12-251-18
12-251A-18
TO DATA LOGGER
12-12VD-10
12-12D-18
12-12R-18
CB129 SEE P 7. 1
FRONT
JCT.BOX
TO RADIO BATTERY
YELLOW WIRE
SEE P 20.1
12V HOT WIRE

PREVOST | WIRING DIAGRAM

12V BATT. DISCONN. SW.

FRONT JUNCTION BOX

CB38 (10A) P 9.1
CB39 (20A) P 9.1
CB43 (20A) P 9.1
CB44 (15A) P 9.1
CB46 (20A) P 9.2
F8 (10A) P 9.2
F10 (15A) P 9.3
F3 (20A) P 7.2
F22 (10A) P 14.1
F24 (15A) P 14.1
F14 (15A) P 11.3
F23 (15A) P 14.1
CB130 (6A) P.28.1
CB57 (10A) P.11.2
CB58 (6A) P.13.1

12-12A-12
12-12B-12
12-12C-12
12E-14
12-12E-12
12E-14
12-12F-12
12G-14
12-12G-12
12G-14
12-12G-14
12-12J-14
12-12K-12
12-12K-12

FR. JCT BOX CPT
12VF JCT BLOCK

12-12012V-16 → TO POWER 12V CB SEE P. 20.5

12-12VF-8 → FROM 12V DITRIBUTION BREAKER CB4 SEE P.1.1

REAR JUNCTION BOX

CB42 (8A) P 9.1
CB49 (15A) P 9.3
F57 (5A) P.17.1
F9 (15A) P 9.3
R9 (30) P 9.3

12-12A-16
12-12E-14
12-12F-14
12-32B-14

C
D

12-12VR-10 → 12-12VR-10 → FROM 12V DITRIBUTION BREAKER CB3 SEE P.1.1

12V IGNITION

REAR JCT.BOX

CB131 (6A) P4.2
CB21 (10A) P.5.1

12-12I-14
B
E
12-12VI-10
12-12VI-10

R2
BC
0-16
85
86
87
30
24-85F-18 → 24V IGN. ENG. CTRL SW FROM BATTERIES CPT JCT• D SEE P.4.1

CB1
40A
12-12IA-10
12-12I-10 → FROM 12V DITRIBUTION 12V BATTERY POST SEE P.1.1

FRONT JCT.BOX

F47 (7.5A) P 24.1
CB28 (6A) P 7.1

12-12I-16
12-12IA-16

12V HOT WIRE

TO DDR CONNECTOR
CVI2 (3) SEE P. 6.1 & 6.3

TO HOT TEMP. DETECT.
C535 (2) SEE P. 7.2

12-12CE-18
C579
6
D
F62
3A
A
C579
3
12-12C-18
E
12-12VD-10
12-12VD-10 → FROM 12V DISTRIBUTION BREAKER CB2 SEE P.1.1

FRONT JCT.BOX

CB129 SEE P 7.1

12-12D-18
12-12VD-10
12-251-18 → TO PRODRIVER SEE P.8.1

TO RADIO BATTERY
YELLOW WIRE
SEE P 20.1

12-12R-18
12-251A-18 → TO DATA LOGGER

NO: D06090 2

PAGE: 2.1

REVISION 17

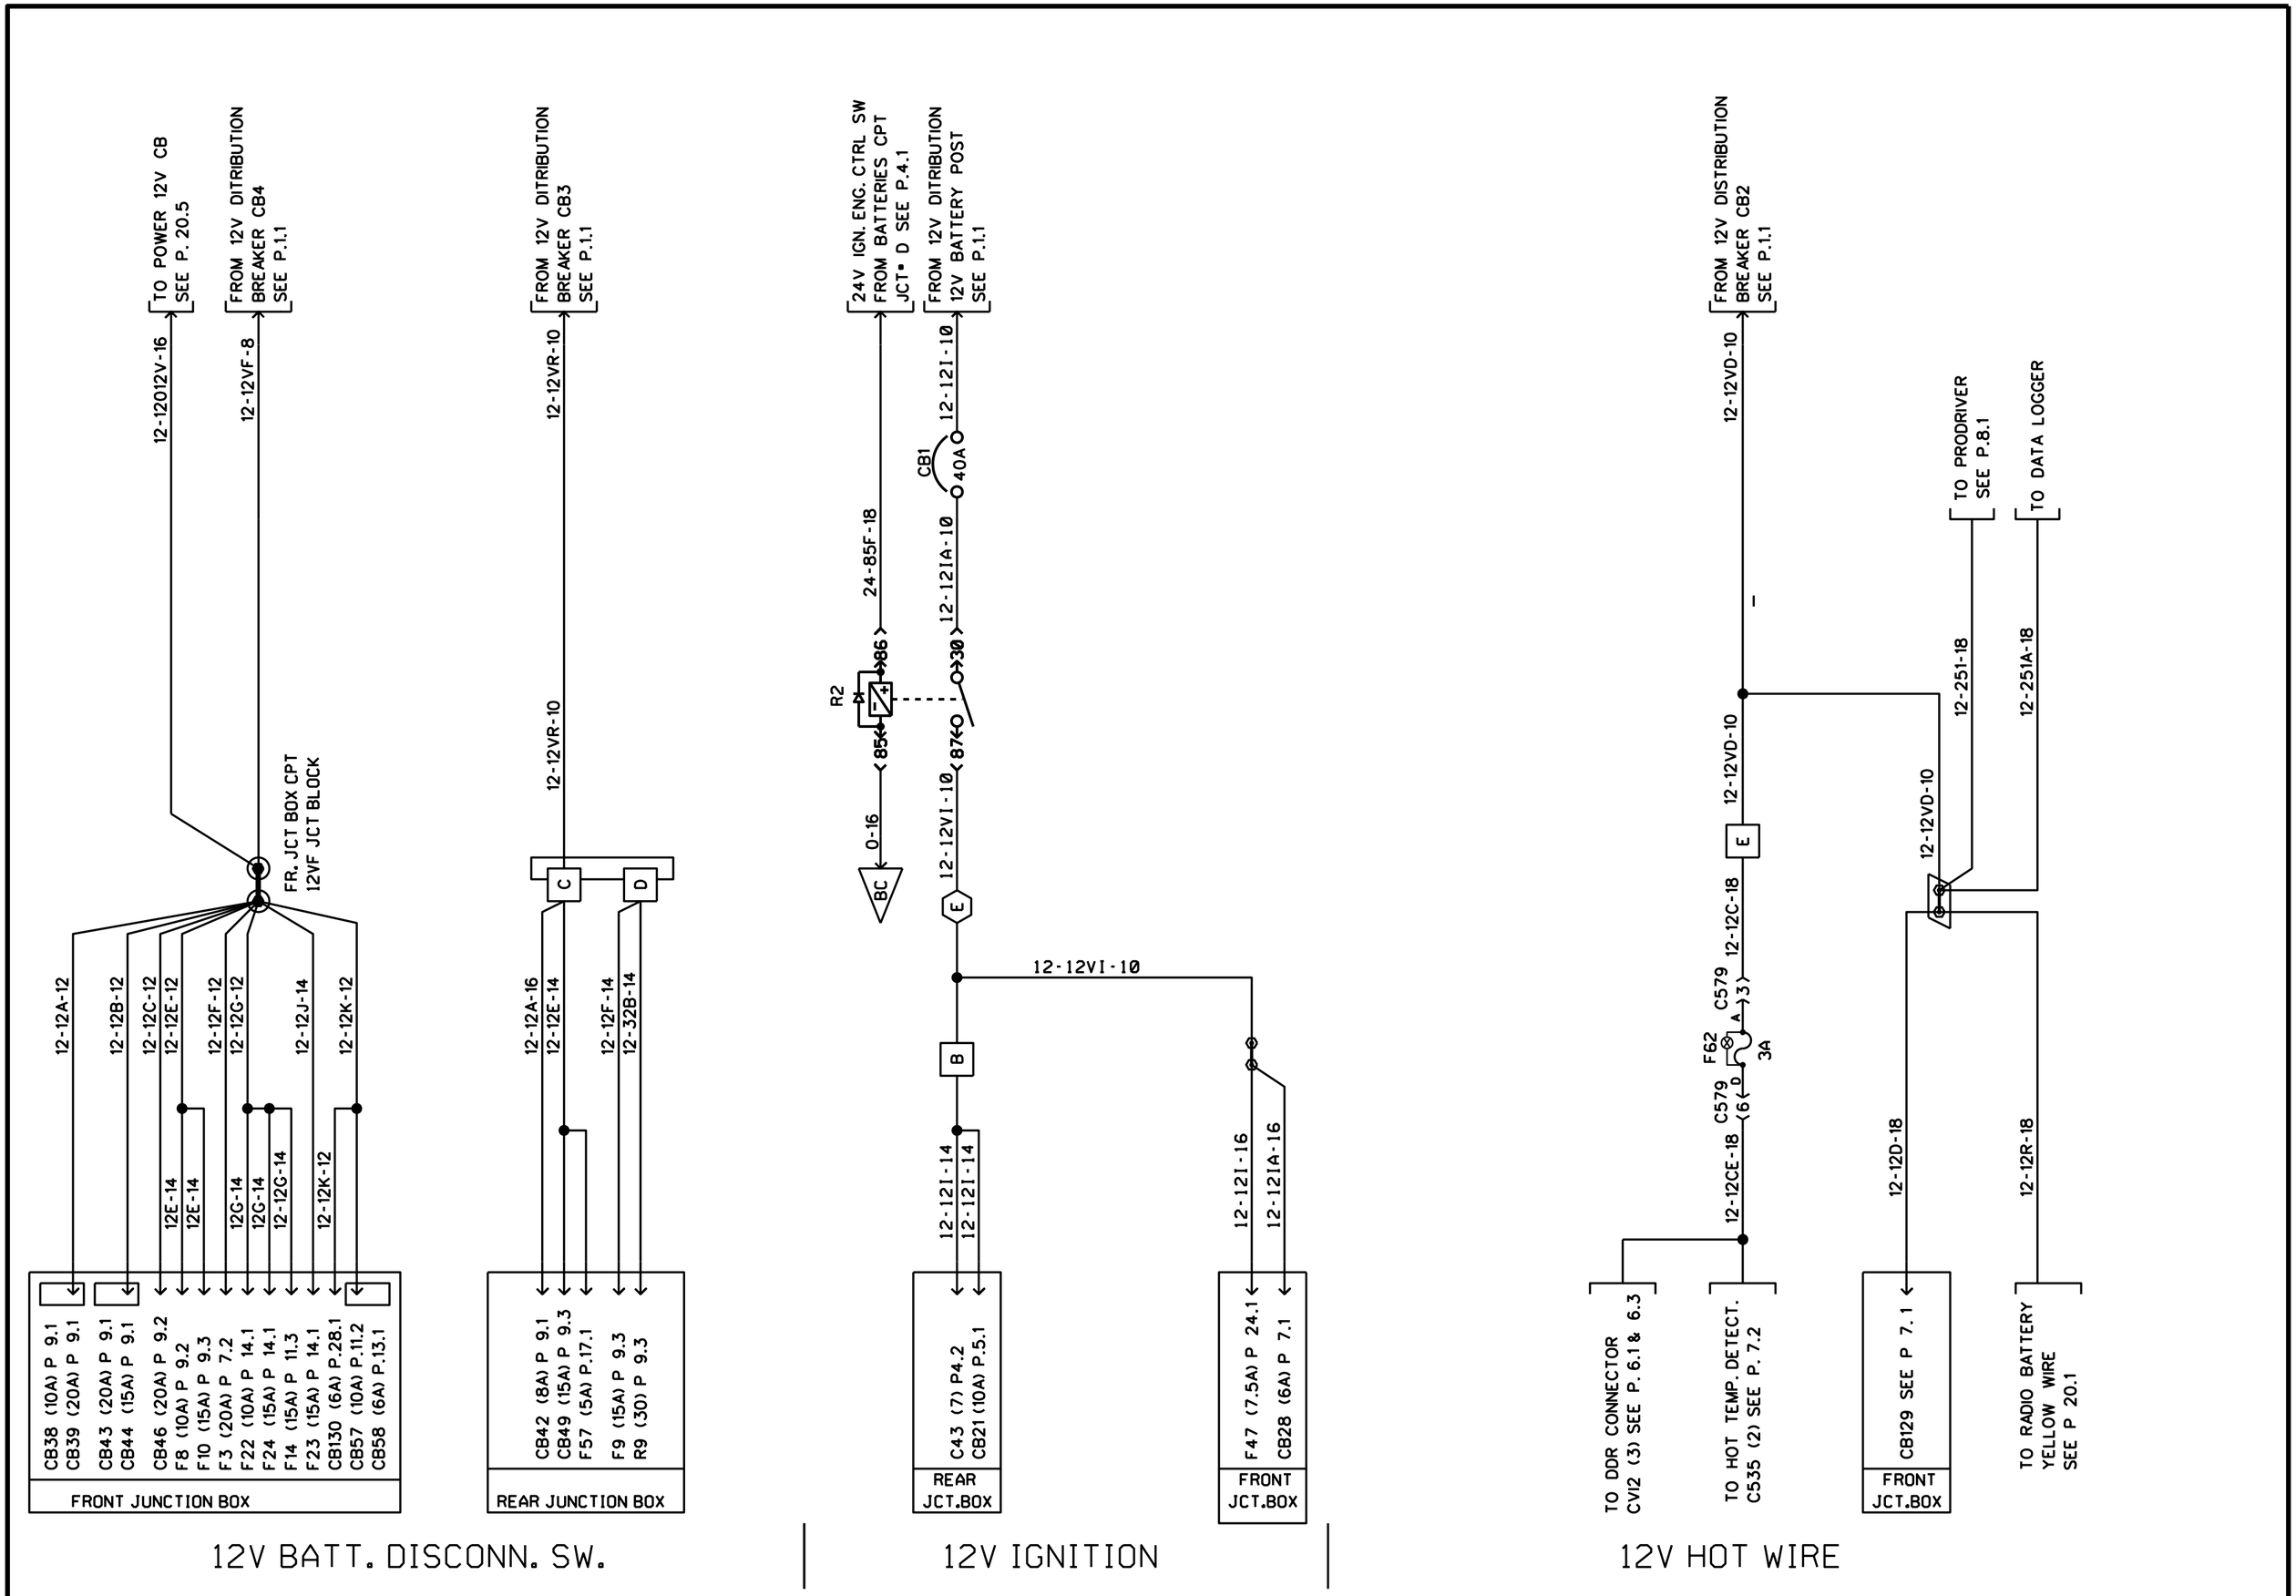

12V BATT. DISCONN. SW. | 12V IGNITION | 12V HOT WIRE

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 2.1	REVISION 24

PREVOST | WIRING DIAGRAM

CHASSIS GROUND

FRONT JUNCTION BOX COMPARTMENT

FRONT SECTION (FS)

- FRONT SERVICE CPT C105 (B), C106 (B), C239 (B), C260 (A&B), C183 (A)
  FRONT SERVICE CPT C267 (7), C536 (4)
  FRONT SERVICE CPT C323 (1), SH1, SH3
  BEHIND DASH RH PANEL C452 (1), AA2 (85)
  - 0-0C-14
  - 0-0C1-18 → 0-0C1-14
  - 0-0C2-18
  - 0-0C3-18
- FRONT JCT. BOX - RELAYS & C522 (87)
  - 0-0C4-18 → C3 15 → 0-0C4-14

→ FRONT JCT BOX 0C GROUND STUD

- FRONT SERVICE CPT C435 (2), C246 (3), C242 (3) & STEP LT
  FRONT SERVICE CPT C102 (GRD), C103 (GRD), C104 (GRD), LO BUOY SW & STEP LT
  FRONT SERVICE CPT HEADLAMP CON C243
  - 0-0L-14
  - 0-0L1-14
  - 0-0L2-12
- FRONT JCT. BOX - CORNERING LTS RESISTORS
  - 0-0L3-14 → C3 22 → 0-0L3-14
- FRONT JCT. BOX - FOG LTS RESISTORS
  - 0-0L4-14 → C3 16 → 0-0L4-14
- RH CONSOLE - CIGAR LIGHTER
  - 0-0L5-14

→ FRONT JCT BOX 0L GROUND STUD

- WIPER MOTOR C177 (1) & PULSE MOD. C176 (1) & RH MIRROR C269 (3)
  DRIVER'S HTR FAN SPEED CTRL MOD. C175 (5)
  FR. SERV. CPT-HORNS C101 (B), & WASHER PUMP
  RADIATOR FAN CLUTCH SPEED 2 C549
  - 0-0M-14
  - 0-0M3-12
  - 0-0M4-14
  - 0-0M5-14
- FR. JCT. BOX - WIPER PULSE MOD. C248 (1)
  - 0-0M6-14 → C3 14 → 0-0M6-14
- LH CONSOLE SWITCH
  FRONT SERVICE CPT - LH MIRROR C268 (3)
  - 0-0M7-14 → C70 21 → 0-0M7-14
  - 0-0M7-14

→ FRONT JCT BOX 0M GROUND STUD

- FR. SERV. CPT-LO AIR PRIM, SEC PRESSURE SW. & TAG PRESSURE SW.
  LH SWITCH PANEL
  BEHIND DASH PANEL - B/U MONITOR C394 (2)
  - 0-0T-18
  - 0-0J-14 → C376 29 → 0-0T1-18
- DASH LH PANEL
  BEHIND DASH PANEL-AUDIBLE FLASHER C424 (1)
  - C546 37
- DASH CENTRAL PANEL
  DASH CENTRAL PANEL
  - C73 7
  - C73 15
- DASH RH PANEL
  - C547 1
- RH SWITCH PANEL
  - 0-0L-16 → C55 7
- LH CONSOLE SWITCH
  - C171 37 → 0-0T2-18
- FR. JCT BOX - GROUND JCT BLOCK & SOLDER WITH DDEC DATA LINK SHIELD SH1
  12V POWER OUTLET
  - C3 23 → 0-0T3-14
  - C3 24 → 0-0T4-16

→ FRONT JCT BOX 0T GROUND STUD

FRONT ROOF SECTION (FRS)

ROOF ACCES. CLEARANCE LTS C213(1), FAN DEFROST C365(1), DEST. SIGN. C364(1) C478(3), WARNING C362(1) C363(1) C373(1), WIPER MOT. C361(1) & DRIVER'S LTS

HEATING UPPER WINDSHIELD

- 0-0A-18
- 0-0A-18
- 0-0A-14
- 0-0A-14
- 0-0B-12

→ FRONT LH ROOF GROUND STUD

REAR JUNCTION BOX COMPARTMENT

REAR SECTION (RS)

- RR JCT. BOX - RELAYS
  RR JCT. BOX - C535(1), R84, R85, C475(1) & SOLDER WT SHIELD SH2, SH3, 20, 20T
  RR JCT. BOX - VIMN(87), VIMR(87), VIM4(30) & SOLDER WT SHIELD SH1
  RR JCT BOX - RETARDER FAN CLUTCH C508(3)
  RR JCT BOX - A/C & HEAT JCT PANEL
  RR JCT BOX - DOCKING LTS RESISTORS
  - 0-0-18
  - 0-0A-16 → M
  - 0-0W-18
  - 0-0B-10
  - 0-0R-16
  - C59 1 → 0-0K-16
  - 0-0DR-14
- SIDE WINDOWS EMERGENCY EXIT LTS C36(2)
  LH HAT RACK & GEN C204(2), FLUOR. C208(3)
  AISLE LTS C83(1)
  LH READ LTS C207(1), PASS & HOST CHIME SW
  RH HAT RACK & GEN C204(2), FLUOR. C202(3)
  RH READ LTS C206(1), PASS & HOST CHIME SW
  LAV. OCC. LT C143(3), GAL. LT C328(1) FLUOR C41(1)
  WCL RELAY R94 (85) & R98 (85)
  - 0-16 → C36 2 → C37 2 → C35 1 → 0-0D-14
  - C144 1 → C35 2 → 0-0E-14 → N
  - C37 7 → C38 2 → C35 3 → 0-0F-14
  - C35 4 → 0-0G-14
  - C35 15 → 0-0H-16 → O
  - 0-0WC-16
  - 0-0C-10
- RR END LAMPS RH C119 (A)
  RR END LAMPS LH C120 (A)
  ENG CPT C126(B), C128(2), C129(2), C130(2), C131(2), C422(1)
  ENG CPT C230(2), C127(B), C122(B), C124(A)
  ENG CPT C125(B)
  RR ROOF CLEARANCE LTS C87(2) & ENGINE CPT C287(A), C432(2) & C115(B)
  RR ROOF CAMERA C87(1)
  RR SIDE MARK C113, FLASH LH C114 & RH C121
  LUG CPT RH SIDE MARKER C103, FLASHER C104
  LUG CPT FUEL TANK C152(A), DAMPER C111(2), WATER VALVE C155(D), BYPASS VALVE C156(B), LH SIDE FLASHER C102, LH SIDE MARKER C103
  - 0-0RH-16
  - 0-0LH-16
  - 0-0X-12
  - 0-0P-14
  - 0-0R-14
  - 0-0X-12
  - 0-0N-14
  - 0-0K-14
  - 0-0Y-12
  - 0-0J-16
  - 0-0DF-14
  - 0-0Y-12
  - 0-0B-14
  - 0-0Z-12
  - 0-0A-14
  - 0-0Z-12

→ REAR JCT BOX GROUND STUD

BATTERY COMPARTMENT (BC)

BAT CPT - RELAYS R2, R3, R54, R55

ENGINE-SOLDER SHIELD SH1, SH2, SH3 & C326(B)
VOLTAGE REGULATOR
CONDENSER FAN SPEED RLY R39, R40, R41
CONDENSER FAN RELAY R41 (87)
CONDENSER FAN LH
GALLEY INVERTER JUNCTION BLOCK
GALLEY COFFEMAKER
GALLEY R47 R48 R79, C403 LAMP, SW LT, HEAT CONT
WHEEL CHAIR LIFT RICON

- 0-0-16
- 0-0A-16 → C397 1 → 0-0A-16
- 0-0AA-12
- 0-0C-16
- 0-0D-10
- 0-0D-10
- 0-0-6
- 0-0-10
- 0-0-16
- 0-0W-6

→ BATTERY COMPARTMENT GROUND STUD

BATTERY GROUND

RR JCT BOX (RBG)

DDEC ACCES. BATTERY GROUND SEE PAGE 5.1
WORLD TRANS. ACCES. BAT. GRD SEE PAGE 6.1

- 0-953-18
- 0-143W-12 → P
- 0-00-12 → 0-00-12

→ FROM BATTERY COMPARTMENT ELECTRONIC GROUND JCT BLOCK SEE PAGE 1.1

FR JCT BOX (FBG)

TELL TALE LIGHT MODULE SEE PAGE 28.1
CLUSTER SEE P.7.2

- C74 36 → 0-00A-18 → 0-00-16

PREVOST | WIRING DIAGRAM

NO: D060902

PAGE: 3.1

REVISION 01

CHASSIS GROUND

FRONT JUNCTION BOX COMPARTMENT

FRONT SECTION (FS)

- FRONT SERVICE CPT C105 (B), C106 (B), C239 (B), C260 (A&B), C183 (A)
- FRONT SERVICE CPT C267 (7), C536 (4)
- FRONT SERVICE CPT C323 (1), SH1, SH3
- BEHIND DASH RH PANEL C452 (1), AA2 (85)
- FRONT JCT. BOX - RELAYS & C522 (87)

  0-0C-14; 0-0C1-18; 0-0C1-14; 0-0C2-18; 0-0C3-18; 0-0C4-18; C3 (15); 0-0C4-14 → FRONT JCT BOX 0C GROUND STUD

- FRONT SERVICE CPT C435 (2), C246 (3), C242 (3) & STEP LT
- FRONT SERVICE CPT C102 (GRD), C103 (GRD), C104 (GRD), LO BUOY SW & STEP LT
- FRONT SERVICE CPT HEADLAMP CON C243
- FRONT JCT. BOX - CORNERING LTS RESISTORS
- FRONT JCT. BOX - FOG LTS RESISTORS
- LH CONSOLE

  0-0L-14; 0-0L1-14; 0-0L2-12; 0-0L3-14; C3 (22); 0-0L3-14; 0-0L4-14; C3 (16); 0-0L4-14; 0-0L5-14; (24) C171 → FRONT JCT BOX 0L GROUND STUD

- WIPER MOTOR C177 (1) & PULSE MOD. C176 (1) & RH MIRROR C269 (3)
- DRIVER'S HTR FAN SPEED CTRL MOD. C175 (5)
- FR. SERV. CPT-HORNS C101 (B), & WASHER PUMP
- RADIATOR FAN CLUTCH SPEED 2 C549
- FR. JCT. BOX - WIPER PULSE MOD. C248 (1)
- LH CONSOLE SWITCH
- FRONT SERVICE CPT - LH MIRROR C268 (3)

  0-0M-14; 0-0M3-12; 0-0M4-14; 0-0M5-14; 0-0M6-14; C3 (14); 0-0M6-14; 0-0M7-14; C171 (21); 0-0M7-14; 0-0M7-14 → FRONT JCT BOX 0M GROUND STUD

- FR. SERV. CPT- TAG PRESSURE SW.
- LH SWITCH PANEL
- DASH LH PANEL
- BEHIND DASH PANEL-AUDIBLE FLASHER C424 (1)
- BEHIND DASH PANEL - B/U MONITOR C394 (2) CLUSTER
- FR. JCT BOX - GROUND JCT BLOCK
- 12V POWER OUTLET

  0-0T-18; 0-0T1-18; 0-0T2-18; C3 (23); 0-0T3-14; 0-0T4-16 → FRONT JCT BOX 0T GROUND STUD

FRONT ROOF SECTION (FRS)

- ROOF ACCES. CLEARANCE LTS C213(1), FAN DEFROST C365(1), DEST. SIGN. C364(1) C478(3), WARNING C362(1) C363(1) C373(1), WIPER MOT. C361(1) & DRIVER'S LTS
- HEATING UPPER WINDSHIELD

  0-0A-18; 0-0A-18; 0-0A-14; 0-0A-14; 0-0B-12 → FRONT LH ROOF GROUND STUD

REAR JUNCTION BOX COMPARTMENT

REAR SECTION (RS)

- RR JCT. BOX - RELAYS
- RR JCT. BOX - C535(1), R84, R85, C475(1) & SOLDER WT SHIELD SH2, SH3, 20, 20T
- RR JCT. BOX - VIMN(87), VIMR(87), VIM4(30) & SOLDER WT SHIELD SH1
- RR JCT BOX - RETARDER FAN CLUTCH C508(3)
- RR JCT BOX - A/C & HEAT JCT PANEL
- RR JCT BOX - DOCKING LTS RESISTORS

  0-0-18; 0-0A-16; 0-0W-18 → M; 0-0B-10

  0-0R-16; C59 (1); 0-0K-16; 0-0DR-14

- SIDE WINDOWS EMERGENCY EXIT LTS C36(2)
- LH HAT RACK & GEN C204(2), FLUOR. C208(3)
- AISLE LTS C83(1)
- LH READ LTS C207(1), PASS & HOST CHIME SW
- RH HAT RACK & GEN C204(2), FLUOR. C202(3)
- RH READ LTS C206(1), PASS & HOST CHIME SW
- LAV. OCC. LT C143(3), GAL. LT C328(1) FLUOR C41(1)
- WCL RELAY R94 (85) & R98 (85)

  0-16; C36 (2); C37 (2); C144 (1); C37 (7); C38 (2); C35 (1, 2, 3, 4, 15); 0-0D-14; 0-0E-14; 0-0F-14; 0-0G-14; 0-0H-16; 0-0WC-16 → N; O; 0-0C-10

- RR END LAMPS RH C119 (A)
- RR END LAMPS LH C120 (A)
- ENG CPT C126(B), C128(2), C129(2), C130(2), C131(2), C422(1)
- ENG CPT C230(2), C127(B), C122(B), C124(A)
- ENG CPT C125(B)
- RR ROOF CLEARANCE LTS C87(2) & ENGINE CPT C287(A), C432(2) & C115(B)
- RR ROOF CAMERA C87(1)
- RR SIDE MARK C113, FLASH LH C114 & RH C121
- LUG CPT RH SIDE MARKER C103, FLASHER C104
- LUG CPT FUEL TANK C152(A), DAMPER C111(2), WATER VALVE C155(D), BYPASS VALVE C156(B), LH SIDE FLASHER C102, LH SIDE MARKER C103

  0-0RH-16; 0-0LH-16; 0-0X-12; 0-0P-14; 0-0R-14; 0-0X-12; 0-0N-14; 0-0Y-12; 0-0K-14; 0-0J-16; 0-0DF-14; 0-0Y-12; 0-0B-14; 0-0Z-12; 0-0A-14; 0-0Z-12 → REAR JCT BOX GROUND STUD

BATTERY COMPARTMENT (BC)

- BAT CPT - RELAYS R2, R3, R54, R55
- ENGINE-SOLDER SHIELD SH1, SH2, SH3 & C326(B)
- VOLTAGE REGULATOR
- CONDENSER FAN SPEED RLY R39, R40, R41
- CONDENSER FAN RELAY R41 (87)
- CONDENSER FAN LH
- GALLEY INVERTER JUNCTION BLOCK
- GALLEY COFFEMAKER
- GALLEY R47 R48 R79, C403 LAMP, SW LT, HEAT CONT
- WHEEL CHAIR LIFT RICON

  0-0-16; 0-0A-16; C397 (1); 0-0A-16; 0-0AA-12; 0-0C-16; 0-0D-10; 0-0D-10; 0-0-6; 0-0-10; 0-0-16; 0-0W-6 → BATTERY COMPARTMENT GROUND STUD

BATTERY GROUND

RR JCT BOX (RBG)

- DDEC ACCES. BATTERY GROUND SEE PAGE 5.1
- WORLD TRANS. ACCES. BAT. GRD SEE PAGE 6.1

  0-953-18; 0-143W-12 → P; 0-00-12; 0-00-12 → FROM BATTERY COMPARTMENT ELECTRONIC GROUND JCT BLOCK SEE PAGE 1.1

FR JCT BOX (FBG)

- TELL TALE LIGHT MODULE SEE PAGE 28.1
- CLUSTER SEE P.7.1

  C74 (36); 0-00A-18; 0-00-16

FRONT JUNCTION BOX COMPARTMENT — FRONT SECTION (FS)

FRONT SERVICE CPT C105 (B), C106 (B), C239 (B), C260 (A&B), C183 (A)
FRONT SERVICE CPT C267 (7), C536 (4)
FRONT SERVICE CPT C323 (1), SH1, SH3
BEHIND DASH RH PANEL C452 (1), AA2 (85)
FRONT JCT. BOX - RELAYS & C522 (87)

FRONT SERVICE CPT C435 (2), C246 (3), C242 (3) & STEP LT
FRONT SERVICE CPT C102 (GRD), C103 (GRD), C104 (GRD), LO BUOY SW & STEP LT
FRONT SERVICE CPT HEADLAMP CON C243
FRONT JCT. BOX - CORNERING LTS RESISTORS
FRONT JCT. BOX - FOG LTS RESISTORS
LH CONSOLE

WIPER MOTOR C177 (1) & PULSE MOD. C176 (1) & RH MIRROR C269 (3)
DRIVER'S HTR FAN SPEED CTRL MOD. C175 (5)
FR. SERV. CPT-HORNS C101 (B), & WASHER PUMP
RADIATOR FAN CLUTCH SPEED 2 C549
FR. JCT. BOX - WIPER PULSE MOD. C248 (1)

LH CONSOLE SWITCH
FRONT SERVICE CPT - LH MIRROR C268 (3)

FR. SERV. CPT- TAG PRESSURE SW.

LH SWITCH PANEL

DASH LH PANEL
BEHIND DASH PANEL-AUDIBLE FLASHER C424 (1)

BEHIND DASH PANEL - B/U MONITOR C394 (2)
CLUSTER
FR. JCT BOX - GROUND JCT BLOCK - SHIFTER

12V POWER OUTLET

0-0C-14, 0-0C1-18, 0-0C1-14, 0-0C2-18, 0-0C3-18, 0-0C4-18, C3 15, 0-0C4-14 → FRONT JCT BOX 0C GROUND STUD

0-0L-14, 0-0L1-14, 0-0L2-12, 0-0L3-14, C3 22, 0-0L3-14, 0-0L4-14, C3 16, 0-0L4-14, 0-0L5-14, 24 C171 → FRONT JCT BOX 0L GROUND STUD

0-0M-14, 0-0M3-12, 0-0M4-14, 0-0M5-14, 0-0M6-14, C3 14, 0-0M6-14, 0-0M7-14, C171 21, 0-0M7-14, 0-0M7-14 → FRONT JCT BOX 0M GROUND STUD

0-0T-18, 0-0T1-18 → FRONT JCT BOX 0T GROUND STUD

0-0T2-18, C3 23, 0-0T3-14, 0-0T4-16

FRONT ROOF SECTION (FRS)

ROOF ACCES. CLEARANCE LTS C213(1), FAN DEFROST C365(1), DEST. SIGN. C364(1) C478(3), WARNING C362(1) C363(1) C373(1), WIPER MOT. C361(1) & DRIVER'S LTS

HEATING UPPER WINDSHIELD

0-0A-18, 0-0A-18, 0-0A-14, 0-0A-14, 0-0B-12 → FRONT LH ROOF GROUND STUD

REAR JUNCTION BOX COMPARTMENT — REAR SECTION (RS)

RR JCT. BOX - RELAYS
RR JCT. BOX - C535(1), R84, R85, C475(1) & SOLDER WT SHIELD SH2, SH3, 20, 20T
RR JCT. BOX - VIMN(87), VIMR(87), VIM4(30) & SOLDER WT SHIELD SH1
RR JCT BOX - RETARDER FAN CLUTCH C508(3)
RR JCT BOX - A/C & HEAT JCT PANEL
RR JCT BOX - DOCKING LTS RESISTORS

SIDE WINDOWS EMERGENCY EXIT LTS C36(2)
LH HAT RACK & GEN C204(2), FLUOR. C208(3)
AISLE LTS C83(1)
LH READ LTS C207(1), PASS & HOST CHIME SW
RH HAT RACK & GEN C204(2), FLUOR. C202(3)
RH READ LTS C206(1), PASS & HOST CHIME SW
LAV. OCC. LT C143(3), GAL. LT C328(1) FLUOR C41(1)
WCL RELAY R94 (85) & R98 (85)

RR END LAMPS RH C119 (A)
RR END LAMPS LH C120 (A)
ENG CPT C126(B), C128(2), C129(2), C130(2), C131(2), C422(1)
ENG CPT C230(2), C127(B), C122(B), C124(A)
ENG CPT C125(B)
RR ROOF CLEARANCE LTS C87(2) & ENGINE CPT C287(A), C432(2) & C115(B)
RR ROOF CAMERA C87(1)
RR SIDE MARK C113, FLASH LH C114 & RH C121

LUG CPT RH SIDE MARKER C103, FLASHER C104

LUG CPT FUEL TANK C152(A), DAMPER C111(2), WATER VALVE C155(D), BYPASS VALVE C156(B), LH SIDE FLASHER C102, LH SIDE MARKER C103

0-0-18, 0-0A-16, 0-0W-18 → M → 0-0B-10
0-0R-16, C59 1, 0-0K-16, 0-0DR-14 → N
0-16, C36 2, C35 1, 0-0D-14; C37 2, C144 1, 2, 0-0E-14; C37 7, C38 2, 3, 0-0F-14; 4, 0-0G-14; 15, 0-0H-16, 0-0WC-16 → O → 0-0C-10

0-0RH-16, 0-0LH-16 → 0-0X-12
0-0P-14, 0-0R-14 → 0-0X-12
0-0N-14 → 0-0Y-12
0-0K-14, 0-0J-16 → 0-0Y-12
0-0DF-14 → 0-0Z-12
0-0B-14 → 0-0Z-12
0-0A-14 → 0-0Z-12

→ REAR JCT BOX GROUND STUD

BATTERY COMPARTMENT (BC)

BAT CPT - RELAYS R2, R3, R54, R55

ENGINE-SOLDER SHIELD SH1, SH2, SH3 & C326(B)
VOLTAGE REGULATOR
CONDENSER FAN SPEED. RLY R39, R40, R41, EATON TR.
CONDENSER FAN RELAY R41 (87)
CONDENSER FAN LH
GALLEY INVERTER JUNCTION BLOCK
GALLEY COFFEMAKER
GALLEY R47 R48 R79, C403 LAMP, SW LT, HEAT CONT.
WHEEL CHAIR LIFT RICON

0-0-16, 0-0A-16, C397 1, 0-0A-16, 0-0AA-12, 0-0C-16, 0-0D-10, 0-0D-10, 0-0-6, 0-0-10, 0-0-16, 0-0W-6 → BATTERY COMPARTMENT GROUND STUD

BATTERY GROUND

RR JCT BOX (RBG): DDEC ACCES. BATTERY GROUND SEE PAGE 5.1
WORLD TRANS. ACCES. BAT. GRD SEE PAGE 6.1

0-953-18, 0-143W-12 → P → 0-00-12, 0-00-12 → FROM BATTERY COMPARTMENT ELECTRONIC GROUND JCT BLOCK SEE PAGE 1.1

FR JCT BOX (FBG): TELL TALE LIGHT MODULE SEE PAGE 28.1
CLUSTER SEE P.7.1

C74 36, 0-00A-18, 0-00-16

PREVOST | WIRING DIAGRAM | NO: D060902 | PAGE: 3.1 | REVISION 12

CHASSIS GROUND

FRONT JUNCTION BOX COMPARTMENT

FRONT SECTION (FS)

FRONT SERVICE CPT C105 (B), C106 (B), C239 (B), C260 (A&B), C183 (A)
FRONT SERVICE CPT C267 (7), C536 (4)
FRONT SERVICE CPT C323 (1), SH1, SH3
BEHIND DASH RH PANEL C452 (1), AA2 (85)

FRONT JCT. BOX - RELAYS & C522 (87)

FRONT SERVICE CPT C435 (2), C246 (3), C242 (3) & STEP LT
FRONT SERVICE CPT C102 (GRD), C103 (GRD), C104 (GRD), LO BUOY SW & STEP LT
FRONT SERVICE CPT HEADLAMP CON C243

FRONT JCT. BOX - CORNERING LTS RESISTORS
FRONT JCT. BOX - FOG LTS RESISTORS
LH CONSOLE

WIPER MOTOR C177 (1) & PULSE MOD. C176 (1) & RH MIRROR C269 (3)
DRIVER'S HTR FAN SPEED CTRL MOD. C175 (5)
FR. SERV. CPT-HORNS C101 (B), & WASHER PUMP
RADIATOR FAN CLUTCH SPEED 2 C549

FR. JCT. BOX - WIPER PULSE MOD. C248 (1)

LH CONSOLE SWITCH
FRONT SERVICE CPT - LH MIRROR C268 (3)

FR. SERV. CPT- TAG PRESSURE SW.

LH SWITCH PANEL

DASH LH PANEL
BEHIND DASH PANEL-AUDIBLE FLASHER C424 (1)

BEHIND DASH PANEL - B/U MONITOR C394 (2)
CLUSTER

FR. JCT BOX - GROUND JCT BLOCK - SHIFTER & DDR CONNECTOR

12V POWER OUTLET

0-0C-14
0-0C1-18
0-0C1-14
0-0C2-18
0-0C3-18
0-0C4-18
C3 15
0-0C4-14
→ FRONT JCT BOX 0C GROUND STUD

0-0L-14
0-0L1-14
0-0L2-12
0-0L3-14
C3 22
0-0L3-14
0-0L4-14
C3 16
0-0L4-14
0-0L5-14
C171 24
→ FRONT JCT BOX 0L GROUND STUD

0-0M-14
0-0M3-12
0-0M4-14
0-0M5-14
0-0M6-14
C3 14
0-0M6-14
0-0M7-14
C171 21
0-0M7-14
0-0M7-14
→ FRONT JCT BOX 0M GROUND STUD

0-0T-18
0-0T1-18
→ FRONT JCT BOX 0T GROUND STUD

0-0T2-18
C3 23
0-0T3-14
0-0T4-16

FRONT ROOF SECTION (FRS)

ROOF ACCES. CLEARANCE LTS C213(1), FAN DEFROST C365(1), DEST. SIGN. C364(1) C478(3), WARNING C362(1) C363(1) C373(1), WIPER MOT. C361(1) & DRIVER'S LTS

HEATING UPPER WINDSHIELD

0-0A-18
0-0A-18
0-0A-14
0-0A-14
0-0B-12
→ FRONT LH ROOF GROUND STUD

REAR JUNCTION BOX COMPARTMENT

REAR SECTION (RS)

RR JCT. BOX - RELAYS
RR JCT. BOX - C535(1), R84, R85, C475(1) & SOLDER WT SHIELD SH2, SH3, 20, 20T
RR JCT. BOX - VIMN(87), VIMR(87), VIM4(30) & SOLDER WT SHIELD SH1
RR JCT BOX - RETARDER FAN CLUTCH C508(3)
RR JCT BOX - A/C & HEAT JCT PANEL
RR JCT BOX - DOCKING LTS RESISTORS

SIDE WINDOWS EMERGENCY EXIT LTS C36(2)
LH HAT RACK & GEN C204(2), FLUOR. C208(3)
AISLE LTS C83(1)
LH READ LTS C207(1), PASS & HOST CHIME SW
RH HAT RACK & GEN C204(2), FLUOR. C202(3)
RH READ LTS C206(1), PASS & HOST CHIME SW
LAV. OCC. LT C143(3), GAL. LT C328(1) FLUOR C41(1)
WCL RELAY R94 (85) & R98 (85)

RR END LAMPS RH C119 (A)
RR END LAMPS LH C120 (A)
ENG CPT C126(B), C128(2), C129(2), C130(2), C131(2), C422(1)
ENG CPT C230(2), C127(B), C122(B), C124(A)
ENG CPT C125(B)
RR ROOF CLEARANCE LTS C87(2) & ENGINE CPT C287(A), C432(2) & C115(B)
RR ROOF CAMERA C87(1)
RR SIDE MARK C113, FLASH LH C114 & RH C121

LUG CPT RH SIDE MARKER C103, FLASHER C104

LUG CPT FUEL TANK C152(A), DAMPER C111(2), WATER VALVE C155(D), BYPASS VALVE C156(B), LH SIDE FLASHER C102, LH SIDE MARKER C103

0-0-18
0-0A-16
M
0-0B-10
0-0W-18
0-0R-16
C59 1
0-0K-16
0-0DR-14
0-16
C36 2
C37 2
C35 1
0-0D-14
C144 1
C37 7
2
0-0E-14
N
C38 2
3
0-0F-14
4
0-0G-14
15
0-0H-16
0-0WC-16
O
0-0C-10

0-0RH-16
0-0LH-16
0-0X-12
0-0P-14
0-0R-14
0-0X-12
0-0N-14
0-0K-14
0-0Y-12
0-0J-16
0-0DF-14
0-0Y-12
0-0B-14
0-0Z-12
0-0A-14
0-0Z-12
→ REAR JCT BOX GROUND STUD

BATTERY COMPARTMENT (BC)

BAT CPT - RELAYS R2, R3, R54, R55

ENGINE-SOLDER SHIELD SH1, SH2, SH3 & C326(B)
VOLTAGE REGULATOR
CONDENSER FAN SPEED. RLY R39, R40, R41, EATON TR.
CONDENSER FAN RELAY R41 (87)
CONDENSER FAN LH
GALLEY INVERTER JUNCTION BLOCK
GALLEY COFFEMAKER
GALLEY R47 R48 R79, C403 LAMP, SW LT, HEAT CONT.
WHEEL CHAIR LIFT RICON

0-0-16
0-0A-16
C397 1
0-0A-16
0-0AA-12
0-0C-16
0-0D-10
0-0D-10
0-0-6
0-0-10
0-0-16
0-0W-6
→ BATTERY COMPARTMENT GROUND STUD

BATTERY GROUND

RR JCT BOX (RBG)

DDEC ACCES. BATTERY GROUND SEE PAGE 5.1
WORLD TRANS. ACCES. BAT. GRD SEE PAGE 6.1

0-953-18
0-143W-12
P
0-00-12
0-00-12
→ FROM BATTERY COMPARTMENT ELECTRONIC GROUND JCT BLOCK SEE PAGE 1.1

FR JCT BOX (FBG)

TELL TALE LIGHT MODULE SEE PAGE 28.1
CLUSTER SEE P.7.1

C74 36
0-00A-18
0-00-16

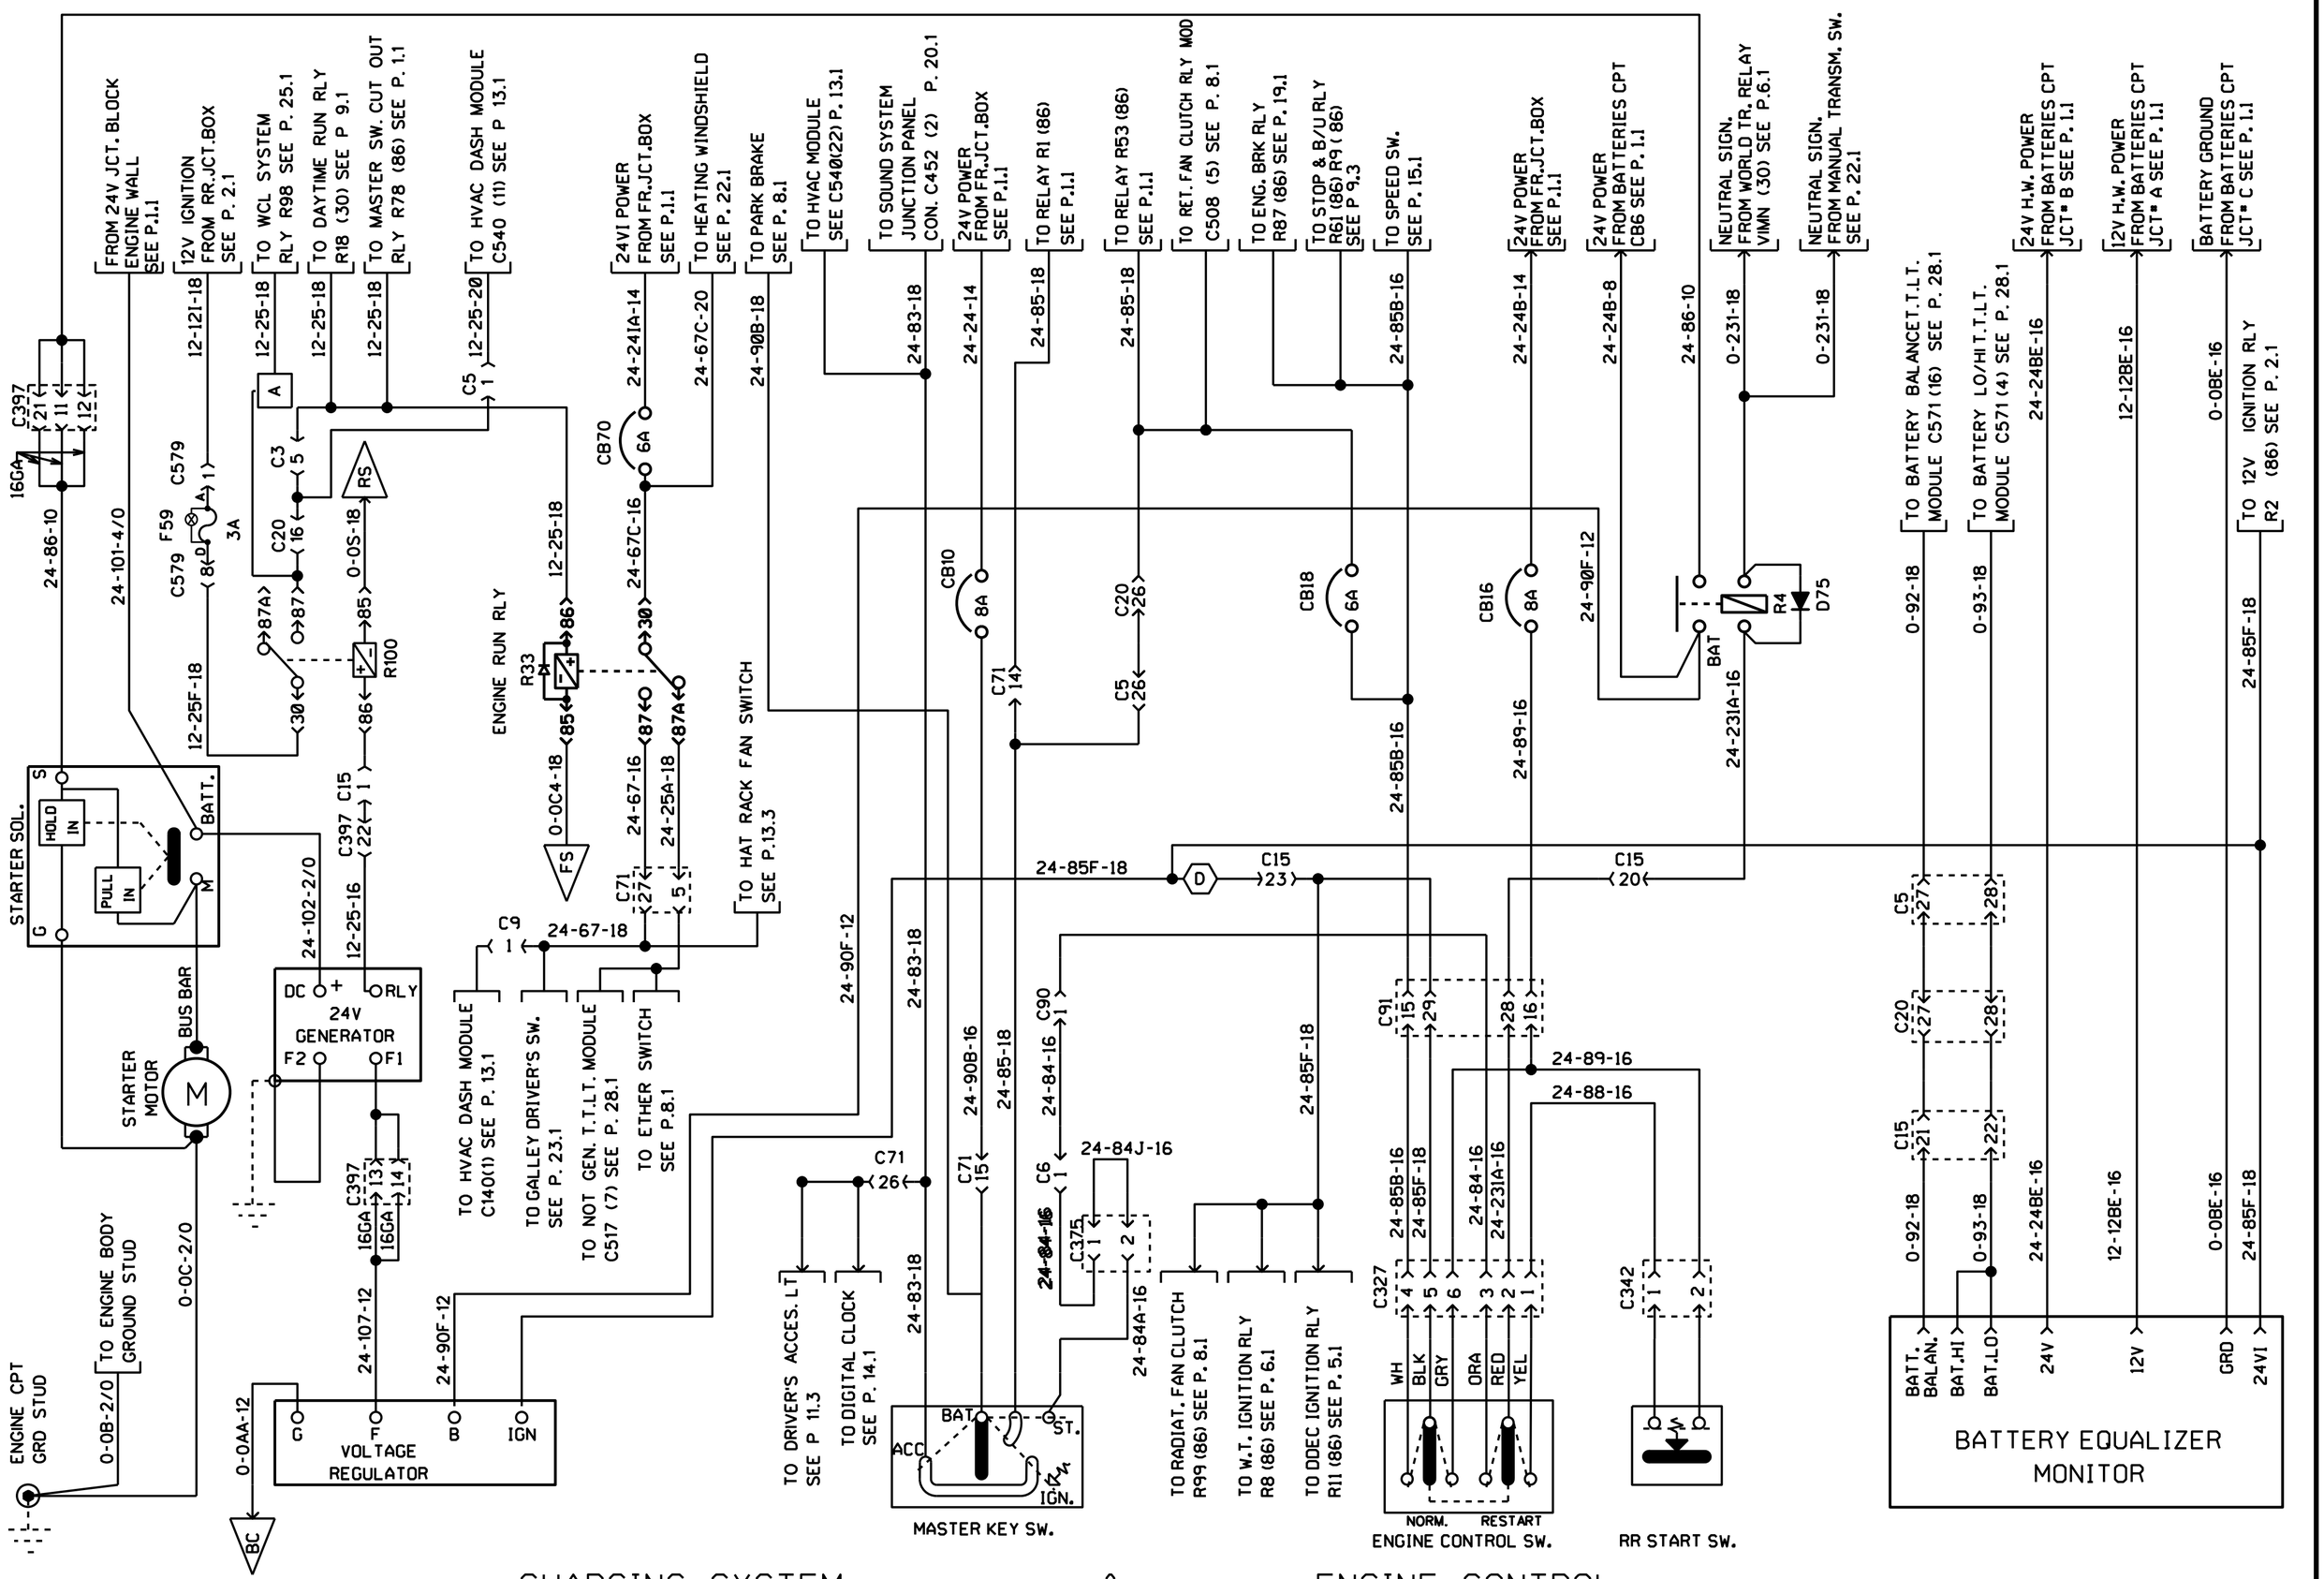

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 4.1	REVISION 00

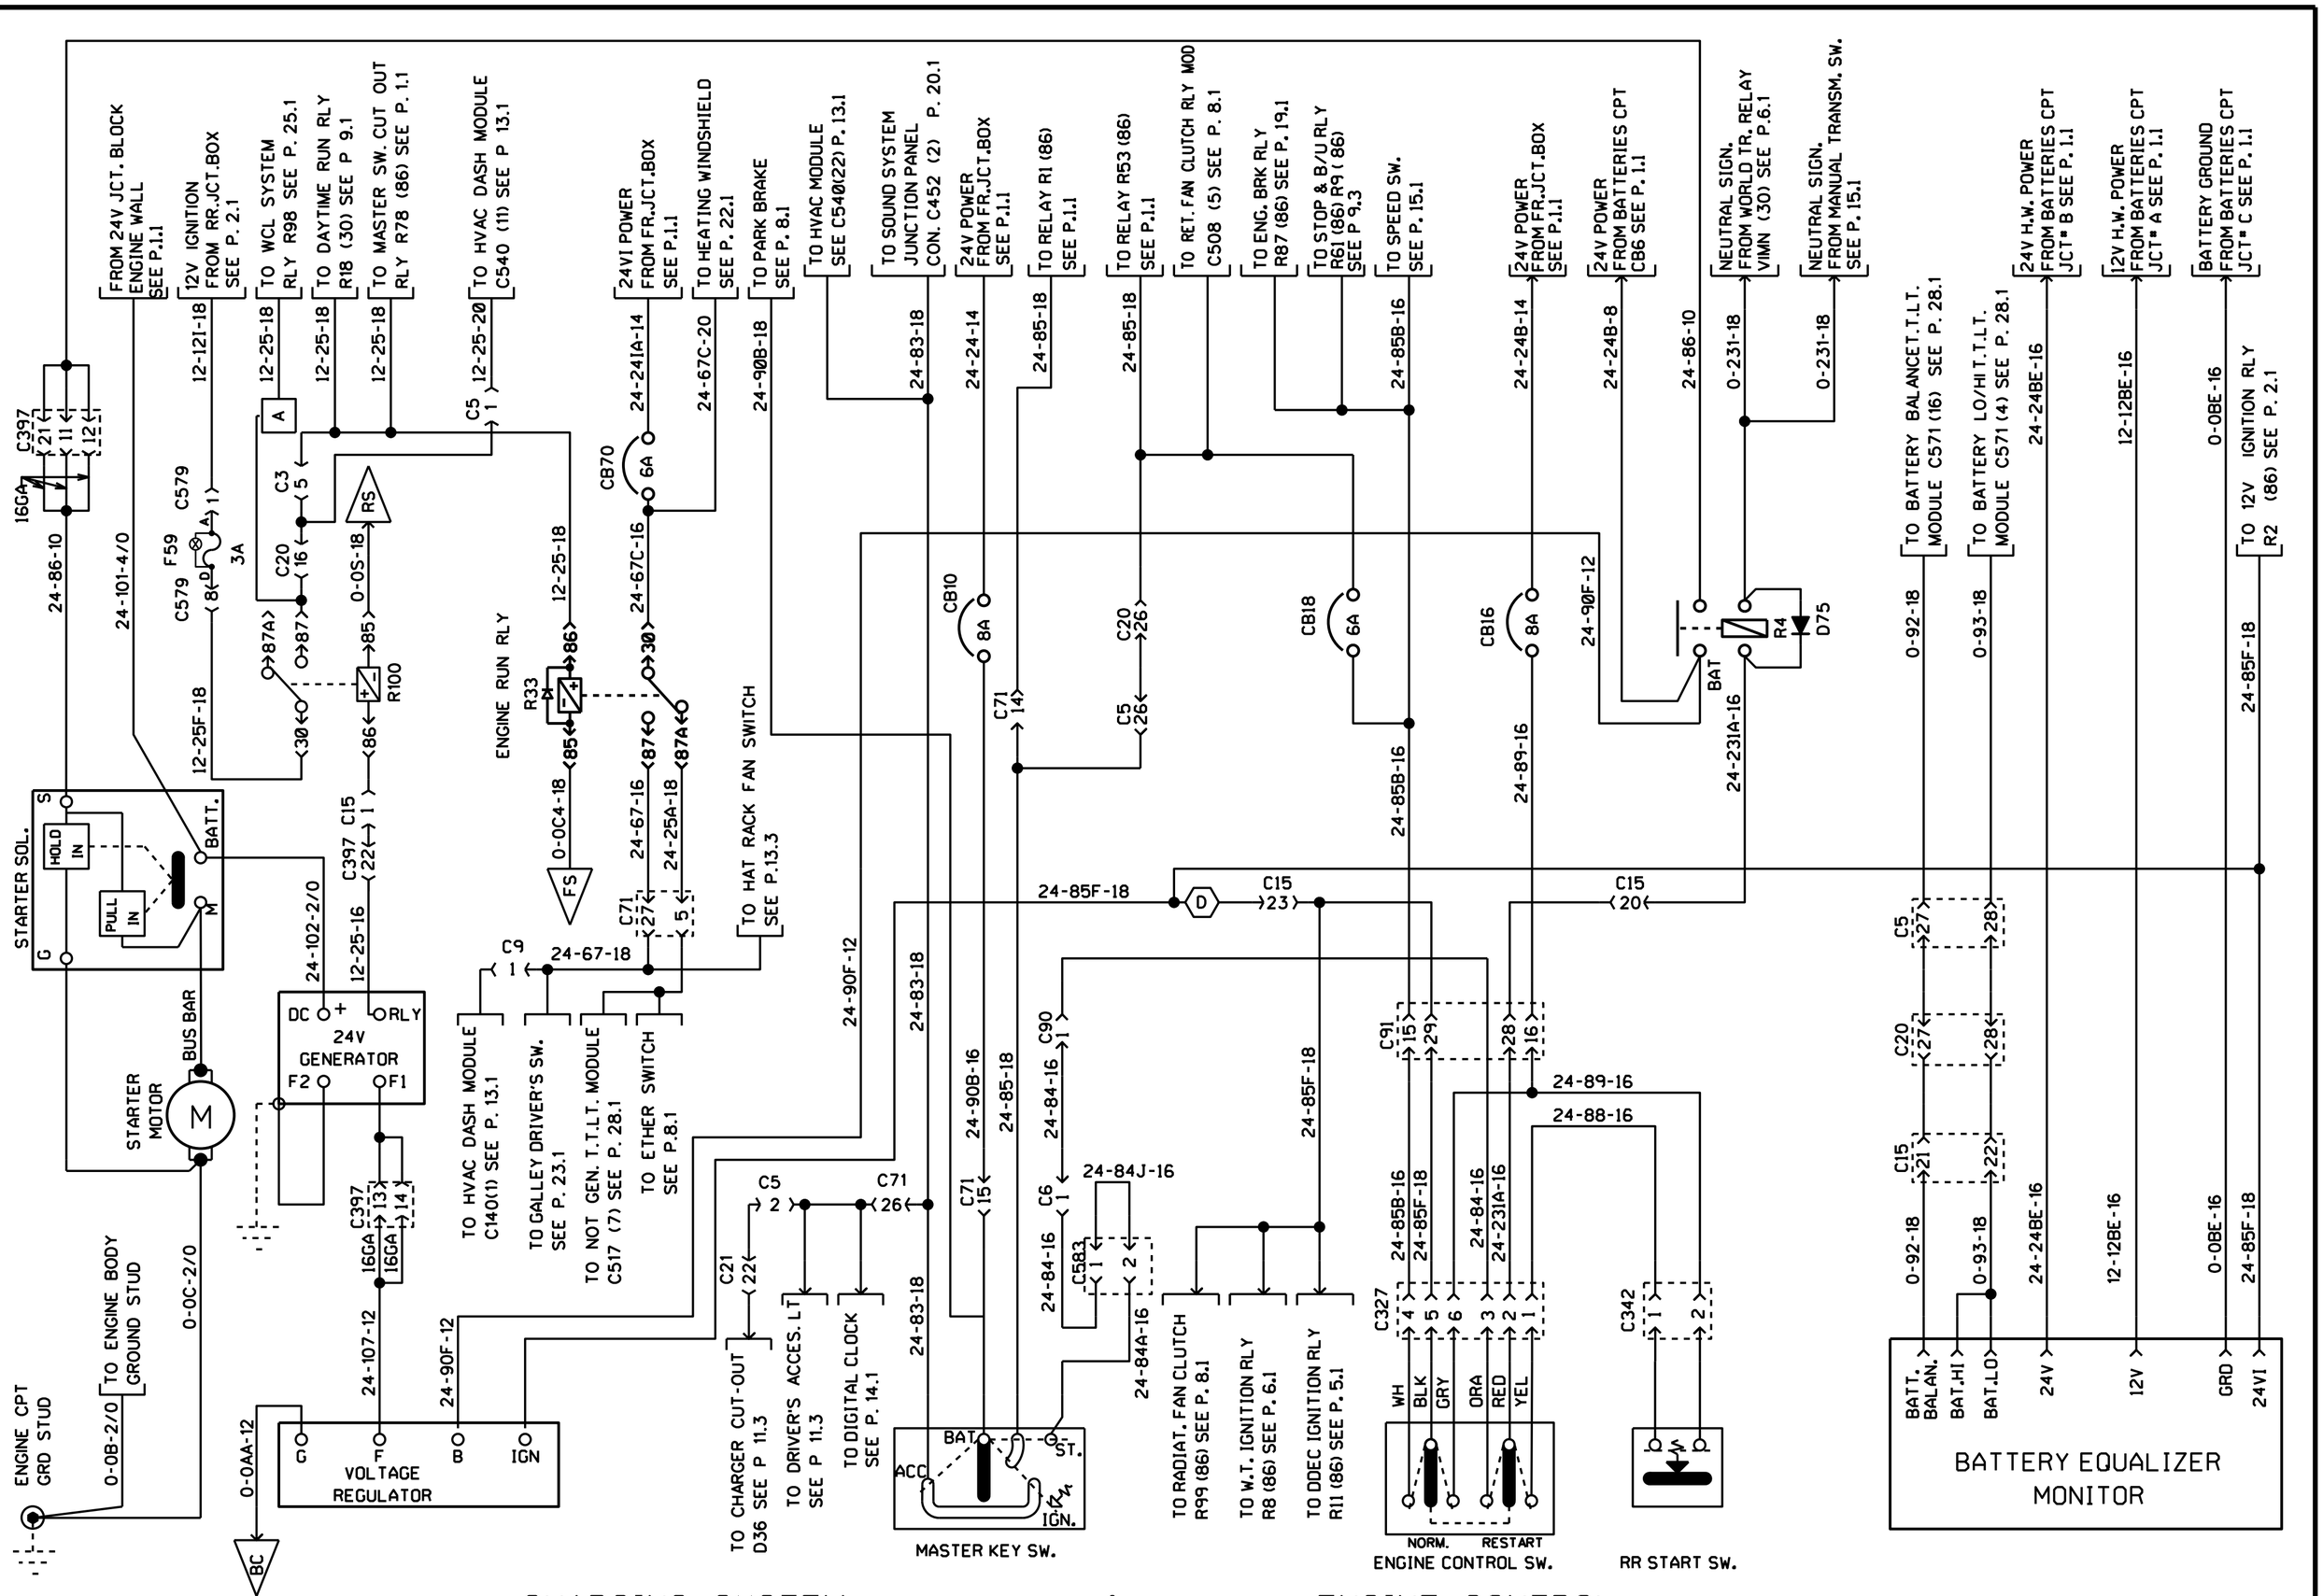
CHARGING SYSTEM & ENGINE CONTROL
STARTER SOL.
STARTER MOTOR
BUS BAR
24V GENERATOR
VOLTAGE REGULATOR
MASTER KEY SW.
ENGINE CONTROL SW.
RR START SW.
BATTERY EQUALIZER MONITOR
ENGINE RUN RLY
TO HVAC DASH MODULE C540 (11) SEE P 13.1
TO HVAC MODULE SEE C540(22) P. 13.1
TO SOUND SYSTEM JUNCTION PANEL CON. C452 (2) P. 20.1
TO RELAY R1 (86) SEE P.1.1
TO RELAY R53 (86) SEE P.1.1
TO RET. FAN CLUTCH RLY MOD C508 (5) SEE P. 8.1
TO ENG. BRK RLY R87 (86) SEE P. 19.1
TO STOP & B/U RLY R61 (86) R9 (86) SEE P 9,3
TO SPEED SW. SEE P. 15.1
TO PARK BRAKE SEE P. 8.1
TO HEATING WINDSHIELD SEE P. 22.1
TO WCL SYSTEM RLY R98 SEE P. 25.1
TO DAYTIME RUN RLY R18 (30) SEE P 9.1
TO MASTER SW. CUT OUT RLY R78 (86) SEE P. 1.1
TO HAT RACK FAN SWITCH SEE P.13.3
TO ETHER SWITCH SEE P.8.1
TO NOT GEN. T.T.L.T. MODULE C517 (7) SEE P. 28.1
TO GALLEY DRIVER'S SW. SEE P. 23.1
TO CHARGER CUT-OUT D36 SEE P 11.3
TO DRIVER'S ACCES. LT SEE P 11.3
TO DIGITAL CLOCK SEE P. 14.1
TO RADIAT. FAN CLUTCH R99 (86) SEE P. 8.1
TO W.T. IGNITION RLY R8 (86) SEE P. 6.1
TO DDEC IGNITION RLY R11 (86) SEE P. 5.1
FROM 24V JCT. BLOCK ENGINE WALL SEE P.1.1
12V IGNITION FROM RR.JCT.BOX SEE P. 2.1
24VI POWER FROM FR.JCT.BOX SEE P.1.1
24V POWER FROM FR.JCT.BOX SEE P.1.1
24V POWER FROM BATTERIES CPT CB6 SEE P. 1.1
NEUTRAL SIGN. FROM WORLD TR. RELAY VMN (30) SEE P.6.1
NEUTRAL SIGN. FROM MANUAL TRANSM. SW. SEE P. 15.1
24V H.W. POWER FROM BATTERIES CPT JCT° B SEE P. 1.1
12V H.W. POWER FROM BATTERIES CPT JCT° A SEE P. 1.1
BATTERY GROUND FROM BATTERIES CPT JCT° C SEE P. 1.1
TO BATTERY BALANCET.T.L.T. MODULE C571 (16) SEE P. 28.1
TO BATTERY LO/HI T.T.L.T. MODULE C571 (4) SEE P. 28.1
TO 12V IGNITION RLY R2 (86) SEE P. 2.1
TO ENGINE BODY GROUND STUD
ENGINE CPT GRD STUD
D75
R100
R33
CB70
CB10
CB18
CB16
CB17
CB19
CB20
CB21
CB22
CB23
CB24
CB25
CB26
CB27
CB28
CB29
CB30
CB31
CB32
CB33
CB34
CB35
CB36
CB37
CB38
CB39
CB40
CB41
CB42
CB43
CB44
CB45
CB46
CB47
CB48
CB49
CB50
CB51
CB52
CB53
CB54
CB55
CB56
CB57
CB58
CB59
CB60
CB61
CB62
CB63
CB64
CB65
CB66
CB67
CB68
CB69
CB70
CB71
CB72
CB73
CB74
CB75
CB76
CB77
CB78
CB79
CB80
CB81
CB82
CB83
CB84
CB85
CB86
CB87
CB88
CB89
CB90
CB91
CB92
CB93
CB94
CB95
CB96
CB97
CB98
CB99
CB100

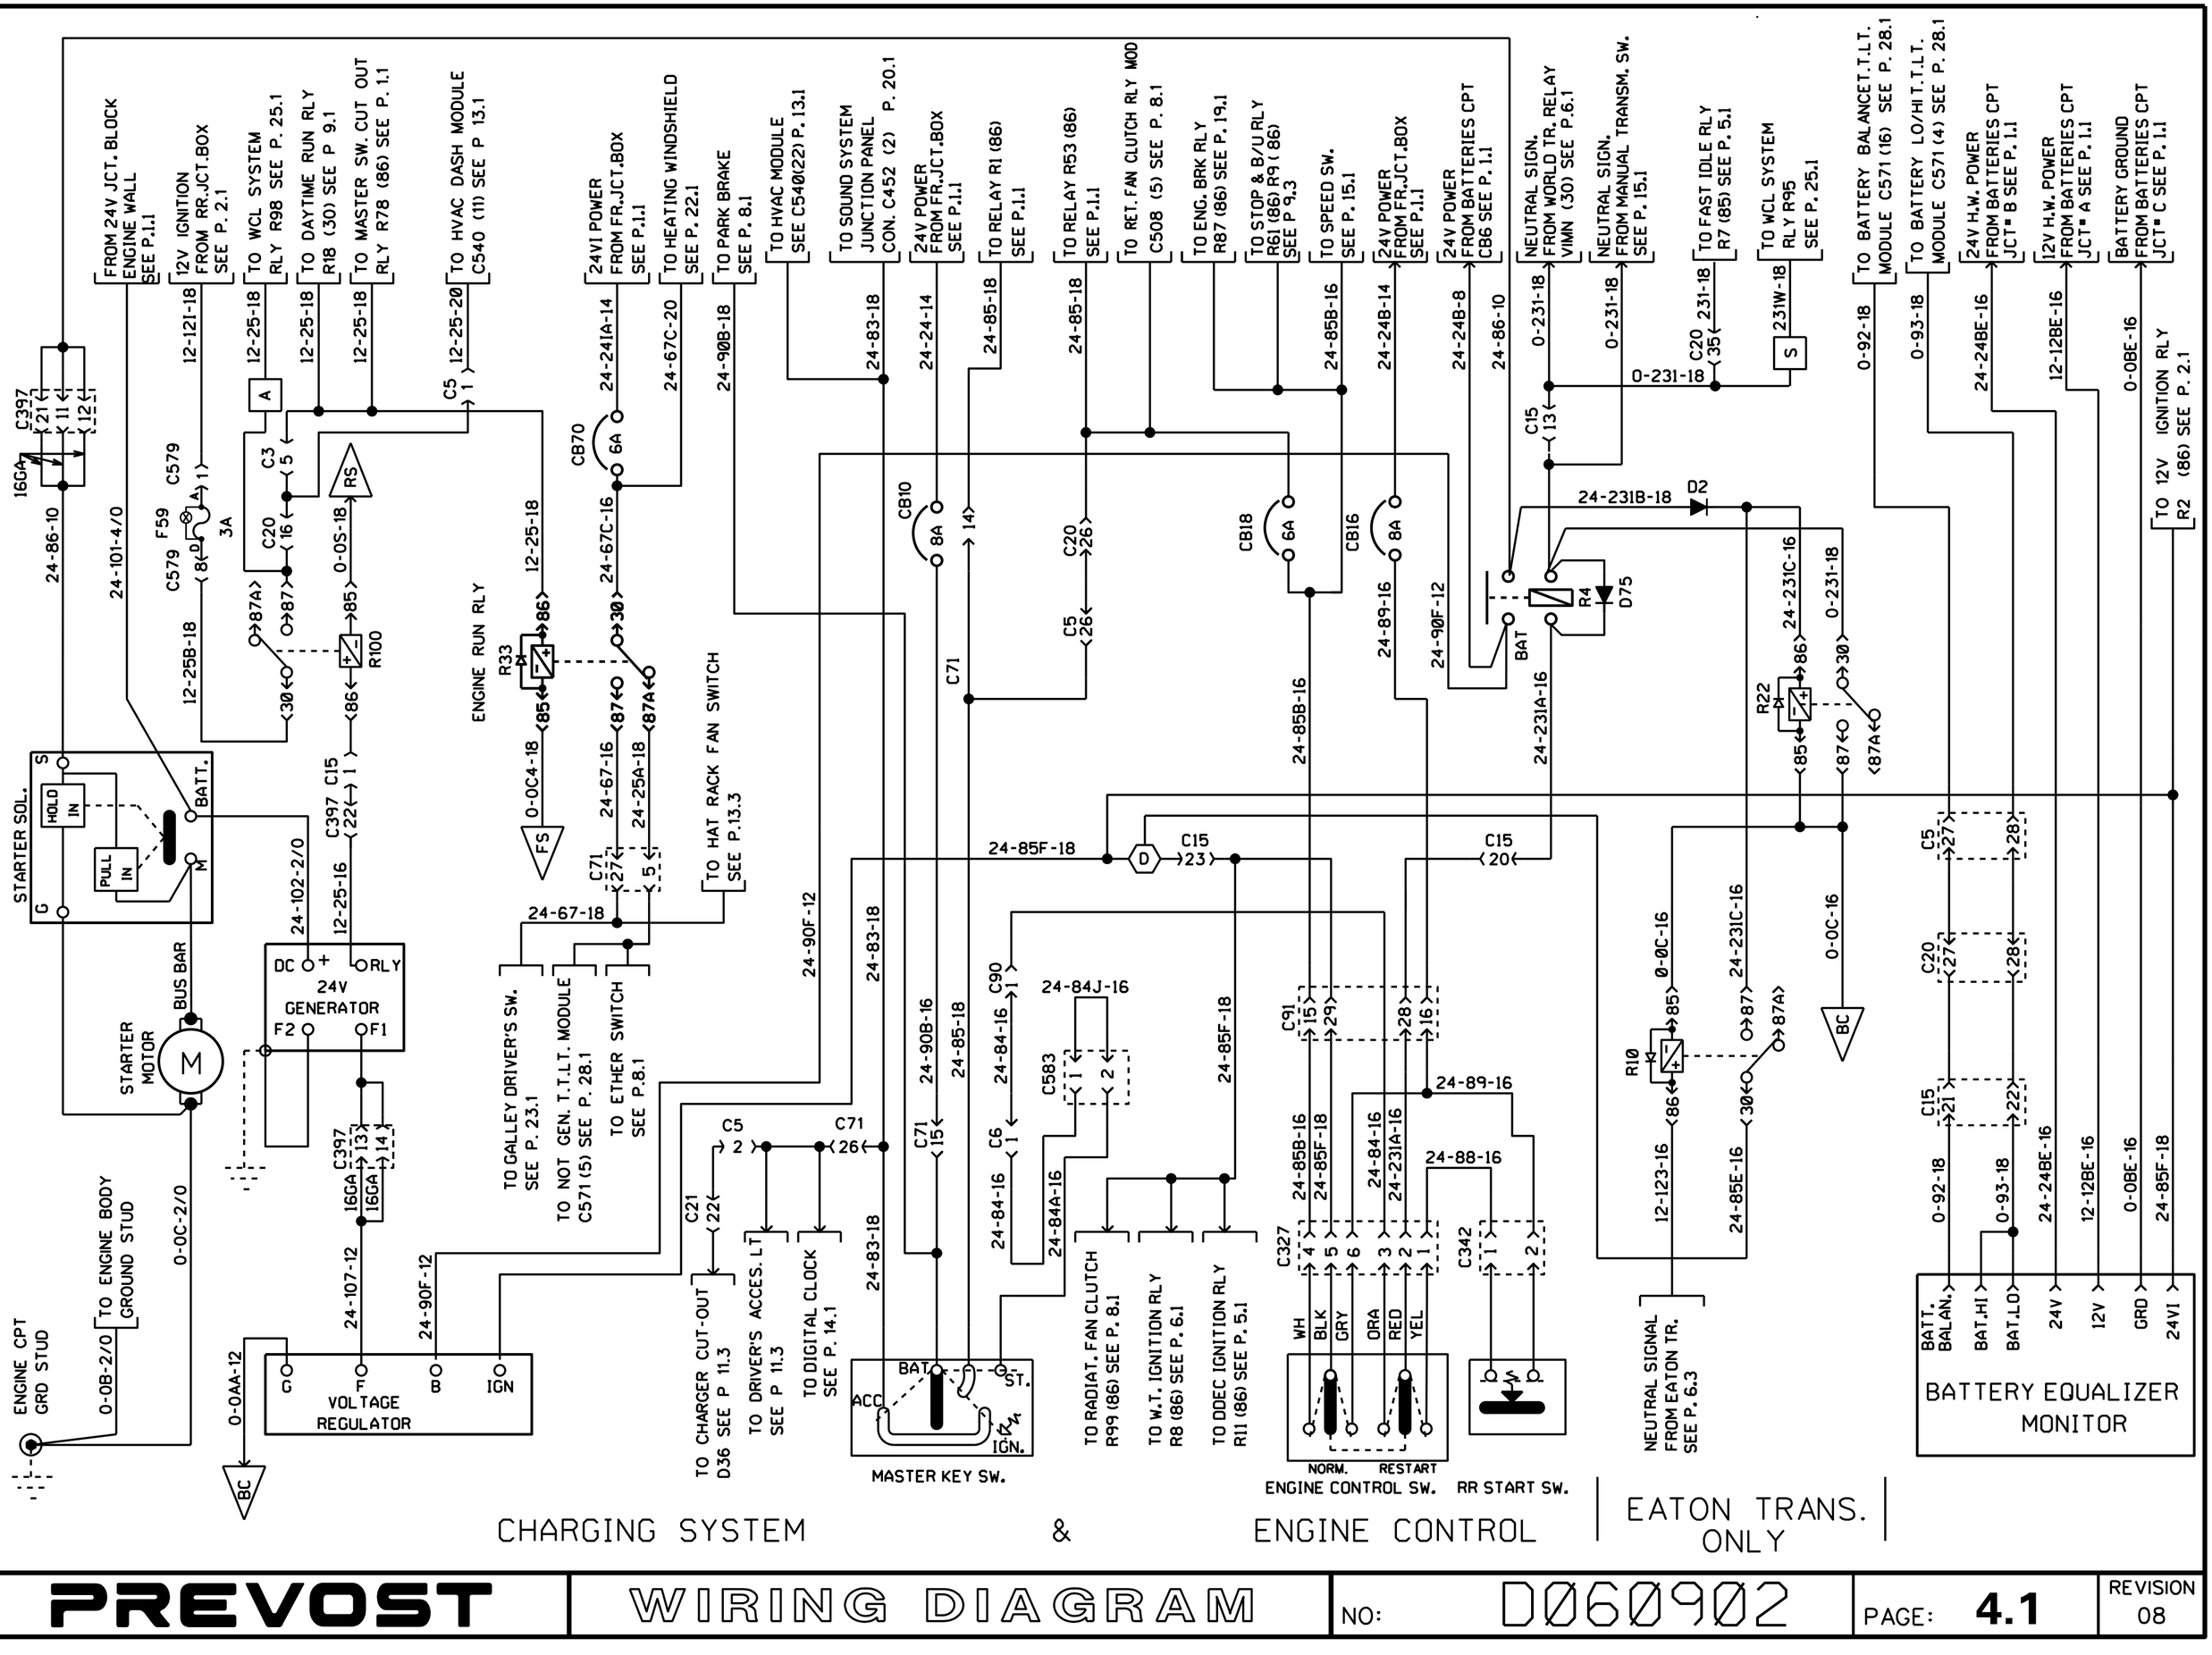

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 4.1	REVISION 08

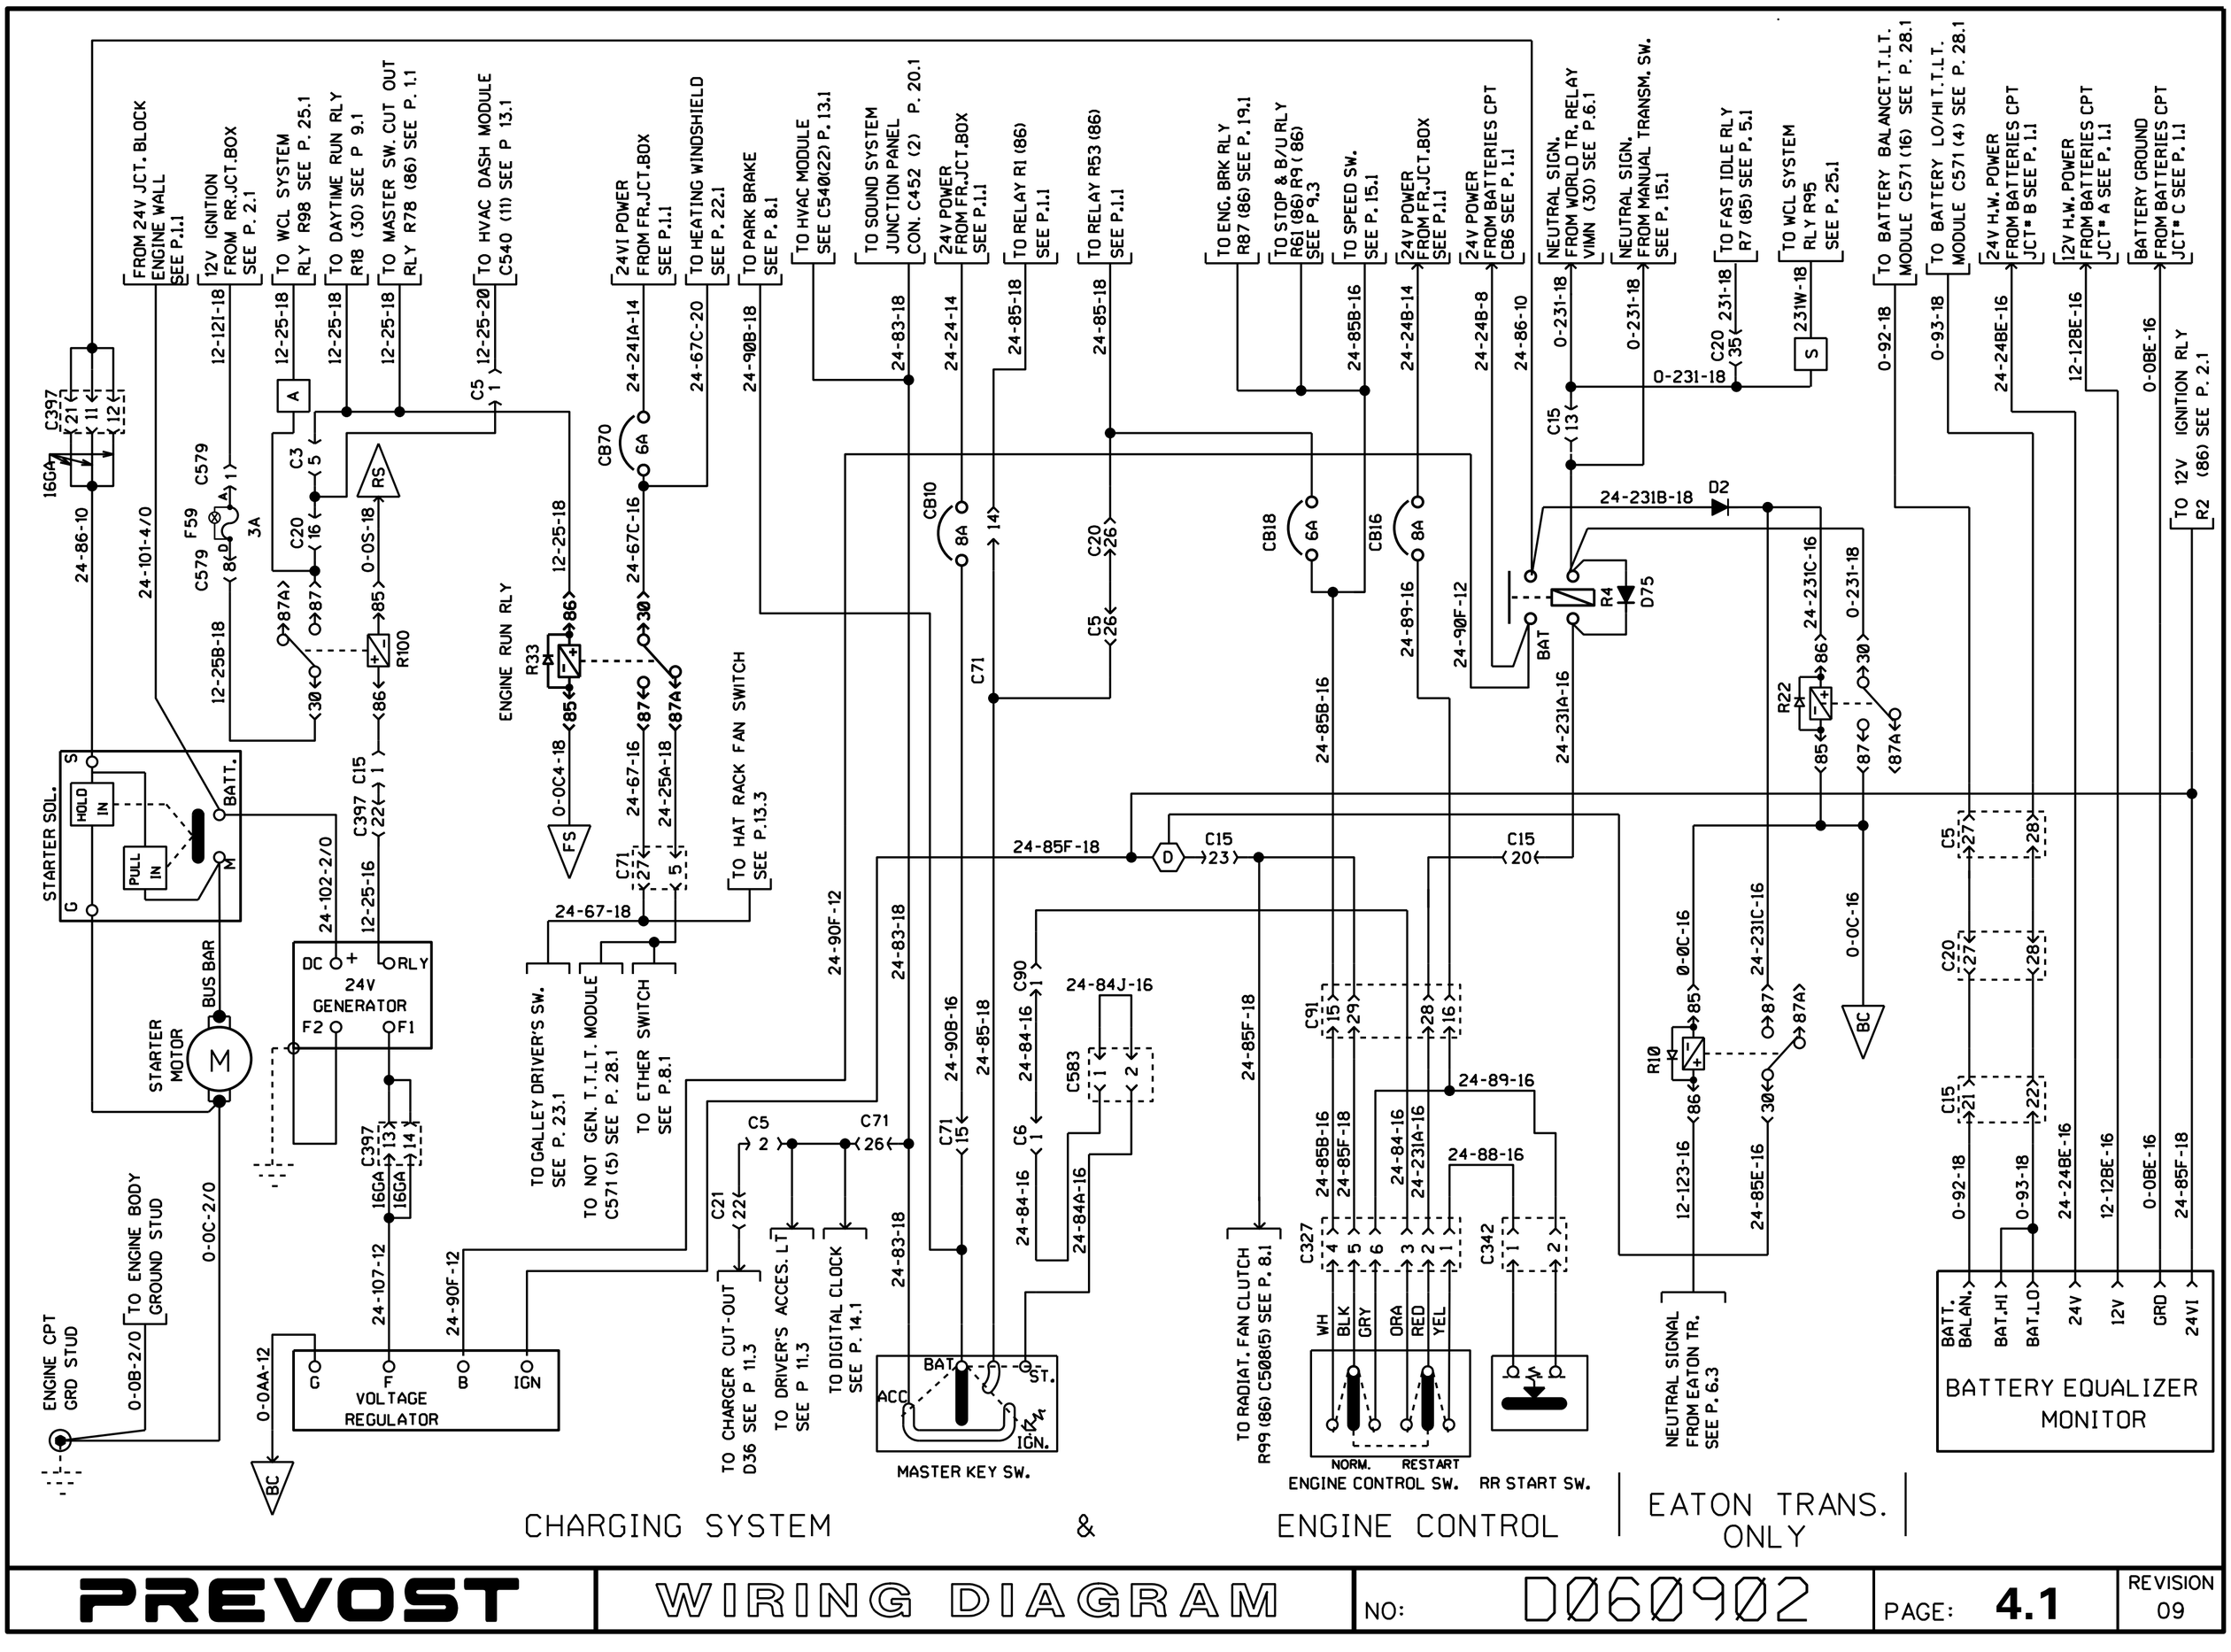

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 4.1	REVISION 09

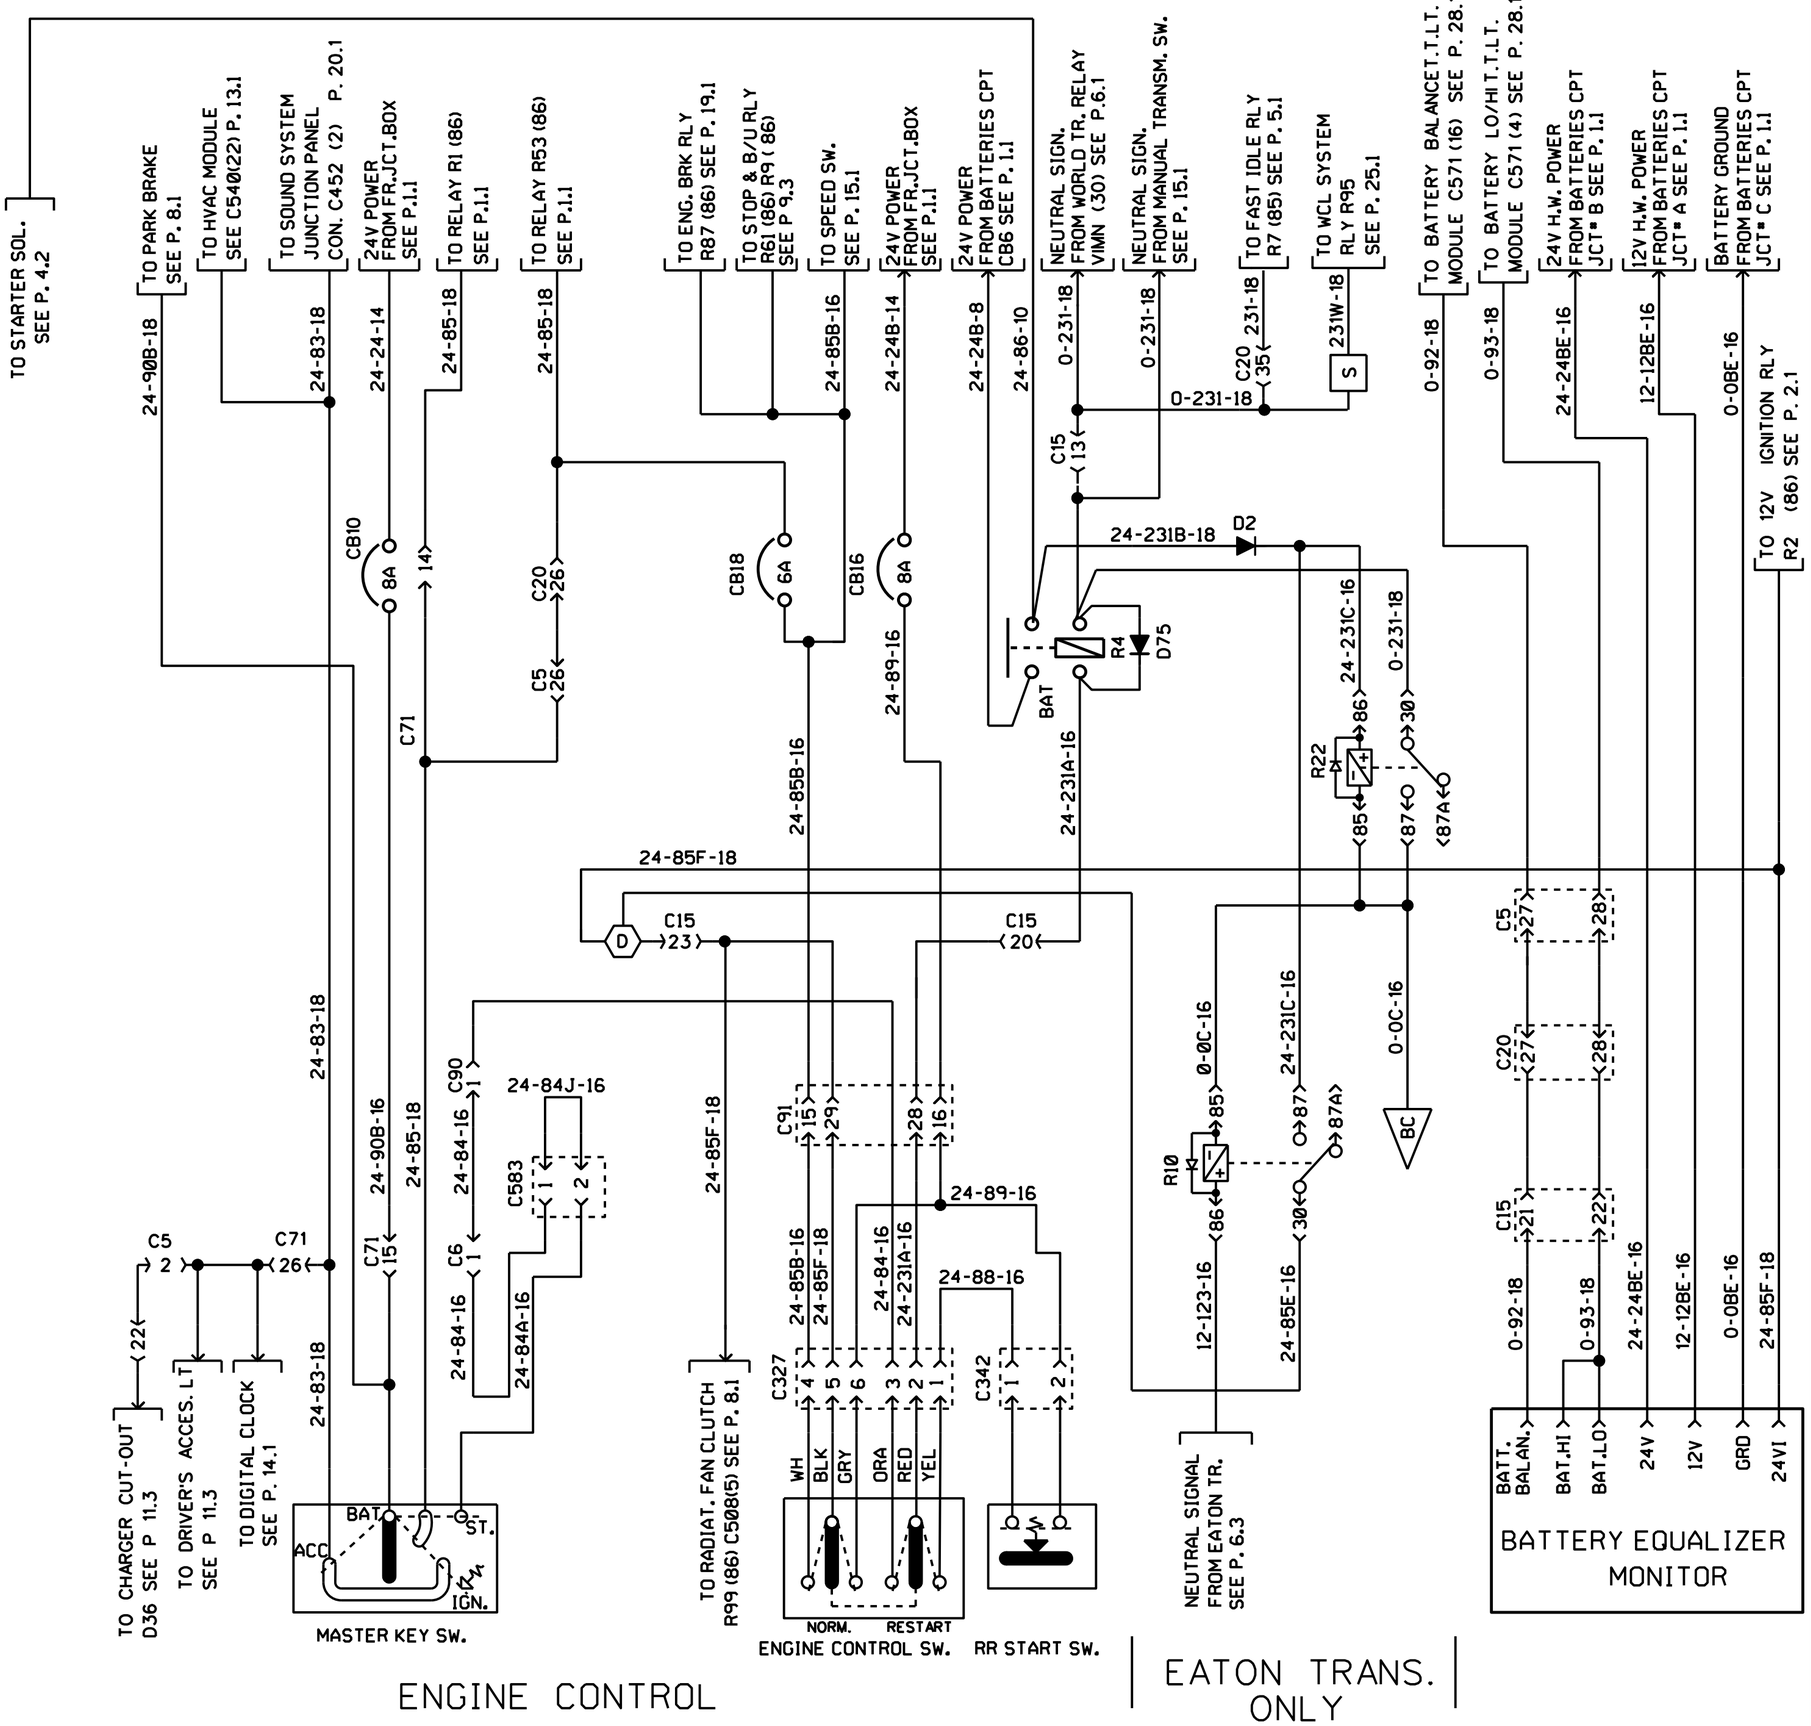
TO STARTER SOL. SEE P. 4.2
24-90B-18
TO PARK BRAKE SEE P. 8.1
TO HVAC MODULE SEE C540(22) P. 13.1
TO SOUND SYSTEM JUNCTION PANEL CON. C452 (2) P. 20.1
24-83-18
24V POWER FROM FR.JCT.BOX SEE P.1.1
24-24-14
TO RELAY R1 (86) SEE P.1.1
24-85-18
TO RELAY R53 (86) SEE P.1.1
24-85-18
TO ENG. BRK RLY R87 (86) SEE P. 19.1
TO STOP & B/U RLY R61 (86) R9 (86) SEE P 9.3
TO SPEED SW. SEE P. 15.1
24-85B-16
24V POWER FROM FR.JCT.BOX SEE P.1.1
24-24B-14
24V POWER FROM BATTERIES CPT CB6 SEE P. 1.1
24-24B-8
24-86-10
NEUTRAL SIGN. FROM WORLD TR. RELAY VIMN (30) SEE P.6.1
0-231-18
NEUTRAL SIGN. FROM MANUAL TRANSM. SW. SEE P. 15.1
0-231-18
TO FAST IDLE RLY R7 (85) SEE P. 5.1
C20 231-18 (35)
TO WCL SYSTEM RLY R95 SEE P. 25.1
231W-18
S
TO BATTERY BALANCET.T.LT. MODULE C571 (16) SEE P. 28.1
0-92-18
TO BATTERY LO/HI T.T.LT. MODULE C571 (4) SEE P. 28.1
0-93-18
24V H.W. POWER FROM BATTERIES CPT JCT* B SEE P. 1.1
24-24BE-16
12V H.W. POWER FROM BATTERIES CPT JCT* A SEE P. 1.1
12-12BE-16
BATTERY GROUND FROM BATTERIES CPT JCT* C SEE P. 1.1
0-0BE-16
TO 12V IGNITION RLY R2 (86) SEE P. 2.1
CB10 8A
CB18 6A
CB16 8A
C71
14
C20 26
C5 26
24-85B-16
24-89-16
C15 13
24-231B-18
D2
R4
D75
BAT
24-231A-16
24-231C-16
R22
86
85
87
87A
30
0-231-18
24-85F-18
C15 23
C15 20
D
24-83-18
C71 15
24-90B-16
24-85-18
C90 1
24-84-16
C6 1
24-84J-16
C583 1 2
24-84A-16
C5 2
C71 26
22
TO CHARGER CUT-OUT D36 SEE P 11.3
TO DRIVER'S ACCES. LT SEE P 11.3
TO DIGITAL CLOCK SEE P. 14.1
BAT
ST.
ACC
IGN.
MASTER KEY SW.
TO RADIAT. FAN CLUTCH R99 (86) C508(5) SEE P. 8.1
C91 15 29 28 16
24-85B-16
24-85F-18
24-84-16
24-231A-16
24-89-16
24-88-16
C327 4 5 6 3 2 1
C342 1 2
WH BLK GRY ORA RED YEL
NORM. RESTART
ENGINE CONTROL SW.
RR START SW.
R10
0-0C-16
24-231C-16
12-123-16
24-85E-16
BC
NEUTRAL SIGNAL FROM EATON TR. SEE P. 6.3
C5 27 28
C20 27 28
C15 21 22
0-92-18
0-93-18
24-24BE-16
12-12BE-16
0-0BE-16
24-85F-18
BATT. BALAN.
BAT.HI
BAT.LO
24V
12V
GRD
24VI
BATTERY EQUALIZER MONITOR
ENGINE CONTROL
EATON TRANS. ONLY

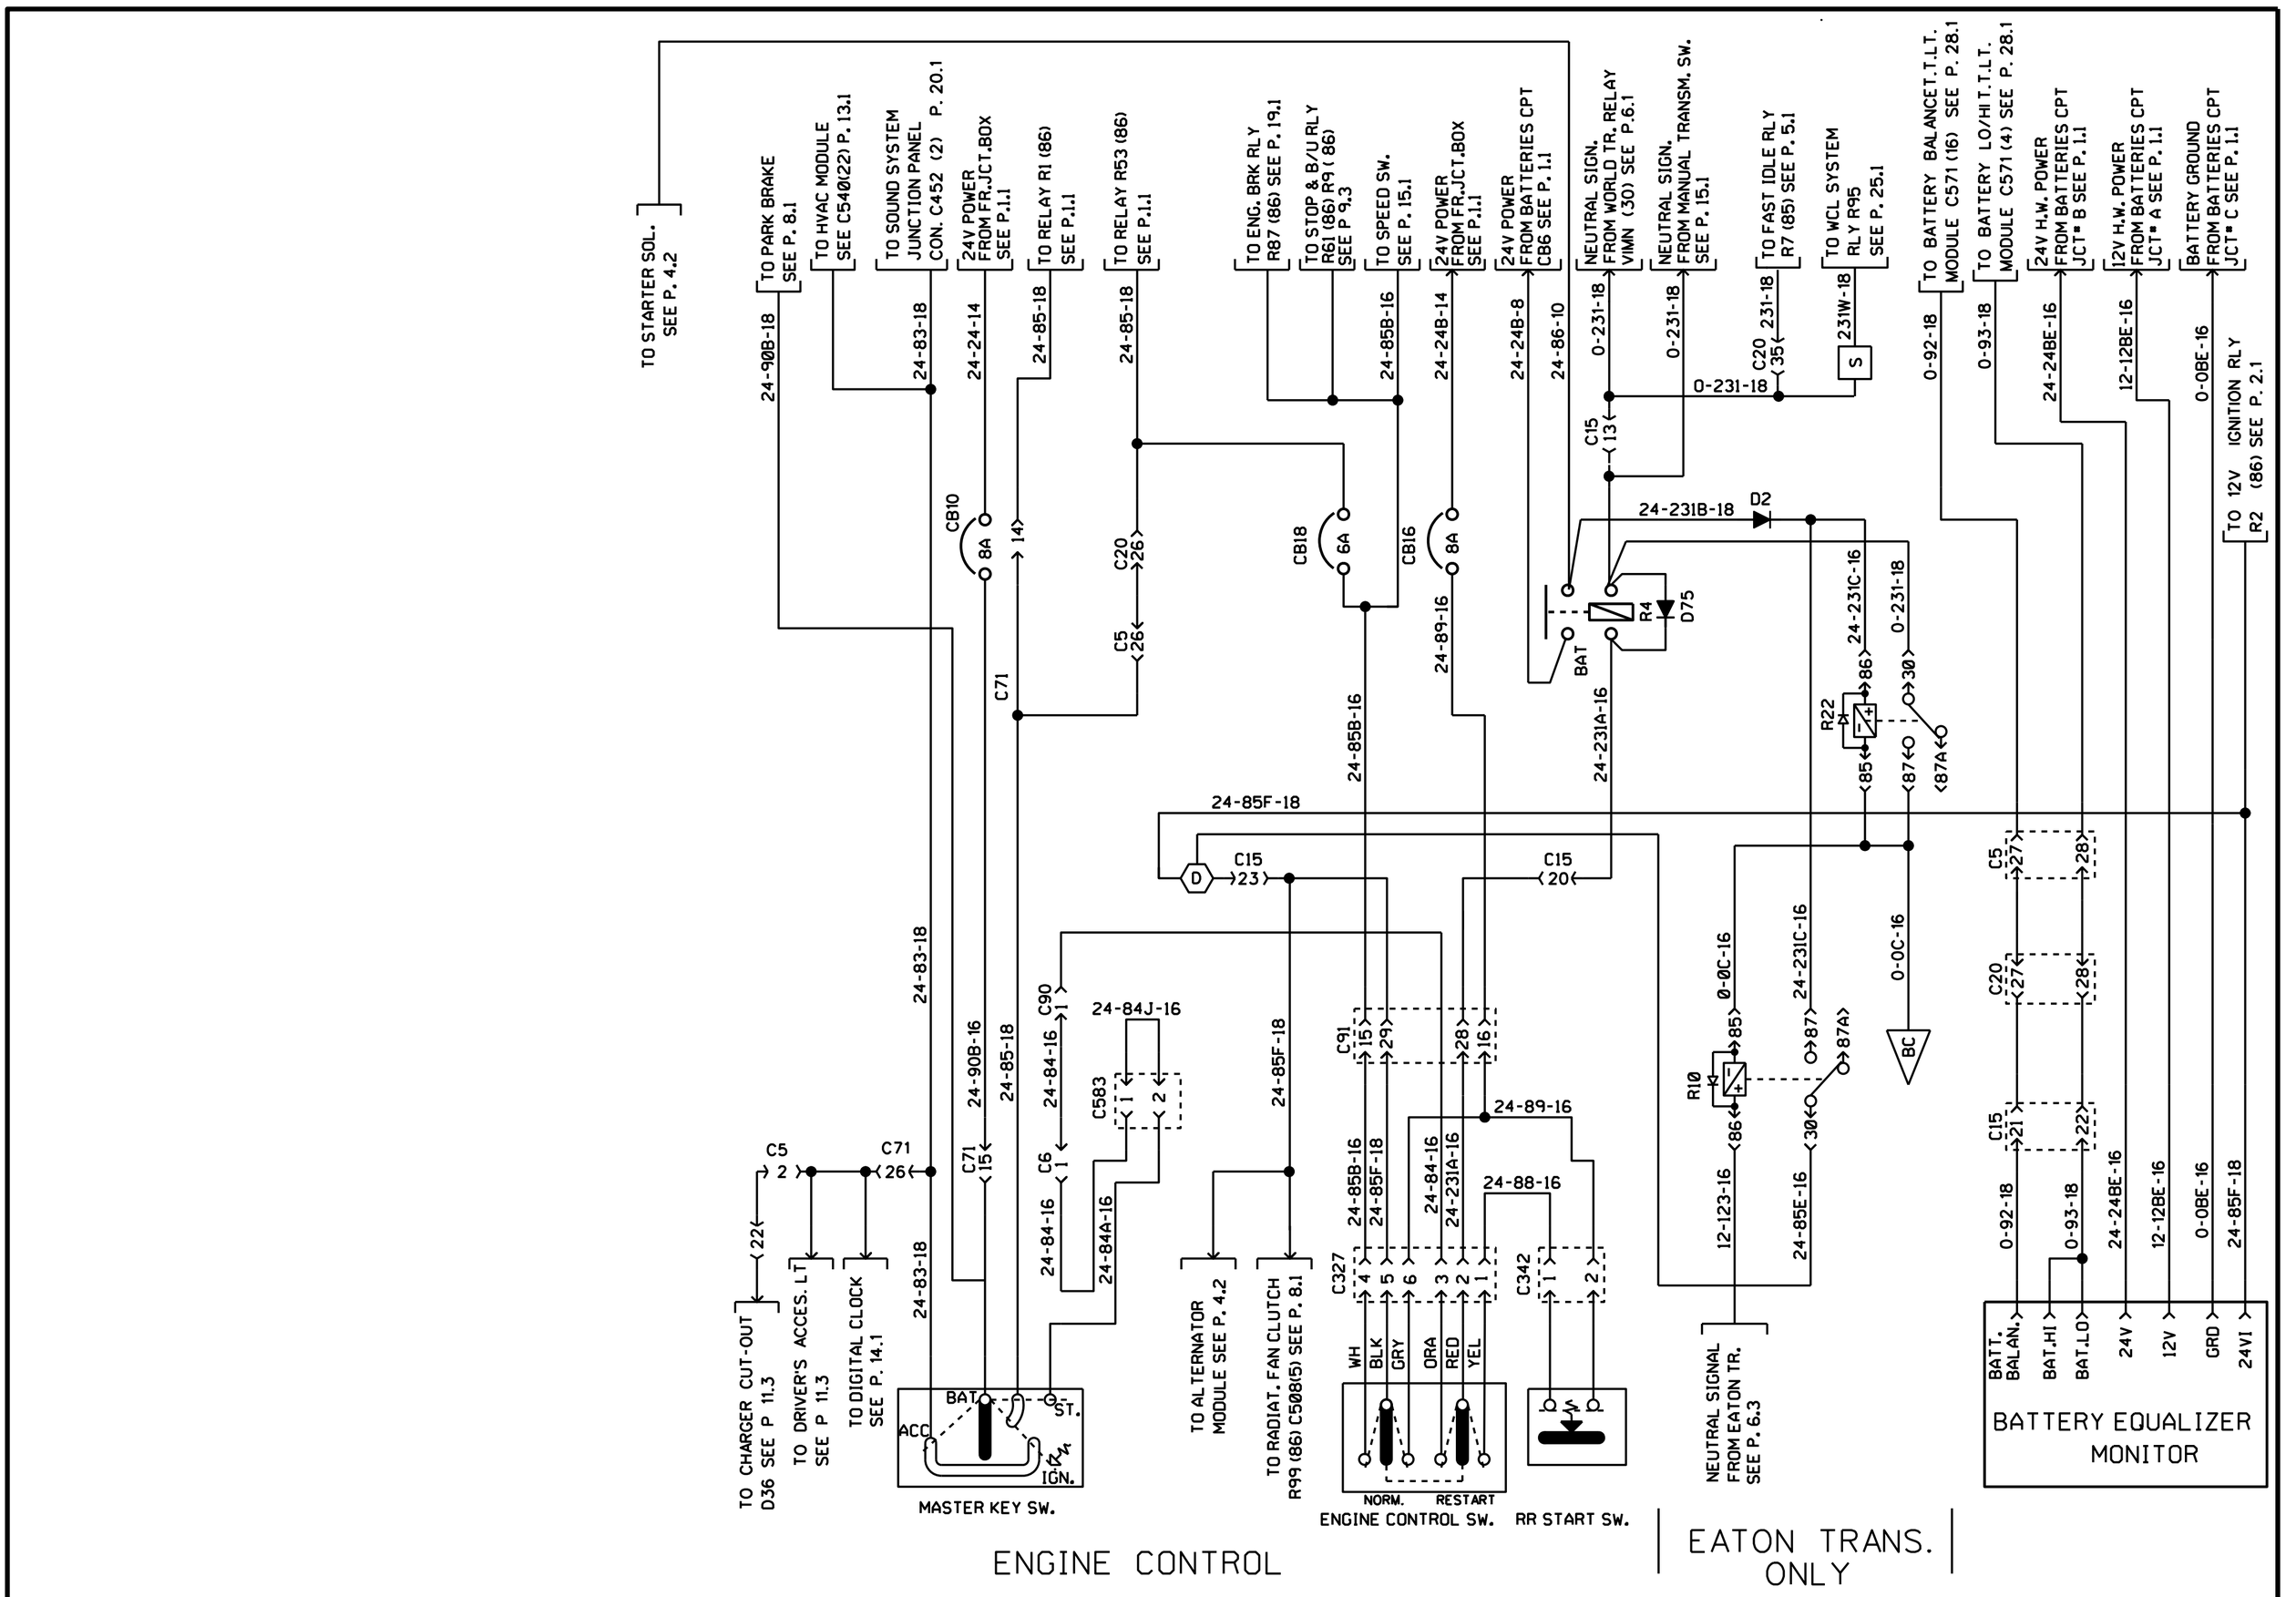
TO STARTER SOL. SEE P. 4.2
24-90B-18
TO PARK BRAKE SEE P. 8.1
TO HVAC MODULE SEE C540(22) P. 13.1
TO SOUND SYSTEM JUNCTION PANEL CON. C452 (2) P. 20.1
24-83-18
24-24-14
24V POWER FROM FR.JCT.BOX SEE P.1.1
TO RELAY R1 (86) SEE P.1.1
24-85-18
TO RELAY R53 (86) SEE P.1.1
TO ENG. BRK RLY R87 (86) SEE P. 19.1
TO STOP & B/U RLY R61 (86) R9 (86) SEE P 9.3
TO SPEED SW. SEE P. 15.1
24-85B-16
24V POWER FROM FR.JCT.BOX SEE P.1.1
24-24B-14
24V POWER FROM BATTERIES CPT CB6 SEE P. 1.1
24-24B-8
24-86-10
NEUTRAL SIGN. FROM WORLD TR. RELAY VIMN (30) SEE P.6.1
0-231-18
NEUTRAL SIGN. FROM MANUAL TRANSM. SW. SEE P. 15.1
TO FAST IDLE RLY R7 (85) SEE P. 5.1
TO WCL SYSTEM RLY R95 SEE P. 25.1
231W-18
TO BATTERY BALANCET.T.LT. MODULE C571 (16) SEE P. 28.1
0-92-18
TO BATTERY LO/HIT.T.LT. MODULE C571 (4) SEE P. 28.1
0-93-18
24V H.W. POWER FROM BATTERIES CPT JCT= B SEE P. 1.1
24-24BE-16
12V H.W. POWER FROM BATTERIES CPT JCT= A SEE P. 1.1
12-12BE-16
BATTERY GROUND FROM BATTERIES CPT JCT= C SEE P. 1.1
0-0BE-16
TO 12V IGNITION RLY R2 (86) SEE P. 2.1
CB10 8A
CB18 6A
CB16 8A
C71
C5 26
C20 26
C15 13
C20 35
24-231B-18
D2
R4
D75
BAT
24-231A-16
R22
24-231C-16
0-231-18
86
85
87
87A
30
24-85F-18
C15 D 23
C15 20
C5 27
28
C20 27
28
C15 21
22
C90 1
24-84J-16
C583 1
2
24-84-16
24-84A-16
24-908-16
C6 1
C71 15
C91 15
29
28
16
24-89-16
24-88-16
C327 4
5
6
3
2
1
C342 1
2
24-85B-16
24-85F-18
24-84-16
24-231A-16
WH
BLK
GRY
ORA
RED
YEL
C5 2
C71 26
22
TO CHARGER CUT-OUT D36 SEE P 11.3
TO DRIVER'S ACCES. LT SEE P 11.3
TO DIGITAL CLOCK SEE P. 14.1
BAT
ST.
ACC
IGN.
MASTER KEY SW.
TO ALTERNATOR MODULE SEE P. 4.2
TO RADIAT. FAN CLUTCH R99 (86) C508(5) SEE P. 8.1
NORM.
RESTART
ENGINE CONTROL SW.
RR START SW.
R10
0-0C-16
12-123-16
24-85E-16
NEUTRAL SIGNAL FROM EATON TR. SEE P. 6.3
BC
0-OC-16
24-231C-16
BATT. BALAN.
BAT.HI
BAT.LO
24V
12V
GRD
24VI
BATTERY EQUALIZER MONITOR
ENGINE CONTROL
EATON TRANS. ONLY

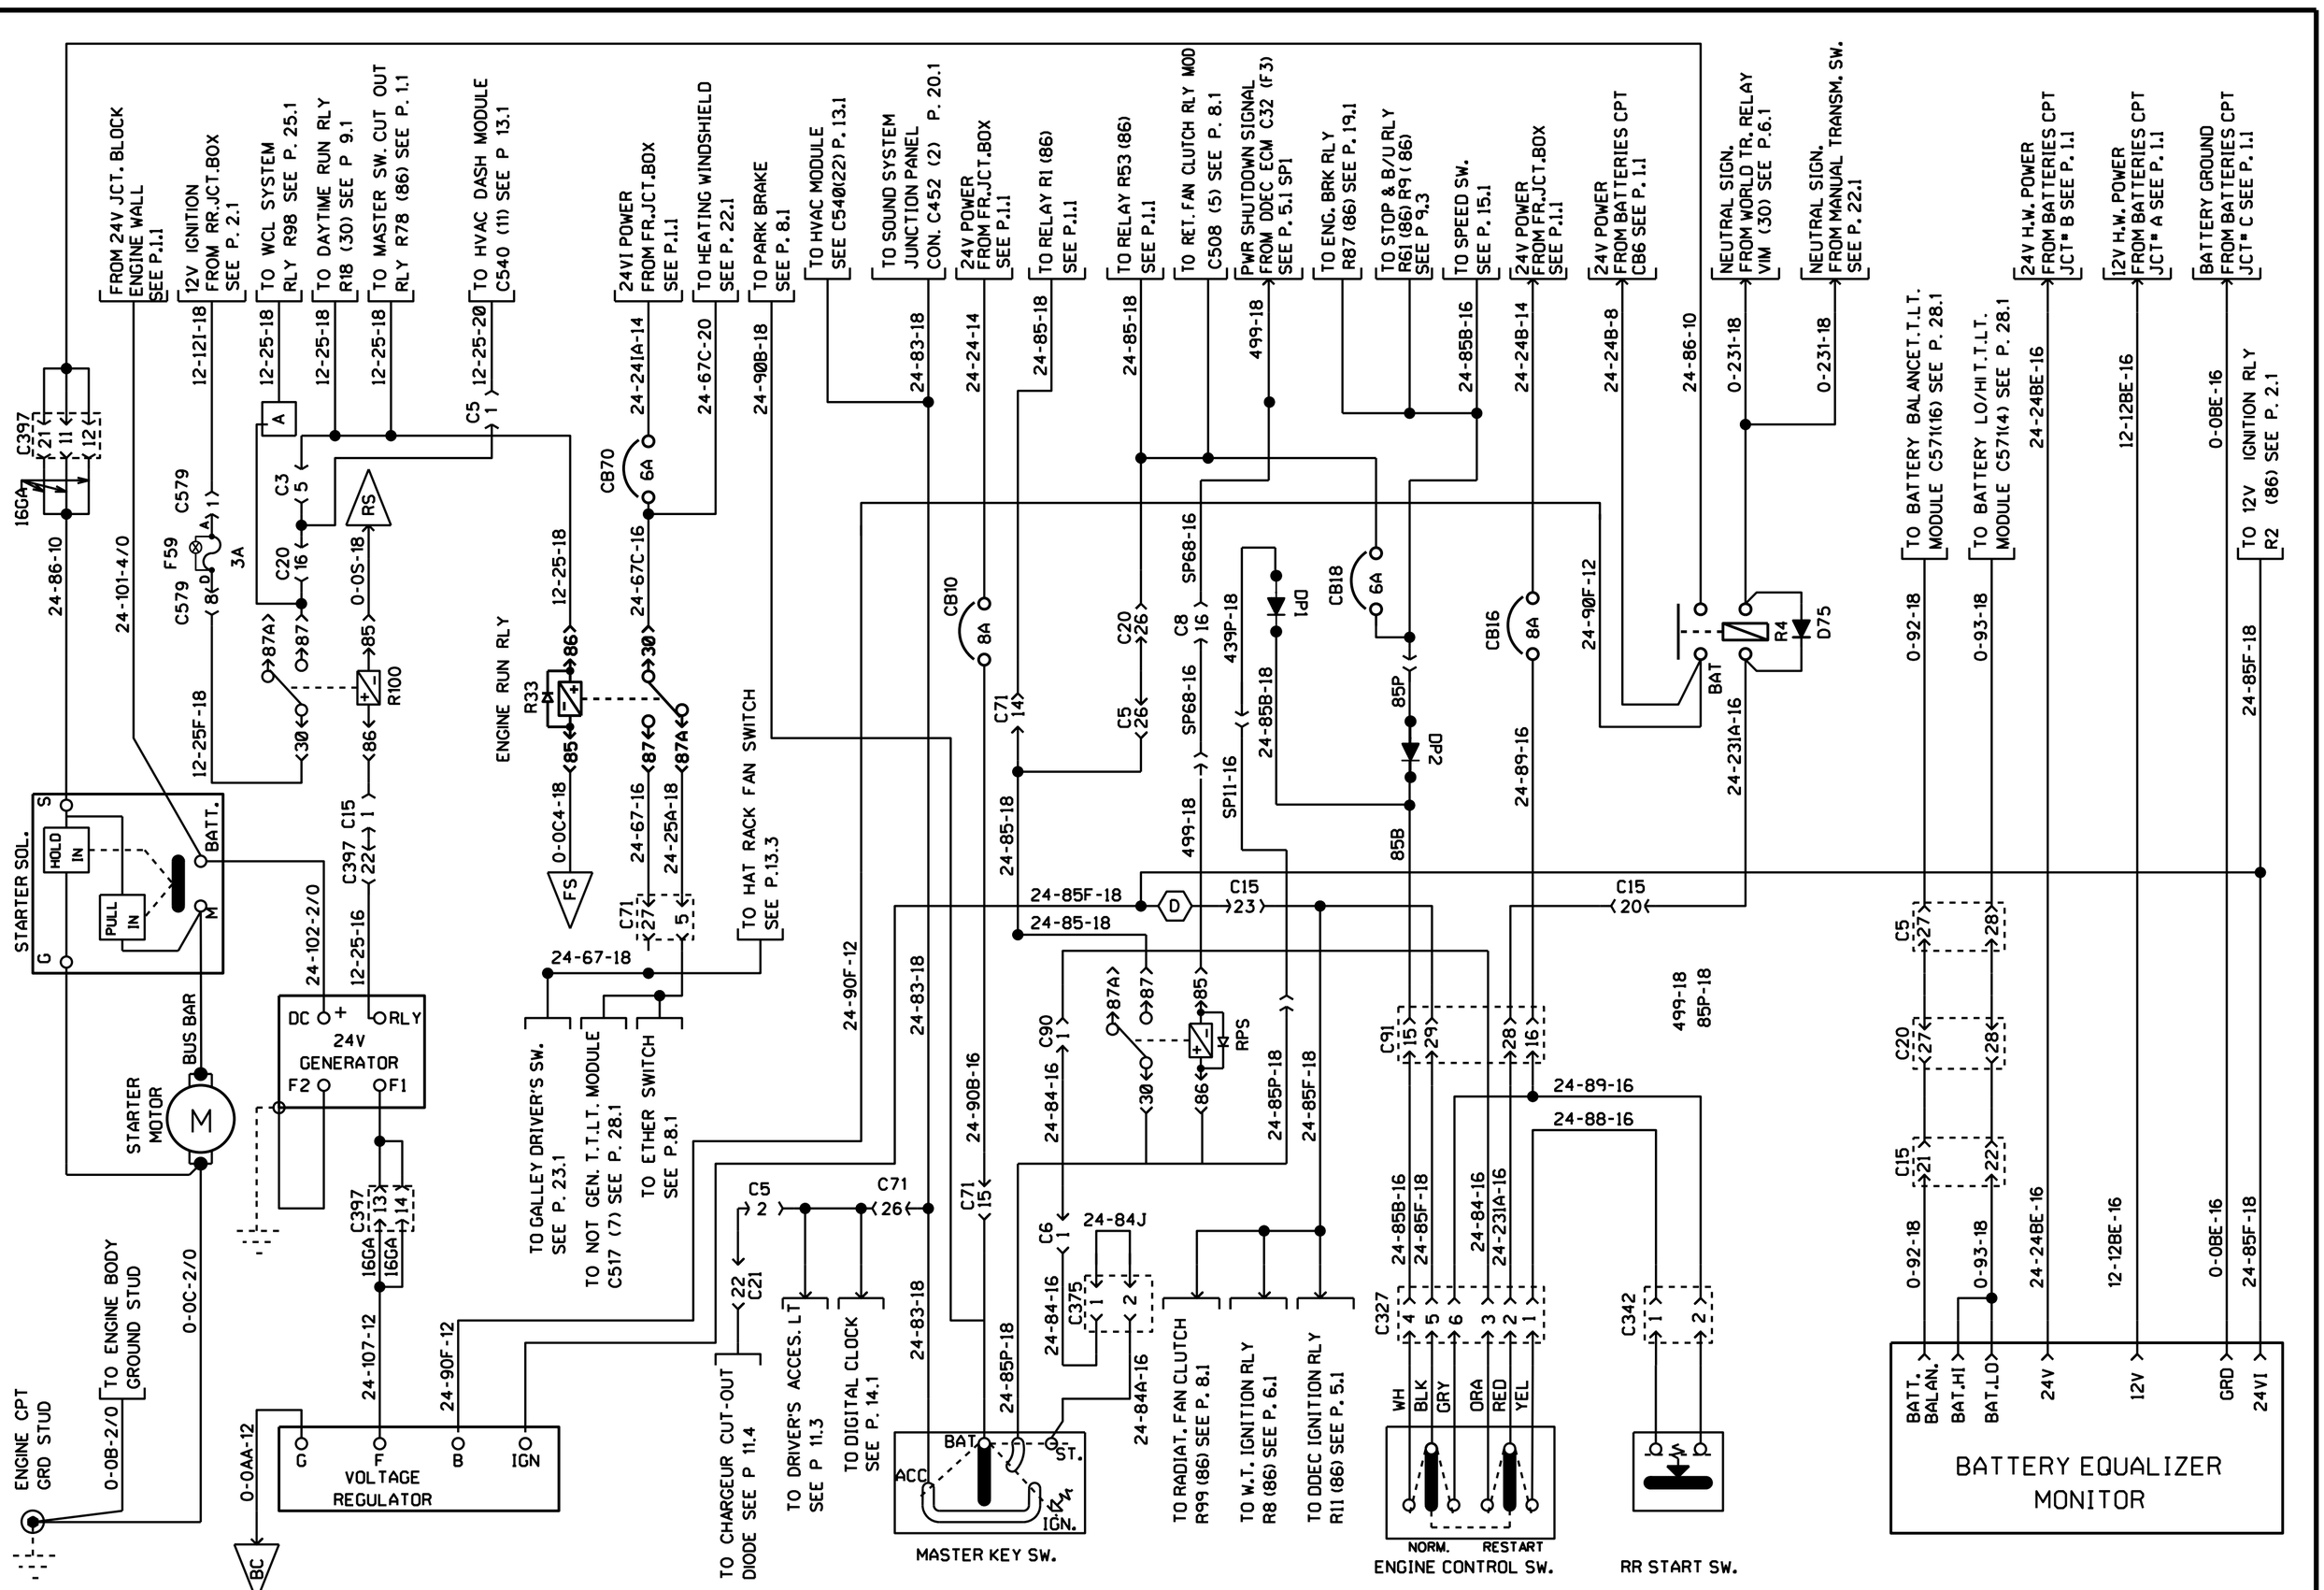

SPECIAL CHARGING SYSTEM & ENGINE CONTROL WITH POWER SHUTDOWN & IDLER TIMER

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 4.1 sp1	REVISION 00

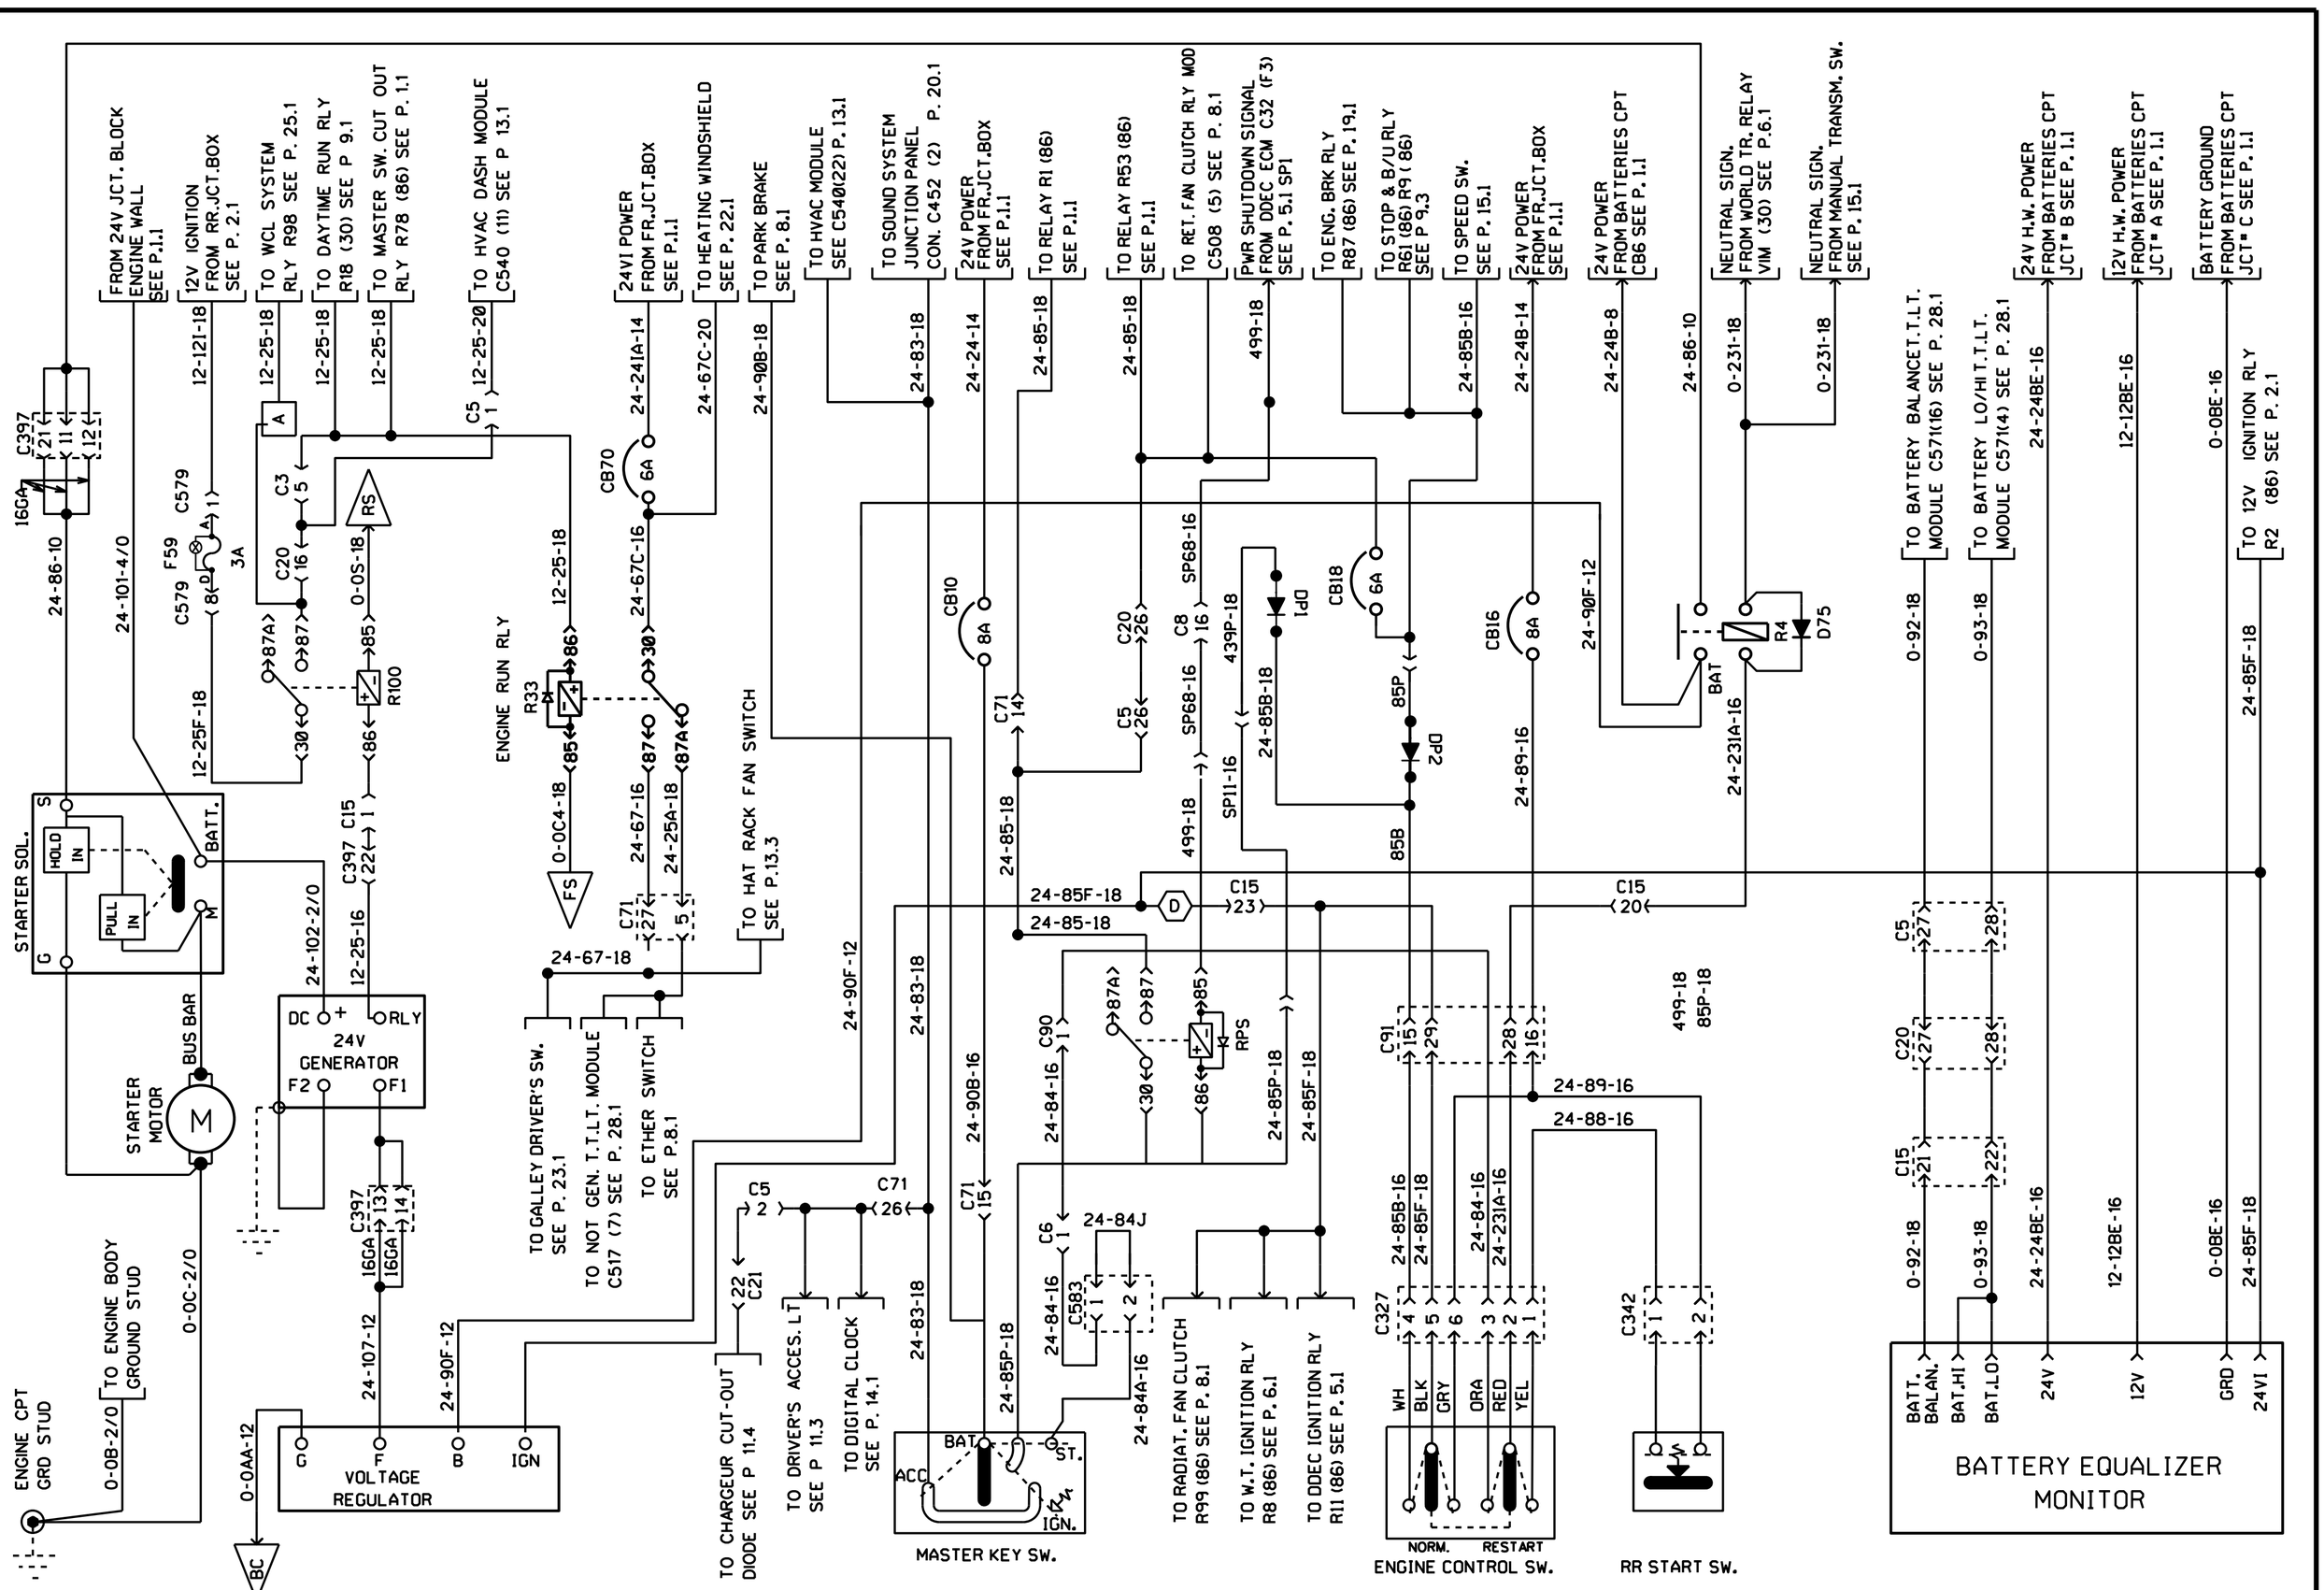

SPECIAL CHARGING SYSTEM & ENGINE CONTROL WITH POWER SHUTDOWN & IDLER TIMER

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 4.1 sp1	REVISION 01

SPECIAL CHARGING SYSTEM & ENGINE CONTROL WITH POWER SHUTDOWN & IDLER TIMER

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 4.1 sp1	REVISION 08

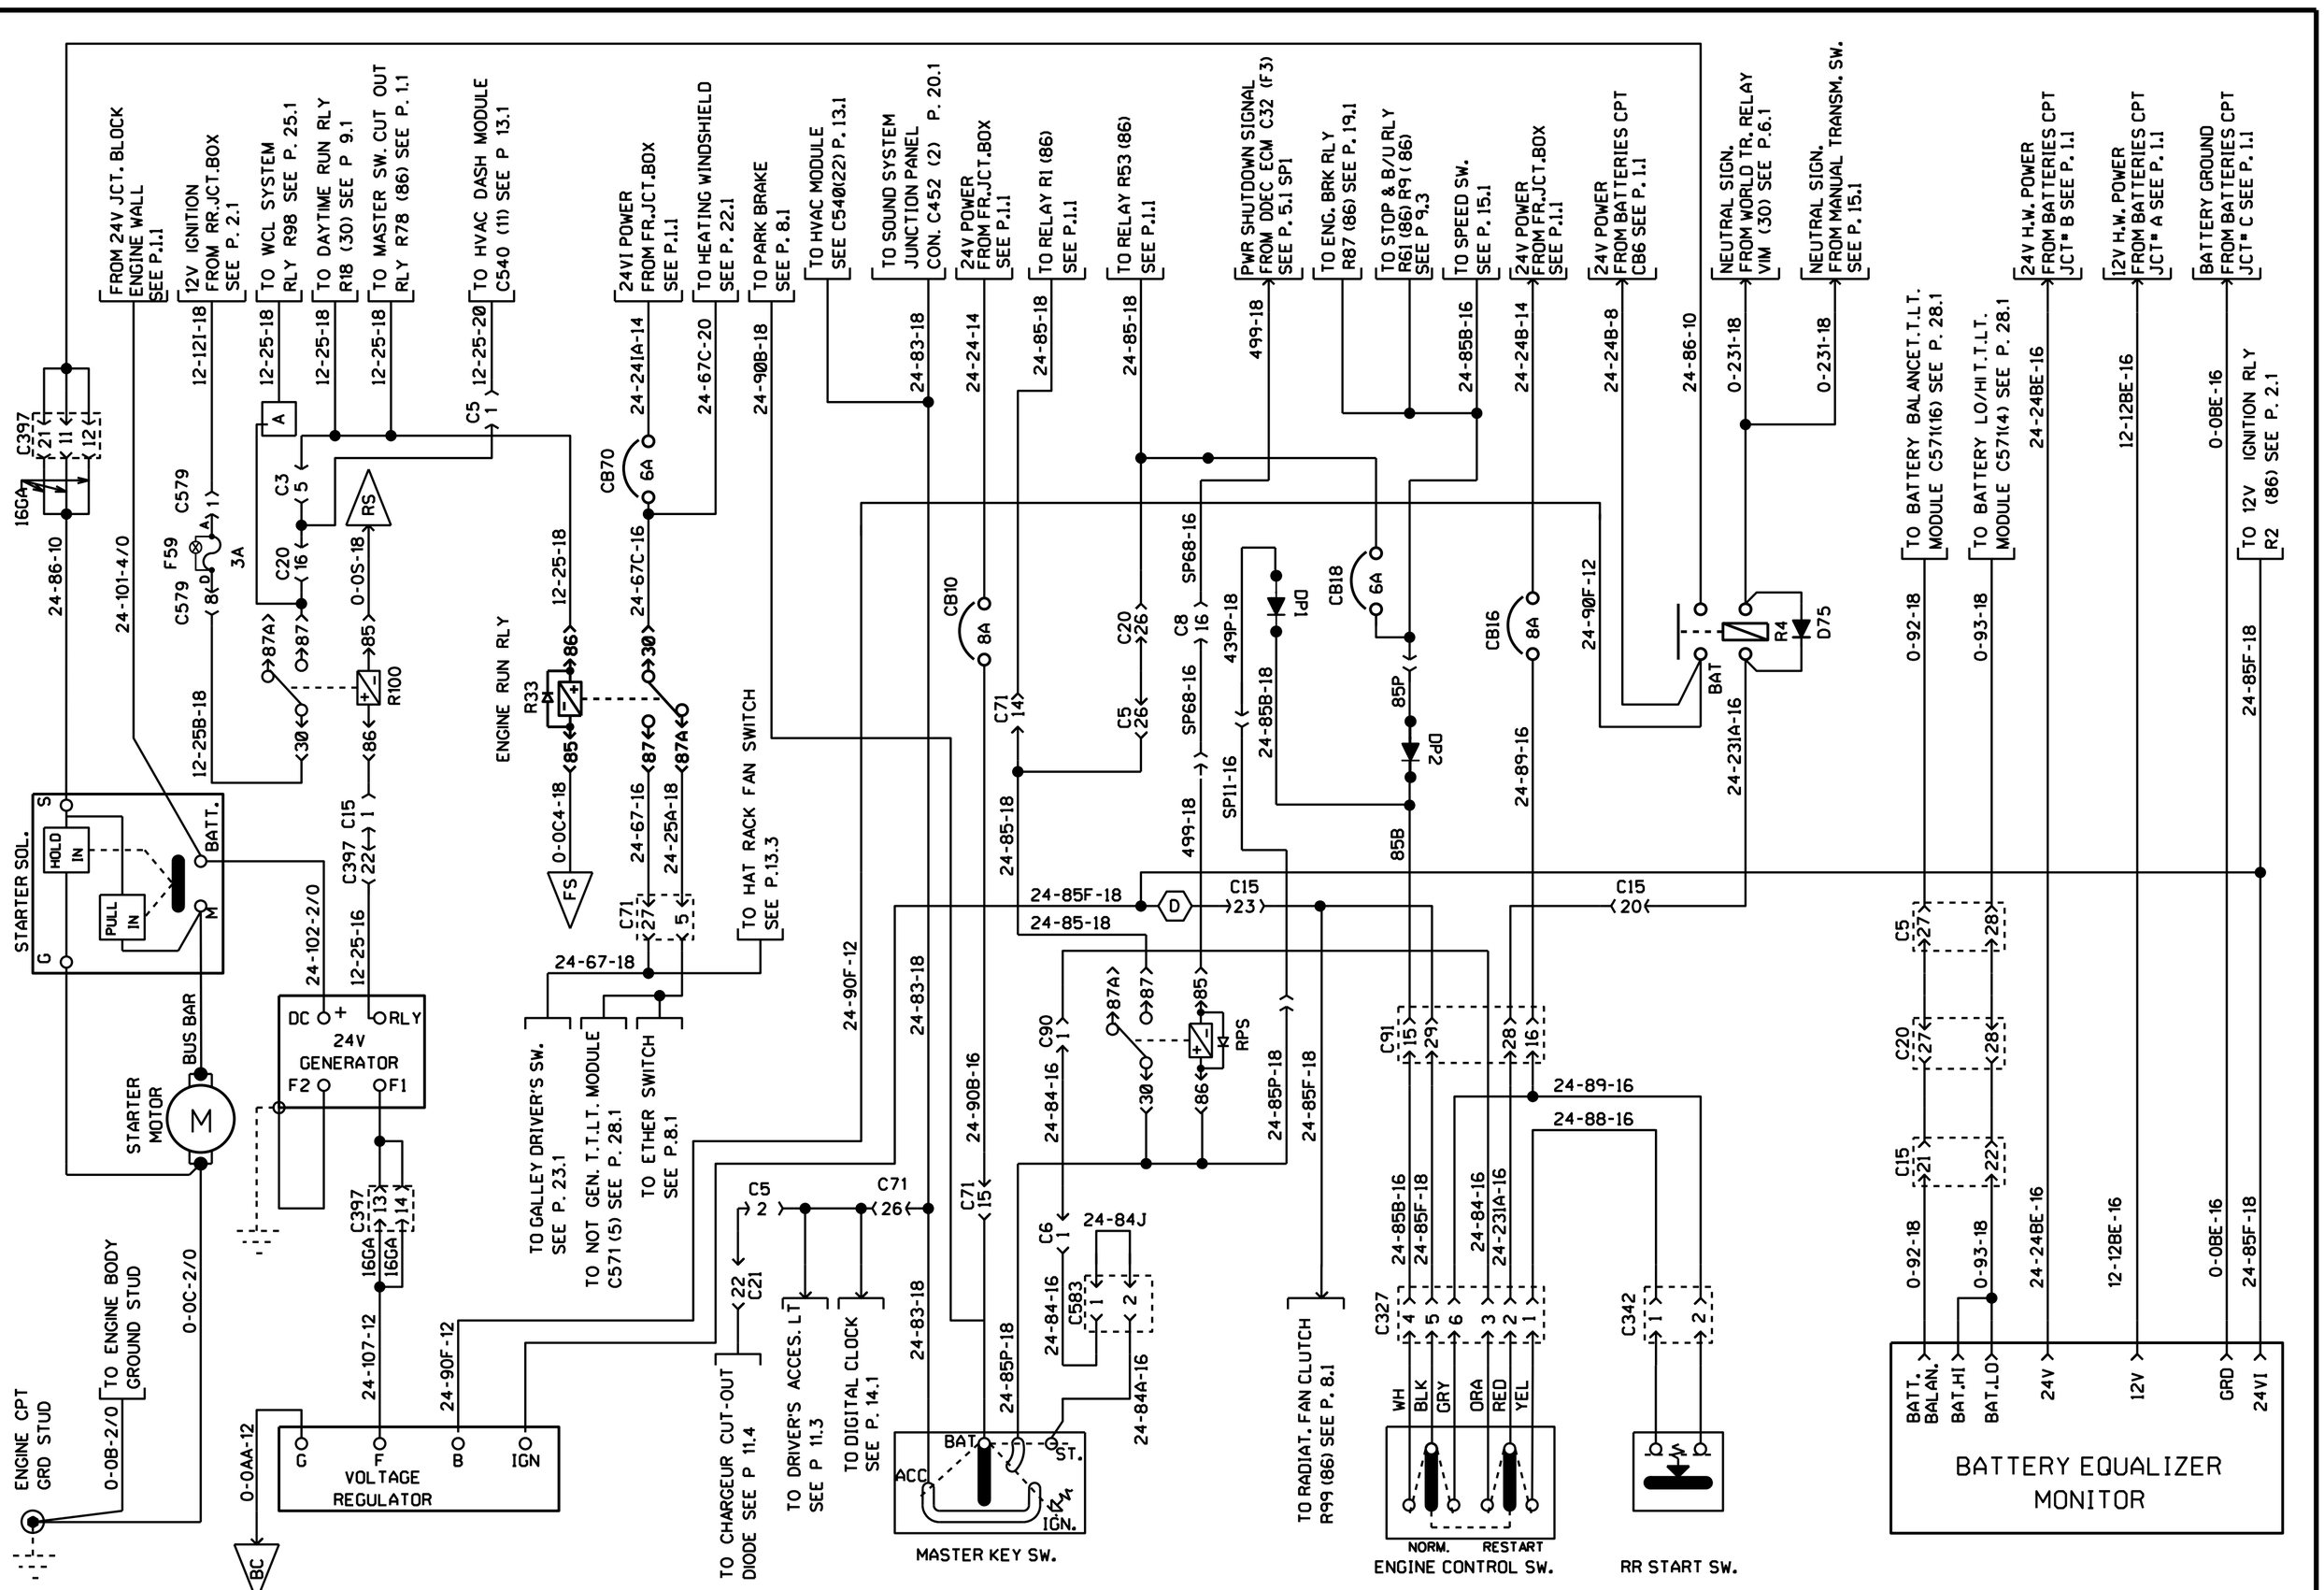

SPECIAL CHARGING SYSTEM & ENGINE CONTROL WITH POWER SHUTDOWN & IDLER TIMER

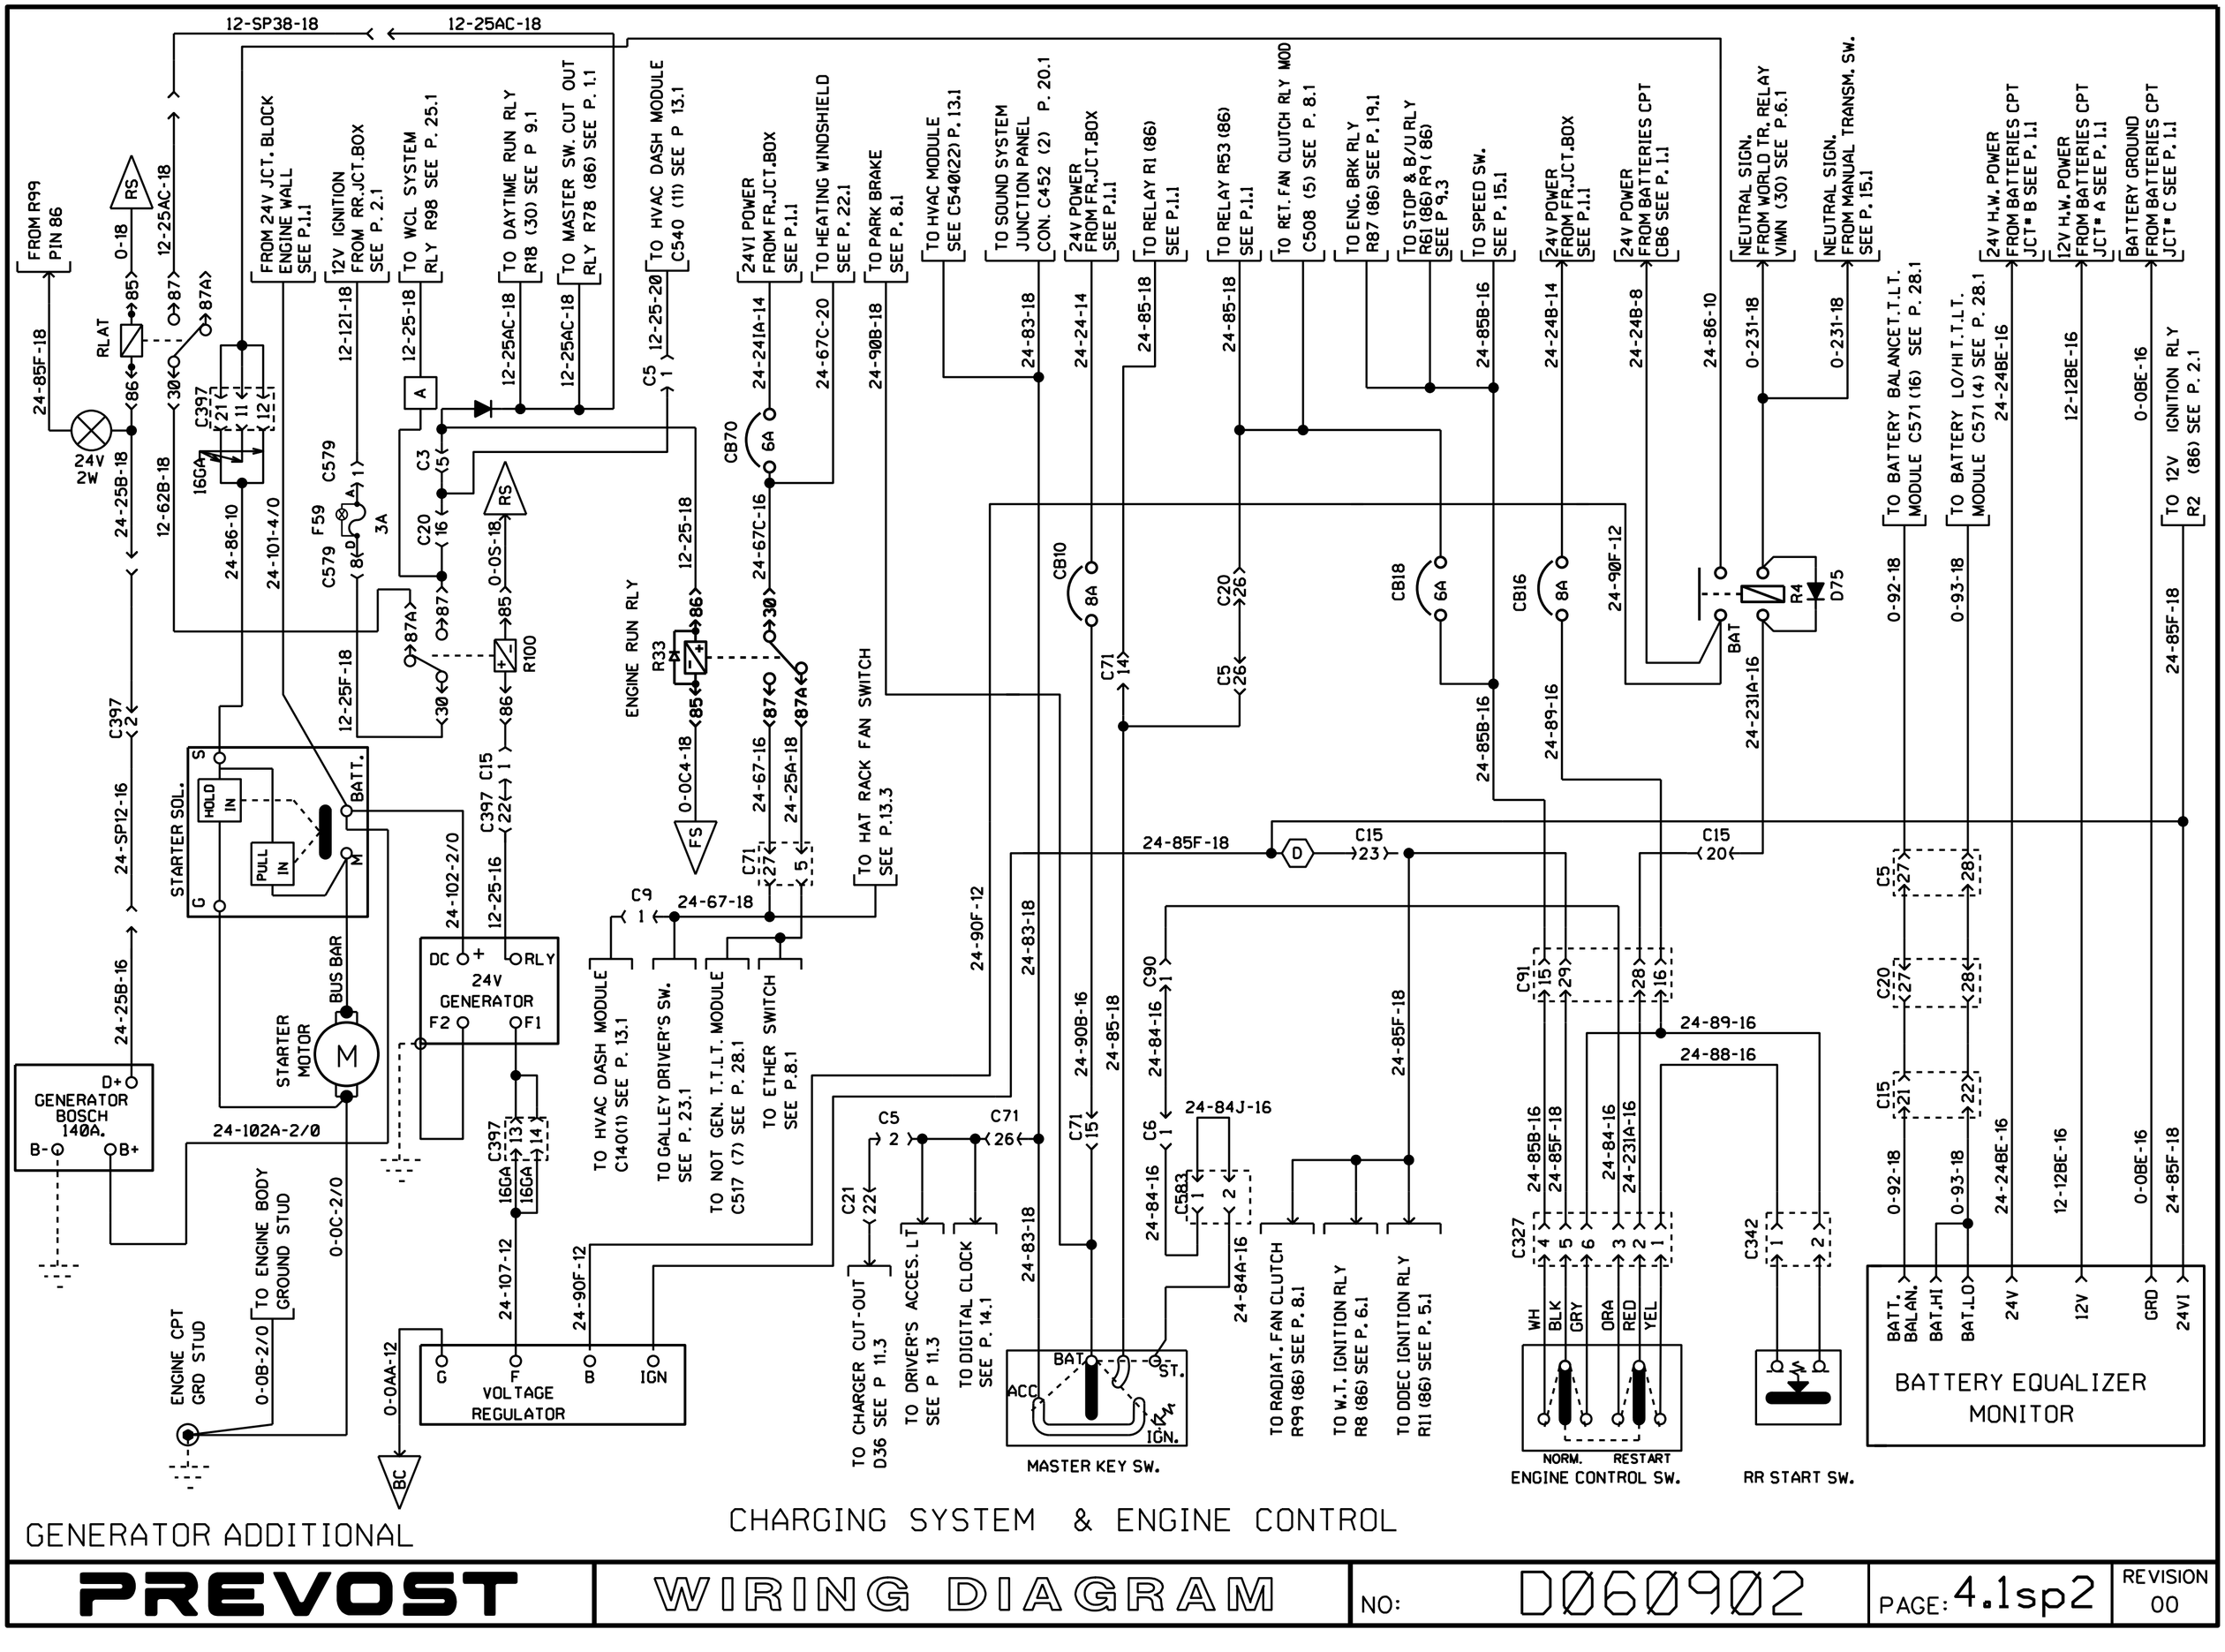

GENERATOR ADDITIONAL CHARGING SYSTEM & ENGINE CONTROL

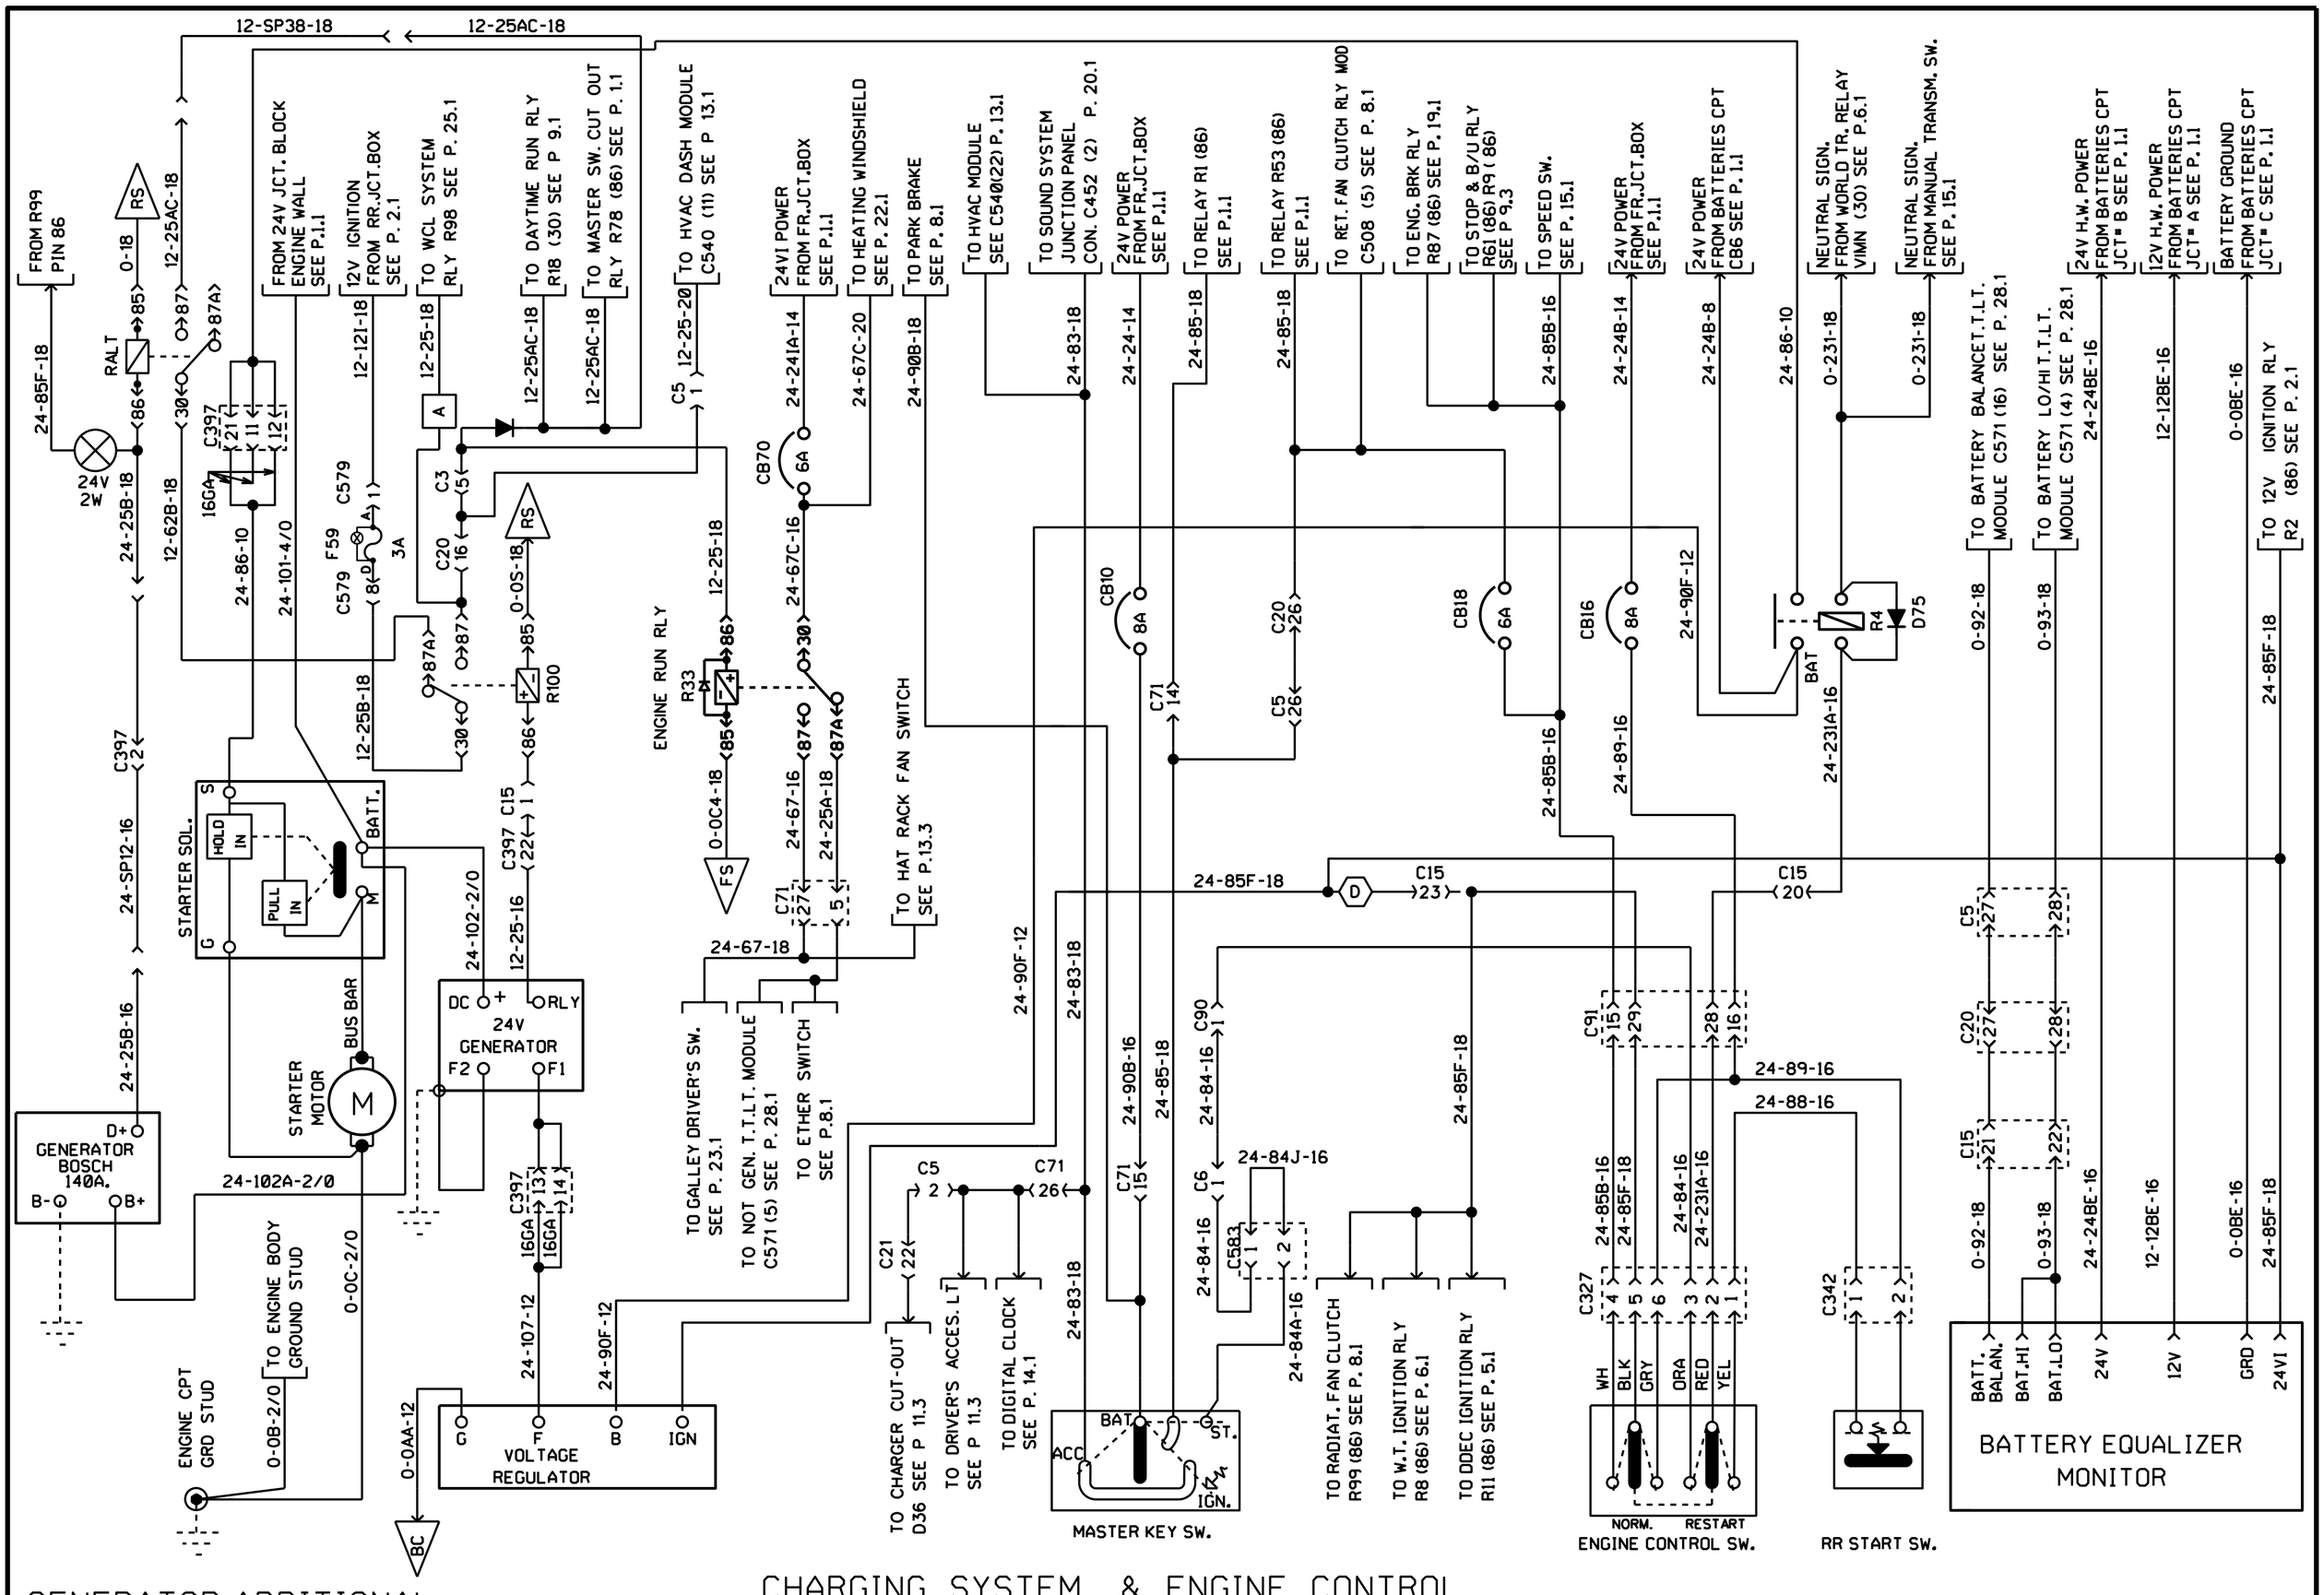

GENERATOR ADDITIONAL CHARGING SYSTEM & ENGINE CONTROL

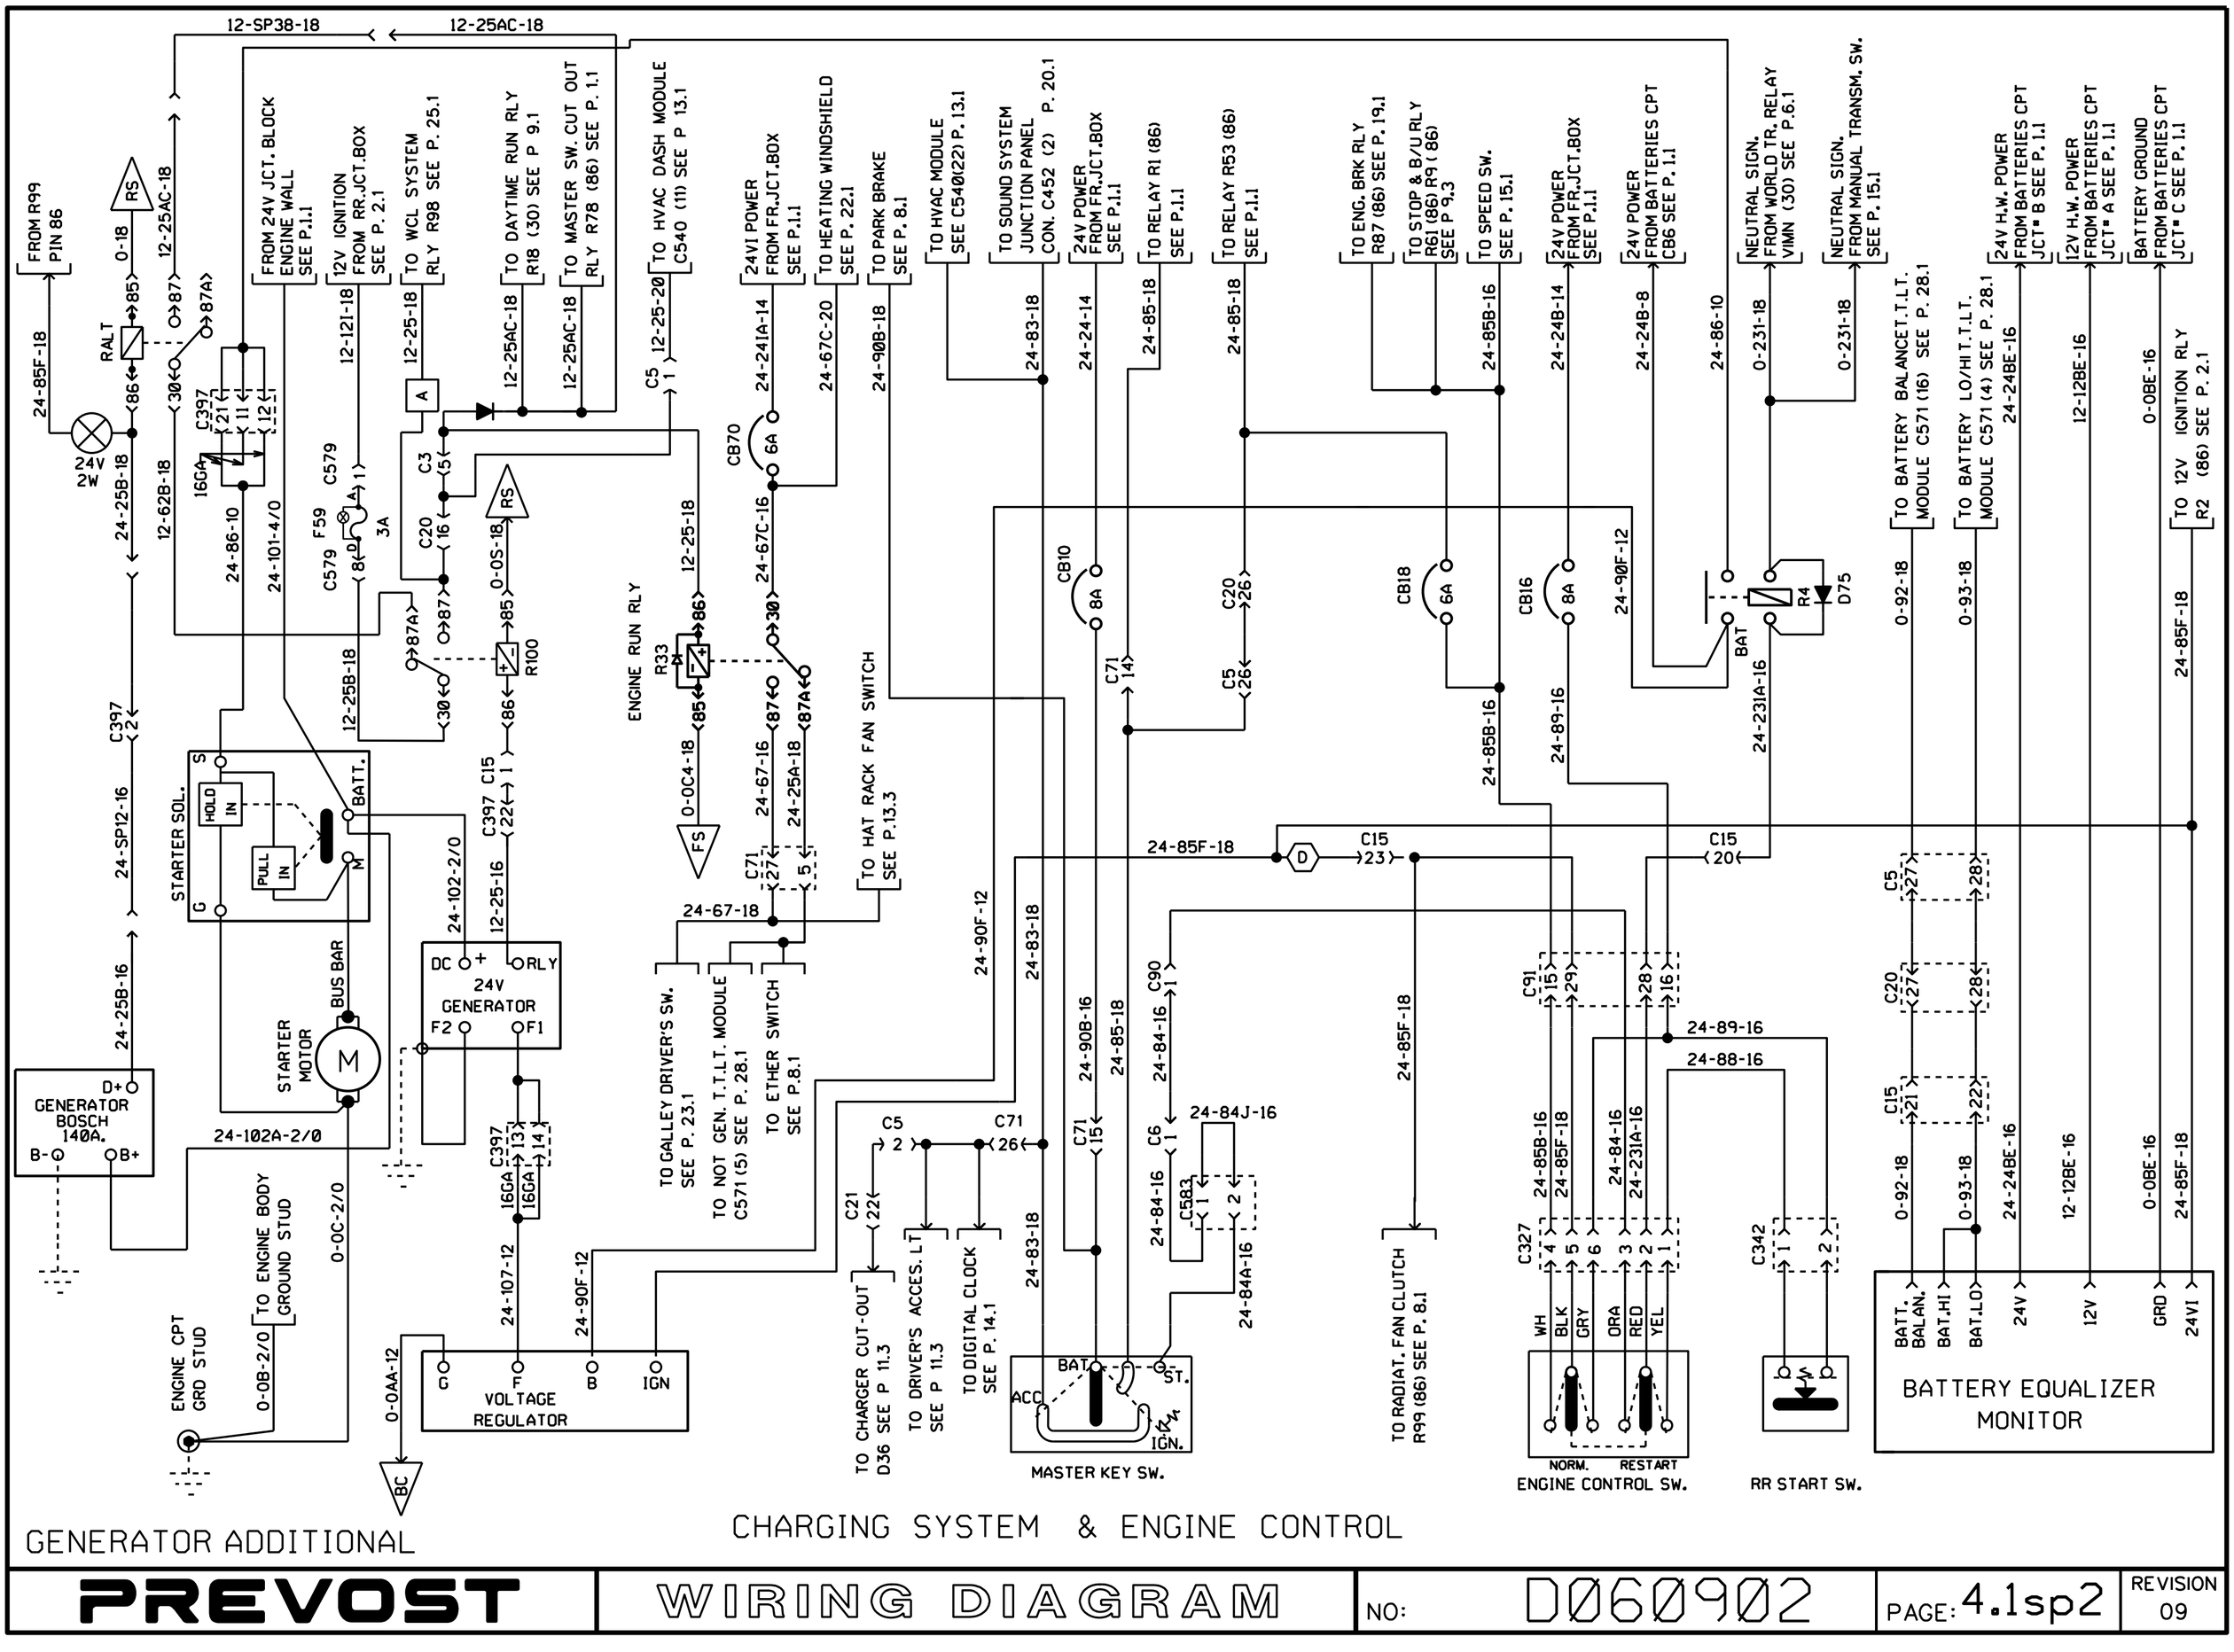

GENERATOR ADDITIONAL CHARGING SYSTEM & ENGINE CONTROL

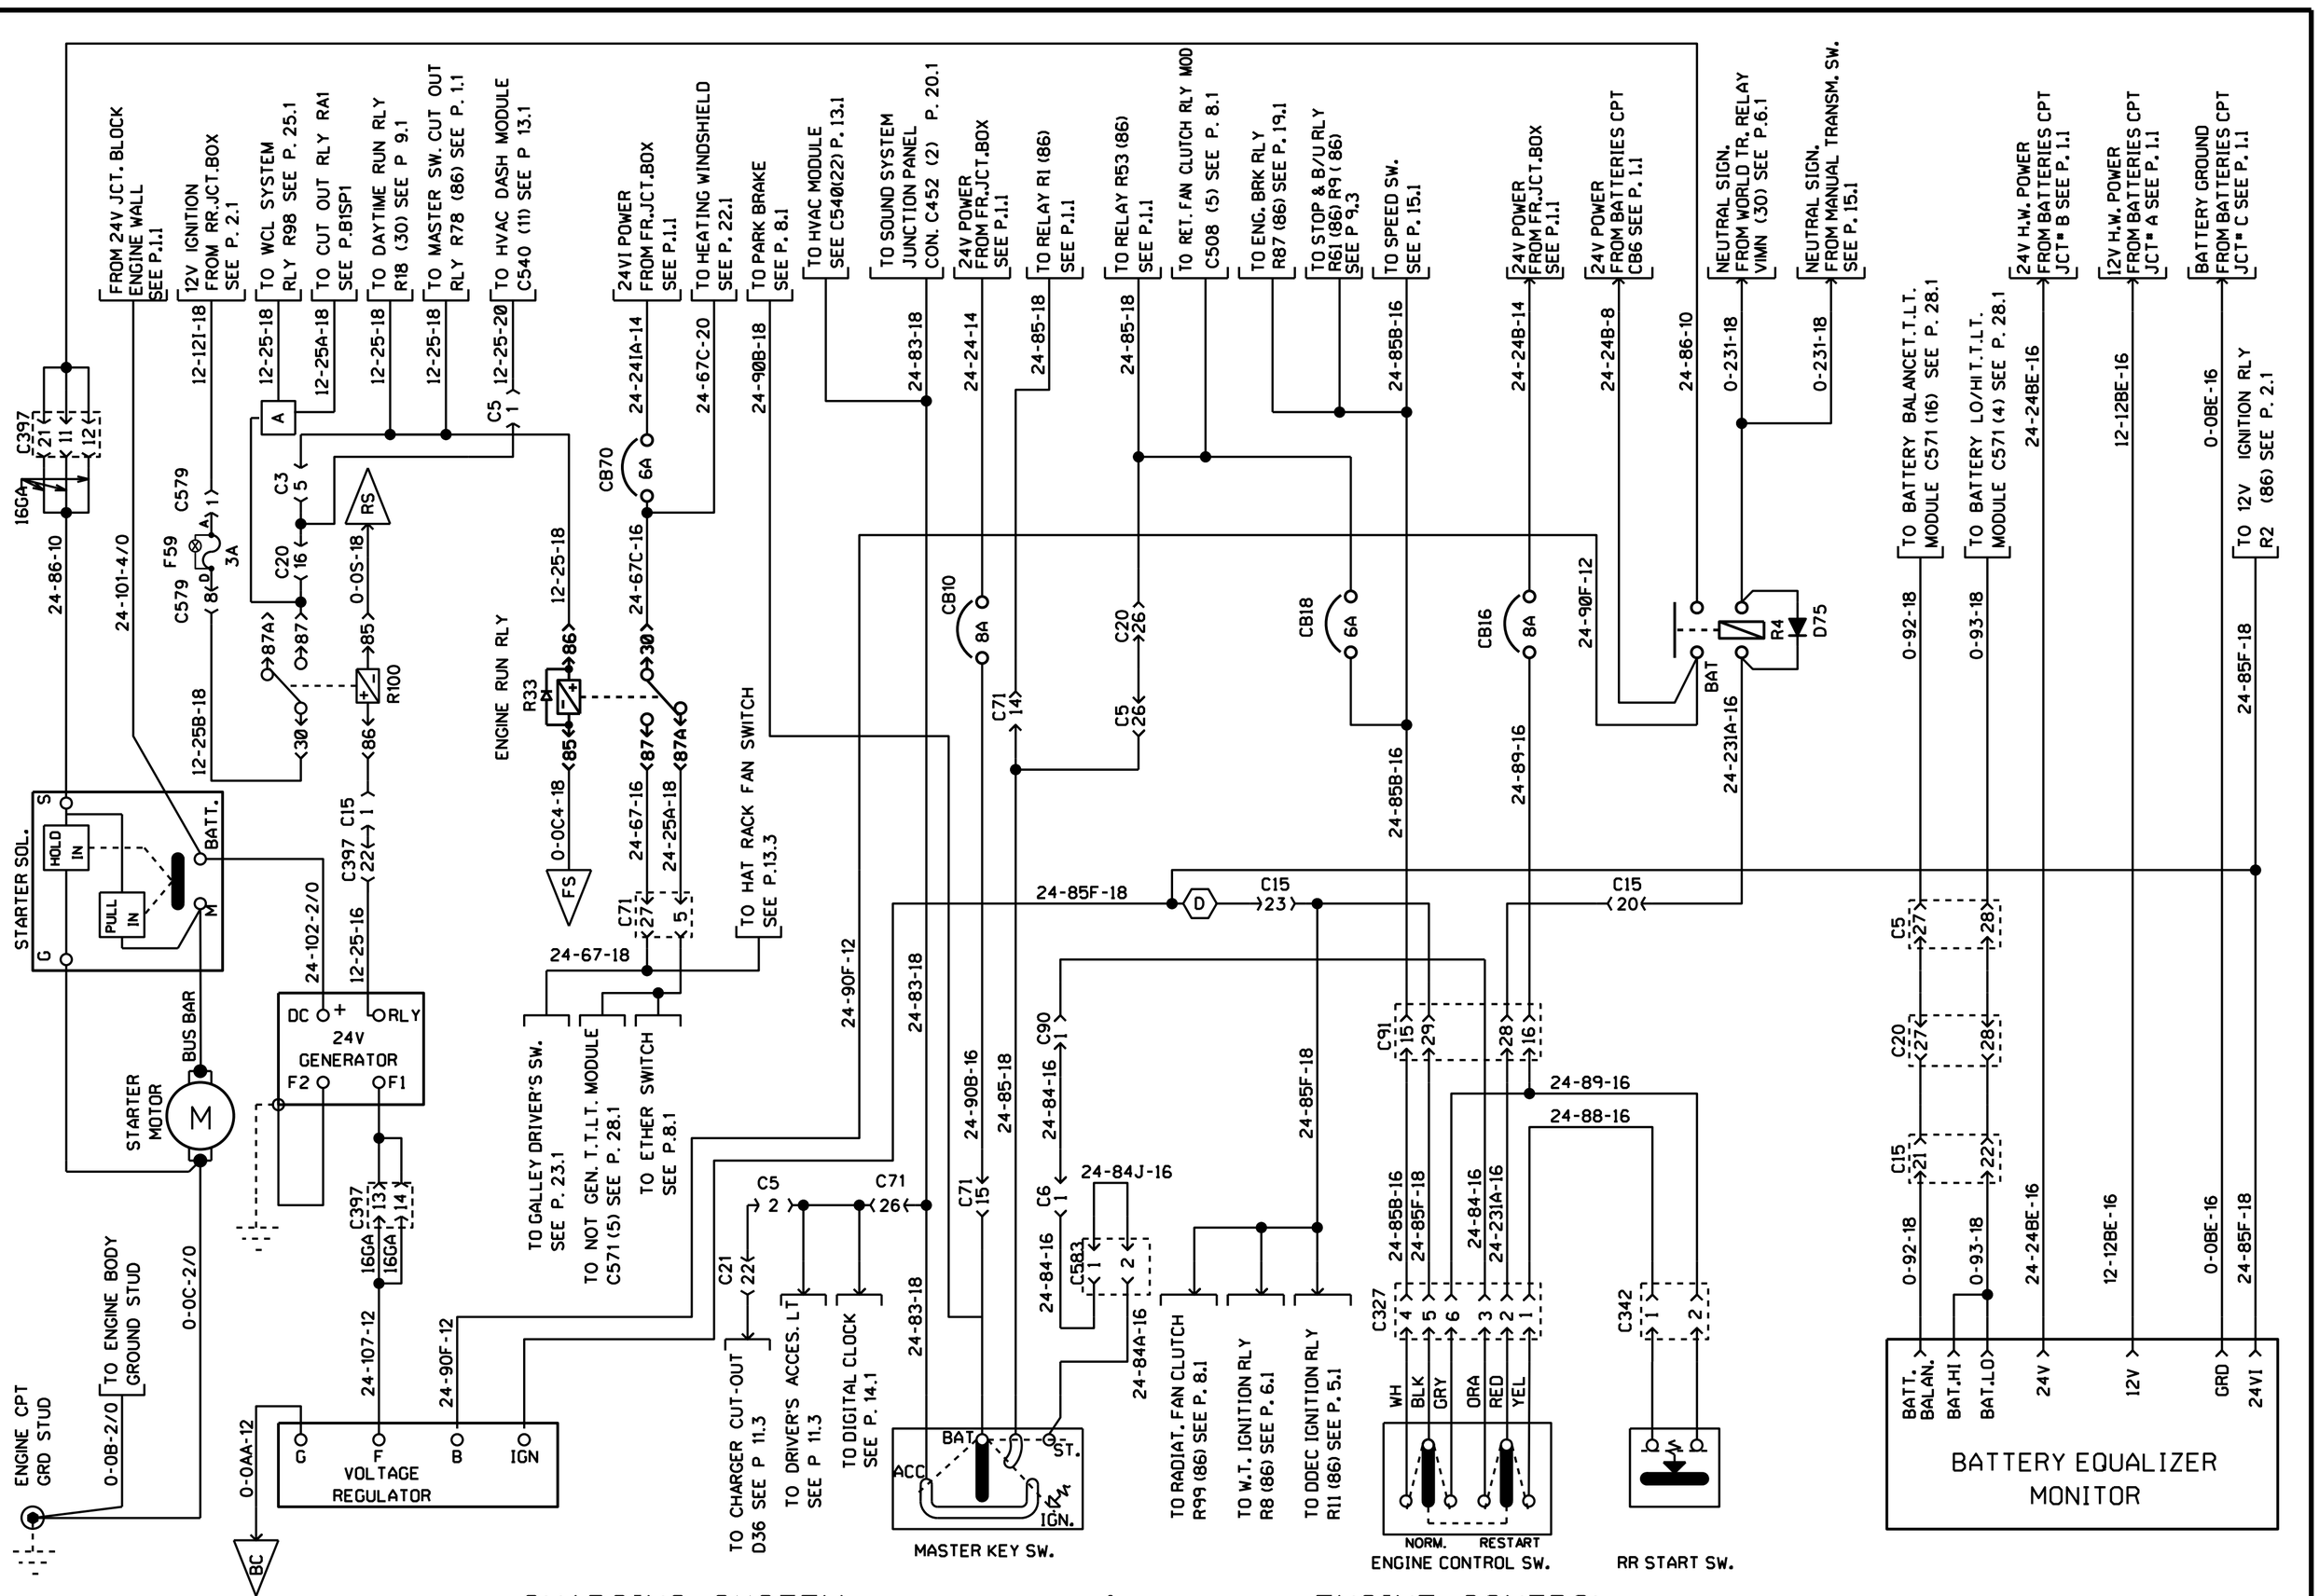

ORLEANS & ADIRONDACK

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 4.1sp3	REVISION 00

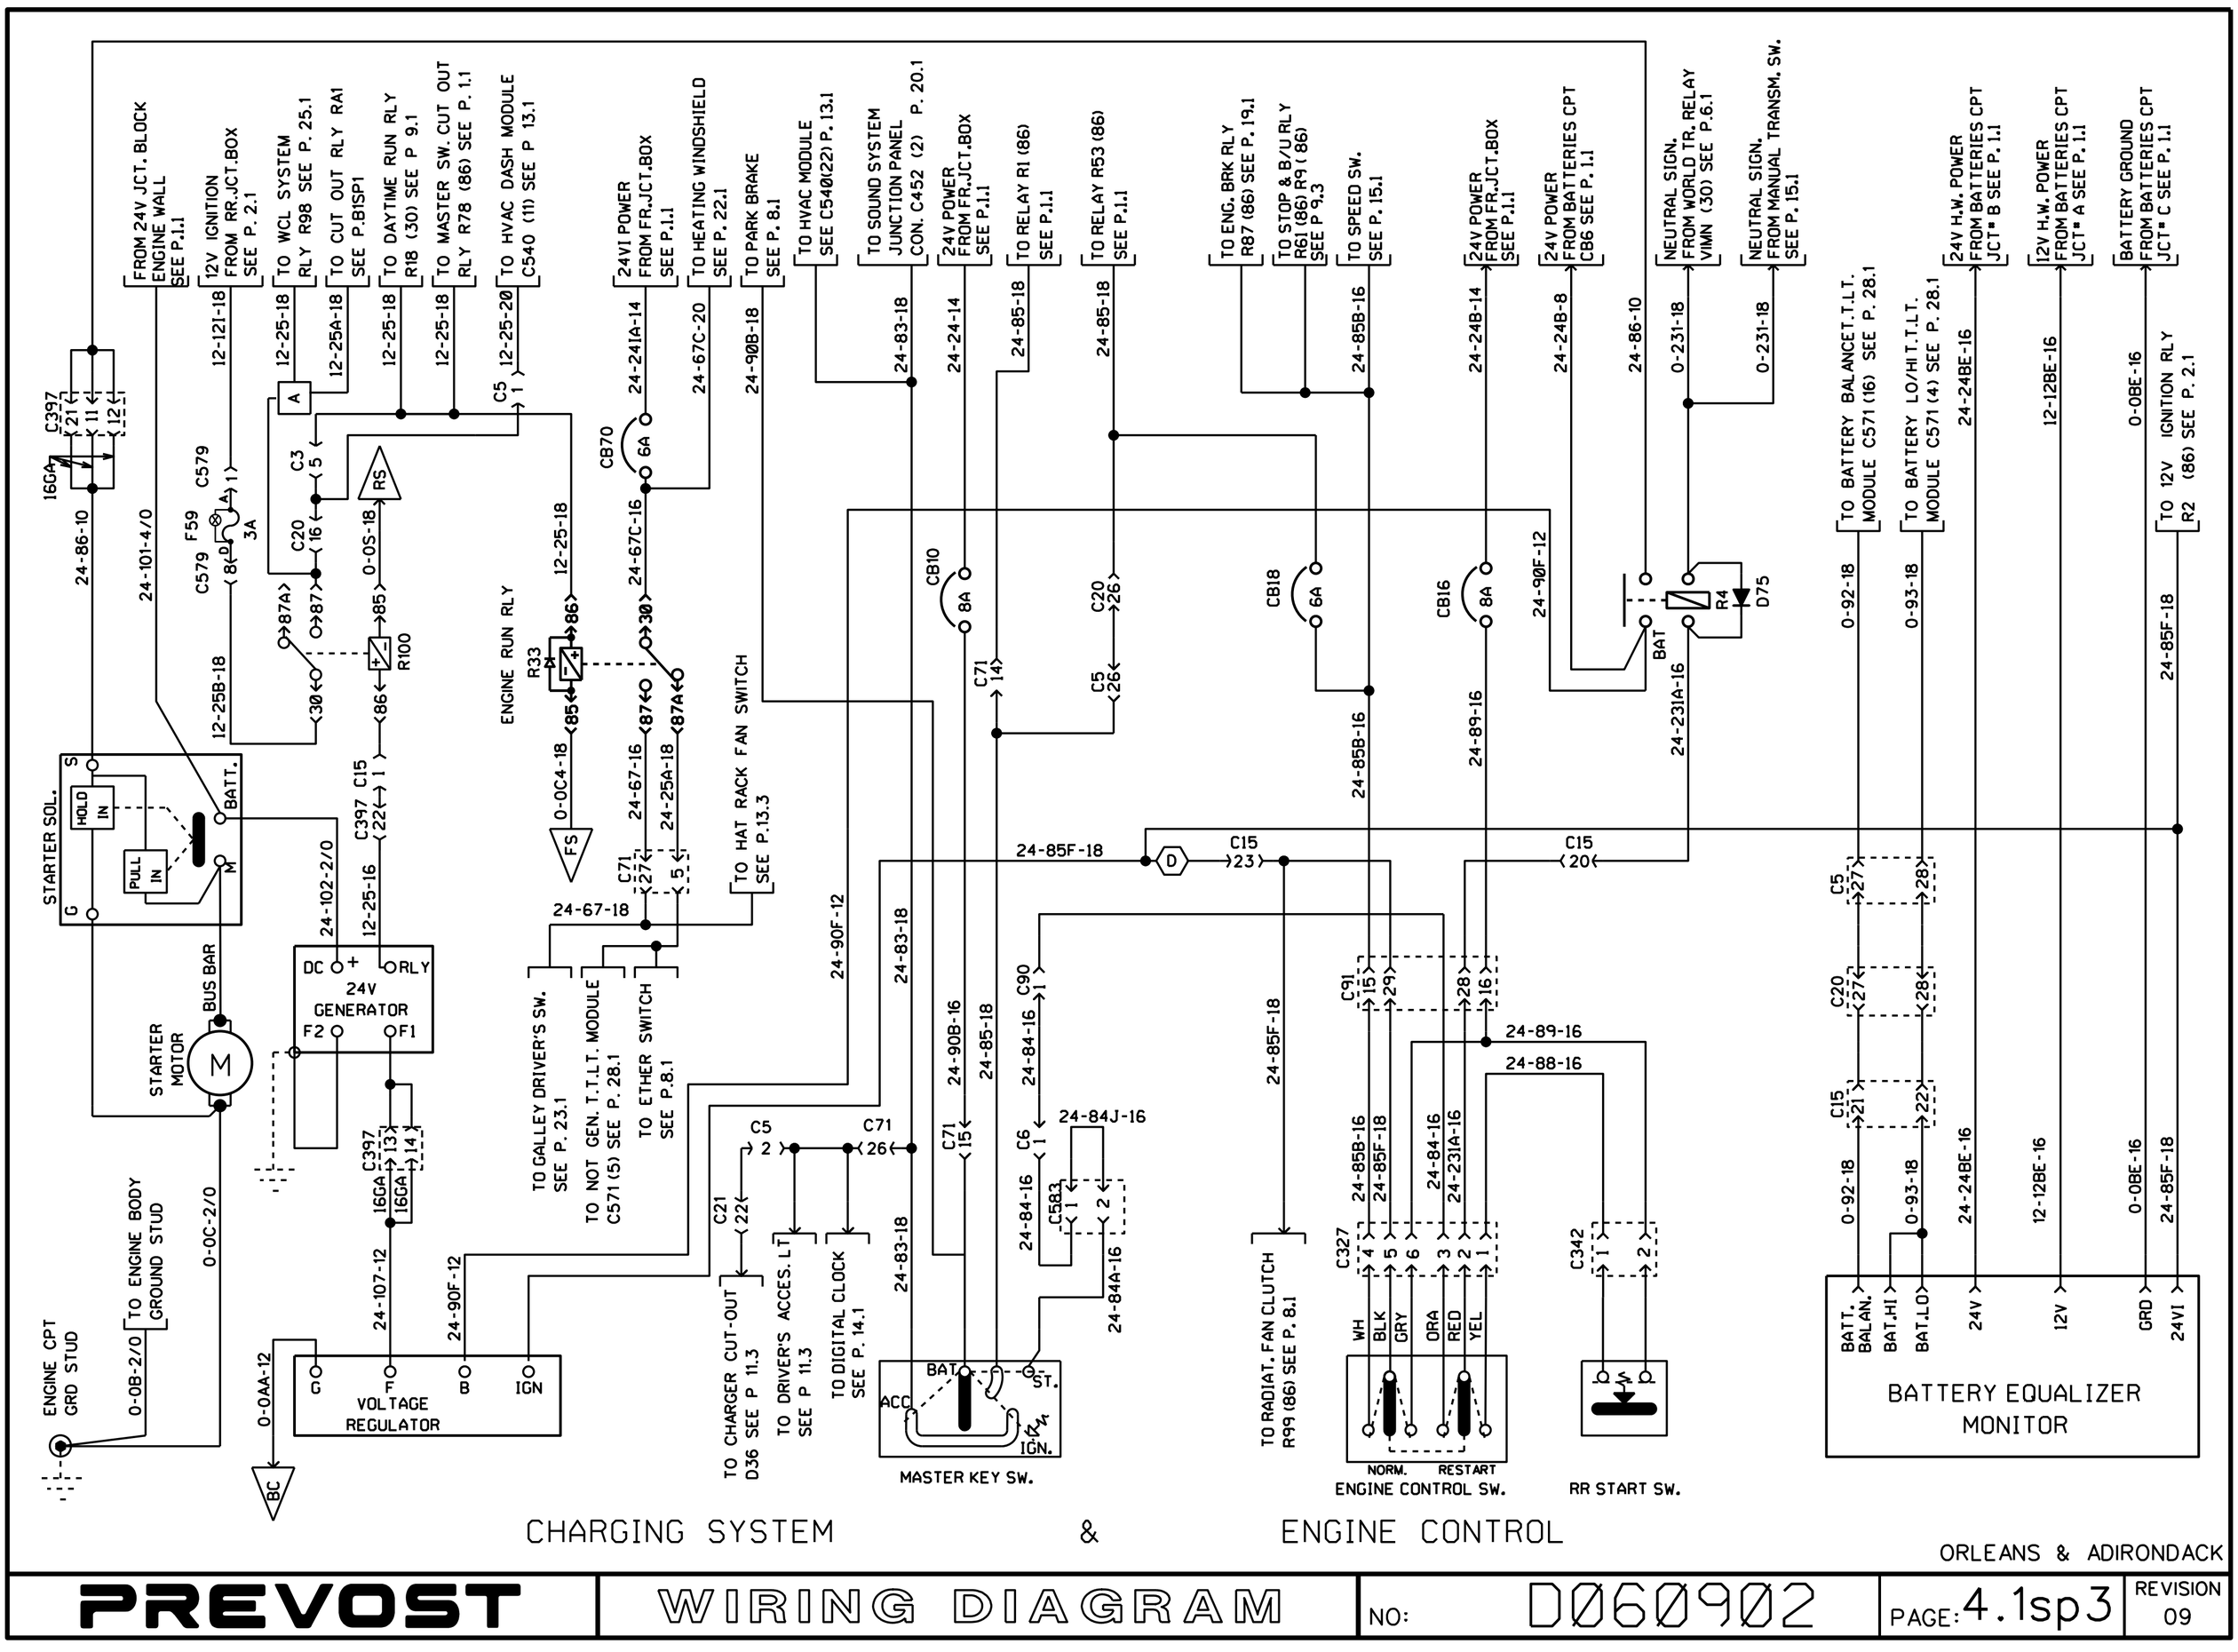

ORLEANS & ADIRONDACK

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 4.1sp3	REVISION 09

FROM 24V JCT. BLOCK ENGINE WALL SEE P.1.1

12V IGNITION FROM RR.JCT.BOX SEE P. 2.1

TO WCL SYSTEM RLY R98 SEE P. 25.1

TO DAYTIME RUN RLY R18 (30) SEE P 9.1

TO MASTER SW. CUT OUT RLY R78 (86) SEE P. 1.1

TO HVAC DASH MODULE C540 (11) SEE P 13.1

24VI POWER FROM FR.JCT.BOX SEE P.1.1

TO HEATING WINDSHIELD SEE P. 22.1

TO PARK BRAKE SEE P. 8.1

TO HVAC MODULE SEE C540(22) P. 13.1

TO SOUND SYSTEM JUNCTION PANEL CON. C452 (2) P. 20.1

24V POWER FROM FR.JCT.BOX SEE P.1.1

TO RELAY R1 (86) SEE P.1.1

TO RELAY R53 (86) SEE P.1.1

TO ENG. BRK RLY R87 (86) SEE P. 19.1

TO STOP & B/U RLY R61 (86) R9 (86) SEE P 9.3

TO SPEED SW. SEE P. 15.1

24V POWER FROM FR.JCT.BOX SEE P.1.1

24V POWER FROM BATTERIES CPT CB6 SEE P. 1.1

NEUTRAL SIGN. FROM WORLD TR. RELAY VIMN (30) SEE P.6.1

NEUTRAL SIGN. FROM MANUAL TRANSM. SW. SEE P. 15.1

TO FAST IDLE RLY R7 (85) SEE P. 5.1

TO WCL SYSTEM RLY R95 SEE P. 25.1

TO BATTERY BALANCET.T.LT. MODULE C571 (16) SEE P. 28.1

TO BATTERY LO/HI T.T.LT. MODULE C571 (4) SEE P. 28.1

24V H.W. POWER FROM BATTERIES CPT JCT= B SEE P. 1.1

12V H.W. POWER FROM BATTERIES CPT JCT= A SEE P. 1.1

BATTERY GROUND FROM BATTERIES CPT JCT= C SEE P. 1.1

TO 12V IGNITION RLY R2 (86) SEE P. 2.1

ENGINE RUN RLY

FAN SWITCH

TO GALLEY DRIVER'S SW. SEE P. 23.1

TO NOT GEN. T.T.L.T. MODULE C571 (5) SEE P. 28.1

TO ETHER SWITCH SEE P.8.1

TO HAT RACK FAN SEE P.13.3

STARTER LOCKOUT SIGNAL FROM DDEC ECM MODULE CONNECTOR C32 (F3)

TO CHARGER CUT-OUT D36 SEE P 11.3

TO DRIVER'S ACCES. LT SEE P 11.3

TO DIGITAL CLOCK SEE P. 14.1

TO RADIAT. FAN CLUTCH R99 (86) C508(5) SEE P. 8.1

NEUTRAL SIGNAL FROM EATON TR. SEE P. 6.3

ENGINE CPT GRD STUD

TO ENGINE BODY GROUND STUD

STARTER SOL.

STARTER MOTOR

BUS BAR

24V GENERATOR

VOLTAGE REGULATOR

MASTER KEY SW.

ENGINE CONTROL SW.

RR START SW.

BATTERY EQUALIZER MONITOR

CHARGING SYSTEM & ENGINE CONTROL WITH FORD KEY

EATON TRANS. ONLY

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 4.1 sp4	REVISION 09

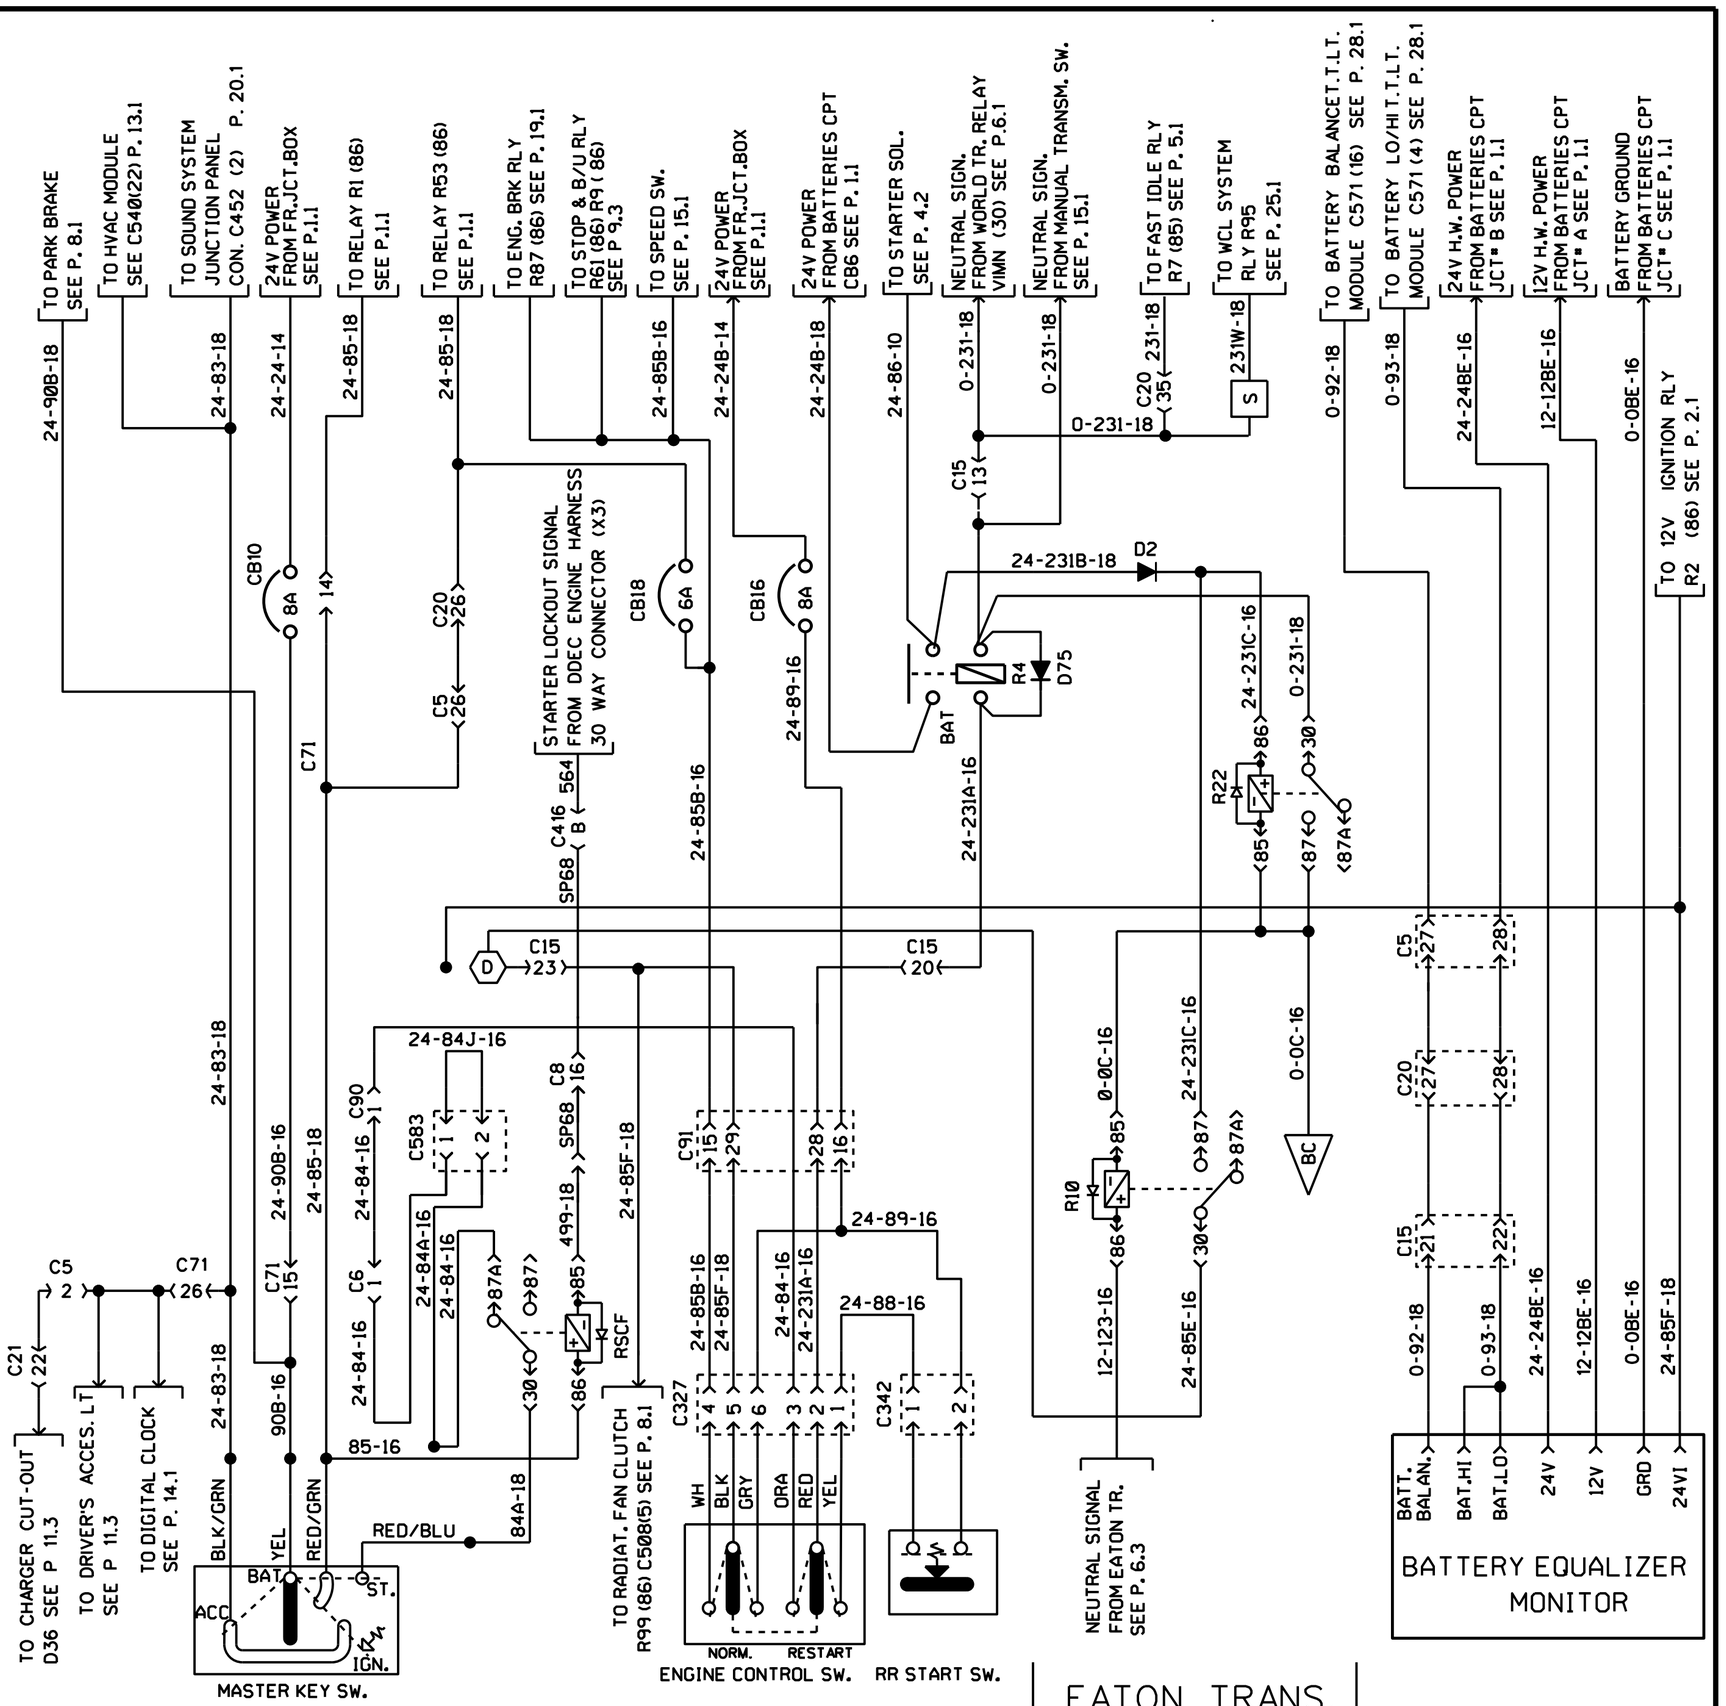

CHARGING SYSTEM & ENGINE CONTROL WITH FORD KEY

EATON TRANS. ONLY

PREVOST

WIRING DIAGRAM

STARTER & ALTERNATOR BOSCH

NO: D060902

PAGE: 4.2

REVISION 16

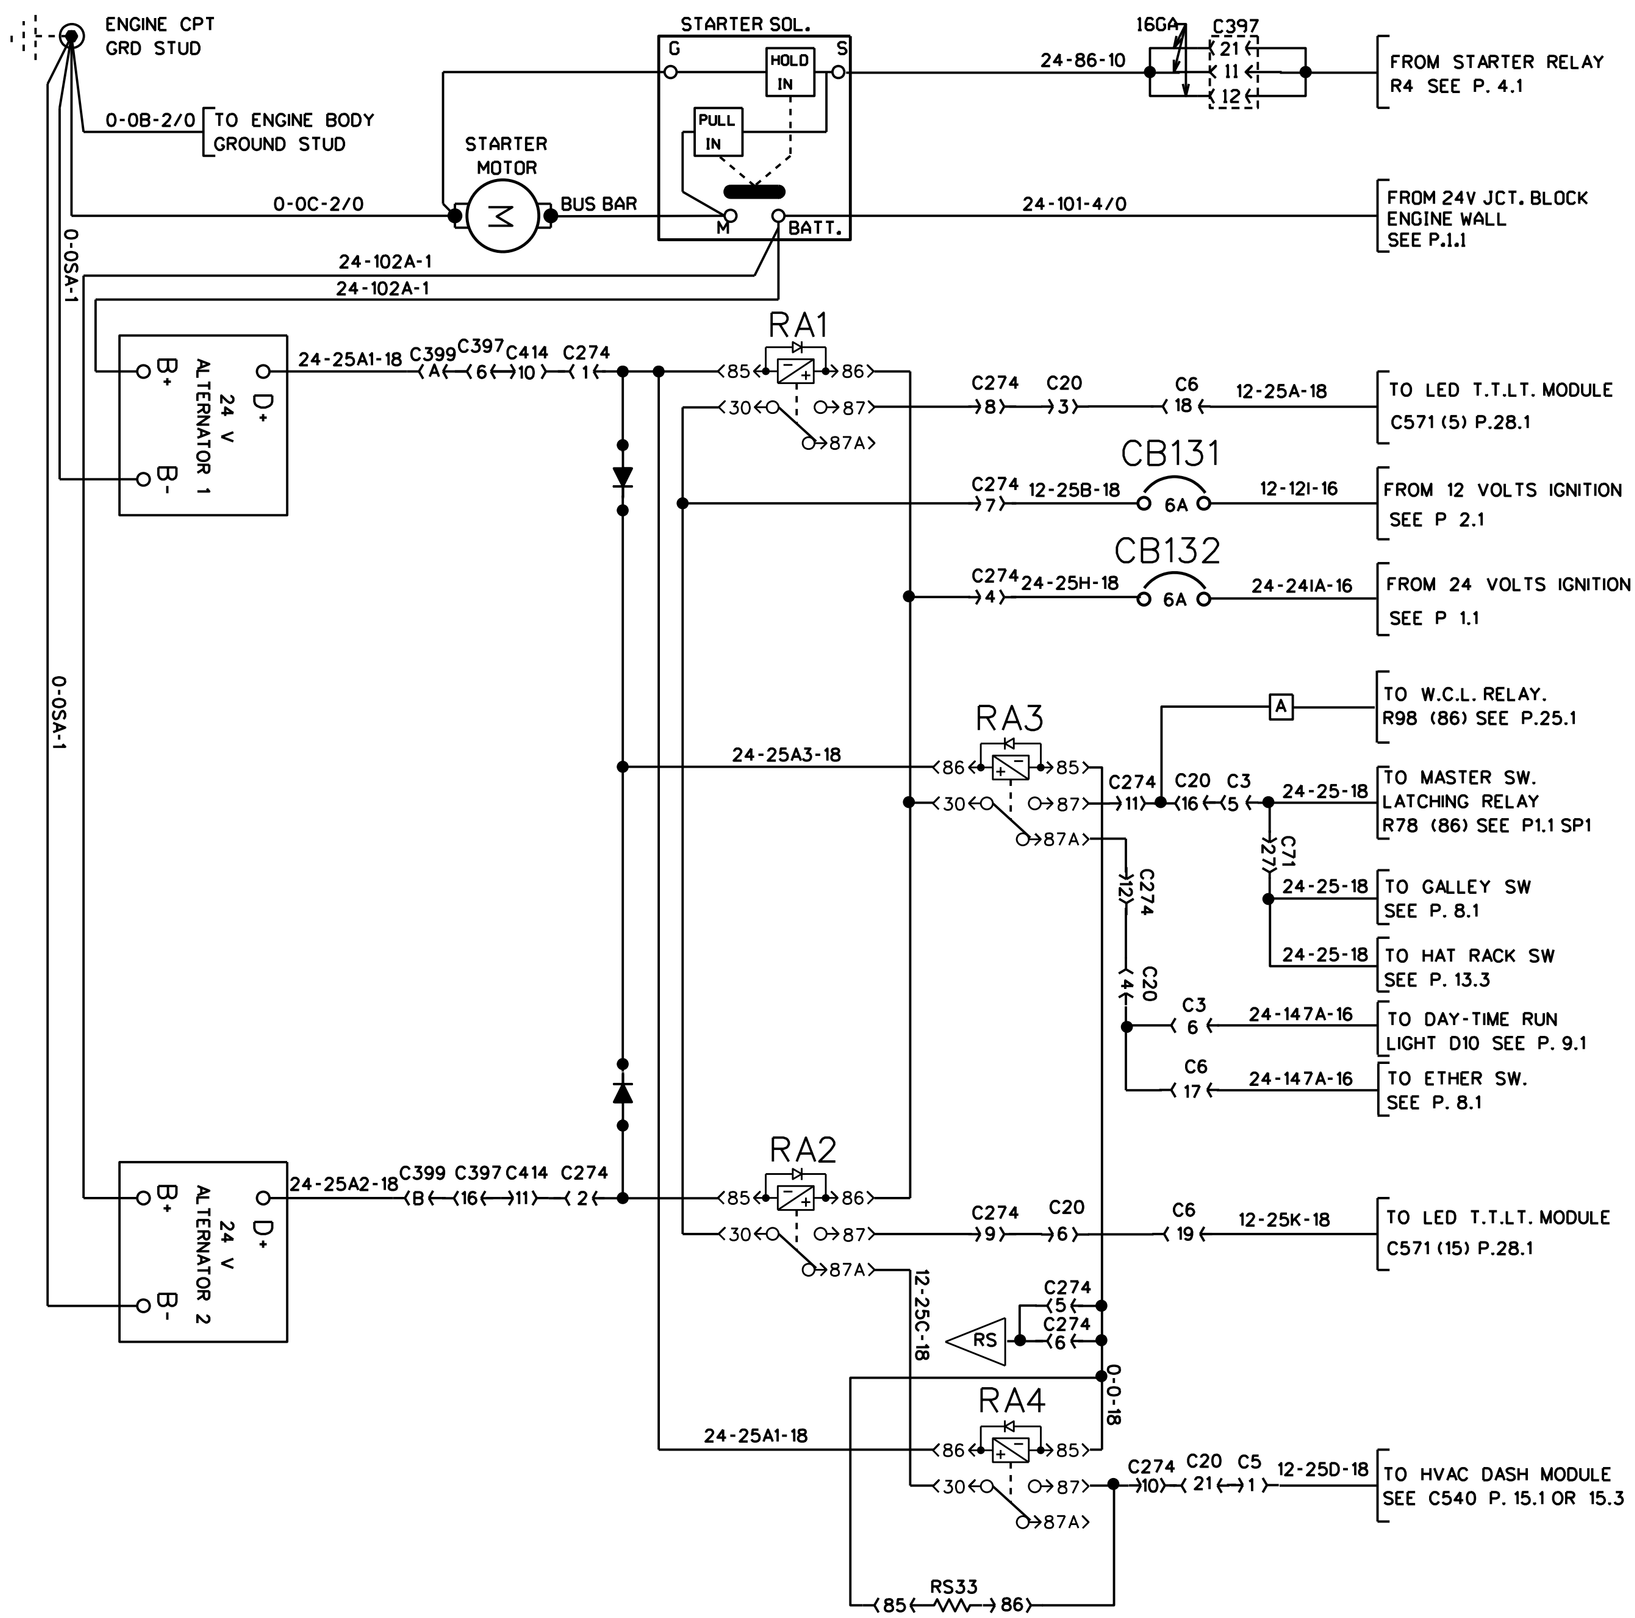

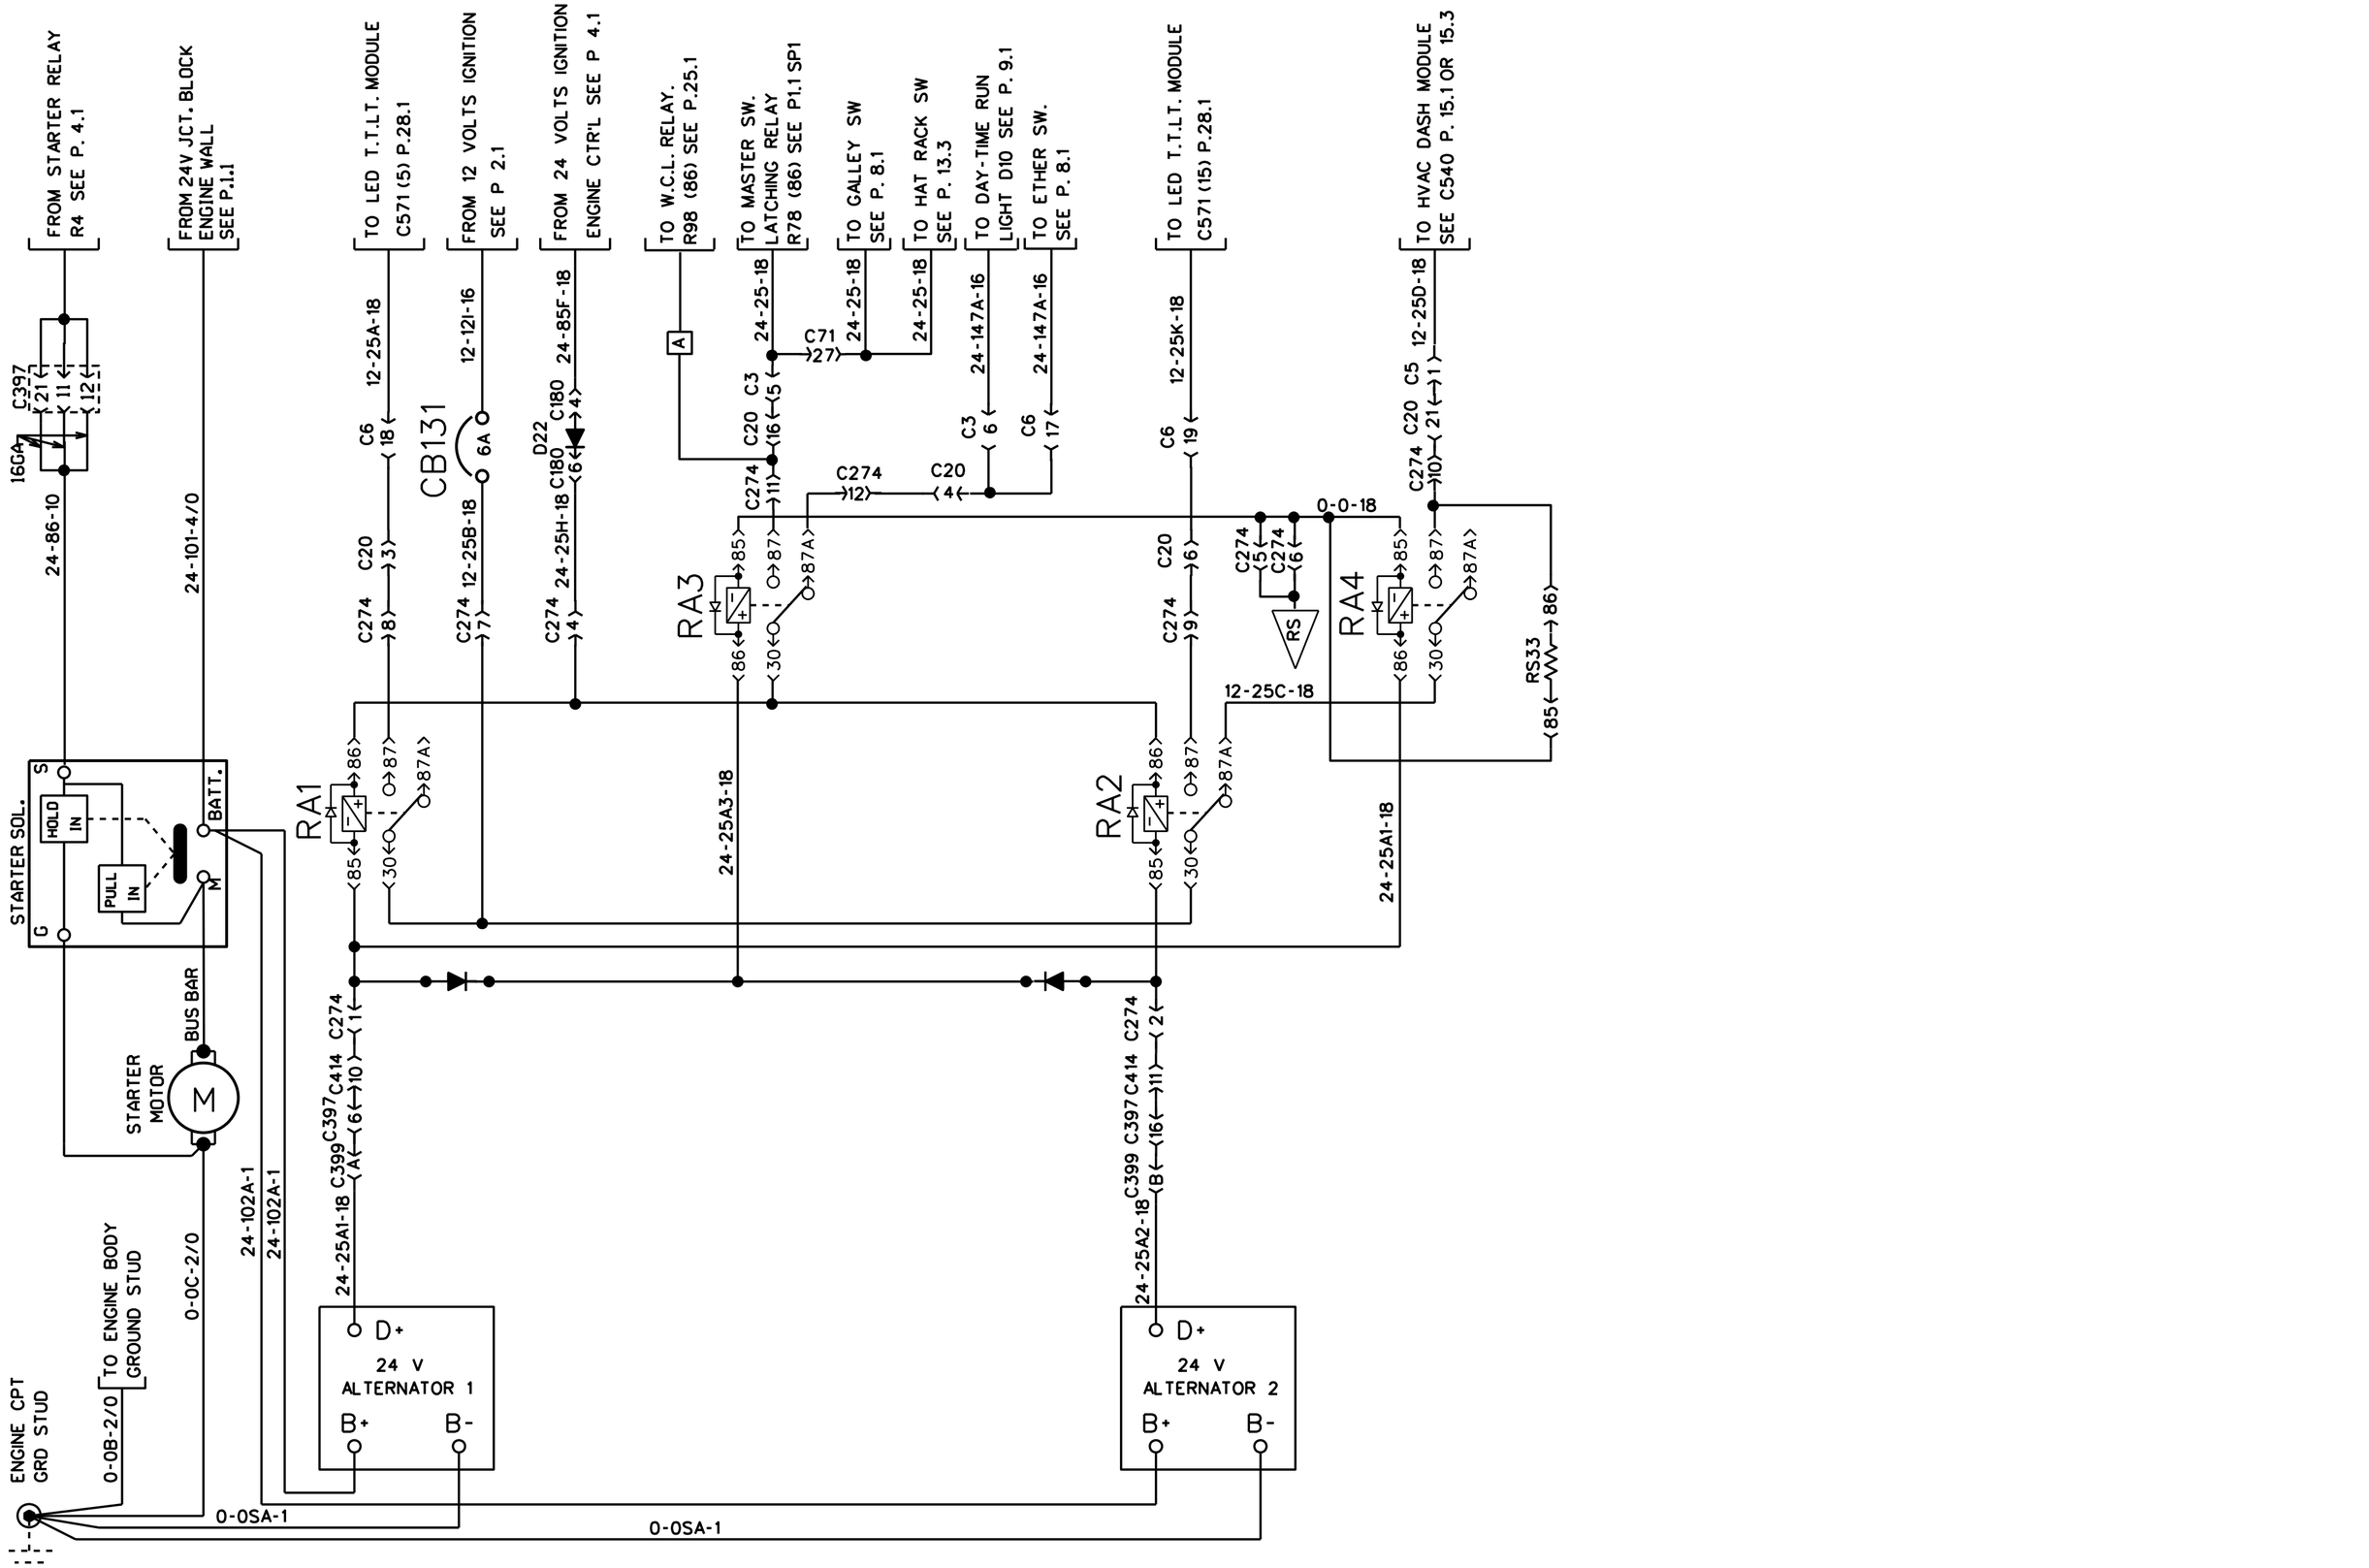

STARTER & ALTERNATOR BOSCH

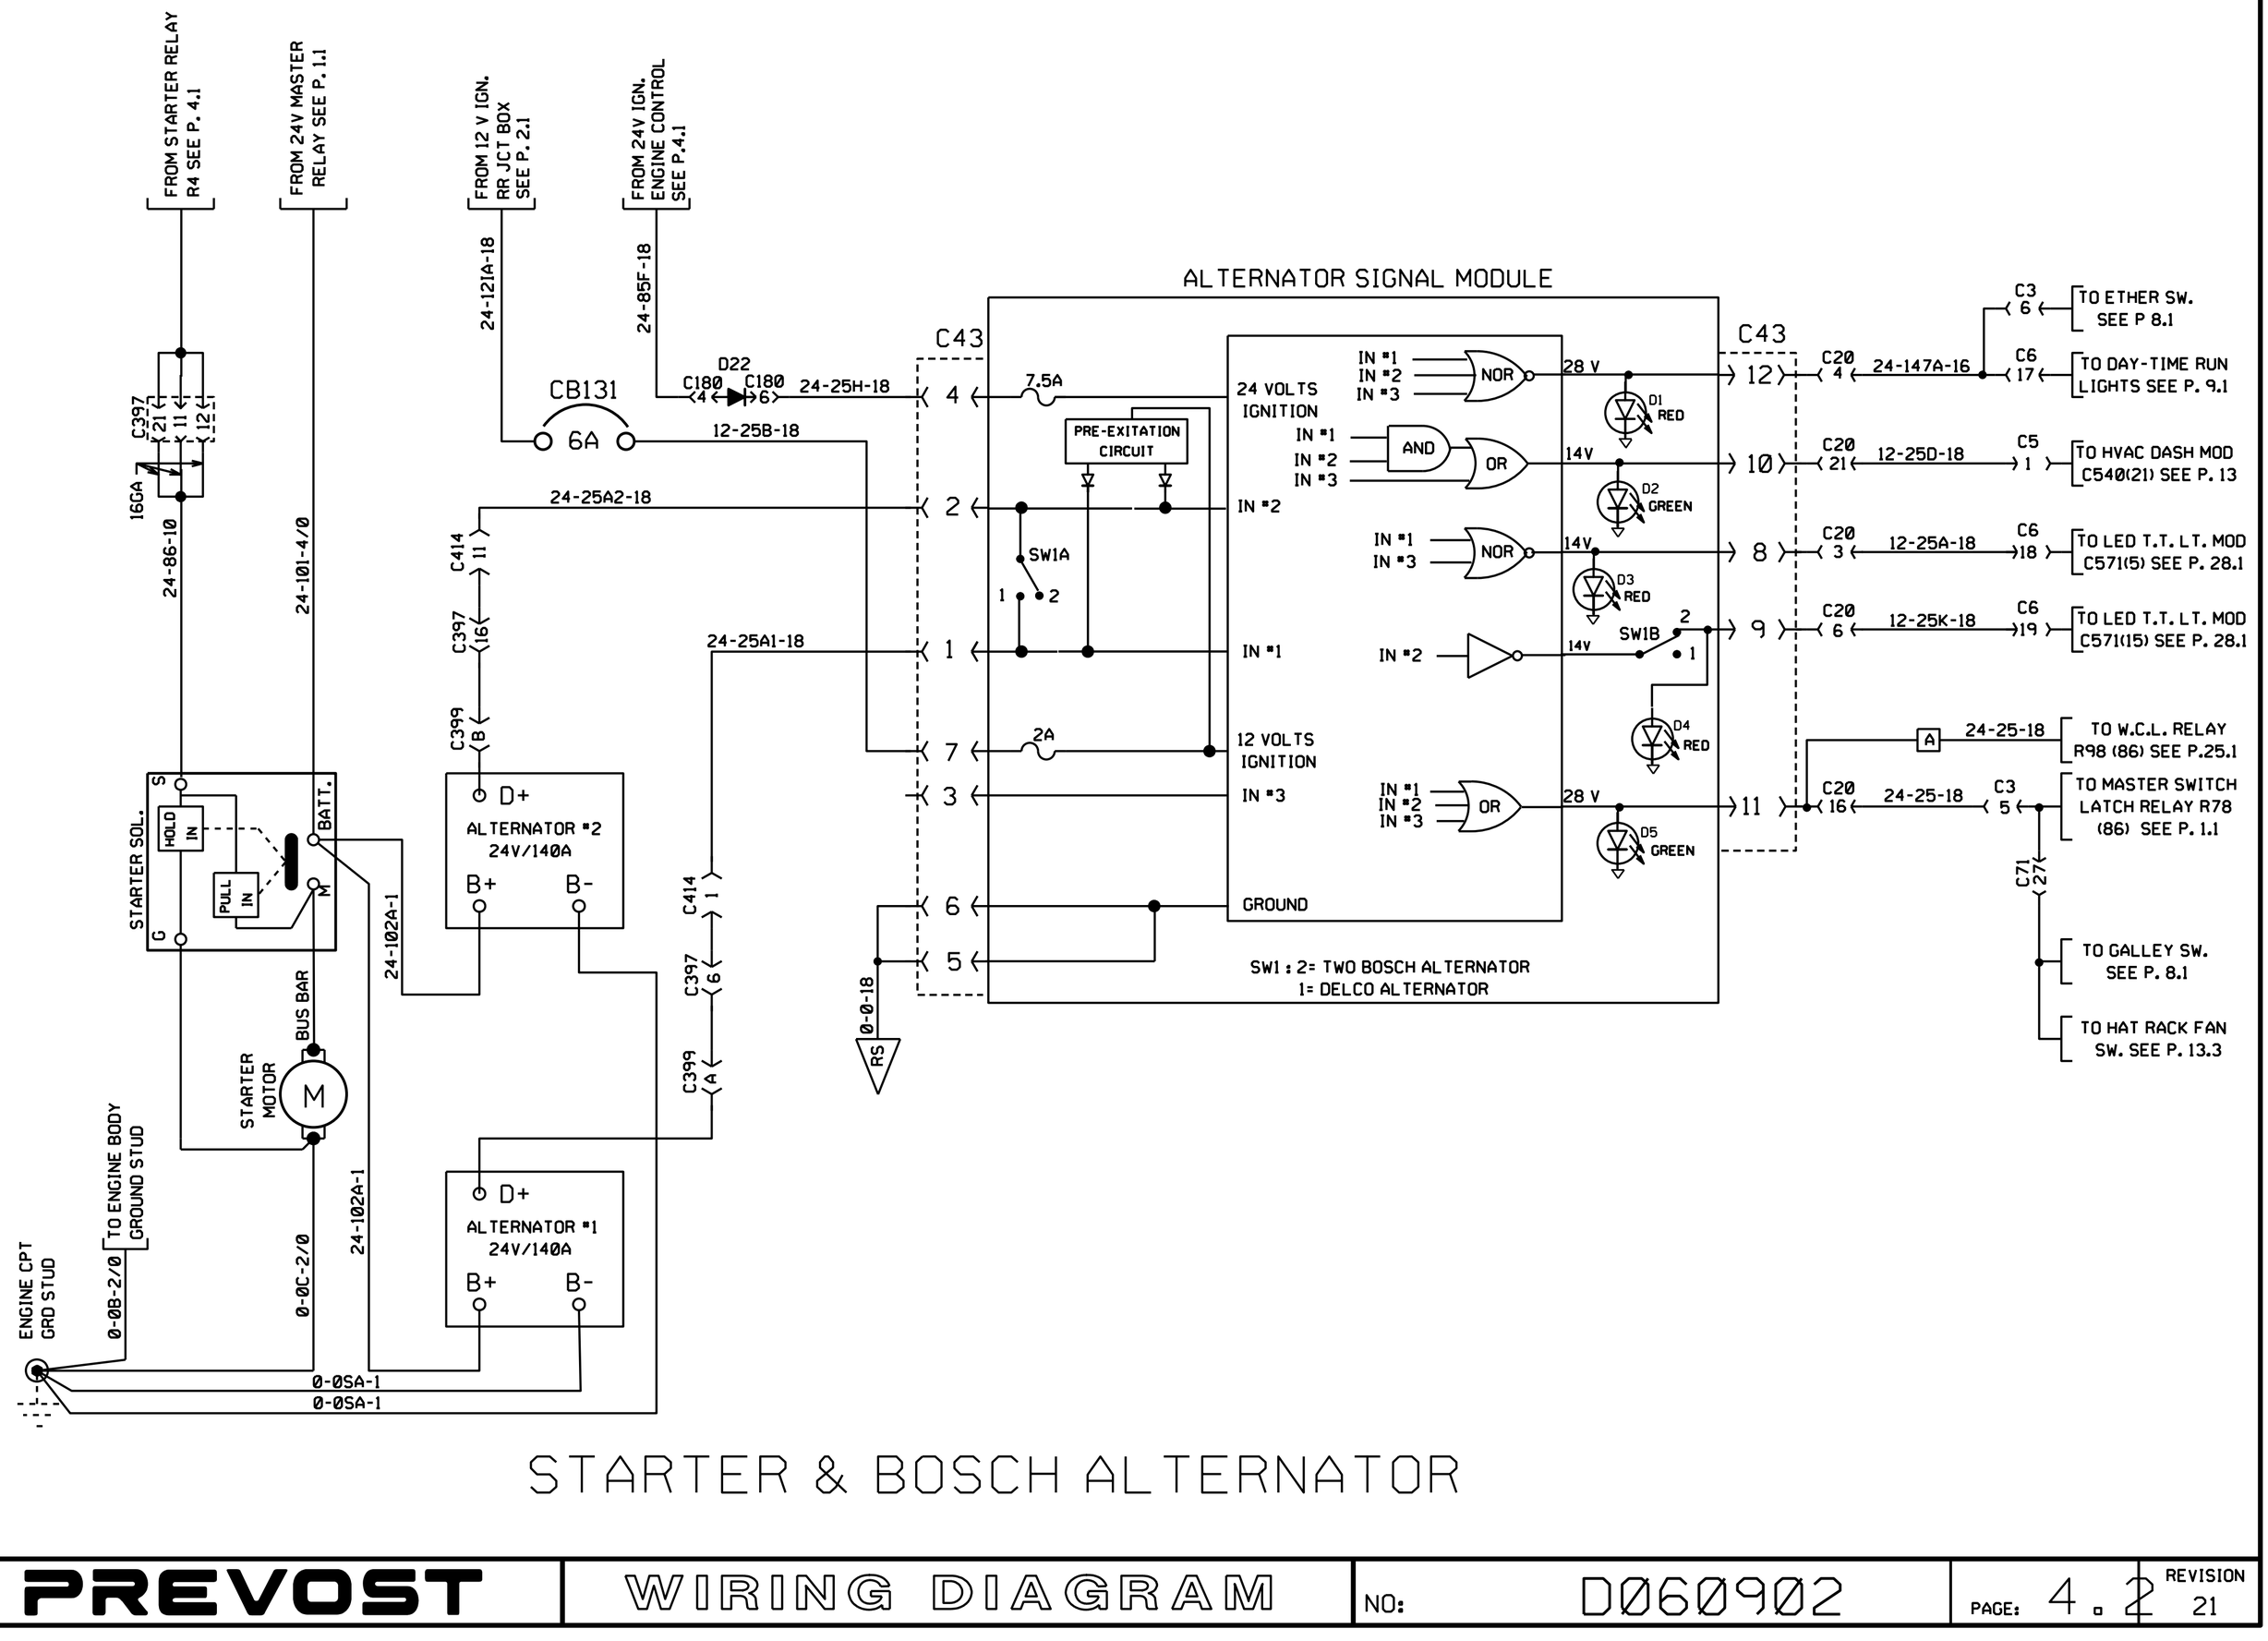

STARTER & BOSCH ALTERNATOR

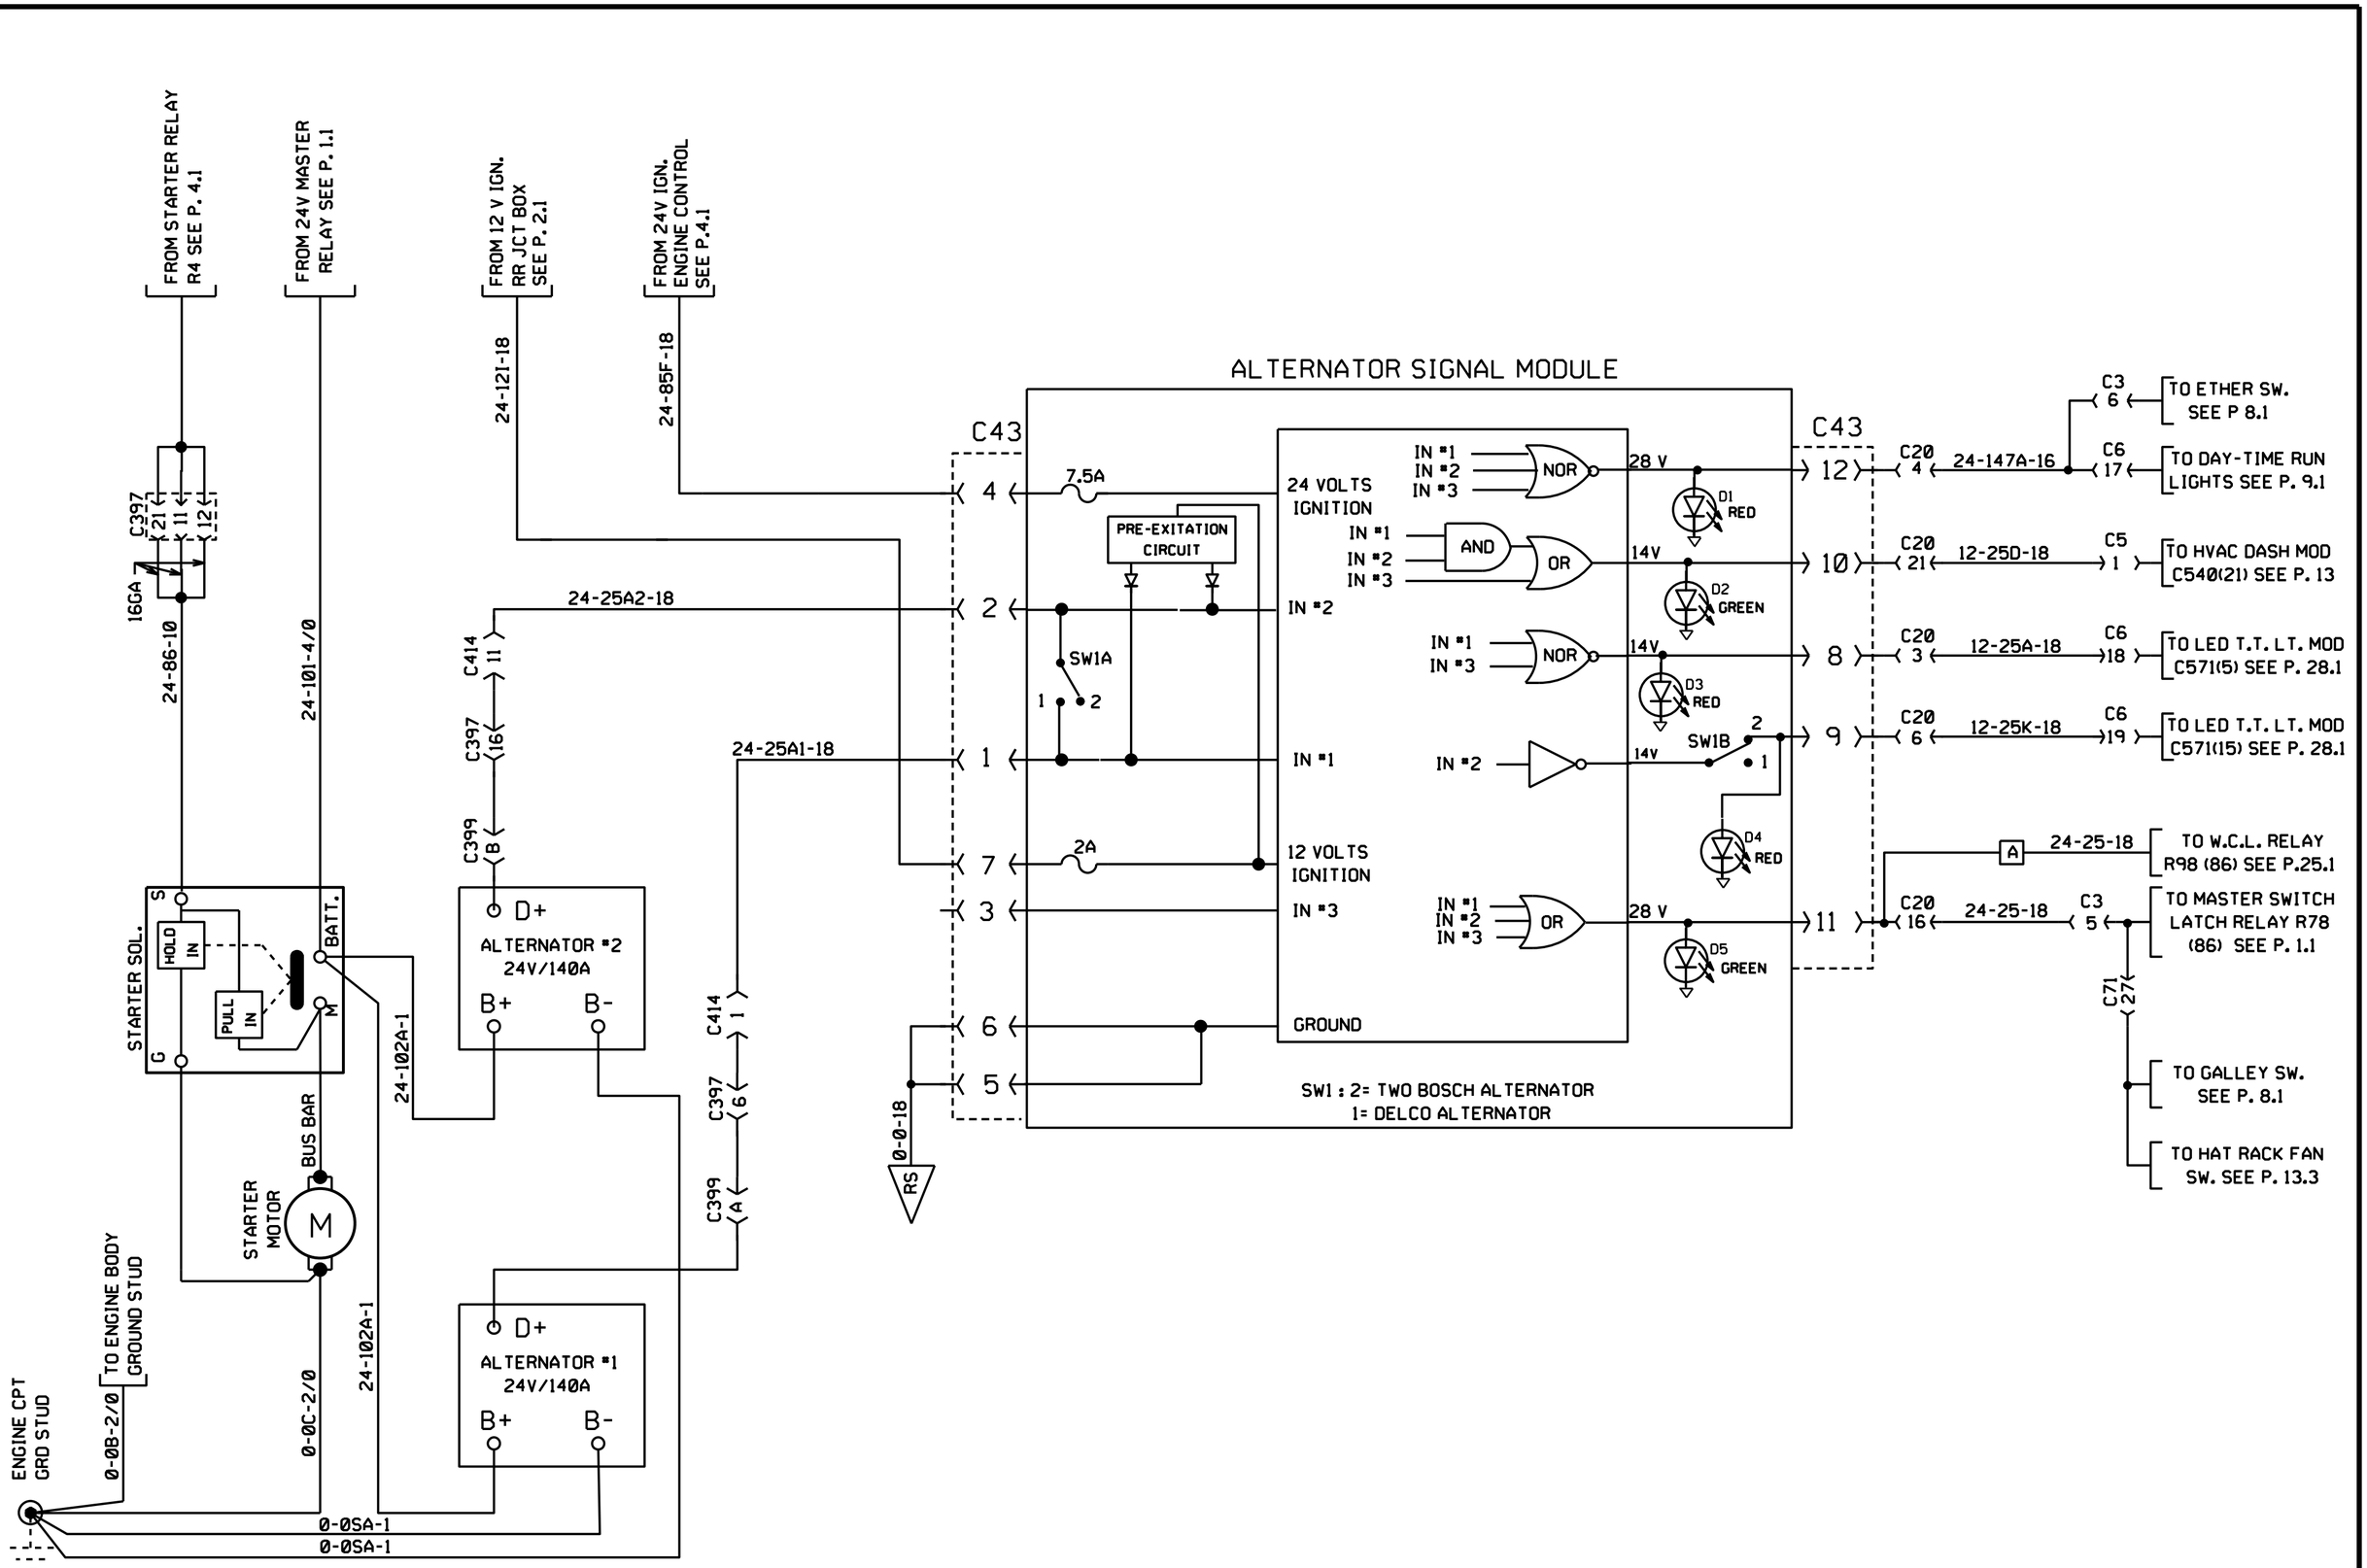

STARTER & BOSCH ALTERNATOR

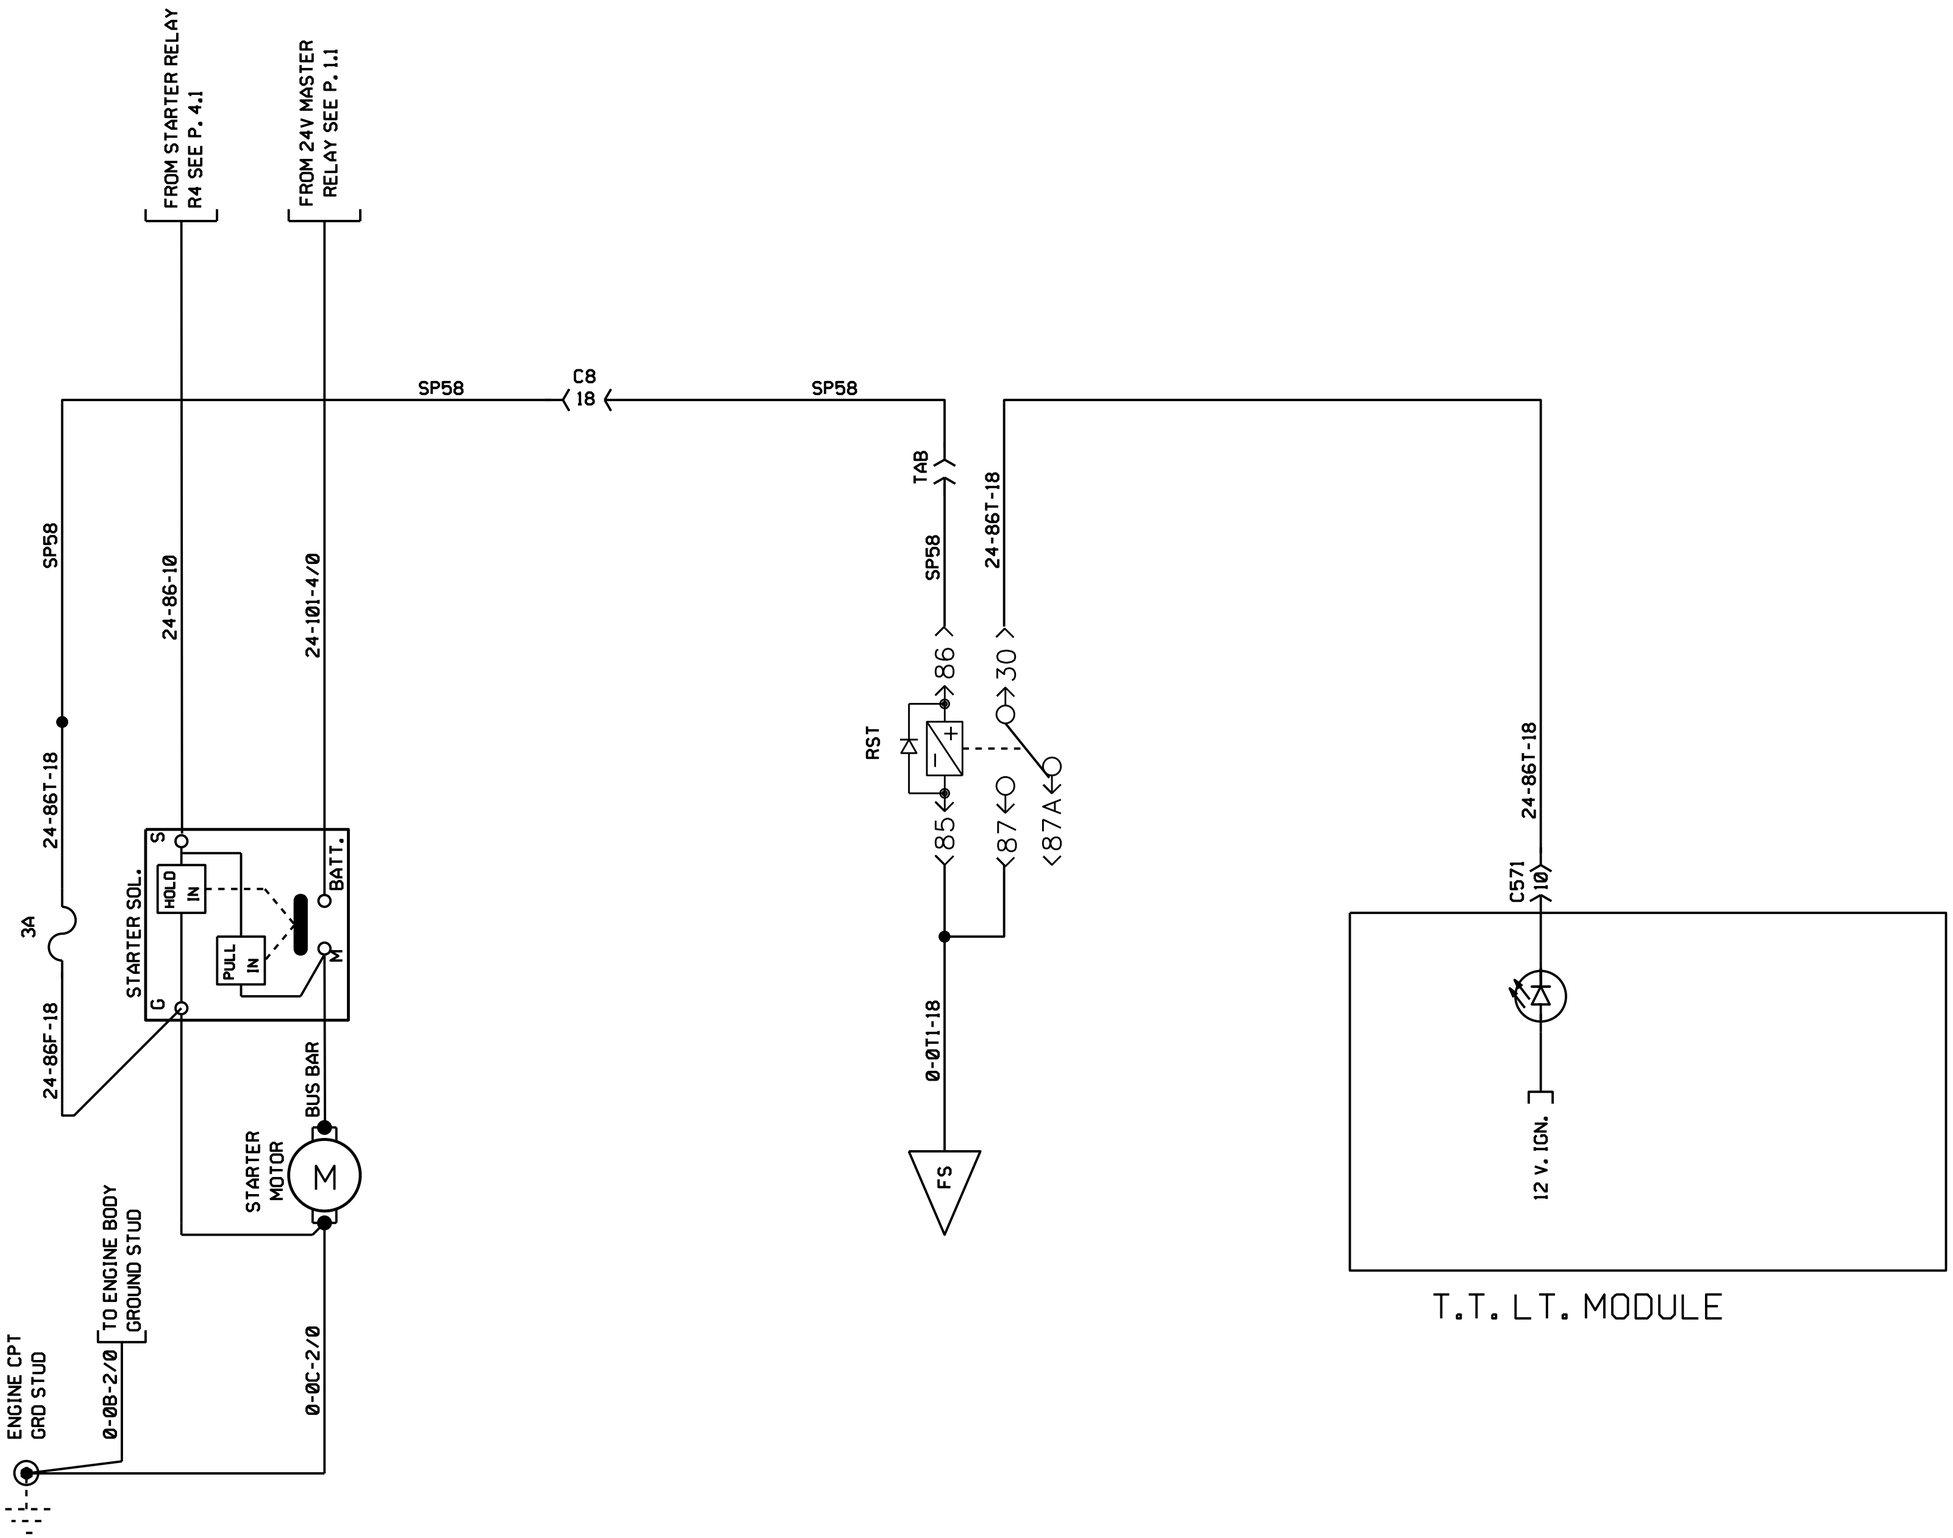

RETROFIT TELL-TALE STARTER ON

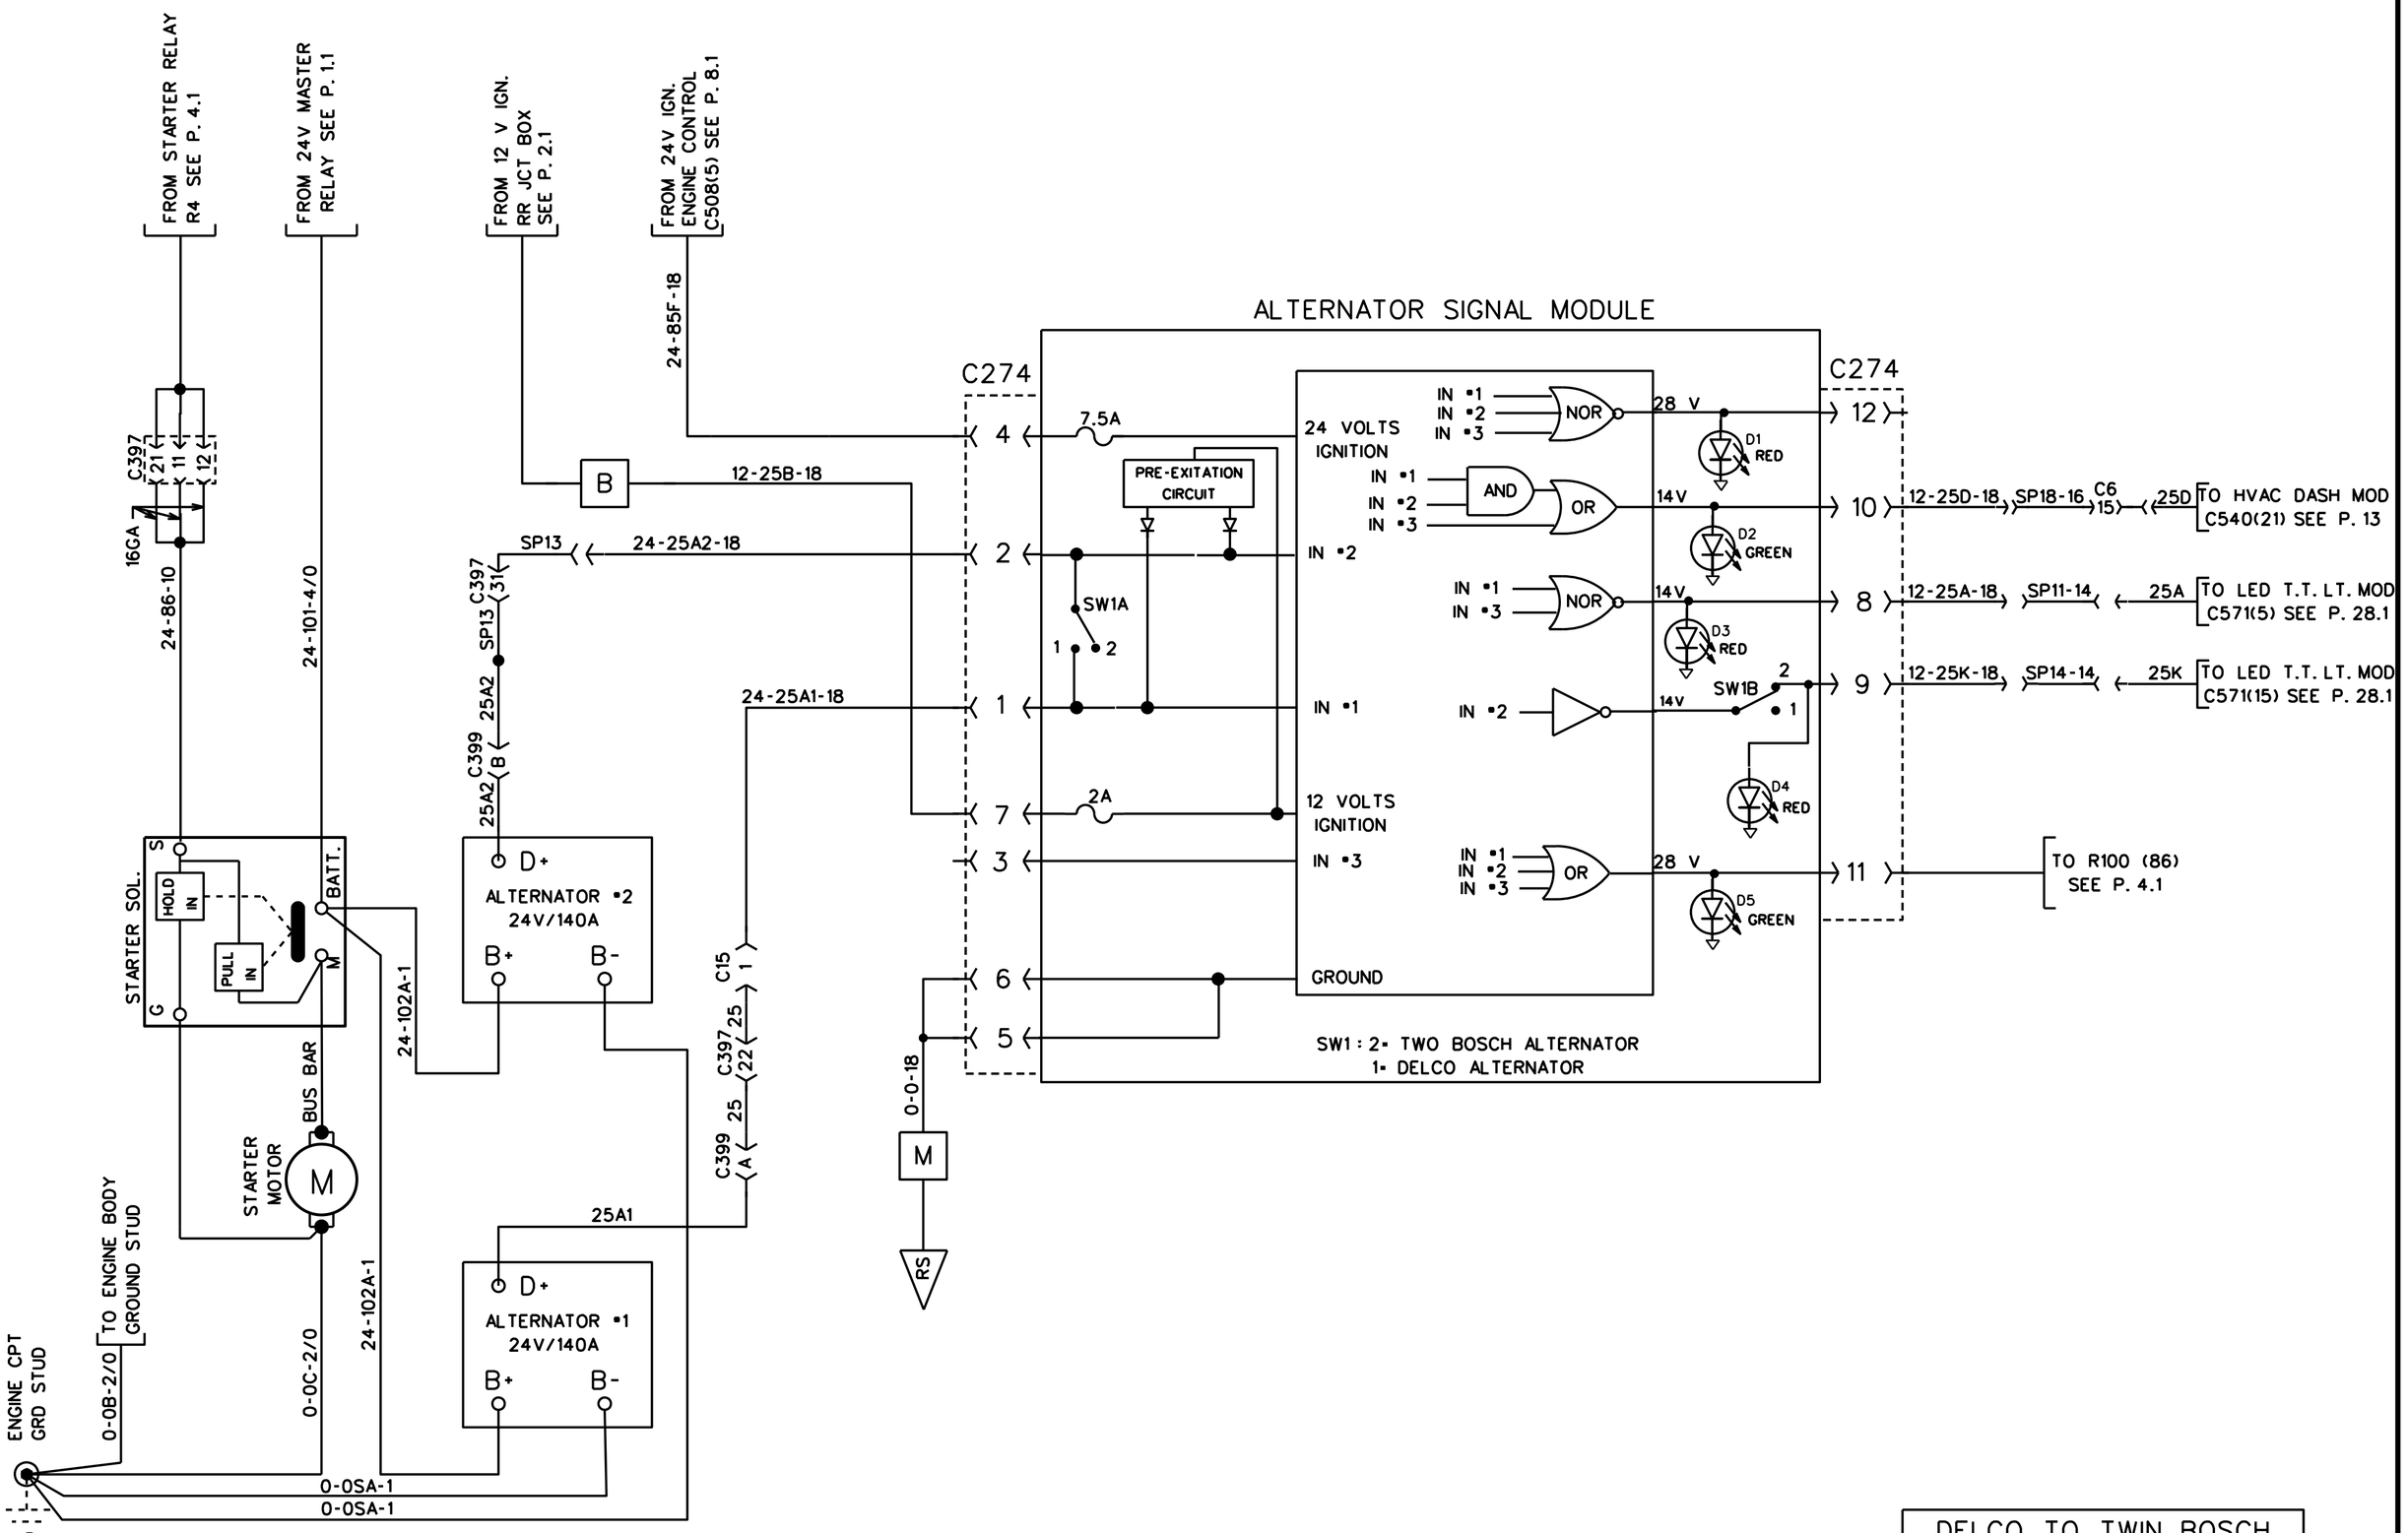

STARTER & BOSCH ALTERNATOR

DELCO TO TWIN BOSCH ALTERNATOR CONVERSION W2234,W2285 TO X2901 EXCEPT X2831

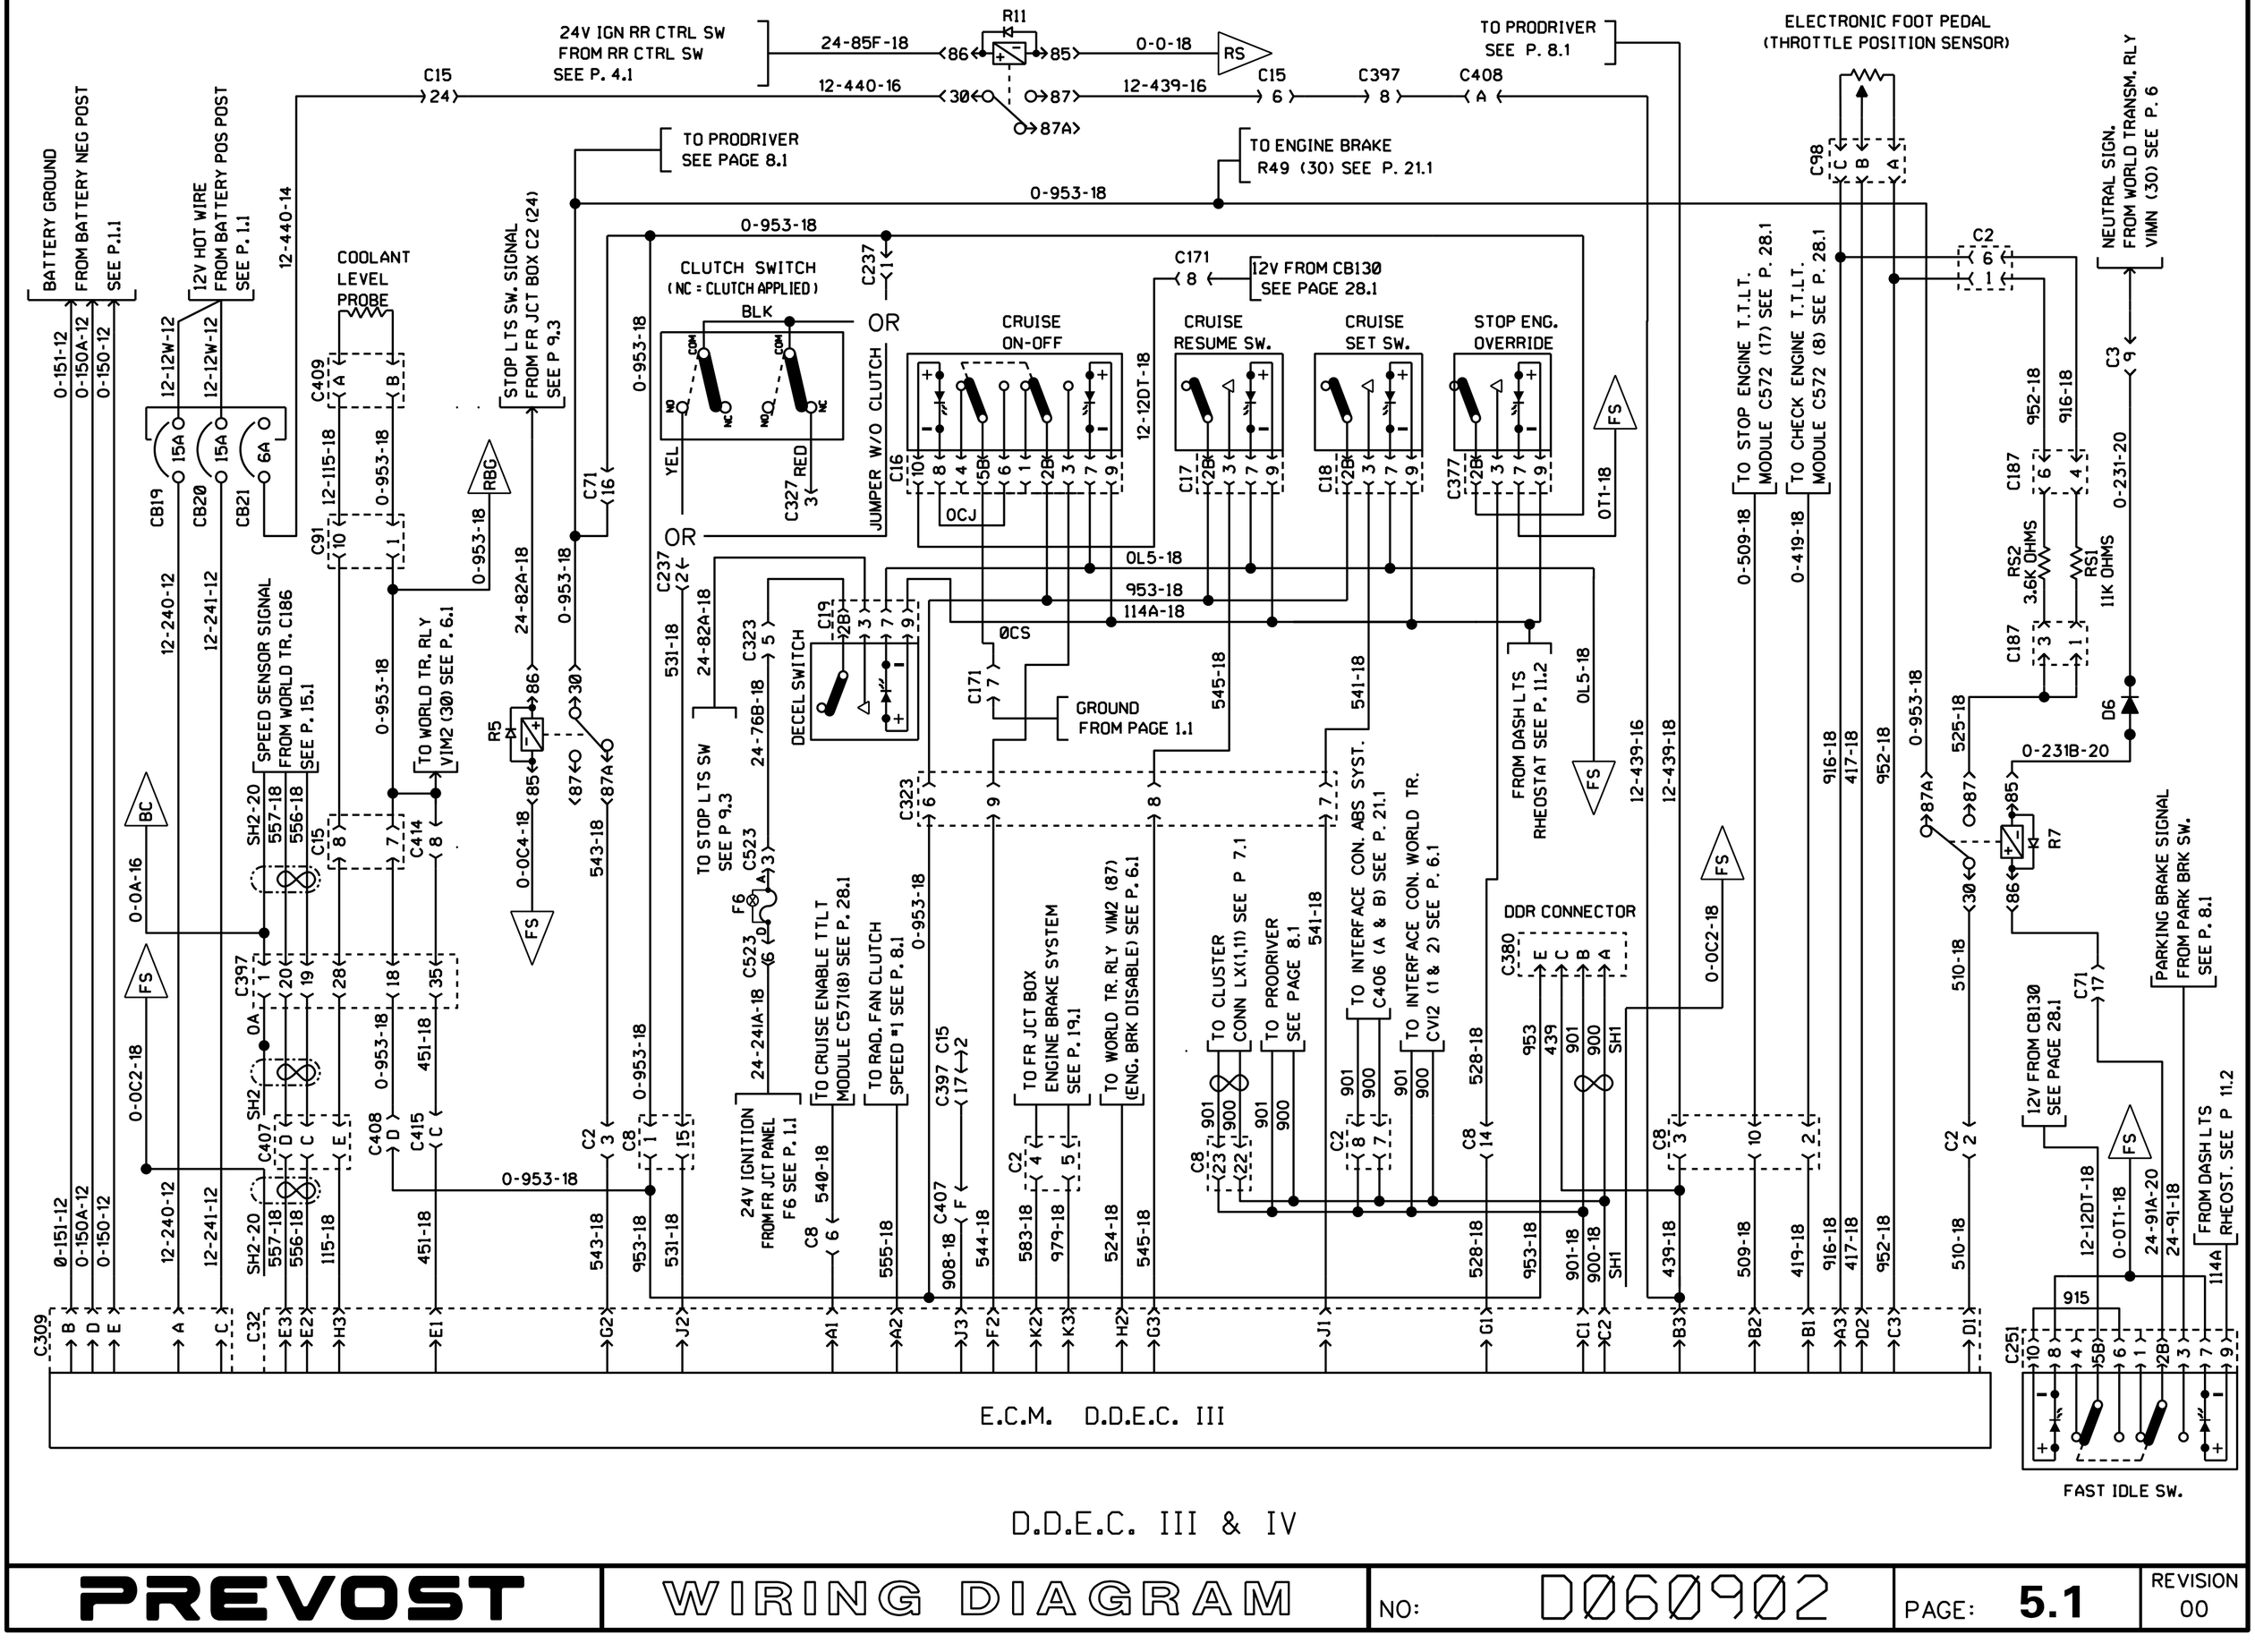

D.D.E.C. III & IV

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 5.1	REVISION 00

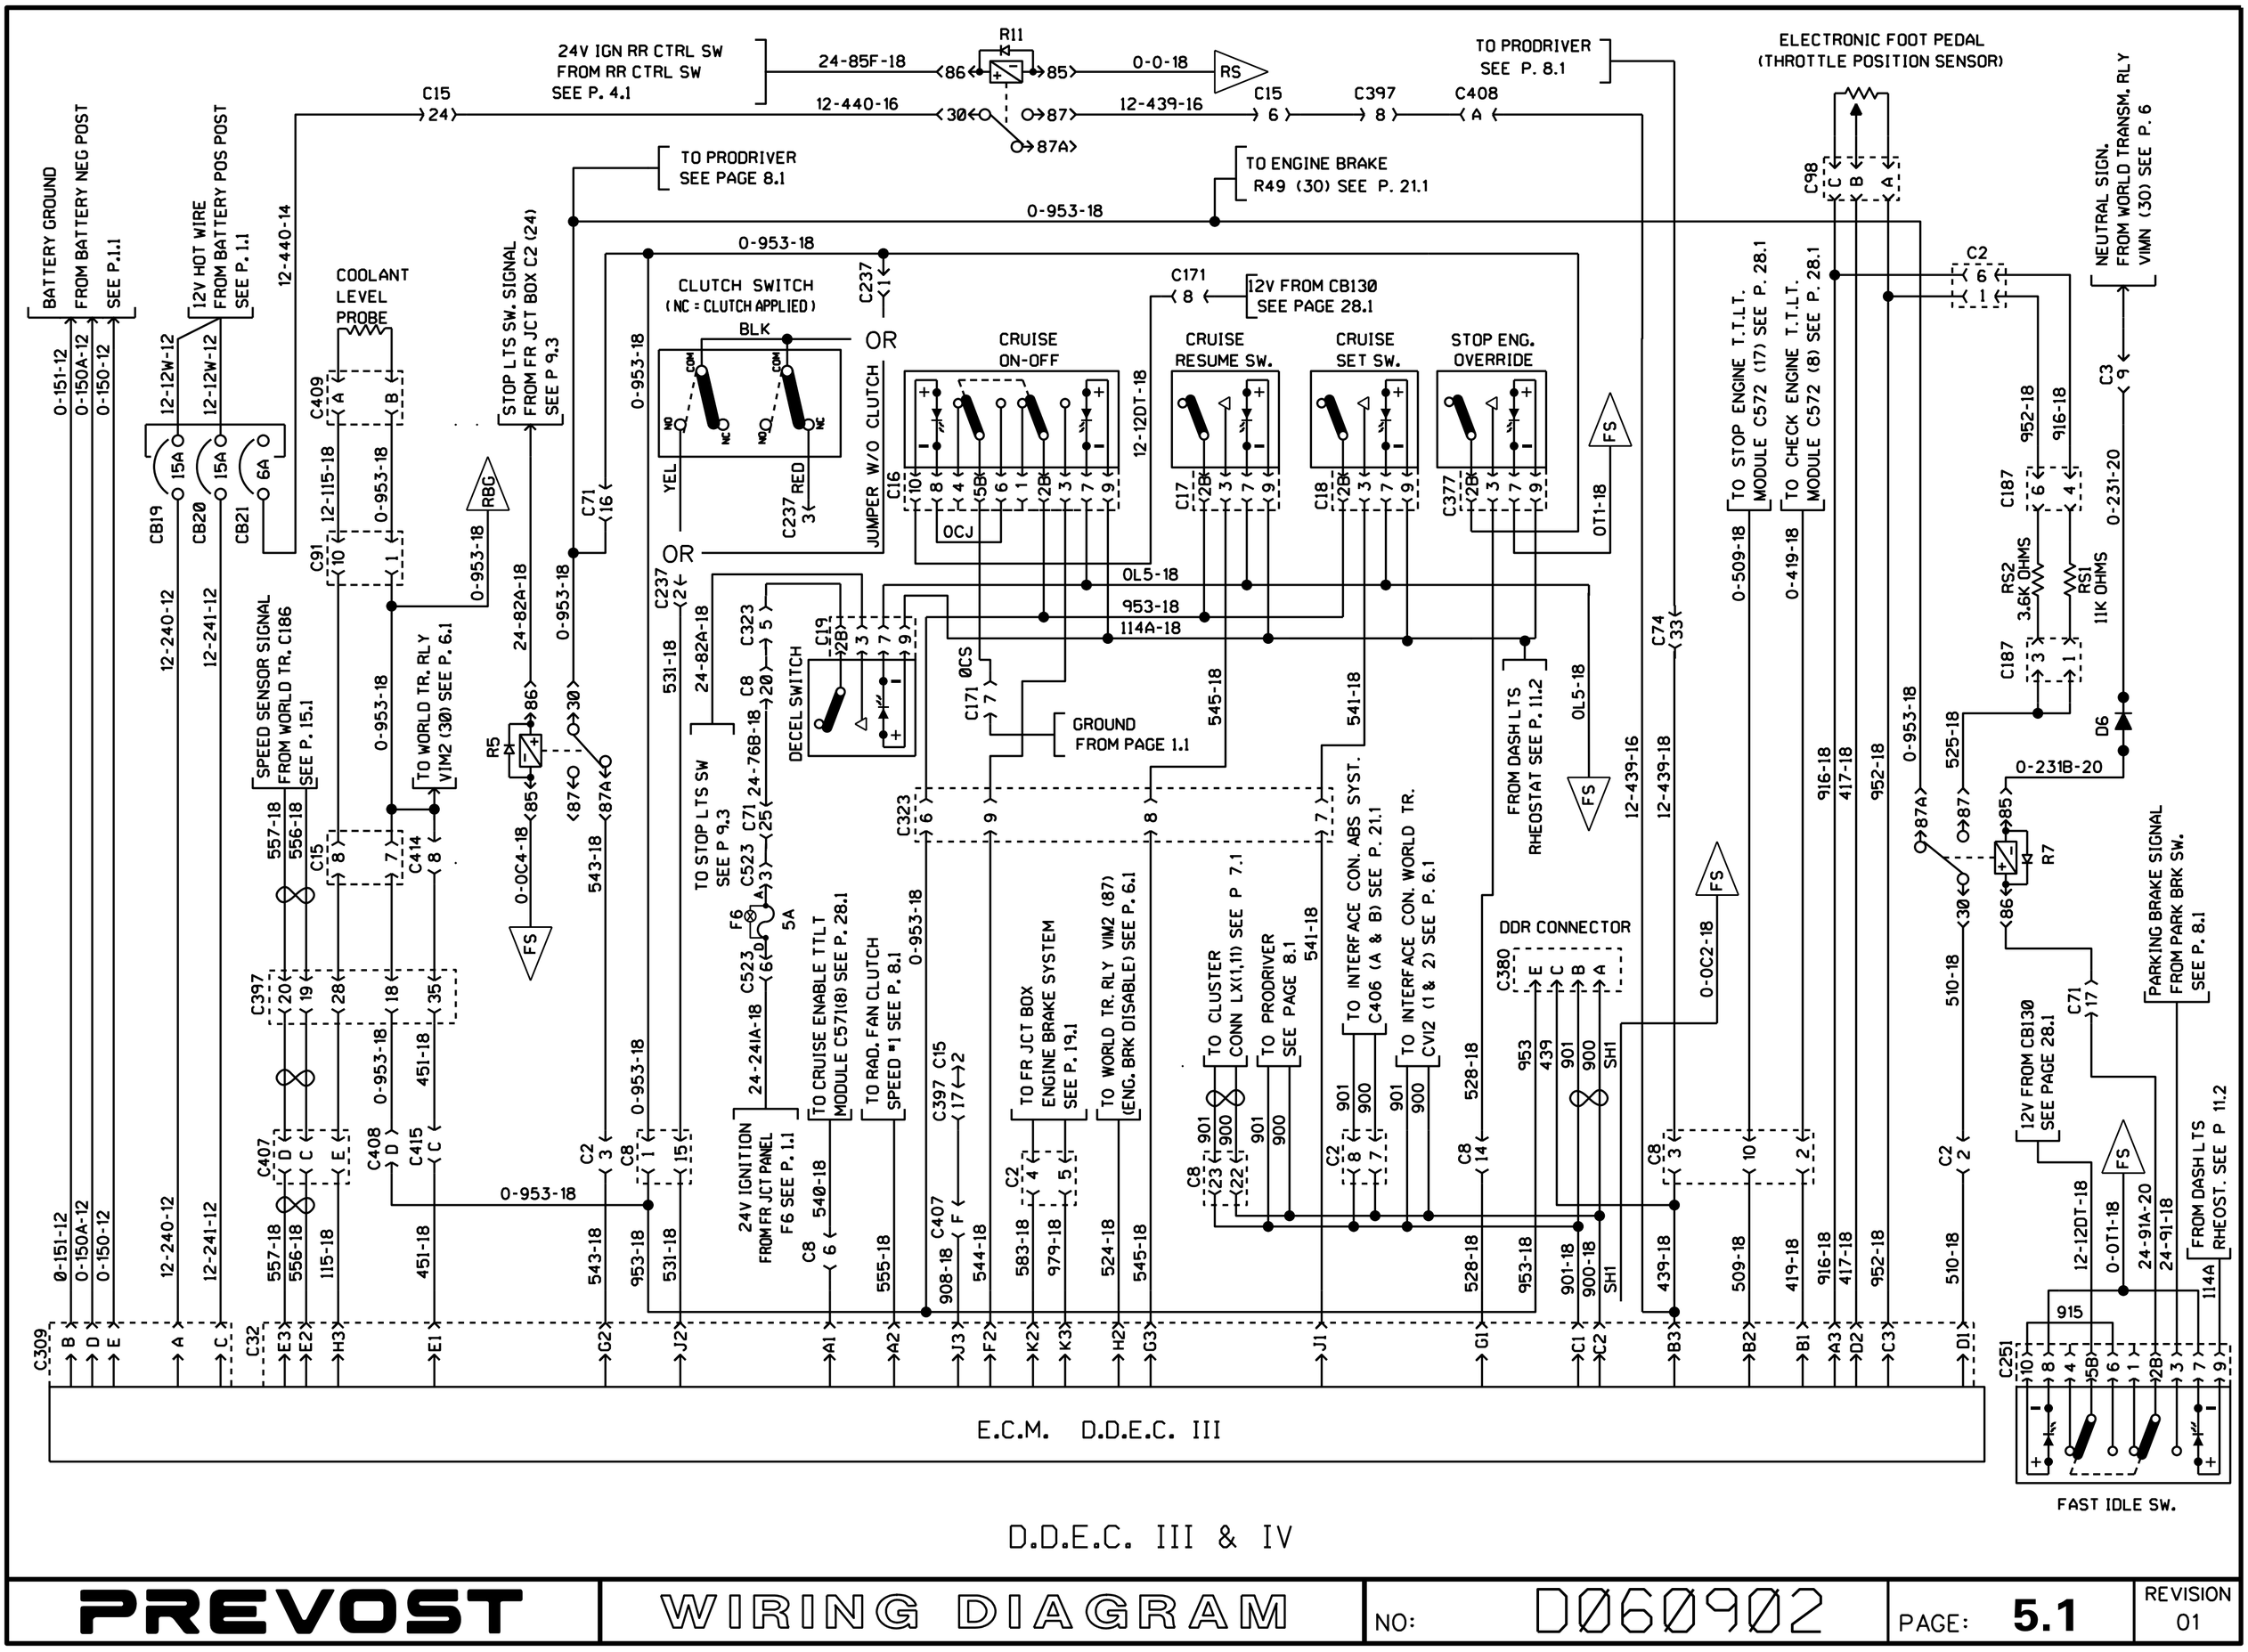

D.D.E.C. III & IV

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 5.1	REVISION 01

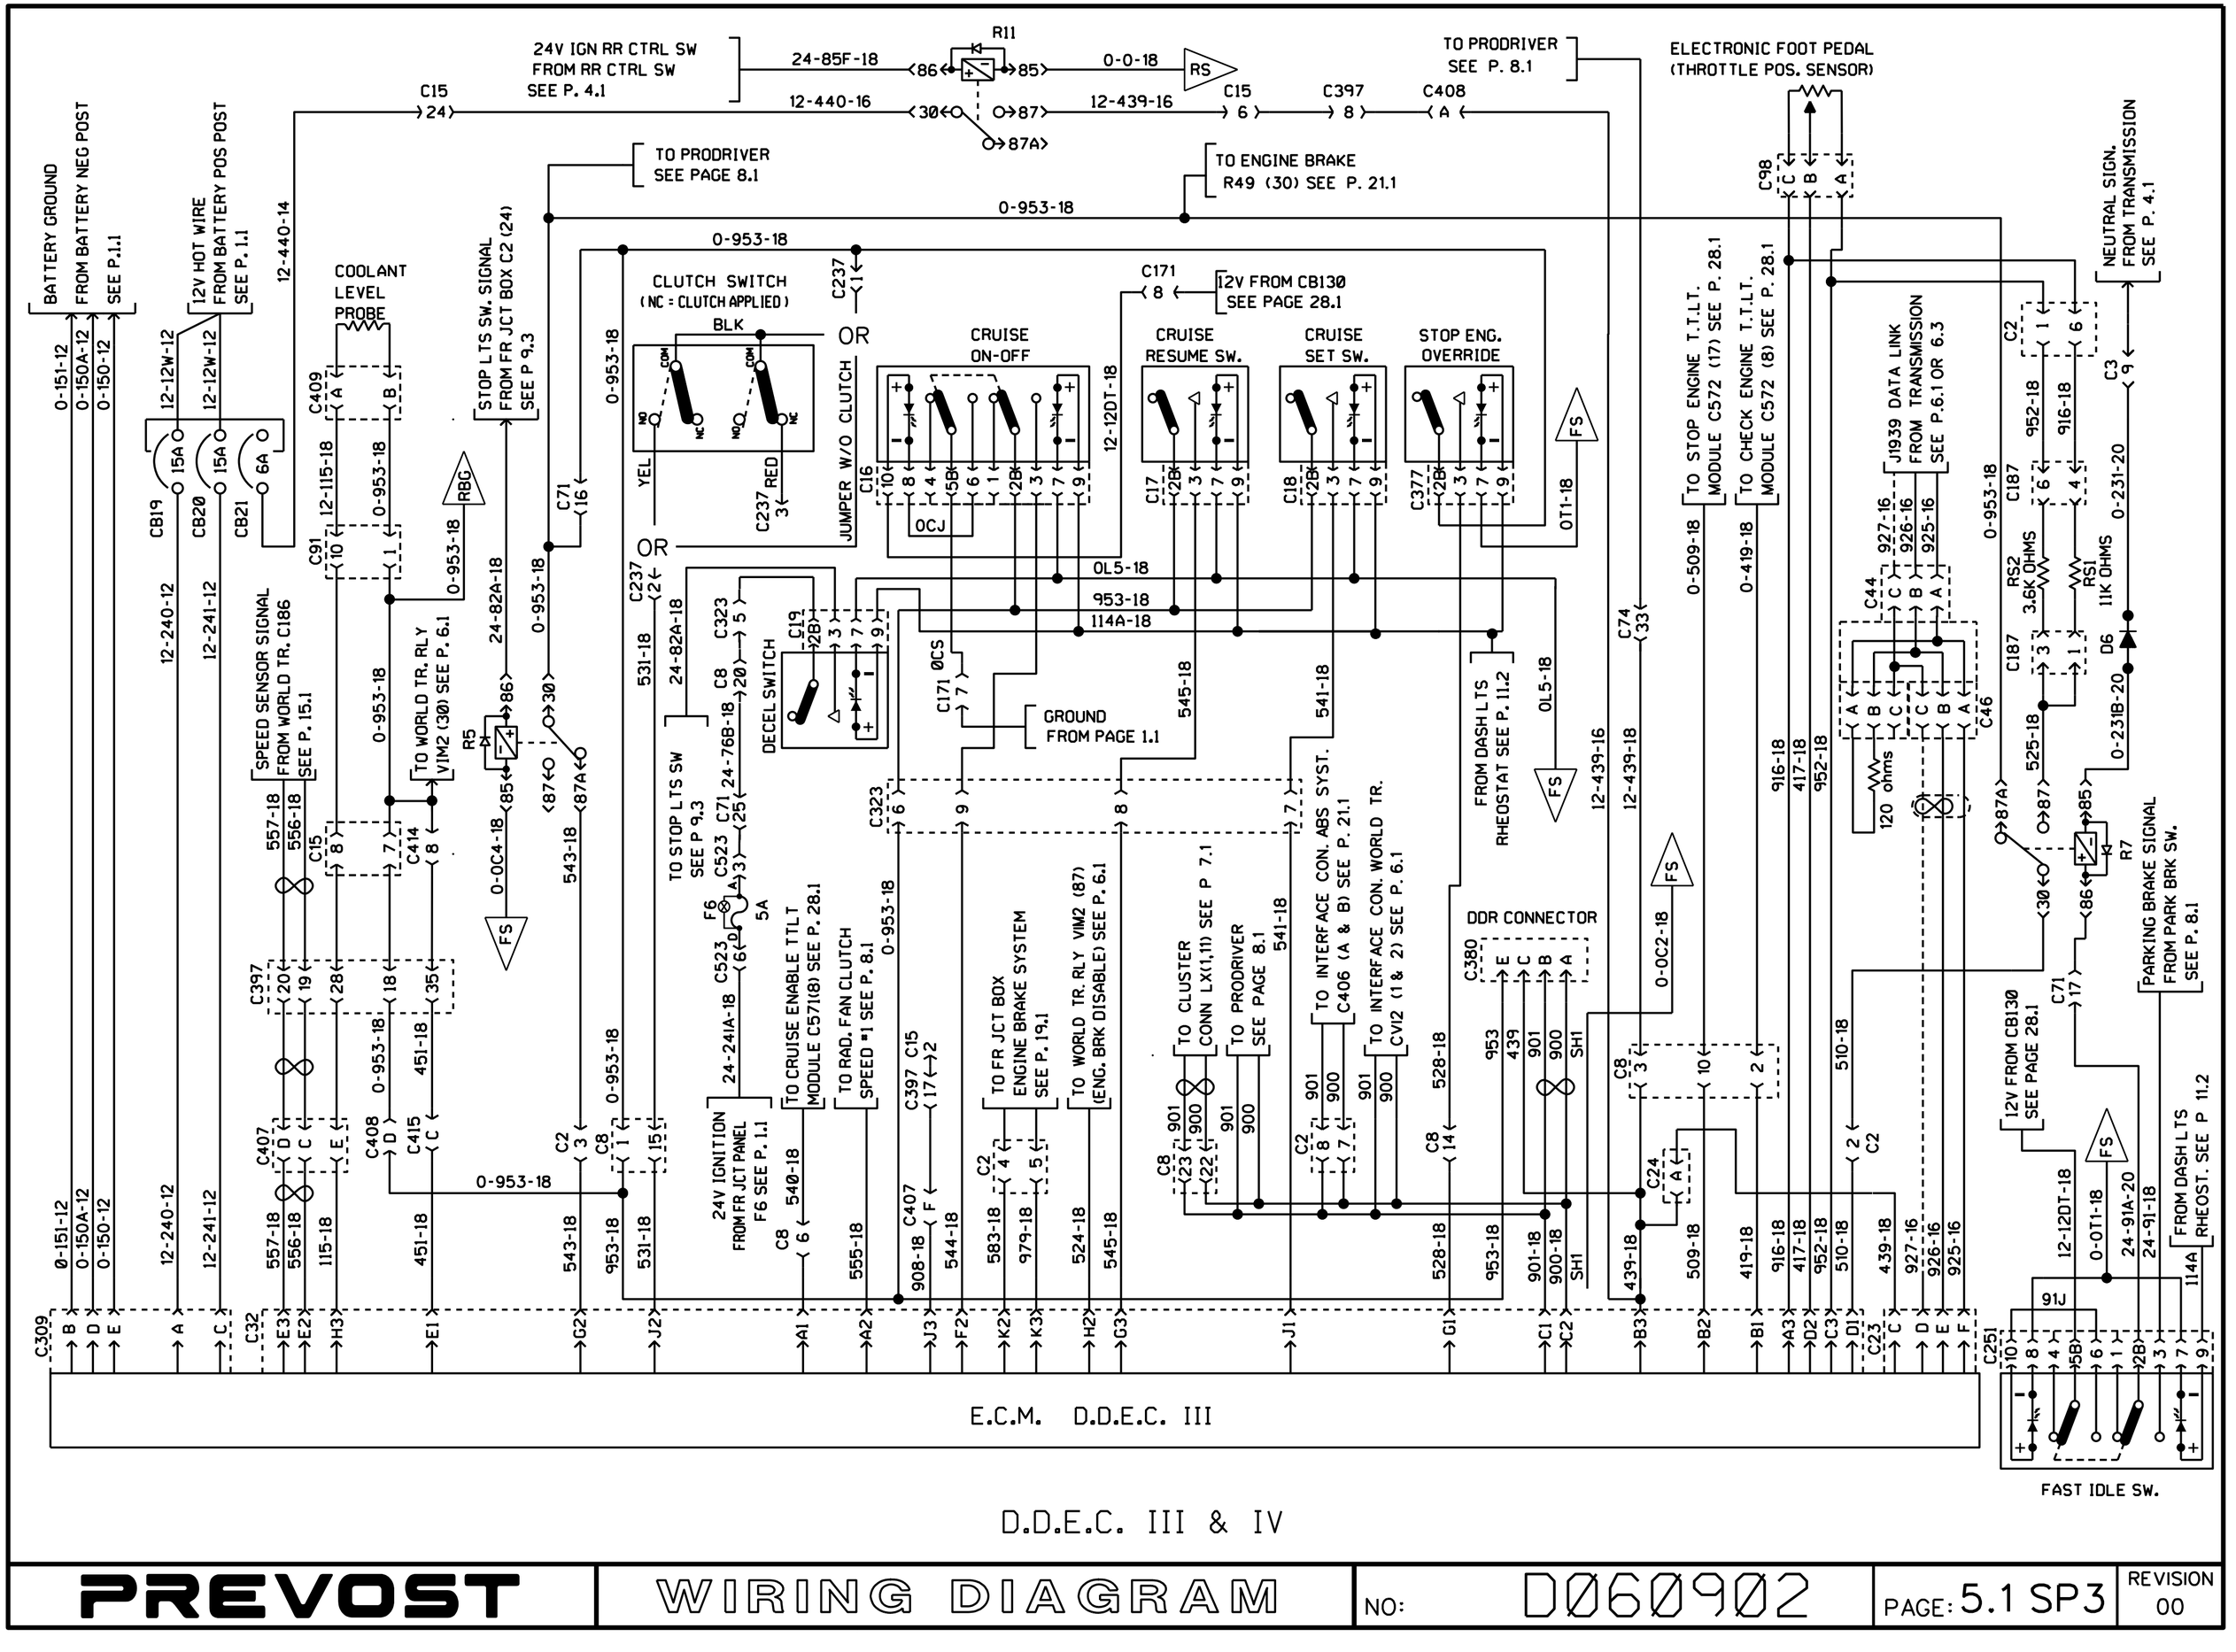
BATTERY GROUND
FROM BATTERY NEG POST
SEE P.1.1
12V HOT WIRE
FROM BATTERY POS POST
SEE P. 1.1
24V IGN RR CTRL SW
FROM RR CTRL SW
SEE P. 4.1
TO PRODRIVER
SEE P. 8.1
TO ENGINE BRAKE
R49 (30) SEE P. 21.1
ELECTRONIC FOOT PEDAL
(THROTTLE POS. SENSOR)
COOLANT
LEVEL
PROBE
CLUTCH SWITCH
(NC = CLUTCH APPLIED)
JUMPER W/O CLUTCH
CRUISE
ON-OFF
CRUISE
RESUME SW.
CRUISE
SET SW.
STOP ENG.
OVERRIDE
12V FROM CB130
SEE PAGE 28.1
STOP LTS SW. SIGNAL
FROM FR JCT BOX C2 (24)
SEE P 9.3
SPEED SENSOR SIGNAL
FROM WORLD TR. C186
SEE P. 15.1
TO WORLD TR. RLY
VIM2 (30) SEE P. 6.1
DECEL SWITCH
GROUND
FROM PAGE 1.1
FROM DASH LTS
RHEOSTAT SEE P. 11.2
TO STOP ENGINE T.T.L.T.
MODULE C572 (17) SEE P. 28.1
TO CHECK ENGINE T.T.L.T.
MODULE C572 (8) SEE P. 28.1
J1939 DATA LINK
FROM TRANSMISSION
SEE P. 6.1 OR 6.3
NEUTRAL SIGN.
FROM TRANSMISSION
SEE P. 4.1
TO STOP LTS SW
SEE P 9.3
TO CRUISE ENABLE TTL T
MODULE C571(8) SEE P. 28.1
TO RAD. FAN CLUTCH
SPEED #1 SEE P. 8.1
24V IGNITION
FROM FR JCT PANEL
F6 SEE P. 1.1
TO FR JCT BOX
ENGINE BRAKE SYSTEM
SEE P. 19.1
TO WORLD TR. RLY VIM2 (87)
(ENG. BRK DISABLE) SEE P. 6.1
TO CLUSTER
CONN LX(1,11) SEE P 7.1
TO PRODRIVER
SEE PAGE 8.1
TO INTERFACE CON. A
C406 (A & B) SEE P.
TO INTERFACE CON. WORL
CVI2 (1 & 2) SEE P. 6.1
DDR CONNECTOR
12V FROM CB130
SEE PAGE 28.1
PARKING BRAKE SIGNAL
FROM PARK BRK SW.
SEE P. 8.1
FROM DASH LTS
RHEOST. SEE P 11.2
FAST IDLE SW.
E.C.M. D.D.E.C. III
D.D.E.C. III & IV

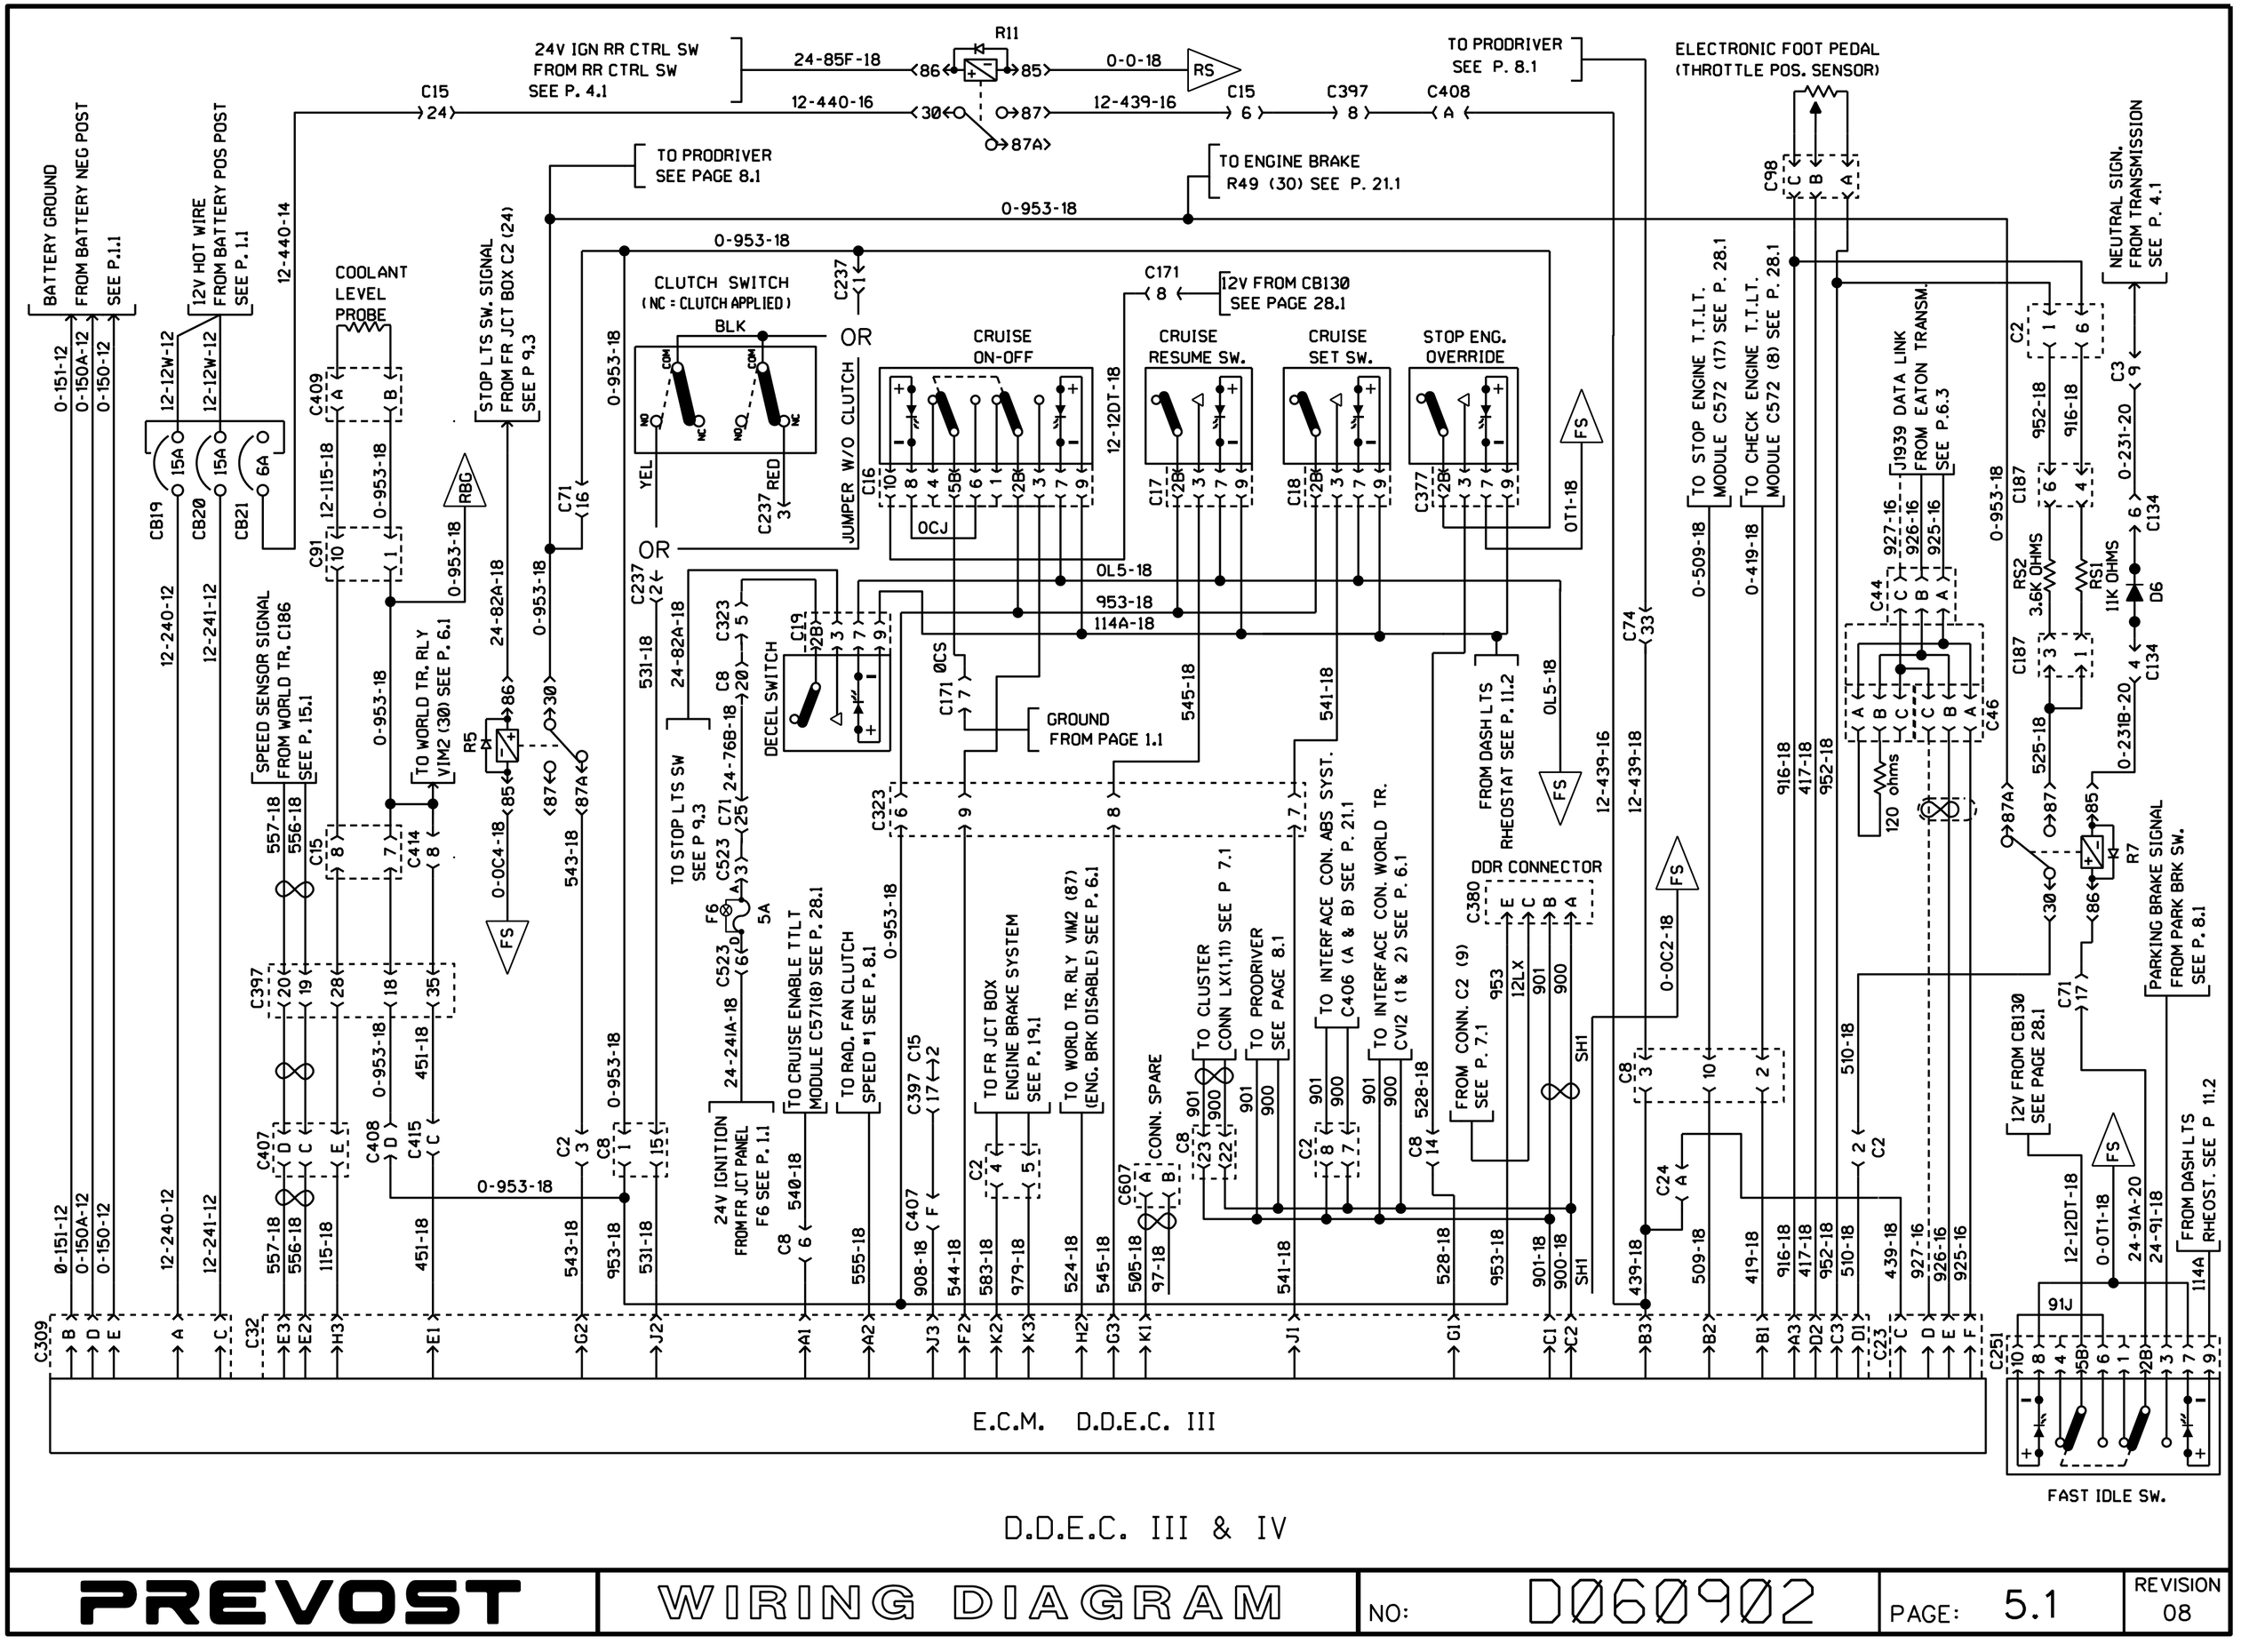

D.D.E.C. III & IV

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 5.1	REVISION 08

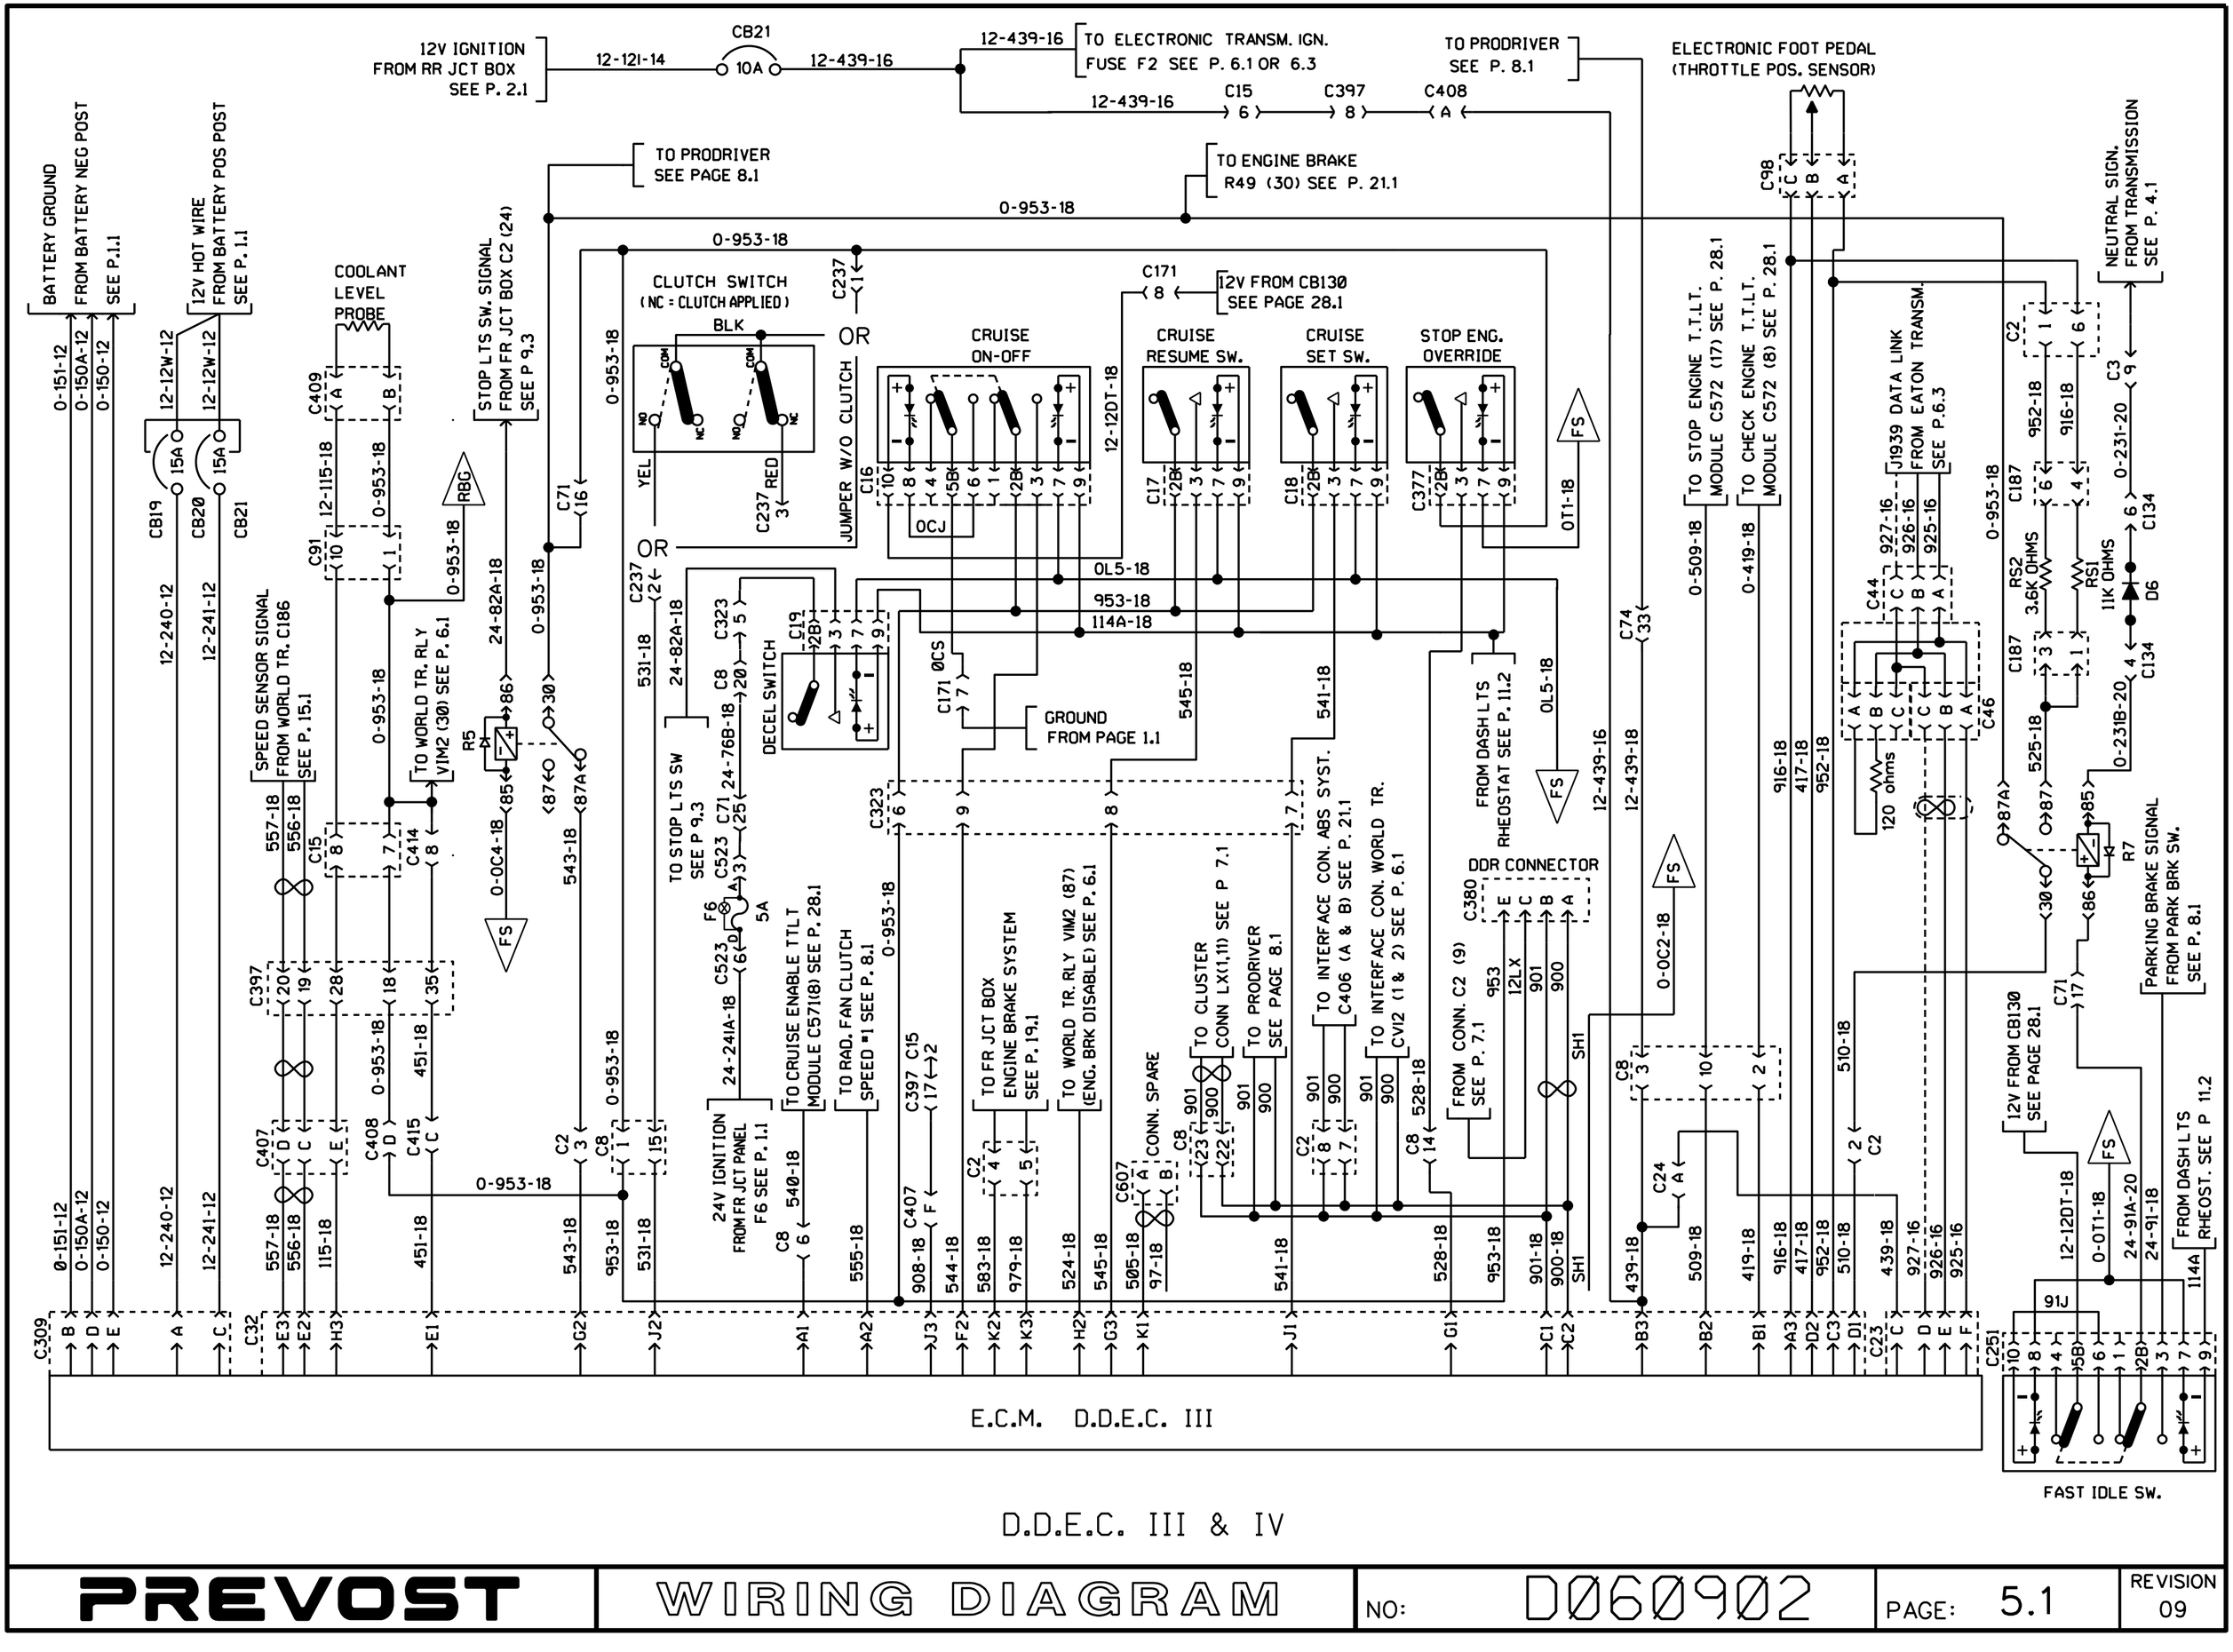
12V IGNITION FROM RR JCT BOX SEE P. 2.1
12-121-14
CB21
10A
12-439-16
TO ELECTRONIC TRANSM. IGN. FUSE F2 SEE P. 6.1 OR 6.3
TO PRODRIVER SEE P. 8.1
ELECTRONIC FOOT PEDAL (THROTTLE POS. SENSOR)
C15
C397
C408
TO PRODRIVER SEE PAGE 8.1
TO ENGINE BRAKE R49 (30) SEE P. 21.1
0-953-18
CLUTCH SWITCH (NC = CLUTCH APPLIED)
BLK
YEL
RED
OR
JUMPER W/O CLUTCH
CRUISE ON-OFF
CRUISE RESUME SW.
CRUISE SET SW.
STOP ENG. OVERRIDE
C171
12V FROM CB130 SEE PAGE 28.1
12-12DT-18
0L5-18
953-18
114A-18
0T1-18
FS
BATTERY GROUND
FROM BATTERY NEG POST
SEE P.1.1
0-151-12
0-150A-12
0-150-12
12V HOT WIRE FROM BATTERY POS POST
SEE P. 1.1
12-12W-12
CB19
CB20
CB21
15A
COOLANT LEVEL PROBE
C409
12-115-18
C91
STOP LTS SW. SIGNAL FROM FR JCT BOX C2 (24) SEE P 9.3
SPEED SENSOR SIGNAL FROM WORLD TR. C186 SEE P. 15.1
12-240-12
12-241-12
TO WORLD TR. RLY VIM2 (30) SEE P. 6.1
RBG
R5
24-82A-18
0-953-18
0-0C4-18
C71
16
C237
531-18
C323
C8
20
5
DECEL SWITCH
C19
C171 0CS
GROUND FROM PAGE 1.1
545-18
541-18
TO STOP LTS SW SEE P 9.3
24-76B-18
25
C523
F6
5A
24V IGNITION FROM FR JCT PANEL F6 SEE P. 1.1
24-241A-18
TO CRUISE ENABLE TTLT MODULE C571(8) SEE P. 28.1
TO RAD. FAN CLUTCH SPEED "1 SEE P. 8.1
TO FR JCT BOX ENGINE BRAKE SYSTEM SEE P. 19.1
TO WORLD TR. RLY VIM2 (87) (ENG. BRK DISABLE) SEE P. 6.1
TO INTERFACE CON. ABS SYST. C406 (A & B) SEE P. 21.1
TO INTERFACE CON. WORLD TR. CVI2 (1 & 2) SEE P. 6.1
TO CLUSTER CONN LX(1,11) SEE P 7.1
FROM DASH LTS RHEOSTAT SEE P. 11.2
FROM CONN. C2 (9) SEE P. 7.1
DDR CONNECTOR
C380
953
12LX
901
900
SH1
C74
33
12-439-16
12-439-18
0-509-18
TO STOP ENGINE T.T.L.T. MODULE C572 (17) SEE P. 28.1
0-419-18
TO CHECK ENGINE T.T.L.T. MODULE C572 (8) SEE P. 28.1
C98
J1939 DATA LINK FROM EATON TRANSM. SEE P.6.3
927-16
926-16
925-16
C44
120 ohms
C46
C187
RS2
3.6K OHMS
RS1
11K OHMS
D6
C134
C2
C3
952-18
916-18
417-18
525-18
0-231-20
0-231B-20
NEUTRAL SIGN. FROM TRANSMISSION SEE P. 4.1
R7
PARKING BRAKE SIGNAL FROM PARK BRK SW. SEE P. 8.1
12V FROM CB130 SEE PAGE 28.1
12-12DT-18
0-0T1-18
24-91A-20
24-91-18
FROM DASH LTS RHEOST. SEE P 11.2
91J
114A
C251
FAST IDLE SW.
C309
C32
C407
C415
C414
C2
C8
C607
C24
557-18
556-18
115-18
451-18
543-18
953-18
531-18
555-18
908-18
544-18
583-18
979-18
524-18
545-18
505-18
97-18
540-18
528-18
901-18
900-18
SH1
439-18
509-18
419-18
927-16
926-16
925-16
510-18
E.C.M. D.D.E.C. III

D.D.E.C. III & IV

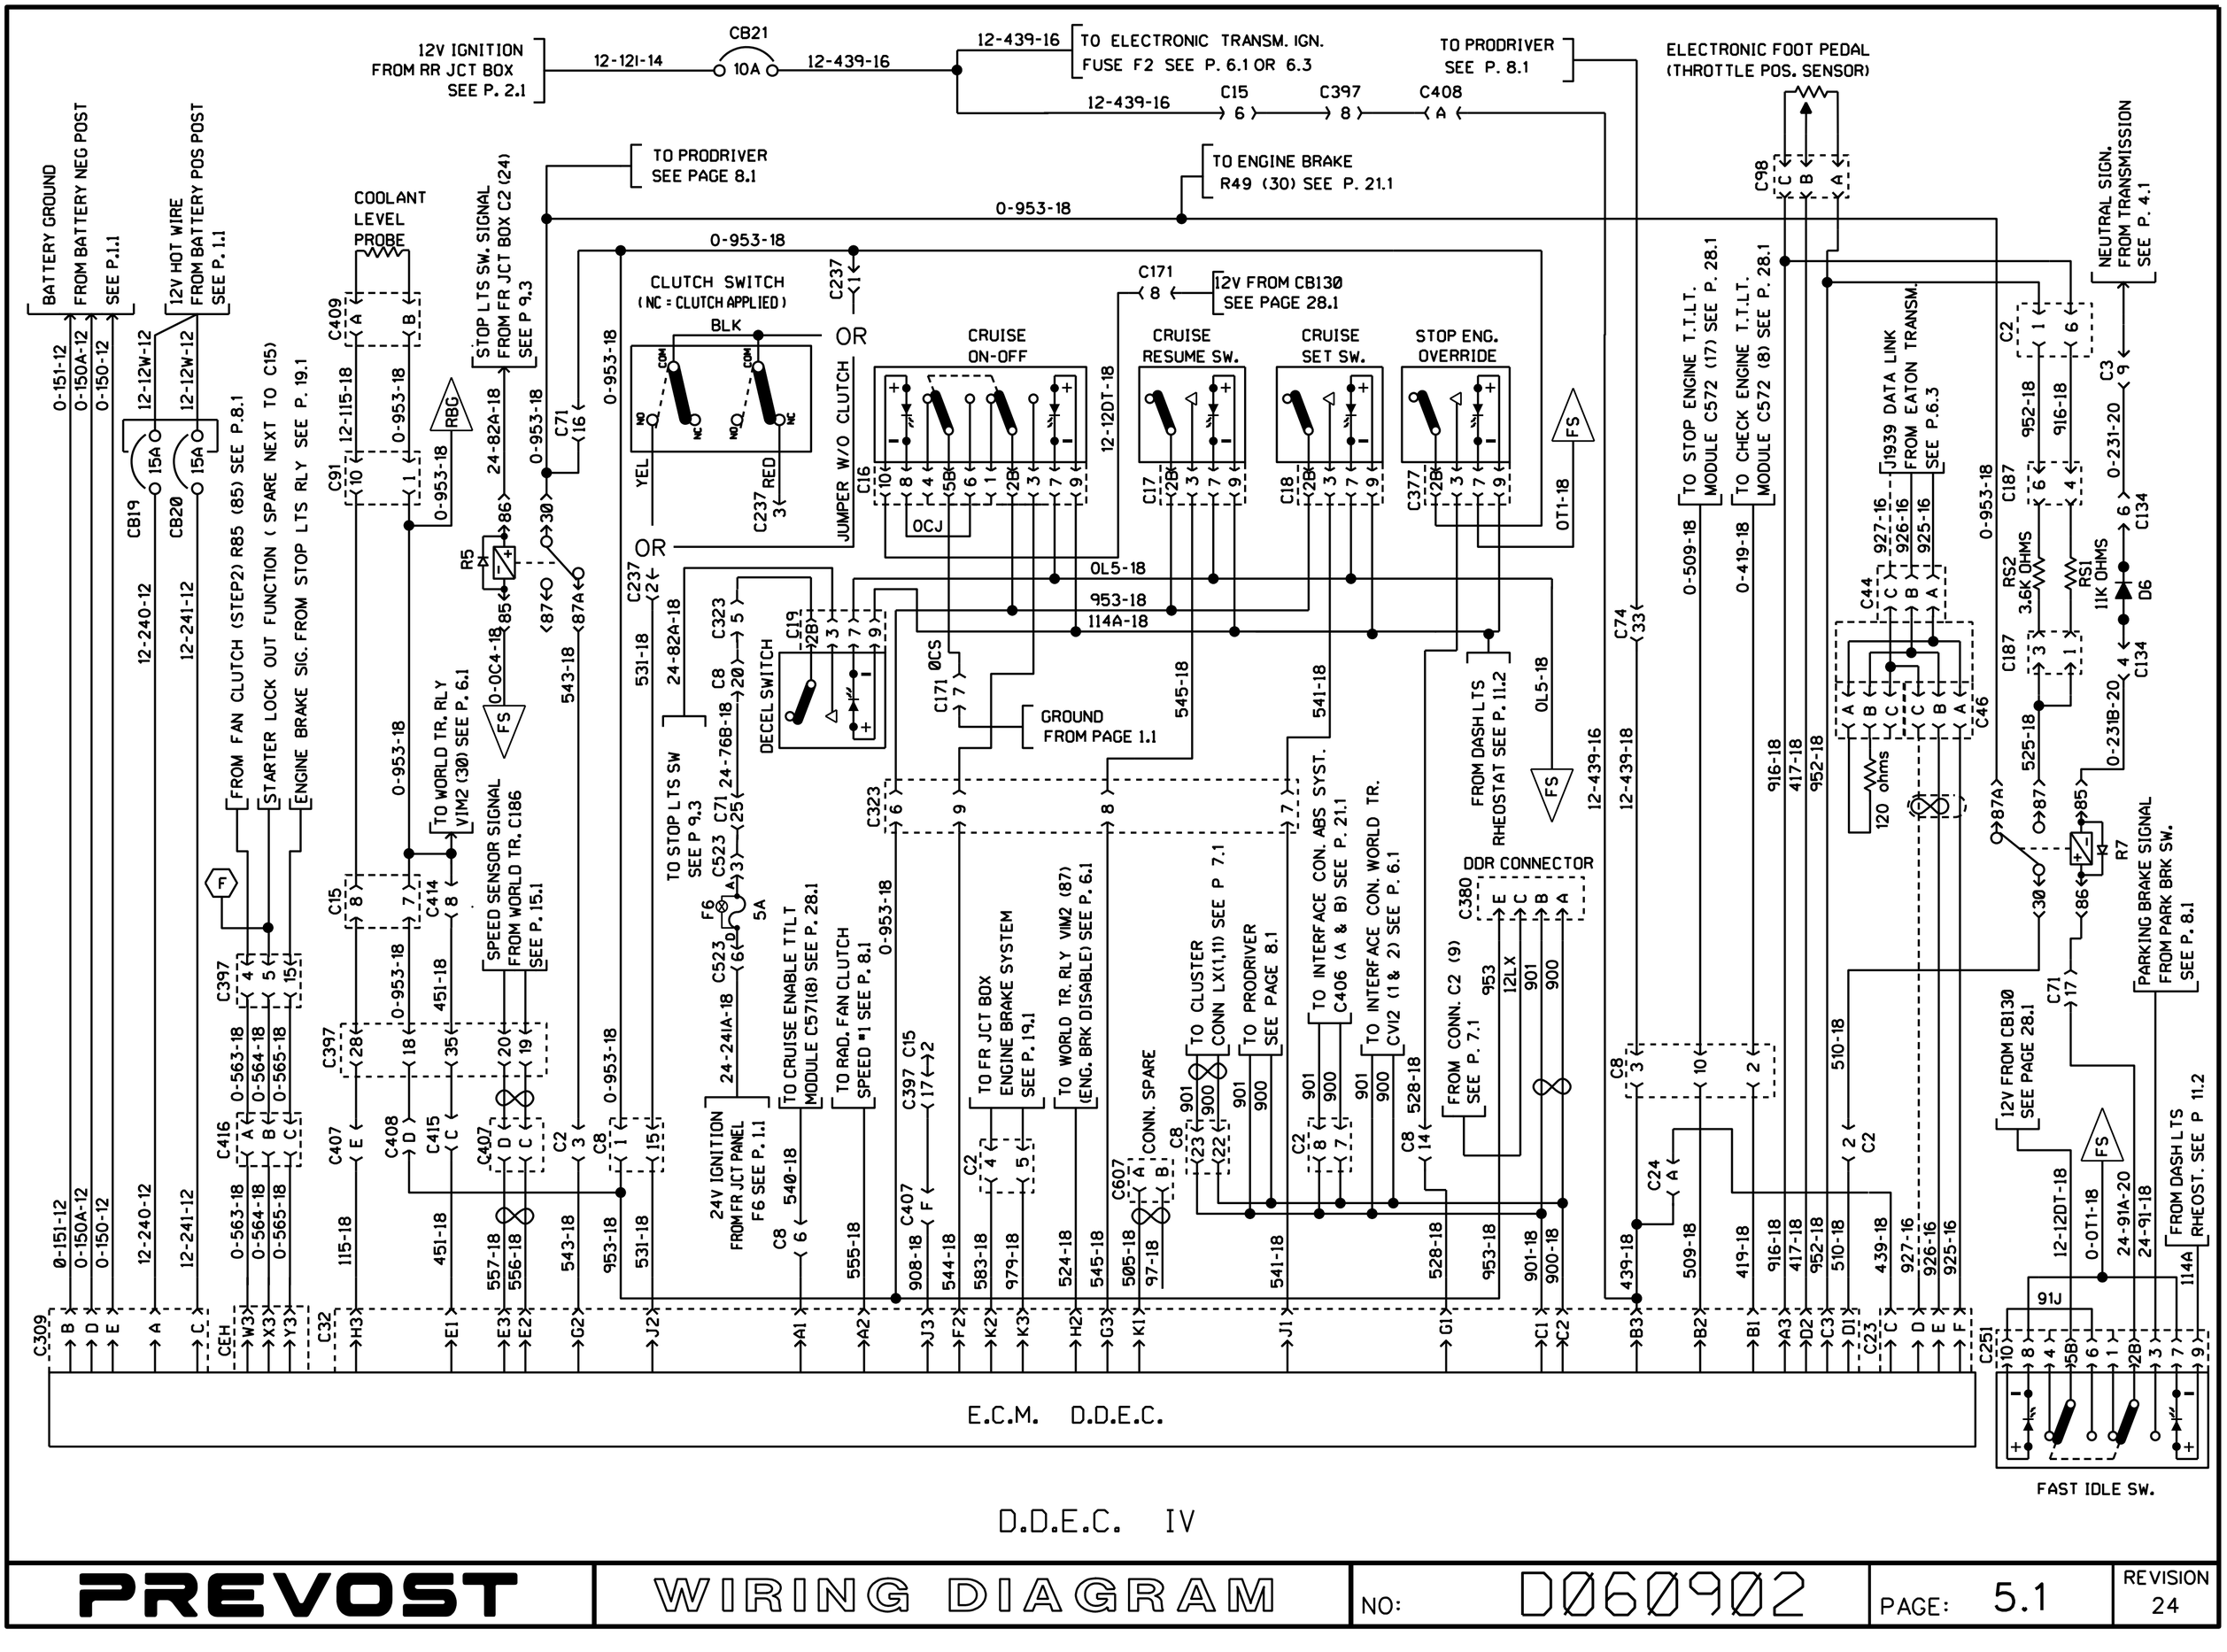

D.D.E.C. IV

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 5.1	REVISION 24

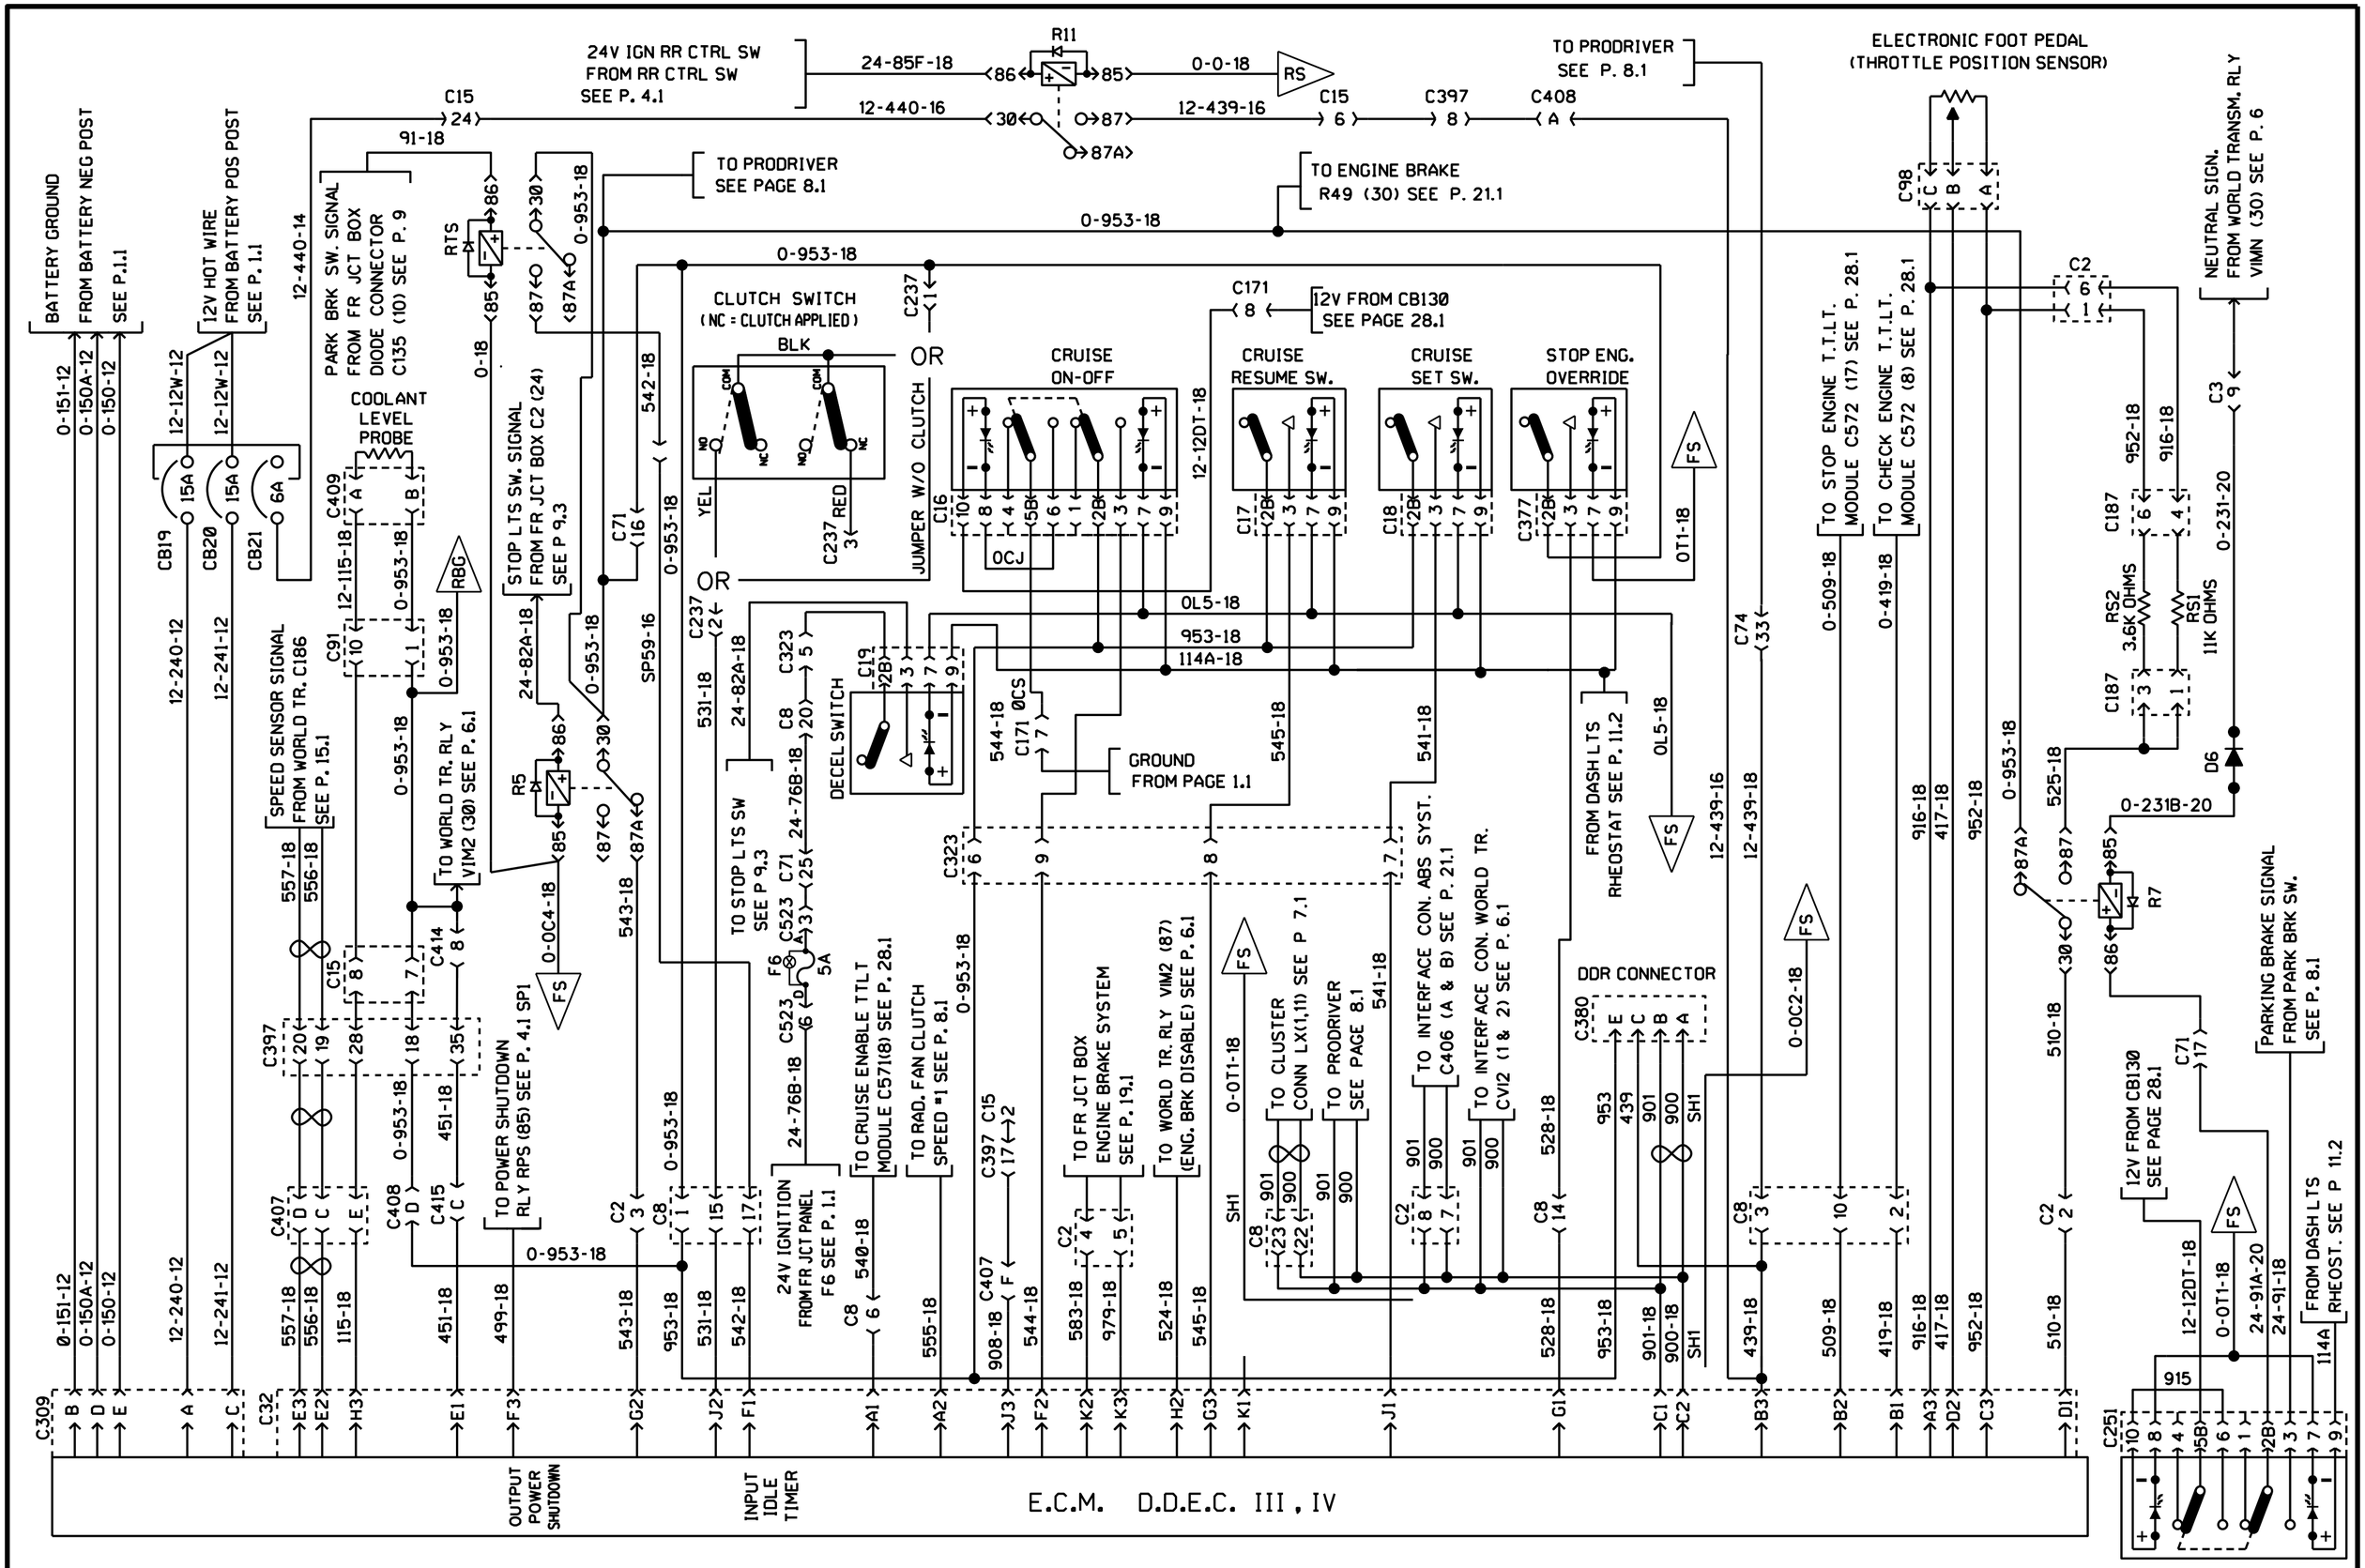
BATTERY GROUND
FROM BATTERY NEG POST
SEE P.1.1
0-151-12
0-150A-12
0-150-12
12V HOT WIRE
FROM BATTERY POS POST
SEE P. 1.1
12-12W-12
12-240-12
12-241-12
12-440-14
CB19 15A
CB20 15A
CB21 6A
24V IGN RR CTRL SW
FROM RR CTRL SW
SEE P. 4.1
24-85F-18
R11
RS
0-0-18
12-440-16
12-439-16
C15 24
C15 6
C397 8
C408 A
TO PRODRIVER
SEE P. 8.1
ELECTRONIC FOOT PEDAL
(THROTTLE POSITION SENSOR)
C98 C B A
91-18
PARK BRK SW. SIGNAL
FROM FR JCT BOX
DIODE CONNECTOR
C135 (10) SEE P. 9
RTS
0-18
0-953-18
TO PRODRIVER
SEE PAGE 8.1
TO ENGINE BRAKE
R49 (30) SEE P. 21.1
CLUTCH SWITCH
(NC = CLUTCH APPLIED)
BLK
YEL
RED
C237 1
C237 3
OR
JUMPER W/O CLUTCH
C16
C171 8
12V FROM CB130
SEE PAGE 28.1
CRUISE
ON-OFF
CRUISE
RESUME SW.
CRUISE
SET SW.
STOP ENG.
OVERRIDE
12-12DT-18
0CJ
0T1-18
FS
0L5-18
953-18
114A-18
COOLANT
LEVEL
PROBE
C409
12-115-18
C91 10
C91 1
SPEED SENSOR SIGNAL
FROM WORLD TR. C186
SEE P. 15.1
557-18
556-18
TO WORLD TR. RLY
VIM2 (30) SEE P. 6.1
RBG
R5
STOP LTS SW. SIGNAL
FROM FR JCT BOX C2 (24)
SEE P 9.3
24-82A-18
542-18
SP59-16
C71 16
C71 25
24-76B-18
C323 5
C8 20
DECEL SWITCH
C19 2B
531-18
544-18
C171 0CS 7
GROUND
FROM PAGE 1.1
545-18
541-18
C323 6
C323 9
C323 8
C323 7
FROM DASH LTS
RHEOSTAT SEE P. 11.2
C74 33
12-439-16
12-439-18
TO STOP ENGINE T.T.LT.
MODULE C572 (17) SEE P. 28.1
TO CHECK ENGINE T.T.LT.
MODULE C572 (8) SEE P. 28.1
0-509-18
0-419-18
916-18
417-18
952-18
C2 6
C2 1
C187 952-18
C187 916-18
RS2
3.6K OHMS
RS1
11K OHMS
C187 3
C187 1
0-231-20
NEUTRAL SIGN.
FROM WORLD TRANSM. RLY
VIMN (30) SEE P. 6
C3 9
525-18
0-231B-20
D6
R7
0-953-18
0-87A
0-87
0-85
0-86
0-30
0-87A
0-87
0-85
0-86
0-30
0-OC4-18
0-OC2-18
TO POWER SHUTDOWN
RLY RPS (85) SEE P. 4.1 SP1
C414 8
C397 20
C397 19
C397 28
C408 0-953-18 D
C415 451-18 C
C407 D
C407 C
C407 E
115-18
451-18
499-18
543-18
556-18
557-18
C2 3
C8 1
C8 15
C8 17
953-18
531-18
542-18
24V IGNITION
FROM FR JCT PANEL
F6 SEE P. 1.1
24-76B-18
C523 6
F6 5A
TO CRUISE ENABLE TTLT
MODULE C571(8) SEE P. 28.1
C8 6
540-18
555-18
TO RAD. FAN CLUTCH
SPEED "1 SEE P. 8.1
C397 C15 17 2
908-18
C407 F
544-18
583-18
979-18
C2 4
C2 5
TO FR JCT BOX
ENGINE BRAKE SYSTEM
SEE P. 19.1
524-18
545-18
TO WORLD TR. RLY VIM2 (87)
(ENG. BRK DISABLE) SEE P. 6.1
SH1
0-0T1-18
TO CLUSTER
CONN LX(1,1) SEE P 7.1
TO PRODRIVER
SEE PAGE 8.1
541-18
TO INTERFACE CON. ABS SYST.
C406 (A & B) SEE P. 21.1
TO INTERFACE CON. WORLD TR.
CVI2 (1 & 2) SEE P. 6.1
901
900
C8 23
C8 22
C2 8
C2 7
C8 14
C8 3
528-18
953-18
439-18
DDR CONNECTOR
C380 E
C380 C
C380 B
C380 A
953
439
901
900
SH1
901-18
900-18
509-18
419-18
916-18
417-18
952-18
510-18
C2 2
C2 10
C2 9
C2 11
C2 12
C2 13
C2 14
C2 15
C2 16
C2 17
C2 18
C2 19
C2 20
C2 21
C2 22
C2 23
C2 24
C2 25
C2 26
C2 27
C2 28
C2 29
C2 30
C2

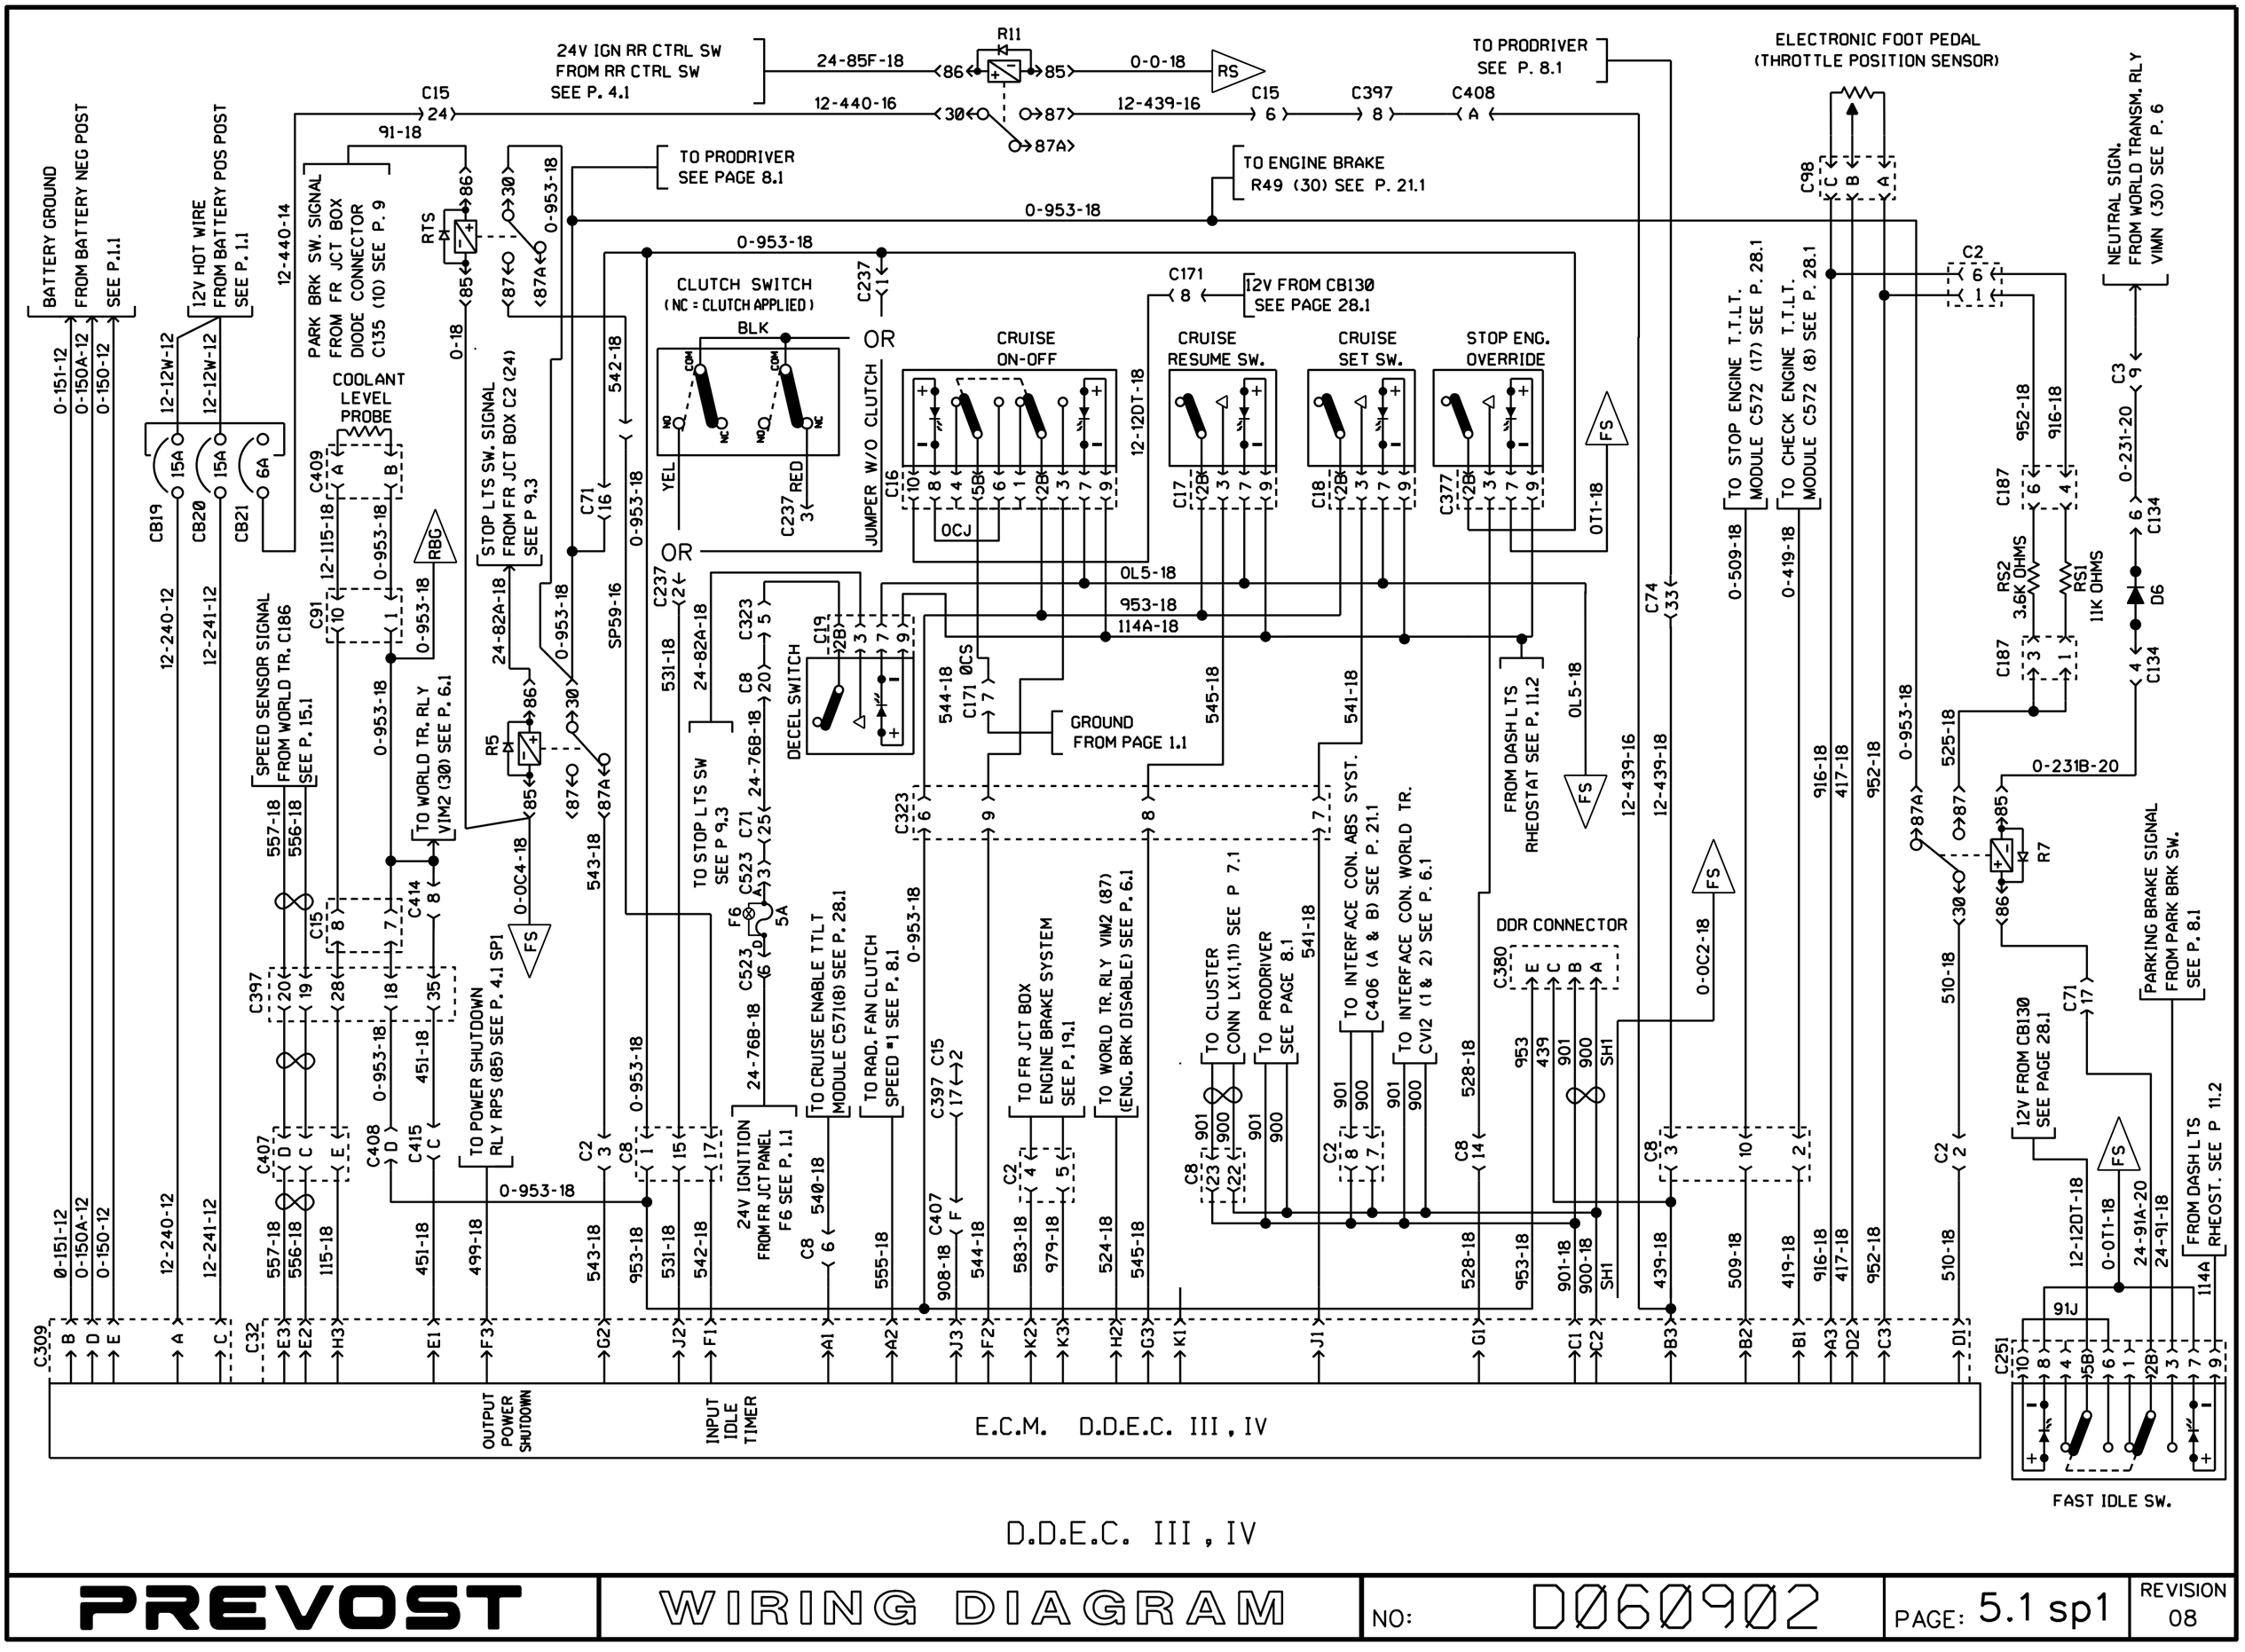

D.D.E.C. III , IV

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 5.1 sp1	REVISION 08

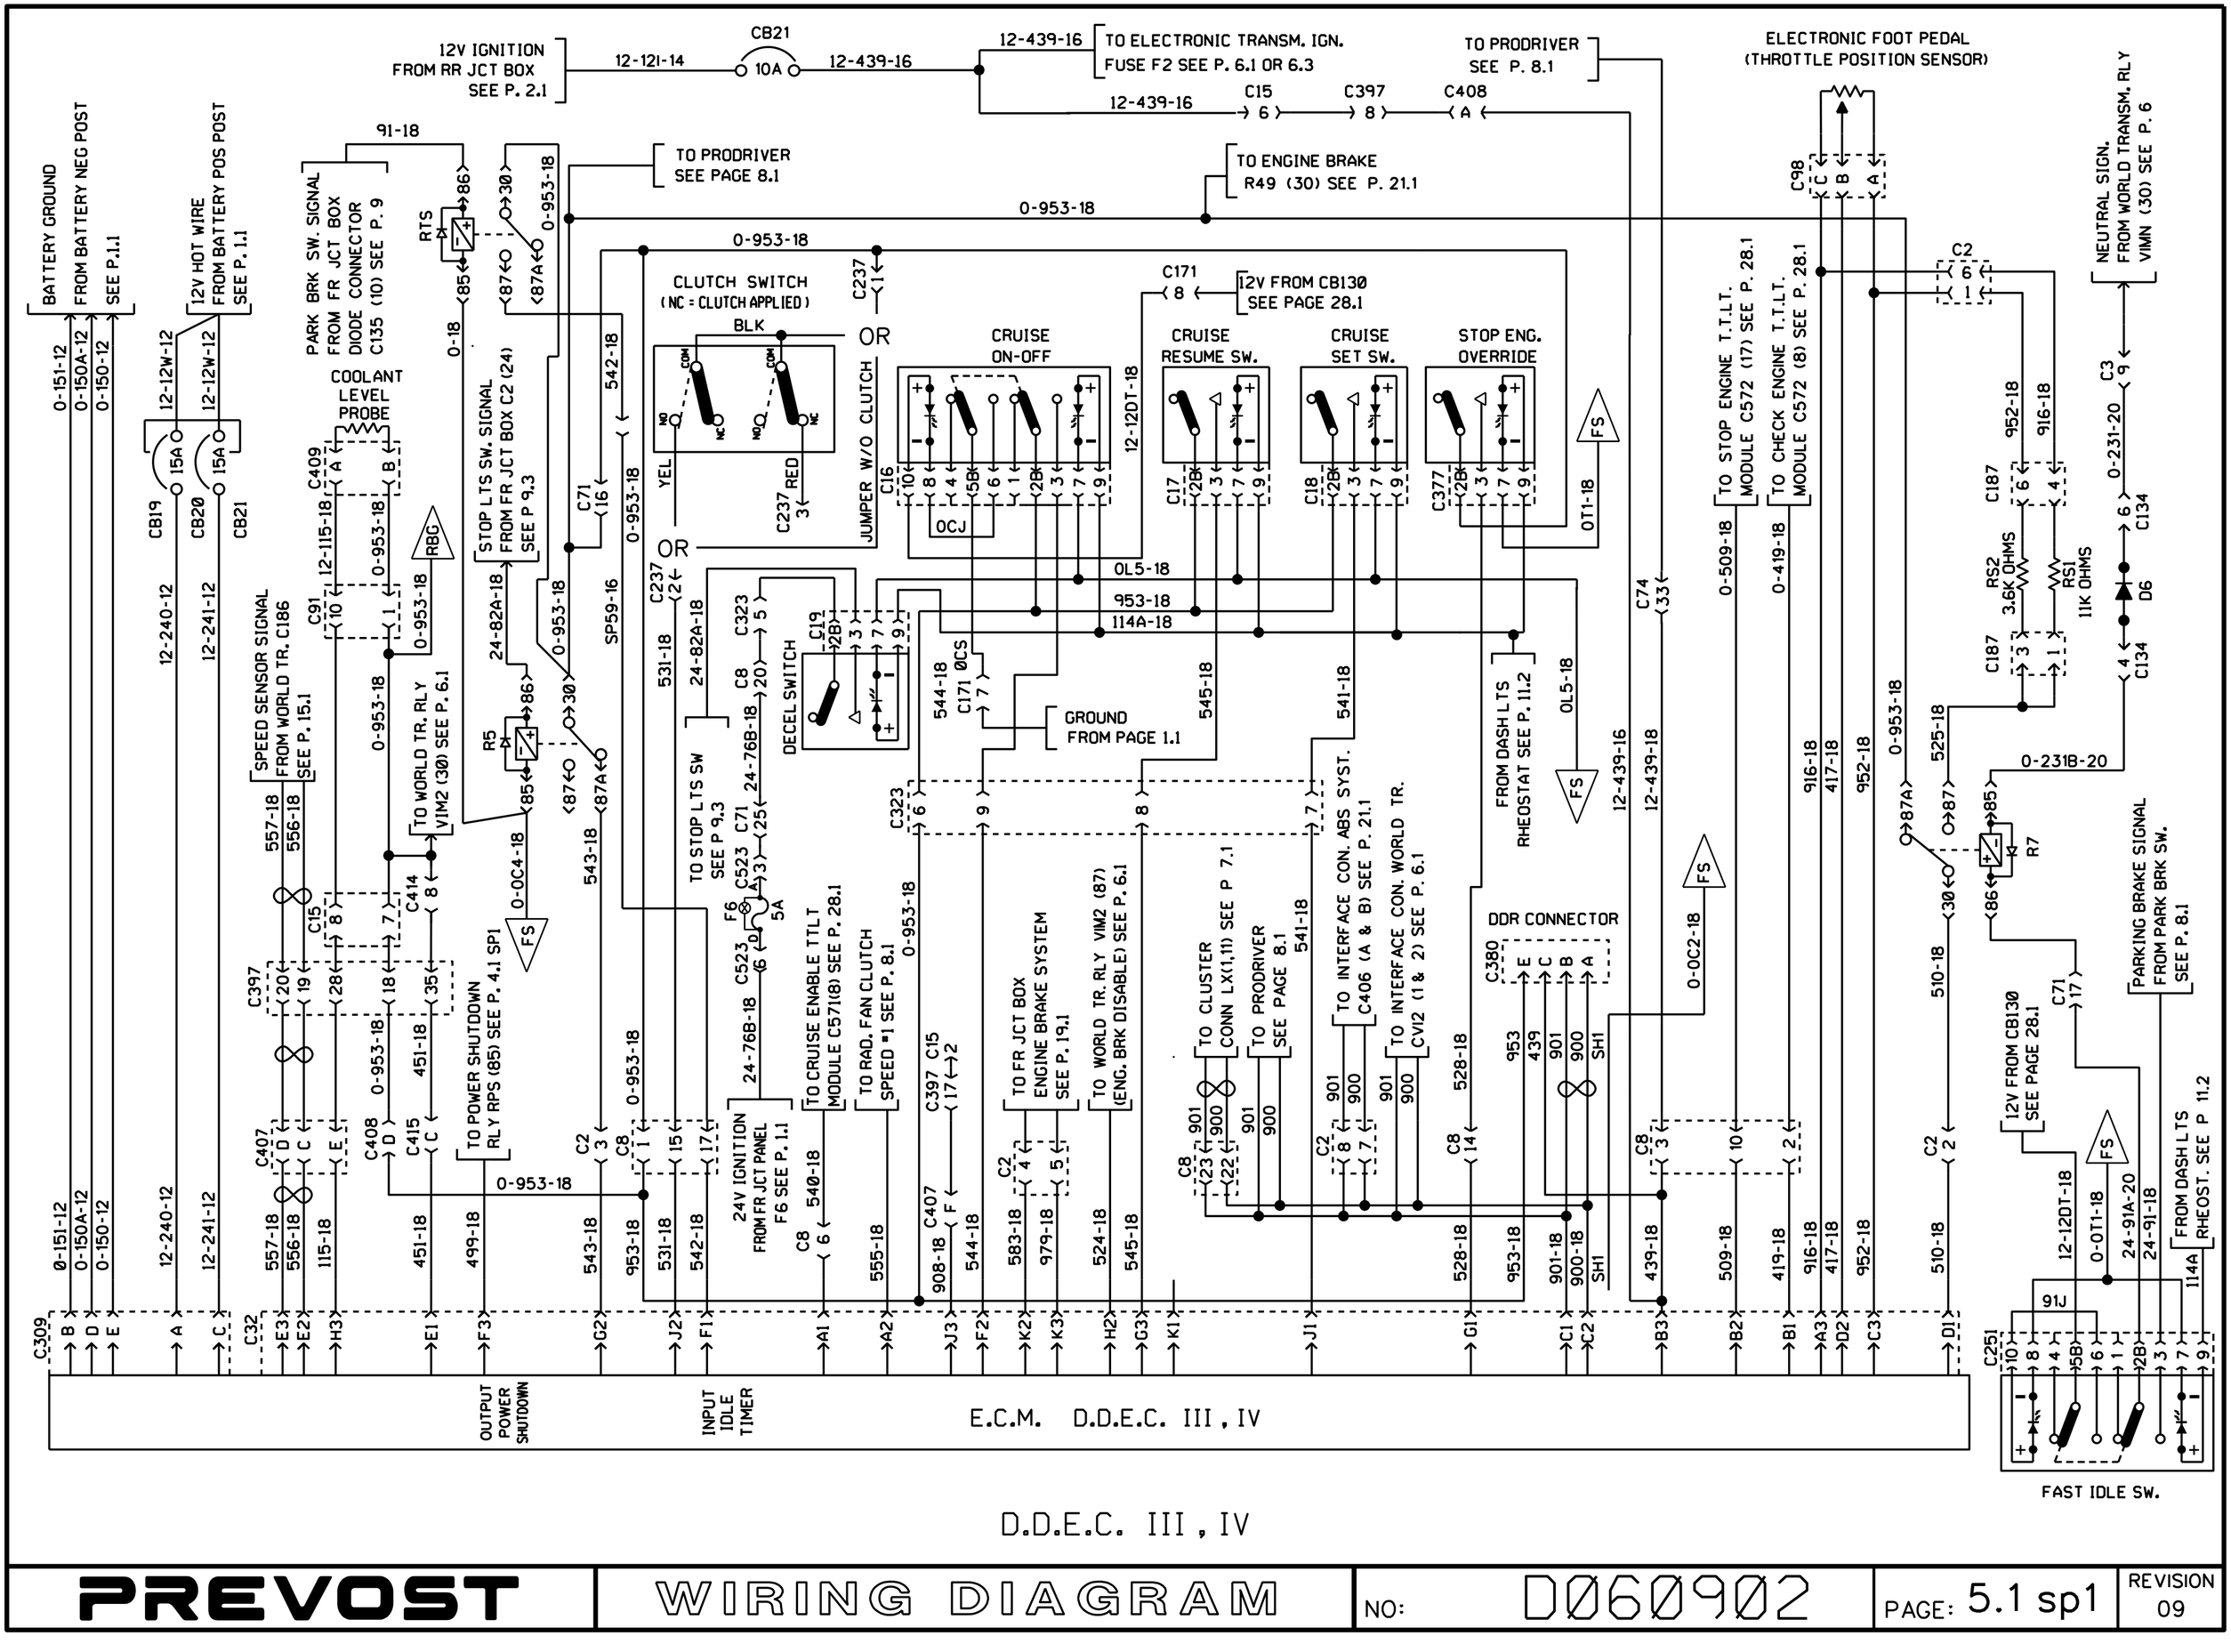

D.D.E.C. III , IV

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 5.1 sp1	REVISION 09

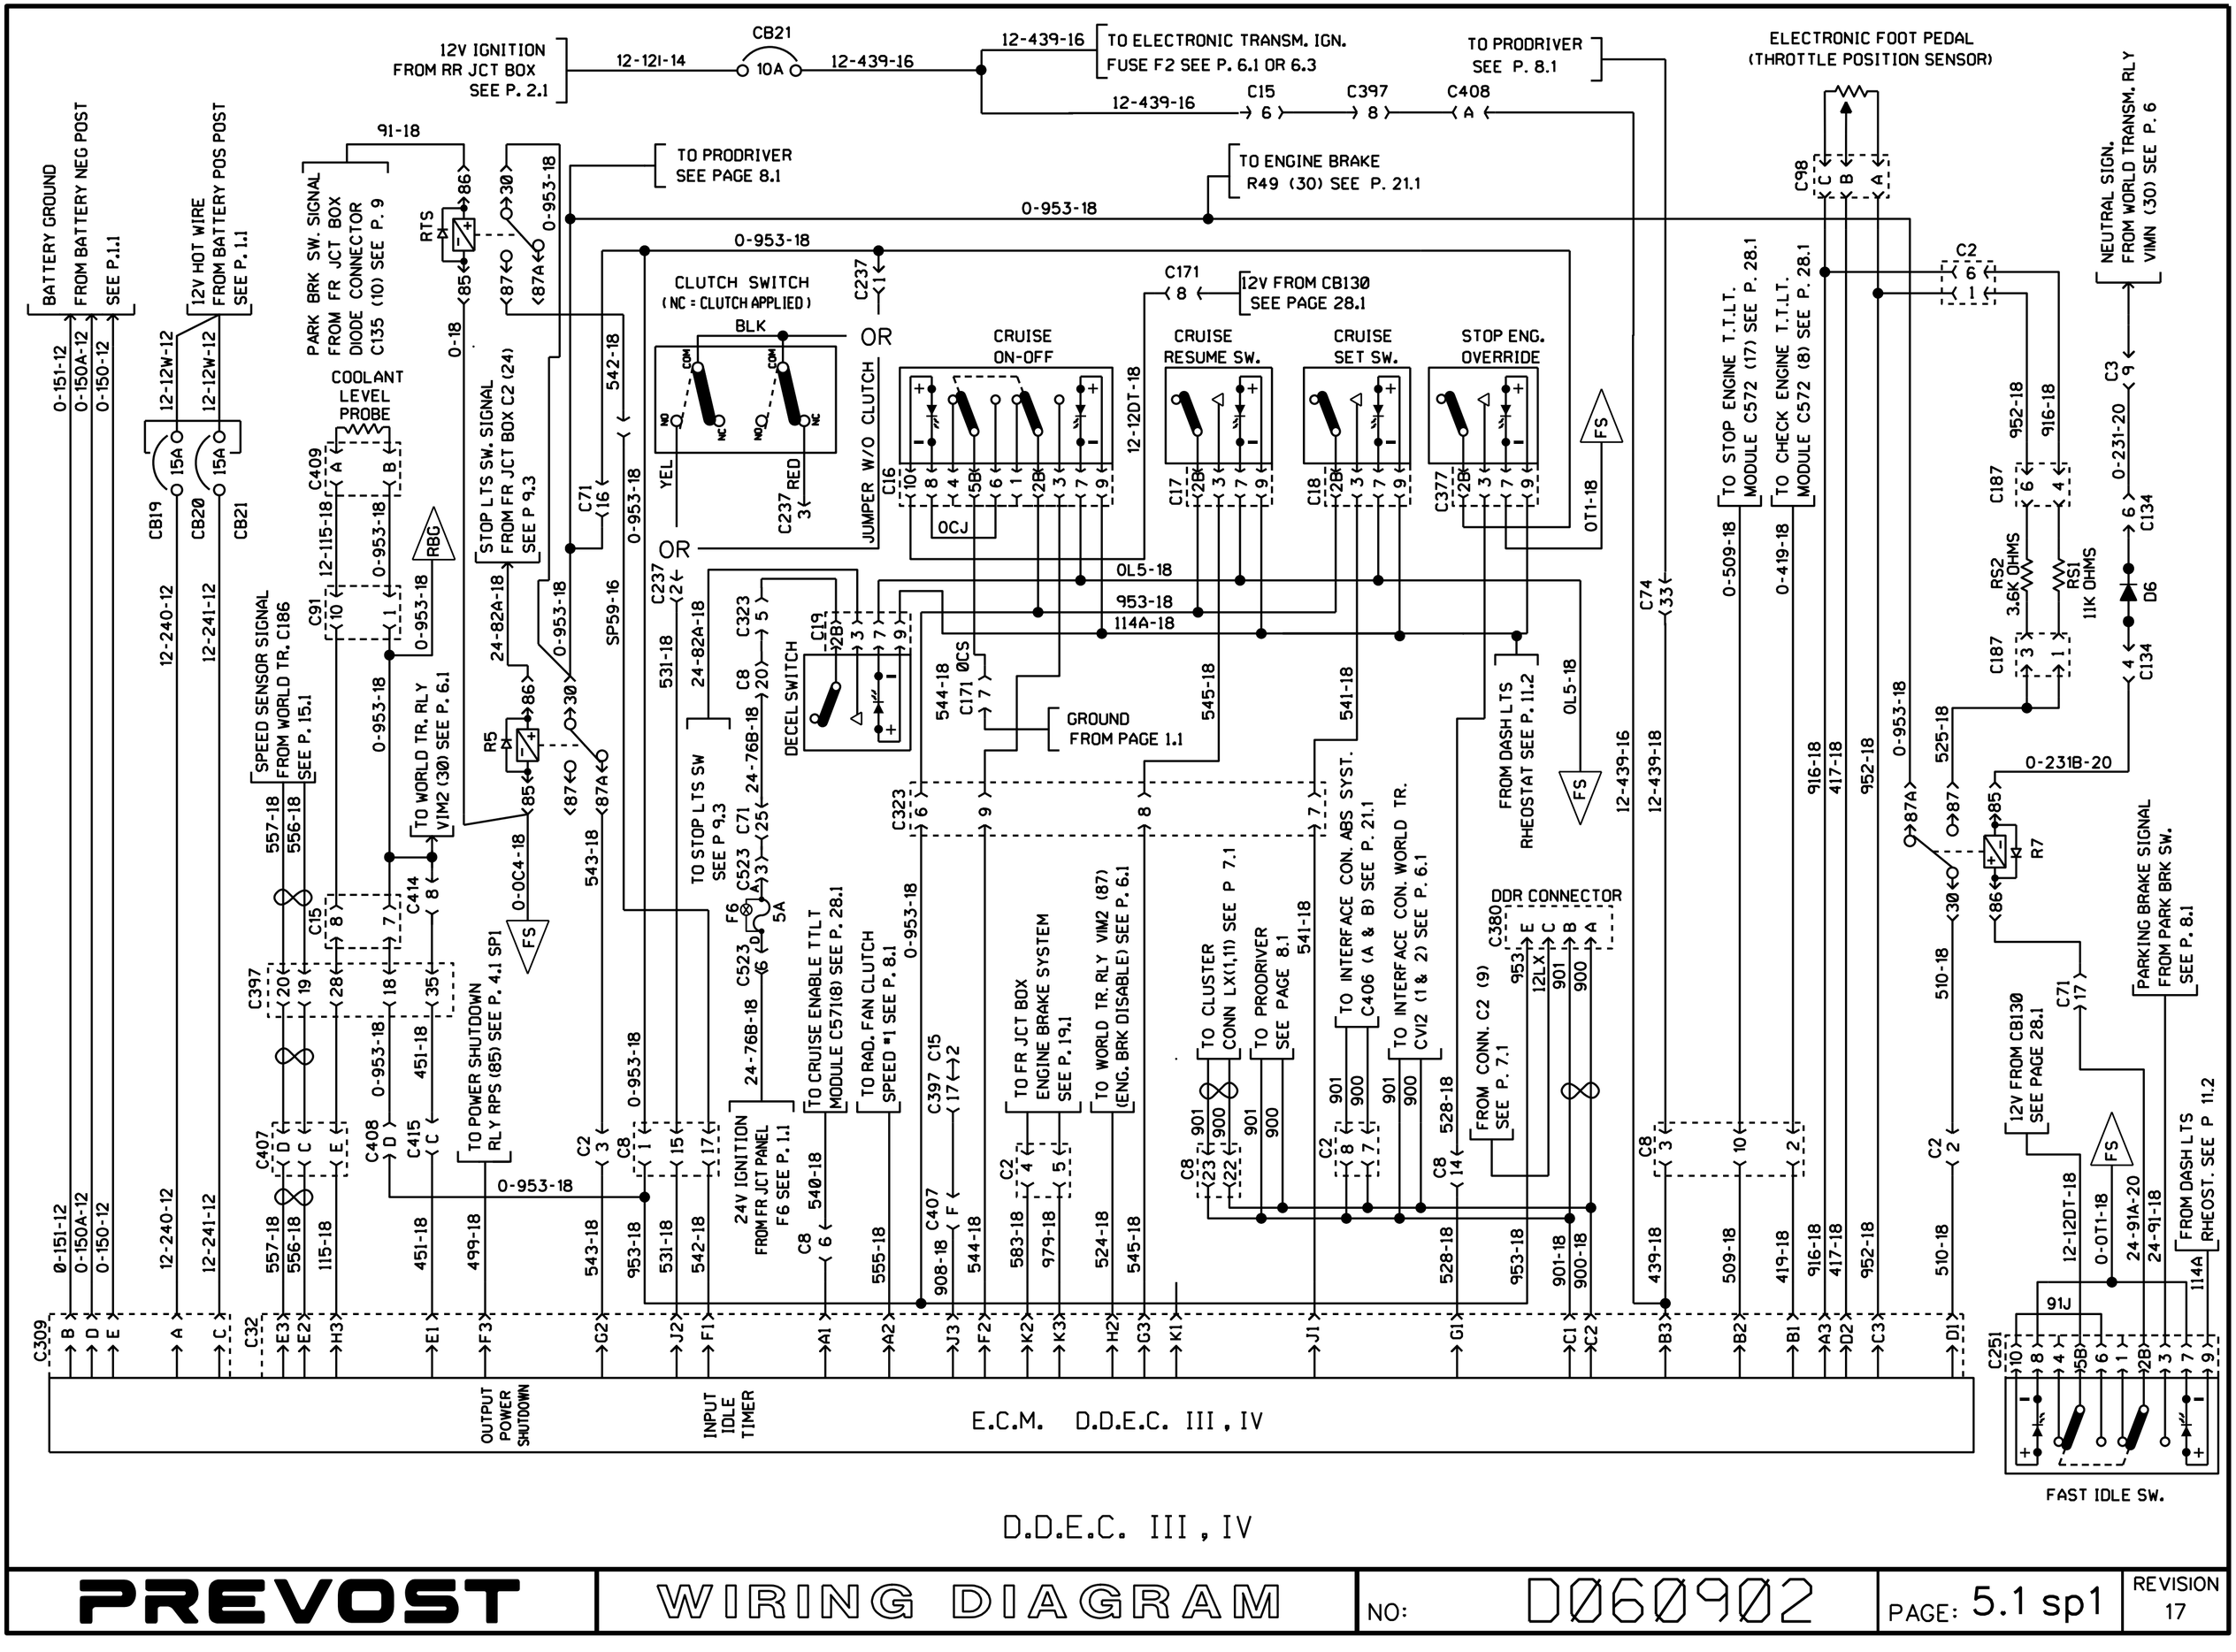

D.D.E.C. III , IV

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 5.1 sp1	REVISION 17

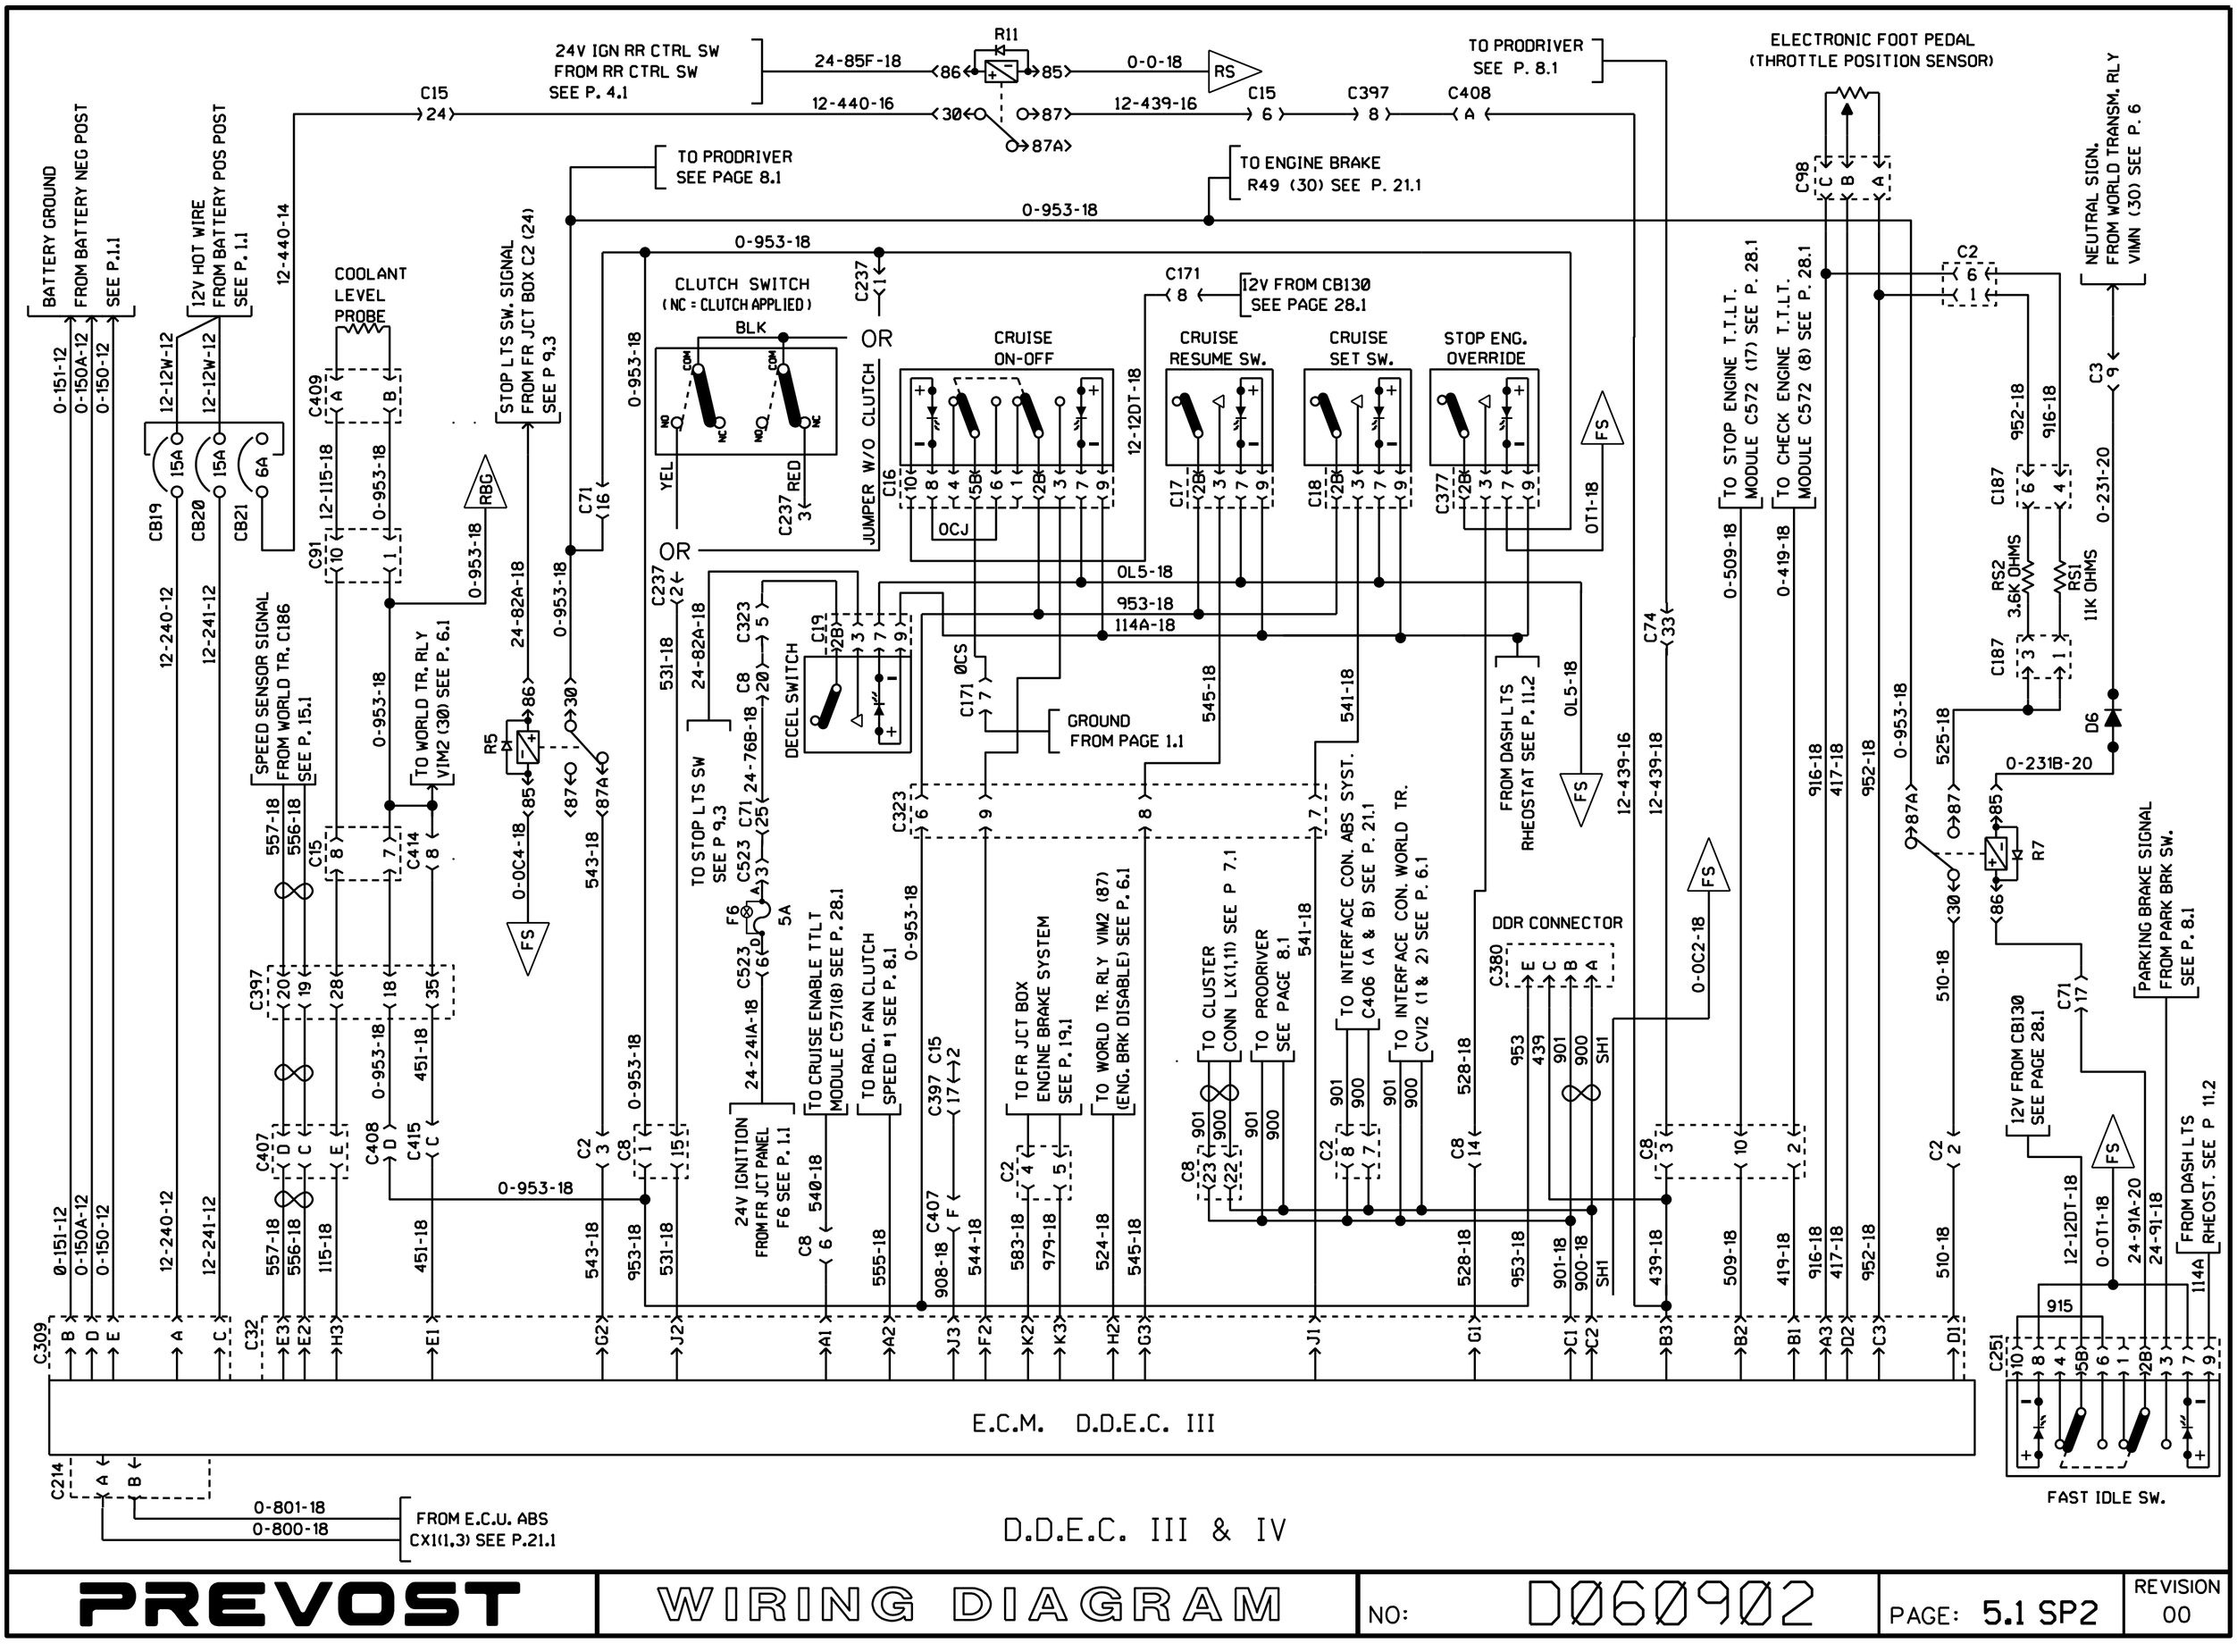

PREVOST | WIRING DIAGRAM | NO: D060902 | PAGE: 5.1 SP2 | REVISION 00

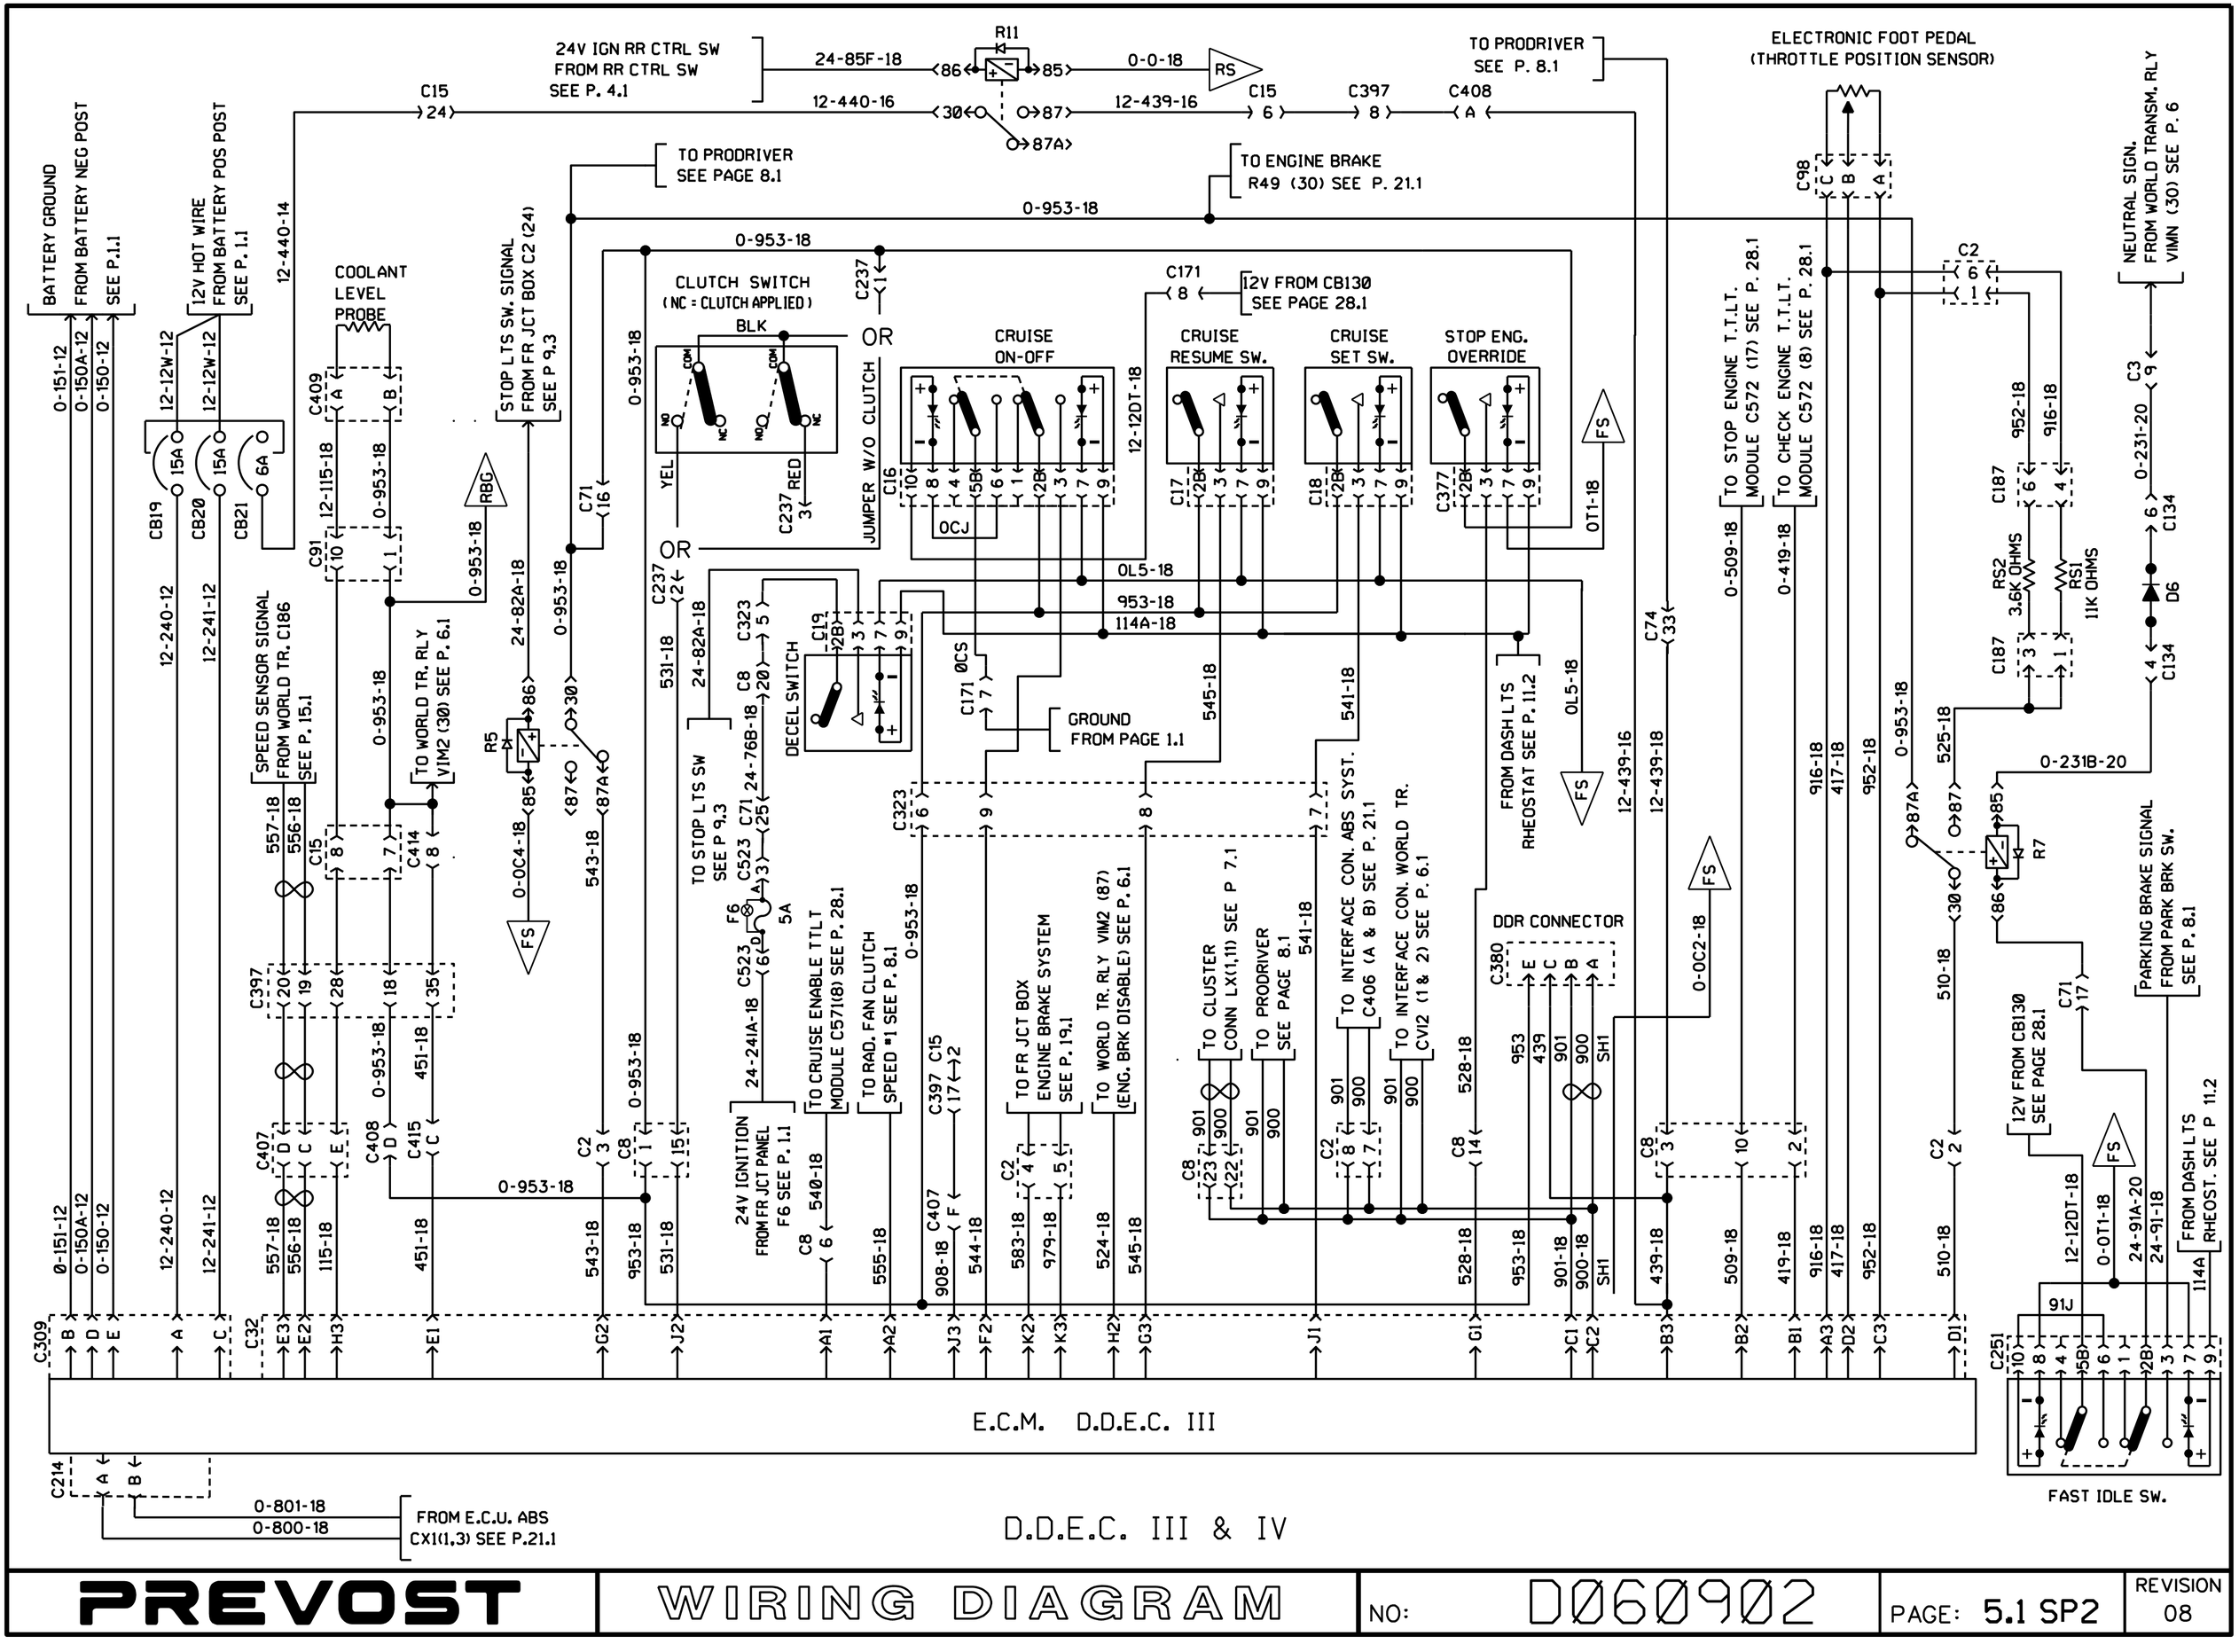

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 5.1 SP2	REVISION 08

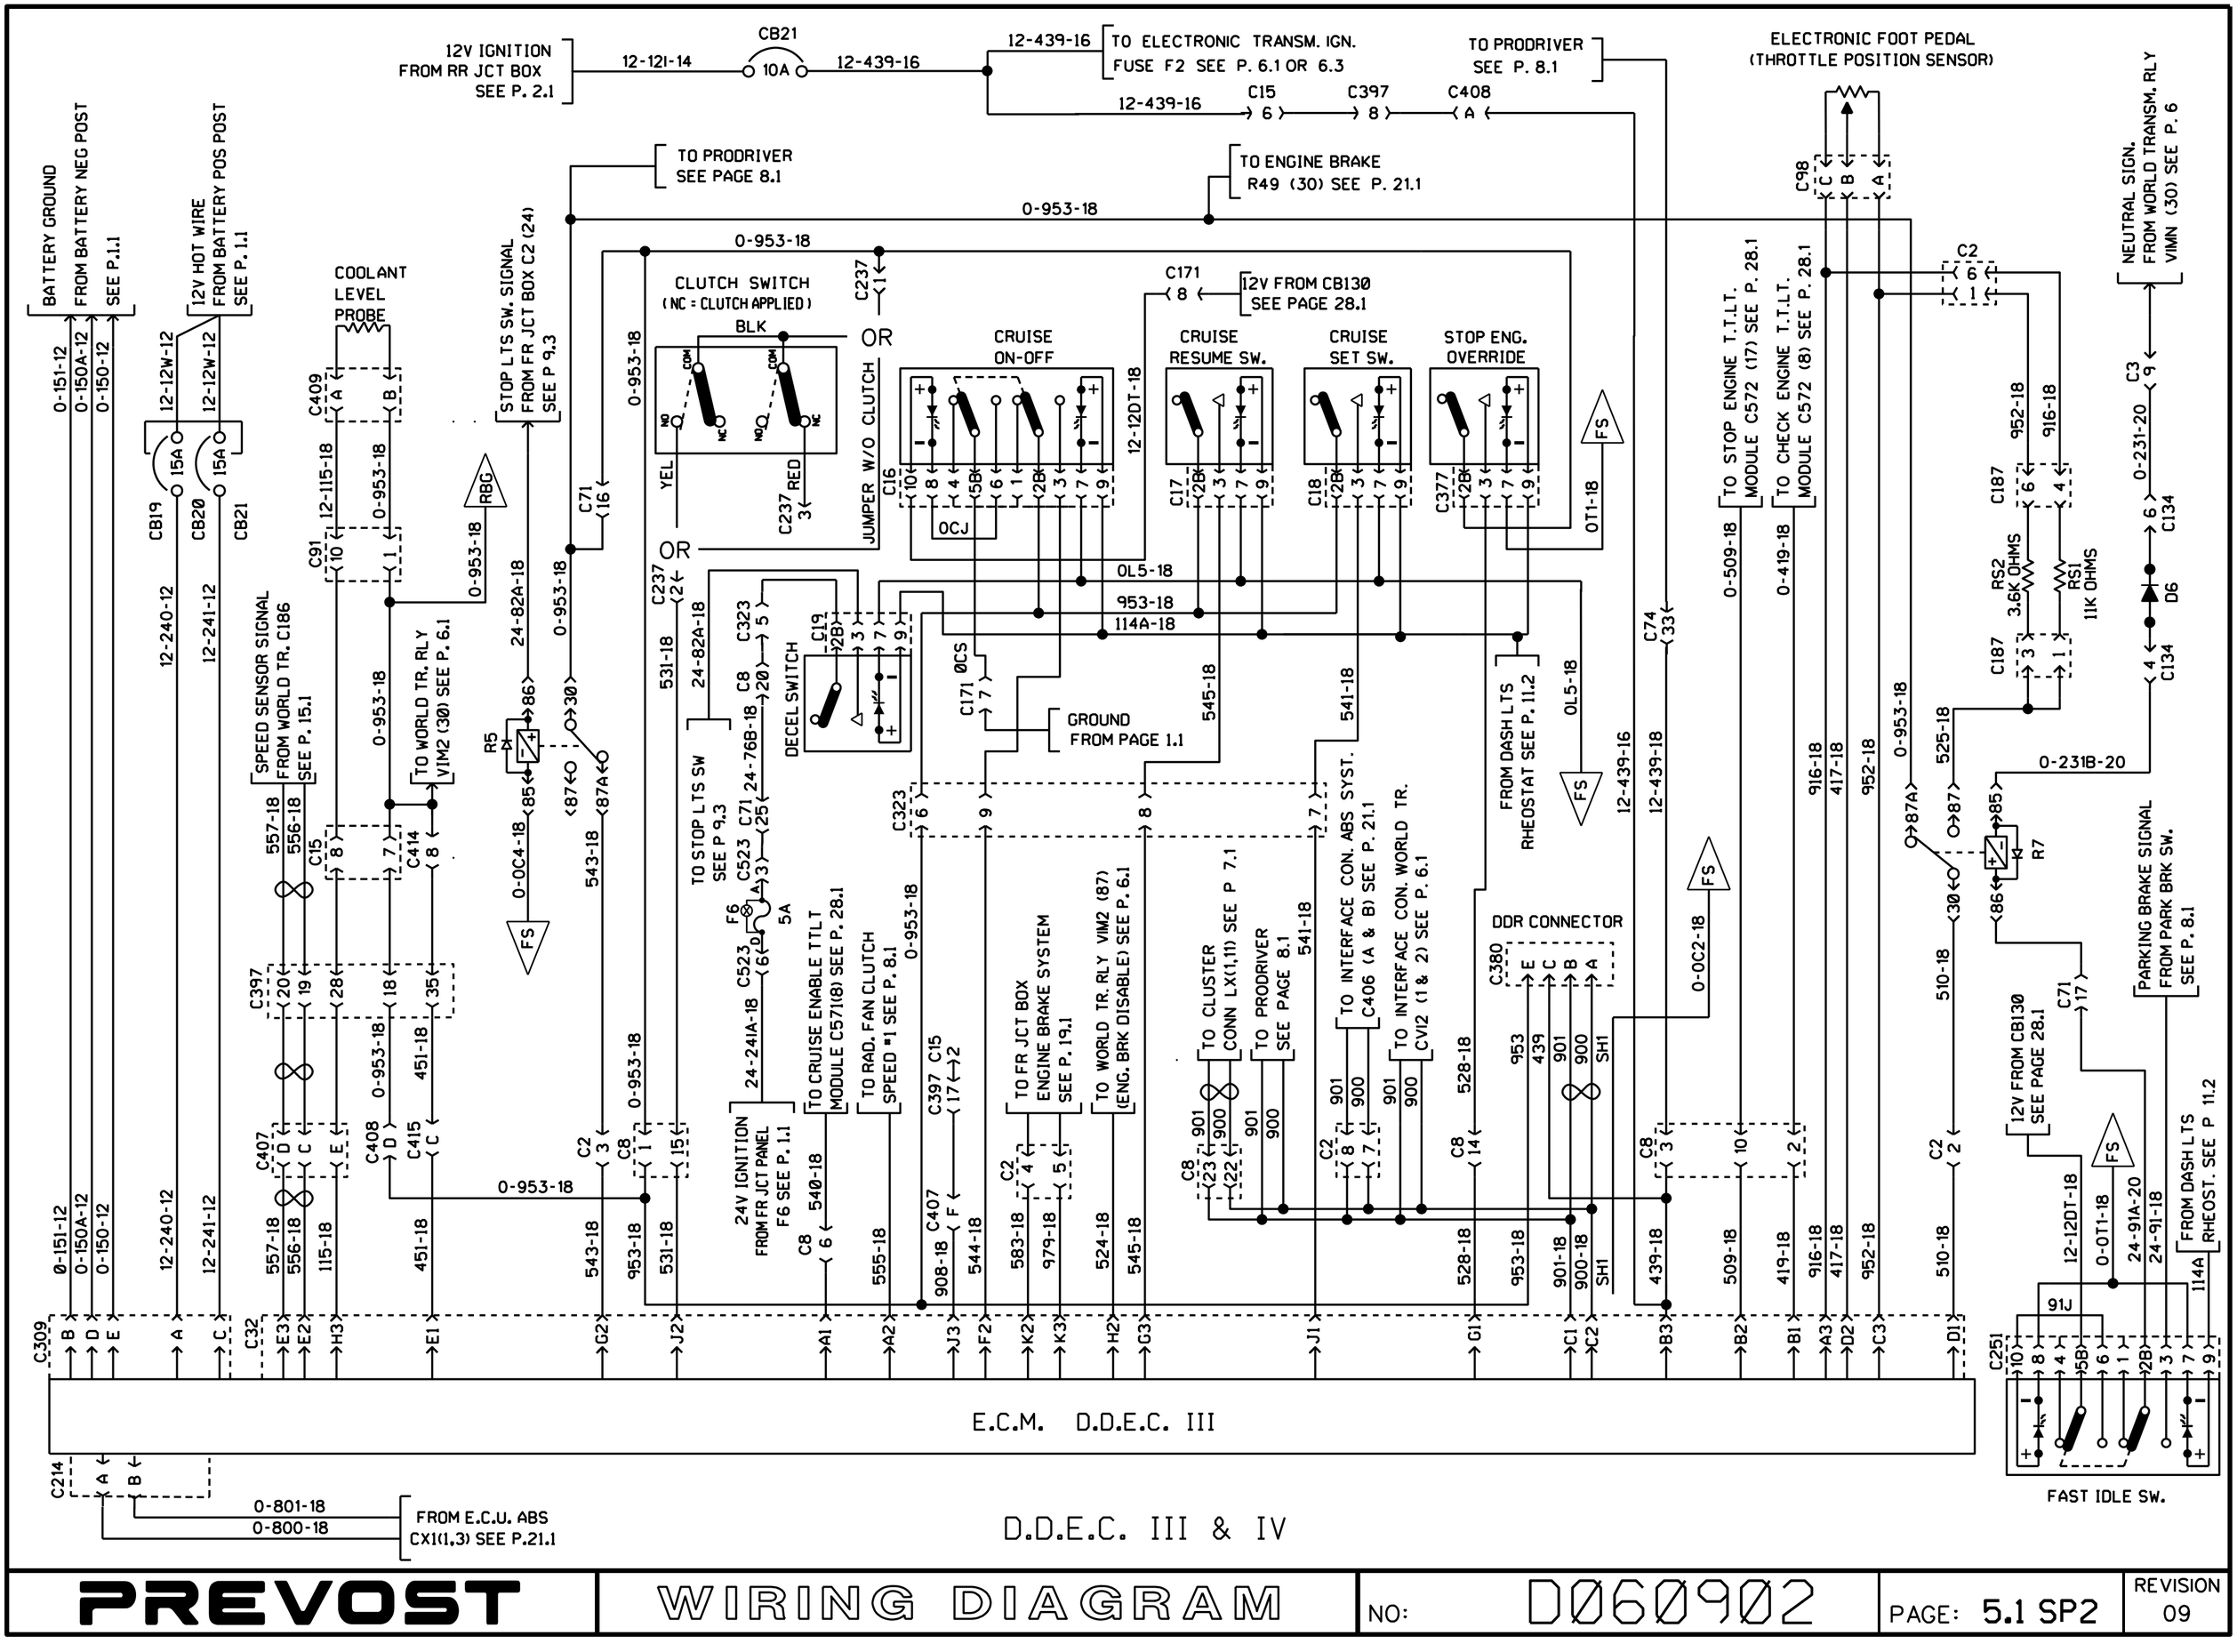
BATTERY GROUND
FROM BATTERY NEG POST
SEE P.1.1
0-151-12
0-150A-12
0-150-12
12V HOT WIRE
FROM BATTERY POS POST
SEE P. 1.1
12-12W-12
CB19
CB20
CB21
15A
12-240-12
12-241-12
12V IGNITION
FROM RR JCT BOX
SEE P. 2.1
12-121-14
CB21
10A
12-439-16
TO ELECTRONIC TRANSM. IGN.
FUSE F2 SEE P. 6.1 OR 6.3
TO PRODRIVER
SEE P. 8.1
C15
C397
C408
TO PRODRIVER
SEE PAGE 8.1
TO ENGINE BRAKE
R49 (30) SEE P. 21.1
0-953-18
ELECTRONIC FOOT PEDAL
(THROTTLE POSITION SENSOR)
C98
COOLANT
LEVEL
PROBE
C409
C91
12-115-18
CLUTCH SWITCH
(NC = CLUTCH APPLIED)
BLK
YEL
RED
C237
C171
12V FROM CB130
SEE PAGE 28.1
CRUISE
ON-OFF
CRUISE
RESUME SW.
CRUISE
SET SW.
STOP ENG.
OVERRIDE
C16
C17
C18
C377
12-12DT-18
JUMPER W/O CLUTCH
OR
OCJ
OT1-18
FS
STOP LTS SW. SIGNAL
FROM FR JCT BOX C2 (24)
SEE P 9.3
RBG
24-82A-18
R5
86
85
30
87
87A
SPEED SENSOR SIGNAL
FROM WORLD TR. C186
SEE P. 15.1
TO WORLD TR. RLY
VIM2 (30) SEE P. 6.1
0L5-18
953-18
114A-18
DECEL SWITCH
C19
0CS
GROUND
FROM PAGE 1.1
545-18
541-18
531-18
C323
C8
C71
24-76B-18
TO STOP LTS SW
SEE P 9.3
ABS SYST.
P. 21.1
WORLD TR.
FROM DASH LTS
RHEOSTAT SEE P. 11.2
0L5-18
C74
12-439-16
12-439-18
0-509-18
TO STOP ENGINE T.T.L.T.
MODULE C572 (17) SEE P. 28.1
0-419-18
TO CHECK ENGINE T.T.L.T.
MODULE C572 (8) SEE P. 28.1
916-18
417-18
952-18
C2
C187
952-18
916-18
RS2
3.6K OHMS
RS1
11K OHMS
525-18
0-231B-20
0-231-20
C3
C134
D6
NEUTRAL SIGN.
FROM WORLD TRANSM. RLY
VIMN (30) SEE P. 6
0-0C4-18
FS
543-18
0-953-18
C397 C15
C407
C414
C415
557-18
556-18
115-18
451-18
C2
C8
953-18
531-18
555-18
908-18
544-18
583-18
979-18
524-18
545-18
24V IGNITION
FROM FR JCT PANEL
F6 SEE P. 1.1
F6
C523
24-241A-18
5A
TO CRUISE ENABLE TTLT
MODULE C571(8) SEE P. 28.1
540-18
TO RAD. FAN CLUTCH
SPEED "1 SEE P. 8.1
TO FR JCT BOX
ENGINE BRAKE SYSTEM
SEE P. 19.1
TO WORLD TR. RLY VIM2 (87)
(ENG. BRK DISABLE) SEE P. 6.1
TO CLUSTER
CONN LX(1,11) SEE P 7.1
C406
901
900
TO PRODRIVER
SEE PAGE 8.1
541-18
TO INTERFACE CON. ABS SYST.
C406 (A & B) SEE P. 21.1
TO INTERFACE CON. WORLD TR.
CVI2 (1 & 2) SEE P. 6.1
528-18
DDR CONNECTOR
C380
953
439
901
900
SH1
439-18
509-18
419-18
916-18
417-18
952-18
510-18
0-0C2-18
12V FROM CB130
SEE PAGE 28.1
C71
17
PARKING BRAKE SIGNAL
FROM PARK BRK SW.
SEE P. 8.1
R7
12-12DT-18
0-0T1-18
24-91A-20
24-91-18
FROM DASH LTS
RHEOST. SEE P 11.2
91J
114A
C251
FAST IDLE SW.
C309
C32
C214
E.C.M. D.D.E.C. III
0-801-18
0-800-18
FROM E.C.U. ABS
CX1(1,3) SEE P.21.1
D.D.E.C. III & IV

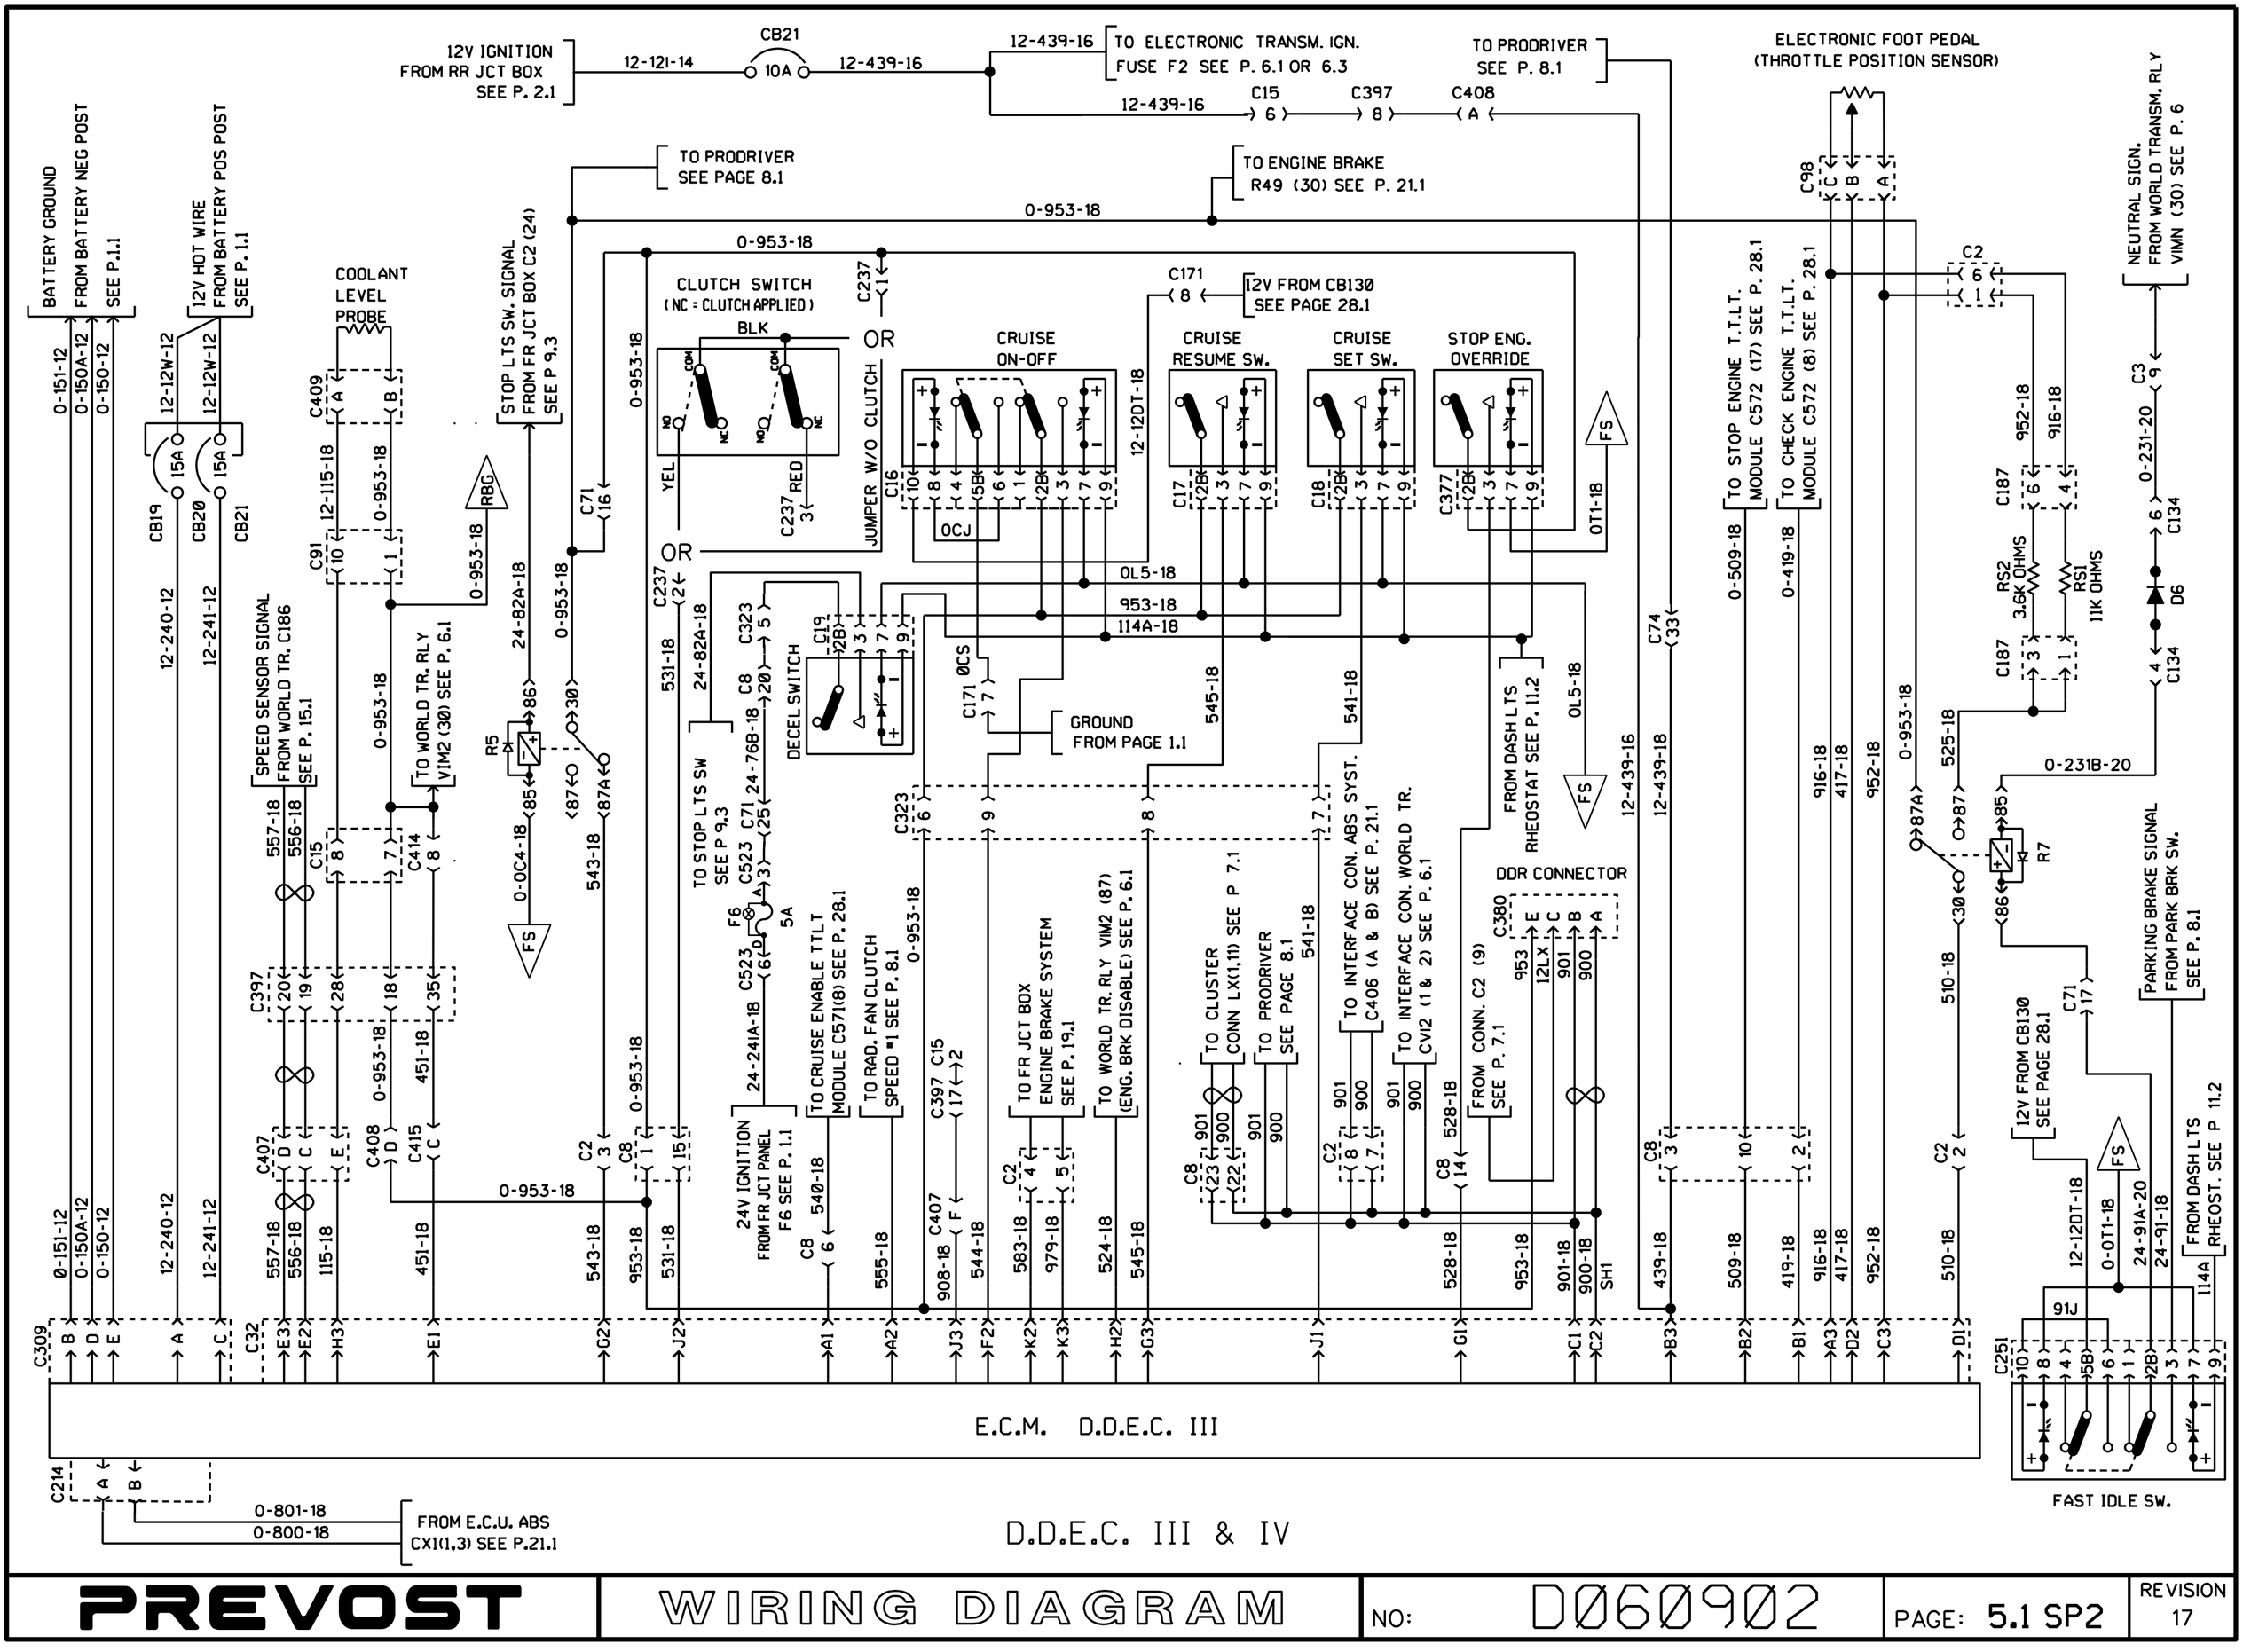
BATTERY GROUND
FROM BATTERY NEG POST
SEE P.1.1
12V HOT WIRE
FROM BATTERY POS POST
SEE P. 1.1
12V IGNITION
FROM RR JCT BOX
SEE P. 2.1
CB21
10A
TO ELECTRONIC TRANSM. IGN.
FUSE F2 SEE P. 6.1 OR 6.3
TO PRODRIVER
SEE P. 8.1
TO ENGINE BRAKE
R49 (30) SEE P. 21.1
ELECTRONIC FOOT PEDAL
(THROTTLE POSITION SENSOR)
NEUTRAL SIGN.
FROM WORLD TRANSM. RLY
VIMN (30) SEE P. 6
COOLANT
LEVEL
PROBE
STOP LTS SW. SIGNAL
FROM FR JCT BOX C2 (24)
SEE P 9.3
CLUTCH SWITCH
(NC = CLUTCH APPLIED)
JUMPER W/O CLUTCH
CRUISE
ON-OFF
CRUISE
RESUME SW.
CRUISE
SET SW.
STOP ENG.
OVERRIDE
12V FROM CB130
SEE PAGE 28.1
TO STOP ENGINE T.T.L.T.
MODULE C572 (17) SEE P. 28.1
TO CHECK ENGINE T.T.L.T.
MODULE C572 (8) SEE P. 28.1
SPEED SENSOR SIGNAL
FROM WORLD TR. C186
SEE P. 15.1
TO WORLD TR. RLY
VIM2 (30) SEE P. 6.1
DECEL SWITCH
GROUND
FROM PAGE 1.1
TO STOP LTS SW
SEE P 9.3
TO CRUISE ENABLE TTLT
MODULE C571(8) SEE P. 28.1
TO RAD. FAN CLUTCH
SPEED #1 SEE P. 8.1
TO FR JCT BOX
ENGINE BRAKE SYSTEM
SEE P. 19.1
TO WORLD TR. RLY VIM2 (87)
(ENG. BRK DISABLE) SEE P. 6.1
24V IGNITION
FROM FR JCT PANEL
F6 SEE P. 1.1
TO CLUSTER
CONN LX(1,11) SEE P 7.1
TO PRODRIVER
SEE PAGE 8.1
TO INTERFACE CON. ABS SYST.
C406 (A & B) SEE P. 21.1
TO INTERFACE CON. WORLD TR.
CVI2 (1 & 2) SEE P. 6.1
FROM CONN. C2 (9)
SEE P. 7.1
FROM DASH LTS
RHEOSTAT SEE P. 11.2
DDR CONNECTOR
RS2
3.6K OHMS
RS1
11K OHMS
R5
R7
FAST IDLE SW.
PARKING BRAKE SIGNAL
FROM PARK BRK SW.
SEE P. 8.1
12V FROM CB130
SEE PAGE 28.1
FROM DASH LTS
RHEOST. SEE P 11.2
E.C.M. D.D.E.C. III
FROM E.C.U. ABS
CX1(1,3) SEE P.21.1
D.D.E.C. III & IV

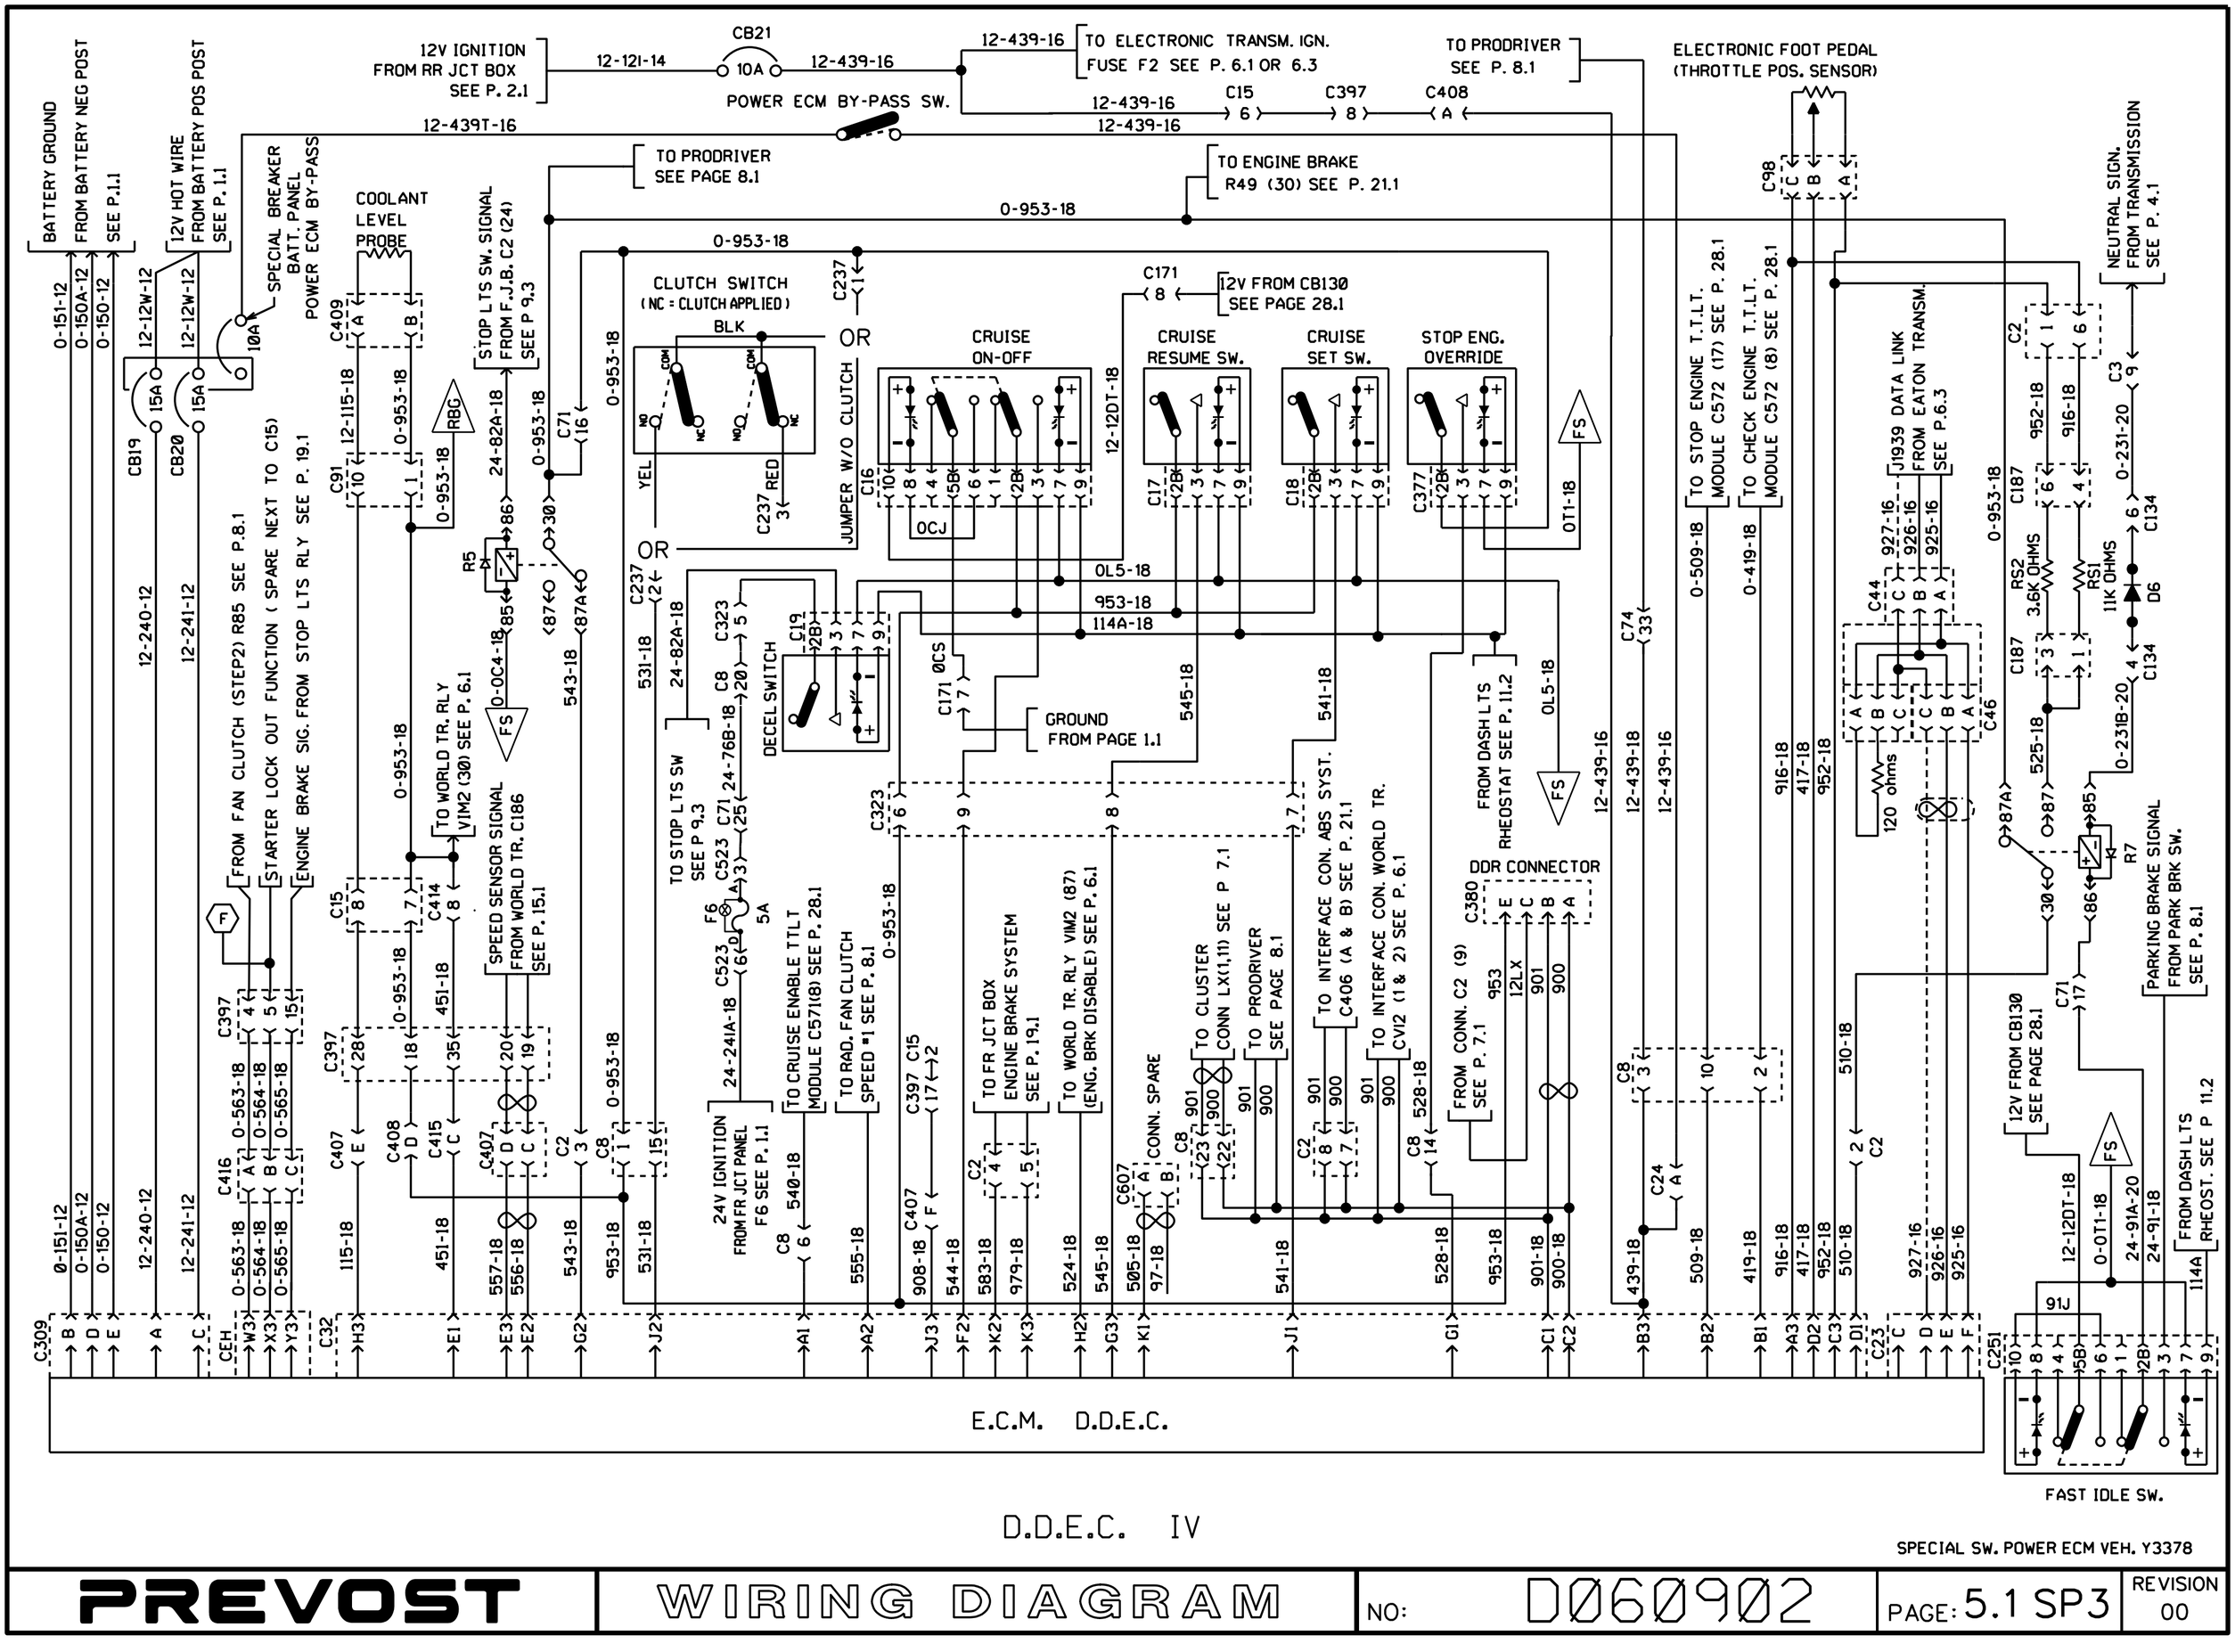
BATTERY GROUND
FROM BATTERY NEG POST
SEE P.1.1
12V HOT WIRE
FROM BATTERY POS POST
SEE P. 1.1
SPECIAL BREAKER
BATT. PANEL
POWER ECM BY-PASS
12V IGNITION
FROM RR JCT BOX
SEE P. 2.1
CB21
10A
POWER ECM BY-PASS SW.
TO ELECTRONIC TRANSM. IGN.
FUSE F2 SEE P. 6.1 OR 6.3
TO PRODRIVER
SEE P. 8.1
ELECTRONIC FOOT PEDAL
(THROTTLE POS. SENSOR)
TO PRODRIVER
SEE PAGE 8.1
TO ENGINE BRAKE
R49 (30) SEE P. 21.1
COOLANT
LEVEL
PROBE
STOP LTS SW. SIGNAL
FROM F.J.B. C2 (24)
SEE P 9.3
CLUTCH SWITCH
(NC = CLUTCH APPLIED)
JUMPER W/O CLUTCH
CRUISE
ON-OFF
CRUISE
RESUME SW.
CRUISE
SET SW.
STOP ENG.
OVERRIDE
12V FROM CB130
SEE PAGE 28.1
TO STOP ENGINE T.T.L.T.
MODULE C572 (17) SEE P. 28.1
TO CHECK ENGINE T.T.L.T.
MODULE C572 (8) SEE P. 28.1
J1939 DATA LINK
FROM EATON TRANSM.
SEE P.6.3
NEUTRAL SIGN.
FROM TRANSMISSION
SEE P. 4.1
TO WORLD TR. RLY
VIM2 (30) SEE P. 6.1
FROM FAN CLUTCH (STEP2) R85 SEE P.8.1
STARTER LOCK OUT FUNCTION (SPARE NEXT TO C15)
ENGINE BRAKE SIG. FROM STOP LTS RLY SEE P. 19.1
SPEED SENSOR SIGNAL
FROM WORLD TR. C186
SEE P. 15.1
DECEL SWITCH
GROUND
FROM PAGE 1.1
TO STOP LTS SW
SEE P 9.3
TO CRUISE ENABLE TTLT
MODULE C571(8) SEE P. 28.1
TO RAD. FAN CLUTCH
SPEED "1 SEE P. 8.1
TO FR JCT BOX
ENGINE BRAKE SYSTEM
SEE P. 19.1
TO WORLD TR. RLY VIM2 (87)
(ENG. BRK DISABLE) SEE P. 6.1
24V IGNITION
FROM FR JCT PANEL
F6 SEE P. 1.1
CONN. SPARE
TO CLUSTER
CONN LX(1,11) SEE P 7.1
TO PRODRIVER
SEE PAGE 8.1
TO INTERFACE CON. ABS SYST.
C406 (A & B) SEE P. 21.1
TO INTERFACE CON. WORLD TR.
CVI2 (1 & 2) SEE P. 6.1
FROM CONN. C2 (9)
SEE P. 7.1
FROM DASH LTS
RHEOSTAT SEE P. 11.2
DDR CONNECTOR
RS2 3.6K OHMS
RS1 11K OHMS
120 ohms
PARKING BRAKE SIGNAL
FROM PARK BRK SW.
SEE P. 8.1
FROM DASH LTS
RHEOST. SEE P 11.2
FAST IDLE SW.
E.C.M. D.D.E.C.
D.D.E.C. IV
SPECIAL SW. POWER ECM VEH. Y3378

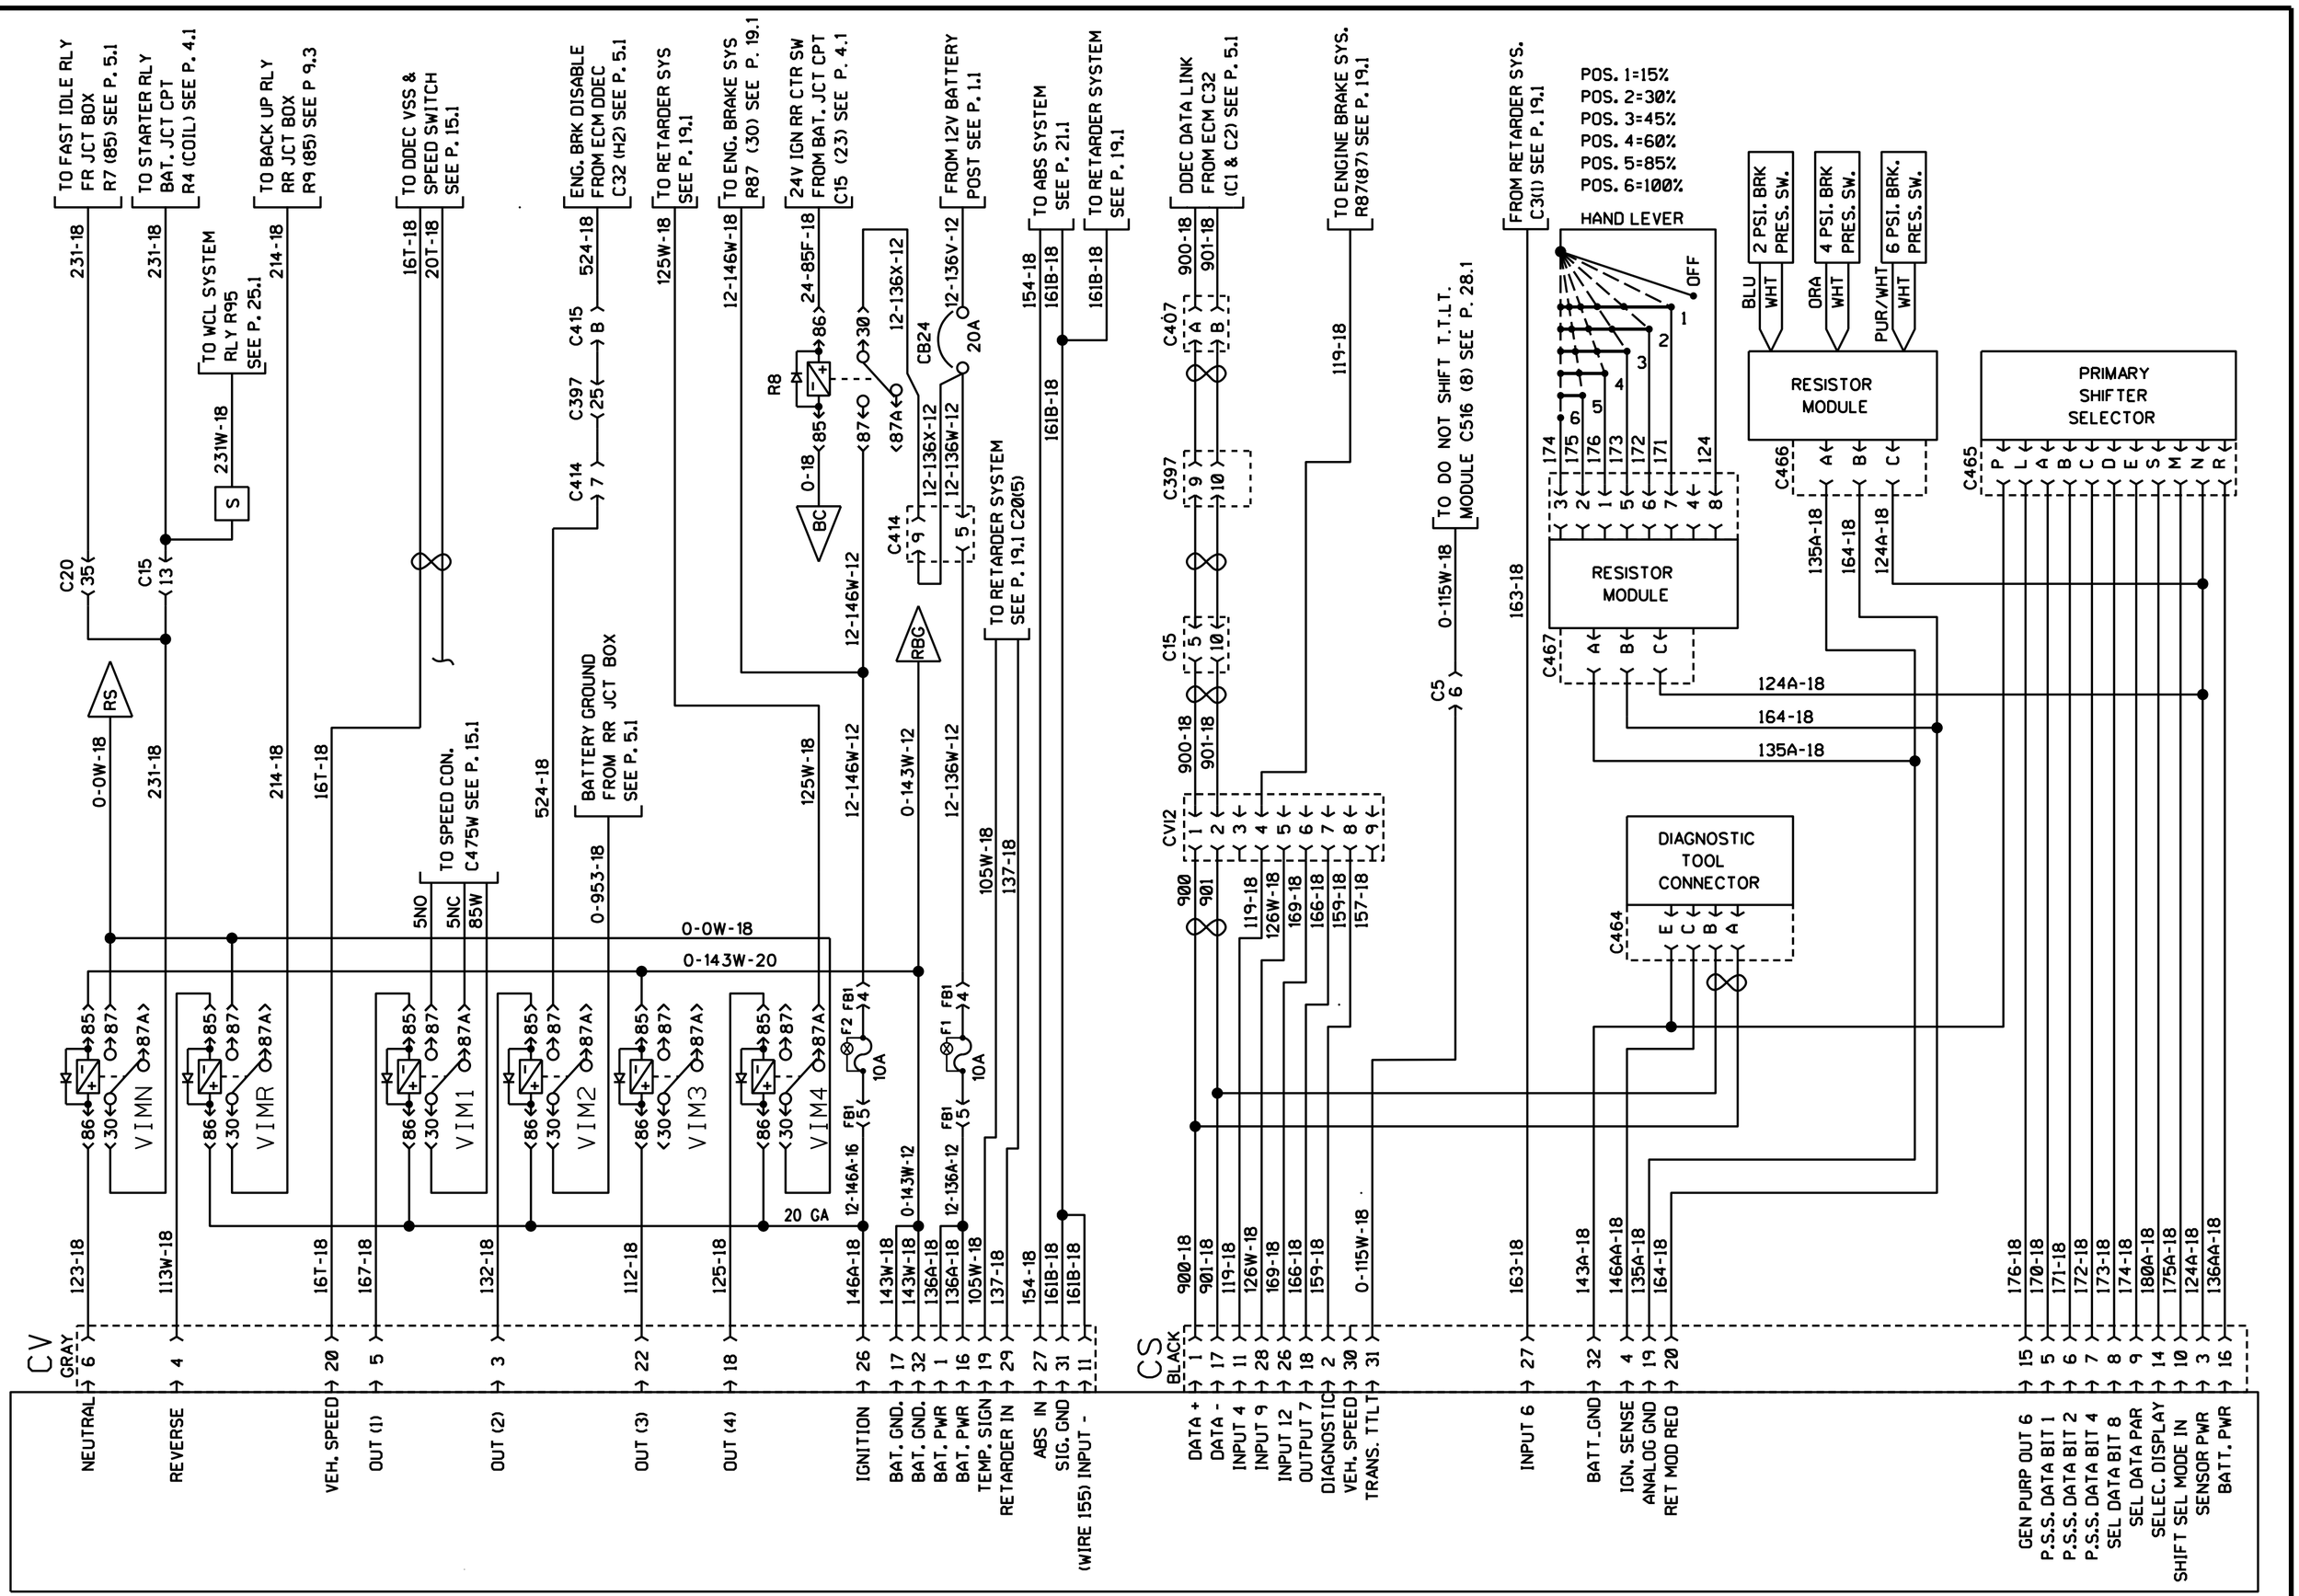

WORLD TRANSMISSION E.C.U.

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 6.1	REVISION 00

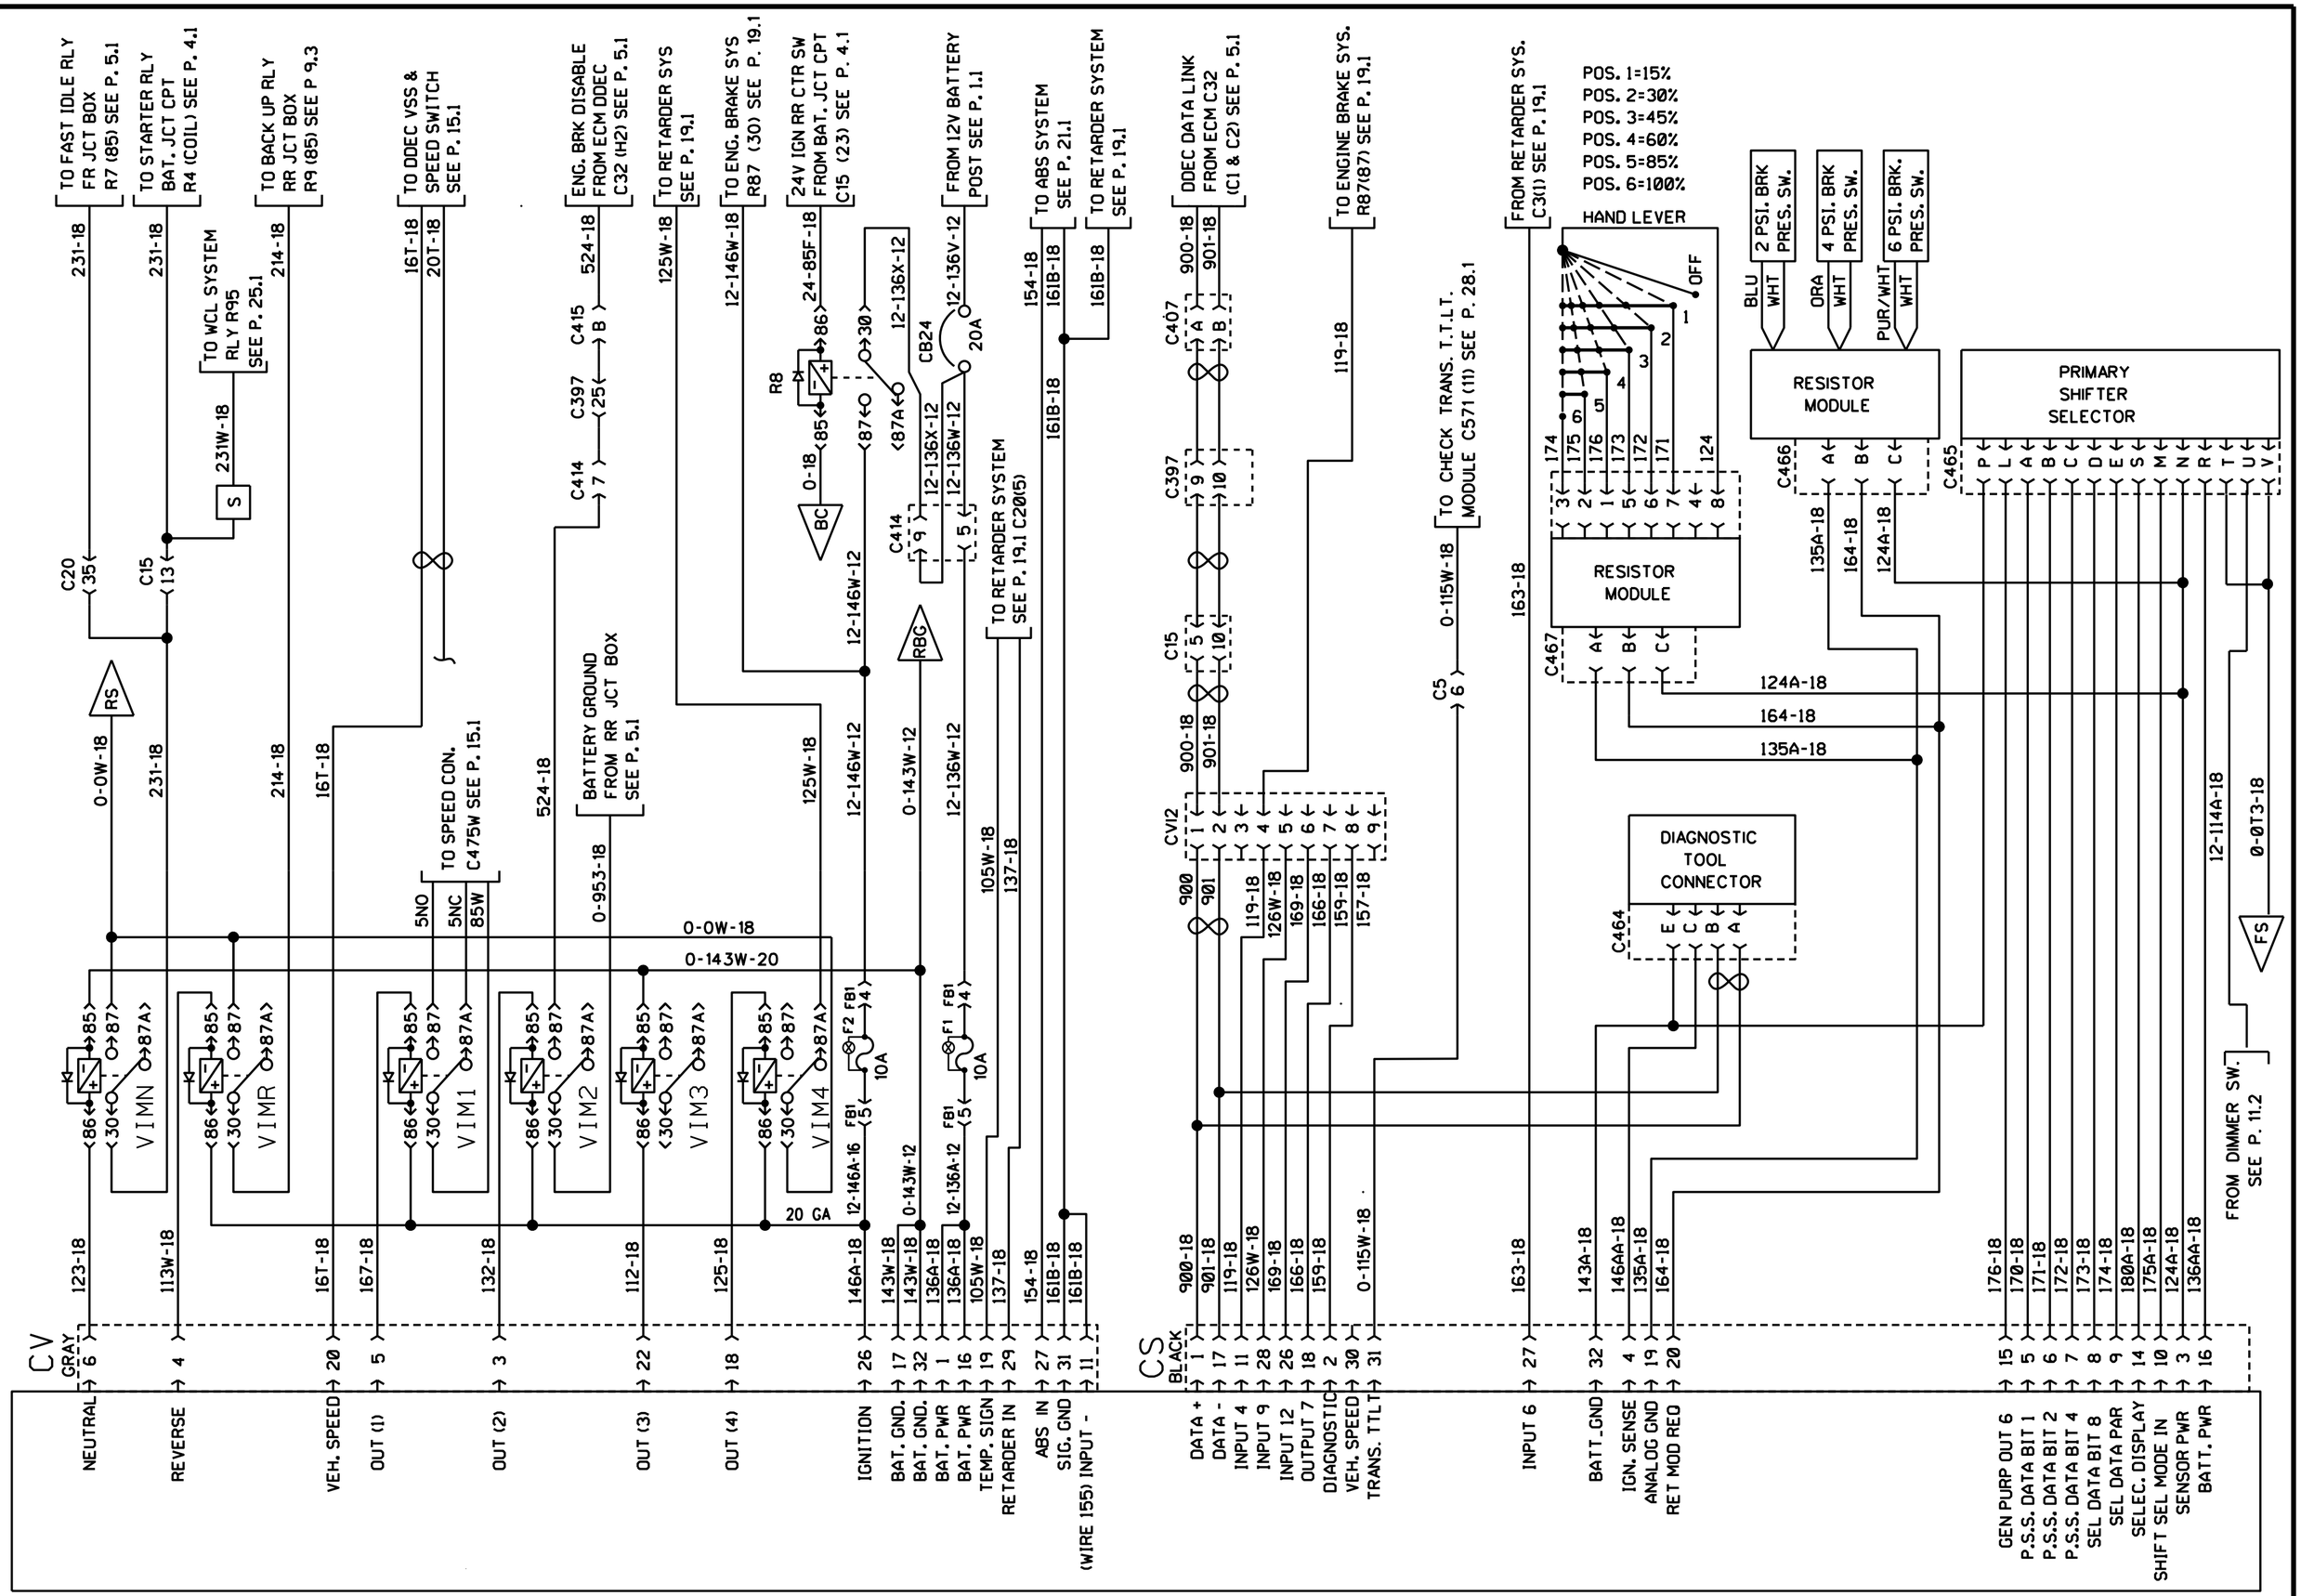

WORLD TRANSMISSION E.C.U.

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 6.1	REVISION 01

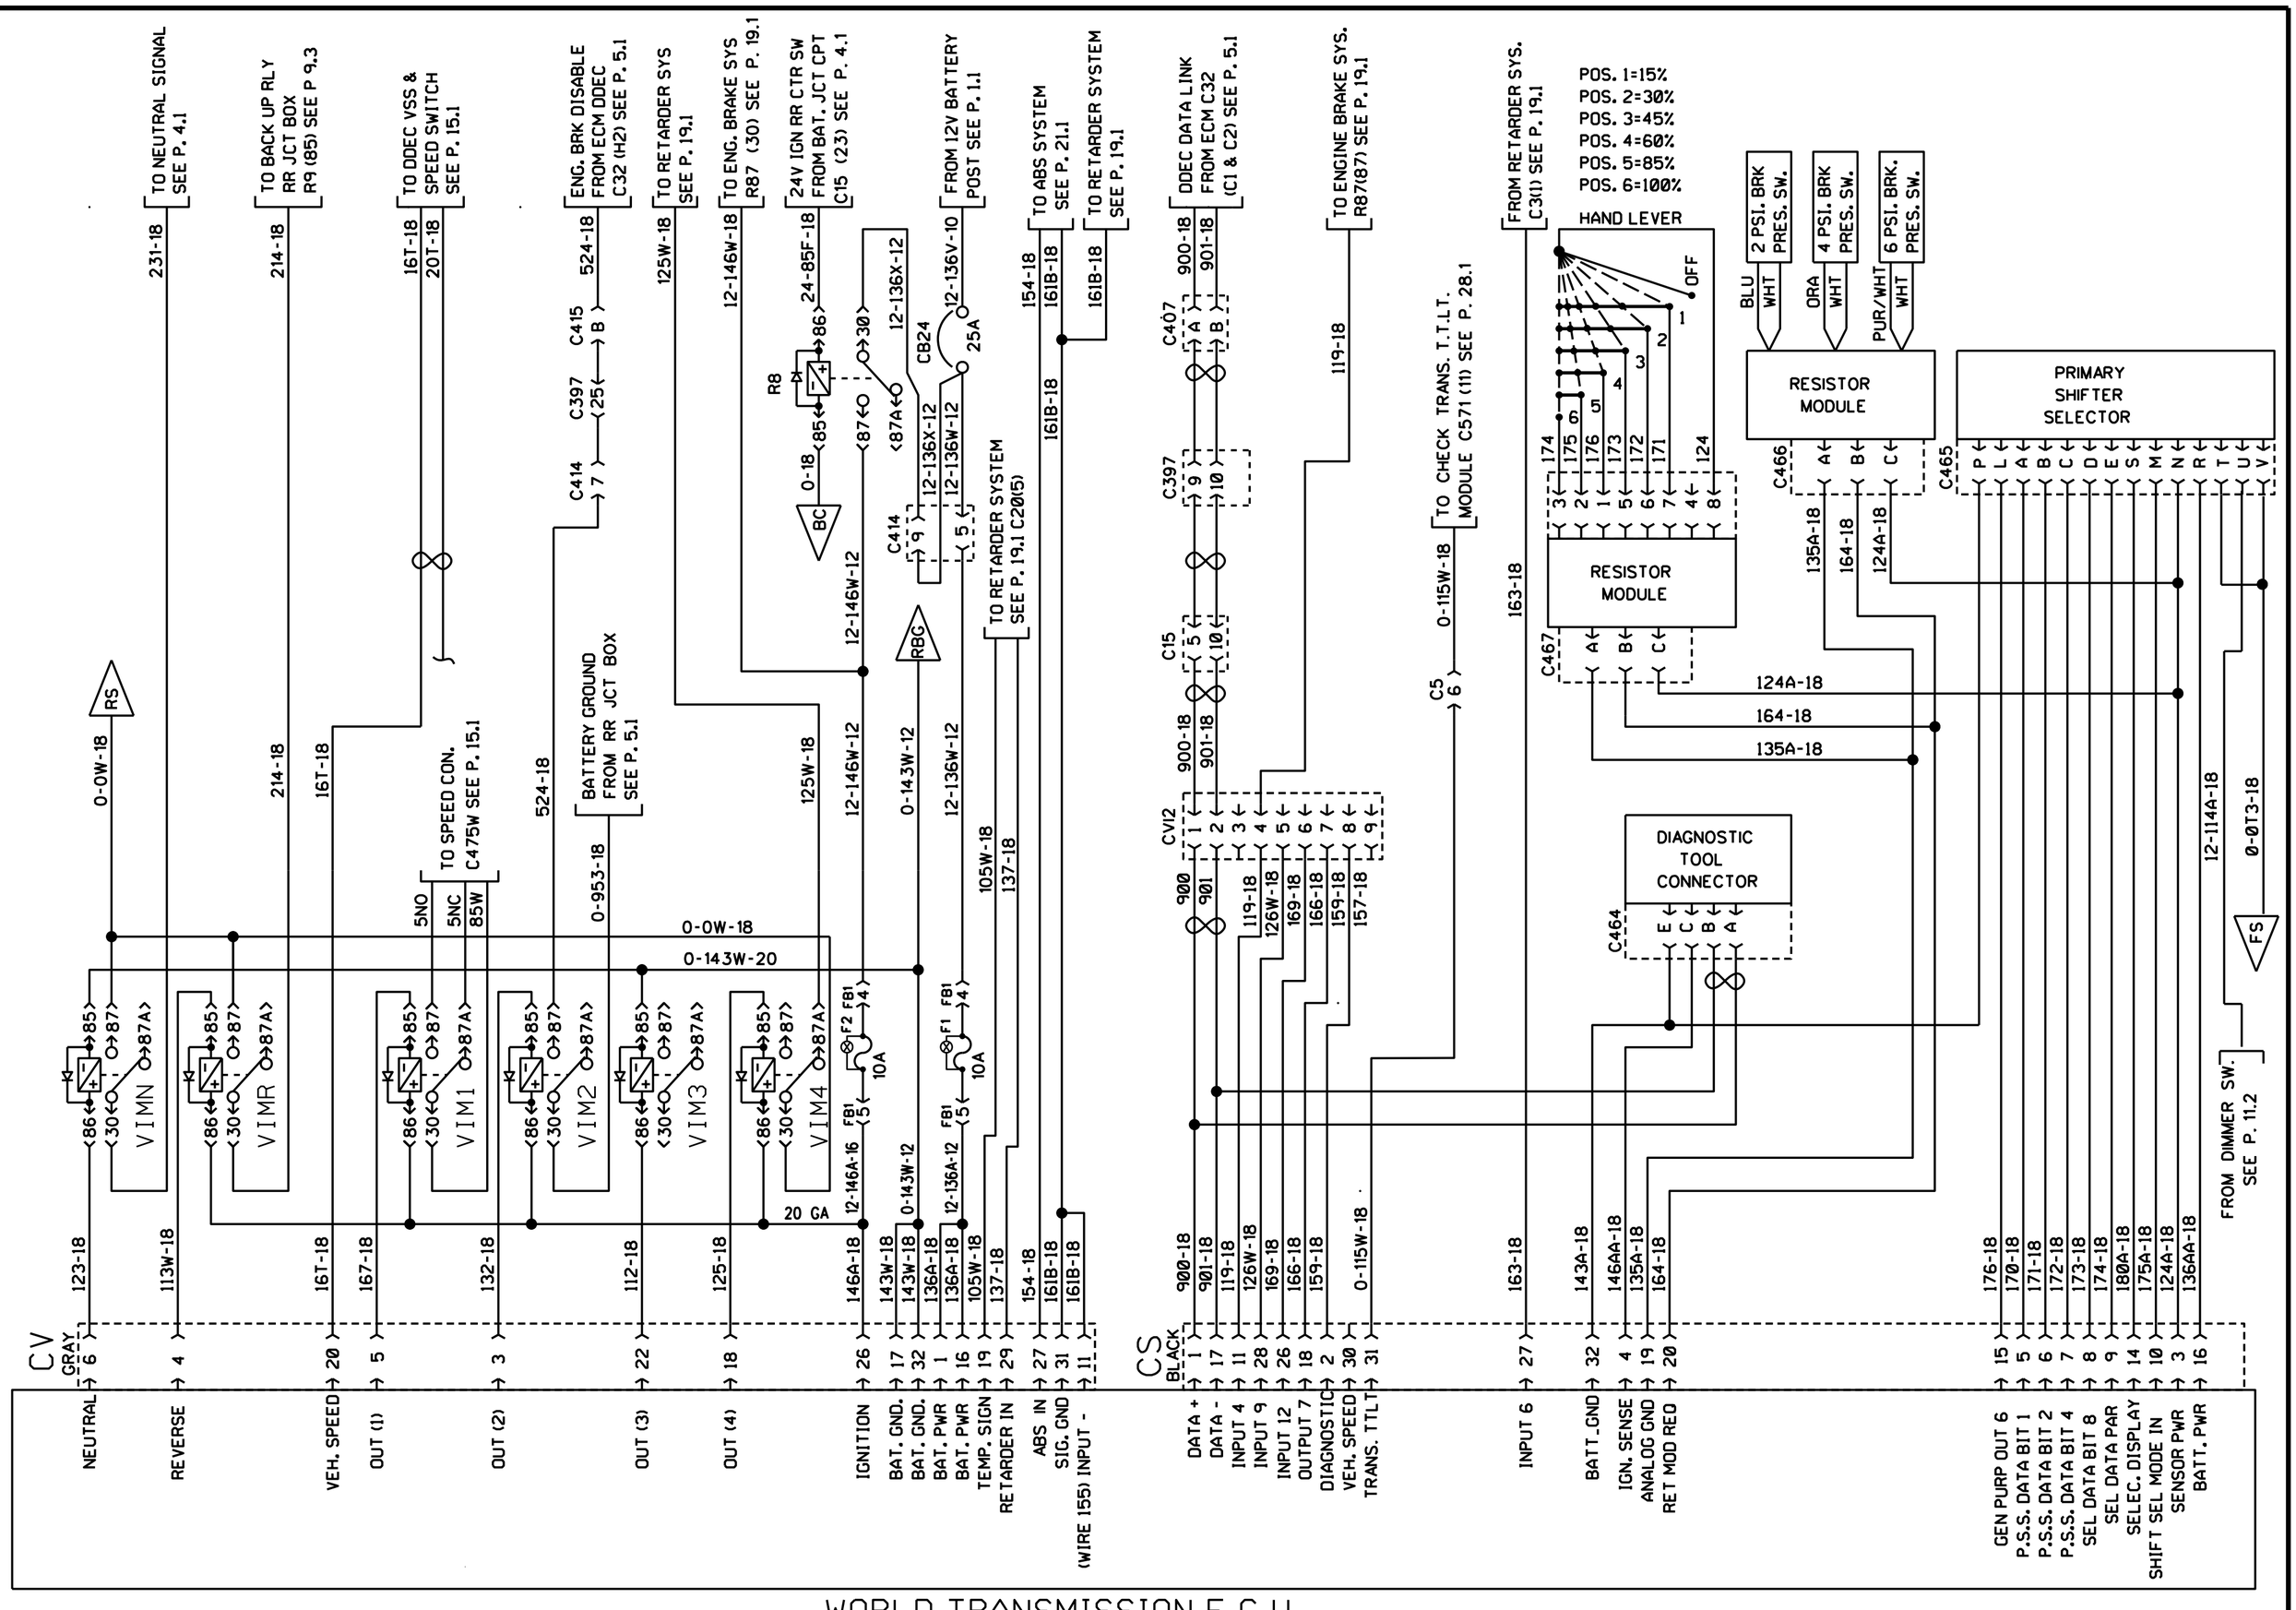

WORLD TRANSMISSION E.C.U.

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 6.1	REVISION 08

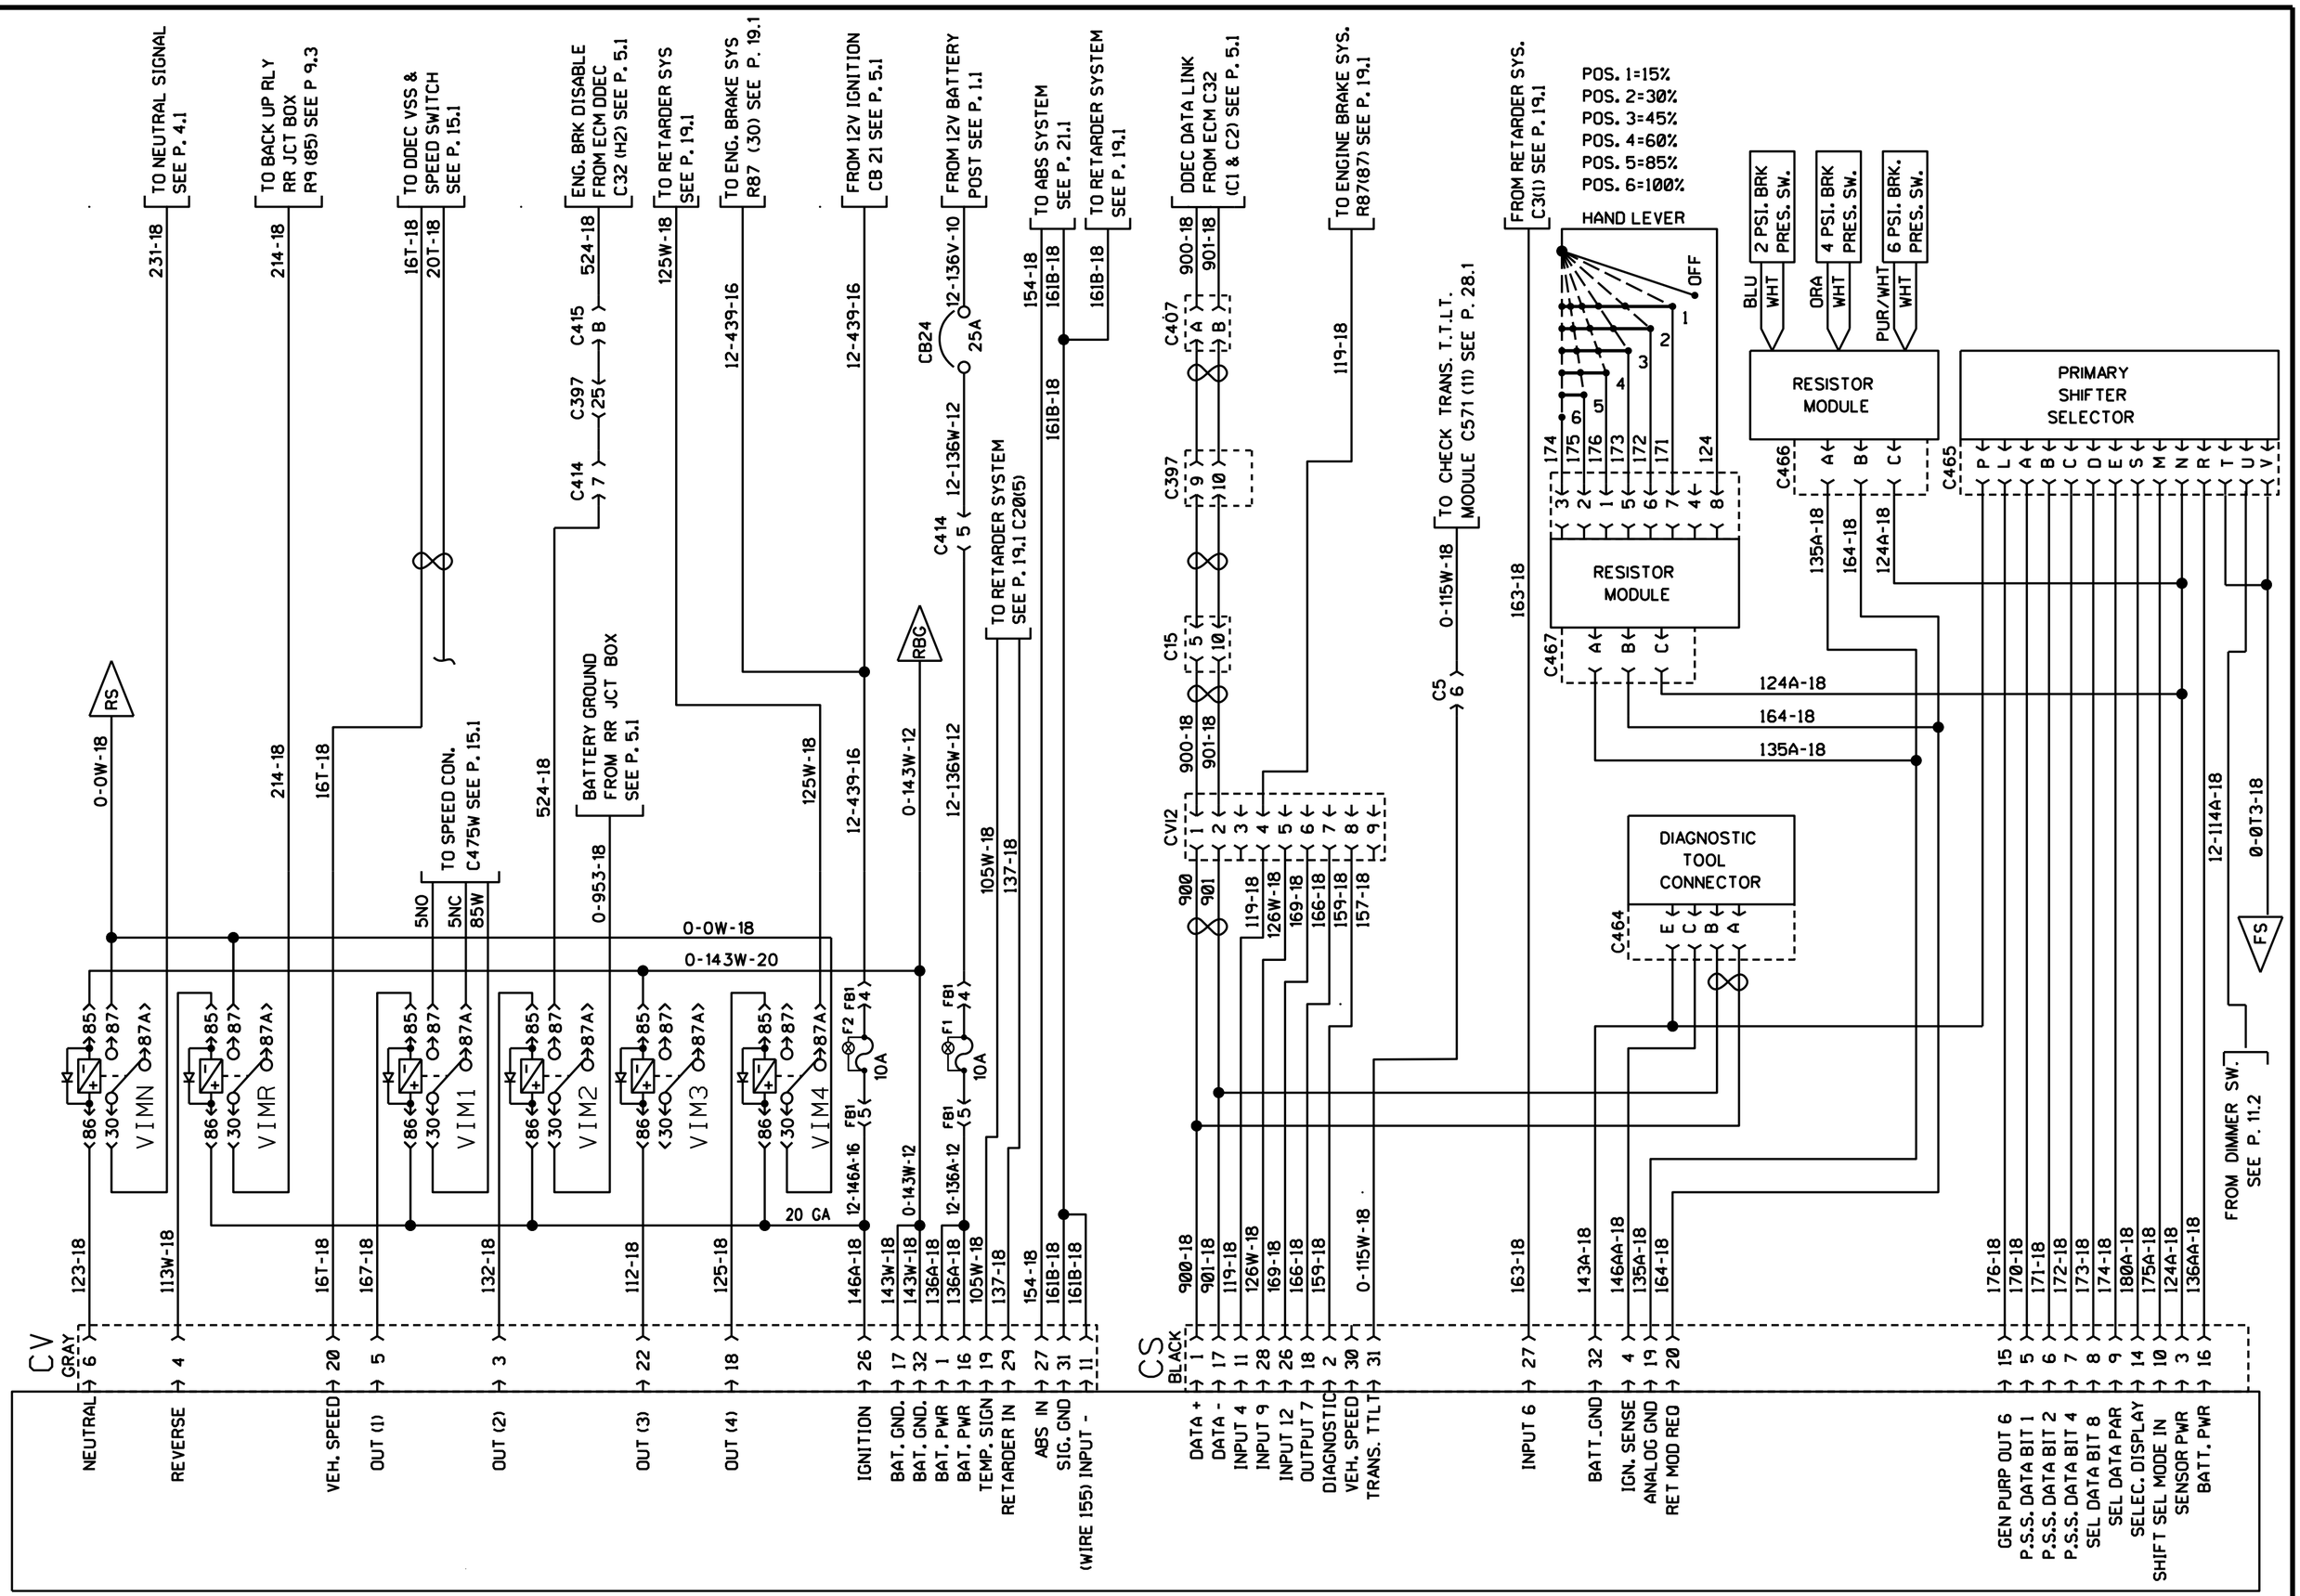

WORLD TRANSMISSION E.C.U.

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 6.1	REVISION 09

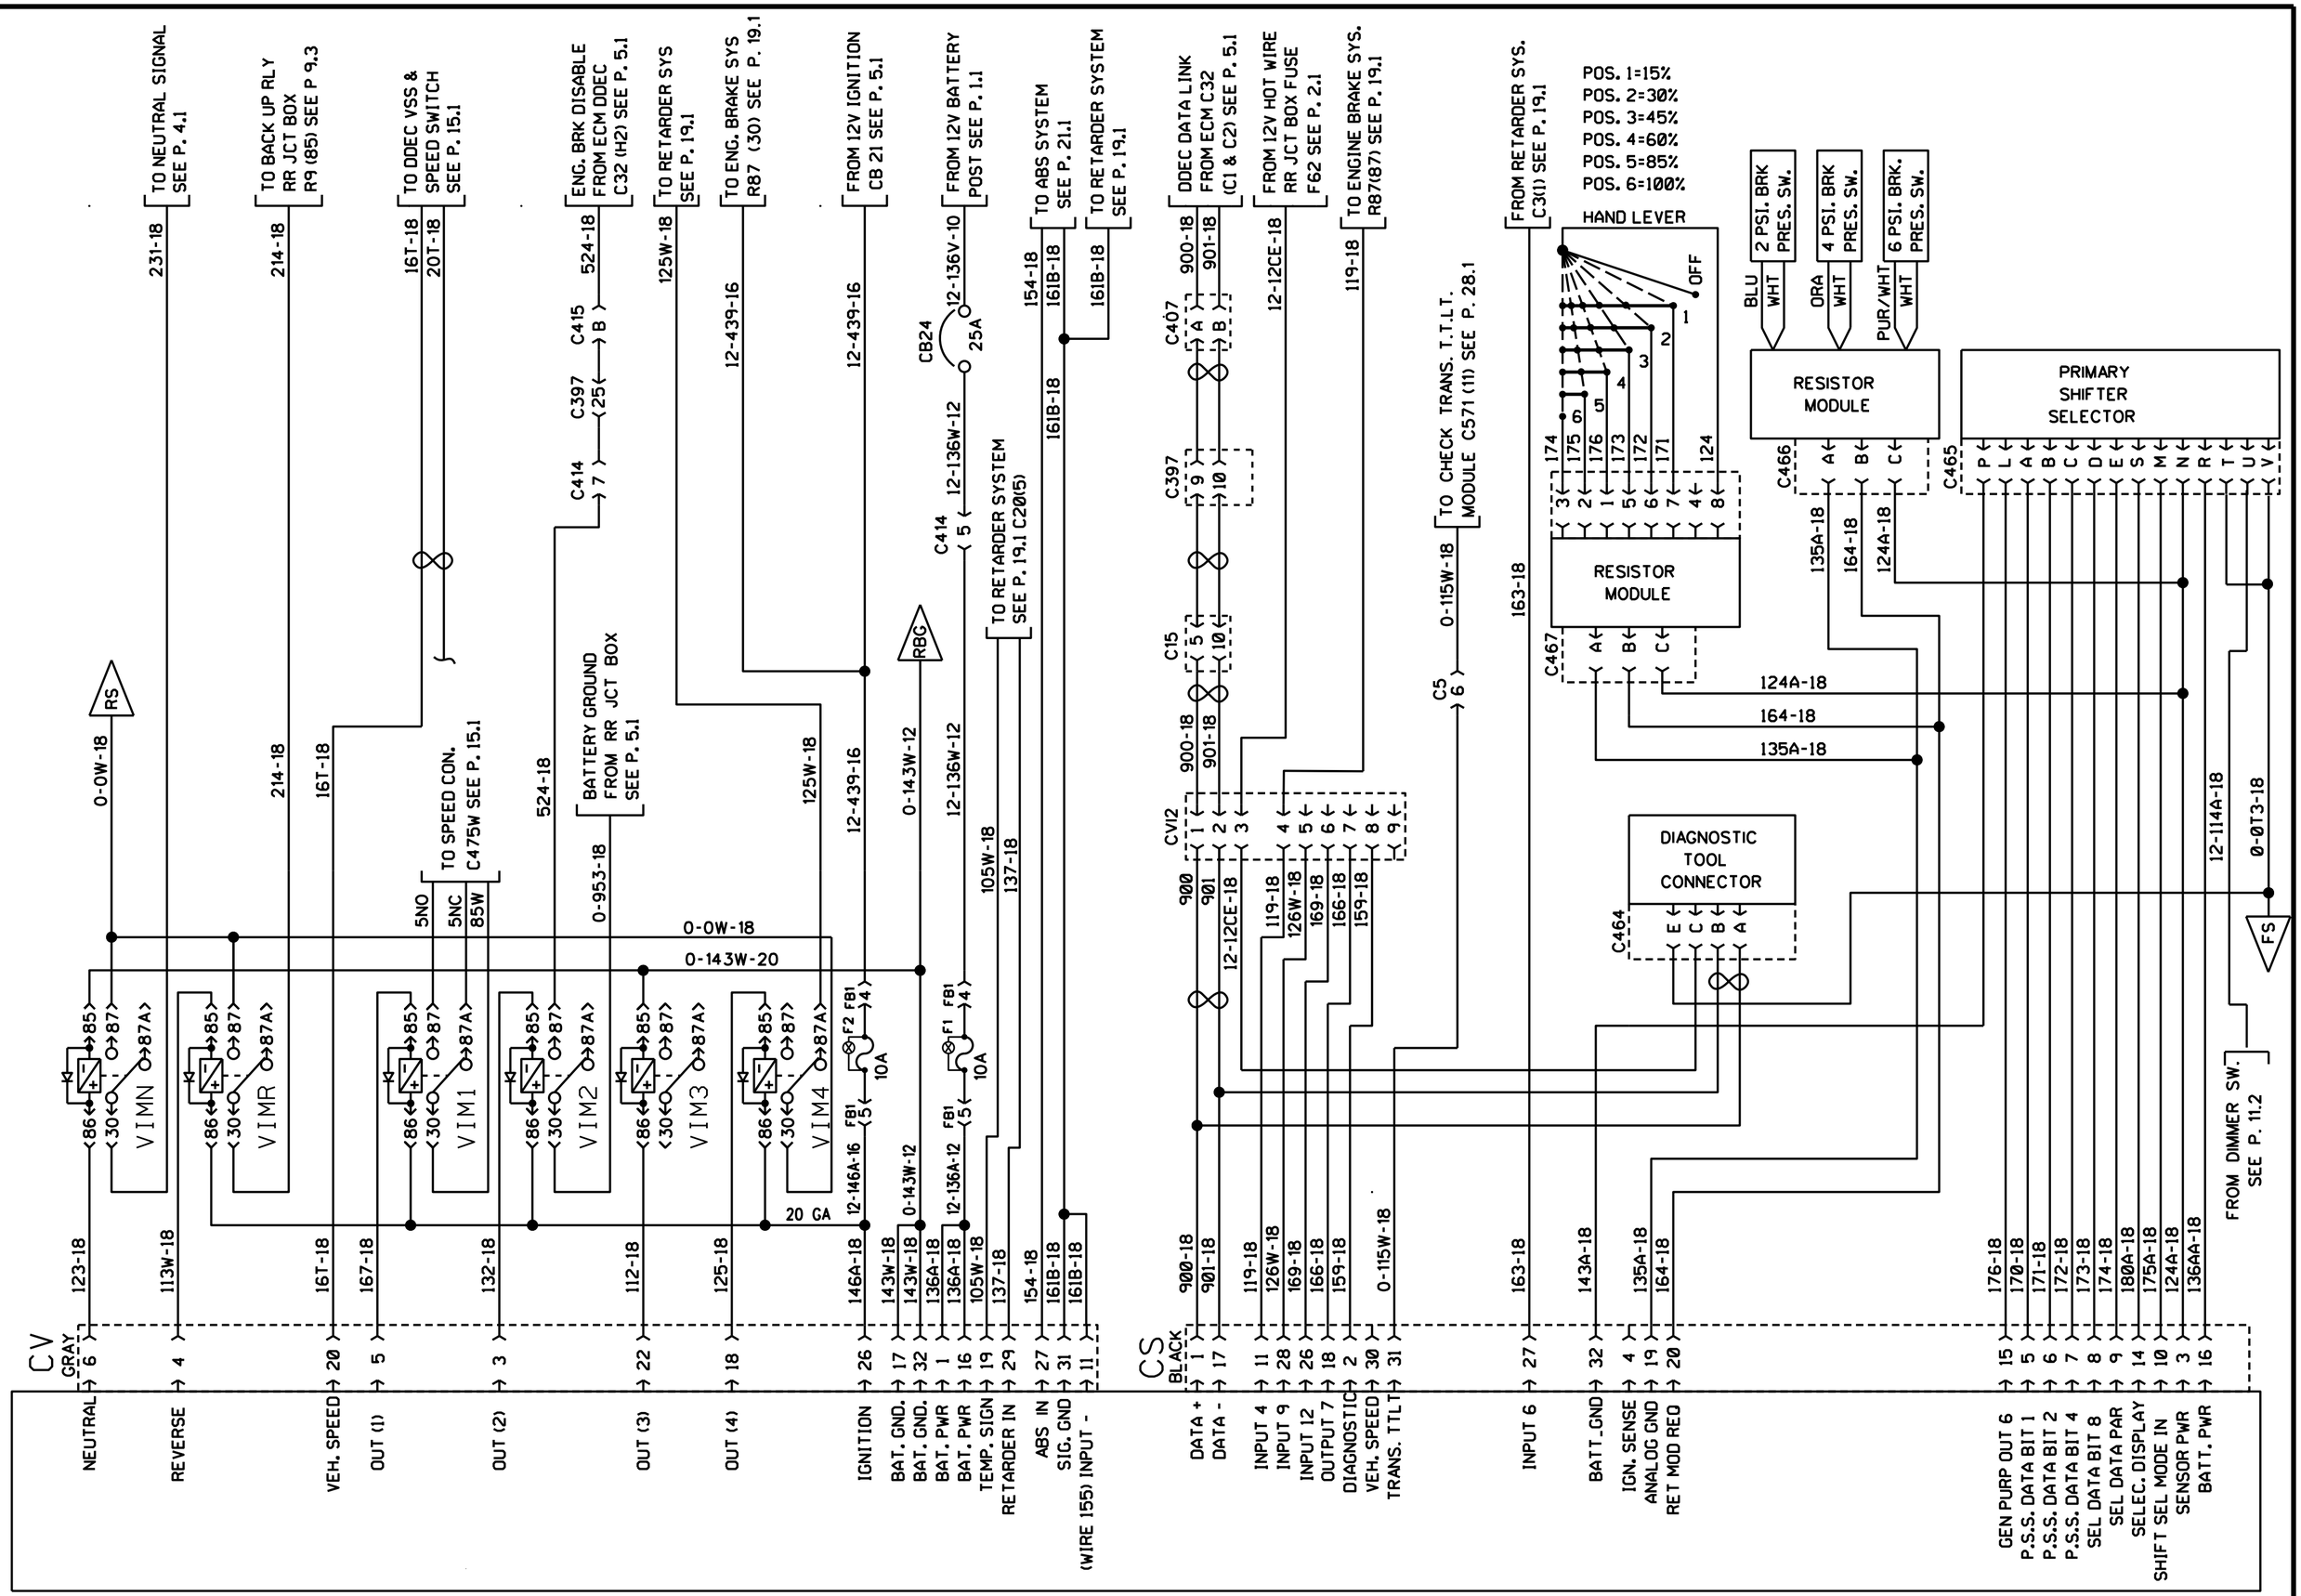

WORLD TRANSMISSION E.C.U.

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 6.1	REVISION 16

PREVOST

WIRING DIAGRAM

WORLD TRANSMISSION E.C.U.

NO: D060902

PAGE: 6.1sp1

REVISION 00

CV
GRAY

NEUTRAL → 6
REVERSE → 4
VEH. SPEED → 20
OUT (1) → 5
OUT (2) → 3
OUT (3) → 22
OUT (4) → 18
IGNITION → 26
BAT. GND. → 17
BAT. GND. → 32
BAT. PWR → 1
BAT. PWR → 16
TEMP. SIGN → 19
RETARDER IN → 29
ABS IN → 27
SIG. GND → 31
(WIRE 155) INPUT - → 11

123-18
113W-18
16T-18
167-18
132-18
112-18
125-18
146A-18
143W-18
143W-18
136A-18
136A-18
105W-18
137-18
154-18
161B-18
161B-18

VIMN
VIMR
VIM1
VIM2
VIM3
VIM4
86 85 30 87 87A

0-0W-18 → RS
231-18 → TO NEUTRAL SIGNAL SEE P. 4.1
214-18 → TO BACK UP RLY RR JCT BOX R9 (85) SEE P 9.3
16T-18 → TO DDEC VSS & SPEED SWITCH SEE P. 15.1
20T-18
5NO
5NC
85W
TO SPEED CON. C475W SEE P. 15.1
524-18 → C414 7 → C397 25 → C415 B → 524-18 ENG. BRK DISABLE FROM ECM DDEC C32 (H2) SEE P. 5.1
0-953-18 → BATTERY GROUND FROM RR JCT BOX SEE P. 5.1
125W-18 → TO RETARDER SYS SEE P. 19.1
12-439-16 → TO ENG. BRAKE SYS R87 (30) SEE P. 19.1
0-143W-20
0-0W-18
20 GA
12-146A-16 FB1 5 F2 10A FB1 4
12-439-16 → FROM 12V IGNITION CB 21 SEE P. 5.1
0-143W-12 → RBG
12-136A-12 FB1 5 F1 10A FB1 4
12-136W-12 → C414 5 → CB24 25A → 12-136V-10 FROM 12V BATTERY POST SEE P. 1.1
105W-18 → TO RETARDER SYSTEM SEE P. 19.1 C20(5)
137-18
154-18 → TO ABS SYSTEM SEE P. 21.1
161B-18 → TO RETARDER SYSTEM SEE P. 19.1

CS
BLACK

DATA + → 1
DATA - → 17
INPUT 4 → 11
INPUT 9 → 28
INPUT 12 → 26
OUTPUT 7 → 18
DIAGNOSTIC → 2
VEH. SPEED → 30
TRANS. TTLT → 31
INPUT 6 → 27
BATT_GND → 32
IGN. SENSE → 4
ANALOG GND → 19
RET MOD REQ → 20
GEN PURP OUT 6 → 15
P.S.S. DATA BIT 1 → 5
P.S.S. DATA BIT 2 → 6
P.S.S. DATA BIT 4 → 7
SEL DATA BIT 8 → 8
SEL DATA PAR → 9
SELEC. DISPLAY → 14
SHIFT SEL MODE IN → 10
SENSOR PWR → 3
BATT. PWR → 16

900-18
901-18
119-18
126W-18
169-18
166-18
159-18
0-115W-18
163-18
143A-18
135A-18
164-18
176-18
170-18
171-18
172-18
173-18
174-18
180A-18
175A-18
124A-18
136AA-18

CVI2
C15
C397
C407

900 → 1 → 900-18 → 5 → 10 → 900-18 → 9 → 10 → 900-18 → A → B → 900-18 DDEC DATA LINK FROM ECM C32 (C1 & C2) SEE P. 5.1
901 → 2 → 901-18 → 901-18 → 901-18
12-12CE-18 → 3 → 12-12CE-18 FROM 12V HOT WIRE RR JCT BOX FUSE F62 SEE P. 2.1
119-18 → 4 → 119-18 TO ENGINE BRAKE SYS. R87(87) SEE P. 19.1
126W-18 → 5
169-18 → 6
166-18 → 7
159-18 → 8
9

C5 6 → 0-115W-18 → TO CHECK TRANS. T.T.LT. MODULE C571 (11) SEE P. 28.1
163-18 → FROM RETARDER SYS. C3(1) SEE P. 19.1

C467 RESISTOR MODULE
A B C → 3 2 1 5 6 7 4 8 → 174 175 176 173 172 171 124
HAND LEVER
OFF
SPECIAL JUMPER
POS. 1=15%
POS. 2=30%
POS. 3=45%
POS. 4=60%
POS. 5=85%
POS. 6=100%

C464 DIAGNOSTIC TOOL CONNECTOR
E C B A

C466 RESISTOR MODULE
A B C
135A-18
164-18
124A-18
BLU WHT 2 PSI. BRK PRES. SW.
ORA WHT 4 PSI. BRK PRES. SW.
PUR/WHT WHT 6 PSI. BRK. PRES. SW.

C465 PRIMARY SHIFTER SELECTOR
P L A B C D E S M N R T U V

FROM DIMMER SW. SEE P. 11.2
12-114A-18
FS
0-0T3-18

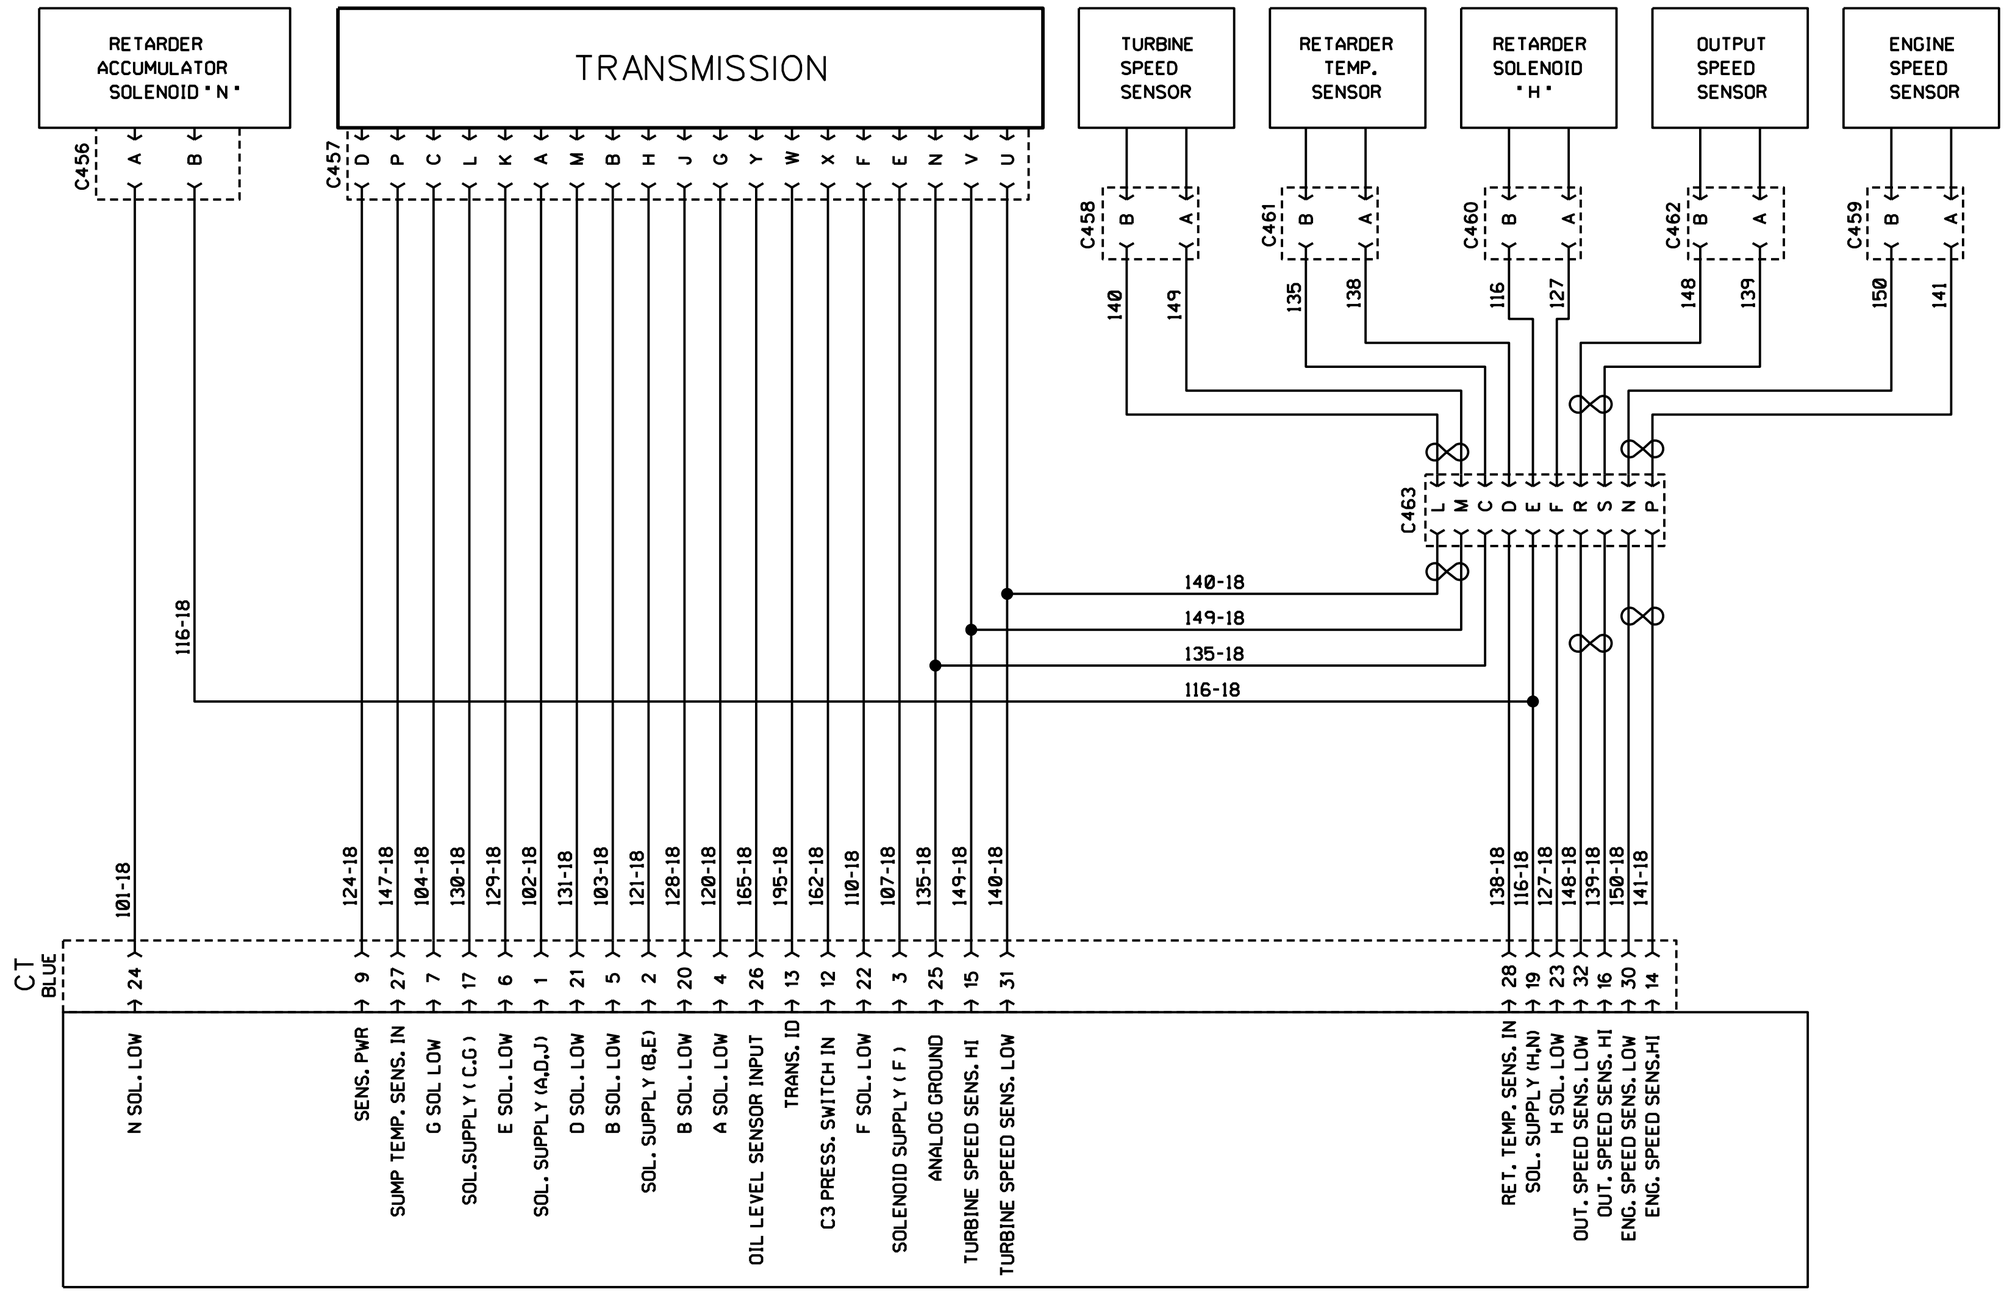

WORLD TRANSMISSION E.C.U. (SUITE)

TRANSMISSION HARNESS

REAR JUNCTION COMPARTIMENT

EATON TRANSMISSION CONTROLLER
32 WAYS
24 WAYS

GEAR SELECT SENSOR
RAIL SELECT SENSOR
REVERSE BALL SWITCH
INPUT SHAFT SPEED SENSOR
OUTPUT SHAFT SPEED SENSOR
MAIN SHAFT SPEED SENSOR
INERTIA BREAK SOLENOID
HI RANGE VALVE
HI
LO
RAIL SELECT MOTOR
GEAR SELECT MOTOR
J28
J29
C28
C29
C464
12CE
900
901
319
DDR CONNECTOR
C30
SYSTEM MANAGER ECU
C31
J1939 LOW
J1939 HIGH
SHIELD
C34
UP
DOWN
C36
SHIFT LEVER
C39
GEAR DISPLAY
R42
POWER CONNECT RELAY
(LOCATION: BATT. CPT.)
C22
C33
SERVICE PORT
C40
C25
120 ohms
R8
BC
CB24
C414
F2
10A
FB1
C22
C15
C397
C407
CVI2
FROM 12V HOT WIRE
RR JCT BOX FUSE
F62 SEE P. 2.1
24V IGN RR CTR SW
FROM BAT. JCT CPT
C15 (23) SEE P. 4.1
FROM 12V BATTERY
POST SEE P. 1.1
TO START ENABLE RLY
R10 (86) SEE P. 4.1
FROM DASH LTS RHEOSTAT SEE P 11.2
TO 12 VOLTS POWER
EATON TRANSMISSION
SEE SAME PAGE
DDEC DATA LINK
FROM ECM C32
C1 & C2 SEE P. 5.1
TO DDEC J1939
ECM DATA LINK
SEE C23 P. 5.1
FROM 12 VOLTS BATT.
CB24 SEE THIS PAGE
CHASSIS GND STUD
BATT. CPT.
25 amp
15 amp

EATON TRANSMISSION E.C.U.

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 6.3	REVISION 08

TRANSMISSION HARNESS

REAR JUNCTION COMPARTIMENT

EATON TRANSMISSION CONTROLLER
32 WAYS
24 WAYS

GEAR SELECT SENSOR
RAIL SELECT SENSOR
REVERSE BALL SWITCH
INPUT SHAFT SPEED SENSOR
OUTPUT SHAFT SPEED SENSOR
MAIN SHAFT SPEED SENSOR
INERTIA BREAK SOLENOID
HI RANGE VALVE LO
RAIL SELECT MOTOR
GEAR SELECT MOTOR
J28
J29
C28
C29
C464 DDR CONNECTOR
C30
C31
SYSTEM MANAGER ECU
J1939 LOW
J1939 HIGH
SHIELD
C34
UP
DOWN
C36
SHIFT LEVER
FROM 12V HOT WIRE RR JCT BOX FUSE F62 SEE P. 2.1
FROM 12V IGNITION CB21 SEE P.5.1
FROM 12V BATTERY POST SEE P. 1.1
TO START ENABLE RLY R10 (86) SEE P. 4.1
FROM DASH LTS RHEOSTAT SEE P 11.2
CB24 25A
F2 10A
FB1
GEAR DISPLAY
C39
R42
POWER CONNECT RELAY (LOCATION: BATT. CPT.)
C33 SERVICE PORT
C40
C25
120 ohms
CVI2
C15
C397
C407
DDEC DATA LINK FROM ECM C32 C1 & C2 SEE P. 5.1
TO DDEC J1939 ECM DATA LINK SEE C23 P. 5.1
TO 12 VOLTS POWER EATON TRANSMISSION SEE SAME PAGE
FROM 12 VOLTS BATT. CB24 SEE THIS PAGE
CHASSIS GND STUD BATT. CPT.
25 amp
15 amp

EATON TRANSMISSION E.C.U.

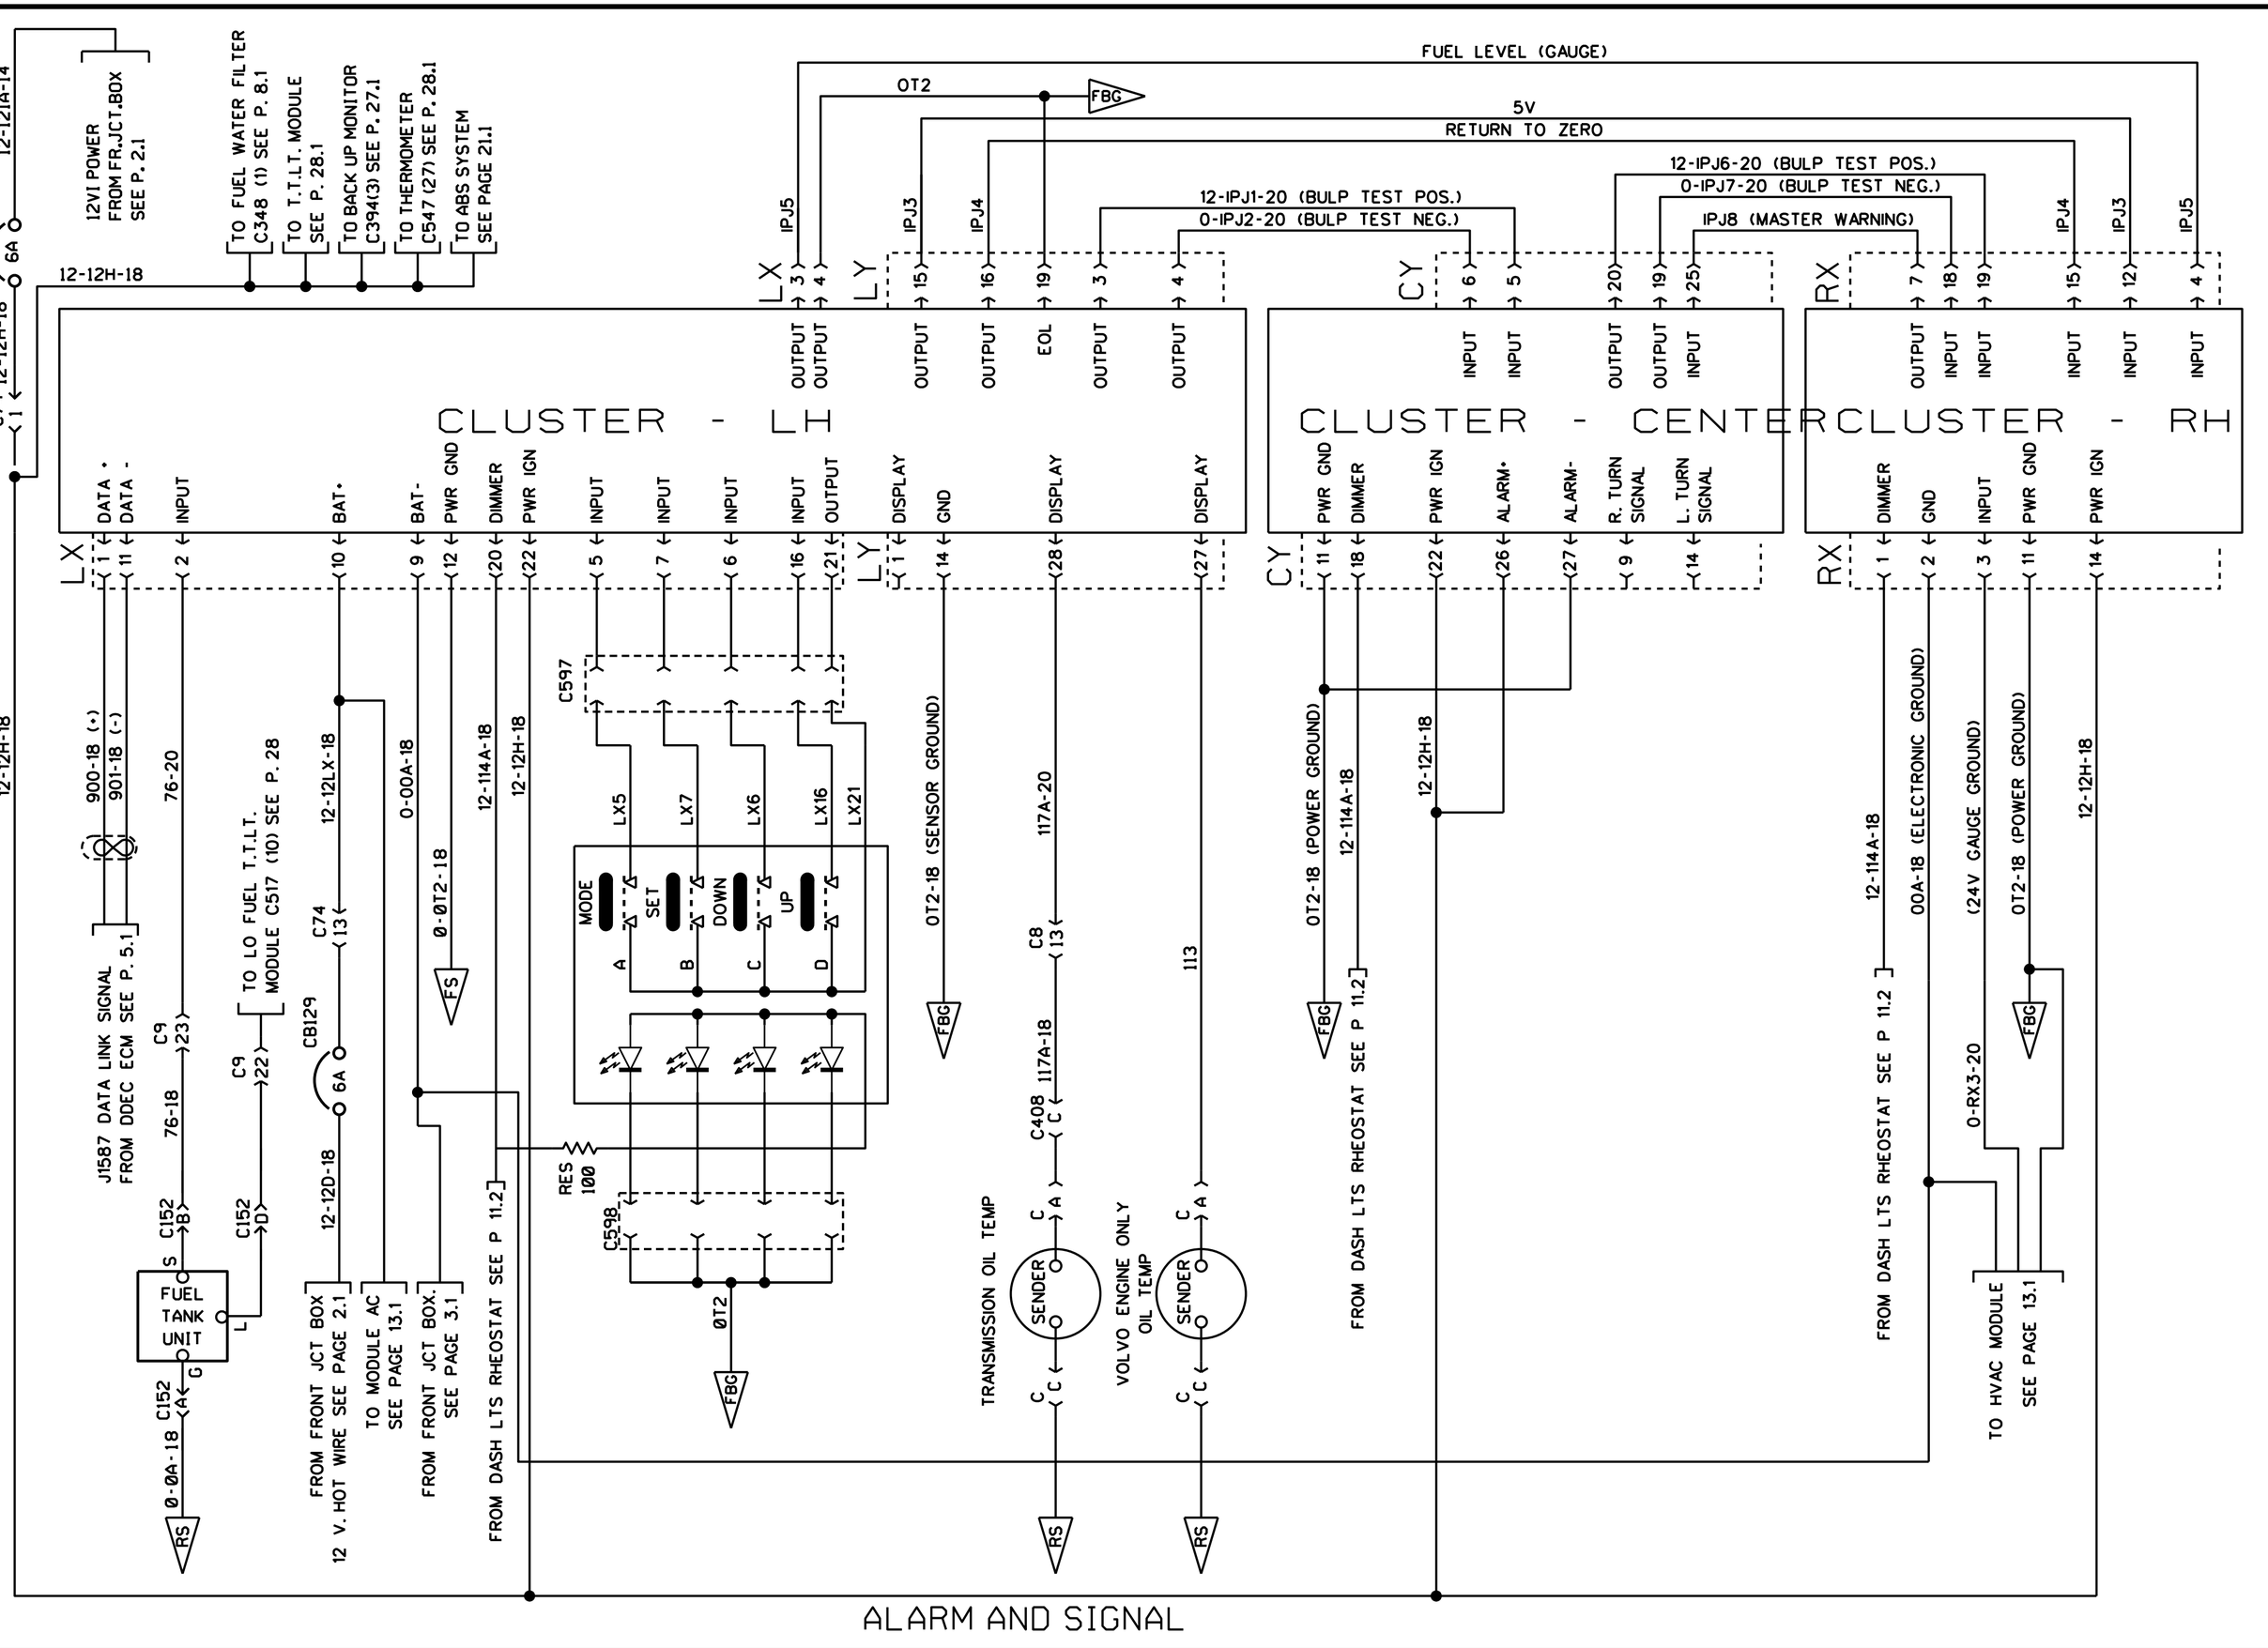

ALARM AND SIGNAL

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 7.1	REVISION 00

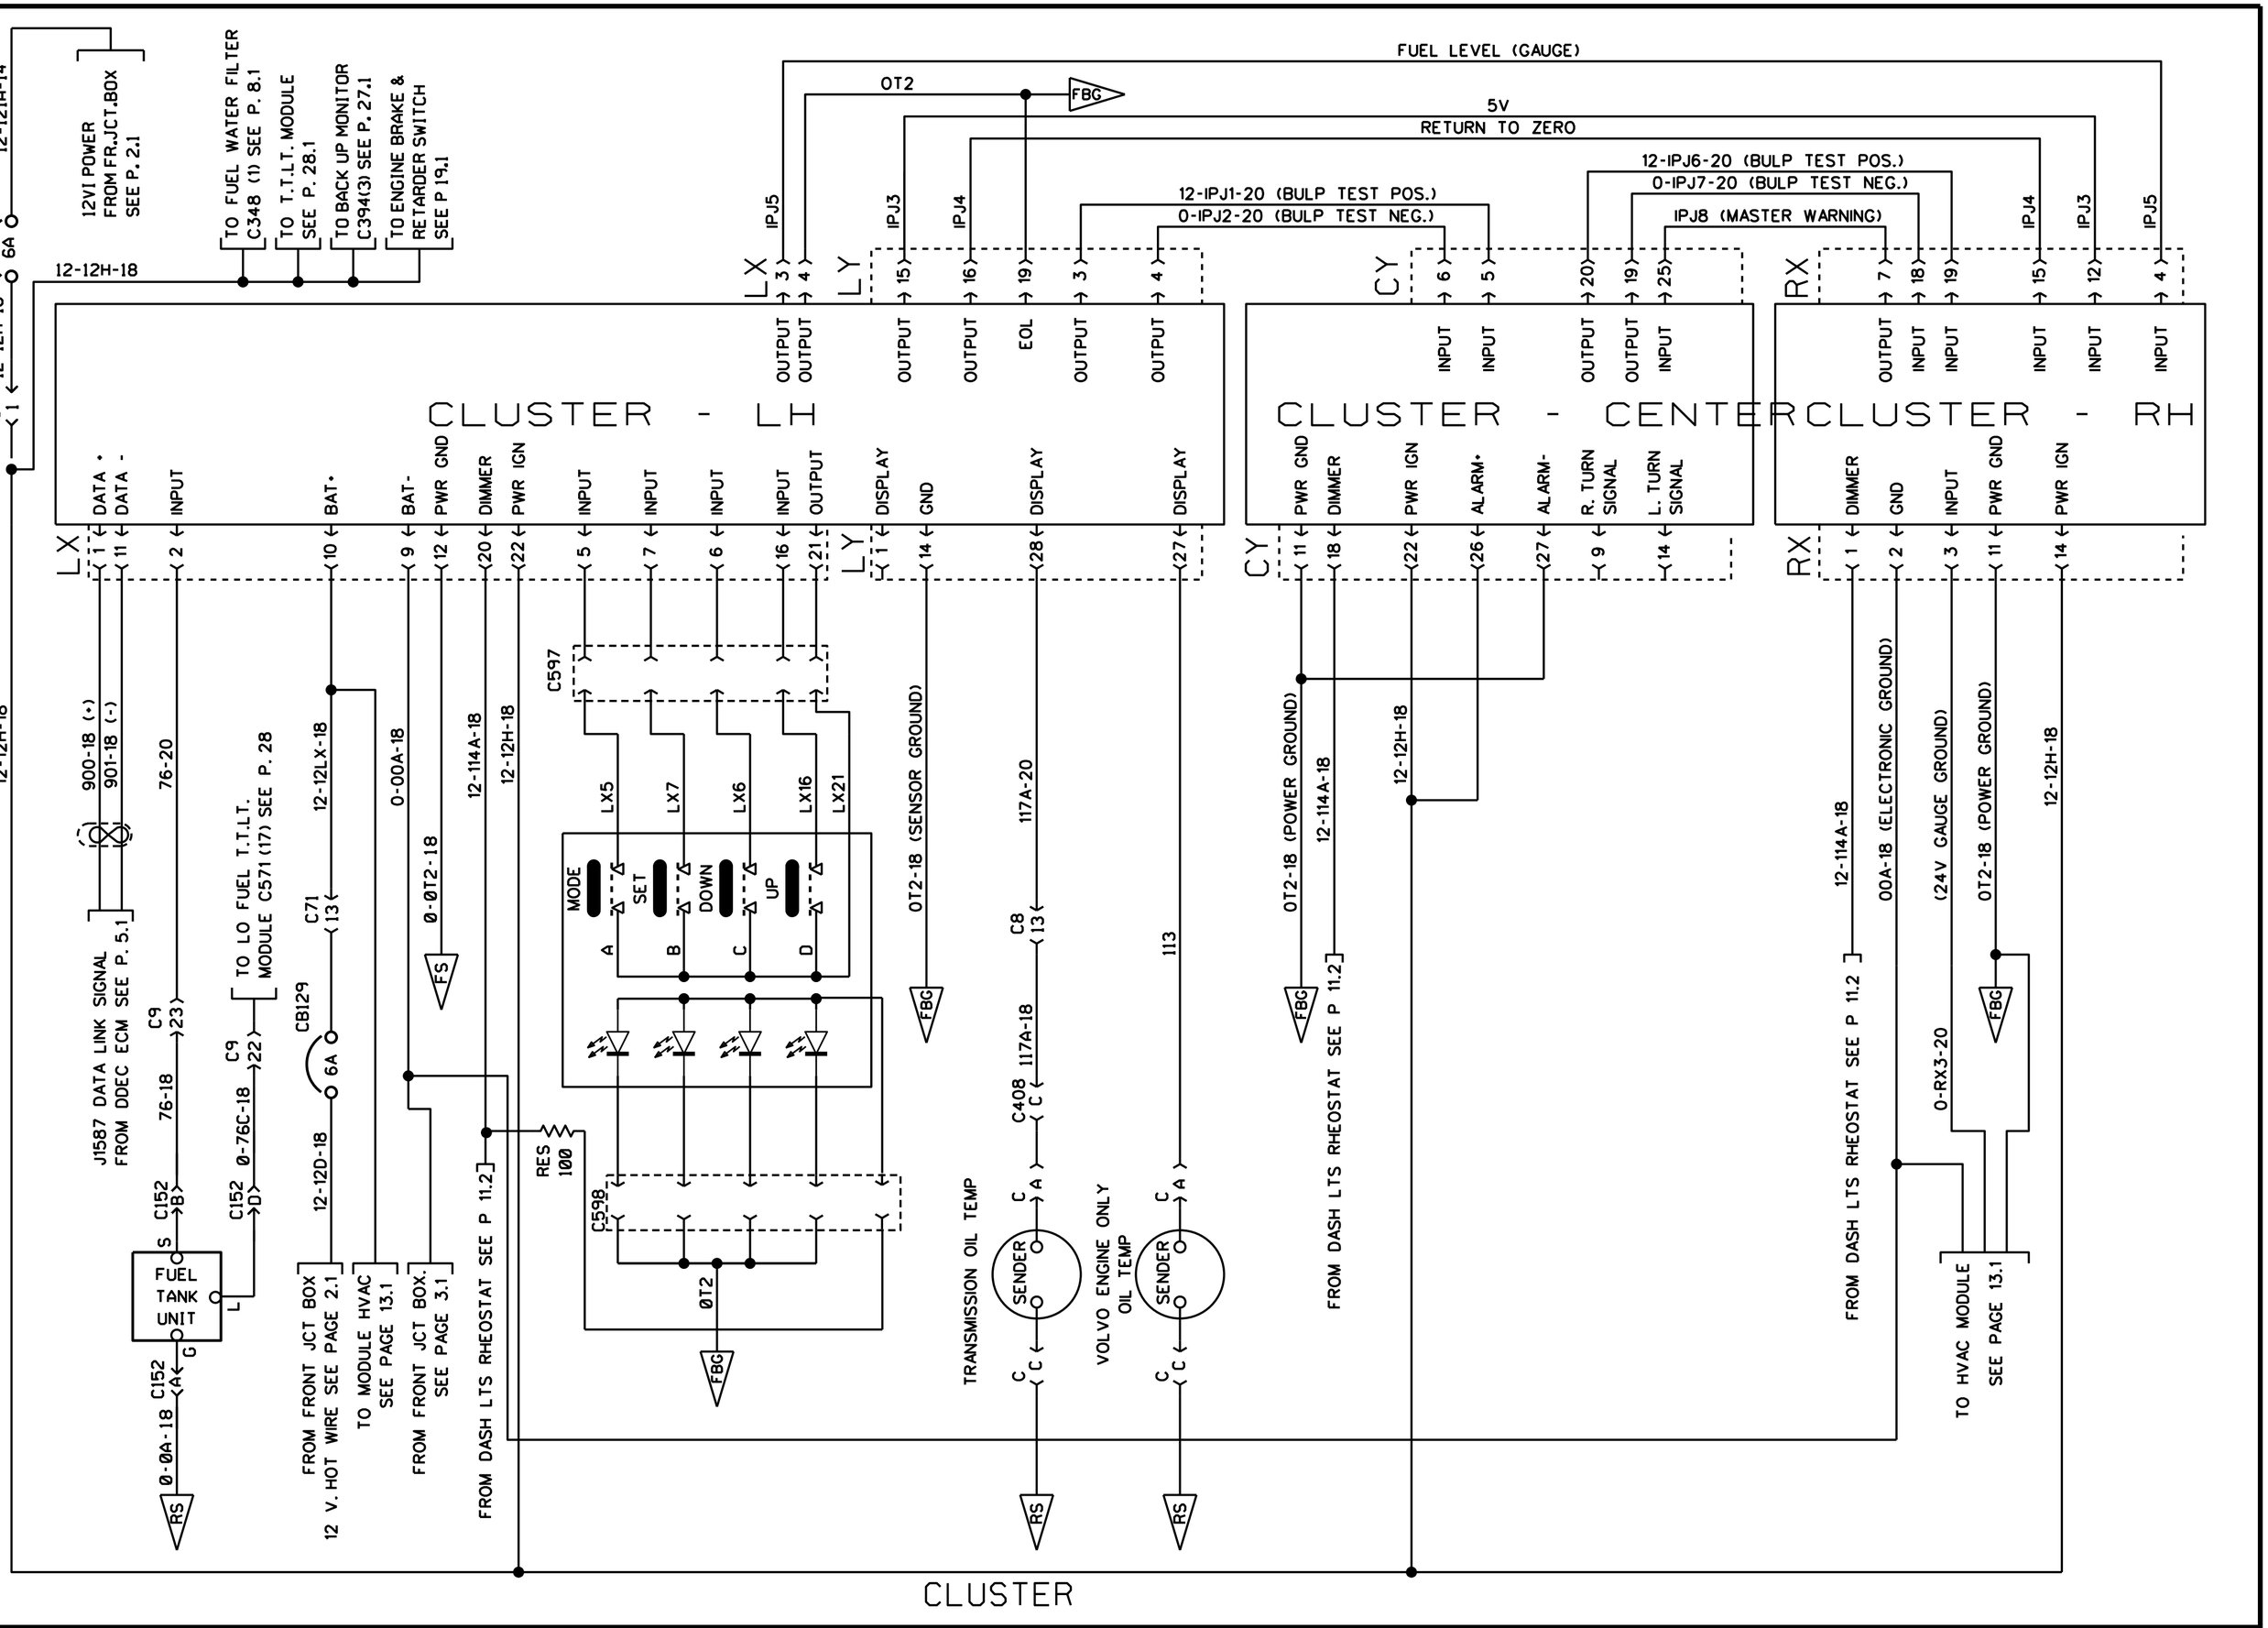

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 7.1	REVISION 01

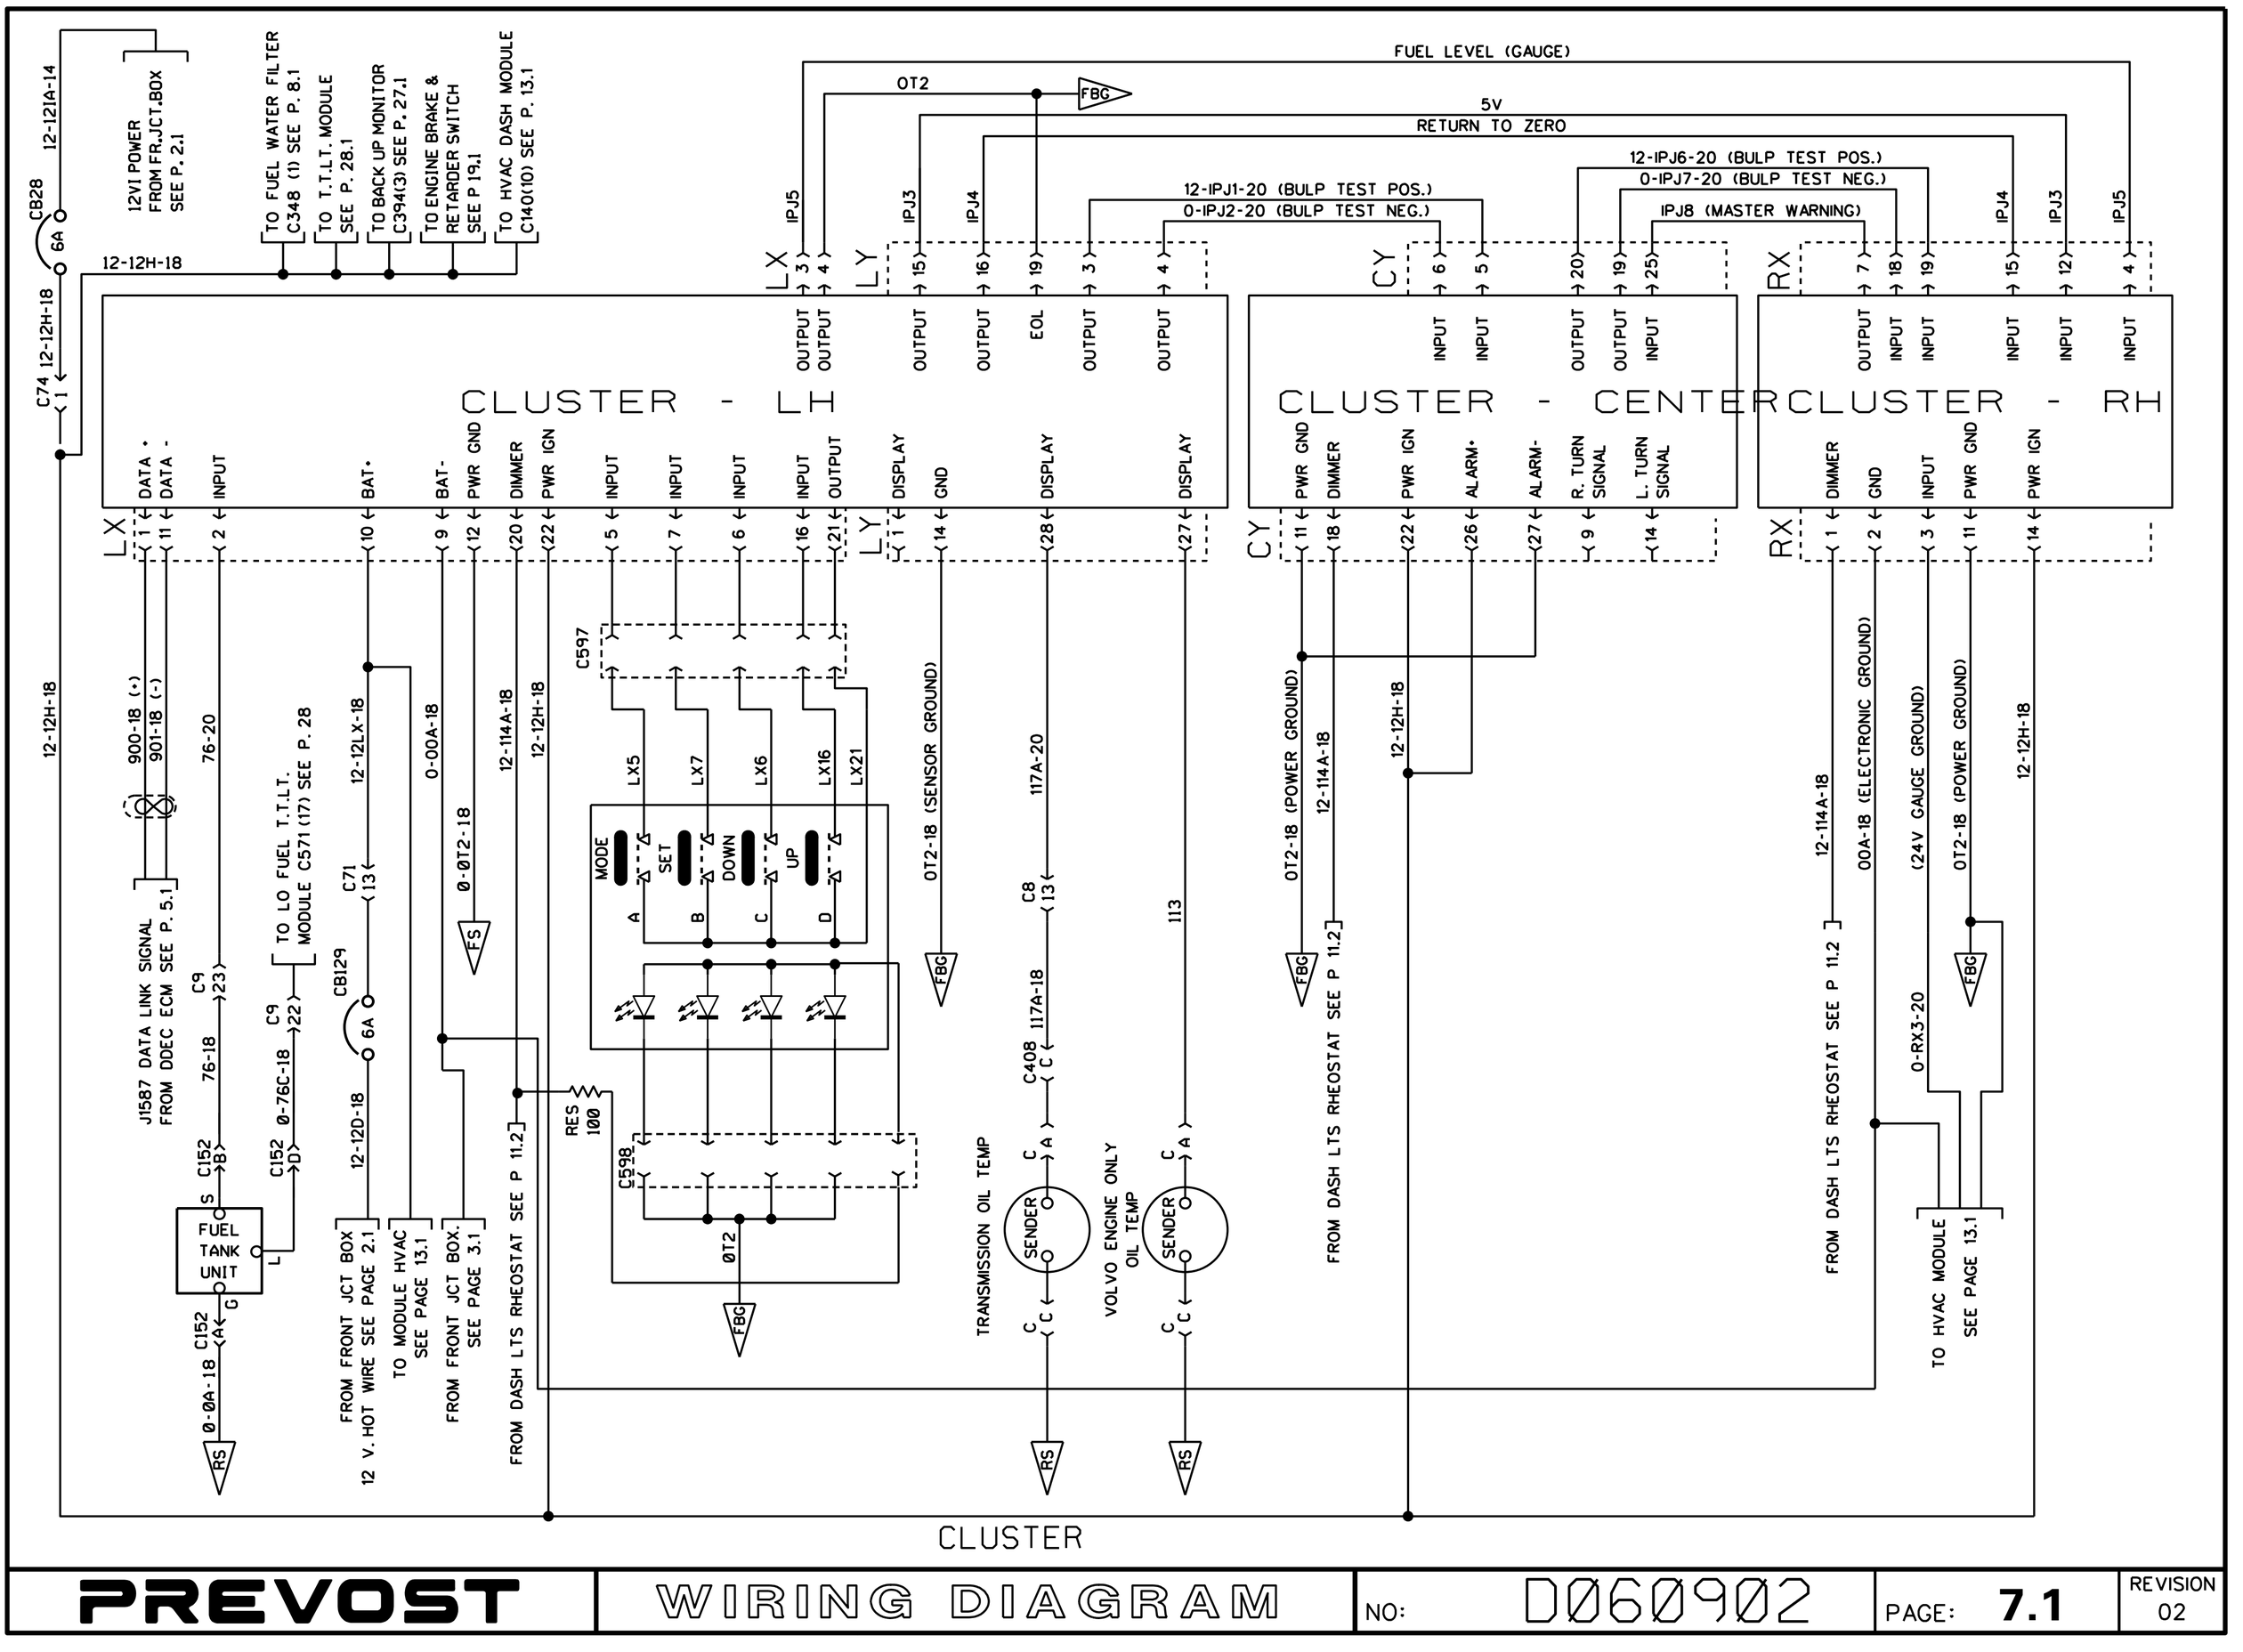

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 7.1	REVISION 02

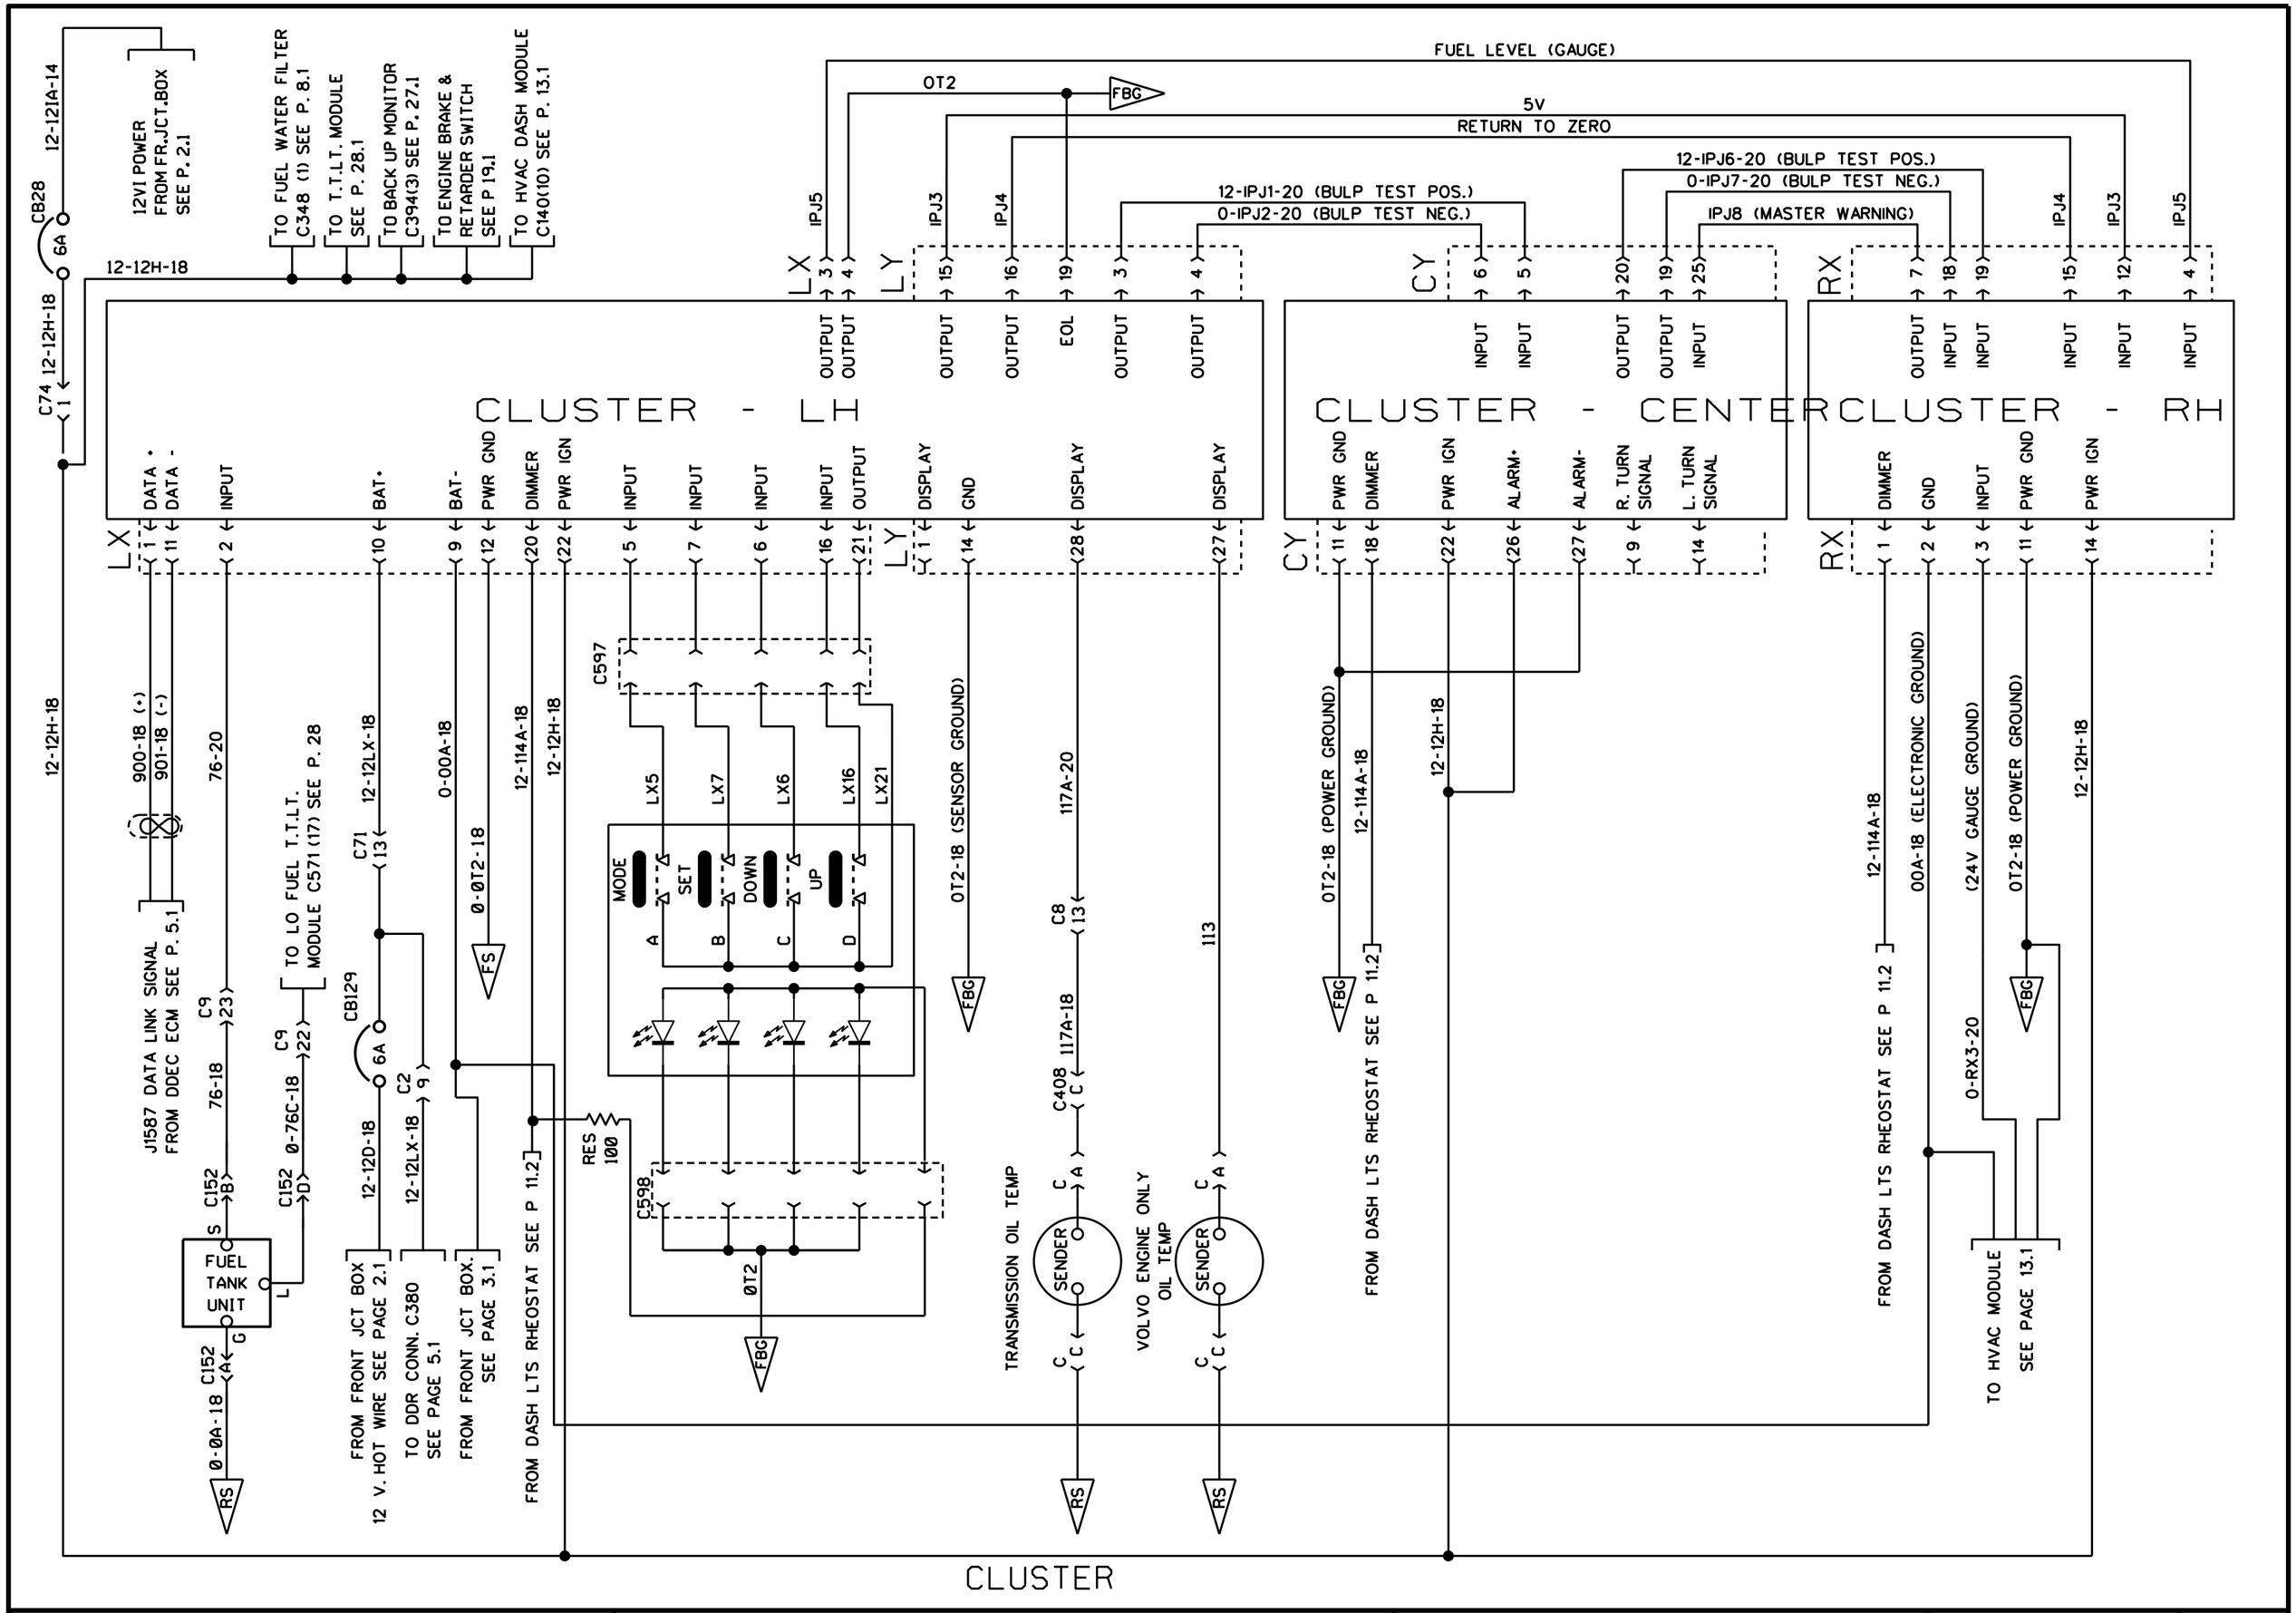
CLUSTER - LH
CLUSTER - CENTER
CLUSTER - RH
CLUSTER
FUEL LEVEL (GAUGE)
OT2
FBG
5V
RETURN TO ZERO
12-IPJ6-20 (BULP TEST POS.)
0-IPJ7-20 (BULP TEST NEG.)
IPJ8 (MASTER WARNING)
12-IPJ1-20 (BULP TEST POS.)
0-IPJ2-20 (BULP TEST NEG.)
12-12H-18
12-121A-14
CB28
6A
C74
12VI POWER FROM FR.JCT.BOX SEE P. 2.1
TO FUEL WATER FILTER C348 (1) SEE P. 8.1
TO T.T.L.T. MODULE SEE P. 28.1
TO BACK UP MONITOR C394(3) SEE P. 27.1
TO ENGINE BRAKE & RETARDER SWITCH SEE P 19.1
TO HVAC DASH MODULE C140(10) SEE P. 13.1
IPJ5
IPJ3
IPJ4
OUTPUT
EOL
INPUT
DATA +
DATA -
BAT+
BAT-
PWR GND
DIMMER
PWR IGN
DISPLAY
GND
ALARM+
ALARM-
R. TURN SIGNAL
L. TURN SIGNAL
C597
C598
LX5
LX7
LX6
LX16
LX21
MODE
SET
DOWN
UP
ØT2
RES 100
900-18 (+)
901-18 (-)
J1587 DATA LINK SIGNAL FROM DDEC ECM SEE P. 5.1
76-20
76-18
0-76C-18
C152
FUEL TANK UNIT
0-0A-18
TO LO FUEL T.T.L.T. MODULE C571 (17) SEE P. 28
C71
12-12LX-18
CB129
6A
12-12D-18
FROM FRONT JCT BOX 12 V. HOT WIRE SEE PAGE 2.1
C2
12-12LX-18
TO DDR CONN. C380 SEE PAGE 5.1
0-0T2-18
FROM FRONT JCT BOX. SEE PAGE 3.1
FROM DASH LTS RHEOSTAT SEE P 11.2
0T2-18 (SENSOR GROUND)
117A-18
C8
C408
TRANSMISSION OIL TEMP
SENDER
VOLVO ENGINE ONLY OIL TEMP
113
0T2-18 (POWER GROUND)
12-114A-18
FROM DASH LTS RHEOSTAT SEE P 11.2
0-RX3-20
(24V GAUGE GROUND)
TO HVAC MODULE SEE PAGE 13.1

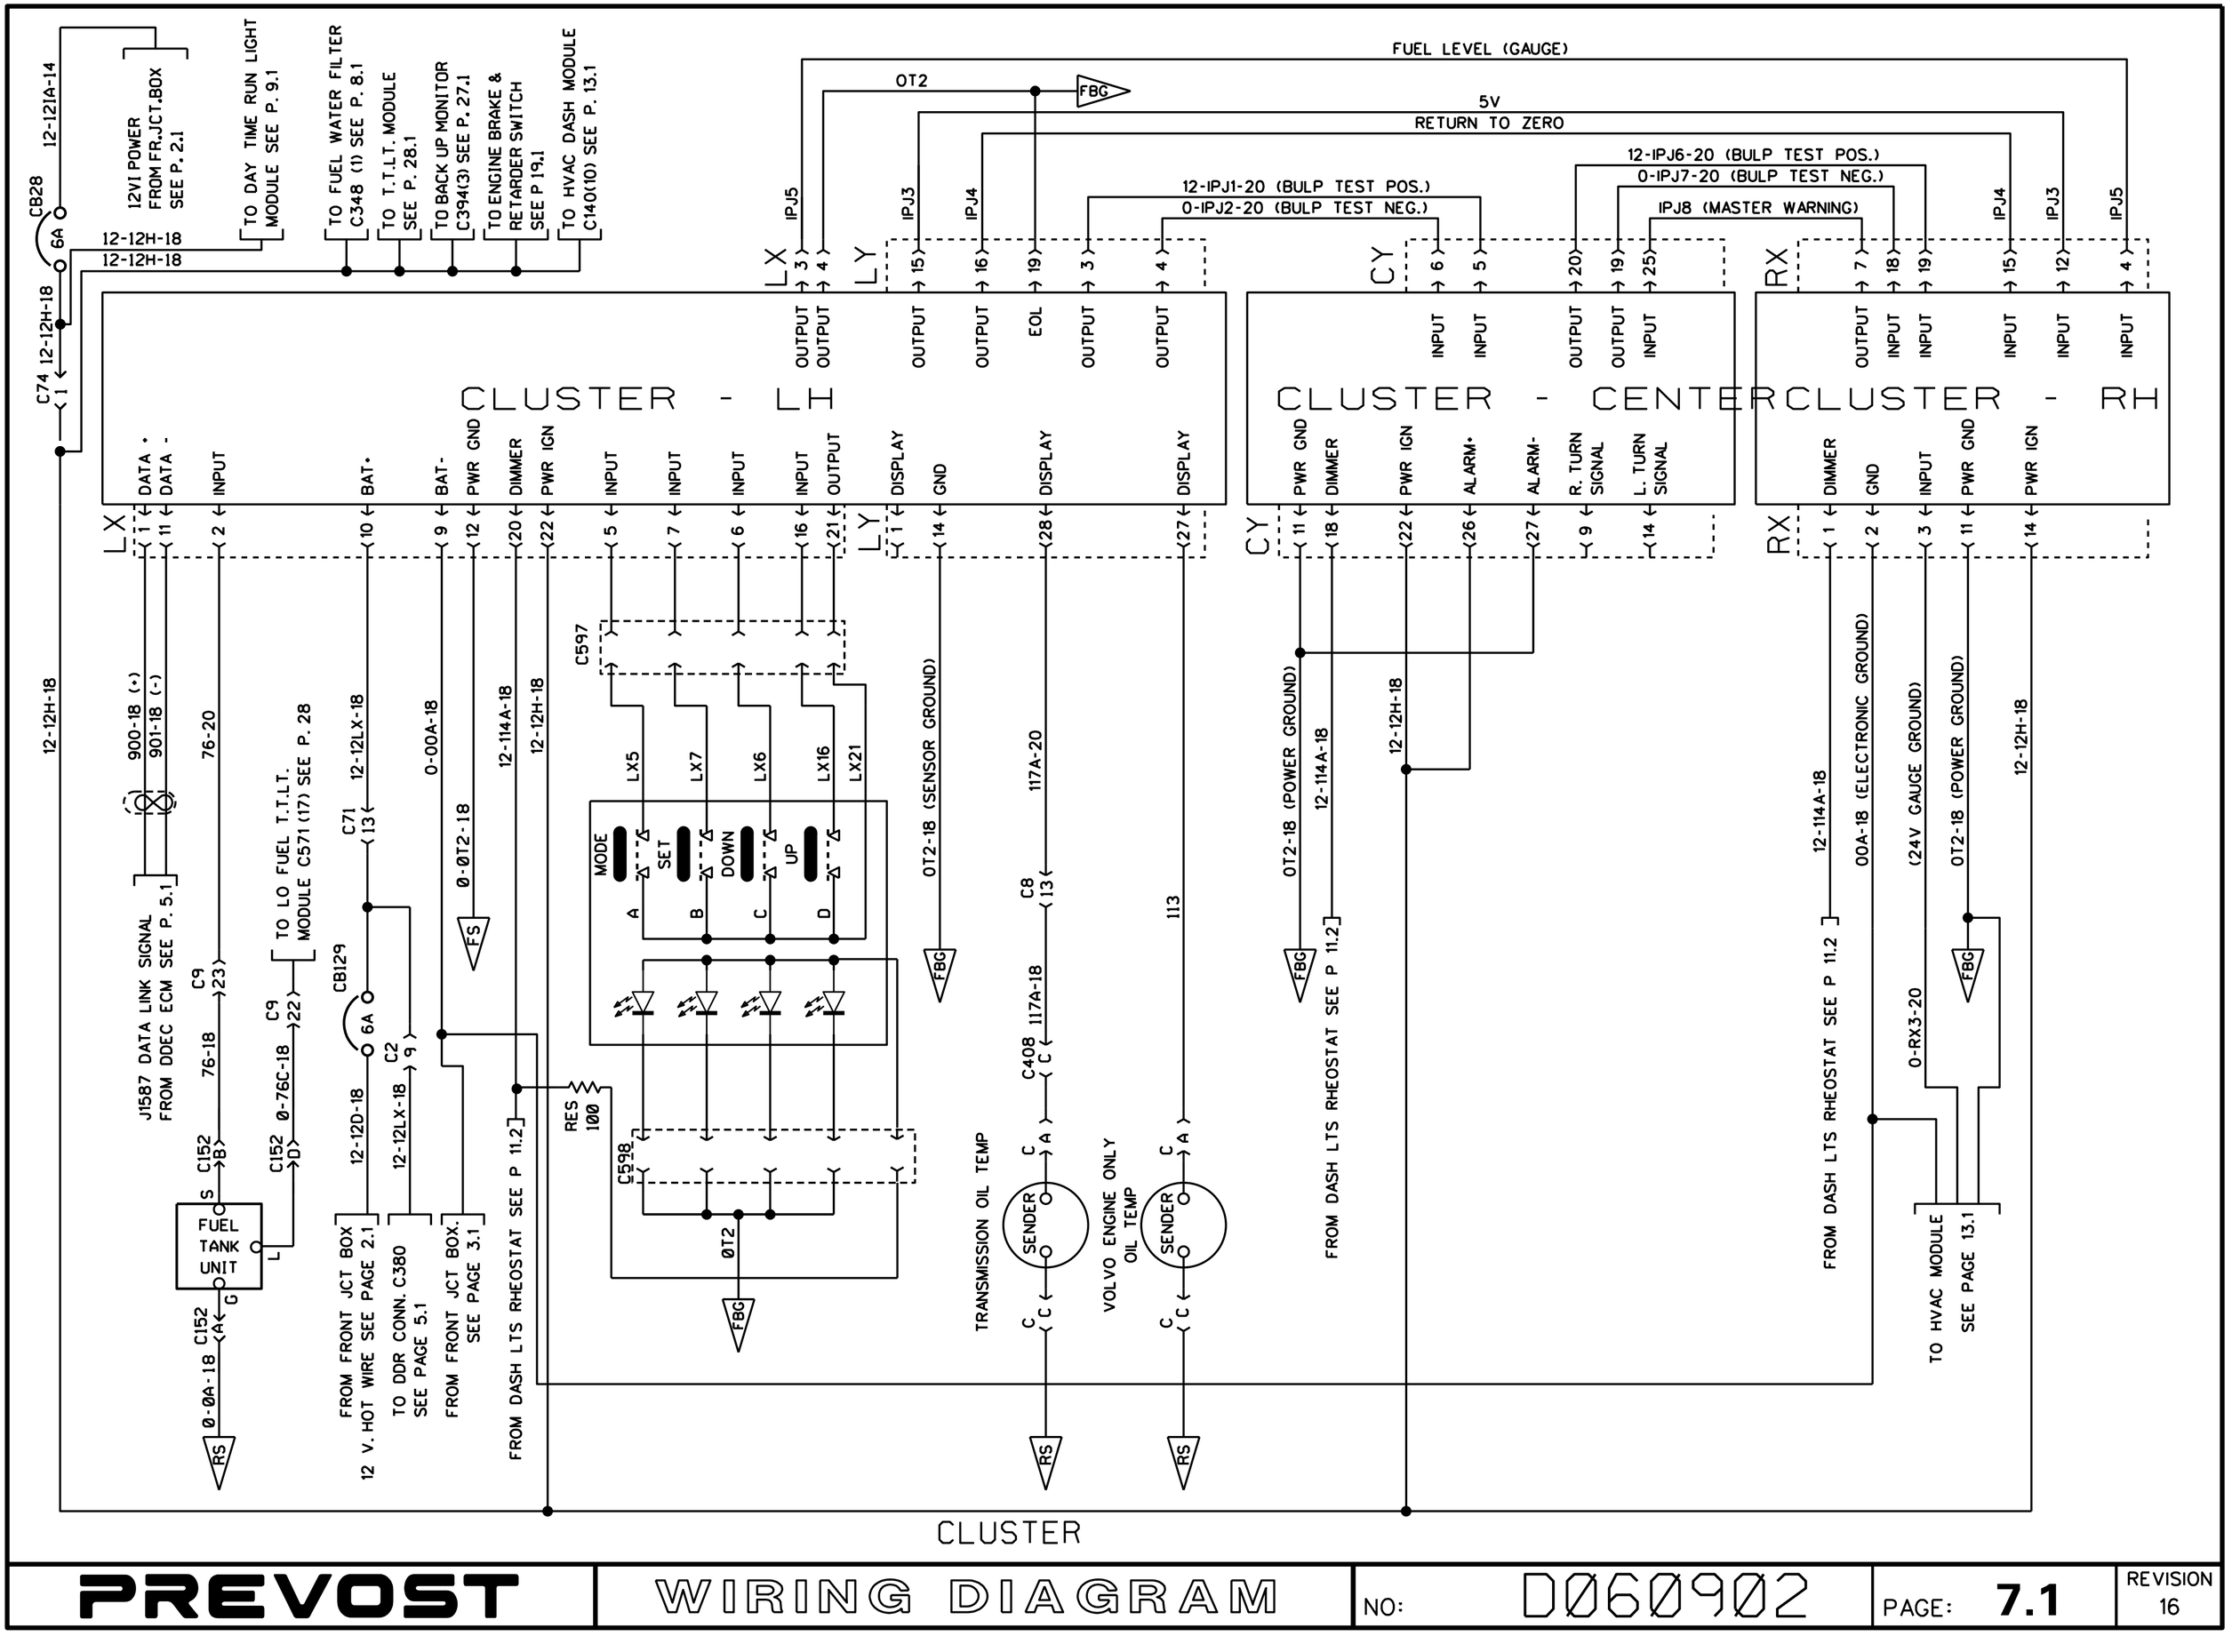

CLUSTER

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 7.1	REVISION 16

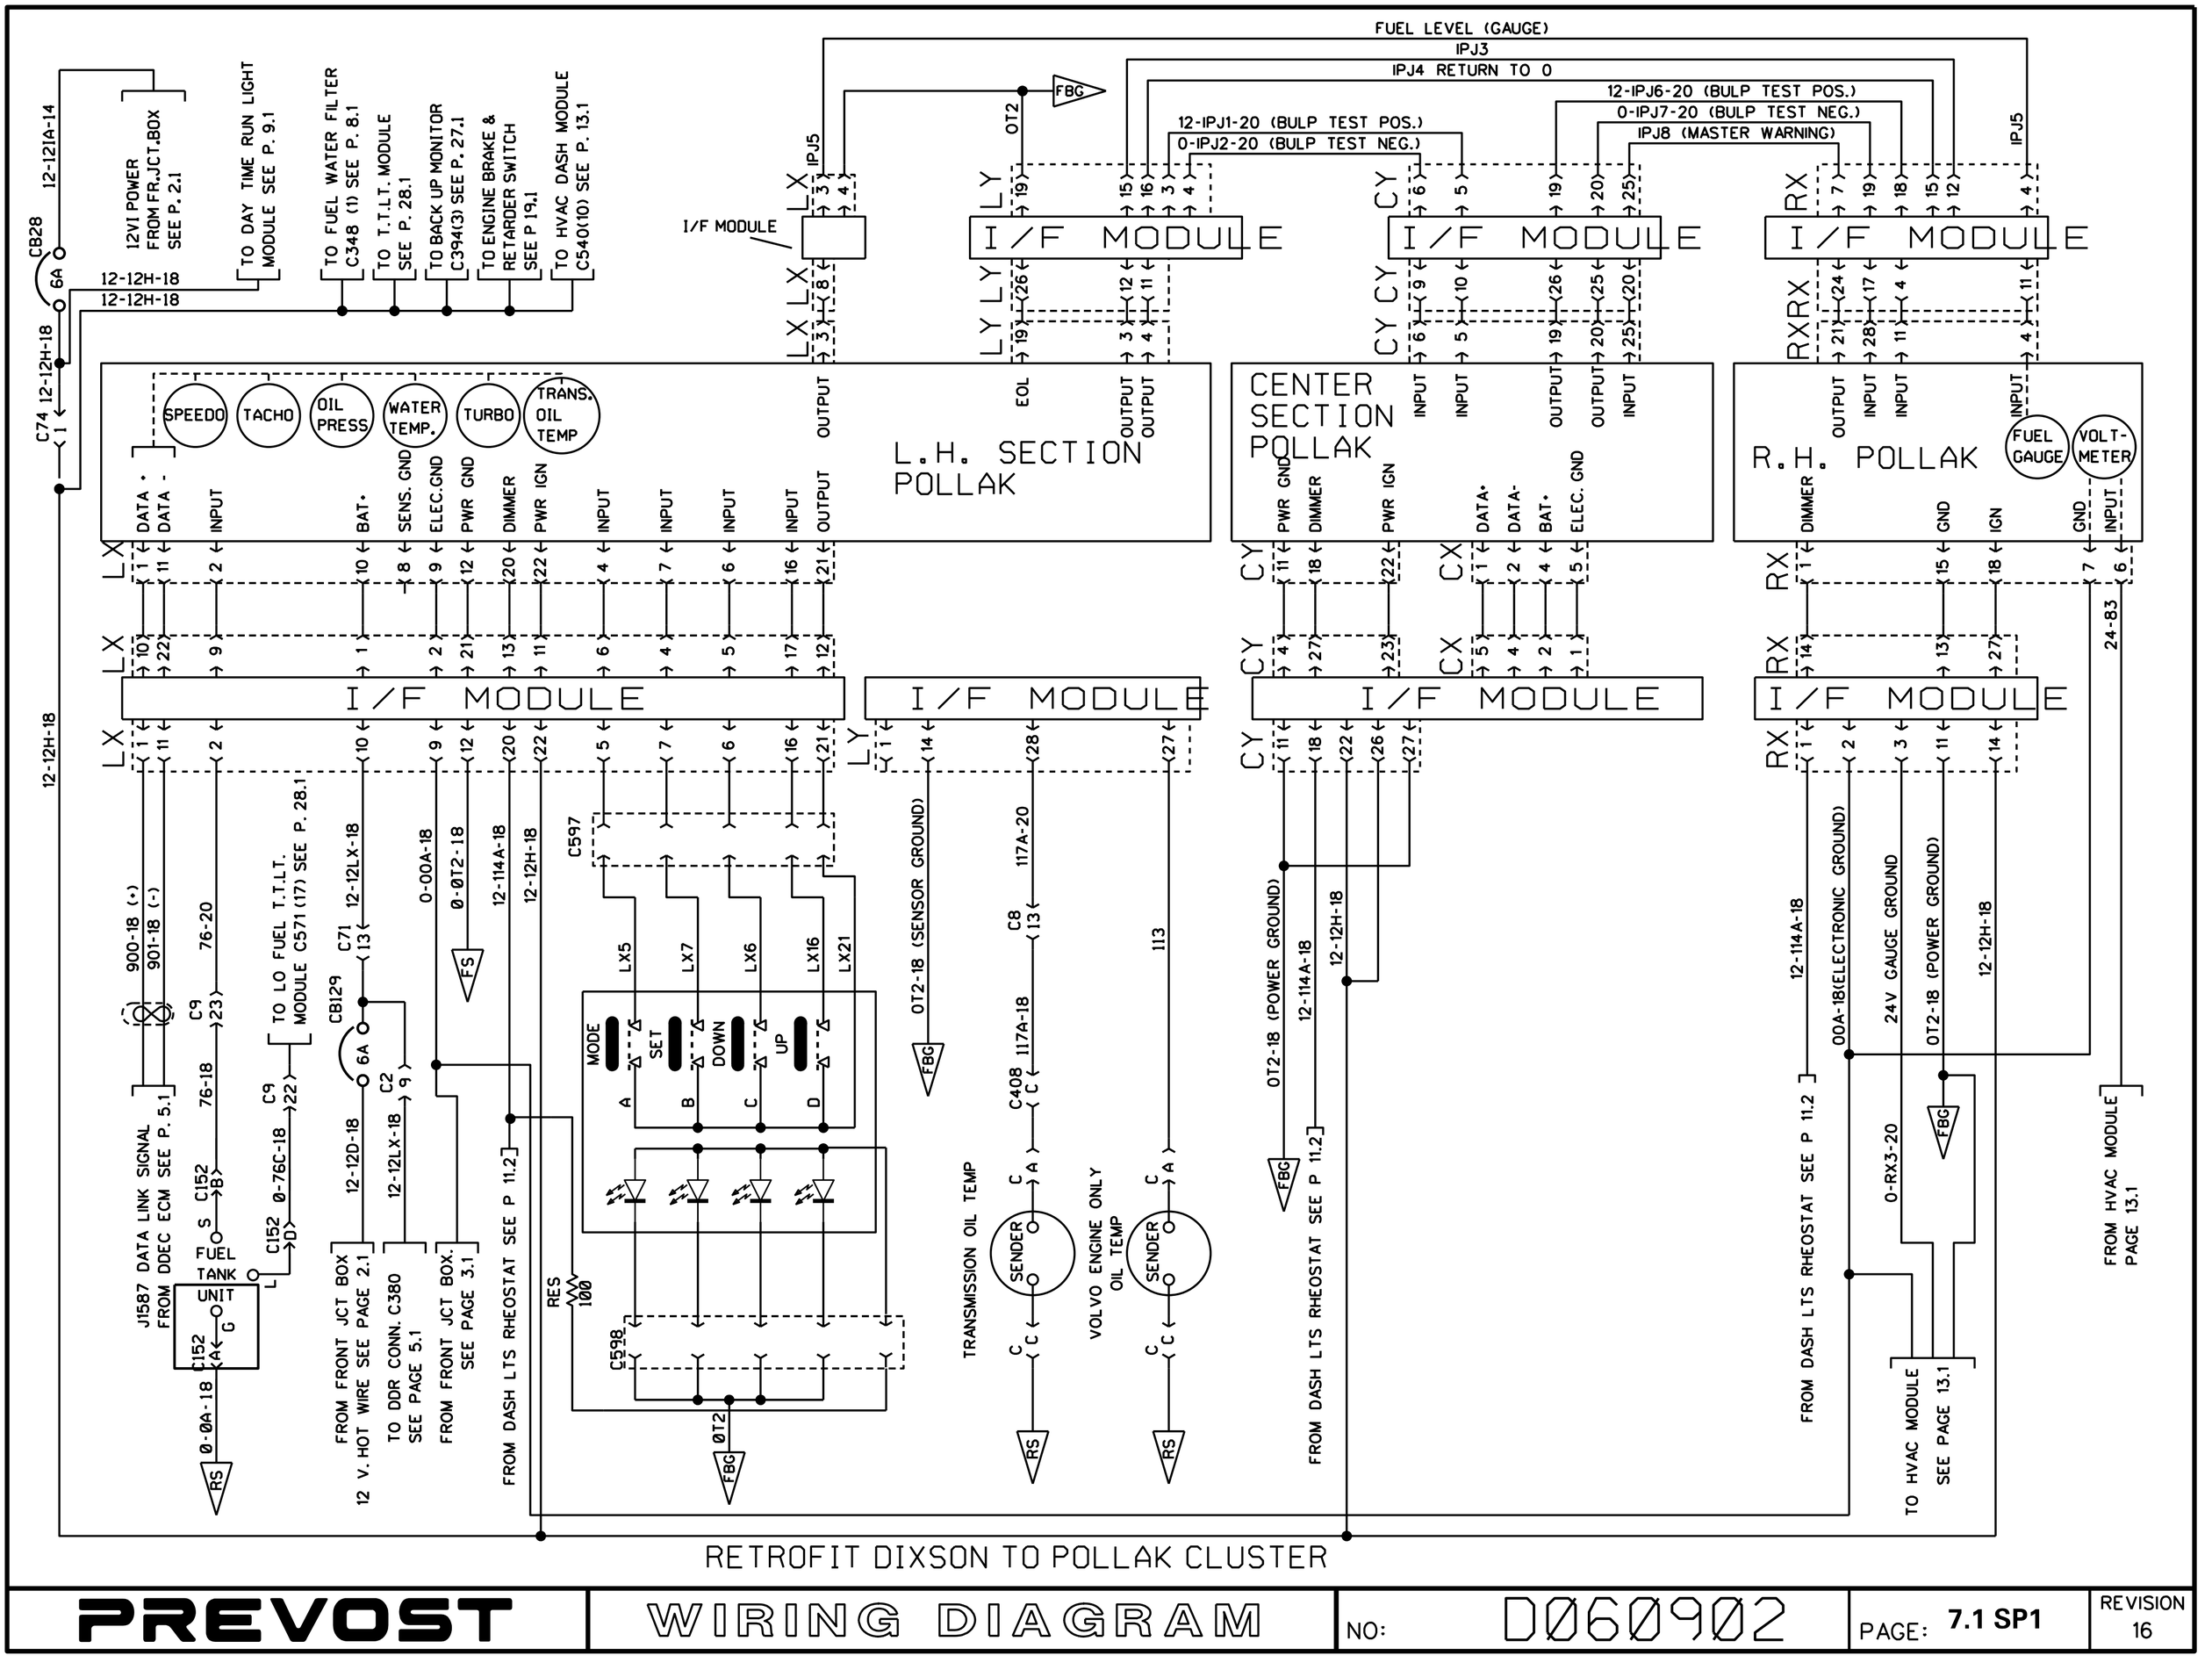

RETROFIT DIXSON TO POLLAK CLUSTER

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 7.1 SP1	REVISION 16

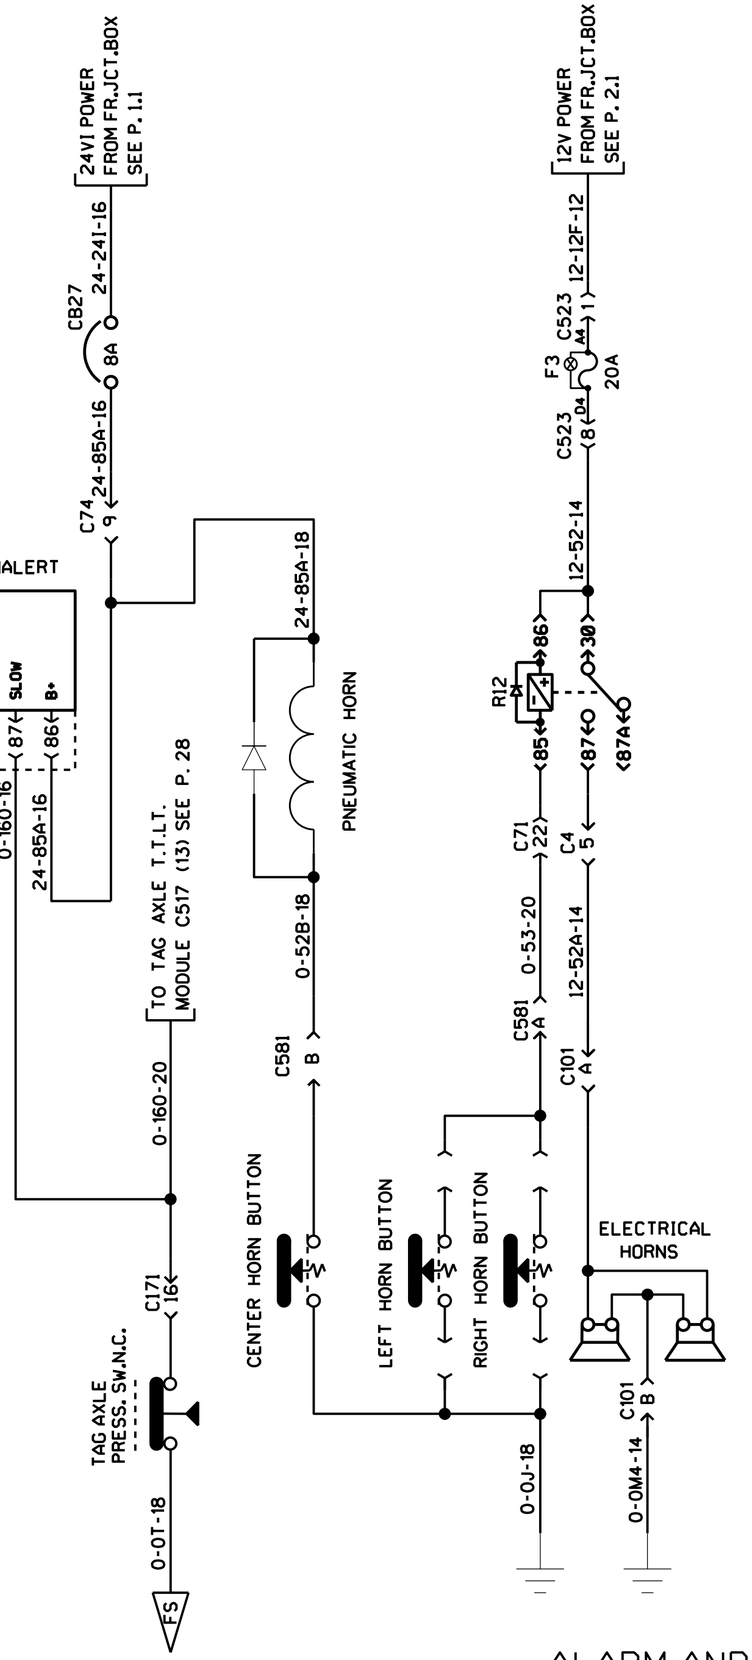

ALARM AND SIGNAL (SUITE)

WINDOW AJAR

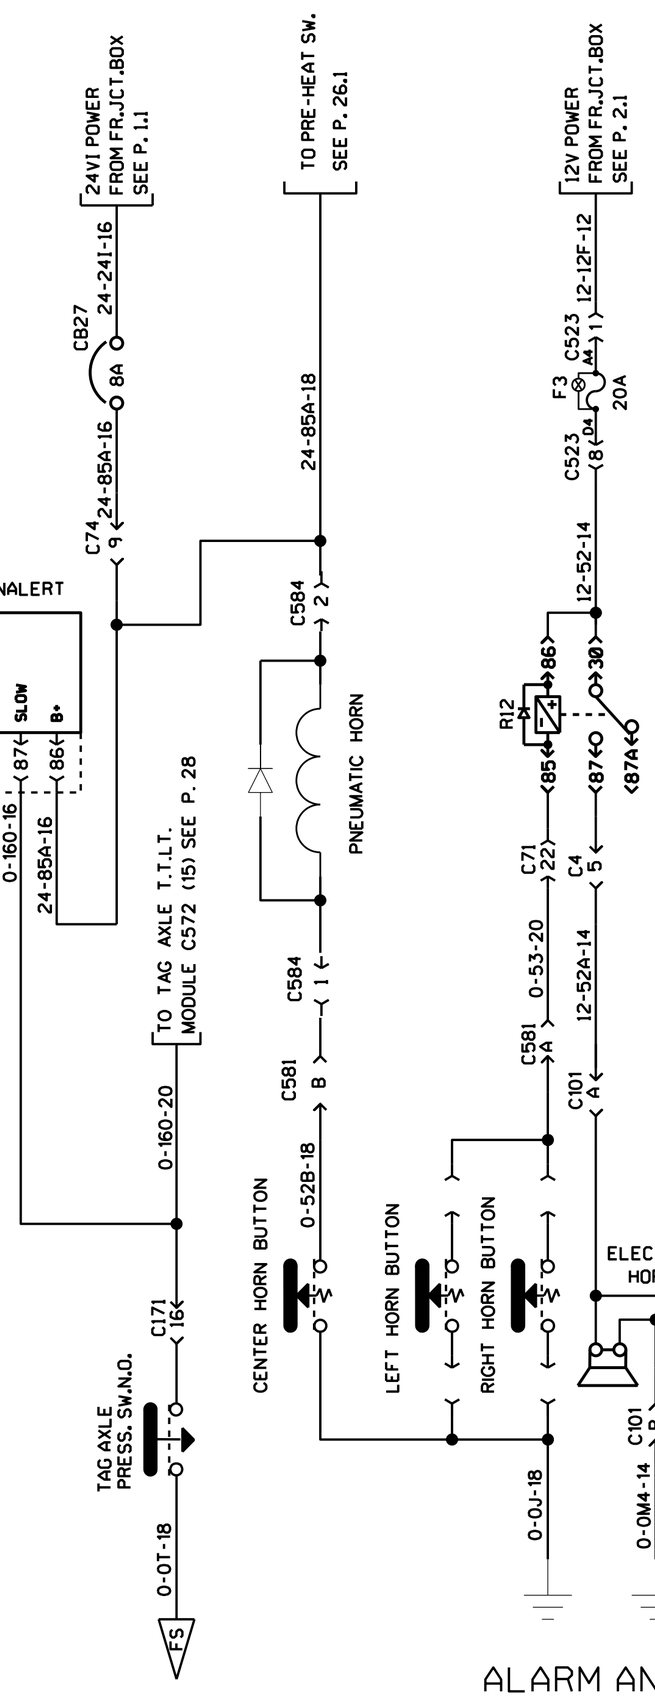
SONALERT
AA1
85
87
86
FAST
SLOW
B+
0-160-16
24-85A-16
TO TAG AXLE T.T.L.T.
MODULE C572 (15) SEE P. 28
C74
9
24-85A-16
C827
8A
24-24I-16
24VI POWER
FROM FR.JCT.BOX
SEE P. 1.1
TO PRE-HEAT SW.
SEE P. 26.1
24-85A-18
C584
2
PNEUMATIC HORN
C584
1
0-160-20
C581
B
0-52B-18
CENTER HORN BUTTON
LEFT HORN BUTTON
RIGHT HORN BUTTON
C581
A
0-53-20
C101
A
12-52A-14
ELECTRICAL
HORNS
C101
B
0-OM4-14
C171
16
TAG AXLE
PRESS. SW.N.O.
0-OT-18
FS
0-OJ-18
R12
85
86
87
87A
30
C71
22
0-20
C4
5
12-52-14
F3
20A
C523
A4
1
12-12F-12
12V POWER
FROM FR.JCT.BOX
SEE P. 2.1
C523
8
24-123A-18
F4
5A
C523
A3
2
24-24D-14
24V HOT WIRE
FROM FR.JCT.BOX
SEE P. 1.1
C523
D3
7
24-123A-18
TO DIGITAL CLOCK
SEE P. 14.1
RS17
220 OHMS
RED
C340
1
PIEZO
C71 C340
BLK
4
2
TO FIRE ALARM T.T.L.T.
MODULE C571 (12) SEE P. 28
0-123B-18
C6
4
C20
22
12V POWER
FROM RR JCT BOX
JCT BLOCK (E) SEE P. 2.1
12-12C-18
RS
0-0A-18
SENSOR
ENGINE CPT LH
SENSOR
ENGINE CPT RH
SENSOR
BATTERIES CPT
C535
3
2
1
TRIG
12V
GRD
HOT TEMPERATURE DETECTOR MODULE
ALARM AND SIGNAL
TO TTLT WINDOW AJAR
C572 (11) SEE PAGE. 28.1
OT2
RS
C582
A
B
C603
C601
0-260-20
0-OT2-20
0-OT2-20
0-260-20
C602
MAGNETIC SWITCH
N.C. - WINDOW OPEN
ONLY ON H3-45
R.H.
L.H.
WINDOW AJAR

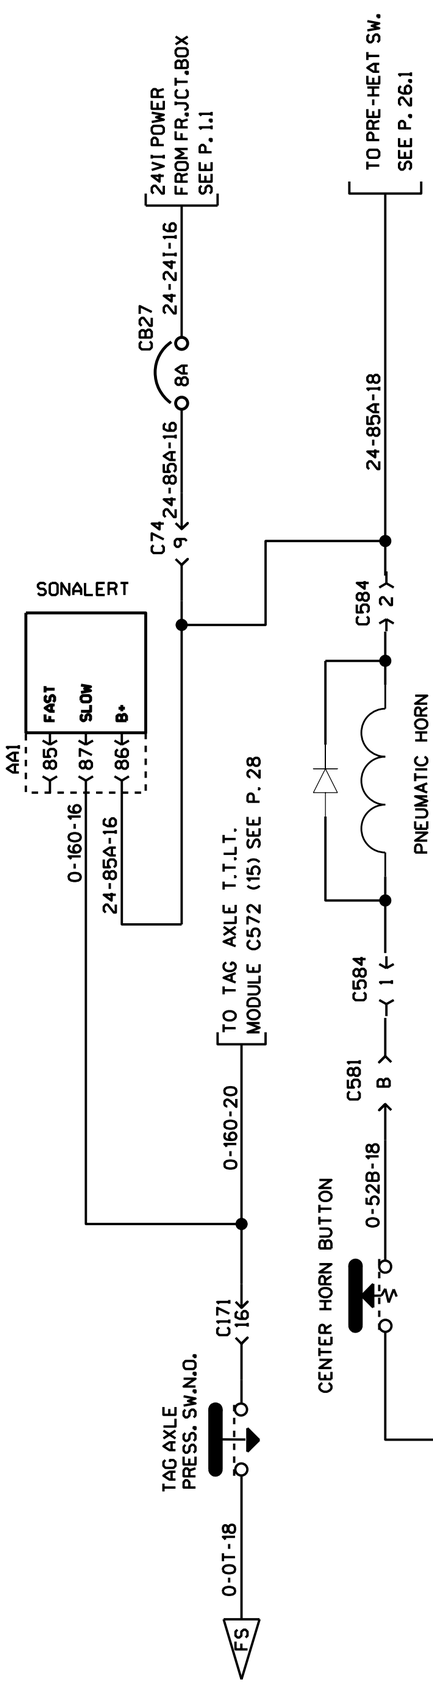
SONALERT
AA1
FAST
SLOW
B+
85
87
86
0-160-16
24-85A-16
C74
9
24-85A-16
CB27
8A
24-24I-16
24VI POWER
FROM FR.JCT.BOX
SEE P. 1.1
24-85A-18
TO PRE-HEAT SW.
SEE P. 26.1
C584
2
PNEUMATIC HORN
C584
1
TO TAG AXLE T.T.L.T.
MODULE C572 (15) SEE P. 28
0-160-20
C171
16
TAG AXLE
PRESS. SW.N.O.
0-0T-18
FS
CENTER HORN BUTTON
0-52B-18
LEFT HORN BUTTON
RIGHT HORN BUTTON
C581
B
C581
A
0-53-20
C101
A
12-52A-14
ELECTRICAL
HORNS
C101
B
0-0M4-14
0-0J-18
R12
86
85
87
30
87A
12-52-14
C523
8
F3
20A
C523
A4
1
12-12F-12
12V POWER
FROM FR.JCT.BOX
SEE P. 2.1
C71
22
20
C4
5
14
24-123A-18
C523
7
F4
5A
C523
A3
2
24-24D-14
24V HOT WIRE
FROM FR.JCT.BOX
SEE P. 1.1
24-123A-18
TO DIGITAL CLOCK
SEE P. 14.1
RS17
220 OHMS
RED
C340
1
PIEZO
BLK
2
TO FIRE ALARM T.T.L.T.
MODULE C571 (12) SEE P. 28
0-123B-18
C71
4
C340
C6
4
C20
22
0-123B-18
12-12CE-18
0-0A-18
12V HOT WIRE
FROM RR JCT BOX
FUSE F62 SEE P. 2.1
RS
C535
3
2
1
TRIG
12V
GRD
SENSOR
ENGINE CPT LH
SENSOR
ENGINE CPT RH
SENSOR
BATTERIES CPT
HOT TEMPERATURE DETECTOR MODULE
ALARM AND SIGNAL
TO TTLT WINDOW AJAR
C572 (11) SEE PAGE. 28.1
C582
A
B
OT2
RS
C603
C601
0-260-20
0-0T2-20
0-0T2-20
0-260-20
C602
MAGNETIC SWITCH
N.C. - WINDOW OPEN
ONLY ON H3-45
R.H.
L.H.
WINDOW AJAR

PREVOST

WIRING DIAGRAM

AIR DRYER

FUEL WATER FILTER

ETHER COLD START

PARKING BRAKE SWITCH

RADIATOR FAN CLUTCH

PRODRIVER

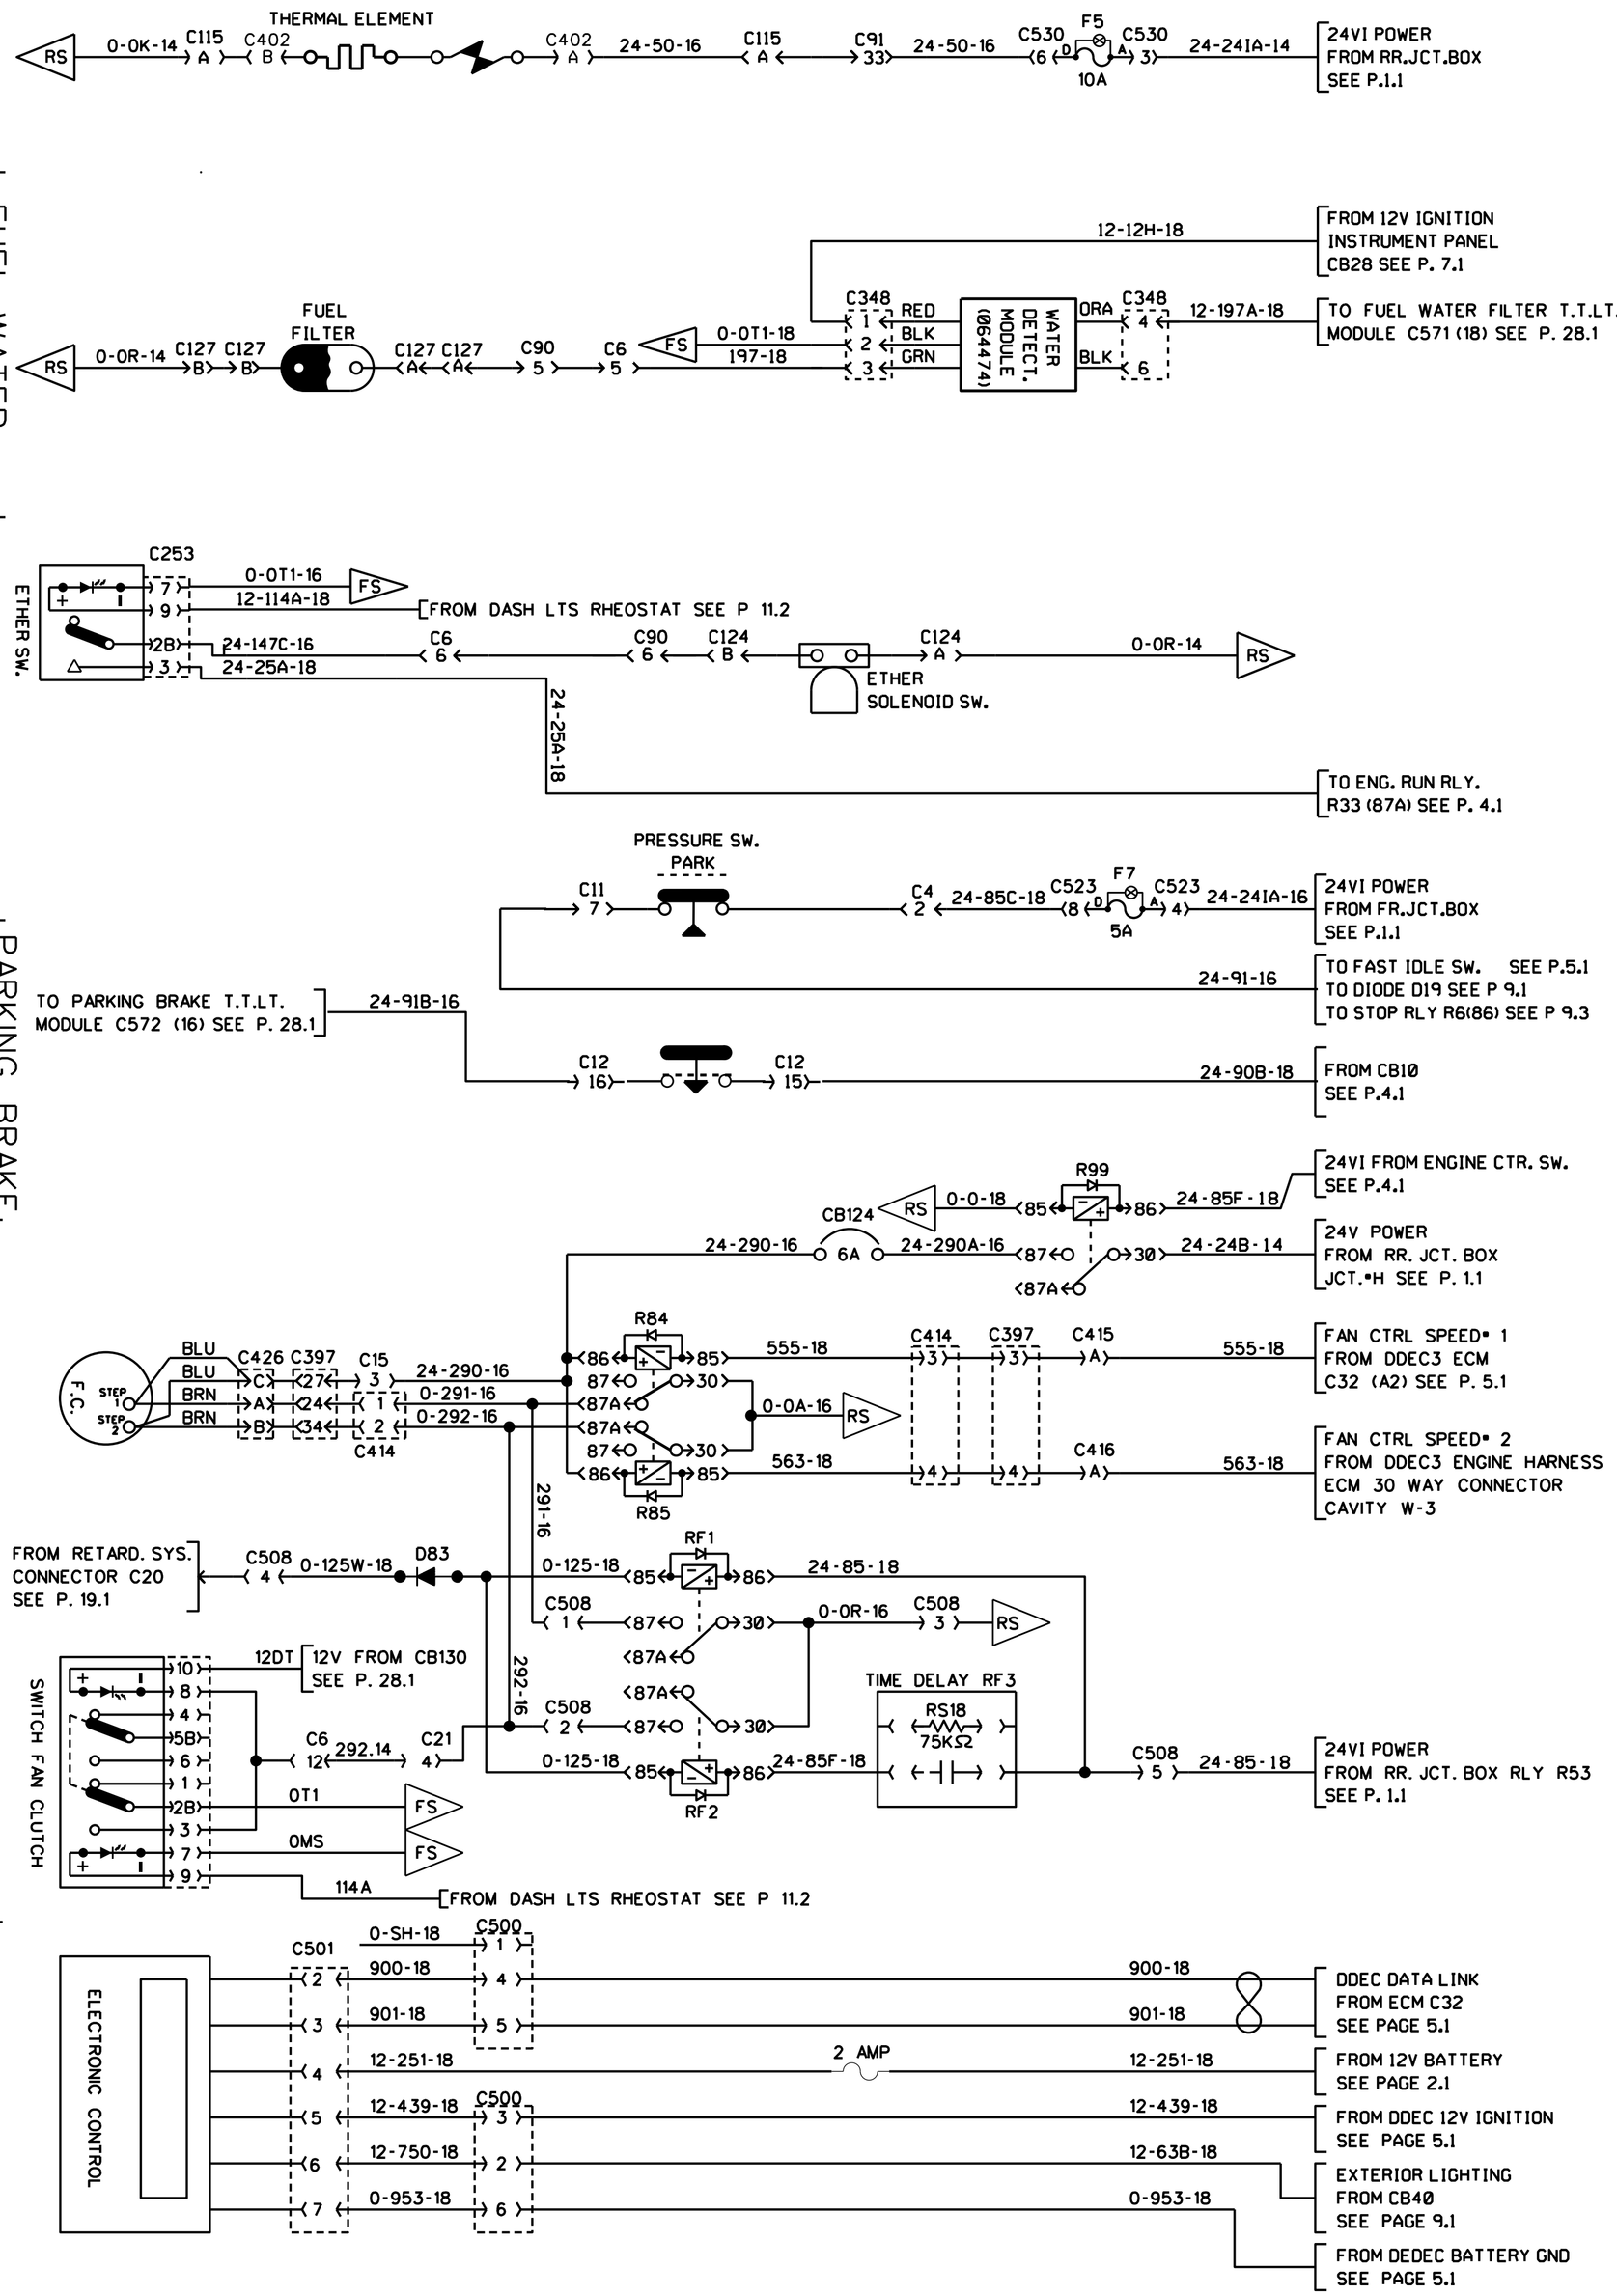

NO: D060902

PAGE: 8.1

REVISION 00

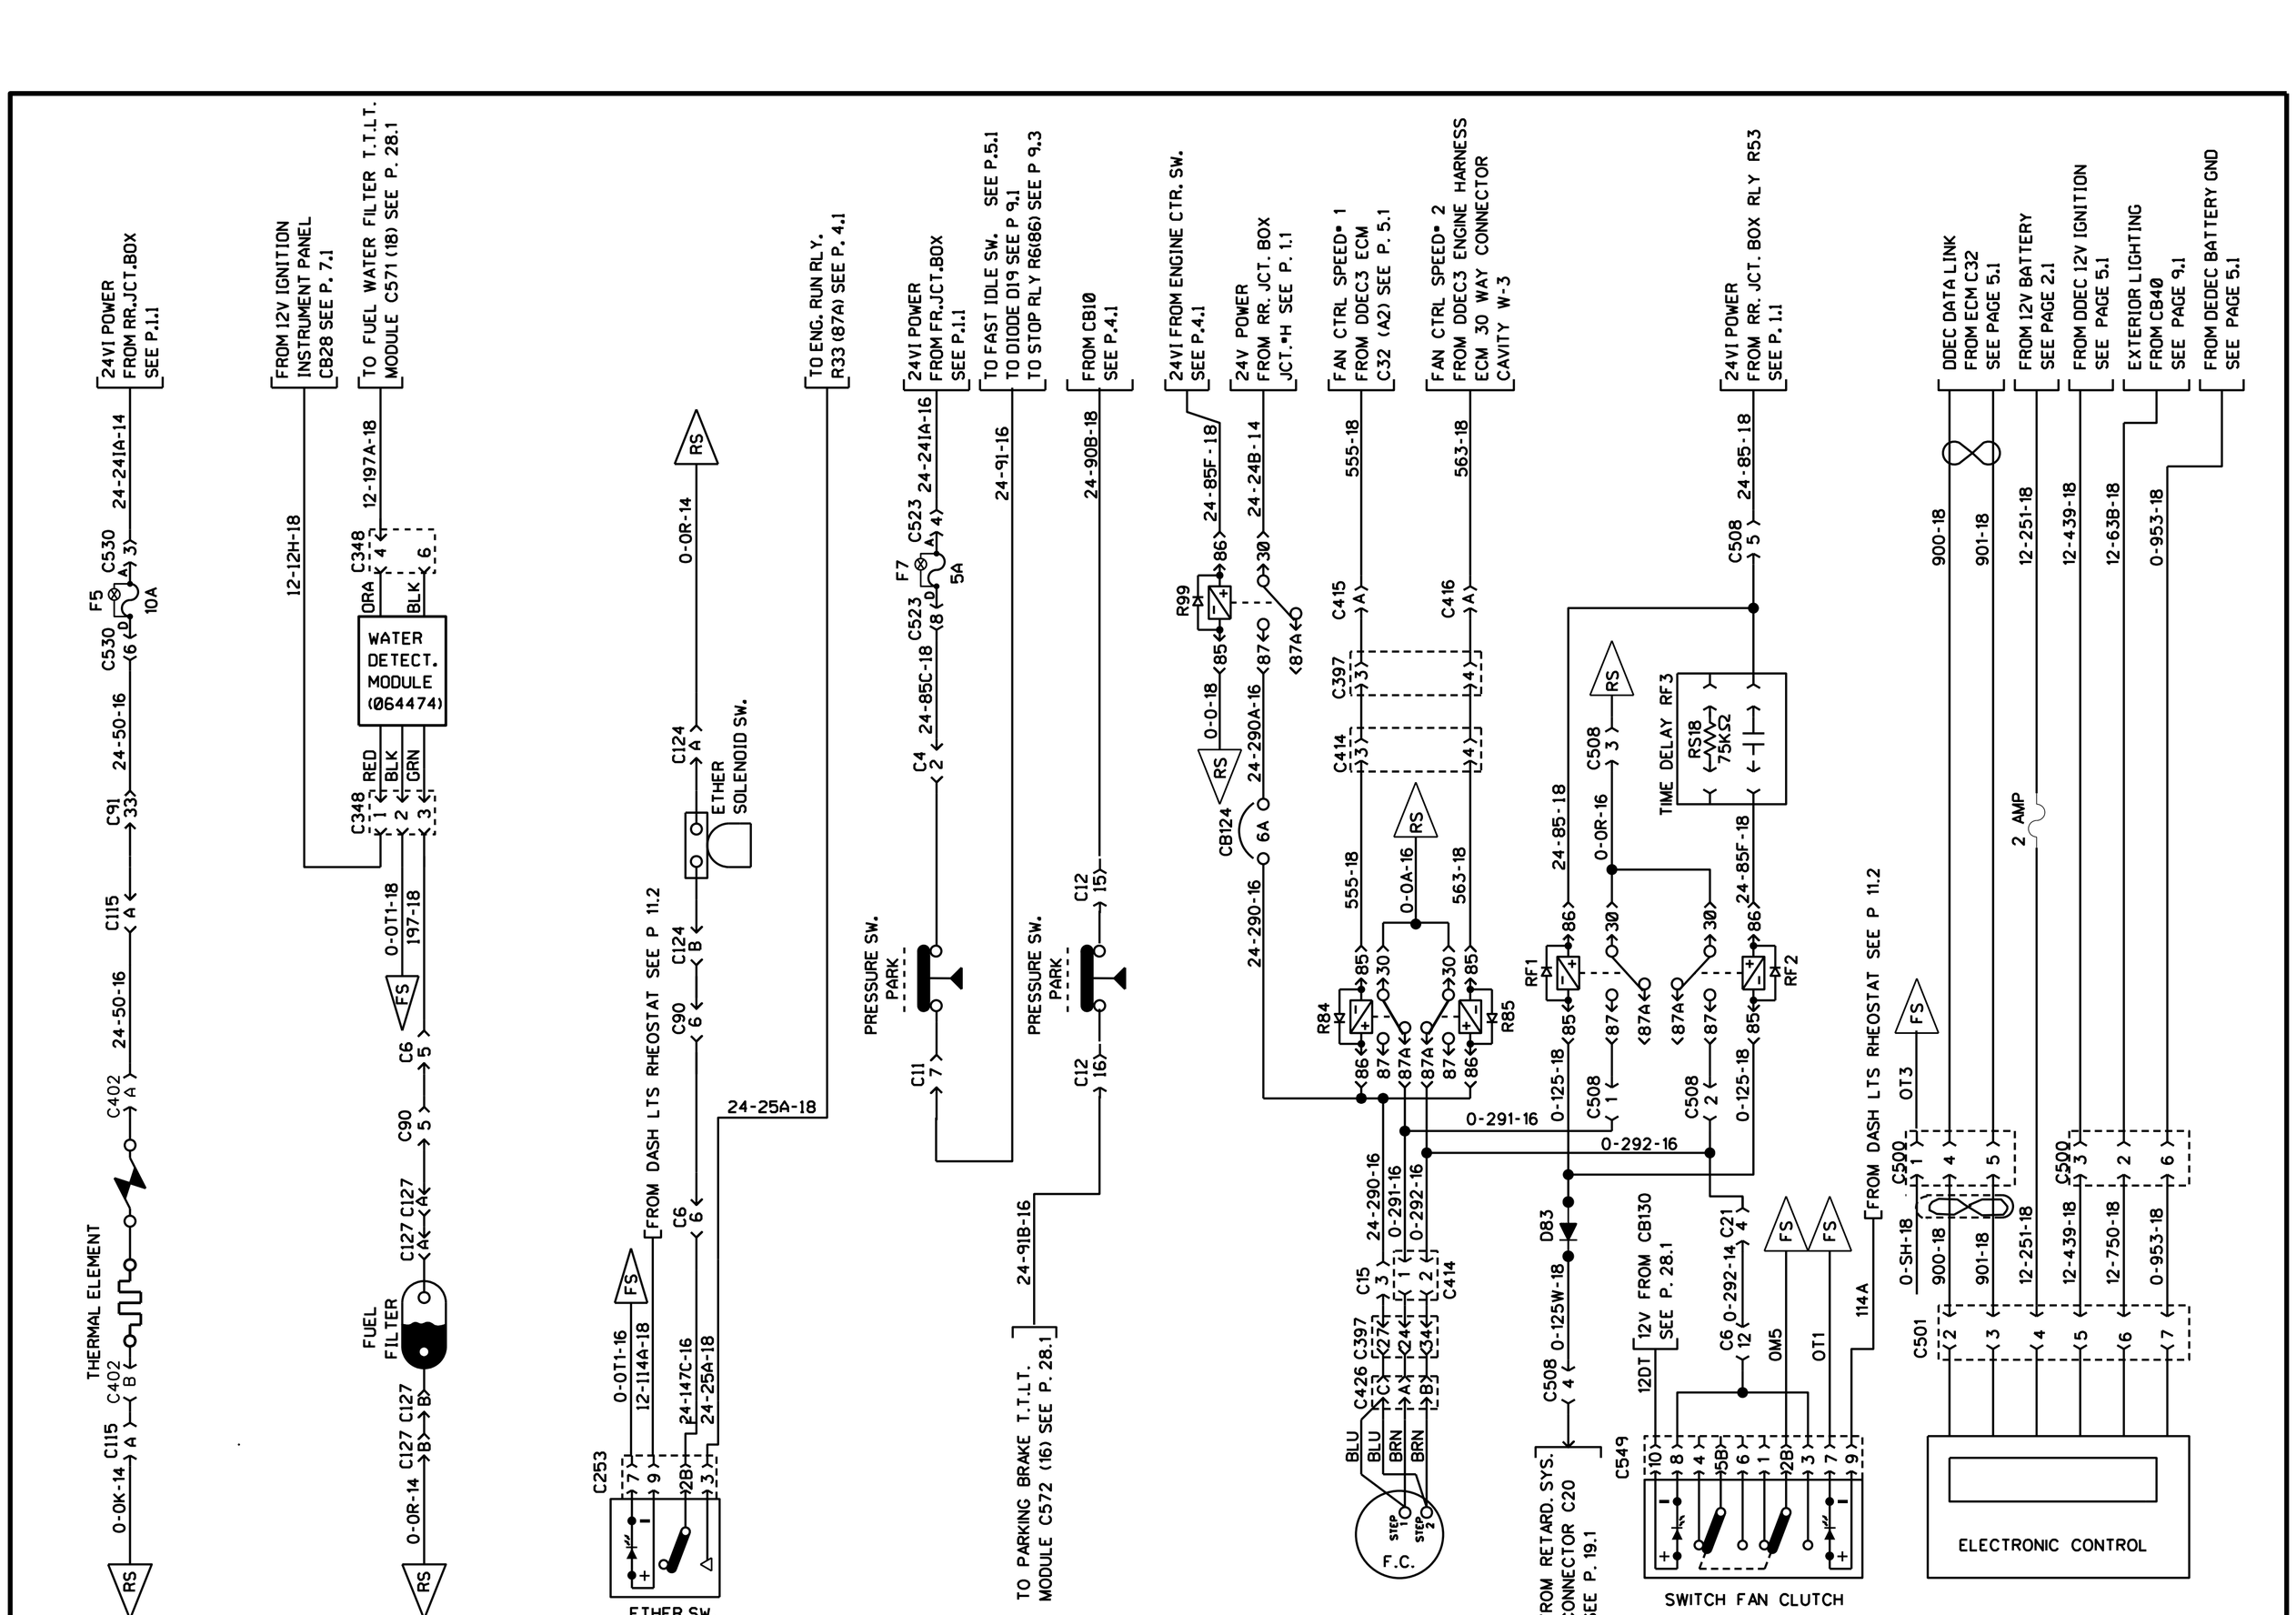
AIR DRYER
FUEL WATER FILTER
ETHER COLD START
PARKING BRAKE SWITCH
RADIATOR FAN CLUTCH
PRODRIVER
24VI POWER FROM RR.JCT.BOX SEE P.1.1
FROM 12V IGNITION INSTRUMENT PANEL CB28 SEE P. 7.1
TO FUEL WATER FILTER T.T.L.T. MODULE C571 (18) SEE P. 28.1
WATER DETECT. MODULE (064474)
THERMAL ELEMENT
FUEL FILTER
ETHER SOLENOID SW.
ETHER SW.
FROM DASH LTS RHEOSTAT SEE P 11.2
TO ENG. RUN RLY. R33 (87A) SEE P. 4.1
PRESSURE SW. PARK
TO PARKING BRAKE T.T.L.T. MODULE C572 (16) SEE P. 28.1
24VI FROM ENGINE CTR. SW. SEE P.4.1
24V POWER FROM RR. JCT. BOX JCT.•H SEE P. 1.1
FROM CB10 SEE P.4.1
TO FAST IDLE SW. SEE P.5.1
TO DIODE D19 SEE P 9.1
TO STOP RLY R6(86) SEE P 9.3
FAN CTRL SPEED• 1 FROM DDEC3 ECM C32 (A2) SEE P. 5.1
FAN CTRL SPEED• 2 FROM DDEC3 ENGINE HARNESS ECM 30 WAY CONNECTOR CAVITY W-3
TIME DELAY RF3
RS18 75KΩ
FROM RETARD. SYS. CONNECTOR C20 SEE P. 19.1
12V FROM CB130 SEE P. 28.1
SWITCH FAN CLUTCH
FROM DASH LTS RHEOSTAT SEE P 11.2
DDEC DATA LINK FROM ECM C32 SEE PAGE 5.1
FROM 12V BATTERY SEE PAGE 2.1
FROM DDEC 12V IGNITION SEE PAGE 5.1
EXTERIOR LIGHTING FROM CB40 SEE PAGE 9.1
FROM DEDEC BATTERY GND SEE PAGE 5.1
2 AMP
ELECTRONIC CONTROL

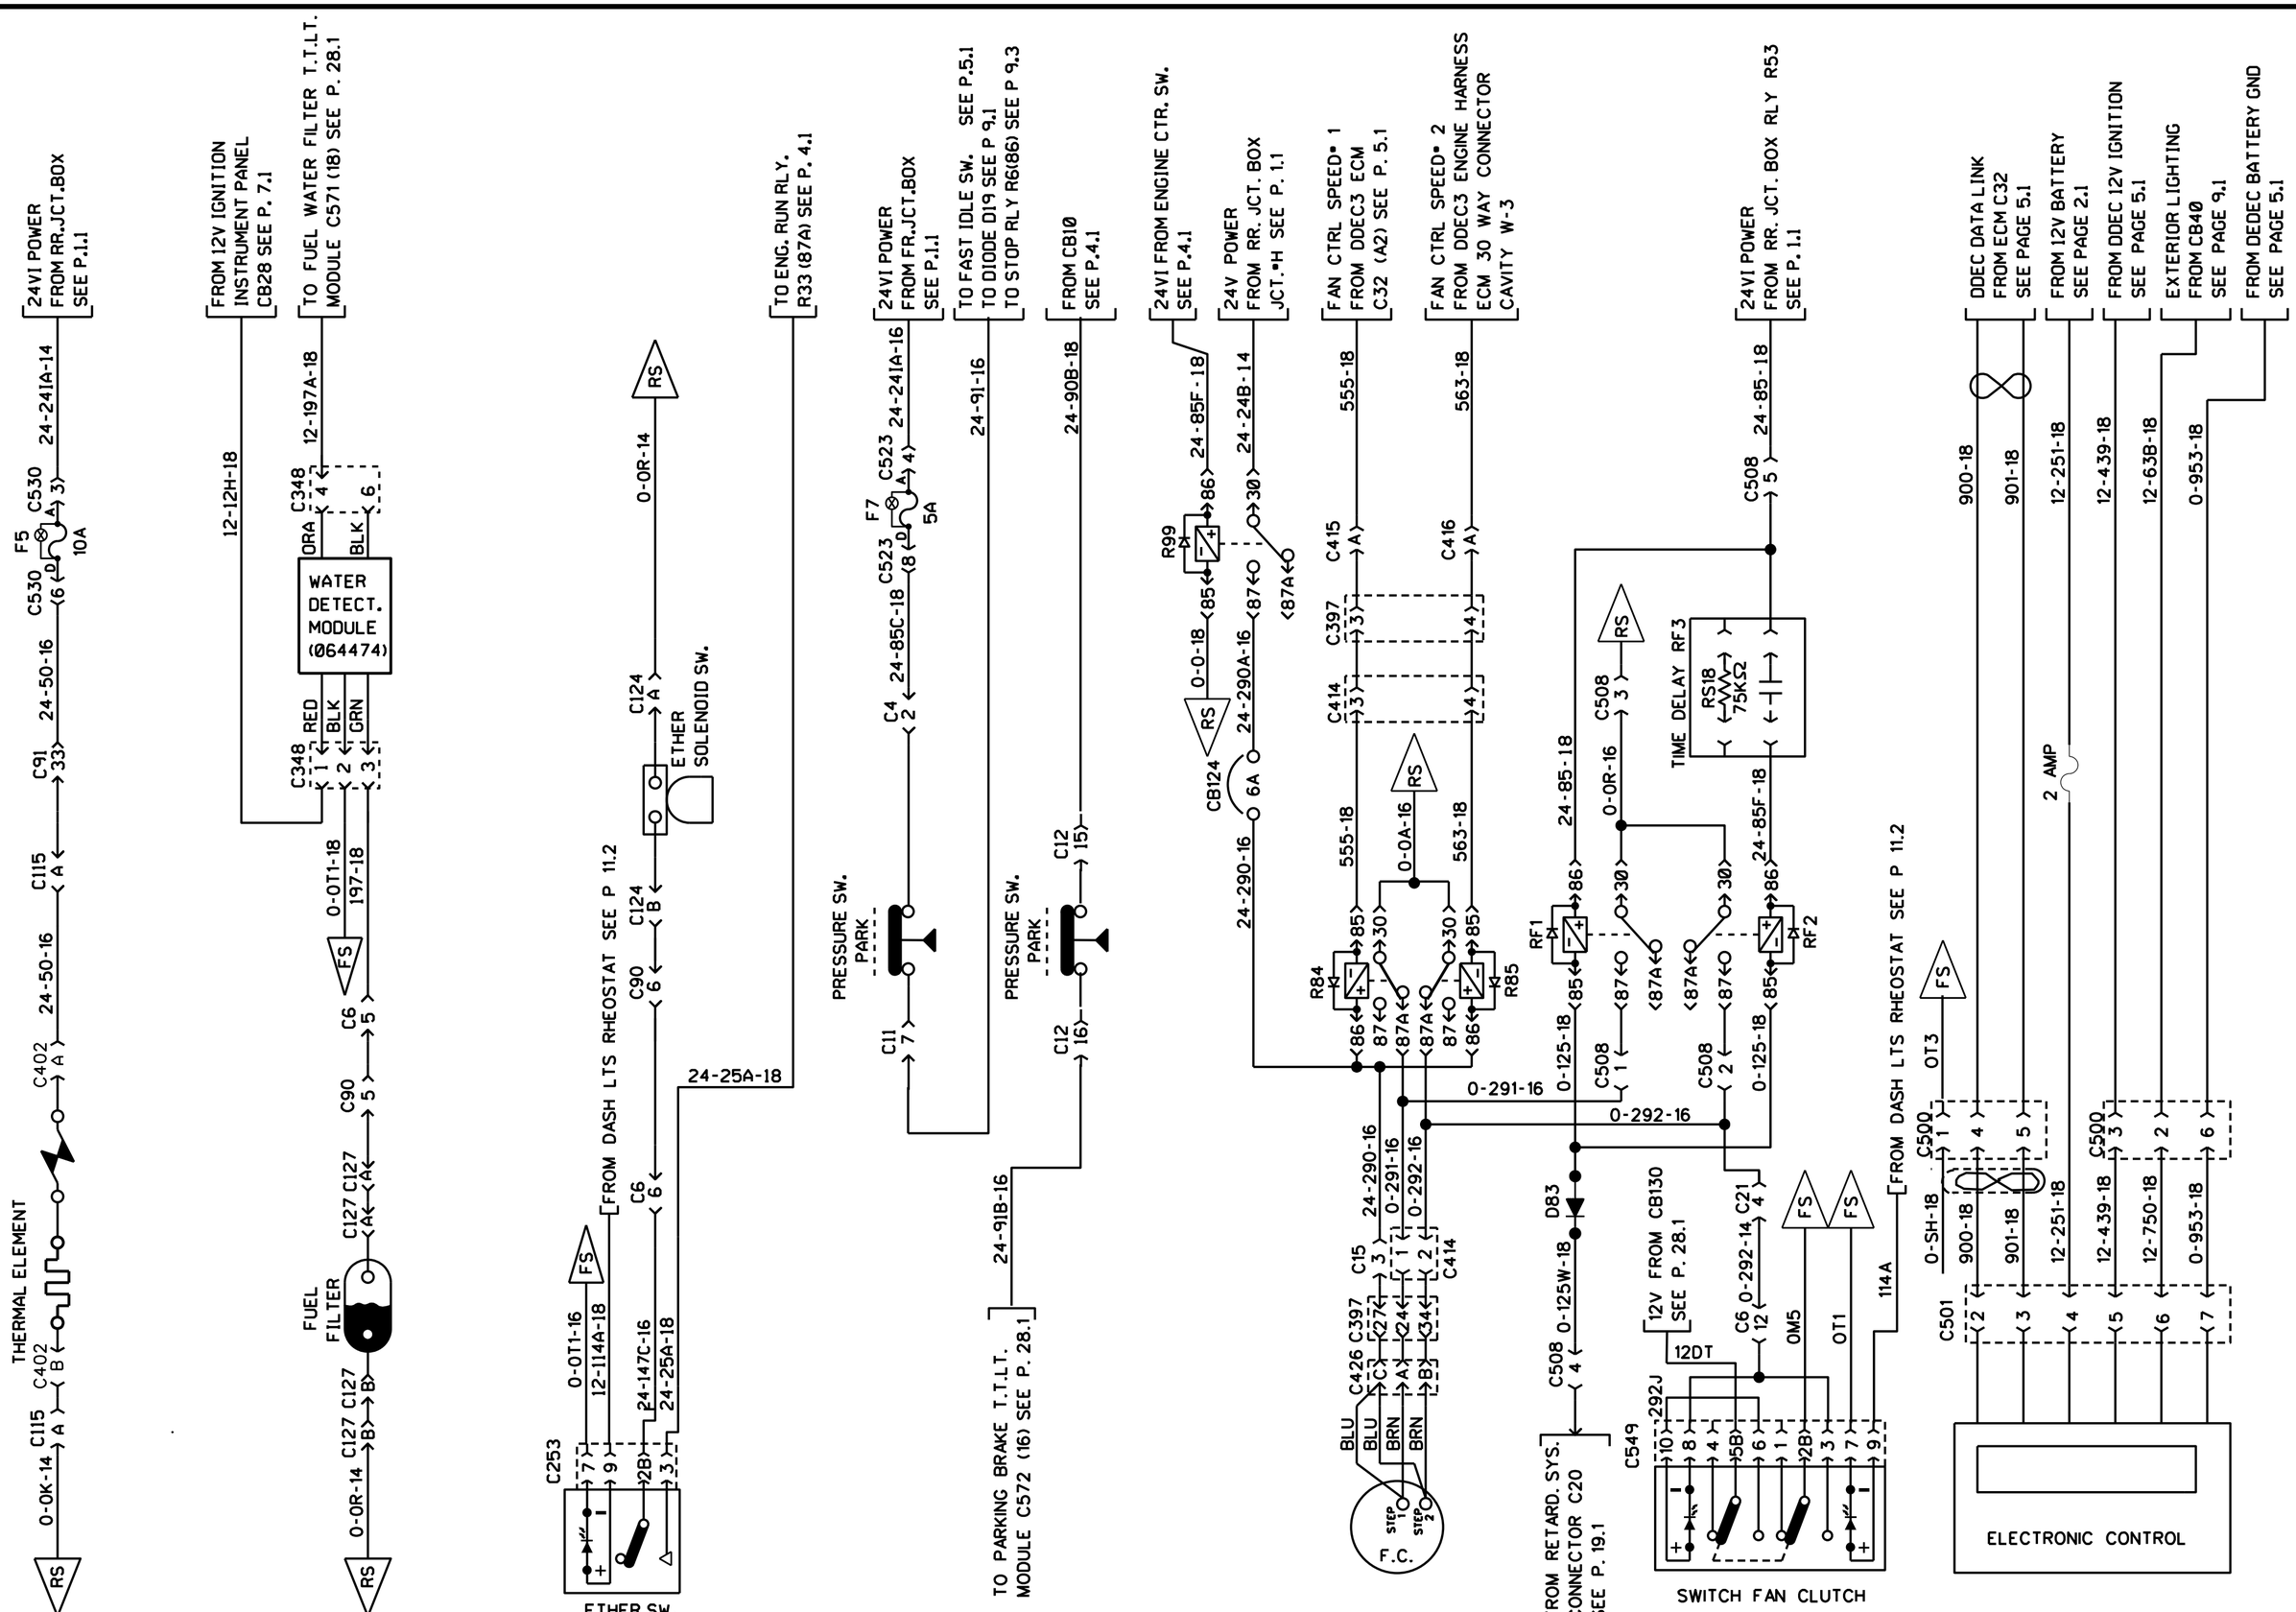
AIR DRYER
FUEL WATER FILTER
ETHER COLD START
PARKING BRAKE SWITCH
RADIATOR FAN CLUTCH
PRODRIVER
24VI POWER FROM RR.JCT.BOX SEE P.1.1
FROM 12V IGNITION INSTRUMENT PANEL CB28 SEE P. 7.1
TO FUEL WATER FILTER T.T.L.T. MODULE C571 (18) SEE P. 28.1
WATER DETECT. MODULE (064474)
THERMAL ELEMENT
FUEL FILTER
ETHER SOLENOID SW.
ETHER SW.
FROM DASH LTS RHEOSTAT SEE P 11.2
TO ENG. RUN RLY. R33 (87A) SEE P. 4.1
PRESSURE SW. PARK
TO PARKING BRAKE T.T.L.T. MODULE C572 (16) SEE P. 28.1
24VI FROM ENGINE CTR. SW. SEE P.4.1
24V POWER FROM RR. JCT. BOX JCT.•H SEE P. 1.1
FROM CB10 SEE P.4.1
TO FAST IDLE SW. SEE P.5.1
TO DIODE D19 SEE P 9.1
TO STOP RLY R6(86) SEE P 9.3
FAN CTRL SPEED• 1 FROM DDEC3 ECM C32 (A2) SEE P. 5.1
FAN CTRL SPEED• 2 FROM DDEC3 ENGINE HARNESS ECM 30 WAY CONNECTOR CAVITY W-3
TIME DELAY RF3
RS18 75KΩ
FROM RETARD. SYS. CONNECTOR C20 SEE P. 19.1
12V FROM CB130 SEE P. 28.1
12DT
SWITCH FAN CLUTCH
DDEC DATA LINK FROM ECM C32 SEE PAGE 5.1
FROM 12V BATTERY SEE PAGE 2.1
FROM DDEC 12V IGNITION SEE PAGE 5.1
EXTERIOR LIGHTING FROM CB40 SEE PAGE 9.1
FROM DEDEC BATTERY GND SEE PAGE 5.1
2 AMP
ELECTRONIC CONTROL

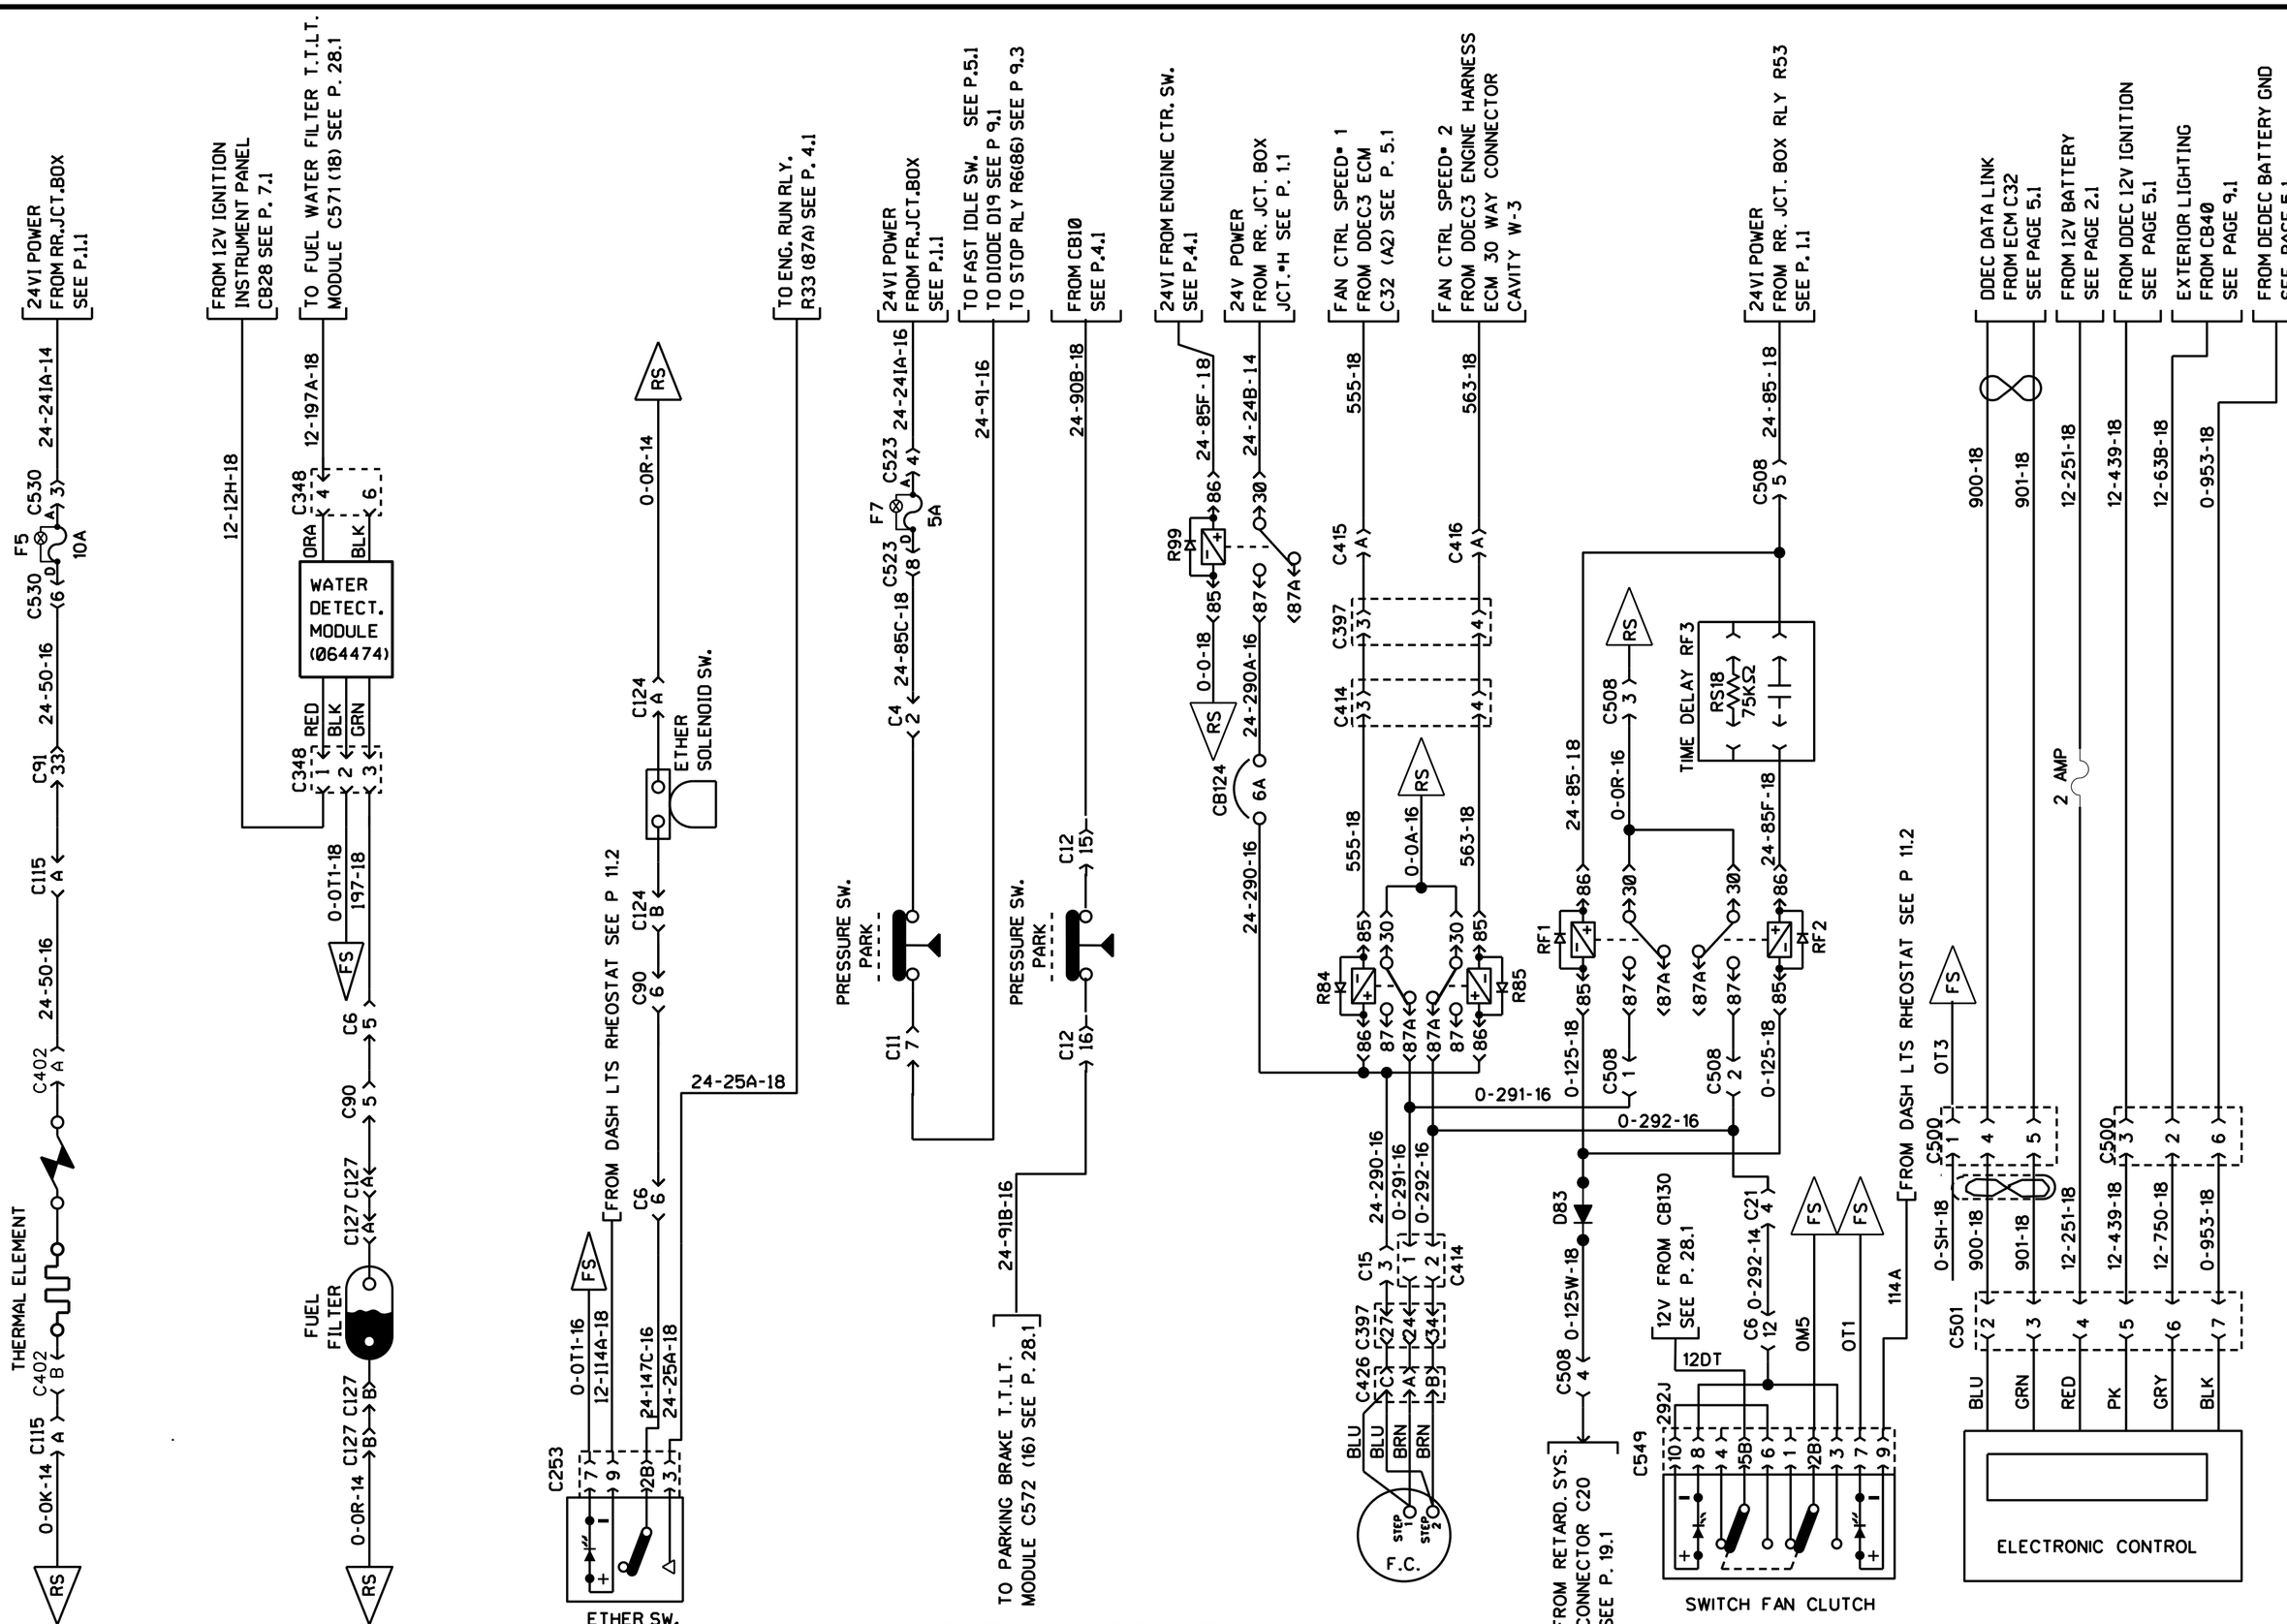
AIR DRYER
FUEL WATER FILTER
ETHER COLD START
PARKING BRAKE SWITCH
RADIATOR FAN CLUTCH
PRODRIVER
24VI POWER FROM RR.JCT.BOX SEE P.1.1
F5 10A
C530
24-241A-14
C91
24-50-16
C115
C402
THERMAL ELEMENT
0-0K-14
RS
FROM 12V IGNITION INSTRUMENT PANEL CB28 SEE P. 7.1
12-12H-18
TO FUEL WATER FILTER T.T.L.T. MODULE C571 (18) SEE P. 28.1
12-197A-18
C348
ORA
BLK
WATER DETECT. MODULE (064474)
RED
BLK
GRN
0-0T1-18
197-18
FS
FUEL FILTER
C127
0-0R-14
C90
C6
C124
FROM DASH LTS RHEOSTAT SEE P 11.2
0-0T1-16
12-114A-18
24-147C-16
24-25A-18
C253
ETHER SW.
TO ENG. RUN RLY. R33 (87A) SEE P. 4.1
C124
0-0R-14
ETHER SOLENOID SW.
PRESSURE SW. PARK
C11
C12
24-91B-16
TO PARKING BRAKE T.T.L.T. MODULE C572 (16) SEE P. 28.1
24VI POWER FROM FR.JCT.BOX SEE P.1.1
F7 5A
C523
C4
24-85C-18
TO FAST IDLE SW. SEE P.5.1
TO DIODE D19 SEE P 9.1
TO STOP RLY R6(86) SEE P 9.3
24-91-16
FROM CB10 SEE P.4.1
24-90B-18
24VI FROM ENGINE CTR. SW. SEE P.4.1
24V POWER FROM RR. JCT. BOX JCT.•H SEE P. 1.1
R99
24-85F-18
24-24B-14
CB124
6A
24-290-16
0-0-18
24-290A-16
FAN CTRL SPEED• 1 FROM DDEC3 ECM C32 (A2) SEE P. 5.1
FAN CTRL SPEED• 2 FROM DDEC3 ENGINE HARNESS ECM 30 WAY CONNECTOR CAVITY W-3
C414
C397
C415
C416
555-18
563-18
0-0A-16
24-85-18
0-0R-16
C508
TIME DELAY RF3
RS18 75KΩ
24VI POWER FROM RR. JCT. BOX RLY R53 SEE P. 1.1
C508
24-85-18
R84
R85
RF1
RF2
0-125-18
0-291-16
0-292-16
C508
C15
C397
C414
C426
BLU
BRN
0-125W-18
D83
FROM RETARD. SYS. CONNECTOR C20 SEE P. 19.1
STEP 1
STEP 2
F.C.
12V FROM CB130 SEE P. 28.1
12DT
C549
292J
0M5
OT1
114A
C6
0-292-14
C21
SWITCH FAN CLUTCH
DDEC DATA LINK FROM ECM C32 SEE PAGE 5.1
FROM 12V BATTERY SEE PAGE 2.1
FROM DDEC 12V IGNITION SEE PAGE 5.1
EXTERIOR LIGHTING FROM CB40 SEE PAGE 9.1
FROM DEDEC BATTERY GND SEE PAGE 5.1
900-18
901-18
12-251-18
12-439-18
12-63B-18
0-953-18
2 AMP
FROM DASH LTS RHEOSTAT SEE P 11.2
0-SH-18
C500
C501
OT3
12-439-18
12-750-18
0-953-18
BLU
GRN
RED
PK
GRY
BLK
ELECTRONIC CONTROL

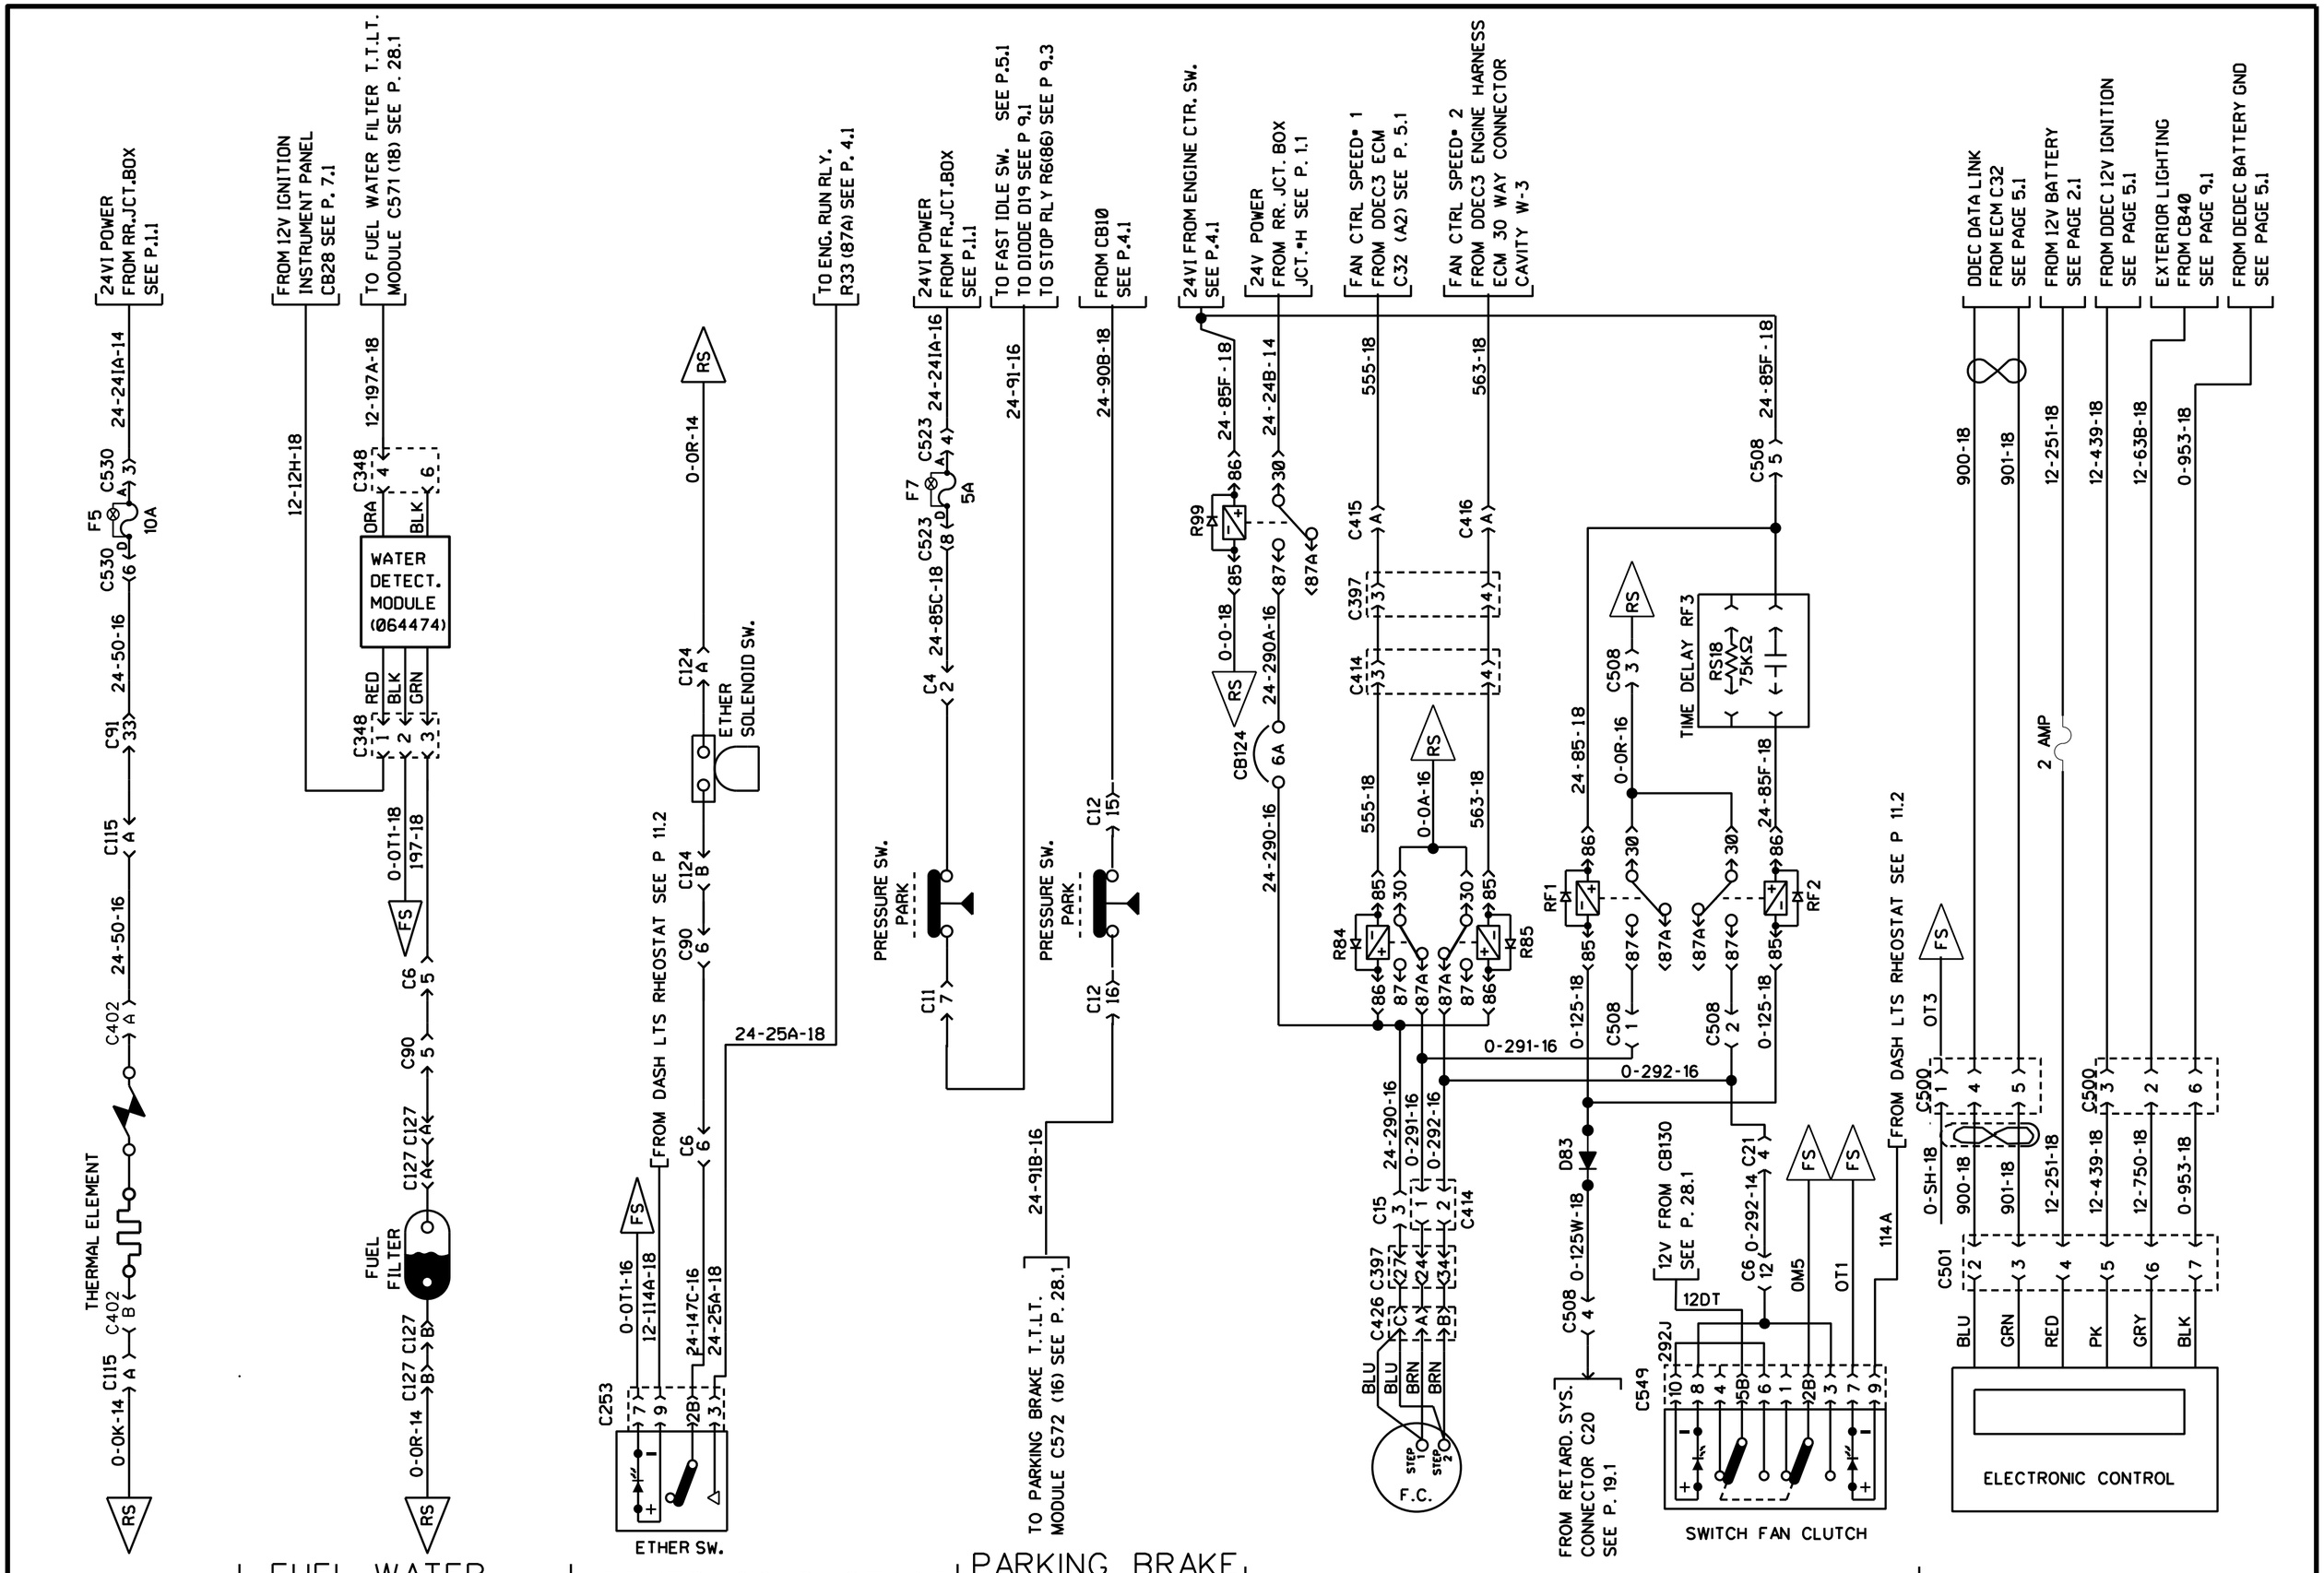

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 8.1	REVISION 09

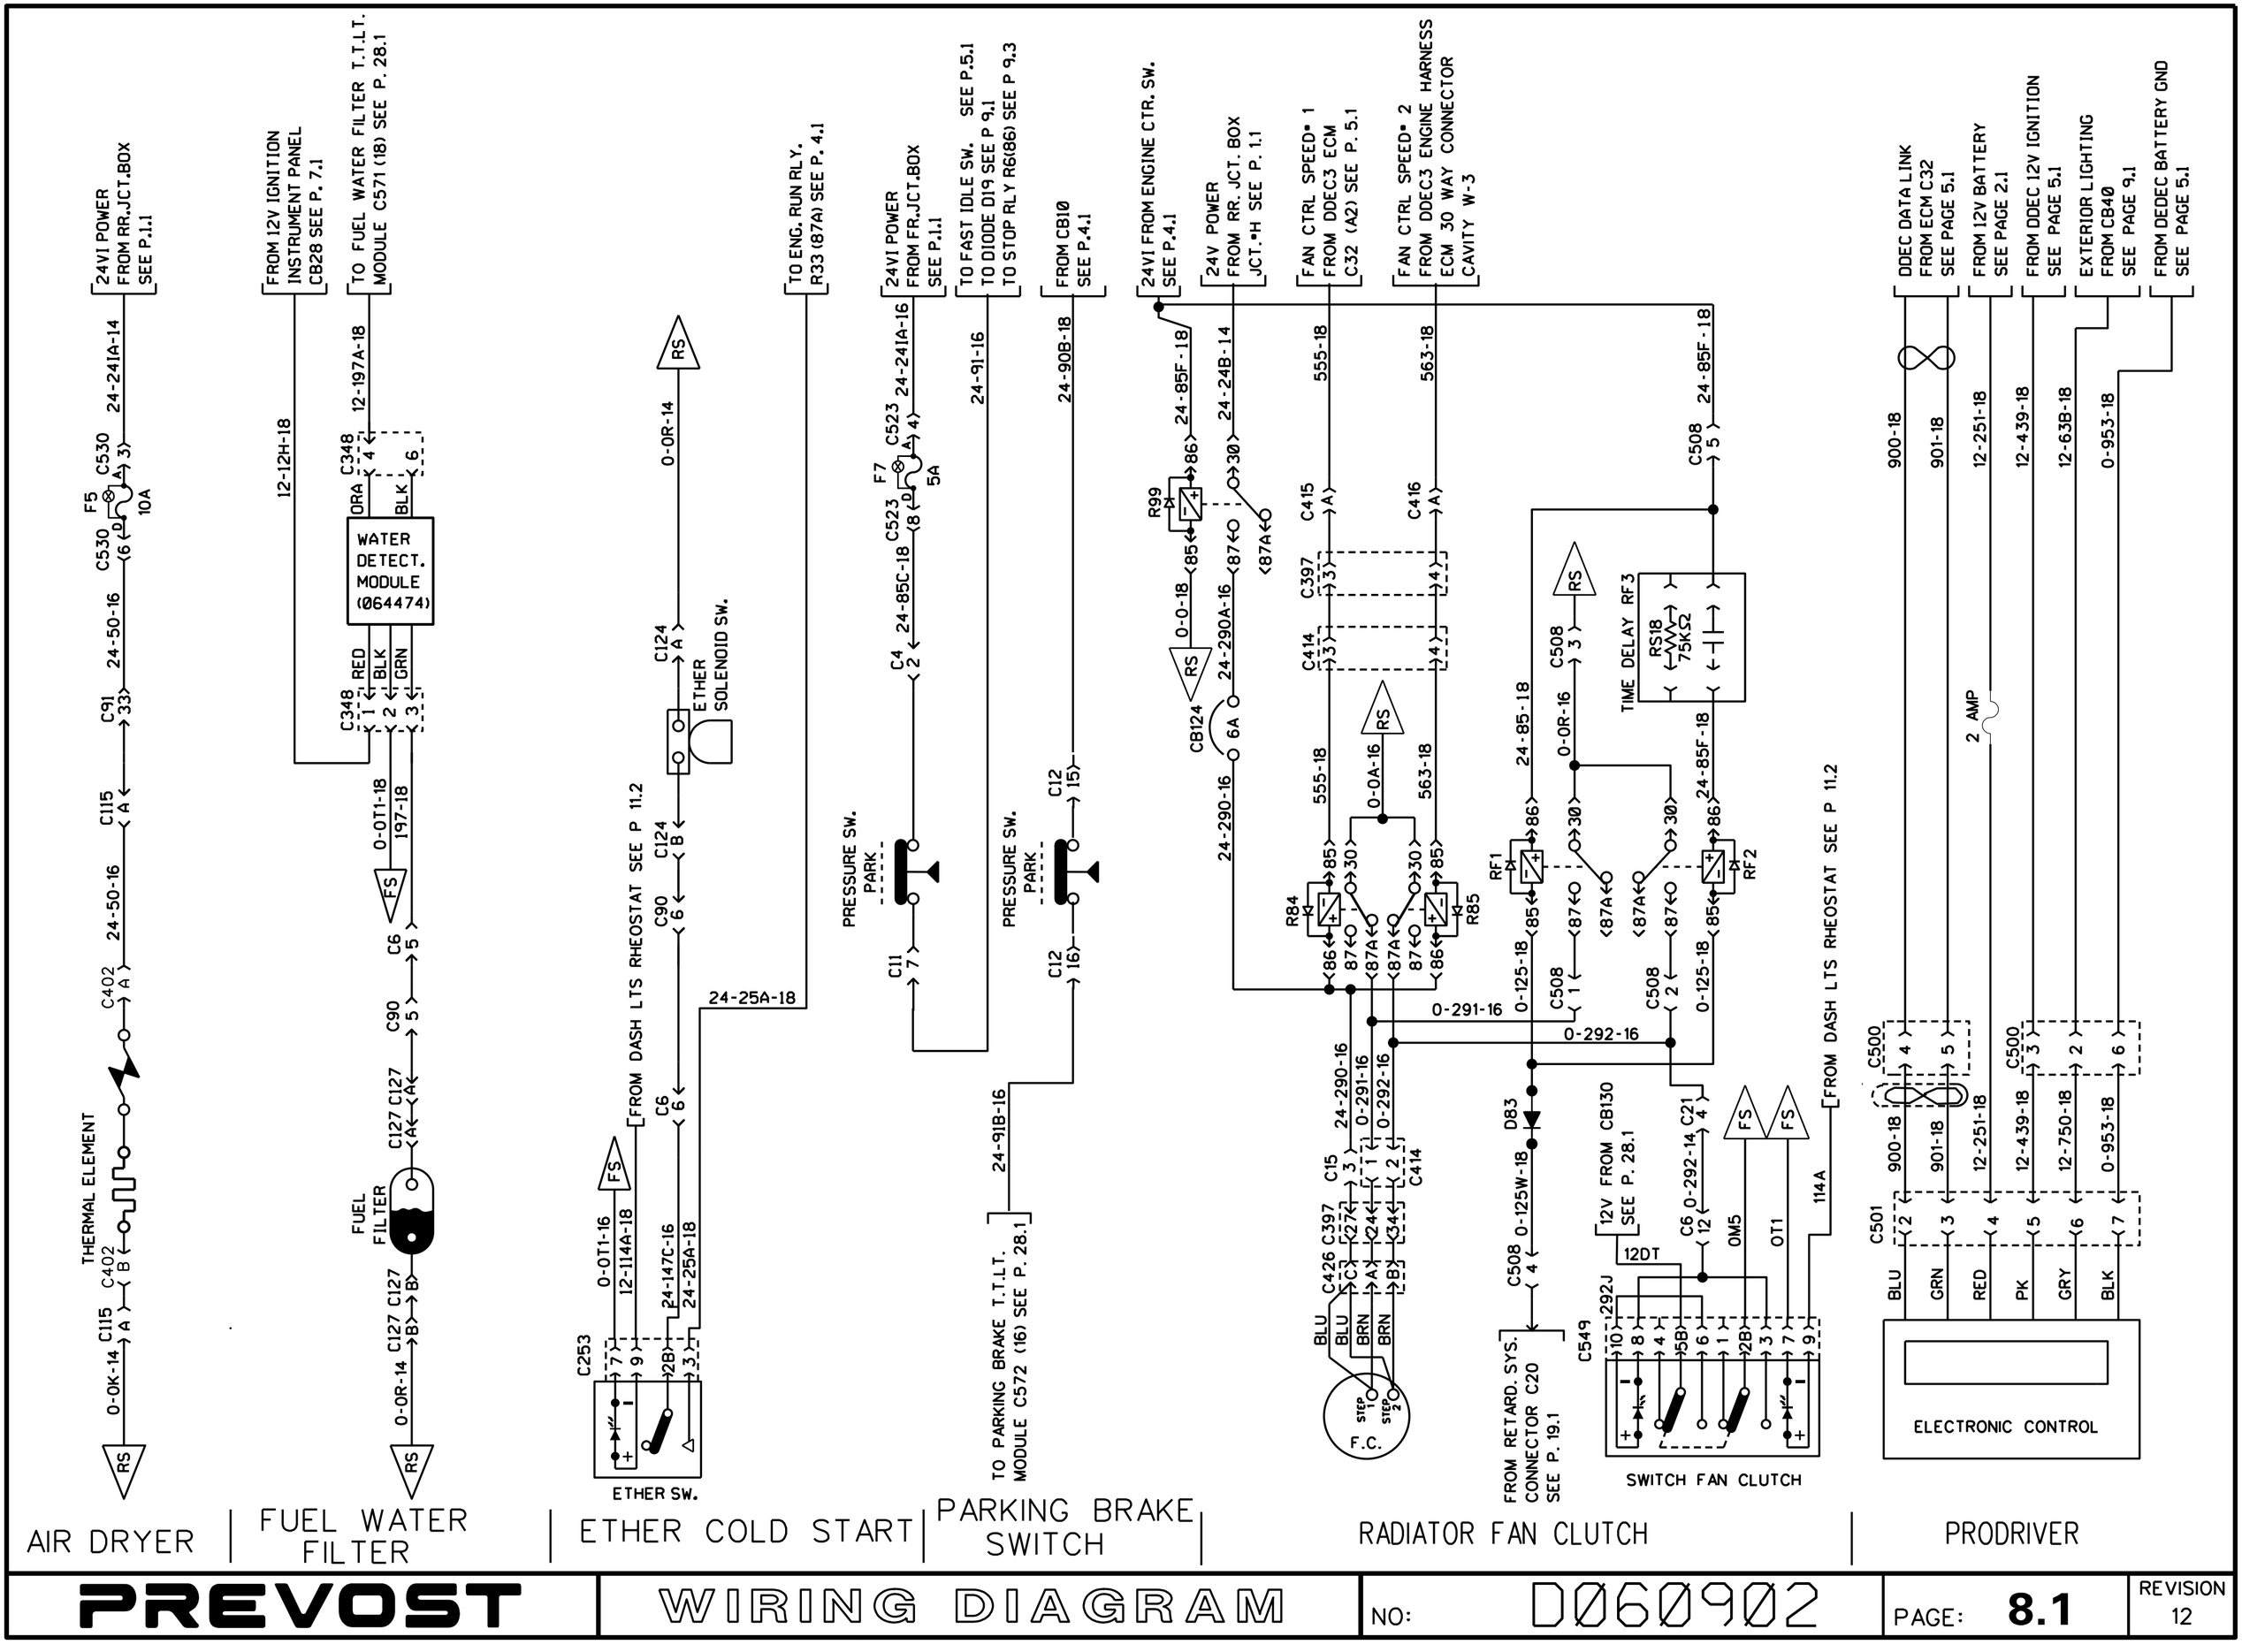
AIR DRYER
FUEL WATER FILTER
ETHER COLD START
PARKING BRAKE SWITCH
RADIATOR FAN CLUTCH
PRODRIVER
24VI POWER FROM RR.JCT.BOX SEE P.1.1
10A
F5
C530
24-241A-14
24-50-16
C91
C115
C402
THERMAL ELEMENT
0-OK-14
RS
FROM 12V IGNITION INSTRUMENT PANEL CB28 SEE P. 7.1
12-12H-18
TO FUEL WATER FILTER T.T.L.T. MODULE C571 (18) SEE P. 28.1
12-197A-18
C348
WATER DETECT. MODULE (064474)
RED
BLK
GRN
ORA
BLK
0-0T1-18
197-18
FS
C90
C6
C127
FUEL FILTER
0-OR-14
ETHER SOLENOID SW.
C124
0-OR-14
TO ENG. RUN RLY. R33 (87A) SEE P. 4.1
FROM DASH LTS RHEOSTAT SEE P 11.2
0-0T1-16
12-114A-18
24-147C-16
24-25A-18
C253
ETHER SW.
PRESSURE SW. PARK
C11
C12
24-91B-16
TO PARKING BRAKE T.T.L.T. MODULE C572 (16) SEE P. 28.1
24VI POWER FROM FR.JCT.BOX SEE P.1.1
C523
24-241A-16
F7
5A
C4
24-85C-18
24-91-16
TO FAST IDLE SW. SEE P.5.1
TO DIODE D19 SEE P 9.1
TO STOP RLY R6(86) SEE P 9.3
24-90B-18
FROM CB10 SEE P.4.1
24VI FROM ENGINE CTR. SW. SEE P.4.1
24V POWER FROM RR. JCT. BOX JCT."H" SEE P. 1.1
FAN CTRL SPEED" 1 FROM DDEC3 ECM C32 (A2) SEE P. 5.1
FAN CTRL SPEED" 2 FROM DDEC3 ENGINE HARNESS ECM 30 WAY CONNECTOR CAVITY W-3
R99
24-85F-18
24-24B-14
CB124
6A
24-290A-16
0-0-18
C414
C415
C397
C416
555-18
563-18
24-85-18
0-OR-16
TIME DELAY RF3
RS18
75KΩ
C508
24-85F-18
0-0A-16
R84
R85
RF1
RF2
0-125-18
0-291-16
0-292-16
24-290-16
C426
C15
BLU
BRN
D83
0-125W-18
FROM RETARD. SYS. CONNECTOR C20 SEE P. 19.1
12V FROM CB130 SEE P. 28.1
12DT
292J
C549
C6
C21
0M5
0T1
114A
FROM DASH LTS RHEOSTAT SEE P 11.2
STEP 1
STEP 2
F.C.
SWITCH FAN CLUTCH
DDEC DATA LINK FROM ECM C32 SEE PAGE 5.1
900-18
901-18
FROM 12V BATTERY SEE PAGE 2.1
12-251-18
2 AMP
FROM DDEC 12V IGNITION SEE PAGE 5.1
12-439-18
EXTERIOR LIGHTING FROM CB40 SEE PAGE 9.1
12-63B-18
FROM DEDEC BATTERY GND SEE PAGE 5.1
0-953-18
C500
C501
12-750-18
BLU
GRN
RED
PK
GRY
BLK
ELECTRONIC CONTROL

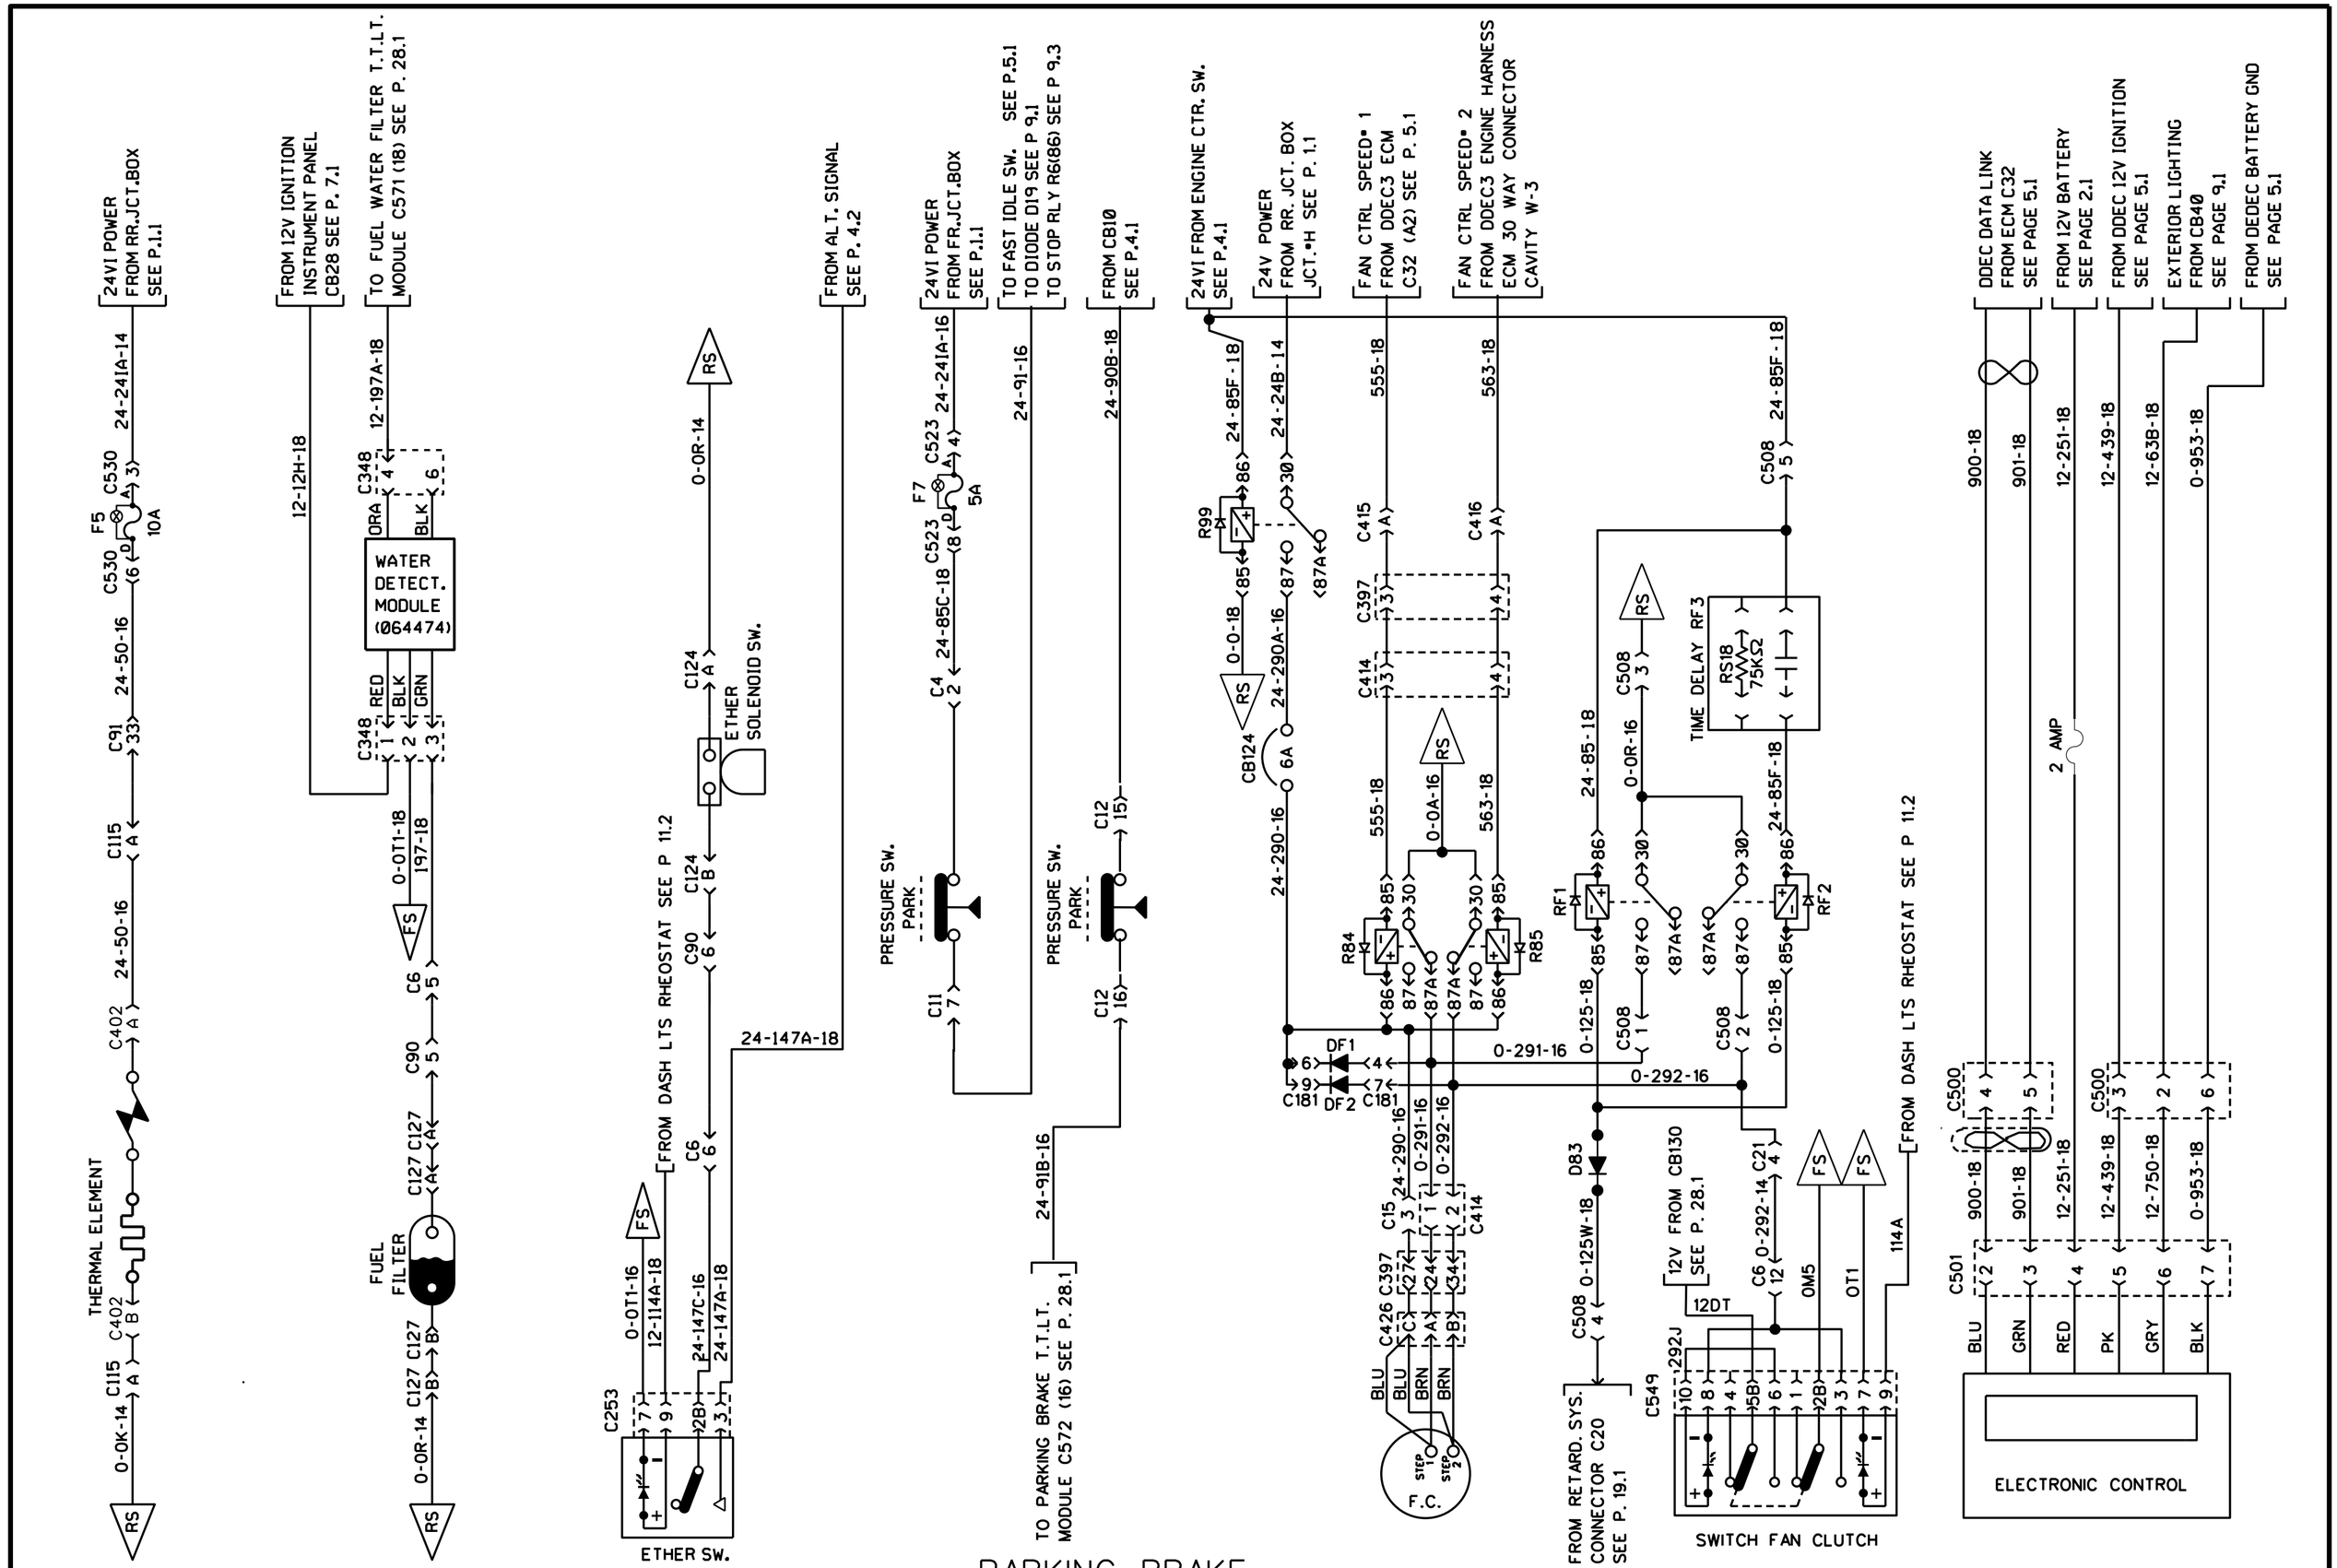
AIR DRYER
24VI POWER FROM RR.JCT.BOX SEE P.1.1
F5 10A
C530
24-241A-14
C91
24-50-16
C115
THERMAL ELEMENT
C402
0-OK-14
RS
FUEL WATER FILTER
FROM 12V IGNITION INSTRUMENT PANEL CB28 SEE P. 7.1
12-12H-18
TO FUEL WATER FILTER T.T.L.T. MODULE C571 (18) SEE P. 28.1
12-197A-18
C348
WATER DETECT. MODULE (064474)
RED
BLK
GRN
ORA
BLK
0-0T1-18
197-18
FS
C6
C90
C127
FUEL FILTER
0-OR-14
ETHER COLD START
C124
ETHER SOLENOID SW.
0-OR-14
FROM DASH LTS RHEOSTAT SEE P 11.2
C253
0-0T1-16
12-114A-18
24-147C-16
24-147A-18
ETHER SW.
PARKING BRAKE SWITCH
FROM ALT. SIGNAL SEE P. 4.2
24VI POWER FROM FR.JCT.BOX SEE P.1.1
C4
24-85C-18
C523
24-241A-16
F7 5A
TO FAST IDLE SW. SEE P.5.1
TO DIODE D19 SEE P 9.1
TO STOP RLY R6(86) SEE P 9.3
24-91-16
FROM CB10 SEE P.4.1
24-90B-18
PRESSURE SW. PARK
C11
C12
24-91B-16
TO PARKING BRAKE T.T.L.T. MODULE C572 (16) SEE P. 28.1
RADIATOR FAN CLUTCH
24VI FROM ENGINE CTR. SW. SEE P.4.1
24V POWER FROM RR. JCT. BOX JCT.•H SEE P. 1.1
FAN CTRL SPEED• 1 FROM DDEC3 ECM C32 (A2) SEE P. 5.1
FAN CTRL SPEED• 2 FROM DDEC3 ENGINE HARNESS ECM 30 WAY CONNECTOR CAVITY W-3
24-85F-18
24-24B-14
R99
CB124 6A
0-0-18
24-290A-16
C415
C416
555-18
563-18
C397
C414
0-0A-16
0-0R-16
C508
TIME DELAY RF3
RS18 75KΩ2
R84
R85
RF1
RF2
DF1
DF2
C181
0-291-16
0-292-16
0-125-18
C508
C426
C15
C414
D83
0-125W-18
FROM RETARD. SYS. CONNECTOR C20 SEE P. 19.1
12V FROM CB130 SEE P. 28.1
12DT
C549
C21
0M5
OT1
114A
FROM DASH LTS RHEOSTAT SEE P 11.2
PRODRIVER
DDEC DATA LINK FROM ECM C32 SEE PAGE 5.1
900-18
901-18
2 AMP
FROM 12V BATTERY SEE PAGE 2.1
12-251-18
FROM DDEC 12V IGNITION SEE PAGE 5.1
12-439-18
12-638-18
EXTERIOR LIGHTING FROM CB40 SEE PAGE 9.1
0-953-18
FROM DEDEC BATTERY GND SEE PAGE 5.1
C500
C501
12-750-18
BLU
GRN
RED
PK
GRY
BLK
ELECTRONIC CONTROL

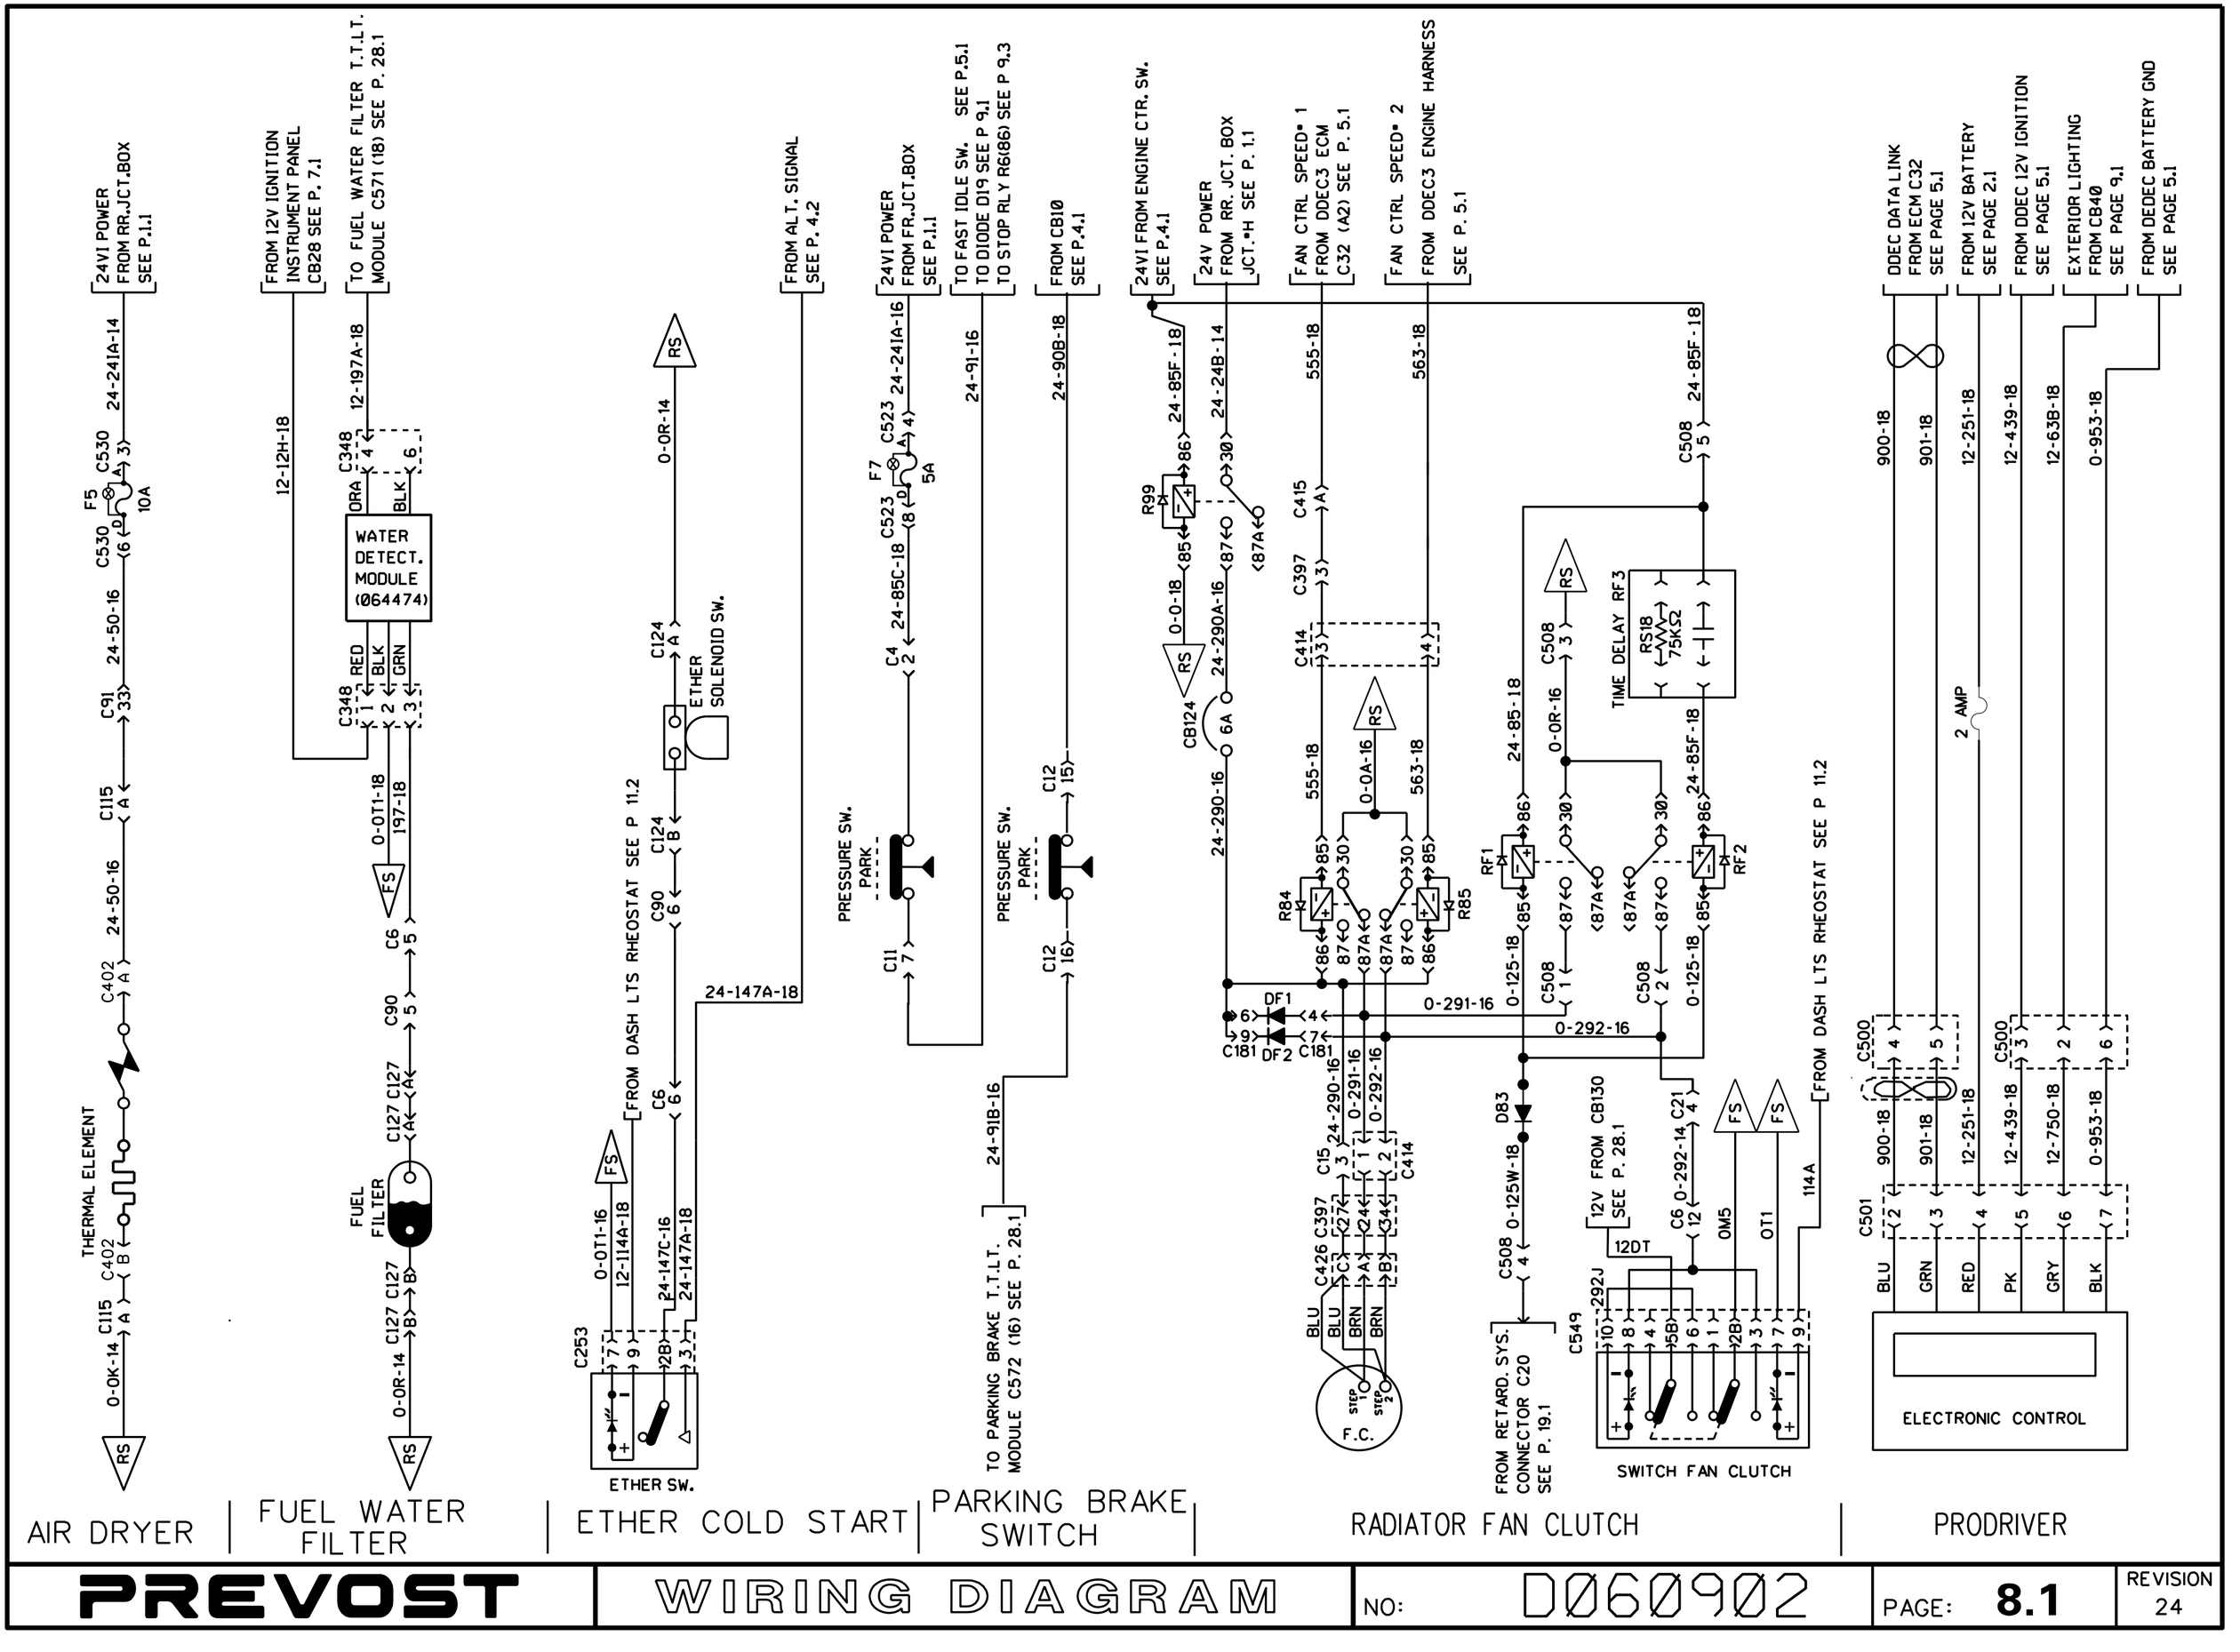
AIR DRYER
FUEL WATER FILTER
ETHER COLD START
PARKING BRAKE SWITCH
RADIATOR FAN CLUTCH
PRODRIVER
24VI POWER FROM RR.JCT.BOX SEE P.1.1
FROM 12V IGNITION INSTRUMENT PANEL CB28 SEE P. 7.1
TO FUEL WATER FILTER T.T.L.T. MODULE C571 (18) SEE P. 28.1
WATER DETECT. MODULE (064474)
THERMAL ELEMENT
FUEL FILTER
ETHER SOLENOID SW.
FROM ALT. SIGNAL SEE P. 4.2
24VI POWER FROM FR.JCT.BOX SEE P.1.1
TO FAST IDLE SW. SEE P.5.1
TO DIODE D19 SEE P 9.1
TO STOP RLY R6(86) SEE P 9.3
FROM CB10 SEE P.4.1
FROM DASH LTS RHEOSTAT SEE P 11.2
PRESSURE SW. PARK
TO PARKING BRAKE T.T.L.T. MODULE C572 (16) SEE P. 28.1
24VI FROM ENGINE CTR. SW. SEE P.4.1
24V POWER FROM RR. JCT. BOX JCT.•H SEE P. 1.1
FAN CTRL SPEED• 1 FROM DDEC3 ECM C32 (A2) SEE P. 5.1
FAN CTRL SPEED• 2 FROM DDEC3 ENGINE HARNESS SEE P. 5.1
TIME DELAY RF3
RS18 75KΩ
FROM RETARD. SYS. CONNECTOR C20 SEE P. 19.1
12V FROM CB130 SEE P. 28.1
SWITCH FAN CLUTCH
DDEC DATA LINK FROM ECM C32 SEE PAGE 5.1
FROM 12V BATTERY SEE PAGE 2.1
FROM DDEC 12V IGNITION SEE PAGE 5.1
EXTERIOR LIGHTING FROM CB40 SEE PAGE 9.1
FROM DEDEC BATTERY GND SEE PAGE 5.1
ELECTRONIC CONTROL

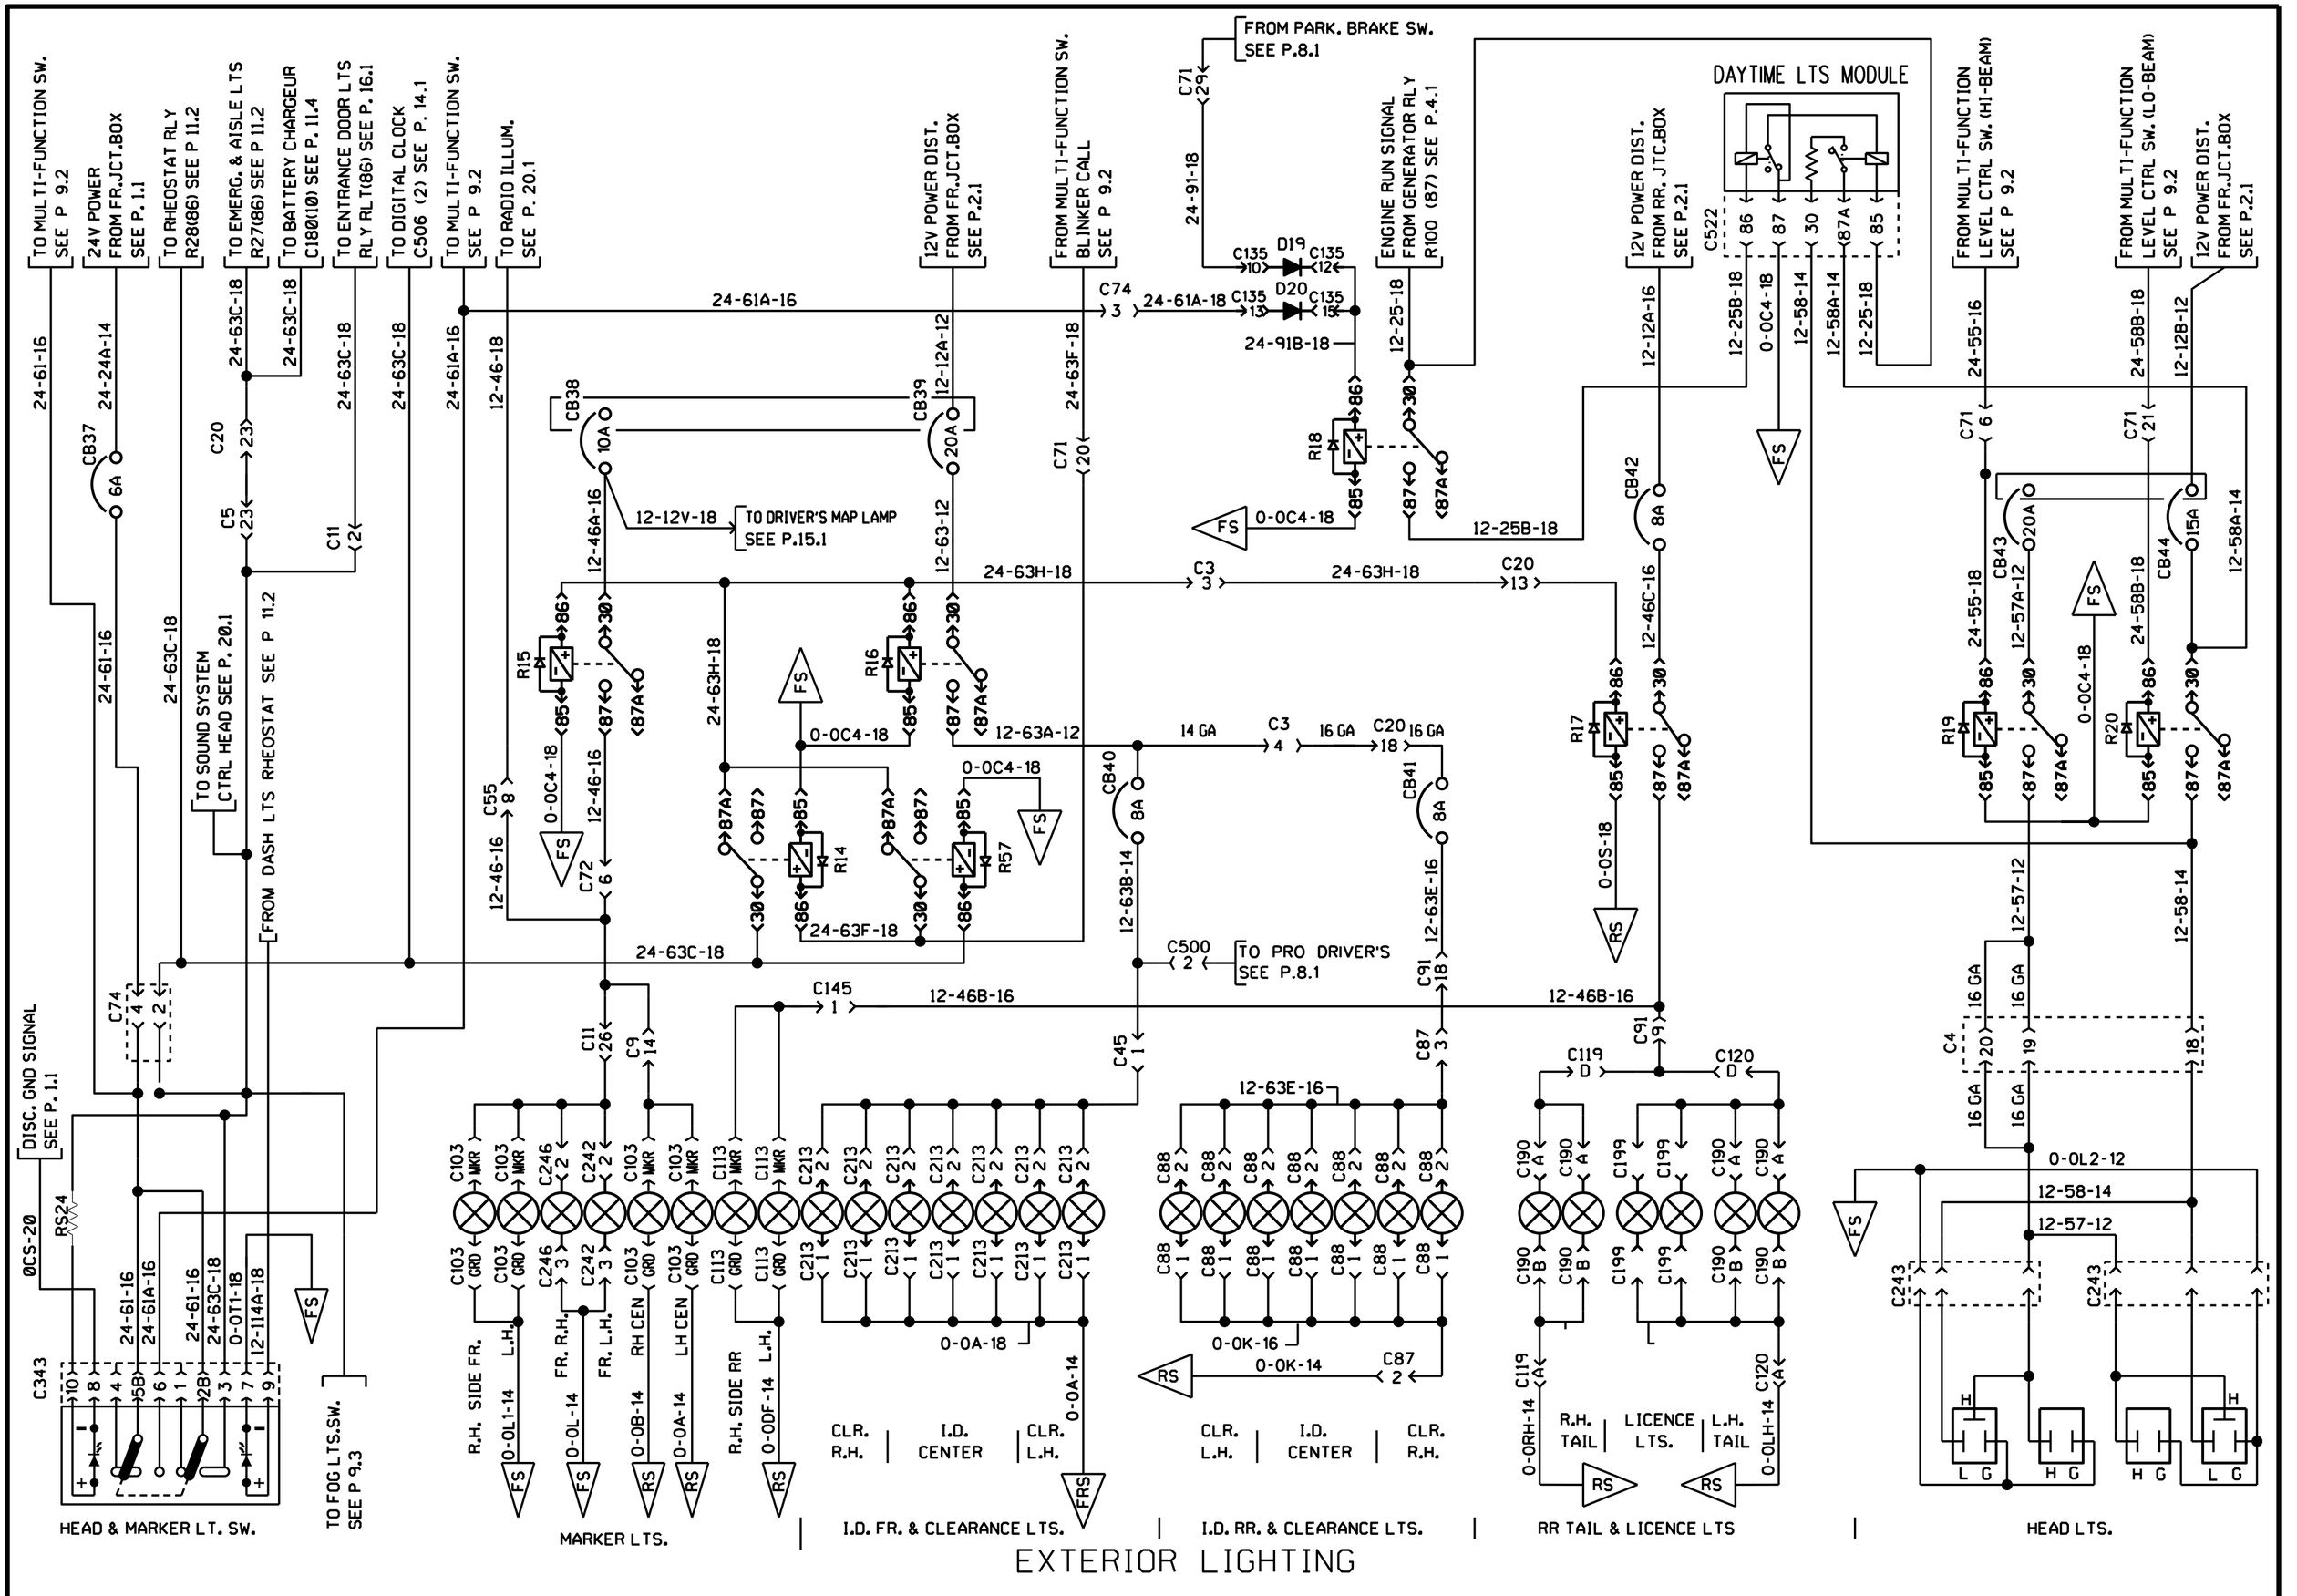

EXTERIOR LIGHTING

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 9.1	REVISION 00

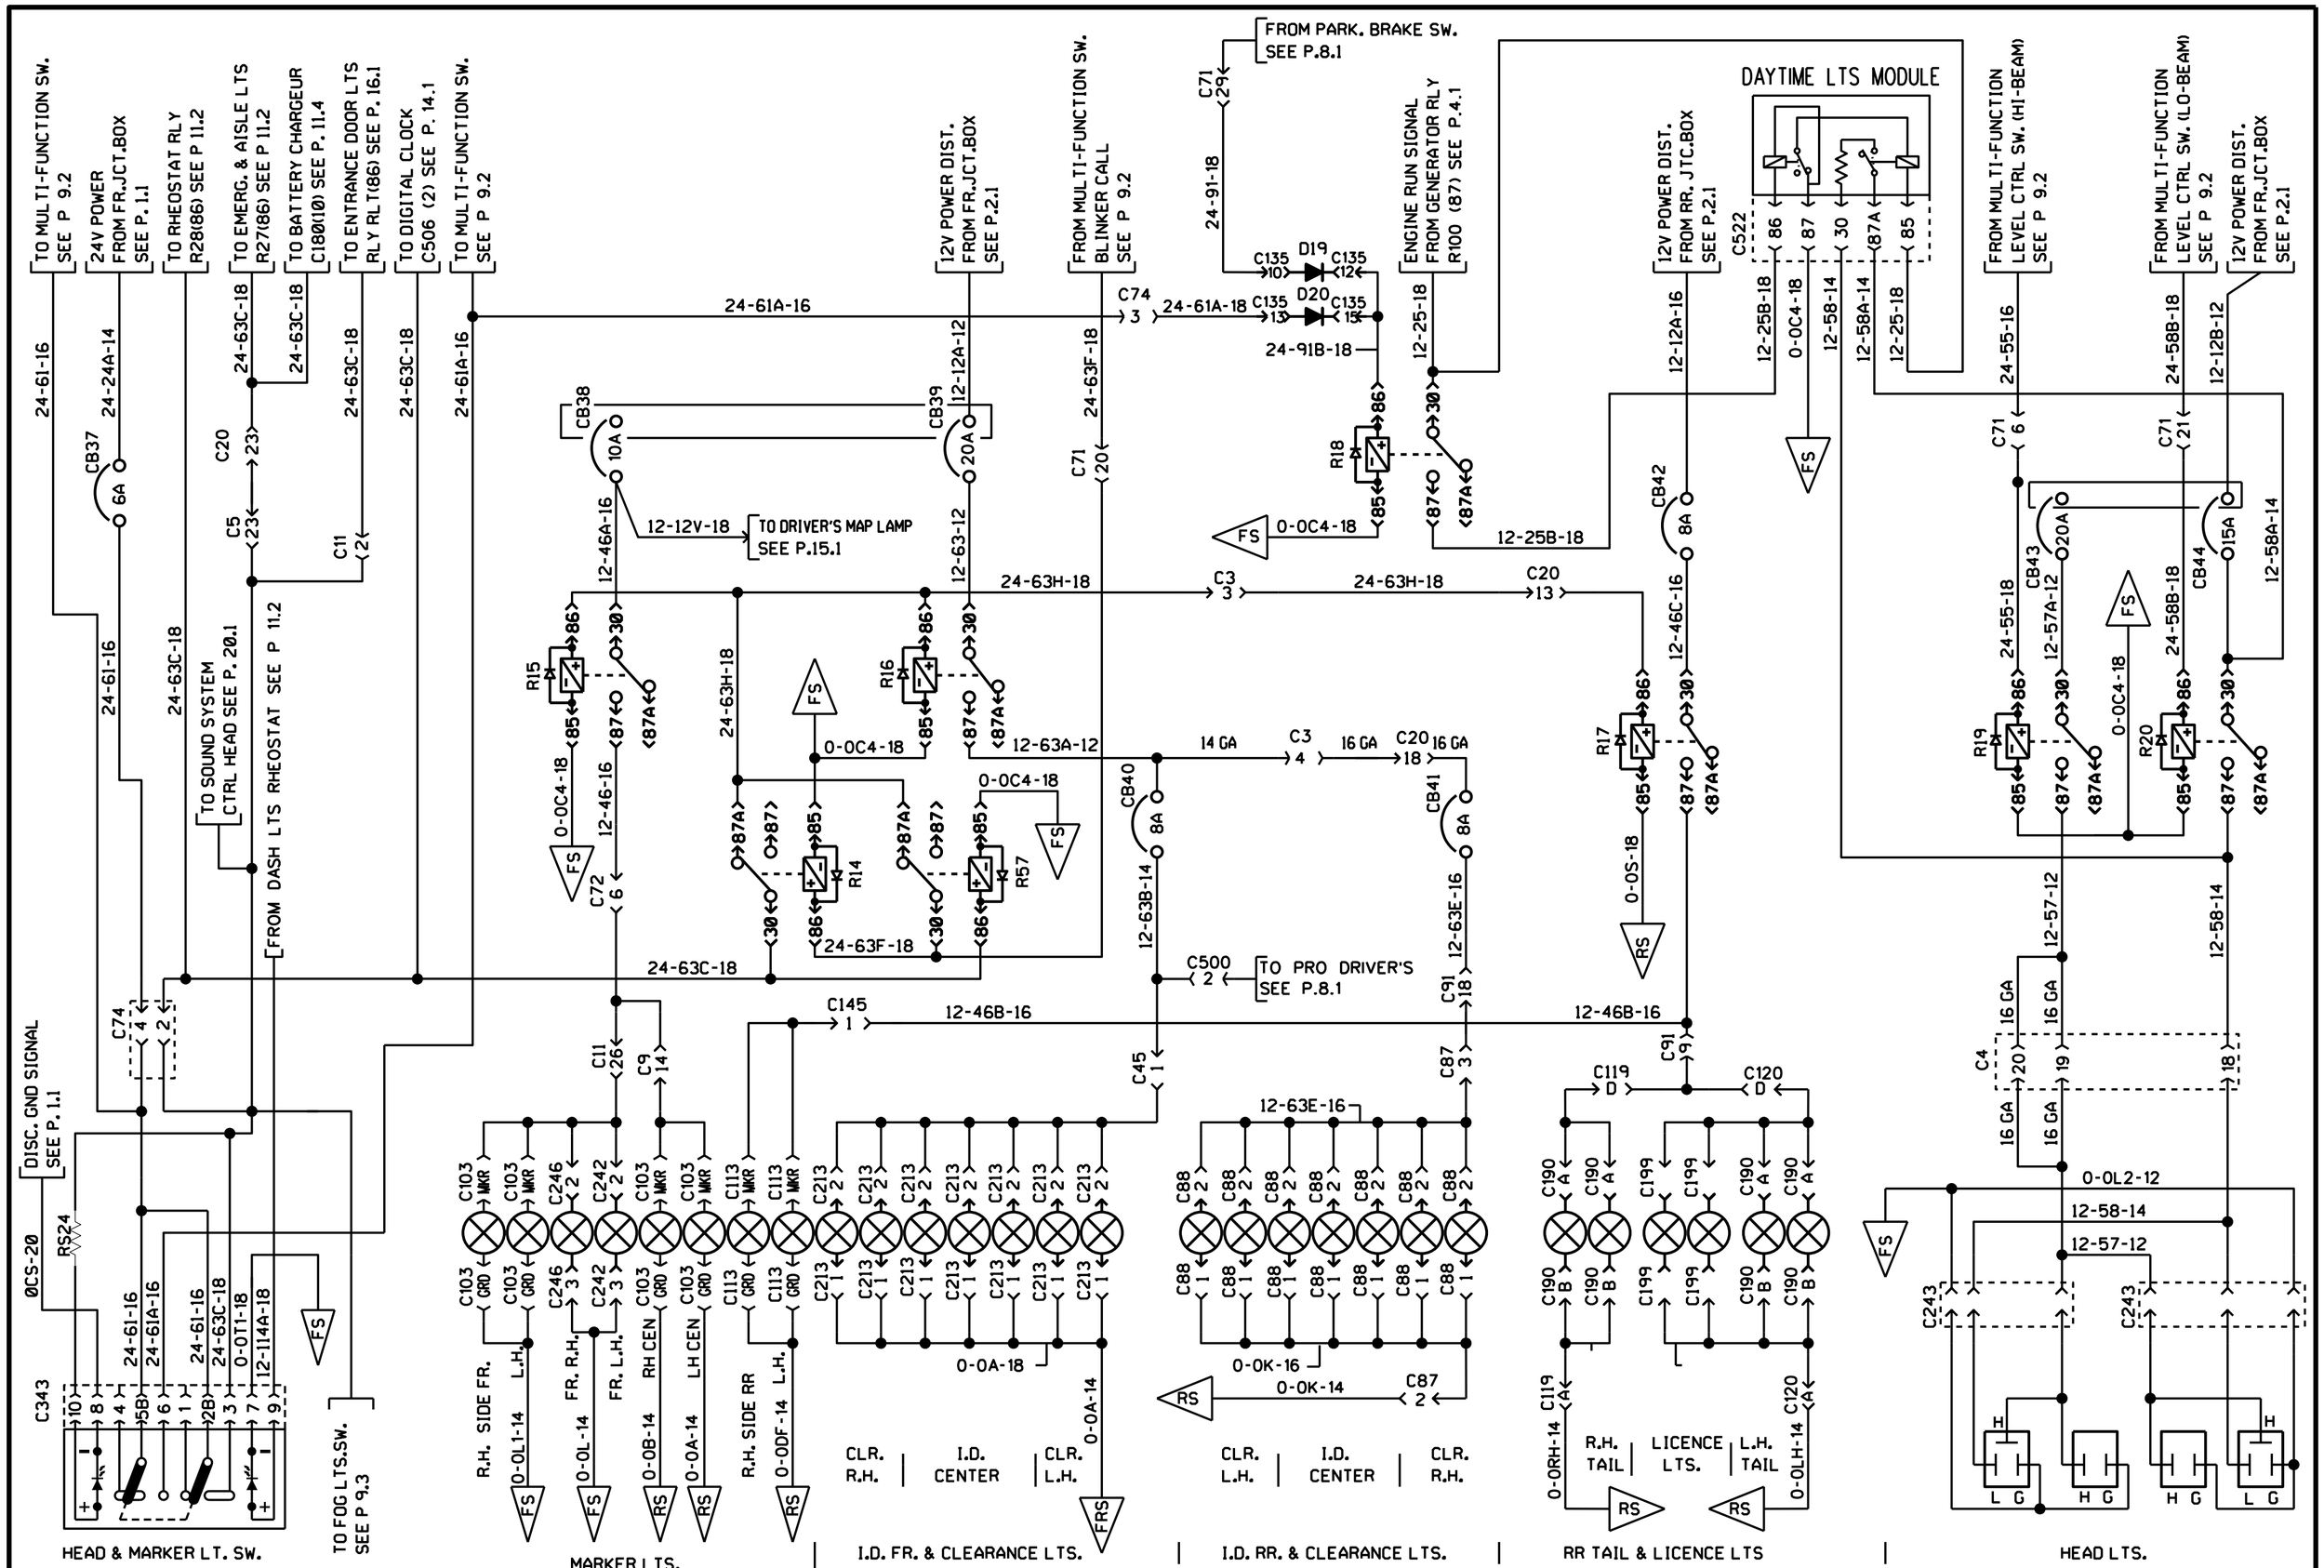
TO MULTI-FUNCTION SW. SEE P 9.2
24V POWER FROM FR.JCT.BOX SEE P. 1.1
TO RHEOSTAT RLY R28(86) SEE P 11.2
TO EMERG. & AISLE LTS R27(86) SEE P 11.2
TO BATTERY CHARGEUR C180(10) SEE P. 11.4
TO ENTRANCE DOOR LTS RLY RLT(86) SEE P. 16.1
TO DIGITAL CLOCK C506 (2) SEE P. 14.1
TO MULTI-FUNCTION SW. SEE P 9.2
12V POWER DIST. FROM FR.JCT.BOX SEE P.2.1
FROM MULTI-FUNCTION SW. BLINKER CALL SEE P 9.2
FROM PARK. BRAKE SW. SEE P.8.1
ENGINE RUN SIGNAL FROM GENERATOR RLY R100 (87) SEE P. 4.1
12V POWER DIST. FROM RR. JTC.BOX SEE P.2.1
DAYTIME LTS MODULE
FROM MULTI-FUNCTION LEVEL CTRL SW. (HI-BEAM) SEE P 9.2
FROM MULTI-FUNCTION LEVEL CTRL SW. (LO-BEAM) SEE P 9.2
12V POWER DIST. FROM FR.JCT.BOX SEE P.2.1
TO SOUND SYSTEM CTRL HEAD SEE P. 20.1
FROM DASH LTS RHEOSTAT SEE P 11.2
TO DRIVER'S MAP LAMP SEE P.15.1
TO PRO DRIVER'S SEE P.8.1
DISC. GND SIGNAL SEE P. 1.1
TO FOG LTS.SW. SEE P 9.3
HEAD & MARKER LT. SW.
MARKER LTS.
I.D. FR. & CLEARANCE LTS.
I.D. RR. & CLEARANCE LTS.
RR TAIL & LICENCE LTS
HEAD LTS.
EXTERIOR LIGHTING

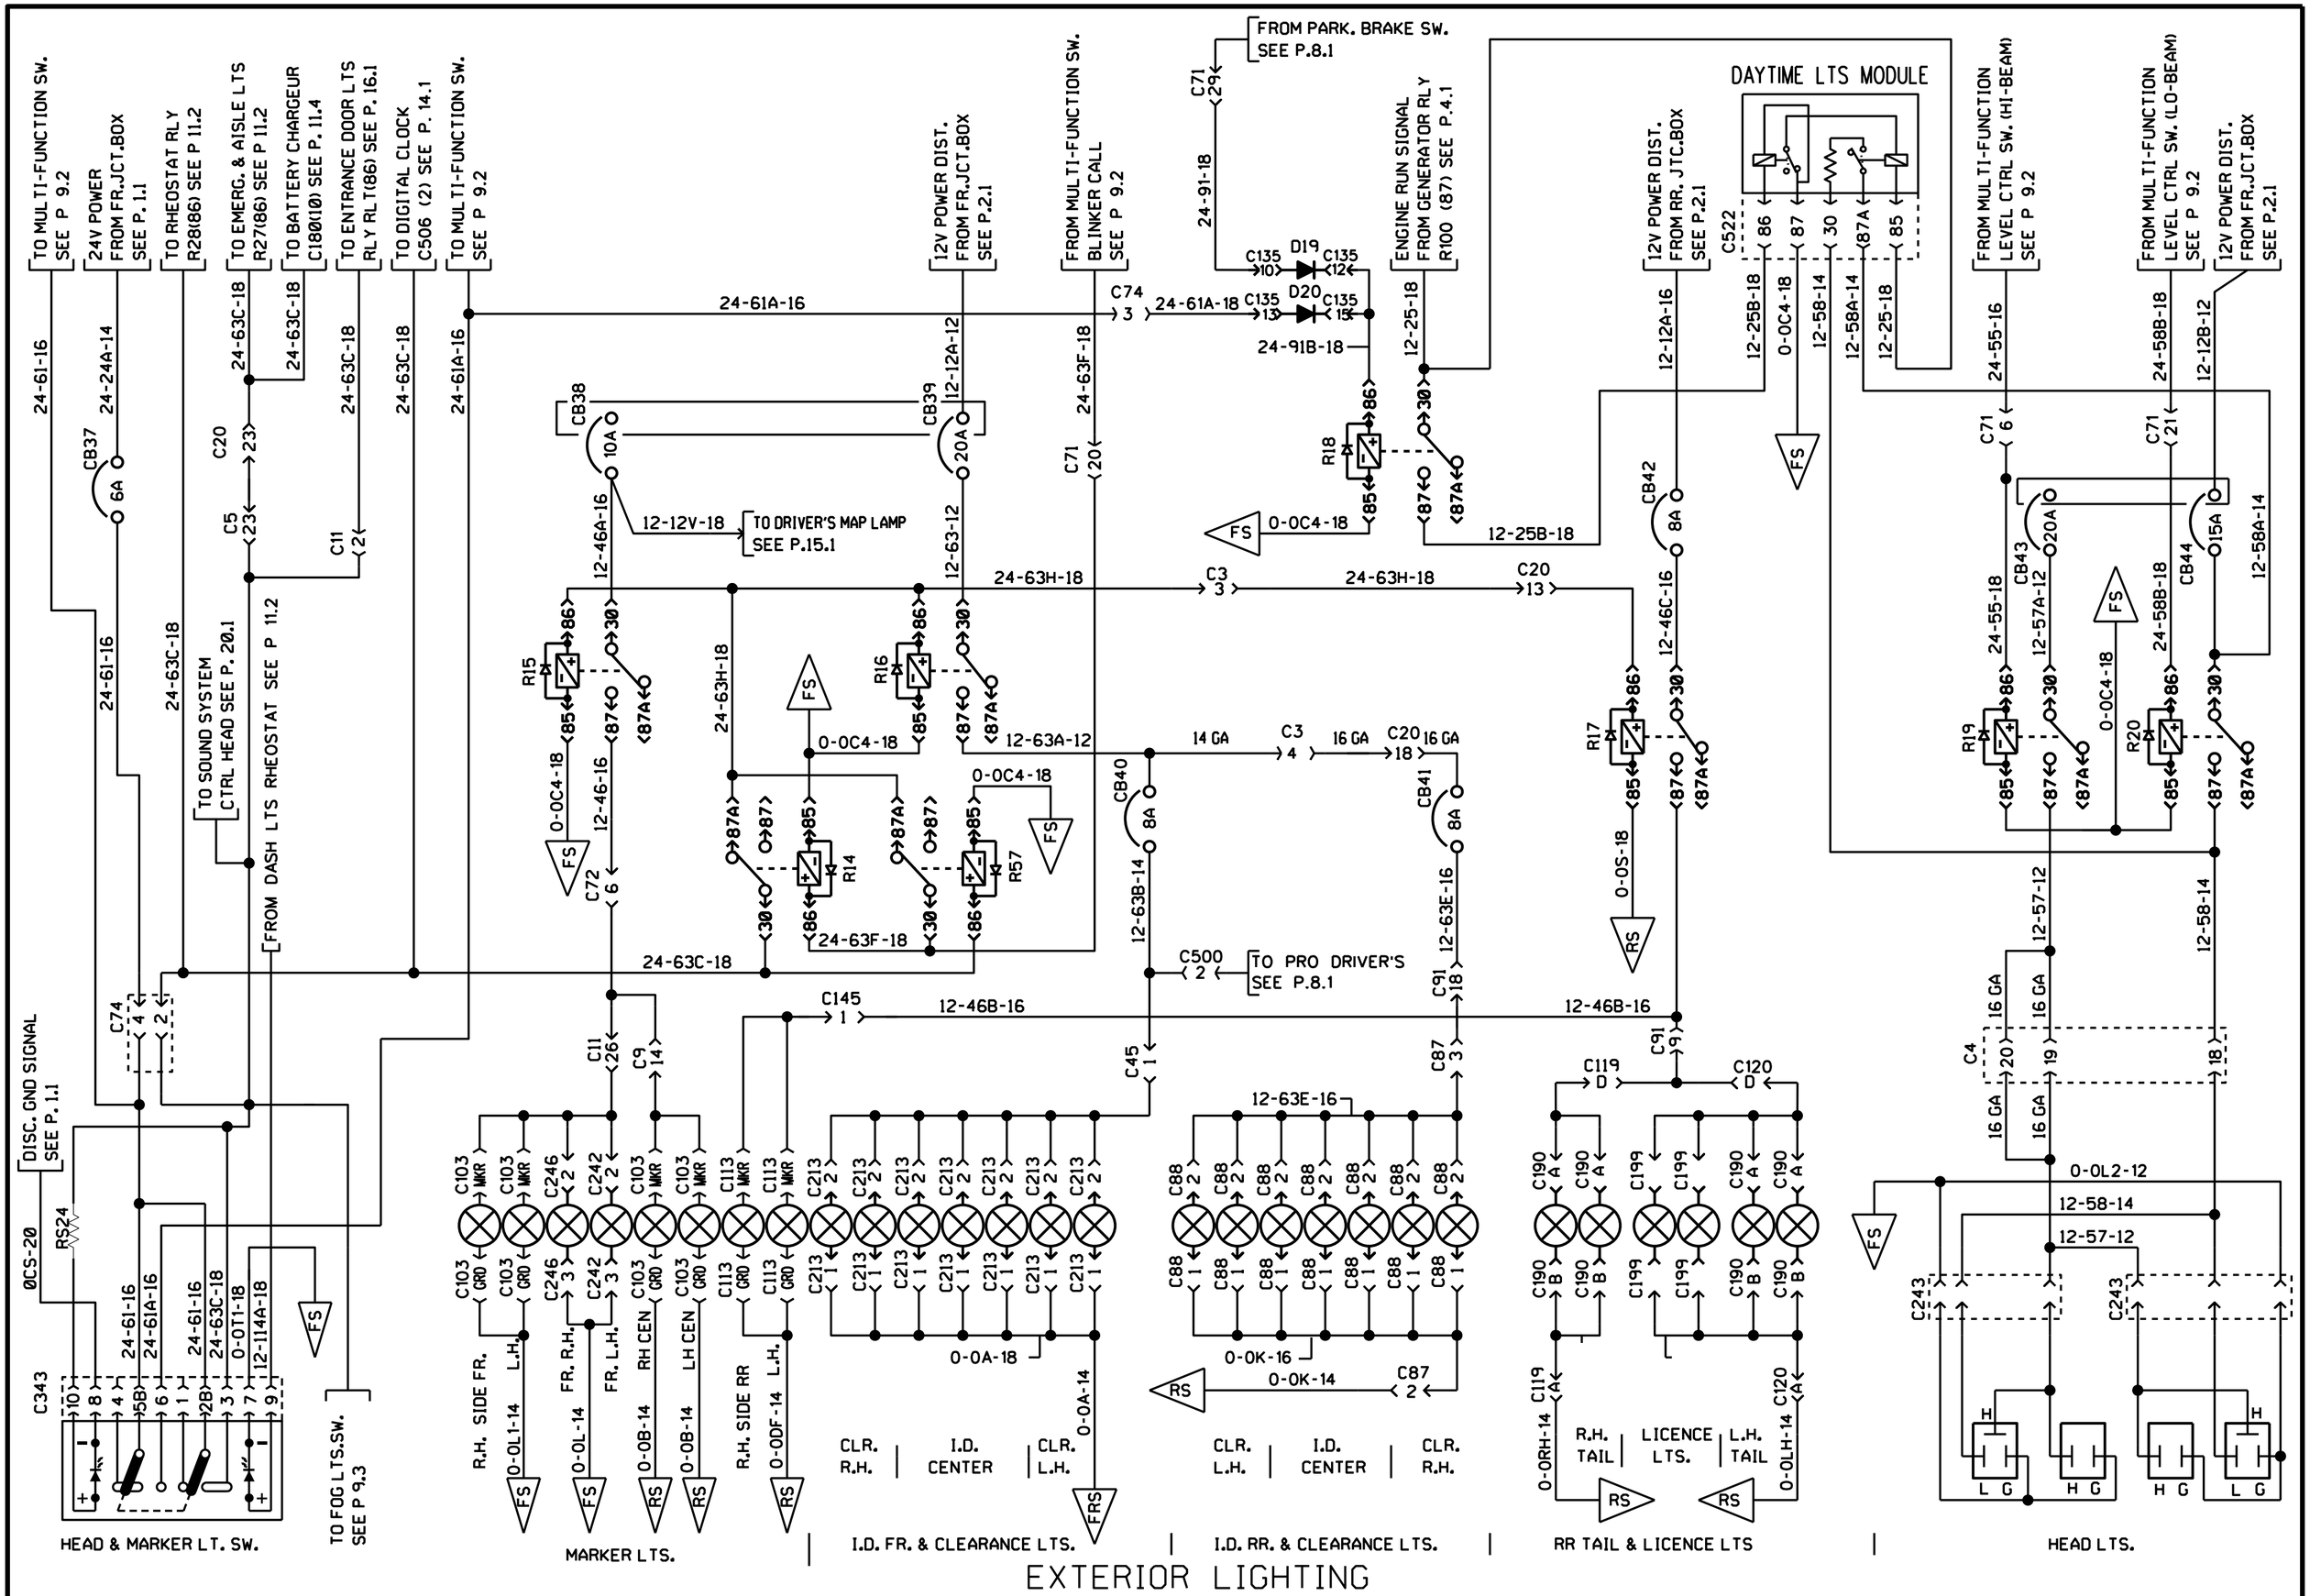

EXTERIOR LIGHTING

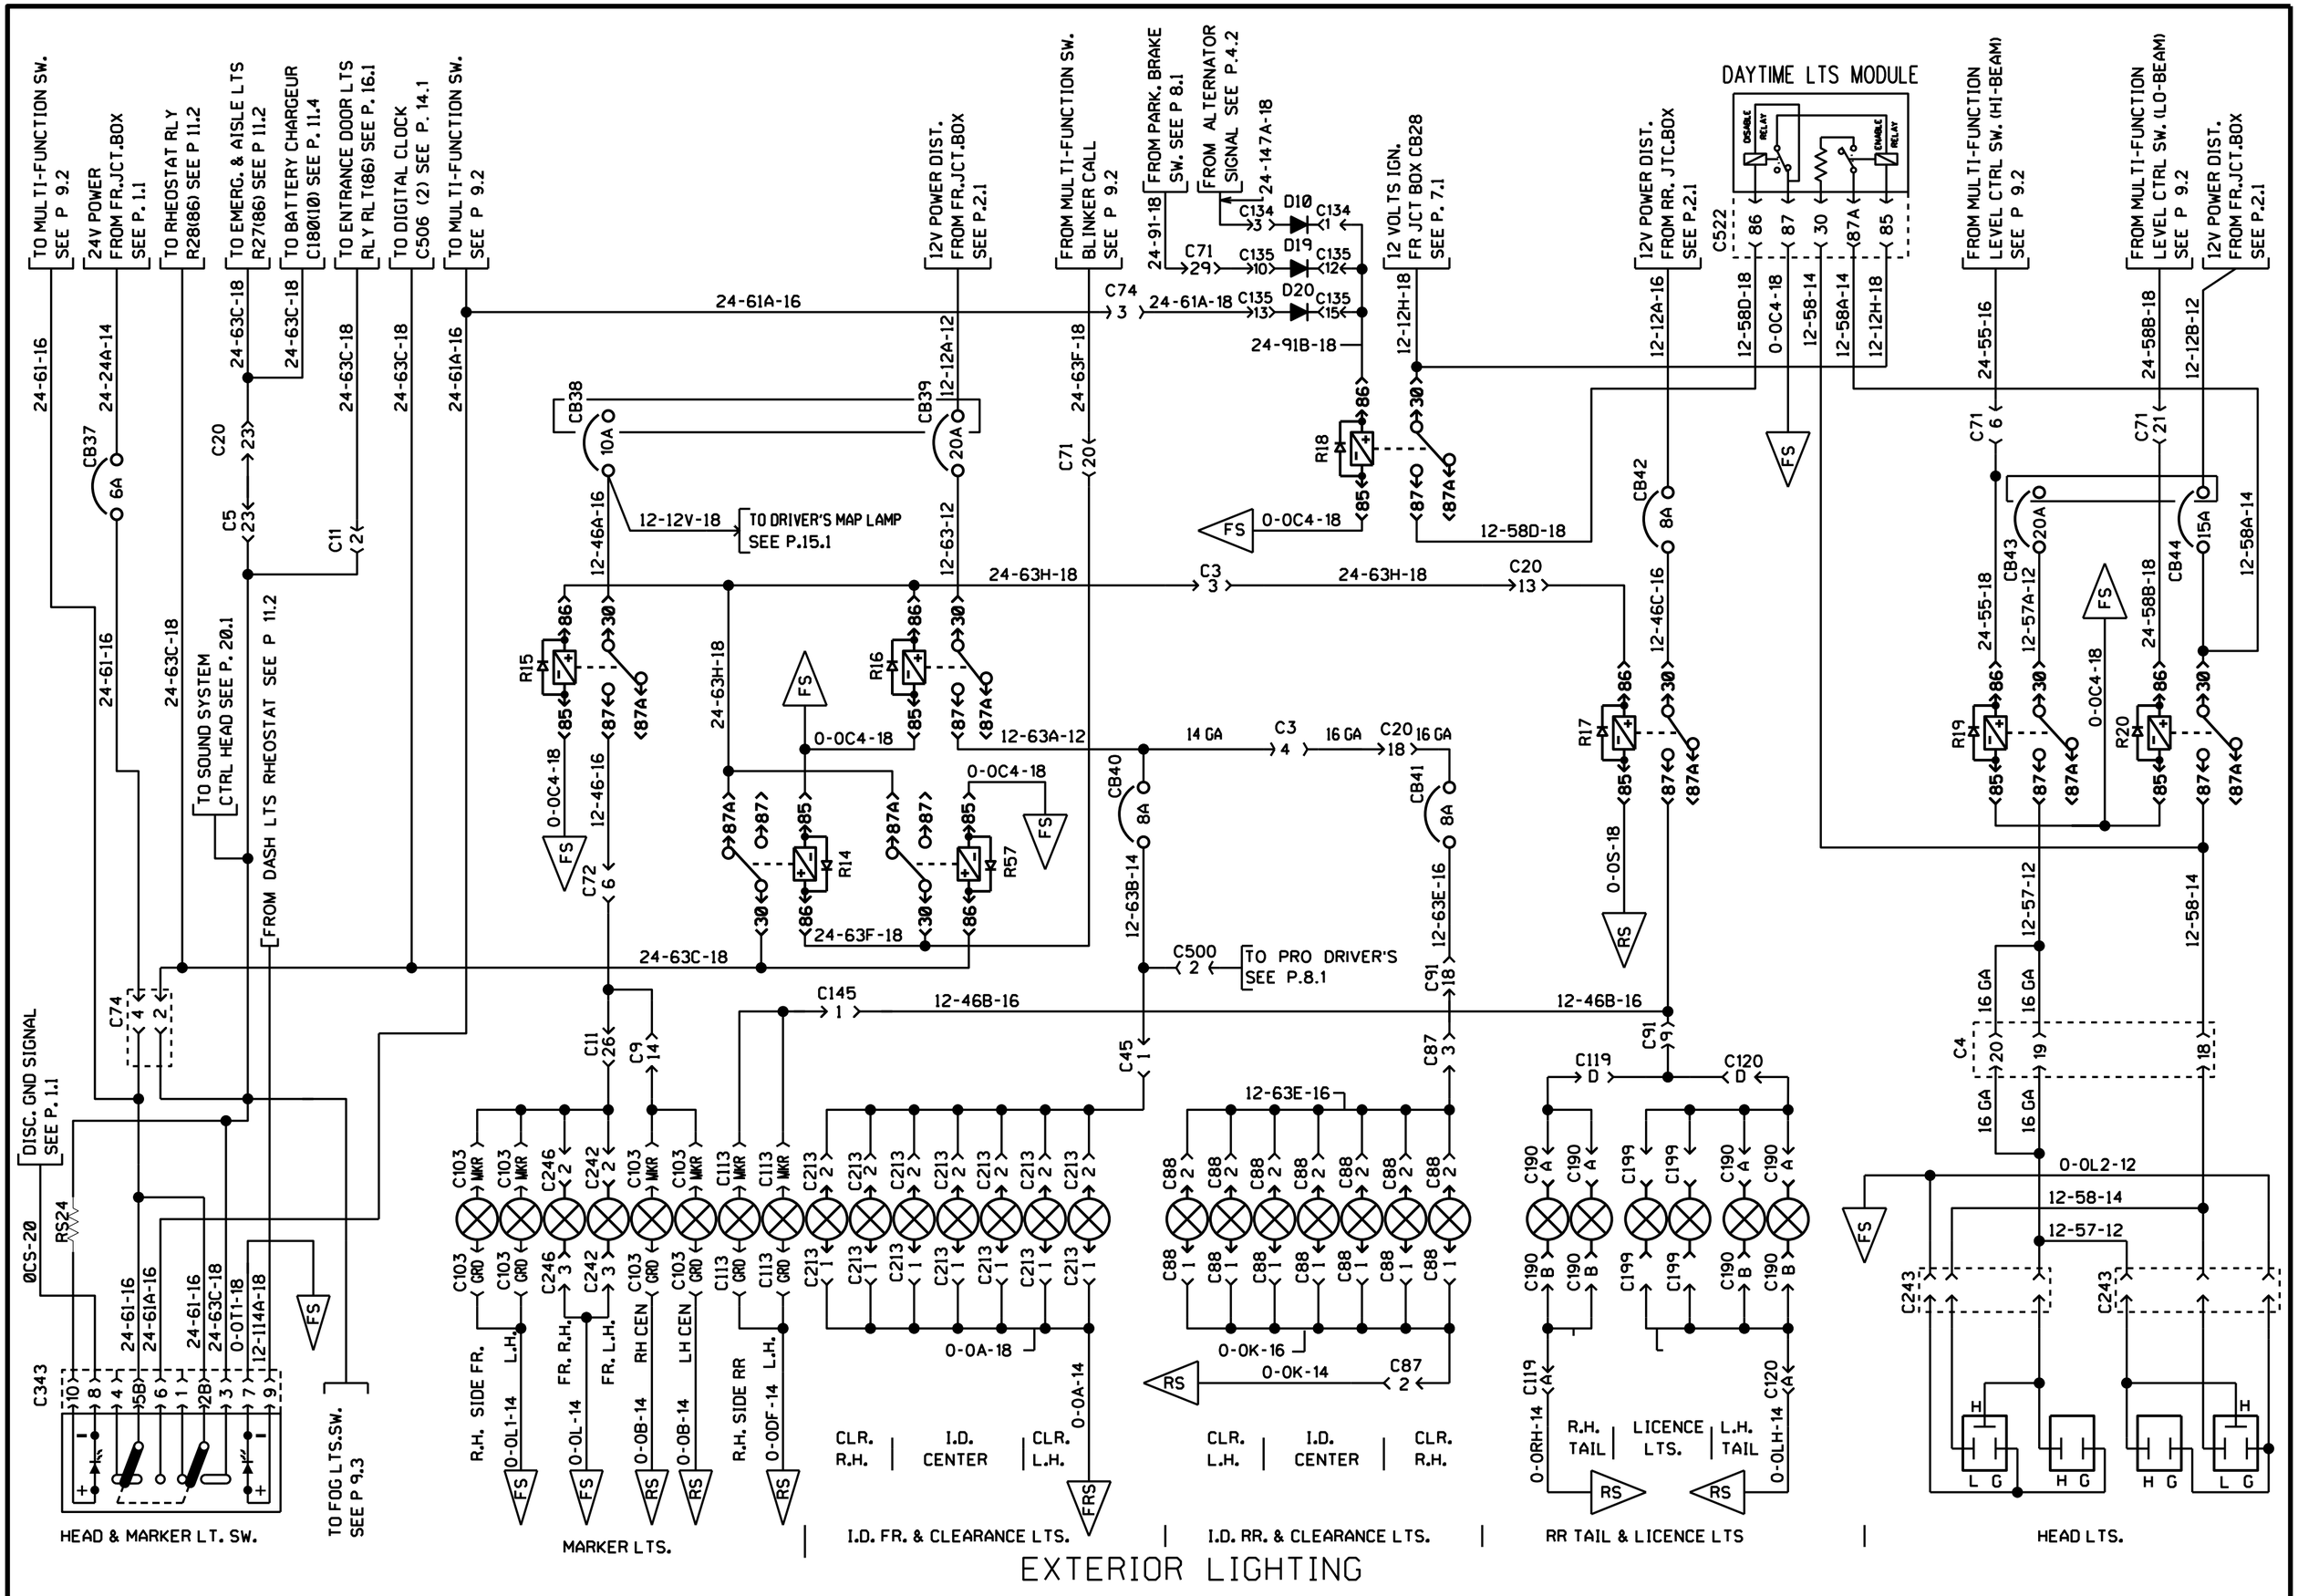
TO MULTI-FUNCTION SW. SEE P 9.2
24V POWER FROM FR.JCT.BOX SEE P. 1.1
TO RHEOSTAT RLY R28(86) SEE P 11.2
TO EMERG. & AISLE LTS R27(86) SEE P 11.2
TO BATTERY CHARGEUR C180(10) SEE P. 11.4
TO ENTRANCE DOOR LTS RLY RLT(86) SEE P. 16.1
TO DIGITAL CLOCK C506 (2) SEE P. 14.1
TO MULTI-FUNCTION SW. SEE P 9.2
12V POWER DIST. FROM FR.JCT.BOX SEE P.2.1
FROM MULTI-FUNCTION SW. BLINKER CALL SEE P 9.2
FROM PARK. BRAKE SW. SEE P 8.1
FROM ALTERNATOR SIGNAL SEE P. 4.2
12 VOLTS IGN. FR JCT BOX CB28 SEE P. 7.1
12V POWER DIST. FROM RR. JTC.BOX SEE P.2.1
DAYTIME LTS MODULE
FROM MULTI-FUNCTION LEVEL CTRL SW. (HI-BEAM) SEE P 9.2
FROM MULTI-FUNCTION LEVEL CTRL SW. (LO-BEAM) SEE P 9.2
12V POWER DIST. FROM FR.JCT.BOX SEE P.2.1
TO SOUND SYSTEM CTRL HEAD SEE P. 20.1
FROM DASH LTS RHEOSTAT SEE P 11.2
TO DRIVER'S MAP LAMP SEE P.15.1
TO PRO DRIVER'S SEE P.8.1
DISC. GND SIGNAL SEE P. 1.1
TO FOG LTS.SW. SEE P 9.3
HEAD & MARKER LT. SW.
MARKER LTS.
I.D. FR. & CLEARANCE LTS.
I.D. RR. & CLEARANCE LTS.
RR TAIL & LICENCE LTS
HEAD LTS.
R.H. SIDE FR.
FR. R.H.
FR. L.H.
R.H. SIDE RR
RH CEN
LH CEN
CLR. R.H.
I.D. CENTER
CLR. L.H.
R.H. TAIL
LICENCE LTS.
L.H. TAIL
EXTERIOR LIGHTING

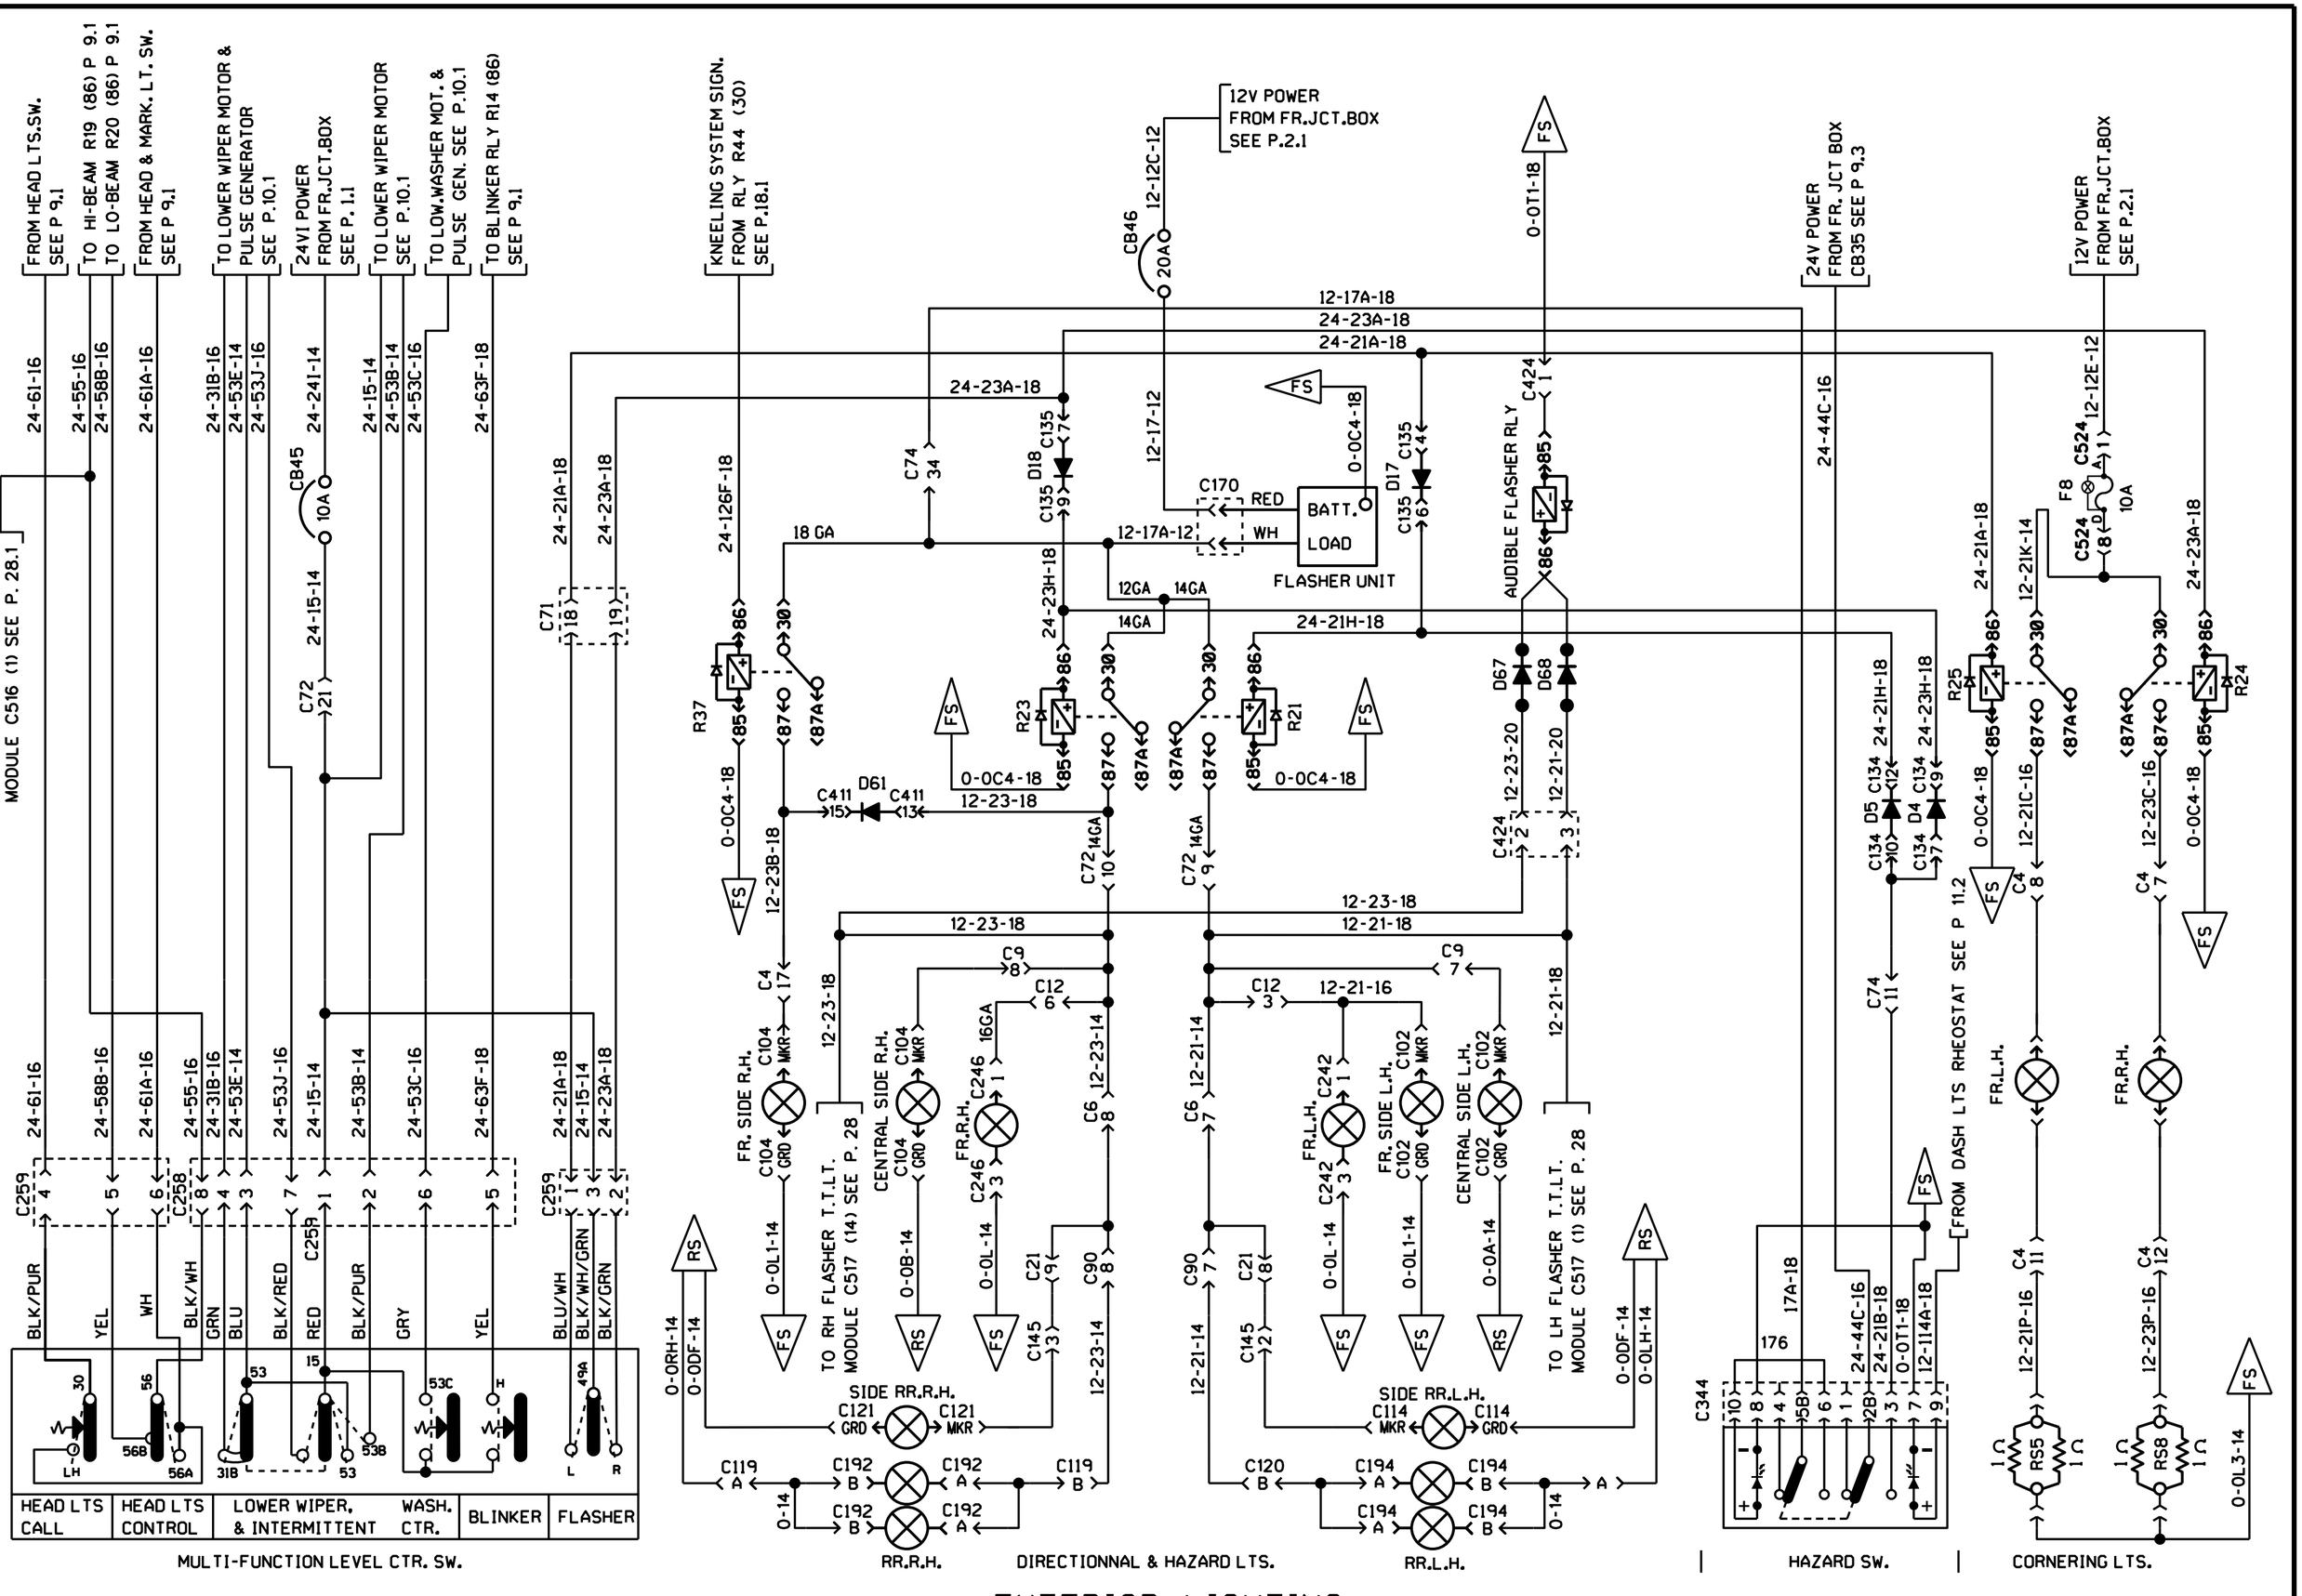

EXTERIOR LIGHTING

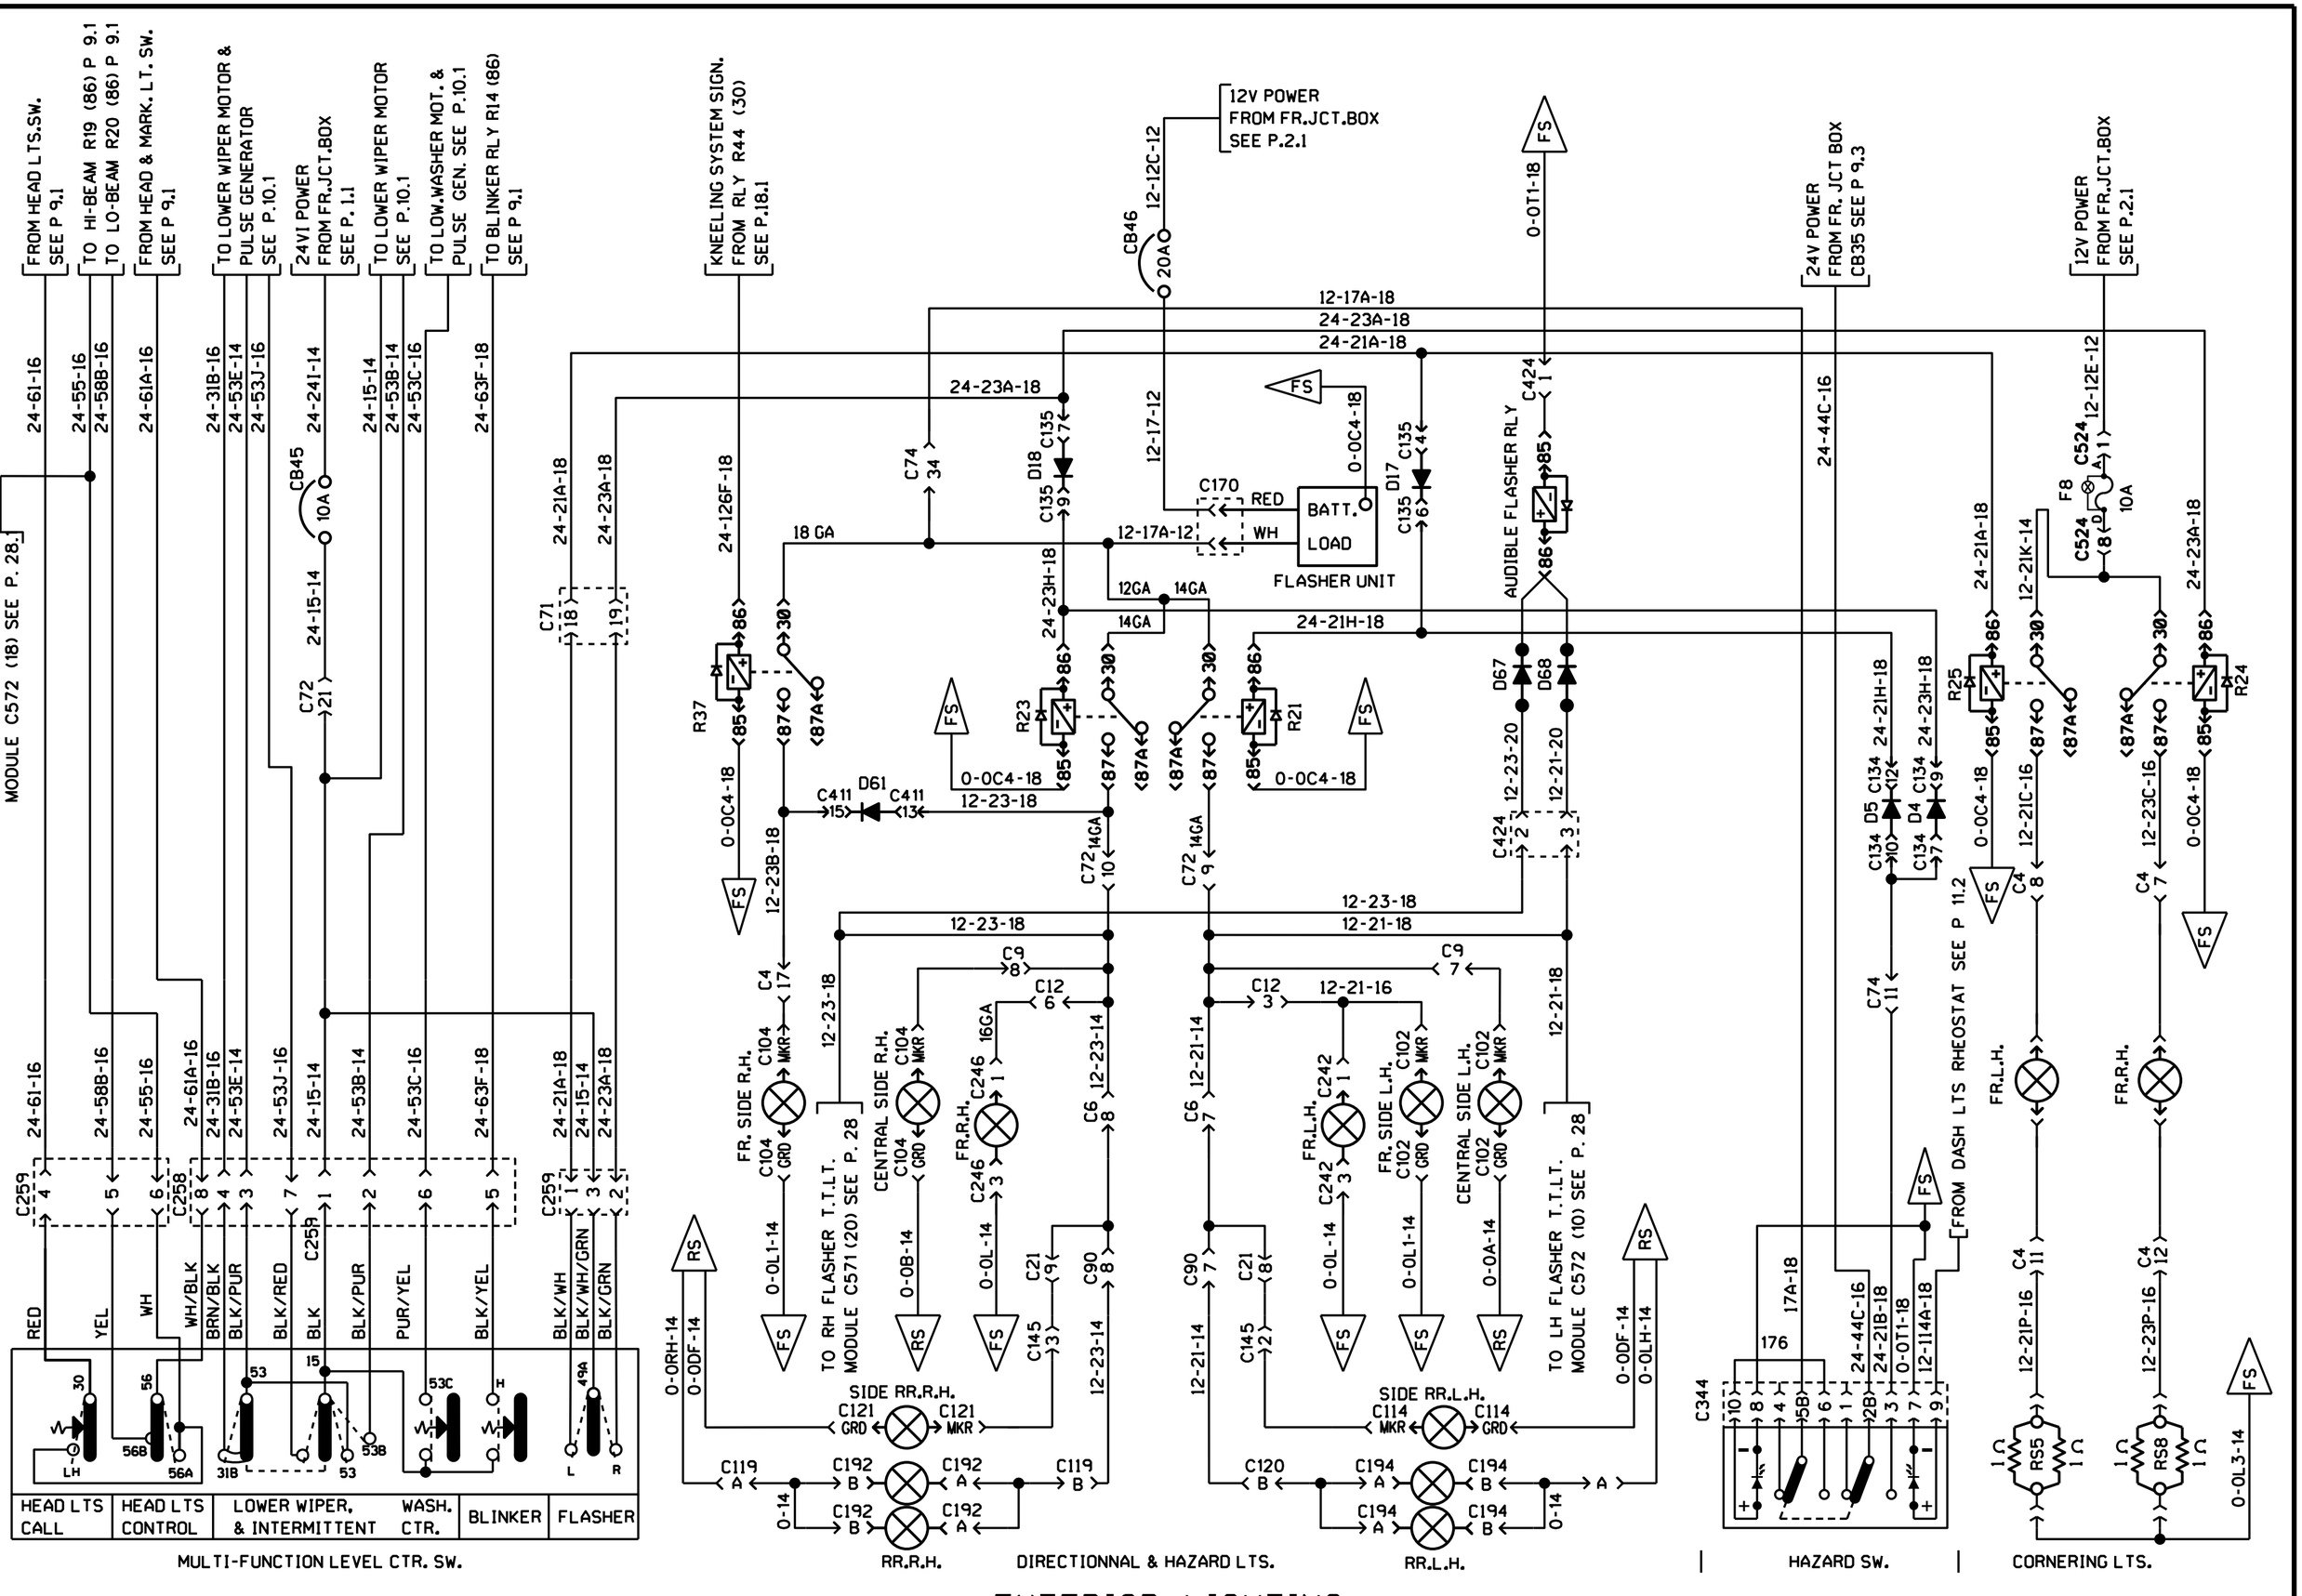

EXTERIOR LIGHTING

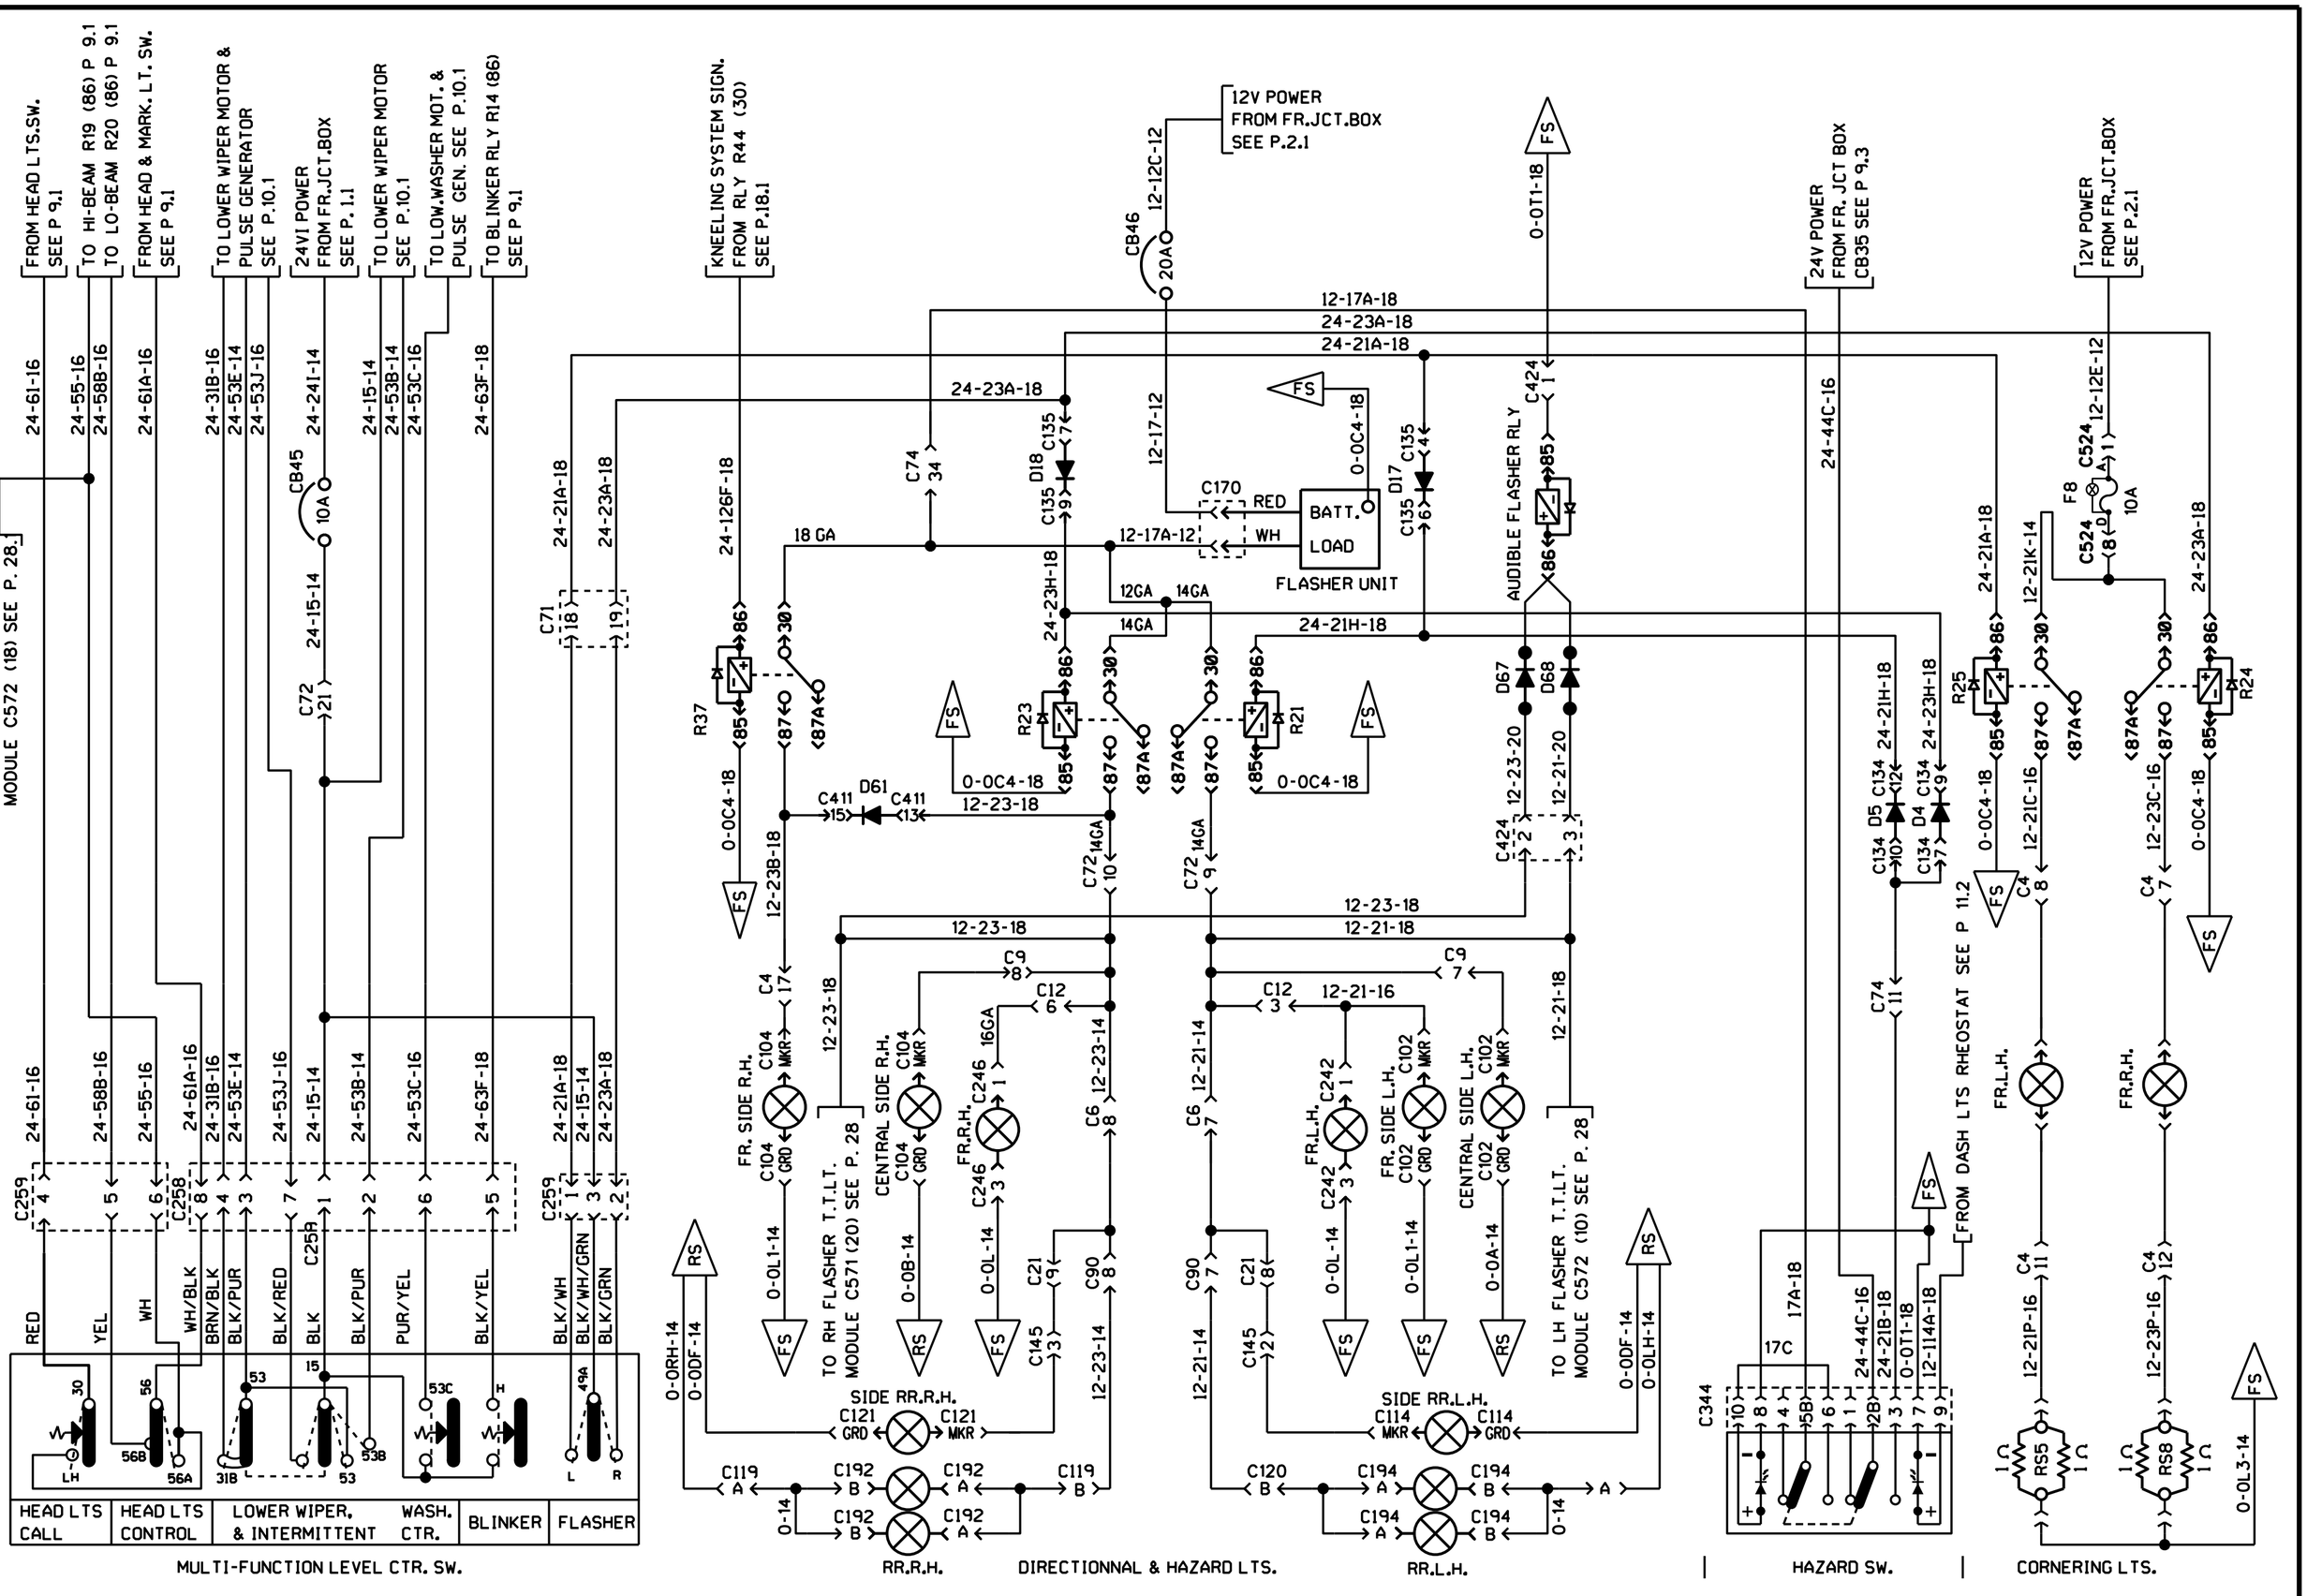

EXTERIOR LIGHTING

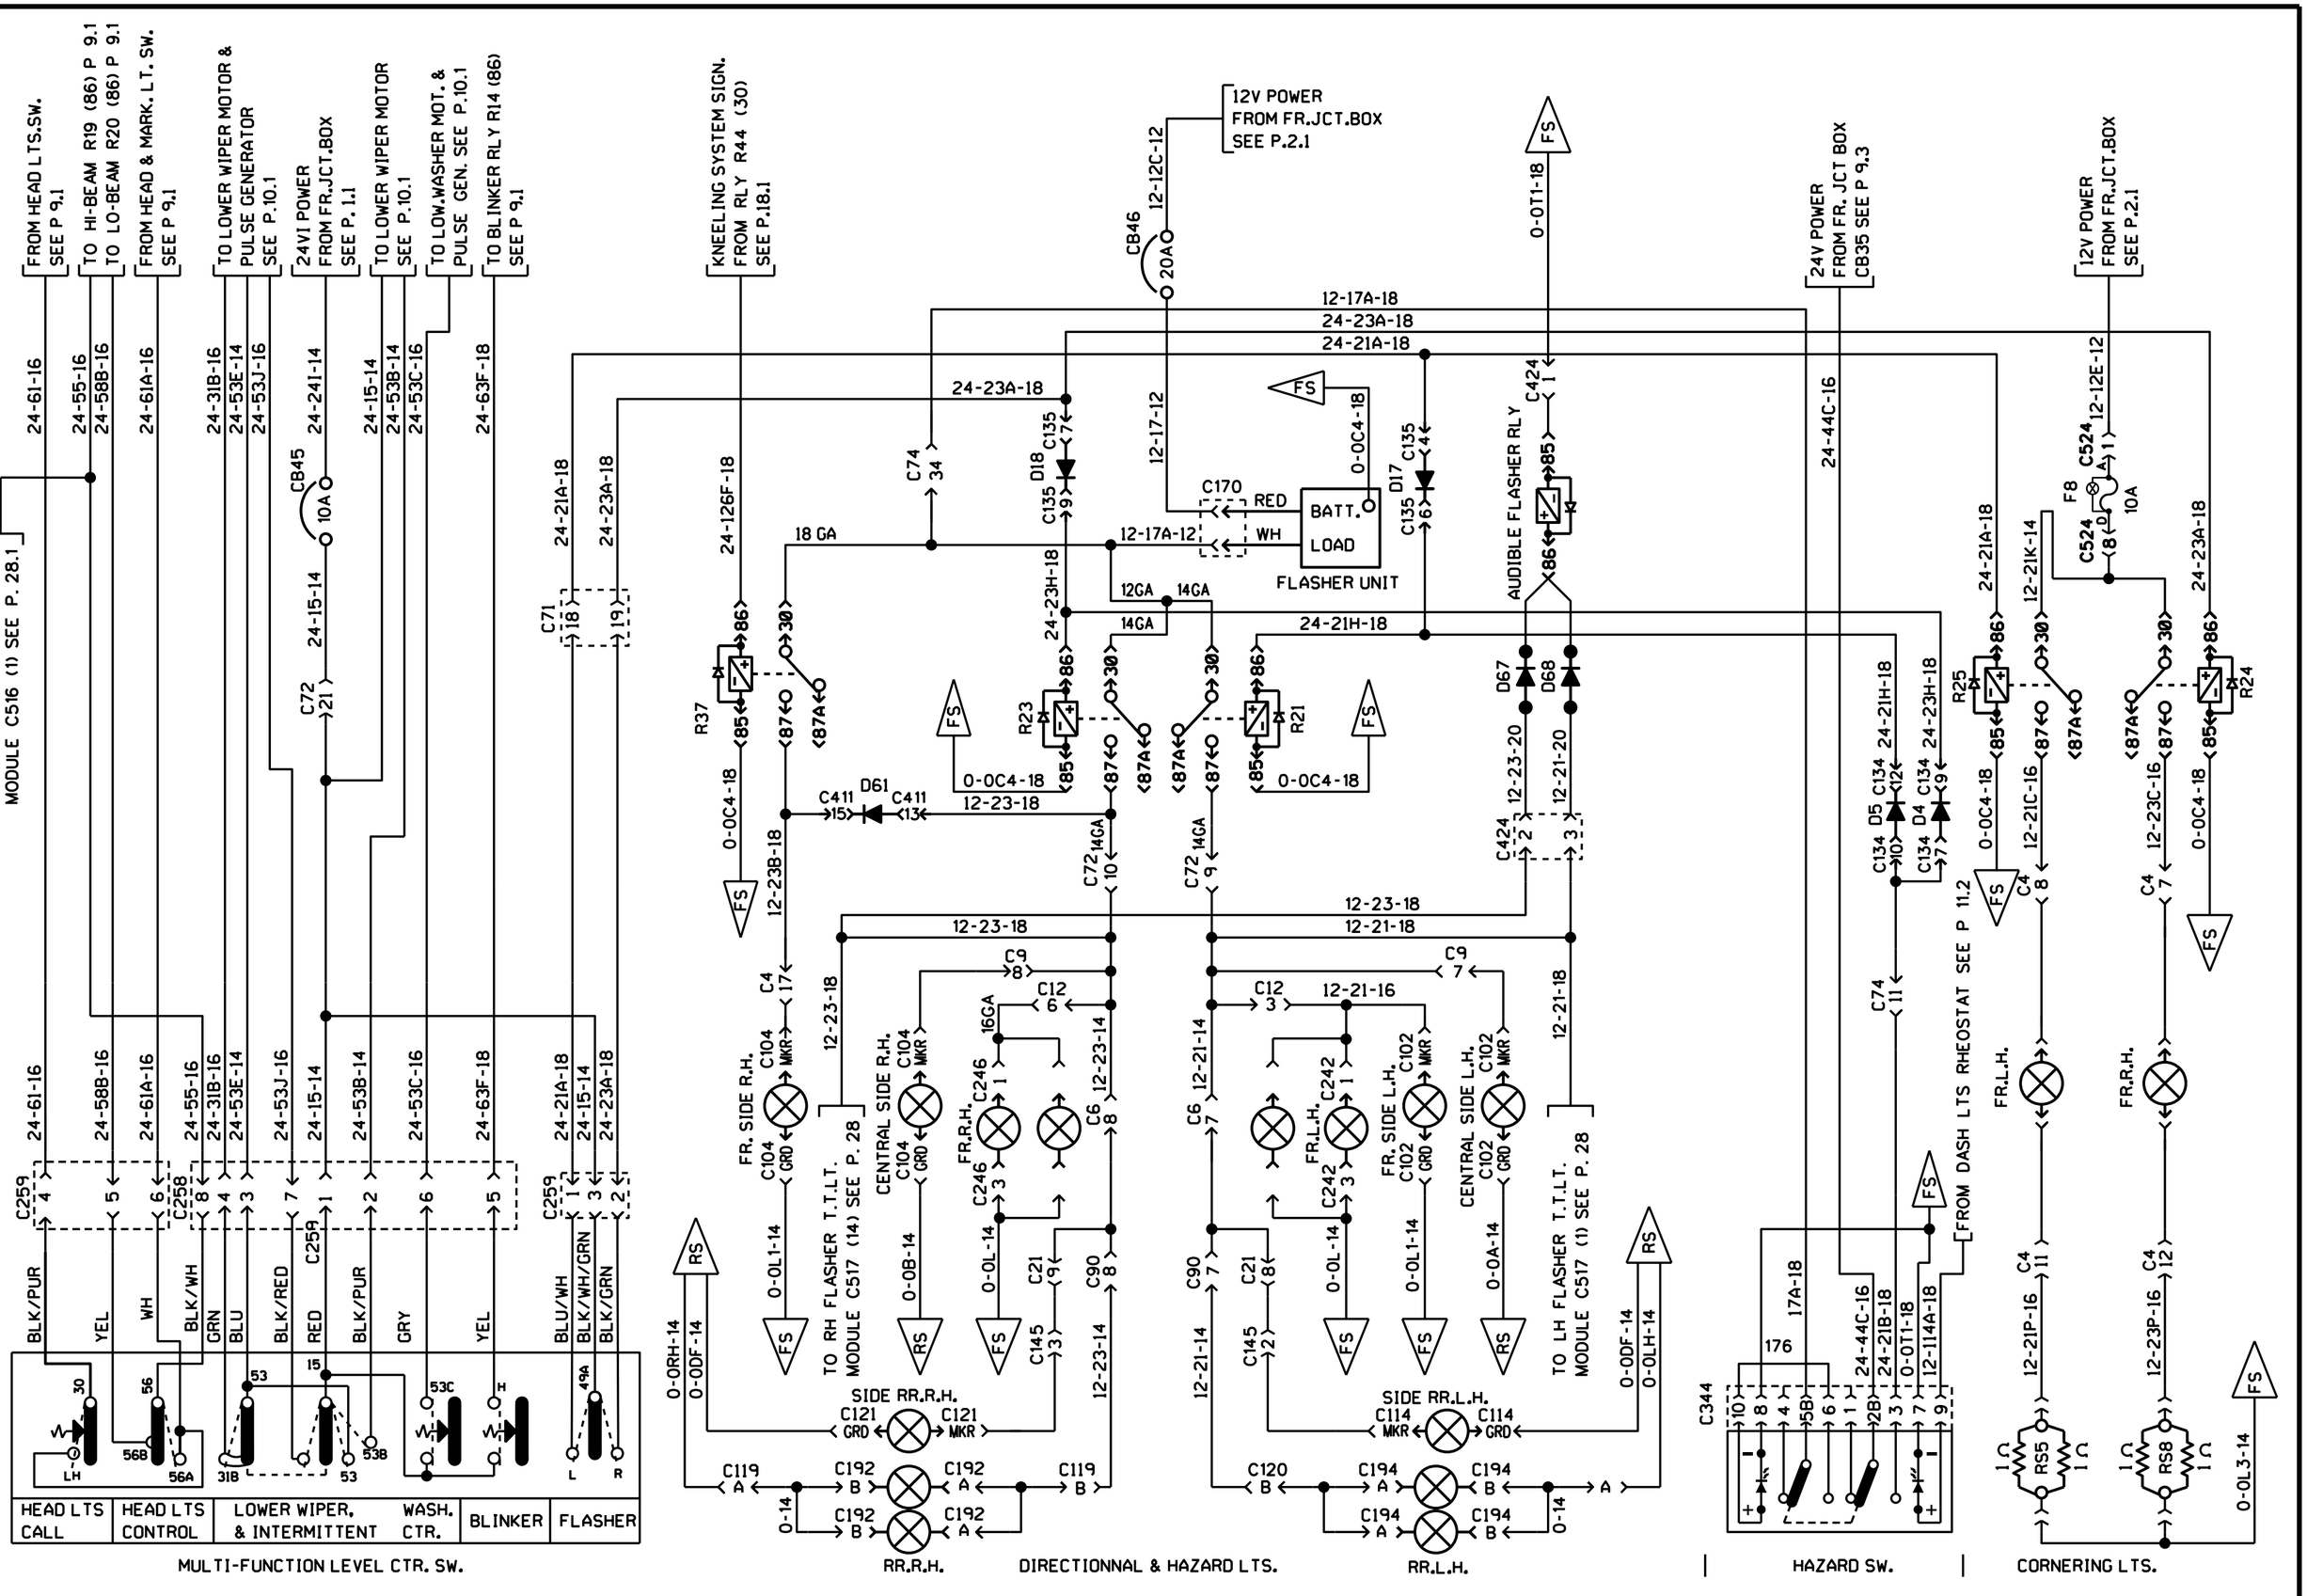

EXTERIOR LIGHTING

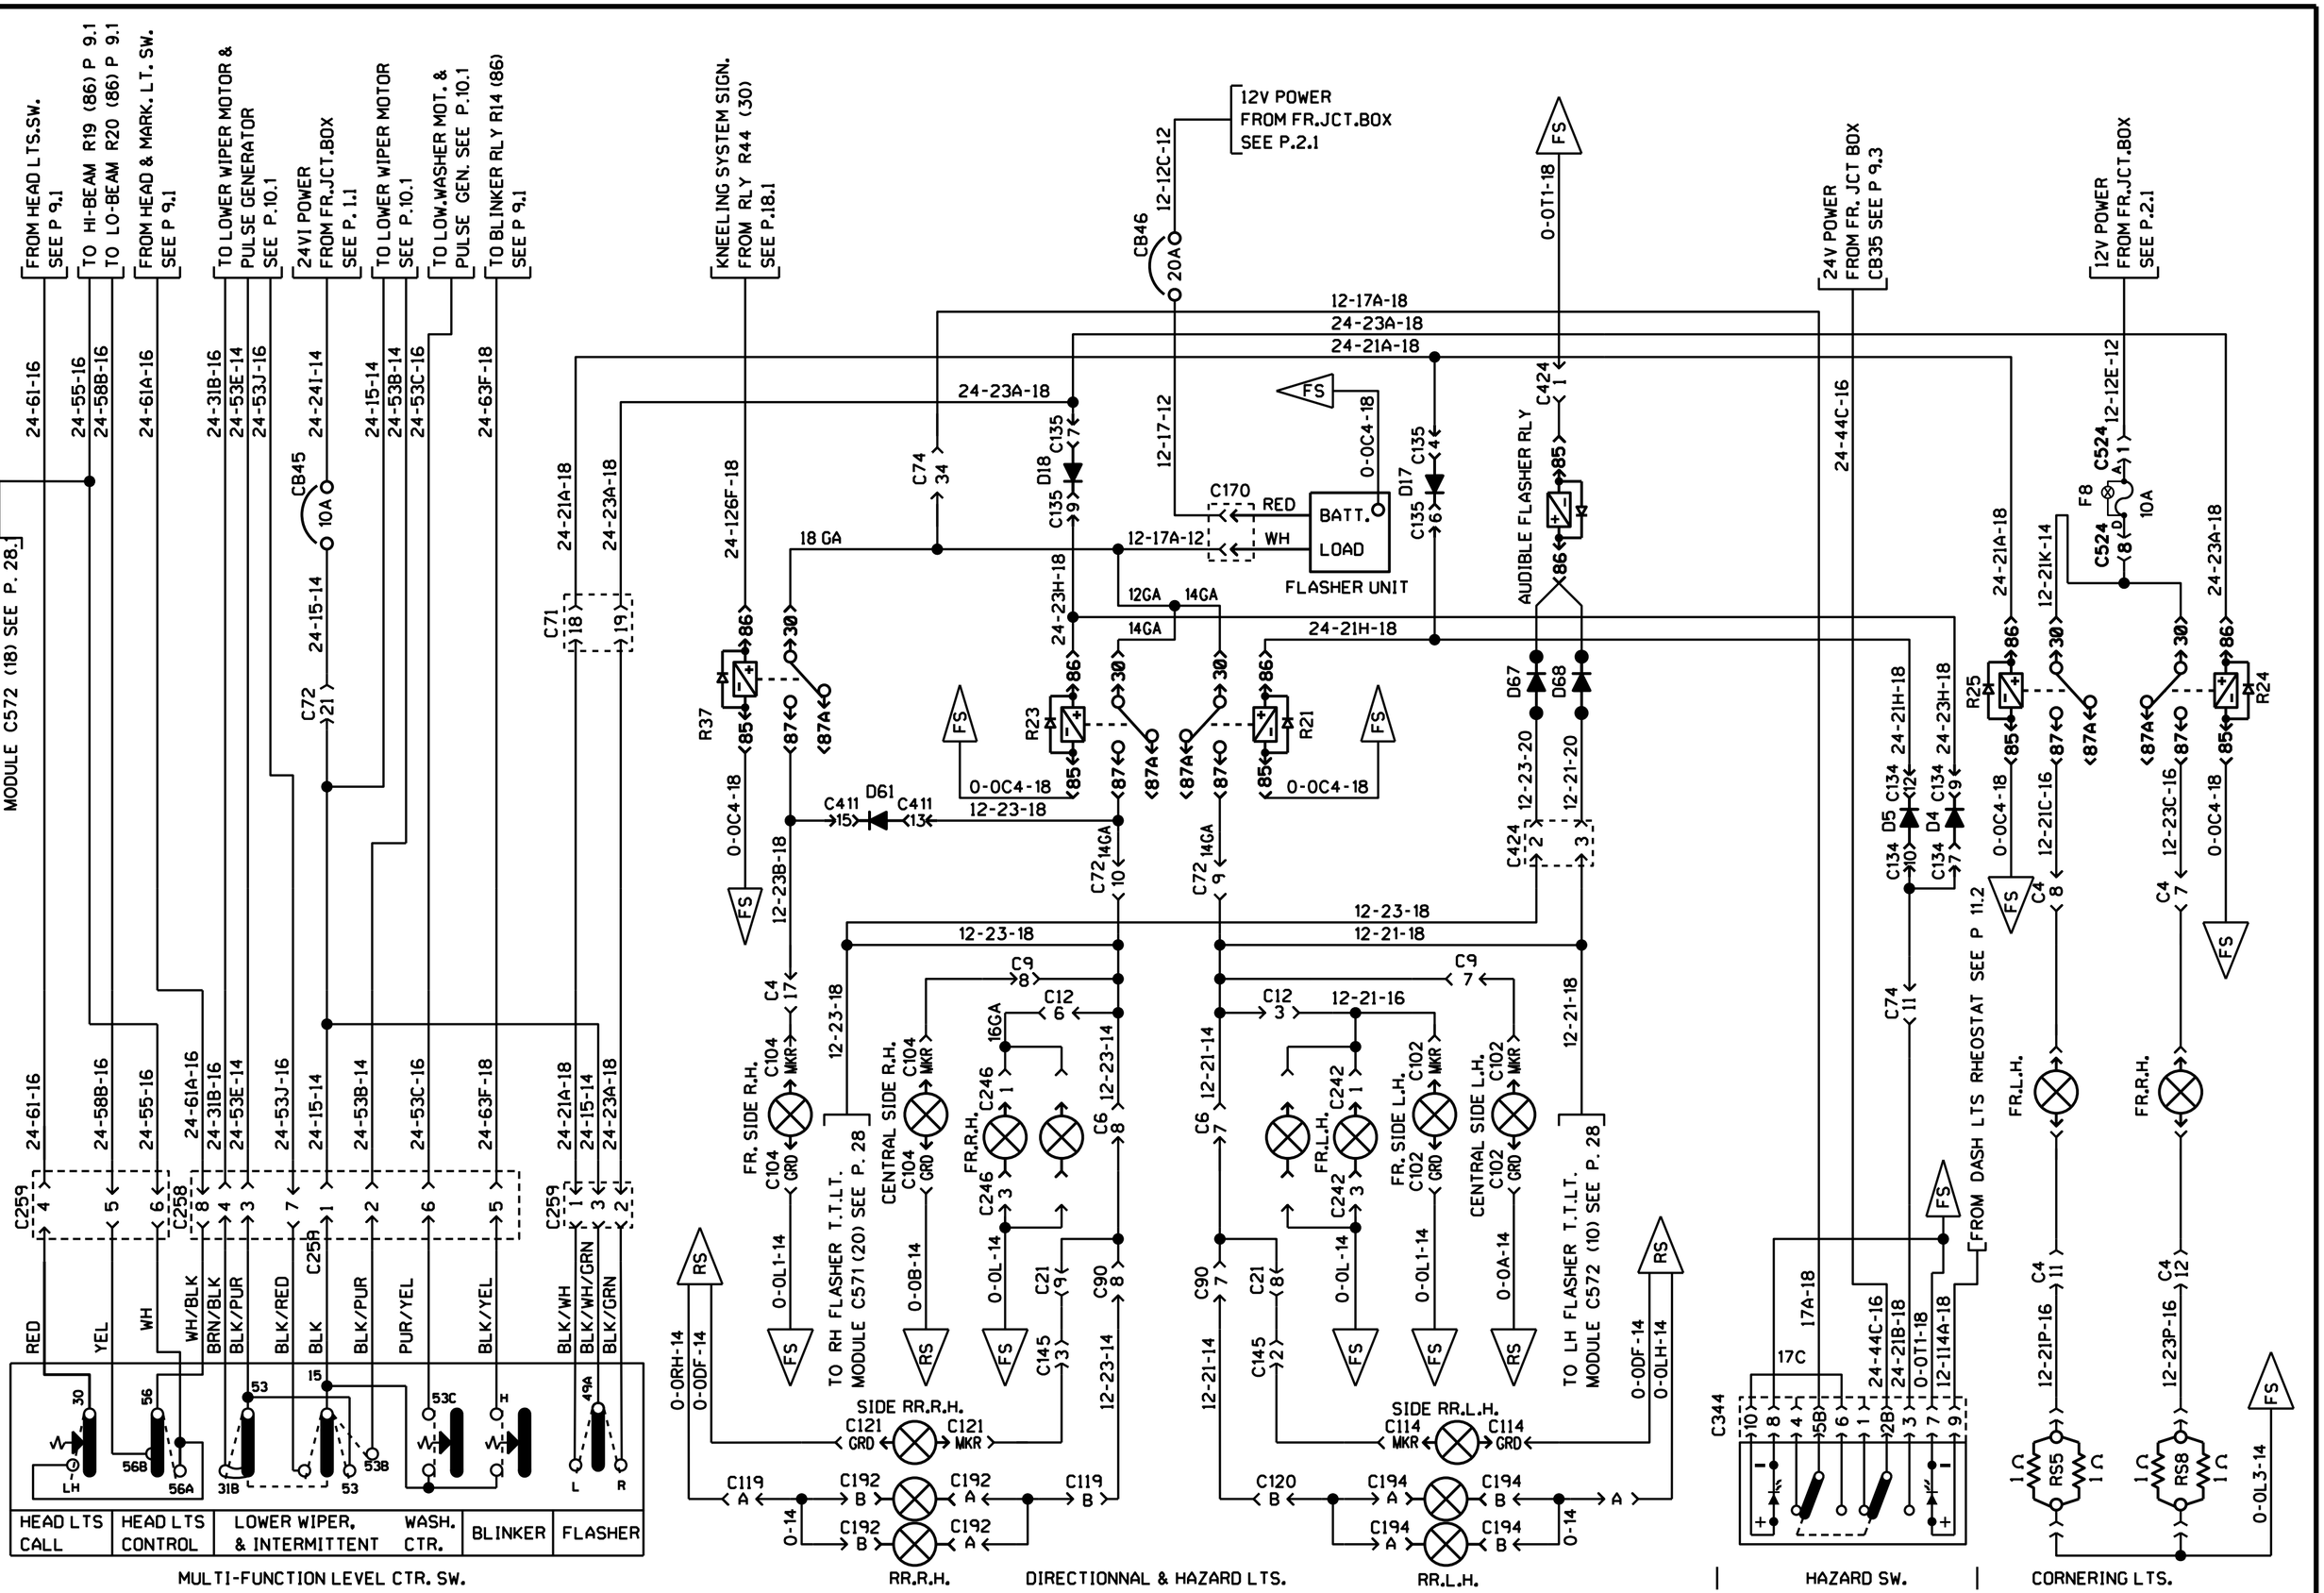

EXTERIOR LIGHTING

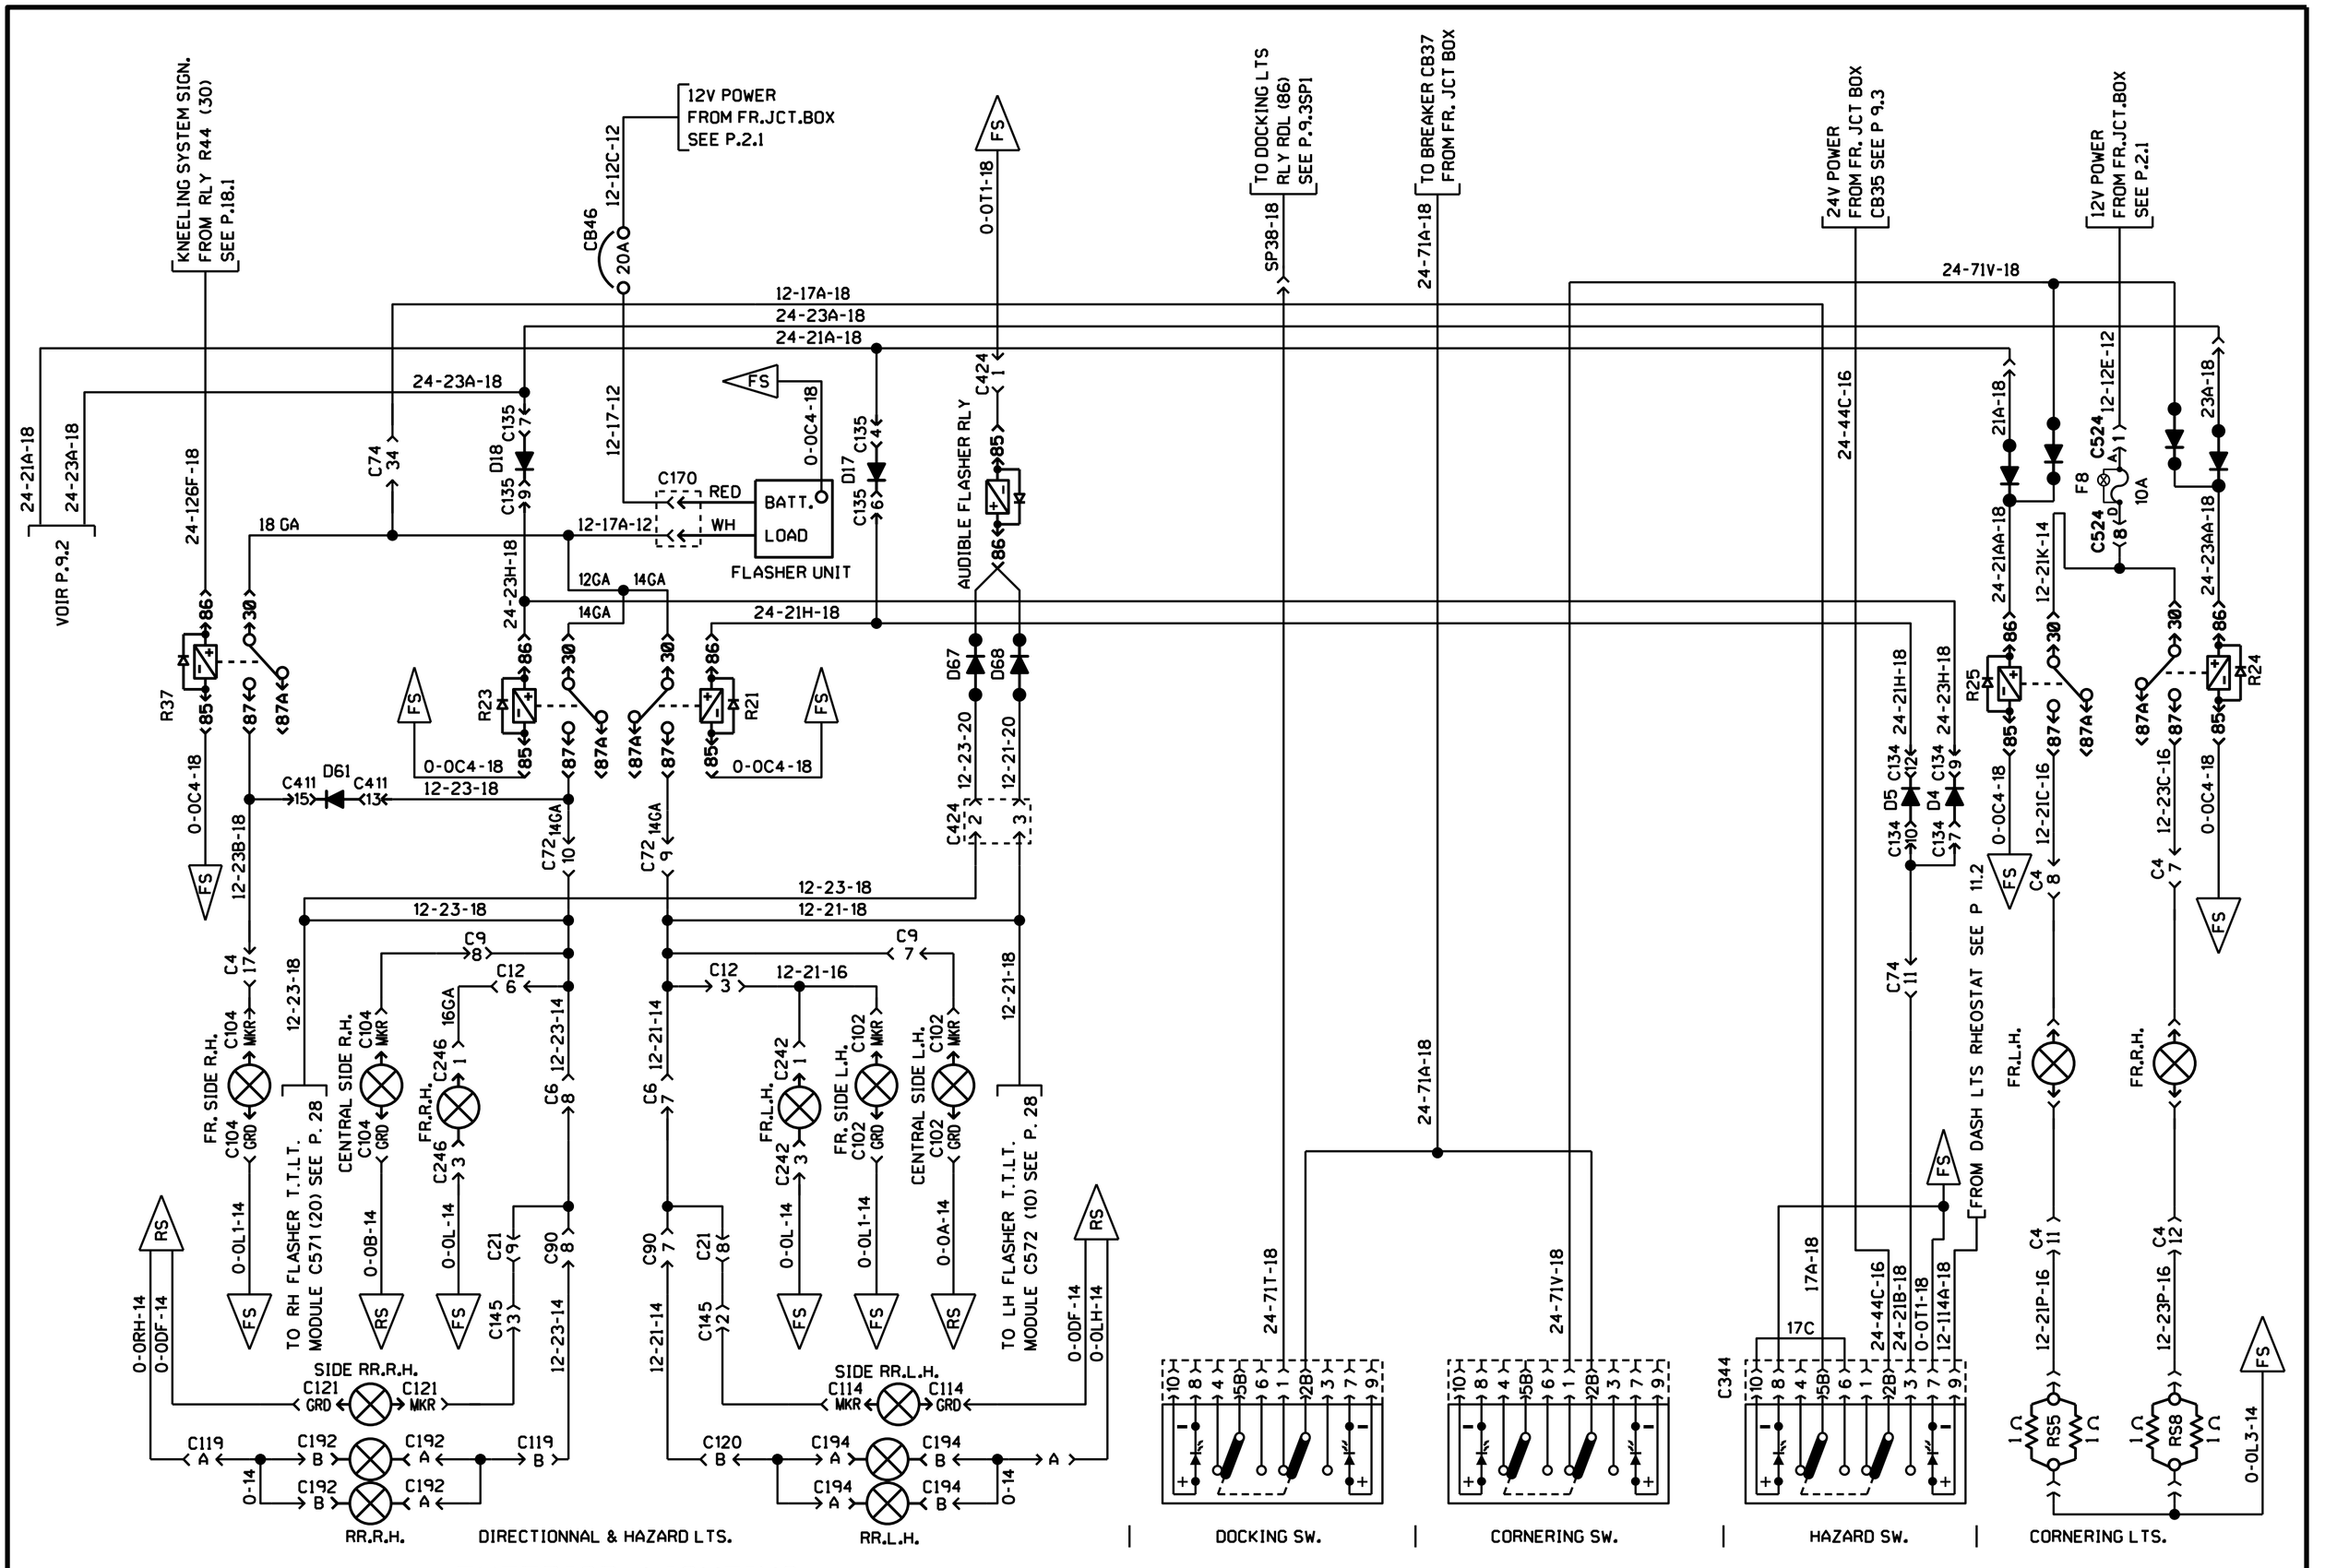

EXTERIOR LIGHTING

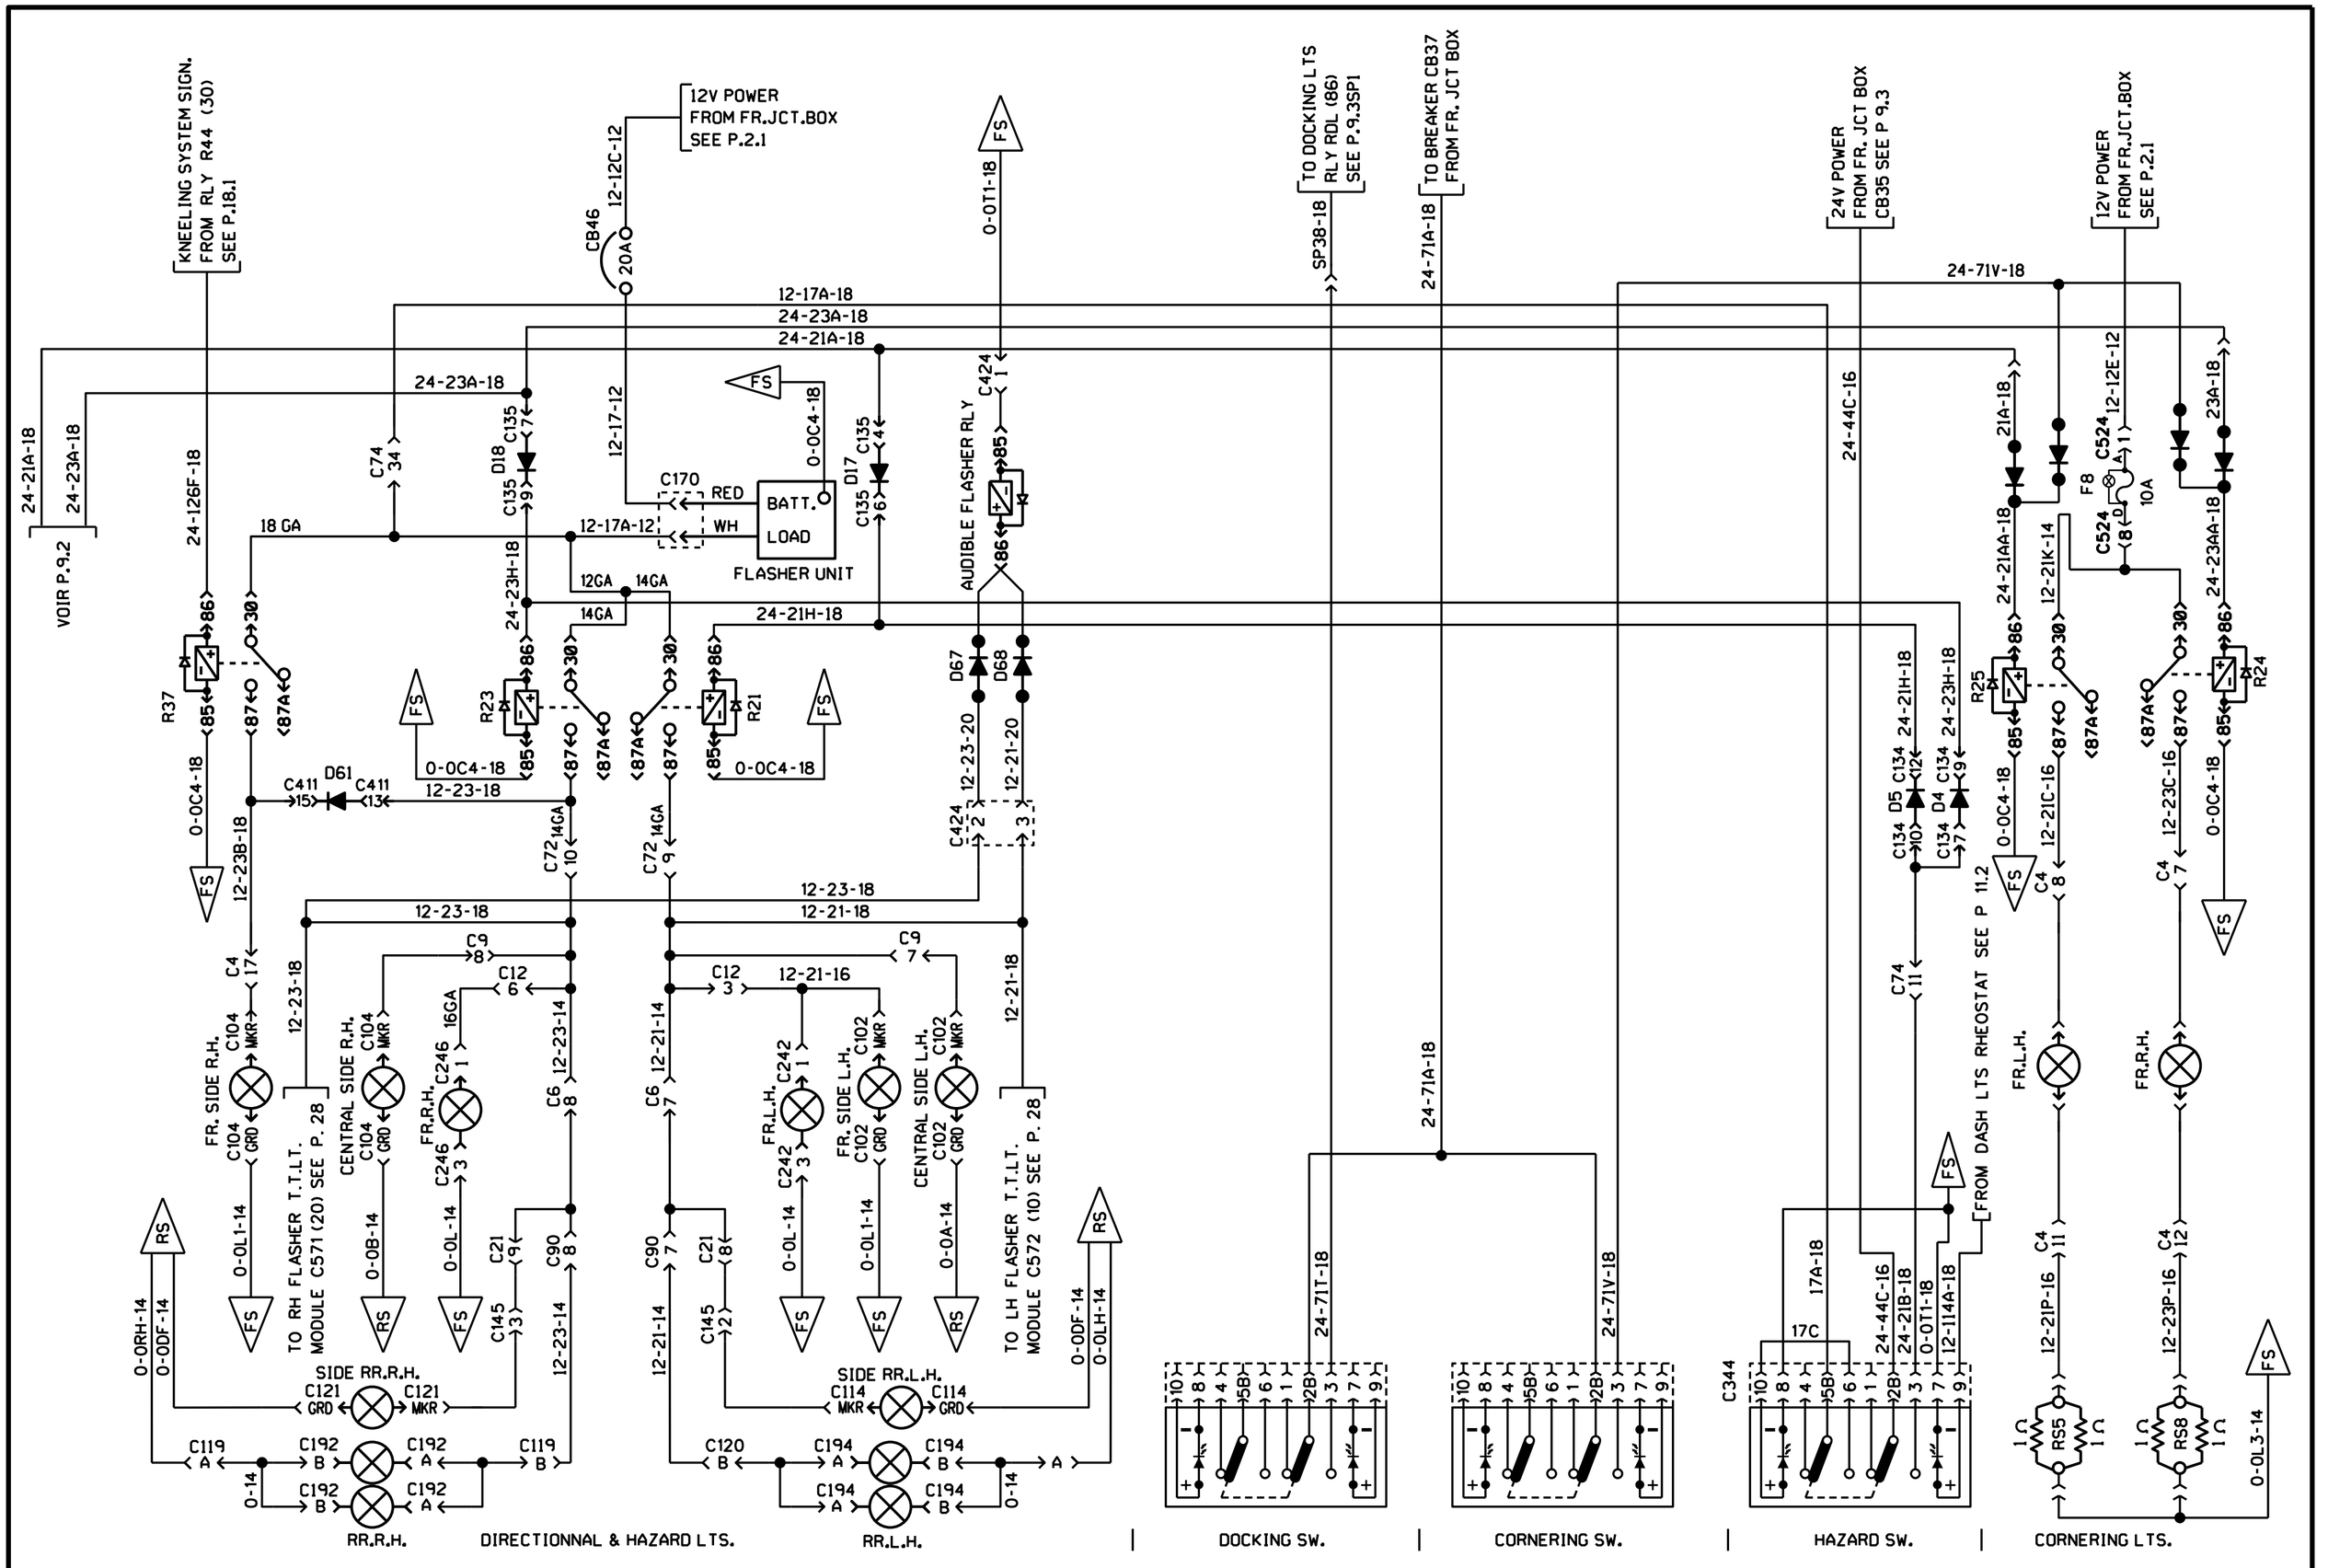

EXTERIOR LIGHTING

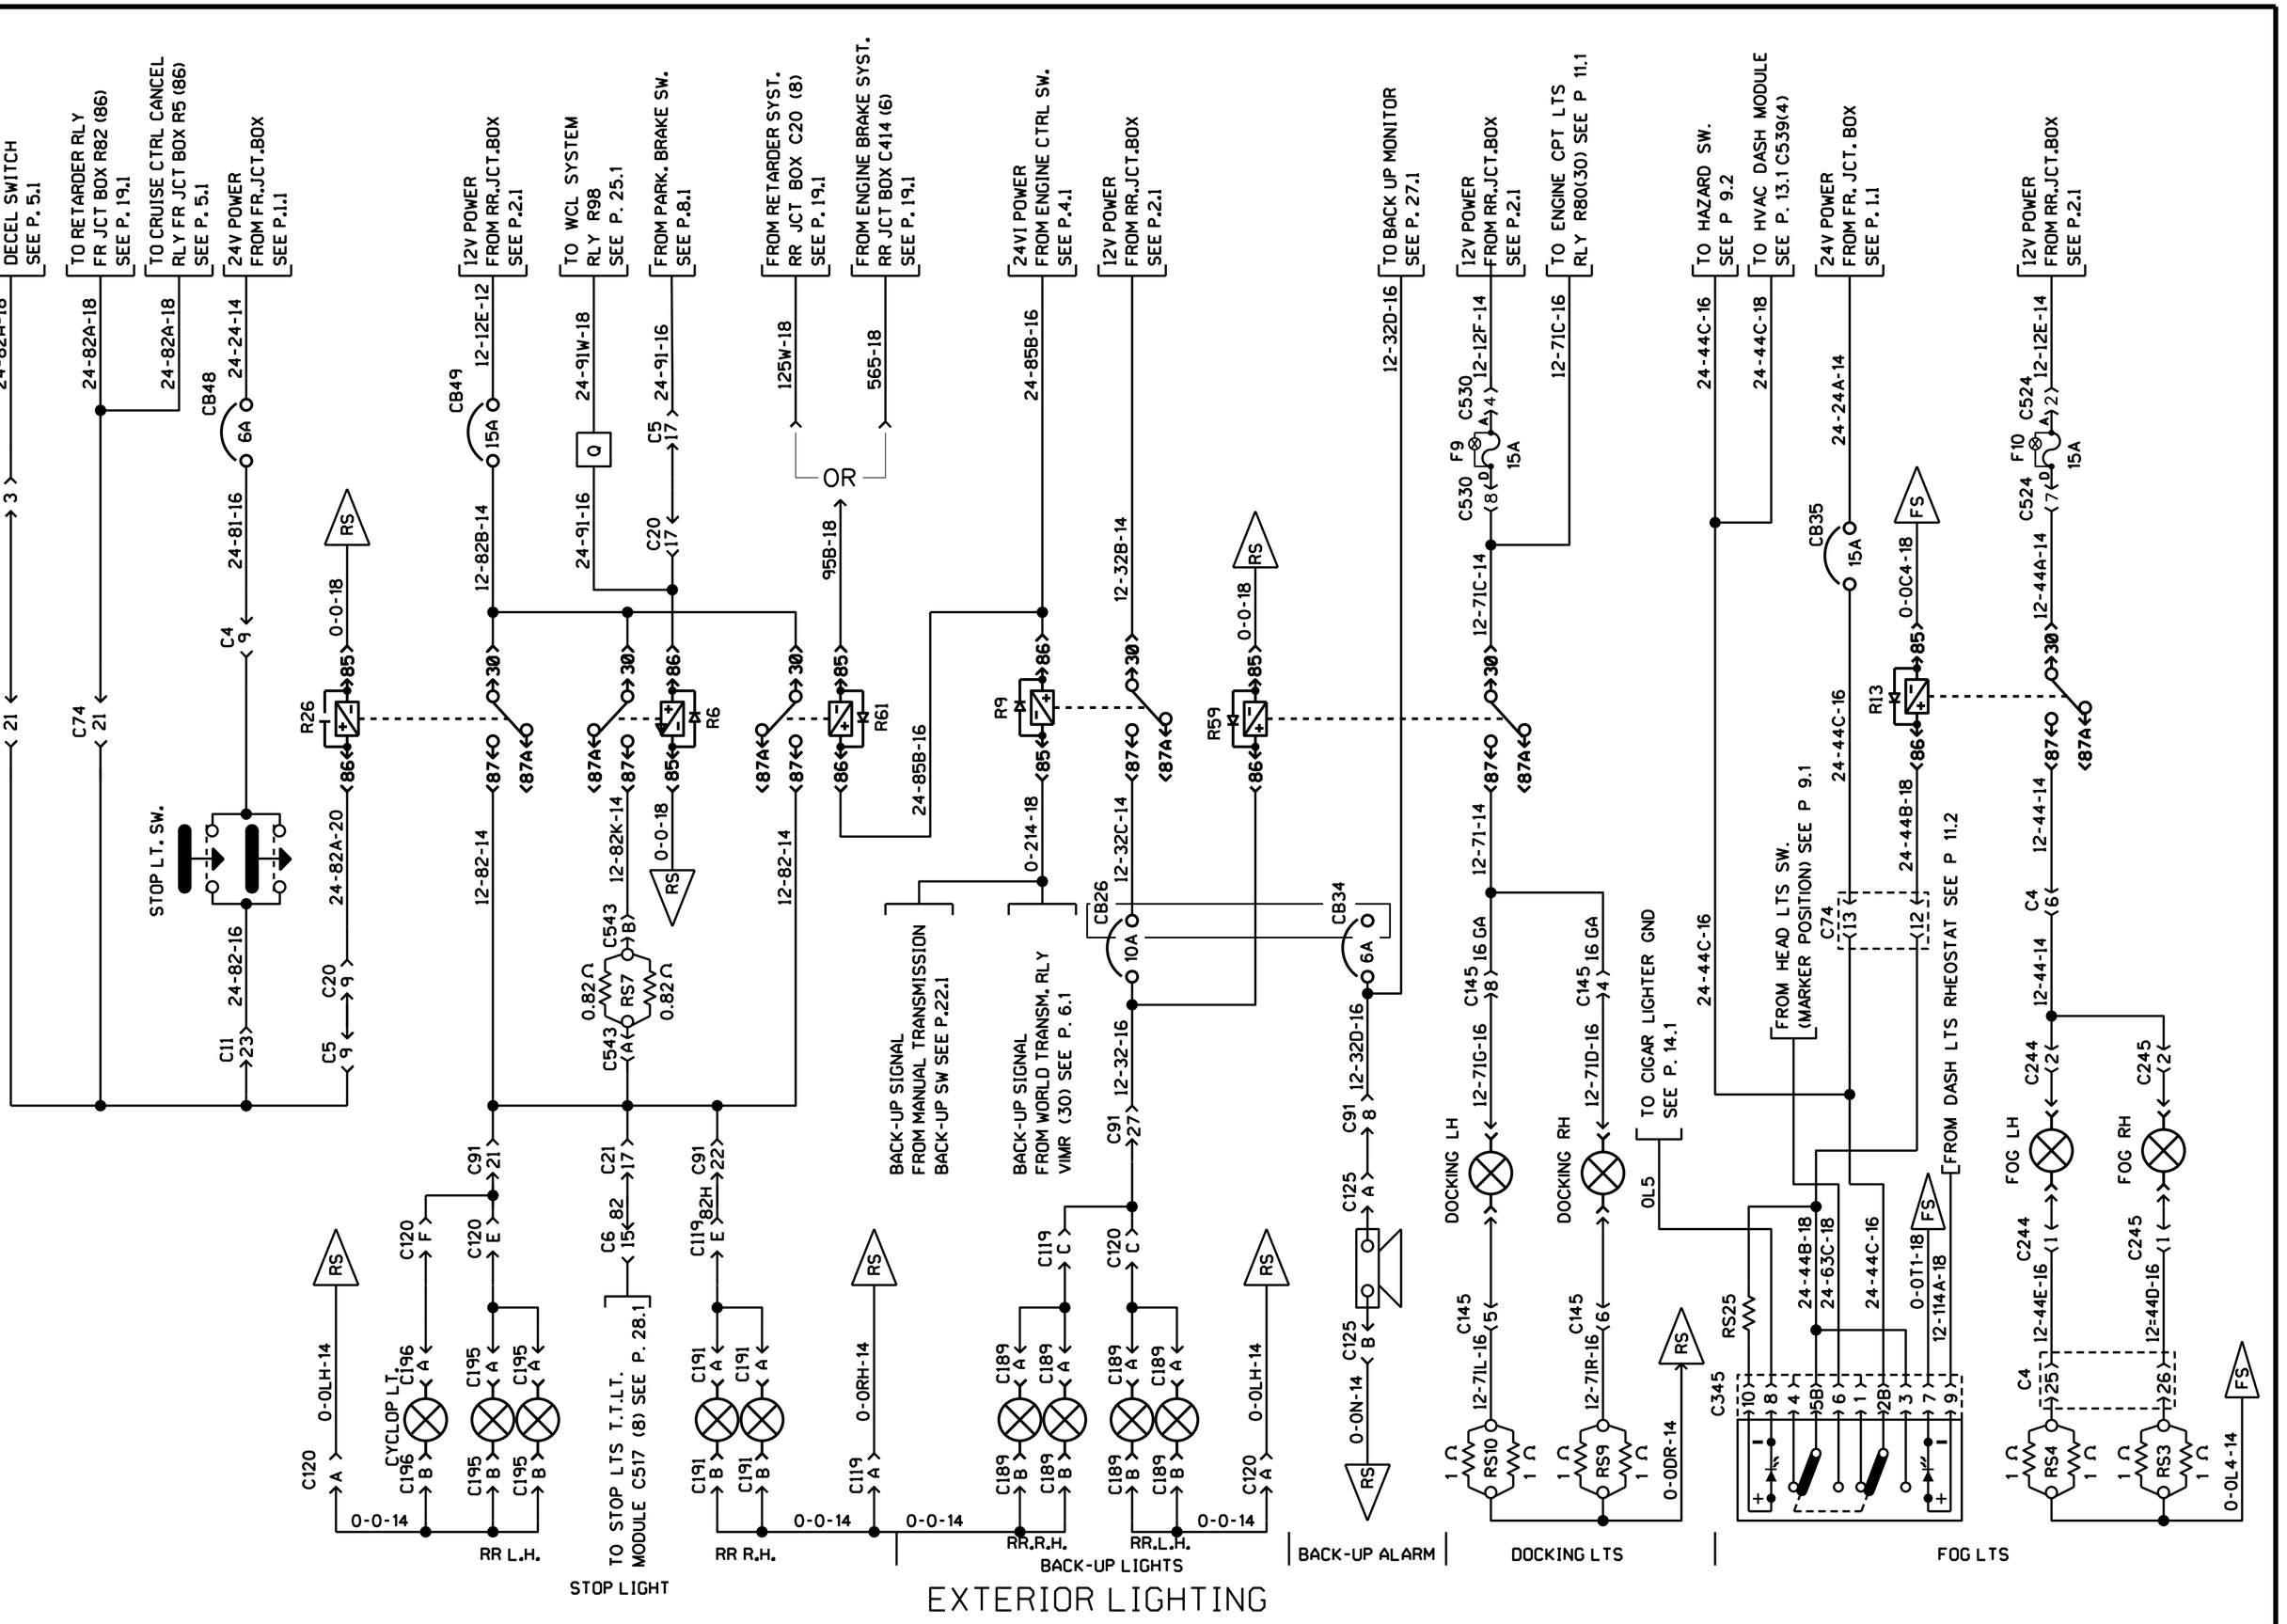

EXTERIOR LIGHTING

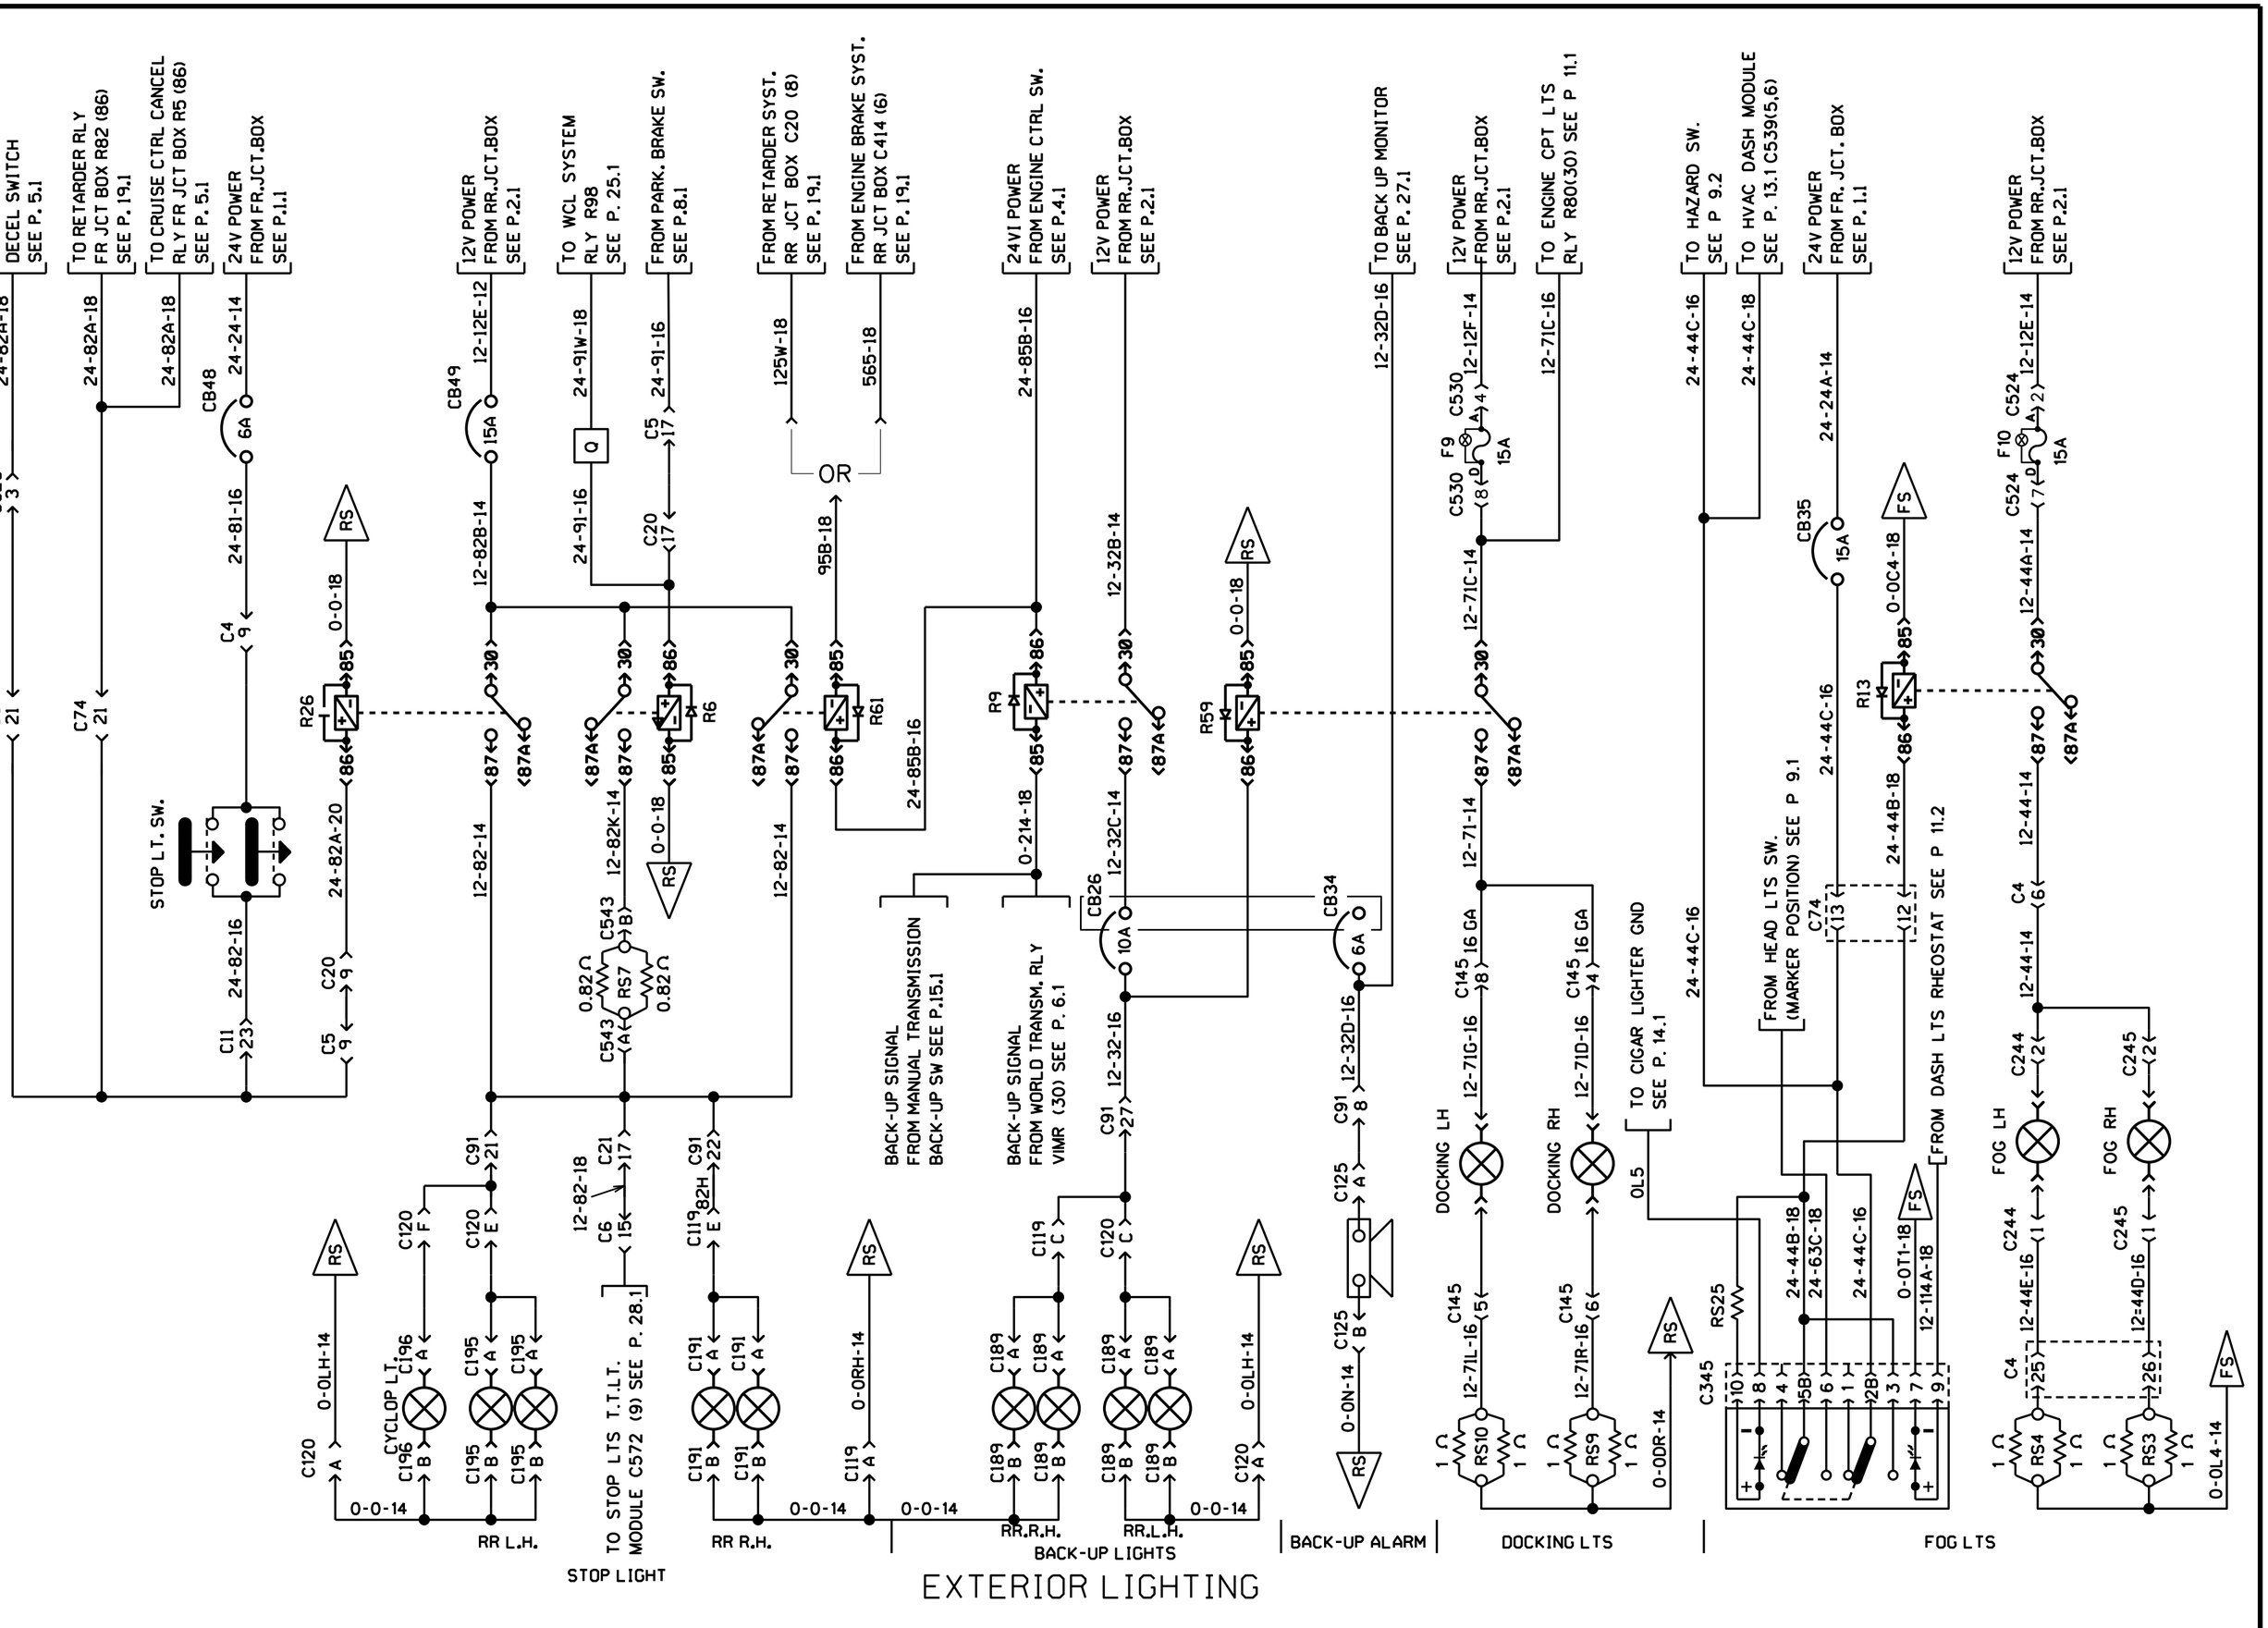
TO CRUISE CONTROL DECEL SWITCH SEE P. 5.1
TO RETARDER RLY FR JCT BOX R82 (86) SEE P. 19.1
TO CRUISE CTRL CANCEL RLY FR JCT BOX R5 (86) SEE P. 5.1
24V POWER FROM FR.JCT.BOX SEE P.1.1
12V POWER FROM RR.JCT.BOX SEE P.2.1
TO WCL SYSTEM RLY R98 SEE P. 25.1
FROM PARK. BRAKE SW. SEE P.8.1
FROM RETARDER SYST. RR JCT BOX C20 (8) SEE P. 19.1
FROM ENGINE BRAKE SYST. RR JCT BOX C414 (6) SEE P. 19.1
OR
24VI POWER FROM ENGINE CTRL SW. SEE P.4.1
12V POWER FROM RR.JCT.BOX SEE P.2.1
TO BACK UP MONITOR SEE P. 27.1
12V POWER FROM RR.JCT.BOX SEE P.2.1
TO ENGINE CPT LTS RLY R80(30) SEE P 11.1
TO HAZARD SW. SEE P 9.2
TO HVAC DASH MODULE SEE P. 13.1 C539(5,6)
24V POWER FROM FR. JCT. BOX SEE P. 1.1
12V POWER FROM RR.JCT.BOX SEE P.2.1
STOP LT. SW.
TO STOP LTS T.T.L.T. MODULE C572 (9) SEE P. 28.1
BACK-UP SIGNAL FROM MANUAL TRANSMISSION BACK-UP SW SEE P.15.1
BACK-UP SIGNAL FROM WORLD TRANSM. RLY VIMR (30) SEE P. 6.1
FROM HEAD LTS SW. (MARKER POSITION) SEE P 9.1
TO CIGAR LIGHTER GND SEE P. 14.1
FROM DASH LTS RHEOSTAT SEE P 11.2
DOCKING LH
DOCKING RH
CYCLOP LT.
RR L.H.
RR R.H.
RR.R.H.
RR.L.H.
BACK-UP LIGHTS
STOP LIGHT
BACK-UP ALARM
DOCKING LTS
FOG LTS
FOG LH
FOG RH
EXTERIOR LIGHTING

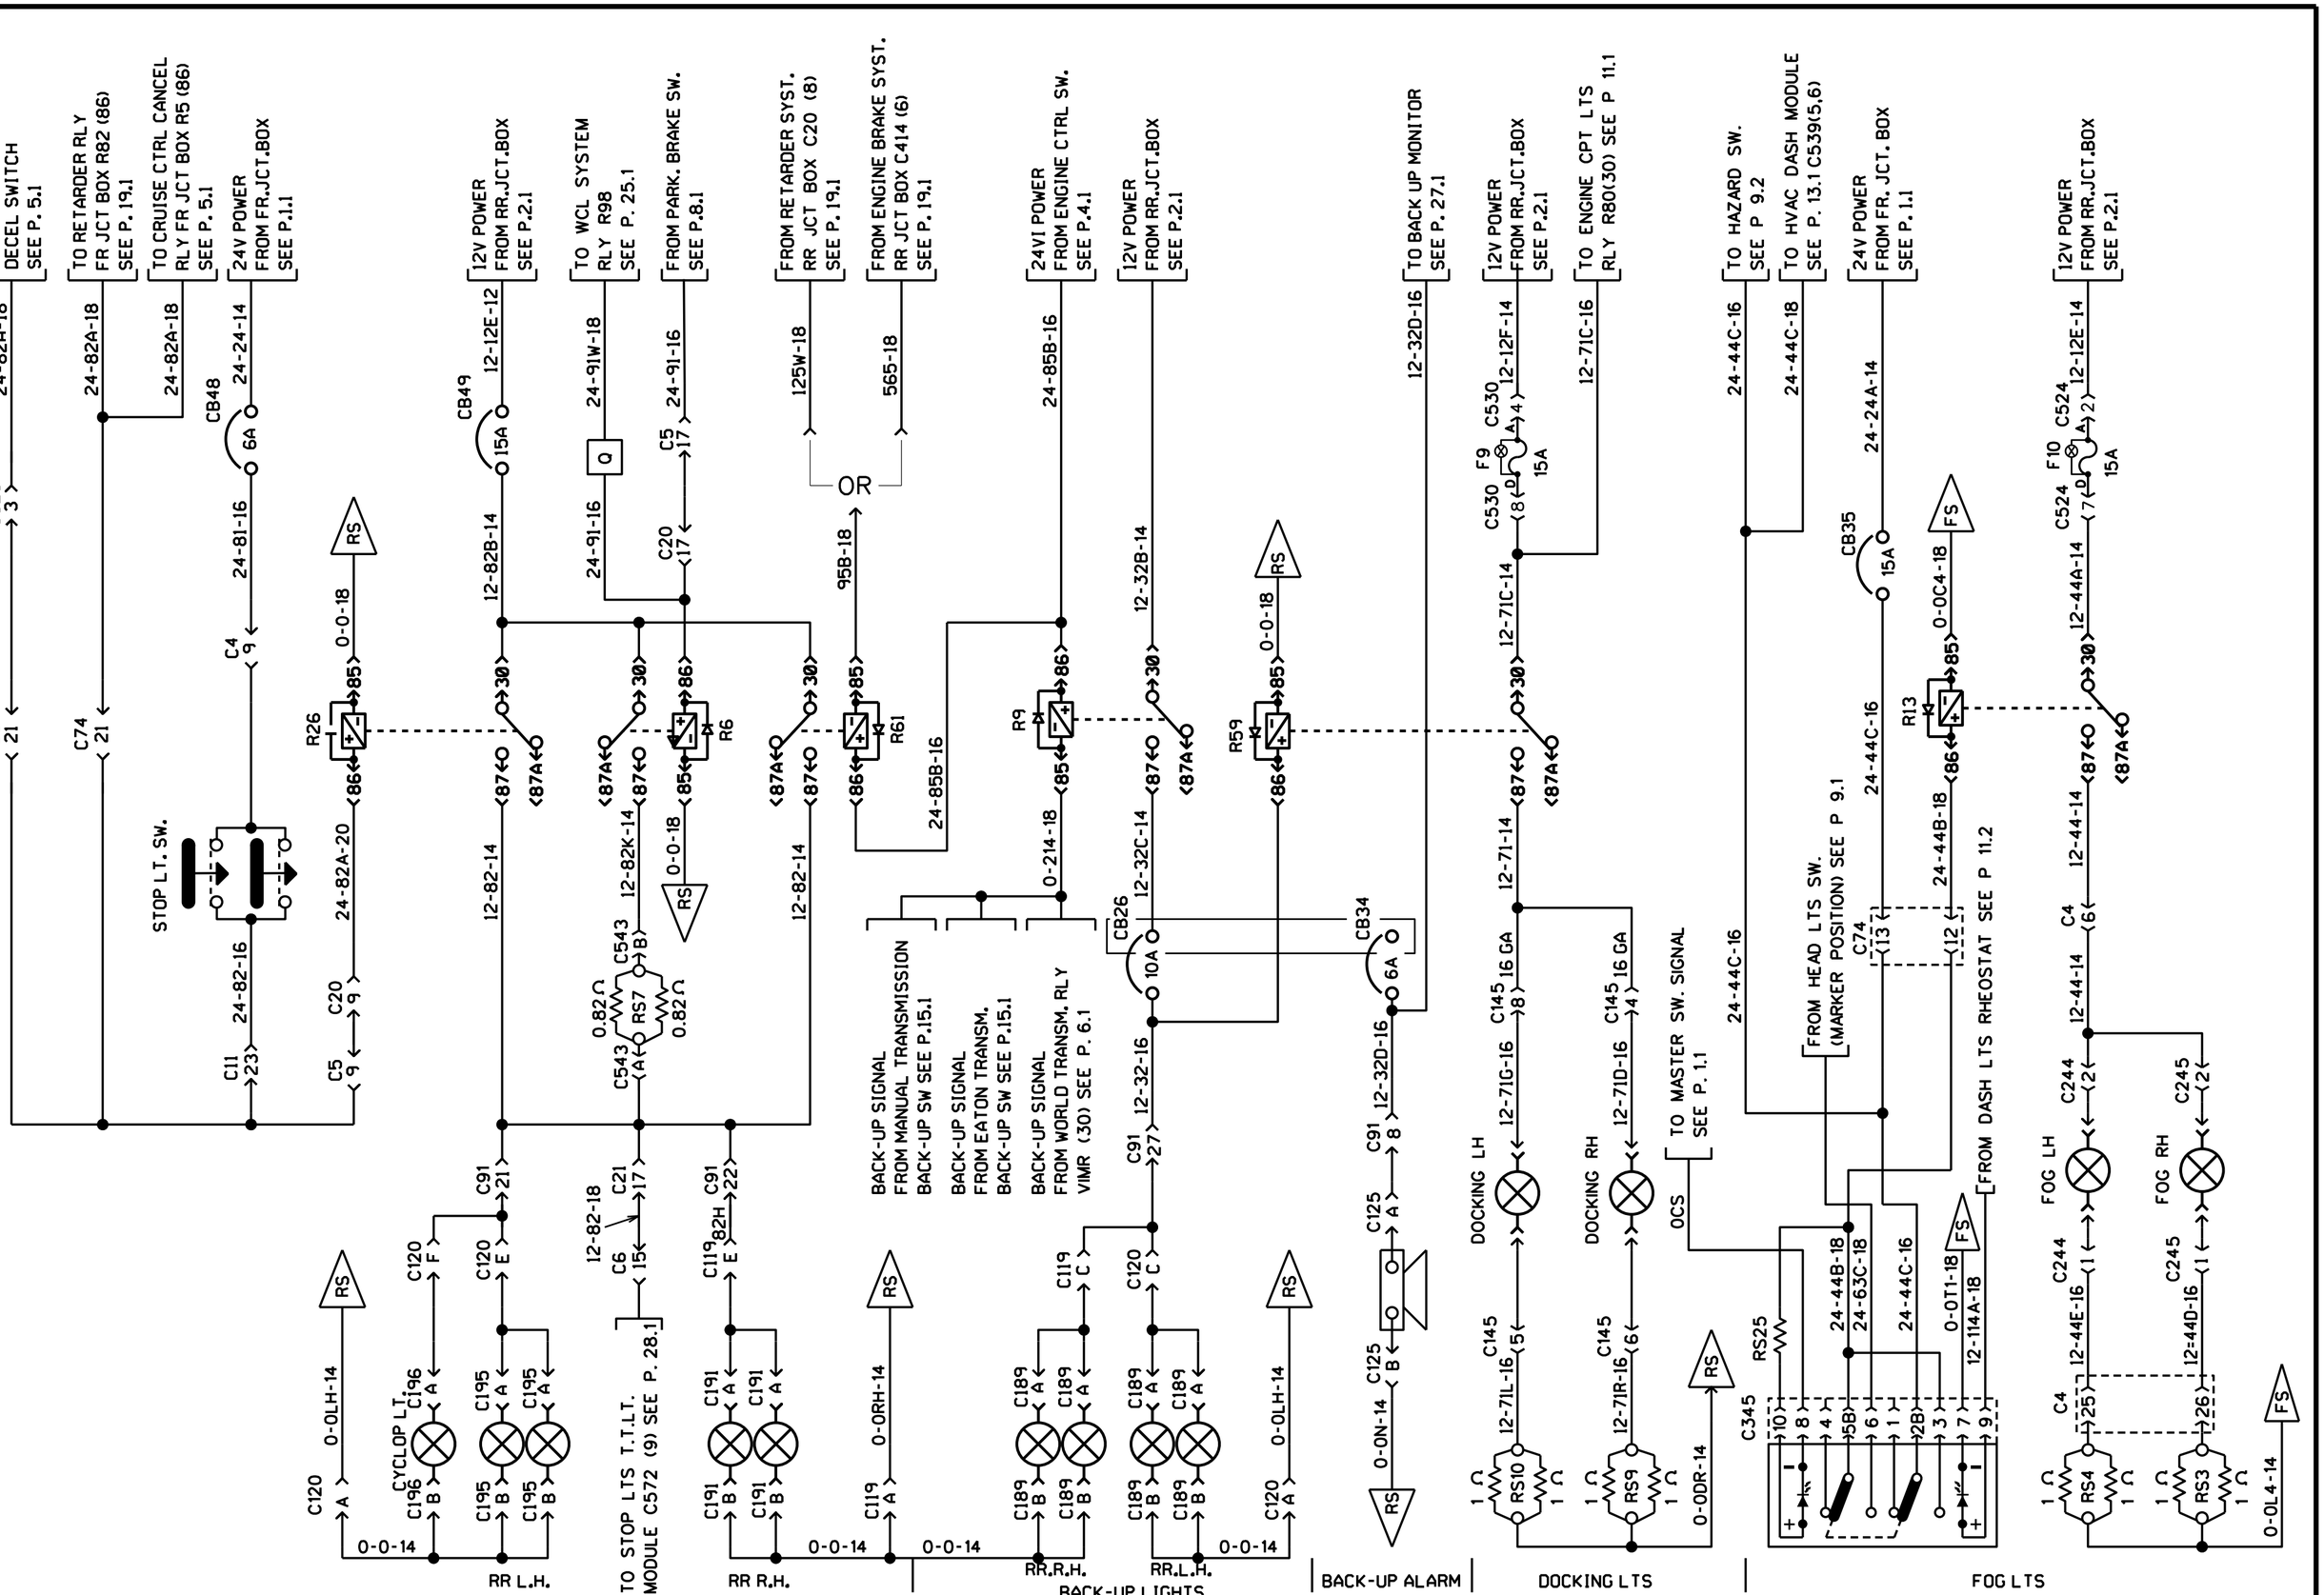

EXTERIOR LIGHTING

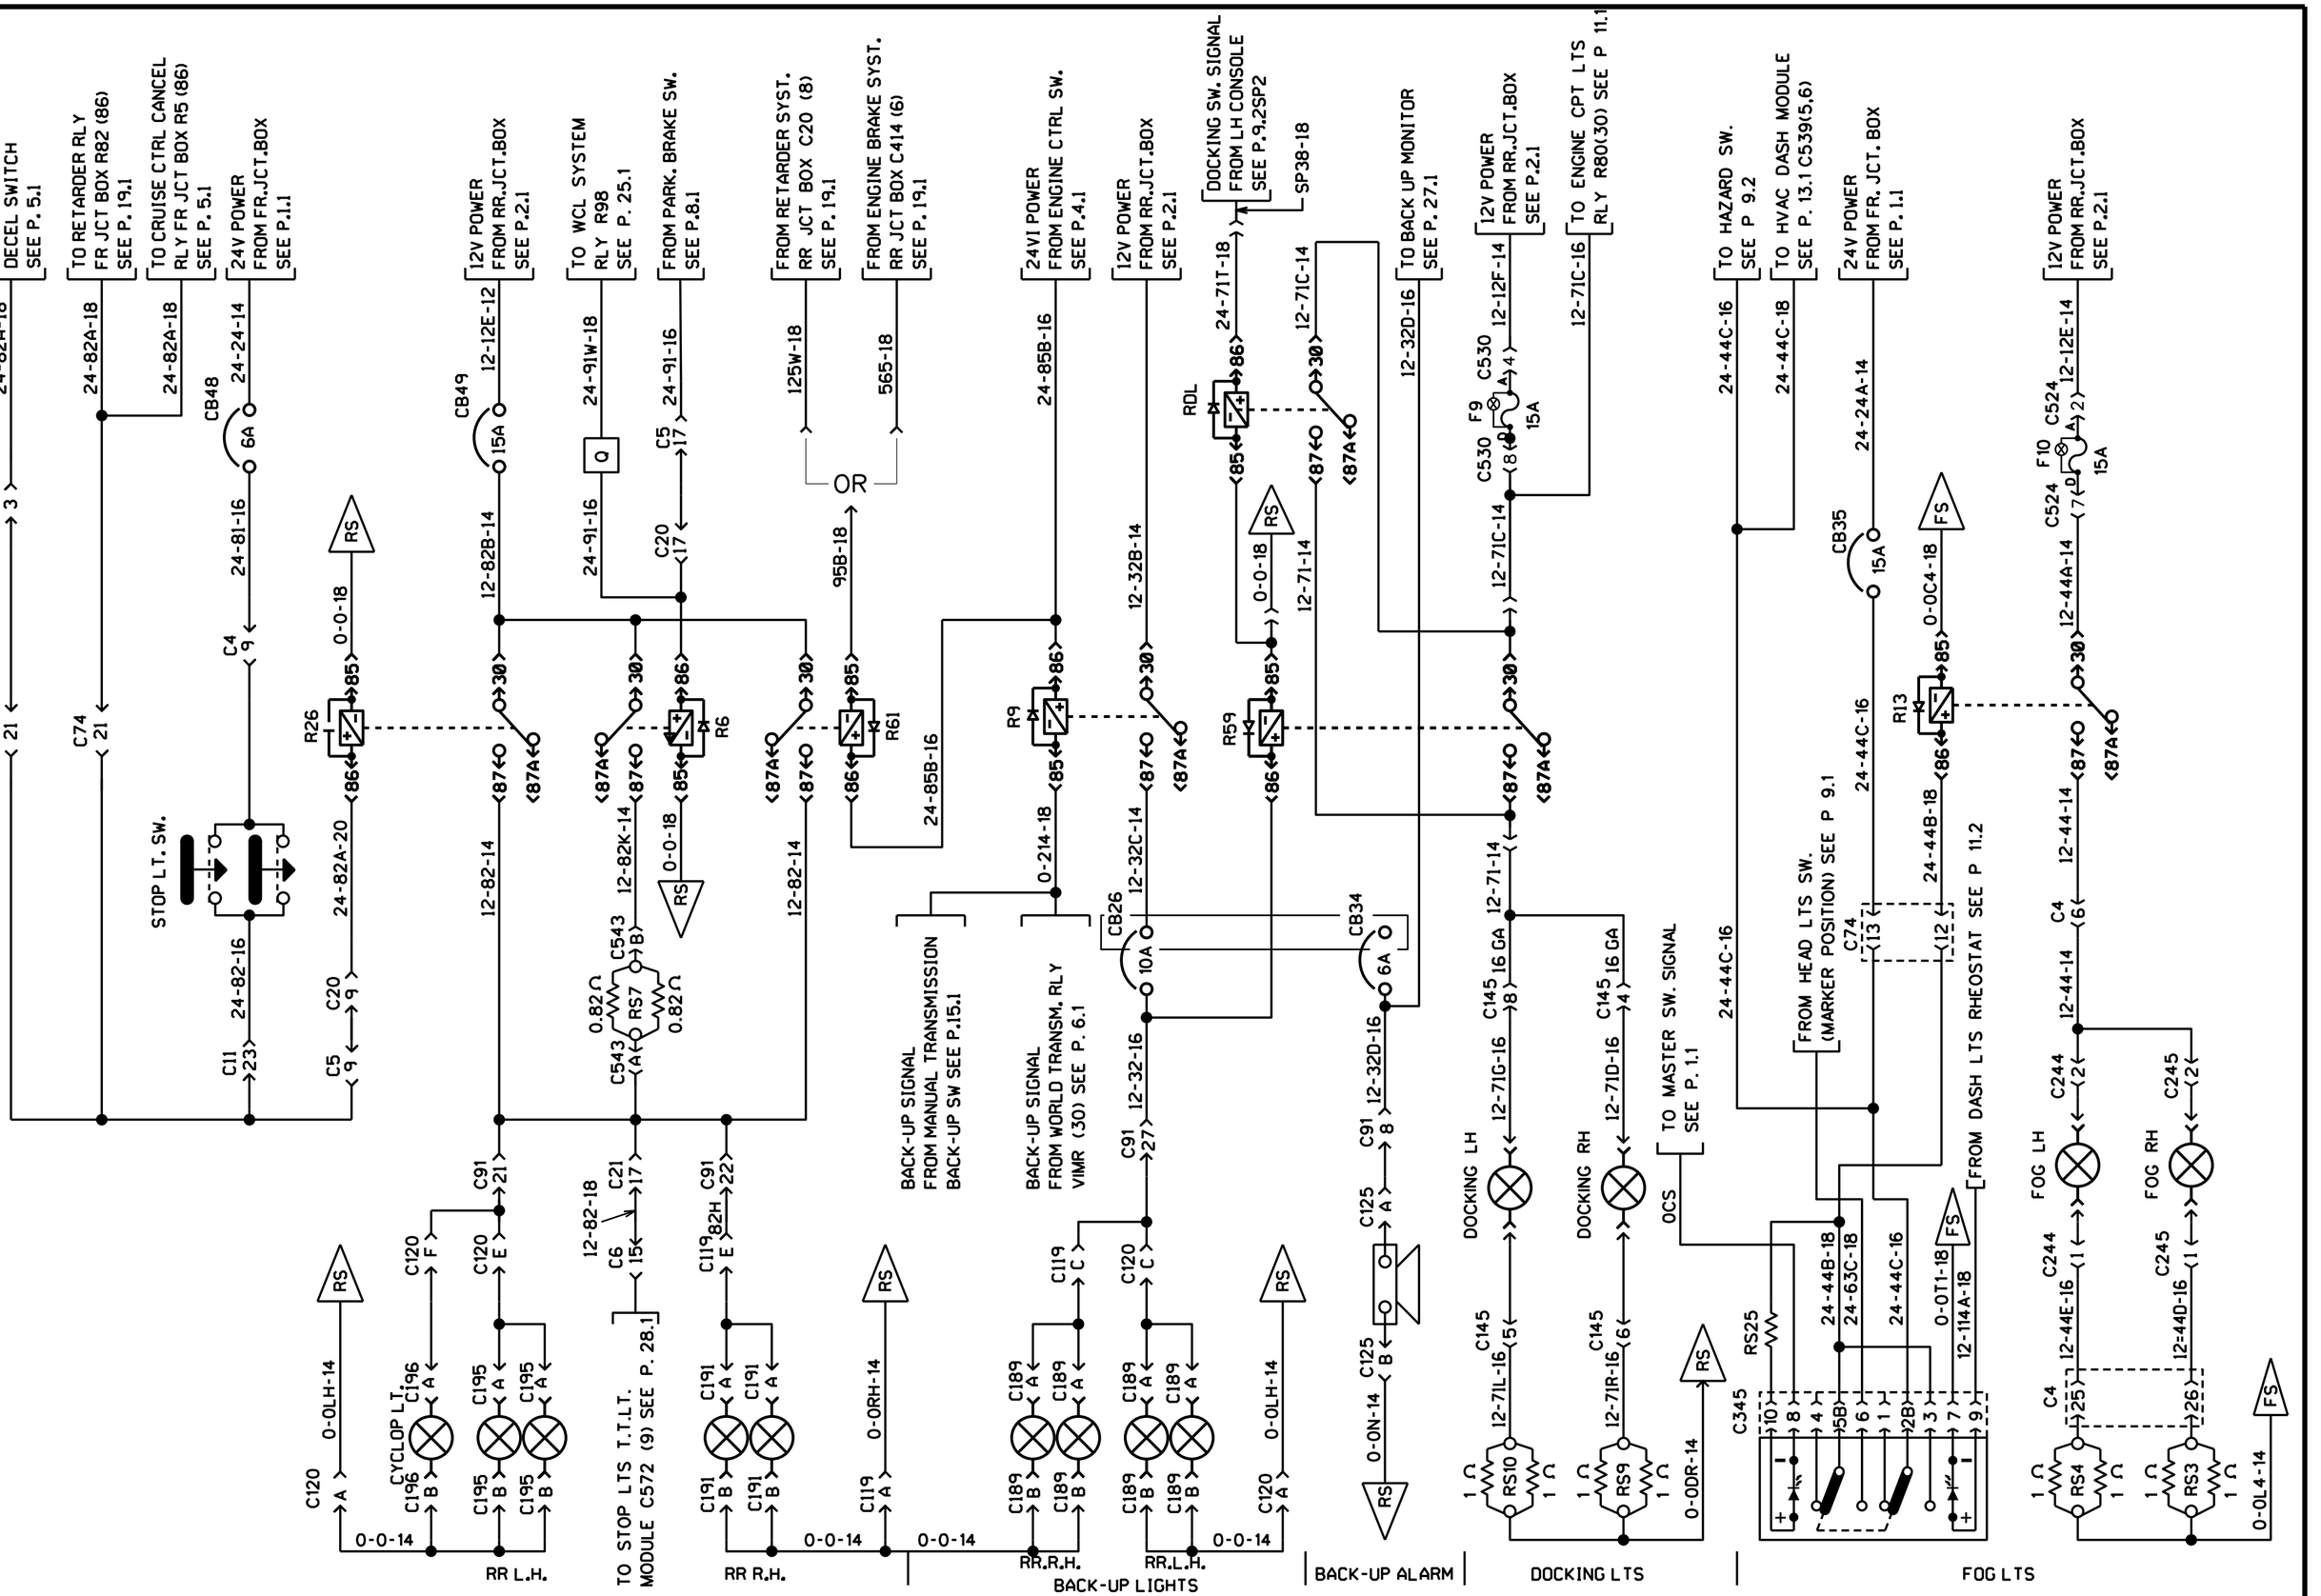

EXTERIOR LIGHTING

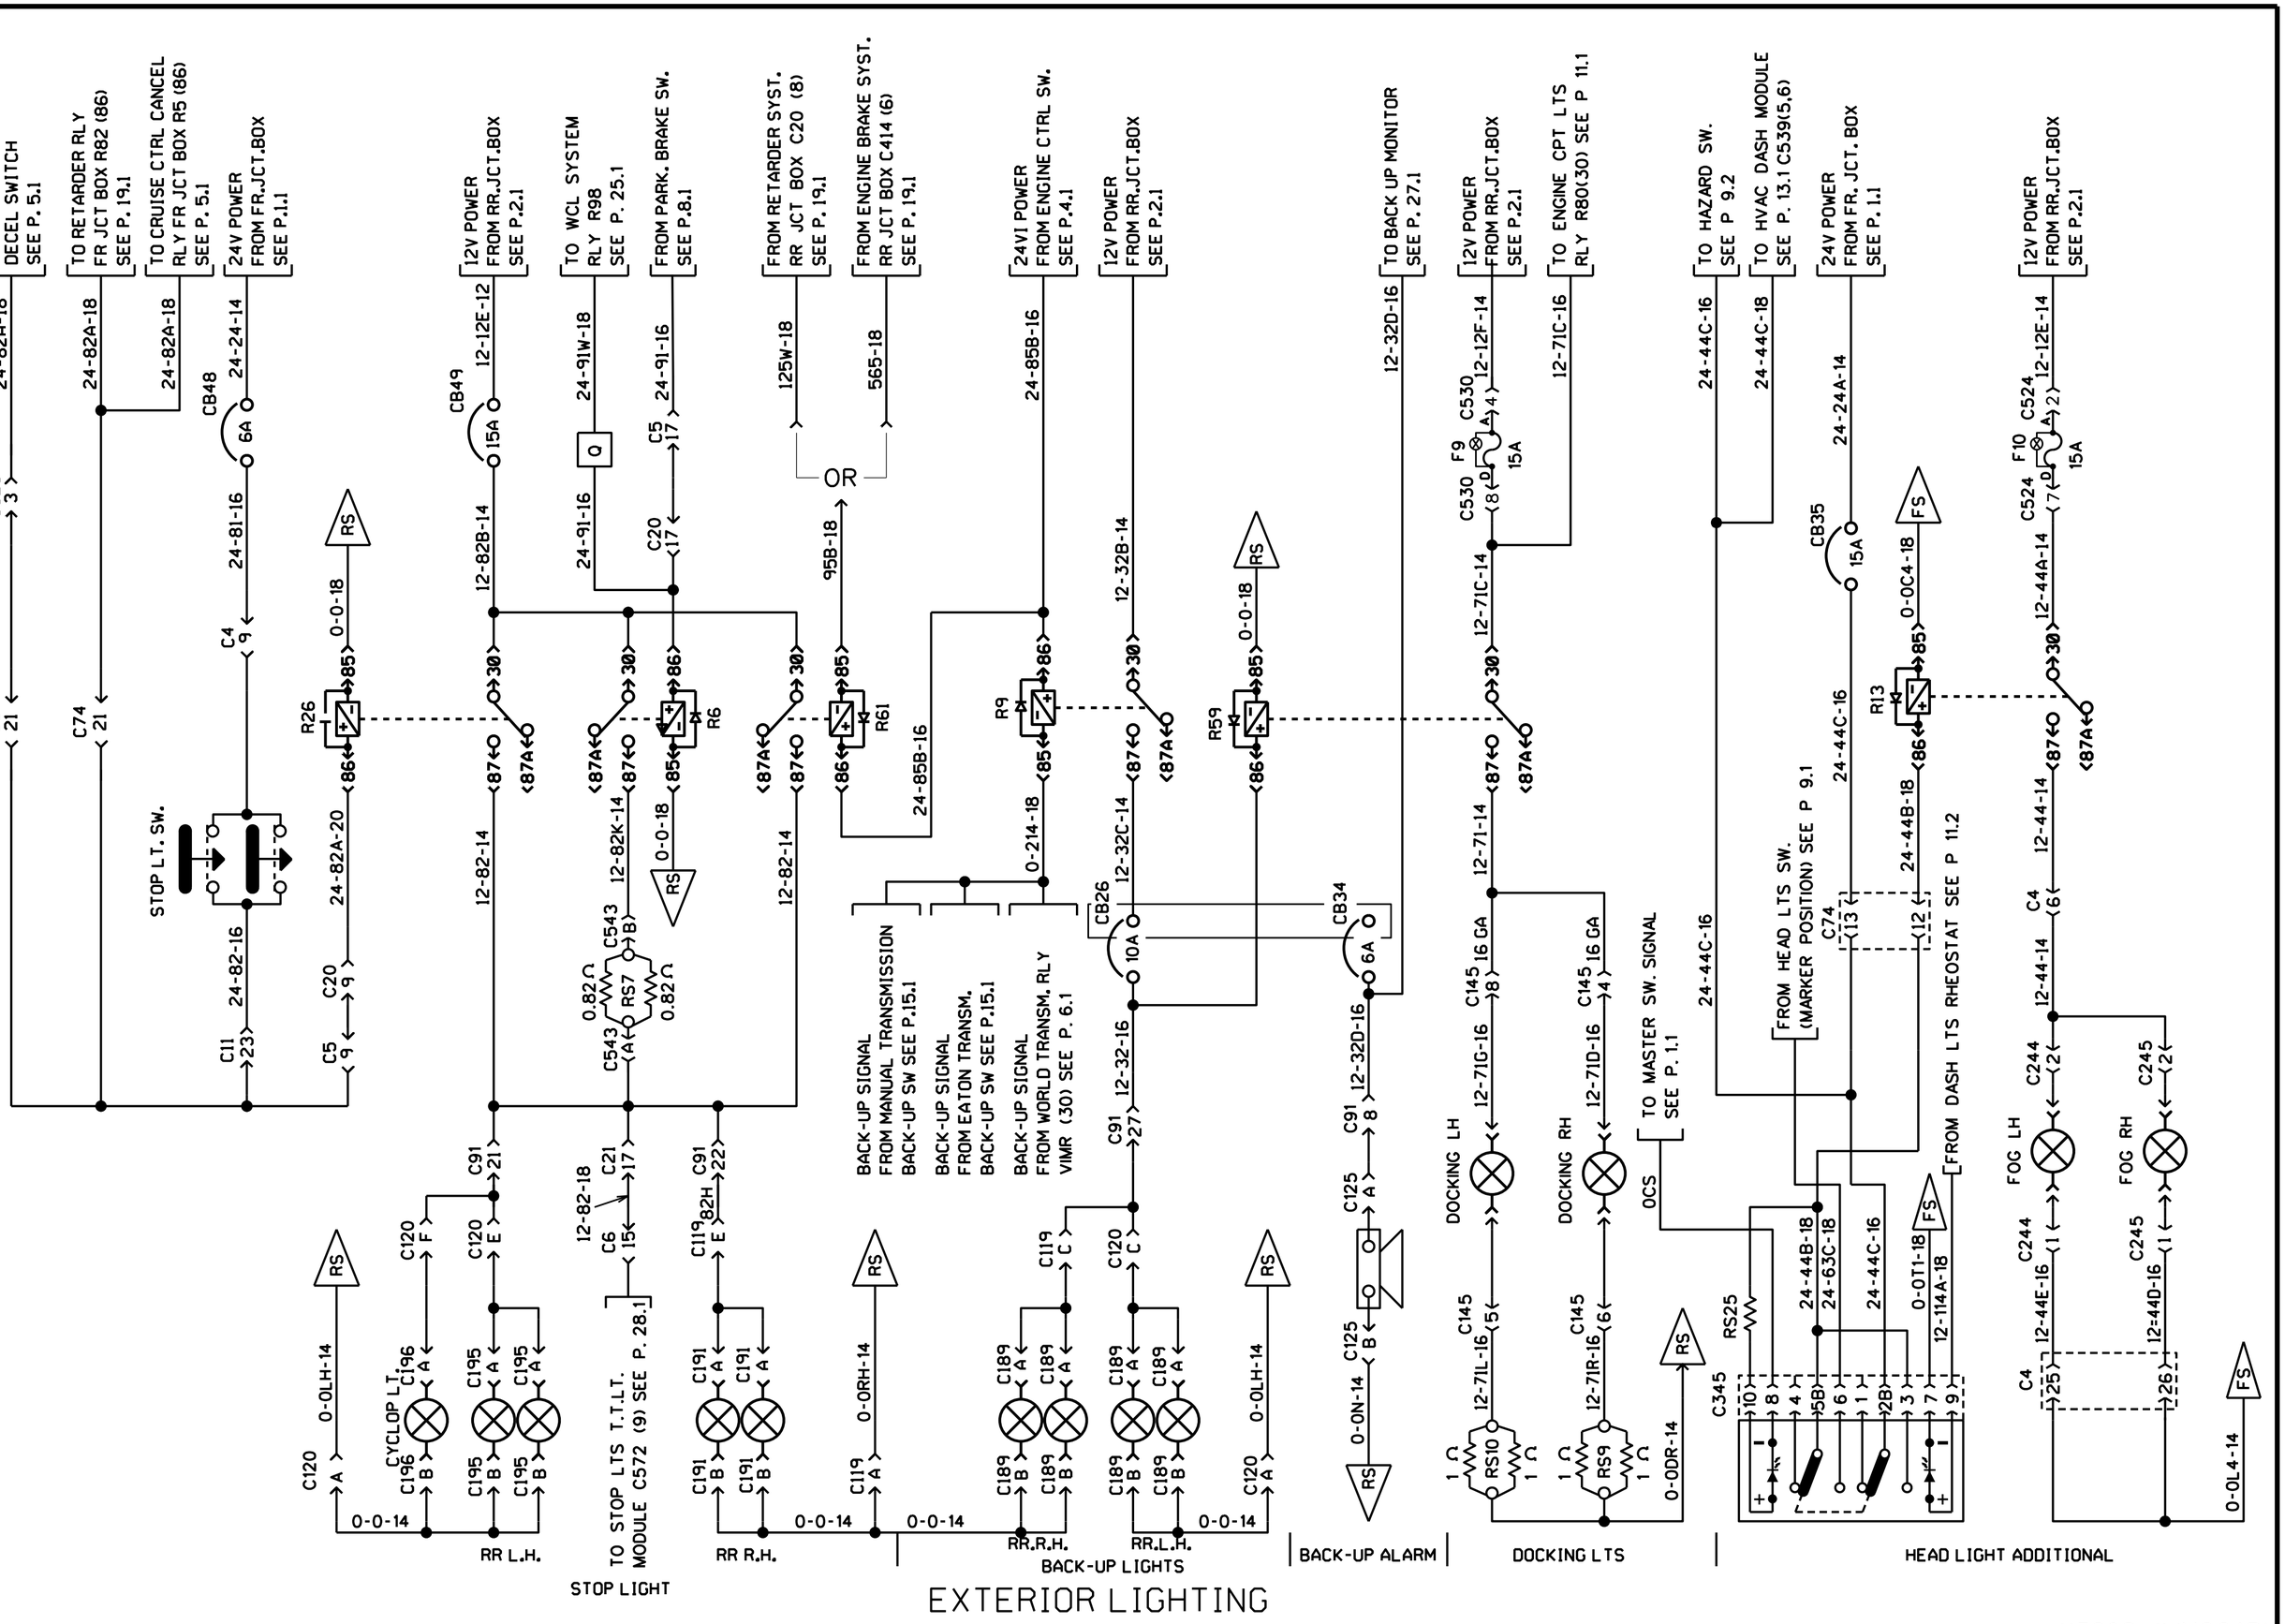

EXTERIOR LIGHTING

X3298 (LIMOCAR)

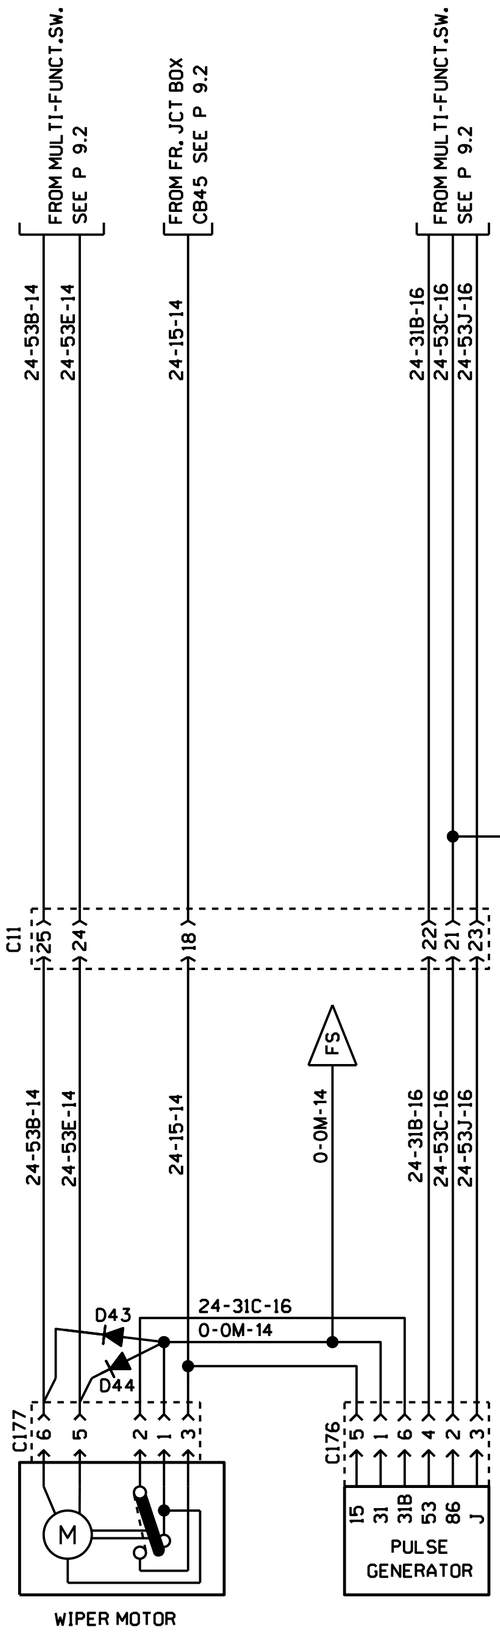

LOWER WINDSHIELD WIPER AND WASHER

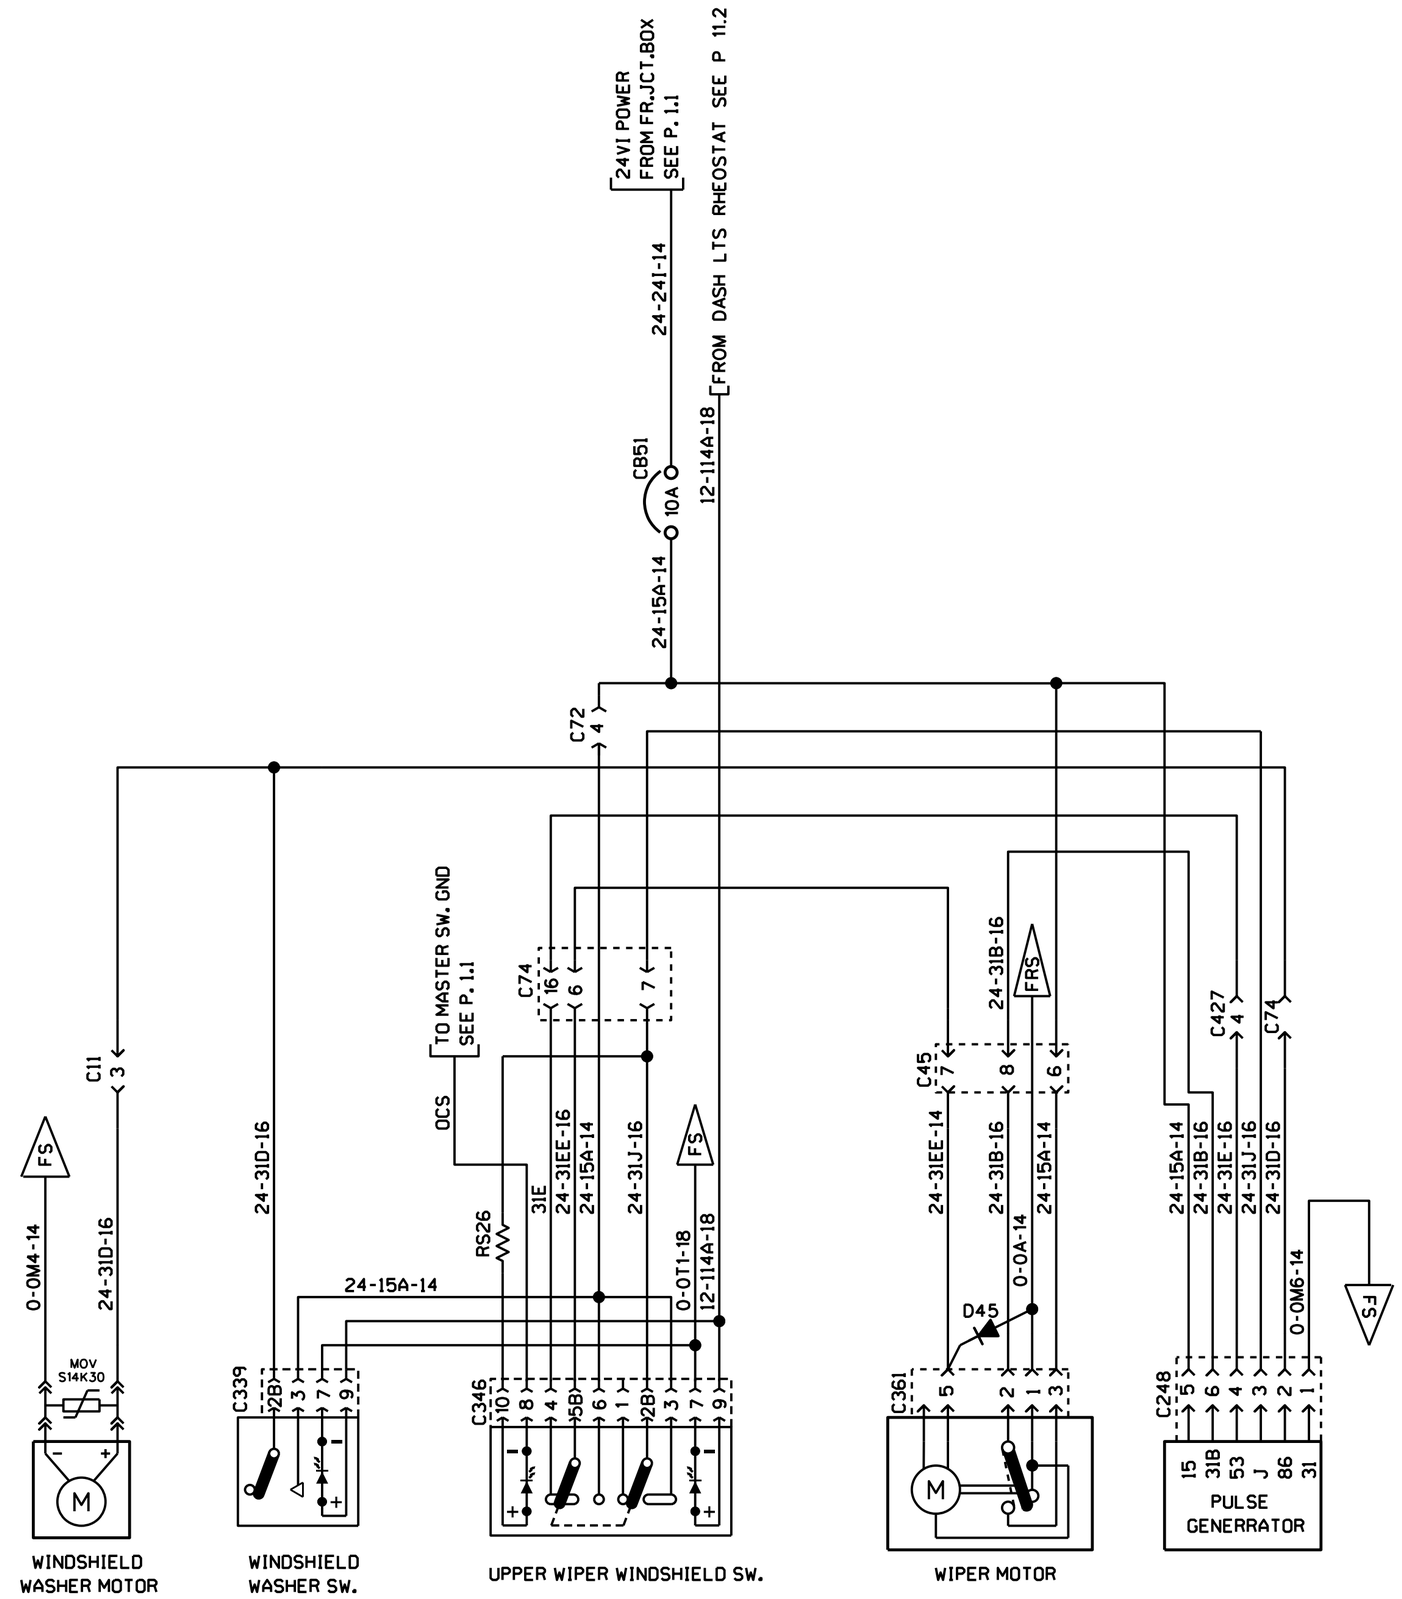

UPPER WINDSHIELD WIPER AND WASHER

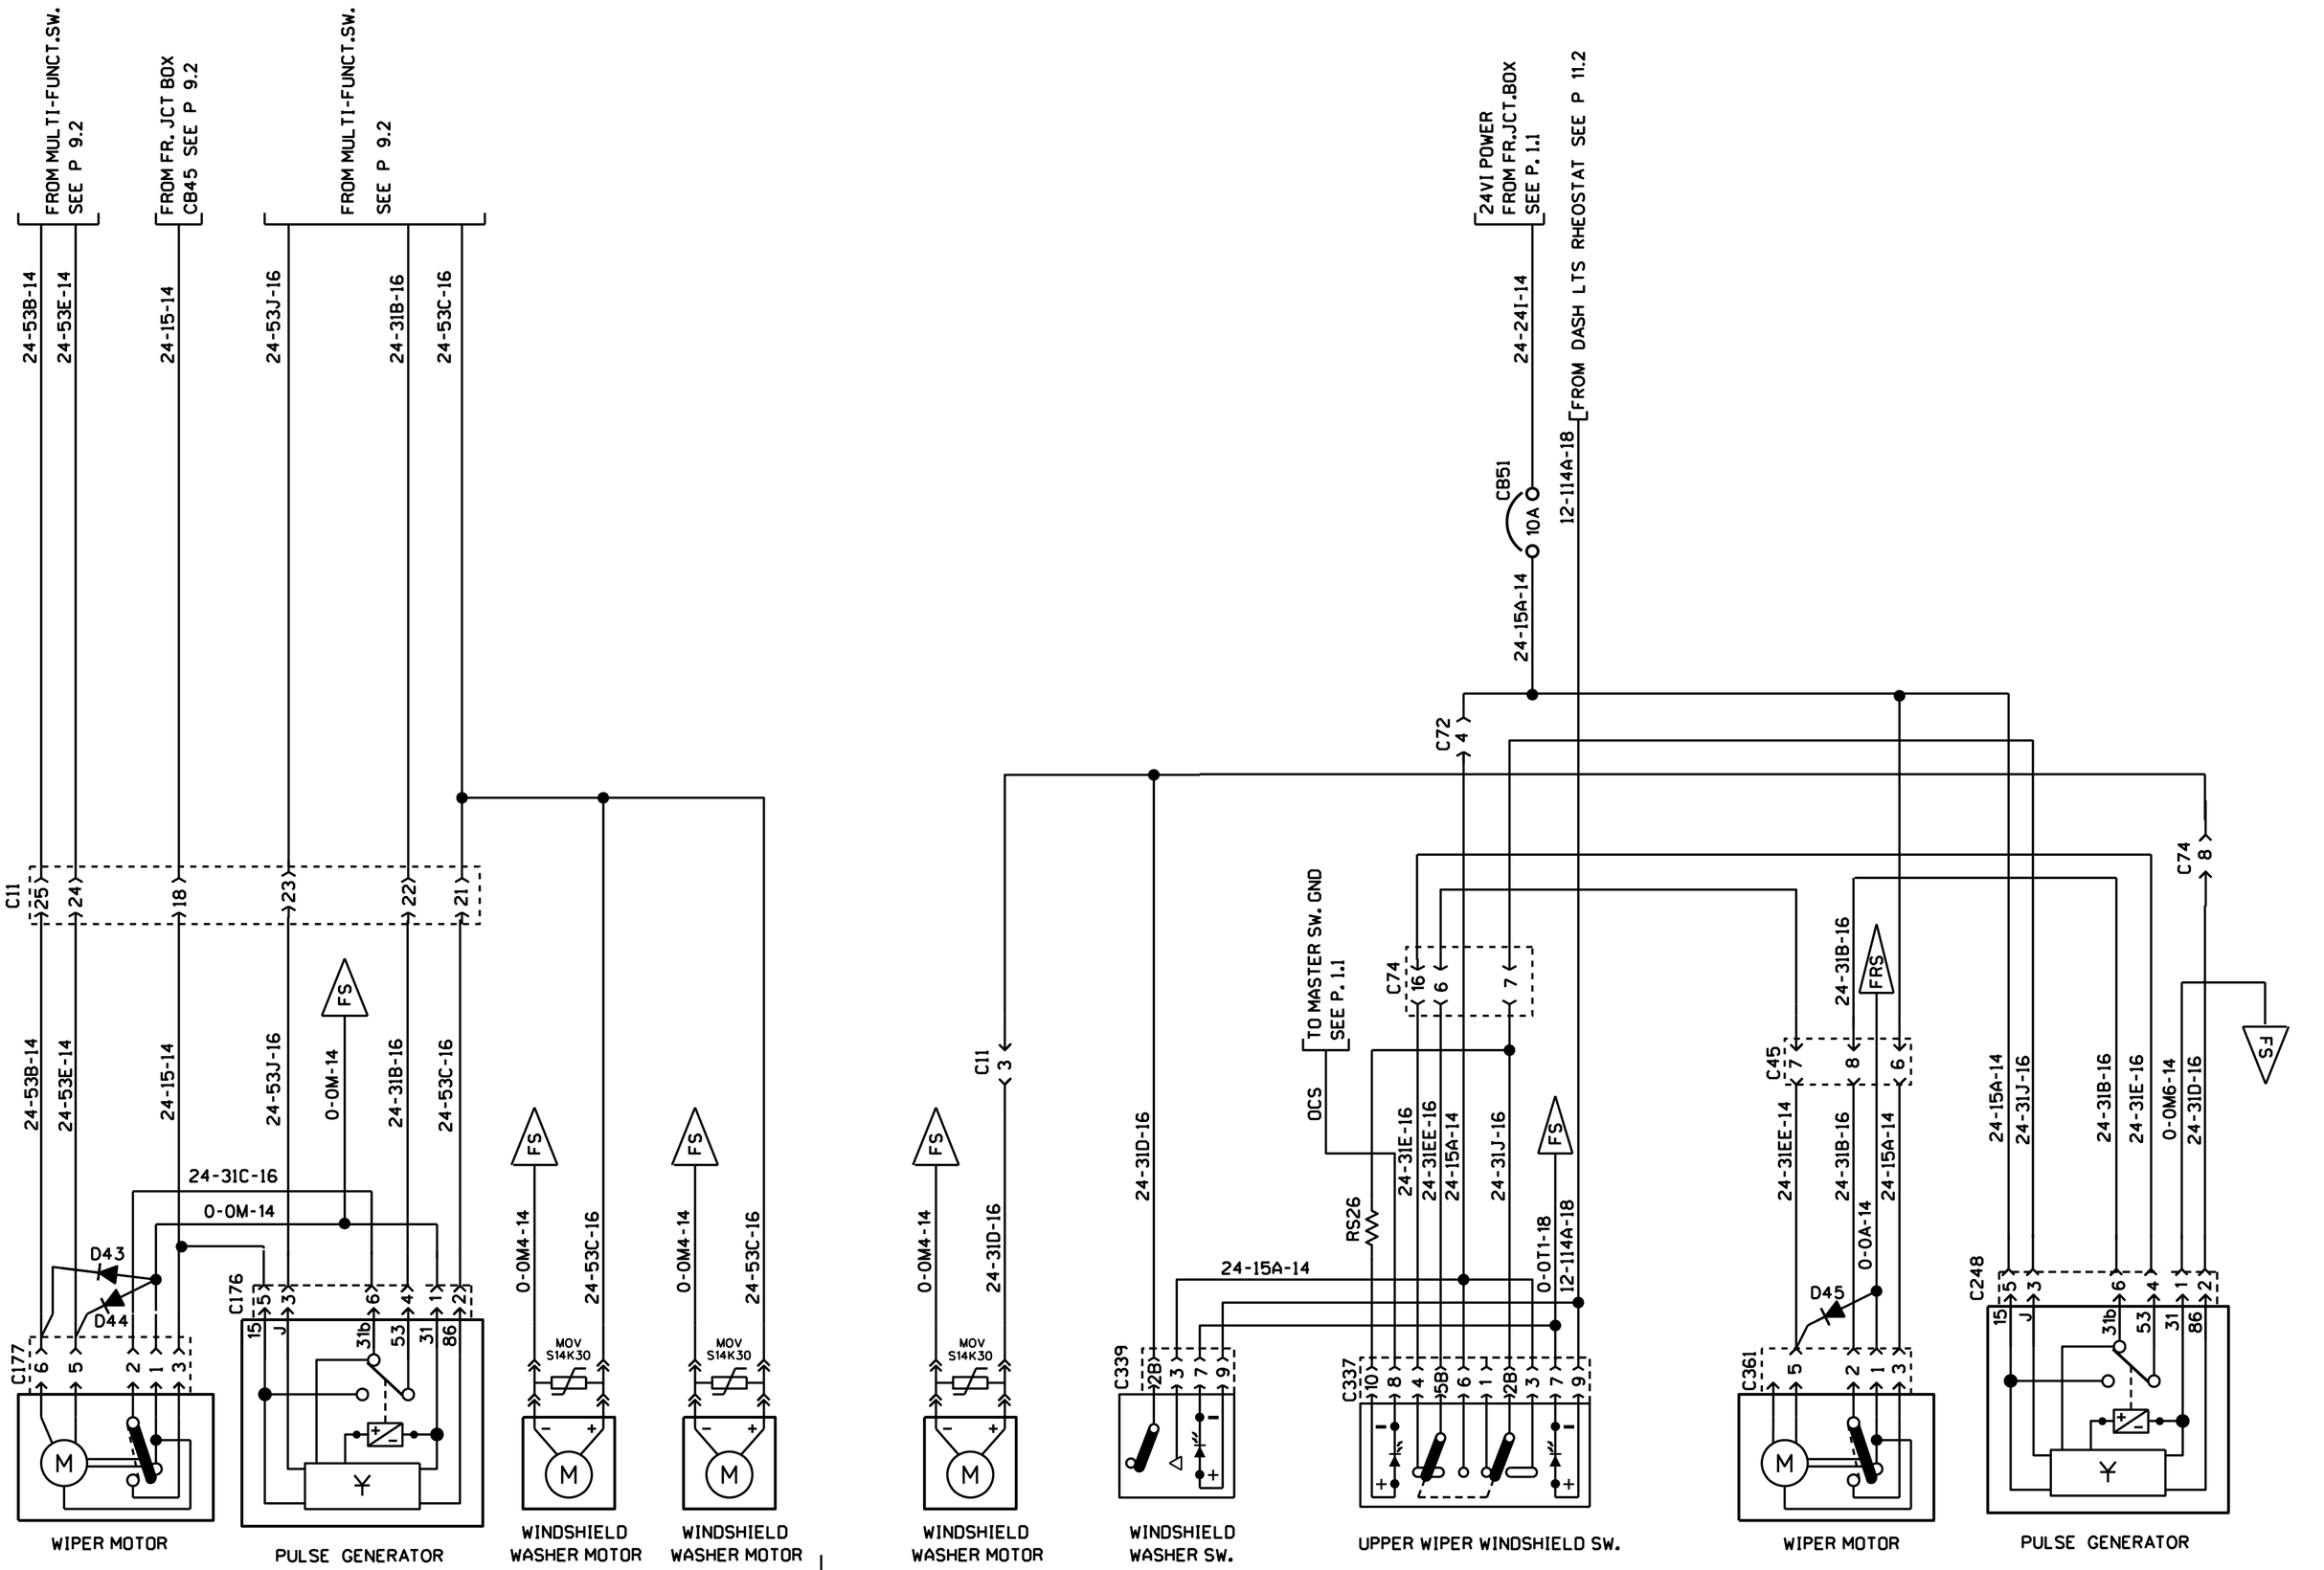

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 10.1	REVISION 01

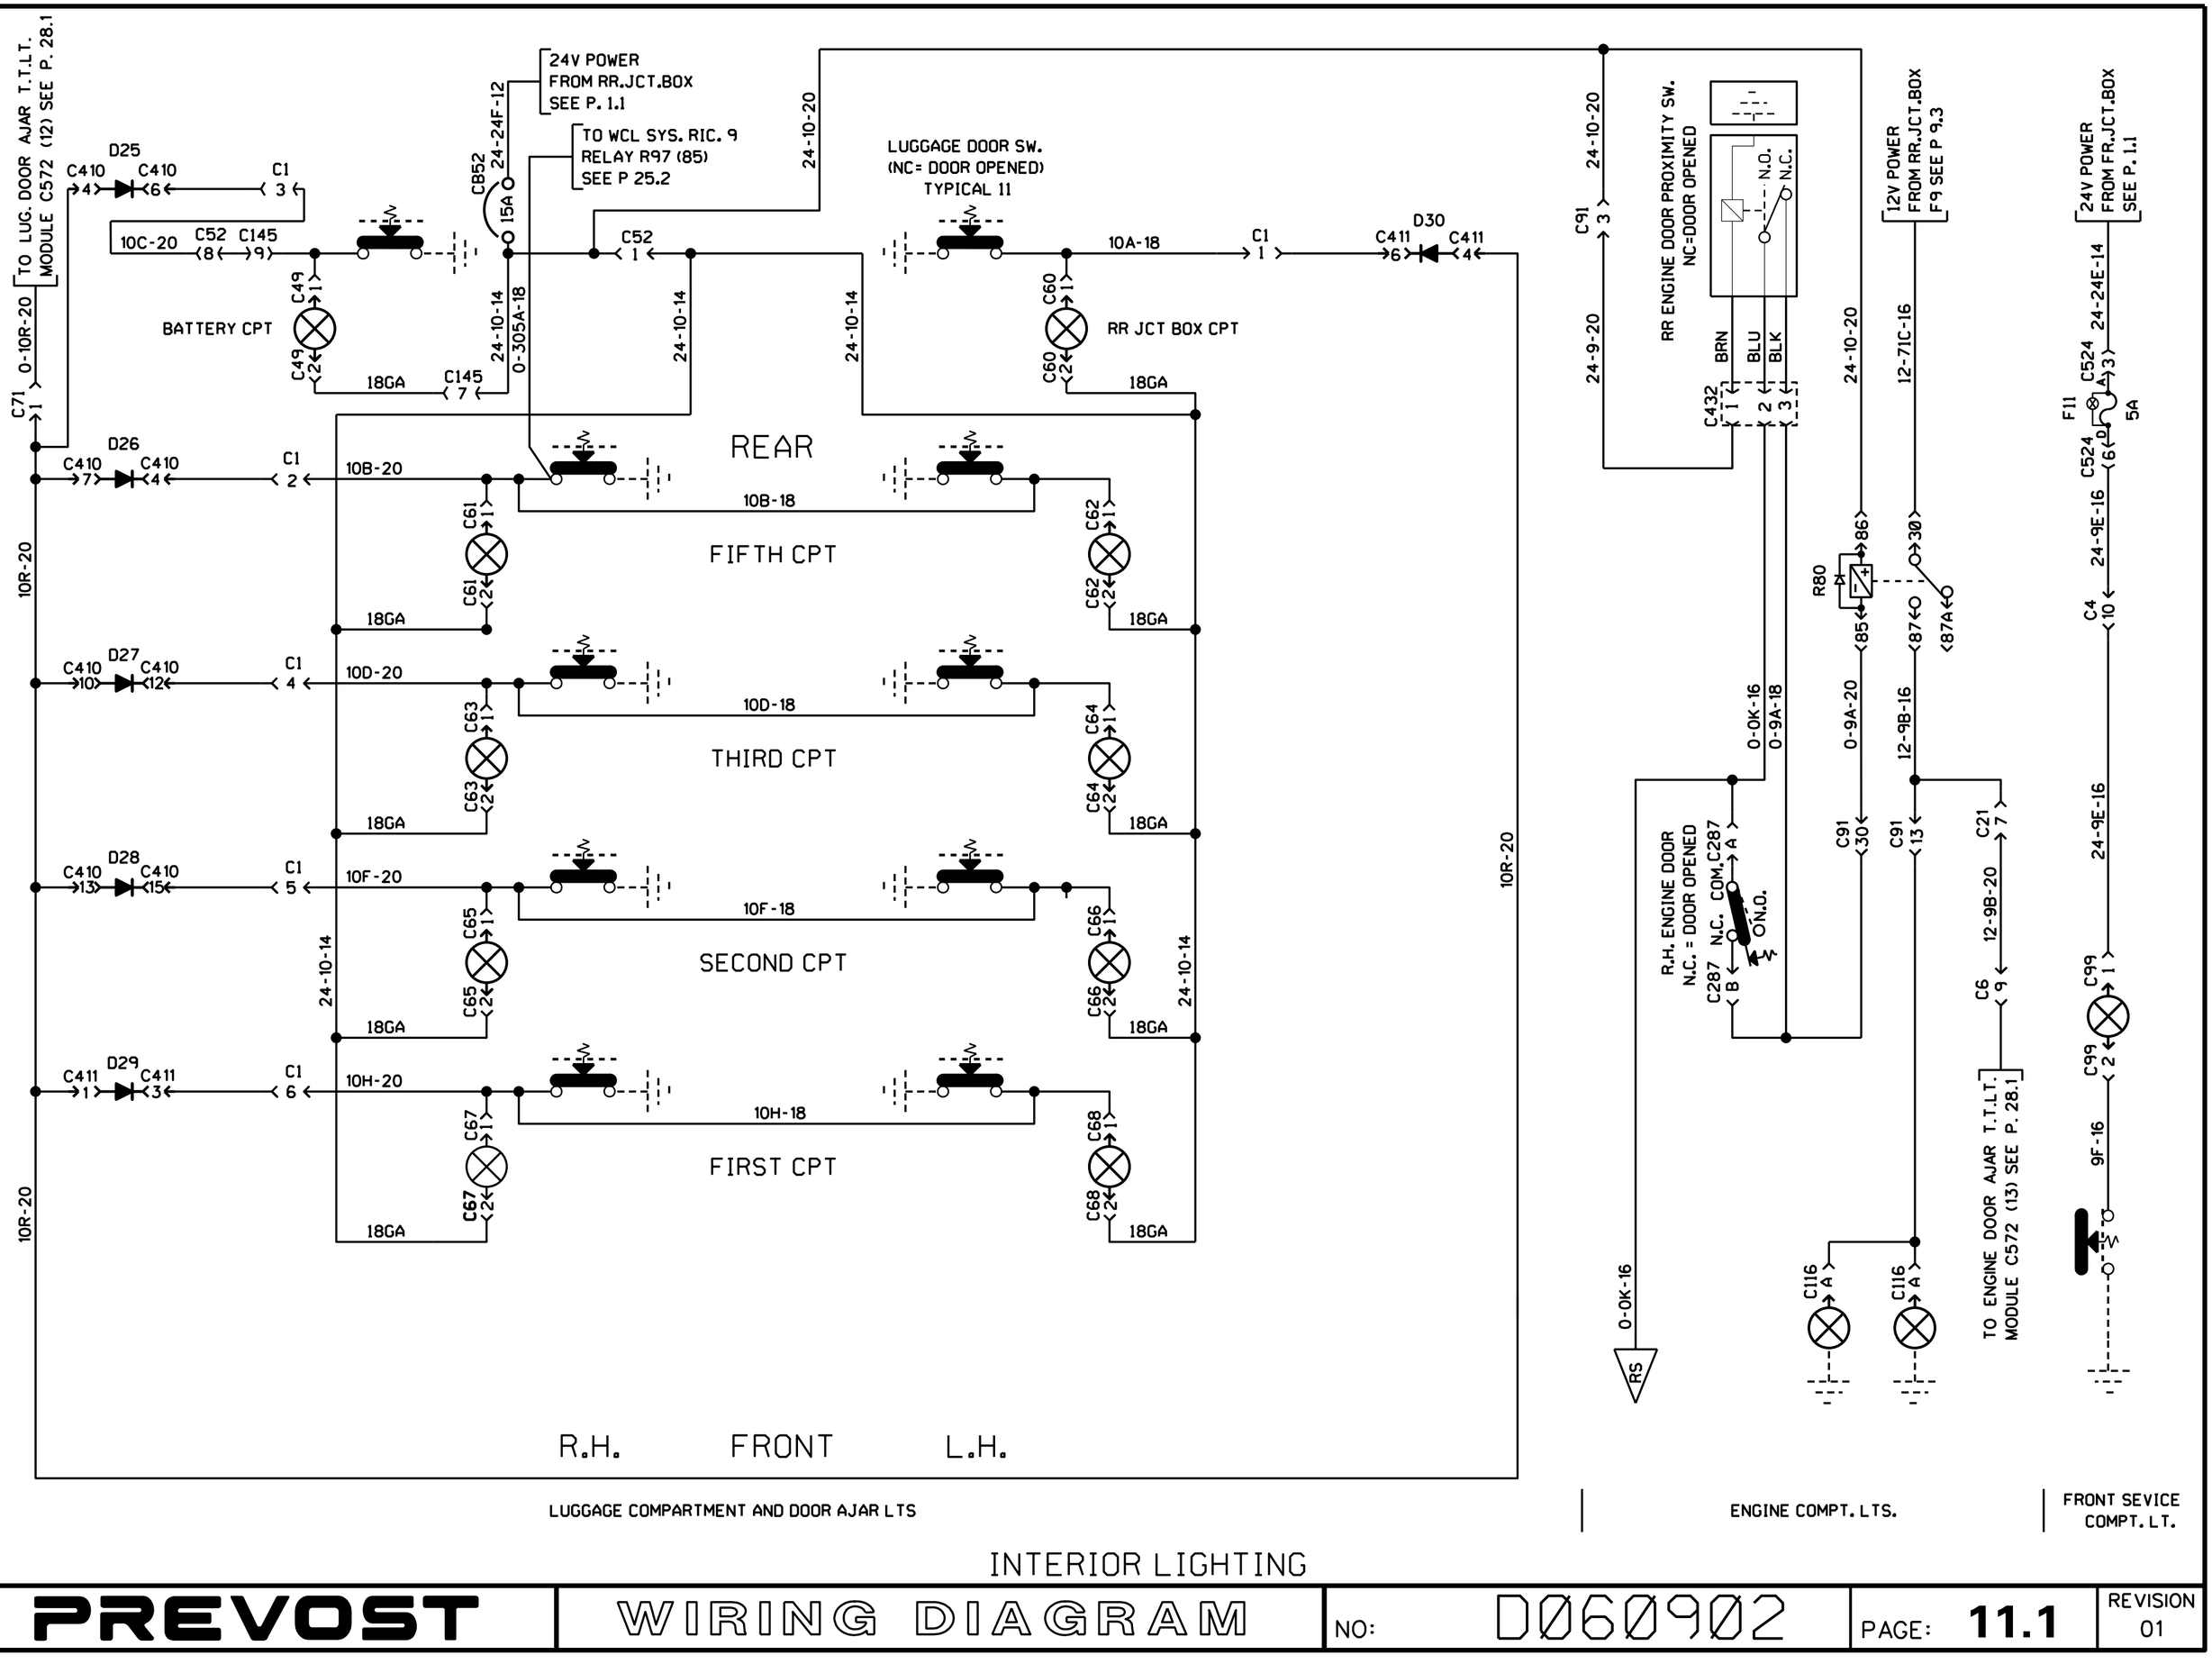

INTERIOR LIGHTING

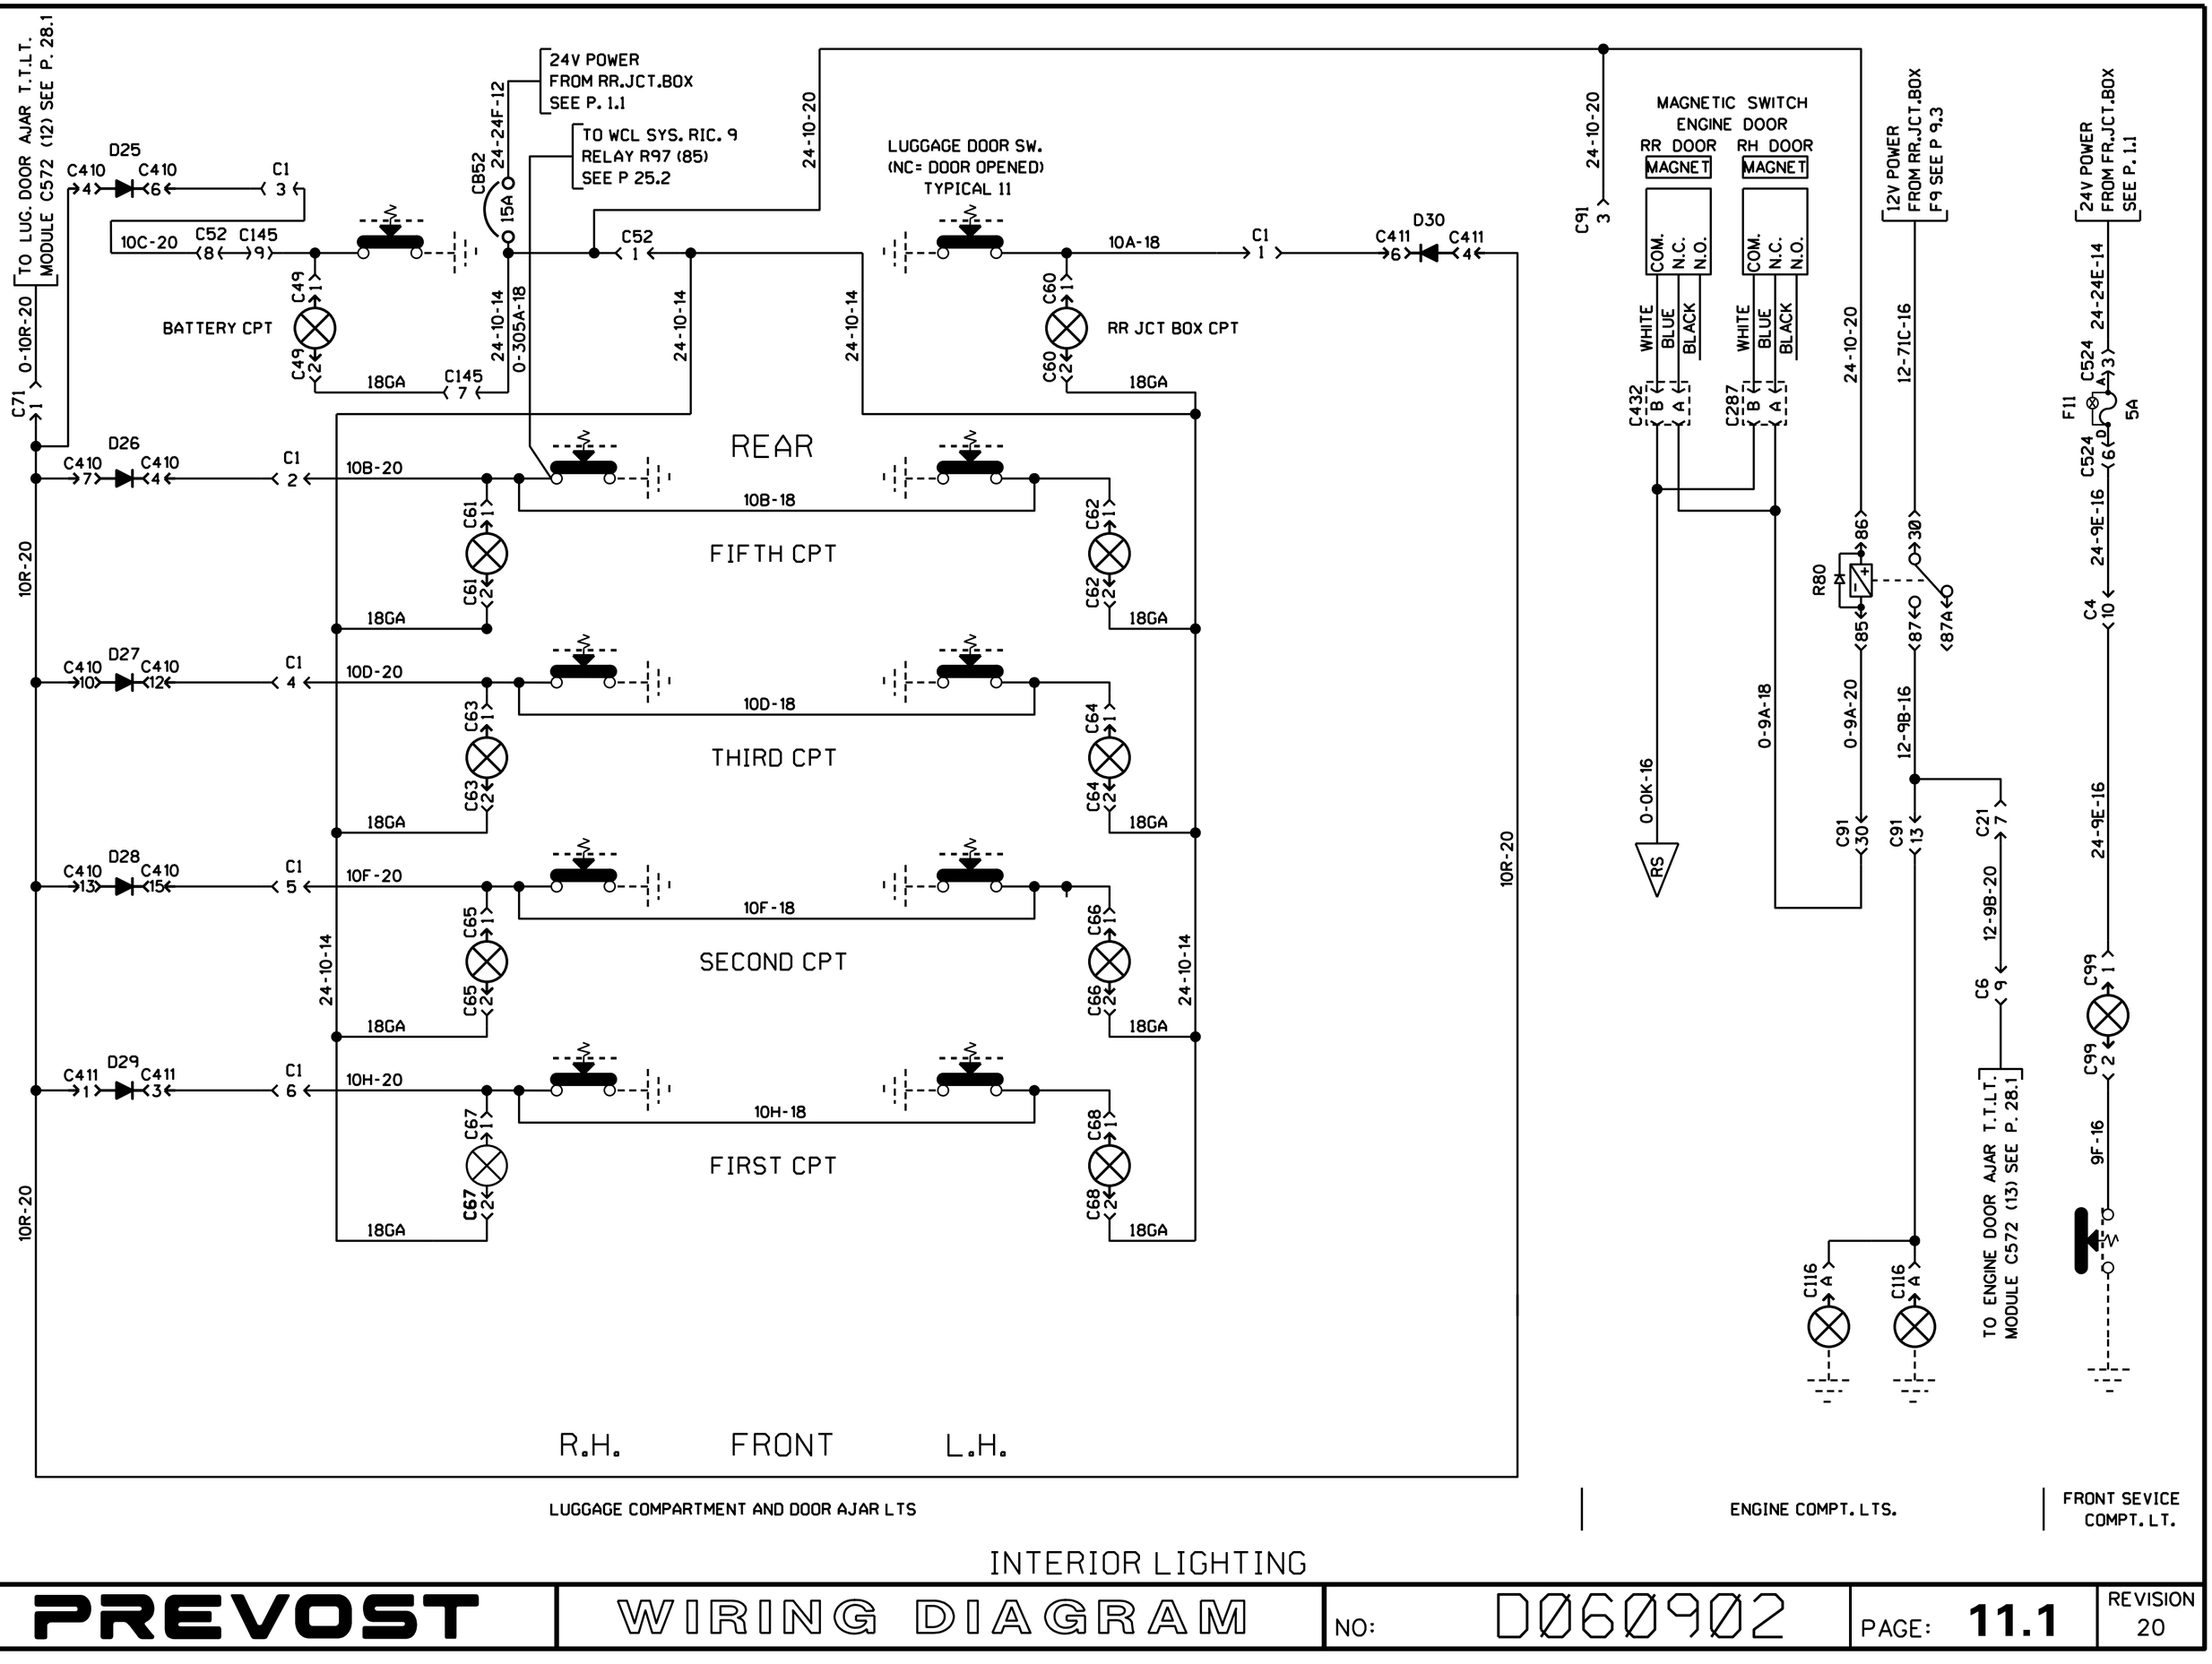

INTERIOR LIGHTING

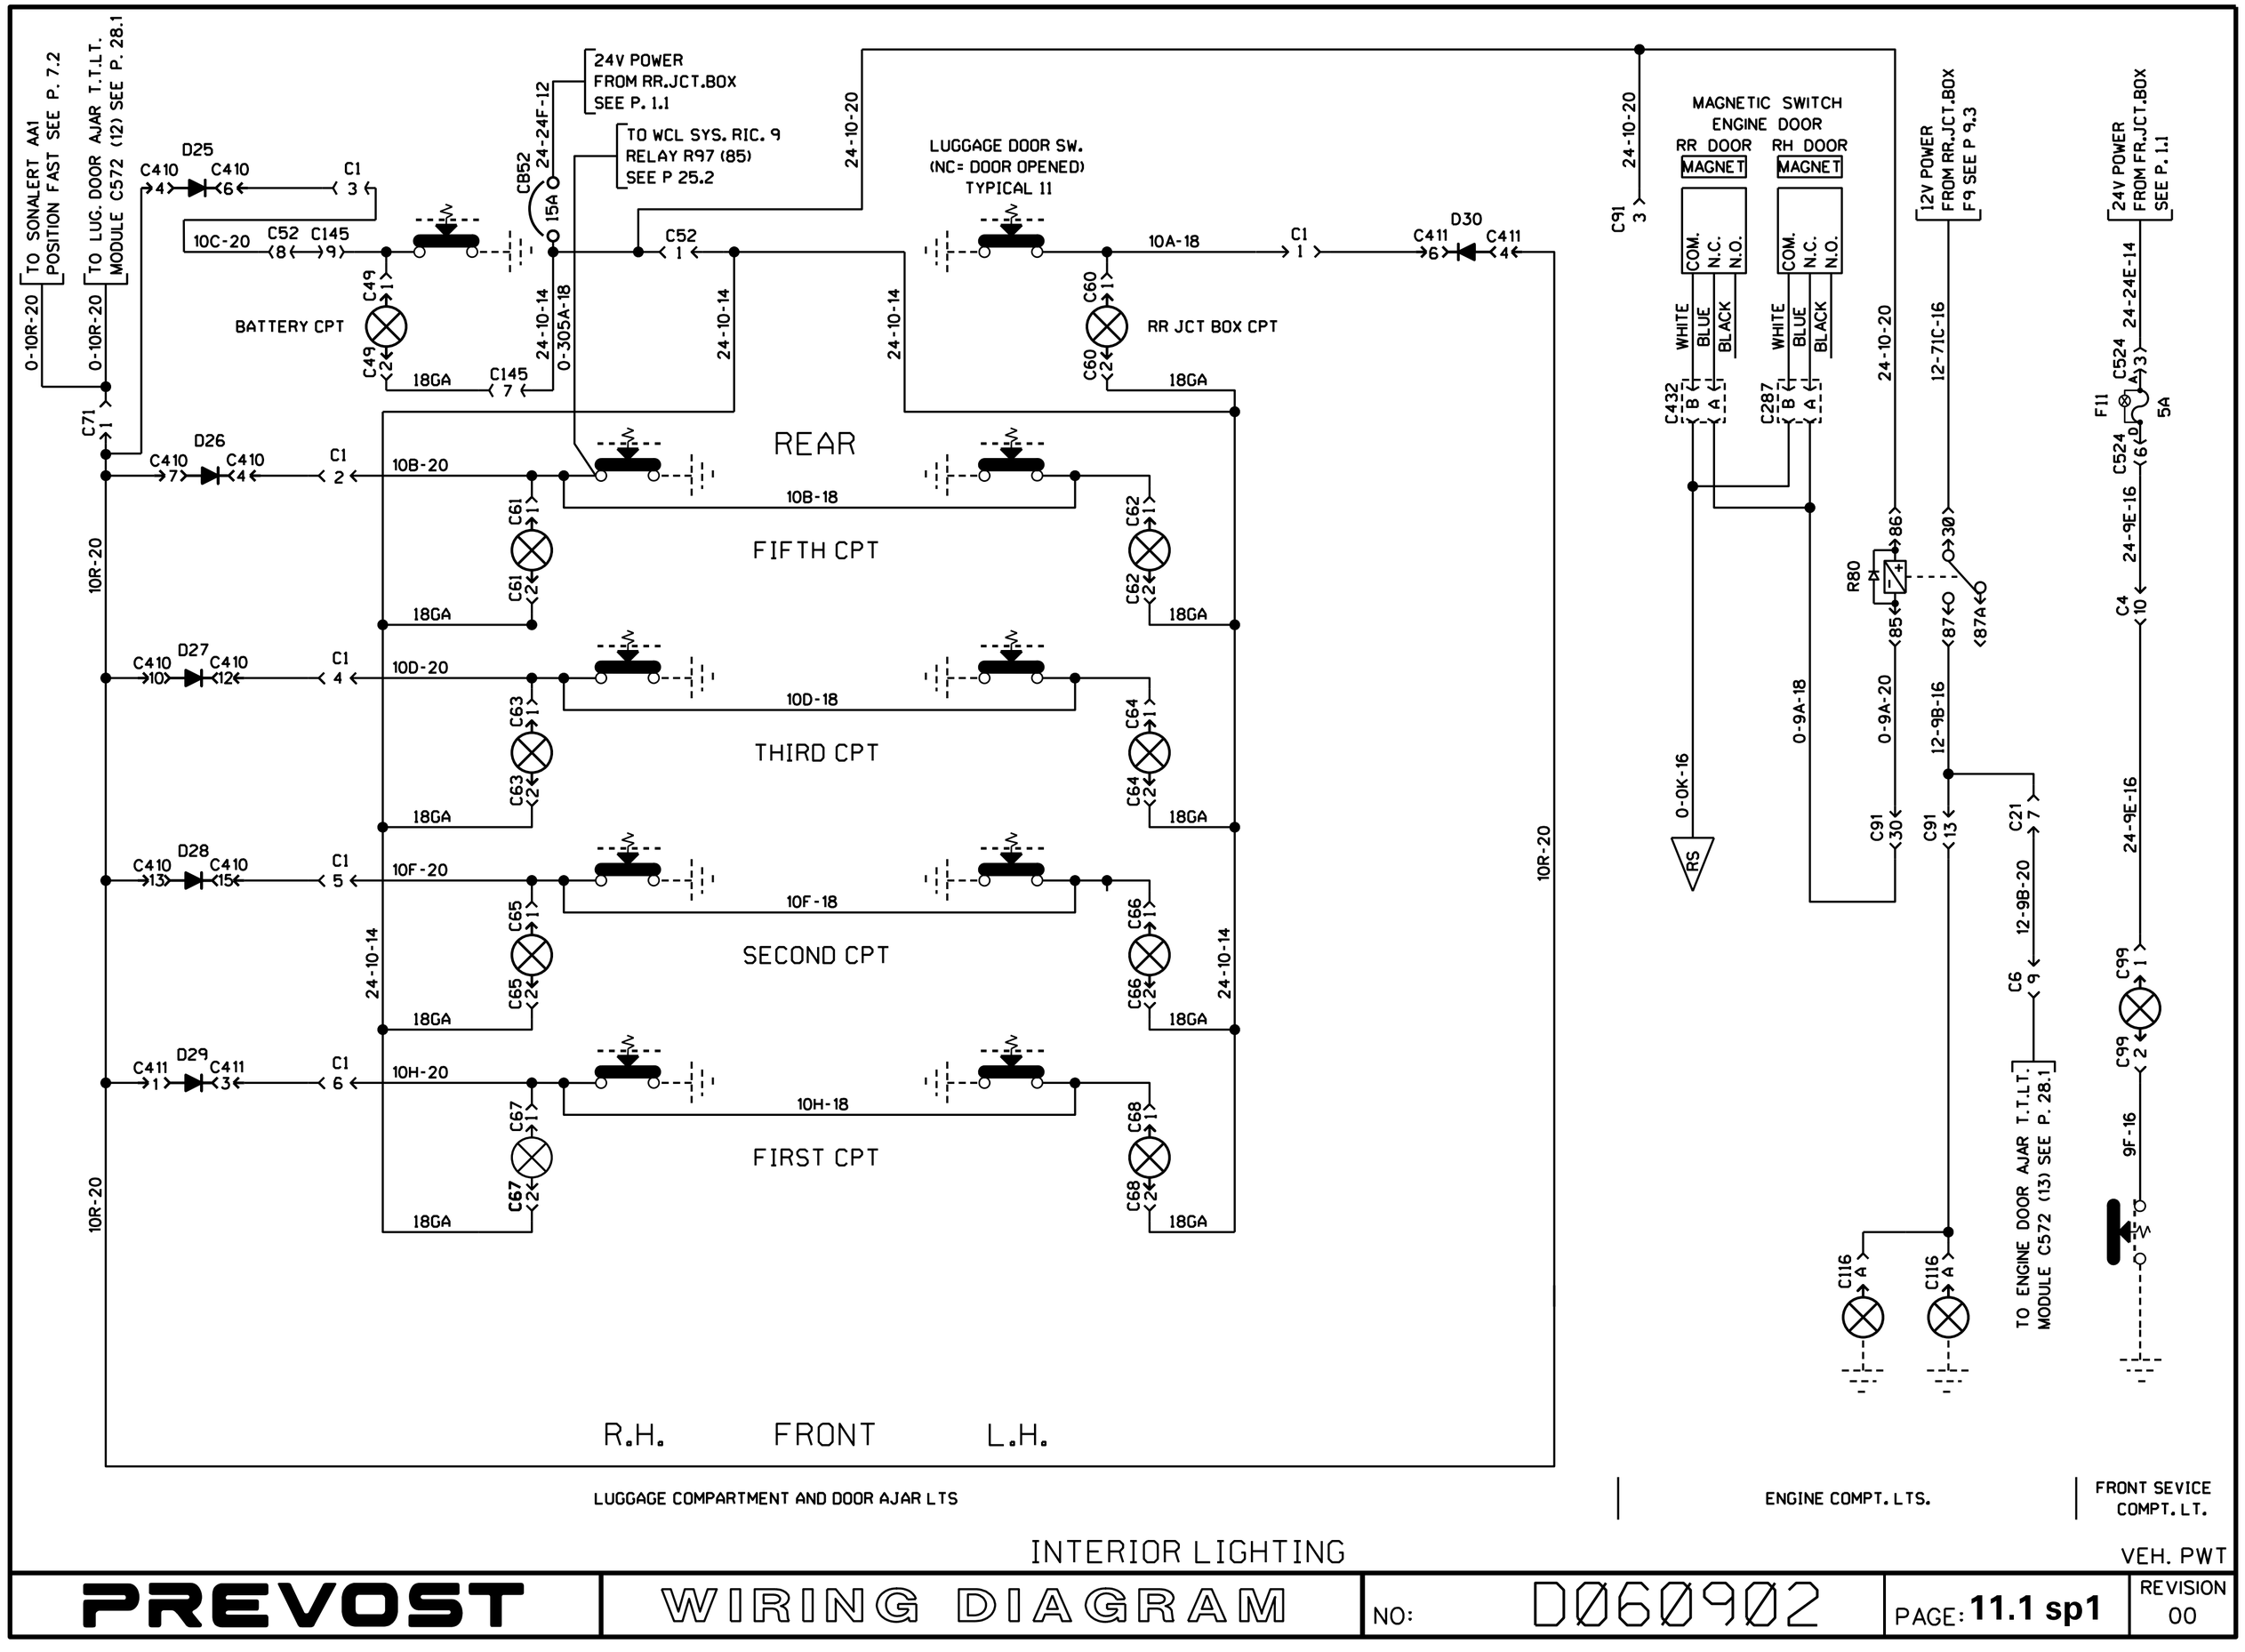

INTERIOR LIGHTING

VEH. PWT

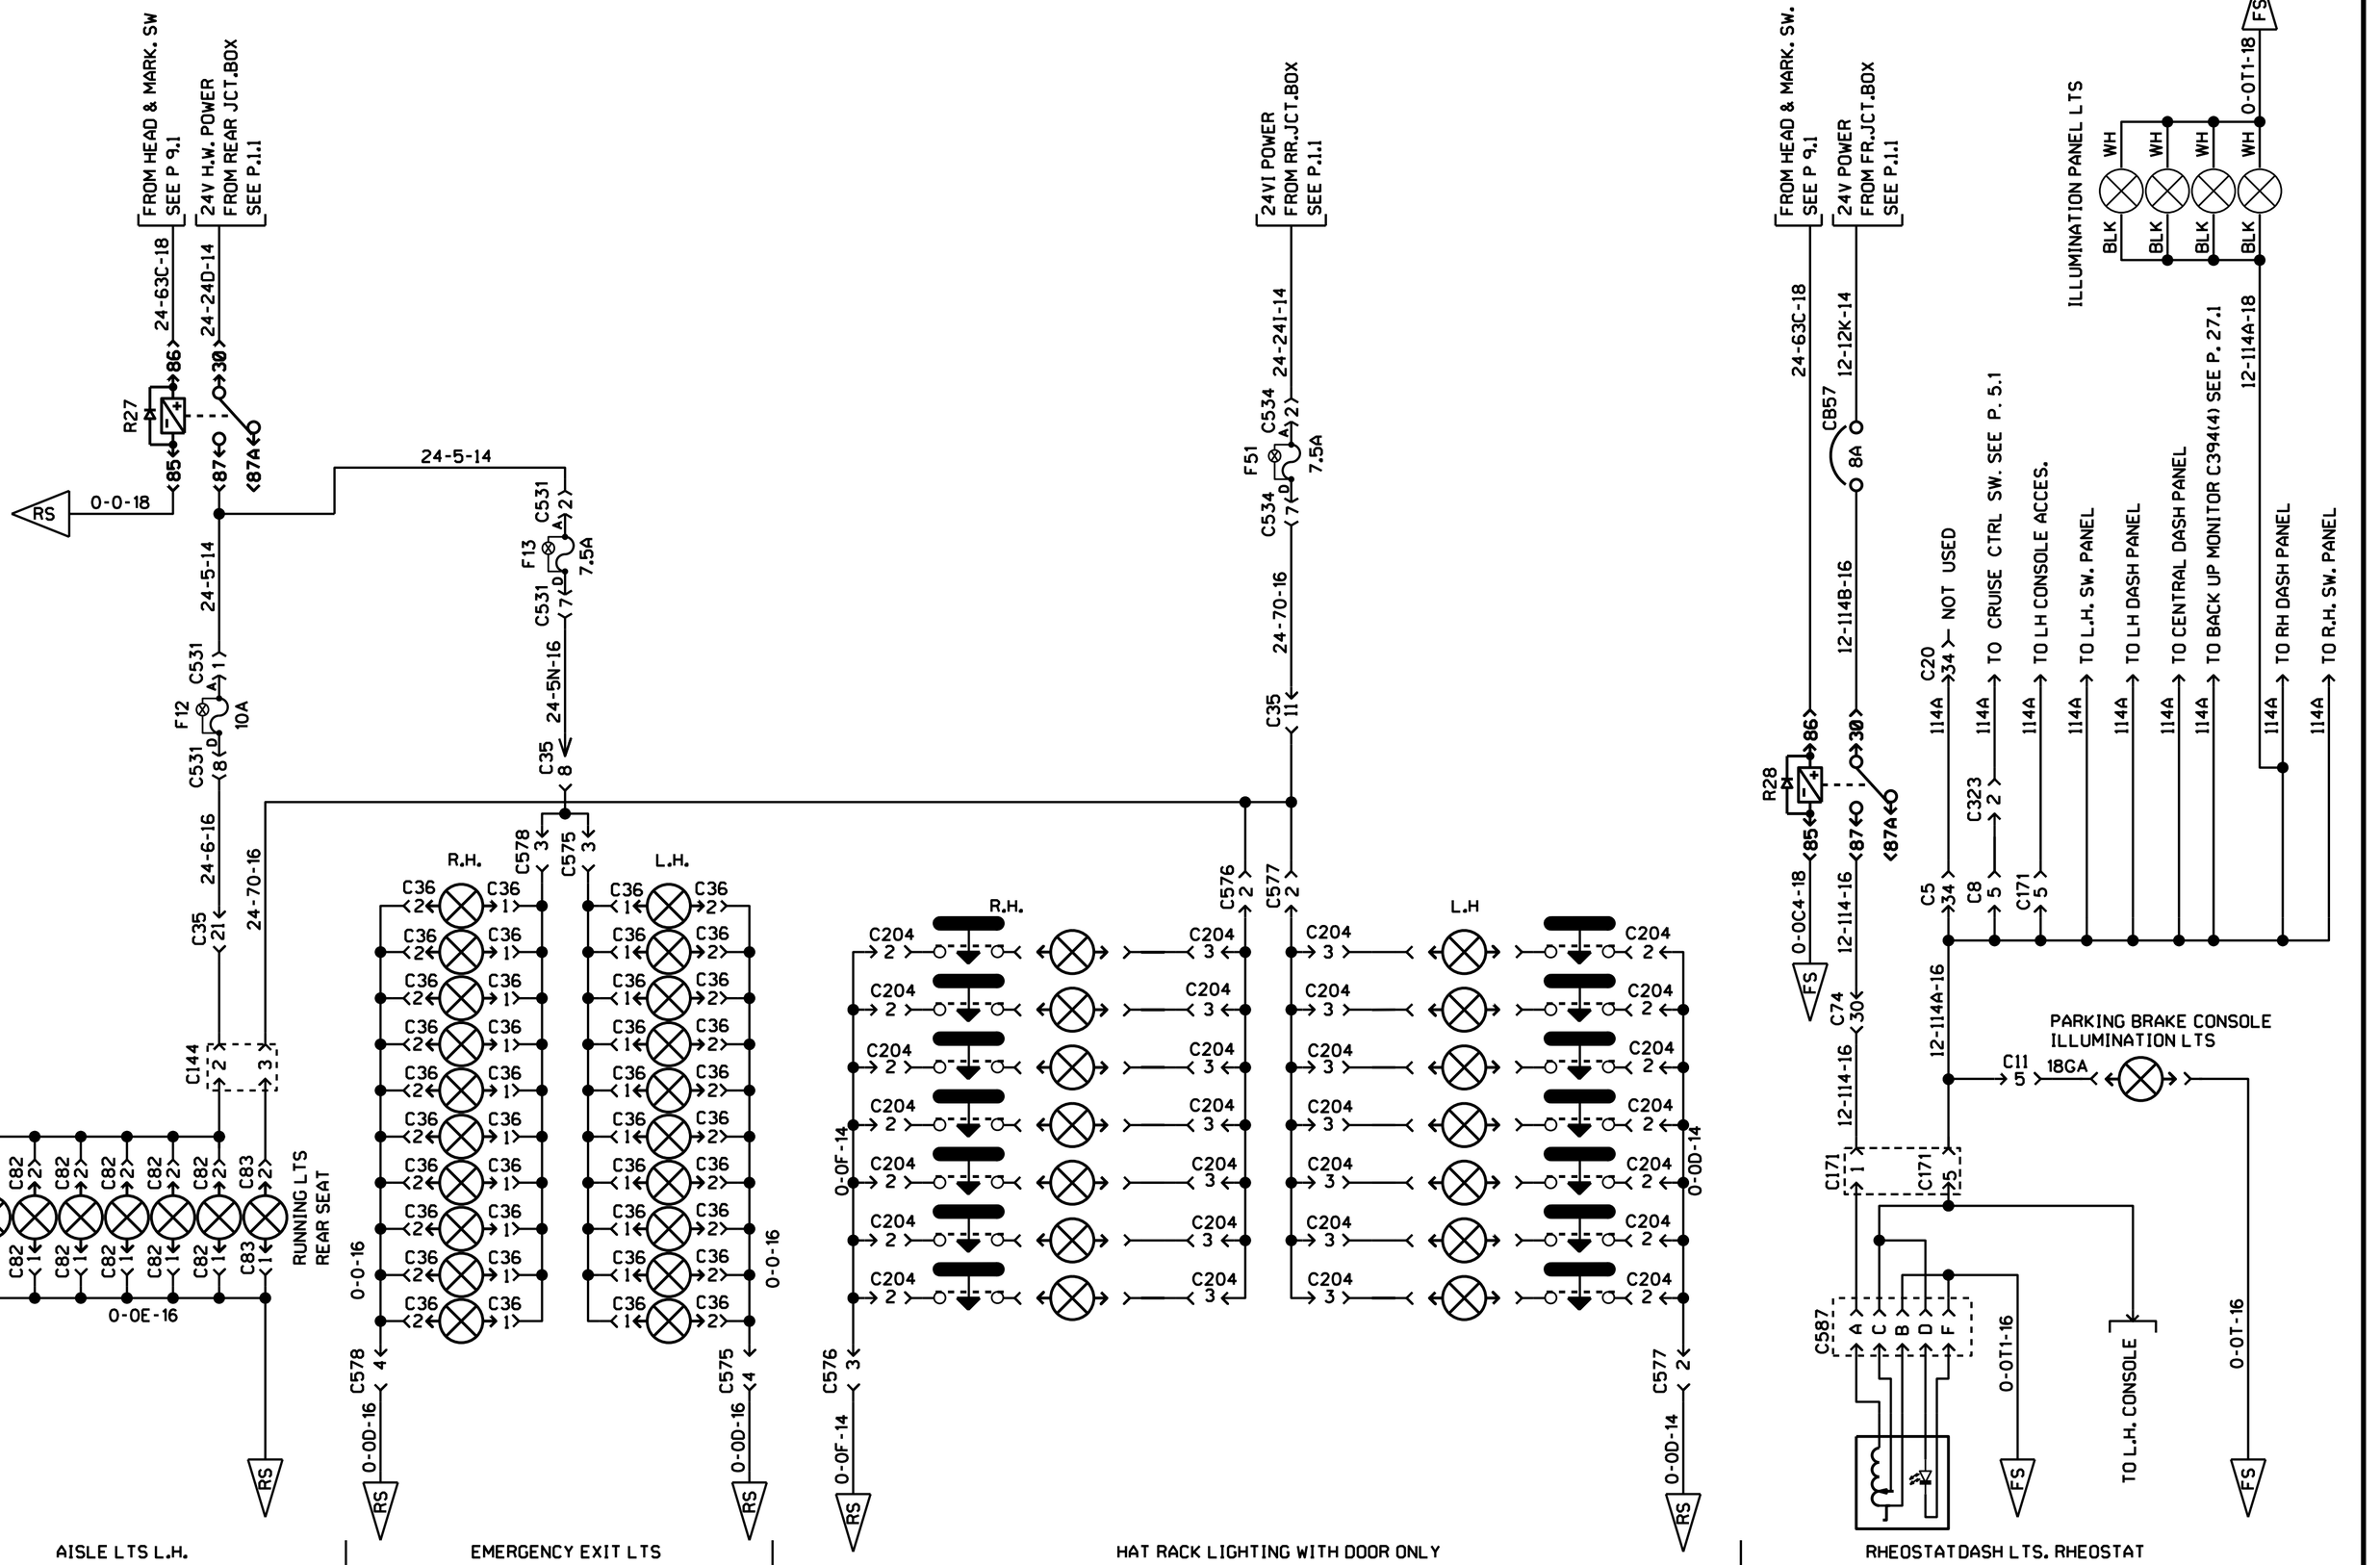

INTERIOR LIGHTING

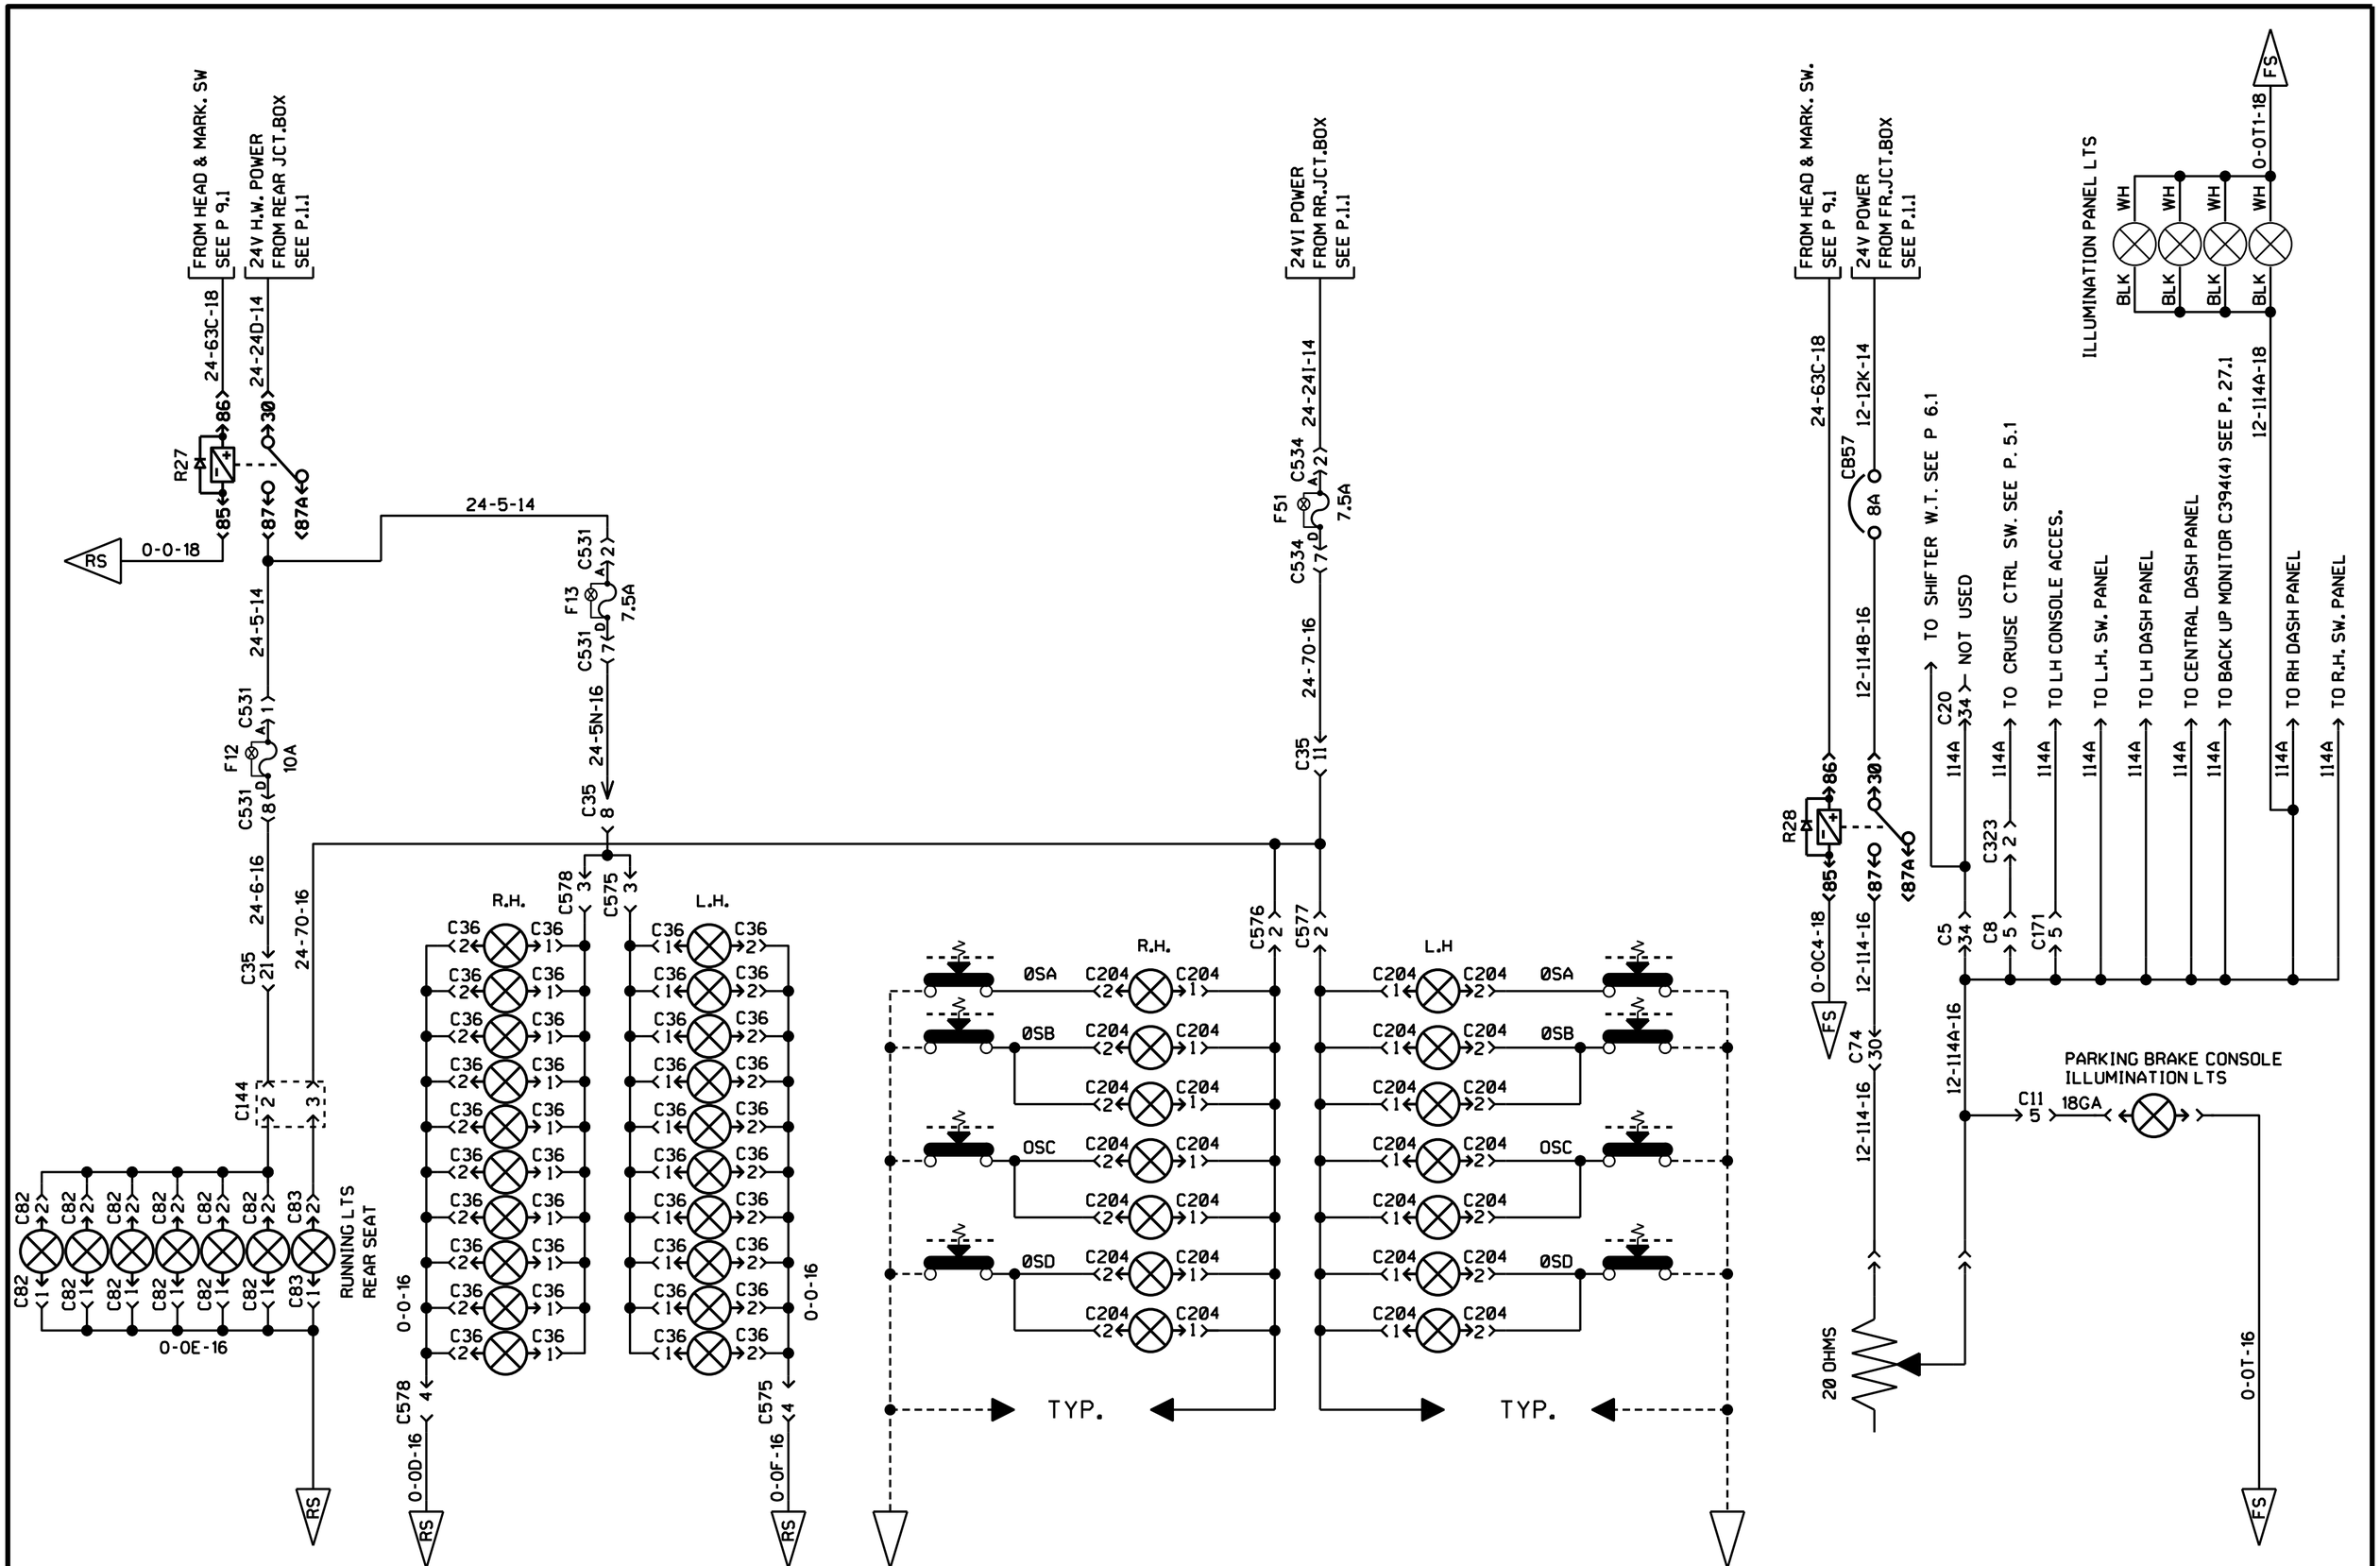

AISLE LTS L.H. | EMERGENCY EXIT LTS | HAT RACK LIGHTING WITH DOOR ONLY | RHEOSTATDASH LTS. RHEOSTAT

INTERIOR LIGHTING

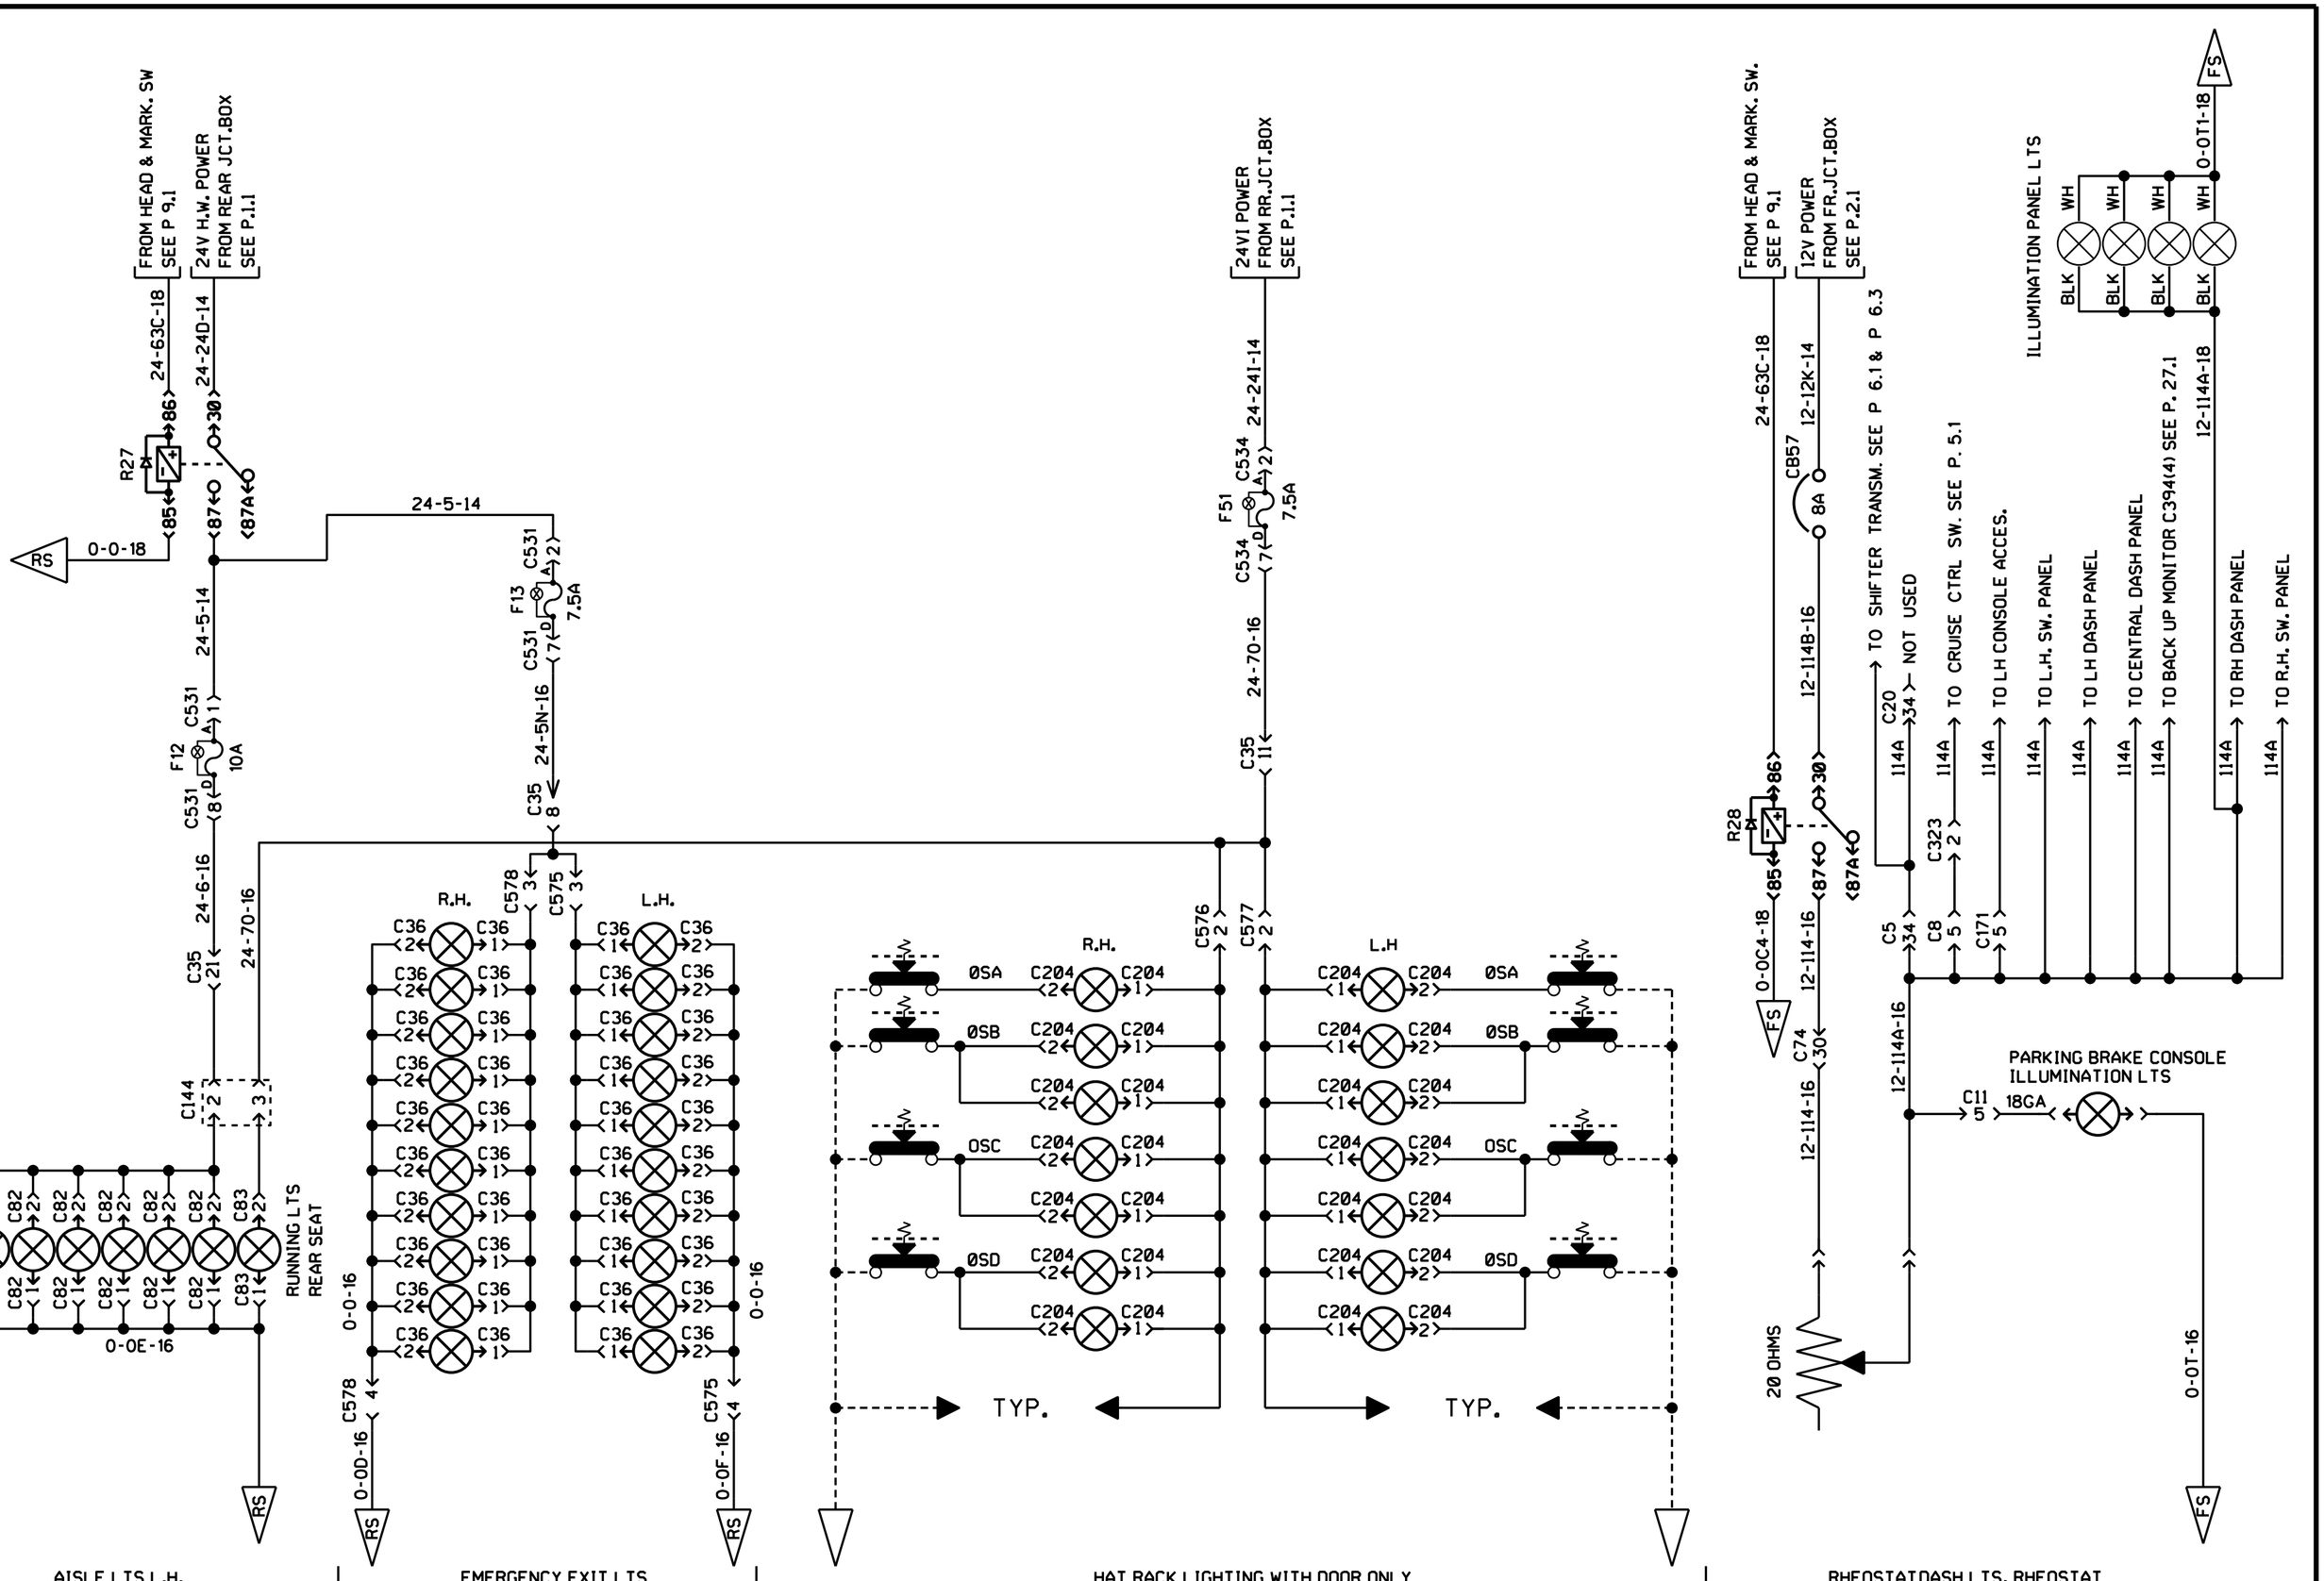

INTERIOR LIGHTING

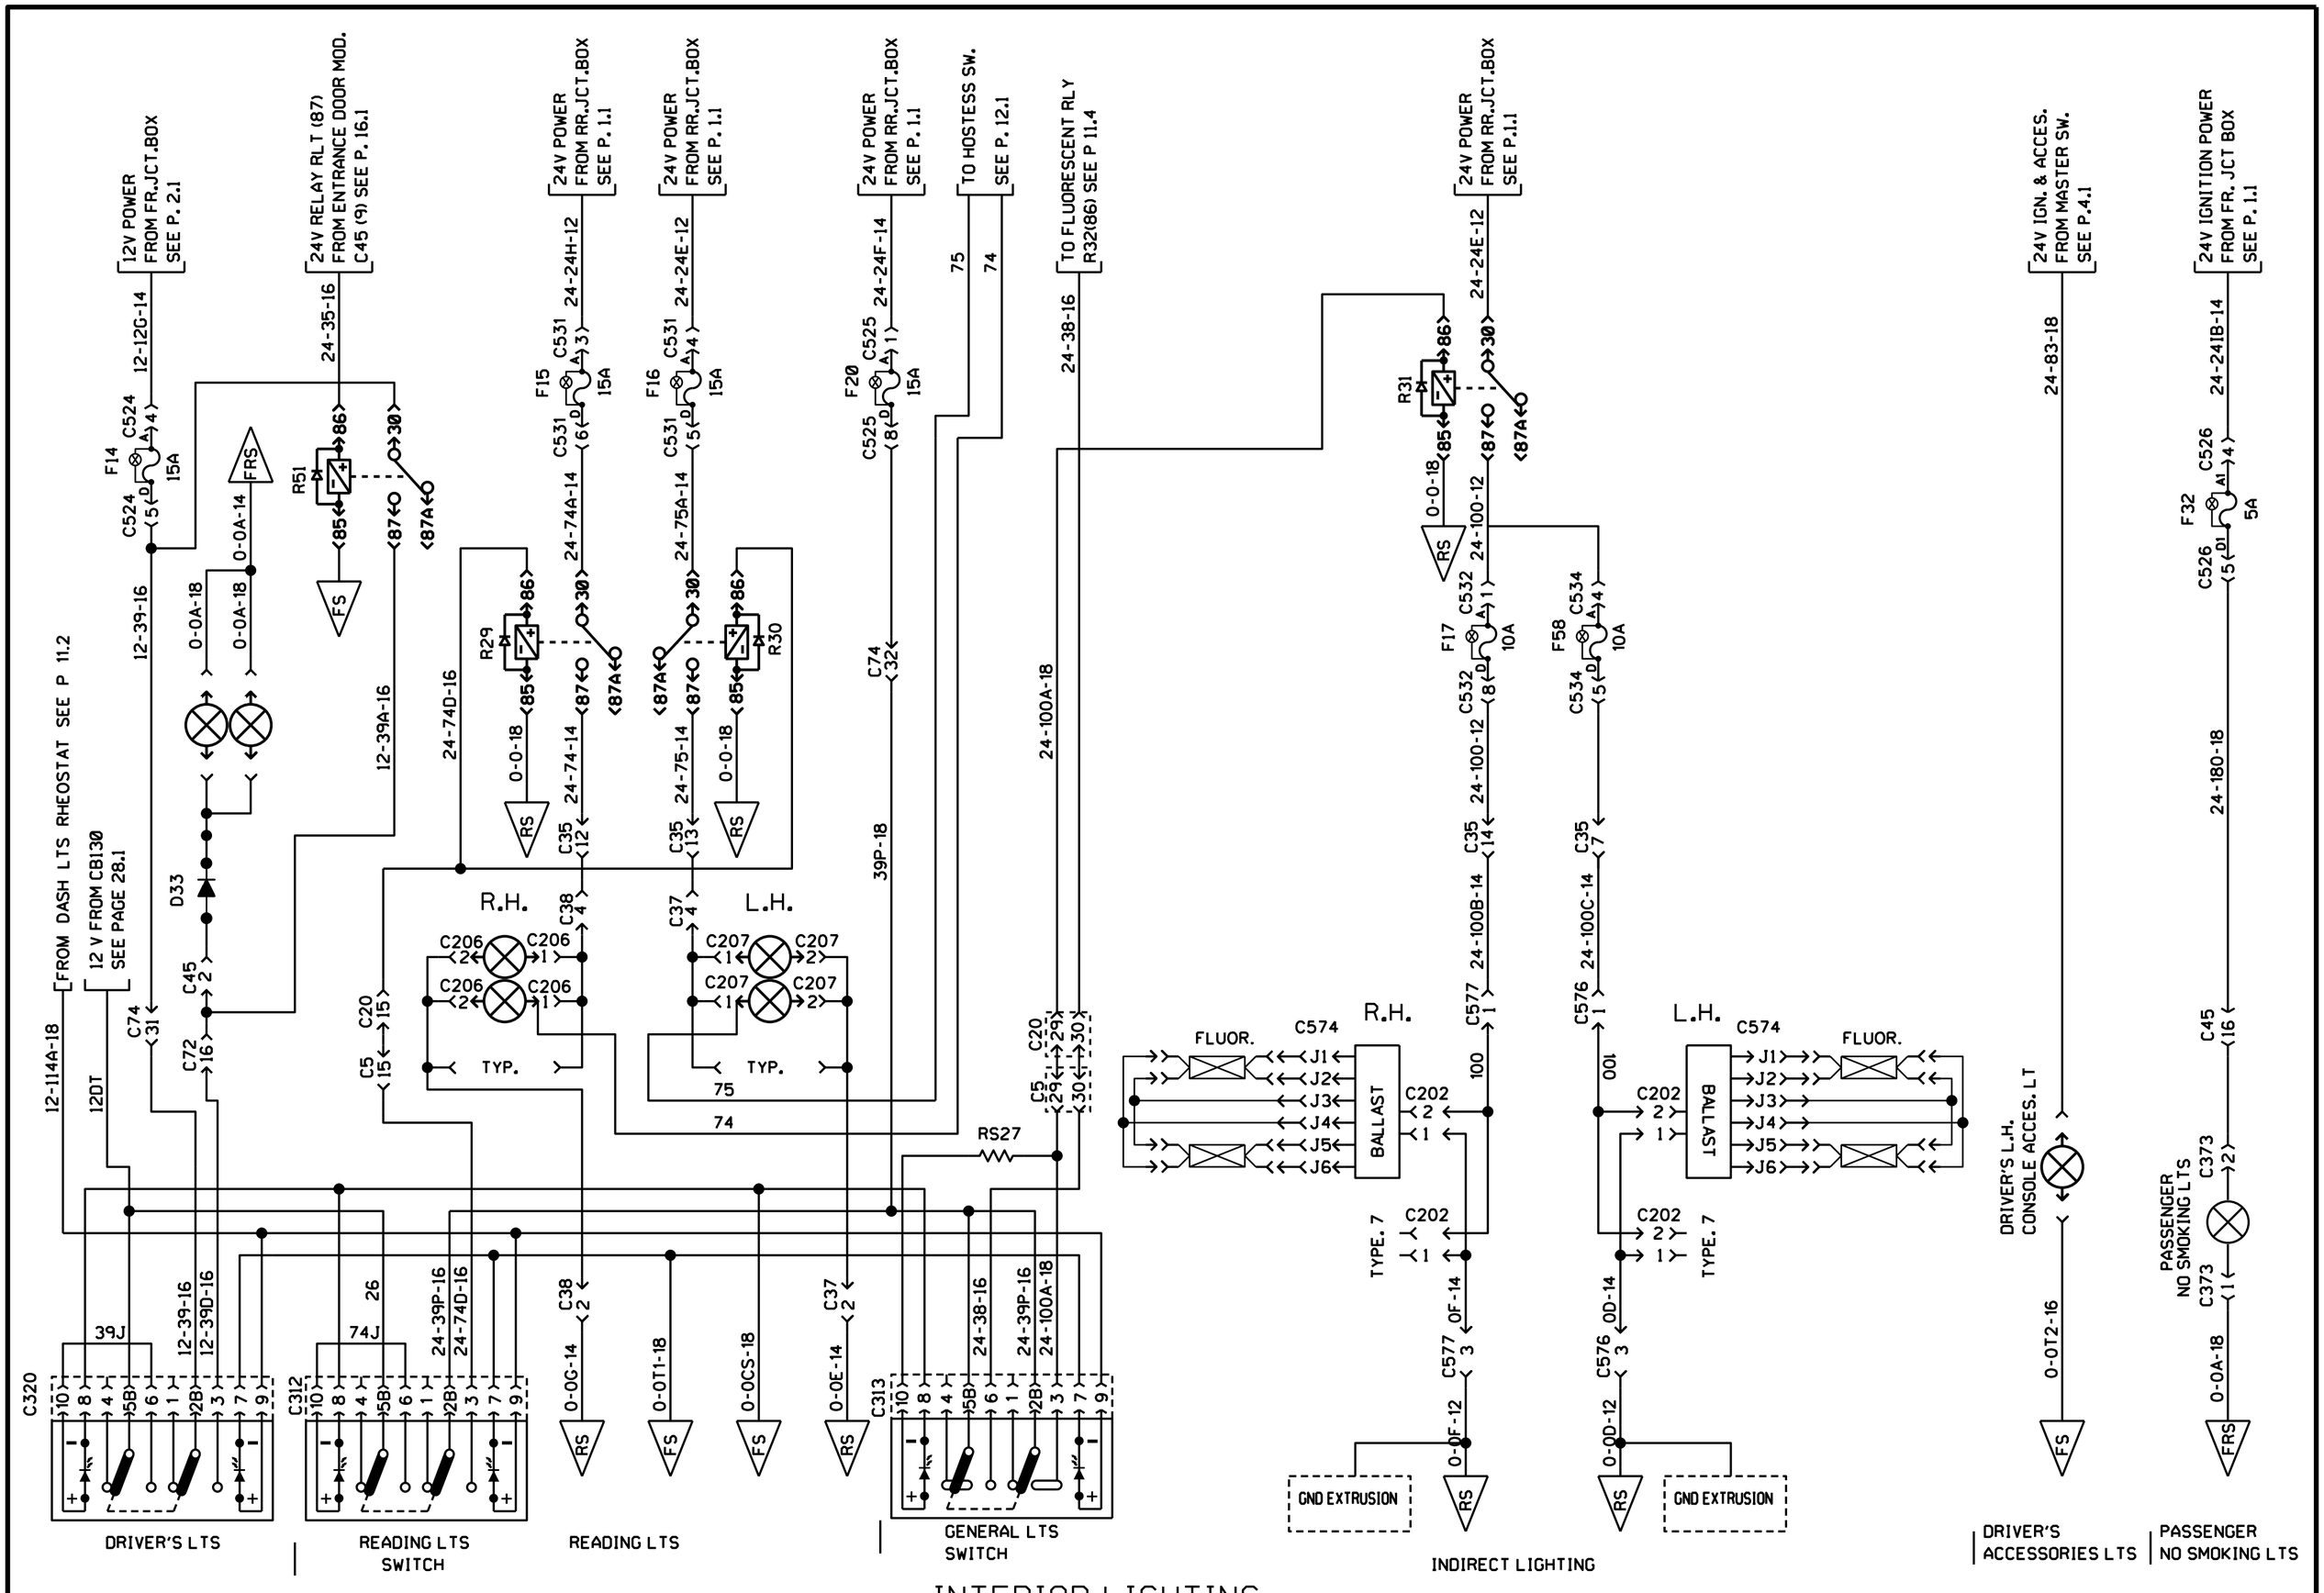

INTERIOR LIGHTING

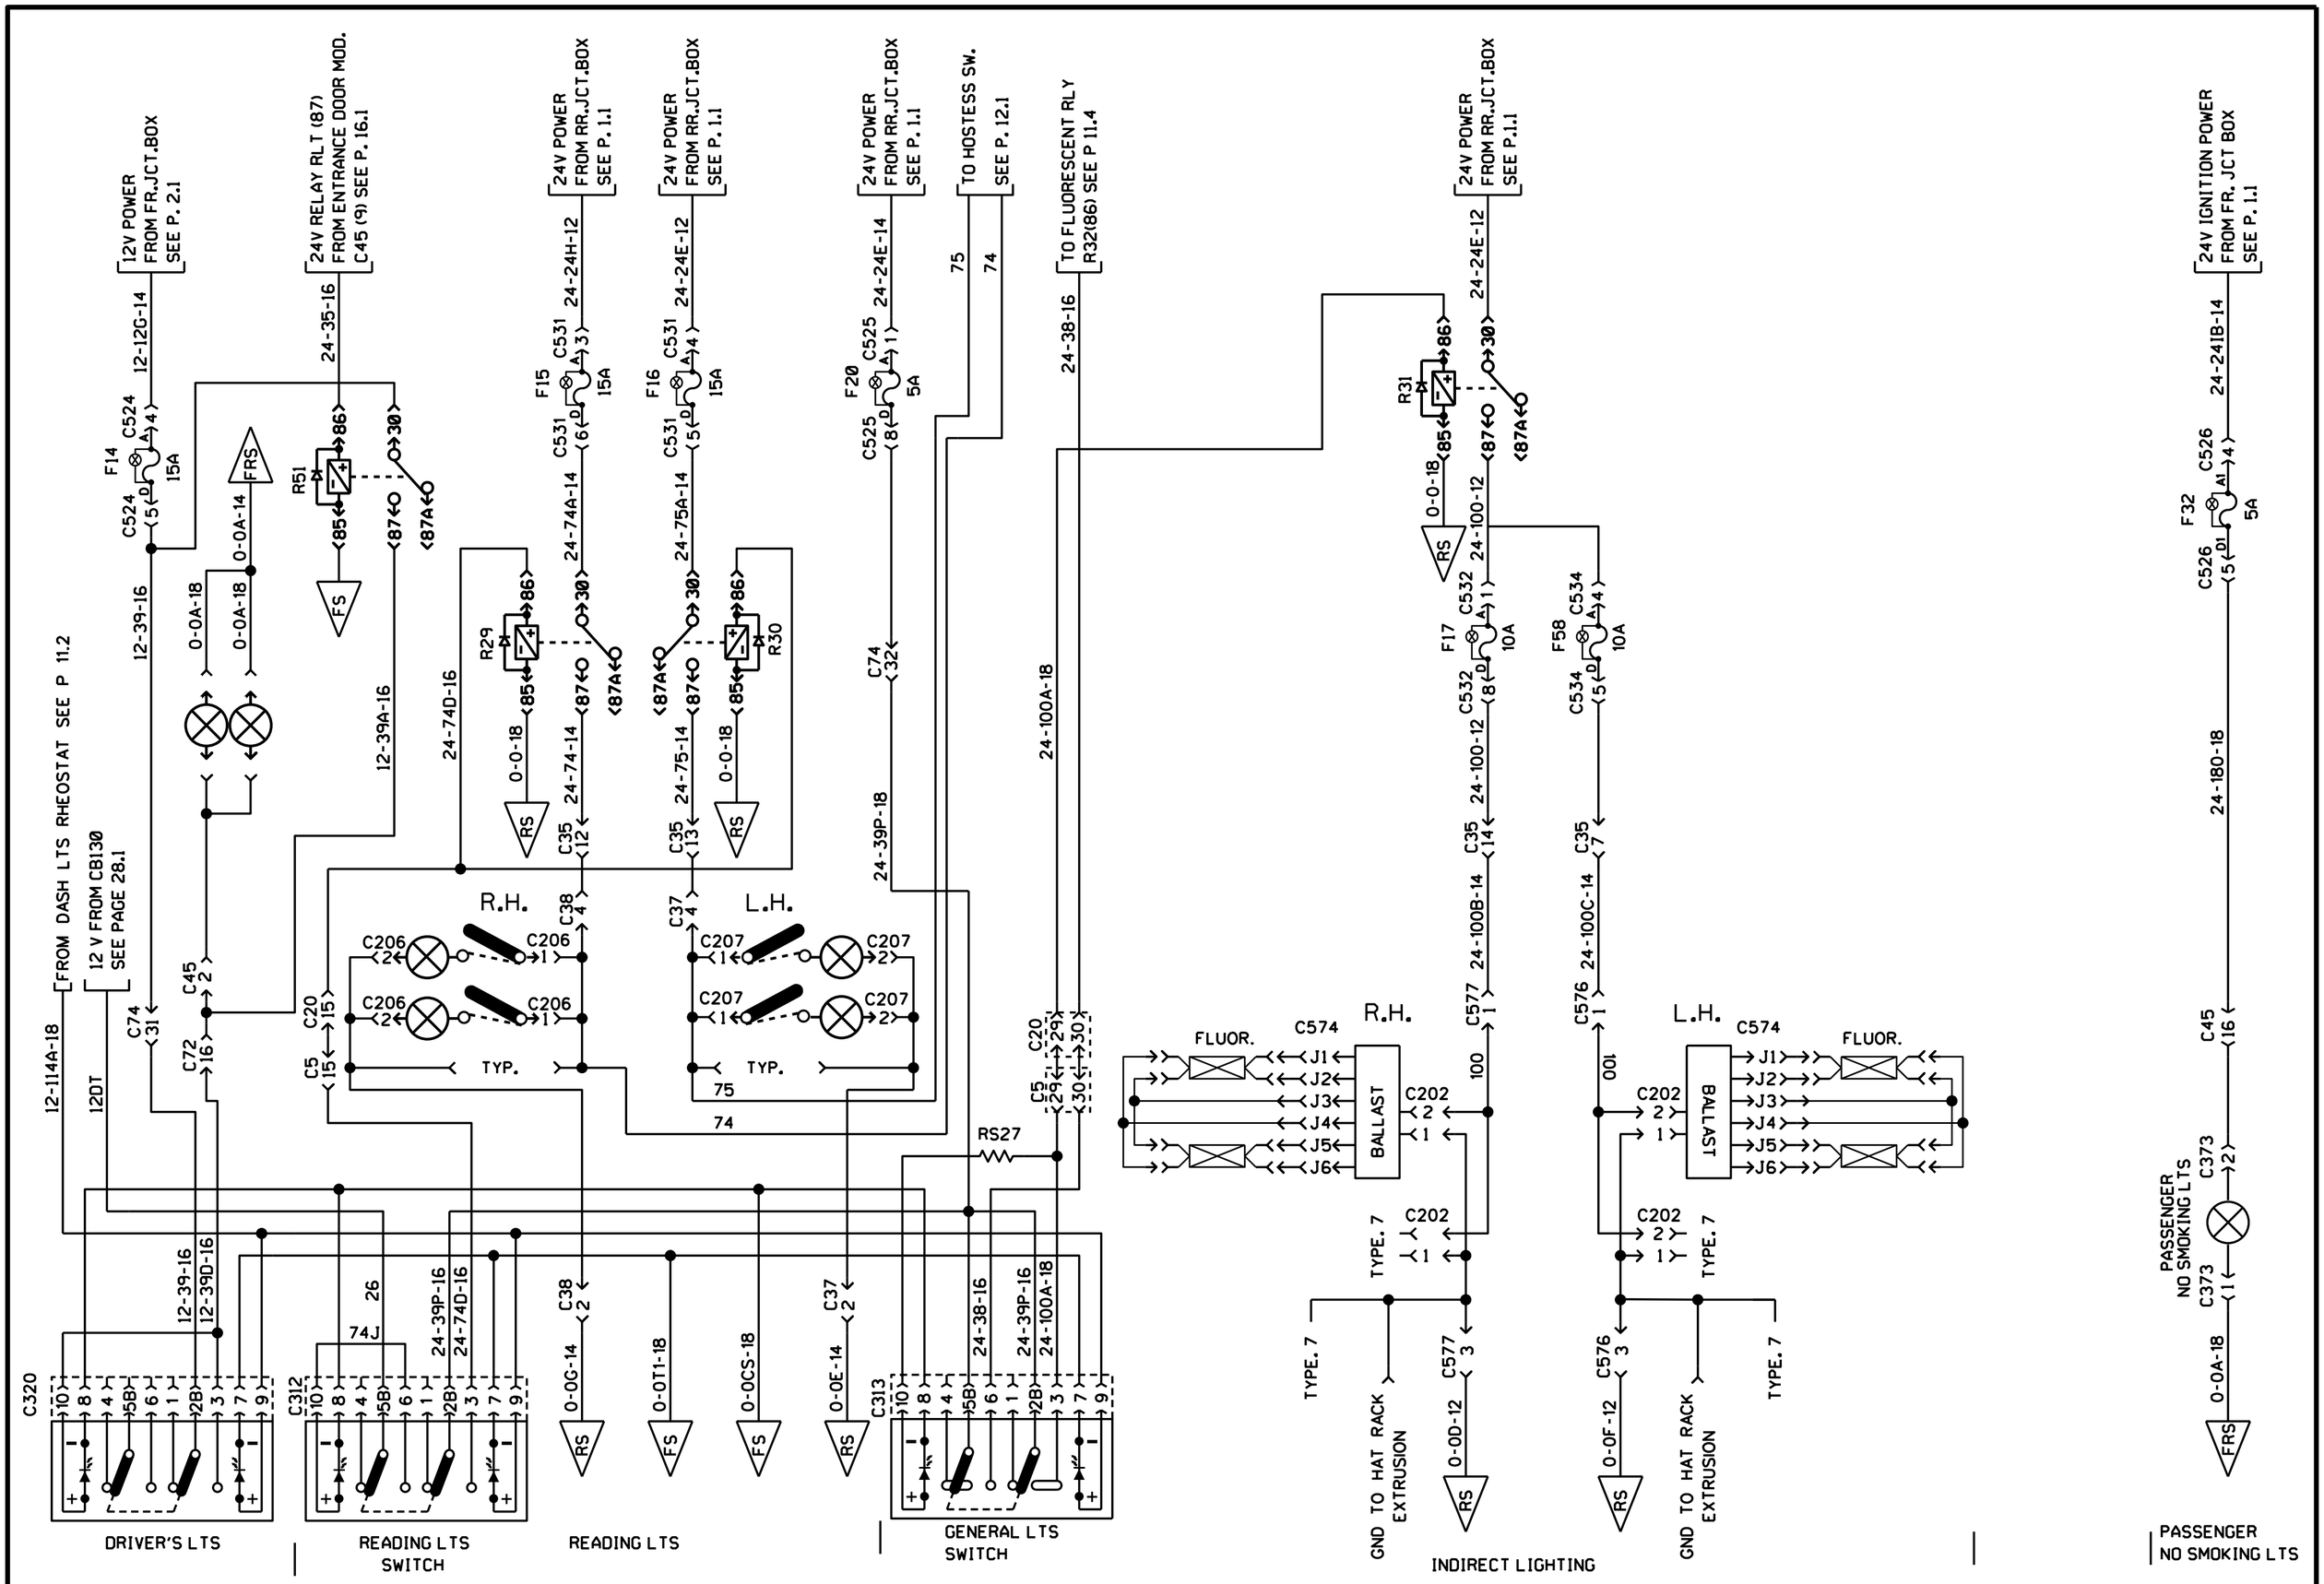

INTERIOR LIGHTING

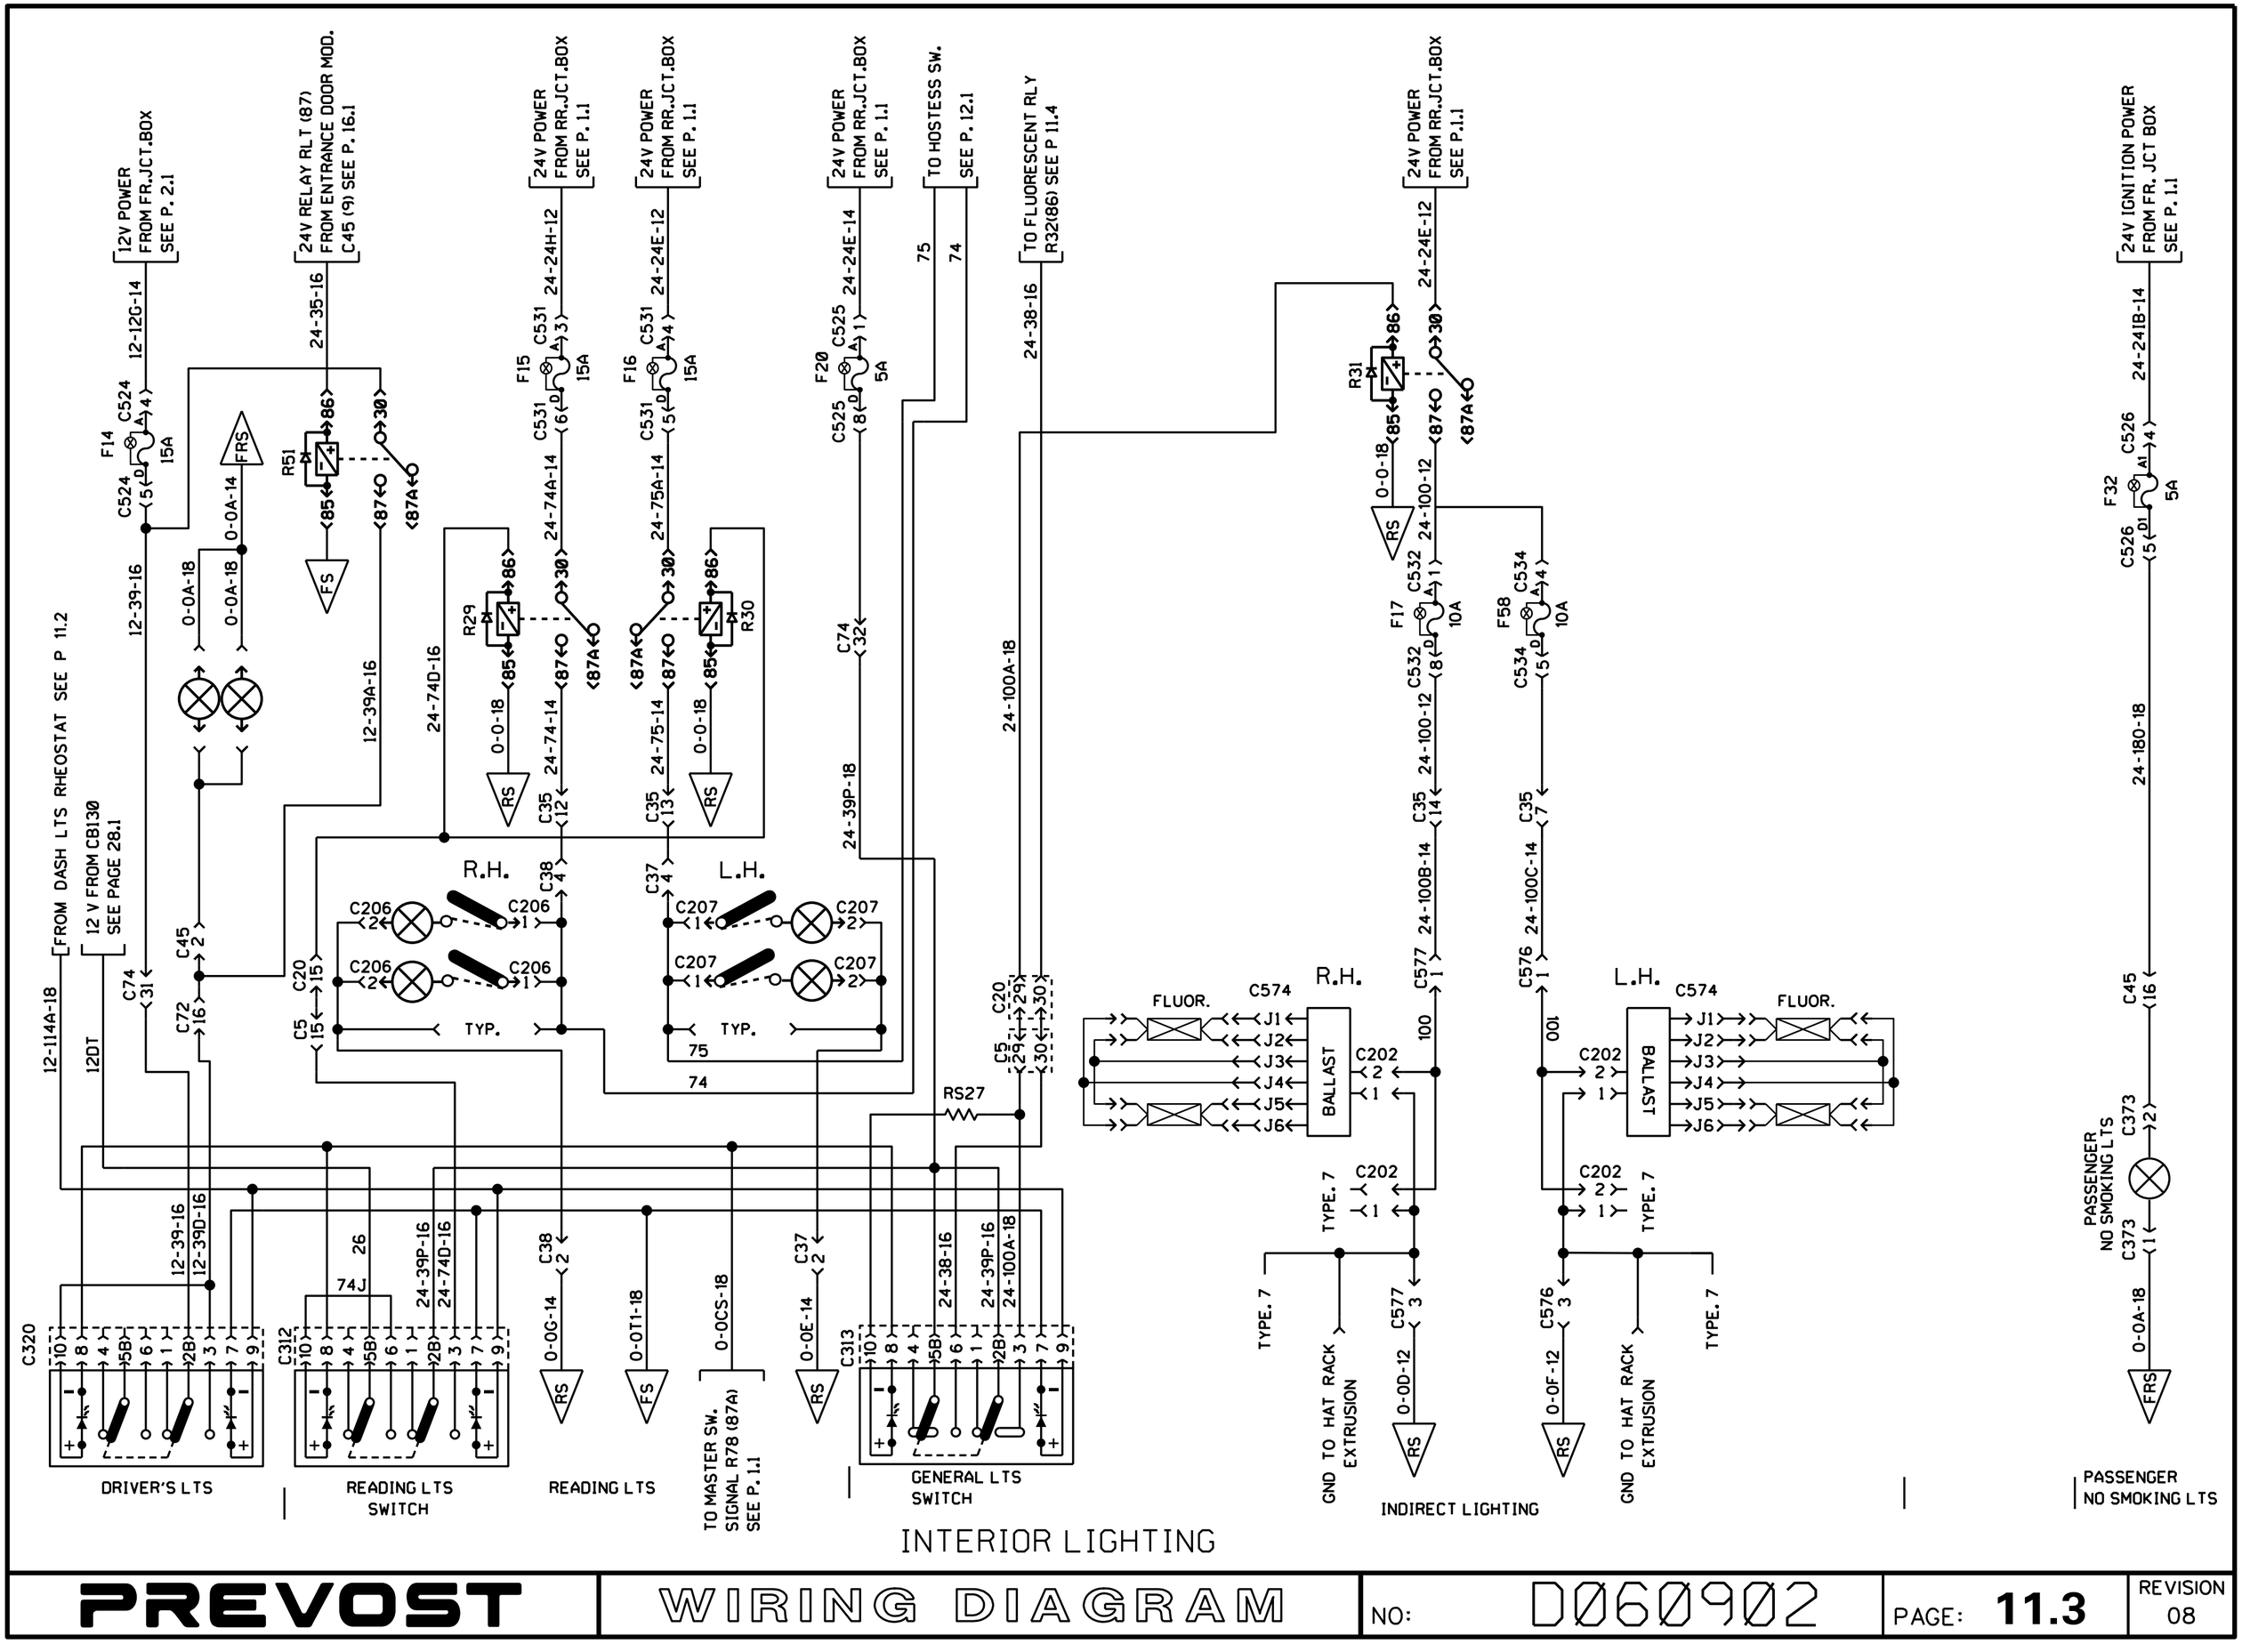

INTERIOR LIGHTING

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 11.3	REVISION 08

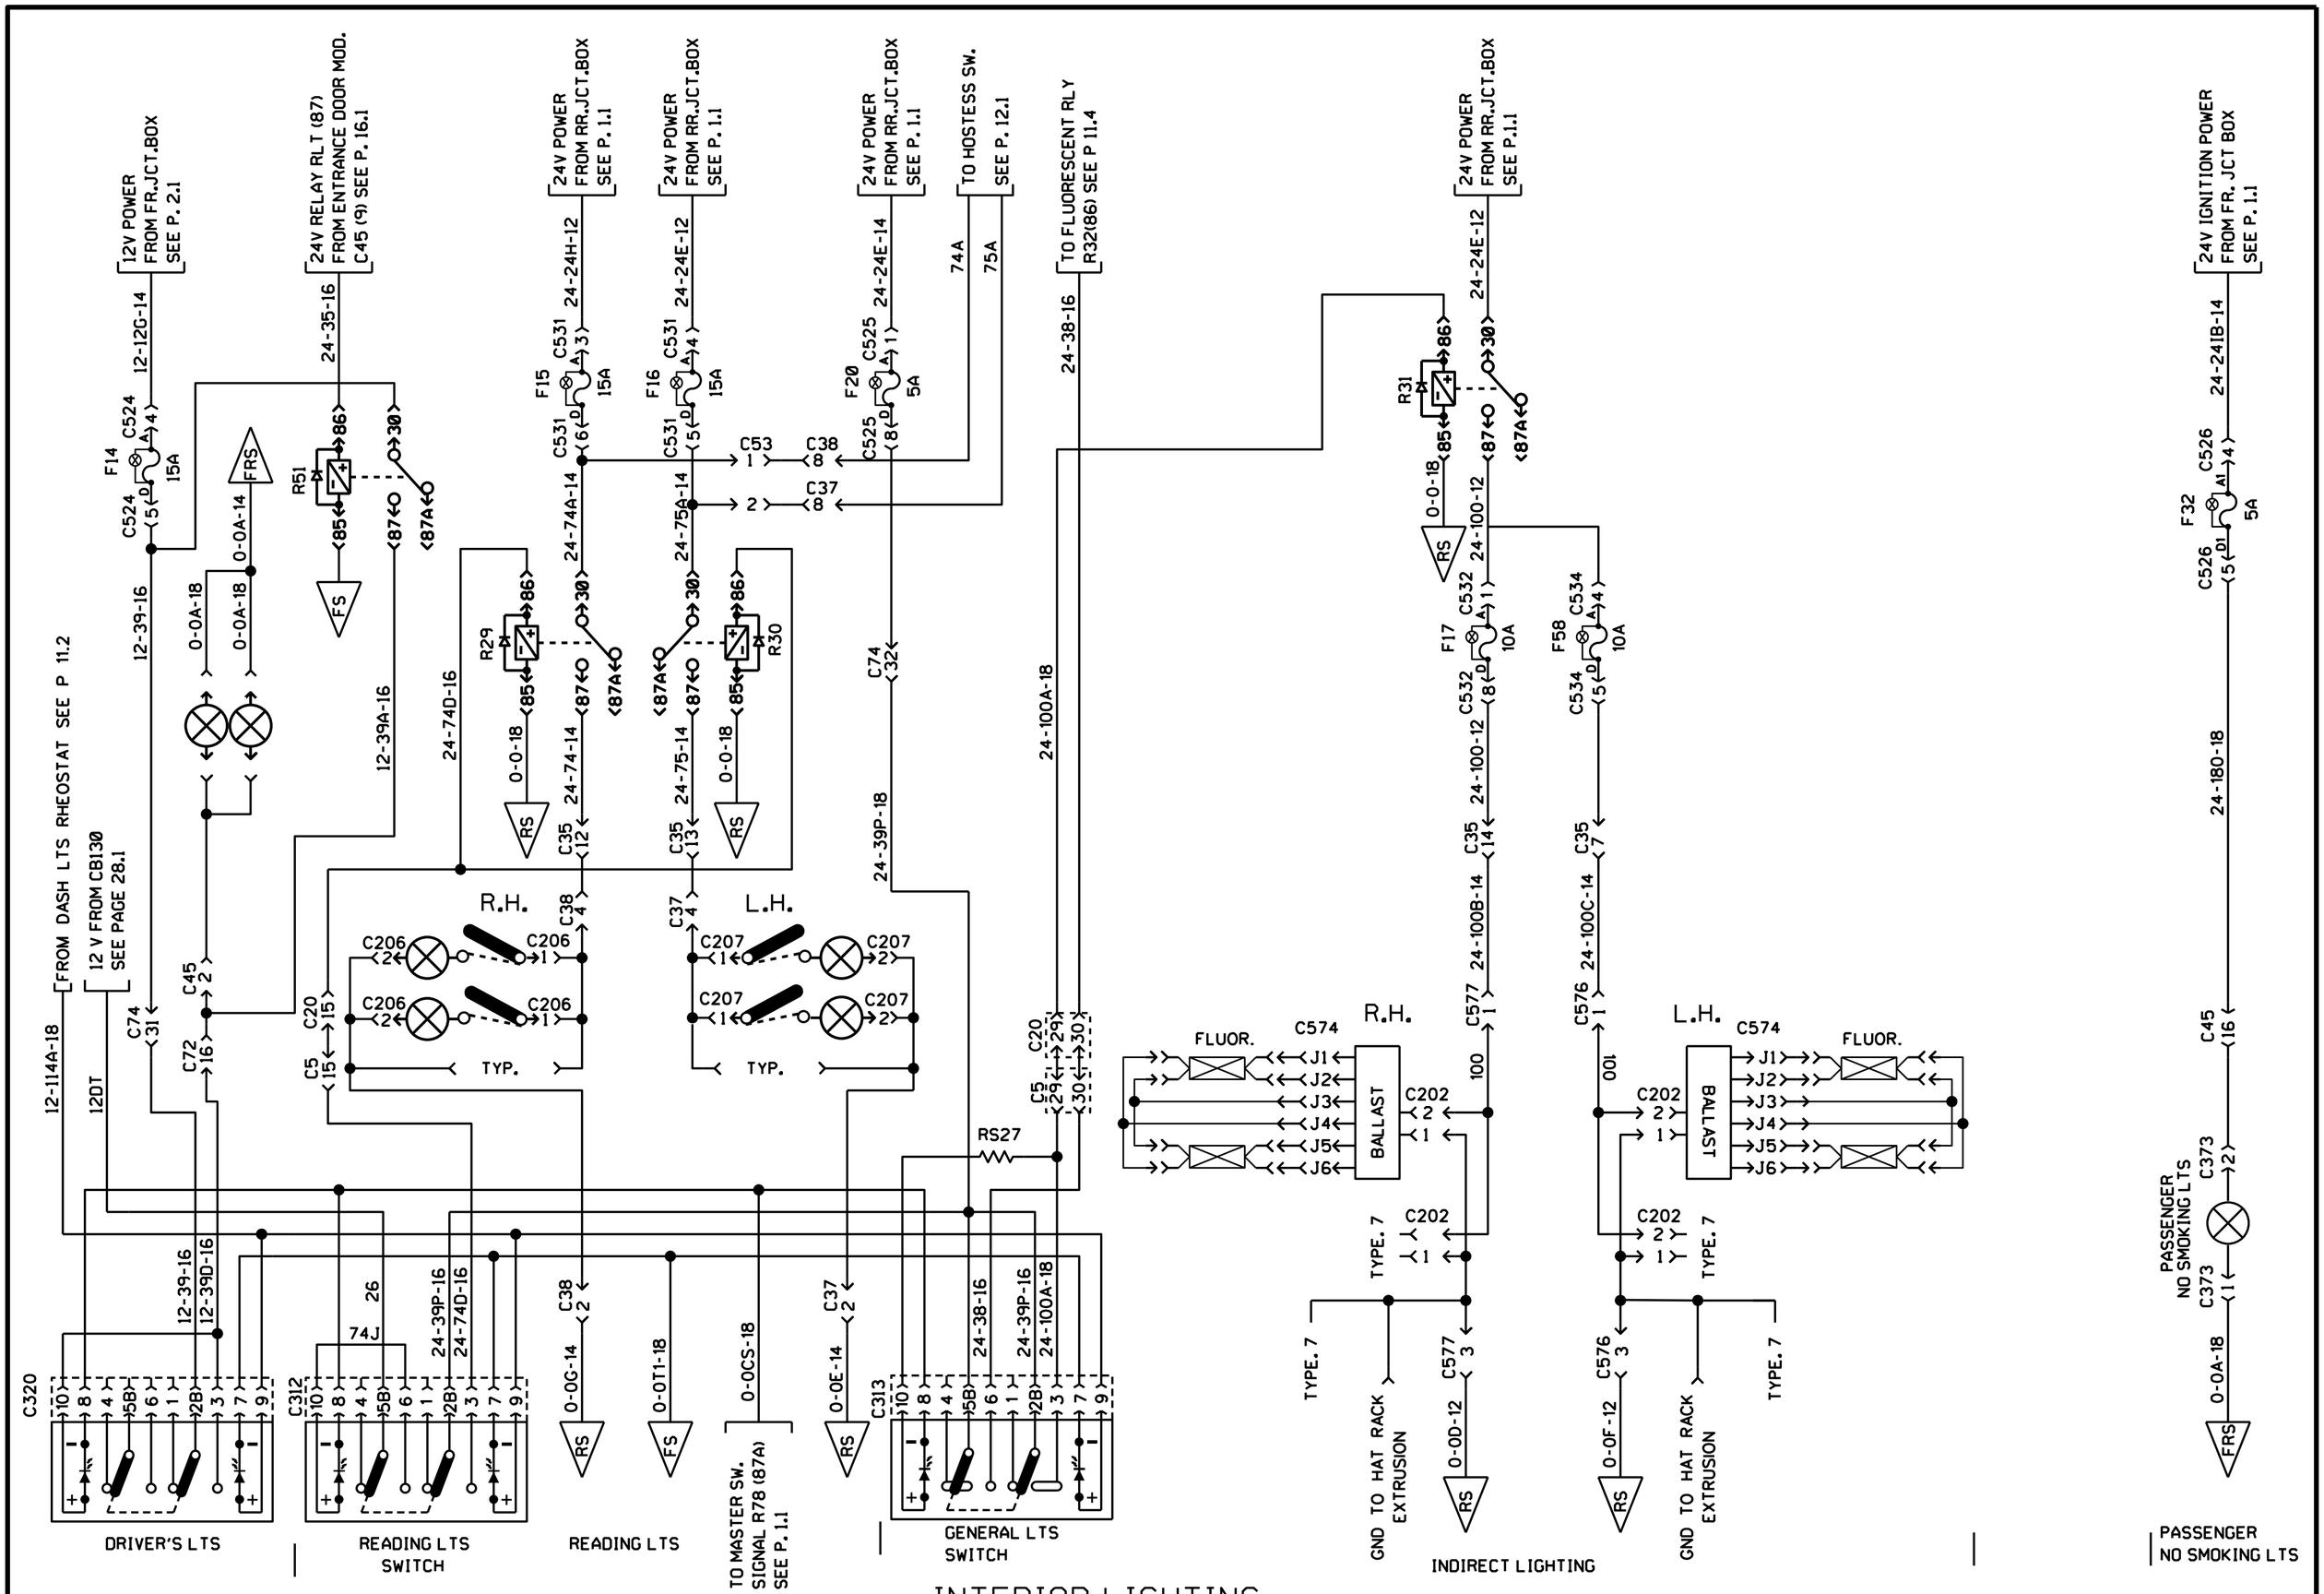

INTERIOR LIGHTING

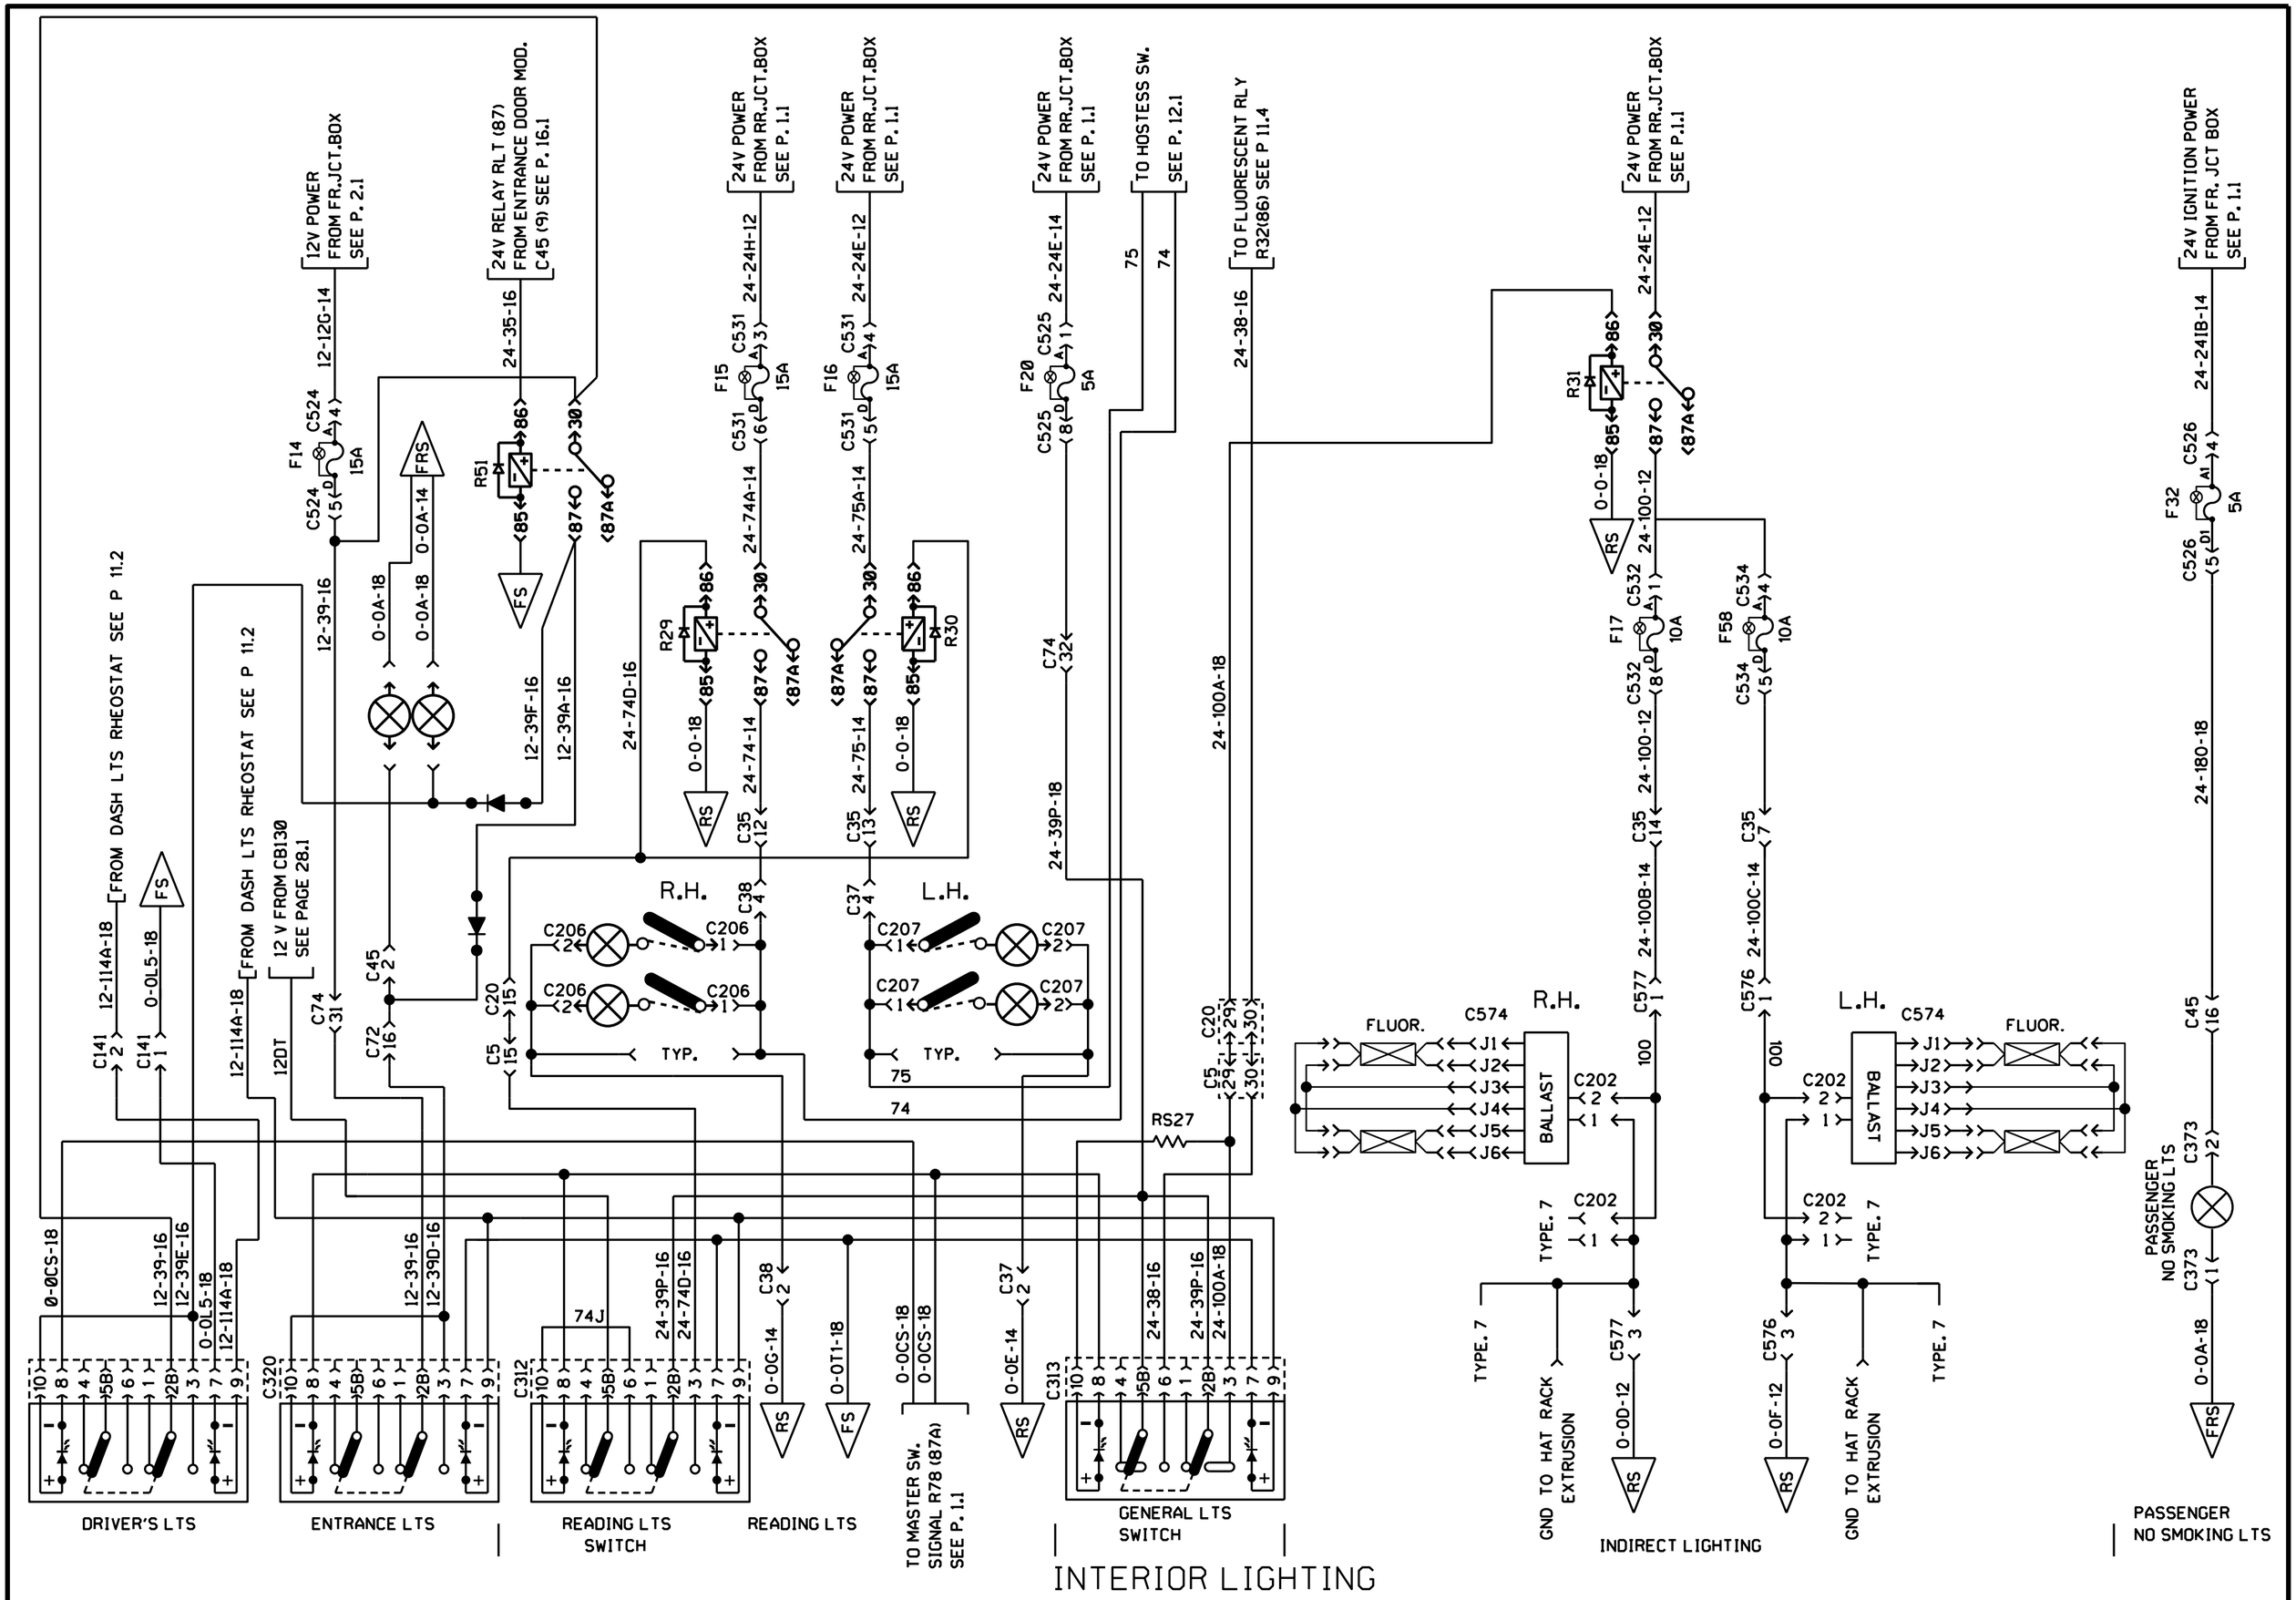

INTERIOR LIGHTING

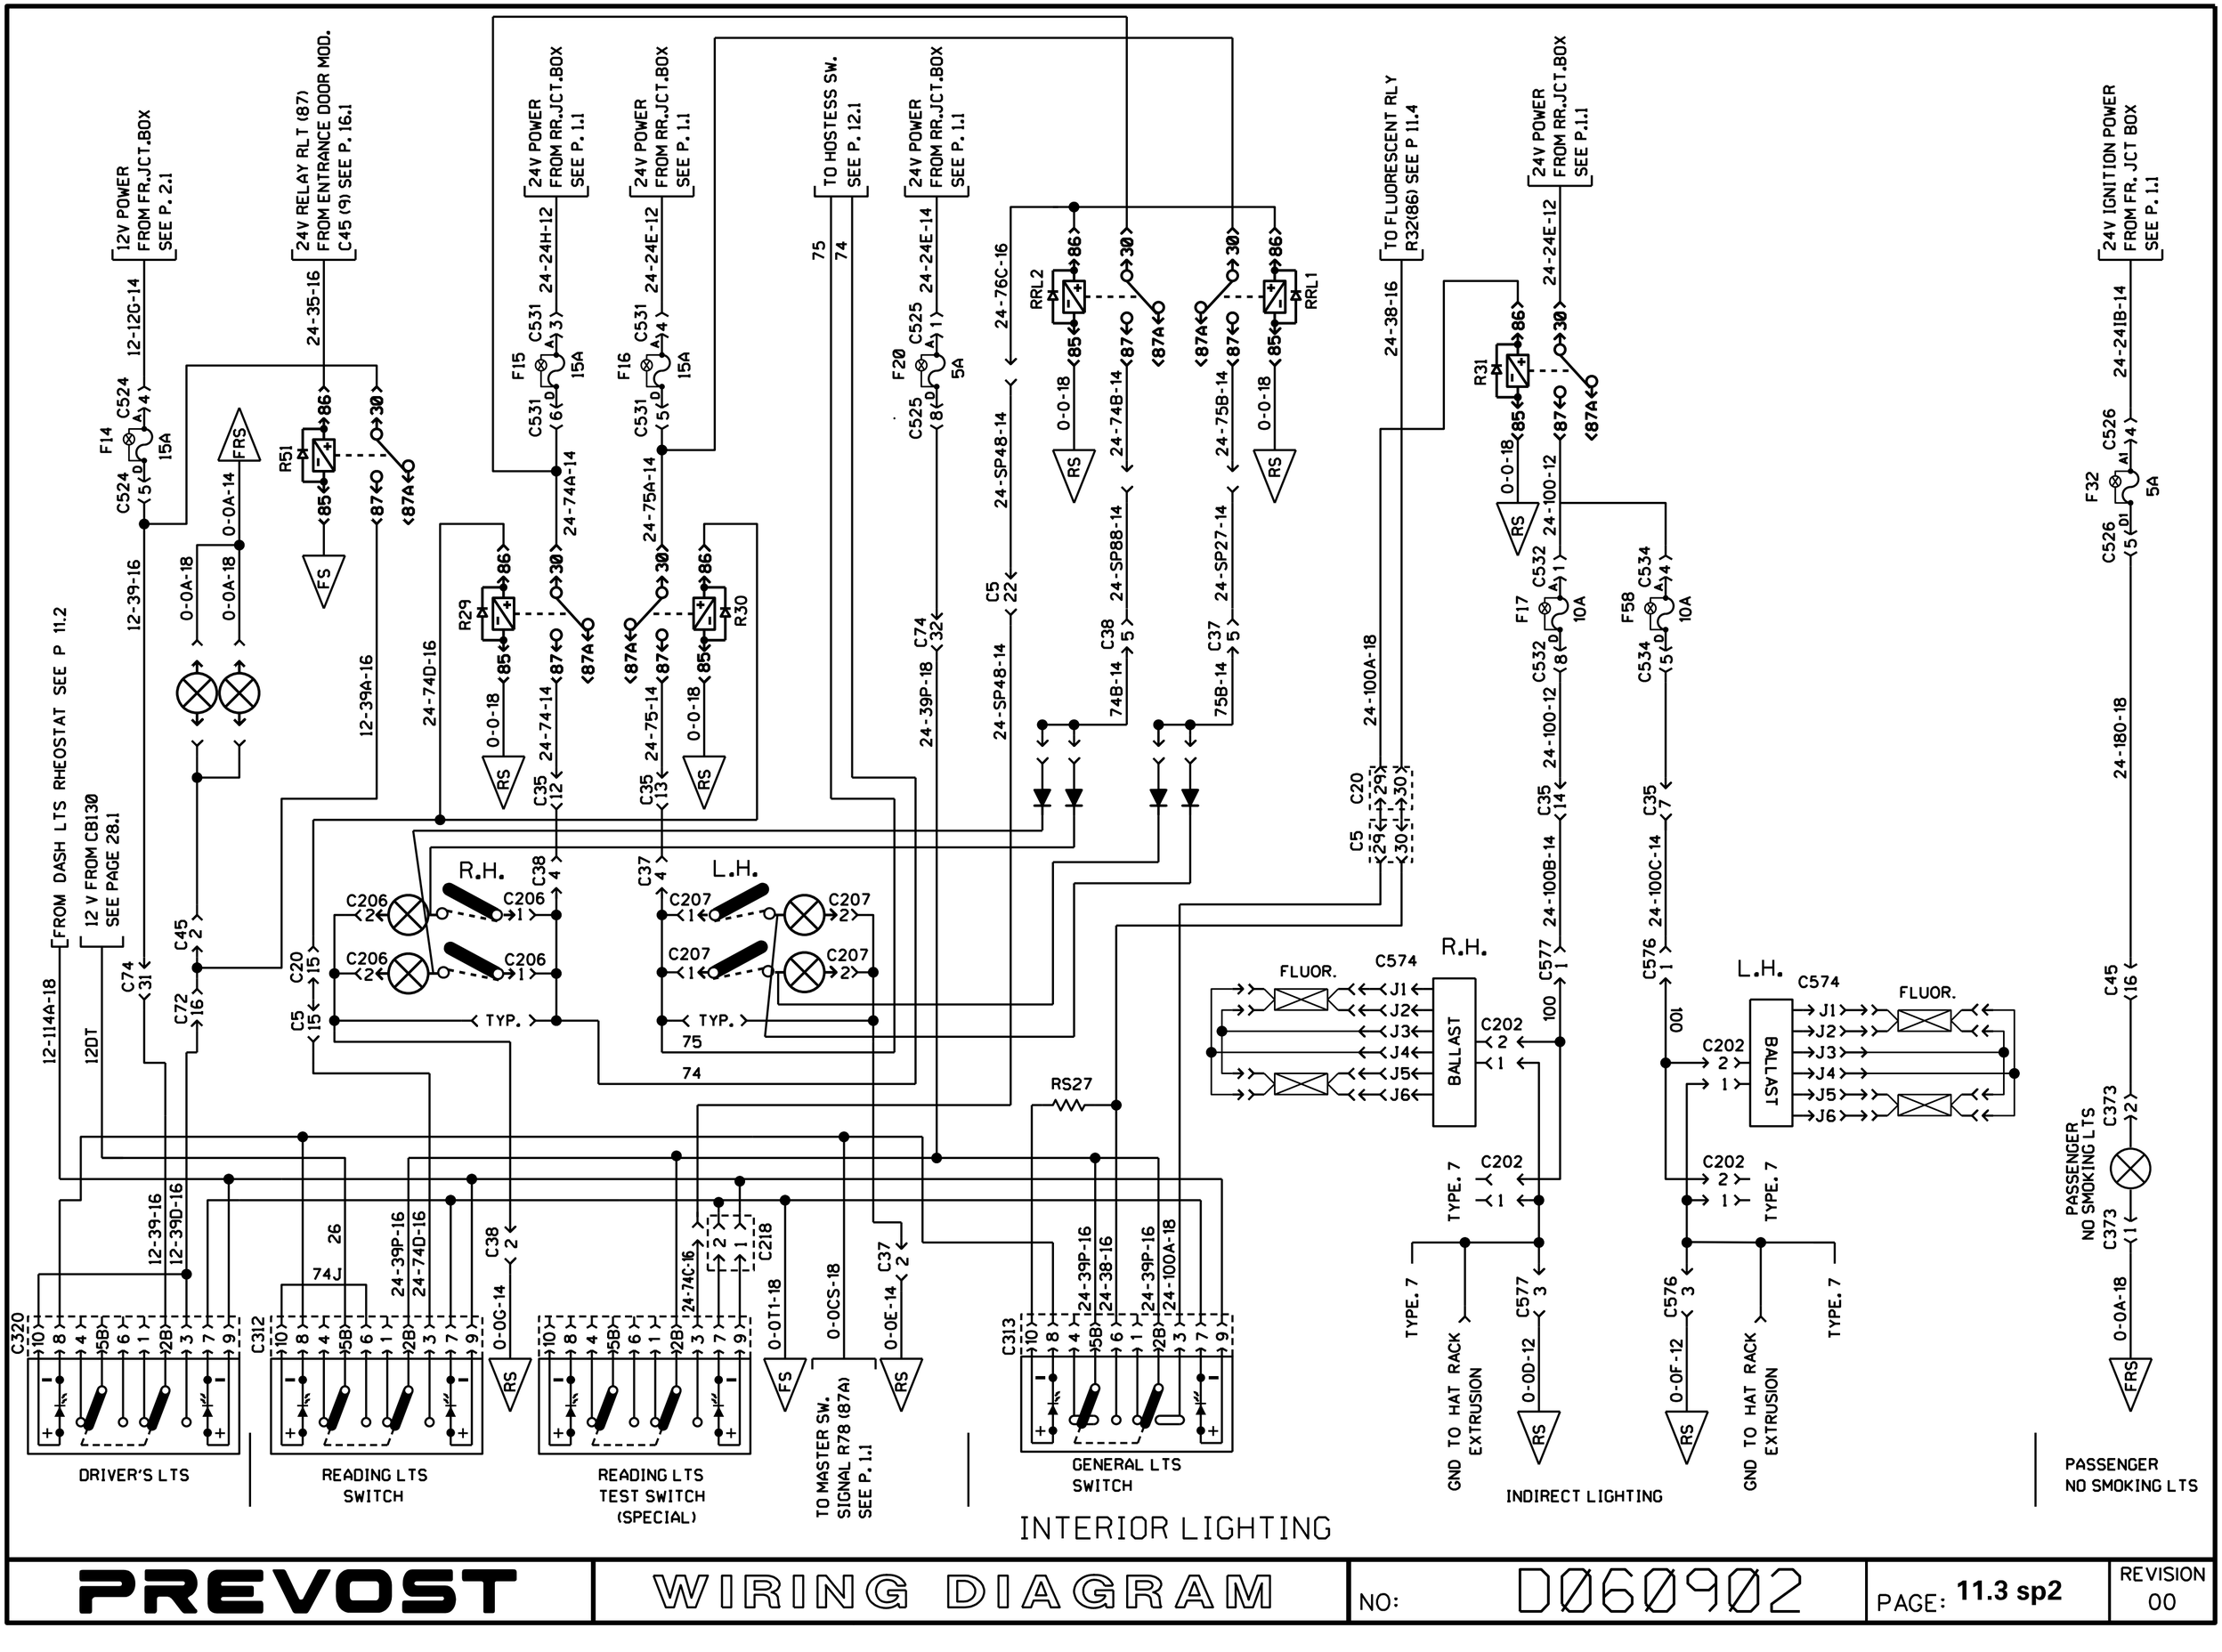

INTERIOR LIGHTING

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 11.3 sp2	REVISION 00

INTERIOR LIGHTING

C320

12-114A-18

DRIVER'S LTS

12-39-16
12-39D-16

F14

31 ← 12-39-16 → D A → 12-12G-14 → 12V POWER FROM FR.JCT.BOX

C45
2 →

0-0A-18
0-0A-18
0-0A-14 → FRS

C312

READING LTS SWITCH

C5 15 ↔ C20 15

C206 2
C206 2

24-74D-16

TYP.

R.H.

C206 1
C206 1

RS 0-0G-14

24-74D-16

R29

RS 0-0-18 → 85 → 86

C38 4
C35 12 ← 24-74-14 → 87 → 30 → 24-74A-14

87A

15A

24-24H-12 → 24V POWER FROM RR.JCT.BOX

C37 4
C35 13 ← 24-75-14 → 87 → 30 → 24-75A-14

87A

RS 0-0-18 → 85 → 86

R30

15A

C207 1
C207 1

TYP.

L.H.

FS 0-0T1-18

C207 2
C207 2

RS 0-0E-14

C313

GENERAL LTS SWITCH

24-38-16

24-100A-18

C5 29 ↔ 30
C20 29 ↔ 30

24-100A-18 → 24-38-16

R.H.

C202 2 →

0-0D-12

C577 → 1

C35 14 ←

R31

RS 0-0-18 → 85 → 86

24-100-12

87 → 30 → 24-24E-12 → 24V POWER

87A

10A

C576 → 1

L.H.

NO: D0609021

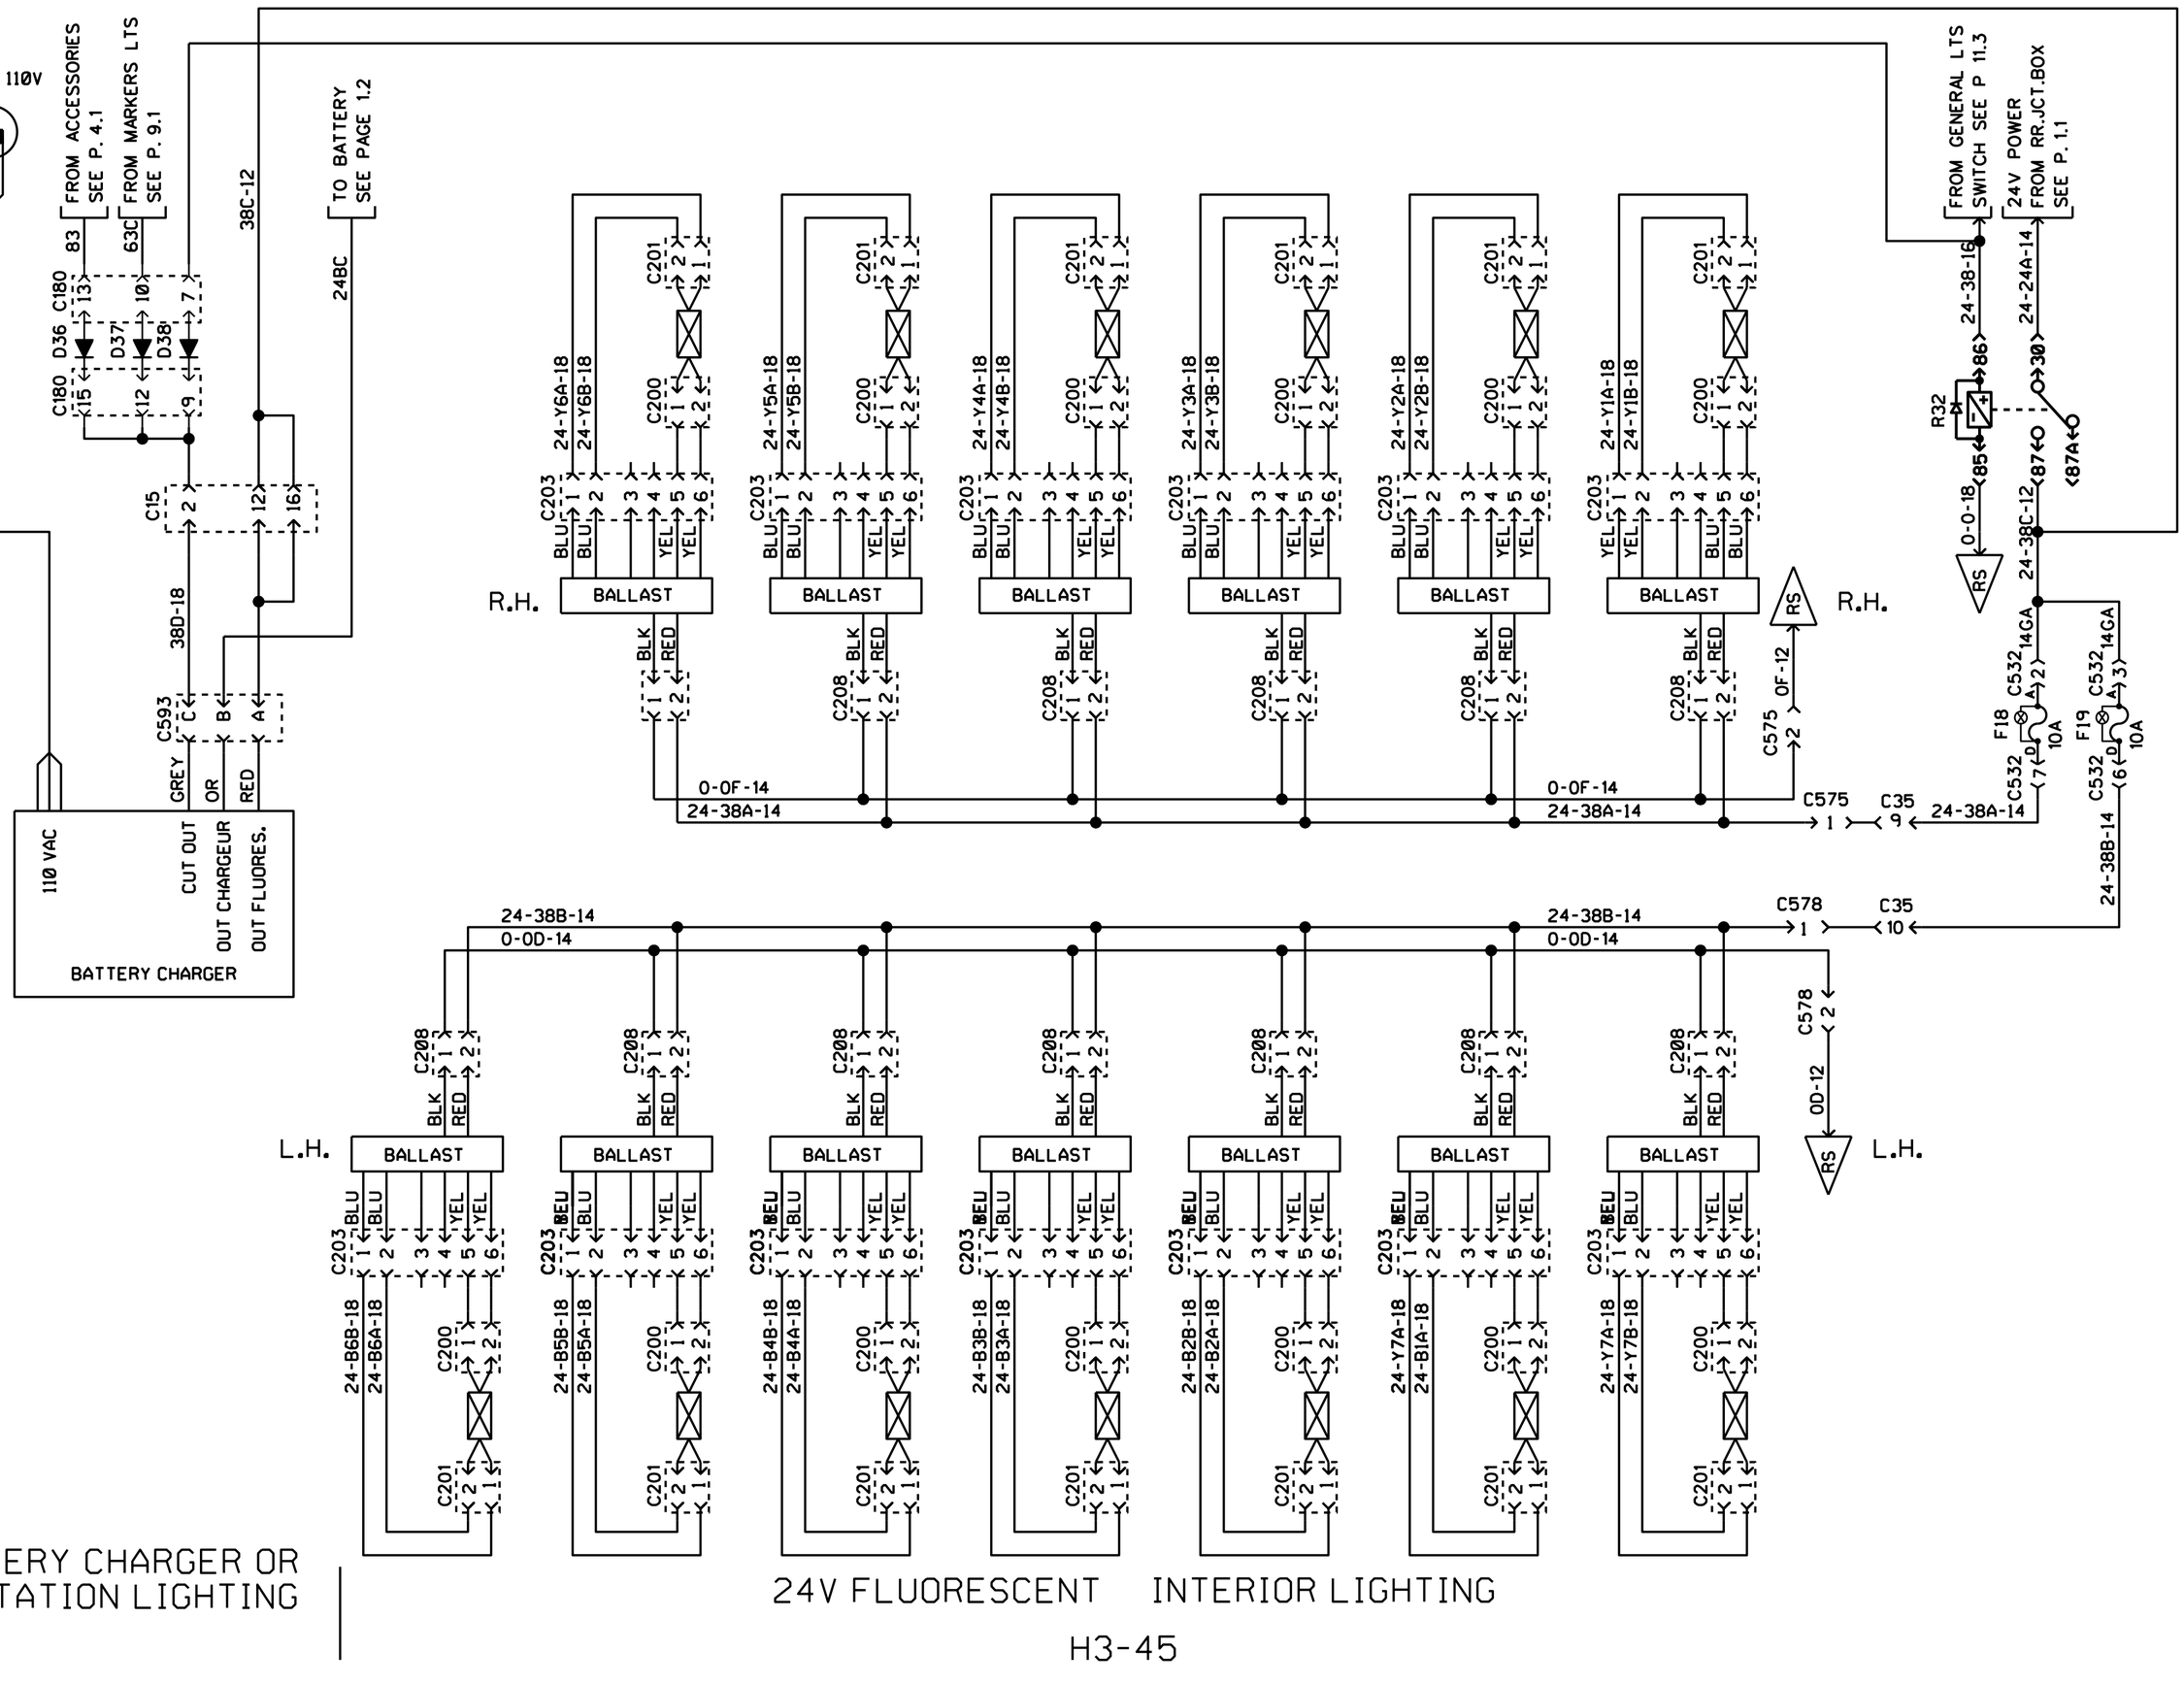

BATTERY CHARGER OR IN-STATION LIGHTING

24V FLUORESCENT INTERIOR LIGHTING

H3-45

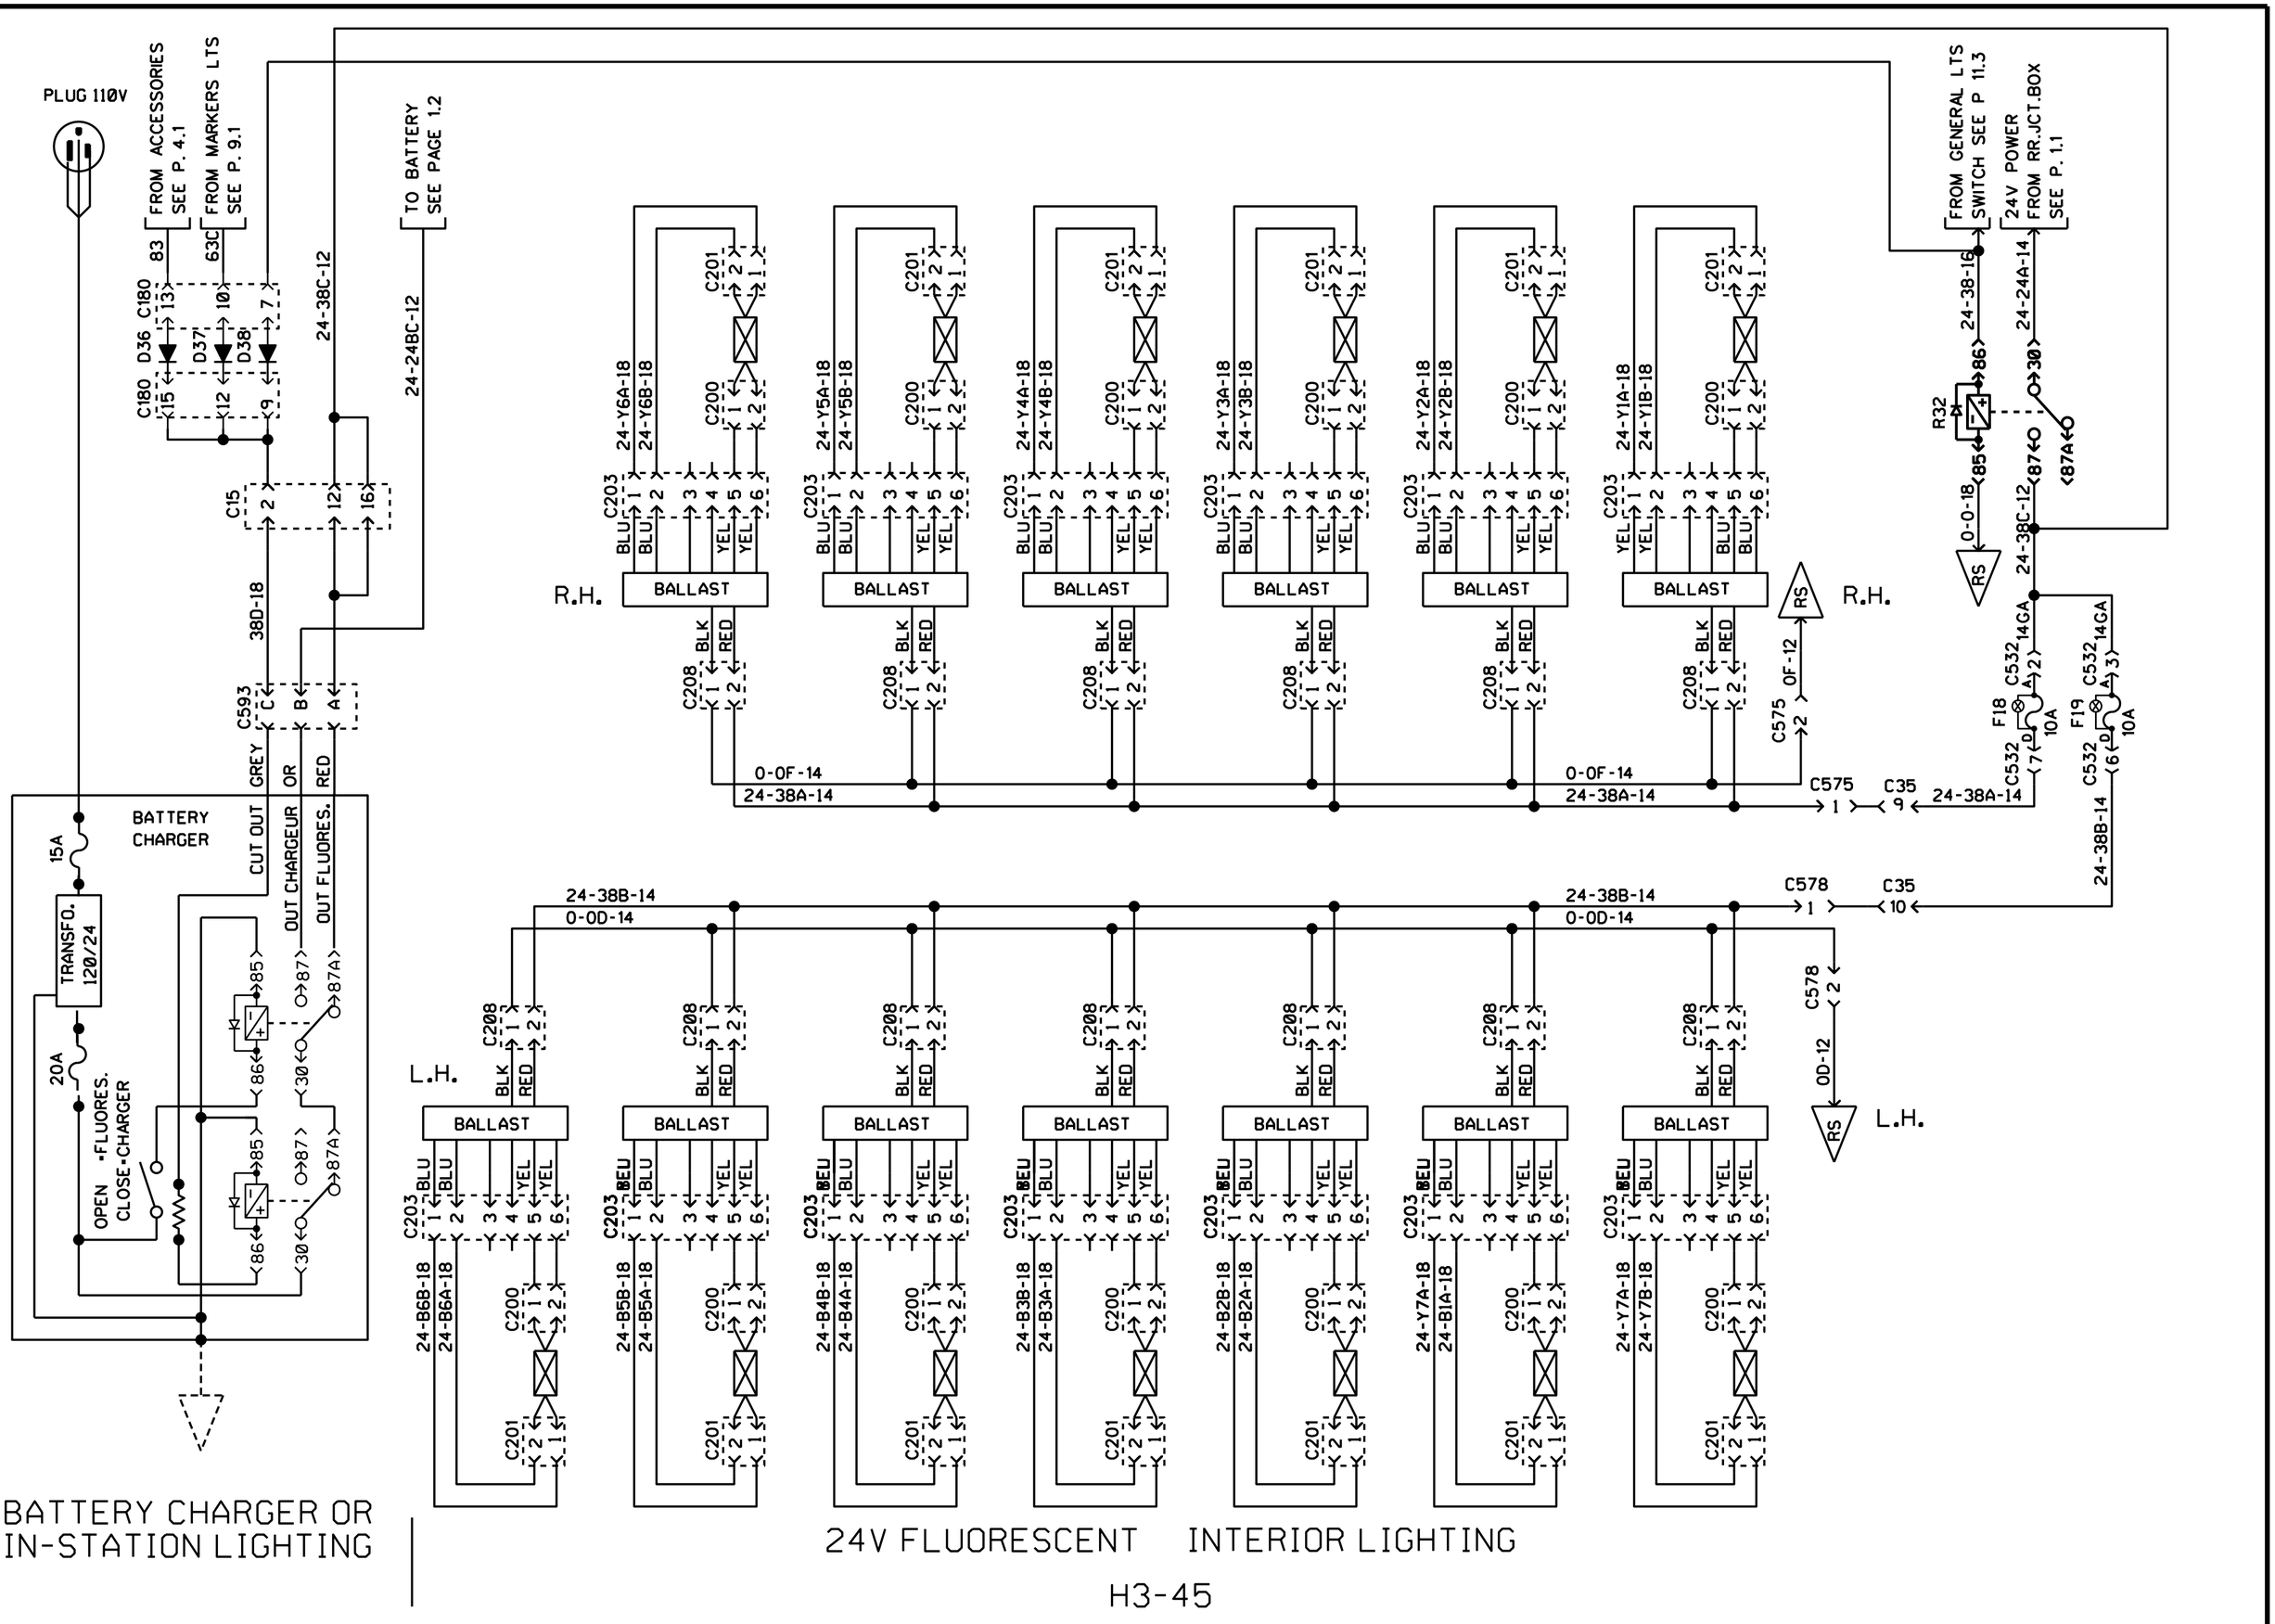

BATTERY CHARGER OR IN-STATION LIGHTING

24V FLUORESCENT INTERIOR LIGHTING

H3-45

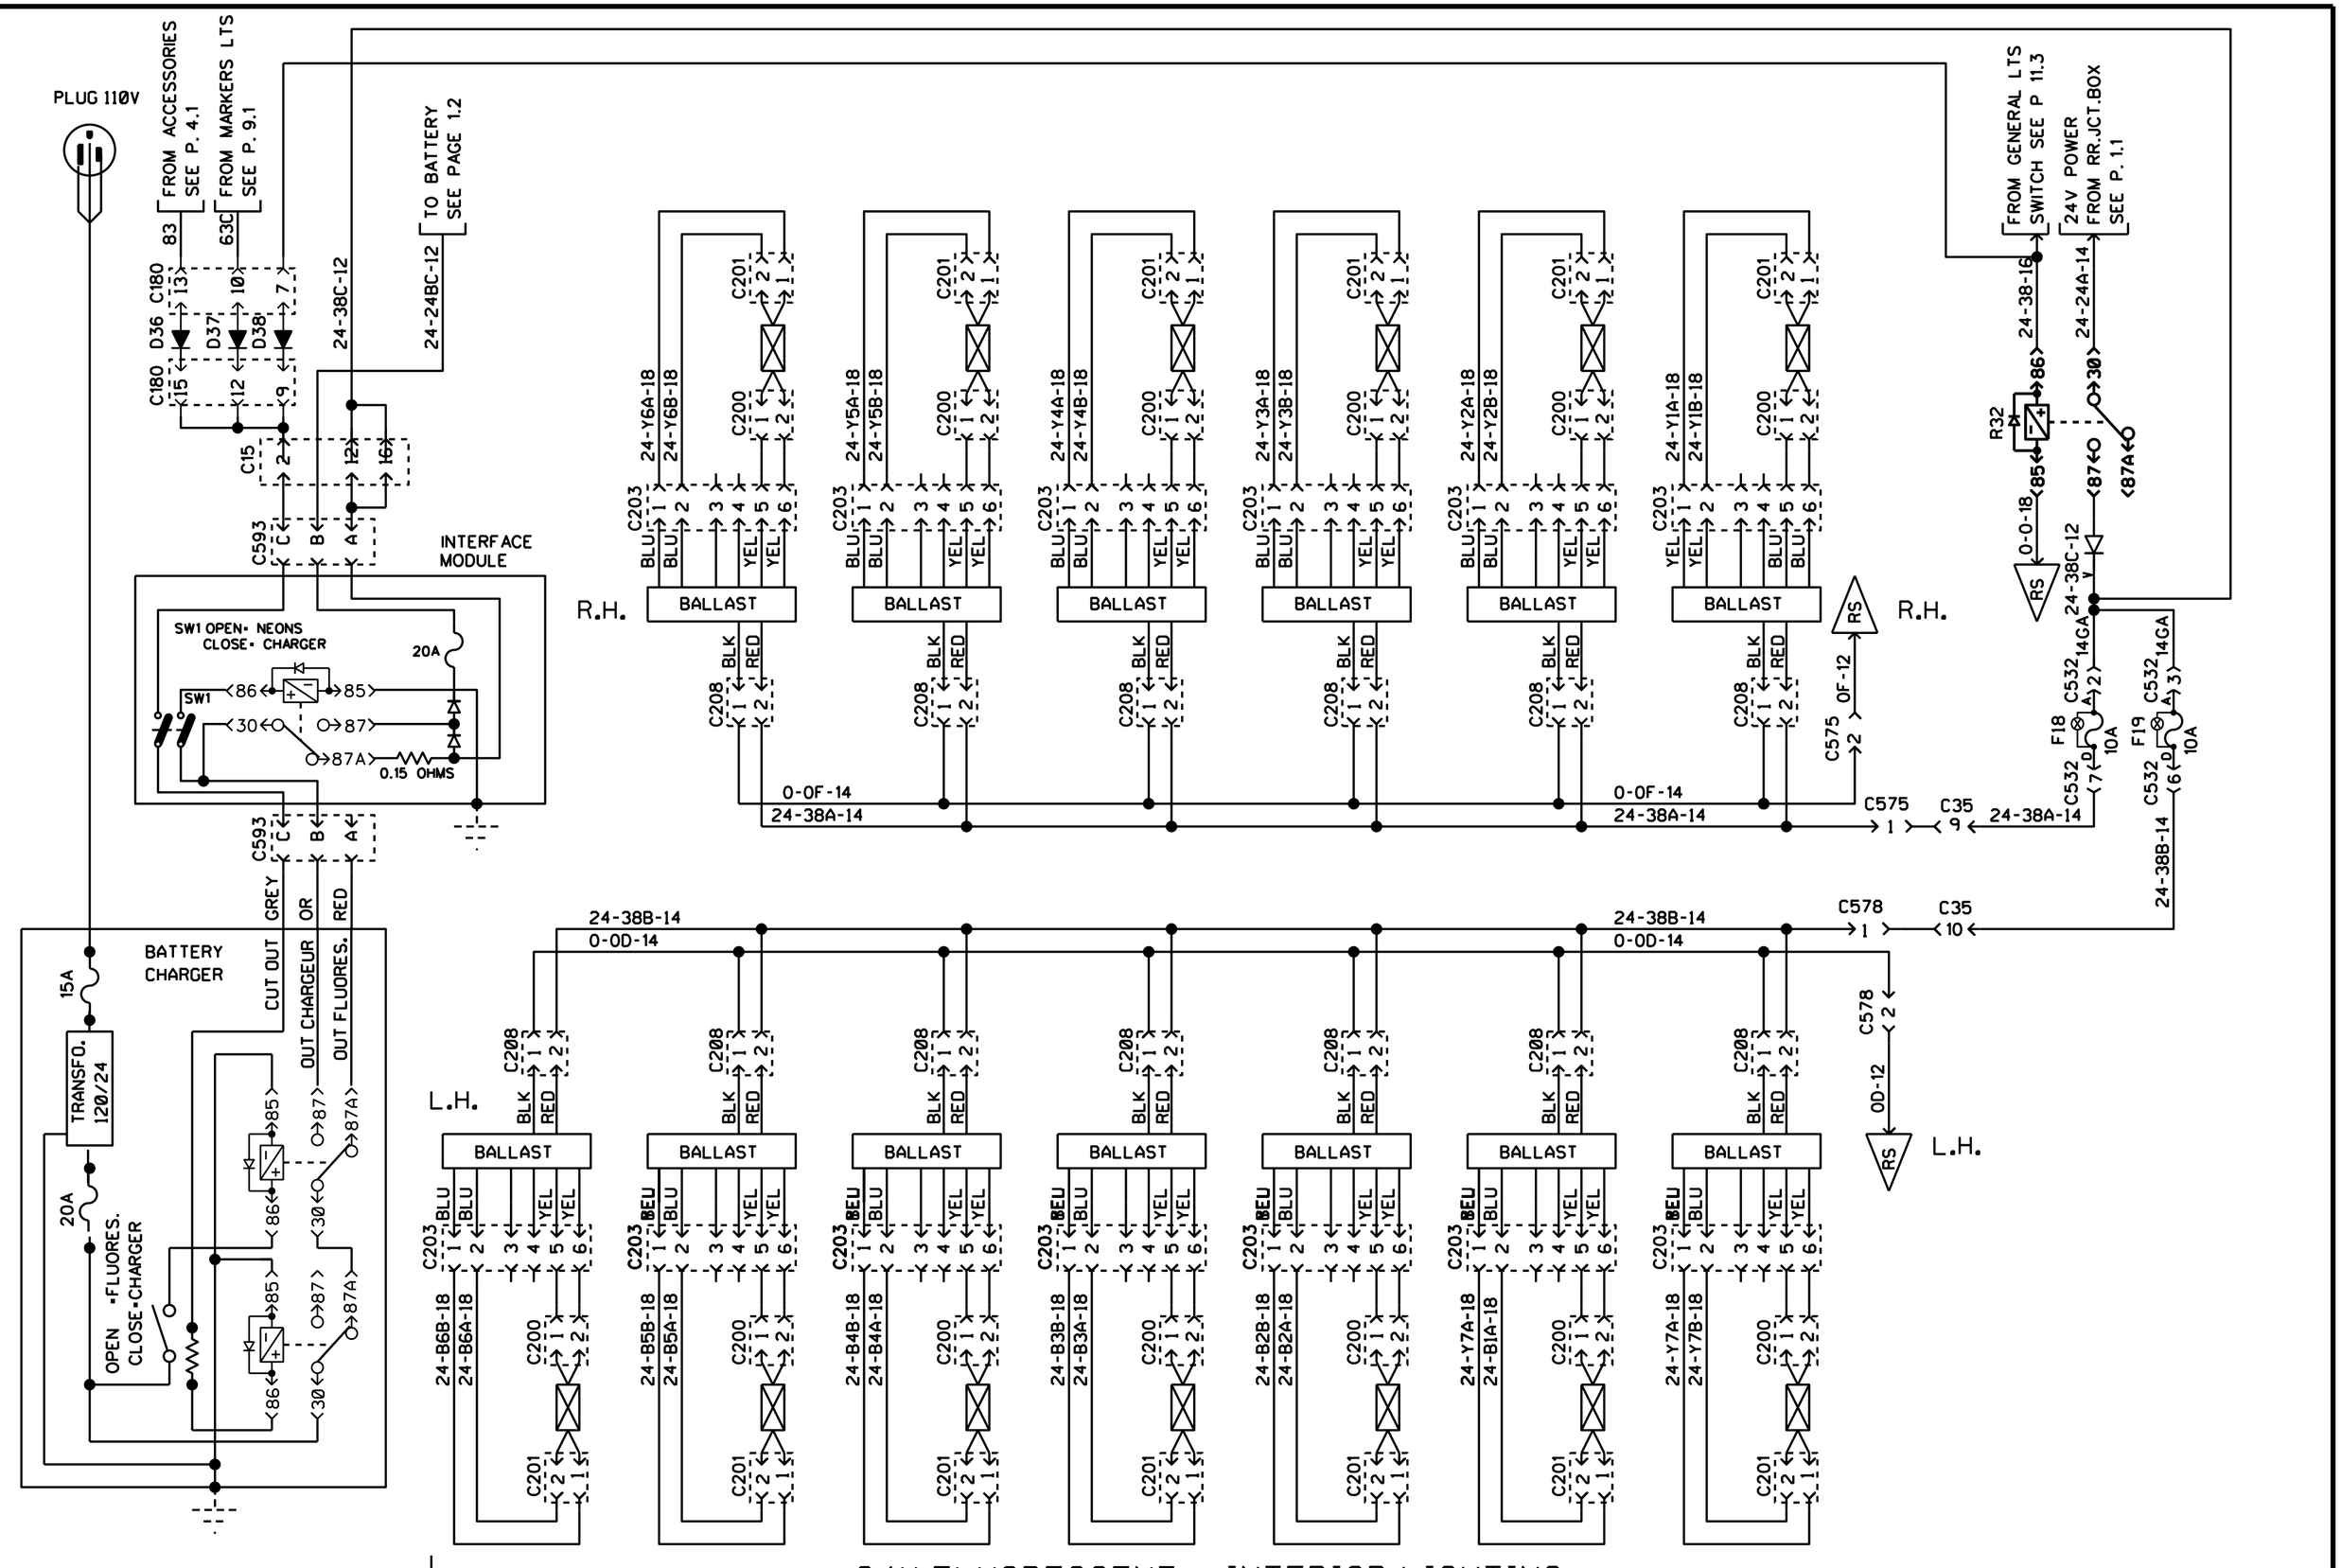

BATTERY CHARGER OR IN-STATION LIGHTING

24V FLUORESCENT INTERIOR LIGHTING

H3-45

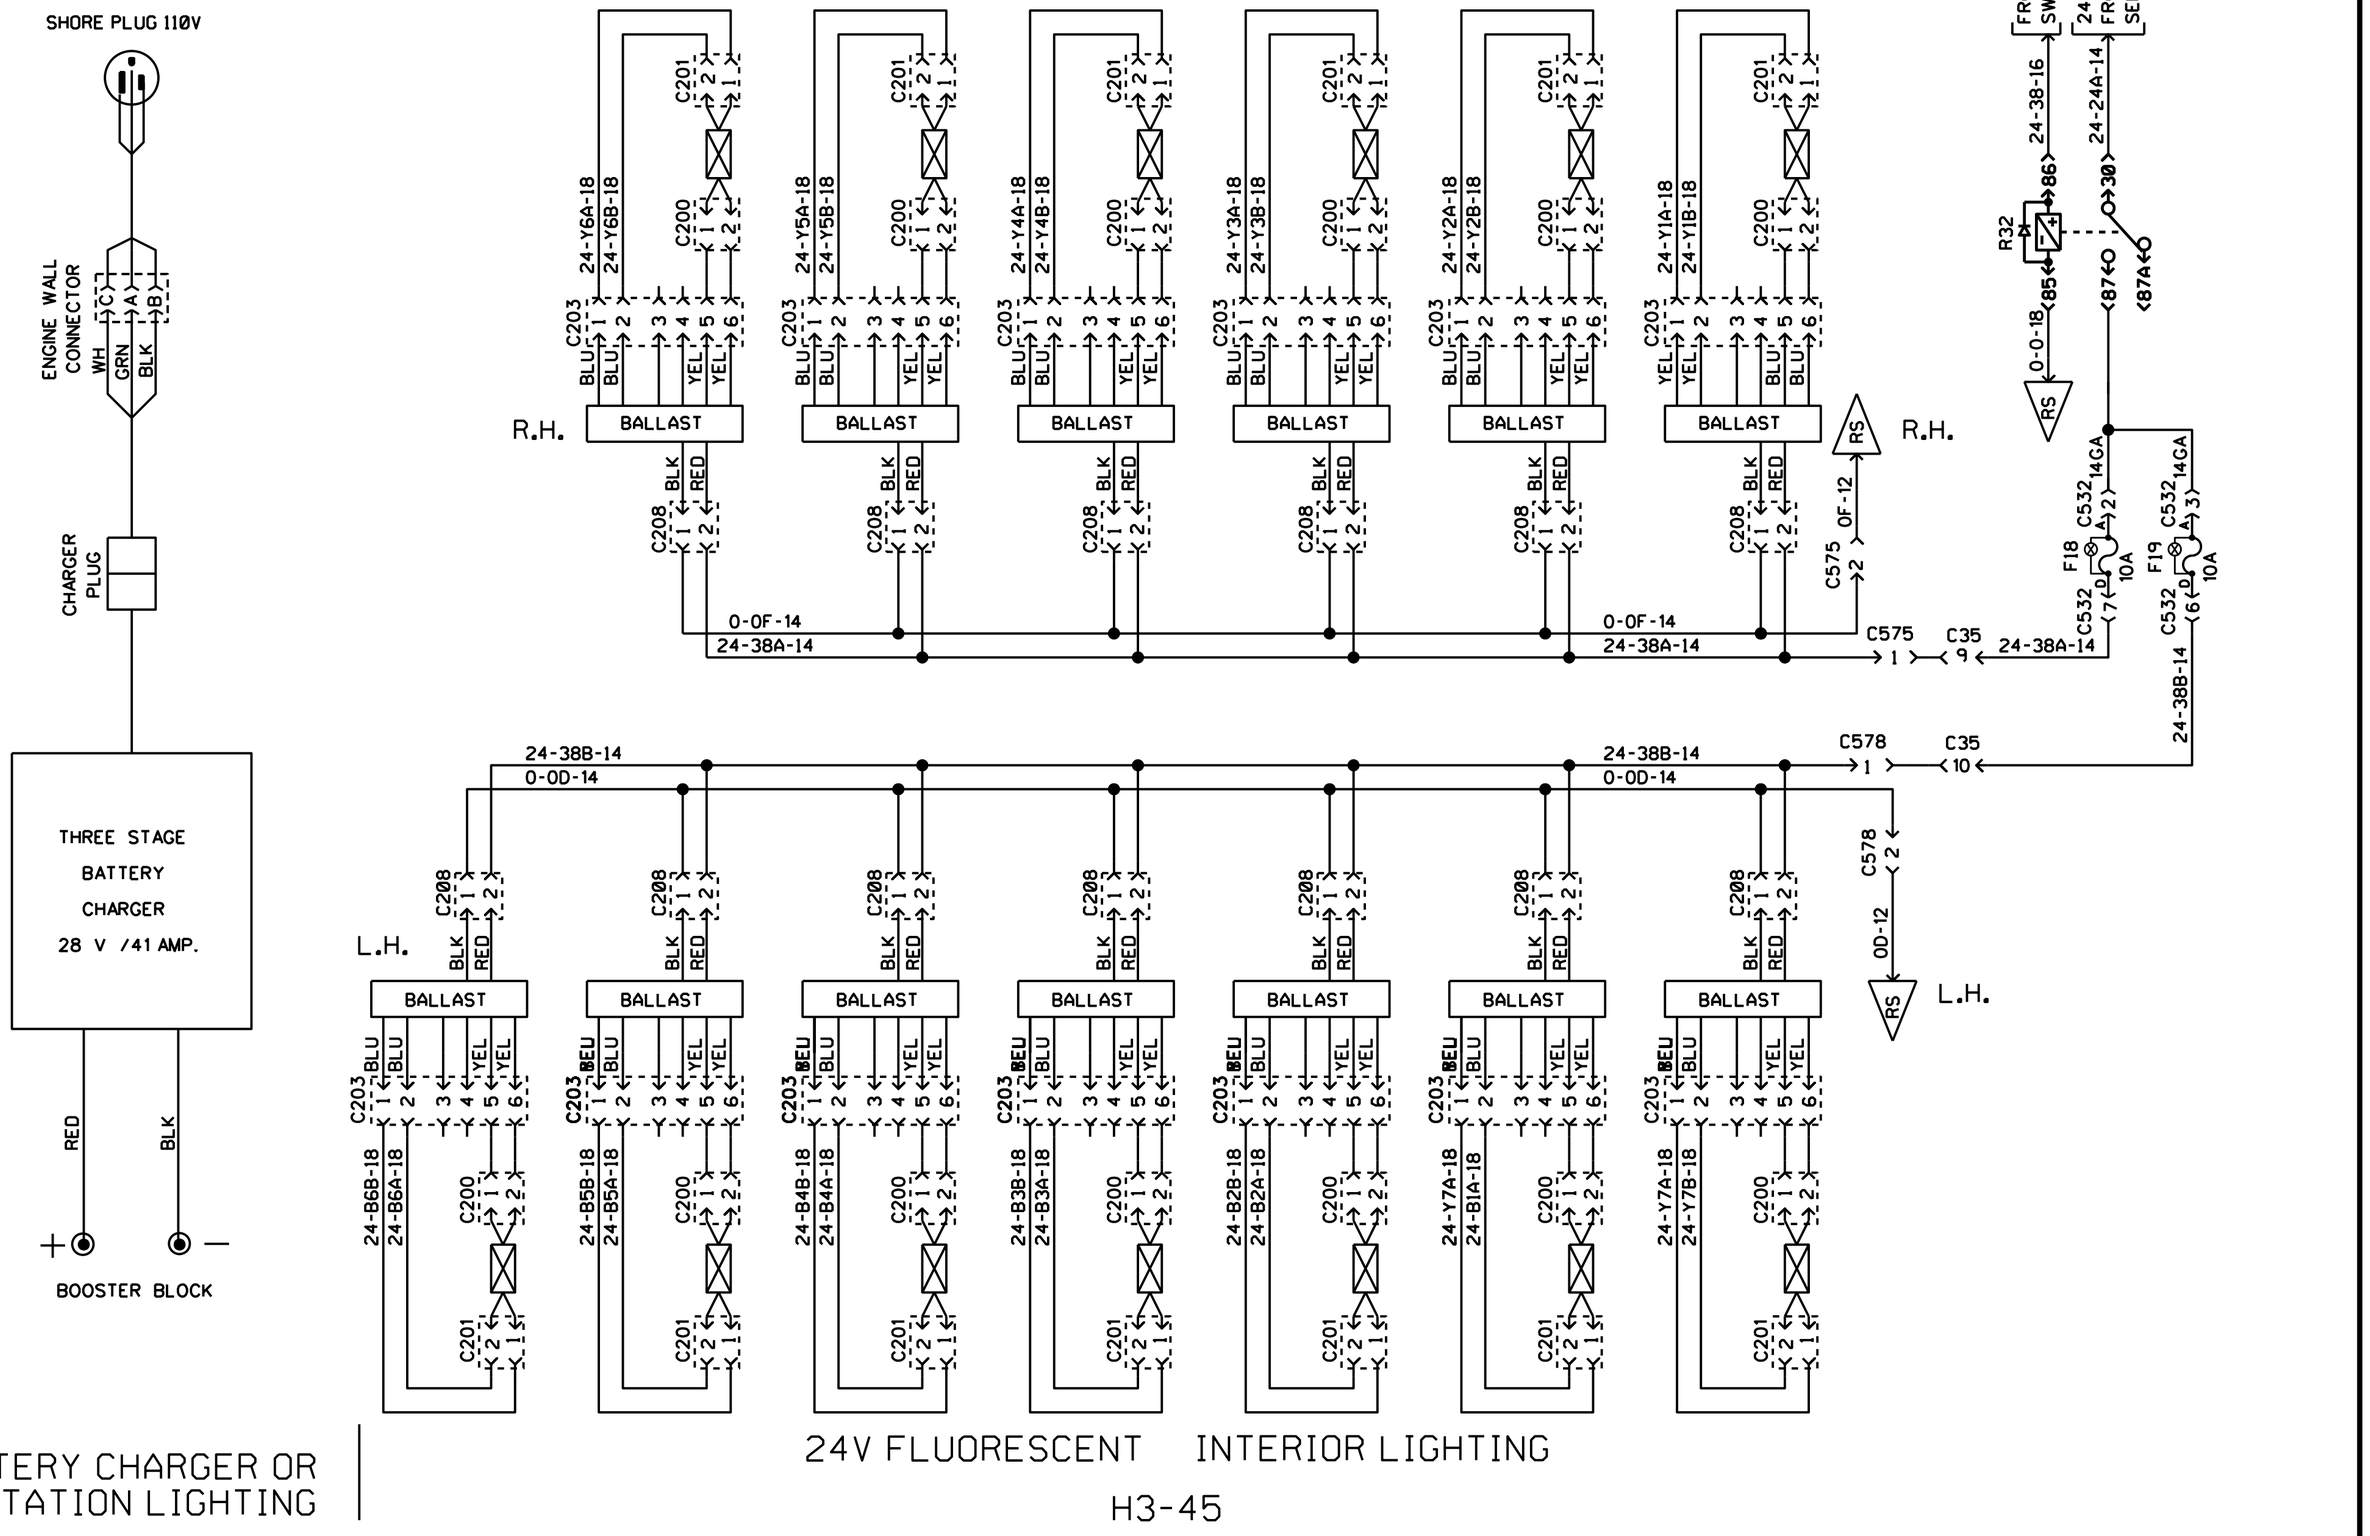

BATTERY CHARGER OR IN-STATION LIGHTING

24V FLUORESCENT INTERIOR LIGHTING

H3-45

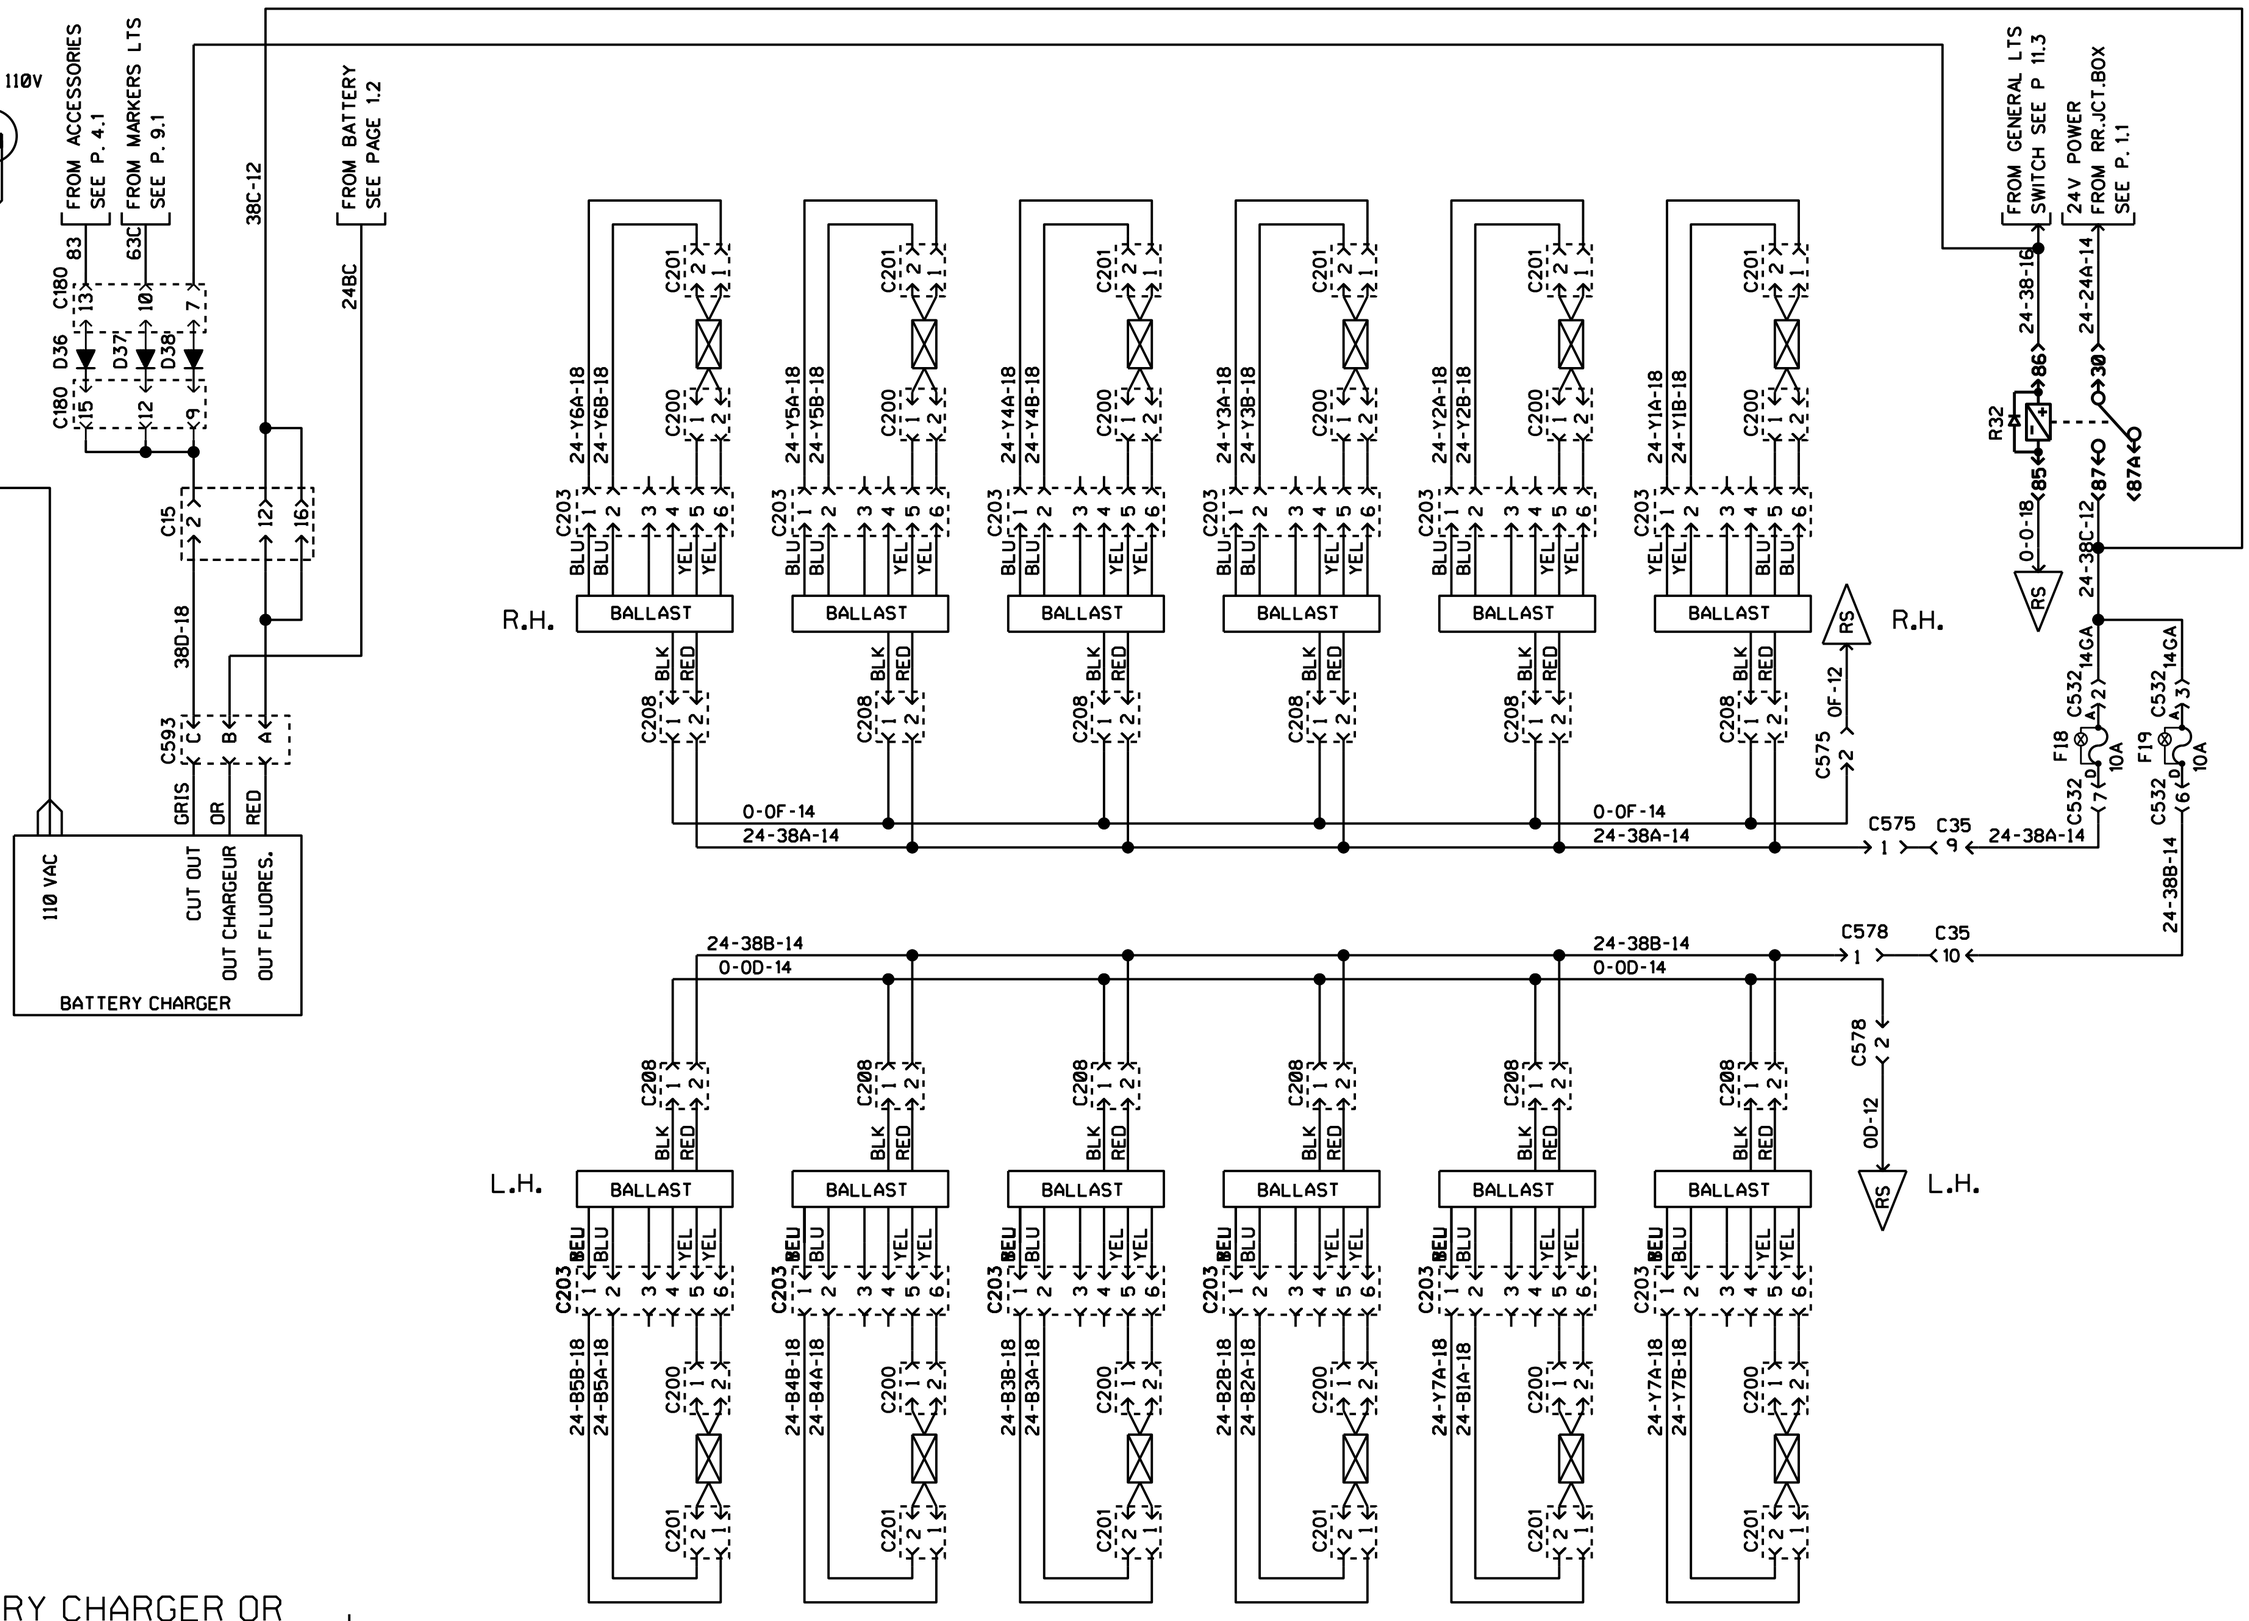

24V FLUORESCENT INTERIOR LIGHTING

BATTERY CHARGER OR IN-STATION LIGHTING

H3-41

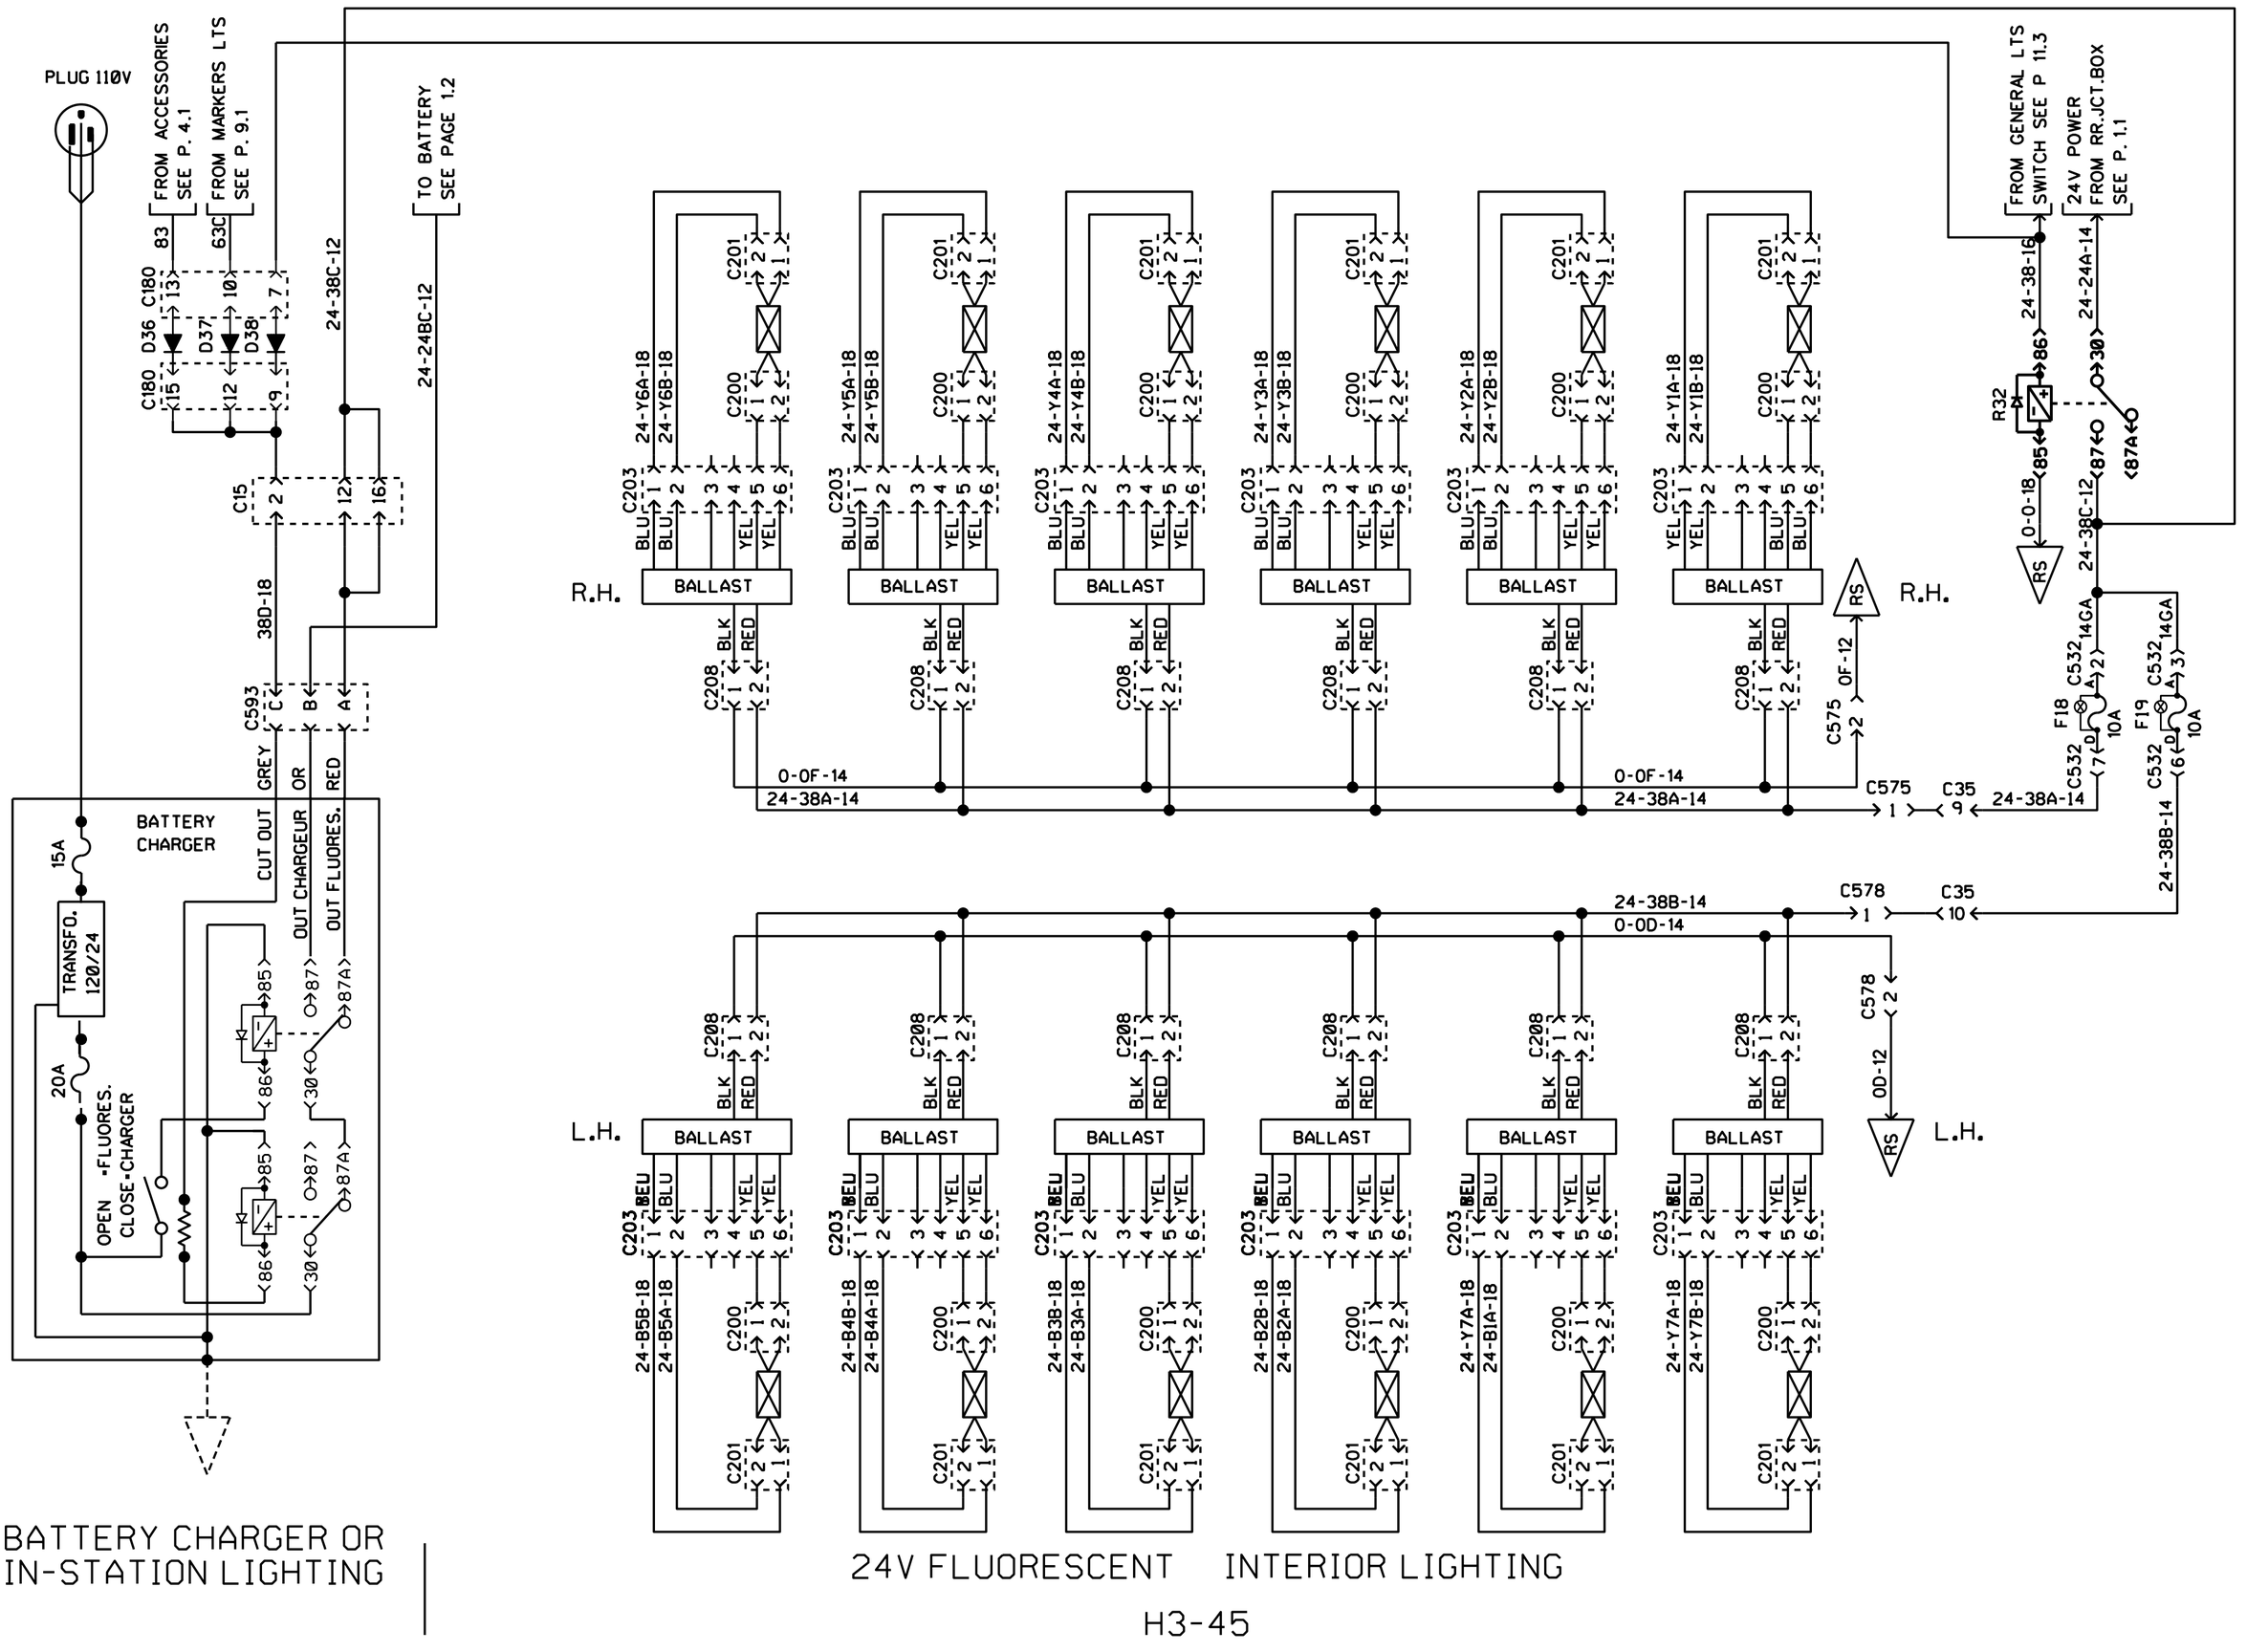

BATTERY CHARGER OR IN-STATION LIGHTING

24V FLUORESCENT INTERIOR LIGHTING

H3-45

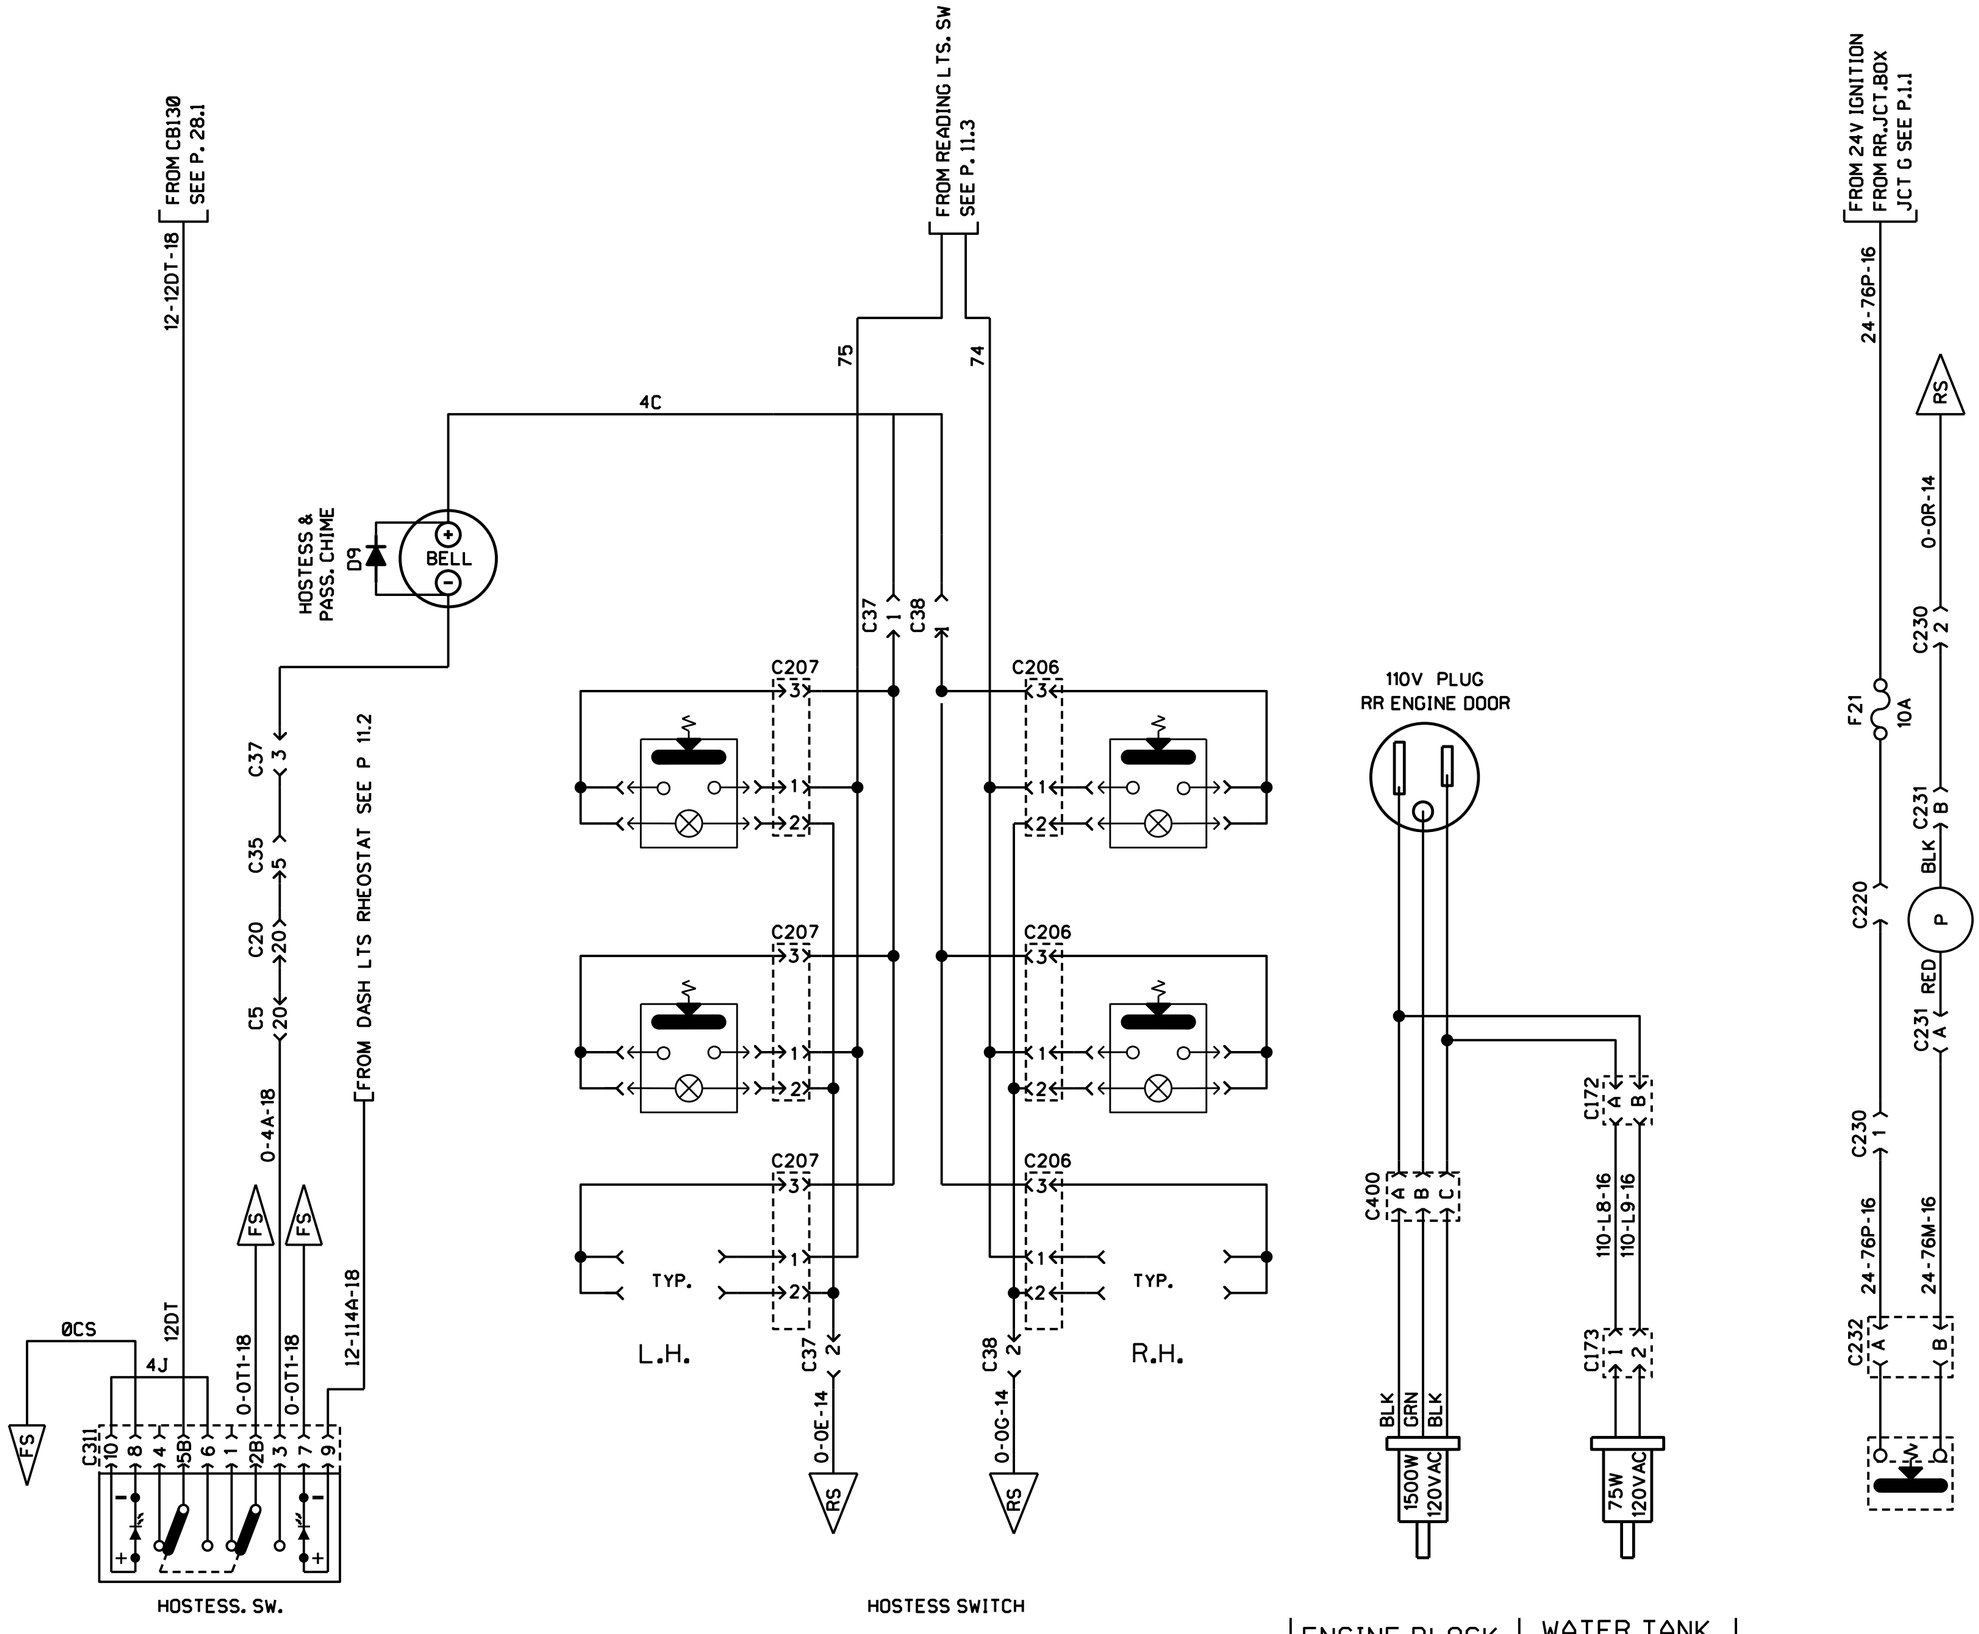
12-12DT-18
FROM CB130
SEE P. 28.1
FROM READING LTS. SW
SEE P. 11.3
75
74
4C
HOSTESS &
PASS. CHIME
D9
BELL
C37
3
C35
5
C20
20
C5
20
FROM DASH LTS RHEOSTAT SEE P 11.2
0-4A-18
FS
FS
0CS
12DT
4J
0-0T1-18
0-0T1-18
12-114A-18
C311
10
8
4
5B
6
1
2B
3
7
9
HOSTESS. SW.
C207
C206
C37
C38
TYP.
L.H.
R.H.
0-0E-14
0-0G-14
RS
HOSTESS SWITCH
110V PLUG
RR ENGINE DOOR
C400
A
B
C
BLK
GRN
BLK
1500W
120VAC
C172
110-L8-16
110-L9-16
C173
75W
120VAC
FROM 24V IGNITION
FROM RR.JCT.BOX
JCT G SEE P.1.1
24-76P-16
F21
10A
C230
2
0-OR-14
RS
BLK
C231
B
C220
P
C231
A
RED
C230
1
24-76P-16
24-76M-16
C232
A
B
HOSTESS CHIME
ENGINE BLOCK HEATER
WATER TANK HEATER
FUEL PRIME PUMP

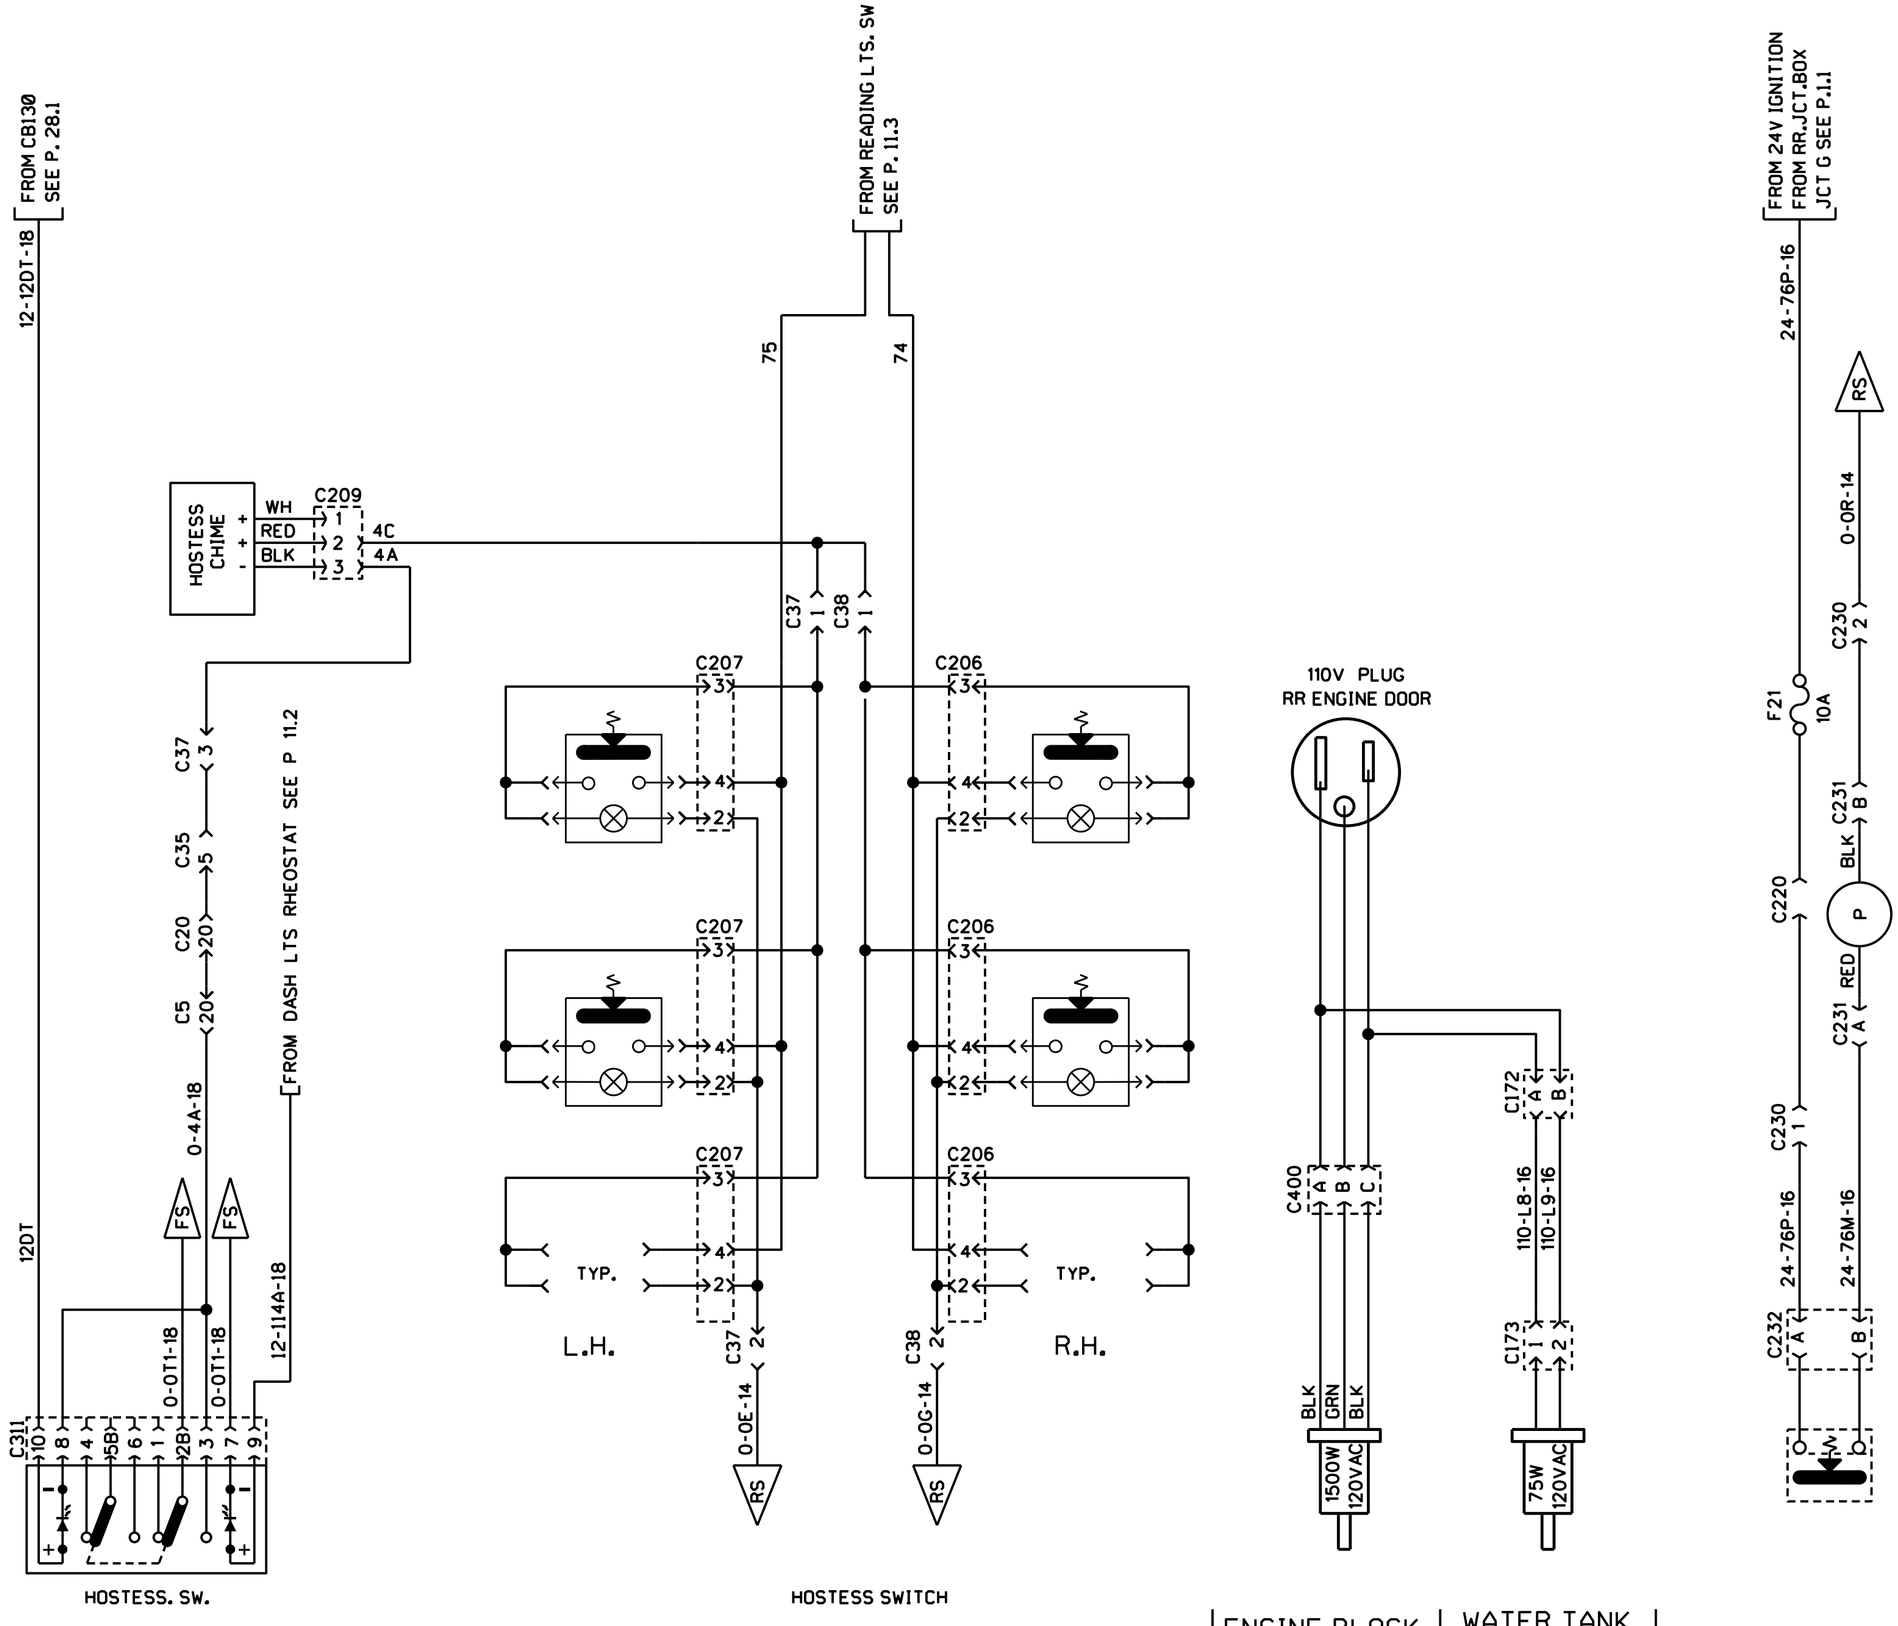

HOSTESS CHIME

ENGINE BLOCK HEATER | WATER TANK HEATER | FUEL PRIME PUMP

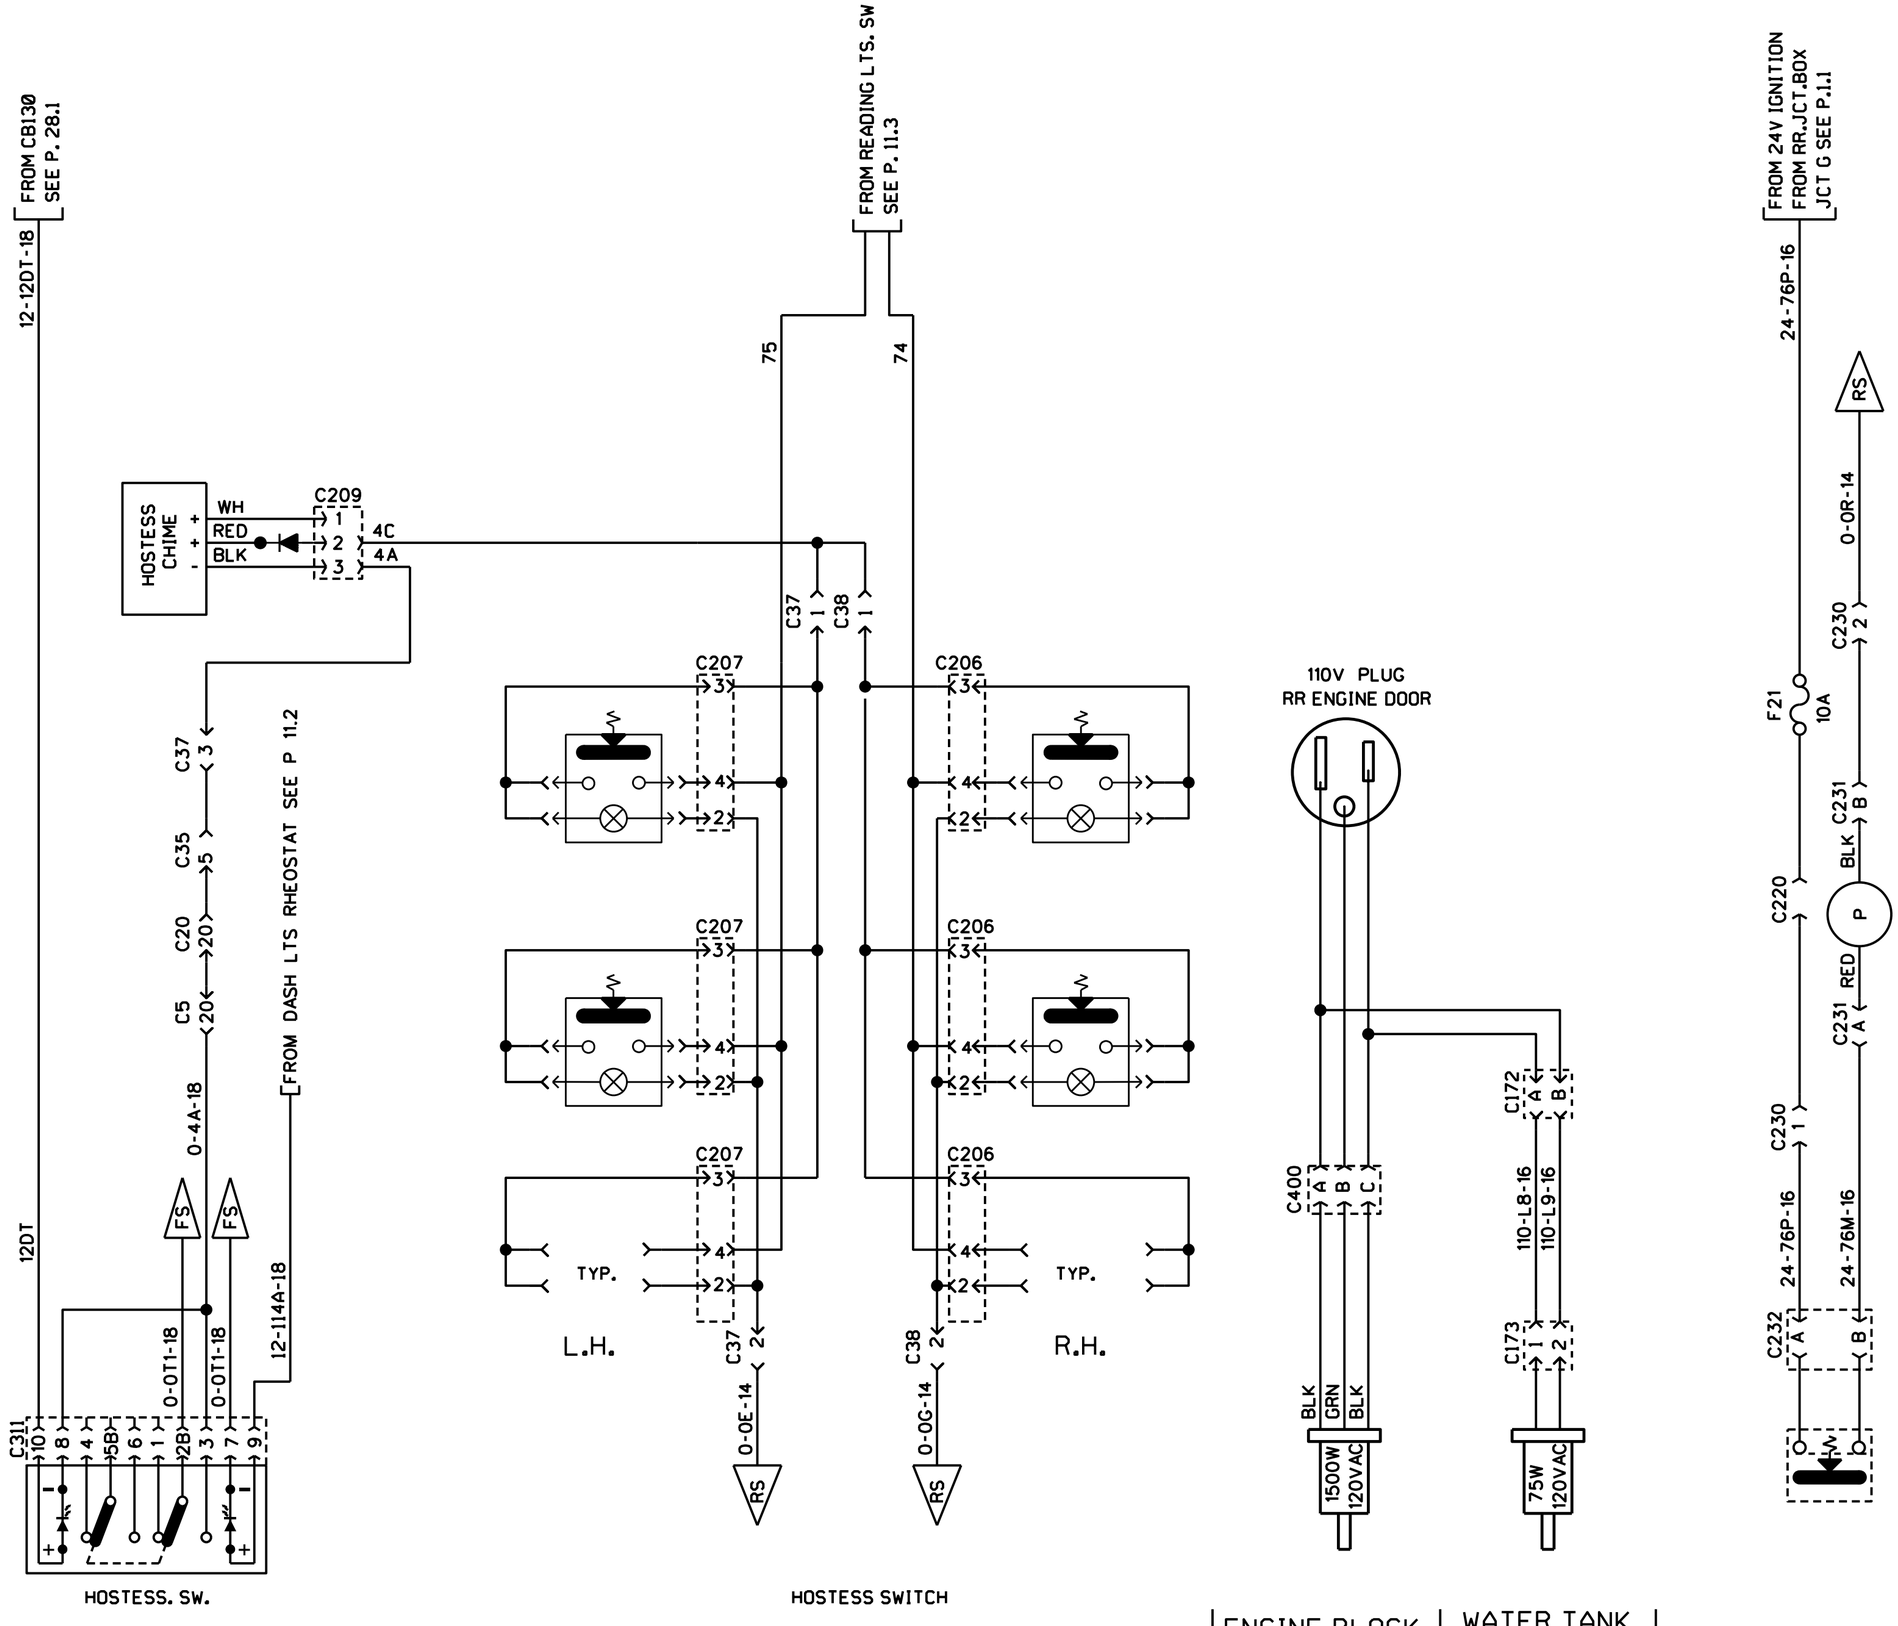

HOSTESS CHIME

ENGINE BLOCK HEATER | WATER TANK HEATER | FUEL PRIME PUMP

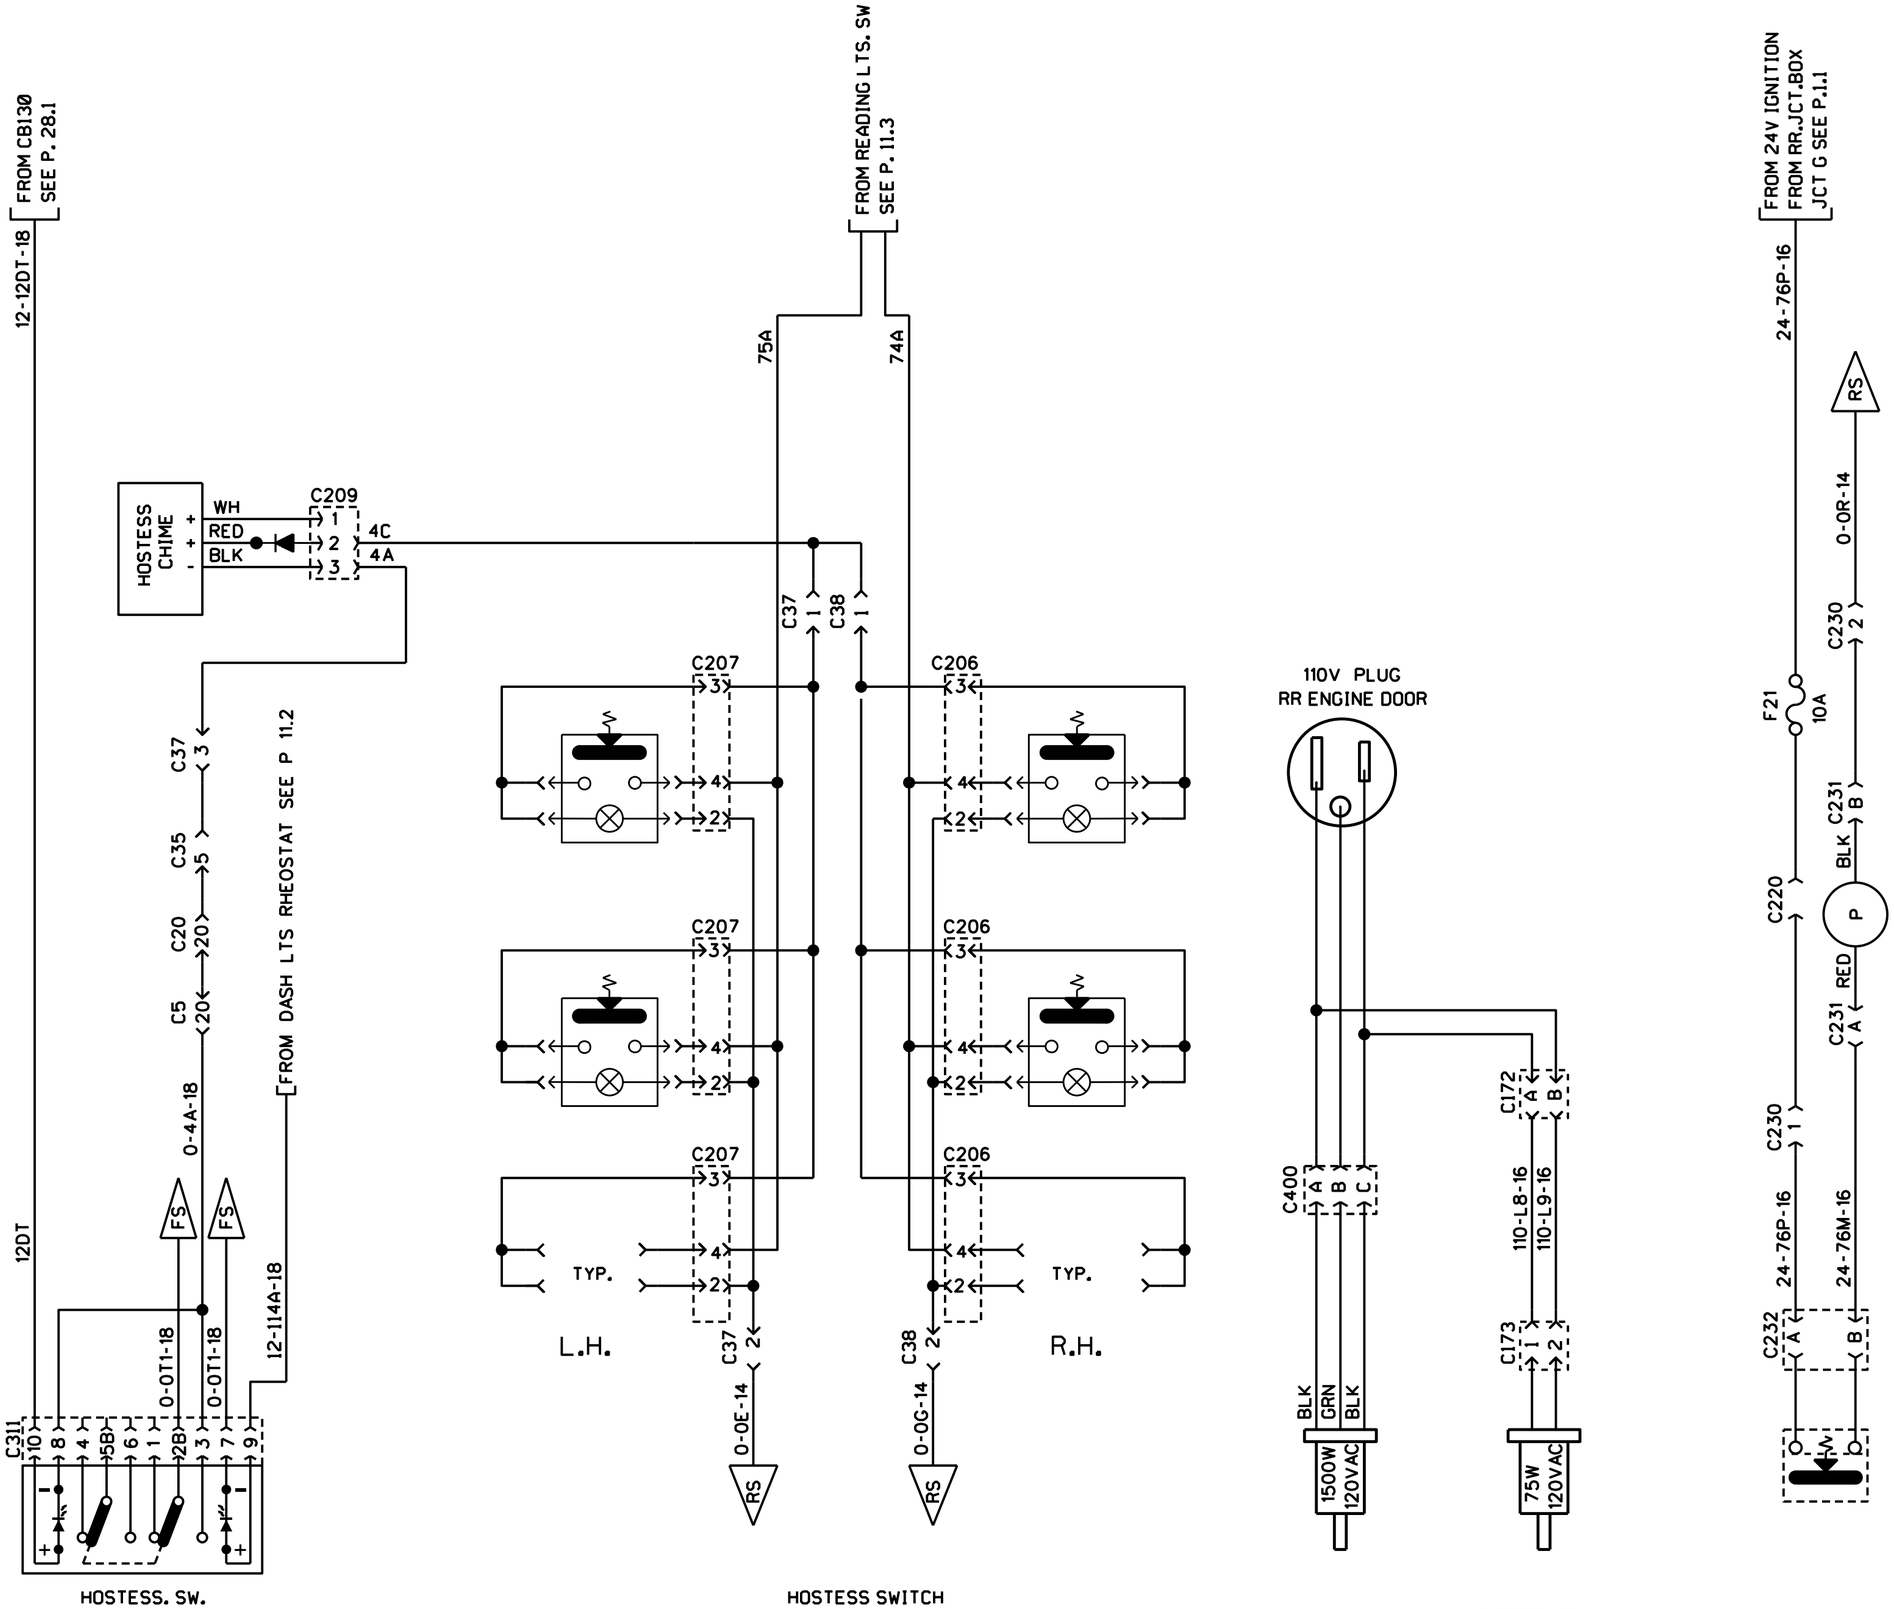
12-12DT-18
FROM CB130
SEE P. 28.1
FROM READING LTS. SW
SEE P. 11.3
75A
74A
HOSTESS
CHIME
WH
RED
BLK
C209
1
2
3
4C
4A
C37
C38
C207
C206
110V PLUG
RR ENGINE DOOR
FROM 24V IGNITION
FROM RR.JCT.BOX
JCT G SEE P.1.1
24-76P-16
RS
0-OR-14
C230
2
F21
10A
C231
B
BLK
C220
P
RED
A
1
C230
24-76M-16
C232
C400
A
B
C
BLK
GRN
BLK
1500W
120VAC
C172
110-L8-16
110-L9-16
C173
75W
120VAC
C37
3
C35
5
C20
20
C5
20
FROM DASH LTS RHEOSTAT SEE P 11.2
0-4A-18
FS
FS
12DT
12-114A-18
0-OT1-18
0-OT1-18
C311
10
8
4
5B
6
1
2B
3
7
9
HOSTESS. SW.
TYP.
L.H.
C37
2
0-OE-14
RS
C38
2
0-OG-14
RS
TYP.
R.H.
HOSTESS SWITCH
HOSTESS CHIME
ENGINE BLOCK HEATER
WATER TANK HEATER
FUEL PRIME PUMP

PREVOST

WIRING DIAGRAM

HVAC SYSTEM

NO: D060902

PAGE: 13.1

REVISION 00

12V POWER FROM FR JCT BOX SEE P. 2.1 — 12-12K-14 — CB58 6A — C74 33 — 12-29H-16 — C539 1, 7

FS — 0-0T2-16 — C539 2 — I_CHASSIS GRD

FBG — 0-00A-18 — C539 3 — I_BATTERY GRD

24V POWER FROM FR JCT BOX CB35 SEE P. 9.3 — 24-44C-16 — C539 4, 5 — I_24V C.O. SW FEED

PASSENGER DAMPER REC

RS — 0-0A-18 — C111 2 — GAZ CYLINDER — C111 1 — C9 5 — 24-65P-18 — C539 8 — O_GRD PAS. FRESH AIR (TEST)

C105 B — DR. LIQ.SOL.VAL. — C105 A — 24-116B-18 — C11 28 — C539 10 — O_ON/OFF (TEST) LIQ. SOL. VALVE

FS — 0-0C-14 — C106 B — DRIVER HTR WATER VALVE N.O. — C106 A — 24-45G-18 — C11 4 — C539 11 — O_DRIVER HEAT (TEST)

FOOT DAMPER MOTOR — C484 A 65-18, B 65A-18 — C539 13, 14 — O_DRIVER FOOT DAMPER (TEST)

DASH & DEFROST DAMPER MOTOR — C485 RED 1 68-18, BLK 3 68A-18 — C539 15, 16 — O_DRIVER DEFROST & DASH DAMPER (TEST)

CB79 15A — 24-241A-14 — 24VI POWER FROM FR.JCT.BOX SEE P.1.1

24-29-14 — C4 23

DRIVER'S FAN SPEED CTRL MODULE

BLU — RED — C480 A — 24-29-14

RED — REC DAMPER GAZ CYLINDER — RED — D — 24-65D-18 — C11 17 — C539 9 — O_DRIVER FRESH AIR DAMPER (TEST)

BLK — C — 0-0M3-12 — FS

PNK — PNK — B — 24-116C-18 — C11 8 — C539 23 — O_ON/OFF DEFROST

C481 A — BRN — 64A-18 — C11 31 — C539 17 — O_RESIS.(MCC POT 1)

C481 B — WH — 64-18 — C11 30 — C539 18 — O_RESIS.(MCC POT 2) INPUT

C481 C — BLUE — 64B-18 — C11 32 — C539 19 — O_RESIS.(MCC POT 3)

0-66-20 — C539 22 — O_PAS. ON/ OFF (TEST)

TO OUTSIDE FREEZE T.T.LT. MODULE C571 (13) SEE P. 28.1 — 0-181-20 — C539 21 — O_GROUND FREEZE TEMP

TO A/C MODULE C139 (15) SEE P. 13.2 — 24-77K-20 — C539 20 — O_AC_MODULE COMPRESSOR EN.

C539 24 — O_GROUND PHOTOCEL

HVAC DASH MODULE

C140 4 — 181C-18 (BLK) — C538 1 BLK — TEMPERATURE SENSOR — OUTSIDE — I_OUTSIDE TEMP

C140 3 — 181D-18 (WHT) — C538 2 YEL — SH

C140 2 — 181A-18 (BLK) — C474 1 BLK — TEMPERATURE SENSOR — DRIVER'S INSIDE — I_DRIVER TEMP

C140 1 — 181B-18 (WHT) — C474 2 YEL — SH

C140 3 — I_PAS.TEMP (BLK) — C479 2

C140 1 — I_PAS.TEMP (YEL) — C479 1

C140 1 — 24-7B-20 — C540 — 24V HOT WIRE FROM CB85 SEE P. 16.1 — I_24V BAT.

C140 12 — 0@12-114A-20 — FROM DASH LTS RHEOSTAT SEE P 11.2 — I_RHEOSTAT

C140 2 — 12-12LX-18 — 12V HOT WIRE FROM FR JCT BOX SEE P 7.2 — I_12V BAT.

C140 13 — 180-20 — OUTPUT

C140 3 — 180A-20 — OUTPUT

C140 14 — 180B-20 — OUTPUT

C140 4 — 180C-20 — OUTPUT

TO TELL TALE LTS MODULE OUTSIDE TEMP DISPLAY C573 (5,6,7,8) SEE P. 28.1

C140 15 — C9 19 — 0@1-167-18 — C58 15 — TO ELECT. TRANSMITTER C137 (8) SEE P. 13.2 — O_HEAT RESISTOR (P1)

C140 16 — C9 20 — 0@1-167A-18 — C58 14 — TO ELECT. TRANSMITTER C137 (9) SEE P. 13.2 — O_COOL RESISTOR (P2)

C140 5 — C9 18 — 0-165D-18 — C58 13 — REFERENCE GROUND FROM ELECT. TRANSMITTER C137 (1) SEE P. 13.2 — I_GRD REF. (P3)

C140 6 — RX3-20 — TO 24V GAUGE RH PANEL CLUSTER RX(3) SEE P. 7.1 — O_CLUSTER

C140 17 — 0-0T2-20 — RH PANEL GRD FROM CLUSTER SEE P. 7.2 — I_CLUSTER

C140 7 — 0-00A-18 — FBG — I_BAT. GRD

C140 18 — 24-45B-20 — PASSENGER HEAT SIGNAL FROM A/C MODULE C139 (1) SEE P. 13.2 — I_PAS. HEAT RED LED

C140 19 — 24-2B-20 — I_PAS. COOL GREEN LED

C140 20 — 24-12W-18 — ENTRANCE DOOR OPEN SIGN. FROM C4(21) SEE P. 16.1 — I_ENTRANCE DOOR OPEN

C140 8 — I_DASH/DEFROST SW

C140 10 — I_DASH SW.

C140 11 — 12-25-20 — 12V ENGINE RUN SIGNAL FROM R100 (87) SEE P. 4.1 — I_ENG. RUN

C140 22 — 24-83-20 — 24V KEY SW.ACCESSORIES SIGNAL FROM MASTER KEY SW. SEE P. 4.1 — I_ACCES.

C58 10 — C9 17

PASSENGER COOL SIGNAL FROM A/C MODULE C139 (14) SEE P. 13.2 — 24-2B-20 — C59 14 — C91 32

FIRST SPEED PRESSURE 138-105

CONDENSER FAN MOTOR R.H.

BC — 0-0C-16 — R39 — C537 2 — C15 18 — 24-67K-18 — C91 17 — C158 2 — C158 1 — 24-2B-18

BC — 0-0D-10 — BAT — 41A-10 — BAT — 24-41-10 — CB77 40A — 24-90B-10 — 24V POWER FROM CB8 SEE P. 1.1

41B-10

CONDENSER FAN MOTOR L.H.

BC — 0-0D-10 — 42A-10 — N.C. / N.O. — BAT — 24-42-10 — CB78 40A — 24-90C-10 — 24V POWER FROM CB8 SEE P. 1.1

BC — 0-0C-16 — R41

BC — 0-0C-16 — R40 — C537 1 — C15 17 — 24-67L-18 — C91 19 — C159 2 — C159 1 — 24-67A-16

24-67L-18

SECOND SPEED PRESSURE 195-150

TO HUMIDISTAT SEE P. 13.2

TO EVAPORATOR CONTROL MODULE C112(B) SEE P. 13.2 — 24-67A-16 — C58 19 — 24-67A-16 — C59 9 — C91 31

TO HVAC LOGIC PANEL P. 13.2 — 24-67A-16 — 24-67A-16 — 87A — 87 — 30 — C59 10 — 24-67D-16 — CB71 10A — 24-24C-12 — 24V POWER FROM RR JCT.BOX R39 (BAT) SEE P. 1.1

C9 1 — 0-66-20 — C58 3 — 85 — 86 — 24-67D-20

R34

CONDENSER COMPARTMENT DOOR AJAR SWITCH

0-45W-20 — C12 9 — C9 6 — 0-45W-20 — TO CONDENSER DOOR AJAR T.T.LT. MODULE C515 (2) SEE P. 28.1

PREVOST

HVAC SYSTEM

WIRING DIAGRAM

NO: D060902

PAGE: 13.1

REVISION 01

12V POWER FROM FR JCT BOX SEE P. 2.1 — 12-12K-14 — CB58 6A — C74 35 — 12-29H-16 — C539 1, 7, 12

24V POWER FROM FR JCT BOX CB35 SEE P. 9.3 — 24-44C-16 — C539 5, 6

FS — 0-0T2-16 — C539 2 — I_CHASSIS GRD

FBG — 0-00A-18 — C539 3, 4 — I_BATTERY GRD

C539 7 — I_12V C.O. SW FEED

C539 6 — I_24V C.O. SW FEED

PASSENGER DAMPER REC

RS — 0-0A-18 — C111 2 — GAZ CYLYNDER — C111 1 — C9 5 — 24-65P-18 — C539 8 — O_GRD PAS. FRESH AIR (TEST)

C105 B — DR. LIQ.SOL.VAL. — C105 A — 24-116B-18 — C11 28 — C539 10 — O_ON/OFF (TEST) LIQ. SOL. VALVE

FS — 0-0C-14 — C106 B — DRIVER HTR WATER VALVE N.O. — C106 A — 24-45G-18 — C11 4 — C539 11 — O_DRIVER HEAT (TEST)

FOOT DAMPER MOTOR — C484 A — 65-18 — C539 14 — O_DRIVER FOOT DAMPER (TEST)
C484 B — 65A-18 — C539 13

DASH & DEFROST DAMPER MOTOR — RED — C485 1 — 68-18 — C539 15 — O_DRIVER DEFROST & DASH DAMPER (TEST)
BLK — C485 3 — 68A-18 — C539 16

CB79 15A — 24-24IA-14 — 24VI POWER FROM FR.JCT.BOX SEE P.1.1

24-29-14 — C4 23

DRIVER'S FAN SPEED CTRL MODULE

BLU — BATTERY — C480 A — 24-29-14

RED — REC DAMPER GAZ CYLYNDER — RED — D — 24-65D-18 — C11 17 — C539 9 — O_DRIVER FRESH AIR DAMPER (TEST)

GROUND — C — 0-0M3-12 — FS

IGNITION — B — 12-116C-18 — C11 8 — C539 23 — O_ON/OFF DEFROST

C481 A — CCW — 64A-18 — C11 31 — C539 17 — O_RESIS.(MCC POT 1)
C481 B — WHIPPER — 64-18 — C11 30 — C539 18 — INPUT(MCC POT 2)
C481 C — CW — 64B-18 — C11 32 — C539 19 — O_RESIS.(MCC POT 3)

0-66-20 — C539 22 — O_PAS. ON/ OFF (TEST)

TO OUTSIDE FREEZE T.T.LT. MODULE C571 (13) SEE P. 28.1 — 0-181-20 — C539 21 — O_GROUND FREEZE TEMP

TO A/C MODULE C139 (15) SEE P. 13.2 — 24-77K-20 — C539 20 — O_AC_MODULE COMPRESSOR EN.

C539 24 — O_GROUND PHOTOCEL

HVAC DASH MODULE

C140 4 — I_OUTSIDE TEMP — 181C-18 (BLK) — C538 1 — BLK — TEMPERATURE SENSOR — OUTSIDE
C140 3 — 181D-18 (WHT) — C538 2 — YEL
SH

C140 2 — I_DRIVER TEMP — 181A-18 (BLK) — C474 1 — BLK — TEMPERATURE SENSOR — DRIVER'S INSIDE
C140 1 — 181B-18 (WHT) — C474 2 — YEL
SH

C140 3 — I_PAS.TEMP (BLK)
C140 2 — (YEL)
C140 1

C140 1 — I_24V BAT. — C540 1 — 24-7B-20 — 24V HOT WIRE FROM CB85 SEE P. 16.1

C140 12 — I_RHEOSTAT — 0@12-114A-20 — FROM DASH LTS RHEOSTAT SEE P 11.2

C140 2 — I_12V BAT. — 12-12LX-18 — 12V HOT WIRE FROM FR JCT BOX SEE P 7.1

C140 13 — OUTPUT — 180-20
C140 3 — OUTPUT — 180A-20
C140 14 — OUTPUT — 180B-20
C140 4 — OUTPUT — 180C-20
TO TELL TALE LTS MODULE OUTSIDE TEMP DISPLAY C573 (5,6,7,8) SEE P. 28.1

C140 15 — O_HEAT 520 OHMS RESISTOR (P1) — C9 19 — 0@1-167-18 — C58 15 — TO ELECT. TRANSMITTER C137 (8) SEE P. 13.2

C140 16 — O_COOL 500 OHMS RESISTOR (P2) — C9 20 — 0@1-167A-18 — C58 14 — TO ELECT. TRANSMITTER C137 (9) SEE P. 13.2

C140 5 — I_GRD REF. (P3) — C9 18 — 0-165D-18 — C58 13 — REFERENCE GROUND FROM ELECT. TRANSMITTER C137 (1) SEE P. 13.2

C140 6 — O_CLUSTER — RX3-20 — TO 24V GAUGE RH PANEL CLUSTER RX(3) SEE P. 7.1

C140 17 — I_CLUSTER — 0-0T2-20 — RH PANEL GRD FROM CLUSTER SEE P. 7.2

C140 7 — I_BAT. GRD — 0-00A-18 — FBG

C140 18 — I_PAS. HEAT RED LED — 24-45B-20 — PASSENGER HEAT SIGNAL FROM A/C MODULE C139 (1) SEE P. 13.2

C140 19 — I_PAS. COOL GREEN LED — 24-2B-20
C140 20 — I_ENTRANCE DOOR OPEN — 24-12W-18 — ENTRANCE DOOR OPEN SIGN. FROM C4(21) SEE P. 16.1

C140 8 — I_DASH/DEFROST SW

C140 10 — I_DASH SW.

C140 11 — I_ENG. RUN — 12-25-20 — 12V ENGINE RUN SIGNAL FROM R100 (87) SEE P. 4.1

C140 22 — I_ACCES. — 24-83-20 — 24V KEY SW.ACCESSORIES SIGNAL FROM MASTER KEY SW. SEE P. 4.1

PASSENGER COOL SIGNAL FROM A/C MODULE C139 (14) SEE P. 13.2 — 24-2B-20 — C58 10 — C9 17 — C59 14 — C91 32

FIRST SPEED PRESSURE 138-105

CONDENSER FAN MOTOR R.H. — BC — 0-0C-16 — R39 — C537 2 — C15 18 — 24-67K-18 — C91 17 — C158 2 — C158 1 — 24-2B-18

BC — 0-0D-10 — BAT — 41A-10 — BAT — 24-41-10 — CB77 40A — 24-90B-10 — 24V POWER FROM CB8 SEE P. 1.1

41B-10

CONDENSER FAN MOTOR L.H. — N.C. — BC — 0-0D-10 — 42A-10 — N.O. — BAT — 24-42-10 — CB78 40A — 24-90C-10 — 24V POWER FROM CB8 SEE P. 1.1

BC — 0-0C-16 — R41

BC — 0-0C-16 — R40 — C537 1 — C15 17 — 24-67L-18 — C91 19 — C159 2 — C159 1 — 24-67A-16

SECOND SPEED PRESSURE 195-150

24-67L-18

TO HUMIDISTAT SEE P. 13.2

TO EVAPORATOR CONTROL MODULE C112(B) SEE P. 13.2 — 24-67A-16 — C58 19 — 24-67A-16 — C59 9 — C91 31 — TO LAVATORY FAN R106(86) SEE P. 17.1

TO HVAC LOGIC PANEL P. 13.2 — 24-67A-16 — 24-67A-16 — 87A — 87 — 30 — C59 10 — CB71 10A — 24-24C-12 — 24V POWER FROM RR JCT.BOX R39 (BAT) SEE P. 1.1

C9 1 — 0-66-20 — C58 3 — 85 — 86 — 24-67D-20 — R34 — 24-67D-16

CONDENSER COMPARTMENT DOOR AJAR SWITCH — 0-45W-20 — C12 9 — C9 6 — 0-45W-20 — TO CONDENSER DOOR AJAR T.T.LT. MODULE C515 (2) SEE P. 28.1

PREVOST

WIRING DIAGRAM

HVAC SYSTEM

NO: D060902

PAGE: 13.1

REVISION 02

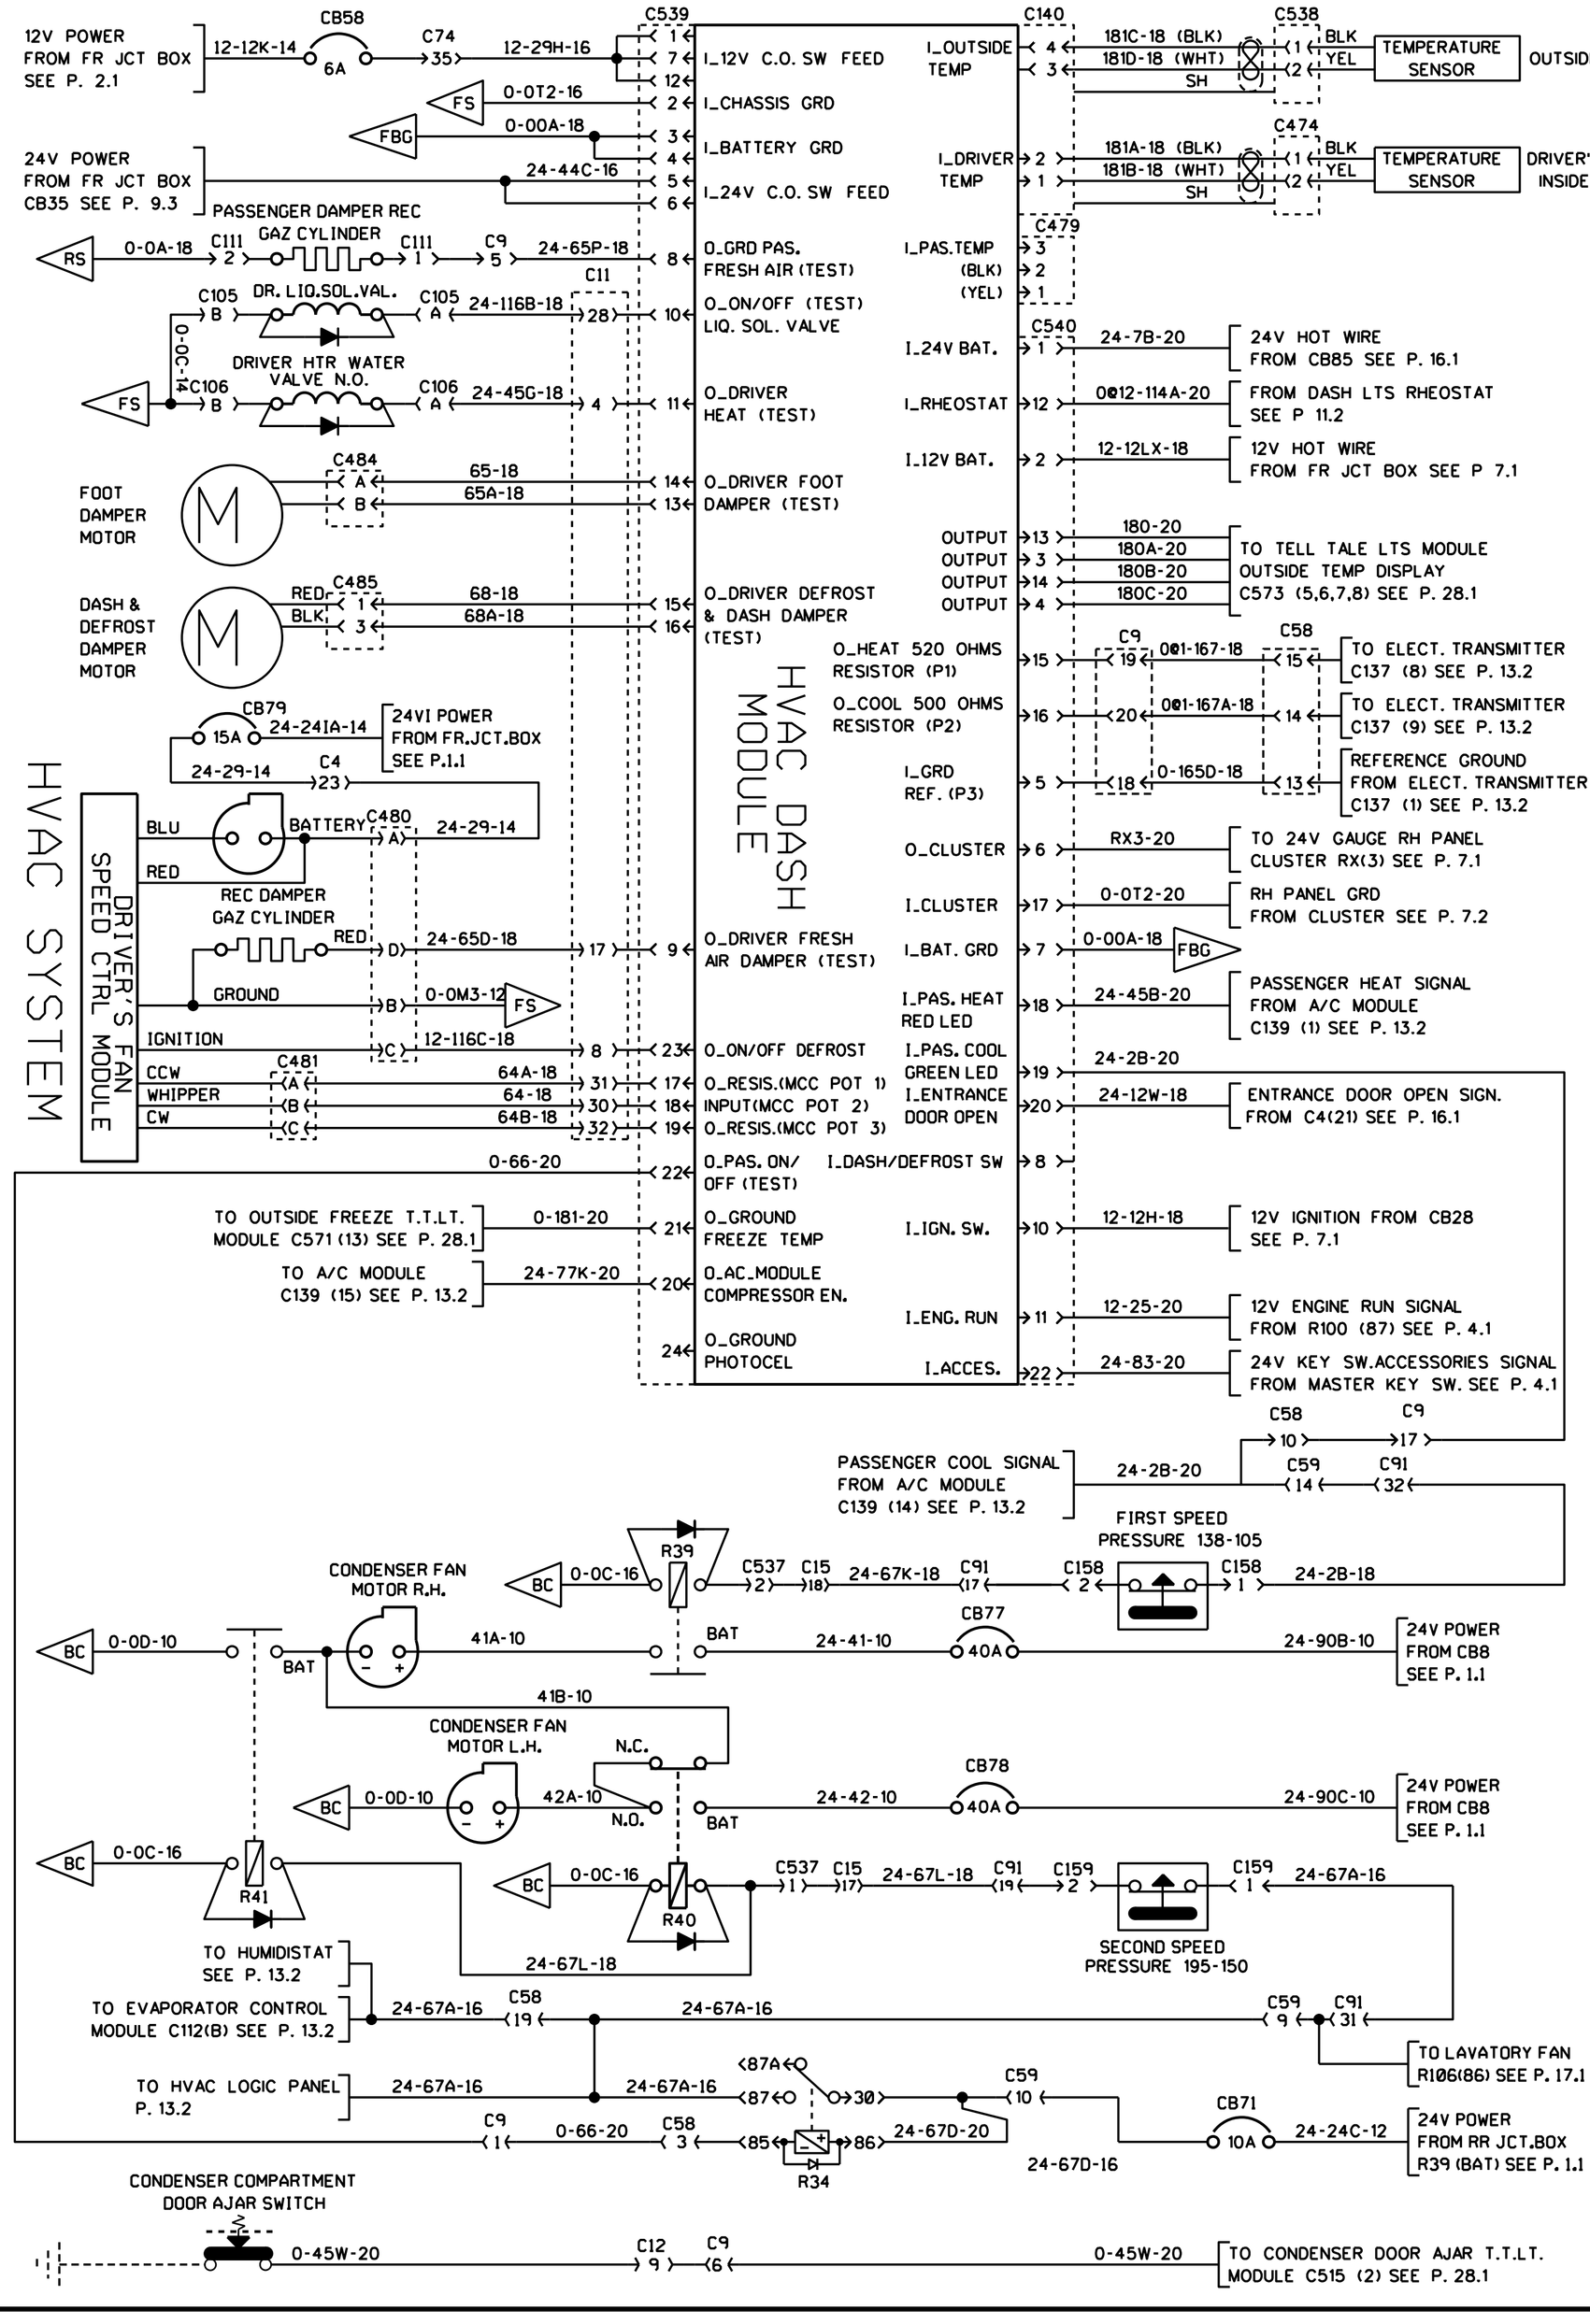

PREVOST | WIRING DIAGRAM

HVAC SYSTEM

HVAC DASH MODULE

DRIVER'S FAN SPEED CTRL MODULE

12V POWER FROM FR JCT BOX SEE P. 2.1 — 12-12K-14 — CB58 6A — C74 35 — 12-29H-16 — C539 1,7,12

FS — 0-0T2-16 — C539 2 — I_CHASSIS GRD

FBG — 0-00A-18 — C539 3 — I_BATTERY GRD

24V POWER FROM FR JCT BOX CB35 SEE P. 9.3 — 24-44C-16 — C539 4,5,6 — I_12V C.O. SW FEED / I_24V C.O. SW FEED

PASSENGER DAMPER REC

RS — 0-0A-18 — C111 2 — GAZ CYLINDER — C111 1 — C9 5 — 24-65P-18 — C539 8 — O_GRD PAS. FRESH AIR (TEST)

C105 B — DR. LIQ.SOL.VAL. — C105 A — 24-116B-18 — C11 28 — C539 10 — O_ON/OFF (TEST) LIQ. SOL. VALVE

FS — 0-0C-14 — C106 B — DRIVER HTR WATER VALVE N.O. — C106 A — 24-45G-18 — C11 4 — C539 11 — O_DRIVER HEAT (TEST)

FOOT DAMPER MOTOR — C484 A — 65-18 — C539 14 — O_DRIVER FOOT DAMPER (TEST)
C484 B — 65A-18 — C539 13

DASH & DEFROST DAMPER MOTOR — C485 RED 1 — 68-18 — C539 15 — O_DRIVER DEFROST & DASH DAMPER (TEST)
C485 BLK 3 — 68A-18 — C539 16

CB79 15A — 24-24IA-14 — 24VI POWER FROM FR.JCT.BOX SEE P.1.1

24-29-14 — C4 23

BLU — BATTERY — C480 A — 24-29-14
RED

REC DAMPER GAZ CYLINDER — RED — D — 24-65D-18 — C11 17 — C539 9 — O_DRIVER FRESH AIR DAMPER (TEST)

GROUND — B — 0-0M3-12 — FS

IGNITION — C — 12-116C-18 — C11 8 — C539 23 — O_ON/OFF DEFROST

C481 A — CCW — 64A-18 — C11 31 — C539 17 — O_RESIS.(MCC POT 1)
C481 B — WHIPPER — 64-18 — C11 30 — C539 18 — INPUT(MCC POT 2)
C481 C — CW — 64B-18 — C11 32 — C539 19 — O_RESIS.(MCC POT 3)

0-66-20 — C539 22 — O_PAS. ON/ OFF (TEST)

TO OUTSIDE FREEZE T.T.LT. MODULE C571 (13) SEE P. 28.1 — 0-181-20 — C539 21 — O_GROUND FREEZE TEMP

TO A/C MODULE C139 (15) SEE P. 13.2 — 0-77K-20 — C539 20 — O_AC_MODULE COMPRESSOR DIS.

C539 24 — O_GROUND PHOTOCEL

C140 4 — I_OUTSIDE TEMP — 181C-18 (BLK) / 181D-18 (WHT) SH — C538 1 BLK / 2 YEL — TEMPERATURE SENSOR — OUTSIDE
C140 3

C140 2 — I_DRIVER TEMP — 181A-18 (BLK) / 181B-18 (WHT) SH — C474 1 BLK / 2 YEL — TEMPERATURE SENSOR — DRIVER'S INSIDE
C140 1

C479 3 — I_PAS.TEMP (BLK)
C479 2 — (YEL)
C479 1

C540 1 — I_24V BAT. — 24-7B-20 — 24V HOT WIRE FROM CB85 SEE P. 16.1

C140 12 — I_RHEOSTAT — 0@12-114A-20 — FROM DASH LTS RHEOSTAT SEE P 11.2

C140 2 — I_12V BAT. — 12-12LX-18 — 12V HOT WIRE FROM FR JCT BOX SEE P 7.1

C140 13 — OUTPUT — 180-20
C140 3 — OUTPUT — 180A-20
C140 14 — OUTPUT — 180B-20
C140 4 — OUTPUT — 180C-20
TO TELL TALE LTS MODULE OUTSIDE TEMP DISPLAY C573 (5,6,7,8) SEE P. 28.1

C140 15 — O_HEAT 520 OHMS RESISTOR (P1) — C9 19 — 0@1-167-18 — C58 15 — TO ELECT. TRANSMITTER C137 (8) SEE P. 13.2

C140 16 — O_COOL 500 OHMS RESISTOR (P2) — C9 20 — 0@1-167A-18 — C58 14 — TO ELECT. TRANSMITTER C137 (9) SEE P. 13.2

C140 5 — I_GRD REF. (P3) — C9 18 — 0-165D-18 — C58 13 — REFERENCE GROUND FROM ELECT. TRANSMITTER C137 (1) SEE P. 13.2

C140 6 — O_CLUSTER — RX3-20 — TO 24V GAUGE RH PANEL CLUSTER RX(3) SEE P. 7.1

C140 17 — I_CLUSTER — 0-0T2-20 — RH PANEL GRD FROM CLUSTER SEE P. 7.2

C140 7 — I_BAT. GRD — 0-00A-18 — FBG

C140 18 — I_PAS. HEAT RED LED — 24-45B-20 — PASSENGER HEAT SIGNAL FROM A/C MODULE C139 (1) SEE P. 13.2

C140 19 — I_PAS. COOL GREEN LED — 24-2B-20

C140 20 — I_ENTRANCE DOOR OPEN — 24-12W-18 — ENTRANCE DOOR OPEN SIGN. FROM C4(21) SEE P. 16.1

C140 8 — I_DASH/DEFROST SW

C140 10 — I_IGN. SW. — 12-12H-18 — 12V IGNITION FROM CB28 SEE P. 7.1

C140 11 — I_ENG. RUN — 12-25-20 — 12V ENGINE RUN SIGNAL FROM R100 (87) SEE P. 4.1

C140 22 — I_ACCES. — 24-83-20 — 24V KEY SW.ACCESSORIES SIGNAL FROM MASTER KEY SW. SEE P. 4.1

RS — 0-0K-18 — R38 86 / 85 — FROM A/C MODULE C139(14) SEE P.13.2 — 24-2BB-18
R38 30 — 87 / 87A

C136 — D1 — C136 — C58 10 — C9 17 — 24-2B-18 — C59 14 — C91 32

24-67A-16

COND. FAN MOTOR R.H. — BC — 0-0C-16 — R39 — C537 2 — C15 18 — 24-67K-18 — C91 17 — C158 2 — C158 1 — 24-2B-18

FIRST SPEED PRESSURE 138-105

BC — 0-0D-10 — BAT — 41A-10 — BAT — 24-41-10 — CB77 40A — 24-90B-10 — 24V POWER FROM CB8 SEE P. 1.1

41B-10

CONDENSER FAN MOTOR L.H. — N.C. / N.O. — 42A-10

RS — 0-0A-18 — C95 A — PASSENGER LIQ. SOL. VALVE — C95 B — 24-2B-18

BC — 0-0D-10 — 42A-10 — BAT — 24-42-10 — CB78 40A — 24-90C-10 — 24V POWER FROM CB8 SEE P. 1.1

BC — 0-0C-16 — R41

BC — 0-0C-16 — R40 — C537 1 — C15 17 — 24-67L-18 — C91 19 — C159 2 — C159 1 — 24-67A-16

SECOND SPEED PRESSURE 195-150

24-67L-18

TO HUMIDISTAT SEE P. 13.2

TO EVAPORATOR CONTROL MODULE C112(B) SEE P. 13.2 — 24-67A-16 — C58 19 — 24-67A-16 — C59 9 — C91 31 — TO LAVATORY FAN R106(86) SEE P. 17.1

TO HVAC LOGIC PANEL P. 13.2 — 24-67A-16 — 24-67A-16 — 87A / 87 / 30 — C59 10

C9 1 — 0-66-20 — C58 3 — 85 / 86 — R34 — 24-67D-20

24-67D-16

CB71 10A — 24-24C-12 — 24V POWER FROM RR JCT.BOX R39 (BAT) SEE P. 1.1

CONDENSER COMPARTMENT DOOR AJAR SWITCH — 0-45W-20 — C9 6 — 0-45W-20 — TO CONDENSER DOOR AJAR T.T.LT. MODULE C515 (2) SEE P. 28.1

NO: D060902

PAGE: 13.1

REVISION 06

PREVOST

WIRING DIAGRAM

HVAC SYSTEM

HVAC DASH MODULE

DRIVER'S FAN SPEED CTRL MODULE

12V POWER FROM FR JCT BOX SEE P. 2.1 — 12-12K-14 — CB58 6A — C74 35 — 12-29H-16 — C539 1,7,12

24V POWER FROM FR JCT BOX CB35 SEE P. 9.3 — 24-44C-16 — C539 5,6

PASSENGER DAMPER REC

RS — 0-0A-18 — C111 2 — GAZ CYLINDER — C111 1 — C9 5 — 24-65P-18 — C539 8 — O_GRD PAS. FRESH AIR (TEST)

C105 B — DR. LIQ.SOL.VAL. — C105 A — 24-116B-18 — C11 28 — C539 10 — O_ON/OFF (TEST) LIQ. SOL. VALVE

FS — 0-0C-14 — C106 B — DRIVER HTR WATER VALVE N.O. — C106 A — 24-45G-18 — 4 — C539 11 — O_DRIVER HEAT (TEST)

FOOT DAMPER MOTOR — C484 A — 65-18 — C539 14 — O_DRIVER FOOT DAMPER (TEST)
C484 B — 65A-18 — C539 13

DASH & DEFROST DAMPER MOTOR — RED — C485 1 — 68-18 — C539 15 — O_DRIVER DEFROST & DASH DAMPER (TEST)
BLK — C485 3 — 68A-18 — C539 16

CB79 15A — 24-24IA-14 — 24VI POWER FROM FR.JCT.BOX SEE P.1.1

24-29-14 — C4 23

BLU — BATTERY — C480 A — 24-29-14
RED

REC DAMPER GAZ CYLINDER — RED — D — 24-65D-18 — C11 17 — C539 9 — O_DRIVER FRESH AIR DAMPER (TEST)

GROUND — B — 0-0M3-12 — FS

IGNITION — C — 12-116C-18 — C11 8 — C539 23 — O_ON/OFF DEFROST

CCW — C481 A — 64A-18 — C11 31 — C539 17 — O_RESIS.(MCC POT 1)
WHIPPER — C481 B — 64-18 — C11 30 — C539 18 — INPUT(MCC POT 2)
CW — C481 C — 64B-18 — C11 32 — C539 19 — O_RESIS.(MCC POT 3)

0-66-20 — C539 22 — O_PAS. ON/ OFF (TEST)

TO OUTSIDE FREEZE T.T.LT. MODULE C572 (14) SEE P. 28.1 — 0-181-20 — C539 21 — O_GROUND FREEZE TEMP

TO A/C MODULE C139 (15) SEE P. 13.2 — 0-77K-20 — C539 20 — O_AC_MODULE COMPRESSOR DIS.

C539 24 — O_GROUND PHOTOCEL

C140 4 — I_OUTSIDE TEMP — 181C-18 (BLK) — C538 1 — BLK — TEMPERATURE SENSOR — OUTSIDE
C140 3 — 181D-18 (WHT) — C538 2 — YEL
SH

C140 2 — I_DRIVER TEMP — 181A-18 (BLK) — C474 1 — BLK — TEMPERATURE SENSOR — DRIVER'S INSIDE
C140 1 — 181B-18 (WHT) — C474 2 — YEL
SH

C479 — I_PAS.TEMP (BLK) 3, (YEL) 2, 1

C540 1 — I_24V BAT. — 24-7B-20 — 24V HOT WIRE FROM CB85 SEE P. 16.1

C140 12 — I_RHEOSTAT — 0@12-114A-20 — FROM DASH LTS RHEOSTAT SEE P 11.2

C140 OUTPUT 13 — 180-20
OUTPUT 3 — 180A-20
OUTPUT 14 — 180B-20
OUTPUT 4 — 180C-20
— TO TELL TALE LTS MODULE OUTSIDE TEMP DISPLAY C573 (5,6,7,8) SEE P. 28.1

C140 15 — O_HEAT 520 OHMS RESISTOR (P1) — C9 19 — 0@1-167-18 — C58 15 — TO ELECT. TRANSMITTER C137 (8) SEE P. 13.2

C140 16 — O_COOL 500 OHMS RESISTOR (P2) — 20 — 0@1-167A-18 — 14 — TO ELECT. TRANSMITTER C137 (9) SEE P. 13.2

C140 5 — I_GRD REF. (P3) — 18 — 0-165D-18 — 13 — REFERENCE GROUND FROM ELECT. TRANSMITTER C137 (1) SEE P. 13.2

C140 6 — O_CLUSTER — RX3-20 — TO 24V GAUGE RH PANEL CLUSTER RX(3) SEE P. 7.1

C140 17 — I_CLUSTER — 0-0T2-20 — RH PANEL GRD FROM CLUSTER SEE P. 7.1

C140 7 — I_BAT. GRD — 0-00A-18 — FBG

C140 18 — I_PAS. HEAT RED LED — 24-45B-20 — PASSENGER HEAT SIGNAL FROM A/C MODULE C139 (1) SEE P. 13.2

C140 19 — I_PAS. COOL GREEN LED — 24-2B-20
C140 20 — I_ENTRANCE DOOR OPEN — 24-12W-18 — ENTRANCE DOOR OPEN SIGN. FROM C4(21) SEE P. 16.1

C140 8 — I_DASH/DEFROST SW

C140 10 — I_IGN. SW. — 12-12H-18 — 12V IGNITION FROM CB28 SEE P. 7.1

C140 11 — I_ENG. RUN — 12-25-20 — 12V ENGINE RUN SIGNAL FROM R100 (87) SEE P. 4.1

C140 22 — I_ACCES. — 24-83-20 — 24V KEY SW.ACCESSORIES SIGNAL FROM MASTER KEY SW. SEE P. 4.1

RS — 0-0K-18 — R38 86, 85 — C136 7 — D1 — C136 9

FROM A/C MODULE C139(14) SEE P.13.2 — 24-2BB-18 — R38 86

R38 30 — 87, 87A — 24-2B-18 — C58 10 — C9 17 — C59 14 — C91 32

24-67A-16 — COND. FAN MOTOR R.H. — BC — 0-0C-16 — R39 — C537 2 — C15 18 — 24-67K-18 — C91 17 — C158 2 — C158 1 — 24-2B-18

FIRST SPEED PRESSURE 138-105

BC — 0-0D-10 — BAT — 41A-10 — BAT — 24-41-10 — CB77 40A — 24-90B-10 — 24V POWER FROM CB8 SEE P. 1.1

41B-10

CONDENSER FAN MOTOR L.H. — BC — 0-0D-10 — 42A-10 — N.C. / N.O. — BAT — 24-42-10 — CB78 40A — 24-90C-10 — 24V POWER FROM CB8 SEE P. 1.1

RS — 0-0A-18 — C95 A — PASSENGER LIO. SOL. VALVE — C95 B — 24-2B-18

BC — 0-0C-16 — R41

BC — 0-0C-16 — R40 — C537 1 — C15 17 — 24-67L-18 — C91 19 — C159 2 — C159 1 — 24-67A-16

SECOND SPEED PRESSURE 195-150

TO HUMIDISTAT SEE P. 13.2

24-67L-18

TO EVAPORATOR CONTROL MODULE C112(B) SEE P. 13.2 — 24-67A-16 — C58 19 — 24-67A-16 — C59 9 — C91 31 — TO LAVATORY FAN R106(86) SEE P. 17.1

TO HVAC LOGIC PANEL P. 13.2 — 24-67A-16 — 24-67A-16 — 87A, 87 — 30 — C59 10

C9 1 — 0-66-20 — C58 3 — 85 — 86 — 24-67D-20 — R34

CB71 10A — 24-24C-12 — 24V POWER FROM RR JCT.BOX R39 (BAT) SEE P. 1.1

CONDENSER COMPARTMENT DOOR AJAR SWITCH — 0-45W-20 — C9 6 — 0-45W-20 — TO CONDENSER DOOR AJAR T.T.LT. MODULE C572 (7) SEE P. 28.1

NO: D060902

PAGE: 13.1

REVISION 08

PREVOST

HVAC SYSTEM

WIRING DIAGRAM

NO: D060902

PAGE: 13.1

REVISION 14

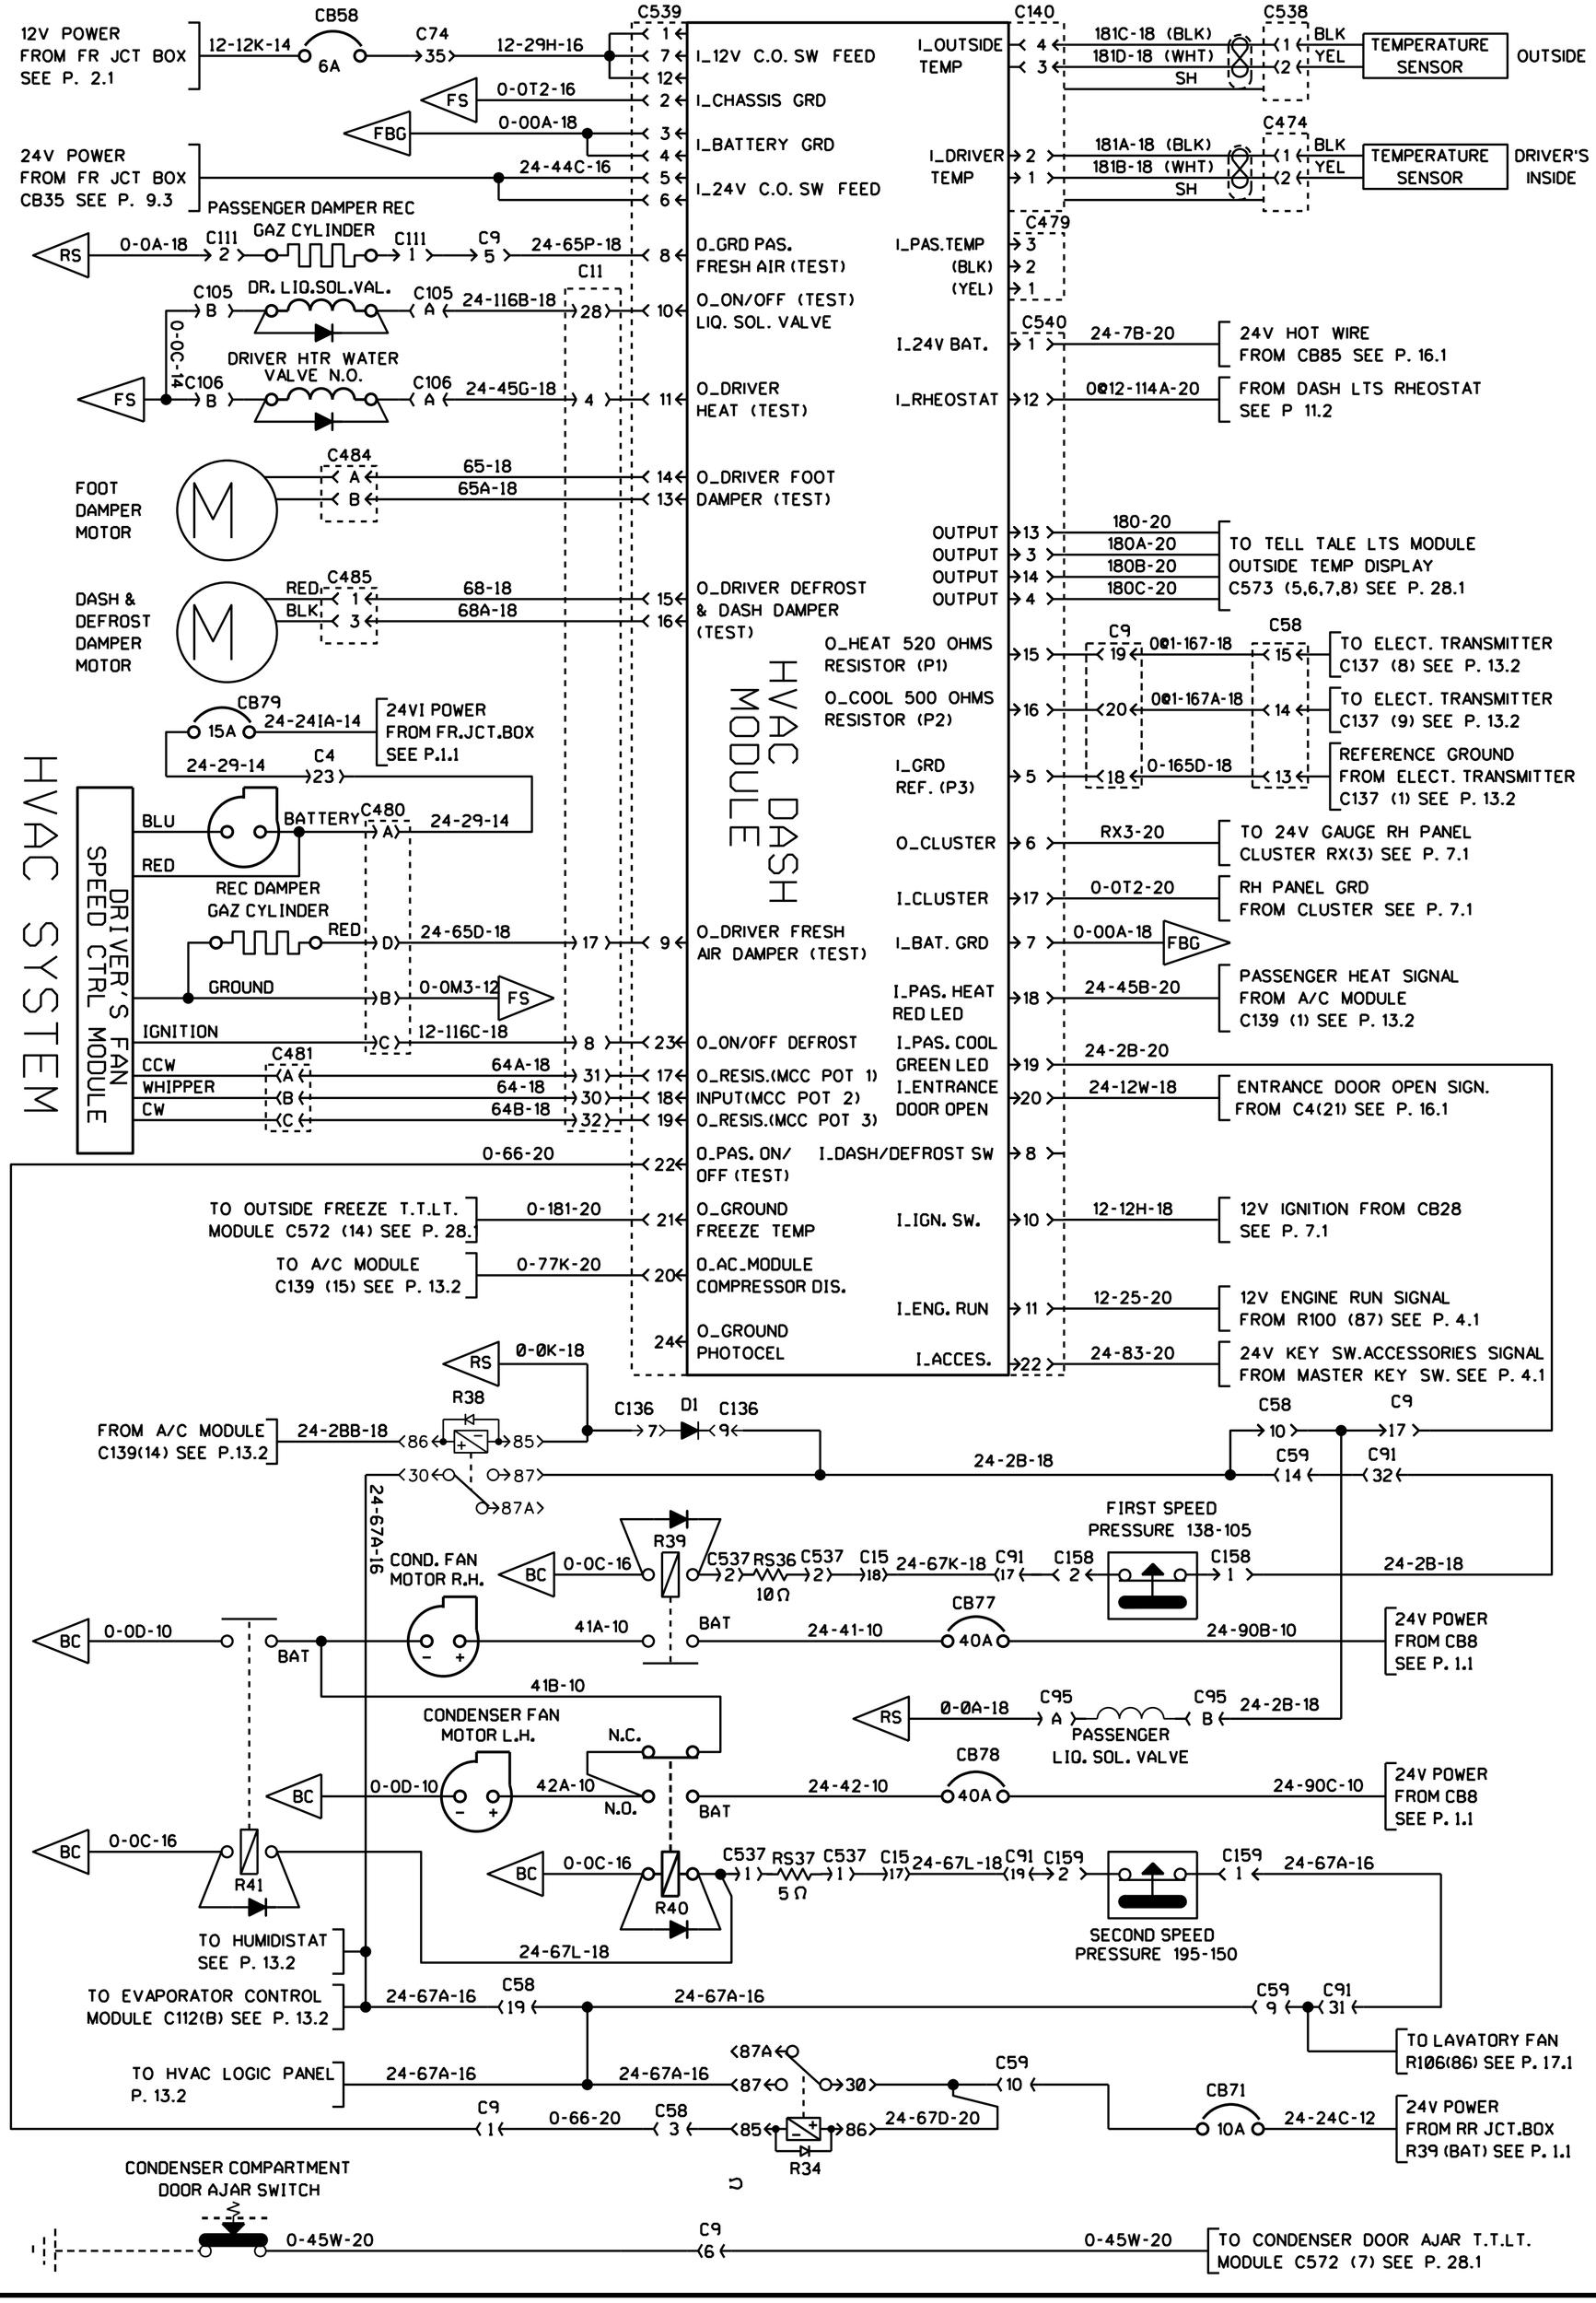

PREVOST

WIRING DIAGRAM

HVAC SYSTEM

NO: D06090213.1

PAGE: 13.1

REVISION 16

12V POWER FROM FR JCT BOX SEE P. 2.1 — 12-12K-14 — CB58 6A — C74 35 — 12-29H-16 — C539 1, 7, 12

FS — 0-0T2-16 — C539 2 — I_CHASSIS GRD

FBG — 0-00A-18 — C539 3, 4 — I_BATTERY GRD

24V POWER FROM FR JCT BOX CB35 SEE P. 9.3 — 24-44C-16 — C539 5, 6 — I_24V C.O. SW FEED

PASSENGER DAMPER REC

RS — 0-0A-18 — C111 2 — GAZ CYLINDER — C111 1 — C9 5 — 24-65P-18 — C539 8 — O_GRD PAS. FRESH AIR (TEST)

C105 B — DR. LIQ.SOL.VAL. — C105 A — 24-116B-18 — C11 28 — C539 10 — O_ON/OFF (TEST) LIQ. SOL. VALVE

FS — 0-0C-14 — C106 B — DRIVER HTR WATER VALVE N.O. — C106 A — 24-45G-18 — C11 4 — C539 11 — O_DRIVER HEAT (TEST)

FOOT DAMPER MOTOR — C484 A, B — 65-18, 65A-18 — C11 14, 13 — C539 14, 13 — O_DRIVER FOOT DAMPER (TEST)

DASH & DEFROST DAMPER MOTOR — C485 RED 1, BLK 3 — 68-18, 68A-18 — C11 15, 16 — C539 15, 16 — O_DRIVER DEFROST & DASH DAMPER (TEST)

CB79 15A — 24-24IA-14 — 24VI POWER FROM FR.JCT.BOX SEE P.1.1

24-29-14 — C4 23

BLU — BATTERY — C480 A — 24-29-14

RED — REC DAMPER GAZ CYLINDER

DRIVER'S FAN SPEED CTRL MODULE

RED — C11 D — 24-65D-18 — C539 17, 9 — O_DRIVER FRESH AIR DAMPER (TEST)

GROUND — B — 0-0M3-12 — FS

IGNITION — C — 12-116C-18 — C539 8, 23 — O_ON/OFF DEFROST

C481 A — CCW — 64A-18 — C539 31, 17 — O_RESIS.(MCC POT 1)

C481 B — WHIPPER — 64-18 — C539 30, 18 — INPUT(MCC POT 2)

C481 C — CW — 64B-18 — C539 32, 19 — O_RESIS.(MCC POT 3)

0-66-20 — C539 22 — O_PAS. ON/ OFF (TEST)

TO OUTSIDE FREEZE T.T.LT. MODULE C572 (14) SEE P. 28.1 — 0-181-20 — C539 21 — O_GROUND FREEZE TEMP

TO A/C MODULE C139 (15) SEE P. 13.2 — 0-77K-20 — C539 20 — O_AC_MODULE COMPRESSOR DIS.

C539 24 — O_GROUND PHOTOCEL

HVAC DASH MODULE

C140 4 — I_OUTSIDE TEMP — 181C-18 (BLK), 181D-18 (WHT), SH — C538 1 BLK, 2 YEL — TEMPERATURE SENSOR — OUTSIDE

C140 2 — I_DRIVER TEMP — 181A-18 (BLK), 181B-18 (WHT), SH — C474 1 BLK, 2 YEL — TEMPERATURE SENSOR — DRIVER'S INSIDE

C140 3, 2, 1 — C479 3, 2, 1 — I_PAS.TEMP (BLK) (YEL)

C140 1 — I_24V BAT. — 24-7B-20 — 24V HOT WIRE FROM CB85 SEE P. 16.1

C140 12 — I_RHEOSTAT — 0@12-114A-20 — FROM DASH LTS RHEOSTAT SEE P 11.2

C140 13, 3, 14, 4 — OUTPUT — 180-20, 180A-20, 180B-20, 180C-20 — TO TELL TALE LTS MODULE OUTSIDE TEMP DISPLAY C573 (5,6,7,8) SEE P. 28.1

C140 15 — O_HEAT 520 OHMS RESISTOR (P1) — C9 19 — 0@1-167-18 — C58 15 — TO ELECT. TRANSMITTER C137 (8) SEE P. 13.2

C140 16 — O_COOL 500 OHMS RESISTOR (P2) — C9 20 — 0@1-167A-18 — C58 14 — TO ELECT. TRANSMITTER C137 (9) SEE P. 13.2

C140 5 — I_GRD REF. (P3) — C9 18 — 0-165D-18 — C58 13 — REFERENCE GROUND FROM ELECT. TRANSMITTER C137 (1) SEE P. 13.2

C140 6 — O_CLUSTER — RX3-20 — TO 24V GAUGE RH PANEL CLUSTER RX(3) SEE P. 7.1

C140 17 — I_CLUSTER — 0-0T2-20 — RH PANEL GRD FROM CLUSTER SEE P. 7.1

C140 7 — I_BAT. GRD — 0-00A-18 — FBG

C140 18 — I_PAS. HEAT RED LED — 24-45B-20 — PASSENGER HEAT SIGNAL FROM A/C MODULE C139 (1) SEE P. 13.2

C140 19 — I_PAS. COOL GREEN LED — 24-2B-20

C140 20 — I_ENTRANCE DOOR OPEN — 24-12W-18 — ENTRANCE DOOR OPEN SIGN. FROM C4(21) SEE P. 16.1

C140 8 — I_DASH/DEFROST SW

C140 10 — I_IGN. SW. — 12-12H-18 — 12V IGNITION FROM CB28 SEE P. 7.1

C140 11 — I_ENG. RUN — 12-25D-20 — FROM ALTERNATOR SIGNAL SEE P. 4.2

C140 22 — I_ACCES. — 24-83-20 — 24V KEY SW.ACCESSORIES SIGNAL FROM MASTER KEY SW. SEE P. 4.1

RS — 0-0K-18 — R38 — FROM A/C MODULE C139(14) SEE P.13.2 — 24-2BB-18 — 86, 85 — C136 7 — D1 — C136 9

30, 87, 87A — 24-2B-18 — C58 10, C9 17, C59 14, C91 32

24-67A-16

COND. FAN MOTOR R.H. — BC — 0-0C-16 — R39 — C537 RS36 10Ω C537 — C15 18 — 24-67K-18 — C91 17 — C158 2 — FIRST SPEED PRESSURE 138-105 — C158 1 — 24-2B-18

BC — 0-0D-10 — BAT — 41A-10 — BAT — CB77 40A — 24-41-10 — 24-90B-10 — 24V POWER FROM CB8 SEE P. 1.1

41B-10

CONDENSER FAN MOTOR L.H. — N.C. — N.O. — BC — 0-0D-10 — 42A-10 — CB78 40A — 24-42-10 — BAT — 24-90C-10 — 24V POWER FROM CB8 SEE P. 1.1

RS — 0-0A-18 — C95 A — PASSENGER LIQ. SOL. VALVE — C95 B — 24-2B-18

BC — 0-0C-16 — R41

BC — 0-0C-16 — R40 — C537 RS37 5Ω C537 — C15 17 — 24-67L-18 — C91 19 — C159 2 — SECOND SPEED PRESSURE 195-150 — C159 1 — 24-67A-16

24-67L-18

TO HUMIDISTAT SEE P. 13.2

TO EVAPORATOR CONTROL MODULE C112(B) SEE P. 13.2 — 24-67A-16 — C58 19 — 24-67A-16 — C59 9 — C91 31 — TO LAVATORY FAN R106(86) SEE P. 17.1

TO HVAC LOGIC PANEL P. 13.2 — 24-67A-16 — 24-67A-16 — 87A, 87, 30 — C59 10

C9 1 — 0-66-20 — C58 3 — 85, 86 — 24-67D-20 — R34

CB71 10A — 24-24C-12 — 24V POWER FROM RR JCT.BOX R39 (BAT) SEE P. 1.1

CONDENSER COMPARTMENT DOOR AJAR SWITCH — 0-45W-20 — C9 6 — 0-45W-20 — TO CONDENSER DOOR AJAR T.T.LT. MODULE C572 (7) SEE P. 28.1

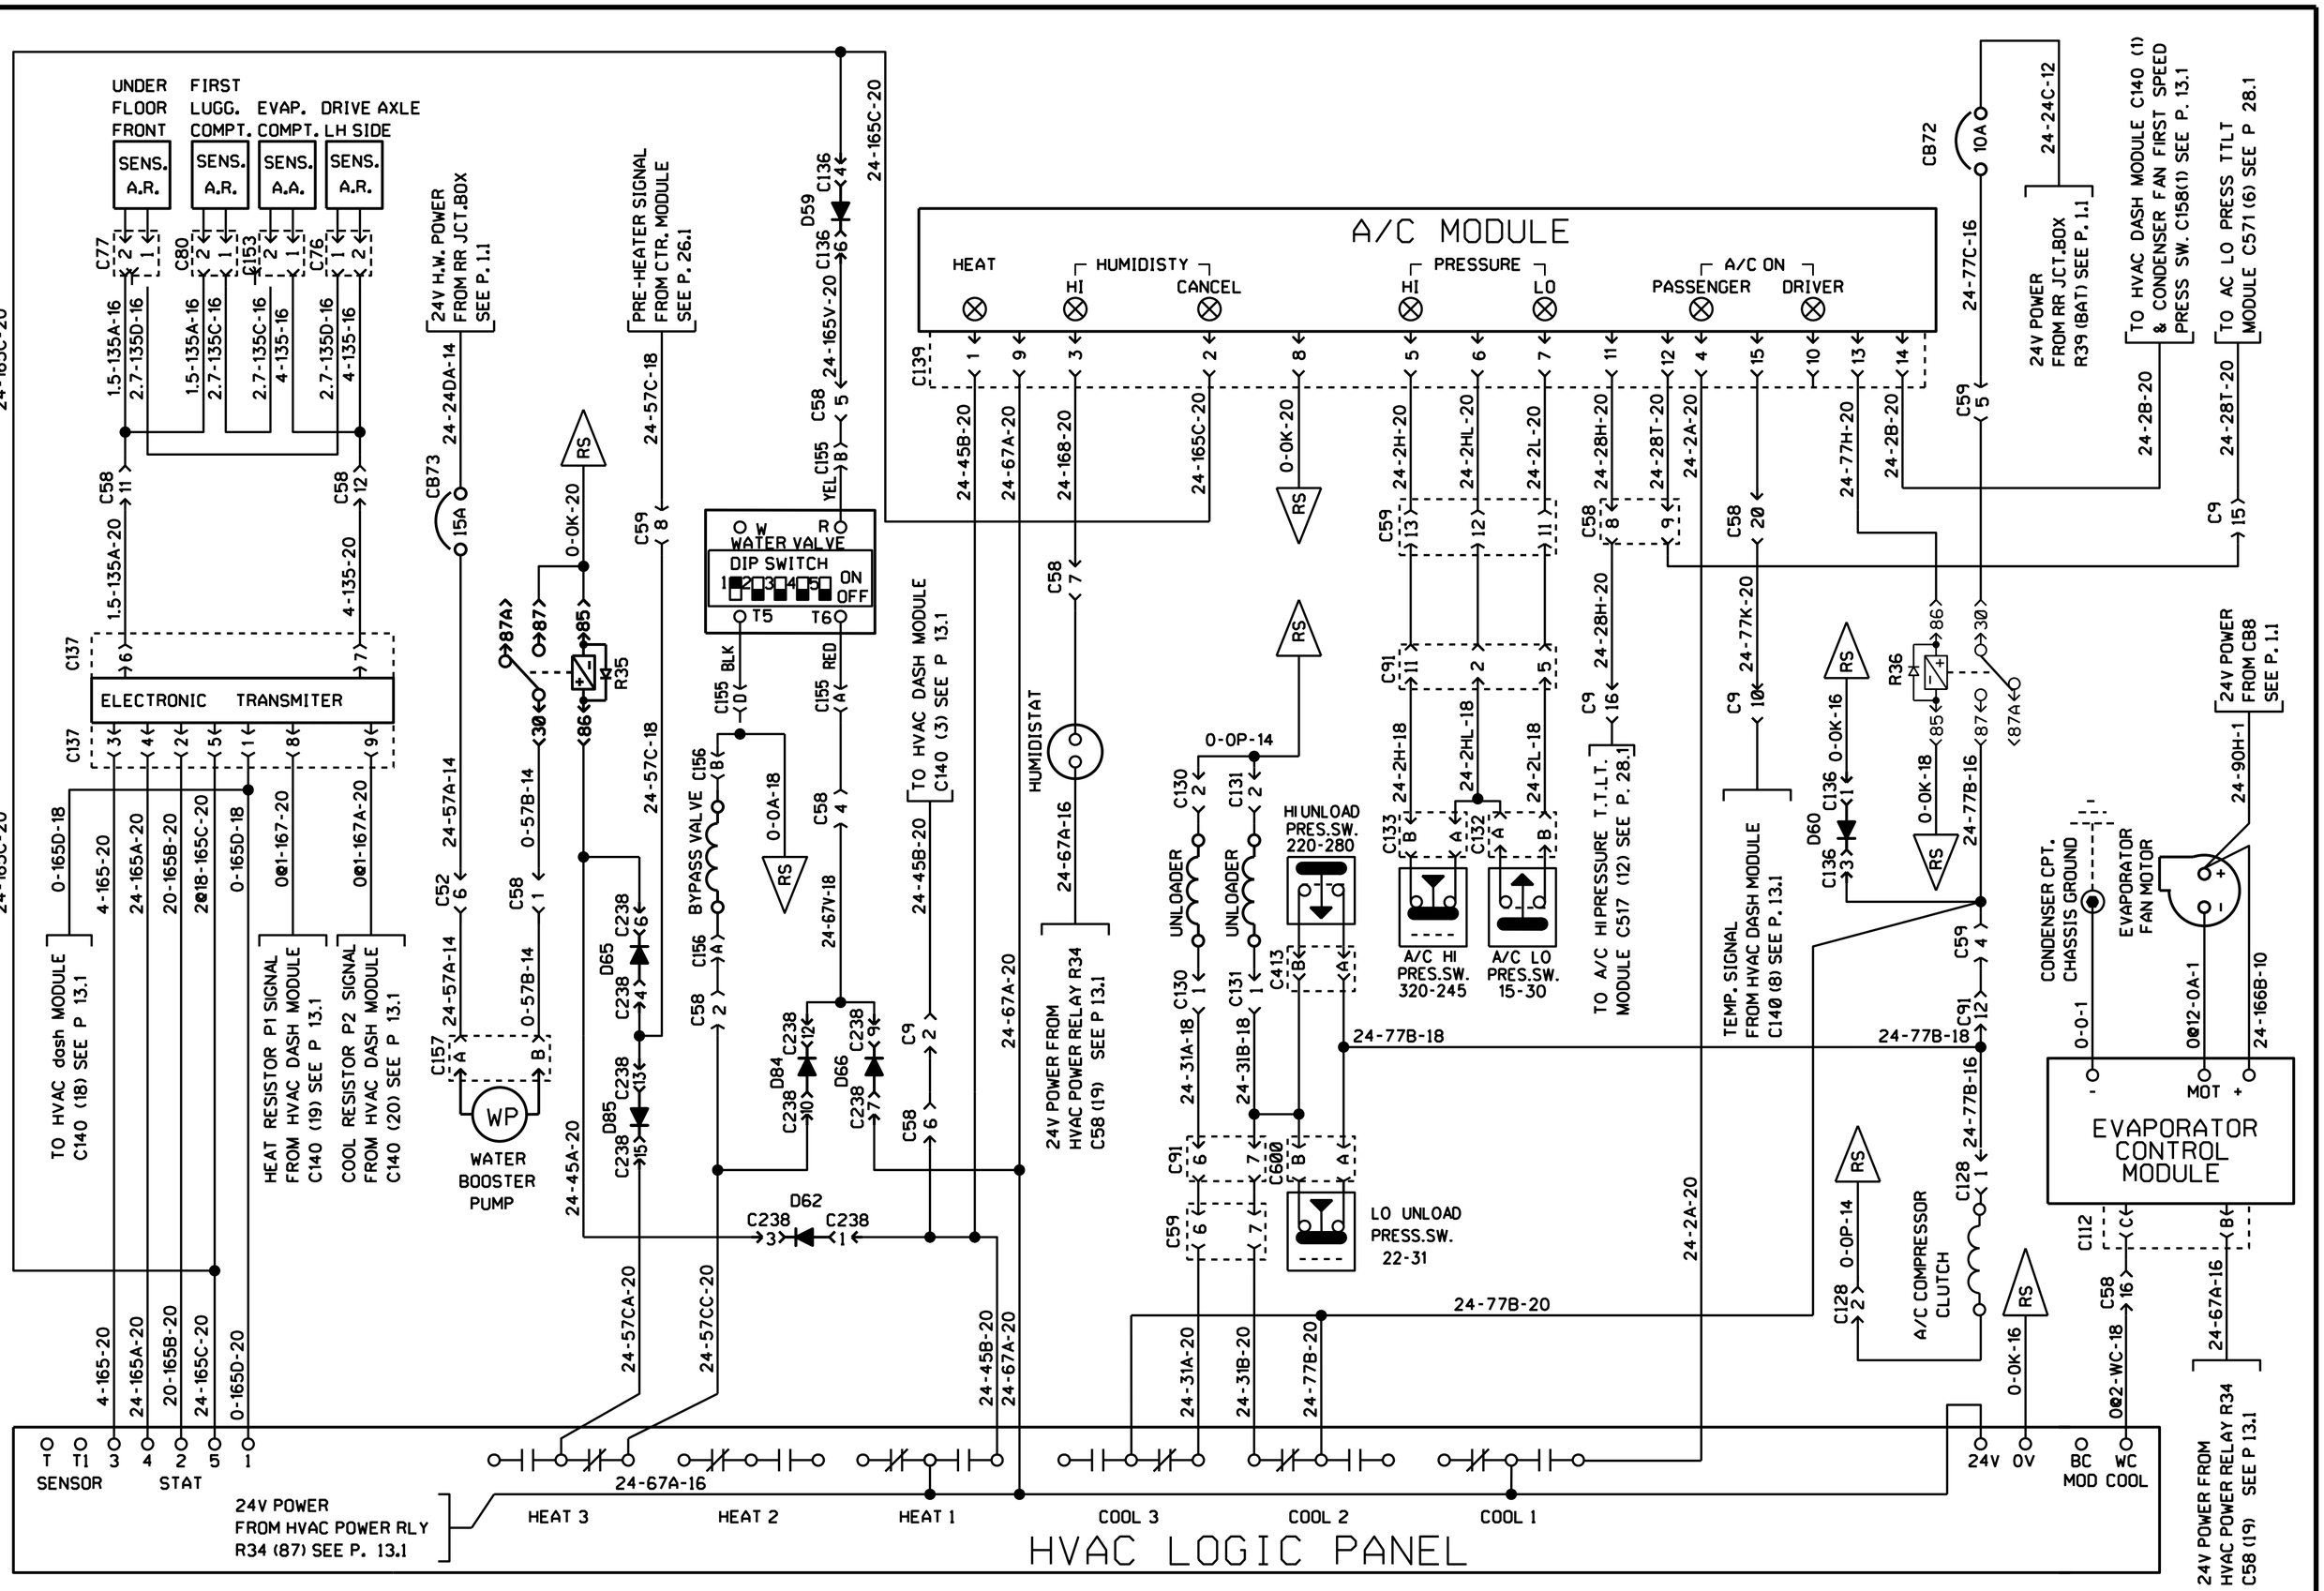
A/C MODULE
HEAT
HUMIDISTY
HI
CANCEL
PRESSURE
HI
LO
A/C ON
PASSENGER
DRIVER
UNDER FLOOR FRONT SENS. A.R.
FIRST LUGG. COMPT. SENS. A.R.
EVAP. COMPT. SENS. A.A.
DRIVE AXLE LH SIDE SENS. A.R.
ELECTRONIC TRANSMITER
24V H.W. POWER FROM RR JCT.BOX SEE P. 1.1
PRE-HEATER SIGNAL FROM CTR. MODULE SEE P. 26.1
WATER VALVE
DIP SWITCH
ON
OFF
HUMIDISTAT
TO HVAC DASH MODULE C140 (3) SEE P 13.1
HI UNLOAD PRES.SW. 220-280
A/C HI PRES.SW. 320-245
A/C LO PRES.SW. 15-30
LO UNLOAD PRESS.SW. 22-31
TO A/C HIPRESSURE T.T.LT. MODULE C517 (12) SEE P. 28.1
TEMP. SIGNAL FROM HVAC DASH MODULE C140 (8) SEE P. 13.1
TO HVAC DASH MODULE C140 (1) & CONDENSER FAN FIRST SPEED PRESS SW. C158(1) SEE P. 13.1
24V POWER FROM RR JCT.BOX R39 (BAT) SEE P. 1.1
TO AC LO PRESS TTLT MODULE C571 (6) SEE P 28.1
24V POWER FROM CB8 SEE P. 1.1
A/C COMPRESSOR CLUTCH
CONDENSER CPT. CHASSIS GROUND
EVAPORATOR FAN MOTOR
EVAPORATOR CONTROL MODULE
WATER BOOSTER PUMP
HEAT RESISTOR P1 SIGNAL FROM HVAC DASH MODULE C140 (19) SEE P 13.1
COOL RESISTOR P2 SIGNAL FROM HVAC DASH MODULE C140 (20) SEE P 13.1
TO HVAC dash MODULE C140 (18) SEE P 13.1
24V POWER FROM HVAC POWER RLY R34 (87) SEE P. 13.1
24V POWER FROM HVAC POWER RELAY R34 C58 (19) SEE P 13.1
HEAT 3
HEAT 2
HEAT 1
COOL 3
COOL 2
COOL 1
T SENSOR
T1 STAT
24V
0V
BC MOD
WC COOL
HVAC LOGIC PANEL

HVAC SYSTEM

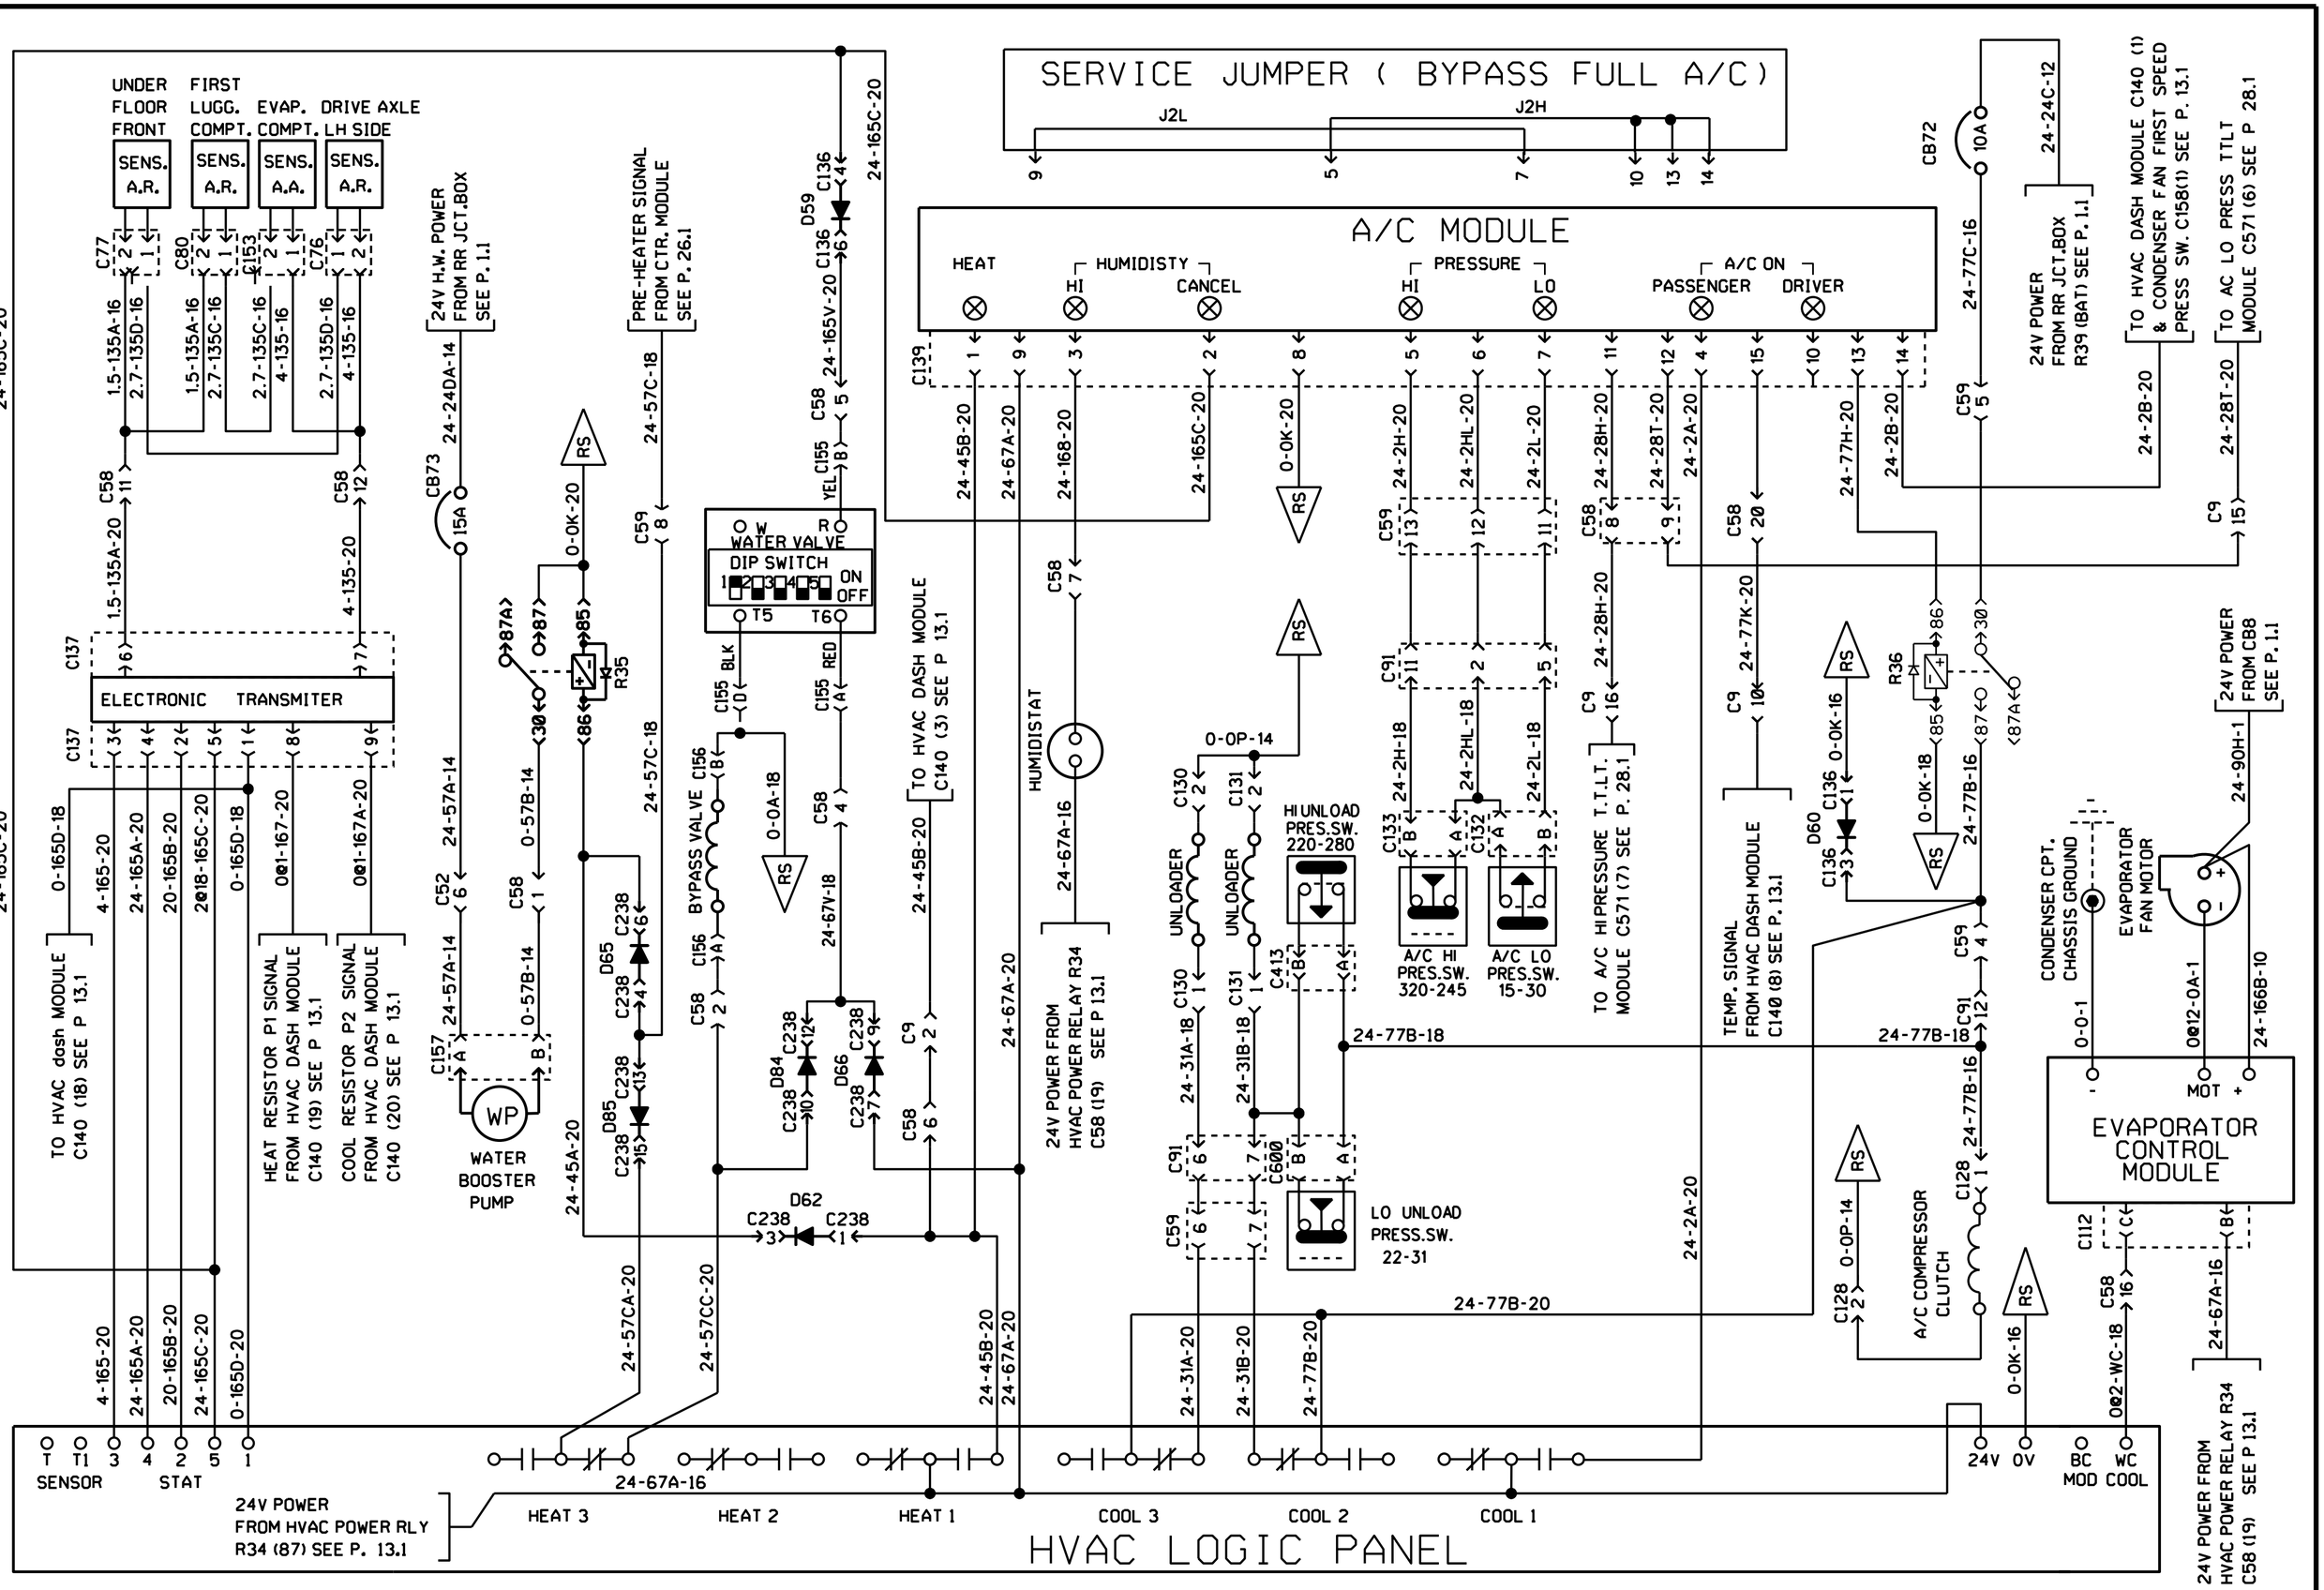
SERVICE JUMPER (BYPASS FULL A/C)
J2L
J2H
A/C MODULE
HEAT
HUMIDISTY
HI
CANCEL
PRESSURE
HI
LO
A/C ON
PASSENGER
DRIVER
UNDER FLOOR FRONT
FIRST LUGG. COMPT.
EVAP. COMPT.
DRIVE AXLE LH SIDE
SENS. A.R.
SENS. A.R.
SENS. A.A.
SENS. A.R.
ELECTRONIC TRANSMITER
WATER VALVE
DIP SWITCH
ON
OFF
HUMIDISTAT
BYPASS VALVE
WATER BOOSTER PUMP
HI UNLOAD PRES.SW. 220-280
A/C HI PRES.SW. 320-245
A/C LO PRES.SW. 15-30
LO UNLOAD PRESS.SW. 22-31
UNLOADER
UNLOADER
A/C COMPRESSOR CLUTCH
CONDENSER CPT. CHASSIS GROUND
EVAPORATOR FAN MOTOR
EVAPORATOR CONTROL MODULE
TO HVAC dash MODULE C140 (18) SEE P 13.1
HEAT RESISTOR P1 SIGNAL FROM HVAC DASH MODULE C140 (19) SEE P 13.1
COOL RESISTOR P2 SIGNAL FROM HVAC DASH MODULE C140 (20) SEE P 13.1
24V H.W. POWER FROM RR JCT.BOX SEE P. 1.1
PRE-HEATER SIGNAL FROM CTR. MODULE SEE P. 26.1
TO HVAC DASH MODULE C140 (3) SEE P 13.1
24V POWER FROM HVAC POWER RELAY R34 C58 (19) SEE P 13.1
TO HVAC DASH MODULE C140 (1) & CONDENSER FAN FIRST SPEED PRESS SW. C158(1) SEE P. 13.1
TO AC LO PRESS TTLT MODULE C571 (6) SEE P 28.1
24V POWER FROM R39 (BAT) SEE P. 1.1
TO A/C HI PRESSURE T.T.LT. MODULE C571 (7) SEE P. 28.1
TEMP. SIGNAL FROM HVAC DASH MODULE C140 (8) SEE P. 13.1
24V POWER FROM CB8 SEE P. 1.1
24V POWER FROM HVAC POWER RLY R34 (87) SEE P. 13.1
24V POWER FROM HVAC POWER RELAY R34 C58 (19) SEE P 13.1
T SENSOR
T1
STAT
24V
0V
BC MOD COOL
WC
HEAT 3
HEAT 2
HEAT 1
COOL 3
COOL 2
COOL 1
HVAC LOGIC PANEL

HVAC SYSTEM

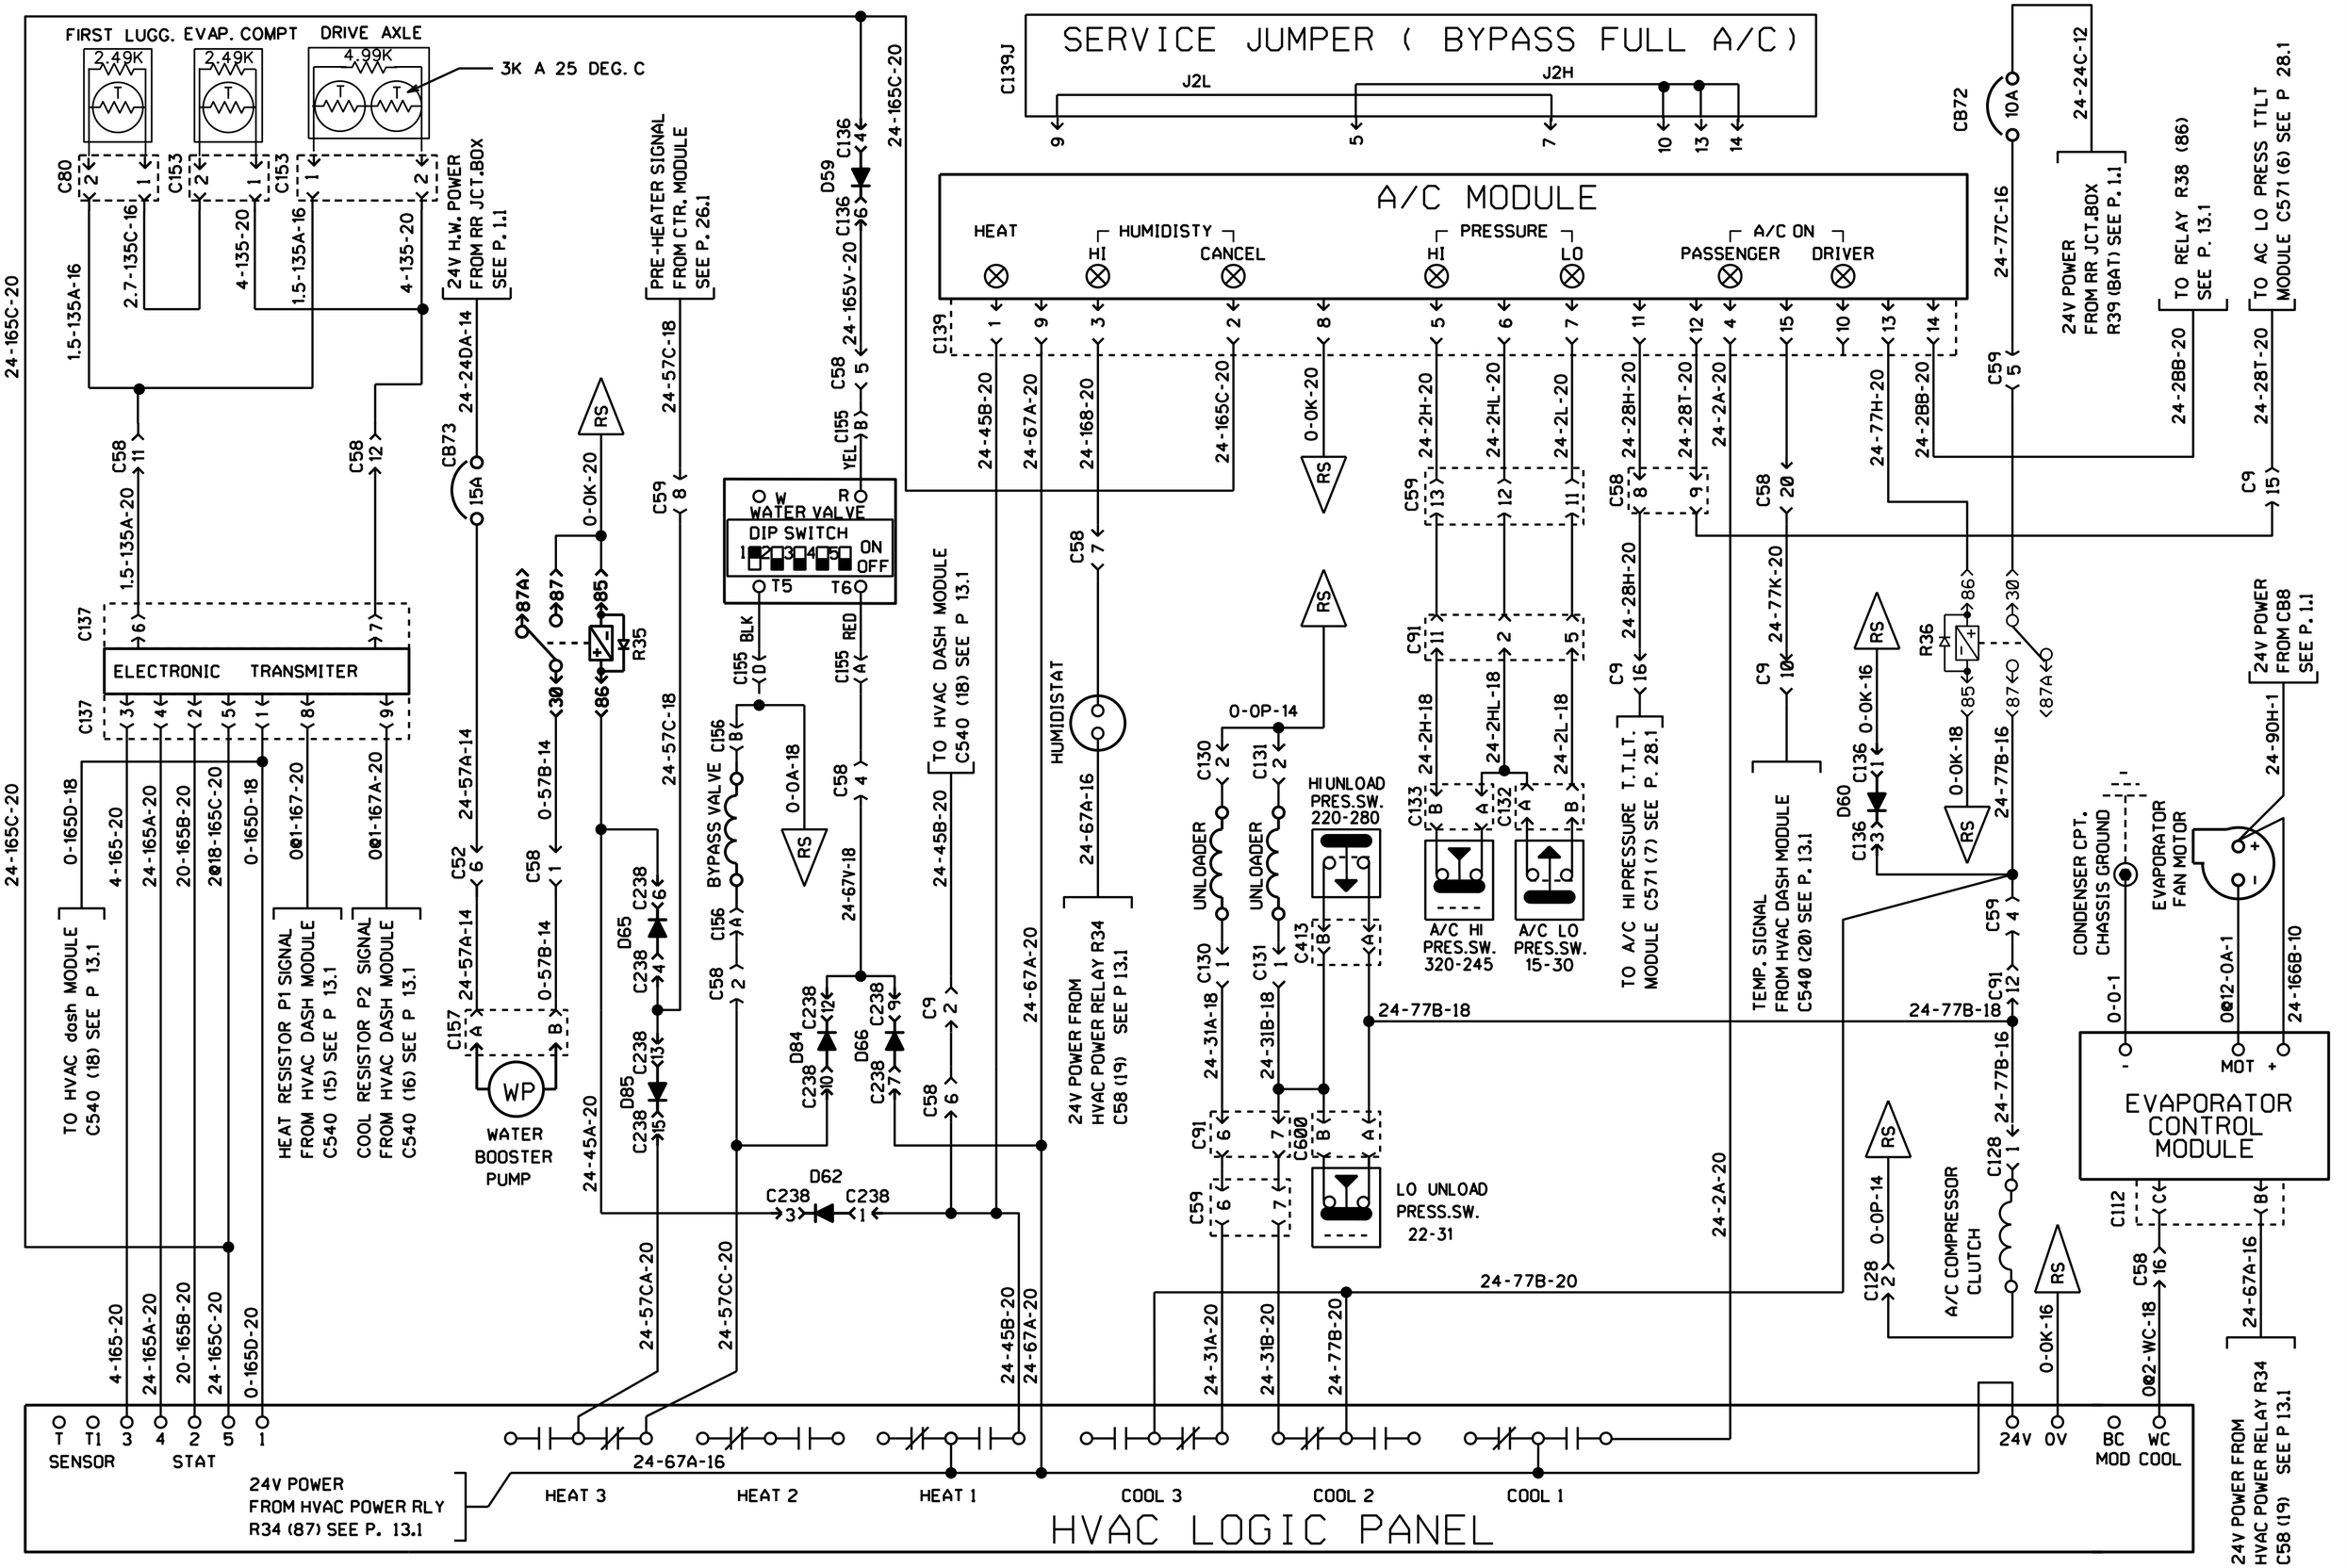

HVAC SYSTEM

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 13.2	REVISION 06

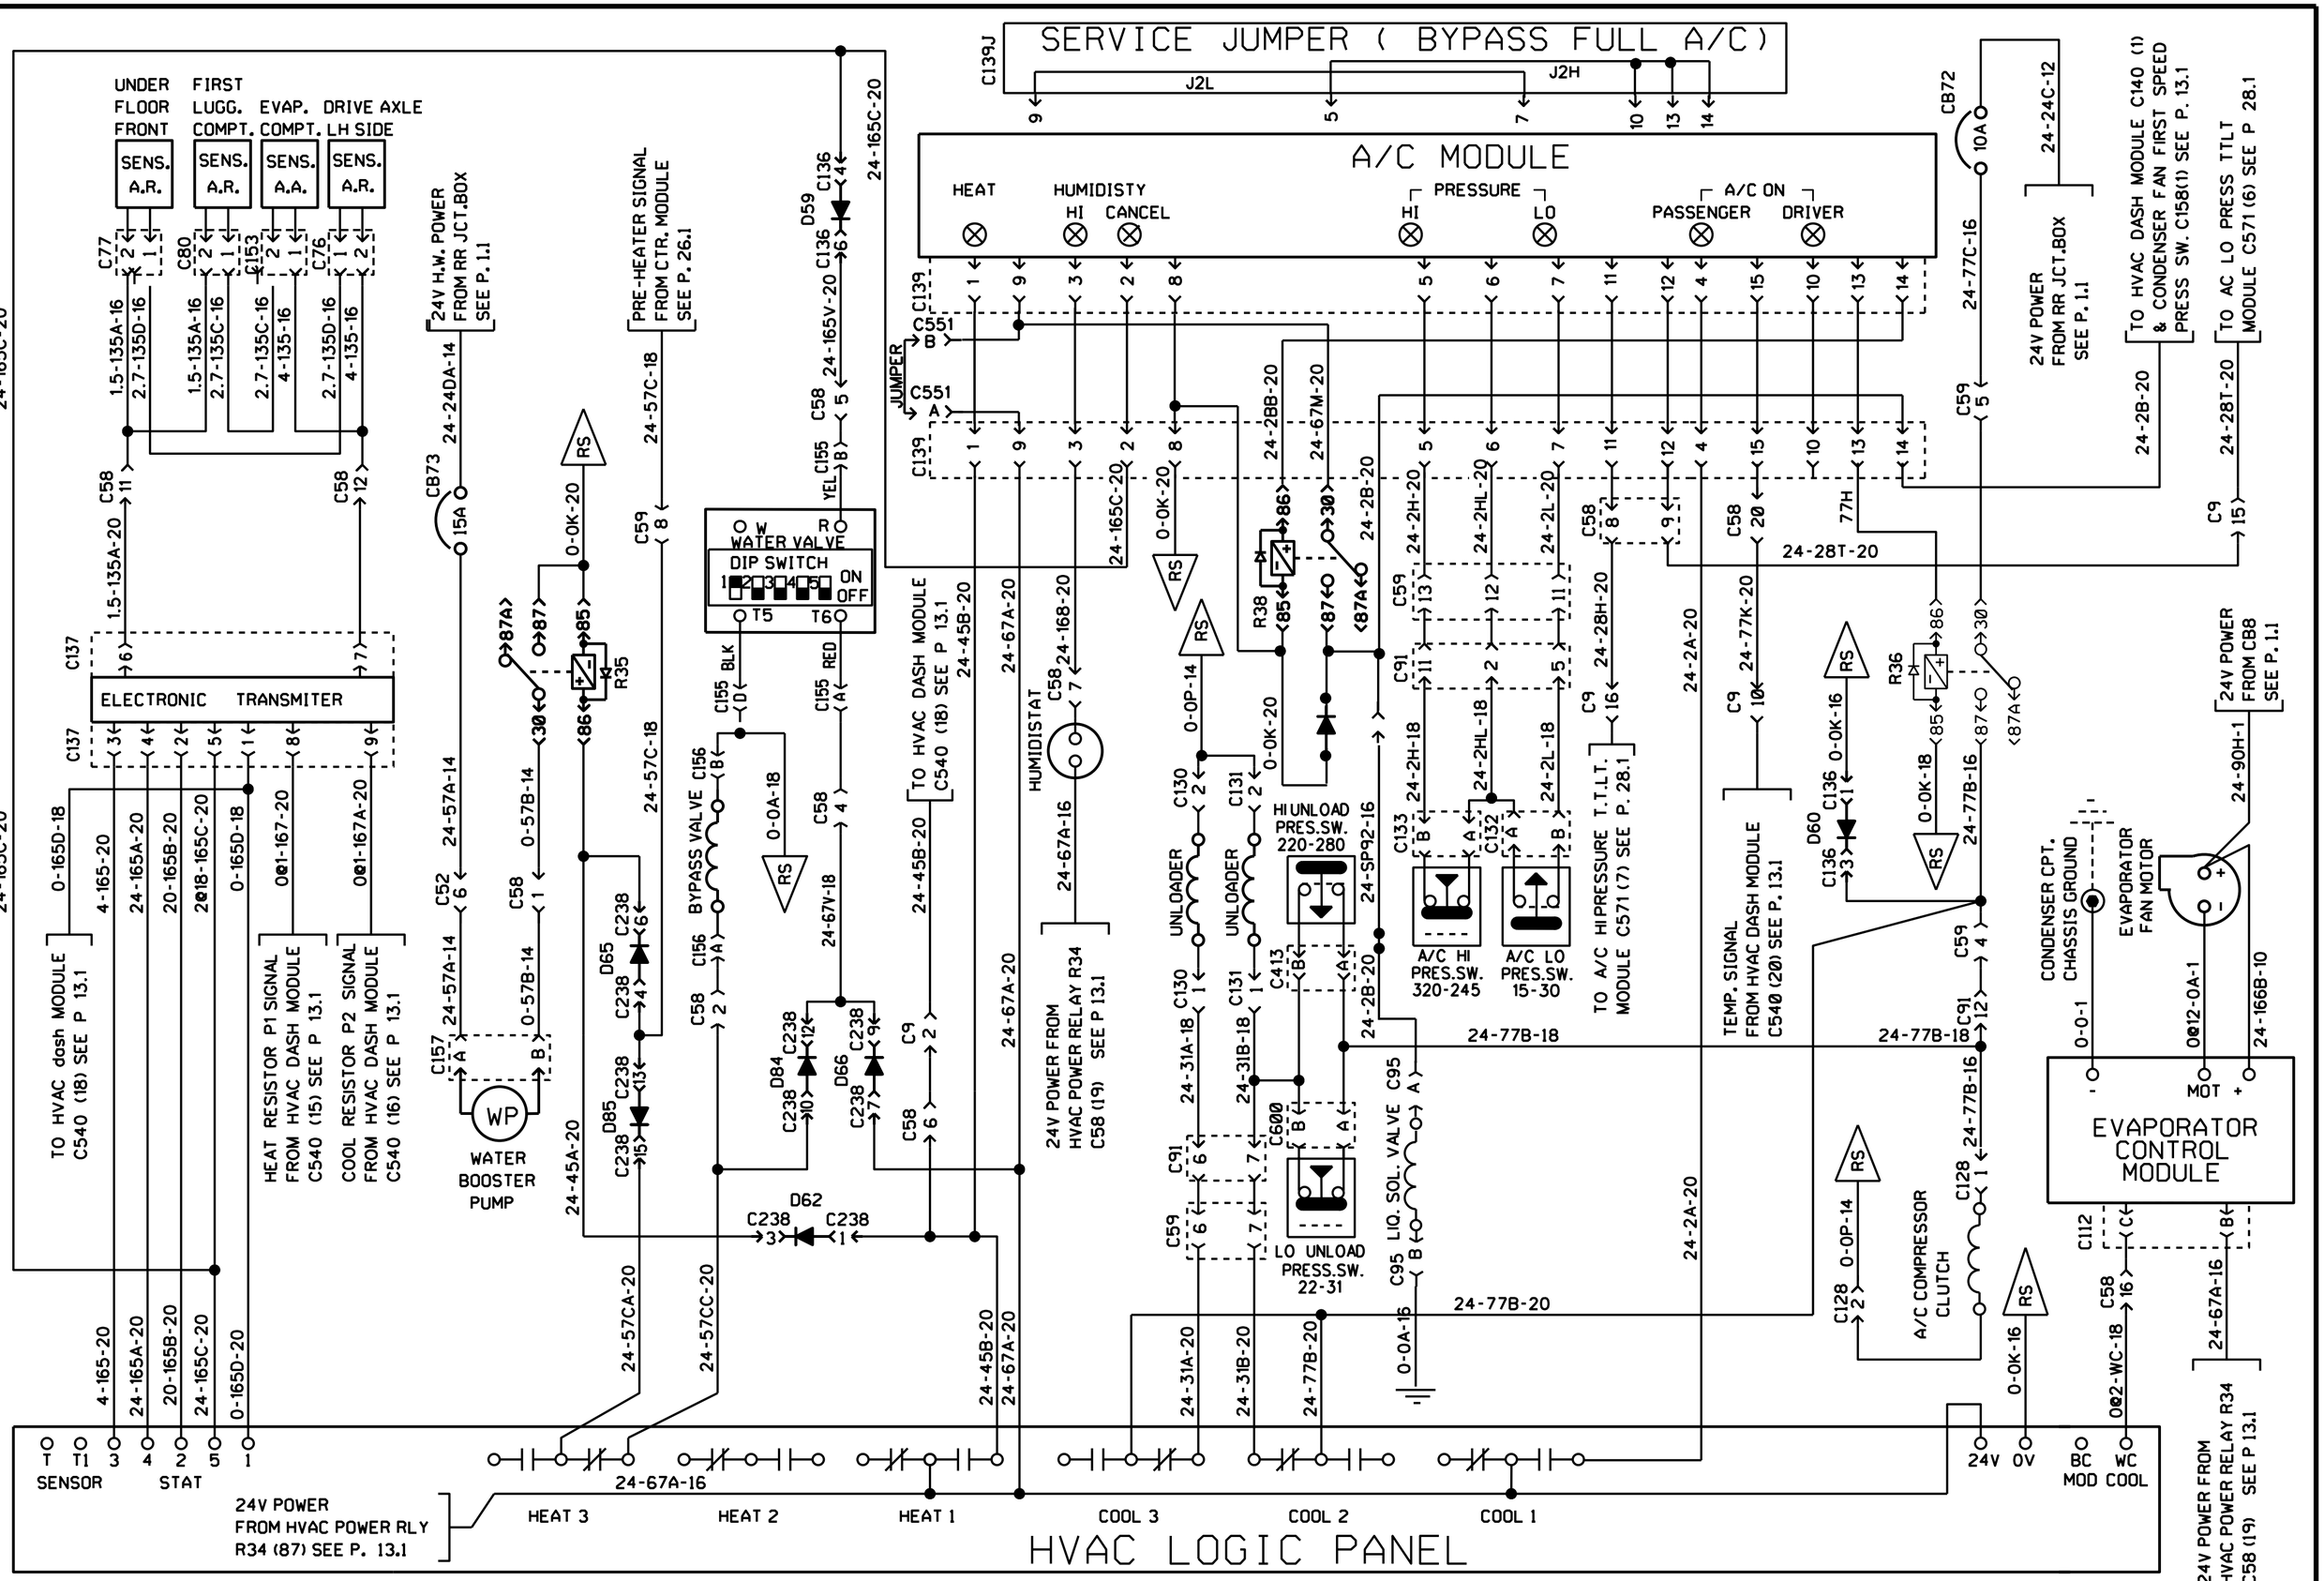

HVAC SYSTEM

EFF. W2285 TO W2457

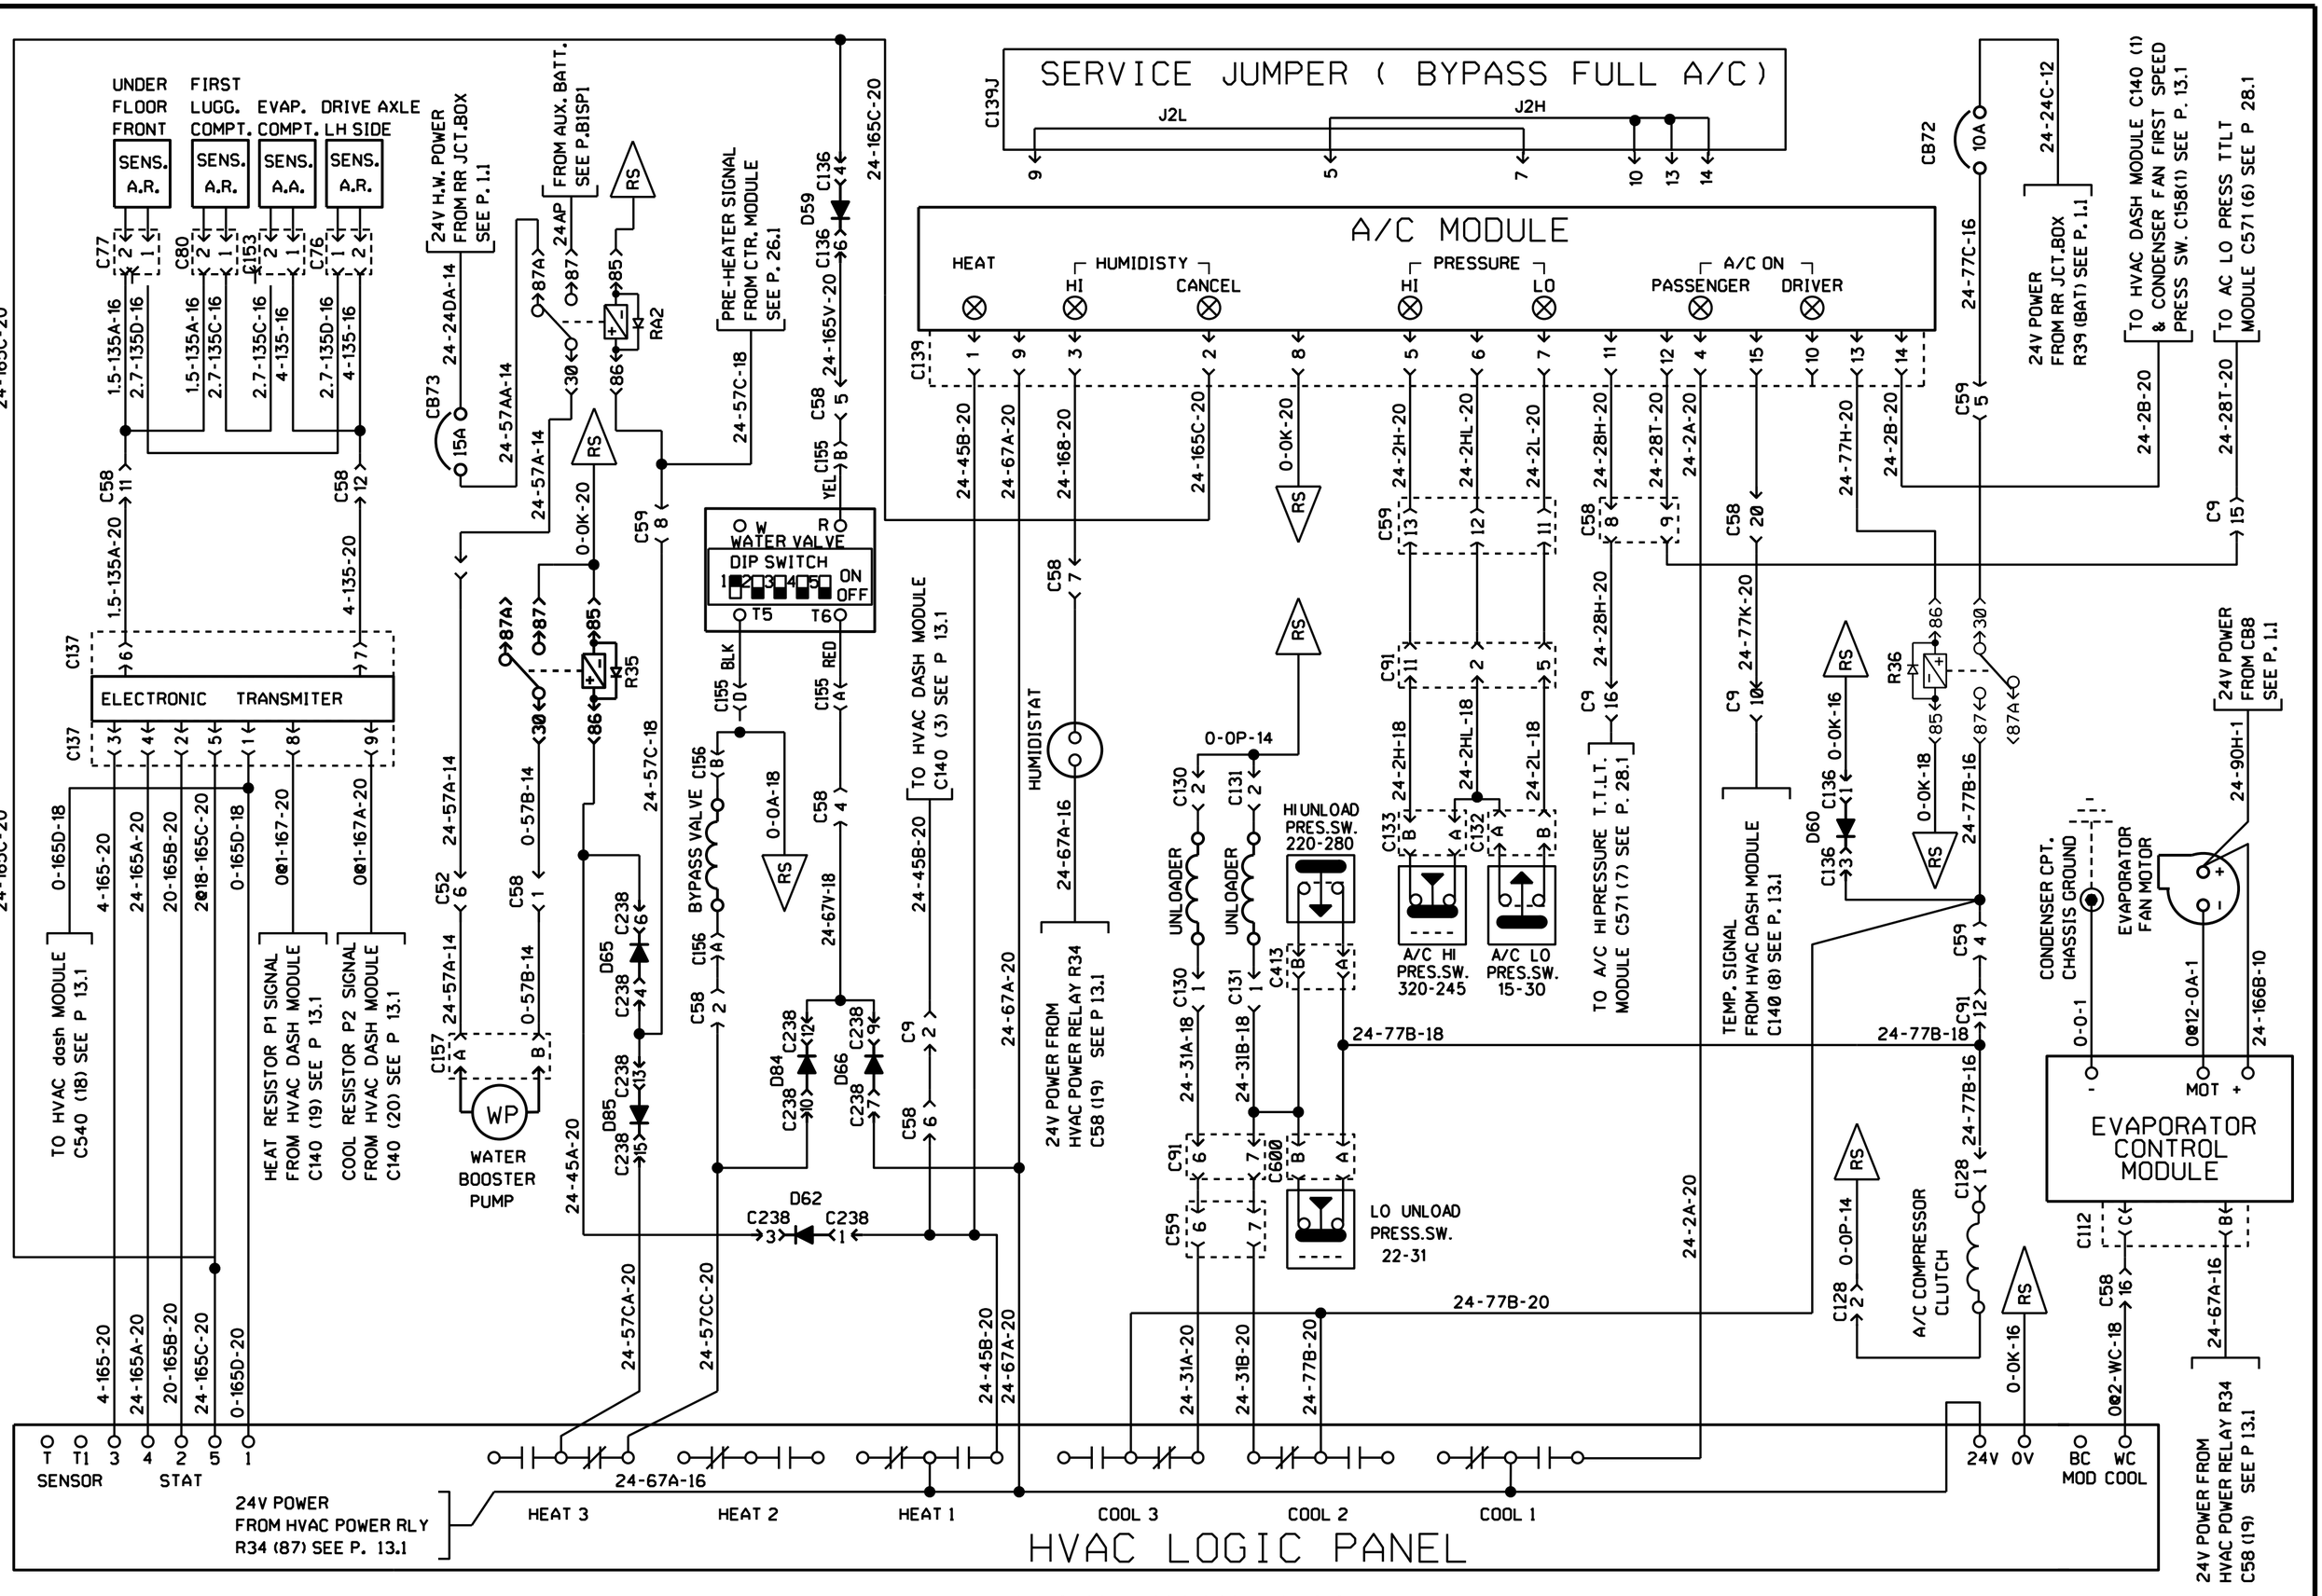

HVAC SYSTEM

ORLEANS & ADIRONDACK

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 13.2sp1	REVISION 00

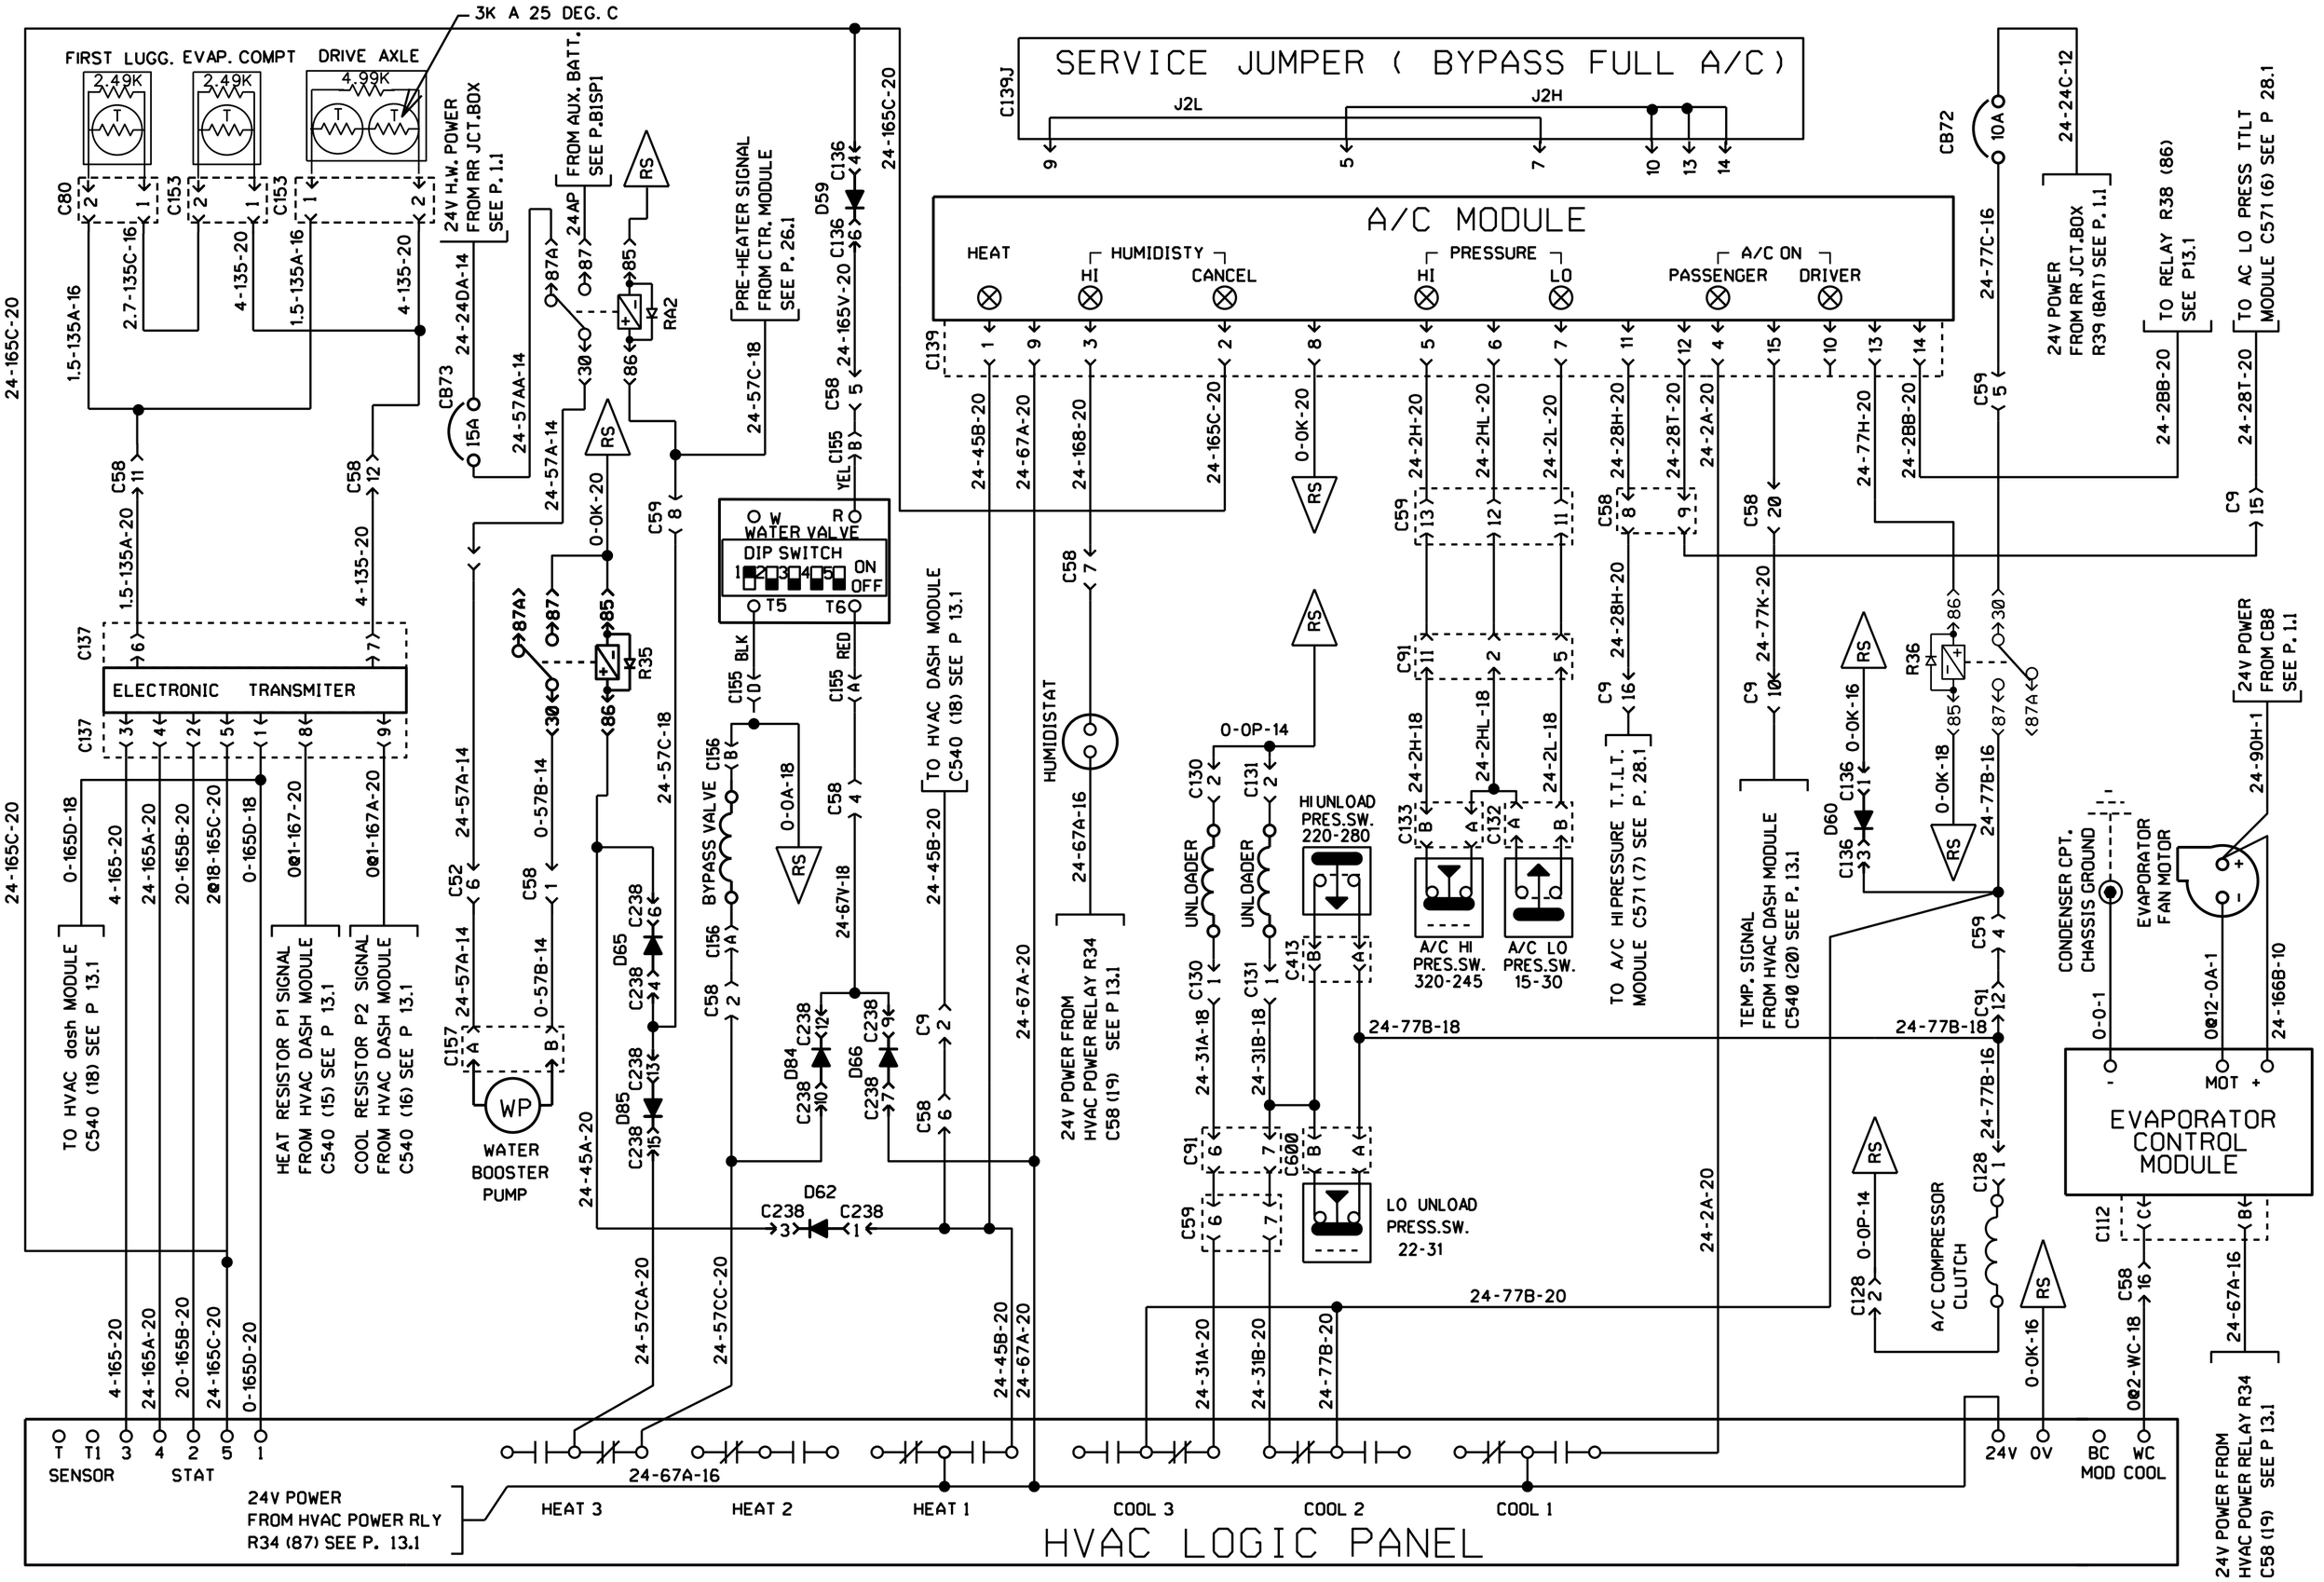

HVAC SYSTEM

ORLEANS & ADIRONDACK

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 13.2sp1	REVISION 06

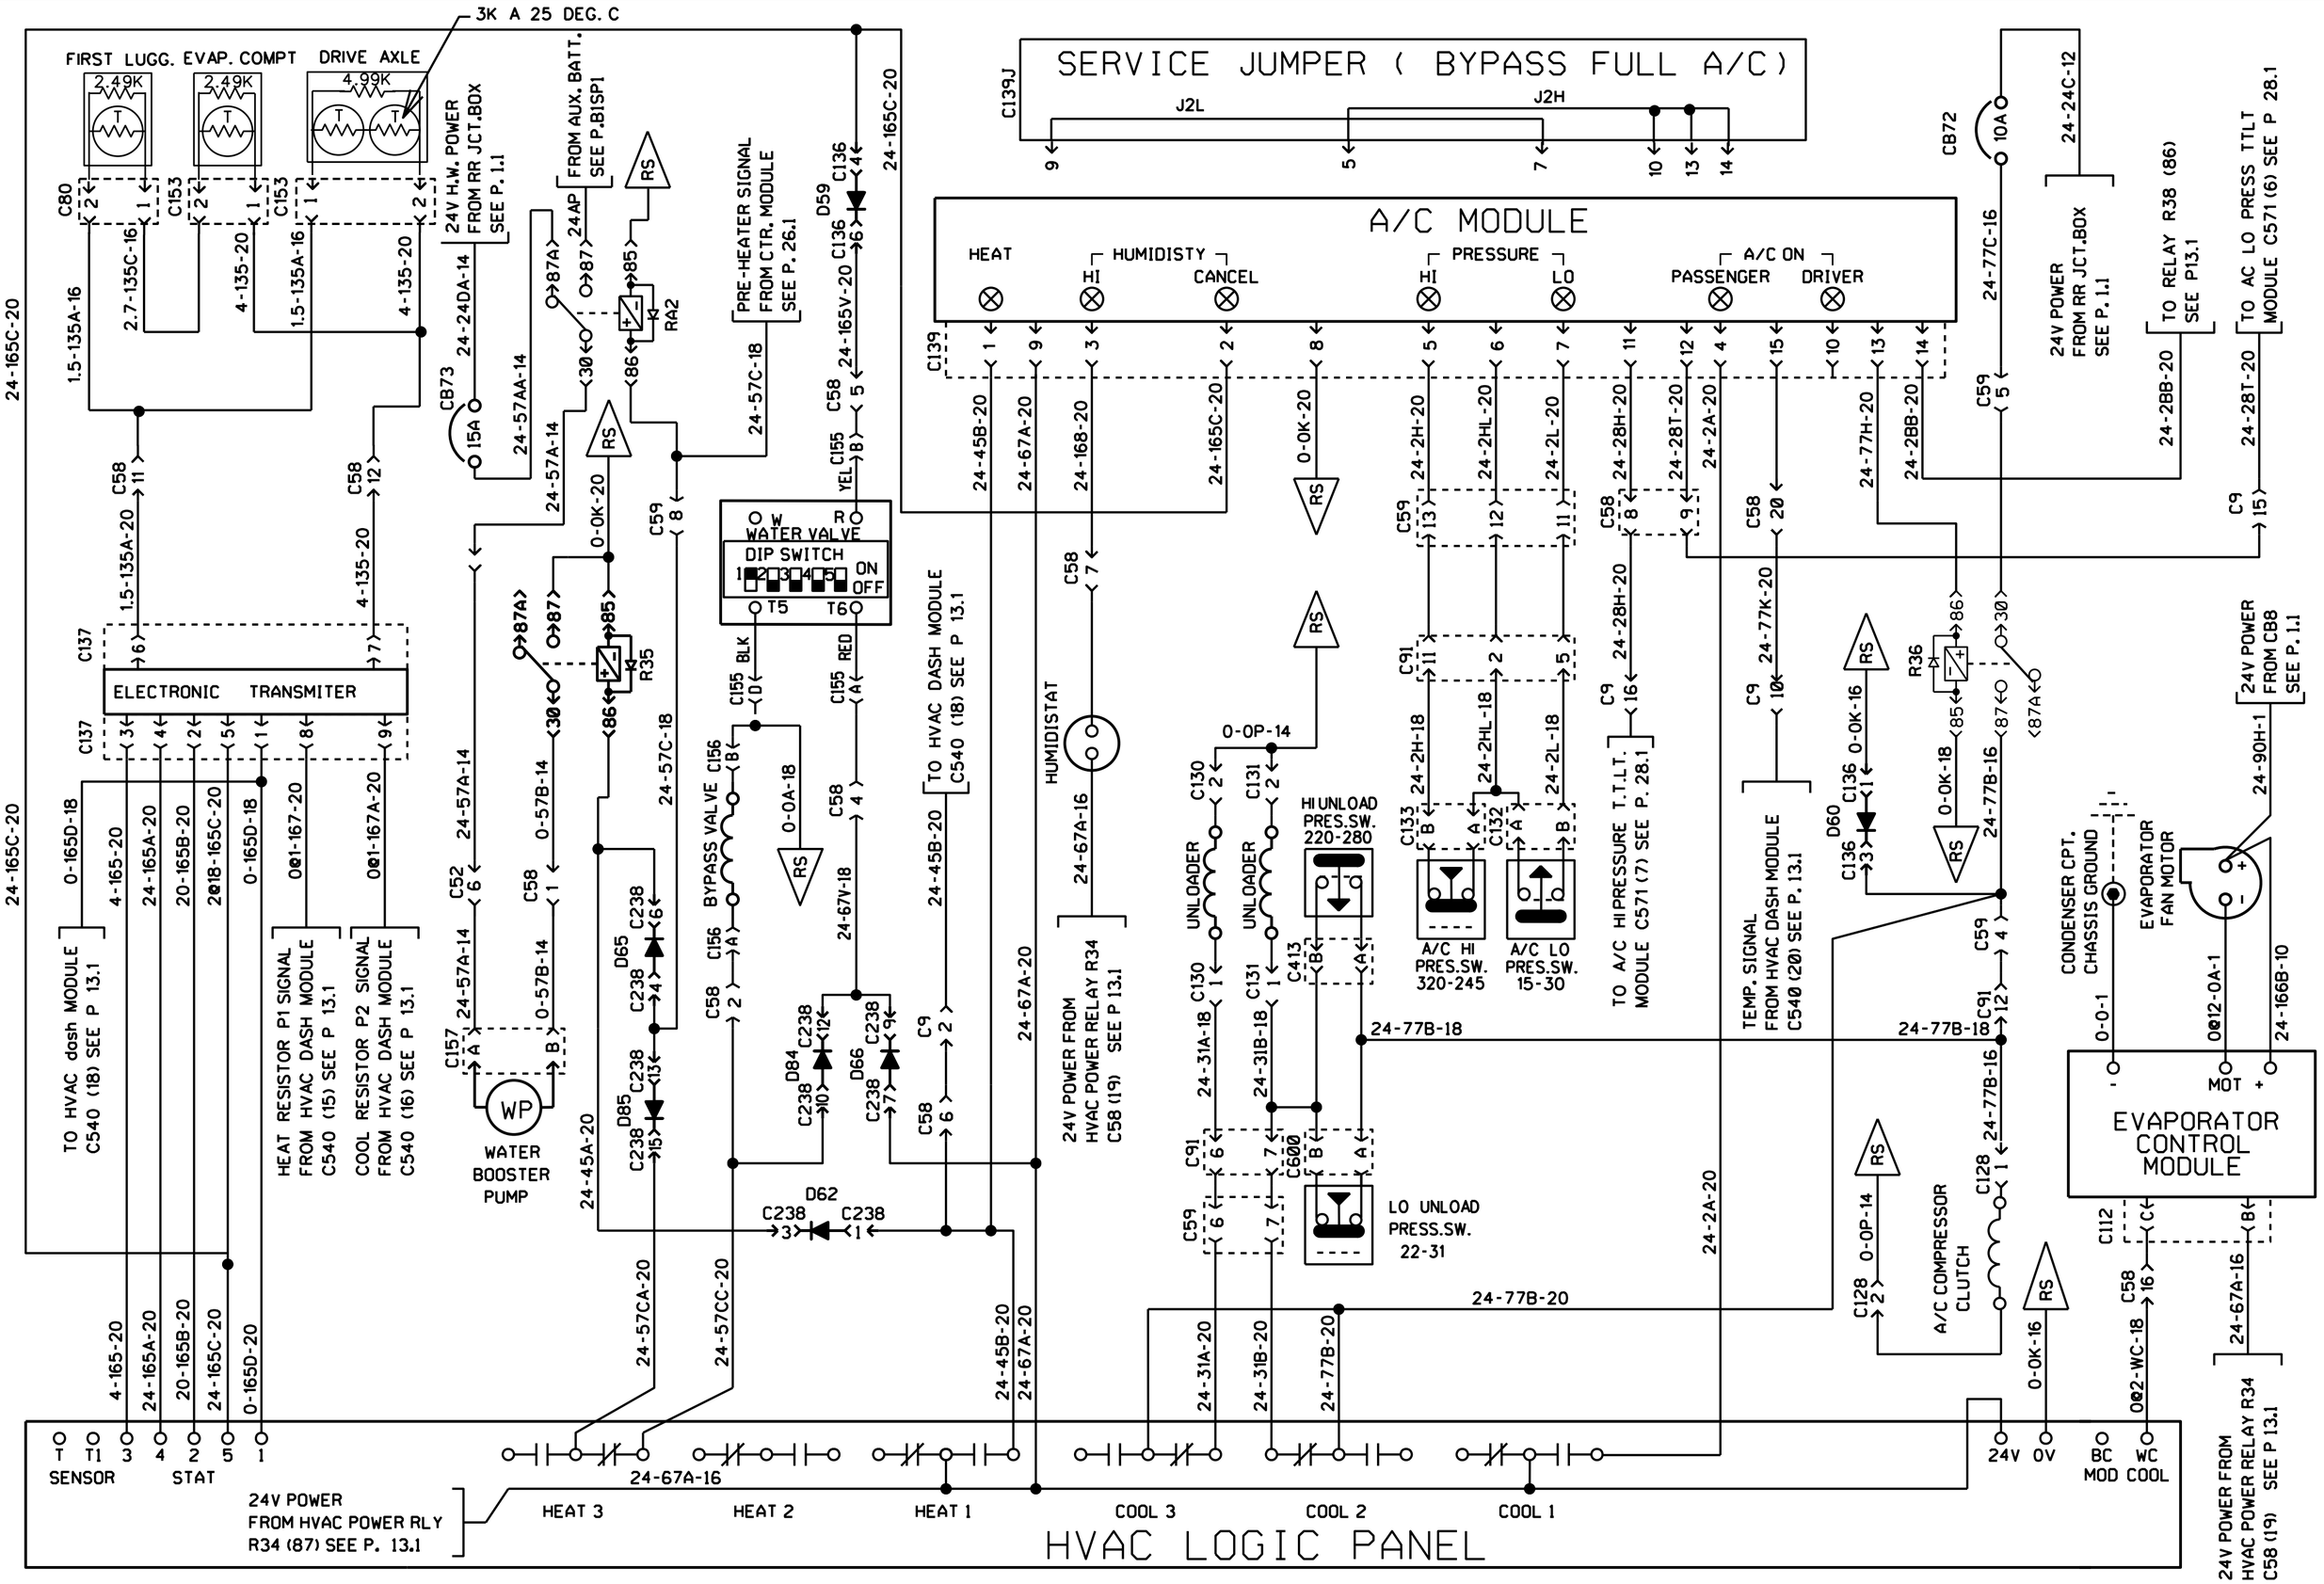

HVAC SYSTEM

ORLEANS & ADIRONDACK

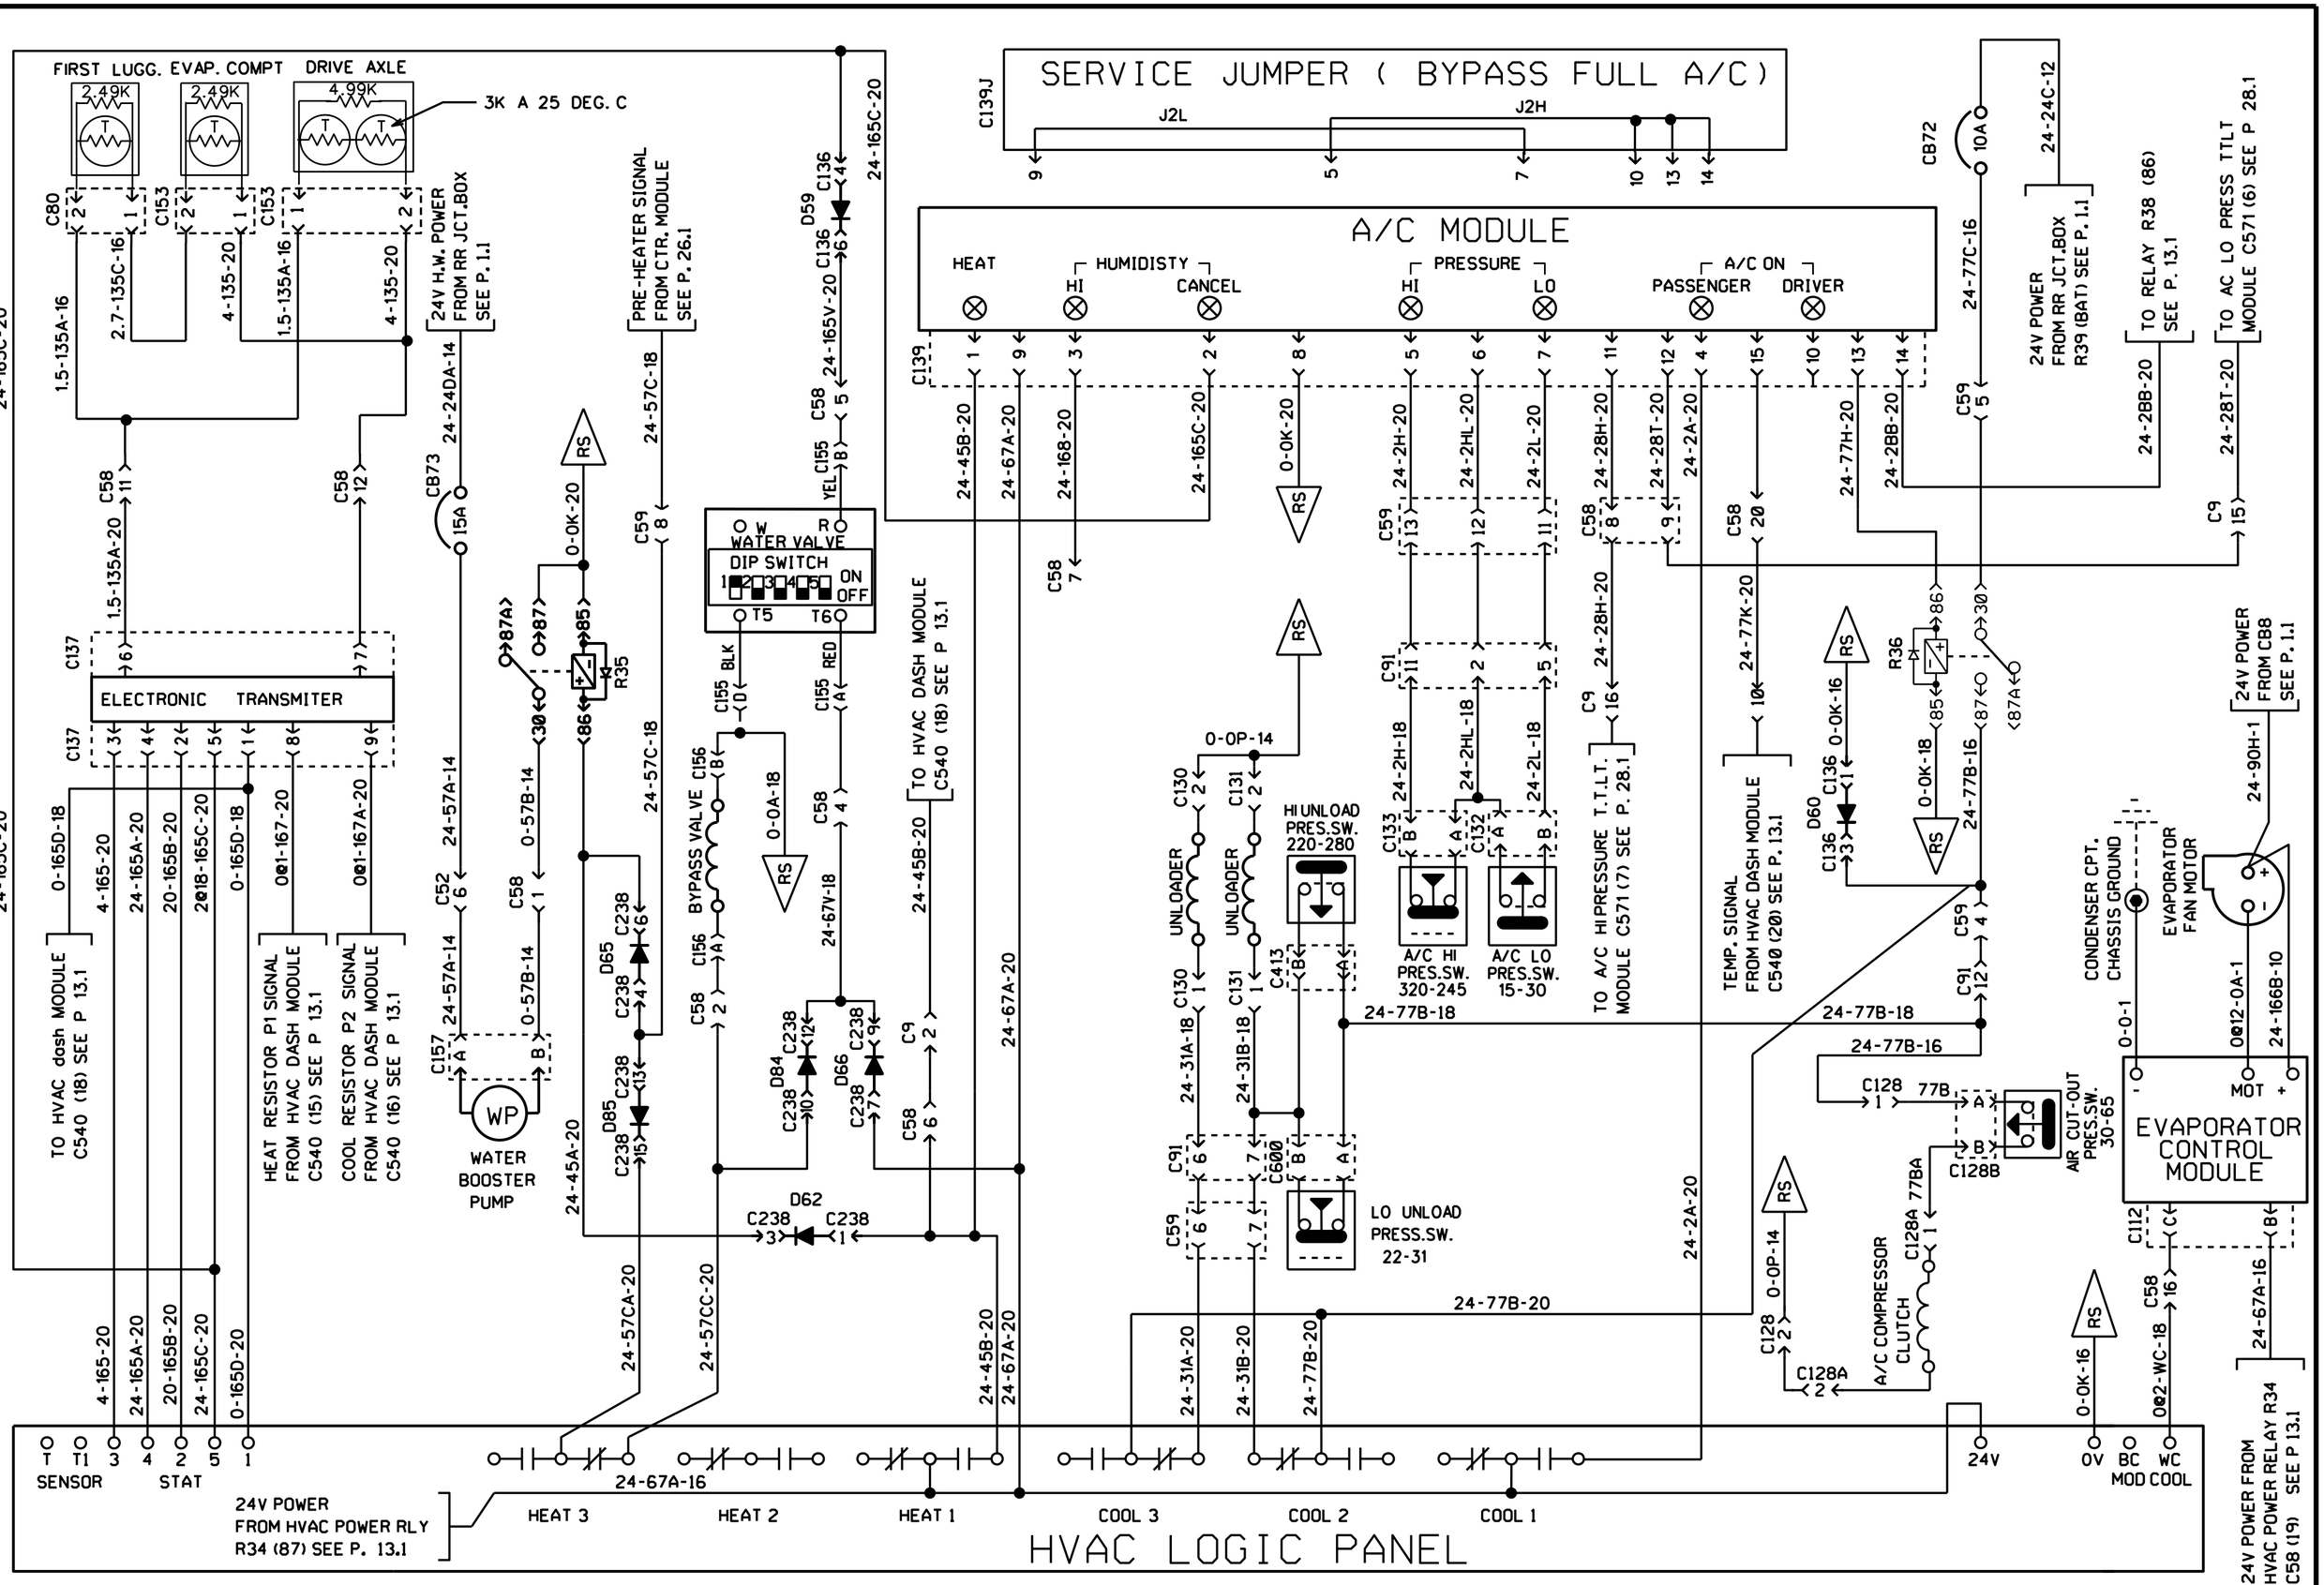

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 13.2 sp2	REVISION 00

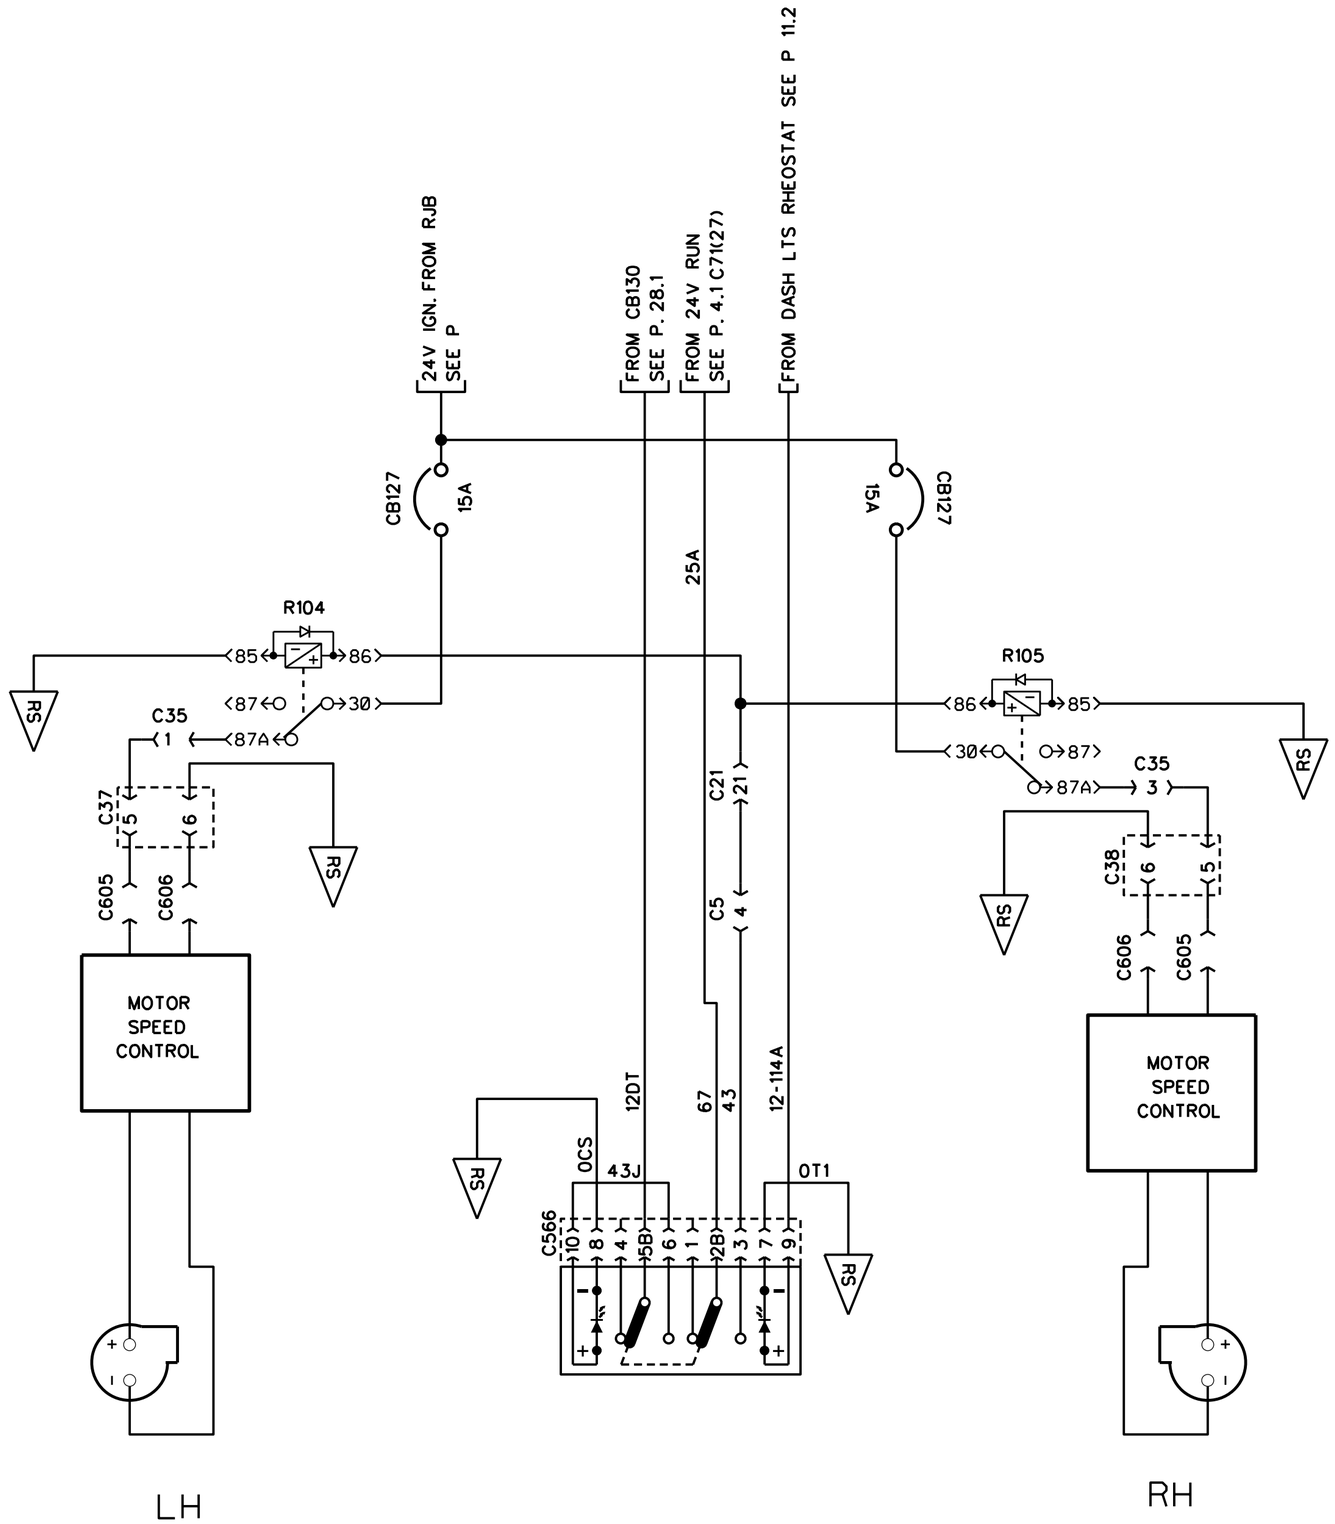
24V IGN. FROM RJB
SEE P
FROM CB130
SEE P. 28.1
FROM 24V RUN
SEE P. 4.1 C71(27)
FROM DASH LTS RHEOSTAT SEE P 11.2
CB127
15A
CB127
15A
25A
R104
R105
85
86
87
30
87A
C35
C37
C605
C606
C21
C5
C38
MOTOR
SPEED
CONTROL
RS
12DT
67
43
12-114A
OCS
43J
OT1
C566
LH
PARCEL RACK FAN
RH

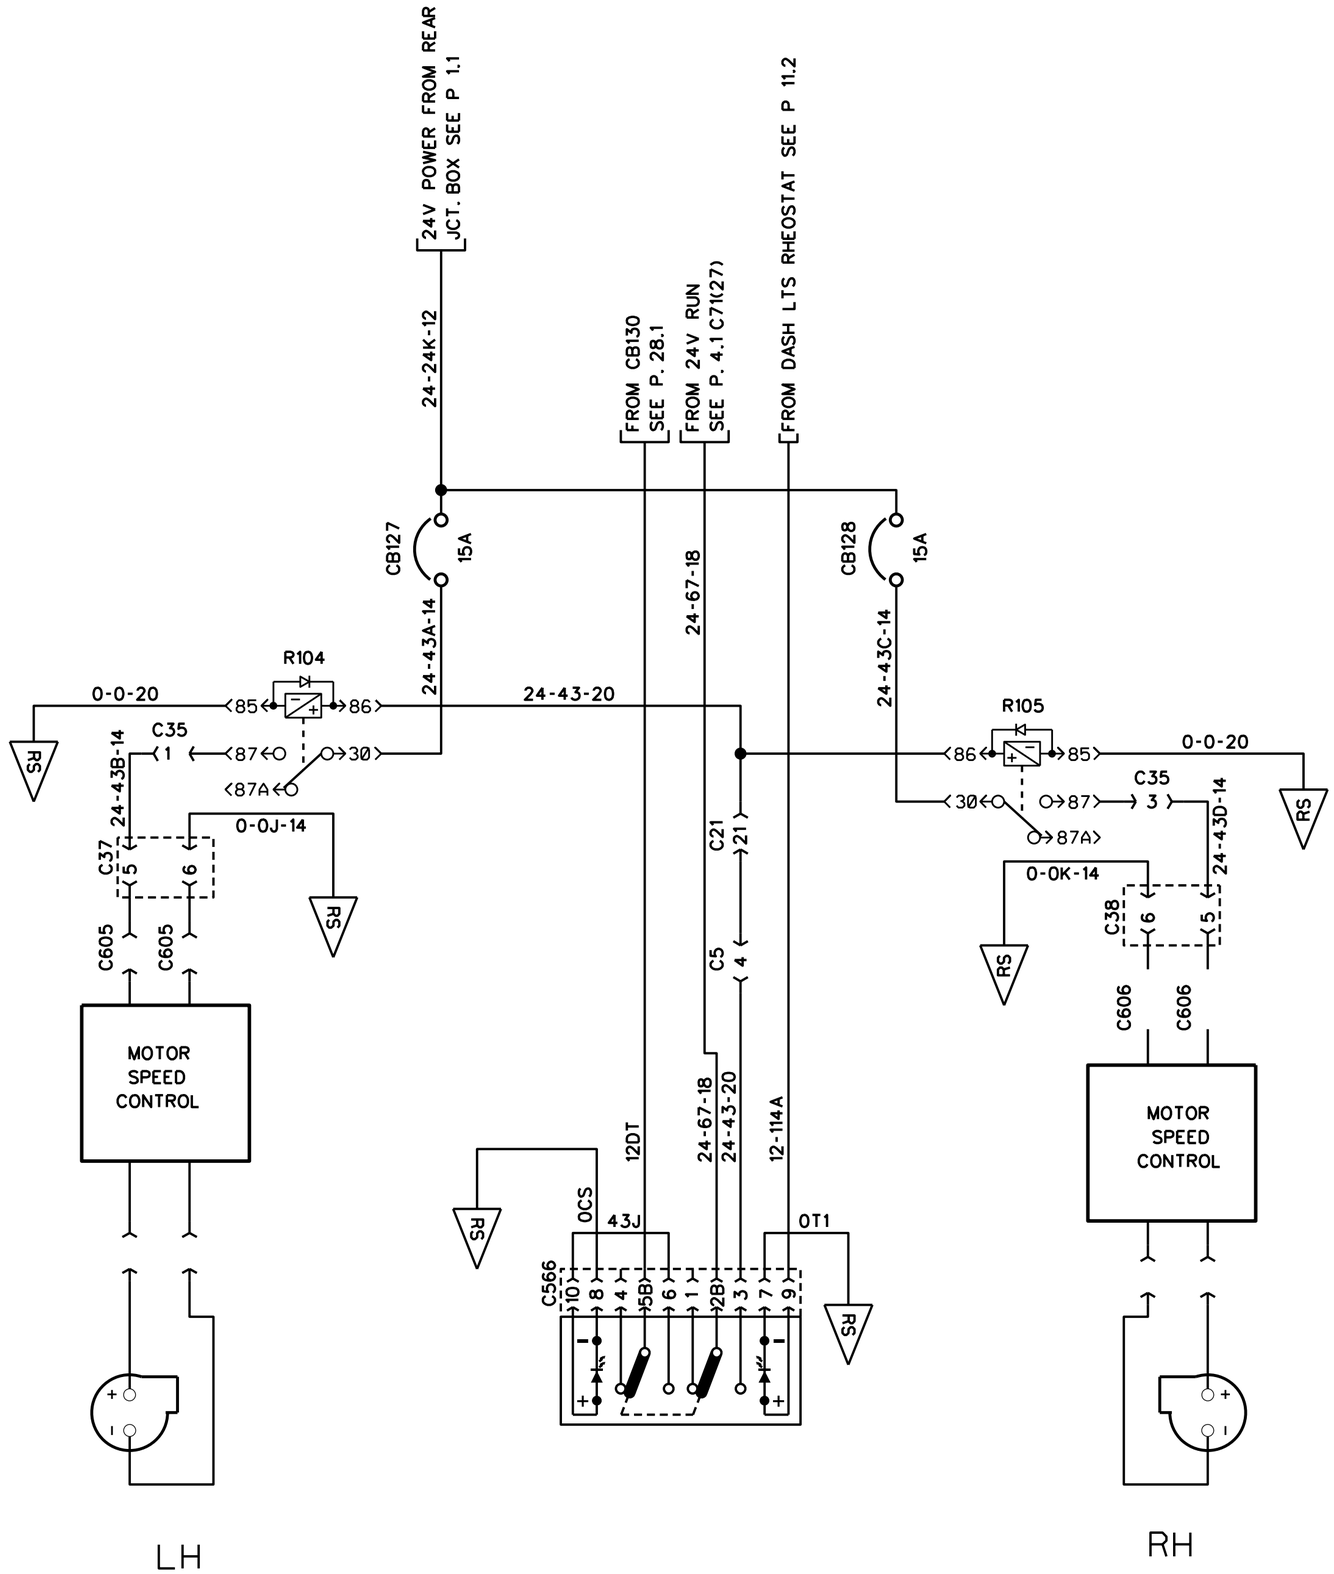
24V POWER FROM REAR JCT. BOX SEE P 1.1
24-24K-12
FROM CB130 SEE P. 28.1
FROM 24V RUN SEE P. 4.1 C71(27)
FROM DASH LTS RHEOSTAT SEE P 11.2
CB127
15A
CB128
15A
24-43A-14
24-67-18
24-43C-14
R104
0-0-20
85
86
24-43-20
C35
1
87
30
87A
24-43B-14
0-0J-14
C37
5
6
C605
C605
RS
MOTOR SPEED CONTROL
R105
86
85
0-0-20
30
87
3
87A
C35
24-43D-14
0-0K-14
C38
6
5
C606
C606
MOTOR SPEED CONTROL
C21
21
C5
4
12DT
24-67-18
24-43-20
12-114A
0CS
43J
0T1
C566
10
8
4
5B
6
1
2B
3
7
9
LH
PARCEL RACK FAN
RH

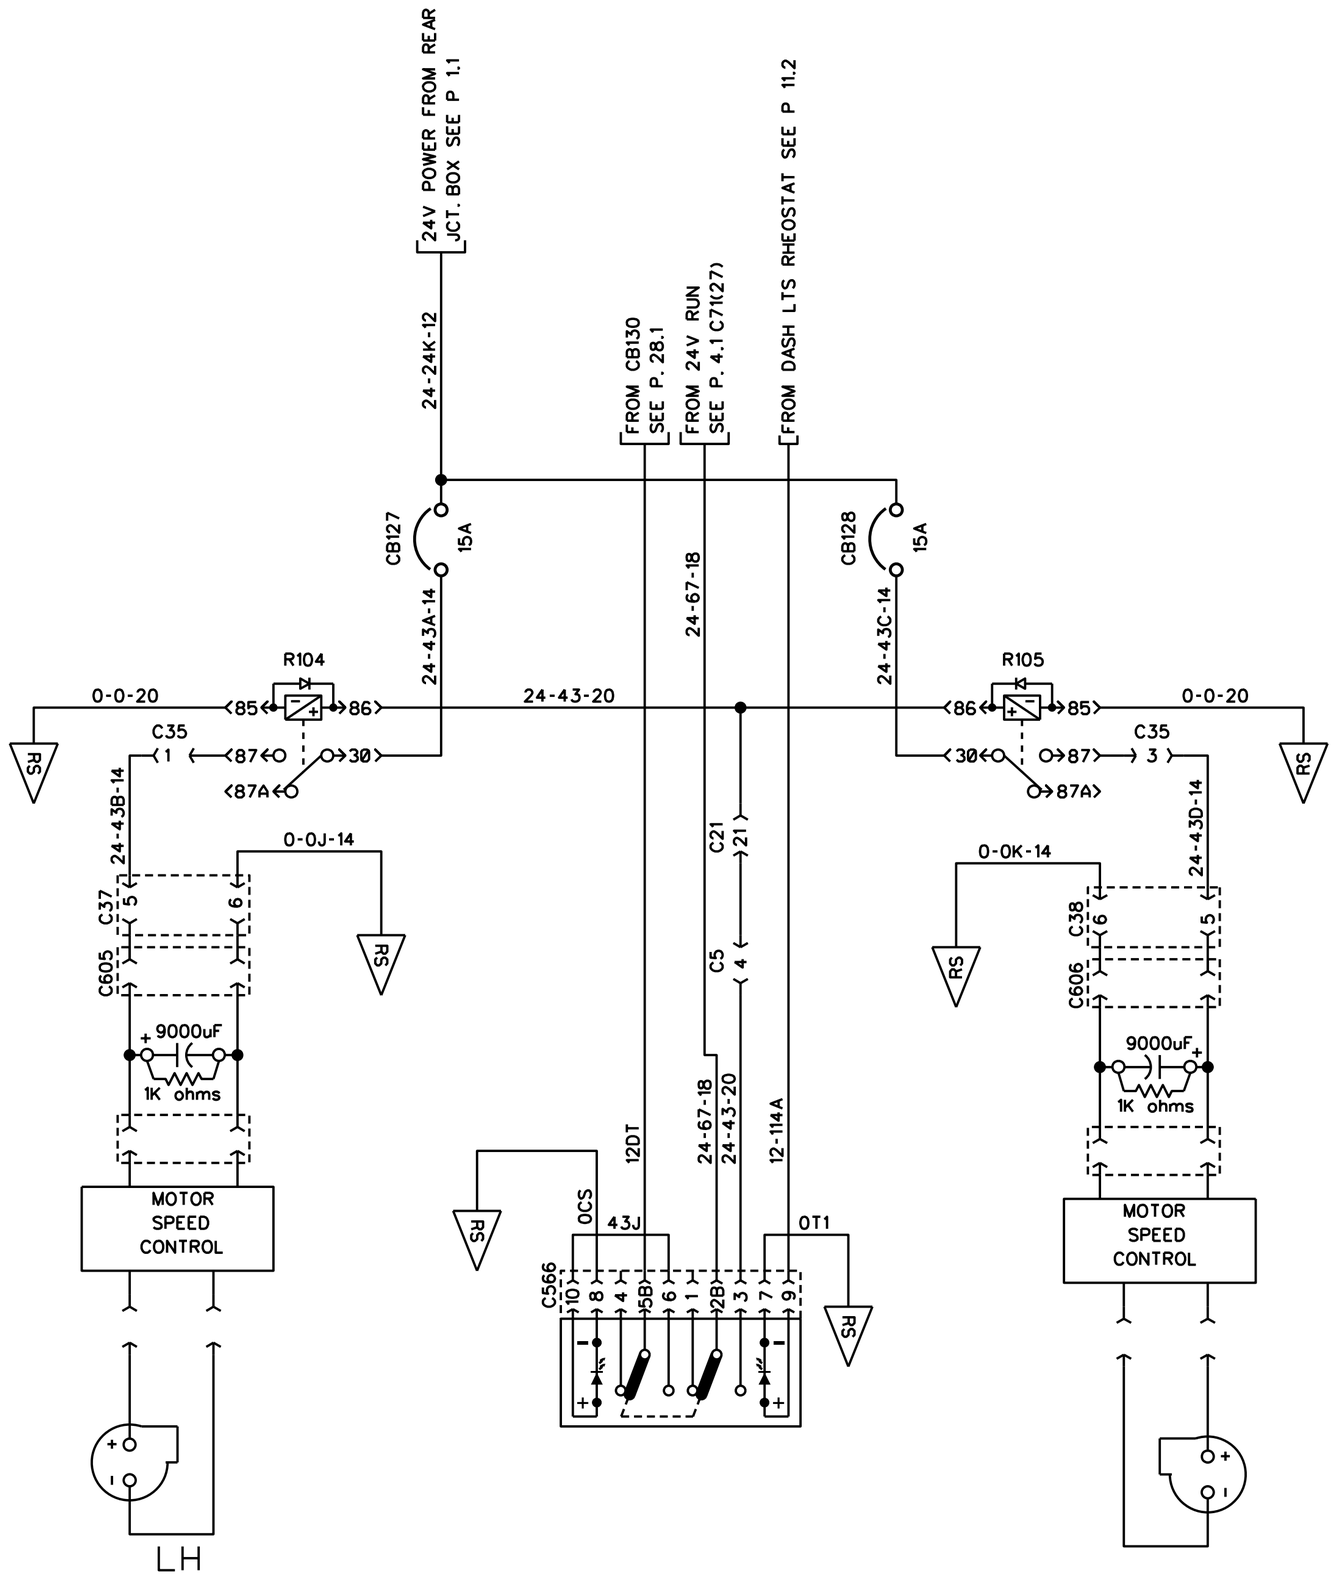
24V POWER FROM REAR JCT. BOX SEE P 1.1
24-24K-12
FROM CB130 SEE P. 28.1
FROM 24V RUN SEE P. 4.1 C71(27)
FROM DASH LTS RHEOSTAT SEE P 11.2
CB127
15A
CB128
15A
24-43A-14
24-67-18
24-43C-14
R104
R105
0-0-20
85
86
24-43-20
86
85
0-0-20
C35
1
87
30
87A
30
87A
87
C35
3
RS
RS
24-43B-14
24-43D-14
0-0J-14
0-0K-14
C37
5
6
C605
C38
6
5
C606
RS
RS
9000uF
1K ohms
9000uF
1K ohms
MOTOR SPEED CONTROL
MOTOR SPEED CONTROL
LH
RH
C21
21
C5
4
24-67-18
24-43-20
12-114A
12DT
OCS
43J
0T1
C566
10
8
4
5B
6
1
2B
3
7
9
RS
RS
PARCEL RACK FAN

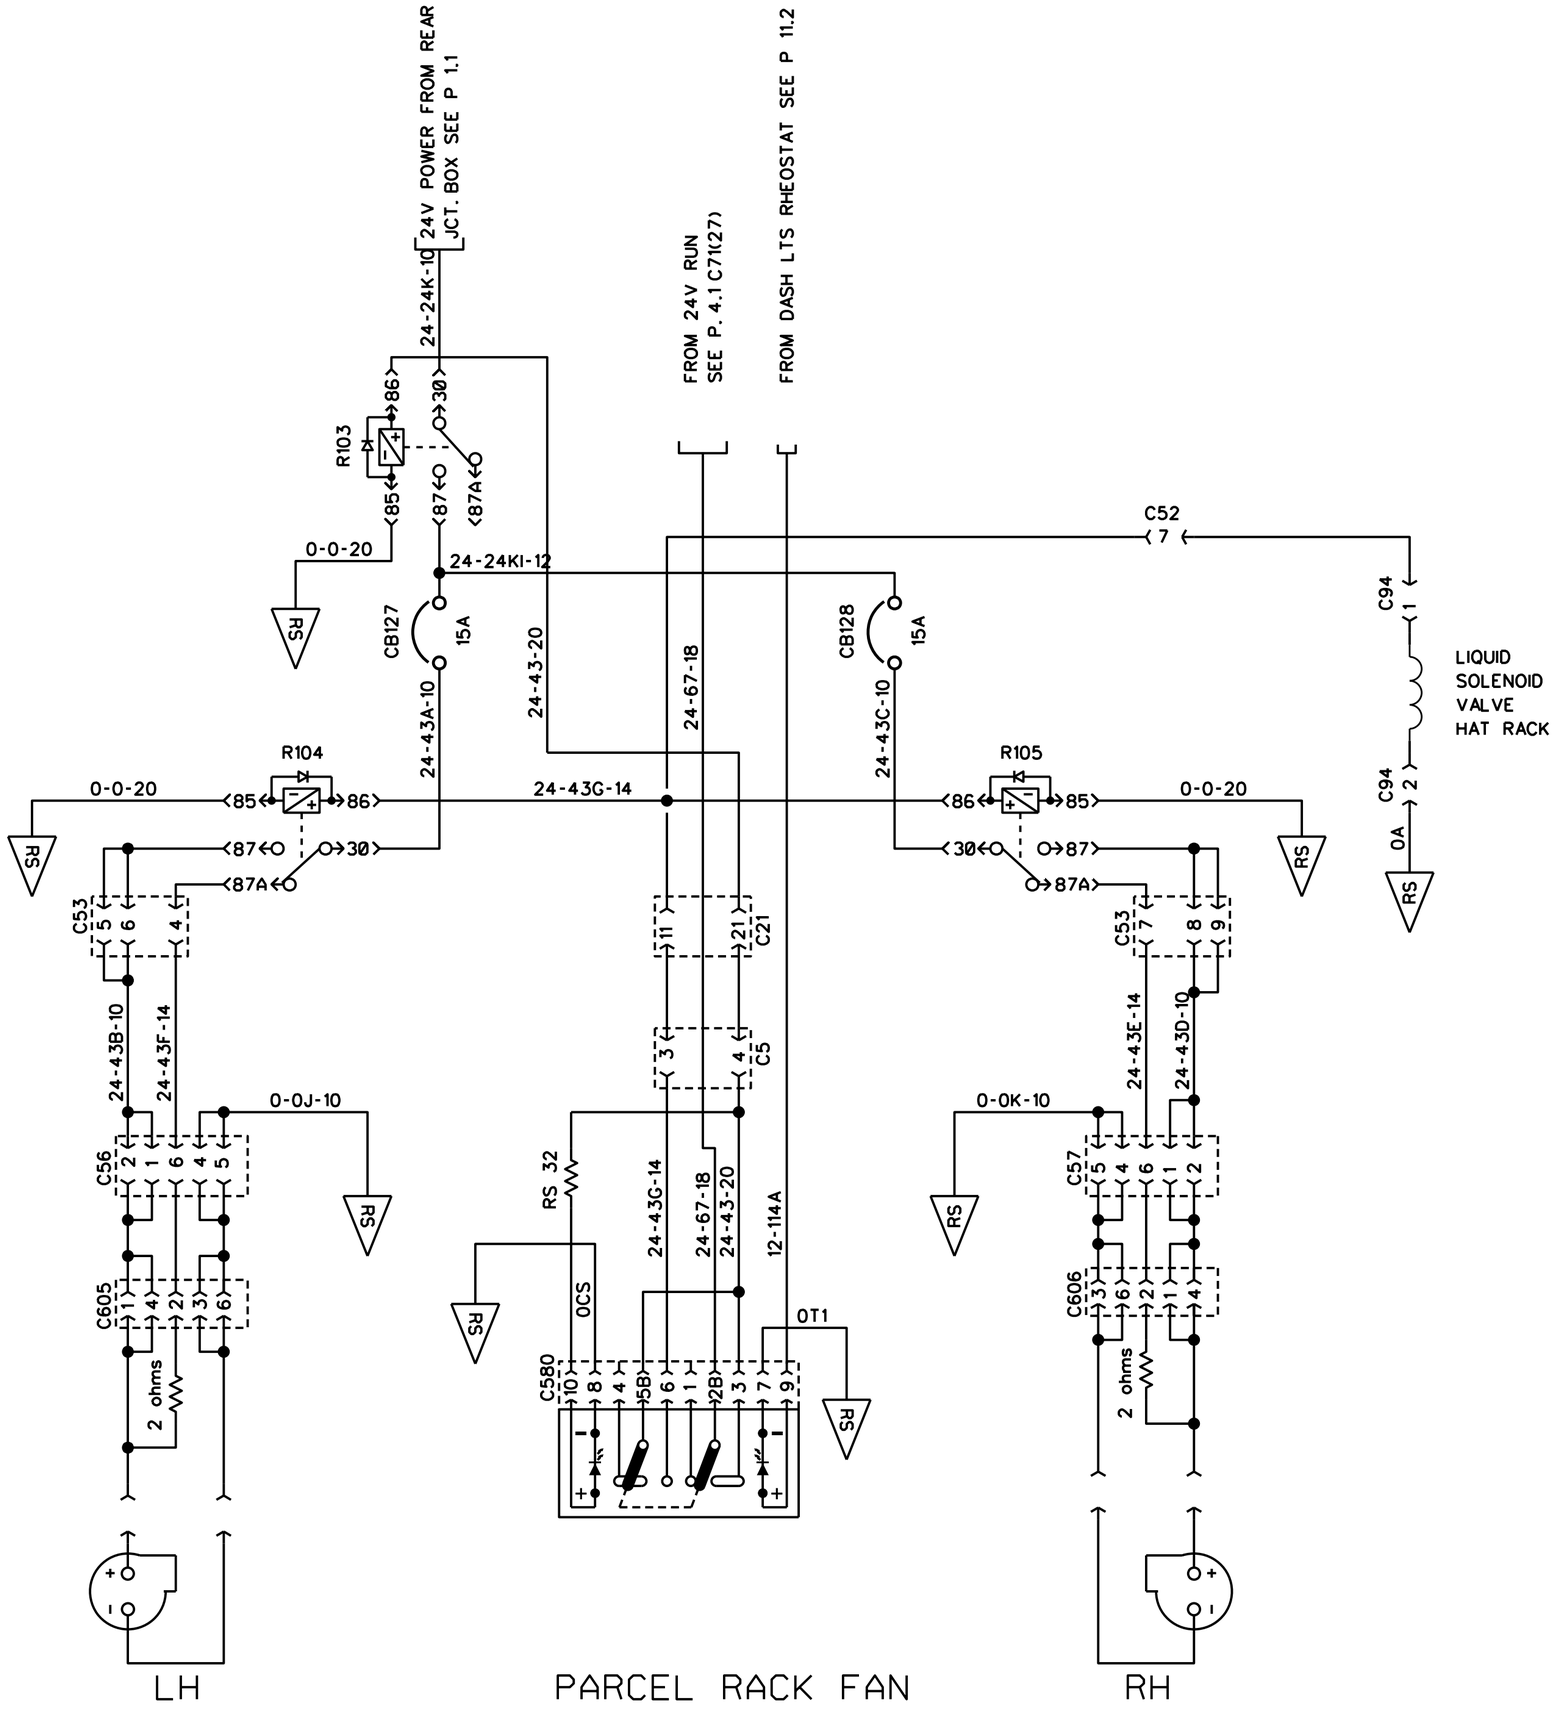
24V POWER FROM REAR JCT. BOX SEE P 1.1
24-24K-10
FROM 24V RUN SEE P. 4.1 C71(27)
FROM DASH LTS RHEOSTAT SEE P 11.2
R103
86
30
85
87
87A
0-0-20
24-24KI-12
C52
7
C94
1
LIQUID SOLENOID VALVE HAT RACK
CB127
15A
CB128
15A
24-43A-10
24-43-20
24-67-18
24-43C-10
R104
R105
24-43G-14
0-0-20
0-0-20
RS
C53
5
6
4
11
21
C21
C53
7
8
9
C94
2
0A
24-43B-10
24-43F-14
3
4
C5
24-43E-14
24-43D-10
0-0J-10
0-0K-10
C56
2
1
6
4
5
RS 32
24-43G-14
24-67-18
24-43-20
12-114A
C57
5
4
6
1
2
C605
1
4
2
3
6
OCS
0T1
C580
10
8
4
5B
6
1
2B
3
7
9
C606
3
6
2
1
4
2 ohms
2 ohms
LH
PARCEL RACK FAN
RH

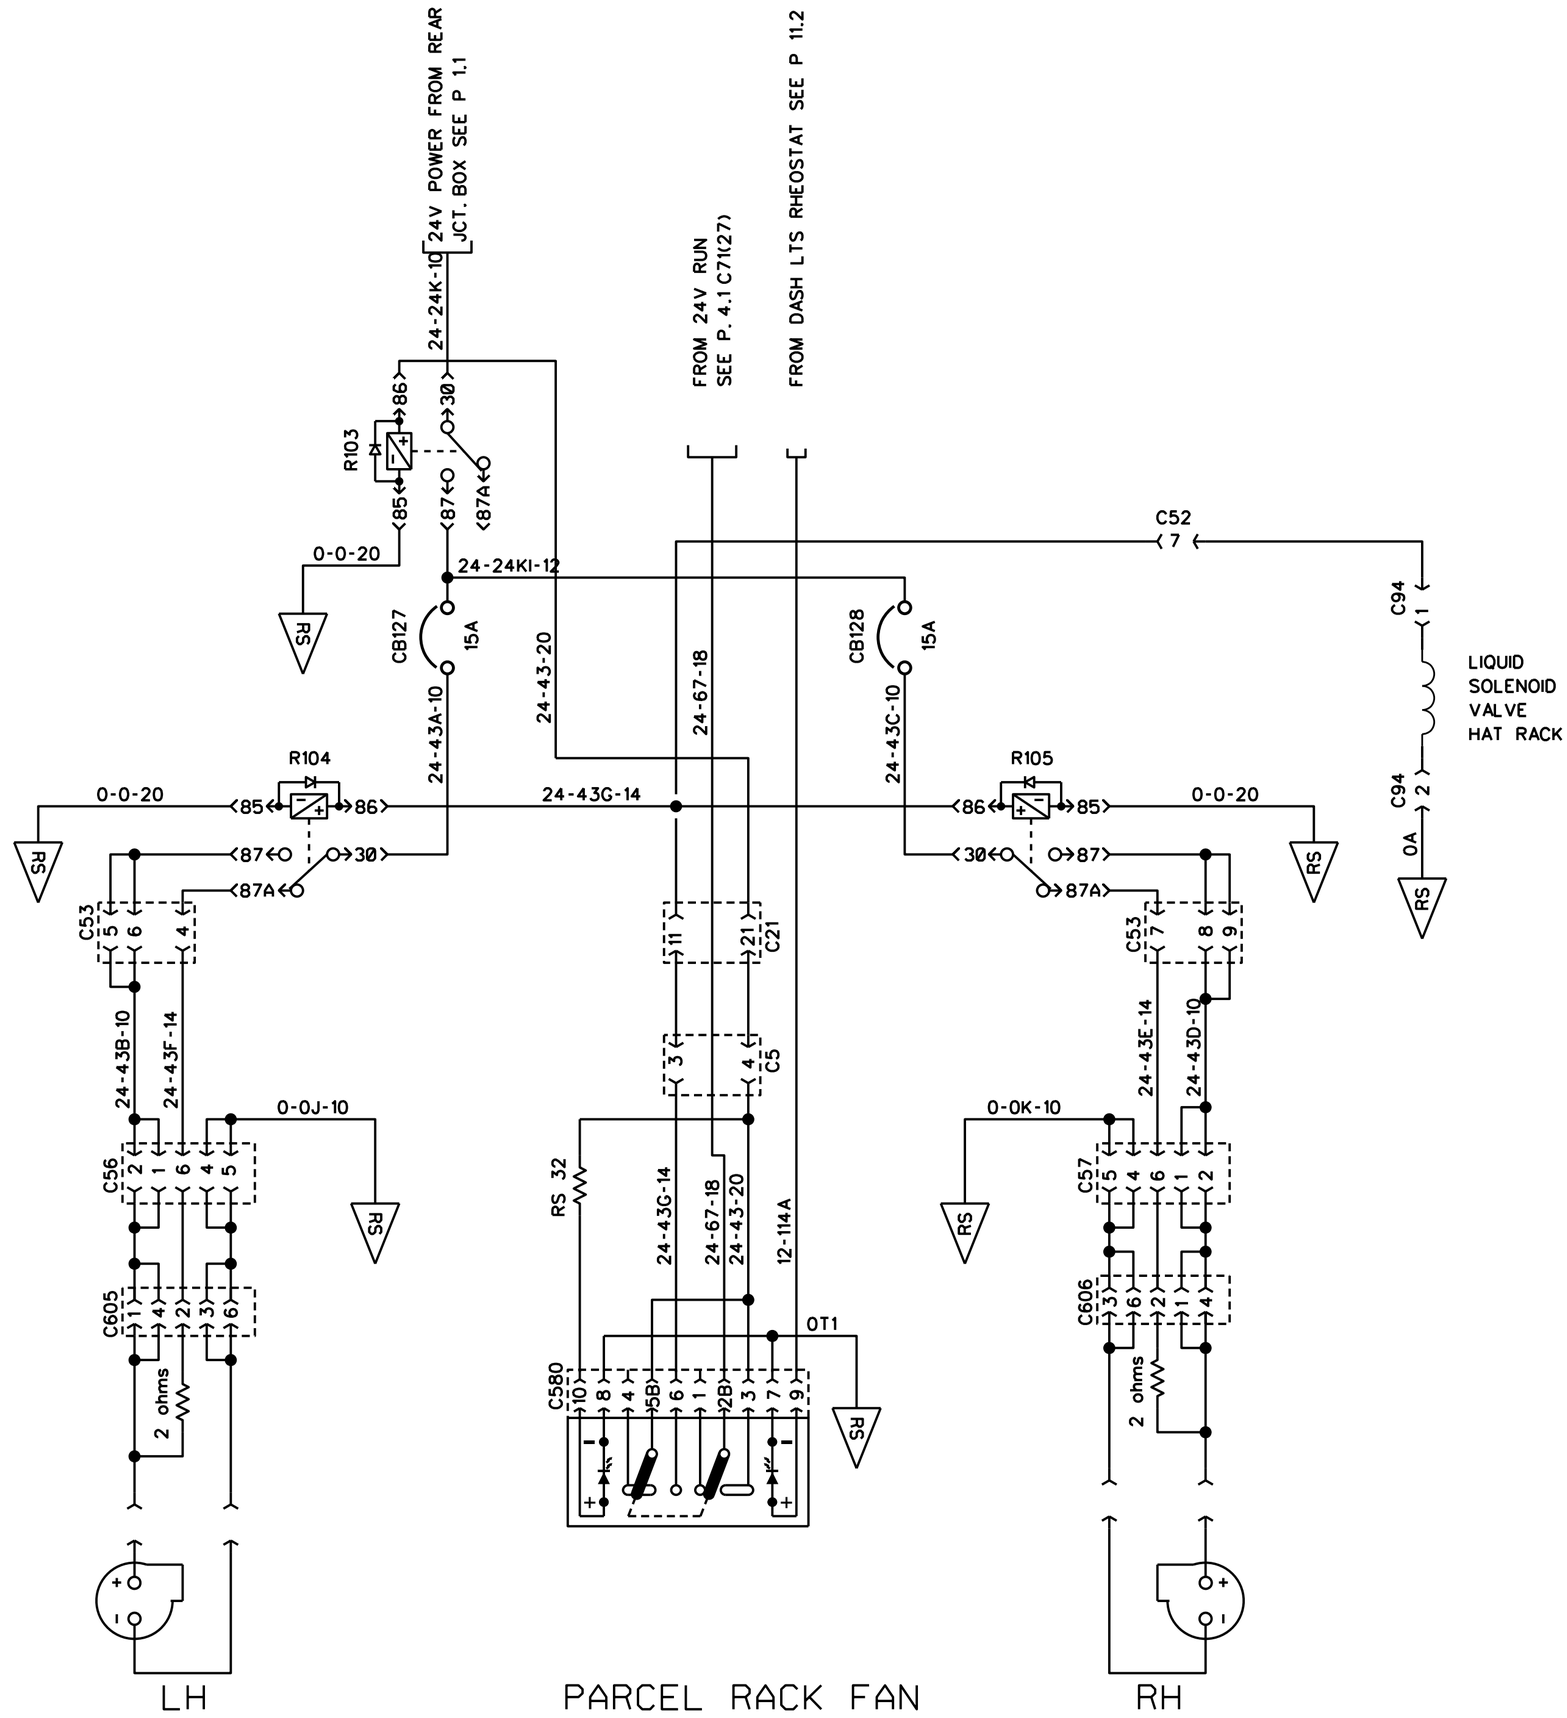
24V POWER FROM REAR JCT. BOX SEE P 1.1
24-24K-10
FROM 24V RUN SEE P. 4.1 C7(27)
FROM DASH LTS RHEOSTAT SEE P 11.2
R103
86
30
85
87
87A
0-0-20
24-24KI-12
C52
7
C94
1
LIQUID SOLENOID VALVE HAT RACK
CB127
15A
CB128
15A
24-43A-10
24-43-20
24-67-18
24-43C-10
R104
R105
24-43G-14
0-0-20
C94
2
0A
C53
5
6
4
11
21
C21
3
4
C5
7
8
9
24-43B-10
24-43F-14
24-43E-14
24-43D-10
0-0J-10
0-0K-10
C56
2
1
6
4
5
C605
11
4
2
3
6
2 ohms
RS 32
24-43G-14
24-67-18
24-43-20
12-114A
0T1
C580
10
8
4
5B
6
1
2B
3
7
9
C57
5
4
6
1
2
C606
3
6
2
1
4
RS
LH
PARCEL RACK FAN
RH

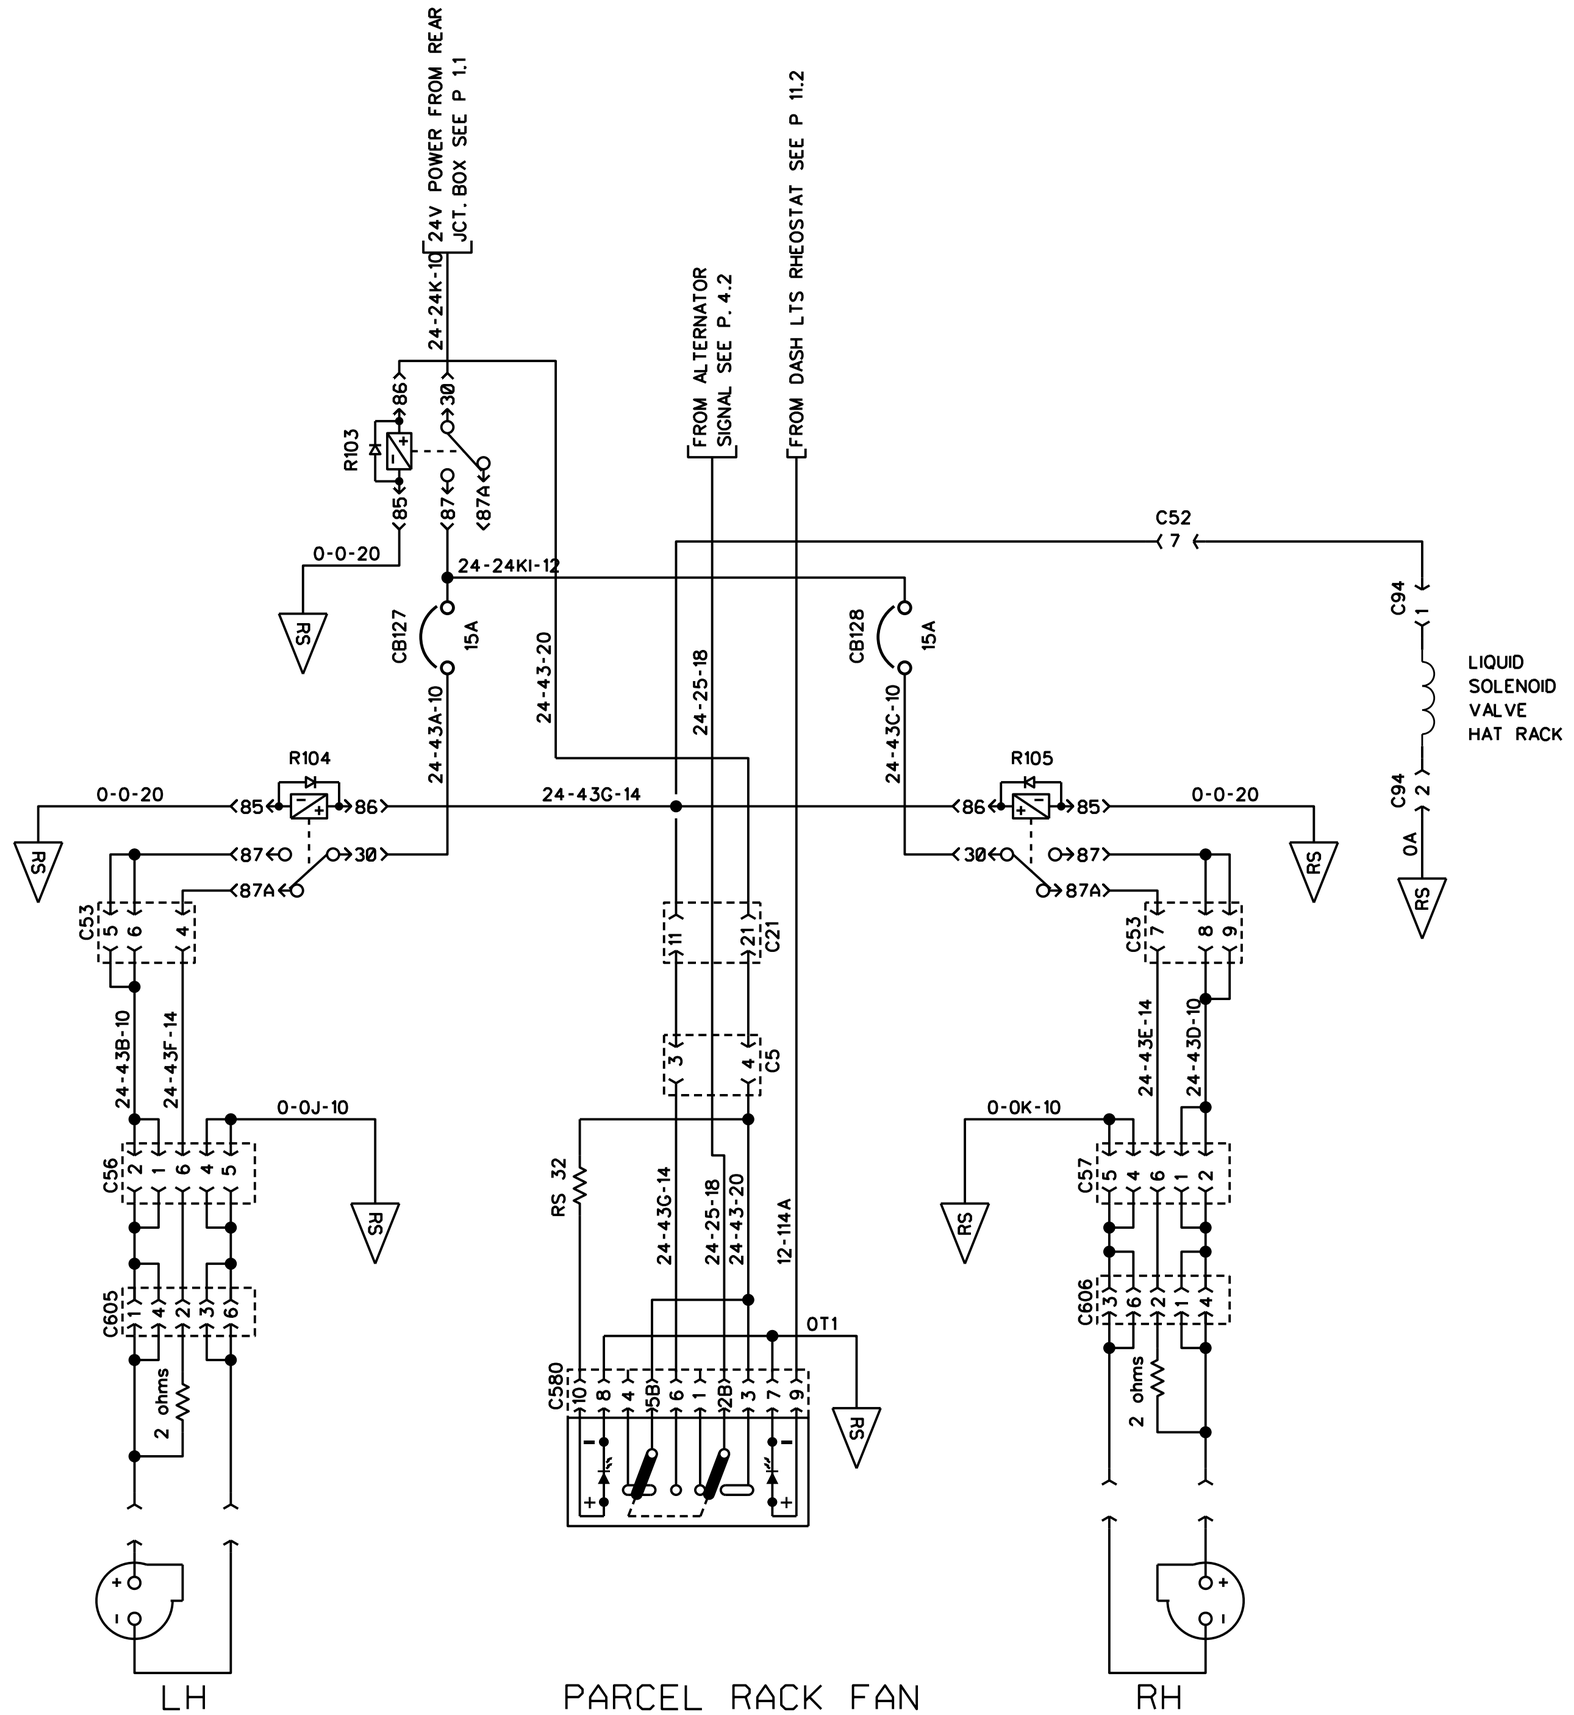
24V POWER FROM REAR JCT. BOX SEE P 1.1
24-24K-10
FROM ALTERNATOR SIGNAL SEE P. 4.2
FROM DASH LTS RHEOSTAT SEE P 11.2
R103
86
30
85
87
87A
0-0-20
24-24KI-12
C52
7
C94
1
LIQUID SOLENOID VALVE HAT RACK
CB127
15A
CB128
15A
24-43-20
24-25-18
24-43A-10
24-43C-10
R104
R105
24-43G-14
0-0-20
C94
2
0A
C53
5
6
4
11
21
C21
3
4
C5
7
8
9
24-43B-10
24-43F-14
24-43E-14
24-43D-10
0-0J-10
0-0K-10
C56
2
1
6
4
5
C57
5
4
6
1
2
C606
3
6
2
1
4
C605
11
4
2
3
6
2 ohms
RS 32
24-43G-14
24-25-18
24-43-20
12-114A
0T1
C580
10
8
4
5B
6
1
2B
3
7
9
LH
PARCEL RACK FAN
RH

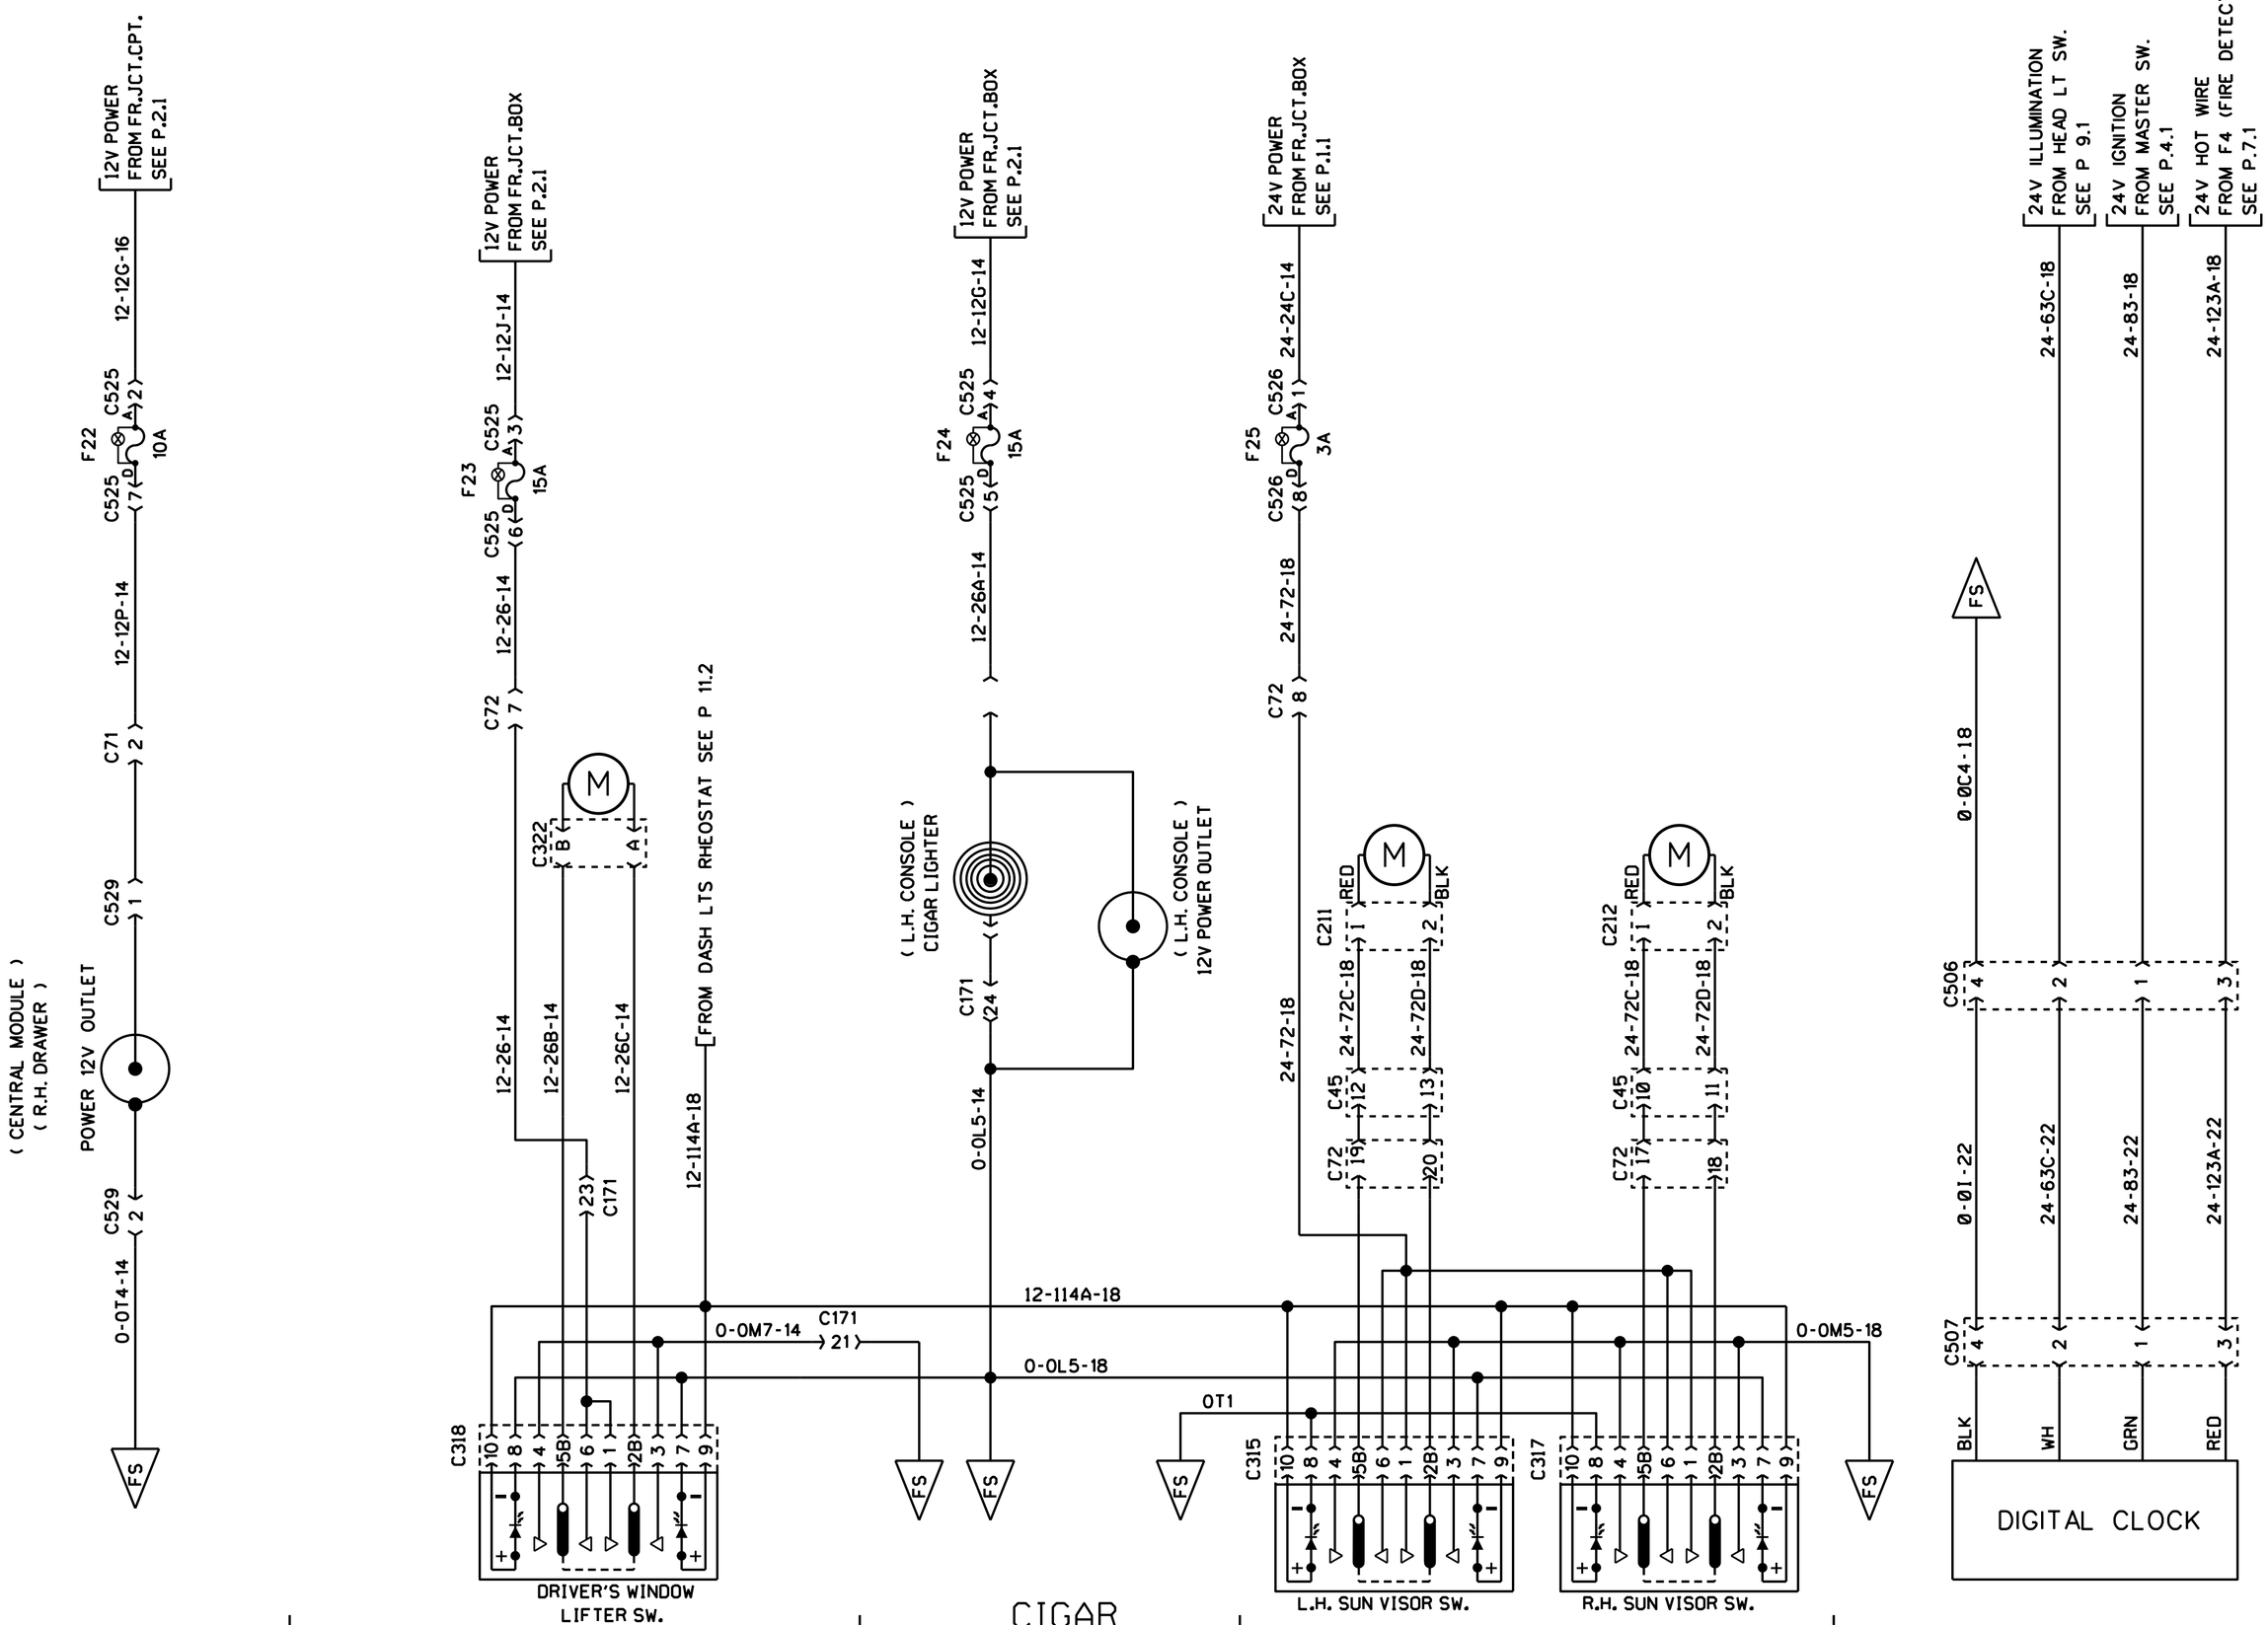

POWER 12V OUTLET | DRIVER'S WINDOW LIFTER | CIGAR LIGHTER | SUN VISOR | DIGITAL CLOCK

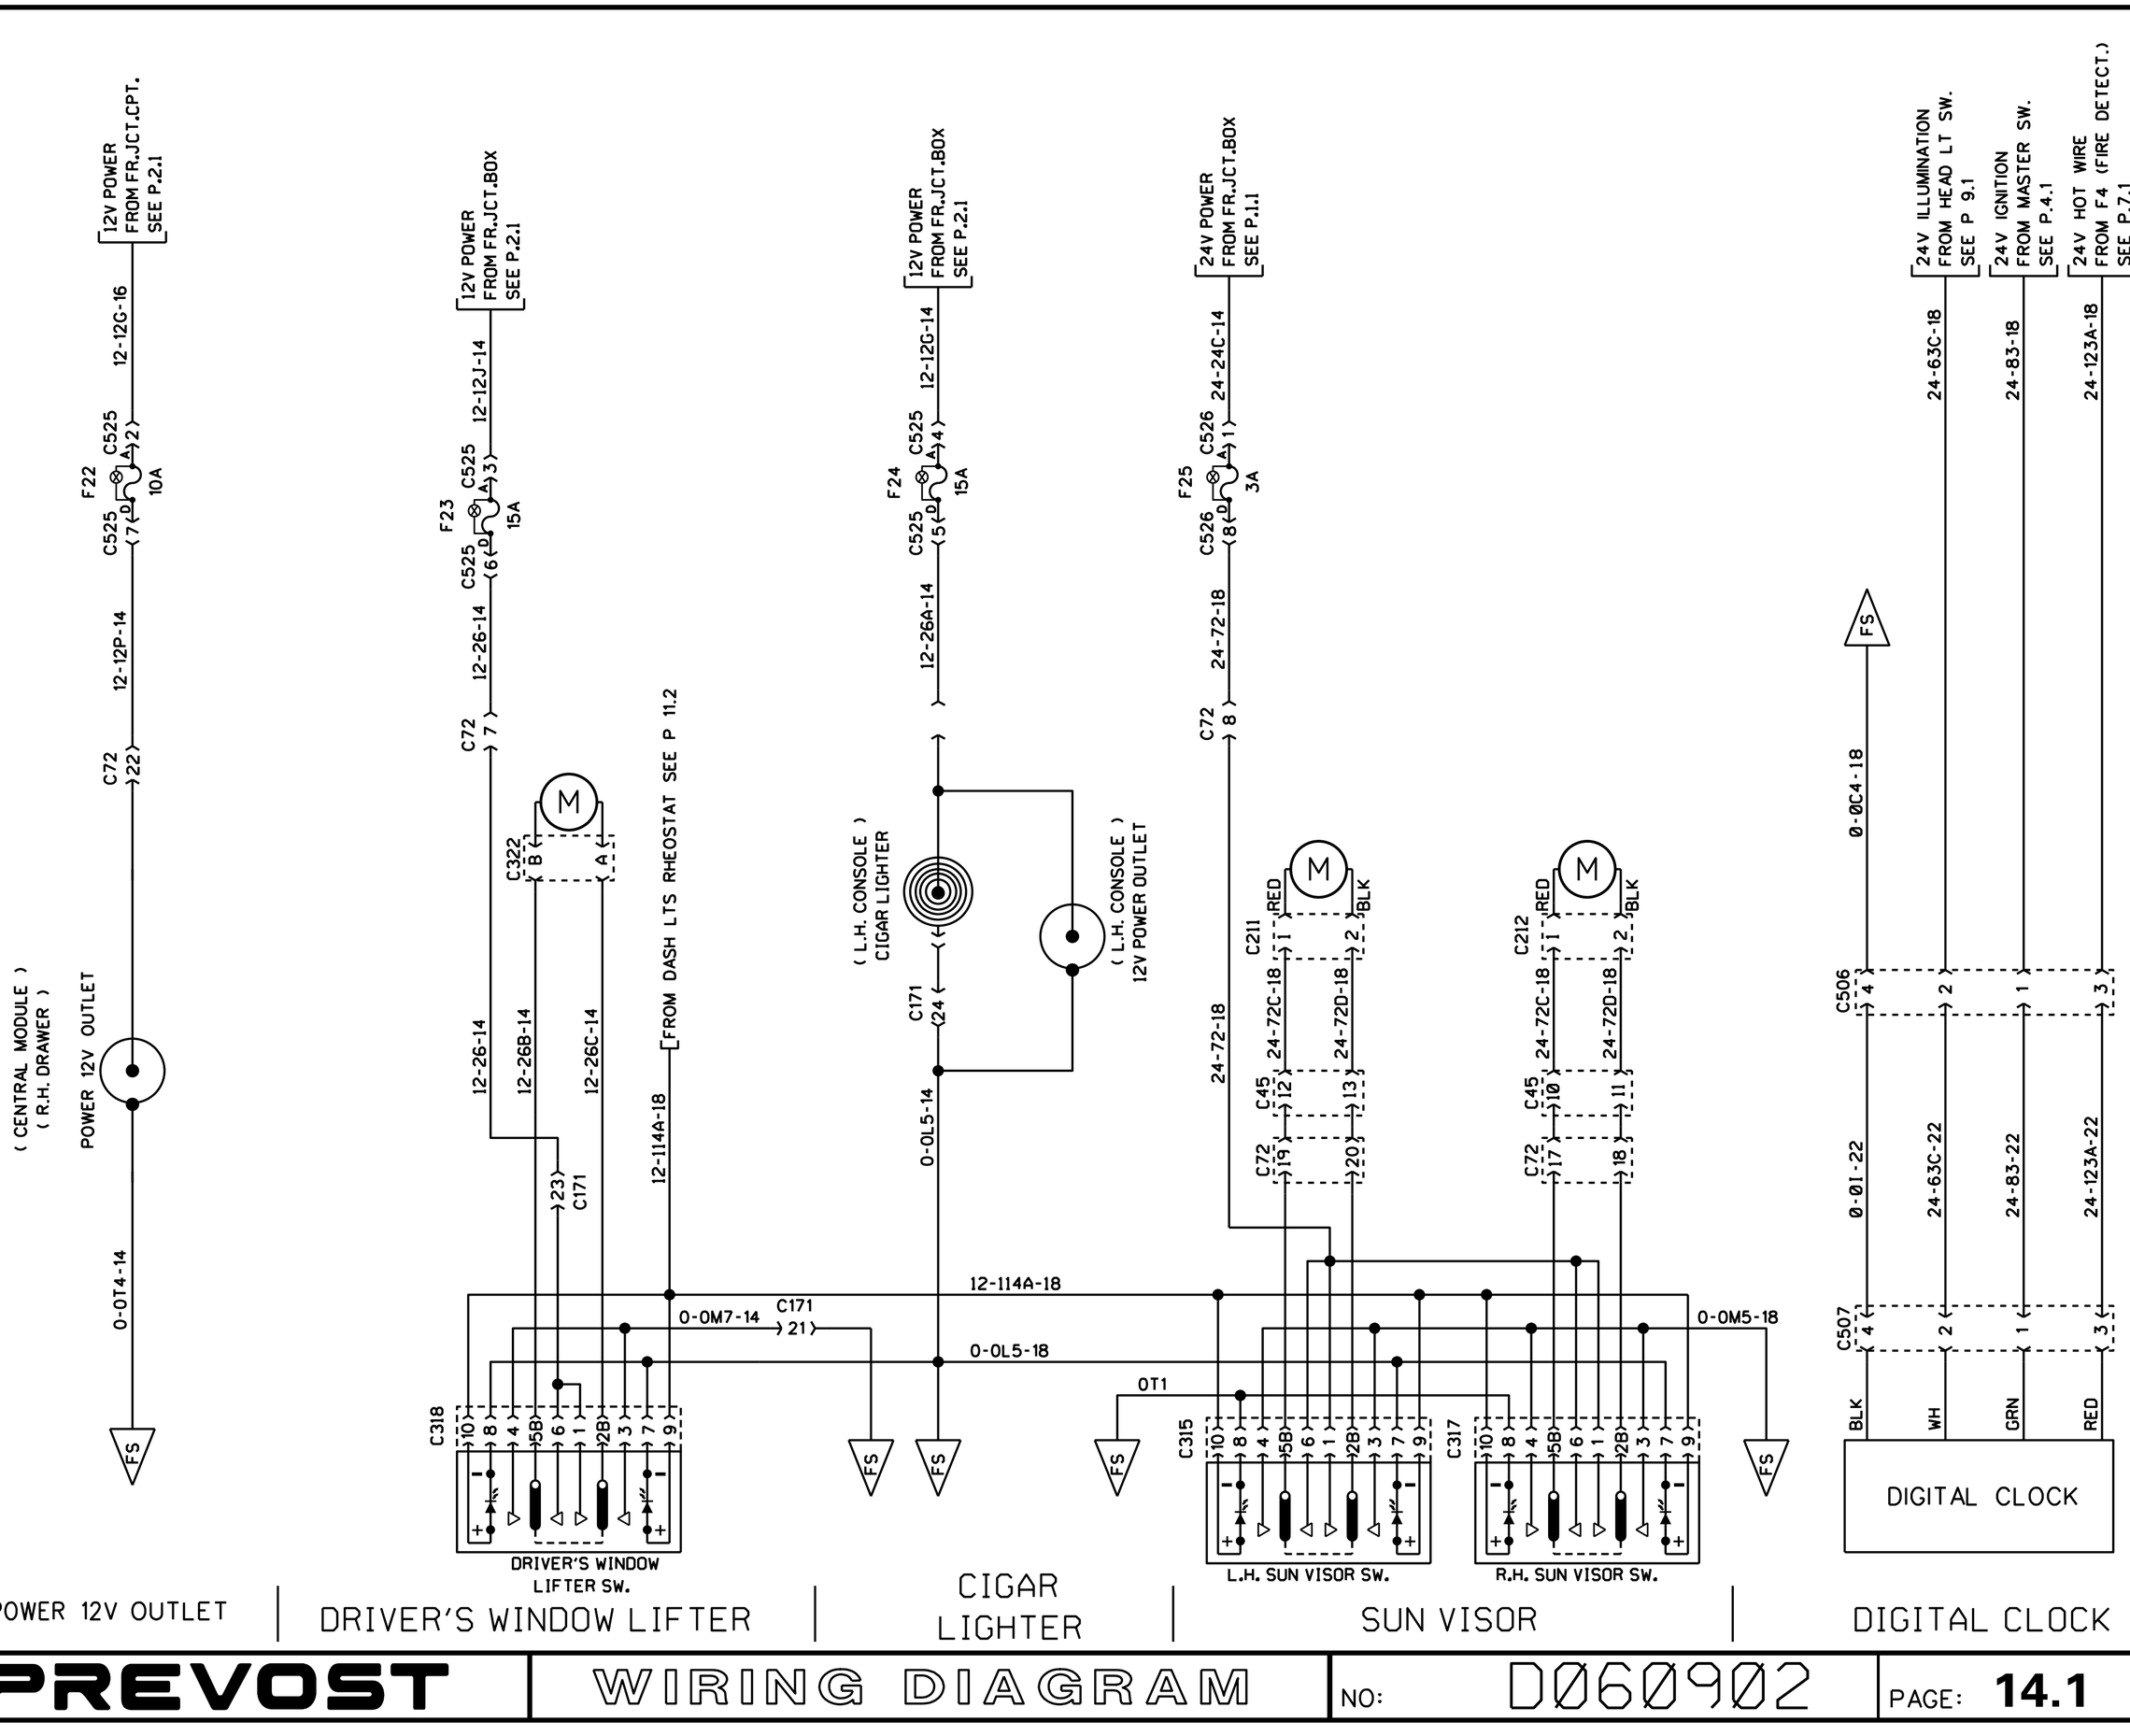
F22
F23
F24
F25
F26
F27
F28
F29
F30
F31
F32
F33
F34
F35
F36
F37
F38
F39
F40
F41
F42
F43
F44
F45
F46
F47
F48
F49
F50
F51
F52
F53
F54
F55
F56
F57
F58
F59
F60
F61
F62

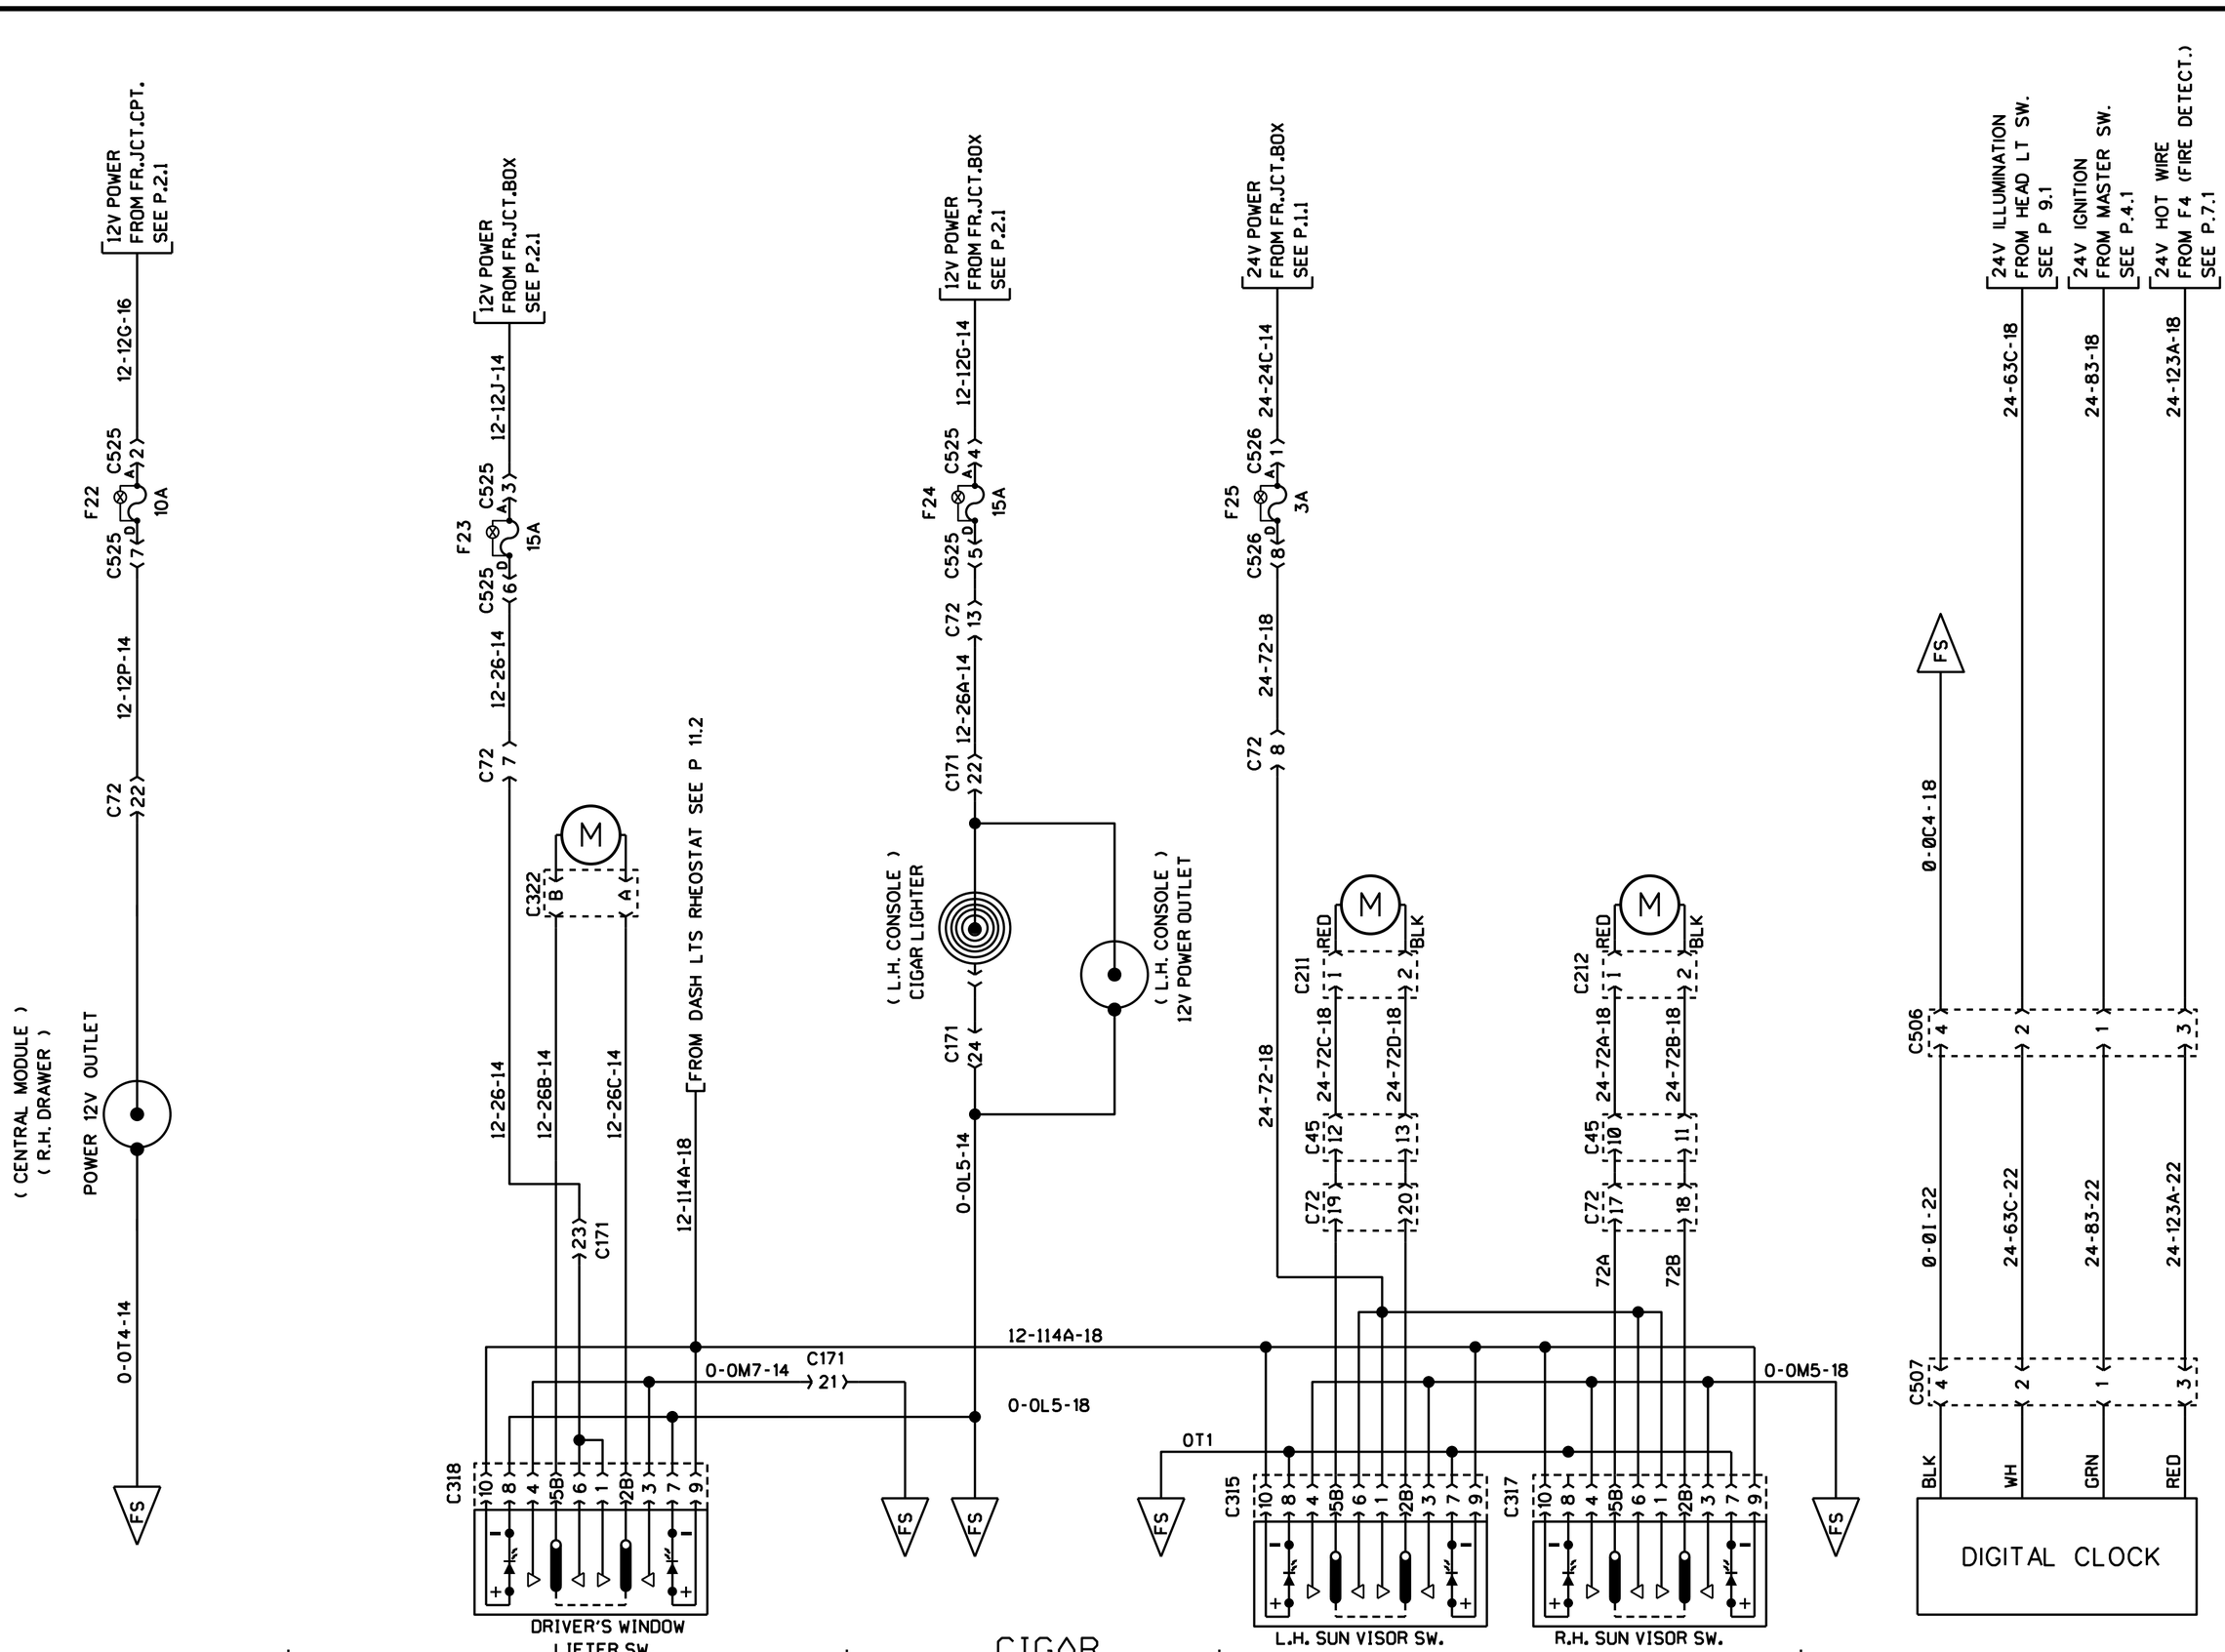

POWER 12V OUTLET | DRIVER'S WINDOW LIFTER | CIGAR LIGHTER | SUN VISOR | DIGITAL CLOCK


TO WATER HEATER TIMER
SEE P. 26
C71
28
24-127-16
C526
7
F26
D
A
5A
C526
2
24-24D-16
24V H.W. POWER
FROM FR.JCT.BOX
SEE P.1.1

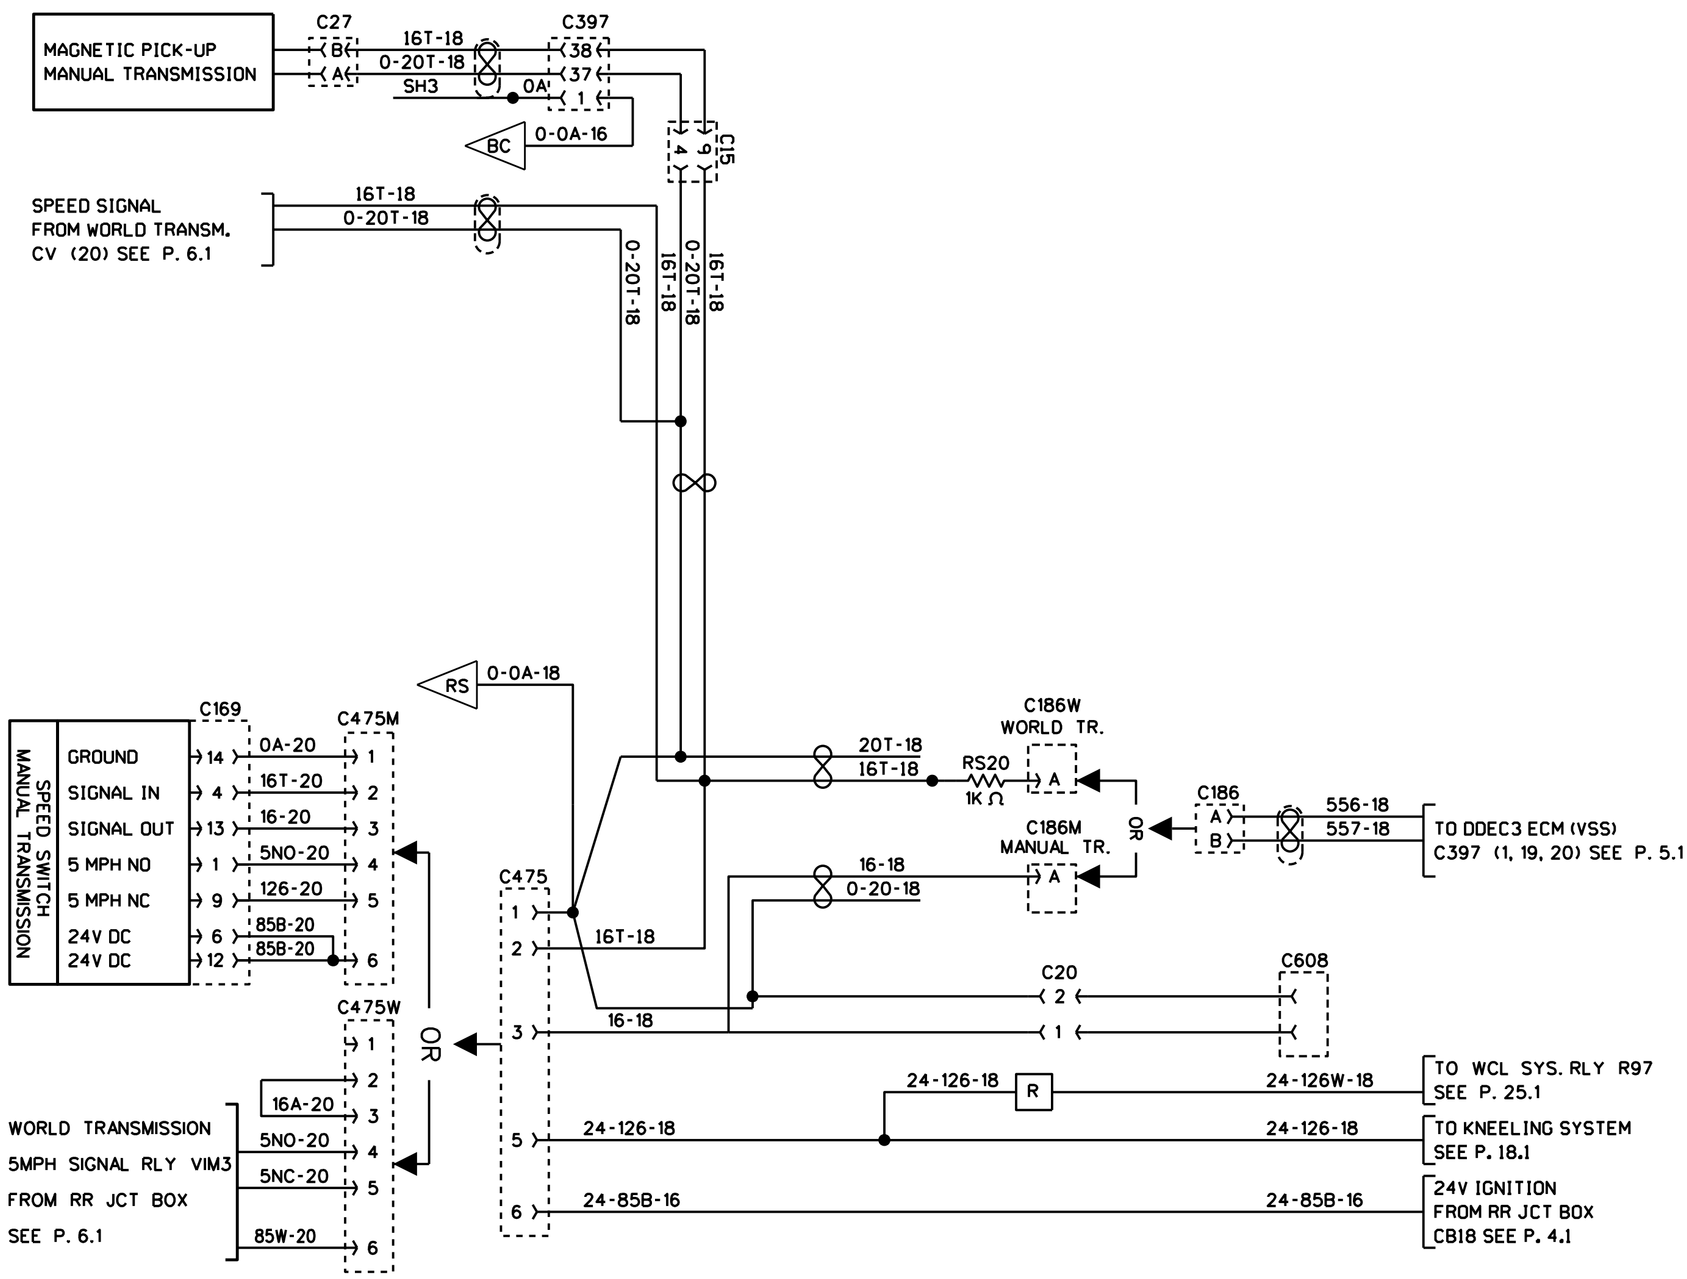
MAGNETIC PICK-UP
MANUAL TRANSMISSION
C27
B
A
16T-18
0-20T-18
SH3
0A
C397
38
37
1
BC
0-0A-16
C15
9
4
SPEED SIGNAL
FROM WORLD TRANSM.
CV (20) SEE P. 6.1
16T-18
0-20T-18
0-20T-18
16T-18
0-20T-18
16T-18
RS
0-0A-18
C169
SPEED SWITCH
MANUAL TRANSMISSION
GROUND
SIGNAL IN
SIGNAL OUT
5 MPH NO
5 MPH NC
24V DC
24V DC
14
4
13
1
9
6
12
0A-20
16T-20
16-20
5NO-20
126-20
85B-20
85B-20
C475M
1
2
3
4
5
6
C475W
1
2
3
4
5
6
OR
16A-20
WORLD TRANSMISSION
5MPH SIGNAL RLY VIM3
FROM RR JCT BOX
SEE P. 6.1
5NO-20
5NC-20
85W-20
C475
1
2
3
5
6
16T-18
16-18
16-18
0-20-18
20T-18
16T-18
C186W
WORLD TR.
A
RS20
1K Ω
C186M
MANUAL TR.
A
OR
C186
A
B
556-18
557-18
TO DDEC3 ECM (VSS)
C397 (1, 19, 20) SEE P. 5.1
C20
2
1
C608
24-126-18
R
24-126W-18
TO WCL SYS. RLY R97
SEE P. 25.1
24-126-18
24-126-18
TO KNEELING SYSTEM
SEE P. 18.1
24-85B-16
24-85B-16
24V IGNITION
FROM RR JCT BOX
CB18 SEE P. 4.1

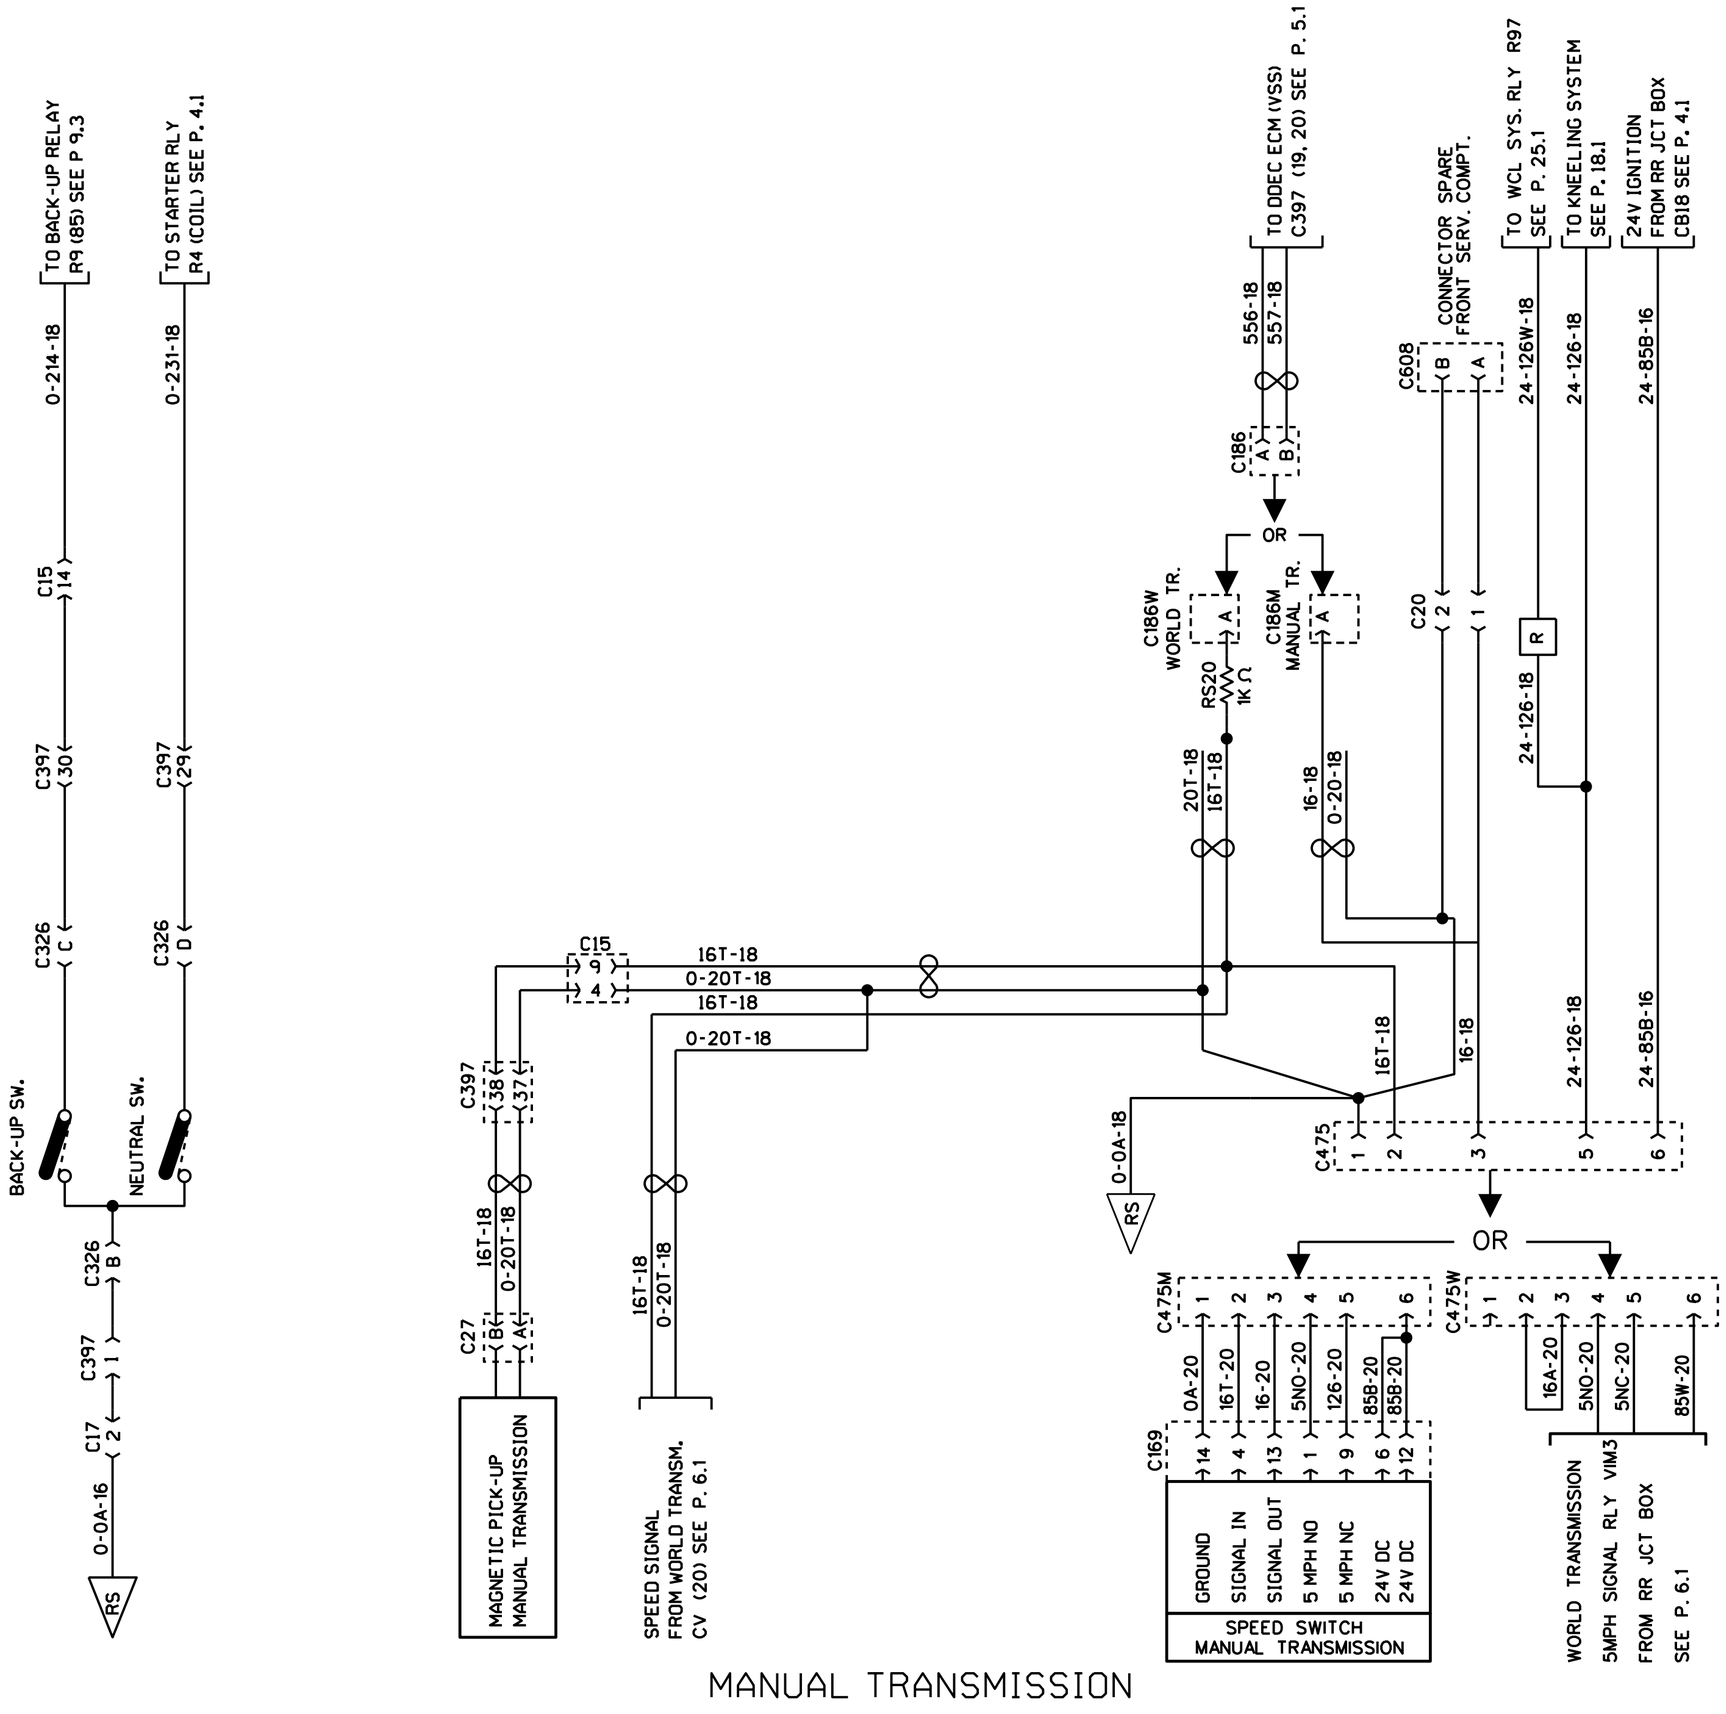

MANUAL TRANSMISSION

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 15.1	REVISION 01

PREVOST

WIRING DIAGRAM

EATON OR MANUAL TRANSMISSION

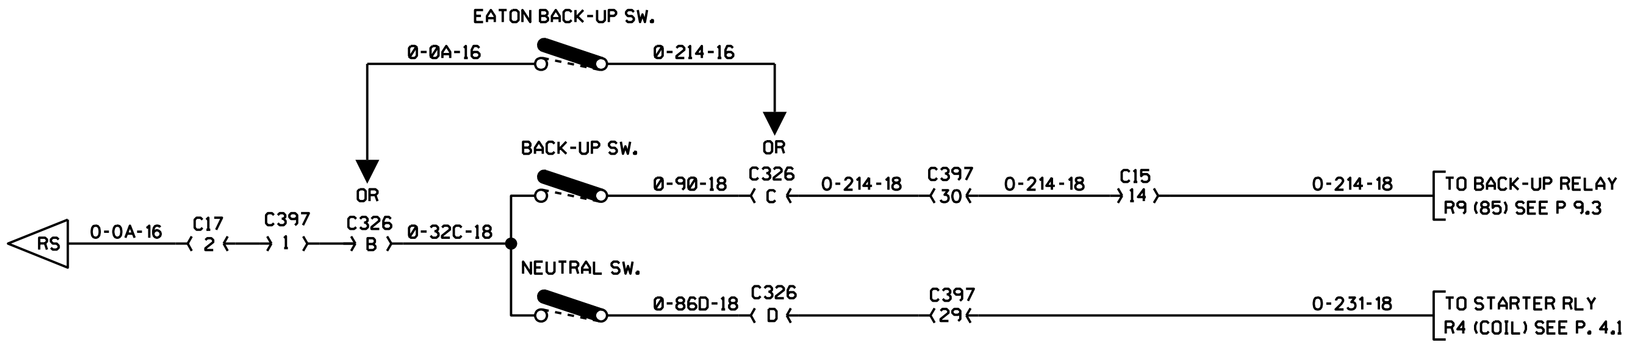

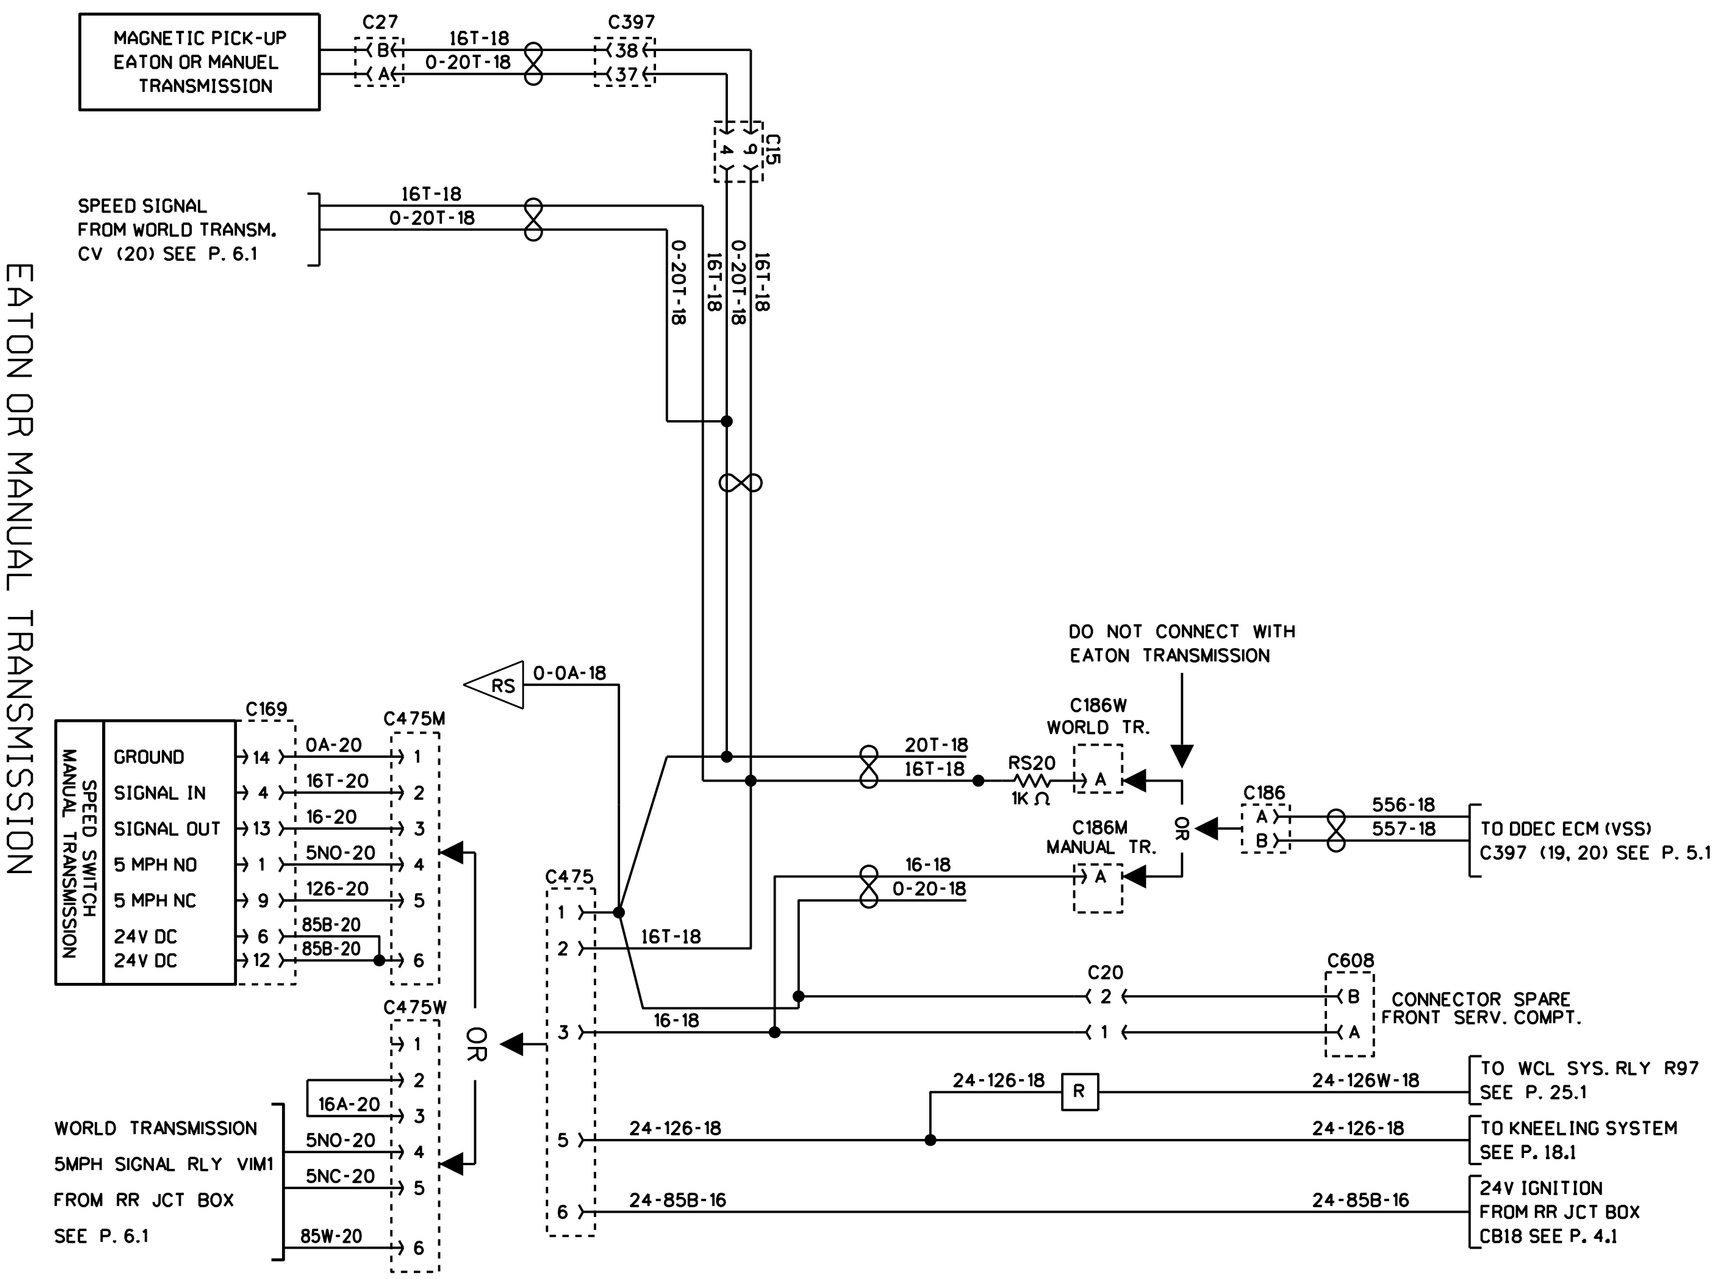

NO: D060902

PAGE: 15.1

REVISION 08

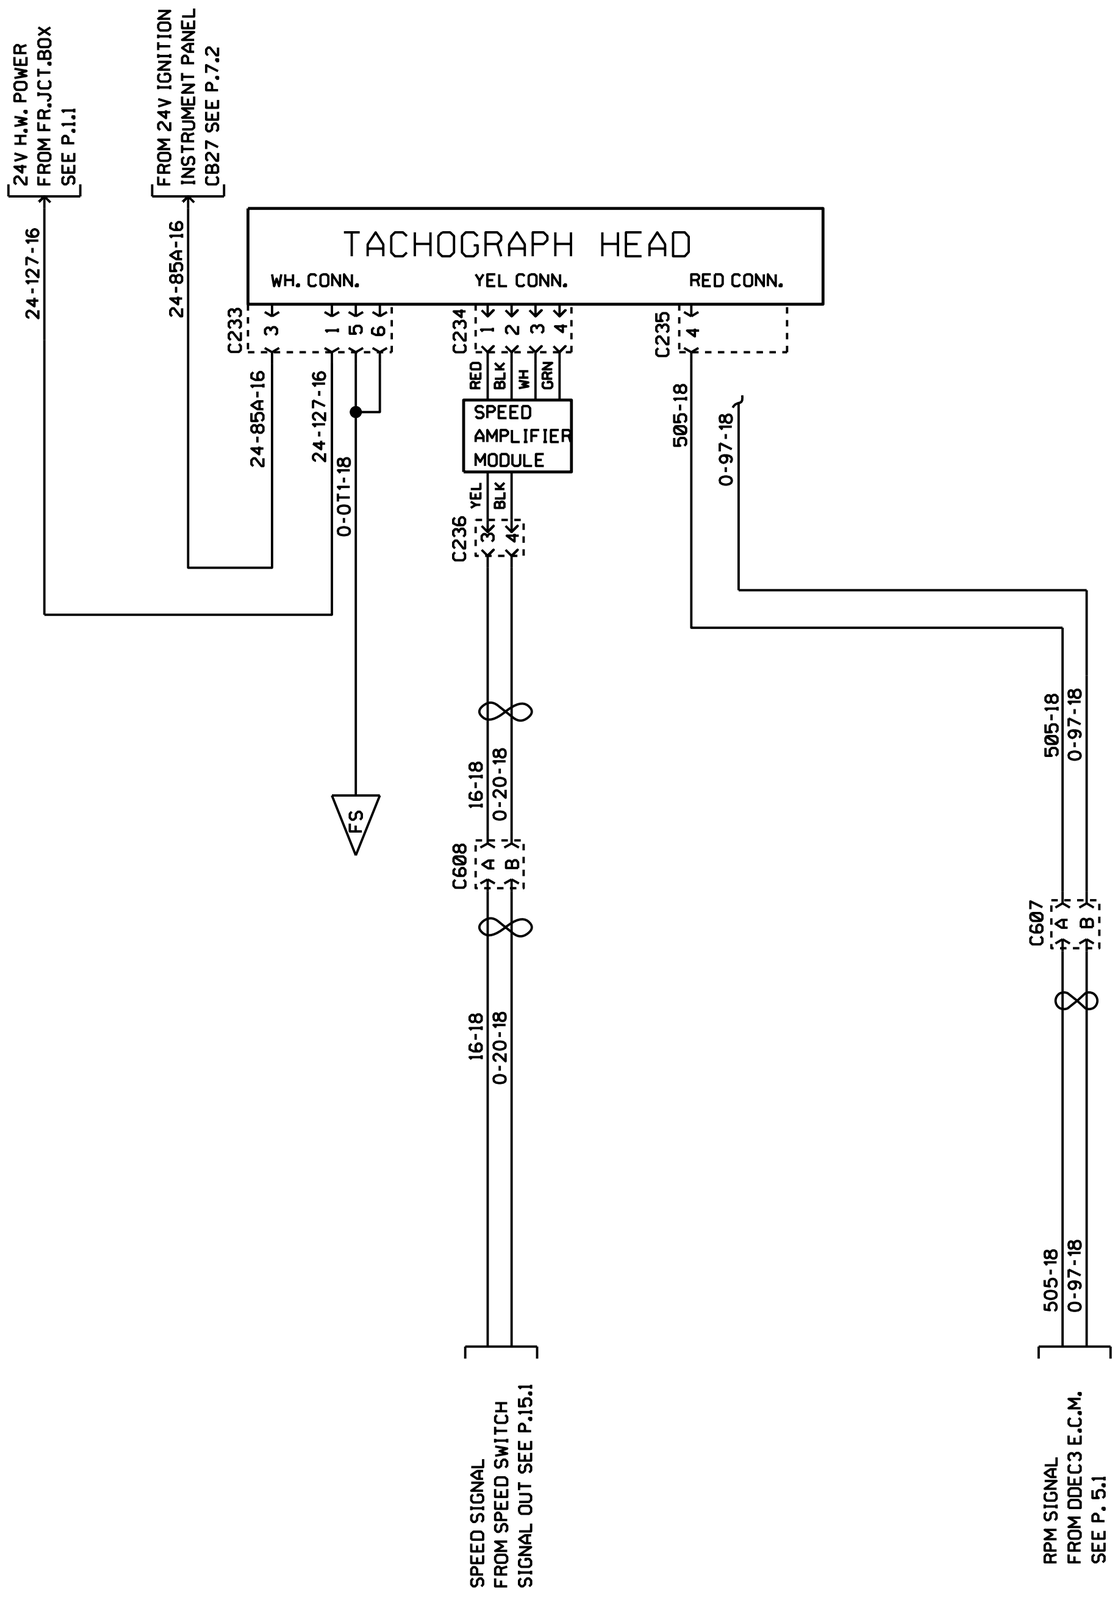

ELECTRONIC TACHOGRAPH

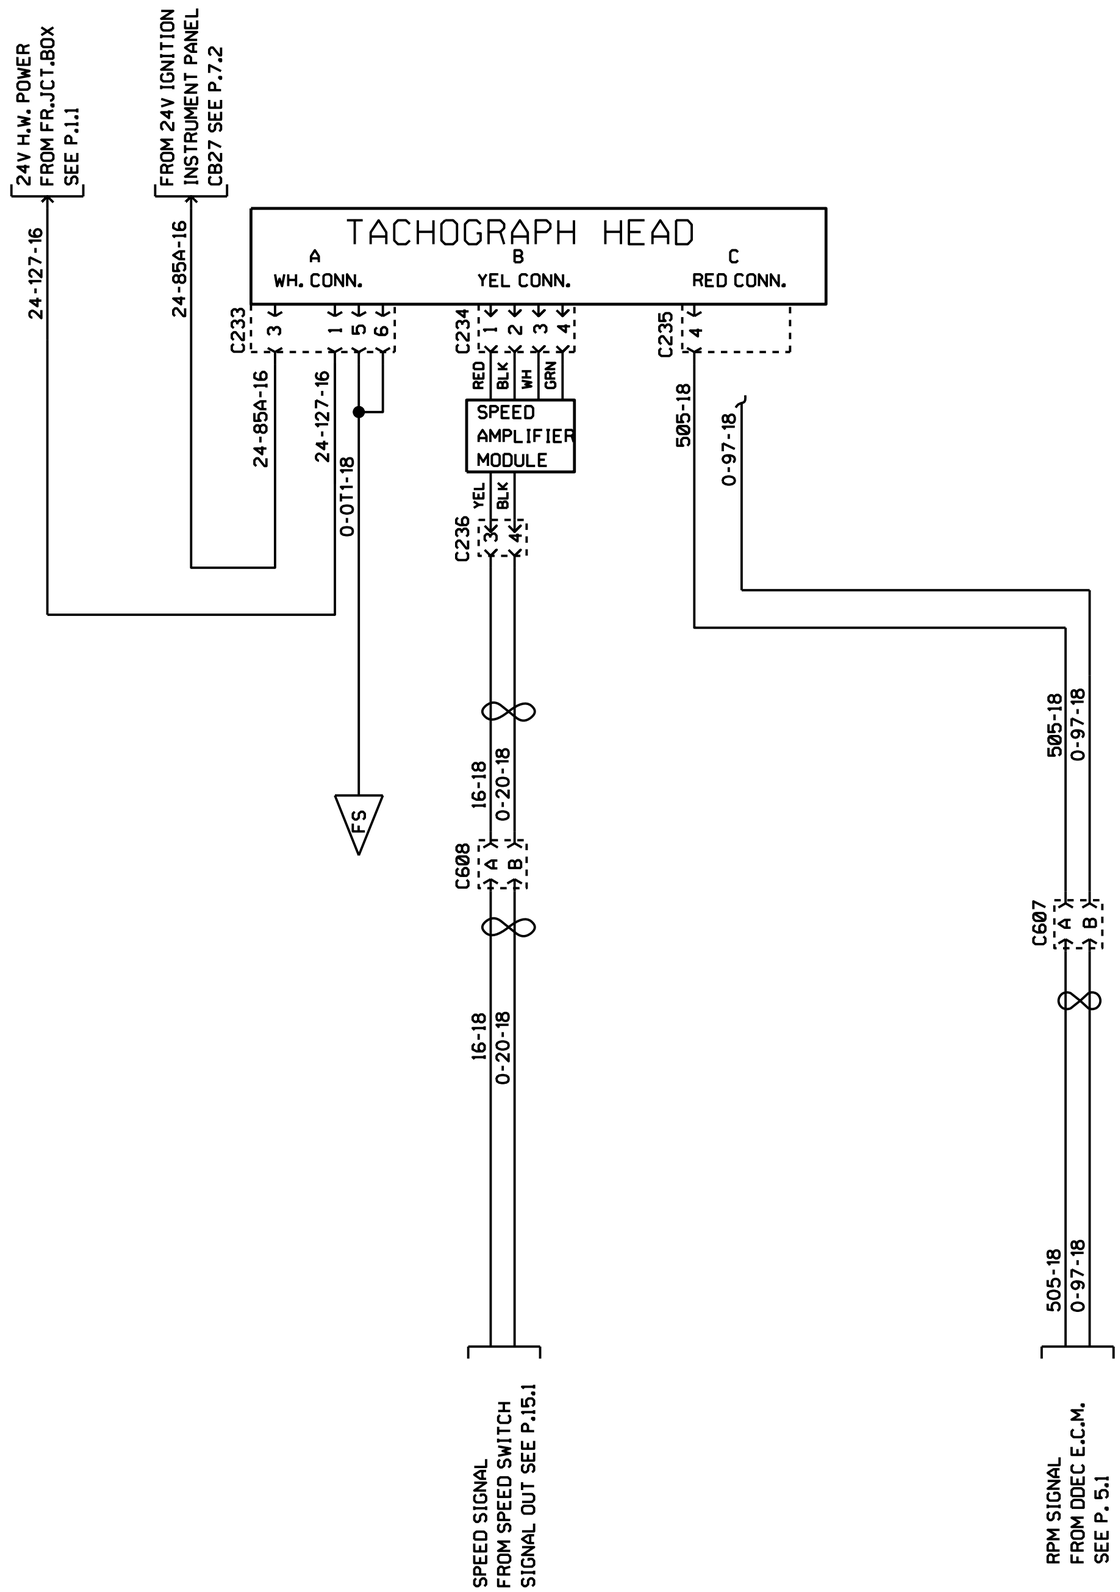

ELECTRONIC TACHOGRAPH

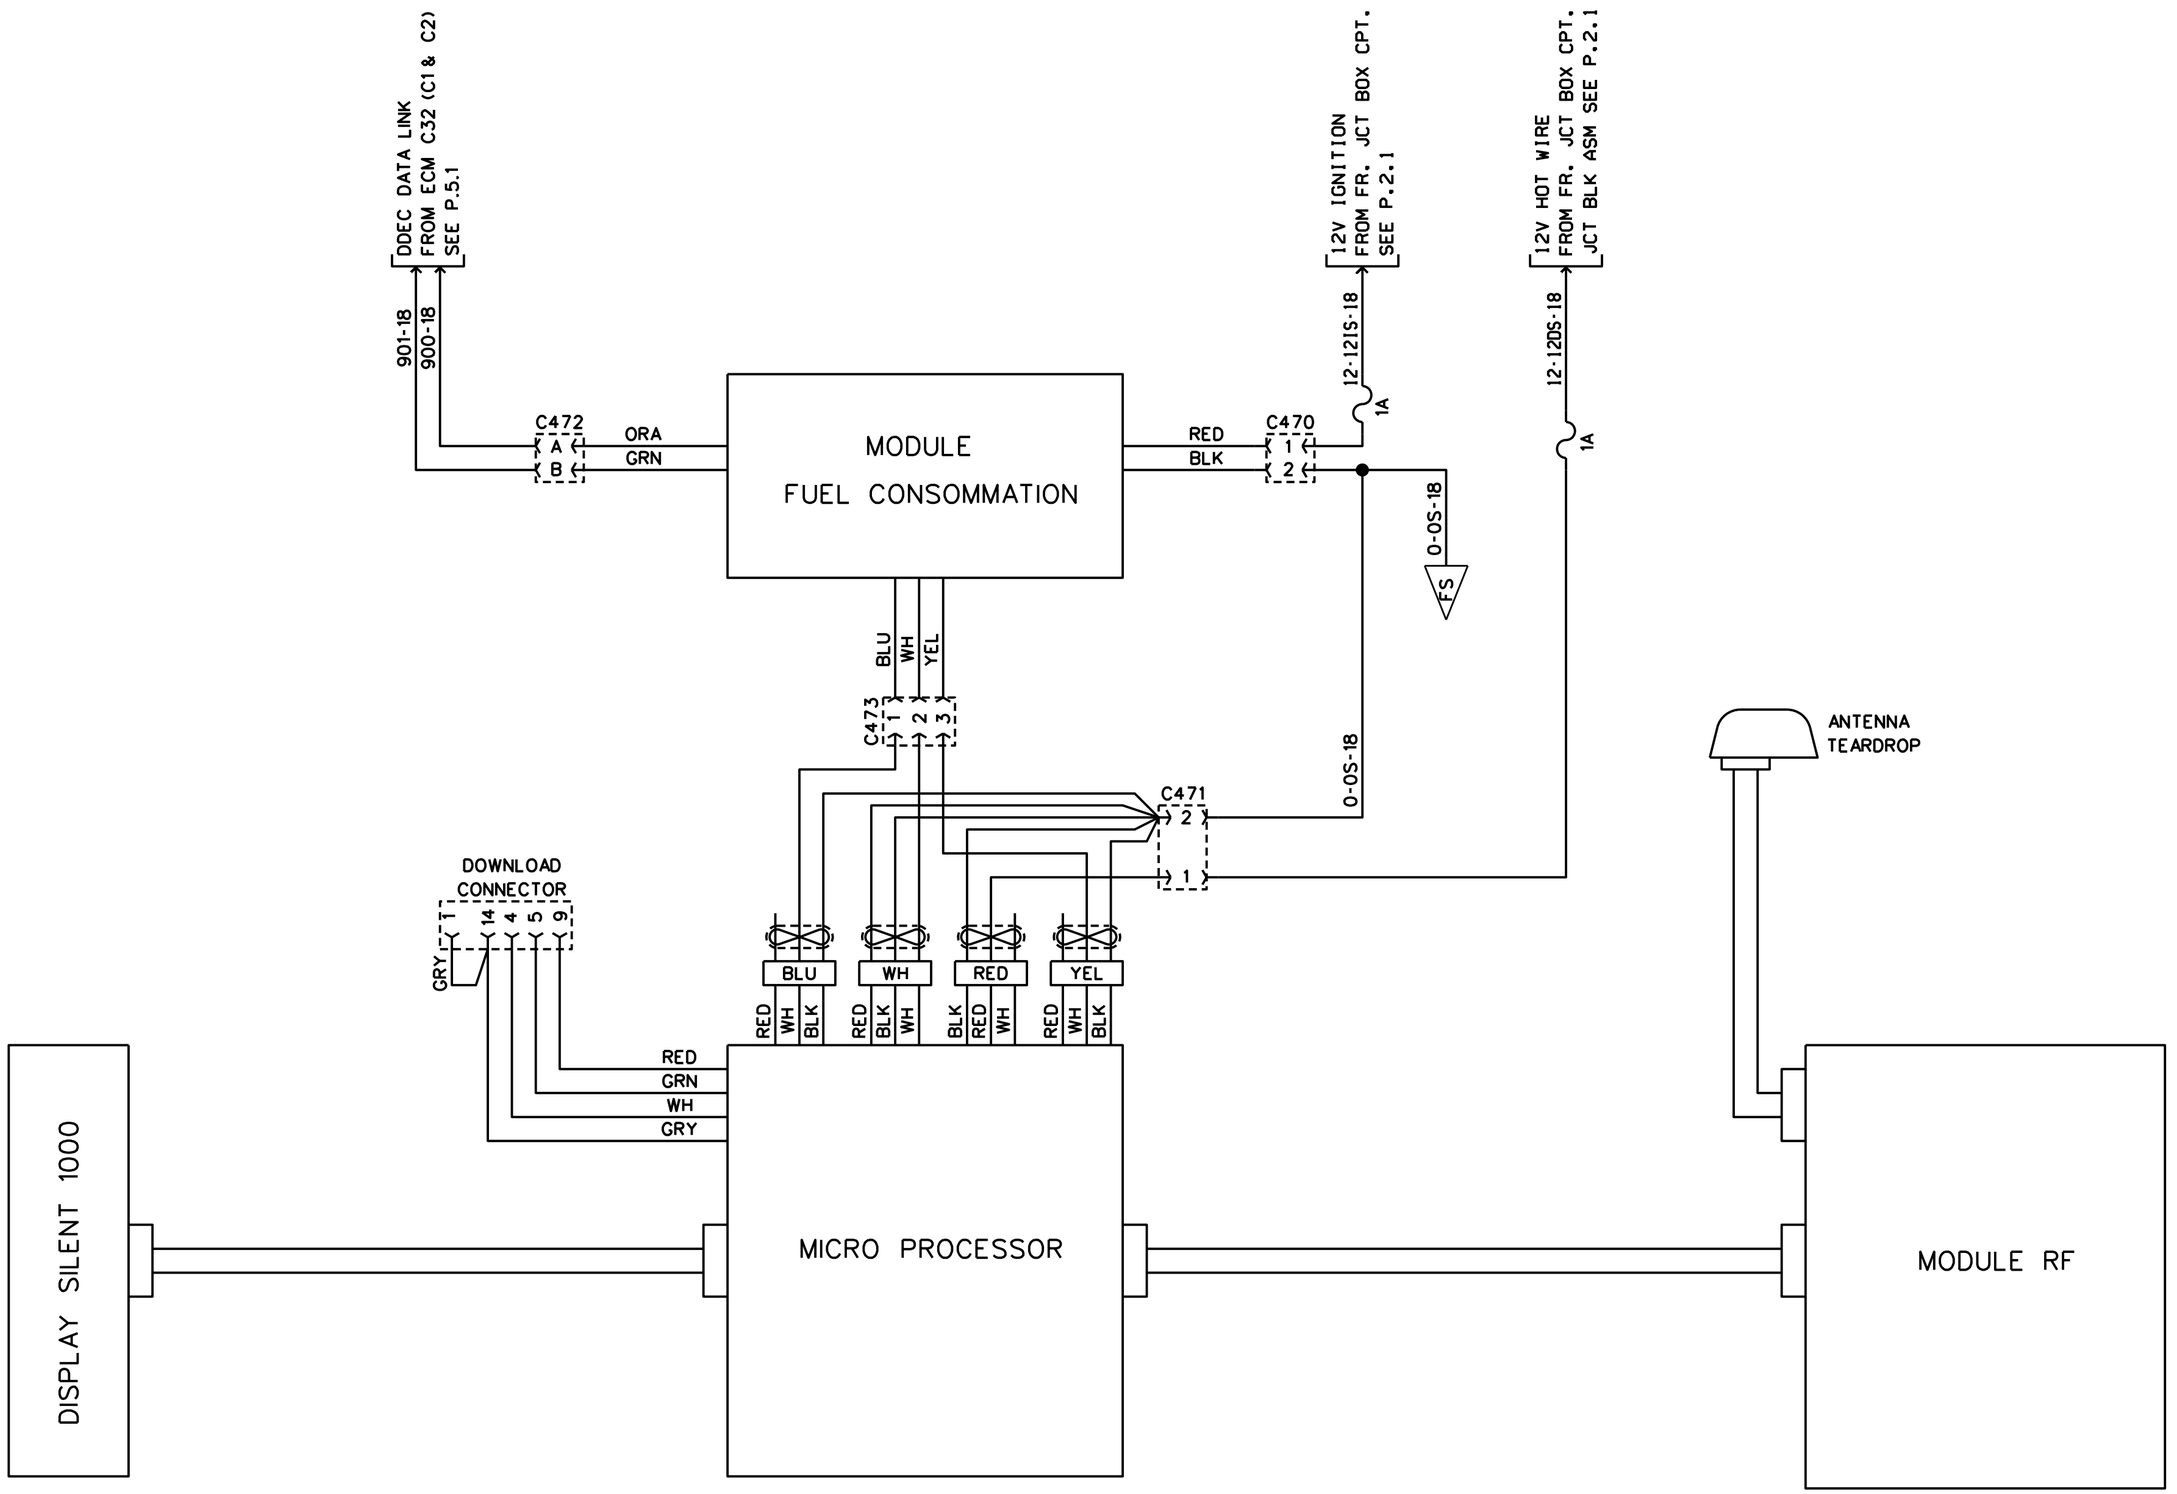
DDEC DATA LINK
FROM ECM C32 (C1 & C2)
SEE P.5.1
901-18
900-18
C472
A
B
ORA
GRN
MODULE
FUEL CONSOMMATION
RED
BLK
C470
1
2
12V IGNITION
FROM FR. JCT BOX CPT.
SEE P.2.1
12-12IS-18
1A
12V HOT WIRE
FROM FR. JCT BOX CPT.
JCT BLK ASM SEE P.2.1
12-12DS-18
1A
0-0S-18
FS
BLU
WH
YEL
C473
1
2
3
C471
2
1
0-0S-18
ANTENNA
TEARDROP
DOWNLOAD
CONNECTOR
1
14
4
5
9
GRY
BLU
WH
RED
YEL
RED
WH
BLK
RED
BLK
WH
BLK
RED
WH
RED
WH
BLK
RED
GRN
WH
GRY
DISPLAY SILENT 1000
MICRO PROCESSOR
MODULE RF

SILENT 1000

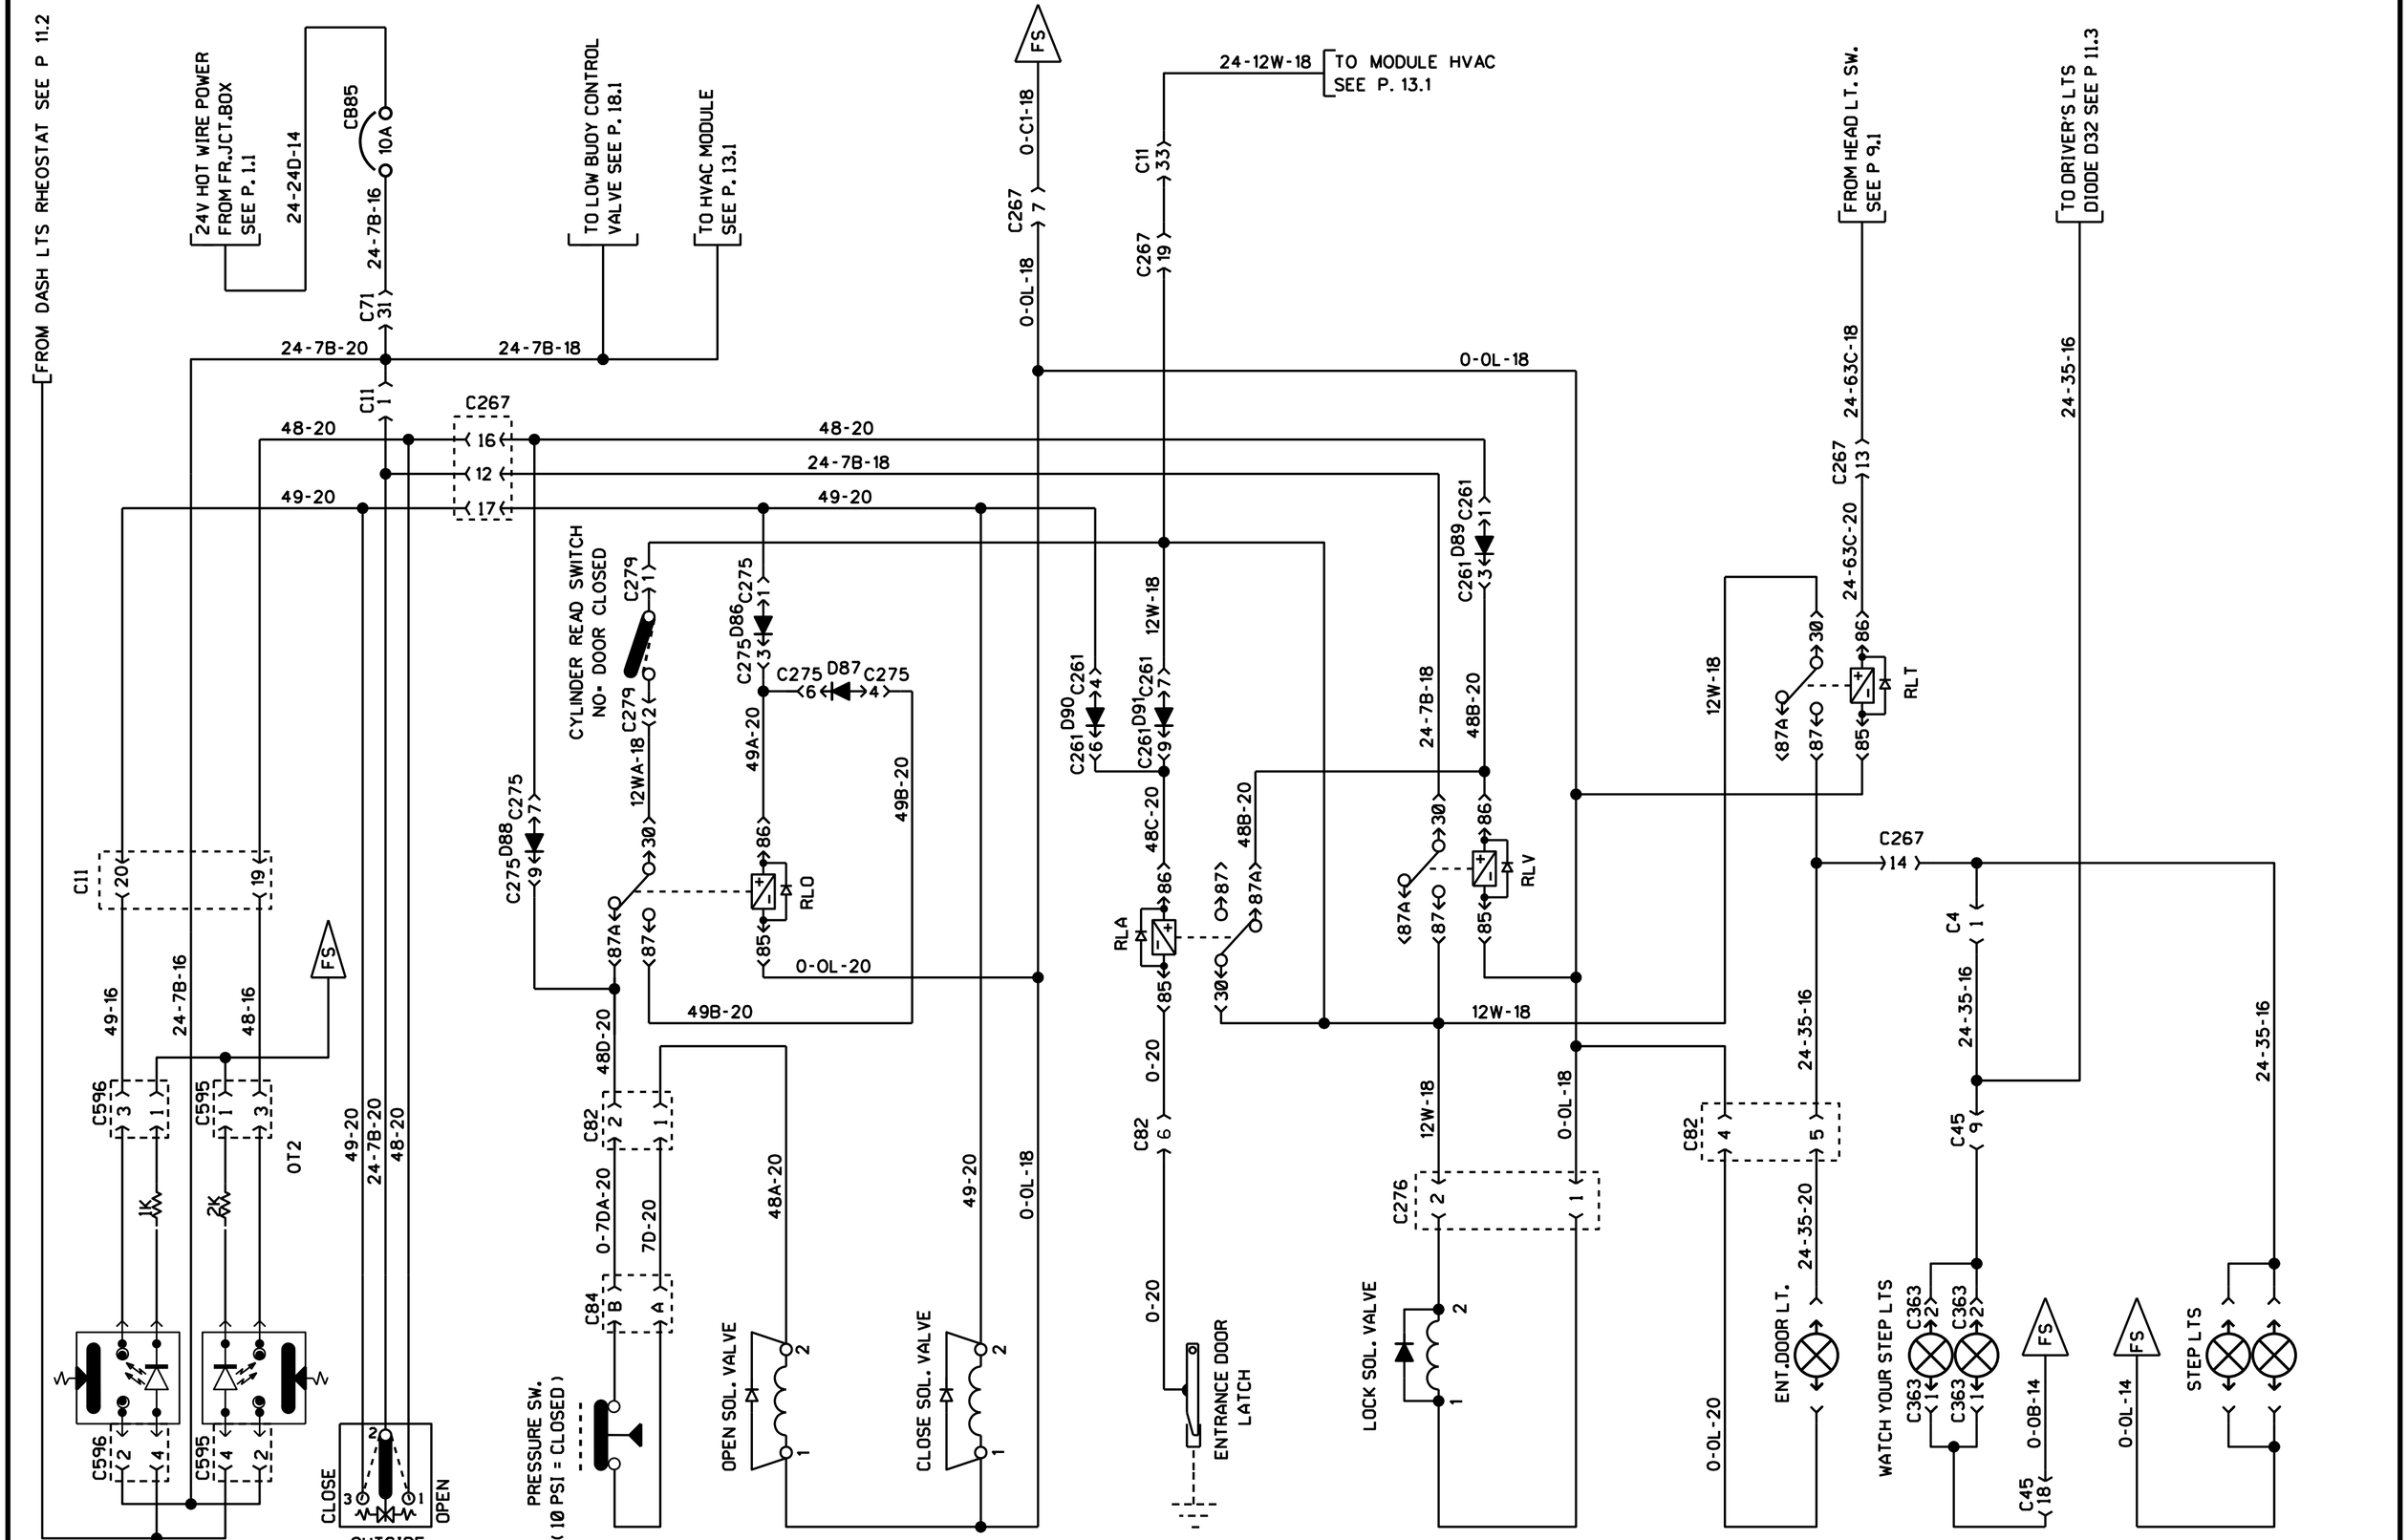

ENTRANCE DOOR (SEDAN)

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 16.1	REVISION 00

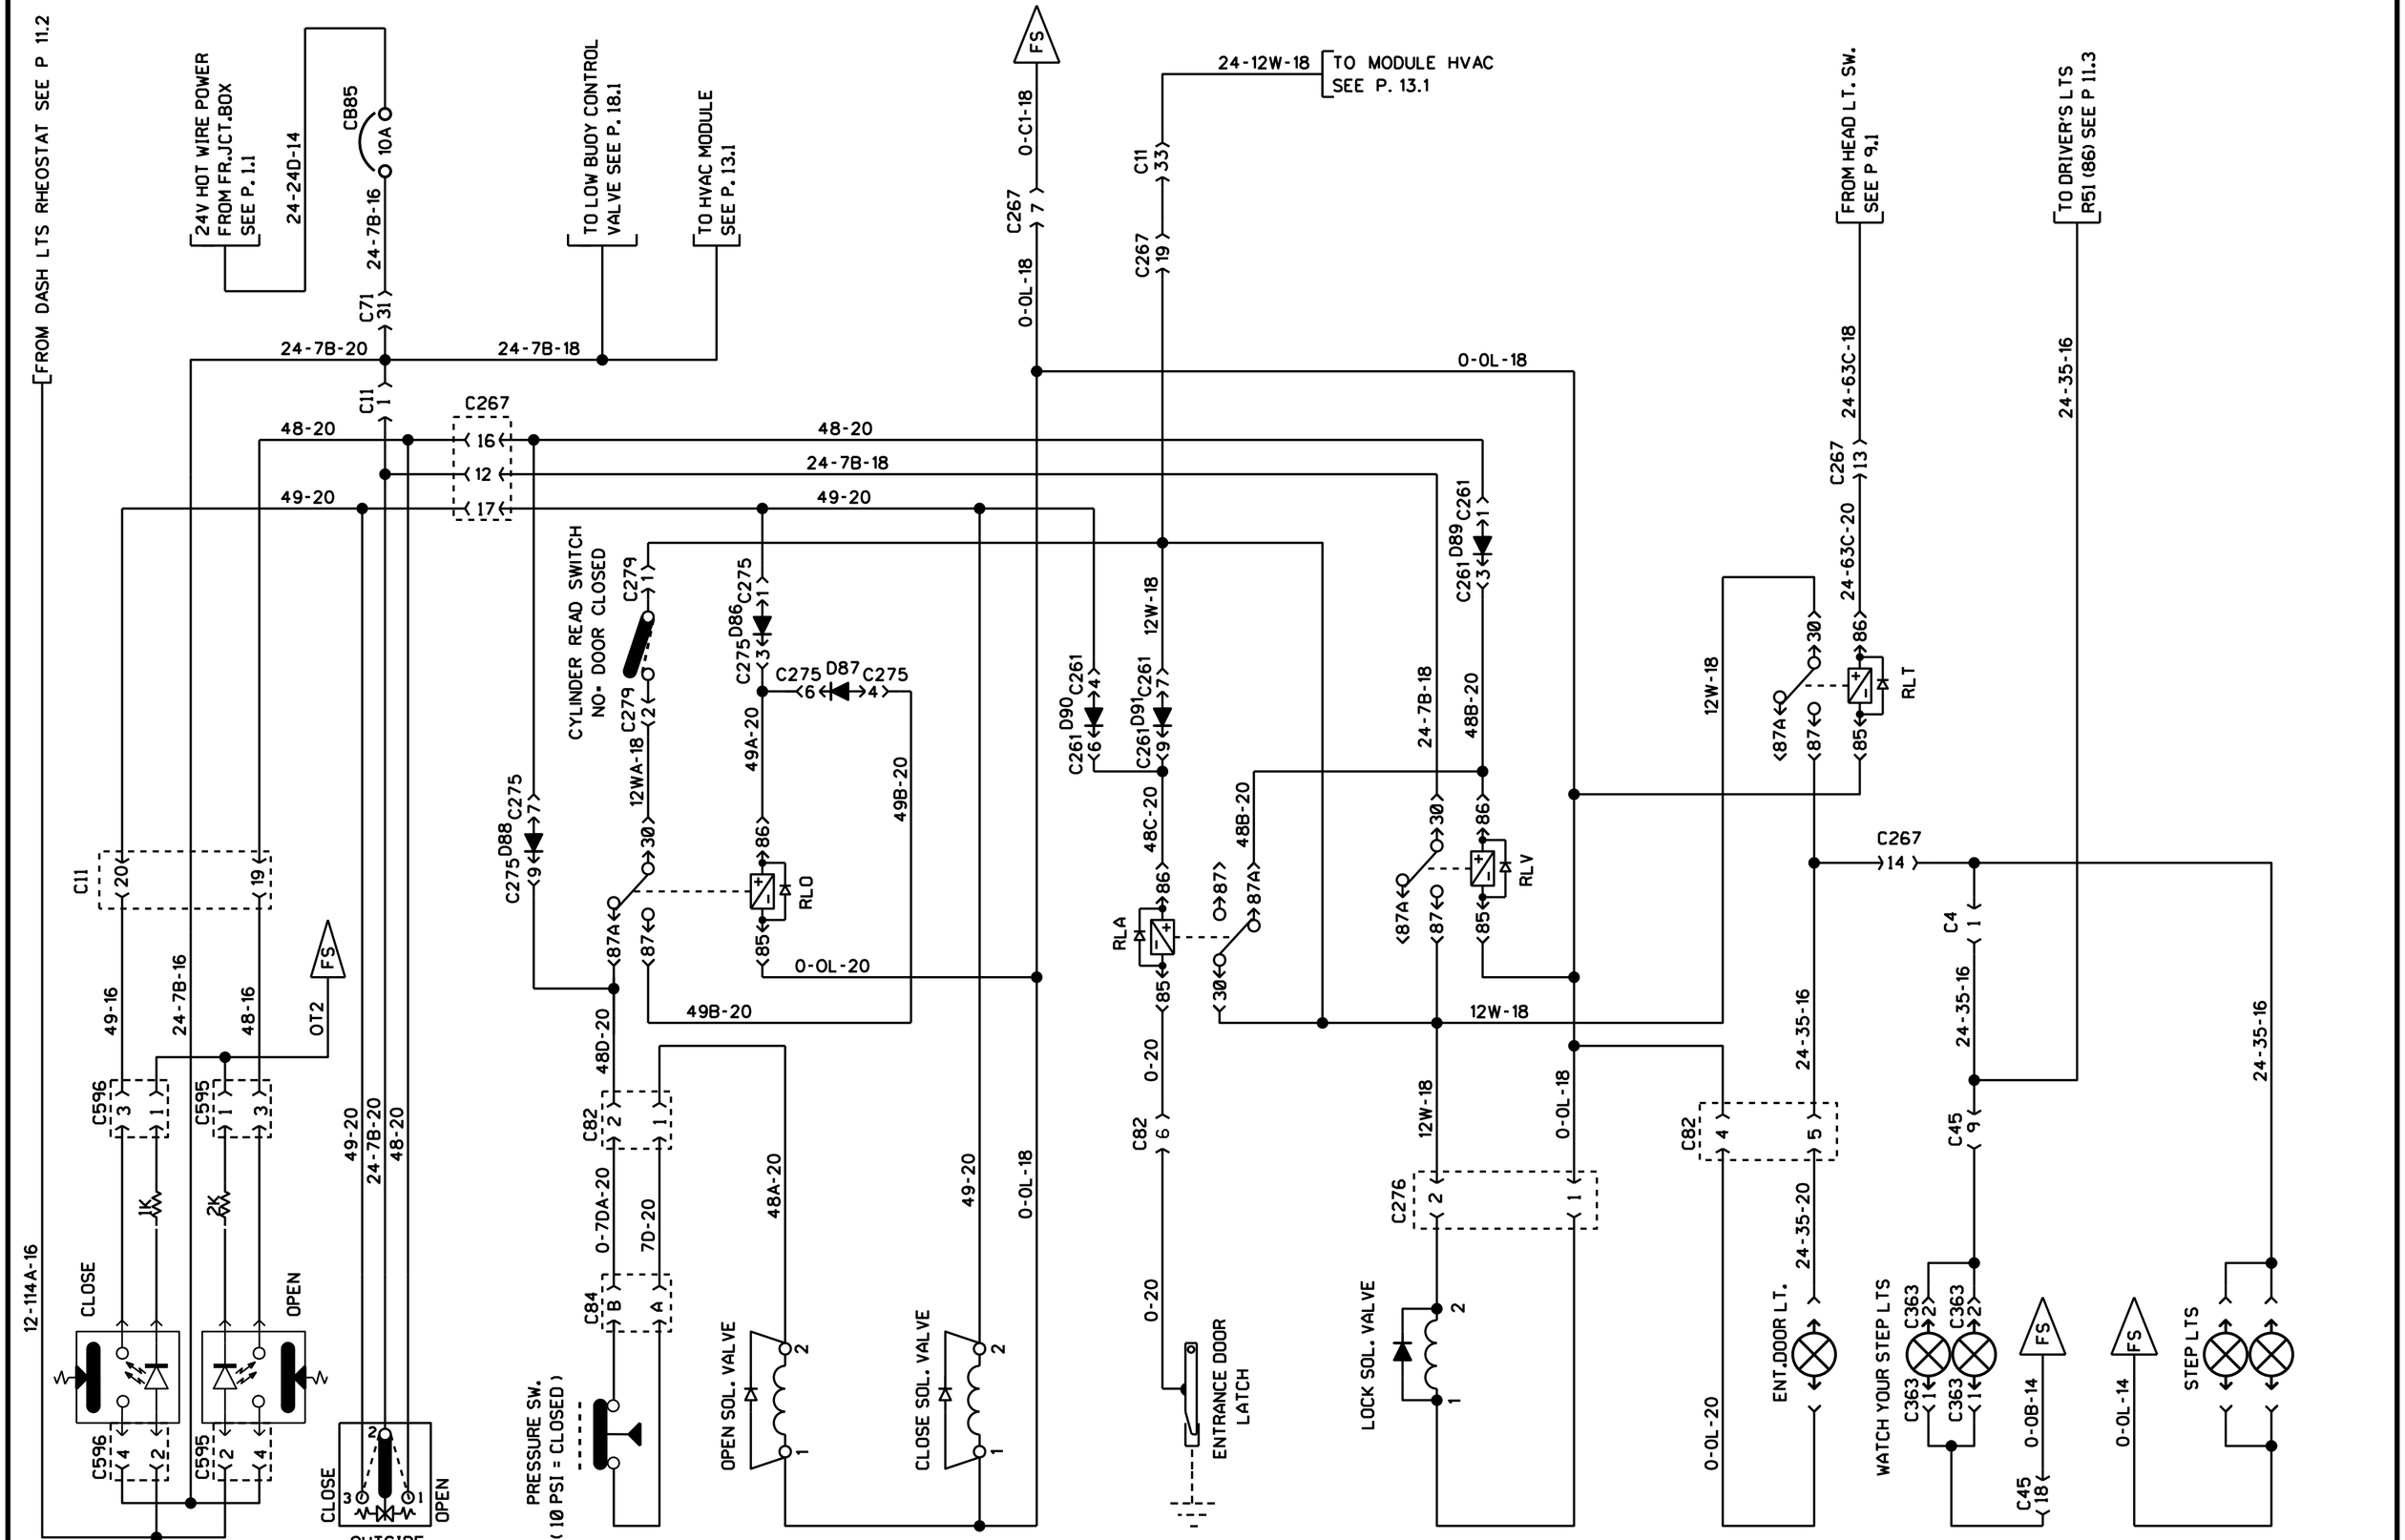

ENTRANCE DOOR (SEDAN)

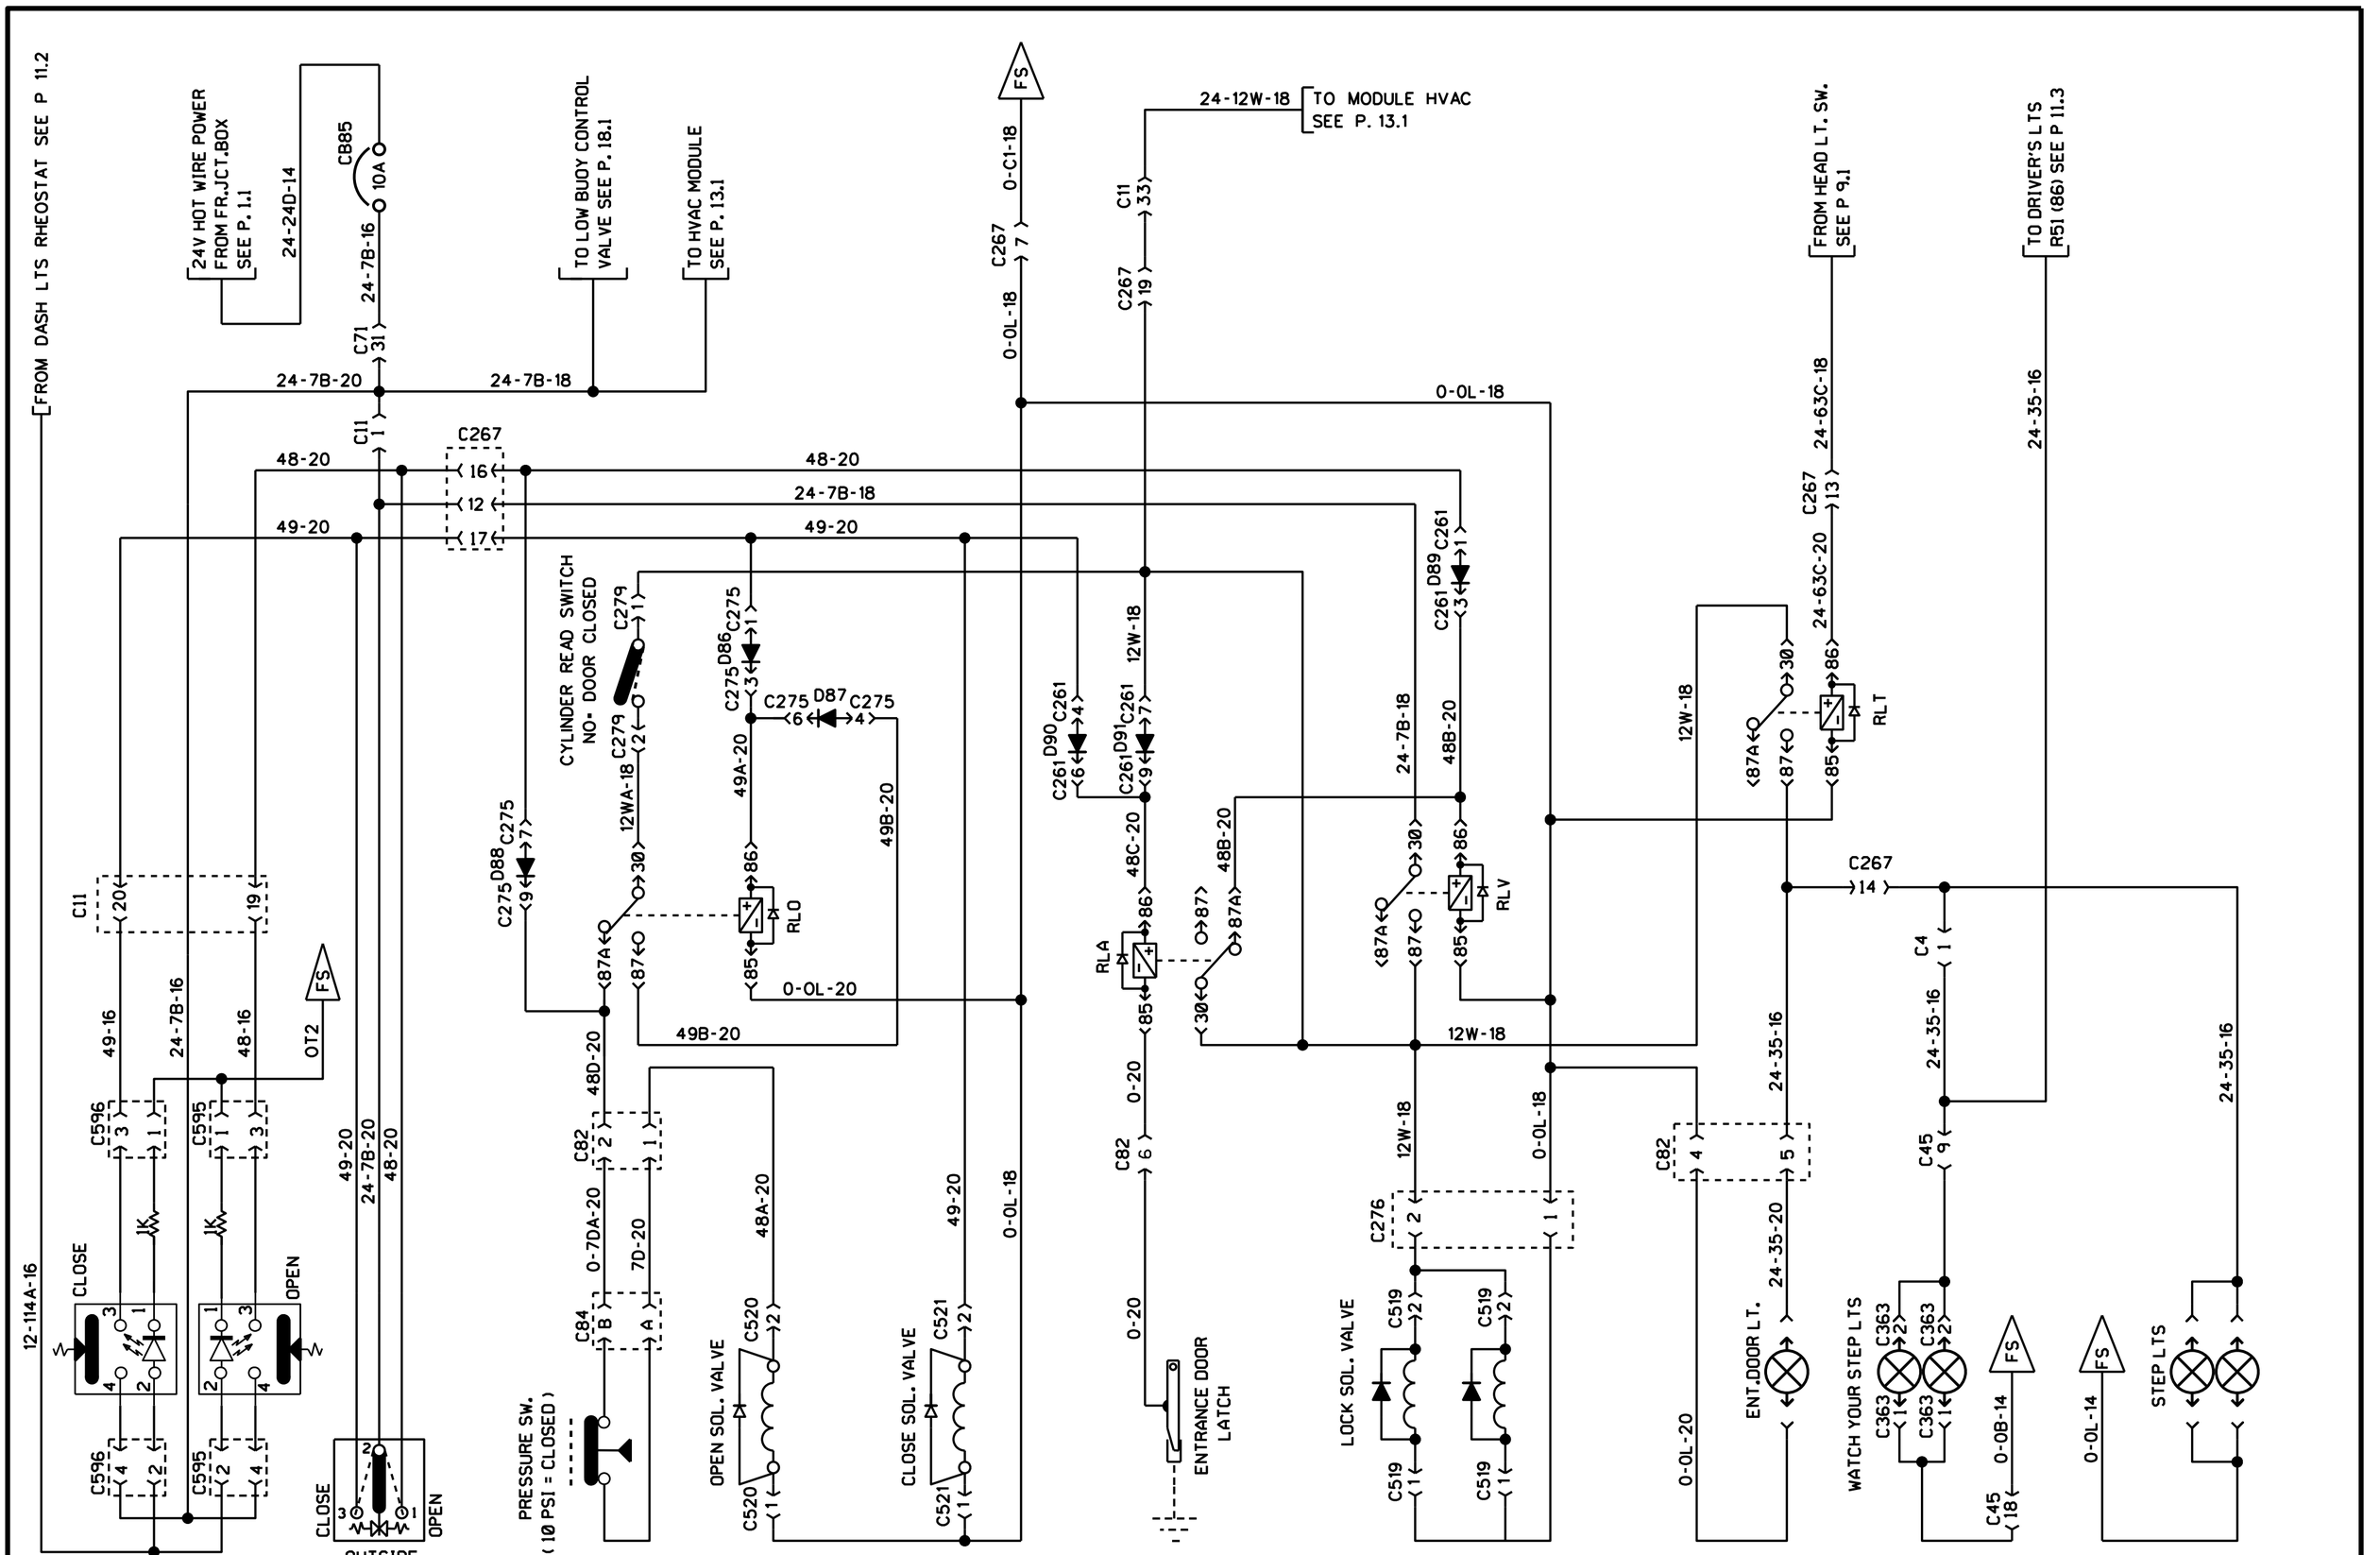

ENTRANCE DOOR (SEDAN)

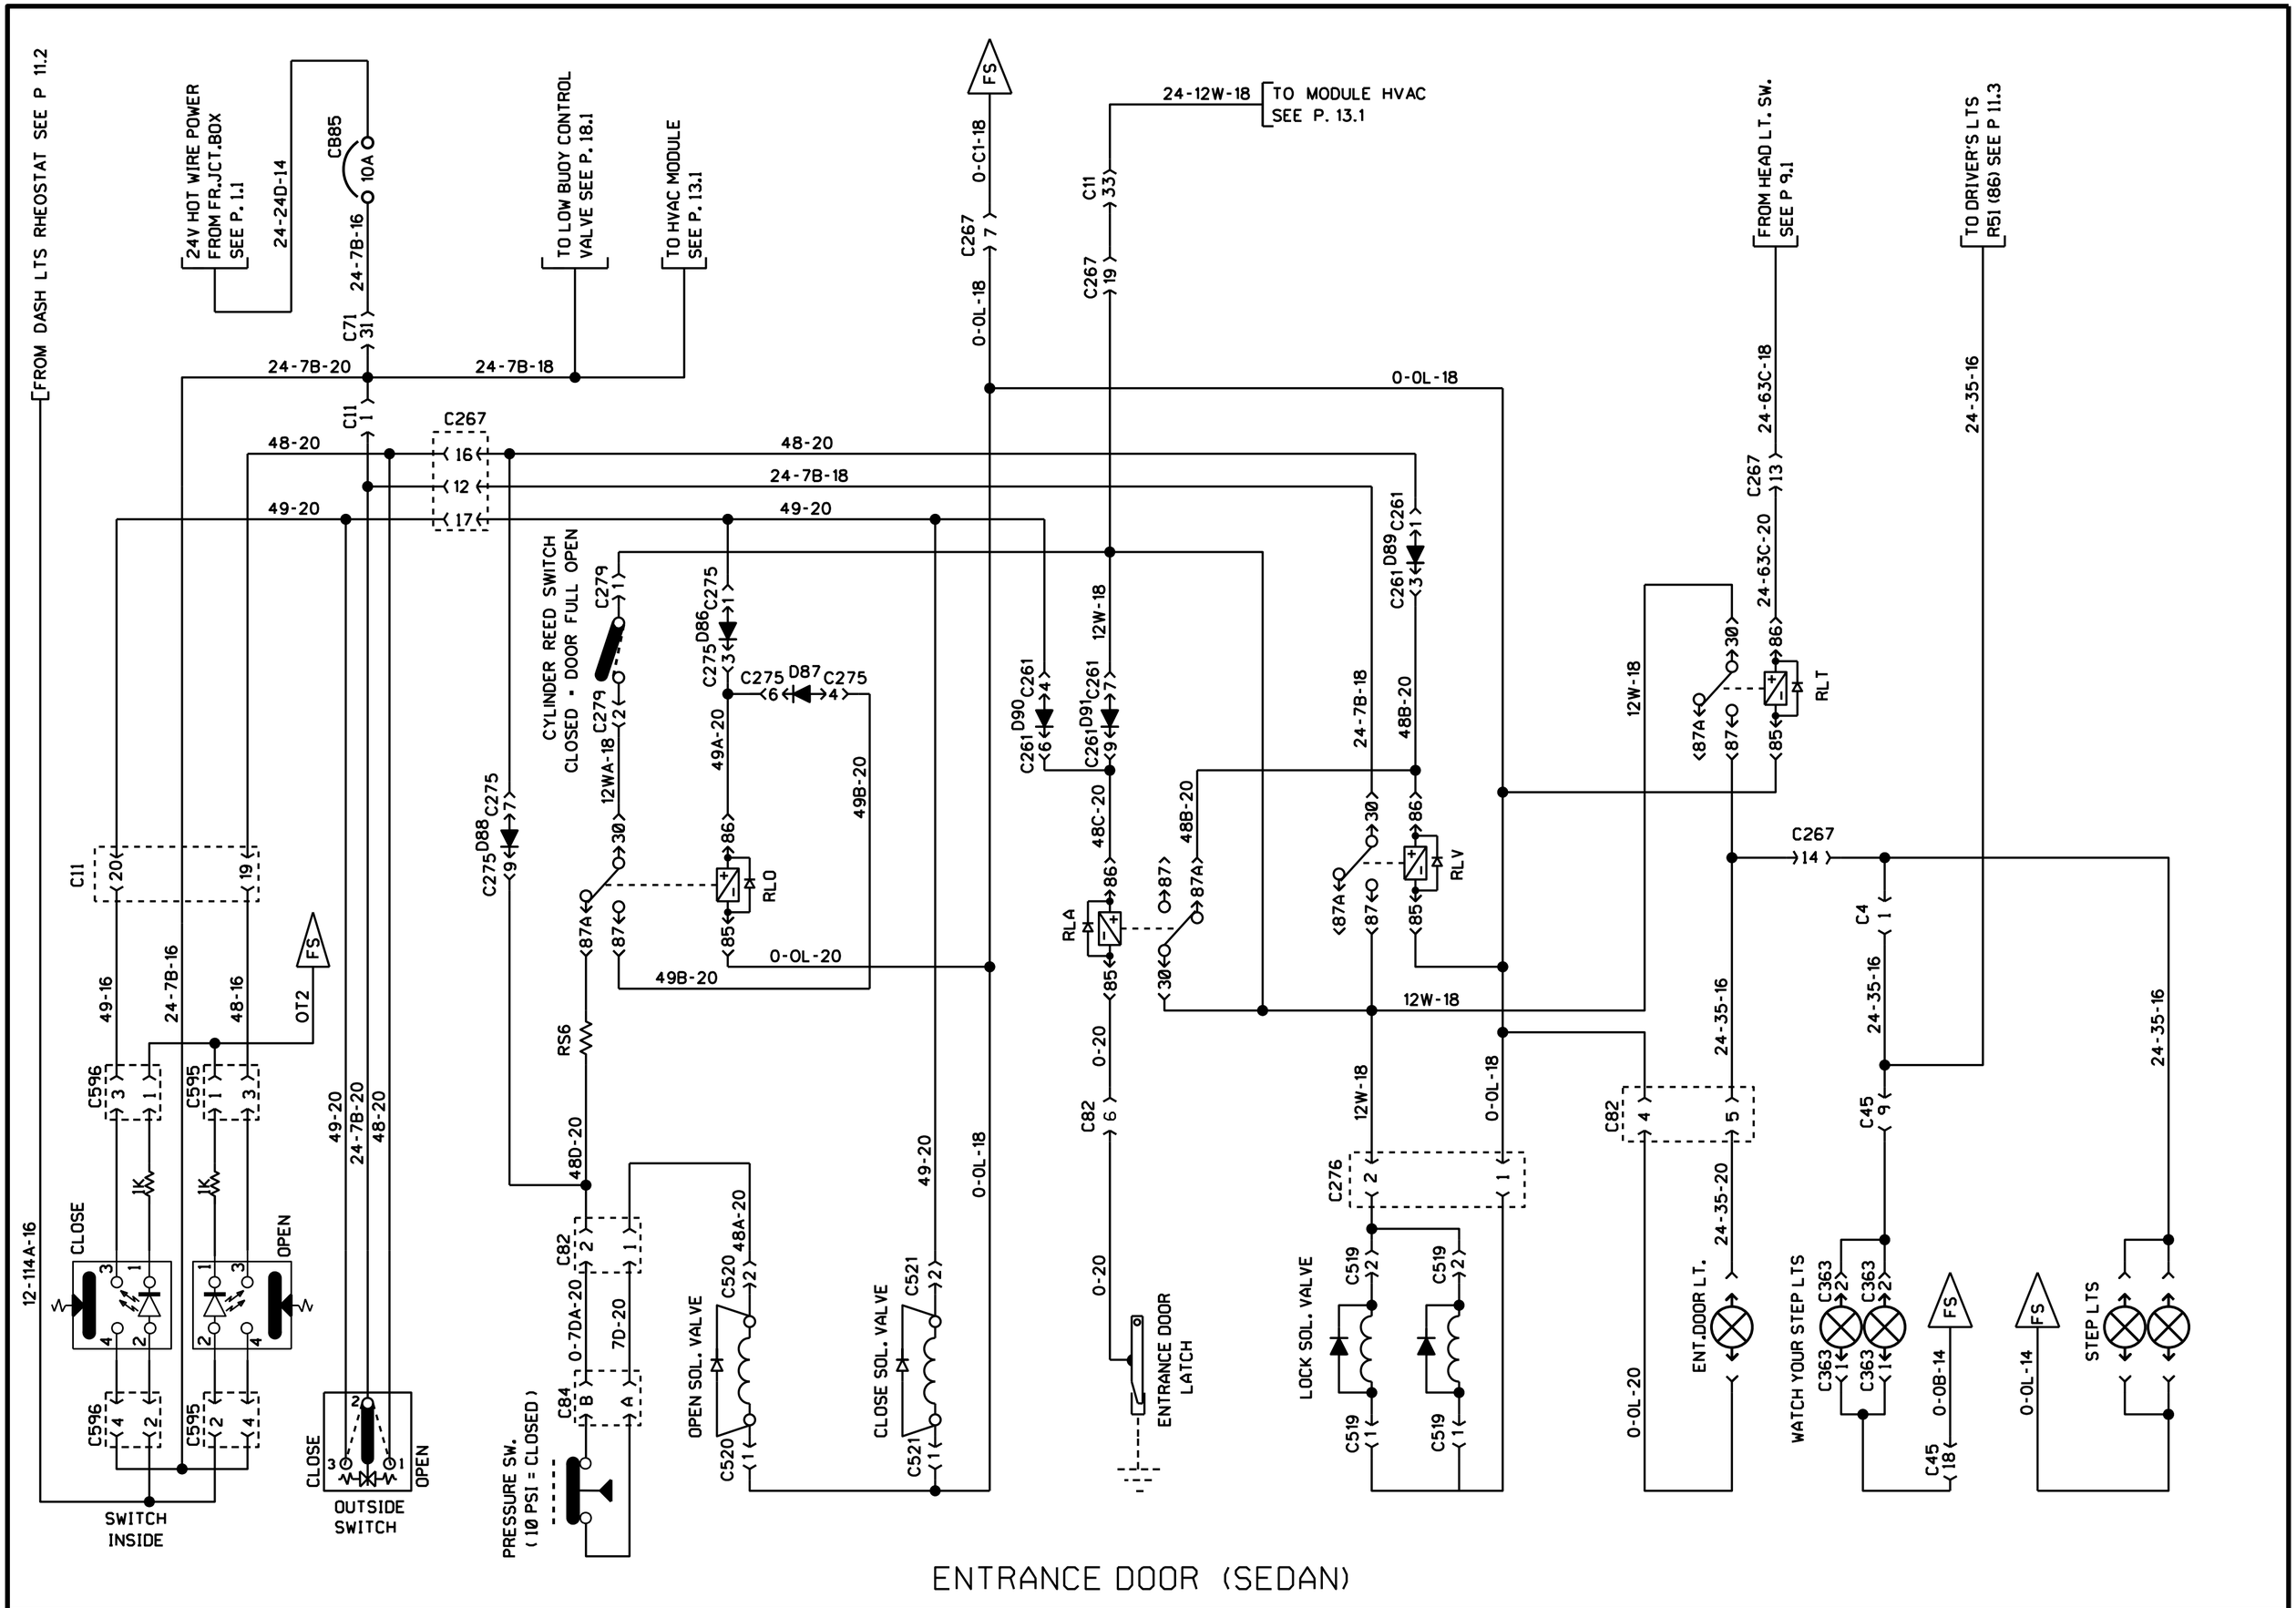

ENTRANCE DOOR (SEDAN)

PREVOST | WIRING DIAGRAM

LAVATORY

FRONT DESTINATION SIGN

ELECTRICAL DESTINATION SIGN

ELECTRONIC DESTINATION SIGN

NO: D06090 2

PAGE: 17.1

REVISION 00

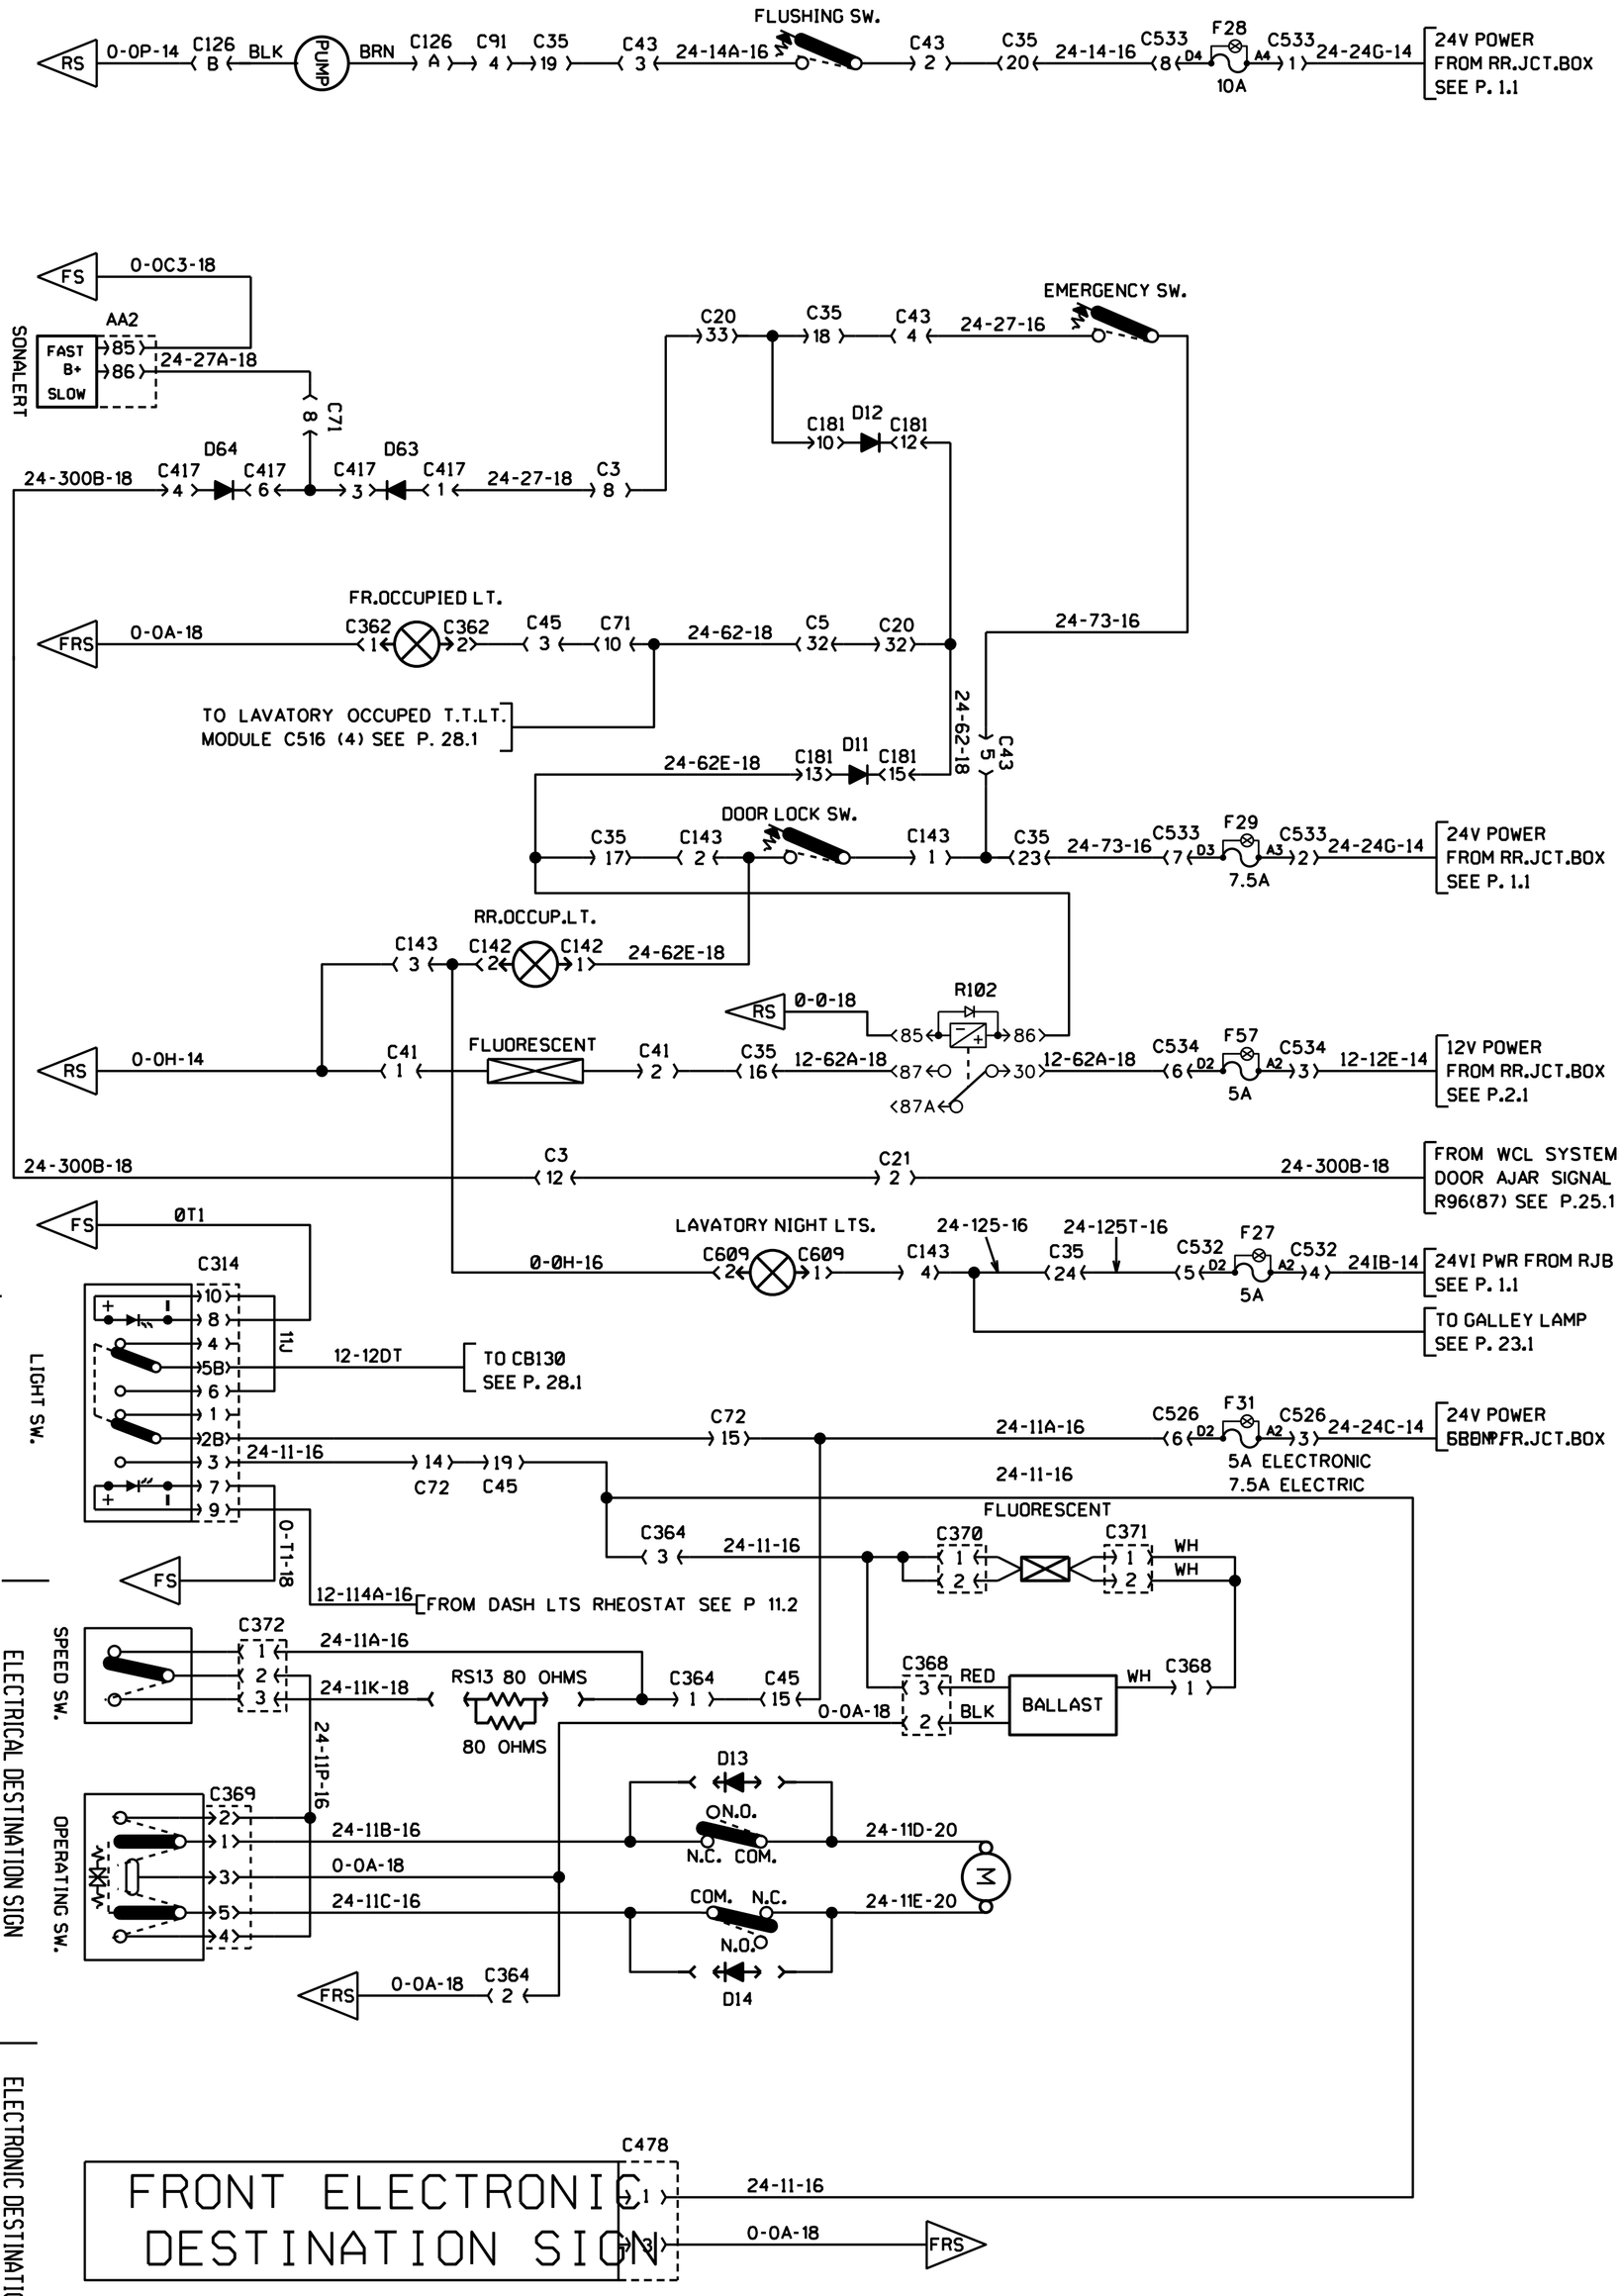

LAVATORY

FRONT DESTINATION SIGN

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 17.1	REVISION 01

PREVOST | WIRING DIAGRAM

LAVATORY

SIDE AND FRONT DESTINATION SIGN (LUMINATOR)

NO: D060902

PAGE: 17.1 SP1

REVISION 00

VEH. PWT

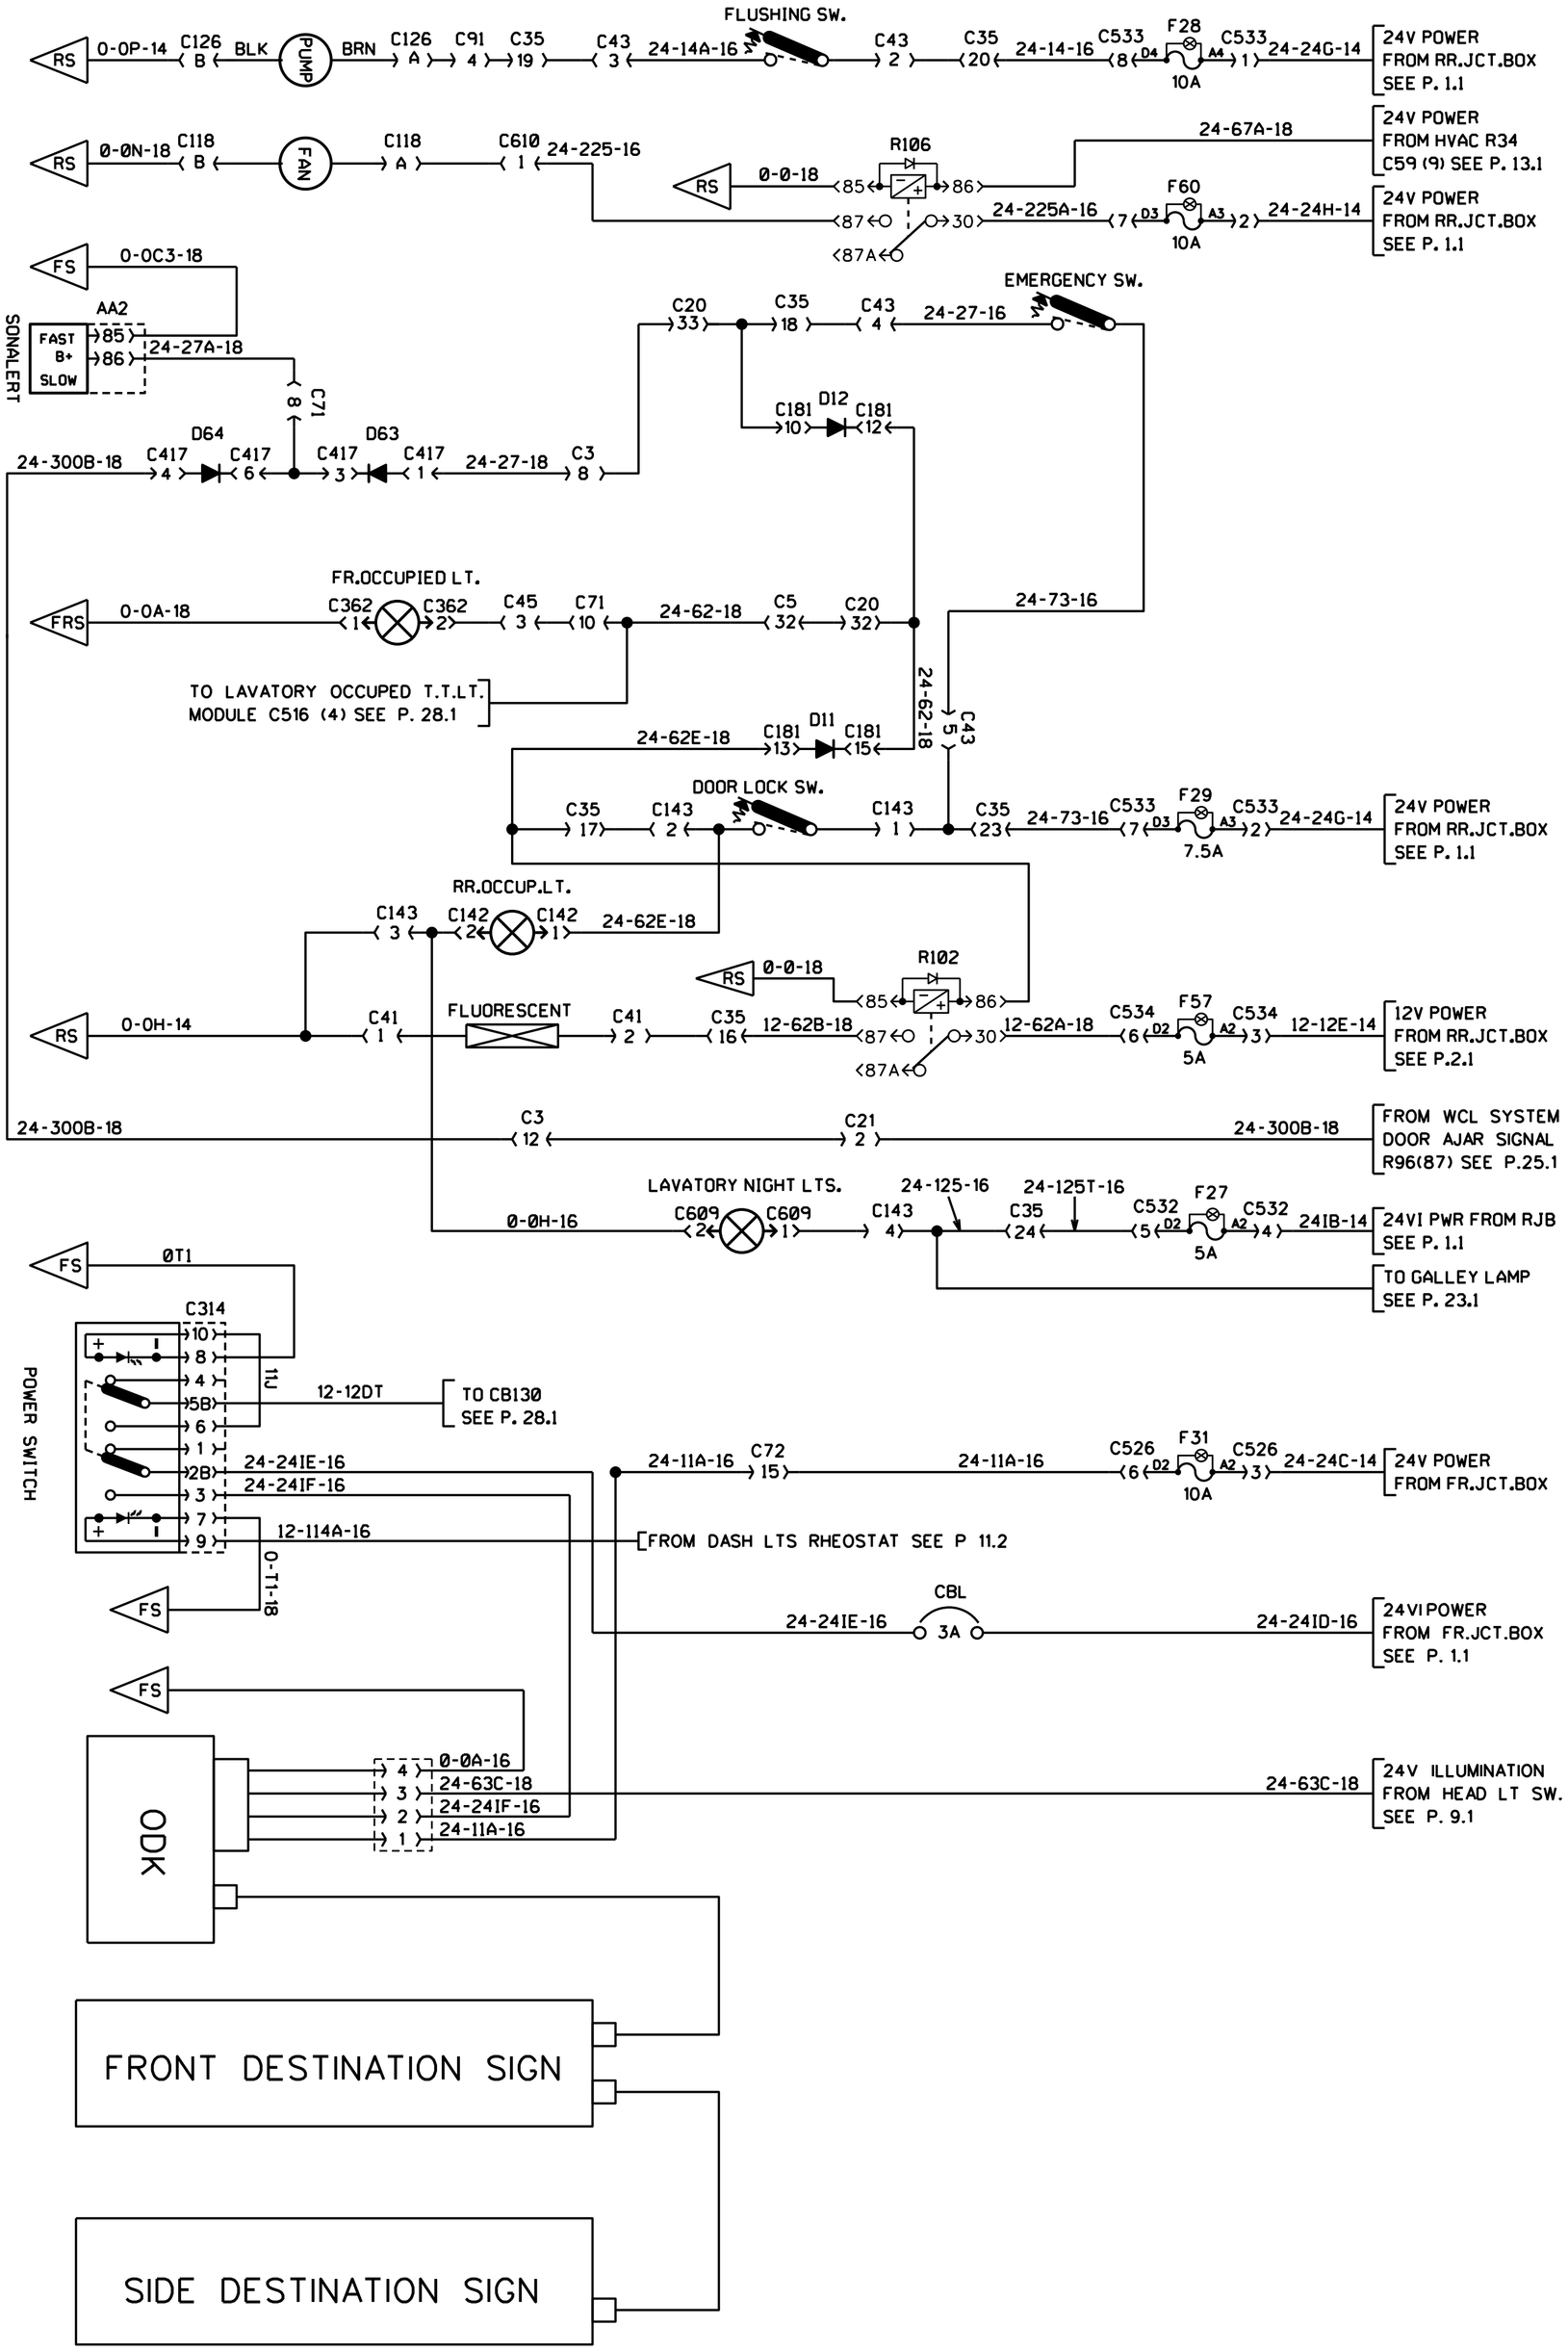

PREVOST

WIRING DIAGRAM

KNEELING SYSTEM | HI BUOY | LOW BUOY

NO: D060902

PAGE: 18.1

REVISION 00

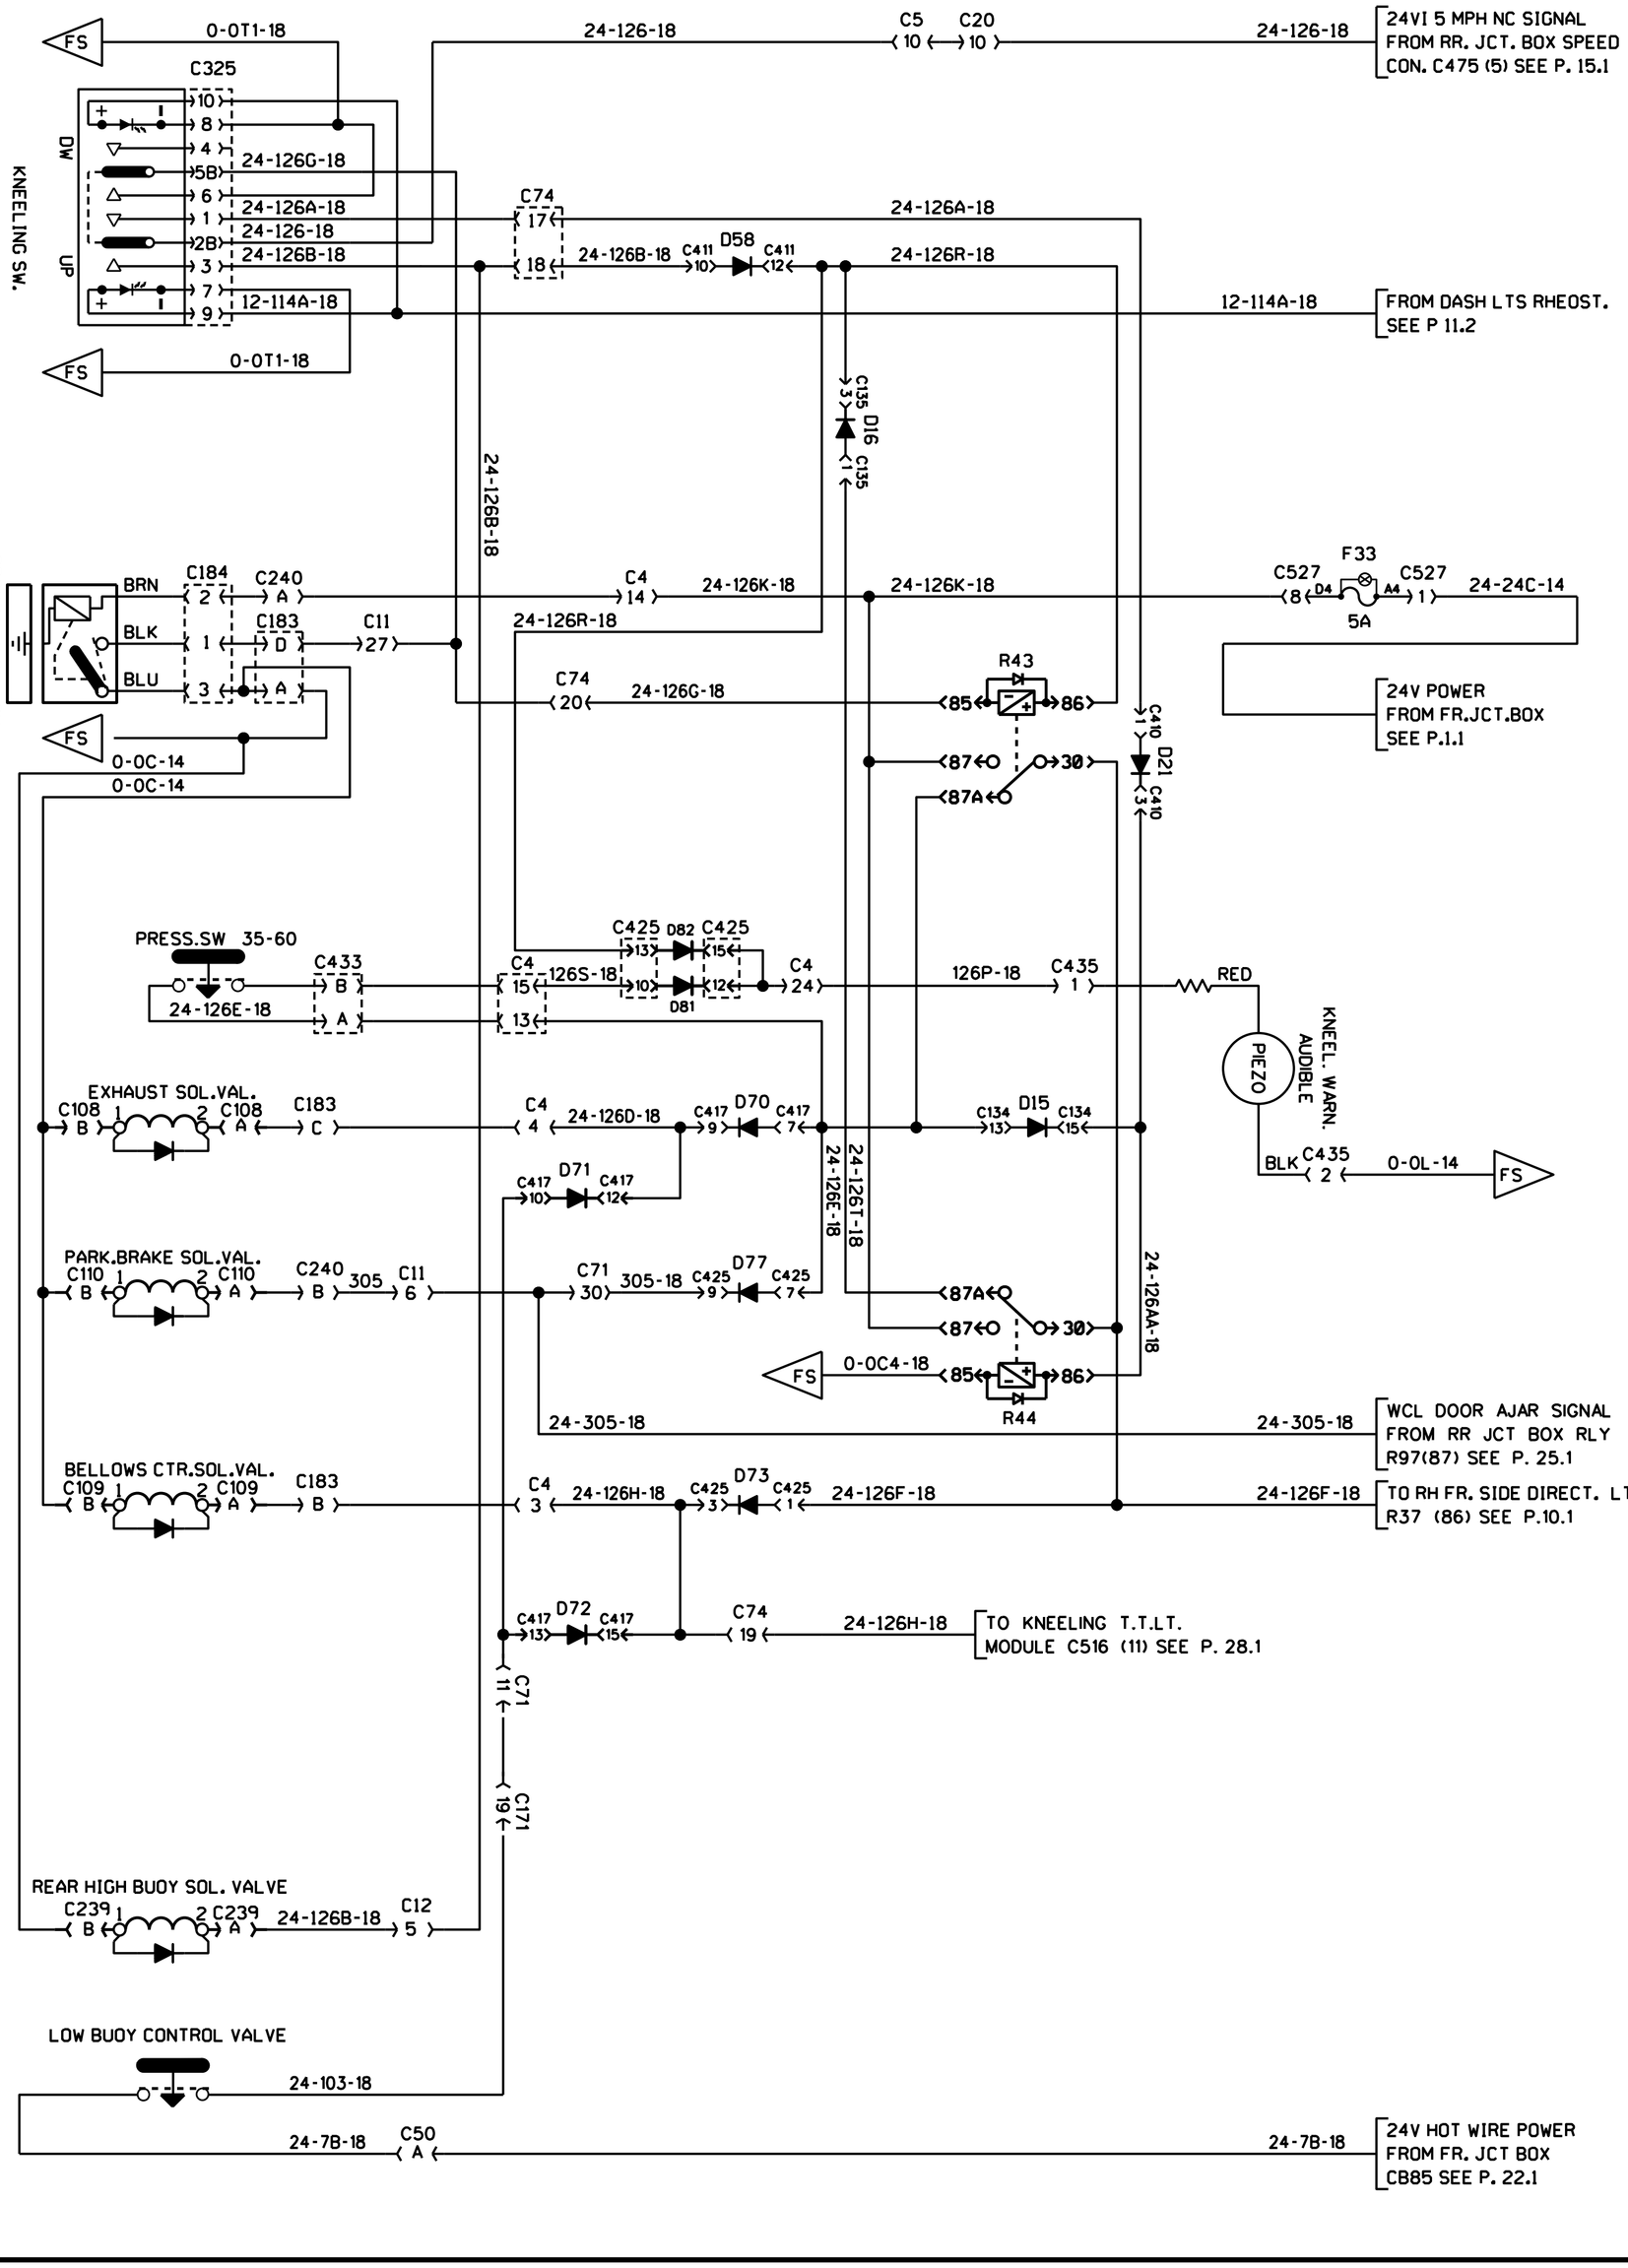

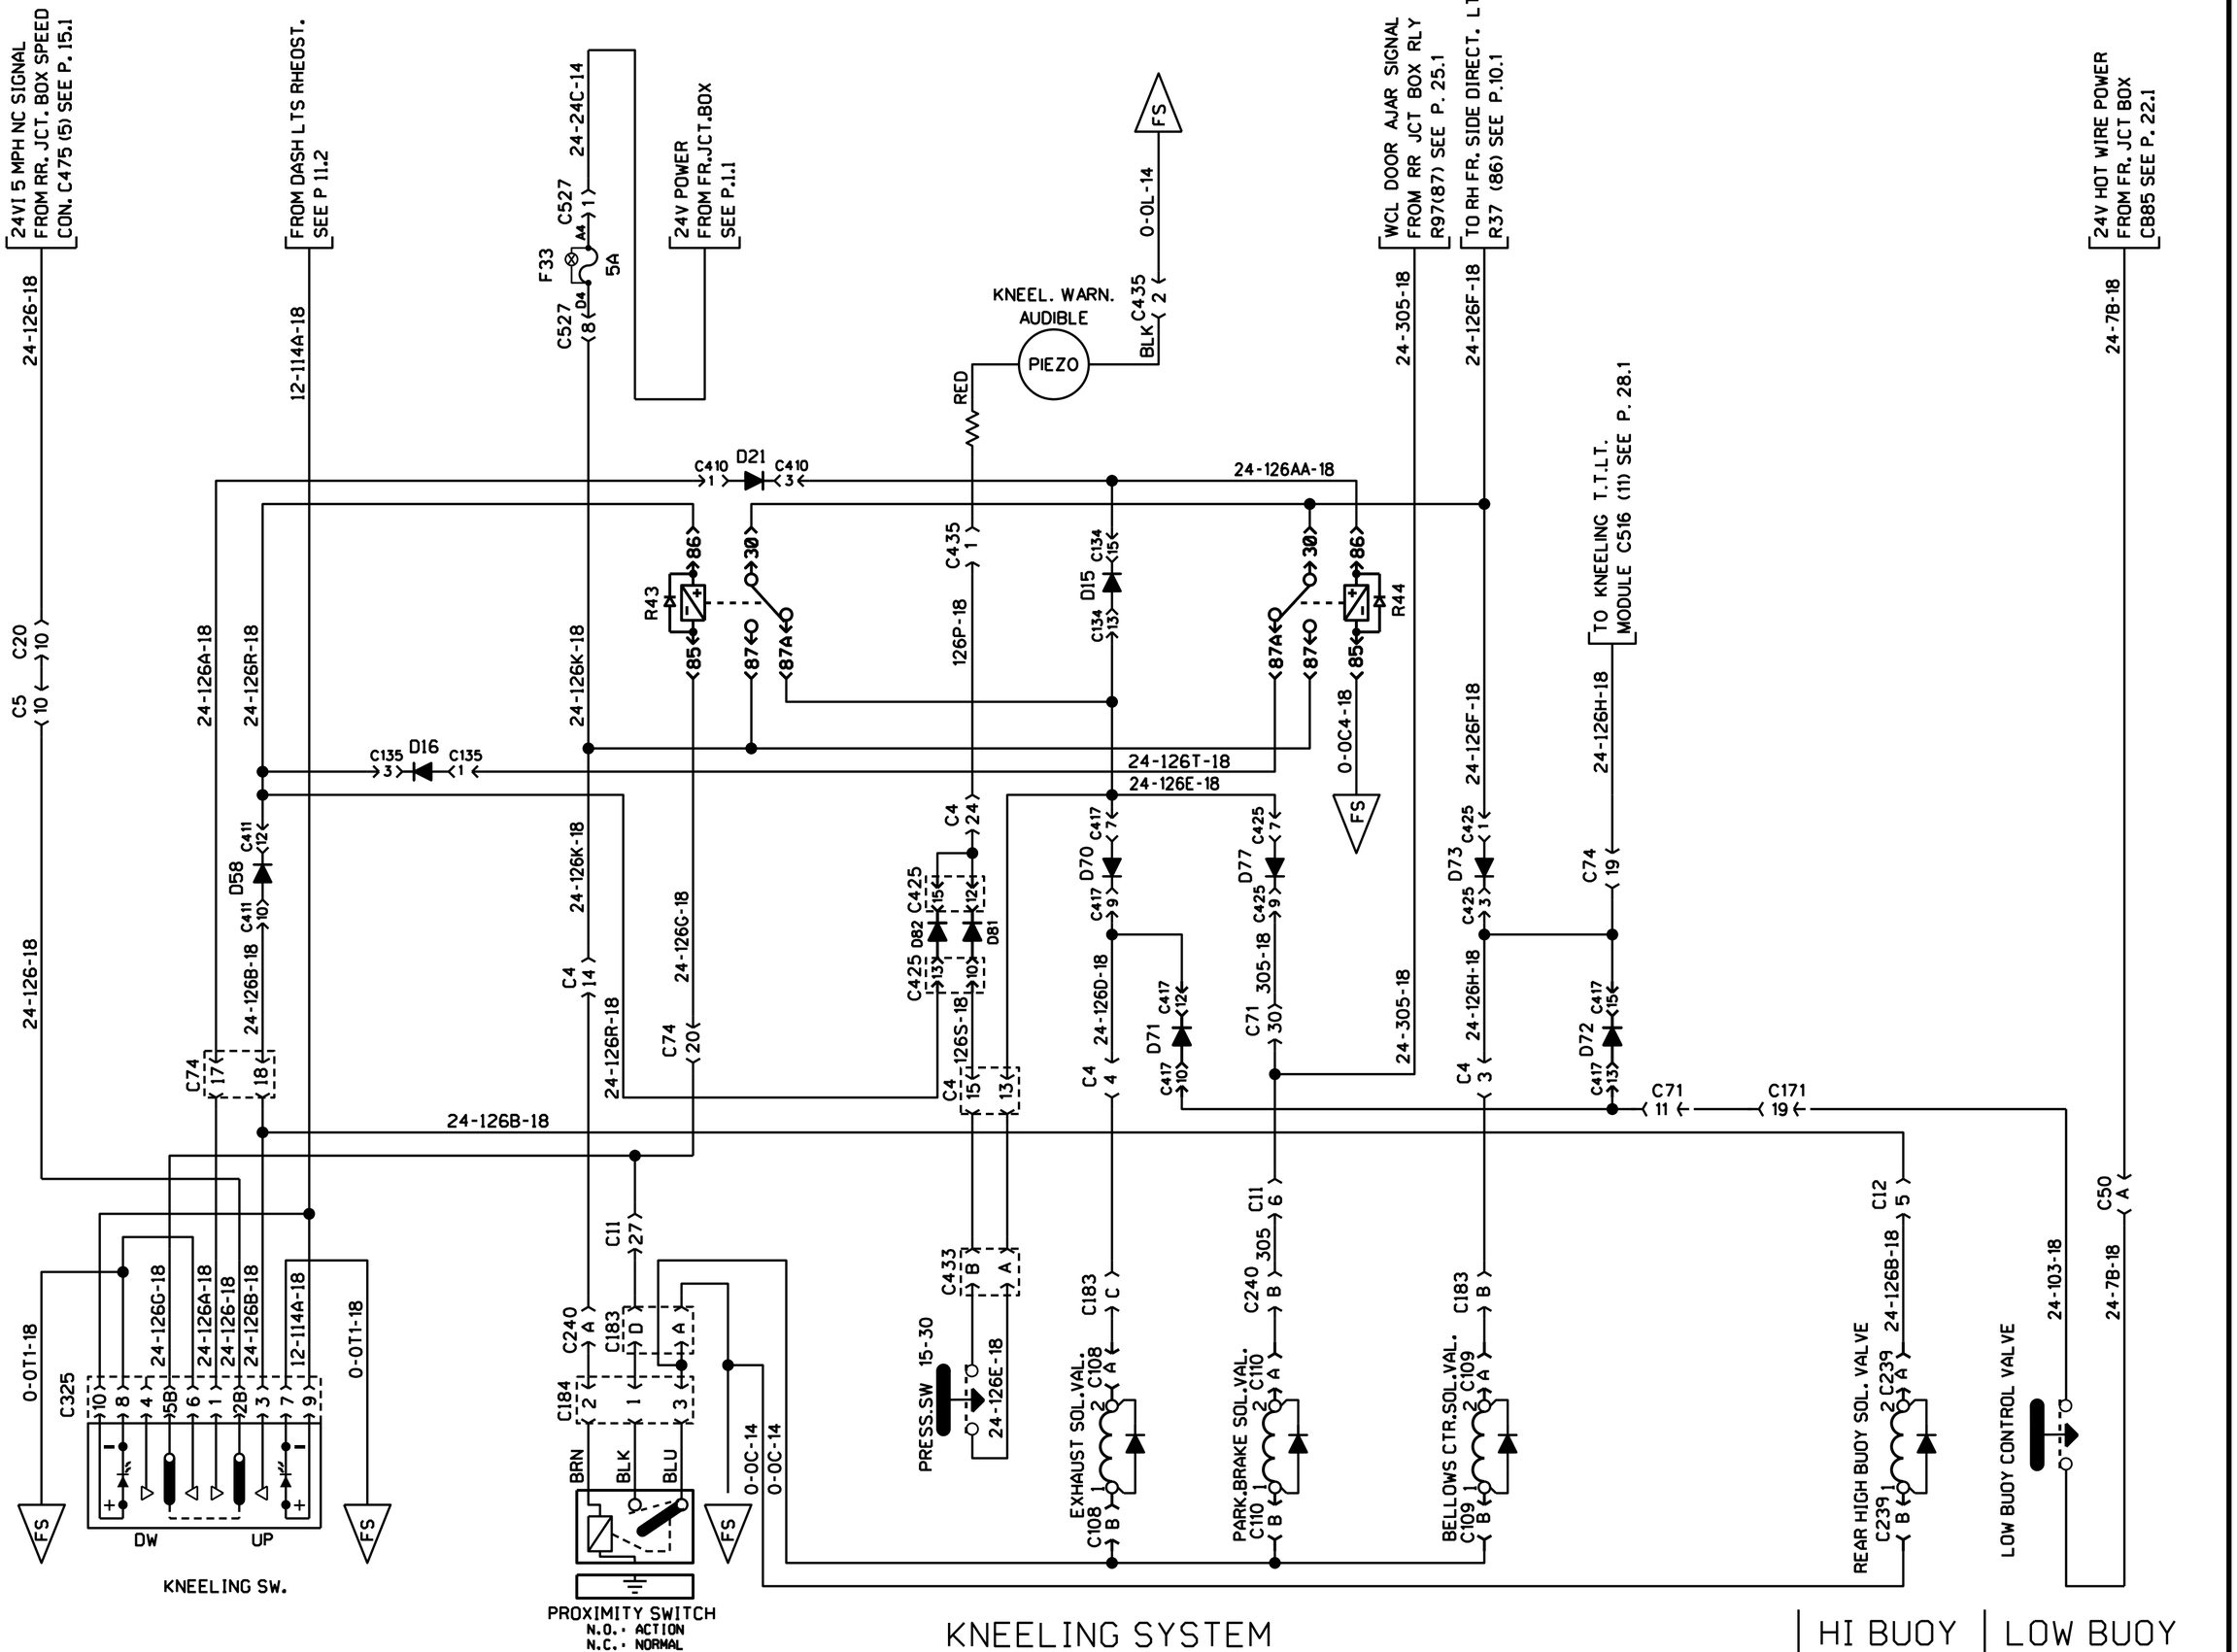
24VI 5 MPH NC SIGNAL FROM RR. JCT. BOX SPEED CON. C475 (5) SEE P. 15.1
FROM DASH LTS RHEOST. SEE P 11.2
24V POWER FROM FR.JCT.BOX SEE P.1.1
KNEEL. WARN. AUDIBLE
PIEZO
WCL DOOR AJAR SIGNAL FROM RR JCT BOX RLY R97(87) SEE P. 25.1
TO RH FR. SIDE DIRECT. LT R37 (86) SEE P.10.1
24V HOT WIRE POWER FROM FR. JCT BOX CB85 SEE P. 22.1
TO KNEELING T.T.LT. MODULE C516 (11) SEE P. 28.1
KNEELING SW.
DW
UP
PROXIMITY SWITCH
N.O.: ACTION
N.C.: NORMAL
PRESS.SW 15-30
EXHAUST SOL.VAL.
PARK.BRAKE SOL.VAL.
BELLOWS CTR.SOL.VAL.
REAR HIGH BUOY SOL. VALVE
LOW BUOY CONTROL VALVE
KNEELING SYSTEM
HI BUOY
LOW BUOY

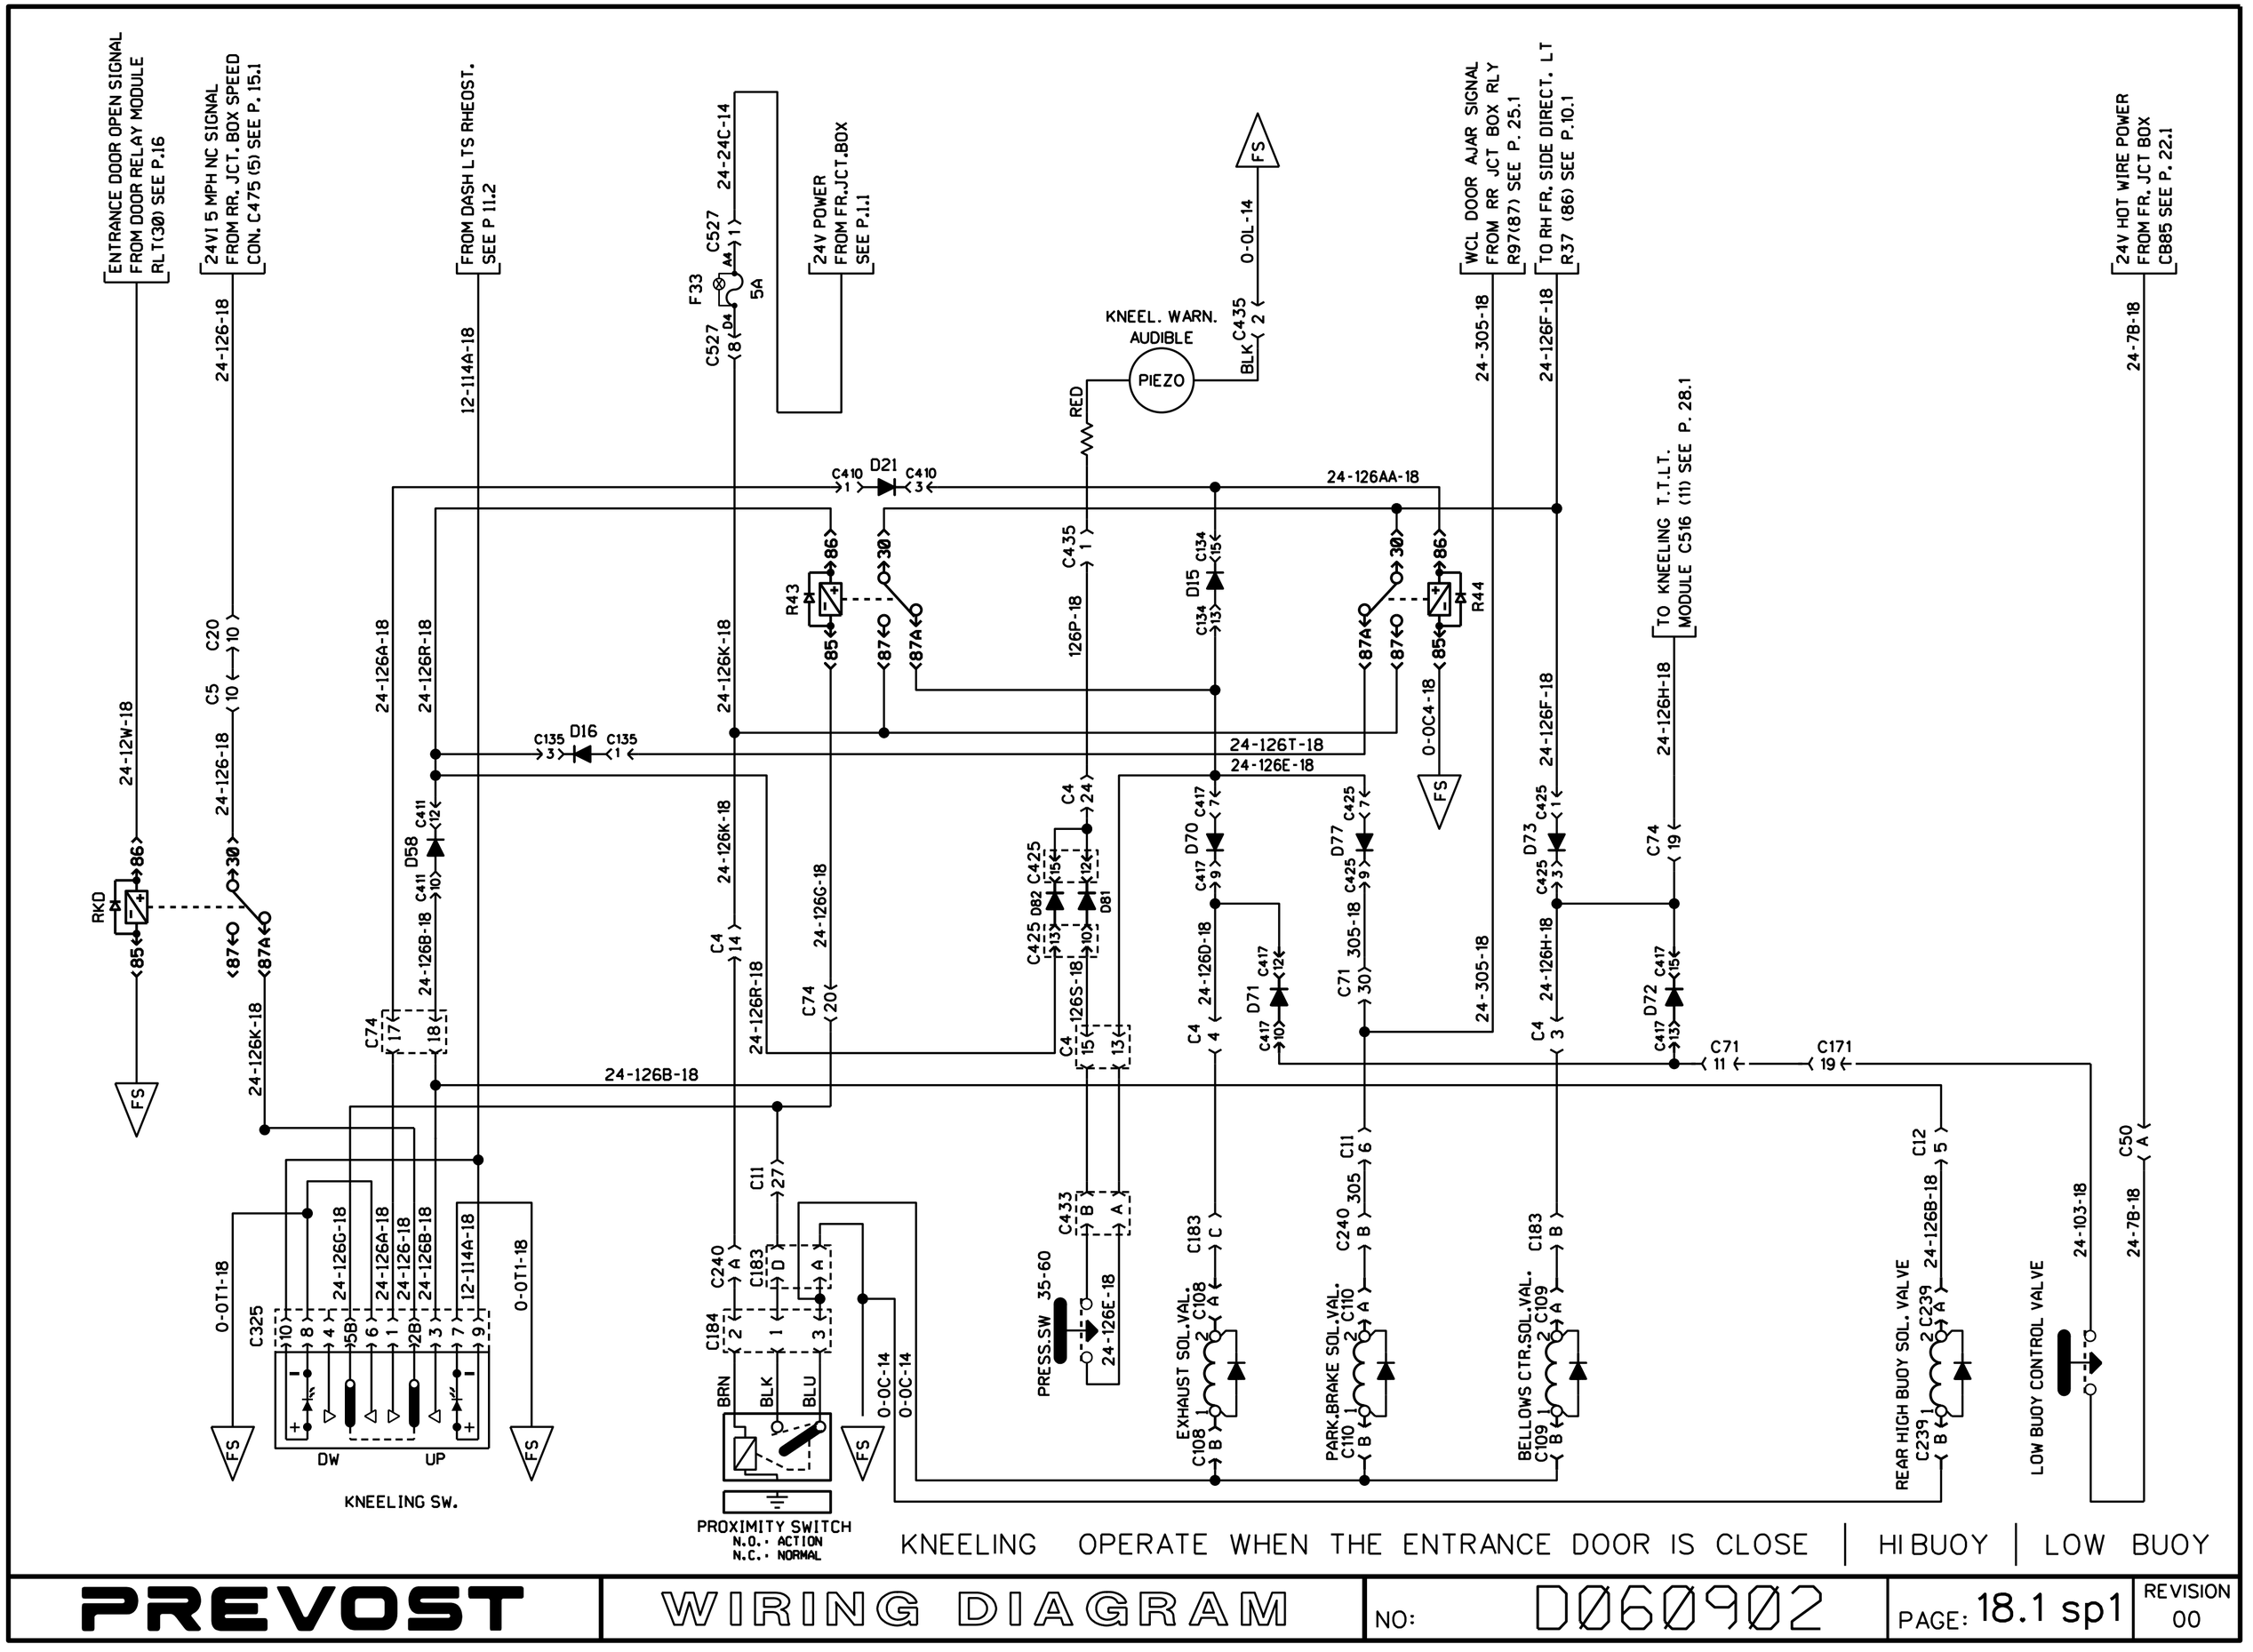
ENTRANCE DOOR OPEN SIGNAL FROM DOOR RELAY MODULE RLT(30) SEE P.16
24VI 5 MPH NC SIGNAL FROM RR. JCT. BOX SPEED CON. C475 (5) SEE P. 15.1
FROM DASH L TS RHEOST. SEE P 11.2
24V POWER FROM FR.JCT.BOX SEE P.1.1
KNEEL. WARN. AUDIBLE
PIEZO
WCL DOOR AJAR SIGNAL FROM RR JCT BOX RLY R97(87) SEE P. 25.1
TO RH FR. SIDE DIRECT. LT R37 (86) SEE P.10.1
24V HOT WIRE POWER FROM FR. JCT BOX CB85 SEE P. 22.1
TO KNEELING T.T.L.T. MODULE C516 (11) SEE P. 28.1
24-12W-18
24-126-18
12-114A-18
24-126A-18
24-126R-18
24-126K-18
24-126T-18
24-126E-18
24-126AA-18
24-126B-18
24-126G-18
24-126S-18
24-126D-18
24-126H-18
24-126F-18
24-305-18
24-7B-18
0-0L-14
0-0C4-18
0-0C-14
0-0T1-18
24-103-18
RED
BLK
BRN
BLU
R43
R44
RKD
D21
D15
D16
D58
D70
D77
D73
D71
D72
D81
D82
F33
5A
FS
KNEELING SW.
DW
UP
PROXIMITY SWITCH
N.O.: ACTION
N.C.: NORMAL
PRESS.SW 35-60
EXHAUST SOL.VAL.
PARK.BRAKE SOL.VAL.
BELLOWS CTR.SOL.VAL.
REAR HIGH BUOY SOL. VALVE
LOW BUOY CONTROL VALVE
KNEELING OPERATE WHEN THE ENTRANCE DOOR IS CLOSE | HI BUOY | LOW BUOY

ENTRANCE DOOR OPEN SIGNAL FROM DOOR RELAY MODULE RLT(30) SEE P.16

24VI 5 MPH NC SIGNAL FROM RR. JCT. BOX SPEED CON. C475 (5) SEE P. 15.1

FROM DASH LTS RHEOST. SEE P 11.2

24V POWER FROM FR.JCT.BOX SEE P.1.1

WCL DOOR AJAR SIGNAL FROM RR JCT BOX RLY R97(87) SEE P. 25.1

TO RH FR. SIDE DIRECT. LT R37 (86) SEE P.10.1

24V HOT WIRE POWER FROM FR. JCT BOX CB85 SEE P. 22.1

TO KNEELING T.T.L.T. MODULE C516 (11) SEE P. 28.1

KNEEL. WARN. AUDIBLE

PIEZO

RED

F33 5A

RKD

R43

R44

D15

D16

D21

D58

D70

D71

D72

D73

D77

D81

D82

24-12W-18
24-126-18
24-126A-18
24-126R-18
24-126K-18
24-126T-18
24-126E-18
24-126AA-18
24-126B-18
24-126G-18
24-126C-18
24-126S-18
24-126D-18
24-126H-18
24-305-18
0-0L-14
0-0C4-18
0-0C-14
0-0T1-18
12-114A-18
126P-18
24-7B-18
24-103-18

KNEELING SW.

DW UP

N.O. PROXIMITY SWITCH
OPENED·NORMAL
CLOSED· DOWN

PRESS.SW 35-60

EXHAUST SOL.VAL. C108

PARK.BRAKE SOL.VAL. C110

BELLOWS CTR.SOL.VAL. C109

REAR HIGH BUOY SOL. VALVE C239

LOW BUOY CONTROL VALVE

KNEELING OPERATE WHEN THE ENTRANCE DOOR IS CLOSE | HI BUOY | LOW BUOY

ENTRANCE DOOR OPEN SIGNAL FROM DOOR RELAY MODULE RLT(30) SEE P.16

24VI 5 MPH NC SIGNAL FROM RR. JCT. BOX SPEED CON. C475 (5) SEE P. 15.1

FROM DASH LTS RHEOST. SEE P 11.2

24V POWER FROM FR.JCT.BOX SEE P.1.1

WCL DOOR AJAR SIGNAL FROM RR JCT BOX RLY R97(87) SEE P. 25.1

TO RH FR. SIDE DIRECT. LT R37 (86) SEE P.10.1

24V HOT WIRE POWER FROM FR. JCT BOX CB85 SEE P. 22.1

TO KNEELING T.T.L.T. MODULE C516 (11) SEE P. 28.1

KNEEL. WARN. AUDIBLE

PIEZO

RED

F33 5A

RKD

R43

R44

D21

D15

D16

D58

D70

D77

D73

D71

D72

D81

D82

PRESS.SW 15-30

EXHAUST SOL.VAL.

PARK.BRAKE SOL.VAL.

BELLOWS CTR.SOL.VAL.

REAR HIGH BUOY SOL. VALVE

LOW BUOY CONTROL VALVE

KNEELING SW.

DW

UP

N.O. PROXIMITY SWITCH
OPENED·NORMAL
CLOSED· DOWN

KNEELING OPERATE WHEN THE ENTRANCE DOOR IS CLOSE | HI BUOY | LOW BUOY

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 18.1 sp1	REVISION 08

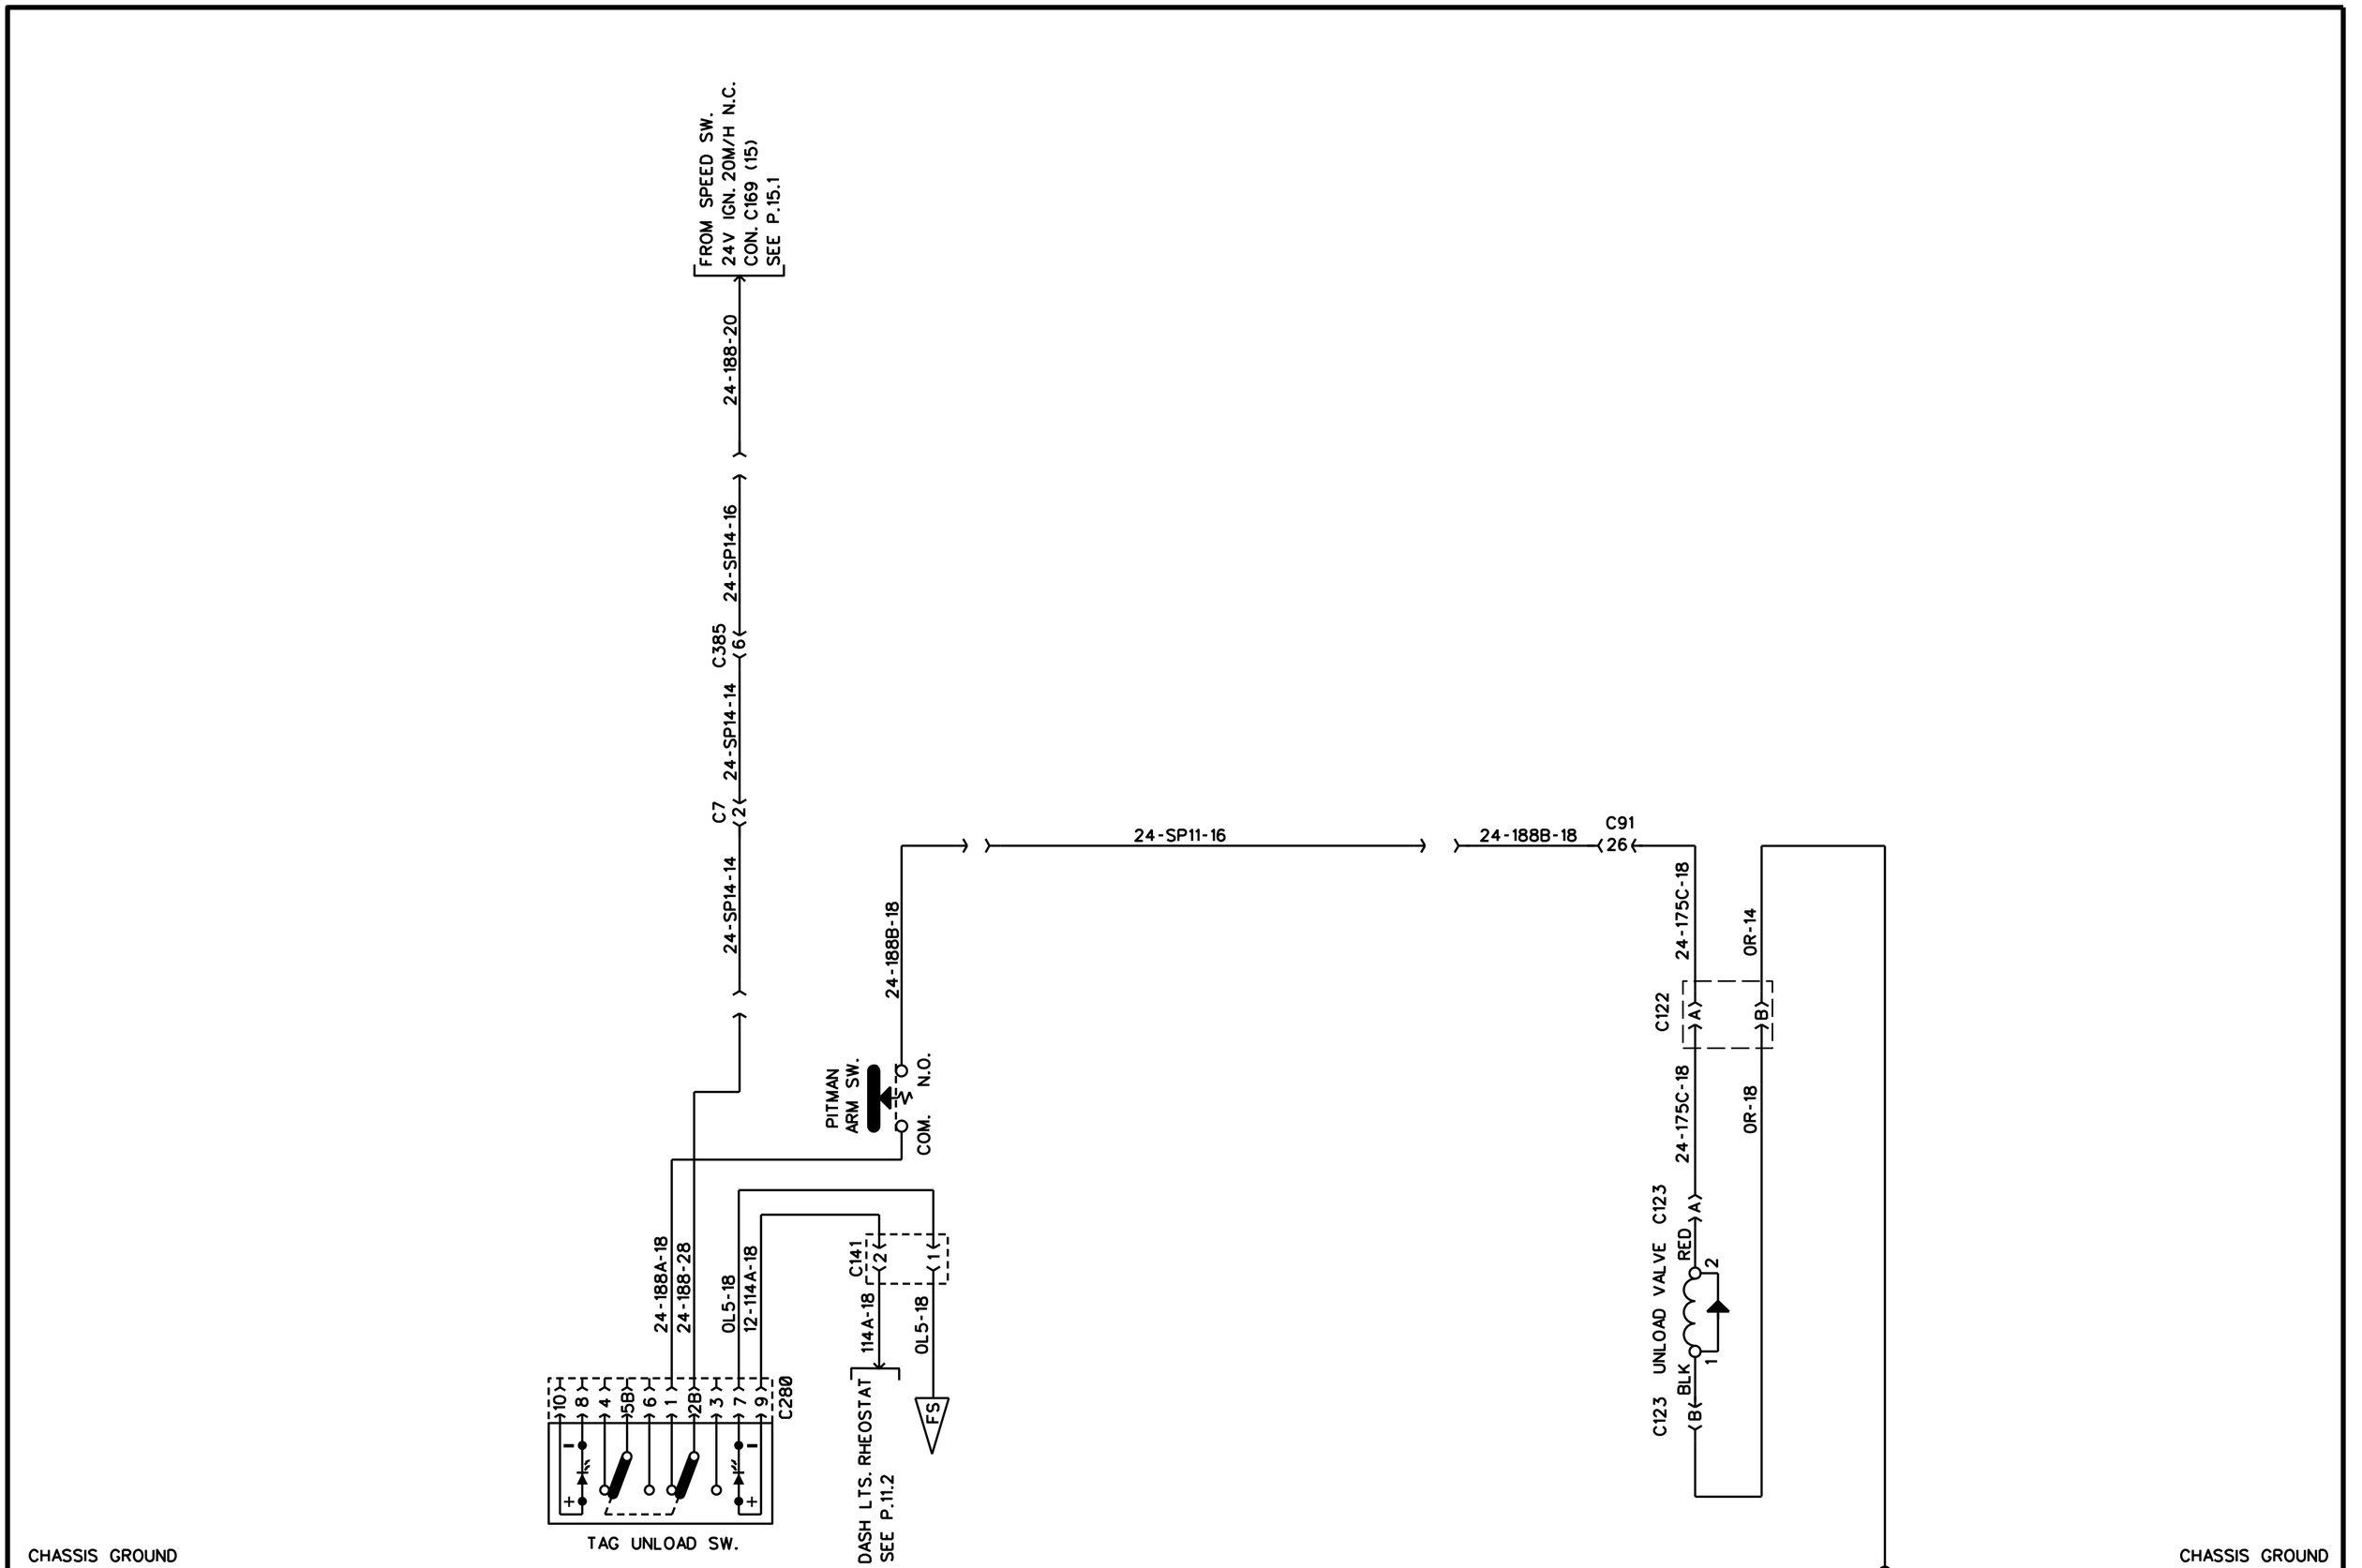

UNLOAD TAG SYSTEM

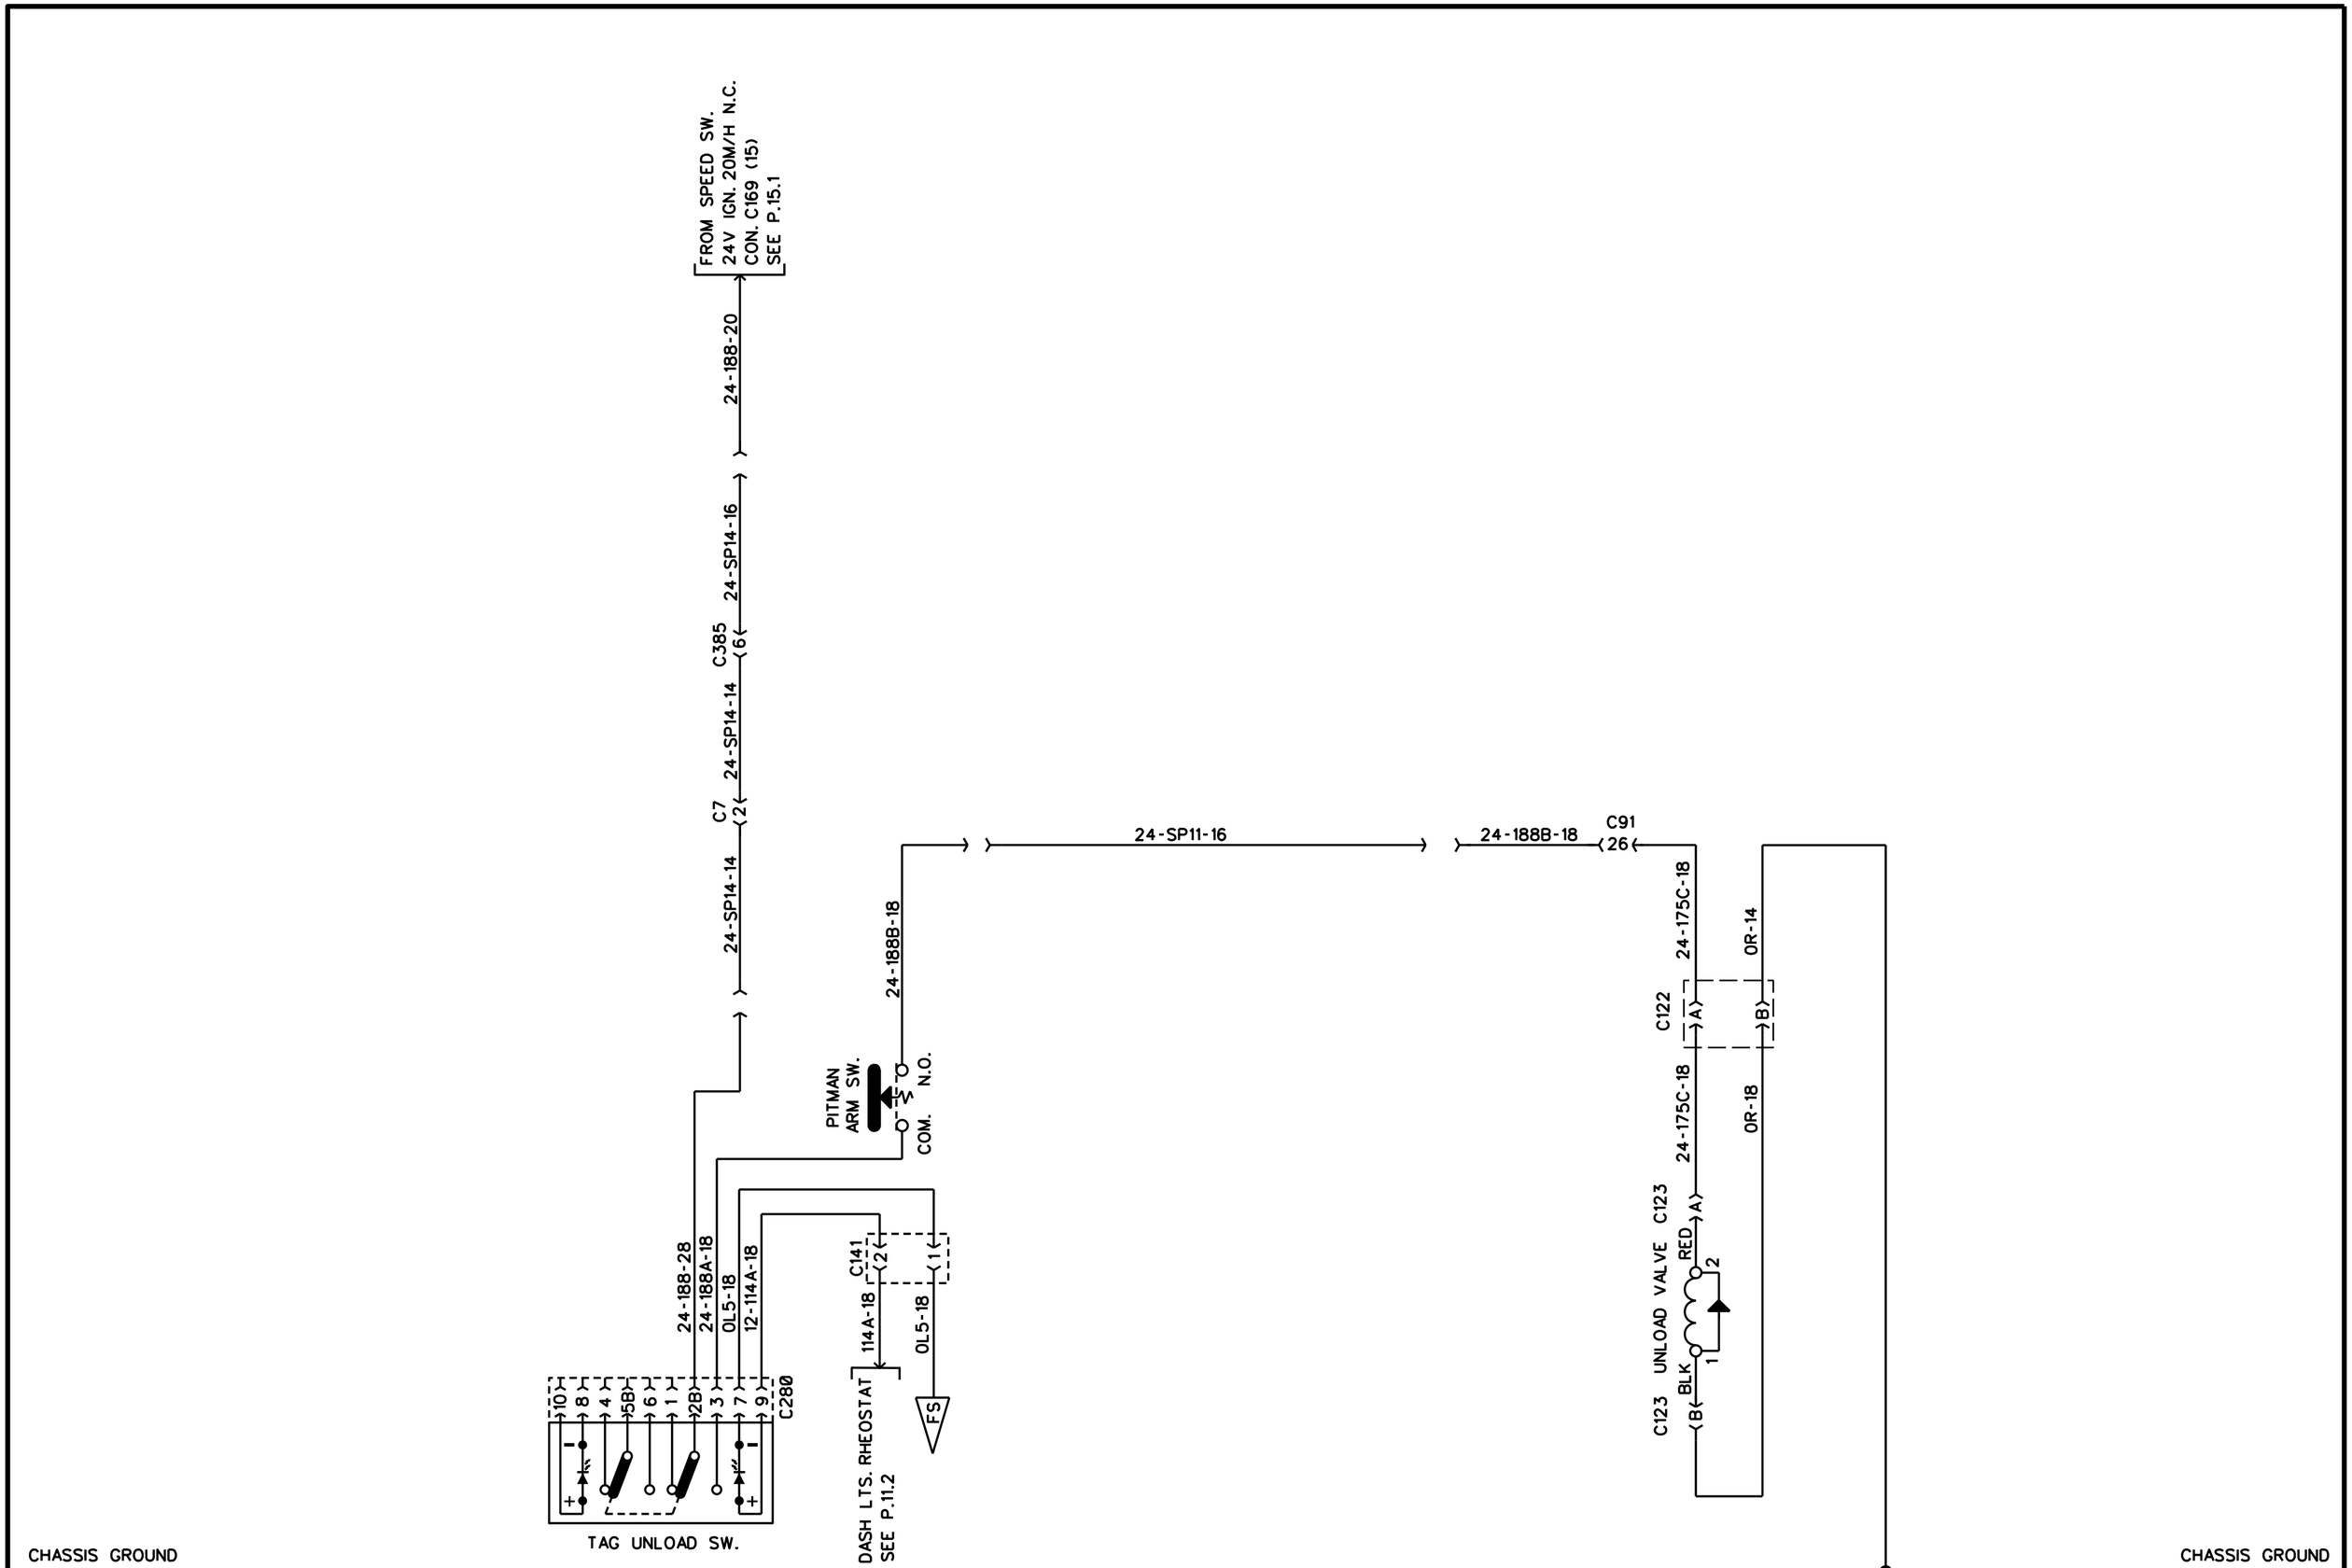

UNLOAD TAG SYSTEM

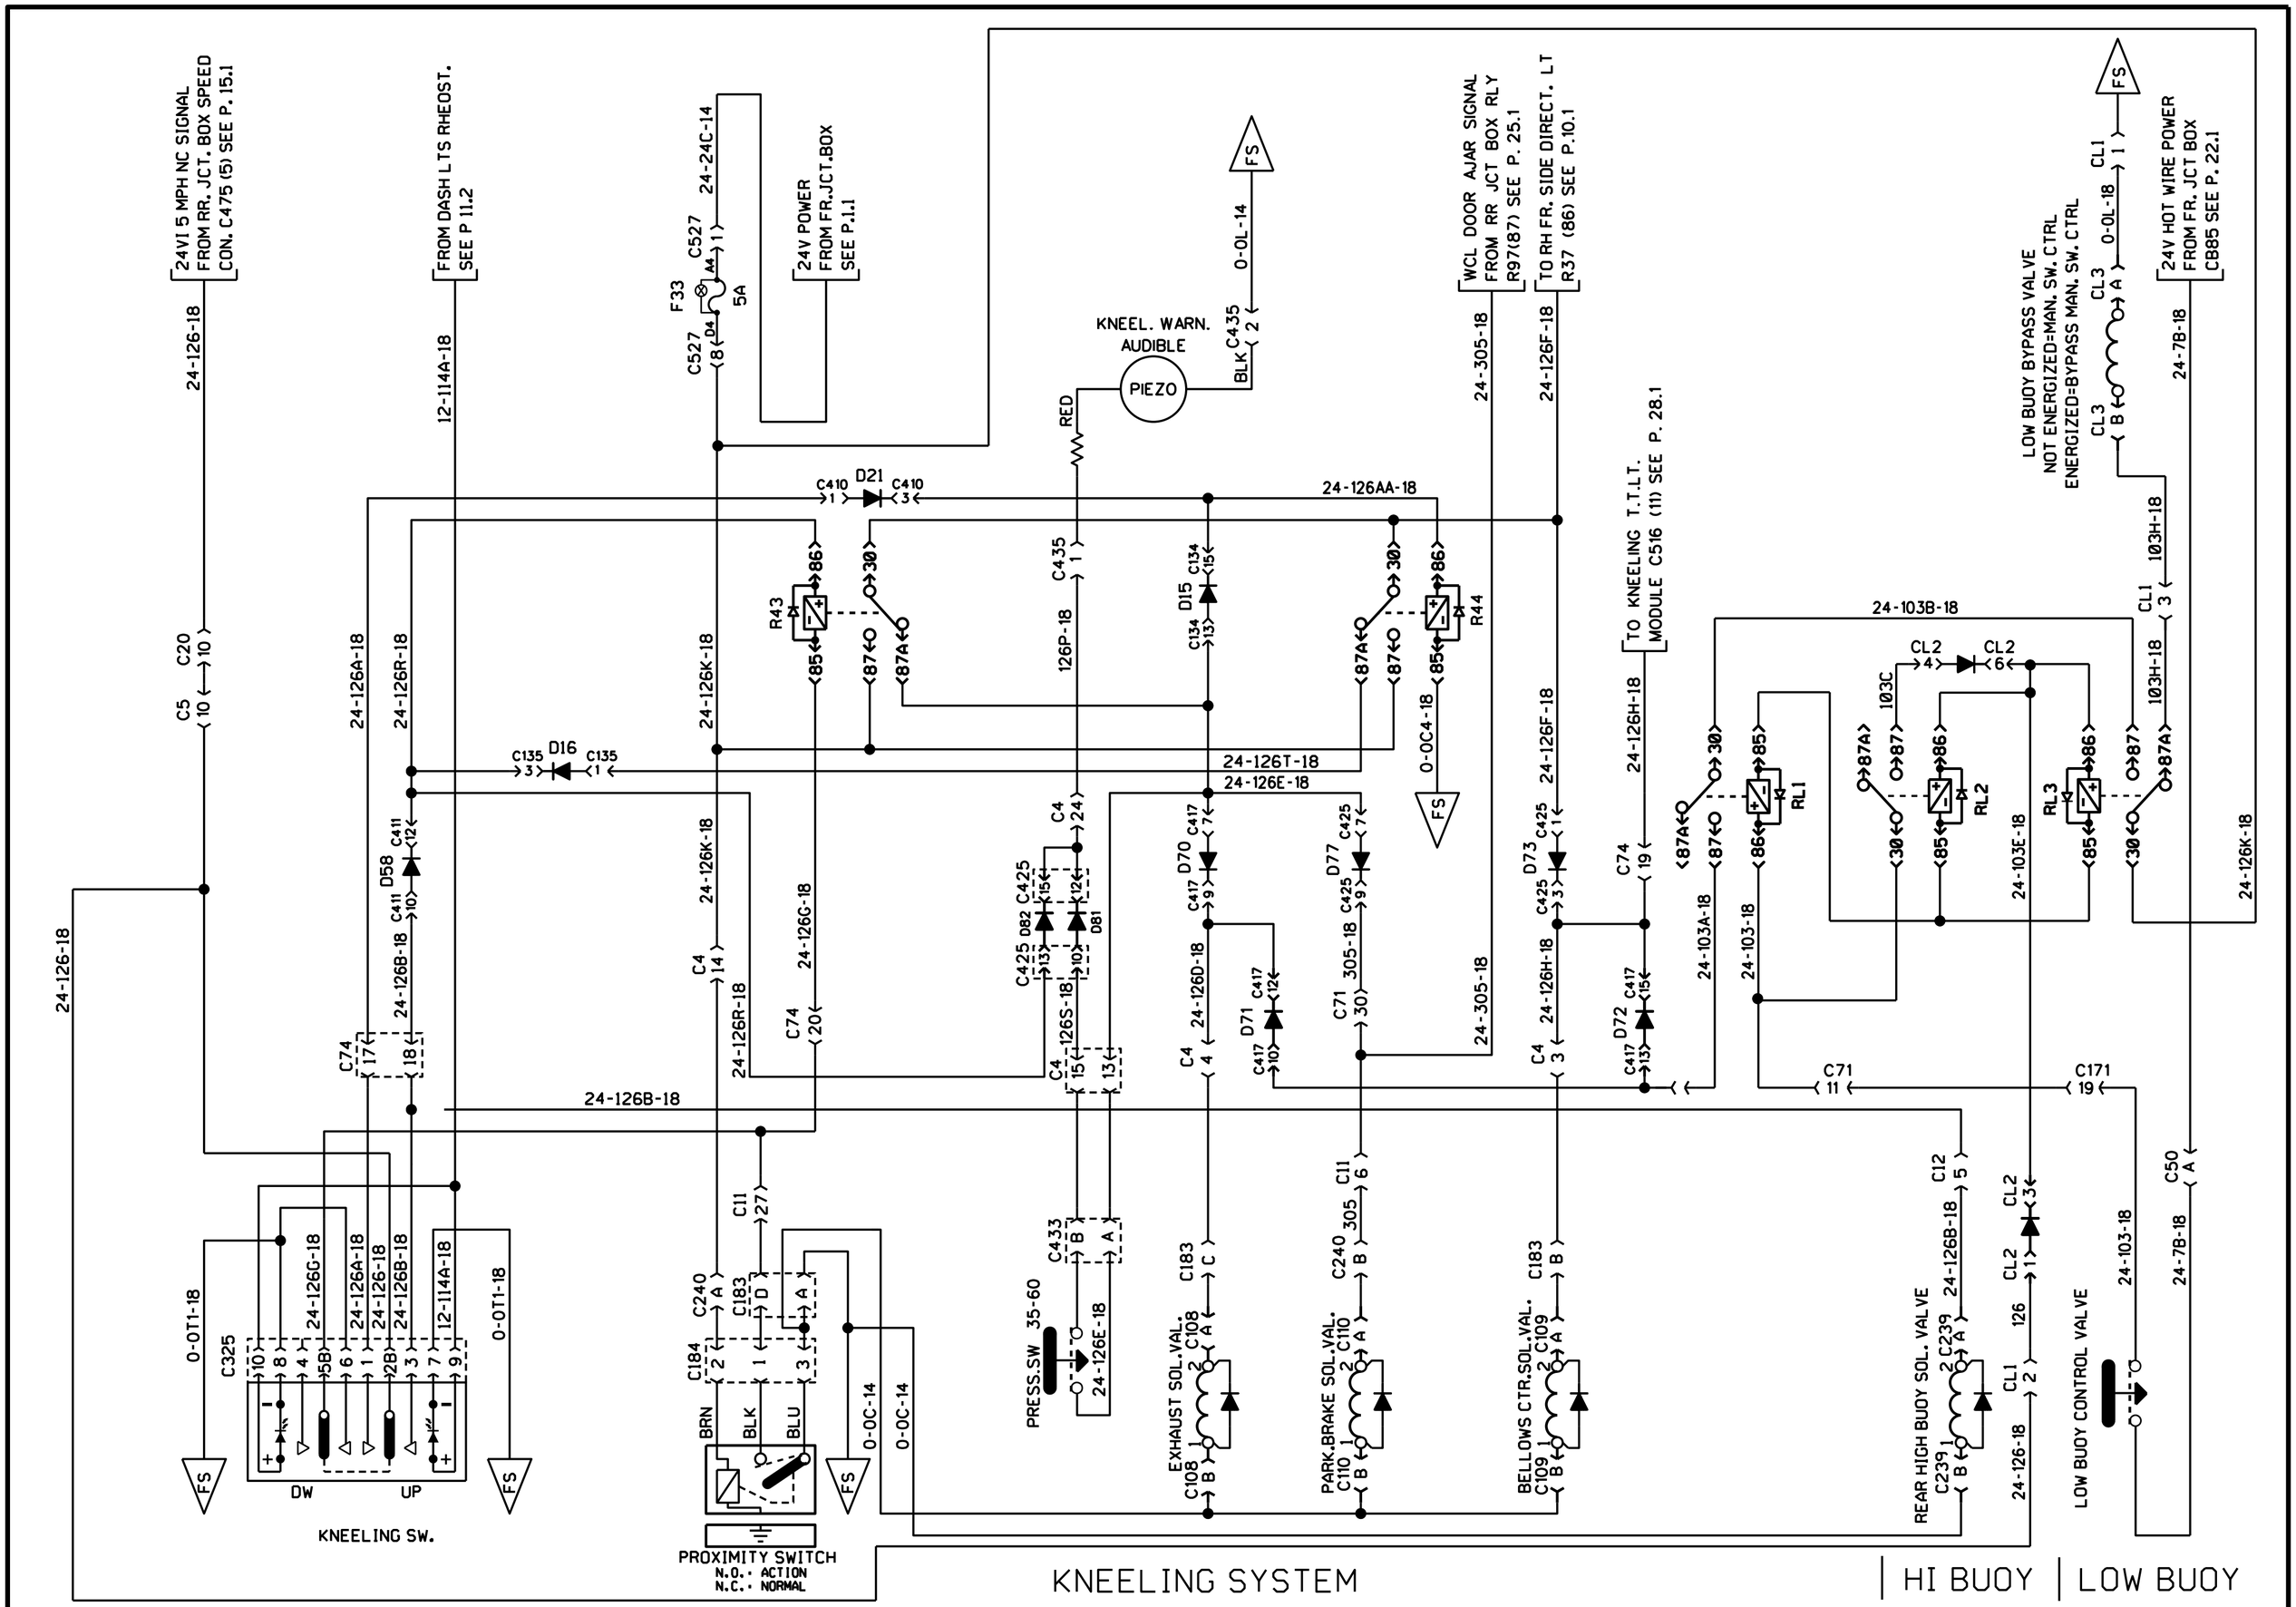

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 18.1sp3	REVISION 00

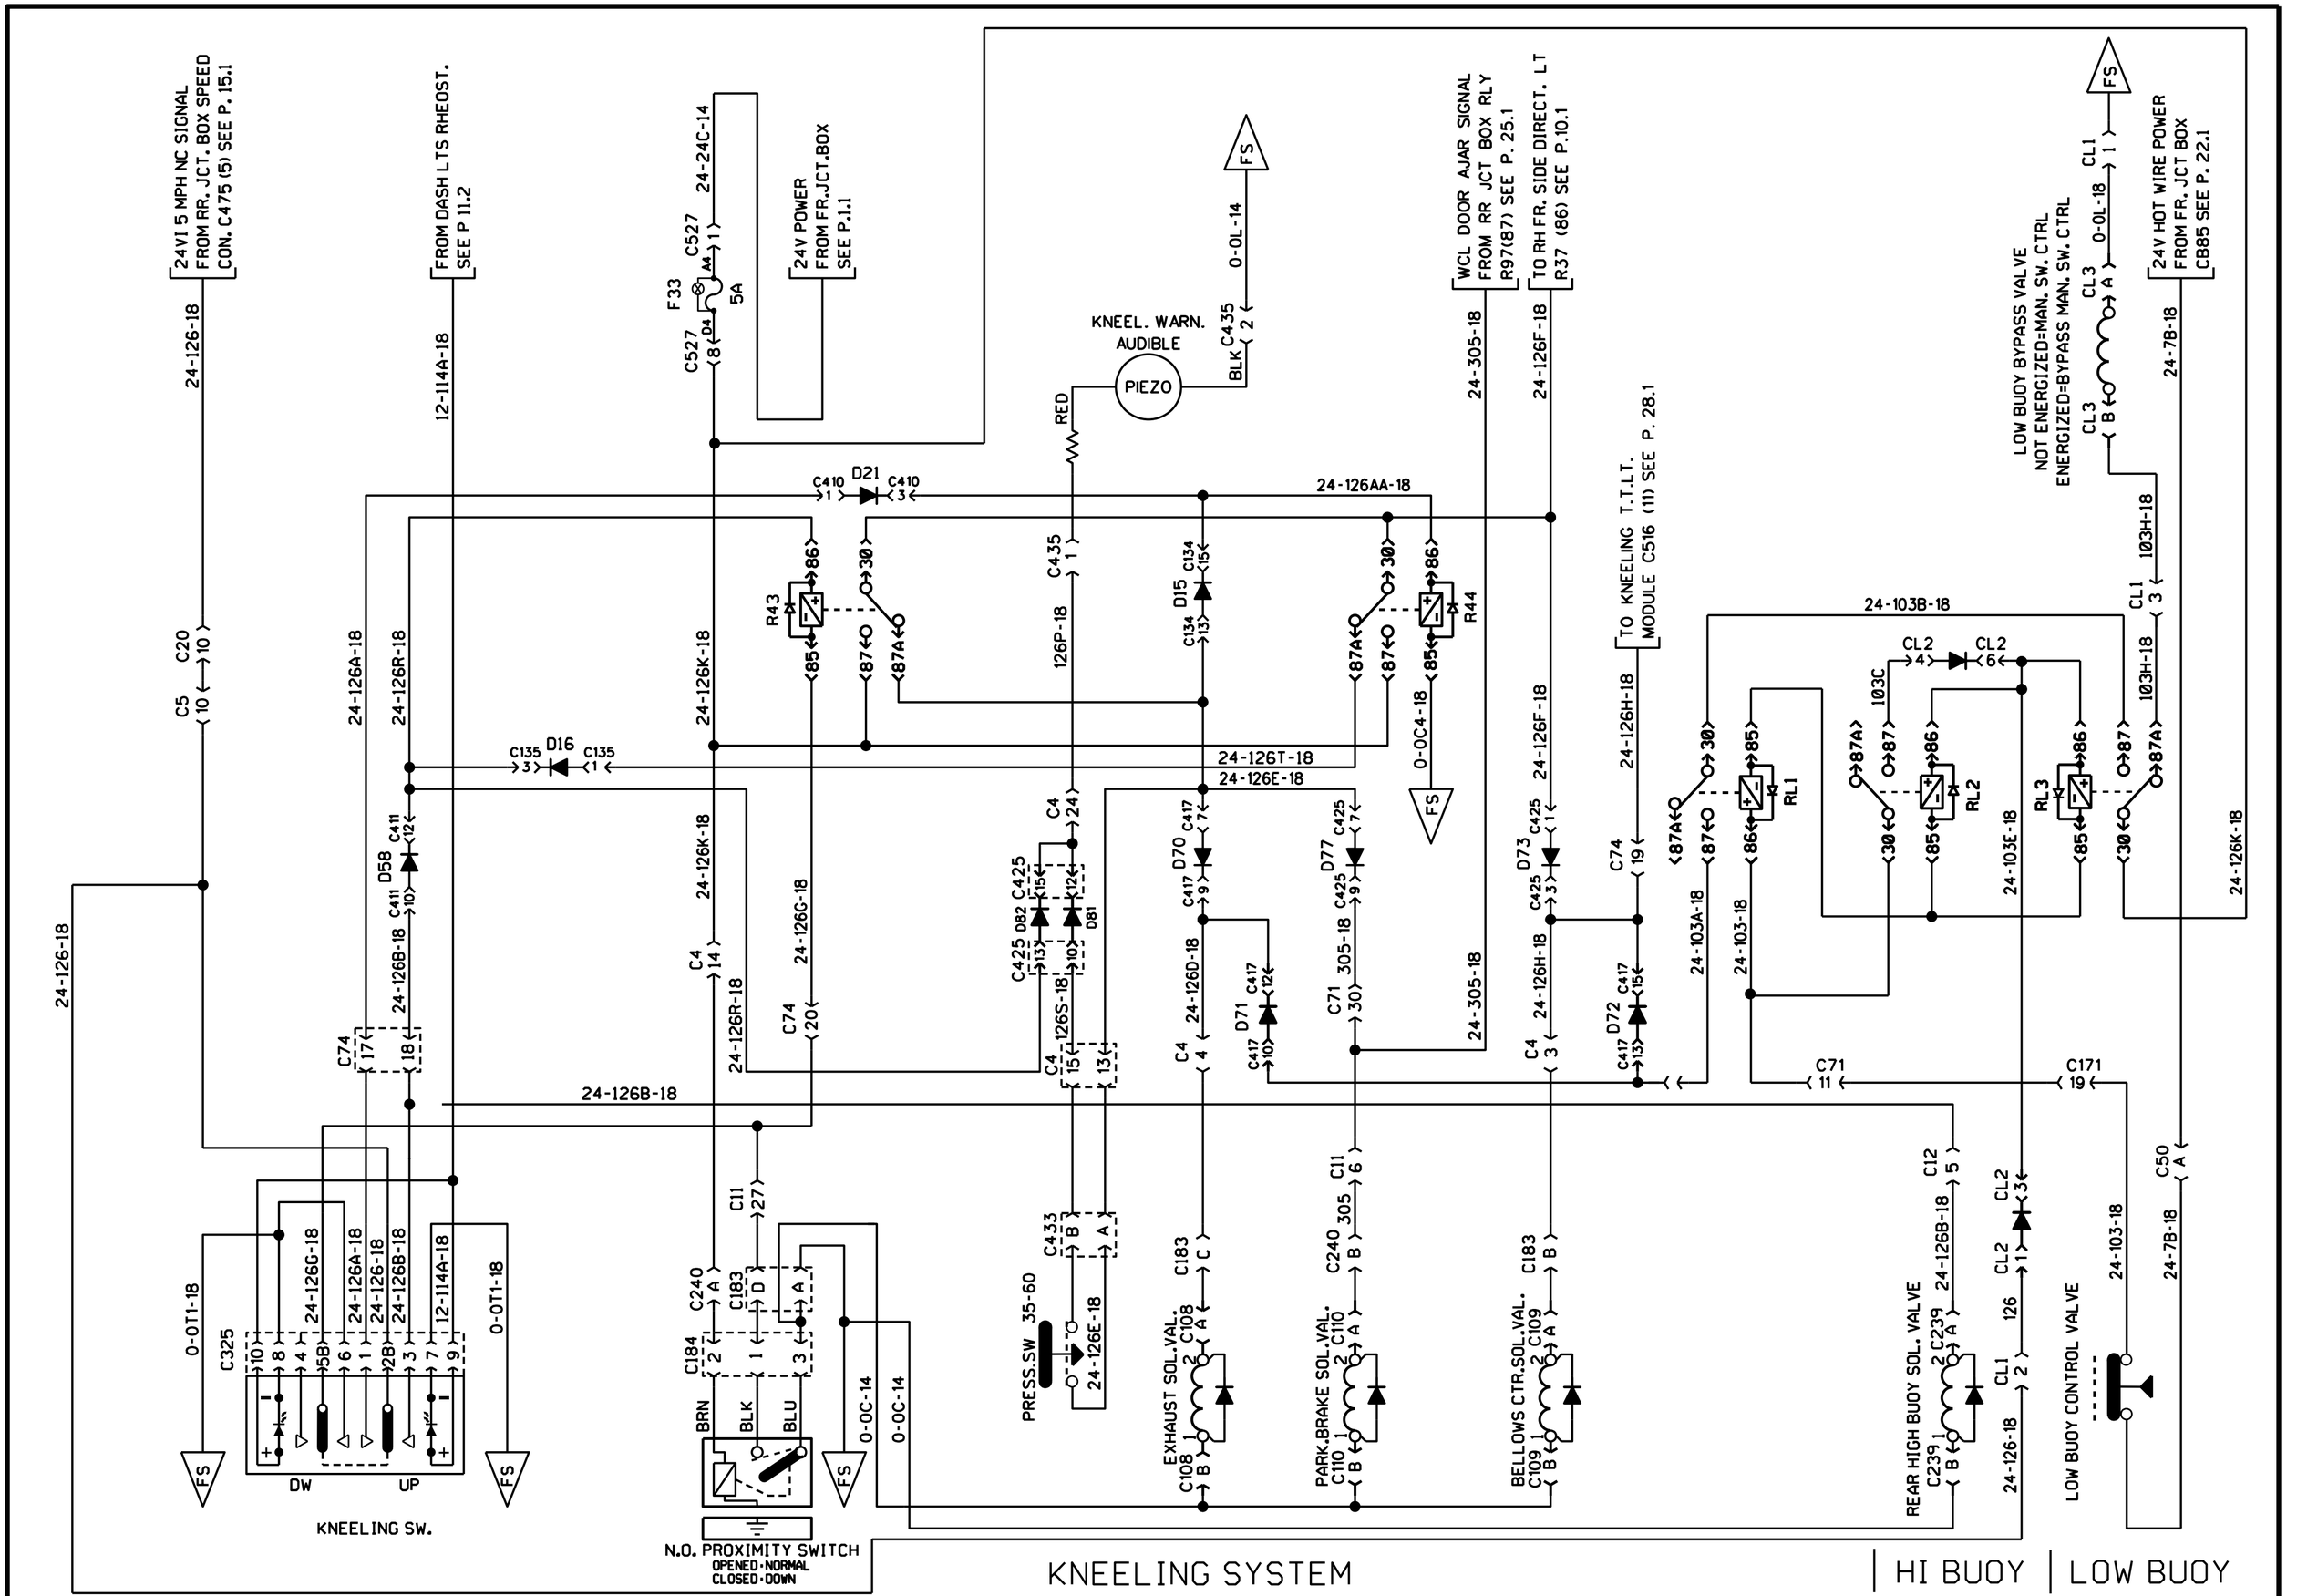
24VI 5 MPH NC SIGNAL
FROM RR. JCT. BOX SPEED
CON. C475 (5) SEE P. 15.1
FROM DASH LTS RHEOST.
SEE P 11.2
24V POWER
FROM FR.JCT.BOX
SEE P.1.1
WCL DOOR AJAR SIGNAL
FROM RR JCT BOX RLY
R97(87) SEE P. 25.1
TO RH FR. SIDE DIRECT. LT
R37 (86) SEE P.10.1
TO KNEELING T.T.LT.
MODULE C516 (11) SEE P. 28.1
LOW BUOY BYPASS VALVE
NOT ENERGIZED=MAN. SW. CTRL
ENERGIZED=BYPASS MAN. SW. CTRL
24V HOT WIRE POWER
FROM FR. JCT BOX
CB85 SEE P. 22.1
KNEEL. WARN.
AUDIBLE
PIEZO
RED
BLK
F33
5A
24-24C-14
0-0L-14
24-305-18
24-126F-18
24-126AA-18
24-126A-18
24-126R-18
24-126K-18
24-126T-18
24-126E-18
24-126G-18
24-126B-18
24-126-18
24-126H-18
24-126D-18
24-126S-18
24-103B-18
24-103-18
24-103A-18
24-103E-18
24-7B-18
103H-18
103C
0-0C4-18
0-0T1-18
0-0C-14
126P-18
126
305-18
305
KNEELING SW.
DW
UP
N.O. PROXIMITY SWITCH
OPENED·NORMAL
CLOSED·DOWN
PRESS.SW 35-60
EXHAUST SOL.VAL.
PARK-BRAKE SOL.VAL.
BELLOWS CTR.SOL.VAL.
REAR HIGH BUOY SOL. VALVE
LOW BUOY CONTROL VALVE
KNEELING SYSTEM
HI BUOY
LOW BUOY

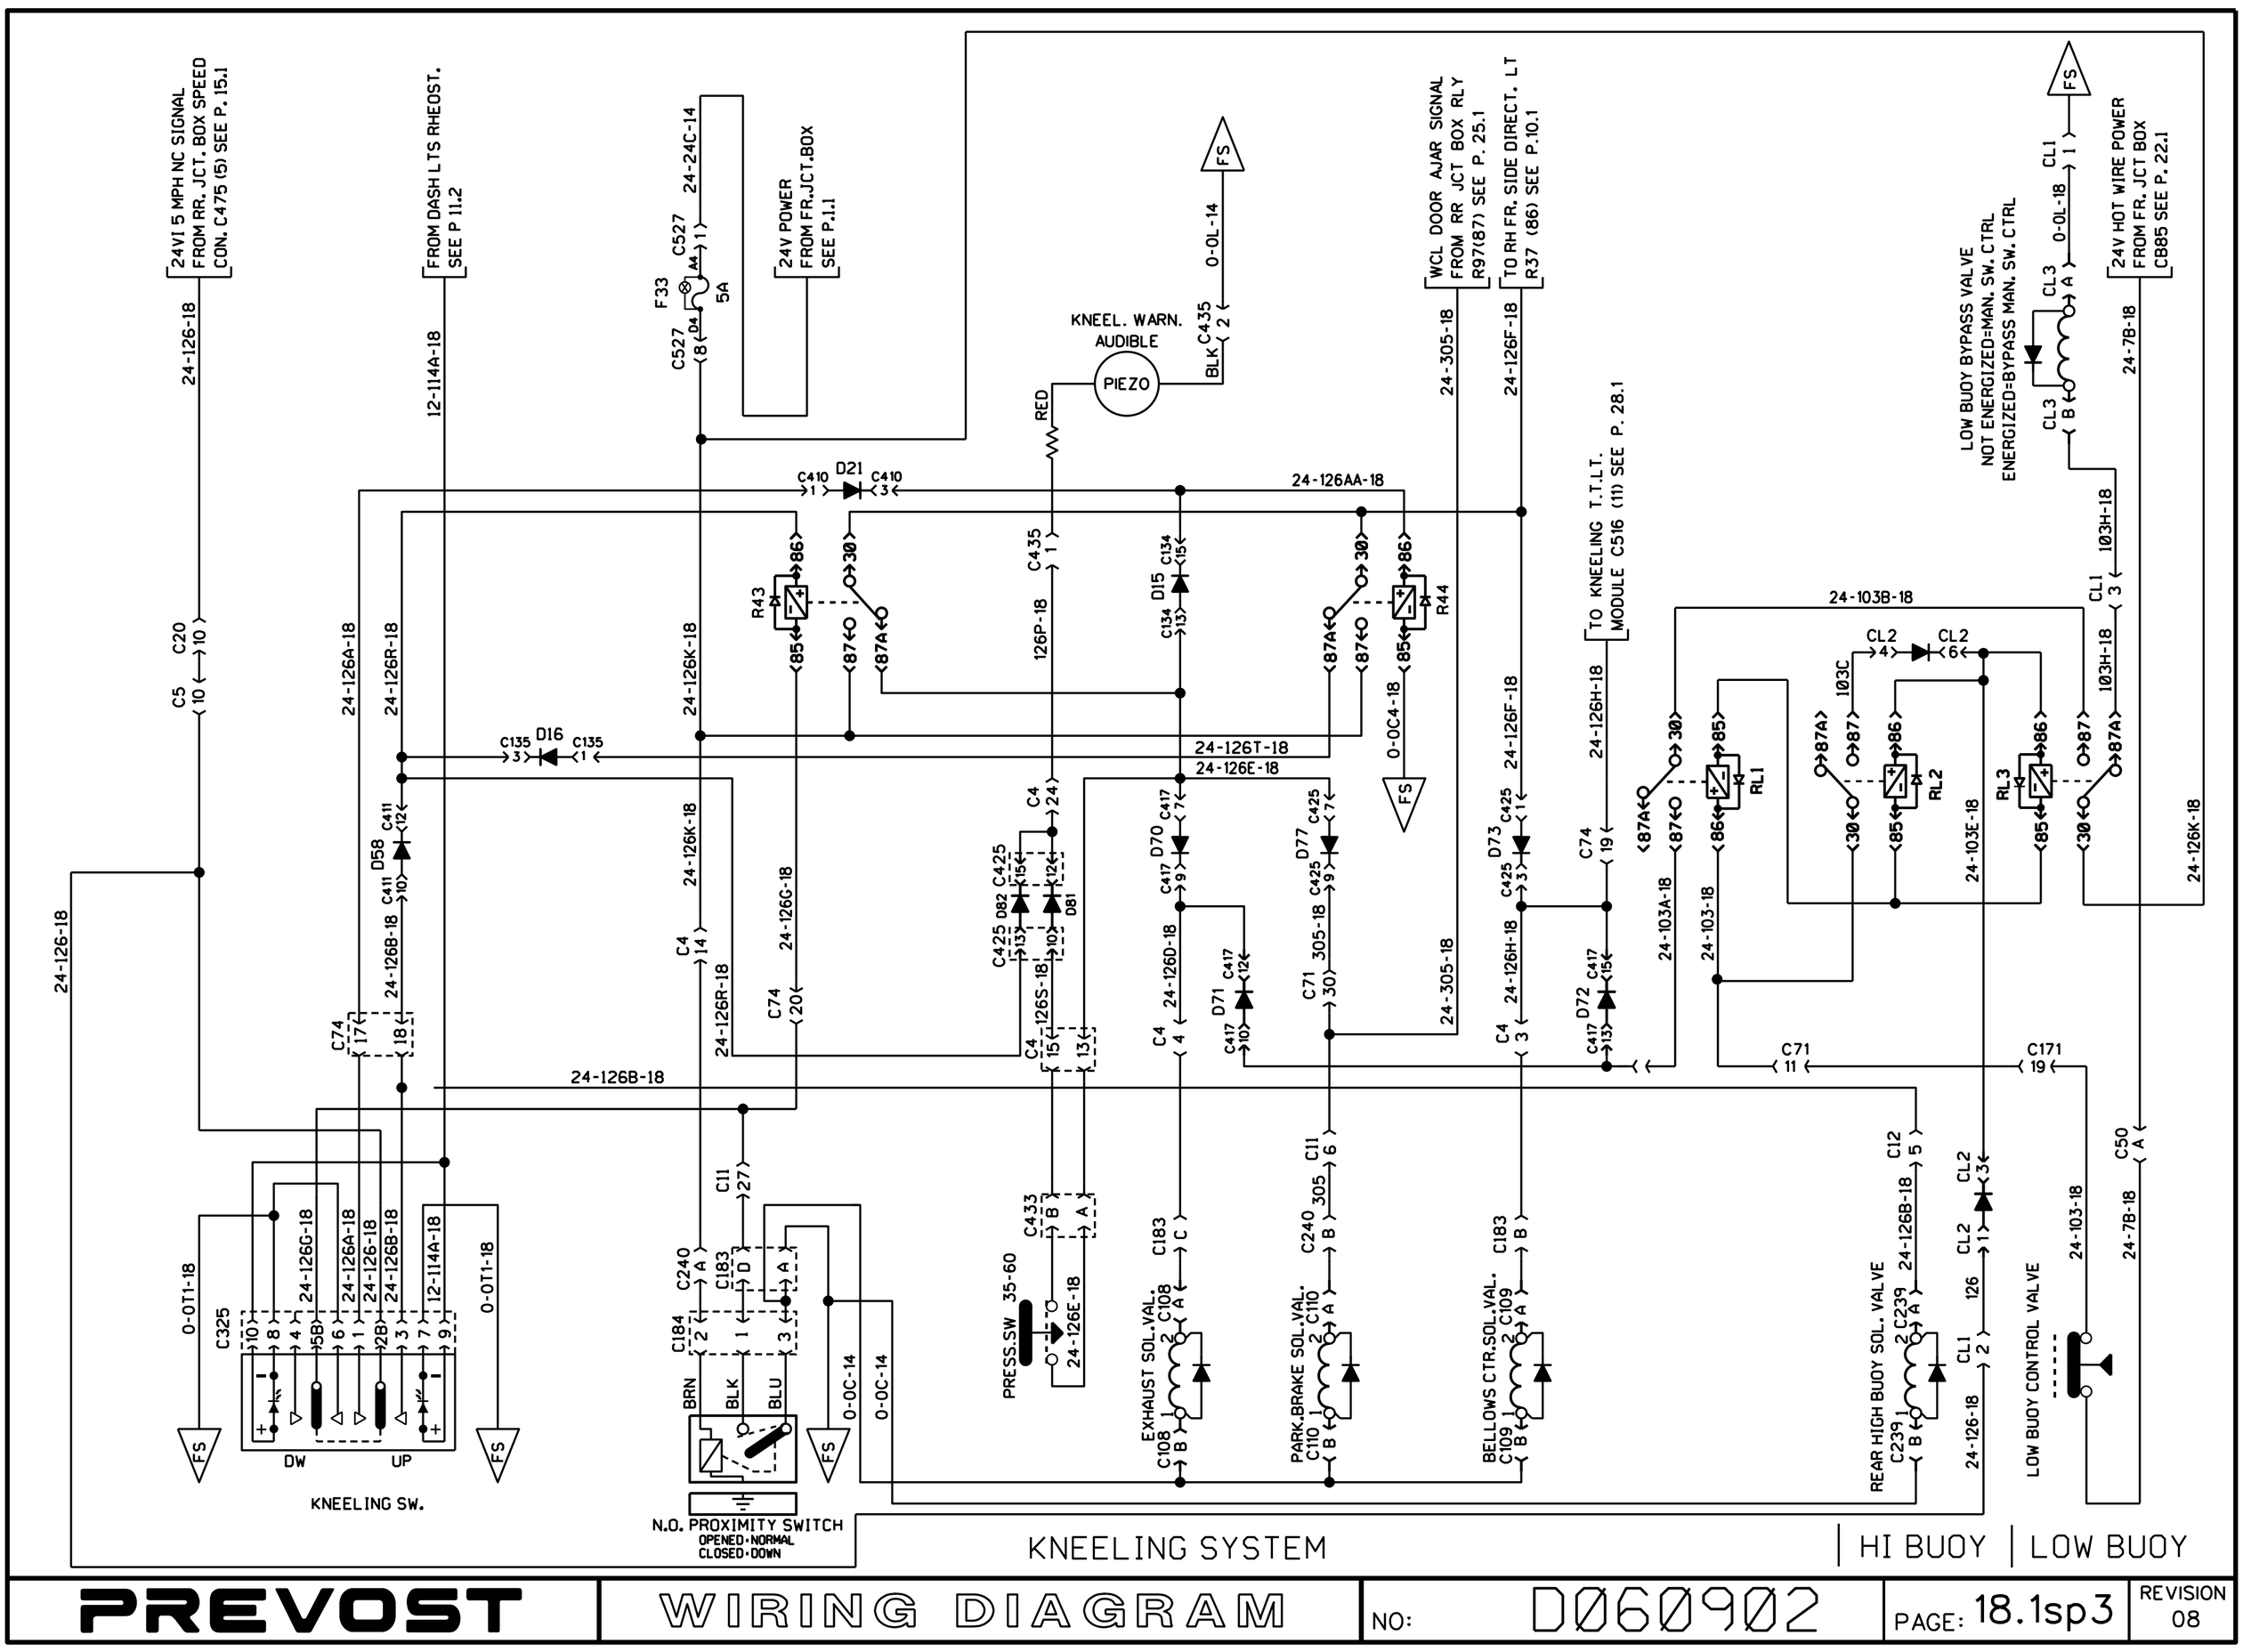

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 18.1sp3	REVISION 08

LUGGAGE DOOR LOCK

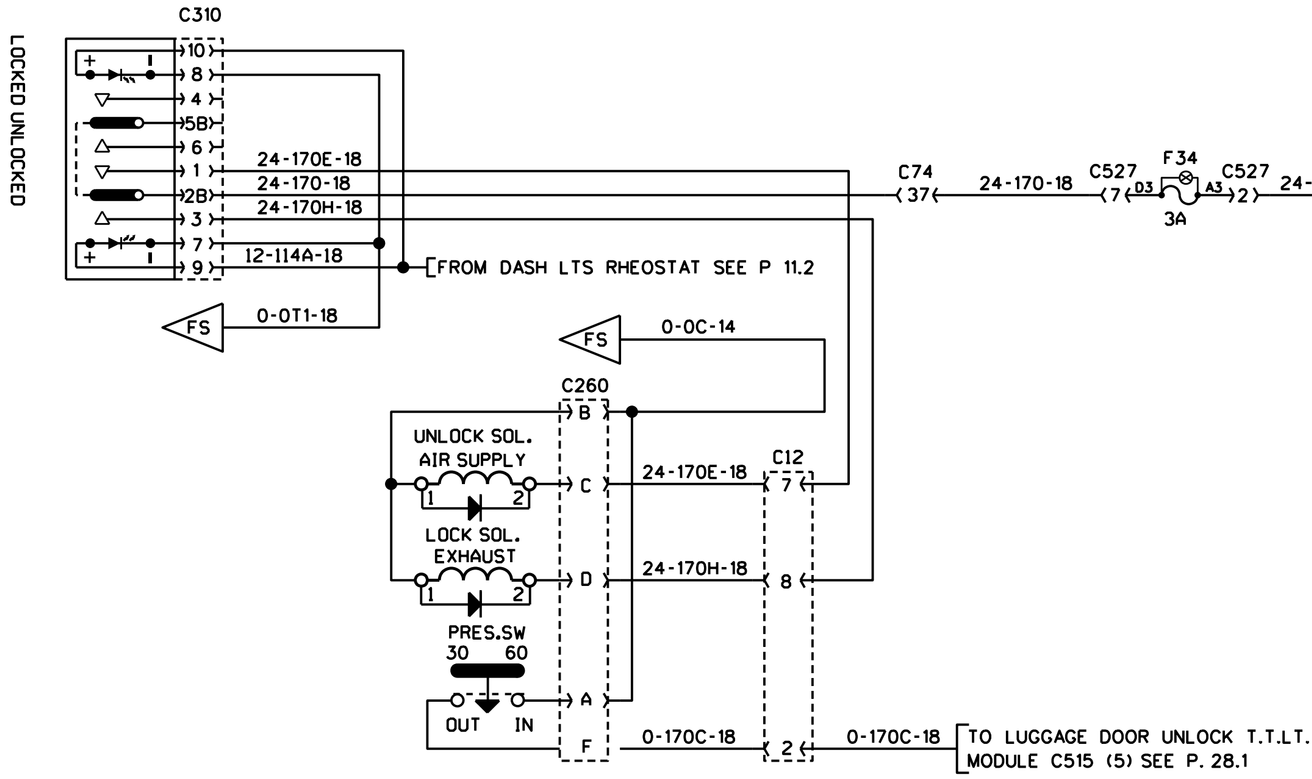

ENGINE BRAKE SYSTEM

WITH WORLD TRANSMISSION ONLY

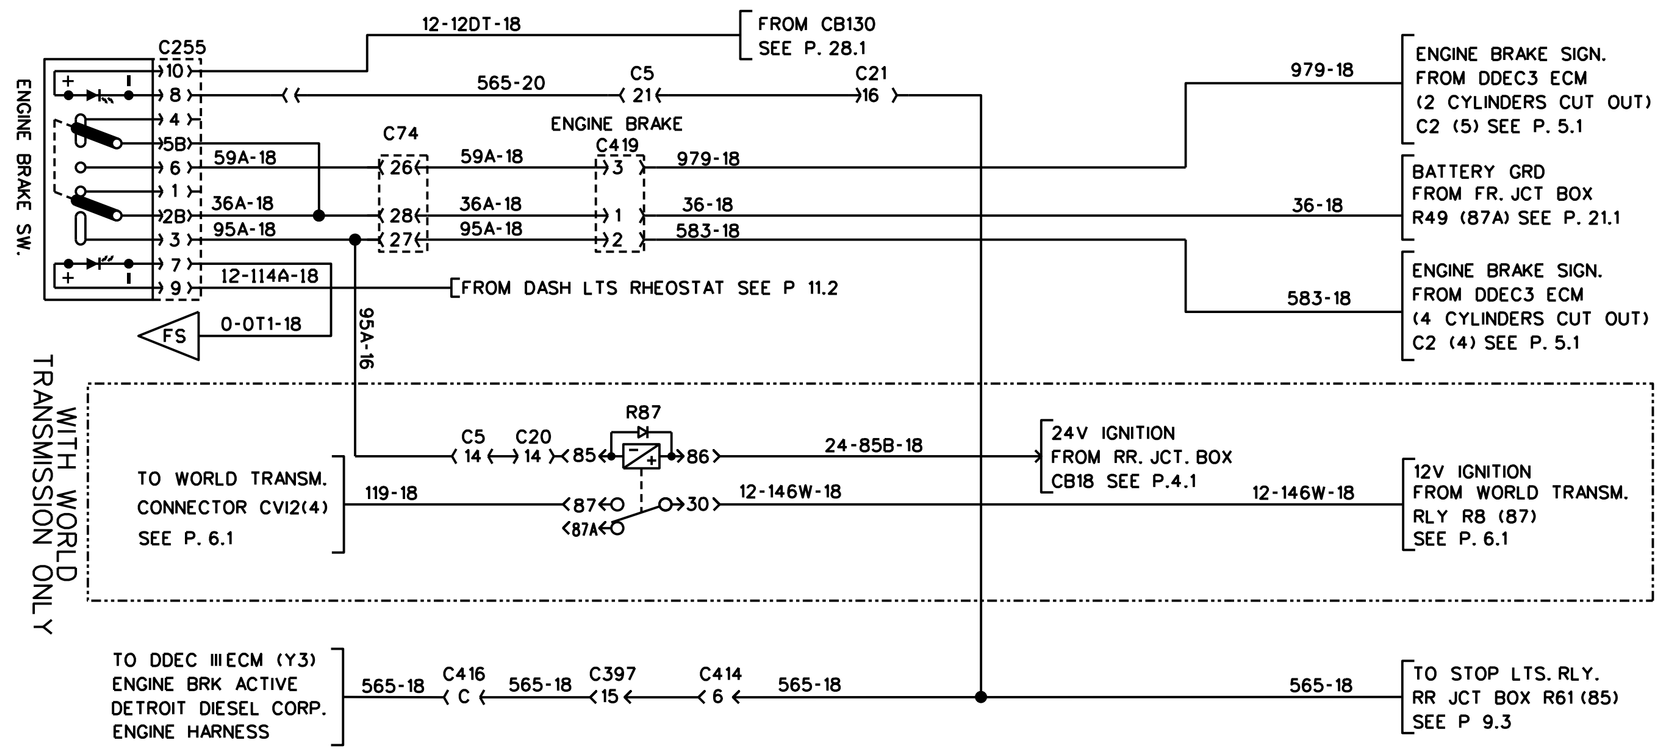

RETARDER SYSTEM

(WORLD TRANSMISSION)

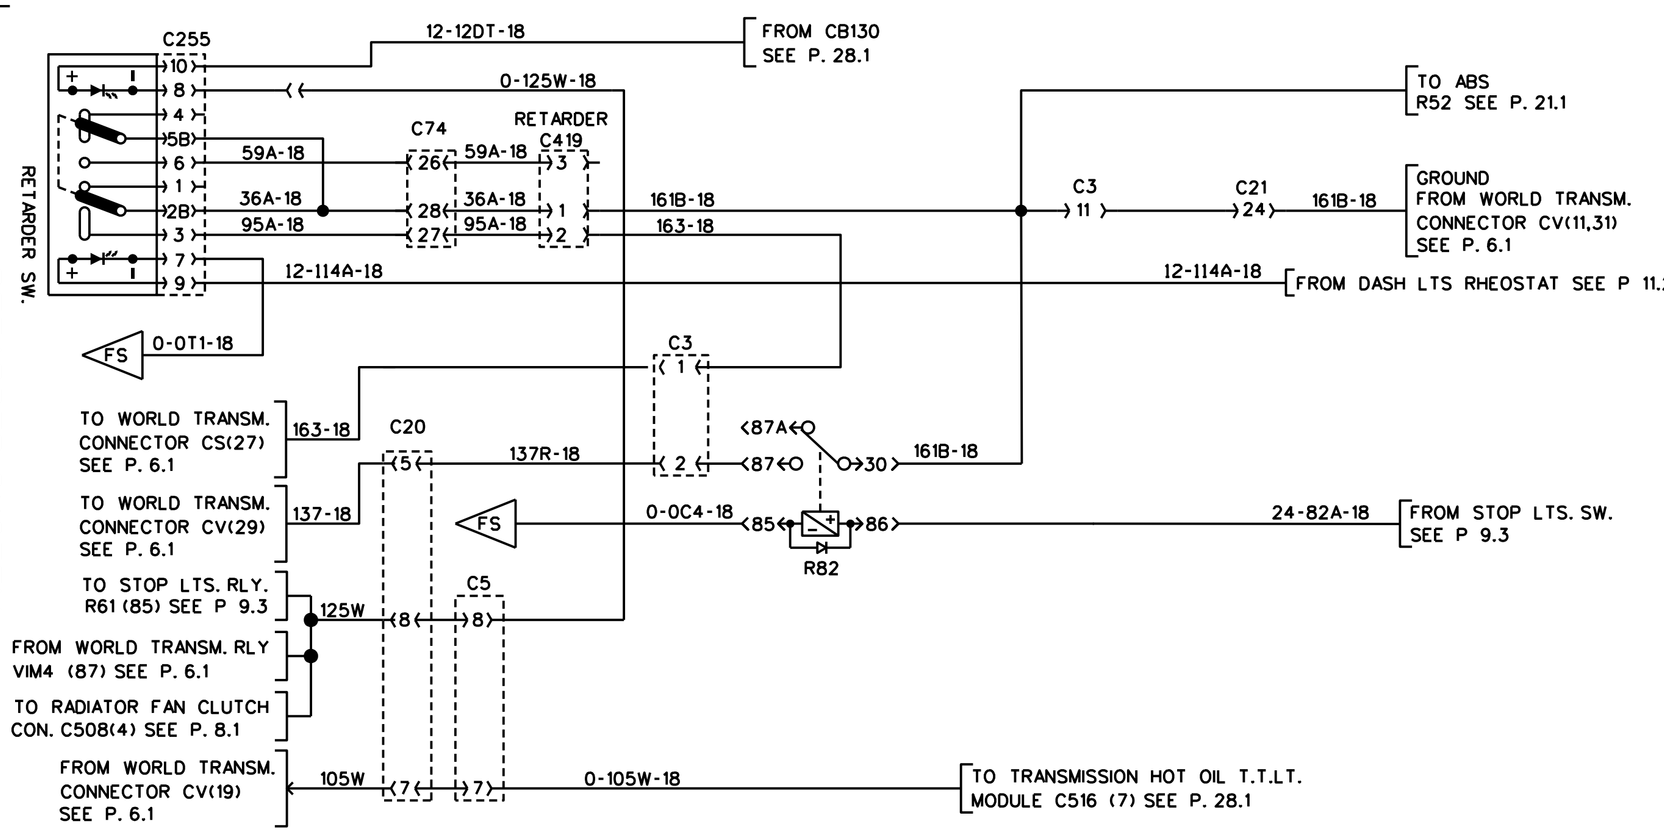

PREVOST | WIRING DIAGRAM

NO: D06902 | PAGE: 19.1 | REVISION 08

LUGGAGE DOOR LOCK

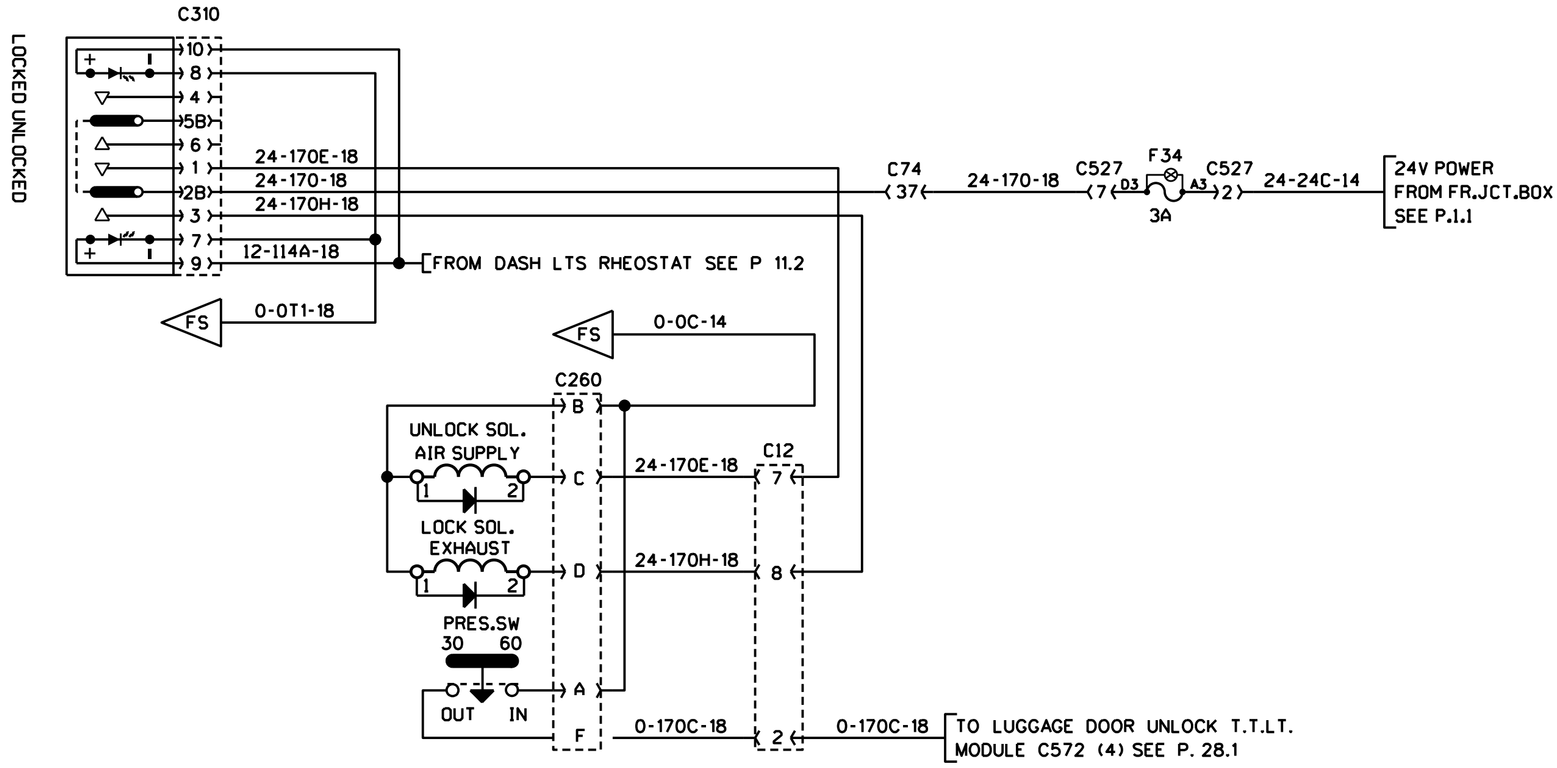

ENGINE BRAKE SYSTEM

WITH WORLD TRANSMISSION ONLY

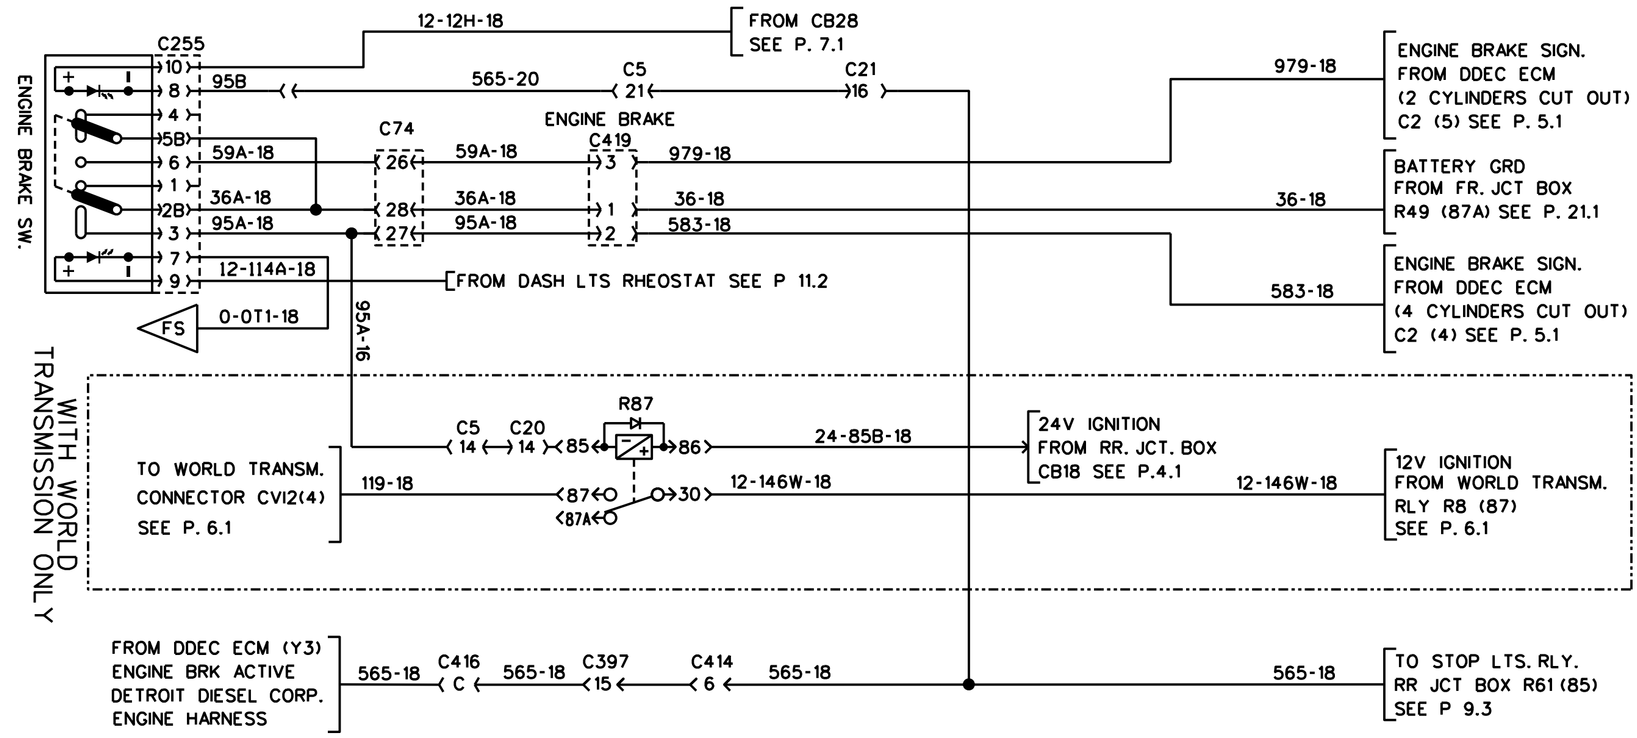

RETARDER SYSTEM

(WORLD TRANSMISSION)

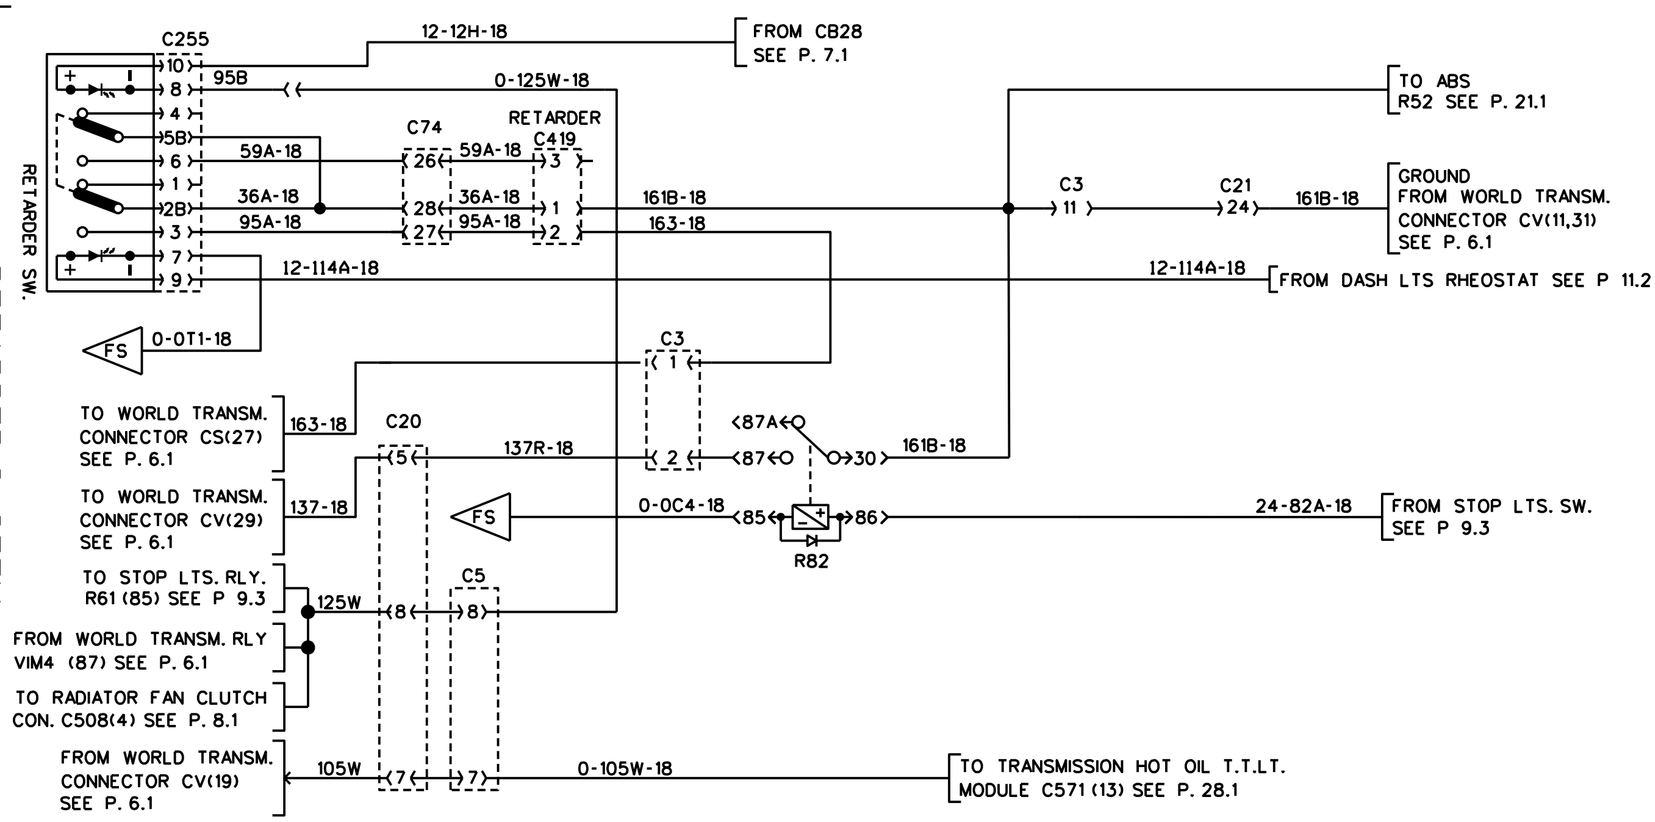

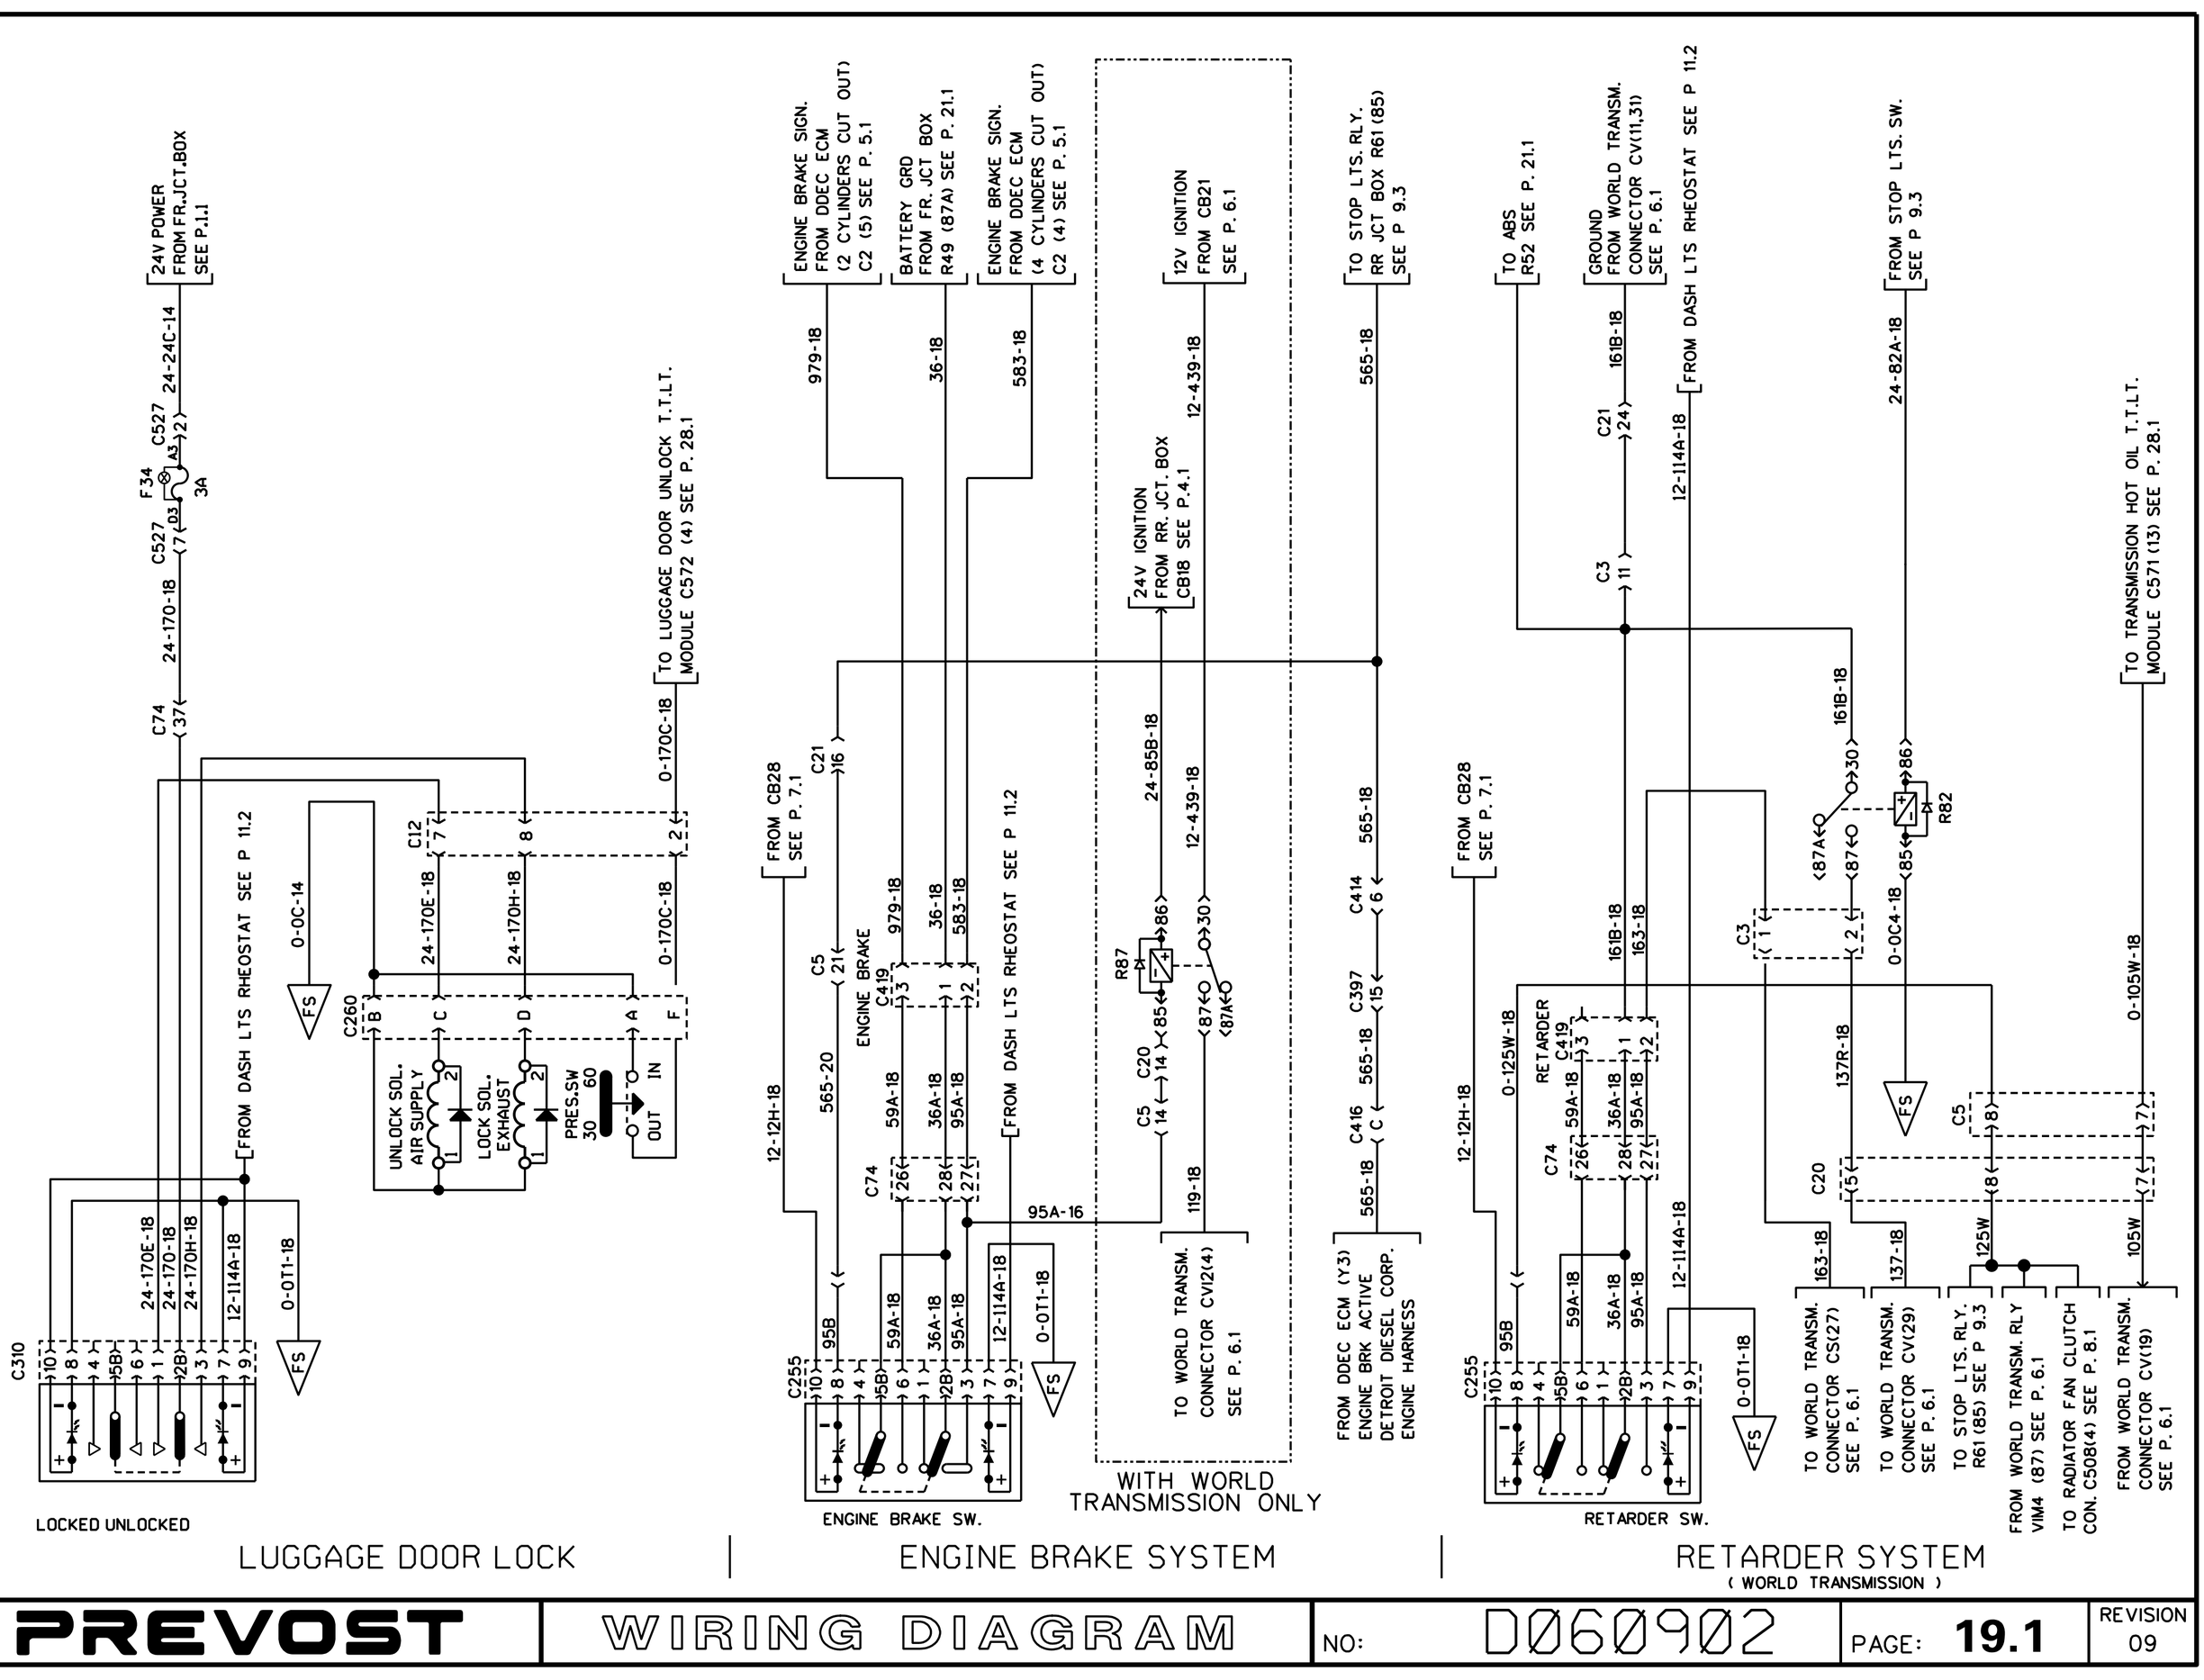
24V POWER
FROM FR.JCT.BOX
SEE P.1.1
24-24C-14
C527
F34
3A
24-170-18
C74
TO LUGGAGE DOOR UNLOCK T.T.L.T.
MODULE C572 (4) SEE P. 28.1
0-170C-18
FROM DASH LTS RHEOSTAT SEE P 11.2
0-0C-14
C12
24-170E-18
24-170H-18
C260
UNLOCK SOL. AIR SUPPLY
LOCK SOL. EXHAUST
PRES.SW
IN
OUT
C310
24-170E-18
24-170-18
24-170H-18
12-114A-18
0-0T1-18
LOCKED UNLOCKED
LUGGAGE DOOR LOCK
ENGINE BRAKE SIGN. FROM DDEC ECM (2 CYLINDERS CUT OUT) C2 (5) SEE P. 5.1
BATTERY GRD FROM FR. JCT BOX R49 (87A) SEE P. 21.1
ENGINE BRAKE SIGN. FROM DDEC ECM (4 CYLINDERS CUT OUT) C2 (4) SEE P. 5.1
12V IGNITION FROM CB21 SEE P. 6.1
24V IGNITION FROM RR. JCT. BOX CB18 SEE P.4.1
TO STOP LTS. RLY. RR JCT BOX R61 (85) SEE P 9.3
979-18
36-18
583-18
565-18
24-85B-18
12-439-18
FROM CB28 SEE P. 7.1
565-20
95A-16
119-18
R87
C5
C74
C419
ENGINE BRAKE
59A-18
36A-18
95A-18
C255
95B
0-0T1-18
FROM DASH LTS RHEOSTAT SEE P 11.2
TO WORLD TRANSM. CONNECTOR CVI2(4) SEE P. 6.1
FROM DDEC ECM (Y3) ENGINE BRK ACTIVE DETROIT DIESEL CORP. ENGINE HARNESS
C416
C397
C414
565-18
ENGINE BRAKE SW.
WITH WORLD TRANSMISSION ONLY
ENGINE BRAKE SYSTEM
TO ABS R52 SEE P. 21.1
GROUND FROM WORLD TRANSM. CONNECTOR CV(11,31) SEE P. 6.1
C21
C3
161B-18
12-114A-18
FROM DASH LTS RHEOSTAT SEE P 11.2
FROM STOP LTS. SW. SEE P 9.3
24-82A-18
TO TRANSMISSION HOT OIL T.T.L.T. MODULE C571 (13) SEE P. 28.1
FROM CB28 SEE P. 7.1
0-125W-18
RETARDER
C20
137R-18
0-0C4-18
R82
163-18
125W
105W
0-105W-18
TO WORLD TRANSM. CONNECTOR CS(27) SEE P. 6.1
TO WORLD TRANSM. CONNECTOR CV(29) SEE P. 6.1
TO STOP LTS. RLY. R61(85) SEE P 9.3
FROM WORLD TRANSM. RLY VIM4 (87) SEE P. 6.1
TO RADIATOR FAN CLUTCH CON. C508(4) SEE P. 8.1
FROM WORLD TRANSM. CONNECTOR CV(19) SEE P. 6.1
RETARDER SW.
RETARDER SYSTEM
(WORLD TRANSMISSION)

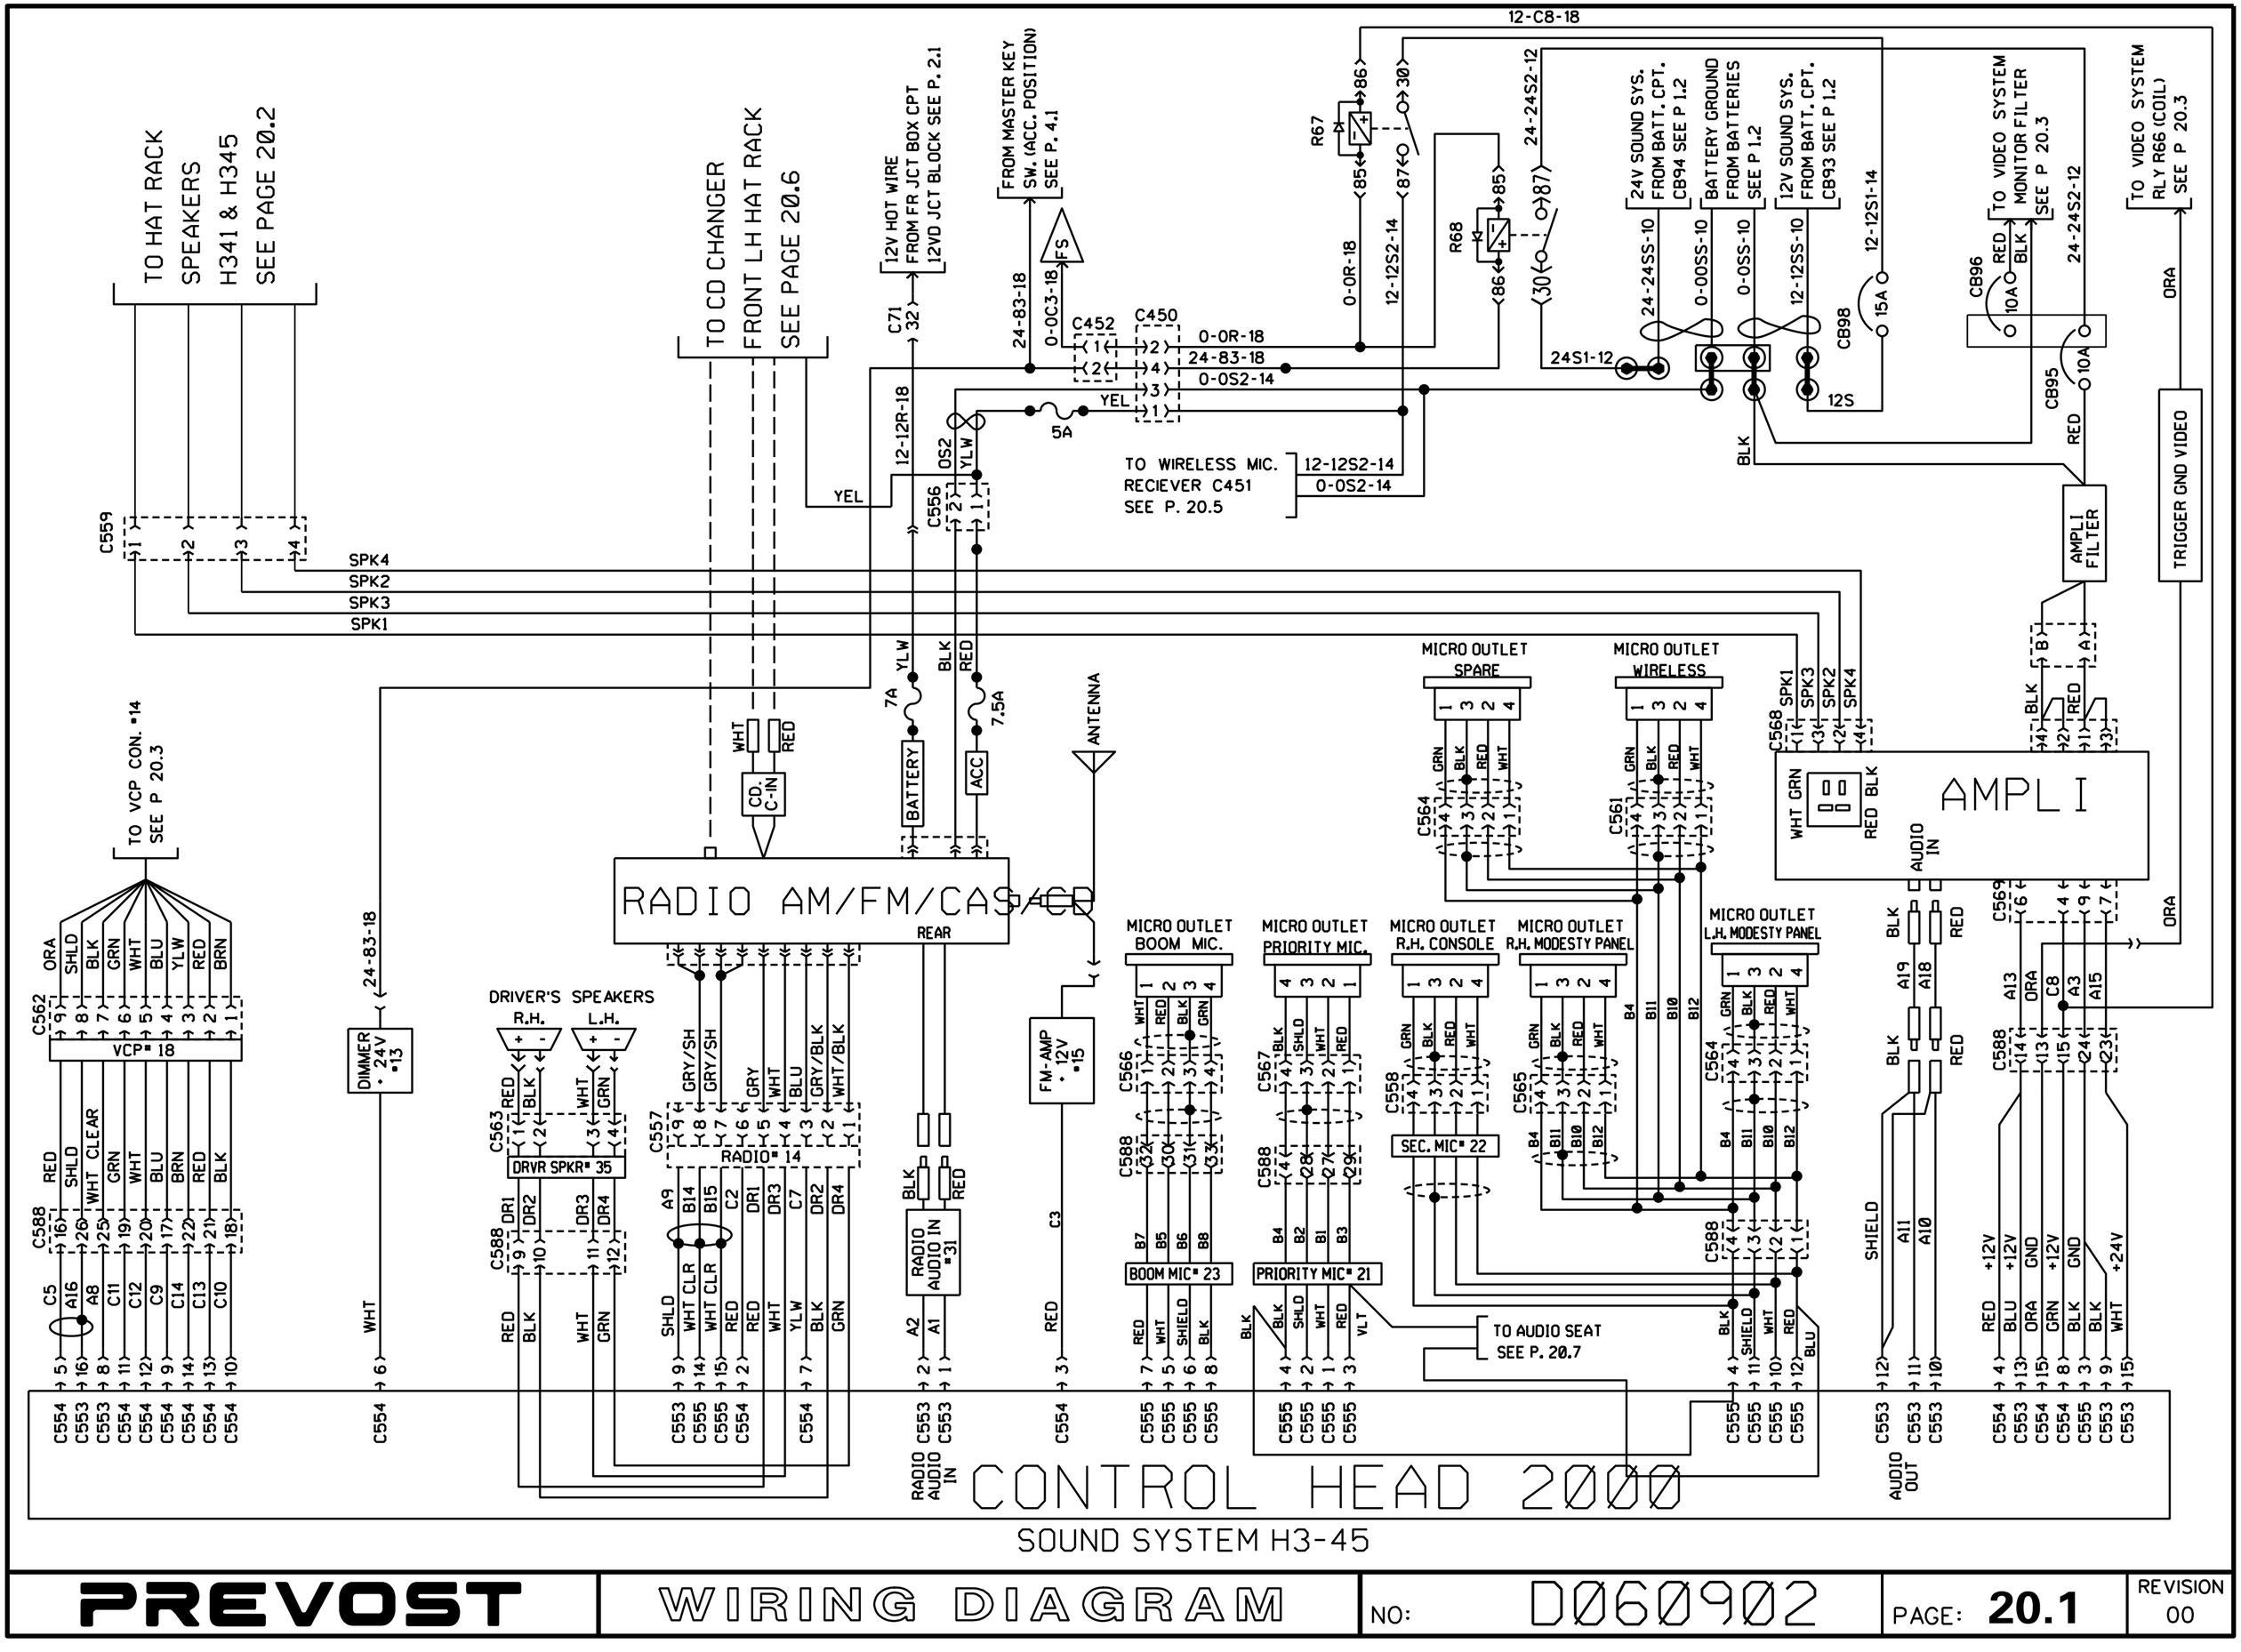

SOUND SYSTEM H3-45

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 20.1	REVISION 00

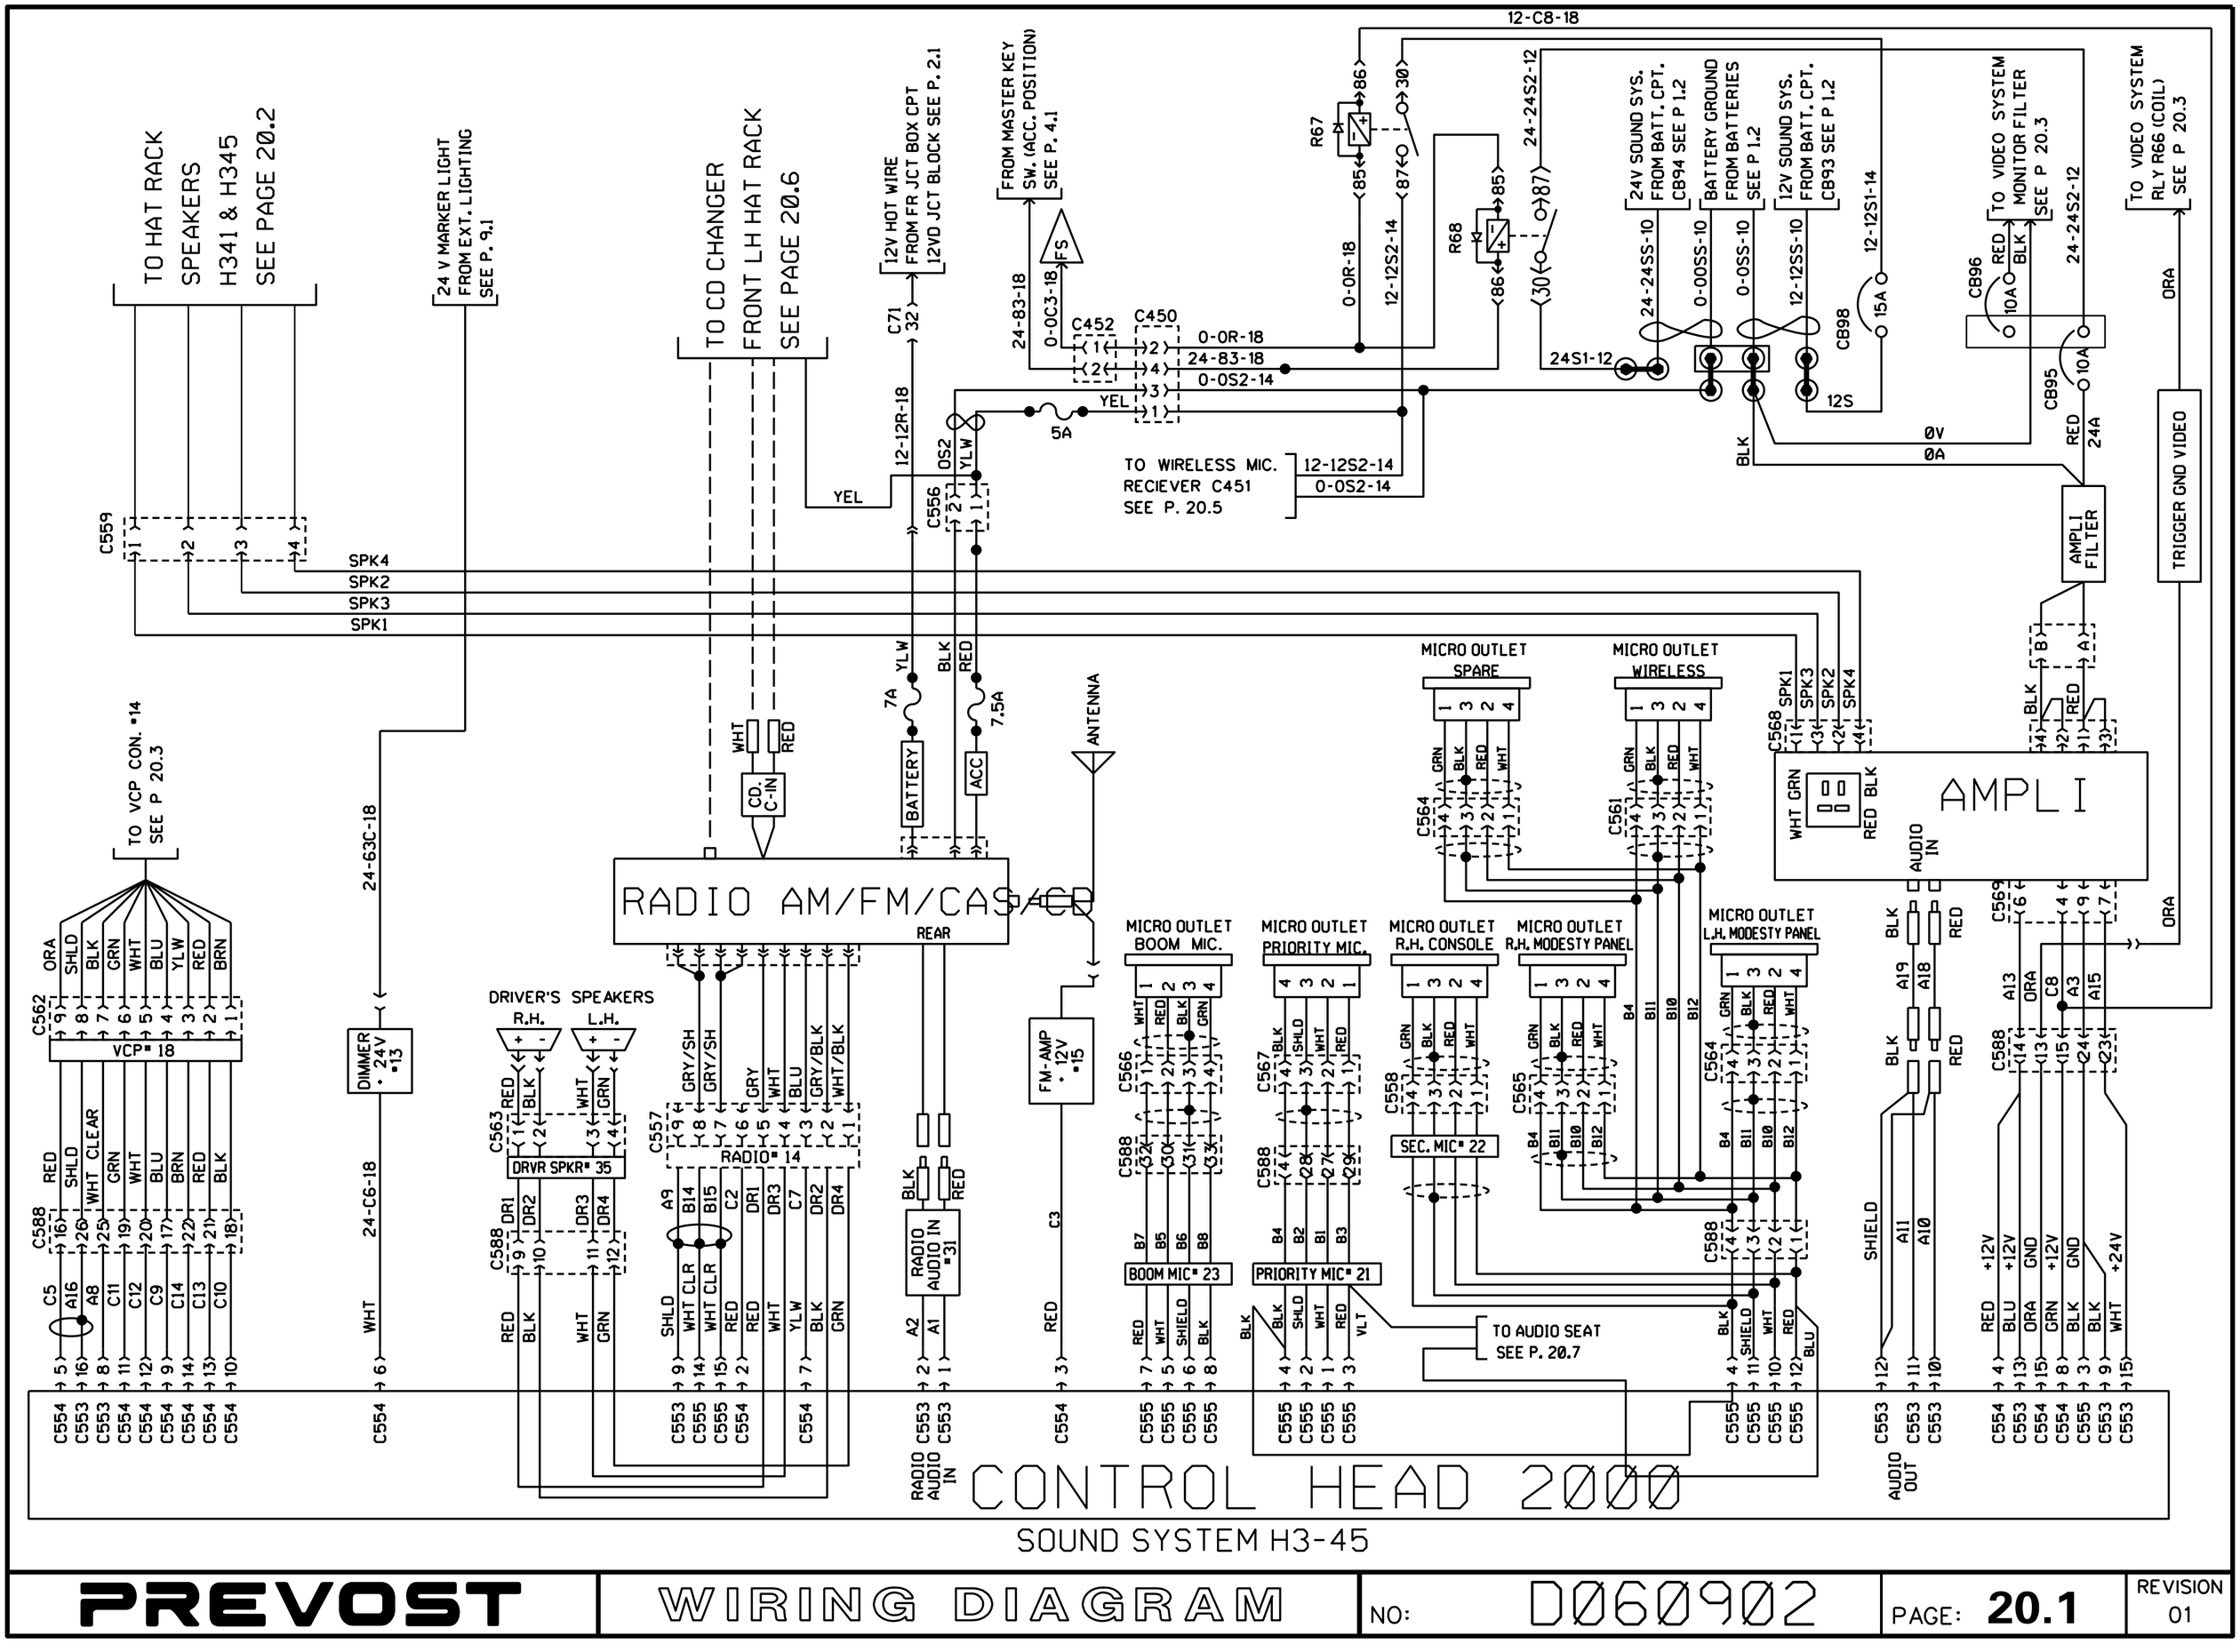

SOUND SYSTEM H3-45

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 20.1	REVISION 01

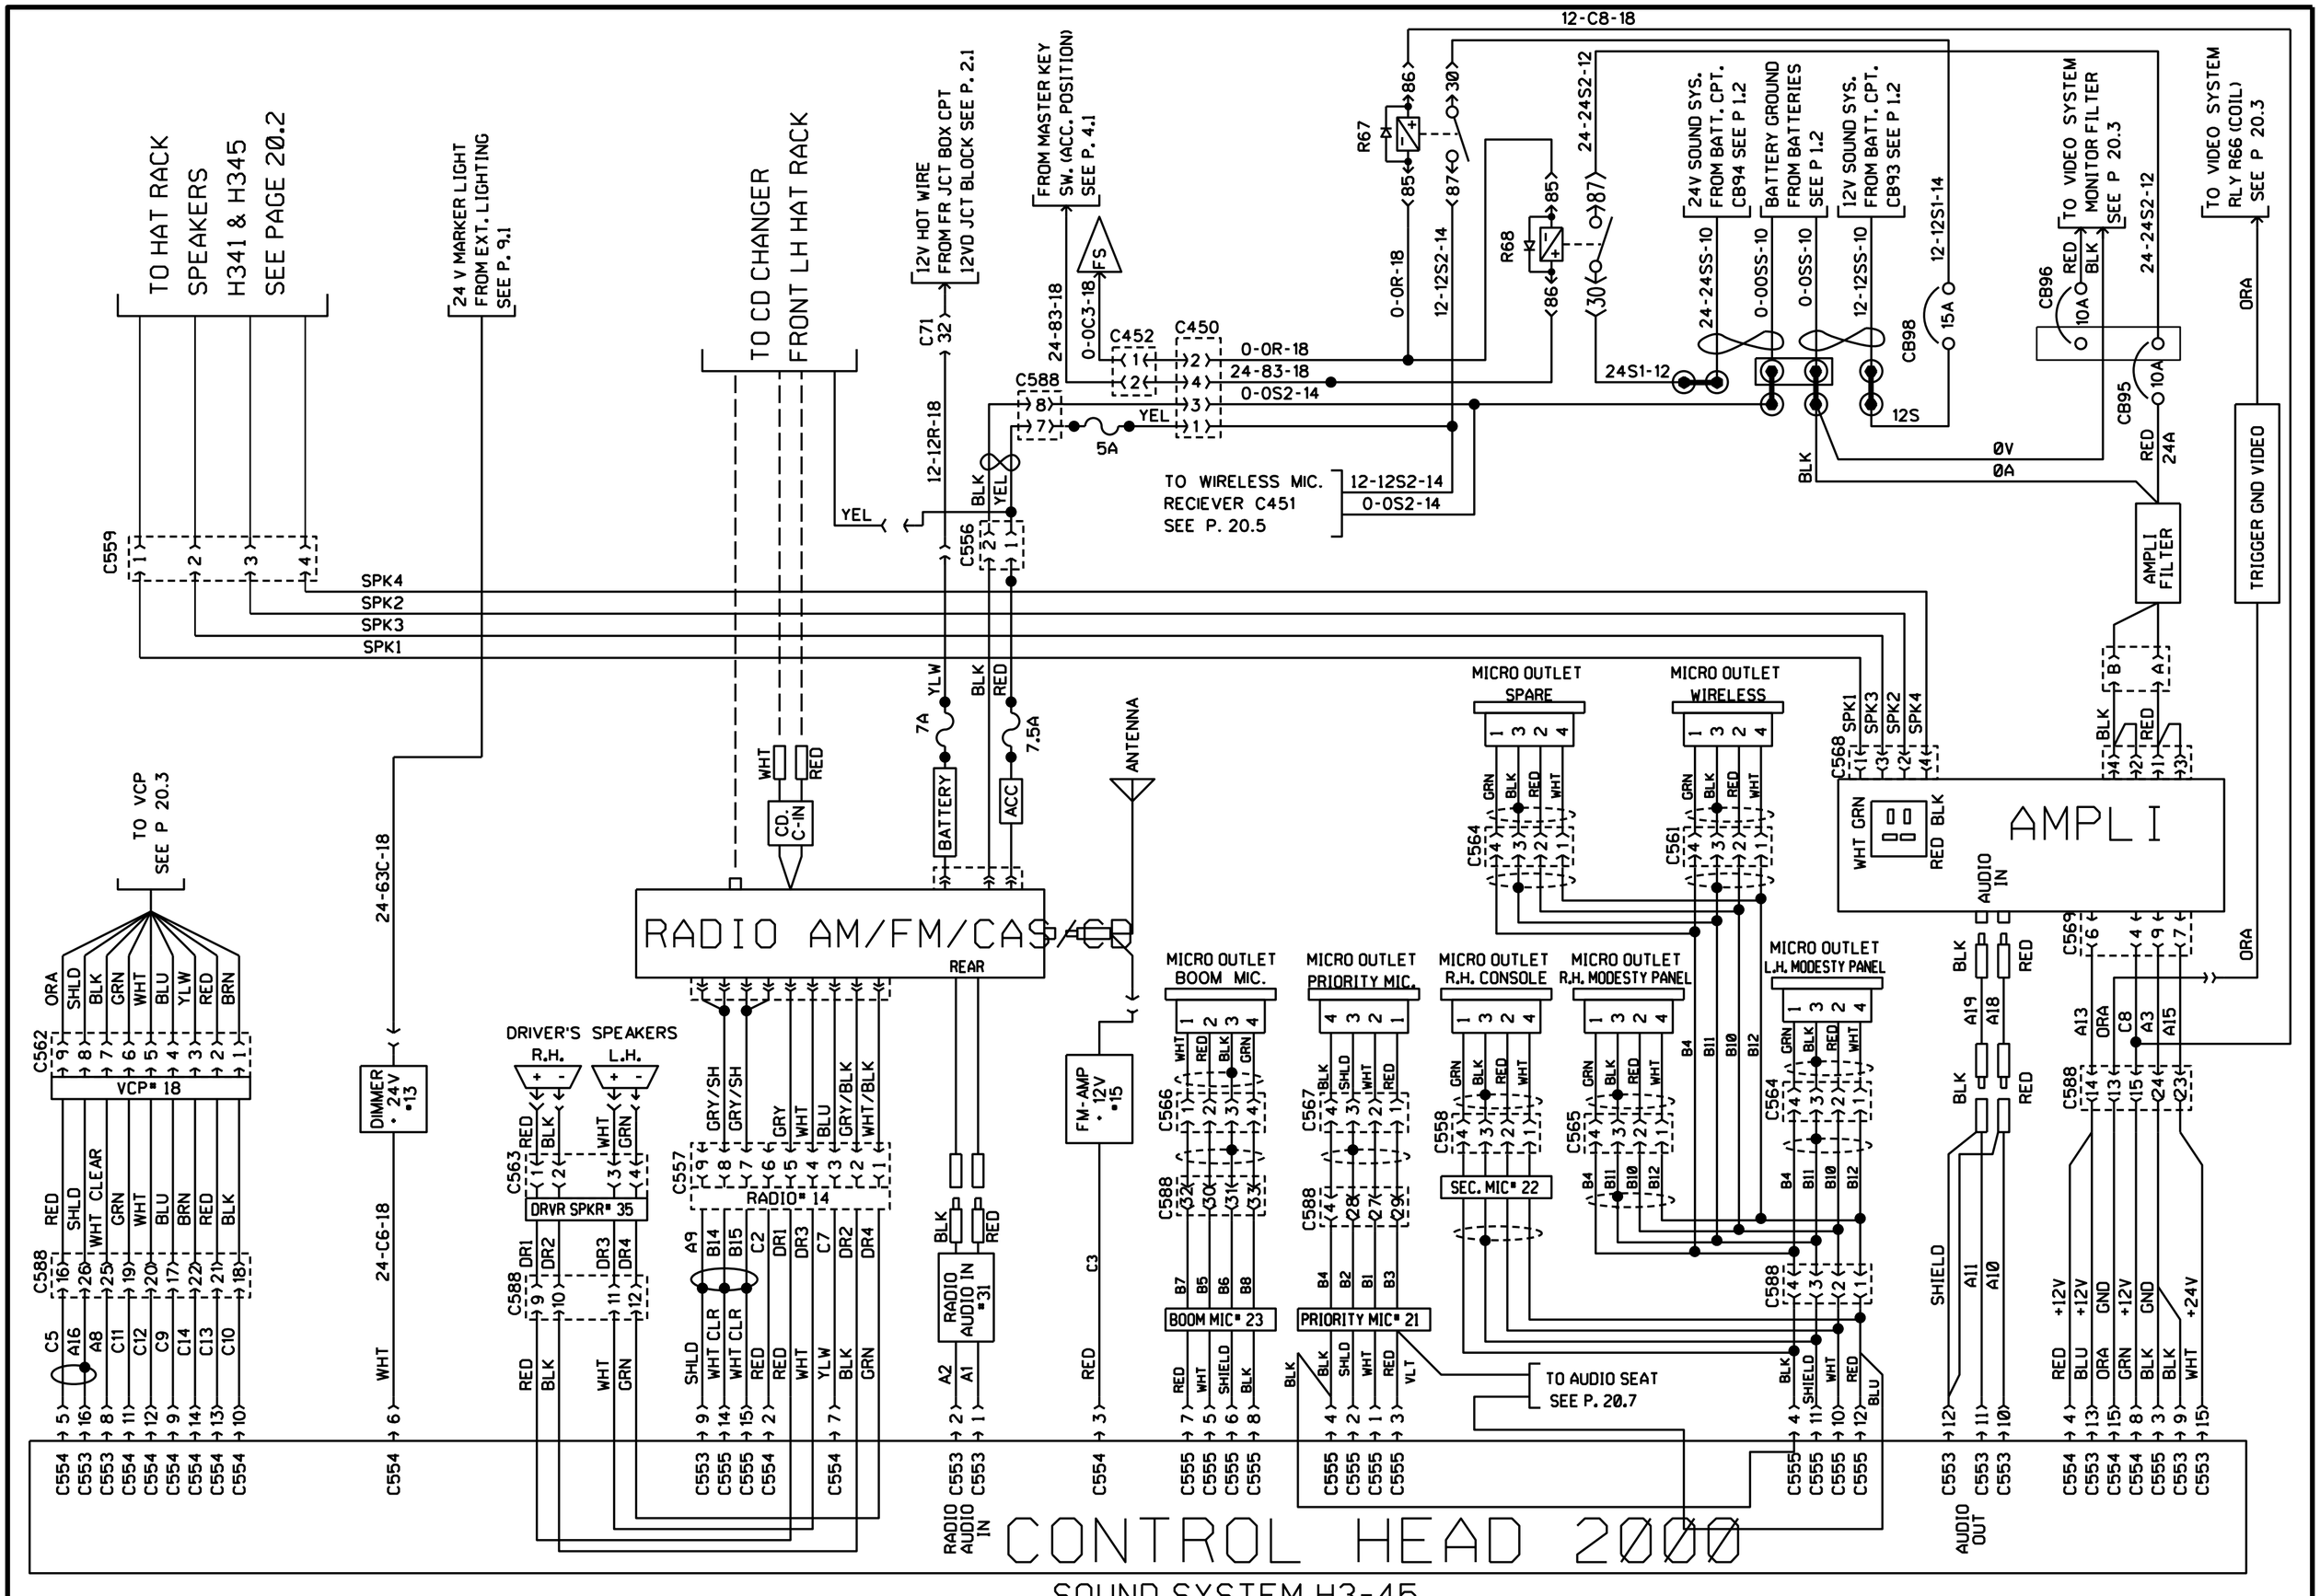

SOUND SYSTEM H3-45

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 20.1	REVISION 08

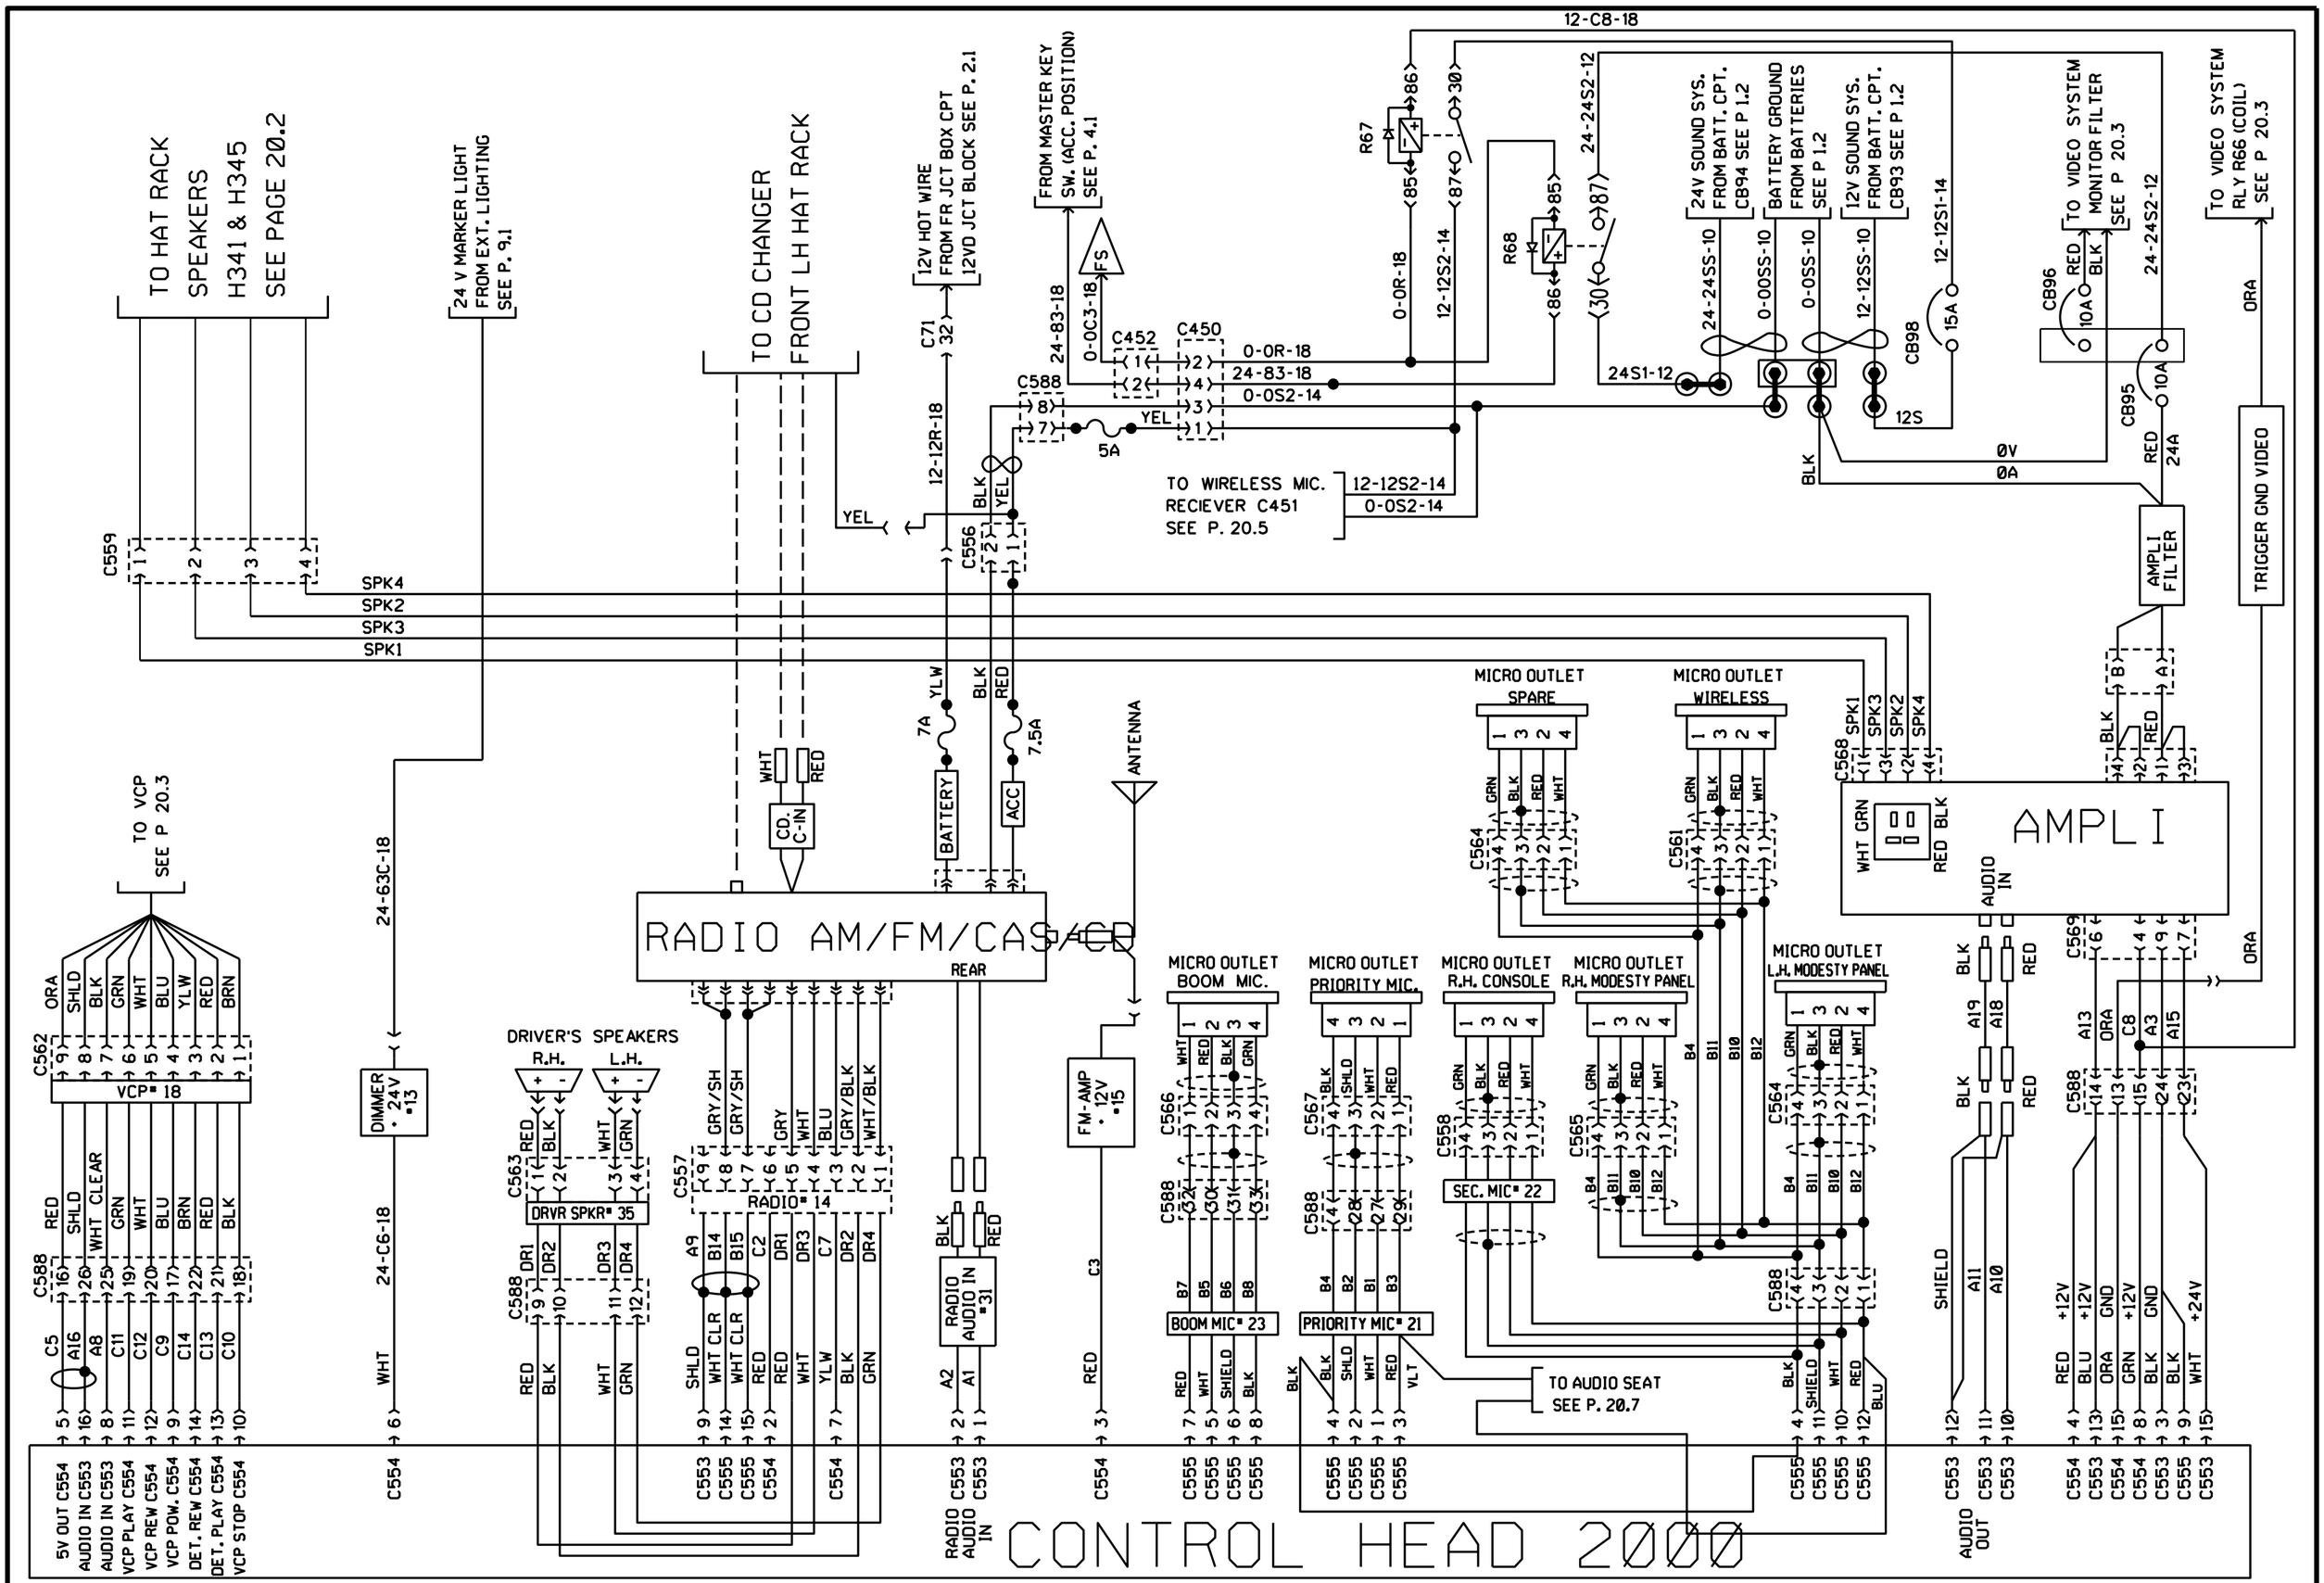

SOUND SYSTEM H3-45

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 20.1	REVISION 12

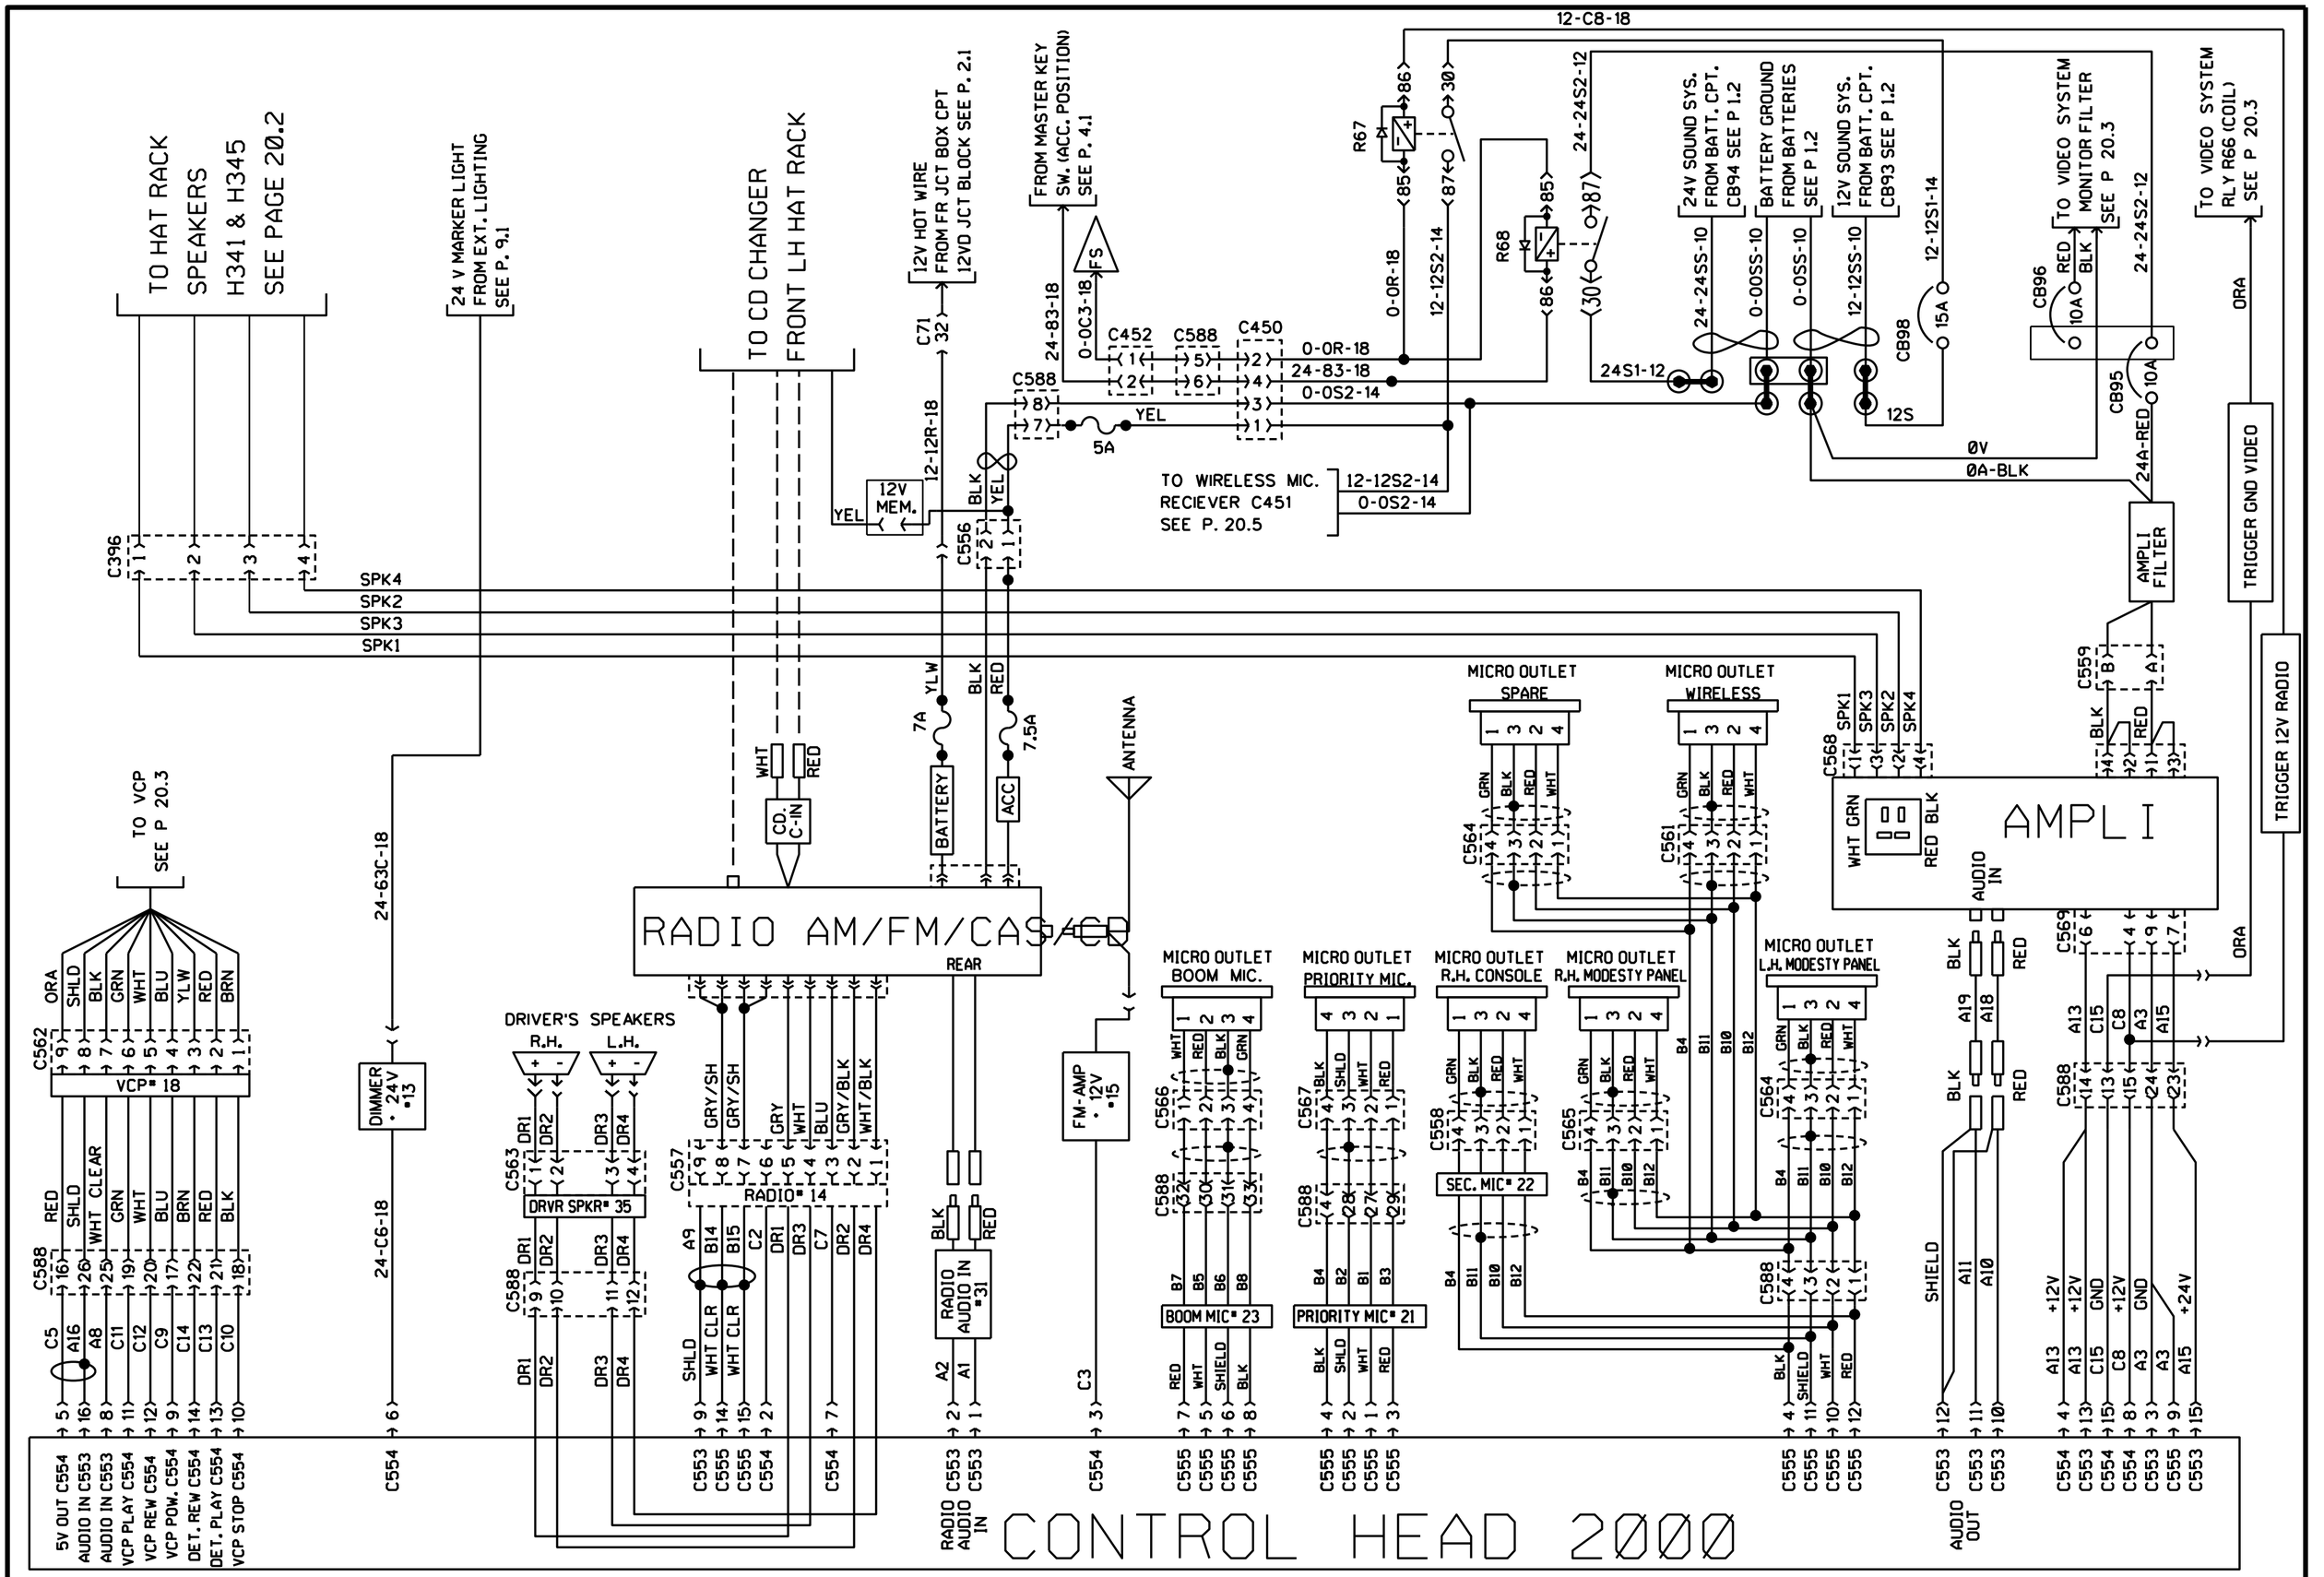

SOUND SYSTEM H3-45

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 20.1	REVISION 17

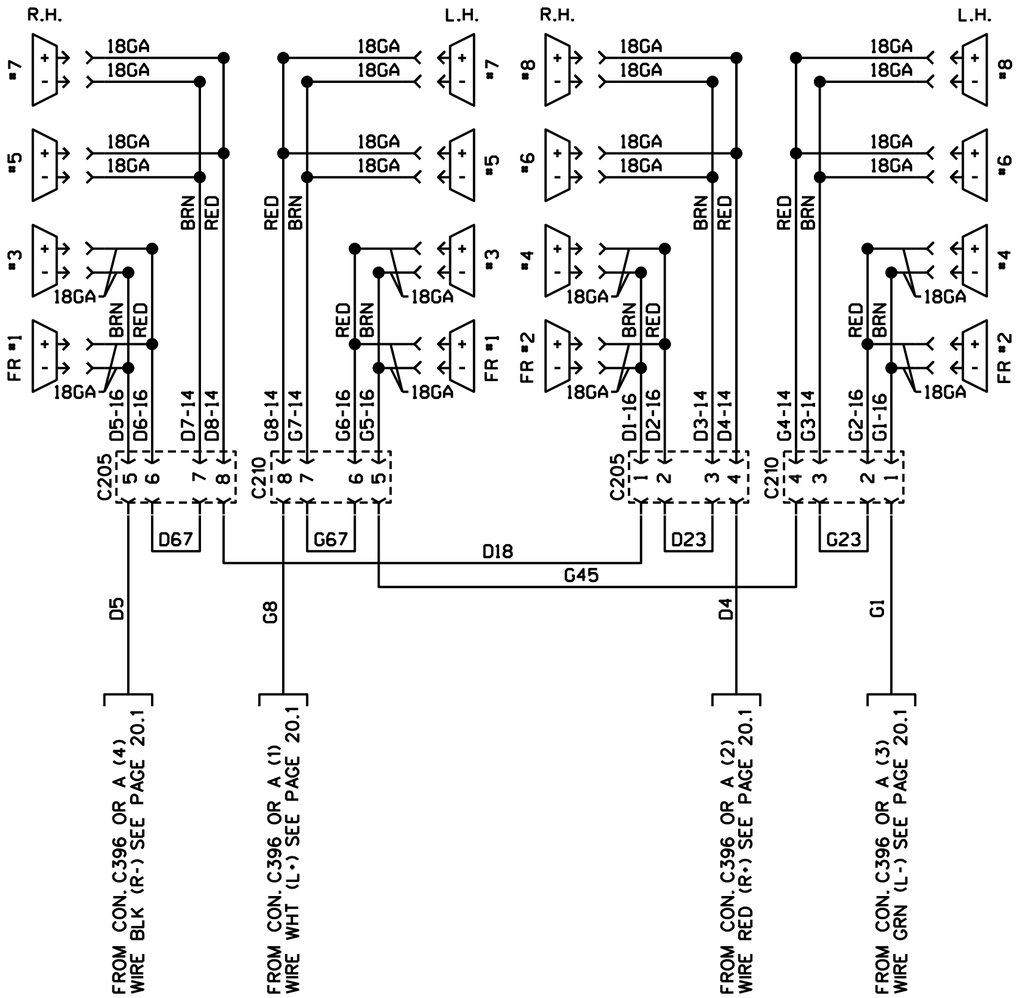

HAT RACK SPEAKERS H3-45

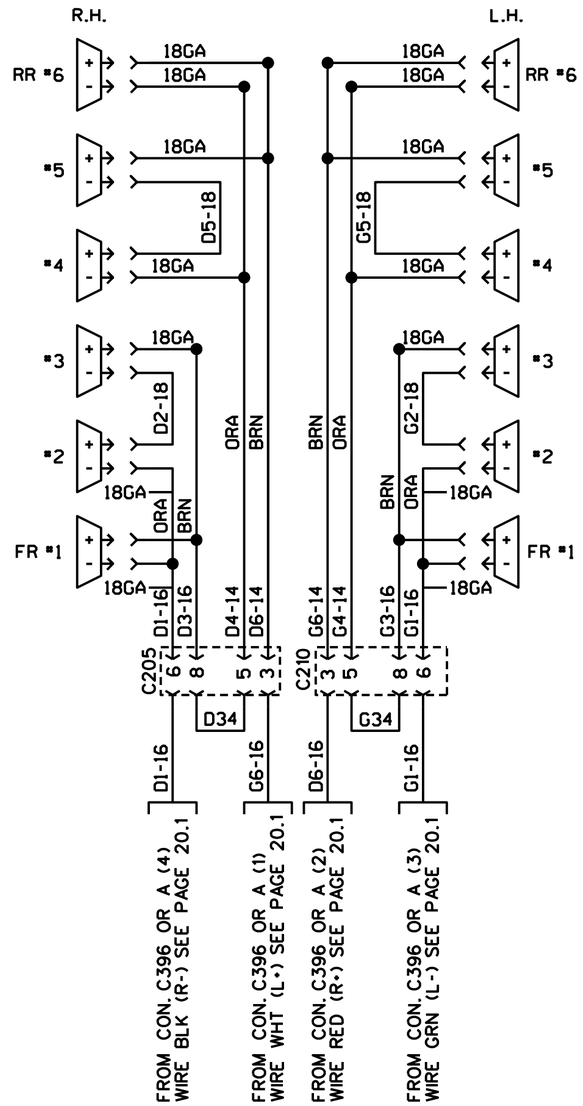

HAT RACK SPEAKERS H3-41

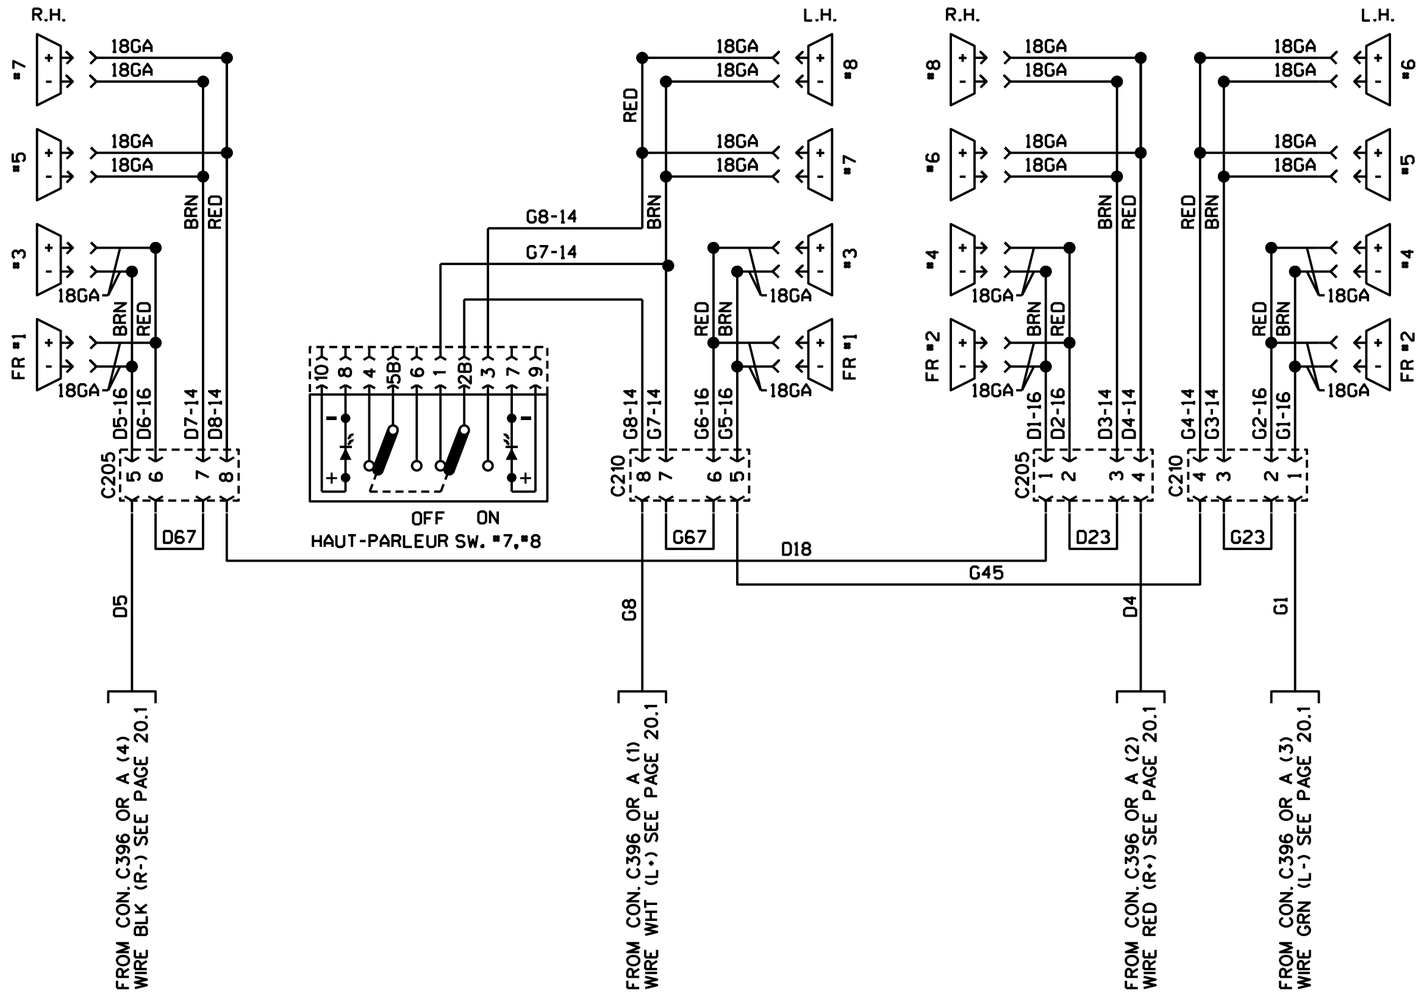

HAT RACK SPEAKERS H3-45

X3298 (LIMOCAR)

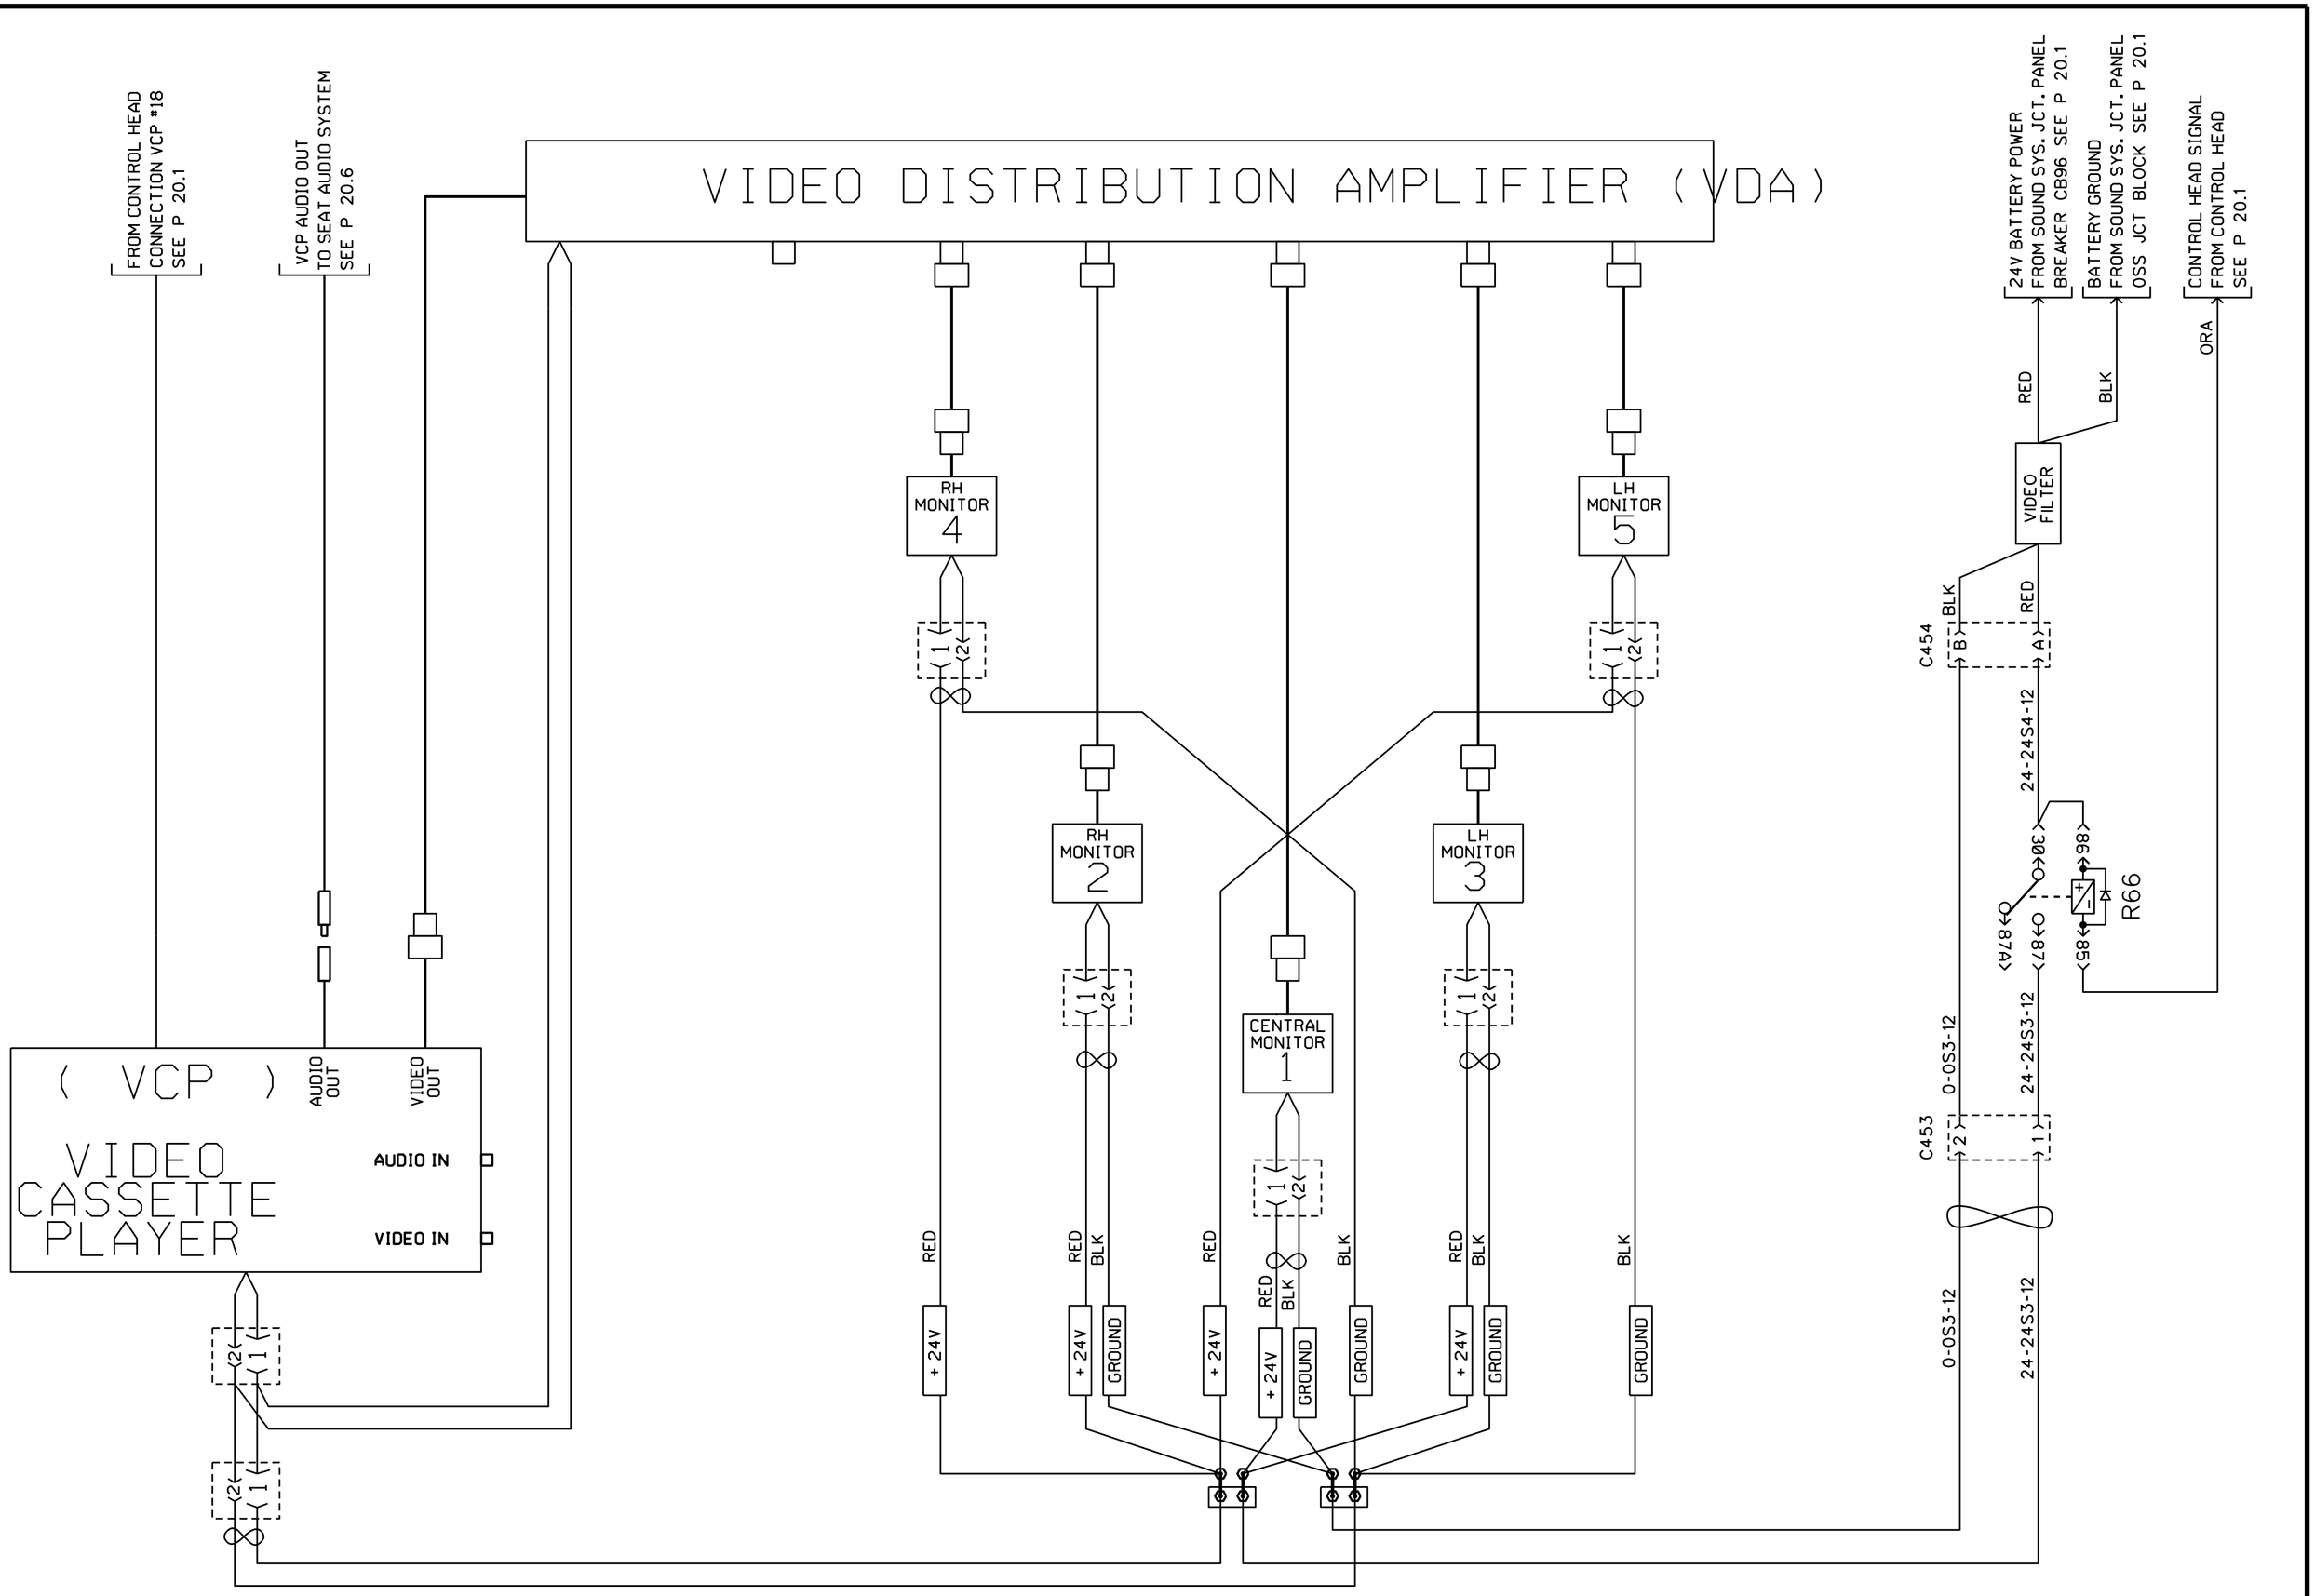

VIDEO SYSTEM

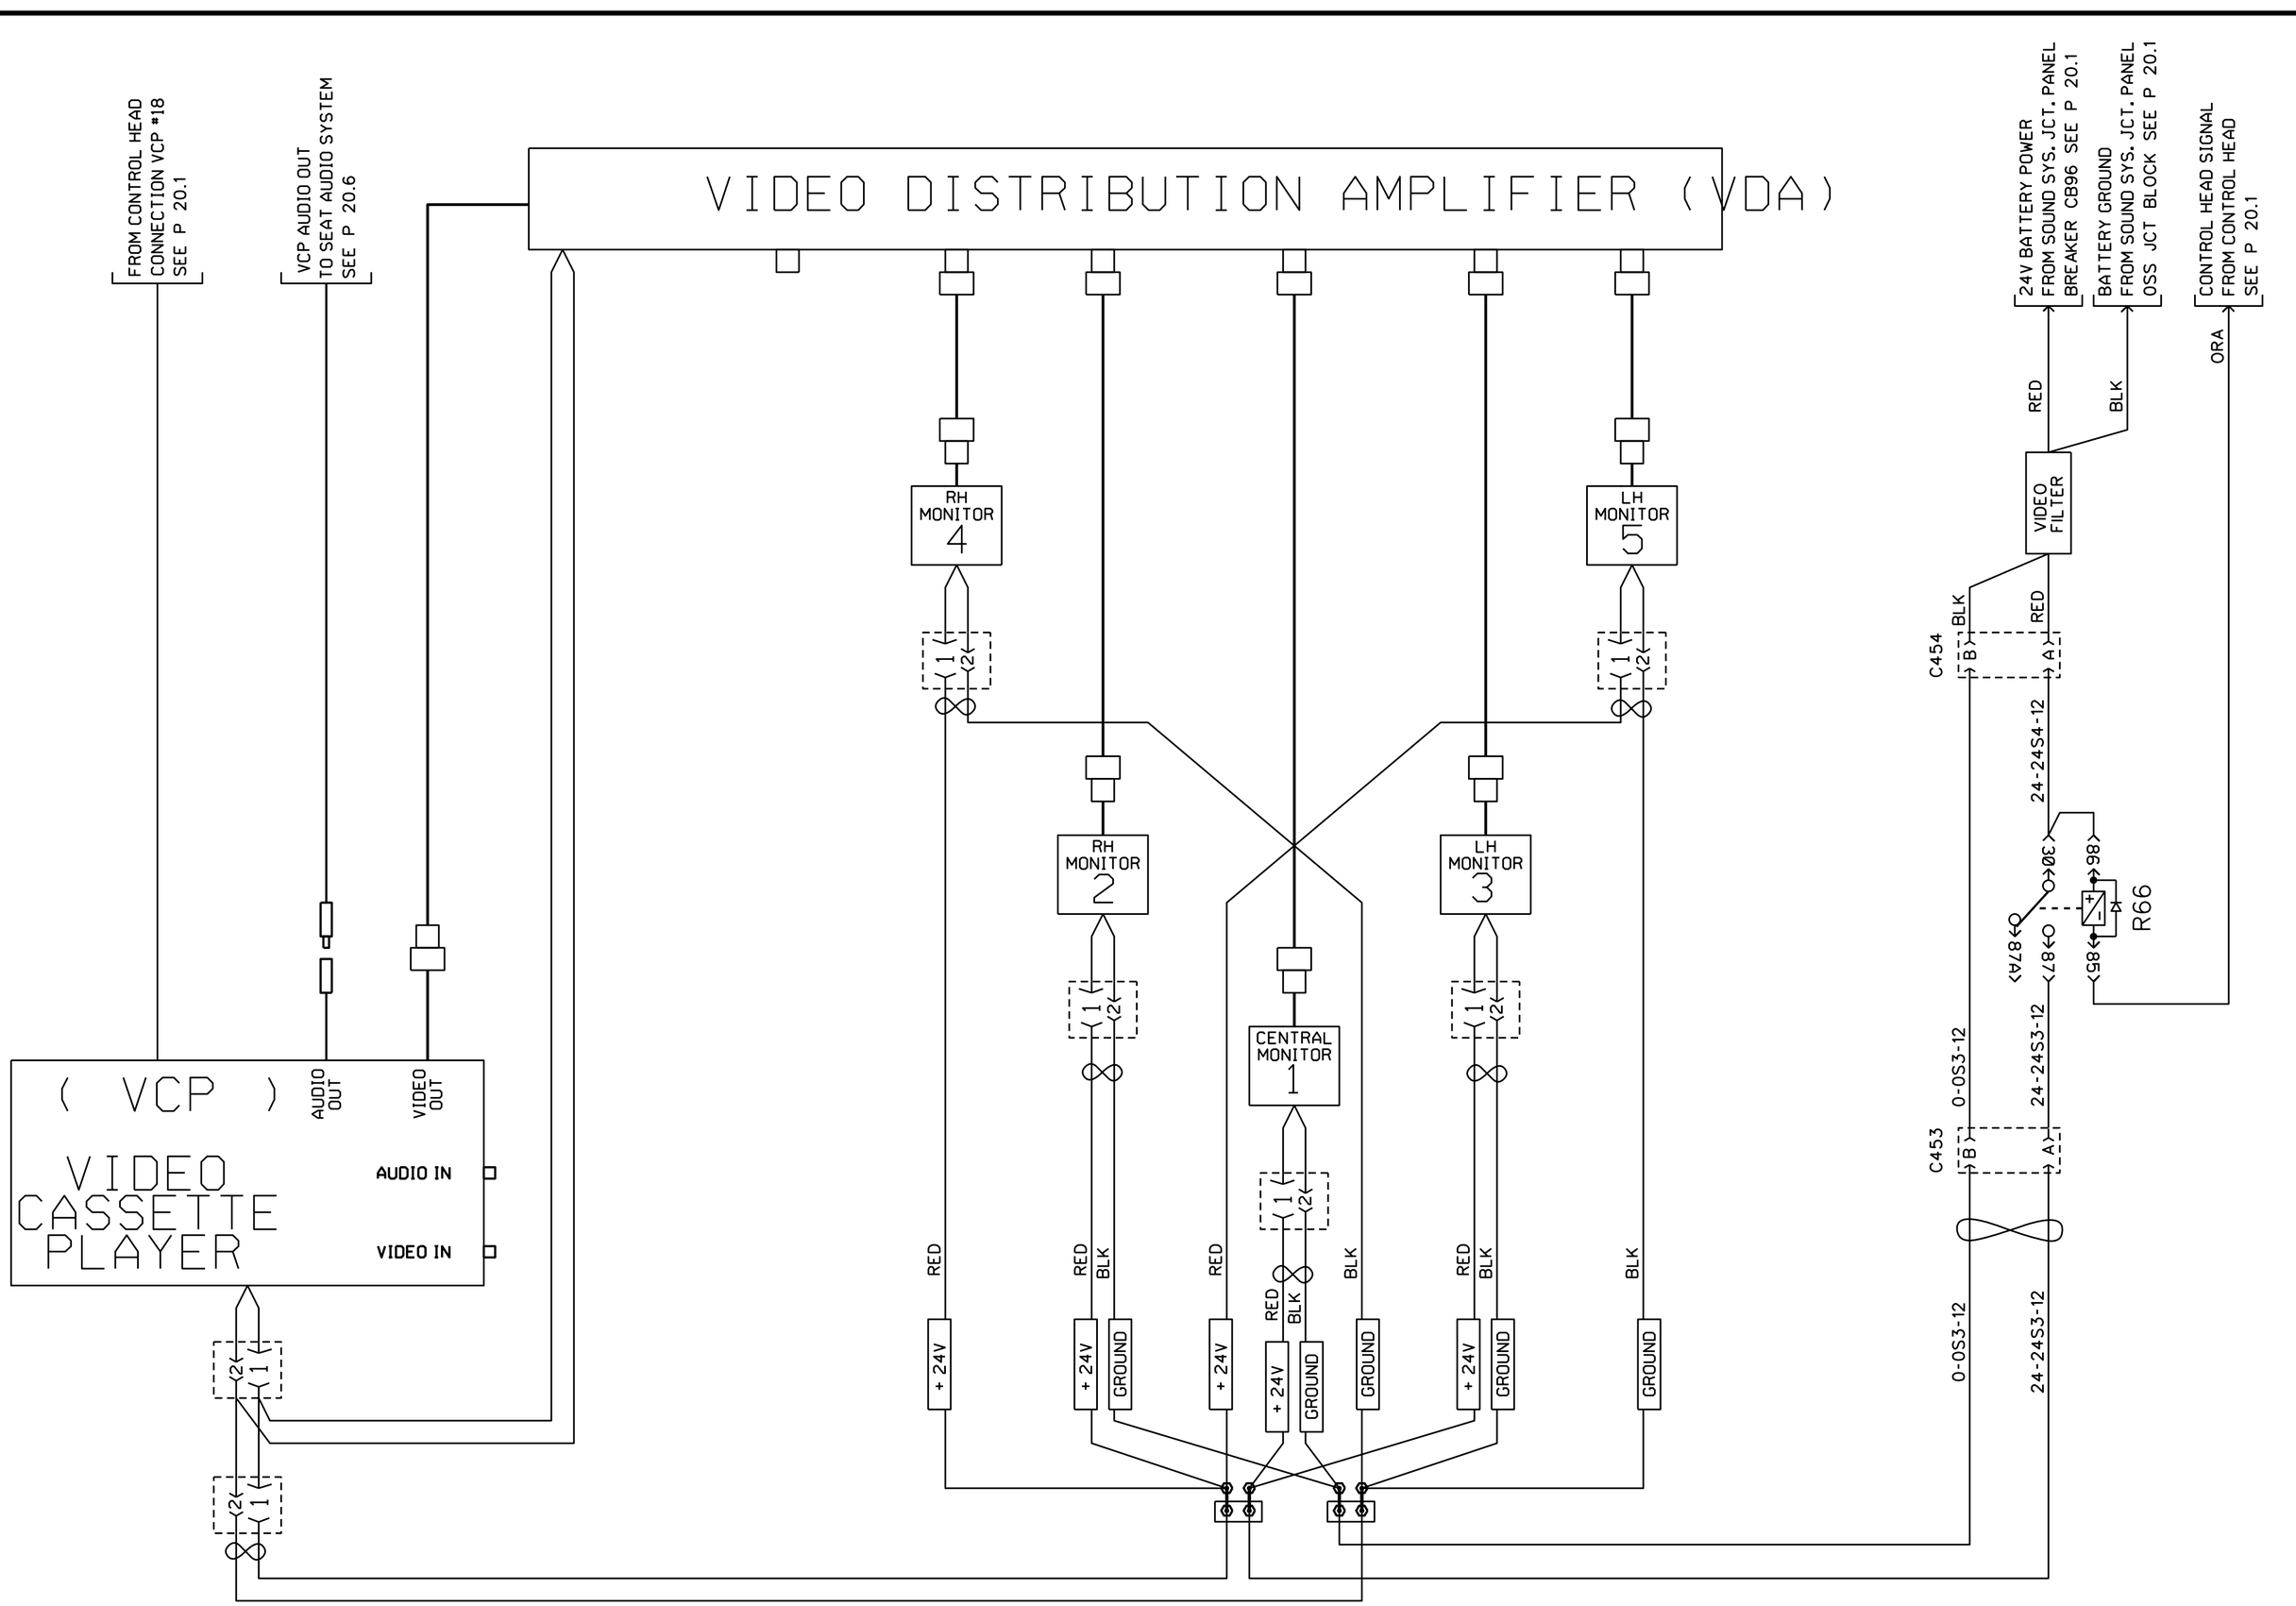

VIDEO SYSTEM

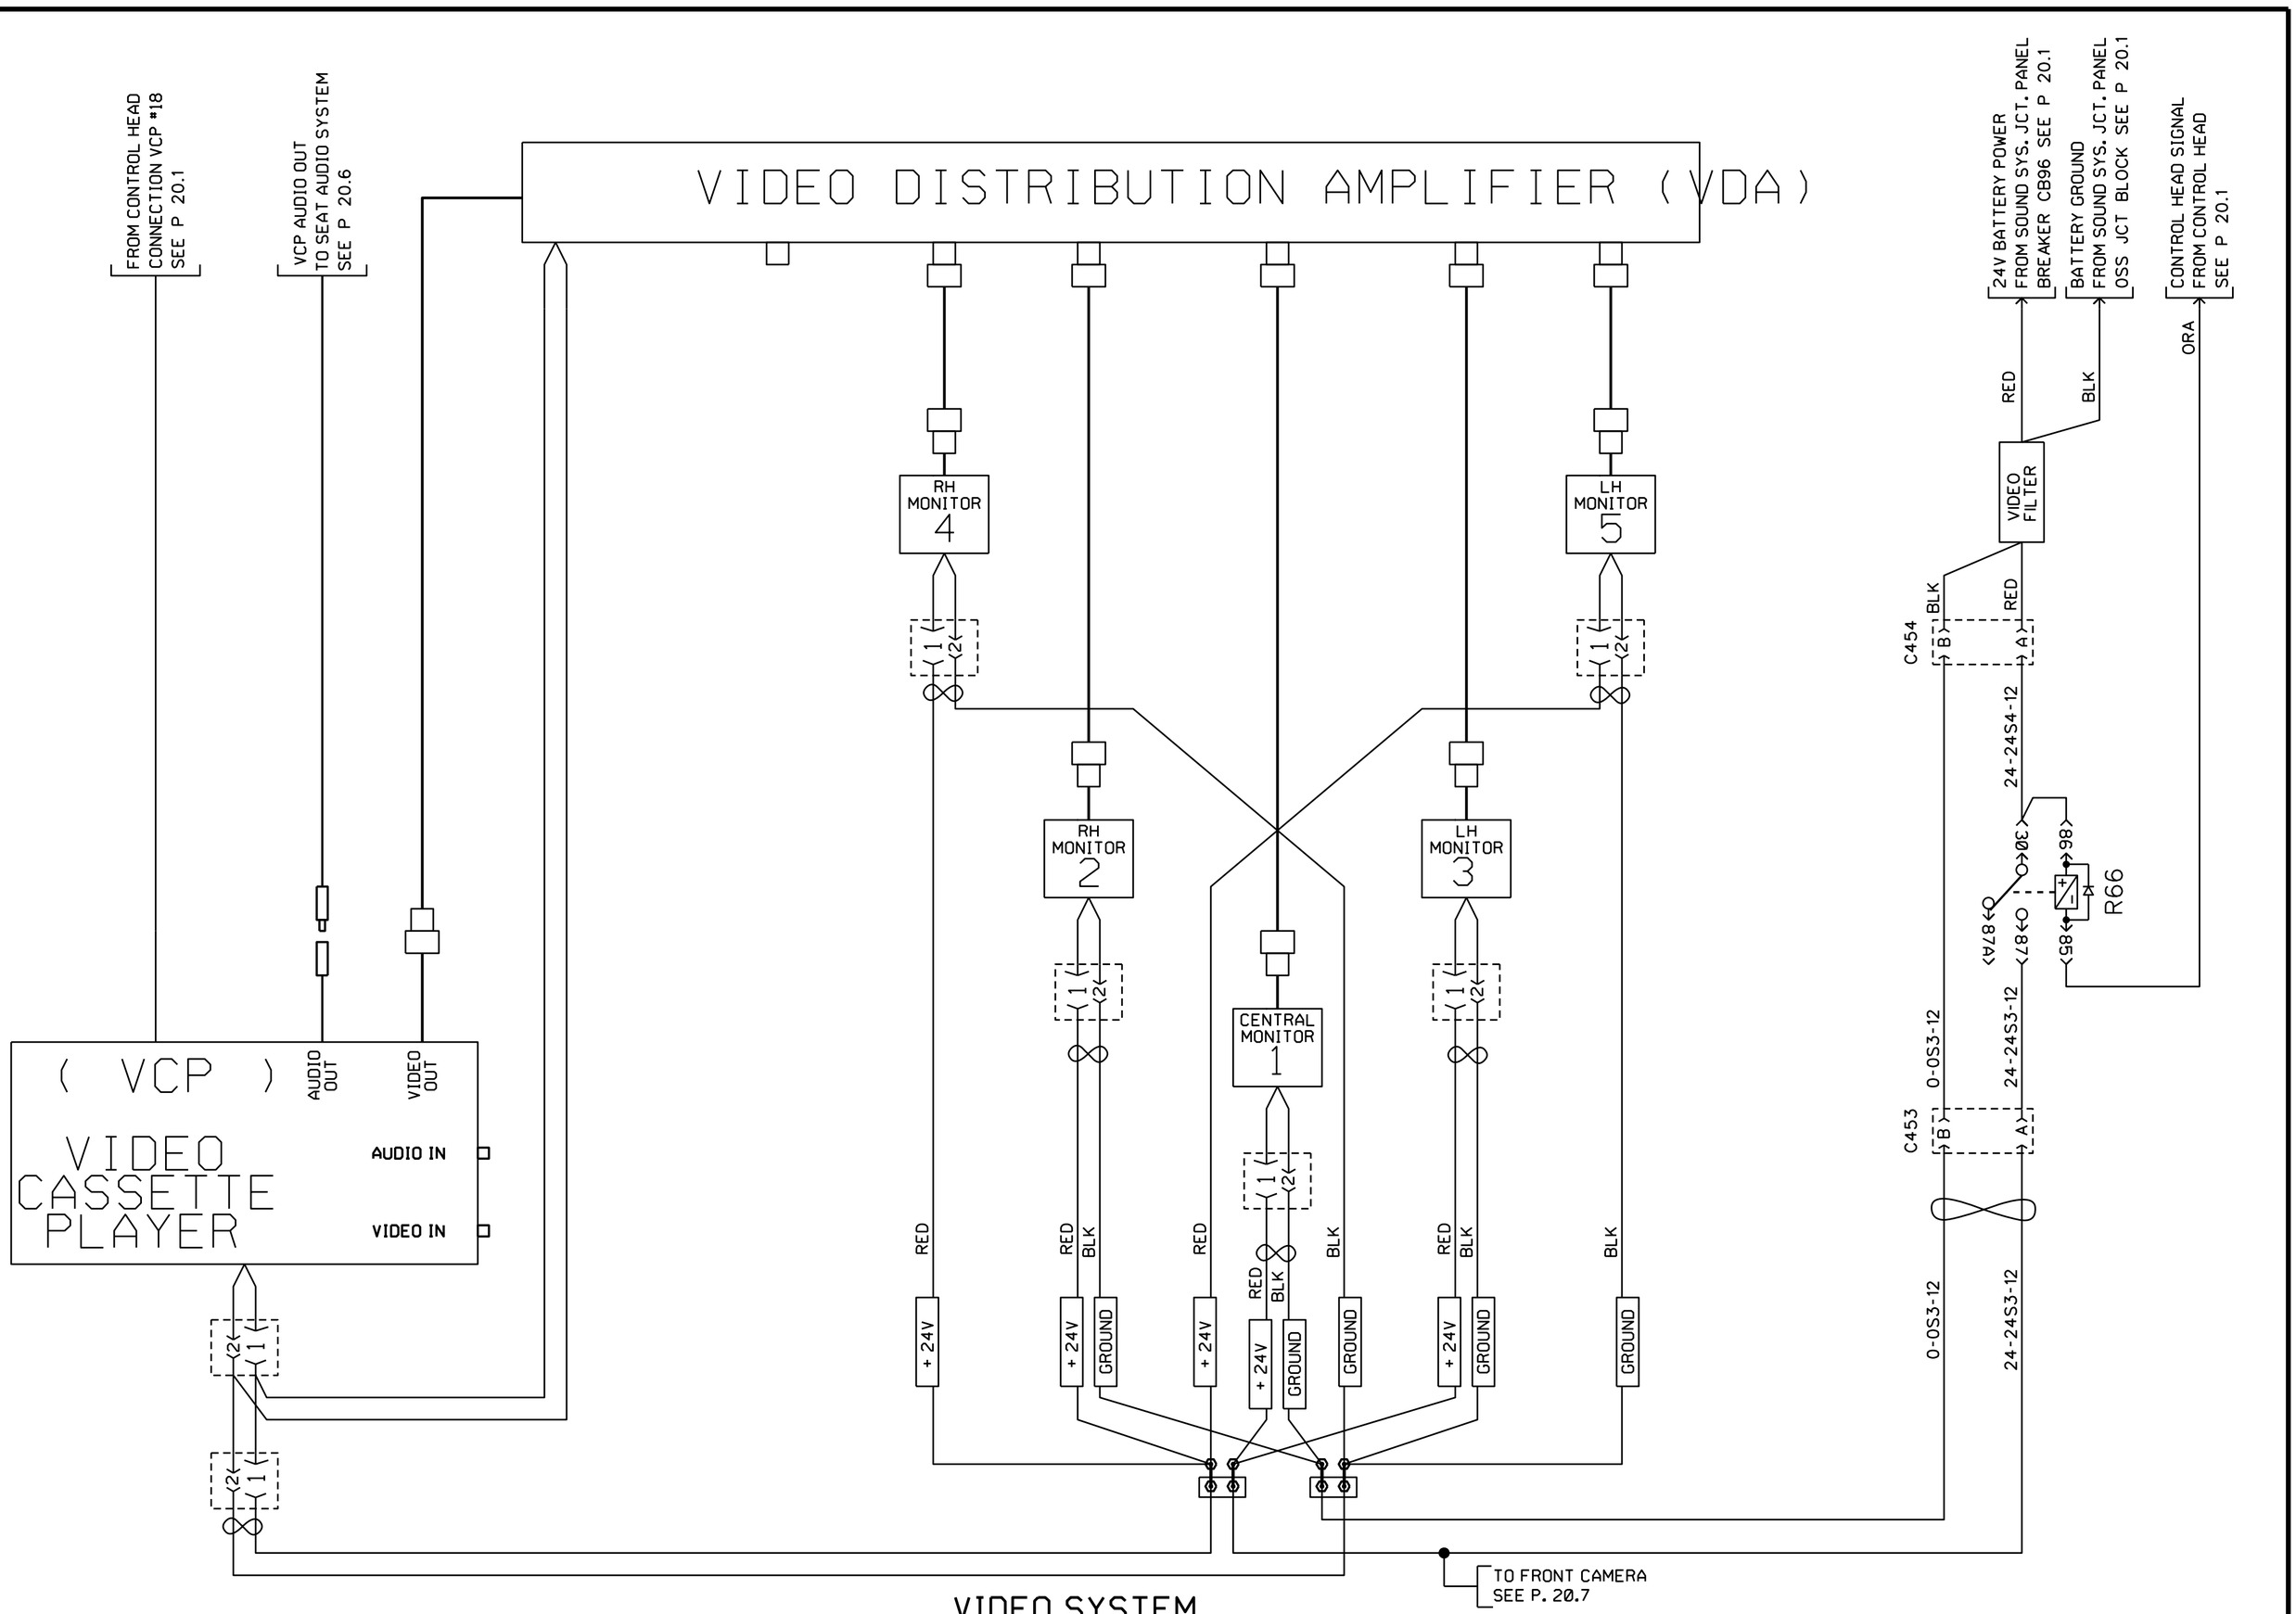

VIDEO SYSTEM

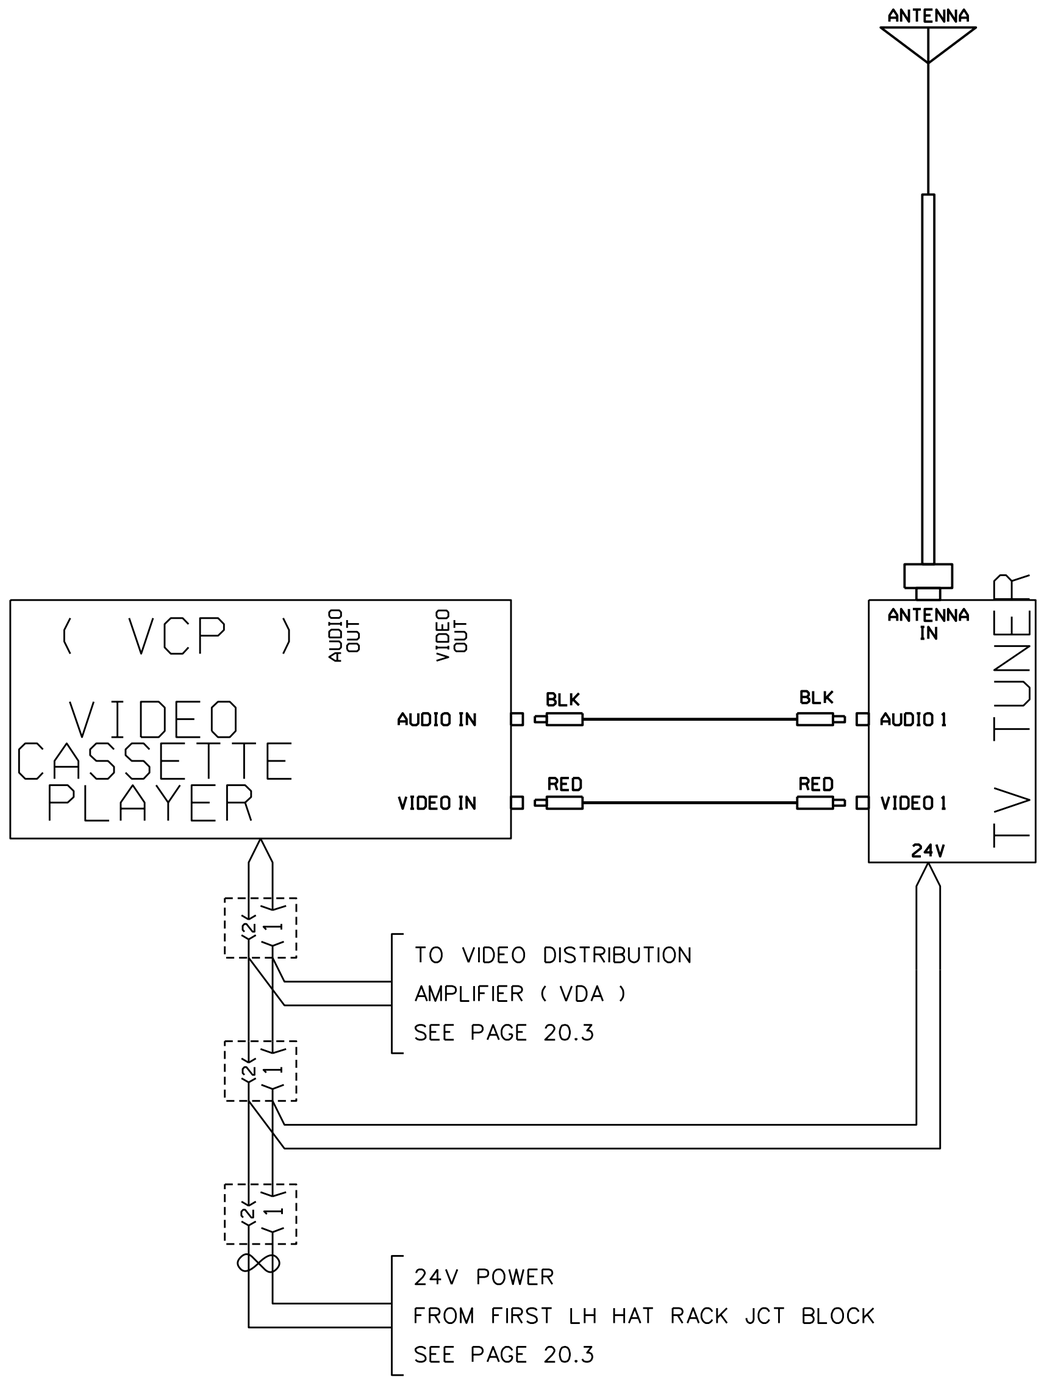
ANTENNA
(VCP)
AUDIO OUT
VIDEO OUT
VIDEO CASSETTE PLAYER
AUDIO IN
VIDEO IN
BLK
BLK
RED
RED
ANTENNA IN
AUDIO 1
VIDEO 1
24V
TV TUNER
J2
J1
TO VIDEO DISTRIBUTION
AMPLIFIER (VDA)
SEE PAGE 20.3
24V POWER
FROM FIRST LH HAT RACK JCT BLOCK
SEE PAGE 20.3

TV RECEIVER

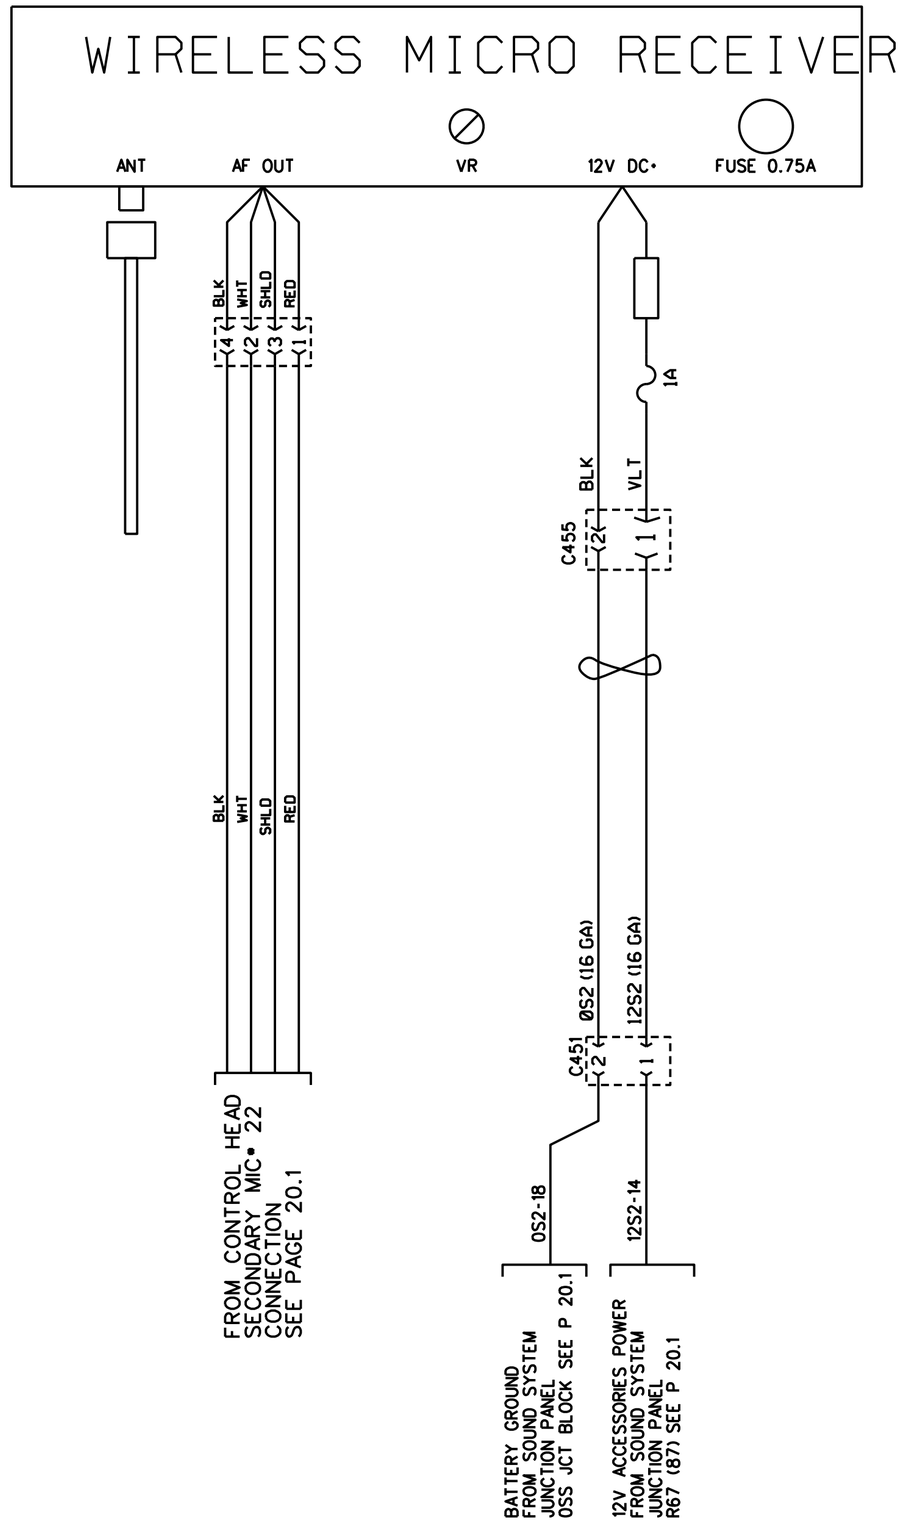

WIRELESS MICROPHONE

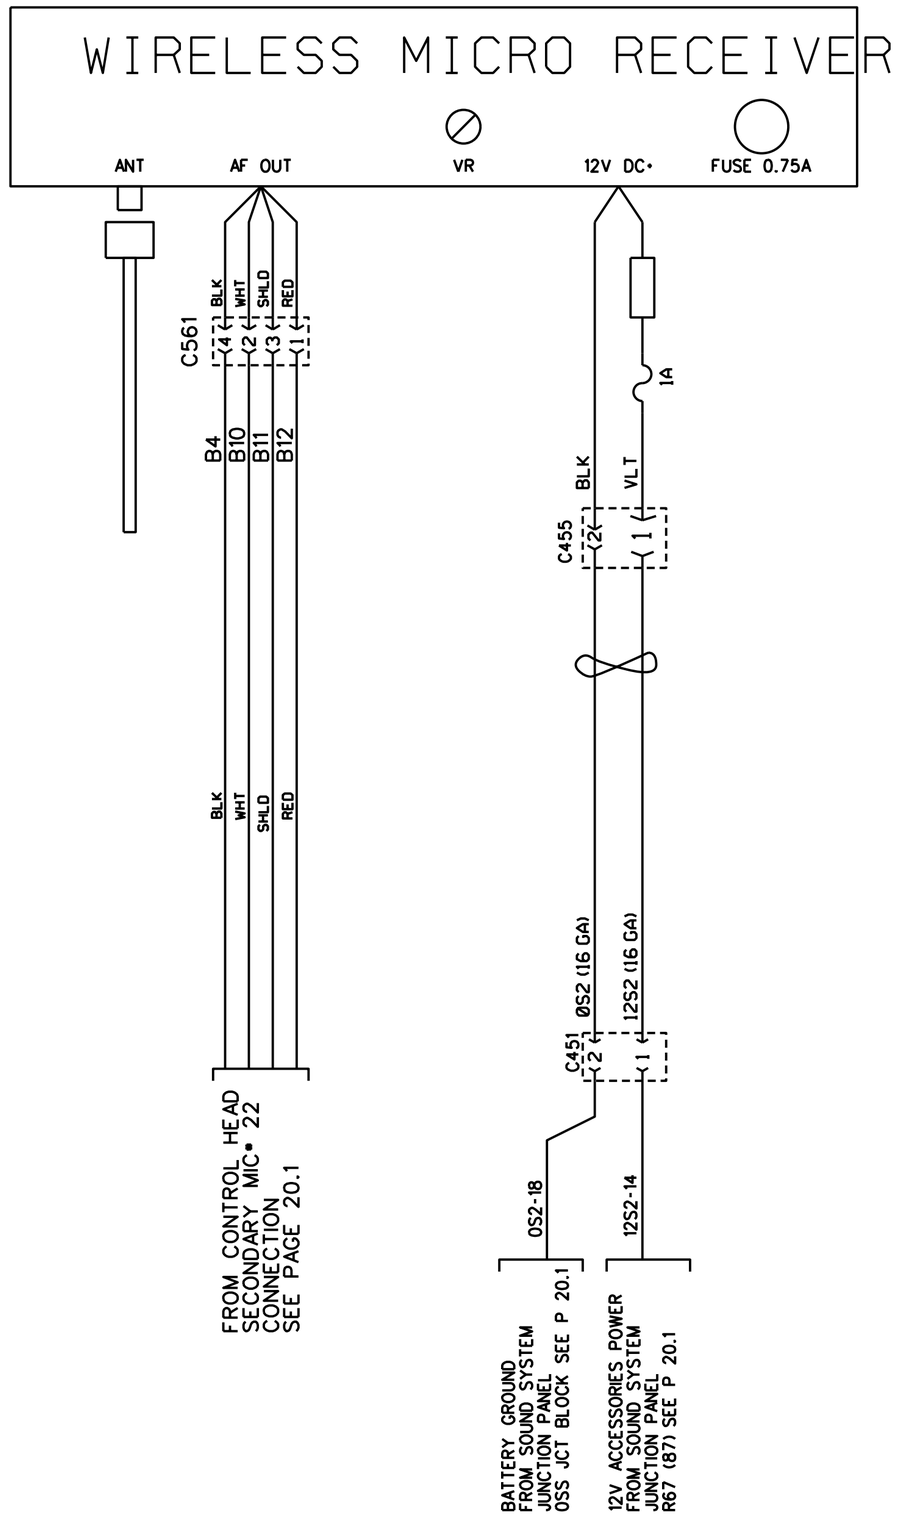

WIRELESS MICROPHONE

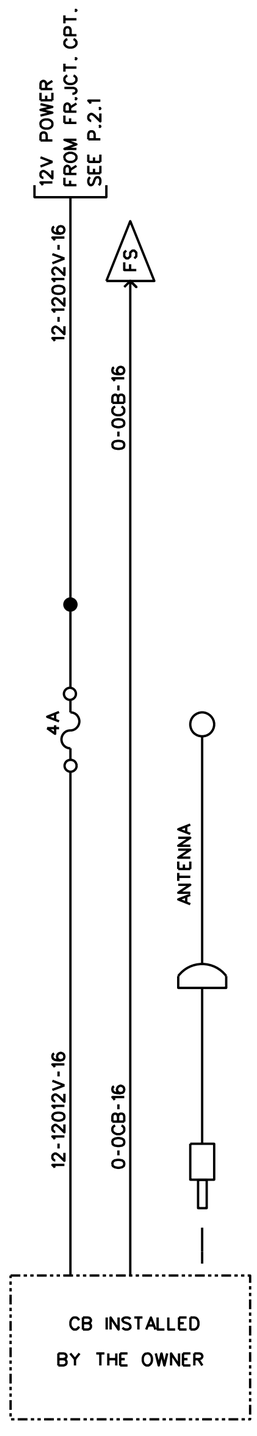

CB OPTION

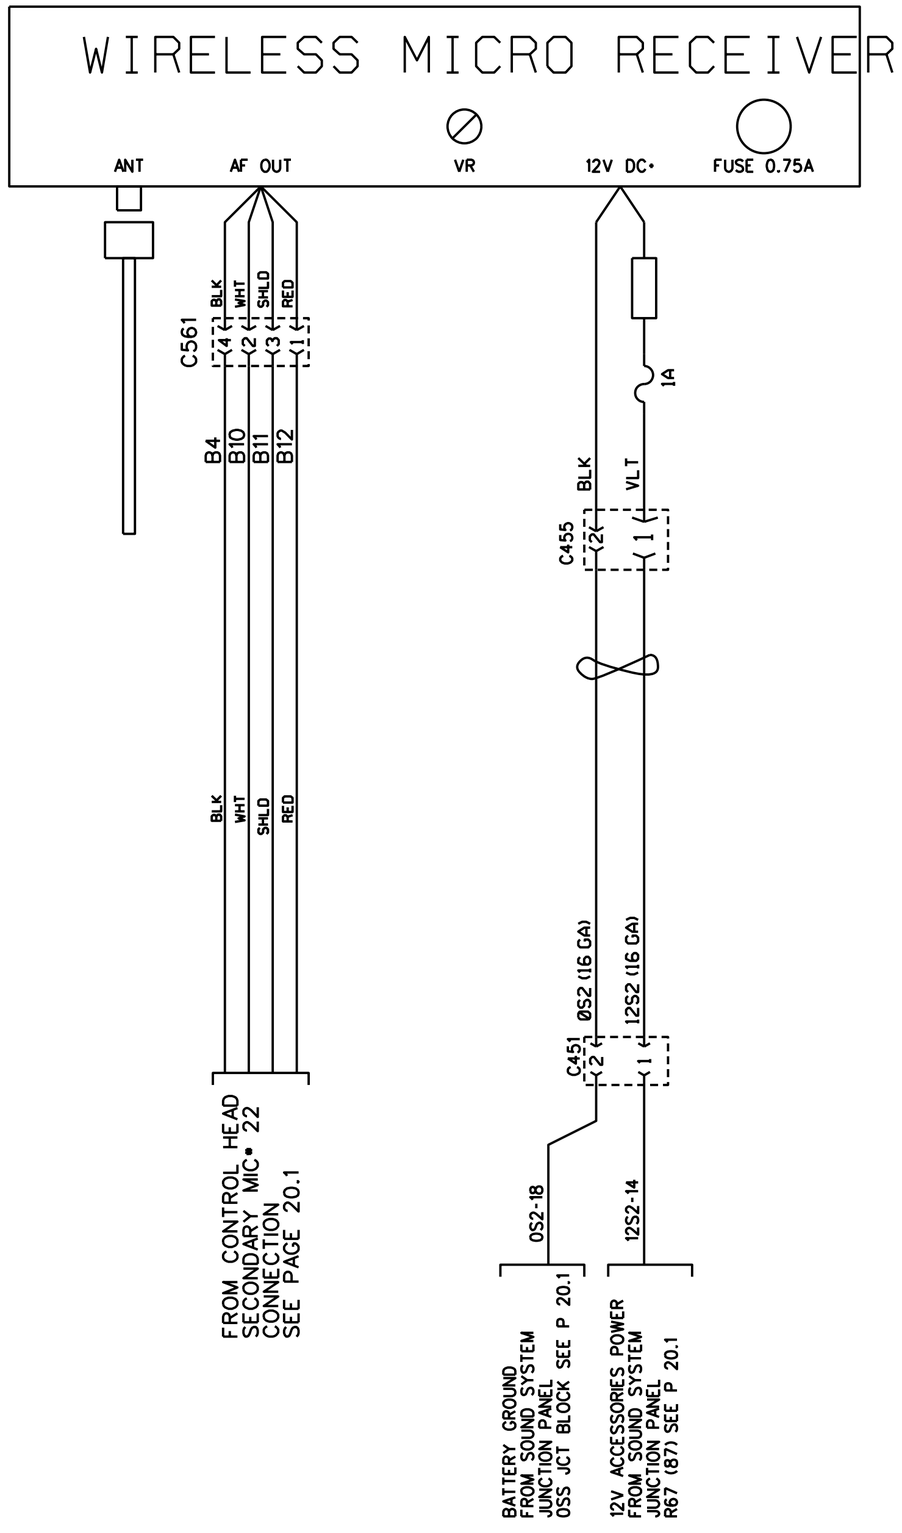

WIRELESS MICROPHONE

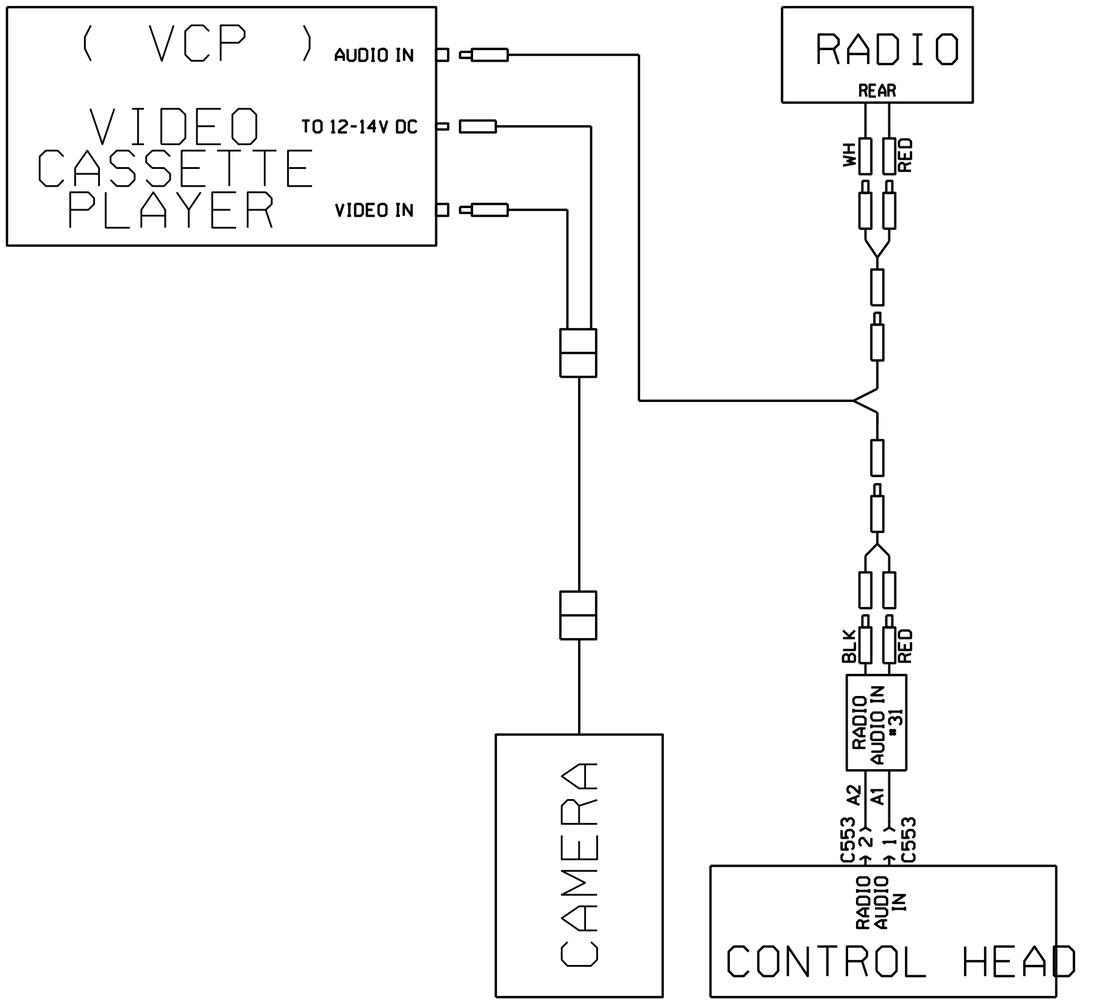

FRONT CAMERA WITHOUT TV RECEIVER

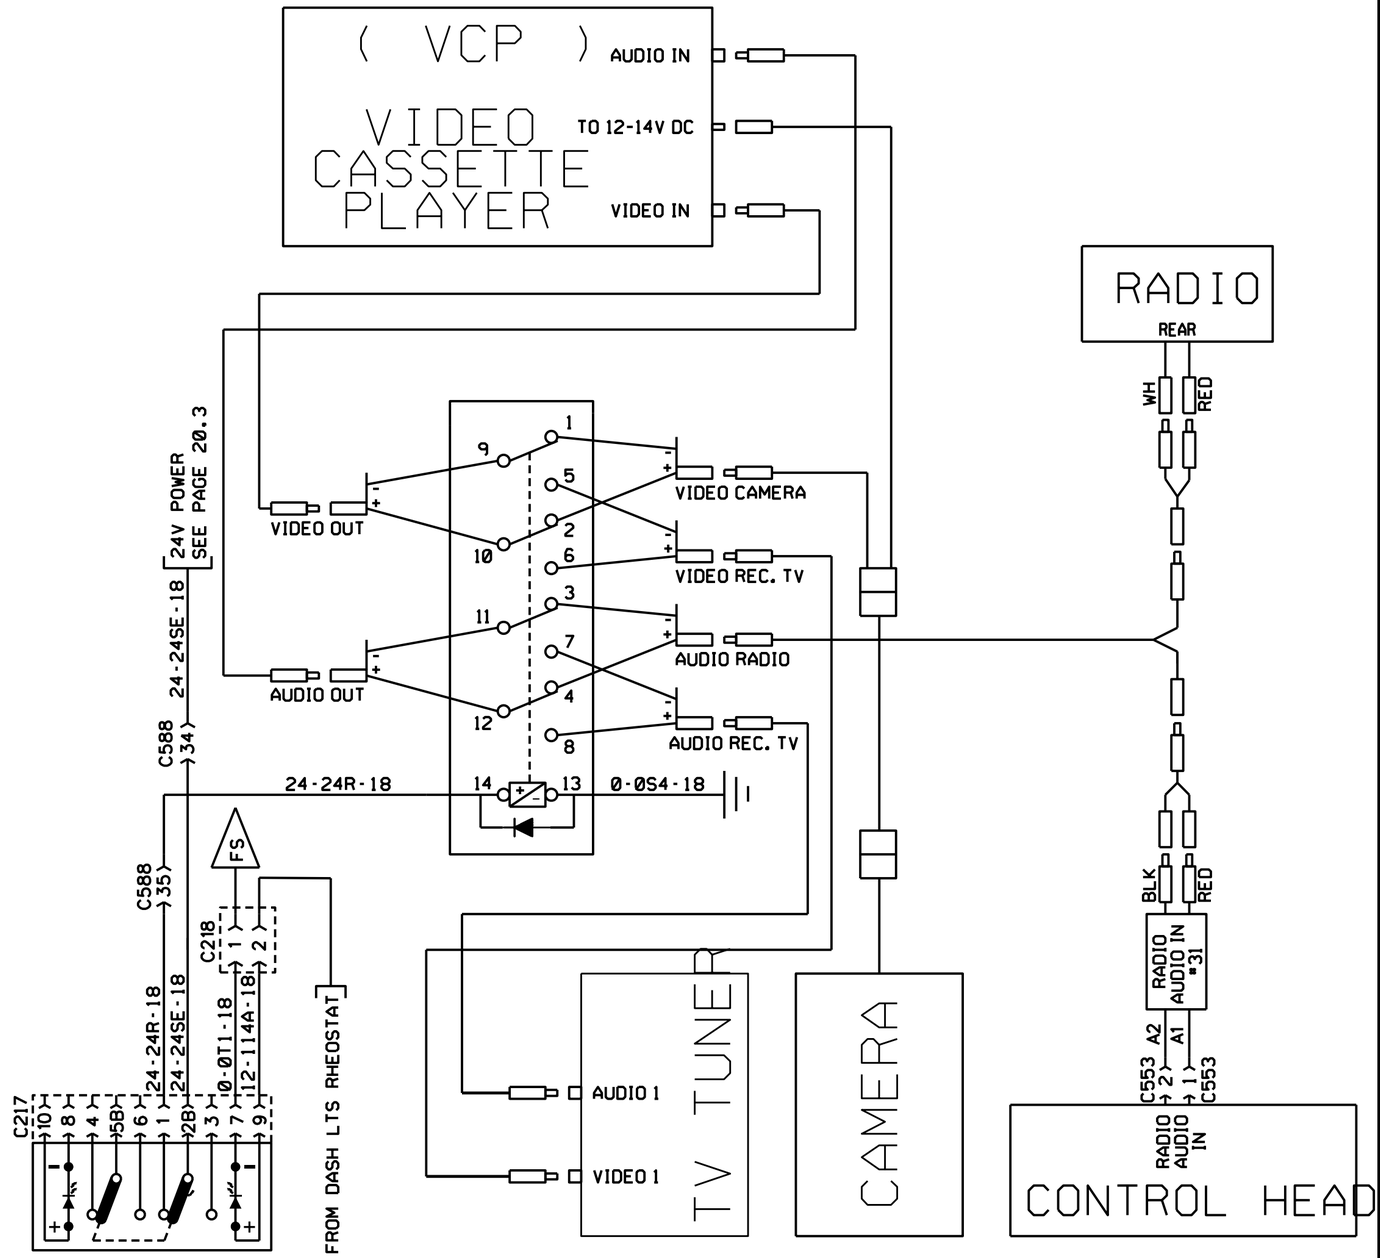

FRONT CAMERA WITH TV RECEIVER

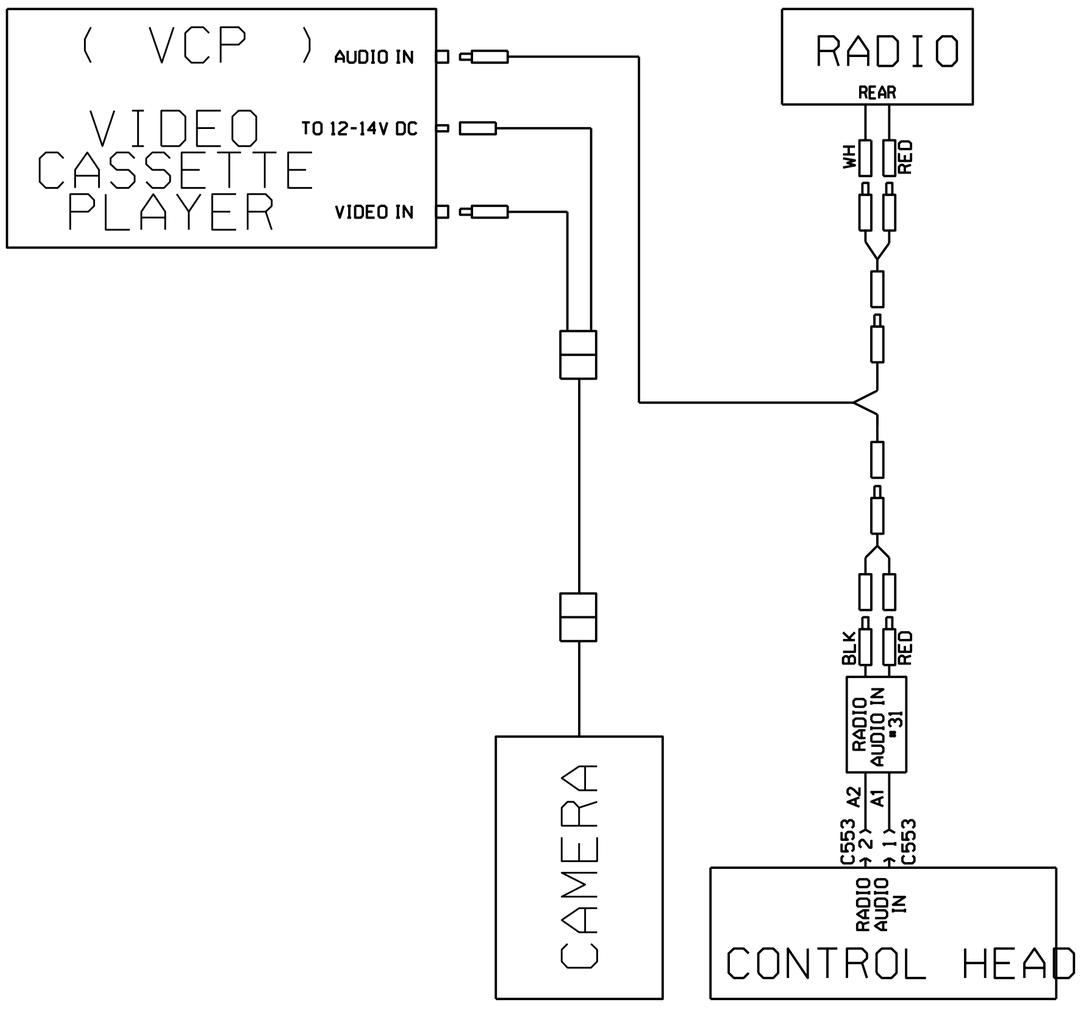

FRONT CAMERA WITHOUT TV RECEIVER

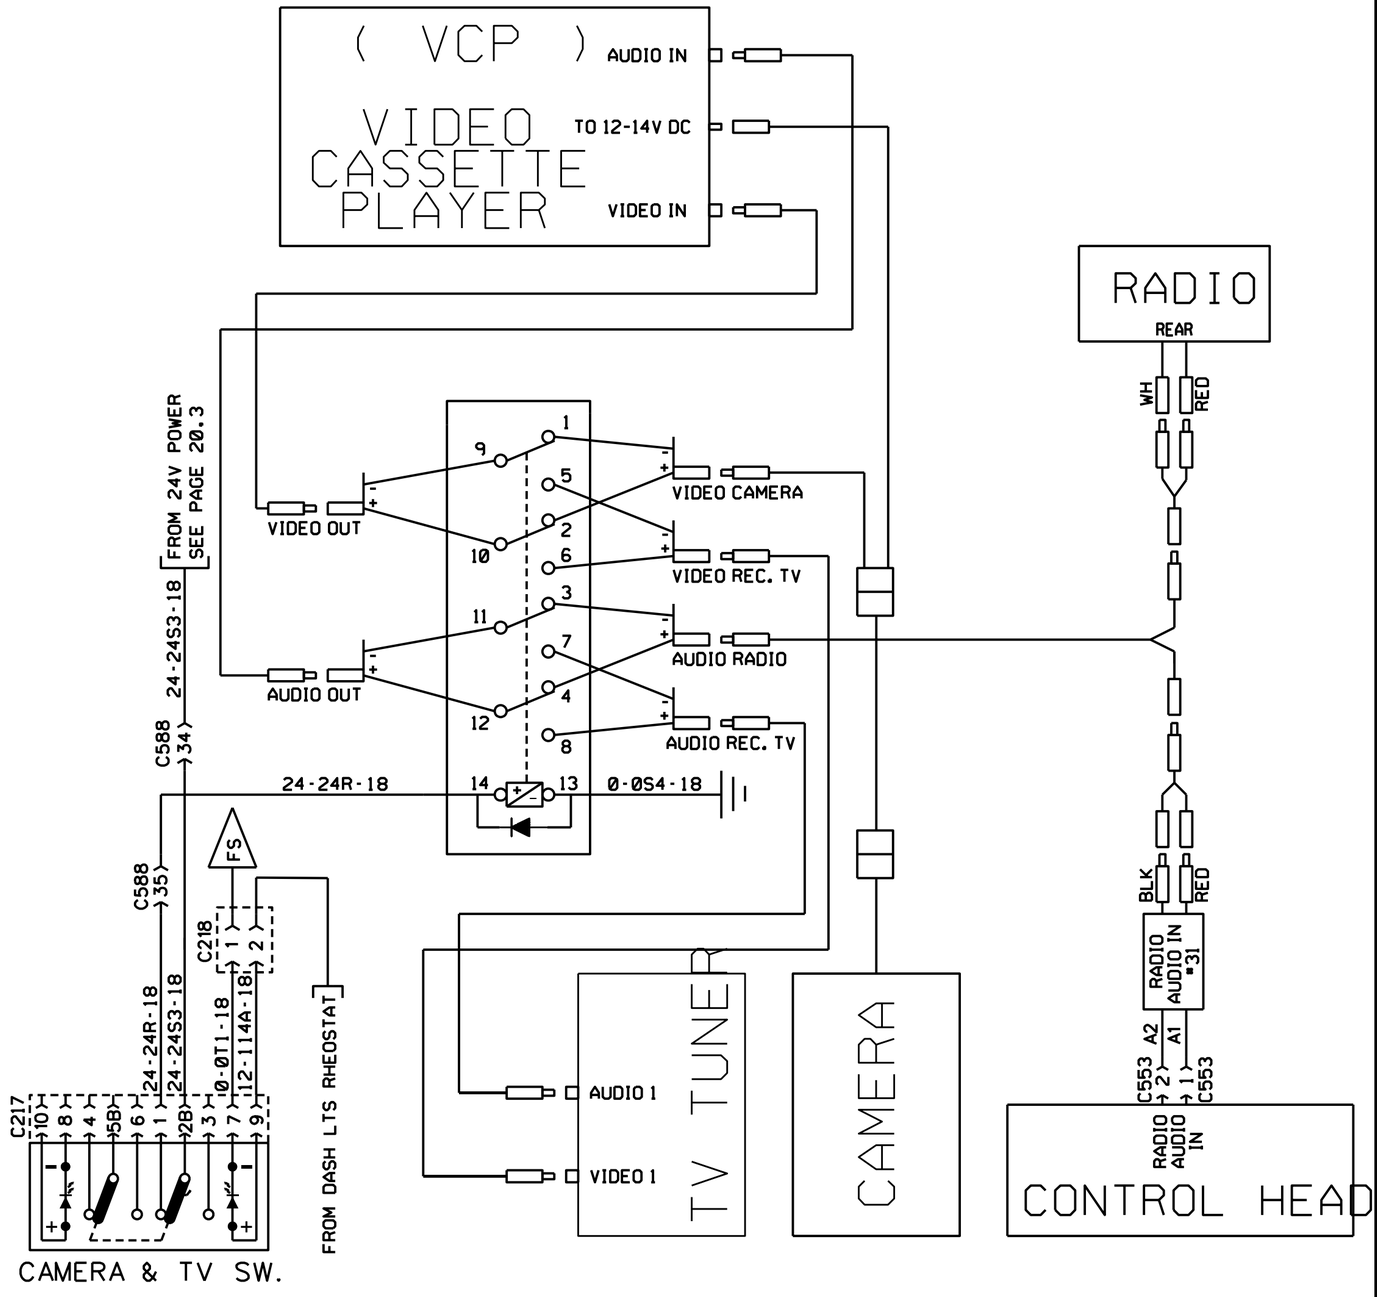

FRONT CAMERA WITH TV RECEIVER

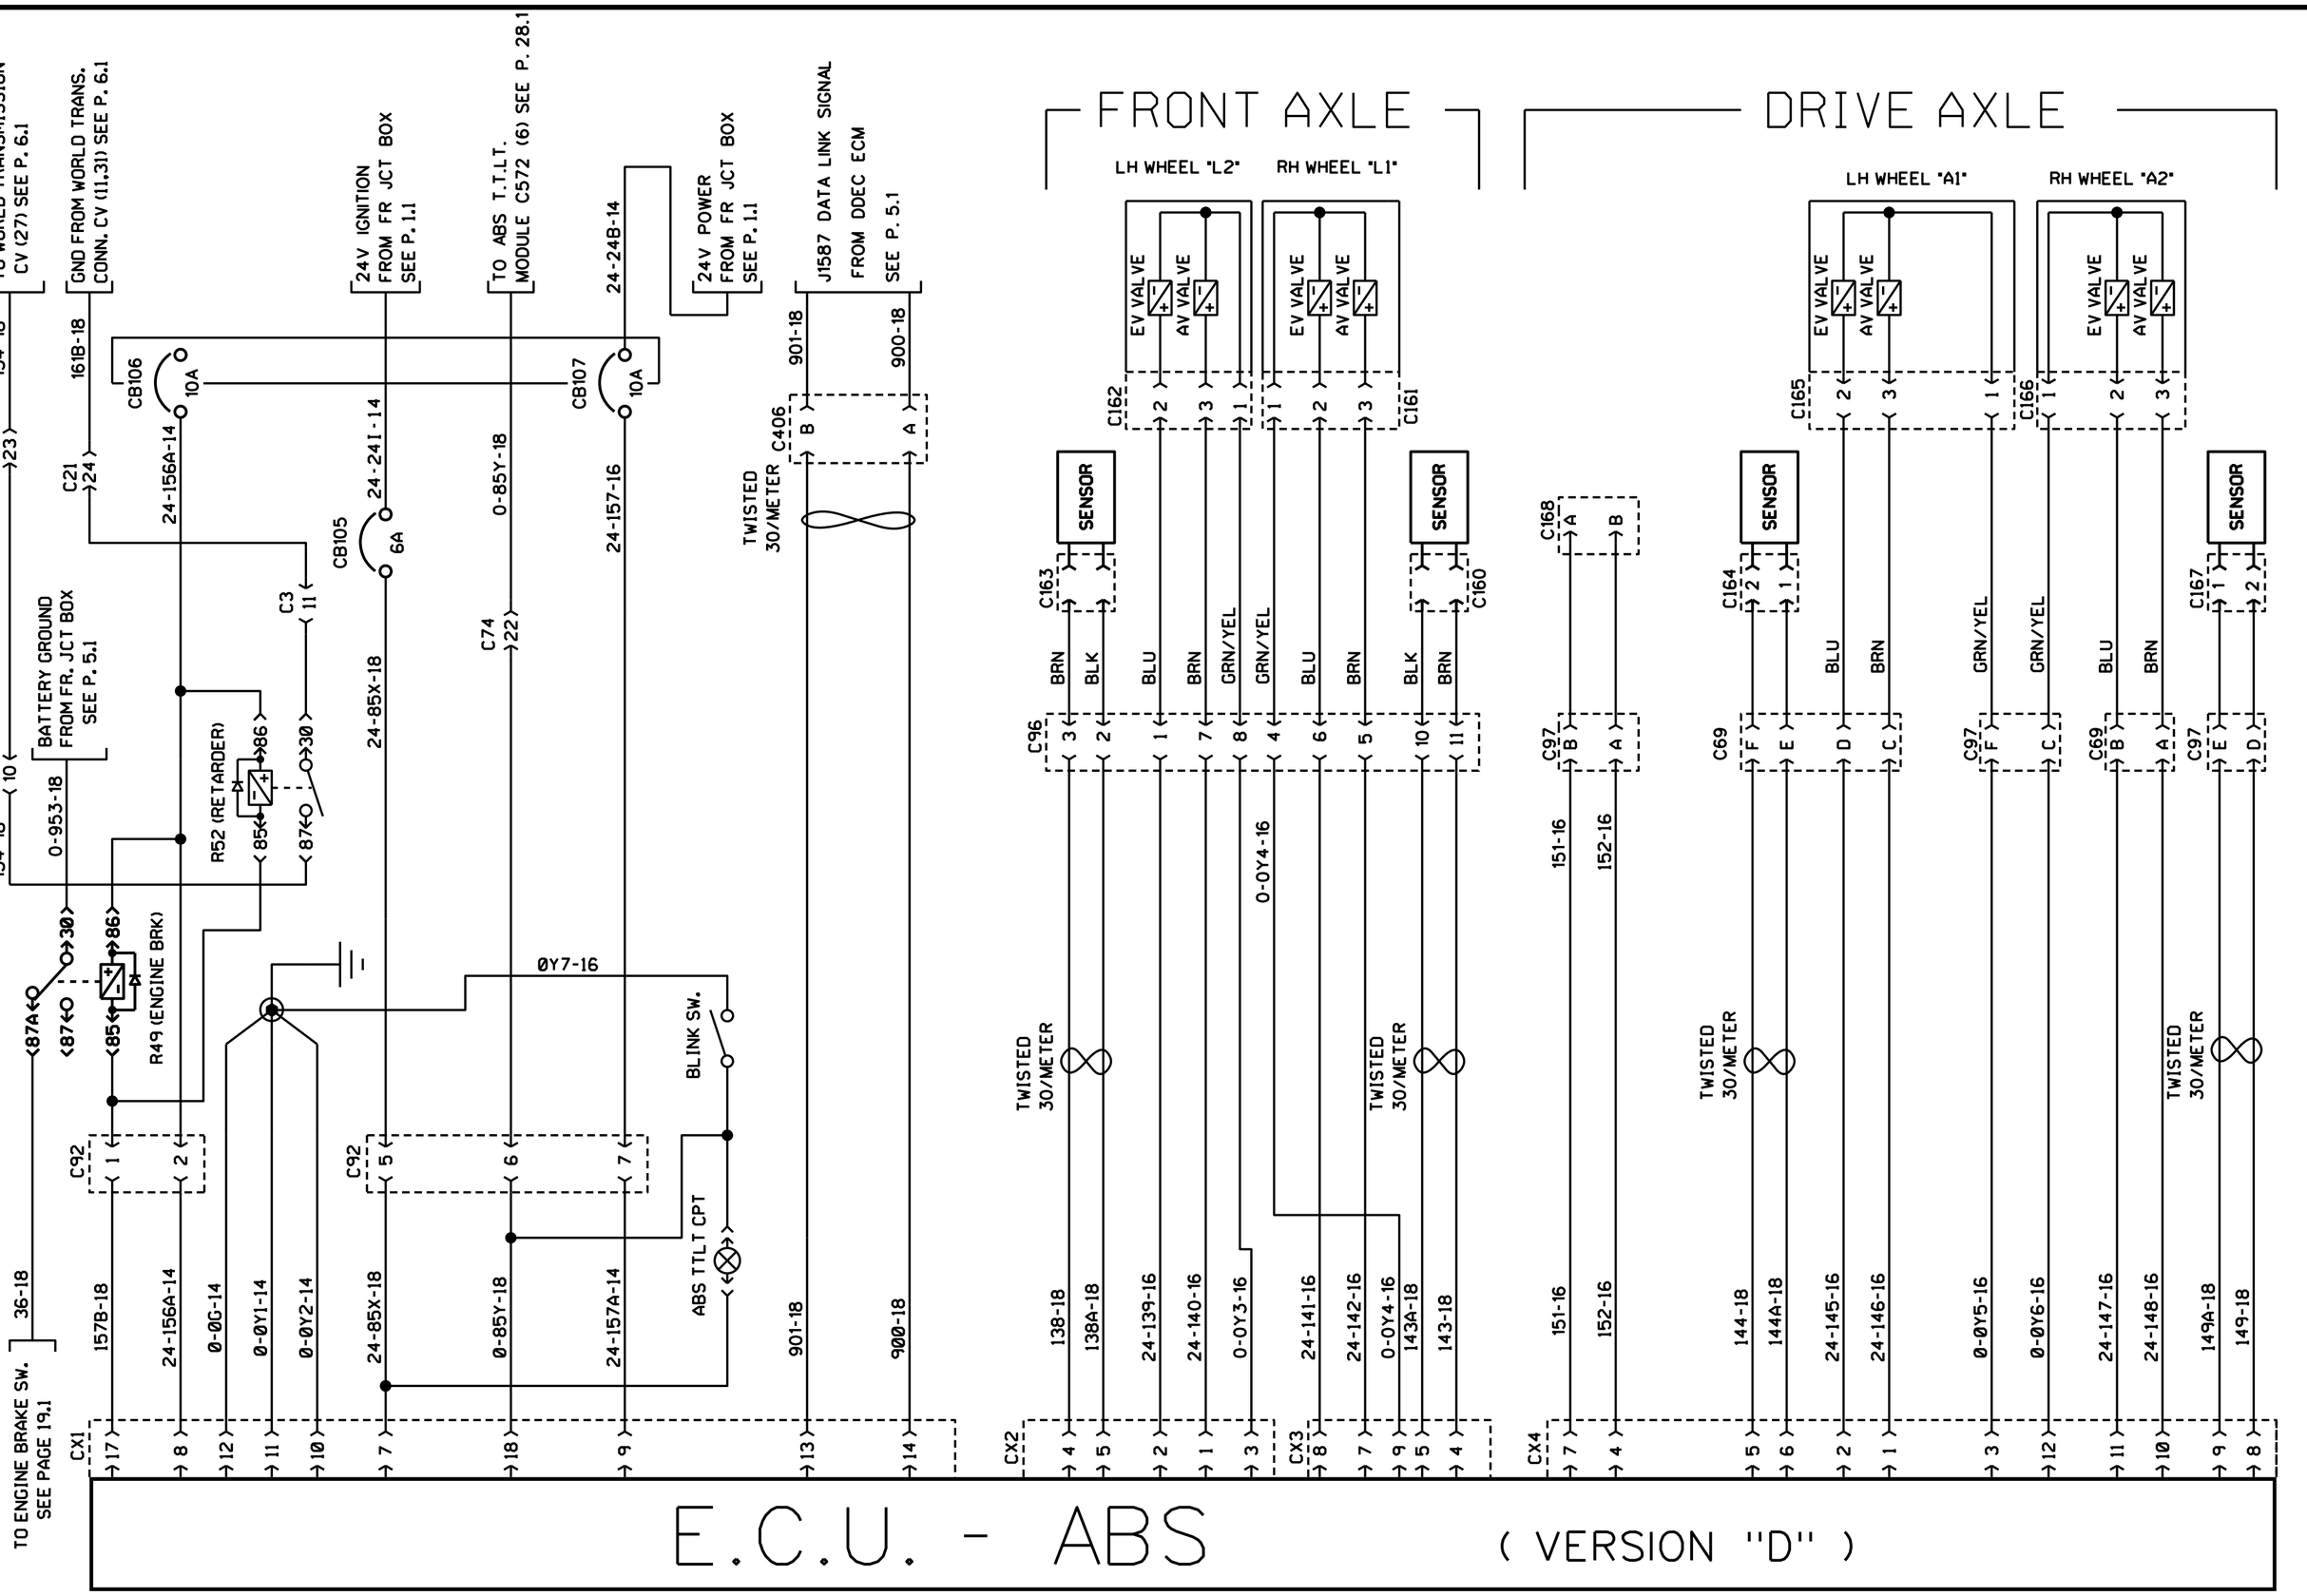

E.C.U. - ABS (VERSION "D")

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 21.1	REVISION 00

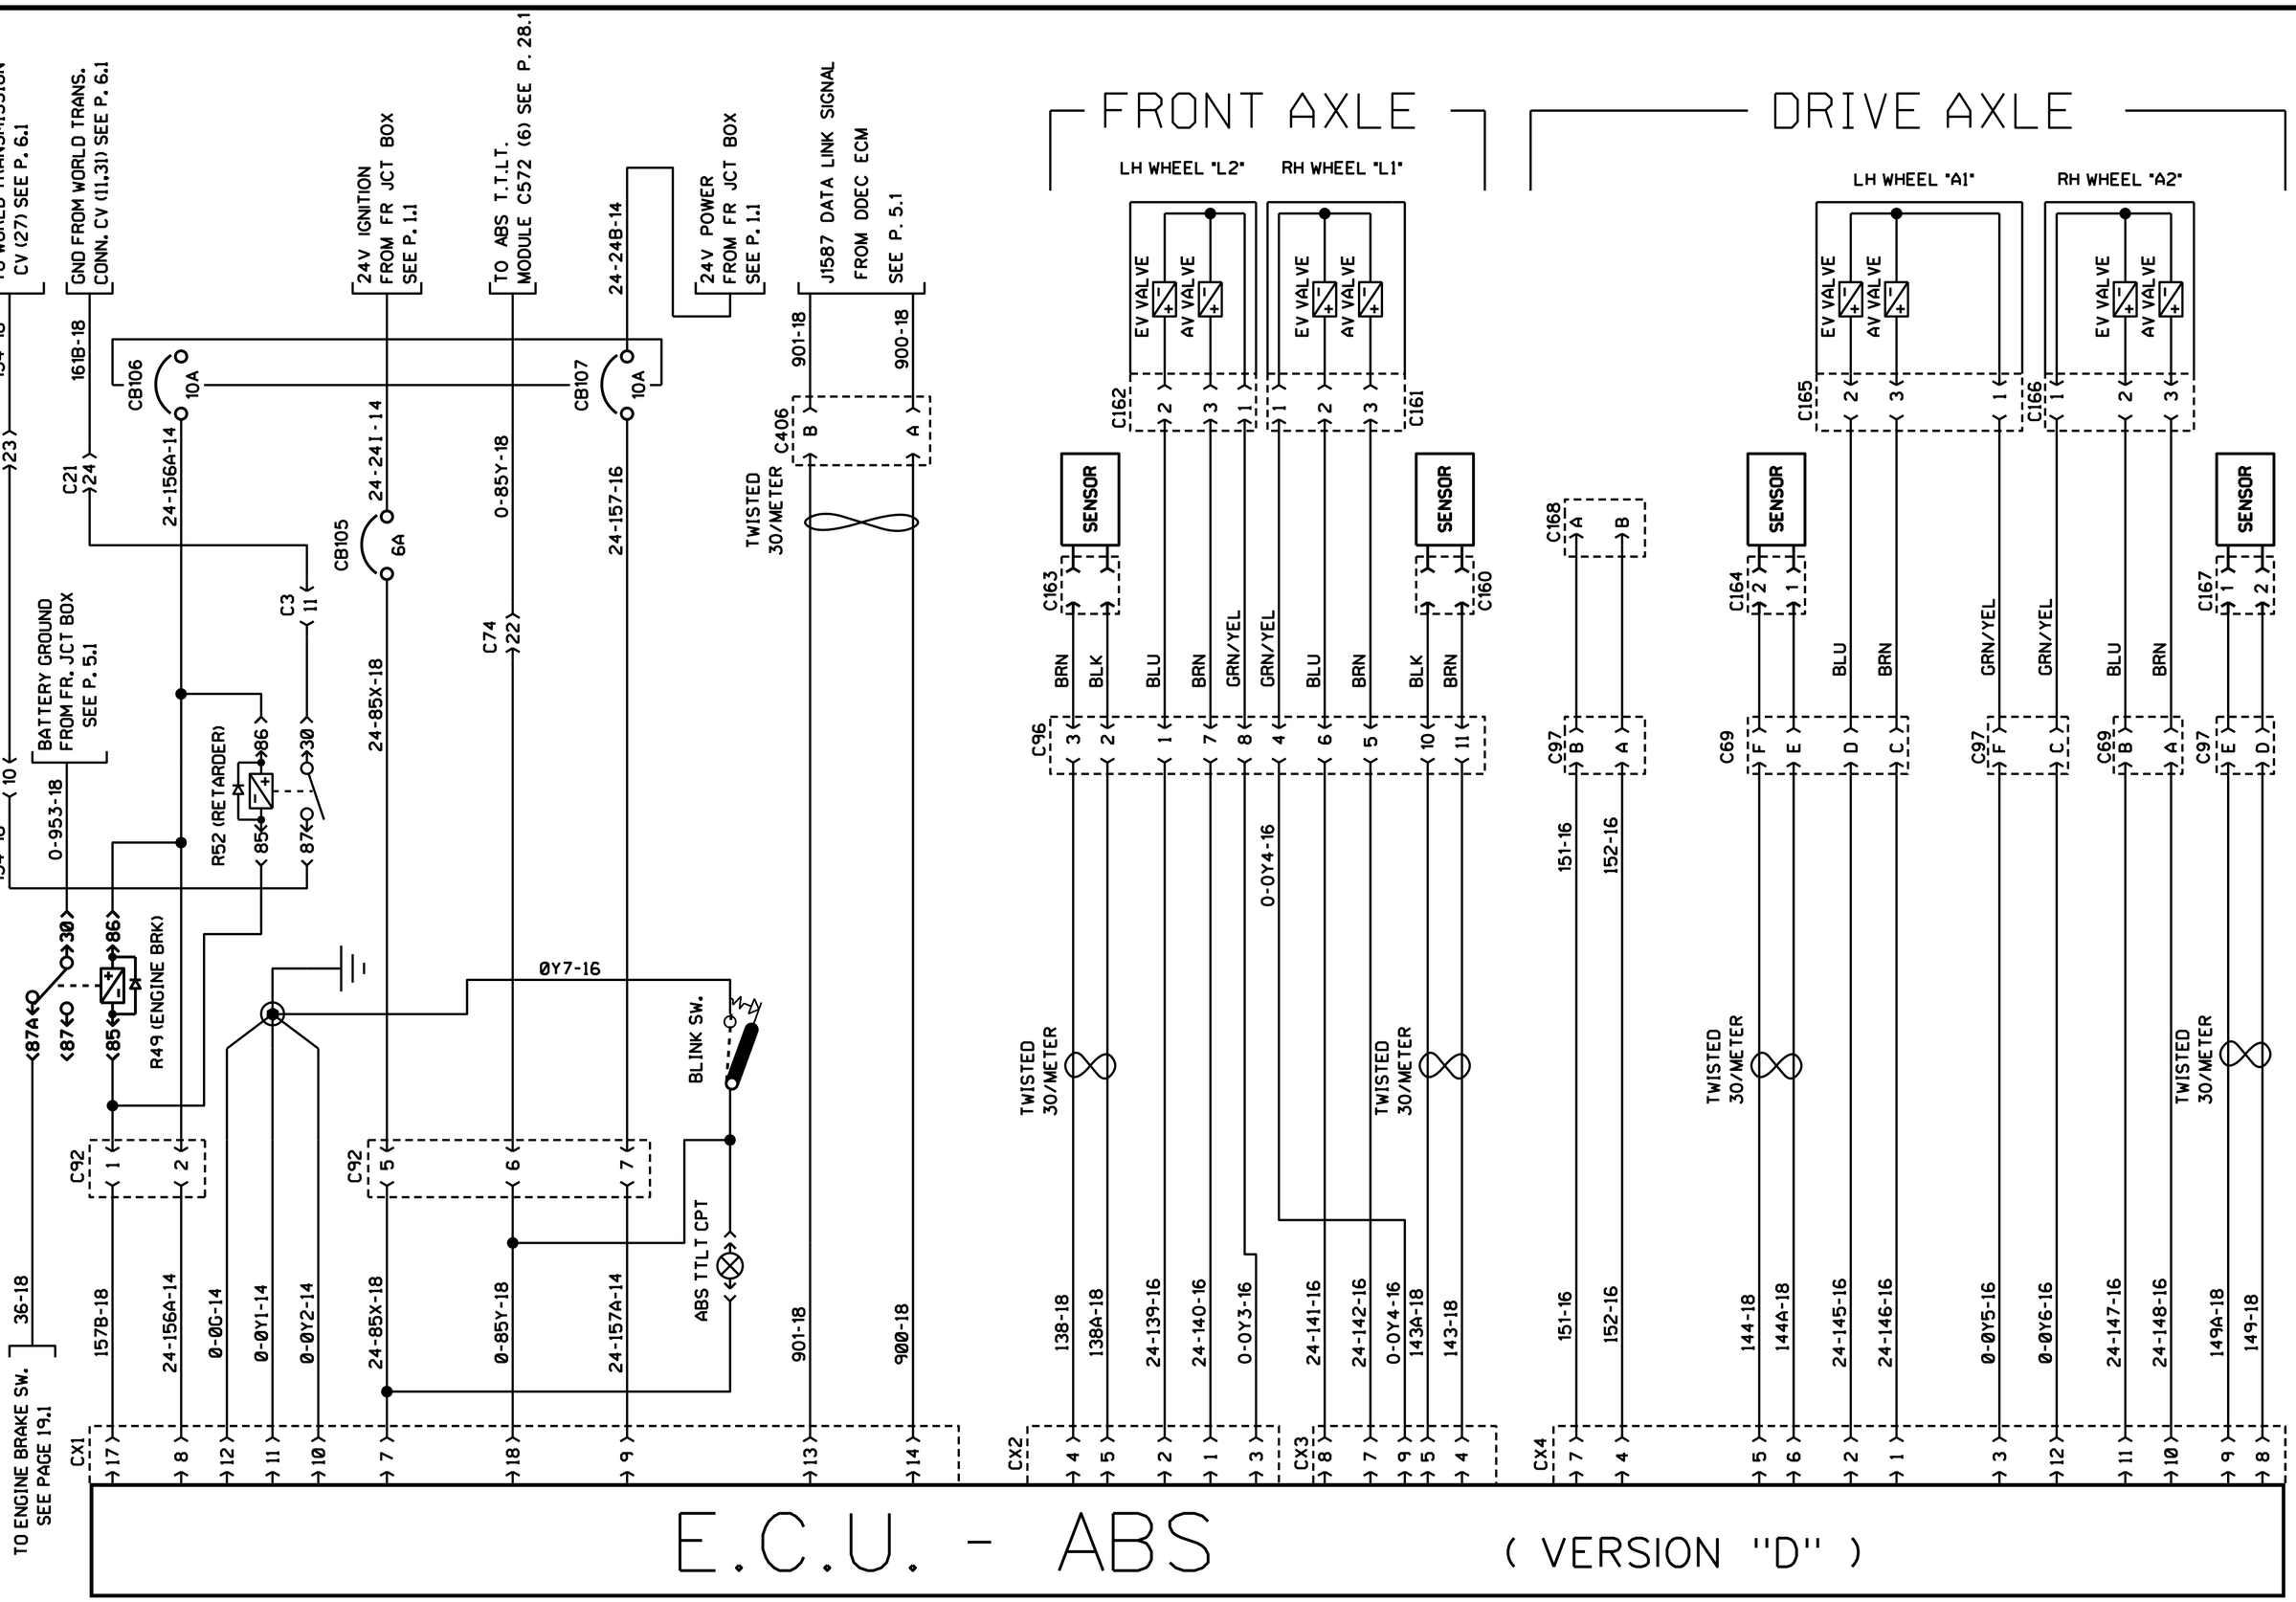

E.C.U. - ABS (VERSION "D")

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 21.1	REVISION 01

PREVOST

WIRING DIAGRAM

E.C.U. - ABS (VERSION "D")

TO ENGINE BRAKE SW. SEE PAGE 19.1 — 36-18 — 87A / 87 / 30 — 0-953-18 — BATTERY GROUND FROM FR. JCT BOX SEE P. 5.1

154-18 — C3 10 — C21 23 — 154-18 — TO WORLD TRANSMISSION CV (27) SEE P. 6.1

C21 24 — 161B-18 — GND FROM WORLD TRANS. CONN. CV (11,31) SEE P. 6.1

CX1 — C92

17 — 157B-18 — C92 1 — 85 / 86 — R49 (ENGINE BRK)

8 — 24-156A-14 — C92 2 — CB106 10A — 24-156A-14

12 — 0-0G-14

11 — 0-0Y1-14 — R52 (RETARDER) 85 / 86 — 87 / 30 — C3 11

10 — 0-0Y2-14

7 — 24-85X-18 — C92 5 — 24-85X-18 — CB105 6A — 24-24I-14 — 24V IGNITION FROM FR JCT BOX SEE P. 1.1

18 — 0-85Y-18 — C92 6 — C74 22 — 0-85Y-18 — TO ABS T.T.LT. MODULE C572 (6) SEE P. 28.1

0-7Y-16

9 — 24-157A-14 — C92 7 — 24-157-16 — CB107 10A — 24-24B-14

ABS TTLT CPT — BLINK SW. — 24V POWER FROM FR JCT BOX SEE P. 1.1

TWISTED 30/METER

13 — 901-18 — C406 B — 901-18 — J1587 DATA LINK SIGNAL FROM DDEC ECM SEE P. 5.1

14 — 900-18 — C406 A — 900-18

CX2

4 — 138-18 — TWISTED 30/METER — C96 3 — BRN — C163 — SENSOR

5 — 138A-18 — C96 2 — BLK — C163 —

C162

1 — 24-139-16 — C96 1 — BLU — C162 2 — OUTLET VALVE / INLET VALVE

2 — 24-140-16 — C96 7 — BRN — C162 3 —

3 — 0-0Y3-16 — C96 8 — GRN/YEL — C162 1 —

0-0Y4-16 — C96 4 — GRN/YEL — C162 1 —

CX3

7 — 24-141-16 — C96 6 — BLU — C162 2 — OUTLET VALVE / INLET VALVE

8 — 24-142-16 — C96 5 — BRN — C162 3 —

C161

9 — 0-0Y4-16

5 — 143A-18 — TWISTED 30/METER — C96 10 — BLK — C160 — SENSOR

4 — 143-18 — C96 11 — BRN — C160 —

CX4

7 — 151-16 — 151-16 — C97 B — C168 A

4 — 152-16 — 152-16 — C97 A — C168 B

TWISTED 30/METER

5 — 144-18 — C69 F — C164 2 — SENSOR

6 — 144A-18 — C69 E — C164 1 —

C165

1 — 24-145-16 — C69 D — BLU — C165 2 — OUTLET VALVE / INLET VALVE

2 — 24-146-16 — C69 C — BRN — C165 3 —

3 — 0-0Y5-16 — C97 F — GRN/YEL — C165 1 —

C166

12 — 0-0Y6-16 — C97 C — GRN/YEL — C166 1 —

10 — 24-147-16 — C69 B — BLU — C166 2 — OUTLET VALVE / INLET VALVE

11 — 24-148-16 — C69 A — BRN — C166 3 —

TWISTED 30/METER

9 — 149A-18 — C97 E — C167 1 — SENSOR

8 — 149-18 — C97 D — C167 2 —

FRONT AXLE

LH WHEEL "L2" — RH WHEEL "L1"

DRIVE AXLE

LH WHEEL "A1" — RH WHEEL "A2"

NO: D060902

PAGE: 21.1

REVISION 02

PREVOST

WIRING DIAGRAM

E.C.U. - ABS (VERSION "D")

TO ENGINE BRAKE SW. SEE PAGE 19.1

36-18

87A 87 30

R49 (ENGINE BRK)

85 86

154-18 C3 10 — C21 23 — 154-18 — TO WORLD TRANSMISSION CV (27) SEE P. 6.1

0-953-18 — BATTERY GROUND FROM FR. JCT BOX SEE P. 5.1

C21 24 — 161B-18 — GND FROM WORLD TRANS. CONN. CV (11,31) SEE P. 6.1

CX1

17 — 157B-18 — C92 1

8 — 24-156A-14 — C92 2 — 24-156A-14 — CB106 10A

12 — 0-0G-14

11 — 0-0Y1-14

10 — 0-0Y2-14

R52 85 86 — 87 30 — C3 11

C92 5 — 7 — 24-85X-18 — 24-85X-18 — CB105 6A — 24-24I-14 — 24V IGNITION FROM FR JCT BOX SEE P. 1.1

18 — 0-85Y-18 — C92 6 — C74 22 — 0-85Y-18 — TO ABS T.T.LT. MODULE C572 (6) SEE P. 28.1

0Y7-16

C92 7 — 9 — 24-157A-14 — 24-157-16 — CB107 10A — 24-24B-14

24V POWER FROM FR JCT BOX SEE P. 1.1

ABS TTLT CPT

BLINK SW.

TWISTED 30/METER

13 — 901-18 — C406 B — 901-18 — J1587 DATA LINK SIGNAL FROM DDEC ECM SEE P. 5.1

14 — 900-18 — C406 A — 900-18

CX2

4 — 138-18 — TWISTED 30/METER — C96 3 — BRN — C163 — SENSOR

5 — 138A-18 — C96 2 — BLK — C163 — SENSOR

C162

1 — 24-139-16 — C96 1 — BLU — C162 2 — OUTLET VALVE

2 — 24-140-16 — C96 7 — BRN — C162 3 — INLET VALVE

3 — 0-0Y3-16 — C96 8 — GRN/YEL — C162 1

0-0Y4-16 — C96 4 — GRN/YEL — C162 1 — OUTLET VALVE

CX3

7 — 24-141-16 — C96 6 — BLU — C162 2 — INLET VALVE

8 — 24-142-16 — C96 5 — BRN — C162 3

9 — 0-0Y4-16

TWISTED 30/METER

5 — 143A-18 — C96 10 — BLK — C160 — SENSOR

4 — 143-18 — C96 11 — BRN — C160 — SENSOR

C161

CX4

7 — 151-16 — 151-16 — C97 B — C168 A

4 — 152-16 — 152-16 — C97 A — C168 B

TWISTED 30/METER

5 — 144-18 — C69 F — C164 2 — SENSOR

6 — 144A-18 — C69 E — C164 1 — SENSOR

C165

1 — 24-145-16 — C69 D — BLU — C165 2 — OUTLET VALVE

2 — 24-146-16 — C69 C — BRN — C165 3 — INLET VALVE

3 — 0-0Y5-16 — C97 F — GRN/YEL — C165 1

C166

12 — 0-0Y6-16 — C97 C — GRN/YEL — C166 1

10 — 24-147-16 — C69 B — BLU — C166 2 — OUTLET VALVE

11 — 24-148-16 — C69 A — BRN — C166 3 — INLET VALVE

TWISTED 30/METER

9 — 149A-18 — C97 E — C167 1 — SENSOR

8 — 149-18 — C97 D — C167 2 — SENSOR

FRONT AXLE

LH WHEEL "L2"

RH WHEEL "L1"

DRIVE AXLE

LH WHEEL "A1"

RH WHEEL "A2"

NO: D060902

PAGE: 21.1

REVISION 12

PREVOST

WIRING DIAGRAM

E.C.U. - ABS (VERSION "D")

TO ENGINE BRAKE SW. SEE PAGE 19.1

36-18

87A

87

30

154-18 C3 10

C21 23 154-18 TO WORLD TRANSMISSION CV (27) SEE P. 6.1

0-953-18 BATTERY GROUND FROM FR. JCT BOX SEE P. 5.1

C21 24 161B-18 GND FROM WORLD TRANS. CONN. CV (11,31) SEE P. 6.1

CX1

C92

17 157B-18 1 85 86 R49 (ENGINE BRK)

8 24-156A-14 2 24-156A-14 CB106 10A

12 0-0G-14

11 0-0Y1-14 R52 (RETARDER) 85 86

10 0-0Y2-14 87 30 C3 11

C92

7 24-85X-18 5 24-85X-18 CB105 6A 24-24I-14 24V IGNITION FROM FR JCT BOX SEE P. 1.1

16 0-157D-18

18 0-85Y-18 6 C74 22 0-85Y-18 TO ABS T.T.LT. MODULE C572 (6) SEE P. 28.1

0Y7-16

9 24-157A-14 7 24-157-16 CB107 10A 24-24B-14

24V POWER FROM FR JCT BOX SEE P. 1.1

ABS TTLT CPT

BLINK SW.

R56 (ATC LAMP) 86 85 30 87 87A

TWISTED 30/METER

C406

13 901-18 B 901-18 J1587 DATA LINK SIGNAL FROM DDEC ECM SEE P. 5.1

14 900-18 A 900-18

1 801-18 801-18 J1922 DATA LINK SIGNAL FROM DDEC ECM SEE P. 5.1

3 800-18 800-18

24-157E-18 TO ATC T.T.LT. C572(5) SEE P. 28.1

CX2

TWISTED 30/METER

C96

4 138-18 3 BRN C163 SENSOR

5 138A-18 2 BLK

C162

1 24-139-16 1 BLU 2 OUTLET VALVE

2 24-140-16 7 BRN 3 INLET VALVE

3 0-0Y3-16 8 GRN/YEL 1

0-0Y4-16 4 GRN/YEL 1 OUTLET VALVE

CX3

7 24-141-16 6 BLU 2 INLET VALVE

8 24-142-16 5 BRN 3

9 0-0Y4-16

TWISTED 30/METER

5 143A-18 10 BLK SENSOR

4 143-18 11 BRN C160

C161

FRONT AXLE

LH WHEEL "L2"

RH WHEEL "L1"

CX4

7 151-16 151-16 C97 B C168 A BLU C215 A SOL. ATC C215 B BRN

4 152-16 152-16 A B

SOL. TAG AXLE

24-157E-18 BLU C216 BRAKE DISABLE C216 BRN

0-0Y8-18

TWISTED 30/METER

C69

5 144-18 F C164 2 SENSOR

6 144A-18 E 1

C165

1 24-145-16 D BLU 2 OUTLET VALVE

2 24-146-16 C BRN 3 INLET VALVE

C97

3 0-0Y5-16 F GRN/YEL 1

12 0-0Y6-16 C GRN/YEL C166 1

C69

10 24-147-16 B BLU 2 OUTLET VALVE

11 24-148-16 A BRN 3 INLET VALVE

TWISTED 30/METER

C97

9 149A-18 E C167 1 SENSOR

8 149-18 D 2

LH WHEEL "A1"

RH WHEEL "A2"

DRIVE AXLE

NO: D060902

PAGE: 22.1 SP1

REVISION 00

PREVOST

WIRING DIAGRAM

E.C.U. - ABS (VERSION "D")

NO: D060902

PAGE: 21.1 SP1

REVISION 08

TO ENGINE BRAKE SW. SEE PAGE 19.1

36-18

CX1

C92

157B-18

24-156A-14

0-0G-14

0-0Y1-14

0-0Y2-14

87A

87

30

85

86

R49 (ENGINE BRK)

154-18

C3

10

C21

23

154-18

TO WORLD TRANSMISSION CV (27) SEE P. 6.1

0-953-18

BATTERY GROUND FROM FR. JCT BOX SEE P. 5.1

C21

24

161B-18

GND FROM WORLD TRANS. CONN. CV (11,31) SEE P. 6.1

CB106

10A

24-156A-14

R52 (RETARDER)

C3

11

CB105

6A

24-85X-18

24-241-14

24V IGNITION FROM FR JCT BOX SEE P. 1.1

0-157D-18

0-85Y-18

C74

22

TO ABS T.T.LT. MODULE C572 (6) SEE P. 28.1

0Y7-16

CB107

10A

24-157A-14

24-157-16

24-24B-14

24V POWER FROM FR JCT BOX SEE P. 1.1

ABS TTLT CPT

BLINK SW.

R56 (ATC LAMP)

TWISTED 30/METER

C406

901-18

900-18

J1587 DATA LINK SIGNAL FROM DDEC ECM SEE P. 5.1

801-18

800-18

J1922 DATA LINK SIGNAL FROM DDEC ECM SEE P. 5.1

24-157E-18

TO ATC T.T.LT. C572(5) SEE P. 28.1

CX2

CX3

CX4

C96

C97

C69

138-18

138A-18

24-139-16

24-140-16

0-0Y3-16

0-0Y4-16

24-141-16

24-142-16

143A-18

143-18

C163

C160

C161

C162

C164

C165

C166

C167

SENSOR

BRN

BLK

BLU

GRN/YEL

OUTLET VALVE

INLET VALVE

151-16

152-16

C168

C215

SOL. ATC

BRN

SOL. TAG AXLE BRAKE DISABLE

C216

0-0Y8-18

144-18

144A-18

24-145-16

24-146-16

0-0Y5-16

0-0Y6-16

24-147-16

24-148-16

149A-18

149-18

LH WHEEL "A1"

RH WHEEL "A2"

LH WHEEL "L2"

RH WHEEL "L1"

FRONT AXLE

DRIVE AXLE

PREVOST

WIRING DIAGRAM

E.C.U. - ABS (VERSION "D")

NO: D060902

PAGE: 21.1 SP1

REVISION 25

TO ENGINE BRAKE SW. SEE PAGE 19.1

36-18

87A

87

30

154-18 C3 10

C21 23 154-18 TO WORLD TRANSMISSION CV (27) SEE P. 6.1

0-953-18 BATTERY GROUND FROM FR. JCT BOX SEE P. 5.1

C21 24 161B-18 GND FROM WORLD TRANS. CONN. CV (11,31) SEE P. 6.1

CX1

17 157B-18 C92 1 85 86 R49 (ENGINE BRK)

8 24-156A-14 C92 2

CB106 24-156A-14 10A

12 0-0G-14

11 0-0Y1-14

10 0-0Y2-14

R52 85 86 87 30 C3 11

7 24-85X-18 C92 5

CB105 24-85X-18 6A 24-24I-14 24V IGNITION FROM FR JCT BOX SEE P. 1.1

16 0-157D-18

18 0-85Y-18 C92 6

C74 22 0-85Y-18 TO ABS T.T.LT. MODULE C572 (6) SEE P. 28.1

9 24-157A-14 C92 7

0Y7-16

CB107 24-157-16 10A 24-24B-14 24V POWER FROM FR JCT BOX SEE P. 1.1

ABS TTLT CPT

BLINK SW.

R56 (ATC LAMP) 86 85 30 87 87A

24-157E-18 TO ATC T.T.LT. C572(5) SEE P. 28.1

TWISTED 30/METER

13 901-18

14 900-18

C406 B A 901-18 900-18 J1587 DATA LINK SIGNAL FROM DDEC ECM SEE P. 5.1

1 801-18

3 800-18

801-18 800-18 J1922 DATA LINK SIGNAL FROM DDEC ECM SEE P. 5.1

157E

24-82A-18 FROM STOP LTS SW. R82 (86) SEE P. 19.1

R58 FS 0-0-18

CX2

TWISTED 30/METER

4 138-18 C96 3 BRN C163 SENSOR C162 OUTLET VALVE INLET VALVE

5 138A-18 C96 2 BLK

1 24-139-16 C96 1 BLU

2 24-140-16 C96 7 BRN

3 0-0Y3-16 C96 8 GRN/YEL

0-0Y4-16 C96 4 GRN/YEL C161 OUTLET VALVE INLET VALVE

CX3

7 24-141-16 C96 6 BLU

8 24-142-16 C96 5 BRN

9 0-0Y4-16

TWISTED 30/METER

5 143A-18 C96 10 BLK C160 SENSOR

4 143-18 C96 11 BRN

CX4

7 151-16 C97 B C168 A BLU C215 SOL. ATC C215 BRN

4 152-16 C97 A B

SOL. TAG AXLE BRAKE DISABLE

24-157E-18 BLU C216 C216 BRN

0-0Y8-18

TWISTED 30/METER

5 144-18 C69 F C164 2 SENSOR

6 144A-18 C69 E 1

C165 OUTLET VALVE INLET VALVE

1 24-145-16 C69 D BLU

2 24-146-16 C69 C BRN

3 0-0Y5-16 C97 F GRN/YEL

12 0-0Y6-16 C97 C GRN/YEL

C166 OUTLET VALVE INLET VALVE

10 24-147-16 C69 B BLU

11 24-148-16 C69 A BRN

TWISTED 30/METER

9 149A-18 C97 E C167 1 SENSOR

8 149-18 C97 D 2

FRONT AXLE

DRIVE AXLE

LH WHEEL "L2"

RH WHEEL "L1"

LH WHEEL "A1"

RH WHEEL "A2"

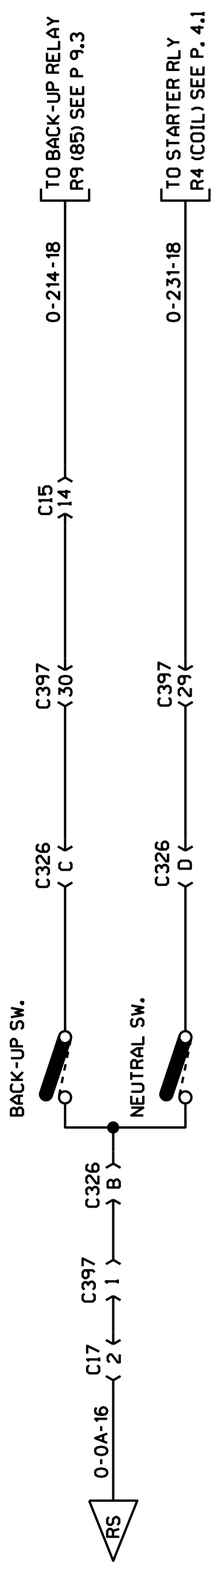

MANUAL TRANSMISSION

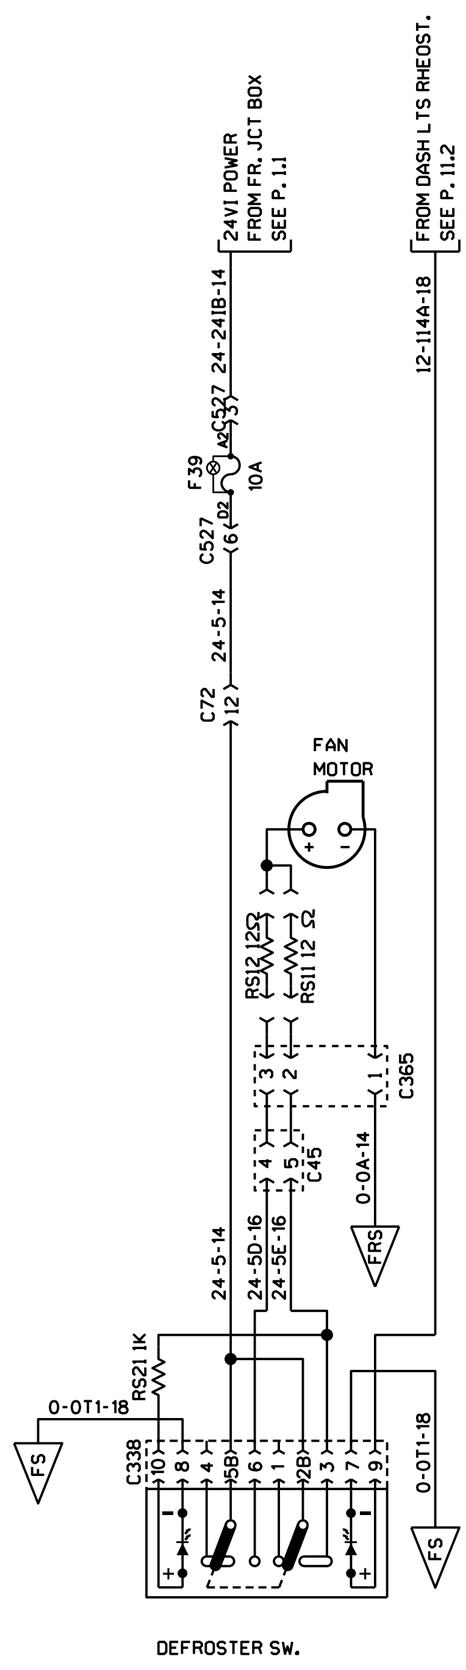

DEFROSTER SW.

UPPER WINDSHIELD DEFROST

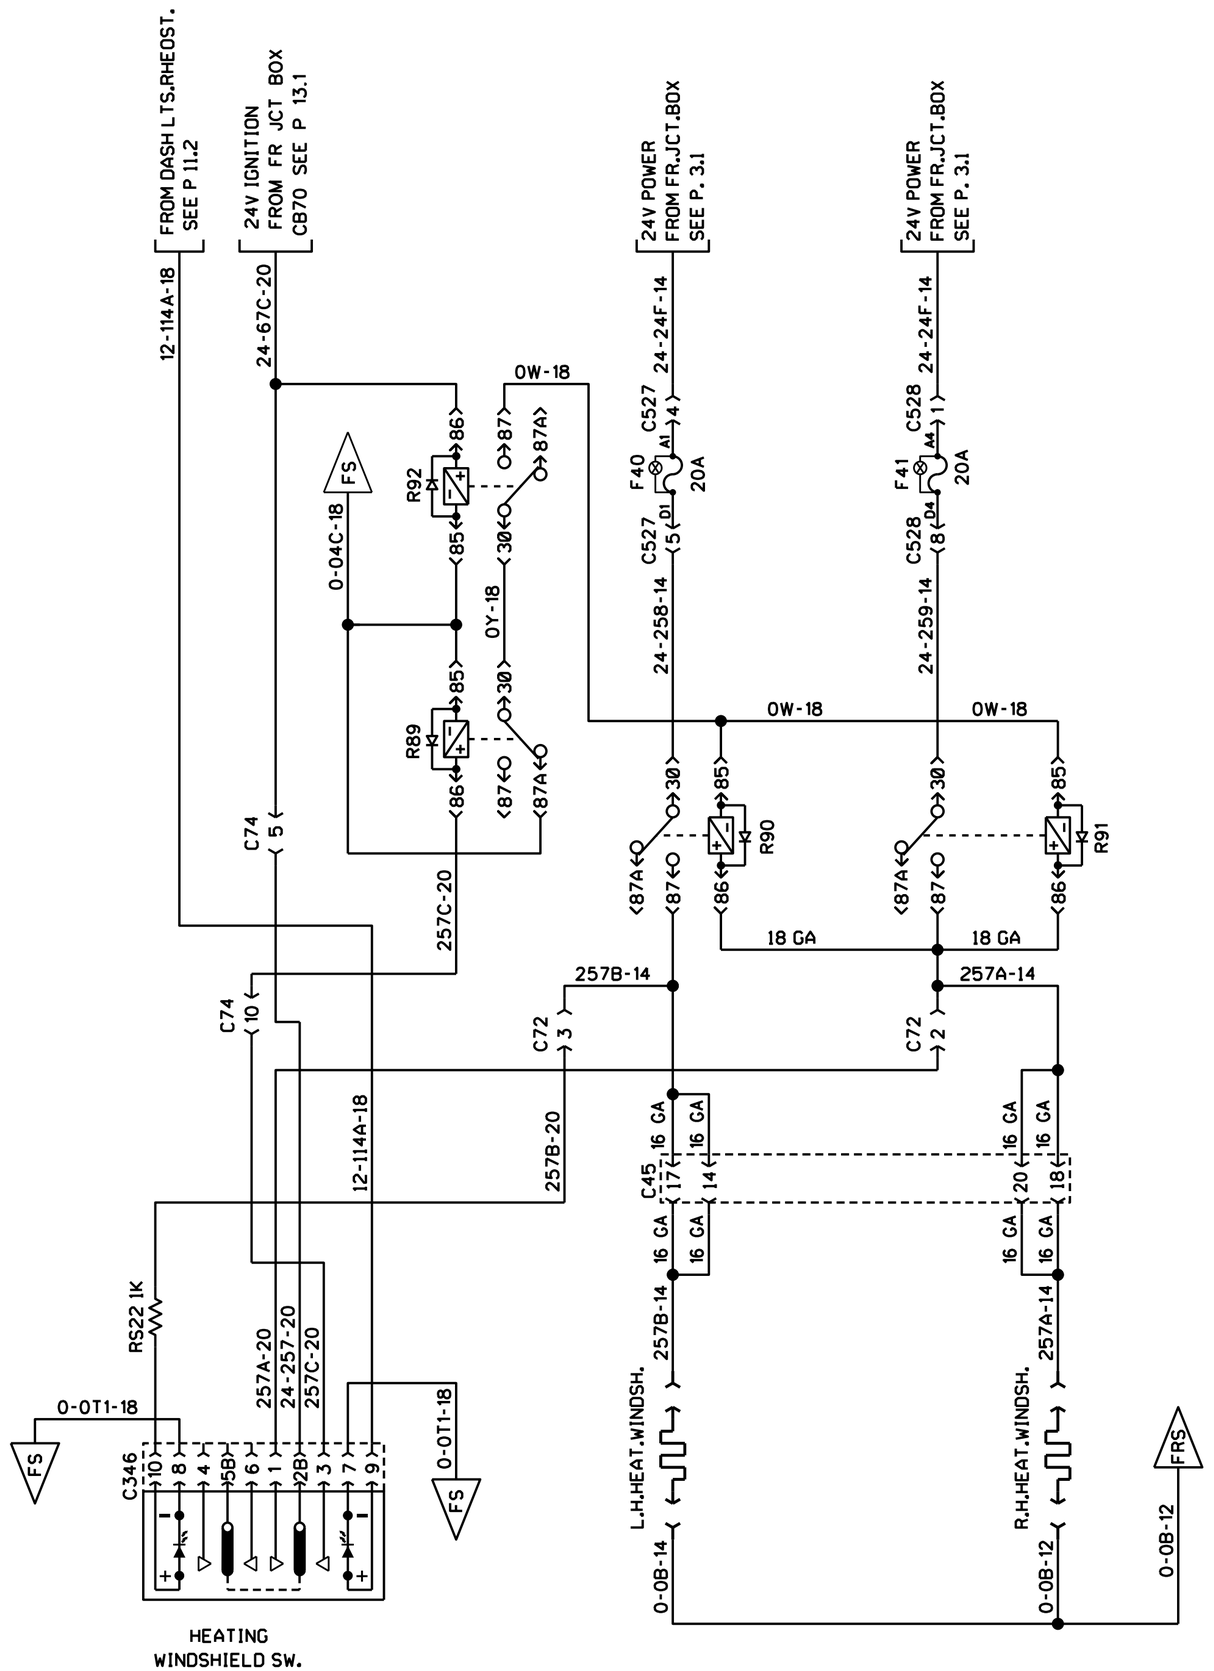

UPPER HEATED WINDSHIELD

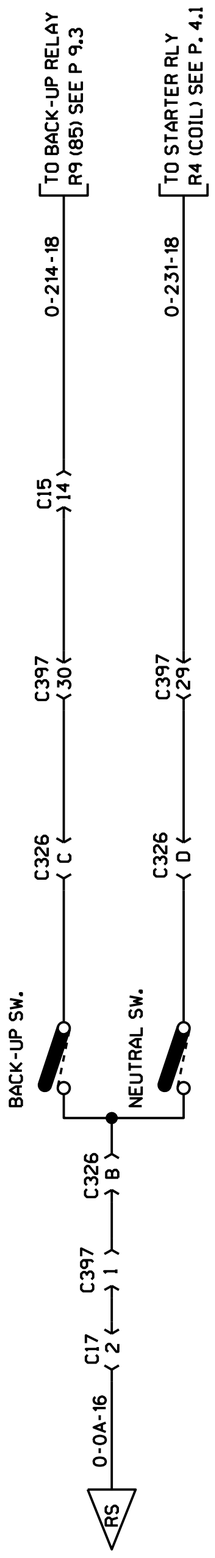

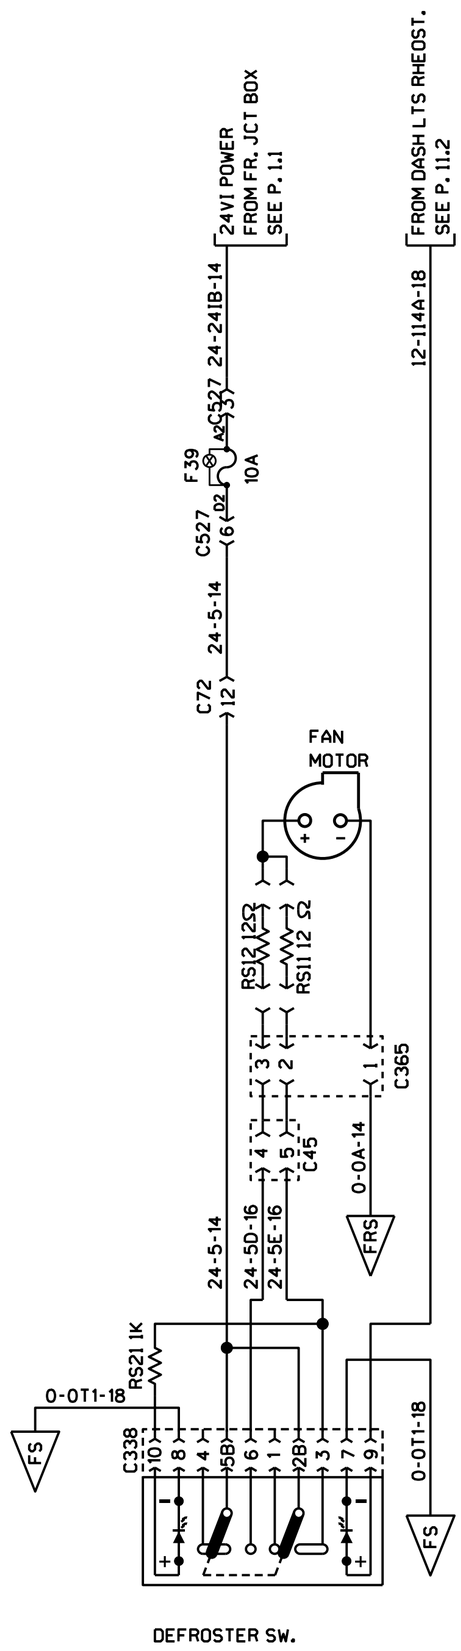

DEFROSTER SW.

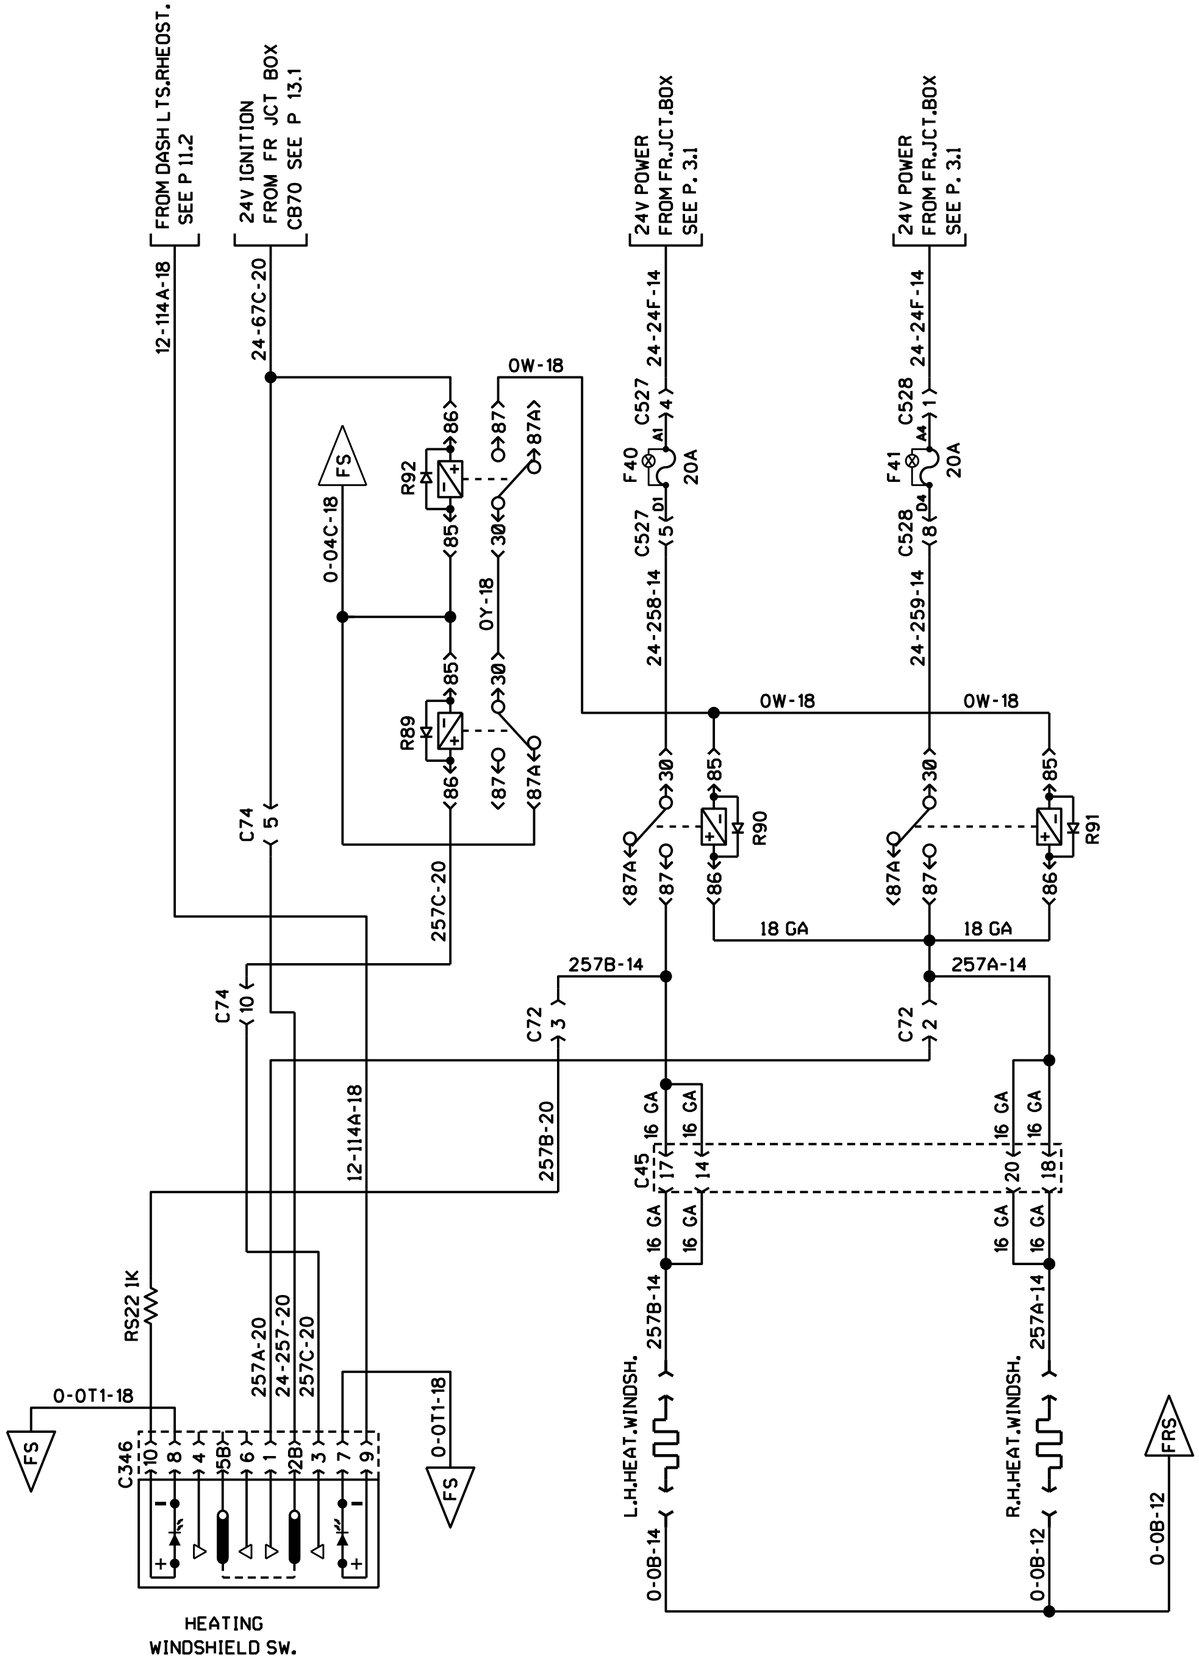

MANUAL TRANSMISSION | UPPER WINDSHIELD DEFROST | UPPER HEATED WINDSHIELD

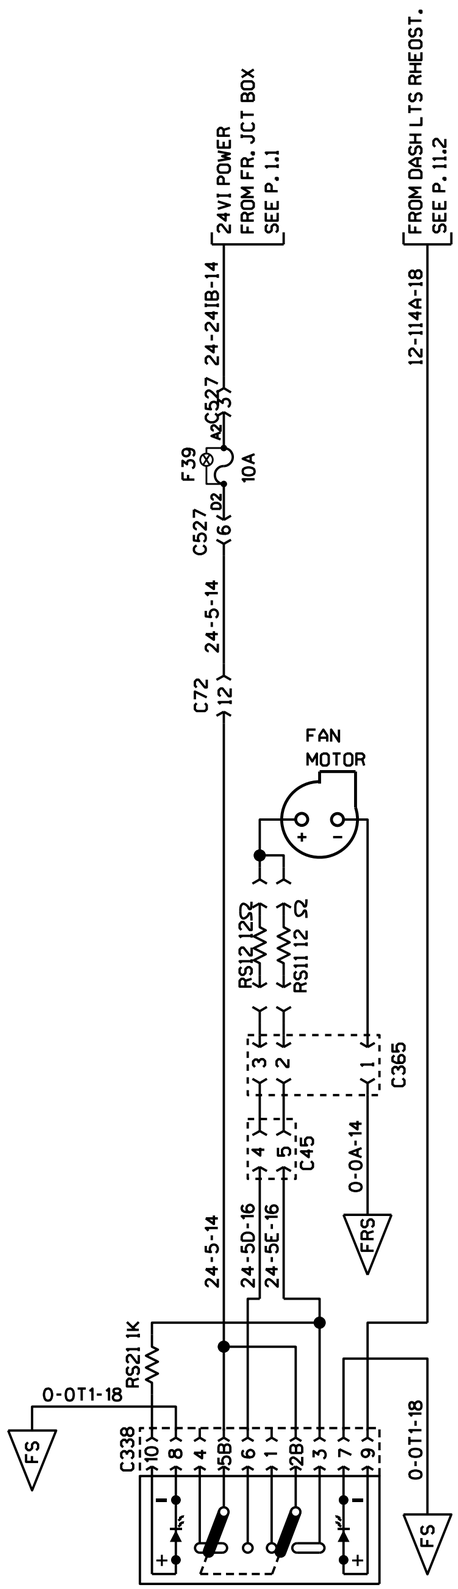

UPPER WINDSHIELD DEFROST

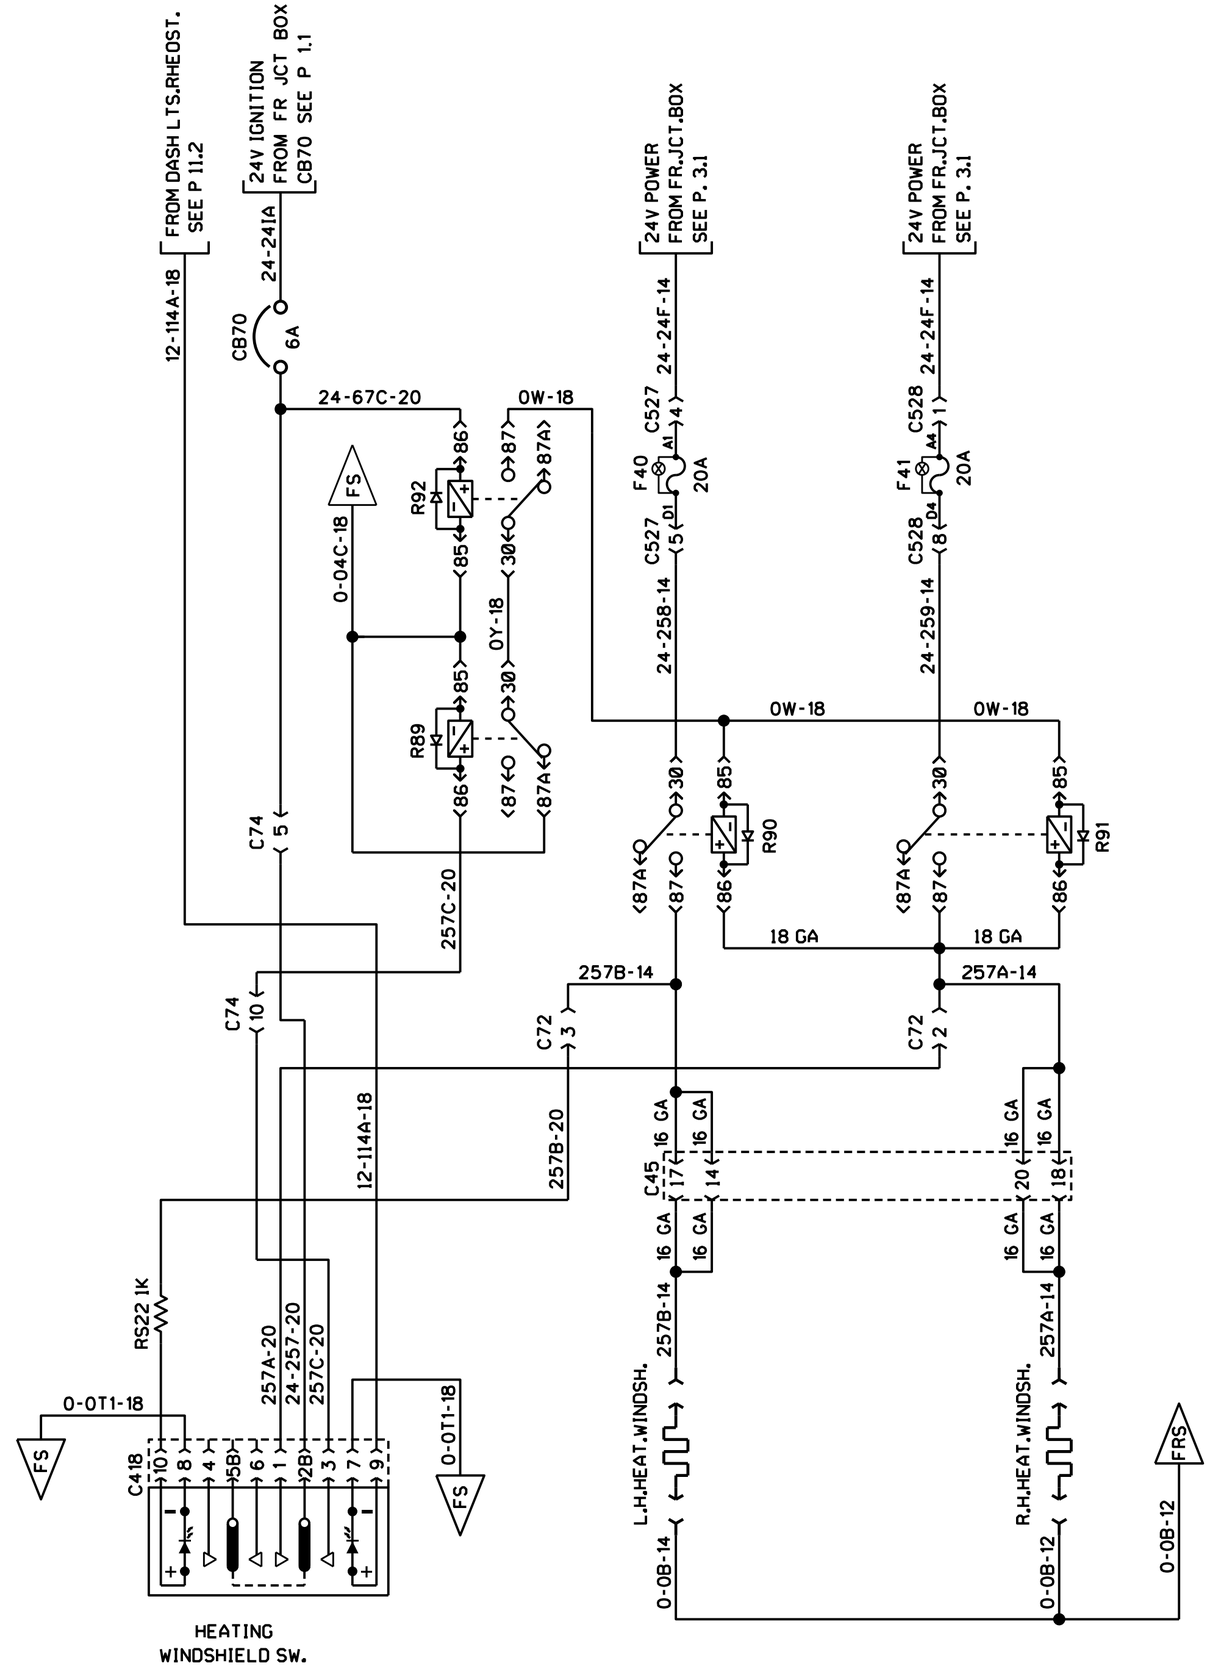

UPPER HEATED WINDSHIELD

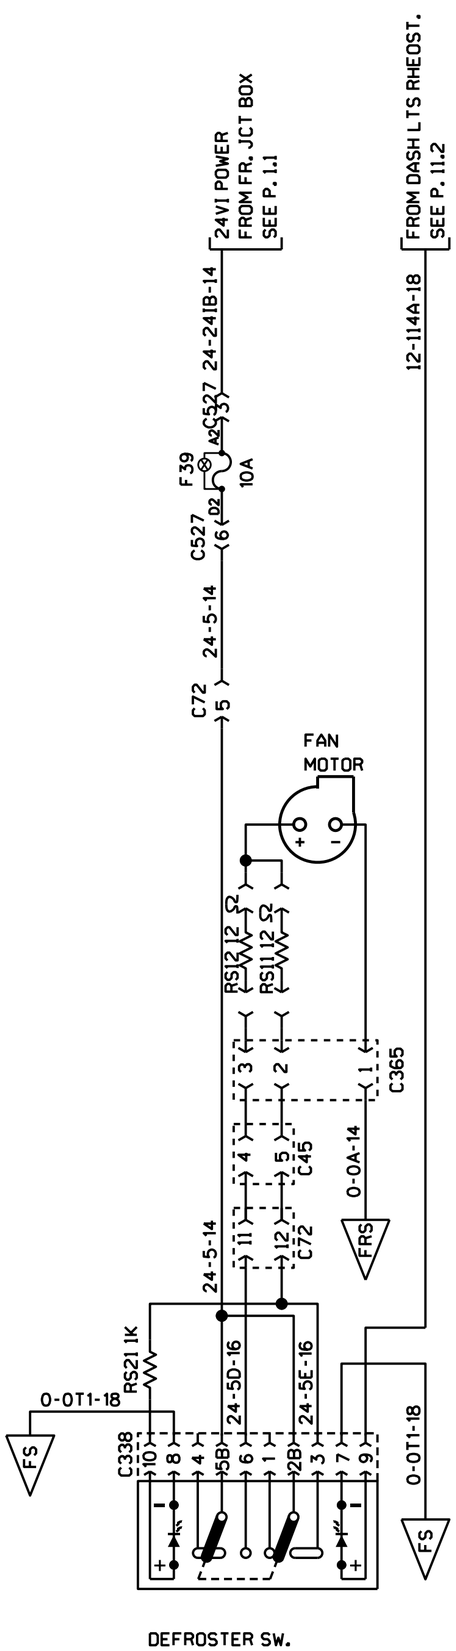

UPPER WINDSHIELD DEFROST

UPPER HEATED WINDSHIELD

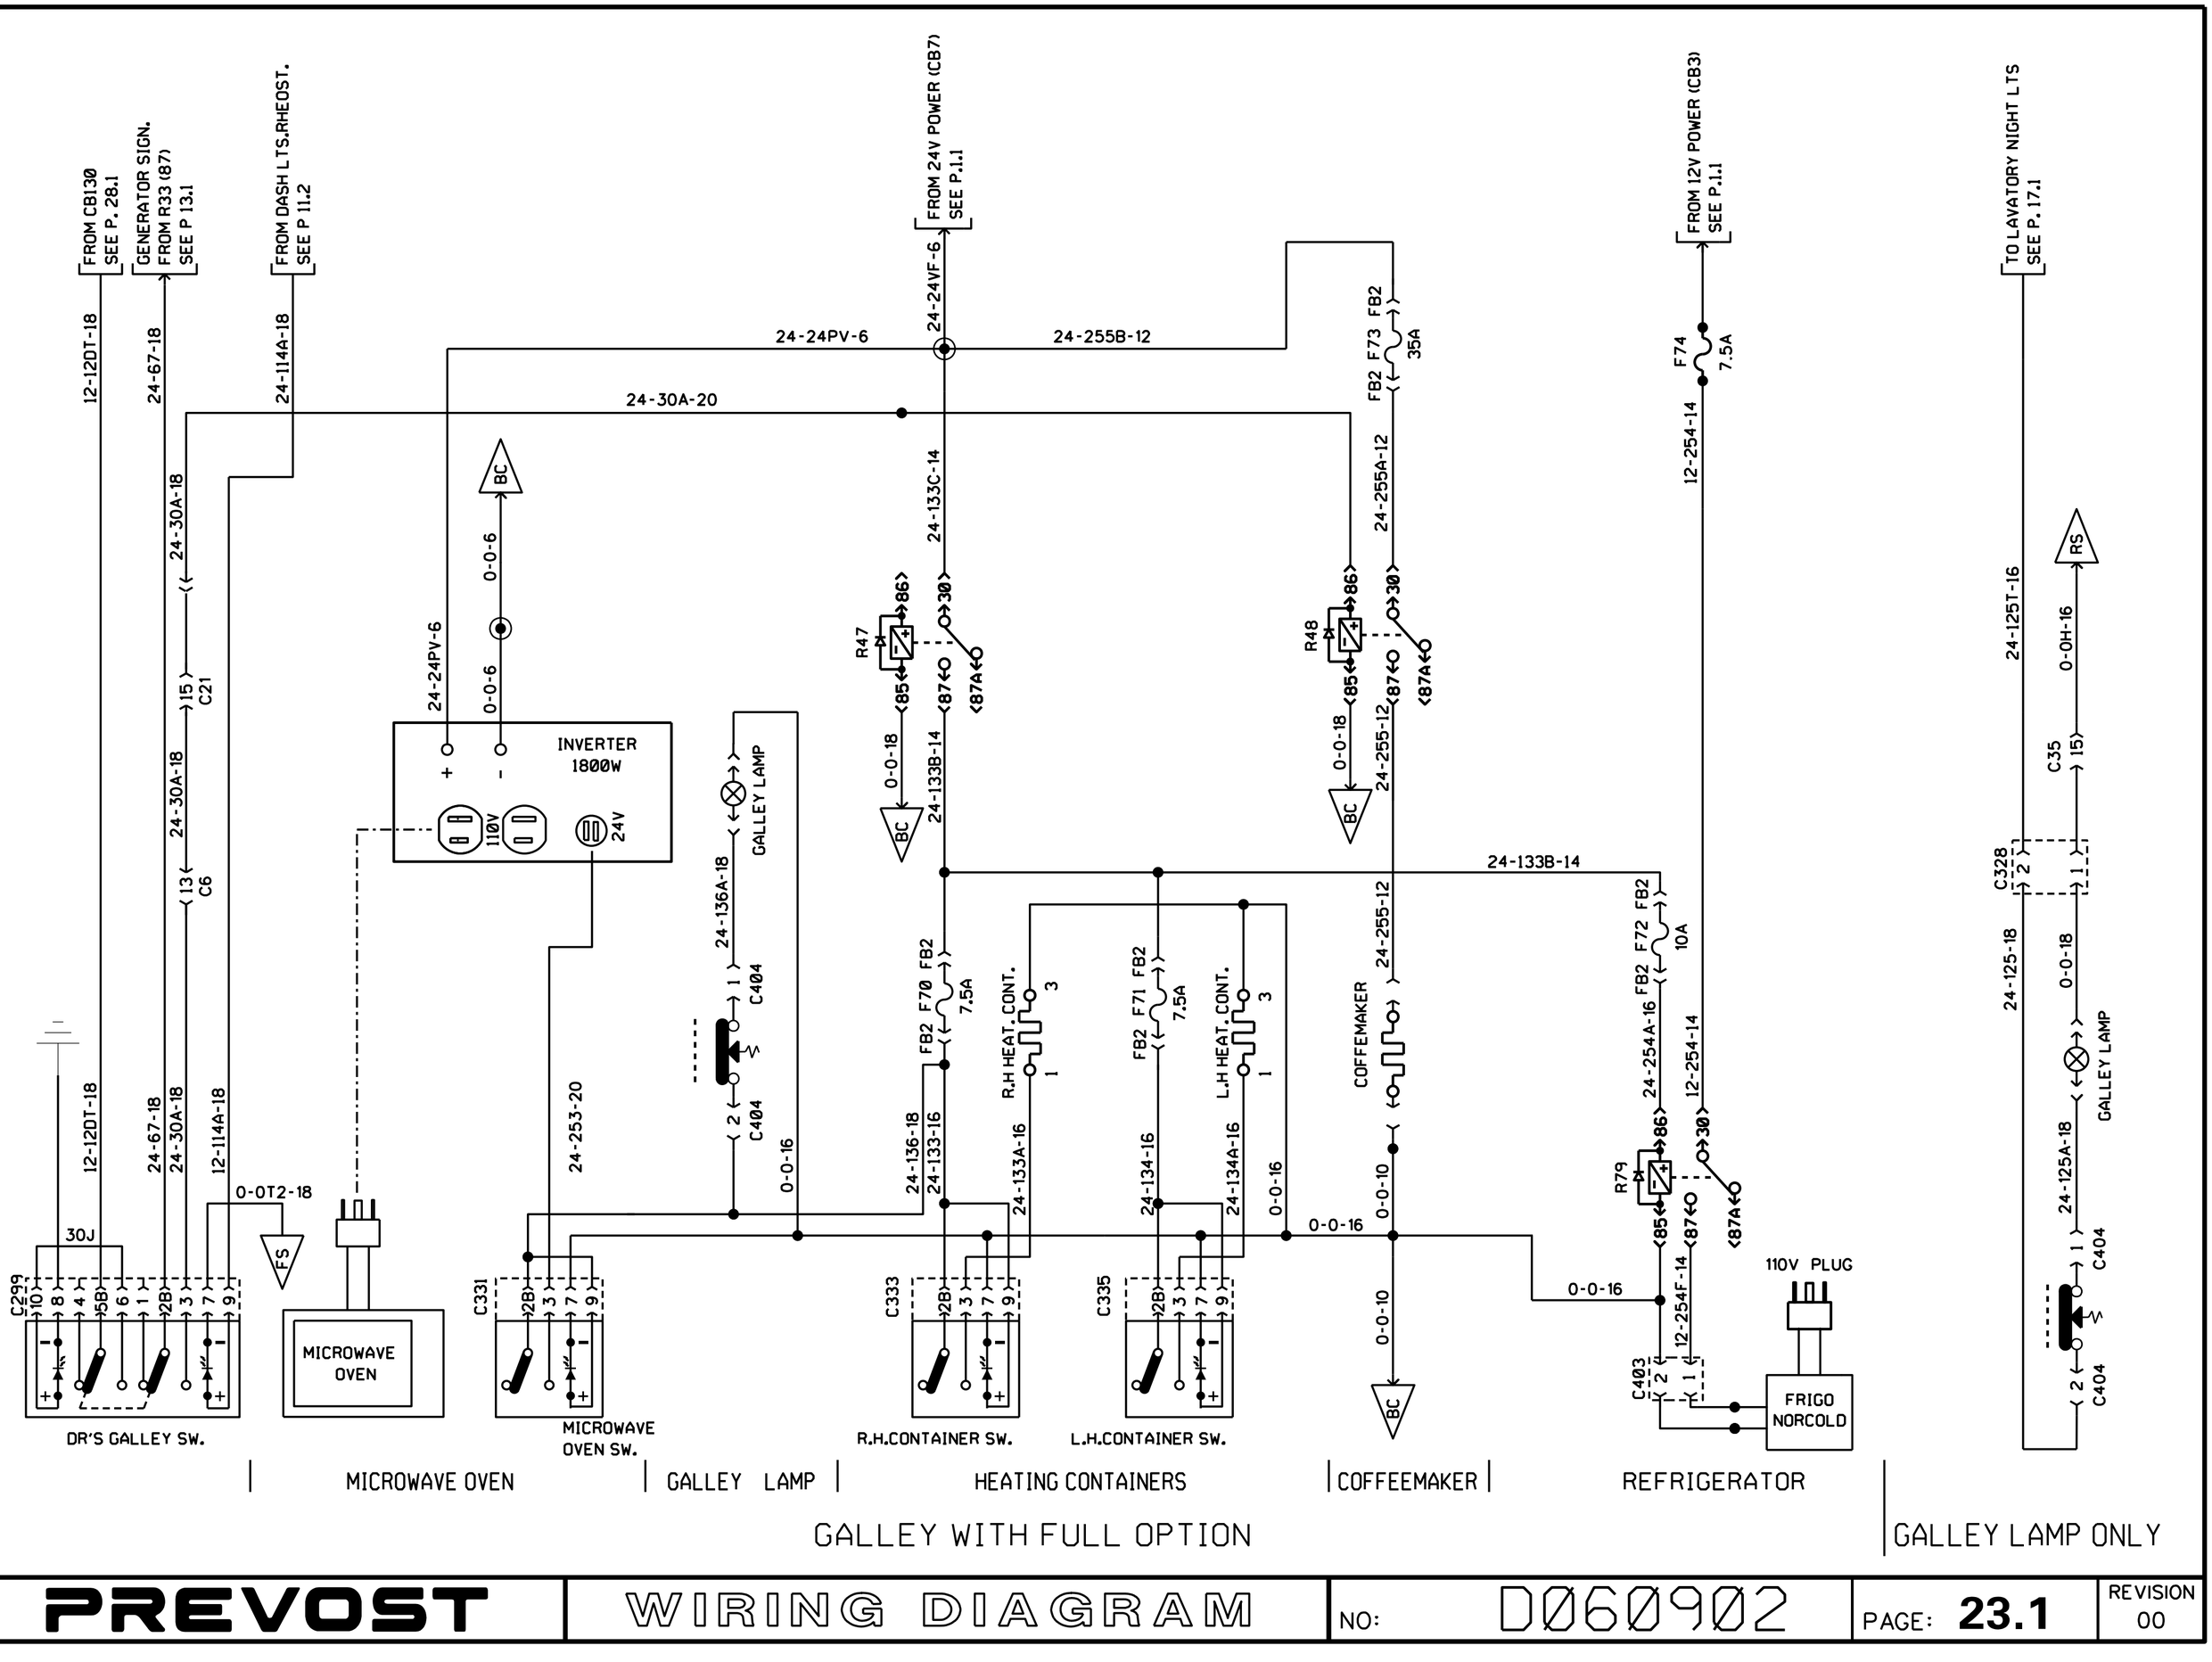

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 23.1	REVISION 00

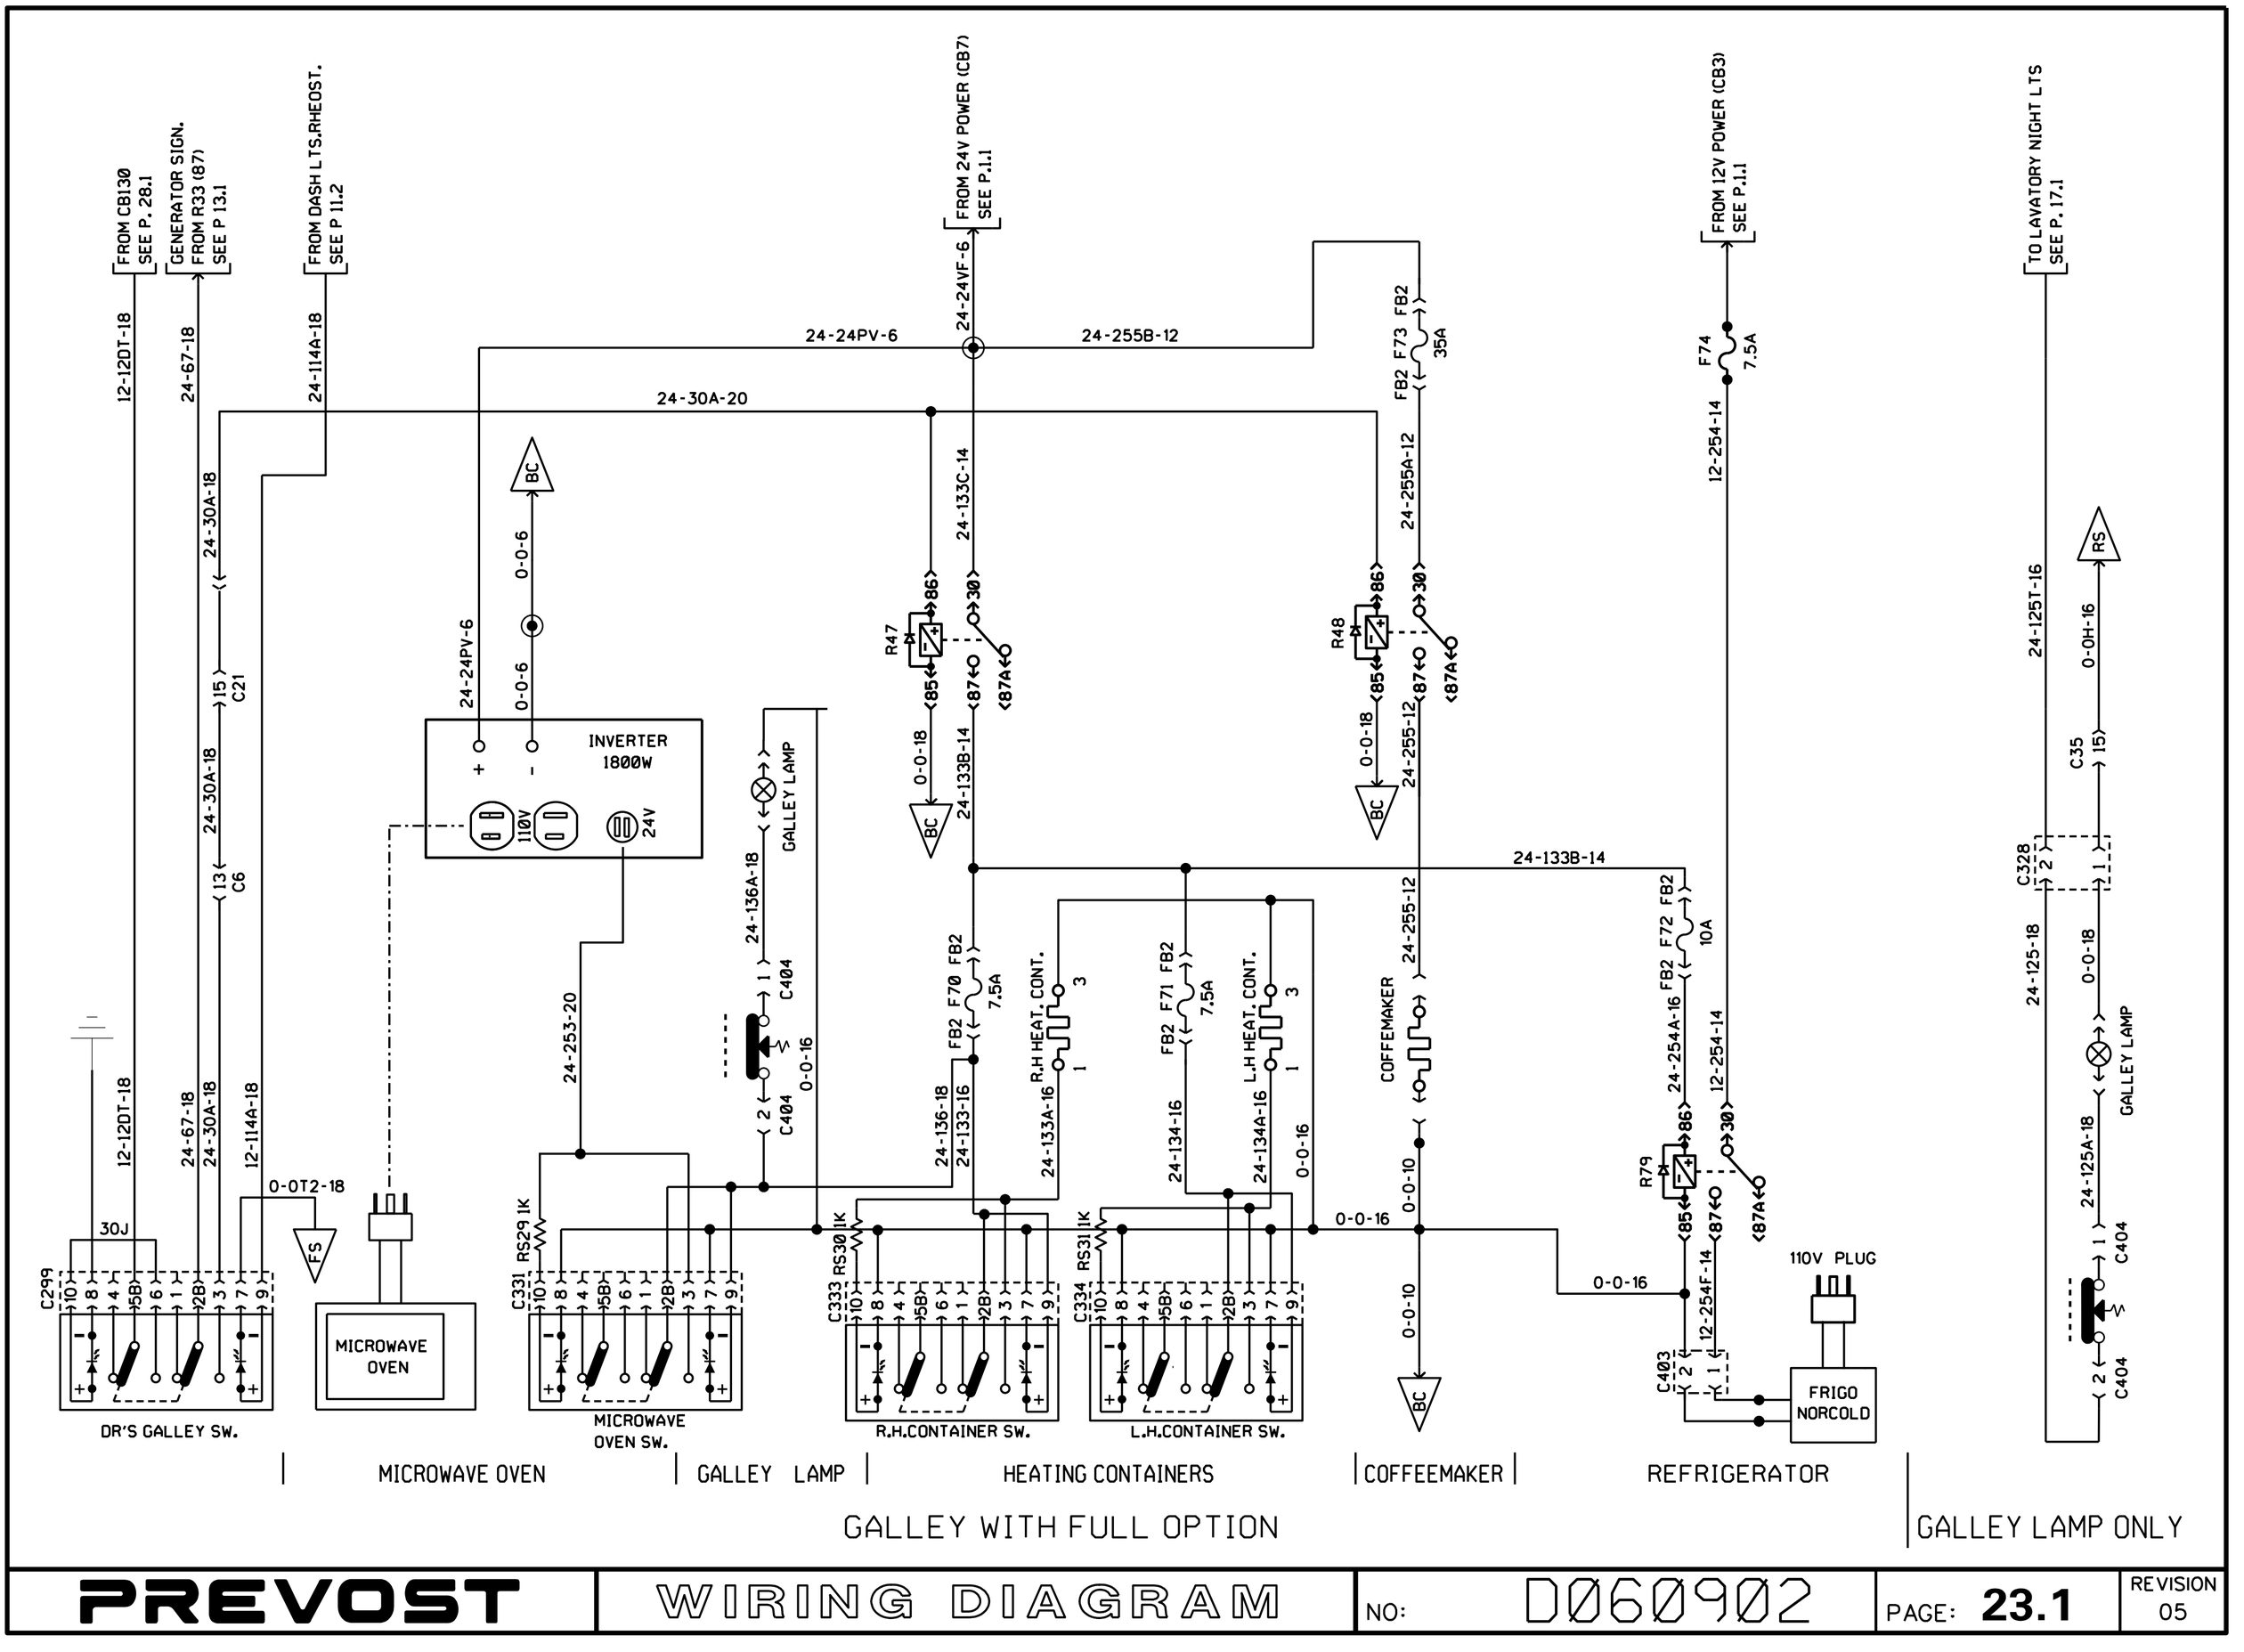
FROM CB130
SEE P. 28.1
12-12DT-18
GENERATOR SIGN.
FROM R33 (87)
SEE P 13.1
24-67-18
24-30A-18
15
C21
FROM DASH L TS.RHEOST.
SEE P 11.2
24-114A-18
FROM 24V POWER (CB7)
SEE P.1.1
24-24VF-6
24-24PV-6
24-255B-12
24-30A-20
FB2 F73 FB2
35A
FROM 12V POWER (CB3)
SEE P.1.1
F74
7.5A
12-254-14
TO LAVATORY NIGHT L TS
SEE P. 17.1
24-125T-16
RS
0-0H-16
C35
15
C328
2
1
24-125-18
0-0-18
GALLEY LAMP
24-125A-18
C404
BC
0-0-6
24-24PV-6
INVERTER
1800W
110V
24V
+
-
R47
86
85
87
30
87A
24-133C-14
0-0-18
24-133B-14
R48
24-255A-12
24-255-12
24-136A-18
GALLEY LAMP
C404
0-0-16
24-253-20
FB2 F70 FB2
7.5A
R.H HEAT. CONT.
3
1
24-136-18
24-133-16
24-133A-16
FB2 F71 FB2
7.5A
L.H HEAT. CONT.
24-134-16
24-134A-16
COFFEMAKER
0-0-10
FB2 F72 FB2
10A
24-254A-16
12-254-14
R79
12-254F-14
C403
110V PLUG
FRIGO
NORCOLD
0-0T2-18
30J
C299
10
8
4
5B
6
1
2B
3
7
9
FS
MICROWAVE
OVEN
DR'S GALLEY SW.
C331
RS29 1K
MICROWAVE
OVEN SW.
C333
RS30 1K
R.H.CONTAINER SW.
C334
RS31 1K
L.H.CONTAINER SW.
MICROWAVE OVEN
GALLEY LAMP
HEATING CONTAINERS
COFFEEMAKER
REFRIGERATOR
GALLEY LAMP ONLY
GALLEY WITH FULL OPTION

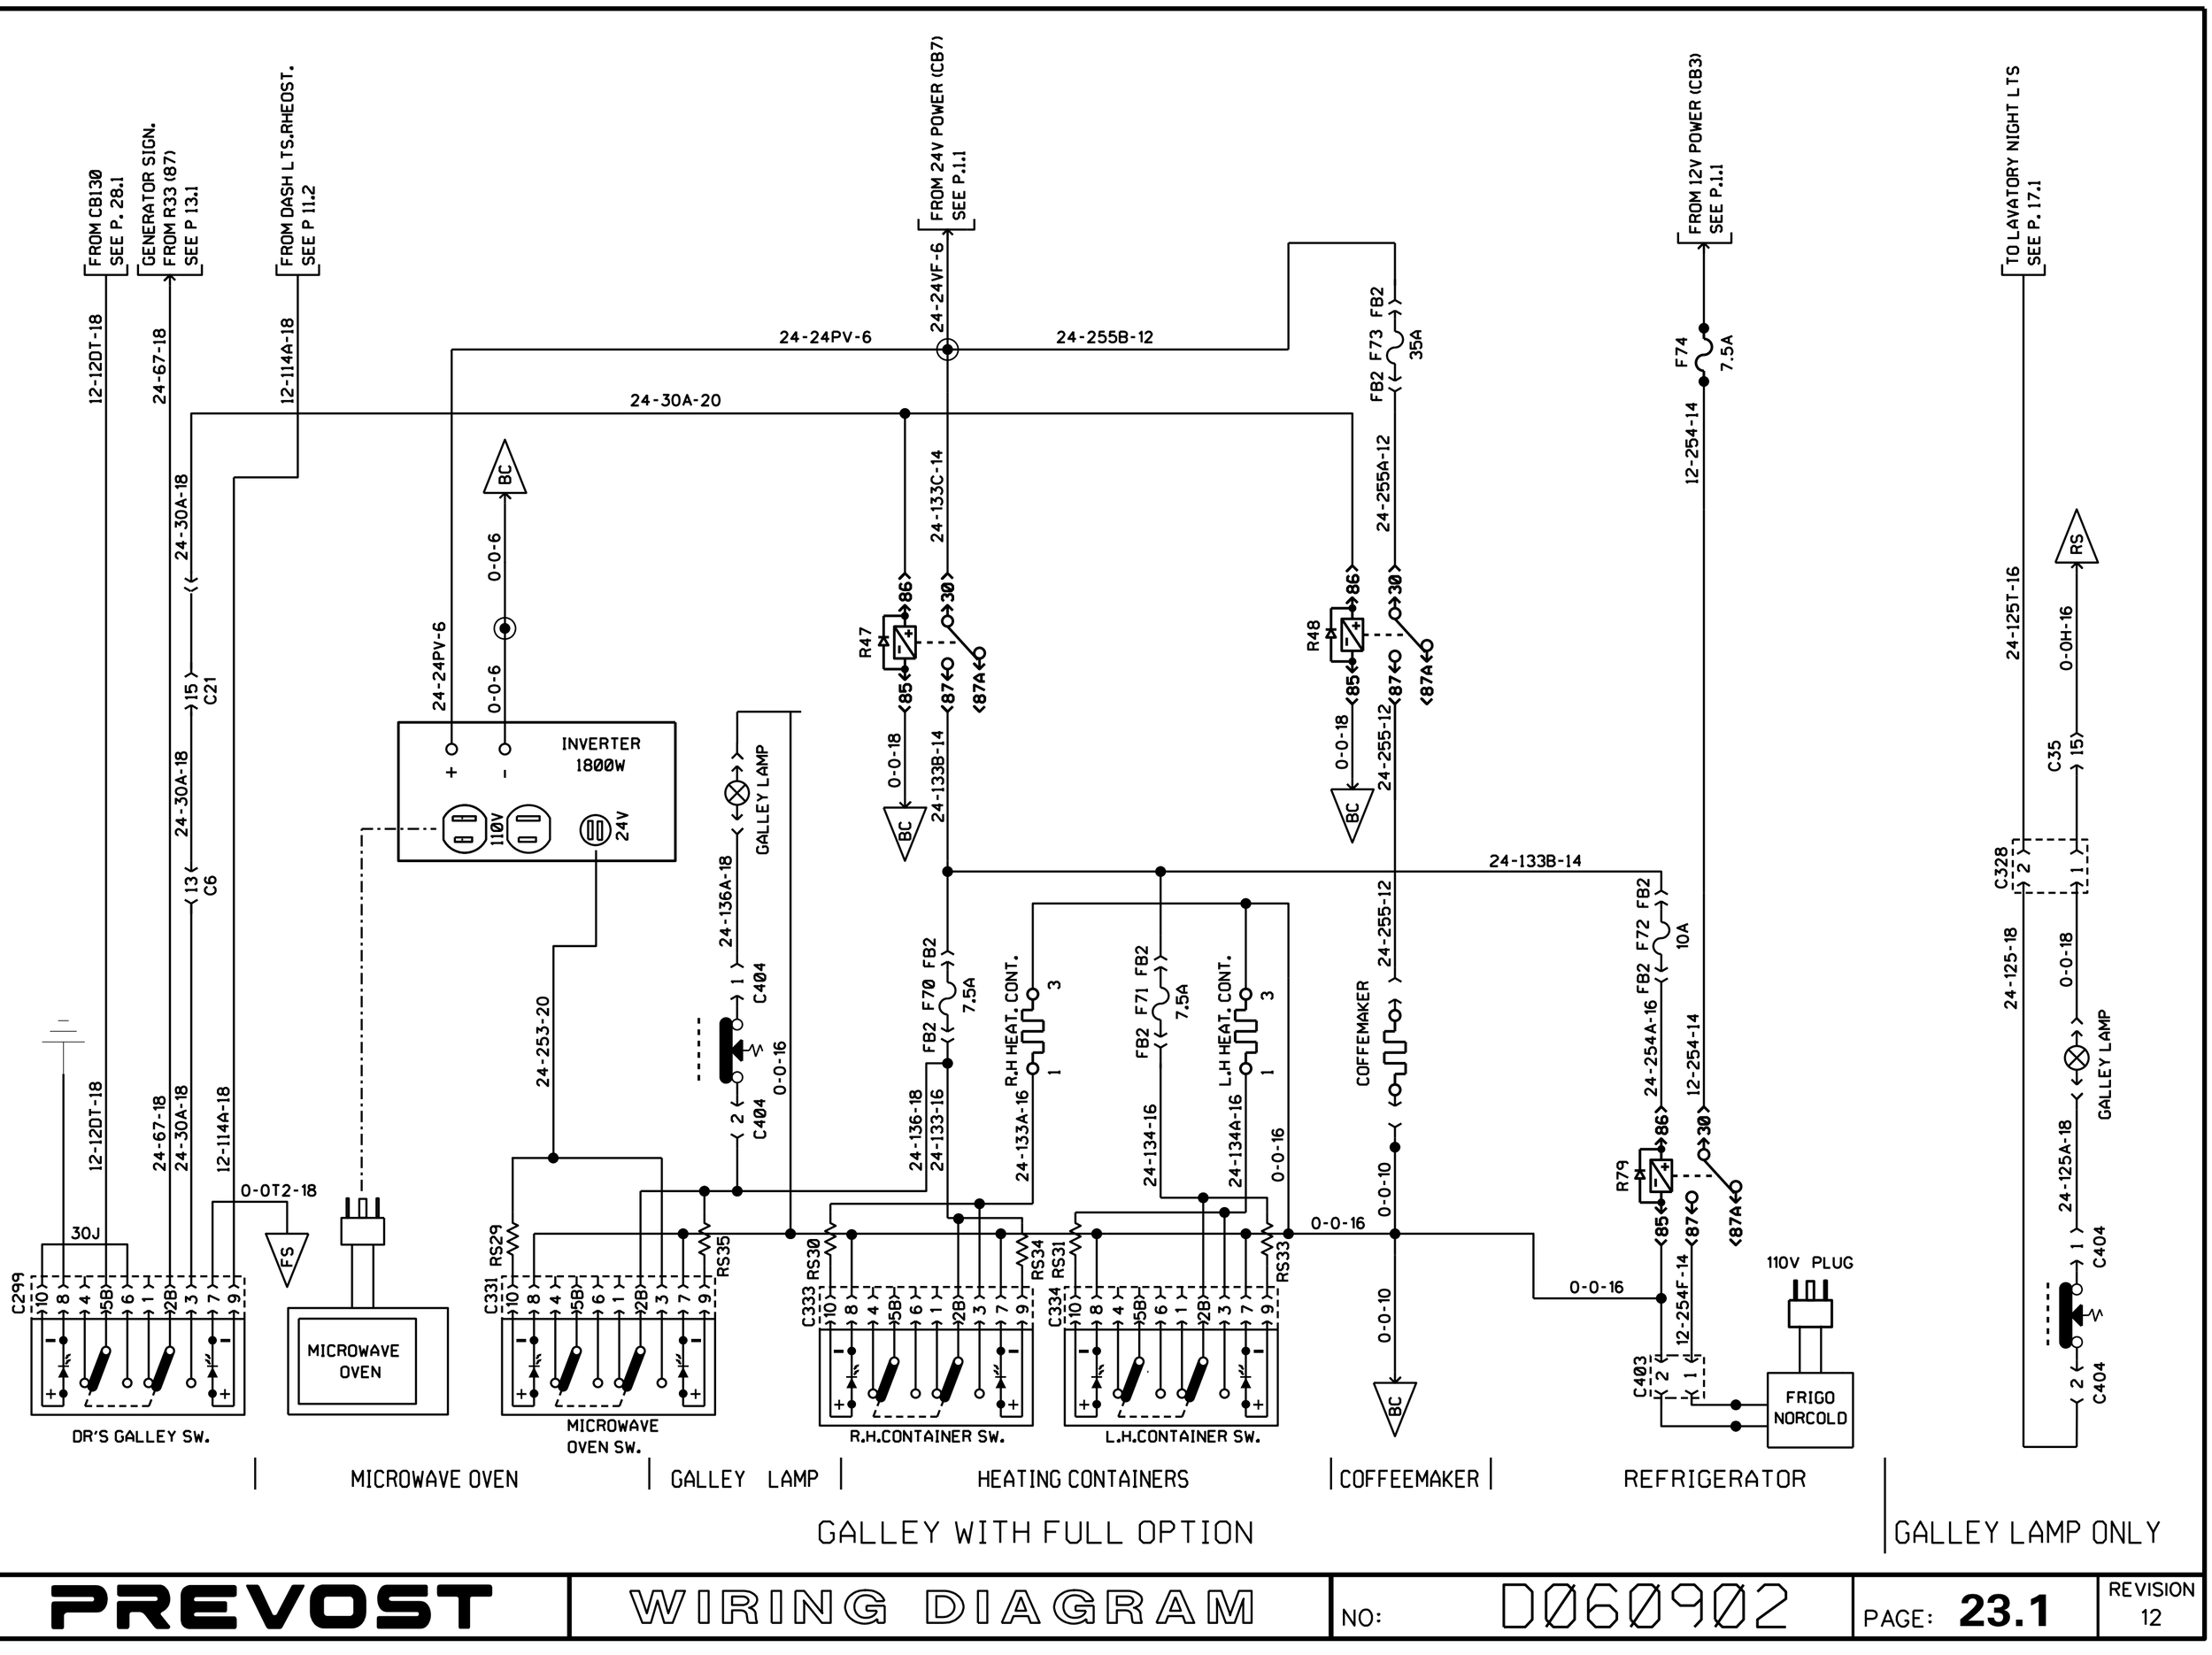

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 23.1	REVISION 12

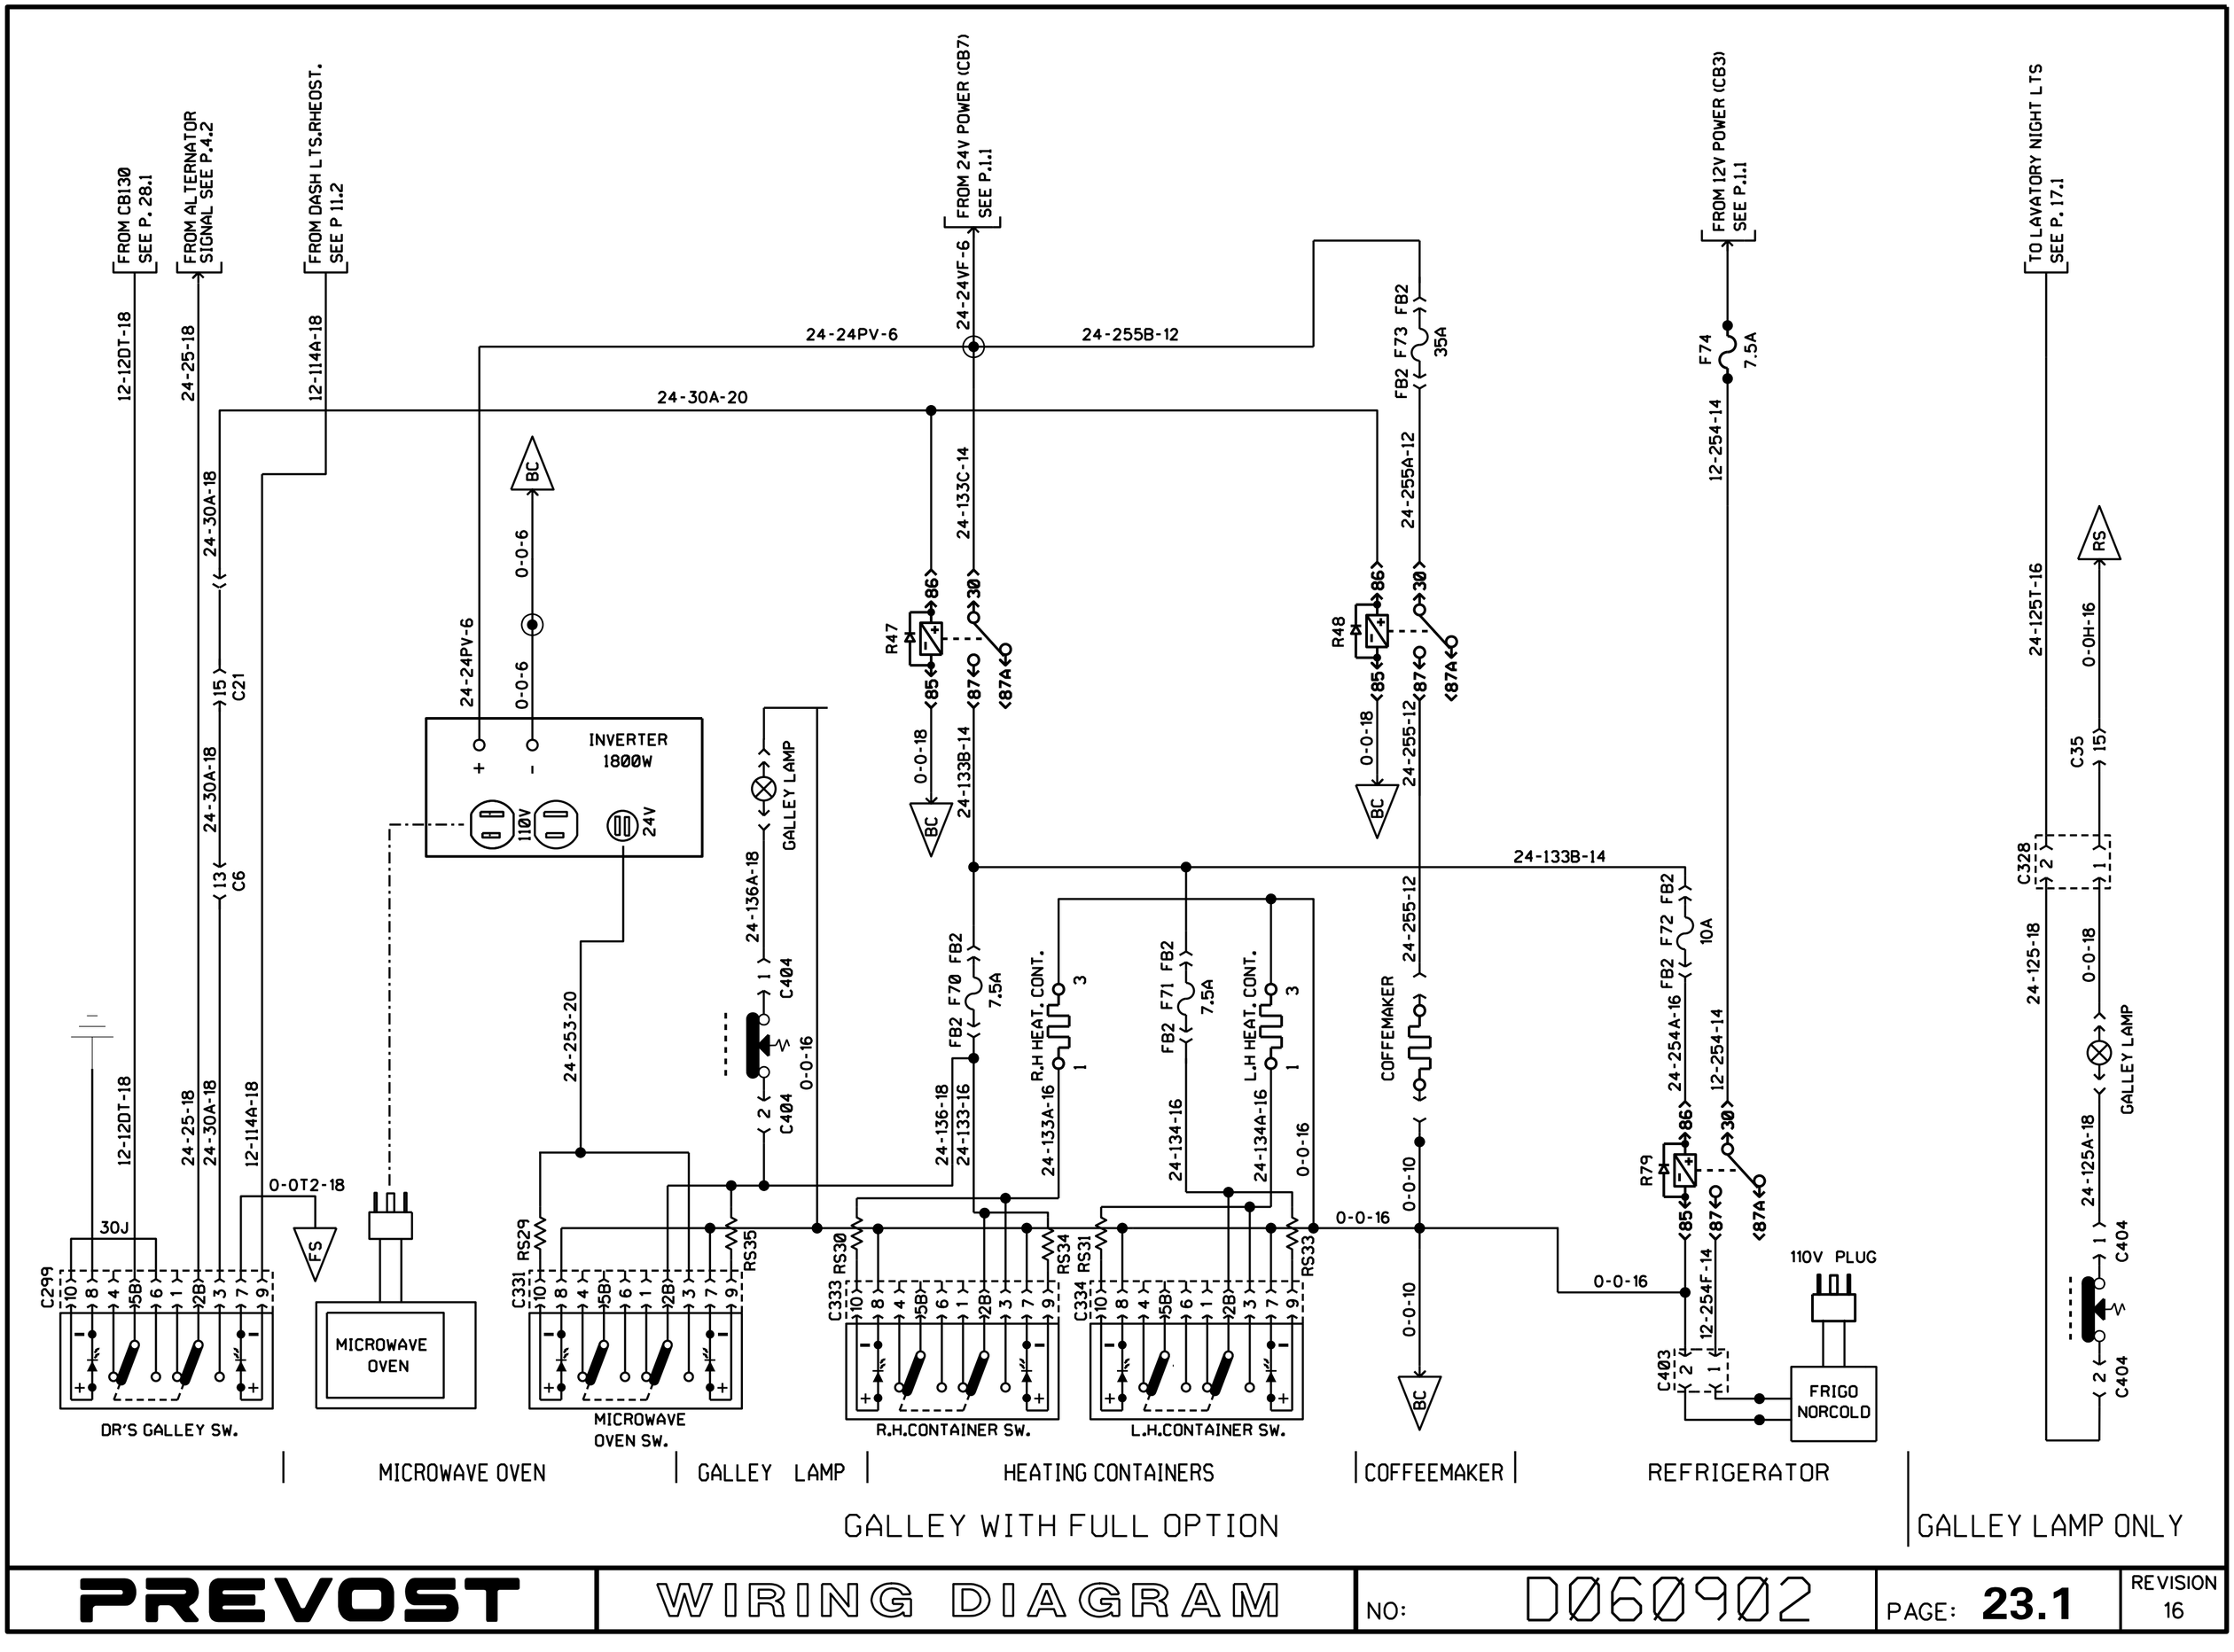
FROM CB130
SEE P. 28.1
12-12DT-18
FROM ALTERNATOR
SIGNAL SEE P.4.2
24-25-18
24-30A-18
15
C21
FROM DASH LTS.RHEOST.
SEE P 11.2
12-114A-18
24-30A-20
24-24PV-6
24-24VF-6
FROM 24V POWER (CB7)
SEE P.1.1
24-255B-12
FB2 F73 FB2
35A
24-255A-12
FROM 12V POWER (CB3)
SEE P.1.1
F74
7.5A
12-254-14
TO LAVATORY NIGHT LTS
SEE P. 17.1
24-125T-16
C35
15
0-0H-16
RS
C328
24-125-18
0-0-18
GALLEY LAMP
24-125A-18
C404
INVERTER
1800W
110V
24V
0-0-6
BC
R47
R48
86
85
87
87A
30
0-0-18
24-133B-14
24-133C-14
24-255-12
24-136A-18
C404
0-0-16
24-253-20
FB2 F70 FB2
7.5A
R.H HEAT. CONT.
24-136-18
24-133-16
24-133A-16
FB2 F71 FB2
7.5A
L.H HEAT. CONT.
24-134-16
24-134A-16
COFFEMAKER
0-0-10
FB2 F72 FB2
10A
24-254A-16
12-254-14
R79
0-0-16
12-254F-14
C403
110V PLUG
FRIGO
NORCOLD
0-0T2-18
30J
C299
FS
MICROWAVE
OVEN
C331
RS29
RS35
MICROWAVE
OVEN SW.
C333
RS30
RS34
R.H.CONTAINER SW.
C334
RS31
RS33
L.H.CONTAINER SW.
DR'S GALLEY SW.
MICROWAVE OVEN
GALLEY LAMP
HEATING CONTAINERS
COFFEEMAKER
REFRIGERATOR
GALLEY WITH FULL OPTION
GALLEY LAMP ONLY

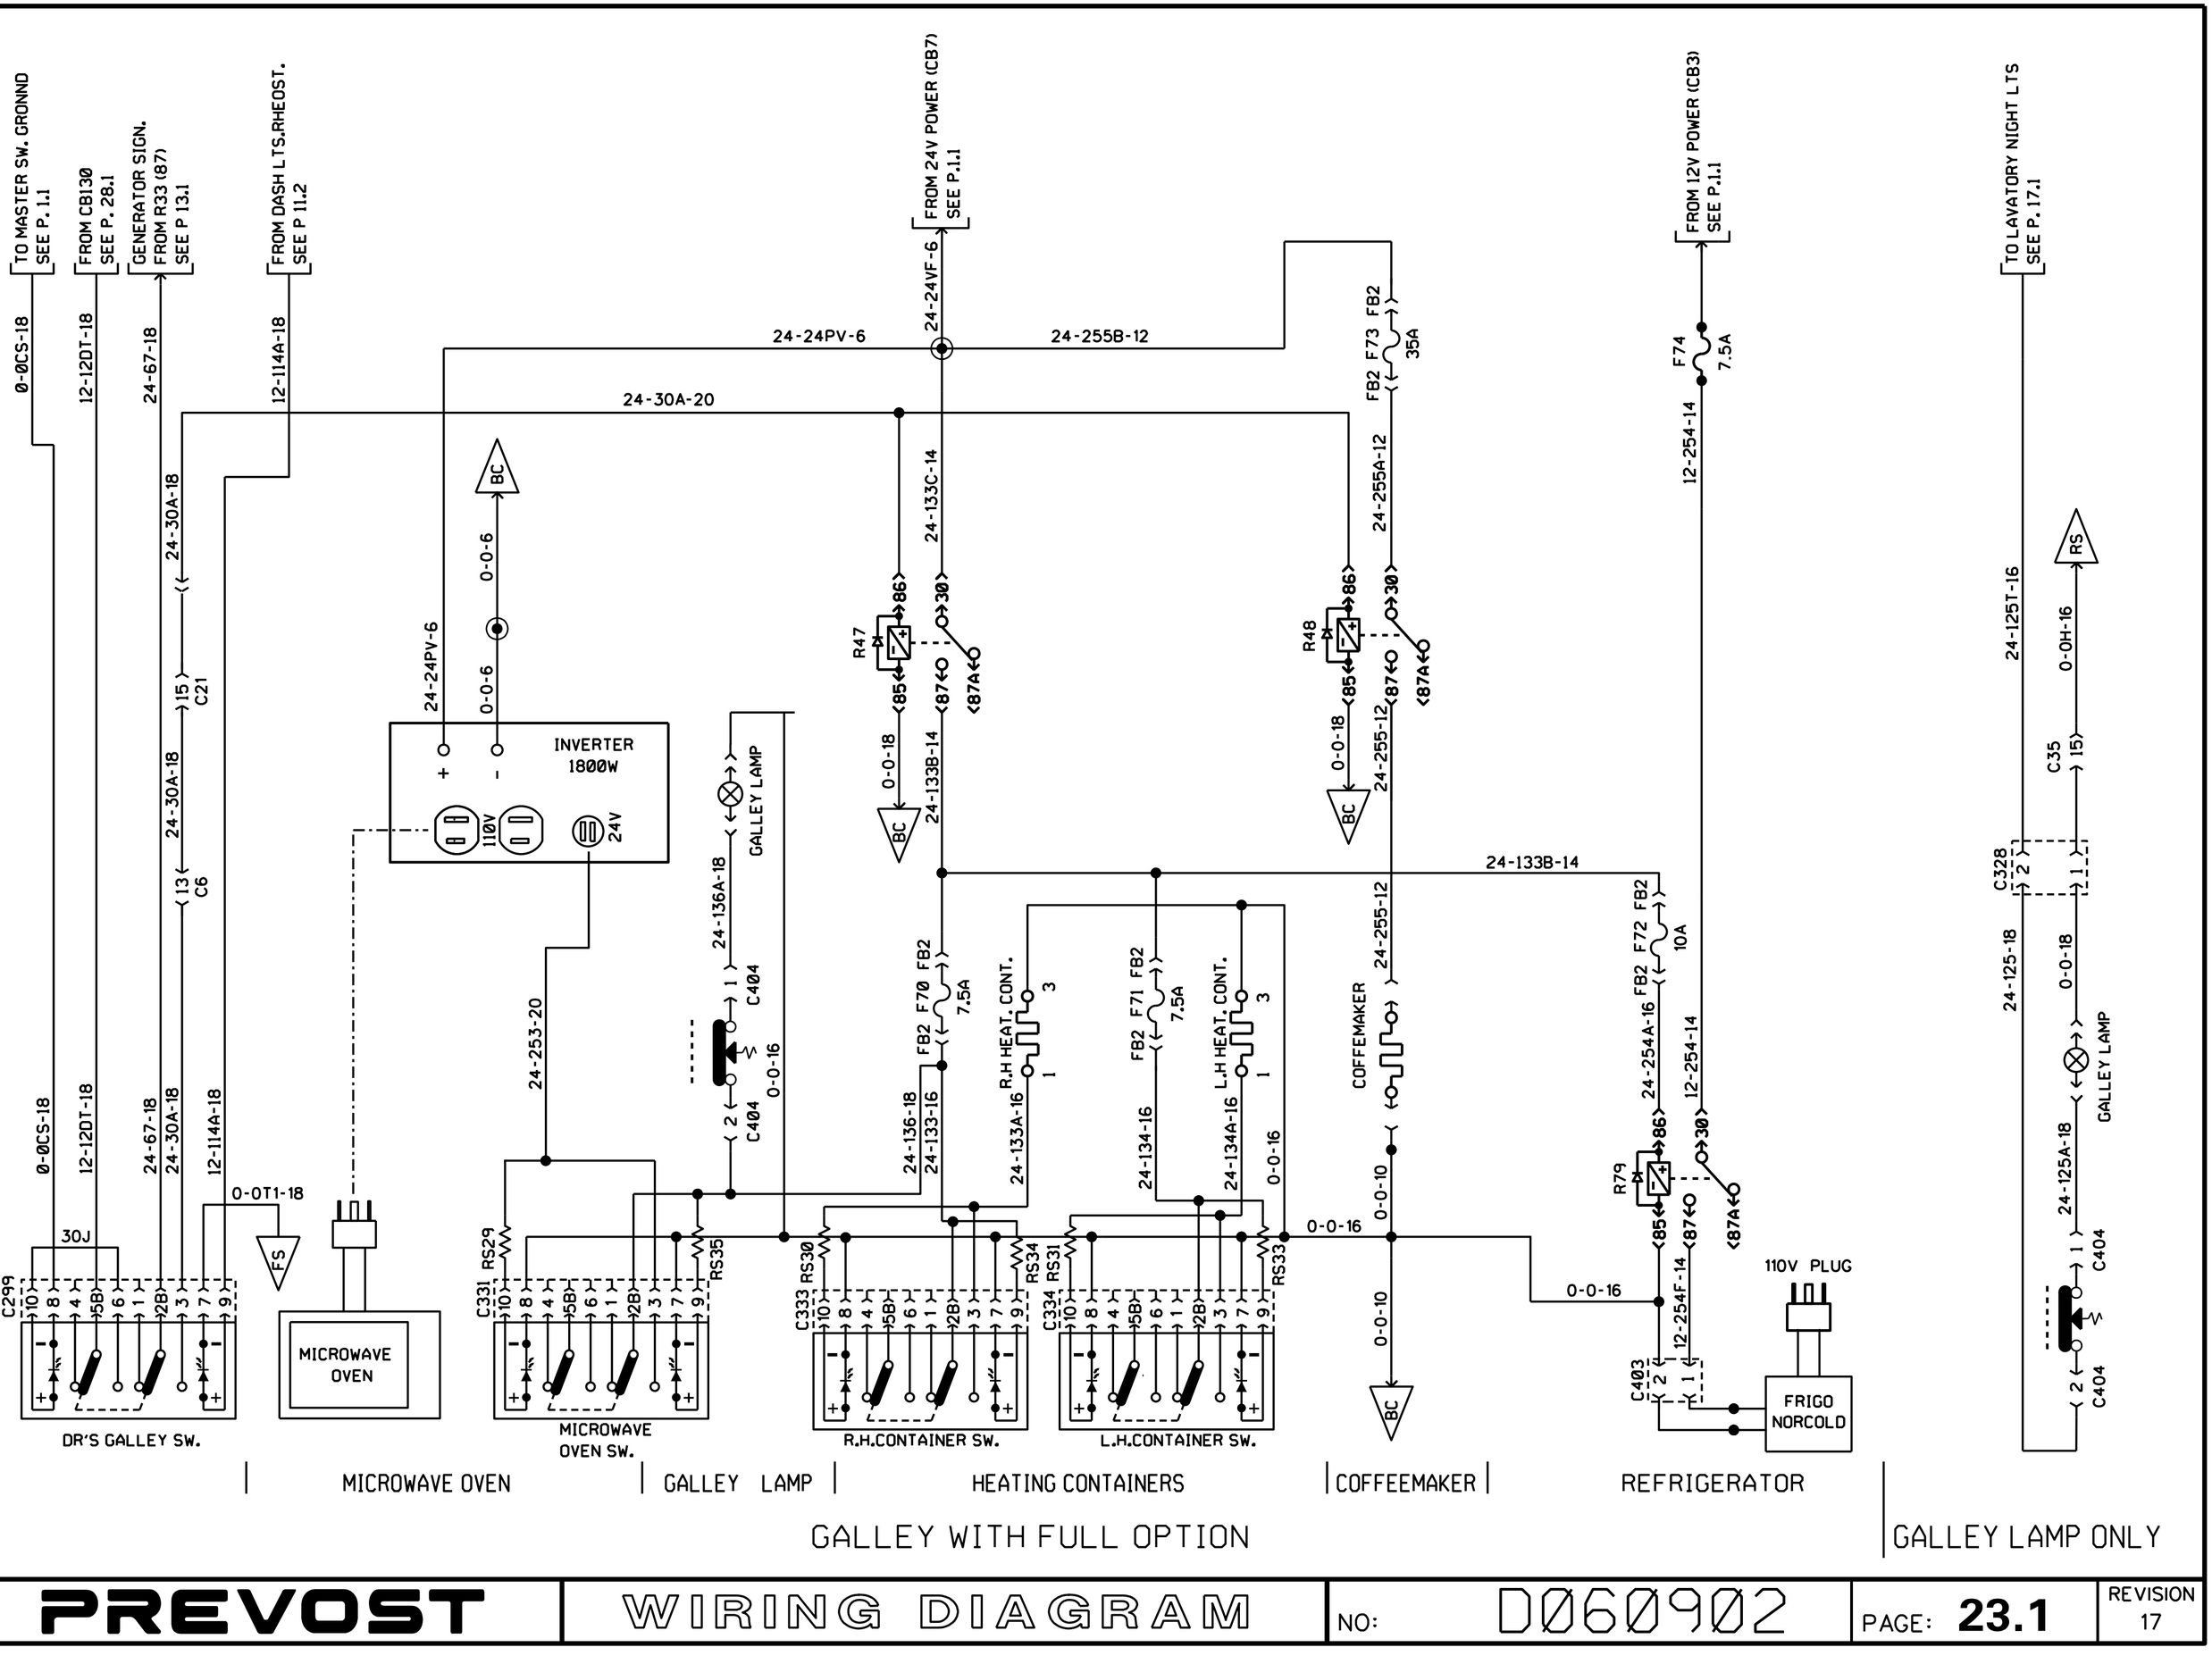

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 23.1	REVISION 17

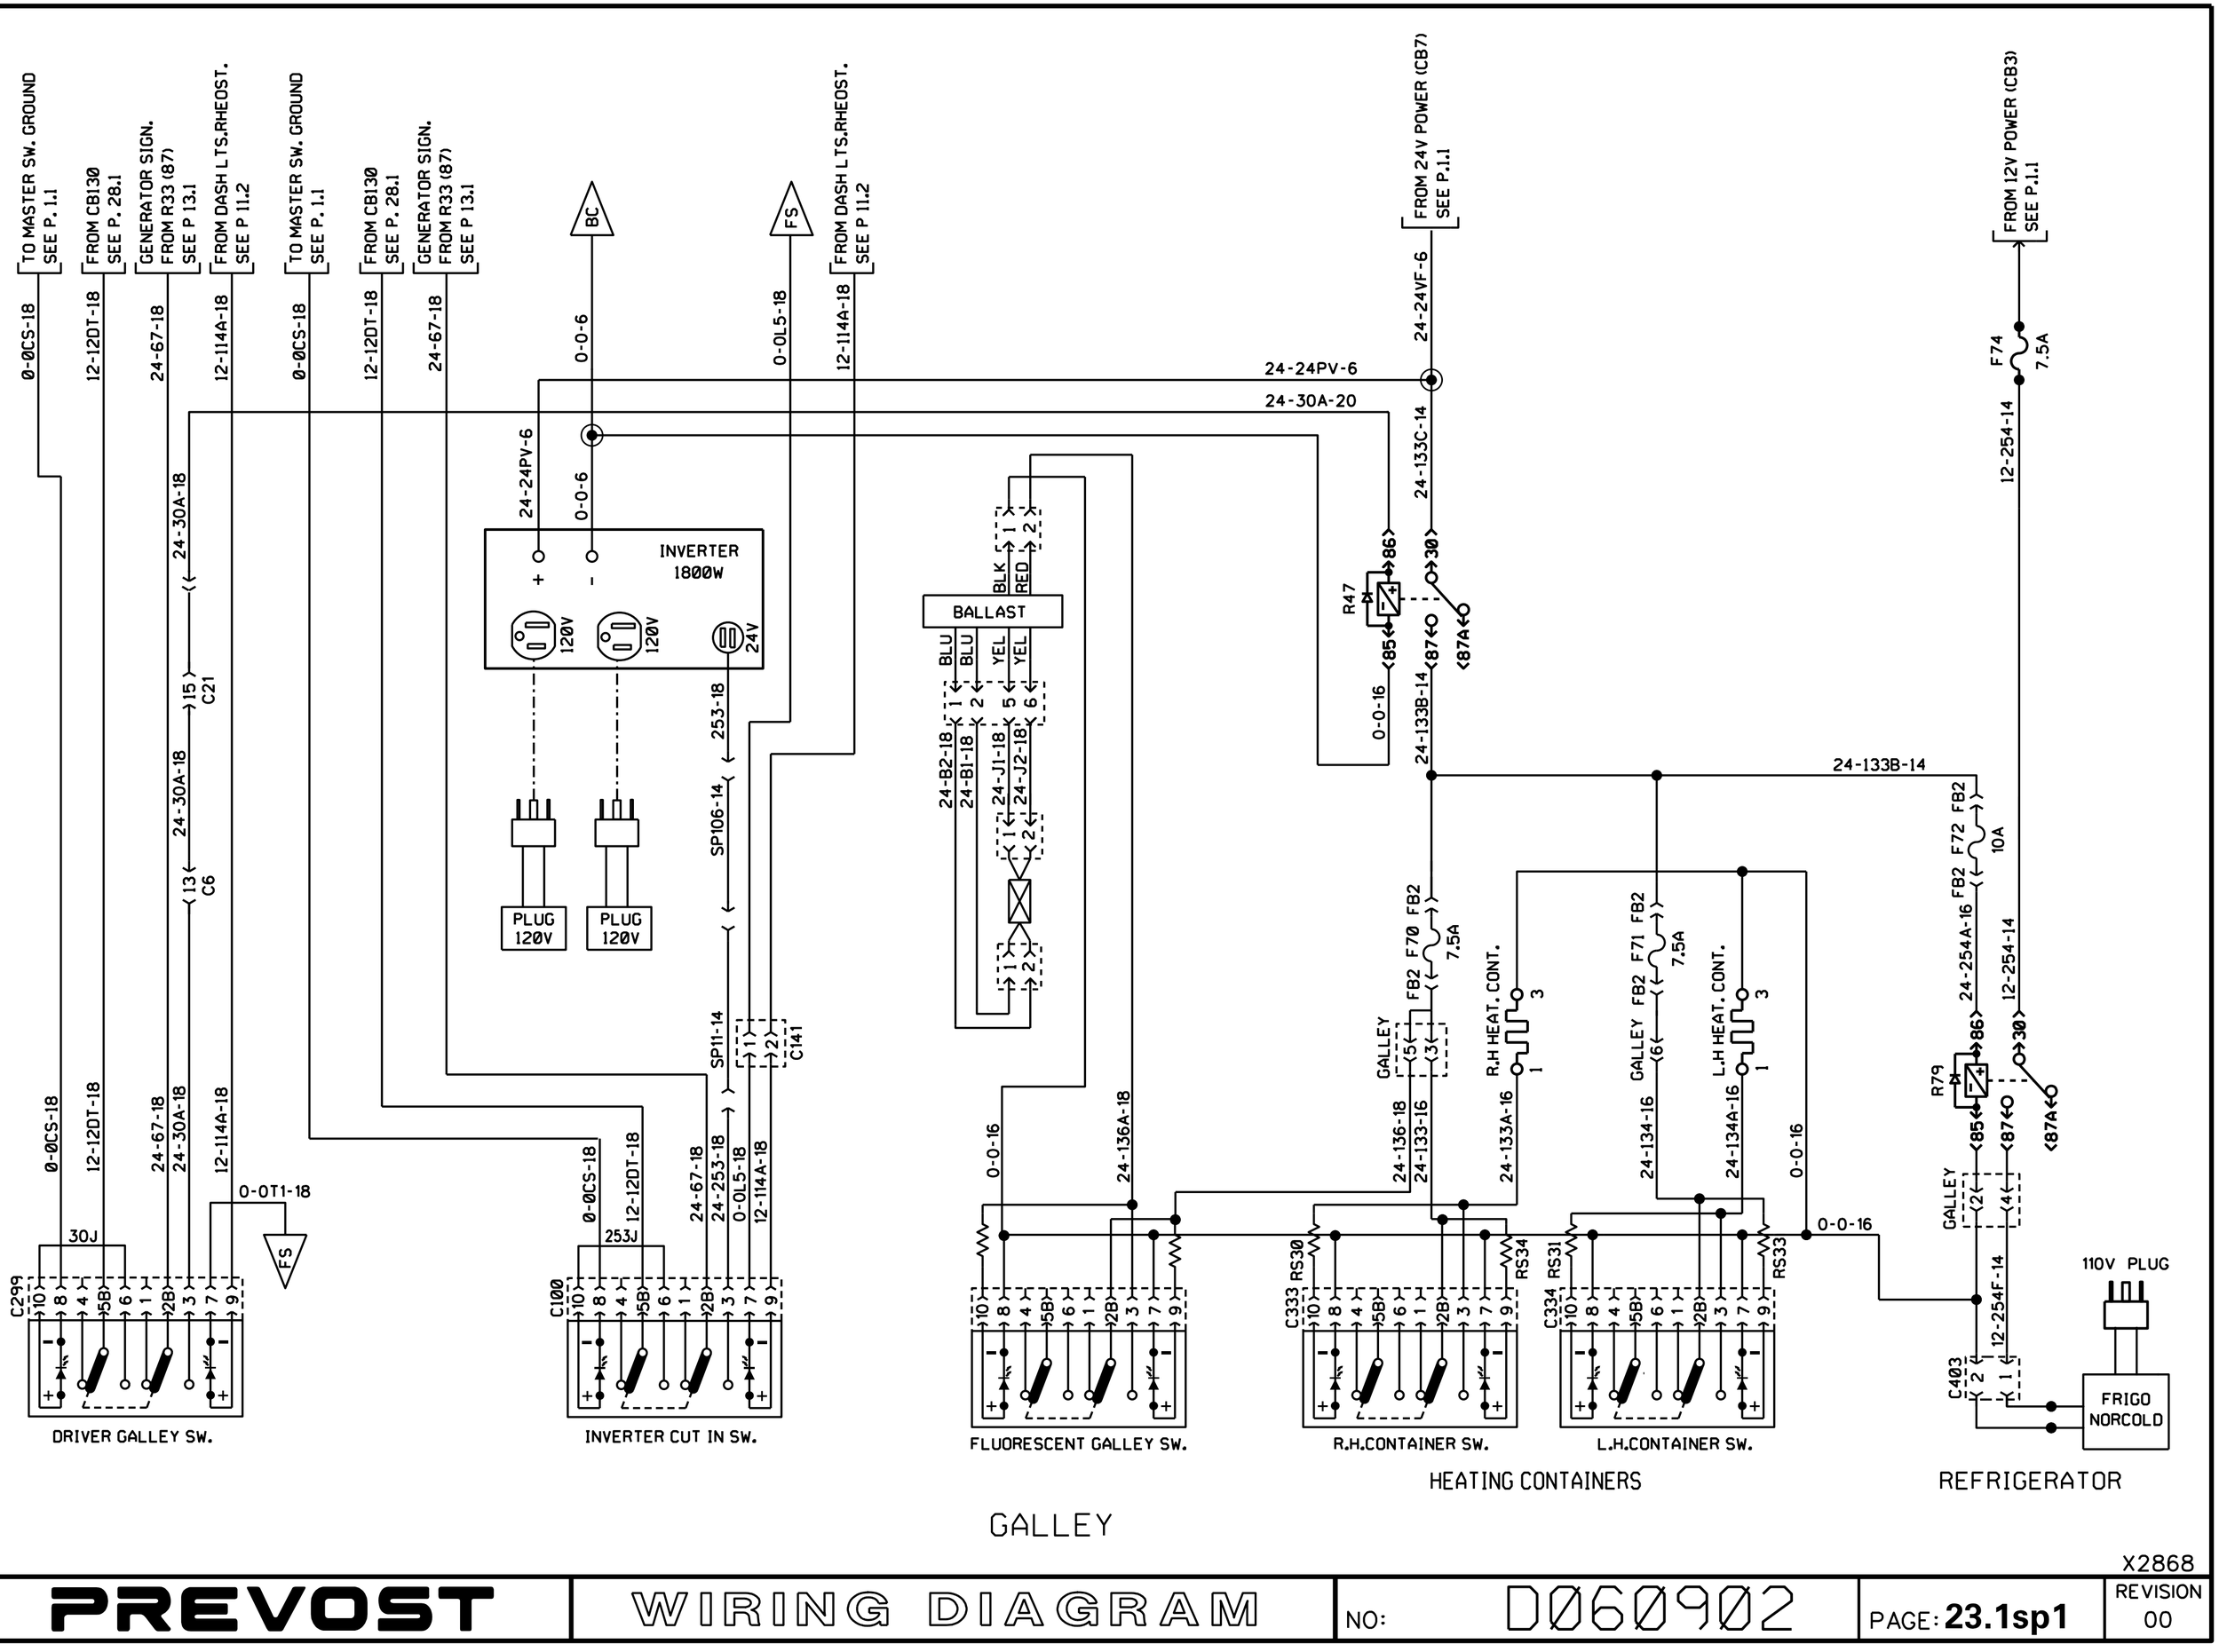

X2868

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 23.1sp1	REVISION 00

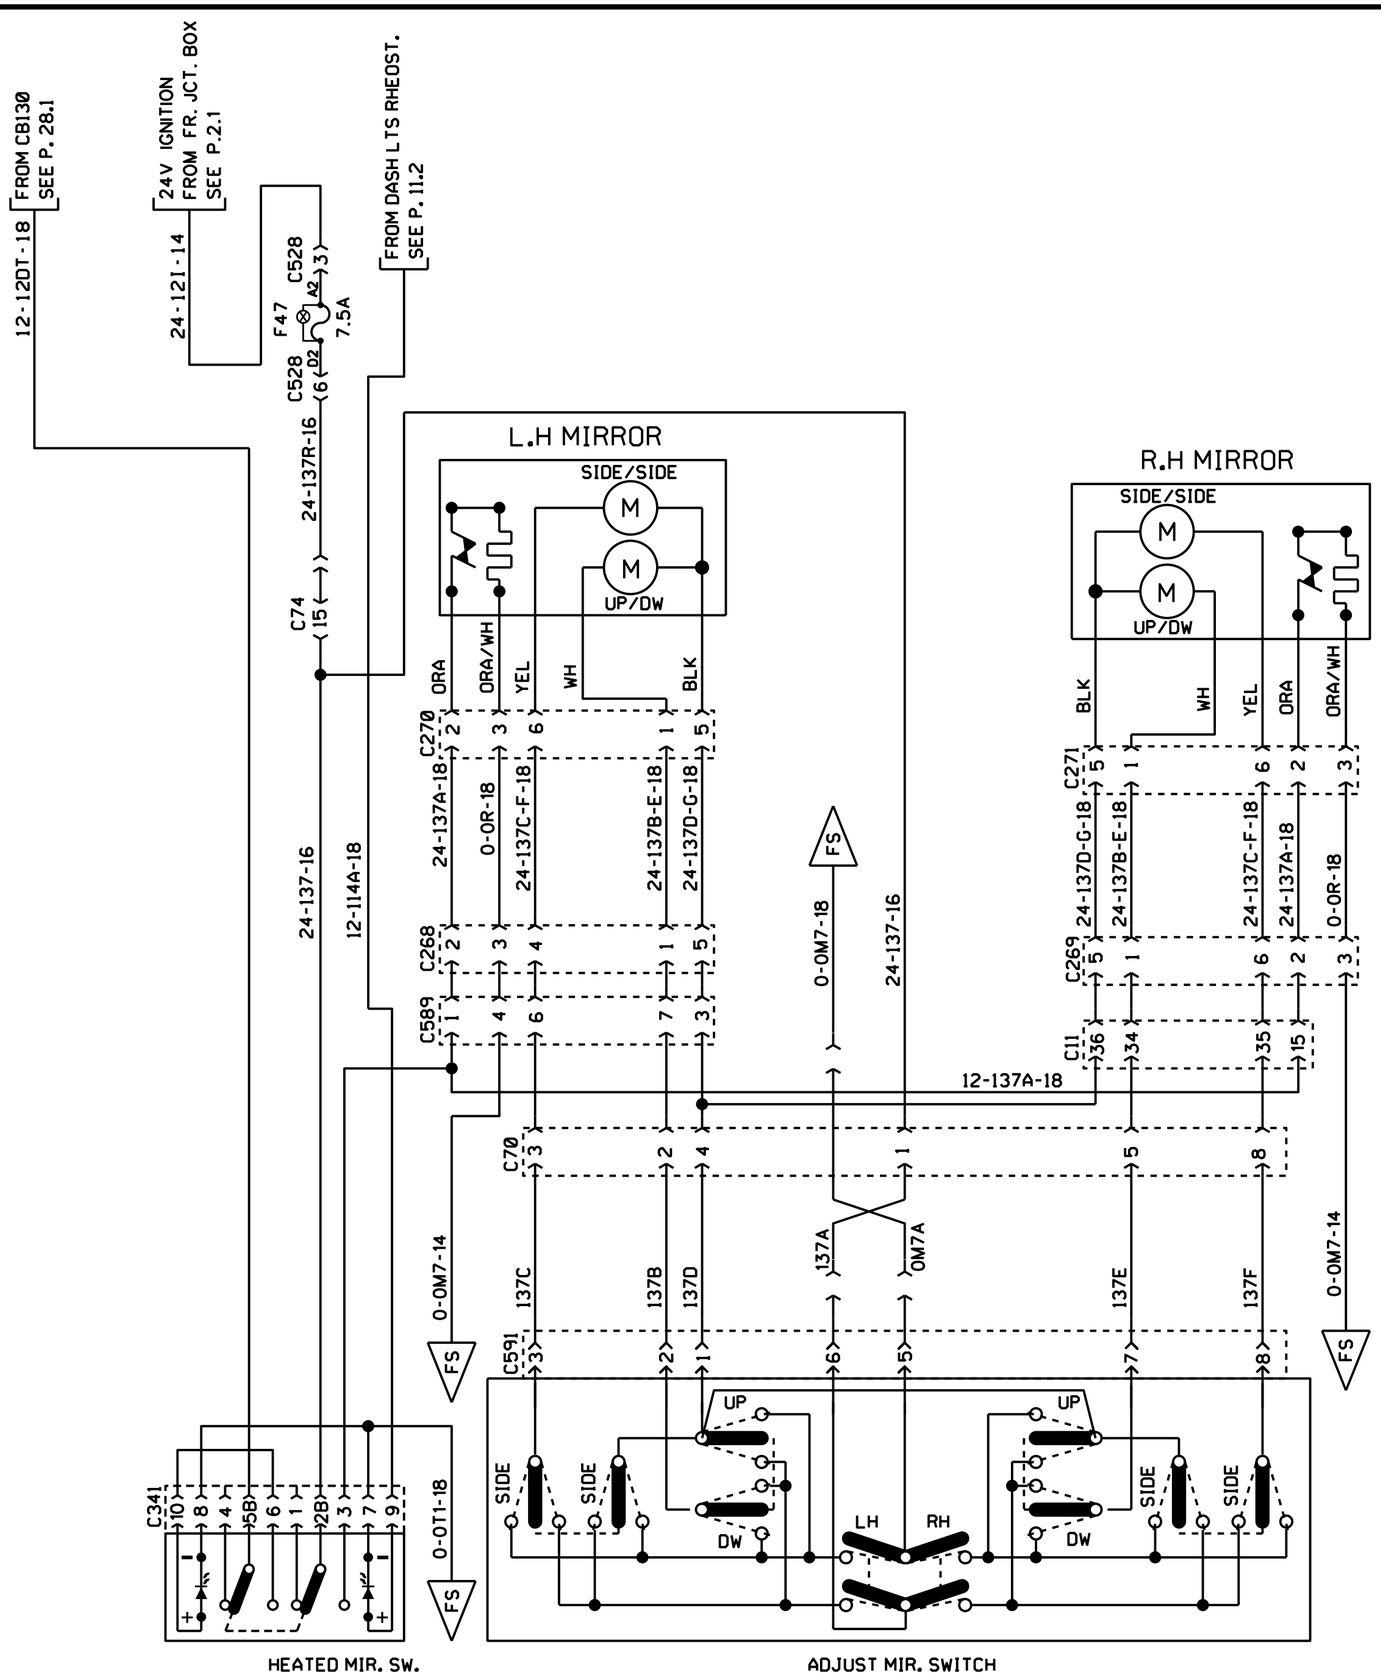

REAR VIEW MIRROR SPARTAN - 1 ADJUSTMENT SW. & 1 HEATED SW.

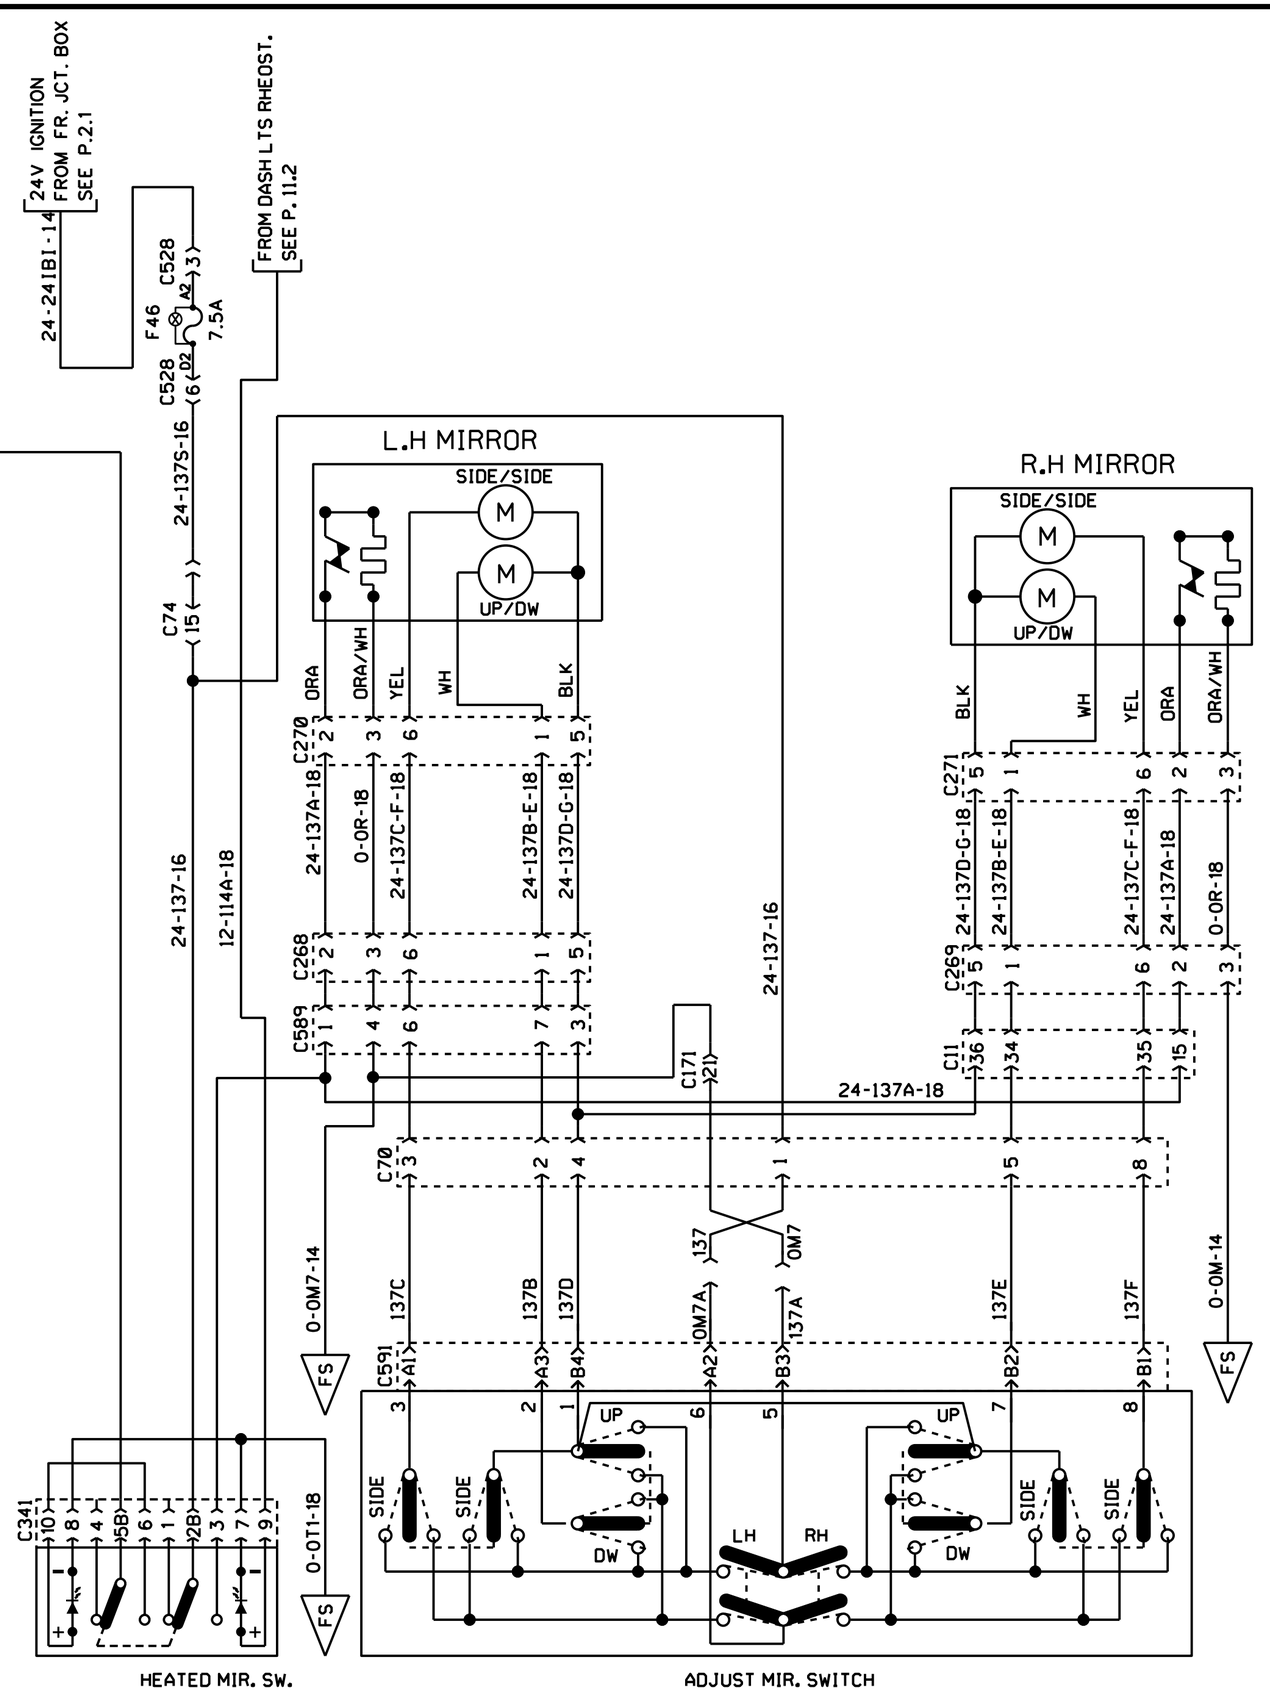

REAR VIEW MIRROR SPARTAN - 1 ADJUSTMENT SW. & 1 HEATED SW.

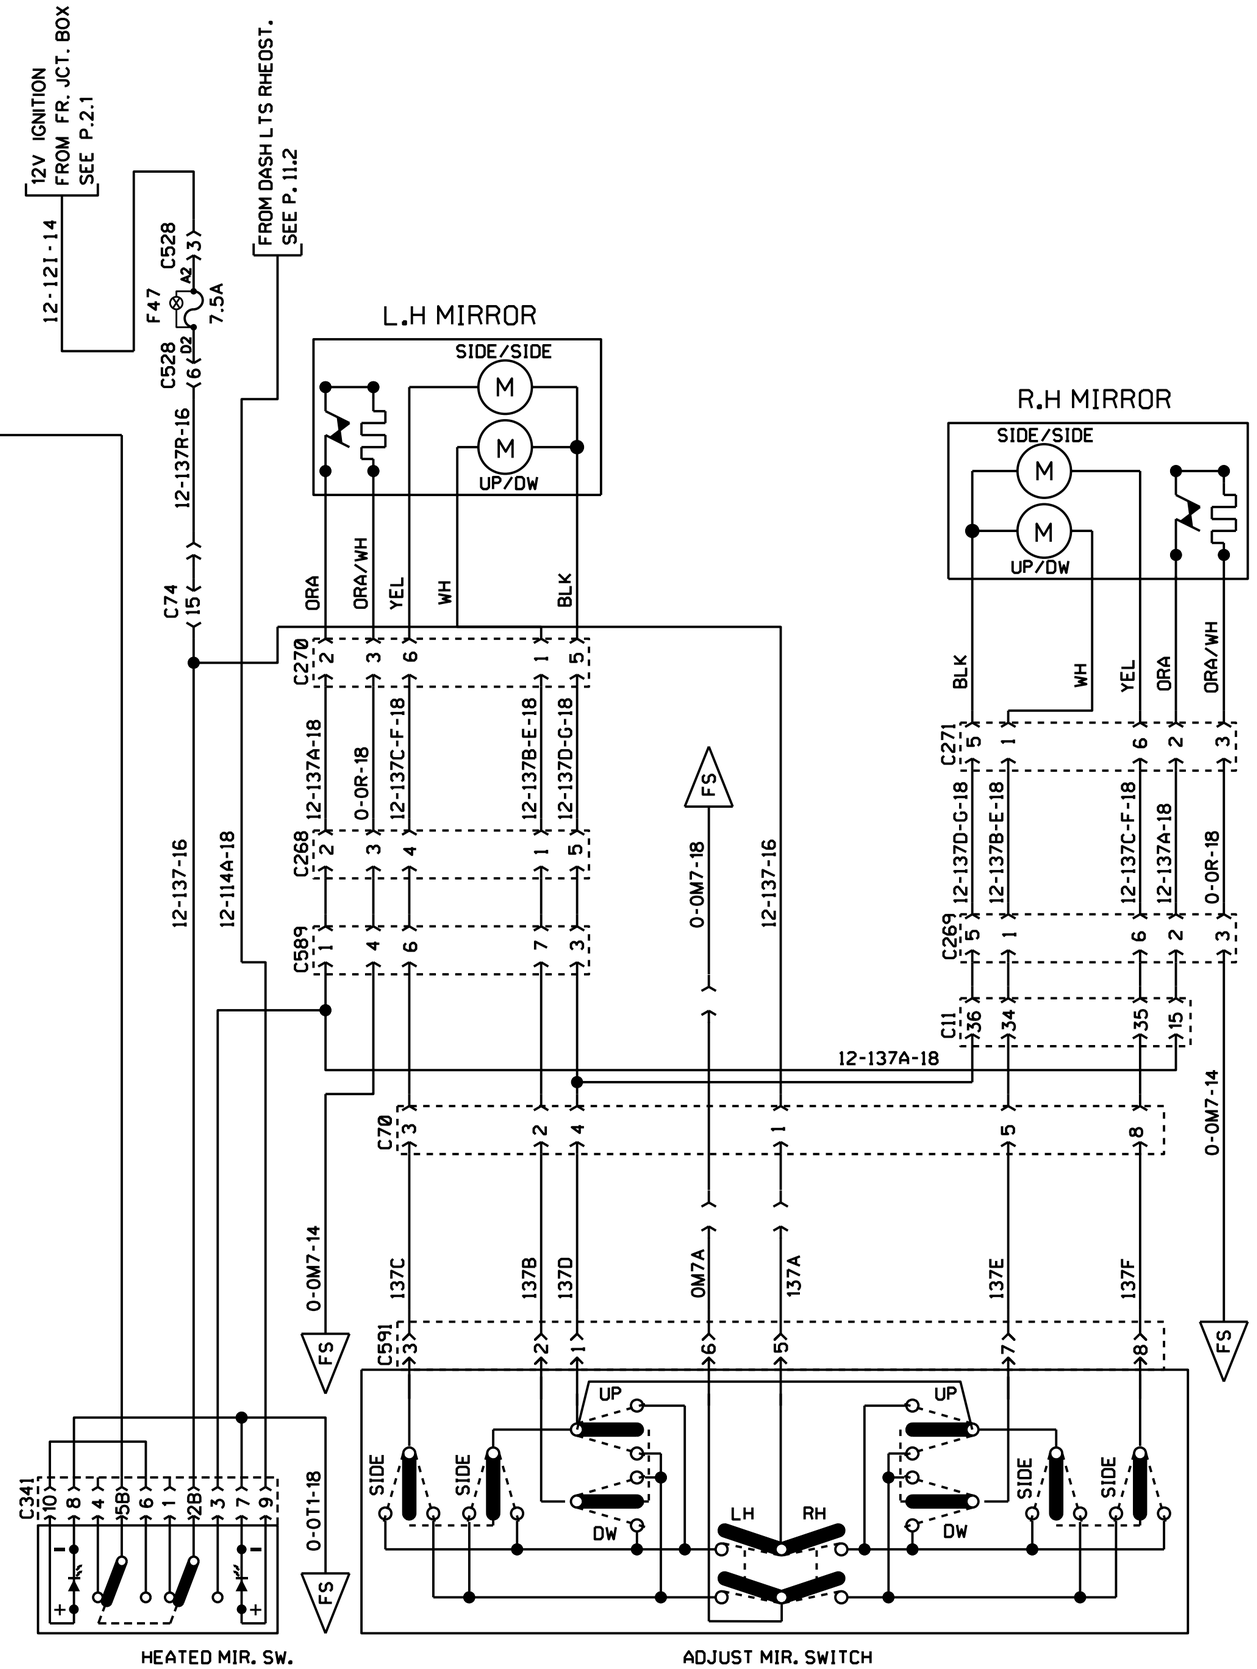

REAR VIEW MIRROR RAMCO FLAT - 1 ADJUSTMENT SW. & 1 HEATED SW.

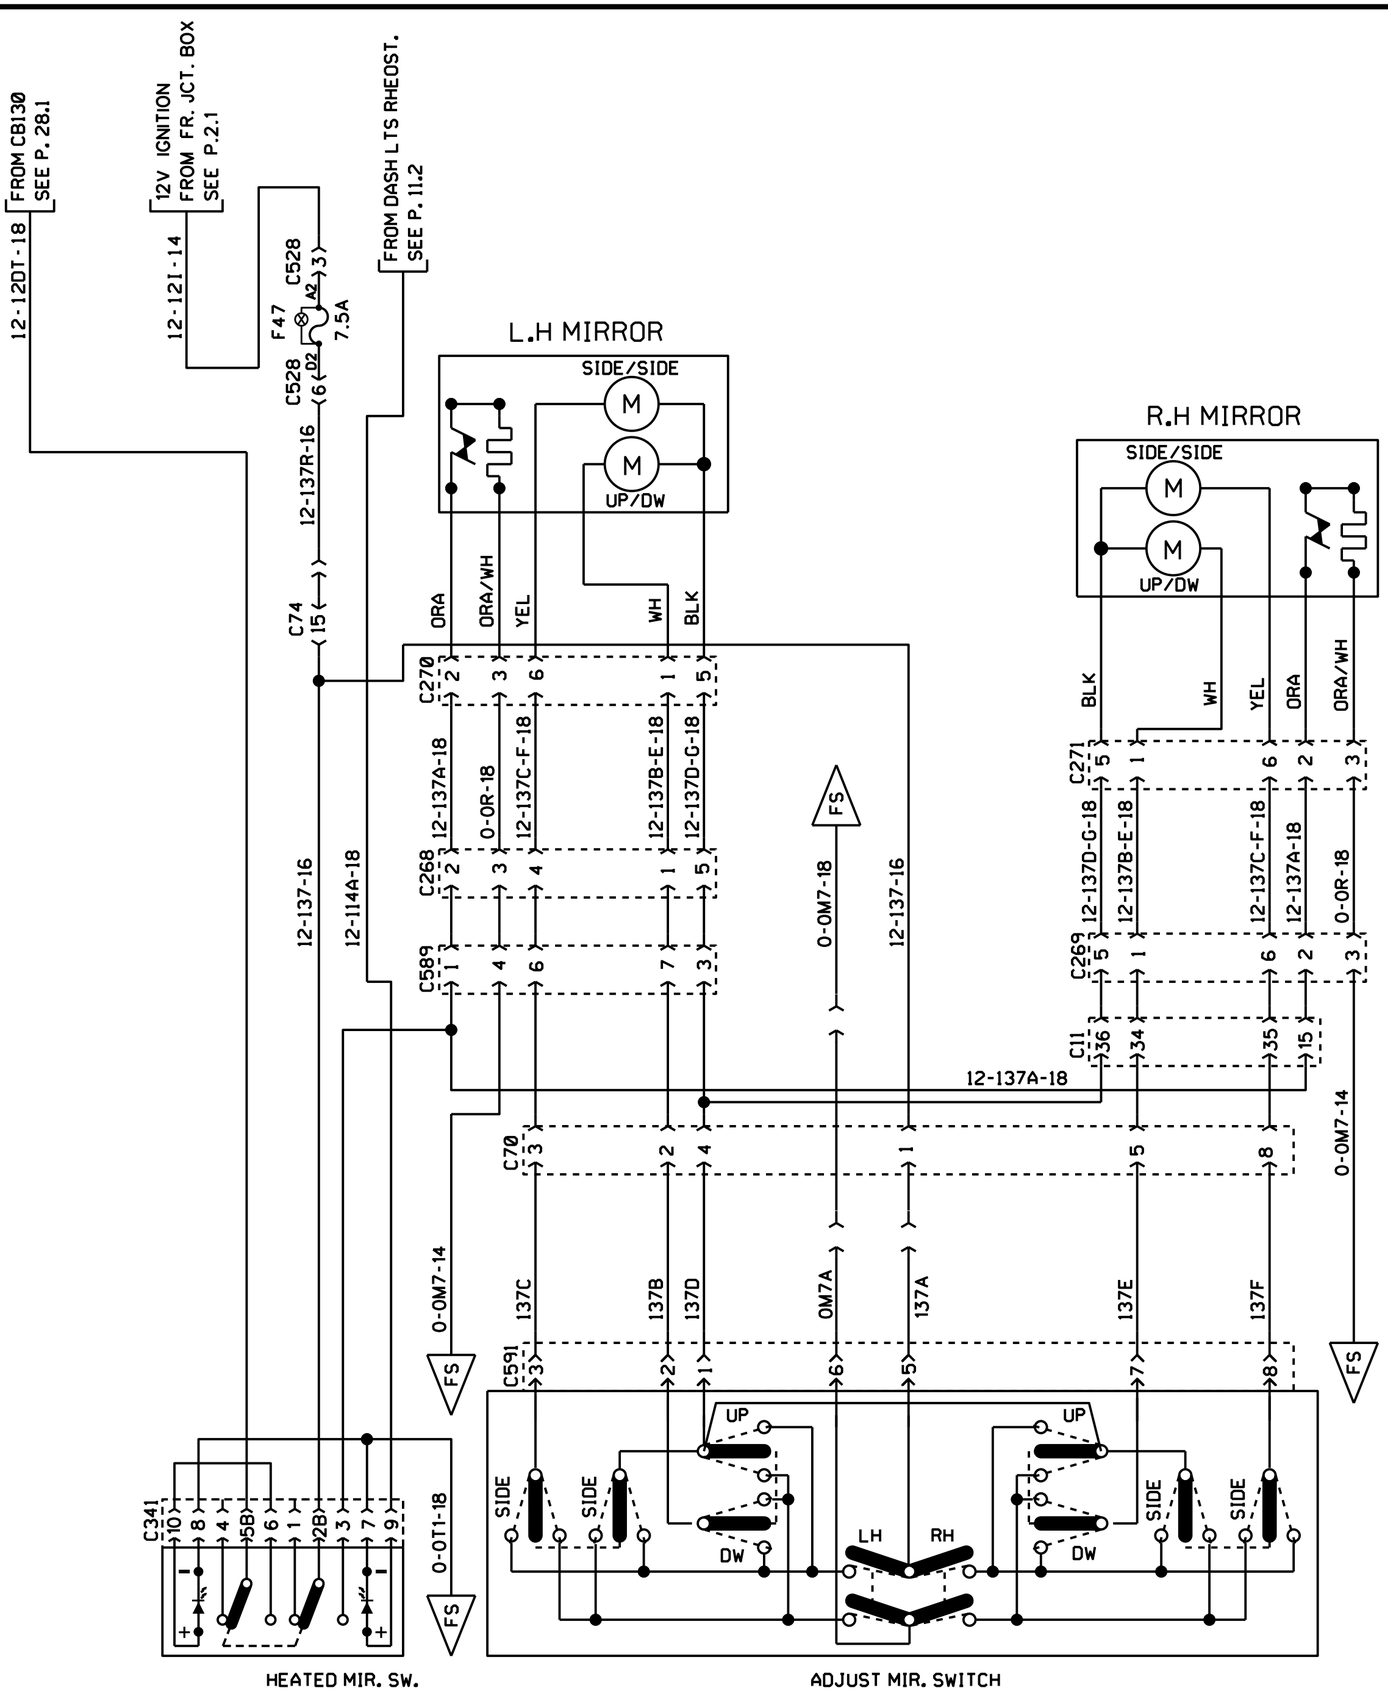

REAR VIEW MIRROR RAMCO FLAT - 1 ADJUSTMENT SW. & 1 HEATED SW.

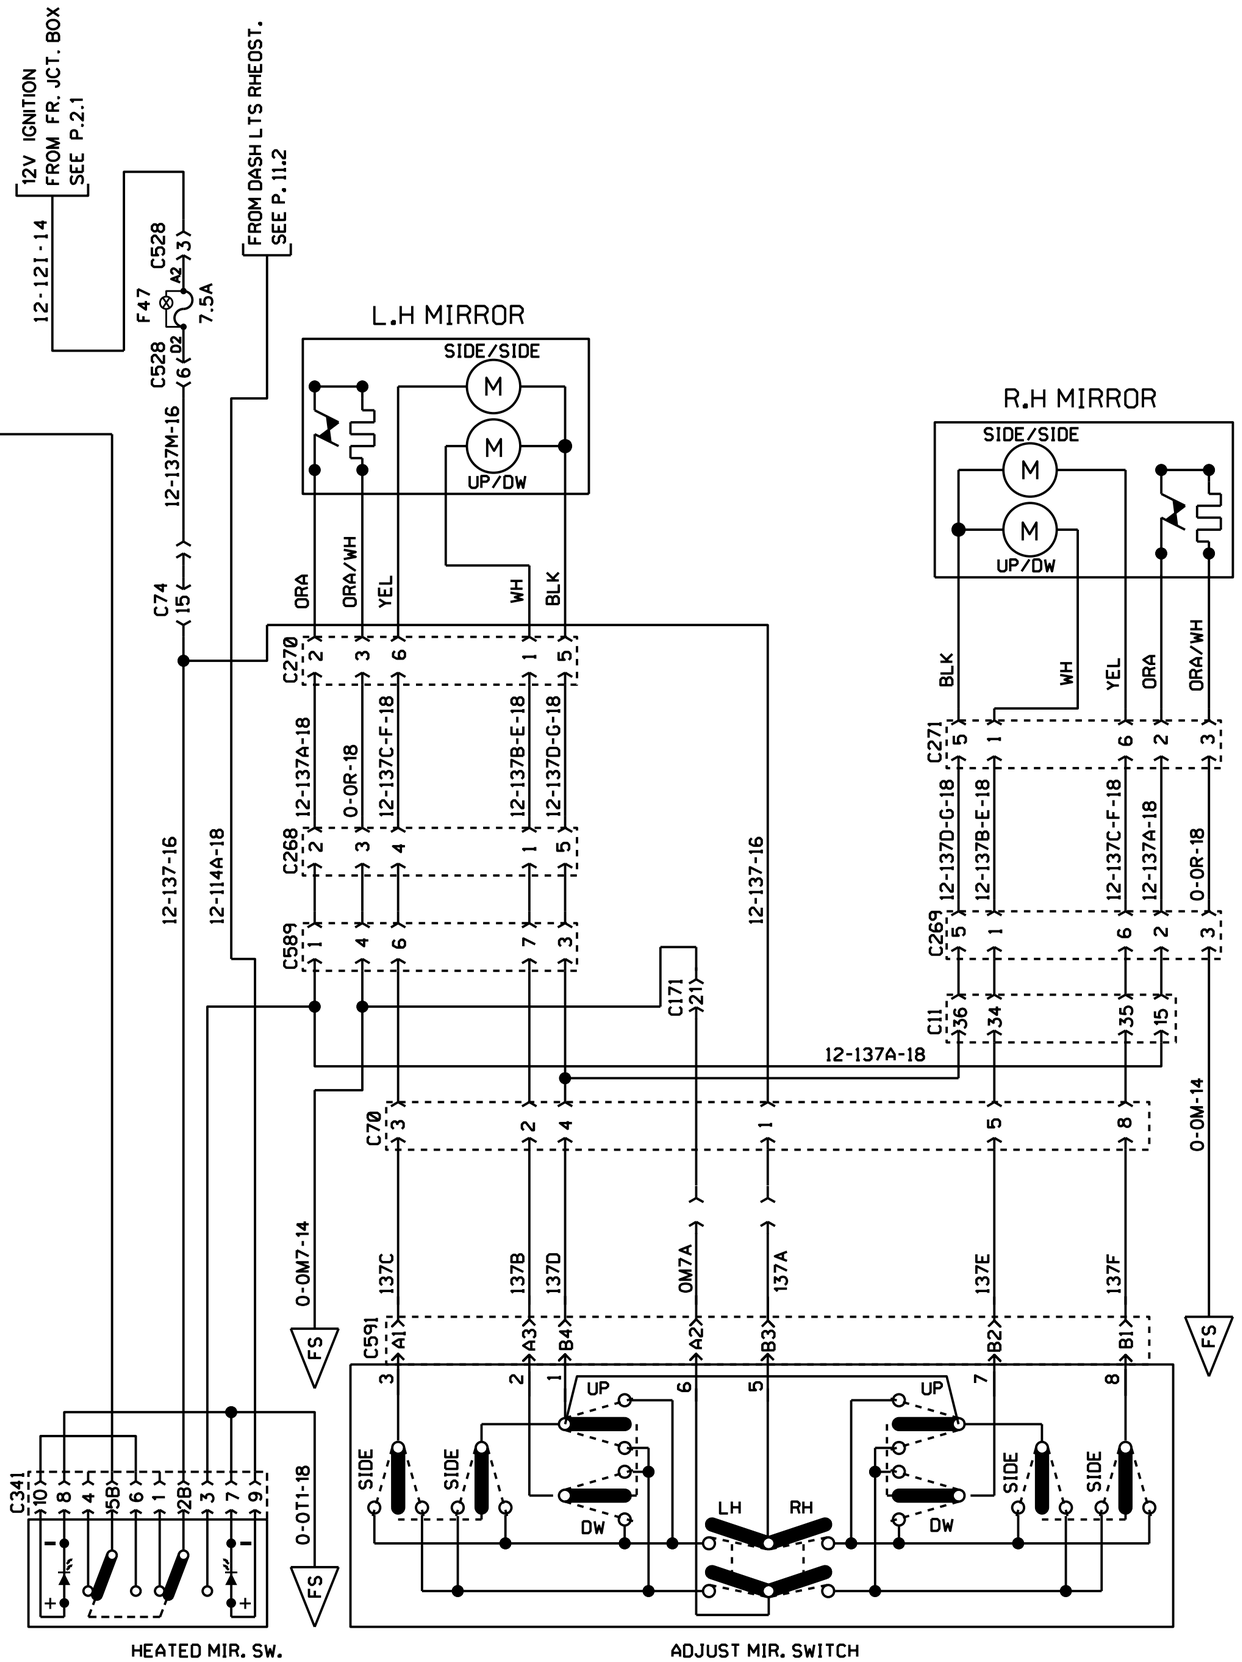

REAR VIEW MIRROR RAMCO FLAT - 1 ADJUSTMENT SW. & 1 HEATED SW.

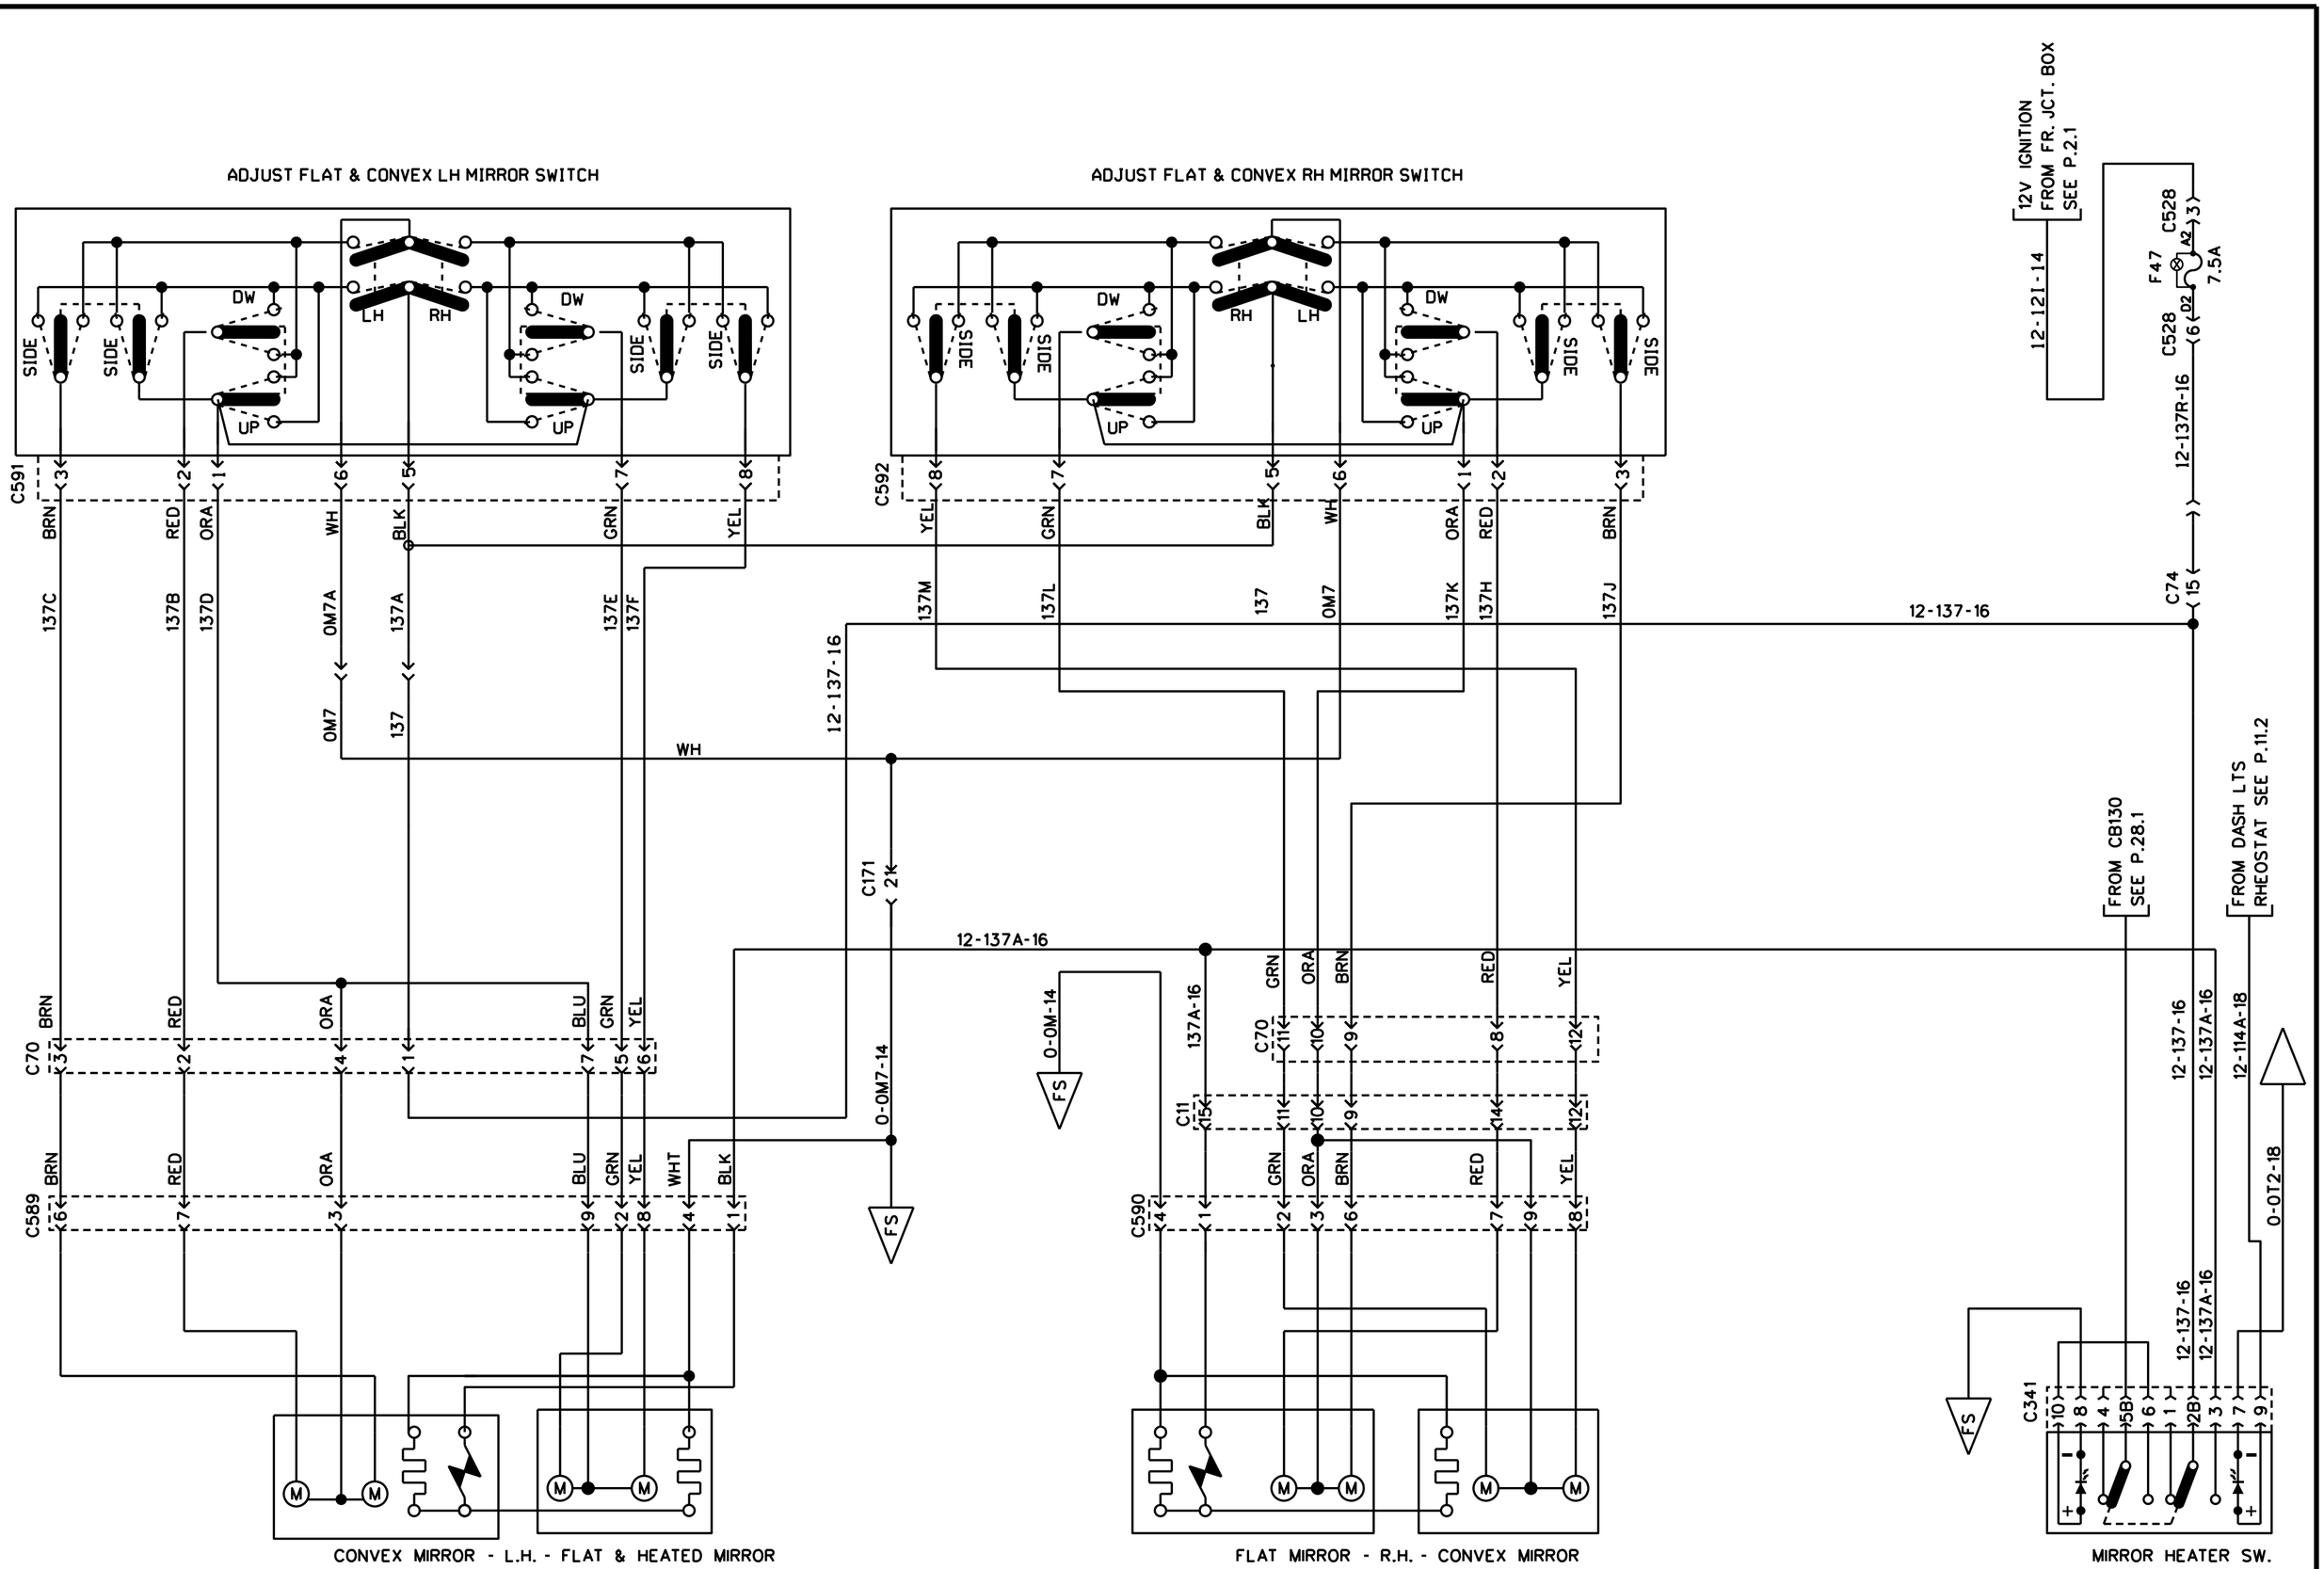

REAR VIEW MIRROR RAMCO FLAT & CONVEX - 2 ADJUSTMENT SW. & 1 HEATED SW.

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 24.3	REVISION 00

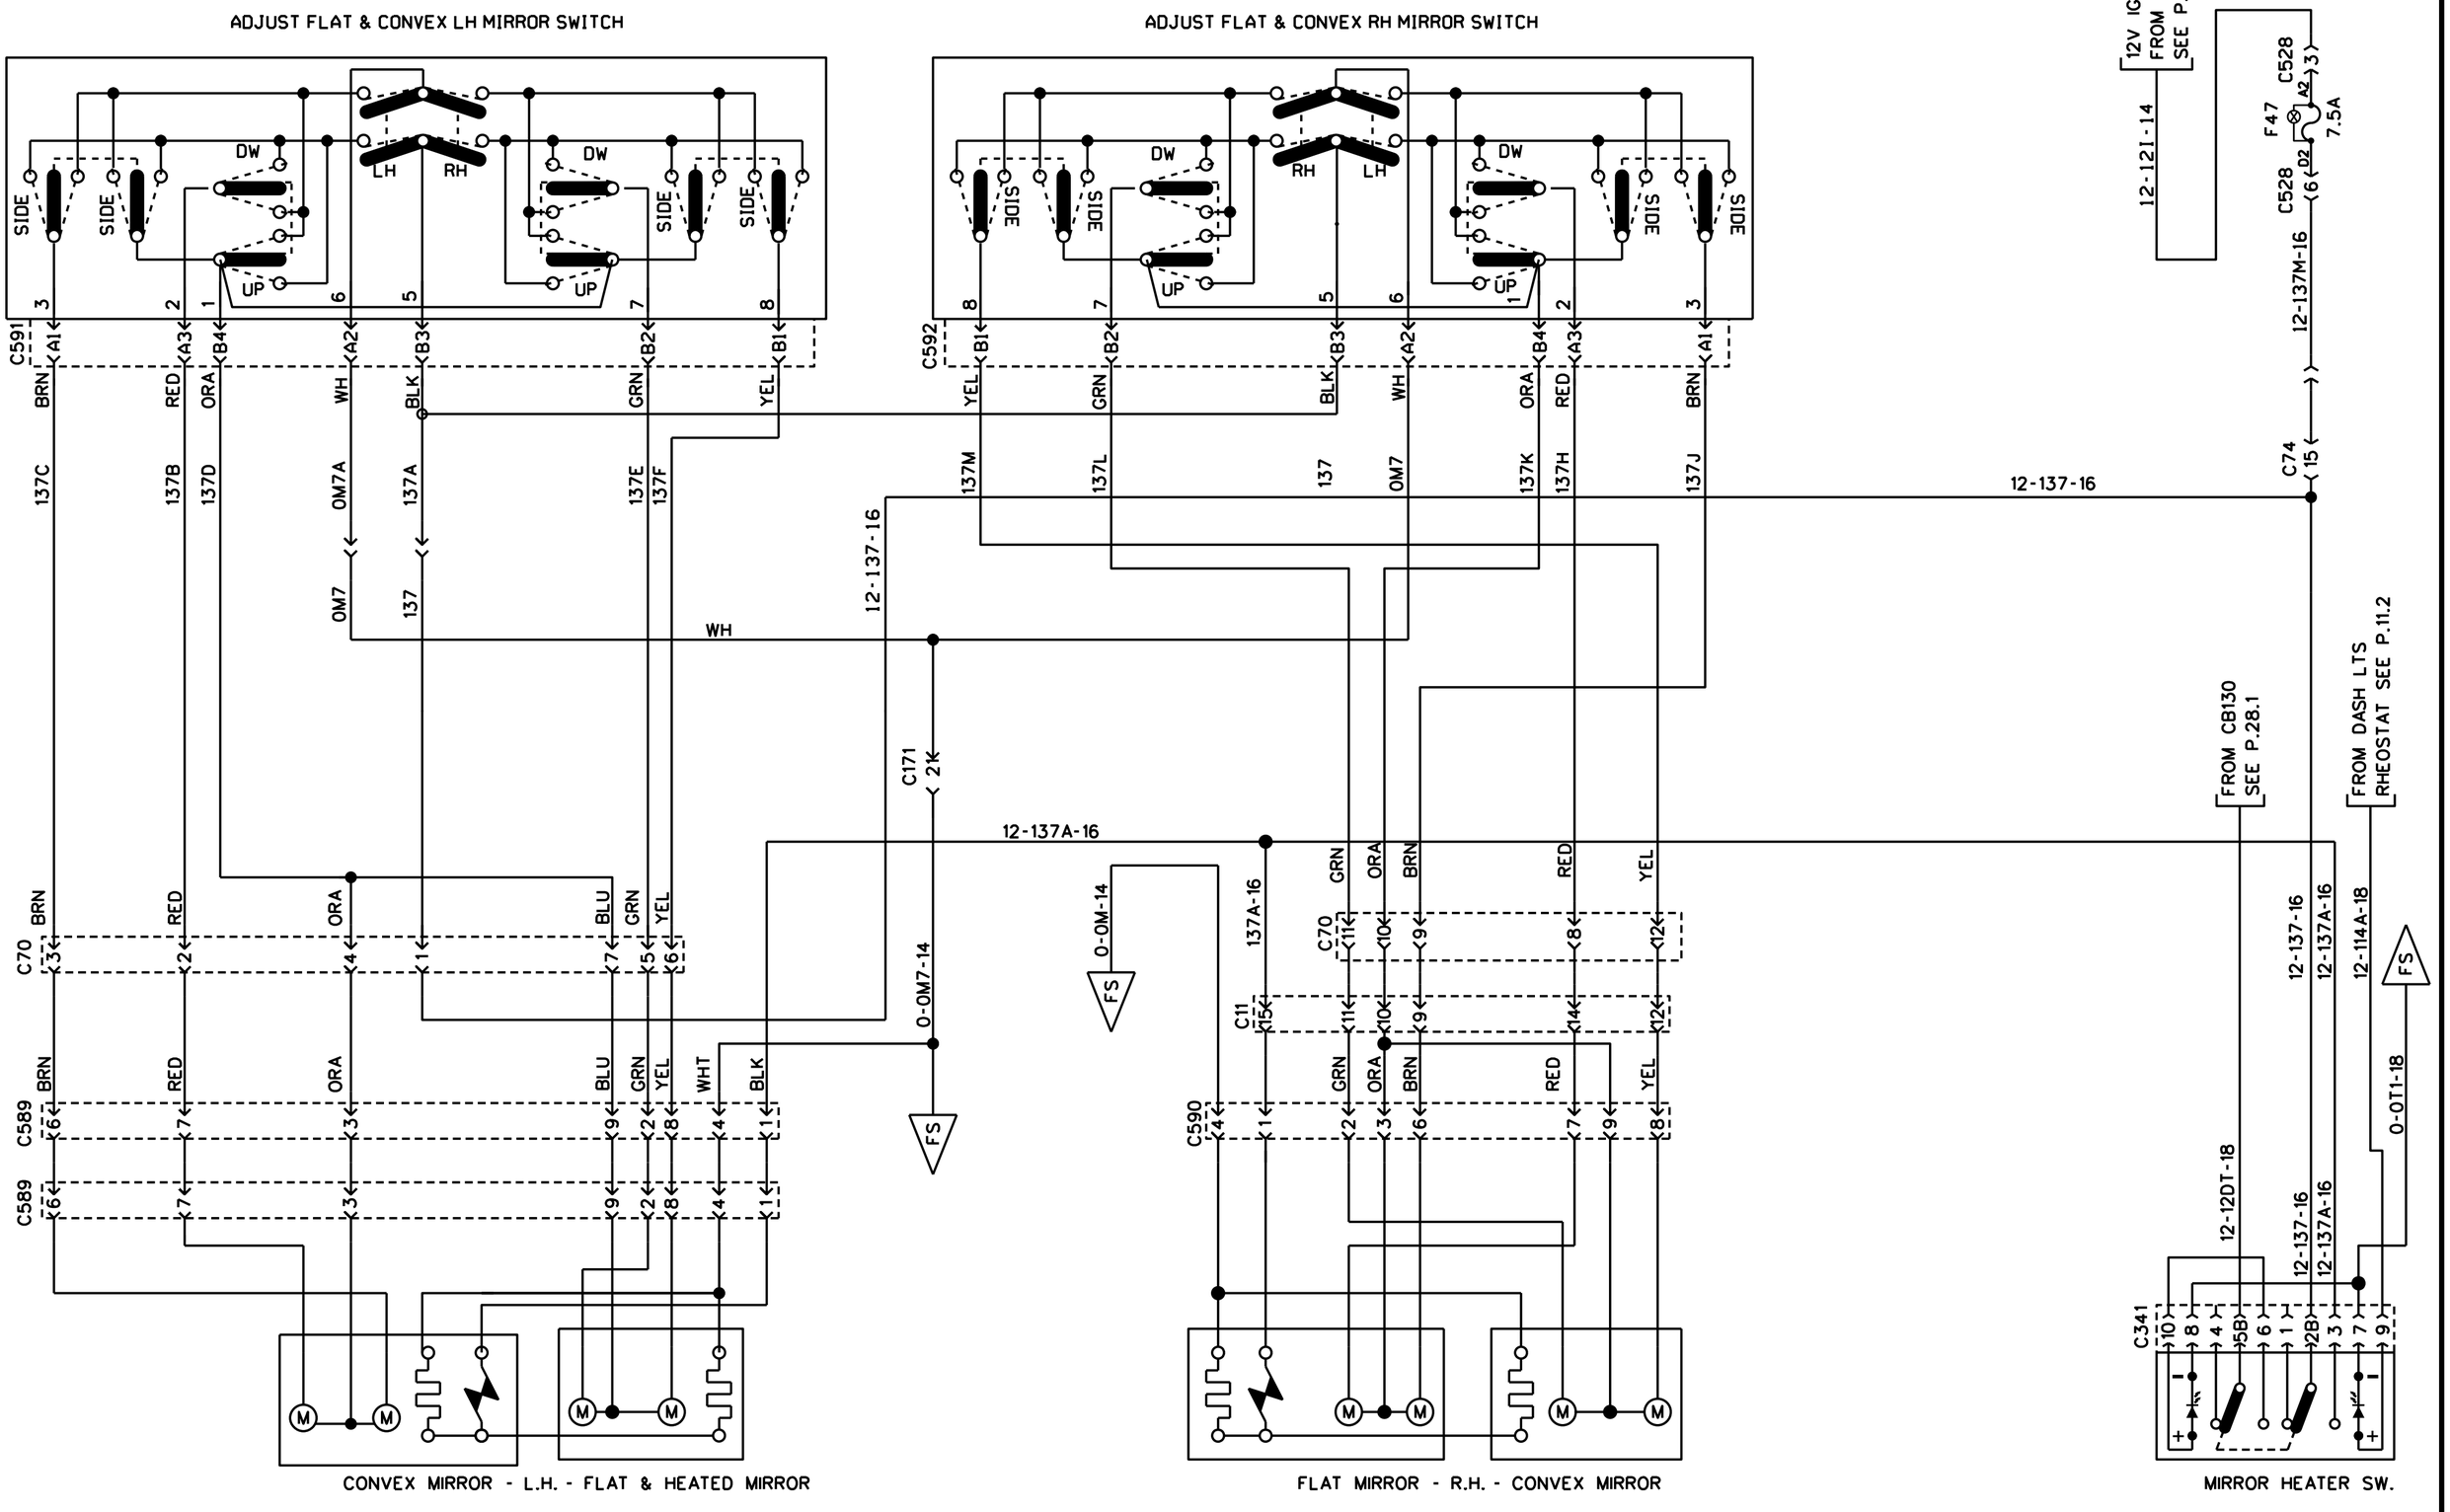

REAR VIEW MIRROR RAMCO FLAT & CONVEX - 2 ADJUSTMENT SW. & 1 HEATED SW.

W.C.L. SYSTEM STEWART & STEVENSON

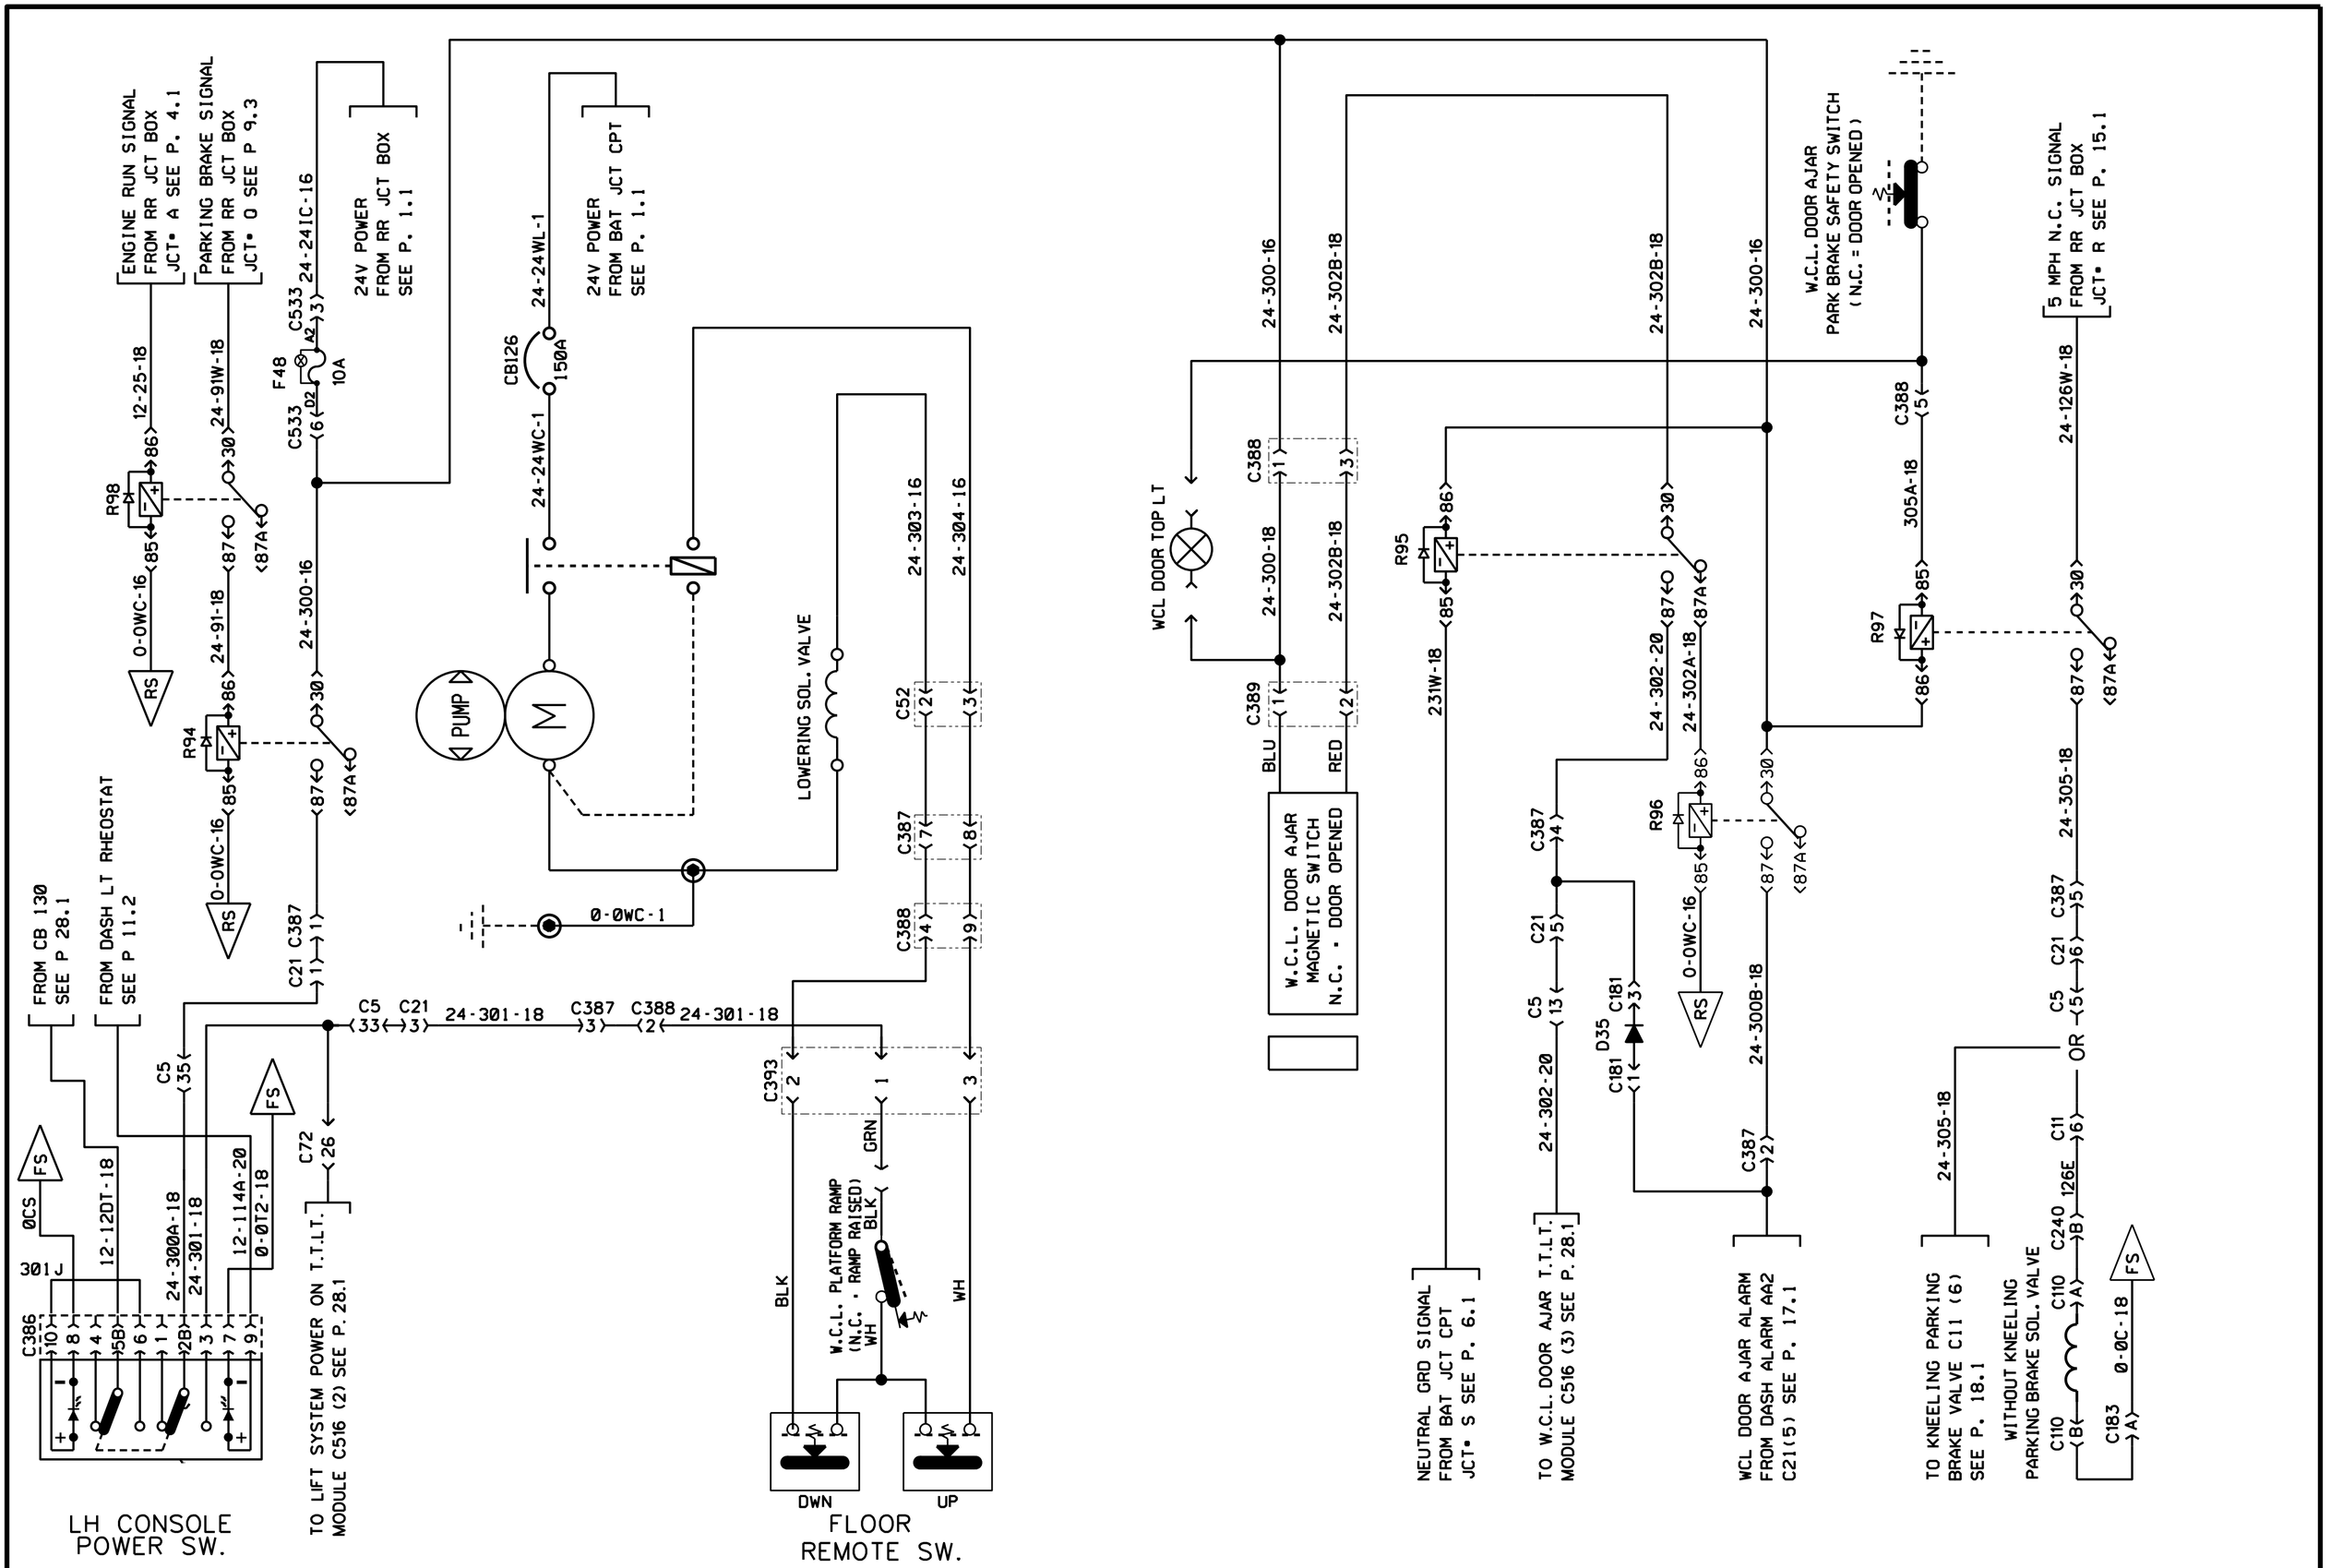

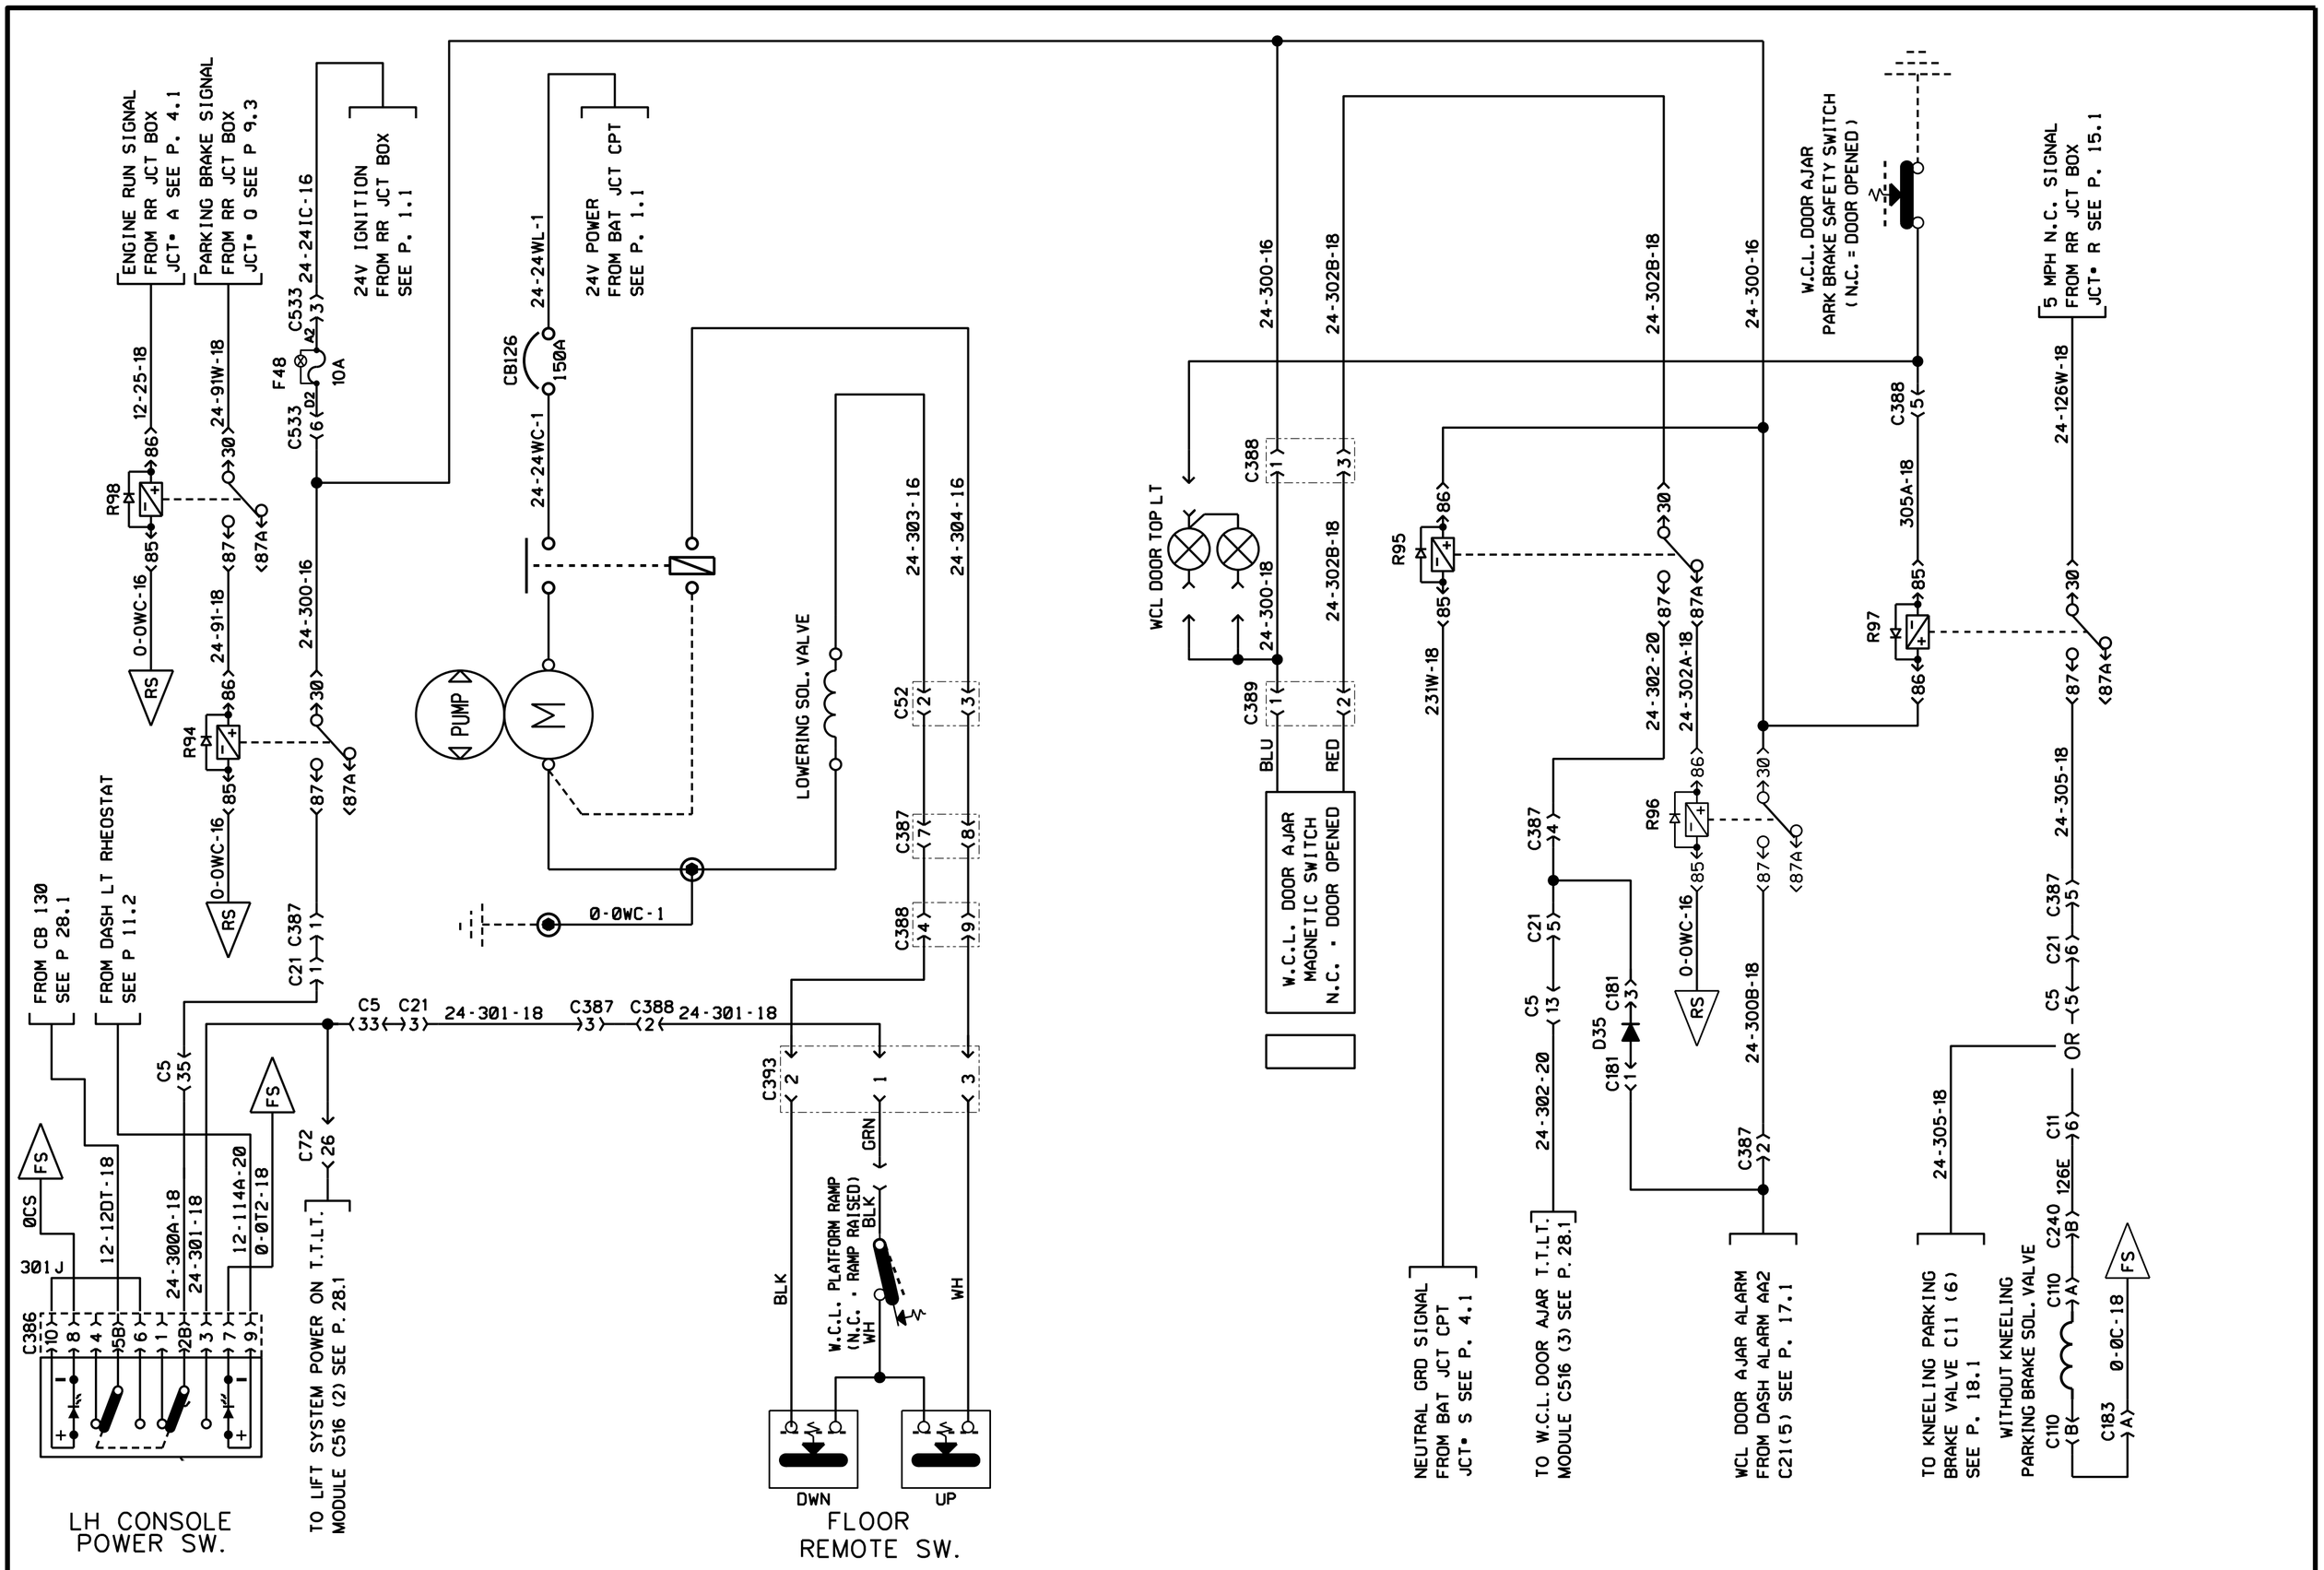

W.C.L. SYSTEM STEWART & STEVENSON

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 25.1	REVISION 08

W.C.L. SYSTEM STEWART & STEVENSON

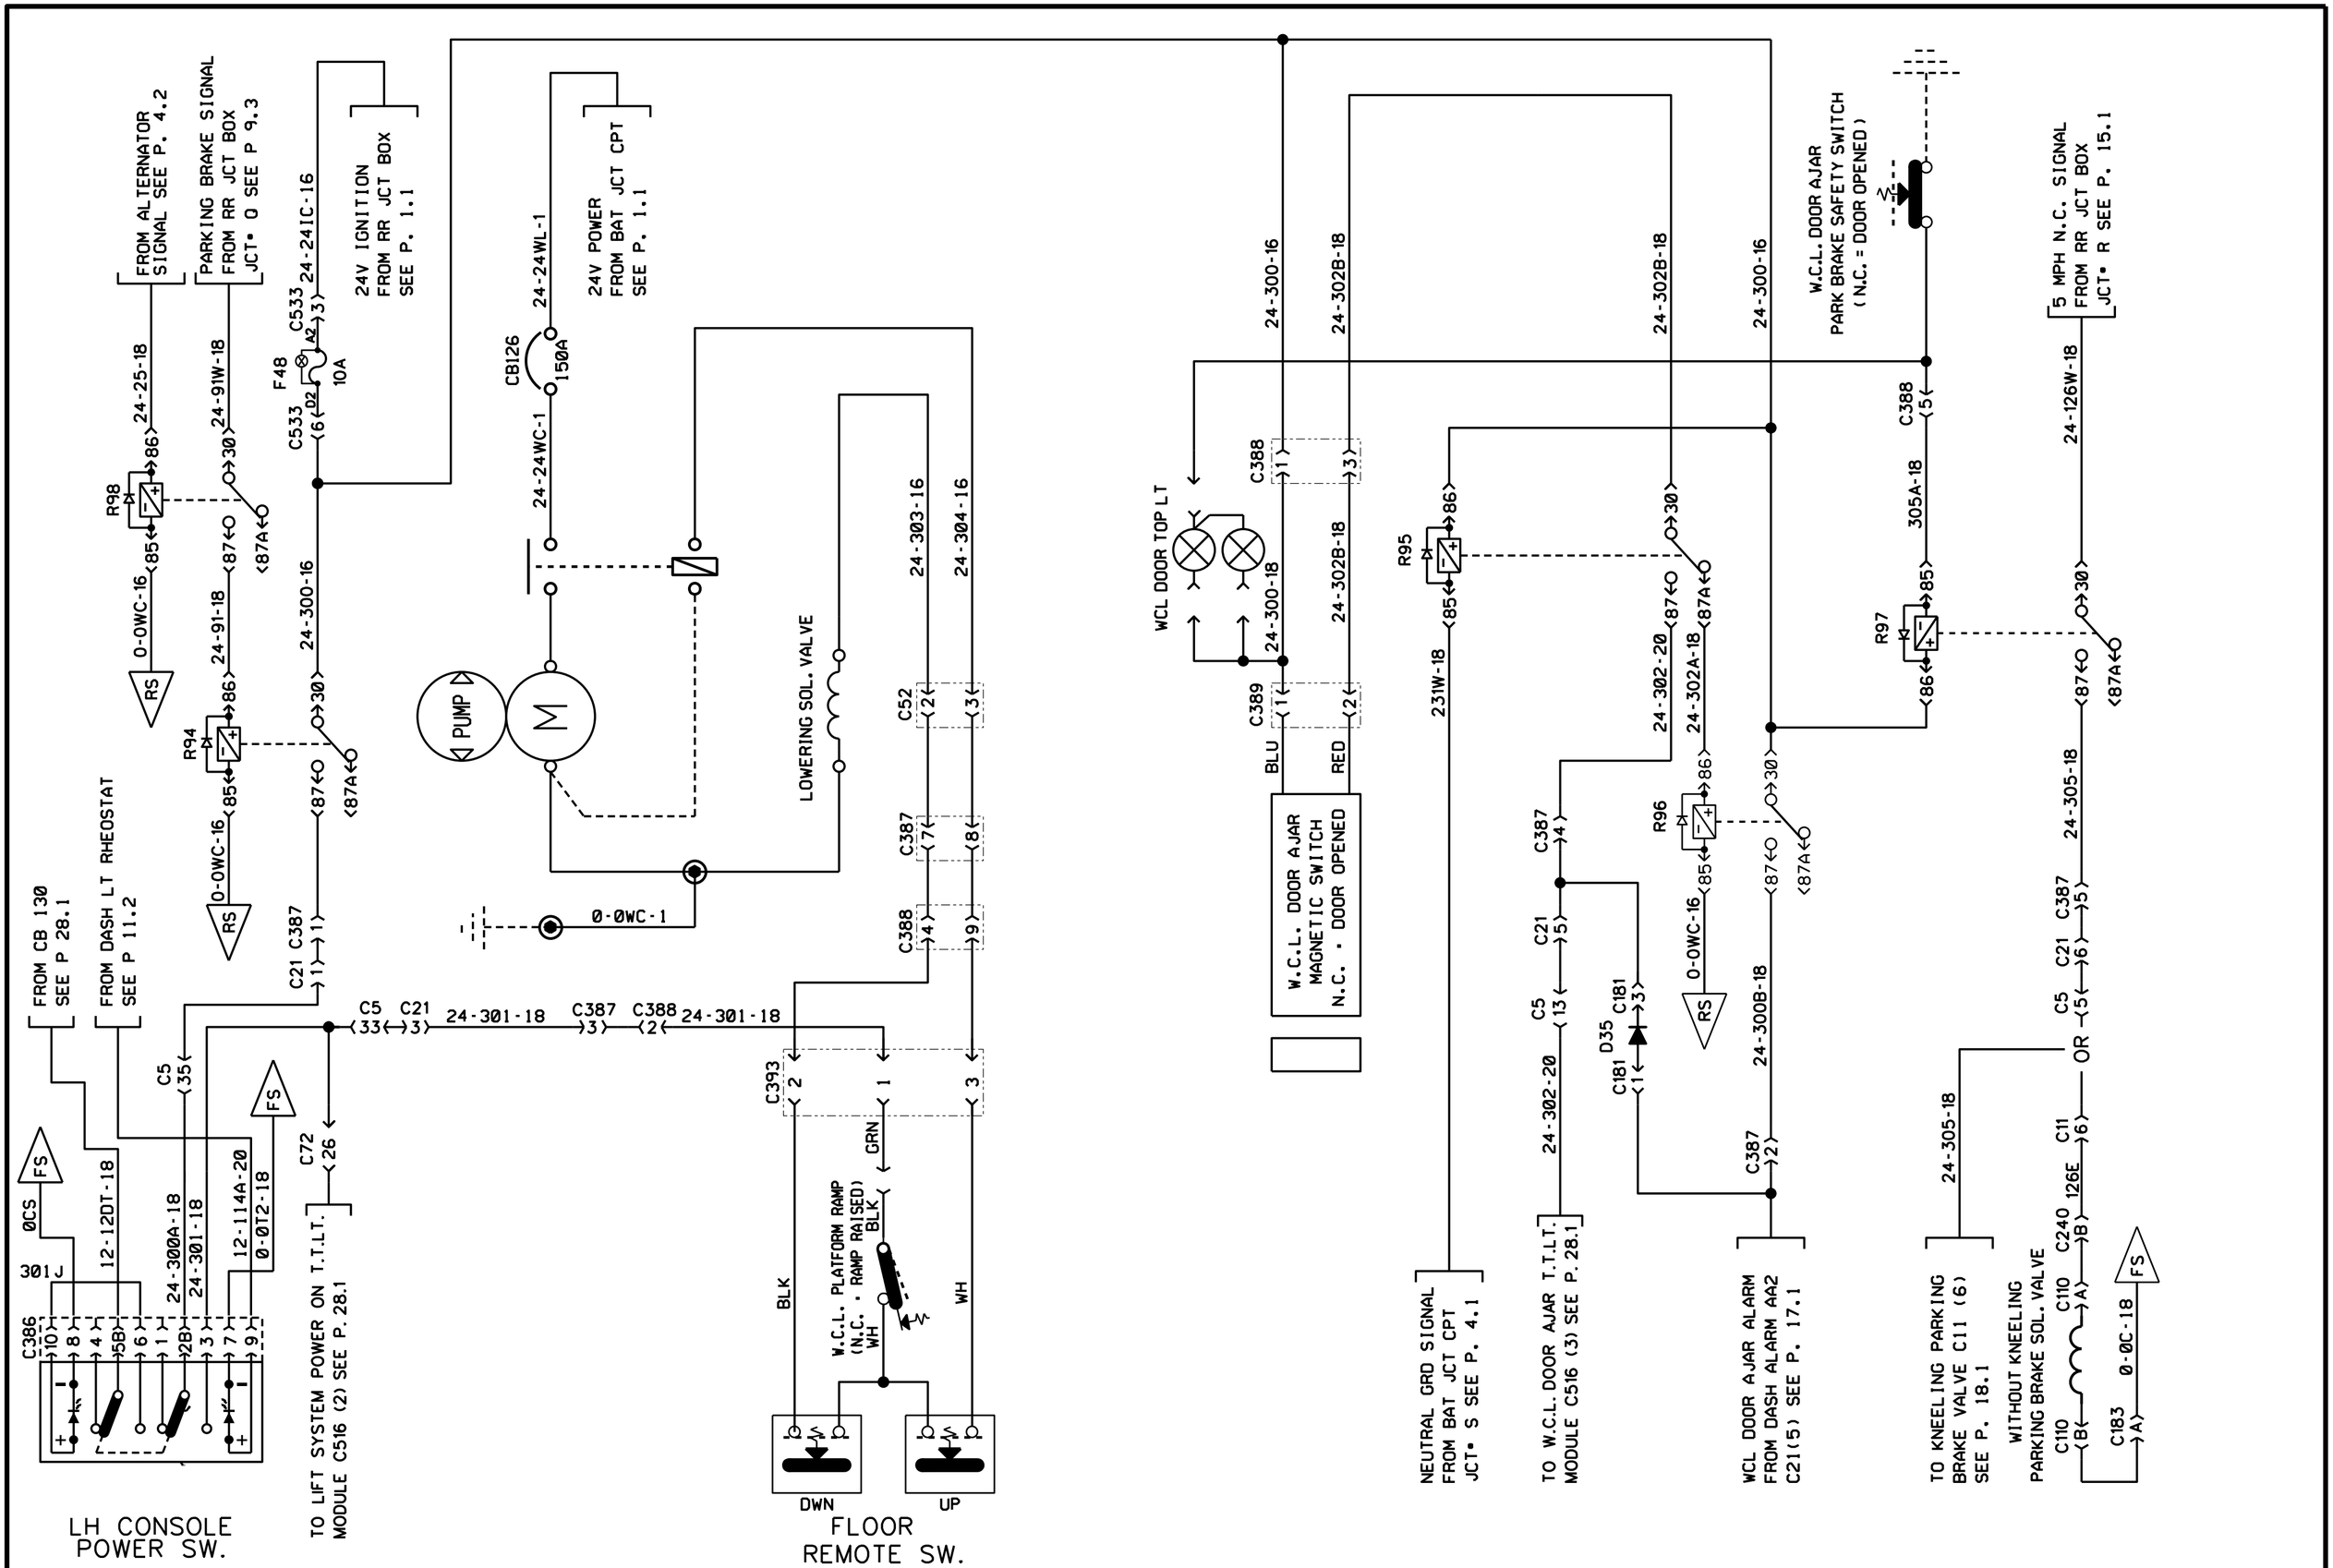

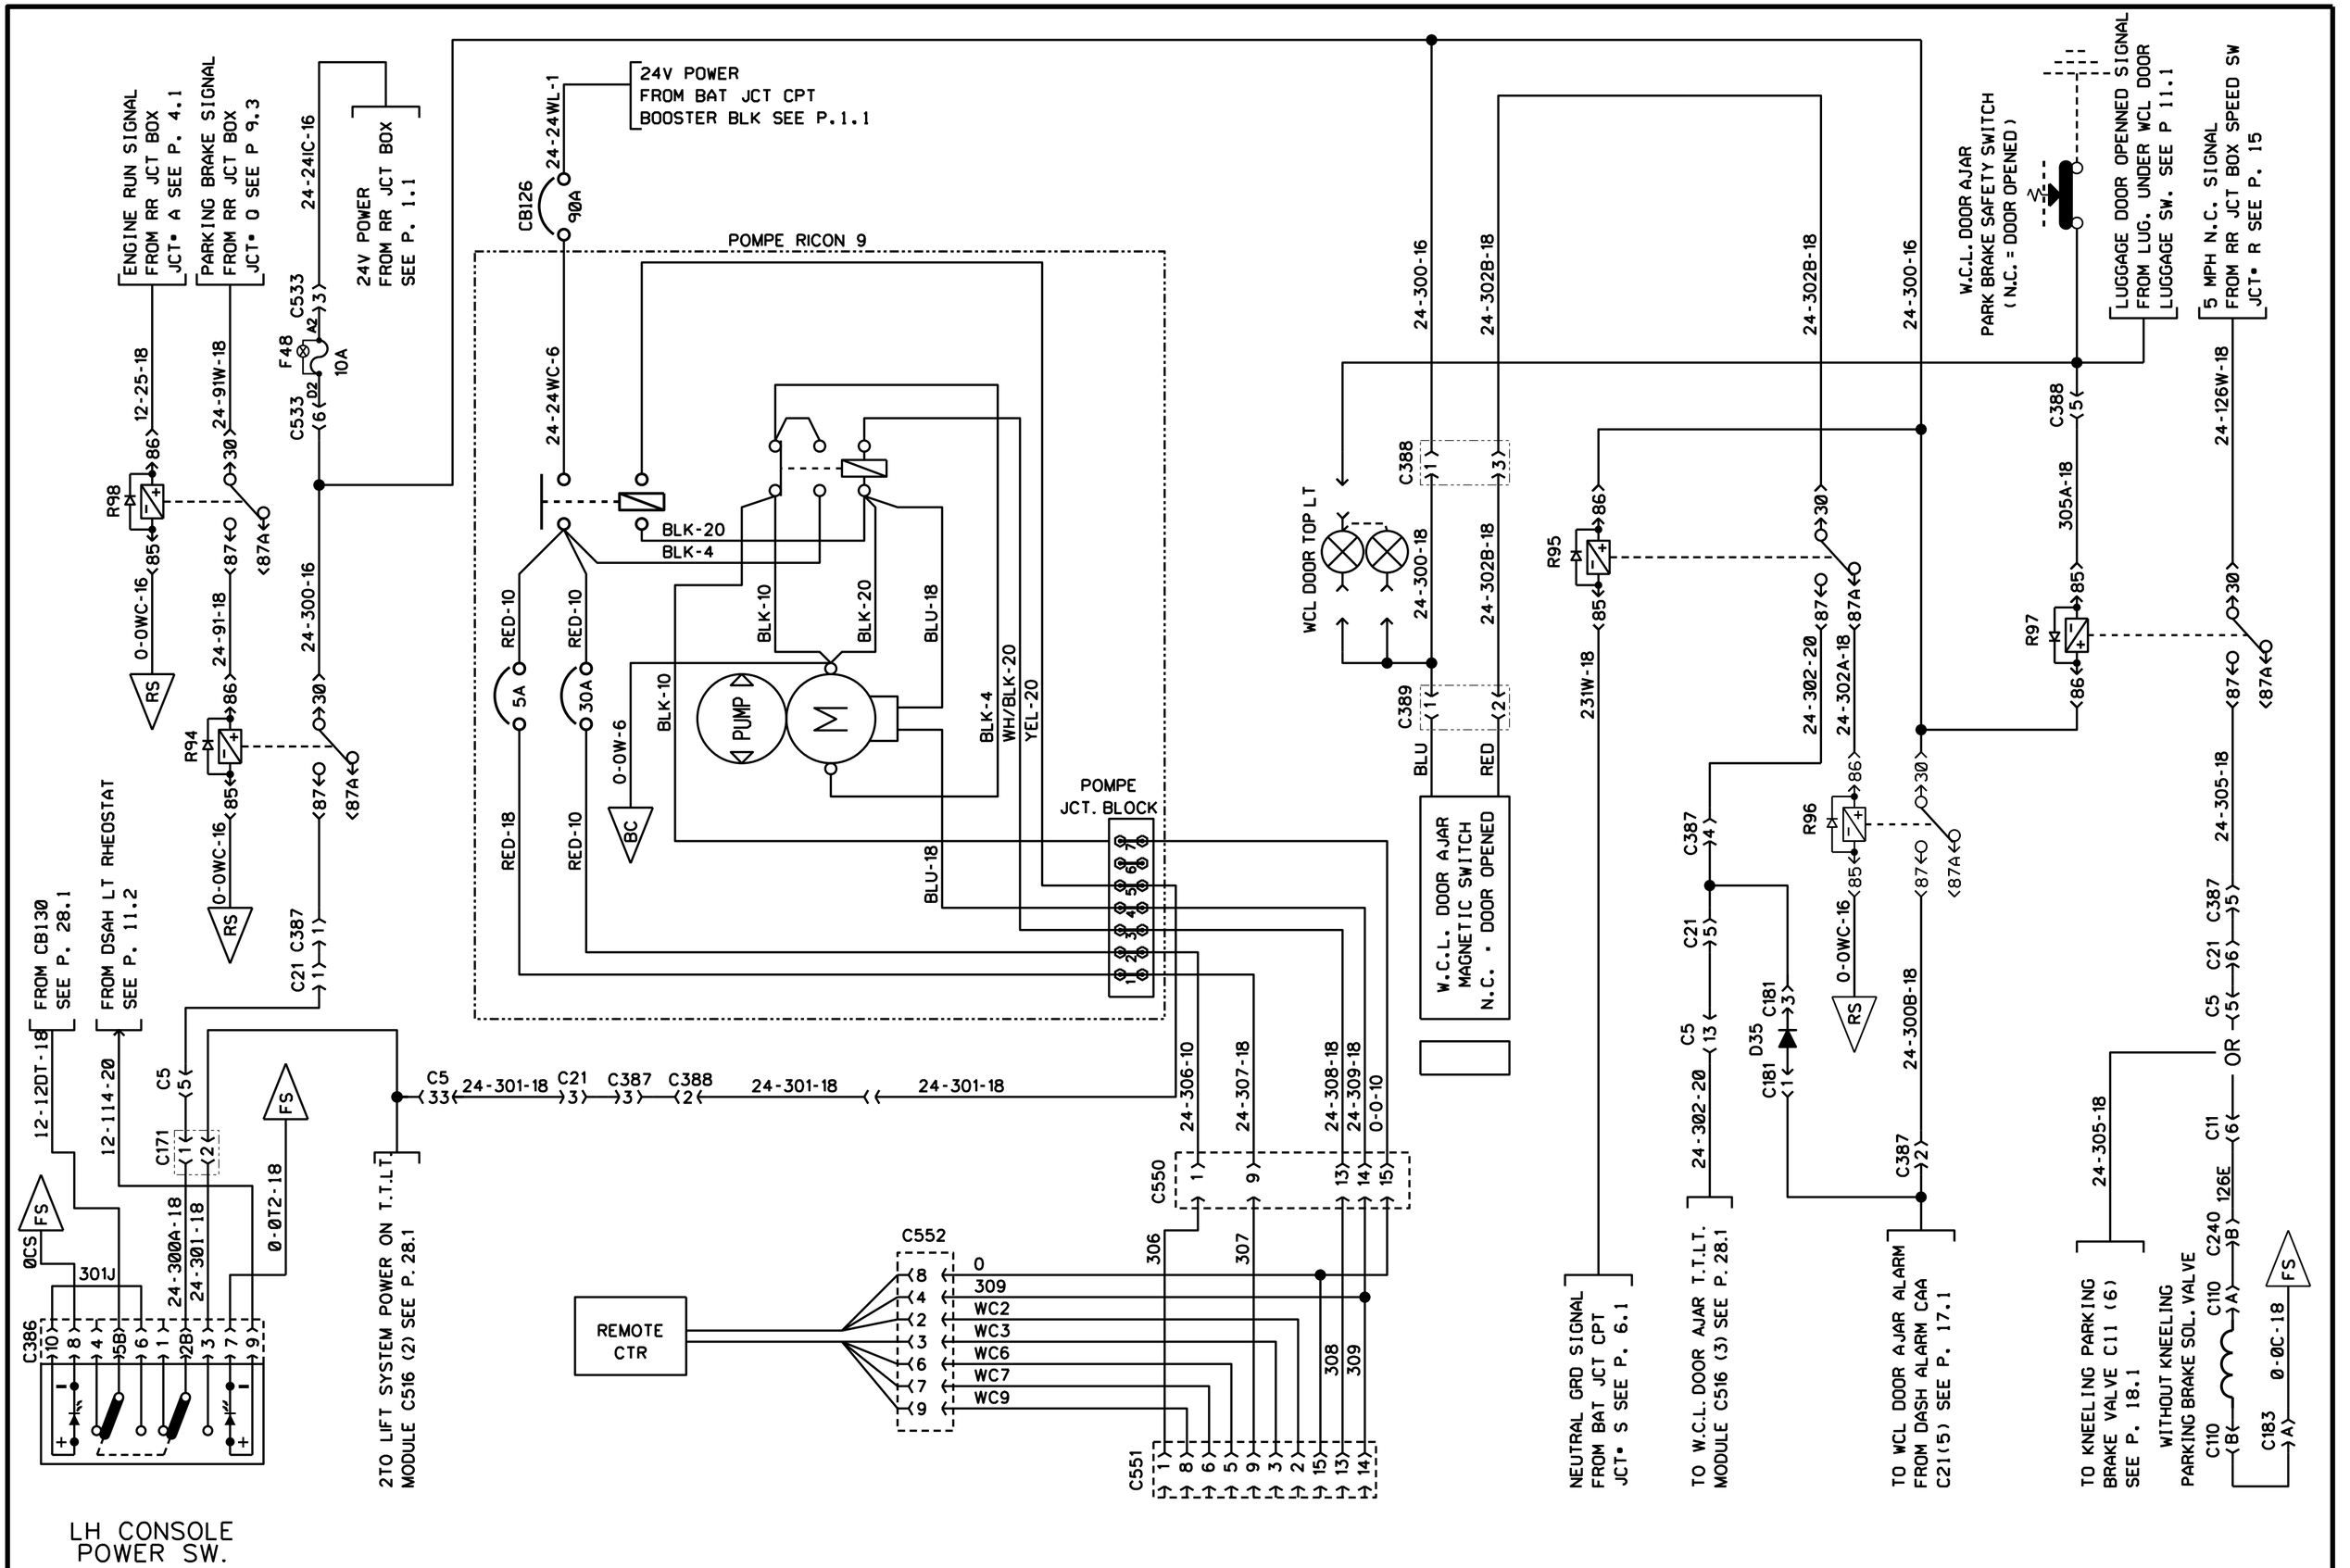

W.C.L. SYSTEM RICON 9

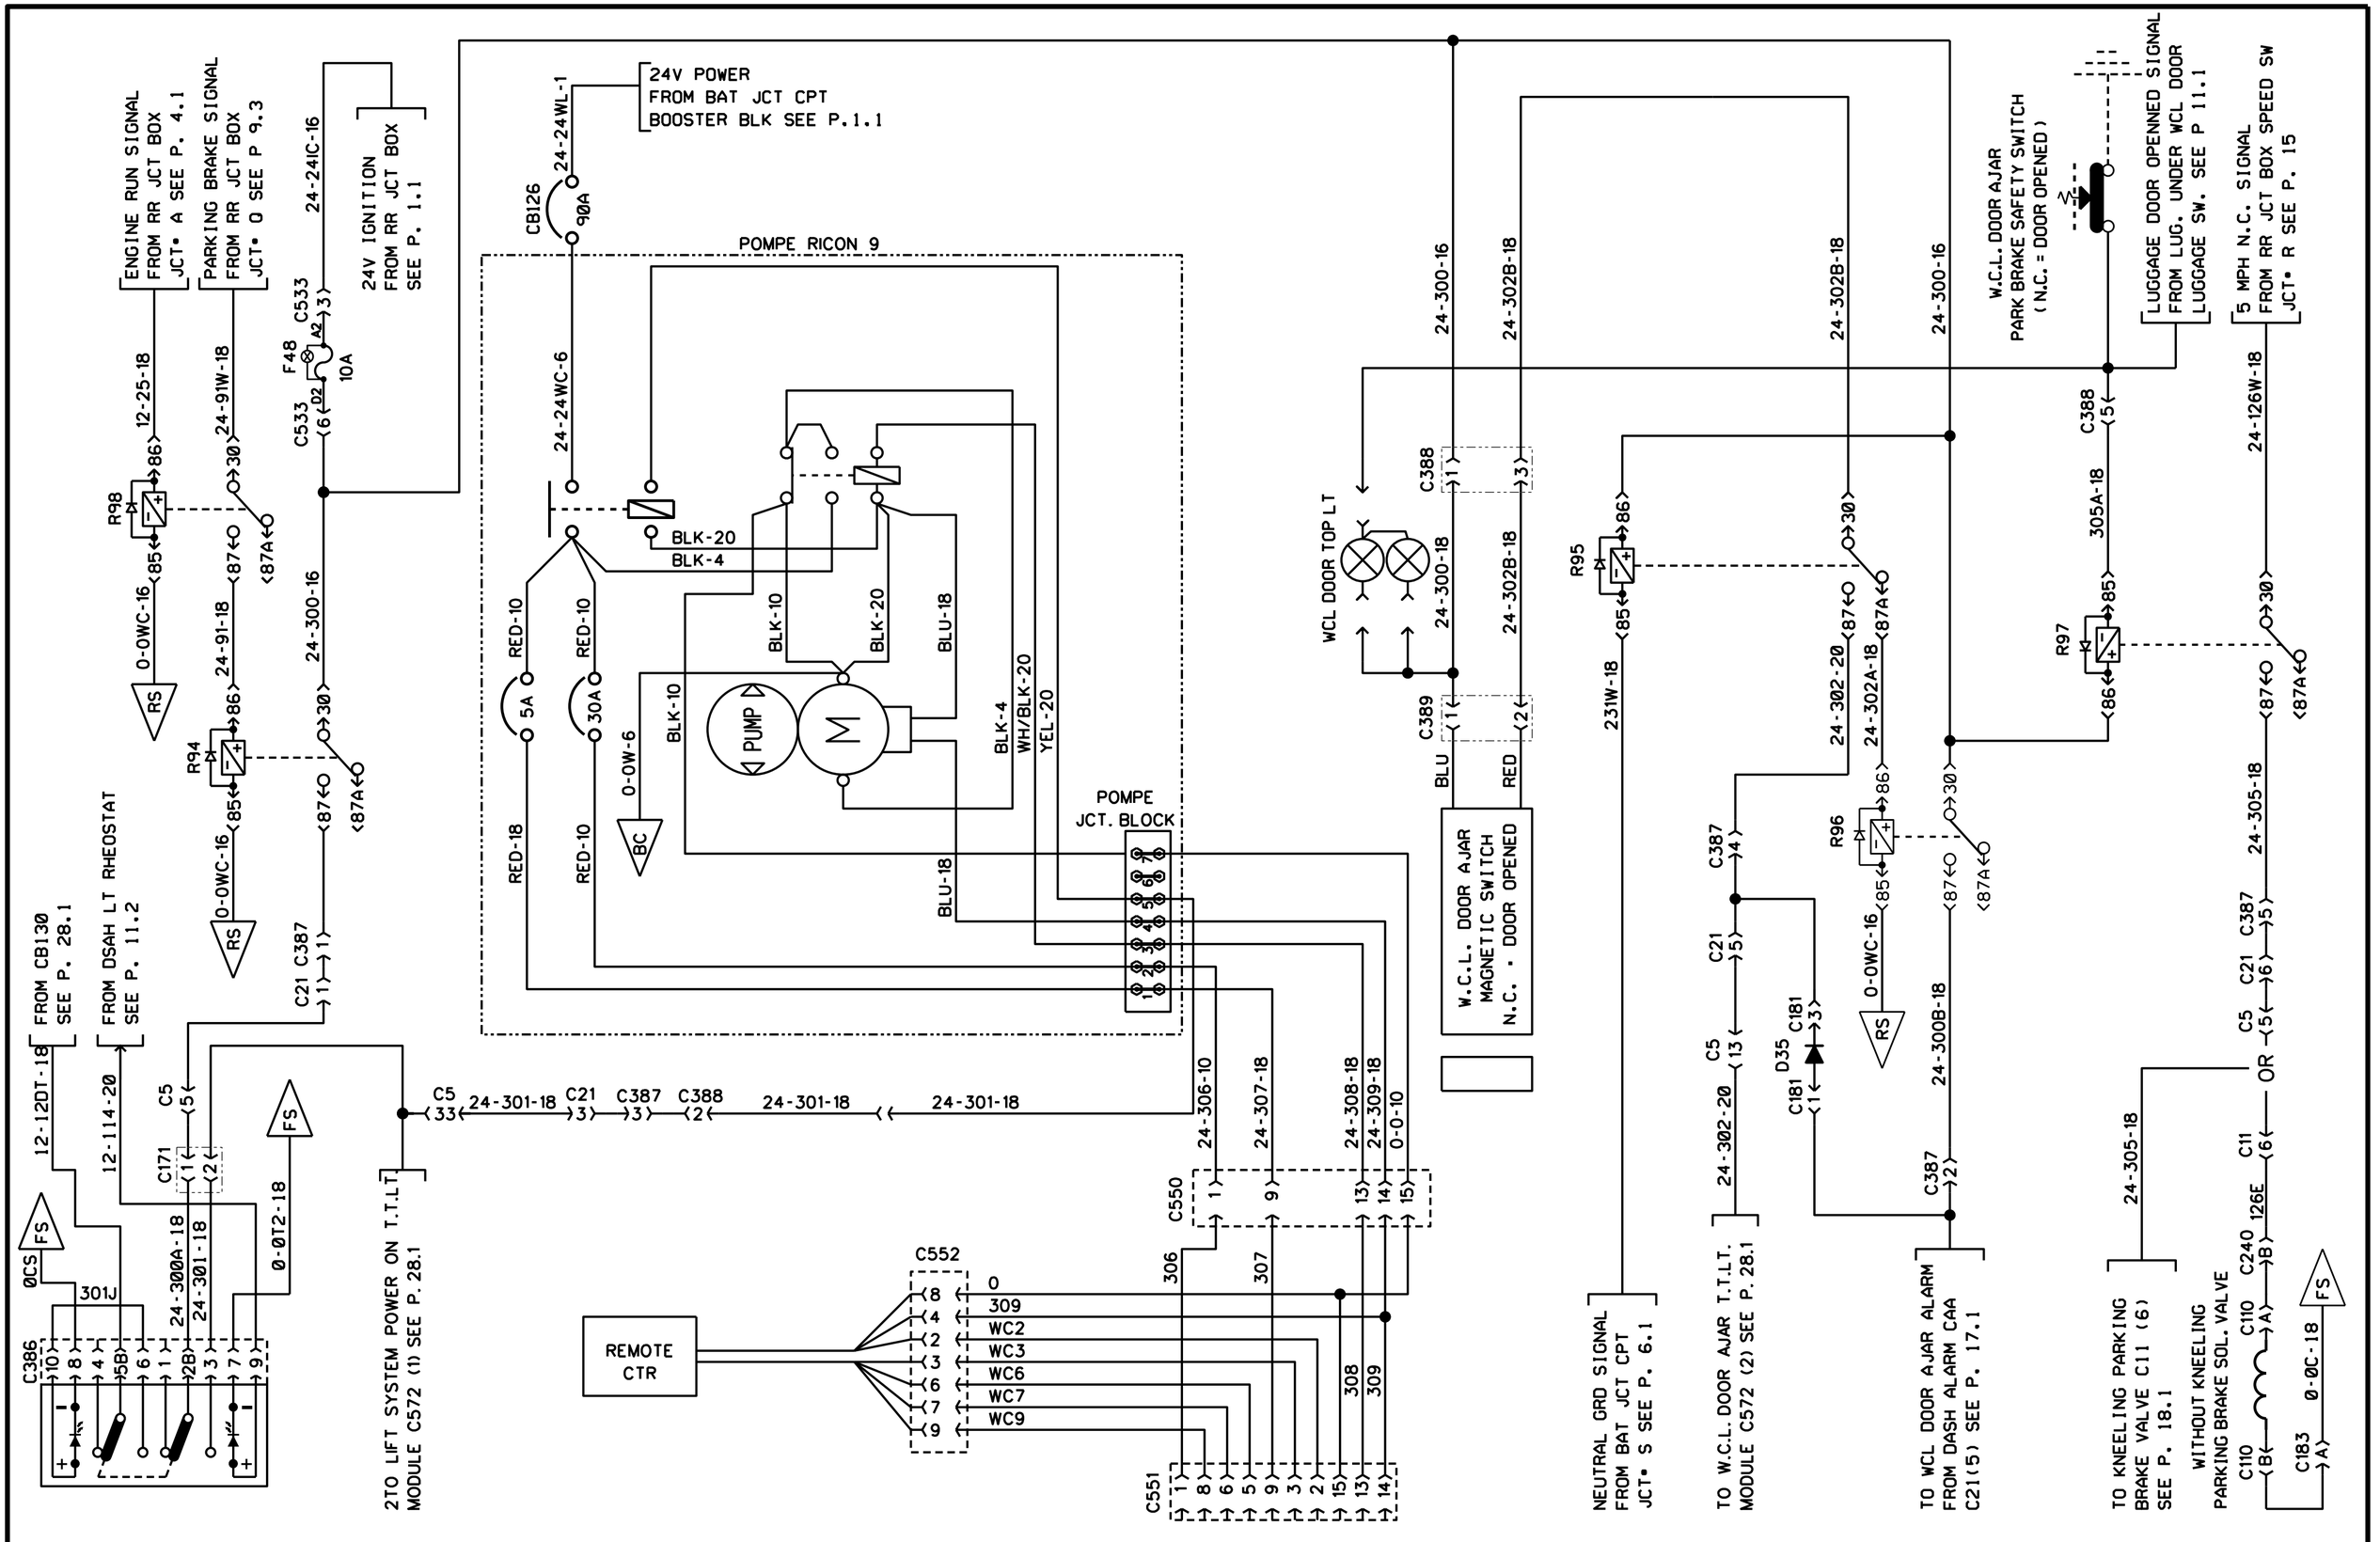

W.C.L. SYSTEM RICON 9

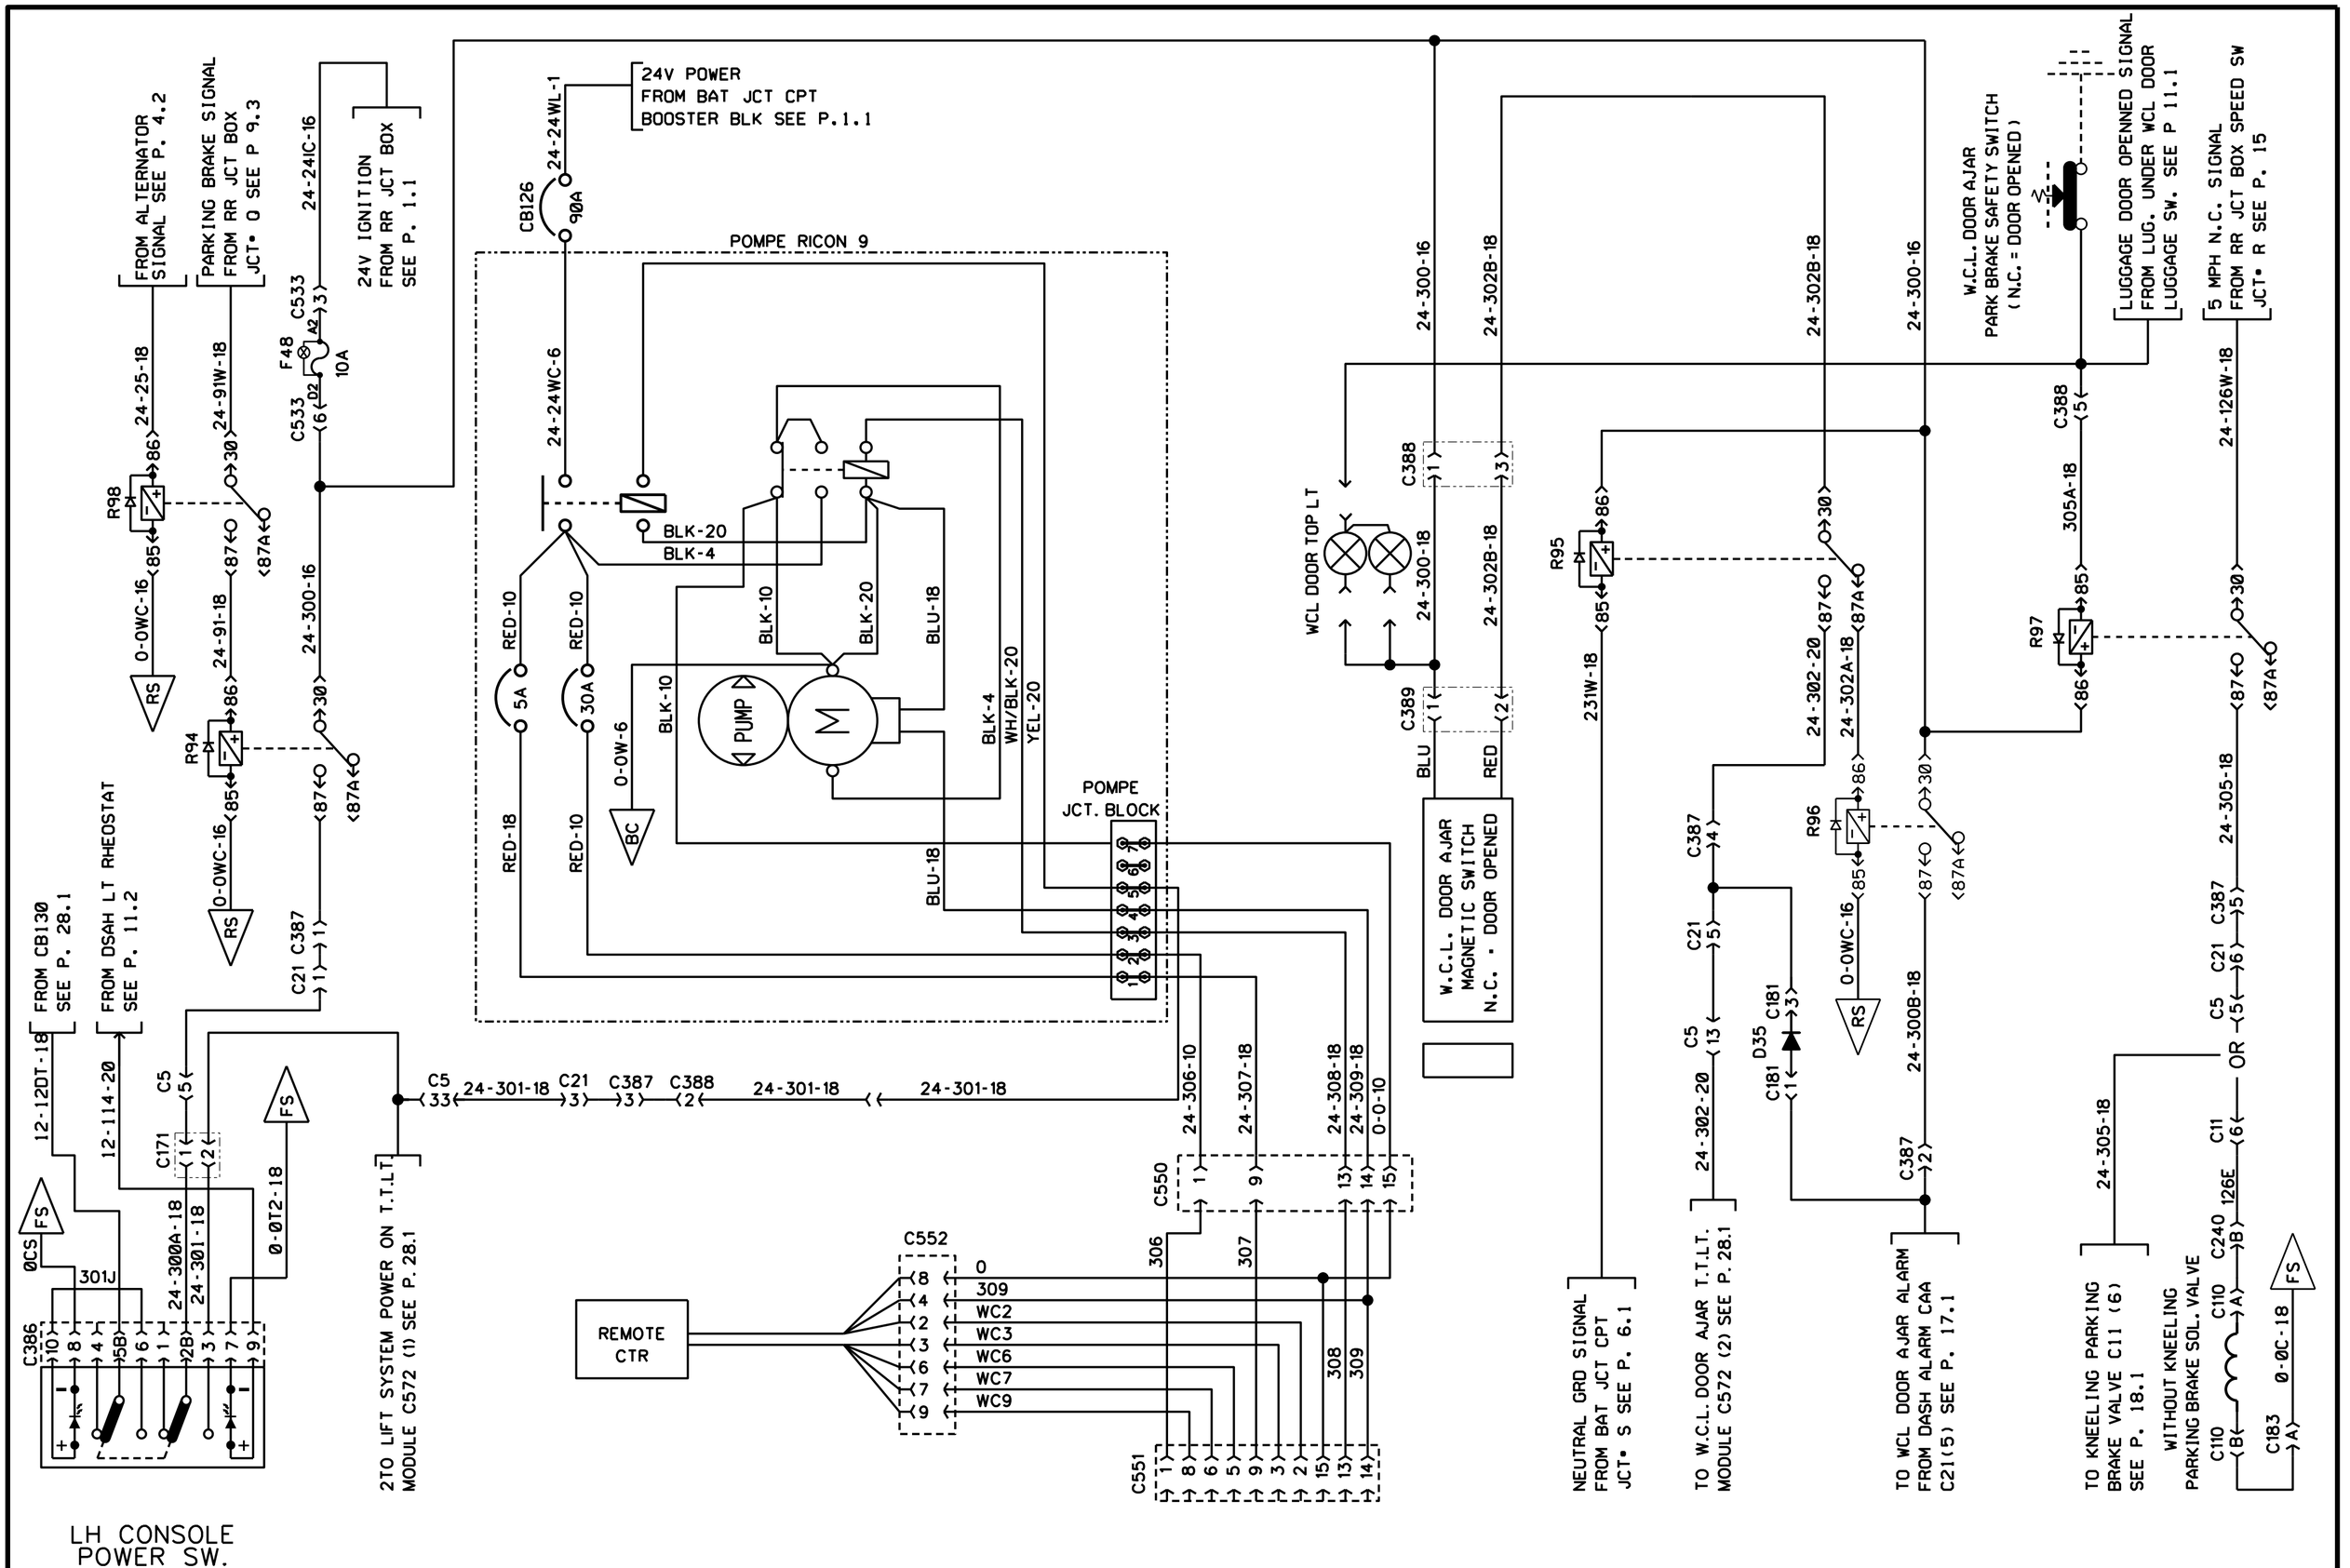

W.C.L. SYSTEM RICON 9

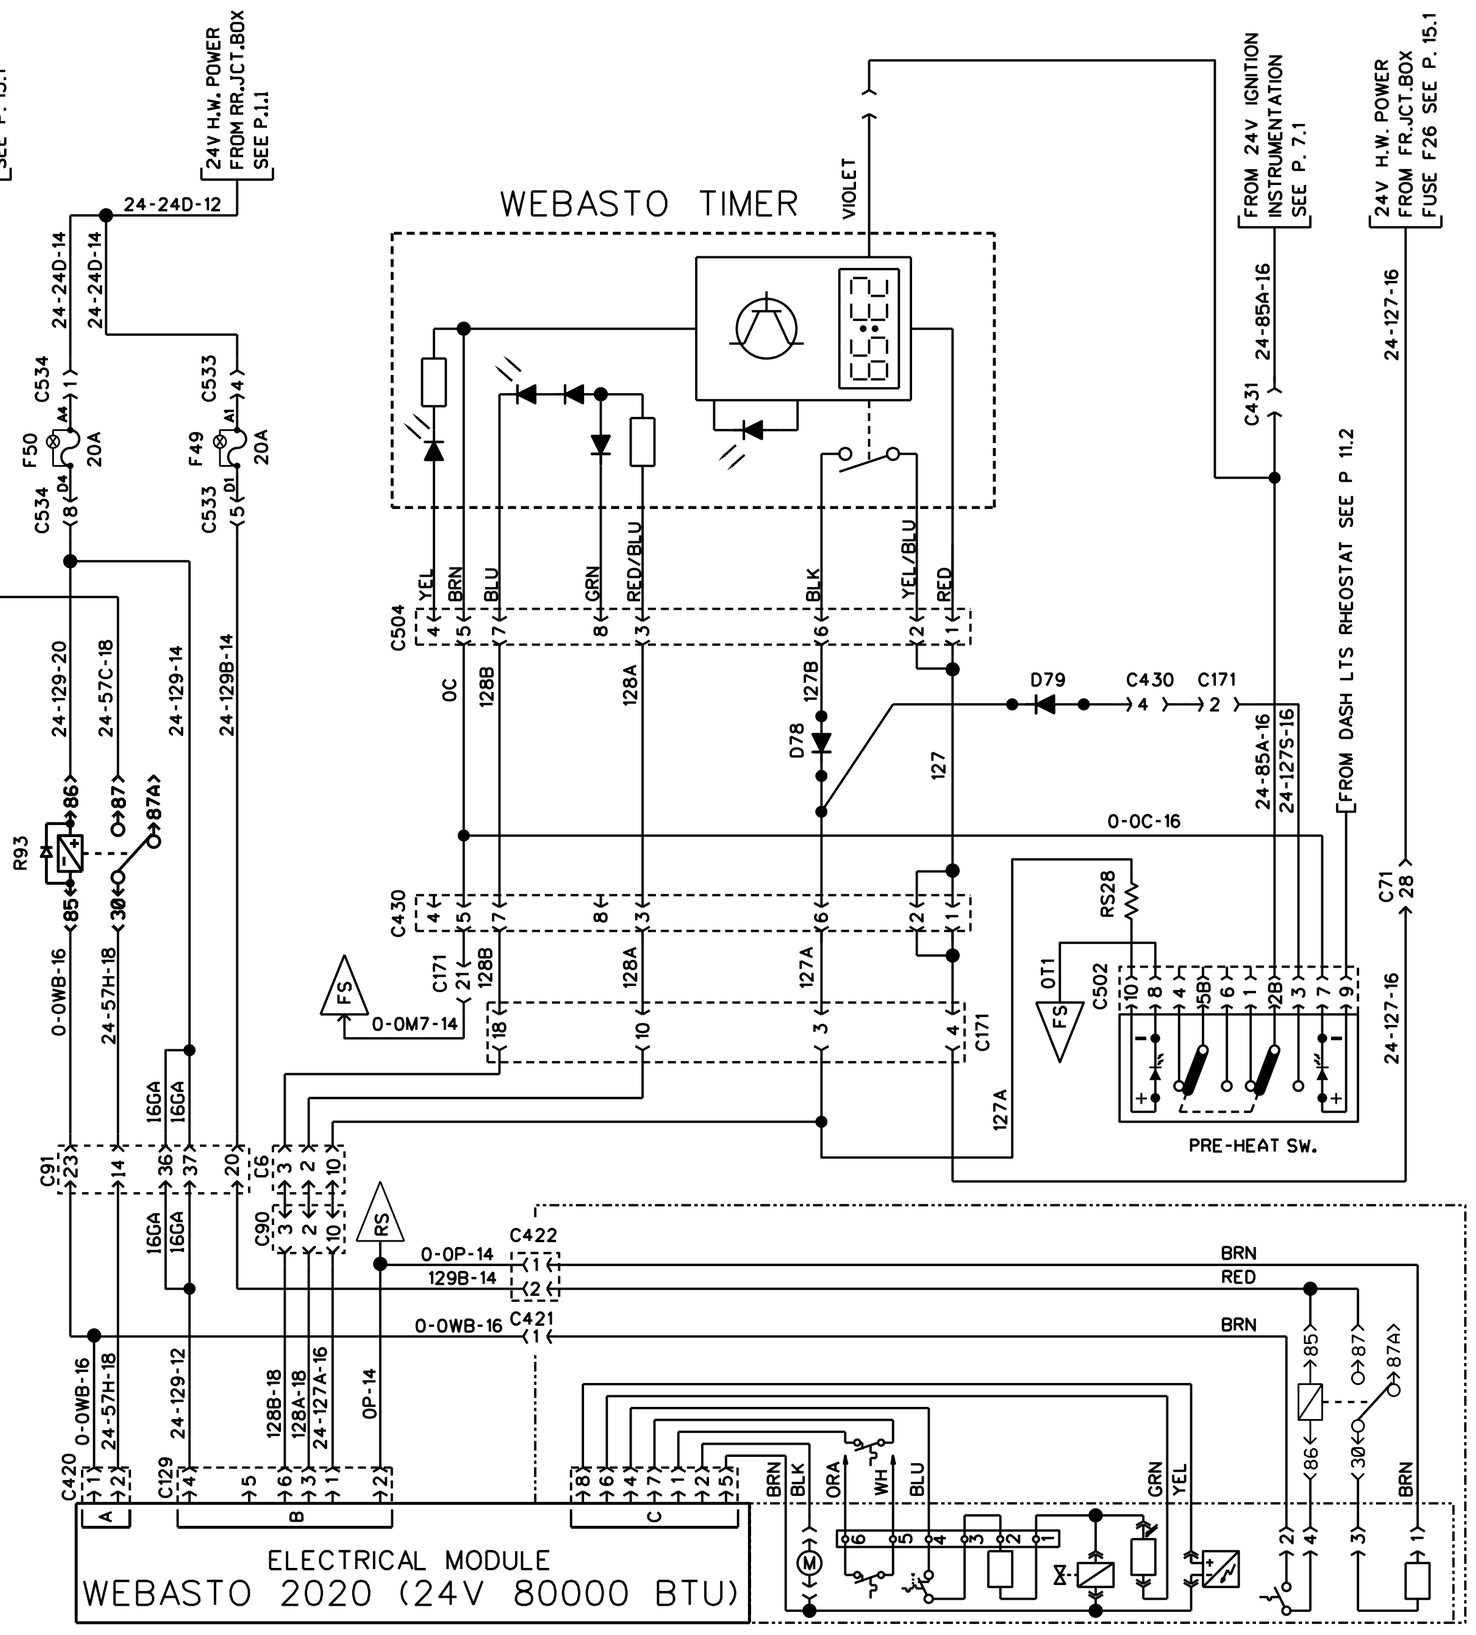

PREVOST	WIRING DIAGRAM	NO: D060902	PAGE: 26.1	REVISION 00

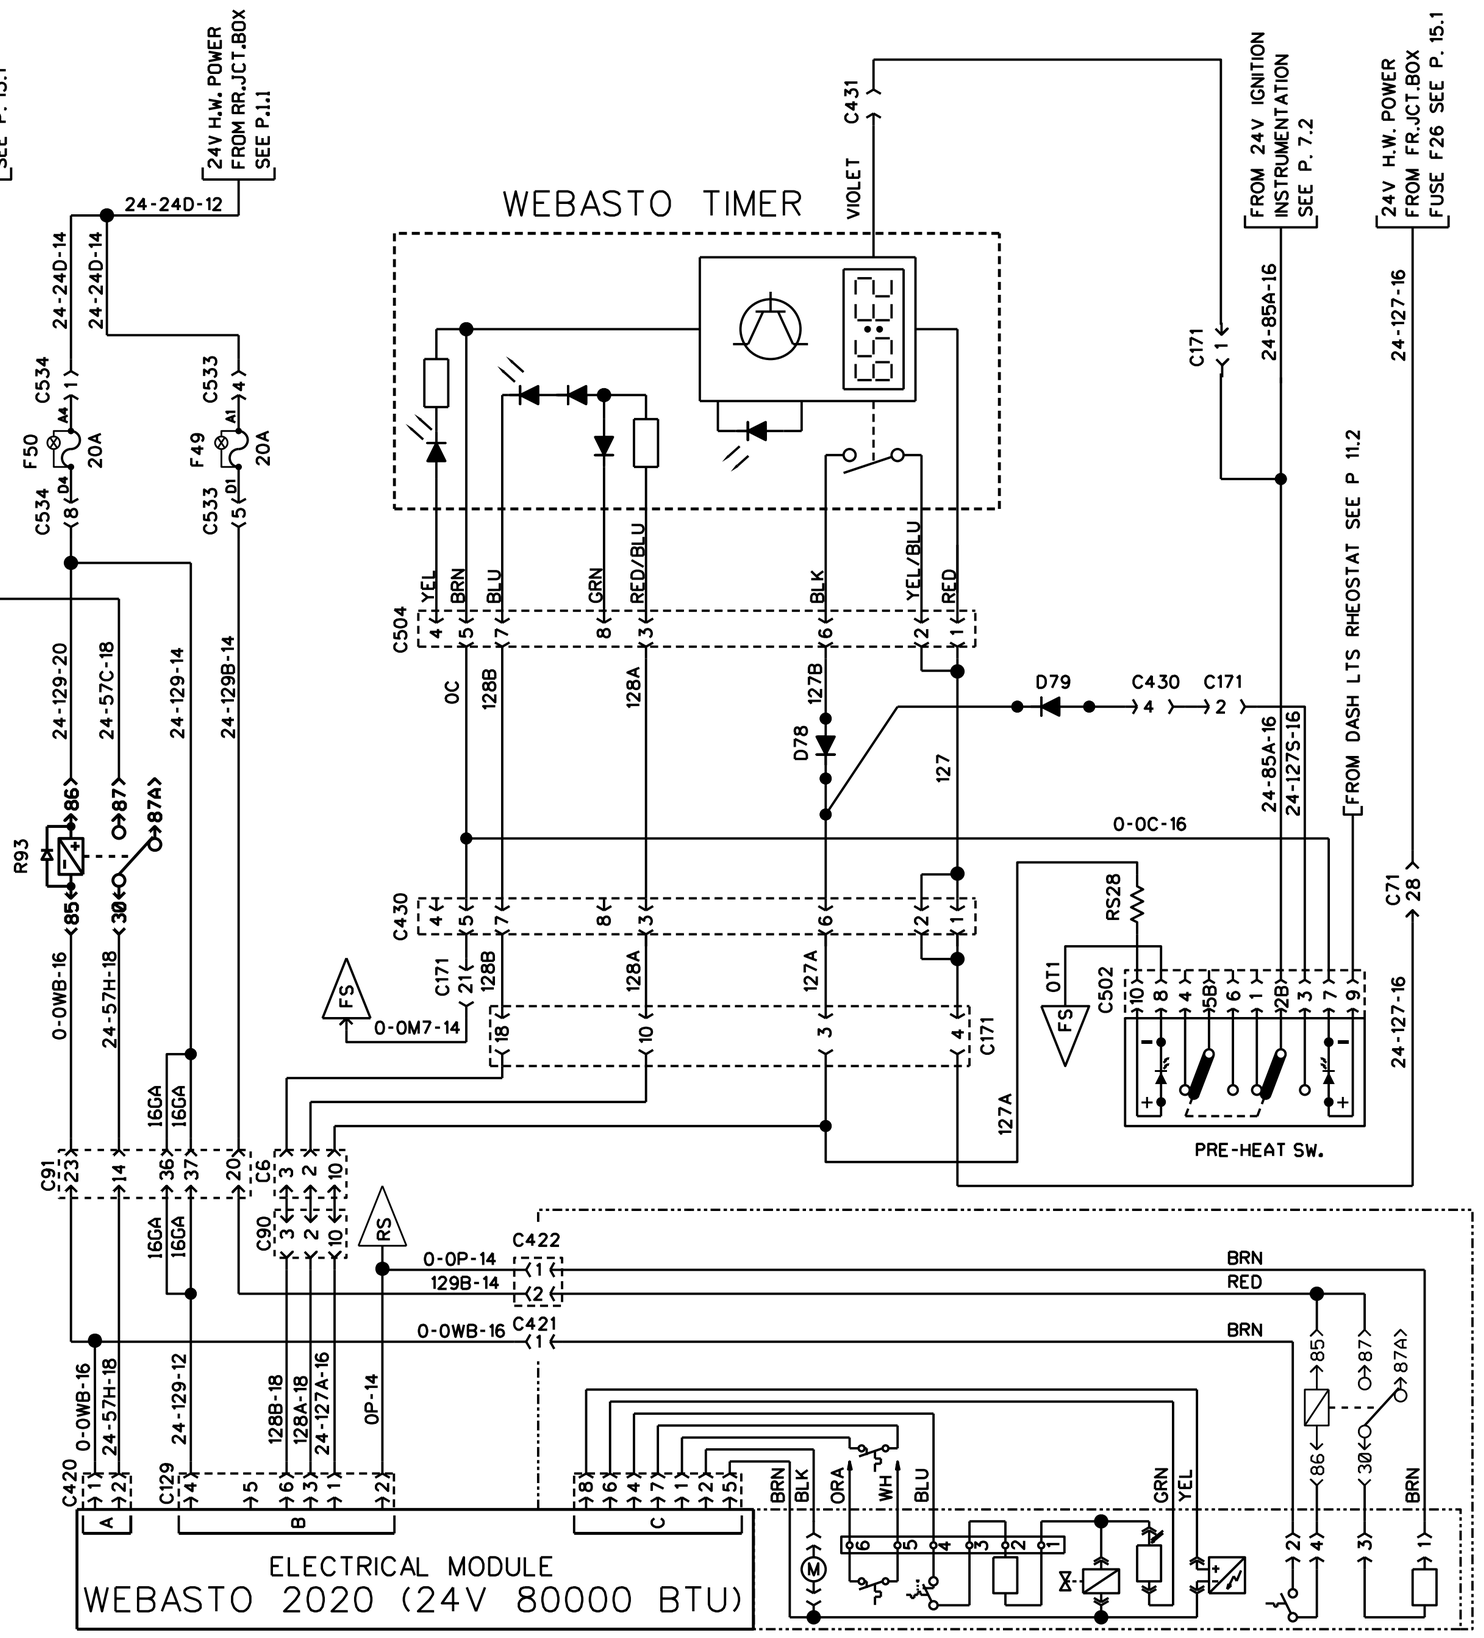
WEBASTO TIMER
TO WATER PUMP SEE P. 13.1
24V H.W. POWER FROM RR.JCT.BOX SEE P.1.1
24-24D-12
24-24D-14
24-57C-18
24-129-20
24-57C-18
24-129-14
24-129B-14
F50 20A
F49 20A
C534
C533
R93
86
85
87
87A
30
0-0WB-16
24-57H-18
16GA
C91
C90
C6
RS
0-0P-14
129B-14
C422
C421
0-0WB-16
24-57H-18
24-129-12
128B-18
128A-18
24-127A-16
0P-14
C420
C129
A
B
C
ELECTRICAL MODULE
WEBASTO 2020 (24V 80000 BTU)
C504
YEL
BRN
BLU
GRN
RED/BLU
BLK
YEL/BLU
RED
OC
128B
128A
127B
127
127A
C431
VIOLET
C171
24-85A-16
FROM 24V IGNITION INSTRUMENTATION SEE P. 7.2
24-127-16
24V H.W. POWER FROM FR.JCT.BOX FUSE F26 SEE P. 15.1
FROM DASH LTS RHEOSTAT SEE P 11.2
D78
D79
C430
C71
28
0-0C-16
FS
0-0M7-14
RS28
0T1
C502
2B
5B
PRE-HEAT SW.
BRN
RED
BRN
BRN
BLK
ORA
WH
BLU
GRN
YEL
PRE-HEAT WATER HEATER (WEBASTO 2020)
24-85A-16
24-127-16
24-127B-16
0-0W-16
24-128A-18
24-127S-16
C505
ELECTRONIC TIMER CONTROL SW.
24-127A-16
0-0M7-14
24-128A-18
24-128B-18
24-129-14
C526
F26 5A
24-24D-16
24V H.W. POWER FROM FR.JCT.BOX SEE P. 1.1
24V H.W. POWER FROM RR.JCT.BOX SEE P. 1.1
TO WATER PUMP RLY SEE P 13.1
FUEL METERING PUMP
0-0P-14
12-114A-18
24-129-12
24-127A-16
24-128A-18
24-128B-18
C129
CONTROL MODULE
ESPAR (24V 41000 BTU)
24-57H-18
24-127W-18
24-128W-18
JUMPER
PRE-HEAT WATER HEATER (ESPAR)

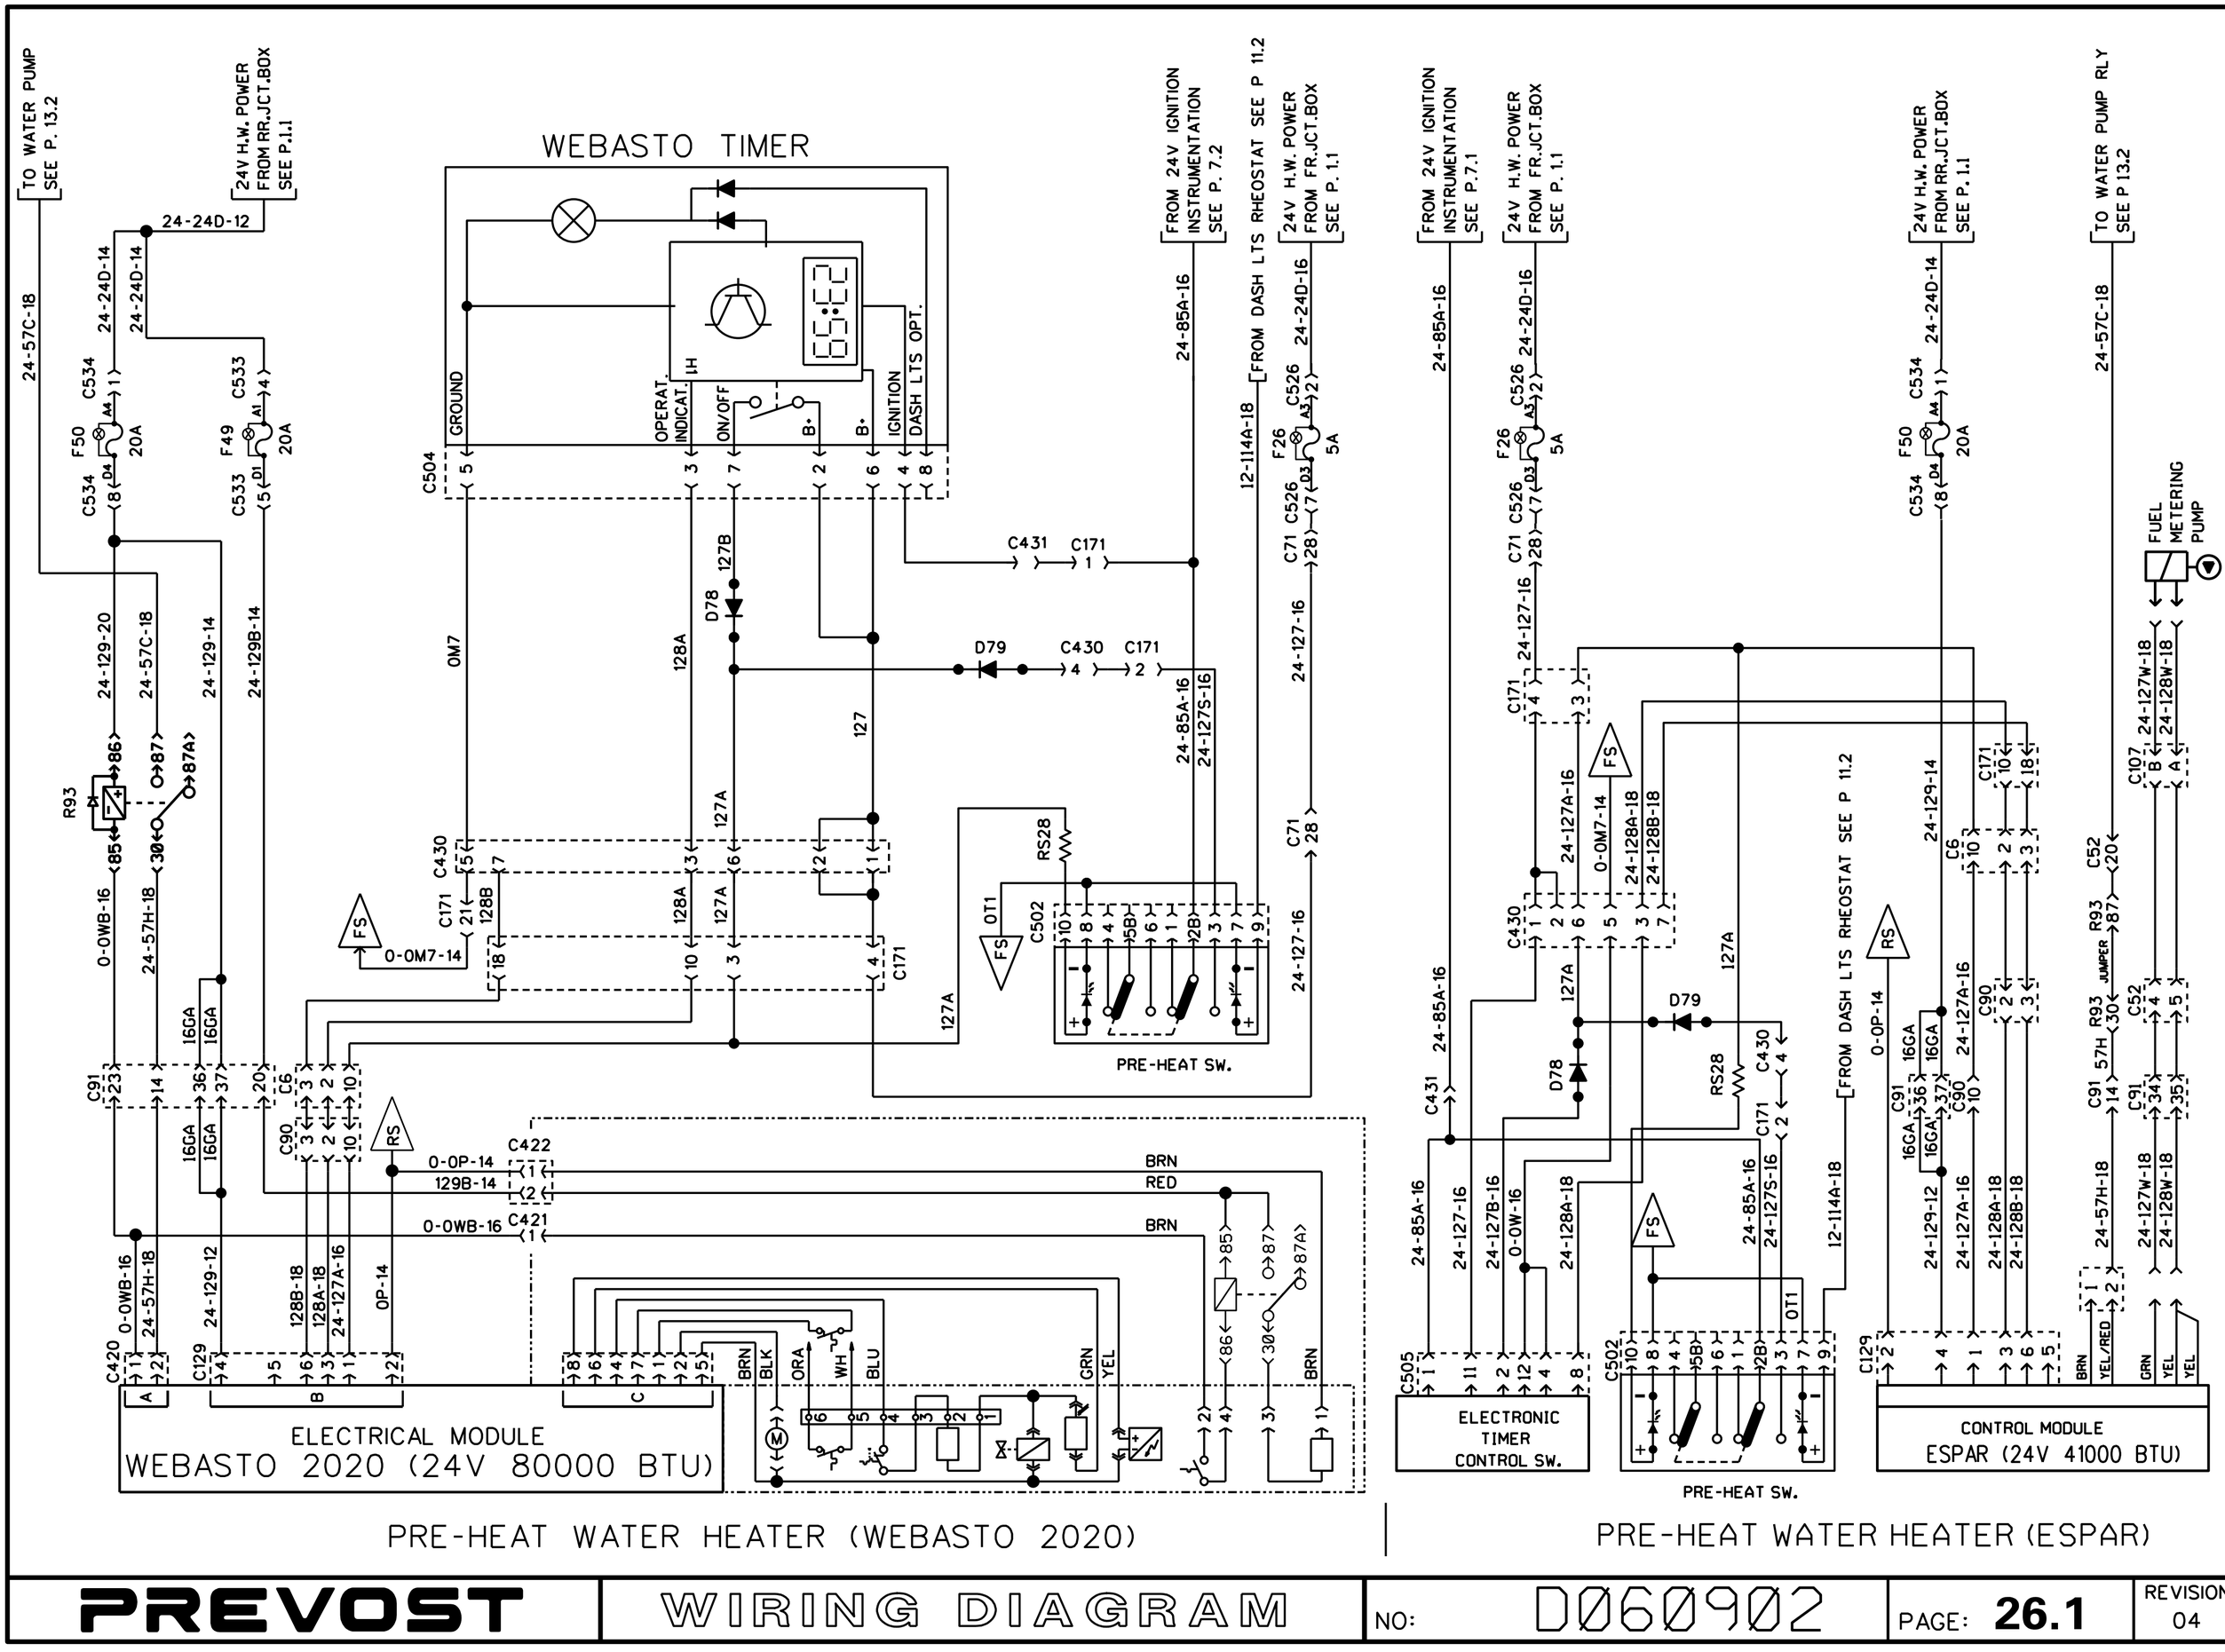

PRE-HEAT WATER HEATER (WEBASTO 2020)

PRE-HEAT WATER HEATER (ESPAR)

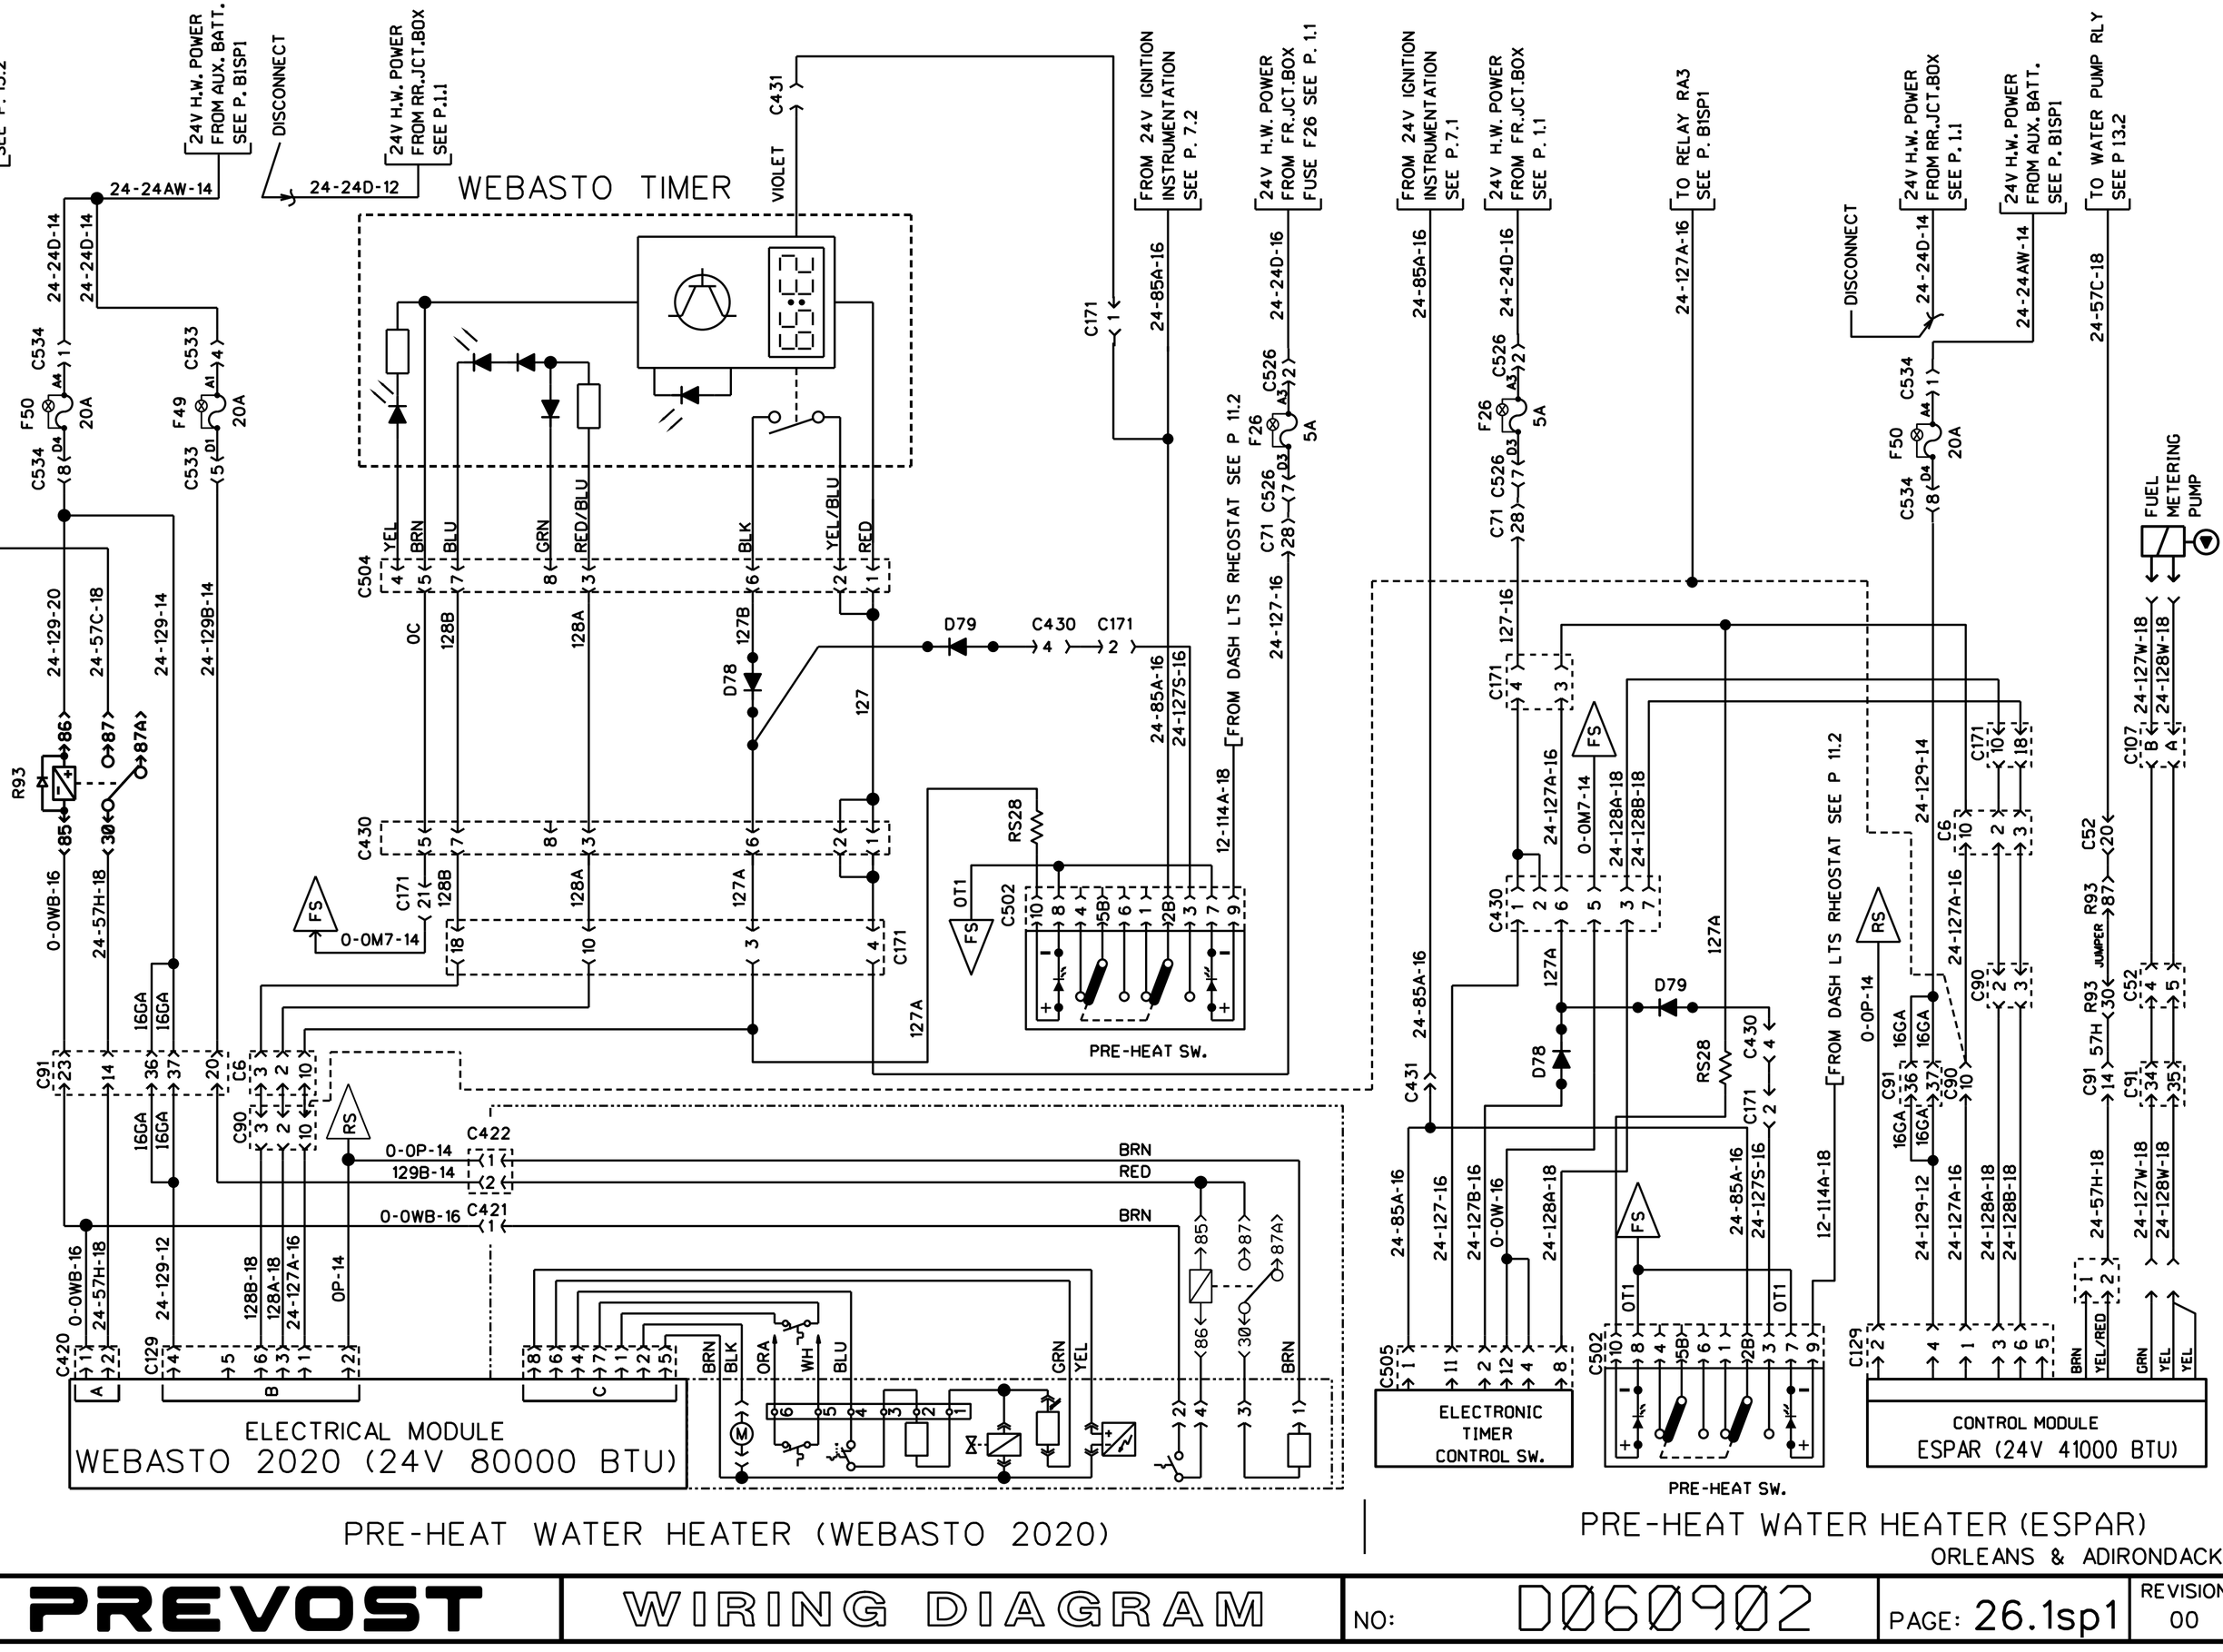
TO WATER PUMP
SEE P. 13.2
24-57C-18
24-24AW-14
24V H.W. POWER
FROM AUX. BATT.
SEE P. B1SP1
DISCONNECT
24-24D-12
24V H.W. POWER
FROM RR.JCT.BOX
SEE P.1.1
WEBASTO TIMER
VIOLET
C431
C171
24-85A-16
FROM 24V IGNITION
INSTRUMENTATION
SEE P. 7.2
24V H.W. POWER
FROM FR.JCT.BOX
FUSE F26 SEE P. 1.1
FROM DASH LTS RHEOSTAT SEE P 11.2
TO RELAY RA3
SEE P. B1SP1
24-127A-16
24V H.W. POWER
FROM RR.JCT.BOX
SEE P. 1.1
24V H.W. POWER
FROM AUX. BATT.
SEE P. B1SP1
TO WATER PUMP RLY
SEE P 13.2
24-57C-18
FUEL
METERING
PUMP
F50
20A
F49
20A
F26
5A
C534
C533
C526
C71
C504
YEL
BRN
BLU
GRN
RED/BLU
BLK
YEL/BLU
RED
OC
128B
128A
127B
127
127A
D78
D79
C430
C171
24-85A-16
24-127S-16
12-114A-18
RS28
OT1
C502
PRE-HEAT SW.
R93
0-0WB-16
24-57H-18
24-129-20
24-57C-18
24-129-14
24-129B-14
24-24D-14
16GA
C91
C6
C90
C422
C421
0-0P-14
129B-14
BRN
RED
C420
C129
24-129-12
128B-18
128A-18
24-127A-16
0P-14
ELECTRICAL MODULE
WEBASTO 2020 (24V 80000 BTU)
BRN
BLK
ORA
WH
BLU
GRN
YEL
0-0M7-14
24-127-16
24-127B-16
0-0W-16
24-128A-18
24-128B-18
C505
ELECTRONIC
TIMER
CONTROL SW.
0-0P-14
JUMPER
C52
57H
24-129-14
24-127W-18
24-128W-18
CONTROL MODULE
ESPAR (24V 41000 BTU)
PRE-HEAT WATER HEATER (WEBASTO 2020)
PRE-HEAT WATER HEATER (ESPAR)
ORLEANS & ADIRONDACK

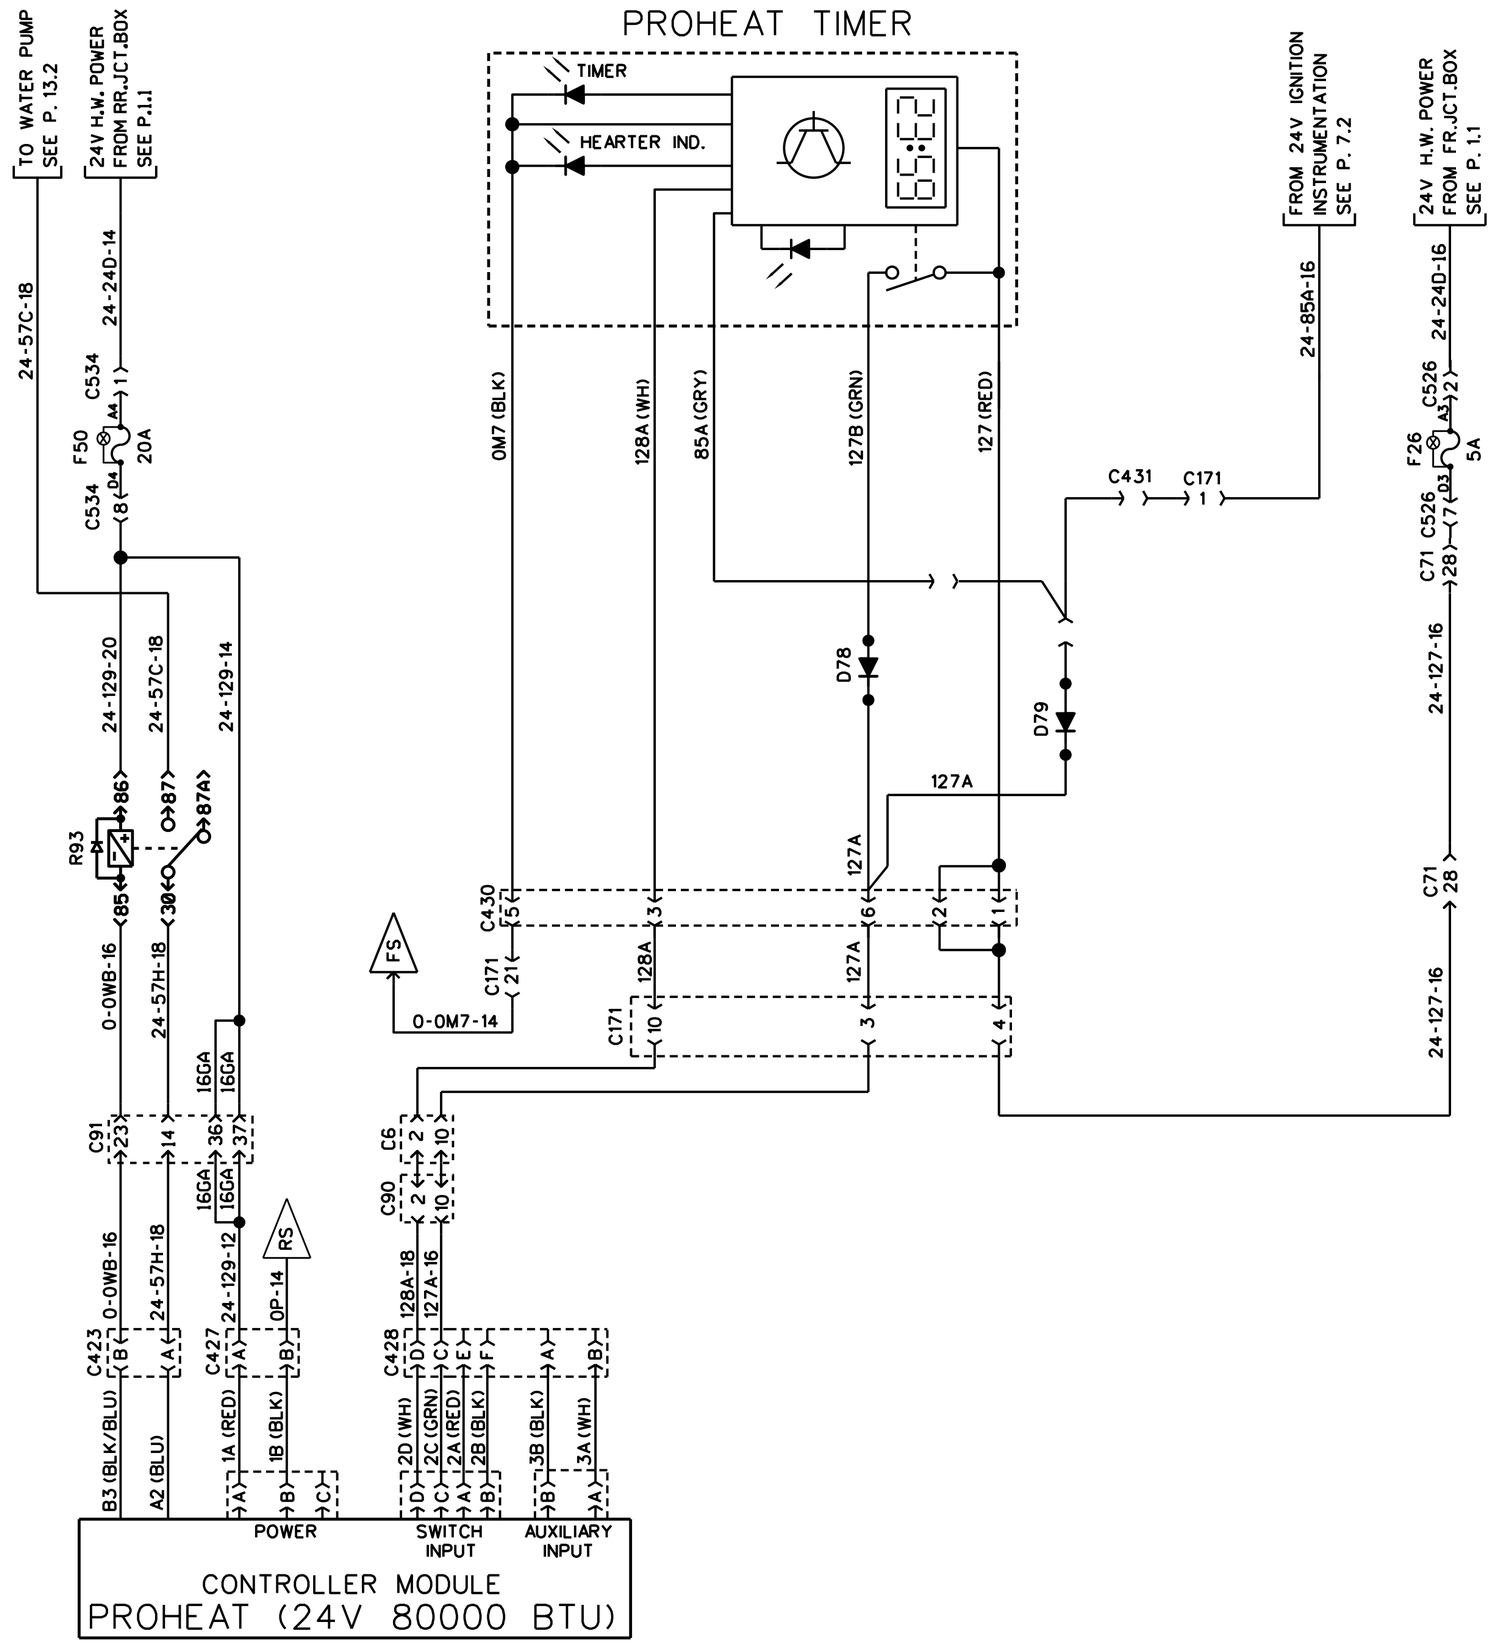

PRE-HEAT WATER HEATER (PROHEAT)

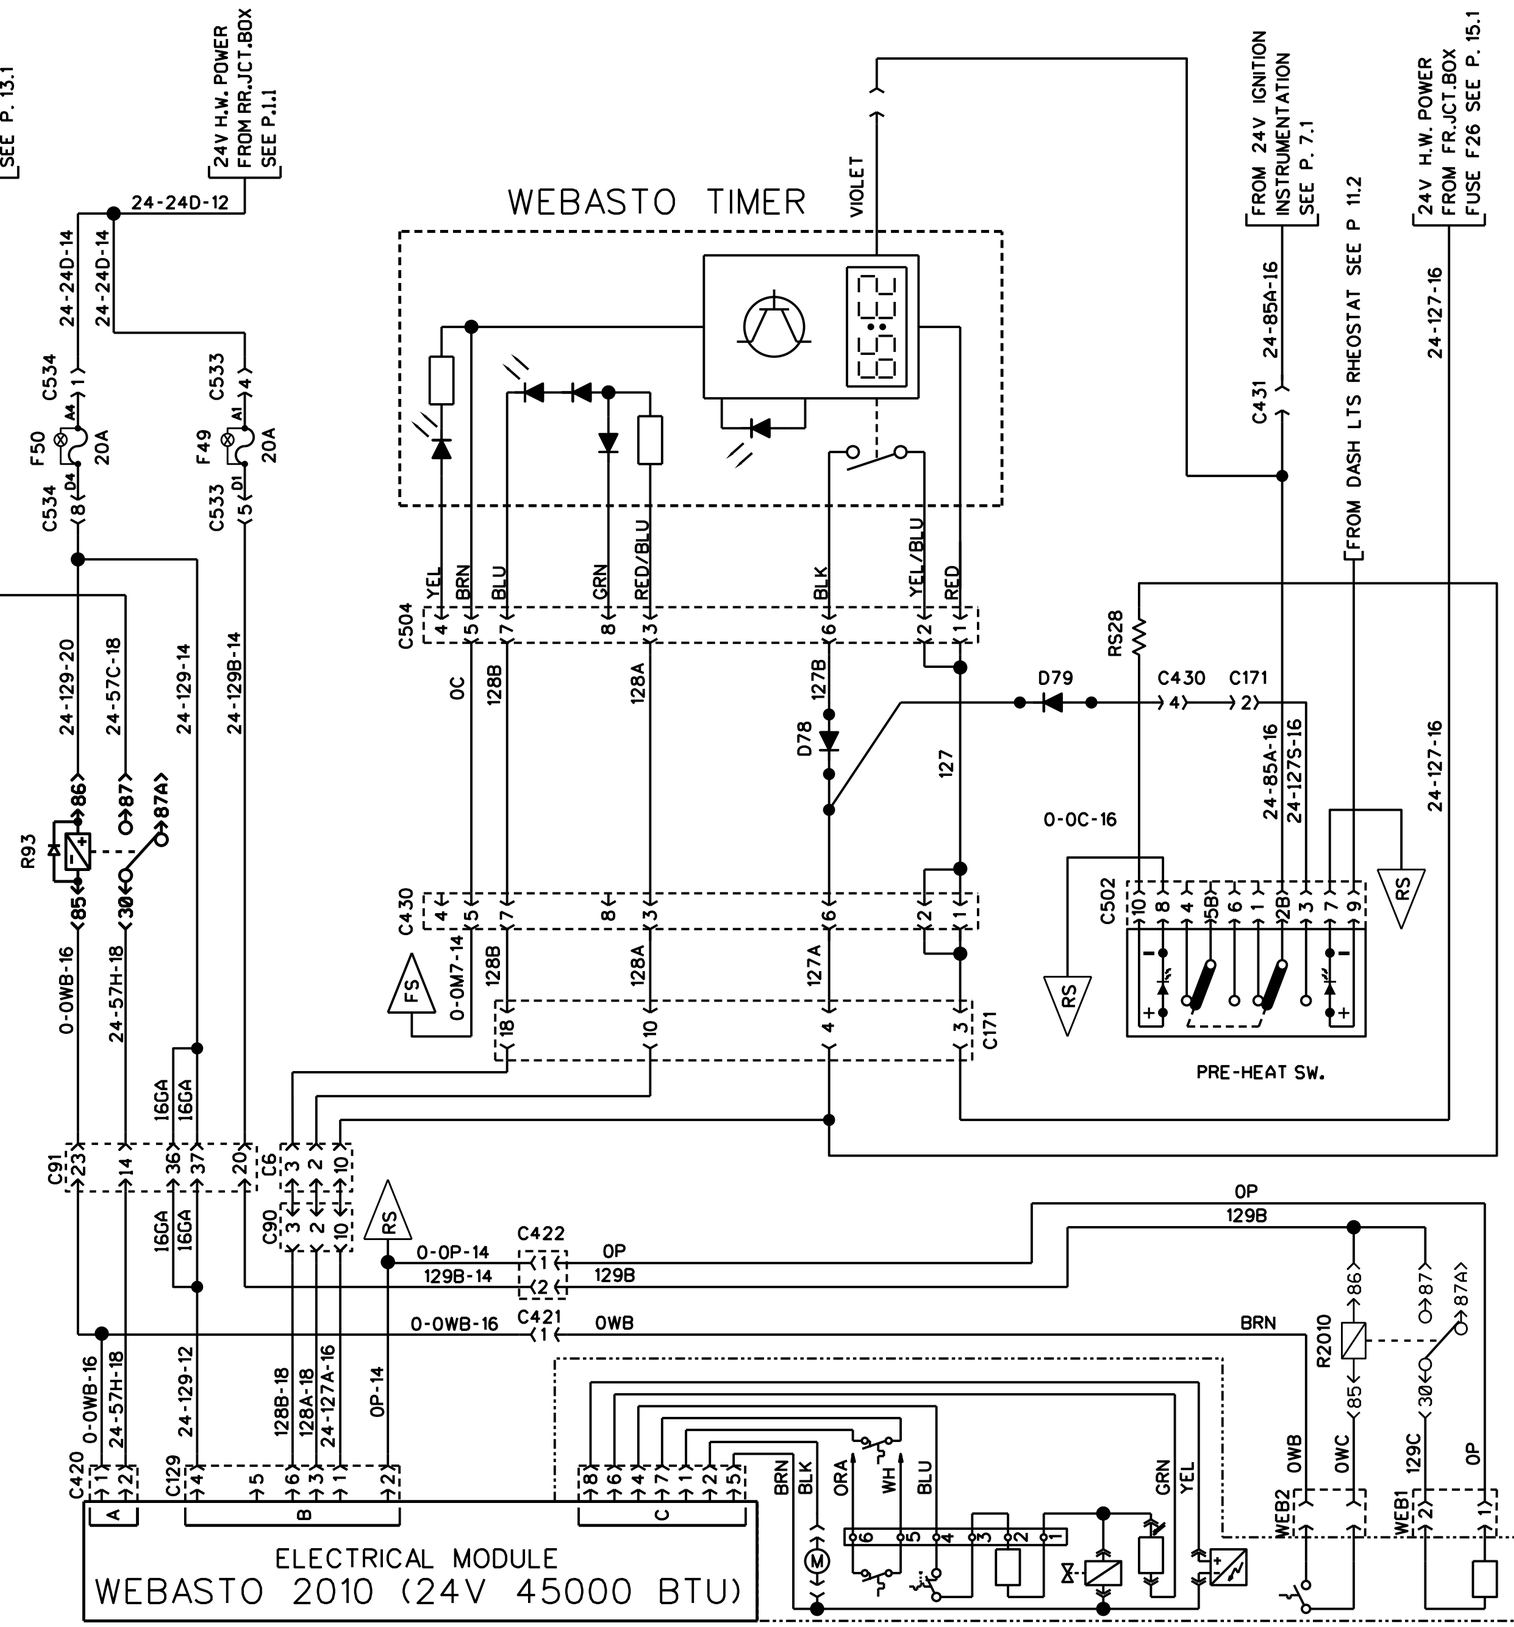

PRE-HEAT WATER HEATER (WEBASTO 2010)

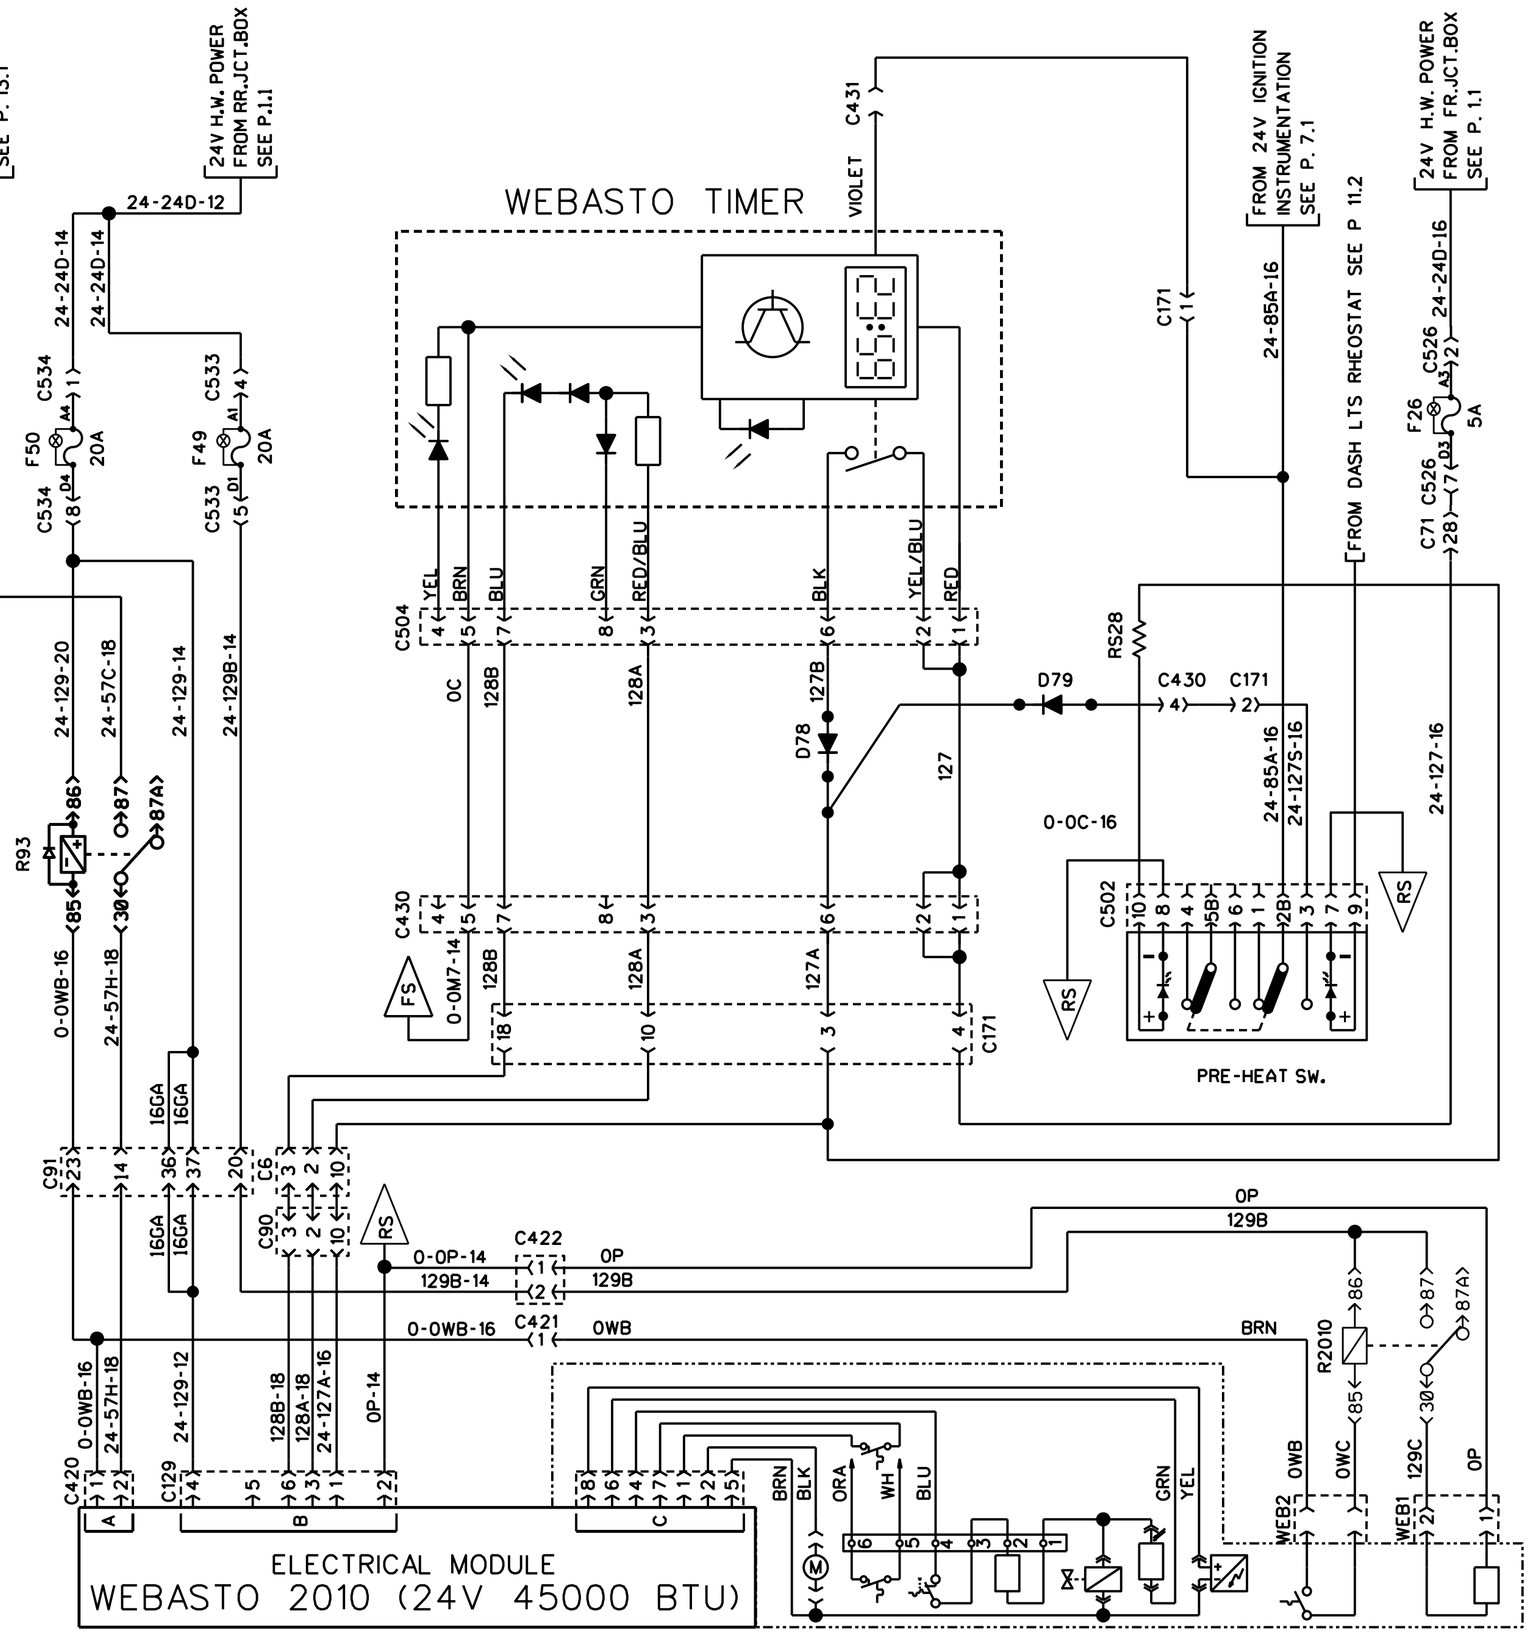

PRE-HEAT WATER HEATER (WEBASTO 2010)

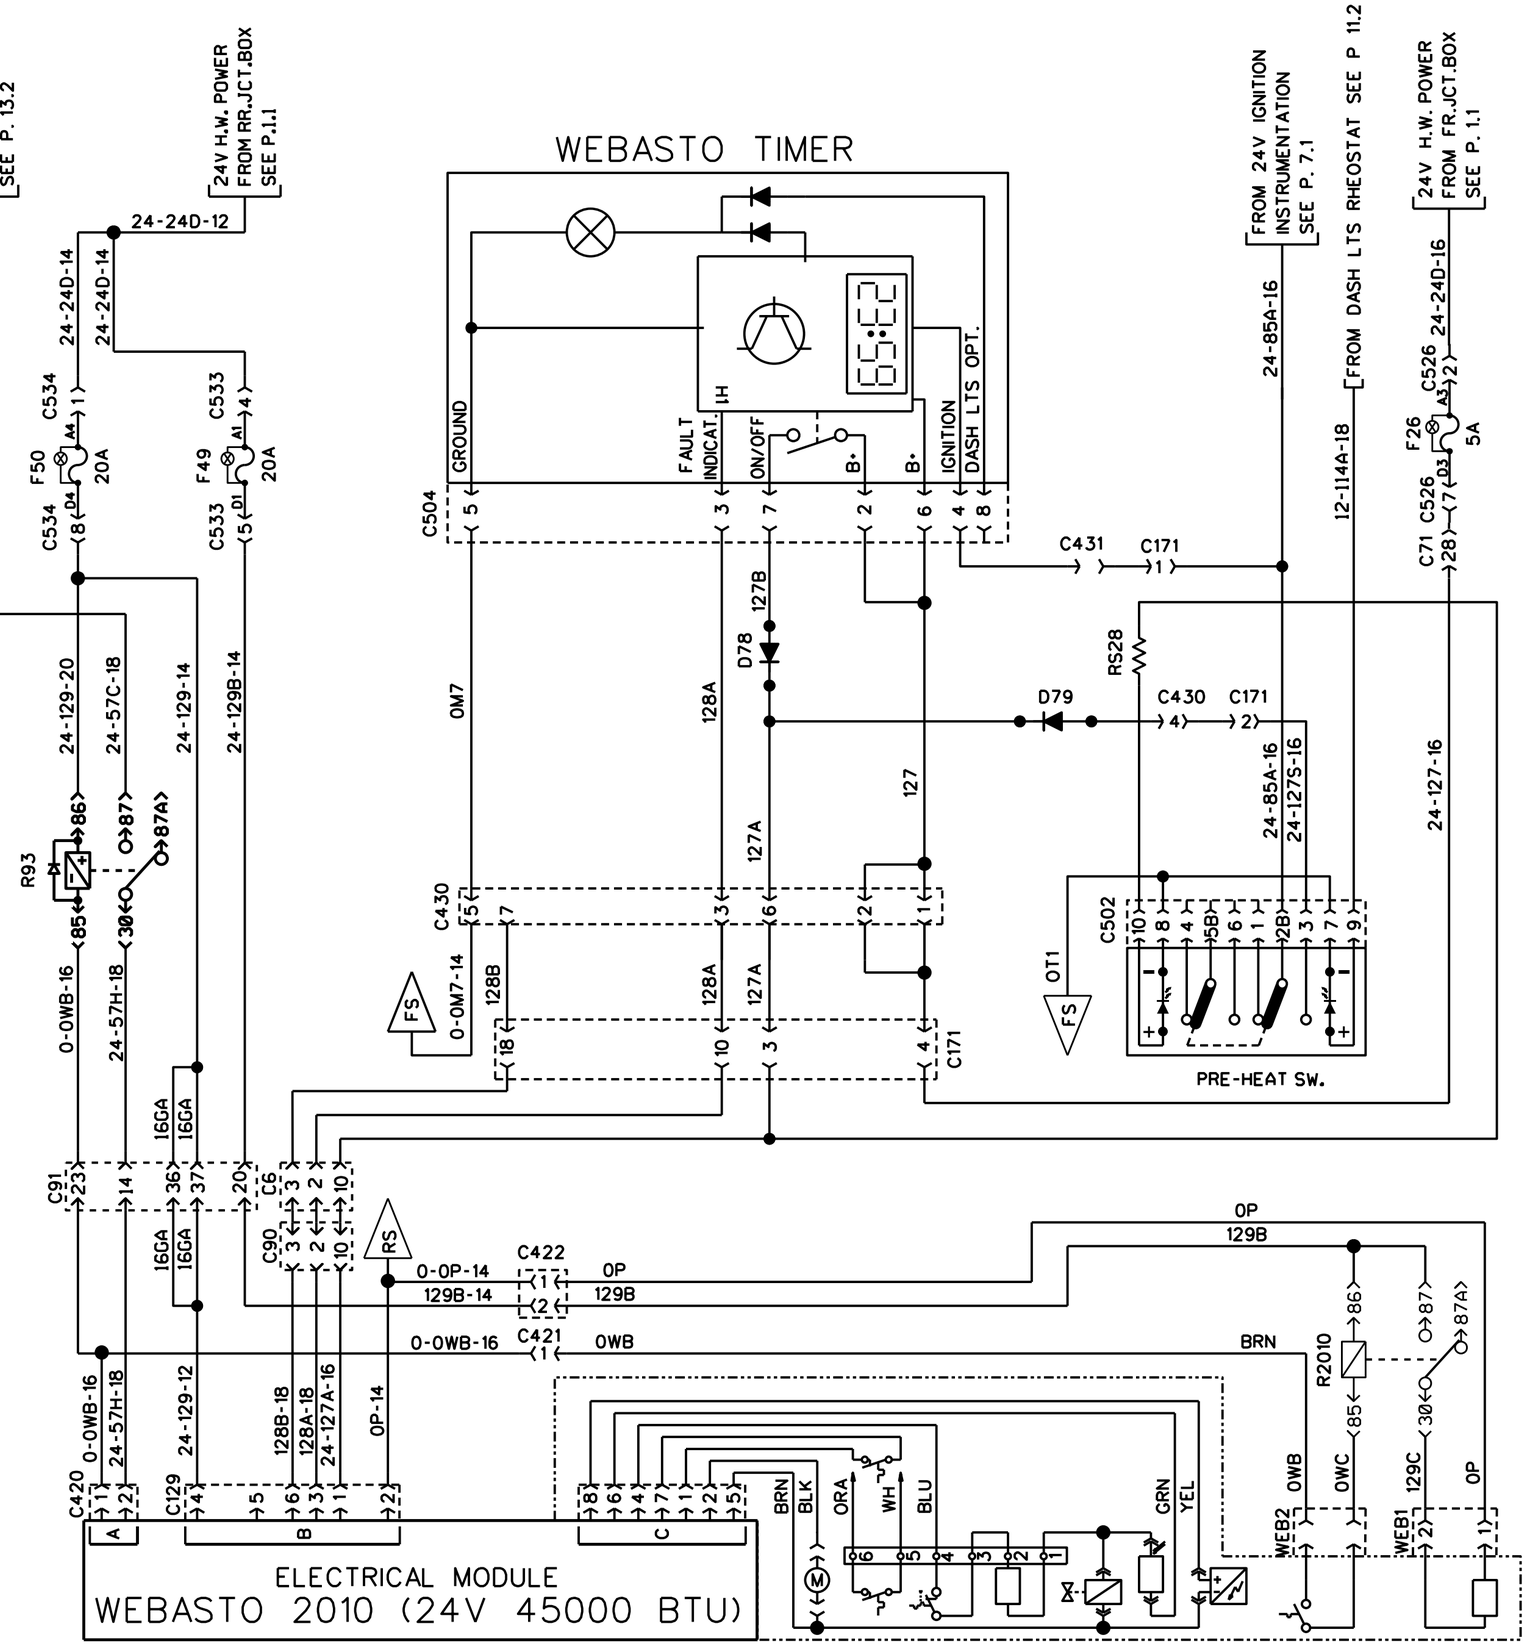

PRE-HEAT WATER HEATER (WEBASTO 2010)

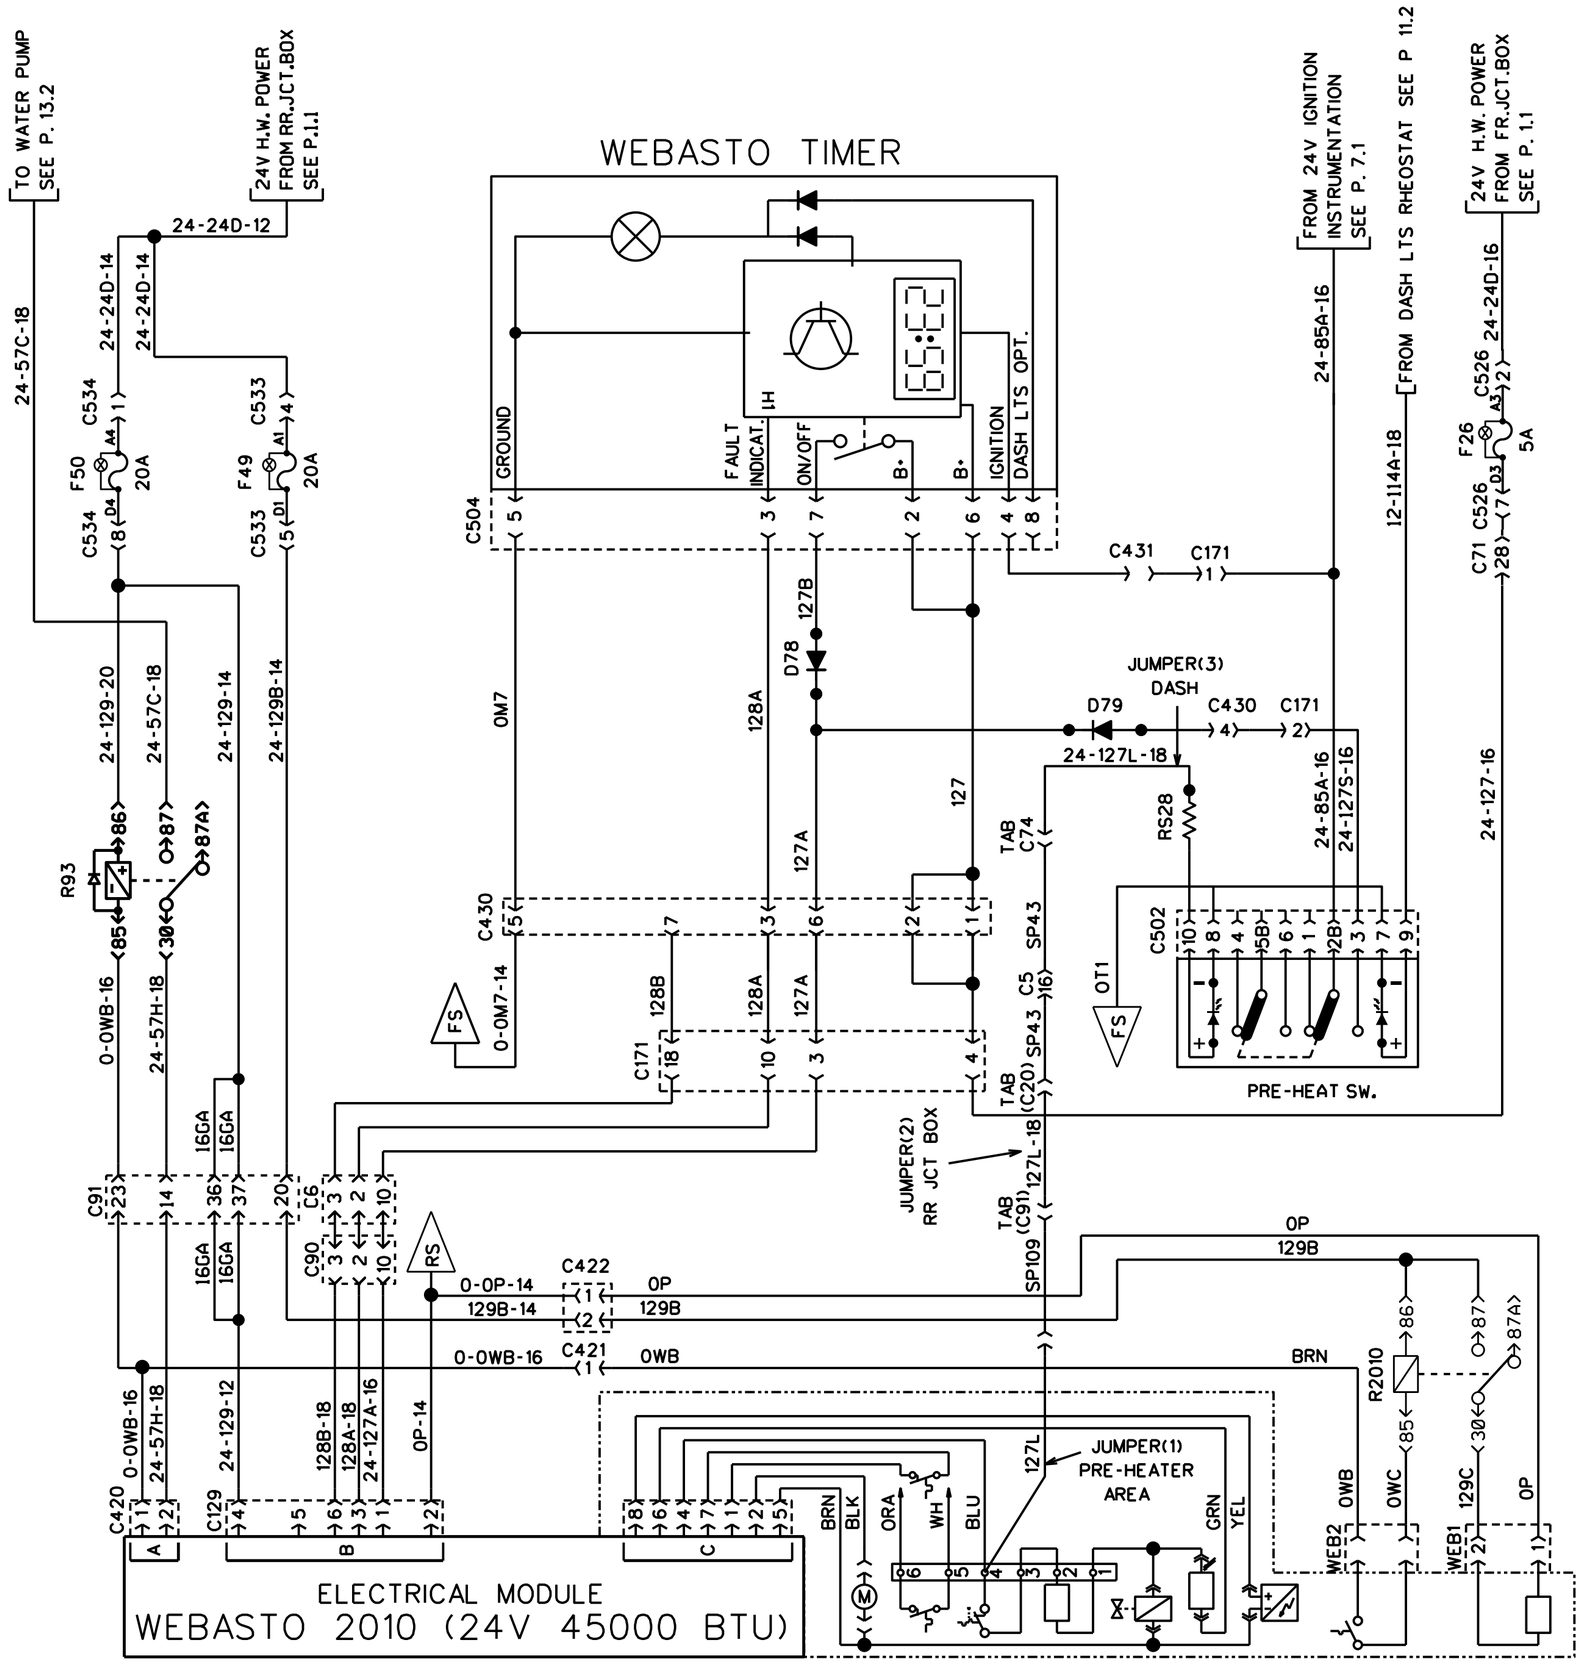

PRE-HEAT WATER HEATER (WEBASTO 2010)

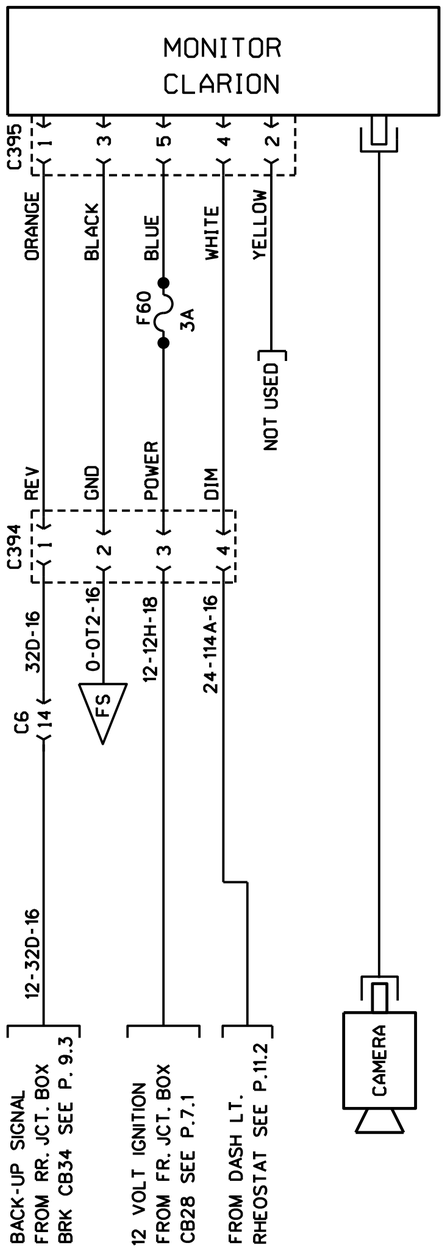

BACK-UP MONITOR (CLARION)

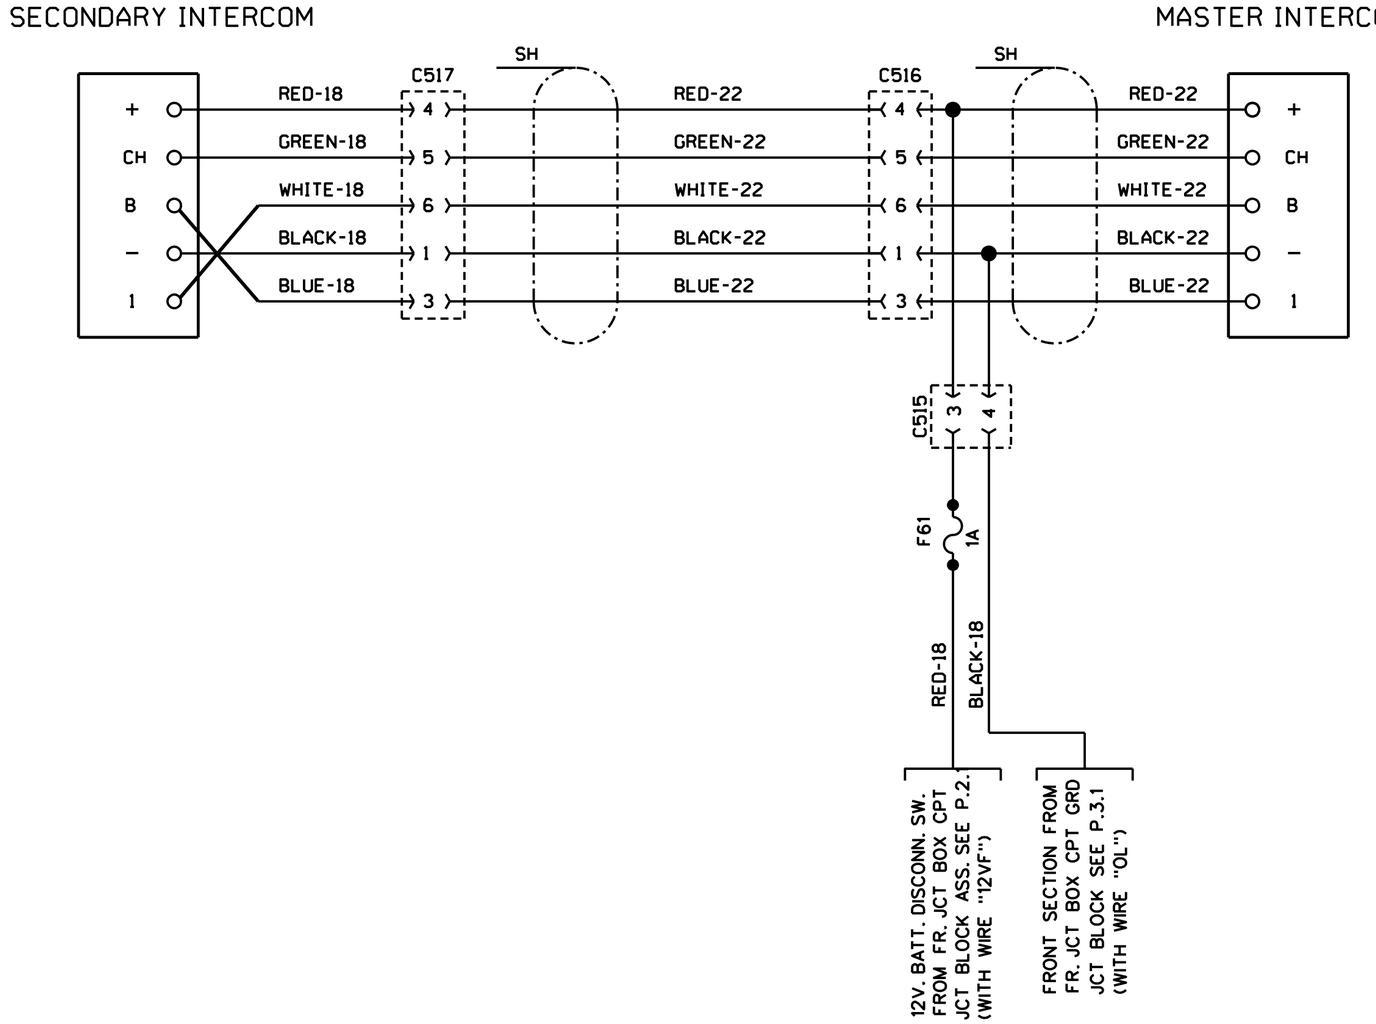

INTERCOM

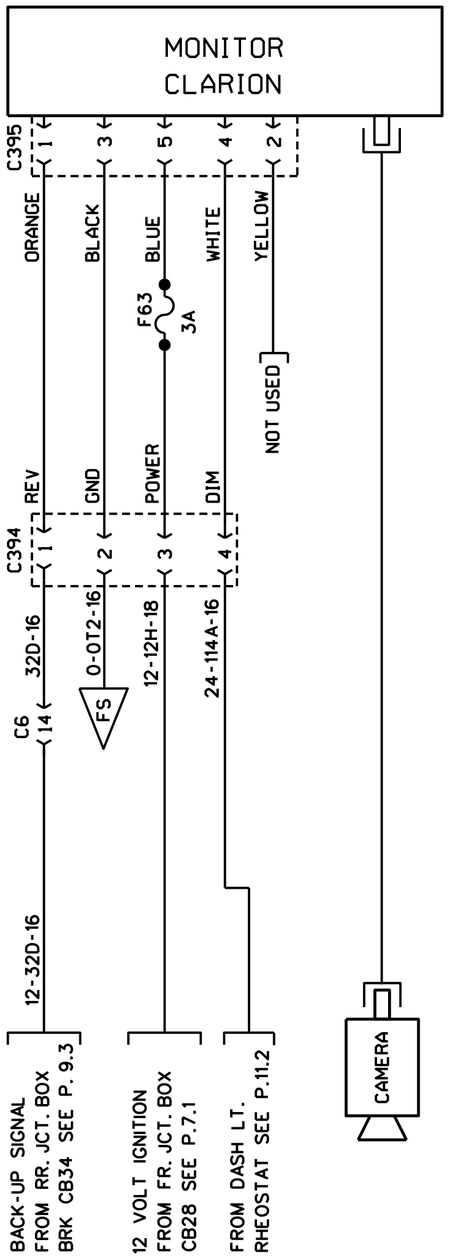

BACK-UP MONITOR (CLARION)

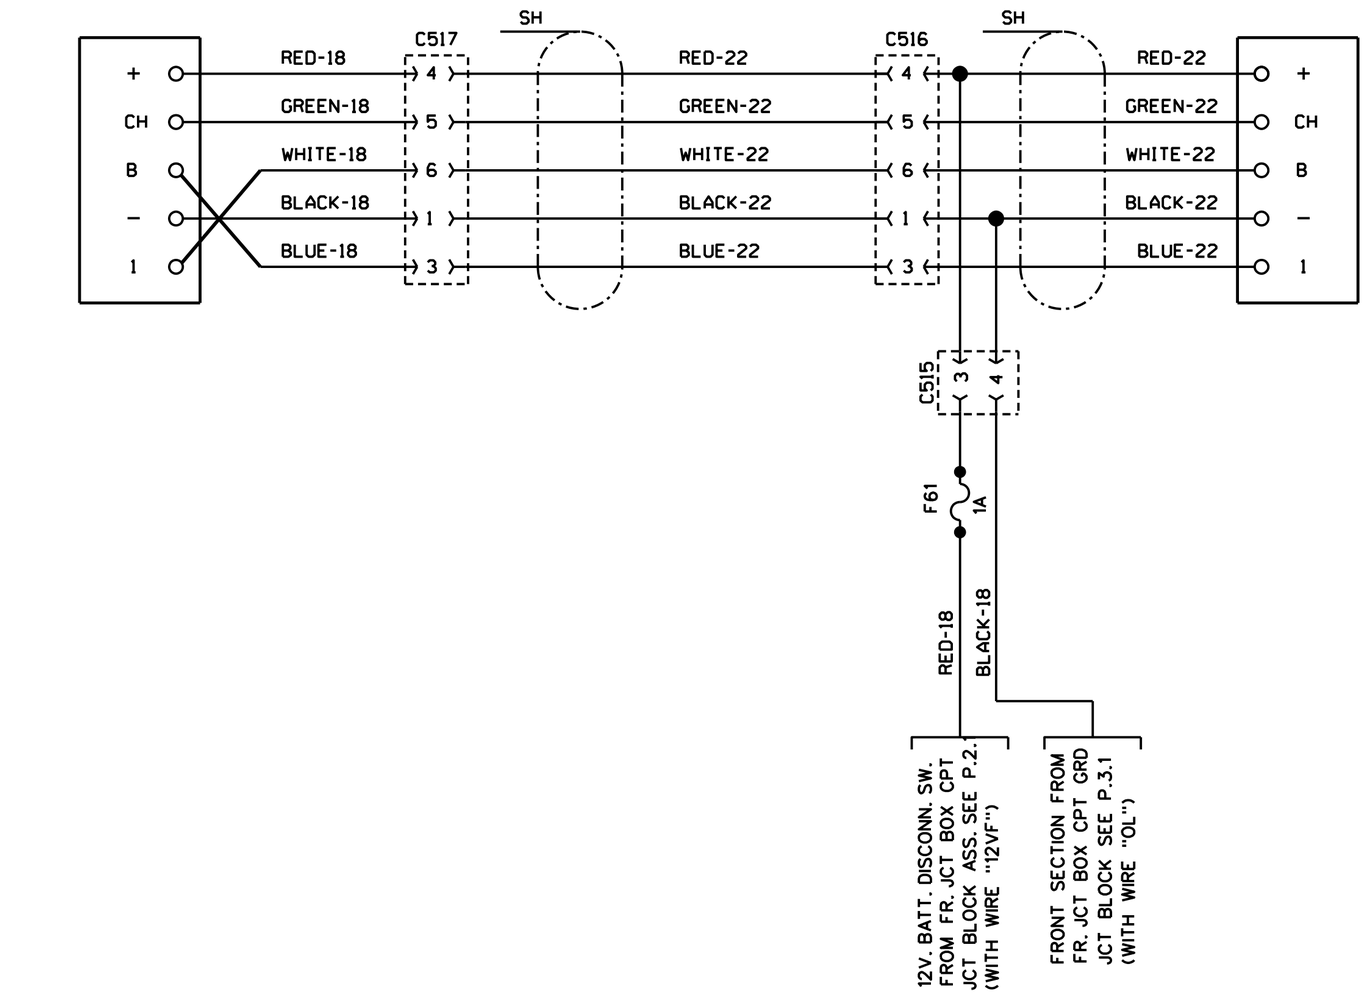

INTERCOM

PREVOST | WIRING DIAGRAM | NO: D060902 | PAGE: 28.1 | REVISION 00

TELL TALE LIGHT MODULES

TELL TALE LIGHTS MODULE

REMOTE TEST SW.

C548
- 2B — 0-00A-18 — FBG
- 3 — RT-18
- 7 — 0-0T1-18 — FS
- 9 — 0@12-114A-18 — FROM DASH LTS RHEOSTAT SEE P 11.2

C573
- TEMP. EXT. 1 — 5 — 180-20
- TEMP. EXT. 2 — 6 — 180A-20
- TEMP. EXT. 3 — 7 — 180B-20
- TEMP. EXT. 4 — 8 — 180C-20

  → OUTSIDE TEMPERATURE SIGNAL FROM HVAC DASH MODULE C540 (13,3,14,4) SEE P 13.1

C570
- SIGNAL_GND — 1 — 0-00A-18 — FBG
- TEST IN — 2 — RT-18
- CHS GRD — 3 — 0-0T2-18 — FS
- 12V IGN — 4 — 12-12H-18 → 12V IGNITION FROM CB28 SEE PAGE 7.1
- 5
- 12V PWR — 6 — 12-12DT-18 → C71 → 12 → CB130 → 6A → 12-12K-14 → 12V POWER FROM FJB SEE PAGE 2.1

  → TO IDENTIFICATION LED INSIDE SWITCH SEE PAGES

C571
- GND — 1 — 0-0CS-18 → MASTER SW. ON SIGNAL FROM PAGE 1.1
- DC+ — 2 → OPT. 3
- DC+ — 3 — 24-126H-16 → KNEELING SIGNAL FROM PAGE 18.1
- GND — 4 — 0-93-20 → BATTERY LO/HI SIGNAL FROM PAGE 4.1
- DC+ — 5 — 24-25A-18 → NOT GEN. (1) SIGNAL FROM PAGE 4.1
- DC+ — 6 — 24-28L-18 → LO A/C PRESS SIGNAL FROM PAGE 13.1
- DC+ — 7 — 24-28H-18 → HI A/C PRESS SIGNAL FROM PAGE 13.1
- GND — 8 — 0-540-20 → SIGNAL CRUISE ENABLE PAGE 5.1
- 9 → N.C.
- GND — 10 — OPT. 2
- GND — 11 — 0-115W-18 → DO NOT SHIFT SIGNAL FROM PAGE 6.1
- GND — 12 — 0-123B-18 → FIRE ALARM SIGNAL FROM PAGE 7.1
- GND — 13 — 0-105W-18 → TRANSMISSION HOT OIL SIGNAL FROM PAGE 19.1
- GND — 14 → OPT. 4
- DC+ — 15 — 24-25K-18 → NOT GEN. (2) SIGNAL FROM PAGE 4.2
- GND — 16 — 0-92-18 → BATTERY MONITOR BALANCE SIGNAL FROM PAGE 4.1
- GND — 17 — 0-76C-18 → LO FUEL SIGNAL FROM PAGE 7.1
- DC+ — 18 — 12-197A-18 → FUEL WATER FILTER SIGNAL FROM PAGE 8.1
- DC+ — 19 → OPT.5
- DC+ — 20 — 12-23-18 → RH FLASHER SIGNAL FROM PAGE 9.2

C572
- DC+ — 1 — 24-301-16 → LIFT SYSTEM POWER ON SIGNAL FROM PAGE 25.1
- DC+ — 2 — 24-302-20 → W.C.L. DOOR AJAR SIGNAL FROM PAGE 25.1
- DC+ — 3 — 24-62-16 → LAVATORY OCCUPED SIGNAL FROM PAGE 17.1
- GND — 4 — 0-170C-18 → LUGGAGE DOOR UNLOCK SIGNAL FROM PAGE 19.1
- DC+ — 5 → OPT. 1
- GND — 6 — 0-85Y-18 → ABS SIGNAL FROM PAGE 21.1
- GND — 7 — 0-45W-20 → A/C DOOR AJAR SIGNAL FROM PAGE 13.2
- GND — 8 — 0-419-18 → CHECK ENGINE SIGNAL FROM PAGE 5.1
- DC+ — 9 — 24-82-16 → STOP LTS. SIGNAL FROM PAGE 9.3
- DC+ — 10 — 12-21-18 → LH FLASHER SIGNAL FROM PAGE 9.2
- GND — 11 — 0-260-18 → WINDOW AJAR SIGNAL FROM PAGE P. 7.2
- GND — 12 — 0-10R-20 → LUGGAGE DOOR AJAR SIGNAL FROM PAGE 11.1
- DC+ — 13 — 12-9B-20 → ENGINE DOOR AJAR SIGNAL FROM PAGE 11.1
- GND — 14 — 0-181-20 → OUTSIDE FREESE POINT SIGNAL FROM P. 13.1
- GND — 15 — 0-160-16 → TAG AXLE SIGNAL FROM PAGE 7.1
- DC+ — 16 — 24-91B-16 → PARKING BRAKE SIGNAL FROM PAGE 8.1
- GND — 17 — 0-509-18 → STOP ENGINE SIGNAL FROM PAGE 5.1
- DC+ — 18 — 24-55-16 → HI BEAM SIGNAL FROM PAGE 9.2

TELL TALE LIGHT MODULES

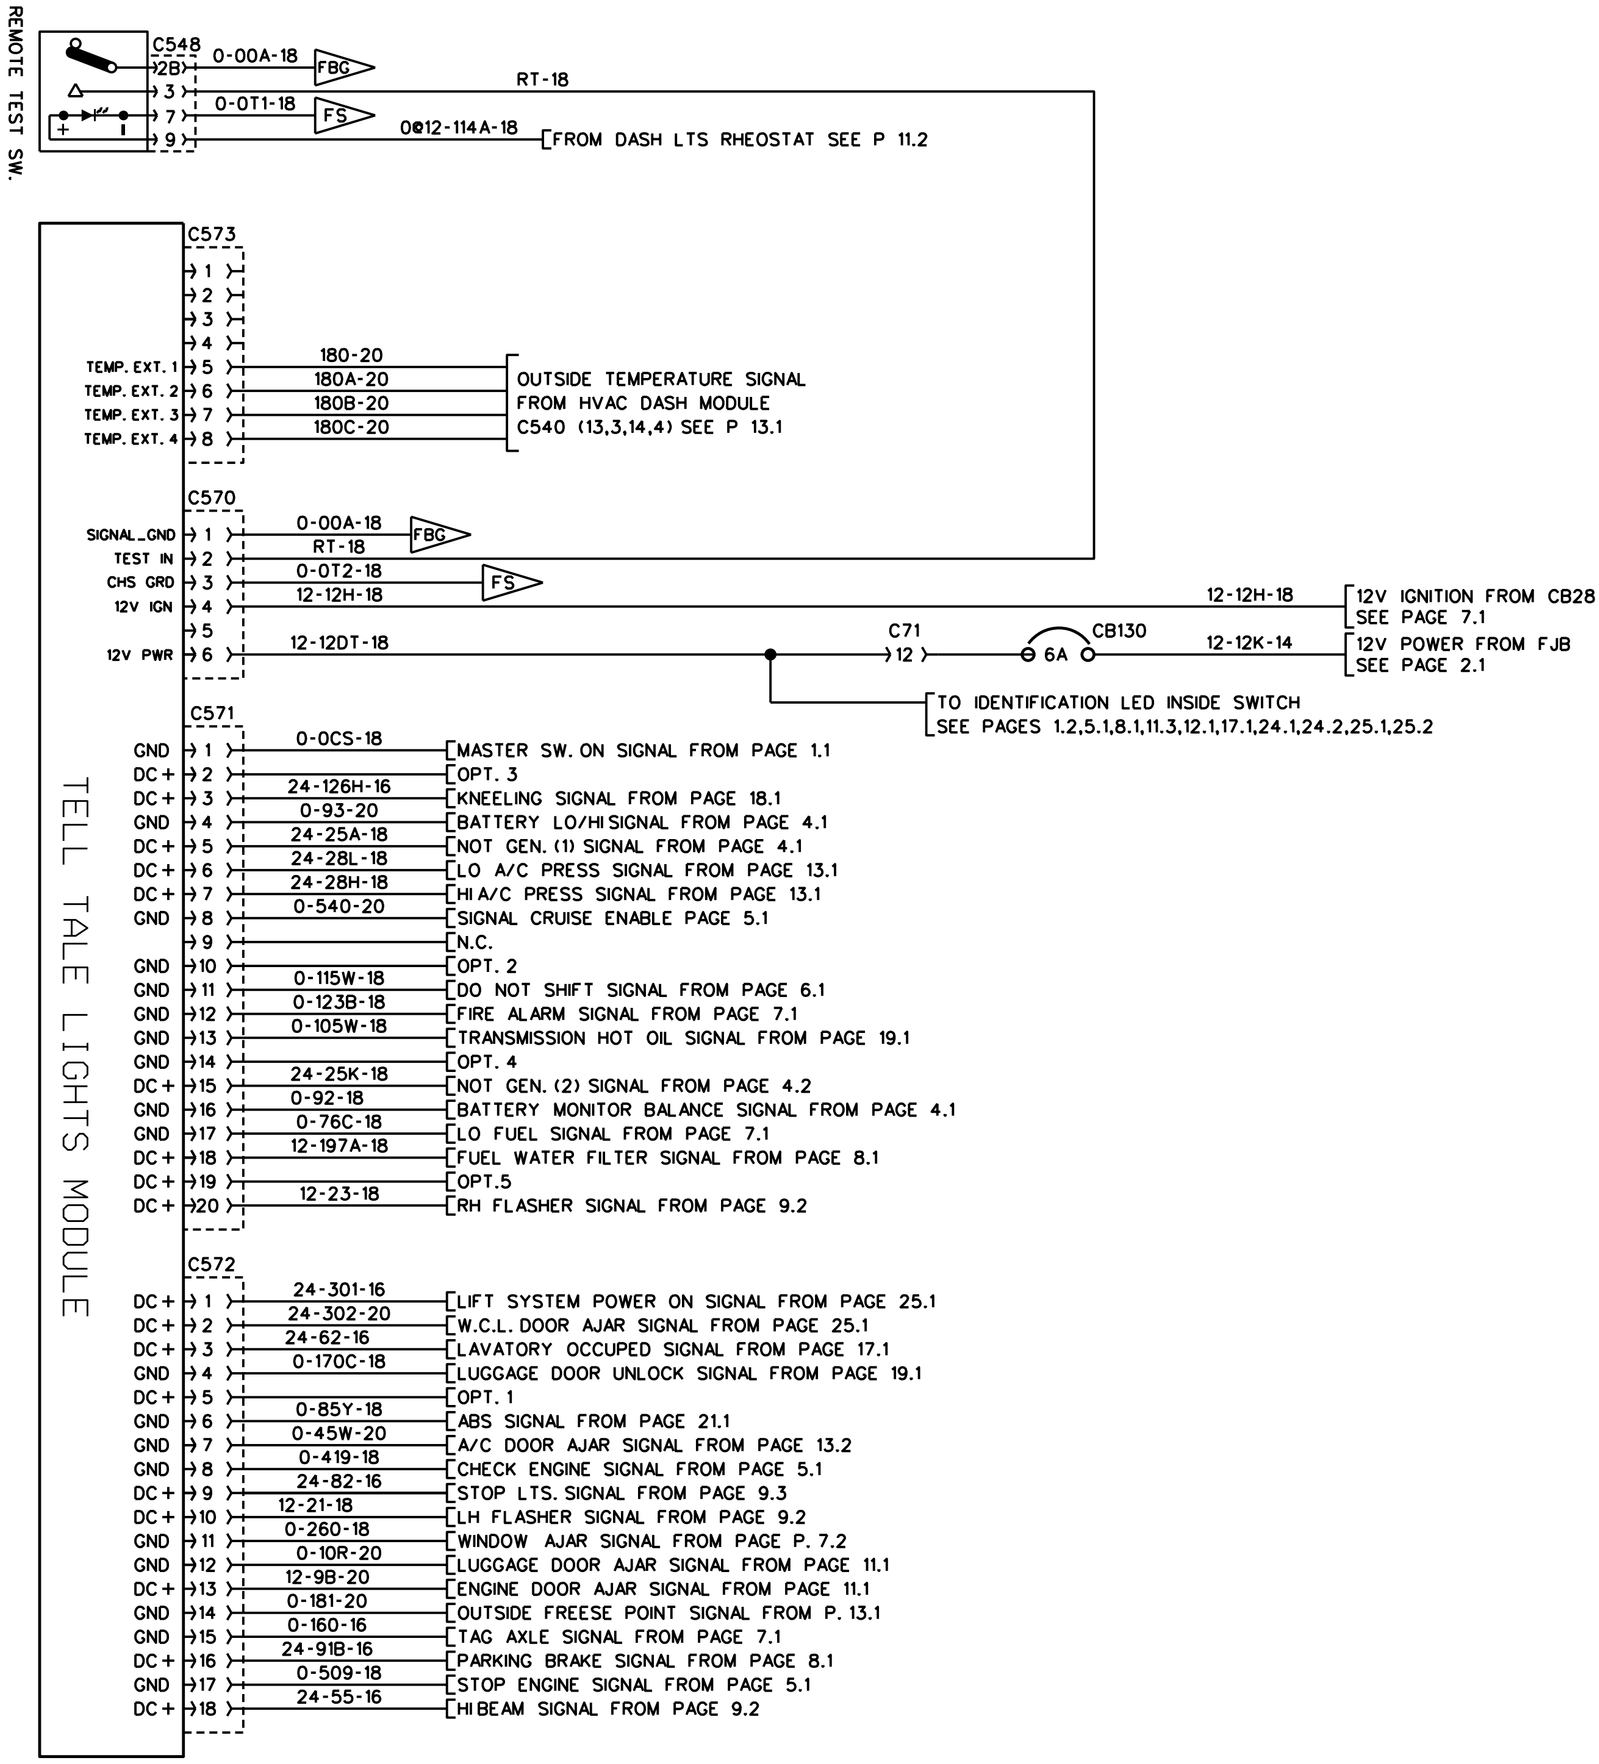

TELL TALE LIGHT MODULES

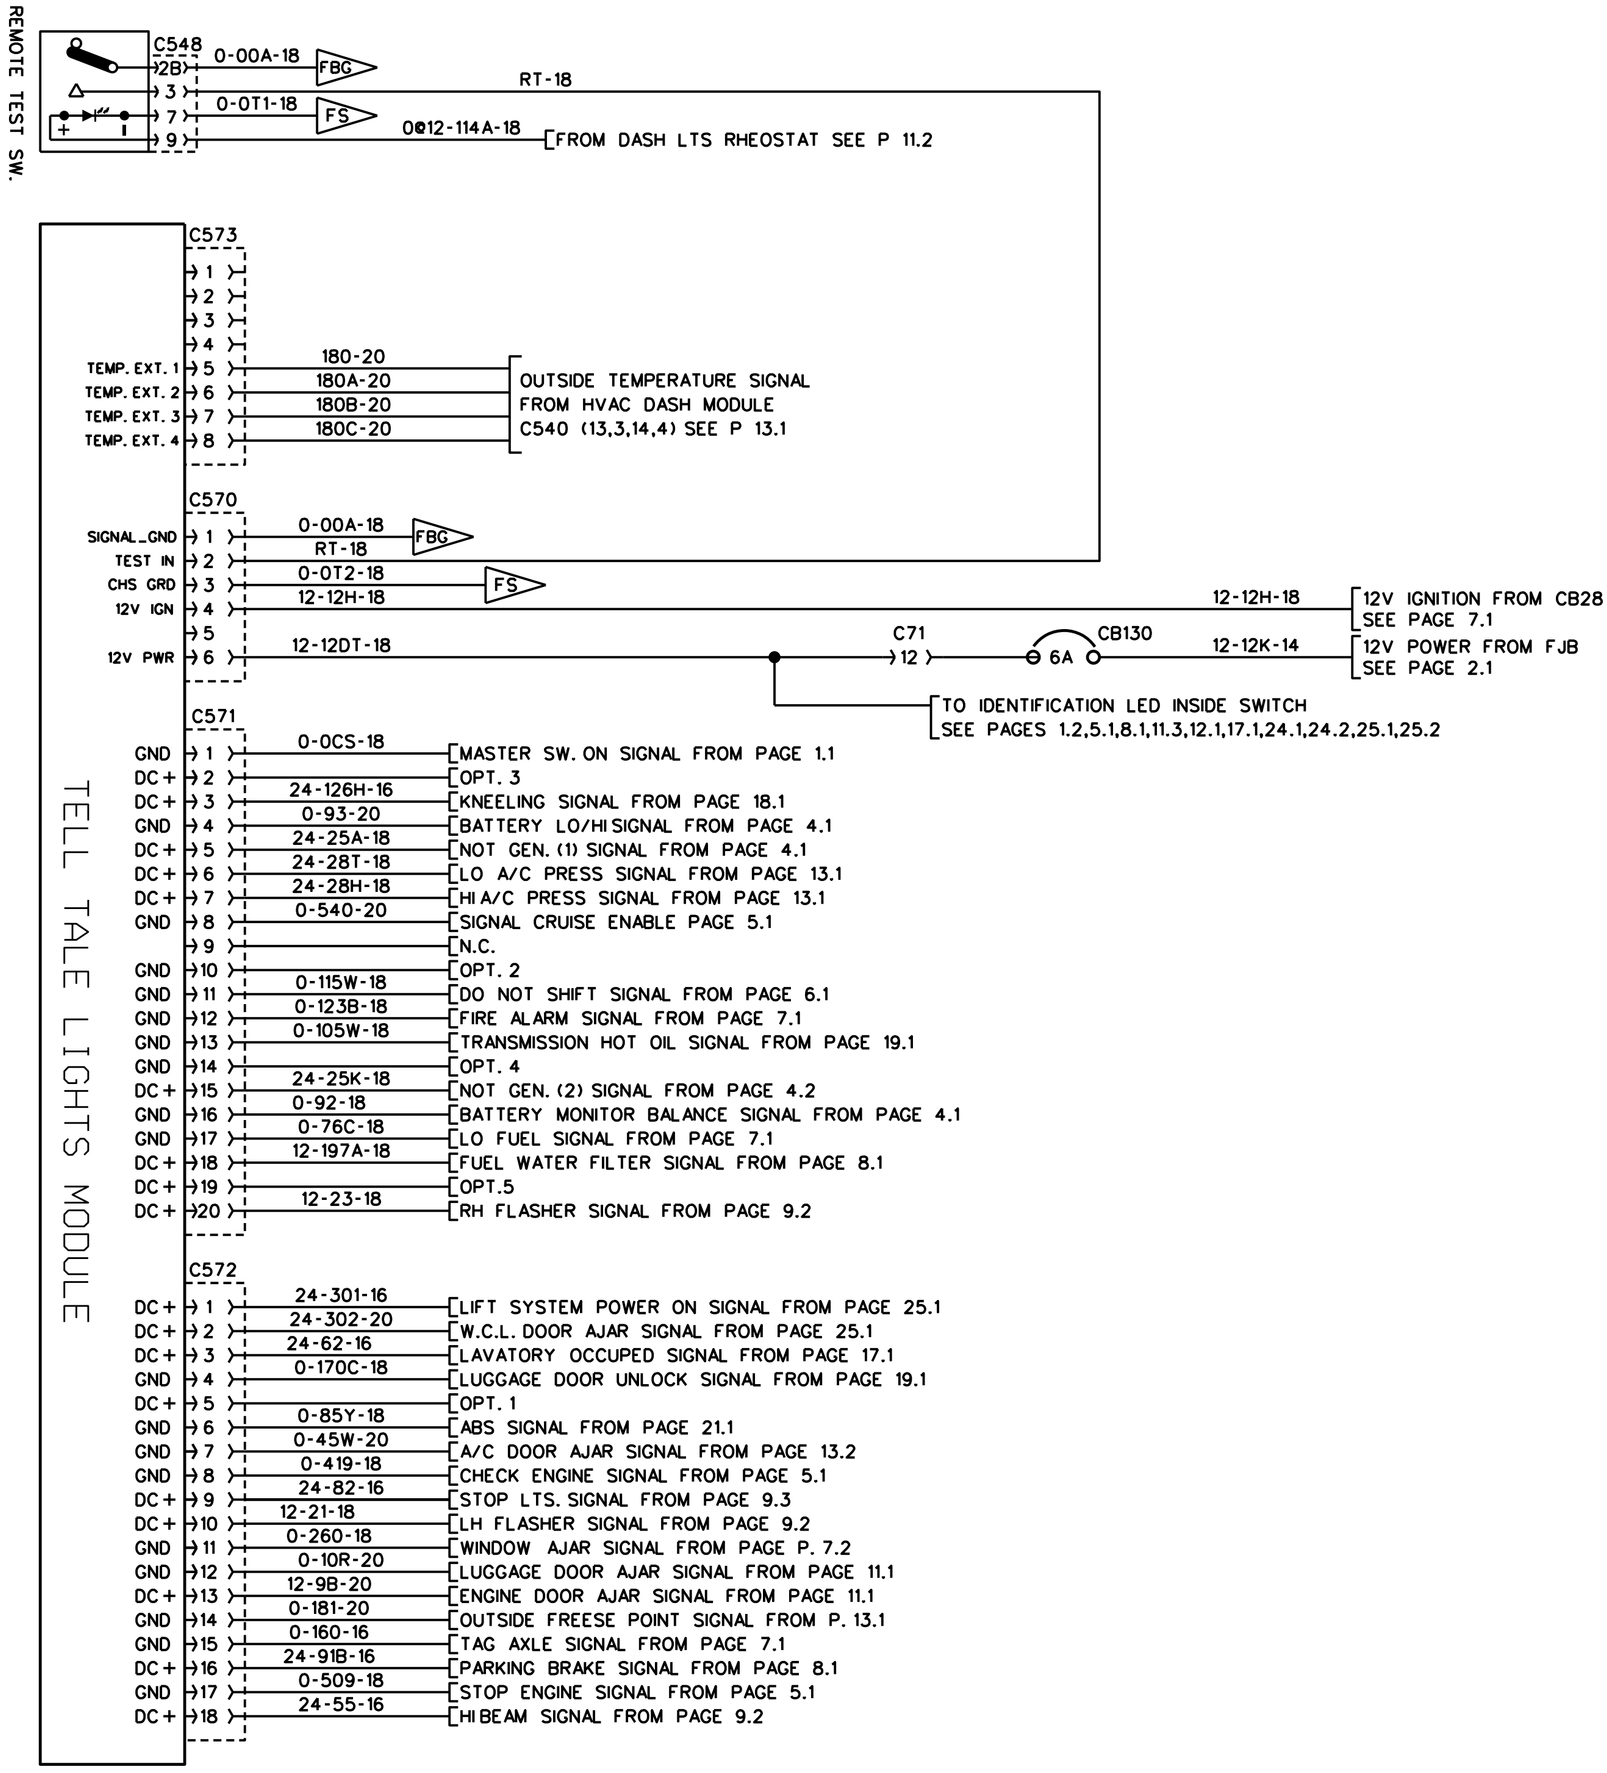

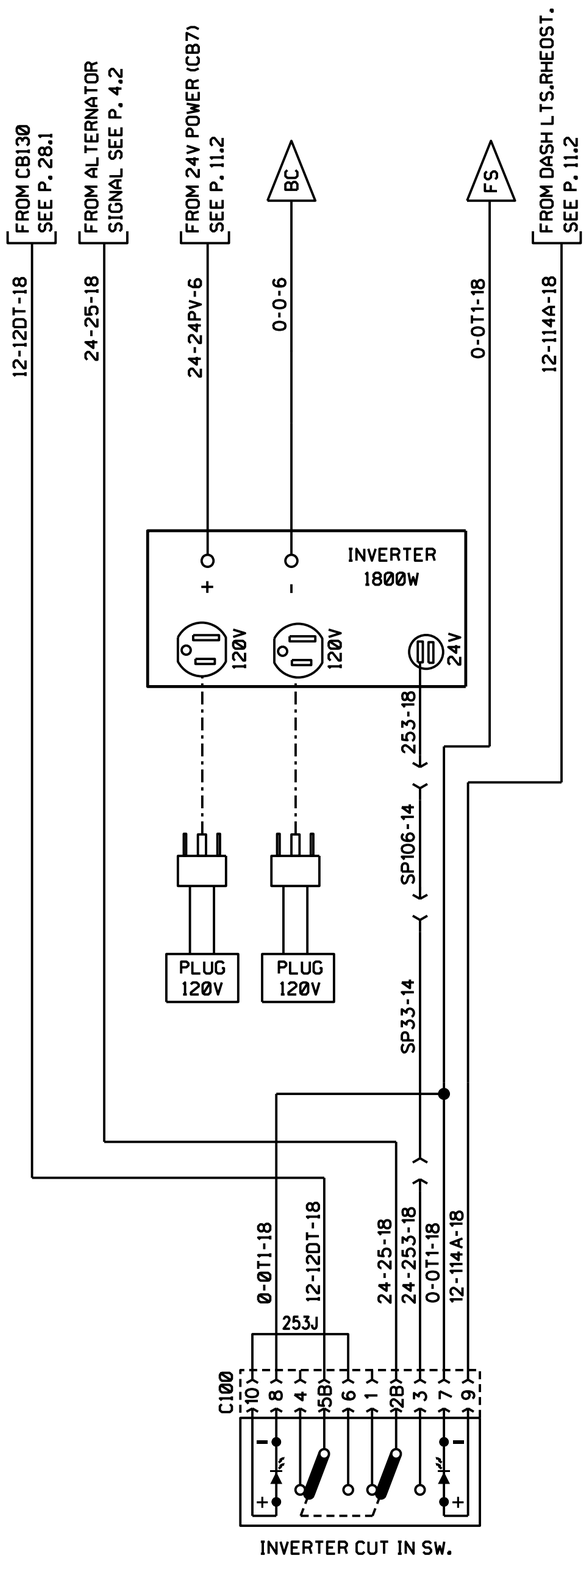

PLUG 120 VOLT

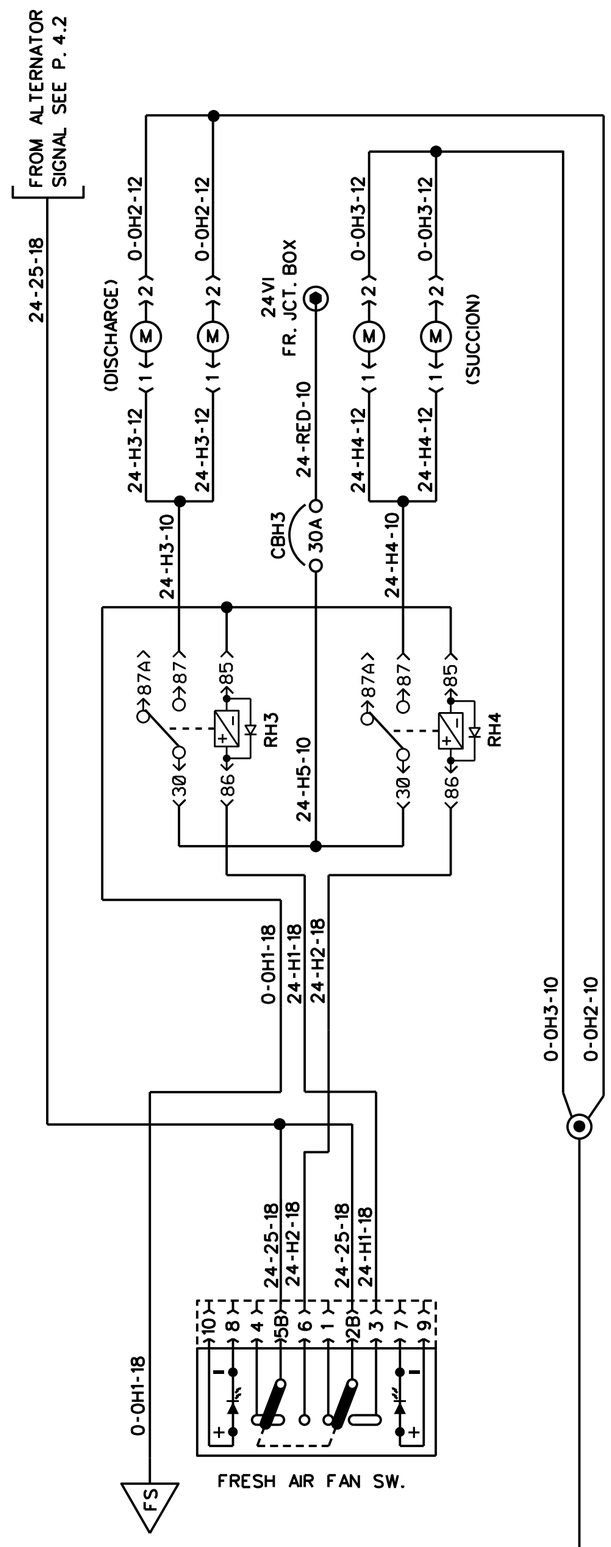

FRESH AIR FAN SW.

X3298 (LIMOCAR)