WIRING DIAGRAM

PREVOST

H3-45 VIP

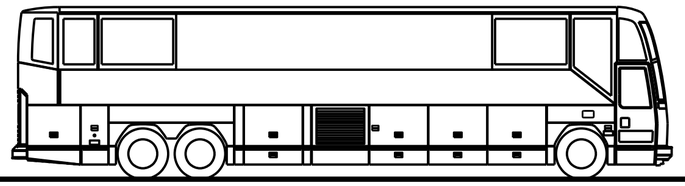

REFERENCE: MODEL 98	NO: D060912
EFF. W/ OC# 97048 PRIOR TO / OC#	DR. MARTIN LAFLAMME — DATE: 98-02-06
EFF. W/ VEH.# W2369, W2458 PRIOR TO / VEH.#	CK. JEAN RUEL — APPR. ROLAND LAPOINTE

REV.	DATE	DESCRIPTION	PAGE	BY	CK.	APPR.
01	98-05-11	INTRODUCTION DRIVER'S HVAC ONLY OC #98011 AVAILABLE WITH X-2488	A,B1,C1,C2,E,F,G,H,I, K,L,1.1,1.1SP1,2.1,3.1, 4.1,4.2,7.1,8.1SP1, 9.1SP1,9.2,9.3,11.2, 12.1,13.1,15.3,19.1, 23.1,11.1	J.R.		
02	98-07-02	RELAY R8 ET R11 REMOVED. OC #98048 EFF. W/X-2657	C1,C2,F,I,2.1,4.1,5.1, 6.1,8.1,8.1SP1,21.1, 21.1SP1	J.R.		
03	98-07-13	HUMIDISTAT REMOVED OC #98090 EFF. W/X-2814	C1,15.2	J.R.		
04	98-08-11	HARNESS FOR KEYLESS OC #98066 EFF. W/X-2633	C1,C2,G,11.2,12.1	S.G.		
		UPDATE PAGES. D,I,E2,1.1,3.1,8.1,14.1,15.2,22.1		S.G.		
05	98-10	RESISTOR ADDED IN SERIAL WITH COIL OF CONDENSER RELAY OC#98112 EFF. X-2816	P. J,15.1	J.R.		
06	98-10	CABLE 12VF AND BREAKER CB4 WERE INCREASE OC. #98133 EFF : X-2878	P. B1,F,1.1,1.1SP1,2.1	J.R.		
07	98-11	CONDENSER LUGG. DOOR LOCK ADDED WITH DRIVER'S AIR OC# 98094 EFF. X-2862	P. 12.1	J.R.		
08	99-01	ENGINE DOOR SWITCH REPLACED O.C. #98135 EFF./ X 3022	P. C1,C2,11.1	J.R.		
09	99-07	CLUSTER POLLAK OC #99003 EFF: Y-3395	P.A,B1,C1,C2,F,G,M	PG		
		T.T. LT STARTER ON OC #99054 EFF. Y-3395	1.1,1.1SP1,2.1,4.1,4.2,	J.R.		
		UPDATE & NEW REPRESENTATION HVAC SCHEMATIC	5.1,7.1,7.2,8.1SP1,9.1 9.2,9.3,11.2,12.1,13.1, 14.1,14.2,15.1,15.2, 23.1SP1			
10		SEE FOLLOWING PAGE FOR REV 10				

PREVOST H3-45 VIP

NO: D060912 p. 2

REV.	DATE	DESCRIPTION	PAGE	BY	CK.	APPR.
10	2000-03	UPDATE & NEW FIRE DETECTOR OC #99091 EFF. Y-3832 CONDENSER RELAY MOVED IN EVAP. COMPT. OC#99135 EFF.: Y-3415 CONNECTOR ADDED ON PARK BRAKE PRESS. SW. OC#99057 EFF.: Y-3537 NEW KEYPAD AND KEYLESS ENTRY BY-PASS SWITCH REMOVED OC# 99116 EFF. : Y-3909	A,B1,B2,C1,C2,E,G,3.1, ,4.2,6.1SP1,7.2,8.1, 8.1SP1,9.3SP2,11.2, 12.1,13.1,15.4,17.1,18.1 19.1,23.1,24.1SP1	PG		
11	2000-04	NEW HVAC DASH CONTROL W/PID O.C. #99121 EFF.: Y-3892	C1,C2,4.1,8.1,15.1,15.2, 15.3,23.1,23.1SP1	JR		
		NEW CLEARANCE&MARKER LAMP WITH LED O.C. # 99059 EFF. : Y-3355	P. K, 9.1, 9.1SP1,9.2	JR		
12	2000-06	NEW SENSOR HARNESS FOR WTEC TRANSMISSION OC#00019 EFF. 1-4009	P. C1,C2,6.2	JR		
13	2000-09	NEW F26 ON WEBASTO AND NEW R62 FOR DDEC OC#00075 EFF. 1-4084 UPDATE ON KEYLESS ENTRY OC#00053 EFF. 1-4097 C1,C2,E2,E4,H,3.1,4.1,12.1,12.2 NEW DELPHI THERMISTOR FOR DRIVER TEMP. OC#00091 EFF. 1-4166 NEW FUSE ON BATTERY MONITOR OC#00064 EFF. 1-4169 UPDATE B1,E1,G3,G4,I,2.1,7.1,7.1SP1,8.1SP1,9.1,11.2,18.1,20.1,22.1	C1,C2,5.1,8.1,14.1,14.2 ← SEE C1 C1,C2,1.1,1.1SP1,1.2 ← SEE	SD EL	 SD	
14	2000-10	ISOLATED GROUND OT5 FOR HVAC DASH MODULE OC# 00126 EFF.1-4150	E,3.1,15.1,15.4	EL	SD	
15	2000-11	NEW HVAC DASH CONTROL HEAT DRIVER'S ONLY O.C. #2000093 EFF.: 1- 4195 UPDATE	C2, 7.1, 15.4 C1,G,I,L, 7.2, 9.3sp1, 9.3sp2, 15.1, 15.3	EL	SD	
16	2001-02	STEERING CONTROL SERVOTRONIC ZF OPTIONAL O.C.#2000109 EFF.: 1- 4294	A,C1,C2,G,L,2.1,3.1, 17.1,17.1SP1	EL	SD	
17	2001-04	BLINK CODE SWITCH REMOVED & NEW ABS ECU O.C.#2001009 EFF.: 1- 4262 UPDATE	22.1 8.1, 8.1SP1	S.G. EL	EL EL	
18	2001-06	NEW TWO SPEED EVAPORATOR MOTOR O.C.#2000032 EFF.: 2- 4315 UPDATE	C1,E,11.1,15.1,15.2,15.3 15.4,23.1,23.1SP1	EL	EL	
19	2001-07	ABS SERVICE LAMP REMOVED AND REPLACED BY RESISTOR O.C.#2001026 EFF: 2-4347 AIR DRYER W/O THERMAL ELEMENT : WIRES REMOVED O.C.#2000007 EFF: 2-4351	J, 22.1 A,C1,C2,E,G,L,1.1,1.1SP1	S.G. EL	SD SD	
20	2001-09	ADD TIME DELAY RELAY ON EVAP. FAN O.C.#2000018 EFF.#2-4363	I,J,15.3	MLAF	SD	
21	2001-11	NEW FACE LIFT O.C.2000001 PRELIM#2-4259,2-4345,2-4392 EFF.#2-4417 OPTION WATER HEATER DELETED OPTION WINDSHIELD (UP) HEATER DELETED	A,C1,C2,E,F,G,H,I,L,1.1 4.1,4.2,9.1,9.2,9.3,13.1 16.2,16.3,14.1	SD	EL	
22	2001-12	NEW ABS SYSTEM 12 VOLTS O.C.#20001163 EFF: 2-4440 UPDATED	C,E,F,G,I,J,1.1,1.1SP1 2.1, 22.1,23.1 7.1,15.2	EL	EL	

PREVOST H3-45 VIP

NO: D060912 p. 3

REV.	DATE	DESCRIPTION	PAGE	BY	CK.	APPR.
23	2002-03	DELCO ALT. CABLE SUPPORT O.C.*2002008 EFF: 2-4460 UPDATED ⟶	E, 4.1 C1,C2,	EL		
24	02-07-10	UPDATE PAGE 10.1, (MOV HAS BEEN REMOVED) O.C.*2001065 EFF: 2-4376 BACK TO BENDIX AD-9 AIR DRYER - O.C.*2002058 EFF: 3-4581	10.1 C1,C2,E,G,L,8.1,8.1SP1	EL		
25	02-07-19	WORLD TRANSMISSION SHROUDED CONNECTORS - O.C.*2002049 EFF.: 3-4574 UPDATED ⟶	C1,C2 4.1,11.1,22.1	EL		
26	03-01-07	NEW STARTER MELCO - O.C.*2002053 EFF.: 3-4716 BIGGER VANNER/BATTERIE CABLES - O.C.*2002114 EFF.: 3-4716	4.2 B2, 1.2	S.G.		

WIRING DIAGRAM INDEX

A	A/C & HEAT SYSTEM	Page:	15
	AIR DRYER	Page:	8
	ALARM & SIGNAL	Page:	7
	ABS	Page:	22
	ARRANGEMENT - CABLE	Page:	B
	ARRANGEMENT - HARNESS	Page:	C
	ARRANGEMENT - SPARE WIRE	Page:	D
B	BACK-UP ALARM	Page:	9.3
	BACK-UP MONITOR	Page:	20
C	CHARGING SYSTEM	Page:	4
	CIGAR LIGHTER	Page:	19
	CODE - CIRCUIT NUMBER	Page:	E
	CODE - CIRCUIT BREAKER	Page:	F
	CODE - CONNECTOR	Page:	G
	CODE - DIODE	Page:	H
	CODE - RELAY	Page:	I
	CODE - RESISTOR	Page:	J
	CODE - WIRING KEY	Page:	K
	CODE - FUSE	Page:	L
	CODE - MODULE	Page:	M
	CRUISE CONTROL - DDEC	Page:	5
D	DDEC III	Page:	5
	DISTRIBUTION 12V	Page:	2
	DISTRIBUTION 24V	Page:	1
	DRIVER'S WINDOW LIFTER	Page:	19
	DRIVER'S SEAT-ELECT. ADJUST	Page:	13
	DRIVER'S & CO-PILOT SEAT-HEATER	Page:	13
E	ENGINE BLOCK HEATER	Page:	14.2
	ENGINE BREAKE SYSTEM	Page:	21
	ENGINE CONTROL	Page:	4
	ETHER COLD START	Page:	8
	EXTERIOR LIGHTIHG	Page:	9
F	FAN-CLUTCH RADIATOR	Page:	8
	FAST IDLE - DDEC	Page:	5
	FIRE DETECTOR	Page:	7
	FUEL WATER FILTER	Page:	8
	FUEL PRIME PUMP	Page:	14.2
G	GROUND SYSTEM	Page:	3
I	INTERIOR LIGHTING	Page:	11
K	KEYLESS ENTRY SYSTEM	Page:	12
L	LEVEL LOW SYSTEM	Page:	18
	LUGGAGE DOOR LOCK	Page:	12
M	MIRROR-REAR VIEW	Page:	16
P	PARKING BREAKE ALARM	Page:	8
	PARKING BREAKE SWITCH	Page:	8
	PRODRIVER	Page:	8
R	RETARDER - WORLD TRANSM.	Page:	21
S	SPEEDOMETER (VDO)	Page:	17
	SUN VISOR	Page:	19
T	TACHOMETER (VDO)	Page:	17
	TELL TALE LIGHT MODULES	Page	23
	THERMOMETER-DIGITAL	Page:	23
	TRANSMISSION - WORLD	Page:	6
W	WATER HEATER PRE-HEAT	Page:	14
	WINDSHIELD (UP) HEATED	Page:	13
	WIPER & WASHER	Page:	10

WIRING DIAGRAM INDEX

A	A/C & HEAT SYSTEM (FULL AIR)	Page:	15.1
	A/C & HEAT SYSTEM (DRIVER ONLY)	Page:	15.3
	AIR DRYER	Page:	8
	ALARM & SIGNAL	Page:	7
	ALTERNATOR DELCO & STARTER	Page:	4.1
	ALTERNATOR BOSCH & STARTER	Page:	4.2
	ABS	Page:	22
	ARRANGEMENT - CABLE	Page:	B
	ARRANGEMENT - HARNESS	Page:	C
	ARRANGEMENT - SPARE WIRE	Page:	D
B	BACK-UP ALARM	Page:	9.3
	BACK-UP MONITOR	Page:	20
C	CIGAR LIGHTER	Page:	19
	CODE - CIRCUIT NUMBER	Page:	E
	CODE - CIRCUIT BREAKER	Page:	F
	CODE - CONNECTOR	Page:	G
	CODE - DIODE	Page:	H
	CODE - RELAY	Page:	I
	CODE - RESISTOR	Page:	J
	CODE - WIRING KEY	Page:	K
	CODE - FUSE	Page:	L
	CODE - MODULE	Page:	M
	CRUISE CONTROL - DDEC	Page:	5
D	DDEC III	Page:	5
	DISTRIBUTION 12V	Page:	2
	DISTRIBUTION 24V	Page:	1
	DRIVER'S WINDOW LIFTER	Page:	19
	DRIVER'S SEAT-ELECT. ADJUST	Page:	13
	DRIVER'S & CO-PILOT SEAT-HEATER	Page:	13
E	ENGINE BLOCK HEATER	Page:	14.2
	ENGINE BREAKE SYSTEM	Page:	21
	ENGINE CONTROL	Page:	4
	ETHER COLD START	Page:	8
	EXTERIOR LIGHTIHG	Page:	9
F	FAN-CLUTCH RADIATOR	Page:	8
	FAST IDLE - DDEC	Page:	5
	FIRE DETECTOR	Page:	7
	FUEL WATER FILTER	Page:	8
	FUEL PRIME PUMP	Page:	14.2
G	GROUND SYSTEM	Page:	3
I	INTERIOR LIGHTING	Page:	11
K	KEYLESS ENTRY SYSTEM	Page:	12
L	LEVEL LOW SYSTEM	Page:	18
	LUGGAGE DOOR LOCK	Page:	12
M	MIRROR-REAR VIEW	Page:	16
P	PARKING BREAKE ALARM	Page:	8
	PARKING BREAKE SWITCH	Page:	8
	PRODRIVER	Page:	8
R	RETARDER - WORLD TRANSM.	Page:	21
S	SPEEDOMETER (VDO)	Page:	17
	SUN VISOR	Page:	19
T	TACHOMETER (VDO)	Page:	17
	TELL TALE LIGHT MODULES	Page	23
	THERMOMETER-DIGITAL	Page:	23
	TRANSMISSION - WORLD	Page:	6
W	WATER HEATER PRE-HEAT	Page:	14
	WINDSHIELD (UP) HEATED	Page:	13
	WIPER & WASHER	Page:	10

WIRING DIAGRAM INDEX

A	A/C & HEAT SYSTEM (FULL AIR)	Page:	15.1
	A/C & HEAT SYSTEM (DRIVER ONLY)	Page:	15.4
	AIR DRYER	Page:	8
	ALARM & SIGNAL	Page:	7
	ALTERNATOR DELCO & STARTER	Page:	4.1
	ALTERNATOR BOSCH & STARTER	Page:	4.2
	ABS	Page:	22
	ARRANGEMENT - CABLE	Page:	B
	ARRANGEMENT - HARNESS	Page:	C
	ARRANGEMENT - SPARE WIRE	Page:	D
B	BACK-UP ALARM	Page:	9.3
	BACK-UP MONITOR	Page:	20
C	CIGAR LIGHTER	Page:	19
	CODE - CIRCUIT NUMBER	Page:	E
	CODE - CIRCUIT BREAKER	Page:	F
	CODE - CONNECTOR	Page:	G
	CODE - DIODE	Page:	H
	CODE - RELAY	Page:	I
	CODE - RESISTOR	Page:	J
	CODE - WIRING KEY	Page:	K
	CODE - FUSE	Page:	L
	CODE - MODULE	Page:	M
	CRUISE CONTROL - DDEC	Page:	5
D	DDEC III	Page:	5
	DISTRIBUTION 12V	Page:	2
	DISTRIBUTION 24V	Page:	1
	DRIVER'S WINDOW LIFTER	Page:	19
	DRIVER'S SEAT-ELECT. ADJUST	Page:	13
	DRIVER'S & CO-PILOT SEAT-HEATER	Page:	13
E	ENGINE BLOCK HEATER	Page:	14.2
	ENGINE BREAKE SYSTEM	Page:	21
	ENGINE CONTROL	Page:	4
	ETHER COLD START	Page:	8
	EXTERIOR LIGHTIHG	Page:	9
F	FAN-CLUTCH RADIATOR	Page:	8
	FAST IDLE - DDEC	Page:	5
	FIRE DETECTOR	Page:	7
	FUEL WATER FILTER	Page:	8
	FUEL PRIME PUMP	Page:	14.2
G	GROUND SYSTEM	Page:	3
I	INTERIOR LIGHTING	Page:	11
K	KEYLESS ENTRY SYSTEM	Page:	12
L	LEVEL LOW SYSTEM	Page:	18
	LUGGAGE DOOR LOCK	Page:	12
M	MIRROR-REAR VIEW	Page:	16
P	PARKING BREAKE ALARM	Page:	8
	PARKING BREAKE SWITCH	Page:	8
	PRODRIVER	Page:	8
R	RETARDER - WORLD TRANSM.	Page:	21
S	SPEEDOMETER (VDO)	Page:	17
	SUN VISOR	Page:	19
T	TACHOMETER (VDO)	Page:	17
	TELL TALE LIGHT MODULES	Page	23
	THERMOMETER-DIGITAL	Page:	23
	TRANSMISSION - WORLD	Page:	6
W	WATER HEATER PRE-HEAT	Page:	14
	WINDSHIELD (UP) HEATED	Page:	13
	WIPER & WASHER	Page:	10

WIRING DIAGRAM INDEX

A	A/C & HEAT SYSTEM (FULL AIR)	Page:	15.1
	A/C & HEAT SYSTEM (DRIVER ONLY)	Page:	15.4
	AIR DRYER	Page:	8
	ALARM & SIGNAL	Page:	7
	ALTERNATOR DELCO & STARTER	Page:	4.1
	ALTERNATOR BOSCH & STARTER	Page:	4.2
	ABS	Page:	22
	ARRANGEMENT - CABLE	Page:	B
	ARRANGEMENT - HARNESS	Page:	C
	ARRANGEMENT - SPARE WIRE	Page:	D
B	BACK-UP ALARM	Page:	9.3
	BACK-UP MONITOR	Page:	20
C	CIGAR LIGHTER	Page:	19
	CODE - CIRCUIT NUMBER	Page:	E
	CODE - CIRCUIT BREAKER	Page:	F
	CODE - CONNECTOR	Page:	G
	CODE - DIODE	Page:	H
	CODE - RELAY	Page:	I
	CODE - RESISTOR	Page:	J
	CODE - WIRING KEY	Page:	K
	CODE - FUSE	Page:	L
	CODE - MODULE	Page:	M
	CRUISE CONTROL - DDEC	Page:	5
D	DDEC III	Page:	5
	DISTRIBUTION 12V	Page:	2
	DISTRIBUTION 24V	Page:	1
	DRIVER'S WINDOW LIFTER	Page:	19
	DRIVER'S SEAT-ELECT. ADJUST	Page:	13
	DRIVER'S & CO-PILOT SEAT-HEATER	Page:	13
E	ENGINE BLOCK HEATER	Page:	14.2
	ENGINE BREAKE SYSTEM	Page:	21
	ENGINE CONTROL	Page:	4
	ETHER COLD START	Page:	8
	EXTERIOR LIGHTIHG	Page:	9
F	FAN-CLUTCH RADIATOR	Page:	8
	FAST IDLE - DDEC	Page:	5
	FIRE DETECTOR	Page:	7
	FUEL WATER FILTER	Page:	8
	FUEL PRIME PUMP	Page:	14.2
G	GROUND SYSTEM	Page:	3
I	INTERIOR LIGHTING	Page:	11
K	KEYLESS ENTRY SYSTEM	Page:	12
L	LEVEL LOW SYSTEM	Page:	18
	LUGGAGE DOOR LOCK	Page:	12
M	MIRROR-REAR VIEW	Page:	16
P	PARKING BREAKE ALARM	Page:	8
	PARKING BREAKE SWITCH	Page:	8
	PRODRIVER	Page:	8
R	RETARDER - WORLD TRANSM.	Page:	21
S	SPEEDOMETER (VDO)	Page:	17
	SUN VISOR	Page:	19
T	TACHOMETER (VDO)	Page:	17
	TELL TALE LIGHT MODULES	Page	23
	THERMOMETER-DIGITAL	Page:	23
	TRANSMISSION - WORLD	Page:	6
W	WATER HEATER PRE-HEAT	Page:	14
	WINDSHIELD (UP) HEATED	Page:	13
	WIPER & WASHER	Page:	10
	W.C.L. RICON 9000	Page :	24.1

WIRING DIAGRAM INDEX

A	A/C & HEAT SYSTEM (FULL AIR)	Page:	15.1
	A/C & HEAT SYSTEM (DRIVER ONLY)	Page:	15.4
	AIR DRYER	Page:	8
	ALARM & SIGNAL	Page:	7
	ALTERNATOR DELCO & STARTER	Page:	4.1
	ALTERNATOR BOSCH & STARTER	Page:	4.2
	ABS	Page:	22
	ARRANGEMENT - CABLE	Page:	B
	ARRANGEMENT - HARNESS	Page:	C
	ARRANGEMENT - SPARE WIRE	Page:	D
B	BACK-UP ALARM	Page:	9.3
	BACK-UP MONITOR	Page:	20
C	CIGAR LIGHTER	Page:	19
	CODE - CIRCUIT NUMBER	Page:	E
	CODE - CIRCUIT BREAKER	Page:	F
	CODE - CONNECTOR	Page:	G
	CODE - DIODE	Page:	H
	CODE - RELAY	Page:	I
	CODE - RESISTOR	Page:	J
	CODE - WIRING KEY	Page:	K
	CODE - FUSE	Page:	L
	CODE - MODULE	Page:	M
	CRUISE CONTROL - DDEC	Page:	5
D	DDEC III	Page:	5
	DISTRIBUTION 12V	Page:	2
	DISTRIBUTION 24V	Page:	1
	DRIVER'S WINDOW LIFTER	Page:	19
	DRIVER'S SEAT-ELECT. ADJUST	Page:	13
	DRIVER'S & CO-PILOT SEAT-HEATER	Page:	13
E	ENGINE BLOCK HEATER	Page:	14.2
	ENGINE BREAKE SYSTEM	Page:	21
	ENGINE CONTROL	Page:	4
	ETHER COLD START	Page:	8
	EXTERIOR LIGHTIHG	Page:	9
F	FAN-CLUTCH RADIATOR	Page:	8
	FAST IDLE - DDEC	Page:	5
	FIRE DETECTOR	Page:	7
	FUEL WATER FILTER	Page:	8
	FUEL PRIME PUMP	Page:	14.2
G	GROUND SYSTEM	Page:	3
I	INTERIOR LIGHTING	Page:	11
K	KEYLESS ENTRY SYSTEM	Page:	12
L	LEVEL LOW SYSTEM	Page:	18
	LUGGAGE DOOR LOCK	Page:	12
M	MIRROR-REAR VIEW	Page:	16
P	PARKING BREAKE ALARM	Page:	8
	PARKING BREAKE SWITCH	Page:	8
	PRODRIVER	Page:	8
R	RETARDER - WORLD TRANSM.	Page:	21
S	SPEEDOMETER (VDO)	Page:	17
	SUN VISOR	Page:	19
	STEERING CONTROL	Page:	17.1
T	TACHOMETER (VDO)	Page:	17
	TELL TALE LIGHT MODULES	Page	23
	THERMOMETER-DIGITAL	Page:	23
	TRANSMISSION - WORLD	Page:	6
W	WATER HEATER PRE-HEAT	Page:	14
	WINDSHIELD (UP) HEATED	Page:	13
	WIPER & WASHER	Page:	10
	W.C.L. RICON 9000	Page :	24.1

WIRING DIAGRAM INDEX

A	A/C & HEAT SYSTEM (FULL AIR)	Page:	15.1
	A/C & HEAT SYSTEM (DRIVER ONLY)	Page:	15.4
	ALARM & SIGNAL	Page:	7
	ALTERNATOR DELCO & STARTER	Page:	4.1
	ALTERNATOR BOSCH & STARTER	Page:	4.2
	ABS	Page:	22
	ARRANGEMENT - CABLE	Page:	B
	ARRANGEMENT - HARNESS	Page:	C
	ARRANGEMENT - SPARE WIRE	Page:	D
B	BACK-UP ALARM	Page:	9.3
	BACK-UP MONITOR	Page:	20
C	CIGAR LIGHTER	Page:	19
	CODE - CIRCUIT NUMBER	Page:	E
	CODE - CIRCUIT BREAKER	Page:	F
	CODE - CONNECTOR	Page:	G
	CODE - DIODE	Page:	H
	CODE - RELAY	Page:	I
	CODE - RESISTOR	Page:	J
	CODE - WIRING KEY	Page:	K
	CODE - FUSE	Page:	L
	CODE - MODULE	Page:	M
	CRUISE CONTROL - DDEC	Page:	5
D	DDEC III	Page:	5
	DISTRIBUTION 12V	Page:	2
	DISTRIBUTION 24V	Page:	1
	DRIVER'S WINDOW LIFTER	Page:	19
	DRIVER'S SEAT-ELECT. ADJUST	Page:	13
	DRIVER'S & CO-PILOT SEAT-HEATER	Page:	13
E	ENGINE BLOCK HEATER	Page:	14.2
	ENGINE BREAKE SYSTEM	Page:	21
	ENGINE CONTROL	Page:	4
	ETHER COLD START	Page:	8
	EXTERIOR LIGHTIHG	Page:	9
F	FAN-CLUTCH RADIATOR	Page:	8
	FAST IDLE - DDEC	Page:	5
	FIRE DETECTOR	Page:	7.2
	FUEL WATER FILTER	Page:	8
	FUEL PRIME PUMP	Page:	14.2
G	GROUND SYSTEM	Page:	3
I	INTERIOR LIGHTING	Page:	11
K	KEYLESS ENTRY SYSTEM	Page:	12
L	LEVEL LOW SYSTEM	Page:	18
	LUGGAGE DOOR LOCK	Page:	12
M	MIRROR-REAR VIEW	Page:	16
P	PARKING BREAKE ALARM	Page:	8
	PARKING BREAKE SWITCH	Page:	8
	PRODRIVER	Page:	8
R	RETARDER - WORLD TRANSM.	Page:	21
S	SPEEDOMETER (VDO)	Page:	17
	SUN VISOR	Page:	19
	STEERING CONTROL	Page:	17.1
T	TACHOMETER (VDO)	Page:	17
	TELL TALE LIGHT MODULES	Page	23
	THERMOMETER-DIGITAL	Page:	23
	TRANSMISSION - WORLD	Page:	6
W	WATER HEATER PRE-HEAT	Page:	14
	WINDSHIELD (UP) HEATED	Page:	13
	WIPER & WASHER	Page:	10
	W.C.L. RICON 9000	Page :	24.1

WIRING DIAGRAM INDEX

A	A/C & HEAT SYSTEM (FULL AIR)	Page:	15.1
	A/C & HEAT SYSTEM (DRIVER ONLY)	Page:	15.4
	ALARM & SIGNAL	Page:	7
	ALTERNATOR DELCO & STARTER	Page:	4.1
	ALTERNATOR BOSCH & STARTER	Page:	4.2
	ABS	Page:	22
	ARRANGEMENT - CABLE	Page:	B
	ARRANGEMENT - HARNESS	Page:	C
	ARRANGEMENT - SPARE WIRE	Page:	D
B	BACK-UP ALARM	Page:	9.3
	BACK-UP MONITOR	Page:	20
C	CIGAR LIGHTER	Page:	19
	CODE - CIRCUIT NUMBER	Page:	E
	CODE - CIRCUIT BREAKER	Page:	F
	CODE - CONNECTOR	Page:	G
	CODE - DIODE	Page:	H
	CODE - RELAY	Page:	I
	CODE - RESISTOR	Page:	J
	CODE - WIRING KEY	Page:	K
	CODE - FUSE	Page:	L
	CODE - MODULE	Page:	M
	CRUISE CONTROL - DDEC	Page:	5
D	DDEC III	Page:	5
	DISTRIBUTION 12V	Page:	2
	DISTRIBUTION 24V	Page:	1
	DRIVER'S WINDOW LIFTER	Page:	19
	DRIVER'S SEAT-ELECT. ADJUST	Page:	13
	DRIVER'S & CO-PILOT SEAT-HEATER	Page:	13
E	ENGINE BLOCK HEATER	Page:	14
	ENGINE BREAKE SYSTEM	Page:	21
	ENGINE CONTROL	Page:	4
	ETHER COLD START	Page:	8
	EXTERIOR LIGHTIHG	Page:	9
F	FAN-CLUTCH RADIATOR	Page:	8
	FAST IDLE - DDEC	Page:	5
	FIRE DETECTOR	Page:	7.2
	FUEL WATER FILTER	Page:	8
	FUEL PRIME PUMP	Page:	14
G	GROUND SYSTEM	Page:	3
I	INTERIOR LIGHTING	Page:	11
K	KEYLESS ENTRY SYSTEM	Page:	12
L	LEVEL LOW SYSTEM	Page:	18
	LUGGAGE DOOR LOCK	Page:	12
M	MIRROR-REAR VIEW	Page:	16
P	PARKING BREAKE ALARM	Page:	8
	PARKING BREAKE SWITCH	Page:	8
	PRODRIVER	Page:	8
R	RETARDER - WORLD TRANSM.	Page:	21
S	SPEEDOMETER (VDO)	Page:	17
	SUN VISOR	Page:	19
	STEERING CONTROL	Page:	17.1
T	TACHOMETER (VDO)	Page:	17
	TELL TALE LIGHT MODULES	Page	23
	THERMOMETER-DIGITAL	Page:	23
	TRANSMISSION - WORLD	Page:	6
W	WIPER & WASHER	Page:	10
	W.C.L. RICON 9000	Page :	24.1

BATT. CPT
JCT BLOCK #C

(00-16)
(00-12)

063906
TO DDEC 3 ECM GROUND
TO DDEC 3 BREAKERS
TO WORLD TR. BREAKER

151-12
150A-12
150-12
12W-12
12W-12
064607 (136V-10)

GRD ELECTRONIC JUNCTION BLOCK
12V ELECTRONIC JUNCTION BLOCK
12V ELECTRICAL JUNCTION BLOCK

R54
86 85
30 87
064607 (12-10)
064607 (12R-10)

R55
86 85
30 87
064607 (12-10)
064607 (12F-10)
064607 (12I-10)
064607 (12D-10)

(00-12)

BOOSTER BLOCK POSITIVE POST
064607 (24S-16)

GROUND FROM DASH CUT OUT SW.
GROUND FROM GENERATOR RUN RLY (R78)

BATT. CPT
SAFETY CUT OUT SW
(0MR-18)
(0MS-18)
(0MS-18)

063595 (24A-2/0)
064607 (24D-10)
24V DISCONNECT CUT OUT RLY
86 85

063621 (101-4/0)

CHASSIS GROUND

FROM 24V BATTERY
SEE PAGE B2
063591 (24-4/0)

064607 (24D-10)
063593 (24E-2/0)

BATT. CPT
12V HOT WIRE
JCT BLOCK #A

BATT. CPT
24V HOT WIRE
JCT BLOCK #B

TO STARTER RLY (R4)

063585 (24B-8)
064607 (12D-10)
064607 (12F-10)
064607 (12R-10)
064607 (12I-10)
064607 (12IA-10)

IGNITION SIGNAL
86 30
85 87
R2

GENERATOR 24V-270
DC+
063297 (102-270)
STARTER

063621 (101-4/0)
062214 (0C-2/0)
062212 (0B-2/0)

CB5 30A
CB7 90A
CB8 150A
CB6 90A
CB2 40A
CB4 40A
CB3 40A
CB1 40A

(24VD-10)
(24VF-4)
(24VD-10)
(12VF-8)
(12VD-10)
(12VI-10)

(90D-1)
(90B-10)
(90C-10)
(24VR-4)

(00-16)

064402

EVAPORATOR FAN JCT BLOCK
CONDENSER FAN RH MOTOR
CONDENSER FAN LH MOTOR

(90D-1)
(41-10)
(42-10)

CB77 40A
CB78 40A

064401

064488 (24VR-4)

BATT. CPT
12V IGNITION
JCT BLOCK #E

063585 (12VI-10)

(12VD-10)
(12VR-10)
(12VI-10)
(00-12)

(24VD-10)

0V BATT. | 24V | 24VD | 12V | 12VD | 12VI
FRONT JUNCTION BOX

24VD | 24V | 12VD | 12V | 12VI | 0V BATT.
REAR JUNCTION BOX

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: B1	REVISION 00

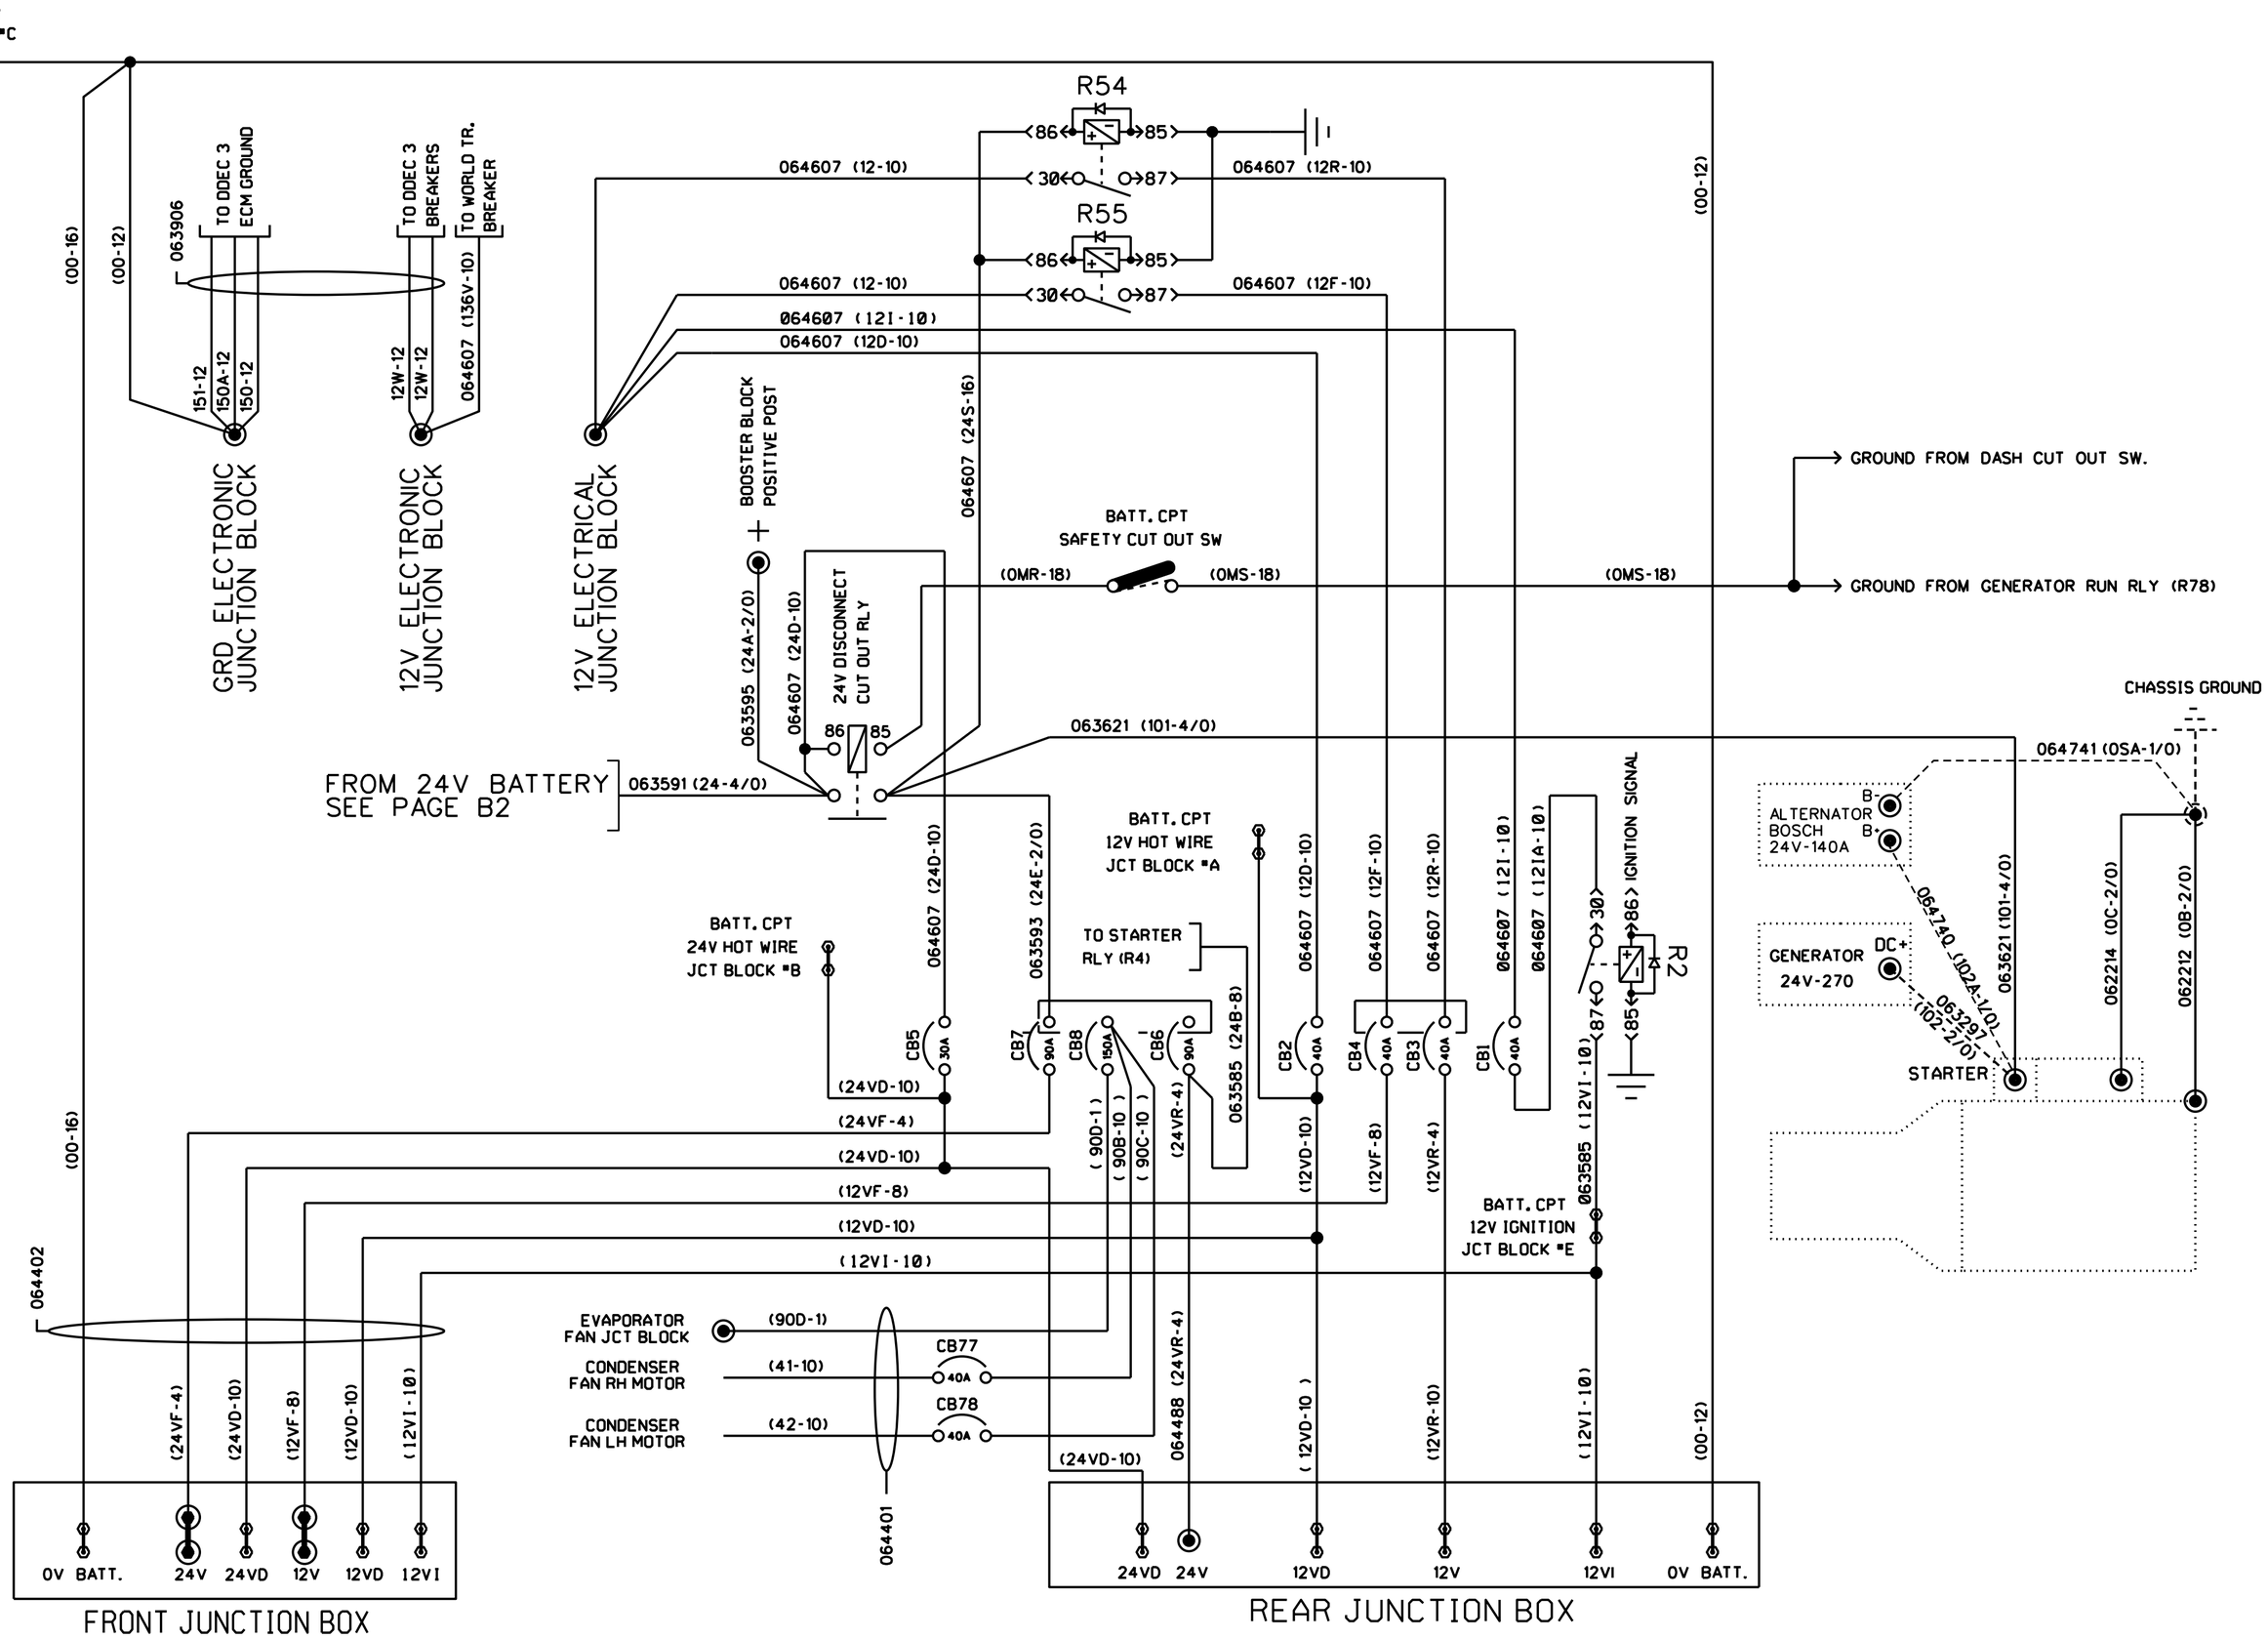

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: B1	REVISION 01

BATT. CPT
JCT BLOCK "C

(00-16)
(00-12)

063906
TO DDEC 3
ECM GROUND
TO DDEC 3
BREAKERS
TO WORLD TR.
BREAKER

151-12
150A-12
150-12
12W-12
12W-12
064607 (136V-10)

GRD ELECTRONIC
JUNCTION BLOCK
12V ELECTRONIC
JUNCTION BLOCK
12V ELECTRICAL
JUNCTION BLOCK

BOSCH ALT. : 064729
DELCO ALT. : 064607

R54
86 85
30 87
(12-10)
R55
86 85
30 87
(12-8)
(12I-10)
(12D-10)

BOSCH ALT. : 064729
DELCO ALT. : 064607

BOOSTER BLOCK
POSITIVE POST

BATT. CPT
SAFETY CUT OUT SW
(OMR-18)
(OMS-18)
(OMS-18)

GROUND FROM DASH CUT OUT SW.
GROUND FROM GENERATOR RUN RLY (R78)

063595 (24A-2/0)
064607 (24D-10)
24V DISCONNECT
CUT OUT RLY
86 85

063621 (101-4/0)

CHASSIS GROUND
064741 (0SA-1/0)

FROM 24V BATTERY
SEE PAGE B2
063591 (24-4/0)

064607 (24D-10)
063593 (24E-2/0)

BATT. CPT
12V HOT WIRE
JCT BLOCK "A

TO STARTER
RLY (R4)

BATT. CPT
24V HOT WIRE
JCT BLOCK "B

(12D-10)
(12F-8)
(12R-10)
(12I-10)
(12IA-10)

86 30
87 85
R2
IGNITION SIGNAL

ALTERNATOR
BOSCH
24V-140A
B+
B-

GENERATOR
24V-270
DC+

064740 (102A-1/0)
063291 (102-2/0)
063621 (101-4/0)
062214 (0C-2/0)
062212 (0B-2/0)

STARTER

CB5 30A
CB7 90A
CB8 150A
CB6 90A
CB2 40A
CB4 70A
CB3 40A
CB1 40A

(24VD-10)
(24VF-4)
(24VD-10)
(12VF-4)
(12VD-10)
(12VI-10)

(90D-1)
(90B-10)
(90C-10)
(24VR-4)
(12VD-10)
(12VF-4)
(12VR-4)
(12VI-10)

BATT. CPT
12V IGNITION
JCT BLOCK "E"

064992

EVAPORATOR
FAN JCT BLOCK
(90D-1)
CONDENSER
FAN RH MOTOR
(41-10)
CONDENSER
FAN LH MOTOR
(42-10)

CB77 40A
CB78 40A

064401

064488 (24VR-4)

(24VD-10)
(12VD-10)
(12VR-10)
(12VI-10)
(00-12)

0V BATT. | 24V | 24VD | 12V | 12VD | 12VI

FRONT JUNCTION BOX

24VD | 24V | 12VD | 12V | 12VI | 0V BATT.

REAR JUNCTION BOX

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: B1	REVISION 06

BATT. CPT
JCT BLOCK "C

BOSCH ALT. : 064729
DELCO ALT. : 064607

R54
R55

(00-16)
(00-12)
063906
TO DDEC 3 ECM GROUND
TO DDEC 3 BREAKERS
TO WORLD TR. BREAKER
151-12
150A-12
150-12
12W-12
12W-12
064607 (136V-10)

(12-10)
(12-8)
(12I-10)
(12D-10)

GRD ELECTRONIC JUNCTION BLOCK
12V ELECTRONIC JUNCTION BLOCK
12V ELECTRICAL JUNCTION BLOCK

BOOSTER BLOCK POSITIVE POST

BOSCH ALT. : 064729
DELCO ALT. : 064607

BATT. CPT
SAFETY CUT OUT SW
(0MR-18)
(0MS-18)
(0MS-18)

GROUND FROM DASH CUT OUT SW.
GROUND FROM GENERATOR RUN RLY (R78)

063595 (24A-2/0)
064607 (24D-10)
24V DISCONNECT CUT OUT RLY
86
85

CHASSIS GROUND
065231 (101-4/0)
064741 (0SA-1/0)

FROM 24V BATTERY
SEE PAGE B2
063591 (24-4/0)

ALTERNATOR BOSCH 24V-140A
B-
B+
GENERATOR 24V-270
DC+
064740 (102A-1/0)
063297 (102-2/0)
065231 (101-4/0)
062214 (0C-2/0)
062212 (0B-2/0)
STARTER

BATT. CPT
12V HOT WIRE
JCT BLOCK "A

TO STARTER RLY (R4)

BATT. CPT
24V HOT WIRE
JCT BLOCK "B

064607 (24D-10)
063593 (24E-2/0)

(12D-10)
(12F-8)
(12R-10)
(12I-10)
(12IA-10)
30
86
IGNITION SIGNAL
R2
87
85

CB5 30A
CB7 90A
CB8 150A
CB6 90A
CB2 40A
CB4 70A
CB3 40A
CB1 40A

(24VD-10)
(24VF-4)
(24VD-10)
(12VF-4)
(12VD-10)
(12VI-10)

(90D-1)
(90B-10)
(90C-10)
(24VR-4)
(12VD-10)
(12VF-4)
(12VR-4)
(12VI-10)

BATT. CPT
12V IGNITION
JCT BLOCK "E

064992

EVAPORATOR FAN JCT BLOCK
(90D-1)
CONDENSER FAN RH MOTOR
(41-10)
CONDENSER FAN LH MOTOR
(42-10)
CB77 40A
CB78 40A

064401

064488 (24VR-4)
(12VD-10)
(12VR-10)
(12VI-10)
(00-12)
(24VD-10)

0V BATT. | 24V | 24VD | 12V | 12VD | 12VI
FRONT JUNCTION BOX

24VD | 24V | 12VD | 12V | 12VI | 0V BATT.
REAR JUNCTION BOX

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: B1	REVISION 09

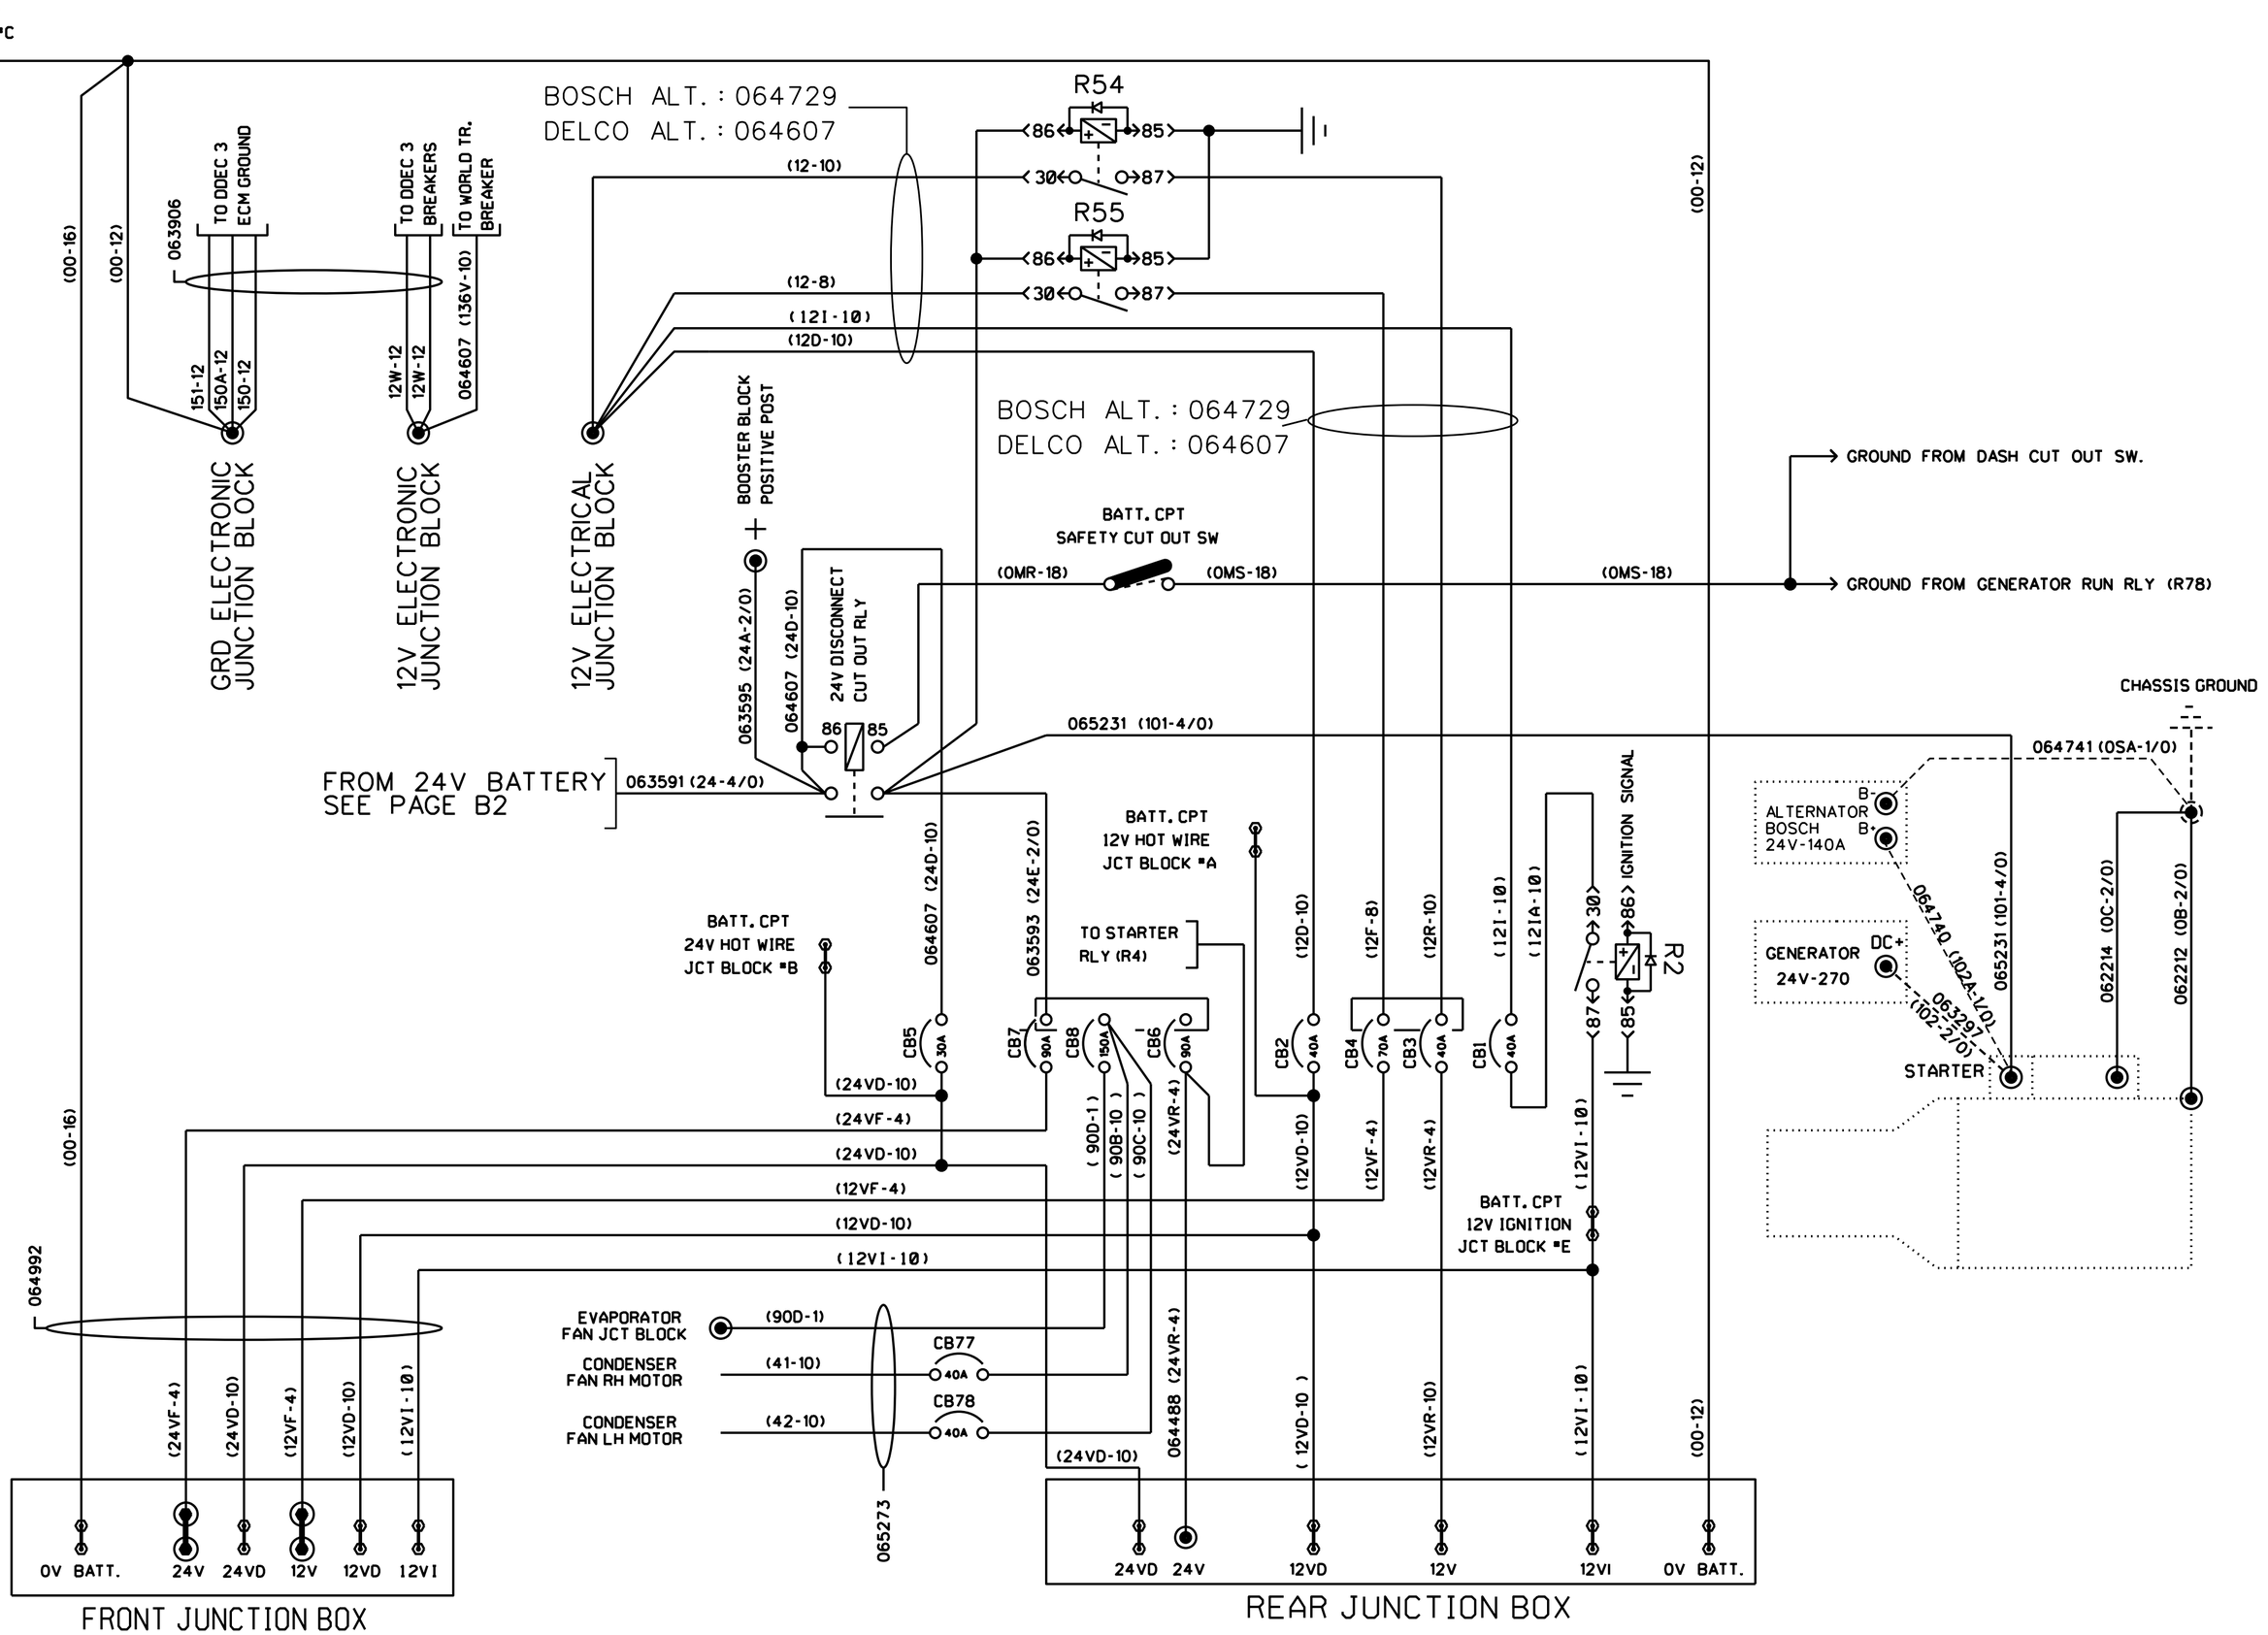

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: B1	REVISION 10

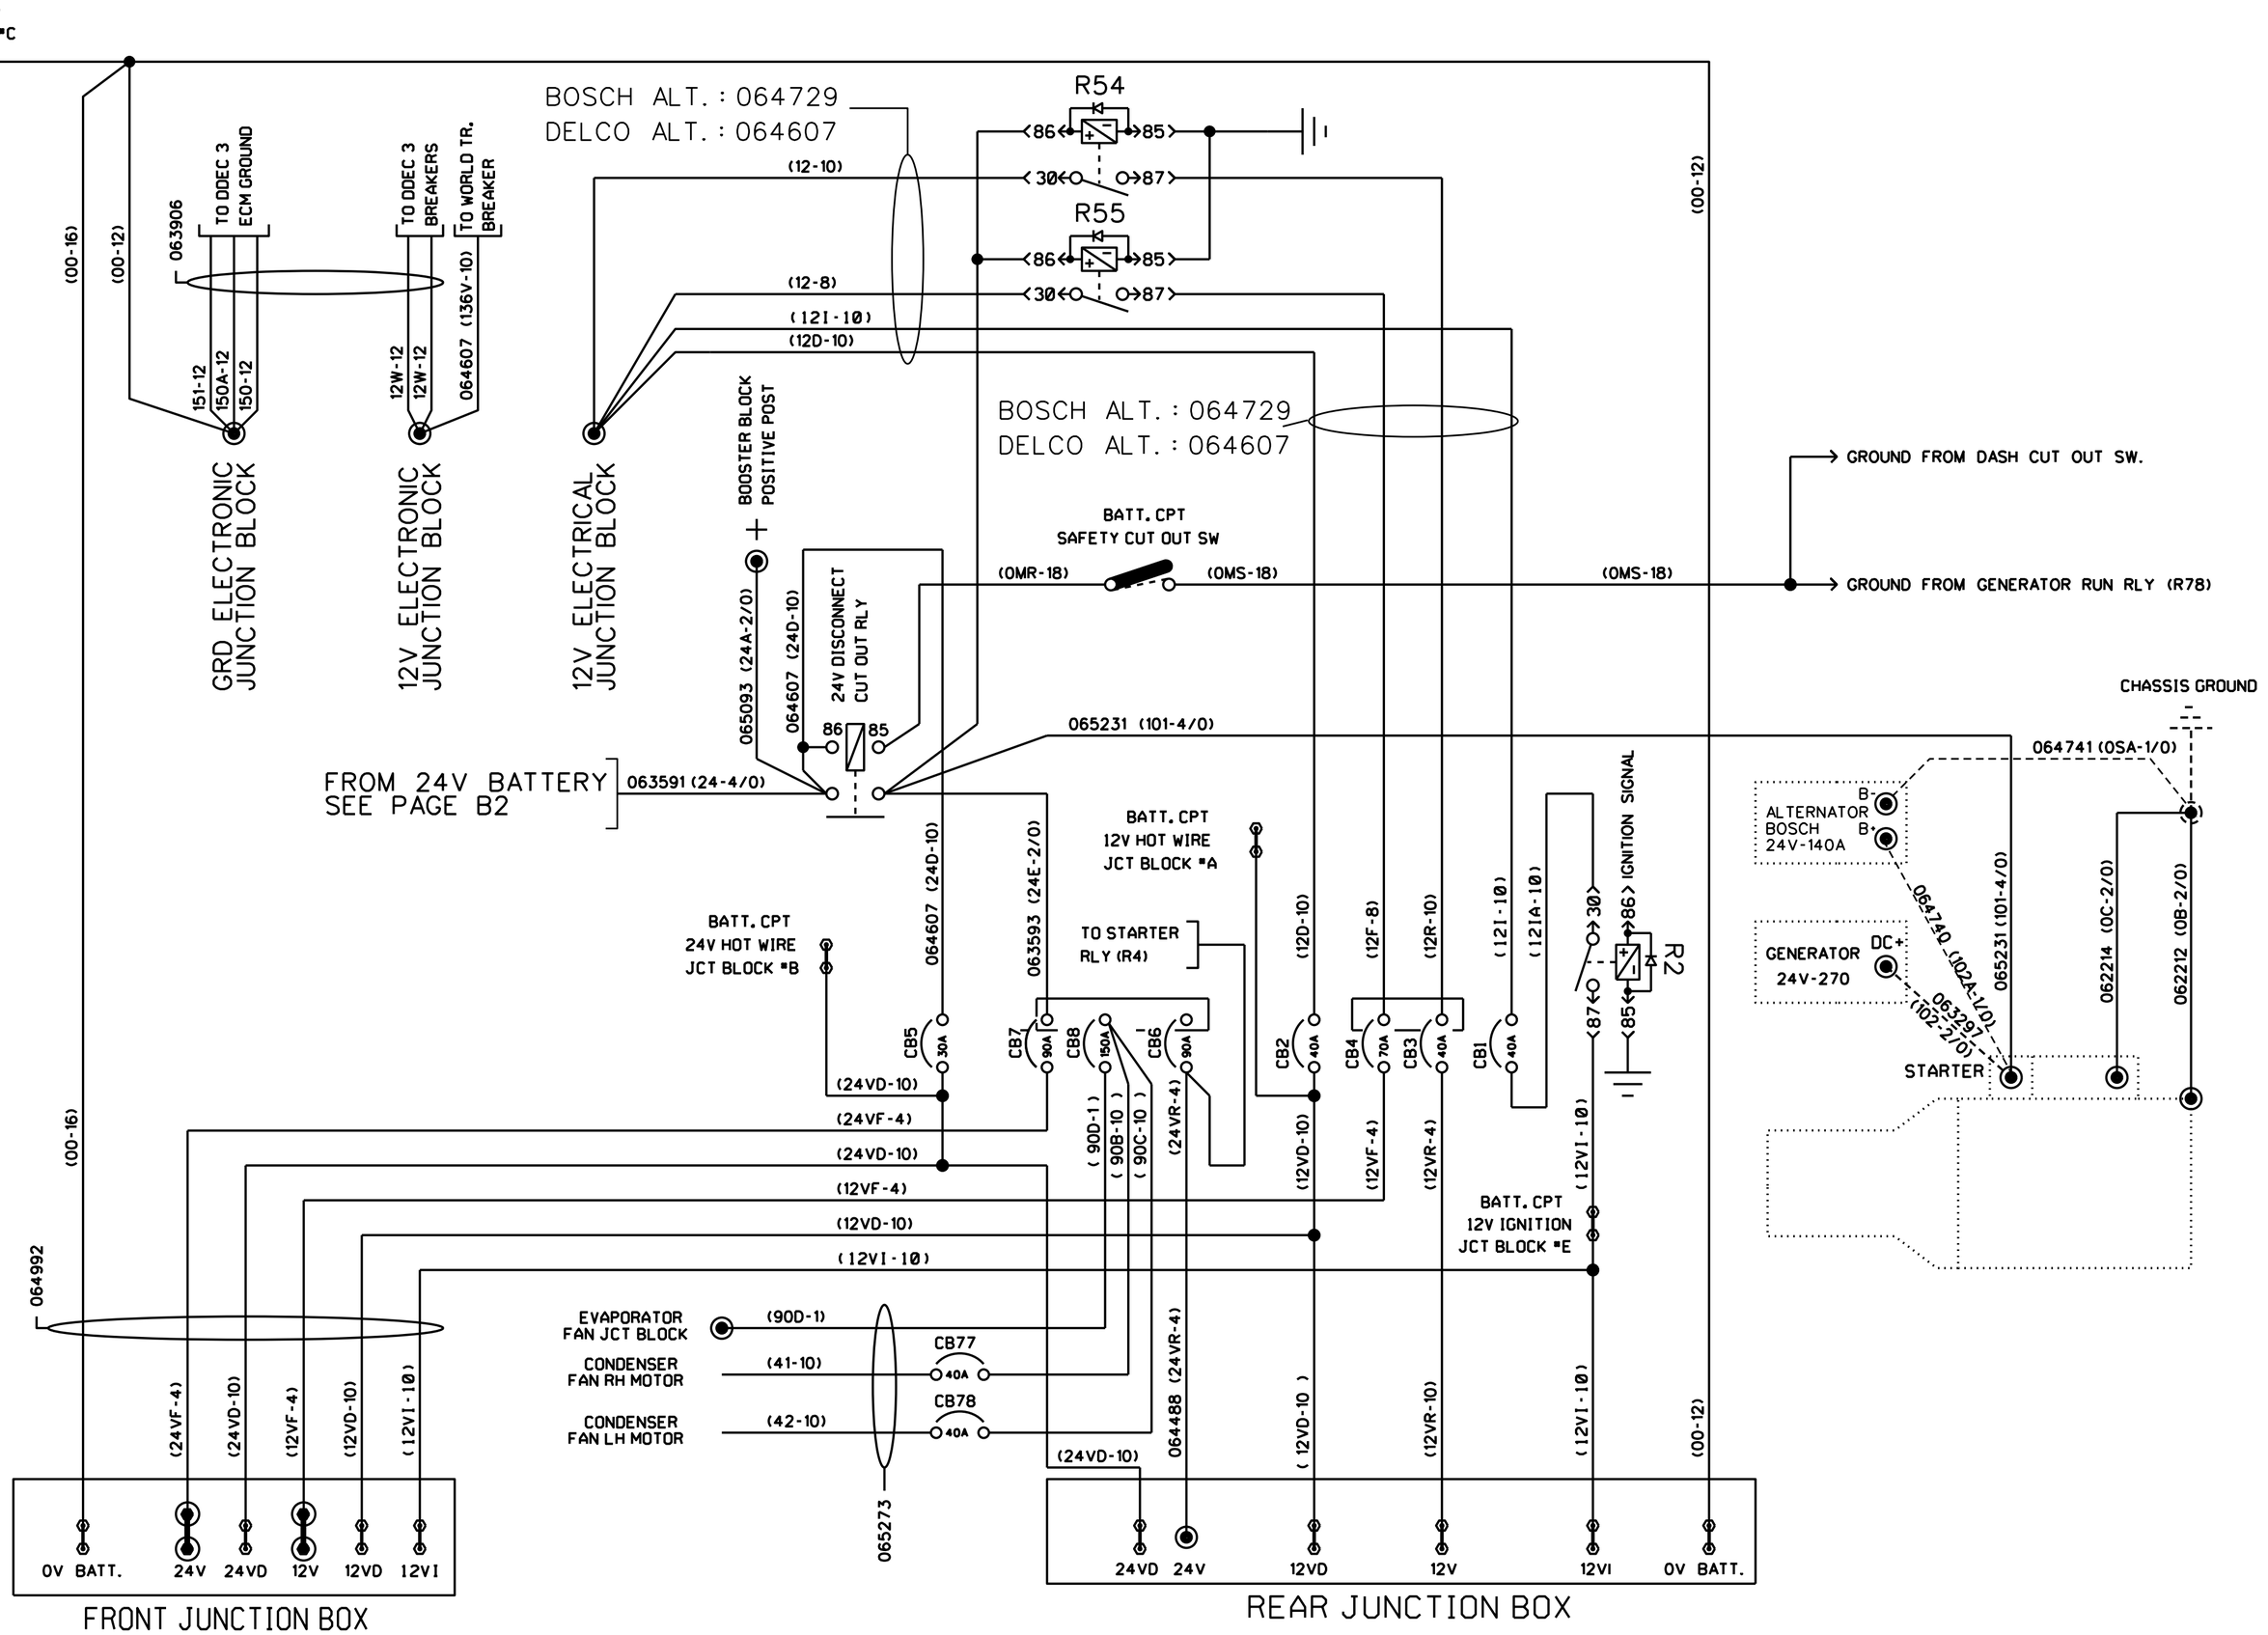

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: B1	REVISION 13

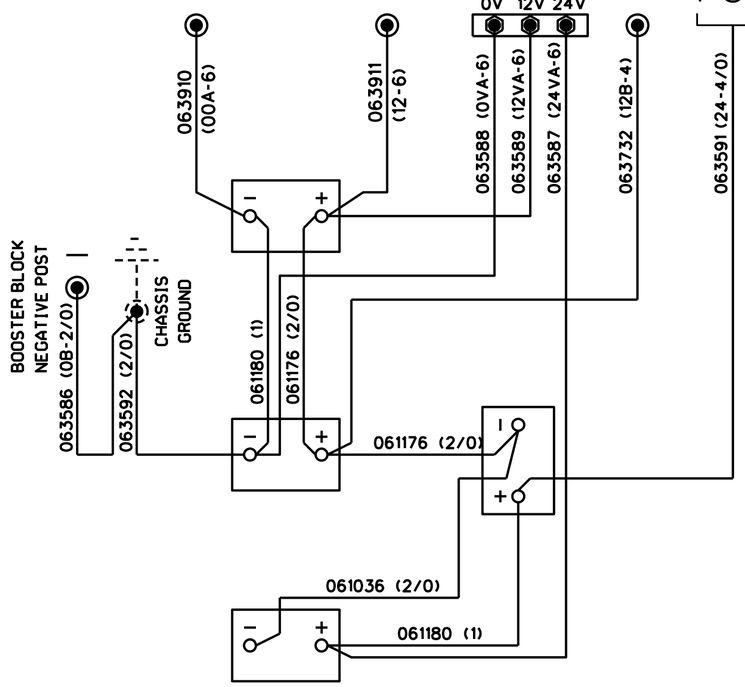

STANDARD BATTERIES

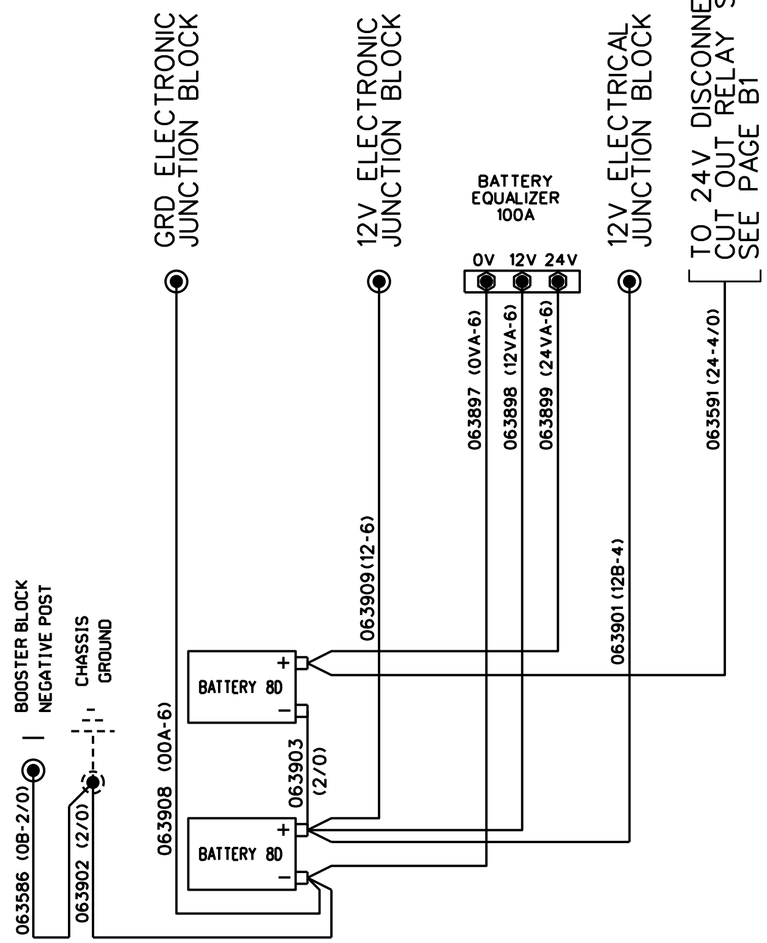

8D BATTERIES

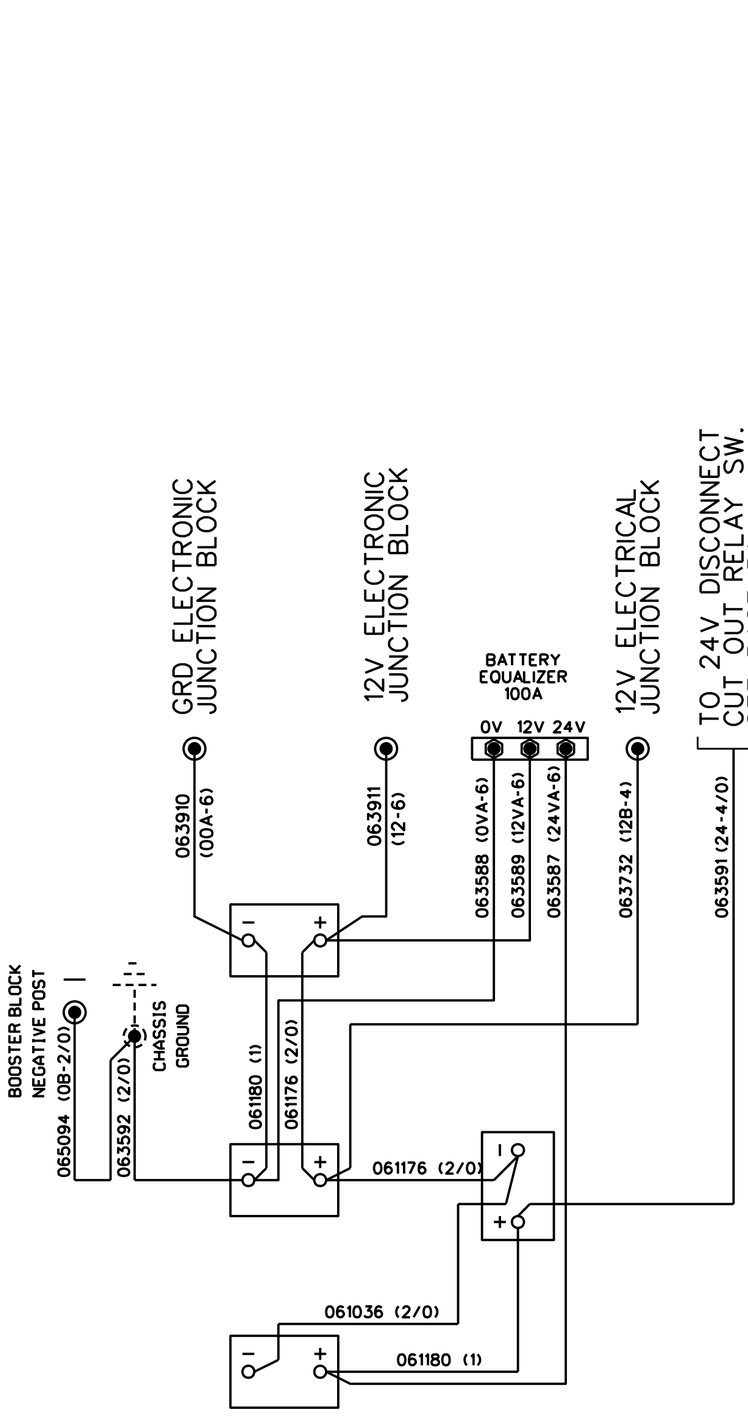

STANDARD BATTERIES

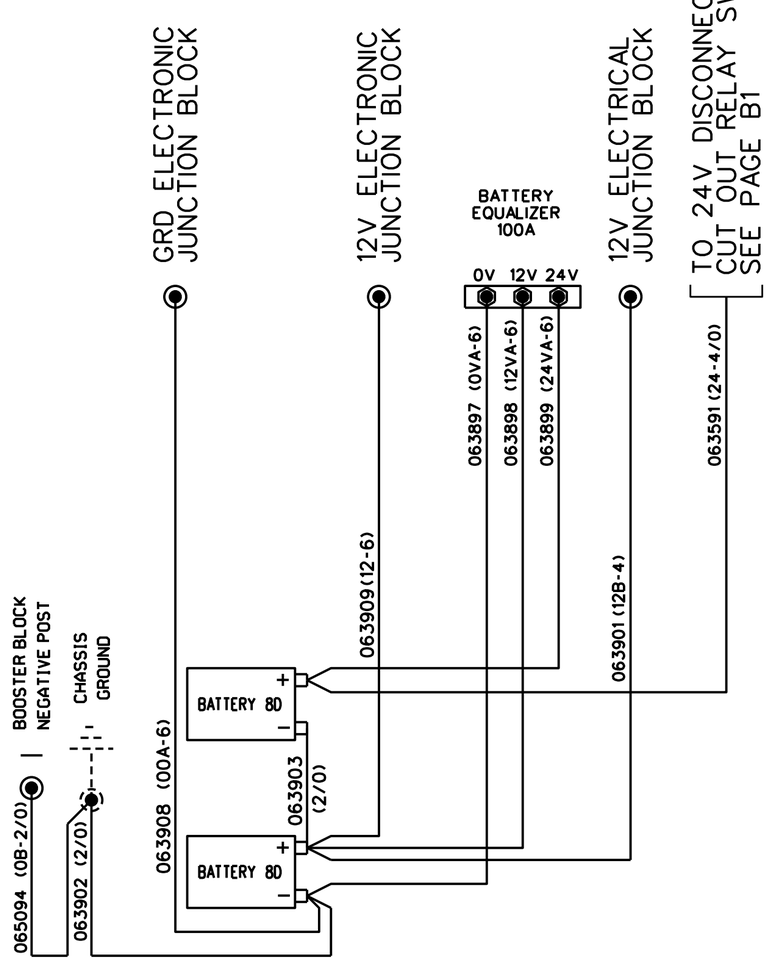

8D BATTERIES

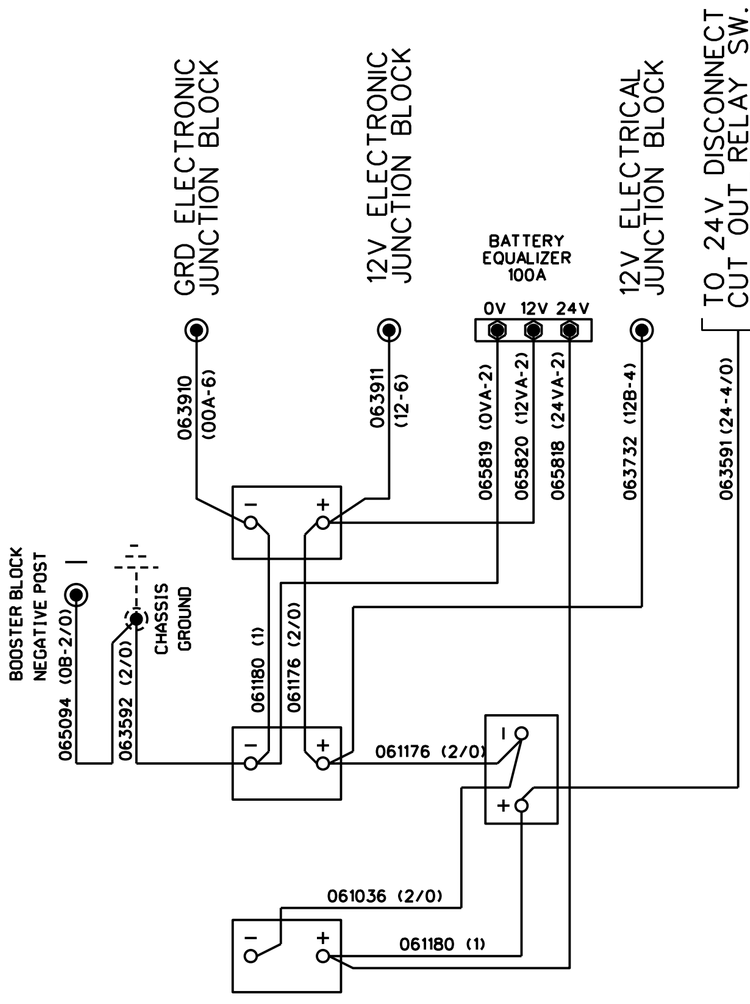

STANDARD BATTERIES

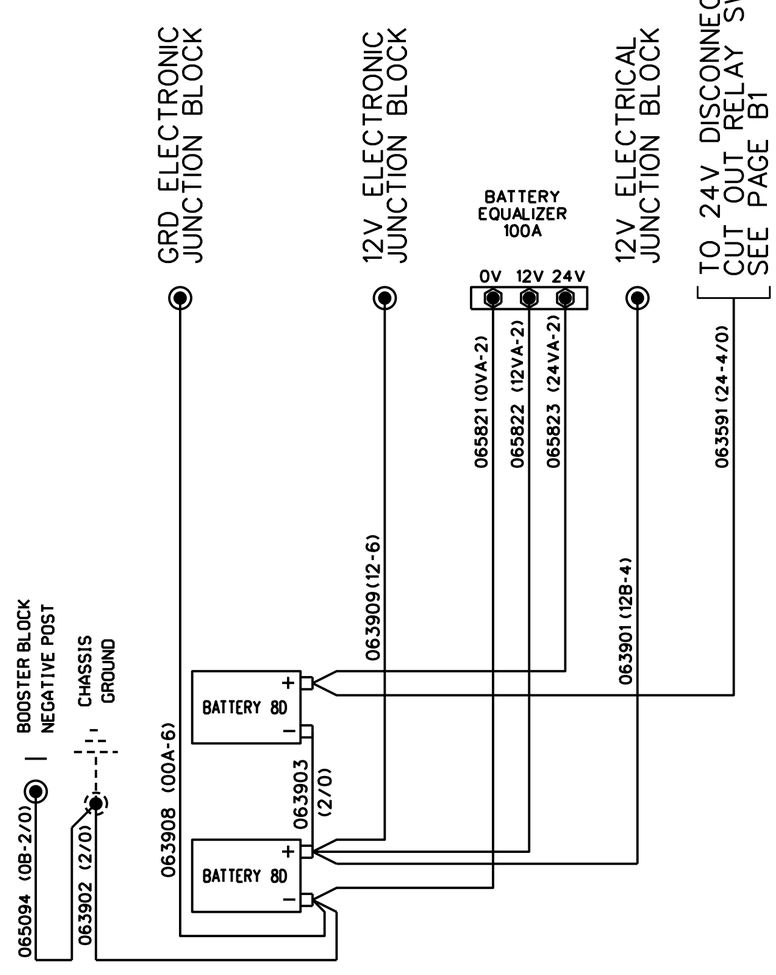

8D BATTERIES

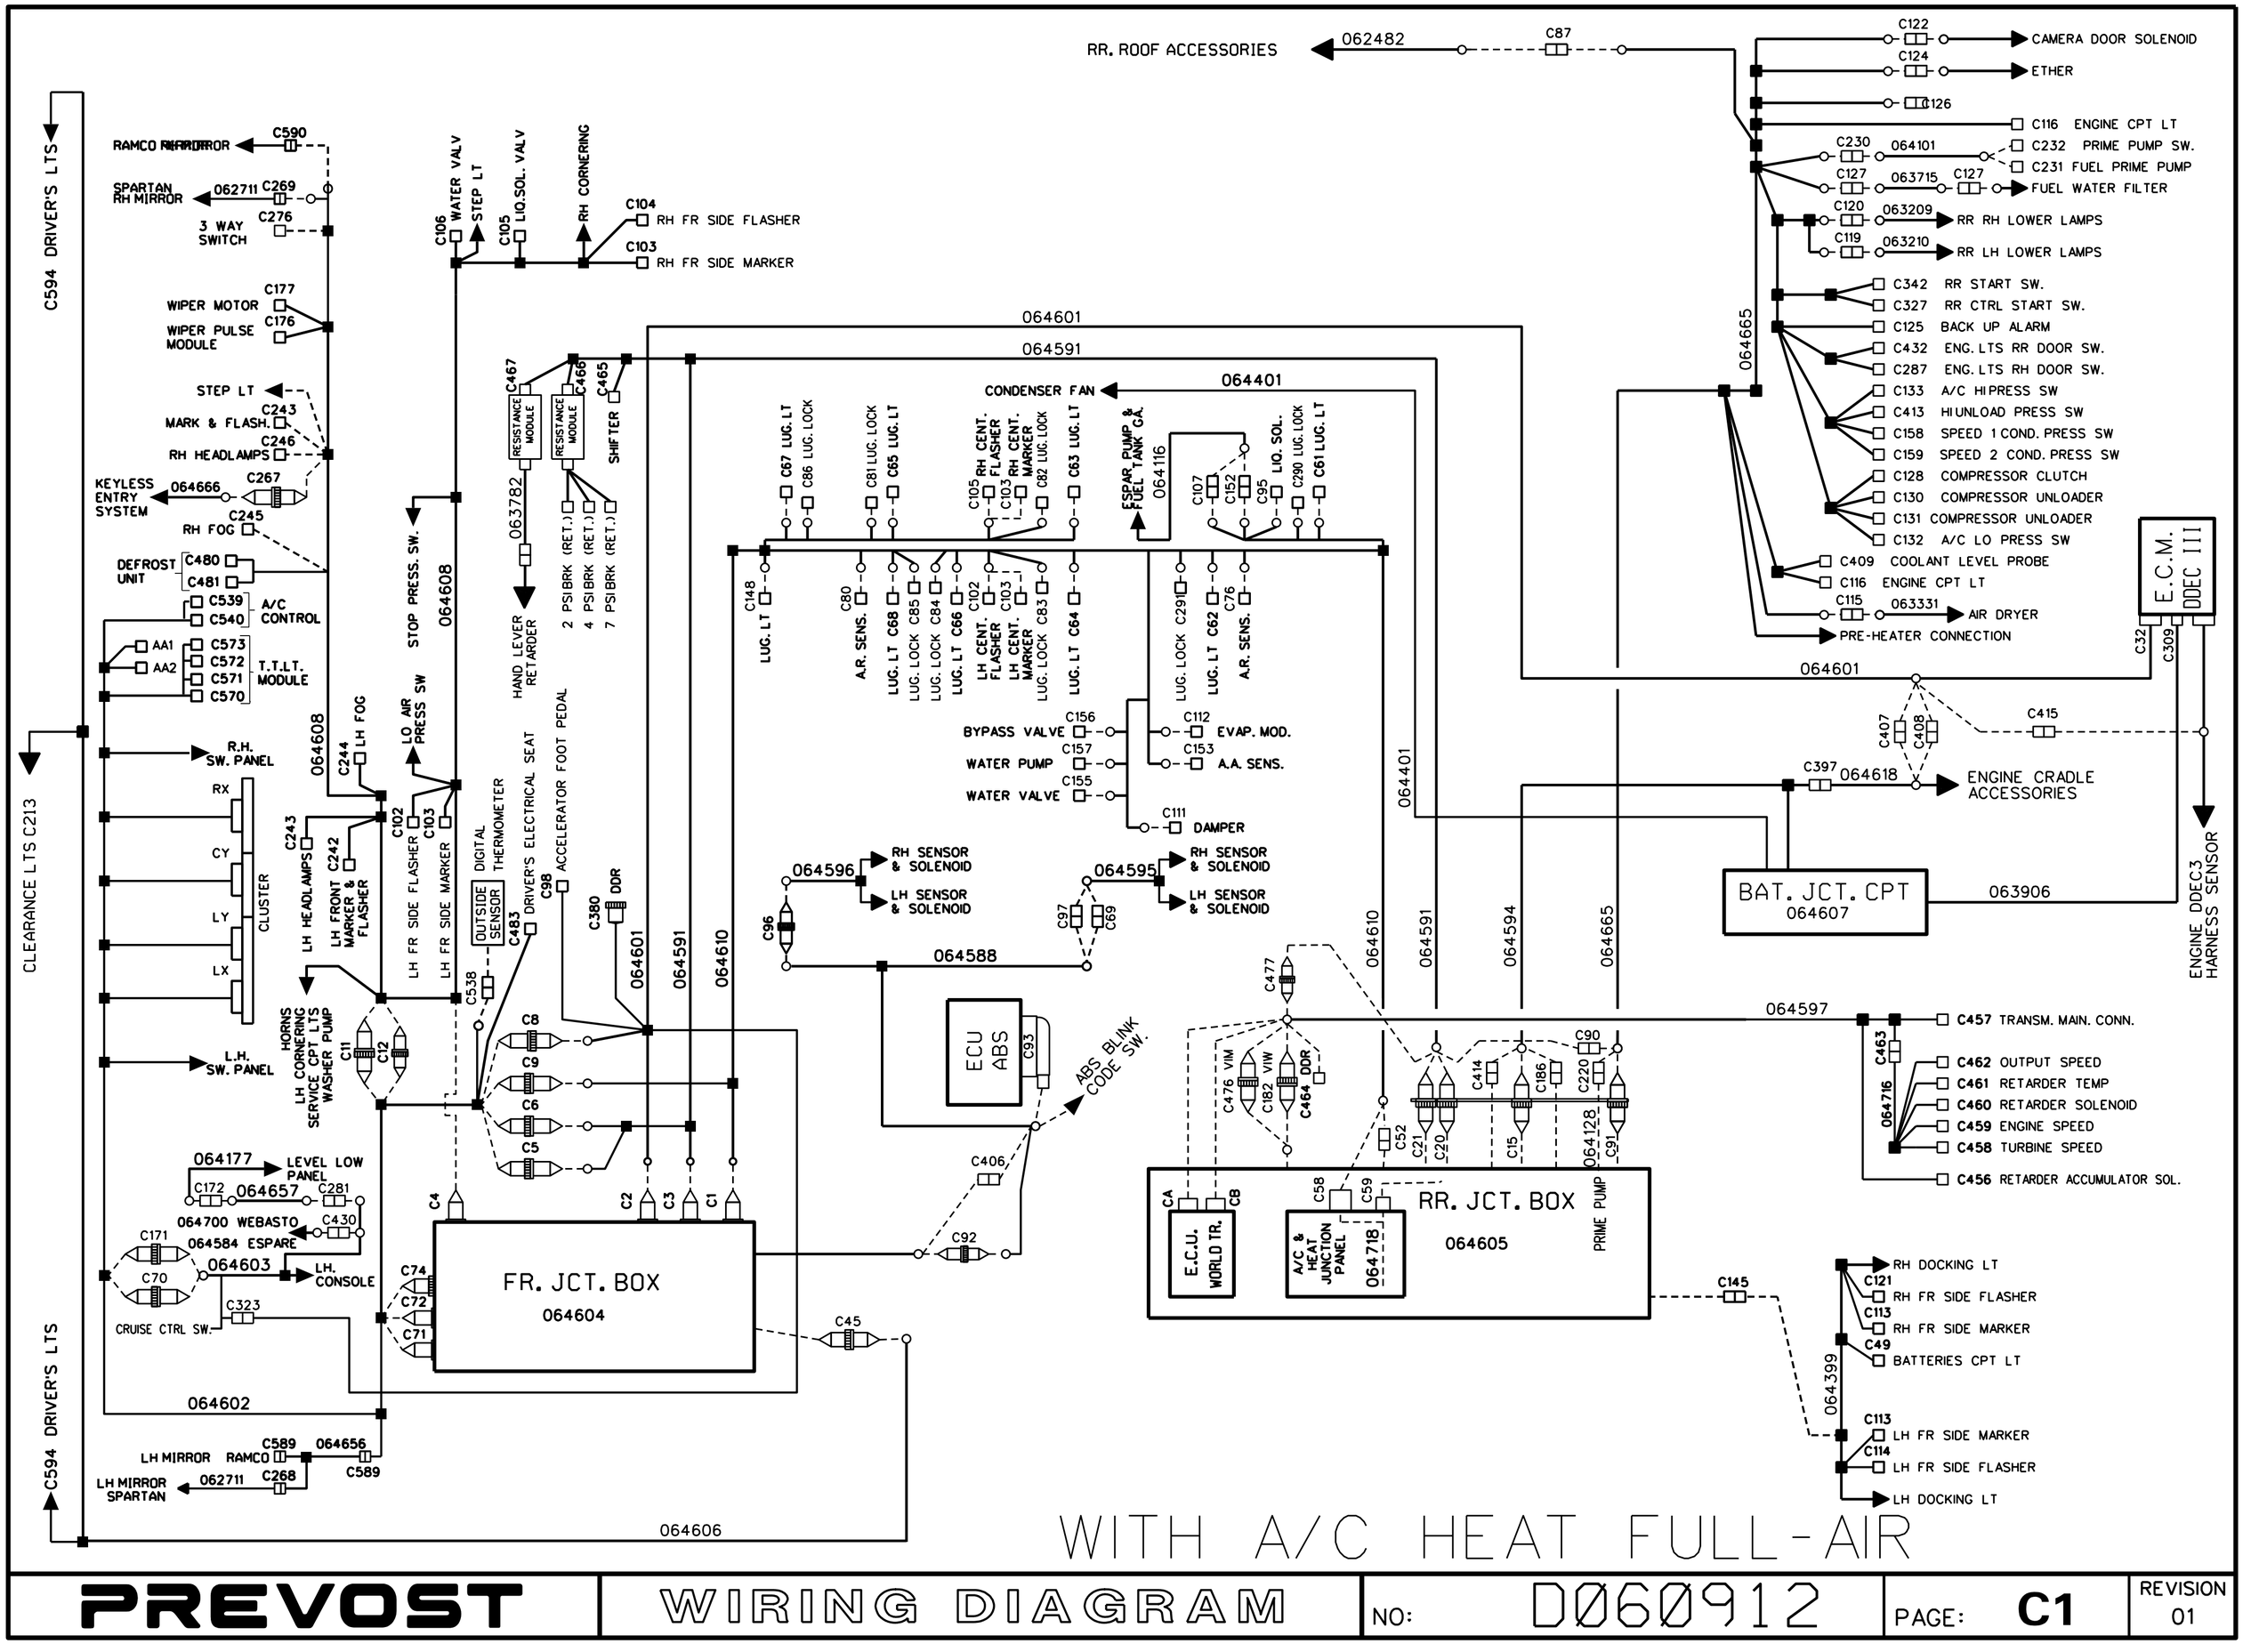

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C1	REVISION 01

RR. ROOF ACCESSORIES
062693
C87
C122 CAMERA DOOR SOLENOID
C124 ETHER
C126
C116 ENGINE CPT LT
C230 064101 C232 PRIME PUMP SW.
C231 FUEL PRIME PUMP
C127 063715 C127 FUEL WATER FILTER
C120 063209 RR RH LOWER LAMPS
C119 063210 RR LH LOWER LAMPS
064665
C342 RR START SW.
C327 RR CTRL START SW.
C125 BACK UP ALARM
C432 ENG. LTS RR DOOR SW.
C287 ENG. LTS RH DOOR SW.
C133 A/C HI PRESS SW
C413 HI UNLOAD PRESS SW
C158 SPEED 1 COND. PRESS SW
C159 SPEED 2 COND. PRESS SW
C128 COMPRESSOR CLUTCH
C130 COMPRESSOR UNLOADER
C131 COMPRESSOR UNLOADER
C132 A/C LO PRESS SW
C409 COOLANT LEVEL PROBE
C116 ENGINE CPT LT
C115 063331 AIR DRYER
PRE-HEATER CONNECTION
E.C.M. DDEC III
C32
C309
064601
C407 C408
C415
C397 064618 ENGINE CRADLE ACCESSORIES
BAT. JCT. CPT 064607
063906
ENGINE DDEC3 HARNESS SENSOR
C594 DRIVER'S LTS
CLEARANCE LTS C213
RAMCO MIRROR C590
SPARTAN RH MIRROR 062711 C269
3 WAY SWITCH C276
WIPER MOTOR C177
WIPER PULSE MODULE C176
STEP LT
MARK & FLASH. C243
RH HEADLAMPS C246
KEYLESS ENTRY SYSTEM 064666 C267
RH FOG C245
DEFROST UNIT C480 C481
A/C CONTROL C539 C540
T.T.LT. MODULE AA1 AA2 C573 C572 C571 C570
R.H. SW. PANEL
RX
CY
LY
LX
CLUSTER
L.H. SW. PANEL
C213
C106 WATER VALV
C105 LIO.SOL. VALV
RH CORNERING
C104 RH FR SIDE FLASHER
C103 RH FR SIDE MARKER
STOP PRESS. SW.
064608
LO AIR PRESS SW
C244 LH FOG
C243 LH HEADLAMPS
C242 LH FRONT MARKER & FLASHER
C102 LH FR SIDE FLASHER
C103 LH FR SIDE MARKER
DIGITAL THERMOMETER
OUTSIDE SENSOR
C538
DRIVER'S ELECTRICAL SEAT
C483
ACCELERATOR
C98
C380 DDR
064601
064591
064610
HORNS
LH CORNERING
SERVICE CPT LTS
WASHER PUMP
C11 C12
C8 C9 C6 C5
C4 C2 C3 C1
C467 C466 C465
RESISTANCE MODULE
RESISTANCE MODULE
SHIFTER
063782
HAND LEVER RETARDER
2 PSI BRK (RET.)
4 PSI BRK (RET.)
7 PSI BRK (RET.)
064401
CONDENSER FAN
C67 LUG. LT
C86 LUG. LOCK
C81 LUG. LOCK
C65 LUG. LT
C105 RH CENT. FLASHER
C103
C82 LUG. LOCK
C103 RH CENT. MARKER
C63 LUG. LT
ESPAR. PUMP & FUEL TANK GA.
064116
C107
C152
C95
LIQ. SOL.
C290 LUG. LOCK
C61 LUG. LT
C148 LUG. LT
C80 A.R. SENS.
LUG. LT C68
LUG. LOCK C85
LUG. LOCK C84
LUG. LT C66
LH CENT. FLASHER C102
LH CENT. MARKER C103
LUG. LOCK C83
LUG. LT C64
LUG. LOCK C291
LUG. LT C62
C76 A.R. SENS.
C156 BYPASS VALVE
C157 WATER PUMP
C155 WATER VALVE
C112 EVAP. MOD.
C153 A.A. SENS.
C111 DAMPER
064596 RH SENSOR & SOLENOID LH SENSOR & SOLENOID
064595 RH SENSOR & SOLENOID LH SENSOR & SOLENOID
C96
C97 C69
064588
ECU ABS
C93
ABS BLINK CODE SW.
C406
C92
C45
FR. JCT. BOX
064604
C74 C72 C71
064177 LEVEL LOW PANEL
C172 064657 C281
064700 WEBASTO C430
064584 ESPARE
C171 C70
064603 LH. CONSOLE
C323
CRUISE CTRL SW.
064602
C589 064656 C589
LH MIRROR RAMCO
LH MIRROR SPARTAN 062711 C268
064645
C594 DRIVER'S LTS
064610
064591
064868
064665
064401
C477
064597
C476 VIM
C182 VIW
C464 DDR
C414
C186
C90
C220
064128
C91
C52
C21
C20
C15
C58
C59
CA
CB
E.C.U. WORLD TR.
A/C & HEAT JUNCTION PANEL
064718
RR. JCT. BOX
064862
PRIME PUMP
C145
C463
064716
C457 TRANSM. MAIN. CONN.
C462 OUTPUT SPEED
C461 RETARDER TEMP
C460 RETARDER SOLENOID
C459 ENGINE SPEED
C458 TURBINE SPEED
C456 RETARDER ACCUMULATOR SOL.
064399
RH DOCKING LT
C121 RH FR SIDE FLASHER
C113 RH FR SIDE MARKER
C49 BATTERIES CPT LT
C113 LH FR SIDE MARKER
C114 LH FR SIDE FLASHER
LH DOCKING LT

WITH A/C HEAT FULL-AIR

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C1	REVISION 02

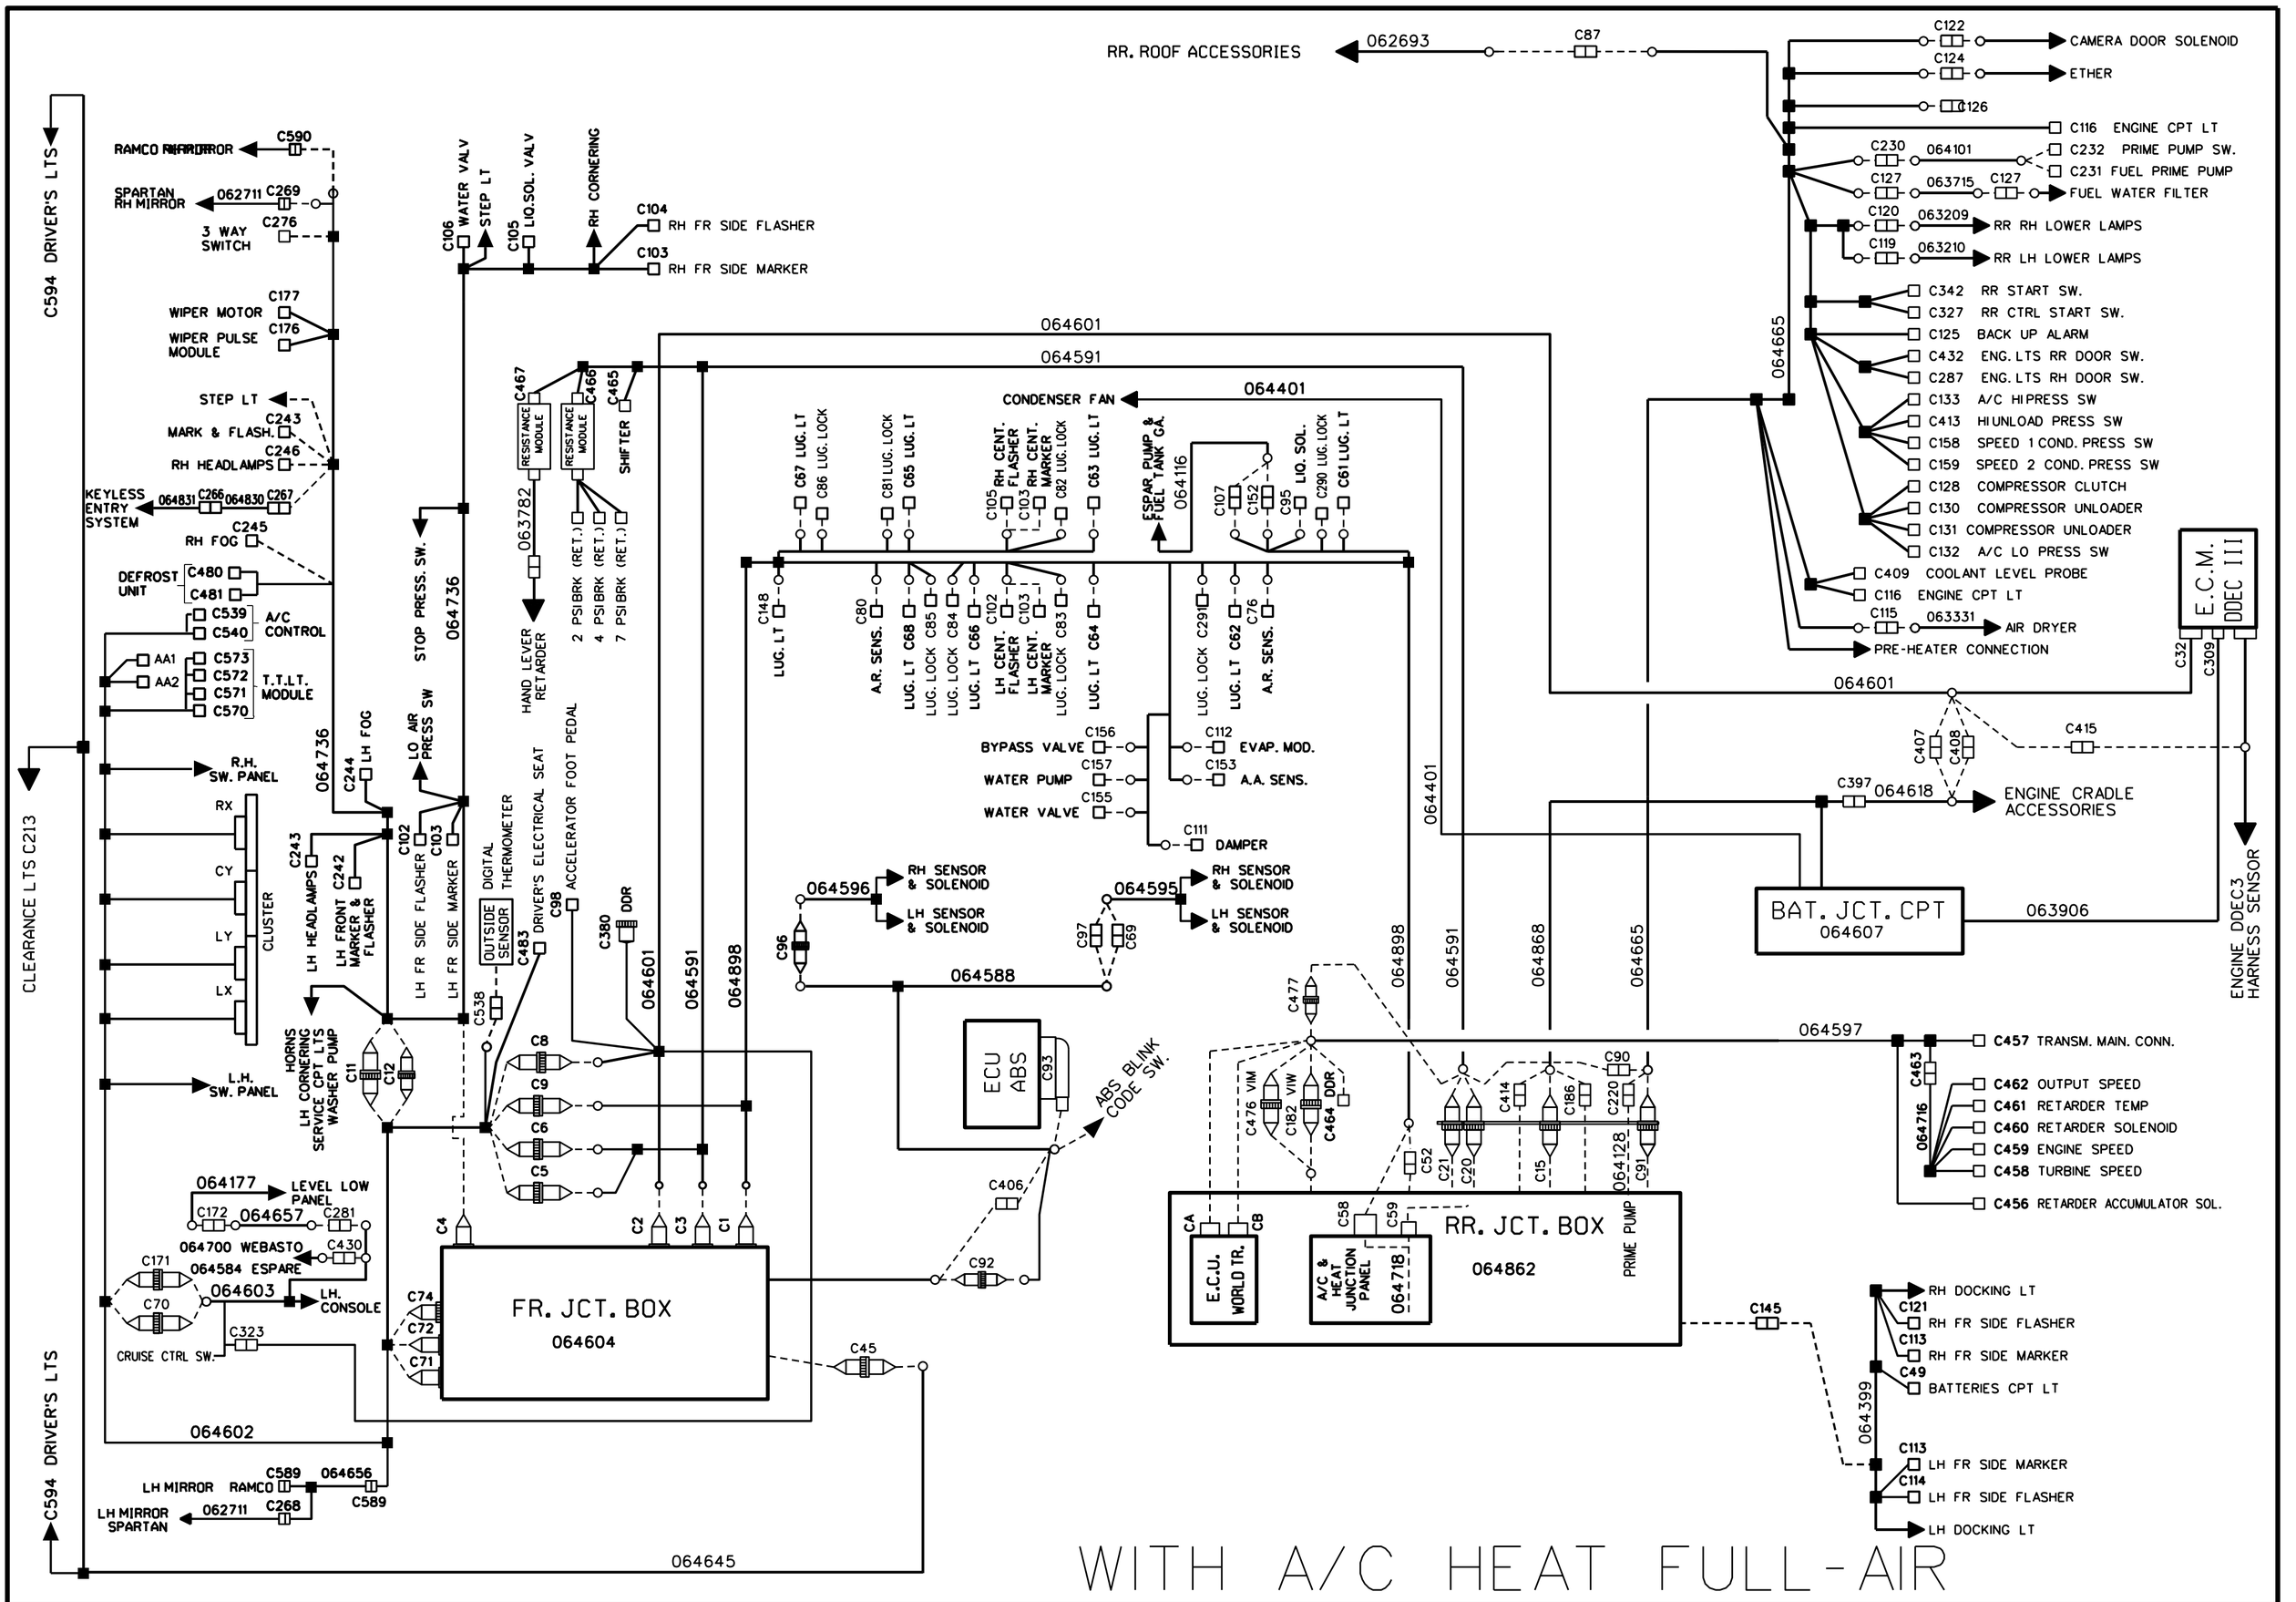

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C1	REVISION 04

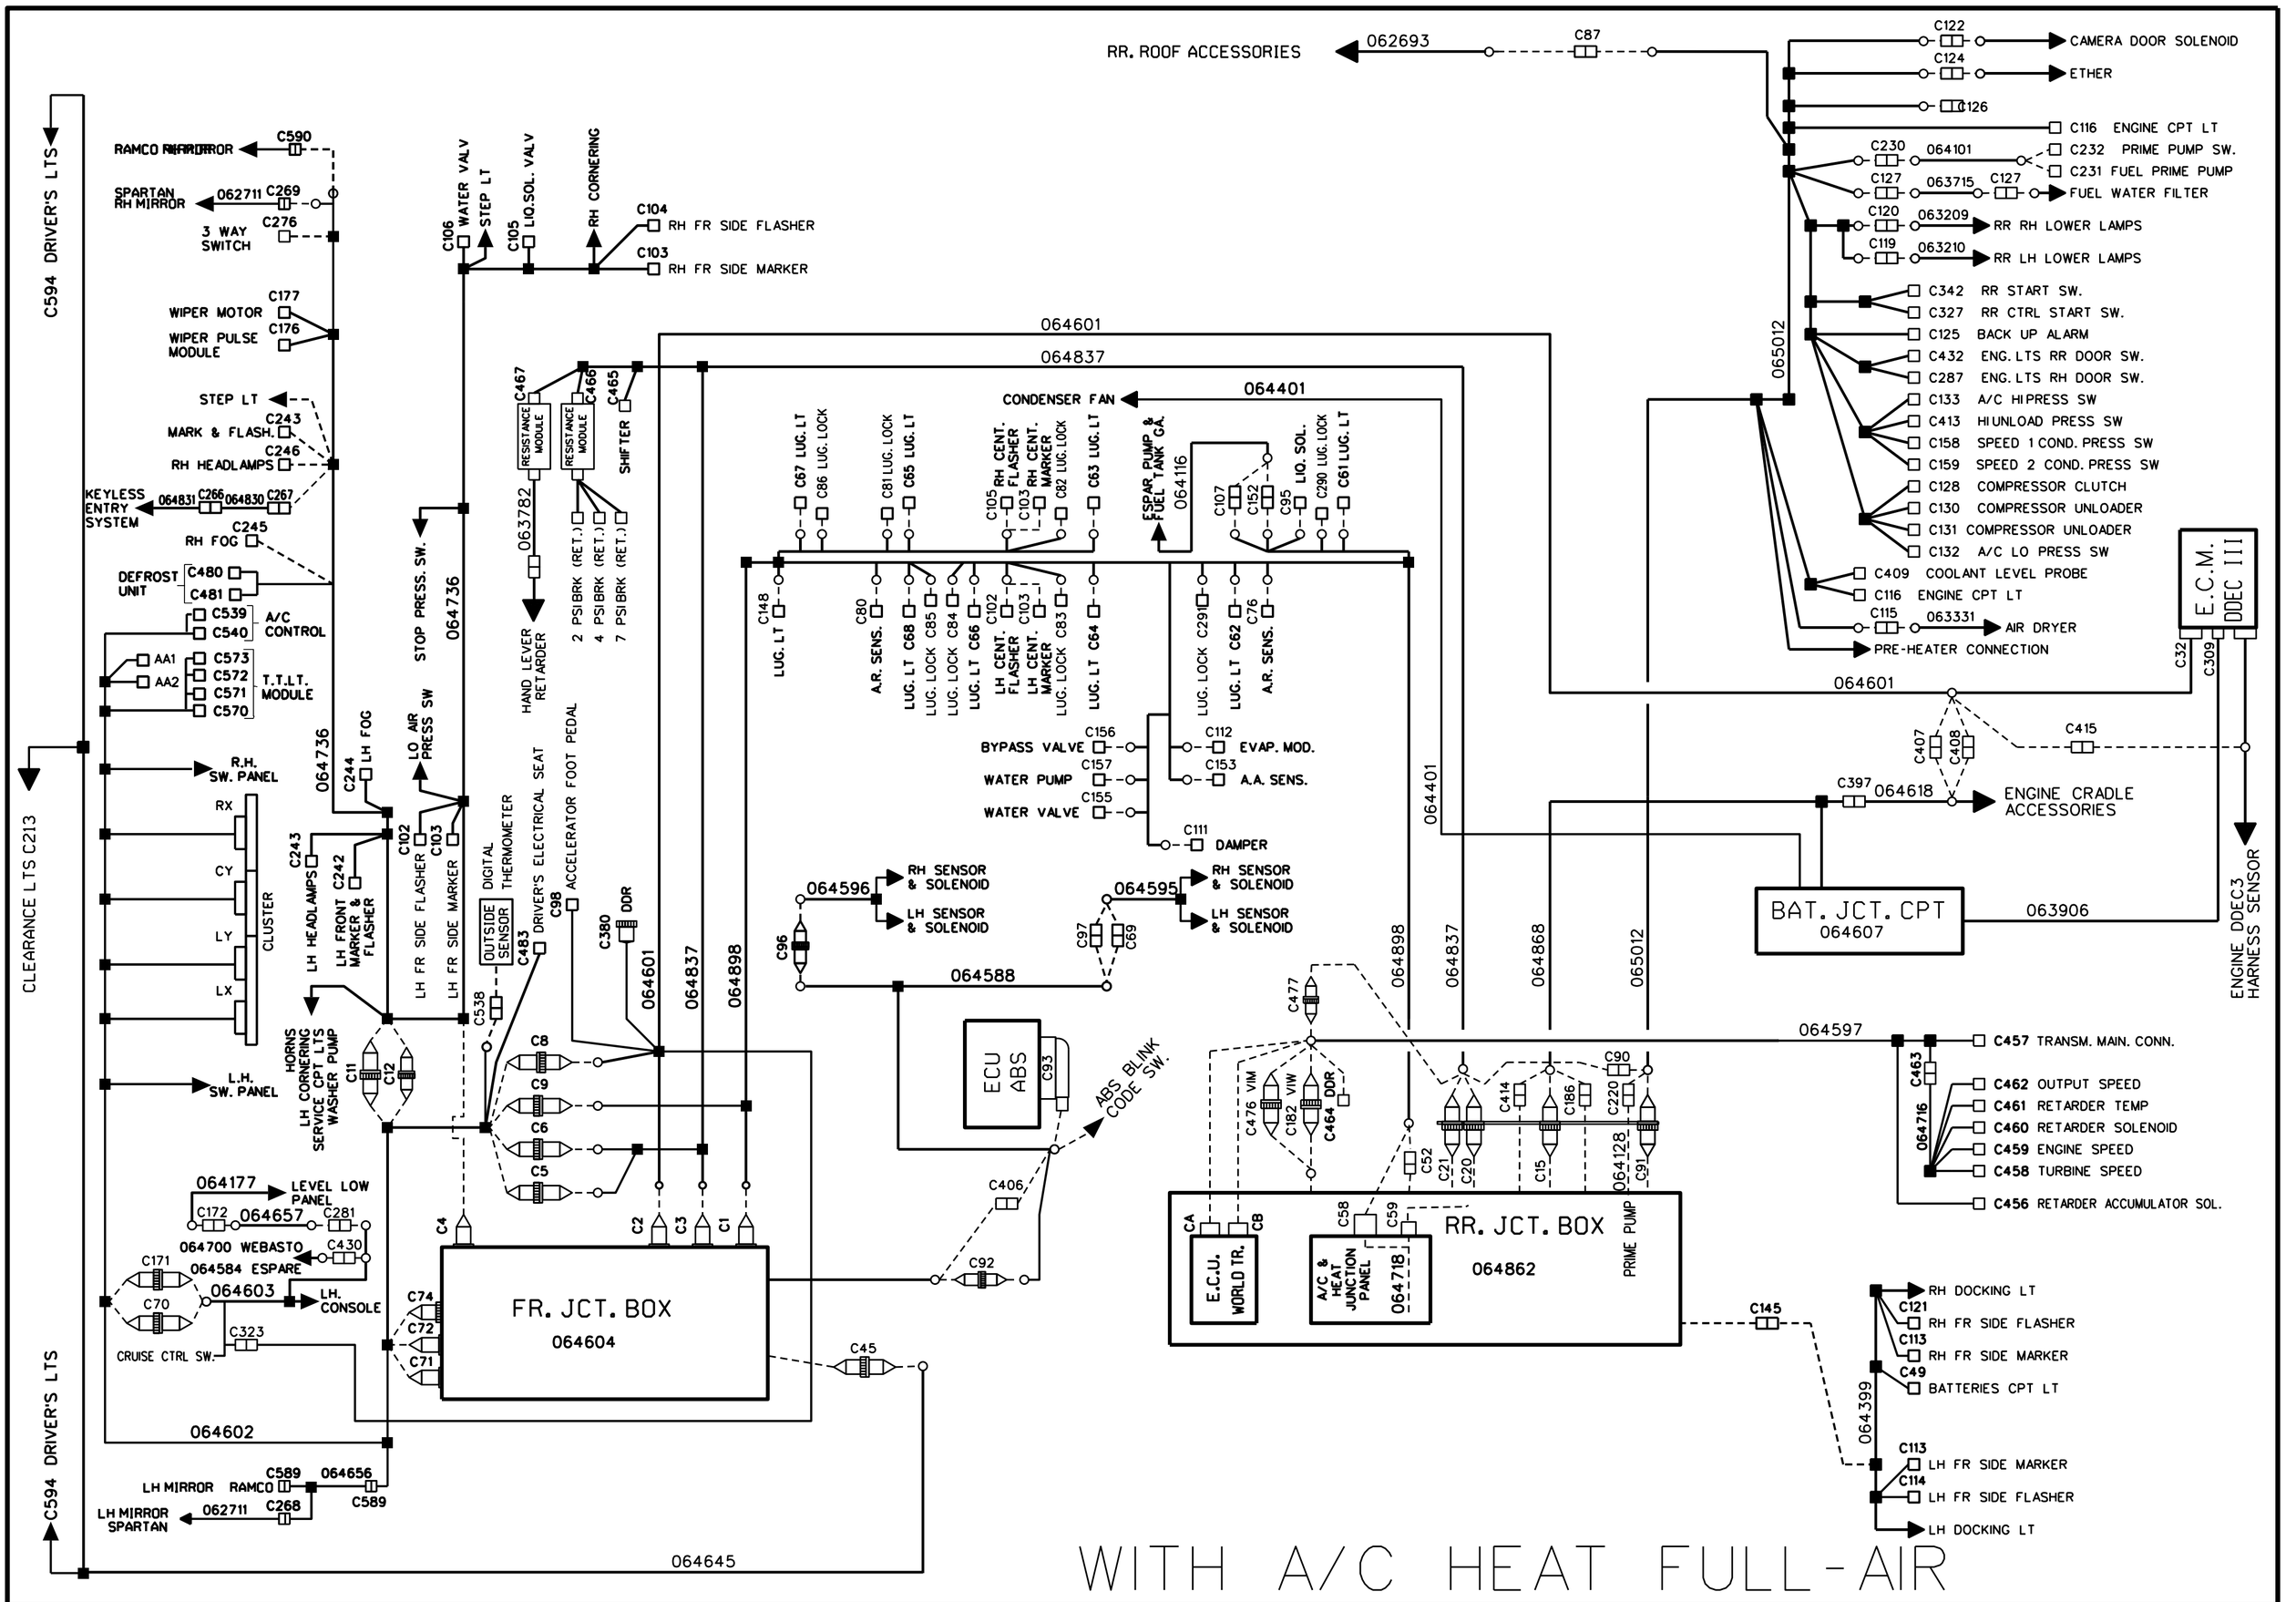

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C1	REVISION 08

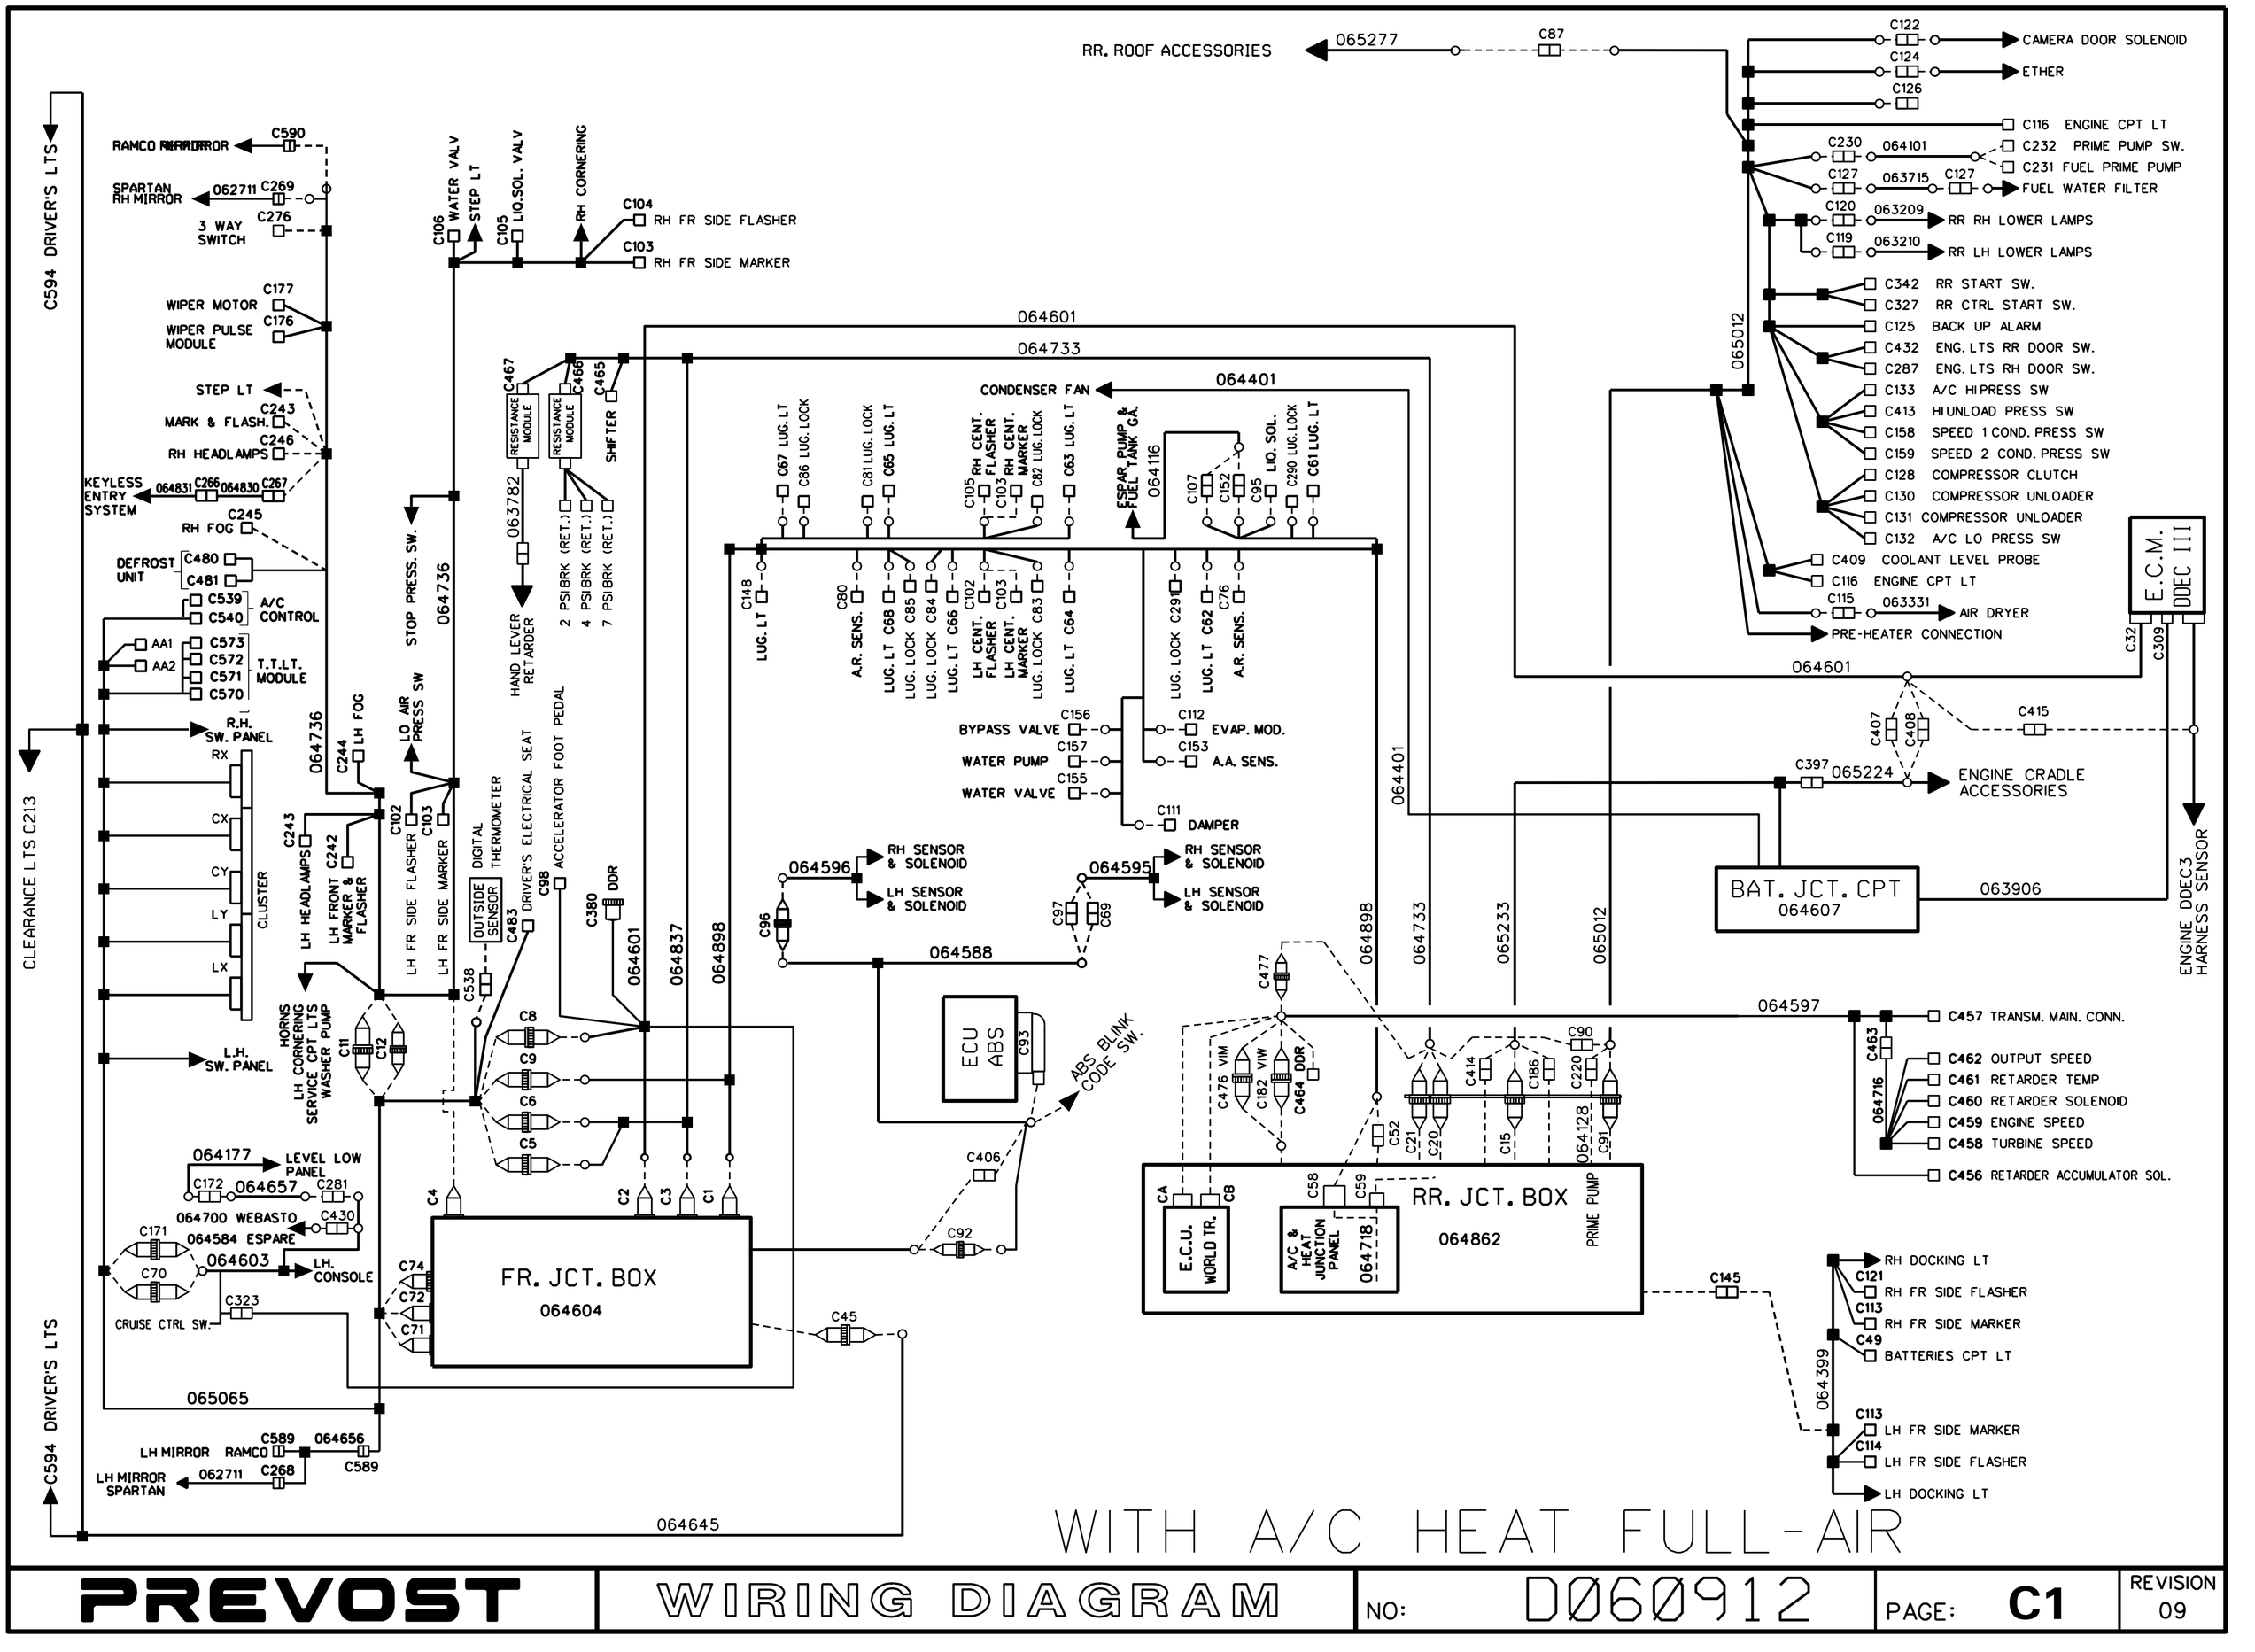

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C1	REVISION 09

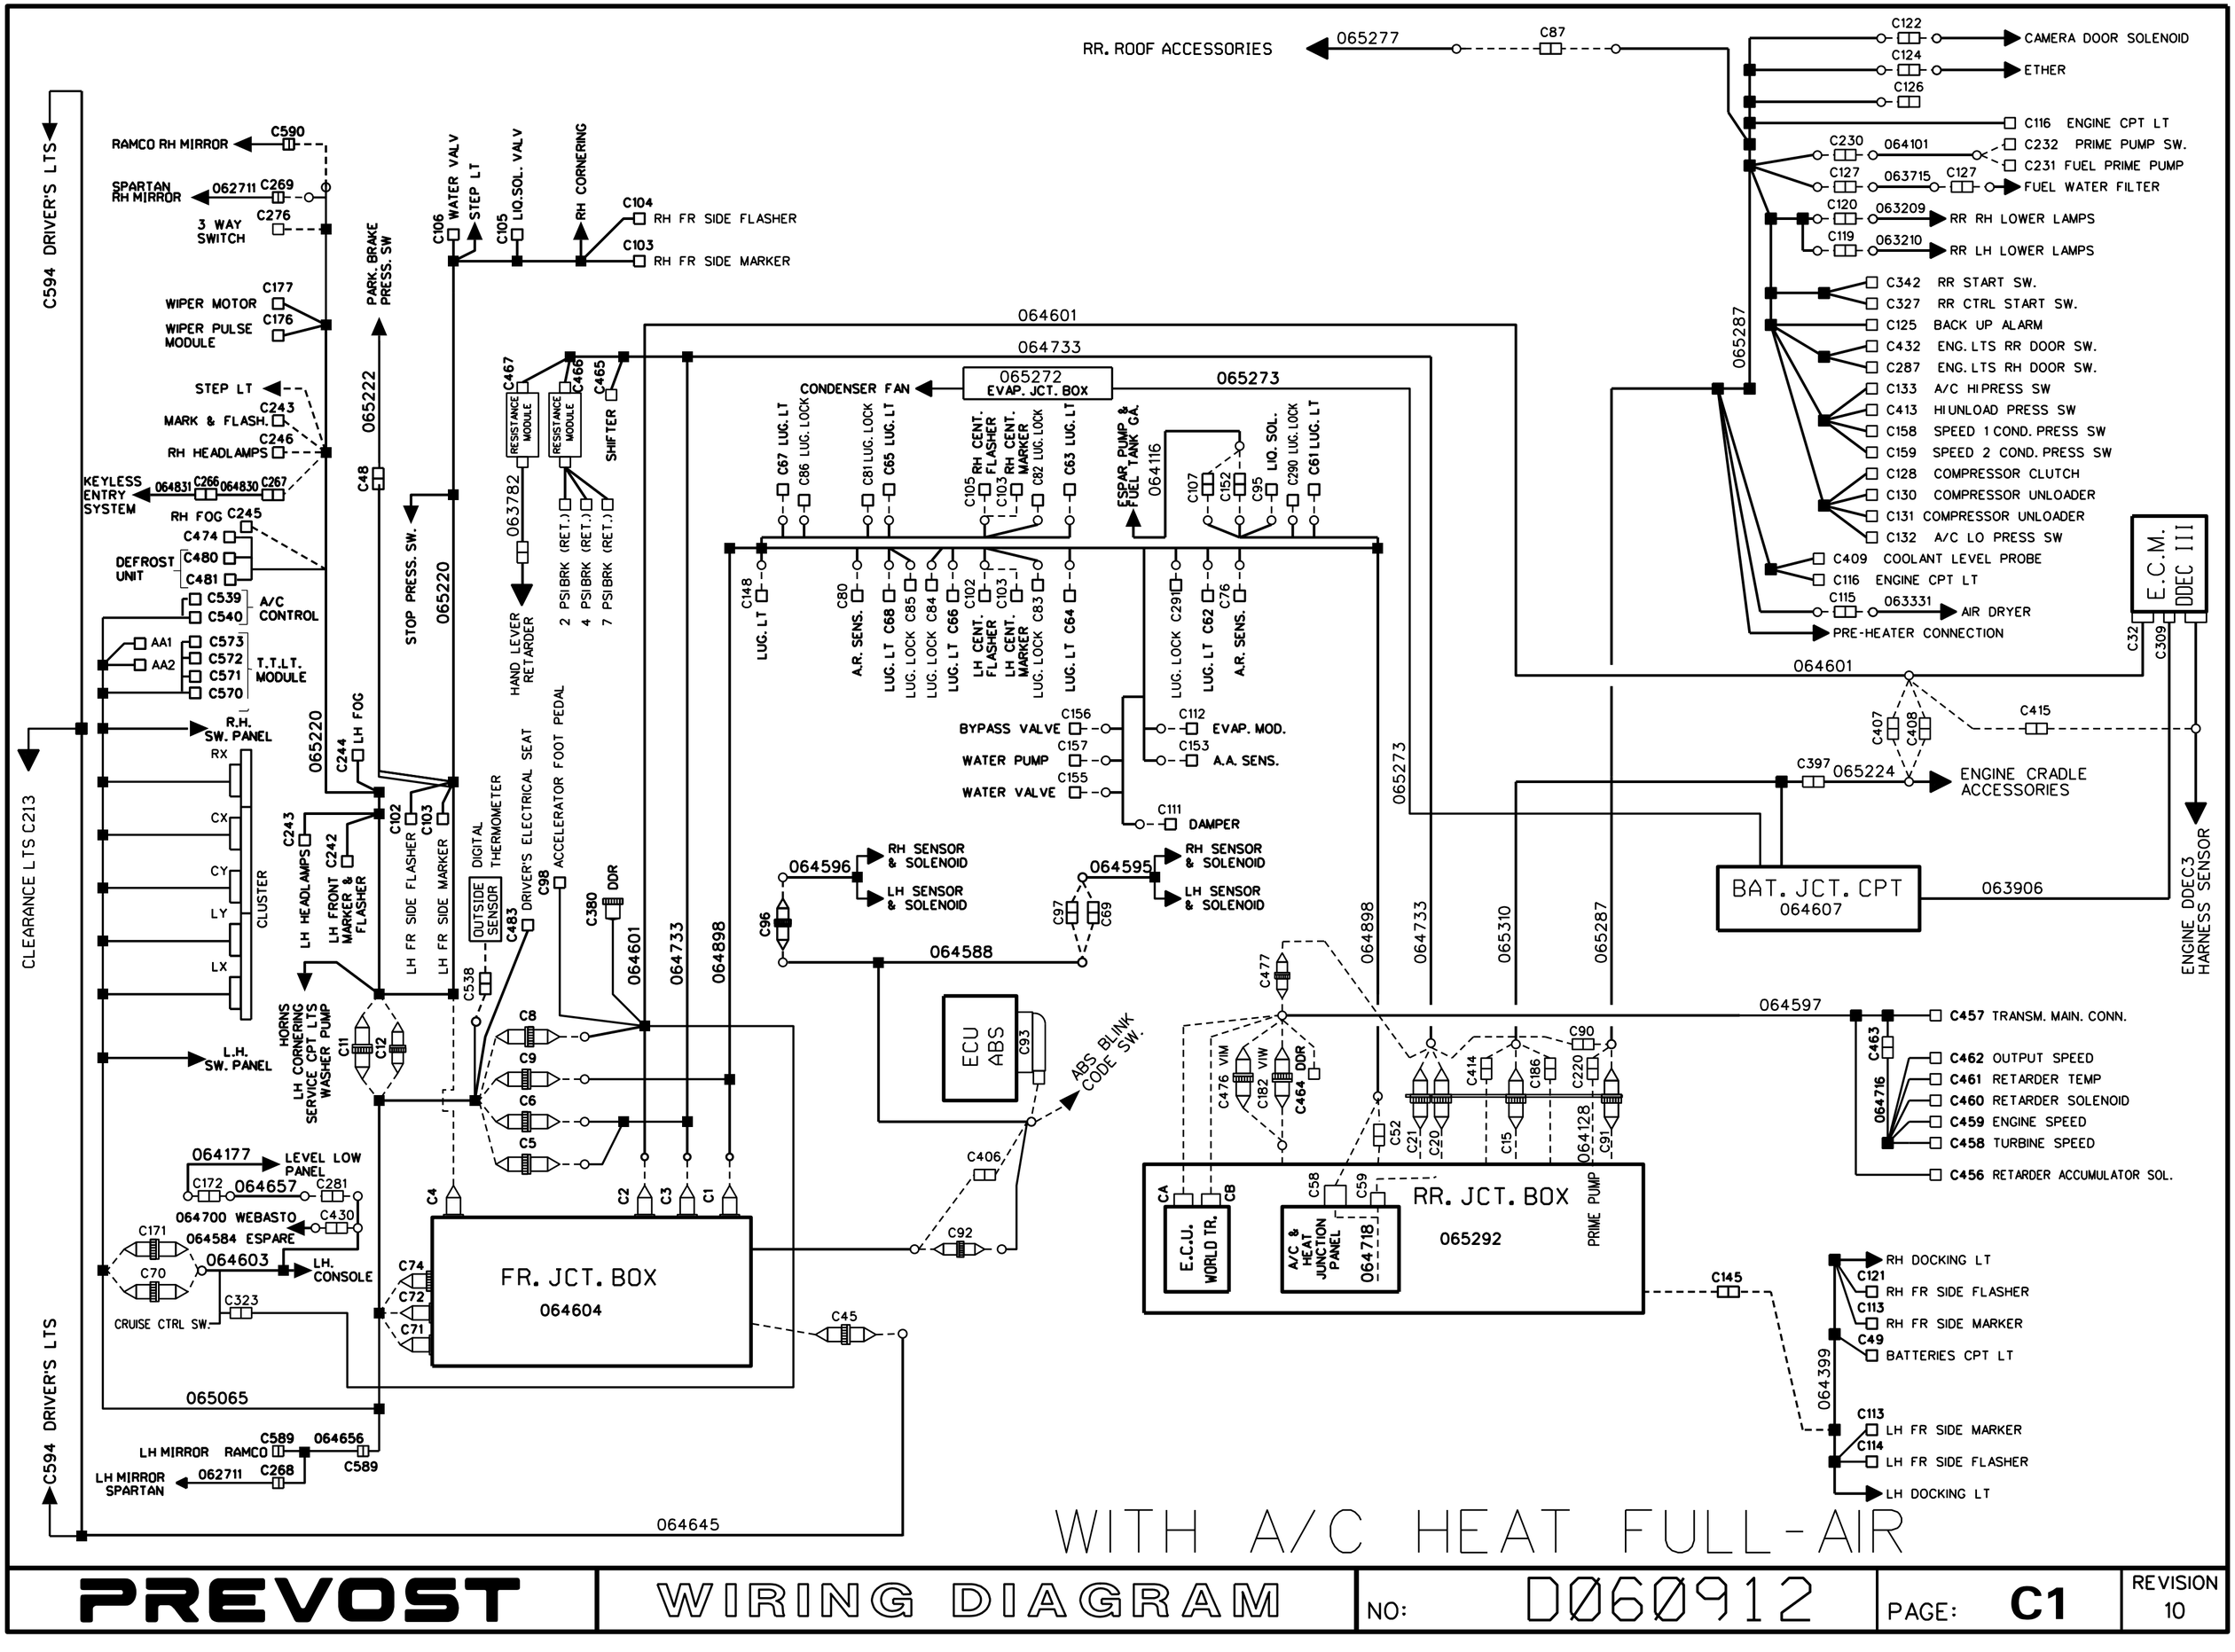

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C1	REVISION 10

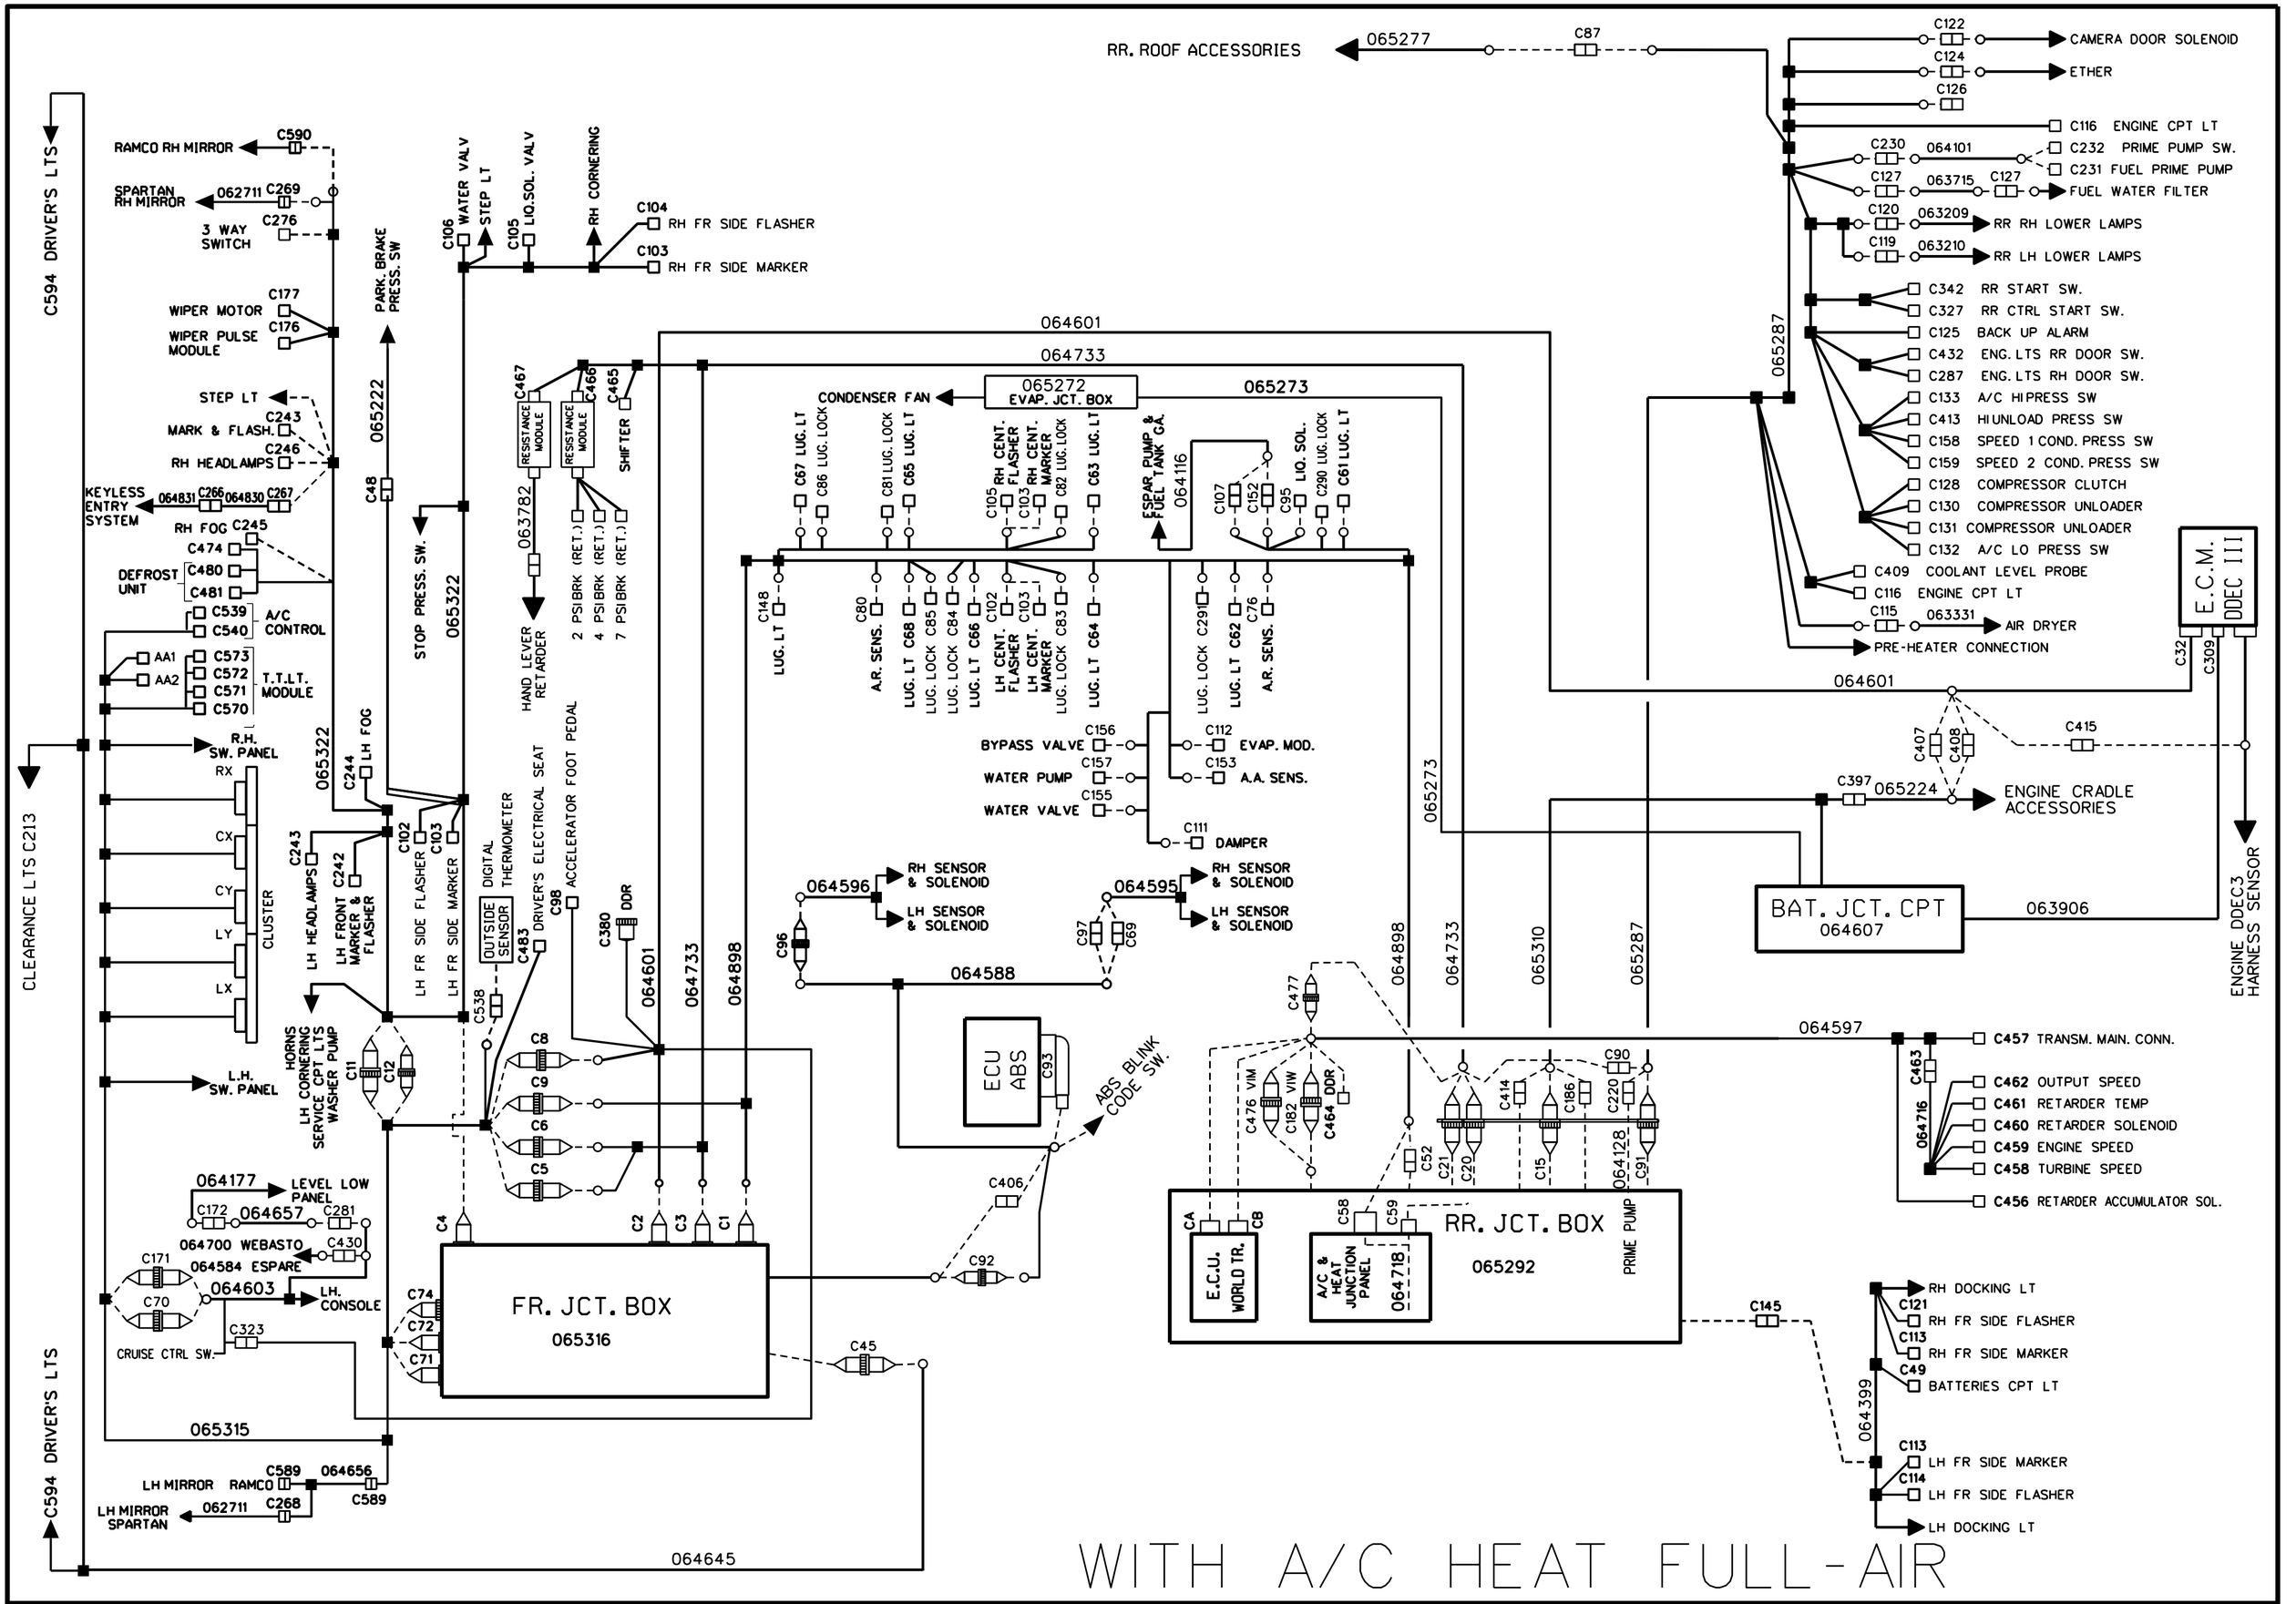

WITH A/C HEAT FULL-AIR

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C1	REVISION 11

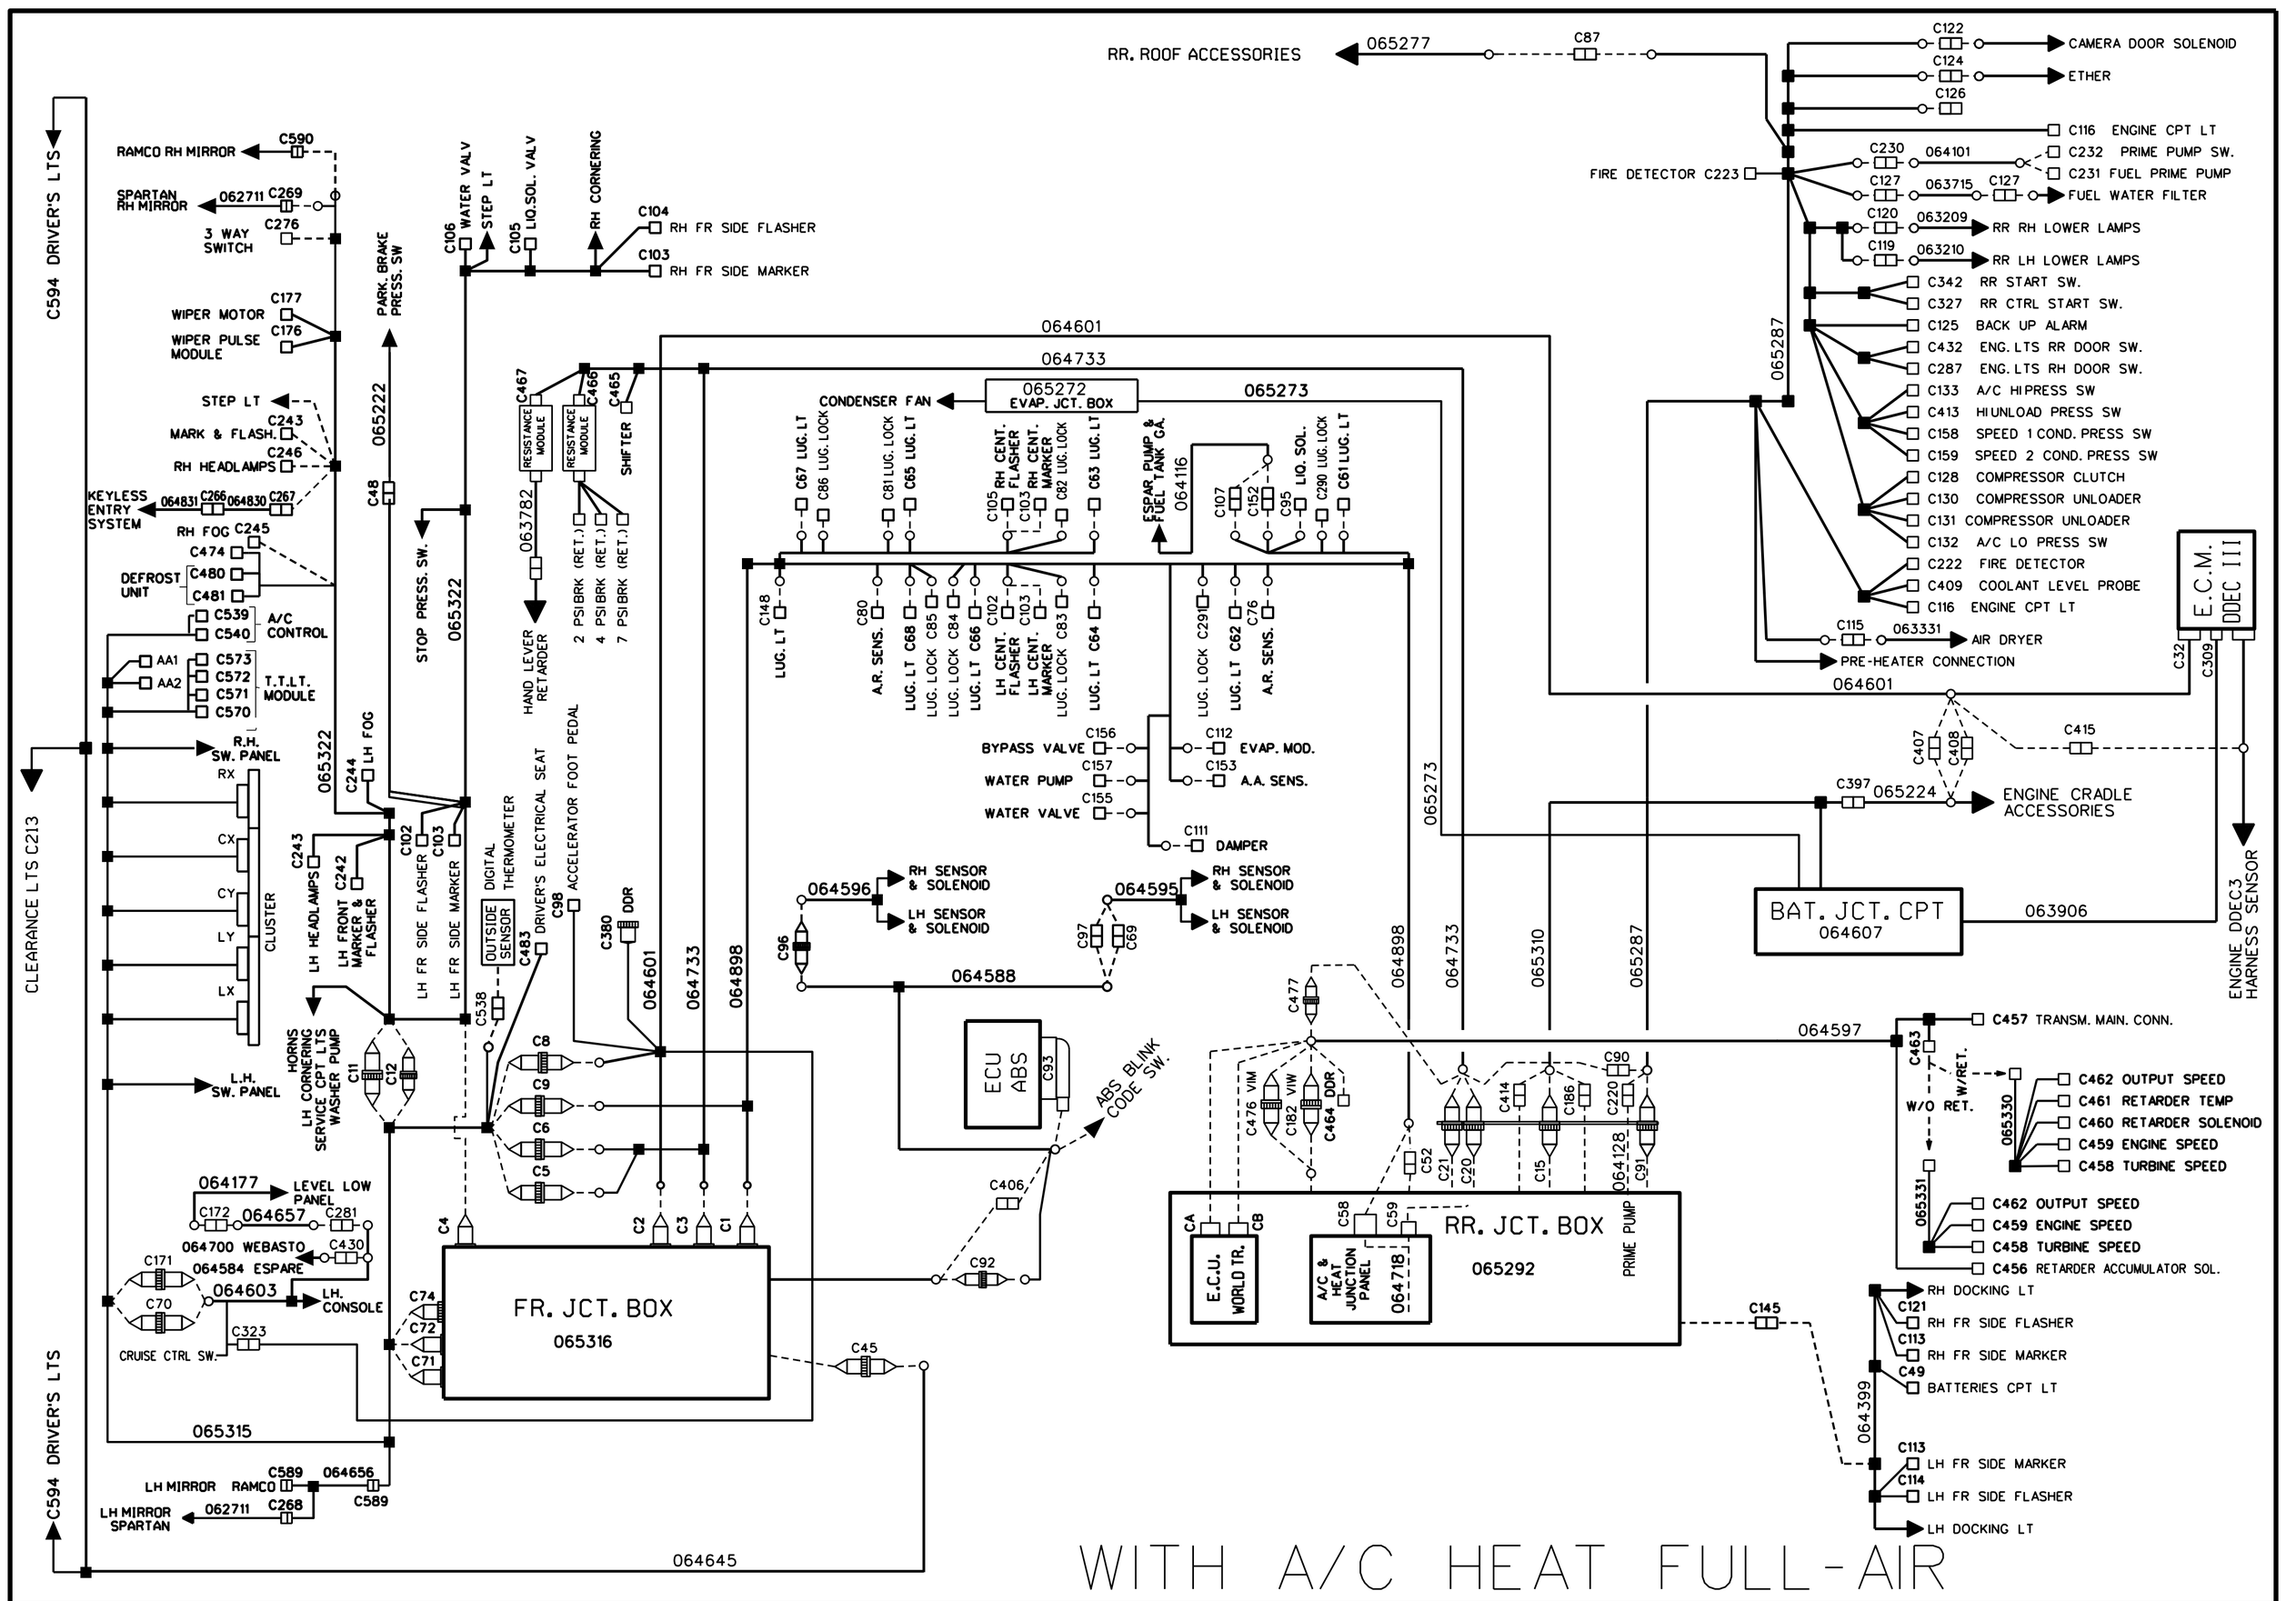

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C1	REVISION 12

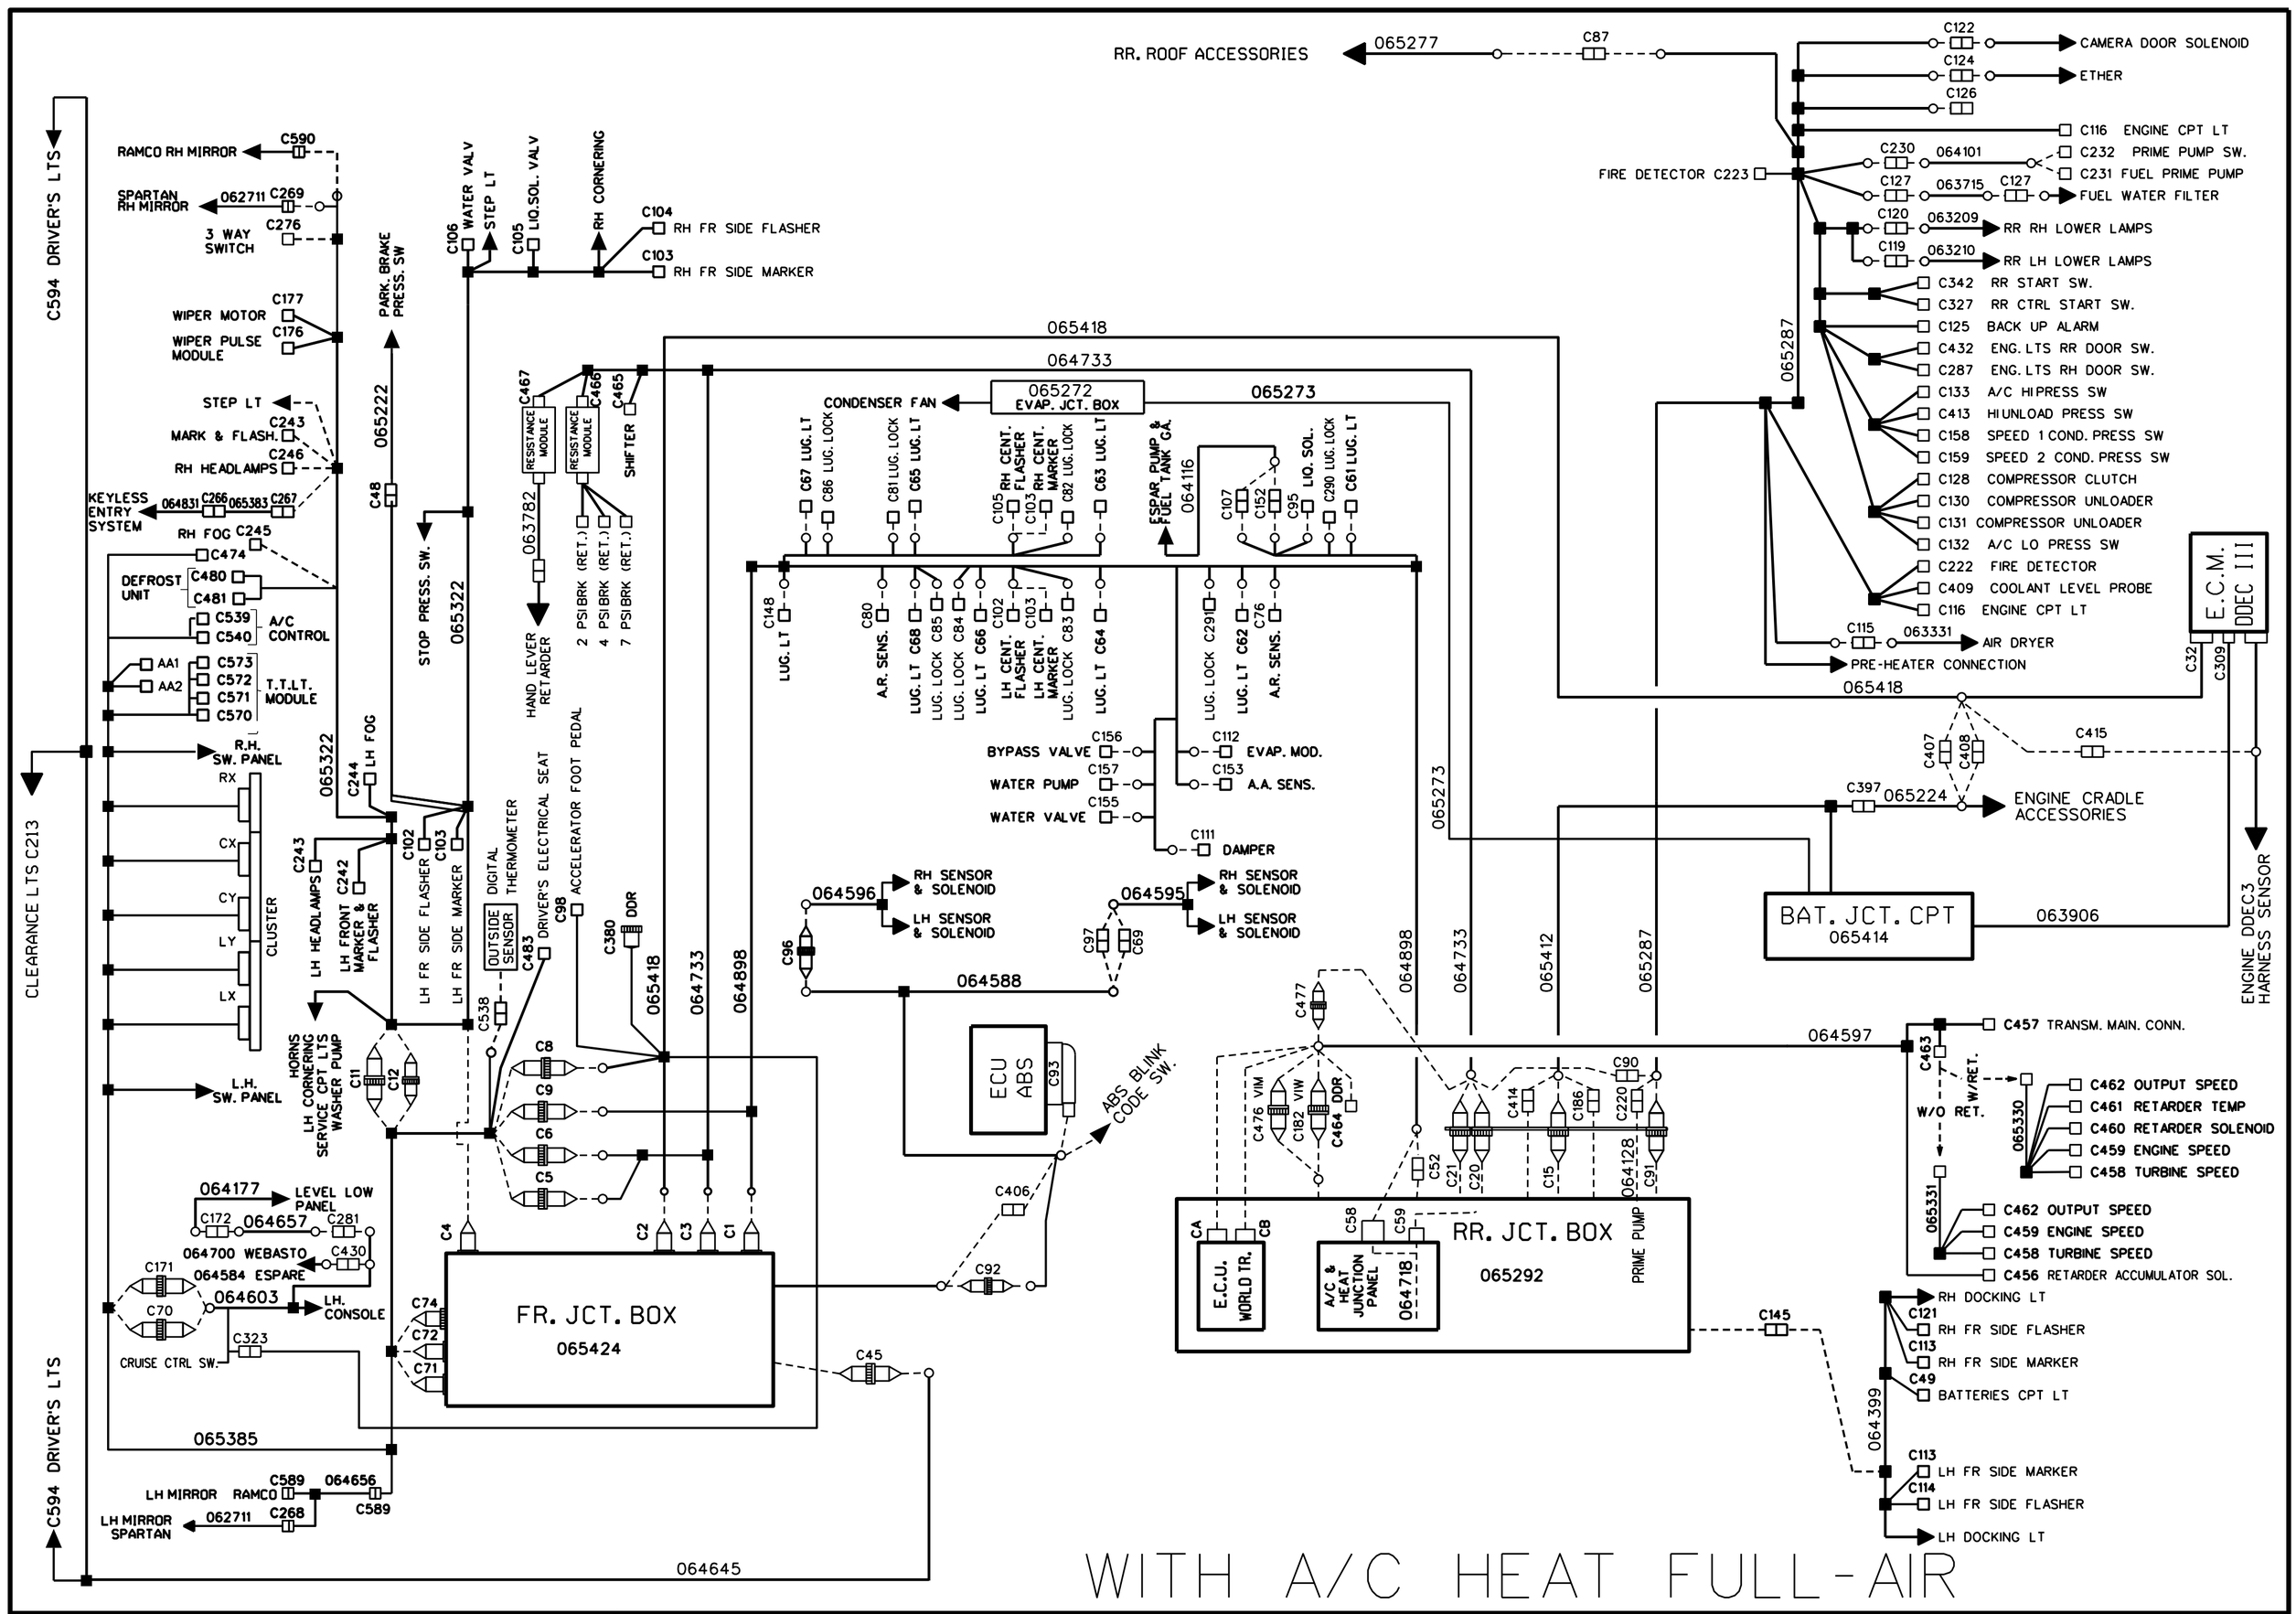

WITH A/C HEAT FULL-AIR

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C1	REVISION 13

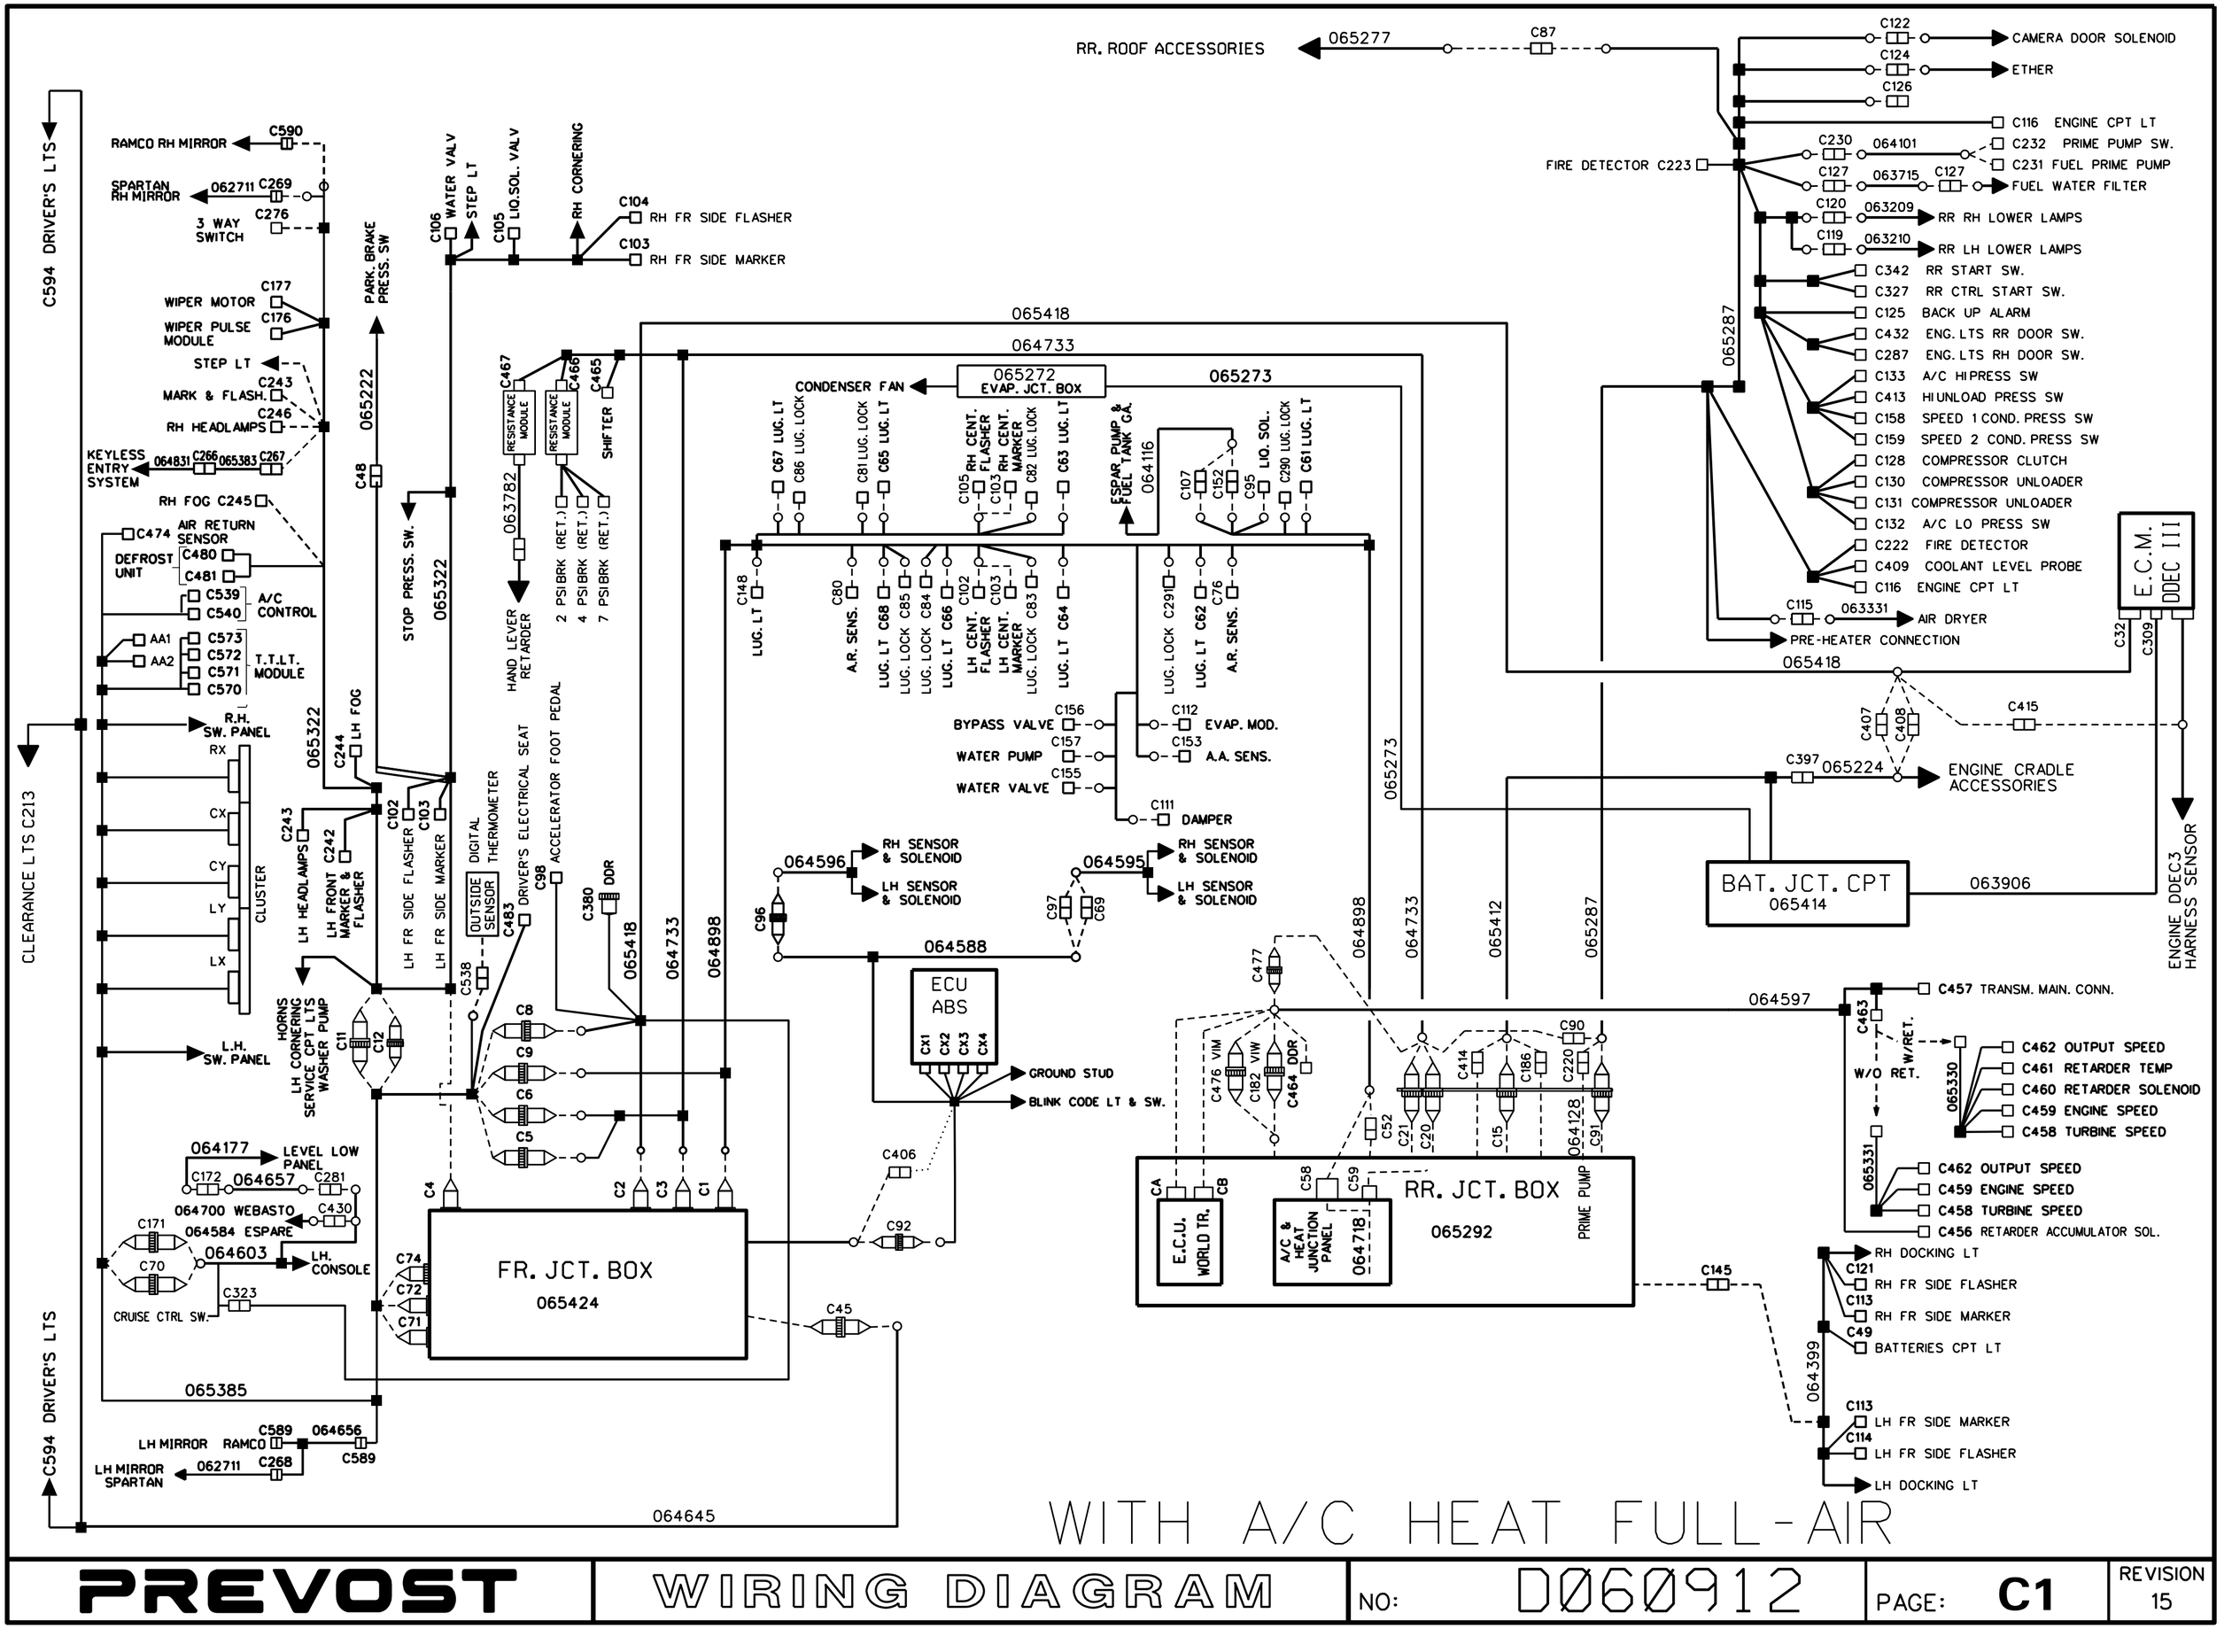

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C1	REVISION 15

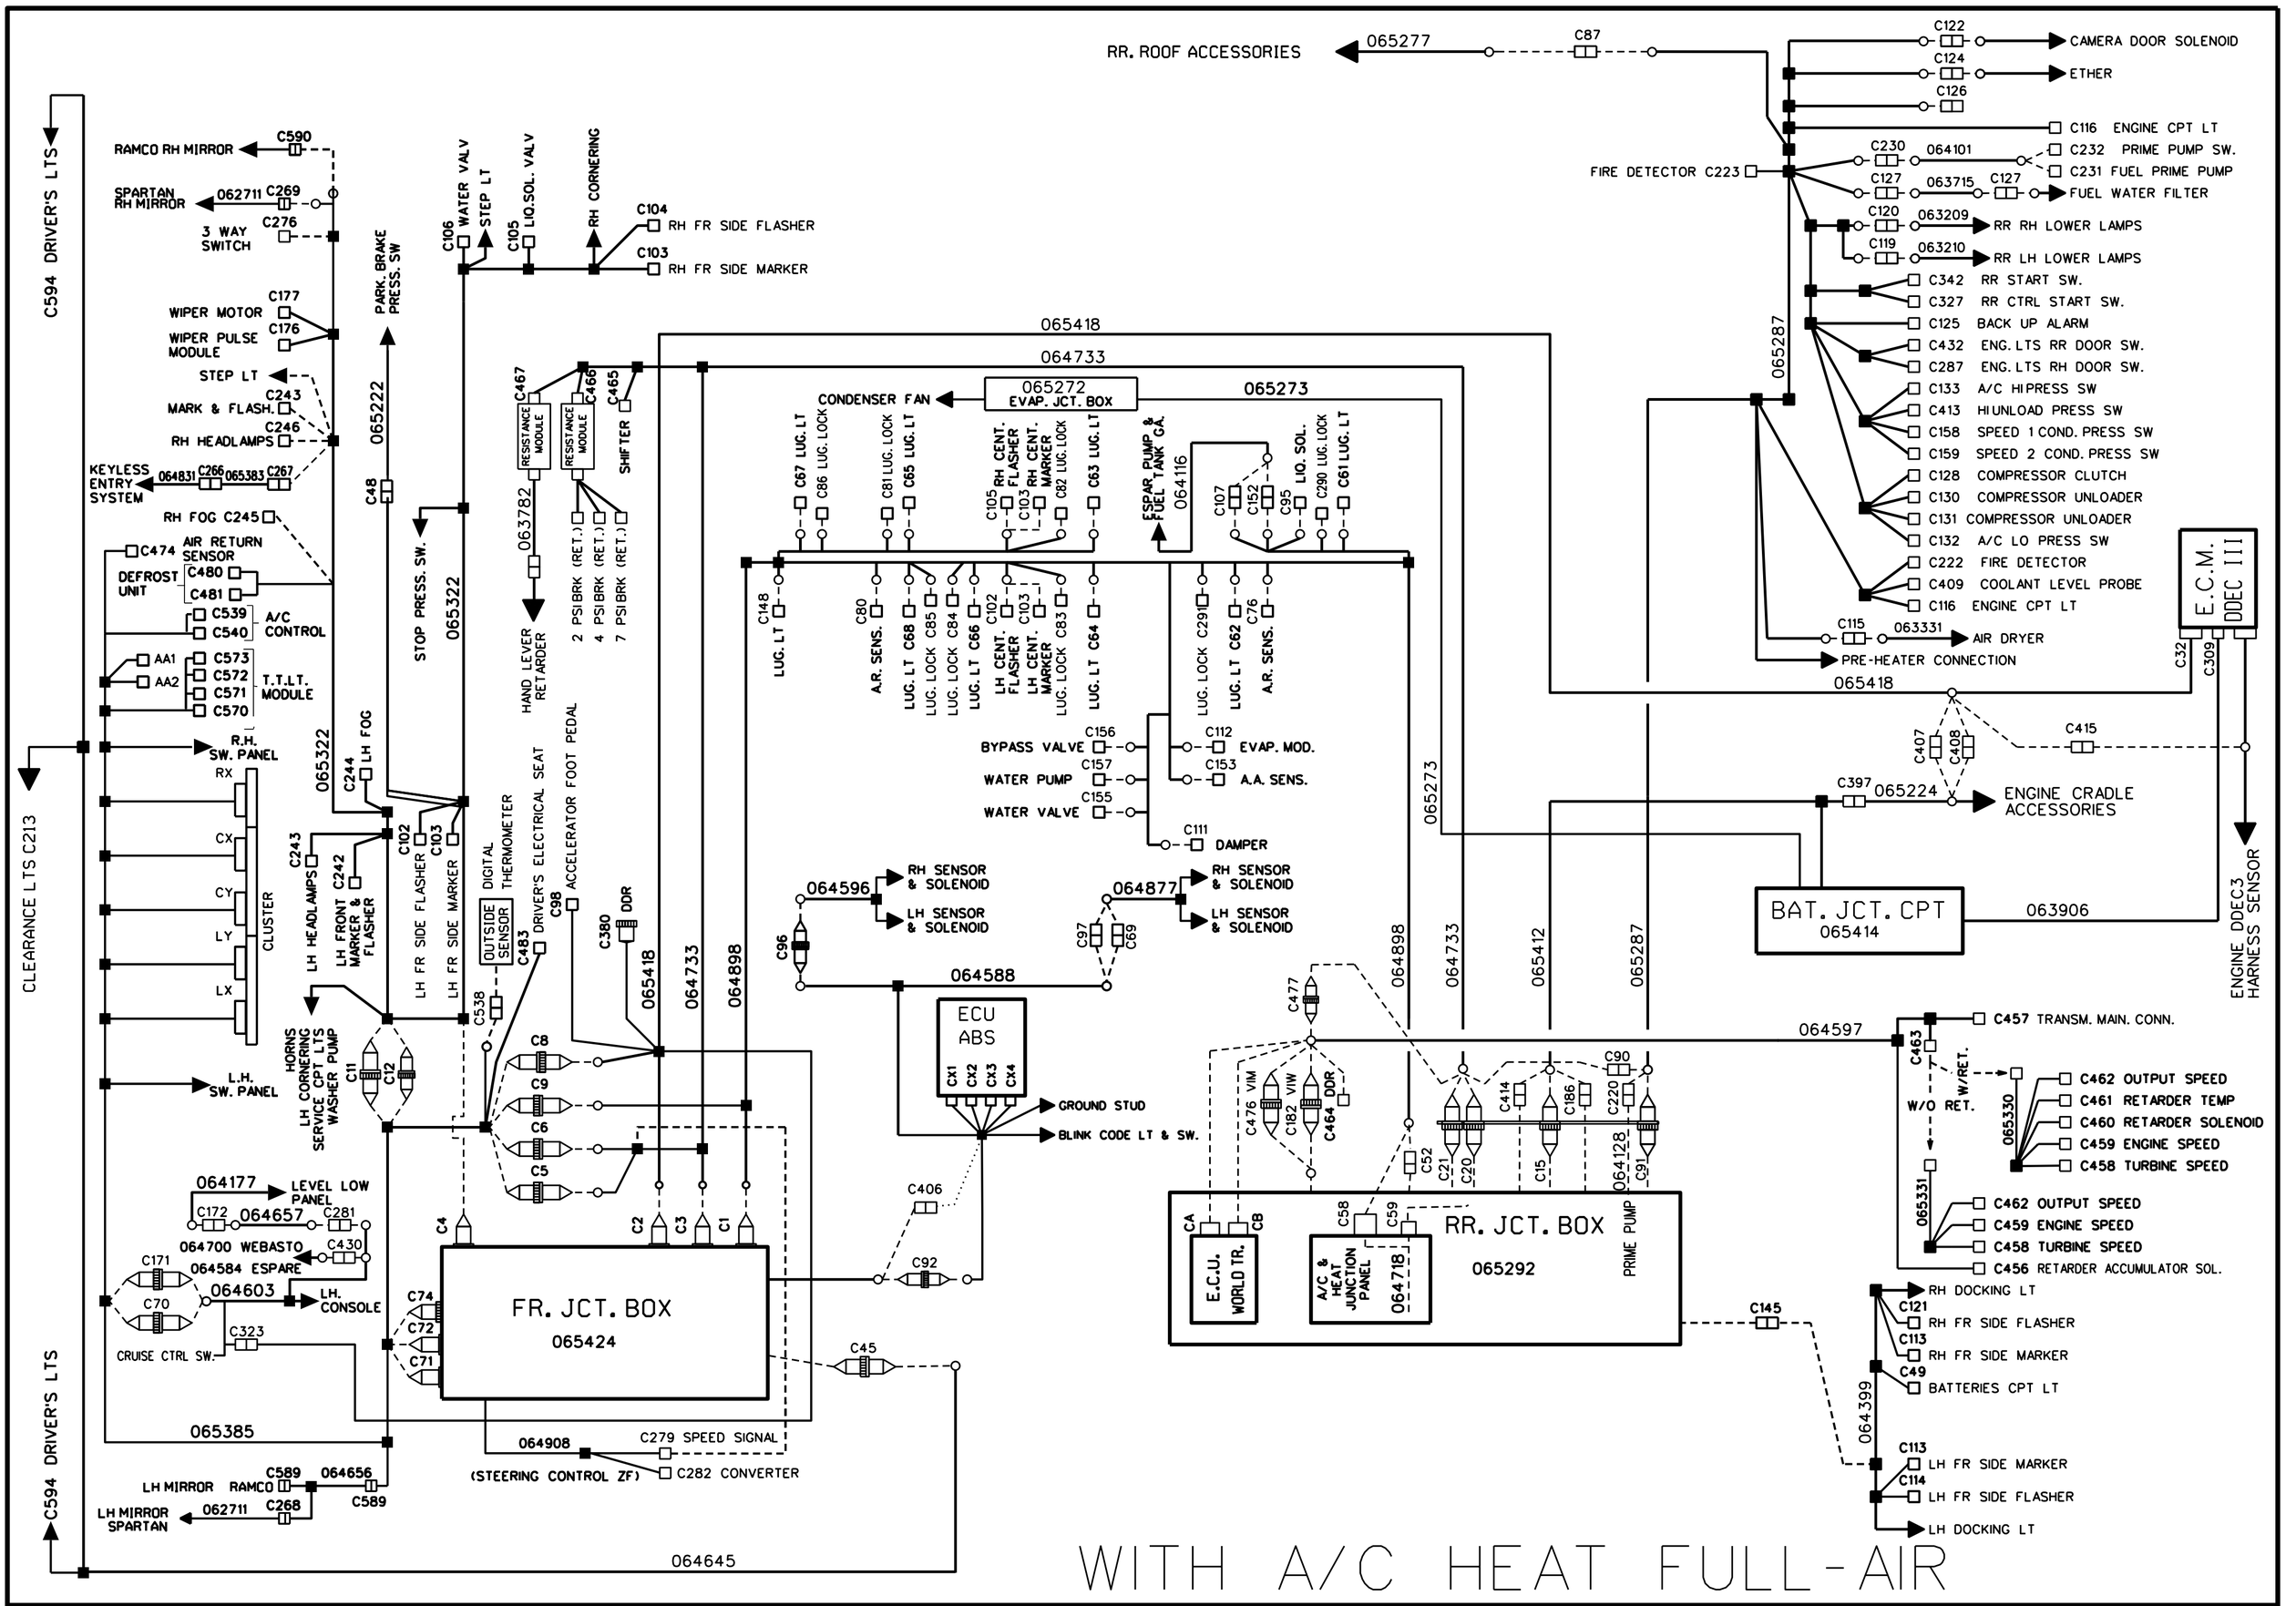

WITH A/C HEAT FULL-AIR

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C1	REVISION 16

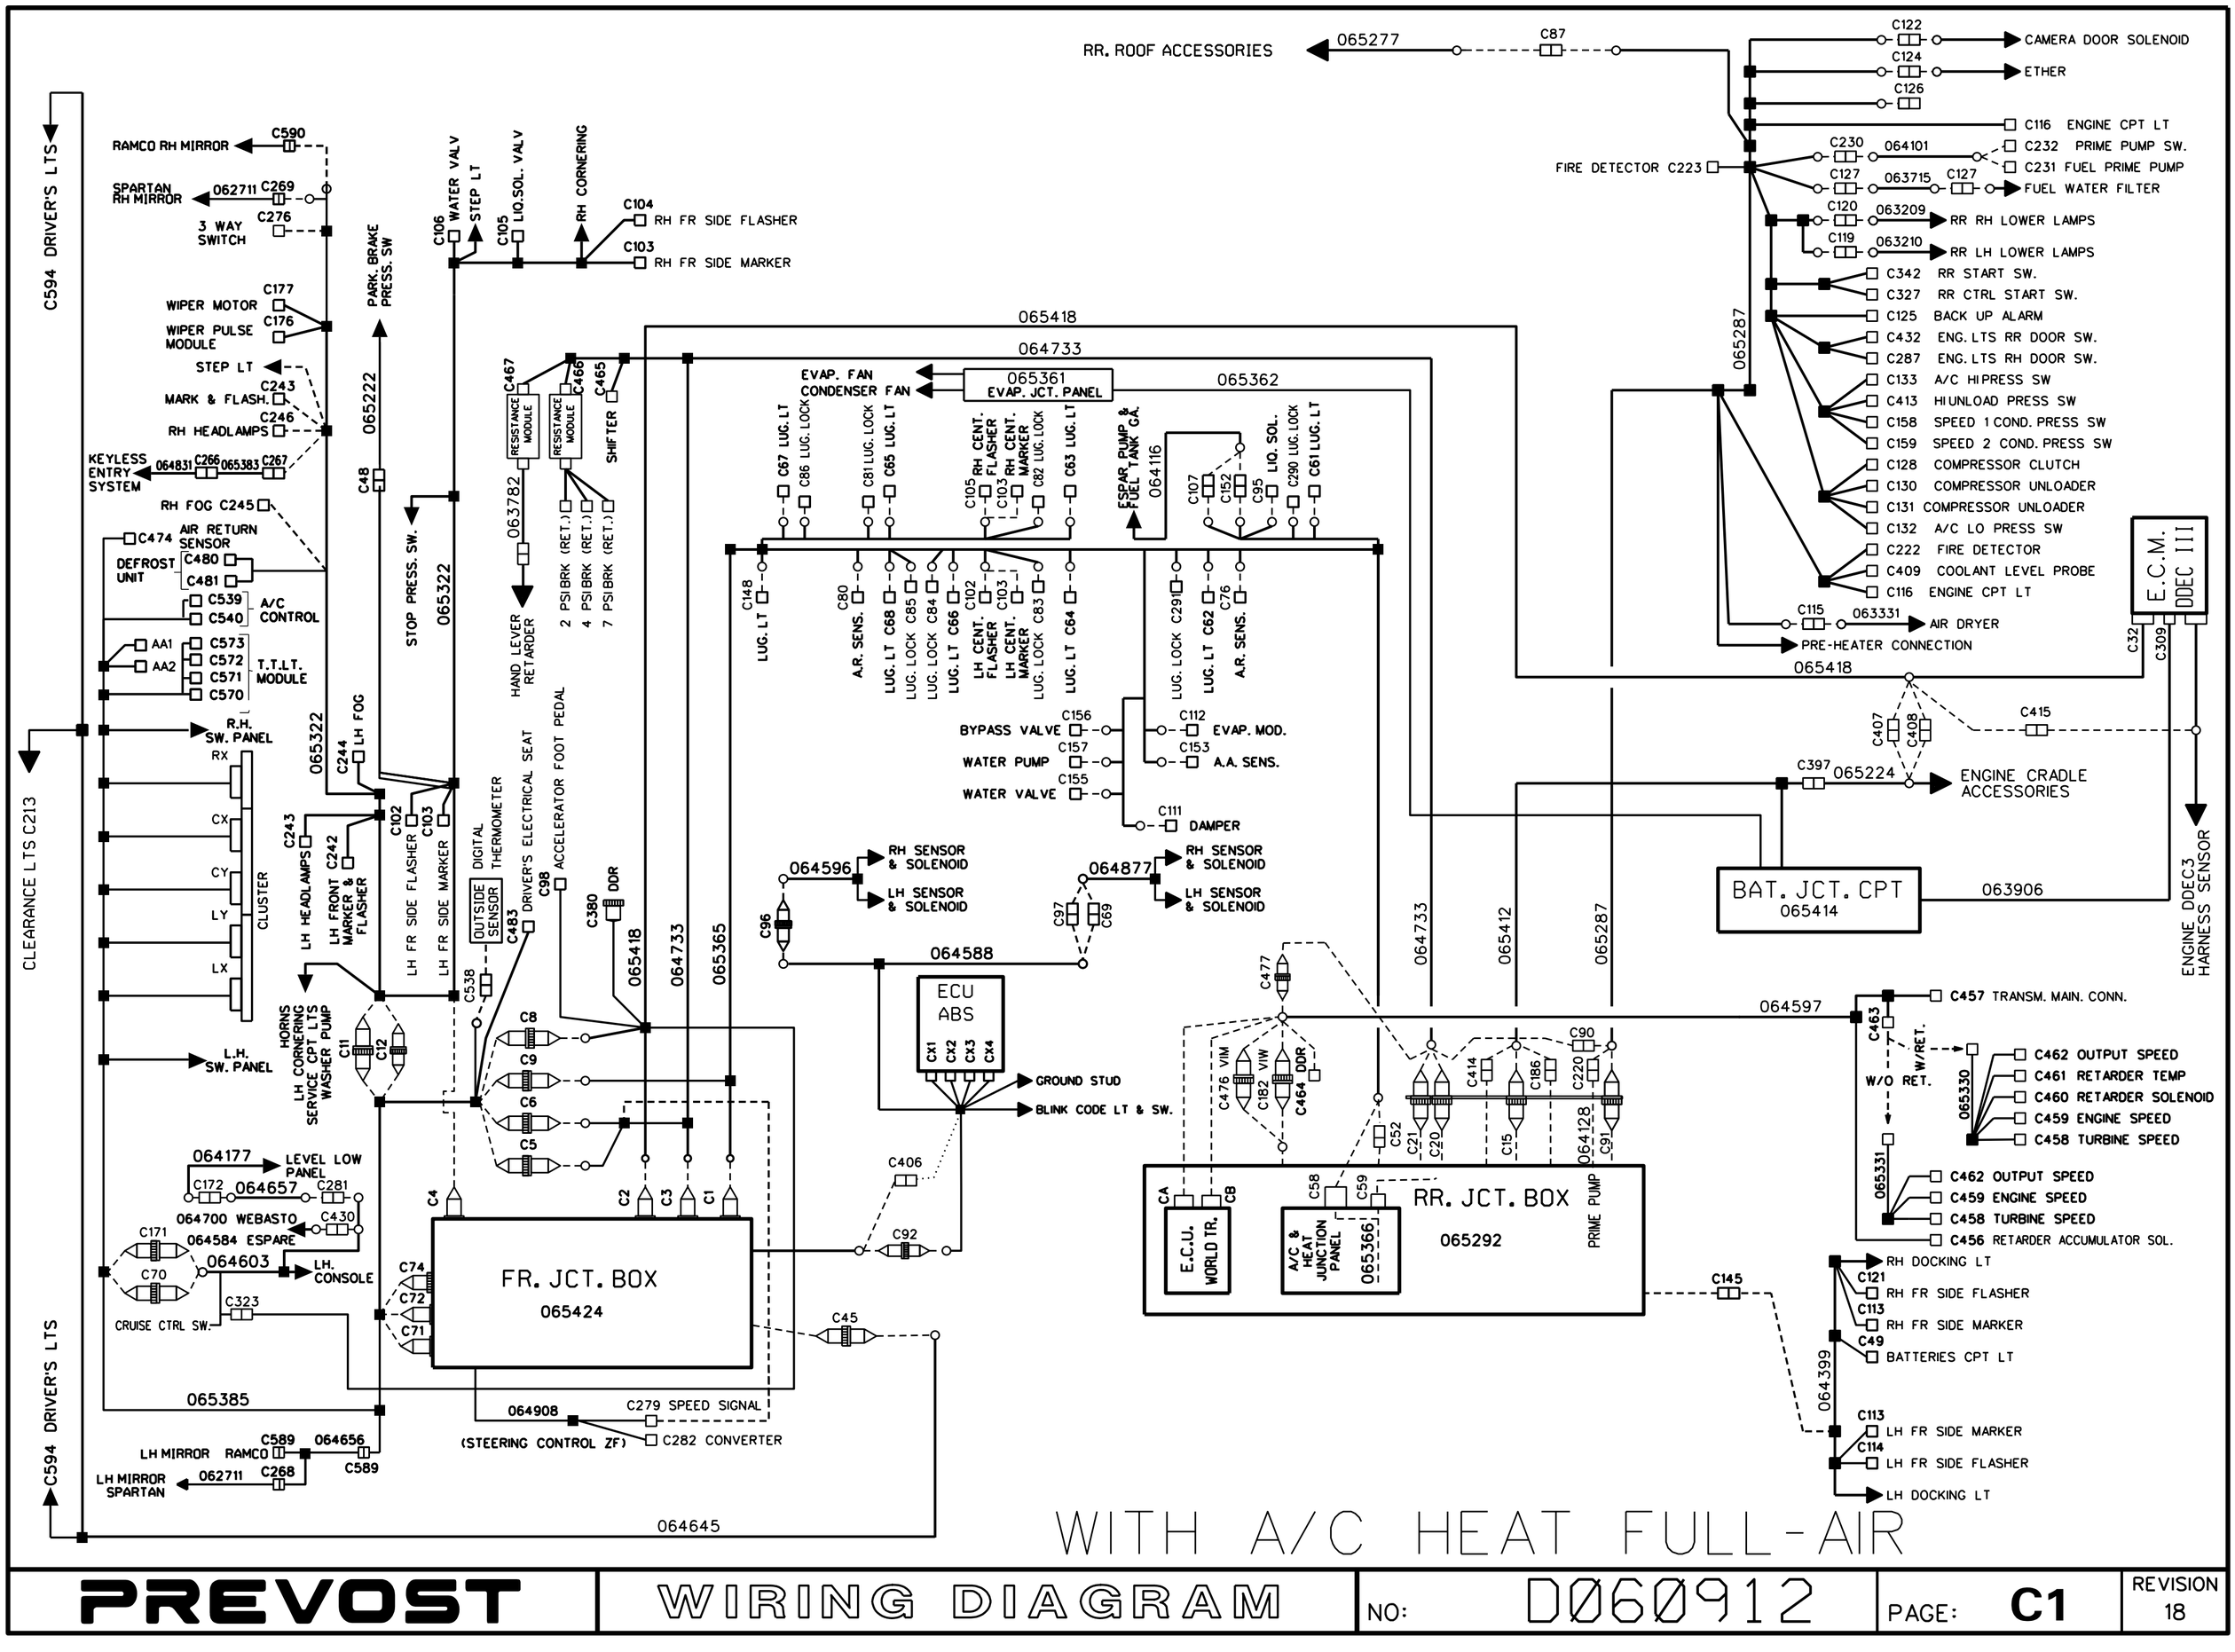

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C1	REVISION 18

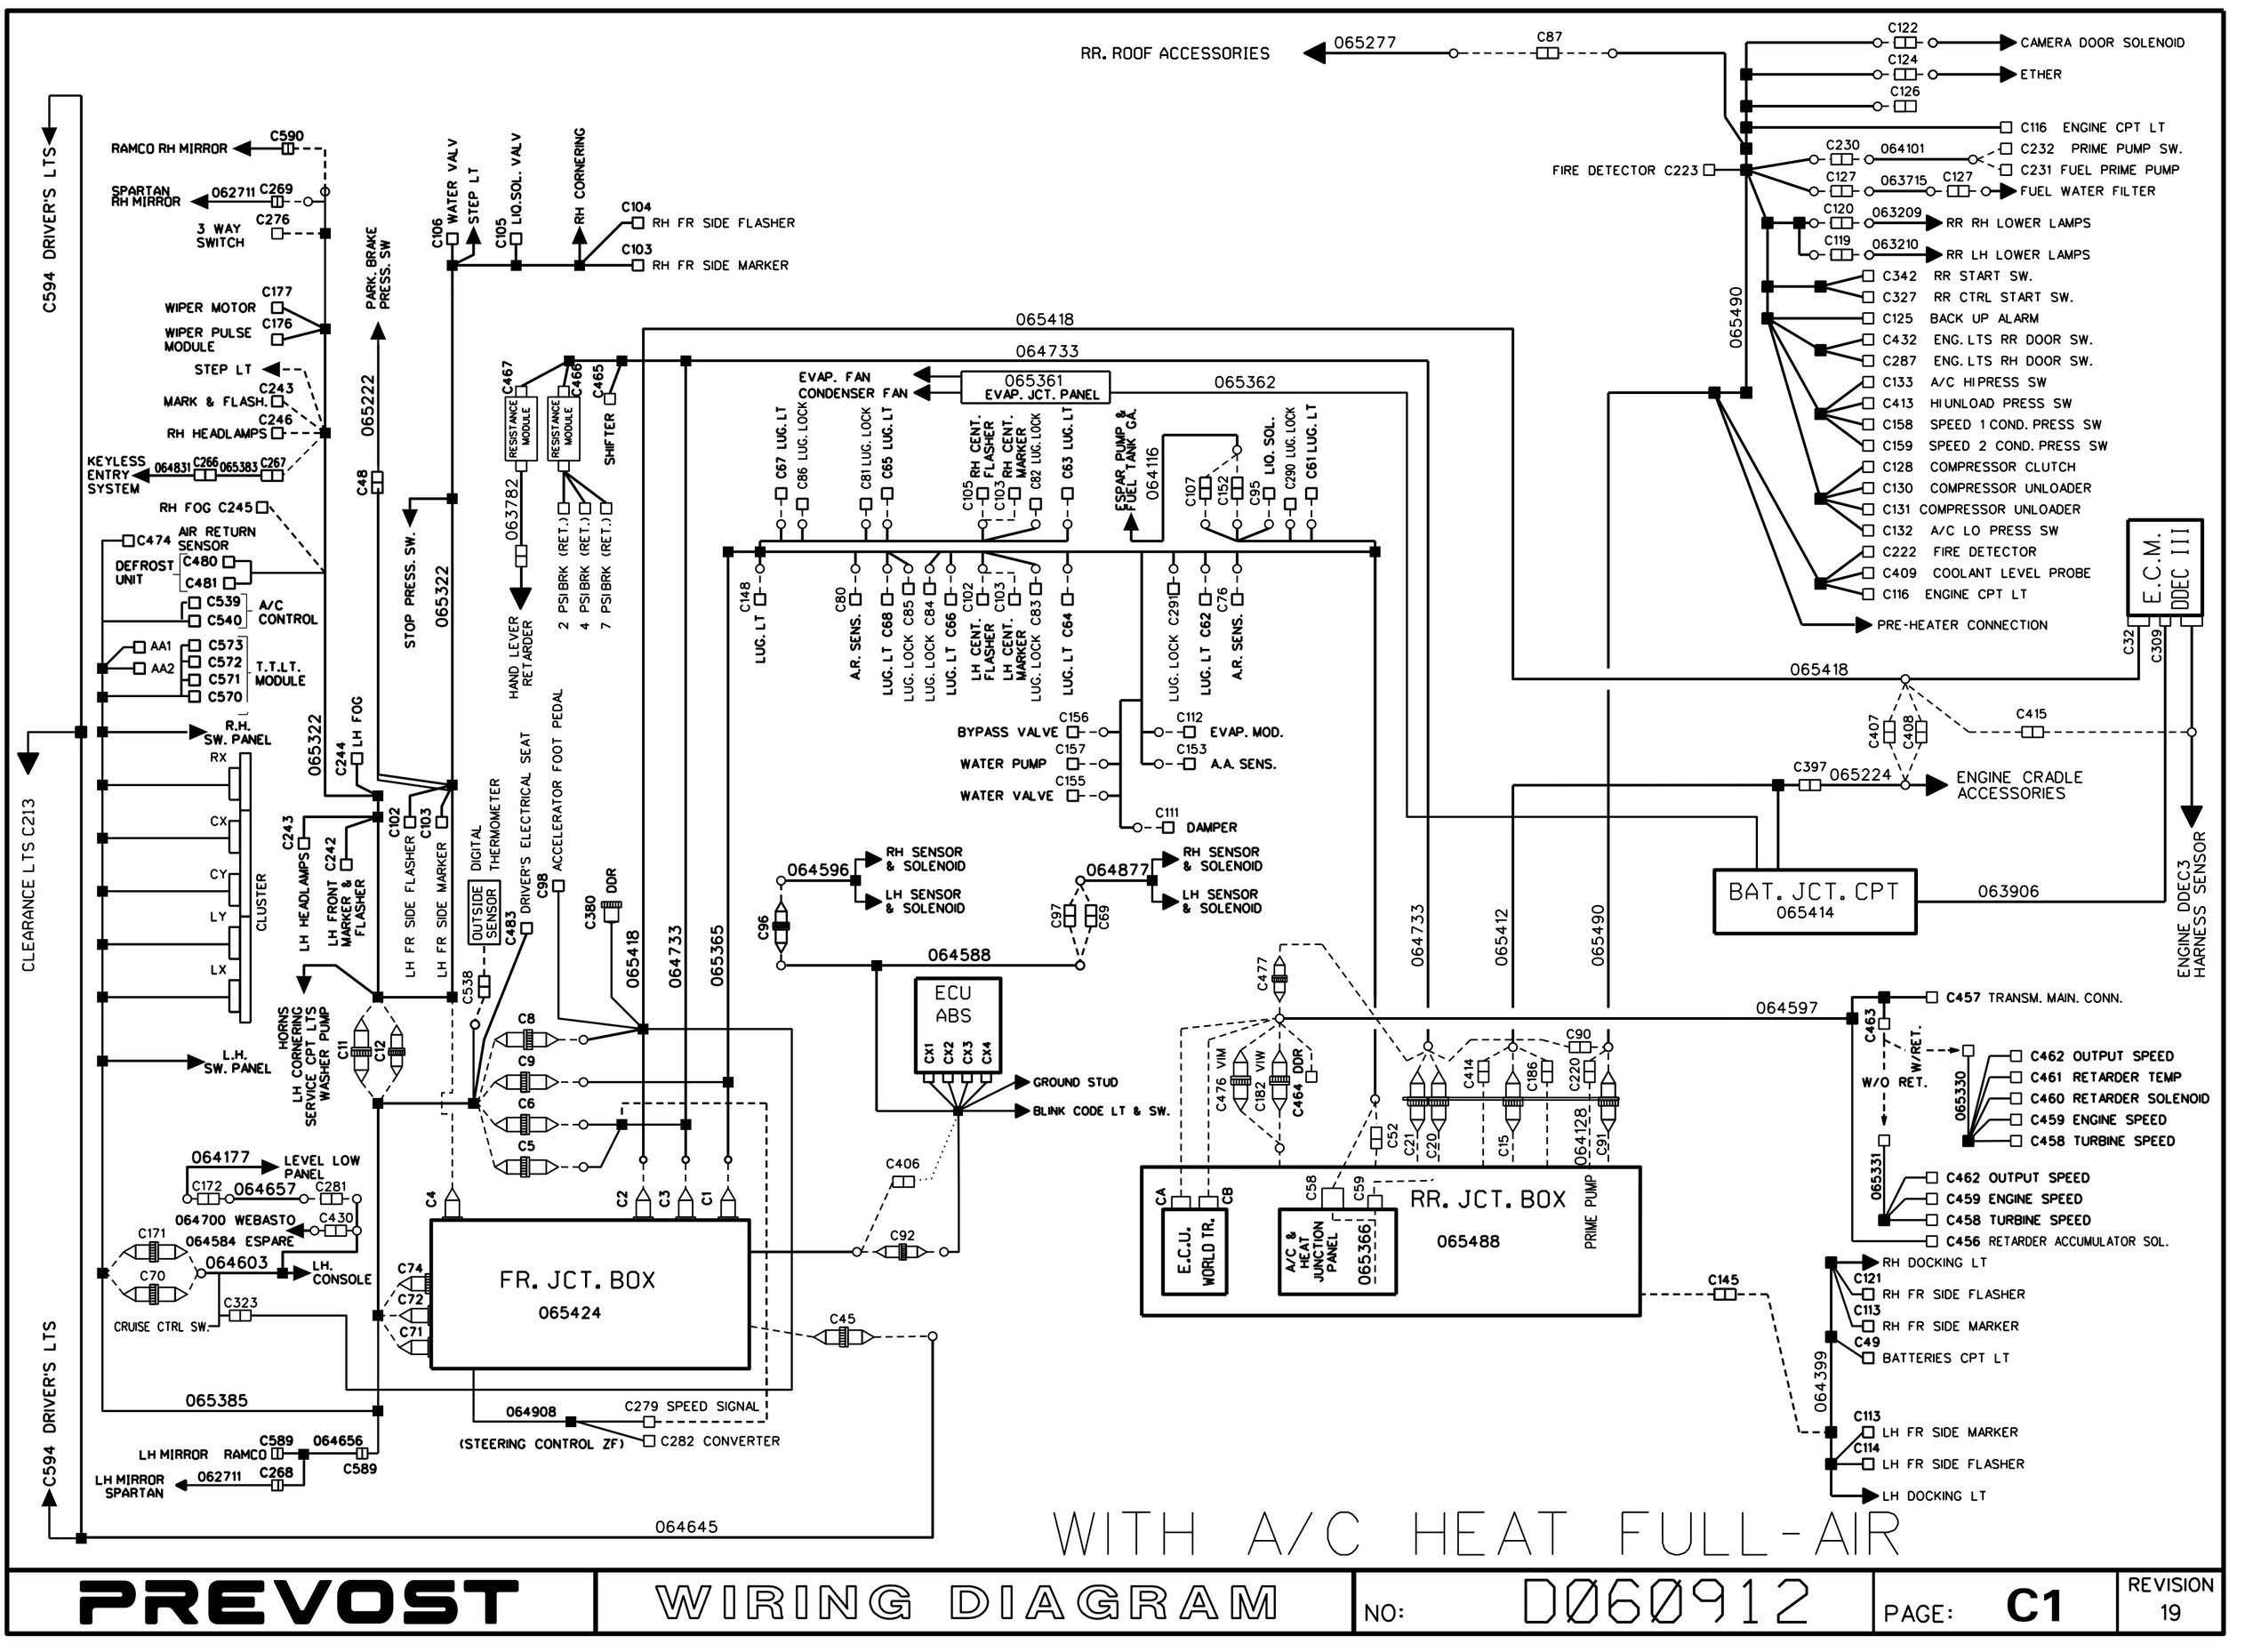

WITH A/C HEAT FULL-AIR

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C1	REVISION 19

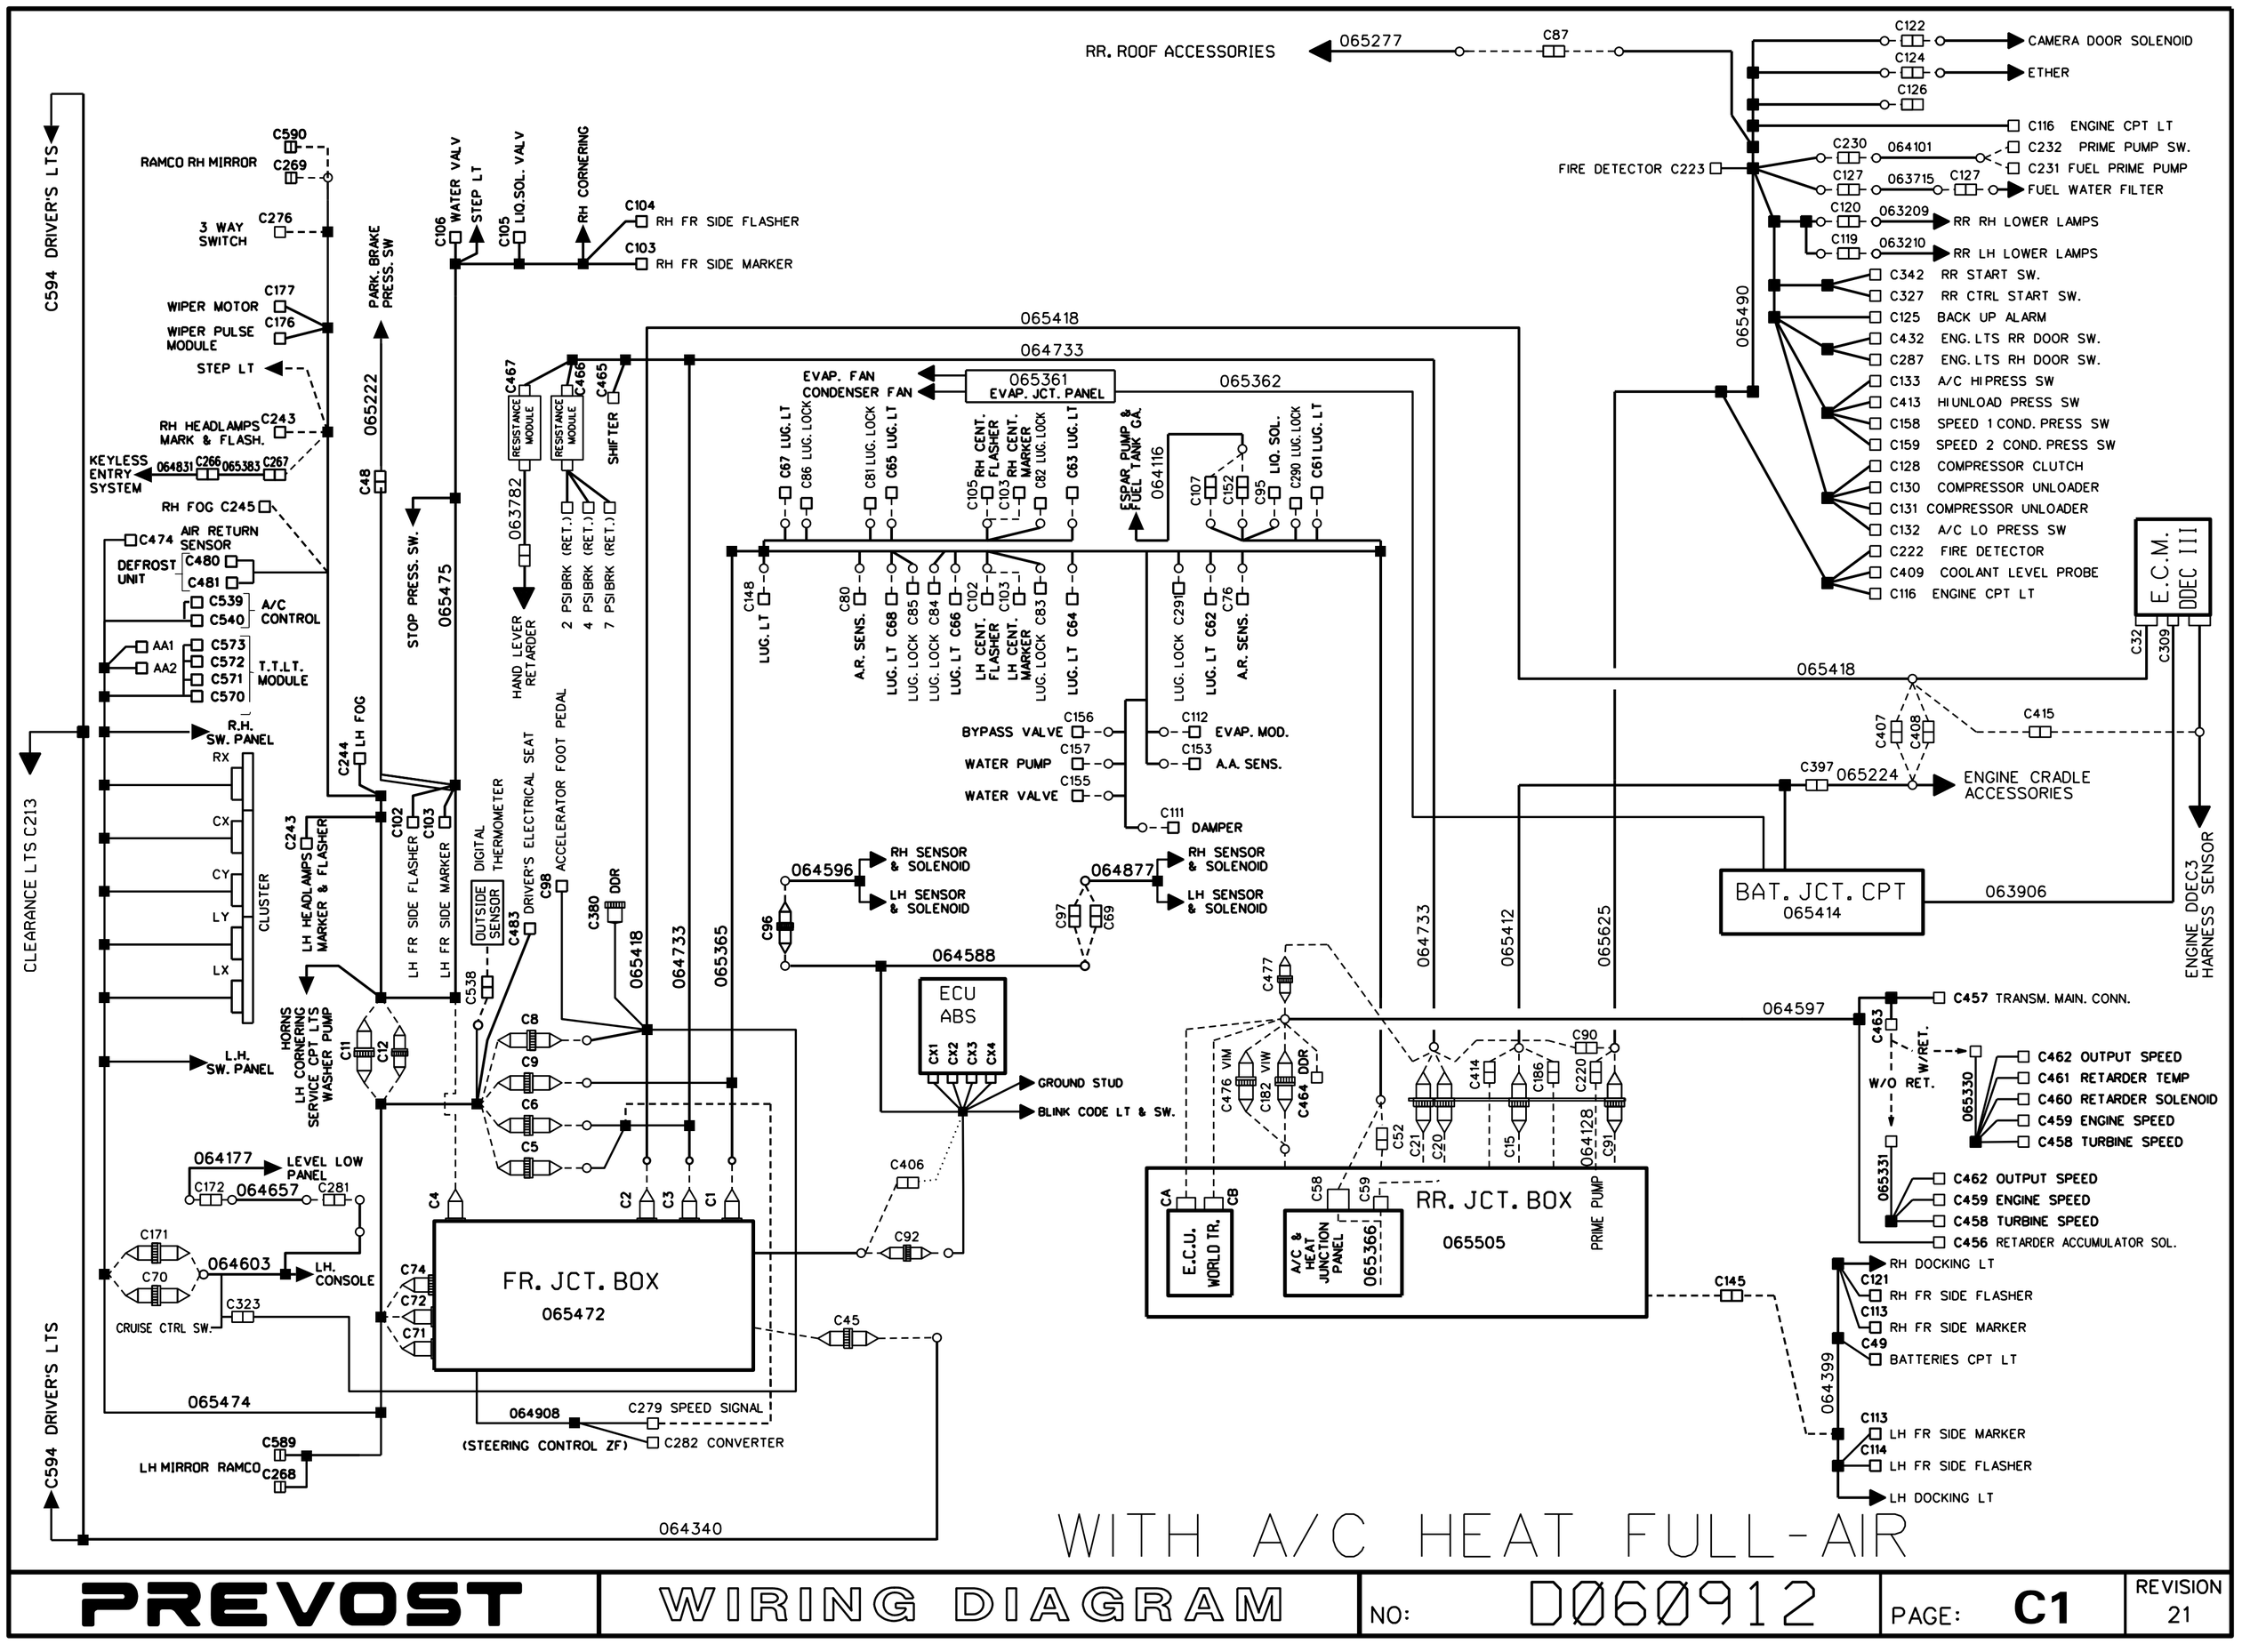

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C1	REVISION 21

RR. ROOF ACCESSORIES
065277
C87
C122 CAMERA DOOR SOLENOID
C124 ETHER
C126
C116 ENGINE CPT LT
C230 064101 C232 PRIME PUMP SW.
FIRE DETECTOR C223
C231 FUEL PRIME PUMP
C127 063715 C127 FUEL WATER FILTER
C120 063209 RR RH LOWER LAMPS
C119 063210 RR LH LOWER LAMPS
065490
C342 RR START SW.
C327 RR CTRL START SW.
C125 BACK UP ALARM
C432 ENG. LTS RR DOOR SW.
C287 ENG. LTS RH DOOR SW.
C133 A/C HI PRESS SW
C413 HI UNLOAD PRESS SW
C158 SPEED 1 COND. PRESS SW
C159 SPEED 2 COND. PRESS SW
C128 COMPRESSOR CLUTCH
C130 COMPRESSOR UNLOADER
C131 COMPRESSOR UNLOADER
C132 A/C LO PRESS SW
C222 FIRE DETECTOR
C409 COOLANT LEVEL PROBE
C116 ENGINE CPT LT
E.C.M. DDEC III
C32
C309
C594 DRIVER'S LTS
C590 RAMCO RH MIRROR
C269
C276 3 WAY SWITCH
C177 WIPER MOTOR
C176 WIPER PULSE MODULE
STEP LT
C243 RH HEADLAMPS MARK & FLASH.
KEYLESS ENTRY SYSTEM
064831 C266 065383 C267
RH FOG C245
C474 AIR RETURN SENSOR
DEFROST UNIT
C480
C481
C539
C540 A/C CONTROL
AA1
AA2
C573
C572
C571
C570 T.T.LT. MODULE
R.H. SW. PANEL
RX
CX
CY
LY
LX
CLUSTER
CLEARANCE LTS C213
L.H. SW. PANEL
C594 DRIVER'S LTS
C48
065222
PARK. BRAKE PRESS. SW
STOP PRESS. SW.
065475
C244 LH FOG
C243 LH HEADLAMPS MARKER & FLASHER
C102
C103
LH FR SIDE FLASHER
LH FR SIDE MARKER
DIGITAL THERMOMETER
OUTSIDE SENSOR
C538
HORNS
LH CORNERING
SERVICE CPT LTS
WASHER PUMP
C11
C12
C106 WATER VALV
STEP LT
C105 LIQ.SOL. VALV
RH CORNERING
C104 RH FR SIDE FLASHER
C103 RH FR SIDE MARKER
C467
C466
C465
RESISTANCE MODULE
RESISTANCE MODULE
SHIFTER
063782
HAND LEVER RETARDER
2 PSI BRK (RET.)
4 PSI BRK (RET.)
7 PSI BRK (RET.)
DRIVER'S ELECTRICAL SEAT
ACCELERATOR FOOT PEDAL
C483
C98
C380 DDR
065418
064733
065365
065418
064733
EVAP. FAN
CONDENSER FAN
065361
EVAP. JCT. PANEL
065362
C67 LUG. LT
C86 LUG. LOCK
C81 LUG. LOCK
C65 LUG. LT
RH CENT. FLASHER
RH CENT. MARKER
C82 LUG. LOCK
C63 LUG. LT
ESPAR PUMP & FUEL TANK GA.
064116
C107
C152
C95
LIQ. SOL.
C290 LUG. LOCK
C61 LUG. LT
C148
LUG. LT
C80
A.R. SENS.
LUG. LT C68
LUG. LOCK C85
LUG. LOCK C84
LUG. LT C66
LH CENT. FLASHER
LH CENT. MARKER
LUG. LOCK C83
LUG. LT C64
LUG. LOCK C229
LUG. LT C62
A.R. SENS.
C76
C156 BYPASS VALVE
C157 WATER PUMP
C155 WATER VALVE
C112 EVAP. MOD.
C153 A.A. SENS.
C111 DAMPER
065633 RH SENSOR & SOLENOID
LH SENSOR & SOLENOID
065635 RH SENSOR & SOLENOID
LH SENSOR & SOLENOID
C96
C97
C69
065630
ECU ABS
CX1
CX2
GROUND STUD
C406
C92
C45
FR. JCT. BOX
065639
C4
C2
C3
C1
C74
C72
C71
064177 LEVEL LOW PANEL
C172
064657
C281
C171
C70
064603
LH. CONSOLE
CRUISE CTRL SW.
C323
065474
064908
C279 SPEED SIGNAL
(STEERING CONTROL ZF)
C282 CONVERTER
C589
LH MIRROR RAMCO
C268
064340
C415
C407
C408
C397
065224
ENGINE CRADLE ACCESSORIES
BAT. JCT. CPT
065414
063906
ENGINE DDEC3 HARNESS SENSOR
064733
065412
065625
C477
064597
C457 TRANSM. MAIN. CONN.
C463
W/O RET.
W/RET.
065330
C462 OUTPUT SPEED
C461 RETARDER TEMP
C460 RETARDER SOLENOID
C459 ENGINE SPEED
C458 TURBINE SPEED
065331
C462 OUTPUT SPEED
C459 ENGINE SPEED
C458 TURBINE SPEED
C456 RETARDER ACCUMULATOR SOL.
C476 VIM
C182 VIW
C464 DDR
C414
C186
C90
C220
064128
C91
C52
C21
C20
C15
CA
CB
E.C.U. WORLD TR.
C58
C59
A/C & HEAT JUNCTION PANEL
065366
RR. JCT. BOX
065505
PRIME PUMP
C145
RH DOCKING LT
C121 RH FR SIDE FLASHER
C113 RH FR SIDE MARKER
C49 BATTERIES CPT LT
064399
C113 LH FR SIDE MARKER
C114 LH FR SIDE FLASHER
LH DOCKING LT

WITH A/C HEAT FULL-AIR

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C1	REVISION 22

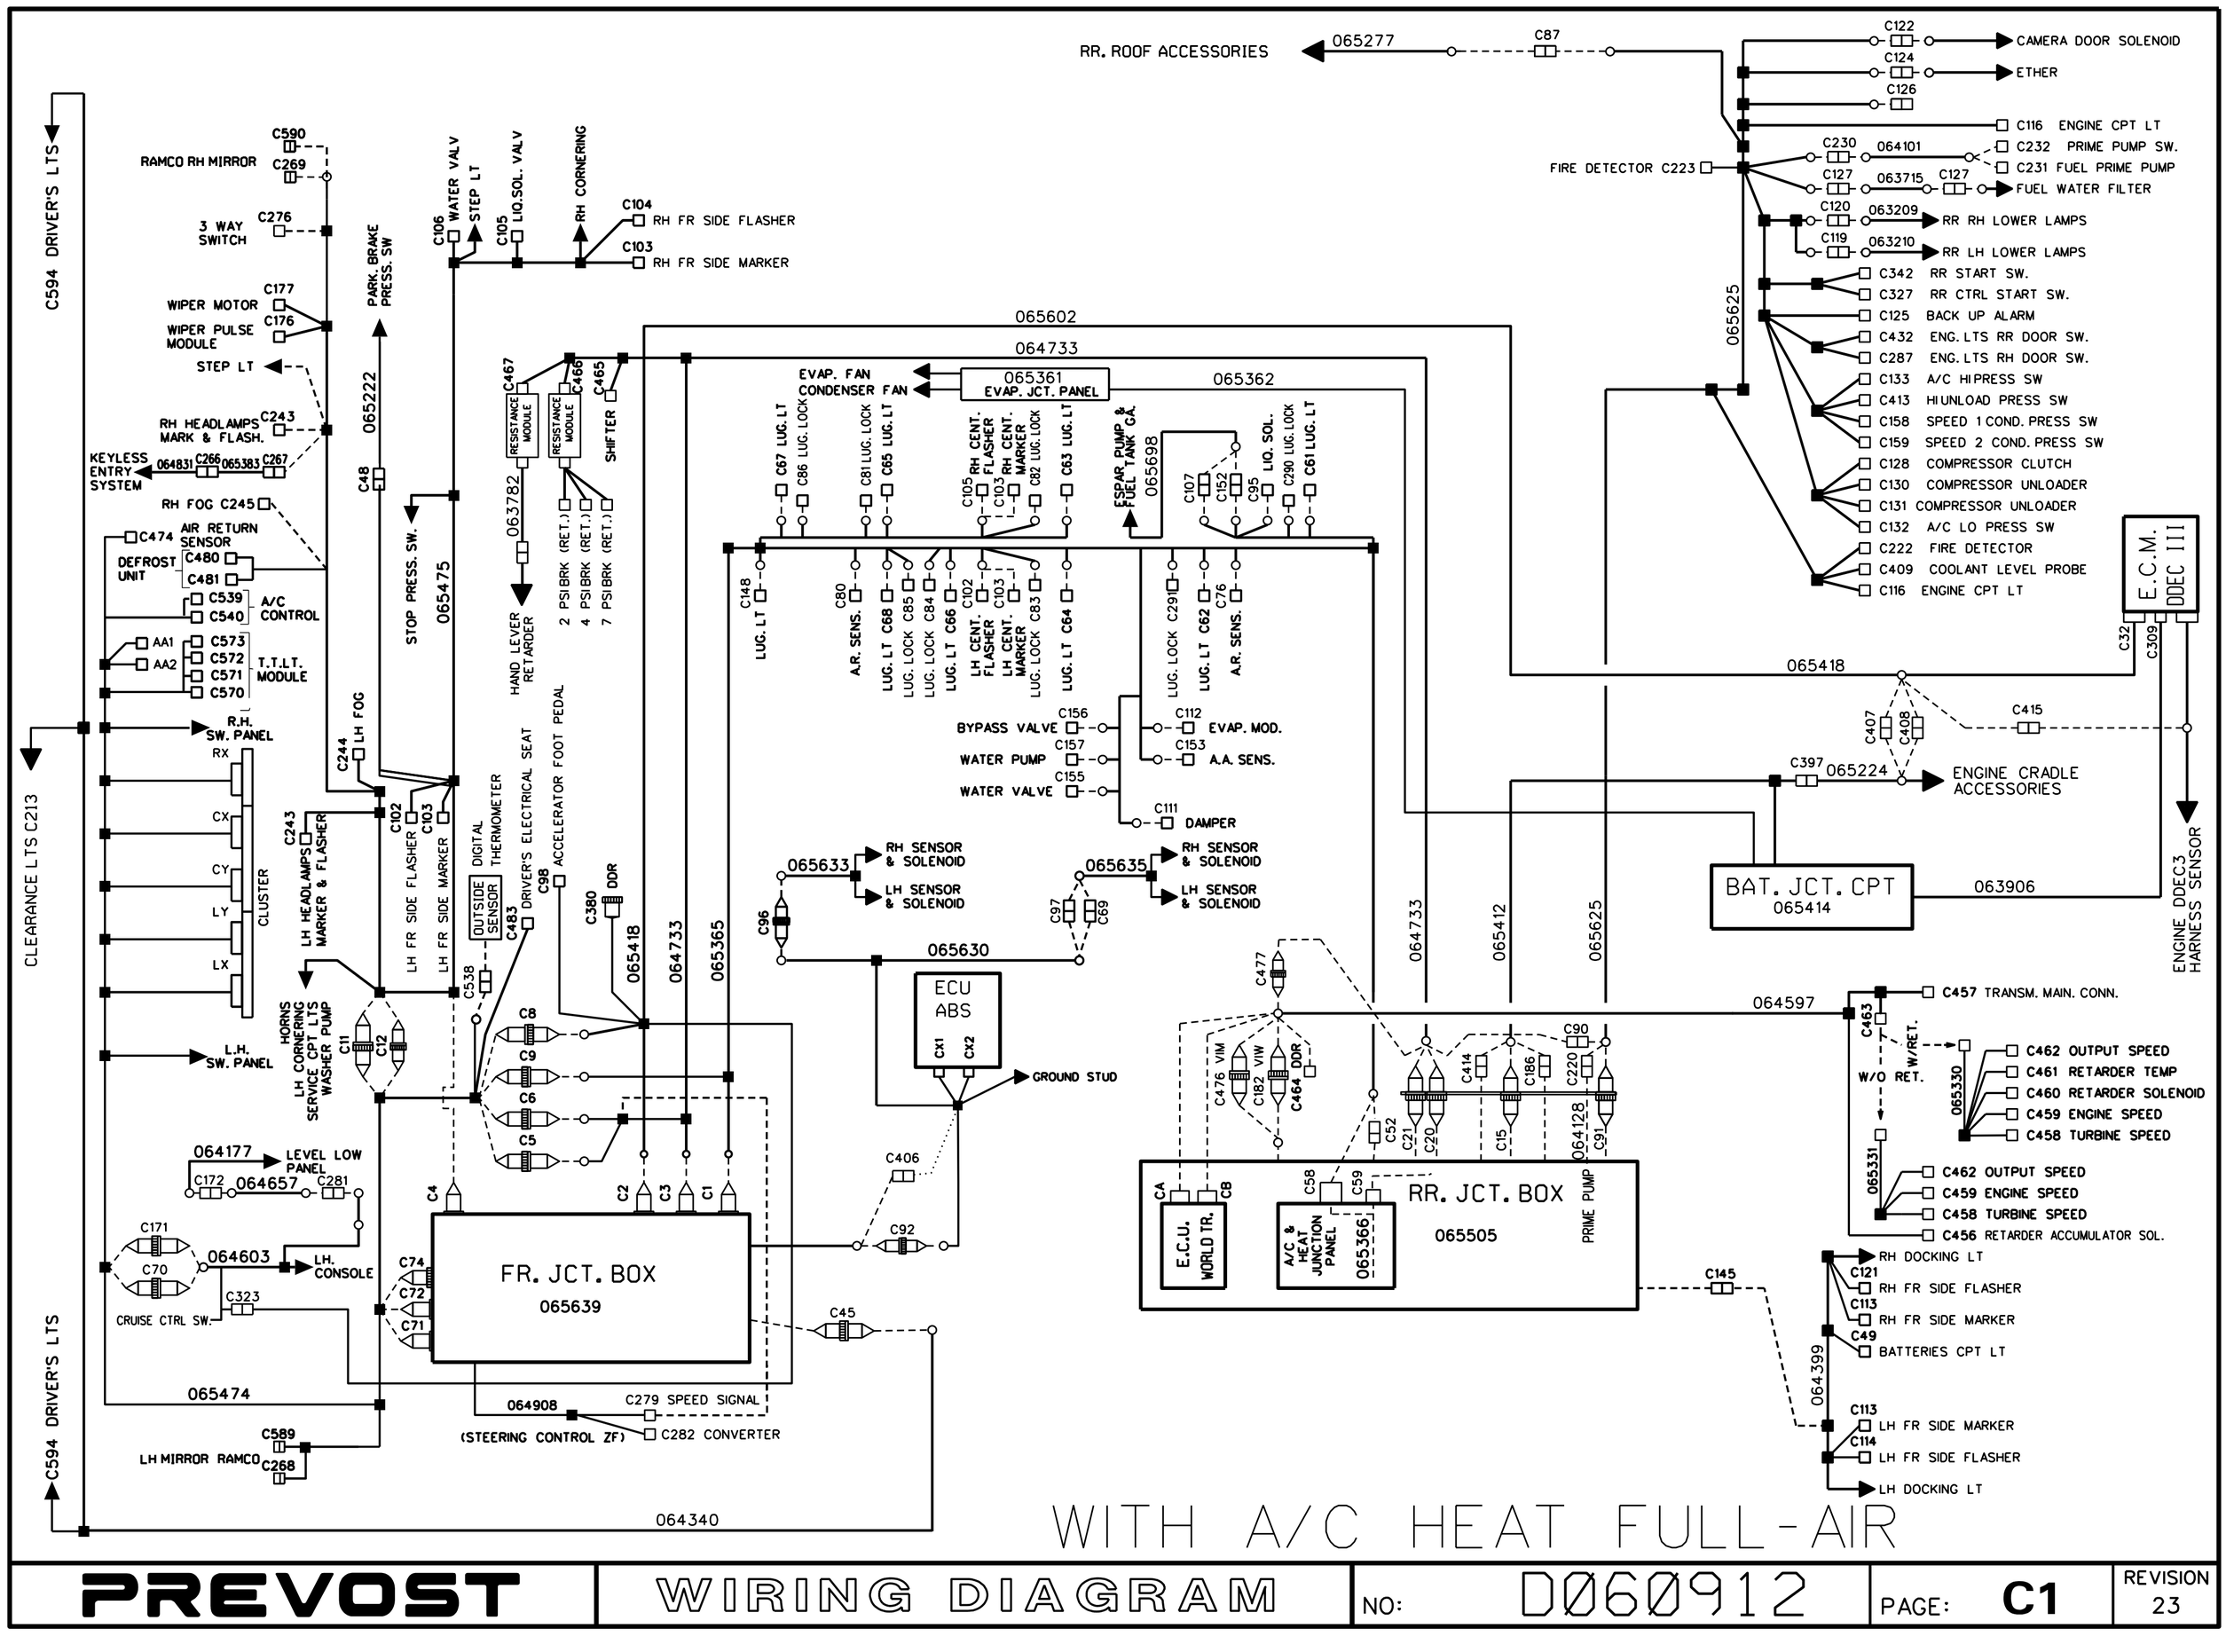

WITH A/C HEAT FULL-AIR

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C1	REVISION 23

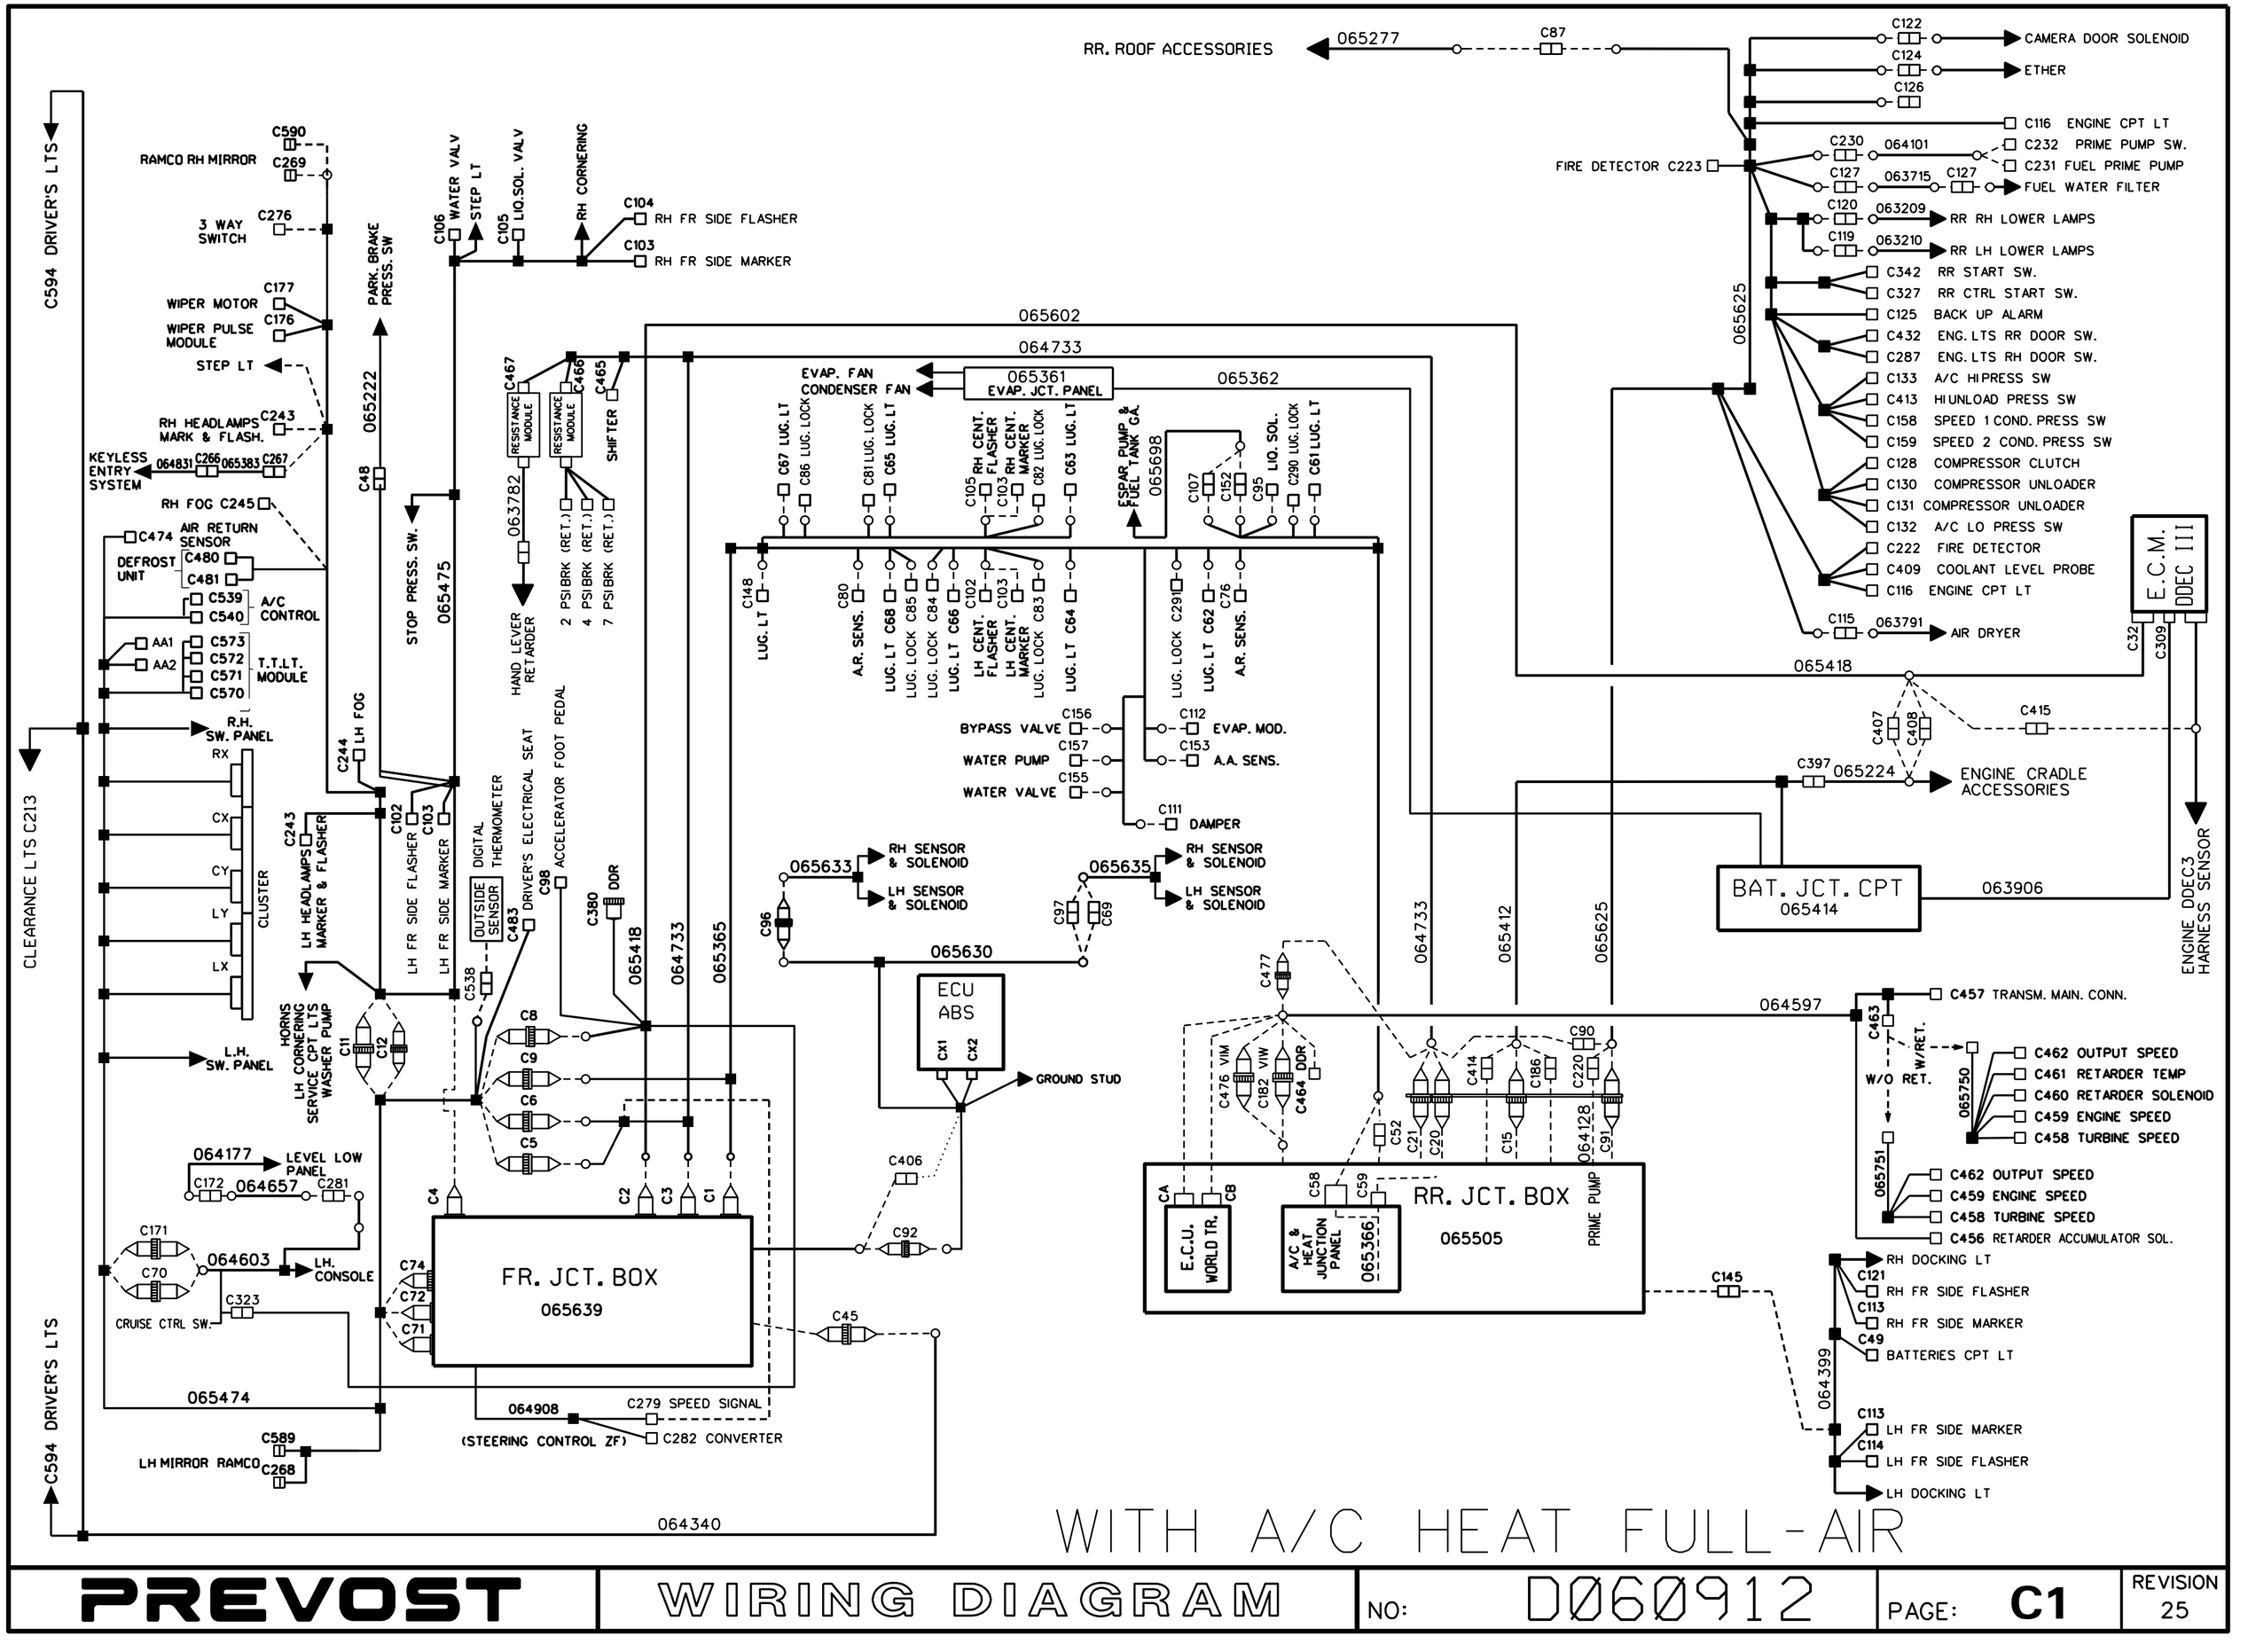

WITH A/C HEAT FULL-AIR

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C1	REVISION 25

WITH A/C - HEAT DRIVER ONLY

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C2	REVISION 00

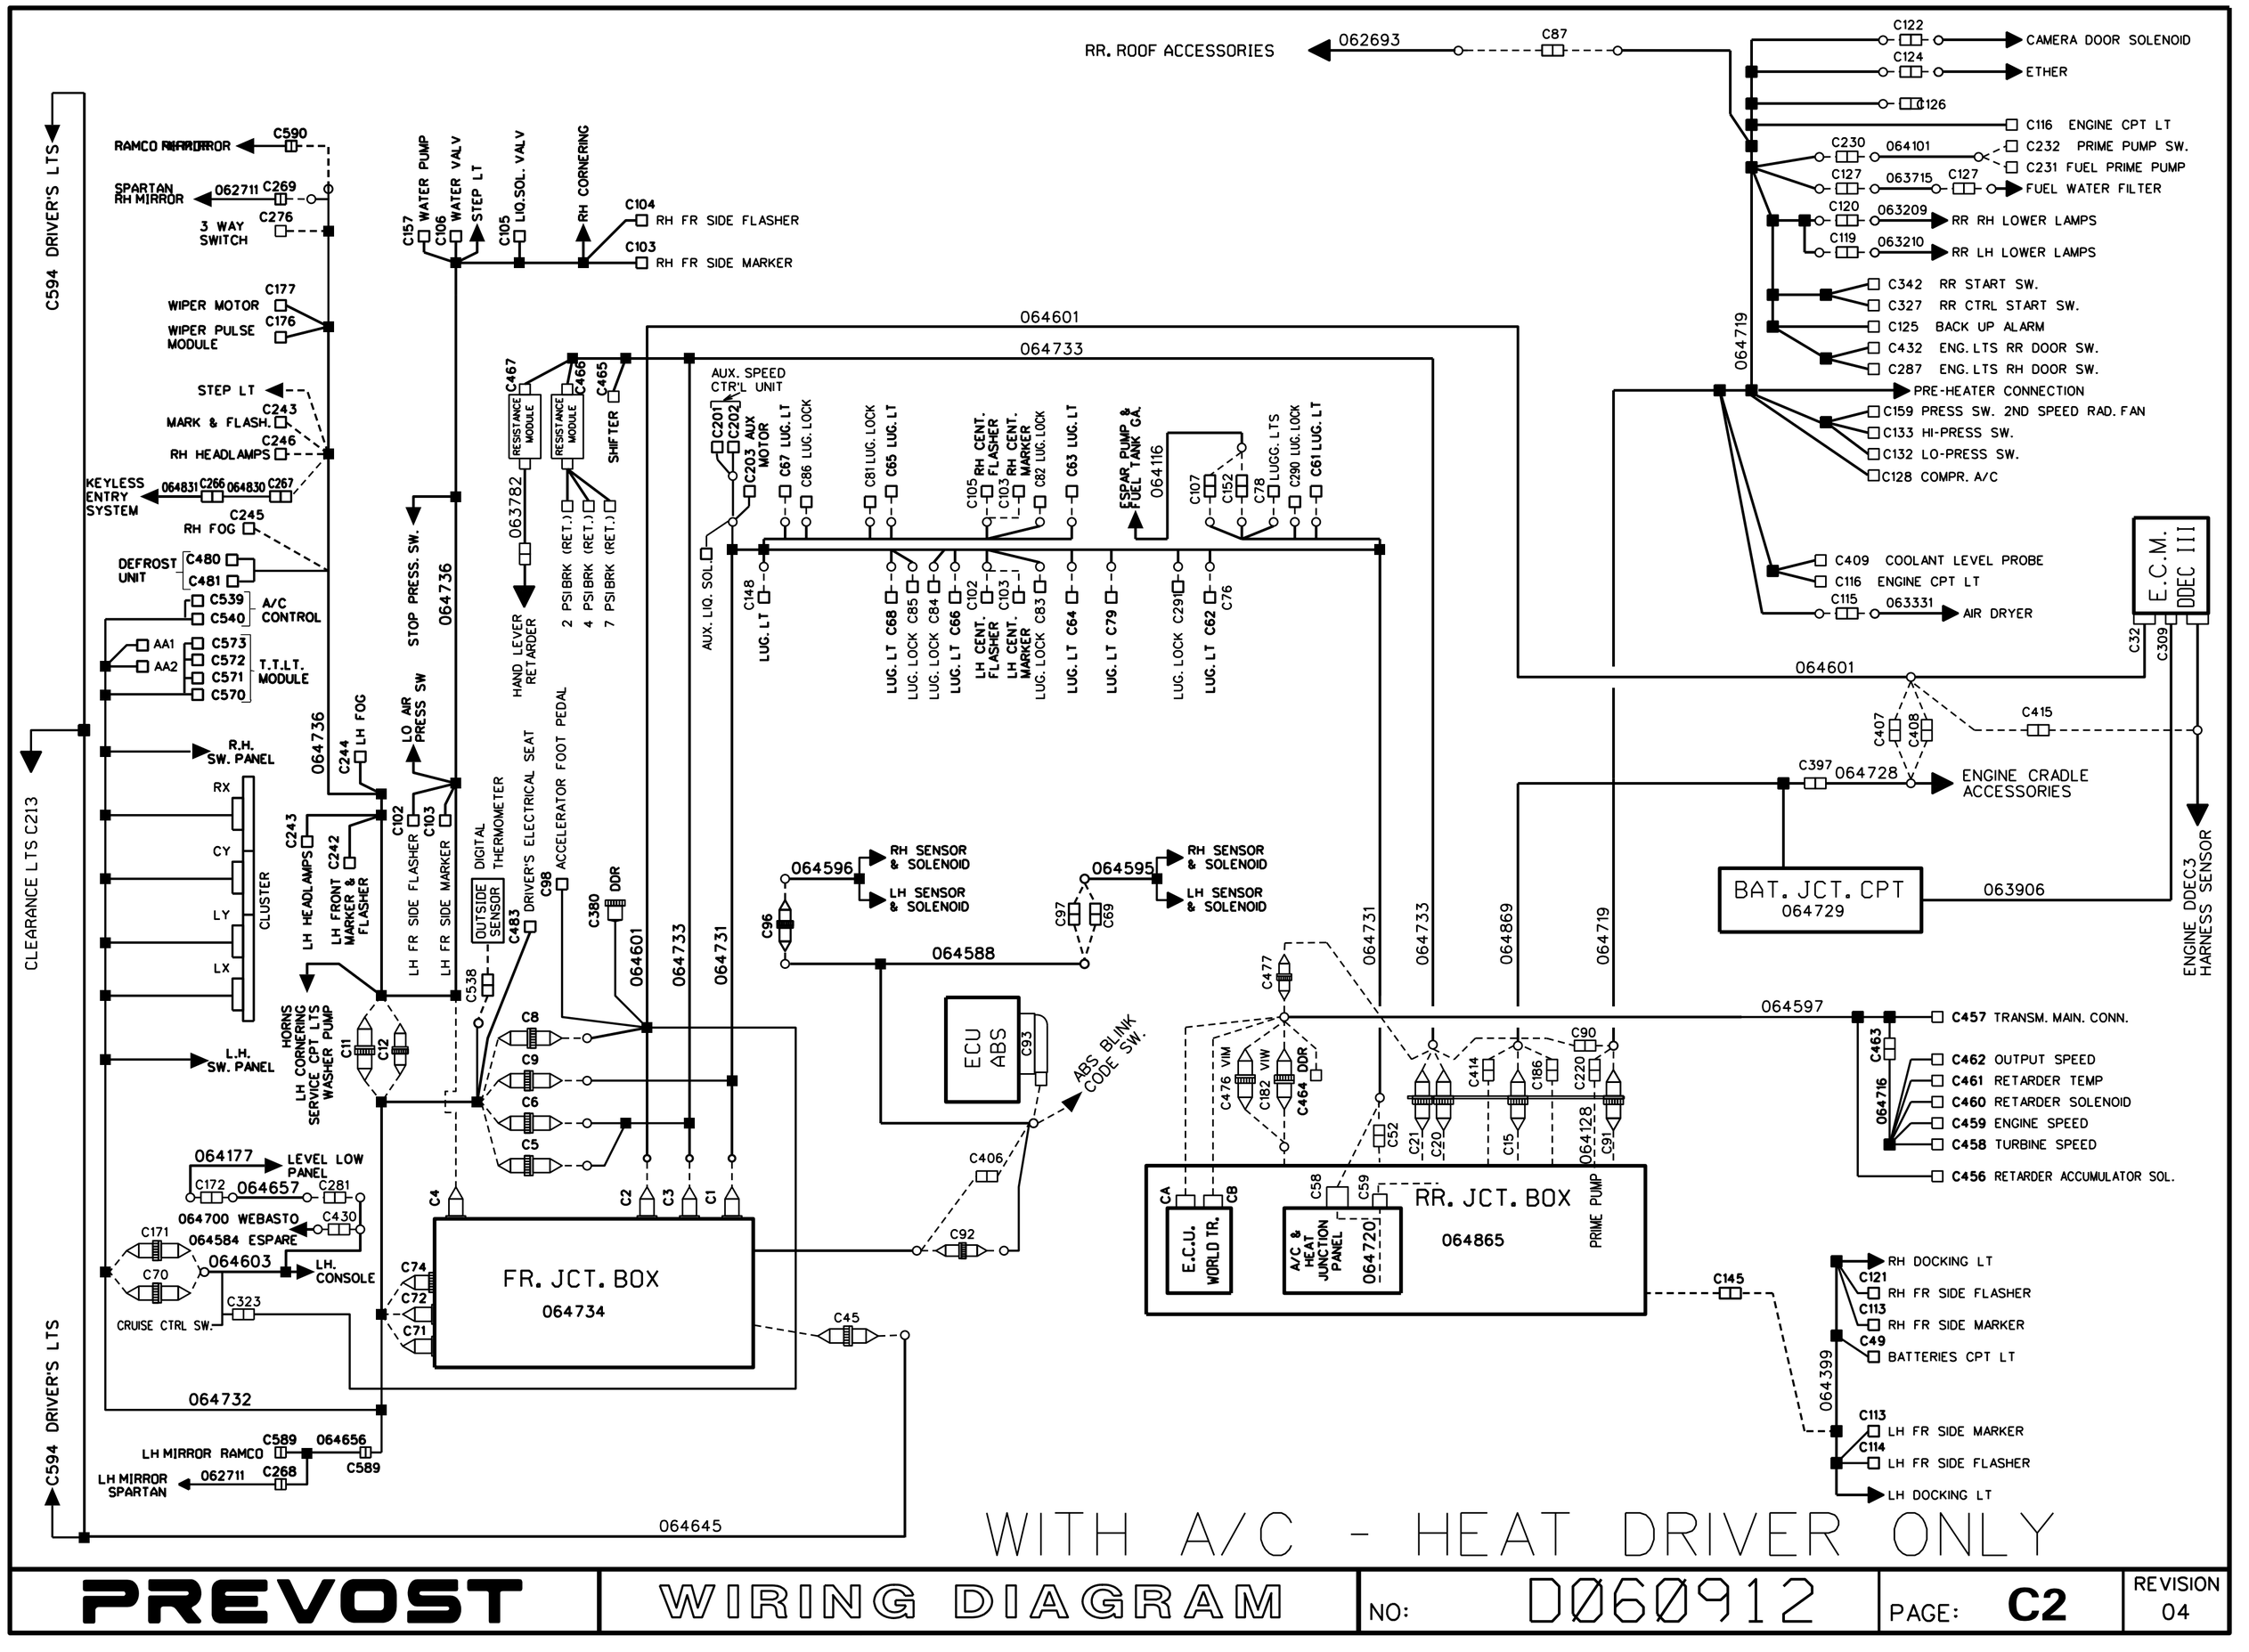

WITH A/C - HEAT DRIVER ONLY

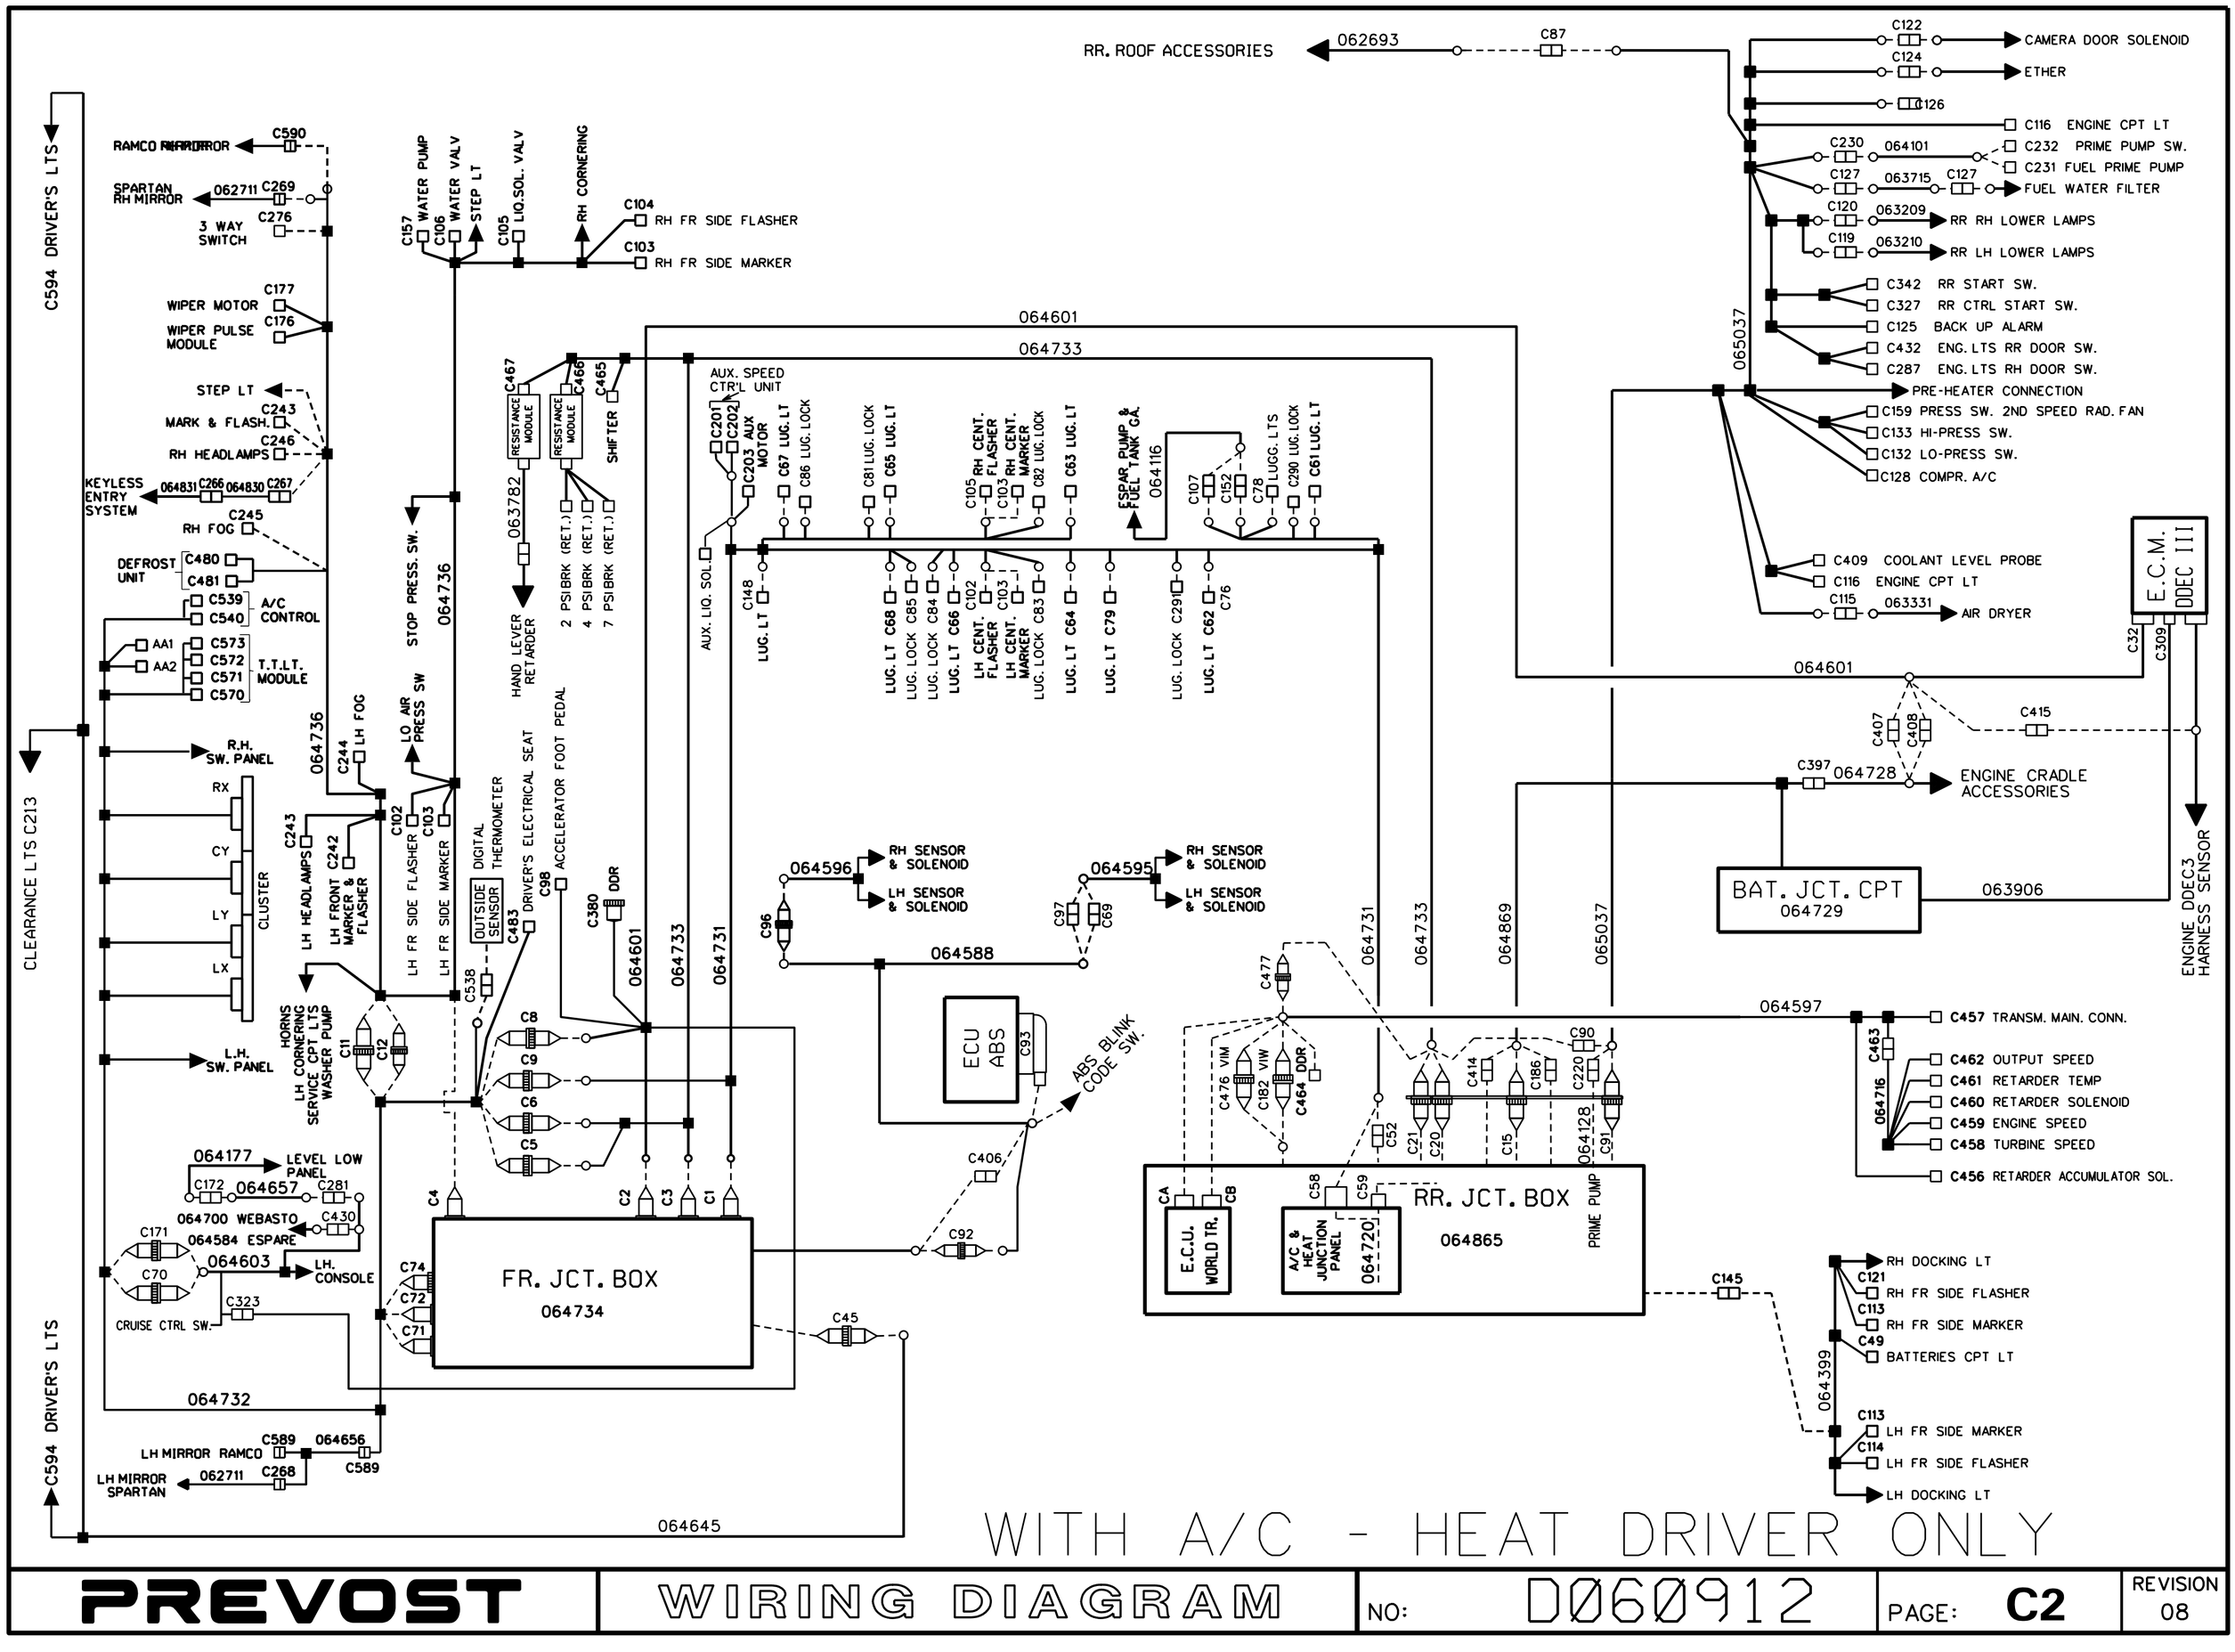

WITH A/C - HEAT DRIVER ONLY

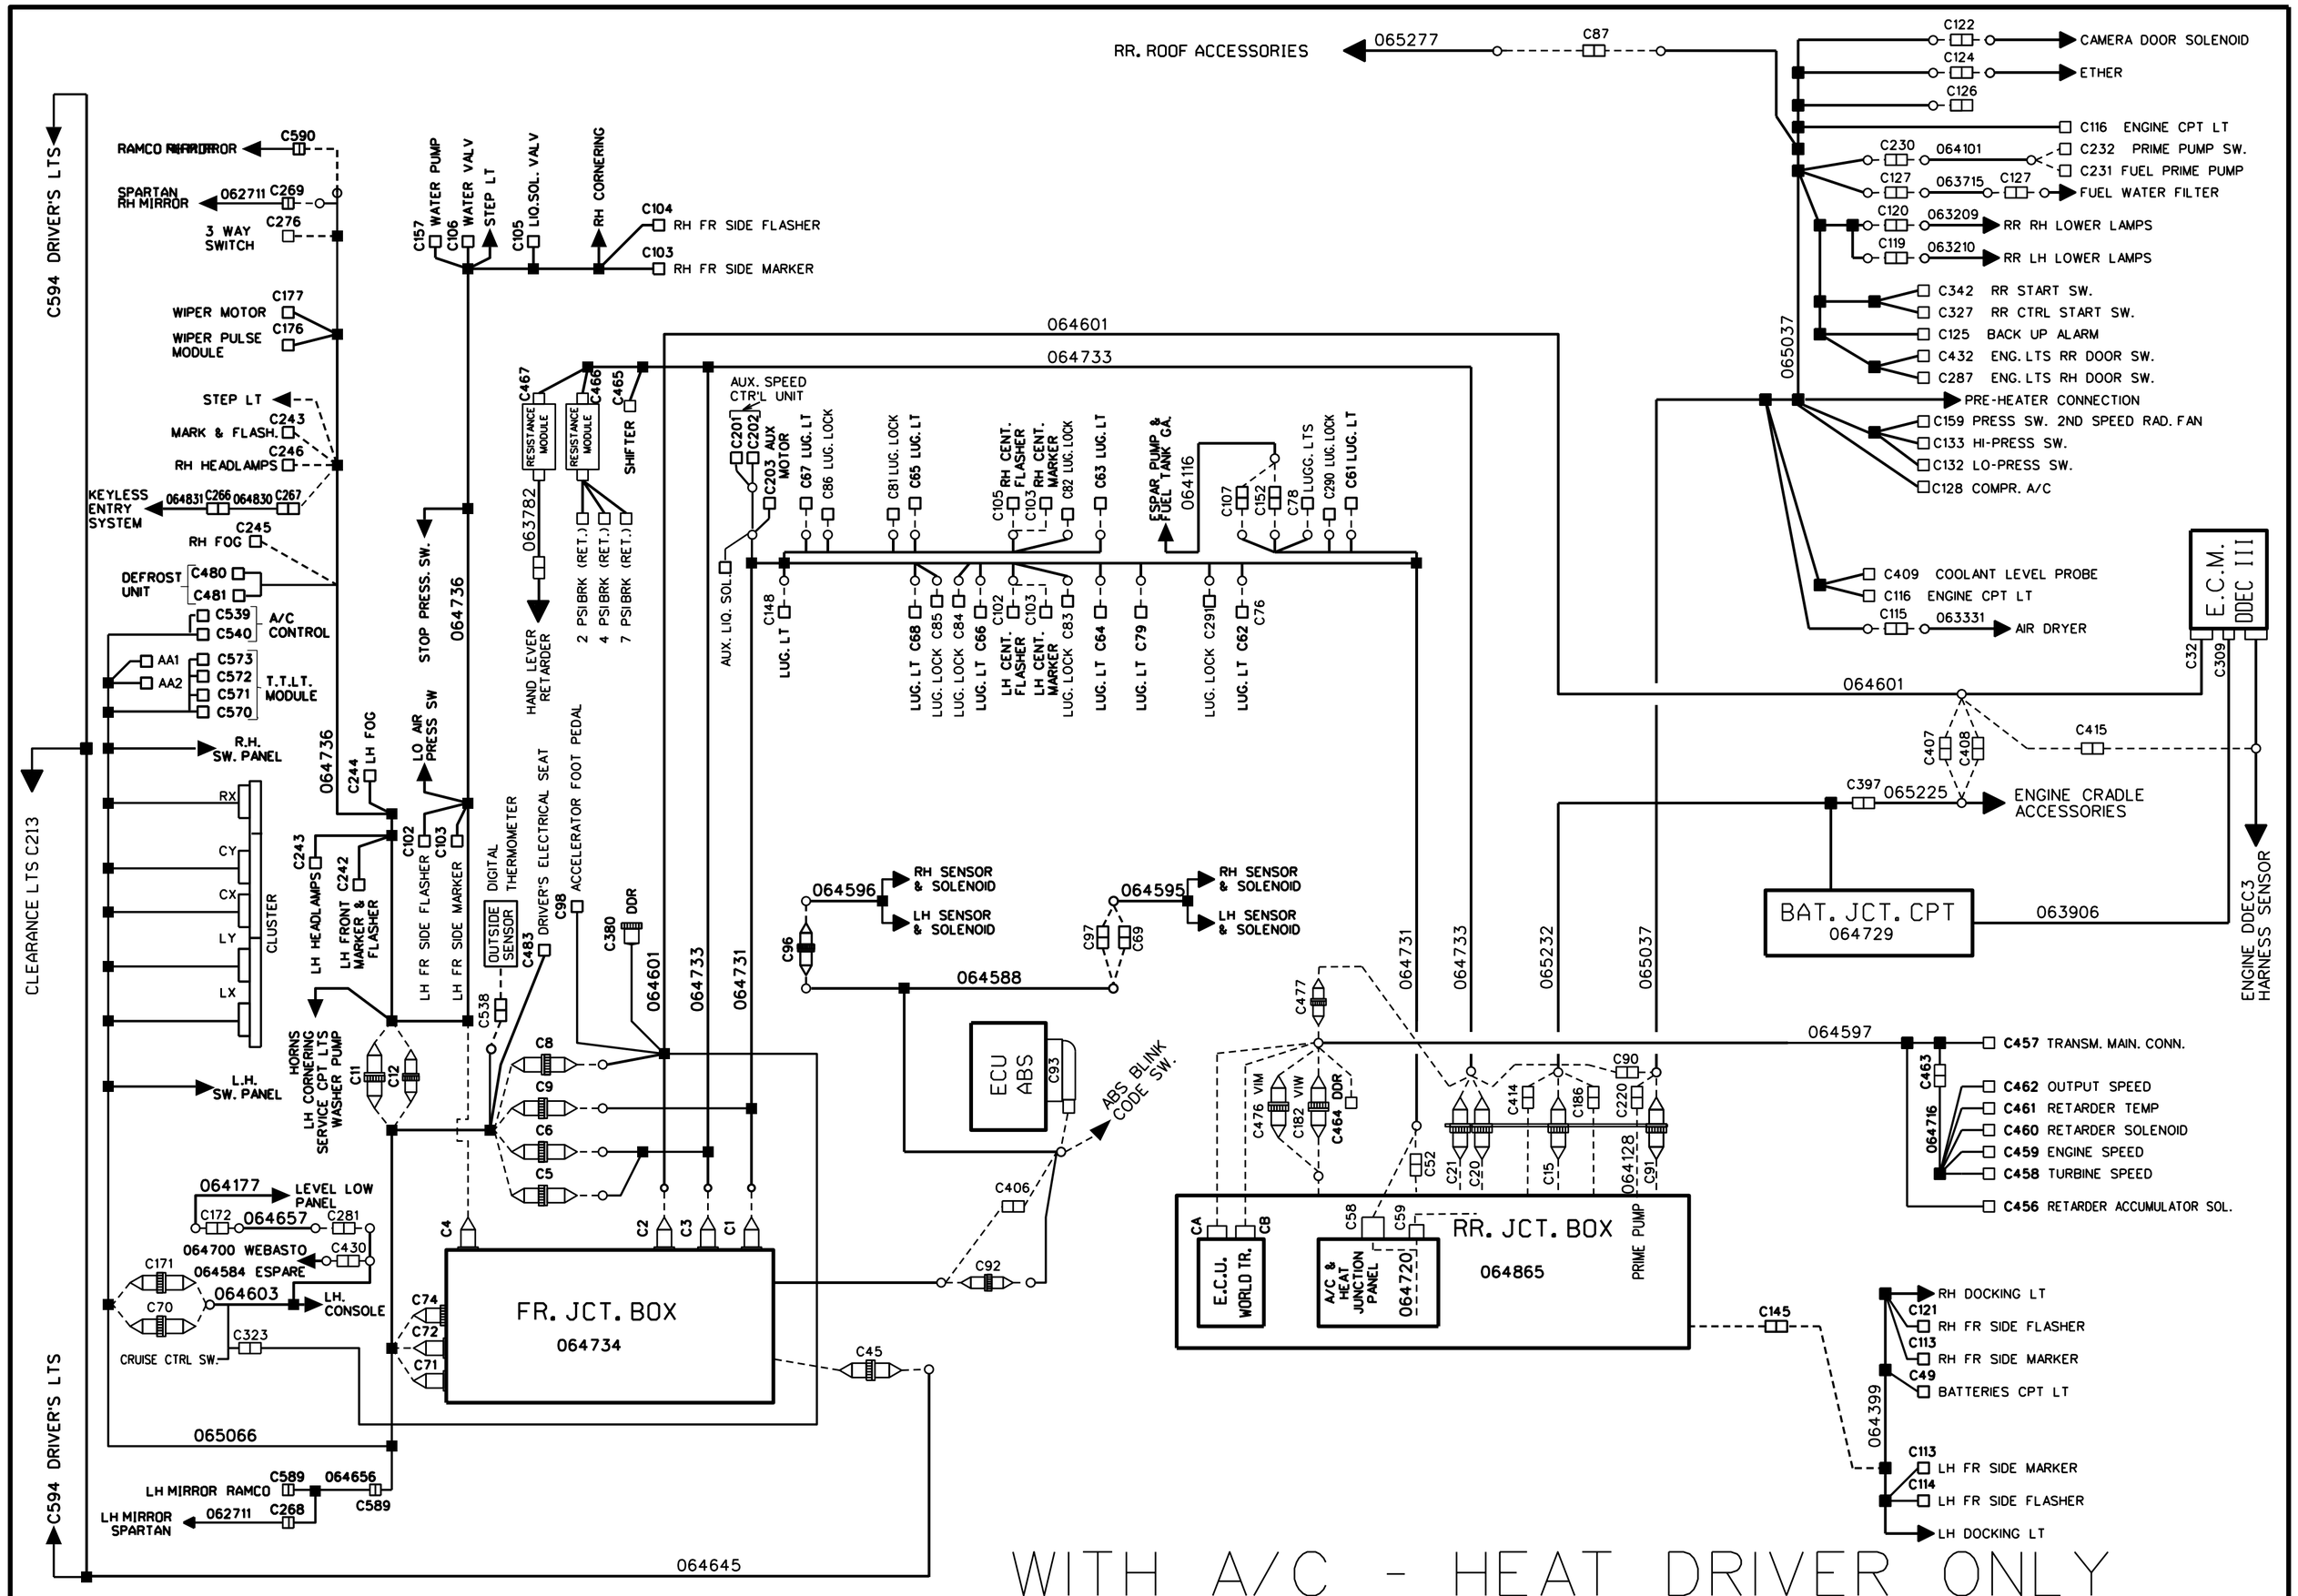

WITH A/C - HEAT DRIVER ONLY

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C2	REVISION 09

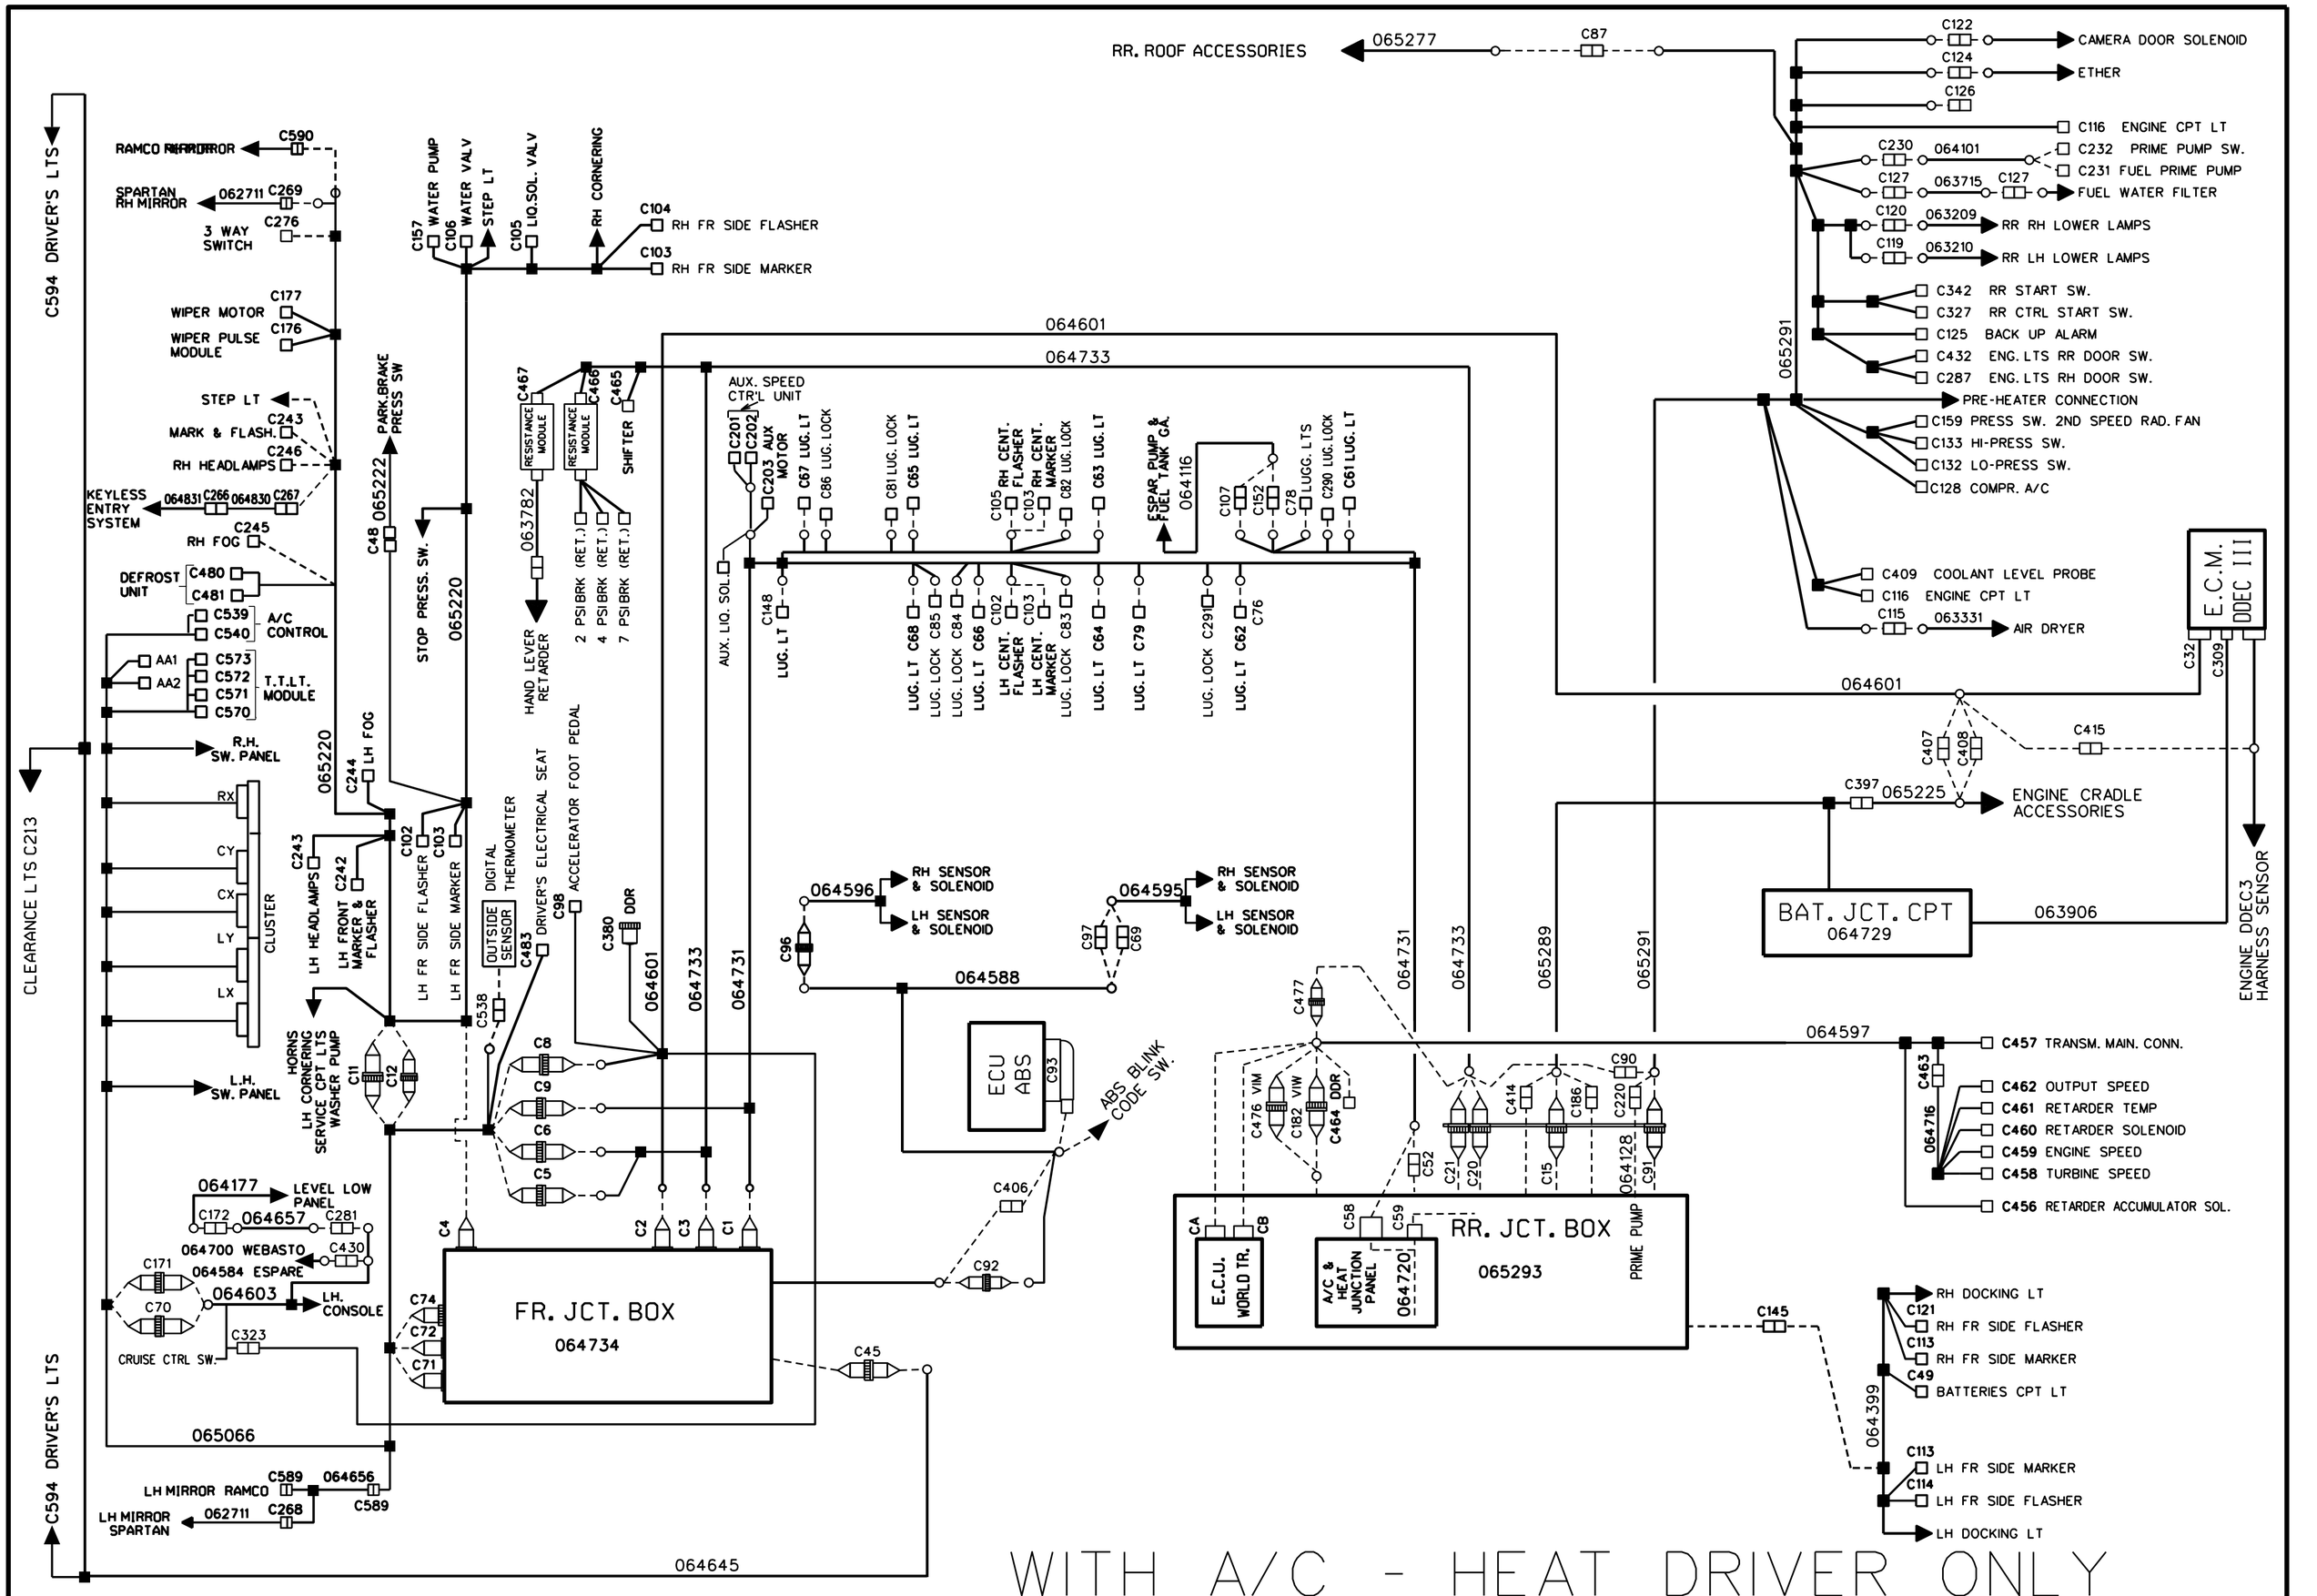

WITH A/C - HEAT DRIVER ONLY

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C2	REVISION 10

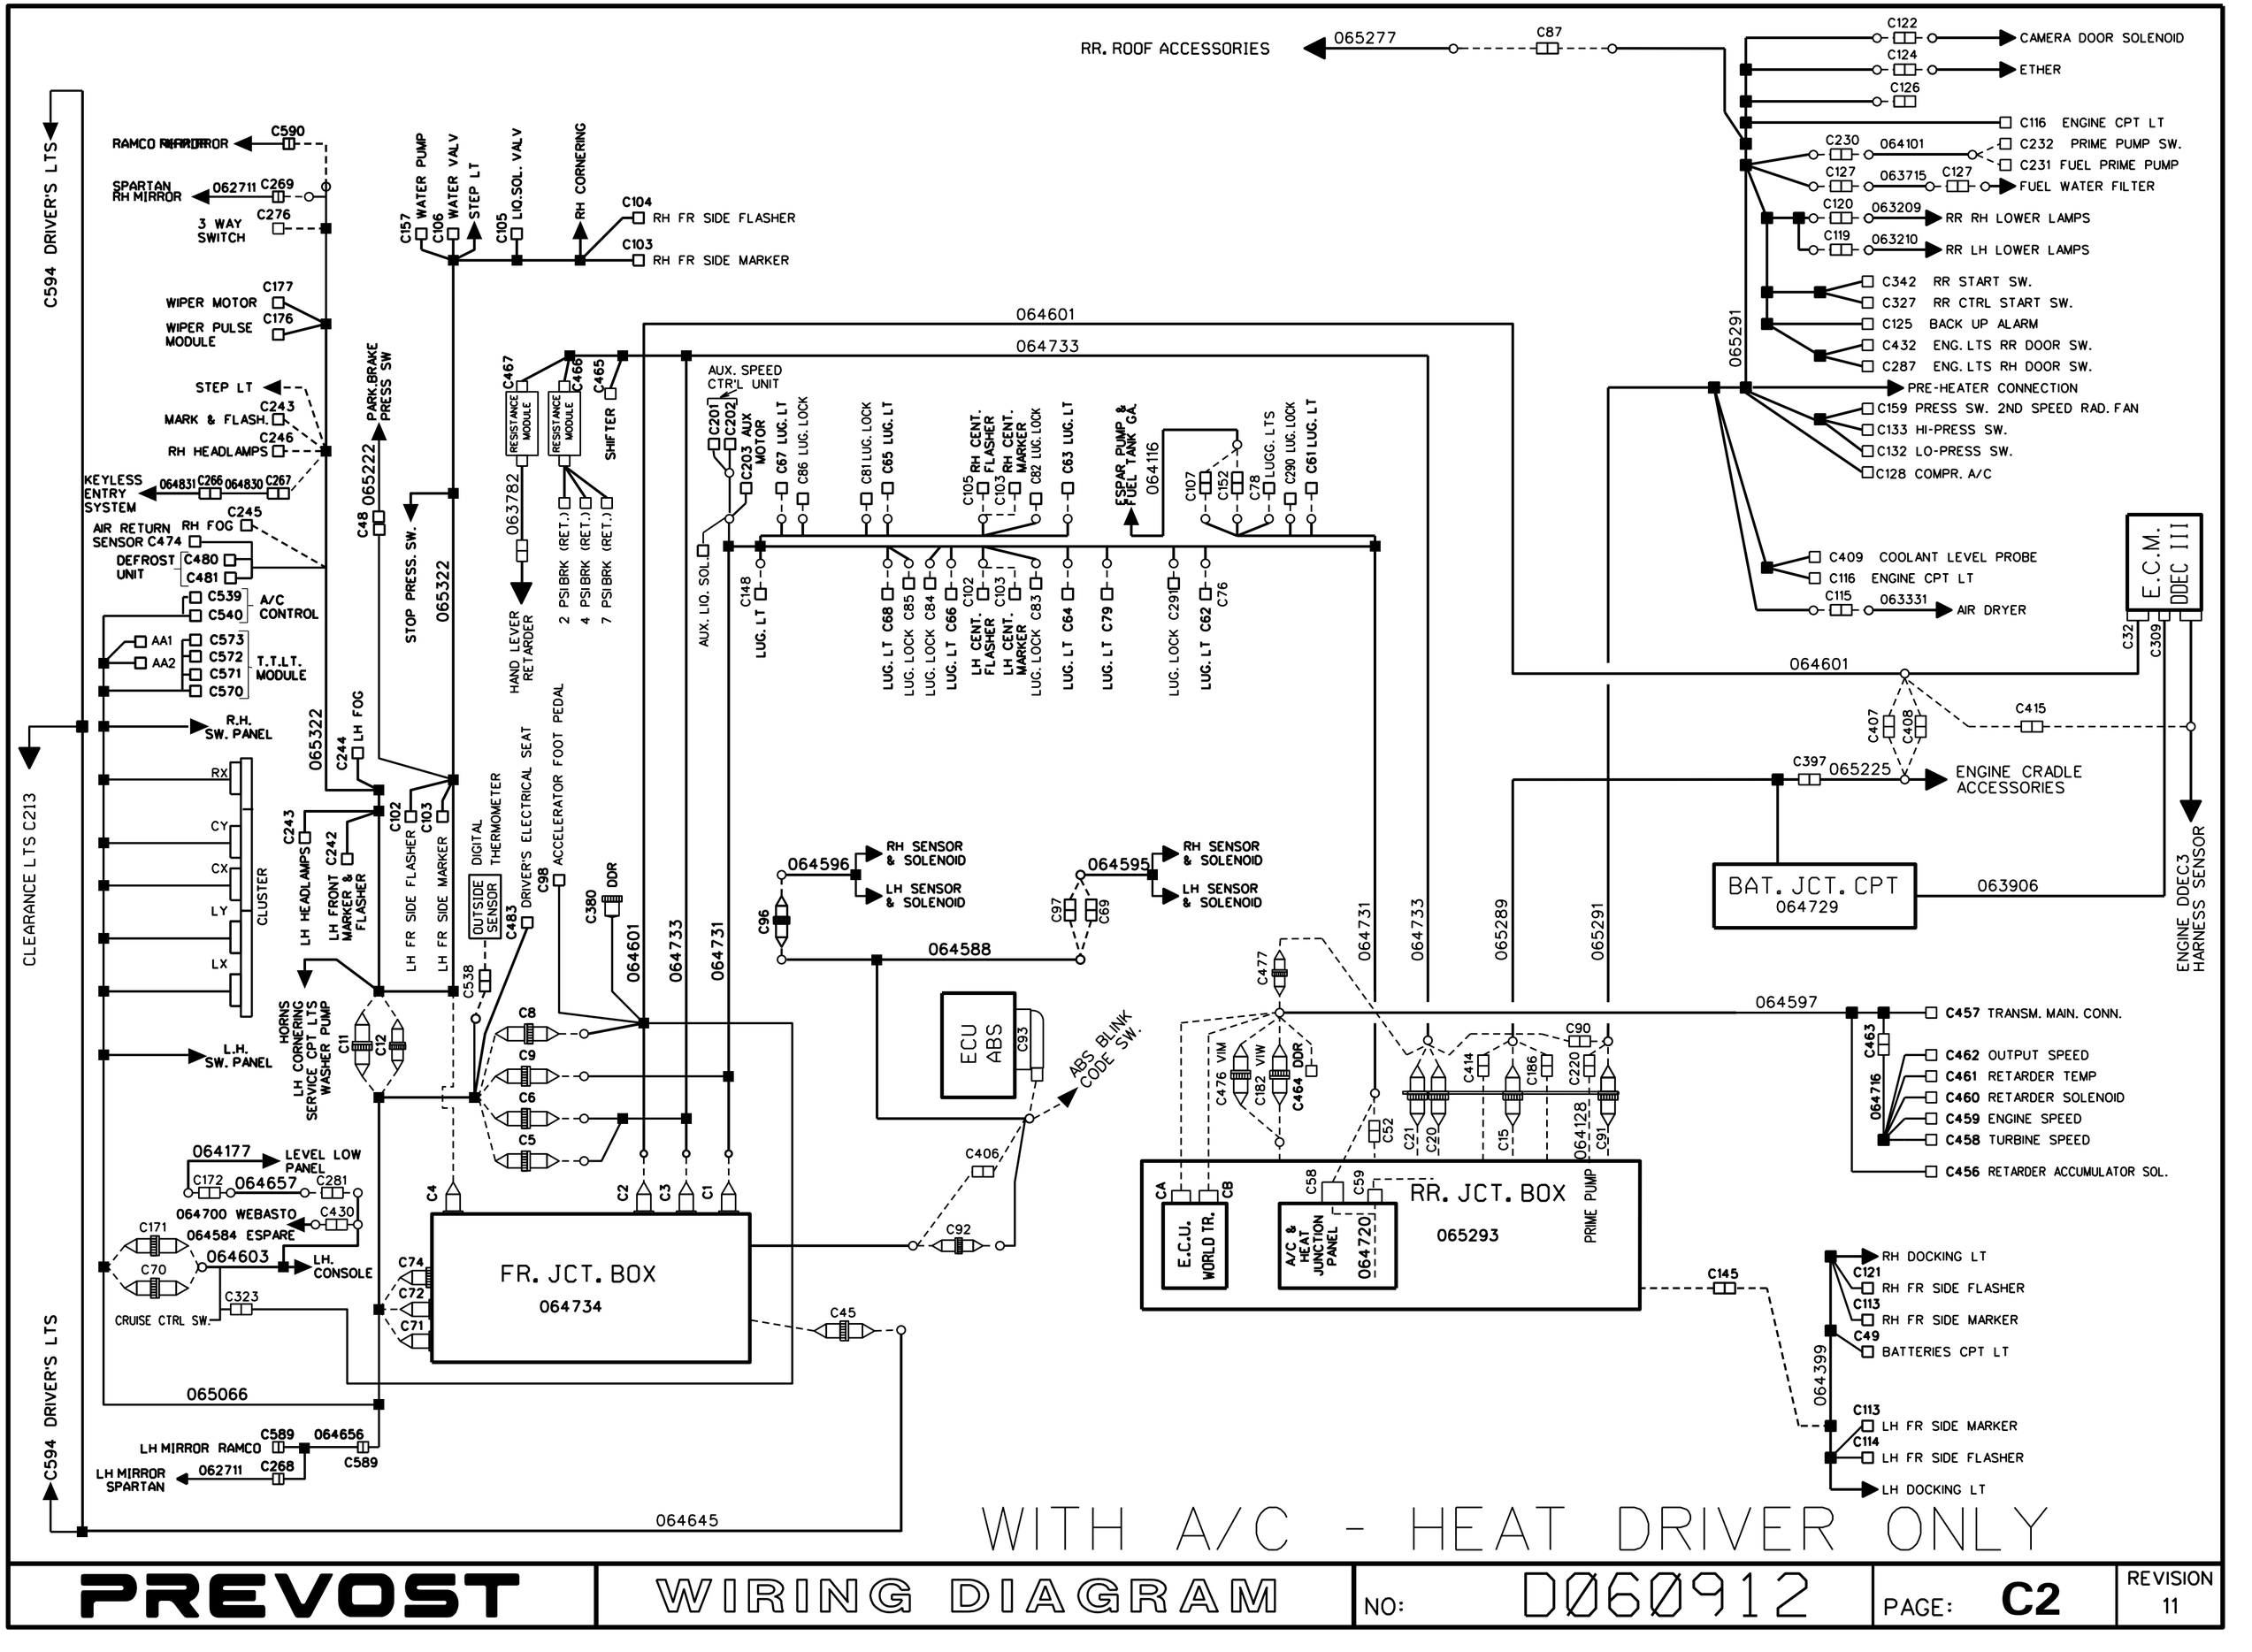

WITH A/C - HEAT DRIVER ONLY

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C2	REVISION 11

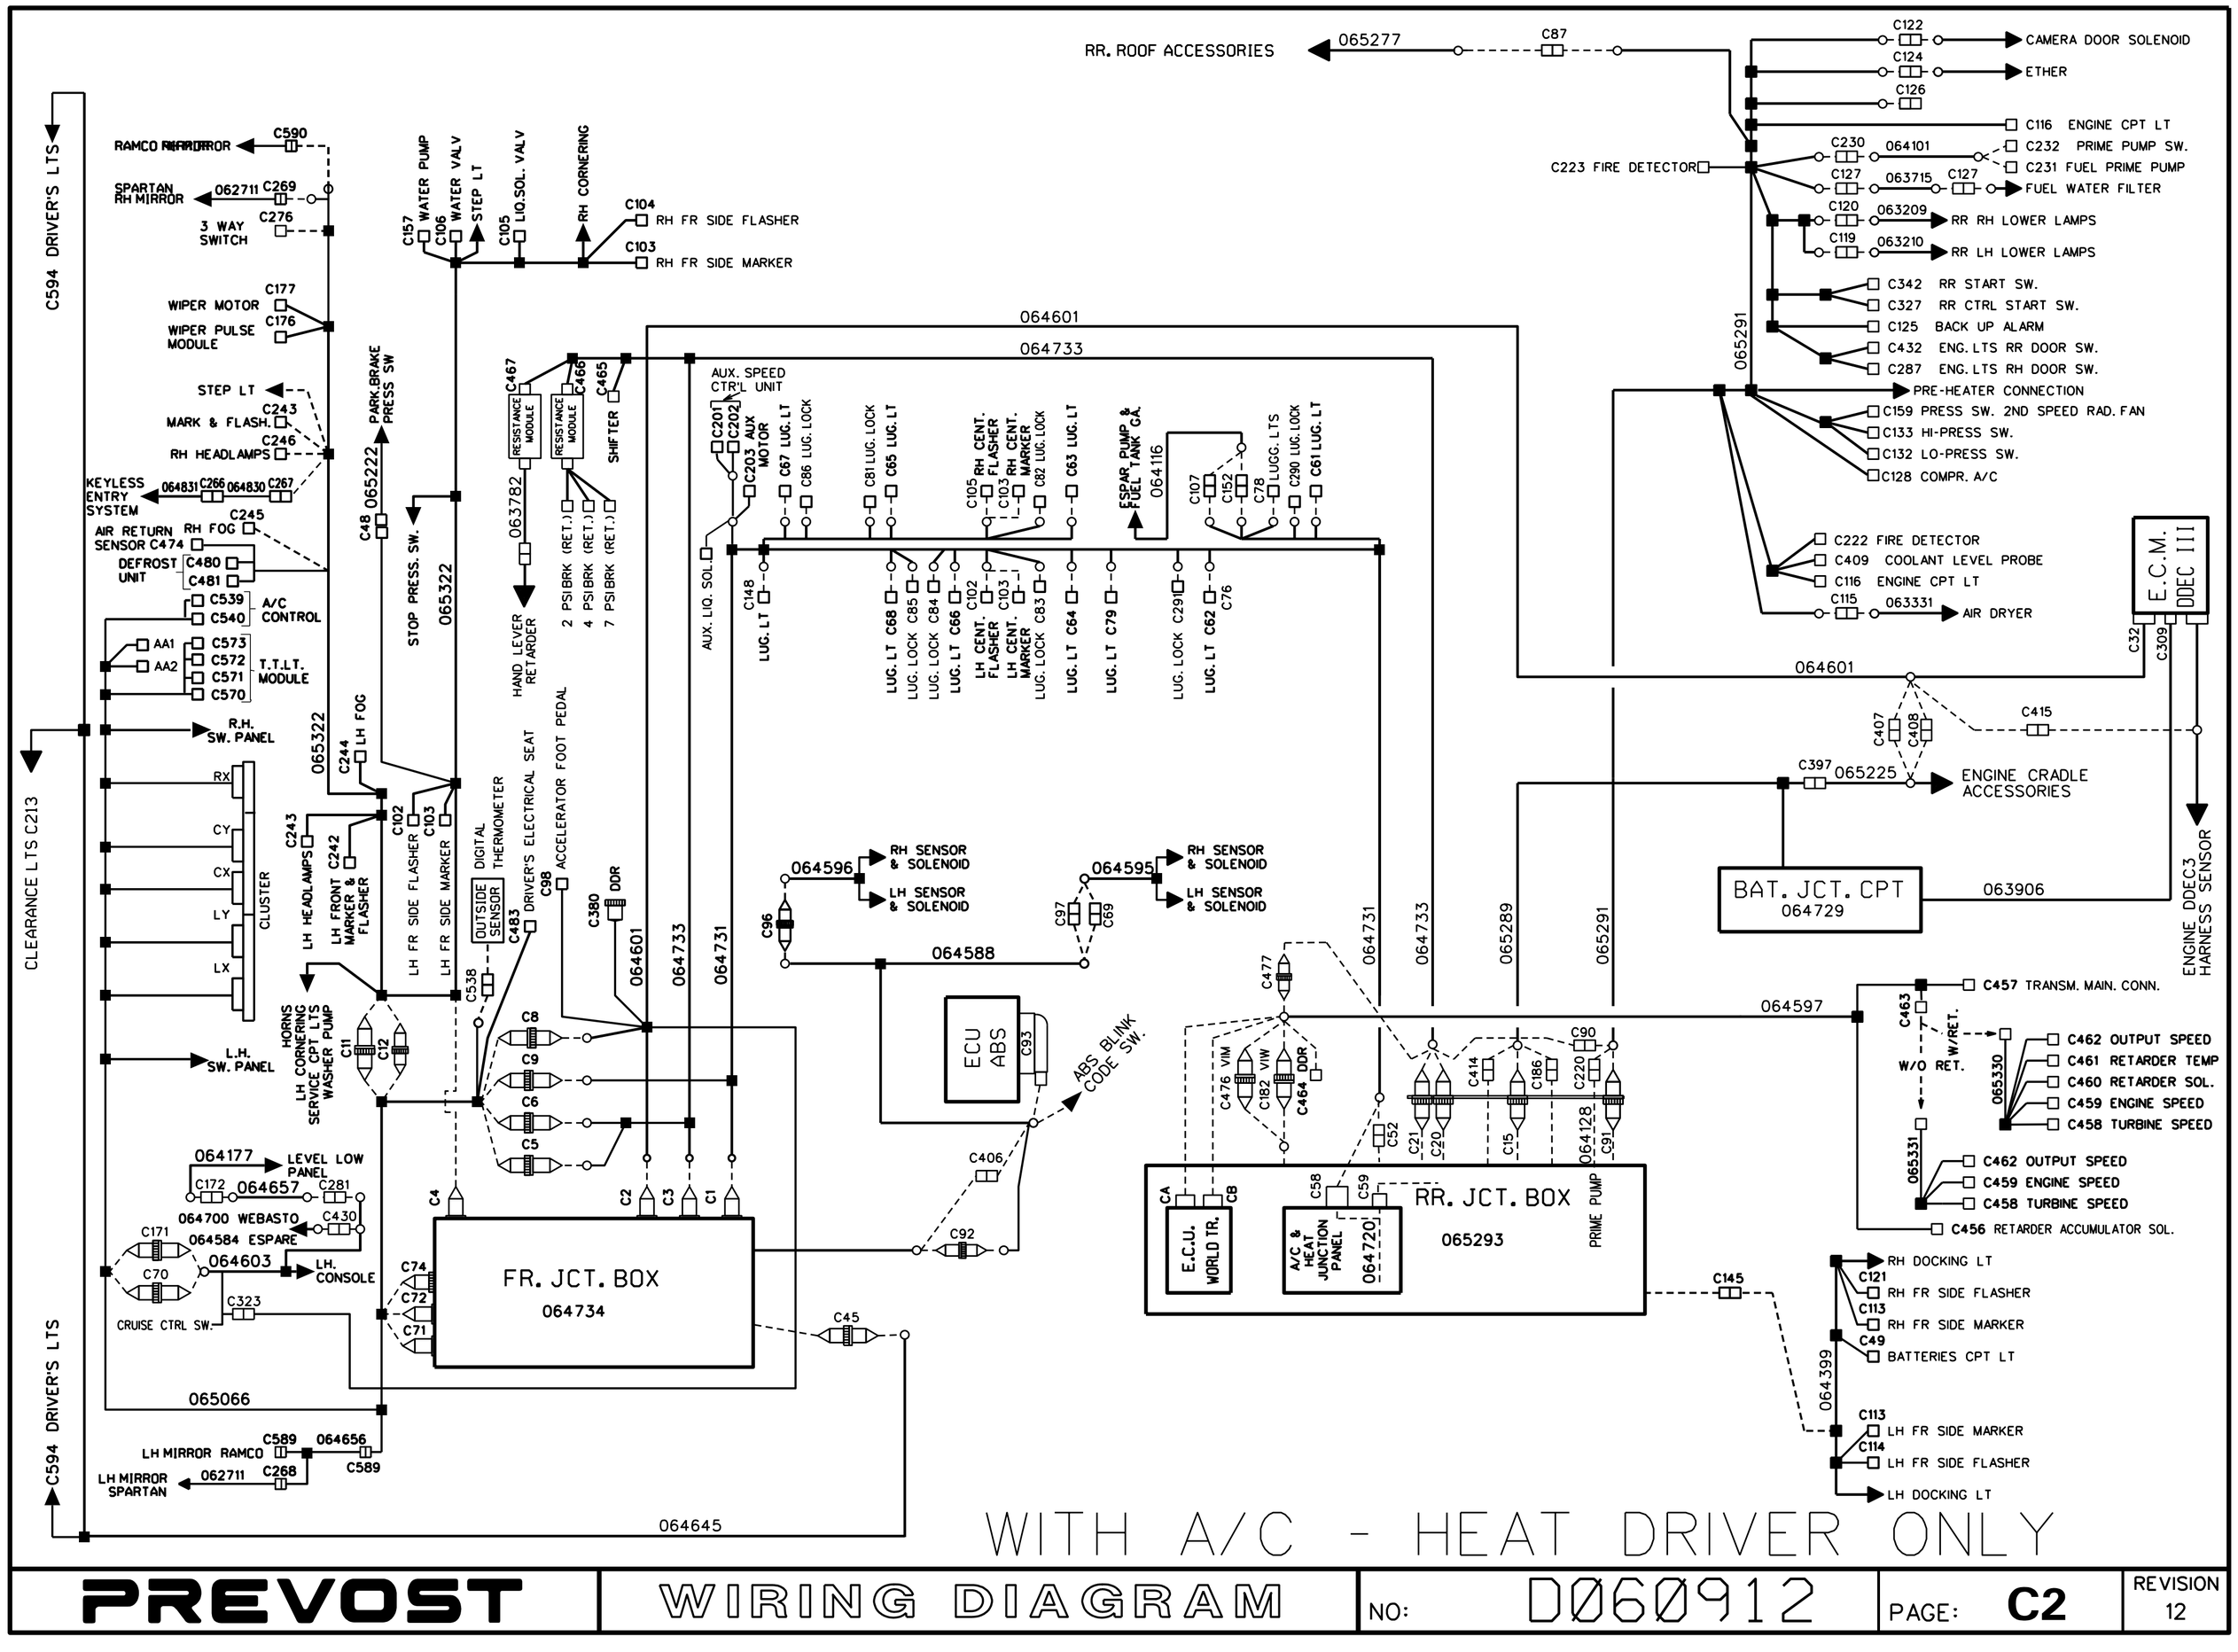

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C2	REVISION 12

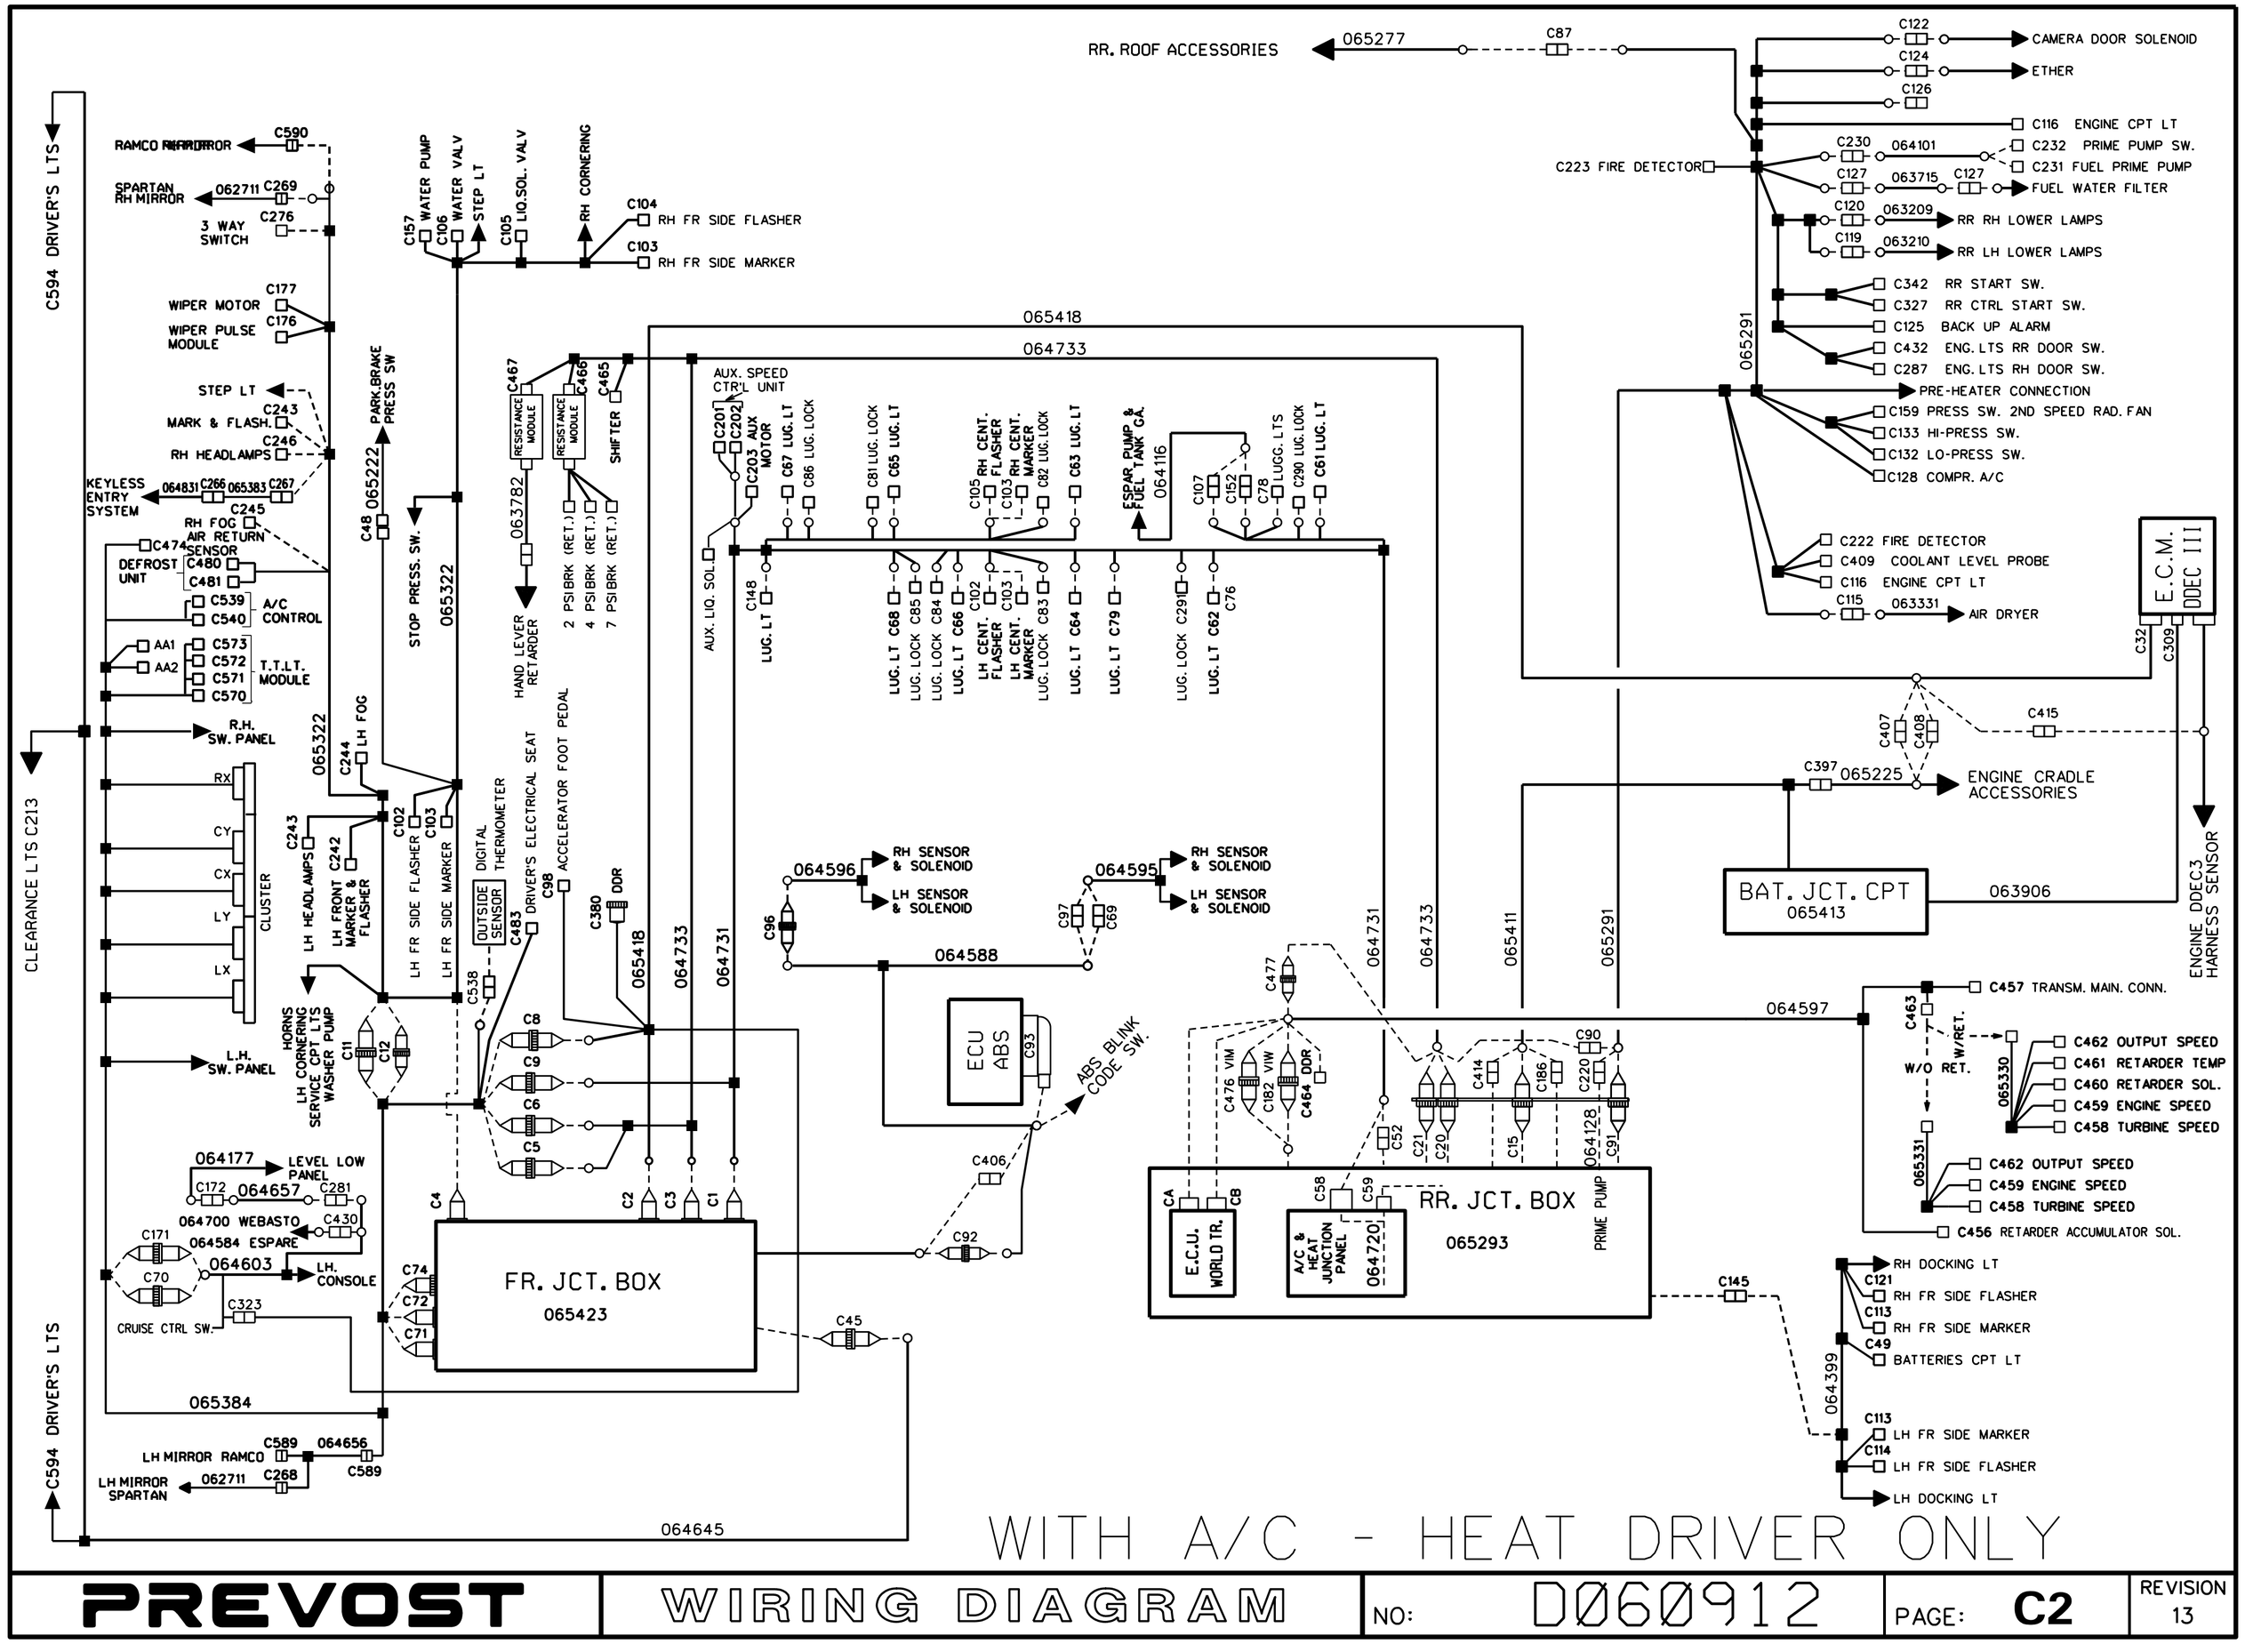

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C2	REVISION 13

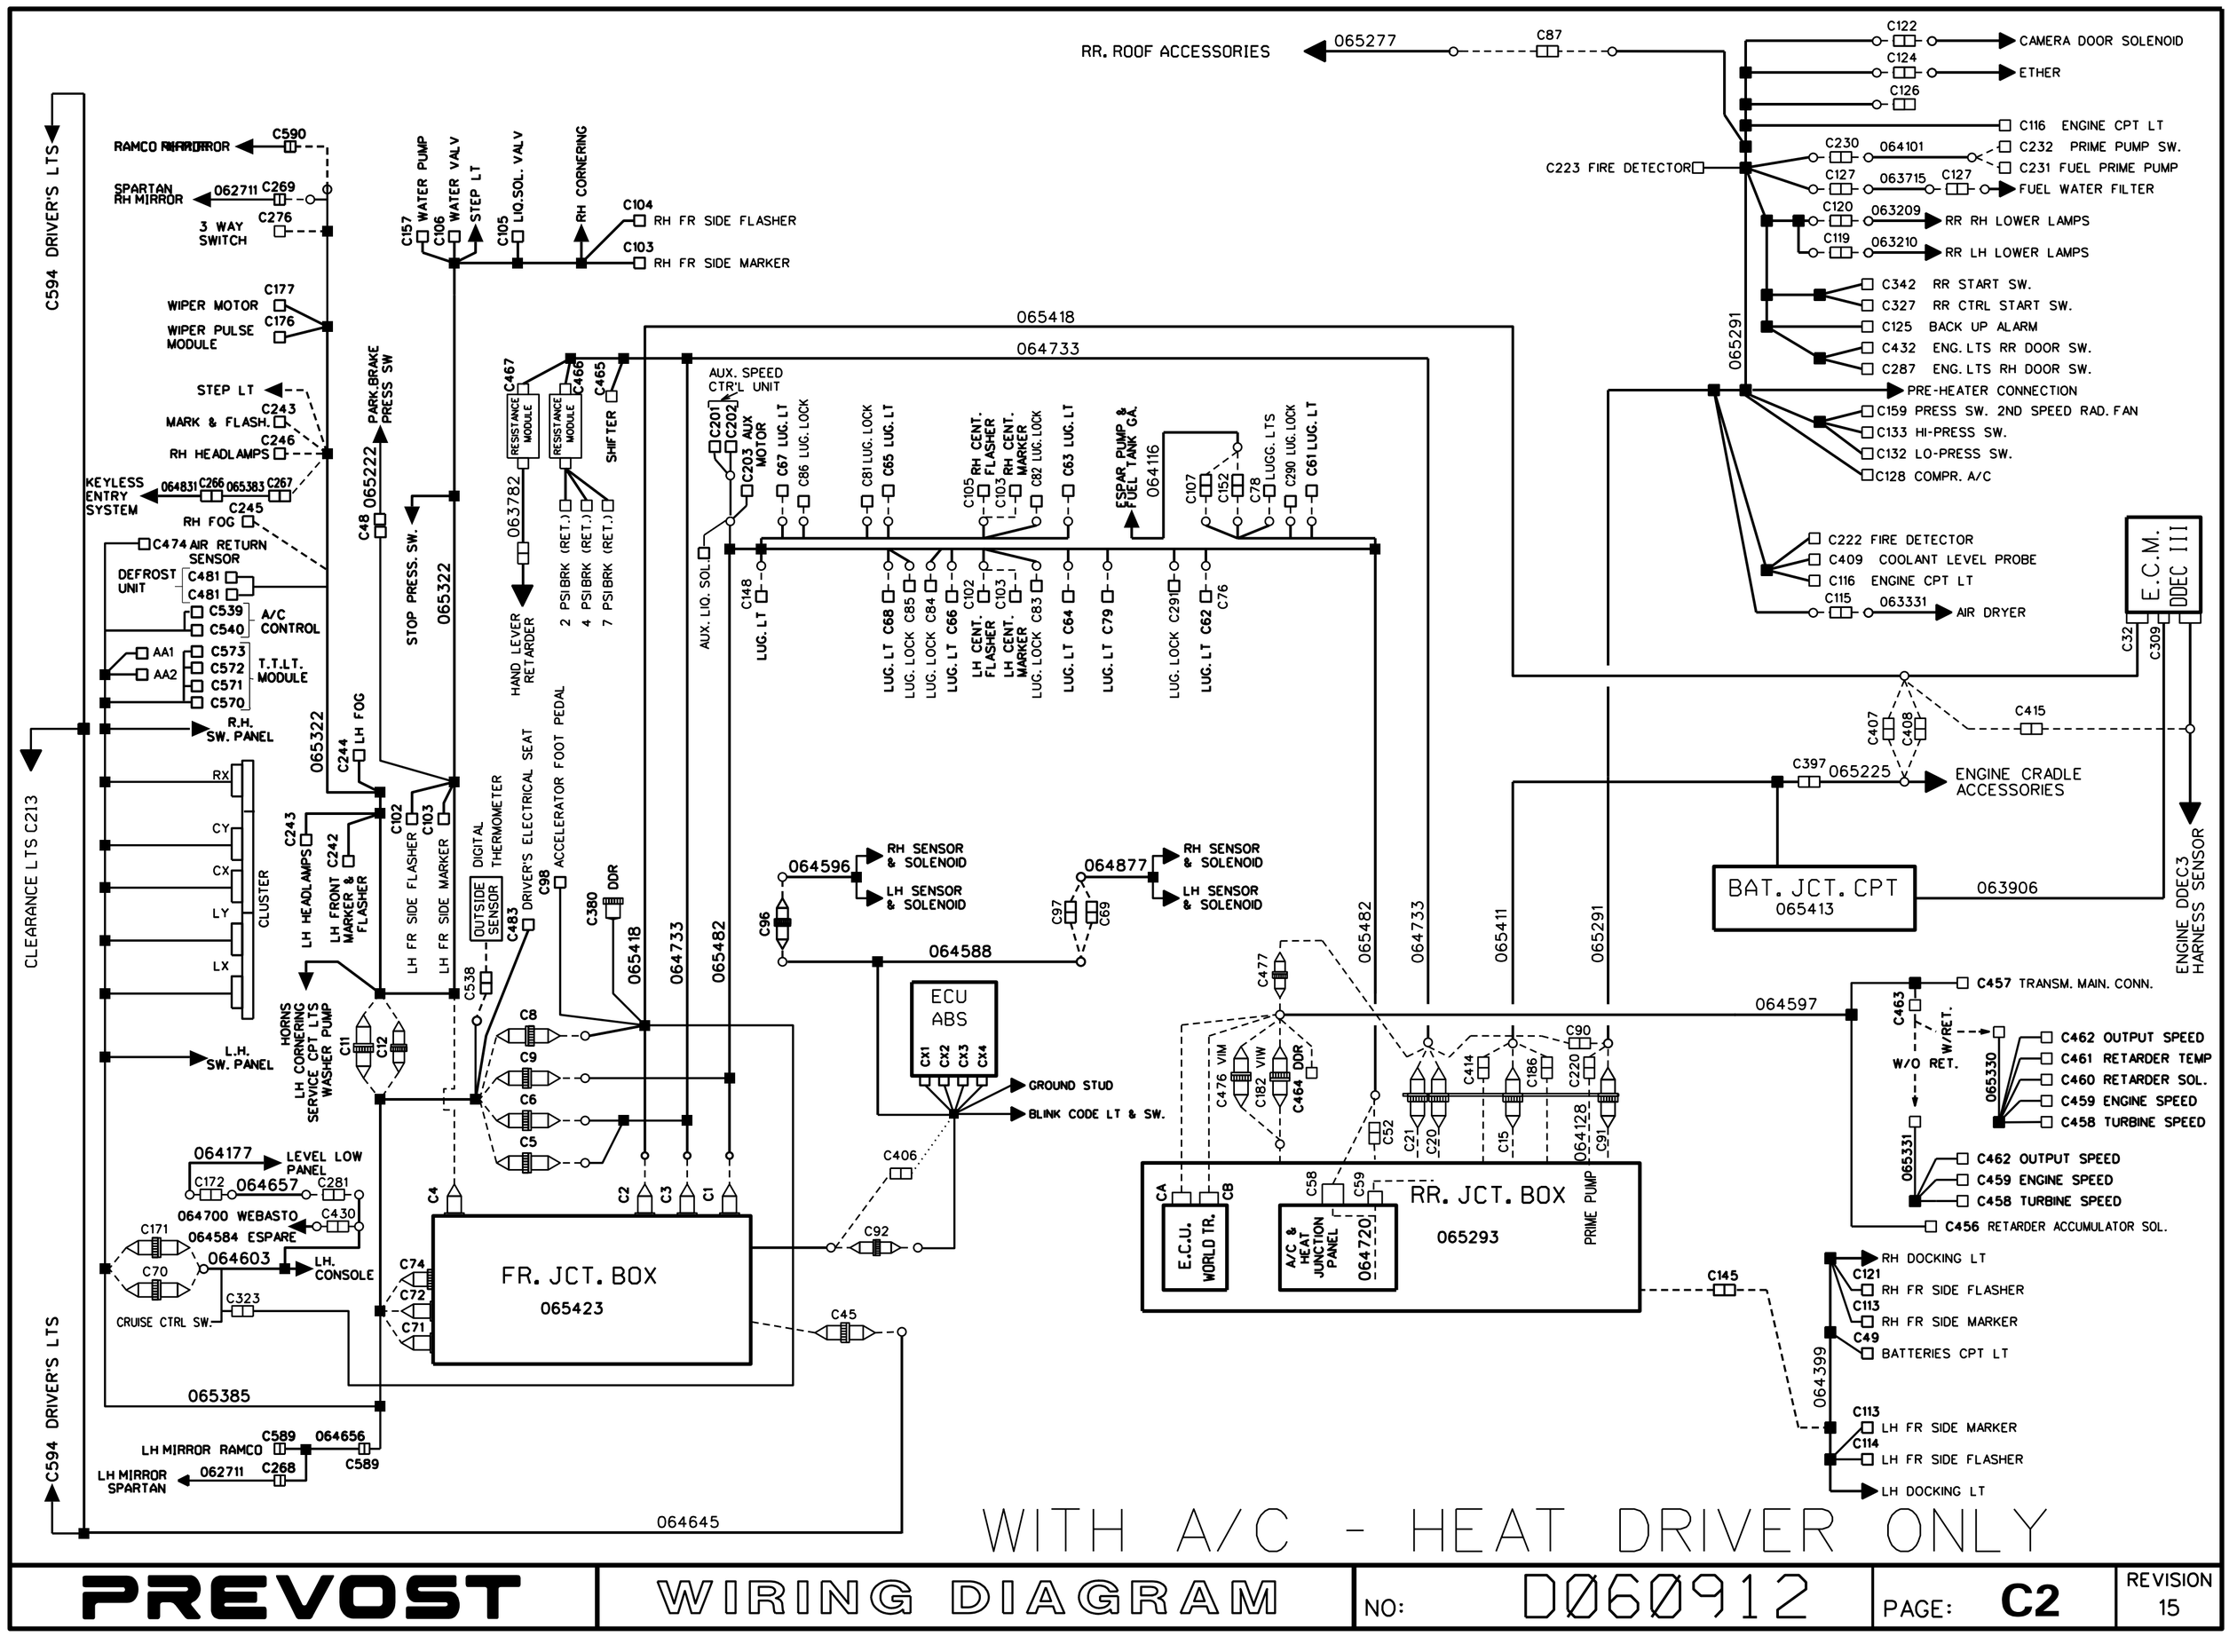

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C2	REVISION 15

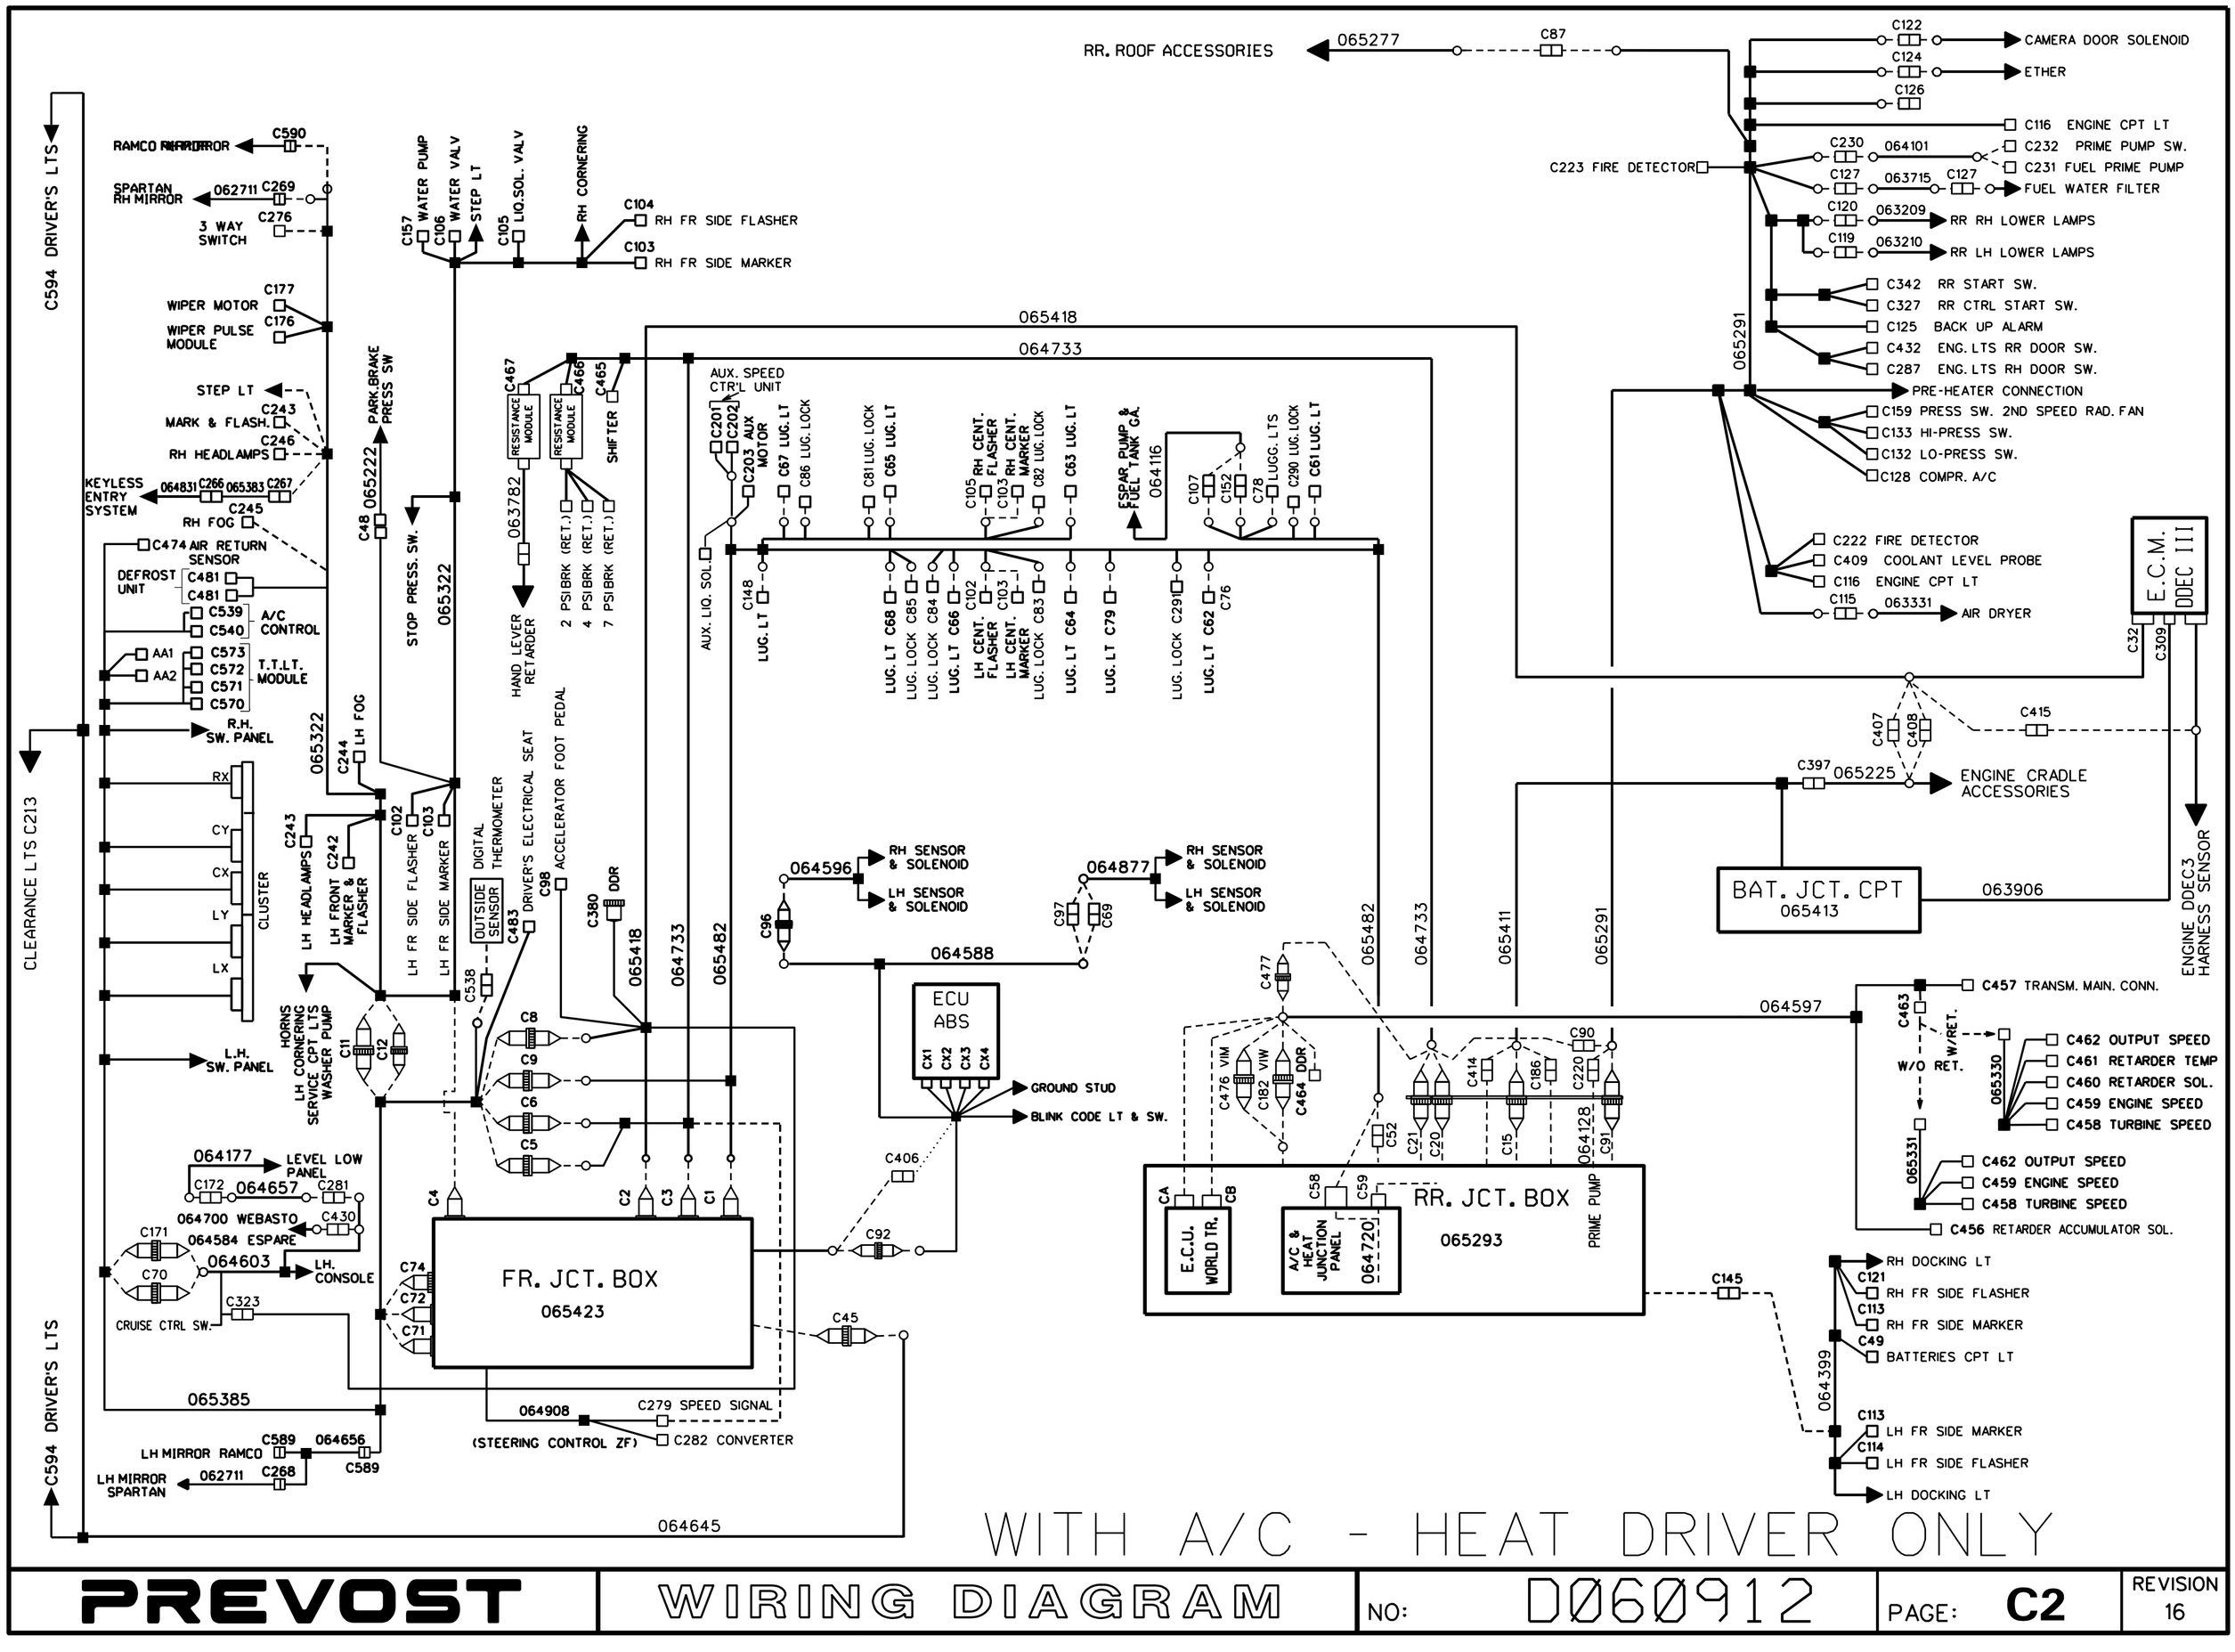

WITH A/C - HEAT DRIVER ONLY

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C2	REVISION 16

C594 DRIVER'S LTS

RAMCO MIRROR C590

SPARTAN RH MIRROR 062711 C269

C276 3 WAY SWITCH

C177 WIPER MOTOR

C176 WIPER PULSE MODULE

STEP LT

C243 MARK & FLASH.

C246 RH HEADLAMPS

KEYLESS ENTRY SYSTEM 064831 C266 065383 C267

C245 RH FOG

C474 AIR RETURN SENSOR

DEFROST UNIT C481 C481

C539 C540 A/C CONTROL

AA1 AA2 C573 C572 C571 C570 T.T.LT. MODULE

R.H. SW. PANEL

RX CY CX LY LX CLUSTER

L.H. SW. PANEL

CLEARANCE LTS C213

C594 DRIVER'S LTS

C157 WATER PUMP

C106 WATER VALV

STEP LT

C105 LIO.SOL. VALV

RH CORNERING

C104 RH FR SIDE FLASHER

C103 RH FR SIDE MARKER

PARK.BRAKE PRESS SW

C48 065222

STOP PRESS. SW.

065322

C244 LH FOG

C243 LH HEADLAMPS

C242 LH FRONT MARKER & FLASHER

C102 LH FR SIDE FLASHER

C103 LH FR SIDE MARKER

DIGITAL THERMOMETER OUTSIDE SENSOR

C483 DRIVER'S ELECTRICAL SEAT

C98 ACCELERATOR FOOT PEDAL

HORNS LH CORNERING SERVICE CPT LTS WASHER PUMP

C11 C12

C538

C380 DDR

065418

064733

065482

C8 C9 C6 C5

C4 C2 C3 C1

C467 C466 C465

RESISTANCE MODULE

063782

HAND LEVER RETARDER

2 PSI BRK (RET.)

4 PSI BRK (RET.)

7 PSI BRK (RET.)

SHIFTER

065418

064733

AUX. SPEED CTR'L UNIT

C201 C202 C203 AUX MOTOR

AUX. LIQ. SOL.

C148 LUG. LT

C67 LUG. LT C86 LUG. LOCK

C81 LUG. LOCK C65 LUG. LT

C105 RH CENT. FLASHER C103 RH CENT. MARKER C82 LUG. LOCK

C63 LUG. LT

ESPAR. PUMP & FUEL TANK GA. 064116

C107 C152 C78 LUGG. LTS C290 LUG. LOCK C61 LUG. LT

LUG. LT C68 LUG. LOCK C85 LUG. LOCK C84 LUG. LT C66

LH CENT. FLASHER C102 LH CENT. MARKER C103 LUG. LOCK C83

LUG. LT C64 LUG. LT C79 LUG. LOCK C291 LUG. LT C62 C76

064596 RH SENSOR & SOLENOID LH SENSOR & SOLENOID

C96

064588

064877 RH SENSOR & SOLENOID LH SENSOR & SOLENOID

C97 C69

ECU ABS CX1 CX2 CX3 CX4

GROUND STUD

BLINK CODE LT & SW.

C406

C92

C45

FR. JCT. BOX 065423

C74 C72 C71

064908 C279 SPEED SIGNAL

(STEERING CONTROL ZF) C282 CONVERTER

064177 LEVEL LOW PANEL

C172 064657 C281

064700 WEBASTO C430

C171 064584 ESPARE

C70 064603 LH. CONSOLE

C323 CRUISE CTRL SW.

065385

C589 064656 LH MIRROR RAMCO

C589

LH MIRROR SPARTAN 062711 C268

064645

C594 DRIVER'S LTS

RR. ROOF ACCESSORIES 065277 C87

C122 CAMERA DOOR SOLENOID

C124 ETHER

C126

C116 ENGINE CPT LT

C230 064101 C232 PRIME PUMP SW.

C223 FIRE DETECTOR C231 FUEL PRIME PUMP

C127 063715 C127 FUEL WATER FILTER

C120 063209 RR RH LOWER LAMPS

C119 063210 RR LH LOWER LAMPS

065493

C342 RR START SW.

C327 RR CTRL START SW.

C125 BACK UP ALARM

C432 ENG. LTS RR DOOR SW.

C287 ENG. LTS RH DOOR SW.

PRE-HEATER CONNECTION

C159 PRESS SW. 2ND SPEED RAD. FAN

C133 HI-PRESS SW.

C132 LO-PRESS SW.

C128 COMPR. A/C

C222 FIRE DETECTOR

C409 COOLANT LEVEL PROBE

C116 ENGINE CPT LT

E.C.M. DDEC III

C32 C309

C407 C408 C415

C397 065225 ENGINE CRADLE ACCESSORIES

BAT. JCT. CPT 065413

063906

ENGINE DDEC3 HARNESS SENSOR

065482 064733 065411 065493

C477

064597

C457 TRANSM. MAIN. CONN.

C463 W/RET. W/O RET.

065330

C462 OUTPUT SPEED

C461 RETARDER TEMP

C460 RETARDER SOL.

C459 ENGINE SPEED

C458 TURBINE SPEED

065331

C462 OUTPUT SPEED

C459 ENGINE SPEED

C458 TURBINE SPEED

C456 RETARDER ACCUMULATOR SOL.

C476 VIM C182 VIW C464 DDR

C90 C220 C414 C186 C15 064128 C91 C52 C21 C20

CA CB E.C.U. WORLD TR.

C58 C59 A/C & HEAT JUNCTION PANEL 064720

RR. JCT. BOX 065491

PRIME PUMP

C145

RH DOCKING LT

C121 RH FR SIDE FLASHER

C113 RH FR SIDE MARKER

C49 BATTERIES CPT LT

064399

C113 LH FR SIDE MARKER

C114 LH FR SIDE FLASHER

LH DOCKING LT

WITH A/C - HEAT DRIVER ONLY

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C2	REVISION 19

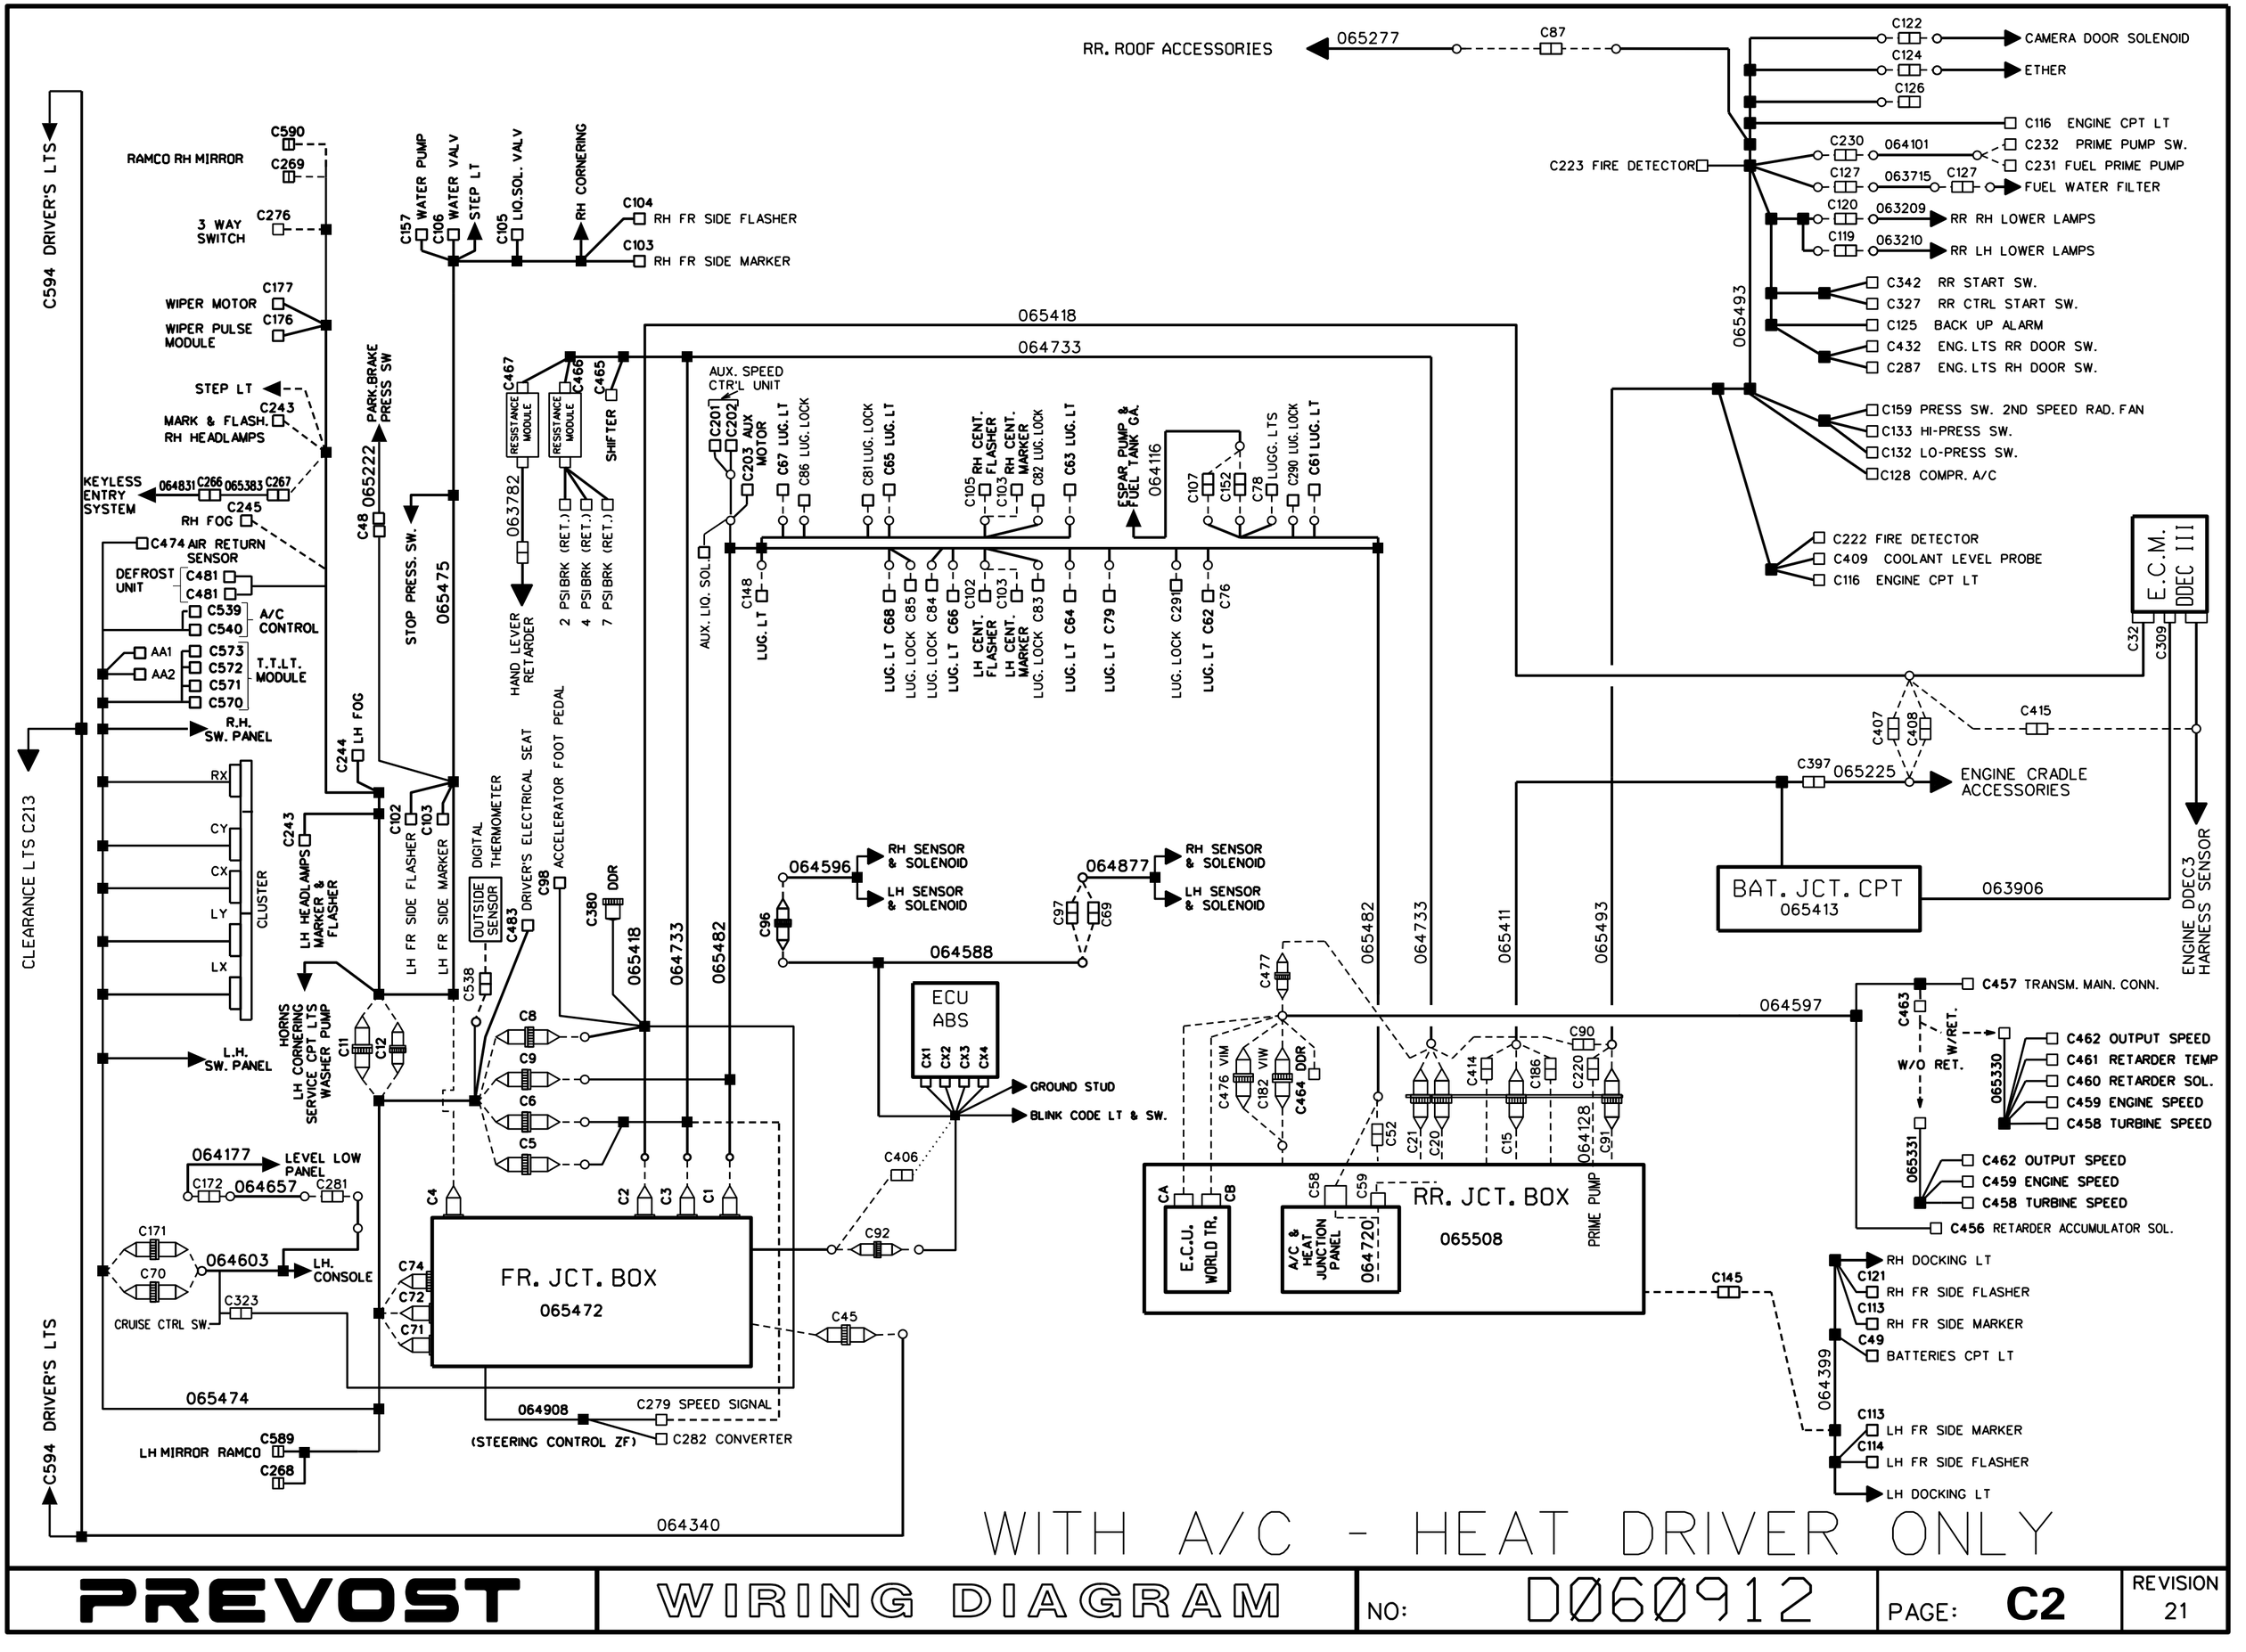

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C2	REVISION 21

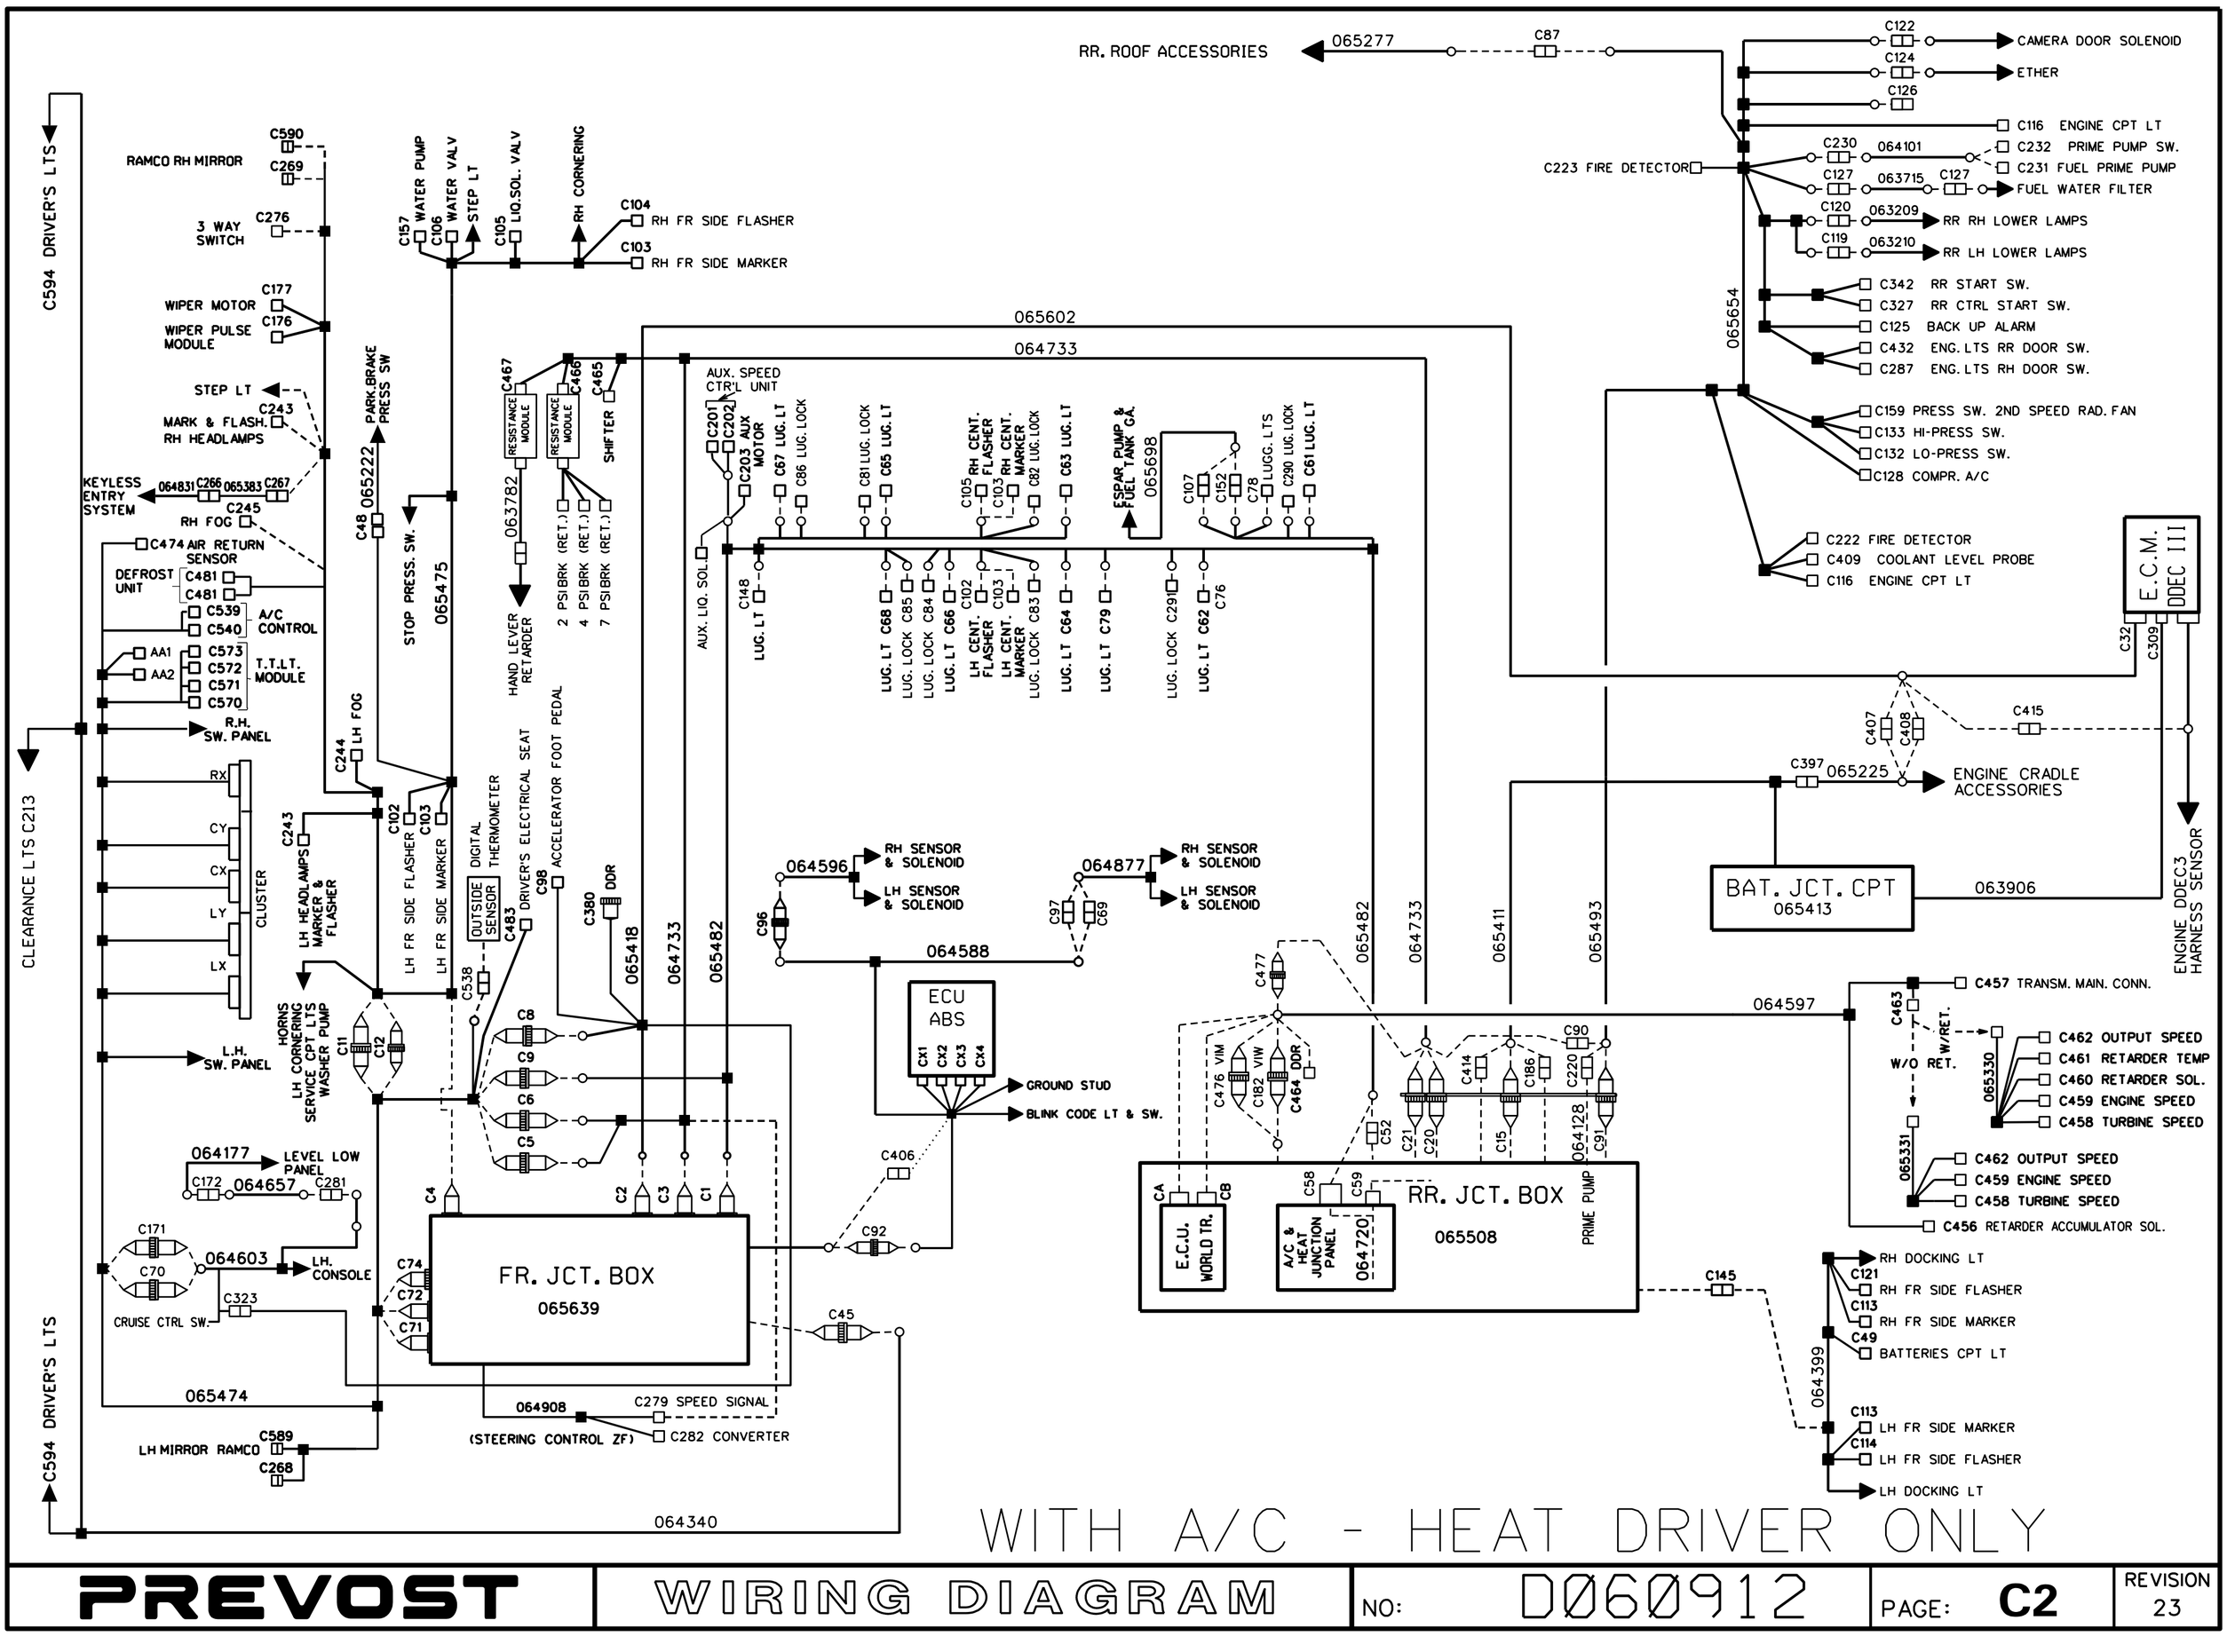

WITH A/C - HEAT DRIVER ONLY

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C2	REVISION 23

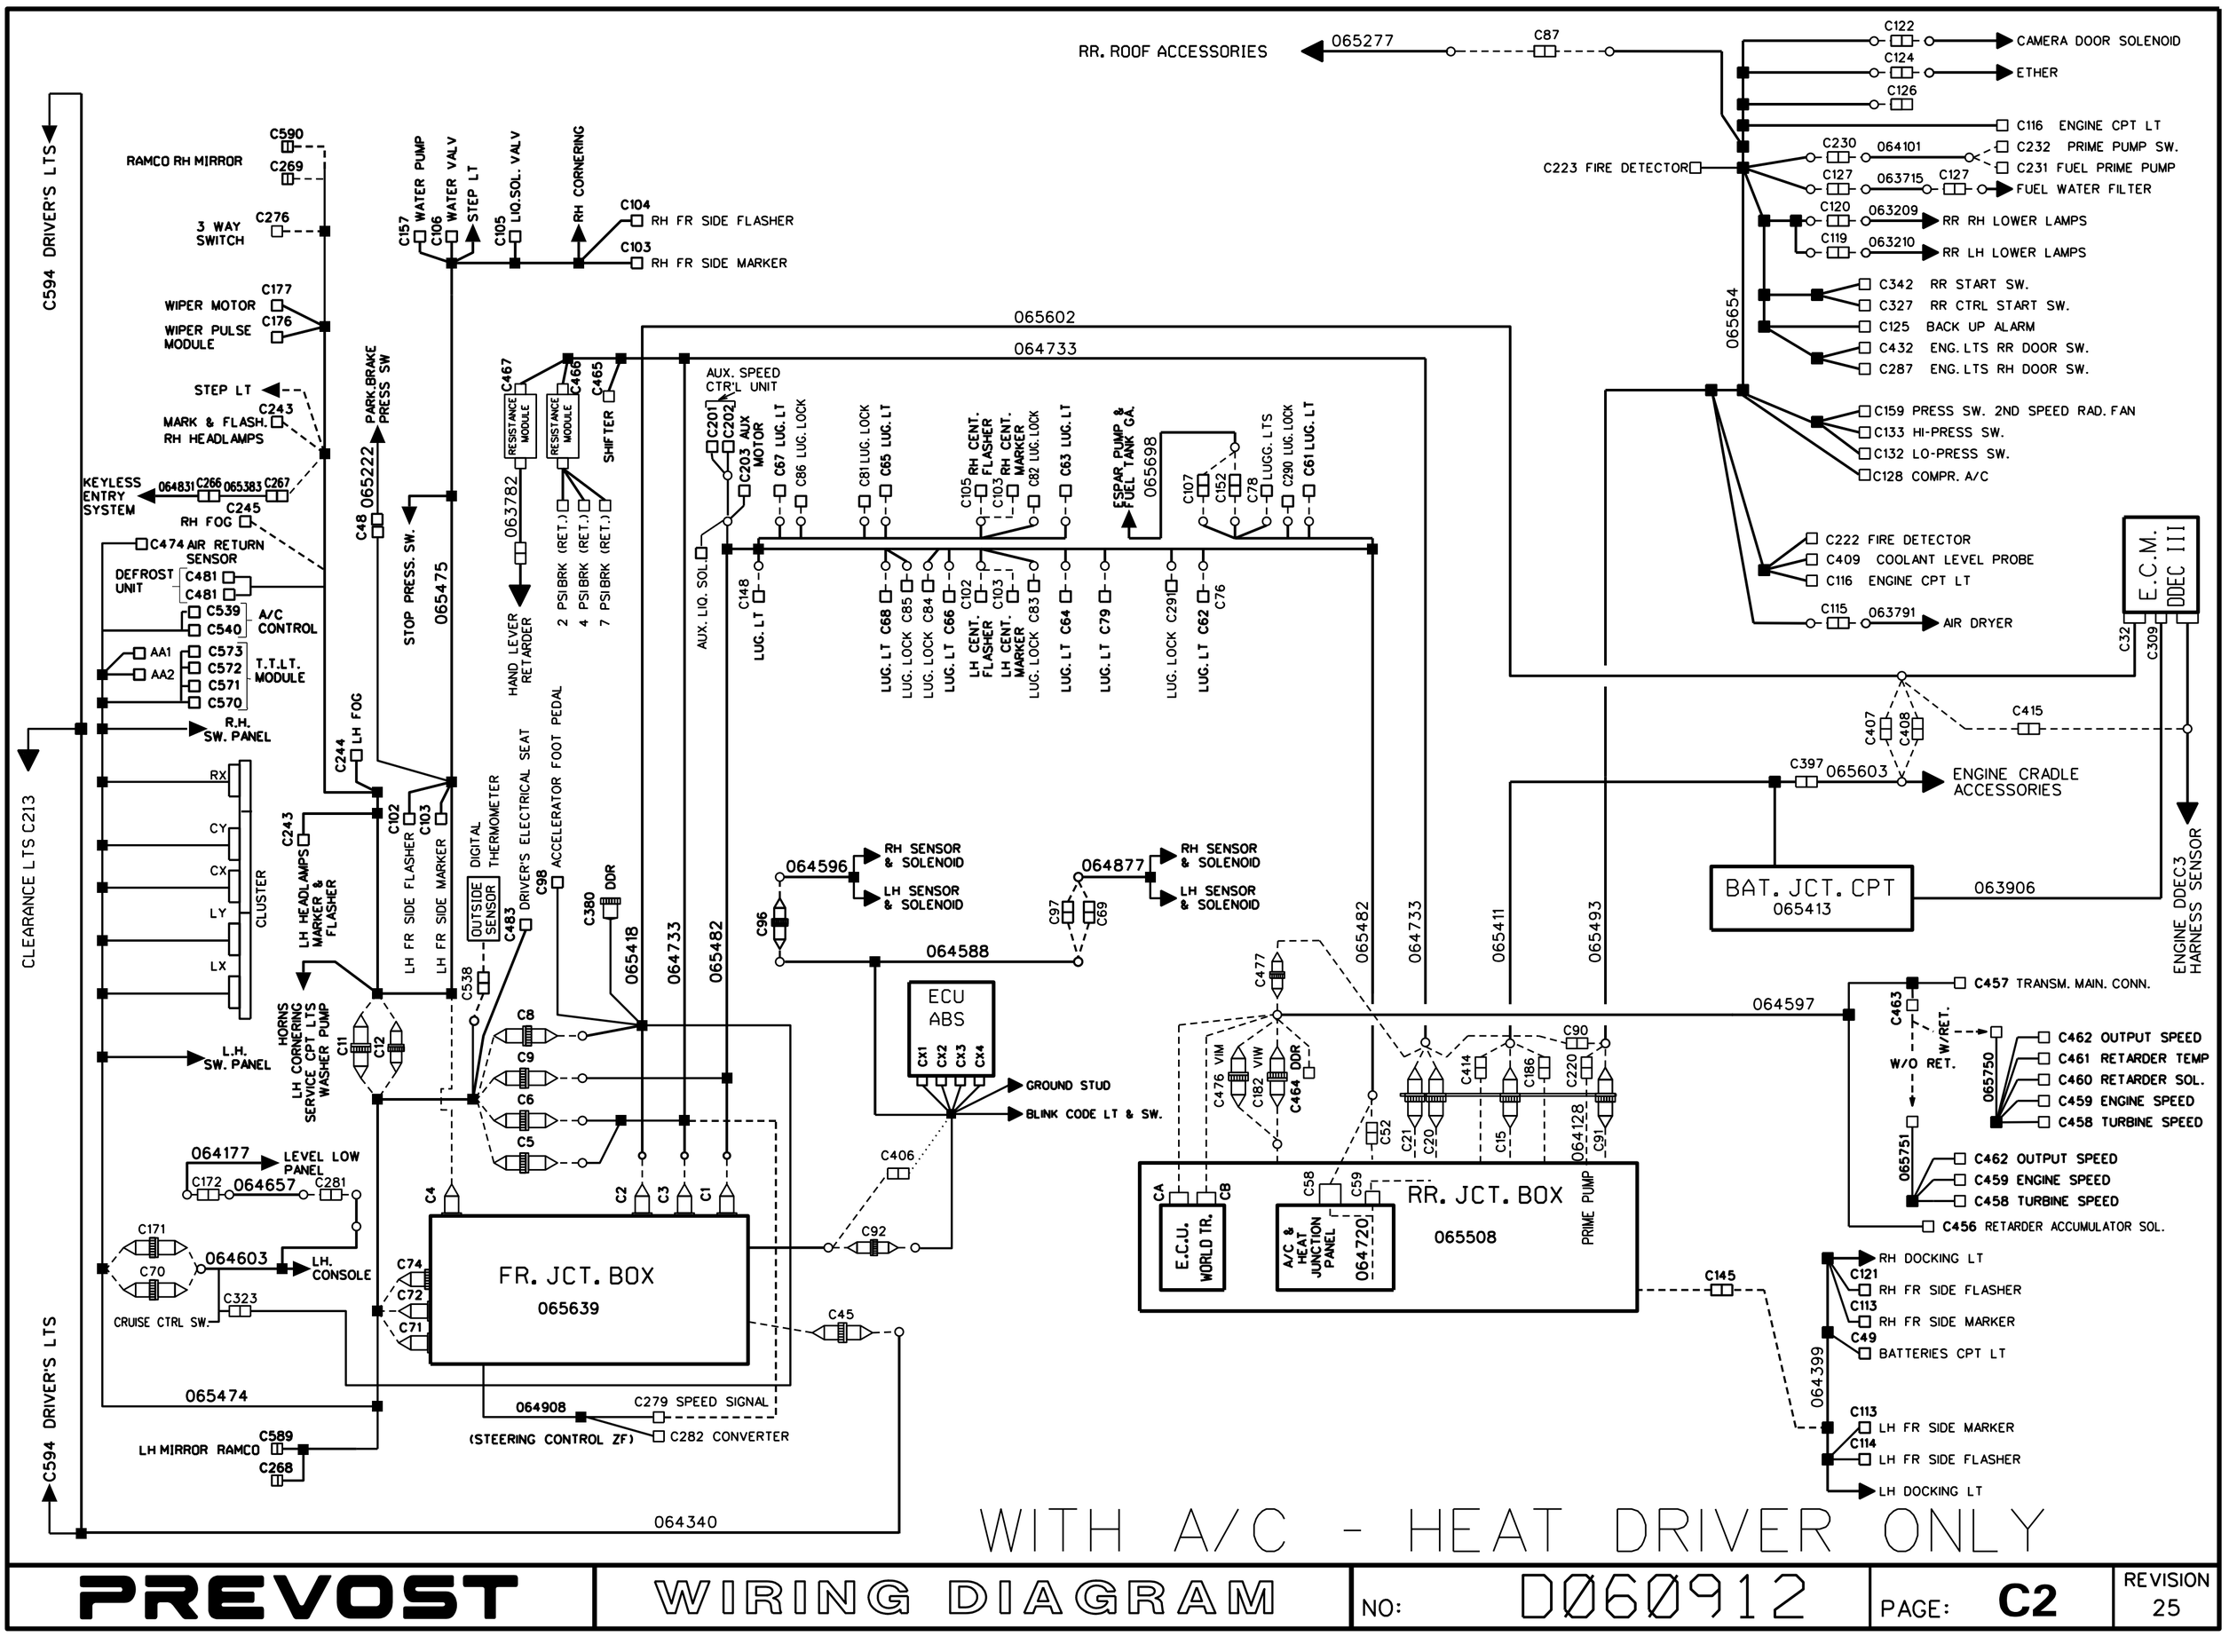

WITH A/C - HEAT DRIVER ONLY

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: C2	REVISION 25

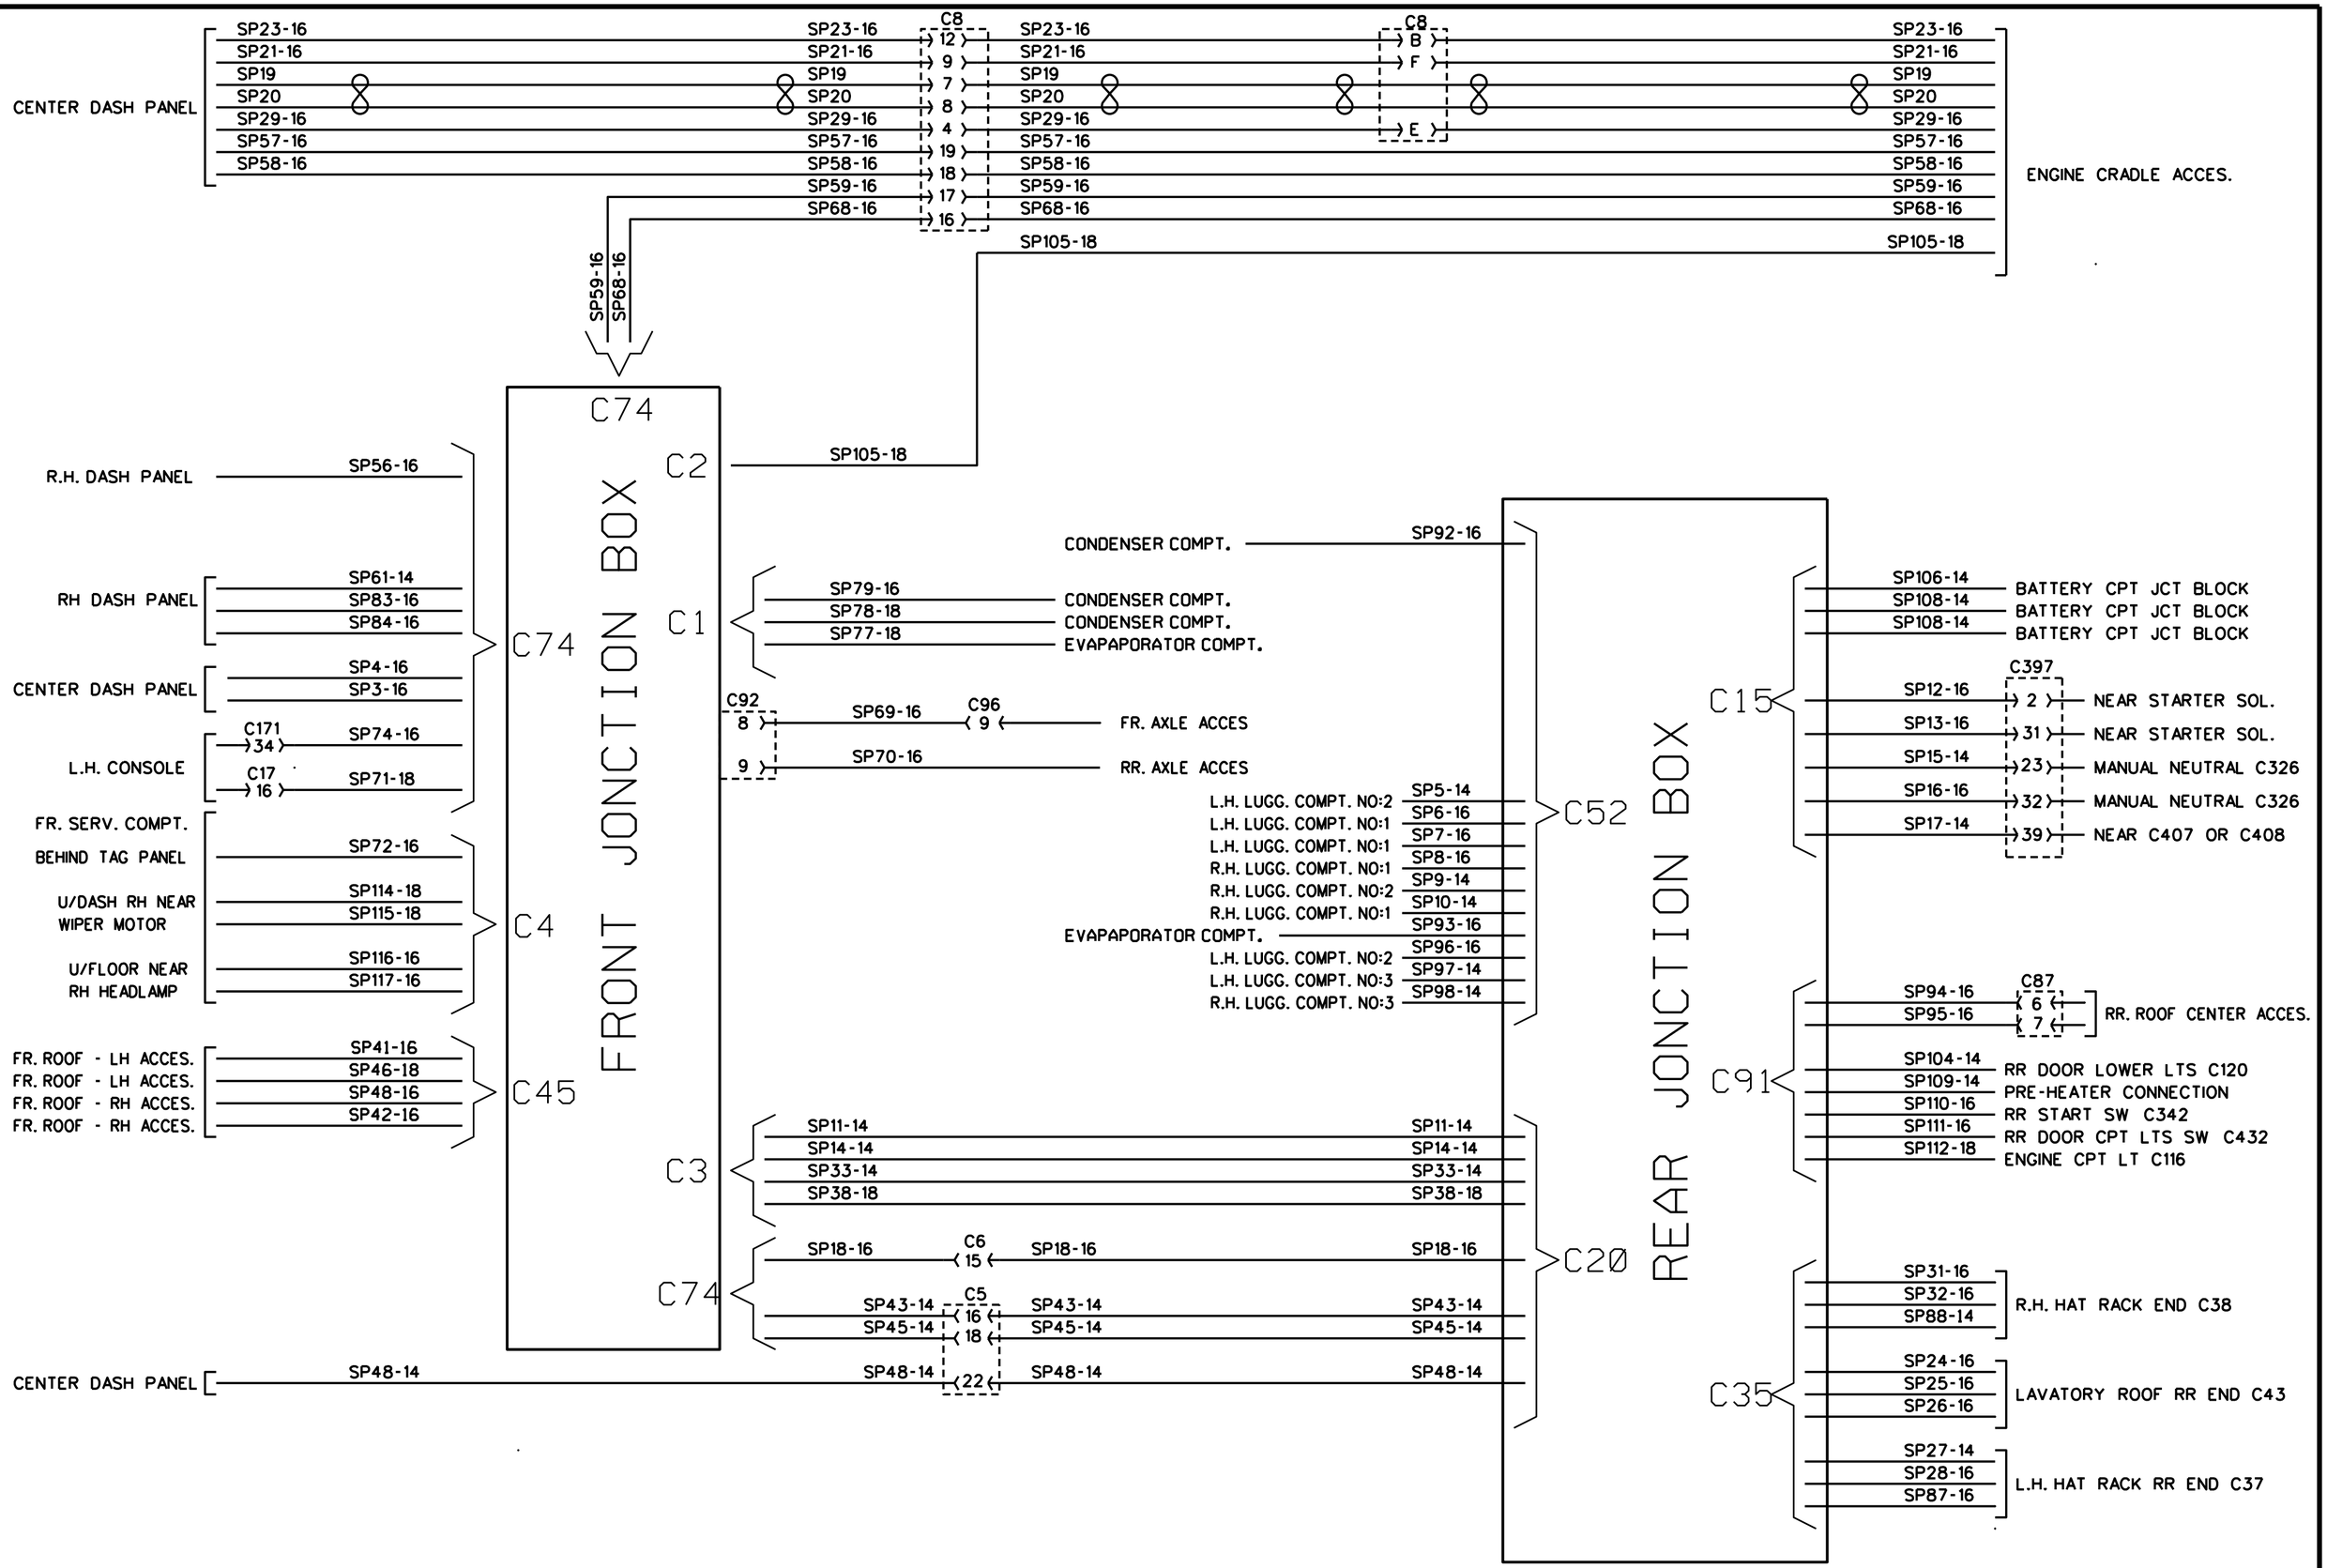
CENTER DASH PANEL
SP23-16
SP21-16
SP19
SP20
SP29-16
SP57-16
SP58-16
C8
12
9
7
8
4
19
18
17
16
B
F
E
SP59-16
SP68-16
SP105-18
ENGINE CRADLE ACCES.
C74
JONCTION BOX
FRONT
C2
C1
C4
C45
C3
C74
C6
C5
R.H. DASH PANEL
SP56-16
RH DASH PANEL
SP61-14
SP83-16
SP84-16
CENTER DASH PANEL
SP4-16
SP3-16
L.H. CONSOLE
C171
34
SP74-16
C17
16
SP71-18
FR. SERV. COMPT.
BEHIND TAG PANEL
SP72-16
U/DASH RH NEAR
WIPER MOTOR
SP114-18
SP115-18
U/FLOOR NEAR
RH HEADLAMP
SP116-16
SP117-16
FR. ROOF - LH ACCES.
SP41-16
FR. ROOF - LH ACCES.
SP46-18
FR. ROOF - RH ACCES.
SP48-16
FR. ROOF - RH ACCES.
SP42-16
CONDENSER COMPT.
SP92-16
SP79-16
SP78-18
SP77-18
CONDENSER COMPT.
CONDENSER COMPT.
EVAPAPORATOR COMPT.
C92
8
9
SP69-16
C96
9
FR. AXLE ACCES
SP70-16
RR. AXLE ACCES
L.H. LUGG. COMPT. NO:2
L.H. LUGG. COMPT. NO:1
L.H. LUGG. COMPT. NO:1
R.H. LUGG. COMPT. NO:1
R.H. LUGG. COMPT. NO:2
R.H. LUGG. COMPT. NO:1
EVAPAPORATOR COMPT.
L.H. LUGG. COMPT. NO:2
L.H. LUGG. COMPT. NO:3
R.H. LUGG. COMPT. NO:3
SP5-14
SP6-16
SP7-16
SP8-16
SP9-14
SP10-14
SP93-16
SP96-16
SP97-14
SP98-14
C52
REAR JONCTION BOX
C20
SP11-14
SP14-14
SP33-14
SP38-18
SP18-16
SP43-14
SP45-14
SP48-14
15
16
18
22
CENTER DASH PANEL
C15
C397
SP106-14
SP108-14
SP108-14
BATTERY CPT JCT BLOCK
BATTERY CPT JCT BLOCK
BATTERY CPT JCT BLOCK
SP12-16
SP13-16
SP15-14
SP16-16
SP17-14
2
31
23
32
39
NEAR STARTER SOL.
NEAR STARTER SOL.
MANUAL NEUTRAL C326
MANUAL NEUTRAL C326
NEAR C407 OR C408
C91
C87
SP94-16
SP95-16
6
7
RR. ROOF CENTER ACCES.
SP104-14
SP109-14
SP110-16
SP111-16
SP112-18
RR DOOR LOWER LTS C120
PRE-HEATER CONNECTION
RR START SW C342
RR DOOR CPT LTS SW C432
ENGINE CPT LT C116
C35
SP31-16
SP32-16
SP88-14
R.H. HAT RACK END C38
SP24-16
SP25-16
SP26-16
LAVATORY ROOF RR END C43
SP27-14
SP28-16
SP87-16
L.H. HAT RACK RR END C37

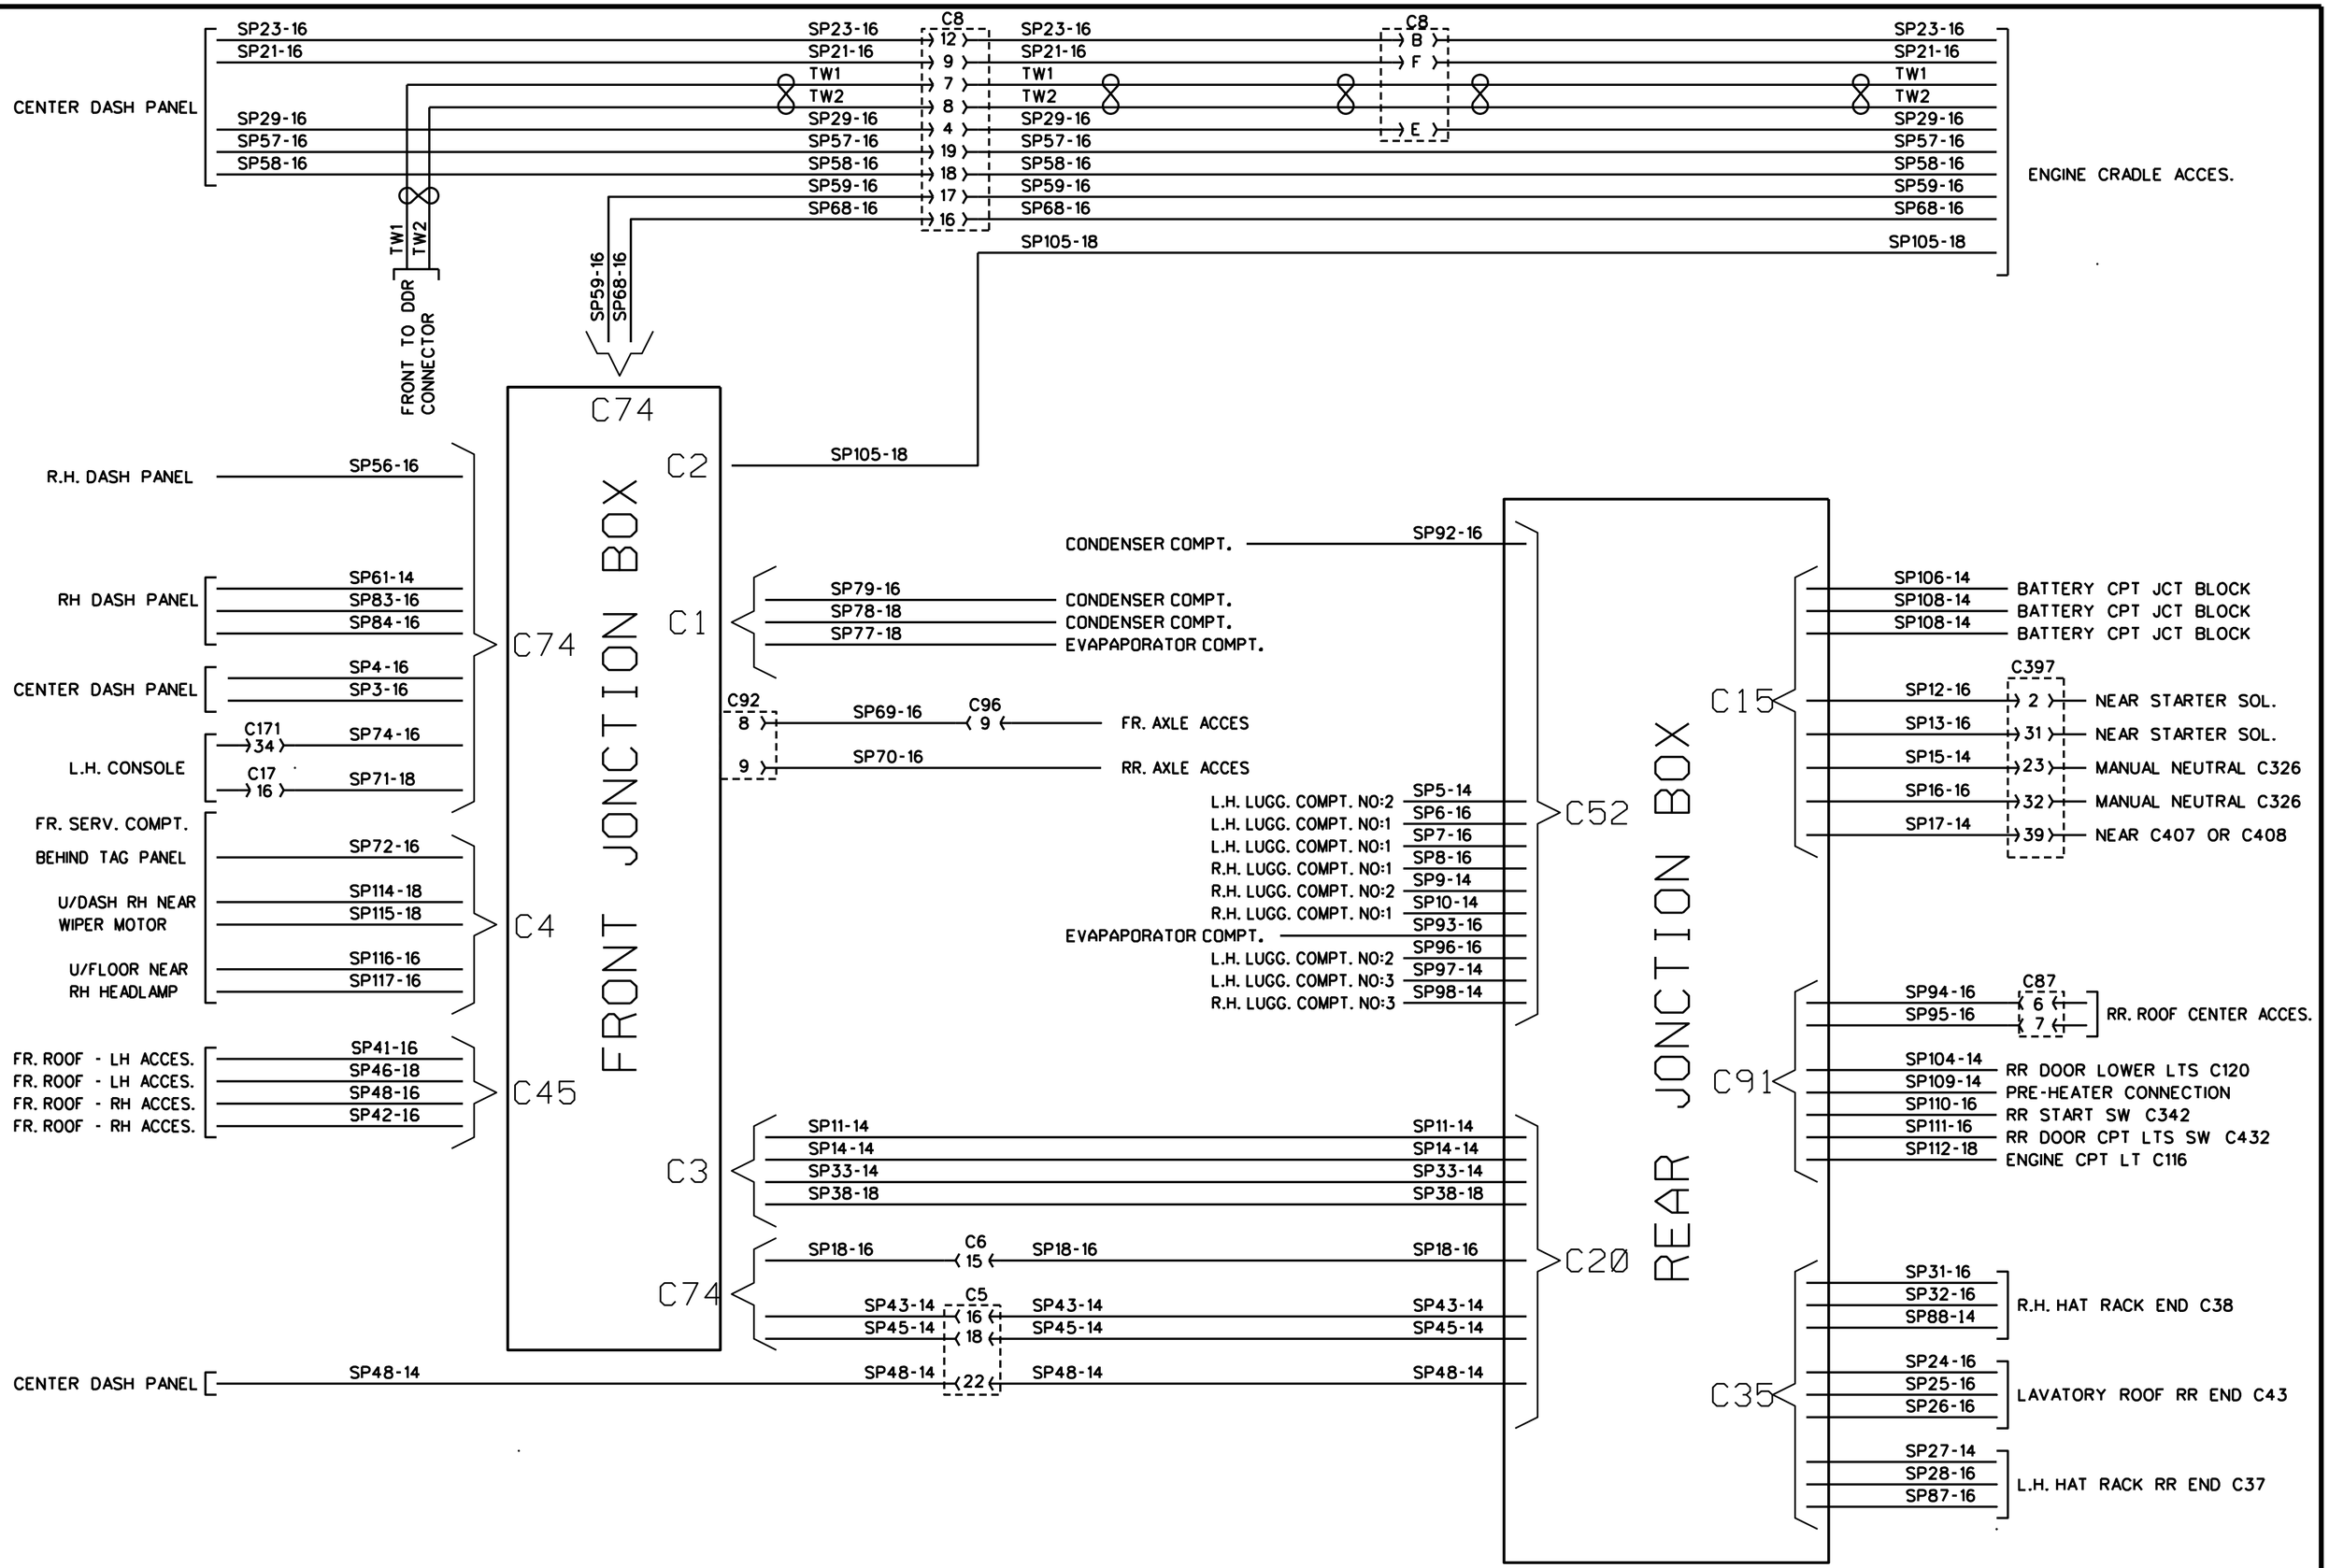

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: D	REVISION 04

CIRCUIT NUMBER CODE

No.	DESCRIPTION
L 8	ENG. BLK HEATER
L 9	ENG. BLK HEATER
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 10	SPARE-RJB TO LUGG CPT #1
S P 11	SPARE-FJB TO RJB
S P 12	SPARE-RJB TO ENGINE
S P 13	SPARE-RJB TO ENGINE
S P 14	SPARE-FJB TO RJB
S P 15	SPARE-RJB TO ENGINE
S P 16	SPARE-RJB TO ENGINE
S P 17	SPARE-RJB TO ENGINE
S P 18	SPARE-FJB TO RJB
S P 24	SPARE-RJB TO LAVATORY ROOF
S P 25	SPARE-RJB TO LAVATORY ROOF
S P 26	SPARE-RJB TO LAVATORY ROOF
S P 27	SPARE-RJB TO LH HAT RACK
S P 28	SPARE-RJB TO LH HAT RACK
S P 31	SPARE-RJB TO RH HAT RACK
S P 32	SPARE-RJB TO RH HAT RACK
S P 33	SPARE-FJB TO RJB
S P 38	SPARE-FJB TO RJB
S P 43	SPARE-FJB TO RJB
S P 45	SPARE-FJB TO RJB
S P 46	SPARE-RJB TO LH FR ROOF
S P 48	SPARE-RJB TO DASH CENTER PANEL
S P 56	SPARE-ENGINE TO RH SW PANEL
S P 57	SPARE-DASH CENTER PANEL TO ENG.
S P 58	SPARE-DASH CENTER PANEL TO ENG.
S P 59	SPARE-FJB TO ENGINE
S P 61	SPARE-FJB TO DASH RH PANEL
S P 68	SPARE-FJB TO ENGINE
S P 69	SPARE-FJB TO FR AXLE
S P 70	SPARE-FJB TO FR AXLE
S P 71	SPARE-FJB TO RH SW PANEL
S P 72	SPARE-FJB TO FR SERV CPT
S P 74	SPARE-FJB TO LH CONSOLE
S P 77	SPARE-FJB TO EVAPORATOR CPT
S P 78	SPARE-FJB TO CONDENSER CPT
S P 79	SPARE-FJB TO CONDENSER CPT
S P 87	SPARE-RJB TO LH HAT RACK
S P 88	SPARE-RJB TO RH HAT RACK
S P 92	SPARE-RJB TO CONDENSER CPT
S P 93	SPARE-RJB TO EVAPORATOR CPT
S P 94	SPARE-RJB TO RR ROOF
S P 95	SPARE-RJB TO RR ROOF
S P 96	SPARE-RJB TO LUGG CPT #2
S P 97	SPARE-RJB TO LUGG CPT #3
S P 98	SPARE-RJB TO LUGG CPT #3
S P 104	SPARE-RJB TO ENGINE CPT
S P 105	SPARE-FJB TO ENGINE
S P 106	SPARE-RJB TO BATT. CPT.
S P 107	SPARE-RJB TO BATT. CPT.
S P 108	SPARE-RJB TO BATT. CPT.
S P 109	SPARE-RJB TO ENGINE CPT.
S P 110	SPARE-RJB TO ENGINE CPT.
S P 111	SPARE-RJB TO ENGINE CPT.
S P 112	SPARE-RJB TO ENGINE CPT.
S P 114	SPARE-FJB TO U/DASH WIPER
S P 115	SPARE-FJB TO U/DASH WIPER
S P 116	SPARE-FJB TO U/DASH FLOOR
S P 117	SPARE-FJB TO U/DASH FLOOR
W C	A/C & HEAT SYST-EVAP CTR SIGN
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A A	RS - VOLTAGE REGULATOR GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB. CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN- GND RLY
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS FR JCT BOX CPT GRD STUD
0 Z	RR JCT BOX CPT GRD STUD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 A	A/C & HEAT SYSTEM-COOL 1 SIGN
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 H	A/C & HEAT SYSTEM-HI PRESS SW
2 H L	A/C & HEAT SYSTEM-LO & HI PRESS SW
2 L	A/C & HEAT SYSTEM-LO PRESS SW
5 N C	SPEED SIGNAL LOWER 5MPH
5 N O	SPEED SIGNAL HIGHER 5MPH
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
1 0	INTERIOR LTS-LUGGAGE CPT
1 0 A	INTERIOR LTS-LUGGAGE CPT
1 0 B	INTERIOR LTS-LUGGAGE CPT
1 0 C	INTERIOR LTS-LUGGAGE CPT
1 0 D	INTERIOR LTS-LUGGAGE CPT
1 0 F	INTERIOR LTS-LUGGAGE CPT
1 0 H	INTERIOR LTS-LUGGAGE CPT
1 0 R	INTERIOR LTS-LUGGAGE DOOR AJAR
1 2	12V BAT ELECTRONIC JCT BLOCK
1 2	BAT CPT 12V BATTERY
1 2 A	FR JCT BOX 12V DISC SW
1 2 A	RR JCT BOX 12V DISC SW
1 2 B	12V BAT ELECTRICAL JCT BLOCK
1 2 B	RR JCT BOX 12V DISC SW
1 2 B	FR JCT BOX 12V DISC SW
1 2 B E	BAT. EQUALIZER MONITOR
1 2 C	FR JCT BOX 12V DISC SW
1 2 C	RR JCT BOX 12V DISC SW
1 2 D	BAT CPT 12V BATTERY
1 2 D T	TTLT MODULE
1 2 E	FR JCT BOX 12V DISC SW
1 2 E	RR JCT BOX 12V DISC SW
1 2 F	BAT CPT 12V FJB & IC
1 2 F	FR JCT BOX 12V DISC SW
1 2 F	RR JCT BOX 12V DISC SW
1 2 G	FR JCT BOX 12V DISC SW
1 2 J	FR JCT BOX 12V DISC SW
1 2 K	HVAC MODULE
1 2 I	12V IGNITION DISTRIBUTION
1 2 I	RR JCT BOX 12V IGNITION
1 2 I A	12V IGNITION DISTRIBUTION
1 2 I A	FR JCT BOX 12V IGNITION
1 2 I B	FR JCT BOX 12V IGNITION
1 2 L X	CLUSTER FEED
1 2 I F	FR JCT BOX 12V IGNITION
1 2 P	LH CONSOLE POWER OUTLET
1 2 R	BAT CPT 12V DISC RLY TO RJB
1 2 V A	BATTERY TO EQUALIZER 12V
1 2 V D	12V HOT WIRE DISTRIBUTION
1 2 V F	BAT CPT 12V FJB & IC
1 2 V I	12V IGNITION DISTRIBUTION
1 2 V R	BAT CPT 12V DISC RLY TO RJB
1 2 W	12V BATTERY DDEC III
1 2 X	FR JCT BOX 12V DISC SW
1 2 X 2	FR JCT BOX 12V DISC SW
1 2 Y	FR JCT BOX 12V DISC SW

CIRCUIT NUMBER CODE

No.	DESCRIPTION
13 A	ALARM & SIGNAL-LO AIR PRIM.
13 B	ALARM & SIGNAL-LO AIR SEC.
15	EXTERIOR LTS-MULTI FUNC LEVEL
15 A	WIPER & WASHER UPPER WINDSHIELD
16	SPEED - SIGNAL +
16 A	SPEED - SIGNAL +
16 T	SPEED - SIGNAL +
17	EXTERIOR LTS-FLASHER UNIT
17 A	EXTERIOR LTS-FLASHER UNIT
19	DIFFERENTIAL OIL TEMP
20	SPEED - SIGNAL -
20 T	SPEED - SIGNAL -
20 W	SPEED - SIGNAL -
21	EXTERIOR LTS-DIRECTIONNAL LH
21 A	EXTERIOR LTS-DIRECTIONNAL LH
21 B	EXTERIOR LTS-HAZARD
21 C	EXTERIOR LTS-CORNERING LH
21 H	EXTERIOR LTS-DIRECTIONNAL LH
21 K	EXTERIOR LTS-CORNERING
21 N	EXTERIOR LTS-CORNERING LH
21 P	EXTERIOR LTS-CORNERING LH
23	EXTERIOR LTS-DIRECTIONNAL RH
23	EXTERIOR LTS-DIRECTIONNAL RH
23 A	EXTERIOR LTS-DIRECTIONNAL RH
23 B	EXTERIOR LTS-DIRECTIONNAL RH
23 C	EXTERIOR LTS-CORNERING RH
23 N	EXTERIOR LTS-CORNERING RH
23 P	EXTERIOR LTS-CORNERING RH
24	BAT CPT 24V BATTERY
24	FR JCT BOX 24V DISC SW
24 A	BOOSTER BLOCK 24V DISC SW
24 A	FR JCT BOX 24V DISC SW
24 A	RR JCT BOX 24V DISC SW
24 B	24V STARTER RLY FEEDING
24 B	FR JCT BOX 24V DISC SW
24 B	RR JCT BOX 24V DISC SW
24 BE	RJB CPT-BAT EQ MONITOR HOT WIRE
24 C	FR JCT BOX 24V DISC SW
24 C	RR JCT BOX 24V DISC SW
24 D	BAT CPT 24V HOT WIRE
24 D	FR JCT BOX 24V HOT WIRE
24 D	RR JCT BOX 24V HOT WIRE
24 DA	A/C JCT BOX 24V HOT WIRE
24 E	BAT CPT 24V DISC SW
24 E	FR JCT BOX 24V DISC SW
24 E	RR JCT BOX 24V DISC SW
24 F	FR JCT BOX 24V DISC SW
24 F	RR JCT BOX 24V DISC SW
24 G	FR JCT BOX 24V DISC SW
24 G	RR JCT BOX 24V DISC SW

No.	DESCRIPTION
24 H	FR JCT BOX 24V DISC SW
24 H	RR JCT BOX 24V DISC SW
24 I	FR JCT BOX 24V IGNITION
24 I	RR JCT BOX 24V IGNITION
24 IA	FR JCT BOX 24V IGNITION
24 IA	RR JCT BOX 24V IGNITION
24 IB	FR JCT BOX 24V IGNITION
24 IB	RR JCT BOX 24V IGNITION
24 IF	FJB 24V IGNITION
24 IC	FR JCT BOX 24V IGNITION
24 P	FR JCT BOX 24V DISC SW
24 S	24V DISC SW RLY SIGNAL
24 T	RR JCT BOX 24V DISC SW
24 V2	RR JCT BOX 24V DISC SW
24 V3	RR JCT BOX 24V DISC SW
24 V4	RR JCT BOX 24V DISC SW
24 V5	RR JCT BOX 24V DISC SW
24 VD	24V HOT WIRE DISTRIBUTION
24 VF	BAT CPT 24V SW TO FJB & IC
24 VA	BATTERY TO EQUALIZER 24V
24 VI	RR JCT BOX 24V IGNITION
24 VR	BAT CPT 24V DISC SW TO RJB
25	12VAC GEN RLY ON SIGNAL
25	12VAC GEN RLY ON SIGNAL
25 A	ETHER SWITCH
25 A	NOT GENERATOR-WARNING LT
25 F	12V IGNITION DISTRIBUTION
25 B	EXTERIOR LTS-DAYTIME RUN LTS
26	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26 B	DRIVER'S WINDOW LIFTER
26 C	DRIVER'S WINDOW LIFTER
27	PARKING BRAKE SONALERT
27 A	PARKING BRAKE SONALERT
28 A	A/C & HEAT SYSTEM-HI PRESSURE
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29 A	A/C & HEAT SYSTEM-DRIVER'S HTR
29 H	HVAC DASH MODULE
29 B	A/C & HEAT SYSTEM-DRIVER'S HTR
31 A	A/C & HEAT SYSTEM-UNLOADER
31 B	A/C & HEAT SYSTEM-UNLOADER
31 B	WIPER & WASHER SYSTEM
31 C	WIPER & WASHER SYSTEM
31 D	WIPER & WASHER SYSTEM
31 E	WIPER & WASHER SYSTEM
31 J	WIPER & WASHER SYSTEM
31 X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32 B	EXTERIOR LTS-BACK-UP
32 C	BACK-UP PWR & SIGNAL

No.	DESCRIPTION
32 D	BACK-UP ALARM
35	ENTRANCE DOOR
35 B	ENTRANCE DOOR
36	JACOB BRAKE SYSREM
36 A	JACOB BRAKE SYSREM
39	INTERIOR LTS-24V LH CONSOLE SW
39 A	INTERIOR LTS-DRIVER"S LTS
39 K	DRIVER'S LTS KEYLESS
41	A/C & HEAT SYSTEM-COND FAN MOT
41 A	A/C & HEAT SYSTEM-COND FAN MOT
41 B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
43	A/C & HEAT SYSTEM-COND FAN MOT
42 A	A/C & HEAT SYSTEM-COND FAN MOT
44	EXTERIOR LTS-FOG
44 A	EXTERIOR LTS-FOG
44 B	EXTERIOR LTS-FOG
44 C	EXTERIOR LTS-FOG & HAZARD
45 B	A/C & HEAT SYSTEM-HEAT SIGN
45 D	A/C & HEAT SYSTEM-WATER VALVE
45 E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45 G	A/C & HEAT SYSTEM-DRIVER'S HTR
45 H	A/C & HEAT SYSTEM-DRIVER'S HTR
45 W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46 A	EXTERIOR LTS-MARKER
46 B	EXTERIOR LTS-MARKER
46 B	EXTERIOR LTS-MARKER
46 C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
50	AIR DRYER
52	ALARM & SIGNAL-ELEC. HORN
52 A	ALARM & SIGNAL-ELEC. HORN
52 B	ALARM & SIGNAL-AIR HORN
52 C	ALARM & SIGNAL-AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53 A	WIPER & WASHER SYSTEM
53 B	WIPER & WASHER SYSTEM
53 C	WIPER & WASHER SYSTEM
53 E	WIPER & WASHER SYSTEM
53 J	WIPER & WASHER SYSTEM
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57 A	A/C & HEAT SYSTEM-WATER PUMP
57 A	EXTERIOR LTS-HI BEAM
57 B	A/C & HEAT SYSTEM-WATER PUMP
57 C	PRE-HEAT WATER HEATER
57 CA	A/C & HEAT SYSTEM-HEAT SIGN
57 CC	A/C & HEAT SYSTEM-HEAT SIGN
58	EXTERIOR LTS-LO BEAM

No.	DESCRIPTION
58 A	EXTERIOR LTS-LO BEAM
58 B	EXTERIOR LTS-LO BEAM
58 E	EXTERIOR LTS-LO BEAM
59 A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61 A	EXTERIOR LTS-HEAD SIGNAL
63	EXTERIOR LTS-CLEARANCE
63 A	EXTERIOR LTS-CLEARANCE
63 B	EXTERIOR LTS-CLEARANCE
63 C	EXTERIOR LTS-MARKER SIGNAL
63 D	EXTERIOR LTS-MARKER & TAIL
63 E	EXTERIOR LTS-CLEARANCE
63 F	EXTERIOR LTS-MARKER BLINKER
63 H	EXTERIOR LTS-TAIL
64	DRIVER'S FAN
64 B	DRIVER'S FAN
64 C	DRIVER'S FAN
65	FOOT DAMPER MOTOR
65 A	FOOT DAMPER MOTOR
65 D	DRIVER'S REC. DAMPER
65 P	PASSENGER REC. DAMPER
66	O_PASS. ON/OFF
67	A/C & HEAT SYSTEM
67 A	A/C & HEAT SYSTEM
67 B	A/C & HEAT SYSTEM
67 C	HEAT WINDS.
67 K	A/C & HEAT SYSTEM-COND FAN CTR
67 L	A/C & HEAT SYSTEM-COND FAN CTR
67 V	A/C & HEAT SYSTEM-WATER VALVE
68	DASH & DEFROST DAMPER MOTOR
68 A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72 A	SUN VISOR-RH
72 B	SUN VISOR-RH
72 C	SUN VISOR-LH
72 D	SUN VISOR-LH
76	FUEL TANK GAUGE
76 B	LOW FUEL LT & ETHER COLD START
76 C	LOW FUEL LT
76 P	FUEL PRIME PUMP
76 M	FUEL PRIME PUMP
77	A/C & HEAT SYSTEM-HI PRESSURE
77 A	A/C & HEAT SYSTEM-DRIVER'S HTR
77 B	A/C & HEAT SYSTEM-COMPRESSOR
77 C	A/C & HEAT SYSTEM-COMPRESSOR
77 H	A/C & HEAT SYSTEM-COMPRESSOR
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82 A	EXTERIOR LTS-STOP SIGNAL

CIRCUIT NUMBER CODE

No.	DESCRIPTION
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85W	24V IGN ABS
85X	24V IGN ABS
85Y	ABS-WARNING LT
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
90J	A/C & HEAT SYSTEM-COND FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	24V STARTER TO GENERATOR
102	WORLD TRANSM-SOL. GRD 1
102	WORLD TRANSM-SOL. C3
104	WORLD TRANSM-SOL. FORWARD
104	LEVEL LOW SYSTEM
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	CHARG SYST-VOLTAGE REGUL. "F"
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125W	WORLD TRANSM-RET. INDICATOR
126	LEVEL LOW SYSTEM
126	WORLD TRANSM-LUBE PRESS SW.
127	WORLD TRANSM-LUBE PRESS SW.
127	PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
127B	PRE-HEAT WATER HEATER
127	WORLD TRANSM-RETARDER FEED SOL.
127S	PRE-HEAT WATER HEATER
127W	PRE-HEAT WATER HEATER
128	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT WATER HEATER
128W	PRE-HEAT WATER HEATER
128	WORLD TRANSM-SOL. C2
129	PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132A	LEVEL LOW SYSTEM
132B	LEVEL LOW SYSTEM
132C	LEVEL LOW SYSTEM
132D	LEVEL LOW SYSTEM
132E	LEVEL LOW SYSTEM
132F	LEVEL LOW SYSTEM
132G	LEVEL LOW SYSTEM
132H	LEVEL LOW SYSTEM
132J	LEVEL LOW SYSTEM
132K	LEVEL LOW SYSTEM
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	WORLD TRANSM-RET. ACTUATOR HI
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135A	A/C & HEAT SYSTEM-AIR SENSOR
135D	A/C & HEAT SYSTEM-AIR SENSOR
135C	A/C & HEAT SYSTEM-AIR SENSOR
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
143X	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	ETHER COLD START
147	WORLD TRANSM-OIL TEMP
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
151A	ABS SYSTEM
152	ABS SYSTEM
152A	ABS SYSTEM
153	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	ABS SYSTEM
155	WORLD TRANSM-SPARE INPUT (-)
156	ABS SYSTEM
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157A	ABS SYSTEM
157B	ABS SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
165A	A/C & HEAT SYSTEM-TRANSMITER

CIRCUIT NUMBER CODE

No.	DESCRIPTION
165B	A/C & HEAT SYSTEM-TRANSMITER
165C	A/C & HEAT SYSTEM-TRANSMITER
165D	A/C & HEAT SYSTEM-TRANSMITER
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	A/C & HEAT SYSTEM-TEMP. CTR
167A	A/C & HEAT SYSTEM-TEMP. CTR
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170C	LUGGAGE DOOR LOCK
170D	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170F	LUGGAGE DOOR LOCK
170G	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
170K	LUGGAGE DOOR LOCK
170L	LUGGAGE DOOR LOCK
170M	LUGGAGE DOOR LOCK
170N	LUGGAGE DOOR LOCK
170P	LUGGAGE DOOR LOCK
170R	LUGGAGE DOOR LOCK
170S	LUGGAGE DOOR LOCK
170V	LUGGAGE DOOR LOCK
170W	LUGGAGE DOOR LOCK
170X	LUGGAGE DOOR LOCK
170Y	LUGGAGE DOOR LOCK
170Z	LUGGAGE DOOR LOCK
173	BACK-UP MONITOR
174	BACK-UP MONITOR
175	BACK-UP MONITOR
175A	BACK-UP MONITOR
175B	BACK-UP MONITOR
175C	BACK-UP MONITOR
180	DRIVER'S SEAT HEATER
180A	DRIVER'S SEAT HEATER
180B	CO-PILOT SEAT HEATER
180C	CO-PILOT SEAT HEATER
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251	DDEC III - PRODRIVER 12V H.W.
251A	DDEC III -DATA LOGGER 12V H.W.
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
270	KEYLESS ENTRY SYSTEM
272	KEYLESS ENTRY SYSTEM
274	KEYLESS ENTRY SYSTEM
275	KEYLESS ENTRY SYSTEM
276	KEYLESS ENTRY SYSTEM
277	KEYLESS ENTRY SYSTEM
278	KEYLESS ENTRY SYSTEM
279	KEYLESS ENTRY SYSTEM
280	KEYLESS ENTRY SYSTEM
283	KEYLESS ENTRY SYSTEM
283A	KEYLESS ENTRY SYSTEM
284A	KEYLESS ENTRY SYSTEM
285	KEYLESS ENTRY SYSTEM
286	KEYLESS ENTRY SYSTEM
286A	KEYLESS ENTRY SYSTEM
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
291	KEYLESS ENTRY SYSTEM
292	FAN CLUTCH RADIATOR SPD 2
293	KEYLESS ENTRY SYSTEM
294	ANTI-THEFT SYSTEM KEYLESS
295	LED FEED ALARM -KEYLESS
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE
540	DDEC III-CRUISE ENABLE LTS.
541	DDEC III-CRUISE SET SW
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
583	DDEC III-ENGINE BRAKE 4 CYL.
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
979	DDEC III-ENGINE BRAKE 2 CYL.

CIRCUIT NUMBER CODE

No.	DESCRIPTION
L 8	ENG. BLK HEATER
L 9	ENG. BLK HEATER
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 10	SPARE-RJB TO LUGG CPT #1
S P 11	SPARE-FJB TO RJB
S P 12	SPARE-RJB TO ENGINE
S P 13	SPARE-RJB TO ENGINE
S P 14	SPARE-FJB TO RJB
S P 15	SPARE-RJB TO ENGINE
S P 16	SPARE-RJB TO ENGINE
S P 17	SPARE-RJB TO ENGINE
S P 18	SPARE-FJB TO RJB
S P 24	SPARE-RJB TO LAVATORY ROOF
S P 25	SPARE-RJB TO LAVATORY ROOF
S P 26	SPARE-RJB TO LAVATORY ROOF
S P 27	SPARE-RJB TO LH HAT RACK
S P 28	SPARE-RJB TO LH HAT RACK
S P 31	SPARE-RJB TO RH HAT RACK
S P 32	SPARE-RJB TO RH HAT RACK
S P 33	SPARE-FJB TO RJB
S P 38	SPARE-FJB TO RJB
S P 43	SPARE-FJB TO RJB
S P 45	SPARE-FJB TO RJB
S P 46	SPARE-RJB TO LH FR ROOF
S P 48	SPARE-RJB TO DASH CENTER PANEL
S P 56	SPARE-ENGINE TO RH SW PANEL
S P 57	SPARE-DASH CENTER PANEL TO ENG.
S P 58	SPARE-DASH CENTER PANEL TO ENG.
S P 59	SPARE-FJB TO ENGINE
S P 61	SPARE-FJB TO DASH RH PANEL
S P 68	SPARE-FJB TO ENGINE
S P 69	SPARE-FJB TO FR AXLE
S P 70	SPARE-FJB TO FR AXLE
S P 71	SPARE-FJB TO RH SW PANEL
S P 72	SPARE-FJB TO FR SERV CPT
S P 74	SPARE-FJB TO LH CONSOLE
S P 77	SPARE-FJB TO EVAPORATOR CPT
S P 78	SPARE-FJB TO CONDENSER CPT
S P 79	SPARE-FJB TO CONDENSER CPT
S P 87	SPARE-RJB TO LH HAT RACK
S P 88	SPARE-RJB TO RH HAT RACK
S P 92	SPARE-RJB TO CONDENSER CPT
S P 93	SPARE-RJB TO EVAPORATOR CPT
S P 94	SPARE-RJB TO RR ROOF
S P 95	SPARE-RJB TO RR ROOF
S P 96	SPARE-RJB TO LUGG CPT #2
S P 97	SPARE-RJB TO LUGG CPT #3
S P 98	SPARE-RJB TO LUGG CPT #3
S P 104	SPARE-RJB TO ENGINE CPT
S P 105	SPARE-FJB TO ENGINE
S P 106	SPARE-RJB TO BATT. CPT.
S P 107	SPARE-RJB TO BATT. CPT.
S P 108	SPARE-RJB TO BATT. CPT.
S P 109	SPARE-RJB TO ENGINE CPT.
S P 110	SPARE-RJB TO ENGINE CPT.
S P 111	SPARE-RJB TO ENGINE CPT.
S P 112	SPARE-RJB TO ENGINE CPT.
S P 114	SPARE-FJB TO U/DASH WIPER
S P 115	SPARE-FJB TO U/DASH WIPER
S P 116	SPARE-FJB TO U/DASH FLOOR
S P 117	SPARE-FJB TO U/DASH FLOOR
W C	A/C & HEAT SYST-EVAP CTR SIGN
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A A	RS - VOLTAGE REGULATOR GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB. CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M 8	FS - AUX. A/C UNIT
0 M 9	FS - WATER PUMP DRIVER
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN- GND RLY
0 S A	ENGINE CPT STUD-ALTERN. BOSCH
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS FR JCT BOX CPT GRD STUD
0 Z	RR JCT BOX CPT GRD STUD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 A	A/C & HEAT SYSTEM-COOL 1 SIGN
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 H	A/C & HEAT SYSTEM-HI PRESS SW
2 H L	A/C & HEAT SYSTEM-LO & HI PRESS SW
2 L	A/C & HEAT SYSTEM-LO PRESS SW
5 N C	SPEED SIGNAL LOWER 5MPH
5 N O	SPEED SIGNAL HIGHER 5MPH
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
1 0	INTERIOR LTS-LUGGAGE CPT
1 0 A	INTERIOR LTS-LUGGAGE CPT
1 0 B	INTERIOR LTS-LUGGAGE CPT
1 0 C	INTERIOR LTS-LUGGAGE CPT
1 0 D	INTERIOR LTS-LUGGAGE CPT
1 0 E	INTERIOR LTS-EVAP. CPT
1 0 F	INTERIOR LTS-LUGGAGE CPT
1 0 H	INTERIOR LTS-LUGGAGE CPT
1 0 R	INTERIOR LTS-LUGGAGE DOOR AJAR
1 2	12V BAT ELECTRONIC JCT BLOCK
1 2	BAT CPT 12V BATTERY
1 2 A	FR JCT BOX 12V DISC SW
1 2 A	RR JCT BOX 12V DISC SW
1 2 B	12V BAT ELECTRICAL JCT BLOCK
1 2 B	RR JCT BOX 12V DISC SW
1 2 B	FR JCT BOX 12V DISC SW
1 2 B E	BAT. EQUALIZER MONITOR
1 2 C	FR JCT BOX 12V DISC SW
1 2 C	RR JCT BOX 12V DISC SW
1 2 D	BAT CPT 12V BATTERY
1 2 D T	TTLT MODULE
1 2 E	FR JCT BOX 12V DISC SW
1 2 E	RR JCT BOX 12V DISC SW
1 2 F	BAT CPT 12V FJB & IC
1 2 F	FR JCT BOX 12V DISC SW
1 2 F	RR JCT BOX 12V DISC SW
1 2 G	FR JCT BOX 12V DISC SW
1 2 J	FR JCT BOX 12V DISC SW
1 2 K	HVAC MODULE
1 2 I	12V IGNITION DISTRIBUTION
1 2 I	RR JCT BOX 12V IGNITION
1 2 I A	12V IGNITION DISTRIBUTION
1 2 I A	FR JCT BOX 12V IGNITION
1 2 I B	FR JCT BOX 12V IGNITION
1 2 L X	CLUSTER FEED
1 2 I F	FR JCT BOX 12V IGNITION
1 2 P	LH CONSOLE POWER OUTLET
1 2 R	BAT CPT 12V DISC RLY TO RJB
1 2 V A	BATTERY TO EQUALIZER 12V
1 2 V D	12V HOT WIRE DISTRIBUTION
1 2 V F	BAT CPT 12V FJB & IC
1 2 V I	12V IGNITION DISTRIBUTION
1 2 V R	BAT CPT 12V DISC RLY TO RJB

CIRCUIT NUMBER CODE

No.	DESCRIPTION
12W	12V BATTERY DDEC III
12X	FR JCT BOX 12V DISC SW
12X2	FR JCT BOX 12V DISC SW
12Y	FR JCT BOX 12V DISC SW
13A	ALARM & SIGNAL-LO AIR PRIM.
13B	ALARM & SIGNAL-LO AIR SEC.
15	EXTERIOR LTS-MULTI FUNC LEVEL
15A	WIPER & WASHER UPPER WINDSHIELD
16	SPEED - SIGNAL +
16A	SPEED - SIGNAL +
16T	SPEED - SIGNAL +
17	EXTERIOR LTS-FLASHER UNIT
17A	EXTERIOR LTS-FLASHER UNIT
19	DIFFERENTIAL OIL TEMP
20	SPEED - SIGNAL -
20T	SPEED - SIGNAL -
20W	SPEED - SIGNAL -
21	EXTERIOR LTS-DIRECTIONNAL LH
21A	EXTERIOR LTS-DIRECTIONNAL LH
21B	EXTERIOR LTS-HAZARD
21C	EXTERIOR LTS-CORNERING LH
21H	EXTERIOR LTS-DIRECTIONNAL LH
21K	EXTERIOR LTS-CORNERING
21N	EXTERIOR LTS-CORNERING LH
21P	EXTERIOR LTS-CORNERING LH
23	EXTERIOR LTS-DIRECTIONNAL RH
23	EXTERIOR LTS-DIRECTIONNAL RH
23A	EXTERIOR LTS-DIRECTIONNAL RH
23B	EXTERIOR LTS-DIRECTIONNAL RH
23C	EXTERIOR LTS-CORNERING RH
23N	EXTERIOR LTS-CORNERING RH
23P	EXTERIOR LTS-CORNERING RH
24	BAT CPT 24V BATTERY
24	FR JCT BOX 24V DISC SW
24A	BOOSTER BLOCK 24V DISC SW
24A	FR JCT BOX 24V DISC SW
24A	RR JCT BOX 24V DISC SW
24B	24V STARTER RLY FEEDING
24B	FR JCT BOX 24V DISC SW
24B	RR JCT BOX 24V DISC SW
24BE	RJB CPT-BAT EQ MONITOR HOT WIRE
24C	FR JCT BOX 24V DISC SW
24C	RR JCT BOX 24V DISC SW
24D	BAT CPT 24V HOT WIRE
24D	FR JCT BOX 24V HOT WIRE
24D	RR JCT BOX 24V HOT WIRE
24DA	A/C JCT BOX 24V HOT WIRE
24E	BAT CPT 24V DISC SW
24E	FR JCT BOX 24V DISC SW
24E	RR JCT BOX 24V DISC SW
24F	FR JCT BOX 24V DISC SW
24F	RR JCT BOX 24V DISC SW
24G	FR JCT BOX 24V DISC SW
24G	RR JCT BOX 24V DISC SW
24H	FR JCT BOX 24V DISC SW
24H	RR JCT BOX 24V DISC SW
24I	FR JCT BOX 24V IGNITION
24I	RR JCT BOX 24V IGNITION
24IA	FR JCT BOX 24V IGNITION
24IA	RR JCT BOX 24V IGNITION
24IB	FR JCT BOX 24V IGNITION
24IB	RR JCT BOX 24V IGNITION
24IF	FJB 24V IGNITION
24IC	FR JCT BOX 24V IGNITION
24P	FR JCT BOX 24V DISC SW
24S	24V DISC SW RLY SIGNAL
24T	RR JCT BOX 24V DISC SW
24V2	RR JCT BOX 24V DISC SW
24V3	RR JCT BOX 24V DISC SW
24V4	RR JCT BOX 24V DISC SW
24V5	RR JCT BOX 24V DISC SW
24VD	24V HOT WIRE DISTRIBUTION
24VF	BAT CPT 24V SW TO FJB & IC
24VA	BATTERY TO EQUALIZER 24V
24VI	RR JCT BOX 24V IGNITION
24VR	BAT CPT 24V DISC SW TO RJB
25	12VAC GEN RLY ON SIGNAL
25	12VAC GEN RLY ON SIGNAL
25A	ETHER SWITCH
25A	NOT ALTERNATOR #1-WARNING LT
25A1	24 VOLTS EXCITING SIGNAL - ALT. #1
25A2	24 VOLTS EXCITING SIGNAL - ALT. #2
25A3	24 V. SIGNAL ALT#1 OR ALT. #2 RUN
25F	12V IGNITION DISTRIBUTION
25B	EXTERIOR LTS-DAYTIME RUN LTS
25B	12 V. IGN. ALTERNATOR BOSCH
25C	12 V. SIGNAL ALT.#1 AND ALT.#2 RUN
25D	12 V. SIGNAL ALT.#1 AND ALT.#2 RUN
25H	24 V. IGN. ALTERNATOR BOSCH
25K	NOT ALTERNATOR #2-WARNING LT
26	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26B	DRIVER'S WINDOW LIFTER
26C	DRIVER'S WINDOW LIFTER
27	PARKING BRAKE SONALERT
27A	PARKING BRAKE SONALERT
28A	A/C & HEAT SYSTEM-HI PRESSURE
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29A	A/C & HEAT SYSTEM-DRIVER'S HTR
29H	HVAC DASH MODULE
29B	A/C & HEAT SYSTEM-DRIVER'S HTR
31A	A/C & HEAT SYSTEM-UNLOADER
31B	A/C & HEAT SYSTEM-UNLOADER
31B	WIPER & WASHER SYSTEM
31C	WIPER & WASHER SYSTEM
31D	WIPER & WASHER SYSTEM
31E	WIPER & WASHER SYSTEM
31J	WIPER & WASHER SYSTEM
31X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32B	EXTERIOR LTS-BACK-UP
32C	BACK-UP PWR & SIGNAL
32D	BACK-UP ALARM
35	ENTRANCE DOOR
35B	ENTRANCE DOOR
36	JACOB BRAKE SYSREM
36A	JACOB BRAKE SYSREM
39	INTERIOR LTS-24V LH CONSOLE SW
39A	INTERIOR LTS-DRIVER"S LTS
39K	DRIVER'S LTS KEYLESS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
43	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45A	WATER PUMP SIGNAL
45B	A/C & HEAT SYSTEM-HEAT SIGN
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
50	AIR DRYER
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL-AIR HORN
52C	ALARM & SIGNAL-AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
57CA	A/C & HEAT SYSTEM-HEAT SIGN
57CC	A/C & HEAT SYSTEM-HEAT SIGN
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58C	DAYTIME RUNNING LIGHT
58D	DAYTIME RUNNING LIGHT
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVER'S FAN
64B	DRIVER'S FAN
64C	DRIVER'S FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65D	DRIVER'S REC. DAMPER
65P	PASSENGER REC. DAMPER
66	O_PASS. ON/OFF
67	A/C & HEAT SYSTEM
67A	A/C & HEAT SYSTEM
67B	A/C & HEAT SYSTEM
67C	HEAT WINDS.
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67V	A/C & HEAT SYSTEM-WATER VALVE
68	DASH & DEFROST DAMPER MOTOR
68A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH

CIRCUIT NUMBER CODE

No.	DESCRIPTION
72C	SUN VISOR-LH
72D	SUN VISOR-LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77A	A/C & HEAT SYSTEM-COMPRESSOR
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
77K	GRD SIGNAL-COMPRESSOR CUT-OUT
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85W	24V IGN ABS
85X	24V IGN ABS
85Y	ABS-WARNING LT
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
90J	A/C & HEAT SYSTEM-COND FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
101	24V STARTER SOL FEEDING

No.	DESCRIPTION
101	WORLD TRANSM-LO SIGN SOL. LO
102	24V STARTER TO GENERATOR DELCO
102	WORLD TRANSM-SOL. GRD 1
102	WORLD TRANSM-SOL. C3
102A	24V STARTER TO GENERATOR BOSCH
104	WORLD TRANSM-SOL. FORWARD
104	LEVEL LOW SYSTEM
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	CHARG SYST-VOLTAGE REGUL. "F"
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125W	WORLD TRANSM-RET. INDICATOR

No.	DESCRIPTION
126	LEVEL LOW SYSTEM
126	WORLD TRANSM-LUBE PRESS SW.
127	WORLD TRANSM-LUBE PRESS SW.
127	PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
127B	PRE-HEAT WATER HEATER
127	WORLD TRANSM-RETARDER FEED SOL.
127S	PRE-HEAT WATER HEATER
127W	PRE-HEAT WATER HEATER
128	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT WATER HEATER
128W	PRE-HEAT WATER HEATER
128	WORLD TRANSM-SOL. C2
129	PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132A	LEVEL LOW SYSTEM
132B	LEVEL LOW SYSTEM
132C	LEVEL LOW SYSTEM
132D	LEVEL LOW SYSTEM
132E	LEVEL LOW SYSTEM
132F	LEVEL LOW SYSTEM
132G	LEVEL LOW SYSTEM
132H	LEVEL LOW SYSTEM
132J	LEVEL LOW SYSTEM
132K	LEVEL LOW SYSTEM
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	WORLD TRANSM-RET. ACTUATOR HI
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135A	A/C & HEAT SYSTEM-AIR SENSOR
135D	A/C & HEAT SYSTEM-AIR SENSOR
135C	A/C & HEAT SYSTEM-AIR SENSOR
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)

No.	DESCRIPTION
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
143X	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	ETHER COLD START
147	WORLD TRANSM-OIL TEMP
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
151A	ABS SYSTEM
152	ABS SYSTEM
152A	ABS SYSTEM
153	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	ABS SYSTEM
155	WORLD TRANSM-SPARE INPUT (-)
156	ABS SYSTEM
156	WORLD TRANSM-THROTTLE POS.

CIRCUIT NUMBER CODE

No.	DESCRIPTION
156A	ABS SYSTEM
157	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157A	ABS SYSTEM
157B	ABS SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
165A	A/C & HEAT SYSTEM-TRANSMITER
165B	A/C & HEAT SYSTEM-TRANSMITER
165C	A/C & HEAT SYSTEM-TRANSMITER
165D	A/C & HEAT SYSTEM-TRANSMITER
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	A/C & HEAT SYSTEM-TEMP. CTR
167A	A/C & HEAT SYSTEM-TEMP. CTR
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170C	LUGGAGE DOOR LOCK
170D	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170F	LUGGAGE DOOR LOCK
170G	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
170K	LUGGAGE DOOR LOCK
170L	LUGGAGE DOOR LOCK
170M	LUGGAGE DOOR LOCK
170N	LUGGAGE DOOR LOCK
170P	LUGGAGE DOOR LOCK
170R	LUGGAGE DOOR LOCK
170S	LUGGAGE DOOR LOCK
170V	LUGGAGE DOOR LOCK
170W	LUGGAGE DOOR LOCK
170X	LUGGAGE DOOR LOCK
170Y	LUGGAGE DOOR LOCK
170Z	LUGGAGE DOOR LOCK
173	BACK-UP MONITOR
174	BACK-UP MONITOR
175	BACK-UP MONITOR
175A	BACK-UP MONITOR
175B	BACK-UP MONITOR
175C	BACK-UP MONITOR
180	DRIVER'S SEAT HEATER
180A	DRIVER'S SEAT HEATER
180B	CO-PILOT SEAT HEATER
180C	CO-PILOT SEAT HEATER
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
216B	24V SIGNAL AUX. LIQ. SOL. VALVE
216C	12 V. TRIGGER AUX. A/C UNIT
229	24 V. POWER AUX. A/C UNIT
229A	PWM SIGNAL - AUX . FAN UNIT
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251	DDEC III - PRODRIVER 12V H.W.
251A	DDEC III -DATA LOGGER 12V H.W.
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
264	S PEED SIGNAL- AUX. FAN UNIT
264A	SPEED SIGNAL- AUX. FAN UNIT
264B	SPEED SIGNAL- AUX. FAN UNIT
270	KEYLESS ENTRY SYSTEM
272	KEYLESS ENTRY SYSTEM
274	KEYLESS ENTRY SYSTEM
275	KEYLESS ENTRY SYSTEM
276	KEYLESS ENTRY SYSTEM
277	KEYLESS ENTRY SYSTEM
278	KEYLESS ENTRY SYSTEM
279	KEYLESS ENTRY SYSTEM
280	KEYLESS ENTRY SYSTEM
283	KEYLESS ENTRY SYSTEM
283A	KEYLESS ENTRY SYSTEM
284A	KEYLESS ENTRY SYSTEM
285	KEYLESS ENTRY SYSTEM
286	KEYLESS ENTRY SYSTEM
286A	KEYLESS ENTRY SYSTEM
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
291	KEYLESS ENTRY SYSTEM
292	FAN CLUTCH RADIATOR SPD 2
293	KEYLESS ENTRY SYSTEM
294	ANTI-THEFT SYSTEM KEYLESS
295	LED FEED ALARM -KEYLESS
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE
540	DDEC III-CRUISE ENABLE LTS.
541	DDEC III-CRUISE SET SW
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
583	DDEC III-ENGINE BRAKE 4 CYL.
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
979	DDEC III-ENGINE BRAKE 2 CYL.

CIRCUIT NUMBER CODE

No.	DESCRIPTION
L 8	ENG. BLK HEATER
L 9	ENG. BLK HEATER
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 10	SPARE-RJB TO LUGG CPT #1
S P 11	SPARE-FJB TO RJB
S P 12	SPARE-RJB TO ENGINE
S P 13	SPARE-RJB TO ENGINE
S P 14	SPARE-FJB TO RJB
S P 15	SPARE-RJB TO ENGINE
S P 16	SPARE-RJB TO ENGINE
S P 17	SPARE-RJB TO ENGINE
S P 18	SPARE-FJB TO RJB
S P 24	SPARE-RJB TO LAVATORY ROOF
S P 25	SPARE-RJB TO LAVATORY ROOF
S P 26	SPARE-RJB TO LAVATORY ROOF
S P 27	SPARE-RJB TO LH HAT RACK
S P 28	SPARE-RJB TO LH HAT RACK
S P 31	SPARE-RJB TO RH HAT RACK
S P 32	SPARE-RJB TO RH HAT RACK
S P 33	SPARE-FJB TO RJB
S P 38	SPARE-FJB TO RJB
S P 43	SPARE-FJB TO RJB
S P 45	SPARE-FJB TO RJB
S P 46	SPARE-RJB TO LH FR ROOF
S P 48	SPARE-RJB TO DASH CENTER PANEL
S P 56	SPARE-ENGINE TO RH SW PANEL
S P 57	SPARE-DASH CENTER PANEL TO ENG.
S P 58	SPARE-DASH CENTER PANEL TO ENG.
S P 59	SPARE-FJB TO ENGINE
S P 61	SPARE-FJB TO DASH RH PANEL
S P 68	SPARE-FJB TO ENGINE
S P 69	SPARE-FJB TO FR AXLE
S P 70	SPARE-FJB TO FR AXLE
S P 71	SPARE-FJB TO RH SW PANEL
S P 72	SPARE-FJB TO FR SERV CPT
S P 74	SPARE-FJB TO LH CONSOLE
S P 77	SPARE-FJB TO EVAPORATOR CPT
S P 78	SPARE-FJB TO CONDENSER CPT
S P 79	SPARE-FJB TO CONDENSER CPT
S P 87	SPARE-RJB TO LH HAT RACK
S P 88	SPARE-RJB TO RH HAT RACK
S P 92	SPARE-RJB TO CONDENSER CPT
S P 93	SPARE-RJB TO EVAPORATOR CPT
S P 94	SPARE-RJB TO RR ROOF
S P 95	SPARE-RJB TO RR ROOF
S P 96	SPARE-RJB TO LUGG CPT #2
S P 97	SPARE-RJB TO LUGG CPT #3
S P 98	SPARE-RJB TO LUGG CPT #3
S P 104	SPARE-RJB TO ENGINE CPT
S P 105	SPARE-FJB TO ENGINE
S P 106	SPARE-RJB TO BATT. CPT.
S P 107	SPARE-RJB TO BATT. CPT.
S P 108	SPARE-RJB TO BATT. CPT.
S P 109	SPARE-RJB TO ENGINE CPT.
S P 110	SPARE-RJB TO ENGINE CPT.
S P 111	SPARE-RJB TO ENGINE CPT.
S P 112	SPARE-RJB TO ENGINE CPT.
S P 114	SPARE-FJB TO U/DASH WIPER
S P 115	SPARE-FJB TO U/DASH WIPER
S P 116	SPARE-FJB TO U/DASH FLOOR
S P 117	SPARE-FJB TO U/DASH FLOOR
W C	A/C & HEAT SYST-EVAP CTR SIGN
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A A	RS - VOLTAGE REGULATOR GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB. CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M 8	FS - AUX. A/C UNIT
0 M 9	FS - WATER PUMP DRIVER
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN- GND RLY
0 S A	ENGINE CPT STUD-ALTERN. BOSCH
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS FR JCT BOX CPT GRD STUD
0 Z	RR JCT BOX CPT GRD STUD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 A	A/C & HEAT SYSTEM-COOL 1 SIGN
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 H	A/C & HEAT SYSTEM-HI PRESS SW
2 H L	A/C & HEAT SYSTEM-LO & HI PRESS SW
2 L	A/C & HEAT SYSTEM-LO PRESS SW
5 N C	SPEED SIGNAL LOWER 5MPH
5 N O	SPEED SIGNAL HIGHER 5MPH
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
1 0	INTERIOR LTS-LUGGAGE CPT
1 0 A	INTERIOR LTS-LUGGAGE CPT
1 0 B	INTERIOR LTS-LUGGAGE CPT
1 0 C	INTERIOR LTS-LUGGAGE CPT
1 0 D	INTERIOR LTS-LUGGAGE CPT
1 0 E	INTERIOR LTS-EVAP. CPT
1 0 F	INTERIOR LTS-LUGGAGE CPT
1 0 H	INTERIOR LTS-LUGGAGE CPT
1 0 R	INTERIOR LTS-LUGGAGE DOOR AJAR
1 2	12V BAT ELECTRONIC JCT BLOCK
1 2	BAT CPT 12V BATTERY
1 2 A	FR JCT BOX 12V DISC SW
1 2 A	RR JCT BOX 12V DISC SW
1 2 B	12V BAT ELECTRICAL JCT BLOCK
1 2 B	RR JCT BOX 12V DISC SW
1 2 B	FR JCT BOX 12V DISC SW
1 2 B E	BAT. EQUALIZER MONITOR
1 2 C	FR JCT BOX 12V DISC SW
1 2 C	RR JCT BOX 12V DISC SW
1 2 D	BAT CPT 12V BATTERY
1 2 D T	TTLT MODULE
1 2 E	FR JCT BOX 12V DISC SW
1 2 E	RR JCT BOX 12V DISC SW
1 2 F	BAT CPT 12V FJB & IC
1 2 F	FR JCT BOX 12V DISC SW
1 2 F	RR JCT BOX 12V DISC SW
1 2 G	FR JCT BOX 12V DISC SW
1 2 J	FR JCT BOX 12V DISC SW
1 2 K	HVAC MODULE
1 2 I	12V IGNITION DISTRIBUTION
1 2 I	RR JCT BOX 12V IGNITION
1 2 I A	12V IGNITION DISTRIBUTION
1 2 I A	FR JCT BOX 12V IGNITION
1 2 I B	FR JCT BOX 12V IGNITION
1 2 L X	CLUSTER FEED
1 2 I F	FR JCT BOX 12V IGNITION
1 2 P	LH CONSOLE POWER OUTLET
1 2 R	BAT CPT 12V DISC RLY TO RJB
1 2 V A	BATTERY TO EQUALIZER 12V
1 2 V D	12V HOT WIRE DISTRIBUTION
1 2 V F	BAT CPT 12V FJB & IC
1 2 V I	12V IGNITION DISTRIBUTION
1 2 V R	BAT CPT 12V DISC RLY TO RJB

CIRCUIT NUMBER CODE

No.	DESCRIPTION
12W	12V BATTERY DDEC III
12X	FR JCT BOX 12V DISC SW
12X2	FR JCT BOX 12V DISC SW
12Y	FR JCT BOX 12V DISC SW
13A	ALARM & SIGNAL-LO AIR PRIM.
13B	ALARM & SIGNAL-LO AIR SEC.
15	EXTERIOR LTS-MULTI FUNC LEVEL
15A	WIPER & WASHER UPPER WINDSHIELD
16	SPEED - SIGNAL +
16A	SPEED - SIGNAL +
16T	SPEED - SIGNAL +
17	EXTERIOR LTS-FLASHER UNIT
17A	EXTERIOR LTS-FLASHER UNIT
19	DIFFERENTIAL OIL TEMP
20	SPEED - SIGNAL -
20T	SPEED - SIGNAL -
20W	SPEED - SIGNAL -
21	EXTERIOR LTS-DIRECTIONNAL LH
21A	EXTERIOR LTS-DIRECTIONNAL LH
21B	EXTERIOR LTS-HAZARD
21C	EXTERIOR LTS-CORNERING LH
21H	EXTERIOR LTS-DIRECTIONNAL LH
21K	EXTERIOR LTS-CORNERING
21N	EXTERIOR LTS-CORNERING LH
21P	EXTERIOR LTS-CORNERING LH
23	EXTERIOR LTS-DIRECTIONNAL RH
23	EXTERIOR LTS-DIRECTIONNAL RH
23A	EXTERIOR LTS-DIRECTIONNAL RH
23B	EXTERIOR LTS-DIRECTIONNAL RH
23C	EXTERIOR LTS-CORNERING RH
23N	EXTERIOR LTS-CORNERING RH
23P	EXTERIOR LTS-CORNERING RH
24	BAT CPT 24V BATTERY
24	FR JCT BOX 24V DISC SW
24A	BOOSTER BLOCK 24V DISC SW
24A	FR JCT BOX 24V DISC SW
24A	RR JCT BOX 24V DISC SW
24B	24V STARTER RLY FEEDING
24B	FR JCT BOX 24V DISC SW
24B	RR JCT BOX 24V DISC SW
24BE	RJB CPT-BAT EQ MONITOR HOT WIRE
24C	FR JCT BOX 24V DISC SW
24C	RR JCT BOX 24V DISC SW
24D	BAT CPT 24V HOT WIRE
24D	FR JCT BOX 24V HOT WIRE
24D	RR JCT BOX 24V HOT WIRE
24DA	A/C JCT BOX 24V HOT WIRE
24E	BAT CPT 24V DISC SW
24E	FR JCT BOX 24V DISC SW
24E	RR JCT BOX 24V DISC SW
24F	FR JCT BOX 24V DISC SW
24F	RR JCT BOX 24V DISC SW
24G	FR JCT BOX 24V DISC SW
24G	RR JCT BOX 24V DISC SW
24H	FR JCT BOX 24V DISC SW
24H	RR JCT BOX 24V DISC SW
24I	FR JCT BOX 24V IGNITION
24I	RR JCT BOX 24V IGNITION
24IA	FR JCT BOX 24V IGNITION
24IA	RR JCT BOX 24V IGNITION
24IB	FR JCT BOX 24V IGNITION
24IB	RR JCT BOX 24V IGNITION
24IF	FJB 24V IGNITION
24IC	FR JCT BOX 24V IGNITION
24P	FR JCT BOX 24V DISC SW
24S	24V DISC SW RLY SIGNAL
24T	RR JCT BOX 24V DISC SW
24V2	RR JCT BOX 24V DISC SW
24V3	RR JCT BOX 24V DISC SW
24V4	RR JCT BOX 24V DISC SW
24V5	RR JCT BOX 24V DISC SW
24VD	24V HOT WIRE DISTRIBUTION
24VF	BAT CPT 24V SW TO FJB & IC
24VA	BATTERY TO EQUALIZER 24V
24VI	RR JCT BOX 24V IGNITION
24VR	BAT CPT 24V DISC SW TO RJB
25	12VAC GEN RLY ON SIGNAL
25	12VAC GEN RLY ON SIGNAL
25A	ETHER SWITCH
25A	NOT ALTERNATOR #1-WARNING LT
25A1	24 VOLTS EXCITING SIGNAL - ALT. #1
25A2	24 VOLTS EXCITING SIGNAL - ALT. #2
25A3	24 V. SIGNAL ALT#1 OR ALT. #2 RUN
25F	12V IGNITION DISTRIBUTION
25B	EXTERIOR LTS-DAYTIME RUN LTS
25B	12 V. IGN. ALTERNATOR BOSCH
25C	12 V. SIGNAL ALT.#1 AND ALT.#2 RUN
25D	12 V. SIGNAL ALT.#1 AND ALT.#2 RUN
25H	24 V. IGN. ALTERNATOR BOSCH
25K	NOT ALTERNATOR #2-WARNING LT
26	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26B	DRIVER'S WINDOW LIFTER
26C	DRIVER'S WINDOW LIFTER
27	PARKING BRAKE SONALERT
27A	PARKING BRAKE SONALERT
28A	A/C & HEAT SYSTEM-HI PRESSURE
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29A	A/C & HEAT SYSTEM-DRIVER'S HTR
29H	HVAC DASH MODULE
29B	A/C & HEAT SYSTEM-DRIVER'S HTR
31A	A/C & HEAT SYSTEM-UNLOADER
31B	A/C & HEAT SYSTEM-UNLOADER
31B	WIPER & WASHER SYSTEM
31C	WIPER & WASHER SYSTEM
31D	WIPER & WASHER SYSTEM
31E	WIPER & WASHER SYSTEM
31J	WIPER & WASHER SYSTEM
31X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32B	EXTERIOR LTS-BACK-UP
32C	BACK-UP PWR & SIGNAL
32D	BACK-UP ALARM
35	ENTRANCE DOOR
35B	ENTRANCE DOOR
36	JACOB BRAKE SYSREM
36A	JACOB BRAKE SYSREM
39	INTERIOR LTS-12V RH PANEL SW.
39A	INTERIOR LTS-DRIVER"S LTS
39K	DRIVER'S LTS KEYLESS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
43	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45A	WATER PUMP SIGNAL
45B	A/C & HEAT SYSTEM-HEAT SIGN
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
50	AIR DRYER
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL-AIR HORN
52C	ALARM & SIGNAL-AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
57CA	A/C & HEAT SYSTEM-HEAT SIGN
57CC	A/C & HEAT SYSTEM-HEAT SIGN
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58C	DAYTIME RUNNING LIGHT
58D	DAYTIME RUNNING LIGHT
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVER'S FAN
64B	DRIVER'S FAN
64C	DRIVER'S FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65D	DRIVER'S REC. DAMPER
65P	PASSENGER REC. DAMPER
66	O_PASS. ON/OFF
67	A/C & HEAT SYSTEM
67A	A/C & HEAT SYSTEM
67B	A/C & HEAT SYSTEM
67C	HEAT WINDS.
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67V	A/C & HEAT SYSTEM-WATER VALVE
68	DASH & DEFROST DAMPER MOTOR
68A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH

CIRCUIT NUMBER CODE

No.	DESCRIPTION
72C	SUN VISOR-LH
72D	SUN VISOR-LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77A	A/C & HEAT SYSTEM-COMPRESSOR
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
77K	GRD SIGNAL-COMPRESSOR CUT-OUT
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85W	24V IGN ABS
85X	24V IGN ABS
85Y	ABS-WARNING LT
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
90J	A/C & HEAT SYSTEM-COND FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
101	24V STARTER SOL FEEDING

No.	DESCRIPTION
101	WORLD TRANSM-LO SIGN SOL. LO
102	24V STARTER TO GENERATOR DELCO
102	WORLD TRANSM-SOL. GRD 1
102	WORLD TRANSM-SOL. C3
102A	24V STARTER TO GENERATOR BOSCH
104	WORLD TRANSM-SOL. FORWARD
104	LEVEL LOW SYSTEM
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	CHARG SYST-VOLTAGE REGUL. "F"
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125W	WORLD TRANSM-RET. INDICATOR

No.	DESCRIPTION
126	LEVEL LOW SYSTEM
126	WORLD TRANSM-LUBE PRESS SW.
127	WORLD TRANSM-LUBE PRESS SW.
127	PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
127B	PRE-HEAT WATER HEATER
127	WORLD TRANSM-RETARDER FEED SOL.
127S	PRE-HEAT WATER HEATER
127W	PRE-HEAT WATER HEATER
128	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT WATER HEATER
128W	PRE-HEAT WATER HEATER
128	WORLD TRANSM-SOL. C2
129	PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132A	LEVEL LOW SYSTEM
132B	LEVEL LOW SYSTEM
132C	LEVEL LOW SYSTEM
132D	LEVEL LOW SYSTEM
132E	LEVEL LOW SYSTEM
132F	LEVEL LOW SYSTEM
132G	LEVEL LOW SYSTEM
132H	LEVEL LOW SYSTEM
132J	LEVEL LOW SYSTEM
132K	LEVEL LOW SYSTEM
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	WORLD TRANSM-RET. ACTUATOR HI
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135A	A/C & HEAT SYSTEM-AIR SENSOR
135D	A/C & HEAT SYSTEM-AIR SENSOR
135C	A/C & HEAT SYSTEM-AIR SENSOR
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)

No.	DESCRIPTION
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
143X	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	ETHER COLD START
147	WORLD TRANSM-OIL TEMP
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
151A	ABS SYSTEM
152	ABS SYSTEM
152A	ABS SYSTEM
153	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	ABS SYSTEM
155	WORLD TRANSM-SPARE INPUT (-)
156	ABS SYSTEM
156	WORLD TRANSM-THROTTLE POS.

CIRCUIT NUMBER CODE

No.	DESCRIPTION
156A	ABS SYSTEM
157	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157A	ABS SYSTEM
157B	ABS SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
165A	A/C & HEAT SYSTEM-TRANSMITER
165B	A/C & HEAT SYSTEM-TRANSMITER
165C	A/C & HEAT SYSTEM-TRANSMITER
165D	A/C & HEAT SYSTEM-TRANSMITER
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	A/C & HEAT SYSTEM-TEMP. CTR
167A	A/C & HEAT SYSTEM-TEMP. CTR
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170C	LUGGAGE DOOR LOCK
170D	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170F	LUGGAGE DOOR LOCK
170G	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
170K	LUGGAGE DOOR LOCK
170L	LUGGAGE DOOR LOCK
170M	LUGGAGE DOOR LOCK
170N	LUGGAGE DOOR LOCK
170P	LUGGAGE DOOR LOCK
170R	LUGGAGE DOOR LOCK
170S	LUGGAGE DOOR LOCK
170V	LUGGAGE DOOR LOCK
170W	LUGGAGE DOOR LOCK
170X	LUGGAGE DOOR LOCK
170Y	LUGGAGE DOOR LOCK
170Z	LUGGAGE DOOR LOCK
173	BACK-UP MONITOR
174	BACK-UP MONITOR
175	BACK-UP MONITOR
175A	BACK-UP MONITOR
175B	BACK-UP MONITOR
175C	BACK-UP MONITOR
180	DRIVER'S SEAT HEATER

No.	DESCRIPTION
180A	DRIVER'S SEAT HEATER
180B	CO-PILOT SEAT HEATER
180C	CO-PILOT SEAT HEATER
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
216B	24V SIGNAL AUX. LIQ. SOL. VALVE
216C	12 V. TRIGGER AUX. A/C UNIT
229	24 V. POWER AUX. A/C UNIT
229A	PWM SIGNAL - AUX . FAN UNIT
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251	DDEC III - PRODRIVER 12V H.W.
251A	DDEC III -DATA LOGGER 12V H.W.
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
264	S PEED SIGNAL- AUX. FAN UNIT
264A	SPEED SIGNAL- AUX. FAN UNIT
264B	SPEED SIGNAL- AUX. FAN UNIT
270	KEYLESS ENTRY SYSTEM
272	KEYLESS ENTRY SYSTEM
274	KEYLESS ENTRY SYSTEM
275	KEYLESS ENTRY SYSTEM
276	KEYLESS ENTRY SYSTEM
277	KEYLESS ENTRY SYSTEM
278	KEYLESS ENTRY SYSTEM

No.	DESCRIPTION
279	KEYLESS ENTRY SYSTEM
280	KEYLESS ENTRY SYSTEM
283	KEYLESS ENTRY SYSTEM
283A	KEYLESS ENTRY SYSTEM
284A	KEYLESS ENTRY SYSTEM
285	KEYLESS ENTRY SYSTEM
286	KEYLESS ENTRY SYSTEM
286A	KEYLESS ENTRY SYSTEM
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
291	KEYLESS ENTRY SYSTEM
292	FAN CLUTCH RADIATOR SPD 2
293	KEYLESS ENTRY SYSTEM
294	ANTI-THEFT SYSTEM KEYLESS
295	LED FEED ALARM -KEYLESS
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE
540	DDEC III-CRUISE ENABLE LTS.
541	DDEC III-CRUISE SET SW
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
583	DDEC III-ENGINE BRAKE 4 CYL.
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
979	DDEC III-ENGINE BRAKE 2 CYL.

No.	DESCRIPTION

CIRCUIT NUMBER CODE

No.	DESCRIPTION
L 8	ENG. BLK HEATER
L 9	ENG. BLK HEATER
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 10	SPARE-RJB TO LUGG CPT #1
S P 11	SPARE-FJB TO RJB
S P 12	SPARE-RJB TO ENGINE
S P 13	SPARE-RJB TO ENGINE
S P 14	SPARE-FJB TO RJB
S P 15	SPARE-RJB TO ENGINE
S P 16	SPARE-RJB TO ENGINE
S P 17	SPARE-RJB TO ENGINE
S P 18	SPARE-FJB TO RJB
S P 24	SPARE-RJB TO LAVATORY ROOF
S P 25	SPARE-RJB TO LAVATORY ROOF
S P 26	SPARE-RJB TO LAVATORY ROOF
S P 27	SPARE-RJB TO LH HAT RACK
S P 28	SPARE-RJB TO LH HAT RACK
S P 31	SPARE-RJB TO RH HAT RACK
S P 32	SPARE-RJB TO RH HAT RACK
S P 33	SPARE-FJB TO RJB
S P 38	SPARE-FJB TO RJB
S P 43	SPARE-FJB TO RJB
S P 45	SPARE-FJB TO RJB
S P 46	SPARE-RJB TO LH FR ROOF
S P 48	SPARE-RJB TO DASH CENTER PANEL
S P 56	SPARE-ENGINE TO RH SW PANEL
S P 57	SPARE-DASH CENTER PANEL TO ENG.
S P 58	SPARE-DASH CENTER PANEL TO ENG.
S P 59	SPARE-FJB TO ENGINE
S P 61	SPARE-FJB TO DASH RH PANEL
S P 68	SPARE-FJB TO ENGINE
S P 69	SPARE-FJB TO FR AXLE
S P 70	SPARE-FJB TO FR AXLE
S P 71	SPARE-FJB TO RH SW PANEL
S P 72	SPARE-FJB TO FR SERV CPT
S P 74	SPARE-FJB TO LH CONSOLE
S P 77	SPARE-FJB TO EVAPORATOR CPT
S P 78	SPARE-FJB TO CONDENSER CPT
S P 79	SPARE-FJB TO CONDENSER CPT
S P 87	SPARE-RJB TO LH HAT RACK
S P 88	SPARE-RJB TO RH HAT RACK
S P 92	SPARE-RJB TO CONDENSER CPT
S P 93	SPARE-RJB TO EVAPORATOR CPT
S P 94	SPARE-RJB TO RR ROOF
S P 95	SPARE-RJB TO RR ROOF
S P 96	SPARE-RJB TO LUGG CPT #2
S P 97	SPARE-RJB TO LUGG CPT #3
S P 98	SPARE-RJB TO LUGG CPT #3
S P 104	SPARE-RJB TO ENGINE CPT
S P 105	SPARE-FJB TO ENGINE
S P 106	SPARE-RJB TO BATT. CPT.
S P 107	SPARE-RJB TO BATT. CPT.
S P 108	SPARE-RJB TO BATT. CPT.
S P 109	SPARE-RJB TO ENGINE CPT.
S P 110	SPARE-RJB TO ENGINE CPT.
S P 111	SPARE-RJB TO ENGINE CPT.
S P 112	SPARE-RJB TO ENGINE CPT.
S P 114	SPARE-FJB TO U/DASH WIPER
S P 115	SPARE-FJB TO U/DASH WIPER
S P 116	SPARE-FJB TO U/DASH FLOOR
S P 117	SPARE-FJB TO U/DASH FLOOR
W C	A/C & HEAT SYST-EVAP CTR SIGN
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A A	RS - VOLTAGE REGULATOR GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB. CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M 8	FS - AUX. A/C UNIT
0 M 9	FS - WATER PUMP DRIVER
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN- GND RLY
0 S A	ENGINE CPT STUD-ALTERN. BOSCH
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS FR JCT BOX CPT GRD STUD
0 Z	RR JCT BOX CPT GRD STUD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 A	A/C & HEAT SYSTEM-COOL 1 SIGN
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 H	A/C & HEAT SYSTEM-HI PRESS SW
2 H L	A/C & HEAT SYSTEM-LO & HI PRESS SW
2 L	A/C & HEAT SYSTEM-LO PRESS SW
5 N C	SPEED SIGNAL LOWER 5MPH
5 N O	SPEED SIGNAL HIGHER 5MPH
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
1 0	INTERIOR LTS-LUGGAGE CPT
1 0 A	INTERIOR LTS-LUGGAGE CPT
1 0 B	INTERIOR LTS-LUGGAGE CPT
1 0 C	INTERIOR LTS-LUGGAGE CPT
1 0 D	INTERIOR LTS-LUGGAGE CPT
1 0 E	INTERIOR LTS-EVAP. CPT
1 0 F	INTERIOR LTS-LUGGAGE CPT
1 0 H	INTERIOR LTS-LUGGAGE CPT
1 0 R	INTERIOR LTS-LUGGAGE DOOR AJAR
1 2	12V BAT ELECTRONIC JCT BLOCK
1 2	BAT CPT 12V BATTERY
1 2 A	FR JCT BOX 12V DISC SW
1 2 A	RR JCT BOX 12V DISC SW
1 2 B	12V BAT ELECTRICAL JCT BLOCK
1 2 B	RR JCT BOX 12V DISC SW
1 2 B	FR JCT BOX 12V DISC SW
1 2 B E	BAT. EQUALIZER MONITOR
1 2 C	FR JCT BOX 12V DISC SW
1 2 C	RR JCT BOX 12V DISC SW
1 2 D	BAT CPT 12V BATTERY
1 2 D T	TTLT MODULE
1 2 E	FR JCT BOX 12V DISC SW
1 2 E	RR JCT BOX 12V DISC SW
1 2 F	BAT CPT 12V FJB & IC
1 2 F	FR JCT BOX 12V DISC SW
1 2 F	RR JCT BOX 12V DISC SW
1 2 G	FR JCT BOX 12V DISC SW
1 2 J	FR JCT BOX 12V DISC SW
1 2 K	HVAC MODULE
1 2 I	12V IGNITION DISTRIBUTION
1 2 I	RR JCT BOX 12V IGNITION
1 2 I A	12V IGNITION DISTRIBUTION
1 2 I A	FR JCT BOX 12V IGNITION
1 2 I B	FR JCT BOX 12V IGNITION
1 2 L X	CLUSTER FEED
1 2 I F	FR JCT BOX 12V IGNITION
1 2 P	LH CONSOLE POWER OUTLET
1 2 R	BAT CPT 12V DISC RLY TO RJB
1 2 V A	BATTERY TO EQUALIZER 12V
1 2 V D	12V HOT WIRE DISTRIBUTION
1 2 V F	BAT CPT 12V FJB & IC
1 2 V I	12V IGNITION DISTRIBUTION
1 2 V R	BAT CPT 12V DISC RLY TO RJB

CIRCUIT NUMBER CODE

No.	DESCRIPTION
12W	12V BATTERY DDEC III
12X	FR JCT BOX 12V DISC SW
12X2	FR JCT BOX 12V DISC SW
12Y	FR JCT BOX 12V DISC SW
13A	ALARM & SIGNAL-LO AIR PRIM.
13B	ALARM & SIGNAL-LO AIR SEC.
15	EXTERIOR LTS-MULTI FUNC LEVEL
15A	WIPER & WASHER UPPER WINDSHIELD
16	SPEED - SIGNAL +
16A	SPEED - SIGNAL +
16T	SPEED - SIGNAL +
17	EXTERIOR LTS-FLASHER UNIT
17A	EXTERIOR LTS-FLASHER UNIT
19	DIFFERENTIAL OIL TEMP
20	SPEED - SIGNAL -
20T	SPEED - SIGNAL -
20W	SPEED - SIGNAL -
21	EXTERIOR LTS-DIRECTIONNAL LH
21A	EXTERIOR LTS-DIRECTIONNAL LH
21B	EXTERIOR LTS-HAZARD
21C	EXTERIOR LTS-CORNERING LH
21H	EXTERIOR LTS-DIRECTIONNAL LH
21K	EXTERIOR LTS-CORNERING
21N	EXTERIOR LTS-CORNERING LH
21P	EXTERIOR LTS-CORNERING LH
23	EXTERIOR LTS-DIRECTIONNAL RH
23	EXTERIOR LTS-DIRECTIONNAL RH
23A	EXTERIOR LTS-DIRECTIONNAL RH
23B	EXTERIOR LTS-DIRECTIONNAL RH
23C	EXTERIOR LTS-CORNERING RH
23N	EXTERIOR LTS-CORNERING RH
23P	EXTERIOR LTS-CORNERING RH
24	BAT CPT 24V BATTERY
24	FR JCT BOX 24V DISC SW
24A	BOOSTER BLOCK 24V DISC SW
24A	FR JCT BOX 24V DISC SW
24A	RR JCT BOX 24V DISC SW
24B	24V STARTER RLY FEEDING
24B	FR JCT BOX 24V DISC SW
24B	RR JCT BOX 24V DISC SW
24BE	RJB CPT-BAT EQ MONITOR HOT WIRE
24C	FR JCT BOX 24V DISC SW
24C	RR JCT BOX 24V DISC SW
24D	BAT CPT 24V HOT WIRE
24D	FR JCT BOX 24V HOT WIRE
24D	RR JCT BOX 24V HOT WIRE
24DA	A/C JCT BOX 24V HOT WIRE
24E	BAT CPT 24V DISC SW
24E	FR JCT BOX 24V DISC SW
24E	RR JCT BOX 24V DISC SW
24F	FR JCT BOX 24V DISC SW
24F	RR JCT BOX 24V DISC SW
24G	FR JCT BOX 24V DISC SW
24G	RR JCT BOX 24V DISC SW
24H	FR JCT BOX 24V DISC SW
24H	RR JCT BOX 24V DISC SW
24I	FR JCT BOX 24V IGNITION
24I	RR JCT BOX 24V IGNITION
24IA	FR JCT BOX 24V IGNITION
24IA	RR JCT BOX 24V IGNITION
24IB	FR JCT BOX 24V IGNITION
24IB	RR JCT BOX 24V IGNITION
24IF	FJB 24V IGNITION
24IC	FR JCT BOX 24V IGNITION
24P	FR JCT BOX 24V DISC SW
24S	24V DISC SW RLY SIGNAL
24T	RR JCT BOX 24V DISC SW
24V2	RR JCT BOX 24V DISC SW
24V3	RR JCT BOX 24V DISC SW
24V4	RR JCT BOX 24V DISC SW
24V5	RR JCT BOX 24V DISC SW
24VD	24V HOT WIRE DISTRIBUTION
24VF	BAT CPT 24V SW TO FJB & IC
24VA	BATTERY TO EQUALIZER 24V
24VI	RR JCT BOX 24V IGNITION
24VR	BAT CPT 24V DISC SW TO RJB
25	12VAC GEN RLY ON SIGNAL
25	12VAC GEN RLY ON SIGNAL
25A	ETHER SWITCH
25A	NOT ALTERNATOR #1-WARNING LT
25A1	24 VOLTS EXCITING SIGNAL - ALT. #1
25A2	24 VOLTS EXCITING SIGNAL - ALT. #2
25A3	24 V. SIGNAL ALT#1 OR ALT. #2 RUN
25F	12V IGNITION DISTRIBUTION
25B	EXTERIOR LTS-DAYTIME RUN LTS
25B	12 V. IGN. ALTERNATOR BOSCH
25C	12 V. SIGNAL ALT.#1 AND ALT.#2 RUN
25D	12 V. SIGNAL ALT.#1 AND ALT.#2 RUN
25H	24 V. IGN. ALTERNATOR BOSCH
25K	NOT ALTERNATOR #2-WARNING LT
26	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26B	DRIVER'S WINDOW LIFTER
26C	DRIVER'S WINDOW LIFTER
27	PARKING BRAKE SONALERT
27A	PARKING BRAKE SONALERT
28A	A/C & HEAT SYSTEM-HI PRESSURE
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29A	A/C & HEAT SYSTEM-DRIVER'S HTR
29H	HVAC DASH MODULE
29B	A/C & HEAT SYSTEM-DRIVER'S HTR
31A	A/C & HEAT SYSTEM-UNLOADER
31B	A/C & HEAT SYSTEM-UNLOADER
31B	WIPER & WASHER SYSTEM
31C	WIPER & WASHER SYSTEM
31D	WIPER & WASHER SYSTEM
31E	WIPER & WASHER SYSTEM
31J	WIPER & WASHER SYSTEM
31X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32B	EXTERIOR LTS-BACK-UP
32C	BACK-UP PWR & SIGNAL
32D	BACK-UP ALARM
35	ENTRANCE DOOR
35B	ENTRANCE DOOR
36	JACOB BRAKE SYSREM
36A	JACOB BRAKE SYSREM
39	INTERIOR LTS-12V RH PANEL SW.
39A	INTERIOR LTS-DRIVER"S LTS
39K	DRIVER'S LTS KEYLESS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
43	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45A	WATER PUMP SIGNAL
45B	A/C & HEAT SYSTEM-HEAT SIGN
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
50	AIR DRYER
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL-AIR HORN
52C	ALARM & SIGNAL-AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
57CA	A/C & HEAT SYSTEM-HEAT SIGN
57CC	A/C & HEAT SYSTEM-HEAT SIGN
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58C	DAYTIME RUNNING LIGHT
58D	DAYTIME RUNNING LIGHT
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVER'S FAN
64B	DRIVER'S FAN
64C	DRIVER'S FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65D	DRIVER'S REC. DAMPER
65P	PASSENGER REC. DAMPER
66	O_PASS. ON/OFF
67	A/C & HEAT SYSTEM
67A	A/C & HEAT SYSTEM
67B	A/C & HEAT SYSTEM
67C	HEAT WINDS.
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67V	A/C & HEAT SYSTEM-WATER VALVE
68	DASH & DEFROST DAMPER MOTOR
68A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH

CIRCUIT NUMBER CODE

No.	DESCRIPTION
72C	SUN VISOR-LH
72D	SUN VISOR-LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77A	A/C & HEAT SYSTEM-COMPRESSOR
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
77K	GRD SIGNAL-COMPRESSOR CUT-OUT
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85W	24V IGN ABS
85X	24V IGN ABS
85Y	ABS-WARNING LT
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
90J	A/C & HEAT SYSTEM-COND FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
101	24V STARTER SOL FEEDING

No.	DESCRIPTION
101	WORLD TRANSM-LO SIGN SOL. LO
102	24V STARTER TO GENERATOR DELCO
102	WORLD TRANSM-SOL. GRD 1
102	WORLD TRANSM-SOL. C3
102A	24V STARTER TO GENERATOR BOSCH
104	WORLD TRANSM-SOL. FORWARD
104	LEVEL LOW SYSTEM
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	CHARG SYST-VOLTAGE REGUL. "F"
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125W	WORLD TRANSM-RET. INDICATOR

No.	DESCRIPTION
126	LEVEL LOW SYSTEM
126	WORLD TRANSM-LUBE PRESS SW.
127	WORLD TRANSM-LUBE PRESS SW.
127	PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
127B	PRE-HEAT WATER HEATER
127	WORLD TRANSM-RETARDER FEED SOL.
127S	PRE-HEAT WATER HEATER
127W	PRE-HEAT WATER HEATER
128	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT WATER HEATER
128W	PRE-HEAT WATER HEATER
128	WORLD TRANSM-SOL. C2
129	PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132A	LEVEL LOW SYSTEM
132B	LEVEL LOW SYSTEM
132C	LEVEL LOW SYSTEM
132D	LEVEL LOW SYSTEM
132E	LEVEL LOW SYSTEM
132F	LEVEL LOW SYSTEM
132G	LEVEL LOW SYSTEM
132H	LEVEL LOW SYSTEM
132J	LEVEL LOW SYSTEM
132K	LEVEL LOW SYSTEM
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	WORLD TRANSM-RET. ACTUATOR HI
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135A	A/C & HEAT SYSTEM-AIR SENSOR
135D	A/C & HEAT SYSTEM-AIR SENSOR
135C	A/C & HEAT SYSTEM-AIR SENSOR
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)

No.	DESCRIPTION
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
143X	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	ETHER COLD START
147	WORLD TRANSM-OIL TEMP
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
151A	ABS SYSTEM
152	ABS SYSTEM
152A	ABS SYSTEM
153	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	ABS SYSTEM
155	WORLD TRANSM-SPARE INPUT (-)
156	ABS SYSTEM
156	WORLD TRANSM-THROTTLE POS.

CIRCUIT NUMBER CODE

No.	DESCRIPTION
156A	ABS SYSTEM
157	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157A	ABS SYSTEM
157B	ABS SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
165A	A/C & HEAT SYSTEM-TRANSMITER
165B	A/C & HEAT SYSTEM-TRANSMITER
165C	A/C & HEAT SYSTEM-TRANSMITER
165D	A/C & HEAT SYSTEM-TRANSMITER
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	A/C & HEAT SYSTEM-TEMP. CTR
167A	A/C & HEAT SYSTEM-TEMP. CTR
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170C	LUGGAGE DOOR LOCK
170D	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170F	LUGGAGE DOOR LOCK
170G	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
170K	LUGGAGE DOOR LOCK
170L	LUGGAGE DOOR LOCK
170M	LUGGAGE DOOR LOCK
170N	LUGGAGE DOOR LOCK
170P	LUGGAGE DOOR LOCK
170R	LUGGAGE DOOR LOCK
170S	LUGGAGE DOOR LOCK
170V	LUGGAGE DOOR LOCK
170W	LUGGAGE DOOR LOCK
170X	LUGGAGE DOOR LOCK
170Y	LUGGAGE DOOR LOCK
170Z	LUGGAGE DOOR LOCK
173	BACK-UP MONITOR
174	BACK-UP MONITOR
175	BACK-UP MONITOR
175A	BACK-UP MONITOR
175B	BACK-UP MONITOR
175C	BACK-UP MONITOR
180	DRIVER'S SEAT HEATER
180A	DRIVER'S SEAT HEATER
180B	CO-PILOT SEAT HEATER
180C	CO-PILOT SEAT HEATER
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
216B	24V SIGNAL AUX. LIQ. SOL. VALVE
216C	12 V. TRIGGER AUX. A/C UNIT
229	24 V. POWER AUX. A/C UNIT
229A	PWM SIGNAL - AUX . FAN UNIT
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251	DDEC III - PRODRIVER 12V H.W.
251A	DDEC III -DATA LOGGER 12V H.W.
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
264	S PEED SIGNAL- AUX. FAN UNIT
264A	SPEED SIGNAL- AUX. FAN UNIT
264B	SPEED SIGNAL- AUX. FAN UNIT
270	KEYLESS ENTRY SYSTEM
272	KEYLESS ENTRY SYSTEM
274	KEYLESS ENTRY SYSTEM
275	KEYLESS ENTRY SYSTEM
276	KEYLESS ENTRY SYSTEM
277	KEYLESS ENTRY SYSTEM
278	KEYLESS ENTRY SYSTEM
279	KEYLESS ENTRY SYSTEM
280	KEYLESS ENTRY SYSTEM
283	KEYLESS ENTRY SYSTEM
283A	KEYLESS ENTRY SYSTEM
284A	KEYLESS ENTRY SYSTEM
285	KEYLESS ENTRY SYSTEM
286	KEYLESS ENTRY SYSTEM
286A	KEYLESS ENTRY SYSTEM
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
291	KEYLESS ENTRY SYSTEM
292	FAN CLUTCH RADIATOR SPD 2
293	KEYLESS ENTRY SYSTEM
294	ANTI-THEFT SYSTEM KEYLESS
295	LED FEED ALARM -KEYLESS
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE
540	DDEC III-CRUISE ENABLE LTS.
541	DDEC III-CRUISE SET SW
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
583	DDEC III-ENGINE BRAKE 4 CYL.
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
979	DDEC III-ENGINE BRAKE 2 CYL.

CIRCUIT NUMBER CODE

No.	DESCRIPTION
L 8	ENG. BLK HEATER
L 9	ENG. BLK HEATER
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 10	SPARE-RJB TO LUGG CPT #1
S P 11	SPARE-FJB TO RJB
S P 12	SPARE-RJB TO ENGINE
S P 13	SPARE-RJB TO ENGINE
S P 14	SPARE-FJB TO RJB
S P 15	SPARE-RJB TO ENGINE
S P 16	SPARE-RJB TO ENGINE
S P 17	SPARE-RJB TO ENGINE
S P 18	SPARE-FJB TO RJB
S P 24	SPARE-RJB TO LAVATORY ROOF
S P 25	SPARE-RJB TO LAVATORY ROOF
S P 26	SPARE-RJB TO LAVATORY ROOF
S P 27	SPARE-RJB TO LH HAT RACK
S P 28	SPARE-RJB TO LH HAT RACK
S P 31	SPARE-RJB TO RH HAT RACK
S P 32	SPARE-RJB TO RH HAT RACK
S P 33	SPARE-FJB TO RJB
S P 38	SPARE-FJB TO RJB
S P 43	SPARE-FJB TO RJB
S P 45	SPARE-FJB TO RJB
S P 46	SPARE-RJB TO LH FR ROOF
S P 48	SPARE-RJB TO DASH CENTER PANEL
S P 56	SPARE-ENGINE TO RH SW PANEL
S P 57	SPARE-DASH CENTER PANEL TO ENG.
S P 58	SPARE-DASH CENTER PANEL TO ENG.
S P 59	SPARE-FJB TO ENGINE
S P 61	SPARE-FJB TO DASH RH PANEL
S P 68	SPARE-FJB TO ENGINE
S P 69	SPARE-FJB TO FR AXLE
S P 70	SPARE-FJB TO FR AXLE
S P 71	SPARE-FJB TO RH SW PANEL
S P 72	SPARE-FJB TO FR SERV CPT
S P 74	SPARE-FJB TO LH CONSOLE
S P 77	SPARE-FJB TO EVAPORATOR CPT
S P 78	SPARE-FJB TO CONDENSER CPT
S P 79	SPARE-FJB TO CONDENSER CPT
S P 87	SPARE-RJB TO LH HAT RACK
S P 88	SPARE-RJB TO RH HAT RACK
S P 92	SPARE-RJB TO CONDENSER CPT
S P 93	SPARE-RJB TO EVAPORATOR CPT
S P 94	SPARE-RJB TO RR ROOF
S P 95	SPARE-RJB TO RR ROOF
S P 96	SPARE-RJB TO LUGG CPT #2
S P 97	SPARE-RJB TO LUGG CPT #3
S P 98	SPARE-RJB TO LUGG CPT #3
S P 104	SPARE-RJB TO ENGINE CPT
S P 105	SPARE-FJB TO ENGINE
S P 106	SPARE-RJB TO BATT. CPT.
S P 107	SPARE-RJB TO BATT. CPT.
S P 108	SPARE-RJB TO BATT. CPT.
S P 109	SPARE-RJB TO ENGINE CPT.
S P 110	SPARE-RJB TO ENGINE CPT.
S P 111	SPARE-RJB TO ENGINE CPT.
S P 112	SPARE-RJB TO ENGINE CPT.
S P 114	SPARE-FJB TO U/DASH WIPER
S P 115	SPARE-FJB TO U/DASH WIPER
S P 116	SPARE-FJB TO U/DASH FLOOR
S P 117	SPARE-FJB TO U/DASH FLOOR
W C	A/C & HEAT SYST-EVAP CTR SIGN
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A A	RS - VOLTAGE REGULATOR GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB. CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M 8	FS - AUX. A/C UNIT
0 M 9	FS - WATER PUMP DRIVER
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN- GND RLY
0 S A	ENGINE CPT STUD-ALTERN. BOSCH
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS FR JCT BOX CPT GRD STUD
0 Z	RR JCT BOX CPT GRD STUD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 A	A/C & HEAT SYSTEM-COOL 1 SIGN
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 E	A/C & HEAT EVAP. CONTROL
2 F	A/C & HEAT EVAP. CONTROL
2 H	A/C & HEAT SYSTEM-HI PRESS SW
2 H L	A/C & HEAT SYSTEM-LO & HI PRESS SW
2 L	A/C & HEAT SYSTEM-LO PRESS SW
5 N C	SPEED SIGNAL LOWER 5MPH
5 N O	SPEED SIGNAL HIGHER 5MPH
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
1 0	INTERIOR LTS-LUGGAGE CPT
1 0 A	INTERIOR LTS-LUGGAGE CPT
1 0 B	INTERIOR LTS-LUGGAGE CPT
1 0 C	INTERIOR LTS-LUGGAGE CPT
1 0 D	INTERIOR LTS-LUGGAGE CPT
1 0 E	INTERIOR LTS-EVAP. CPT
1 0 F	INTERIOR LTS-LUGGAGE CPT
1 0 H	INTERIOR LTS-LUGGAGE CPT
1 0 R	INTERIOR LTS-LUGGAGE DOOR AJAR
1 2	12V BAT ELECTRONIC JCT BLOCK
1 2	BAT CPT 12V BATTERY
1 2 A	FR JCT BOX 12V DISC SW
1 2 A	RR JCT BOX 12V DISC SW
1 2 B	12V BAT ELECTRICAL JCT BLOCK
1 2 B	RR JCT BOX 12V DISC SW
1 2 B	FR JCT BOX 12V DISC SW
1 2 B E	BAT. EQUALIZER MONITOR
1 2 C	FR JCT BOX 12V DISC SW
1 2 C	RR JCT BOX 12V DISC SW
1 2 D	BAT CPT 12V BATTERY
1 2 D T	TTLT MODULE
1 2 E	FR JCT BOX 12V DISC SW
1 2 E	RR JCT BOX 12V DISC SW
1 2 F	BAT CPT 12V FJB & IC
1 2 F	FR JCT BOX 12V DISC SW
1 2 F	RR JCT BOX 12V DISC SW
1 2 G	FR JCT BOX 12V DISC SW
1 2 J	FR JCT BOX 12V DISC SW
1 2 K	HVAC MODULE
1 2 I	12V IGNITION DISTRIBUTION
1 2 I	RR JCT BOX 12V IGNITION
1 2 I A	12V IGNITION DISTRIBUTION
1 2 I A	FR JCT BOX 12V IGNITION
1 2 I B	FR JCT BOX 12V IGNITION
1 2 L X	CLUSTER FEED
1 2 I F	FR JCT BOX 12V IGNITION
1 2 P	LH CONSOLE POWER OUTLET
1 2 R	BAT CPT 12V DISC RLY TO RJB
1 2 V A	BATTERY TO EQUALIZER 12V
1 2 V D	12V HOT WIRE DISTRIBUTION
1 2 V F	BAT CPT 12V FJB & IC

CIRCUIT NUMBER CODE

No.	DESCRIPTION
12VI	12V IGNITION DISTRIBUTION
12VR	BAT CPT 12V DISC RLY TO RJB
12W	12V BATTERY DDEC III
12X	FR JCT BOX 12V DISC SW
12X2	FR JCT BOX 12V DISC SW
12Y	FR JCT BOX 12V DISC SW
13A	ALARM & SIGNAL-LO AIR PRIM.
13B	ALARM & SIGNAL-LO AIR SEC.
15	EXTERIOR LTS-MULTI FUNC LEVEL
15A	WIPER & WASHER UPPER WINDSHIELD
16	SPEED - SIGNAL +
16A	SPEED - SIGNAL +
16T	SPEED - SIGNAL +
17	EXTERIOR LTS-FLASHER UNIT
17A	EXTERIOR LTS-FLASHER UNIT
19	DIFFERENTIAL OIL TEMP
20	SPEED - SIGNAL -
20T	SPEED - SIGNAL -
20W	SPEED - SIGNAL -
21	EXTERIOR LTS-DIRECTIONNAL LH
21A	EXTERIOR LTS-DIRECTIONNAL LH
21B	EXTERIOR LTS-HAZARD
21C	EXTERIOR LTS-CORNERING LH
21H	EXTERIOR LTS-DIRECTIONNAL LH
21K	EXTERIOR LTS-CORNERING
21N	EXTERIOR LTS-CORNERING LH
21P	EXTERIOR LTS-CORNERING LH
23	EXTERIOR LTS-DIRECTIONNAL RH
23	EXTERIOR LTS-DIRECTIONNAL RH
23A	EXTERIOR LTS-DIRECTIONNAL RH
23B	EXTERIOR LTS-DIRECTIONNAL RH
23C	EXTERIOR LTS-CORNERING RH
23N	EXTERIOR LTS-CORNERING RH
23P	EXTERIOR LTS-CORNERING RH
24	BAT CPT 24V BATTERY
24	FR JCT BOX 24V DISC SW
24A	BOOSTER BLOCK 24V DISC SW
24A	FR JCT BOX 24V DISC SW
24A	RR JCT BOX 24V DISC SW
24B	24V STARTER RLY FEEDING
24B	FR JCT BOX 24V DISC SW
24B	RR JCT BOX 24V DISC SW
24BE	RJB CPT-BAT EQ MONITOR HOT WIRE
24C	FR JCT BOX 24V DISC SW
24C	RR JCT BOX 24V DISC SW
24D	BAT CPT 24V HOT WIRE
24D	FR JCT BOX 24V HOT WIRE
24D	RR JCT BOX 24V HOT WIRE
24DA	A/C JCT BOX 24V HOT WIRE
24E	BAT CPT 24V DISC SW

No.	DESCRIPTION
24E	FR JCT BOX 24V DISC SW
24E	RR JCT BOX 24V DISC SW
24F	FR JCT BOX 24V DISC SW
24F	RR JCT BOX 24V DISC SW
24G	FR JCT BOX 24V DISC SW
24G	RR JCT BOX 24V DISC SW
24H	FR JCT BOX 24V DISC SW
24H	RR JCT BOX 24V DISC SW
24I	FR JCT BOX 24V IGNITION
24I	RR JCT BOX 24V IGNITION
24IA	FR JCT BOX 24V IGNITION
24IA	RR JCT BOX 24V IGNITION
24IB	FR JCT BOX 24V IGNITION
24IB	RR JCT BOX 24V IGNITION
24IF	FJB 24V IGNITION
24IC	FR JCT BOX 24V IGNITION
24P	FR JCT BOX 24V DISC SW
24S	24V DISC SW RLY SIGNAL
24T	RR JCT BOX 24V DISC SW
24V2	RR JCT BOX 24V DISC SW
24V3	RR JCT BOX 24V DISC SW
24V4	RR JCT BOX 24V DISC SW
24V5	RR JCT BOX 24V DISC SW
24VD	24V HOT WIRE DISTRIBUTION
24VF	BAT CPT 24V SW TO FJB & IC
24VA	BATTERY TO EQUALIZER 24V
24VI	RR JCT BOX 24V IGNITION
24VR	BAT CPT 24V DISC SW TO RJB
25	12VAC GEN RLY ON SIGNAL
25	12VAC GEN RLY ON SIGNAL
25A	ETHER SWITCH
25A	NOT ALTERNATOR #1-WARNING LT
25A1	24 VOLTS EXCITING SIGNAL - ALT. #1
25A2	24 VOLTS EXCITING SIGNAL - ALT. #2
25A3	24 V. SIGNAL ALT#1 OR ALT. #2 RUN
25F	12V IGNITION DISTRIBUTION
25B	EXTERIOR LTS-DAYTIME RUN LTS
25B	12 V. IGN. ALTERNATOR BOSCH
25C	12 V. SIGNAL ALT.#1 AND ALT.#2 RUN
25D	12 V. SIGNAL ALT.#1 AND ALT.#2 RUN
25H	24 V. IGN. ALTERNATOR BOSCH
25K	NOT ALTERNATOR #2-WARNING LT
26	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26B	DRIVER'S WINDOW LIFTER
26C	DRIVER'S WINDOW LIFTER
27	PARKING BRAKE SONALERT
27A	PARKING BRAKE SONALERT
28A	A/C & HEAT SYSTEM-HI PRESSURE
29	A/C & HEAT SYSTEM-DRIVER'S HTR

No.	DESCRIPTION
29A	A/C & HEAT SYSTEM-DRIVER'S HTR
29H	HVAC DASH MODULE
29B	A/C & HEAT SYSTEM-DRIVER'S HTR
31A	A/C & HEAT SYSTEM-UNLOADER
31B	A/C & HEAT SYSTEM-UNLOADER
31B	WIPER & WASHER SYSTEM
31C	WIPER & WASHER SYSTEM
31D	WIPER & WASHER SYSTEM
31E	WIPER & WASHER SYSTEM
31J	WIPER & WASHER SYSTEM
31X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32B	EXTERIOR LTS-BACK-UP
32C	BACK-UP PWR & SIGNAL
32D	BACK-UP ALARM
35	ENTRANCE DOOR
35B	ENTRANCE DOOR
36	JACOB BRAKE SYSREM
36A	JACOB BRAKE SYSREM
39	INTERIOR LTS-12V RH PANEL SW.
39A	INTERIOR LTS-DRIVER"S LTS
39B	DRIVER'S LTS KEYLESS
39K	DRIVER'S LTS KEYLESS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
43	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45A	WATER PUMP SIGNAL
45B	A/C & HEAT SYSTEM-HEAT SIGN
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
50	AIR DRYER
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL-AIR HORN

No.	DESCRIPTION
52C	ALARM & SIGNAL-AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
53K	KEYLESS
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
57CA	A/C & HEAT SYSTEM-HEAT SIGN
57CC	A/C & HEAT SYSTEM-HEAT SIGN
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58C	DAYTIME RUNNING LIGHT
58D	DAYTIME RUNNING LIGHT
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVER'S FAN
64B	DRIVER'S FAN
64C	DRIVER'S FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65D	DRIVER'S REC. DAMPER
65P	PASSENGER REC. DAMPER
66	O_PASS. ON/OFF
67	A/C & HEAT SYSTEM
67A	A/C & HEAT SYSTEM
67B	A/C & HEAT SYSTEM
67C	HEAT WINDS.
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67V	A/C & HEAT SYSTEM-WATER VALVE
68	DASH & DEFROST DAMPER MOTOR
68A	DASH & DEFROST DAMPER MOTOR

CIRCUIT NUMBER CODE

No.	DESCRIPTION
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH
72C	SUN VISOR-LH
72D	SUN VISOR-LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77A	A/C & HEAT SYSTEM-COMPRESSOR
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
77K	GRD SIGNAL-COMPRESSOR CUT-OUT
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85W	24V IGN ABS
85X	24V IGN ABS
85Y	ABS-WARNING LT
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
90J	A/C & HEAT SYSTEM-COND FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	24V STARTER TO GENERATOR DELCO
102	WORLD TRANSM-SOL. GRD 1
102	WORLD TRANSM-SOL. C3
102A	24V STARTER TO GENERATOR BOSCH
104	WORLD TRANSM-SOL. FORWARD
104	LEVEL LOW SYSTEM
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	CHARG SYST-VOLTAGE REGUL. "F"
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125W	WORLD TRANSM-RET. INDICATOR
126	LEVEL LOW SYSTEM
126	WORLD TRANSM-LUBE PRESS SW.
127	WORLD TRANSM-LUBE PRESS SW.
127	PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
127B	PRE-HEAT WATER HEATER
127	WORLD TRANSM-RETARDER FEED SOL.
127S	PRE-HEAT WATER HEATER
127W	PRE-HEAT WATER HEATER
128	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT WATER HEATER
128W	PRE-HEAT WATER HEATER
128	WORLD TRANSM-SOL. C2
129	PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132A	LEVEL LOW SYSTEM
132B	LEVEL LOW SYSTEM
132C	LEVEL LOW SYSTEM
132D	LEVEL LOW SYSTEM
132E	LEVEL LOW SYSTEM
132F	LEVEL LOW SYSTEM
132G	LEVEL LOW SYSTEM
132H	LEVEL LOW SYSTEM
132J	LEVEL LOW SYSTEM
132K	LEVEL LOW SYSTEM
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	WORLD TRANSM-RET. ACTUATOR HI
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135A	A/C & HEAT SYSTEM-AIR SENSOR
135D	A/C & HEAT SYSTEM-AIR SENSOR
135C	A/C & HEAT SYSTEM-AIR SENSOR
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
143X	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	ETHER COLD START
147	WORLD TRANSM-OIL TEMP
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
151A	ABS SYSTEM
152	ABS SYSTEM
152A	ABS SYSTEM
153	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT

CIRCUIT NUMBER CODE

No.	DESCRIPTION
155	ABS SYSTEM
155	WORLD TRANSM-SPARE INPUT (-)
156	ABS SYSTEM
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157A	ABS SYSTEM
157B	ABS SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
165A	A/C & HEAT SYSTEM-TRANSMITER
165B	A/C & HEAT SYSTEM-TRANSMITER
165C	A/C & HEAT SYSTEM-TRANSMITER
165D	A/C & HEAT SYSTEM-TRANSMITER
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	A/C & HEAT SYSTEM-TEMP. CTR
167A	A/C & HEAT SYSTEM-TEMP. CTR
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170C	LUGGAGE DOOR LOCK
170D	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170F	LUGGAGE DOOR LOCK
170G	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
170K	LUGGAGE DOOR LOCK
170L	LUGGAGE DOOR LOCK
170M	LUGGAGE DOOR LOCK
170N	LUGGAGE DOOR LOCK
170P	LUGGAGE DOOR LOCK
170R	LUGGAGE DOOR LOCK
170S	LUGGAGE DOOR LOCK
170V	LUGGAGE DOOR LOCK
170W	LUGGAGE DOOR LOCK
170X	LUGGAGE DOOR LOCK
170Y	LUGGAGE DOOR LOCK
170Z	LUGGAGE DOOR LOCK
173	BACK-UP MONITOR
174	BACK-UP MONITOR
175	BACK-UP MONITOR

No.	DESCRIPTION
175A	BACK-UP MONITOR
175B	BACK-UP MONITOR
175C	BACK-UP MONITOR
180	DRIVER'S SEAT HEATER
180A	DRIVER'S SEAT HEATER
180B	CO-PILOT SEAT HEATER
180C	CO-PILOT SEAT HEATER
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
216B	24V SIGNAL AUX. LIQ. SOL. VALVE
216C	12 V. TRIGGER AUX. A/C UNIT
229	24 V. POWER AUX. A/C UNIT
229A	PWM SIGNAL - AUX . FAN UNIT
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251	DDEC III - PRODRIVER 12V H.W.
251A	DDEC III -DATA LOGGER 12V H.W.
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
264	S PEED SIGNAL- AUX. FAN UNIT
264A	SPEED SIGNAL- AUX. FAN UNIT
264B	SPEED SIGNAL- AUX. FAN UNIT
270	KEYLESS ENTRY SYSTEM
272	KEYLESS ENTRY SYSTEM
274	KEYLESS ENTRY SYSTEM

No.	DESCRIPTION
275	KEYLESS ENTRY SYSTEM
276	KEYLESS ENTRY SYSTEM
277	KEYLESS ENTRY SYSTEM
278	KEYLESS ENTRY SYSTEM
279	KEYLESS ENTRY SYSTEM
280	KEYLESS ENTRY SYSTEM
283	KEYLESS ENTRY SYSTEM
283A	KEYLESS ENTRY SYSTEM
284A	KEYLESS ENTRY SYSTEM
284B	KEYLESS ENTRY SYSTEM
285	KEYLESS ENTRY SYSTEM
285B	KEYLESS ENTRY SYSTEM
285C	KEYLESS ENTRY SYSTEM
286	KEYLESS ENTRY SYSTEM
286A	KEYLESS ENTRY SYSTEM
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
291	KEYLESS ENTRY SYSTEM
292	FAN CLUTCH RADIATOR SPD 2
293	KEYLESS ENTRY SYSTEM
294	ANTI-THEFT SYSTEM KEYLESS
295	LED FEED ALARM -KEYLESS
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE
540	DDEC III-CRUISE ENABLE LTS.
541	DDEC III-CRUISE SET SW
542	INPUT PARK BRAKE INTERLOCK
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
583	DDEC III-ENGINE BRAKE 4 CYL.
900	DDEC III-DATA LINK (+)

No.	DESCRIPTION
901	DDEC III-DATA LINK (-)
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
979	DDEC III-ENGINE BRAKE 2 CYL.

CIRCUIT NUMBER CODE

No.	DESCRIPTION
L 8	ENG. BLK HEATER
L 9	ENG. BLK HEATER
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 1 0	SPARE-RJB TO LUGG CPT #1
S P 1 1	SPARE-FJB TO RJB
S P 1 2	SPARE-RJB TO ENGINE
S P 1 3	SPARE-RJB TO ENGINE
S P 1 4	SPARE-FJB TO RJB
S P 1 5	SPARE-RJB TO ENGINE
S P 1 6	SPARE-RJB TO ENGINE
S P 1 7	SPARE-RJB TO ENGINE
S P 1 8	SPARE-FJB TO RJB
S P 2 4	SPARE-RJB TO LAVATORY ROOF
S P 2 5	SPARE-RJB TO LAVATORY ROOF
S P 2 6	SPARE-RJB TO LAVATORY ROOF
S P 2 7	SPARE-RJB TO LH HAT RACK
S P 2 8	SPARE-RJB TO LH HAT RACK
S P 3 1	SPARE-RJB TO RH HAT RACK
S P 3 2	SPARE-RJB TO RH HAT RACK
S P 3 3	SPARE-FJB TO RJB
S P 3 8	SPARE-FJB TO RJB
S P 4 3	SPARE-FJB TO RJB
S P 4 5	SPARE-FJB TO RJB
S P 4 6	SPARE-RJB TO LH FR ROOF
S P 4 8	SPARE-RJB TO DASH CENTER PANEL
S P 5 6	SPARE-ENGINE TO RH SW PANEL
S P 5 7	SPARE-DASH CENTER PANEL TO ENG.
S P 5 8	SPARE-DASH CENTER PANEL TO ENG.
S P 5 9	SPARE-FJB TO ENGINE
S P 6 1	SPARE-FJB TO DASH RH PANEL
S P 6 8	SPARE-FJB TO ENGINE
S P 6 9	SPARE-FJB TO FR AXLE
S P 7 0	SPARE-FJB TO FR AXLE
S P 7 1	SPARE-FJB TO RH SW PANEL
S P 7 2	SPARE-FJB TO FR SERV CPT
S P 7 4	SPARE-FJB TO LH CONSOLE
S P 7 7	SPARE-FJB TO EVAPORATOR CPT
S P 7 8	SPARE-FJB TO CONDENSER CPT
S P 7 9	SPARE-FJB TO CONDENSER CPT
S P 8 7	SPARE-RJB TO LH HAT RACK
S P 8 8	SPARE-RJB TO RH HAT RACK
S P 9 2	SPARE-RJB TO CONDENSER CPT
S P 9 3	SPARE-RJB TO EVAPORATOR CPT
S P 9 4	SPARE-RJB TO RR ROOF
S P 9 5	SPARE-RJB TO RR ROOF
S P 9 6	SPARE-RJB TO LUGG CPT #2
S P 9 7	SPARE-RJB TO LUGG CPT #3
S P 9 8	SPARE-RJB TO LUGG CPT #3
S P 1 0 4	SPARE-RJB TO ENGINE CPT
S P 1 0 5	SPARE-FJB TO ENGINE
S P 1 0 6	SPARE-RJB TO BATT. CPT.
S P 1 0 7	SPARE-RJB TO BATT. CPT.
S P 1 0 8	SPARE-RJB TO BATT. CPT.
S P 1 0 9	SPARE-RJB TO ENGINE CPT.
S P 1 1 0	SPARE-RJB TO ENGINE CPT.
S P 1 1 1	SPARE-RJB TO ENGINE CPT.
S P 1 1 2	SPARE-RJB TO ENGINE CPT.
S P 1 1 4	SPARE-FJB TO U/DASH WIPER
S P 1 1 5	SPARE-FJB TO U/DASH WIPER
S P 1 1 6	SPARE-FJB TO U/DASH FLOOR
S P 1 1 7	SPARE-FJB TO U/DASH FLOOR
W C	A/C & HEAT SYST-EVAP CTR SIGN
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A A	RS - VOLTAGE REGULATOR GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB. CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M 8	FS - AUX. A/C UNIT
0 M 9	FS - WATER PUMP DRIVER
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN- GND RLY
0 S A	ENGINE CPT STUD-ALTERN. BOSCH
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 T 5	FS - HVAC DASH MODULE. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS FR JCT BOX CPT GRD STUD
0 Z	RR JCT BOX CPT GRD STUD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 A	A/C & HEAT SYSTEM-COOL 1 SIGN
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 E	A/C & HEAT EVAP. CONTROL
2 F	A/C & HEAT EVAP. CONTROL
2 H	A/C & HEAT SYSTEM-HI PRESS SW
2 H L	A/C & HEAT SYSTEM-LO & HI PRESS SW
2 L	A/C & HEAT SYSTEM-LO PRESS SW
5 N C	SPEED SIGNAL LOWER 5MPH
5 N O	SPEED SIGNAL HIGHER 5MPH
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
1 0	INTERIOR LTS-LUGGAGE CPT
1 0 A	INTERIOR LTS-LUGGAGE CPT
1 0 B	INTERIOR LTS-LUGGAGE CPT
1 0 C	INTERIOR LTS-LUGGAGE CPT
1 0 D	INTERIOR LTS-LUGGAGE CPT
1 0 E	INTERIOR LTS-EVAP. CPT
1 0 F	INTERIOR LTS-LUGGAGE CPT
1 0 H	INTERIOR LTS-LUGGAGE CPT
1 0 R	INTERIOR LTS-LUGGAGE DOOR AJAR
1 2	12V BAT ELECTRONIC JCT BLOCK
1 2	BAT CPT 12V BATTERY
1 2 A	FR JCT BOX 12V DISC SW
1 2 A	RR JCT BOX 12V DISC SW
1 2 B	12V BAT ELECTRICAL JCT BLOCK
1 2 B	RR JCT BOX 12V DISC SW
1 2 B	FR JCT BOX 12V DISC SW
1 2 B E	BAT. EQUALIZER MONITOR
1 2 C	FR JCT BOX 12V DISC SW
1 2 C	RR JCT BOX 12V DISC SW
1 2 D	BAT CPT 12V BATTERY
1 2 D T	TTLT MODULE
1 2 E	FR JCT BOX 12V DISC SW
1 2 E	RR JCT BOX 12V DISC SW
1 2 F	BAT CPT 12V FJB & IC
1 2 F	FR JCT BOX 12V DISC SW
1 2 F	RR JCT BOX 12V DISC SW
1 2 G	FR JCT BOX 12V DISC SW
1 2 J	FR JCT BOX 12V DISC SW
1 2 K	HVAC MODULE
1 2 I	12V IGNITION DISTRIBUTION
1 2 I	RR JCT BOX 12V IGNITION
1 2 I A	12V IGNITION DISTRIBUTION
1 2 I A	FR JCT BOX 12V IGNITION
1 2 I B	FR JCT BOX 12V IGNITION
1 2 L X	CLUSTER FEED
1 2 I F	FR JCT BOX 12V IGNITION
1 2 P	LH CONSOLE POWER OUTLET
1 2 R	BAT CPT 12V DISC RLY TO RJB
1 2 V A	BATTERY TO EQUALIZER 12V
1 2 V D	12V HOT WIRE DISTRIBUTION

CIRCUIT NUMBER CODE

No.	DESCRIPTION
12VF	BAT CPT 12V FJB & IC
12VI	12V IGNITION DISTRIBUTION
12VR	BAT CPT 12V DISC RLY TO RJB
12W	12V BATTERY DDEC III
12X	FR JCT BOX 12V DISC SW
12X2	FR JCT BOX 12V DISC SW
12Y	FR JCT BOX 12V DISC SW
13A	ALARM & SIGNAL-LO AIR PRIM.
13B	ALARM & SIGNAL-LO AIR SEC.
15	EXTERIOR LTS-MULTI FUNC LEVEL
15A	WIPER & WASHER UPPER WINDSHIELD
16	SPEED - SIGNAL +
16A	SPEED - SIGNAL +
16T	SPEED - SIGNAL +
17	EXTERIOR LTS-FLASHER UNIT
17A	EXTERIOR LTS-FLASHER UNIT
19	DIFFERENTIAL OIL TEMP
20	SPEED - SIGNAL -
20T	SPEED - SIGNAL -
20W	SPEED - SIGNAL -
21	EXTERIOR LTS-DIRECTIONNAL LH
21A	EXTERIOR LTS-DIRECTIONNAL LH
21B	EXTERIOR LTS-HAZARD
21C	EXTERIOR LTS-CORNERING LH
21H	EXTERIOR LTS-DIRECTIONNAL LH
21K	EXTERIOR LTS-CORNERING
21N	EXTERIOR LTS-CORNERING LH
21P	EXTERIOR LTS-CORNERING LH
23	EXTERIOR LTS-DIRECTIONNAL RH
23	EXTERIOR LTS-DIRECTIONNAL RH
23A	EXTERIOR LTS-DIRECTIONNAL RH
23B	EXTERIOR LTS-DIRECTIONNAL RH
23C	EXTERIOR LTS-CORNERING RH
23N	EXTERIOR LTS-CORNERING RH
23P	EXTERIOR LTS-CORNERING RH
24	BAT CPT 24V BATTERY
24	FR JCT BOX 24V DISC SW
24A	BOOSTER BLOCK 24V DISC SW
24A	FR JCT BOX 24V DISC SW
24A	RR JCT BOX 24V DISC SW
24B	24V STARTER RLY FEEDING
24B	FR JCT BOX 24V DISC SW
24B	RR JCT BOX 24V DISC SW
24BE	RJB CPT-BAT EQ MONITOR HOT WIRE
24C	FR JCT BOX 24V DISC SW
24C	RR JCT BOX 24V DISC SW
24D	BAT CPT 24V HOT WIRE
24D	FR JCT BOX 24V HOT WIRE
24D	RR JCT BOX 24V HOT WIRE
24DA	A/C JCT BOX 24V HOT WIRE
24E	BAT CPT 24V DISC SW
24E	FR JCT BOX 24V DISC SW
24E	RR JCT BOX 24V DISC SW
24F	FR JCT BOX 24V DISC SW
24F	RR JCT BOX 24V DISC SW
24G	FR JCT BOX 24V DISC SW
24G	RR JCT BOX 24V DISC SW
24H	FR JCT BOX 24V DISC SW
24H	RR JCT BOX 24V DISC SW
24I	FR JCT BOX 24V IGNITION
24I	RR JCT BOX 24V IGNITION
24IA	FR JCT BOX 24V IGNITION
24IA	RR JCT BOX 24V IGNITION
24IB	FR JCT BOX 24V IGNITION
24IB	RR JCT BOX 24V IGNITION
24IF	FJB 24V IGNITION
24IC	FR JCT BOX 24V IGNITION
24P	FR JCT BOX 24V DISC SW
24S	24V DISC SW RLY SIGNAL
24T	RR JCT BOX 24V DISC SW
24V2	RR JCT BOX 24V DISC SW
24V3	RR JCT BOX 24V DISC SW
24V4	RR JCT BOX 24V DISC SW
24V5	RR JCT BOX 24V DISC SW
24VD	24V HOT WIRE DISTRIBUTION
24VF	BAT CPT 24V SW TO FJB & IC
24VA	BATTERY TO EQUALIZER 24V
24VI	RR JCT BOX 24V IGNITION
24VR	BAT CPT 24V DISC SW TO RJB
25	12VAC GEN RLY ON SIGNAL
25	12VAC GEN RLY ON SIGNAL
25A	ETHER SWITCH
25A	NOT ALTERNATOR #1-WARNING LT
25A1	24 VOLTS EXCITING SIGNAL - ALT. #1
25A2	24 VOLTS EXCITING SIGNAL - ALT. #2
25A3	24 V. SIGNAL ALT#1 OR ALT. #2 RUN
25F	12V IGNITION DISTRIBUTION
25B	EXTERIOR LTS-DAYTIME RUN LTS
25B	12 V. IGN. ALTERNATOR BOSCH
25C	12 V. SIGNAL ALT.#1 AND ALT.#2 RUN
25D	12 V. SIGNAL ALT.#1 AND ALT.#2 RUN
25H	24 V. IGN. ALTERNATOR BOSCH
25K	NOT ALTERNATOR #2-WARNING LT
26	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26B	DRIVER'S WINDOW LIFTER
26C	DRIVER'S WINDOW LIFTER
27	PARKING BRAKE SONALERT
27A	PARKING BRAKE SONALERT
28A	A/C & HEAT SYSTEM-HI PRESSURE
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29A	A/C & HEAT SYSTEM-DRIVER'S HTR
29H	HVAC DASH MODULE
29B	A/C & HEAT SYSTEM-DRIVER'S HTR
31A	A/C & HEAT SYSTEM-UNLOADER
31B	A/C & HEAT SYSTEM-UNLOADER
31B	WIPER & WASHER SYSTEM
31C	WIPER & WASHER SYSTEM
31D	WIPER & WASHER SYSTEM
31E	WIPER & WASHER SYSTEM
31J	WIPER & WASHER SYSTEM
31X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32B	EXTERIOR LTS-BACK-UP
32C	BACK-UP PWR & SIGNAL
32D	BACK-UP ALARM
35	ENTRANCE DOOR
35B	ENTRANCE DOOR
36	JACOB BRAKE SYSREM
36A	JACOB BRAKE SYSREM
39	INTERIOR LTS-12V RH PANEL SW.
39A	INTERIOR LTS-DRIVER"S LTS
39B	DRIVER'S LTS KEYLESS
39K	DRIVER'S LTS KEYLESS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
43	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45A	WATER PUMP SIGNAL
45B	A/C & HEAT SYSTEM-HEAT SIGN
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
50	AIR DRYER
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL-AIR HORN
52C	ALARM & SIGNAL-AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
53K	KEYLESS
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
57CA	A/C & HEAT SYSTEM-HEAT SIGN
57CC	A/C & HEAT SYSTEM-HEAT SIGN
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58C	DAYTIME RUNNING LIGHT
58D	DAYTIME RUNNING LIGHT
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVER'S FAN
64B	DRIVER'S FAN
64C	DRIVER'S FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65D	DRIVER'S REC. DAMPER
65P	PASSENGER REC. DAMPER
66	O_PASS. ON/OFF
67	A/C & HEAT SYSTEM
67A	A/C & HEAT SYSTEM
67B	A/C & HEAT SYSTEM
67C	HEAT WINDS.
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67V	A/C & HEAT SYSTEM-WATER VALVE
68	DASH & DEFROST DAMPER MOTOR

CIRCUIT NUMBER CODE

No.	DESCRIPTION
68A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH
72C	SUN VISOR-LH
72D	SUN VISOR-LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77A	A/C & HEAT SYSTEM-COMPRESSOR
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
77K	GRD SIGNAL-COMPRESSOR CUT-OUT
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85W	24V IGN ABS
85X	24V IGN ABS
85Y	ABS-WARNING LT
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
90J	A/C & HEAT SYSTEM-COND FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	24V STARTER TO GENERATOR DELCO
102	WORLD TRANSM-SOL. GRD 1
102	WORLD TRANSM-SOL. C3
102A	24V STARTER TO GENERATOR BOSCH
104	WORLD TRANSM-SOL. FORWARD
104	LEVEL LOW SYSTEM
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	CHARG SYST-VOLTAGE REGUL. "F"
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125W	WORLD TRANSM-RET. INDICATOR
126	LEVEL LOW SYSTEM
126	WORLD TRANSM-LUBE PRESS SW.
127	WORLD TRANSM-LUBE PRESS SW.
127	PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
127B	PRE-HEAT WATER HEATER
127	WORLD TRANSM-RETARDER FEED SOL.
127S	PRE-HEAT WATER HEATER
127W	PRE-HEAT WATER HEATER
128	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT WATER HEATER
128W	PRE-HEAT WATER HEATER
128	WORLD TRANSM-SOL. C2
129	PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132A	LEVEL LOW SYSTEM
132B	LEVEL LOW SYSTEM
132C	LEVEL LOW SYSTEM
132D	LEVEL LOW SYSTEM
132E	LEVEL LOW SYSTEM
132F	LEVEL LOW SYSTEM
132G	LEVEL LOW SYSTEM
132H	LEVEL LOW SYSTEM
132J	LEVEL LOW SYSTEM
132K	LEVEL LOW SYSTEM
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	WORLD TRANSM-RET. ACTUATOR HI
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135A	A/C & HEAT SYSTEM-AIR SENSOR
135D	A/C & HEAT SYSTEM-AIR SENSOR
135C	A/C & HEAT SYSTEM-AIR SENSOR
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
143X	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	ETHER COLD START
147	WORLD TRANSM-OIL TEMP
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
151A	ABS SYSTEM
152	ABS SYSTEM
152A	ABS SYSTEM
153	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM

CIRCUIT NUMBER CODE

No.	DESCRIPTION
154	WORLD TRANSM-ABS RET. INPUT
155	ABS SYSTEM
155	WORLD TRANSM-SPARE INPUT (-)
156	ABS SYSTEM
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157A	ABS SYSTEM
157B	ABS SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
165A	A/C & HEAT SYSTEM-TRANSMITER
165B	A/C & HEAT SYSTEM-TRANSMITER
165C	A/C & HEAT SYSTEM-TRANSMITER
165D	A/C & HEAT SYSTEM-TRANSMITER
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	A/C & HEAT SYSTEM-TEMP. CTR
167A	A/C & HEAT SYSTEM-TEMP. CTR
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170C	LUGGAGE DOOR LOCK
170D	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170F	LUGGAGE DOOR LOCK
170G	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
170K	LUGGAGE DOOR LOCK
170L	LUGGAGE DOOR LOCK
170M	LUGGAGE DOOR LOCK
170N	LUGGAGE DOOR LOCK
170P	LUGGAGE DOOR LOCK
170R	LUGGAGE DOOR LOCK
170S	LUGGAGE DOOR LOCK
170V	LUGGAGE DOOR LOCK
170W	LUGGAGE DOOR LOCK
170X	LUGGAGE DOOR LOCK
170Y	LUGGAGE DOOR LOCK
170Z	LUGGAGE DOOR LOCK
173	BACK-UP MONITOR
174	BACK-UP MONITOR

No.	DESCRIPTION
175	BACK-UP MONITOR
175A	BACK-UP MONITOR
175B	BACK-UP MONITOR
175C	BACK-UP MONITOR
180	DRIVER'S SEAT HEATER
180A	DRIVER'S SEAT HEATER
180B	CO-PILOT SEAT HEATER
180C	CO-PILOT SEAT HEATER
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
216B	24V SIGNAL AUX. LIQ. SOL. VALVE
216C	12 V. TRIGGER AUX. A/C UNIT
229	24 V. POWER AUX. A/C UNIT
229A	PWM SIGNAL - AUX . FAN UNIT
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251	DDEC III - PRODRIVER 12V H.W.
251A	DDEC III -DATA LOGGER 12V H.W.
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
264	S PEED SIGNAL- AUX. FAN UNIT
264A	SPEED SIGNAL- AUX. FAN UNIT
264B	SPEED SIGNAL- AUX. FAN UNIT
270	KEYLESS ENTRY SYSTEM
272	KEYLESS ENTRY SYSTEM

No.	DESCRIPTION
274	KEYLESS ENTRY SYSTEM
275	KEYLESS ENTRY SYSTEM
276	KEYLESS ENTRY SYSTEM
277	KEYLESS ENTRY SYSTEM
278	KEYLESS ENTRY SYSTEM
279	KEYLESS ENTRY SYSTEM
280	KEYLESS ENTRY SYSTEM
283	KEYLESS ENTRY SYSTEM
283A	KEYLESS ENTRY SYSTEM
284A	KEYLESS ENTRY SYSTEM
284B	KEYLESS ENTRY SYSTEM
285	KEYLESS ENTRY SYSTEM
285B	KEYLESS ENTRY SYSTEM
285C	KEYLESS ENTRY SYSTEM
286	KEYLESS ENTRY SYSTEM
286A	KEYLESS ENTRY SYSTEM
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
291	KEYLESS ENTRY SYSTEM
292	FAN CLUTCH RADIATOR SPD 2
293	KEYLESS ENTRY SYSTEM
294	ANTI-THEFT SYSTEM KEYLESS
295	LED FEED ALARM -KEYLESS
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE
540	DDEC III-CRUISE ENABLE LTS.
541	DDEC III-CRUISE SET SW
542	INPUT PARK BRAKE INTERLOCK
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
583	DDEC III-ENGINE BRAKE 4 CYL.

No.	DESCRIPTION
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
979	DDEC III-ENGINE BRAKE 2 CYL.

CIRCUIT NUMBER CODE

No.	DESCRIPTION
L 8	ENG. BLK HEATER
L 9	ENG. BLK HEATER
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 10	SPARE-RJB TO LUGG CPT #1
S P 11	SPARE-FJB TO RJB
S P 12	SPARE-RJB TO ENGINE
S P 13	SPARE-RJB TO ENGINE
S P 14	SPARE-FJB TO RJB
S P 15	SPARE-RJB TO ENGINE
S P 16	SPARE-RJB TO ENGINE
S P 17	SPARE-RJB TO ENGINE
S P 18	SPARE-FJB TO RJB
S P 24	SPARE-RJB TO LAVATORY ROOF
S P 25	SPARE-RJB TO LAVATORY ROOF
S P 26	SPARE-RJB TO LAVATORY ROOF
S P 27	SPARE-RJB TO LH HAT RACK
S P 28	SPARE-RJB TO LH HAT RACK
S P 31	SPARE-RJB TO RH HAT RACK
S P 32	SPARE-RJB TO RH HAT RACK
S P 33	SPARE-FJB TO RJB
S P 38	SPARE-FJB TO RJB
S P 43	SPARE-FJB TO RJB
S P 45	SPARE-FJB TO RJB
S P 46	SPARE-RJB TO LH FR ROOF
S P 48	SPARE-RJB TO DASH CENTER PANEL
S P 56	SPARE-ENGINE TO RH SW PANEL
S P 57	SPARE-DASH CENTER PANEL TO ENG.
S P 58	SPARE-DASH CENTER PANEL TO ENG.
S P 59	SPARE-FJB TO ENGINE
S P 61	SPARE-FJB TO DASH RH PANEL
S P 68	SPARE-FJB TO ENGINE
S P 69	SPARE-FJB TO FR AXLE
S P 70	SPARE-FJB TO FR AXLE
S P 71	SPARE-FJB TO RH SW PANEL
S P 72	SPARE-FJB TO FR SERV CPT
S P 74	SPARE-FJB TO LH CONSOLE
S P 77	SPARE-FJB TO EVAPORATOR CPT
S P 78	SPARE-FJB TO CONDENSER CPT
S P 79	SPARE-FJB TO CONDENSER CPT
S P 87	SPARE-RJB TO LH HAT RACK
S P 88	SPARE-RJB TO RH HAT RACK
S P 92	SPARE-RJB TO CONDENSER CPT
S P 93	SPARE-RJB TO EVAPORATOR CPT
S P 94	SPARE-RJB TO RR ROOF
S P 95	SPARE-RJB TO RR ROOF
S P 96	SPARE-RJB TO LUGG CPT #2
S P 97	SPARE-RJB TO LUGG CPT #3
S P 98	SPARE-RJB TO LUGG CPT #3
S P 104	SPARE-RJB TO ENGINE CPT
S P 105	SPARE-FJB TO ENGINE
S P 106	SPARE-RJB TO BATT. CPT.
S P 107	SPARE-RJB TO BATT. CPT.
S P 108	SPARE-RJB TO BATT. CPT.
S P 109	SPARE-RJB TO ENGINE CPT.
S P 110	SPARE-RJB TO ENGINE CPT.
S P 111	SPARE-RJB TO ENGINE CPT.
S P 112	SPARE-RJB TO ENGINE CPT.
S P 114	SPARE-FJB TO U/DASH WIPER
S P 115	SPARE-FJB TO U/DASH WIPER
S P 116	SPARE-FJB TO U/DASH FLOOR
S P 117	SPARE-FJB TO U/DASH FLOOR
W C	A/C & HEAT SYST-EVAP CTR SIGN
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A	A/C HEAT SYSTEM – EVAP. GRD
0 A A	RS - VOLTAGE REGULATOR GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN EVAP & CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB. CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M 8	FS - AUX. A/C UNIT
0 M 9	FS - WATER PUMP DRIVER
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN- GND RLY
0 S A	ENGINE CPT STUD-ALTERN. BOSCH
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 T 5	FS - HVAC DASH MODULE. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS FR JCT BOX CPT GRD STUD
0 Z	RR JCT BOX CPT GRD STUD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 A	A/C & HEAT SYSTEM-COOL 1 SIGN
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 E	A/C & HEAT EVAP. CONTROL
2 F	A/C & HEAT EVAP. CONTROL
2 H	A/C & HEAT SYSTEM-HI PRESS SW
2 H L	A/C & HEAT SYSTEM-LO & HI PRESS SW
2 L	A/C & HEAT SYSTEM-LO PRESS SW
5 N C	SPEED SIGNAL LOWER 5MPH
5 N O	SPEED SIGNAL HIGHER 5MPH
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
1 0	INTERIOR LTS-LUGGAGE CPT
1 0 A	INTERIOR LTS-LUGGAGE CPT
1 0 B	INTERIOR LTS-LUGGAGE CPT
1 0 C	INTERIOR LTS-LUGGAGE CPT
1 0 D	INTERIOR LTS-LUGGAGE CPT
1 0 E	INTERIOR LTS-EVAP. CPT
1 0 F	INTERIOR LTS-LUGGAGE CPT
1 0 H	INTERIOR LTS-LUGGAGE CPT
1 0 R	INTERIOR LTS-LUGGAGE DOOR AJAR
1 2	12V BAT ELECTRONIC JCT BLOCK
1 2	BAT CPT 12V BATTERY
1 2 A	FR JCT BOX 12V DISC SW
1 2 A	RR JCT BOX 12V DISC SW
1 2 B	12V BAT ELECTRICAL JCT BLOCK
1 2 B	RR JCT BOX 12V DISC SW
1 2 B	FR JCT BOX 12V DISC SW
1 2 B E	BAT. EQUALIZER MONITOR
1 2 C	FR JCT BOX 12V DISC SW
1 2 C	RR JCT BOX 12V DISC SW
1 2 D	BAT CPT 12V BATTERY
1 2 D T	TTLT MODULE
1 2 E	FR JCT BOX 12V DISC SW
1 2 E	RR JCT BOX 12V DISC SW
1 2 F	BAT CPT 12V FJB & IC
1 2 F	FR JCT BOX 12V DISC SW
1 2 F	RR JCT BOX 12V DISC SW
1 2 G	FR JCT BOX 12V DISC SW
1 2 J	FR JCT BOX 12V DISC SW
1 2 K	HVAC MODULE
1 2 I	12V IGNITION DISTRIBUTION
1 2 I	RR JCT BOX 12V IGNITION
1 2 I A	12V IGNITION DISTRIBUTION
1 2 I A	FR JCT BOX 12V IGNITION
1 2 I B	FR JCT BOX 12V IGNITION
1 2 L X	CLUSTER FEED
1 2 I F	FR JCT BOX 12V IGNITION
1 2 P	LH CONSOLE POWER OUTLET
1 2 R	BAT CPT 12V DISC RLY TO RJB
1 2 V A	BATTERY TO EQUALIZER 12V

CIRCUIT NUMBER CODE

No.	DESCRIPTION
12VD	12V HOT WIRE DISTRIBUTION
12VF	BAT CPT 12V FJB & IC
12VI	12V IGNITION DISTRIBUTION
12VR	BAT CPT 12V DISC RLY TO RJB
12W	12V BATTERY DDEC III
12X	FR JCT BOX 12V DISC SW
12X2	FR JCT BOX 12V DISC SW
12Y	FR JCT BOX 12V DISC SW
13A	ALARM & SIGNAL-LO AIR PRIM.
13B	ALARM & SIGNAL-LO AIR SEC.
15	EXTERIOR LTS-MULTI FUNC LEVEL
15A	WIPER & WASHER UPPER WINDSHIELD
16	SPEED - SIGNAL +
16A	SPEED - SIGNAL +
16T	SPEED - SIGNAL +
17	EXTERIOR LTS-FLASHER UNIT
17A	EXTERIOR LTS-FLASHER UNIT
19	DIFFERENTIAL OIL TEMP
20	SPEED - SIGNAL -
20T	SPEED - SIGNAL -
20W	SPEED - SIGNAL -
21	EXTERIOR LTS-DIRECTIONNAL LH
21A	EXTERIOR LTS-DIRECTIONNAL LH
21B	EXTERIOR LTS-HAZARD
21C	EXTERIOR LTS-CORNERING LH
21H	EXTERIOR LTS-DIRECTIONNAL LH
21K	EXTERIOR LTS-CORNERING
21N	EXTERIOR LTS-CORNERING LH
21P	EXTERIOR LTS-CORNERING LH
23	EXTERIOR LTS-DIRECTIONNAL RH
23	EXTERIOR LTS-DIRECTIONNAL RH
23A	EXTERIOR LTS-DIRECTIONNAL RH
23B	EXTERIOR LTS-DIRECTIONNAL RH
23C	EXTERIOR LTS-CORNERING RH
23N	EXTERIOR LTS-CORNERING RH
23P	EXTERIOR LTS-CORNERING RH
24	BAT CPT 24V BATTERY
24	FR JCT BOX 24V DISC SW
24A	BOOSTER BLOCK 24V DISC SW
24A	FR JCT BOX 24V DISC SW
24A	RR JCT BOX 24V DISC SW
24B	24V STARTER RLY FEEDING
24B	FR JCT BOX 24V DISC SW
24B	RR JCT BOX 24V DISC SW
24BE	RJB CPT-BAT EQ MONITOR HOT WIRE
24C	FR JCT BOX 24V DISC SW
24C	RR JCT BOX 24V DISC SW
24D	BAT CPT 24V HOT WIRE
24D	FR JCT BOX 24V HOT WIRE
24D	RR JCT BOX 24V HOT WIRE
24DA	A/C JCT BOX 24V HOT WIRE
24E	BAT CPT 24V DISC SW
24E	FR JCT BOX 24V DISC SW
24E	RR JCT BOX 24V DISC SW
24F	FR JCT BOX 24V DISC SW
24F	RR JCT BOX 24V DISC SW
24G	FR JCT BOX 24V DISC SW
24G	RR JCT BOX 24V DISC SW
24H	FR JCT BOX 24V DISC SW
24H	RR JCT BOX 24V DISC SW
24I	FR JCT BOX 24V IGNITION
24I	RR JCT BOX 24V IGNITION
24IA	FR JCT BOX 24V IGNITION
24IA	RR JCT BOX 24V IGNITION
24IB	FR JCT BOX 24V IGNITION
24IB	RR JCT BOX 24V IGNITION
24IF	FJB 24V IGNITION
24IC	FR JCT BOX 24V IGNITION
24P	FR JCT BOX 24V DISC SW
24S	24V DISC SW RLY SIGNAL
24T	RR JCT BOX 24V DISC SW
24V2	RR JCT BOX 24V DISC SW
24V3	RR JCT BOX 24V DISC SW
24V4	RR JCT BOX 24V DISC SW
24V5	RR JCT BOX 24V DISC SW
24VD	24V HOT WIRE DISTRIBUTION
24VF	BAT CPT 24V SW TO FJB & IC
24VA	BATTERY TO EQUALIZER 24V
24VI	RR JCT BOX 24V IGNITION
24VR	BAT CPT 24V DISC SW TO RJB
25	12VAC GEN RLY ON SIGNAL
25	12VAC GEN RLY ON SIGNAL
25A	ETHER SWITCH
25A	NOT ALTERNATOR #1-WARNING LT
25A1	24 VOLTS EXCITING SIGNAL - ALT. #1
25A2	24 VOLTS EXCITING SIGNAL - ALT. #2
25A3	24 V. SIGNAL ALT#1 OR ALT. #2 RUN
25F	12V IGNITION DISTRIBUTION
25B	EXTERIOR LTS-DAYTIME RUN LTS
25B	12 V. IGN. ALTERNATOR BOSCH
25C	12 V. SIGNAL ALT.#1 AND ALT.#2 RUN
25D	12 V. SIGNAL ALT.#1 AND ALT.#2 RUN
25H	24 V. IGN. ALTERNATOR BOSCH
25K	NOT ALTERNATOR #2-WARNING LT
26	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26B	DRIVER'S WINDOW LIFTER
26C	DRIVER'S WINDOW LIFTER
27	PARKING BRAKE SONALERT
27A	PARKING BRAKE SONALERT
28A	A/C & HEAT SYSTEM-HI PRESSURE
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29A	A/C & HEAT SYSTEM-DRIVER'S HTR
29H	HVAC DASH MODULE
29B	A/C & HEAT SYSTEM-DRIVER'S HTR
31A	A/C & HEAT SYSTEM-UNLOADER
31B	A/C & HEAT SYSTEM-UNLOADER
31B	WIPER & WASHER SYSTEM
31C	WIPER & WASHER SYSTEM
31D	WIPER & WASHER SYSTEM
31E	WIPER & WASHER SYSTEM
31J	WIPER & WASHER SYSTEM
31X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32B	EXTERIOR LTS-BACK-UP
32C	BACK-UP PWR & SIGNAL
32D	BACK-UP ALARM
35	ENTRANCE DOOR
35B	ENTRANCE DOOR
36	JACOB BRAKE SYSREM
36A	JACOB BRAKE SYSREM
39	INTERIOR LTS-12V RH PANEL SW.
39A	INTERIOR LTS-DRIVER"S LTS
39B	DRIVER'S LTS KEYLESS
39K	DRIVER'S LTS KEYLESS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
43	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45A	WATER PUMP SIGNAL
45B	A/C & HEAT SYSTEM-HEAT SIGN
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
50	AIR DRYER
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL-AIR HORN
52C	ALARM & SIGNAL-AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
53K	KEYLESS
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
57CA	A/C & HEAT SYSTEM-HEAT SIGN
57CC	A/C & HEAT SYSTEM-HEAT SIGN
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58C	DAYTIME RUNNING LIGHT
58D	DAYTIME RUNNING LIGHT
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVER'S FAN
64B	DRIVER'S FAN
64C	DRIVER'S FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65D	DRIVER'S REC. DAMPER
65P	PASSENGER REC. DAMPER
66	O_PASS. ON/OFF
67	A/C & HEAT SYSTEM
67A	A/C & HEAT SYSTEM
67B	A/C & HEAT SYSTEM
67C	HEAT WINDS.
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67V	A/C & HEAT SYSTEM-WATER VALVE

CIRCUIT NUMBER CODE

No.	DESCRIPTION
67X	A/C & HEAT SYSTEM
68	DASH & DEFROST DAMPER MOTOR
68A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH
72C	SUN VISOR-LH
72D	SUN VISOR-LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77A	A/C & HEAT SYSTEM-COMPRESSOR
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
77K	GRD SIGNAL-COMPRESSOR CUT-OUT
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85W	24V IGN ABS
85X	24V IGN ABS
85Y	ABS-WARNING LT
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	24V STARTER TO GENERATOR DELCO
102	WORLD TRANSM-SOL. GRD 1
102	WORLD TRANSM-SOL. C3
102A	24V STARTER TO GENERATOR BOSCH
104	WORLD TRANSM-SOL. FORWARD
104	LEVEL LOW SYSTEM
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	CHARG SYST-VOLTAGE REGUL. "F"
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125W	WORLD TRANSM-RET. INDICATOR
126	LEVEL LOW SYSTEM
126	WORLD TRANSM-LUBE PRESS SW.
127	WORLD TRANSM-LUBE PRESS SW.
127	PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
127B	PRE-HEAT WATER HEATER
127	WORLD TRANSM-RETARDER FEED SOL.
127S	PRE-HEAT WATER HEATER
127W	PRE-HEAT WATER HEATER
128	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT WATER HEATER
128W	PRE-HEAT WATER HEATER
128	WORLD TRANSM-SOL. C2
129	PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	A/C HEAT SYSTEM-EVAP FAN MOT
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132A	LEVEL LOW SYSTEM
132B	LEVEL LOW SYSTEM
132C	LEVEL LOW SYSTEM
132D	LEVEL LOW SYSTEM
132E	LEVEL LOW SYSTEM
132F	LEVEL LOW SYSTEM
132G	LEVEL LOW SYSTEM
132H	LEVEL LOW SYSTEM
132J	LEVEL LOW SYSTEM
132K	LEVEL LOW SYSTEM
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	WORLD TRANSM-RET. ACTUATOR HI
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135A	A/C & HEAT SYSTEM-AIR SENSOR
135D	A/C & HEAT SYSTEM-AIR SENSOR
135C	A/C & HEAT SYSTEM-AIR SENSOR
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
143X	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	ETHER COLD START
147	WORLD TRANSM-OIL TEMP
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
151A	ABS SYSTEM
152	ABS SYSTEM
152A	ABS SYSTEM
153	ABS SYSTEM

CIRCUIT NUMBER CODE

No.	DESCRIPTION
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	ABS SYSTEM
155	WORLD TRANSM-SPARE INPUT (-)
156	ABS SYSTEM
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157A	ABS SYSTEM
157B	ABS SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
165A	A/C & HEAT SYSTEM-TRANSMITER
165B	A/C & HEAT SYSTEM-TRANSMITER
165C	A/C & HEAT SYSTEM-TRANSMITER
165D	A/C & HEAT SYSTEM-TRANSMITER
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	A/C & HEAT SYSTEM-TEMP. CTR
167A	A/C & HEAT SYSTEM-TEMP. CTR
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170C	LUGGAGE DOOR LOCK
170D	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170F	LUGGAGE DOOR LOCK
170G	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
170K	LUGGAGE DOOR LOCK
170L	LUGGAGE DOOR LOCK
170M	LUGGAGE DOOR LOCK
170N	LUGGAGE DOOR LOCK
170P	LUGGAGE DOOR LOCK
170R	LUGGAGE DOOR LOCK
170S	LUGGAGE DOOR LOCK
170V	LUGGAGE DOOR LOCK
170W	LUGGAGE DOOR LOCK
170X	LUGGAGE DOOR LOCK
170Y	LUGGAGE DOOR LOCK
170Z	LUGGAGE DOOR LOCK

No.	DESCRIPTION
173	BACK-UP MONITOR
174	BACK-UP MONITOR
175	BACK-UP MONITOR
175A	BACK-UP MONITOR
175B	BACK-UP MONITOR
175C	BACK-UP MONITOR
180	DRIVER'S SEAT HEATER
180A	DRIVER'S SEAT HEATER
180B	CO-PILOT SEAT HEATER
180C	CO-PILOT SEAT HEATER
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
216B	24V SIGNAL AUX. LIQ. SOL. VALVE
216C	12 V. TRIGGER AUX. A/C UNIT
229	24 V. POWER AUX. A/C UNIT
229A	PWM SIGNAL - AUX . FAN UNIT
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251	DDEC III - PRODRIVER 12V H.W.
251A	DDEC III -DATA LOGGER 12V H.W.
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
264	S PEED SIGNAL- AUX. FAN UNIT
264A	SPEED SIGNAL- AUX. FAN UNIT
264B	SPEED SIGNAL- AUX. FAN UNIT

No.	DESCRIPTION
270	KEYLESS ENTRY SYSTEM
272	KEYLESS ENTRY SYSTEM
274	KEYLESS ENTRY SYSTEM
275	KEYLESS ENTRY SYSTEM
276	KEYLESS ENTRY SYSTEM
277	KEYLESS ENTRY SYSTEM
278	KEYLESS ENTRY SYSTEM
279	KEYLESS ENTRY SYSTEM
280	KEYLESS ENTRY SYSTEM
283	KEYLESS ENTRY SYSTEM
283A	KEYLESS ENTRY SYSTEM
284A	KEYLESS ENTRY SYSTEM
284B	KEYLESS ENTRY SYSTEM
285	KEYLESS ENTRY SYSTEM
285B	KEYLESS ENTRY SYSTEM
285C	KEYLESS ENTRY SYSTEM
286	KEYLESS ENTRY SYSTEM
286A	KEYLESS ENTRY SYSTEM
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
291	KEYLESS ENTRY SYSTEM
292	FAN CLUTCH RADIATOR SPD 2
293	KEYLESS ENTRY SYSTEM
294	ANTI-THEFT SYSTEM KEYLESS
295	LED FEED ALARM -KEYLESS
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE
540	DDEC III-CRUISE ENABLE LTS.
541	DDEC III-CRUISE SET SW
542	INPUT PARK BRAKE INTERLOCK
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT

No.	DESCRIPTION
565	DDEC III-ENGINE BRAKE ACTIVE
583	DDEC III-ENGINE BRAKE 4 CYL.
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
979	DDEC III-ENGINE BRAKE 2 CYL.

CIRCUIT NUMBER CODE

No.	DESCRIPTION
L 8	ENG. BLK HEATER
L 9	ENG. BLK HEATER
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 10	SPARE-RJB TO LUGG CPT #1
S P 11	SPARE-FJB TO RJB
S P 12	SPARE-RJB TO ENGINE
S P 13	SPARE-RJB TO ENGINE
S P 14	SPARE-FJB TO RJB
S P 15	SPARE-RJB TO ENGINE
S P 16	SPARE-RJB TO ENGINE
S P 17	SPARE-RJB TO ENGINE
S P 18	SPARE-FJB TO RJB
S P 24	SPARE-RJB TO LAVATORY ROOF
S P 25	SPARE-RJB TO LAVATORY ROOF
S P 26	SPARE-RJB TO LAVATORY ROOF
S P 27	SPARE-RJB TO LH HAT RACK
S P 28	SPARE-RJB TO LH HAT RACK
S P 31	SPARE-RJB TO RH HAT RACK
S P 32	SPARE-RJB TO RH HAT RACK
S P 33	SPARE-FJB TO RJB
S P 38	SPARE-FJB TO RJB
S P 43	SPARE-FJB TO RJB
S P 45	SPARE-FJB TO RJB
S P 46	SPARE-RJB TO LH FR ROOF
S P 48	SPARE-RJB TO DASH CENTER PANEL
S P 56	SPARE-ENGINE TO RH SW PANEL
S P 57	SPARE-DASH CENTER PANEL TO ENG.
S P 58	SPARE-DASH CENTER PANEL TO ENG.
S P 59	SPARE-FJB TO ENGINE
S P 61	SPARE-FJB TO DASH RH PANEL
S P 68	SPARE-FJB TO ENGINE
S P 69	SPARE-FJB TO FR AXLE
S P 70	SPARE-FJB TO FR AXLE
S P 71	SPARE-FJB TO RH SW PANEL
S P 72	SPARE-FJB TO FR SERV CPT
S P 74	SPARE-FJB TO LH CONSOLE
S P 77	SPARE-FJB TO EVAPORATOR CPT
S P 78	SPARE-FJB TO CONDENSER CPT
S P 79	SPARE-FJB TO CONDENSER CPT
S P 87	SPARE-RJB TO LH HAT RACK
S P 88	SPARE-RJB TO RH HAT RACK
S P 92	SPARE-RJB TO CONDENSER CPT
S P 93	SPARE-RJB TO EVAPORATOR CPT
S P 94	SPARE-RJB TO RR ROOF
S P 95	SPARE-RJB TO RR ROOF
S P 96	SPARE-RJB TO LUGG CPT #2
S P 97	SPARE-RJB TO LUGG CPT #3
S P 98	SPARE-RJB TO LUGG CPT #3
S P 104	SPARE-RJB TO ENGINE CPT
S P 105	SPARE-FJB TO ENGINE
S P 106	SPARE-RJB TO BATT. CPT.
S P 107	SPARE-RJB TO BATT. CPT.
S P 108	SPARE-RJB TO BATT. CPT.
S P 109	SPARE-RJB TO ENGINE CPT.
S P 110	SPARE-RJB TO ENGINE CPT.
S P 111	SPARE-RJB TO ENGINE CPT.
S P 112	SPARE-RJB TO ENGINE CPT.
S P 114	SPARE-FJB TO U/DASH WIPER
S P 115	SPARE-FJB TO U/DASH WIPER
S P 116	SPARE-FJB TO U/DASH FLOOR
S P 117	SPARE-FJB TO U/DASH FLOOR
W C	A/C & HEAT SYST-EVAP CTR SIGN
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A	A/C HEAT SYSTEM – EVAP. GRD
0 A A	RS - VOLTAGE REGULATOR GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN EVAP & CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB. CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M 8	FS - AUX. A/C UNIT
0 M 9	FS - WATER PUMP DRIVER
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN- GND RLY
0 S A	ENGINE CPT STUD-ALTERN. BOSCH
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 T 5	FS - HVAC DASH MODULE. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS FR JCT BOX CPT GRD STUD
0 Z	RR JCT BOX CPT GRD STUD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 A	A/C & HEAT SYSTEM-COOL 1 SIGN
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 E	A/C & HEAT EVAP. CONTROL
2 F	A/C & HEAT EVAP. CONTROL
2 H	A/C & HEAT SYSTEM-HI PRESS SW
2 H L	A/C & HEAT SYSTEM-LO & HI PRESS SW
2 L	A/C & HEAT SYSTEM-LO PRESS SW
5 N C	SPEED SIGNAL LOWER 5MPH
5 N O	SPEED SIGNAL HIGHER 5MPH
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
1 0	INTERIOR LTS-LUGGAGE CPT
1 0 A	INTERIOR LTS-LUGGAGE CPT
1 0 B	INTERIOR LTS-LUGGAGE CPT
1 0 C	INTERIOR LTS-LUGGAGE CPT
1 0 D	INTERIOR LTS-LUGGAGE CPT
1 0 E	INTERIOR LTS-EVAP. CPT
1 0 F	INTERIOR LTS-LUGGAGE CPT
1 0 H	INTERIOR LTS-LUGGAGE CPT
1 0 R	INTERIOR LTS-LUGGAGE DOOR AJAR
1 2	12V BAT ELECTRONIC JCT BLOCK
1 2	BAT CPT 12V BATTERY
1 2 A	FR JCT BOX 12V DISC SW
1 2 A	RR JCT BOX 12V DISC SW
1 2 B	12V BAT ELECTRICAL JCT BLOCK
1 2 B	RR JCT BOX 12V DISC SW
1 2 B	FR JCT BOX 12V DISC SW
1 2 B E	BAT. EQUALIZER MONITOR
1 2 C	FR JCT BOX 12V DISC SW
1 2 C	RR JCT BOX 12V DISC SW
1 2 D	BAT CPT 12V BATTERY
1 2 D T	TTLT MODULE
1 2 E	FR JCT BOX 12V DISC SW
1 2 E	RR JCT BOX 12V DISC SW
1 2 F	BAT CPT 12V FJB & IC
1 2 F	FR JCT BOX 12V DISC SW
1 2 F	RR JCT BOX 12V DISC SW
1 2 G	FR JCT BOX 12V DISC SW
1 2 J	FR JCT BOX 12V DISC SW
1 2 K	HVAC MODULE
1 2 I	12V IGNITION DISTRIBUTION
1 2 I	RR JCT BOX 12V IGNITION
1 2 I A	12V IGNITION DISTRIBUTION
1 2 I A	FR JCT BOX 12V IGNITION
1 2 I B	FR JCT BOX 12V IGNITION
1 2 L X	CLUSTER FEED
1 2 I F	FR JCT BOX 12V IGNITION
1 2 P	LH CONSOLE POWER OUTLET
1 2 R	BAT CPT 12V DISC RLY TO RJB
1 2 V A	BATTERY TO EQUALIZER 12V

CIRCUIT NUMBER CODE

No.	DESCRIPTION
12VD	12V HOT WIRE DISTRIBUTION
12VF	BAT CPT 12V FJB & IC
12VI	12V IGNITION DISTRIBUTION
12VR	BAT CPT 12V DISC RLY TO RJB
12W	12V BATTERY DDEC III
12X	FR JCT BOX 12V DISC SW
12X2	FR JCT BOX 12V DISC SW
12Y	FR JCT BOX 12V DISC SW
13A	ALARM & SIGNAL-LO AIR PRIM.
13B	ALARM & SIGNAL-LO AIR SEC.
15	EXTERIOR LTS-MULTI FUNC LEVEL
15A	WIPER & WASHER UPPER WINDSHIELD
16	SPEED - SIGNAL +
16A	SPEED - SIGNAL +
16T	SPEED - SIGNAL +
17	EXTERIOR LTS-FLASHER UNIT
17A	EXTERIOR LTS-FLASHER UNIT
19	DIFFERENTIAL OIL TEMP
20	SPEED - SIGNAL -
20T	SPEED - SIGNAL -
20W	SPEED - SIGNAL -
21	EXTERIOR LTS-DIRECTIONNAL LH
21A	EXTERIOR LTS-DIRECTIONNAL LH
21B	EXTERIOR LTS-HAZARD
21C	EXTERIOR LTS-CORNERING LH
21H	EXTERIOR LTS-DIRECTIONNAL LH
21K	EXTERIOR LTS-CORNERING
21N	EXTERIOR LTS-CORNERING LH
21P	EXTERIOR LTS-CORNERING LH
23	EXTERIOR LTS-DIRECTIONNAL RH
23	EXTERIOR LTS-DIRECTIONNAL RH
23A	EXTERIOR LTS-DIRECTIONNAL RH
23B	EXTERIOR LTS-DIRECTIONNAL RH
23C	EXTERIOR LTS-CORNERING RH
23N	EXTERIOR LTS-CORNERING RH
23P	EXTERIOR LTS-CORNERING RH
24	BAT CPT 24V BATTERY
24	FR JCT BOX 24V DISC SW
24A	BOOSTER BLOCK 24V DISC SW
24A	FR JCT BOX 24V DISC SW
24A	RR JCT BOX 24V DISC SW
24B	24V STARTER RLY FEEDING
24B	FR JCT BOX 24V DISC SW
24B	RR JCT BOX 24V DISC SW
24BE	RJB CPT-BAT EQ MONITOR HOT WIRE
24C	FR JCT BOX 24V DISC SW
24C	RR JCT BOX 24V DISC SW
24D	BAT CPT 24V HOT WIRE
24D	FR JCT BOX 24V HOT WIRE
24D	RR JCT BOX 24V HOT WIRE
24DA	A/C JCT BOX 24V HOT WIRE
24E	BAT CPT 24V DISC SW
24E	FR JCT BOX 24V DISC SW
24E	RR JCT BOX 24V DISC SW
24F	FR JCT BOX 24V DISC SW
24F	RR JCT BOX 24V DISC SW
24G	FR JCT BOX 24V DISC SW
24G	RR JCT BOX 24V DISC SW
24H	FR JCT BOX 24V DISC SW
24H	RR JCT BOX 24V DISC SW
24I	FR JCT BOX 24V IGNITION
24I	RR JCT BOX 24V IGNITION
24IA	FR JCT BOX 24V IGNITION
24IA	RR JCT BOX 24V IGNITION
24IB	FR JCT BOX 24V IGNITION
24IB	RR JCT BOX 24V IGNITION
24IF	FJB 24V IGNITION
24IC	FR JCT BOX 24V IGNITION
24P	FR JCT BOX 24V DISC SW
24S	24V DISC SW RLY SIGNAL
24T	RR JCT BOX 24V DISC SW
24V2	RR JCT BOX 24V DISC SW
24V3	RR JCT BOX 24V DISC SW
24V4	RR JCT BOX 24V DISC SW
24V5	RR JCT BOX 24V DISC SW
24VD	24V HOT WIRE DISTRIBUTION
24VF	BAT CPT 24V SW TO FJB & IC
24VA	BATTERY TO EQUALIZER 24V
24VI	RR JCT BOX 24V IGNITION
24VR	BAT CPT 24V DISC SW TO RJB
25	12VAC GEN RLY ON SIGNAL
25	12VAC GEN RLY ON SIGNAL
25A	ETHER SWITCH
25A	NOT ALTERNATOR #1-WARNING LT
25A1	24 VOLTS EXCITING SIGNAL - ALT. #1
25A2	24 VOLTS EXCITING SIGNAL - ALT. #2
25A3	24 V. SIGNAL ALT#1 OR ALT. #2 RUN
25F	12V IGNITION DISTRIBUTION
25B	EXTERIOR LTS-DAYTIME RUN LTS
25B	12 V. IGN. ALTERNATOR BOSCH
25C	12 V. SIGNAL ALT.#1 AND ALT.#2 RUN
25D	12 V. SIGNAL ALT.#1 AND ALT.#2 RUN
25H	24 V. IGN. ALTERNATOR BOSCH
25K	NOT ALTERNATOR #2-WARNING LT
26	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26B	DRIVER'S WINDOW LIFTER
26C	DRIVER'S WINDOW LIFTER
27	PARKING BRAKE SONALERT
27A	PARKING BRAKE SONALERT
28A	A/C & HEAT SYSTEM-HI PRESSURE
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29A	A/C & HEAT SYSTEM-DRIVER'S HTR
29H	HVAC DASH MODULE
29B	A/C & HEAT SYSTEM-DRIVER'S HTR
31A	A/C & HEAT SYSTEM-UNLOADER
31B	A/C & HEAT SYSTEM-UNLOADER
31B	WIPER & WASHER SYSTEM
31C	WIPER & WASHER SYSTEM
31D	WIPER & WASHER SYSTEM
31E	WIPER & WASHER SYSTEM
31J	WIPER & WASHER SYSTEM
31X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32B	EXTERIOR LTS-BACK-UP
32C	BACK-UP PWR & SIGNAL
32D	BACK-UP ALARM
35	ENTRANCE DOOR
35B	ENTRANCE DOOR
36	JACOB BRAKE SYSREM
36A	JACOB BRAKE SYSREM
39	INTERIOR LTS-12V RH PANEL SW.
39A	INTERIOR LTS-DRIVER"S LTS
39B	DRIVER'S LTS KEYLESS
39K	DRIVER'S LTS KEYLESS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
43	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45A	WATER PUMP SIGNAL
45B	A/C & HEAT SYSTEM-HEAT SIGN
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL-AIR HORN
52C	ALARM & SIGNAL-AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
53K	KEYLESS
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
57CA	A/C & HEAT SYSTEM-HEAT SIGN
57CC	A/C & HEAT SYSTEM-HEAT SIGN
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58C	DAYTIME RUNNING LIGHT
58D	DAYTIME RUNNING LIGHT
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVER'S FAN
64B	DRIVER'S FAN
64C	DRIVER'S FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65D	DRIVER'S REC. DAMPER
65P	PASSENGER REC. DAMPER
66	O_PASS. ON/OFF
67	A/C & HEAT SYSTEM
67A	A/C & HEAT SYSTEM
67B	A/C & HEAT SYSTEM
67C	HEAT WINDS.
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67V	A/C & HEAT SYSTEM-WATER VALVE

CIRCUIT NUMBER CODE

No.	DESCRIPTION
67X	A/C & HEAT SYSTEM
68	DASH & DEFROST DAMPER MOTOR
68A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH
72C	SUN VISOR-LH
72D	SUN VISOR-LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77A	A/C & HEAT SYSTEM-COMPRESSOR
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
77K	GRD SIGNAL-COMPRESSOR CUT-OUT
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85W	24V IGN ABS
85X	24V IGN ABS
85Y	ABS-WARNING LT
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	24V STARTER TO GENERATOR DELCO
102	WORLD TRANSM-SOL. GRD 1
102	WORLD TRANSM-SOL. C3
102A	24V STARTER TO GENERATOR BOSCH
104	WORLD TRANSM-SOL. FORWARD
104	LEVEL LOW SYSTEM
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	CHARG SYST-VOLTAGE REGUL. "F"
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125W	WORLD TRANSM-RET. INDICATOR
126	LEVEL LOW SYSTEM
126	WORLD TRANSM-LUBE PRESS SW.
127	WORLD TRANSM-LUBE PRESS SW.
127	PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
127B	PRE-HEAT WATER HEATER
127	WORLD TRANSM-RETARDER FEED SOL.
127S	PRE-HEAT WATER HEATER
127W	PRE-HEAT WATER HEATER
128	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT WATER HEATER
128W	PRE-HEAT WATER HEATER
128	WORLD TRANSM-SOL. C2
129	PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	A/C HEAT SYSTEM-EVAP FAN MOT
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132A	LEVEL LOW SYSTEM
132B	LEVEL LOW SYSTEM
132C	LEVEL LOW SYSTEM
132D	LEVEL LOW SYSTEM
132E	LEVEL LOW SYSTEM
132F	LEVEL LOW SYSTEM
132G	LEVEL LOW SYSTEM
132H	LEVEL LOW SYSTEM
132J	LEVEL LOW SYSTEM
132K	LEVEL LOW SYSTEM
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	WORLD TRANSM-RET. ACTUATOR HI
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135A	A/C & HEAT SYSTEM-AIR SENSOR
135D	A/C & HEAT SYSTEM-AIR SENSOR
135C	A/C & HEAT SYSTEM-AIR SENSOR
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
143X	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	ETHER COLD START
147	WORLD TRANSM-OIL TEMP
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
151A	ABS SYSTEM
152	ABS SYSTEM
152A	ABS SYSTEM
153	ABS SYSTEM

CIRCUIT NUMBER CODE

No.	DESCRIPTION
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	ABS SYSTEM
155	WORLD TRANSM-SPARE INPUT (-)
156	ABS SYSTEM
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157A	ABS SYSTEM
157B	ABS SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
165A	A/C & HEAT SYSTEM-TRANSMITER
165B	A/C & HEAT SYSTEM-TRANSMITER
165C	A/C & HEAT SYSTEM-TRANSMITER
165D	A/C & HEAT SYSTEM-TRANSMITER
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	A/C & HEAT SYSTEM-TEMP. CTR
167A	A/C & HEAT SYSTEM-TEMP. CTR
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170C	LUGGAGE DOOR LOCK
170D	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170F	LUGGAGE DOOR LOCK
170G	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
170K	LUGGAGE DOOR LOCK
170L	LUGGAGE DOOR LOCK
170M	LUGGAGE DOOR LOCK
170N	LUGGAGE DOOR LOCK
170P	LUGGAGE DOOR LOCK
170R	LUGGAGE DOOR LOCK
170S	LUGGAGE DOOR LOCK
170V	LUGGAGE DOOR LOCK
170W	LUGGAGE DOOR LOCK
170X	LUGGAGE DOOR LOCK
170Y	LUGGAGE DOOR LOCK
170Z	LUGGAGE DOOR LOCK

No.	DESCRIPTION
173	BACK-UP MONITOR
174	BACK-UP MONITOR
175	BACK-UP MONITOR
175A	BACK-UP MONITOR
175B	BACK-UP MONITOR
175C	BACK-UP MONITOR
180	DRIVER'S SEAT HEATER
180A	DRIVER'S SEAT HEATER
180B	CO-PILOT SEAT HEATER
180C	CO-PILOT SEAT HEATER
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
216B	24V SIGNAL AUX. LIQ. SOL. VALVE
216C	12 V. TRIGGER AUX. A/C UNIT
229	24 V. POWER AUX. A/C UNIT
229A	PWM SIGNAL - AUX . FAN UNIT
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251	DDEC III - PRODRIVER 12V H.W.
251A	DDEC III -DATA LOGGER 12V H.W.
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
264	S PEED SIGNAL- AUX. FAN UNIT
264A	SPEED SIGNAL- AUX. FAN UNIT
264B	SPEED SIGNAL- AUX. FAN UNIT

No.	DESCRIPTION
270	KEYLESS ENTRY SYSTEM
272	KEYLESS ENTRY SYSTEM
274	KEYLESS ENTRY SYSTEM
275	KEYLESS ENTRY SYSTEM
276	KEYLESS ENTRY SYSTEM
277	KEYLESS ENTRY SYSTEM
278	KEYLESS ENTRY SYSTEM
279	KEYLESS ENTRY SYSTEM
280	KEYLESS ENTRY SYSTEM
283	KEYLESS ENTRY SYSTEM
283A	KEYLESS ENTRY SYSTEM
284A	KEYLESS ENTRY SYSTEM
284B	KEYLESS ENTRY SYSTEM
285	KEYLESS ENTRY SYSTEM
285B	KEYLESS ENTRY SYSTEM
285C	KEYLESS ENTRY SYSTEM
286	KEYLESS ENTRY SYSTEM
286A	KEYLESS ENTRY SYSTEM
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
291	KEYLESS ENTRY SYSTEM
292	FAN CLUTCH RADIATOR SPD 2
293	KEYLESS ENTRY SYSTEM
294	ANTI-THEFT SYSTEM KEYLESS
295	LED FEED ALARM -KEYLESS
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE
540	DDEC III-CRUISE ENABLE LTS.
541	DDEC III-CRUISE SET SW
542	INPUT PARK BRAKE INTERLOCK
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT

No.	DESCRIPTION
565	DDEC III-ENGINE BRAKE ACTIVE
583	DDEC III-ENGINE BRAKE 4 CYL.
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
979	DDEC III-ENGINE BRAKE 2 CYL.

CIRCUIT NUMBER CODE

No.	DESCRIPTION
L 8	ENG. BLK HEATER
L 9	ENG. BLK HEATER
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 10	SPARE-RJB TO LUGG CPT #1
S P 11	SPARE-FJB TO RJB
S P 12	SPARE-RJB TO ENGINE
S P 13	SPARE-RJB TO ENGINE
S P 14	SPARE-FJB TO RJB
S P 15	SPARE-RJB TO ENGINE
S P 16	SPARE-RJB TO ENGINE
S P 17	SPARE-RJB TO ENGINE
S P 18	SPARE-FJB TO RJB
S P 24	SPARE-RJB TO LAVATORY ROOF
S P 25	SPARE-RJB TO LAVATORY ROOF
S P 26	SPARE-RJB TO LAVATORY ROOF
S P 27	SPARE-RJB TO LH HAT RACK
S P 28	SPARE-RJB TO LH HAT RACK
S P 31	SPARE-RJB TO RH HAT RACK
S P 32	SPARE-RJB TO RH HAT RACK
S P 33	SPARE-FJB TO RJB
S P 38	SPARE-FJB TO RJB
S P 43	SPARE-FJB TO RJB
S P 45	SPARE-FJB TO RJB
S P 46	SPARE-RJB TO LH FR ROOF
S P 48	SPARE-RJB TO DASH CENTER PANEL
S P 56	SPARE-ENGINE TO RH SW PANEL
S P 57	SPARE-DASH CENTER PANEL TO ENG.
S P 58	SPARE-DASH CENTER PANEL TO ENG.
S P 59	SPARE-FJB TO ENGINE
S P 61	SPARE-FJB TO DASH RH PANEL
S P 68	SPARE-FJB TO ENGINE
S P 69	SPARE-FJB TO FR AXLE
S P 70	SPARE-FJB TO FR AXLE
S P 71	SPARE-FJB TO RH SW PANEL
S P 72	SPARE-FJB TO FR SERV CPT
S P 74	SPARE-FJB TO LH CONSOLE
S P 77	SPARE-FJB TO EVAPORATOR CPT
S P 78	SPARE-FJB TO CONDENSER CPT
S P 79	SPARE-FJB TO CONDENSER CPT
S P 87	SPARE-RJB TO LH HAT RACK
S P 88	SPARE-RJB TO RH HAT RACK
S P 92	SPARE-RJB TO CONDENSER CPT
S P 93	SPARE-RJB TO EVAPORATOR CPT
S P 94	SPARE-RJB TO RR ROOF
S P 95	SPARE-RJB TO RR ROOF
S P 96	SPARE-RJB TO LUGG CPT #2
S P 97	SPARE-RJB TO LUGG CPT #3
S P 98	SPARE-RJB TO LUGG CPT #3
S P 104	SPARE-RJB TO ENGINE CPT
S P 105	SPARE-FJB TO ENGINE
S P 106	SPARE-RJB TO BATT. CPT.
S P 107	SPARE-RJB TO BATT. CPT.
S P 108	SPARE-RJB TO BATT. CPT.
S P 109	SPARE-RJB TO ENGINE CPT.
S P 110	SPARE-RJB TO ENGINE CPT.
S P 111	SPARE-RJB TO ENGINE CPT.
S P 112	SPARE-RJB TO ENGINE CPT.
S P 114	SPARE-FJB TO U/DASH WIPER
S P 115	SPARE-FJB TO U/DASH WIPER
S P 116	SPARE-FJB TO U/DASH FLOOR
S P 117	SPARE-FJB TO U/DASH FLOOR
W C	A/C & HEAT SYST-EVAP CTR SIGN
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A	A/C HEAT SYSTEM – EVAP. GRD
0 A A	RS - VOLTAGE REGULATOR GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN EVAP & CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB. CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L 6	FS - FR SERVICE CPT LTS GRD
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M 8	FS - AUX. A/C UNIT
0 M 9	FS - WATER PUMP DRIVER
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN- GND RLY
0 S A	ENGINE CPT STUD-ALTERN. BOSCH
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 T 5	FS - HVAC DASH MODULE. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS FR JCT BOX CPT GRD STUD
0 Z	RR JCT BOX CPT GRD STUD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 A	A/C & HEAT SYSTEM-COOL 1 SIGN
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 E	A/C & HEAT EVAP. CONTROL
2 F	A/C & HEAT EVAP. CONTROL
2 H	A/C & HEAT SYSTEM-HI PRESS SW
2 H L	A/C & HEAT SYSTEM-LO & HI PRESS SW
2 L	A/C & HEAT SYSTEM-LO PRESS SW
5 N C	SPEED SIGNAL LOWER 5MPH
5 N O	SPEED SIGNAL HIGHER 5MPH
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
1 0	INTERIOR LTS-LUGGAGE CPT
1 0 A	INTERIOR LTS-LUGGAGE CPT
1 0 B	INTERIOR LTS-LUGGAGE CPT
1 0 C	INTERIOR LTS-LUGGAGE CPT
1 0 D	INTERIOR LTS-LUGGAGE CPT
1 0 E	INTERIOR LTS-EVAP. CPT
1 0 F	INTERIOR LTS-LUGGAGE CPT
1 0 H	INTERIOR LTS-LUGGAGE CPT
1 0 R	INTERIOR LTS-LUGGAGE DOOR AJAR
1 2	12V BAT ELECTRONIC JCT BLOCK
1 2	BAT CPT 12V BATTERY
1 2 A	FR JCT BOX 12V DISC SW
1 2 A	RR JCT BOX 12V DISC SW
1 2 B	12V BAT ELECTRICAL JCT BLOCK
1 2 B	RR JCT BOX 12V DISC SW
1 2 B	FR JCT BOX 12V DISC SW
1 2 B E	BAT. EQUALIZER MONITOR
1 2 C	FR JCT BOX 12V DISC SW
1 2 C	RR JCT BOX 12V DISC SW
1 2 D	BAT CPT 12V BATTERY
1 2 D T	TTLT MODULE
1 2 E	FR JCT BOX 12V DISC SW
1 2 E	RR JCT BOX 12V DISC SW
1 2 F	BAT CPT 12V FJB & IC
1 2 F	FR JCT BOX 12V DISC SW
1 2 F	RR JCT BOX 12V DISC SW
1 2 G	FR JCT BOX 12V DISC SW
1 2 J	FR JCT BOX 12V DISC SW
1 2 K	HVAC MODULE
1 2 I	12V IGNITION DISTRIBUTION
1 2 I	RR JCT BOX 12V IGNITION
1 2 I A	12V IGNITION DISTRIBUTION
1 2 I A	FR JCT BOX 12V IGNITION
1 2 I B	FR JCT BOX 12V IGNITION
1 2 L X	CLUSTER FEED
1 2 I F	FR JCT BOX 12V IGNITION
1 2 P	LH CONSOLE POWER OUTLET
1 2 R	BAT CPT 12V DISC RLY TO RJB

CIRCUIT NUMBER CODE

No.	DESCRIPTION
12VA	BATTERY TO EQUALIZER 12V
12VD	12V HOT WIRE DISTRIBUTION
12VF	BAT CPT 12V FJB & IC
12VI	12V IGNITION DISTRIBUTION
12VR	BAT CPT 12V DISC RLY TO RJB
12W	12V BATTERY DDEC III
12X	FR JCT BOX 12V DISC SW
12X2	FR JCT BOX 12V DISC SW
12Y	FR JCT BOX 12V DISC SW
13A	ALARM & SIGNAL-LO AIR PRIM.
13B	ALARM & SIGNAL-LO AIR SEC.
15	EXTERIOR LTS-MULTI FUNC LEVEL
15A	WIPER & WASHER UPPER WINDSHIELD
16	SPEED - SIGNAL +
16A	SPEED - SIGNAL +
16T	SPEED - SIGNAL +
17	EXTERIOR LTS-FLASHER UNIT
17A	EXTERIOR LTS-FLASHER UNIT
19	DIFFERENTIAL OIL TEMP
20	SPEED - SIGNAL -
20T	SPEED - SIGNAL -
20W	SPEED - SIGNAL -
21	EXTERIOR LTS-DIRECTIONNAL LH
21A	EXTERIOR LTS-DIRECTIONNAL LH
21B	EXTERIOR LTS-HAZARD
21C	EXTERIOR LTS-CORNERING LH
21D	EXTERIOR LTS-DIRECTIONNAL LH
21H	EXTERIOR LTS-DIRECTIONNAL LH
21K	EXTERIOR LTS-CORNERING
21N	EXTERIOR LTS-CORNERING LH
21P	EXTERIOR LTS-CORNERING LH
22	LATCHING RLY.
23	EXTERIOR LTS-DIRECTIONNAL RH
23	EXTERIOR LTS-DIRECTIONNAL RH
23A	EXTERIOR LTS-DIRECTIONNAL RH
23B	EXTERIOR LTS-DIRECTIONNAL RH
23C	EXTERIOR LTS-CORNERING RH
23D	EXTERIOR LTS-DIRECTIONNAL RH
23N	EXTERIOR LTS-CORNERING RH
23P	EXTERIOR LTS-CORNERING RH
24	BAT CPT 24V BATTERY
24	FR JCT BOX 24V DISC SW
24A	BOOSTER BLOCK 24V DISC SW
24A	FR JCT BOX 24V DISC SW
24A	RR JCT BOX 24V DISC SW
24B	24V STARTER RLY FEEDING
24B	FR JCT BOX 24V DISC SW
24B	RR JCT BOX 24V DISC SW
24BE	RJB CPT-BAT EQ MONITOR HOT WIRE
24C	FR JCT BOX 24V DISC SW
24C	RR JCT BOX 24V DISC SW
24D	BAT CPT 24V HOT WIRE
24D	FR JCT BOX 24V HOT WIRE
24D	RR JCT BOX 24V HOT WIRE
24DA	A/C JCT BOX 24V HOT WIRE
24E	BAT CPT 24V DISC SW
24E	FR JCT BOX 24V DISC SW
24E	RR JCT BOX 24V DISC SW
24F	FR JCT BOX 24V DISC SW
24F	RR JCT BOX 24V DISC SW
24G	FR JCT BOX 24V DISC SW
24G	RR JCT BOX 24V DISC SW
24H	FR JCT BOX 24V DISC SW
24H	RR JCT BOX 24V DISC SW
24I	FR JCT BOX 24V IGNITION
24I	RR JCT BOX 24V IGNITION
24IA	FR JCT BOX 24V IGNITION
24IA	RR JCT BOX 24V IGNITION
24IB	FR JCT BOX 24V IGNITION
24IB	RR JCT BOX 24V IGNITION
24IF	FJB 24V IGNITION
24IC	FR JCT BOX 24V IGNITION
24P	FR JCT BOX 24V DISC SW
24S	24V DISC SW RLY SIGNAL
24T	RR JCT BOX 24V DISC SW
24V2	RR JCT BOX 24V DISC SW
24V3	RR JCT BOX 24V DISC SW
24V4	RR JCT BOX 24V DISC SW
24V5	RR JCT BOX 24V DISC SW
24VD	24V HOT WIRE DISTRIBUTION
24VF	BAT CPT 24V SW TO FJB & IC
24VA	BATTERY TO EQUALIZER 24V
24VI	RR JCT BOX 24V IGNITION
24VR	BAT CPT 24V DISC SW TO RJB
25	12VAC GEN RLY ON SIGNAL
25	12VAC GEN RLY ON SIGNAL
25A	ETHER SWITCH
25A	NOT ALTERNATOR #1-WARNING LT
25A1	24 VOLTS EXCITING SIGNAL - ALT. #1
25A2	24 VOLTS EXCITING SIGNAL - ALT. #2
25A3	24 V. SIGNAL ALT#1 OR ALT. #2 RUN
25F	12V IGNITION DISTRIBUTION
25B	EXTERIOR LTS-DAYTIME RUN LTS
25B	12 V. IGN. ALTERNATOR BOSCH
25C	12 V. SIGNAL ALT.#1 AND ALT.#2 RUN
25D	12 V. SIGNAL ALT.#1 AND ALT.#2 RUN
25H	24 V. IGN. ALTERNATOR BOSCH
25K	NOT ALTERNATOR #2-WARNING LT
26	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26B	DRIVER'S WINDOW LIFTER
26C	DRIVER'S WINDOW LIFTER
27	PARKING BRAKE SONALERT
27A	PARKING BRAKE SONALERT
28A	A/C & HEAT SYSTEM-HI PRESSURE
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29A	A/C & HEAT SYSTEM-DRIVER'S HTR
29H	HVAC DASH MODULE
29B	A/C & HEAT SYSTEM-DRIVER'S HTR
31A	A/C & HEAT SYSTEM-UNLOADER
31B	A/C & HEAT SYSTEM-UNLOADER
31B	WIPER & WASHER SYSTEM
31C	WIPER & WASHER SYSTEM
31D	WIPER & WASHER SYSTEM
31E	WIPER & WASHER SYSTEM
31J	WIPER & WASHER SYSTEM
31X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32B	EXTERIOR LTS-BACK-UP
32C	BACK-UP PWR & SIGNAL
32D	BACK-UP ALARM
35	ENTRANCE DOOR
35B	ENTRANCE DOOR
36	JACOB BRAKE SYSREM
36A	JACOB BRAKE SYSREM
39	INTERIOR LTS-12V RH PANEL SW.
39A	INTERIOR LTS-DRIVER"S LTS
39B	DRIVER'S LTS KEYLESS
39K	DRIVER'S LTS KEYLESS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
43	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45A	WATER PUMP SIGNAL
45B	A/C & HEAT SYSTEM-HEAT SIGN
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL-AIR HORN
52C	ALARM & SIGNAL-AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
53K	KEYLESS
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
57CA	A/C & HEAT SYSTEM-HEAT SIGN
57CC	A/C & HEAT SYSTEM-HEAT SIGN
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58C	DAYTIME RUNNING LIGHT
58D	DAYTIME RUNNING LIGHT
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVER'S FAN
64B	DRIVER'S FAN
64C	DRIVER'S FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR
65D	DRIVER'S REC. DAMPER
65P	PASSENGER REC. DAMPER
66	O_PASS. ON/OFF
67	A/C & HEAT SYSTEM
67A	A/C & HEAT SYSTEM
67B	A/C & HEAT SYSTEM

CIRCUIT NUMBER CODE

No.	DESCRIPTION
67C	HEAT WINDS.
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67V	A/C & HEAT SYSTEM-WATER VALVE
67X	A/C & HEAT SYSTEM
68	DASH & DEFROST DAMPER MOTOR
68A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH
72C	SUN VISOR-LH
72D	SUN VISOR-LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77A	A/C & HEAT SYSTEM-COMPRESSOR
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
77K	GRD SIGNAL-COMPRESSOR CUT-OUT
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85W	24V IGN ABS
85X	24V IGN ABS
85Y	ABS-WARNING LT
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	24V STARTER TO GENERATOR DELCO
102	WORLD TRANSM-SOL. GRD 1
102	WORLD TRANSM-SOL. C3
102A	24V STARTER TO GENERATOR BOSCH
104	WORLD TRANSM-SOL. FORWARD
104	LEVEL LOW SYSTEM
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	CHARG SYST-VOLTAGE REGUL. "F"
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125W	WORLD TRANSM-RET. INDICATOR
126	LEVEL LOW SYSTEM
126	WORLD TRANSM-LUBE PRESS SW.
127	WORLD TRANSM-LUBE PRESS SW.
127	PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
127B	PRE-HEAT WATER HEATER
127	WORLD TRANSM-RETARDER FEED SOL.
127S	PRE-HEAT WATER HEATER
127W	PRE-HEAT WATER HEATER
128	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT WATER HEATER
128W	PRE-HEAT WATER HEATER
128	WORLD TRANSM-SOL. C2
129	PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	A/C HEAT SYSTEM-EVAP FAN MOT
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132A	LEVEL LOW SYSTEM
132B	LEVEL LOW SYSTEM
132C	LEVEL LOW SYSTEM
132D	LEVEL LOW SYSTEM
132E	LEVEL LOW SYSTEM
132F	LEVEL LOW SYSTEM
132G	LEVEL LOW SYSTEM
132H	LEVEL LOW SYSTEM
132J	LEVEL LOW SYSTEM
132K	LEVEL LOW SYSTEM
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	WORLD TRANSM-RET. ACTUATOR HI
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135A	A/C & HEAT SYSTEM-AIR SENSOR
135D	A/C & HEAT SYSTEM-AIR SENSOR
135C	A/C & HEAT SYSTEM-AIR SENSOR
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
143X	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	ETHER COLD START
147	WORLD TRANSM-OIL TEMP
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B

CIRCUIT NUMBER CODE

No.	DESCRIPTION
151A	ABS SYSTEM
152	ABS SYSTEM
152A	ABS SYSTEM
153	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	ABS SYSTEM
155	WORLD TRANSM-SPARE INPUT (-)
156	ABS SYSTEM
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157A	ABS SYSTEM
157B	ABS SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
165A	A/C & HEAT SYSTEM-TRANSMITER
165B	A/C & HEAT SYSTEM-TRANSMITER
165C	A/C & HEAT SYSTEM-TRANSMITER
165D	A/C & HEAT SYSTEM-TRANSMITER
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	A/C & HEAT SYSTEM-TEMP. CTR
167A	A/C & HEAT SYSTEM-TEMP. CTR
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170C	LUGGAGE DOOR LOCK
170D	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170F	LUGGAGE DOOR LOCK
170G	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
170K	LUGGAGE DOOR LOCK
170L	LUGGAGE DOOR LOCK
170M	LUGGAGE DOOR LOCK
170N	LUGGAGE DOOR LOCK
170P	LUGGAGE DOOR LOCK
170R	LUGGAGE DOOR LOCK
170S	LUGGAGE DOOR LOCK
170V	LUGGAGE DOOR LOCK
170W	LUGGAGE DOOR LOCK
170X	LUGGAGE DOOR LOCK
170Y	LUGGAGE DOOR LOCK
170Z	LUGGAGE DOOR LOCK
173	BACK-UP MONITOR
174	BACK-UP MONITOR
175	BACK-UP MONITOR
175A	BACK-UP MONITOR
175B	BACK-UP MONITOR
175C	BACK-UP MONITOR
180	DRIVER'S SEAT HEATER
180A	DRIVER'S SEAT HEATER
180B	CO-PILOT SEAT HEATER
180C	CO-PILOT SEAT HEATER
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
216B	24V SIGNAL AUX. LIQ. SOL. VALVE
216C	12 V. TRIGGER AUX. A/C UNIT
229	24 V. POWER AUX. A/C UNIT
229A	PWM SIGNAL - AUX . FAN UNIT
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251	DDEC III - PRODRIVER 12V H.W.
251A	DDEC III -DATA LOGGER 12V H.W.
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
264	S PEED SIGNAL- AUX. FAN UNIT
264A	SPEED SIGNAL- AUX. FAN UNIT
264B	SPEED SIGNAL- AUX. FAN UNIT
270	KEYLESS ENTRY SYSTEM
272	KEYLESS ENTRY SYSTEM
274	KEYLESS ENTRY SYSTEM
275	KEYLESS ENTRY SYSTEM
276	KEYLESS ENTRY SYSTEM
277	KEYLESS ENTRY SYSTEM
278	KEYLESS ENTRY SYSTEM
279	KEYLESS ENTRY SYSTEM
280	KEYLESS ENTRY SYSTEM
283	KEYLESS ENTRY SYSTEM
283A	KEYLESS ENTRY SYSTEM
284A	KEYLESS ENTRY SYSTEM
284B	KEYLESS ENTRY SYSTEM
285	KEYLESS ENTRY SYSTEM
285B	KEYLESS ENTRY SYSTEM
285C	KEYLESS ENTRY SYSTEM
286	KEYLESS ENTRY SYSTEM
286A	KEYLESS ENTRY SYSTEM
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
291	KEYLESS ENTRY SYSTEM
292	FAN CLUTCH RADIATOR SPD 2
293	KEYLESS ENTRY SYSTEM
294	ANTI-THEFT SYSTEM KEYLESS
295	LED FEED ALARM -KEYLESS
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE
540	DDEC III-CRUISE ENABLE LTS.
541	DDEC III-CRUISE SET SW
542	INPUT PARK BRAKE INTERLOCK
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
583	DDEC III-ENGINE BRAKE 4 CYL.
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
979	DDEC III-ENGINE BRAKE 2 CYL.

CIRCUIT NUMBER CODE

No.	DESCRIPTION
L 8	ENG. BLK HEATER
L 9	ENG. BLK HEATER
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 10	SPARE-RJB TO LUGG CPT #1
S P 11	SPARE-FJB TO RJB
S P 12	SPARE-RJB TO ENGINE
S P 13	SPARE-RJB TO ENGINE
S P 14	SPARE-FJB TO RJB
S P 15	SPARE-RJB TO ENGINE
S P 16	SPARE-RJB TO ENGINE
S P 17	SPARE-RJB TO ENGINE
S P 18	SPARE-FJB TO RJB
S P 24	SPARE-RJB TO LAVATORY ROOF
S P 25	SPARE-RJB TO LAVATORY ROOF
S P 26	SPARE-RJB TO LAVATORY ROOF
S P 27	SPARE-RJB TO LH HAT RACK
S P 28	SPARE-RJB TO LH HAT RACK
S P 31	SPARE-RJB TO RH HAT RACK
S P 32	SPARE-RJB TO RH HAT RACK
S P 33	SPARE-FJB TO RJB
S P 38	SPARE-FJB TO RJB
S P 43	SPARE-FJB TO RJB
S P 45	SPARE-FJB TO RJB
S P 46	SPARE-RJB TO LH FR ROOF
S P 48	SPARE-RJB TO DASH CENTER PANEL
S P 56	SPARE-ENGINE TO RH SW PANEL
S P 57	SPARE-DASH CENTER PANEL TO ENG.
S P 58	SPARE-DASH CENTER PANEL TO ENG.
S P 59	SPARE-FJB TO ENGINE
S P 61	SPARE-FJB TO DASH RH PANEL
S P 68	SPARE-FJB TO ENGINE
S P 69	SPARE-FJB TO FR AXLE
S P 70	SPARE-FJB TO FR AXLE
S P 71	SPARE-FJB TO RH SW PANEL
S P 72	SPARE-FJB TO FR SERV CPT
S P 74	SPARE-FJB TO LH CONSOLE
S P 77	SPARE-FJB TO EVAPORATOR CPT
S P 78	SPARE-FJB TO CONDENSER CPT
S P 79	SPARE-FJB TO CONDENSER CPT
S P 87	SPARE-RJB TO LH HAT RACK
S P 88	SPARE-RJB TO RH HAT RACK
S P 92	SPARE-RJB TO CONDENSER CPT
S P 93	SPARE-RJB TO EVAPORATOR CPT
S P 94	SPARE-RJB TO RR ROOF
S P 95	SPARE-RJB TO RR ROOF
S P 96	SPARE-RJB TO LUGG CPT #2
S P 97	SPARE-RJB TO LUGG CPT #3
S P 98	SPARE-RJB TO LUGG CPT #3
S P 104	SPARE-RJB TO ENGINE CPT
S P 105	SPARE-FJB TO ENGINE
S P 106	SPARE-RJB TO BATT. CPT.
S P 107	SPARE-RJB TO BATT. CPT.
S P 108	SPARE-RJB TO BATT. CPT.
S P 109	SPARE-RJB TO ENGINE CPT.
S P 110	SPARE-RJB TO ENGINE CPT.
S P 111	SPARE-RJB TO ENGINE CPT.
S P 112	SPARE-RJB TO ENGINE CPT.
S P 114	SPARE-FJB TO U/DASH WIPER
S P 115	SPARE-FJB TO U/DASH WIPER
S P 116	SPARE-FJB TO U/DASH FLOOR
S P 117	SPARE-FJB TO U/DASH FLOOR
W C	A/C & HEAT SYST-EVAP CTR SIGN
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A	A/C HEAT SYSTEM – EVAP. GRD
0 A A	RS - VOLTAGE REGULATOR GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN EVAP & CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB. CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L 6	FS - FR SERVICE CPT LTS GRD
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M 8	FS - AUX. A/C UNIT
0 M 9	FS - WATER PUMP DRIVER
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN- GND RLY
0 S A	ENGINE CPT STUD-ALTERN. BOSCH
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 T 5	FS - HVAC DASH MODULE. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS SYSTEM GRD
0 Y 2	ABS SYSTEM GRD
0 Y 3	ABS SYSTEM GRD
0 Y 4	ABS SYSTEM GRD
0 Y 5	
0 Y 6	
0 Z	RR JCT BOX CPT GRD STUD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 A	A/C & HEAT SYSTEM-COOL 1 SIGN
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 E	A/C & HEAT EVAP. CONTROL
2 F	A/C & HEAT EVAP. CONTROL
2 H	A/C & HEAT SYSTEM-HI PRESS SW
2 H L	A/C & HEAT SYSTEM-LO & HI PRESS SW
2 L	A/C & HEAT SYSTEM-LO PRESS SW
5 N C	SPEED SIGNAL LOWER 5MPH
5 N O	SPEED SIGNAL HIGHER 5MPH
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
1 0	INTERIOR LTS-LUGGAGE CPT
1 0 A	INTERIOR LTS-LUGGAGE CPT
1 0 B	INTERIOR LTS-LUGGAGE CPT
1 0 C	INTERIOR LTS-LUGGAGE CPT
1 0 D	INTERIOR LTS-LUGGAGE CPT
1 0 E	INTERIOR LTS-EVAP. CPT
1 0 F	INTERIOR LTS-LUGGAGE CPT
1 0 H	INTERIOR LTS-LUGGAGE CPT
1 0 R	INTERIOR LTS-LUGGAGE DOOR AJAR
1 2	12V BAT ELECTRONIC JCT BLOCK
1 2	BAT CPT 12V BATTERY
1 2 A	FR JCT BOX 12V DISC SW
1 2 A	RR JCT BOX 12V DISC SW
1 2 B	12V BAT ELECTRICAL JCT BLOCK
1 2 B	RR JCT BOX 12V DISC SW
1 2 B	FR JCT BOX 12V DISC SW
1 2 B E	BAT. EQUALIZER MONITOR
1 2 C	FR JCT BOX 12V DISC SW
1 2 C	RR JCT BOX 12V DISC SW
1 2 D	BAT CPT 12V BATTERY
1 2 D T	TTLT MODULE
1 2 E	FR JCT BOX 12V DISC SW
1 2 E	RR JCT BOX 12V DISC SW
1 2 F	BAT CPT 12V FJB & IC
1 2 F	FR JCT BOX 12V DISC SW
1 2 F	RR JCT BOX 12V DISC SW
1 2 G	FR JCT BOX 12V DISC SW
1 2 J	FR JCT BOX 12V DISC SW
1 2 K	HVAC MODULE
1 2 I	12V IGNITION DISTRIBUTION
1 2 I	RR JCT BOX 12V IGNITION
1 2 I A	12V IGNITION DISTRIBUTION
1 2 I A	FR JCT BOX 12V IGNITION

CIRCUIT NUMBER CODE

No.	DESCRIPTION
12IB	FR JCT BOX 12V IGNITION
12IE	ABS - FR JCT BOX 12V IGNITION
12LX	CLUSTER FEED
12IF	FR JCT BOX 12V IGNITION
12M	ABS – FR JCT BOX 12V DISC. SW.
12P	LH CONSOLE POWER OUTLET
12R	BAT CPT 12V DISC RLY TO RJB
12VA	BATTERY TO EQUALIZER 12V
12VD	12V HOT WIRE DISTRIBUTION
12VF	BAT CPT 12V FJB & IC
12VI	12V IGNITION DISTRIBUTION
12VR	BAT CPT 12V DISC RLY TO RJB
12W	12V BATTERY DDEC III
12X	FR JCT BOX 12V DISC SW
12X2	FR JCT BOX 12V DISC SW
12Y	FR JCT BOX 12V DISC SW
13A	ALARM & SIGNAL-LO AIR PRIM.
13B	ALARM & SIGNAL-LO AIR SEC.
15	EXTERIOR LTS-MULTI FUNC LEVEL
15A	WIPER & WASHER UPPER WINDSHIELD
16	SPEED - SIGNAL +
16A	SPEED - SIGNAL +
16T	SPEED - SIGNAL +
17	EXTERIOR LTS-FLASHER UNIT
17A	EXTERIOR LTS-FLASHER UNIT
19	DIFFERENTIAL OIL TEMP
20	SPEED - SIGNAL -
20T	SPEED - SIGNAL -
20W	SPEED - SIGNAL -
21	EXTERIOR LTS-DIRECTIONNAL LH
21A	EXTERIOR LTS-DIRECTIONNAL LH
21B	EXTERIOR LTS-HAZARD
21C	EXTERIOR LTS-CORNERING LH
21D	EXTERIOR LTS-DIRECTIONNAL LH
21H	EXTERIOR LTS-DIRECTIONNAL LH
21K	EXTERIOR LTS-CORNERING
21N	EXTERIOR LTS-CORNERING LH
21P	EXTERIOR LTS-CORNERING LH
22	LATCHING RLY.
23	EXTERIOR LTS-DIRECTIONNAL RH
23	EXTERIOR LTS-DIRECTIONNAL RH
23A	EXTERIOR LTS-DIRECTIONNAL RH
23B	EXTERIOR LTS-DIRECTIONNAL RH
23C	EXTERIOR LTS-CORNERING RH
23D	EXTERIOR LTS-DIRECTIONNAL RH
23N	EXTERIOR LTS-CORNERING RH
23P	EXTERIOR LTS-CORNERING RH
24	BAT CPT 24V BATTERY
24	FR JCT BOX 24V DISC SW
24A	BOOSTER BLOCK 24V DISC SW

No.	DESCRIPTION
24A	FR JCT BOX 24V DISC SW
24A	RR JCT BOX 24V DISC SW
24B	24V STARTER RLY FEEDING
24B	FR JCT BOX 24V DISC SW
24BE	RJB CPT-BAT EQ MONITOR HOT WIRE
24C	FR JCT BOX 24V DISC SW
24C	RR JCT BOX 24V DISC SW
24D	BAT CPT 24V HOT WIRE
24D	FR JCT BOX 24V HOT WIRE
24D	RR JCT BOX 24V HOT WIRE
24DA	A/C JCT BOX 24V HOT WIRE
24E	BAT CPT 24V DISC SW
24E	FR JCT BOX 24V DISC SW
24E	RR JCT BOX 24V DISC SW
24F	FR JCT BOX 24V DISC SW
24F	RR JCT BOX 24V DISC SW
24G	FR JCT BOX 24V DISC SW
24G	RR JCT BOX 24V DISC SW
24H	FR JCT BOX 24V DISC SW
24H	RR JCT BOX 24V DISC SW
24I	FR JCT BOX 24V IGNITION
24I	RR JCT BOX 24V IGNITION
24IA	FR JCT BOX 24V IGNITION
24IA	RR JCT BOX 24V IGNITION
24IB	FR JCT BOX 24V IGNITION
24IB	RR JCT BOX 24V IGNITION
24IF	FJB 24V IGNITION
24IC	FR JCT BOX 24V IGNITION
24P	FR JCT BOX 24V DISC SW
24S	24V DISC SW RLY SIGNAL
24T	RR JCT BOX 24V DISC SW
24V2	RR JCT BOX 24V DISC SW
24V3	RR JCT BOX 24V DISC SW
24V4	RR JCT BOX 24V DISC SW
24V5	RR JCT BOX 24V DISC SW
24VD	24V HOT WIRE DISTRIBUTION
24VF	BAT CPT 24V SW TO FJB & IC
24VA	BATTERY TO EQUALIZER 24V
24VI	RR JCT BOX 24V IGNITION
24VR	BAT CPT 24V DISC SW TO RJB
25	12VAC GEN RLY ON SIGNAL
25	12VAC GEN RLY ON SIGNAL
25A	ETHER SWITCH
25A	NOT ALTERNATOR #1-WARNING LT
25A1	24 VOLTS EXCITING SIGNAL - ALT. #1
25A2	24 VOLTS EXCITING SIGNAL - ALT. #2
25A3	24 V. SIGNAL ALT#1 OR ALT. #2 RUN
25F	12V IGNITION DISTRIBUTION
25B	EXTERIOR LTS-DAYTIME RUN LTS
25B	12 V. IGN. ALTERNATOR BOSCH

No.	DESCRIPTION
25C	12 V. SIGNAL ALT.#1 AND ALT.#2 RUN
25D	12 V. SIGNAL ALT.#1 AND ALT.#2 RUN
25H	24 V. IGN. ALTERNATOR BOSCH
25K	NOT ALTERNATOR #2-WARNING LT
26	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26B	DRIVER'S WINDOW LIFTER
26C	DRIVER'S WINDOW LIFTER
27	PARKING BRAKE SONALERT
27A	PARKING BRAKE SONALERT
28A	A/C & HEAT SYSTEM-HI PRESSURE
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29A	A/C & HEAT SYSTEM-DRIVER'S HTR
29H	HVAC DASH MODULE
29B	A/C & HEAT SYSTEM-DRIVER'S HTR
31A	A/C & HEAT SYSTEM-UNLOADER
31B	A/C & HEAT SYSTEM-UNLOADER
31B	WIPER & WASHER SYSTEM
31C	WIPER & WASHER SYSTEM
31D	WIPER & WASHER SYSTEM
31E	WIPER & WASHER SYSTEM
31J	WIPER & WASHER SYSTEM
31X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32B	EXTERIOR LTS-BACK-UP
32C	BACK-UP PWR & SIGNAL
32D	BACK-UP ALARM
35	ENTRANCE DOOR
35B	ENTRANCE DOOR
36	JACOB BRAKE SYSREM
36A	JACOB BRAKE SYSREM
39	INTERIOR LTS-12V RH PANEL SW.
39A	INTERIOR LTS-DRIVER"S LTS
39B	DRIVER'S LTS KEYLESS
39K	DRIVER'S LTS KEYLESS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
43	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45A	WATER PUMP SIGNAL
45B	A/C & HEAT SYSTEM-HEAT SIGN
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR

No.	DESCRIPTION
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL-AIR HORN
52C	ALARM & SIGNAL-AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
53K	KEYLESS
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
57CA	A/C & HEAT SYSTEM-HEAT SIGN
57CC	A/C & HEAT SYSTEM-HEAT SIGN
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58C	DAYTIME RUNNING LIGHT
58D	DAYTIME RUNNING LIGHT
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVER'S FAN
64B	DRIVER'S FAN
64C	DRIVER'S FAN
65	FOOT DAMPER MOTOR
65A	FOOT DAMPER MOTOR

CIRCUIT NUMBER CODE

No.	DESCRIPTION
65D	DRIVER'S REC. DAMPER
65P	PASSENGER REC. DAMPER
66	O_PASS. ON/OFF
67	A/C & HEAT SYSTEM
67A	A/C & HEAT SYSTEM
67B	A/C & HEAT SYSTEM
67C	HEAT WINDS.
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67V	A/C & HEAT SYSTEM-WATER VALVE
67X	A/C & HEAT SYSTEM
68	DASH & DEFROST DAMPER MOTOR
68A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH
72C	SUN VISOR-LH
72D	SUN VISOR-LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
76P	FUEL PRIME PUMP
76M	FUEL PRIME PUMP
77A	A/C & HEAT SYSTEM-COMPRESSOR
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
77K	GRD SIGNAL-COMPRESSOR CUT-OUT
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82L	EXTERIOR LTS-LH STOP
82R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85F	ENGINE CTR-ENGINE CTR SW IGN
85F	LO AIR SONALERT
85X	12V IGN ABS
85Y	ABS SYSTEM
85Z	TRAILER ABS SYSTEM
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
91S	SONALERT PARKING BRAKE
91W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	24V STARTER TO GENERATOR DELCO
102	WORLD TRANSM-SOL. GRD 1
102	WORLD TRANSM-SOL. C3
102A	24V STARTER TO GENERATOR BOSCH
104	WORLD TRANSM-SOL. FORWARD
104	LEVEL LOW SYSTEM
105	WORLD TRANSM-RETARDER & SUMP
105W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	CHARG SYST-VOLTAGE REGUL. "F"
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115C	DDEC III-COOLANT LEVEL
115W	WORLD TRANSM-DO NOT SHIFT SIGN
116	WORLD TRANSM-LO SIGNAL SOL. HI
116B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117A	ALARM & SIGNAL-TRANSM OIL TEMP
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125W	WORLD TRANSM-RET. INDICATOR
126	LEVEL LOW SYSTEM
126	WORLD TRANSM-LUBE PRESS SW.
127	WORLD TRANSM-LUBE PRESS SW.
127	PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
127B	PRE-HEAT WATER HEATER
127	WORLD TRANSM-RETARDER FEED SOL.
127S	PRE-HEAT WATER HEATER
127W	PRE-HEAT WATER HEATER
128	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT WATER HEATER
128W	PRE-HEAT WATER HEATER
128	WORLD TRANSM-SOL. C2
129	PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	A/C HEAT SYSTEM-EVAP FAN MOT
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132A	LEVEL LOW SYSTEM
132B	LEVEL LOW SYSTEM
132C	LEVEL LOW SYSTEM
132D	LEVEL LOW SYSTEM
132E	LEVEL LOW SYSTEM
132F	LEVEL LOW SYSTEM
132G	LEVEL LOW SYSTEM
132H	LEVEL LOW SYSTEM
132J	LEVEL LOW SYSTEM
132K	LEVEL LOW SYSTEM
132W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	WORLD TRANSM-RET. ACTUATOR HI
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135A	A/C & HEAT SYSTEM-AIR SENSOR
135D	A/C & HEAT SYSTEM-AIR SENSOR
135C	A/C & HEAT SYSTEM-AIR SENSOR
135D	WORLD TRANSM-RETARDER RES MOD
135C	WORLD TRANSM-RETARDER TEMP
136	WORLD TRANSM-ECU POWER
136V	WORLD TRANSM-12V BATTERY
136W	WORLD TRANSM-12V BATTERY
136X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137A	MIRROR (SPARTAN & RAMCO)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143A	ABS SYSTEM
143W	WORLD TRANSM-BATTERY GRD
143X	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146	WORLD TRANSM-IGNITION SENSE
146W	WORLD TRANSM-12V IGNITION
146X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	ETHER COLD START
147	WORLD TRANSM-OIL TEMP
147C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI
149A	ABS SYSTEM

CIRCUIT NUMBER CODE

No.	DESCRIPTION
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
152	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	WORLD TRANSM-SPARE INPUT (-)
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157B	ABS SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
165A	A/C & HEAT SYSTEM-TRANSMITER
165B	A/C & HEAT SYSTEM-TRANSMITER
165C	A/C & HEAT SYSTEM-TRANSMITER
165D	A/C & HEAT SYSTEM-TRANSMITER
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	A/C & HEAT SYSTEM-TEMP. CTR
167A	A/C & HEAT SYSTEM-TEMP. CTR
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170C	LUGGAGE DOOR LOCK
170D	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170F	LUGGAGE DOOR LOCK
170G	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
170K	LUGGAGE DOOR LOCK
170L	LUGGAGE DOOR LOCK
170M	LUGGAGE DOOR LOCK
170N	LUGGAGE DOOR LOCK
170P	LUGGAGE DOOR LOCK
170R	LUGGAGE DOOR LOCK
170S	LUGGAGE DOOR LOCK
170V	LUGGAGE DOOR LOCK
170W	LUGGAGE DOOR LOCK
170X	LUGGAGE DOOR LOCK
170Y	LUGGAGE DOOR LOCK
170Z	LUGGAGE DOOR LOCK
173	BACK-UP MONITOR
174	BACK-UP MONITOR
175	BACK-UP MONITOR
175A	BACK-UP MONITOR
175B	BACK-UP MONITOR
175C	BACK-UP MONITOR
180	DRIVER'S SEAT HEATER
180A	DRIVER'S SEAT HEATER
180B	CO-PILOT SEAT HEATER
180C	CO-PILOT SEAT HEATER
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
216B	24V SIGNAL AUX. LIQ. SOL. VALVE
216C	12 V. TRIGGER AUX. A/C UNIT
229	24 V. POWER AUX. A/C UNIT
229A	PWM SIGNAL - AUX . FAN UNIT
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251	DDEC III - PRODRIVER 12V H.W.
251A	DDEC III -DATA LOGGER 12V H.W.
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
264	S PEED SIGNAL- AUX. FAN UNIT
264A	SPEED SIGNAL- AUX. FAN UNIT
264B	SPEED SIGNAL- AUX. FAN UNIT
270	KEYLESS ENTRY SYSTEM
272	KEYLESS ENTRY SYSTEM
274	KEYLESS ENTRY SYSTEM
275	KEYLESS ENTRY SYSTEM
276	KEYLESS ENTRY SYSTEM
277	KEYLESS ENTRY SYSTEM
278	KEYLESS ENTRY SYSTEM
279	KEYLESS ENTRY SYSTEM
280	KEYLESS ENTRY SYSTEM
283	KEYLESS ENTRY SYSTEM
283A	KEYLESS ENTRY SYSTEM
284A	KEYLESS ENTRY SYSTEM
284B	KEYLESS ENTRY SYSTEM
285	KEYLESS ENTRY SYSTEM
285B	KEYLESS ENTRY SYSTEM
285C	KEYLESS ENTRY SYSTEM
286	KEYLESS ENTRY SYSTEM
286A	KEYLESS ENTRY SYSTEM
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
291	KEYLESS ENTRY SYSTEM
292	FAN CLUTCH RADIATOR SPD 2
293	KEYLESS ENTRY SYSTEM
294	ANTI-THEFT SYSTEM KEYLESS
295	LED FEED ALARM -KEYLESS
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE
540	DDEC III-CRUISE ENABLE LTS.
541	DDEC III-CRUISE SET SW
542	INPUT PARK BRAKE INTERLOCK
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
583	DDEC III-ENGINE BRAKE 4 CYL.
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
979	DDEC III-ENGINE BRAKE 2 CYL.

CIRCUIT NUMBER CODE

No.	DESCRIPTION
L 8	ENG. BLK HEATER
L 9	ENG. BLK HEATER
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 1 0	SPARE-RJB TO LUGG CPT #1
S P 1 1	SPARE-FJB TO RJB
S P 1 2	SPARE-RJB TO ENGINE
S P 1 3	SPARE-RJB TO ENGINE
S P 1 4	SPARE-FJB TO RJB
S P 1 5	SPARE-RJB TO ENGINE
S P 1 6	SPARE-RJB TO ENGINE
S P 1 7	SPARE-RJB TO ENGINE
S P 1 8	SPARE-FJB TO RJB
S P 2 4	SPARE-RJB TO LAVATORY ROOF
S P 2 5	SPARE-RJB TO LAVATORY ROOF
S P 2 6	SPARE-RJB TO LAVATORY ROOF
S P 2 7	SPARE-RJB TO LH HAT RACK
S P 2 8	SPARE-RJB TO LH HAT RACK
S P 3 1	SPARE-RJB TO RH HAT RACK
S P 3 2	SPARE-RJB TO RH HAT RACK
S P 3 3	SPARE-FJB TO RJB
S P 3 8	SPARE-FJB TO RJB
S P 4 3	SPARE-FJB TO RJB
S P 4 5	SPARE-FJB TO RJB
S P 4 6	SPARE-RJB TO LH FR ROOF
S P 4 8	SPARE-RJB TO DASH CENTER PANEL
S P 5 6	SPARE-ENGINE TO RH SW PANEL
S P 5 7	SPARE-DASH CENTER PANEL TO ENG.
S P 5 8	SPARE-DASH CENTER PANEL TO ENG.
S P 5 9	SPARE-FJB TO ENGINE
S P 6 1	SPARE-FJB TO DASH RH PANEL
S P 6 8	SPARE-FJB TO ENGINE
S P 6 9	SPARE-FJB TO FR AXLE
S P 7 0	SPARE-FJB TO FR AXLE
S P 7 1	SPARE-FJB TO RH SW PANEL
S P 7 2	SPARE-FJB TO FR SERV CPT
S P 7 4	SPARE-FJB TO LH CONSOLE
S P 7 7	SPARE-FJB TO EVAPORATOR CPT
S P 7 8	SPARE-FJB TO CONDENSER CPT
S P 7 9	SPARE-FJB TO CONDENSER CPT
S P 8 7	SPARE-RJB TO LH HAT RACK
S P 8 8	SPARE-RJB TO RH HAT RACK
S P 9 2	SPARE-RJB TO CONDENSER CPT
S P 9 3	SPARE-RJB TO EVAPORATOR CPT
S P 9 4	SPARE-RJB TO RR ROOF
S P 9 5	SPARE-RJB TO RR ROOF
S P 9 6	SPARE-RJB TO LUGG CPT #2
S P 9 7	SPARE-RJB TO LUGG CPT #3
S P 9 8	SPARE-RJB TO LUGG CPT #3
S P 1 0 4	SPARE-RJB TO ENGINE CPT
S P 1 0 5	SPARE-FJB TO ENGINE
S P 1 0 6	SPARE-RJB TO BATT. CPT.
S P 1 0 7	SPARE-RJB TO BATT. CPT.
S P 1 0 8	SPARE-RJB TO BATT. CPT.
S P 1 0 9	SPARE-RJB TO ENGINE CPT.
S P 1 1 0	SPARE-RJB TO ENGINE CPT.
S P 1 1 1	SPARE-RJB TO ENGINE CPT.
S P 1 1 2	SPARE-RJB TO ENGINE CPT.
S P 1 1 4	SPARE-FJB TO U/DASH WIPER
S P 1 1 5	SPARE-FJB TO U/DASH WIPER
S P 1 1 6	SPARE-FJB TO U/DASH FLOOR
S P 1 1 7	SPARE-FJB TO U/DASH FLOOR
W C	A/C & HEAT SYST-EVAP CTR SIGN
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A	A/C HEAT SYSTEM – EVAP. GRD
0 A A	RS - VOLTAGE REGULATOR GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN EVAP & CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB. CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D G	EC- ALTERNATOR CASING GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L 6	FS - FR SERVICE CPT LTS GRD
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M 8	FS - AUX. A/C UNIT
0 M 9	FS - WATER PUMP DRIVER
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN- GND RLY
0 S A	ENGINE CPT STUD-ALTERN. BOSCH
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 T 5	FS - HVAC DASH MODULE. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS SYSTEM GRD
0 Y 2	ABS SYSTEM GRD
0 Y 3	ABS SYSTEM GRD
0 Y 4	ABS SYSTEM GRD
0 Y 5	
0 Y 6	
0 Z	RR JCT BOX CPT GRD STUD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 A	A/C & HEAT SYSTEM-COOL 1 SIGN
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 E	A/C & HEAT EVAP. CONTROL
2 F	A/C & HEAT EVAP. CONTROL
2 H	A/C & HEAT SYSTEM-HI PRESS SW
2 H L	A/C & HEAT SYSTEM-LO & HI PRESS SW
2 L	A/C & HEAT SYSTEM-LO PRESS SW
5 N C	SPEED SIGNAL LOWER 5MPH
5 N O	SPEED SIGNAL HIGHER 5MPH
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
1 0	INTERIOR LTS-LUGGAGE CPT
1 0 A	INTERIOR LTS-LUGGAGE CPT
1 0 B	INTERIOR LTS-LUGGAGE CPT
1 0 C	INTERIOR LTS-LUGGAGE CPT
1 0 D	INTERIOR LTS-LUGGAGE CPT
1 0 E	INTERIOR LTS-EVAP. CPT
1 0 F	INTERIOR LTS-LUGGAGE CPT
1 0 H	INTERIOR LTS-LUGGAGE CPT
1 0 R	INTERIOR LTS-LUGGAGE DOOR AJAR
1 2	12V BAT ELECTRONIC JCT BLOCK
1 2	BAT CPT 12V BATTERY
1 2 A	FR JCT BOX 12V DISC SW
1 2 A	RR JCT BOX 12V DISC SW
1 2 B	12V BAT ELECTRICAL JCT BLOCK
1 2 B	RR JCT BOX 12V DISC SW
1 2 B	FR JCT BOX 12V DISC SW
1 2 B E	BAT. EQUALIZER MONITOR
1 2 C	FR JCT BOX 12V DISC SW
1 2 C	RR JCT BOX 12V DISC SW
1 2 D	BAT CPT 12V BATTERY
1 2 D T	TTLT MODULE
1 2 E	FR JCT BOX 12V DISC SW
1 2 E	RR JCT BOX 12V DISC SW
1 2 F	BAT CPT 12V FJB & IC
1 2 F	FR JCT BOX 12V DISC SW
1 2 F	RR JCT BOX 12V DISC SW
1 2 G	FR JCT BOX 12V DISC SW
1 2 J	FR JCT BOX 12V DISC SW
1 2 K	HVAC MODULE
1 2 I	12V IGNITION DISTRIBUTION
1 2 I	RR JCT BOX 12V IGNITION
1 2 I A	12V IGNITION DISTRIBUTION

CIRCUIT NUMBER CODE

No.	DESCRIPTION
12IA	FR JCT BOX 12V IGNITION
12IB	FR JCT BOX 12V IGNITION
12IE	ABS - FR JCT BOX 12V IGNITION
12LX	CLUSTER FEED
12IF	FR JCT BOX 12V IGNITION
12M	ABS – FR JCT BOX 12V DISC. SW.
12P	LH CONSOLE POWER OUTLET
12R	BAT CPT 12V DISC RLY TO RJB
12VA	BATTERY TO EQUALIZER 12V
12VD	12V HOT WIRE DISTRIBUTION
12VF	BAT CPT 12V FJB & IC
12VI	12V IGNITION DISTRIBUTION
12VR	BAT CPT 12V DISC RLY TO RJB
12W	12V BATTERY DDEC III
12X	FR JCT BOX 12V DISC SW
12X2	FR JCT BOX 12V DISC SW
12Y	FR JCT BOX 12V DISC SW
13A	ALARM & SIGNAL-LO AIR PRIM.
13B	ALARM & SIGNAL-LO AIR SEC.
15	EXTERIOR LTS-MULTI FUNC LEVEL
15A	WIPER & WASHER UPPER WINDSHIELD
16	SPEED - SIGNAL +
16A	SPEED - SIGNAL +
16T	SPEED - SIGNAL +
17	EXTERIOR LTS-FLASHER UNIT
17A	EXTERIOR LTS-FLASHER UNIT
19	DIFFERENTIAL OIL TEMP
20	SPEED - SIGNAL -
20T	SPEED - SIGNAL -
20W	SPEED - SIGNAL -
21	EXTERIOR LTS-DIRECTIONNAL LH
21A	EXTERIOR LTS-DIRECTIONNAL LH
21B	EXTERIOR LTS-HAZARD
21C	EXTERIOR LTS-CORNERING LH
21D	EXTERIOR LTS-DIRECTIONNAL LH
21H	EXTERIOR LTS-DIRECTIONNAL LH
21K	EXTERIOR LTS-CORNERING
21N	EXTERIOR LTS-CORNERING LH
21P	EXTERIOR LTS-CORNERING LH
22	LATCHING RLY.
23	EXTERIOR LTS-DIRECTIONNAL RH
23	EXTERIOR LTS-DIRECTIONNAL RH
23A	EXTERIOR LTS-DIRECTIONNAL RH
23B	EXTERIOR LTS-DIRECTIONNAL RH
23C	EXTERIOR LTS-CORNERING RH
23D	EXTERIOR LTS-DIRECTIONNAL RH
23N	EXTERIOR LTS-CORNERING RH
23P	EXTERIOR LTS-CORNERING RH
24	BAT CPT 24V BATTERY
24	FR JCT BOX 24V DISC SW

No.	DESCRIPTION
24A	BOOSTER BLOCK 24V DISC SW
24A	FR JCT BOX 24V DISC SW
24A	RR JCT BOX 24V DISC SW
24B	24V STARTER RLY FEEDING
24B	FR JCT BOX 24V DISC SW
24BE	RJB CPT-BAT EQ MONITOR HOT WIRE
24C	FR JCT BOX 24V DISC SW
24C	RR JCT BOX 24V DISC SW
24D	BAT CPT 24V HOT WIRE
24D	FR JCT BOX 24V HOT WIRE
24D	RR JCT BOX 24V HOT WIRE
24DA	A/C JCT BOX 24V HOT WIRE
24E	BAT CPT 24V DISC SW
24E	FR JCT BOX 24V DISC SW
24E	RR JCT BOX 24V DISC SW
24F	FR JCT BOX 24V DISC SW
24F	RR JCT BOX 24V DISC SW
24G	FR JCT BOX 24V DISC SW
24G	RR JCT BOX 24V DISC SW
24H	FR JCT BOX 24V DISC SW
24H	RR JCT BOX 24V DISC SW
24I	FR JCT BOX 24V IGNITION
24I	RR JCT BOX 24V IGNITION
24IA	FR JCT BOX 24V IGNITION
24IA	RR JCT BOX 24V IGNITION
24IB	FR JCT BOX 24V IGNITION
24IB	RR JCT BOX 24V IGNITION
24IF	FJB 24V IGNITION
24IC	FR JCT BOX 24V IGNITION
24P	FR JCT BOX 24V DISC SW
24S	24V DISC SW RLY SIGNAL
24T	RR JCT BOX 24V DISC SW
24V2	RR JCT BOX 24V DISC SW
24V3	RR JCT BOX 24V DISC SW
24V4	RR JCT BOX 24V DISC SW
24V5	RR JCT BOX 24V DISC SW
24VD	24V HOT WIRE DISTRIBUTION
24VF	BAT CPT 24V SW TO FJB & IC
24VA	BATTERY TO EQUALIZER 24V
24VI	RR JCT BOX 24V IGNITION
24VR	BAT CPT 24V DISC SW TO RJB
25	12VAC GEN RLY ON SIGNAL
25	12VAC GEN RLY ON SIGNAL
25A	ETHER SWITCH
25A	NOT ALTERNATOR #1-WARNING LT
25A1	24 VOLTS EXCITING SIGNAL - ALT. #1
25A2	24 VOLTS EXCITING SIGNAL - ALT. #2
25A3	24 V. SIGNAL ALT#1 OR ALT. #2 RUN
25F	12V IGNITION DISTRIBUTION
25B	EXTERIOR LTS-DAYTIME RUN LTS

No.	DESCRIPTION
25B	12 V. IGN. ALTERNATOR BOSCH
25C	12 V. SIGNAL ALT.#1 AND ALT.#2 RUN
25D	12 V. SIGNAL ALT.#1 AND ALT.#2 RUN
25H	24 V. IGN. ALTERNATOR BOSCH
25K	NOT ALTERNATOR #2-WARNING LT
26	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26B	DRIVER'S WINDOW LIFTER
26C	DRIVER'S WINDOW LIFTER
27	PARKING BRAKE SONALERT
27A	PARKING BRAKE SONALERT
28A	A/C & HEAT SYSTEM-HI PRESSURE
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29A	A/C & HEAT SYSTEM-DRIVER'S HTR
29H	HVAC DASH MODULE
29B	A/C & HEAT SYSTEM-DRIVER'S HTR
31A	A/C & HEAT SYSTEM-UNLOADER
31B	A/C & HEAT SYSTEM-UNLOADER
31B	WIPER & WASHER SYSTEM
31C	WIPER & WASHER SYSTEM
31D	WIPER & WASHER SYSTEM
31E	WIPER & WASHER SYSTEM
31J	WIPER & WASHER SYSTEM
31X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32B	EXTERIOR LTS-BACK-UP
32C	BACK-UP PWR & SIGNAL
32D	BACK-UP ALARM
35	ENTRANCE DOOR
35B	ENTRANCE DOOR
36	JACOB BRAKE SYSREM
36A	JACOB BRAKE SYSREM
39	INTERIOR LTS-12V RH PANEL SW.
39A	INTERIOR LTS-DRIVER"S LTS
39B	DRIVER'S LTS KEYLESS
39K	DRIVER'S LTS KEYLESS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
43	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45A	WATER PUMP SIGNAL
45B	A/C & HEAT SYSTEM-HEAT SIGN
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN

No.	DESCRIPTION
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL-AIR HORN
52C	ALARM & SIGNAL-AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
53K	KEYLESS
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
57CA	A/C & HEAT SYSTEM-HEAT SIGN
57CC	A/C & HEAT SYSTEM-HEAT SIGN
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58C	DAYTIME RUNNING LIGHT
58D	DAYTIME RUNNING LIGHT
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVER'S FAN
64B	DRIVER'S FAN
64C	DRIVER'S FAN
65	FOOT DAMPER MOTOR

CIRCUIT NUMBER CODE

No.	DESCRIPTION
65 A	FOOT DAMPER MOTOR
65 D	DRIVER'S REC. DAMPER
65 P	PASSENGER REC. DAMPER
66	O_PASS. ON/OFF
67	A/C & HEAT SYSTEM
67 A	A/C & HEAT SYSTEM
67 B	A/C & HEAT SYSTEM
67 C	HEAT WINDS.
67 K	A/C & HEAT SYSTEM-COND FAN CTR
67 L	A/C & HEAT SYSTEM-COND FAN CTR
67 V	A/C & HEAT SYSTEM-WATER VALVE
67 X	A/C & HEAT SYSTEM
68	DASH & DEFROST DAMPER MOTOR
68 A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72 A	SUN VISOR-RH
72 B	SUN VISOR-RH
72 C	SUN VISOR-LH
72 D	SUN VISOR-LH
76	FUEL TANK GAUGE
76 B	LOW FUEL LT & ETHER COLD START
76 C	LOW FUEL LT
76 P	FUEL PRIME PUMP
76 M	FUEL PRIME PUMP
77 A	A/C & HEAT SYSTEM-COMPRESSOR
77 B	A/C & HEAT SYSTEM-COMPRESSOR
77 C	A/C & HEAT SYSTEM-COMPRESSOR
77 H	A/C & HEAT SYSTEM-COMPRESSOR
77 K	GRD SIGNAL-COMPRESSOR CUT-OUT
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82 A	EXTERIOR LTS-STOP SIGNAL
82 B	EXTERIOR LTS-STOP LTS
82 K	EXTERIOR LTS-STOP PARK BRK
82 L	EXTERIOR LTS-LH STOP
82 R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85 A	24V IGN DASH INSTRUMENTATION
85 B	ENGINE CTR-24V IGNITION
85 C	PARKING BRAKE SWITCH
85 F	ENGINE CTR-ENGINE CTR SW IGN
85 F	LO AIR SONALERT
85 X	12V IGN ABS
85 Y	ABS SYSTEM
85 Z	TRAILER ABS SYSTEM
86	ENGINE CTR-STARTER SOL SIGN
86 A	ENGINE CTR-STARTER SOL SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90 B	A/C & HEAT SYSTEM-COND FAN MOT
90 B	ENGINE CTR-MAST KEY SW FEED
90 C	A/C & HEAT SYSTEM-COND FAN MOT
90 F	CHARG SYST-VOLTAGE REGUL. "B"
90 H	A/C & HEAT SYSTEM-EVAP FAN MOT
91	PARKING BRAKE SW SIGNAL
91 A	DDEC-FAST IDLE SIGNAL
91 S	SONALERT PARKING BRAKE
91 W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95 A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	24V STARTER TO GENERATOR DELCO
102	WORLD TRANSM-SOL. GRD 1
102	WORLD TRANSM-SOL. C3
102 A	24V STARTER TO GENERATOR BOSCH
104	WORLD TRANSM-SOL. FORWARD
104	LEVEL LOW SYSTEM
105	WORLD TRANSM-RETARDER & SUMP
105 W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	CHARG SYST-VOLTAGE REGUL. "F"
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114 A	INTERIOR LTS-DASH LT
114 B	INTERIOR LTS-DASH LT REGUL.
114 D	INTERIOR LTS-DASH LT REGUL.
114 E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115 C	DDEC III-COOLANT LEVEL
115 W	WORLD TRANSM-DO NOT SHIFT SIGN
116	WORLD TRANSM-LO SIGNAL SOL. HI
116 B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117 A	ALARM & SIGNAL-TRANSM OIL TEMP
117 A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122 A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123 A	ALARM & SIGNAL-FIRE DETECTOR
123 B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125 W	WORLD TRANSM-RET. INDICATOR
126	LEVEL LOW SYSTEM
126	WORLD TRANSM-LUBE PRESS SW.
127	WORLD TRANSM-LUBE PRESS SW.
127	PRE-HEAT WATER HEATER
127 A	PRE-HEAT WATER HEATER
127 B	PRE-HEAT WATER HEATER
127	WORLD TRANSM-RETARDER FEED SOL.
127 S	PRE-HEAT WATER HEATER
127 W	PRE-HEAT WATER HEATER
128	PRE-HEAT WATER HEATER
128 A	PRE-HEAT WATER HEATER
128 B	PRE-HEAT WATER HEATER
128 W	PRE-HEAT WATER HEATER
128	WORLD TRANSM-SOL. C2
129	PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	A/C HEAT SYSTEM-EVAP FAN MOT
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132 A	LEVEL LOW SYSTEM
132 B	LEVEL LOW SYSTEM
132 C	LEVEL LOW SYSTEM
132 D	LEVEL LOW SYSTEM
132 E	LEVEL LOW SYSTEM
132 F	LEVEL LOW SYSTEM
132 G	LEVEL LOW SYSTEM
132 H	LEVEL LOW SYSTEM
132 J	LEVEL LOW SYSTEM
132 K	LEVEL LOW SYSTEM
132 W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	WORLD TRANSM-RET. ACTUATOR HI
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135 A	A/C & HEAT SYSTEM-AIR SENSOR
135 D	A/C & HEAT SYSTEM-AIR SENSOR
135 C	A/C & HEAT SYSTEM-AIR SENSOR
135 D	WORLD TRANSM-RETARDER RES MOD
135 C	WORLD TRANSM-RETARDER TEMP
136	WORLD TRANSM-ECU POWER
136 V	WORLD TRANSM-12V BATTERY
136 W	WORLD TRANSM-12V BATTERY
136 X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137 A	MIRROR (SPARTAN & RAMCO)
137 B	RR VIEW MIRROR (SPARTAN)
137 C	RR VIEW MIRROR (SPARTAN)
137 D	RR VIEW MIRROR (SPARTAN)
137 E	RR VIEW MIRROR (SPARTAN)
137 G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138 A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143 A	ABS SYSTEM
143 W	WORLD TRANSM-BATTERY GRD
143 X	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144 A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146	WORLD TRANSM-IGNITION SENSE
146 W	WORLD TRANSM-12V IGNITION
146 X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	ETHER COLD START
147	WORLD TRANSM-OIL TEMP
147 C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI

CIRCUIT NUMBER CODE

No.	DESCRIPTION
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
152	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	WORLD TRANSM-SPARE INPUT (-)
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157B	ABS SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
165A	A/C & HEAT SYSTEM-TRANSMITER
165B	A/C & HEAT SYSTEM-TRANSMITER
165C	A/C & HEAT SYSTEM-TRANSMITER
165D	A/C & HEAT SYSTEM-TRANSMITER
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	A/C & HEAT SYSTEM-TEMP. CTR
167A	A/C & HEAT SYSTEM-TEMP. CTR
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170C	LUGGAGE DOOR LOCK
170D	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170F	LUGGAGE DOOR LOCK
170G	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
170K	LUGGAGE DOOR LOCK
170L	LUGGAGE DOOR LOCK
170M	LUGGAGE DOOR LOCK
170N	LUGGAGE DOOR LOCK
170P	LUGGAGE DOOR LOCK
170R	LUGGAGE DOOR LOCK
170S	LUGGAGE DOOR LOCK
170V	LUGGAGE DOOR LOCK
170W	LUGGAGE DOOR LOCK
170X	LUGGAGE DOOR LOCK
170Y	LUGGAGE DOOR LOCK
170Z	LUGGAGE DOOR LOCK
173	BACK-UP MONITOR
174	BACK-UP MONITOR
175	BACK-UP MONITOR
175A	BACK-UP MONITOR
175B	BACK-UP MONITOR
175C	BACK-UP MONITOR
180	DRIVER'S SEAT HEATER
180A	DRIVER'S SEAT HEATER
180B	CO-PILOT SEAT HEATER
180C	CO-PILOT SEAT HEATER
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
216B	24V SIGNAL AUX. LIQ. SOL. VALVE
216C	12 V. TRIGGER AUX. A/C UNIT
229	24 V. POWER AUX. A/C UNIT
229A	PWM SIGNAL - AUX . FAN UNIT
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251	DDEC III - PRODRIVER 12V H.W.
251A	DDEC III -DATA LOGGER 12V H.W.
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
264	S PEED SIGNAL- AUX. FAN UNIT
264A	SPEED SIGNAL- AUX. FAN UNIT
264B	SPEED SIGNAL- AUX. FAN UNIT
270	KEYLESS ENTRY SYSTEM
272	KEYLESS ENTRY SYSTEM
274	KEYLESS ENTRY SYSTEM
275	KEYLESS ENTRY SYSTEM
276	KEYLESS ENTRY SYSTEM
277	KEYLESS ENTRY SYSTEM
278	KEYLESS ENTRY SYSTEM
279	KEYLESS ENTRY SYSTEM
280	KEYLESS ENTRY SYSTEM
283	KEYLESS ENTRY SYSTEM
283A	KEYLESS ENTRY SYSTEM
284A	KEYLESS ENTRY SYSTEM
284B	KEYLESS ENTRY SYSTEM
285	KEYLESS ENTRY SYSTEM
285B	KEYLESS ENTRY SYSTEM
285C	KEYLESS ENTRY SYSTEM
286	KEYLESS ENTRY SYSTEM
286A	KEYLESS ENTRY SYSTEM
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
291	KEYLESS ENTRY SYSTEM
292	FAN CLUTCH RADIATOR SPD 2
293	KEYLESS ENTRY SYSTEM
294	ANTI-THEFT SYSTEM KEYLESS
295	LED FEED ALARM -KEYLESS
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE
540	DDEC III-CRUISE ENABLE LTS.
541	DDEC III-CRUISE SET SW
542	INPUT PARK BRAKE INTERLOCK
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
583	DDEC III-ENGINE BRAKE 4 CYL.
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
979	DDEC III-ENGINE BRAKE 2 CYL.

CIRCUIT NUMBER CODE

No.	DESCRIPTION
L 8	ENG. BLK HEATER
L 9	ENG. BLK HEATER
S P 2	SPARE-FJB TO FR SERV CPT
S P 3	SPARE-FJB TO CENTER DASH
S P 4	SPARE-FJB TO CENTER DASH
S P 5	SPARE-RJB TO LUGG CPT #2
S P 6	SPARE-RJB TO LUGG CPT #1
S P 7	SPARE-RJB TO LUGG CPT #1
S P 8	SPARE-RJB TO LUGG CPT #1
S P 9	SPARE-RJB TO LUGG CPT #2
S P 1 0	SPARE-RJB TO LUGG CPT #1
S P 1 1	SPARE-FJB TO RJB
S P 1 2	SPARE-RJB TO ENGINE
S P 1 3	SPARE-RJB TO ENGINE
S P 1 4	SPARE-FJB TO RJB
S P 1 5	SPARE-RJB TO ENGINE
S P 1 6	SPARE-RJB TO ENGINE
S P 1 7	SPARE-RJB TO ENGINE
S P 1 8	SPARE-FJB TO RJB
S P 2 4	SPARE-RJB TO LAVATORY ROOF
S P 2 5	SPARE-RJB TO LAVATORY ROOF
S P 2 6	SPARE-RJB TO LAVATORY ROOF
S P 2 7	SPARE-RJB TO LH HAT RACK
S P 2 8	SPARE-RJB TO LH HAT RACK
S P 3 1	SPARE-RJB TO RH HAT RACK
S P 3 2	SPARE-RJB TO RH HAT RACK
S P 3 3	SPARE-FJB TO RJB
S P 3 8	SPARE-FJB TO RJB
S P 4 3	SPARE-FJB TO RJB
S P 4 5	SPARE-FJB TO RJB
S P 4 6	SPARE-RJB TO LH FR ROOF
S P 4 8	SPARE-RJB TO DASH CENTER PANEL
S P 5 6	SPARE-ENGINE TO RH SW PANEL
S P 5 7	SPARE-DASH CENTER PANEL TO ENG.
S P 5 8	SPARE-DASH CENTER PANEL TO ENG.
S P 5 9	SPARE-FJB TO ENGINE
S P 6 1	SPARE-FJB TO DASH RH PANEL
S P 6 8	SPARE-FJB TO ENGINE
S P 6 9	SPARE-FJB TO FR AXLE
S P 7 0	SPARE-FJB TO FR AXLE
S P 7 1	SPARE-FJB TO RH SW PANEL
S P 7 2	SPARE-FJB TO FR SERV CPT
S P 7 4	SPARE-FJB TO LH CONSOLE
S P 7 7	SPARE-FJB TO EVAPORATOR CPT
S P 7 8	SPARE-FJB TO CONDENSER CPT
S P 7 9	SPARE-FJB TO CONDENSER CPT
S P 8 7	SPARE-RJB TO LH HAT RACK
S P 8 8	SPARE-RJB TO RH HAT RACK
S P 9 2	SPARE-RJB TO CONDENSER CPT
S P 9 3	SPARE-RJB TO EVAPORATOR CPT
S P 9 4	SPARE-RJB TO RR ROOF
S P 9 5	SPARE-RJB TO RR ROOF
S P 9 6	SPARE-RJB TO LUGG CPT #2
S P 9 7	SPARE-RJB TO LUGG CPT #3
S P 9 8	SPARE-RJB TO LUGG CPT #3
S P 1 0 4	SPARE-RJB TO ENGINE CPT
S P 1 0 5	SPARE-FJB TO ENGINE
S P 1 0 6	SPARE-RJB TO BATT. CPT.
S P 1 0 7	SPARE-RJB TO BATT. CPT.
S P 1 0 8	SPARE-RJB TO BATT. CPT.
S P 1 0 9	SPARE-RJB TO ENGINE CPT.
S P 1 1 0	SPARE-RJB TO ENGINE CPT.
S P 1 1 1	SPARE-RJB TO ENGINE CPT.
S P 1 1 2	SPARE-RJB TO ENGINE CPT.
S P 1 1 4	SPARE-FJB TO U/DASH WIPER
S P 1 1 5	SPARE-FJB TO U/DASH WIPER
S P 1 1 6	SPARE-FJB TO U/DASH FLOOR
S P 1 1 7	SPARE-FJB TO U/DASH FLOOR
W C	A/C & HEAT SYST-EVAP CTR SIGN
0	BC - BAT. CPT CHASSIS GRD
0	CONDENSER CPT GRD
0	RS - RR JCT BOX RLY GRD
0 A	BC - SHIELD GRD
0 A	RS - RR JCT BOX RLY GRD
0 A	FRS - FR ROOF ACCES. GRD
0 A	RS - LUG. CPT ACCES. GRD
0 A	A/C HEAT SYSTEM – EVAP. GRD
0 A A	RS - VOLTAGE REGULATOR GRD
0 B	EC - ENGINE GRD
0 B	FRS - FR ROOF HEAT WIND GRD
0 B	RS - LUG. CPT ACCES. GRD
0 B E	RJB - BAT. EQUAL. BAT GRD
0 C	EC - STARTER MOTOR GRD
0 C	FS - SERV. CPT ACCES. GRD
0 C	BC - FAN EVAP & CONDENSER GRD
0 C R	24V DISC. SW. RLY GRD SIGNAL
0 C S	24V DISC. SW. RLY GRD SIGNAL
0 C 1	FS - SERV. CPT ACCES. GRD
0 C 2	FS - SERV. CPT ACCES. GRD
0 C 3	FS - SERV. CPT ACCES. GRD
0 C 4	FS - FJB. CPT ACCES. GRD
0 D	BC - FAN CONDENSER GRD
0 D	RS - HAT RACK ACCES. LH GRD
0 D F	RS - RR SIDE FLASH & MARK GRD
0 D G	EC- ALTERNATOR CASING GRD
0 D R	RS - RJB DOCKING LT RESISTORS
0 J	FS - LH CONSOLE SW GRD
0 J	RS - RR ROOF ACCES. GRD
0 K	RS - RR ROOF ACCES. GRD
0 K	RS - RJB A/C JCT PANEL GRD
0 L	FS - FR SERVICE CPT LTS GRD
0 L 1	FS - FR SERVICE CPT LTS GRD
0 L 2	FS - FR SERVICE CPT LTS GRD
0 L 3	FS - FJB GRD
0 L 4	FS - FJB GRD
0 L 5	FS - CIGAR LIGHTER
0 L 6	FS - FR SERVICE CPT LTS GRD
0 L	RS - ENGINE CPT ACCES. GRD
0 L	ENTRANCE DOOR GRD
0 L H	RS - RR END LAMPS LH GRD
0 M	FS - ELECTRICAL MOTOR GRD
0 M 3	FS - ELECTRICAL MOTOR GRD
0 M 4	FS - ELECTRICAL MOTOR GRD
0 M 5	FS - ELECTRICAL MOTOR GRD
0 M 6	FS - FJB GRD
0 M 7	FS - ELECTRICAL MOTOR GRD
0 M 8	FS - AUX. A/C UNIT
0 M 9	FS - WATER PUMP DRIVER
0 M	RS - ENGINE CPT ACCES. GRD
0 M R	24V DISC. SW. RLY GRD SIGNAL
0 M S	24V DISC. SW. RLY GRD SIGNAL
0 N	RS - ENGINE CPT ACCES. GRD
0 P	RS - ENGINE CPT ACCES. GRD
0 R	RS - RJB GRD
0 R	RS - ENGINE CPT ACCES. GRD
0 R H	RS - RR END LAMPS RH GRD
0 S	12 VOLT RUN- GND RLY
0 S A	ENGINE CPT STUD-ALTERN. BOSCH
0 T	FS - DASH ACCES. GRD
0 T 1	FS - DASH ACCES. GRD
0 T 2	FS - DASH ACCES. GRD
0 T 3	FS - DASH ACCES. GRD
0 T 4	FS - DASH ACCES. GRD
0 T 5	FS - HVAC DASH MODULE. GRD
0 V	RR JCT BOX CPT GRD STUD
0 V A	BATTERY TO EQUALISER 0V
0 W	FS - WT GND & SHIELD
0 W	RS - RR JCT BOX (WCL) GRD
0 W C	RS - RR JCT BOX GRD (WCL)
0 X	RS - RR JCT BOX GRD
0 Y	ABS FR JCT BOX CPT GRD STUD
0 Y	RR JCT BOX GRD
0 Y 1	ABS SYSTEM GRD
0 Y 2	ABS SYSTEM GRD
0 Y 3	ABS SYSTEM GRD
0 Y 4	ABS SYSTEM GRD
0 Y 5	
0 Y 6	
0 Z	RR JCT BOX CPT GRD STUD
0 0	FJB & RJB BATT. GRD
0 0 A	FBG - T.T.LT. MODULES BATT. GRD
0 0 Y	FS - ABS MODULLE BATT. GRD
0 0 S S	SOUND SYSTEM BATT. GRD
1	TACHO SYSTEM - RPM SIGNAL +
2 A	A/C & HEAT SYSTEM-COOL 1 SIGN
2 B	A/C & HEAT SYSTEM-COOL SIGN
2 E	A/C & HEAT EVAP. CONTROL
2 F	A/C & HEAT EVAP. CONTROL
2 H	A/C & HEAT SYSTEM-HI PRESS SW
2 H L	A/C & HEAT SYSTEM-LO & HI PRESS SW
2 L	A/C & HEAT SYSTEM-LO PRESS SW
5 N C	SPEED SIGNAL LOWER 5MPH
5 N O	SPEED SIGNAL HIGHER 5MPH
9	INTERIOR LTS-ENGINE CPT
9 A	INTERIOR LTS-ENGINE CPT
9 B	INTERIOR LTS-ENGINE CPT
9 E	INTERIOR LTS-FR SERVICE CPT
9 F	INTERIOR LTS-FR SERVICE CPT
1 0	INTERIOR LTS-LUGGAGE CPT
1 0 A	INTERIOR LTS-LUGGAGE CPT
1 0 B	INTERIOR LTS-LUGGAGE CPT
1 0 C	INTERIOR LTS-LUGGAGE CPT
1 0 D	INTERIOR LTS-LUGGAGE CPT
1 0 E	INTERIOR LTS-EVAP. CPT
1 0 F	INTERIOR LTS-LUGGAGE CPT
1 0 H	INTERIOR LTS-LUGGAGE CPT
1 0 R	INTERIOR LTS-LUGGAGE DOOR AJAR
1 2	12V BAT ELECTRONIC JCT BLOCK
1 2	BAT CPT 12V BATTERY
1 2 A	FR JCT BOX 12V DISC SW
1 2 A	RR JCT BOX 12V DISC SW
1 2 B	12V BAT ELECTRICAL JCT BLOCK
1 2 B	RR JCT BOX 12V DISC SW
1 2 B	FR JCT BOX 12V DISC SW
1 2 B E	BAT. EQUALIZER MONITOR
1 2 C	FR JCT BOX 12V DISC SW
1 2 C	RR JCT BOX 12V DISC SW
1 2 D	BAT CPT 12V BATTERY
1 2 D T	TTLT MODULE
1 2 E	FR JCT BOX 12V DISC SW
1 2 E	RR JCT BOX 12V DISC SW
1 2 F	BAT CPT 12V FJB & IC
1 2 F	FR JCT BOX 12V DISC SW
1 2 F	RR JCT BOX 12V DISC SW
1 2 G	FR JCT BOX 12V DISC SW
1 2 J	FR JCT BOX 12V DISC SW
1 2 K	HVAC MODULE
1 2 I	12V IGNITION DISTRIBUTION
1 2 I	RR JCT BOX 12V IGNITION
1 2 I A	12V IGNITION DISTRIBUTION

CIRCUIT NUMBER CODE

No.	DESCRIPTION
12IA	FR JCT BOX 12V IGNITION
12IB	FR JCT BOX 12V IGNITION
12IE	ABS - FR JCT BOX 12V IGNITION
12LX	CLUSTER FEED
12IF	FR JCT BOX 12V IGNITION
12M	ABS – FR JCT BOX 12V DISC. SW.
12P	LH CONSOLE POWER OUTLET
12R	BAT CPT 12V DISC RLY TO RJB
12VA	BATTERY TO EQUALIZER 12V
12VD	12V HOT WIRE DISTRIBUTION
12VF	BAT CPT 12V FJB & IC
12VI	12V IGNITION DISTRIBUTION
12VR	BAT CPT 12V DISC RLY TO RJB
12W	12V BATTERY DDEC III
12X	FR JCT BOX 12V DISC SW
12X2	FR JCT BOX 12V DISC SW
12Y	FR JCT BOX 12V DISC SW
13A	ALARM & SIGNAL-LO AIR PRIM.
13B	ALARM & SIGNAL-LO AIR SEC.
15	EXTERIOR LTS-MULTI FUNC LEVEL
15A	WIPER & WASHER UPPER WINDSHIELD
16	SPEED - SIGNAL +
16A	SPEED - SIGNAL +
16T	SPEED - SIGNAL +
17	EXTERIOR LTS-FLASHER UNIT
17A	EXTERIOR LTS-FLASHER UNIT
19	DIFFERENTIAL OIL TEMP
20	SPEED - SIGNAL -
20T	SPEED - SIGNAL -
20W	SPEED - SIGNAL -
21	EXTERIOR LTS-DIRECTIONNAL LH
21A	EXTERIOR LTS-DIRECTIONNAL LH
21B	EXTERIOR LTS-HAZARD
21C	EXTERIOR LTS-CORNERING LH
21D	EXTERIOR LTS-DIRECTIONNAL LH
21H	EXTERIOR LTS-DIRECTIONNAL LH
21K	EXTERIOR LTS-CORNERING
21N	EXTERIOR LTS-CORNERING LH
21P	EXTERIOR LTS-CORNERING LH
22	LATCHING RLY.
23	EXTERIOR LTS-DIRECTIONNAL RH
23	EXTERIOR LTS-DIRECTIONNAL RH
23A	EXTERIOR LTS-DIRECTIONNAL RH
23B	EXTERIOR LTS-DIRECTIONNAL RH
23C	EXTERIOR LTS-CORNERING RH
23D	EXTERIOR LTS-DIRECTIONNAL RH
23N	EXTERIOR LTS-CORNERING RH
23P	EXTERIOR LTS-CORNERING RH
24	BAT CPT 24V BATTERY
24	FR JCT BOX 24V DISC SW

No.	DESCRIPTION
24A	BOOSTER BLOCK 24V DISC SW
24A	FR JCT BOX 24V DISC SW
24A	RR JCT BOX 24V DISC SW
24B	24V STARTER RLY FEEDING
24B	FR JCT BOX 24V DISC SW
24BE	RJB CPT-BAT EQ MONITOR HOT WIRE
24C	FR JCT BOX 24V DISC SW
24C	RR JCT BOX 24V DISC SW
24D	BAT CPT 24V HOT WIRE
24D	FR JCT BOX 24V HOT WIRE
24D	RR JCT BOX 24V HOT WIRE
24DA	A/C JCT BOX 24V HOT WIRE
24E	BAT CPT 24V DISC SW
24E	FR JCT BOX 24V DISC SW
24E	RR JCT BOX 24V DISC SW
24F	FR JCT BOX 24V DISC SW
24F	RR JCT BOX 24V DISC SW
24G	FR JCT BOX 24V DISC SW
24G	RR JCT BOX 24V DISC SW
24H	FR JCT BOX 24V DISC SW
24H	RR JCT BOX 24V DISC SW
24I	FR JCT BOX 24V IGNITION
24I	RR JCT BOX 24V IGNITION
24IA	FR JCT BOX 24V IGNITION
24IA	RR JCT BOX 24V IGNITION
24IB	FR JCT BOX 24V IGNITION
24IB	RR JCT BOX 24V IGNITION
24IF	FJB 24V IGNITION
24IC	FR JCT BOX 24V IGNITION
24P	FR JCT BOX 24V DISC SW
24S	24V DISC SW RLY SIGNAL
24T	RR JCT BOX 24V DISC SW
24V2	RR JCT BOX 24V DISC SW
24V3	RR JCT BOX 24V DISC SW
24V4	RR JCT BOX 24V DISC SW
24V5	RR JCT BOX 24V DISC SW
24VD	24V HOT WIRE DISTRIBUTION
24VF	BAT CPT 24V SW TO FJB & IC
24VA	BATTERY TO EQUALIZER 24V
24VI	RR JCT BOX 24V IGNITION
24VR	BAT CPT 24V DISC SW TO RJB
25	12VAC GEN RLY ON SIGNAL
25	12VAC GEN RLY ON SIGNAL
25A	ETHER SWITCH
25A	NOT ALTERNATOR #1-WARNING LT
25A1	24 VOLTS EXCITING SIGNAL - ALT. #1
25A2	24 VOLTS EXCITING SIGNAL - ALT. #2
25A3	24 V. SIGNAL ALT#1 OR ALT. #2 RUN
25F	12V IGNITION DISTRIBUTION
25B	EXTERIOR LTS-DAYTIME RUN LTS

No.	DESCRIPTION
25B	12 V. IGN. ALTERNATOR BOSCH
25C	12 V. SIGNAL ALT.#1 AND ALT.#2 RUN
25D	12 V. SIGNAL ALT.#1 AND ALT.#2 RUN
25H	24 V. IGN. ALTERNATOR BOSCH
25K	NOT ALTERNATOR #2-WARNING LT
26	CIGAR LIGHTER
26	DRIVER'S WINDOW LIFTER
26B	DRIVER'S WINDOW LIFTER
26C	DRIVER'S WINDOW LIFTER
27	PARKING BRAKE SONALERT
27A	PARKING BRAKE SONALERT
28A	A/C & HEAT SYSTEM-HI PRESSURE
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29A	A/C & HEAT SYSTEM-DRIVER'S HTR
29H	HVAC DASH MODULE
29B	A/C & HEAT SYSTEM-DRIVER'S HTR
31A	A/C & HEAT SYSTEM-UNLOADER
31B	A/C & HEAT SYSTEM-UNLOADER
31B	WIPER & WASHER SYSTEM
31C	WIPER & WASHER SYSTEM
31D	WIPER & WASHER SYSTEM
31E	WIPER & WASHER SYSTEM
31J	WIPER & WASHER SYSTEM
31X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32B	EXTERIOR LTS-BACK-UP
32C	BACK-UP PWR & SIGNAL
32D	BACK-UP ALARM
35	ENTRANCE DOOR
35B	ENTRANCE DOOR
36	JACOB BRAKE SYSREM
36A	JACOB BRAKE SYSREM
39	INTERIOR LTS-12V RH PANEL SW.
39A	INTERIOR LTS-DRIVER"S LTS
39B	DRIVER'S LTS KEYLESS
39K	DRIVER'S LTS KEYLESS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
43	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45A	WATER PUMP SIGNAL
45B	A/C & HEAT SYSTEM-HEAT SIGN
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN

No.	DESCRIPTION
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-COND. DOOR AJAR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
50	AIR DRYER
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
52B	ALARM & SIGNAL-AIR HORN
52C	ALARM & SIGNAL-AIR HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
53K	KEYLESS
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57A	EXTERIOR LTS-HI BEAM
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
57CA	A/C & HEAT SYSTEM-HEAT SIGN
57CC	A/C & HEAT SYSTEM-HEAT SIGN
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58C	DAYTIME RUNNING LIGHT
58D	DAYTIME RUNNING LIGHT
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
64	DRIVER'S FAN
64B	DRIVER'S FAN
64C	DRIVER'S FAN
65	FOOT DAMPER MOTOR

CIRCUIT NUMBER CODE

No.	DESCRIPTION
65 A	FOOT DAMPER MOTOR
65 D	DRIVER'S REC. DAMPER
65 P	PASSENGER REC. DAMPER
66	O_PASS. ON/OFF
67	A/C & HEAT SYSTEM
67 A	A/C & HEAT SYSTEM
67 B	A/C & HEAT SYSTEM
67 C	HEAT WINDS.
67 K	A/C & HEAT SYSTEM-COND FAN CTR
67 L	A/C & HEAT SYSTEM-COND FAN CTR
67 V	A/C & HEAT SYSTEM-WATER VALVE
67 X	A/C & HEAT SYSTEM
68	DASH & DEFROST DAMPER MOTOR
68 A	DASH & DEFROST DAMPER MOTOR
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72 A	SUN VISOR-RH
72 B	SUN VISOR-RH
72 C	SUN VISOR-LH
72 D	SUN VISOR-LH
76	FUEL TANK GAUGE
76 B	LOW FUEL LT & ETHER COLD START
76 C	LOW FUEL LT
76 P	FUEL PRIME PUMP
76 M	FUEL PRIME PUMP
77 A	A/C & HEAT SYSTEM-COMPRESSOR
77 B	A/C & HEAT SYSTEM-COMPRESSOR
77 C	A/C & HEAT SYSTEM-COMPRESSOR
77 H	A/C & HEAT SYSTEM-COMPRESSOR
77 K	GRD SIGNAL-COMPRESSOR CUT-OUT
81	EXTERIOR LTS-STOP SW
82	EXTERIOR LTS-STOP SIGNAL
82 A	EXTERIOR LTS-STOP SIGNAL
82 B	EXTERIOR LTS-STOP LTS
82 K	EXTERIOR LTS-STOP PARK BRK
82 L	EXTERIOR LTS-LH STOP
82 R	EXTERIOR LTS-LH STOP
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW ACCES SIGN
85	ENGINE CTR-KEY SWIGNITION SIGN
85	24V IGNITION SIGNAL
85 A	24V IGN DASH INSTRUMENTATION
85 B	ENGINE CTR-24V IGNITION
85 C	PARKING BRAKE SWITCH
85 F	ENGINE CTR-ENGINE CTR SW IGN
85 F	LO AIR SONALERT
85 X	12V IGN ABS
85 Y	ABS SYSTEM
85 Z	TRAILER ABS SYSTEM
86	ENGINE CTR-STARTER SOL SIGN
86 A	ENGINE CTR-STARTER SOL SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90 B	A/C & HEAT SYSTEM-COND FAN MOT
90 B	ENGINE CTR-MAST KEY SW FEED
90 C	A/C & HEAT SYSTEM-COND FAN MOT
90 F	CHARG SYST-VOLTAGE REGUL. "B"
90 H	A/C & HEAT SYSTEM-EVAP FAN MOT
91	PARKING BRAKE SW SIGNAL
91 A	DDEC-FAST IDLE SIGNAL
91 S	SONALERT PARKING BRAKE
91 W	PARK, BRAKE SW SIGN (WCL)
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95 A	ENGINE BRAKE & RETARDER SYSTEM
97	TACHOMETER (-)
101	24V STARTER SOL FEEDING
101	WORLD TRANSM-LO SIGN SOL. LO
102	24V STARTER TO GENERATOR DELCO
102	WORLD TRANSM-SOL. GRD 1
102	WORLD TRANSM-SOL. C3
102 A	24V STARTER TO GENERATOR BOSCH
104	WORLD TRANSM-SOL. FORWARD
104	LEVEL LOW SYSTEM
105	WORLD TRANSM-RETARDER & SUMP
105 W	WORLD TRANSM-RETARDER & SUMP
106	WORLD TRANSM-OIL LEVEL HI
107	CHARG SYST-VOLTAGE REGUL. "F"
107	WORLD TRANSM-LOCKUP SOL. HI
108	WORLD TRANSM-REM. PWR WAKE UP
109	WORLD TRANSM-RET. SOL. LO
110	ALARM & SIGNAL-WATER TEMP
110	WORLD TRANSM-LOCKUP SOL. LO
111	WORLD TRANSM-SOL. C6
112	WORLD TRANSM-SPARE OUTPUT (+)
113	ALARM & SIGNAL-OIL PRESS
113	WORLD TRANSM-REVERSE WARNING
114	INTERIOR LTS-DASH LT REGUL.
114	WORLD TRANSM-SPARE OUTPUT (-)
114 A	INTERIOR LTS-DASH LT
114 B	INTERIOR LTS-DASH LT REGUL.
114 D	INTERIOR LTS-DASH LT REGUL.
114 E	INTERIOR LTS-DASH LT REGUL.
115	ALARM & SIGNAL-TAG PRESS
115	DDEC III-COOLANT LEVEL
115	WORLD TRANSM-DO NOT SHIFT SIGN
115 C	DDEC III-COOLANT LEVEL
115 W	WORLD TRANSM-DO NOT SHIFT SIGN
116	WORLD TRANSM-LO SIGNAL SOL. HI
116 B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	WORLD TRANSM-SPARE INPUT (-)
117 A	ALARM & SIGNAL-TRANSM OIL TEMP
117 A	ALARM & SIGNAL-TRANSM OIL TEMP
118	WORLD TRANSM-SPARE INPUT (+)
119	WORLD TRANSM-ENG BRK INPUT (+)
120	WORLD TRANSM-SOL. C1
121	WORLD TRANSM-SOL. GRD 2
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122	WORLD TRANSM-SOL. GRD 4
122 A	A/C & HEAT SYSTEM-FRESH AIR
123	WORLD TRANSM-NEUTRAL START
123 A	ALARM & SIGNAL-FIRE DETECTOR
123 B	ALARM & SIGNAL-FIRE DETECTOR
124	WORLD TRANSM-THROTTLE (HI)
125	WORLD TRANSM-RET. INDICATOR
125 W	WORLD TRANSM-RET. INDICATOR
126	LEVEL LOW SYSTEM
126	WORLD TRANSM-LUBE PRESS SW.
127	WORLD TRANSM-LUBE PRESS SW.
127	PRE-HEAT WATER HEATER
127 A	PRE-HEAT WATER HEATER
127 B	PRE-HEAT WATER HEATER
127	WORLD TRANSM-RETARDER FEED SOL.
127 S	PRE-HEAT WATER HEATER
127 W	PRE-HEAT WATER HEATER
128	PRE-HEAT WATER HEATER
128 A	PRE-HEAT WATER HEATER
128 B	PRE-HEAT WATER HEATER
128 W	PRE-HEAT WATER HEATER
128	WORLD TRANSM-SOL. C2
129	PRE-HEAT WATER HEATER
129	WORLD TRANSM-SOL. C5
130	A/C HEAT SYSTEM-EVAP FAN MOT
130	WORLD TRANSM-SOL. GRD 3
131	WORLD TRANSM-SOL. C4
132	WORLD TRANSM-ENG BRK OUTPUT (-)
132 A	LEVEL LOW SYSTEM
132 B	LEVEL LOW SYSTEM
132 C	LEVEL LOW SYSTEM
132 D	LEVEL LOW SYSTEM
132 E	LEVEL LOW SYSTEM
132 F	LEVEL LOW SYSTEM
132 G	LEVEL LOW SYSTEM
132 H	LEVEL LOW SYSTEM
132 J	LEVEL LOW SYSTEM
132 K	LEVEL LOW SYSTEM
132 W	WORLD TRANSM-ENG BRK OUTPUT (-)
133	WORLD TRANSM-RET. ACTUATOR HI
134	WORLD TRANSM-RET. APPLY SOL. HI
135	A/C & HEAT SYSTEM-AIR SENSOR
135	WORLD TRANSM-ANALOG GRD
135 A	A/C & HEAT SYSTEM-AIR SENSOR
135 D	A/C & HEAT SYSTEM-AIR SENSOR
135 C	A/C & HEAT SYSTEM-AIR SENSOR
135 D	WORLD TRANSM-RETARDER RES MOD
135 C	WORLD TRANSM-RETARDER TEMP
136	WORLD TRANSM-ECU POWER
136 V	WORLD TRANSM-12V BATTERY
136 W	WORLD TRANSM-12V BATTERY
136 X	WORLD TRANSM-12V BATTERY
137	WORLD TRANSM-RETARDER
137 A	MIRROR (SPARTAN & RAMCO)
137 B	RR VIEW MIRROR (SPARTAN)
137 C	RR VIEW MIRROR (SPARTAN)
137 D	RR VIEW MIRROR (SPARTAN)
137 E	RR VIEW MIRROR (SPARTAN)
137 G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138	WORLD TRANSM-RETARDER TEMP
138 A	ABS SYSTEM
139	ABS SYSTEM
139	WORLD TRANSM-OUTPUT SPEED HI
140	ABS SYSTEM
140	WORLD TRANSM-OUTPUT SPEED LO
141	ABS SYSTEM
141	WORLD TRANSM-ENGINE SPEED HI
142	ABS SYSTEM
142	WORLD TRANSM-SERIAL COM. A
143	ABS SYSTEM
143	WORLD TRANSM-ECU BATTERY GRD
143 A	ABS SYSTEM
143 W	WORLD TRANSM-BATTERY GRD
143 X	WORLD TRANSM-BATTERY GRD
144	ABS SYSTEM
144	WORLD TRANSM-ECU CHASSIS GRD
144 A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
146	WORLD TRANSM-IGNITION SENSE
146 W	WORLD TRANSM-12V IGNITION
146 X	WORLD TRANSM-12V IGNITION
147	ABS SYSTEM
147	ETHER COLD START
147	WORLD TRANSM-OIL TEMP
147 C	ETHER COLD START
148	ABS SYSTEM
148	WORLD TRANSM-OUTPUT SPEED LO
149	ABS SYSTEM
149	WORLD TRANSM-TURBINE SPEED HI

CIRCUIT NUMBER CODE

No.	DESCRIPTION
149A	ABS SYSTEM
150	DDEC III-ECM BATTERY GRD
150	WORLD TRANSM-ENGINE SPEED LO
150A	DDEC III-ECM BATTERY GRD
151	ABS SYSTEM
151	DDEC III-ECM BATTERY GRD
151	WORLD TRANSM-SERIAL COM. B
152	ABS SYSTEM
153	WORLD TRANSM-SPARE INPUT (-)
154	ABS SYSTEM
154	WORLD TRANSM-ABS RET. INPUT
155	WORLD TRANSM-SPARE INPUT (-)
156	WORLD TRANSM-THROTTLE POS.
156A	ABS SYSTEM
157	WORLD TRANSM-SPEEDO SIGNAL
157B	ABS SYSTEM
158	WORLD TRANSM-DIMMER
160	ALARM & SIGNAL-TAG PRESS SW
160	WORLD TRANSM-SER. INTERFACE (-)
161	WORLD TRANSM-SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD
162	WORLD TRANSM-PRESS. SW C3
163	WORLD TRANSM-RETARDER ENABLE
164	WORLD TRANSM-RET. ACTUATOR SIGN
165	A/C & HEAT SYSTEM-TRANSMITER
165	WORLD TRANSM-OIL LEVEL SIGNAL
165A	A/C & HEAT SYSTEM-TRANSMITER
165B	A/C & HEAT SYSTEM-TRANSMITER
165C	A/C & HEAT SYSTEM-TRANSMITER
165D	A/C & HEAT SYSTEM-TRANSMITER
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	A/C & HEAT SYSTEM-TEMP. CTR
167A	A/C & HEAT SYSTEM-TEMP. CTR
168	A/C & HEAT SYSTEM-HUMIDISTAT
168	WORLD TRANSM-SER. INTERFACE (+)
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170C	LUGGAGE DOOR LOCK
170D	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170F	LUGGAGE DOOR LOCK
170G	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
170K	LUGGAGE DOOR LOCK
170L	LUGGAGE DOOR LOCK
170M	LUGGAGE DOOR LOCK
170N	LUGGAGE DOOR LOCK
170P	LUGGAGE DOOR LOCK
170R	LUGGAGE DOOR LOCK
170S	LUGGAGE DOOR LOCK
170V	LUGGAGE DOOR LOCK
170W	LUGGAGE DOOR LOCK
170X	LUGGAGE DOOR LOCK
170Y	LUGGAGE DOOR LOCK
170Z	LUGGAGE DOOR LOCK
173	BACK-UP MONITOR
174	BACK-UP MONITOR
175	BACK-UP MONITOR
175A	BACK-UP MONITOR
175B	BACK-UP MONITOR
175C	BACK-UP MONITOR
180	DRIVER'S SEAT HEATER
180A	DRIVER'S SEAT HEATER
180B	CO-PILOT SEAT HEATER
180C	CO-PILOT SEAT HEATER
181A	THERMOMETER INSIDE SENSOR
181B	THERMOMETER INSIDE SENSOR
181C	THERMOMETER OUTSIDE SENSOR
181D	THERMOMETER OUTSIDE SENSOR
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
198	FILTER FUEL HEATER
199	AIR FILTER RESTRICTION SENDER
201	WORLD TRANSM-SPARE
202	WORLD TRANSM-SPARE
203	WORLD TRANSM-SPARE
204	WORLD TRANSM-SPARE
205	WORLD TRANSM-SPARE
206	WORLD TRANSM-SPARE
214	WORLD TRANSM-BACK UP SIGNAL
216B	24V SIGNAL AUX. LIQ. SOL. VALVE
216C	12 V. TRIGGER AUX. A/C UNIT
229	24 V. POWER AUX. A/C UNIT
229A	PWM SIGNAL - AUX . FAN UNIT
231	NEUTRAL SIGNAL GRD
231A	NEUTRAL COIL RELAY FEED SIGNAL
231W	NEUTRAL SIGNAL GRD (WCL)
240	DDEC III-ECM 12V FEEDING
241	DDEC III-ECM 12V FEEDING
251	DDEC III - PRODRIVER 12V H.W.
251A	DDEC III -DATA LOGGER 12V H.W.
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
257C	WINDSHIELD HEATED
257D	WINDSHIELD HEATED SPARE
257E	WINDSHIELD HEATED SPARE
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
264	S PEED SIGNAL- AUX. FAN UNIT
264A	SPEED SIGNAL- AUX. FAN UNIT
264B	SPEED SIGNAL- AUX. FAN UNIT
270	KEYLESS ENTRY SYSTEM
272	KEYLESS ENTRY SYSTEM
274	KEYLESS ENTRY SYSTEM
275	KEYLESS ENTRY SYSTEM
276	KEYLESS ENTRY SYSTEM
277	KEYLESS ENTRY SYSTEM
278	KEYLESS ENTRY SYSTEM
279	KEYLESS ENTRY SYSTEM
280	KEYLESS ENTRY SYSTEM
283	KEYLESS ENTRY SYSTEM
283A	KEYLESS ENTRY SYSTEM
284A	KEYLESS ENTRY SYSTEM
284B	KEYLESS ENTRY SYSTEM
285	KEYLESS ENTRY SYSTEM
285B	KEYLESS ENTRY SYSTEM
285C	KEYLESS ENTRY SYSTEM
286	KEYLESS ENTRY SYSTEM
286A	KEYLESS ENTRY SYSTEM
290	FAN CLUTCH RADIATOR
290	FAN CLUTCH RADIATOR
291	FAN CLUTCH RADIATOR SPD 1
291	KEYLESS ENTRY SYSTEM
292	FAN CLUTCH RADIATOR SPD 2
293	KEYLESS ENTRY SYSTEM
294	ANTI-THEFT SYSTEM KEYLESS
295	LED FEED ALARM -KEYLESS
417	DDEC III-LIMIT SPEED GOVERNOR
419	DDEC III-CHECK ENGINE LIGHT
439	DDEC III-12V IGNITION
440	DDEC III-12V IGNITION
440A	DDEC III-12V IGNITION
451	DDEC III-A/C FAN CLUTCH
505	DDEC III-TACHOMETER DRIVE
509	DDEC III-STOP ENGINE LIGHT
510	DDEC III-FAST IDLE SIGNAL
524	DDEC III-ENGINE BRAKE DISABLE
525	DDEC III-FAST IDLE SIGNAL
528	DDEC III-STOP ENG. OVERRIDE
531	DDEC III-CRUISE CLUTCH RELEASE
540	DDEC III-CRUISE ENABLE LTS.
541	DDEC III-CRUISE SET SW
542	INPUT PARK BRAKE INTERLOCK
543	DDEC III-CRUISE STOP SW CUT IN
544	DDEC III-CRUISE ON/OFF SW
545	DDEC III-CRUISE RESUME SW
555	DDEC III-FAN CLUTCH SPEED# 1
556	DDEC III-VEHICLE SPEED (+)
557	DDEC III-VEHICLE SPEED (-)
563	DDEC III-FAN CLUTCH SPEED# 2
564	DDEC III-DIGITAL OUTPUT
565	DDEC III-ENGINE BRAKE ACTIVE
583	DDEC III-ENGINE BRAKE 4 CYL.
900	DDEC III-DATA LINK (+)
901	DDEC III-DATA LINK (-)
908	DDEC III-HYDRAULIC PWM#1 OUTPUT
916	DDEC III-SENSOR SUPPLY (5VDC)
952	DDEC III-SENSOR RETURN
953	DDEC III-BATTERY GRD
979	DDEC III-ENGINE BRAKE 2 CYL.

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 1	2.1	40A	560703	BAT. CPT.	12V IGNITION
CB 2	1.1	40A	870093	BAT. CPT.	12V HOT WIRE
CB 3	1.1	40A	560703	BAT. CPT.	12V FEED RR. JCT. BOX
CB 4	1.1	40A	560703	BAT. CPT.	12V FEED FR. JCT. BOX
CB 5	1.1	30A	870690	BAT. CPT.	24V HOT WIRE
CB 6	1.1	90A	560298	BAT. CPT.	24V FEED RR. JCT. BOX
CB 7	1.1	90A	560298	BAT. CPT.	24V FEED FR. JCT. BOX
CB 8	1.1	150A	560299	BAT. CPT.	24V EVAPORATOR FAN MOTOR
CB 9					
CB 10	4.1	8A	561791	FR. JCT. BOX	MASTER KEY SWITCH
CB 11					
CB 12					
CB 13					
CB 14					
CB 15					
CB 16	4.1	8A	561791	RR. JCT. BOX	ENGINE-RR. CTRL & START SW.
CB 17					
CB 18	4.1	6A	561790	RR. JCT. BOX	ENGINE-FR. CTRL SW.
CB 19	5.1	15A	561793	BAT. CPT.	E.C.M. DDEC III 12V POWER
CB 20	5.1	15A	561793	BAT. CPT.	E.C.M. DDEC III 12V POWER
CB 21	5.1	6A	561790	BAT. CPT.	E.C.M. DDEC III 12V IGNITION
CB 22					
CB 23					
CB 24	6.1	20A	561794	BAT. CPT.	WORLD TRANSMISSION 12V POWER
CB 25					
CB 26	9.3	10A	561792	RR. JCT. BOX	BACK-UP LTS
CB 27	7.1	8A	561791	FR. JCT. BOX	24V IGNITION DASH ACCESSORIES
CB 28	7.2	6A	561790	FR. JCT. BOX	12V IGNITION DASH ACCESSORIES
CB 29					
CB 30					
CB 31					
CB 32					
CB 33					
CB 34	9.3	6A	561790	RR. JCT. BOX	BACK-UP ALARM
CB 35	9.3	15A	561790	FR. JCT. BOX	FOG & HAZARD DASH SW.
CB 36					
CB 37	9.1	6A	561790	FR. JCT. BOX	HEAD & MULTI-FUNCTION LEVEL SW.
CB 38	9.1	10A	561792	FR. JCT. BOX	FR. MARKER LTS
CB 39	9.1	20A	561794	FR. JCT. BOX	CLEARANCE & IDENTIFICATION LTS
CB 40	9.1	8A	561791	FR. JCT. BOX	FR. CLEARANCE & IDENTIFICATION LTS
CB 41	9.1	8A	561791	RR. JCT. BOX	RR. CLEARANCE & IDENTIFICATION LTS
CB 42	9.1	8A	561791	RR. JCT. BOX	RR. TAIL & LICENCE LTS
CB 43	9.1	20A	561794	FR. JCT. BOX	HEADLAMP (HI)
CB 44	9.1	15A	561793	FR. JCT. BOX	HEADLAMP (LO)
CB 45	9.2	10A	561792	FR. JCT. BOX	WIPER CTRL MULTI-FUNCTION LEVEL SW.
CB 46	9.2	20A	561794	FR. JCT. BOX	FLASHER & HAZARD UNIT
CB 47					
CB 48	9.3	6A	561790	FR. JCT. BOX	STOP LTS PRESSURE SW.
CB 49	9.3	15A	561793	RR. JCT. BOX	STOP & CYCLOP LTS
CB 50					
CB 51	10.1	10A	561792	FR. JCT. BOX	UPPER WIPER CTRL SW.
CB 52	11.1	15A	561793	RR. JCT. BOX	LUGGAGE & DOOR AJAR LTS
CB 53					
CB 54					
CB 55					
CB 56					
CB 57	11.2	8A	561791	FR. JCT. BOX	DASH LTS RHEOSTAT
CB 58	15.1	6A	561790	FR. JCT. BOX	HVAC DASH MODULE

No.	PAGE	AMP.	#PREV	LOCATION	FUNCTION
CB 59					
CB 60					
CB 61					
CB 62					
CB 63					
CB 64					
CB 65					
CB 66					
CB 67					
CB 68					
CB 69					
CB 70	15.1	6A	561790	FR. JCT. BOX	A/C & HEAT SW.
CB 71	15.1	10A	561792	RR. JCT. BOX	A/C & HEAT LOGIC PANEL
CB 72	15.1	10A	561792	RR. JCT. BOX	A/C COMPRESSOR CLUTCH
CB 73	15.1	15A	561793	RR. JCT. BOX	WATER PUMP
CB 74					
CB 75					
CB 76					
CB 77	15.2	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR RH
CB 78	15.2	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR LH
CB 79	15.2	15A	561793	FR. JCT. BOX	DRIVER'S HTR FAN SPEED CTRL MODULE
CB 80					
CB 81					
CB 82					
CB 83					
CB 84					
CB 85	11.2	10A	561790	FR. JCT. BOX	ENTRANCE DOOR & STEP LTS
CB 86					
CB 87					
CB 88					
CB 89					
CB 90					
CB 91					
CB 92					
CB 93					
CB 94					
CB 95					
CB 96					
CB 97					
CB 98					
CB 99					
CB 100					
CB 101					
CB 102					
CB 103					
CB 104					
CB 105	22.1	6A	561790	FR. JCT. BOX	E.C.U. ABS
CB 106	22.1	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 107	22.1	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 108					
CB 118	12.1	20A	561794	RR. JCT. BOX	KEYLESS ENTRY SYS. - LUGGAGE DOOR LOCK
CB 120	12.1	20A	561794	RR. JCT. BOX	KEYLESS ENTRY SYS. - LUGGAGE DOOR LOCK
CB 123	13.1	25A	561795	FR. JCT. BOX	DRIVER'S SEAT ELECTRICAL ADJUSTMENT
CB 124	8.1	6A	561790	RR. JCT. BOX	RADIATOR FAN CLUTCH
CB 129	7.2	6A	561790	FR. JCT. BOX	CLUSTER
CB 130	23.1	6A	561790	FR. JCT. BOX	TELL TALE LIGHTS MODULE

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 1	2.1	40A	560703	BAT. CPT.	12V IGNITION
CB 2	1.1	40A	870093	BAT. CPT.	12V HOT WIRE
CB 3	1.1	40A	560703	BAT. CPT.	12V FEED RR. JCT. BOX
CB 4	1.1	40A	560703	BAT. CPT.	12V FEED FR. JCT. BOX
CB 5	1.1	30A	870690	BAT. CPT.	24V HOT WIRE
CB 6	1.1	90A	560298	BAT. CPT.	24V FEED RR. JCT. BOX
CB 7	1.1	90A	560298	BAT. CPT.	24V FEED FR. JCT. BOX
CB 8	1.1	150A	560299	BAT. CPT.	24V EVAPORATOR FAN MOTOR
CB 9					
CB 10	4.1	8A	561791	FR. JCT. BOX	MASTER KEY SWITCH
CB 11					
CB 12					
CB 13					
CB 14					
CB 15					
CB 16	4.1	8A	561791	RR. JCT. BOX	ENGINE-RR. CTRL & START SW.
CB 17					
CB 18	4.1	6A	561790	RR. JCT. BOX	ENGINE-FR. CTRL SW.
CB 19	5.1	15A	561793	BAT. CPT.	E.C.M. DDEC III 12V POWER
CB 20	5.1	15A	561793	BAT. CPT.	E.C.M. DDEC III 12V POWER
CB 21	5.1	6A	561790	BAT. CPT.	E.C.M. DDEC III 12V IGNITION
CB 22					
CB 23					
CB 24	6.1	20A	561794	BAT. CPT.	WORLD TRANSMISSION 12V POWER
CB 25					
CB 26	9.3	10A	561792	RR. JCT. BOX	BACK-UP LTS
CB 27	7.1	8A	561791	FR. JCT. BOX	24V IGNITION DASH ACCESSORIES
CB 28	7.2	6A	561790	FR. JCT. BOX	12V IGNITION DASH ACCESSORIES
CB 29					
CB 30					
CB 31					
CB 32					
CB 33					
CB 34	9.3	6A	561790	RR. JCT. BOX	BACK-UP ALARM
CB 35	9.3	15A	561790	FR. JCT. BOX	FOG & HAZARD DASH SW.
CB 36					
CB 37	9.1	6A	561790	FR. JCT. BOX	HEAD & MULTI-FUNCTION LEVEL SW.
CB 38	9.1	10A	561792	FR. JCT. BOX	FR. MARKER LTS
CB 39	9.1	20A	561794	FR. JCT. BOX	CLEARANCE & IDENTIFICATION LTS
CB 40	9.1	8A	561791	FR. JCT. BOX	FR. CLEARANCE & IDENTIFICATION LTS
CB 41	9.1	8A	561791	RR. JCT. BOX	RR. CLEARANCE & IDENTIFICATION LTS
CB 42	9.1	8A	561791	RR. JCT. BOX	RR. TAIL & LICENCE LTS
CB 43	9.1	20A	561794	FR. JCT. BOX	HEADLAMP (HI)
CB 44	9.1	15A	561793	FR. JCT. BOX	HEADLAMP (LO)
CB 45	9.2	10A	561792	FR. JCT. BOX	WIPER CTRL MULTI-FUNCTION LEVEL SW.
CB 46	9.2	20A	561794	FR. JCT. BOX	FLASHER & HAZARD UNIT
CB 47					
CB 48	9.3	6A	561790	FR. JCT. BOX	STOP LTS PRESSURE SW.
CB 49	9.3	15A	561793	RR. JCT. BOX	STOP & CYCLOP LTS
CB 50					
CB 51	10.1	10A	561792	FR. JCT. BOX	UPPER WIPER CTRL SW.
CB 52	11.1	15A	561793	RR. JCT. BOX	LUGGAGE & DOOR AJAR LTS
CB 53					
CB 54					
CB 55					
CB 56					
CB 57	11.2	8A	561791	FR. JCT. BOX	DASH LTS RHEOSTAT
CB 58	15.1	6A	561790	FR. JCT. BOX	HVAC DASH MODULE

No.	PAGE	AMP.	#PREV	LOCATION	FUNCTION
CB 59					
CB 60					
CB 61					
CB 62					
CB 63					
CB 64					
CB 65					
CB 66					
CB 67					
CB 68					
CB 69					
CB 70	15.1	6A	561790	FR. JCT. BOX	A/C & HEAT SW.
CB 71	15.1	10A	561792	RR. JCT. BOX	A/C & HEAT LOGIC PANEL
CB 72	15.1	10A	561792	RR. JCT. BOX	A/C COMPRESSOR CLUTCH
CB 73	15.1	15A	561793	RR. JCT. BOX	WATER PUMP
CB 74					
CB 75					
CB 76					
CB 77	15.2	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR RH
CB 78	15.2	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR LH
CB 79	15.2	15A	561793	FR. JCT. BOX	DRIVER'S HTR FAN SPEED CTRL MODULE
CB 80					
CB 81					
CB 82					
CB 83					
CB 84					
CB 85	11.2	10A	561790	FR. JCT. BOX	ENTRANCE DOOR & STEP LTS
CB 86					
CB 87					
CB 88					
CB 89					
CB 90					
CB 91					
CB 92					
CB 93					
CB 94					
CB 95					
CB 96					
CB 97					
CB 98					
CB 99					
CB 102					
CB 103					
CB 104					
CB 105	22.1	6A	561790	FR. JCT. BOX	E.C.U. ABS
CB 106	22.1	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 107	22.1	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 108					
CB 118	12.1	20A	561794	RR. JCT. BOX	KEYLESS ENTRY SYS. - LUGGAGE DOOR LOCK
CB 120	12.1	20A	561794	RR. JCT. BOX	KEYLESS ENTRY SYS. - LUGGAGE DOOR LOCK
CB 123	13.1	25A	561795	FR. JCT. BOX	DRIVER'S SEAT ELECTRICAL ADJUSTMENT
CB 124	8.1	6A	561790	RR. JCT. BOX	RADIATOR FAN CLUTCH
CB 129	7.2	6A	561790	FR. JCT. BOX	CLUSTER
CB 130	23.1	6A	561790	FR. JCT. BOX	TELL TALE LIGHTS MODULE
CB 131	4.2	6A	561790	RR. JCT BOX	24 V. IGN. - ALTERNATOR BOSCH
CB 132	4.2	6A	561790	RR. JCT BOX	12 V. IGN. - ALTERNATOR BOSCH

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 1	2.1	40A	560703	BAT. CPT.	12V IGNITION
CB 2	1.1	40A	870093	BAT. CPT.	12V HOT WIRE
CB 3	1.1	40A	560703	BAT. CPT.	12V FEED RR. JCT. BOX
CB 4	1.1	40A	560703	BAT. CPT.	12V FEED FR. JCT. BOX
CB 5	1.1	30A	870690	BAT. CPT.	24V HOT WIRE
CB 6	1.1	90A	560298	BAT. CPT.	24V FEED RR. JCT. BOX
CB 7	1.1	90A	560298	BAT. CPT.	24V FEED FR. JCT. BOX
CB 8	1.1	150A	560299	BAT. CPT.	24V EVAPORATOR FAN MOTOR
CB 9					
CB 10	4.1	8A	561791	FR. JCT. BOX	MASTER KEY SWITCH
CB 11					
CB 12					
CB 13					
CB 14					
CB 15					
CB 16	4.1	8A	561791	RR. JCT. BOX	ENGINE-RR. CTRL & START SW.
CB 17					
CB 18	4.1	6A	561790	RR. JCT. BOX	ENGINE-FR. CTRL SW.
CB 19	5.1	15A	561793	BAT. CPT.	E.C.M. DDEC III 12V POWER
CB 20	5.1	15A	561793	BAT. CPT.	E.C.M. DDEC III 12V POWER
CB 21	5.1	10A	561792	RR. JCT. BOX	E.C.M. DDEC AND WTEC 12V IGNITION
CB 22					
CB 23					
CB 24	6.1	20A	561794	BAT. CPT.	WORLD TRANSMISSION 12V POWER
CB 25					
CB 26	9.3	10A	561792	RR. JCT. BOX	BACK-UP LTS
CB 27	7.1	8A	561791	FR. JCT. BOX	24V IGNITION DASH ACCESSORIES
CB 28	7.2	6A	561790	FR. JCT. BOX	12V IGNITION DASH ACCESSORIES
CB 29					
CB 30					
CB 31					
CB 32					
CB 33					
CB 34	9.3	6A	561790	RR. JCT. BOX	BACK-UP ALARM
CB 35	9.3	15A	561790	FR. JCT. BOX	FOG & HAZARD DASH SW.
CB 36					
CB 37	9.1	6A	561790	FR. JCT. BOX	HEAD & MULTI-FUNCTION LEVEL SW.
CB 38	9.1	10A	561792	FR. JCT. BOX	FR. MARKER LTS
CB 39	9.1	20A	561794	FR. JCT. BOX	CLEARANCE & IDENTIFICATION LTS
CB 40	9.1	8A	561791	FR. JCT. BOX	FR. CLEARANCE & IDENTIFICATION LTS
CB 41	9.1	8A	561791	RR. JCT. BOX	RR. CLEARANCE & IDENTIFICATION LTS
CB 42	9.1	8A	561791	RR. JCT. BOX	RR. TAIL & LICENCE LTS
CB 43	9.1	20A	561794	FR. JCT. BOX	HEADLAMP (HI)
CB 44	9.1	15A	561793	FR. JCT. BOX	HEADLAMP (LO)
CB 45	9.2	10A	561792	FR. JCT. BOX	WIPER CTRL MULTI-FUNCTION LEVEL SW.
CB 46	9.2	20A	561794	FR. JCT. BOX	FLASHER & HAZARD UNIT
CB 47					
CB 48	9.3	6A	561790	FR. JCT. BOX	STOP LTS PRESSURE SW.
CB 49	9.3	15A	561793	RR. JCT. BOX	STOP & CYCLOP LTS
CB 50					
CB 51	10.1	10A	561792	FR. JCT. BOX	UPPER WIPER CTRL SW.
CB 52	11.1	15A	561793	RR. JCT. BOX	LUGGAGE & DOOR AJAR LTS
CB 53					
CB 54					
CB 55					
CB 56					
CB 57	11.2	8A	561791	FR. JCT. BOX	DASH LTS RHEOSTAT
CB 58	15.1	6A	561790	FR. JCT. BOX	HVAC DASH MODULE

No.	PAGE	AMP.	#PREV	LOCATION	FUNCTION
CB 59					
CB 60					
CB 61					
CB 62					
CB 63					
CB 64					
CB 65					
CB 66					
CB 67					
CB 68					
CB 69					
CB 70	15.1	6A	561790	FR. JCT. BOX	A/C & HEAT SW.
CB 71	15.1	10A	561792	RR. JCT. BOX	A/C & HEAT LOGIC PANEL
CB 72	15.1	10A	561792	RR. JCT. BOX	A/C COMPRESSOR CLUTCH
CB 73	15.1	15A	561793	RR. JCT. BOX	WATER PUMP
CB 74					
CB 75					
CB 76					
CB 77	15.2	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR RH
CB 78	15.2	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR LH
CB 79	15.2	15A	561793	FR. JCT. BOX	DRIVER'S HTR FAN SPEED CTRL MODULE
CB 80					
CB 81					
CB 82					
CB 83					
CB 84					
CB 85	11.2	10A	561790	FR. JCT. BOX	ENTRANCE DOOR & STEP LTS
CB 86					
CB 87					
CB 88					
CB 89					
CB 90					
CB 91					
CB 92					
CB 93					
CB 94					
CB 95					
CB 96					
CB 97					
CB 98					
CB 99					
CB 102					
CB 103					
CB 104					
CB 105	22.1	6A	561790	FR. JCT. BOX	E.C.U. ABS
CB 106	22.1	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 107	22.1	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 108					
CB 118	12.1	20A	561794	RR. JCT. BOX	KEYLESS ENTRY SYS. - LUGGAGE DOOR LOCK
CB 120	12.1	20A	561794	RR. JCT. BOX	KEYLESS ENTRY SYS. - LUGGAGE DOOR LOCK
CB 123	13.1	25A	561795	FR. JCT. BOX	DRIVER'S SEAT ELECTRICAL ADJUSTMENT
CB 124	8.1	6A	561790	RR. JCT. BOX	RADIATOR FAN CLUTCH
CB 129	7.2	6A	561790	FR. JCT. BOX	CLUSTER
CB 130	23.1	6A	561790	FR. JCT. BOX	TELL TALE LIGHTS MODULE
CB 131	4.2	6A	561790	RR. JCT BOX	24 V. IGN. - ALTERNATOR BOSCH
CB 132	4.2	6A	561790	RR. JCT BOX	12 V. IGN. - ALTERNATOR BOSCH

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 1	2.1	40A	562686	BAT. CPT.	12V IGNITION
CB 2	1.1	40A	870093	BAT. CPT.	12V HOT WIRE
CB 3	1.1	40A	562686	BAT. CPT.	12V FEED RR. JCT. BOX
CB 4	1.1	70A	562687	BAT. CPT.	12V FEED FR. JCT. BOX
CB 5	1.1	30A	870690	BAT. CPT.	24V HOT WIRE
CB 6	1.1	90A	562683	BAT. CPT.	24V FEED RR. JCT. BOX
CB 7	1.1	90A	562683	BAT. CPT.	24V FEED FR. JCT. BOX
CB 8	1.1	150A	560299	BAT. CPT.	24V EVAPORATOR FAN MOTOR
CB 9					
CB 10	4.1	8A	561791	FR. JCT. BOX	MASTER KEY SWITCH
CB 11					
CB 12					
CB 13					
CB 14					
CB 15					
CB 16	4.1	8A	561791	RR. JCT. BOX	ENGINE-RR. CTRL & START SW.
CB 17					
CB 18	4.1	6A	561790	RR. JCT. BOX	ENGINE-FR. CTRL SW.
CB 19	5.1	15A	561793	BAT. CPT.	E.C.M. DDEC III 12V POWER
CB 20	5.1	15A	561793	BAT. CPT.	E.C.M. DDEC III 12V POWER
CB 21	5.1	10A	561792	RR. JCT. BOX	E.C.M. DDEC AND WTEC 12V IGNITION
CB 22					
CB 23					
CB 24	6.1	20A	561794	BAT. CPT.	WORLD TRANSMISSION 12V POWER
CB 25					
CB 26	9.3	10A	561792	RR. JCT. BOX	BACK-UP LTS
CB 27	7.1	8A	561791	FR. JCT. BOX	24V IGNITION DASH ACCESSORIES
CB 28	7.2	6A	561790	FR. JCT. BOX	12V IGNITION DASH ACCESSORIES
CB 29					
CB 30					
CB 31					
CB 32					
CB 33					
CB 34	9.3	6A	561790	RR. JCT. BOX	BACK-UP ALARM
CB 35	9.3	15A	561790	FR. JCT. BOX	FOG & HAZARD DASH SW.
CB 36					
CB 37	9.1	6A	561790	FR. JCT. BOX	HEAD & MULTI-FUNCTION LEVEL SW.
CB 38	9.1	10A	561792	FR. JCT. BOX	FR. MARKER LTS
CB 39	9.1	20A	561794	FR. JCT. BOX	CLEARANCE & IDENTIFICATION LTS
CB 40	9.1	8A	561791	FR. JCT. BOX	FR. CLEARANCE & IDENTIFICATION LTS
CB 41	9.1	8A	561791	RR. JCT. BOX	RR. CLEARANCE & IDENTIFICATION LTS
CB 42	9.1	8A	561791	RR. JCT. BOX	RR. TAIL & LICENCE LTS
CB 43	9.1	20A	561794	FR. JCT. BOX	HEADLAMP (HI)
CB 44	9.1	15A	561793	FR. JCT. BOX	HEADLAMP (LO)
CB 45	9.2	10A	561792	FR. JCT. BOX	WIPER CTRL MULTI-FUNCTION LEVEL SW.
CB 46	9.2	20A	561794	FR. JCT. BOX	FLASHER & HAZARD UNIT
CB 47					
CB 48	9.3	6A	561790	FR. JCT. BOX	STOP LTS PRESSURE SW.
CB 49	9.3	15A	561793	RR. JCT. BOX	STOP & CYCLOP LTS
CB 50					
CB 51	10.1	10A	561792	FR. JCT. BOX	UPPER WIPER CTRL SW.
CB 52	11.1	15A	561793	RR. JCT. BOX	LUGGAGE & DOOR AJAR LTS
CB 53					
CB 54					
CB 55					
CB 56					
CB 57	11.2	8A	561791	FR. JCT. BOX	DASH LTS RHEOSTAT
CB 58	15.1	6A	561790	FR. JCT. BOX	HVAC DASH MODULE

No.	PAGE	AMP.	#PREV	LOCATION	FUNCTION
CB 59					
CB 60					
CB 61					
CB 62					
CB 63					
CB 64					
CB 65					
CB 66					
CB 67					
CB 68					
CB 69					
CB 70	15.1	6A	561790	FR. JCT. BOX	A/C & HEAT SW.
CB 71	15.1	10A	561792	RR. JCT. BOX	A/C & HEAT LOGIC PANEL
CB 72	15.1	10A	561792	RR. JCT. BOX	A/C COMPRESSOR CLUTCH
CB 73	15.1	15A	561793	RR. JCT. BOX	WATER PUMP
CB 74					
CB 75					
CB 76					
CB 77	15.2	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR RH
CB 78	15.2	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR LH
CB 79	15.2	15A	561793	FR. JCT. BOX	DRIVER'S HTR FAN SPEED CTRL MODULE
CB 80					
CB 81					
CB 82					
CB 83					
CB 84					
CB 85	11.2	10A	561790	FR. JCT. BOX	ENTRANCE DOOR & STEP LTS
CB 86					
CB 87					
CB 88					
CB 89					
CB 90					
CB 91					
CB 92					
CB 93					
CB 94					
CB 95					
CB 96					
CB 97					
CB 98					
CB 99					
CB 102					
CB 103					
CB 104					
CB 105	22.1	6A	561790	FR. JCT. BOX	E.C.U. ABS
CB 106	22.1	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 107	22.1	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 108					
CB 118	12.1	20A	561794	RR. JCT. BOX	KEYLESS ENTRY SYS. - LUGGAGE DOOR LOCK
CB 120	12.1	20A	561794	RR. JCT. BOX	KEYLESS ENTRY SYS. - LUGGAGE DOOR LOCK
CB 123	13.1	25A	561795	FR. JCT. BOX	DRIVER'S SEAT ELECTRICAL ADJUSTMENT
CB 124	8.1	6A	561790	RR. JCT. BOX	RADIATOR FAN CLUTCH
CB 129	7.2	6A	561790	FR. JCT. BOX	CLUSTER
CB 130	23.1	6A	561790	FR. JCT. BOX	TELL TALE LIGHTS MODULE
CB 131	4.2	6A	561790	RR. JCT BOX	24 V. IGN. - ALTERNATOR BOSCH
CB 132	4.2	6A	561790	RR. JCT BOX	12 V. IGN. - ALTERNATOR BOSCH

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 1	2.1	40A	562686	BAT. CPT.	12V IGNITION
CB 2	1.1	40A	870093	BAT. CPT.	12V HOT WIRE
CB 3	1.1	40A	562686	BAT. CPT.	12V FEED RR. JCT. BOX
CB 4	1.1	70A	562687	BAT. CPT.	12V FEED FR. JCT. BOX
CB 5	1.1	30A	870690	BAT. CPT.	24V HOT WIRE
CB 6	1.1	90A	562683	BAT. CPT.	24V FEED RR. JCT. BOX
CB 7	1.1	90A	562683	BAT. CPT.	24V FEED FR. JCT. BOX
CB 8	1.1	150A	560299	BAT. CPT.	24V EVAPORATOR FAN MOTOR
CB 9					
CB 10	4.1	8A	561791	FR. JCT. BOX	MASTER KEY SWITCH
CB 11					
CB 12					
CB 13					
CB 14					
CB 15					
CB 16	4.1	8A	561791	RR. JCT. BOX	ENGINE-RR. CTRL & START SW.
CB 17					
CB 18	4.1	6A	561790	RR. JCT. BOX	ENGINE-FR. CTRL SW.
CB 19	5.1	15A	561793	BAT. CPT.	E.C.M. DDEC III 12V POWER
CB 20	5.1	15A	561793	BAT. CPT.	E.C.M. DDEC III 12V POWER
CB 21	5.1	10A	561792	RR. JCT. BOX	E.C.M. DDEC AND WTEC 12V IGNITION
CB 22					
CB 23					
CB 24	6.1	20A	561794	BAT. CPT.	WORLD TRANSMISSION 12V POWER
CB 25					
CB 26	9.3	10A	561792	RR. JCT. BOX	BACK-UP LTS
CB 27	7.1	8A	561791	FR. JCT. BOX	24V IGNITION DASH ACCESSORIES
CB 28	7.2	6A	561790	FR. JCT. BOX	12V IGNITION DASH ACCESSORIES
CB 29					
CB 30					
CB 31					
CB 32					
CB 33					
CB 34	9.3	6A	561790	RR. JCT. BOX	BACK-UP ALARM
CB 35	9.3	15A	561790	FR. JCT. BOX	FOG & HAZARD DASH SW.
CB 36					
CB 37	9.1	6A	561790	FR. JCT. BOX	HEAD & MULTI-FUNCTION LEVEL SW.
CB 38	9.1	10A	561792	FR. JCT. BOX	FR. MARKER LTS
CB 39	9.1	20A	561794	FR. JCT. BOX	CLEARANCE & IDENTIFICATION LTS
CB 40	9.1	8A	561791	FR. JCT. BOX	FR. CLEARANCE & IDENTIFICATION LTS
CB 41	9.1	8A	561791	RR. JCT. BOX	RR. CLEARANCE & IDENTIFICATION LTS
CB 42	9.1	8A	561791	RR. JCT. BOX	RR. TAIL & LICENCE LTS
CB 43	9.1	20A	561794	FR. JCT. BOX	HEADLAMP (HI)
CB 44	9.1	15A	561793	FR. JCT. BOX	HEADLAMP (LO)
CB 45	9.2	10A	561792	FR. JCT. BOX	WIPER CTRL MULTI-FUNCTION LEVEL SW.
CB 46	9.2	20A	561794	FR. JCT. BOX	FLASHER & HAZARD UNIT
CB 47					
CB 48	9.3	6A	561790	FR. JCT. BOX	STOP LTS PRESSURE SW.
CB 49	9.3	15A	561793	RR. JCT. BOX	STOP & CYCLOP LTS
CB 50					
CB 51	10.1	10A	561792	FR. JCT. BOX	UPPER WIPER CTRL SW.
CB 52	11.1	15A	561793	RR. JCT. BOX	LUGGAGE & DOOR AJAR LTS
CB 53					
CB 54					
CB 55					
CB 56					
CB 57	11.2	8A	561791	FR. JCT. BOX	DASH LTS RHEOSTAT
CB 58	15.1	6A	561790	FR. JCT. BOX	HVAC DASH MODULE

No.	PAGE	AMP.	#PREV	LOCATION	FUNCTION
CB 59					
CB 60					
CB 61					
CB 62					
CB 63					
CB 64					
CB 65					
CB 66					
CB 67					
CB 68					
CB 69					
CB 70	15.1	6A	561790	FR. JCT. BOX	A/C & HEAT SW.
CB 71	15.1	10A	561792	RR. JCT. BOX	A/C & HEAT LOGIC PANEL
CB 72	15.1	10A	561792	RR. JCT. BOX	A/C COMPRESSOR CLUTCH
CB 73	15.1	15A	561793	RR. JCT. BOX	WATER PUMP
CB 74					
CB 75					
CB 76					
CB 77	15.2	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR RH
CB 78	15.2	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR LH
CB 79	15.2	15A	561793	FR. JCT. BOX	DRIVER'S HTR FAN SPEED CTRL MODULE
CB 80					
CB 81					
CB 82					
CB 83					
CB 84					
CB 85	11.2	10A	561790	FR. JCT. BOX	ENTRANCE DOOR & STEP LTS
CB 86					
CB 87					
CB 88					
CB 89					
CB 90					
CB 91					
CB 92					
CB 93					
CB 94					
CB 95					
CB 96					
CB 97					
CB 98					
CB 99					
CB 102					
CB 103					
CB 104					
CB 105	22.1	6A	561790	FR. JCT. BOX	E.C.U. ABS
CB 106	22.1	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 107	22.1	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 115	12.1	8A	561791	FR. JCT. BOX	KEYLESS MODULE
CB 118	12.1	20A	561794	RR. JCT. BOX	KEYLESS ENTRY SYS. - LUGGAGE DOOR LOCK
CB 120	12.1	20A	561794	RR. JCT. BOX	KEYLESS ENTRY SYS. - LUGGAGE DOOR LOCK
CB 123	13.1	25A	561795	FR. JCT. BOX	DRIVER'S SEAT ELECTRICAL ADJUSTMENT
CB 124	8.1	6A	561790	RR. JCT. BOX	RADIATOR FAN CLUTCH
CB 129	7.2	6A	561790	FR. JCT. BOX	CLUSTER
CB 130	23.1	6A	561790	FR. JCT. BOX	TELL TALE LIGHTS MODULE
CB 131	4.2	6A	561790	RR. JCT BOX	24 V. IGN. - ALTERNATOR BOSCH
CB 132	4.2	6A	561790	RR. JCT BOX	12 V. IGN. - ALTERNATOR BOSCH

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 1	2.1	40A	562686	BAT. CPT.	12V IGNITION
CB 2	1.1	40A	870093	BAT. CPT.	12V HOT WIRE
CB 3	1.1	40A	562686	BAT. CPT.	12V FEED RR. JCT. BOX
CB 4	1.1	70A	562687	BAT. CPT.	12V FEED FR. JCT. BOX
CB 5	1.1	30A	870690	BAT. CPT.	24V HOT WIRE
CB 6	1.1	90A	562683	BAT. CPT.	24V FEED RR. JCT. BOX
CB 7	1.1	90A	562683	BAT. CPT.	24V FEED FR. JCT. BOX
CB 8	1.1	150A	560299	BAT. CPT.	24V EVAPORATOR FAN MOTOR
CB 9					
CB 10	4.1	8A	561791	FR. JCT. BOX	MASTER KEY SWITCH
CB 11					
CB 12					
CB 13					
CB 14					
CB 15					
CB 16	4.1	8A	561791	RR. JCT. BOX	ENGINE-RR. CTRL & START SW.
CB 17					
CB 18	4.1	6A	561790	RR. JCT. BOX	ENGINE-FR. CTRL SW.
CB 19	5.1	15A	561793	BAT. CPT.	E.C.M. DDEC III 12V POWER
CB 20	5.1	15A	561793	BAT. CPT.	E.C.M. DDEC III 12V POWER
CB 21	5.1	10A	561792	RR. JCT. BOX	E.C.M. DDEC AND WTEC 12V IGNITION
CB 22					
CB 23					
CB 24	6.1	20A	561794	BAT. CPT.	WORLD TRANSMISSION 12V POWER
CB 25					
CB 26	9.3	8A	561791	RR. JCT. BOX	BACK-UP LTS
CB 27	7.1	8A	561791	FR. JCT. BOX	24V IGNITION DASH ACCESSORIES
CB 28	7.2	6A	561790	FR. JCT. BOX	12V IGNITION DASH ACCESSORIES
CB 29					
CB 30					
CB 31					
CB 32					
CB 33					
CB 34	9.3	6A	561790	RR. JCT. BOX	BACK-UP ALARM
CB 35	9.3	15A	561790	FR. JCT. BOX	FOG & HAZARD DASH SW.
CB 36					
CB 37	9.1	6A	561790	FR. JCT. BOX	HEAD & MULTI-FUNCTION LEVEL SW.
CB 38	9.1	3A	561797	FR. JCT. BOX	FR. MARKER LTS
CB 39	9.1	6A	561790	FR. JCT. BOX	CLEARANCE & IDENTIFICATION LTS
CB 40	9.1	3A	561797	FR. JCT. BOX	FR. CLEARANCE & IDENTIFICATION LTS
CB 41	9.1	3A	561797	RR. JCT. BOX	RR. CLEARANCE & IDENTIFICATION LTS
CB 42	9.1	8A	561791	RR. JCT. BOX	RR. TAIL & LICENCE LTS
CB 43	9.1	20A	561794	FR. JCT. BOX	HEADLAMP (HI)
CB 44	9.1	15A	561793	FR. JCT. BOX	HEADLAMP (LO)
CB 45	9.2	10A	561792	FR. JCT. BOX	WIPER CTRL MULTI-FUNCTION LEVEL SW.
CB 46	9.2	10A	561792	FR. JCT. BOX	FLASHER & HAZARD UNIT
CB 47					
CB 48	9.3	6A	561790	FR. JCT. BOX	STOP LTS PRESSURE SW.
CB 49	9.3	6A	561790	RR. JCT. BOX	STOP & CYCLOP LTS
CB 50					
CB 51	10.1	10A	561792	FR. JCT. BOX	UPPER WIPER CTRL SW.
CB 52	11.1	15A	561793	RR. JCT. BOX	LUGGAGE & DOOR AJAR LTS
CB 53					
CB 54					
CB 55					
CB 56					
CB 57	11.2	8A	561791	FR. JCT. BOX	DASH LTS RHEOSTAT
CB 58	15.1	6A	561790	FR. JCT. BOX	HVAC DASH MODULE

No.	PAGE	AMP.	#PREV	LOCATION	FUNCTION
CB 59					
CB 60					
CB 61					
CB 62					
CB 63					
CB 64					
CB 65					
CB 66					
CB 67					
CB 68					
CB 69					
CB 70					
CB 71	15.1	10A	561792	RR. JCT. BOX	A/C & HEAT LOGIC PANEL
CB 72	15.1	10A	561792	RR. JCT. BOX	A/C COMPRESSOR CLUTCH
CB 73	15.1	15A	561793	RR. JCT. BOX	WATER PUMP
CB 74					
CB 75					
CB 76					
CB 77	15.2	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR RH
CB 78	15.2	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR LH
CB 79	15.2	15A	561793	FR. JCT. BOX	DRIVER'S HTR FAN SPEED CTRL MODULE
CB 80					
CB 81					
CB 82					
CB 83					
CB 84					
CB 85	11.2	10A	561790	FR. JCT. BOX	ENTRANCE DOOR & STEP LTS
CB 86					
CB 87					
CB 88					
CB 89					
CB 90					
CB 91					
CB 92					
CB 93					
CB 94					
CB 95					
CB 96					
CB 97					
CB 98					
CB 99					
CB 102					
CB 103					
CB 104					
CB 105	22.1	6A	561790	FR. JCT. BOX	E.C.U. ABS
CB 106	22.1	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 107	22.1	10A	561792	FR. JCT. BOX	E.C.U. ABS
CB 115	12.1	8A	561791	FR. JCT. BOX	KEYLESS MODULE
CB 118	12.1	20A	561794	RR. JCT. BOX	KEYLESS ENTRY SYS. - LUGGAGE DOOR LOCK
CB 120	12.1	20A	561794	RR. JCT. BOX	KEYLESS ENTRY SYS. - LUGGAGE DOOR LOCK
CB 123	13.1	25A	561795	FR. JCT. BOX	DRIVER'S SEAT ELECTRICAL ADJUSTMENT
CB 124	8.1	6A	561790	RR. JCT. BOX	RADIATOR FAN CLUTCH
CB 129	7.2	6A	561790	FR. JCT. BOX	CLUSTER
CB 130	23.1	6A	561790	FR. JCT. BOX	TELL TALE LIGHTS MODULE
CB 131	4.2	6A	561790	RR. JCT BOX	24 V. IGN. - ALTERNATOR BOSCH
CB 132	4.2	6A	561790	RR. JCT BOX	12 V. IGN. - ALTERNATOR BOSCH

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 1	2.1	40A	562686	BAT. CPT.	12V IGNITION
CB 2	1.1	40A	870093	BAT. CPT.	12V HOT WIRE
CB 3	1.1	40A	562686	BAT. CPT.	12V FEED RR. JCT. BOX
CB 4	1.1	70A	562687	BAT. CPT.	12V FEED FR. JCT. BOX
CB 5	1.1	30A	870690	BAT. CPT.	24V HOT WIRE
CB 6	1.1	90A	562683	BAT. CPT.	24V FEED RR. JCT. BOX
CB 7	1.1	90A	562683	BAT. CPT.	24V FEED FR. JCT. BOX
CB 8	1.1	150A	560299	BAT. CPT.	24V EVAPORATOR FAN MOTOR
CB 9					
CB 10	4.1	8A	561791	FR. JCT. BOX	MASTER KEY SWITCH
CB 11					
CB 12					
CB 13					
CB 14					
CB 15					
CB 16	4.1	8A	561791	RR. JCT. BOX	ENGINE-RR. CTRL & START SW.
CB 17					
CB 18	4.1	6A	561790	RR. JCT. BOX	ENGINE-FR. CTRL SW.
CB 19	5.1	15A	561793	BAT. CPT.	E.C.M. DDEC III 12V POWER
CB 20	5.1	15A	561793	BAT. CPT.	E.C.M. DDEC III 12V POWER
CB 21	5.1	10A	561792	RR. JCT. BOX	E.C.M. DDEC AND WTEC 12V IGNITION
CB 22					
CB 23					
CB 24	6.1	20A	561794	BAT. CPT.	WORLD TRANSMISSION 12V POWER
CB 25					
CB 26	9.3	8A	561791	RR. JCT. BOX	BACK-UP LTS
CB 27	7.1	8A	561791	FR. JCT. BOX	24V IGNITION DASH ACCESSORIES
CB 28	7.2	6A	561790	FR. JCT. BOX	12V IGNITION DASH ACCESSORIES
CB 29					
CB 30					
CB 31					
CB 32					
CB 33					
CB 34	9.3	6A	561790	RR. JCT. BOX	BACK-UP ALARM
CB 35	9.3	15A	561790	FR. JCT. BOX	FOG & HAZARD DASH SW.
CB 36					
CB 37	9.1	6A	561790	FR. JCT. BOX	HEAD & MULTI-FUNCTION LEVEL SW.
CB 38	9.1	3A	561797	FR. JCT. BOX	FR. MARKER LTS
CB 39	9.1	6A	561790	FR. JCT. BOX	CLEARANCE & IDENTIFICATION LTS
CB 40	9.1	3A	561797	FR. JCT. BOX	FR. CLEARANCE & IDENTIFICATION LTS
CB 41	9.1	3A	561797	RR. JCT. BOX	RR. CLEARANCE & IDENTIFICATION LTS
CB 42	9.1	8A	561791	RR. JCT. BOX	RR. TAIL & LICENCE LTS
CB 43	9.1	20A	561794	FR. JCT. BOX	HEADLAMP (HI)
CB 44	9.1	15A	561793	FR. JCT. BOX	HEADLAMP (LO)
CB 45	9.2	10A	561792	FR. JCT. BOX	WIPER CTRL MULTI-FUNCTION LEVEL SW.
CB 46	9.2	10A	561792	FR. JCT. BOX	FLASHER & HAZARD UNIT
CB 47					
CB 48	9.3	6A	561790	FR. JCT. BOX	STOP LTS PRESSURE SW.
CB 49	9.3	6A	561790	RR. JCT. BOX	STOP & CYCLOP LTS
CB 50					
CB 51	10.1	10A	561792	FR. JCT. BOX	UPPER WIPER CTRL SW.
CB 52	11.1	15A	561793	RR. JCT. BOX	LUGGAGE & DOOR AJAR LTS
CB 53					
CB 54					
CB 55					
CB 56					
CB 57	11.2	8A	561791	FR. JCT. BOX	DASH LTS RHEOSTAT
CB 58	15.1	6A	561790	FR. JCT. BOX	HVAC DASH MODULE

No.	PAGE	AMP.	#PREV	LOCATION	FUNCTION
CB 59					
CB 60					
CB 61					
CB 62					
CB 63					
CB 64					
CB 65					
CB 66					
CB 67					
CB 68					
CB 69					
CB 70					
CB 71	15.1	10A	561792	RR. JCT. BOX	A/C & HEAT LOGIC PANEL
CB 72	15.1	10A	561792	RR. JCT. BOX	A/C COMPRESSOR CLUTCH
CB 73	15.1	15A	561793	RR. JCT. BOX	WATER PUMP
CB 74					
CB 75					
CB 76					
CB 77	15.2	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR RH
CB 78	15.2	40A	870093	BAT. CPT.	CONDENSER FAN MOTOR LH
CB 79	15.2	15A	561793	FR. JCT. BOX	DRIVER'S HTR FAN SPEED CTRL MODULE
CB 80					
CB 81					
CB 82					
CB 83					
CB 84					
CB 85	11.2	10A	561790	FR. JCT. BOX	ENTRANCE DOOR & STEP LTS
CB 86					
CB 87					
CB 88					
CB 89					
CB 90					
CB 91					
CB 92					
CB 93					
CB 94					
CB 95					
CB 96					
CB 97					
CB 98					
CB 99					
CB 102					
CB 103					
CB 104					
CB 105	22.1	6A	561790	FR. JCT. BOX	E.C.U. ABS
CB 106	22.1	15A	561793	FR. JCT. BOX	E.C.U. ABS
CB 115	12.1	8A	561791	FR. JCT. BOX	KEYLESS MODULE
CB 118	12.1	20A	561794	RR. JCT. BOX	KEYLESS ENTRY SYS. - LUGGAGE DOOR LOCK
CB 120	12.1	20A	561794	RR. JCT. BOX	KEYLESS ENTRY SYS. - LUGGAGE DOOR LOCK
CB 123	13.1	25A	561795	FR. JCT. BOX	DRIVER'S SEAT ELECTRICAL ADJUSTMENT
CB 124	8.1	6A	561790	RR. JCT. BOX	RADIATOR FAN CLUTCH
CB 129	7.2	6A	561790	FR. JCT. BOX	CLUSTER
CB 130	23.1	6A	561790	FR. JCT. BOX	TELL TALE LIGHTS MODULE
CB 131	4.2	6A	561790	RR. JCT BOX	24 V. IGN. - ALTERNATOR BOSCH
CB 132	4.2	6A	561790	RR. JCT BOX	12 V. IGN. - ALTERNATOR BOSCH

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C X1	FR LH UPPER WHELL CPT-ABS	WABCO	18		562792
C X2	FR LH UPPER WHELL CPT-ABS	WABCO	6		562793
C X3	FR LH UPPER WHELL CPT-ABS	WABCO	9		562794
C X4	FR LH UPPER WHELL CPT-ABS	WABCO	15		562795`
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
CV I2	RR JCT BOX-WORLD TRANS. SHIFT & RET.	AMP CPC	9	561636	561637
C Y	CLUSTER	JAE	30		562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10					
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22					
C 23					
C 24					
C 25					
C 26					
C 27					
C 28					
C 29					
C 30					
C 31					
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33					
C 34					
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36					
C 37					
C 38					
C 39					
C 40					
C 41					
C 42					
C 43					
C 44					
C 45	FR. JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46					
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48					
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50					
C 51					
C 52	RR JCT BOX	AMP CPC	22	561709	561710
C 53					
C 54					
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					
C 57					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 58	RR JCT BOX - A/C PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX - A/C PANEL	AMP CPC	14	561585	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	24	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75					
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77					
C 78	LUGGAGE COMPT.-LTS	AMP MNL	2	561248	561247
C 79	LUGGAGE COMPT.-LTS	AMP MNL	2	561248	561247
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561248	561247
C 82	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561248	561247
C 83	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561248	561247
C 84	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561248	561247
C 85	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561248	561247
C 86	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561248	561247
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88	RR END ROOF-CLEARANCE LTS	AMP MNL	2	560900	560898
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS	WABCO	35	------	641094
C 94					
C 95					
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100					
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108					
C 109					
C 110					
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	EVAPORATOR COMPT-SPEED MOT CTRL	DEUTSCH	5	------	562566
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115	ENGINE COMPT-AIR DRYER	PED WP	2	561566	561690
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117					
C 118					
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-CAMERA DOOR VALVE	PED WP	2	561566	561690
C 123					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126					
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX-A/C PANEL DIODE CON.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142					
C 143					
C 144					
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150	ENGINE CPT. - FUEL FILTER	PED WP	1	561605	561577
C 151	EVAPORATOR CPT-THERMOSTAT	ITT	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	DEUTSCH	2	562486	562485
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	562486	562485
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172	FR SERV. COMPT.- LEVEL LOW	AMP CPC	9	561635	561637
C 173	LAV.POTABLE-WATER TANK HEAT.	AMP MNL	2	560900	560898
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 180					
C 181					
C 182					
C 183					
C 184					
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C 190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690
C 191	ENGINE CPT RR DOOR RH STOP LT	PED WP	2	561566	561690
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C 193					
C 194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690
C 195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690
C 196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690
C 197					
C 198					
C 199	ENGINE CPT RR DOOR LICENCE LT	DOM AUTO	2	930210	------
C 200					
C 201	AUX. UNIT CONTROL	PED WP	4	561610	561611
C 202	AUX. UNIT CONTROL	PED WP	3	561781	561782
C 203	AUX. UNIT CONTROL	PED WP	2	561566	561690
C 204	AUX. LQUIDE SOL.VALVE	PED WP	2	561566	561690
C 205					
C 206					
C 207					
C 208					
C 209					
C 210					
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213	FR ROOF-CLEARANCE LT	AMP MNL	2	560900	560898
C 214					
C 215					
C 216					
C 217					
C 218					
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221					
C 222					
C 223					
C 224					
C 225					
C 226					
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233					
C 234					
C 235					
C 236					
C 237					
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239					
C 240	LUGG. CPT.-CO-PILOT SEAT HEATER	AMP MNL	2	560900	560898
C 241					
C 242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 243	FR SERVICE CPT-HEADLAMPS	TC	3	------	561071
C 244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812
C 245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812
C 246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 247					
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 251	LH SW PANEL-FAST IDLE	EATON	10	------	562763
C 252					
C 253	LH SW PANEL-ETHER	EATON	10	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH SW PANEL-JACOB	EATON	10	------	562763
C 256					
C 257					
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260					
C 261					
C 262	UNDER DASH RH-KEYLESS MODULE	AMP MUL	22	------	562675
C 263	UNDER DASH RH- KEYLESS MODULE	AMP MUL	26	------	562676
C 264	ENTRANCE DOOR-KEYPAD	AMP CPC	9	561536	561637
C 265	RH SW PANEL -DRIVER'S DOOR SW.	EATON	10	------	562763
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274					
C 275					
C 276	UNDER DASH RH -3 WAY LTS	EATON	10	------	562763
C 277	LH CONSOLE -DOCK. & CORN. SW.	EATON	10	------	562763
C 278	LH CONSOLE -BACK-UP CANCEL SW.	EATON	10	------	562763
C 279					
C 280	UNDER DASH RH -3 WAY LTS	EATON	10	------	562763
C 281	LH CONSOLE -LEVEL LOW	AMP MNL	4	560851	560852
C 282	LH CONSOLE -MONITOR OPER. SW.	EATON	10	------	562763
C 283	LH CONSOLE -LOW DOCKING SW.	EATON	10	------	562763
C 284					
C 285	ENTRANCE DOOR -SOL. DOOR	PED PO	2	------	562076
C 286	RH SW PANEL-A/C & HEAT	EATON	10	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	10	------	562763
C 289					
C 290	LUGGAGE COMPT -DOOR LOCK	AMP MNL	4	561551	561668
C 291	LUGGAGE COMPT -DOOR LOCK	AMP MNL	4	561551	561668
C 292					
C 293					
C 294					
C 295					
C 296					
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299					
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH CONSOLE SW-LUG. DOOR LOCK	EATON	10	------	562763
C 311					
C 312					
C 313					
C 314					
C 315	LH CONSOLE SW-LH STORE	EATON	10	------	562763

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 316					
C 317	LH CONSOLE SW-RH STORE	EATON	10	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	10	------	562763
C 319					
C 320	LH CONSOLE SW-DRIVER'S LTS	EATON	10	------	562763
C 321					
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN.	AMP CPC	9	561636	561637
C 324					
C 325	LH CONSOLE SW-KNEELING	EATON	8	------	562763
C 326	LH CONSOLE SW-SPARE	EATON	8	------	562763
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328					
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331					
C 332					
C 333					
C 334					
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346	INSTR PANEL LH-SWITCH LTS	EATON	2	------	561837
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351					
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360	INSTR PANEL RH-B/U MONITOR	AMP MNL	2	561248	561247
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362					
C 363					
C 364					
C 365					
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367					
C 368					
C 369					
C 370					
C 371					
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376	LH SWITCH PANEL	AMP CPC	37	561714	562005
C 377	LH SW PANEL-STOP ENG.OVERIDE	EATON	10	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 381	INST. PANEL CENTER-ANTI-THEFT LED	AMP MNL	2	561248	561247
C 382					
C 383					
C 384					
C 385					
C 386					
C 387					
C 388					
C 389					
C 390					
C 391					
C 392					
C 393					
C 394					
C 395					
C 396					
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399					
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402	RR DRIVE AXLE-AIR DRYER	PED MP	2	------	562251
C 403					
C 404					
C 405					
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH SW PANEL-MASTER SWITCH	EATON	10	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9	561670	561669
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562237	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	INSTR. PANEL LH-HTR WINDSH.SW	EATON	10	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	------
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427					
C 428					
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	DEUTSCH	4	562479	562477
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437					
C 438					
C 439					
C 440					
C 441					
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450					
C 451					
C 452					
C 453					
C 454					
C 455					
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561590
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDL CONN W.T.	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468					
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER'S.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478					
C 479	HVAC MODULE (NOT USED)	-------	-	------	------
C 480	UNDER DASH RH-DR'S FAN SPEED CTR MOD	PED	4	561889	561890
C 481	UNDER DASH RH-DR'S FAN SPEED CTR MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. -SEAT ELECTRICAL SEAT	PED PC	2	------	562237
C 484	UNDER DASH LH-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH-DASH & DEFROST DAMP.M.	AMP MNL	3	561667	561550
C 486					
C 487					
C 488					
C 489					
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER MOD	PED MP	7	562433	------
C 502	LH CONSOLE-PRE HEATER SW.	EATON	10	------	562763
C 503					
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	12	------	562681
C 506	LH CONSOLE-LEVEL LOW SW.	EATON	10	------	562763
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515					
C 516					
C 517					
C 518					
C 519					
C 520					
C 521					
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	------	561183
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528					
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533					
C 534					
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541					
C 542					
C 543	RR JCT BOX-PARK. BRAKE STOP LTS RESIS.	PED WP	2	561566	561690
C 544					
C 545					
C 546	LH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	10	------	562763
C 549					
C 550	EVAPORATOR COMPARTIMENT	ITT	2	561813	562159
C 551	RR JCT BOX - A/C PANEL	PED	2	561566	561690
C 552					
C 553					
C 554					
C 555					
C 556					
C 557					
C 558					
C 559					
C 560					
C 561					
C 562					
C 563					
C 564					
C 565					
C 566					
C 567					
C 568					
C 569					
C 570	UNDER DASH PANEL TTLT MODULE	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT MODULE	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT MODULE	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT MODULE	MOLEX	16		562465
C 574					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 575					
C 576					
C 577					
C 578					
C 579					
C 580					
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587					
C 588					
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593					
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595					
C 596					
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5	------	562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5	------	562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601					
C 602					
C 603					
C 604					
C 605					
C 606					
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
L X	CLUSTER	JAE	22	------	562766
L Y	CLUSTER	JAE	30	------	562767
R X	CLUSTER	JAE	22	------	562764

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C X1	FR LH UPPER WHELL CPT-ABS	WABCO	18		562792
C X2	FR LH UPPER WHELL CPT-ABS	WABCO	6		562793
C X3	FR LH UPPER WHELL CPT-ABS	WABCO	9		562794
C X4	FR LH UPPER WHELL CPT-ABS	WABCO	15		562795`
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
CV I2	RR JCT BOX-WORLD TRANS. SHIFT & RET.	AMP CPC	9	561636	561637
C Y	CLUSTER	JAE	30		562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10					
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22					
C 23					
C 24					
C 25					
C 26					
C 27					
C 28					
C 29					
C 30					
C 31					
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33					
C 34					
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36					
C 37					
C 38					
C 39					
C 40					
C 41					
C 42					
C 43					
C 44					
C 45	FR. JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46					
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48					
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50					
C 51					
C 52	RR JCT BOX	AMP CPC	22	561709	561710
C 53					
C 54					
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					
C 57					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 58	RR JCT BOX - A/C PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX - A/C PANEL	AMP CPC	14	561585	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	24	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75					
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-DOOR LOCK		4	561551	561668
C 78	LUGGAGE COMPT.-LTS - COND. CPT	AMP MNL	2	561248	561247
C 79	LUGGAGE COMPT.-LTS - EVAP. CPT.	AMP MNL	2	561248	561247
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 82	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 83	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 84	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 85	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 86	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88	RR END ROOF-CLEARANCE LTS	AMP MNL	2	560900	560898
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS	WABCO	35	------	641094
C 94					
C 95					
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100					
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108					
C 109					
C 110					
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	EVAPORATOR COMPT-SPEED MOT CTRL	DEUTSCH	5	------	562566
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115	ENGINE COMPT-AIR DRYER	PED WP	2	561566	561690
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117					
C 118					
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-CAMERA DOOR VALVE	PED WP	2	561566	561690
C 123					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126					
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX-A/C PANEL DIODE CON.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142					
C 143					
C 144					
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150	ENGINE CPT. - FUEL FILTER	PED WP	1	561605	561577
C 151	EVAPORATOR CPT-THERMOSTAT	ITT	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	ENGINE CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	ENGINE CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	DEUTSCH	2	562486	562485
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	562486	562485
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172	FR SERV. COMPT.- LEVEL LOW	AMP CPC	9	561635	561637
C 173	LAV.POTABLE-WATER TANK HEAT.	AMP MNL	2	560900	560898
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 180					
C 181					
C 182					
C 183					
C 184					
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C 190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690
C 191	ENGINE CPT RR DOOR RH STOP LT	PED WP	2	561566	561690
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C 193					
C 194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690
C 195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690
C 196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690
C 197					
C 198					
C 199	ENGINE CPT RR DOOR LICENCE LT	DOM AUTO	2	930210	------
C 200					
C 201	AUX. UNIT CONTROL	PED WP	4	561610	561611
C 202	AUX. UNIT CONTROL	PED WP	3	561781	561782
C 203	AUX. UNIT CONTROL	PED WP	2	561566	561690
C 204	AUX. LIQUID SOL.VALVE	PED WP	2	561566	561690
C 205					
C 206					
C 207					
C 208					
C 209					
C 210					
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213	FR ROOF-CLEARANCE LT	AMP MNL	2	560900	560898
C 214					
C 215					
C 216					
C 217					
C 218					
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221					
C 222					
C 223					
C 224					
C 225					
C 226					
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233					
C 234					
C 235					
C 236					
C 237					
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239					
C 240	LUGG. CPT.-CO-PILOT SEAT HEATER	AMP MNL	2	560900	560898
C 241					
C 242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 243	FR SERVICE CPT-HEADLAMPS	TC	3	------	561071
C 244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812
C 245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812
C 246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 247					
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 251	LH SW PANEL-FAST IDLE	EATON	10	------	562763
C 252					
C 253	LH SW PANEL-ETHER	EATON	10	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH SW PANEL-JACOB	EATON	10	------	562763
C 256					
C 257					
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260					
C 261					
C 262	UNDER DASH RH-KEYLESS MODULE	AMP MUL	22	------	562675
C 263	UNDER DASH RH- KEYLESS MODULE	AMP MUL	26	------	562676
C 264	ENTRANCE DOOR-KEYPAD	AMP CPC	9	561536	561637
C 265	RH SW PANEL -DRIVER'S DOOR SW.	EATON	10	------	562763
C 266					
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274					
C 275					
C 276	UNDER DASH RH -3 WAY LTS	EATON	10	------	562763
C 277	LH CONSOLE -DOCK. & CORN. SW.	EATON	10	------	562763
C 278	LH CONSOLE -BACK-UP CANCEL SW.	EATON	10	------	562763
C 279					
C 280	UNDER DASH RH -3 WAY LTS	EATON	10	------	562763
C 281	LH CONSOLE -LEVEL LOW	AMP MNL	4	560851	560852
C 282	LH CONSOLE -MONITOR OPER. SW.	EATON	10	------	562763
C 283	LH CONSOLE -LOW DOCKING SW.	EATON	10	------	562763
C 284					
C 285	ENTRANCE DOOR -SOL. DOOR	PED PO	2	------	562076
C 286	RH SW PANEL-A/C & HEAT	EATON	10	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	10	------	562763
C 289					
C 290	LUGGAGE COMPT -DOOR LOCK	AMP MNL	4	561551	561668
C 291	LUGGAGE COMPT -DOOR LOCK	AMP MNL	4	561551	561668
C 292					
C 293					
C 294					
C 295					
C 296					
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299					
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH CONSOLE SW-LUG. DOOR LOCK	EATON	10	------	562763
C 311					
C 312					
C 313					
C 314					
C 315	LH CONSOLE SW-LH STORE	EATON	10	------	562763

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 316					
C 317	LH CONSOLE SW-RH STORE	EATON	10	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	10	------	562763
C 319					
C 320	LH CONSOLE SW-DRIVER'S LTS	EATON	10	------	562763
C 321					
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN.	AMP CPC	9	561636	561637
C 324					
C 325	LH CONSOLE SW-KNEELING	EATON	8	------	562763
C 326	LH CONSOLE SW-SPARE	EATON	8	------	562763
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328					
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331					
C 332					
C 333					
C 334					
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346	INSTR PANEL LH-SWITCH LTS	EATON	2	------	561837
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351					
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360	INSTR PANEL RH-B/U MONITOR	AMP MNL	2	561248	561247
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362					
C 363					
C 364					
C 365					
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367					
C 368					
C 369					
C 370					
C 371					
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376	LH SWITCH PANEL	AMP CPC	37	561714	562005
C 377	LH SW PANEL-STOP ENG.OVERIDE	EATON	10	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 381	INST. PANEL CENTER-ANTI-THEFT LED	AMP MNL	2	561248	561247
C 382					
C 383					
C 384					
C 385					
C 386					
C 387					
C 388					
C 389					
C 390					
C 391					
C 392					
C 393					
C 394					
C 395					
C 396					
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. - EXITING SIGNAL ALTERN.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402	RR DRIVE AXLE-AIR DRYER	PED MP	2	------	562251
C 403					
C 404					
C 405					
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH SW PANEL-MASTER SWITCH	EATON	10	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9 - 12		
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562237	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	INSTR. PANEL LH-HTR WINDSH.SW	EATON	10	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	------
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427					
C 428					
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	DEUTSCH	4	562479	562477
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437					
C 438					
C 439					
C 440					
C 441					
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450					
C 451					
C 452					
C 453					
C 454					
C 455					
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561590
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDL CONN W.T.	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468					
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER'S.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478					
C 479	HVAC MODULE (NOT USED)	-------	-	------	------
C 480	UNDER DASH RH-DR'S FAN SPEED CTR MOD	PED	4	561889	561890
C 481	UNDER DASH RH-DR'S FAN SPEED CTR MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. -SEAT ELECTRICAL SEAT	PED PC	2	------	562237
C 484	UNDER DASH LH-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH-DASH & DEFROST DAMP.M.	AMP MNL	3	561667	561550
C 486					
C 487					
C 488					
C 489					
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER MOD	PED MP	7	562433	------
C 502	LH CONSOLE-PRE HEATER SW.	EATON	10	------	562763
C 503					
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	12	------	562681
C 506	LH CONSOLE-LEVEL LOW SW.	EATON	10	------	562763
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515					
C 516					
C 517					
C 518					
C 519					
C 520					
C 521					
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	------	561183
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528					
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533					
C 534					
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541					
C 542					
C 543	RR JCT BOX-PARK. BRAKE STOP LTS RESIS.	PED WP	2	561566	561690
C 544					
C 545					
C 546	LH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	10	------	562763
C 549					
C 550	EVAPORATOR COMPARTIMENT	ITT	2	561813	562159
C 551	RR JCT BOX - A/C PANEL	PED	2	561566	561690
C 552					
C 553					
C 554					
C 555					
C 556					
C 557					
C 558					
C 559					
C 560					
C 561					
C 562					
C 563					
C 564					
C 565					
C 566					
C 567					
C 568					
C 569					
C 570	UNDER DASH PANEL TTLT MODULE	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT MODULE	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT MODULE	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT MODULE	MOLEX	16		562465
C 574					
C 575					
C 576					
C 577					
C 578					
C 579					
C 580					
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587					
C 588					
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593					
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595					
C 596					
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5	------	562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5	------	562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601					
C 602					
C 603					
C 604					
C 605					
C 606					
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
L X	CLUSTER	JAE	22	------	562766
L Y	CLUSTER	JAE	30	------	562767
R X	CLUSTER	JAE	22	------	562764

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C X1	FR LH UPPER WHELL CPT-ABS	WABCO	18		562792
C X2	FR LH UPPER WHELL CPT-ABS	WABCO	6		562793
C X3	FR LH UPPER WHELL CPT-ABS	WABCO	9		562794
C X4	FR LH UPPER WHELL CPT-ABS	WABCO	15		562795`
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
CV I2	RR JCT BOX-WORLD TRANS. SHIFT & RET.	AMP CPC	9	561636	561637
C Y	CLUSTER	JAE	30		562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10					
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22					
C 23					
C 24					
C 25					
C 26					
C 27					
C 28					
C 29					
C 30					
C 31					
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33					
C 34					
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36					
C 37					
C 38					
C 39					
C 40					
C 41					
C 42					
C 43					
C 44					
C 45	FR. JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46					
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48					
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50					
C 51					
C 52	RR JCT BOX	AMP CPC	22	561709	561710
C 53					
C 54					
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					
C 57					
C 58	RR JCT BOX - A/C PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX - A/C PANEL	AMP CPC	14	561585	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	24	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75					
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-DOOR LOCK		4	561551	561668
C 78	LUGGAGE COMPT.-LTS - COND. CPT	AMP MNL	2	561248	561247
C 79	LUGGAGE COMPT.-LTS - EVAP. CPT.	AMP MNL	2	561248	561247
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 82	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 83	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 84	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 85	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 86	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88	RR END ROOF-CLEARANCE LTS	AMP MNL	2	560900	560898
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS	WABCO	35	------	641094
C 94					
C 95					
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100					
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108					
C 109					
C 110					
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	EVAPORATOR COMPT-SPEED MOT CTRL	DEUTSCH	5	------	562566
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115	ENGINE COMPT-AIR DRYER	PED WP	2	561566	561690
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117					
C 118					
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-CAMERA DOOR VALVE	PED WP	2	561566	561690
C 123					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126					
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX-A/C PANEL DIODE CON.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142					
C 143					
C 144					
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150	ENGINE CPT. - FUEL FILTER	PED WP	1	561605	561577
C 151	EVAPORATOR CPT-THERMOSTAT	ITT	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	ENGINE CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	ENGINE CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	DEUTSCH	2	562486	562485
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	562486	562485
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172	FR SERV. COMPT.- LEVEL LOW	AMP CPC	9	561635	561637
C 173	LAV.POTABLE-WATER TANK HEAT.	AMP MNL	2	560900	560898
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 180					
C 181					
C 182					
C 183					
C 184					
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C 190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690
C 191	ENGINE CPT RR DOOR RH STOP LT	PED WP	2	561566	561690
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C 193					
C 194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690
C 195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690
C 196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690
C 197					
C 198					
C 199	ENGINE CPT RR DOOR LICENCE LT	DOM AUTO	2	930210	------
C 200					
C 201	AUX. UNIT CONTROL	PED WP	4	561610	561611
C 202	AUX. UNIT CONTROL	PED WP	3	561781	561782
C 203	AUX. UNIT CONTROL	PED WP	2	561566	561690
C 204	AUX. LIQUID SOL.VALVE	PED WP	2	561566	561690
C 205					
C 206					
C 207					
C 208					
C 209					
C 210					
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213	FR ROOF-CLEARANCE LT	AMP MNL	2	560900	560898
C 214					
C 215					
C 216					
C 217					
C 218					
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221					
C 222					
C 223					
C 224					
C 225					
C 226					
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233					
C 234					
C 235					
C 236					
C 237					
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239					
C 240	LUGG. CPT.-CO-PILOT SEAT HEATER	AMP MNL	2	560900	560898
C 241					
C 242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 243	FR SERVICE CPT-HEADLAMPS	TC	3	------	561071
C 244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812
C 245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812
C 246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 247					
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 251	LH SW PANEL-FAST IDLE	EATON	10	------	562763
C 252					
C 253	LH SW PANEL-ETHER	EATON	10	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH SW PANEL-JACOB	EATON	10	------	562763
C 256					
C 257					
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260					
C 261					
C 262	UNDER DASH RH-KEYLESS MODULE	AMP MUL	22	------	562675
C 263	UNDER DASH RH- KEYLESS MODULE	AMP MUL	26	------	562676
C 264	ENTRANCE DOOR-KEYPAD	AMP CPC	9	561536	561637
C 265	RH SW PANEL -DRIVER'S DOOR SW.	EATON	10	------	562763
C 266	ENTRANCE DOOR-KEYLESS	AMP CPC	14	561585	
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274					
C 275					
C 276	UNDER DASH RH -3 WAY LTS	EATON	10	------	562763
C 277	LH CONSOLE -DOCK. & CORN. SW.	EATON	10	------	562763
C 278	LH CONSOLE -BACK-UP CANCEL SW.	EATON	10	------	562763
C 279					
C 280	UNDER DASH RH -3 WAY LTS	EATON	10	------	562763
C 281	LH CONSOLE -LEVEL LOW	AMP MNL	4	560851	560852
C 282	RH SW PANEL -MONITOR OPER. SW.	EATON	10	------	562763
C 283	LH CONSOLE -LOW DOCKING SW.	EATON	10	------	562763
C 284					
C 285	ENTRANCE DOOR -SOL. DOOR	PED PO	2	------	562076
C 286	RH SW PANEL-A/C & HEAT	EATON	10	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	10	------	562763
C 289					
C 290	LUGGAGE COMPT -DOOR LOCK	AMP MNL	4	561551	561668
C 291	LUGGAGE COMPT -DOOR LOCK	AMP MNL	4	561551	561668
C 292					
C 293					
C 294					
C 295					
C 296					
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299					
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH CONSOLE SW-LUG. DOOR LOCK	EATON	10	------	562763
C 311					
C 312					
C 313					
C 314					
C 315	LH CONSOLE SW-LH STORE	EATON	10	------	562763

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 316					
C 317	LH CONSOLE SW-RH STORE	EATON	10	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	10	------	562763
C 319					
C 320	RH SW PANEL-DRIVER'S LTS	EATON	10	------	562763
C 321					
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN.	AMP CPC	9	561636	561637
C 324					
C 325	LH CONSOLE SW-KNEELING	EATON	8	------	562763
C 326	LH CONSOLE SW-SPARE	EATON	8	------	562763
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328					
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331					
C 332					
C 333					
C 334					
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346	INSTR PANEL LH-SWITCH LTS	EATON	2	------	561837
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351					
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360	INSTR PANEL RH-B/U MONITOR	AMP MNL	2	561248	561247
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362					
C 363					
C 364					
C 365					
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367					
C 368					
C 369					
C 370					
C 371					
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376	LH SWITCH PANEL	AMP CPC	37	561714	562005
C 377	LH SW PANEL-STOP ENG.OVERIDE	EATON	10	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 381	INST. PANEL CENTER-ANTI-THEFT LED	AMP MNL	2	561248	561247
C 382					
C 383					
C 384					
C 385					
C 386					
C 387					
C 388					
C 389					
C 390					
C 391					
C 392					
C 393					
C 394					
C 395					
C 396					
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. - EXITING SIGNAL ALTERN.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402	RR DRIVE AXLE-AIR DRYER	PED MP	2	------	562251
C 403					
C 404					
C 405					
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH SW PANEL-MASTER SWITCH	EATON	10	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9 - 12		
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562237	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	INSTR. PANEL LH-HTR WINDSH.SW	EATON	10	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	------
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427					
C 428					
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	DEUTSCH	4	562479	562477
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437					
C 438					
C 439					
C 440					
C 441					
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450					
C 451					
C 452					
C 453					
C 454					
C 455					
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561590
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDL CONN W.T.	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468					
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER'S.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478					
C 479	HVAC MODULE (NOT USED)	-------	-	------	------
C 480	UNDER DASH RH-DR'S FAN SPEED CTR MOD	PED	4	561889	561890
C 481	UNDER DASH RH-DR'S FAN SPEED CTR MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. -SEAT ELECTRICAL SEAT	PED PC	2	------	562237
C 484	UNDER DASH LH-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH-DASH & DEFROST DAMP.M.	AMP MNL	3	561667	561550
C 486					
C 487					
C 488					
C 489					
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER MOD	PED MP	7	562433	------
C 502	LH CONSOLE-PRE HEATER SW.	EATON	10	------	562763
C 503					
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	12	------	562681
C 506	LH CONSOLE-LEVEL LOW SW.	EATON	10	------	562763
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515					
C 516					
C 517					
C 518					
C 519					
C 520					
C 521					
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	------	561183
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528					
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533					
C 534					
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541					
C 542					
C 543	RR JCT BOX-PARK. BRAKE STOP LTS RESIS.	PED WP	2	561566	561690
C 544					
C 545					
C 546	LH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	10	------	562763
C 549					
C 550	EVAPORATOR COMPARTIMENT	ITT	2	561813	562159
C 551	RR JCT BOX - A/C PANEL	PED	2	561566	561690
C 552					
C 553					
C 554					
C 555					
C 556					
C 557					
C 558					
C 559					
C 560					
C 561					
C 562					
C 563					
C 564					
C 565					
C 566					
C 567					
C 568					
C 569					
C 570	UNDER DASH PANEL TTLT MODULE	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT MODULE	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT MODULE	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT MODULE	MOLEX	16		562465
C 574					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 575					
C 576					
C 577					
C 578					
C 579					
C 580					
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587					
C 588					
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593					
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595					
C 596					
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5	------	562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5	------	562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601					
C 602					
C 603					
C 604					
C 605					
C 606					
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
C 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
L X	CLUSTER	JAE	22	------	562766
L Y	CLUSTER	JAE	30	------	562767
R X	CLUSTER	JAE	22	------	562764

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C X1	FR LH UPPER WHELL CPT-ABS	AMP	18		562792
C X2	FR LH UPPER WHELL CPT-ABS	AMP	6		562793
C X3	FR LH UPPER WHELL CPT-ABS	AMP	9		562794
C X4	FR LH UPPER WHELL CPT-ABS	AMP	15		562795`
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
CV I2	RR JCT BOX-WORLD TRANS. SHIFT & RET.	AMP CPC	9	561636	561637
C Y	CLUSTER	JAE	30		562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10					
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22					
C 23					
C 24					
C 25					
C 26					
C 27					
C 28					
C 29					
C 30					
C 31					
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33					
C 34					
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36					
C 37					
C 38					
C 39					
C 40					
C 41					
C 42					
C 43					
C 44					
C 45	FR. JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46					
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERV. COMPT.-PRESS SW. PARK BRAKE	DEUTSCH	4	562479	562477
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50					
C 51					
C 52	RR JCT BOX	AMP CPC	22	561709	561710
C 53					
C 54					
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					
C 57					
C 58	RR JCT BOX - A/C PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX - A/C PANEL	AMP CPC	14	561585	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	24	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	LUGG. COMPT. – DOOR LOCK	AMP MNL	2	561551	561668
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-DOOR LOCK		4	561551	561668
C 78	LUGGAGE COMPT.-LTS - COND. CPT	AMP MNL	2	561248	561247
C 79	LUGGAGE COMPT.-LTS - EVAP. CPT.	AMP MNL	2	561248	561247
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 82	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 83	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 84	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 85	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 86	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88					
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS	WABCO	35	------	641094
C 94					
C 95					
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100					
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108					
C 109					
C 110					
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	EVAPORATOR COMPT-SPEED MOT CTRL	DEUTSCH	5	------	562566
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115	ENGINE COMPT-AIR DRYER	PED WP	2	561566	561690
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117					
C 118					
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-CAMERA DOOR VALVE	PED WP	2	561566	561690
C 123					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126					
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX-A/C PANEL DIODE CON.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142					
C 143					
C 144					
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150	ENGINE CPT. - FUEL FILTER	PED WP	1	561605	561577
C 151	EVAPORATOR CPT-THERMOSTAT	ITT	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	ENGINE CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	ENGINE CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	DEUTSCH	2	562486	562485
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	562486	562485
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172	FR SERV. COMPT.- LEVEL LOW	AMP CPC	9	561635	561637
C 173	LAV.POTABLE-WATER TANK HEAT.	AMP MNL	2	560900	560898
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 180					
C 182					
C 183					
C 184					
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C 190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690
C 191	ENGINE CPT RR DOOR RH STOP LT	PED WP	2	561566	561690
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C 193					
C 194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690
C 195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690
C 196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690
C 197					
C 198					
C 199	ENGINE CPT RR DOOR LICENCE LT	DOM AUTO	2	930210	------
C 200					
C 201	AUX. UNIT CONTROL	PED WP	4	561610	561611
C 202	AUX. UNIT CONTROL	PED WP	3	561781	561782
C 203	AUX. UNIT CONTROL	PED WP	2	561566	561690
C 204	AUX. LIQUID SOL.VALVE	PED WP	2	561566	561690
C 205					
C 206					
C 207					
C 208					
C 209					
C 210					
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214					
C 215					
C 216					
C 217					
C 218					
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221					
C 222					
C 223					
C 224					
C 225					
C 226					
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233					
C 234					
C 235					
C 236					
C 237					
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239					
C 240	LUGG. CPT.-CO-PILOT SEAT HEATER	AMP MNL	2	560900	560898
C 241					
C 242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 243	FR SERVICE CPT-HEADLAMPS	TC	3	------	561071
C 244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812
C 245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812
C 246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 247					
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250					
C 251	LH SW PANEL-FAST IDLE	EATON	10	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 252					
C 253	LH SW PANEL-ETHER	EATON	10	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH SW PANEL-JACOB	EATON	10	------	562763
C 256					
C 257					
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260					
C 261					
C 262	UNDER DASH RH-KEYLESS MODULE	AMP MUL	22	------	562675
C 263	UNDER DASH RH- KEYLESS MODULE	AMP MUL	26	------	562676
C 264	ENTRANCE DOOR-KEYPAD	AMP CPC	9	561536	561637
C 265	RH SW PANEL -DRIVER'S DOOR SW.	EATON	10	------	562763
C 266	ENTRANCE DOOR-KEYLESS	AMP CPC	14	561585	
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274					
C 275					
C 276	UNDER DASH RH -3 WAY LTS	EATON	10	------	562763
C 277	LH CONSOLE -DOCK. & CORN. SW.	EATON	10	------	562763
C 278	LH CONSOLE -BACK-UP CANCEL SW.	EATON	10	------	562763
C 279					
C 280	UNDER DASH RH -3 WAY LTS	EATON	10	------	562763
C 281	LH CONSOLE -LEVEL LOW	AMP MNL	4	560851	560852
C 282	RH SW PANEL -MONITOR OPER. SW.	EATON	10	------	562763
C 283	LH CONSOLE -LOW DOCKING SW.	EATON	10	------	562763
C 284					
C 285	ENTRANCE DOOR -SOL. DOOR	PED PO	2	------	562076
C 286	RH SW PANEL-A/C & HEAT	EATON	10	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	10	------	562763
C 289					
C 290	LUGGAGE COMPT -DOOR LOCK	AMP MNL	4	561551	561668
C 291	LUGGAGE COMPT -DOOR LOCK	AMP MNL	4	561551	561668
C 292					
C 293					
C 294					
C 295					
C 296					
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299					
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH CONSOLE SW-LUG. DOOR LOCK	EATON	10	------	562763
C 311					
C 312					
C 313					
C 314					
C 315	LH CONSOLE SW-LH STORE	EATON	10	------	562763
C 316					
C 317	LH CONSOLE SW-RH STORE	EATON	10	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	10	------	562763
C 319					
C 320	RH SW PANEL-DRIVER'S LTS	EATON	10	------	562763
C 321					
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN.	AMP CPC	9	561636	561637
C 324					
C 325	LH CONSOLE SW-KNEELING	EATON	8	------	562763
C 326	LH CONSOLE SW-SPARE	EATON	8	------	562763
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328					
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331					
C 332					
C 333					
C 334					
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346	INSTR PANEL LH-SWITCH LTS	EATON	2	------	561837
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351					
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360	INSTR PANEL RH-B/U MONITOR	AMP MNL	2	561248	561247
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362					
C 363					
C 364					
C 365					
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367					
C 368					
C 369					
C 370					
C 371					
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376	LH SWITCH PANEL	AMP CPC	37	561714	562005
C 377	LH SW PANEL-STOP ENG.OVERIDE	EATON	10	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381	INST. PANEL CENTER-ANTI-THEFT LED	AMP MNL	2	561248	561247

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 382					
C 383					
C 384					
C 385					
C 386					
C 387					
C 388					
C 389					
C 390					
C 391					
C 392					
C 393					
C 394					
C 395					
C 396					
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. - EXITING SIGNAL ALTERN.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402	RR DRIVE AXLE-AIR DRYER	PED MP	2	------	562251
C 403					
C 404					
C 405					
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH SW PANEL-MASTER SWITCH	EATON	10	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9 - 12		
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562237	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	INSTR. PANEL LH-HTR WINDSH.SW	EATON	10	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	------
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427					
C 428					
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	DEUTSCH	4	562479	562477
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437					
C 438					
C 439					
C 440					
C 441					
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450					
C 451					
C 452					
C 453					
C 454					
C 455					
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561590
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDL CONN W.T.	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468					
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER'S.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478					
C 479	HVAC MODULE (NOT USED)	-------	-	------	------
C 480	UNDER DASH RH-DR'S FAN SPEED CTR MOD	PED	4	561889	561890
C 481	UNDER DASH RH-DR'S FAN SPEED CTR MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. -SEAT ELECTRICAL SEAT	PED PC	2	------	562237
C 484	UNDER DASH LH-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH-DASH & DEFROST DAMP.M.	AMP MNL	3	561667	561550
C 486					
C 487					
C 488					
C 489					
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER MOD	PED MP	7	562433	------
C 502	LH CONSOLE-PRE HEATER SW.	EATON	10	------	562763
C 503					
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	12	------	562681
C 506	LH CONSOLE-LEVEL LOW SW.	EATON	10	------	562763
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515					
C 516					
C 517					
C 518					
C 519					
C 520					
C 521					
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	------	561183
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528					
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533					
C 534					
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541					
C 542					
C 543	RR JCT BOX-PARK. BRAKE STOP LTS RESIS.	PED WP	2	561566	561690
C 544					
C 545					
C 546	LH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	10	------	562763
C 549					
C 550	EVAPORATOR COMPARTIMENT	ITT	2	561813	562159
C 551	RR JCT BOX - A/C PANEL	PED	2	561566	561690
C 552					
C 553					
C 554					
C 555					
C 556					
C 557					
C 558					
C 559					
C 560					
C 561					
C 562					
C 563					
C 564					
C 565					
C 566					
C 567					
C 568					
C 569					
C 570	UNDER DASH PANEL TTLT MODULE	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT MODULE	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT MODULE	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT MODULE	MOLEX	8		562465
C 574					
C 575					
C 576					
C 577					
C 578					
C 579					
C 580					
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587					
C 588					
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593					
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595					
C 596					
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5	------	562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5	------	562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601					
C 602					
C 603					
C 604					
C 605					
C 606					
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
L 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
L X	CLUSTER	JAE	22	------	562766
R Y	CLUSTER	JAE	30	------	562767
X	CLUSTER	JAE	22	------	562764

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C X1	FR LH UPPER WHELL CPT-ABS	AMP	18		562792
C X2	FR LH UPPER WHELL CPT-ABS	AMP	6		562793
C X3	FR LH UPPER WHELL CPT-ABS	AMP	9		562794
C X4	FR LH UPPER WHELL CPT-ABS	AMP	15		562795`
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
CV I2	RR JCT BOX-WORLD TRANS. SHIFT & RET.	AMP CPC	9	561636	561637
C Y	CLUSTER	JAE	30		562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10					
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22					
C 23					
C 24					
C 25					
C 26					
C 27					
C 28					
C 29					
C 30					
C 31					
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33					
C 34					
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36					
C 37					
C 38					
C 39					
C 40					
C 41					
C 42					
C 43					
C 44					
C 45	FR. JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46					
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERV. COMPT.-PRESS SW. PARK BRAKE	DEUTSCH	4	562479	562477
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50					
C 51					
C 52	RR JCT BOX	AMP CPC	22	561709	561710
C 53					
C 54					
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					
C 57					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 58	RR JCT BOX - A/C PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX - A/C PANEL	AMP CPC	14	561585	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	24	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	LUGG. COMPT. – DOOR LOCK	AMP MNL	2	561551	561668
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-DOOR LOCK		4	561551	561668
C 78	LUGGAGE COMPT.-LTS - COND. CPT	AMP MNL	2	561248	561247
C 79	LUGGAGE COMPT.-LTS - EVAP. CPT.	AMP MNL	2	561248	561247
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 82	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 83	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 84	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 85	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 86	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88					
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS	WABCO	35	------	641094
C 94					
C 95					
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100					
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108					
C 109					
C 110					
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	EVAPORATOR COMPT-SPEED MOT CTRL	DEUTSCH	5	------	562566
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115	ENGINE COMPT-AIR DRYER	PED WP	2	561566	561690
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117					
C 118					
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-CAMERA DOOR VALVE	PED WP	2	561566	561690
C 123					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126					
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX-A/C PANEL DIODE CON.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142					
C 143					
C 144					
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150	ENGINE CPT. - FUEL FILTER	PED WP	1	561605	561577
C 151	EVAPORATOR CPT-THERMOSTAT	ITT	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	ENGINE CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	ENGINE CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	DEUTSCH	2	562486	562485
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	562486	562485
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172	FR SERV. COMPT.- LEVEL LOW	AMP CPC	9	561635	561637
C 173	LAV.POTABLE-WATER TANK HEAT.	AMP MNL	2	560900	560898
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 180					
C 182					
C 183					
C 184					
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C 190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690
C 191	ENGINE CPT RR DOOR RH STOP LT	PED WP	2	561566	561690
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C 193					
C 194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690
C 195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690
C 196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690
C 197					
C 198					
C 199	ENGINE CPT RR DOOR LICENCE LT	DOM AUTO	2	930210	------
C 200					
C 201	AUX. UNIT CONTROL	PED WP	4	561610	561611
C 202	AUX. UNIT CONTROL	PED WP	3	561781	561782
C 203	AUX. UNIT CONTROL	PED WP	2	561566	561690
C 204	AUX. LIQUID SOL.VALVE	PED WP	2	561566	561690
C 205					
C 206					
C 207					
C 208					
C 209					
C 210					
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214					
C 215					
C 216					
C 217					
C 218					
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 224					
C 225					
C 226					
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233					
C 234					
C 235					
C 236					
C 237					
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239					
C 240	LUGG. CPT.-CO-PILOT SEAT HEATER	AMP MNL	2	560900	560898
C 241					
C 242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 243	FR SERVICE CPT-HEADLAMPS	TC	3	------	561071
C 244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812
C 245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812
C 246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 247					
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250					
C 251	LH SW PANEL-FAST IDLE	EATON	10	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 252					
C 253	LH SW PANEL-ETHER	EATON	10	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH SW PANEL-JACOB	EATON	10	------	562763
C 256					
C 257					
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260					
C 261					
C 262	UNDER DASH RH-KEYLESS MODULE	AMP MUL	22	------	562675
C 263	UNDER DASH RH- KEYLESS MODULE	AMP MUL	26	------	562676
C 264	ENTRANCE DOOR-KEYPAD	AMP CPC	9	561536	561637
C 265	RH SW PANEL -DRIVER'S DOOR SW.	EATON	10	------	562763
C 266	ENTRANCE DOOR-KEYLESS	AMP CPC	14	561585	
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274					
C 275					
C 276	UNDER DASH RH -3 WAY LTS	EATON	10	------	562763
C 277	LH CONSOLE -DOCK. & CORN. SW.	EATON	10	------	562763
C 278	LH CONSOLE -BACK-UP CANCEL SW.	EATON	10	------	562763
C 279					
C 280	UNDER DASH RH -3 WAY LTS	EATON	10	------	562763
C 281	LH CONSOLE -LEVEL LOW	AMP MNL	4	560851	560852
C 282	RH SW PANEL -MONITOR OPER. SW.	EATON	10	------	562763
C 283	LH CONSOLE -LOW DOCKING SW.	EATON	10	------	562763
C 284					
C 285	ENTRANCE DOOR -SOL. DOOR	PED PO	2	------	562076
C 286	RH SW PANEL-A/C & HEAT	EATON	10	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	10	------	562763
C 289					
C 290	LUGGAGE COMPT -DOOR LOCK	AMP MNL	4	561551	561668
C 291	LUGGAGE COMPT -DOOR LOCK	AMP MNL	4	561551	561668
C 292					
C 293					
C 294					
C 295					
C 296					
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299					
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH CONSOLE SW-LUG. DOOR LOCK	EATON	10	------	562763
C 311					
C 312					
C 313					
C 314					
C 315	LH CONSOLE SW-LH STORE	EATON	10	------	562763
C 316					
C 317	LH CONSOLE SW-RH STORE	EATON	10	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	10	------	562763
C 319					
C 320	RH SW PANEL-DRIVER'S LTS	EATON	10	------	562763
C 321					
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN.	AMP CPC	9	561636	561637
C 324					
C 325	LH CONSOLE SW-KNEELING	EATON	8	------	562763
C 326	LH CONSOLE SW-SPARE	EATON	8	------	562763
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328					
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331					
C 332					
C 333					
C 334					
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346	INSTR PANEL LH-SWITCH LTS	EATON	2	------	561837
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351					
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360	INSTR PANEL RH-B/U MONITOR	AMP MNL	2	561248	561247
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362					
C 363					
C 364					
C 365					
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367					
C 368					
C 369					
C 370					
C 371					
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376	LH SWITCH PANEL	AMP CPC	37	561714	562005
C 377	LH SW PANEL-STOP ENG.OVERIDE	EATON	10	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381	INST. PANEL CENTER-ANTI-THEFT LED	AMP MNL	2	561248	561247

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 382					
C 383					
C 384					
C 385					
C 386					
C 387					
C 388					
C 389					
C 390					
C 391					
C 392					
C 393					
C 394					
C 395					
C 396					
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. - EXITING SIGNAL ALTERN.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402	RR DRIVE AXLE-AIR DRYER	PED MP	2	------	562251
C 403					
C 404					
C 405					
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH SW PANEL-MASTER SWITCH	EATON	10	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9 - 12		
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562237	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	INSTR. PANEL LH-HTR WINDSH.SW	EATON	10	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	------
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427					
C 428					
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	DEUTSCH	4	562479	562477
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437					
C 438					
C 439					
C 440					
C 441					
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450					
C 451					
C 452					
C 453					
C 454					
C 455					
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561590
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDL CONN W.T.	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468					
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER'S.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478					
C 479	HVAC MODULE (NOT USED)	-------	-	------	------
C 480	UNDER DASH RH-DR'S FAN SPEED CTR MOD	PED	4	561889	561890
C 481	UNDER DASH RH-DR'S FAN SPEED CTR MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. -SEAT ELECTRICAL SEAT	PED PC	2	------	562237
C 484	UNDER DASH LH-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH-DASH & DEFROST DAMP.M.	AMP MNL	3	561667	561550
C 486					
C 487					
C 488					
C 489					
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER MOD	PED MP	7	562433	------
C 502	LH CONSOLE-PRE HEATER SW.	EATON	10	------	562763
C 503					
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	12	------	562681
C 506	LH CONSOLE-LEVEL LOW SW.	EATON	10	------	562763
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515					
C 516					
C 517					
C 518					
C 519					
C 520					
C 521					
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	------	561183
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528					
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533					
C 534					
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541					
C 542					
C 543	RR JCT BOX-PARK. BRAKE STOP LTS RESIS.	PED WP	2	561566	561690
C 544					
C 545					
C 546	LH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	10	------	562763
C 549					
C 550	EVAPORATOR COMPARTIMENT	ITT	2	561813	562159
C 551	RR JCT BOX - A/C PANEL	PED	2	561566	561690
C 552					
C 553					
C 554					
C 555					
C 556					
C 557					
C 558					
C 559					
C 560					
C 561					
C 562					
C 563					
C 564					
C 565					
C 566					
C 567					
C 568					
C 569					
C 570	UNDER DASH PANEL TTLT MODULE	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT MODULE	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT MODULE	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT MODULE	MOLEX	8		562465
C 574					
C 575					
C 576					
C 577					
C 578					
C 579					
C 580					
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587					
C 588					
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593					
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595					
C 596					
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5	------	562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5	------	562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601					
C 602					
C 603					
C 604					
C 605					
C 606					
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
L 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
L X	CLUSTER	JAE	22	------	562766
R Y	CLUSTER	JAE	30	------	562767
X	CLUSTER	JAE	22	------	562764

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C X1	FR LH UPPER WHELL CPT-ABS	AMP	18		562792
C X2	FR LH UPPER WHELL CPT-ABS	AMP	6		562793
C X3	FR LH UPPER WHELL CPT-ABS	AMP	9		562794
C X4	FR LH UPPER WHELL CPT-ABS	AMP	15		562795`
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
CV I2	RR JCT BOX-WORLD TRANS. SHIFT & RET.	AMP CPC	9	561636	561637
C Y	CLUSTER	JAE	30		562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10					
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22					
C 23					
C 24					
C 25					
C 26					
C 27					
C 28					
C 29					
C 30					
C 31					
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33					
C 34					
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36					
C 37					
C 38					
C 39					
C 40					
C 41					
C 42					
C 43					
C 44					
C 45	FR. JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46					
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERV. COMPT.-PRESS SW. PARK BRAKE	DEUTSCH	4	562479	562477
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50					
C 51					
C 52	RR JCT BOX	AMP CPC	22	561709	561710
C 53					
C 54					
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					
C 57					
C 58	RR JCT BOX - A/C PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX - A/C PANEL	AMP CPC	14	561585	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	24	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	LUGG. COMPT. – DOOR LOCK	AMP MNL	2	561551	561668
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-DOOR LOCK		4	561551	561668
C 78	LUGGAGE COMPT.-LTS - COND. CPT	AMP MNL	2	561248	561247
C 79	LUGGAGE COMPT.-LTS - EVAP. CPT.	AMP MNL	2	561248	561247
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 82	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 83	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 84	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 85	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 86	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88					
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93	FR LH UPPER WHELL CPT-ABS	WABCO	35	------	641094
C 94					
C 95					
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100					
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108					
C 109					
C 110					
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	EVAPORATOR COMPT-SPEED MOT CTRL	DEUTSCH	5	------	562566
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115	ENGINE COMPT-AIR DRYER	PED WP	2	561566	561690
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117					
C 118					
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-CAMERA DOOR VALVE	PED WP	2	561566	561690
C 123					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126					
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX-A/C PANEL DIODE CON.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142					
C 143					
C 144					
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150	ENGINE CPT. - FUEL FILTER	PED WP	1	561605	561577
C 151	EVAPORATOR CPT-THERMOSTAT	ITT	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	ENGINE CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	ENGINE CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	DEUTSCH	2	562486	562485
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	562486	562485
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172	FR SERV. COMPT.- LEVEL LOW	AMP CPC	9	561635	561637
C 173	LAV.POTABLE-WATER TANK HEAT.	AMP MNL	2	560900	560898
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 180					
C 182					
C 183					
C 184					
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C 190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690
C 191	ENGINE CPT RR DOOR RH STOP LT	PED WP	2	561566	561690
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C 193					
C 194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690
C 195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690
C 196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690
C 197					
C 198					
C 199	ENGINE CPT RR DOOR LICENCE LT	DOM AUTO	2	930210	------
C 200					
C 201	AUX. UNIT CONTROL	PED WP	4	561610	561611
C 202	AUX. UNIT CONTROL	PED WP	3	561781	561782
C 203	AUX. UNIT CONTROL	PED WP	2	561566	561690
C 204	AUX. LIQUID SOL.VALVE	PED WP	2	561566	561690
C 205					
C 206					
C 207					
C 208					
C 209					
C 210					
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214					
C 215					
C 216					
C 217					
C 218					
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 224					
C 225					
C 226					
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233					
C 234					
C 235					
C 236					
C 237					
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239	RR I.D. LTS	PED WP	2	561566	561690
C 240	LUGG. CPT.-CO-PILOT SEAT HEATER	AMP MNL	2	560900	560898
C 241					
C 242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 243	FR SERVICE CPT-HEADLAMPS	TC	3	------	561071
C 244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812
C 245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812
C 246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 247					
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250					
C 251	LH SW PANEL-FAST IDLE	EATON	10	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 252					
C 253	LH SW PANEL-ETHER	EATON	10	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH SW PANEL-JACOB	EATON	10	------	562763
C 256					
C 257					
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260					
C 261					
C 262	UNDER DASH RH-KEYLESS MODULE	AMP MUL	22	------	562675
C 263	UNDER DASH RH- KEYLESS MODULE	AMP MUL	26	------	562676
C 264	ENTRANCE DOOR-KEYPAD	AMP CPC	9	561536	561637
C 265	RH SW PANEL -DRIVER'S DOOR SW.	EATON	10	------	562763
C 266	ENTRANCE DOOR-KEYLESS	AMP CPC	14	561585	
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274					
C 275					
C 276	UNDER DASH RH -3 WAY LTS	EATON	10	------	562763
C 277	LH CONSOLE -DOCK. & CORN. SW.	EATON	10	------	562763
C 278	LH CONSOLE -BACK-UP CANCEL SW.	EATON	10	------	562763
C 279					
C 280	UNDER DASH RH -3 WAY LTS	EATON	10	------	562763
C 281	LH CONSOLE -LEVEL LOW	AMP MNL	4	560851	560852
C 282	RH SW PANEL -MONITOR OPER. SW.	EATON	10	------	562763
C 283	LH CONSOLE -LOW DOCKING SW.	EATON	10	------	562763
C 284					
C 285	ENTRANCE DOOR -SOL. DOOR	PED PO	2	------	562076
C 286	RH SW PANEL-A/C & HEAT	EATON	10	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	10	------	562763
C 289					
C 290	LUGGAGE COMPT -DOOR LOCK	AMP MNL	4	561551	561668
C 291	LUGGAGE COMPT -DOOR LOCK	AMP MNL	4	561551	561668
C 292	FR SERVICE CMPT-LEVEL LOW		2		641385
C 293	FR SERVICE CMPT-LEVEL LOW		2		641385
C 294	FR SERVICE CMPT-LEVEL LOW		2		641385
C 295	FR SERVICE CMPT-LEVEL LOW		2		641385
C 296	FR SERVICE CMPT-LEVEL LOW		2		641385
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299					
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH CONSOLE SW-LUG. DOOR LOCK	EATON	10	------	562763
C 311					
C 312					
C 313					
C 314					
C 315	LH CONSOLE SW-LH STORE	EATON	10	------	562763
C 316					
C 317	LH CONSOLE SW-RH STORE	EATON	10	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	10	------	562763
C 319					
C 320	RH SW PANEL-DRIVER'S LTS	EATON	10	------	562763
C 321					
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN.	AMP CPC	9	561636	561637
C 324					
C 325	LH CONSOLE SW-KNEELING	EATON	8	------	562763
C 326	LH CONSOLE SW-SPARE	EATON	8	------	562763
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328					
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331					
C 332					
C 333					
C 334					
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346	INSTR PANEL LH-SWITCH LTS	EATON	2	------	561837
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351					
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360	INSTR PANEL RH-B/U MONITOR	AMP MNL	2	561248	561247
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362					
C 363					
C 364					
C 365					
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367					
C 368					
C 369					
C 370					
C 371					
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376	LH SWITCH PANEL	AMP CPC	37	561714	562005
C 377	LH SW PANEL-STOP ENG.OVERIDE	EATON	10	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381	INST. PANEL CENTER-ANTI-THEFT LED	AMP MNL	2	561248	561247

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 382					
C 383					
C 384					
C 385					
C 386					
C 387					
C 388					
C 389					
C 390					
C 391					
C 392					
C 393					
C 394					
C 395					
C 396					
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. - EXITING SIGNAL ALTERN.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402	RR DRIVE AXLE-AIR DRYER	PED MP	2	------	562251
C 403					
C 404					
C 405					
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH SW PANEL-MASTER SWITCH	EATON	10	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9 - 12		
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562237	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	INSTR. PANEL LH-HTR WINDSH.SW	EATON	10	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	------
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427					
C 428					
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	DEUTSCH	4	562479	562477
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437					
C 438	EVAP. COMPT.-COND.RELAY	AMP MNL	2	561248	561247
C 439	EVAP. COMPT.-COND.RELAY	AMP MNL	2	561248	561247
C 440	EVAP. COMPT.-EVAP.RELAY	DEUTSCH	4	562479	562477
C 441					
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450					
C 451					
C 452					
C 453					
C 454					
C 455					
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561590
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDL CONN W.T.	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468					
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER'S.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478					
C 479	HVAC MODULE (NOT USED)	-------	-	------	------
C 480	UNDER DASH RH-DR'S FAN SPEED CTR MOD	PED	4	561889	561890
C 481	UNDER DASH RH-DR'S FAN SPEED CTR MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. -SEAT ELECTRICAL SEAT	PED PC	2	------	562237
C 484	UNDER DASH LH-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH-DASH & DEFROST DAMP.M.	AMP MNL	3	561667	561550
C 486					
C 487					
C 488					
C 489					
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER MOD	PED MP	7	562433	------
C 502	LH CONSOLE-PRE HEATER SW.	EATON	10	------	562763
C 503					
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	12	------	562681
C 506	LH CONSOLE-LEVEL LOW SW.	EATON	10	------	562763
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515					
C 516					
C 517					
C 518					
C 519					
C 520					
C 521					
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	------	561183
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528					
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533					
C 534					
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541					
C 542					
C 543	RR JCT BOX-PARK. BRAKE STOP LTS RESIS.	PED WP	2	561566	561690
C 544					
C 545					
C 546	LH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	10	------	562763
C 549					
C 550	EVAPORATOR COMPARTIMENT	ITT	2	561813	562159
C 551	RR JCT BOX - A/C PANEL	PED	2	561566	561690
C 552					
C 553					
C 554					
C 555					
C 556					
C 557					
C 558					
C 559					
C 560					
C 561					
C 562					
C 563					
C 564					
C 565					
C 566					
C 567					
C 568					
C 569					
C 570	UNDER DASH PANEL TTLT MODULE	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT MODULE	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT MODULE	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT MODULE	MOLEX	8		562465
C 574					
C 575					
C 576					
C 577					
C 578					
C 579					
C 580					
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587					
C 588					
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593					
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595					
C 596					
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5	------	562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5	------	562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601					
C 602					
C 603					
C 604					
C 605					
C 606					
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
L 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
L X	CLUSTER	JAE	22	------	562766
R Y	CLUSTER	JAE	30	------	562767
X	CLUSTER	JAE	22	------	562764

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C X1	FR LH UPPER WHELL CPT-ABS	AMP	18		562792
C X2	FR LH UPPER WHELL CPT-ABS	AMP	6		562793
C X3	FR LH UPPER WHELL CPT-ABS	AMP	9		562794
C X4	FR LH UPPER WHELL CPT-ABS	AMP	15		562795`
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
CV I2	RR JCT BOX-WORLD TRANS. SHIFT & RET.	AMP CPC	9	561636	561637
C Y	CLUSTER	JAE	30		562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10					
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22					
C 23					
C 24					
C 25					
C 26					
C 27					
C 28					
C 29					
C 30					
C 31					
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33					
C 34					
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36					
C 37					
C 38					
C 39					
C 40					
C 41					
C 42					
C 43					
C 44					
C 45	FR. JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46					
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERV. COMPT.-PRESS SW. PARK BRAKE	DEUTSCH	4	562479	562477
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50					
C 51					
C 52	RR JCT BOX	AMP CPC	12	561735	561734
C 53					
C 54					
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					
C 57					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 58	RR JCT BOX - A/C PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX - A/C PANEL	AMP CPC	14	561585	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	24	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	LUGG. COMPT. – DOOR LOCK	AMP MNL	2	561551	561668
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-DOOR LOCK		4	561551	561668
C 78	LUGGAGE COMPT.-LTS - COND. CPT	AMP MNL	2	561248	561247
C 79	LUGGAGE COMPT.-LTS - EVAP. CPT.	AMP MNL	2	561248	561247
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 82	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 83	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 84	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 85	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 86	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88					
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93					
C 94					
C 95					
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100					
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108					
C 109					
C 110					
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	EVAPORATOR COMPT-SPEED MOT CTRL	DEUTSCH	5	------	562566
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115	ENGINE COMPT-AIR DRYER	PED WP	2	561566	561690
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117					
C 118					
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-CAMERA DOOR VALVE	PED WP	2	561566	561690
C 123					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126					
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX-A/C PANEL DIODE CON.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142					
C 143					
C 144					
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150	ENGINE CPT. - FUEL FILTER	PED WP	1	561605	561577
C 151	EVAPORATOR CPT-THERMOSTAT	ITT	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	ENGINE CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	ENGINE CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	DEUTSCH	2	562486	562485
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	562486	562485
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172	FR SERV. COMPT.- LEVEL LOW	AMP CPC	9	561635	561637
C 173	LAV.POTABLE-WATER TANK HEAT.	AMP MNL	2	560900	560898
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 180					
C 182					
C 183					
C 184					
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C 190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690
C 191	ENGINE CPT RR DOOR RH STOP LT	PED WP	2	561566	561690
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C 193					
C 194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690
C 195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690
C 196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690
C 197					
C 198					
C 199	ENGINE CPT RR DOOR LICENCE LT	DOM AUTO	2	930210	------
C 200					
C 201	AUX. UNIT CONTROL	PED WP	4	561610	561611
C 202	AUX. UNIT CONTROL	PED WP	3	561781	561782
C 203	AUX. UNIT CONTROL	PED WP	2	561566	561690
C 204	AUX. LIQUID SOL.VALVE	PED WP	2	561566	561690
C 205					
C 206					
C 207					
C 208					
C 209					
C 210					
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214					
C 215					
C 216					
C 217					
C 218					
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 224					
C 225					
C 226					
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233					
C 234					
C 235					
C 236					
C 237					
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239	RR I.D. LTS	PED WP	2	561566	561690
C 240	LUGG. CPT.-CO-PILOT SEAT HEATER	AMP MNL	2	560900	560898
C 241					
C 242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 243	FR SERVICE CPT-HEADLAMPS	TC	3	------	561071
C 244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812
C 245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812
C 246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 247					
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250					
C 251	LH SW PANEL-FAST IDLE	EATON	10	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 252					
C 253	LH SW PANEL-ETHER	EATON	10	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH SW PANEL-JACOB	EATON	10	------	562763
C 256					
C 257					
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260					
C 261					
C 262	UNDER DASH RH-KEYLESS MODULE	AMP MUL	22	------	562675
C 263	UNDER DASH RH- KEYLESS MODULE	AMP MUL	26	------	562676
C 264	ENTRANCE DOOR-KEYPAD	AMP CPC	9	561536	561637
C 265	RH SW PANEL -DRIVER'S DOOR SW.	EATON	10	------	562763
C 266	ENTRANCE DOOR-KEYLESS	AMP CPC	14	561585	
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274					
C 275					
C 276	UNDER DASH RH -3 WAY LTS	EATON	10	------	562763
C 277	LH CONSOLE -DOCK. & CORN. SW.	EATON	10	------	562763
C 278	LH CONSOLE -BACK-UP CANCEL SW.	EATON	10	------	562763
C 279					
C 280	UNDER DASH RH -3 WAY LTS	EATON	10	------	562763
C 281	LH CONSOLE -LEVEL LOW	AMP MNL	4	560851	560852
C 282	RH SW PANEL -MONITOR OPER. SW.	EATON	10	------	562763
C 283	LH CONSOLE -LOW DOCKING SW.	EATON	10	------	562763
C 284					
C 285	ENTRANCE DOOR -SOL. DOOR	PED PO	2	------	562076
C 286	RH SW PANEL-A/C & HEAT	EATON	10	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	10	------	562763
C 289					
C 290	LUGGAGE COMPT -DOOR LOCK	AMP MNL	4	561551	561668
C 291	LUGGAGE COMPT -DOOR LOCK	AMP MNL	4	561551	561668
C 292	FR SERVICE CMPT-LEVEL LOW		2		641385
C 293	FR SERVICE CMPT-LEVEL LOW		2		641385
C 294	FR SERVICE CMPT-LEVEL LOW		2		641385
C 295	FR SERVICE CMPT-LEVEL LOW		2		641385
C 296	FR SERVICE CMPT-LEVEL LOW		2		641385
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299					
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH CONSOLE SW-LUG. DOOR LOCK	EATON	10	------	562763
C 311					
C 312					
C 313					
C 314					
C 315	LH CONSOLE SW-LH STORE	EATON	10	------	562763
C 316					
C 317	LH CONSOLE SW-RH STORE	EATON	10	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	10	------	562763
C 319					
C 320	RH SW PANEL-DRIVER'S LTS	EATON	10	------	562763
C 321					
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN.	AMP CPC	9	561636	561637
C 324					
C 325	LH CONSOLE SW-KNEELING	EATON	8	------	562763
C 326	LH CONSOLE SW-SPARE	EATON	8	------	562763
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328					
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331					
C 332					
C 333					
C 334					
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346	INSTR PANEL LH-SWITCH LTS	EATON	2	------	561837
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351					
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360	INSTR PANEL RH-B/U MONITOR	AMP MNL	2	561248	561247
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362					
C 363					
C 364					
C 365					
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367					
C 368					
C 369					
C 370					
C 371					
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376	LH SWITCH PANEL	AMP CPC	37	561714	562005
C 377	LH SW PANEL-STOP ENG.OVERIDE	EATON	10	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381	INST. PANEL CENTER-ANTI-THEFT LED	AMP MNL	2	561248	561247

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 382					
C 383					
C 384					
C 385					
C 386					
C 387					
C 388					
C 389					
C 390					
C 391					
C 392					
C 393					
C 394					
C 395					
C 396					
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. - EXITING SIGNAL ALTERN.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402	RR DRIVE AXLE-AIR DRYER	PED MP	2	------	562251
C 403					
C 404					
C 405					
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH SW PANEL-MASTER SWITCH	EATON	10	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9 - 12		
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562237	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	INSTR. PANEL LH-HTR WINDSH.SW	EATON	10	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	------
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427					
C 428					
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	DEUTSCH	4	562479	562477
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437					
C 438	EVAP. COMPT.-COND.RELAY	AMP MNL	2	561248	561247
C 439	EVAP. COMPT.-COND.RELAY	AMP MNL	2	561248	561247
C 440	EVAP. COMPT.-EVAP.RELAY	DEUTSCH	4	562479	562477
C 441					
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450					
C 451					
C 452					
C 453					
C 454					
C 455					
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561590
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDL CONN W.T.	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468					
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER'S.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478					
C 479	HVAC MODULE (NOT USED)	-------	-	------	------
C 480	UNDER DASH RH-DR'S FAN SPEED CTR MOD	PED	4	561889	561890
C 481	UNDER DASH RH-DR'S FAN SPEED CTR MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. -SEAT ELECTRICAL SEAT	PED PC	2	------	562237
C 484	UNDER DASH LH-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH-DASH & DEFROST DAMP.M.	AMP MNL	3	561667	561550
C 486					
C 487					
C 488					
C 489					
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER MOD	PED MP	7	562433	------
C 502	LH CONSOLE-PRE HEATER SW.	EATON	10	------	562763
C 503					
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	12	------	562681
C 506	LH CONSOLE-LEVEL LOW SW.	EATON	10	------	562763
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515					
C 516					
C 517					
C 518					
C 519					
C 520					
C 521					
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	------	561183
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528					
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533					
C 534					
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541					
C 542					
C 543	RR JCT BOX-PARK. BRAKE STOP LTS RESIS.	PED WP	2	561566	561690
C 544					
C 545					
C 546	LH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	10	------	562763
C 549					
C 550	EVAPORATOR COMPARTIMENT	ITT	2	561813	562159
C 551	RR JCT BOX - A/C PANEL	PED	2	561566	561690
C 552					
C 553					
C 554					
C 555					
C 556					
C 557					
C 558					
C 559					
C 560					
C 561					
C 562					
C 563					
C 564					
C 565					
C 566					
C 567					
C 568					
C 569					
C 570	UNDER DASH PANEL TTLT MODULE	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT MODULE	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT MODULE	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT MODULE	MOLEX	8		562465
C 574					
C 575					
C 576					
C 577					
C 578					
C 579					
C 580					
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587					
C 588					
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593					
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595					
C 596					
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5	------	562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5	------	562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601					
C 602					
C 603					
C 604					
C 605					
C 606					
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
L 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
L X	CLUSTER	JAE	22	------	562766
R Y	CLUSTER	JAE	30	------	562767
X	CLUSTER	JAE	22	------	562764

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C X1	FR LH UPPER WHELL CPT-ABS	AMP	18		562792
C X2	FR LH UPPER WHELL CPT-ABS	AMP	6		562793
C X3	FR LH UPPER WHELL CPT-ABS	AMP	9		562794
C X4	FR LH UPPER WHELL CPT-ABS	AMP	15		562795`
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
CV I2	RR JCT BOX-WORLD TRANS. SHIFT & RET.	AMP CPC	9	561636	561637
C Y	CLUSTER	JAE	30		562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10					
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22					
C 23					
C 24					
C 25					
C 26					
C 27					
C 28					
C 29					
C 30					
C 31					
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33					
C 34					
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36					
C 37					
C 38					
C 39					
C 40					
C 41					
C 42					
C 43					
C 44					
C 45	FR. JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46					
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERV. COMPT.-PRESS SW. PARK BRAKE	DEUTSCH	4	562479	562477
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50					
C 51					
C 52	RR JCT BOX	AMP CPC	12	561735	561734
C 53					
C 54					
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					
C 57					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 58	RR JCT BOX - A/C PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX - A/C PANEL	AMP CPC	14	561585	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	24	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	LUGG. COMPT. – DOOR LOCK	AMP MNL	2	561551	561668
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-DOOR LOCK		4	561551	561668
C 78	LUGGAGE COMPT.-LTS - COND. CPT	AMP MNL	2	561248	561247
C 79	LUGGAGE COMPT.-LTS - EVAP. CPT.	AMP MNL	2	561248	561247
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 82	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 83	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 84	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 85	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 86	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88					
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93					
C 94					
C 95					
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100					
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108					
C 109					
C 110					
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	EVAPORATOR COMPT-SPEED MOT CTRL	DEUTSCH	5	------	562566
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115	ENGINE COMPT-AIR DRYER	PED WP	2	561566	561690
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117					
C 118					
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-CAMERA DOOR VALVE	PED WP	2	561566	561690
C 123					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126					
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX-A/C PANEL DIODE CON.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142					
C 143					
C 144					
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150	ENGINE CPT. - FUEL FILTER	PED WP	1	561605	561577
C 151	EVAPORATOR CPT-THERMOSTAT	ITT	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	ENGINE CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	ENGINE CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	DEUTSCH	2	562486	562485
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	562486	562485
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172	FR SERV. COMPT.- LEVEL LOW	AMP CPC	9	561635	561637
C 173	LAV.POTABLE-WATER TANK HEAT.	AMP MNL	2	560900	560898
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 180					
C 182					
C 183					
C 184					
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C 190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690
C 191	ENGINE CPT RR DOOR RH STOP LT	PED WP	2	561566	561690
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C 193					
C 194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690
C 195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690
C 196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690
C 197					
C 198					
C 199	ENGINE CPT RR DOOR LICENCE LT	DOM AUTO	2	930210	------
C 200					
C 201	AUX. UNIT CONTROL	PED WP	4	561610	561611
C 202	AUX. UNIT CONTROL	PED WP	3	561781	561782
C 203	AUX. UNIT CONTROL	PED WP	2	561566	561690
C 204	AUX. LIQUID SOL.VALVE	PED WP	2	561566	561690
C 205					
C 206					
C 207					
C 208					
C 209					
C 210					
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214					
C 215					
C 216					
C 217					
C 218					
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 224					
C 225					
C 226					
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233					
C 234					
C 235					
C 236					
C 237					
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239	RR I.D. LTS	PED WP	2	561566	561690
C 240	LUGG. CPT.-CO-PILOT SEAT HEATER	AMP MNL	2	560900	560898
C 241					
C 242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 243	FR SERVICE CPT-HEADLAMPS	TC	3	------	561071
C 244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812
C 245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812
C 246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 247					
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250					
C 251	LH SW PANEL-FAST IDLE	EATON	10	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 252					
C 253	LH SW PANEL-ETHER	EATON	10	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH SW PANEL-JACOB	EATON	10	------	562763
C 256					
C 257					
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260					
C 261					
C 262	UNDER DASH RH-KEYLESS MODULE	AMP MUL	22	------	562675
C 263	UNDER DASH RH- KEYLESS MODULE	AMP MUL	26	------	562676
C 264	ENTRANCE DOOR-KEYPAD	AMP CPC	9	561536	561637
C 265	RH SW PANEL -DRIVER'S DOOR SW.	EATON	10	------	562763
C 266	ENTRANCE DOOR-KEYLESS	AMP CPC	14	561585	
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274					
C 275					
C 276	UNDER DASH RH -3 WAY LTS	EATON	10	------	562763
C 277	LH CONSOLE -DOCK. & CORN. SW.	EATON	10	------	562763
C 278	LH CONSOLE -BACK-UP CANCEL SW.	EATON	10	------	562763
C 279	FR SERVICE CPT- STEERING ZF	DEUTSCH	2		562485
C 280	UNDER DASH RH -3 WAY LTS	EATON	10	------	562763
C 281	LH CONSOLE -LEVEL LOW	AMP MNL	4	560851	560852
C 282	RH SW PANEL -MONITOR OPER. SW.	EATON	10	------	562763
C 282	FR SERVICE CPT- STEERING GEAR BOX ZF	VOLVO	2		562928
C 283	LH CONSOLE -LOW DOCKING SW.	EATON	10	------	562763
C 284					
C 285	ENTRANCE DOOR -SOL. DOOR	PED PO	2	------	562076
C 286	RH SW PANEL-A/C & HEAT	EATON	10	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	10	------	562763
C 289					
C 290	LUGGAGE COMPT -DOOR LOCK	AMP MNL	4	561551	561668
C 291	LUGGAGE COMPT -DOOR LOCK	AMP MNL	4	561551	561668
C 292	FR SERVICE CMPT-LEVEL LOW		2		641385
C 293	FR SERVICE CMPT-LEVEL LOW		2		641385
C 294	FR SERVICE CMPT-LEVEL LOW		2		641385
C 295	FR SERVICE CMPT-LEVEL LOW		2		641385
C 296	FR SERVICE CMPT-LEVEL LOW		2		641385
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299					
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH CONSOLE SW-LUG. DOOR LOCK	EATON	10	------	562763
C 311					
C 312					
C 313					
C 314					
C 315	LH CONSOLE SW-LH STORE	EATON	10	------	562763
C 316					
C 317	LH CONSOLE SW-RH STORE	EATON	10	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	10	------	562763
C 319					
C 320	RH SW PANEL-DRIVER'S LTS	EATON	10	------	562763
C 321					
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN.	AMP CPC	9	561636	561637
C 324					
C 325	LH CONSOLE SW-KNEELING	EATON	8	------	562763
C 326	LH CONSOLE SW-SPARE	EATON	8	------	562763
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328					
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331					
C 332					
C 333					
C 334					
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346	INSTR PANEL LH-SWITCH LTS	EATON	2	------	561837
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351					
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360	INSTR PANEL RH-B/U MONITOR	AMP MNL	2	561248	561247
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362					
C 363					
C 364					
C 365					
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367					
C 368					
C 369					
C 370					
C 371					
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376	LH SWITCH PANEL	AMP CPC	37	561714	562005
C 377	LH SW PANEL-STOP ENG.OVERIDE	EATON	10	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 381	INST. PANEL CENTER-ANTI-THEFT LED	AMP MNL	2	561248	561247
C 382					
C 383					
C 384					
C 385					
C 386					
C 387					
C 388					
C 389					
C 390					
C 391					
C 392					
C 393					
C 394					
C 395					
C 396					
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. - EXITING SIGNAL ALTERN.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402	RR DRIVE AXLE-AIR DRYER	PED MP	2	------	562251
C 403					
C 404					
C 405					
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH SW PANEL-MASTER SWITCH	EATON	10	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9 - 12		
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562237	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	INSTR. PANEL LH-HTR WINDSH.SW	EATON	10	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	------
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427					
C 428					
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	DEUTSCH	4	562479	562477
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437					
C 438	EVAP. COMPT.-COND.RELAY	AMP MNL	2	561248	561247
C 439	EVAP. COMPT.-COND.RELAY	AMP MNL	2	561248	561247
C 440	EVAP. COMPT.-EVAP.RELAY	DEUTSCH	4	562479	562477
C 441					
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450					
C 451					
C 452					
C 453					
C 454					
C 455					
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561590
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDL CONN W.T.	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468					
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER'S.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478					
C 479	HVAC MODULE (NOT USED)	-------	-	------	------
C 480	UNDER DASH RH-DR'S FAN SPEED CTR MOD	PED	4	561889	561890
C 481	UNDER DASH RH-DR'S FAN SPEED CTR MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. -SEAT ELECTRICAL SEAT	PED PC	2	------	562237
C 484	UNDER DASH LH-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH-DASH & DEFROST DAMP.M.	AMP MNL	3	561667	561550
C 486					
C 487					
C 488					
C 489					
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER MOD	PED MP	7	562433	------
C 502	LH CONSOLE-PRE HEATER SW.	EATON	10	------	562763
C 503					
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	12	------	562681
C 506	LH CONSOLE-LEVEL LOW SW.	EATON	10	------	562763
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515					
C 516					
C 517					
C 518					
C 519					
C 520					
C 521					
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	------	561183
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528					
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533					
C 534					
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541					
C 542					
C 543	RR JCT BOX-PARK. BRAKE STOP LTS RESIS.	PED WP	2	561566	561690
C 544					
C 545					
C 546	LH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	10	------	562763
C 549					
C 550	EVAPORATOR COMPARTIMENT	ITT	2	561813	562159
C 551	RR JCT BOX - A/C PANEL	PED	2	561566	561690
C 552					
C 553					
C 554					
C 555					
C 556					
C 557					
C 558					
C 559					
C 560					
C 561					
C 562					
C 563					
C 564					
C 565					
C 566					
C 567					
C 568					
C 569					
C 570	UNDER DASH PANEL TTLT MODULE	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT MODULE	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT MODULE	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT MODULE	MOLEX	8		562465
C 574					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 575					
C 576					
C 577					
C 578					
C 579					
C 580					
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587					
C 588					
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593					
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595					
C 596					
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5	------	562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5	------	562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601					
C 602					
C 603					
C 604					
C 605					
C 606					
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
L 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
L X	CLUSTER	JAE	22	------	562766
R Y	CLUSTER	JAE	30	------	562767
X	CLUSTER	JAE	22	------	562764

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C X1	FR LH UPPER WHELL CPT-ABS	AMP	18		562792
C X2	FR LH UPPER WHELL CPT-ABS	AMP	6		562793
C X3	FR LH UPPER WHELL CPT-ABS	AMP	9		562794
C X4	FR LH UPPER WHELL CPT-ABS	AMP	15		562795`
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
CV I2	RR JCT BOX-WORLD TRANS. SHIFT & RET.	AMP CPC	9	561636	561637
C Y	CLUSTER	JAE	30		562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10					
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22					
C 23					
C 24					
C 25					
C 26					
C 27					
C 28					
C 29					
C 30					
C 31					
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33					
C 34					
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36					
C 37					
C 38					
C 39					
C 40					
C 41					
C 42					
C 43					
C 44					
C 45	FR. JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46					
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERV. COMPT.-PRESS SW. PARK BRAKE	DEUTSCH	4	562479	562477
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50					
C 51					
C 52	RR JCT BOX	AMP CPC	12	561735	561734
C 53					
C 54					
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					
C 57					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 58	RR JCT BOX - A/C PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX - A/C PANEL	AMP CPC	14	561585	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	24	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	LUGG. COMPT. – DOOR LOCK	AMP MNL	2	561551	561668
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-DOOR LOCK		4	561551	561668
C 78	LUGGAGE COMPT.-LTS - COND. CPT	AMP MNL	2	561248	561247
C 79	LUGGAGE COMPT.-LTS - EVAP. CPT.	AMP MNL	2	561248	561247
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 82	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 83	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 84	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 85	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 86	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88					
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93					
C 94					
C 95					
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100					
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108					
C 109					
C 110					
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	EVAPORATOR COMPT-SPEED MOT CTRL	DEUTSCH	5	------	562566
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115					
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117					
C 118					
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-CAMERA DOOR VALVE	PED WP	2	561566	561690
C 123					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126					
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX-A/C PANEL DIODE CON.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142					
C 143					
C 144					
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150	ENGINE CPT. - FUEL FILTER	PED WP	1	561605	561577
C 151	EVAPORATOR CPT-THERMOSTAT	ITT	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	ENGINE CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	ENGINE CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	DEUTSCH	2	562486	562485
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	562486	562485
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172	FR SERV. COMPT.- LEVEL LOW	AMP CPC	9	561635	561637
C 173	LAV.POTABLE-WATER TANK HEAT.	AMP MNL	2	560900	560898
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 180					
C 182					
C 183					
C 184					
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C 190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690
C 191	ENGINE CPT RR DOOR RH STOP LT	PED WP	2	561566	561690
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C 193					
C 194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690
C 195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690
C 196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690
C 197					
C 198					
C 199	ENGINE CPT RR DOOR LICENCE LT	DOM AUTO	2	930210	------
C 200					
C 201	AUX. UNIT CONTROL	PED WP	4	561610	561611
C 202	AUX. UNIT CONTROL	PED WP	3	561781	561782
C 203	AUX. UNIT CONTROL	PED WP	2	561566	561690
C 204	AUX. LIQUID SOL.VALVE	PED WP	2	561566	561690
C 205					
C 206					
C 207					
C 208					
C 209					
C 210					
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214					
C 215					
C 216					
C 217					
C 218					
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 224					
C 225					
C 226					
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233					
C 234					
C 235					
C 236					
C 237					
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239	RR I.D. LTS	PED WP	2	561566	561690
C 240	LUGG. CPT.-CO-PILOT SEAT HEATER	AMP MNL	2	560900	560898
C 241					
C 242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 243	FR SERVICE CPT-HEADLAMPS	TC	3	------	561071
C 244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812
C 245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812
C 246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C 247					
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250					
C 251	LH SW PANEL-FAST IDLE	EATON	10	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 252					
C 253	LH SW PANEL-ETHER	EATON	10	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH SW PANEL-JACOB	EATON	10	------	562763
C 256					
C 257					
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260					
C 261					
C 262	UNDER DASH RH-KEYLESS MODULE	AMP MUL	22	------	562675
C 263	UNDER DASH RH- KEYLESS MODULE	AMP MUL	26	------	562676
C 264	ENTRANCE DOOR-KEYPAD	AMP CPC	9	561536	561637
C 265	RH SW PANEL -DRIVER'S DOOR SW.	EATON	10	------	562763
C 266	ENTRANCE DOOR-KEYLESS	AMP CPC	14	561585	
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C 269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274					
C 275					
C 276	UNDER DASH RH -3 WAY LTS	EATON	10	------	562763
C 277	LH CONSOLE -DOCK. & CORN. SW.	EATON	10	------	562763
C 278	LH CONSOLE -BACK-UP CANCEL SW.	EATON	10	------	562763
C 279	FR SERVICE CPT- STEERING ZF	DEUTSCH	2		562485
C 280	UNDER DASH RH -3 WAY LTS	EATON	10	------	562763
C 281	LH CONSOLE -LEVEL LOW	AMP MNL	4	560851	560852
C 282	RH SW PANEL -MONITOR OPER. SW.	EATON	10	------	562763
C 282	FR SERVICE CPT- STEERING GEAR BOX ZF	VOLVO	2		562928
C 283	LH CONSOLE -LOW DOCKING SW.	EATON	10	------	562763
C 284					
C 285	ENTRANCE DOOR -SOL. DOOR	PED PO	2	------	562076
C 286	RH SW PANEL-A/C & HEAT	EATON	10	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	10	------	562763
C 289					
C 290	LUGGAGE COMPT -DOOR LOCK	AMP MNL	4	561551	561668
C 291	LUGGAGE COMPT -DOOR LOCK	AMP MNL	4	561551	561668
C 292	FR SERVICE CMPT-LEVEL LOW		2		641385
C 293	FR SERVICE CMPT-LEVEL LOW		2		641385
C 294	FR SERVICE CMPT-LEVEL LOW		2		641385
C 295	FR SERVICE CMPT-LEVEL LOW		2		641385
C 296	FR SERVICE CMPT-LEVEL LOW		2		641385
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299					
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH CONSOLE SW-LUG. DOOR LOCK	EATON	10	------	562763
C 311					
C 312					
C 313					
C 314					
C 315	LH CONSOLE SW-LH STORE	EATON	10	------	562763
C 316					
C 317	LH CONSOLE SW-RH STORE	EATON	10	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	10	------	562763
C 319					
C 320	RH SW PANEL-DRIVER'S LTS	EATON	10	------	562763
C 321					
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN.	AMP CPC	9	561636	561637
C 324					
C 325	LH CONSOLE SW-KNEELING	EATON	8	------	562763
C 326	LH CONSOLE SW-SPARE	EATON	8	------	562763
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328					
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331					
C 332					
C 333					
C 334					
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346	INSTR PANEL LH-SWITCH LTS	EATON	2	------	561837
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351					
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360	INSTR PANEL RH-B/U MONITOR	AMP MNL	2	561248	561247
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362					
C 363					
C 364					
C 365					
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367					
C 368					
C 369					
C 370					
C 371					
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376	LH SWITCH PANEL	AMP CPC	37	561714	562005
C 377	LH SW PANEL-STOP ENG.OVERIDE	EATON	10	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 381	INST. PANEL CENTER-ANTI-THEFT LED	AMP MNL	2	561248	561247
C 382					
C 383					
C 384					
C 385					
C 386					
C 387					
C 388					
C 389					
C 390					
C 391					
C 392					
C 393					
C 394					
C 395					
C 396					
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. - EXITING SIGNAL ALTERN.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402					
C 403					
C 404					
C 405					
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH SW PANEL-MASTER SWITCH	EATON	10	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9 - 12		
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562237	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	INSTR. PANEL LH-HTR WINDSH.SW	EATON	10	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	------
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427					
C 428					
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	DEUTSCH	4	562479	562477
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437					
C 438	EVAP. COMPT.-COND.RELAY	AMP MNL	2	561248	561247
C 439	EVAP. COMPT.-COND.RELAY	AMP MNL	2	561248	561247
C 440	EVAP. COMPT.-EVAP.RELAY	DEUTSCH	4	562479	562477
C 441					
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450					
C 451					
C 452					
C 453					
C 454					
C 455					
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561590
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDL CONN W.T.	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468					
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER'S.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478					
C 479	HVAC MODULE (NOT USED)	-------	-	------	------
C 480	UNDER DASH RH-DR'S FAN SPEED CTR MOD	PED	4	561889	561890
C 481	UNDER DASH RH-DR'S FAN SPEED CTR MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. -SEAT ELECTRICAL SEAT	PED PC	2	------	562237
C 484	UNDER DASH LH-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH-DASH & DEFROST DAMP.M.	AMP MNL	3	561667	561550
C 486					
C 487					
C 488					
C 489					
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER MOD	PED MP	7	562433	------
C 502	LH CONSOLE-PRE HEATER SW.	EATON	10	------	562763
C 503					
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	12	------	562681
C 506	LH CONSOLE-LEVEL LOW SW.	EATON	10	------	562763
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515					
C 516					
C 517					
C 518					
C 519					
C 520					
C 521					
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	------	561183
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528					
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533					
C 534					
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541					
C 542					
C 543	RR JCT BOX-PARK. BRAKE STOP LTS RESIS.	PED WP	2	561566	561690
C 544					
C 545					
C 546	LH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	10	------	562763
C 549					
C 550	EVAPORATOR COMPARTIMENT	ITT	2	561813	562159
C 551	RR JCT BOX - A/C PANEL	PED	2	561566	561690
C 552					
C 553					
C 554					
C 555					
C 556					
C 557					
C 558					
C 559					
C 560					
C 561					
C 562					
C 563					
C 564					
C 565					
C 566					
C 567					
C 568					
C 569					
C 570	UNDER DASH PANEL TTLT MODULE	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT MODULE	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT MODULE	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT MODULE	MOLEX	8		562465
C 574					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 575					
C 576					
C 577					
C 578					
C 579					
C 580					
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587					
C 588					
C 589	UNDER DASH - L.H. MIRROR	AMP MNL	9	561670	561669
C 590	UNDER DASH - R.H. MIRROR	AMP MNL	9	561670	561669
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593					
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595					
C 596					
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5	------	562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5	------	562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601					
C 602					
C 603					
C 604					
C 605					
C 606					
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
L 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
L X	CLUSTER	JAE	22	------	562766
R Y	CLUSTER	JAE	30	------	562767
X	CLUSTER	JAE	22	------	562764

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C X1	FR LH UPPER WHELL CPT-ABS	AMP	18		562792
C X2	FR LH UPPER WHELL CPT-ABS	AMP	6		562793
C X3	FR LH UPPER WHELL CPT-ABS	AMP	9		562794
C X4	FR LH UPPER WHELL CPT-ABS	AMP	15		562795`
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
CV I2	RR JCT BOX-WORLD TRANS. SHIFT & RET.	AMP CPC	9	561636	561637
C Y	CLUSTER	JAE	30		562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10					
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22					
C 23					
C 24					
C 25					
C 26					
C 27					
C 28					
C 29					
C 30					
C 31					
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33					
C 34					
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36					
C 37					
C 38					
C 39					
C 40					
C 41					
C 42					
C 43					
C 44					
C 45	FR. JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46					
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERV. COMPT.-PRESS SW. PARK BRAKE	DEUTSCH	4	562479	562477
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50					
C 51					
C 52	RR JCT BOX	AMP CPC	12	561735	561734
C 53					
C 54					
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					
C 57					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 58	RR JCT BOX - A/C PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX - A/C PANEL	AMP CPC	14	561585	561583
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	24	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	LUGG. COMPT. – DOOR LOCK	AMP MNL	2	561551	561668
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-DOOR LOCK		4	561551	561668
C 78	LUGGAGE COMPT.-LTS - COND. CPT	AMP MNL	2	561248	561247
C 79	LUGGAGE COMPT.-LTS - EVAP. CPT.	AMP MNL	2	561248	561247
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 82	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 83	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 84	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 85	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 86	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88					
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93					
C 94					
C 95					
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100					
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108					
C 109					
C 110					
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	EVAPORATOR COMPT-SPEED MOT CTRL	DEUTSCH	5	------	562566
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115					
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117					
C 118					
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-CAMERA DOOR VALVE	PED WP	2	561566	561690
C 123					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126					
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX-A/C PANEL DIODE CON.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142					
C 143					
C 144					
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150	ENGINE CPT. - FUEL FILTER	PED WP	1	561605	561577
C 151	EVAPORATOR CPT-THERMOSTAT	ITT	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	ENGINE CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	ENGINE CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	DEUTSCH	2	562486	562485
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	562486	562485
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172	FR SERV. COMPT.- LEVEL LOW	AMP CPC	9	561635	561637
C 173	LAV.POTABLE-WATER TANK HEAT.	AMP MNL	2	560900	560898
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183					
C 184					
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C 188					
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C 190	ENGINE CPT RR DOOR TAIL/STOP LT	AMP SUPER S	3		562601
C 191	ENGINE CPT RR DOOR TAIL/STOP LT	AMP SUPER S	3		562601
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C 193					
C 194					
C 195					
C 196					
C 197					
C 198	ENGINE CPT RR DOOR LICENCE LT	PED WP	2	562348	562471
C 199	ENGINE CPT RR DOOR LICENCE LT	PED WP	2	562348	562471
C 200					
C 201	AUX. UNIT CONTROL	PED WP	4	561610	561611
C 202	AUX. UNIT CONTROL	PED WP	3	561781	561782
C 203	AUX. UNIT CONTROL	PED WP	2	561566	561690
C 204	AUX. LIQUID SOL.VALVE	PED WP	2	561566	561690
C 205					
C 206					
C 207					
C 208					
C 209					
C 210					
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214					
C 215					
C 216					
C 217					
C 218					
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 224					
C 225					
C 226					
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233					
C 234					
C 235					
C 236					
C 237					
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239	RR I.D. LTS	PED WP	2	561566	561690
C 240	LUGG. CPT.-CO-PILOT SEAT HEATER	AMP MNL	2	560900	560898
C 241	HEADLAMPS HI BEAM	HELLA	2		562623
C 242	HEADLAMPS LO BEAM	HELLA	2		562623
C 243	FR SERVICE CPT-HEADLAMPS	DEUTSCH	3		561071
C 244	FR SERVICE CPT-LH FOG LAMP	DEUTSCH	2	561813	561812
C 245	FR SERVICE CPT-RH FOG LAMP	DEUTSCH	2	561813	561812
C 246	FR SERVICE CPT-MARK & DIR LT	CONXALL	5	563091	563090
C 247	HEADLAMPS MARK & DIR LTS	AMP SUPER S	3		562601
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250					
C 251	LH SW PANEL-FAST IDLE	EATON	10	------	562763

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 252					
C 253	LH SW PANEL-ETHER	EATON	10	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH SW PANEL-JACOB	EATON	10	------	562763
C 256					
C 257					
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260					
C 261					
C 262	UNDER DASH RH-KEYLESS MODULE	AMP MUL	22	------	562675
C 263	UNDER DASH RH- KEYLESS MODULE	AMP MUL	26	------	562676
C 264	ENTRANCE DOOR-KEYPAD	AMP CPC	9	561536	561637
C 265	RH SW PANEL -DRIVER'S DOOR SW.	EATON	10	------	562763
C 266	ENTRANCE DOOR-KEYLESS	AMP CPC	14	561585	
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268					
C 269	UNDER DASH FLAT MIRROR	CONXALL	5	563091	563090
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274					
C 275					
C 276	UNDER DASH RH -3 WAY LTS	EATON	10	------	562763
C 277	LH CONSOLE -DOCK. & CORN. SW.	EATON	10	------	562763
C 278	LH CONSOLE -BACK-UP CANCEL SW.	EATON	10	------	562763
C 279	FR SERVICE CPT- STEERING ZF	DEUTSCH	2		562485
C 280	UNDER DASH RH -3 WAY LTS	EATON	10	------	562763
C 281	LH CONSOLE -LEVEL LOW	AMP MNL	4	560851	560852
C 282	RH SW PANEL -MONITOR OPER. SW.	EATON	10	------	562763
C 282	FR SERVICE CPT- STEERING GEAR BOX ZF	VOLVO	2		562928
C 283	LH CONSOLE -LOW DOCKING SW.	EATON	10	------	562763
C 284					
C 285	ENTRANCE DOOR -SOL. DOOR	PED PO	2	------	562076
C 286	RH SW PANEL-A/C & HEAT	EATON	10	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	10	------	562763
C 289					
C 290	LUGGAGE COMPT -DOOR LOCK	AMP MNL	4	561551	561668
C 291	LUGGAGE COMPT -DOOR LOCK	AMP MNL	4	561551	561668
C 292	FR SERVICE CMPT-LEVEL LOW		2		641385
C 293	FR SERVICE CMPT-LEVEL LOW		2		641385
C 294	FR SERVICE CMPT-LEVEL LOW		2		641385
C 295	FR SERVICE CMPT-LEVEL LOW		2		641385
C 296	FR SERVICE CMPT-LEVEL LOW		2		641385
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299					
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH CONSOLE SW-LUG. DOOR LOCK	EATON	10	------	562763
C 311					
C 312					
C 313					
C 314					
C 315	LH CONSOLE SW-LH STORE	EATON	10	------	562763
C 316					
C 317	LH CONSOLE SW-RH STORE	EATON	10	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	10	------	562763
C 319					
C 320	RH SW PANEL-DRIVER'S LTS	EATON	10	------	562763
C 321					
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN.	AMP CPC	9	561636	561637
C 324					
C 325	LH CONSOLE SW-KNEELING	EATON	8	------	562763
C 326	LH CONSOLE SW-SPARE	EATON	8	------	562763
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328					
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331					
C 332					
C 333					
C 334					
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346	INSTR PANEL LH-SWITCH LTS	EATON	2	------	561837
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351					
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360	INSTR PANEL RH-B/U MONITOR	AMP MNL	2	561248	561247
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362					
C 363					
C 364					
C 365					
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367					
C 368					
C 369					
C 370					
C 371					
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376	LH SWITCH PANEL	AMP CPC	37	561714	562005
C 377	LH SW PANEL-STOP ENG.OVERIDE	EATON	10	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 381	INST. PANEL CENTER-ANTI-THEFT LED	AMP MNL	2	561248	561247
C 382					
C 383					
C 384					
C 385					
C 386					
C 387					
C 388					
C 389					
C 390					
C 391					
C 392					
C 393					
C 394					
C 395					
C 396					
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. - EXITING SIGNAL ALTERN.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402					
C 403					
C 404					
C 405					
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH SW PANEL-MASTER SWITCH	EATON	10	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9 - 12		
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562237	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	INSTR. PANEL LH-HTR WINDSH.SW	EATON	10	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	------
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427					
C 428					
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	DEUTSCH	4	562479	562477
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437					
C 438	EVAP. COMPT.-COND.RELAY	AMP MNL	2	561248	561247
C 439	EVAP. COMPT.-COND.RELAY	AMP MNL	2	561248	561247
C 440	EVAP. COMPT.-EVAP.RELAY	DEUTSCH	4	562479	562477
C 441					
C 442					
C 443					
C 444					
C 445					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 446					
C 447					
C 448					
C 449					
C 450					
C 451					
C 452					
C 453					
C 454					
C 455					
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561590
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDL CONN W.T.	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468					
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER'S.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478					
C 479	HVAC MODULE (NOT USED)	-------	-	------	------
C 480	UNDER DASH RH-DR'S FAN SPEED CTR MOD	PED	4	561889	561890
C 481	UNDER DASH RH-DR'S FAN SPEED CTR MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. -SEAT ELECTRICAL SEAT	PED PC	2	------	562237
C 484	UNDER DASH LH-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH-DASH & DEFROST DAMP.M.	AMP MNL	3	561667	561550
C 486					
C 487					
C 488					
C 489					
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER MOD	PED MP	7	562433	------
C 502	LH CONSOLE-PRE HEATER SW.	EATON	10	------	562763
C 503					
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	12	------	562681
C 506	LH CONSOLE-LEVEL LOW SW.	EATON	10	------	562763
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515					
C 516					
C 517					
C 518					
C 519					
C 520					
C 521					
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	------	561183
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528					
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533					
C 534					
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541					
C 542					
C 543					
C 544					
C 545					
C 546	LH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	10	------	562763
C 549					
C 550	EVAPORATOR COMPARTIMENT	ITT	2	561813	562159
C 551	RR JCT BOX - A/C PANEL	PED	2	561566	561690
C 552					
C 553					
C 554					
C 555					
C 556					
C 557					
C 558					
C 559					
C 560					
C 561					
C 562					
C 563					
C 564					
C 565					
C 566					
C 567					
C 568					
C 569					
C 570	UNDER DASH PANEL TTLT MODULE	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT MODULE	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT MODULE	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT MODULE	MOLEX	8		562465
C 574					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 575					
C 576					
C 577					
C 578					
C 579					
C 580					
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587					
C 588					
C 589	FR SERVICE ELECT MIRROR	CONXALL	5	563089	563088
C 590	UNDER DASH ELECT MIRROR	CONXALL	8	563089	563088
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593					
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595					
C 596					
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5	------	562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5	------	562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601					
C 602					
C 603					
C 604					
C 605					
C 606					
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
L 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
L X	CLUSTER	JAE	22	------	562766
R Y	CLUSTER	JAE	30	------	562767
X	CLUSTER	JAE	22	------	562764

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C X1	FR LH UPPER WHELL CPT-ABS	AMP	15		563200
C X2	FR LH UPPER WHELL CPT-ABS	AMP	18		563201
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
CV I2	RR JCT BOX-WORLD TRANS. SHIFT & RET.	AMP CPC	9	561636	561637
C Y	CLUSTER	JAE	30		562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10					
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22					
C 23					
C 24					
C 25					
C 26					
C 27					
C 28					
C 29					
C 30					
C 31					
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33					
C 34					
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36					
C 37					
C 38					
C 39					
C 40					
C 41					
C 42					
C 43					
C 44					
C 45	FR. JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46					
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERV. COMPT.-PRESS SW. PARK BRAKE	DEUTSCH	4	562479	562477
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50					
C 51					
C 52	RR JCT BOX	AMP CPC	12	561735	561734
C 53					
C 54					
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					
C 57					
C 58	RR JCT BOX - A/C PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX - A/C PANEL	AMP CPC	14	561585	561583

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	24	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	LUGG. COMPT. – DOOR LOCK	AMP MNL	2	561551	561668
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-DOOR LOCK		4	561551	561668
C 78	LUGGAGE COMPT.-LTS - COND. CPT	AMP MNL	2	561248	561247
C 79	LUGGAGE COMPT.-LTS - EVAP. CPT.	AMP MNL	2	561248	561247
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 80A	EVAPORATOR COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 82	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 83	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 84	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 85	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 86	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88					
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93					
C 94					
C 95					
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100					
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108					
C 109					
C 110					
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	EVAPORATOR COMPT-SPEED MOT CTRL	DEUTSCH	5	------	562566
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115					
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117					
C 118					
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-CAMERA DOOR VALVE	PED WP	2	561566	561690
C 123					
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126					
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX-A/C PANEL DIODE CON.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142					
C 143					
C 144					
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150	ENGINE CPT. - FUEL FILTER	PED WP	1	561605	561577
C 151	EVAPORATOR CPT-THERMOSTAT	ITT	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	ENGINE CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	ENGINE CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	DEUTSCH	2	562486	562485
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	562486	562485
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172	FR SERV. COMPT.- LEVEL LOW	AMP CPC	9	561635	561637
C 173	LAV.POTABLE-WATER TANK HEAT.	AMP MNL	2	560900	560898
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183					
C 184					
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 188					
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C 190	ENGINE CPT RR DOOR TAIL/STOP LT	AMP SUPER S	3		562601
C 191	ENGINE CPT RR DOOR TAIL/STOP LT	AMP SUPER S	3		562601
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C 193					
C 194					
C 195					
C 196					
C 197					
C 198	ENGINE CPT RR DOOR LICENCE LT	PED WP	2	562348	562471
C 199	ENGINE CPT RR DOOR LICENCE LT	PED WP	2	562348	562471
C 200					
C 201	AUX. UNIT CONTROL	PED WP	4	561610	561611
C 202	AUX. UNIT CONTROL	PED WP	3	561781	561782
C 203	AUX. UNIT CONTROL	PED WP	2	561566	561690
C 204	AUX. LIQUID SOL.VALVE	PED WP	2	561566	561690
C 205					
C 206					
C 207					
C 208					
C 209					
C 210					
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214					
C 215					
C 216					
C 217					
C 218					
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 224					
C 225					
C 226					
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233					
C 234					
C 235					
C 236					
C 237					
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239	RR I.D. LTS	PED WP	2	561566	561690
C 240	LUGG. CPT.-CO-PILOT SEAT HEATER	AMP MNL	2	560900	560898
C 241	HEADLAMPS HI BEAM	HELLA	2		562623
C 242	HEADLAMPS LO BEAM	HELLA	2		562623
C 243	FR SERVICE CPT-HEADLAMPS	DEUTSCH	3		561071
C 244	FR SERVICE CPT-LH FOG LAMP	DEUTSCH	2	561813	561812
C 245	FR SERVICE CPT-RH FOG LAMP	DEUTSCH	2	561813	561812
C 246	FR SERVICE CPT-MARK & DIR LT	CONXALL	5	563091	563090
C 247	HEADLAMPS MARK & DIR LTS	AMP SUPER S	3		562601
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250					
C 251	LH SW PANEL-FAST IDLE	EATON	10	------	562763
C 252					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 253	LH SW PANEL-ETHER	EATON	10	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH SW PANEL-JACOB	EATON	10	------	562763
C 256					
C 257					
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260					
C 261					
C 262	UNDER DASH RH-KEYLESS MODULE	AMP MUL	22	------	562675
C 263	UNDER DASH RH- KEYLESS MODULE	AMP MUL	26	------	562676
C 264	ENTRANCE DOOR-KEYPAD	AMP CPC	9	561536	561637
C 265	RH SW PANEL -DRIVER'S DOOR SW.	EATON	10	------	562763
C 266	ENTRANCE DOOR-KEYLESS	AMP CPC	14	561585	
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268					
C 269	UNDER DASH FLAT MIRROR	CONXALL	5	563091	563090
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274					
C 275					
C 276	UNDER DASH RH -3 WAY LTS	EATON	10	------	562763
C 277	LH CONSOLE -DOCK. & CORN. SW.	EATON	10	------	562763
C 278	LH CONSOLE -BACK-UP CANCEL SW.	EATON	10	------	562763
C 279	FR SERVICE CPT- STEERING ZF	DEUTSCH	2		562485
C 280	UNDER DASH RH -3 WAY LTS	EATON	10	------	562763
C 281	LH CONSOLE -LEVEL LOW	AMP MNL	4	560851	560852
C 282	RH SW PANEL -MONITOR OPER. SW.	EATON	10	------	562763
C 282	FR SERVICE CPT- STEERING GEAR BOX ZF	VOLVO	2		562928
C 283	LH CONSOLE -LOW DOCKING SW.	EATON	10	------	562763
C 284					
C 285	ENTRANCE DOOR -SOL. DOOR	PED PO	2	------	562076
C 286	RH SW PANEL-A/C & HEAT	EATON	10	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	10	------	562763
C 289					
C 290	LUGGAGE COMPT -DOOR LOCK	AMP MNL	4	561551	561668
C 291	LUGGAGE COMPT -DOOR LOCK	AMP MNL	4	561551	561668
C 292	FR SERVICE CMPT-LEVEL LOW		2		641385
C 293	FR SERVICE CMPT-LEVEL LOW		2		641385
C 294	FR SERVICE CMPT-LEVEL LOW		2		641385
C 295	FR SERVICE CMPT-LEVEL LOW		2		641385
C 296	FR SERVICE CMPT-LEVEL LOW		2		641385
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299					
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH CONSOLE SW-LUG. DOOR LOCK	EATON	10	------	562763
C 311					
C 312					
C 313					
C 314					
C 315	LH CONSOLE SW-LH STORE	EATON	10	------	562763
C 316					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 317	LH CONSOLE SW-RH STORE	EATON	10	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	10	------	562763
C 319					
C 320	RH SW PANEL-DRIVER'S LTS	EATON	10	------	562763
C 321					
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN.	AMP CPC	9	561636	561637
C 324					
C 325	LH CONSOLE SW-KNEELING	EATON	8	------	562763
C 326	LH CONSOLE SW-SPARE	EATON	8	------	562763
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328					
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331					
C 332					
C 333					
C 334					
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346	INSTR PANEL LH-SWITCH LTS	EATON	2	------	561837
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351					
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360	INSTR PANEL RH-B/U MONITOR	AMP MNL	2	561248	561247
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362					
C 363					
C 364					
C 365					
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367					
C 368					
C 369					
C 370					
C 371					
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376	LH SWITCH PANEL	AMP CPC	37	561714	562005
C 377	LH SW PANEL-STOP ENG.OVERIDE	EATON	10	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381	INST. PANEL CENTER-ANTI-THEFT LED	AMP MNL	2	561248	561247

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 382					
C 383					
C 384					
C 385					
C 386					
C 387					
C 388					
C 389					
C 390					
C 391					
C 392					
C 393					
C 394					
C 395					
C 396					
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. - EXITING SIGNAL ALTERN.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402					
C 403					
C 404					
C 405					
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH SW PANEL-MASTER SWITCH	EATON	10	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9 - 12		
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562237	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	INSTR. PANEL LH-HTR WINDSH.SW	EATON	10	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	------
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427					
C 428					
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	DEUTSCH	4	562479	562477
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437					
C 438	EVAP. COMPT.-COND.RELAY	AMP MNL	2	561248	561247
C 439	EVAP. COMPT.-COND.RELAY	AMP MNL	2	561248	561247
C 440	EVAP. COMPT.-EVAP.RELAY	DEUTSCH	4	562479	562477
C 441					
C 442					
C 443					
C 444					
C 445					
C 446					
C 447					
C 448					
C 449					
C 450					
C 451					
C 452					
C 453					
C 454					
C 455					
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561590
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDL CONN W.T.	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468					
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER'S.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478					
C 479	HVAC MODULE (NOT USED)	-------	-	------	------
C 480	UNDER DASH RH-DR'S FAN SPEED CTR MOD	PED	4	561889	561890
C 481	UNDER DASH RH-DR'S FAN SPEED CTR MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. -SEAT ELECTRICAL SEAT	PED PC	2	------	562237
C 484	UNDER DASH LH-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH-DASH & DEFROST DAMP.M.	AMP MNL	3	561667	561550
C 486					
C 487					
C 488					
C 489					
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER MOD	PED MP	7	562433	------
C 502	LH CONSOLE-PRE HEATER SW.	EATON	10	------	562763
C 503					
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	12	------	562681
C 506	LH CONSOLE-LEVEL LOW SW.	EATON	10	------	562763
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515					
C 516					
C 517					
C 518					
C 519					
C 520					
C 521					
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	------	561183
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528					
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533					
C 534					
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541					
C 542					
C 543					
C 544					
C 545					
C 546	LH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	10	------	562763
C 549					
C 550	EVAPORATOR COMPARTIMENT	ITT	2	561813	562159
C 551	RR JCT BOX - A/C PANEL	PED	2	561566	561690
C 552					
C 553					
C 554					
C 555					
C 556					
C 557					
C 558					
C 559					
C 560					
C 561					
C 562					
C 563					
C 564					
C 565					
C 566					
C 567					
C 568					
C 569					
C 570	UNDER DASH PANEL TTLT MODULE	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT MODULE	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT MODULE	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT MODULE	MOLEX	8		562465
C 574					
C 575					
C 576					
C 577					
C 578					
C 579					
C 580					
C 581					
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587					
C 588					
C 589	FR SERVICE ELECT MIRROR	CONXALL	5	563089	563088
C 590	UNDER DASH ELECT MIRROR	CONXALL	8	563089	563088
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593					
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595					
C 596					
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5	------	562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5	------	562812
C 599					
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601					
C 602					
C 603					
C 604					
C 605					
C 606					
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
L 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
L X	CLUSTER	JAE	22	------	562766
R Y	CLUSTER	JAE	30	------	562767
X	CLUSTER	JAE	22	------	562764

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C X1	FR LH UPPER WHELL CPT-ABS	AMP	15		563200
C X2	FR LH UPPER WHELL CPT-ABS	AMP	18		563201
C S	RR JCT BOX ECU WORLD TR.	PED	32		562817
C T	RR JCT BOX ECU WORLD TR.	PED	32		562824
C V	RR JCT BOX ECU WORLD TR.	PED	32		562823
CV I2	RR JCT BOX-WORLD TRANS. SHIFT & RET.	AMP CPC	9	561636	561637
C Y	CLUSTER	JAE	30		562765
C 1	FR JCT BOX COMPARTMENT	AMP CPC	14	561585	561584
C 2	FR JCT BOX COMPARTMENT	AMP CPC	16	561639	561640
C 3	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C 4	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C 5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C 6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561639	561640
C 8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 9	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C 10					
C 11	FR SERVICE COMPARTMENT	AMP CPC	37	561644	561646
C 12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C 13	LH CONSOLE-CTR MIRROR	AMP MNL	6	561552	561515
C 14	UNDER DASH-LH MIRROR	AMP MNL	9	561661	561662
C 15	RR JCT BOX	AMP CPC	24	561641	561643
C 16	LH CONSOLE SW-CRUISE ON OFF	EATON	10	------	562763
C 17	LH CONSOLE SW-CRUISE RESUME	EATON	10	------	562763
C 18	LH CONSOLE SW-CRUISE SET	EATON	10	------	562763
C 19	LH CONSOLE DECEL SW	EATON	10	------	562763
C 20	RR JCT BOX	AMP CPC	37	561644	561646
C 21	RR JCT BOX	AMP CPC	24	561641	561643
C 22					
C 23					
C 24					
C 25					
C 26					
C 27					
C 28					
C 29					
C 30					
C 31					
C 32	DDEC ENGINE-ECM	PED	30	------	561600
C 33					
C 34					
C 35	RR JCT BOX	AMP CPC	24	561642	561643
C 36					
C 37					
C 38					
C 39					
C 40					
C 41					
C 42					
C 43					
C 44					
C 45	FR. JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 46					
C 47	FR SERVICE COMPARTMENT	AMP CPC	16	561694	561695
C 48	FR. SERV. COMPT.-PRESS SW. PARK BRAKE	DEUTSCH	4	562479	562477
C 49	BATTERIE COMPT.-LT	AMP MNL	2	561248	561247
C 50					
C 51					
C 52	RR JCT BOX	AMP CPC	12	561735	561734
C 53					
C 54					
C 55	RH SWITCH PANEL	AMP CPC	9	561636	561637
C 56					
C 57					
C 58	RR JCT BOX - A/C PANEL	DEUTSCH	24	562280	562283
C 59	RR JCT BOX - A/C PANEL	AMP CPC	14	561585	561583

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 60	RR JCT BOX COMPT.-LT	AMP MNL	2	561248	561247
C 61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C 69	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 70	LH CONSOLE	AMP CPC	24	561642	561643
C 71	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 72	FR JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C 74	FR JCT BOX COMPARTMENT	AMP CPC	37	561645	561646
C 75	LUGG. COMPT. – DOOR LOCK	AMP MNL	2	561551	561668
C 76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 77	LUGGAGE COMPT.-DOOR LOCK		4	561551	561668
C 78	LUGGAGE COMPT.-LTS - COND. CPT	AMP MNL	2	561248	561247
C 79	LUGGAGE COMPT.-LTS - EVAP. CPT.	AMP MNL	2	561248	561247
C 80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 80A	EVAPORATOR COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C 81	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 82	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 83	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 84	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 85	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 86	LUGGAGE COMPT.-DOOR LOCK	AMP MNL	2	561551	561668
C 87	RR END ROOF	AMP CPC	9	561636	561637
C 88					
C 89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C 90	RR JCT BOX	AMP CPC	15	561987	561986
C 91	RR JCT BOX	AMP CPC	37	561714	561713
C 92	FR LH UPPER WHELL CPT-ABS	AMP CPC	9	561635	561637
C 93					
C 94					
C 95					
C 96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C 97	RR AXLE ACC-INSIDE PVC END	PED WP	6	561568	561578
C 98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C 99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C 100					
C 101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C 102	FR SERV & SIDE CPT-FLASH. LH	GROTE	2	------	562155
C 103	FR SERV & SIDE CPT-MARKERS	GROTE	2	------	562155
C 104	FR SERV & SIDE CPT-FLASH. RH	GROTE	2	------	562155
C 105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C 106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C 107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C 108					
C 109					
C 110					
C 111	EVAPORATOR COMPT-DAMPER	DEUTSCH	2	562486	562485
C 112	EVAPORATOR COMPT-SPEED MOT CTRL	DEUTSCH	5	------	562566
C 113	BATT. & RR J.B.CPT.MARKER LT	GROTE	2	------	562155
C 114	RR J. BOX CPT DOOR DIR LT LH	GROTE	2	------	562155
C 115					
C 116	ENGINE COMPT. LTS	PED WP	1	561605	561577
C 117					
C 118					
C 119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C 120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C 121	BATTERIE CPT. DOOR DIR LT RH	GROTE	2	------	562155
C 122	ENGINE CPT-CAMERA DOOR VALVE	PED WP	2	561566	561690
C 123					
C 124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C 126					
C 127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C 128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C 129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C 130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C 132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C 133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C 134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C 136	RR JCT BOX-A/C PANEL DIODE CON.	AMP MNL	15	561987	561986
C 137	RR JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C 138	RR JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C 139	RR JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C 140	HVAC DASH MODULE THERMOMETER	MOLEX	4		562782
C 141	INSTRUMENT PANEL LH UNLOAD TAG	AMP	2	561248	561247
C 142					
C 143					
C 144					
C 145	RR JCT BOX CPT-RR SIDE LTS	AMP MNL	9	561670	561669
C 146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C 147	BATT & RR J.B.CPT-DOCK.LTS	PED WP	2	561566	561690
C 148					
C 149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C 150	ENGINE CPT. - FUEL FILTER	PED WP	1	561605	561577
C 151	EVAPORATOR CPT-THERMOSTAT	ITT	2	561813	562159
C 152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C 153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C 154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C 155	EVAPORATOR CPT-WATER VALVE	PED WP	4	561610	561611
C 156	EVAPOR. CPT-BYPASS WATER VAL.	PED WP	2	561566	561690
C 157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C 158	ENGINE CPT-A/C LO TEMP.	PED WP	2	561566	561690
C 159	ENGINE CPT-A/C HI TEMP.	PED WP	2	561566	561690
C 160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C 161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C 164	RR AXLE-ABS LH SENSOR	DEUTSCH	2	562486	562485
C 165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C 166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C 167	RR AXLE-ABS RH SENSOR	DEUTSCH	2	562486	562485
C 168	RR AXLE-ABS OPT ATC	PED WP	2	561566	561690
C 169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C 170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C 171	LH CONSOLE	AMP CPC	24	561642	561643
C 172	FR SERV. COMPT.- LEVEL LOW	AMP CPC	9	561635	561637
C 173	LAV.POTABLE-WATER TANK HEAT.	AMP MNL	2	560900	560898
C 174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C 176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C 177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C 178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C 179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C 181	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 180	RR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 182					
C 183					
C 184					
C 185					
C 186	RR JCT BOX CPT.-SPEED SIGN.TR	PED WP	2	561566	561690
C 186M	RR JCT BOX CPT.-SPD SIGN. M.TR	PED WP	2	561566	561690
C 186W	RR JCT BOX CPT.-SPD SIGN. WT	PED WP	2	561566	561690
C 187	FR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 188					
C 189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C 190	ENGINE CPT RR DOOR TAIL/STOP LT	AMP SUPER S	3		562601
C 191	ENGINE CPT RR DOOR TAIL/STOP LT	AMP SUPER S	3		562601
C 192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C 193					
C 194					
C 195					
C 196					
C 197					
C 198	ENGINE CPT RR DOOR LICENCE LT	PED WP	2	562348	562471
C 199	ENGINE CPT RR DOOR LICENCE LT	PED WP	2	562348	562471
C 200					
C 201	AUX. UNIT CONTROL	PED WP	4	561610	561611
C 202	AUX. UNIT CONTROL	PED WP	3	561781	561782
C 203	AUX. UNIT CONTROL	PED WP	2	561566	561690
C 204	AUX. LIQUID SOL.VALVE	PED WP	2	561566	561690
C 205					
C 206					
C 207					
C 208					
C 209					
C 210					
C 211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C 212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C 213					
C 214					
C 215					
C 216					
C 217					
C 218					
C 219					
C 220	RR.JCT.BOX-FUEL PRIME PUMP	TC	1	561070	561073
C 221	BATTERY CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 222	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 223	ENGINE CMPT. FIRE DETECTOR	DEUTSCH	2	562486	562485
C 224					
C 225					
C 226					
C 227					
C 228					
C 229					
C 230	ENG.CPT.-FUEL PRIME PUMP FEED	DEUTSCH	2	562486	562485
C 231	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690
C 232	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690
C 233					
C 234					
C 235					
C 236					
C 237					
C 238	RR JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C 239	RR I.D. LTS	PED WP	2	561566	561690
C 240	LUGG. CPT.-CO-PILOT SEAT HEATER	AMP MNL	2	560900	560898
C 241	HEADLAMPS HI BEAM	HELLA	2		562623
C 242	HEADLAMPS LO BEAM	HELLA	2		562623
C 243	FR SERVICE CPT-HEADLAMPS	DEUTSCH	3		561071
C 244	FR SERVICE CPT-LH FOG LAMP	DEUTSCH	2	561813	561812
C 245	FR SERVICE CPT-RH FOG LAMP	DEUTSCH	2	561813	561812
C 246	FR SERVICE CPT-MARK & DIR LT	CONXALL	5	563091	563090
C 247	HEADLAMPS MARK & DIR LTS	AMP SUPER S	3		562601
C 248	FR JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C 249					
C 250					
C 251	LH SW PANEL-FAST IDLE	EATON	10	------	562763
C 252					

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 253	LH SW PANEL-ETHER	EATON	10	------	562763
C 254	INST. PANEL RH-ENTR.DOOR SW.	TORRIX	5	------	562110
C 255	LH SW PANEL-JACOB	EATON	10	------	562763
C 256					
C 257					
C 258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C 259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C 260					
C 261					
C 262	UNDER DASH RH-KEYLESS MODULE	AMP MUL	22	------	562675
C 263	UNDER DASH RH- KEYLESS MODULE	AMP MUL	26	------	562676
C 264	ENTRANCE DOOR-KEYPAD	AMP CPC	9	561536	561637
C 265	RH SW PANEL -DRIVER'S DOOR SW.	EATON	10	------	562763
C 266	ENTRANCE DOOR-KEYLESS	AMP CPC	14	561585	
C 267	UNDER DASH RH	AMP CPC	24	561642	561643
C 268					
C 269	UNDER DASH FLAT MIRROR	CONXALL	5	563091	563090
C 270	LH MIRROR POST	MOLEX	6	562070	562069
C 271	RH MIRROR POST	MOLEX	6	562070	562069
C 272	LH MIRROR	SPARTAN	6	------	990158
C 273	RH MIRROR	SPARTAN	6	------	990158
C 274					
C 275					
C 276	UNDER DASH RH -3 WAY LTS	EATON	10	------	562763
C 277	LH CONSOLE -DOCK. & CORN. SW.	EATON	10	------	562763
C 278	LH CONSOLE -BACK-UP CANCEL SW.	EATON	10	------	562763
C 279	FR SERVICE CPT- STEERING ZF	DEUTSCH	2		562485
C 280	UNDER DASH RH -3 WAY LTS	EATON	10	------	562763
C 281	LH CONSOLE -LEVEL LOW	AMP MNL	4	560851	560852
C 282	RH SW PANEL -MONITOR OPER. SW.	EATON	10	------	562763
C 282	FR SERVICE CPT- STEERING GEAR BOX ZF	VOLVO	2		562928
C 283	LH CONSOLE -LOW DOCKING SW.	EATON	10	------	562763
C 284					
C 285	ENTRANCE DOOR -SOL. DOOR	PED PO	2	------	562076
C 286	RH SW PANEL-A/C & HEAT	EATON	10	------	562763
C 287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C 288	RH SW PANEL-FRESH AIR	EATON	10	------	562763
C 289					
C 290	LUGGAGE COMPT -DOOR LOCK	AMP MNL	4	561551	561668
C 291	LUGGAGE COMPT -DOOR LOCK	AMP MNL	4	561551	561668
C 292	FR SERVICE CMPT-LEVEL LOW		2		641385
C 293	FR SERVICE CMPT-LEVEL LOW		2		641385
C 294	FR SERVICE CMPT-LEVEL LOW		2		641385
C 295	FR SERVICE CMPT-LEVEL LOW		2		641385
C 296	FR SERVICE CMPT-LEVEL LOW		2		641385
C 297	INSTRUMENT PANEL RH -LTS	AMP MNL	2	560900	560898
C 298					
C 299					
C 300					
C 301					
C 302					
C 303					
C 304					
C 305					
C 306					
C 307					
C 308	LH CONSOLE SW-RHEOSTAT	TC	2	561030	560997
C 309	DDEC ENGINE-ECM POWER CON.	PED MP	5	------	562345
C 310	LH CONSOLE SW-LUG. DOOR LOCK	EATON	10	------	562763
C 311					
C 312					
C 313					
C 314					
C 315	LH CONSOLE SW-LH STORE	EATON	10	------	562763
C 316					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 317	LH CONSOLE SW-RH STORE	EATON	10	------	562763
C 318	LH CONSOLE SW-DRV WINDOW LIFT	EATON	10	------	562763
C 319					
C 320	RH SW PANEL-DRIVER'S LTS	EATON	10	------	562763
C 321					
C 322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C 323	LH CONSOLE CRUISE CTR SW PAN.	AMP CPC	9	561636	561637
C 324					
C 325	LH CONSOLE SW-KNEELING	EATON	8	------	562763
C 326	LH CONSOLE SW-SPARE	EATON	8	------	562763
C 327	ENGINE CONTROL	DEUTSCH	6	562583	562581
C 328					
C 329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C 330					
C 331					
C 332					
C 333					
C 334					
C 335					
C 336					
C 337	INSTR PANEL LH-UP WIPER SW	EATON	8	------	562763
C 338	INSTR PANEL LH-UP DEFROST SW	EATON	8	------	562763
C 339	INSTR PANEL LH-UP WASHER SW	EATON	8	------	562763
C 340	FR JCT. BOX FIRE PIEZO ALARM	AMP MNL	2	560900	560898
C 341	INSTR PANEL LH-HEAT MIRROR SW	EATON	8	------	562763
C 342	ENGINE RR START SW	DEUTSCH	2	562586	562585
C 343	INSTR PANEL LH-HEADLAMP SW	EATON	8	------	562763
C 344	INSTR PANEL LH-HAZARD LT SW	EATON	8	------	562763
C 345	INSTR PANEL LH-FOG LT SW	EATON	8	------	562763
C 346	INSTR PANEL LH-SWITCH LTS	EATON	2	------	561837
C 347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C 348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562067
C 349					
C 350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C 351					
C 352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C 353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C 354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C 355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C 356					
C 357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C 358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C 359					
C 360	INSTR PANEL RH-B/U MONITOR	AMP MNL	2	561248	561247
C 361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C 362					
C 363					
C 364					
C 365					
C 366	RH DASH PANEL-GRN & RED LEDS	AMP MNL	3	560908	562006
C 367					
C 368					
C 369					
C 370					
C 371					
C 372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C 373	FR ROOF-NO SMOKING LT	AMP MNL	2	561248	561247
C 374	LH SWITCH PANEL	AMP MNL	6	561552	561515
C 375					
C 376	LH SWITCH PANEL	AMP CPC	37	561714	562005
C 377	LH SW PANEL-STOP ENG.OVERIDE	EATON	10	------	562763
C 378					
C 379					
C 380	LH CONSOLE-DDR CONNECTOR	DEUTSCH	6	562360	------
C 381	INST. PANEL CENTER-ANTI-THEFT LED	AMP MNL	2	561248	561247

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 382					
C 383					
C 384					
C 385					
C 386					
C 387					
C 388					
C 389					
C 390					
C 391					
C 392					
C 393					
C 394					
C 395					
C 396					
C 397	ENGINE COMPT. CRADLE ACC.	DEUTSCH	40	562281	562284
C 398					
C 399	ENGINE COMPT. - EXITING SIGNAL ALTERN.	PED WP	2	561566	561690
C 400	ENGINE COMPT. BLOCK HEATER	PED MP	3	561781	561782
C 401					
C 402	RR DRIVE AXLE-AIR DRYER	PED MP	2	------	562251
C 403					
C 404					
C 405					
C 406	FR JCT BOX COMPT.-ABS	AMP MNL	2	560900	560898
C 407	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 408	ENGINE COMPT. -SIGNAL	PED WP	6	561606	561607
C 409	ENGINE CPT -LOW COOL. LEVEL	PED MP	2	------	562350
C 410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986
C 412	LH SW PANEL-MASTER SWITCH	EATON	10	------	562763
C 413	ENG CPT-A/C HI UNLOAD PRS SW	PED WP	2	561566	561690
C 414	RR JCT BOX	AMP MNL	9 - 12		
C 415	ENGINE CRADLE-FAN SIGNAL	PED WP	3	561781	561782
C 416	ENGINE CRADLE-FAN SIGNAL	PED P-C	3	562237	------
C 417	FRONT JCT BOX-DIODES	AMP MNL	15	561987	561986
C 418	INSTR. PANEL LH-HTR WINDSH.SW	EATON	10	------	562763
C 419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	3	561667	561550
C 420	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 421	ENGINE COMPT. WEBASTO WATER HTR	TC	1	561073	------
C 422	ENGINE COMPT. WEBASTO WATER HTR	TC	2	561597	------
C 423					
C 424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C 425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986
C 426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C 427					
C 428					
C 429	FR JCT BOX COMPT.	AMP MNL	6	561552	561515
C 430	LH CONSOLE-TIMER	AMP FF	8	561188	562363
C 431	LH CONSOLE-PRE HEAT.	TAB AMP	1	561540	561539
C 432	ENGINE CPT.-PROX. SW. DOOR AJAR	DEUTSCH	4	562479	562477
C 433	FR SERVICE CPT. KNEEL. PRESS. SW	PED WP	2	561566	561690
C 434	FRONT JCT. BOX-DIODES	AMP MNL	15	561987	561986
C 435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	2	560900	560898
C 436	RH HAT RACK-WCL CENTER ROOF ACC	AMP CPC	16	561639	561640
C 437					
C 438	EVAP. COMPT.-COND.RELAY	AMP MNL	2	561248	561247
C 439	EVAP. COMPT.-COND.RELAY	AMP MNL	2	561248	561247
C 440	EVAP. COMPT.-EVAP.RELAY	DEUTSCH	4	562479	562477
C 441					
C 442					
C 443					
C 444					
C 445					
C 446					

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 447					
C 448					
C 449					
C 450					
C 451					
C 452					
C 453					
C 454					
C 455					
C 456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	------	562427
C 457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C 458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	------	562426
C 459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	------	562426
C 460	WORLD TRANSM.-SPEED SENSOR	ITT	2	------	562541
C 461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561590
C 462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	------	562426
C 463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C 464	RR JCT BOX-DDL CONN W.T.	DEUTSCH	6	------	562360
C 465	LH CONSOLE-SHIFTER SELECTOR	PED	20	------	562825
C 466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	------	562428
C 468					
C 469					
C 470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C 472	FR LH UPPER WHELL CPT-SILENT 1000	PED WP	2	561566	561690
C 473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561550
C 474	DRIVER'S.-TEMP. SENSOR	AMP MNL	2	561247	561248
C 475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561248	561247
C 475M	RR JCT BOX-SPEED SIGN MANUAL TR.	MOLEX	6	562070	562069
C 475W	RR JCT BOX-SPEED SIGN WORLD TR.	MOLEX	6	562070	562069
C 476					
C 477					
C 478					
C 479	HVAC MODULE (NOT USED)	-------	-	------	------
C 480	UNDER DASH RH-DR'S FAN SPEED CTR MOD	PED	4	561889	561890
C 481	UNDER DASH RH-DR'S FAN SPEED CTR MOD	PED	3	561781	561782
C 482					
C 483	FR SERVICE CPT. -SEAT ELECTRICAL SEAT	PED PC	2	------	562237
C 484	UNDER DASH LH-FOOT DAMPER MOTOR	PED PC	2	------	562076
C 485	UNDER DASH LH-DASH & DEFROST DAMP.M.	AMP MNL	3	561667	561550
C 486					
C 487					
C 488					
C 489					
C 490					
C 491					
C 492					
C 493					
C 494					
C 495					
C 496					
C 497					
C 498					
C 499					
C 500	FR LH UPPER WHELL CPT -PRODRIVER	MOLEX	6	562070	562069
C 501	FR LH UPPER WHELL CPT -PRODRIVER MOD	PED MP	7	562433	------
C 502	LH CONSOLE-PRE HEATER SW.	EATON	10	------	562763
C 503					
C 504	LH CONSOLE WEBASTO TIMER	AMP	8	------	562852
C 505	LH CONSOLE ESPAR TIMER	AMP	12	------	562681
C 506	LH CONSOLE-LEVEL LOW SW.	EATON	10	------	562763
C 508	RR JCT BOX-FAN CLUTCH RETARDER	AMP MNL	6	561552	561515
C 509	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	16	------	562530
C 510	FR LH UPPER WHELL CPT -DATA LOGGER	DEUTSCH	9	562531	------

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 511	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	4	562532	------
C 512	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	10	562533	------
C 513	FR LH UPPER WHELL CPT -DATA LOGGER	AMP MNL	3	561667	561550
C 514	FR LH UPPER WHELL CPT -DATA LOGGER	PED MP	6	562433	562417
C 515					
C 516					
C 517					
C 518					
C 519					
C 520					
C 521					
C 522	FR JCT BOX-DAYTIME LTS MODULE	BOSCH	5	------	561183
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 528					
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	561247	561248
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646
C 533					
C 534					
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	561667	561550
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561552	561515
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247
C 539	HVAC DASH MODULE OUTPUT CON	MOLEX	24		562780
C 540	HVAC DASH MODULE INPUT CON	MOLEX	22		562781
C 541					
C 542					
C 543					
C 544					
C 545					
C 546	LH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646
C 548	LH DASH PANEL-T.T. LT. TEST SW.	EATON	10	------	562763
C 549					
C 550	EVAPORATOR COMPARTIMENT	ITT	2	561813	562159
C 551	RR JCT BOX - A/C PANEL	PED	2	561566	561690
C 552					
C 553					
C 554					
C 555					
C 556					
C 557					
C 558					
C 559					
C 560					
C 561					
C 562					
C 563					
C 564					
C 565					
C 566					
C 567					
C 568					
C 569					
C 570	UNDER DASH PANEL TTLT MODULE	MOLEX	6		562464
C 571	UNDER DASH PANEL TTLT MODULE	MOLEX	20		562778
C 572	UNDER DASH PANEL TTLT MODULE	MOLEX	18		562779
C 573	UNDER DASH PANEL TTLT MODULE	MOLEX	8		562465
C 574					
C 575					
C 576					
C 577					
C 578					
C 579					
C 580					
C 581	LH DASH PANEL – ELECTRICAL HORN	PED MP	2		562777
C 582	FRONT SERVICE CMPT. - WINDOWS AJAR	PED WP	2	561566	561690
C 583	L.H. DASH PANEL - MASTER KEY	DEUTSCH	2	562486	562485
C 584	FRONT SERVICE CMPT. - AIR HORH	HUMPHREY	3	--------	641385
C 585					
C 586					
C 587					
C 588					
C 589	FR SERVICE ELECT MIRROR	CONXALL	5	563089	563088
C 590	UNDER DASH ELECT MIRROR	CONXALL	8	563089	563088
C 591	L.H.CONSOLE - MIRROR L.H.	EURAMTEC	8	--------	562799
C 592	L.H.CONSOLE - MIRROR R.H.	EURAMTEC	8	--------	562799
C 593					
C 594	FRONT ROOF - DRIVERS LIGHT	LEEKRAFT		---------	562803
C 595					
C 596					
C 597	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5	------	562812
C 598	L.H. DASH PANEL - DISPLAY SET SW.	MOLEX	5	------	562812
C 599	DASH CENTALER MODULE – MAGN. SENSOR	AMP MNL	2	561248	561247
C 600	ENGINE CPT.-A/C LOW PRESS SW. UNLOAD	PED	2	562348	562471
C 601					
C 602					
C 603					
C 604					
C 605					
C 606					
C 607	FRONT SERVICE CMPT. RPM SIGNAL	PED WP	2	561566	561690
L 608	FRONT SERVICE CMPT. SPEED SIGNAL	PED WP	2	561566	561690
L X	CLUSTER	JAE	22	------	562766
R Y	CLUSTER	JAE	30	------	562767
X	CLUSTER	JAE	22	------	562764

DIODES NUMBER CODE

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 1					
D 2					
D 3					
D 4	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 5	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 6					
D 7					
D 8					
D 9					
D 10					
D 11					
D 12					
D 13					
D 14					
D 15					
D 16					
D 17	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 18	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 19	9.1	3A	561740	FR JCT BOX	DAYTIME RUN LTS-PARK BRK CALL SW.
D 20	9.1	3A	561740	FR JCT BOX	DAYTIME RUN LTS-HEAD LT SW
D 21					
D 22	18.1	3A	561740	FR SERVICE CPT	LEVEL LOW
D 23	18.1	3A	561740	FR SERVICE CPT	LEVEL LOW
D 25	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 26	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 27	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 28	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 29	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 30	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 31					
D 32					
D 33					
D 34					
D 35					
D 36					
D 37					
D 38					
D 39	9.2	3A	561740	FR JCT BOX	CORNERING LT -LH
D 40	9.2	3A	561740	FR JCT BOX	FR DOCKING LT LH -HI
D 41	9.2	3A	561740	FR JCT BOX	FR DOCKING LT RH -HI
D 42	9.2	3A	561740	FR JCT BOX	CORNERING LT -RH
D 43	10.1	3A	561740	WIPER MOTOR	LOWER WIPER MOTOR SUPPRESSOR
D 44	10.1	3A	561740	WIPER MOTOR	LOWER WIPER MOTOR SUPPRESSOR
D 45	10.1	3A	561740	WIPER MOTOR	UPPER WIPER MOTOR SUPPRESSOR
D 46					
D 47					
D 48					
D 49					
D 50					
D 51	11.2	3A	561740	FR JCT BOX	ENTRANCE DOOR -STEP LTS
D 52					
D 53	9.3	3A	561740	FR JCT BOX	CORNERING LT -GROUND
D 54	20.1	3A	561740	RR JCT BOX	BACK-UP MONITOR
D 55					
D 56	9.2	12A	560863	FR JCT BOX	FR DOCKING LT LH -LOW
D 57	9.2	12A	560863	FR JCT BOX	FR DOCKING LT RH -LOW
D 58					
D 59	15.2	3A	561740	RJB A/C JCT PANEL	A/C & HEAT WATER VALVE
D 60	15.2	3A	561740	RJB A/C JCT PANEL	A/C COMPR.CLUTCH SUPPRESSOR
D 61					
D 62	15.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP FEED
D 63					
D 64					
D 65	15.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP - PRE-HEAT FEED
D 66	15.2	3A	561740	RJB A/C JCT PANEL	WATER VALVE - HEAT SW. FEED
D 67	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - RH
D 68	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - LH
D 69					
D 70					
D 71					
D 72					
D 73					
D 74					
D 75	4.1	3A	560931	BAT CPT	STARTER-SUPPRESSOR COIL RLY
D 76					
D 77					
D 78	14.1	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 79	14.1	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 80					
D 81					
D 82					
D 83	8.1	3A	561740	RR JCT BOX	FAN CLUTCH W/RETARDER
D 84	15.2	3A	561740	RJB A/C JCT PANEL	WATER VALVE
D 85	15.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP

DIODES NUMBER CODE

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 1					
D 2					
D 3	1.1	3A	561740	BATT. CPT	24 V. DISC, SWICH RELAY
D 4	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 5	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 6					
D 7					
D 8					
D 9					
D 10					
D 11					
D 12					
D 13					
D 14					
D 15					
D 16					
D 17	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 18	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 19	9.1	3A	561740	FR JCT BOX	DAYTIME RUN LTS-PARK BRK CALL SW.
D 20	9.1	3A	561740	FR JCT BOX	DAYTIME RUN LTS-HEAD LT SW
D 21					
D 22	18.1	3A	561740	FR SERVICE CPT	LEVEL LOW
D 23	18.1	3A	561740	FR SERVICE CPT	LEVEL LOW
D 25	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 26	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 27	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 28	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 29	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 30	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 31					
D 32					
D 33					
D 34					
D 35					
D 36					
D 37					
D 38					
D 39	9.2	3A	561740	FR JCT BOX	CORNERING LT -LH
D 40	9.2	3A	561740	FR JCT BOX	FR DOCKING LT LH -HI
D 41	9.2	3A	561740	FR JCT BOX	FR DOCKING LT RH -HI
D 42	9.2	3A	561740	FR JCT BOX	CORNERING LT -RH
D 43	10.1	3A	561740	WIPER MOTOR	LOWER WIPER MOTOR SUPPRESSOR
D 44	10.1	3A	561740	WIPER MOTOR	LOWER WIPER MOTOR SUPPRESSOR
D 45	10.1	3A	561740	WIPER MOTOR	UPPER WIPER MOTOR SUPPRESSOR
D 46					
D 47					
D 48					
D 49					
D 50					
D 51	11.2	3A	561740	FR JCT BOX	ENTRANCE DOOR -STEP LTS
D 52					
D 53	9.3	3A	561740	FR JCT BOX	CORNERING LT -GROUND
D 54	20.1	3A	561740	RR JCT BOX	BACK-UP MONITOR
D 55					
D 56	9.2	12A	560863	FR JCT BOX	FR DOCKING LT LH -LOW
D 57	9.2	12A	560863	FR JCT BOX	FR DOCKING LT RH -LOW
D 58					
D 59	15.2	3A	561740	RJB A/C JCT PANEL	A/C & HEAT WATER VALVE
D 60	15.2	3A	561740	RJB A/C JCT PANEL	A/C COMPR.CLUTCH SUPPRESSOR
D 61					
D 62	15.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP FEED
D 63					
D 64					
D 65	15.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP - PRE-HEAT FEED
D 66	15.2	3A	561740	RJB A/C JCT PANEL	WATER VALVE - HEAT SW. FEED
D 67	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - RH
D 68	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - LH
D 69					
D 70					
D 71					
D 72					
D 73					
D 74					
D 75	4.1	3A	560931	BAT CPT	STARTER-SUPPRESSOR COIL RLY
D 76					
D 77					
D 78	14.1	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 79	14.1	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 80					
D 81					
D 82					
D 83	8.1	3A	561740	RR JCT BOX	FAN CLUTCH W/RETARDER
D 84	15.2	3A	561740	RJB A/C JCT PANEL	WATER VALVE
D 85	15.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP
D A1	4.2	3A	561740	RR JCT BOX	ALTERNATOR BOSCH
D A2	4.2	3A	561740	RR JCT BOX	ALTERNATOR BOSCH
D F1	8.1	3A	561740	RR JCT BOX	FAN CLUTCH - SUPRESSSOR
D F2	8.1	3A	561740	RR JCT BOX	FAN CLUTCH - SUPRESSSOR

DIODES NUMBER CODE

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 1					
D 2					
D 3	1.1	3A	561740	BATT. CPT	24 V. DISC, SWICH RELAY
D 4	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 5	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 6	12.2	3A	561740	KEYLESS-PANEL	ENTRANCE DOOR LOCK
D 7	12.2	3A	561740	KEYLESS-PANEL	LUGGAGE DOOR LOCK
D 8					
D 9					
D 10					
D 11					
D 12					
D 13					
D 14					
D 15					
D 16					
D 17	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 18	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 19	9.1	3A	561740	FR JCT BOX	DAYTIME RUN LTS-PARK BRK CALL SW.
D 20	9.1	3A	561740	FR JCT BOX	DAYTIME RUN LTS-HEAD LT SW
D 21					
D 22	18.1	3A	561740	FR SERVICE CPT	LEVEL LOW
D 23	18.1	3A	561740	FR SERVICE CPT	LEVEL LOW
D 25	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 26	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 27	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 28	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 29	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 30	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 31					
D 32					
D 33					
D 34					
D 35					
D 36					
D 37					
D 38					
D 39	9.2	3A	561740	FR JCT BOX	CORNERING LT -LH
D 40	9.2	3A	561740	FR JCT BOX	FR DOCKING LT LH -HI
D 41	9.2	3A	561740	FR JCT BOX	FR DOCKING LT RH -HI
D 42	9.2	3A	561740	FR JCT BOX	CORNERING LT -RH
D 43	10.1	3A	561740	WIPER MOTOR	LOWER WIPER MOTOR SUPPRESSOR
D 44	10.1	3A	561740	WIPER MOTOR	LOWER WIPER MOTOR SUPPRESSOR
D 45	10.1	3A	561740	WIPER MOTOR	UPPER WIPER MOTOR SUPPRESSOR
D 46					
D 47					
D 48					
D 49					
D 50					
D 51	11.2	3A	561740	FR JCT BOX	ENTRANCE DOOR -STEP LTS
D 52					
D 53	9.3	3A	561740	FR JCT BOX	CORNERING LT -GROUND
D 54	20.1	3A	561740	RR JCT BOX	BACK-UP MONITOR
D 55					
D 56	9.2	12A	560863	FR JCT BOX	FR DOCKING LT LH -LOW
D 57	9.2	12A	560863	FR JCT BOX	FR DOCKING LT RH -LOW
D 58					
D 59	15.2	3A	561740	RJB A/C JCT PANEL	A/C & HEAT WATER VALVE
D 60	15.2	3A	561740	RJB A/C JCT PANEL	A/C COMPR.CLUTCH SUPPRESSOR
D 61					
D 62	15.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP FEED
D 63					
D 64					
D 65	15.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP - PRE-HEAT FEED
D 66	15.2	3A	561740	RJB A/C JCT PANEL	WATER VALVE - HEAT SW. FEED
D 67	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - RH
D 68	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - LH
D 69					
D 70					
D 71					
D 72					
D 73					
D 74					
D 75	4.1	3A	560931	BAT CPT	STARTER-SUPPRESSOR COIL RLY
D 76					
D 77					
D 78	14.1	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 79	14.1	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 80					
D 81					
D 82					
D 83	8.1	3A	561740	RR JCT BOX	FAN CLUTCH W/RETARDER
D 84	15.2	3A	561740	RJB A/C JCT PANEL	WATER VALVE
D 85	15.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP
D A1	4.2	3A	561740	RR JCT BOX	ALTERNATOR BOSCH
D A2	4.2	3A	561740	RR JCT BOX	ALTERNATOR BOSCH
D F1	8.1	3A	561740	RR JCT BOX	FAN CLUTCH - SUPRESSSOR
D F2	8.1	3A	561740	RR JCT BOX	FAN CLUTCH - SUPRESSSOR

DIODES NUMBER CODE

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 1					
D 2					
D 3	1.1	3A	561740	BATT. CPT	24 V. DISC, SWICH RELAY
D 4	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 5	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 6	12.2	3A	561740	KEYLESS-PANEL	ENTRANCE DOOR LOCK
D 7	12.2	3A	561740	KEYLESS-PANEL	LUGGAGE DOOR LOCK
D 8	9.1	3A	561740	FR JCT BOX	HI/LO BEAMS
D 9					
D 10					
D 11					
D 12					
D 13					
D 14					
D 15					
D 16					
D 17	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D 18	9.2	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D 19	9.1	3A	561740	FR JCT BOX	DAYTIME RUN LTS-PARK BRK CALL SW.
D 20	9.1	3A	561740	FR JCT BOX	DAYTIME RUN LTS-HEAD LT SW
D 21					
D 22	18.1	3A	561740	FR SERVICE CPT	LEVEL LOW
D 23	18.1	3A	561740	FR SERVICE CPT	LEVEL LOW
D 25	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 26	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 27	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 28	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 29	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 30	11.1	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D 31					
D 32					
D 33					
D 34					
D 35					
D 36					
D 37					
D 38					
D 39	9.2	3A	561740	FR JCT BOX	CORNERING LT -LH
D 40	9.2	3A	561740	FR JCT BOX	FR DOCKING LT LH -HI
D 41	9.2	3A	561740	FR JCT BOX	FR DOCKING LT RH -HI
D 42	9.2	3A	561740	FR JCT BOX	CORNERING LT -RH
D 43	10.1	3A	561740	WIPER MOTOR	LOWER WIPER MOTOR SUPPRESSOR
D 44	10.1	3A	561740	WIPER MOTOR	LOWER WIPER MOTOR SUPPRESSOR
D 45	10.1	3A	561740	WIPER MOTOR	UPPER WIPER MOTOR SUPPRESSOR
D 46	9.3	3A	561740	RR JCT BOX	PARK BRAKE STOP LIGHT
D 47					
D 48					
D 49					
D 50					
D 51	11.2	3A	561740	FR JCT BOX	ENTRANCE DOOR -STEP LTS
D 52					
D 53	9.3	3A	561740	FR JCT BOX	CORNERING LT -GROUND
D 54	20.1	3A	561740	RR JCT BOX	BACK-UP MONITOR
D 55					
D 56	9.2	12A	560863	FR JCT BOX	FR DOCKING LT LH -LOW
D 57	9.2	12A	560863	FR JCT BOX	FR DOCKING LT RH -LOW
D 58					
D 59	15.2	3A	561740	RJB A/C JCT PANEL	A/C & HEAT WATER VALVE
D 60	15.2	3A	561740	RJB A/C JCT PANEL	A/C COMPR.CLUTCH SUPPRESSOR
D 61					
D 62	15.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP FEED
D 63					
D 64					
D 65	15.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP - PRE-HEAT FEED
D 66	15.2	3A	561740	RJB A/C JCT PANEL	WATER VALVE - HEAT SW. FEED
D 67	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - RH
D 68	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - LH
D 69					
D 70					
D 71					
D 72					
D 73					
D 74					
D 75	4.1	3A	560931	BAT CPT	STARTER-SUPPRESSOR COIL RLY
D 76					
D 77					
D 78	14.1	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 79	14.1	3A	561740	LH CONSOLE	PRE-HEAT WATER HEATER SW.
D 80					
D 81					
D 82					
D 83	8.1	3A	561740	RR JCT BOX	FAN CLUTCH W/RETARDER
D 84	15.2	3A	561740	RJB A/C JCT PANEL	WATER VALVE
D 85	15.2	3A	561740	RJB A/C JCT PANEL	WATER PUMP
D A1	4.2	3A	561740	RR JCT BOX	ALTERNATOR BOSCH
D A2	4.2	3A	561740	RR JCT BOX	ALTERNATOR BOSCH
D F1	8.1	3A	561740	RR JCT BOX	FAN CLUTCH - SUPRESSSOR
D F2	8.1	3A	561740	RR JCT BOX	FAN CLUTCH - SUPRESSSOR

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R F1	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 1
R F2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2
R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY
R 1	1.1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R 2	2.1	24V	561991	BATT. CPT.	ENGINE RUN (12) FR & RR
R 3					
R 4	4.1	24V	561005	BATT. CPT.	STARTING MOTOR
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.
R 6	9.3	24V	561707	RR JCT BOX	STOP LTS-PARKING BRAKE
R 7	5.1	24V	561707	FR JCT BOX	FAST IDLE
R 8	6.1	24V	561707	RR JCT BOX	12V IGNITION WT
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS
R 10					
R 11	5.1	24V	561707	RR JCT BOX	12V IGNITION DDEC3
R 12	7.1	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS
R 14	9.1	24V	561707	FR JCT BOX	BLINKER
R 15	9.1	24V	561707	FR JCT BOX	FR MARKER LTS
R 16	9.1	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R 17	9.1	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS
R 18	9.1	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-IN
R 19	9.1	24V	561707	FR JCT BOX	HEADLAMPS (HI)
R 20	9.1	24V	561707	FR JCT BOX	HEADLAMPS (LO)
R 21	9.2	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT
R 22					
R 23	9.2	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT
R 24	9.2	24V	561707	FR JCT BOX	R.H. CORNERING LT
R 25	9.2	24V	561707	FR JCT BOX	L.H. CORNERING LT
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS
R 27					
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R 29					
R 30					
R 31					
R 32					
R 33	15.1	12V	562092	FR JCT BOX	BLOWER CUT-IN RLY
R 34	15.1	24V	561707	RJB A/C JCT PANEL	A/C LOGIC PANEL
R 35	15.1	24V	561707	RJB A/C JCT PANEL	WATER PUMP
R 36	15.1	24V	561707	RJB A/C JCT PANEL	A/C COMPRESSOR CLUTCH
R 37					
R 38					
R 39	15.2	24V	561005	BATT. CPT.	CONDENSER FAN MOTOR
R 40	15.2	24V	561014	BATT. CPT.	CONDENSER SPEED CTR HI
R 41	15.2	24V	561005	BATT. CPT.	CONDENSER SPEED CTR HI
R 42					
R 43					
R 44					
R 45					
R 46	20.1	24V	561707	FR JCT BOX	CAMERA DOOR
R 47					
R 48					
R 49	22.1	24V	561707	FR JCT BOX	ABS - SERVICE BRK RLY
R 50					
R 51	11.2	24V	561707	FR JCT BOX	DRIVER'S LTS
R 52	22.1	24V	561707	FR JCT BOX	W.TR. RETARDER SIGNAL
R 53	1.1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR
R 54	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY RR
R 55	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY FR
R 56					
R 57	9.1	24V	561707	FR JCT BOX	DAY'S BLINKER
R 58					
R 59	9.3	24V	561707	RR JCT BOX	DOCKING LTS
R 60					
R 61	9.3	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 62					
R 63					
R 64	11.2	12V	562092	FR JCT BOX	ENTRANCE DOOR LTS
R 65	9.2	24V	561707	FR JCT BOX	CORNERING LTS CONTROL
R 66	9.2	24V	561707	FR JCT BOX	LOW DOCKING LTS -FR CORNERING
R 67	9.3	24V	561707	RR JCT BOX	LOW DOCKING LTS
R 68					
R 69	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR LOCK
R 70	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR UNLOCK
R 71	12.1	24V	561707	RR JCT BOX	LUGGAGE DOOR UNLOCK T.T. LT.
R 72					
R 73					
R 74	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR LOCK
R 75	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR UNLOCK
R 76					
R 77					
R 78	1.1	12V	562092	FR JCT BOX	MASTER SWITCH
R 79					
R 80	11.1	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R 81					
R 82	21.1	24V	561707	FR JCT BOX	RETARDER WT
R 83					
R 84	8.1	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R 85	8.1	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R 86					
R 87	21.1	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R 88					
R 89	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 90	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 91	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 92	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 93	14.1	24V	561707	RR JCT BOX	PRE-HEAT WATER HEATER (WEBASTO)
R 94					
R 95					
R 96					
R 97					
R 98					
R 99	8.1	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 100	4.1	12V	561538	RR JCT BOX	GENERATOR SIGNAL
R 101					
R 102	12.1	12V	562092	UNDER DASH RH	DRIVER'S DOOR UNLOCK
R 103					
R 104	4.1	24V	561707	UNDER DASH RH	ANTI-THEFT
R 105	12.1	12V	562092	UNDER DASH RH	DRIVER'S & LUGGAGE DOOR LOCK
R 106	11.2	24V	562341	UNDER DASH RH	TIME DELAY RLY DRIVER'S LTS
R 2010	14.2	24V	561230	WEBASTO PRE-HEAT	WEBASTO
V IMN	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
V IMR	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-B/U SIGNAL
V IM1	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
V IM2	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
V IM3	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
V IM4	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 4 RETARD. ON SIGNAL

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R F1	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 1
R F2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2
R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY
R 1	1.1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R 2	2.1	24V	561991	BATT. CPT.	ENGINE RUN (12) FR & RR
R 3					
R 4	4.1	24V	561005	BATT. CPT.	STARTING MOTOR
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.
R 6	9.3	24V	561707	RR JCT BOX	STOP LTS-PARKING BRAKE
R 7	5.1	24V	561707	FR JCT BOX	FAST IDLE
R 8	6.1	24V	561707	RR JCT BOX	12V IGNITION WT
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS
R 10					
R 11	5.1	24V	561707	RR JCT BOX	12V IGNITION DDEC3
R 12	7.1	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS
R 14	9.1	24V	561707	FR JCT BOX	BLINKER
R 15	9.1	24V	561707	FR JCT BOX	FR MARKER LTS
R 16	9.1	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R 17	9.1	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS
R 18	9.1	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-IN
R 19	9.1	24V	561707	FR JCT BOX	HEADLAMPS (HI)
R 20	9.1	24V	561707	FR JCT BOX	HEADLAMPS (LO)
R 21	9.2	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT
R 22					
R 23	9.2	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT
R 24	9.2	24V	561707	FR JCT BOX	R.H. CORNERING LT
R 25	9.2	24V	561707	FR JCT BOX	L.H. CORNERING LT
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS
R 27					
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R 29					
R 30					
R 31					
R 32					
R 33	15.1	12V	562092	FR JCT BOX	BLOWER CUT-IN RLY
R 33	9.1	24V	561707	FR JCT BOX	DAYTIME RUNNING LIGHT
R 34	15.1	24V	561707	RJB A/C JCT PANEL	A/C CONTROL
R 35	15.1	24V	561707	RJB A/C JCT PANEL	WATER PUMP
R 36	15.1	24V	561707	RJB A/C JCT PANEL	A/C COMPRESSOR CLUTCH
R 37					
R 38	15.1	24V	561707	RJB A/C JCT PANEL	A/C LIQ. SOL. VALVE
R 39	15.2	24V	561005	BATT. CPT.	CONDENSER FAN MOTOR
R 40	15.2	24V	561014	BATT. CPT.	CONDENSER SPEED CTR HI
R 41	15.2	24V	561005	BATT. CPT.	CONDENSER SPEED CTR HI
R 42					
R 43					
R 44					
R 45					
R 46	20.1	12V	562092	FR JCT BOX	CAMERA DOOR
R 47					
R 48					
R 49	22.1	24V	561707	FR JCT BOX	ABS - SERVICE BRK RLY
R 50					
R 51	11.2	24V	561707	FR JCT BOX	DRIVER'S LTS
R 52	22.1	24V	561707	FR JCT BOX	W.TR. RETARDER SIGNAL
R 53	1.1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR
R 54	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY RR
R 55	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY FR
R 56					
R 57	9.1	24V	561707	FR JCT BOX	DAY'S BLINKER
R 58					
R 59	9.3	24V	561707	RR JCT BOX	DOCKING LTS
R 60					

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 61	9.3	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL
R 62					
R 63					
R 64	11.2	12V	562092	FR JCT BOX	ENTRANCE DOOR LTS
R 65	9.2	24V	561707	FR JCT BOX	CORNERING LTS CONTROL
R 66	9.2	24V	561707	FR JCT BOX	LOW DOCKING LTS -FR CORNERING
R 67	9.3	24V	561707	RR JCT BOX	LOW DOCKING LTS
R 68					
R 69	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR LOCK
R 70	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR UNLOCK
R 71	12.1	24V	561707	RR JCT BOX	LUGGAGE DOOR UNLOCK T.T. LT.
R 72					
R 73					
R 74	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR LOCK
R 75	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR UNLOCK
R 76					
R 77					
R 78	1.1	24V	561707	FR JCT BOX	MASTER SWITCH WITH ALT. BOSCH
R 78	1.1	12V	562092	FR JCT BOX	MASTER SWITCH WITH ALT. BOSCH
R 79					
R 80	11.1	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R 81					
R 82	21.1	24V	561707	FR JCT BOX	RETARDER WT
R 83					
R 84	8.1	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R 85	8.1	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R 86					
R 87	21.1	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R 88					
R 89	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 90	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 91	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 92	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 93	14.1	24V	561707	RR JCT BOX	PRE-HEAT WATER HEATER (WEBASTO)
R 94					
R 95					
R 96					
R 97					
R 98					
R 99	8.1	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 100	4.1	12V	561538	RR JCT BOX	GENERATOR SIGNAL
R 101					
R 102	12.1	12V	562092	UNDER DASH RH	DRIVER'S DOOR UNLOCK
R 103					
R 104	4.1	24V	561707	UNDER DASH RH	ANTI-THEFT
R 105	12.1	12V	562092	UNDER DASH RH	DRIVER'S & LUGGAGE DOOR LOCK
R 106	11.2	24V	562341	UNDER DASH RH	TIME DELAY RLY DRIVER'S LTS
R 2010	14.2	24V	561230	WEBASTO PRE-HEAT	WEBASTO
V IMN	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
V IMR	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-B/U SIGNAL
V IM1	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
V IM2	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
V IM3	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
V IM4	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 4 RETARD. ON SIGNAL
R A1	4.2	24V	561707	RR JCT BOX	EXCITING RELAY ALT. #1
R A2	4.2	24V	561707	RR JCT BOX	EXCITING RELAY ALT. #2
R A3	4.2	24V	561707	RR JCT BOX	RUN RELAY ALT. #1 OR ALT. #2
R A4	4.2	24V	561707	RR JCT BOX	RUN RELAY ALT.#1 AND ALT. #2

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION	No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R F1	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 1
R F2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2
R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY
R 1	1.1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R 2	2.1	24V	561991	BATT. CPT.	ENGINE RUN (12) FR & RR
R 3					
R 4	4.1	24V	561005	BATT. CPT.	STARTING MOTOR
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.
R 6	9.3	24V	561707	RR JCT BOX	STOP LTS-PARKING BRAKE
R 7	5.1	24V	561707	FR JCT BOX	FAST IDLE
R 8					
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS
R 10					
R 11					
R 12	7.1	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS
R 14	9.1	24V	561707	FR JCT BOX	BLINKER
R 15	9.1	24V	561707	FR JCT BOX	FR MARKER LTS
R 16	9.1	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R 17	9.1	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS
R 18	9.1	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-IN
R 19	9.1	24V	561707	FR JCT BOX	HEADLAMPS (HI)
R 20	9.1	24V	561707	FR JCT BOX	HEADLAMPS (LO)
R 21	9.2	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT
R 22					
R 23	9.2	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT
R 24	9.2	24V	561707	FR JCT BOX	R.H. CORNERING LT
R 25	9.2	24V	561707	FR JCT BOX	L.H. CORNERING LT
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS
R 27					
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R 29					
R 30					
R 31					
R 32					
R 33	15.1	12V	562092	FR JCT BOX	BLOWER CUT-IN RLY
R 33	9.1	24V	561707	FR JCT BOX	DAYTIME RUNNING LIGHT
R 34	15.1	24V	561707	RJB A/C JCT PANEL	A/C CONTROL
R 35	15.1	24V	561707	RJB A/C JCT PANEL	WATER PUMP
R 36	15.1	24V	561707	RJB A/C JCT PANEL	A/C COMPRESSOR CLUTCH
R 37					
R 38	15.1	24V	561707	RJB A/C JCT PANEL	A/C LIQ. SOL. VALVE
R 39	15.2	24V	561005	BATT. CPT.	CONDENSER FAN MOTOR
R 40	15.2	24V	561014	BATT. CPT.	CONDENSER SPEED CTR HI
R 41	15.2	24V	561005	BATT. CPT.	CONDENSER SPEED CTR HI
R 42					
R 43					
R 44					
R 45					
R 46	20.1	12V	562092	FR JCT BOX	CAMERA DOOR
R 47					
R 48					
R 49	22.1	24V	561707	FR JCT BOX	ABS - SERVICE BRK RLY
R 50					
R 51	11.2	24V	561707	FR JCT BOX	DRIVER'S LTS
R 52	22.1	24V	561707	FR JCT BOX	W.TR. RETARDER SIGNAL
R 53	1.1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR
R 54	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY RR
R 55	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY FR
R 56					
R 57	9.1	24V	561707	FR JCT BOX	DAY'S BLINKER
R 58					
R 59	9.3	24V	561707	RR JCT BOX	DOCKING LTS
R 60					

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 61	9.3	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL
R 62					
R 63					
R 64	11.2	12V	562092	FR JCT BOX	ENTRANCE DOOR LTS
R 65	9.2	24V	561707	FR JCT BOX	CORNERING LTS CONTROL
R 66	9.2	24V	561707	FR JCT BOX	LOW DOCKING LTS -FR CORNERING
R 67	9.3	24V	561707	RR JCT BOX	LOW DOCKING LTS
R 68					
R 69	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR LOCK
R 70	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR UNLOCK
R 71	12.1	24V	561707	RR JCT BOX	LUGGAGE DOOR UNLOCK T.T. LT.
R 72					
R 73					
R 74	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR LOCK
R 75	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR UNLOCK
R 76					
R 77					
R 78	1.1	24V	561707	FR JCT BOX	MASTER SWITCH WITH ALT. BOSCH
R 78	1.1	12V	562092	FR JCT BOX	MASTER SWITCH WITH ALT. BOSCH
R 79					
R 80	11.1	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R 81					
R 82	21.1	24V	561707	FR JCT BOX	RETARDER WT
R 83					
R 84	8.1	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R 85	8.1	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R 86					
R 87	21.1	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R 88					
R 89	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 90	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 91	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 92	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 93	14.1	24V	561707	RR JCT BOX	PRE-HEAT WATER HEATER (WEBASTO)
R 94					
R 95					
R 96					
R 97					
R 98					
R 99	8.1	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 100	4.1	12V	561538	RR JCT BOX	GENERATOR SIGNAL
R 101					
R 102	12.1	12V	562092	UNDER DASH RH	DRIVER'S DOOR UNLOCK
R 103					
R 104	4.1	24V	561707	UNDER DASH RH	ANTI-THEFT
R 105	12.1	12V	562092	UNDER DASH RH	DRIVER'S & LUGGAGE DOOR LOCK
R 106	11.2	24V	562341	UNDER DASH RH	TIME DELAY RLY DRIVER'S LTS
R 2010	14.2	24V	561230	WEBASTO PRE-HEAT	WEBASTO
V IMN	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
V IMR	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-B/U SIGNAL
V IM1	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
V IM2	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
V IM3	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
V IM4	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 4 RETARD. ON SIGNAL
R A1	4.2	24V	561707	RR JCT BOX	EXCITING RELAY ALT. #1
R A2	4.2	24V	561707	RR JCT BOX	EXCITING RELAY ALT. #2
R A3	4.2	24V	561707	RR JCT BOX	RUN RELAY ALT. #1 OR ALT. #2
R A4	4.2	24V	561707	RR JCT BOX	RUN RELAY ALT.#1 AND ALT. #2

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION	No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R F1	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 1
R F2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2
R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY
R 1	1.1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R 2	2.1	24V	561991	BATT. CPT.	ENGINE RUN (12) FR & RR
R 3					
R 4	4.1	24V	561005	BATT. CPT.	STARTING MOTOR
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.
R 6	9.3	24V	561707	RR JCT BOX	STOP LTS-PARKING BRAKE
R 7	5.1	24V	561707	FR JCT BOX	FAST IDLE
R 8					
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS
R 10					
R 11					
R 12	7.1	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS
R 14	9.1	24V	561707	FR JCT BOX	BLINKER
R 15	9.1	24V	561707	FR JCT BOX	FR MARKER LTS
R 16	9.1	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R 17	9.1	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS
R 18	9.1	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-IN
R 19	9.1	24V	561707	FR JCT BOX	HEADLAMPS (HI)
R 20	9.1	24V	561707	FR JCT BOX	HEADLAMPS (LO)
R 21	9.2	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT
R 22					
R 23	9.2	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT
R 24	9.2	24V	561707	FR JCT BOX	R.H. CORNERING LT
R 25	9.2	24V	561707	FR JCT BOX	L.H. CORNERING LT
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS
R 27					
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R 29					
R 30					
R 31					
R 32					
R 33	15.1	12V	562092	FR JCT BOX	BLOWER CUT-IN RLY
R 33	9.1	24V	561707	FR JCT BOX	DAYTIME RUNNING LIGHT
R 34	15.1	24V	561707	RJB A/C JCT PANEL	A/C CONTROL
R 35	15.1	24V	561707	RJB A/C JCT PANEL	WATER PUMP
R 36	15.1	24V	561707	RJB A/C JCT PANEL	A/C COMPRESSOR CLUTCH
R 37					
R 38	15.1	24V	561707	RJB A/C JCT PANEL	A/C LIQ. SOL. VALVE
R 39	15.2	24V	561005	BATT. CPT.	CONDENSER FAN MOTOR
R 40	15.2	24V	561014	BATT. CPT.	CONDENSER SPEED CTR HI
R 41	15.2	24V	561005	BATT. CPT.	CONDENSER SPEED CTR HI
R 42					
R 43					
R 44					
R 45					
R 46	20.1	12V	562092	FR JCT BOX	CAMERA DOOR
R 47					
R 48					
R 49	22.1	24V	561707	FR JCT BOX	ABS - SERVICE BRK RLY
R 50					
R 51	11.2	24V	561707	FR JCT BOX	DRIVER'S LTS
R 52	22.1	24V	561707	FR JCT BOX	ABS SYSTEM
R 53	1.1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR
R 54	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY RR
R 55	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY FR
R 56					
R 57	9.1	24V	561707	FR JCT BOX	DAY'S BLINKER
R 58					
R 59	9.3	24V	561707	RR JCT BOX	DOCKING LTS
R 60					

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 61	9.3	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL
R 62					
R 63					
R 64	11.2	12V	562092	FR JCT BOX	ENTRANCE DOOR LTS
R 65	9.2	24V	561707	FR JCT BOX	CORNERING LTS CONTROL
R 66	9.2	24V	561707	FR JCT BOX	LOW DOCKING LTS -FR CORNERING
R 67	9.3	24V	561707	RR JCT BOX	LOW DOCKING LTS
R 68					
R 69	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR LOCK
R 70	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR UNLOCK
R 71	12.1	24V	561707	RR JCT BOX	LUGGAGE DOOR UNLOCK T.T. LT.
R 72					
R 73					
R 74	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR LOCK
R 75	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR UNLOCK
R 76					
R 77					
R 78	1.1	24V	561707	FR JCT BOX	MASTER SWITCH WITH ALT. BOSCH
R 78	1.1	12V	562092	FR JCT BOX	MASTER SWITCH WITH ALT. BOSCH
R 79					
R 80	11.1	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R 81					
R 82	21.1	24V	561707	FR JCT BOX	RETARDER WT
R 83					
R 84	8.1	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R 85	8.1	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R 86					
R 87	21.1	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R 88					
R 89	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 90	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 91	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 92	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 93	14.1	24V	561707	RR JCT BOX	PRE-HEAT WATER HEATER (WEBASTO)
R 94					
R 95					
R 96					
R 97					
R 98					
R 99	8.1	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 100	4.1	12V	561538	RR JCT BOX	GENERATOR SIGNAL
R 101					
R 102	12.1	12V	562092	UNDER DASH RH	DRIVER'S DOOR UNLOCK
R 103					
R 104	4.1	24V	561707	UNDER DASH RH	ANTI-THEFT
R 105	12.1	12V	562092	UNDER DASH RH	DRIVER'S & LUGGAGE DOOR LOCK
R 106	11.2	24V	562341	UNDER DASH RH	TIME DELAY RLY DRIVER'S LTS
R 2010	14.2	24V	561230	WEBASTO PRE-HEAT	WEBASTO
V IMN	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
V IMR	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-B/U SIGNAL
V IM1	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
V IM2	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
V IM3	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
V IM4	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 4 RETARD. ON SIGNAL
R A1	4.2	24V	561707	RR JCT BOX	EXCITING RELAY ALT. #1
R A2	4.2	24V	561707	RR JCT BOX	EXCITING RELAY ALT. #2
R A3	4.2	24V	561707	RR JCT BOX	RUN RELAY ALT. #1 OR ALT. #2
R A4	4.2	24V	561707	RR JCT BOX	RUN RELAY ALT.#1 AND ALT. #2

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R F1	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 1
R F2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2
R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY
R 1	1.1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R 2	2.1	24V	561991	BATT. CPT.	ENGINE RUN (12) FR & RR
R 3					
R 4	4.1	24V	561005	BATT. CPT.	STARTING MOTOR
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.
R 6	9.3	24V	561707	RR JCT BOX	STOP LTS-PARKING BRAKE
R 7	5.1	24V	561707	FR JCT BOX	FAST IDLE
R 8					
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS
R 10					
R 11					
R 12	7.1	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS
R 14	9.1	24V	561707	FR JCT BOX	BLINKER
R 15	9.1	24V	561707	FR JCT BOX	FR MARKER LTS
R 16	9.1	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R 17	9.1	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS
R 18	9.1	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-IN
R 19	9.1	24V	561707	FR JCT BOX	HEADLAMPS (HI)
R 20	9.1	24V	561707	FR JCT BOX	HEADLAMPS (LO)
R 21	9.2	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT
R 22					
R 23	9.2	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT
R 24	9.2	24V	561707	FR JCT BOX	R.H. CORNERING LT
R 25	9.2	24V	561707	FR JCT BOX	L.H. CORNERING LT
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS
R 27					
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R 29					
R 30					
R 31					
R 32					
R 33	4.1	12V	562092	FR JCT BOX	BLOWER CUT-IN RLY
R 33	9.1	24V	561707	FR JCT BOX	DAYTIME RUNNING LIGHT
R 34	15.1	24V	561707	RJB A/C JCT PANEL	A/C CONTROL
R 35	15.1	24V	561707	RJB A/C JCT PANEL	WATER PUMP
R 36	15.1	24V	561707	RJB A/C JCT PANEL	A/C COMPRESSOR CLUTCH
R 37					
R 38	15.1	24V	561707	RJB A/C JCT PANEL	A/C LIQ. SOL. VALVE
R 39	15.2	24V	561005	BATT. CPT.	CONDENSER FAN MOTOR
R 40	15.2	24V	561014	BATT. CPT.	CONDENSER SPEED CTR HI
R 41	15.2	24V	561005	BATT. CPT.	CONDENSER SPEED CTR HI
R 42					
R 43					
R 44					
R 45					
R 46	20.1	12V	562092	FR JCT BOX	CAMERA DOOR
R 47					
R 48					
R 49	22.1	24V	561707	FR JCT BOX	ABS - SERVICE BRK RLY
R 50					
R 51	11.2	24V	561707	FR JCT BOX	DRIVER'S LTS
R 52	22.1	24V	561707	FR JCT BOX	ABS SYSTEM
R 53	1.1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR
R 54	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY RR
R 55	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY FR
R 56					
R 57	9.1	24V	561707	FR JCT BOX	DAY'S BLINKER
R 58					
R 59	9.3	24V	561707	RR JCT BOX	DOCKING LTS
R 60					

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 61	9.3	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL
R 62					
R 63					
R 64	11.2	12V	562092	FR JCT BOX	ENTRANCE DOOR LTS
R 65	9.2	24V	561707	FR JCT BOX	CORNERING LTS CONTROL
R 66	9.2	24V	561707	FR JCT BOX	LOW DOCKING LTS -FR CORNERING
R 67	9.3	24V	561707	RR JCT BOX	LOW DOCKING LTS
R 68					
R 69	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR LOCK
R 70	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR UNLOCK
R 71	12.1	24V	561707	RR JCT BOX	LUGGAGE DOOR UNLOCK T.T. LT.
R 72					
R 73					
R 74	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR LOCK
R 75	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR UNLOCK
R 76					
R 77					
R 78	1.1	24V	561707	FR JCT BOX	MASTER SWITCH WITH ALT. BOSCH
R 78	1.1	12V	562092	FR JCT BOX	MASTER SWITCH WITH ALT. DELCO
R 79					
R 80	11.1	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R 81					
R 82	21.1	24V	561707	FR JCT BOX	RETARDER WT
R 83					
R 84	8.1	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R 85	8.1	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R 86					
R 87	21.1	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R 88					
R 89	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 90	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 91	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 92	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 93	14.1	24V	561707	RR JCT BOX	PRE-HEAT WATER HEATER (WEBASTO)
R 94					
R 95					
R 96					
R 97					
R 98					
R 99	8.1	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 100	4.1	12V	561538	RR JCT BOX	GENERATOR SIGNAL
R 101					
R 102	12.1	12V	562092	UNDER DASH RH	DRIVER'S DOOR UNLOCK
R 103					
R 104	4.1	24V	561707	UNDER DASH RH	ANTI-THEFT
R 105	12.1	12V	562092	UNDER DASH RH	DRIVER'S & LUGGAGE DOOR LOCK
R 106	11.2	24V	562341	UNDER DASH RH	TIME DELAY RLY DRIVER'S LTS
R 2010	14.2	24V	561230	WEBASTO PRE-HEAT	WEBASTO
V IMN	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
V IMR	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-B/U SIGNAL
V IM1	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
V IM2	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
V IM3	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
V IM4	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 4 RETARD. ON SIGNAL
R A1	4.2	24V	561707	RR JCT BOX	EXCITING RELAY ALT. #1
R A2	4.2	24V	561707	RR JCT BOX	EXCITING RELAY ALT. #2
R A3	4.2	24V	561707	RR JCT BOX	RUN RELAY ALT. #1 OR ALT. #2
R A4	4.2	24V	561707	RR JCT BOX	RUN RELAY ALT.#1 AND ALT. #2

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION	No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R F1	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 1
R F2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2
R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY
R 1	1.1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R 2	2.1	24V	561991	BATT. CPT.	ENGINE RUN (12) FR & RR
R 3	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 4	4.1	24V	561005	BATT. CPT.	STARTING MOTOR
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.
R 6	9.3	24V	561707	RR JCT BOX	STOP LTS-PARKING BRAKE
R 7	5.1	24V	561707	FR JCT BOX	FAST IDLE
R 8	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS
R 10					
R 11					
R 12	7.1	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS
R 14	9.1	24V	561707	FR JCT BOX	BLINKER
R 15	9.1	24V	561707	FR JCT BOX	FR MARKER LTS
R 16	9.1	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R 17	9.1	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS
R 18	9.1	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-IN
R 19	9.1	24V	561707	FR JCT BOX	HEADLAMPS (HI)
R 20	9.1	24V	561707	FR JCT BOX	HEADLAMPS (LO)
R 21	9.2	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT
R 22					
R 23	9.2	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT
R 24	9.2	24V	561707	FR JCT BOX	R.H. CORNERING LT
R 25	9.2	24V	561707	FR JCT BOX	L.H. CORNERING LT
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS
R 27					
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R 29					
R 30					
R 31					
R 32					
R 33	4.1	12V	562092	FR JCT BOX	BLOWER CUT-IN RLY
R 33	9.1	24V	561707	FR JCT BOX	DAYTIME RUNNING LIGHT
R 34	15.1	24V	561707	RJB A/C JCT PANEL	A/C CONTROL
R 35	15.1	24V	561707	RJB A/C JCT PANEL	WATER PUMP
R 36	15.1	24V	561707	RJB A/C JCT PANEL	A/C COMPRESSOR CLUTCH
R 37					
R 38	15.1	24V	561707	RJB A/C JCT PANEL	A/C LIQ. SOL. VALVE
R 39	15.3	24V	561005	EVAP. CPT.	CONDENSER FAN MOTOR
R 40	15.3	24V	561014	EVAP. CPT.	CONDENSER SPEED CTR HI
R 41	15.3	24V	561005	EVAP. CPT.	CONDENSER SPEED CTR HI
R 42					
R 43					
R 44					
R 45					
R 46	20.1	12V	562092	FR JCT BOX	CAMERA DOOR
R 47					
R 48					
R 49	22.1	24V	561707	FR JCT BOX	ABS - SERVICE BRK RLY
R 50	15.3	24V	561005	EVAP.CPT.	EVAP. FAN 1ST SPEED
R 51	11.2	24V	561707	FR JCT BOX	DRIVER'S LTS
R 52	22.1	24V	561707	FR JCT BOX	ABS SYSTEM
R 53	1.1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR
R 54	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY RR
R 55	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY FR
R 56					
R 57	9.1	24V	561707	FR JCT BOX	DAY'S BLINKER
R 58					
R 59	9.3	24V	561707	RR JCT BOX	DOCKING LTS
R 60	15.3	24V	561707	EVAP. CPT.	EVAP. FAN SPEED #2

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 61	9.3	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL
R 62	5.1	24V	561707	FR JCT BOX	DDEC PARK BRAKE SIGNAL
R 63					
R 64	11.2	12V	562092	FR JCT BOX	ENTRANCE DOOR LTS
R 65	9.2	24V	561707	FR JCT BOX	CORNERING LTS CONTROL
R 66	9.2	24V	561707	FR JCT BOX	LOW DOCKING LTS -FR CORNERING
R 67	9.3	24V	561707	RR JCT BOX	LOW DOCKING LTS
R 68					
R 69	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR LOCK
R 70	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR UNLOCK
R 71	12.1	24V	561707	RR JCT BOX	LUGGAGE DOOR UNLOCK T.T. LT.
R 72					
R 73					
R 74	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR LOCK
R 75	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR UNLOCK
R 76					
R 77					
R 78	1.1	24V	561707	FR JCT BOX	MASTER SWITCH WITH ALT. BOSCH
R 78	1.1	12V	562092	FR JCT BOX	MASTER SWITCH WITH ALT. DELCO
R 79					
R 80	11.1	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R 81					
R 82	21.1	24V	561707	FR JCT BOX	RETARDER WT
R 83					
R 84	8.1	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R 85	8.1	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R 86					
R 87	21.1	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R 88					
R 89	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 90	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 91	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 92	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 93	14.1	24V	561707	RR JCT BOX	PRE-HEAT WATER HEATER (WEBASTO)
R 94					
R 95					
R 96					
R 97					
R 98					
R 99	8.1	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 100	4.1	12V	561538	RR JCT BOX	GENERATOR SIGNAL
R 101					
R 102	12.1	12V	562092	UNDER DASH RH	DRIVER'S DOOR UNLOCK
R 103					
R 104	4.1	12V	563054	UNDER DASH RH	ANTI-THEFT
R 105	12.1	12V	562092	UNDER DASH RH	DRIVER'S & LUGGAGE DOOR LOCK
R 106	11.2	24V	562341	UNDER DASH RH	TIME DELAY RLY DRIVER'S LTS
R 113	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 114	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 115	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 116	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 2010	14.2	24V	561230	WEBASTO PRE-HEAT	WEBASTO
V IMN	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
V IMR	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-B/U SIGNAL
V IM1	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
V IM2	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
V IM3	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
V IM4	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 4 RETARD. ON SIGNAL
R A1	4.2	24V	561707	RR JCT BOX	EXCITING RELAY ALT. #1
R A2	4.2	24V	561707	RR JCT BOX	EXCITING RELAY ALT. #2
R A3	4.2	24V	561707	RR JCT BOX	RUN RELAY ALT. #1 OR ALT. #2
R A4	4.2	24V	561707	RR JCT BOX	RUN RELAY ALT.#1 AND ALT. #2

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R F1	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 1
R F2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2
R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY
R 1	1.1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R 2	2.1	24V	561991	BATT. CPT.	ENGINE RUN (12) FR & RR
R 3	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 4	4.1	24V	561005	BATT. CPT.	STARTING MOTOR
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.
R 6	9.3	24V	561707	RR JCT BOX	STOP LTS-PARKING BRAKE
R 7	5.1	24V	561707	FR JCT BOX	FAST IDLE
R 8	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS
R 10					
R 11					
R 12	7.1	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS
R 14	9.1	24V	561707	FR JCT BOX	BLINKER
R 15	9.1	24V	561707	FR JCT BOX	FR MARKER LTS
R 16	9.1	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R 17	9.1	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS
R 18	9.1	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-IN
R 19	9.1	24V	561707	FR JCT BOX	HEADLAMPS (HI)
R 20	9.1	24V	561707	FR JCT BOX	HEADLAMPS (LO)
R 21	9.2	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT
R 22					
R 23	9.2	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT
R 24	9.2	24V	561707	FR JCT BOX	R.H. CORNERING LT
R 25	9.2	24V	561707	FR JCT BOX	L.H. CORNERING LT
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS
R 27					
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R 29					
R 30					
R 31					
R 32					
R 33	4.1	12V	562092	FR JCT BOX	BLOWER CUT-IN RLY
R 33	9.1	24V	561707	FR JCT BOX	DAYTIME RUNNING LIGHT
R 34	15.1	24V	561707	RJB A/C JCT PANEL	A/C CONTROL
R 35	15.1	24V	561707	RJB A/C JCT PANEL	WATER PUMP
R 36	15.1	24V	561707	RJB A/C JCT PANEL	A/C COMPRESSOR CLUTCH
R 37					
R 38	15.1	24V	561707	RJB A/C JCT PANEL	A/C LIQ. SOL. VALVE
R 39	15.3	24V	561005	EVAP. CPT.	CONDENSER FAN MOTOR
R 40	15.3	24V	561014	EVAP. CPT.	CONDENSER SPEED CTR HI
R 41	15.3	24V	561005	EVAP. CPT.	CONDENSER SPEED CTR HI
R 42					
R 43					
R 44					
R 45					
R 46	20.1	12V	562092	FR JCT BOX	CAMERA DOOR
R 47					
R 48					
R 49	22.1	24V	561707	FR JCT BOX	ABS - SERVICE BRK RLY
R 50	15.3	24V	561005	EVAP.CPT.	EVAP. FAN 1ST SPEED
R 51	11.2	24V	561707	FR JCT BOX	DRIVER'S LTS
R 52	22.1	24V	561707	FR JCT BOX	ABS SYSTEM
R 53	1.1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR
R 54	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY RR
R 55	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY FR
R 56					
R 57	9.1	24V	561707	FR JCT BOX	DAY'S BLINKER
R 58					
R 59	9.3	24V	561707	RR JCT BOX	DOCKING LTS
R 60	15.3	24V	561707	EVAP. CPT.	EVAP. FAN SPEED #2

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 61	9.3	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL
R 62	5.1	24V	561707	FR JCT BOX	DDEC PARK BRAKE SIGNAL
R 63	15.3	24V	560772	EVAP. CPT.	TIME DELAY EVAP. FAN
R 64	11.2	12V	562092	FR JCT BOX	ENTRANCE DOOR LTS
R 65	9.2	24V	561707	FR JCT BOX	CORNERING LTS CONTROL
R 66	9.2	24V	561707	FR JCT BOX	LOW DOCKING LTS -FR CORNERING
R 67	9.3	24V	561707	RR JCT BOX	LOW DOCKING LTS
R 68					
R 69	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR LOCK
R 70	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR UNLOCK
R 71	12.1	24V	561707	RR JCT BOX	LUGGAGE DOOR UNLOCK T.T. LT.
R 72					
R 73					
R 74	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR LOCK
R 75	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR UNLOCK
R 76					
R 77					
R 78	1.1	24V	561707	FR JCT BOX	MASTER SWITCH WITH ALT. BOSCH
R 78	1.1	12V	562092	FR JCT BOX	MASTER SWITCH WITH ALT. DELCO
R 79					
R 80	11.1	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R 81					
R 82	21.1	24V	561707	FR JCT BOX	RETARDER WT
R 83					
R 84	8.1	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R 85	8.1	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R 86					
R 87	21.1	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R 88					
R 89	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 90	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 91	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 92	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 93	14.1	24V	561707	RR JCT BOX	PRE-HEAT WATER HEATER (WEBASTO)
R 94					
R 95					
R 96					
R 97					
R 98					
R 99	8.1	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 100	4.1	12V	561538	RR JCT BOX	GENERATOR SIGNAL
R 101					
R 102	12.1	12V	562092	UNDER DASH RH	DRIVER'S DOOR UNLOCK
R 103					
R 104	4.1	12V	563054	UNDER DASH RH	ANTI-THEFT
R 105	12.1	12V	562092	UNDER DASH RH	DRIVER'S & LUGGAGE DOOR LOCK
R 106	11.2	24V	562341	UNDER DASH RH	TIME DELAY RLY DRIVER'S LTS
R 113	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 114	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 115	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 116	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 2010	14.2	24V	561230	WEBASTO PRE-HEAT	WEBASTO
V IMN	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
V IMR	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-B/U SIGNAL
V IM1	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
V IM2	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
V IM3	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
V IM4	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 4 RETARD. ON SIGNAL
R A1	4.2	24V	561707	RR JCT BOX	EXCITING RELAY ALT. #1
R A2	4.2	24V	561707	RR JCT BOX	EXCITING RELAY ALT. #2
R A3	4.2	24V	561707	RR JCT BOX	RUN RELAY ALT. #1 OR ALT. #2
R A4	4.2	24V	561707	RR JCT BOX	RUN RELAY ALT.#1 AND ALT. #2

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R F1	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 1
R F2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2
R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY
R 1	1.1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R 2	2.1	24V	561991	BATT. CPT.	ENGINE RUN (12) FR & RR
R 3	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 4	4.1	24V	561005	BATT. CPT.	STARTING MOTOR
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.
R 6	9.3	24V	561707	RR JCT BOX	STOP LTS-PARKING BRAKE
R 7	5.1	24V	561707	FR JCT BOX	FAST IDLE
R 8	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS
R 10					
R 11					
R 12	7.1	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS
R 14	9.1	24V	561707	FR JCT BOX	BLINKER
R 15	9.1	24V	561707	FR JCT BOX	FR MARKER LTS
R 16	9.1	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R 17	9.1	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS
R 18	9.1	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-IN
R 19	9.1	24V	561707	FR JCT BOX	HEADLAMPS (HI)
R 20	9.1	24V	561707	FR JCT BOX	HEADLAMPS (LO)
R 21	9.2	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT
R 22					
R 23	9.2	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT
R 24	9.2	24V	561707	FR JCT BOX	R.H. CORNERING LT
R 25	9.2	24V	561707	FR JCT BOX	L.H. CORNERING LT
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS
R 27					
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R 29					
R 30					
R 31					
R 32					
R 33	4.1	12V	562092	FR JCT BOX	BLOWER CUT-IN RLY
R 33	9.1	24V	561707	FR JCT BOX	DAYTIME RUNNING LIGHT
R 34	15.1	24V	561707	RJB A/C JCT PANEL	A/C CONTROL
R 35	15.1	24V	561707	RJB A/C JCT PANEL	WATER PUMP
R 36	15.1	24V	561707	RJB A/C JCT PANEL	A/C COMPRESSOR CLUTCH
R 37					
R 38	15.1	24V	561707	RJB A/C JCT PANEL	A/C LIQ. SOL. VALVE
R 39	15.3	24V	561005	EVAP. CPT.	CONDENSER FAN MOTOR
R 40	15.3	24V	561014	EVAP. CPT.	CONDENSER SPEED CTR HI
R 41	15.3	24V	561005	EVAP. CPT.	CONDENSER SPEED CTR HI
R 42					
R 43					
R 44					
R 45					
R 46	20.1	12V	562092	FR JCT BOX	CAMERA DOOR
R 47					
R 48					
R 49	22.1	24V	561707	FR JCT BOX	ABS - SERVICE BRK RLY
R 50	15.3	24V	561005	EVAP.CPT.	EVAP. FAN 1ST SPEED
R 51	11.2	24V	561707	FR JCT BOX	DRIVER'S LTS
R 52	22.1	24V	561707	FR JCT BOX	ABS SYSTEM
R 53	1.1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR
R 54	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY RR
R 55	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY FR
R 56					
R 57	9.1	24V	561707	FR JCT BOX	DAY'S BLINKER
R 58					
R 59	9.3	24V	561707	RR JCT BOX	DOCKING LTS
R 60	15.3	24V	561707	EVAP. CPT.	EVAP. FAN SPEED #2

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 61	9.3	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL
R 62	5.1	24V	561707	FR JCT BOX	DDEC PARK BRAKE SIGNAL
R 63	15.3	24V	560772	EVAP. CPT.	TIME DELAY EVAP. FAN
R 64	11.2	12V	562092	FR JCT BOX	ENTRANCE DOOR LTS
R 65	9.2	24V	561707	FR JCT BOX	CORNERING LTS CONTROL
R 66	9.2	24V	561707	FR JCT BOX	LOW DOCKING LTS -FR CORNERING
R 67	9.3	24V	561707	RR JCT BOX	LOW DOCKING LTS
R 68					
R 69	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR LOCK
R 70	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR UNLOCK
R 71	12.1	24V	561707	RR JCT BOX	LUGGAGE DOOR UNLOCK T.T. LT.
R 72					
R 73					
R 74	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR LOCK
R 75	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR UNLOCK
R 76					
R 77					
R 78	1.1	24V	561707	FR JCT BOX	MASTER SWITCH WITH ALT. BOSCH
R 78	1.1	12V	562092	FR JCT BOX	MASTER SWITCH WITH ALT. DELCO
R 79					
R 80	11.1	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R 81					
R 82	21.1	24V	561707	FR JCT BOX	RETARDER WT
R 83					
R 84	8.1	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R 85	8.1	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R 86					
R 87	21.1	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R 88					
R 89					
R 90					
R 91					
R 92					
R 93					
R 94					
R 95					
R 96					
R 97					
R 98					
R 99	8.1	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 100	4.1	12V	561538	RR JCT BOX	GENERATOR SIGNAL
R 101					
R 102	12.1	12V	562092	UNDER DASH RH	DRIVER'S DOOR UNLOCK
R 103					
R 104	4.1	12V	563054	UNDER DASH RH	ANTI-THEFT
R 105	12.1	12V	562092	UNDER DASH RH	DRIVER'S & LUGGAGE DOOR LOCK
R 106	11.2	24V	562341	UNDER DASH RH	TIME DELAY RLY DRIVER'S LTS
R 113	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 114	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 115	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 116	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 2010	14.2	24V	561230	WEBASTO PRE-HEAT	WEBASTO
V IMN	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
V IMR	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-B/U SIGNAL
V IM1	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
V IM2	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
V IM3	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
V IM4	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 4 RETARD. ON SIGNAL
R A1	4.2	24V	561707	RR JCT BOX	EXCITING RELAY ALT. #1
R A2	4.2	24V	561707	RR JCT BOX	EXCITING RELAY ALT. #2
R A3	4.2	24V	561707	RR JCT BOX	RUN RELAY ALT. #1 OR ALT. #2
R A4	4.2	24V	561707	RR JCT BOX	RUN RELAY ALT.#1 AND ALT. #2

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R F1	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 1
R F2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2
R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY
R 1	1.1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R 2	2.1	24V	561991	BATT. CPT.	ENGINE RUN (12) FR & RR
R 3	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 4	4.1	24V	561005	BATT. CPT.	STARTING MOTOR
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.
R 6	9.3	24V	561707	RR JCT BOX	STOP LTS-PARKING BRAKE
R 7	5.1	24V	561707	FR JCT BOX	FAST IDLE
R 8	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS
R 10					
R 11					
R 12	7.1	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS
R 14	9.1	24V	561707	FR JCT BOX	BLINKER
R 15	9.1	24V	561707	FR JCT BOX	FR MARKER LTS
R 16	9.1	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R 17	9.1	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS
R 18	9.1	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-IN
R 19	9.1	24V	561707	FR JCT BOX	HEADLAMPS (HI)
R 20	9.1	24V	561707	FR JCT BOX	HEADLAMPS (LO)
R 21	9.2	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT
R 22					
R 23	9.2	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT
R 24	9.2	24V	561707	FR JCT BOX	R.H. CORNERING LT
R 25	9.2	24V	561707	FR JCT BOX	L.H. CORNERING LT
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS
R 27					
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R 29					
R 30					
R 31					
R 32					
R 33	4.1	12V	562092	FR JCT BOX	BLOWER CUT-IN RLY
R 33	9.1	24V	561707	FR JCT BOX	DAYTIME RUNNING LIGHT
R 34	15.1	24V	561707	RJB A/C JCT PANEL	A/C CONTROL
R 35	15.1	24V	561707	RJB A/C JCT PANEL	WATER PUMP
R 36	15.1	24V	561707	RJB A/C JCT PANEL	A/C COMPRESSOR CLUTCH
R 37					
R 38	15.1	24V	561707	RJB A/C JCT PANEL	A/C LIQ. SOL. VALVE
R 39	15.3	24V	561005	EVAP. CPT.	CONDENSER FAN MOTOR
R 40	15.3	24V	561014	EVAP. CPT.	CONDENSER SPEED CTR HI
R 41	15.3	24V	561005	EVAP. CPT.	CONDENSER SPEED CTR HI
R 42					
R 43					
R 44					
R 45					
R 46	20.1	12V	562092	FR JCT BOX	CAMERA DOOR
R 47					
R 48					
R 49	22.1	12V	562092	FR JCT BOX	ABS - SERVICE BRK RLY
R 50	15.3	24V	561005	EVAP.CPT.	EVAP. FAN 1ST SPEED
R 51	11.2	24V	561707	FR JCT BOX	DRIVER'S LTS
R 52	22.1	12V	562092	FR JCT BOX	ABS SYSTEM
R 53	1.1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR
R 54	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY RR
R 55	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY FR
R 56					
R 57	9.1	24V	561707	FR JCT BOX	DAY'S BLINKER
R 58					
R 59	9.3	24V	561707	RR JCT BOX	DOCKING LTS
R 60	15.3	24V	561707	EVAP. CPT.	EVAP. FAN SPEED #2

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 61	9.3	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL
R 62	5.1	24V	561707	FR JCT BOX	DDEC PARK BRAKE SIGNAL
R 63	15.3	24V	560772	EVAP. CPT.	TIME DELAY EVAP. FAN
R 64	11.2	12V	562092	FR JCT BOX	ENTRANCE DOOR LTS
R 65	9.2	24V	561707	FR JCT BOX	CORNERING LTS CONTROL
R 66	9.2	24V	561707	FR JCT BOX	LOW DOCKING LTS -FR CORNERING
R 67	9.3	24V	561707	RR JCT BOX	LOW DOCKING LTS
R 68					
R 69	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR LOCK
R 70	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR UNLOCK
R 71	12.1	24V	561707	RR JCT BOX	LUGGAGE DOOR UNLOCK T.T. LT.
R 72					
R 73					
R 74	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR LOCK
R 75	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR UNLOCK
R 76					
R 77					
R 78	1.1	24V	561707	FR JCT BOX	MASTER SWITCH WITH ALT. BOSCH
R 78	1.1	12V	562092	FR JCT BOX	MASTER SWITCH WITH ALT. DELCO
R 79					
R 80	11.1	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R 81					
R 82	21.1	24V	561707	FR JCT BOX	RETARDER WT
R 83					
R 84	8.1	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R 85	8.1	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R 86					
R 87	21.1	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R 88					
R 89					
R 90					
R 91					
R 92					
R 93					
R 94					
R 95					
R 96					
R 97					
R 98					
R 99	8.1	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 100	4.1	12V	561538	RR JCT BOX	GENERATOR SIGNAL
R 101					
R 102	12.1	12V	562092	UNDER DASH RH	DRIVER'S DOOR UNLOCK
R 103					
R 104	4.1	12V	563054	UNDER DASH RH	ANTI-THEFT
R 105	12.1	12V	562092	UNDER DASH RH	DRIVER'S & LUGGAGE DOOR LOCK
R 106	11.2	24V	562341	UNDER DASH RH	TIME DELAY RLY DRIVER'S LTS
R 113	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 114	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 115	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 116	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 2010	14.2	24V	561230	WEBASTO PRE-HEAT	WEBASTO
V IMN	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
V IMR	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-B/U SIGNAL
V IM1	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
V IM2	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
V IM3	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
V IM4	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 4 RETARD. ON SIGNAL
R A1	4.2	24V	561707	RR JCT BOX	EXCITING RELAY ALT. #1
R A2	4.2	24V	561707	RR JCT BOX	EXCITING RELAY ALT. #2
R A3	4.2	24V	561707	RR JCT BOX	RUN RELAY ALT. #1 OR ALT. #2
R A4	4.2	24V	561707	RR JCT BOX	RUN RELAY ALT.#1 AND ALT. #2

RELAYS NUMBER CODE

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

No.	PAGE COIL V	#PREV.	LOCATION	FUNCTION

RESISTORS NUMBER CODE

No.	PAGE	OHM(S)	#PREV.	LOCATION	FUNCTION
RS 1	5.1	11 K	561898	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 2	5.1	3.6 K	561897	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 3	9.3	1 (2)	561537	FR JCT BOX	FOG LT - RH
RS 4	9.3	1 (2)	561537	FR JCT BOX	FOG LT - LH
RS 5	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - LH
RS 6					
RS 7	9.3	.82 (2)	060806	RR JCT BOX	PARKING BRAKE STOP LTS
RS 8	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - RH
RS 9	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - RH
RS 10	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - LH
RS 11					
RS 12					
RS 13					
RS 14					
RS 15	9.2	1 (3)	062925	FR JCT BOX	LO DOCKING LT - FRONT
RS 16	9.3	1 (3)	062925	RR JCT BOX	LO DOCKING LT - REAR
RS 17	7.1	220	562498	FR JCT BOX	FIRE ALARM
RS 18	8.1	75 K	064208	RR JCT BOX	FAN CLUTCH W/RETARDER
RS 19					
RS 20	17.1	1 K	562470	RR JCT BOX	WORLD TR. SPEED TO DDEC III
RS 21					
RS 22	13.1	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 23					
RS 24	9.1	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 25	9.3	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 26	10.1	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 27					
RS 28	14.1	1K	562470	DASH	DIVIDER VOLTAGE FOR LED

RESISTORS NUMBER CODE

No.	PAGE	OHM(S)	#PREV.	LOCATION	FUNCTION
RS 1	5.1	11 K	561898	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 2	5.1	3.6 K	561897	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 3	9.3	1 (2)	561537	FR JCT BOX	FOG LT - RH
RS 4	9.3	1 (2)	561537	FR JCT BOX	FOG LT - LH
RS 5	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - LH
RS 6					
RS 7	9.3	.82 (2)	060806	RR JCT BOX	PARKING BRAKE STOP LTS
RS 8	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - RH
RS 9	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - RH
RS 10	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - LH
RS 11					
RS 12					
RS 13					
RS 14					
RS 15	9.2	1 (3)	062925	FR JCT BOX	LO DOCKING LT - FRONT
RS 16	9.3	1 (3)	062925	RR JCT BOX	LO DOCKING LT - REAR
RS 17	7.1	220	562498	FR JCT BOX	FIRE ALARM
RS 18	8.1	75 K	064208	RR JCT BOX	FAN CLUTCH W/RETARDER
RS 19					
RS 20	17.1	1 K	562470	RR JCT BOX	WORLD TR. SPEED TO DDEC III
RS 21					
RS 22	13.1	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 23					
RS 24	9.1	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 25	9.3	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 26	10.1	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 27					
RS 28	14.1	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 36	15.1	10	064907	BATT. COMPT.	CURRENT LIMITER FOR RELAY
RS 37	15.1	5	064907	BATT. COMPT.	CURRENT LIMITER FOR RELAY

RESISTORS NUMBER CODE

No.	PAGE	OHM(S)	#PREV.	LOCATION	FUNCTION
RS 1	5.1	11 K	561898	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 2	5.1	3.6 K	561897	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 3	9.3	1 (2)	561537	FR JCT BOX	FOG LT - RH
RS 4	9.3	1 (2)	561537	FR JCT BOX	FOG LT - LH
RS 5	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - LH
RS 6					
RS 7	9.3	.82 (2)	060806	RR JCT BOX	PARKING BRAKE STOP LTS
RS 8	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - RH
RS 9	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - RH
RS 10	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - LH
RS 11					
RS 12					
RS 13					
RS 14	21.1	1K	562470	FR. SERV. CPT.	ABS
RS 15	9.2	1 (3)	062925	FR JCT BOX	LO DOCKING LT - FRONT
RS 16	9.3	1 (3)	062925	RR JCT BOX	LO DOCKING LT - REAR
RS 17	7.1	220	562498	FR JCT BOX	FIRE ALARM
RS 18	8.1	75 K	064208	RR JCT BOX	FAN CLUTCH W/RETARDER
RS 19					
RS 20	17.1	1 K	562470	RR JCT BOX	WORLD TR. SPEED TO DDEC III
RS 21					
RS 22	13.1	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 23					
RS 24	9.1	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 25	9.3	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 26	10.1	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 27					
RS 28	14.1	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 36	15.1	10	064907	BATT. COMPT.	CURRENT LIMITER FOR RELAY
RS 37	15.1	5	064907	BATT. COMPT.	CURRENT LIMITER FOR RELAY

RESISTORS NUMBER CODE

No.	PAGE	OHM(S)	#PREV.	LOCATION	FUNCTION
RS 1	5.1	11 K	561898	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 2	5.1	3.6 K	561897	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 3	9.3	1 (2)	561537	FR JCT BOX	FOG LT - RH
RS 4	9.3	1 (2)	561537	FR JCT BOX	FOG LT - LH
RS 5	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - LH
RS 6					
RS 7	9.3	.82 (2)	060806	RR JCT BOX	PARKING BRAKE STOP LTS
RS 8	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - RH
RS 9	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - RH
RS 10	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - LH
RS 11					
RS 12					
RS 13					
RS 14	21.1	1K	562470	FR. SERV. CPT.	ABS
RS 15	9.2	1 (3)	062925	FR JCT BOX	LO DOCKING LT - FRONT
RS 16	9.3	1 (3)	062925	RR JCT BOX	LO DOCKING LT - REAR
RS 17	7.1	220	562498	FR JCT BOX	FIRE ALARM
RS 18	8.1	75 K	064208	RR JCT BOX	FAN CLUTCH W/RETARDER
RS 19	15.3	30K	065613	EVAP. CPT.	TIME DELAY RELAY EVAP. FAN
RS 20	17.1	1 K	562470	RR JCT BOX	WORLD TR. SPEED TO DDEC III
RS 21					
RS 22	13.1	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 23					
RS 24	9.1	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 25	9.3	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 26	10.1	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 27					
RS 28	14.1	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 36	15.1	10	064907	BATT. COMPT.	CURRENT LIMITER FOR RELAY
RS 37	15.1	5	064907	BATT. COMPT.	CURRENT LIMITER FOR RELAY

RESISTORS NUMBER CODE

No.	PAGE	OHM(S)	#PREV.	LOCATION	FUNCTION
RS 1	5.1	11 K	561898	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 2	5.1	3.6 K	561897	FR JCT BOX	FAST IDLE DDEC CONTROL
RS 3	9.3	1 (2)	561537	FR JCT BOX	FOG LT - RH
RS 4	9.3	1 (2)	561537	FR JCT BOX	FOG LT - LH
RS 5	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - LH
RS 6					
RS 7	9.3	.82 (2)	060806	RR JCT BOX	PARKING BRAKE STOP LTS
RS 8	9.2	1 (2)	061976	FR JCT BOX	CORNERING LT - RH
RS 9	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - RH
RS 10	9.3	1 (2)	061976	RR JCT BOX	DOCKING LT - LH
RS 11					
RS 12					
RS 13					
RS 14					
RS 15	9.2	1 (3)	062925	FR JCT BOX	LO DOCKING LT - FRONT
RS 16	9.3	1 (3)	062925	RR JCT BOX	LO DOCKING LT - REAR
RS 17	7.1	220	562498	FR JCT BOX	FIRE ALARM
RS 18	8.1	75 K	064208	RR JCT BOX	FAN CLUTCH W/RETARDER
RS 19	15.3	30K	065613	EVAP. CPT.	TIME DELAY RELAY EVAP. FAN
RS 20	17.1	1 K	562470	RR JCT BOX	WORLD TR. SPEED TO DDEC III
RS 21					
RS 22	13.1	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 23					
RS 24	9.1	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 25	9.3	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 26	10.1	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 27					
RS 28	14.1	1K	562470	DASH	DIVIDER VOLTAGE FOR LED
RS 36	15.1	10	064907	BATT. COMPT.	CURRENT LIMITER FOR RELAY
RS 37	15.1	5	064907	BATT. COMPT.	CURRENT LIMITER FOR RELAY
RS 38	22.1	620	563205	FR. SERV. COMPT	ABS
RS 39	22.1	620	563205	FR. SERV. COMPT	TRAILER ABS

WIRING DIAGRAM KEYS




WIRE CROSSING


WIRE SOLDERING JOINT

SHIELDED WIRES

TWISTED WIRES

STUD TERMINAL

JUNCTION BLOCK

DUMMY




CHASSIS GROUND

ACCESSORY CHASSIS GROUND



ILLUMINATING LAMP

FLUORESCENT LAMP





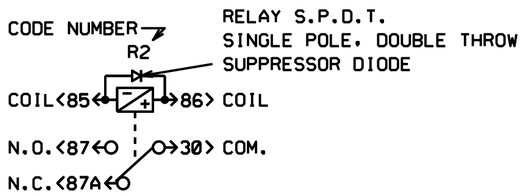

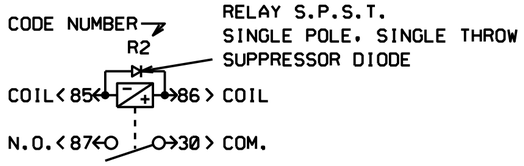

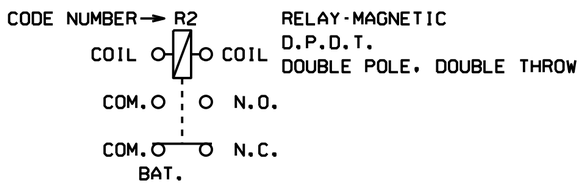

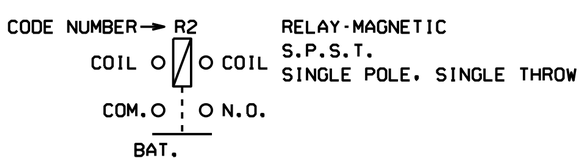






PRESSURE SWITCH N.C.


PRESSURE SWITCH N.O.

SWITCH MOMENTARY CONTACT


SWITCH PUSH BUTTON




110V EXTERIOR PLUG RECEPTACLE


ELECTRIC HORN

THERMOSTAT


HEATER

SOLENOID VALVE


FR. JCT BOX - JUNCTION BLOCK

RR. JCT BOX - JUNCTION BLOCK


BAT. JCT PANEL - JUNCTION BLOCK

BLK	BLACK
YEL	YELLOW
RED	RED
WH	WHITE
GRY	GREY
ORA	ORANGE
BLU	BLUE
GRN	GREEN
BRN	BROWN
PUR	PURPLE
PK	PINK

WIRING DIAGRAM KEYS




WIRE CROSSING


WIRE SOLDERING JOINT

SHIELDED WIRES

TWISTED WIRES

STUD TERMINAL

JUNCTION BLOCK

DUMMY




CHASSIS GROUND

ACCESSORY CHASSIS GROUND



ILLUMINATING LAMP

FLUORESCENT LAMP





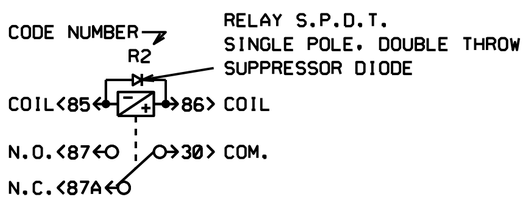

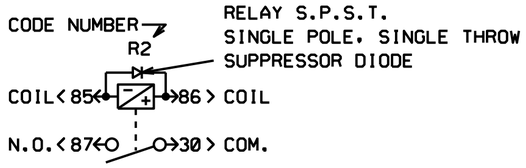

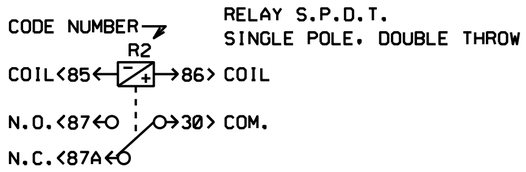

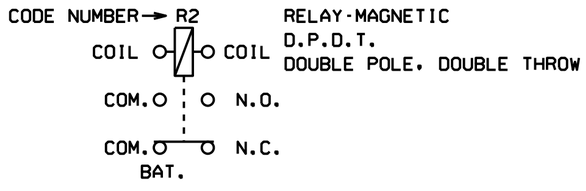

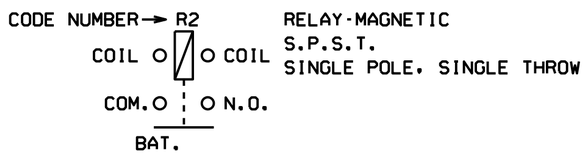



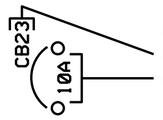




PRESSURE SWITCH N.C.


PRESSURE SWITCH N.O.

SWITCH MOMENTARY CONTACT


SWITCH PUSH BUTTON




110V EXTERIOR PLUG RECEPTACLE


ELECTRIC HORN

THERMOSTAT


HEATER

SOLENOID VALVE

FR. JCT BOX - JUNCTION BLOCK

RR. JCT BOX - JUNCTION BLOCK

BAT. JCT PANEL - JUNCTION BLOCK

BLK	BLACK
YEL	YELLOW
RED	RED
WH	WHITE
GRY	GREY
ORA	ORANGE
BLU	BLUE
GRN	GREEN
BRN	BROWN
PUR	PURPLE
PK	PINK

WIRING DIAGRAM KEYS




WIRE CROSSING


WIRE SOLDERING JOINT

SHIELDED WIRES

TWISTED WIRES

STUD TERMINAL

JUNCTION BLOCK

DUMMY




CHASSIS GROUND

ACCESSORY CHASSIS GROUND

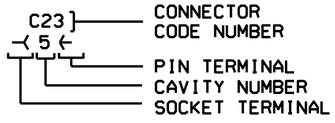

L.E.D.

ILLUMINATING LAMP

FLUORESCENT LAMP





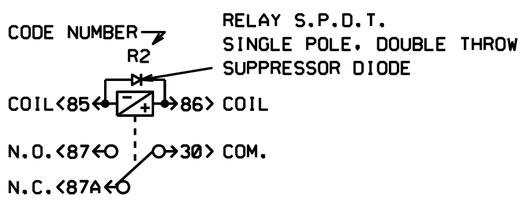

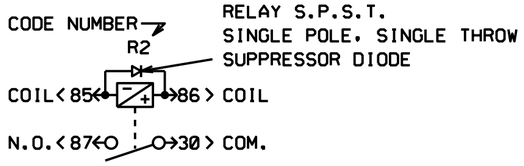

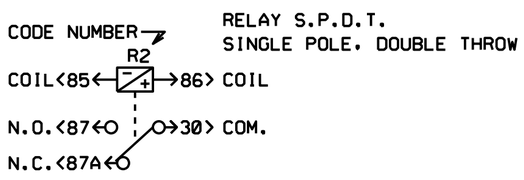

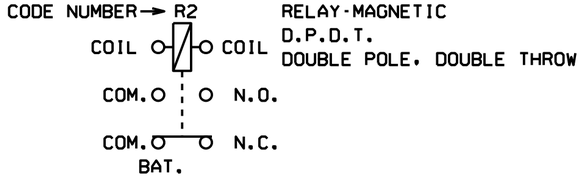

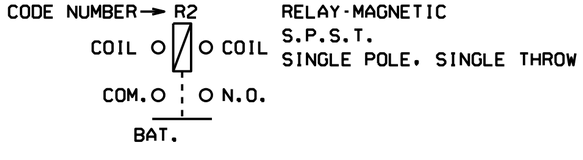



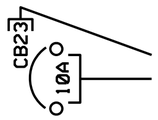


PRESSURE SWITCH N.C.


PRESSURE SWITCH N.O.

SWITCH MOMENTARY CONTACT


SWITCH PUSH BUTTON





110V EXTERIOR PLUG RECEPTACLE


ELECTRIC HORN

THERMOSTAT


HEATER

SOLENOID VALVE

FR. JCT BOX - JUNCTION BLOCK

RR. JCT BOX - JUNCTION BLOCK

BAT. JCT PANEL - JUNCTION BLOCK

BLK	BLACK
YEL	YELLOW
RED	RED
WH	WHITE
GRY	GREY
ORA	ORANGE
BLU	BLUE
GRN	GREEN
BRN	BROWN
PUR	PURPLE
PK	PINK

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V BATTERY
F 2	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V IGNITION
F 3	7.2	20A	562605	FR. JCT. BOX	ELECTRICAL HORNS
F 4	7.2	5A	562259	FR. JCT. BOX	FIRE ALARM
F 5	8.1	10A	562407	RR. JCT. BOX	AIR DRYER
F 6	5.1	5A	562602	FR. JCT. BOX	CRUISE DECEL SW.
F 7	8.1	5A	562602	FR. JCT. BOX	PARKING BRAKE PRESSURE SW.
F 8	9.2	10A	562407	FR. JCT. BOX	CORNERING LTS
F 9	9.3	15A	562604	RR. JCT. BOX	DOCKING LTS
F 10	9.3	15A	562604	FR. JCT. BOX	FOG LTS
F 11	11.1	5A	562259	FR. JCT. BOX	FRONT SERVICE CPT LTS
F 12					
F 13					
F 14	11.2	15A	562602	FR. JCT. BOX	DRIVER'S LTS
F 15					
F 16					
F 17					
F 18					
F 19					
F 20					
F 21	14.2	10A	560061	RR. JCT. BOX	FUEL PRIME PUMP
F 22	19.1	10A	562407	FR. JCT. BOX	POWER 12V OUTLET
F 23	19.1	15A	562604	FR. JCT. BOX	DRIVER'S WINDOW LIFTER
F 24	19.1	15A	562407	FR. JCT. BOX	CIGAR LIGHTER
F 25	19.1	3A	562599	FR. JCT. BOX	SUN VISOR
F 26	14.1	5A	562259	FR. JCT. BOX	WATER HTR TIMER
F 27					
F 28					
F 29					
F 30					
F 31					
F 32					
F 33					
F 34					
F 35					
F 36					
F 37					
F 38					
F 39					
F 40	13.1	20A	562605	FR. JCT. BOX	HEATED WINDSCHIELD LH
F 41	13.1	20A	562605	FR. JCT. BOX	HEATED WINDSCHIELD RH
F 42					
F 43					
F 44					
F 45					
F 46	16.1	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 24V SPARTAN
F 47	16.2 16.3	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 12V RAMCO
F 48					
F 49	14.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER
F 50	14.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 51					
F 52					
F 53	20.1	3A	560893	RR. JCT. BOX	BACK-UP MONITOR DOOR SOLENOID
F 54					
F 55	20.1	7.5A	562602	RR. JCT. BOX	BACK-UP MONITOR CAMERA HEATER
F 56	20.1	7.5A	562602	RR. JCT. BOX	BACK-UP MONITOR CAMERA
F 57	4.1	1A	560893	RR. JCT. BOX	GENERATOR RUN RELAY

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V BATTERY
F 2	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V IGNITION
F 3	7.2	20A	562605	FR. JCT. BOX	ELECTRICAL HORNS
F 4	7.2	5A	562259	FR. JCT. BOX	FIRE ALARM
F 5	8.1	10A	562407	RR. JCT. BOX	AIR DRYER
F 6	5.1	5A	562602	FR. JCT. BOX	CRUISE DECEL SW.
F 7	8.1	5A	562602	FR. JCT. BOX	PARKING BRAKE PRESSURE SW.
F 8	9.2	10A	562407	FR. JCT. BOX	CORNERING LTS
F 9	9.3	15A	562604	RR. JCT. BOX	DOCKING LTS
F 10	9.3	15A	562604	FR. JCT. BOX	FOG LTS
F 11	11.1	5A	562259	FR. JCT. BOX	FRONT SERVICE CPT LTS
F 12					
F 13					
F 14	11.2	15A	562602	FR. JCT. BOX	DRIVER'S LTS
F 15					
F 16					
F 17					
F 18					
F 19					
F 20					
F 21	14.2	10A	560061	RR. JCT. BOX	FUEL PRIME PUMP
F 22	19.1	10A	562407	FR. JCT. BOX	POWER 12V OUTLET
F 23	19.1	15A	562604	FR. JCT. BOX	DRIVER'S WINDOW LIFTER
F 24	19.1	15A	562407	FR. JCT. BOX	CIGAR LIGHTER
F 25	19.1	3A	562599	FR. JCT. BOX	SUN VISOR
F 26	14.1	5A	562259	FR. JCT. BOX	WATER HTR TIMER
F 27					
F 28					
F 29	15.3	15A	562604	FR. JCT BOX	AUX. A/C UNIT
F 30					
F 31					
F 32					
F 33					
F 34					
F 35					
F 36					
F 37					
F 38					
F 39					
F 40	13.1	20A	562605	FR. JCT. BOX	HEATED WINDSCHIELD LH
F 41	13.1	20A	562605	FR. JCT. BOX	HEATED WINDSCHIELD RH
F 42					
F 43					
F 44					
F 45					
F 46	16.1	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 24V SPARTAN
F 47	16.2 16.3	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 12V RAMCO
F 48					
F 49	14.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER
F 50	14.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 51					
F 52					
F 53	20.1	3A	560893	RR. JCT. BOX	BACK-UP MONITOR DOOR SOLENOID
F 54					
F 55	20.1	7.5A	562602	RR. JCT. BOX	BACK-UP MONITOR CAMERA HEATER
F 56	20.1	7.5A	562602	RR. JCT. BOX	BACK-UP MONITOR CAMERA
F 57	4.1	1A	560893	RR. JCT. BOX	GENERATOR RUN RELAY

No	PAGE	AMP.	#PREV	LOCATION	FUNCTION

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V BATTERY
F 2	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V IGNITION
F 3	7.2	20A	562605	FR. JCT. BOX	ELECTRICAL HORNS
F 4	7.2	5A	562259	FR. JCT. BOX	FIRE ALARM
F 5	8.1	10A	562407	RR. JCT. BOX	AIR DRYER
F 6	5.1	5A	562602	FR. JCT. BOX	CRUISE DECEL SW.
F 7	8.1	5A	562602	FR. JCT. BOX	PARKING BRAKE PRESSURE SW.
F 8	9.2	10A	562407	FR. JCT. BOX	CORNERING LTS
F 9	9.3	15A	562604	RR. JCT. BOX	DOCKING LTS
F 10	9.3	15A	562604	FR. JCT. BOX	FOG LTS
F 11	11.1	5A	562259	FR. JCT. BOX	FRONT SERVICE CPT LTS
F 12					
F 13					
F 14	11.2	7.5A	562602	FR. JCT. BOX	DRIVER'S LTS
F 15					
F 16					
F 17					
F 18					
F 19					
F 20					
F 21	14.2	10A	560061	RR. JCT. BOX	FUEL PRIME PUMP
F 22	19.1	10A	562407	FR. JCT. BOX	POWER 12V OUTLET
F 23	19.1	15A	562604	FR. JCT. BOX	DRIVER'S WINDOW LIFTER
F 24	19.1	15A	562407	FR. JCT. BOX	CIGAR LIGHTER
F 25	19.1	3 A	562599	FR. JCT. BOX	SUN VISOR
F 26	14.1	7.5A	562259	FR. JCT. BOX	WATER HTR TIMER
F 27					
F 28					
F 29	15.3	15A	562604	FR. JCT BOX	AUX. A/C UNIT
F 30					
F 31					
F 32					
F 33					
F 34					
F 35					
F 36					
F 37					
F 38					
F 39					
F 40	13.1	20A	562605	FR. JCT. BOX	HEATED WINDSCHIELD LH
F 41	13.1	20A	562605	FR. JCT. BOX	HEATED WINDSCHIELD RH
F 42					
F 43	1.2	3A	562599	BATT.CPT	12V SIGNAL TO BATT. MONITOR
F 44	1.2	3A	562599	BATT.CPT	24V SIGNAL TO BATT. MONITOR
F 45					
F 46	16.1	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 24V SPARTAN
F 47	16.2 16.3	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 12V RAMCO
F 48					
F 49	14.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER
F 50	14.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 51					
F 52					
F 53	20.1	3A	560893	RR. JCT. BOX	BACK-UP MONITOR DOOR SOLENOID
F 54					
F 55	20.1	7.5A	562602	RR. JCT. BOX	BACK-UP MONITOR CAMERA HEATER
F 56	20.1	7.5A	562602	RR. JCT. BOX	BACK-UP MONITOR CAMERA
F 57	4.1	1A	560893	RR. JCT. BOX	GENERATOR RUN RELAY

No	PAGE	AMP.	#PREV	LOCATION	FUNCTION

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V BATTERY
F 2	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V IGNITION
F 3	7.2	20A	562605	FR. JCT. BOX	ELECTRICAL HORNS
F 4	7.2	5A	562259	FR. JCT. BOX	FIRE ALARM
F 5	8.1	10A	562407	RR. JCT. BOX	AIR DRYER
F 6	5.1	5A	562602	FR. JCT. BOX	CRUISE DECEL SW.
F 7	8.1	5A	562602	FR. JCT. BOX	PARKING BRAKE PRESSURE SW.
F 8	9.2	10A	562407	FR. JCT. BOX	CORNERING LTS
F 9	9.3	15A	562604	RR. JCT. BOX	DOCKING LTS
F 10	9.3	15A	562604	FR. JCT. BOX	FOG LTS
F 11	11.1	5A	562259	FR. JCT. BOX	FRONT SERVICE CPT LTS
F 12	17.1	3A	560893	FR. JCT. BOX	STEERING CONTROL
F 13					
F 14	11.2	15A	562602	FR. JCT. BOX	DRIVER'S LTS
F 15					
F 16					
F 17					
F 18					
F 19					
F 20					
F 21	14.2	10A	560061	RR. JCT. BOX	FUEL PRIME PUMP
F 22	19.1	10A	562407	FR. JCT. BOX	POWER 12V OUTLET
F 23	19.1	15A	562604	FR. JCT. BOX	DRIVER'S WINDOW LIFTER
F 24	19.1	15A	562407	FR. JCT. BOX	CIGAR LIGHTER
F 25	19.1	3 A	562599	FR. JCT. BOX	SUN VISOR
F 26	14.1	7.5A	562259	FR. JCT. BOX	WATER HTR TIMER
F 27					
F 28					
F 29	15.3	15A	562604	FR. JCT BOX	AUX. A/C UNIT
F 30					
F 31					
F 32					
F 33					
F 34					
F 35					
F 36					
F 37					
F 38					
F 39					
F 40	13.1	20A	562605	FR. JCT. BOX	HEATED WINDSCHIELD LH
F 41	13.1	20A	562605	FR. JCT. BOX	HEATED WINDSCHIELD RH
F 42					
F 43	1.2	3A	562599	BATT.CPT	12V SIGNAL TO BATT. MONITOR
F 44	1.2	3A	562599	BATT.CPT	24V SIGNAL TO BATT. MONITOR
F 45					
F 46	16.1	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 24V SPARTAN
F 47	16.2 16.3	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 12V RAMCO
F 48					
F 49	14.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER
F 50	14.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 51					
F 52					
F 53	20.1	3A	560893	RR. JCT. BOX	BACK-UP MONITOR DOOR SOLENOID
F 54					
F 55	20.1	7.5A	562602	RR. JCT. BOX	BACK-UP MONITOR CAMERA HEATER
F 56	20.1	7.5A	562602	RR. JCT. BOX	BACK-UP MONITOR CAMERA
F 57	4.1	1A	560893	RR. JCT. BOX	GENERATOR RUN RELAY

No	PAGE	AMP.	#PREV	LOCATION	FUNCTION

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V BATTERY
F 2	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V IGNITION
F 3	7.2	20A	562605	FR. JCT. BOX	ELECTRICAL HORNS
F 4	7.2	5A	562259	FR. JCT. BOX	FIRE ALARM
F 5					
F 6	5.1	5A	562602	FR. JCT. BOX	CRUISE DECEL SW.
F 7	8.1	5A	562602	FR. JCT. BOX	PARKING BRAKE PRESSURE SW.
F 8	9.2	10A	562407	FR. JCT. BOX	CORNERING LTS
F 9	9.3	15A	562604	RR. JCT. BOX	DOCKING LTS
F 10	9.3	15A	562604	FR. JCT. BOX	FOG LTS
F 11	11.1	5A	562259	FR. JCT. BOX	FRONT SERVICE CPT LTS
F 12	17.1	3A	560893	FR. JCT. BOX	STEERING CONTROL
F 13					
F 14	11.2	15A	562602	FR. JCT. BOX	DRIVER'S LTS
F 15					
F 16					
F 17					
F 18					
F 19					
F 20					
F 21	14.2	10A	560061	RR. JCT. BOX	FUEL PRIME PUMP
F 22	19.1	10A	562407	FR. JCT. BOX	POWER 12V OUTLET
F 23	19.1	15A	562604	FR. JCT. BOX	DRIVER'S WINDOW LIFTER
F 24	19.1	15A	562407	FR. JCT. BOX	CIGAR LIGHTER
F 25	19.1	3 A	562599	FR. JCT. BOX	SUN VISOR
F 26	14.1	7.5A	562259	FR. JCT. BOX	WATER HTR TIMER
F 27					
F 28					
F 29	15.3	15A	562604	FR. JCT BOX	AUX. A/C UNIT
F 30					
F 31					
F 32					
F 33					
F 34					
F 35					
F 36					
F 37					
F 38					
F 39					
F 40	13.1	20A	562605	FR. JCT. BOX	HEATED WINDSCHIELD LH
F 41	13.1	20A	562605	FR. JCT. BOX	HEATED WINDSCHIELD RH
F 42					
F 43	1.2	3A	562599	BATT.CPT	12V SIGNAL TO BATT. MONITOR
F 44	1.2	3A	562599	BATT.CPT	24V SIGNAL TO BATT. MONITOR
F 45					
F 46	16.1	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 24V SPARTAN
F 47	16.2 16.3	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 12V RAMCO
F 48					
F 49	14.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER
F 50	14.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 51					
F 52					
F 53	20.1	3A	560893	RR. JCT. BOX	BACK-UP MONITOR DOOR SOLENOID
F 54					
F 55	20.1	7.5A	562602	RR. JCT. BOX	BACK-UP MONITOR CAMERA HEATER
F 56	20.1	7.5A	562602	RR. JCT. BOX	BACK-UP MONITOR CAMERA
F 57	4.1	1A	560893	RR. JCT. BOX	GENERATOR RUN RELAY

No	PAGE	AMP.	#PREV	LOCATION	FUNCTION

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V BATTERY
F 2	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V IGNITION
F 3	7.2	20A	562605	FR. JCT. BOX	ELECTRICAL HORNS
F 4	7.2	5A	562259	FR. JCT. BOX	FIRE ALARM
F 5					
F 6	5.1	5A	562602	FR. JCT. BOX	CRUISE DECEL SW.
F 7	8.1	5A	562602	FR. JCT. BOX	PARKING BRAKE PRESSURE SW.
F 8	9.2	10A	562407	FR. JCT. BOX	CORNERING LTS
F 9	9.3	15A	562604	RR. JCT. BOX	DOCKING LTS
F 10	9.3	15A	562604	FR. JCT. BOX	FOG LTS
F 11	11.1	5A	562259	FR. JCT. BOX	FRONT SERVICE CPT LTS
F 12	17.1	3A	560893	FR. JCT. BOX	STEERING CONTROL
F 13					
F 14	11.2	15A	562602	FR. JCT. BOX	DRIVER'S LTS
F 15					
F 16					
F 17					
F 18					
F 19					
F 20					
F 21	14.2	10A	560061	RR. JCT. BOX	FUEL PRIME PUMP
F 22	19.1	10A	562407	FR. JCT. BOX	POWER 12V OUTLET
F 23	19.1	15A	562604	FR. JCT. BOX	DRIVER'S WINDOW LIFTER
F 24	19.1	15A	562407	FR. JCT. BOX	CIGAR LIGHTER
F 25	19.1	3 A	562599	FR. JCT. BOX	SUN VISOR
F 26	14.1	7.5A	562259	FR. JCT. BOX	WATER HTR TIMER
F 27					
F 28					
F 29	15.3	15A	562604	FR. JCT BOX	AUX. A/C UNIT
F 30					
F 31					
F 32					
F 33					
F 34					
F 35					
F 36					
F 37					
F 38					
F 39					
F 40					
F 41					
F 42					
F 43	1.2	3A	562599	BATT.CPT	12V SIGNAL TO BATT. MONITOR
F 44	1.2	3A	562599	BATT.CPT	24V SIGNAL TO BATT. MONITOR
F 45					
F 46	16.1	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 24V SPARTAN
F 47	16.2 16.3	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 12V RAMCO
F 48					
F 49					
F 50					
F 51					
F 52					
F 53	20.1	3A	560893	RR. JCT. BOX	BACK-UP MONITOR DOOR SOLENOID
F 54					
F 55	20.1	7.5A	562602	RR. JCT. BOX	BACK-UP MONITOR CAMERA HEATER
F 56	20.1	7.5A	562602	RR. JCT. BOX	BACK-UP MONITOR CAMERA
F 57	4.1	1A	560893	RR. JCT. BOX	GENERATOR RUN RELAY

No	PAGE	AMP.	#PREV	LOCATION	FUNCTION

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V BATTERY
F 2	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V IGNITION
F 3	7.2	20A	562605	FR. JCT. BOX	ELECTRICAL HORNS
F 4	7.2	5A	562259	FR. JCT. BOX	FIRE ALARM
F 5	8.1	7.5A	562259	RR. JCT. BOX	AIR DRYER
F 6	5.1	5A	562602	FR. JCT. BOX	CRUISE DECEL SW.
F 7	8.1	5A	562602	FR. JCT. BOX	PARKING BRAKE PRESSURE SW.
F 8	9.2	10A	562407	FR. JCT. BOX	CORNERING LTS
F 9	9.3	15A	562604	RR. JCT. BOX	DOCKING LTS
F 10	9.3	15A	562604	FR. JCT. BOX	FOG LTS
F 11	11.1	5A	562259	FR. JCT. BOX	FRONT SERVICE CPT LTS
F 12	17.1	3A	560893	FR. JCT. BOX	STEERING CONTROL
F 13					
F 14	11.2	15A	562602	FR. JCT. BOX	DRIVER'S LTS
F 15					
F 16					
F 17					
F 18					
F 19					
F 20					
F 21	14.2	10A	560061	RR. JCT. BOX	FUEL PRIME PUMP
F 22	19.1	10A	562407	FR. JCT. BOX	POWER 12V OUTLET
F 23	19.1	15A	562604	FR. JCT. BOX	DRIVER'S WINDOW LIFTER
F 24	19.1	15A	562407	FR. JCT. BOX	CIGAR LIGHTER
F 25	19.1	3 A	562599	FR. JCT. BOX	SUN VISOR
F 26	14.1	7.5A	562259	FR. JCT. BOX	WATER HTR TIMER
F 27					
F 28					
F 29	15.3	15A	562604	FR. JCT BOX	AUX. A/C UNIT
F 30					
F 31					
F 32					
F 33					
F 34					
F 35					
F 36					
F 37					
F 38					
F 39					
F 40					
F 41					
F 42					
F 43	1.2	3A	562599	BATT.CPT	12V SIGNAL TO BATT. MONITOR
F 44	1.2	3A	562599	BATT.CPT	24V SIGNAL TO BATT. MONITOR
F 45					
F 46	16.1	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 24V SPARTAN
F 47	16.2 16.3	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 12V RAMCO
F 48					
F 49					
F 50					
F 51					
F 52					
F 53	20.1	3A	560893	RR. JCT. BOX	BACK-UP MONITOR DOOR SOLENOID
F 54					
F 55	20.1	7.5A	562602	RR. JCT. BOX	BACK-UP MONITOR CAMERA HEATER
F 56	20.1	7.5A	562602	RR. JCT. BOX	BACK-UP MONITOR CAMERA
F 57	4.1	1A	560893	RR. JCT. BOX	GENERATOR RUN RELAY

No	PAGE	AMP.	#PREV	LOCATION	FUNCTION

LOGIC GATE

TRUTH TABLE

AND GATE



INPUT		OUT
A	B	C
Ø	Ø	Ø
Ø	1	Ø
1	Ø	Ø
1	1	1

•OUTPUT IS 1 WHEN ALL INPUT IS 1

NAND GATE



INPUT		OUT
A	B	C
Ø	Ø	1
Ø	1	1
1	Ø	1
1	1	Ø

• OUTPUT IS Ø WHEN ALL INPUT IS Ø

OR GATE



INPUT		OUT
A	B	C
Ø	Ø	Ø
Ø	1	1
1	Ø	1
1	1	1

• OUTPUT IS 1 WHEN EITHER INPUT IS 1

NOR GATE



INPUT		OUT
A	B	C
Ø	Ø	1
Ø	1	Ø
1	Ø	Ø
1	1	Ø

• OUTPUT IS 1 WHEN NONE INPUT IS 1

NOT GATE



INPUT	OUT
A	B
Ø	1
1	Ø

• OUTPUT IS REVERSE OF INPUT

ON-DELAY

XX SECOND
AFTER A=1
THAN B=1

OFF-DELAY

XX SECOND
AFTER A=Ø
THAN B=Ø

INPUT OR OUTPUT LEVEL
LEVEL 1 = 12 VOLTS OR 24 VOLTS
LEVEL Ø = Ø VOLT (TO GROUND)

LOGIC GATE

TRUTH TABLE

AND GATE



INPUT		OUT
A	B	C
Ø	Ø	Ø
Ø	1	Ø
1	Ø	Ø
1	1	1

•OUTPUT IS 1 WHEN ALL INPUT IS 1

NAND GATE



INPUT		OUT
A	B	C
Ø	Ø	1
Ø	1	1
1	Ø	1
1	1	Ø

• OUTPUT IS Ø WHEN ALL INPUT IS Ø

OR GATE



INPUT		OUT
A	B	C
Ø	Ø	Ø
Ø	1	1
1	Ø	1
1	1	1

• OUTPUT IS 1 WHEN EITHER INPUT IS 1

NOR GATE



INPUT		OUT
A	B	C
Ø	Ø	1
Ø	1	Ø
1	Ø	Ø
1	1	Ø

• OUTPUT IS 1 WHEN NONE INPUT IS 1

NOT GATE



INPUT	OUT
A	B
Ø	1
1	Ø

• OUTPUT IS REVERSE OF INPUT

ON-DELAY

XX SECOND
AFTER A=1
THAN B=1

OFF-DELAY

XX SECOND
AFTER A=Ø
THAN B=Ø

POSITIVE INPUT



INPUT CONNECTED WITH SIGNAL 12 VOLTS OR 24 VOLTS WHEN ACTIVATING

SINKING INPUT



INPUT CONNECTED WITH SIGNAL GROUND WHEN ACTIVATING

INPUT OR OUTPUT LEVEL

LEVEL 1 = 12 VOLTS OR 24 VOLTS

LEVEL Ø = Ø VOLT (TO GROUND)

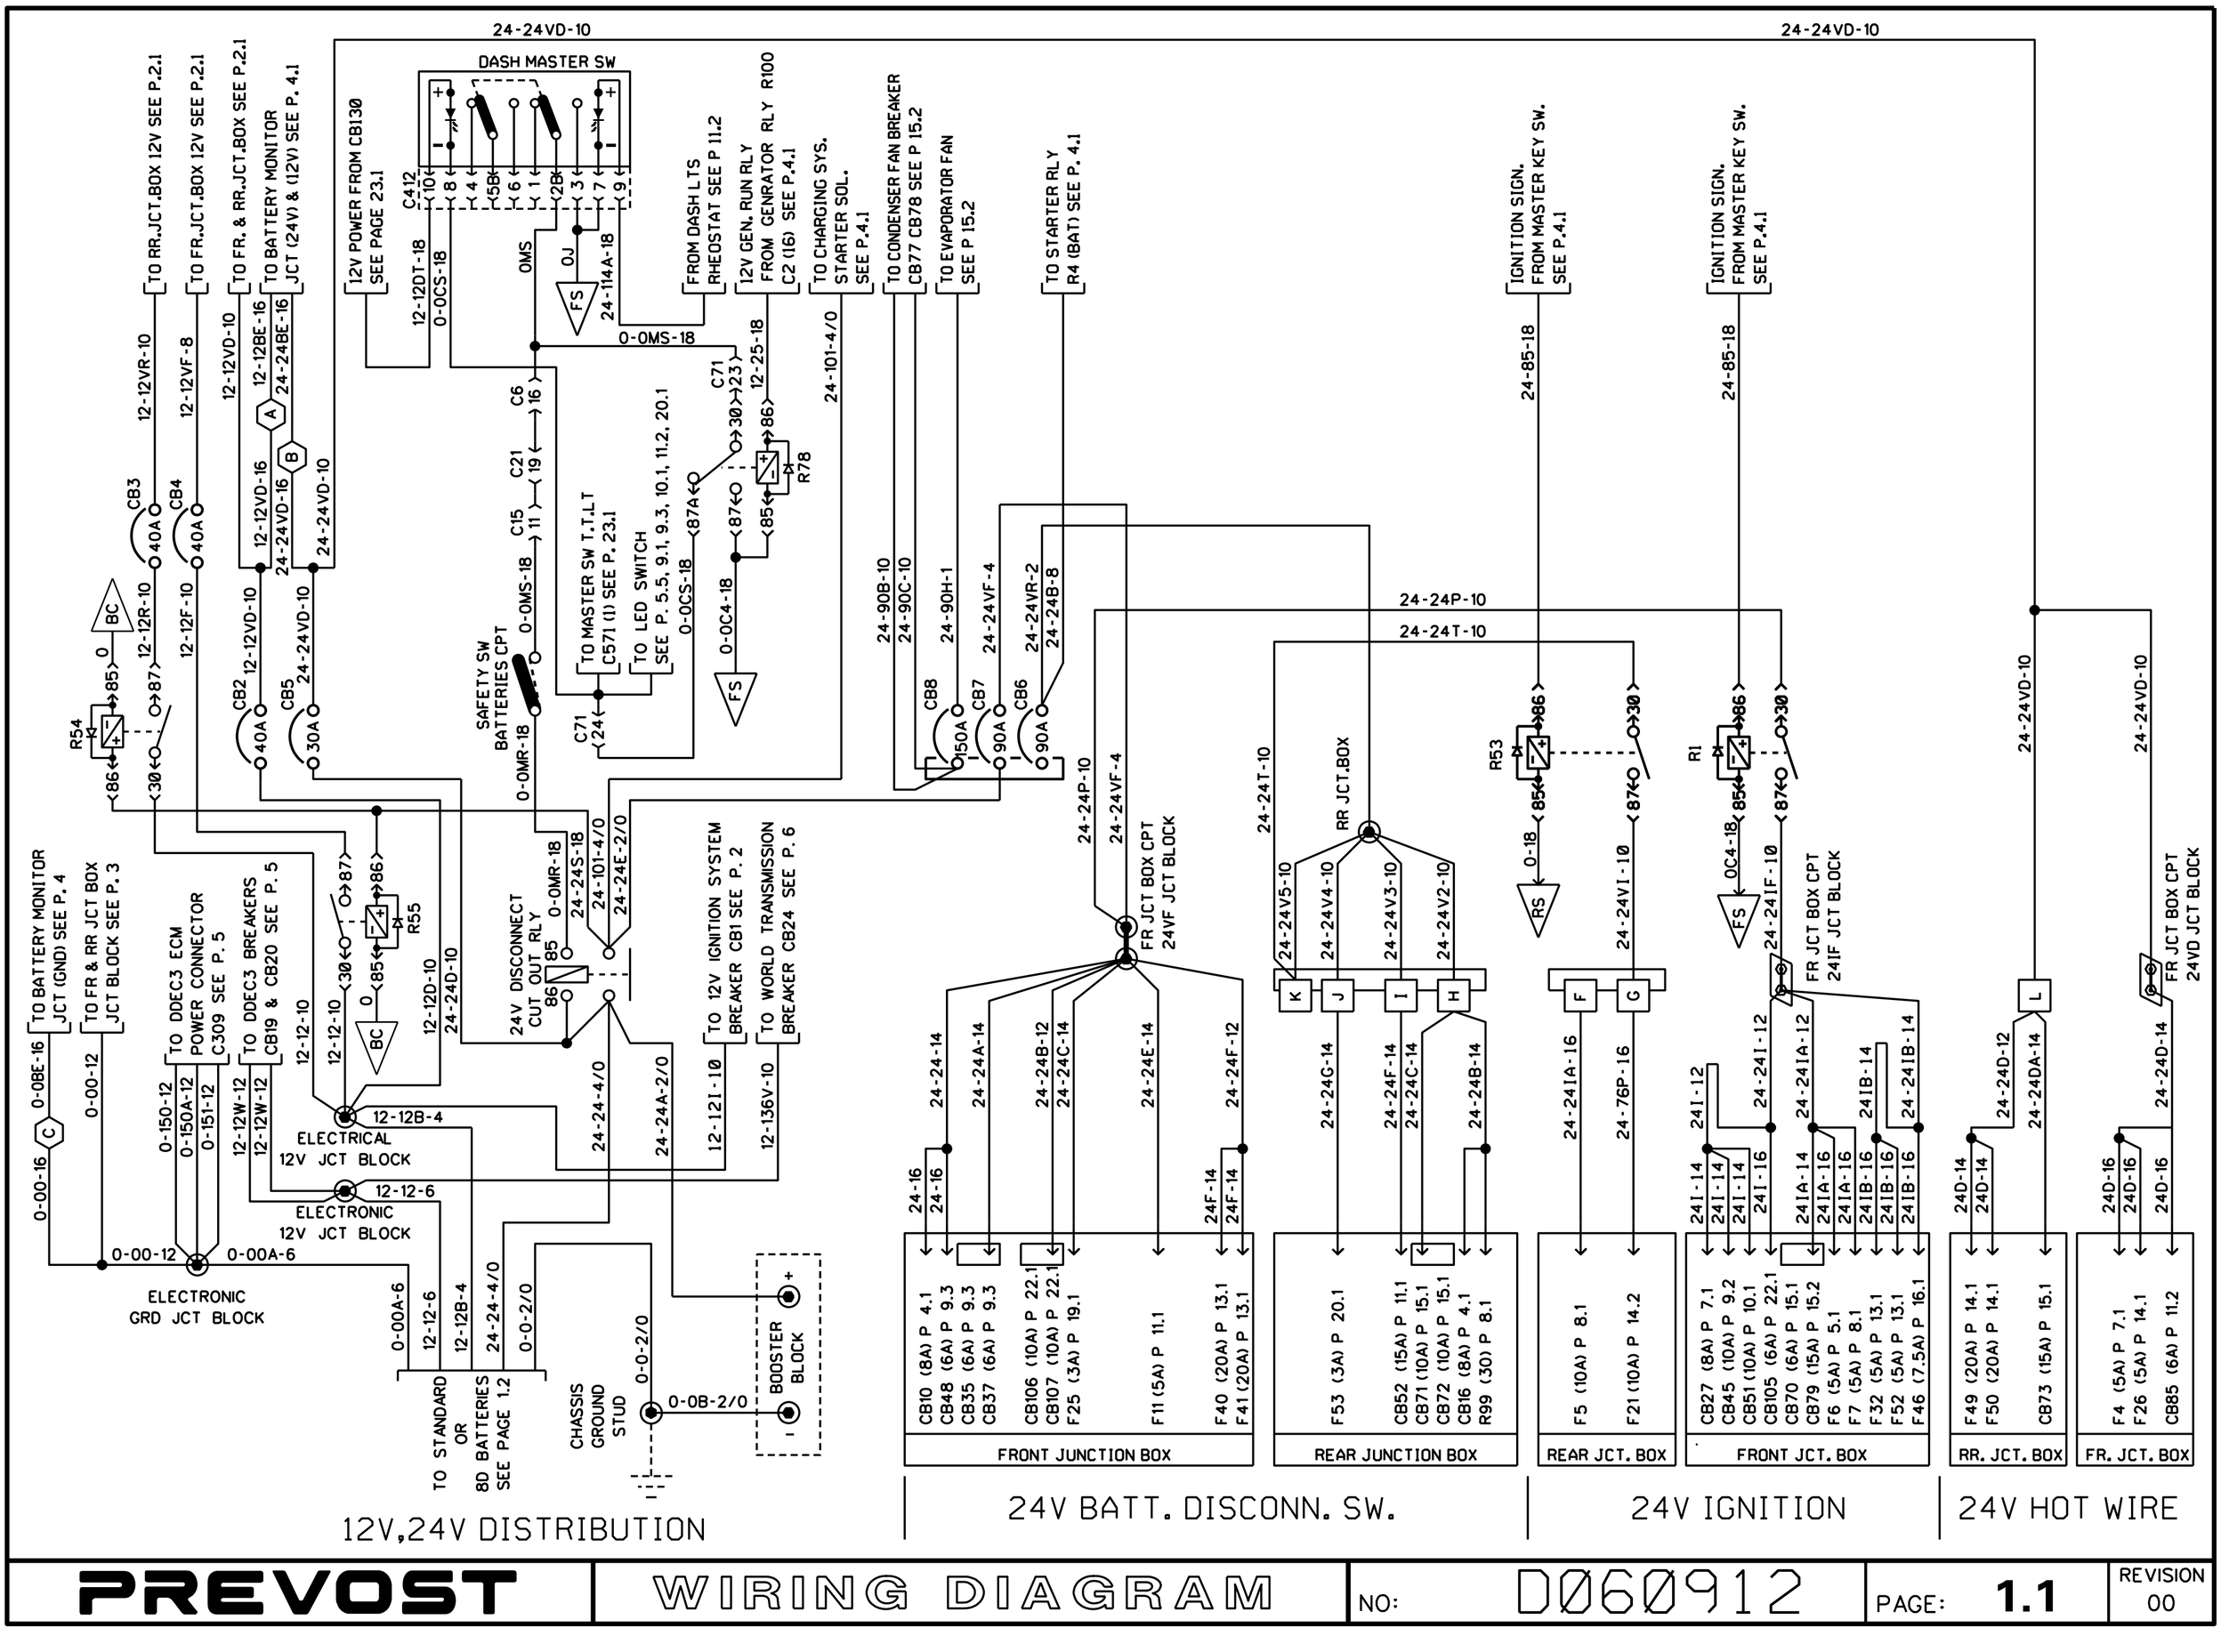

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 1.1	REVISION 00

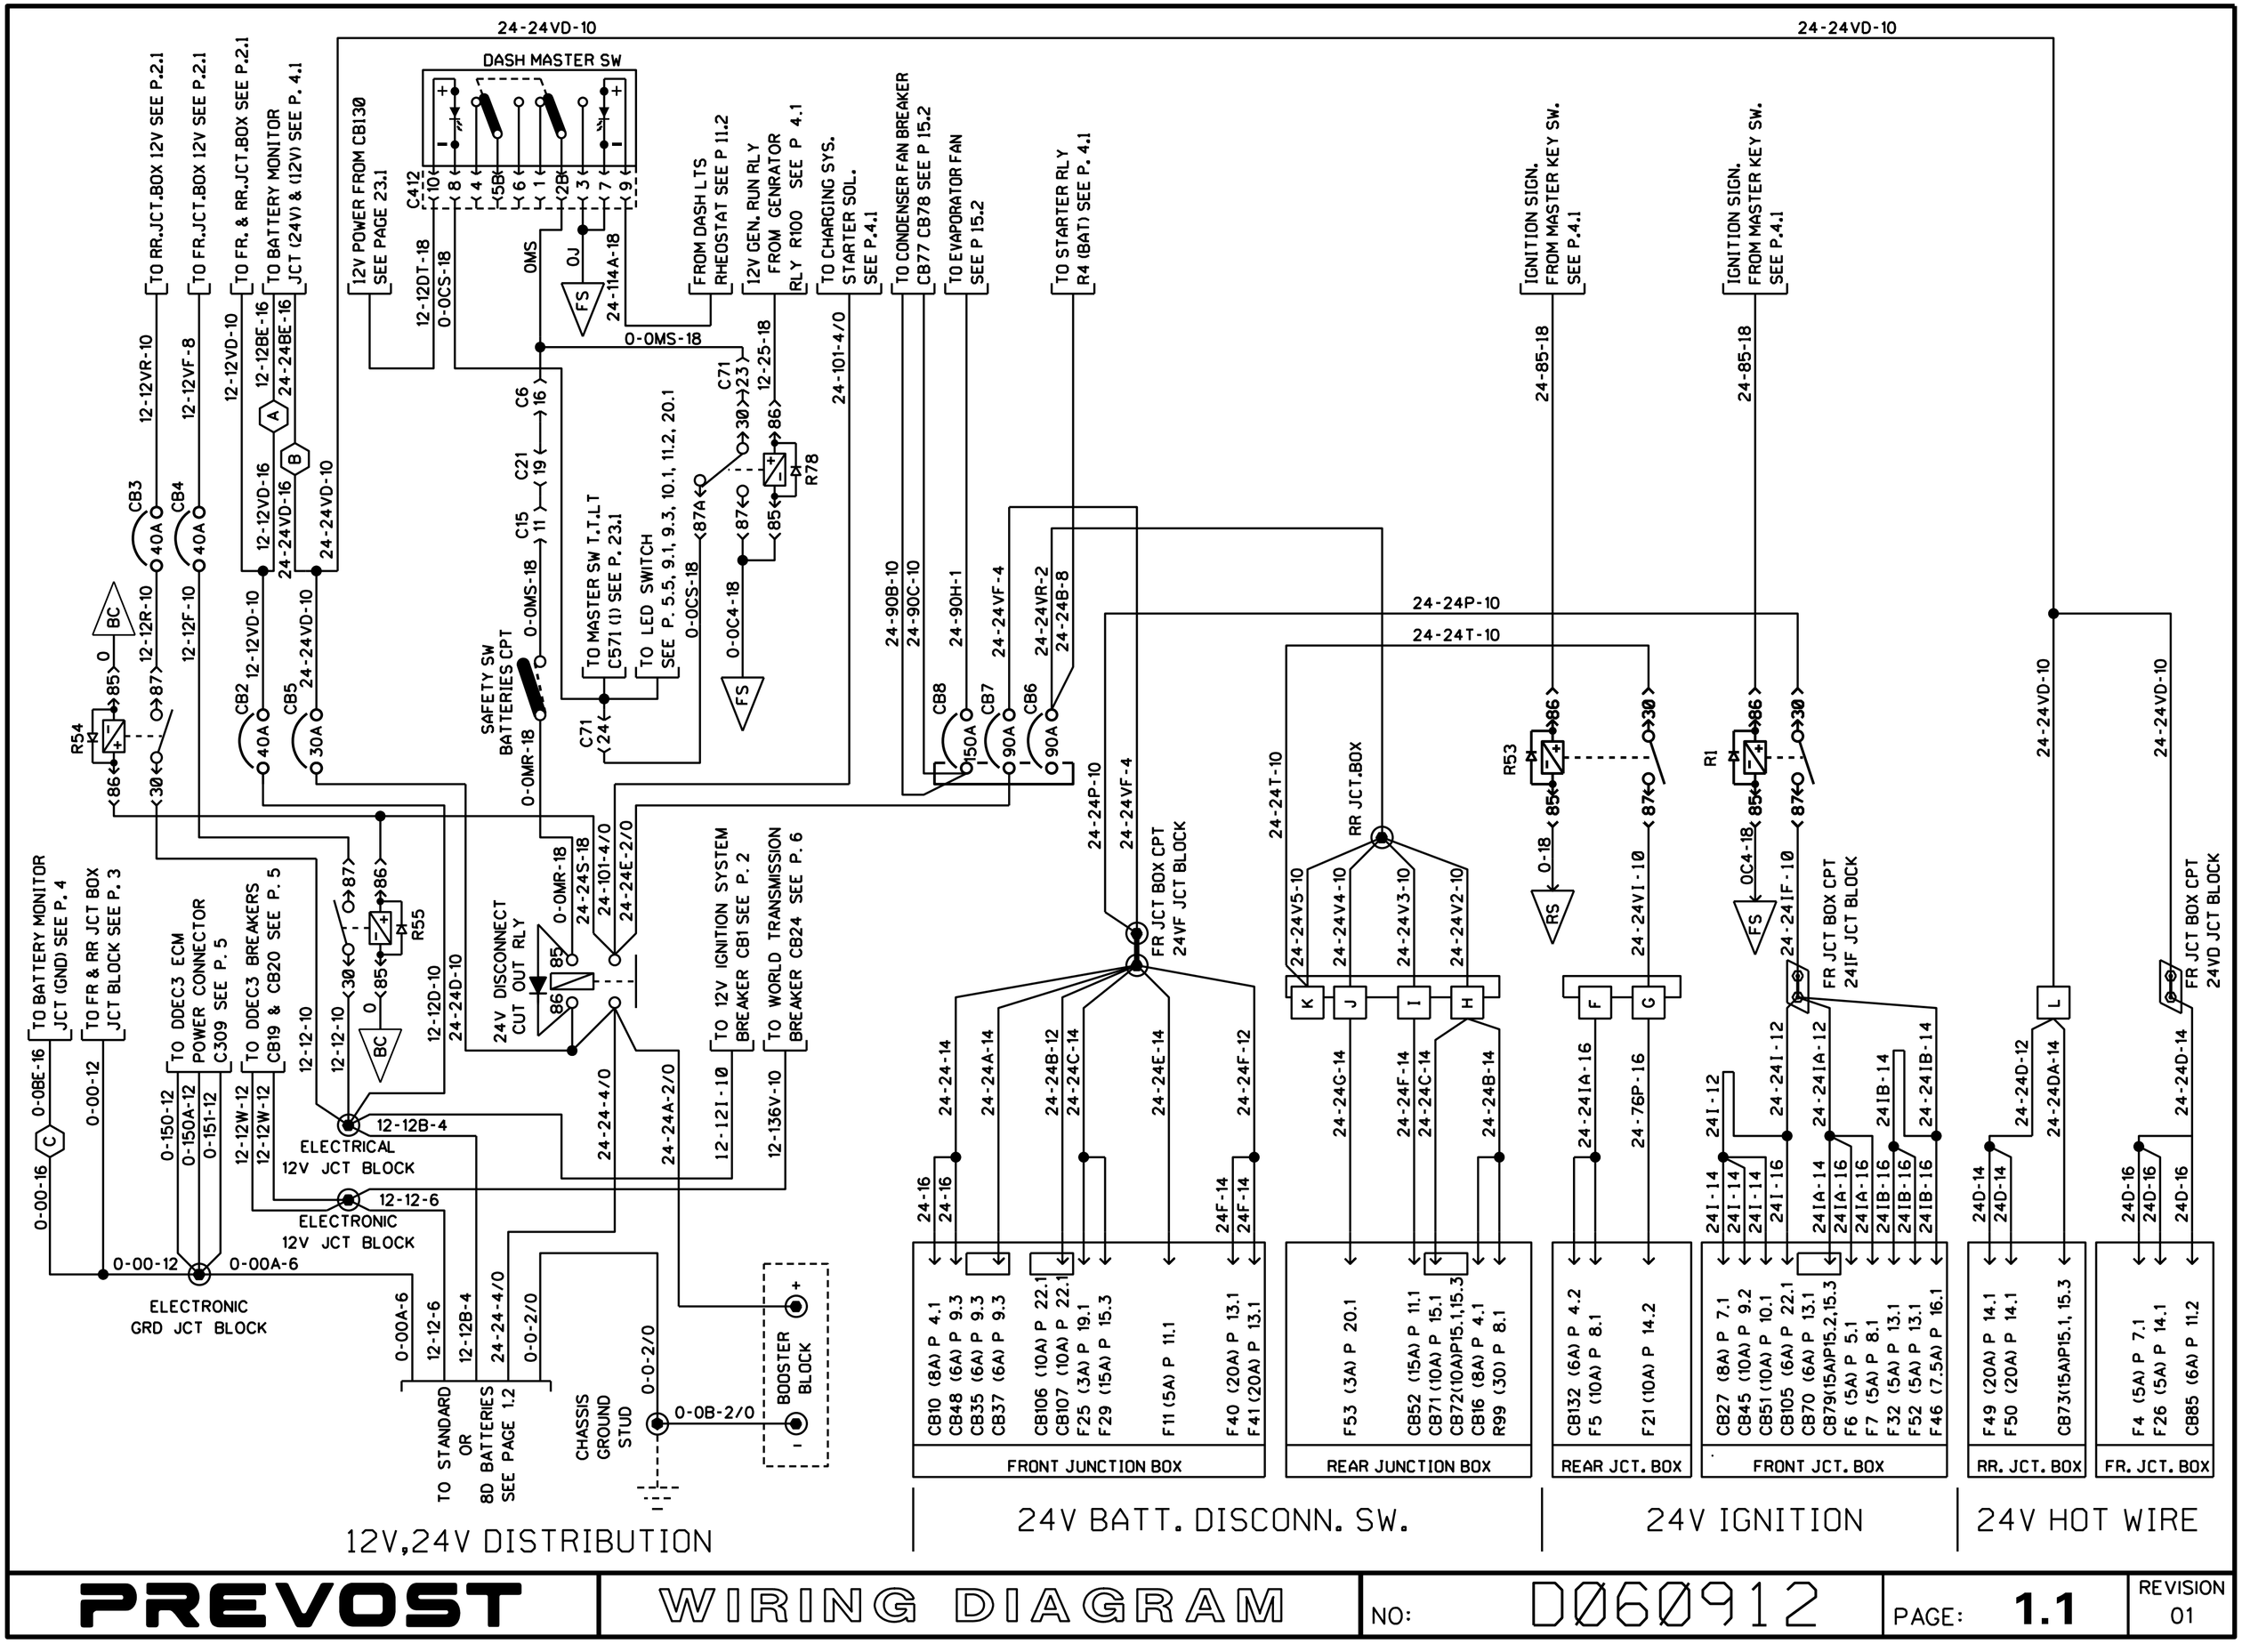

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 1.1	REVISION 01

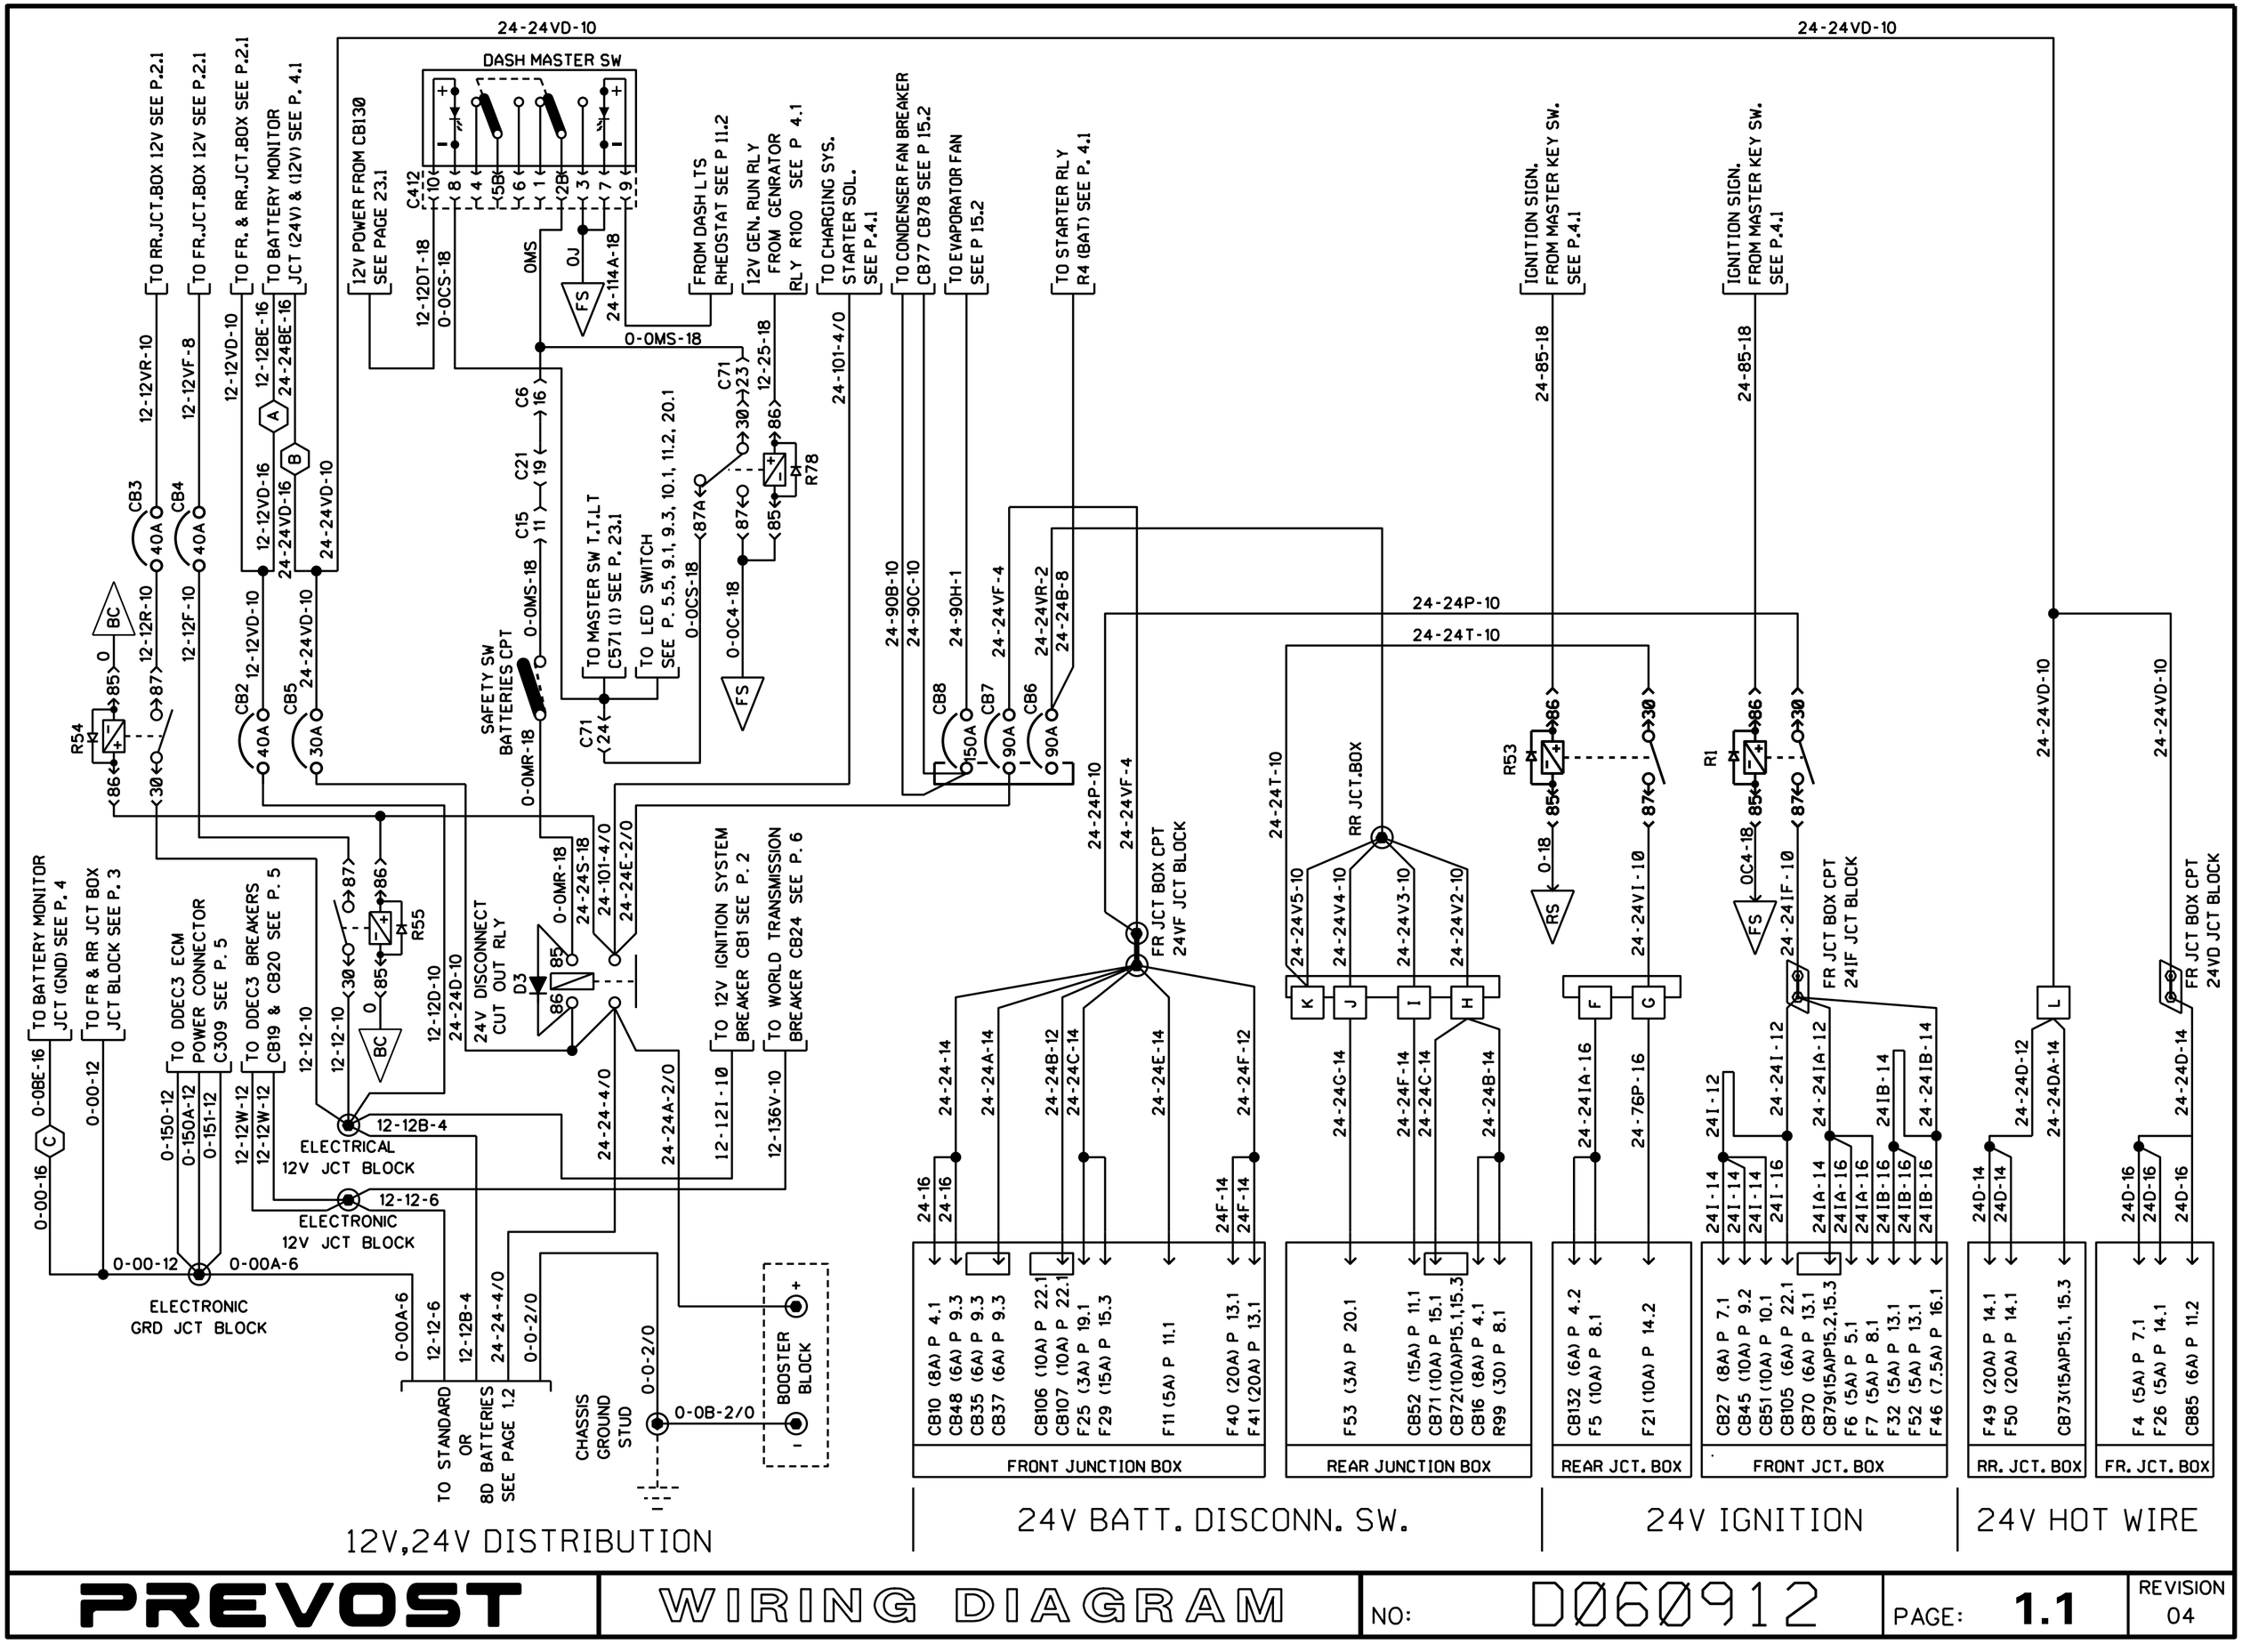
24-24VD-10
DASH MASTER SW
12V POWER FROM CB130
SEE PAGE 23.1
C412
12-12DT-18
0-0CS-18
OMS
OJ
FS
24-114A-18
FROM DASH LTS
RHEOSTAT SEE P 11.2
0-0MS-18
12V GEN. RUN RLY
FROM GENRATOR
RLY R100 SEE P 4.1
TO CHARGING SYS.
STARTER SOL.
SEE P.4.1
24-101-4/0
TO CONDENSER FAN BREAKER
CB77 CB78 SEE P 15.2
TO EVAPORATOR FAN
SEE P 15.2
TO STARTER RLY
R4 (BAT) SEE P. 4.1
IGNITION SIGN.
FROM MASTER KEY SW.
SEE P.4.1
24-85-18
TO FR. & RR.JCT.BOX SEE P.2.1
TO BATTERY MONITOR
JCT (24V) & (12V) SEE P. 4.1
TO RR.JCT.BOX 12V SEE P.2.1
TO FR.JCT.BOX 12V SEE P.2.1
12-12VD-10
12-12BE-16
24-24BE-16
12-12VR-10
12-12VF-8
CB3
CB4
CB2
CB5
40A
30A
12-12VD-16
24-24VD-16
24-24VD-10
12-12VD-10
12-12R-10
12-12F-10
R54
BC
SAFETY SW
BATTERIES CPT
0-0MR-18
0-0MS-18
C15
C21
C6
C71
TO MASTER SW T.T.L.T
C571 (1) SEE P. 23.1
TO LED SWITCH
SEE P. 5.5, 9.1, 9.3, 10.1, 11.2, 20.1
0-0CS-18
0-0C4-18
12-25-18
R78
24-90B-10
24-90C-10
24-90H-1
24-24VF-4
24-24VR-2
24-24B-8
CB8
CB7
CB6
150A
90A
24-24P-10
24-24T-10
R53
R1
RR JCT.BOX
FR JCT BOX CPT
24VF JCT BLOCK
24-24V5-10
24-24V4-10
24-24V3-10
24-24V2-10
0-18
RS
24-24VI-10
0C4-18
24-24IF-10
FR JCT BOX CPT
24IF JCT BLOCK
24-24VD-10
TO BATTERY MONITOR
JCT (GND) SEE P. 4
TO FR & RR JCT BOX
JCT BLOCK SEE P. 3
0-0BE-16
0-00-12
0-00-16
TO DDEC3 ECM
POWER CONNECTOR
C309 SEE P. 5
TO DDEC3 BREAKERS
CB19 & CB20 SEE P. 5
0-150-12
0-150A-12
0-151-12
12-12W-12
12-12-10
24-24-4/0
24-24A-2/0
12-121-10
12-136V-10
TO 12V IGNITION SYSTEM
BREAKER CB1 SEE P. 2
TO WORLD TRANSMISSION
BREAKER CB24 SEE P. 6
D3
24V DISCONNECT
CUT OUT RLY
0-0MR-18
24-24S-18
24-101-4/0
24-24E-2/0
12-12D-10
24-24D-10
R55
12-12B-4
ELECTRICAL
12V JCT BLOCK
12-12-6
ELECTRONIC
12V JCT BLOCK
0-00-12
0-00A-6
ELECTRONIC
GRD JCT BLOCK
TO STANDARD
OR
8D BATTERIES
SEE PAGE 1.2
12-12-6
12-12B-4
24-24-4/0
0-0-2/0
CHASSIS
GROUND
STUD
0-0B-2/0
BOOSTER
BLOCK
24-16
24-24-14
24-24A-14
24-24B-12
24-24C-14
24-24E-14
24F-14
24-24F-12
CB10 (8A) P 4.1
CB48 (6A) P 9.3
CB35 (6A) P 9.3
CB37 (6A) P 9.3
CB106 (10A) P 22.1
CB107 (10A) P 22.1
F25 (3A) P 19.1
F29 (15A) P 15.3
F11 (5A) P 11.1
F40 (20A) P 13.1
F41 (20A) P 13.1
FRONT JUNCTION BOX
24-24G-14
24-24F-14
24-24C-14
24-24B-14
F53 (3A) P 20.1
CB52 (15A) P 11.1
CB71 (10A) P 15.1
CB72(10A)P15.1,15.3
CB16 (8A) P 4.1
R99 (30) P 8.1
REAR JUNCTION BOX
24-241A-16
24-76P-16
CB132 (6A) P 4.2
F5 (10A) P 8.1
F21 (10A) P 14.2
REAR JCT. BOX
24I-12
24I-14
24I-16
24-24I-12
24-241A-12
24IA-14
24IA-16
24IB-16
24-24IB-14
CB27 (8A) P 7.1
CB45 (10A) P 9.2
CB51 (10A) P 10.1
CB105 (6A) P 22.1
CB70 (6A) P 13.1
CB79(15A)P15.2,15.3
F6 (5A) P 5.1
F7 (5A) P 8.1
F32 (5A) P 13.1
F52 (5A) P 13.1
F46 (7.5A) P 16.1
FRONT JCT. BOX
24D-14
24D-16
24-24D-12
24-24DA-14
F49 (20A) P 14.1
F50 (20A) P 14.1
CB73(15A)P15.1, 15.3
RR. JCT. BOX
24-24D-14
F4 (5A) P 7.1
F26 (5A) P 14.1
CB85 (6A) P 11.2
FR. JCT. BOX
12V,24V DISTRIBUTION
24V BATT. DISCONN. SW.
24V IGNITION
24V HOT WIRE

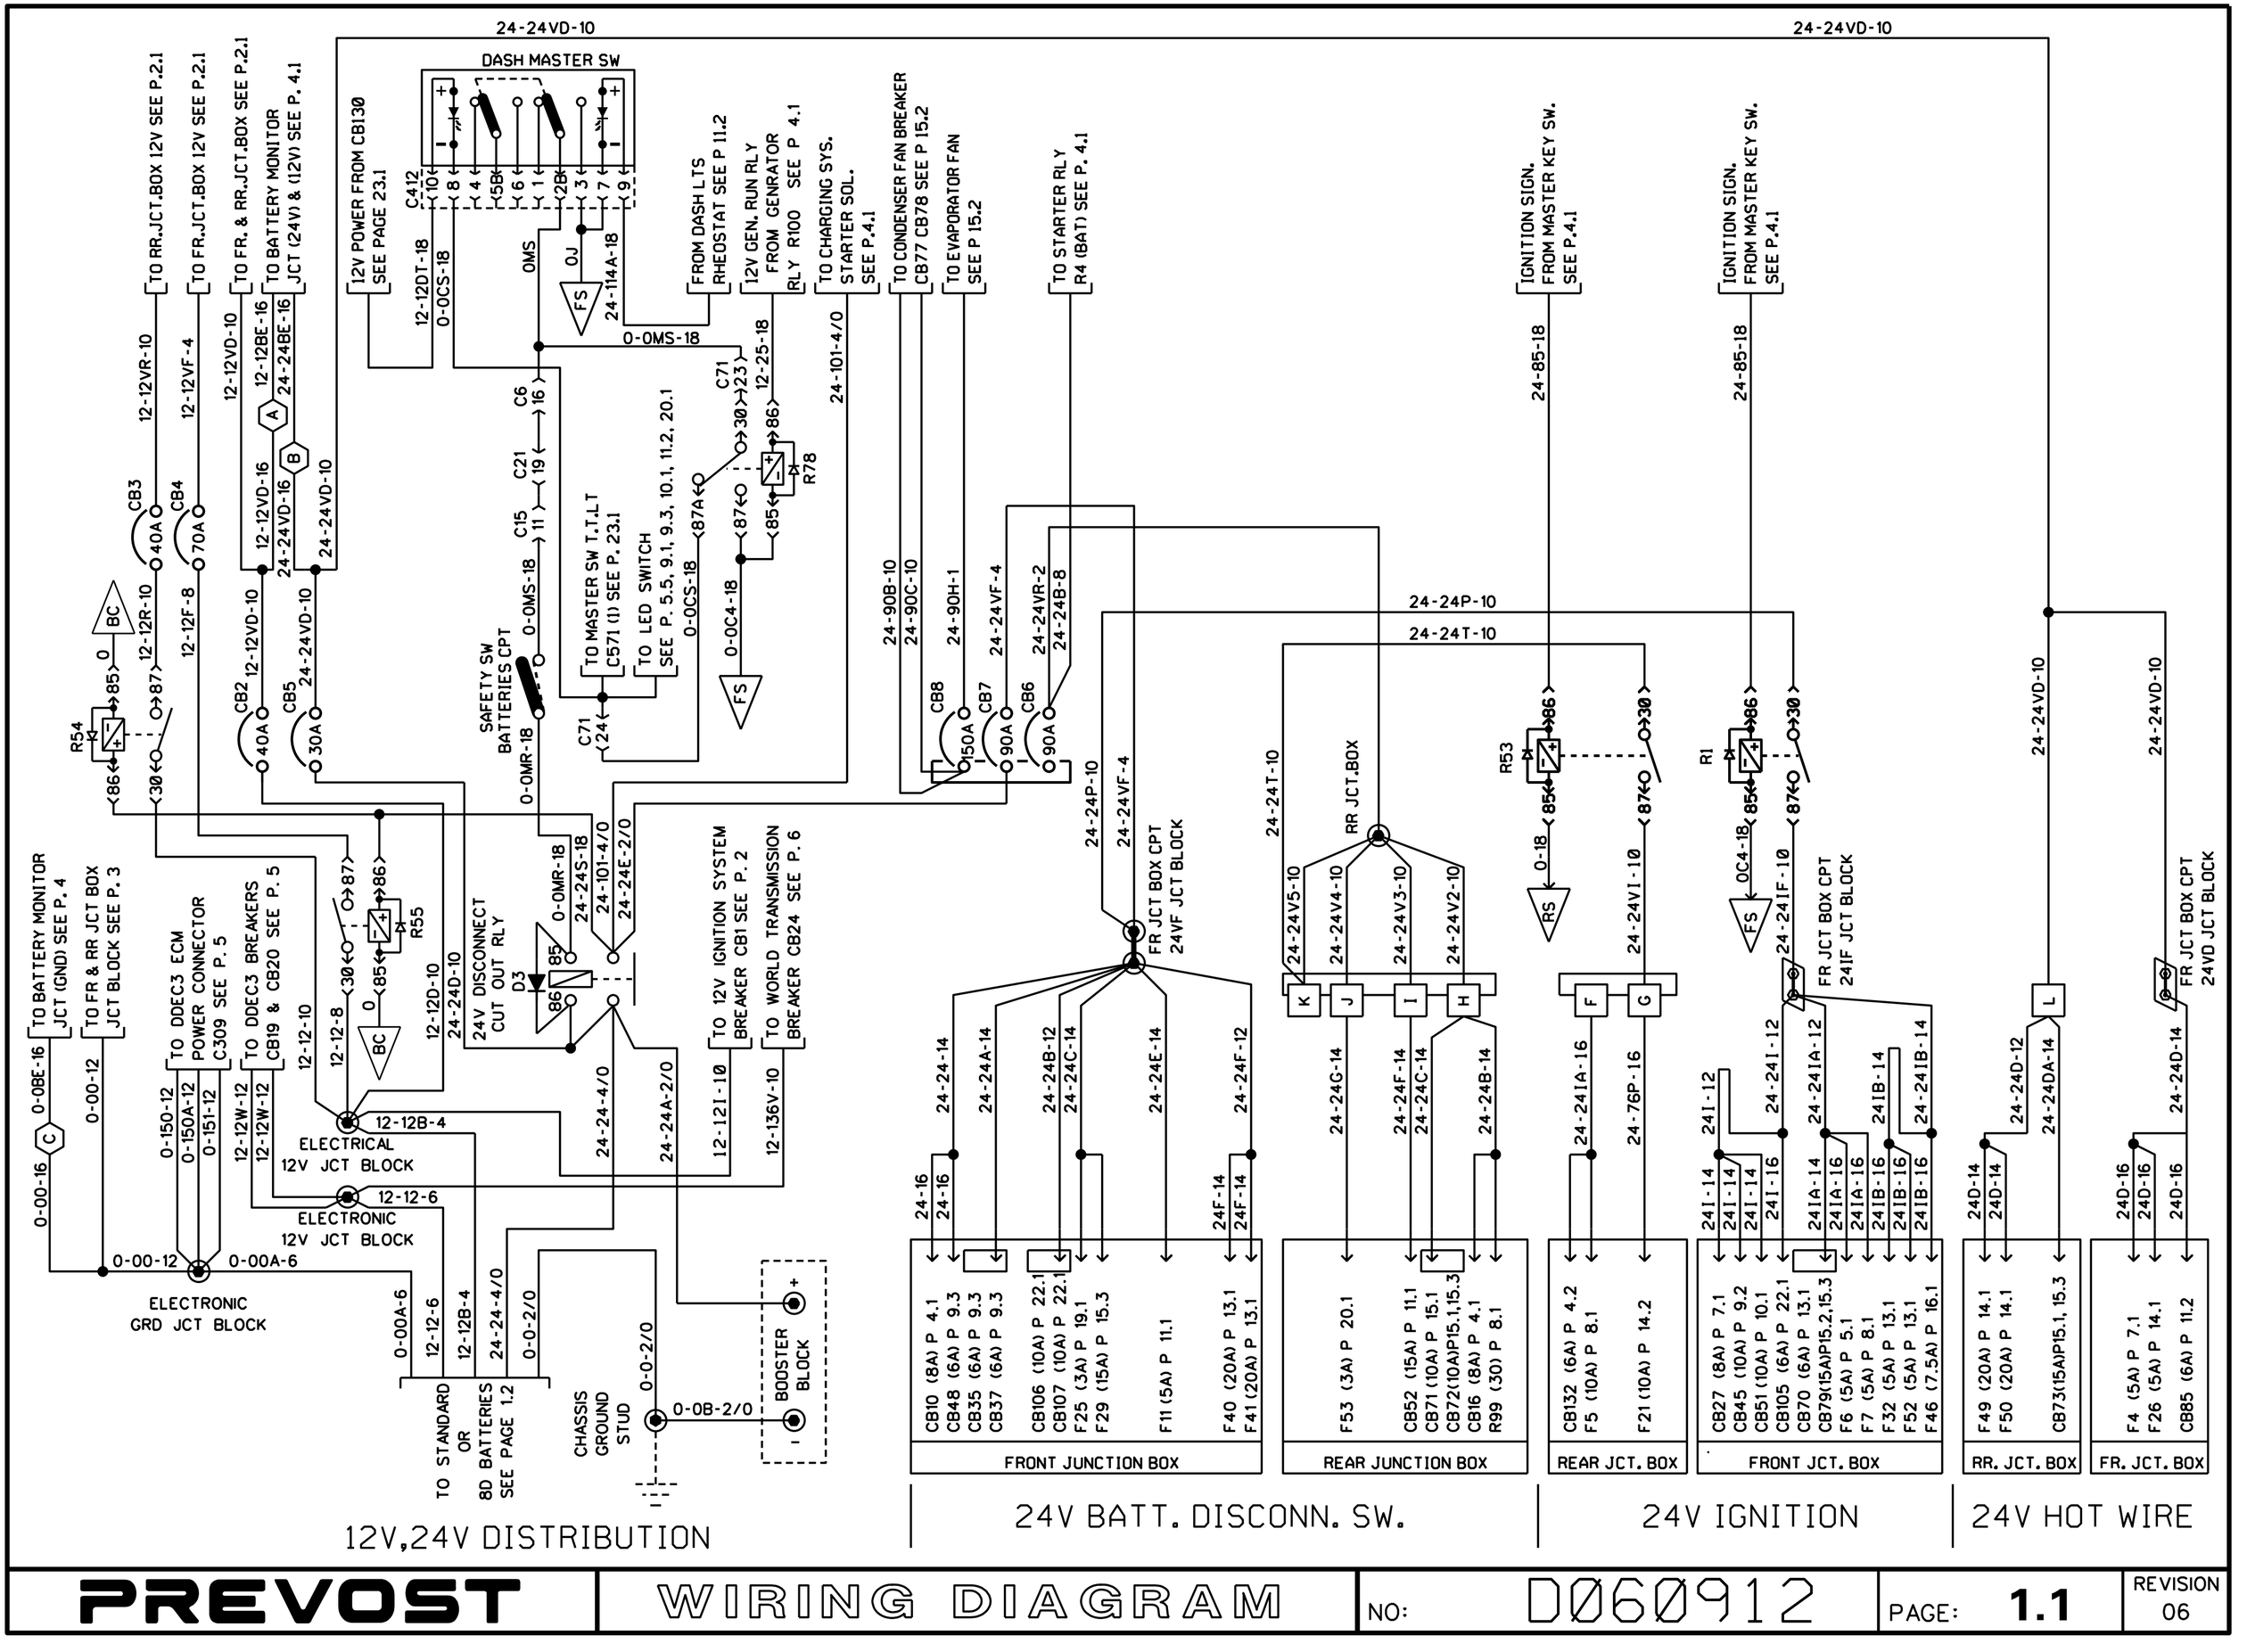

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 1.1	REVISION 06

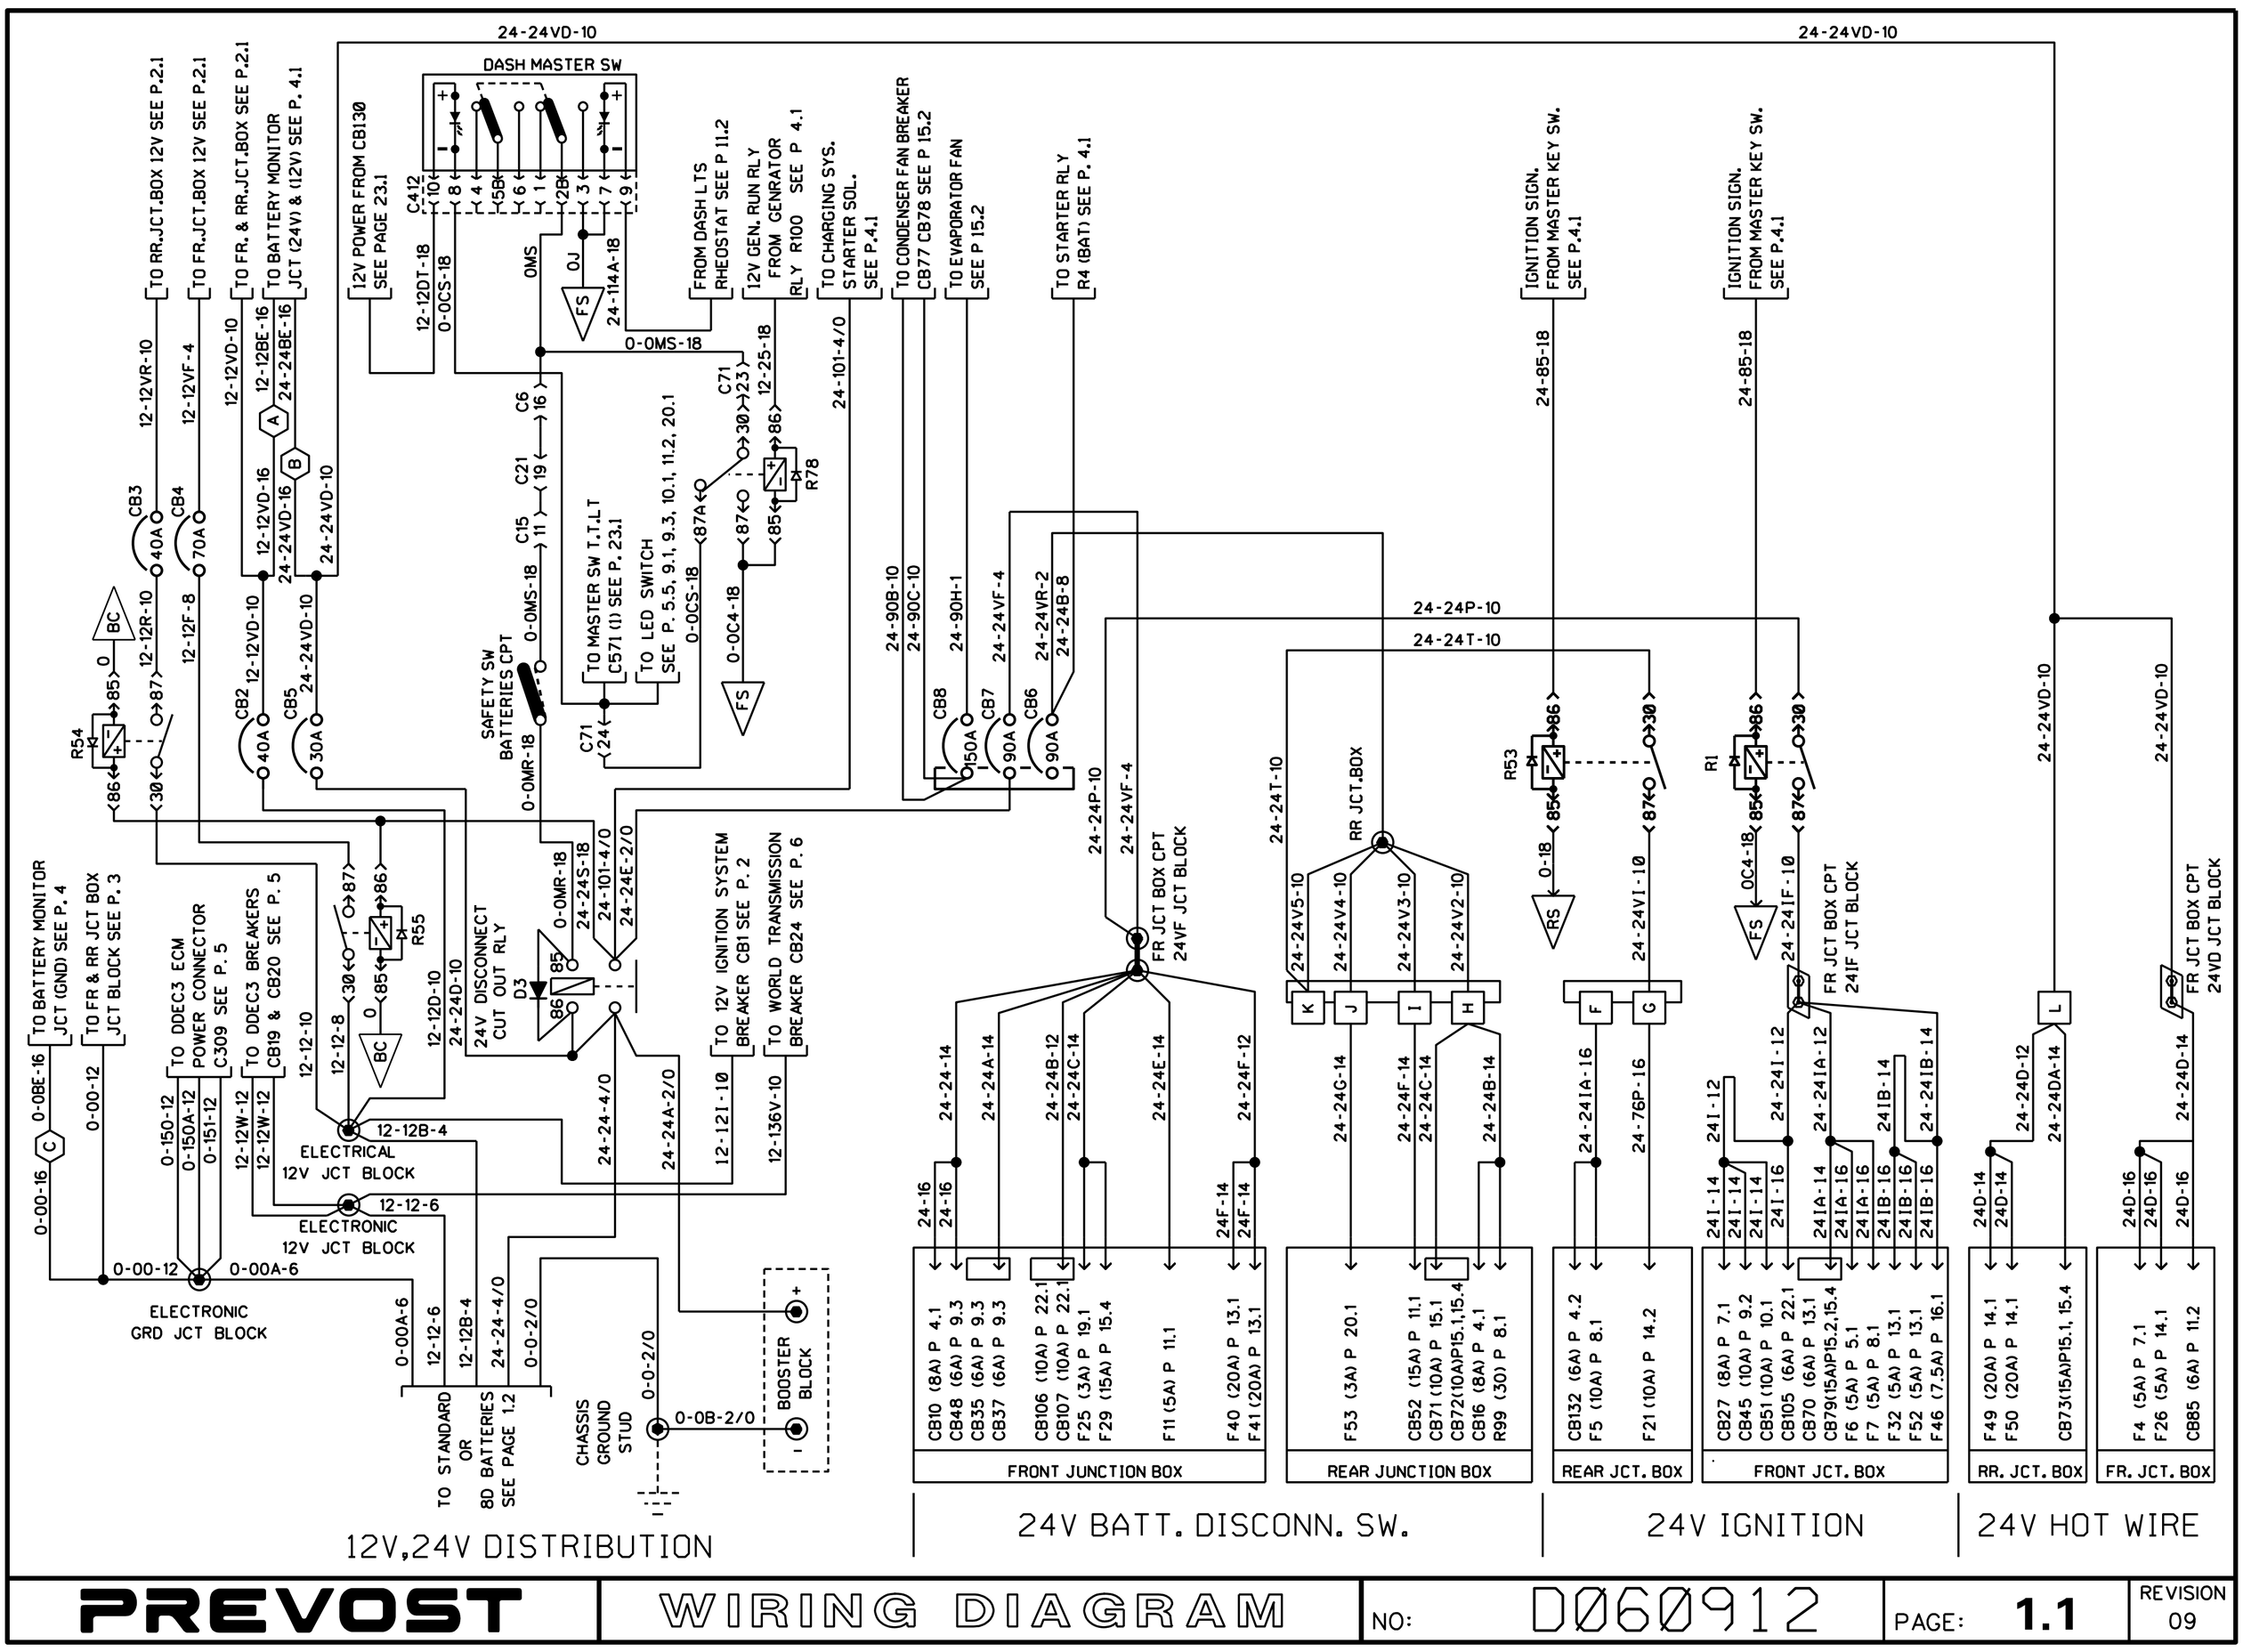

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 1.1	REVISION 09

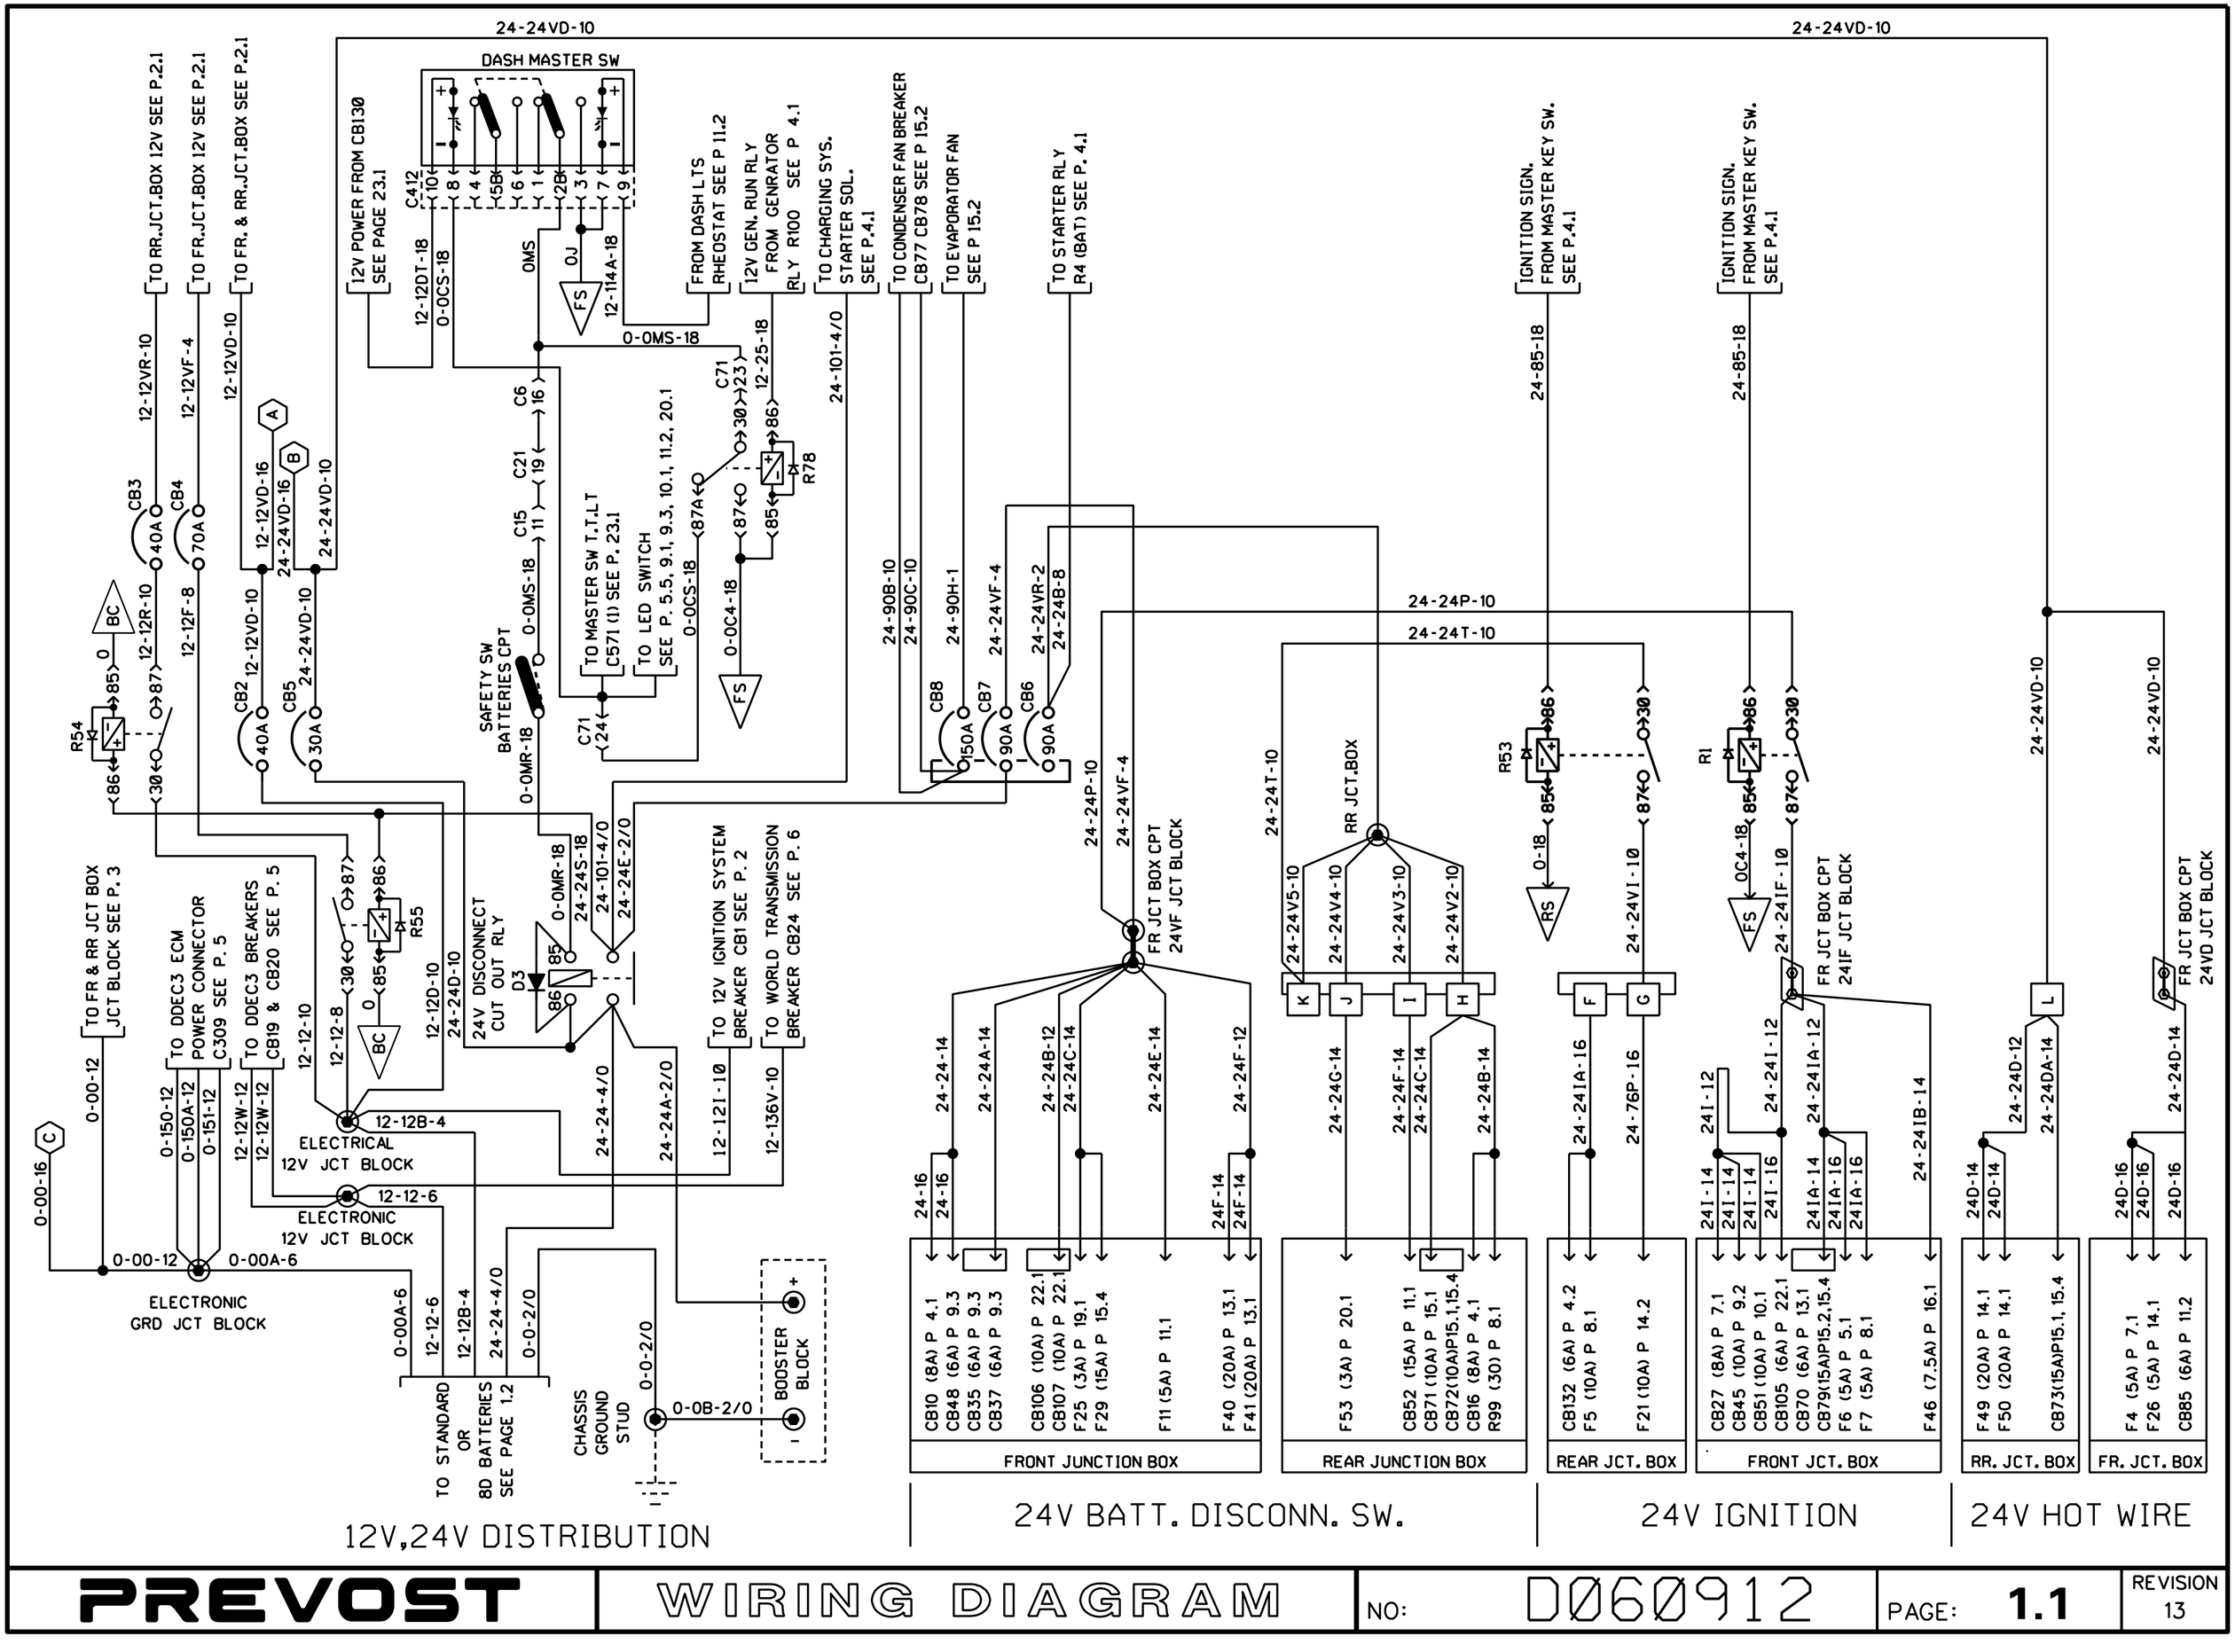
24-24VD-10
DASH MASTER SW
12V POWER FROM CB130
SEE PAGE 23.1
C412
12-12DT-18
0-0CS-18
0MS
OJ
FS
12-114A-18
FROM DASH LTS
RHEOSTAT SEE P 11.2
12V GEN. RUN RLY
FROM GENRATOR
RLY R100 SEE P 4.1
TO CHARGING SYS.
STARTER SOL.
SEE P.4.1
TO CONDENSER FAN BREAKER
CB77 CB78 SEE P 15.2
TO EVAPORATOR FAN
SEE P 15.2
TO STARTER RLY
R4 (BAT) SEE P. 4.1
IGNITION SIGN.
FROM MASTER KEY SW.
SEE P.4.1
24-85-18
0-0MS-18
C6
C21
C15
C71
12-25-18
R78
24-101-4/0
24-90B-10
24-90C-10
24-90H-1
24-24VF-4
24-24VR-2
24-24B-8
24-24P-10
24-24T-10
TO MASTER SW T.T.LT
C571 (1) SEE P. 23.1
TO LED SWITCH
SEE P. 5.5, 9.1, 9.3, 10.1, 11.2, 20.1
0-0CS-18
0-0C4-18
SAFETY SW
BATTERIES CPT
0-0MR-18
CB1
CB2
CB3
CB4
CB5
CB6
CB7
CB8
40A
40A
40A
70A
30A
90A
90A
150A
12-12R-10
12-12VR-10
12-12F-8
12-12VF-4
12-12VD-10
12-12VD-16
24-24VD-16
24-24VD-10
12-12VD-10
24-24VD-10
R54
BC
0
85
86
30
87
A
B
C
TO FR & RR JCT BOX
JCT BLOCK SEE P. 3
0-00-12
0-00-16
TO DDEC3 ECM
POWER CONNECTOR
C309 SEE P. 5
0-150-12
0-150A-12
0-151-12
TO DDEC3 BREAKERS
CB19 & CB20 SEE P. 5
12-12W-12
12-12W-12
12-12-10
12-12-8
12-12B-4
12-12-6
ELECTRICAL
12V JCT BLOCK
ELECTRONIC
12V JCT BLOCK
ELECTRONIC
GRD JCT BLOCK
0-00A-6
0-00-12
0-00A-6
12-12-6
12-12B-4
24-24-4/0
0-0-2/0
TO STANDARD
OR
8D BATTERIES
SEE PAGE 1.2
CHASSIS
GROUND
STUD
0-0B-2/0
BOOSTER
BLOCK
R55
D3
24V DISCONNECT
CUT OUT RLY
12-12D-10
24-24D-10
0-0MR-18
24-24S-18
24-101-4/0
24-24E-2/0
24-24-4/0
24-24A-2/0
12-121-10
12-136V-10
TO 12V IGNITION SYSTEM
BREAKER CB1 SEE P. 2
TO WORLD TRANSMISSION
BREAKER CB24 SEE P. 6
R53
R1
RR JCT.BOX
FR JCT BOX CPT
24VF JCT BLOCK
24-24V5-10
24-24V4-10
24-24V3-10
24-24V2-10
K
J
I
H
24-24-14
24-24A-14
24-24B-12
24-24C-14
24-24E-14
24-24F-12
24-24G-14
24-24F-14
24-24C-14
24-24B-14
24-16
24-16
24F-14
24F-14
CB10 (8A) P 4.1
CB48 (6A) P 9.3
CB35 (6A) P 9.3
CB37 (6A) P 9.3
CB106 (10A) P 22.1
CB107 (10A) P 22.1
F25 (3A) P 19.1
F29 (15A) P 15.4
F11 (5A) P 11.1
F40 (20A) P 13.1
F41 (20A) P 13.1
FRONT JUNCTION BOX
F53 (3A) P 20.1
CB52 (15A) P 11.1
CB71 (10A) P 15.1
CB72(10A)P15.1,15.4
CB16 (8A) P 4.1
R99 (30) P 8.1
REAR JUNCTION BOX
0-18
RS
24-24V1-10
F
C
24-241A-16
24-76P-16
CB132 (6A) P 4.2
F5 (10A) P 8.1
F21 (10A) P 14.2
REAR JCT. BOX
0C4-18
24-24IF-10
FR JCT BOX CPT
24IF JCT BLOCK
24I-12
24I-14
24I-14
24I-16
24-24I-12
24-241A-12
24-241A-14
24-241A-16
24-241A-16
24-241B-14
CB27 (8A) P 7.1
CB45 (10A) P 9.2
CB51 (10A) P 10.1
CB105 (6A) P 22.1
CB70 (6A) P 13.1
CB79(15A)P15.2,15.4
F6 (5A) P 5.1
F7 (5A) P 8.1
F46 (7.5A) P 16.1
FRONT JCT. BOX
L
24D-14
24D-14
24-24D-12
24-24DA-14
F49 (20A) P 14.1
F50 (20A) P 14.1
CB73(15A)P15.1, 15.4
RR. JCT. BOX
24D-16
24D-16
24-24D-14
24D-16
F4 (5A) P 7.1
F26 (5A) P 14.1
CB85 (6A) P 11.2
FR. JCT. BOX
12V,24V DISTRIBUTION
24V BATT. DISCONN. SW.
24V IGNITION
24V HOT WIRE

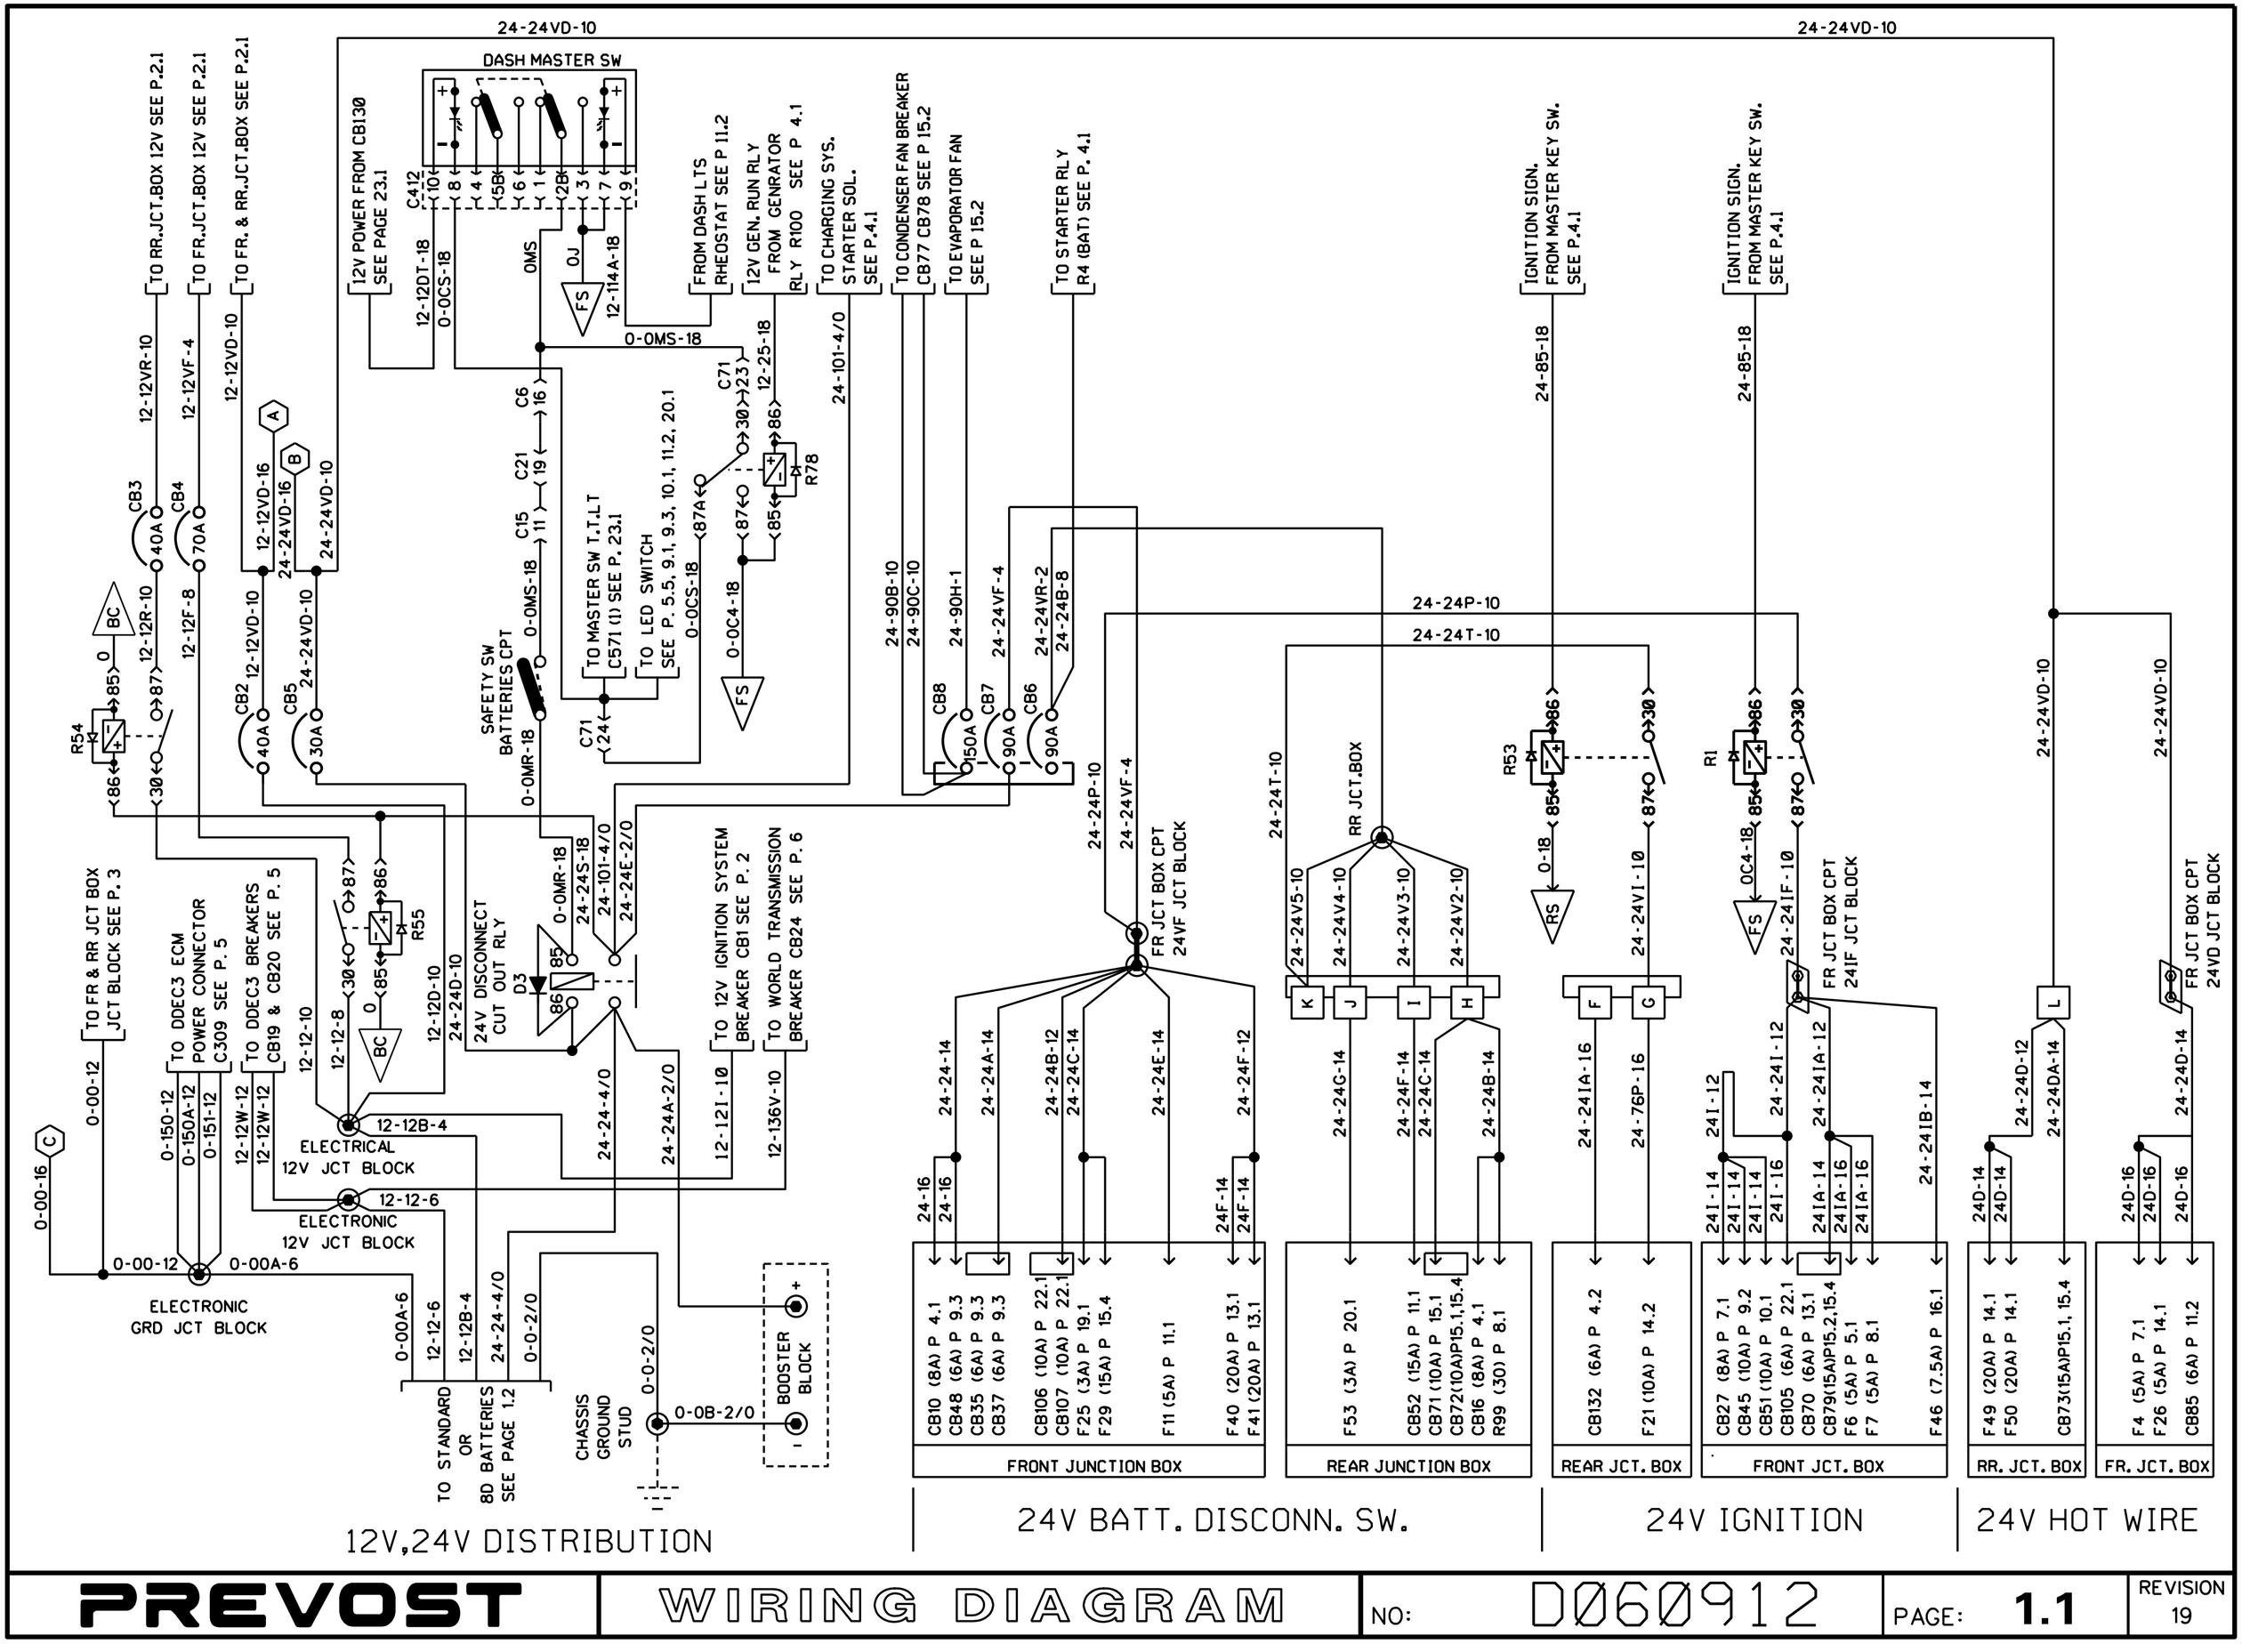
24-24VD-10
DASH MASTER SW
12V POWER FROM CB130 SEE PAGE 23.1
C412
12-12DT-18
0-0CS-18
OMS
OJ
FS
12-114A-18
FROM DASH LTS RHEOSTAT SEE P 11.2
0-0MS-18
12V GEN. RUN RLY FROM GENRATOR RLY R100 SEE P 4.1
TO CHARGING SYS. STARTER SOL. SEE P.4.1
TO CONDENSER FAN BREAKER CB77 CB78 SEE P 15.2
TO EVAPORATOR FAN SEE P 15.2
TO STARTER RLY R4 (BAT) SEE P. 4.1
IGNITION SIGN. FROM MASTER KEY SW. SEE P.4.1
24-85-18
TO FR. & RR.JCT.BOX SEE P.2.1
TO FR.JCT.BOX 12V SEE P.2.1
TO RR.JCT.BOX 12V SEE P.2.1
12-12VD-10
12-12VR-10
12-12VF-4
CB3
CB4
40A
70A
BC
R54
12-12R-10
12-12F-8
12-12VD-16
24-24VD-16
24-24VD-10
CB2
CB5
30A
SAFETY SW BATTERIES CPT
0-0MR-18
C15
C21
C6
C71
TO MASTER SW T.T.L.T C571 (1) SEE P. 23.1
TO LED SWITCH SEE P. 5.5, 9.1, 9.3, 10.1, 11.2, 20.1
0-0C4-18
87A
30
86
85
R78
12-25-18
24-90B-10
24-90C-10
24-90H-1
24-24VF-4
24-24VR-2
24-24B-8
CB8
CB7
CB6
150A
90A
24-24P-10
24-24T-10
RR JCT.BOX
FR JCT BOX CPT 24VF JCT BLOCK
R53
R1
24-24V5-10
24-24V4-10
24-24V3-10
24-24V2-10
0-18
RS
24-24V1-10
0C4-18
24-24IF-10
FR JCT BOX CPT 24IF JCT BLOCK
24-24VD-10
TO FR & RR JCT BOX JCT BLOCK SEE P. 3
0-00-12
0-00-16
C
TO DDEC3 ECM POWER CONNECTOR C309 SEE P. 5
TO DDEC3 BREAKERS CB19 & CB20 SEE P. 5
0-150-12
0-150A-12
0-151-12
12-12W-12
12-12-10
12-12-8
12-12D-10
24-24D-10
24V DISCONNECT CUT OUT RLY
D3
0-0MR-18
24-24S-18
24-101-4/0
24-24E-2/0
TO 12V IGNITION SYSTEM BREAKER CB1 SEE P. 2
TO WORLD TRANSMISSION BREAKER CB24 SEE P. 6
12-121-10
12-136V-10
24-24-4/0
24-24A-2/0
12-12B-4
ELECTRICAL 12V JCT BLOCK
12-12-6
ELECTRONIC 12V JCT BLOCK
0-00A-6
ELECTRONIC GRD JCT BLOCK
TO STANDARD OR 8D BATTERIES SEE PAGE 1.2
12-12B-4
24-24-4/0
0-0-2/0
CHASSIS GROUND STUD
0-0B-2/0
BOOSTER BLOCK
24-24-14
24-24A-14
24-24B-12
24-24C-14
24-24E-14
24-24F-12
24-16
24F-14
CB10 (8A) P 4.1
CB48 (6A) P 9.3
CB35 (6A) P 9.3
CB37 (6A) P 9.3
CB106 (10A) P 22.1
CB107 (10A) P 22.1
F25 (3A) P 19.1
F29 (15A) P 15.4
F11 (5A) P 11.1
F40 (20A) P 13.1
F41 (20A) P 13.1
FRONT JUNCTION BOX
24-24G-14
24-24F-14
24-24C-14
24-24B-14
F53 (3A) P 20.1
CB52 (15A) P 11.1
CB71 (10A) P 15.1
CB72(10A)P15.1,15.4
CB16 (8A) P 4.1
R99 (30) P 8.1
REAR JUNCTION BOX
24-241A-16
24-76P-16
CB132 (6A) P 4.2
F21 (10A) P 14.2
REAR JCT. BOX
24-241-12
24-241A-12
24-241B-14
241-12
241-14
241-16
241A-14
241A-16
CB27 (8A) P 7.1
CB45 (10A) P 9.2
CB51 (10A) P 10.1
CB105 (6A) P 22.1
CB70 (6A) P 13.1
CB79(15A)P15.2,15.4
F6 (5A) P 5.1
F7 (5A) P 8.1
F46 (7.5A) P 16.1
FRONT JCT. BOX
24-24D-12
24-24DA-14
24D-14
24D-16
F49 (20A) P 14.1
F50 (20A) P 14.1
CB73(15A)P15.1, 15.4
RR. JCT. BOX
F4 (5A) P 7.1
F26 (5A) P 14.1
CB85 (6A) P 11.2
FR. JCT. BOX
12V,24V DISTRIBUTION
24V BATT. DISCONN. SW.
24V IGNITION
24V HOT WIRE

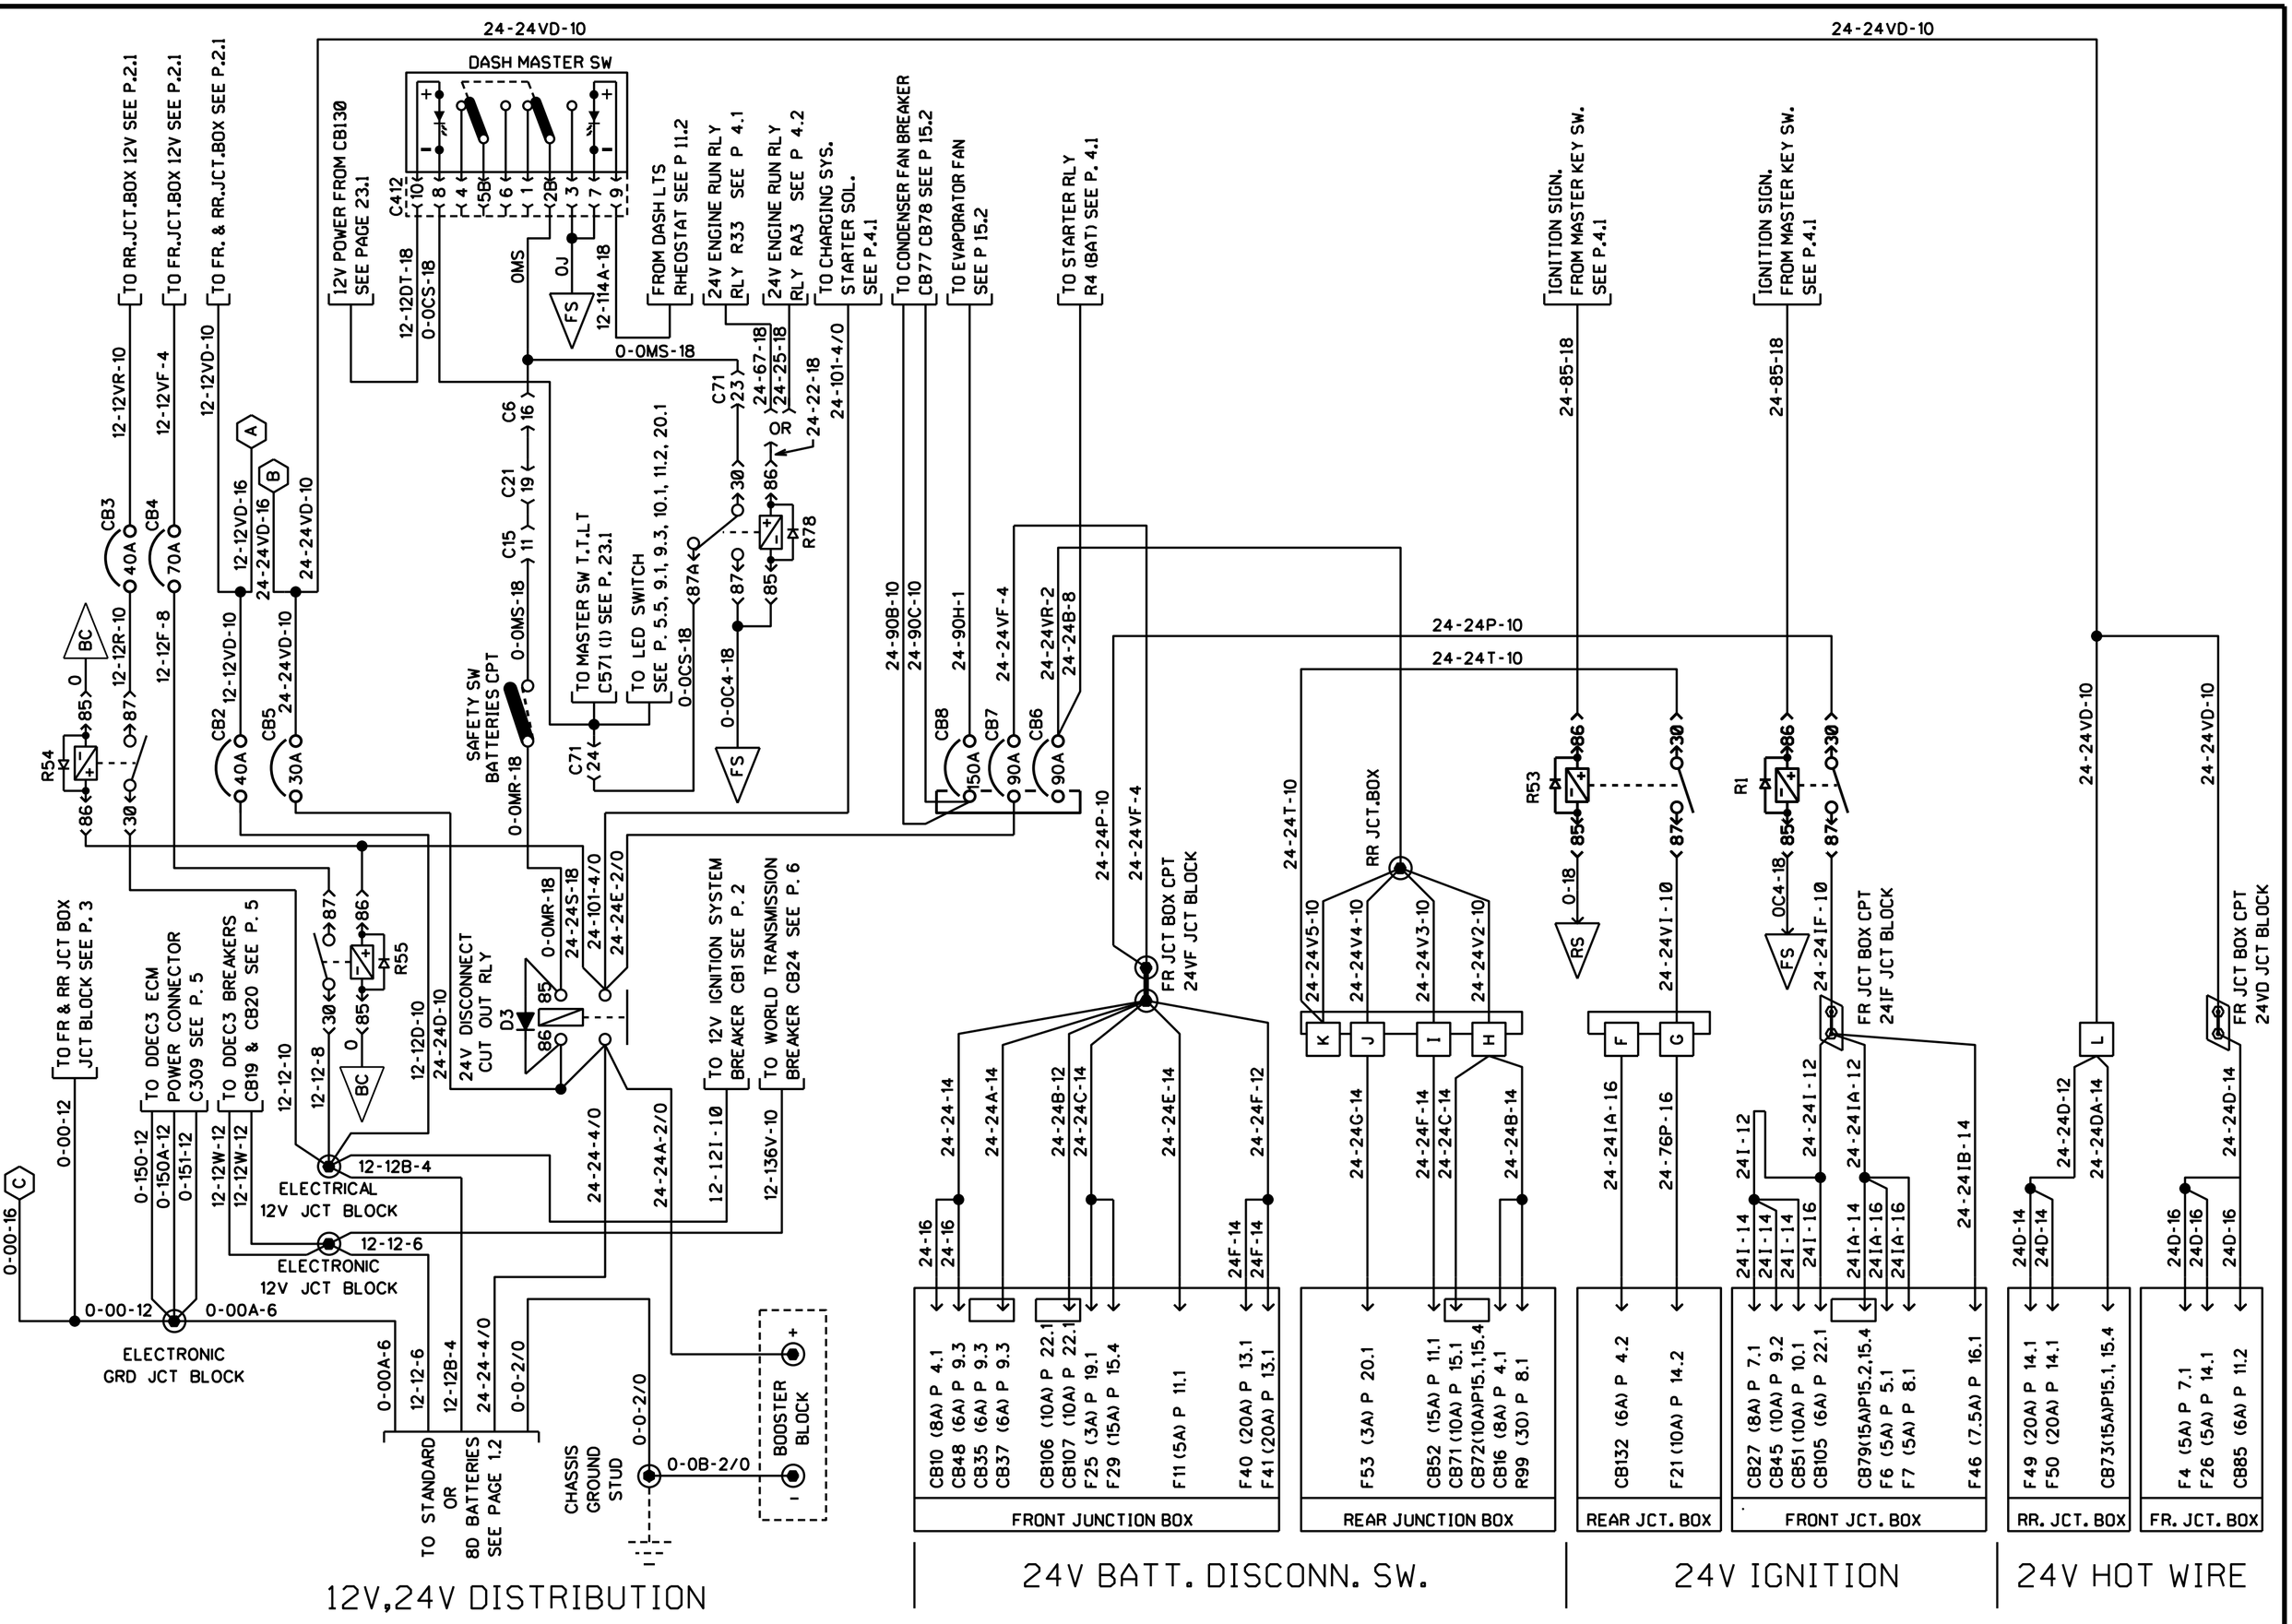
24-24VD-10
DASH MASTER SW
12V POWER FROM CB130
SEE PAGE 23.1
C412
12-12DT-18
0-0CS-18
0MS
0J
FS
12-114A-18
FROM DASH LTS
RHEOSTAT SEE P 11.2
0-0MS-18
24V ENGINE RUN RLY
RLY R33 SEE P 4.1
24V ENGINE RUN RLY
RLY RA3 SEE P 4.2
TO CHARGING SYS.
STARTER SOL.
SEE P.4.1
TO CONDENSER FAN BREAKER
CB77 CB78 SEE P 15.2
TO EVAPORATOR FAN
SEE P 15.2
TO STARTER RLY
R4 (BAT) SEE P. 4.1
IGNITION SIGN.
FROM MASTER KEY SW.
SEE P.4.1
TO FR.JCT.BOX 12V SEE P.2.1
TO RR.JCT.BOX 12V SEE P.2.1
TO FR. & RR.JCT.BOX SEE P.2.1
12-12VR-10
12-12VF-4
12-12VD-10
12-12VD-16
24-24VD-16
24-24VD-10
CB3
CB4
CB2
CB5
40A
70A
30A
R54
BC
SAFETY SW
BATTERIES CPT
0-0MR-18
C71
C6
C21
C15
TO MASTER SW T.T.L.T
C571 (1) SEE P. 23.1
TO LED SWITCH
SEE P. 5.5, 9.1, 9.3, 10.1, 11.2, 20.1
0-0CS-18
0-0C4-18
C71
24-67-18
24-25-18
24-22-18
24-101-4/0
R78
24-90B-10
24-90C-10
24-90H-1
24-24VF-4
24-24VR-2
24-24B-8
CB8
CB7
CB6
150A
90A
24-24P-10
24-24T-10
24-24VF-4
FR JCT BOX CPT
24VF JCT BLOCK
RR JCT.BOX
R53
R1
24-85-18
0-18
RS
OC4-18
FS
24-24VI-10
24-24IF-10
FR JCT BOX CPT
24IF JCT BLOCK
24-24V5-10
24-24V4-10
24-24V3-10
24-24V2-10
K
J
I
H
F
G
L
24-24D-12
24-24DA-14
24-24D-14
24-16
24-24-14
24-24A-14
24-24B-12
24-24C-14
24-24E-14
24-24F-12
24-24G-14
24-24F-14
24-24C-14
24-24B-14
24-24IA-16
24-76P-16
24-24I-12
24-24IA-12
24-24IB-14
24F-14
24I-12
24I-14
24I-16
24IA-14
24IA-16
24D-14
24D-16
TO FR & RR JCT BOX
JCT BLOCK SEE P. 3
TO DDEC3 ECM
POWER CONNECTOR
C309 SEE P. 5
TO DDEC3 BREAKERS
CB19 & CB20 SEE P. 5
0-00-12
0-150-12
0-150A-12
0-151-12
12-12W-12
12-12-10
12-12-8
12-12D-10
24-24D-10
24V DISCONNECT
CUT OUT RLY
D3
0-0MR-18
24-24S-18
24-101-4/0
24-24E-2/0
TO 12V IGNITION SYSTEM
BREAKER CB1 SEE P. 2
TO WORLD TRANSMISSION
BREAKER CB24 SEE P. 6
12-121-10
12-136V-10
24-24-4/0
24-24A-2/0
12-12B-4
ELECTRICAL
12V JCT BLOCK
12-12-6
ELECTRONIC
12V JCT BLOCK
0-00-16
0-00A-6
ELECTRONIC
GRD JCT BLOCK
0-0-2/0
TO STANDARD
OR
8D BATTERIES
SEE PAGE 1.2
CHASSIS
GROUND
STUD
0-0B-2/0
BOOSTER
BLOCK
CB10 (8A) P 4.1
CB48 (6A) P 9.3
CB35 (6A) P 9.3
CB37 (6A) P 9.3
CB106 (10A) P 22.1
CB107 (10A) P 22.1
F25 (3A) P 19.1
F29 (15A) P 15.4
F11 (5A) P 11.1
F40 (20A) P 13.1
F41 (20A) P 13.1
FRONT JUNCTION BOX
F53 (3A) P 20.1
CB52 (15A) P 11.1
CB71 (10A) P 15.1
CB72(10A)P15.1,15.4
CB16 (8A) P 4.1
R99 (30) P 8.1
REAR JUNCTION BOX
CB132 (6A) P 4.2
F21 (10A) P 14.2
REAR JCT. BOX
CB27 (8A) P 7.1
CB45 (10A) P 9.2
CB51 (10A) P 10.1
CB105 (6A) P 22.1
CB79(15A)P15.2,15.4
F6 (5A) P 5.1
F7 (5A) P 8.1
F46 (7.5A) P 16.1
FRONT JCT. BOX
F49 (20A) P 14.1
F50 (20A) P 14.1
CB73(15A)P15.1, 15.4
RR. JCT. BOX
F4 (5A) P 7.1
F26 (5A) P 14.1
CB85 (6A) P 11.2
FR. JCT. BOX
12V,24V DISTRIBUTION
24V BATT. DISCONN. SW.
24V IGNITION
24V HOT WIRE

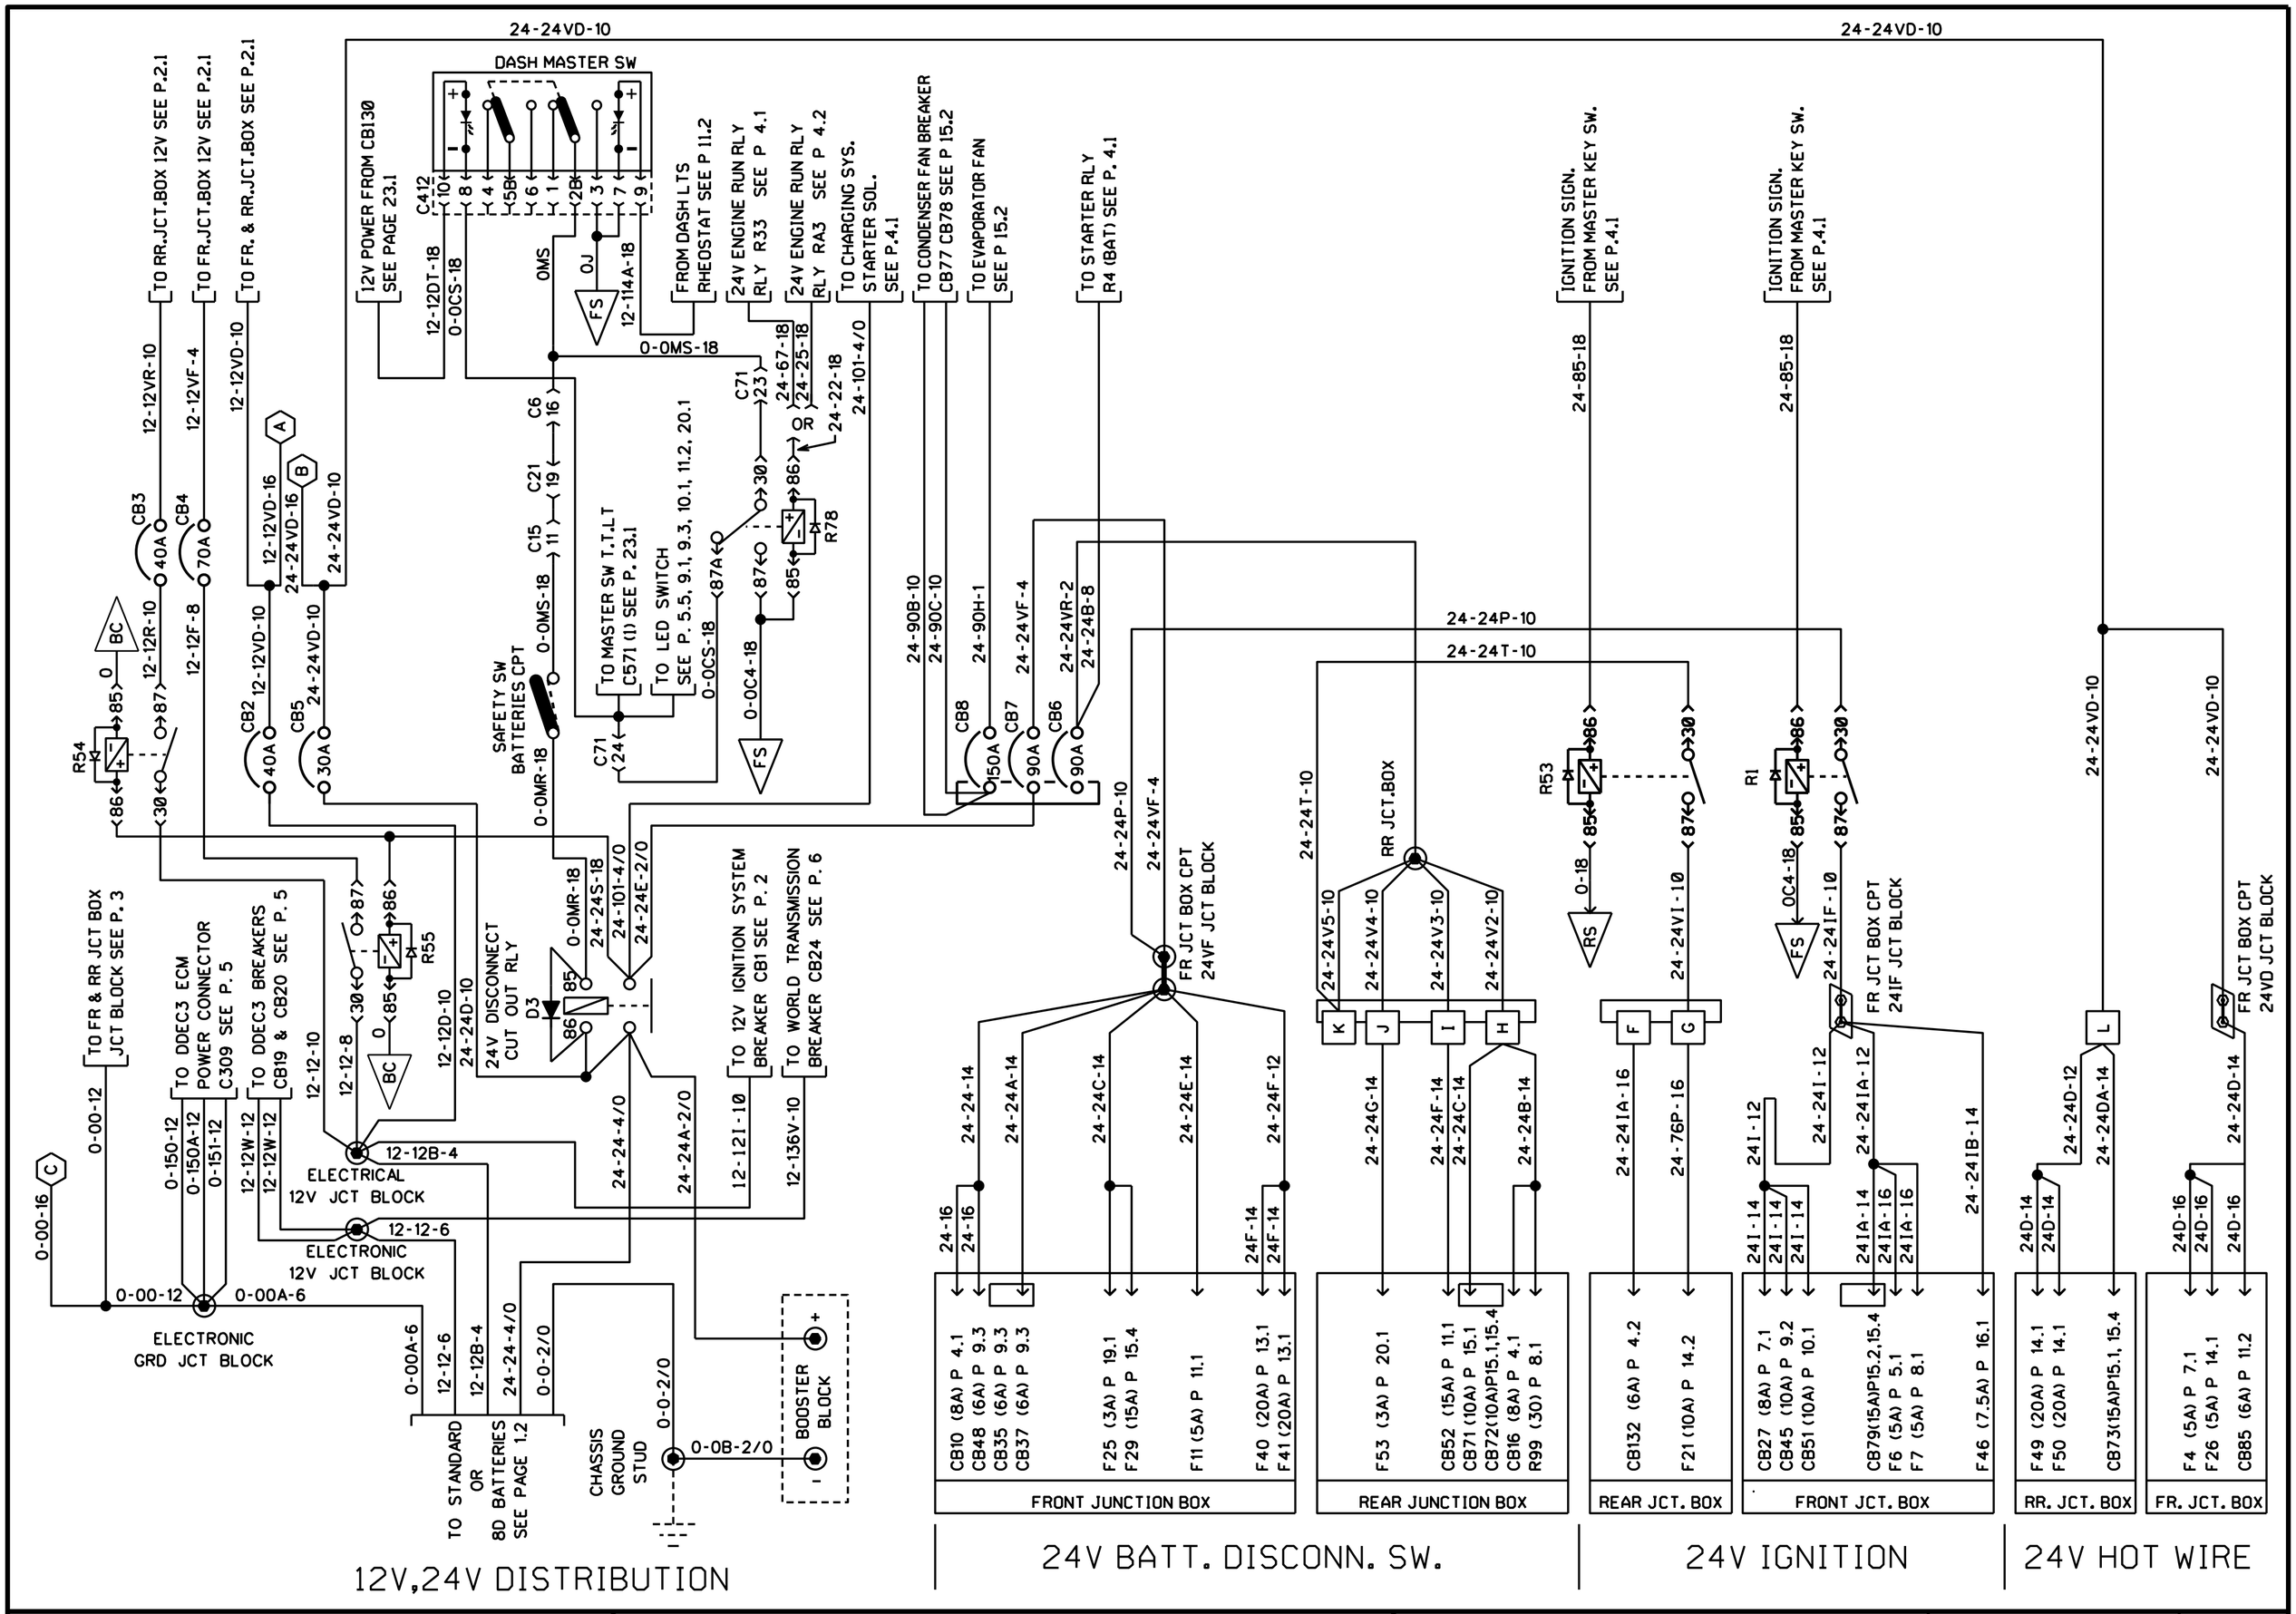

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 1.1	REVISION 22

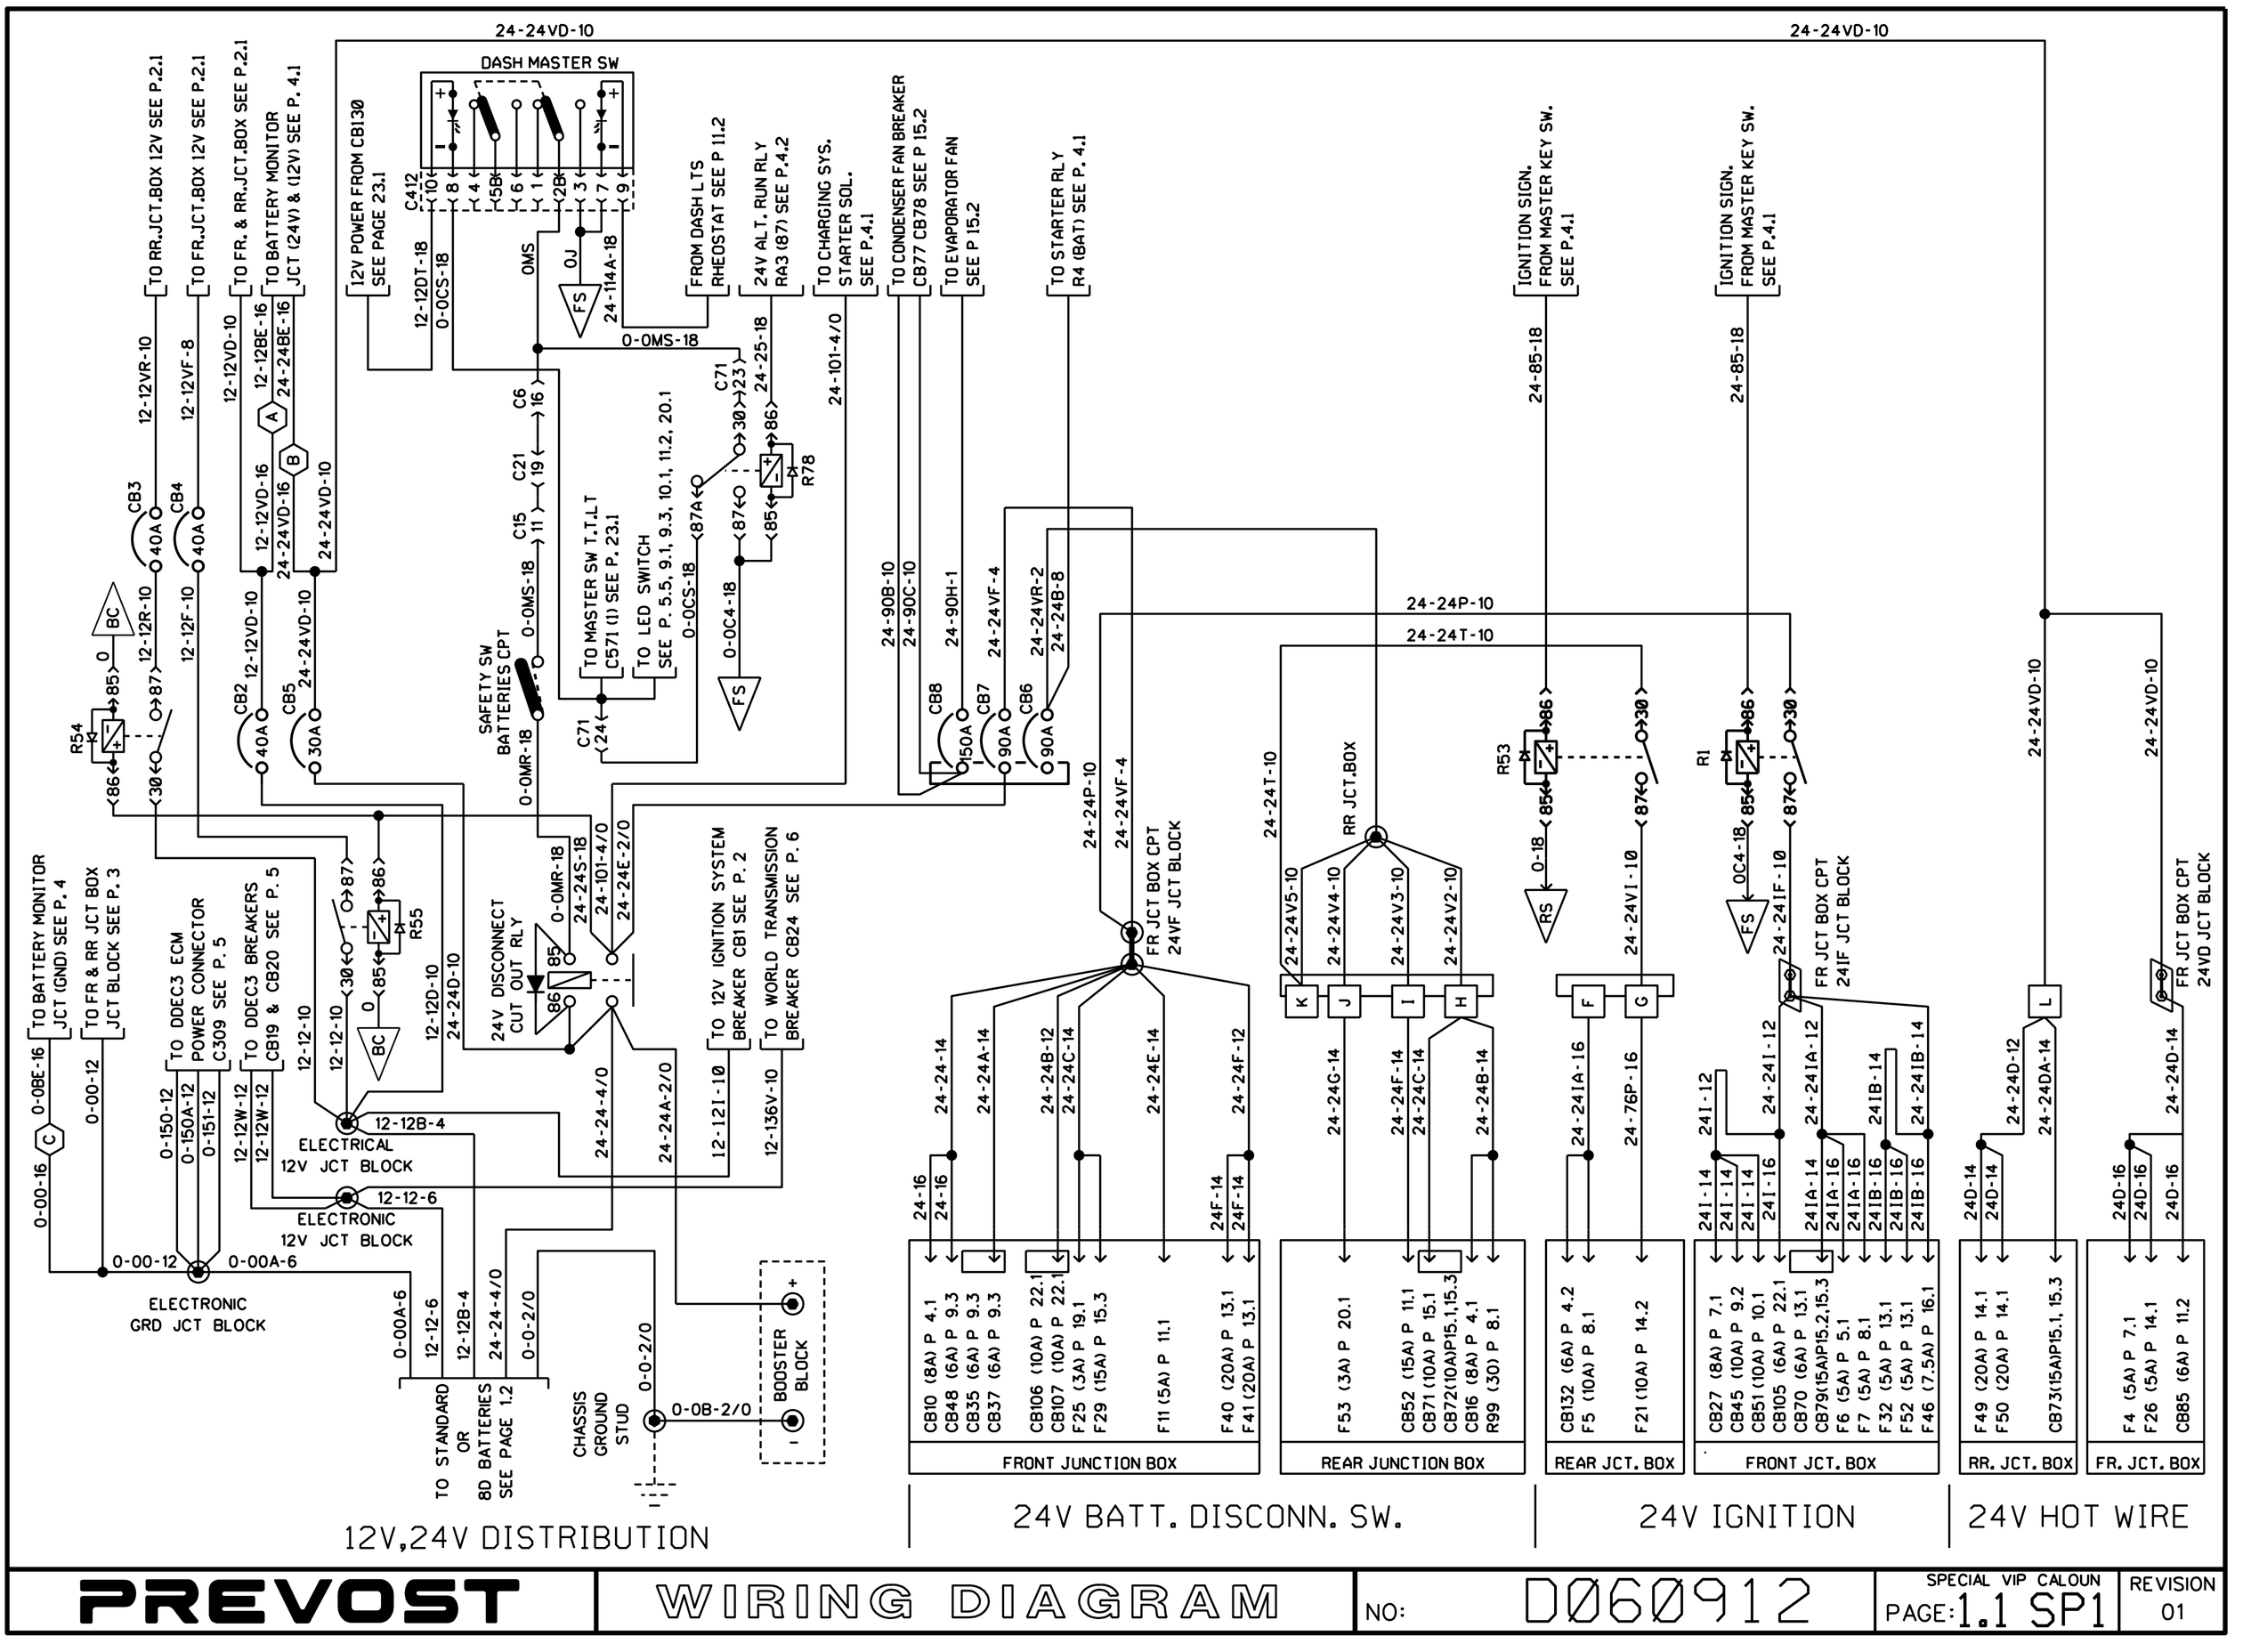

PREVOST | WIRING DIAGRAM | NO: D060912 | SPECIAL VIP CALOUN PAGE: 1.1 SP1 | REVISION 01

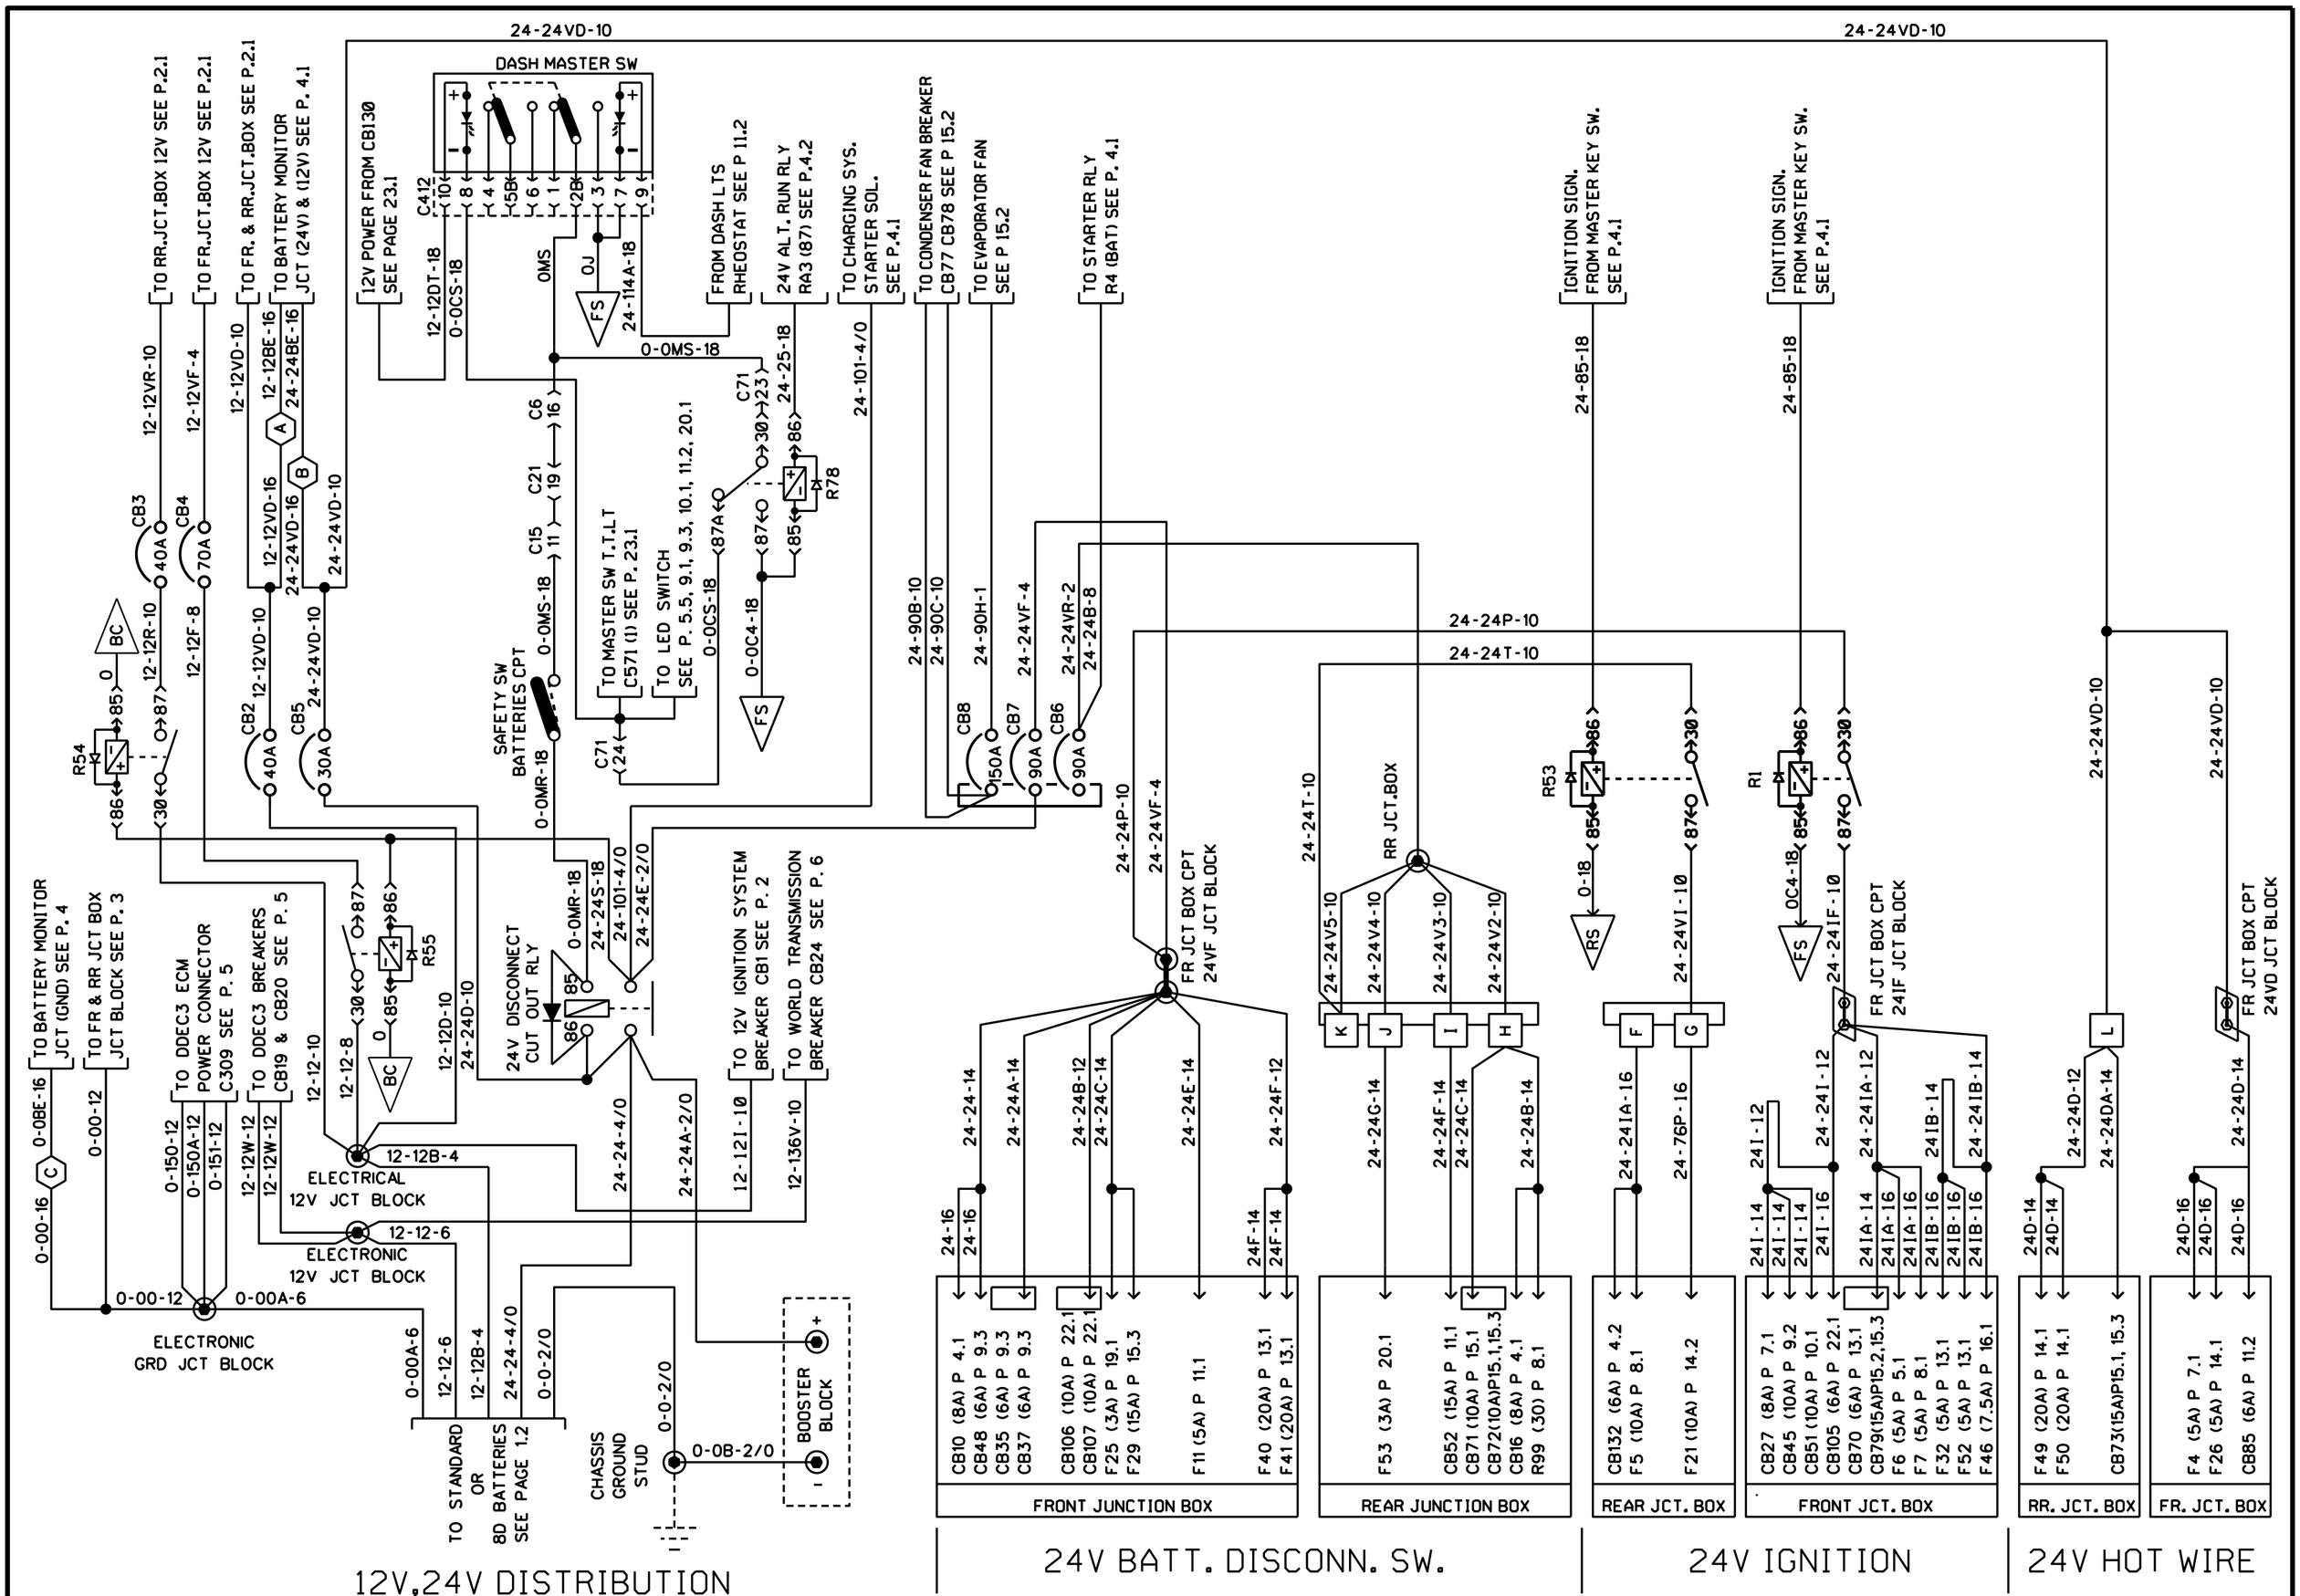

PREVOST	WIRING DIAGRAM	NO: D060912	SPECIAL VIP CALOUN PAGE: 1.1 SP1	REVISION 06

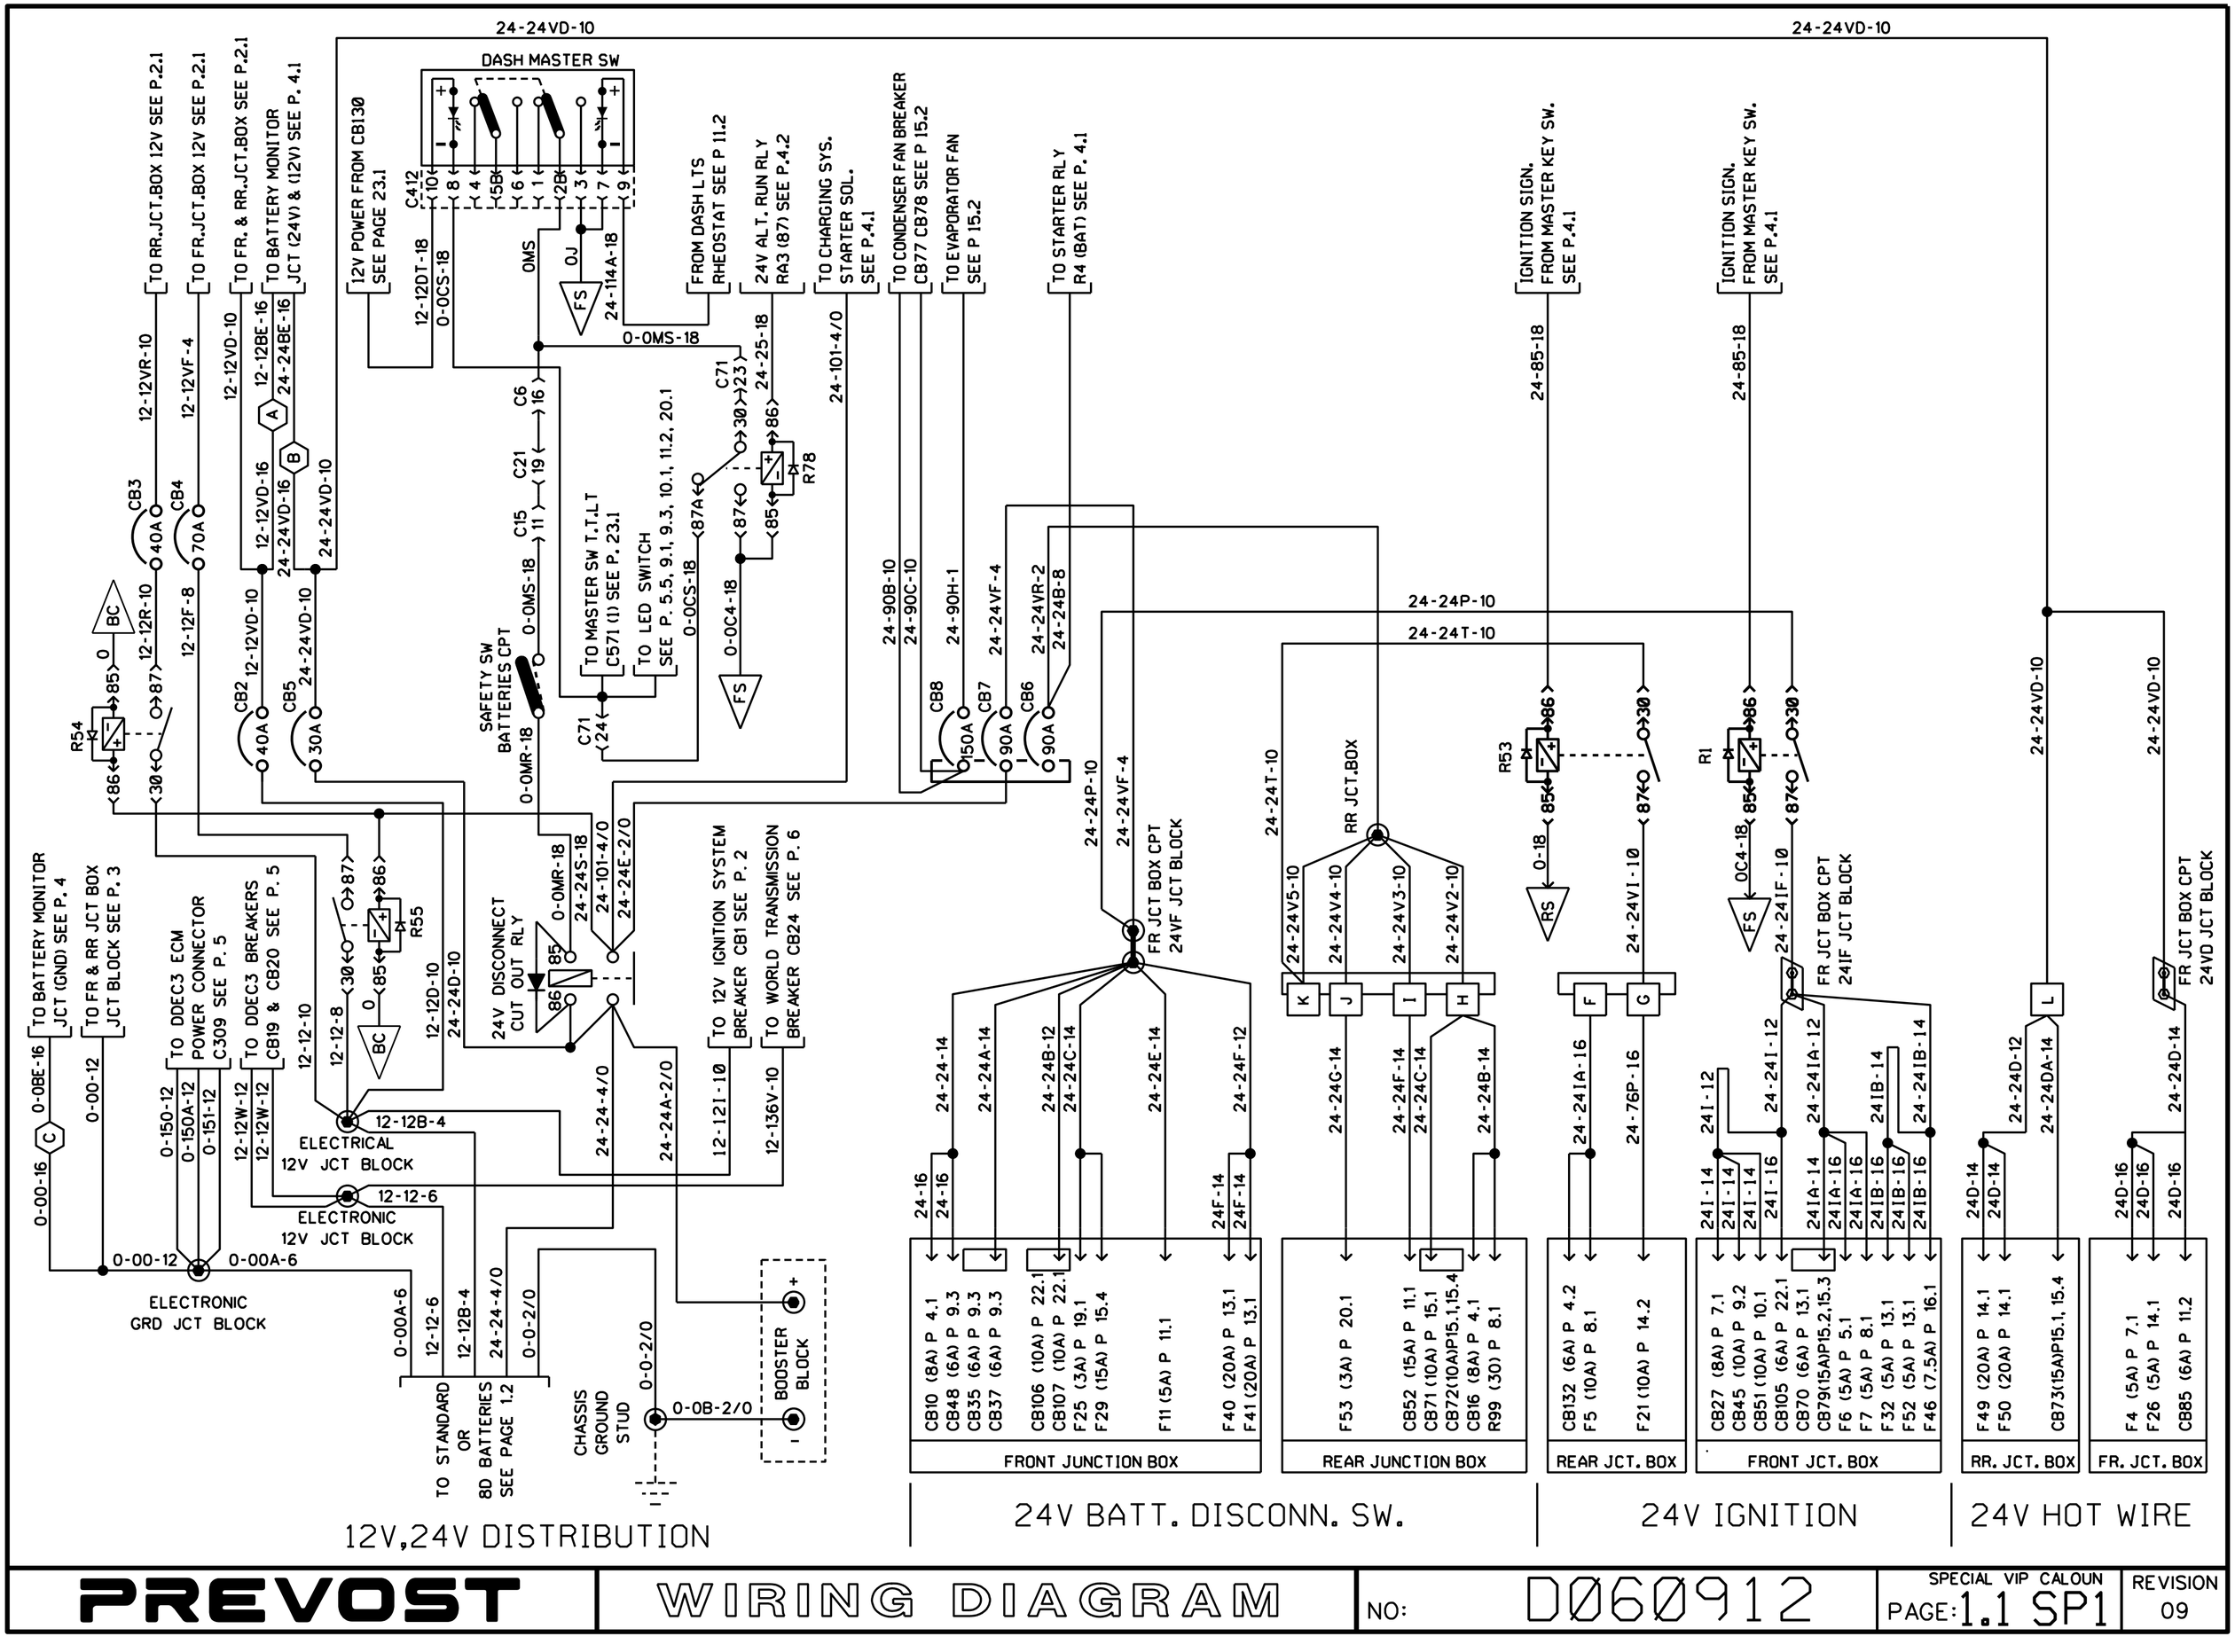

PREVOST	WIRING DIAGRAM	NO: D060912	SPECIAL VIP CALOUN PAGE: 1.1 SP1	REVISION 09

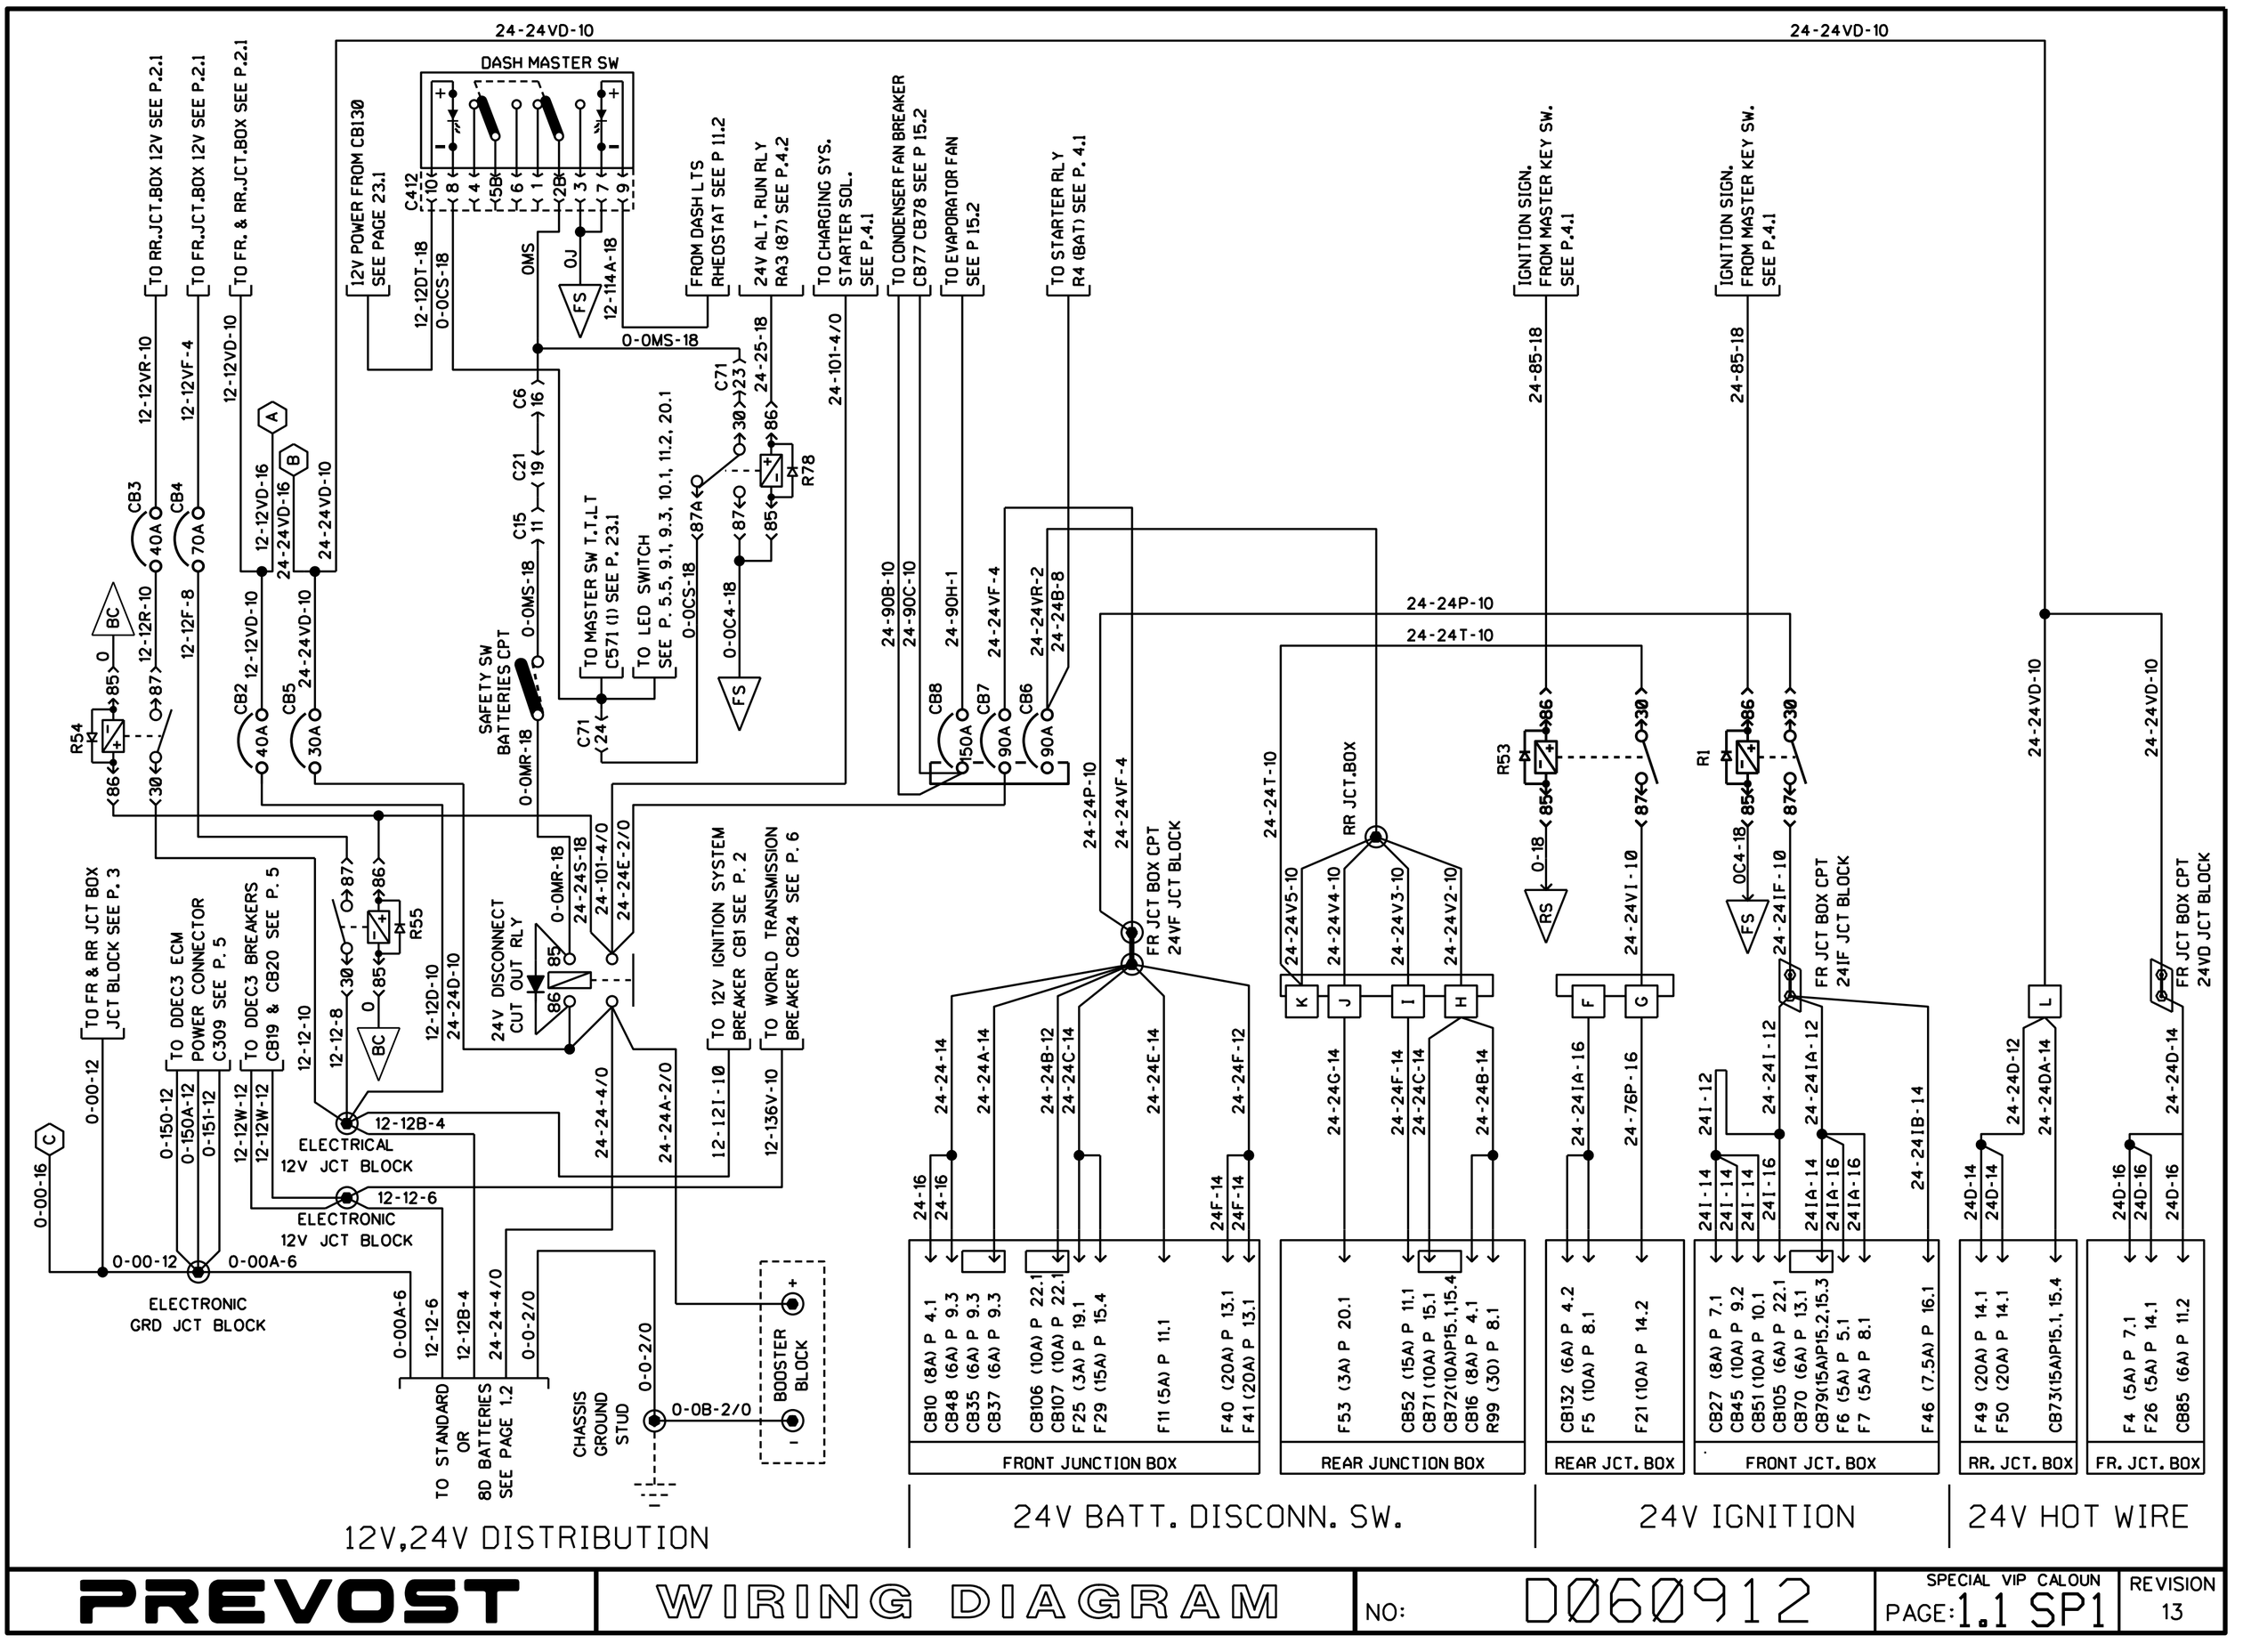

PREVOST | WIRING DIAGRAM | NO: D060912 | SPECIAL VIP CALOUN PAGE: 1.1 SP1 | REVISION 13

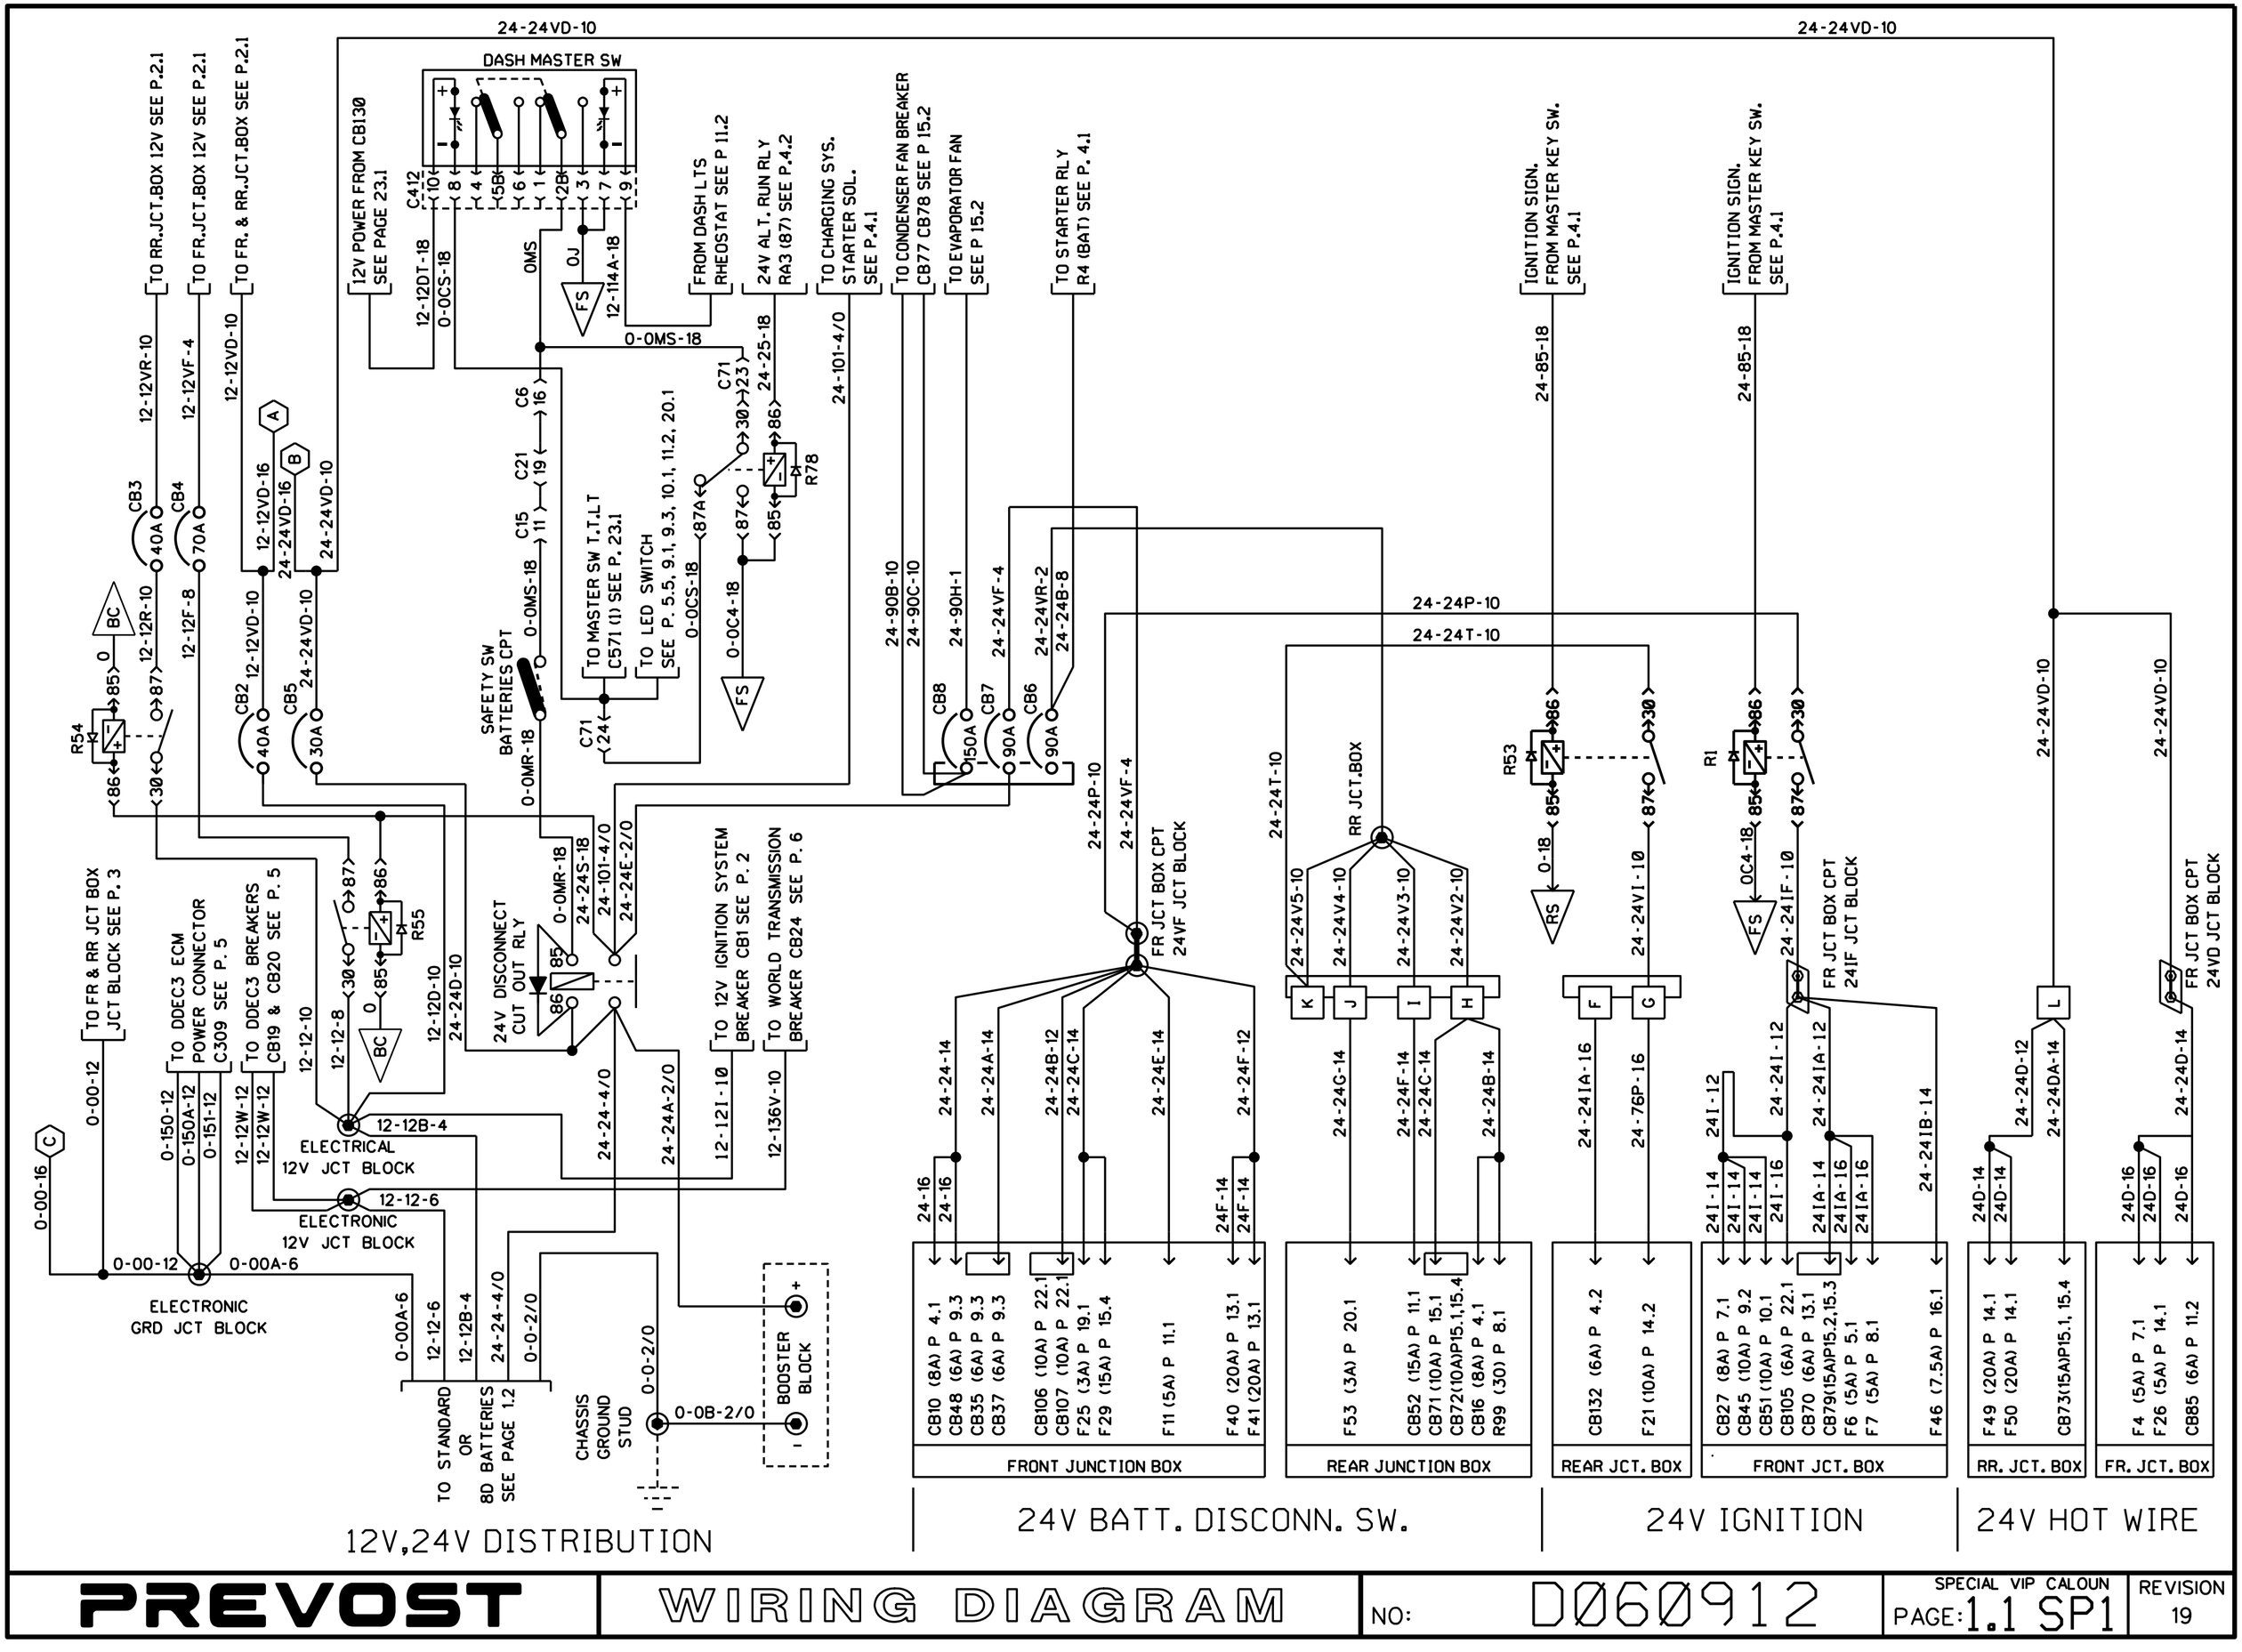

PREVOST	WIRING DIAGRAM	NO: D060912	SPECIAL VIP CALOUN PAGE: 1.1 SP1	REVISION 19

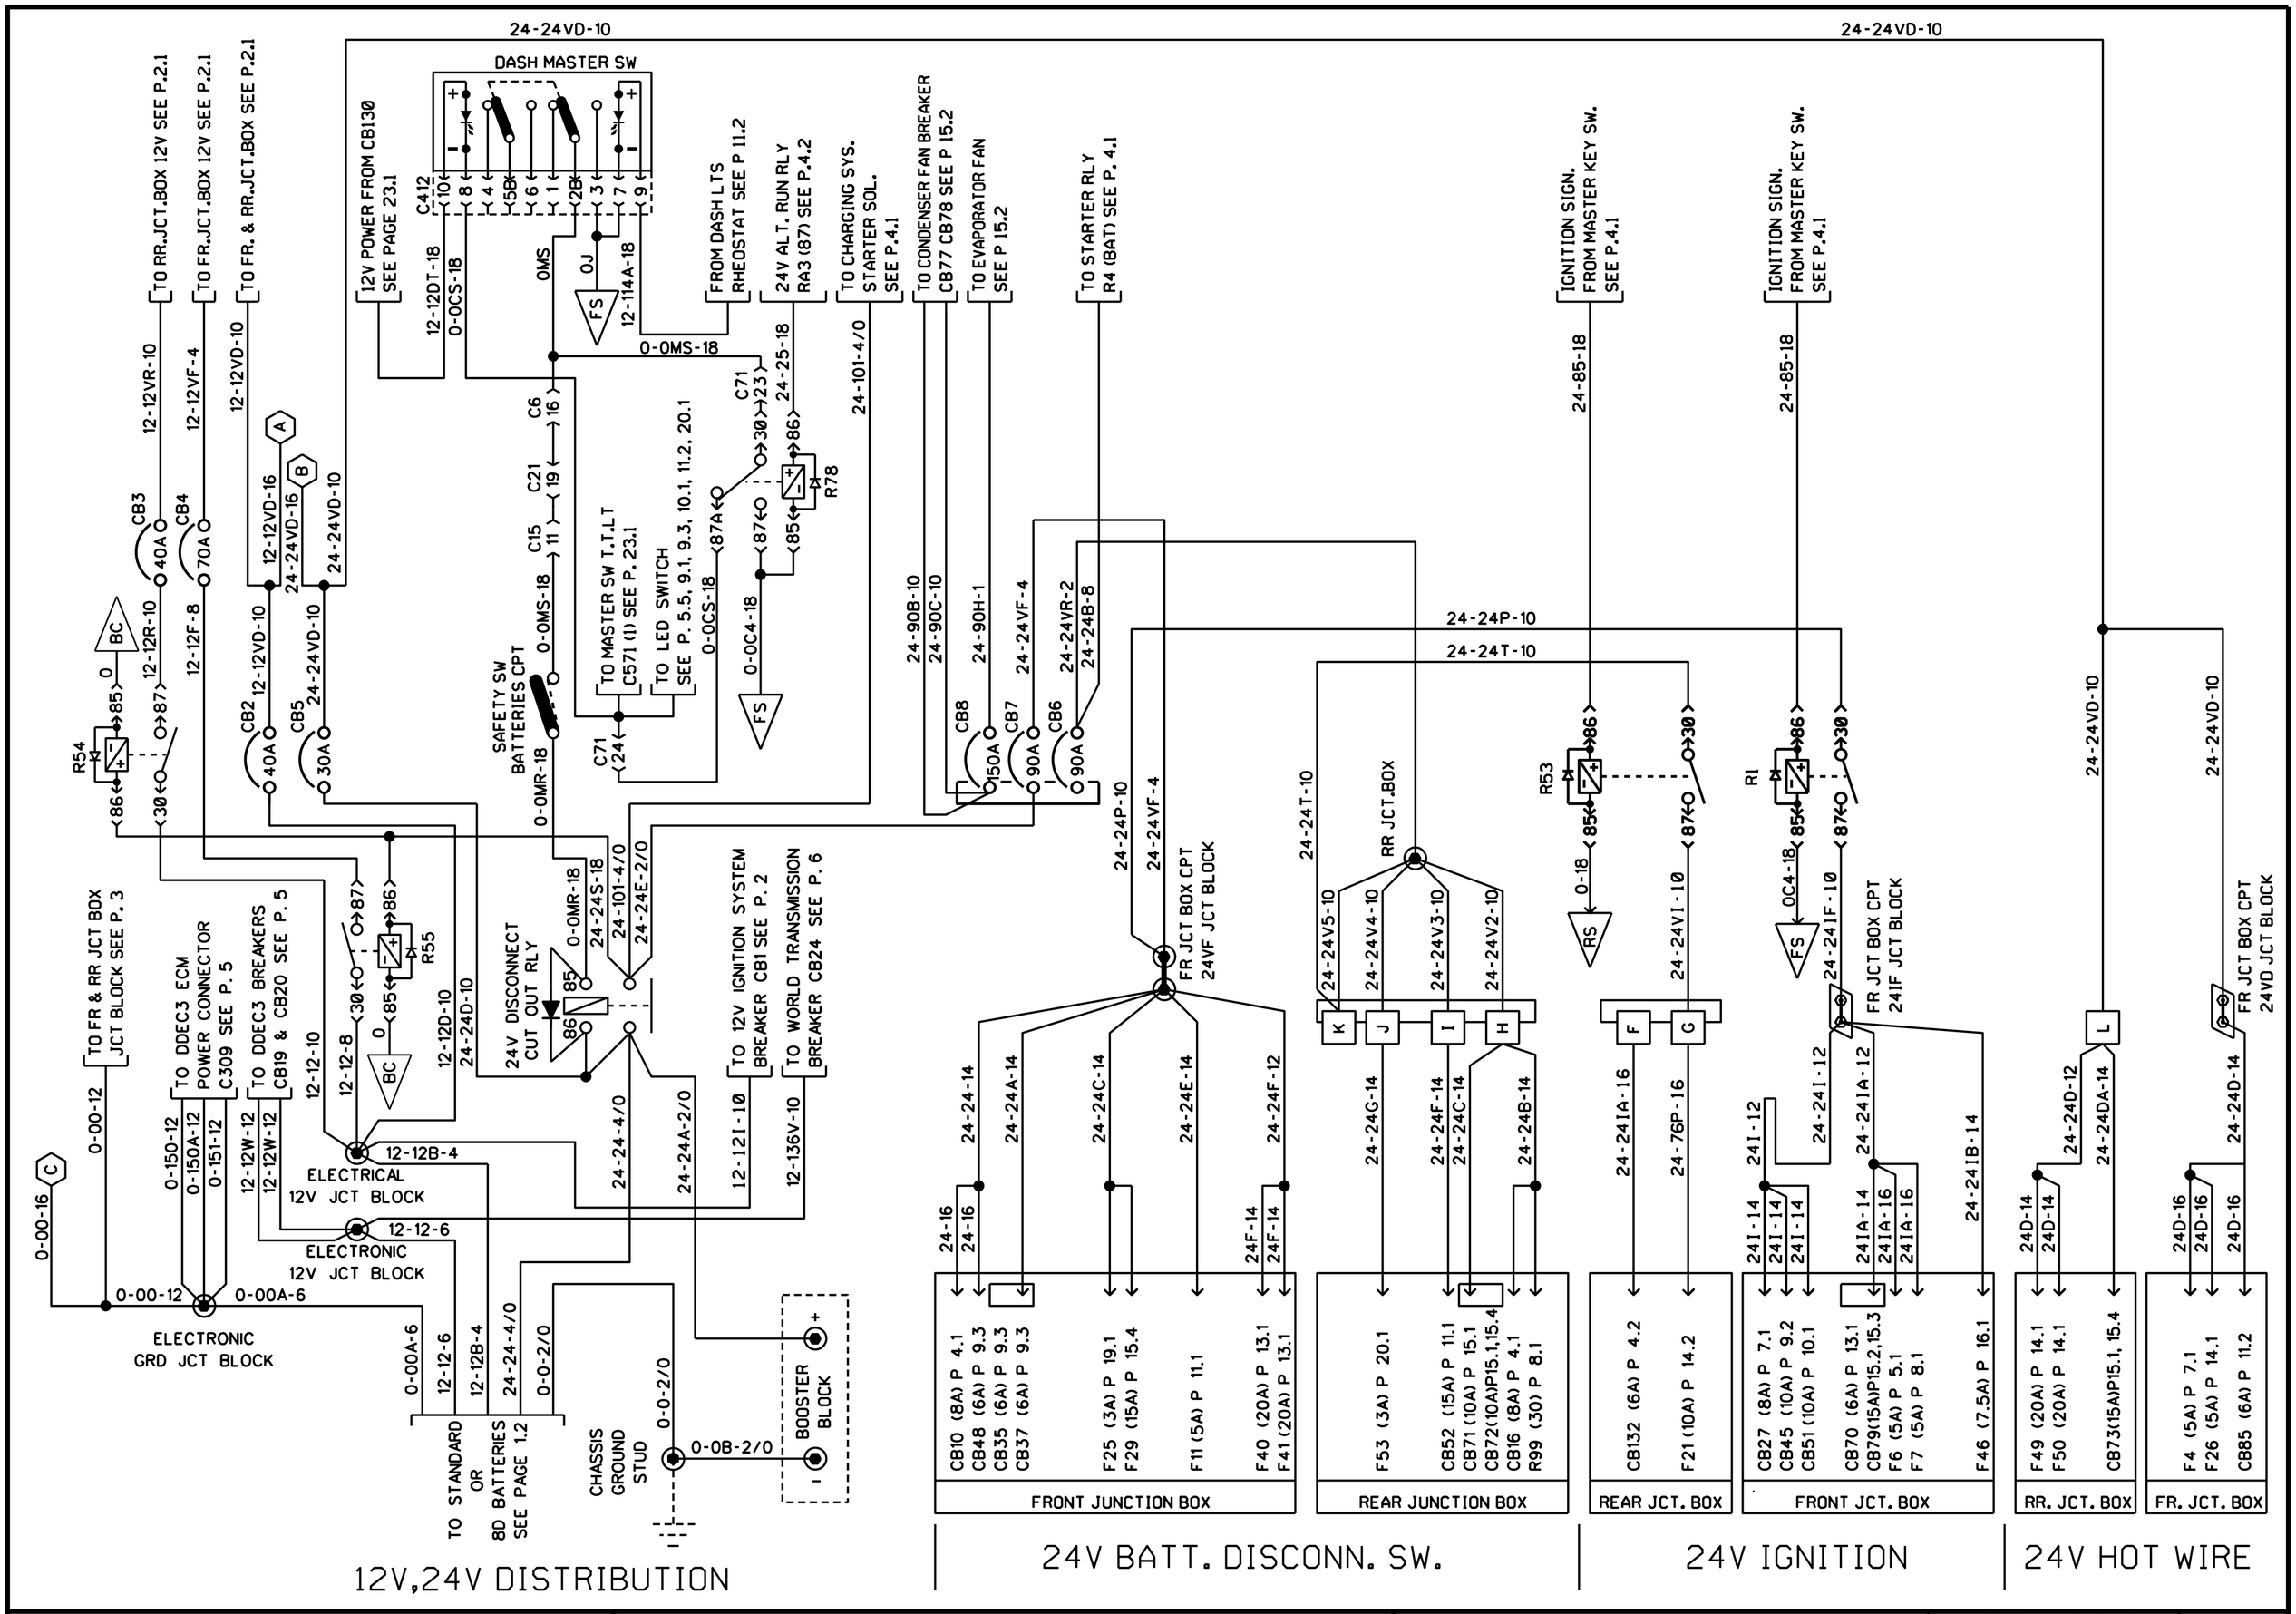

PREVOST	WIRING DIAGRAM	NO: D060912	SPECIAL VIP CALOUN PAGE: 1.1 SP1	REVISION 22

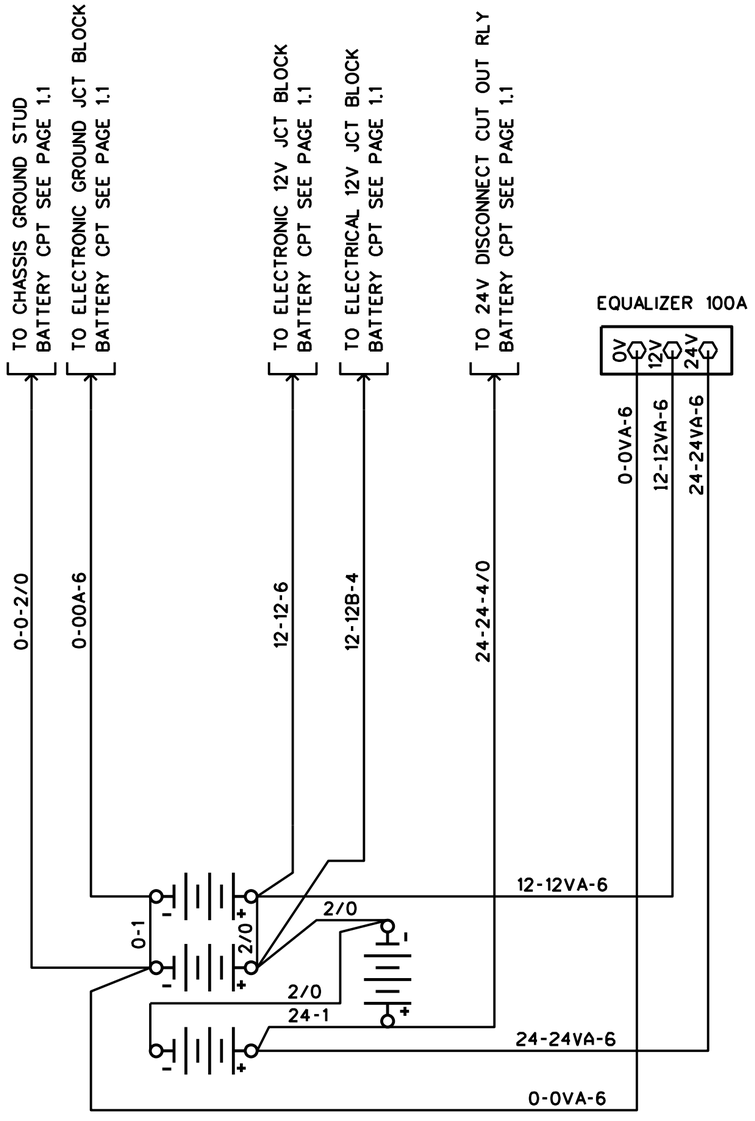

STANDARD BATTERIES

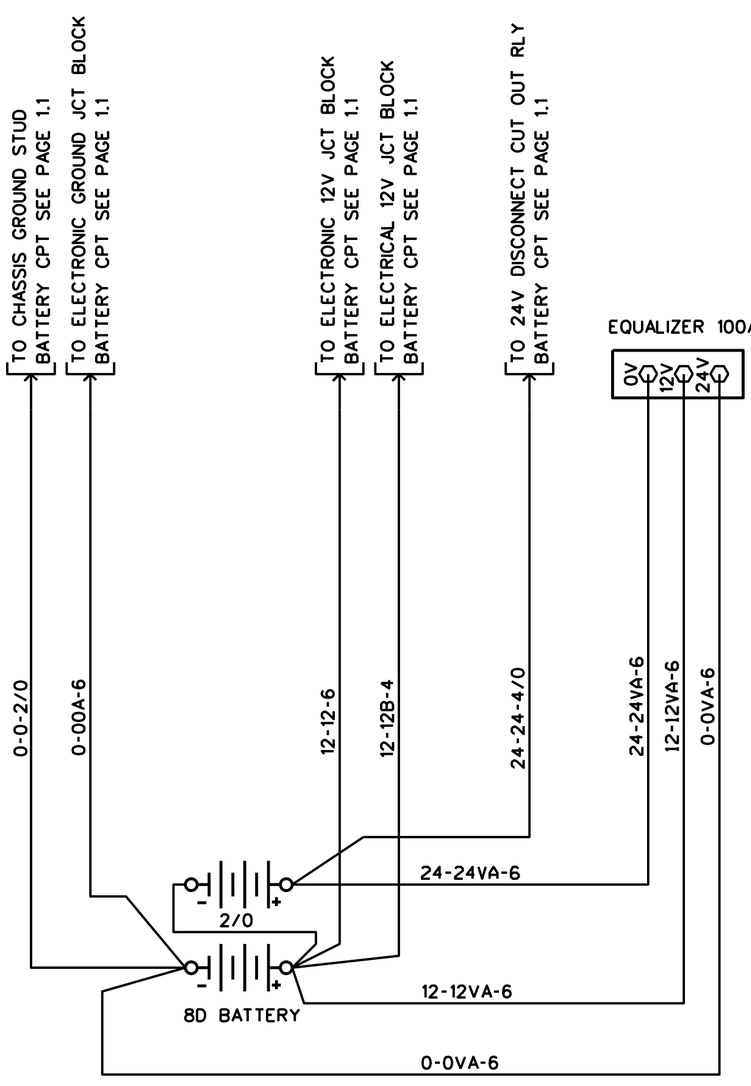

8D BATTERIES

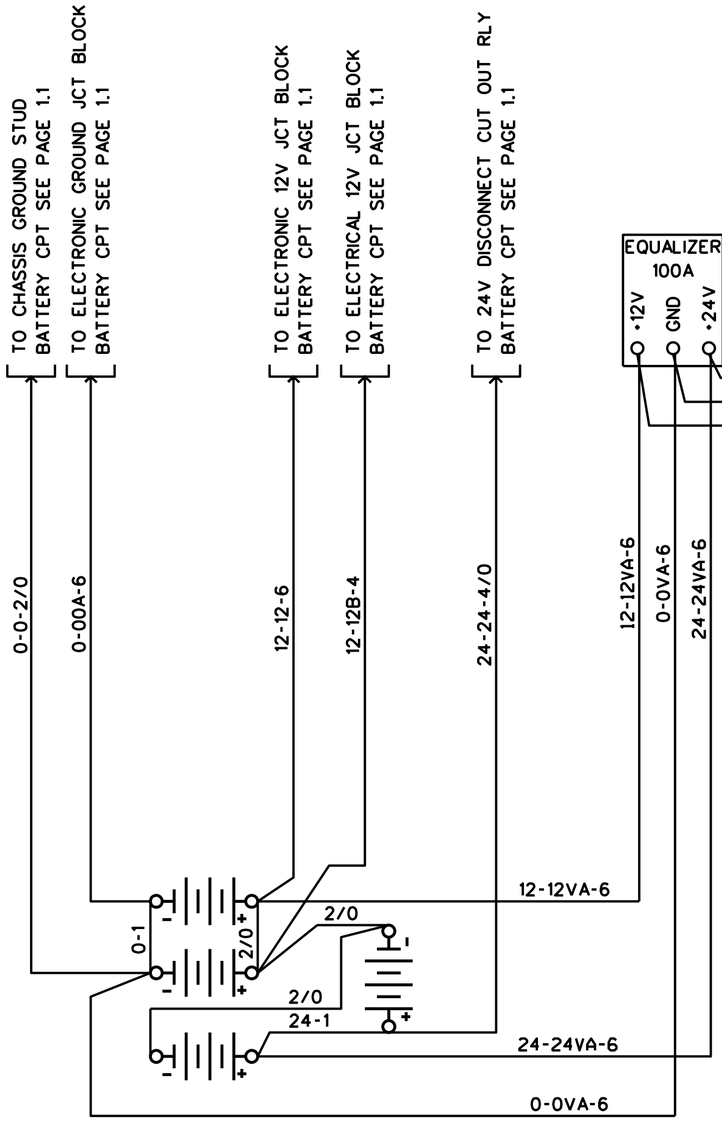

STANDARD BATTERIES

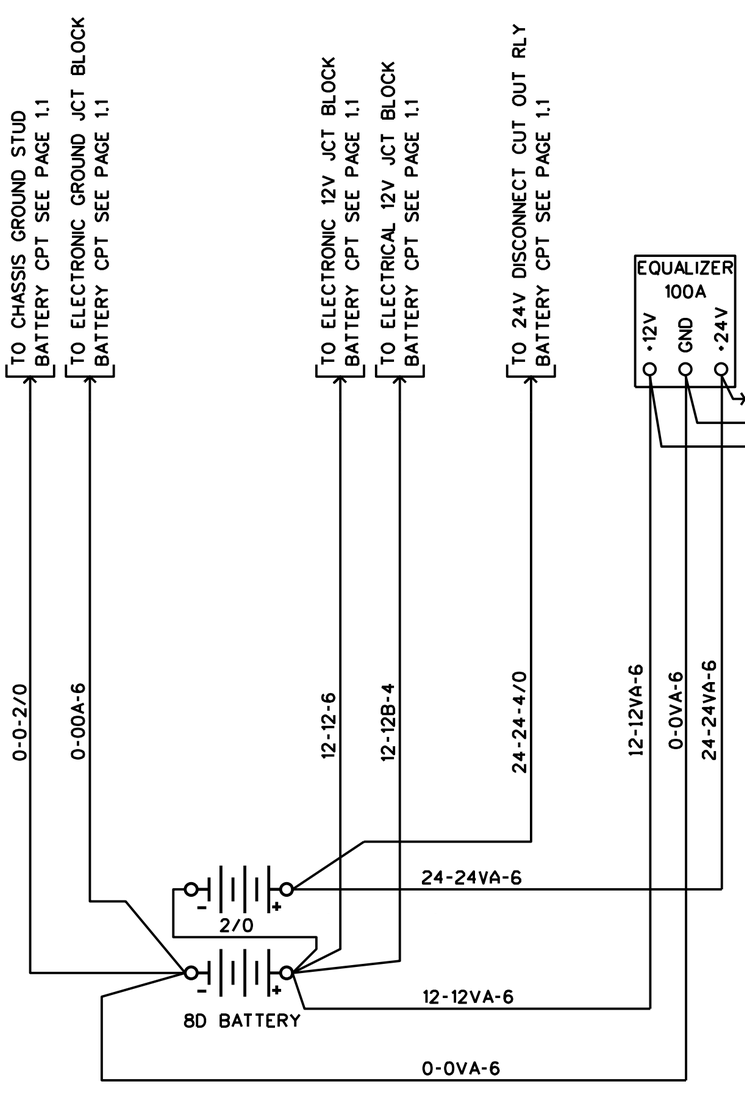

8D BATTERIES

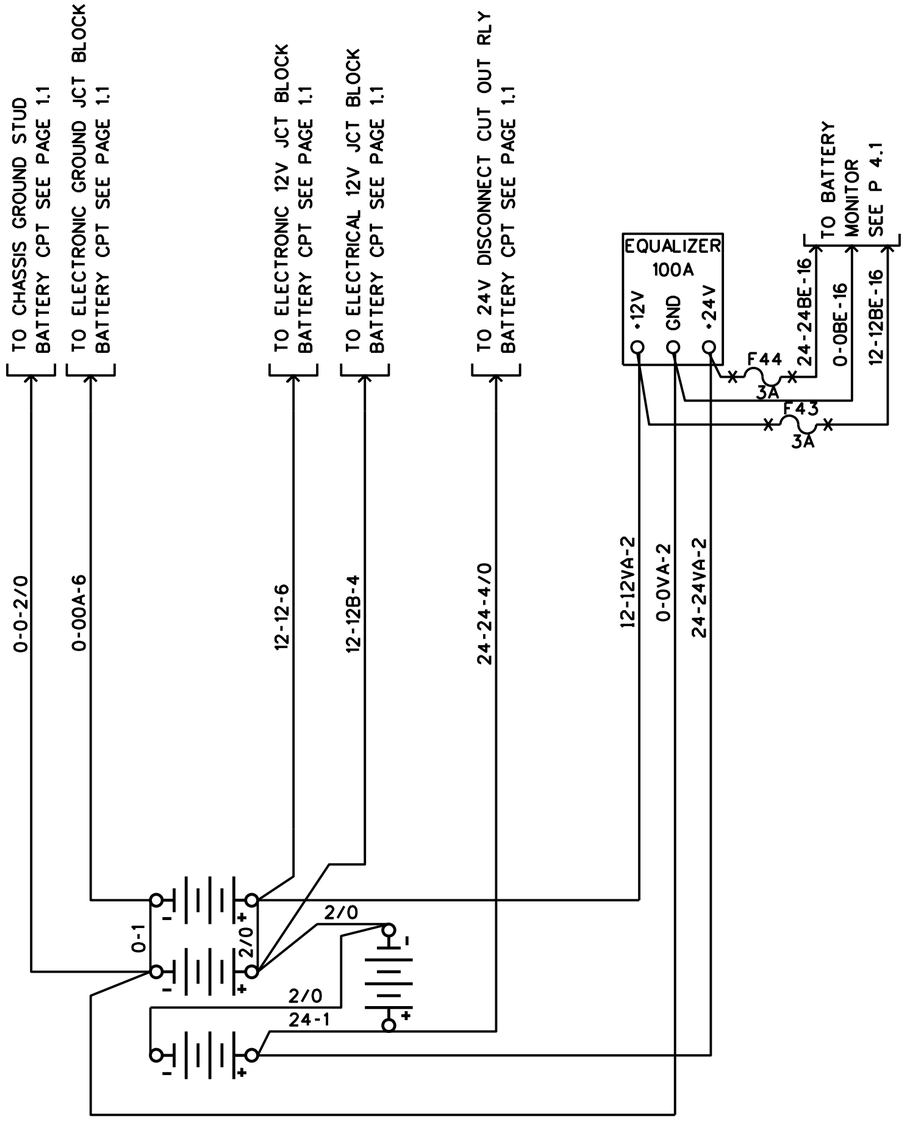

STANDARD BATTERIES

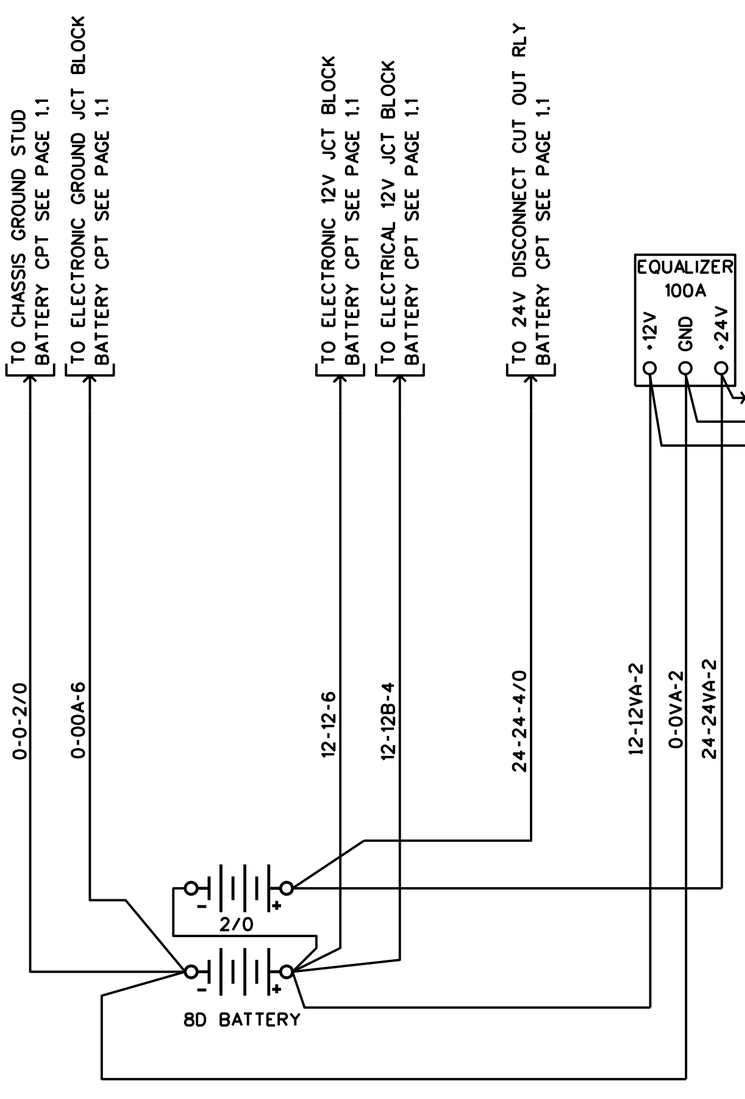

8D BATTERIES

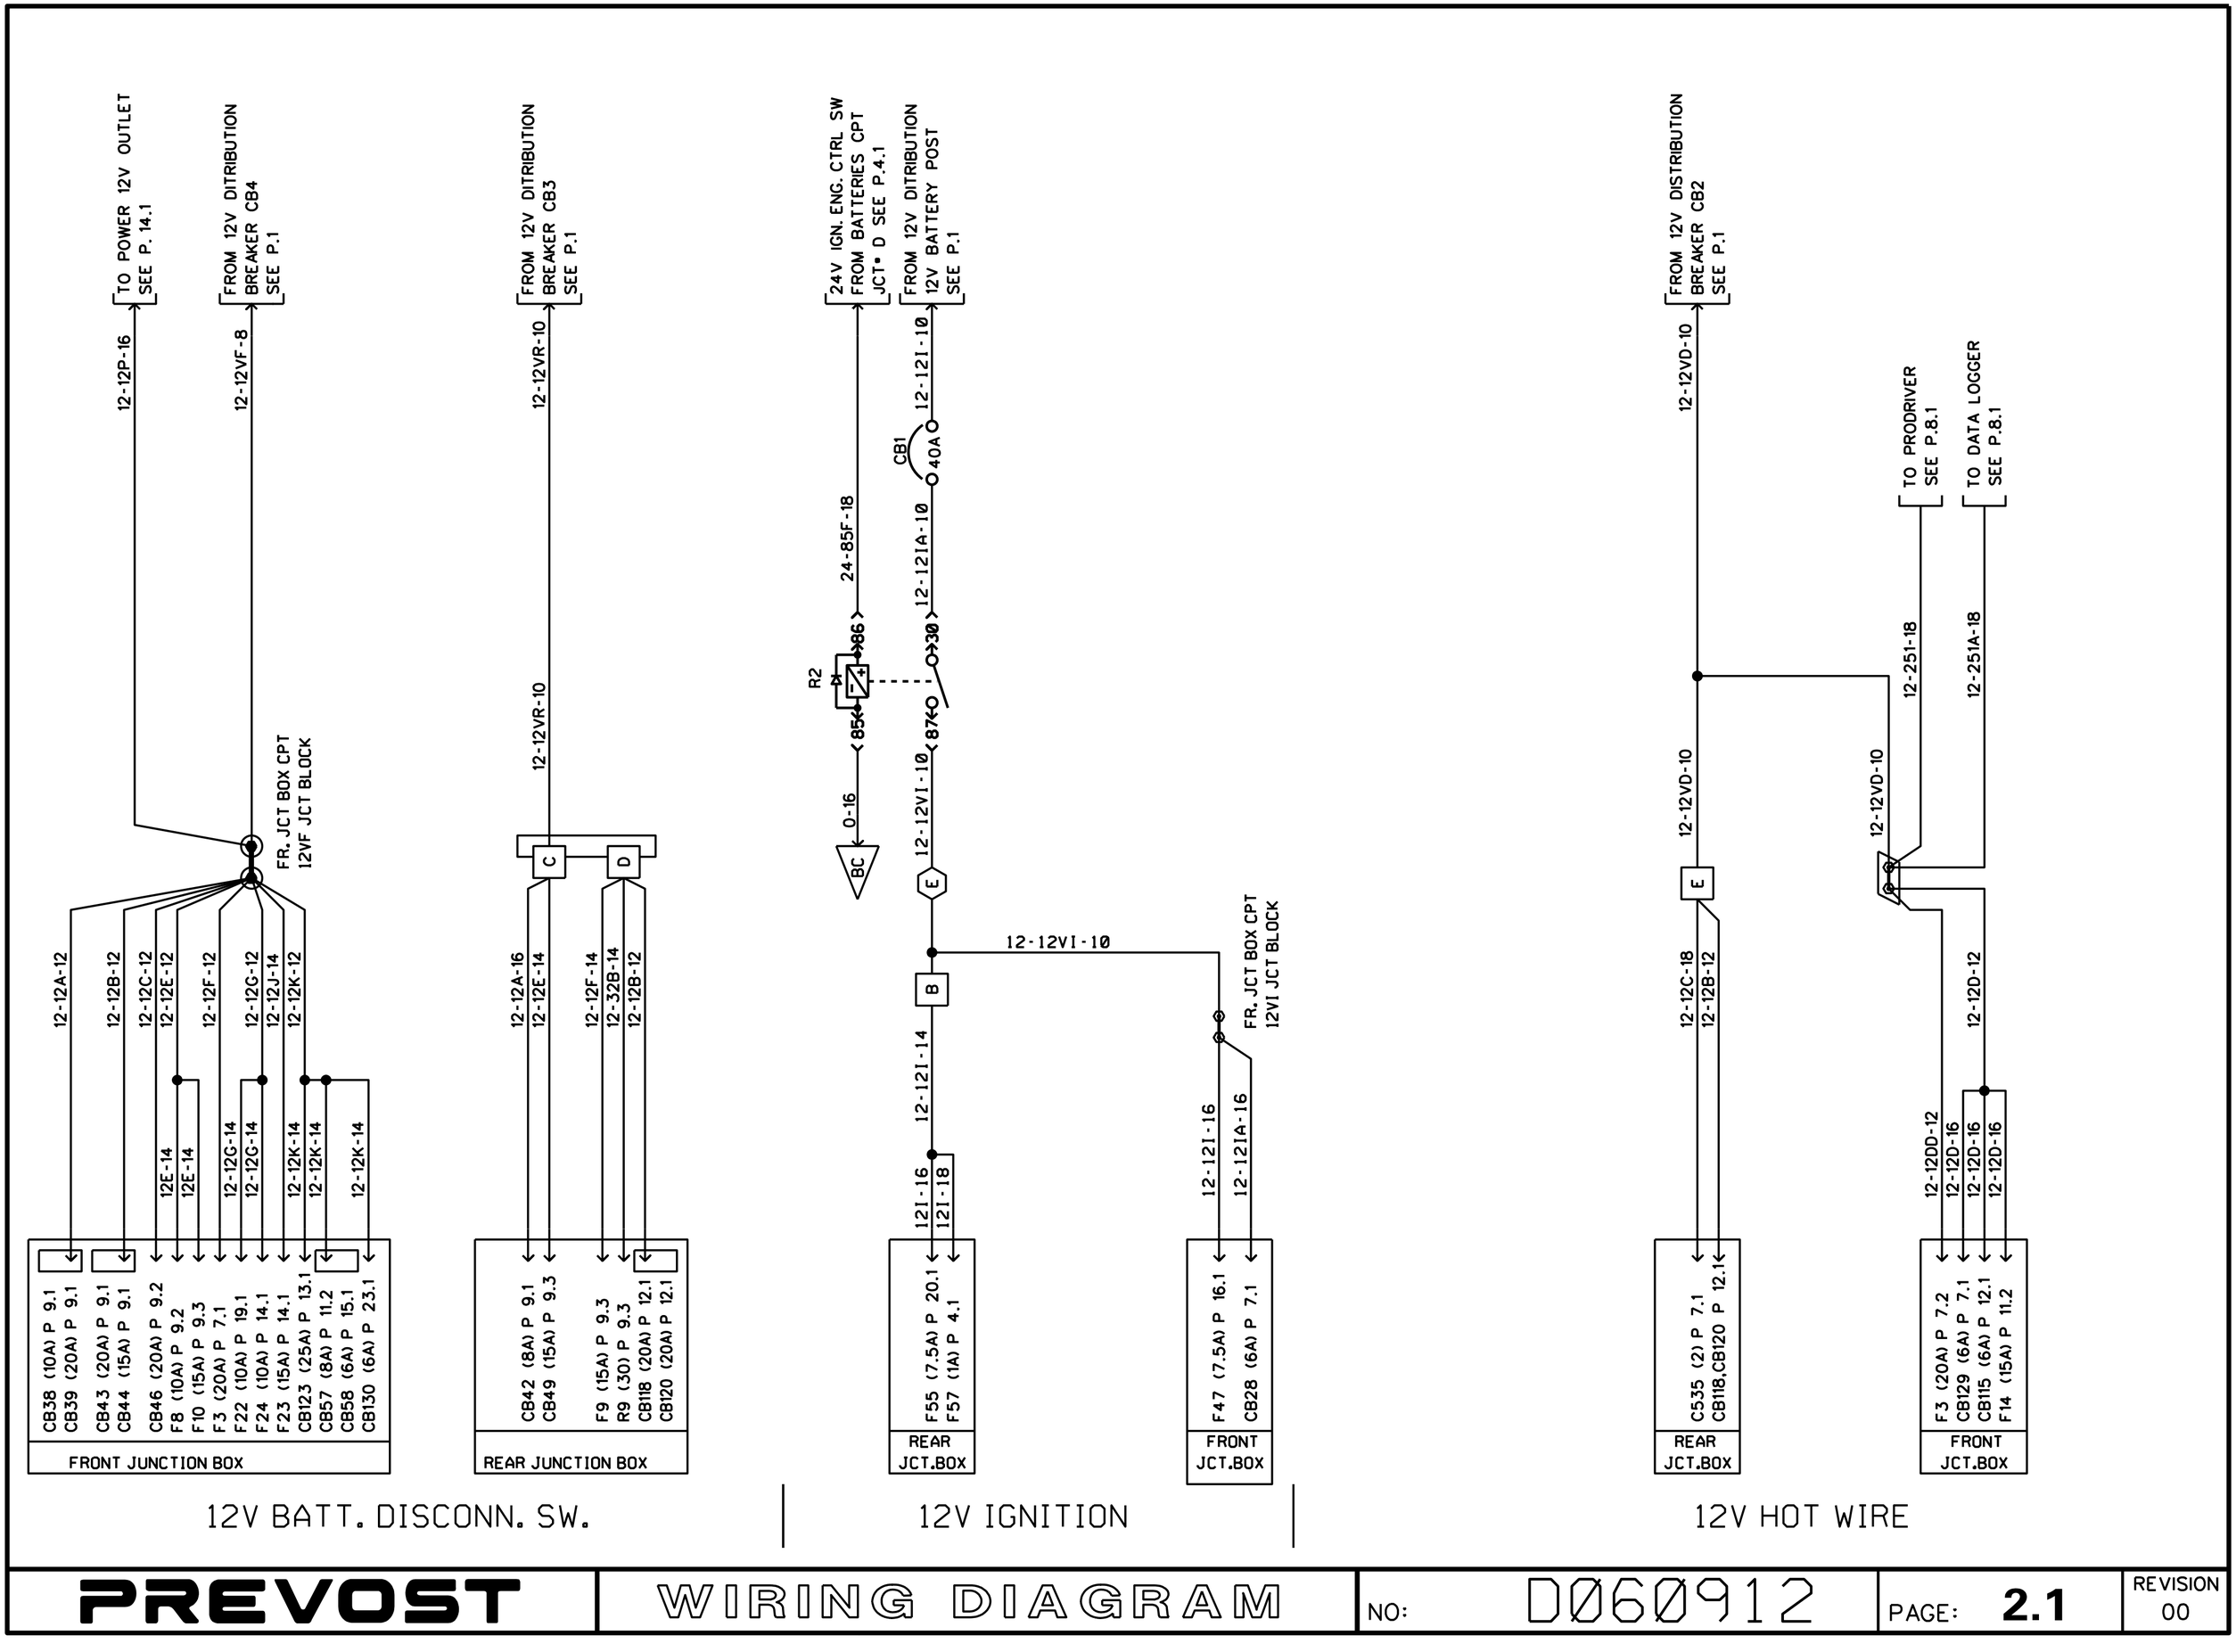
12-12P-16
TO POWER 12V OUTLET
SEE P. 14.1
12-12VF-8
FROM 12V DITRIBUTION
BREAKER CB4
SEE P.1
12-12VR-10
FROM 12V DITRIBUTION
BREAKER CB3
SEE P.1
FR. JCT BOX CPT
12VF JCT BLOCK
12-12A-12
12-12B-12
12-12C-12
12-12E-12
12-12F-12
12-12G-12
12-12J-14
12-12K-12
12E-14
12E-14
12-12G-14
12-12G-14
12-12K-14
12-12K-14
12-12K-14
CB38 (10A) P 9.1
CB39 (20A) P 9.1
CB43 (20A) P 9.1
CB44 (15A) P 9.1
CB46 (20A) P 9.2
F8 (10A) P 9.2
F10 (15A) P 9.3
F3 (20A) P 7.1
F22 (10A) P 19.1
F24 (10A) P 14.1
F23 (15A) P 14.1
CB123 (25A) P 13.1
CB57 (8A) P 11.2
CB58 (6A) P 15.1
CB130 (6A) P 23.1
FRONT JUNCTION BOX
12-12VR-10
12-12A-16
12-12E-14
12-12F-14
12-32B-14
12-12B-12
C
D
CB42 (8A) P 9.1
CB49 (15A) P 9.3
F9 (15A) P 9.3
R9 (30) P 9.3
CB118 (20A) P 12.1
CB120 (20A) P 12.1
REAR JUNCTION BOX
12V BATT. DISCONN. SW.
24V IGN. ENG. CTRL SW
FROM BATTERIES CPT
JCT• D SEE P.4.1
FROM 12V DITRIBUTION
12V BATTERY POST
SEE P.1
24-85F-18
12-121A-10
12-121-10
CB1
40A
R2
85
86
87
30
0-16
BC
12-12VI-10
E
12-12VI-10
B
12-12I-14
12I-16
12I-18
F55 (7.5A) P 20.1
F57 (1A) P 4.1
REAR
JCT.BOX
FR. JCT BOX CPT
12VI JCT BLOCK
12-12I-16
12-121A-16
F47 (7.5A) P 16.1
CB28 (6A) P 7.1
FRONT
JCT.BOX
12V IGNITION
FROM 12V DISTRIBUTION
BREAKER CB2
SEE P.1
12-12VD-10
TO PRODRIVER
SEE P.8.1
12-251-18
TO DATA LOGGER
SEE P.8.1
12-251A-18
12-12VD-10
E
12-12C-18
12-12B-12
C535 (2) P 7.1
CB118,CB120 P 12.1
REAR
JCT.BOX
12-12VD-10
12-12DD-12
12-12D-16
12-12D-16
12-12D-16
12-12D-12
F3 (20A) P 7.2
CB129 (6A) P 7.1
CB115 (6A) P 12.1
F14 (15A) P 11.2
FRONT
JCT.BOX
12V HOT WIRE

PREVOST | WIRING DIAGRAM | NO: D060912 | PAGE: 2.1 | REVISION 01

12V BATT. DISCONN. SW.

FRONT JUNCTION BOX

CB38 (10A) P 9.1
CB39 (20A) P 9.1
CB43 (20A) P 9.1
CB44 (15A) P 9.1
CB46 (20A) P 9.2
F8 (10A) P 9.2
F10 (15A) P 9.3
F3 (20A) P 7.1
F22 (10A) P 19.1
F24 (10A) P 14.1
F23 (15A) P 14.1
CB123 (25A) P 13.1
CB57 (8A) P 11.2
CB58(6A)P15.1,15.3
CB130 (6A) P 23.1

12-12A-12
12-12B-12
12-12C-12
12E-14
12-12E-12
12E-14
12-12F-12
12-12G-14
12-12G-14
12-12G-12
12-12J-14
12-12K-14
12-12K-12
12-12K-14
12-12K-14

FR. JCT BOX CPT
12VF JCT BLOCK

12-12P-16 → TO POWER 12V OUTLET SEE P. 14.1

12-12VF-8 → FROM 12V DITRIBUTION BREAKER CB4 SEE P.1

REAR JUNCTION BOX

CB42 (8A) P 9.1
CB49 (15A) P 9.3
F9 (15A) P 9.3
R9 (30) P 9.3
CB118 (20A) P 12.1
CB120 (20A) P 12.1

12-12A-16
12-12E-14
C
12-12VR-10
12-12VR-10 → FROM 12V DITRIBUTION BREAKER CB3 SEE P.1
12-12F-14
12-32B-14
D
12-12B-12

12V IGNITION

REAR JCT.BOX

CB131 (6A) P 4.2
F55 (7.5A) P 20.1
F57 (1A) P 4.1

12I-16
12I-18
12-12I-14
B
E
12-12VI-10
87
30
12-12IA-10
CB1
40A
12-12I-10 → FROM 12V DITRIBUTION 12V BATTERY POST SEE P.1

R2
BC
0-16
85
86
24-85F-18 → 24V IGN. ENG. CTRL SW FROM BATTERIES CPT JCT• D SEE P.4.1

12-12VI-10

FRONT JCT.BOX

F47 (7.5A) P 16.2 or 16.3
CB28 (6A) P 7.1

12-12I-16
12-12IA-16

FR. JCT BOX CPT
12VI JCT BLOCK

12V HOT WIRE

REAR JCT.BOX

C535 (2) P 7.1
CB118,CB120 P 12.1

12-12C-18
12-12B-12
E
12-12VD-10
12-12VD-10 → FROM 12V DISTRIBUTION BREAKER CB2 SEE P.1

12-12VD-10

FRONT JCT.BOX

F3 (20A) P 7.2
CB129 (6A) P 7.1
CB115 (6A) P 12.1
F14 (15A) P 11.2

12-12DD-12
12-12D-16
12-12D-16
12-12D-16
12-12D-12
12-251-18 → TO PRODRIVER SEE P.8.1
12-251A-18 → TO DATA LOGGER SEE P.8.1

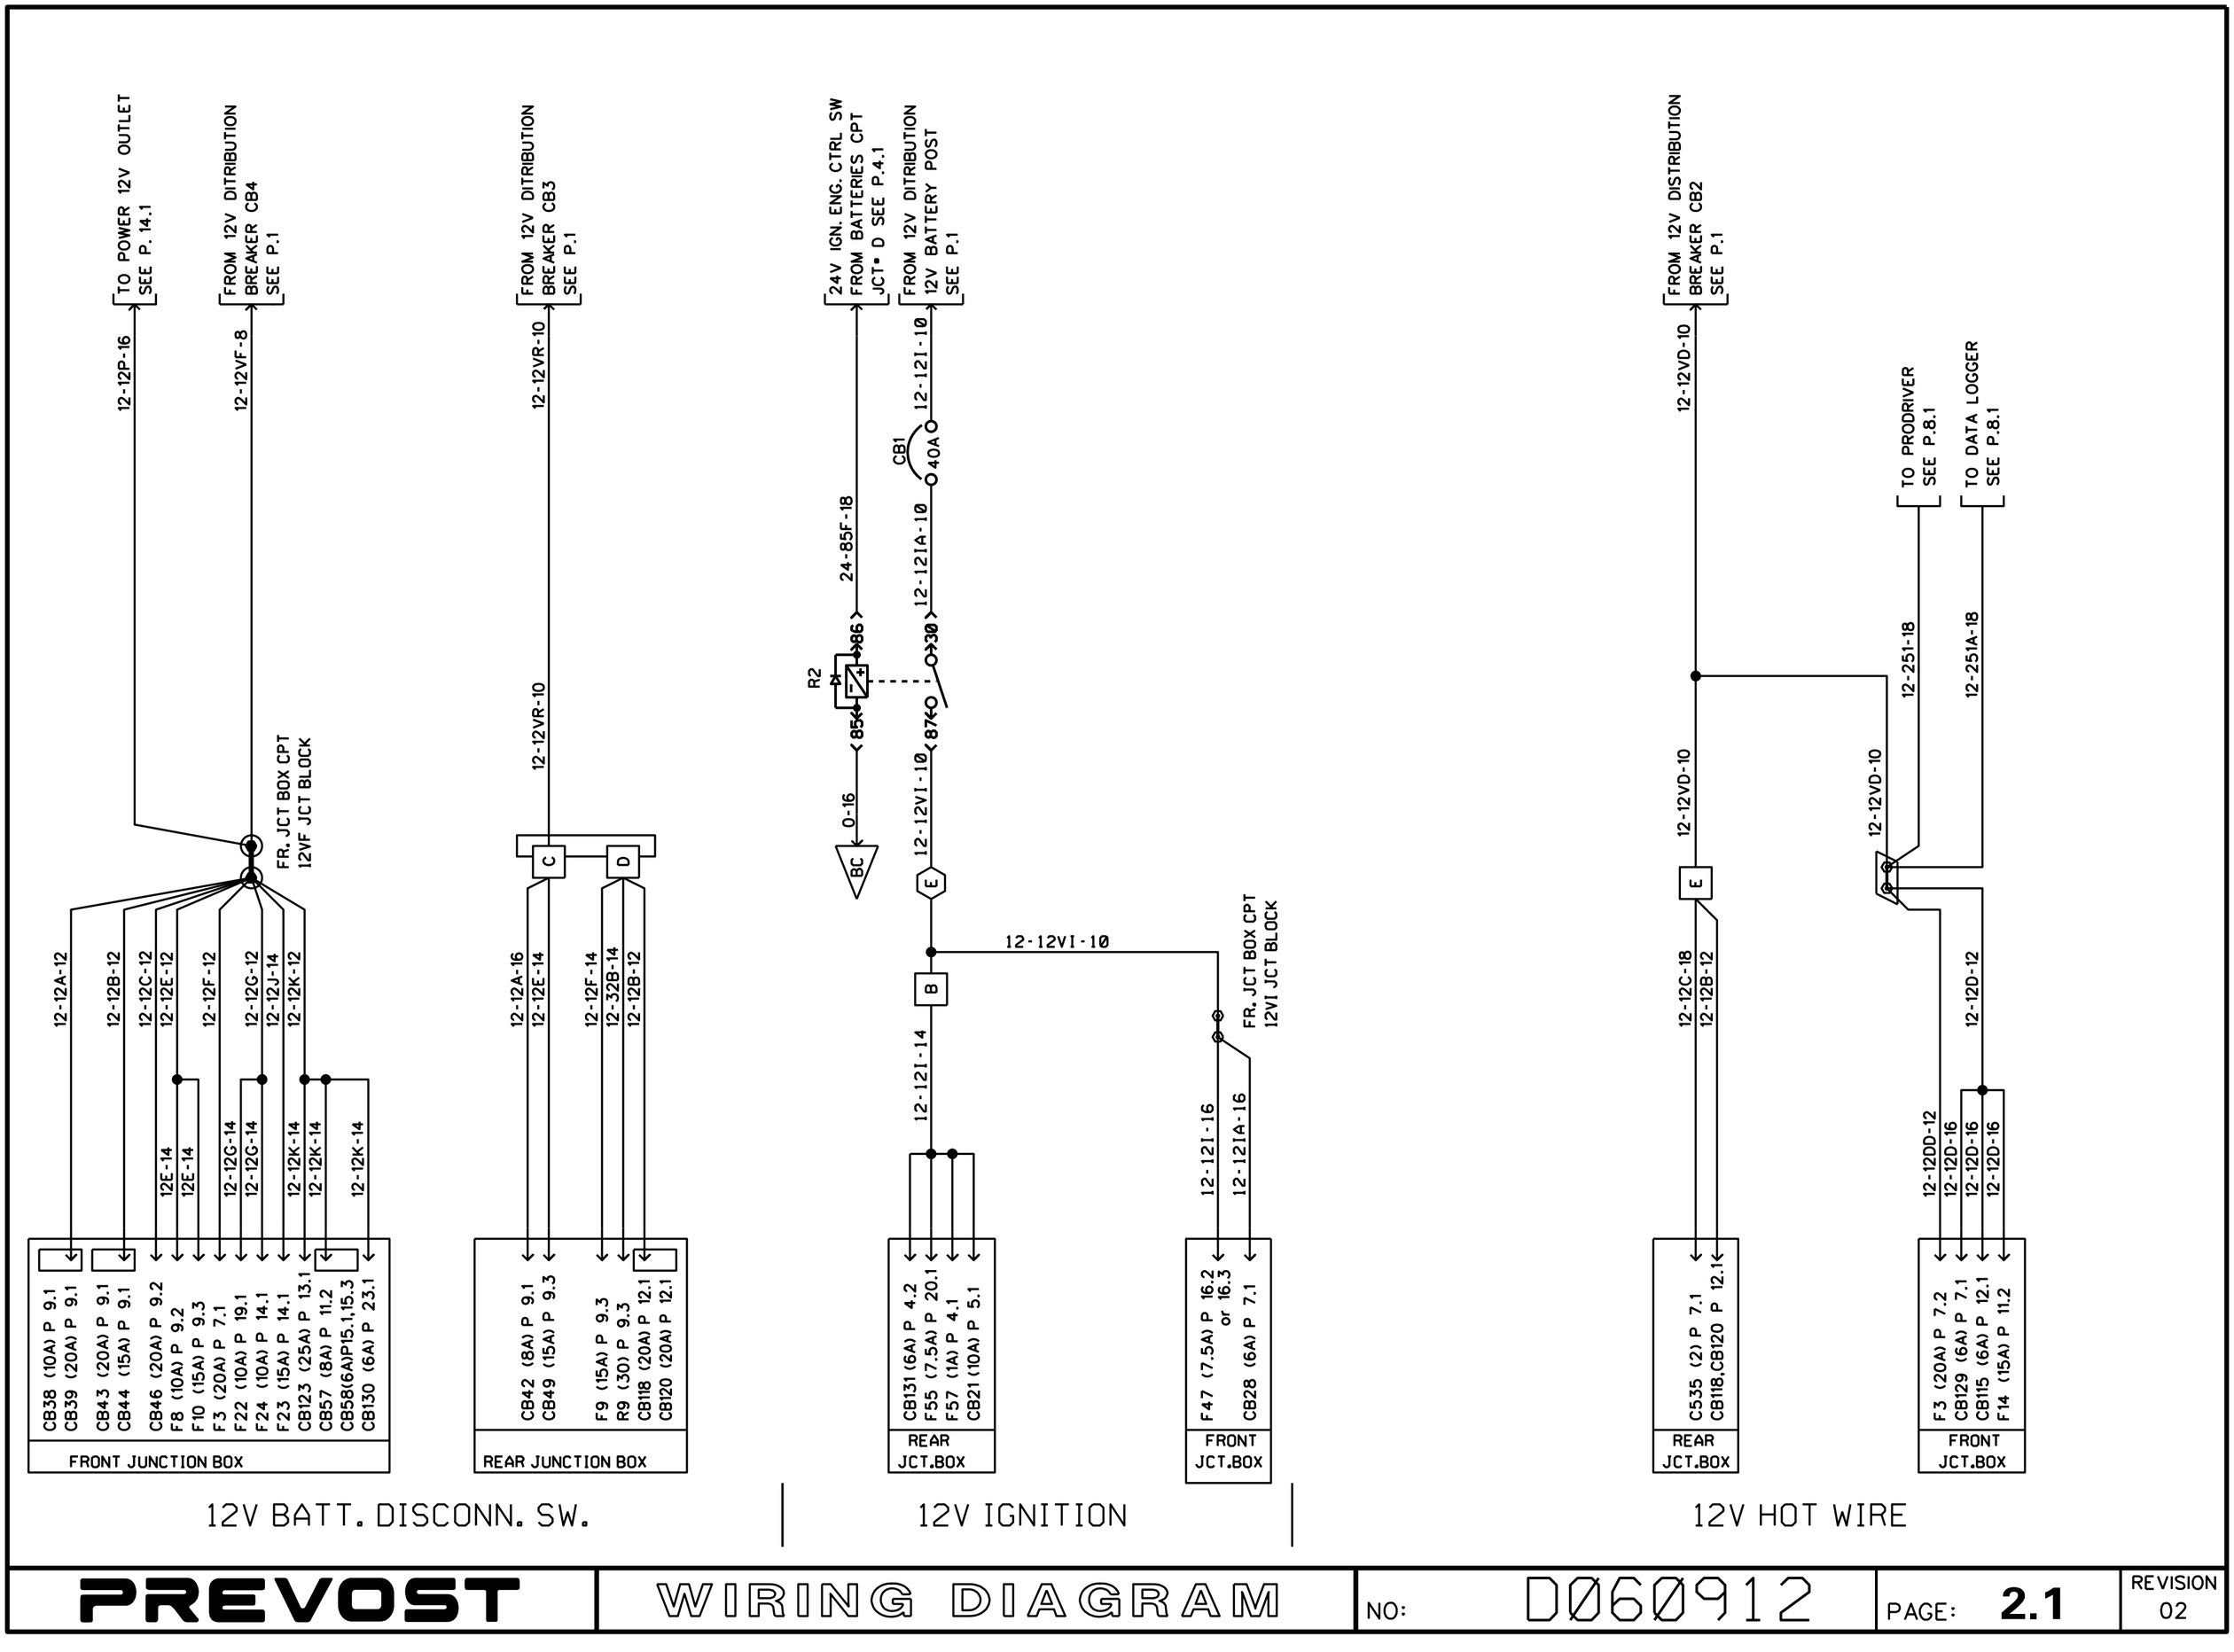

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 2.1	REVISION 02

PREVOST | WIRING DIAGRAM | NO: D060912 | PAGE: 2.1 | REVISION 06

12V BATT. DISCONN. SW.

FRONT JUNCTION BOX

CB38 (10A) P 9.1
CB39 (20A) P 9.1
CB43 (20A) P 9.1
CB44 (15A) P 9.1
CB46 (20A) P 9.2
F8 (10A) P 9.2
F10 (15A) P 9.3
F3 (20A) P 7.1
F22 (10A) P 19.1
F24 (10A) P 14.1
F23 (15A) P 14.1
CB123 (25A) P 13.1
CB57 (8A) P 11.2
CB58(6A)P15.1,15.3
CB130 (6A) P 23.1

12-12A-12
12-12B-12
12-12C-12
12E-14
12E-14
12-12E-12
12-12F-12
12-12G-14
12-12G-14
12-12G-12
12-12J-14
12-12K-14
12-12K-14
12-12K-12
12-12K-14

FR. JCT BOX CPT
12VF JCT BLOCK

12-12VF-4 → FROM 12V DITRIBUTION BREAKER CB4 SEE P.1

REAR JUNCTION BOX

CB42 (8A) P 9.1
CB49 (15A) P 9.3
F9 (15A) P 9.3
R9 (30) P 9.3
CB118 (20A) P 12.1
CB120 (20A) P 12.1

12-12A-16
12-12E-14
C
12-12VR-10 → 12-12VR-10 → FROM 12V DITRIBUTION BREAKER CB3 SEE P.1
12-12F-14
12-32B-14
D
12-12B-12

12V IGNITION

REAR JCT.BOX

CB131 (6A) P 4.2
F55 (7.5A) P 20.1
F57 (1A) P 4.1
CB21 (10A) P 5.1

12-12I-14
B
E
12-12VI-10
87
30
12-12IA-10
CB1
40A
12-12I-10 → FROM 12V DITRIBUTION 12V BATTERY POST SEE P.1

R2
BC
0-16
85
86
24-85F-18 → 24V IGN. ENG. CTRL SW FROM BATTERIES CPT JCT• D SEE P.4.1

12-12VI-10

FRONT JCT.BOX

F47 (7.5A) P 16.2 or 16.3
CB28 (6A) P 7.1

12-12I-16
12-12IA-16

FR. JCT BOX CPT
12VI JCT BLOCK

12V HOT WIRE

REAR JCT.BOX

C535 (2) P 7.1
CB118,CB120 P 12.1

12-12C-18
12-12B-12
E
12-12VD-10 → 12-12VD-10 → FROM 12V DISTRIBUTION BREAKER CB2 SEE P.1

12-12VD-10

FRONT JCT.BOX

F3 (20A) P 7.2
CB129 (6A) P 7.1
CB115 (6A) P 12.1
F14 (15A) P 11.2

12-12DD-12
12-12D-16
12-12D-16
12-12D-16
12-12D-12

12-251-18 → TO PRODRIVER SEE P.8.1
12-251A-18 → TO DATA LOGGER SEE P.8.1

PREVOST | WIRING DIAGRAM | NO: D060912 | PAGE: 2.1 | REVISION 09

12V BATT. DISCONN. SW.

FRONT JUNCTION BOX

CB38 (10A) P 9.1
CB39 (20A) P 9.1
CB43 (20A) P 9.1
CB44 (15A) P 9.1
CB46 (20A) P 9.2
F8 (10A) P 9.2
F10 (15A) P 9.3
F3 (20A) P 7.1
F22 (10A) P 19.1
F24 (10A) P 14.1
F23 (15A) P 14.1
CB123 (25A) P 13.1
CB57 (8A) P 11.2
CB58(6A)P15.1,15.4
CB130 (6A) P 23.1

12-12A-12
12-12B-12
12-12C-12
12E-14
12E-14
12-12E-12
12-12F-12
12-12G-14
12-12G-14
12-12G-12
12-12J-14
12-12K-14
12-12K-14
12-12K-12
12-12K-14

FR. JCT BOX CPT
12VF JCT BLOCK

12-12VF-4 → FROM 12V DITRIBUTION BREAKER CB4 SEE P.1

REAR JUNCTION BOX

CB42 (8A) P 9.1
CB49 (15A) P 9.3
F9 (15A) P 9.3
R9 (30) P 9.3

12-12A-16
12-12E-14
C
12-12VR-10 → 12-12VR-10 → FROM 12V DITRIBUTION BREAKER CB3 SEE P.1
12-12F-14
12-32B-14
D

12V IGNITION

REAR JCT.BOX

CB131 (6A) P 4.2
F55 (7.5A) P 20.1
F57 (1A) P 4.1
CB21 (10A) P 5.1

12-12I-14
B
E
12-12VI-10
87 30
12-12IA-10
CB1
40A
12-12I-10 → FROM 12V DITRIBUTION 12V BATTERY POST SEE P.1

R2
BC
0-16
85 86
24-85F-18 → 24V IGN. ENG. CTRL SW FROM BATTERIES CPT JCT• D SEE P.4.1

12-12VI-10

FRONT JCT.BOX

F47 (7.5A) P 16.2 or 16.3
CB28 (6A) P 7.1

12-12I-16
12-12IA-16

FR. JCT BOX CPT
12VI JCT BLOCK

12V HOT WIRE

REAR JCT.BOX

C535 (2) P 7.1
CB118 P 12.1
CB120 P 12.1

12-12C-18
12-12B-12
E
12-12VD-10 → 12-12VD-10 → FROM 12V DISTRIBUTION BREAKER CB2 SEE P.1

12-12VD-10

FRONT JCT.BOX

F3 (20A) P 7.2
CB129 (6A) P 7.1
CB115 (6A) P 12.1
F14 (15A) P 11.2

12-12DD-12
12-12D-16
12-12D-16
12-12D-16
12-12D-12
12-251-18 → TO PRODRIVER SEE P.8.1
12-251A-18 → TO DATA LOGGER SEE P.8.1

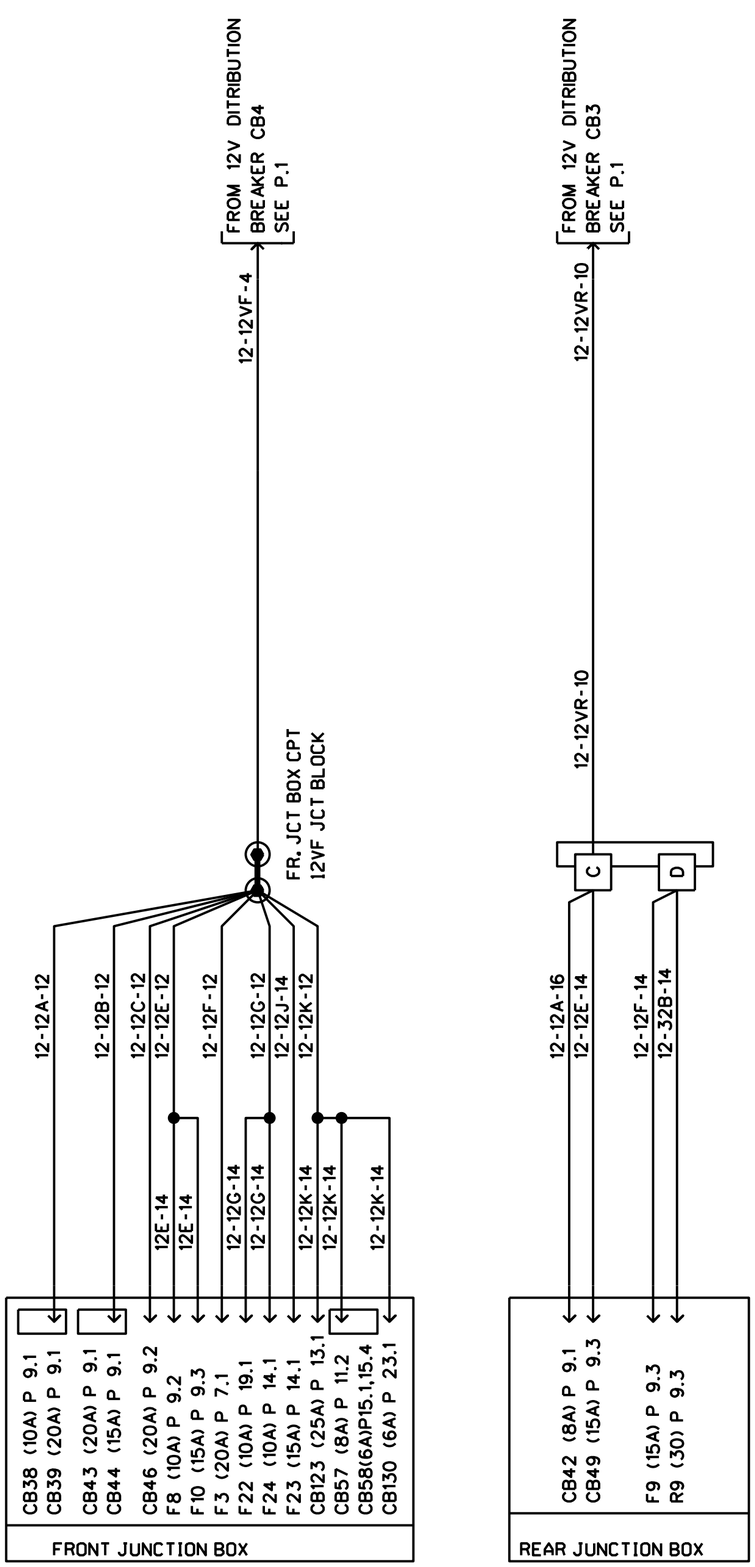
FROM 12V DITRIBUTION
BREAKER CB4
SEE P.1
12-12VF-4
FR. JCT BOX CPT
12VF JCT BLOCK
12-12A-12
12-12B-12
12-12C-12
12-12E-12
12-12F-12
12-12G-12
12-12J-14
12-12K-12
12E-14
12E-14
12-12G-14
12-12G-14
12-12K-14
12-12K-14
12-12K-14
CB38 (10A) P 9.1
CB39 (20A) P 9.1
CB43 (20A) P 9.1
CB44 (15A) P 9.1
CB46 (20A) P 9.2
F8 (10A) P 9.2
F10 (15A) P 9.3
F3 (20A) P 7.1
F22 (10A) P 19.1
F24 (10A) P 14.1
F23 (15A) P 14.1
CB123 (25A) P 13.1
CB57 (8A) P 11.2
CB58(6A)P15.1,15.4
CB130 (6A) P 23.1
FRONT JUNCTION BOX
FROM 12V DITRIBUTION
BREAKER CB3
SEE P.1
12-12VR-10
12-12VR-10
C
D
12-12A-16
12-12E-14
12-12F-14
12-32B-14
CB42 (8A) P 9.1
CB49 (15A) P 9.3
F9 (15A) P 9.3
R9 (30) P 9.3
REAR JUNCTION BOX
12V BATT. DISCONN. SW.
24V IGN. ENG. CTRL SW
FROM BATTERIES CPT
JCT• D SEE P.4.1
FROM 12V DITRIBUTION
12V BATTERY POST
SEE P.1
24-85F-18
12-121-10
CB1
40A
12-121A-10
R2
85
86
87
30
0-16
BC
12-12VI-10
E
12-12VI-10
B
12-121-14
FR. JCT BOX CPT
12VI JCT BLOCK
12-121-16
12-121A-16
CB131 (6A) P 4.2
F55 (7.5A) P 20.1
F57 (1A) P 4.1
CB21 (10A) P 5.1
REAR
JCT.BOX
F47 (7.5A) P 16.2
or 16.3
CB28 (6A) P 7.1
FRONT
JCT.BOX
12V IGNITION
FROM 12V DISTRIBUTION
BREAKER CB2
SEE P.1
12-12VD-10
12-12VD-10
E
12-12B-12
CB118 P 12.1
CB120 P 12.1
REAR
JCT.BOX
TO PRODRIVER
SEE P.8.1
TO DATA LOGGER
SEE P.8.1
12-251-18
12-251A-18
12-12VD-10
12-12DD-12
12-12D-16
12-12D-16
12-12D-16
12-12D-12
F3 (20A) P 7.2
CB129 (6A) P 7.1
CB115 (6A) P 12.1
F14 (15A) P 11.2
FRONT
JCT.BOX
12V HOT WIRE

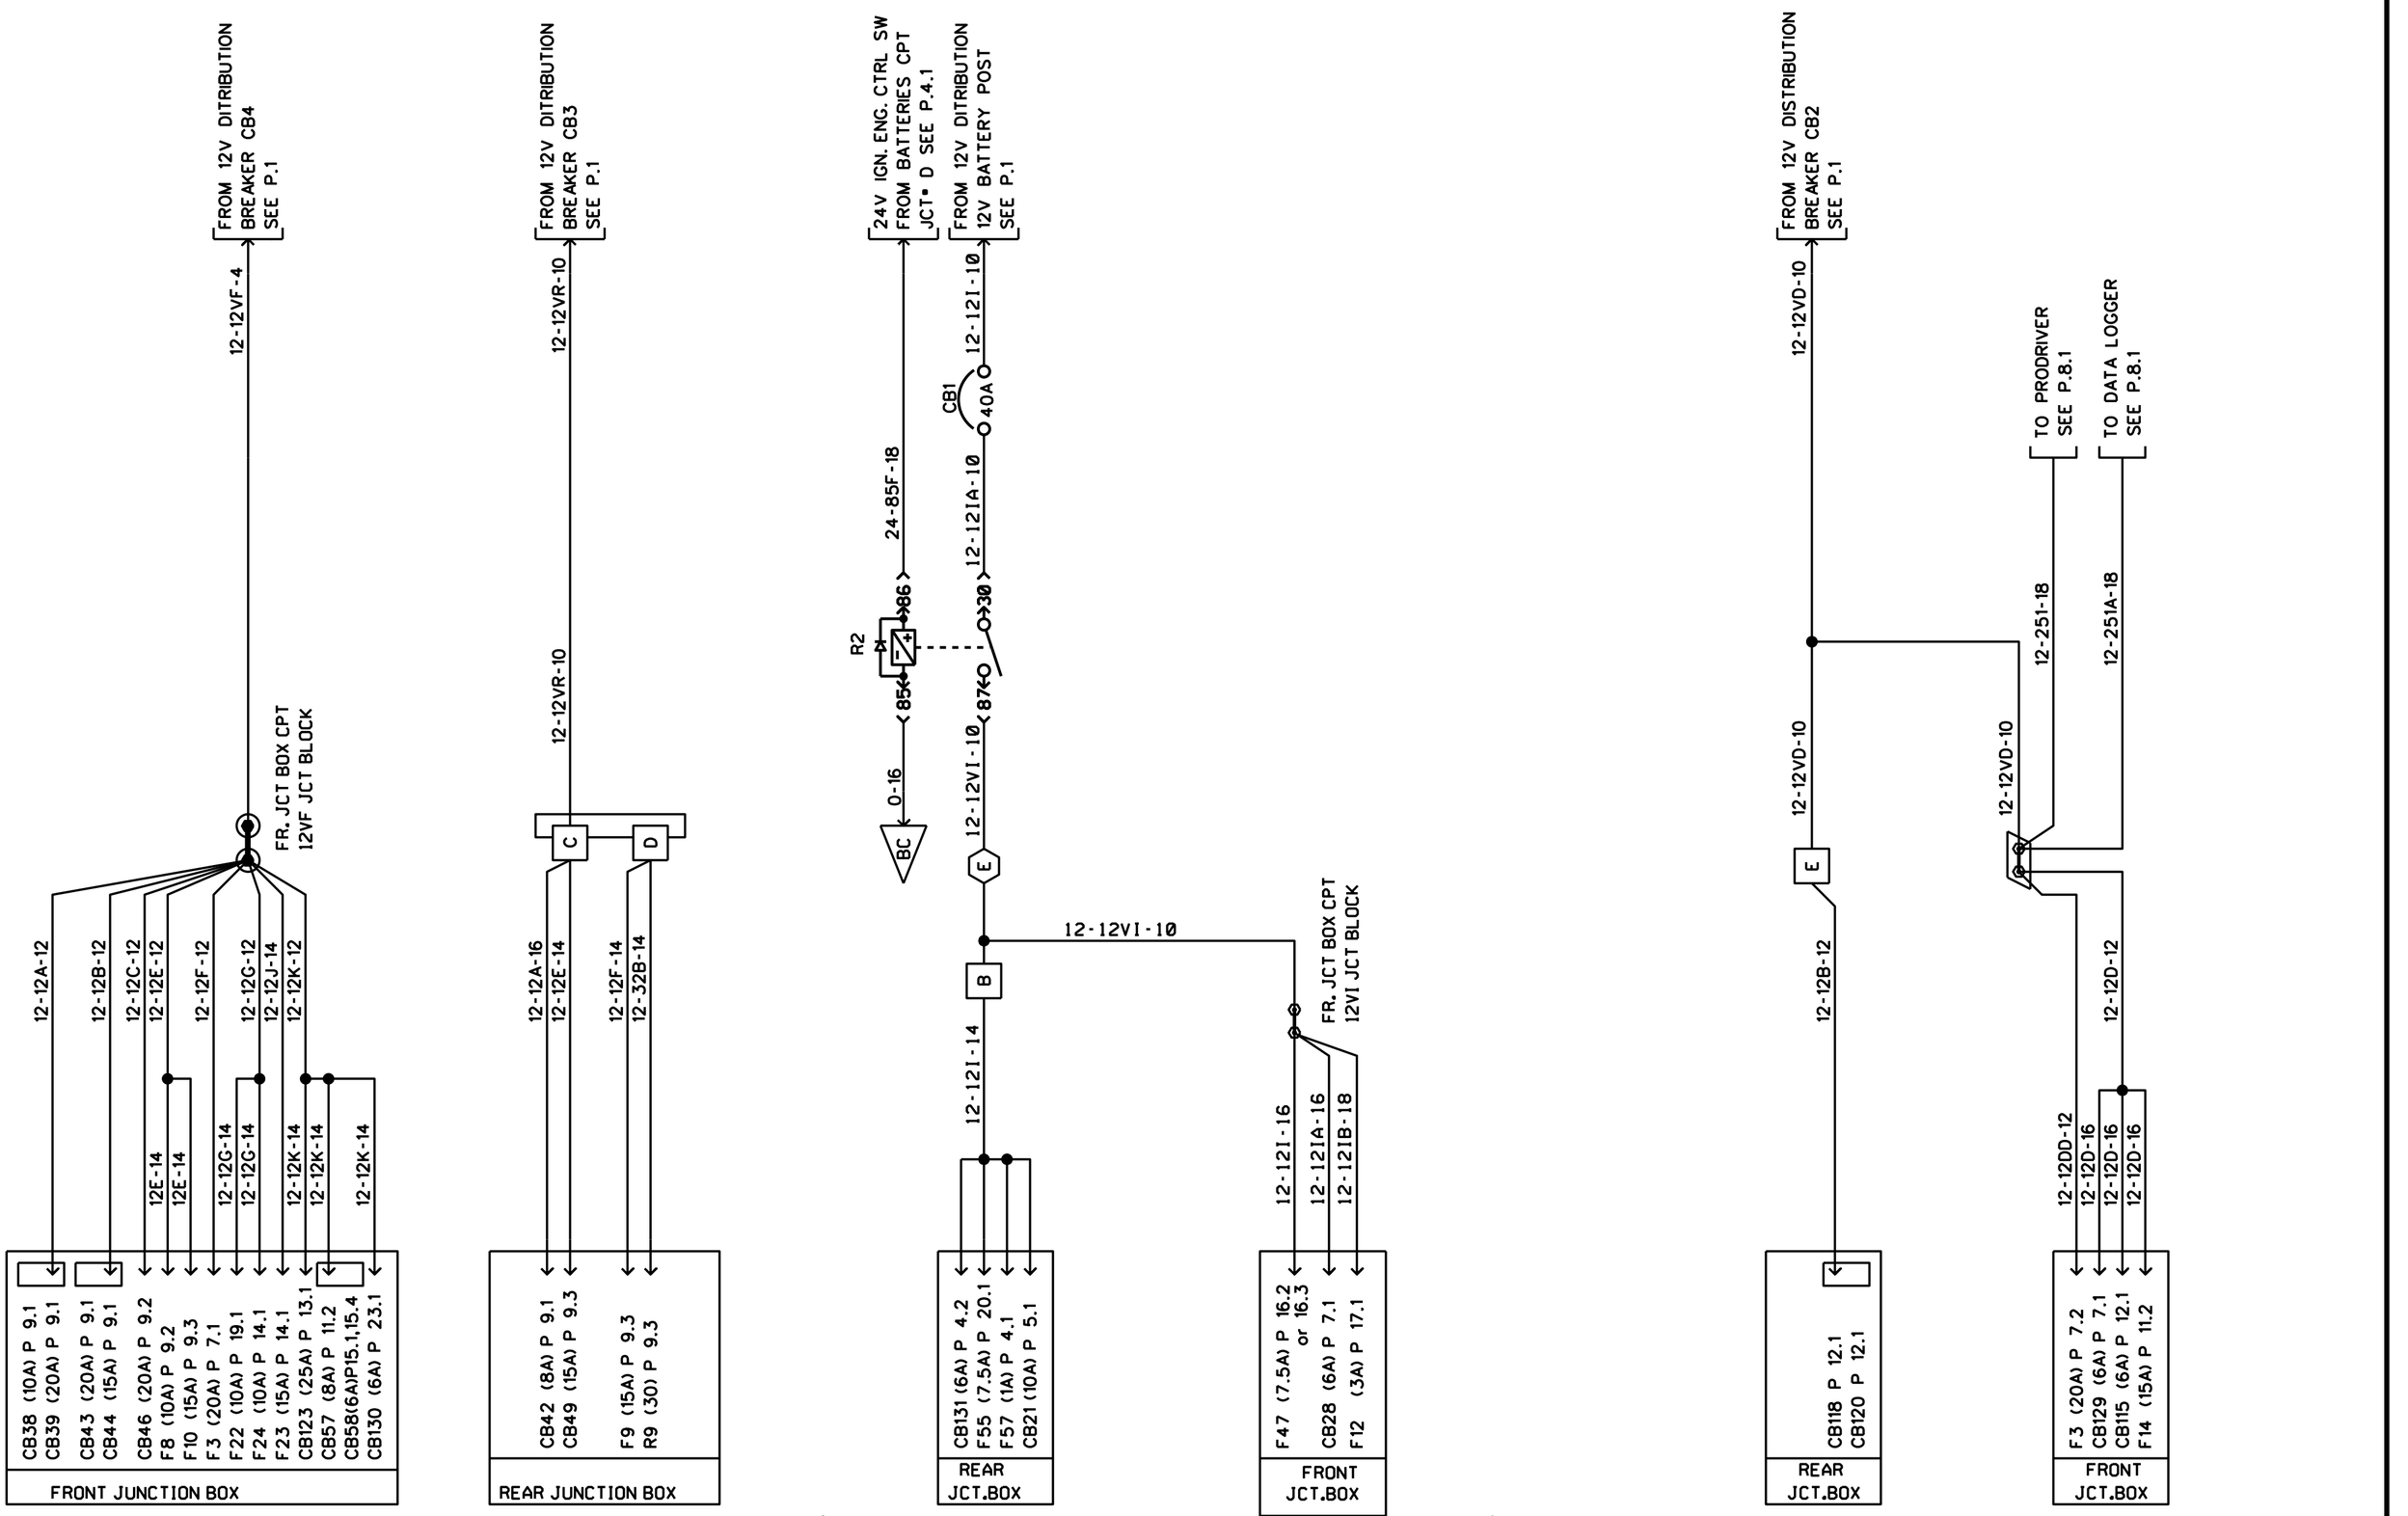
FROM 12V DITRIBUTION
BREAKER CB4
SEE P.1
12-12VF-4
FR. JCT BOX CPT
12VF JCT BLOCK
12-12A-12
12-12B-12
12-12C-12
12-12E-12
12-12F-12
12-12G-12
12-12J-14
12-12K-12
12E-14
12E-14
12-12G-14
12-12G-14
12-12K-14
12-12K-14
12-12K-14
CB38 (10A) P 9.1
CB39 (20A) P 9.1
CB43 (20A) P 9.1
CB44 (15A) P 9.1
CB46 (20A) P 9.2
F8 (10A) P 9.2
F10 (15A) P 9.3
F3 (20A) P 7.1
F22 (10A) P 19.1
F24 (10A) P 14.1
F23 (15A) P 14.1
CB123 (25A) P 13.1
CB57 (8A) P 11.2
CB58(6A)P15.1,15.4
CB130 (6A) P 23.1
FRONT JUNCTION BOX
FROM 12V DITRIBUTION
BREAKER CB3
SEE P.1
12-12VR-10
12-12VR-10
12-12A-16
12-12E-14
12-12F-14
12-32B-14
C
D
CB42 (8A) P 9.1
CB49 (15A) P 9.3
F9 (15A) P 9.3
R9 (30) P 9.3
REAR JUNCTION BOX
12V BATT. DISCONN. SW.
24V IGN. ENG. CTRL SW
FROM BATTERIES CPT
JCT• D SEE P.4.1
FROM 12V DITRIBUTION
12V BATTERY POST
SEE P.1
CB1
40A
12-12I-10
12-12IA-10
24-85F-18
R2
86
85
30
87
87a
0-16
BC
12-12VI-10
E
12-12VI-10
B
12-12I-14
12-12I-16
12-12IA-16
12-12IB-18
FR. JCT BOX CPT
12VI JCT BLOCK
CB131 (6A) P 4.2
F55 (7.5A) P 20.1
F57 (1A) P 4.1
CB21 (10A) P 5.1
REAR
JCT.BOX
F47 (7.5A) P 16.2
or 16.3
CB28 (6A) P 7.1
F12 (3A) P 17.1
FRONT
JCT.BOX
12V IGNITION
FROM 12V DISTRIBUTION
BREAKER CB2
SEE P.1
12-12VD-10
12-12VD-10
E
12-12B-12
CB118 P 12.1
CB120 P 12.1
REAR
JCT.BOX
TO PRODRIVER
SEE P.8.1
12-251-18
TO DATA LOGGER
SEE P.8.1
12-251A-18
12-12VD-10
12-12DD-12
12-12D-12
12-12D-16
12-12D-16
12-12D-16
F3 (20A) P 7.2
CB129 (6A) P 7.1
CB115 (6A) P 12.1
F14 (15A) P 11.2
FRONT
JCT.BOX
12V HOT WIRE

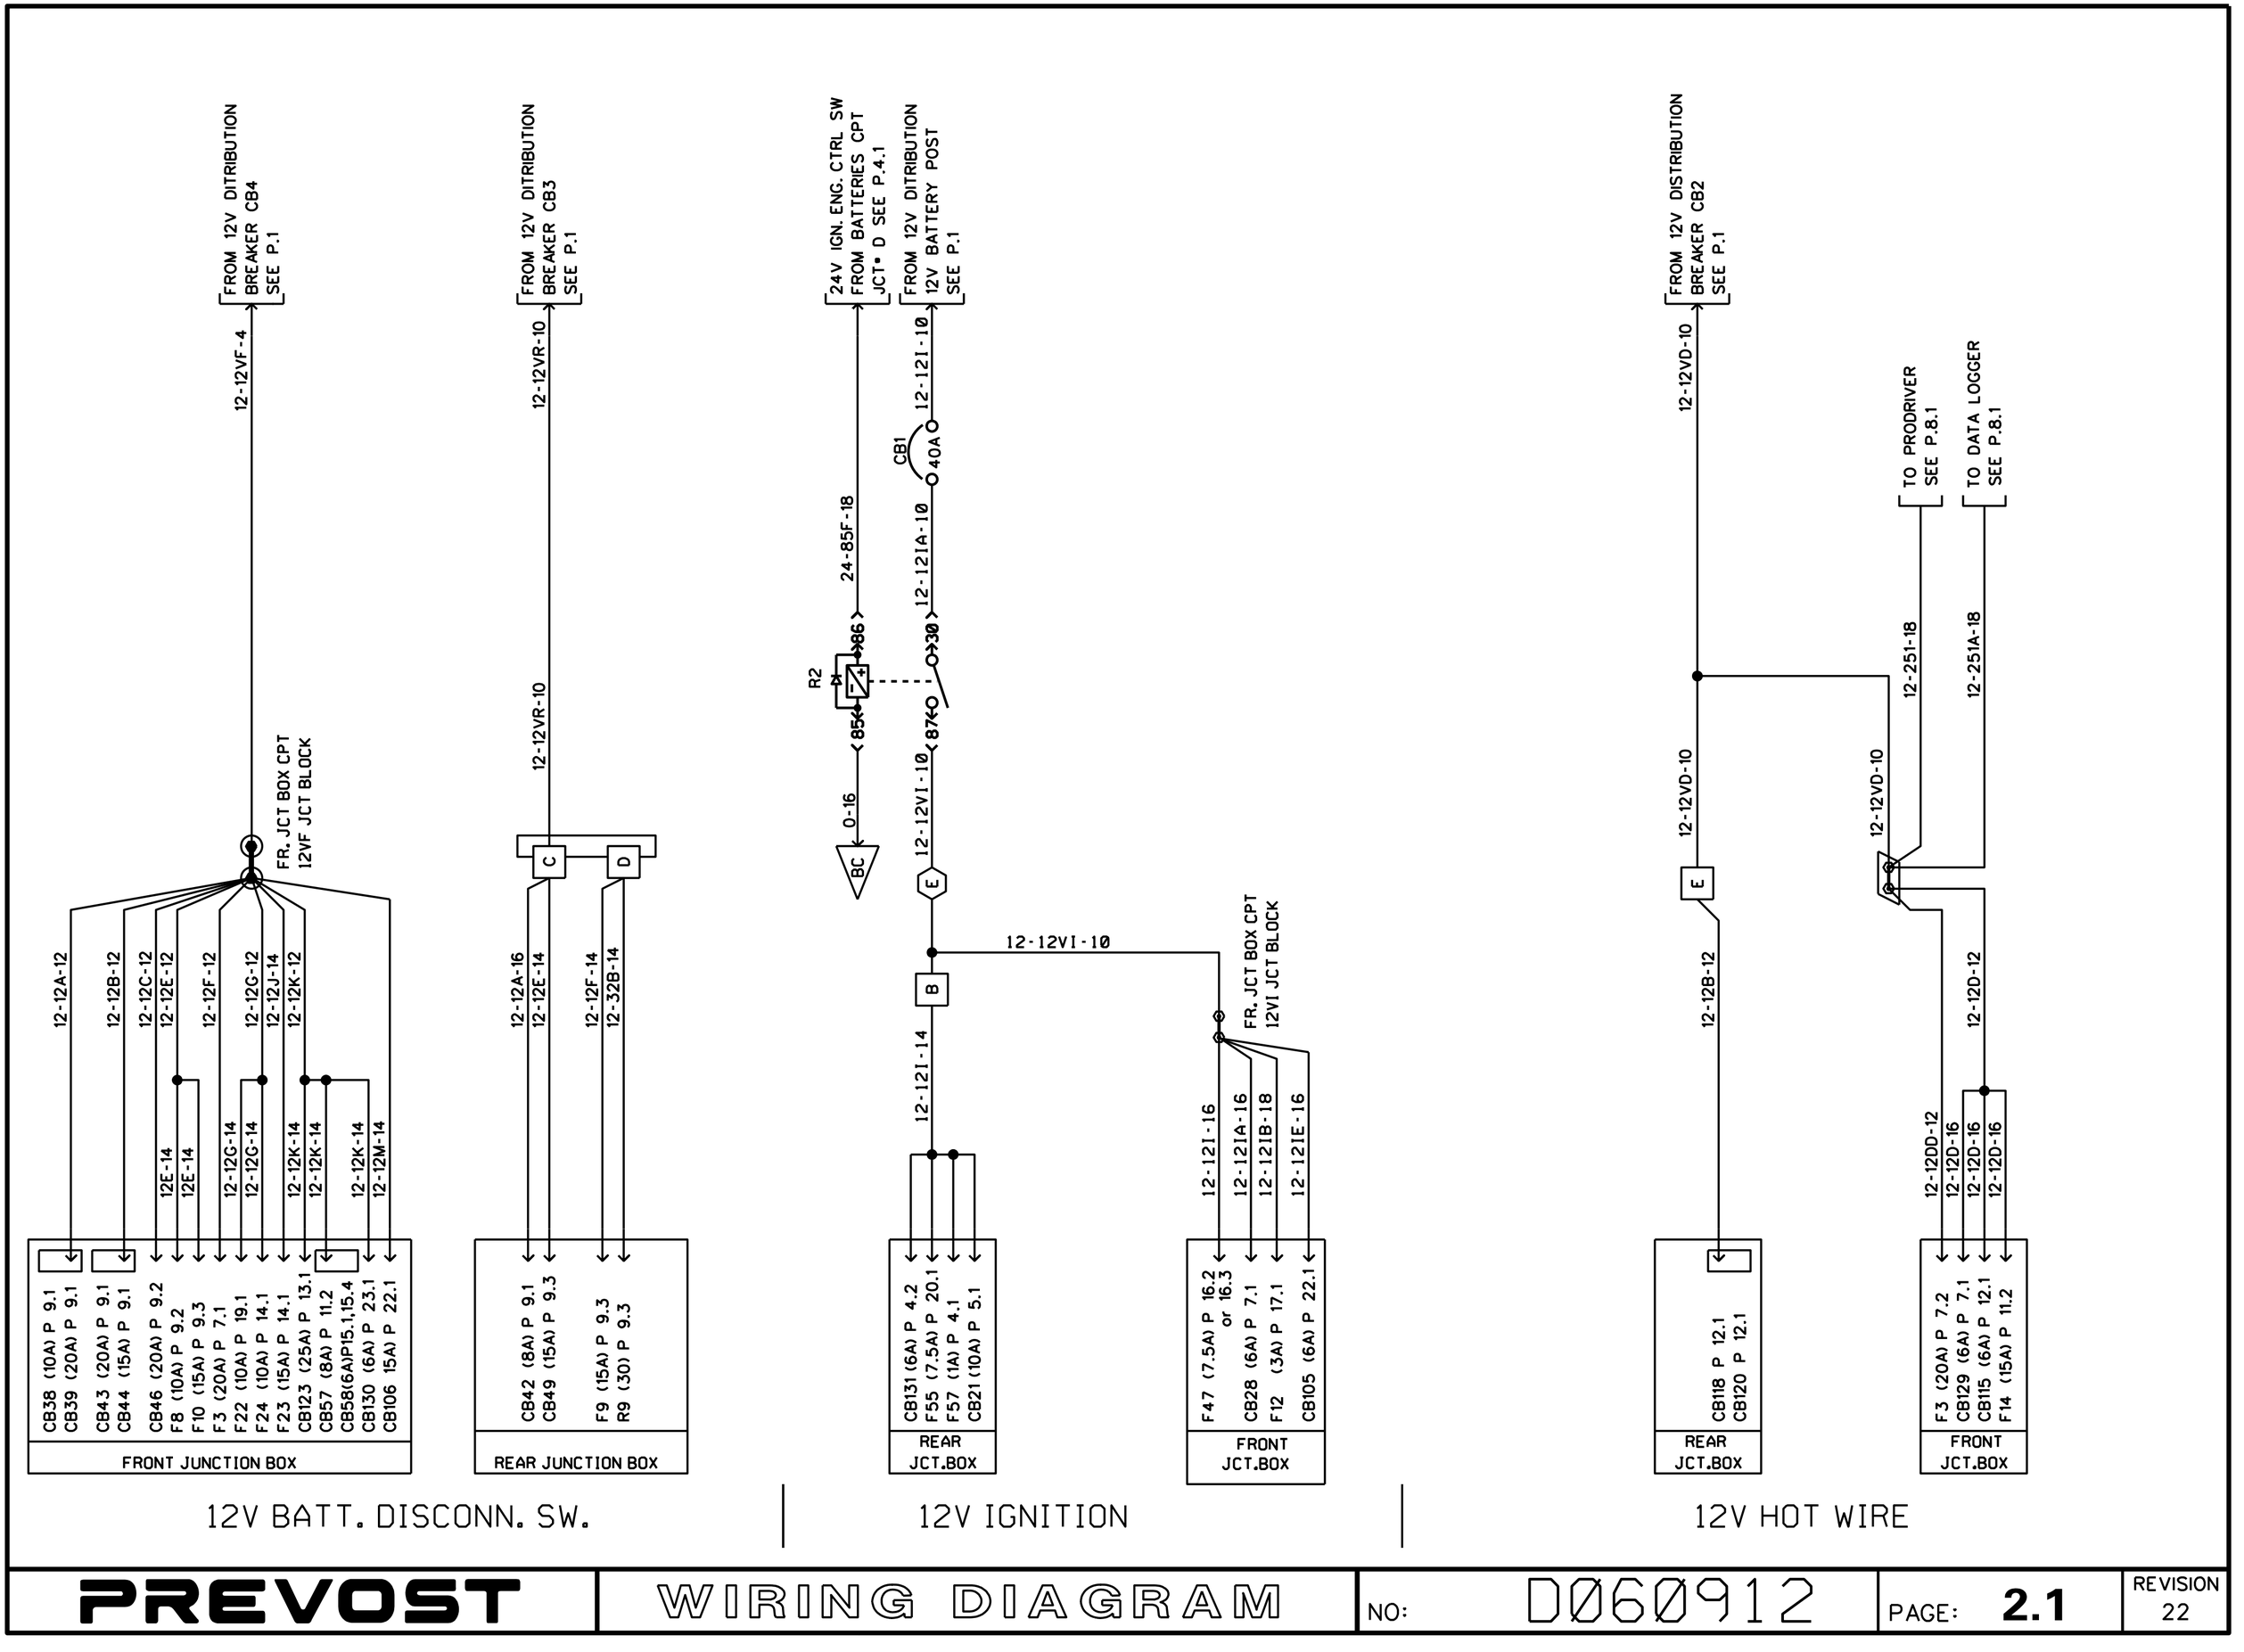
FROM 12V DITRIBUTION BREAKER CB4 SEE P.1
12-12VF-4
FR. JCT BOX CPT 12VF JCT BLOCK
12-12A-12
12-12B-12
12-12C-12
12-12E-12
12-12F-12
12-12G-12
12-12J-14
12-12K-12
12E-14
12E-14
12-12G-14
12-12G-14
12-12K-14
12-12K-14
12-12K-14
12-12K-14
12-12M-14
CB38 (10A) P 9.1
CB39 (20A) P 9.1
CB43 (20A) P 9.1
CB44 (15A) P 9.1
CB46 (20A) P 9.2
F8 (10A) P 9.2
F10 (15A) P 9.3
F3 (20A) P 7.1
F22 (10A) P 19.1
F24 (10A) P 14.1
F23 (15A) P 14.1
CB123 (25A) P 13.1
CB57 (8A) P 11.2
CB58(6A)P15.1,15.4
CB130 (6A) P 23.1
CB106 (15A) P 22.1
FRONT JUNCTION BOX
FROM 12V DITRIBUTION BREAKER CB3 SEE P.1
12-12VR-10
12-12VR-10
C
D
12-12A-16
12-12E-14
12-12F-14
12-32B-14
CB42 (8A) P 9.1
CB49 (15A) P 9.3
F9 (15A) P 9.3
R9 (30) P 9.3
REAR JUNCTION BOX
12V BATT. DISCONN. SW.
24V IGN. ENG. CTRL SW FROM BATTERIES CPT JCT• D SEE P.4.1
FROM 12V DITRIBUTION 12V BATTERY POST SEE P.1
CB1
40A
12-121-10
12-121A-10
24-85F-18
R2
85
86
87
30
0-16
BC
12-12VI-10
E
12-12VI-10
B
12-12I-14
FR. JCT BOX CPT 12VI JCT BLOCK
12-12I-16
12-12IA-16
12-12IB-18
12-12IE-16
CB131 (6A) P 4.2
F55 (7.5A) P 20.1
F57 (1A) P 4.1
CB21 (10A) P 5.1
REAR JCT.BOX
F47 (7.5A) P 16.2 or 16.3
CB28 (6A) P 7.1
F12 (3A) P 17.1
CB105 (6A) P 22.1
FRONT JCT.BOX
12V IGNITION
FROM 12V DISTRIBUTION BREAKER CB2 SEE P.1
12-12VD-10
12-12VD-10
E
12-12B-12
CB118 P 12.1
CB120 P 12.1
REAR JCT.BOX
TO PRODRIVER SEE P.8.1
12-251-18
TO DATA LOGGER SEE P.8.1
12-251A-18
12-12VD-10
12-12DD-12
12-12D-12
12-12D-16
12-12D-16
12-12D-16
F3 (20A) P 7.2
CB129 (6A) P 7.1
CB115 (6A) P 12.1
F14 (15A) P 11.2
FRONT JCT.BOX
12V HOT WIRE

FRONT JCT BOX
0C GROUND STUD

FRONT JCT BOX
0L GROUND STUD

FRONT JCT BOX
0M GROUND STUD

FRONT JCT BOX
0T GROUND STUD

FRONT LH ROOF
GROUND STUD

REAR JCT BOX
GROUND STUD

BATTERY COMPARTMENT
GROUND STUD

FROM BATTERY COMPARTMENT
ELECTRONIC GROUND JCT BLOCK
SEE PAGE 1.1

TO ABS MODULE
SEE PAGE 21.1

FRONT SECTION

FRONT JUNCTION BOX COMPARTMENT

FRONT SERVICE CPT C105 (B), C106 (B), C239 (B), C260 (A&B), C183 (A)
FRONT SERVICE CPT C267 (7), C536 (4)
FRONT SERVICE CPT C323 (1), SH1, SH3
BEHIND DASH RH PANEL C452 (1), AA2 (85)

FRONT JCT. BOX - RELAYS & C522 (87)

FRONT SERVICE CPT C435 (2), C246 (3), C242 (3) & STEP LT
FRONT SERVICE CPT C102 (GRD), C103 (GRD), C104 (GRD) & STEP LT
FRONT SERVICE CPT HEADLAMP CON C243

FRONT JCT. BOX - CORNERING LTS RESISTORS
FRONT JCT. BOX - FOG LTS RESISTORS
RH CONSOLE - CIGAR LIGHTER

WIPER MOTOR C177 (1) & PULSE MOD. C176 (1) & RH MIRROR C269 (3)
DRIVER'S HTR FAN SPEED CTRL MOD. C175 (5)
FR. SERV. CPT-HORNS C101 (B), & WASHER PUMP
FRONT SERVICE CPT C483 (A) DRV ELECT. SEAT

FR. JCT. BOX - WIPER PULSE MOD. C248 (1)

LH CONSOLE SWITCH
FRONT SERVICE CPT - LH MIRROR C268 (3)

FR. SERV. CPT-LO AIR PRIM. SEC PRESSURE SW. & TAG PRESSURE SW.
LH SWITCH PANEL
BEHIND DASH PANEL - B/U MONITOR C394 (2)

BEHIND DASH PANEL-AUDIBLE FLASHER C424 (1)
DASH CENTRAL PANEL

CLUSTER, MODULE A/C
DOOR LOCK SWITCH

FR. JCT BOX - GROUND JCT BLOCK & SHIFTER
PRODRIVER CABLE SHIELD GROUND C500 (1)

12V POWER OUTLET

FRONT ROOF SECTION

ROOF ACCES. CLEARANCE LTS C213(1), WARNING C362(1) C363(1) C373(1), WIPER MOT. C361(1) & DRIVER'S LTS
HEATING UPPER WINDSHIELD

REAR SECTION

REAR JUNCTION BOX COMPARTMENT

RR JCT. BOX - RELAYS
RR JCT. BOX - C535(1), R84, R85, C475(1) & SOLDER WT SHIELD SH2, SH3, 20, 20T
RR JCT. BOX - VIMN(87), VIMR(87), VIM4(30) & SOLDER WT SHIELD SH1
RR JCT BOX - RETARDER FAN CLUTCH C508(3)
RR JCT BOX - A/C & HEAT JCT PANEL
RR JCT BOX - DOCKING LTS RESISTORS

RR JCT BOX - LUG DOOR LOCK RLY R69 & R70

RR JCT BOX - LUG DOOR LOCK RLY R74 & R75

RR END LAMPS RH C119 (A)
RR END LAMPS LH C120 (A)
ENG CPT C126(B), C128(2), C129(2), C130(2), C131(2), C422(1)
ENG CPT C230(2), C127(B), C122(B), C124(A)
ENG CPT C125(B)
RR ROOF CLEARANCE LTS C87(2)
& ENGINE CPT C287(A), C432(2) & C115(B)
RR ROOF CAMERA C87(1)
RR SIDE MARK C113, FLASH LH C114 & RH C121

LUG CPT RH SIDE MARKER C103, FLASHER C104

LUG CPT FUEL TANK C152(A), DAMPER C111(2), WATER VALVE C155(D), BYPASS VALVE C156(B), LH SIDE FLASHER C102, LH SIDE MARKER C103

BATTERY COMPARTMENT

BAT CPT - RELAYS R2, R3, R54, R55
ENGINE-SOLDER SHIELD SH1, SH2, SH3 & C326(B)
VOLTAGE REGULATOR
CONDENSER FAN SPEED RLY R39, R40, R41
CONDENSER FAN RELAY R41(87)
CONDENSER FAN LH

RR JCT BOX

DDEC ACCES. BATTERY GROUND SEE PAGE 5
WORLD TRANS. ACCES. BAT. GRD SEE PAGE 6

FR JCT BOX

TELL TALE LIGHT MODULE SEE PAGE 28
CLUSTER SEE P 7.1

CHASSIS GROUND

BATTERY GROUND

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 3.1	REVISION 00

PREVOST

WIRING DIAGRAM

CHASSIS GROUND

NO: D060912

PAGE: 3.1

REVISION 01

FRONT JUNCTION BOX COMPARTMENT

FRONT SECTION (FS)

- FRONT SERVICE CPT C105 (B), C106 (B), C239 (B), C260 (A&B), C183 (A)
- FRONT SERVICE CPT C267 (7), C536 (4)
- FRONT SERVICE CPT C323 (1), SH1, SH3
- BEHIND DASH RH PANEL C452 (1), AA2 (85)
- FRONT JCT. BOX - RELAYS & C522 (87)

0-0C-14; 0-0C1-18; 0-0C1-14; 0-0C2-18; 0-0C3-18; 0-0C4-18; C3 15; 0-0C4-14 → FRONT JCT BOX 0C GROUND STUD

- FRONT SERVICE CPT C435 (2), C246 (3), C242 (3) & STEP LT
- FRONT SERVICE CPT C102 (GRD), C103 (GRD), C104 (GRD) & STEP LT
- FRONT SERVICE CPT HEADLAMP CON C243
- FRONT JCT. BOX - CORNERING LTS RESISTORS
- FRONT JCT. BOX - FOG LTS RESISTORS
- RH CONSOLE - CIGAR LIGHTER

0-0L-14; 0-0L1-14; 0-0L2-12; 0-0L3-14; 0-0L4-14; C3 22; C3 16; 0-0L3-14; 0-0L4-14; 0-0L5-14; 24 C171 → FRONT JCT BOX 0L GROUND STUD

- WIPER MOTOR C177 (1) & PULSE MOD. C176 (1) & RH MIRROR C269 (3)
- DRIVER'S HTR FAN SPEED CTRL MOD. C175 (5)
- FR. SERV. CPT-HORNS C101 (B), & WASHER PUMP
- FRONT SERVICE CPT C483 (A) DRV ELECT. SEAT
- FR. JCT. BOX - WIPER PULSE MOD. C248 (1)
- LH CONSOLE SWITCH
- FRONT SERVICE CPT - LH MIRROR C268 (3)
- AUX. A/C-HEAT UNIT C204(B),C201(B)
- FRONT SEVICE CPT.-WATER PUMP C157
- FR. SERV. CPT-LO AIR PRIM, SEC PRESSURE SW. & TAG PRESSURE SW.

0-0M-14; 0-0M3-12; 0-0M4-14; 0-0M5-14; 0-0M6-14; C3 14; 0-0M6-14; 0-0M7-14; C171 21; 0-0M7-14; 0-0M7-14; C9 16; 0-0M8-14; 0-0M9-14 → FRONT JCT BOX 0M GROUND STUD

- LH SWITCH PANEL
- BEHIND DASH PANEL - B/U MONITOR C394 (2)
- BEHIND DASH PANEL-AUDIBLE FLASHER C424 (1)
- DASH CENTRAL PANEL
- CLUSTER, MODULE A/C
- DOOR LOCK SWITCH
- FR. JCT BOX - GROUND JCT BLOCK & SHIFTER
- PRODRIVER CABLE SHIELD GROUND C500 (1)
- 12V POWER OUTLET

0-0T-18; 0-0T1-18; 0-0T2-18; C3 23; 0-0T3-14; 24; 0-0T4-16; 0-0T4-16 → FRONT JCT BOX 0T GROUND STUD

FRONT ROOF SECTION (FRS)

- ROOF ACCES. CLEARANCE LTS C213(1), WARNING C362(1) C363(1) C373(1), WIPER MOT. C361(1) & DRIVER'S LTS
- HEATING UPPER WINDSHIELD

0-0A-18; 0-0A-18; 0-0A-14; 0-0A-14; 0-0B-12 → FRONT LH ROOF GROUND STUD

REAR JUNCTION BOX COMPARTMENT

REAR SECTION (RS)

- RR JCT. BOX - RELAYS
- RR JCT. BOX - C535(1), R84, R85, C475(1) & SOLDER WT SHIELD SH2, SH3, 20, 20T
- RR JCT. BOX - VIMN(87), VIMR(87), VIM4(30) & SOLDER WT SHIELD SH1
- RR JCT BOX - RETARDER FAN CLUTCH C508(3)
- RR JCT BOX - A/C & HEAT JCT PANEL
- RR JCT BOX - DOCKING LTS RESISTORS

0-0-18; 0-0A-16; 0-0W-18; M; 0-0B-10; 0-0R-16; C59 1; 0-0K-16; 0-0DR-14

- RR JCT BOX - LUG DOOR LOCK RLY R69 & R70

0-0Y2-14; N

- RR JCT BOX - LUG DOOR LOCK RLY R74 & R75

0-0Y1-14; O; 0-0C-10

- RR END LAMPS RH C119 (A)
- RR END LAMPS LH C120 (A)
- ENG CPT C126(B), C128(2), C129(2), C130(2), C131(2), C422(1)
- ENG CPT C230(2), C127(B), C122(B), C124(A)
- ENG CPT C125(B)
- RR ROOF CLEARANCE LTS C87(2) & ENGINE CPT C287(A), C432(2) & C115(B)
- RR ROOF CAMERA C87(1)
- RR SIDE MARK C113, FLASH LH C114 & RH C121
- LUG CPT RH SIDE MARKER C103, FLASHER C104
- LUG CPT FUEL TANK C152(A), DAMPER C111(2), WATER VALVE C155(D), BYPASS VALVE C156(B), LH SIDE FLASHER C102, LH SIDE MARKER C103

0-0RH-16; 0-0LH-16; 0-0X-12; 0-0P-14; 0-0R-14; 0-0X-12; 0-0N-14; 0-0K-14; 0-0Y-12; 0-0J-16; 0-0DF-14; 0-0Y-12; 0-0B-14; 0-0Z-12; 0-0A-14; 0-0Z-12 → REAR JCT BOX GROUND STUD

BATTERY COMPARTMENT (BC)

- BAT CPT - RELAYS R2, R3, R54, R55
- ENGINE-SOLDER SHIELD SH1, SH2, SH3 & C326(B)
- VOLTAGE REGULATOR
- CONDENSER FAN SPEED RLY R39, R40, R41
- CONDENSER FAN RELAY R41 (87)
- CONDENSER FAN LH

0-0-16; 0-0A-16; C397 1; 0-0A-16; 0-0AA-12; 0-0C-16; 0-0D-10; 0-0D-10 → BATTERY COMPARTMENT GROUND STUD

BATTERY GROUND

RR JCT BOX (RBG)

- DDEC ACCES. BATTERY GROUND SEE PAGE 5
- WORLD TRANS. ACCES. BAT. GRD SEE PAGE 6

0-953-18; 0-143W-12; P; 0-00-12; 0-00-12 → FROM BATTERY COMPARTMENT ELECTRONIC GROUND JCT BLOCK SEE PAGE 1.1

FR JCT BOX (FBG)

- TELL TALE LIGHT MODULE SEE PAGE 28
- CLUSTER SEE P7.1,HVAC DASH MODULE P15.1,15.3

C74 36; 0-00A-18; 0-00-16; 0-00Y-18 → TO ABS MODULE SEE PAGE 21.1

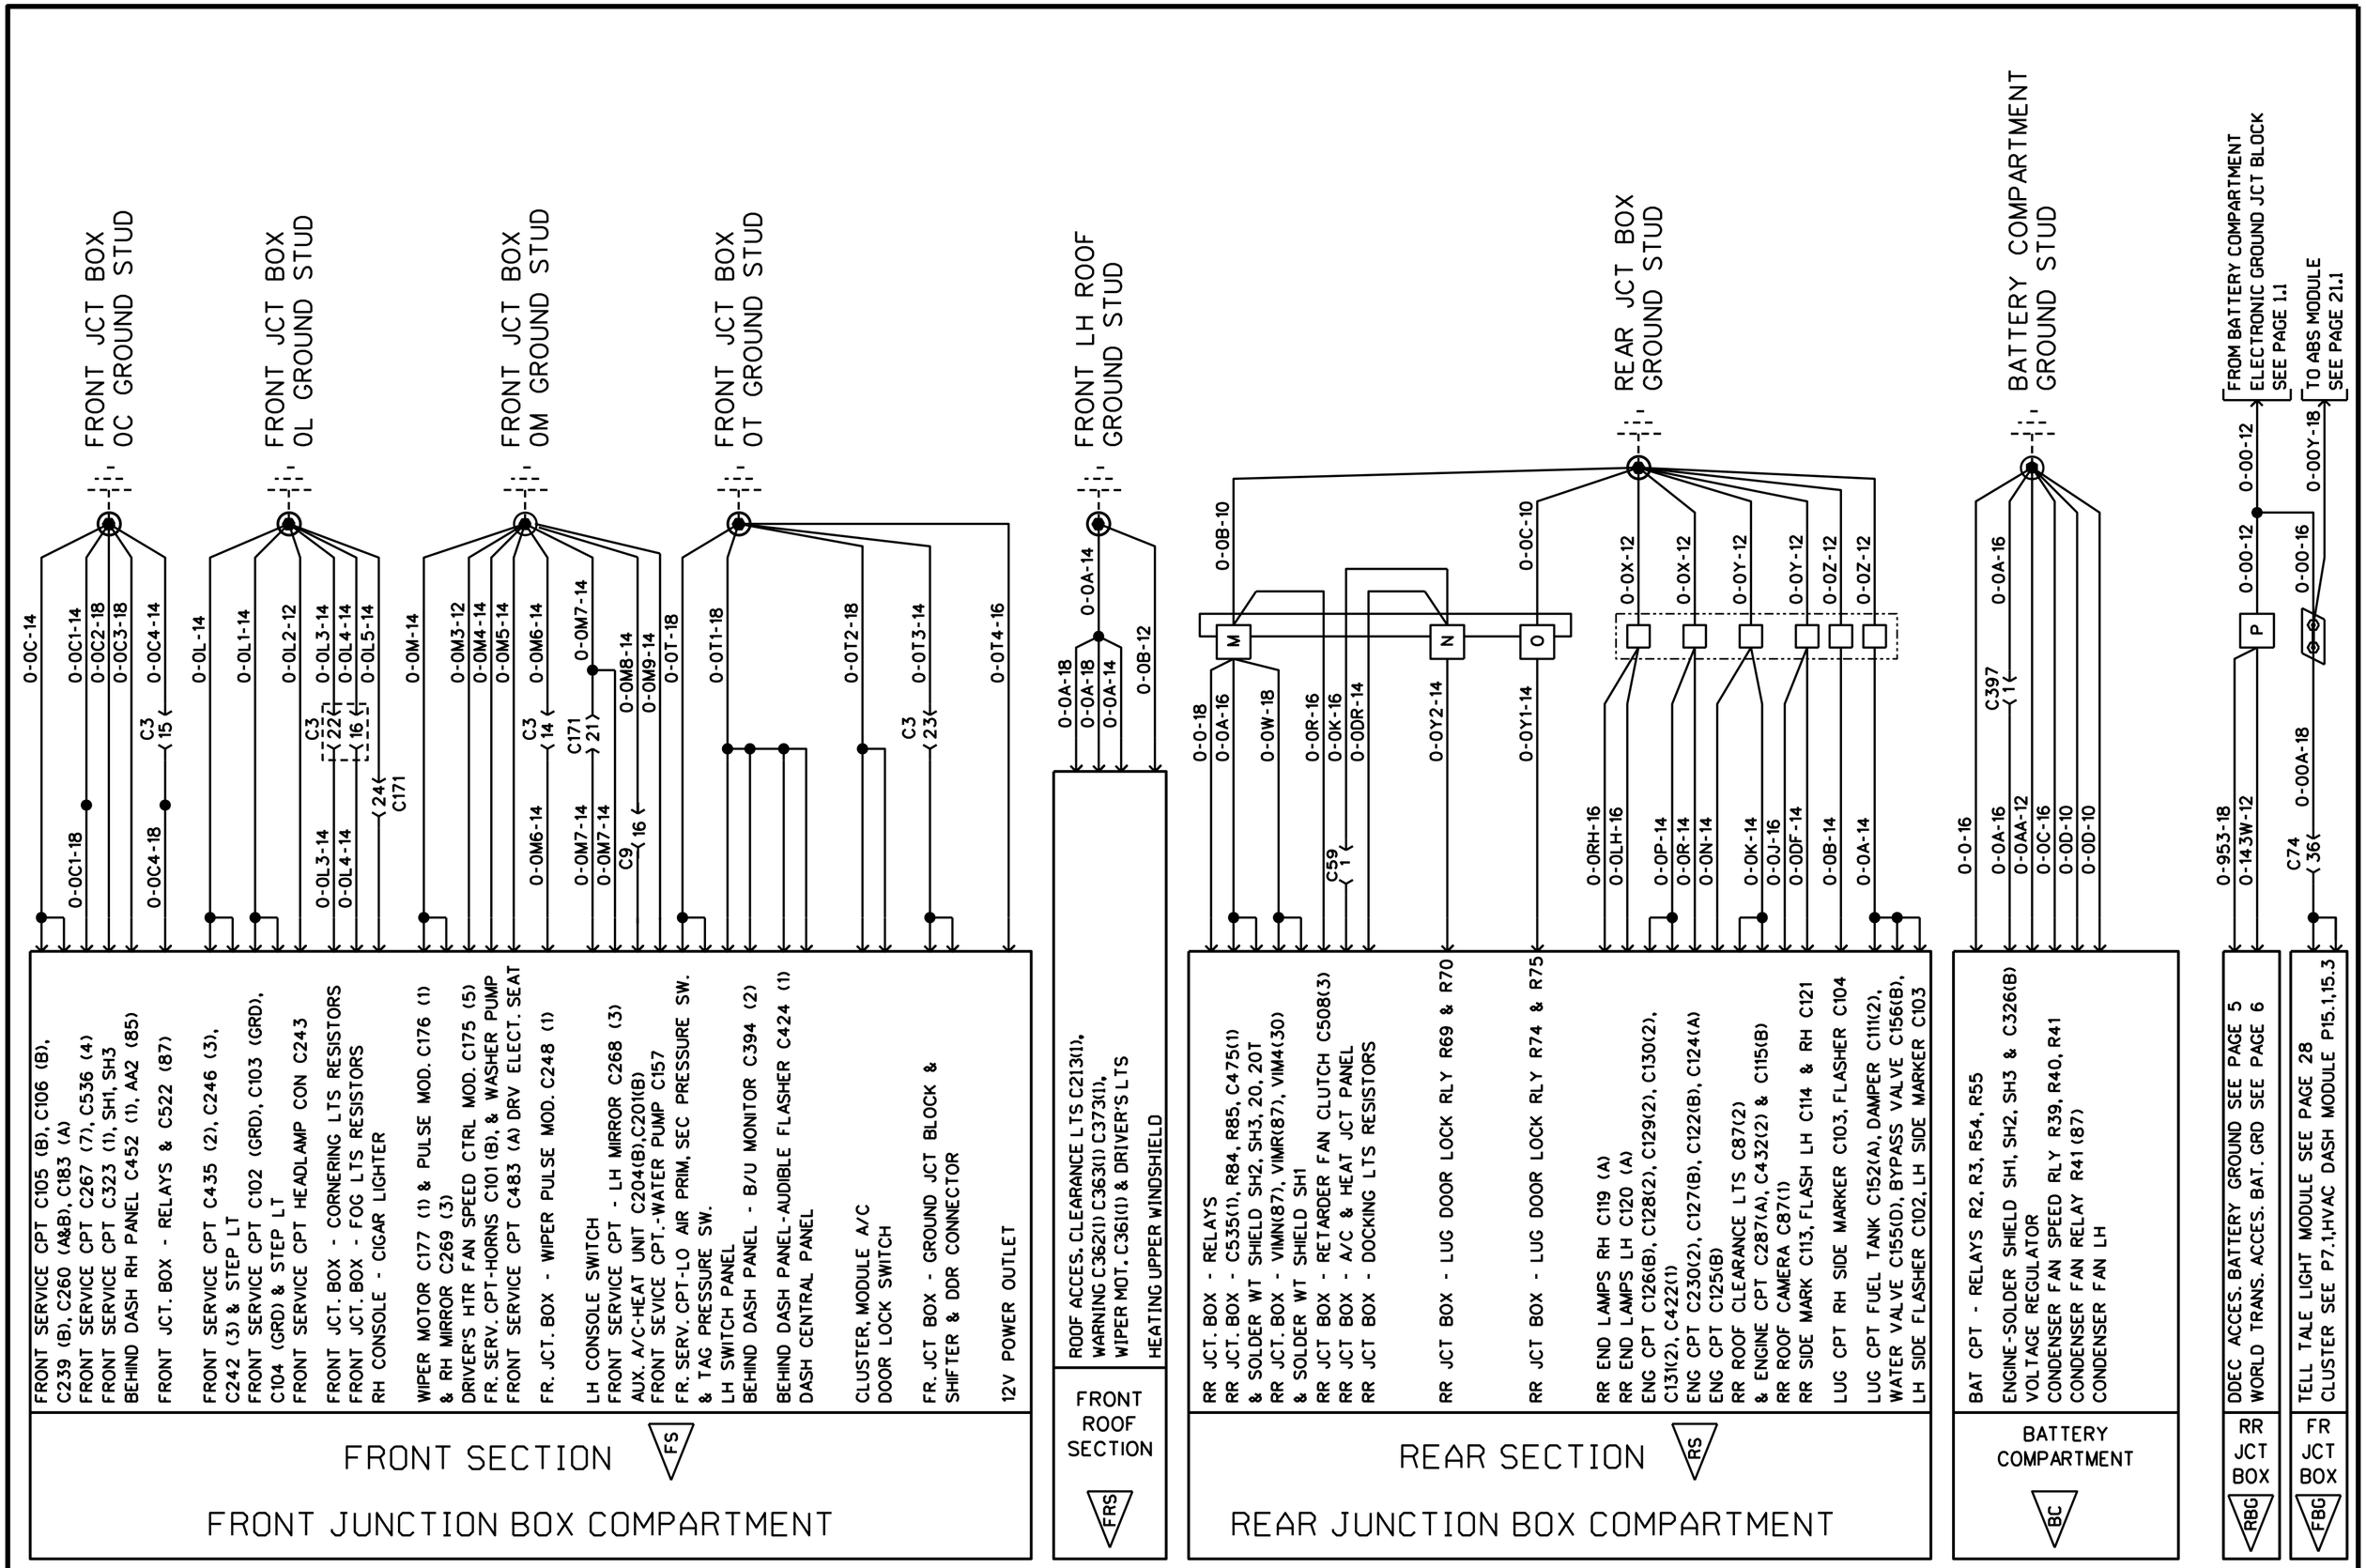

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 3.1	REVISION 04

PREVOST

WIRING DIAGRAM

CHASSIS GROUND

NO: D060912

PAGE: 3.1

REVISION 10

FRONT JUNCTION BOX COMPARTMENT

FRONT SECTION (FS)

- FRONT SERVICE CPT C105 (B), C106 (B), C239 (B), C260 (A&B), C183 (A)
- FRONT SERVICE CPT C267 (7), C536 (4)
- FRONT SERVICE CPT C323 (1), SH1, SH3
- BEHIND DASH RH PANEL C452 (1), AA2 (85)
- FRONT JCT. BOX - RELAYS & C522 (87)

0-0C-14; 0-0C1-18 → 0-0C1-14; 0-0C2-18; 0-0C3-18; 0-0C4-18 → C3 (15) → 0-0C4-14 — FRONT JCT BOX 0C GROUND STUD

- FRONT SERVICE CPT C435 (2), C246 (3), C242 (3) & STEP LT
- FRONT SERVICE CPT C102 (GRD), C103 (GRD), C104 (GRD) & STEP LT
- FRONT SERVICE CPT HEADLAMP CON C243
- FRONT JCT. BOX - CORNERING LTS RESISTORS
- FRONT JCT. BOX - FOG LTS RESISTORS
- RH CONSOLE - CIGAR LIGHTER

0-0L-14; 0-0L1-14; 0-0L2-12; 0-0L3-14 → C3 (22) → 0-0L3-14; 0-0L4-14 → C3 (16) → 0-0L4-14; 0-0L5-14 → C171 (24) — FRONT JCT BOX 0L GROUND STUD

- WIPER MOTOR C177 (1) & PULSE MOD. C176 (1) & RH MIRROR C269 (3)
- DRIVER'S HTR FAN SPEED CTRL MOD. C175 (5)
- FR. SERV. CPT-HORNS C101 (B), & WASHER PUMP
- FRONT SERVICE CPT C483 (A) DRV ELECT. SEAT
- FR. JCT. BOX - WIPER PULSE MOD. C248 (1)
- LH CONSOLE SWITCH
- FRONT SERVICE CPT - LH MIRROR C268 (3)
- AUX. A/C-HEAT UNIT C204(B),C201(B)
- FRONT SEVICE CPT.-WATER PUMP C157
- FR. SERV. CPT-LO AIR PRIM, SEC PRESSURE SW. & TAG PRESSURE SW.
- LH SWITCH PANEL
- BEHIND DASH PANEL - B/U MONITOR C394 (2)
- BEHIND DASH PANEL-AUDIBLE FLASHER C424 (1)
- DASH CENTRAL PANEL
- CLUSTER, MODULE A/C
- DOOR LOCK SWITCH
- FR. JCT BOX - GROUND JCT BLOCK & SHIFTER & DDR CONNECTOR
- 12V POWER OUTLET

0-0M-14; 0-0M3-12; 0-0M4-14; 0-0M5-14; 0-0M6-14 → C3 (14) → 0-0M6-14; 0-0M7-14 → C171 (21) → 0-0M7-14; 0-0M7-14; C9 (12) → 0-0M8-14; 0-0M9-14 — FRONT JCT BOX 0M GROUND STUD

0-0T-18; 0-0T1-18; 0-0T2-18; C3 (23) → 0-0T3-14; 0-0T4-16 — FRONT JCT BOX 0T GROUND STUD

FRONT ROOF SECTION (FRS)

- ROOF ACCES. CLEARANCE LTS C213(1), WARNING C362(1) C363(1) C373(1), WIPER MOT. C361(1) & DRIVER'S LTS
- HEATING UPPER WINDSHIELD

0-0A-18; 0-0A-18; 0-0A-14 → 0-0A-14; 0-0B-12 — FRONT LH ROOF GROUND STUD

REAR JUNCTION BOX COMPARTMENT

REAR SECTION (RS)

- RR JCT. BOX - RELAYS
- RR JCT. BOX - C535(1), R84, R85, C475(1) & SOLDER WT SHIELD SH2, SH3, 20, 20T
- RR JCT. BOX - VIMN(87), VIMR(87), VIM4(30) & SOLDER WT SHIELD SH1
- RR JCT BOX - RETARDER FAN CLUTCH C508(3)
- RR JCT BOX - A/C & HEAT JCT PANEL
- RR JCT BOX - DOCKING LTS RESISTORS
- RR JCT BOX - LUG DOOR LOCK RLY R69 & R70
- RR JCT BOX - LUG DOOR LOCK RLY R74 & R75

0-0-18; 0-0A-16; 0-0W-18 → M; 0-0B-10; 0-0R-16; C59 (1) → 0-0K-16; 0-0DR-14; 0-0Y2-14 → N; 0-0Y1-14 → O; 0-0C-10

- RR END LAMPS RH C119 (A)
- RR END LAMPS LH C120 (A)
- ENG CPT C126(B), C128(2), C129(2), C130(2), C131(2), C422(1)
- ENG CPT C230(2), C127(B), C122(B), C124(A)
- ENG CPT C125(B)
- RR ROOF CLEARANCE LTS C87(2) & ENGINE CPT C287(A), C432(2) & C115(B)
- RR ROOF CAMERA C87(1)
- RR SIDE MARK C113, FLASH LH C114 & RH C121
- LUG CPT RH SIDE MARKER C103, FLASHER C104
- LUG CPT FUEL TANK C152(A), DAMPER C111(2), WATER VALVE C155(D), BYPASS VALVE C156(B), LH SIDE FLASHER C102, LH SIDE MARKER C103

0-0RH-16; 0-0LH-16 → 0-0X-12; 0-0P-14; 0-0R-14 → 0-0X-12; 0-0N-14; 0-0K-14 → 0-0Y-12; 0-0J-16; 0-0DF-14 → 0-0Y-12; 0-0B-14 → 0-0Z-12; 0-0A-14 → 0-0Z-12 — REAR JCT BOX GROUND STUD

BATTERY COMPT. (BC)

- BAT CPT - RELAYS R2, R3, R54, R55
- ENGINE-SOLDER SHIELD SH1, SH2, SH3 & C326(B)
- VOLTAGE REGULATOR

0-0-16; 0-0A-16; 0-0AA-12; C397 (1) → 0-0A-16 — BATTERY COMPARTMENT GROUND STUD

EVAP. COMPT. (EC)

- CONDENSER FAN SPEED RLY R39, R40, R41
- CONDENSER FAN RELAY R41 (87)
- CONDENSER FAN LH

0-0C-16; 0-0D-10; 0-0D-10 — EVAP. COMPARTMENT GROUND STUD

BATTERY GROUND

RR JCT BOX (RBG)

- DDEC ACCES. BATTERY GROUND SEE PAGE 5
- WORLD TRANS. ACCES. BAT. GRD SEE PAGE 6

0-953-18; 0-143W-12 → P; 0-00-12 → 0-00-12 → FROM BATTERY COMPARTMENT ELECTRONIC GROUND JCT BLOCK SEE PAGE 1.1

FR JCT BOX (FBG)

- TELL TALE LIGHT MODULE SEE PAGE 28
- CLUSTER SEE P7.1,HVAC DASH MODULE P15.1,15.3

C74 (36) → 0-00A-18; 0-00-16; 0-00Y-18 → TO ABS MODULE SEE PAGE 21.1

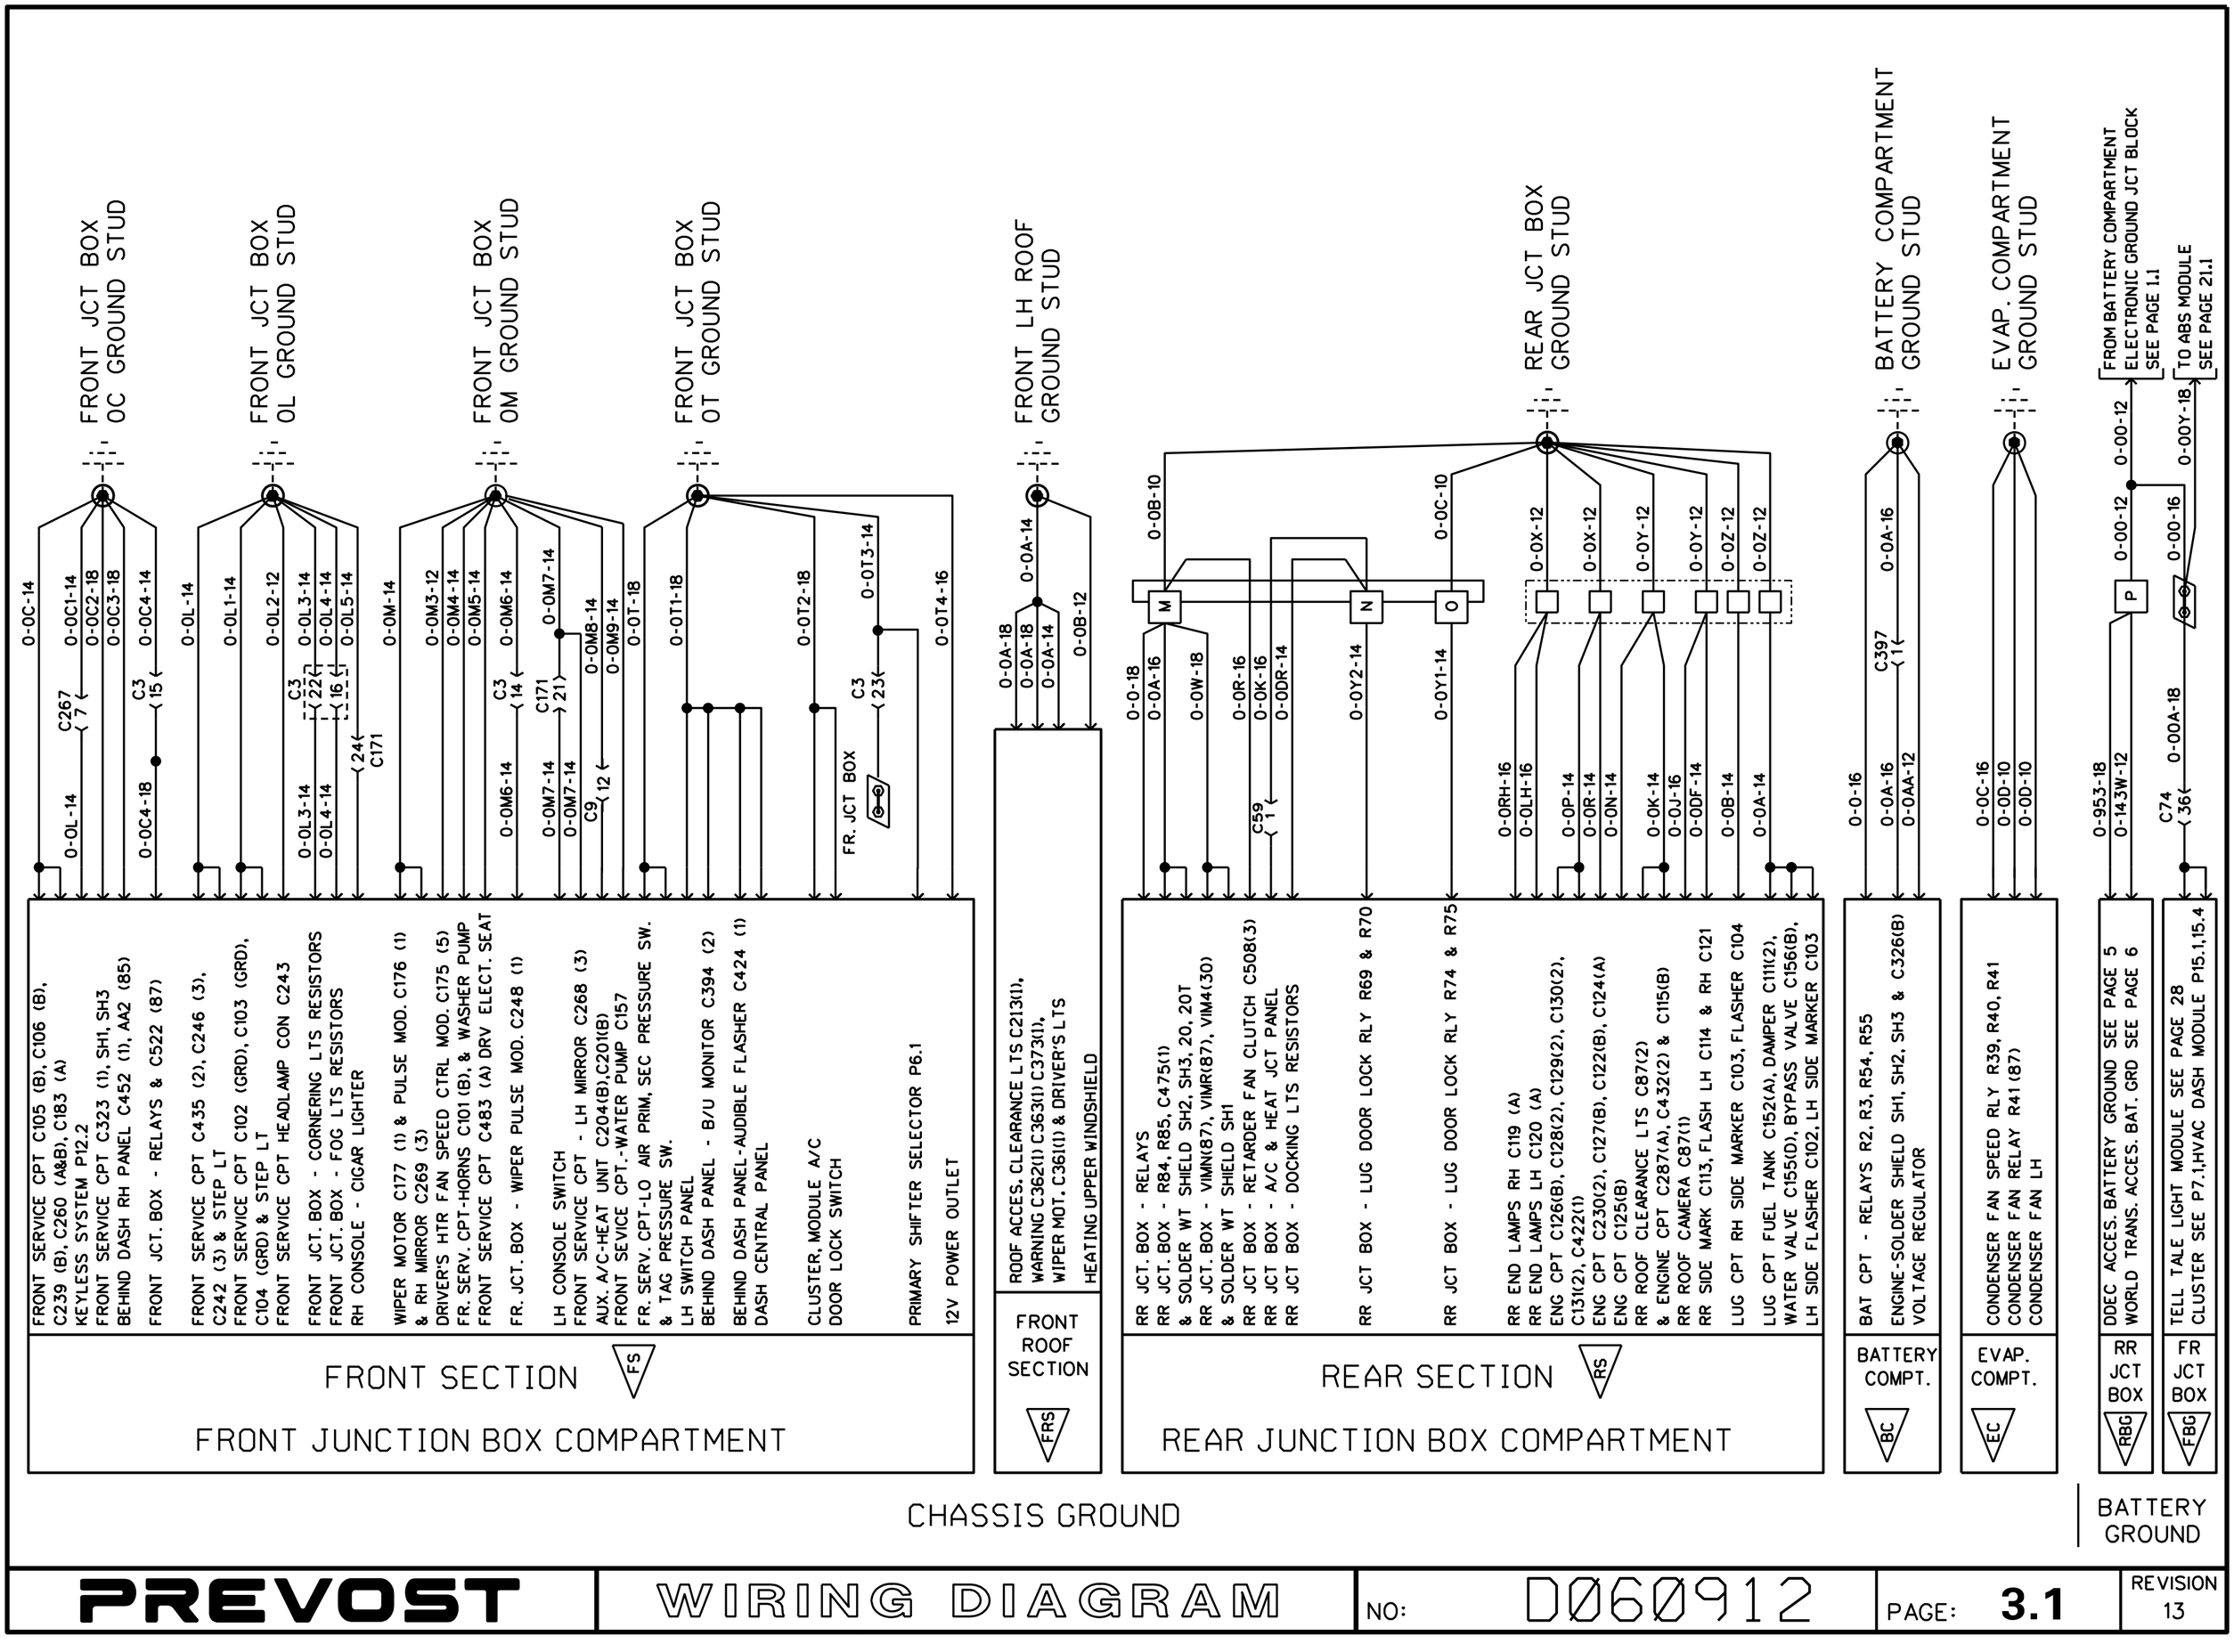
FRONT JCT BOX
0C GROUND STUD
FRONT JCT BOX
0L GROUND STUD
FRONT JCT BOX
0M GROUND STUD
FRONT JCT BOX
0T GROUND STUD
FRONT LH ROOF
GROUND STUD
REAR JCT BOX
GROUND STUD
BATTERY COMPARTMENT
GROUND STUD
EVAP. COMPARTMENT
GROUND STUD
FROM BATTERY COMPARTMENT
ELECTRONIC GROUND JCT BLOCK
SEE PAGE 1.1
TO ABS MODULE
SEE PAGE 21.1
FR. JCT BOX
FRONT SERVICE CPT C105 (B), C106 (B), C239 (B), C260 (A&B), C183 (A)
KEYLESS SYSTEM P12.2
FRONT SERVICE CPT C323 (1), SH1, SH3
BEHIND DASH RH PANEL C452 (1), AA2 (85)
FRONT JCT. BOX - RELAYS & C522 (87)
FRONT SERVICE CPT C435 (2), C246 (3), C242 (3) & STEP LT
FRONT SERVICE CPT C102 (GRD), C103 (GRD), C104 (GRD) & STEP LT
FRONT SERVICE CPT HEADLAMP CON C243
FRONT JCT. BOX - CORNERING LTS RESISTORS
FRONT JCT. BOX - FOG LTS RESISTORS
RH CONSOLE - CIGAR LIGHTER
WIPER MOTOR C177 (1) & PULSE MOD. C176 (1) & RH MIRROR C269 (3)
DRIVER'S HTR FAN SPEED CTRL MOD. C175 (5)
FR. SERV. CPT-HORNS C101 (B), & WASHER PUMP
FRONT SERVICE CPT C483 (A) DRV ELECT. SEAT
FR. JCT. BOX - WIPER PULSE MOD. C248 (1)
LH CONSOLE SWITCH
FRONT SERVICE CPT - LH MIRROR C268 (3)
AUX. A/C-HEAT UNIT C204(B),C201(B)
FRONT SEVICE CPT.-WATER PUMP C157
FR. SERV. CPT-LO AIR PRIM, SEC PRESSURE SW. & TAG PRESSURE SW.
LH SWITCH PANEL
BEHIND DASH PANEL - B/U MONITOR C394 (2)
BEHIND DASH PANEL-AUDIBLE FLASHER C424 (1)
DASH CENTRAL PANEL
CLUSTER, MODULE A/C
DOOR LOCK SWITCH
PRIMARY SHIFTER SELECTOR P6.1
12V POWER OUTLET
FRONT SECTION
FS
FRONT JUNCTION BOX COMPARTMENT
ROOF ACCES. CLEARANCE LTS C213(1), WARNING C362(1) C363(1) C373(1), WIPER MOT. C361(1) & DRIVER'S LTS
HEATING UPPER WINDSHIELD
FRONT ROOF SECTION
FRS
RR JCT. BOX - RELAYS
RR JCT. BOX - R84, R85, C475(1)
& SOLDER WT SHIELD SH2, SH3, 20, 20T
RR JCT. BOX - VIMN(87), VIMR(87), VIM4(30)
& SOLDER WT SHIELD SH1
RR JCT BOX - RETARDER FAN CLUTCH C508(3)
RR JCT BOX - A/C & HEAT JCT PANEL
RR JCT BOX - DOCKING LTS RESISTORS
RR JCT BOX - LUG DOOR LOCK RLY R69 & R70
RR JCT BOX - LUG DOOR LOCK RLY R74 & R75
RR END LAMPS RH C119 (A)
RR END LAMPS LH C120 (A)
ENG CPT C126(B), C128(2), C129(2), C130(2), C131(2), C422(1)
ENG CPT C230(2), C127(B), C122(B), C124(A)
ENG CPT C125(B)
RR ROOF CLEARANCE LTS C87(2)
& ENGINE CPT C287(A), C432(2) & C115(B)
RR ROOF CAMERA C87(1)
RR SIDE MARK C113, FLASH LH C114 & RH C121
LUG CPT RH SIDE MARKER C103, FLASHER C104
LUG CPT FUEL TANK C152(A), DAMPER C111(2), WATER VALVE C155(D), BYPASS VALVE C156(B), LH SIDE FLASHER C102, LH SIDE MARKER C103
REAR SECTION
RS
REAR JUNCTION BOX COMPARTMENT
BAT CPT - RELAYS R2, R3, R54, R55
ENGINE-SOLDER SHIELD SH1, SH2, SH3 & C326(B)
VOLTAGE REGULATOR
BATTERY COMPT.
BC
CONDENSER FAN SPEED RLY R39, R40, R41
CONDENSER FAN RELAY R41(87)
CONDENSER FAN LH
EVAP. COMPT.
EC
DDEC ACCES. BATTERY GROUND SEE PAGE 5
WORLD TRANS. ACCES. BAT. GRD SEE PAGE 6
RR JCT BOX
RBG
TELL TALE LIGHT MODULE SEE PAGE 28
CLUSTER SEE P7.1,HVAC DASH MODULE P15.1,15.4
FR JCT BOX
FBG
CHASSIS GROUND
BATTERY GROUND

PREVOST | WIRING DIAGRAM | NO: D060912 | PAGE: 3.1 | REVISION 14

CHASSIS GROUND

FRONT JUNCTION BOX COMPARTMENT

FRONT SECTION (FS)

- FRONT SERVICE CPT C105 (B), C106 (B), C239 (B), C260 (A&B), C183 (A) KEYLESS SYSTEM P12.2
- FRONT SERVICE CPT C323 (1), SH1, SH3 BEHIND DASH RH PANEL C452 (1), AA2 (85)
- FRONT JCT. BOX - RELAYS & C522 (87)
- FRONT SERVICE CPT C435 (2), C246 (3), C242 (3) & STEP LT
- FRONT SERVICE CPT C102 (GRD), C103 (GRD), C104 (GRD) & STEP LT
- FRONT SERVICE CPT HEADLAMP CON C243
- FRONT JCT. BOX - CORNERING LTS RESISTORS
- FRONT JCT. BOX - FOG LTS RESISTORS
- RH CONSOLE - CIGAR LIGHTER
- WIPER MOTOR C177 (1) & PULSE MOD. C176 (1) & RH MIRROR C269 (3)
- DRIVER'S HTR FAN SPEED CTRL MOD. C175 (5)
- FR. SERV. CPT-HORNS C101 (B), & WASHER PUMP
- FRONT SERVICE CPT C483 (A) DRV ELECT. SEAT
- FR. JCT. BOX - WIPER PULSE MOD. C248 (1)
- LH CONSOLE SWITCH
- FRONT SERVICE CPT - LH MIRROR C268 (3)
- AUX. A/C-HEAT UNIT C204(B),C201(B)
- FRONT SEVICE CPT.-WATER PUMP C157
- FR. SERV. CPT-LO AIR PRIM, SEC PRESSURE SW. & TAG PRESSURE SW.
- LH SWITCH PANEL
- BEHIND DASH PANEL - B/U MONITOR C394 (2)
- BEHIND DASH PANEL-AUDIBLE FLASHER C424 (1)
- DASH CENTRAL PANEL
- CLUSTER, DOOR LOCK SWITCH
- PRIMARY SHIFTER SELECTOR P6.1
- 12V POWER OUTLET
- HVAC DASH MODULE ONLY SEE P.15.1 & 15.4

0-0C-14 → FRONT JCT BOX 0C GROUND STUD
0-0L-14 (C267 7) 0-0C1-14
0-0C2-18
0-0C3-18
0-0C4-18 (C3 15) 0-0C4-14

0-0L-14 → FRONT JCT BOX 0L GROUND STUD
0-0L1-14
0-0L2-12
0-0L3-14 (C3 22) 0-0L3-14
0-0L4-14 (C3 16) 0-0L4-14
0-0L5-14
(C3 24) C171

0-0M-14 → FRONT JCT BOX 0M GROUND STUD
0-0M3-12
0-0M4-14
0-0M5-14
0-0M6-14 (C3 14) 0-0M6-14
0-0M7-14 (C171 21) 0-0M7-14
0-0M7-14
(C9 12) 0-0M8-14
0-0M9-14

0-0T-18 → FRONT JCT BOX 0T GROUND STUD
0-0T1-18
0-0T2-18
FR. JCT BOX (C3 23) 0-0T3-14
0-0T4-16
0-0T5-14

FRONT ROOF SECTION (FRS)

- ROOF ACCES. CLEARANCE LTS C213(1), WARNING C362(1) C363(1) C373(1), WIPER MOT. C361(1) & DRIVER'S LTS
- HEATING UPPER WINDSHIELD

0-0A-18
0-0A-18
0-0A-14 → 0-0A-14 → FRONT LH ROOF GROUND STUD
0-0B-12

REAR JUNCTION BOX COMPARTMENT

REAR SECTION (RS)

- RR JCT. BOX - RELAYS
- RR JCT. BOX - R84, R85, C475(1) & SOLDER WT SHIELD SH2, SH3, 20, 20T
- RR JCT. BOX - VIMN(87), VIMR(87), VIM4(30) & SOLDER WT SHIELD SH1
- RR JCT BOX - RETARDER FAN CLUTCH C508(3)
- RR JCT BOX - A/C & HEAT JCT PANEL
- RR JCT BOX - DOCKING LTS RESISTORS
- RR JCT BOX - LUG DOOR LOCK RLY R69 & R70
- RR JCT BOX - LUG DOOR LOCK RLY R74 & R75
- RR END LAMPS RH C119 (A)
- RR END LAMPS LH C120 (A)
- ENG CPT C126(B), C128(2), C129(2), C130(2), C131(2), C422(1)
- ENG CPT C230(2), C127(B), C122(B), C124(A)
- ENG CPT C125(B)
- RR ROOF CLEARANCE LTS C87(2) & ENGINE CPT C287(A), C432(2) & C115(B)
- RR ROOF CAMERA C87(1)
- RR SIDE MARK C113, FLASH LH C114 & RH C121
- LUG CPT RH SIDE MARKER C103, FLASHER C104
- LUG CPT FUEL TANK C152(A), DAMPER C111(2), WATER VALVE C155(D), BYPASS VALVE C156(B), LH SIDE FLASHER C102, LH SIDE MARKER C103

0-0-18
0-0A-16 → M → 0-0B-10
0-0W-18
0-0R-16
(C59 1) 0-0K-16
0-0DR-14
0-0Y2-14 → N
0-0Y1-14 → O → 0-0C-10

0-0RH-16
0-0LH-16
0-0X-12 → REAR JCT BOX GROUND STUD
0-0P-14
0-0R-14 → 0-0X-12
0-0N-14
0-0K-14 → 0-0Y-12
0-0J-16
0-0DF-14 → 0-0Y-12
0-0B-14 → 0-0Z-12
0-0A-14 → 0-0Z-12

BATTERY COMPT. (BC)

- BAT CPT - RELAYS R2, R3, R54, R55
- ENGINE-SOLDER SHIELD SH1, SH2, SH3 & C326(B)
- VOLTAGE REGULATOR

0-0-16
0-0A-16 (C397 1) 0-0A-16 → BATTERY COMPARTMENT GROUND STUD
0-0AA-12

EVAP. COMPT. (EC)

- CONDENSER FAN SPEED RLY R39, R40, R41
- CONDENSER FAN RELAY R41 (87)
- CONDENSER FAN LH

0-0C-16
0-0D-10 → EVAP. COMPARTMENT GROUND STUD
0-0D-10

BATTERY GROUND

RR JCT BOX (RBG)

- DDEC ACCES. BATTERY GROUND SEE PAGE 5
- WORLD TRANS. ACCES. BAT. GRD SEE PAGE 6

0-953-18
0-143W-12 → P → 0-00-12 → 0-00-12 → FROM BATTERY COMPARTMENT ELECTRONIC GROUND JCT BLOCK SEE PAGE 1.1

FR JCT BOX (FBG)

- TELL TALE LIGHT MODULE SEE PAGE 28
- CLUSTER SEE P7.1

(C74 36) 0-00A-18 → 0-00-16 → 0-00Y-18 → TO ABS MODULE SEE PAGE 21.1

PREVOST | WIRING DIAGRAM | NO: D06091 2 | PAGE: 3.1 | REVISION 16

CHASSIS GROUND

FRONT JUNCTION BOX COMPARTMENT — FRONT SECTION (FS)

- FRONT SERVICE CPT C105 (B), C106 (B), C239 (B), C260 (A&B), C183 (A)
  KEYLESS SYSTEM P12.2
  FRONT SERVICE CPT C323 (1), SH1, SH3
  BEHIND DASH RH PANEL C452 (1), AA2 (85)
- FRONT JCT. BOX - RELAYS & C522 (87)
- FRONT SERVICE CPT C435 (2), C246 (3), C242 (3) & STEP LT
  FRONT SERVICE CPT C102 (GRD), C103 (GRD), C104 (GRD) & STEP LT
  FRONT SERVICE CPT HEADLAMP CON C243
- FRONT JCT. BOX - CORNERING LTS RESISTORS
  FRONT JCT. BOX - FOG LTS RESISTORS
  RH CONSOLE - CIGAR LIGHTER
- WIPER MOTOR C177 (1) & PULSE MOD. C176 (1) & RH MIRROR C269 (3)
  DRIVER'S HTR FAN SPEED CTRL MOD. C175 (5)
  FR. SERV. CPT-HORNS C101 (B), & WASHER PUMP
  FRONT SERVICE CPT C483 (A) DRV ELECT. SEAT
- FR. JCT. BOX - WIPER PULSE MOD. C248 (1)
- LH CONSOLE SWITCH
  FRONT SERVICE CPT - LH MIRROR C268 (3)
  AUX. A/C-HEAT UNIT C204(B),C201(B)
  FRONT SEVICE CPT.-WATER PUMP C157
- FR. SERV. CPT-LO AIR PRIM, SEC PRESSURE SW. & TAG PRESSURE SW.
  LH SWITCH PANEL
  BEHIND DASH PANEL - B/U MONITOR C394 (2)
- BEHIND DASH PANEL-AUDIBLE FLASHER C424 (1)
  DASH CENTRAL PANEL
- CLUSTER, MODULE A/C
  DOOR LOCK SWITCH
- STEERING CONTROL ZF P17..1
- PRIMARY SHIFTER SELECTOR P6.1
- 12V POWER OUTLET

0-0C-14 → FRONT JCT BOX 0C GROUND STUD
0-0L-14 (C267 7) 0-0C1-14; 0-0C2-18; 0-0C3-18; 0-0C4-18 (C3 15) 0-0C4-14

0-0L-14 → FRONT JCT BOX 0L GROUND STUD
0-0L1-14; 0-0L2-12; 0-0L3-14 (C3 22); 0-0L4-14 (C3 16); 0-0L5-14 (C171 24)

0-0M-14 → FRONT JCT BOX 0M GROUND STUD
0-0M3-12; 0-0M4-14; 0-0M5-14; 0-0M6-14 (C3 14); 0-0M7-14 (C171 21); 0-0M7-14; 0-0M8-14 (C9 12); 0-0M9-14

0-0T-18 → FRONT JCT BOX 0T GROUND STUD
0-0T1-18; 0-0T2-18; FR. JCT BOX 0-0C2-18 (C3 23) 0-0T3-14; 0-0T4-16

FRONT ROOF SECTION (FRS)

- ROOF ACCES. CLEARANCE LTS C213(1), WARNING C362(1) C363(1) C373(1), WIPER MOT. C361(1) & DRIVER'S LTS
- HEATING UPPER WINDSHIELD

0-0A-18; 0-0A-18; 0-0A-14 → 0-0A-14 → FRONT LH ROOF GROUND STUD
0-0B-12

REAR JUNCTION BOX COMPARTMENT — REAR SECTION (RS)

- RR JCT. BOX - RELAYS
  RR JCT. BOX - R84, R85, C475(1) & SOLDER WT SHIELD SH2, SH3, 20, 20T
  RR JCT. BOX - VIMN(87), VIMR(87), VIM4(30) & SOLDER WT SHIELD SH1
- RR JCT BOX - RETARDER FAN CLUTCH C508(3)
  RR JCT BOX - A/C & HEAT JCT PANEL
  RR JCT BOX - DOCKING LTS RESISTORS
- RR JCT BOX - LUG DOOR LOCK RLY R69 & R70
- RR JCT BOX - LUG DOOR LOCK RLY R74 & R75
- RR END LAMPS RH C119 (A)
  RR END LAMPS LH C120 (A)
  ENG CPT C126(B), C128(2), C129(2), C130(2), C131(2), C422(1)
  ENG CPT C230(2), C127(B), C122(B), C124(A)
  ENG CPT C125(B)
  RR ROOF CLEARANCE LTS C87(2) & ENGINE CPT C287(A), C432(2) & C115(B)
  RR ROOF CAMERA C87(1)
  RR SIDE MARK C113, FLASH LH C114 & RH C121
- LUG CPT RH SIDE MARKER C103, FLASHER C104
- LUG CPT FUEL TANK C152(A), DAMPER C111(2), WATER VALVE C155(D), BYPASS VALVE C156(B), LH SIDE FLASHER C102, LH SIDE MARKER C103

0-0-18; 0-0A-16; 0-0W-18 → M → 0-0B-10
0-0R-16; C59 1 0-0K-16; 0-0DR-14
0-0Y2-14 → N
0-0Y1-14 → O → 0-0C-10

0-0RH-16; 0-0LH-16 → 0-0X-12
0-0P-14; 0-0R-14 → 0-0X-12
0-0N-14 → 0-0Y-12
0-0K-14; 0-0J-16; 0-0DF-14 → 0-0Y-12
0-0B-14 → 0-0Z-12
0-0A-14 → 0-0Z-12
→ REAR JCT BOX GROUND STUD

BATTERY COMPARTMENT (BC)

- BAT CPT - RELAYS R2, R3, R54, R55
- ENGINE-SOLDER SHIELD SH1, SH2, SH3 & C326(B)
  VOLTAGE REGULATOR

0-0-16; 0-0A-16; 0-0AA-12 (C397 1) 0-0A-16 → BATTERY COMPARTMENT GROUND STUD

EVAP. COMPT. (EC)

- CONDENSER FAN SPEED RLY R39, R40, R41
  CONDENSER FAN RELAY R41 (87)
  CONDENSER FAN LH

0-0C-16; 0-0D-10; 0-0D-10 → EVAP. COMPARTMENT GROUND STUD

BATTERY GROUND

RR JCT BOX (RBG)

- DDEC ACCES. BATTERY GROUND SEE PAGE 5
  WORLD TRANS. ACCES. BAT. GRD SEE PAGE 6

0-953-18; 0-143W-12 → P → 0-00-12 → 0-00-12 → FROM BATTERY COMPARTMENT ELECTRONIC GROUND JCT BLOCK SEE PAGE 1.1

FR JCT BOX (FBG)

- TELL TALE LIGHT MODULE SEE PAGE 28
  CLUSTER SEE P7.1,HVAC DASH MODULE P15.1,15.4

C74 36 0-00A-18 → 0-00-16 → 0-00Y-18 → TO ABS MODULE SEE PAGE 21.1

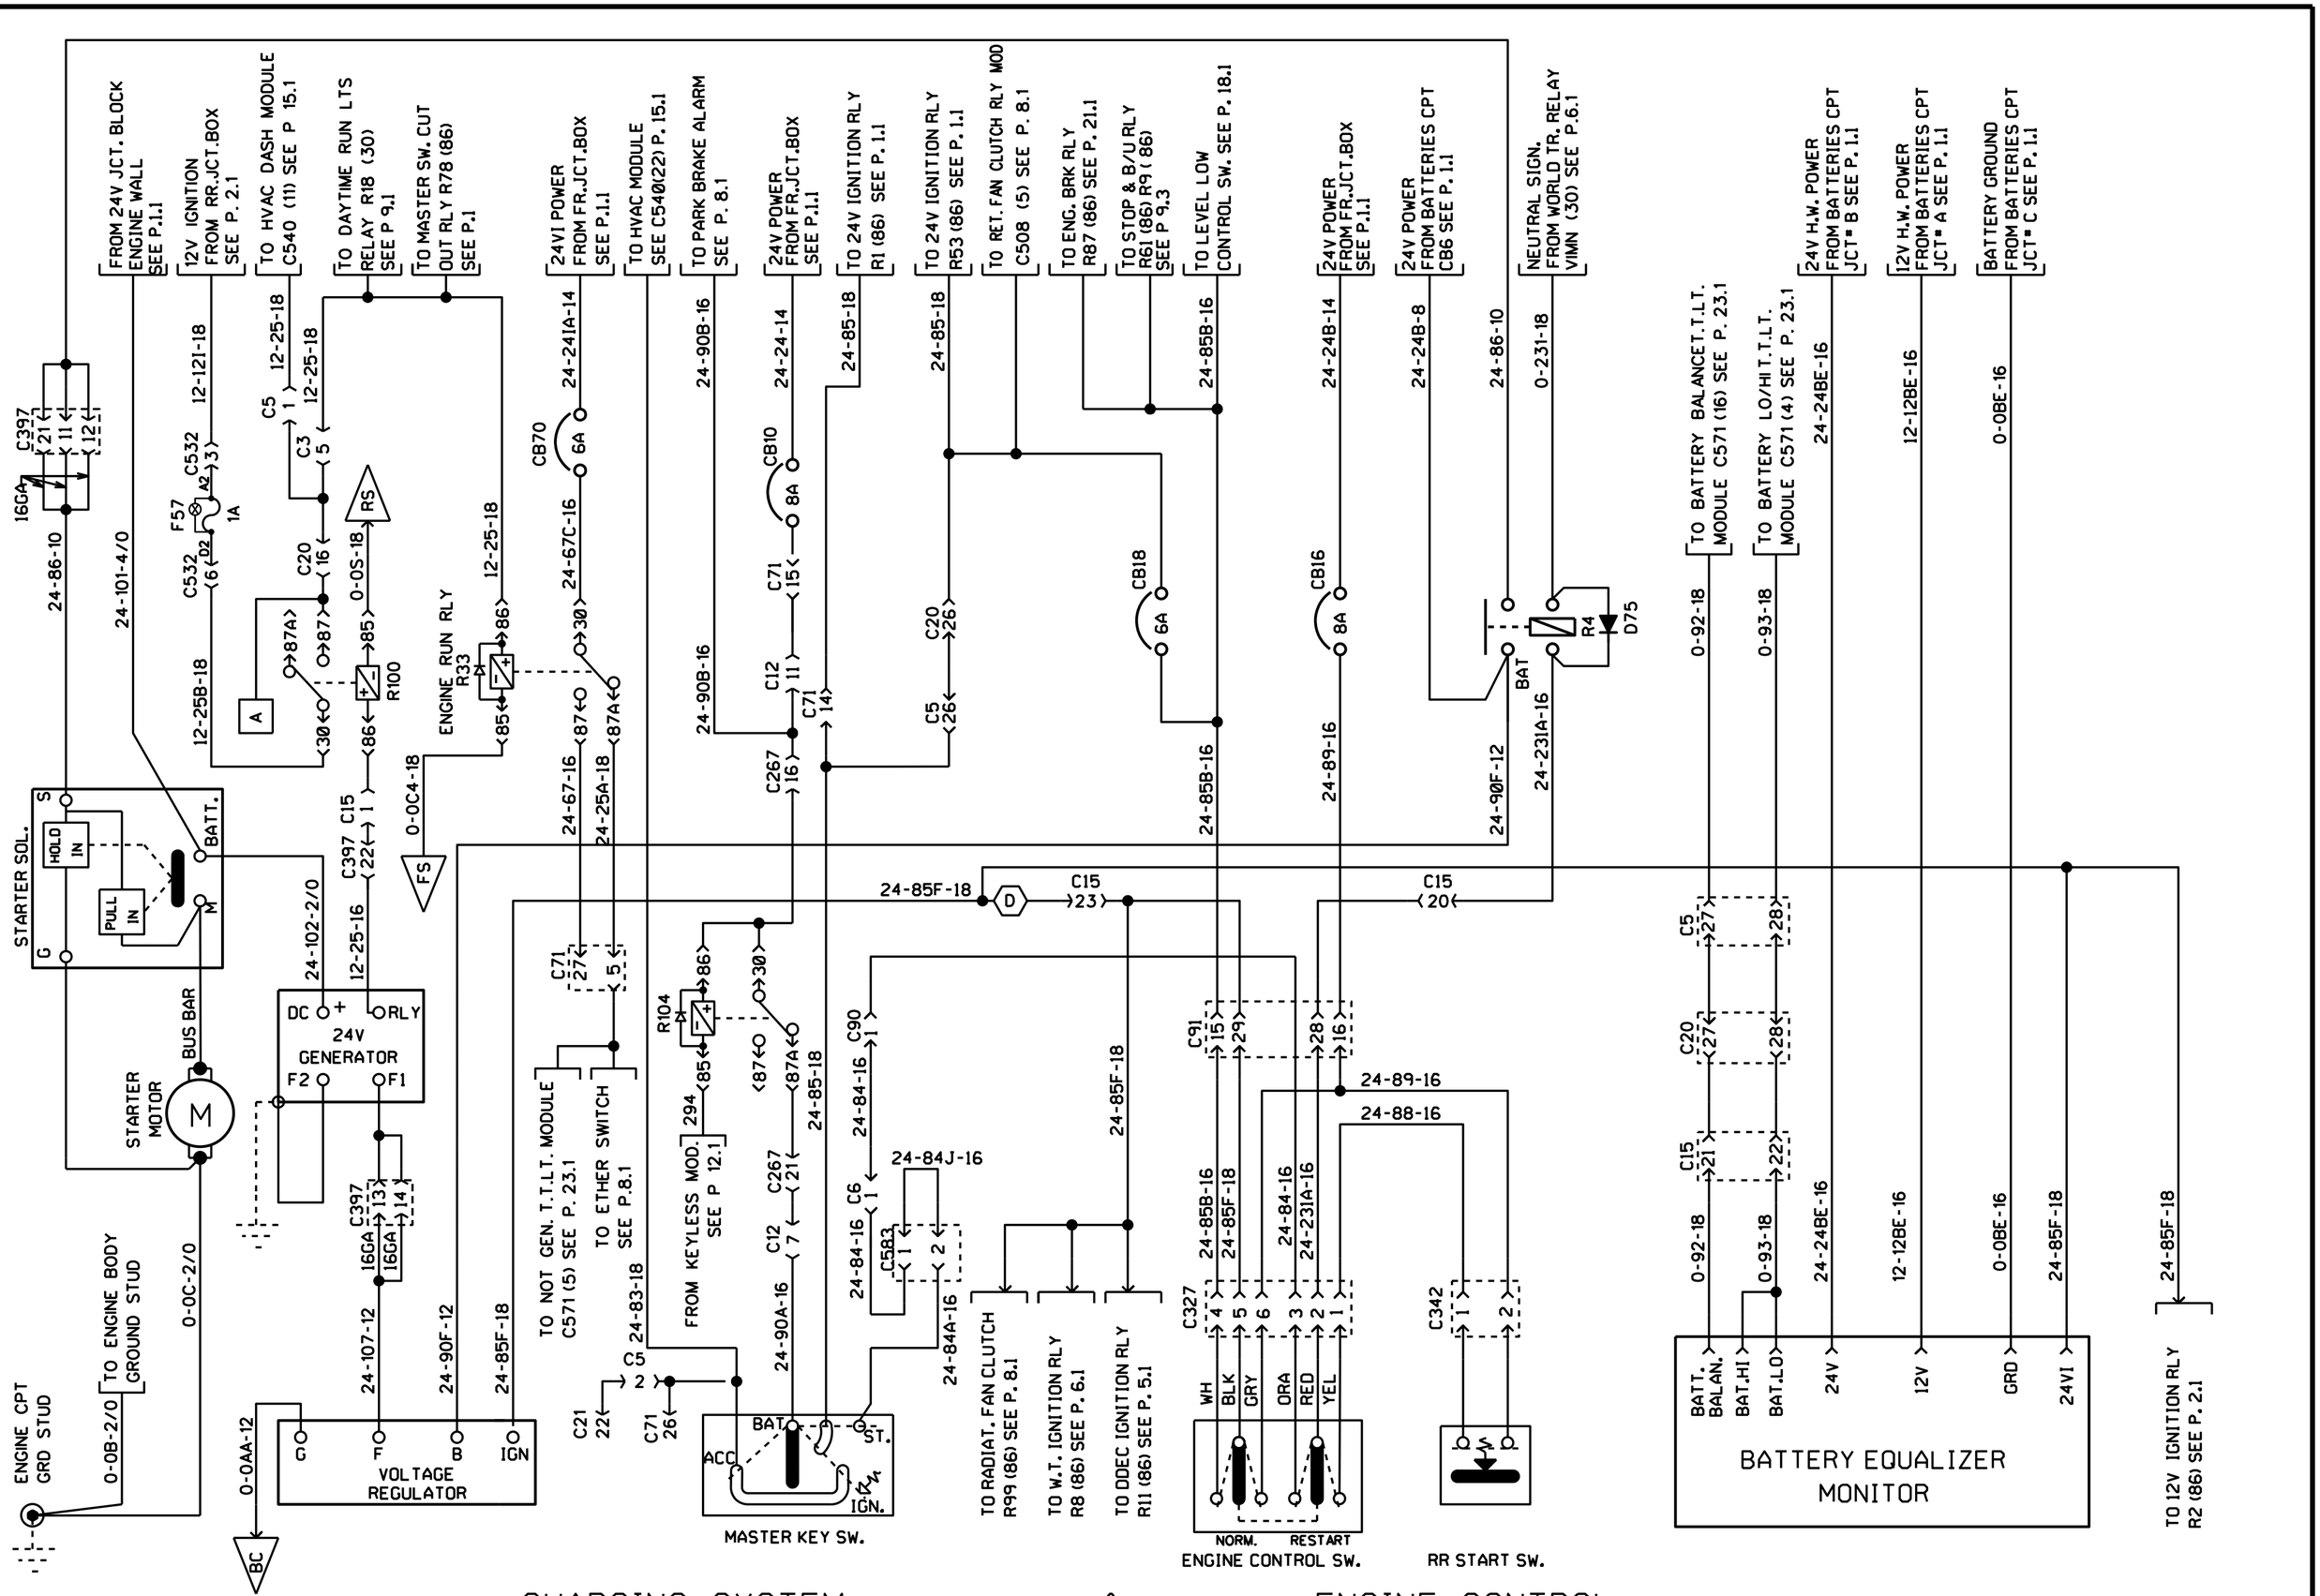

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 4.1	REVISION 00

FROM STARTER RELAY R4 SEE THIS PAGE

FROM 24V JCT. BLOCK ENGINE WALL SEE P.1.1

12V IGNITION FROM RR.JCT.BOX SEE P. 2.1

TO HVAC DASH MODULE C540 (11) SEE P 15.1

TO DAYTIME RUN LTS RELAY R18 (30) SEE P 9.1

TO MASTER SW. CUT OUT RLY R78 (86) SEE P.1.1

24VI POWER FROM FR.JCT.BOX SEE P.1.1

TO HVAC MODULE SEE C540 P. 15.1 , 15.3

TO PARK BRAKE ALARM SEE P. 8.1

24V POWER FROM FR.JCT.BOX SEE P.1.1

TO 24V IGNITION RLY R1 (86) SEE P. 1.1

TO 24V IGNITION RLY R53 (86) SEE P. 1.1

TO RET. FAN CLUTCH RLY MOD C508 (5) SEE P. 8.1

TO ENG. BRK RLY R87 (86) SEE P. 21.1

TO STOP & B/U RLY R61 (86) R9 (86) SEE P 9.3

TO LEVEL LOW CONTROL SW. SEE P. 18.1

24V POWER FROM FR.JCT.BOX SEE P.1.1

24V POWER FROM BATTERIES CPT CB6 SEE P. 1.1

TO STARTER SOL. SEE THIS PAGE OR 4.2

NEUTRAL SIGN. FROM WORLD TR. RELAY VMN (30) SEE P.6.1

TO BATTERY BALANCE T.T.L.T. MODULE C571 (16) SEE P. 23.1

TO BATTERY LO/HI T.T.L.T. MODULE C571 (4) SEE P. 23.1

24V H.W. POWER FROM BATTERIES CPT JCT° B SEE P. 1.1

12V H.W. POWER FROM BATTERIES CPT JCT° A SEE P. 1.1

BATTERY GROUND FROM BATTERIES CPT JCT° C SEE P. 1.1

STARTER & ALTERNATOR DELCO

ENGINE CONTROL

PREVOST

WIRING DIAGRAM

NO: D060912

PAGE: 4.1

REVISION 01

FROM STARTER RELAY
R4 SEE THIS PAGE

FROM 24V JCT. BLOCK
ENGINE WALL
SEE P.1.1

12V IGNITION
FROM RR.JCT.BOX
SEE P. 2.1

TO HVAC DASH MODULE
C540 (11) SEE P 15.1

TO DAYTIME RUN LTS
RELAY R18 (30)
SEE P 9.1

TO MASTER SW. CUT
OUT RLY R78 (86)
SEE P.1.1

24VI POWER
FROM FR.JCT.BOX
SEE P.1.1

TO HVAC MODULE
SEE C540 P. 15.1 , 15.3

TO PARK BRAKE ALARM
SEE P. 8.1

24V POWER
FROM FR.JCT.BOX
SEE P.1.1

TO 24V IGNITION RLY
R1 (86) SEE P. 1.1

TO 24V IGNITION RLY
R53 (86) SEE P. 1.1

TO ENG. BRK RLY
R87 (86) SEE P. 21.1

TO STOP & B/U RLY
R61 (86) R9 (86)
SEE P 9.3

TO LEVEL LOW
CONTROL SW. SEE P. 18.1

24V POWER
FROM FR.JCT.BOX
SEE P.1.1

24V POWER
FROM BATTERIES CPT
CB6 SEE P. 1.1

TO STARTER SOL.
SEE THIS PAGE OR 4.2

NEUTRAL SIGN.
FROM WORLD TR. RELAY
VIMN (30) SEE P.6.1

TO BATTERY BALANCET.T.L.T.
MODULE C571 (16) SEE P. 23.1

TO BATTERY LO/HI T.T.L.T.
MODULE C571 (4) SEE P. 23.1

24V H.W. POWER
FROM BATTERIES CPT
JCT" B SEE P. 1.1

12V H.W. POWER
FROM BATTERIES CPT
JCT" A SEE P. 1.1

BATTERY GROUND
FROM BATTERIES CPT
JCT" C SEE P. 1.1

160A
C397
24-86-10
24-101-4/0
F57
C532
1A
12-121-18
12-25B-18
A
C20
0-05-18
R100
RS
C5
C3
12-25-18
ENGINE RUN RLY
R33
CB70
24-241A-14
24-67C-16
6A
30
87
87A
85
86
24-67-16
24-25A-18
0-0C4-18
FS
CB10
8A
C71
C12
C267
24-24-14
24-90B-16
24-85-18
C20
C5
CB18
6A
CB16
8A
24-24B-14
24-89-16
24-24B-8
24-90F-12
24-86-10
BAT
24-231A-16
0-231-18
R4
D75
0-92-18
0-93-18
24-24BE-16
12-12BE-16
0-0BE-16
24-85F-18
STARTER SOL.
S
HOLD IN
PULL IN
BATT.
M
G
24-102-2/0
12-25-16
C397 C15
FS
24-85F-18
D
C15
23
20
C71
27
5
R104
294
FROM KEYLESS MOD.
SEE P 12.1
24-85-18
C90
24-84-16
1
24-84J-16
C6
C583
24-84A-16
C91
15
29
28
16
24-89-16
24-88-16
C5
27
28
C20
C15
21
22
DC
+
RLY
24V
ALTERNATOR
F2
F1
BUS BAR
STARTER
MOTOR
M
C397
16GA
13
14
TO NOT GEN. T.T.L.T. MODULE
C571 (5) SEE P. 23.1
TO ETHER SWITCH
SEE P.8.1
24-83-18
C5
2
C21
22
C71
26
C12
7
C267
21
24-90A-16
BAT.
ST.
ACC
IGN.
MASTER KEY SW.
TO RADIAT. FAN CLUTCH
R99 (86) C5085 SEE P. 8.1
C327
WH
BLK
GRY
ORA
RED
YEL
NORM.
RESTART
ENGINE CONTROL SW.
C342
RR START SW.
BATT.
BALAN.
BAT.HI
BAT.LO
24V
12V
GRD
24VI
BATTERY EQUALIZER
MONITOR
TO 12V IGNITION RLY
R2 (86) SEE P. 2.1
ENGINE CPT
GRD STUD
0-0B-2/0
TO ENGINE BODY
GROUND STUD
0-0C-2/0
24-107-12
24-90F-12
24-85F-18
0-0AA-12
G
F
B
IGN
VOLTAGE
REGULATOR
BC

STARTER & ALTERNATOR DELCO

ENGINE CONTROL

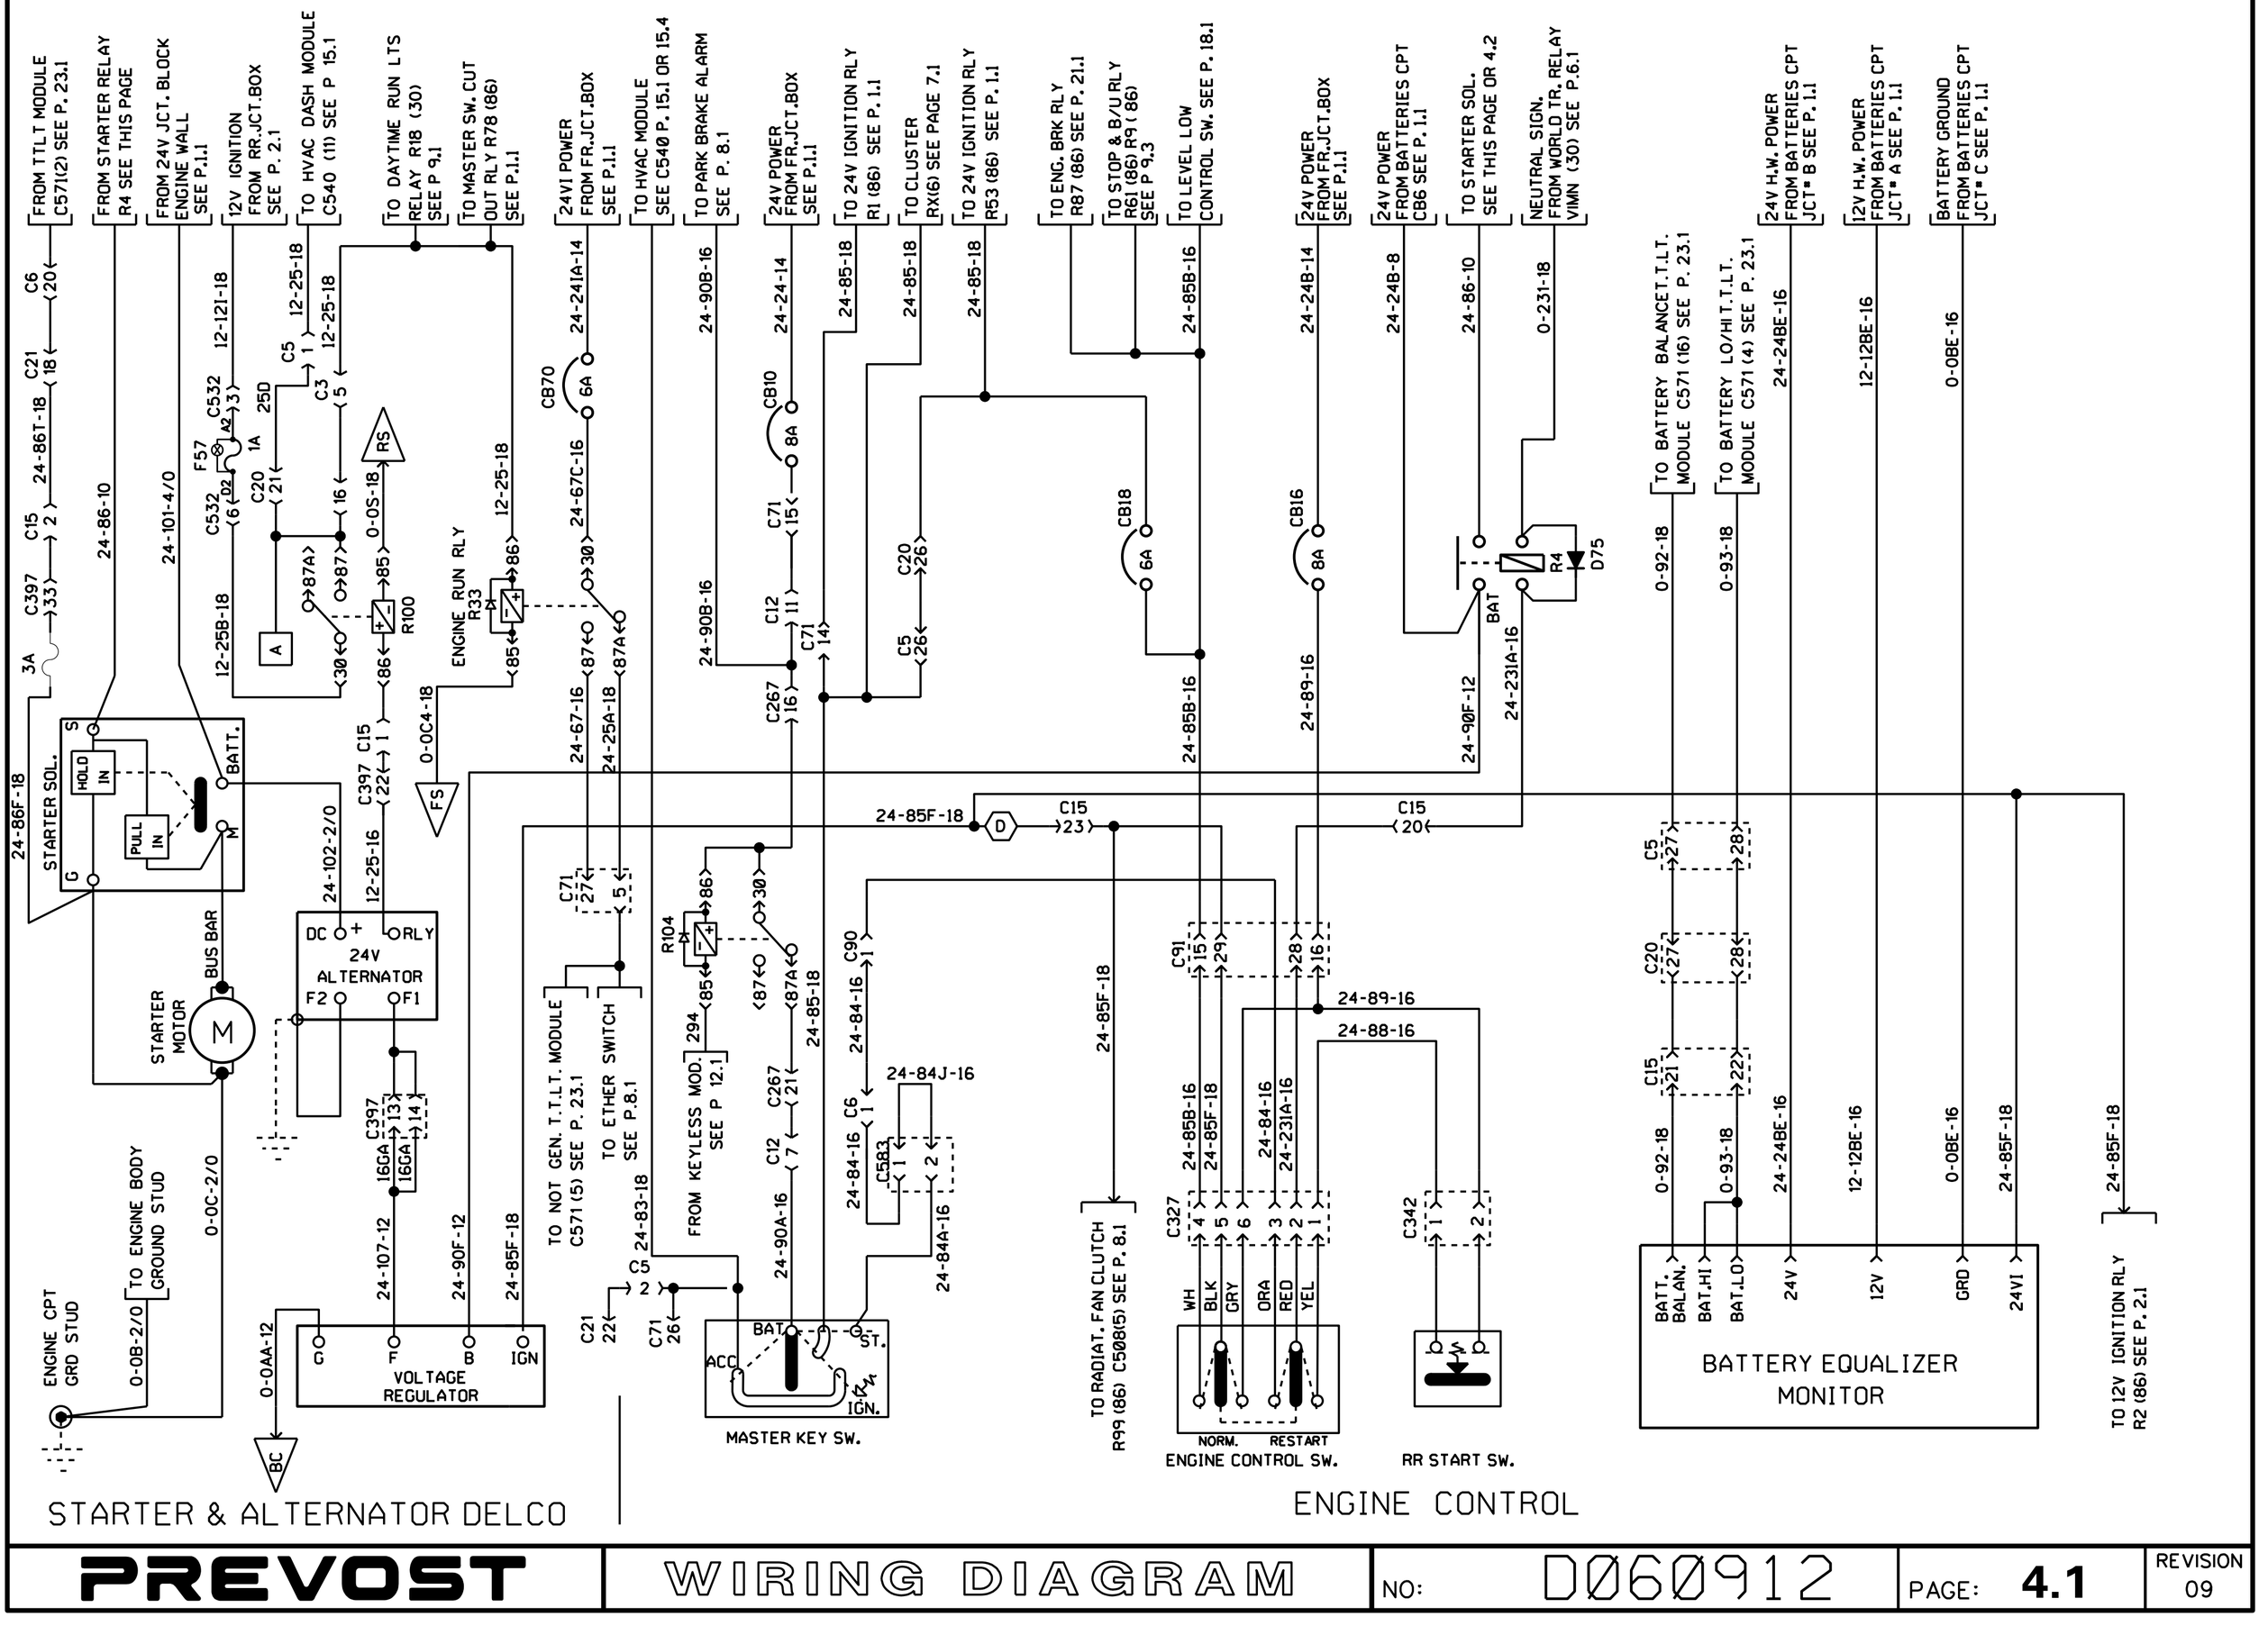
FROM TTLT MODULE C571(2) SEE P. 23.1
FROM STARTER RELAY R4 SEE THIS PAGE
FROM 24V JCT. BLOCK ENGINE WALL SEE P.1.1
12V IGNITION FROM RR.JCT.BOX SEE P. 2.1
TO HVAC DASH MODULE C540 (11) SEE P 15.1
TO DAYTIME RUN LTS RELAY R18 (30) SEE P 9.1
TO MASTER SW. CUT OUT RLY R78 (86) SEE P.1.1
24VI POWER FROM FR.JCT.BOX SEE P.1.1
TO HVAC MODULE SEE C540 P. 15.1 OR 15.4
TO PARK BRAKE ALARM SEE P. 8.1
24V POWER FROM FR.JCT.BOX SEE P.1.1
TO 24V IGNITION RLY R1 (86) SEE P. 1.1
TO CLUSTER RX(6) SEE PAGE 7.1
TO 24V IGNITION RLY R53 (86) SEE P. 1.1
TO ENG. BRK RLY R87 (86) SEE P. 21.1
TO STOP & B/U RLY R61 (86) R9 (86) SEE P 9.3
TO LEVEL LOW CONTROL SW. SEE P. 18.1
24V POWER FROM FR.JCT.BOX SEE P.1.1
24V POWER FROM BATTERIES CPT CB6 SEE P. 1.1
TO STARTER SOL. SEE THIS PAGE OR 4.2
NEUTRAL SIGN. FROM WORLD TR. RELAY VIMN (30) SEE P.6.1
TO BATTERY BALANCE T.T.L.T. MODULE C571 (16) SEE P. 23.1
TO BATTERY LO/HI T.T.L.T. MODULE C571 (4) SEE P. 23.1
24V H.W. POWER FROM BATTERIES CPT JCT* B SEE P. 1.1
12V H.W. POWER FROM BATTERIES CPT JCT* A SEE P. 1.1
BATTERY GROUND FROM BATTERIES CPT JCT* C SEE P. 1.1
STARTER SOL.
HOLD IN
PULL IN
BATT.
STARTER MOTOR
BUS BAR
24V ALTERNATOR
DC +
RLY
F2
F1
ENGINE RUN RLY
R33
R100
R104
RS
F57
C532
C20
C397
C15
C3
C5
C12
C71
C267
C6
C583
C90
C91
C327
C342
C5
C20
C15
FS
BC
D
TO NOT GEN. T.T.L.T. MODULE C571 (5) SEE P. 23.1
TO ETHER SWITCH SEE P.8.1
FROM KEYLESS MOD. SEE P 12.1
TO RADIAT. FAN CLUTCH R99 (86) C508(5) SEE P. 8.1
ENGINE CPT GRD STUD
TO ENGINE BODY GROUND STUD
VOLTAGE REGULATOR
G
F
B
IGN
MASTER KEY SW.
BAT
ACC
IGN.
ST.
ENGINE CONTROL SW.
NORM.
RESTART
RR START SW.
BATTERY EQUALIZER MONITOR
BATT. BALAN.
BAT.HI
BAT.LO
24V
12V
GRD
24VI
TO 12V IGNITION RLY R2 (86) SEE P. 2.1
STARTER & ALTERNATOR DELCO
ENGINE CONTROL

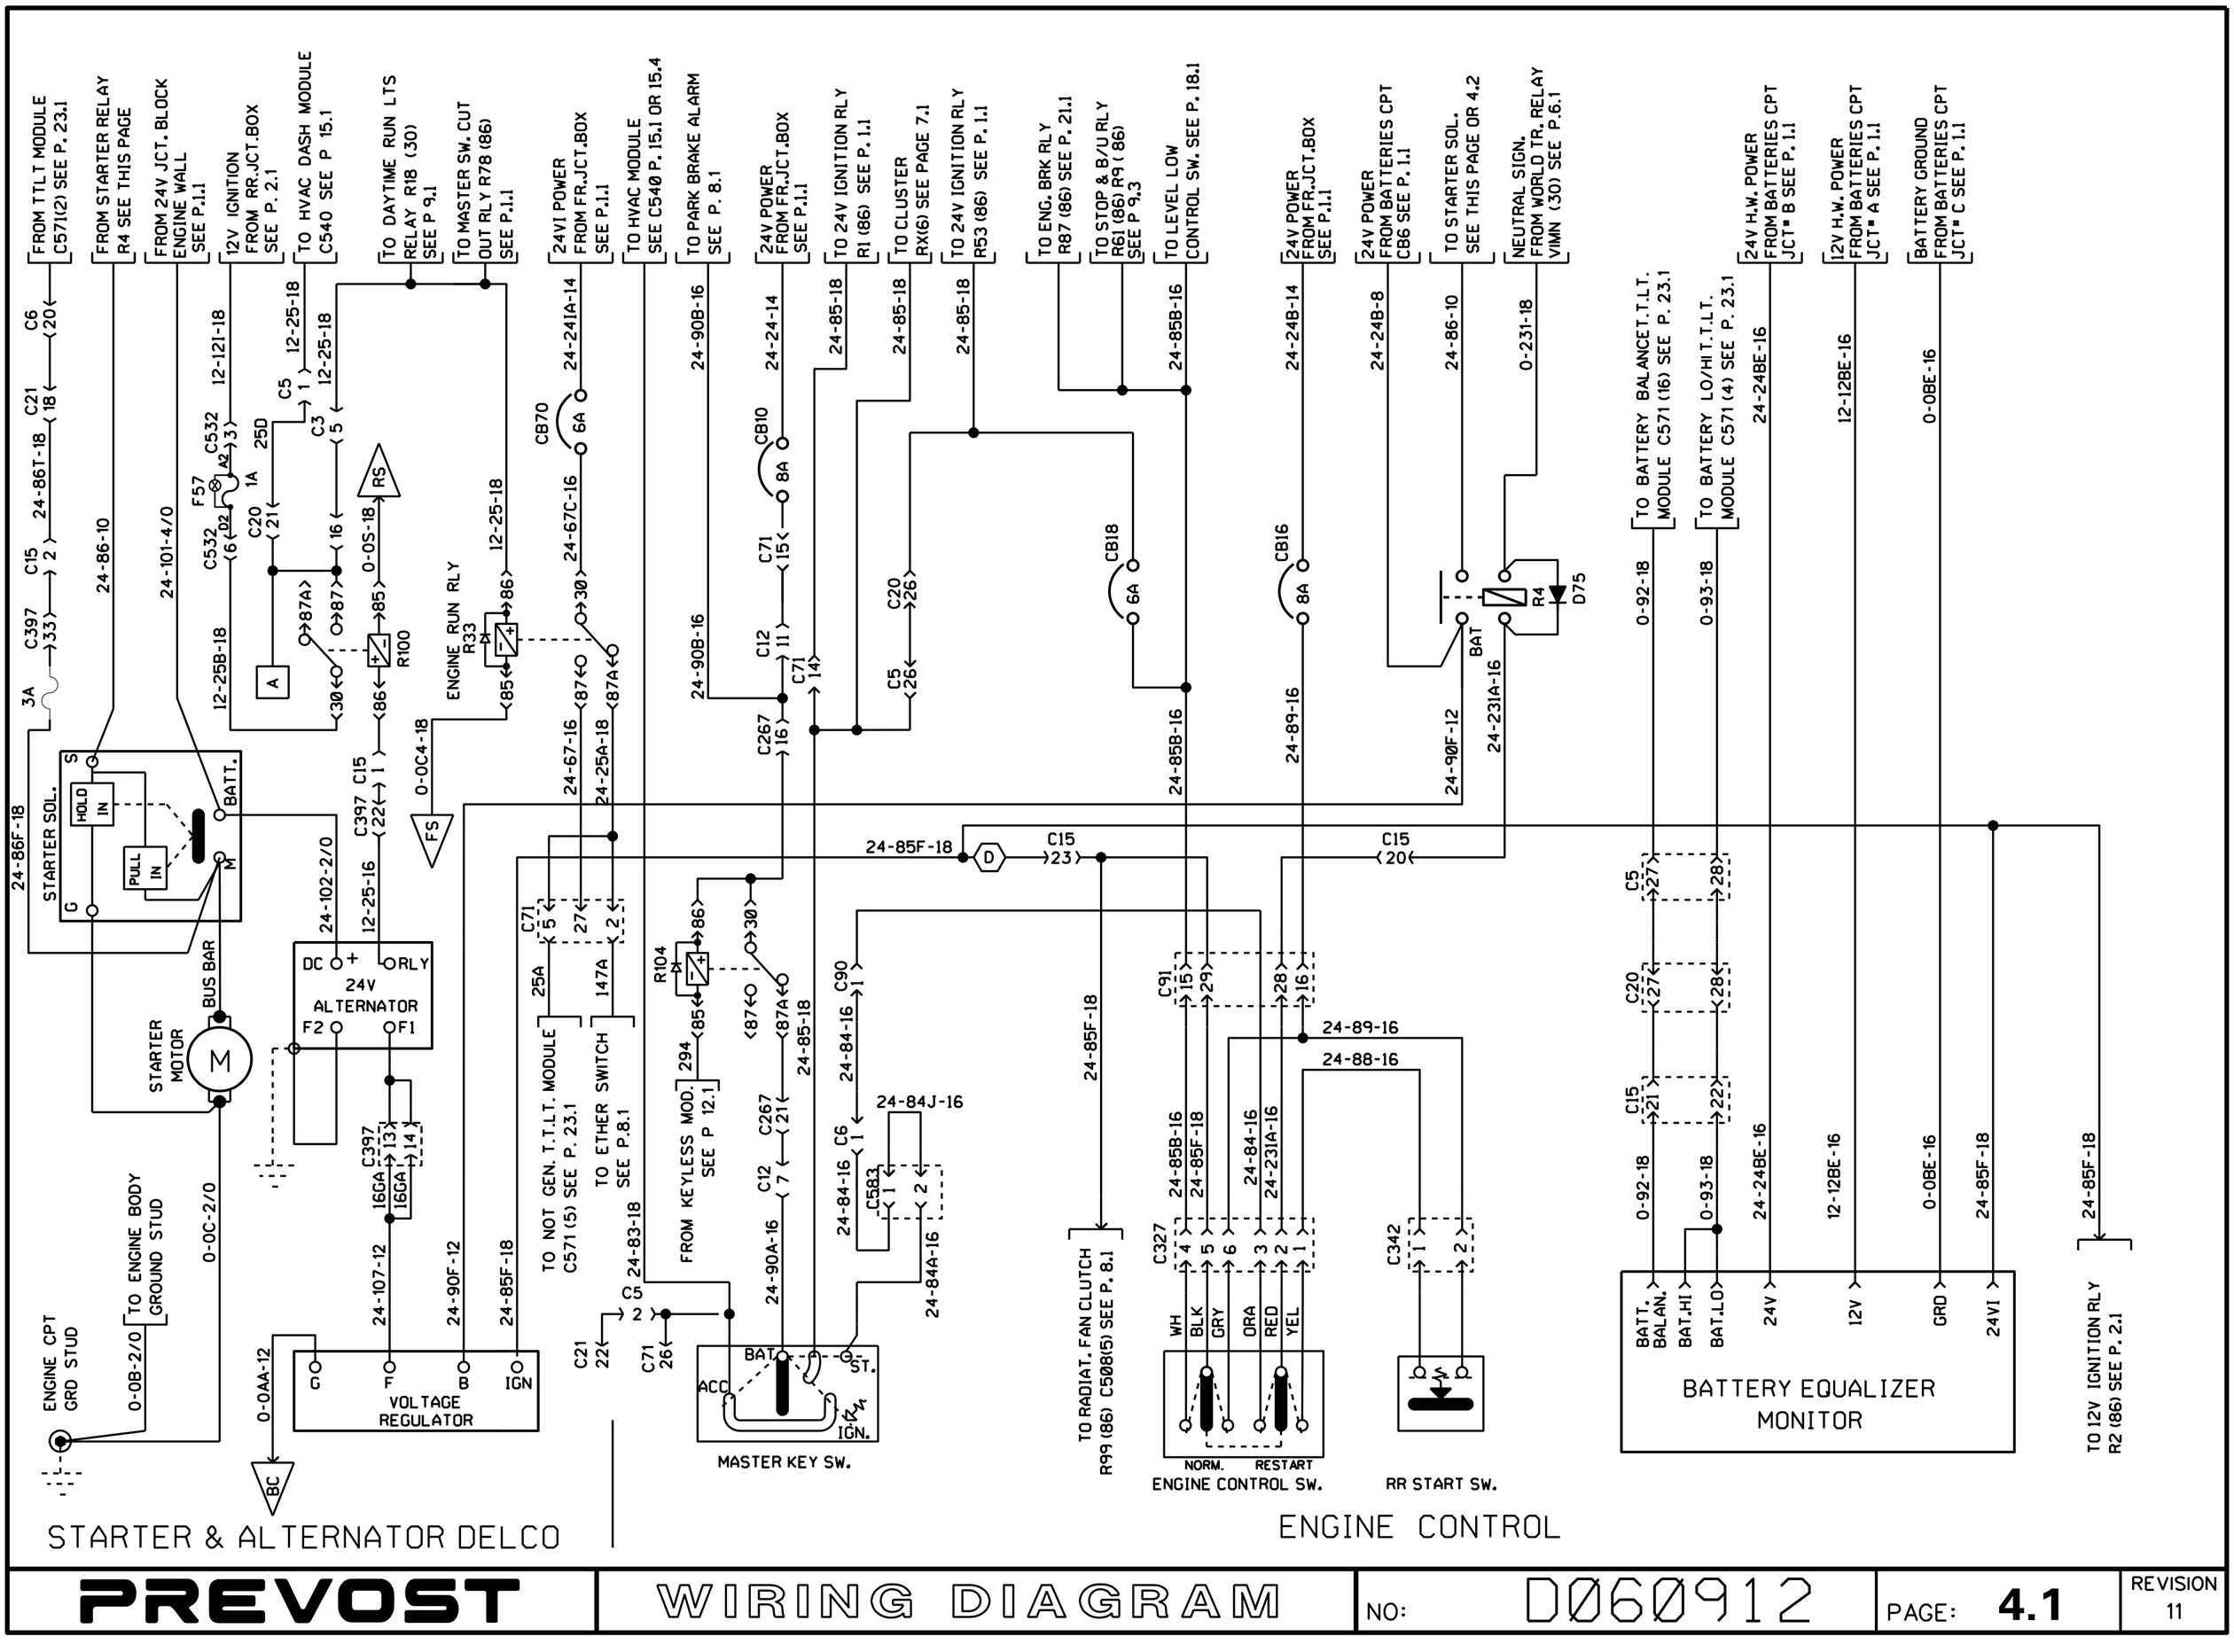

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 4.1	REVISION 11

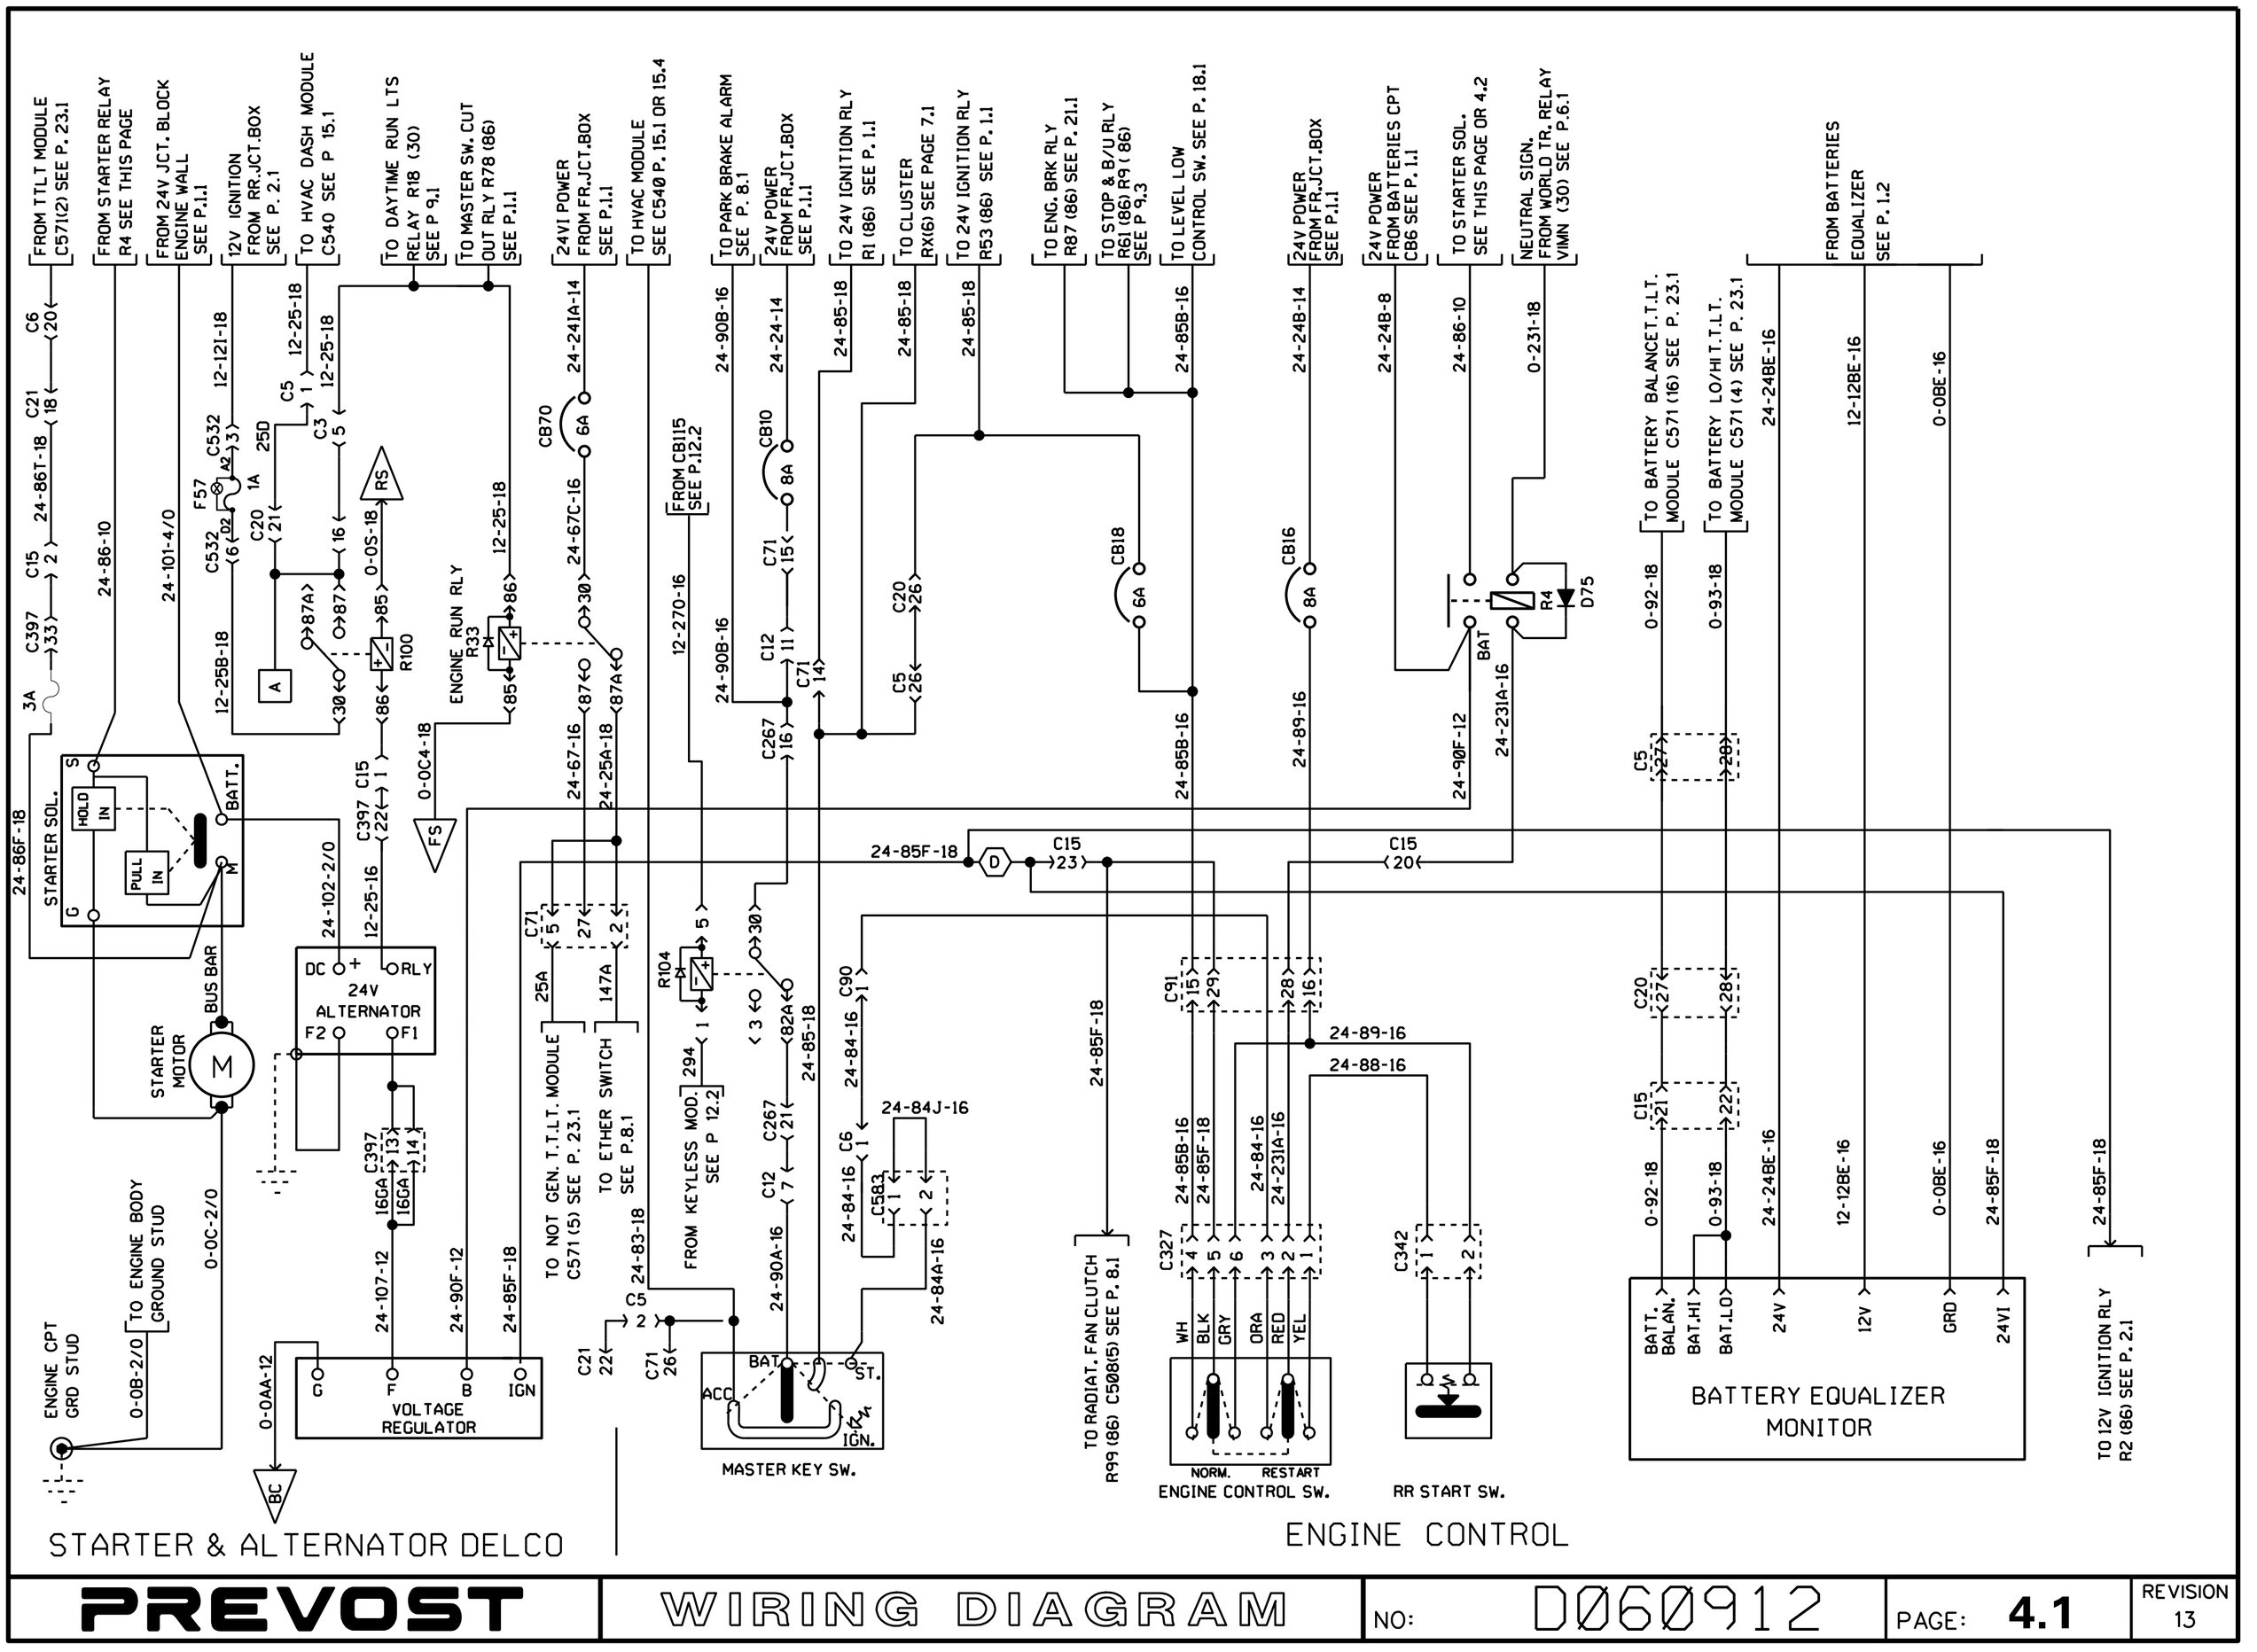
STARTER & ALTERNATOR DELCO
ENGINE CONTROL
STARTER SOL.
HOLD IN
PULL IN
BATT.
M
G
S
BUS BAR
STARTER MOTOR
M
DC +
24V ALTERNATOR
F2
F1
RLY
VOLTAGE REGULATOR
G
F
B
IGN
ENGINE CPT GRD STUD
TO ENGINE BODY GROUND STUD
ENGINE RUN RLY
R33
R100
RS
FS
BC
A
F57
C532
C20
C397
C15
C5
C3
C71
C12
C267
C10
C70
CB70
CB10
CB18
CB16
C90
C91
C583
C6
C327
C342
R104
C21
C71
C5
C20
C12
C71
C267
C12
C71
C5
C20
C15
C15
C15
C15
C15
C5
C20
C15
C5
C15
C15
C15
C15
C15

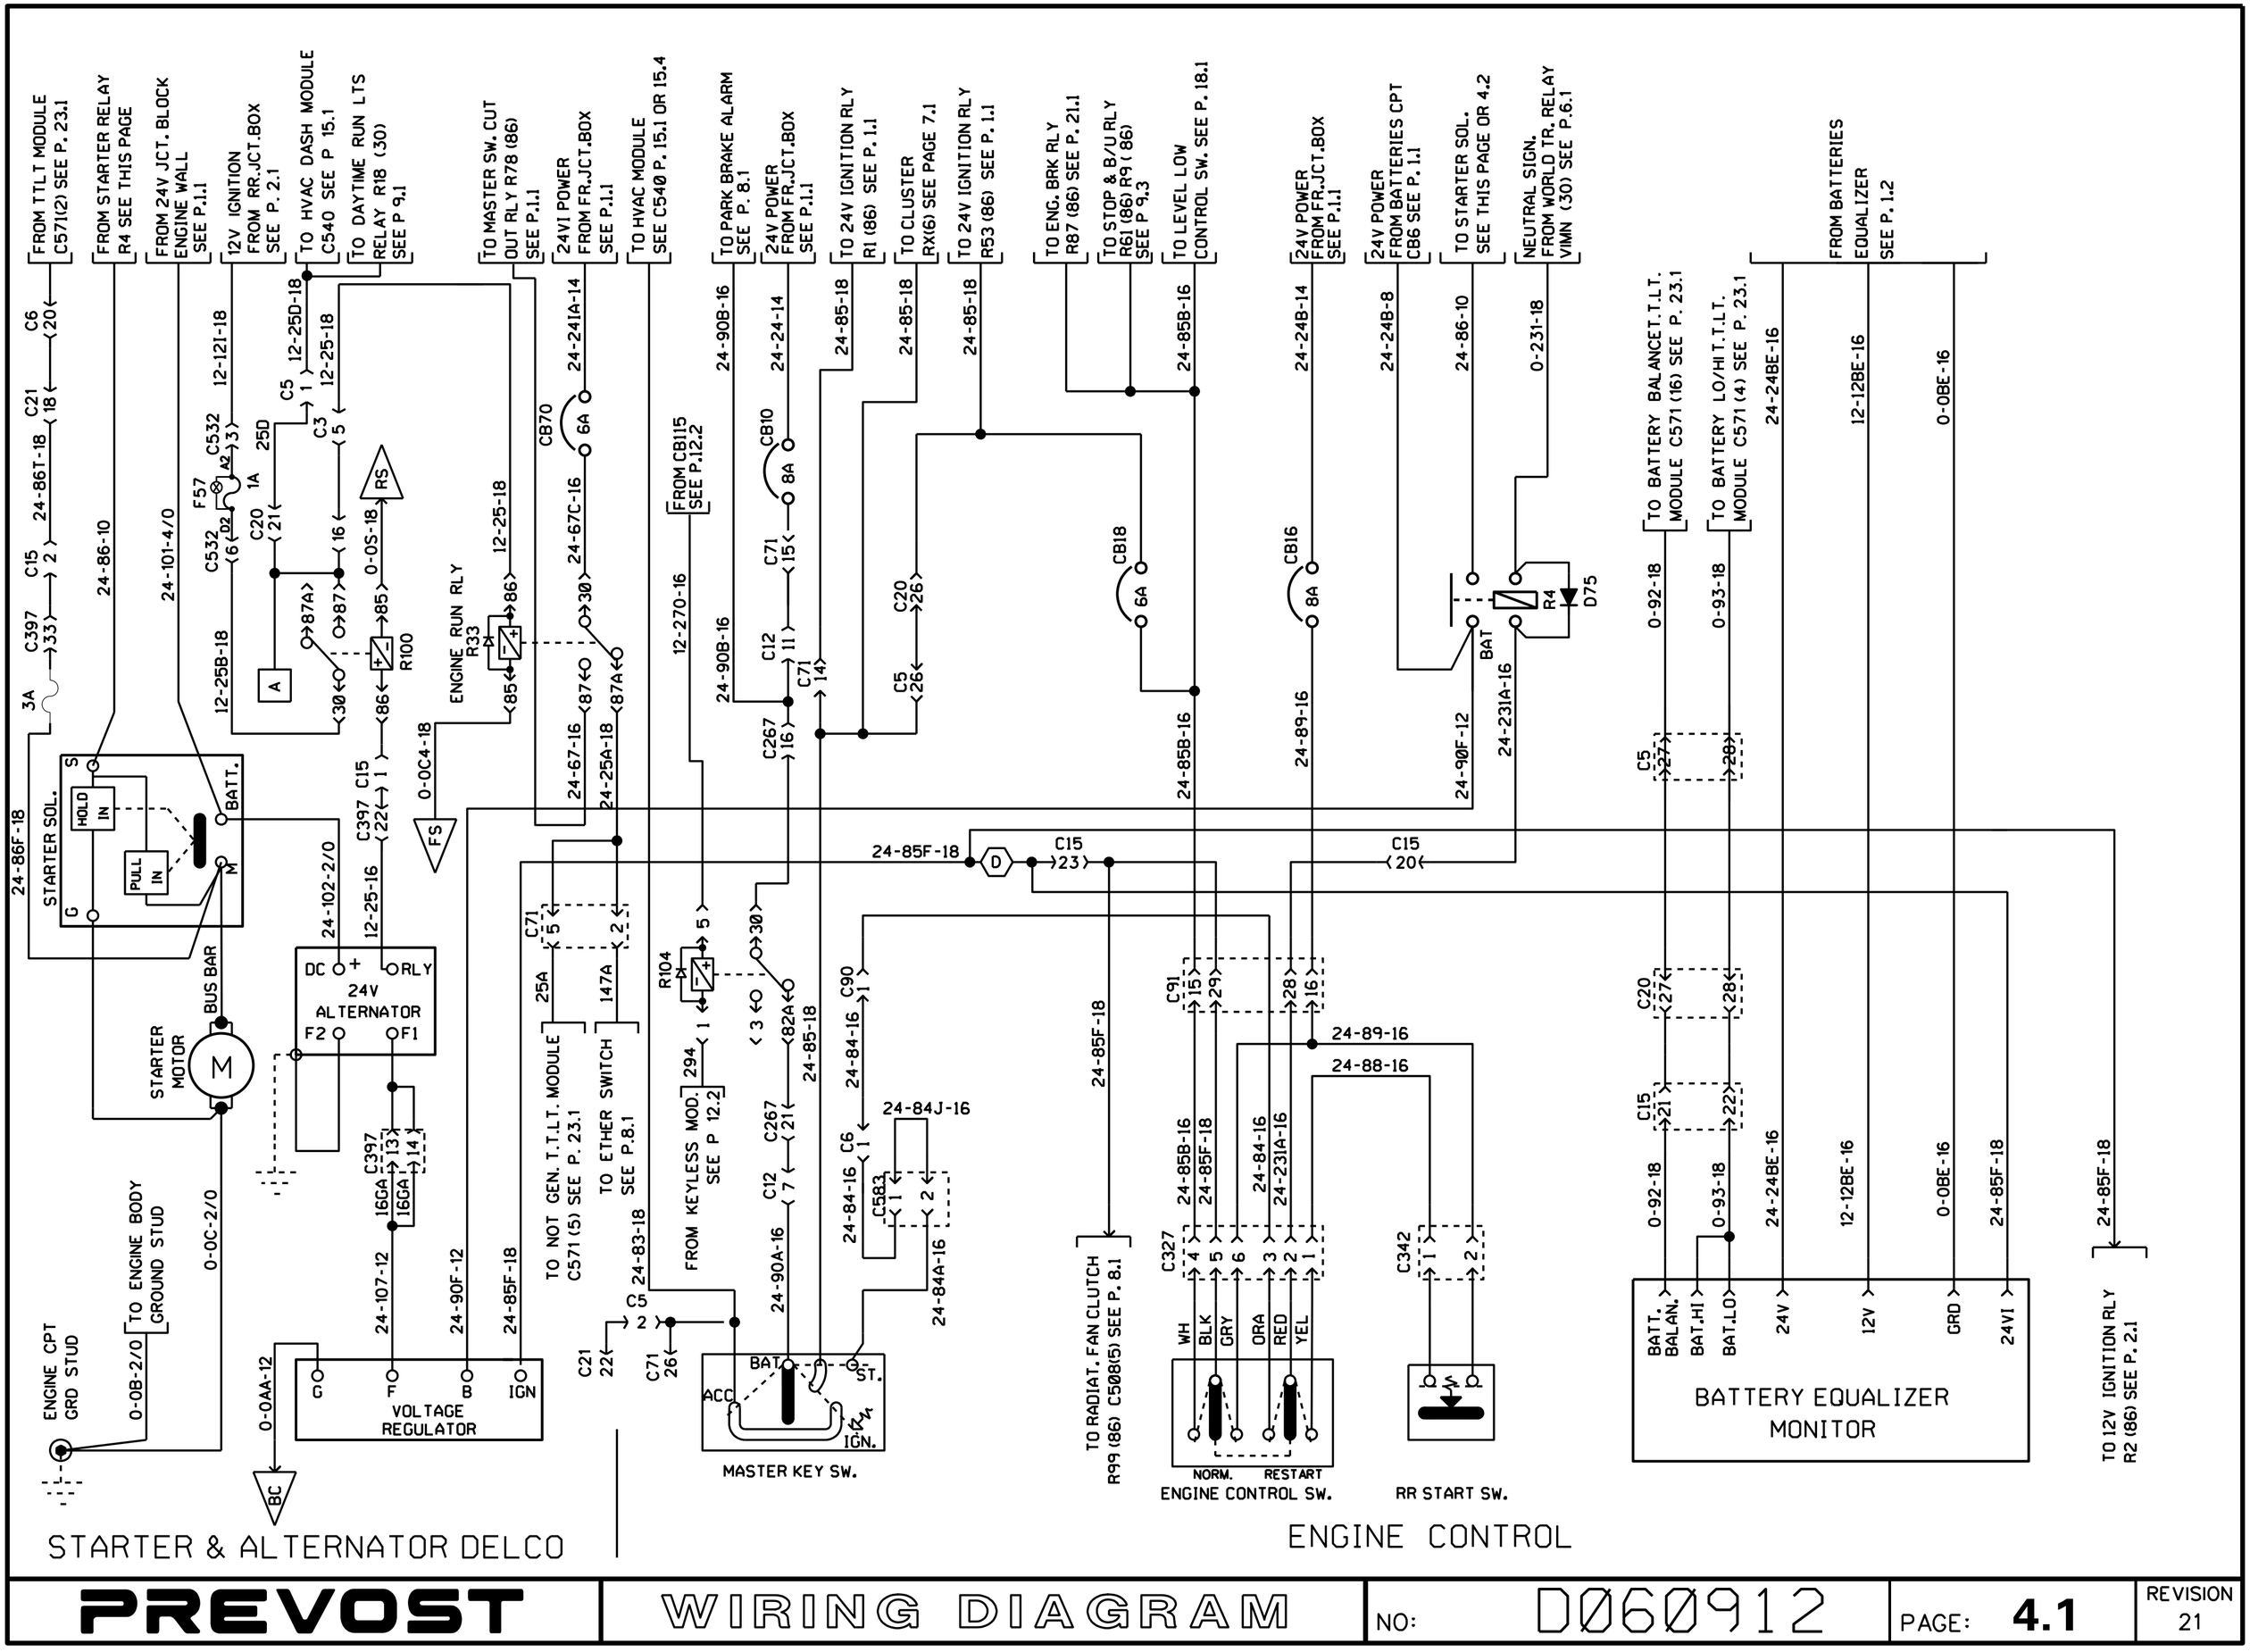
FROM TTLT MODULE C571(2) SEE P. 23.1
FROM STARTER RELAY R4 SEE THIS PAGE
FROM 24V JCT. BLOCK ENGINE WALL SEE P.1.1
12V IGNITION FROM RR.JCT.BOX SEE P. 2.1
TO HVAC DASH MODULE C540 SEE P 15.1
TO DAYTIME RUN LTS RELAY R18 (30) SEE P 9.1
TO MASTER SW. CUT OUT RLY R78 (86) SEE P.1.1
24VI POWER FROM FR.JCT.BOX SEE P.1.1
TO HVAC MODULE SEE C540 P. 15.1 OR 15.4
TO PARK BRAKE ALARM SEE P. 8.1
24V POWER FROM FR.JCT.BOX SEE P.1.1
TO 24V IGNITION RLY R1 (86) SEE P. 1.1
TO CLUSTER RX(6) SEE PAGE 7.1
TO 24V IGNITION RLY R53 (86) SEE P. 1.1
TO ENG. BRK RLY R87 (86) SEE P. 21.1
TO STOP & B/U RLY R61 (86) R9 (86) SEE P 9.3
TO LEVEL LOW CONTROL SW. SEE P. 18.1
24V POWER FROM FR.JCT.BOX SEE P.1.1
24V POWER FROM BATTERIES CPT CB6 SEE P. 1.1
TO STARTER SOL. SEE THIS PAGE OR 4.2
NEUTRAL SIGN. FROM WORLD TR. RELAY VIMN (30) SEE P.6.1
TO BATTERY BALANCE T.T.L.T. MODULE C571 (16) SEE P. 23.1
TO BATTERY LO/HI T.T.L.T. MODULE C571 (4) SEE P. 23.1
FROM BATTERIES EQUALIZER SEE P. 1.2
FROM CB115 SEE P.12.2
ENGINE RUN RLY
STARTER SOL.
HOLD IN
PULL IN
BATT.
STARTER MOTOR
BUS BAR
24V ALTERNATOR
DC
RLY
F2
F1
TO ENGINE BODY GROUND STUD
ENGINE CPT GRD STUD
VOLTAGE REGULATOR
G
F
B
IGN
TO NOT GEN. T.T.L.T. MODULE C571 (5) SEE P. 23.1
TO ETHER SWITCH SEE P.8.1
FROM KEYLESS MOD. SEE P 12.2
MASTER KEY SW.
BAT
ACC
IGN.
ST.
TO RADIAT. FAN CLUTCH R99 (86) C508(5) SEE P. 8.1
ENGINE CONTROL SW.
NORM.
RESTART
WH
BLK
GRY
ORA
RED
YEL
RR START SW.
BATTERY EQUALIZER MONITOR
BATT. BALAN.
BAT.HI
BAT.LO
24V
12V
GRD
24VI
TO 12V IGNITION RLY R2 (86) SEE P. 2.1
STARTER & ALTERNATOR DELCO
ENGINE CONTROL

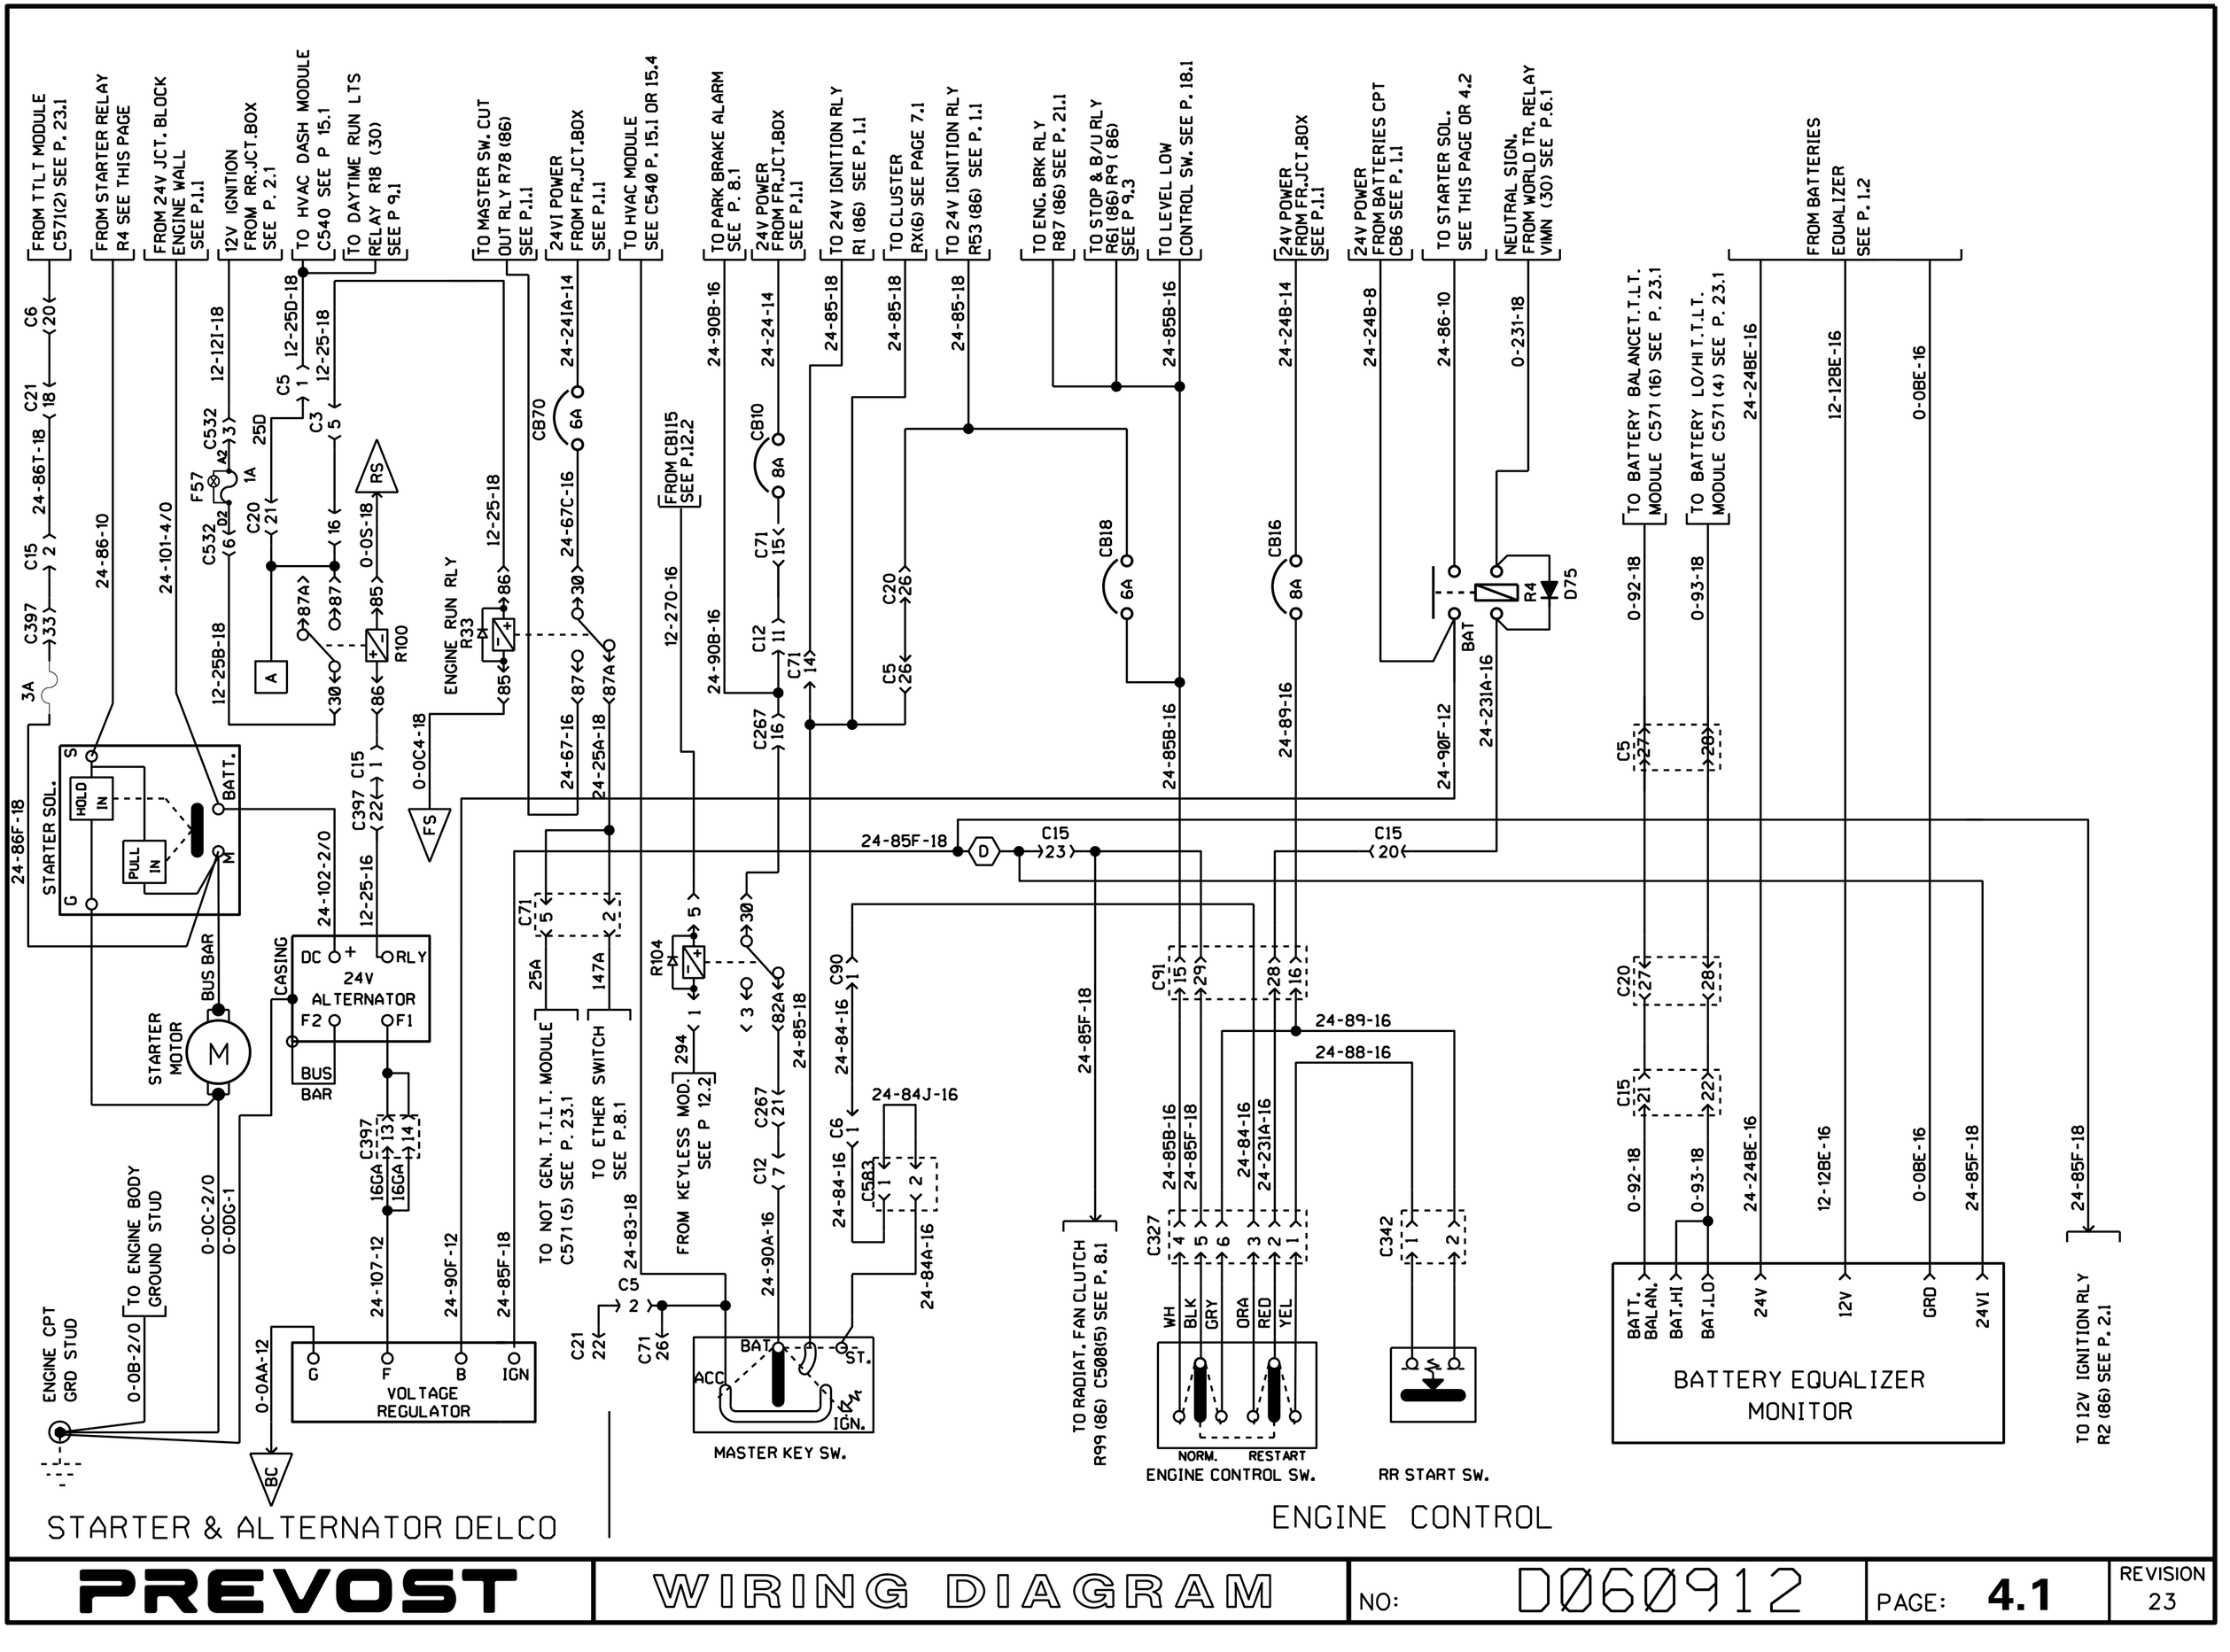

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 4.1	REVISION 23

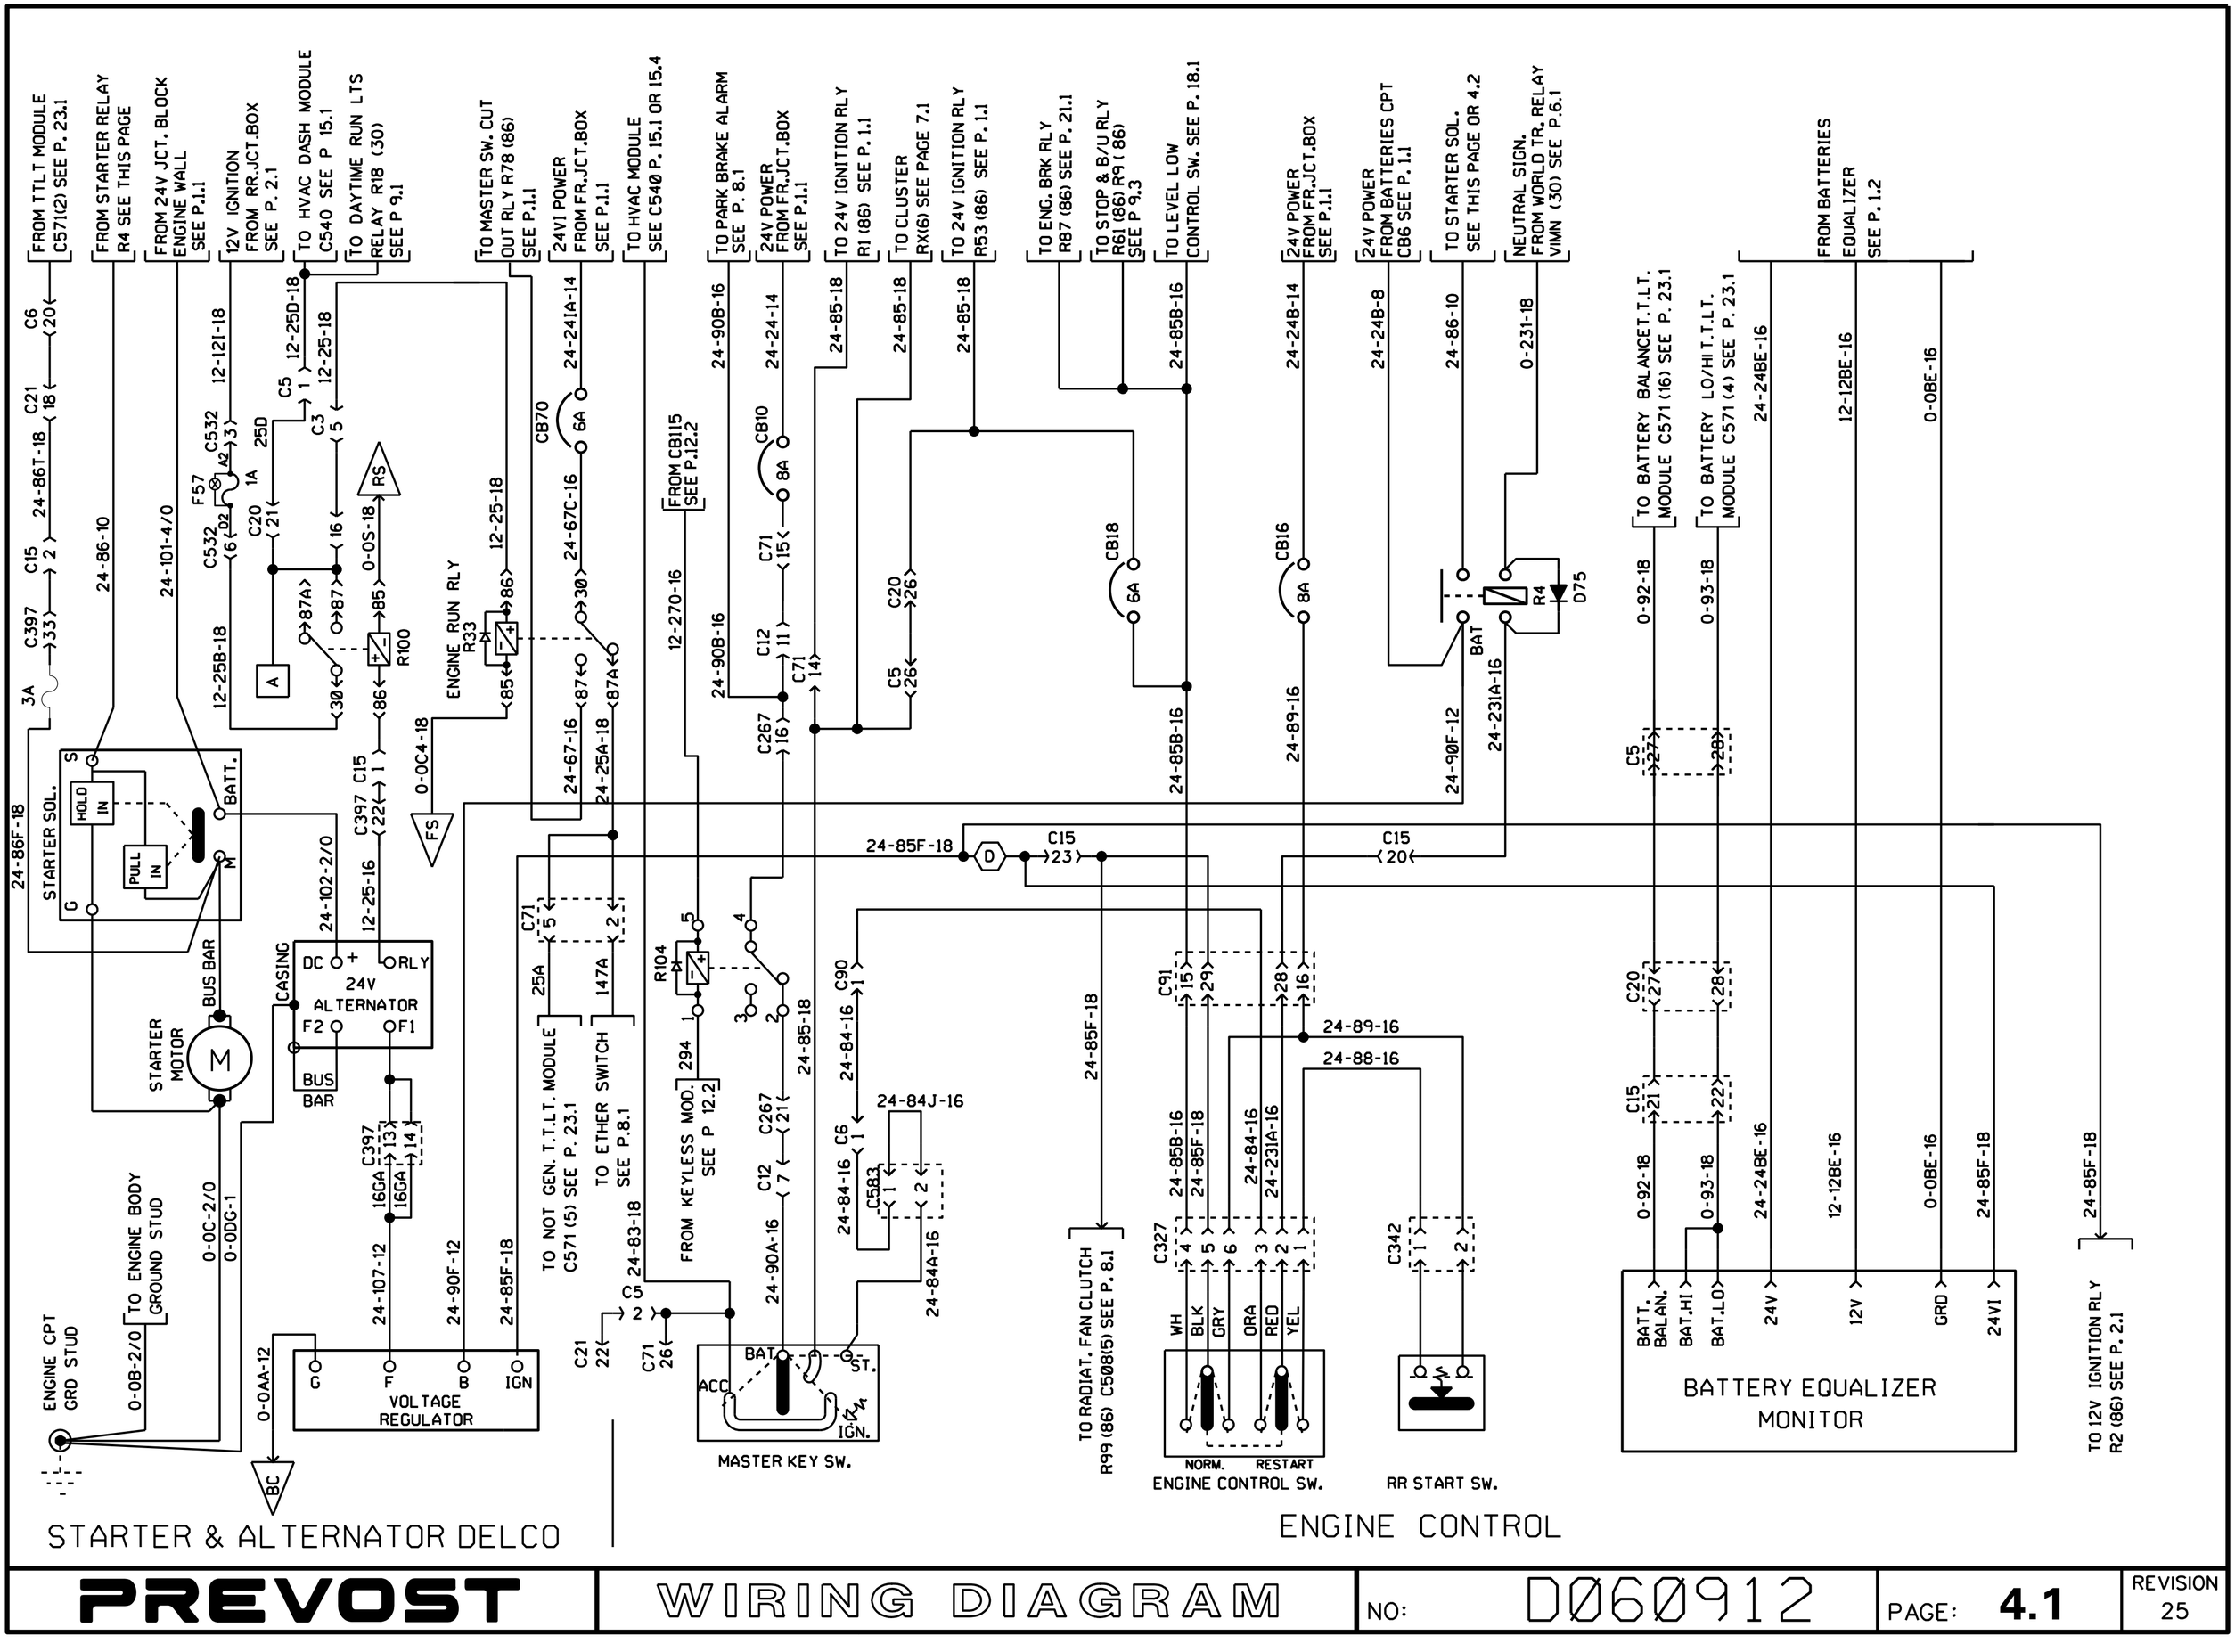

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 4.1	REVISION 25

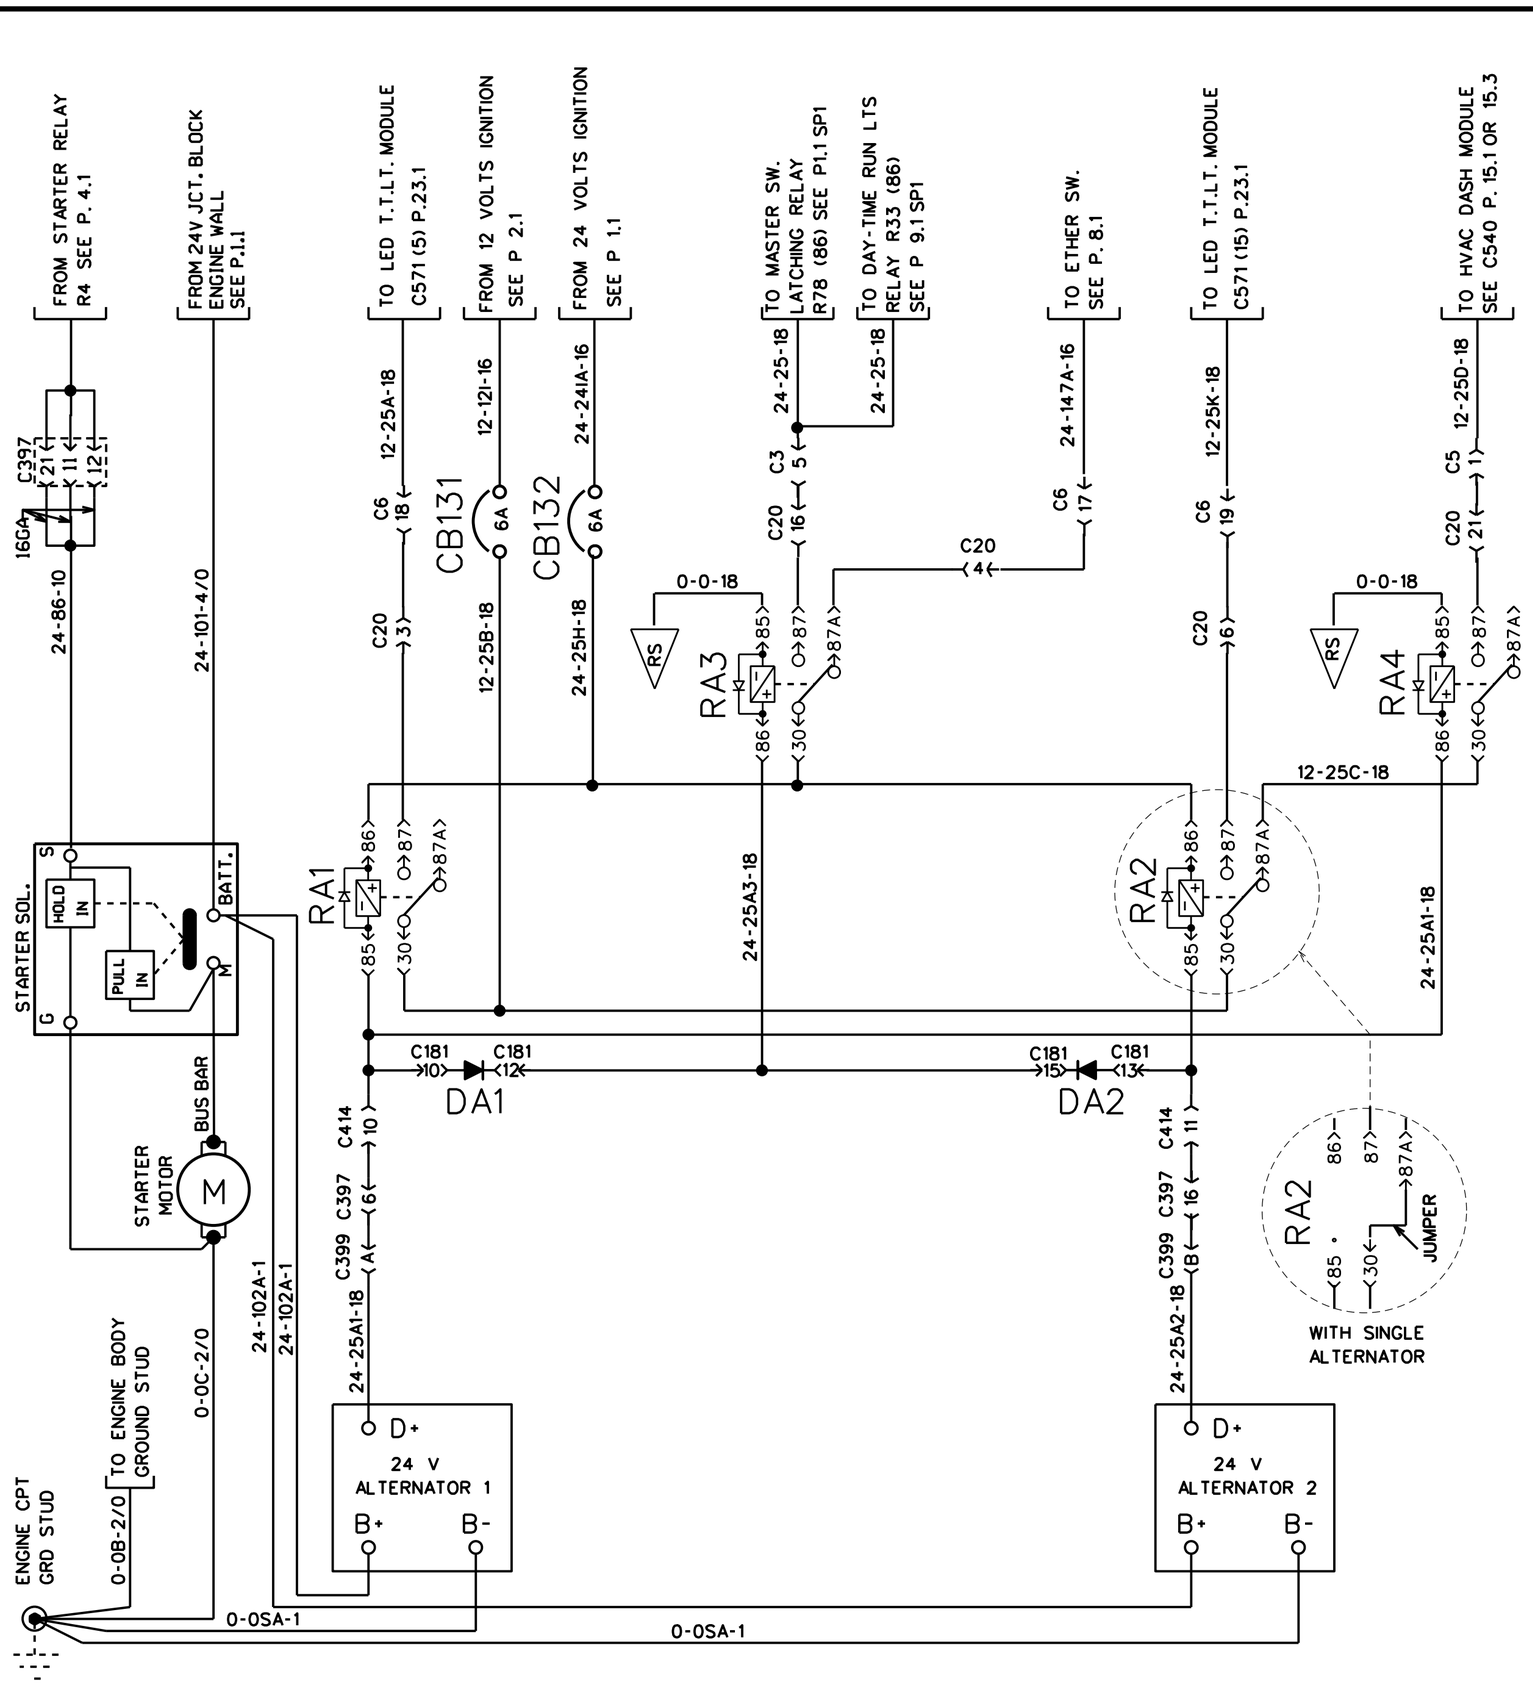

STARTER & ALTERNATOR BOSCH

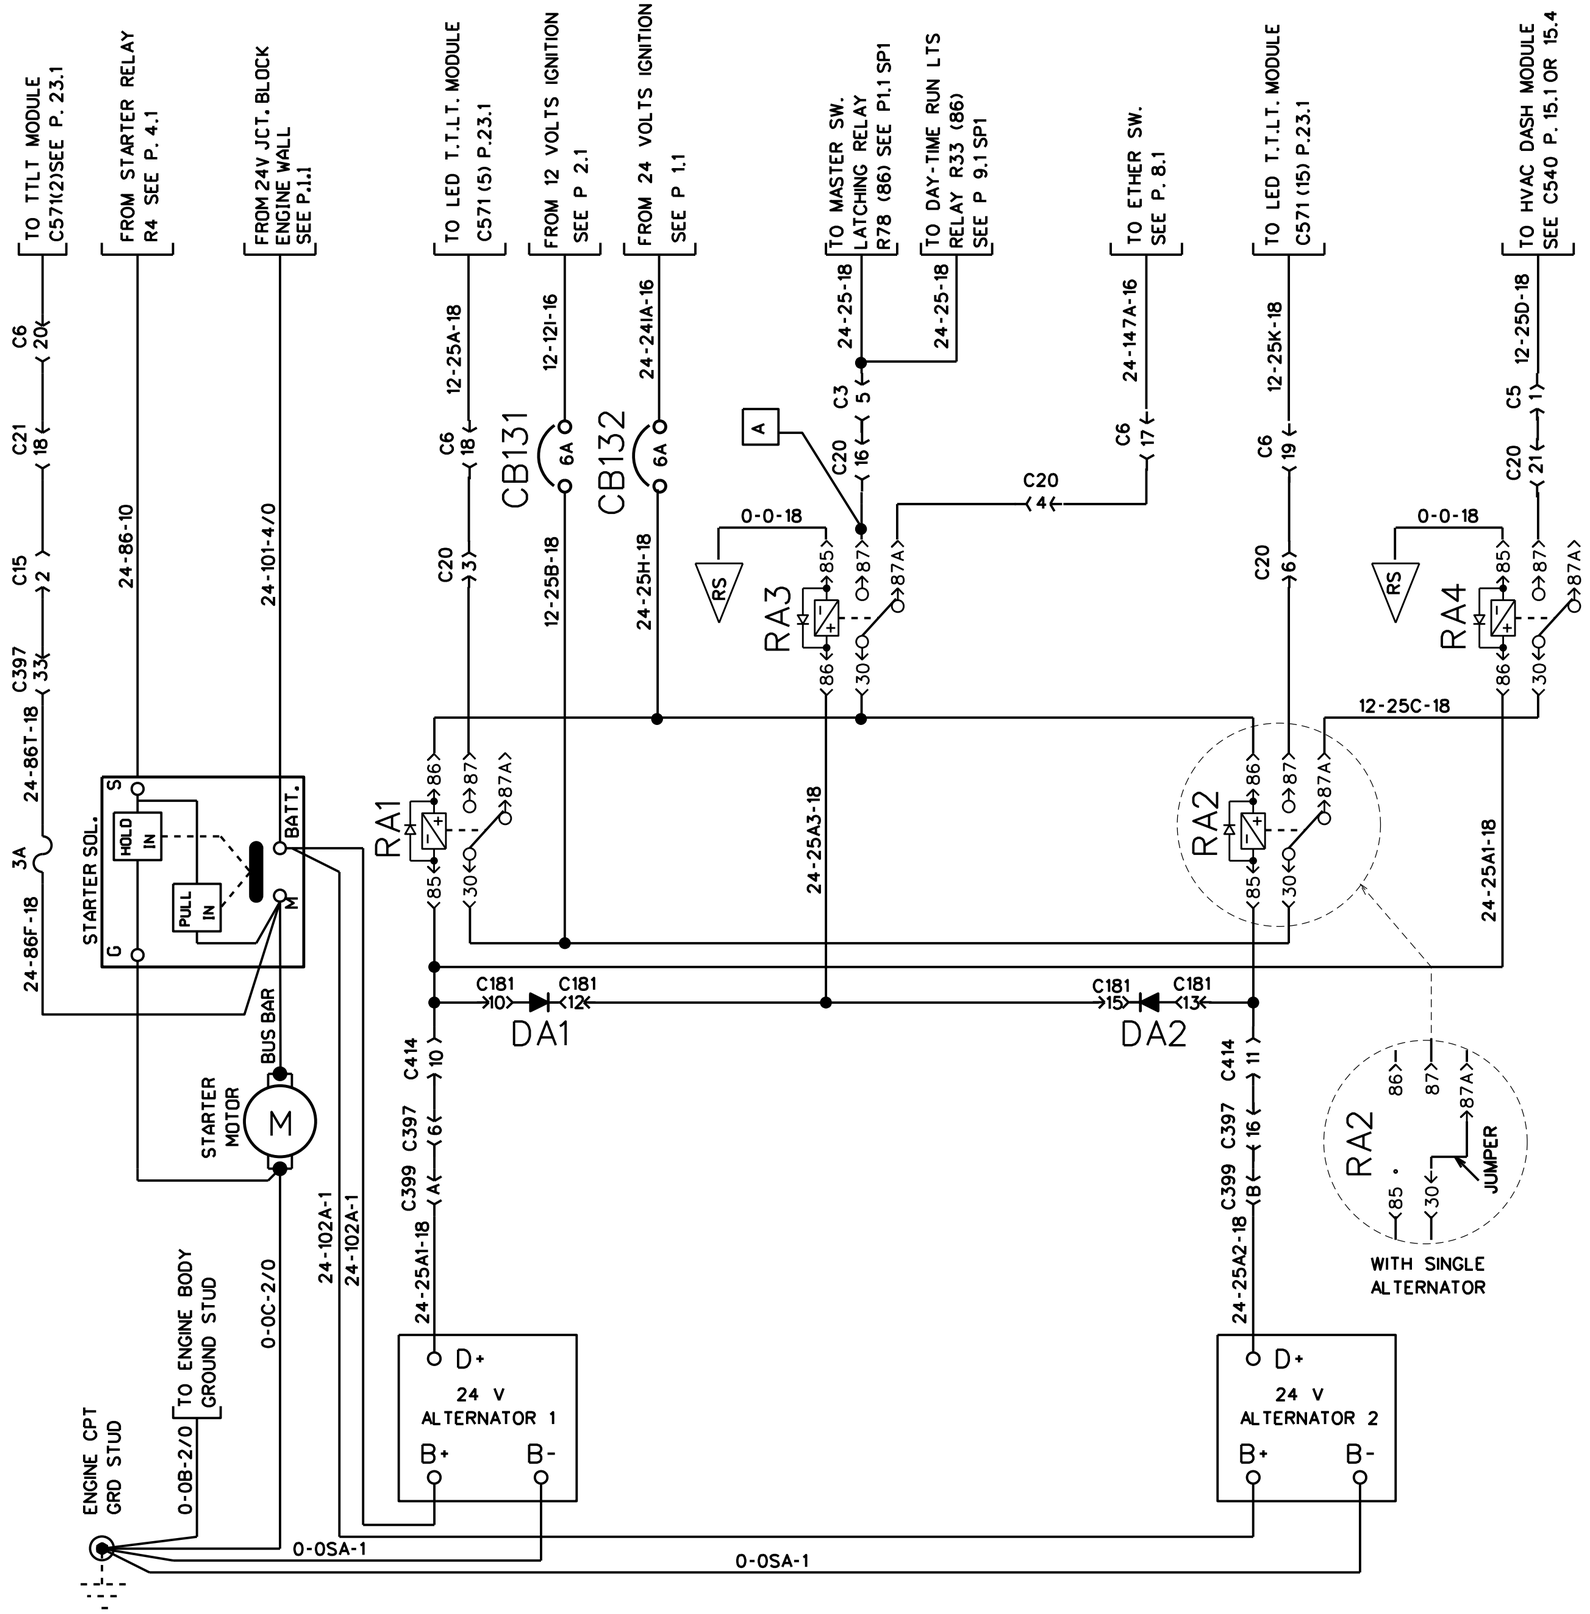

STARTER & ALTERNATOR BOSCH

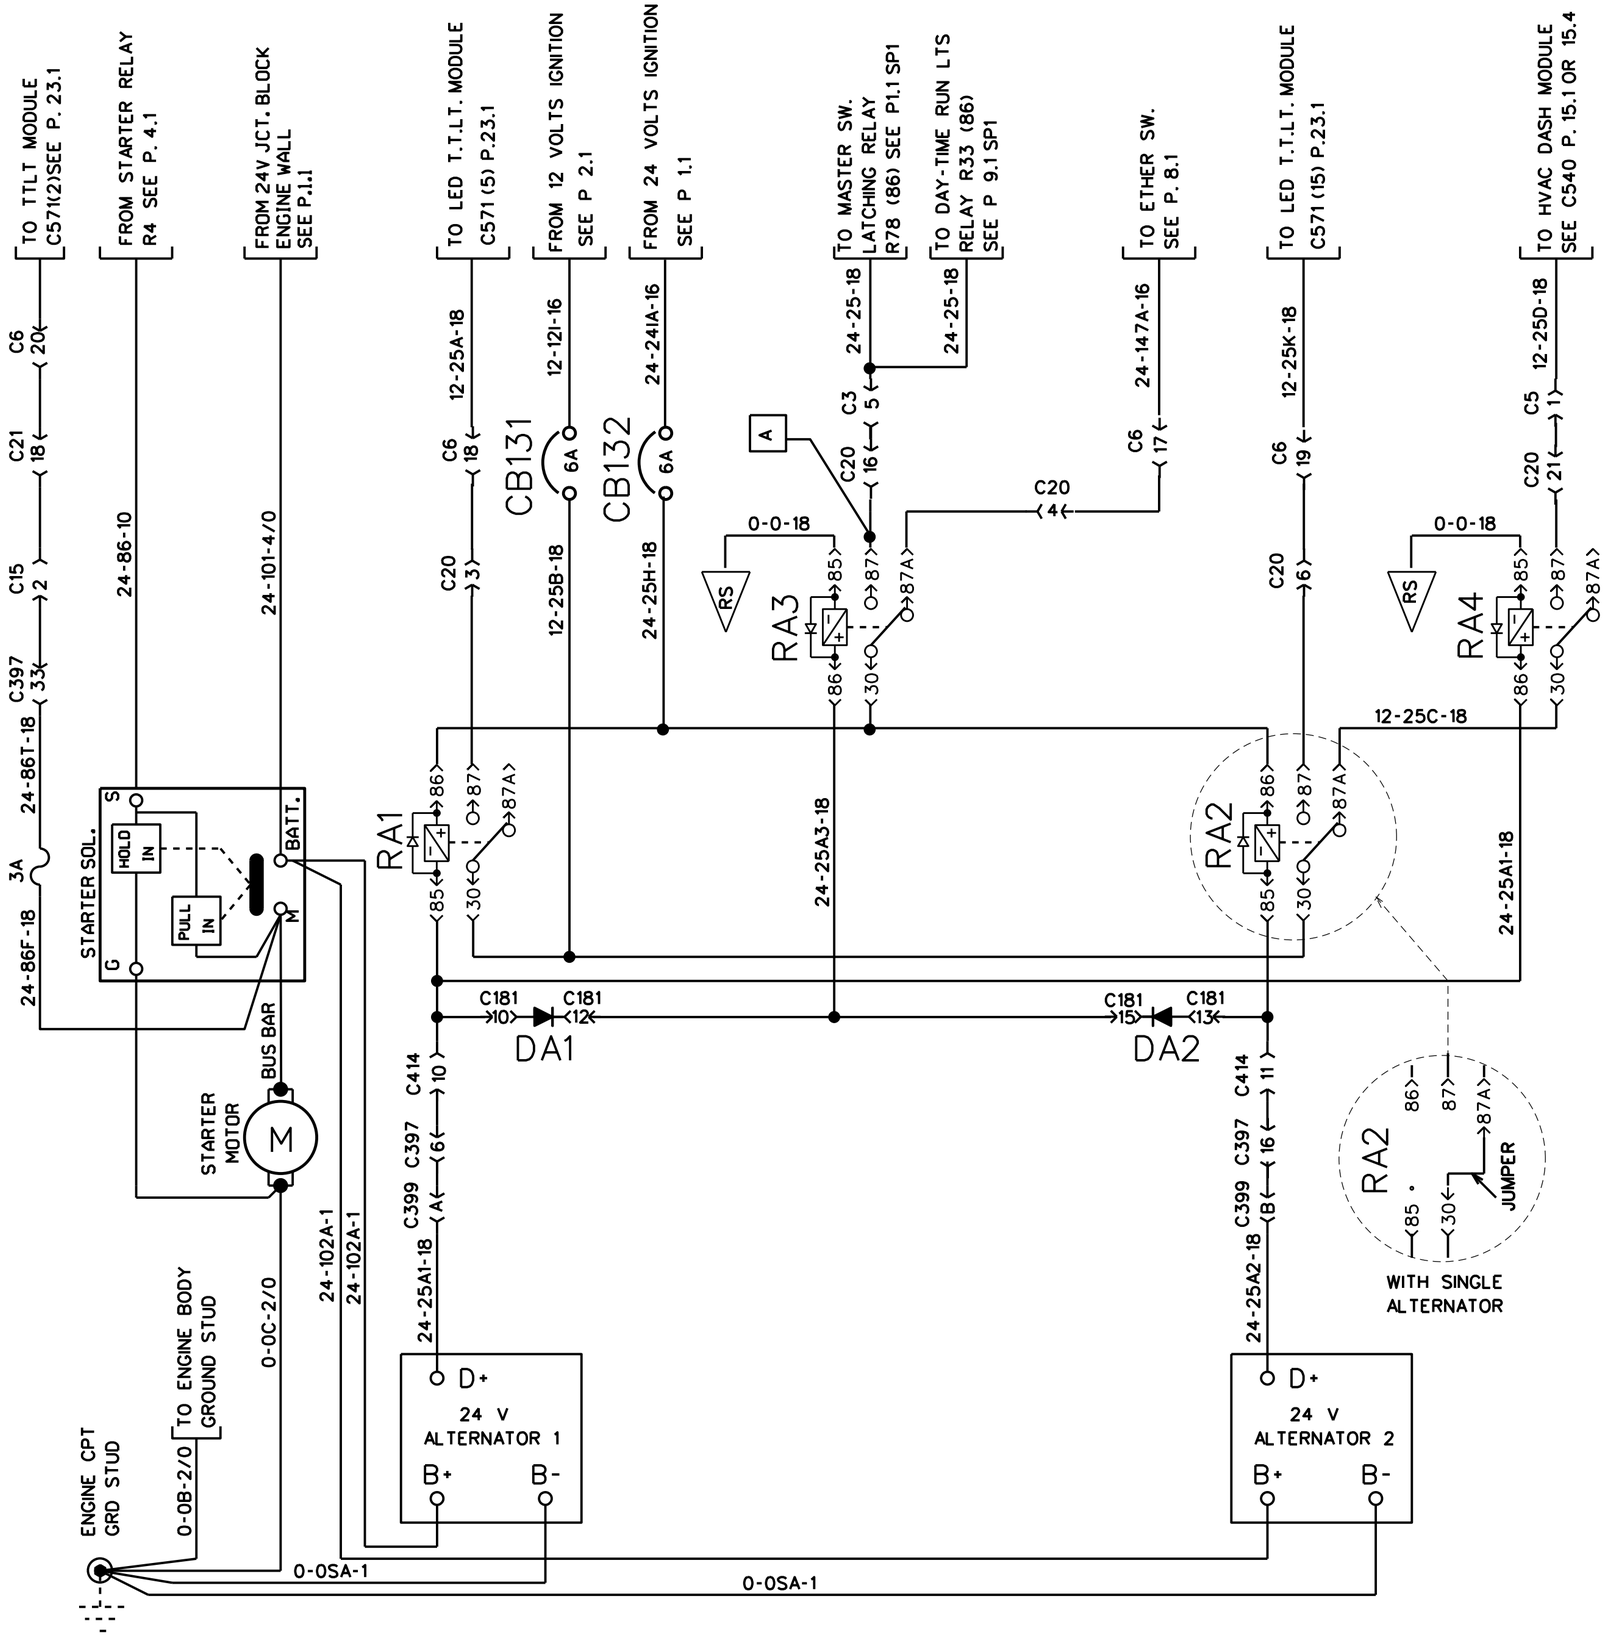

STARTER & ALTERNATOR BOSCH

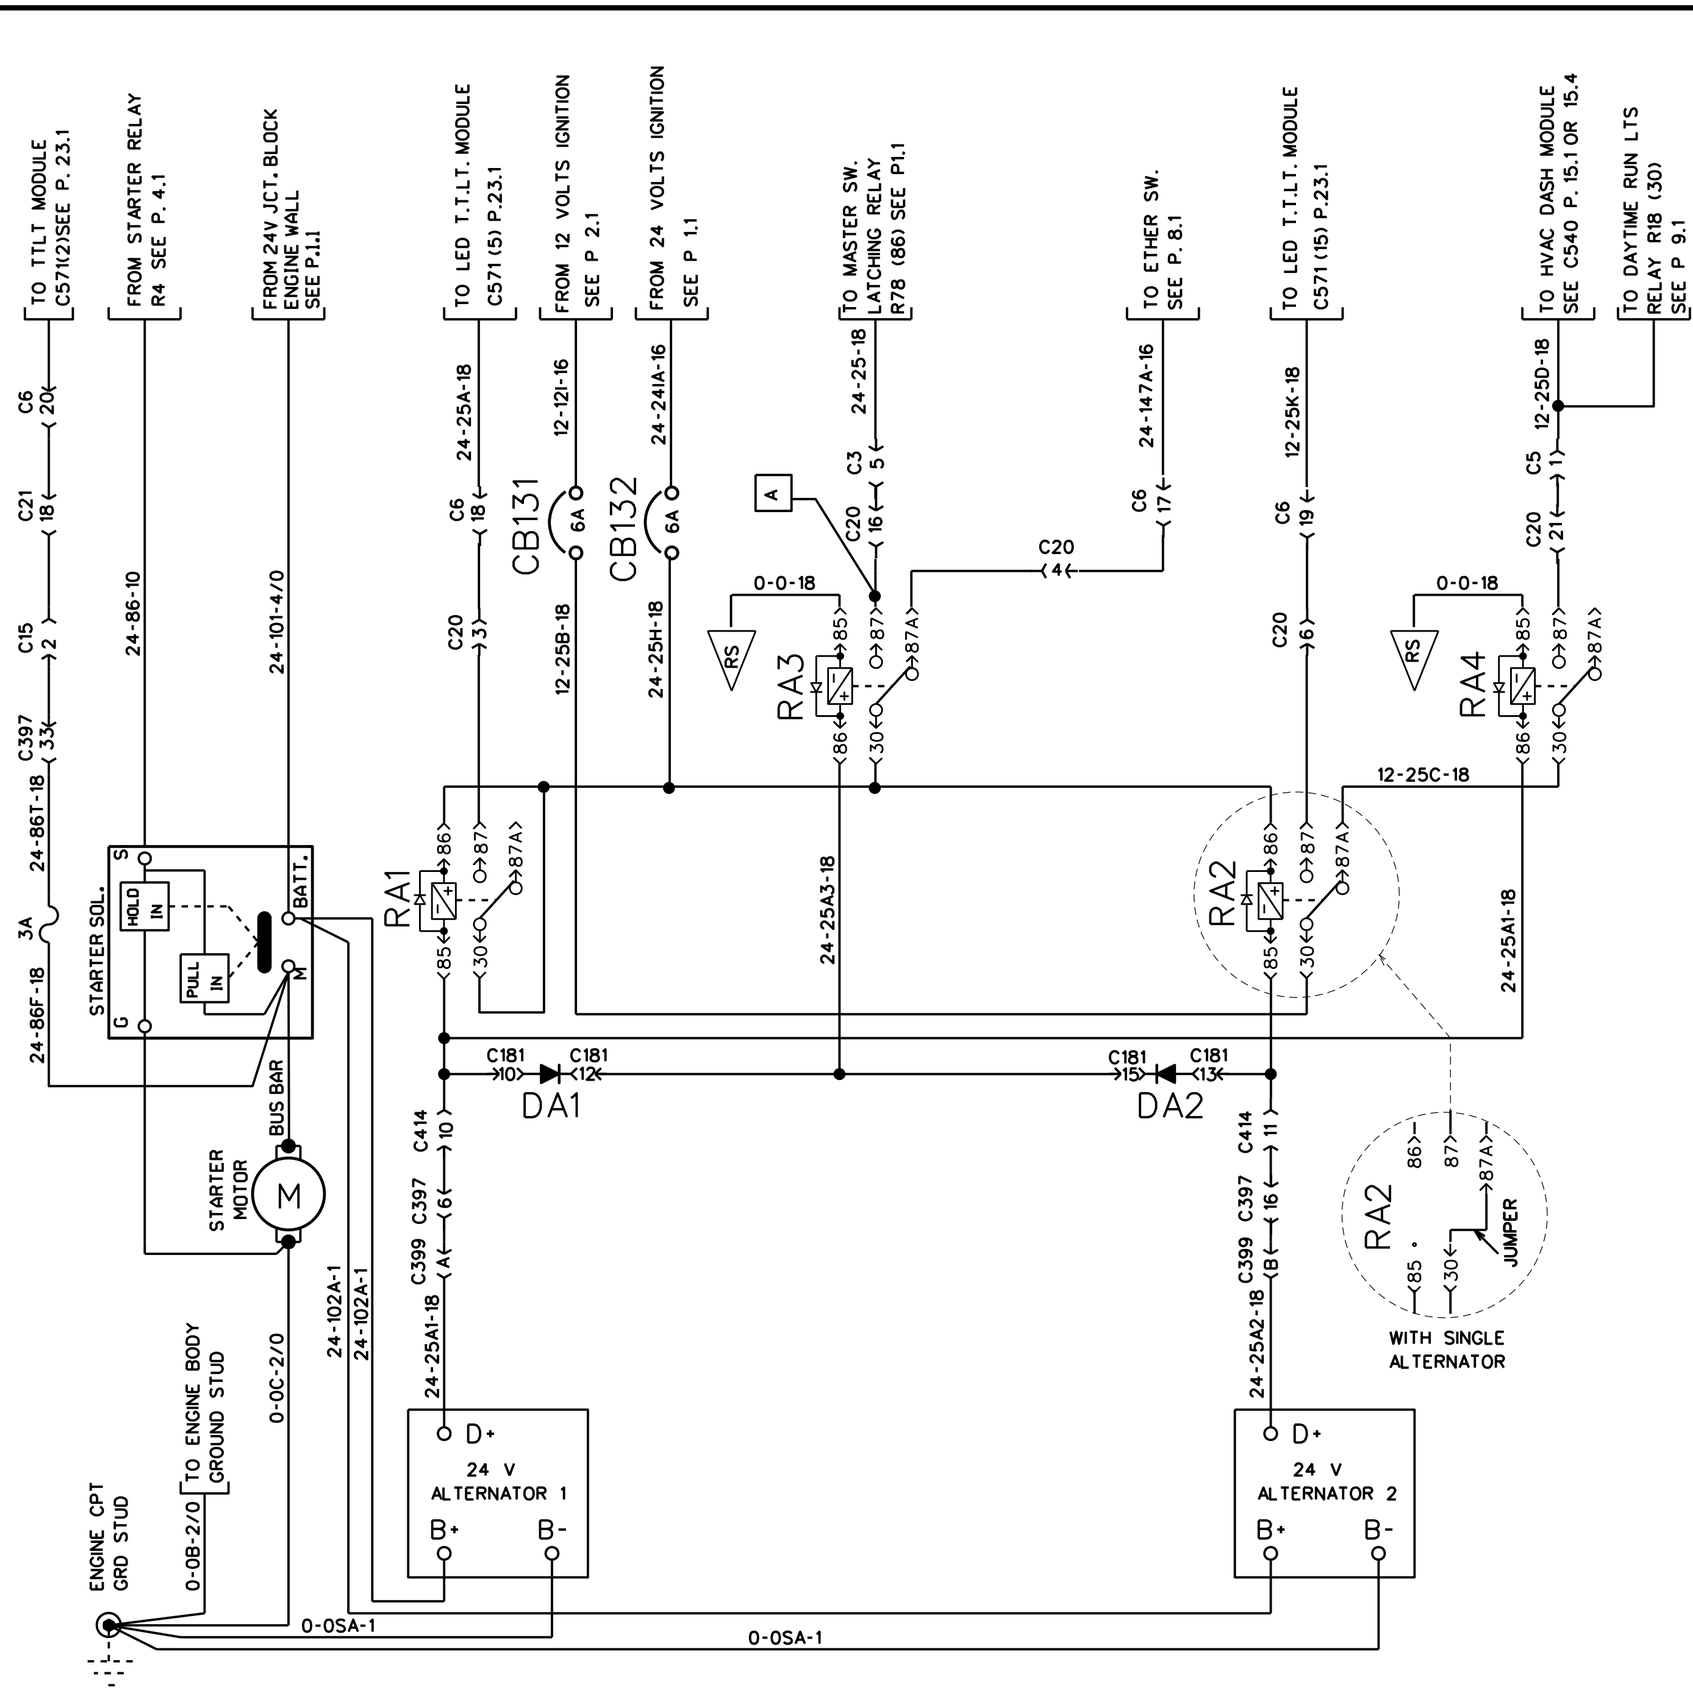

STARTER & ALTERNATOR BOSCH

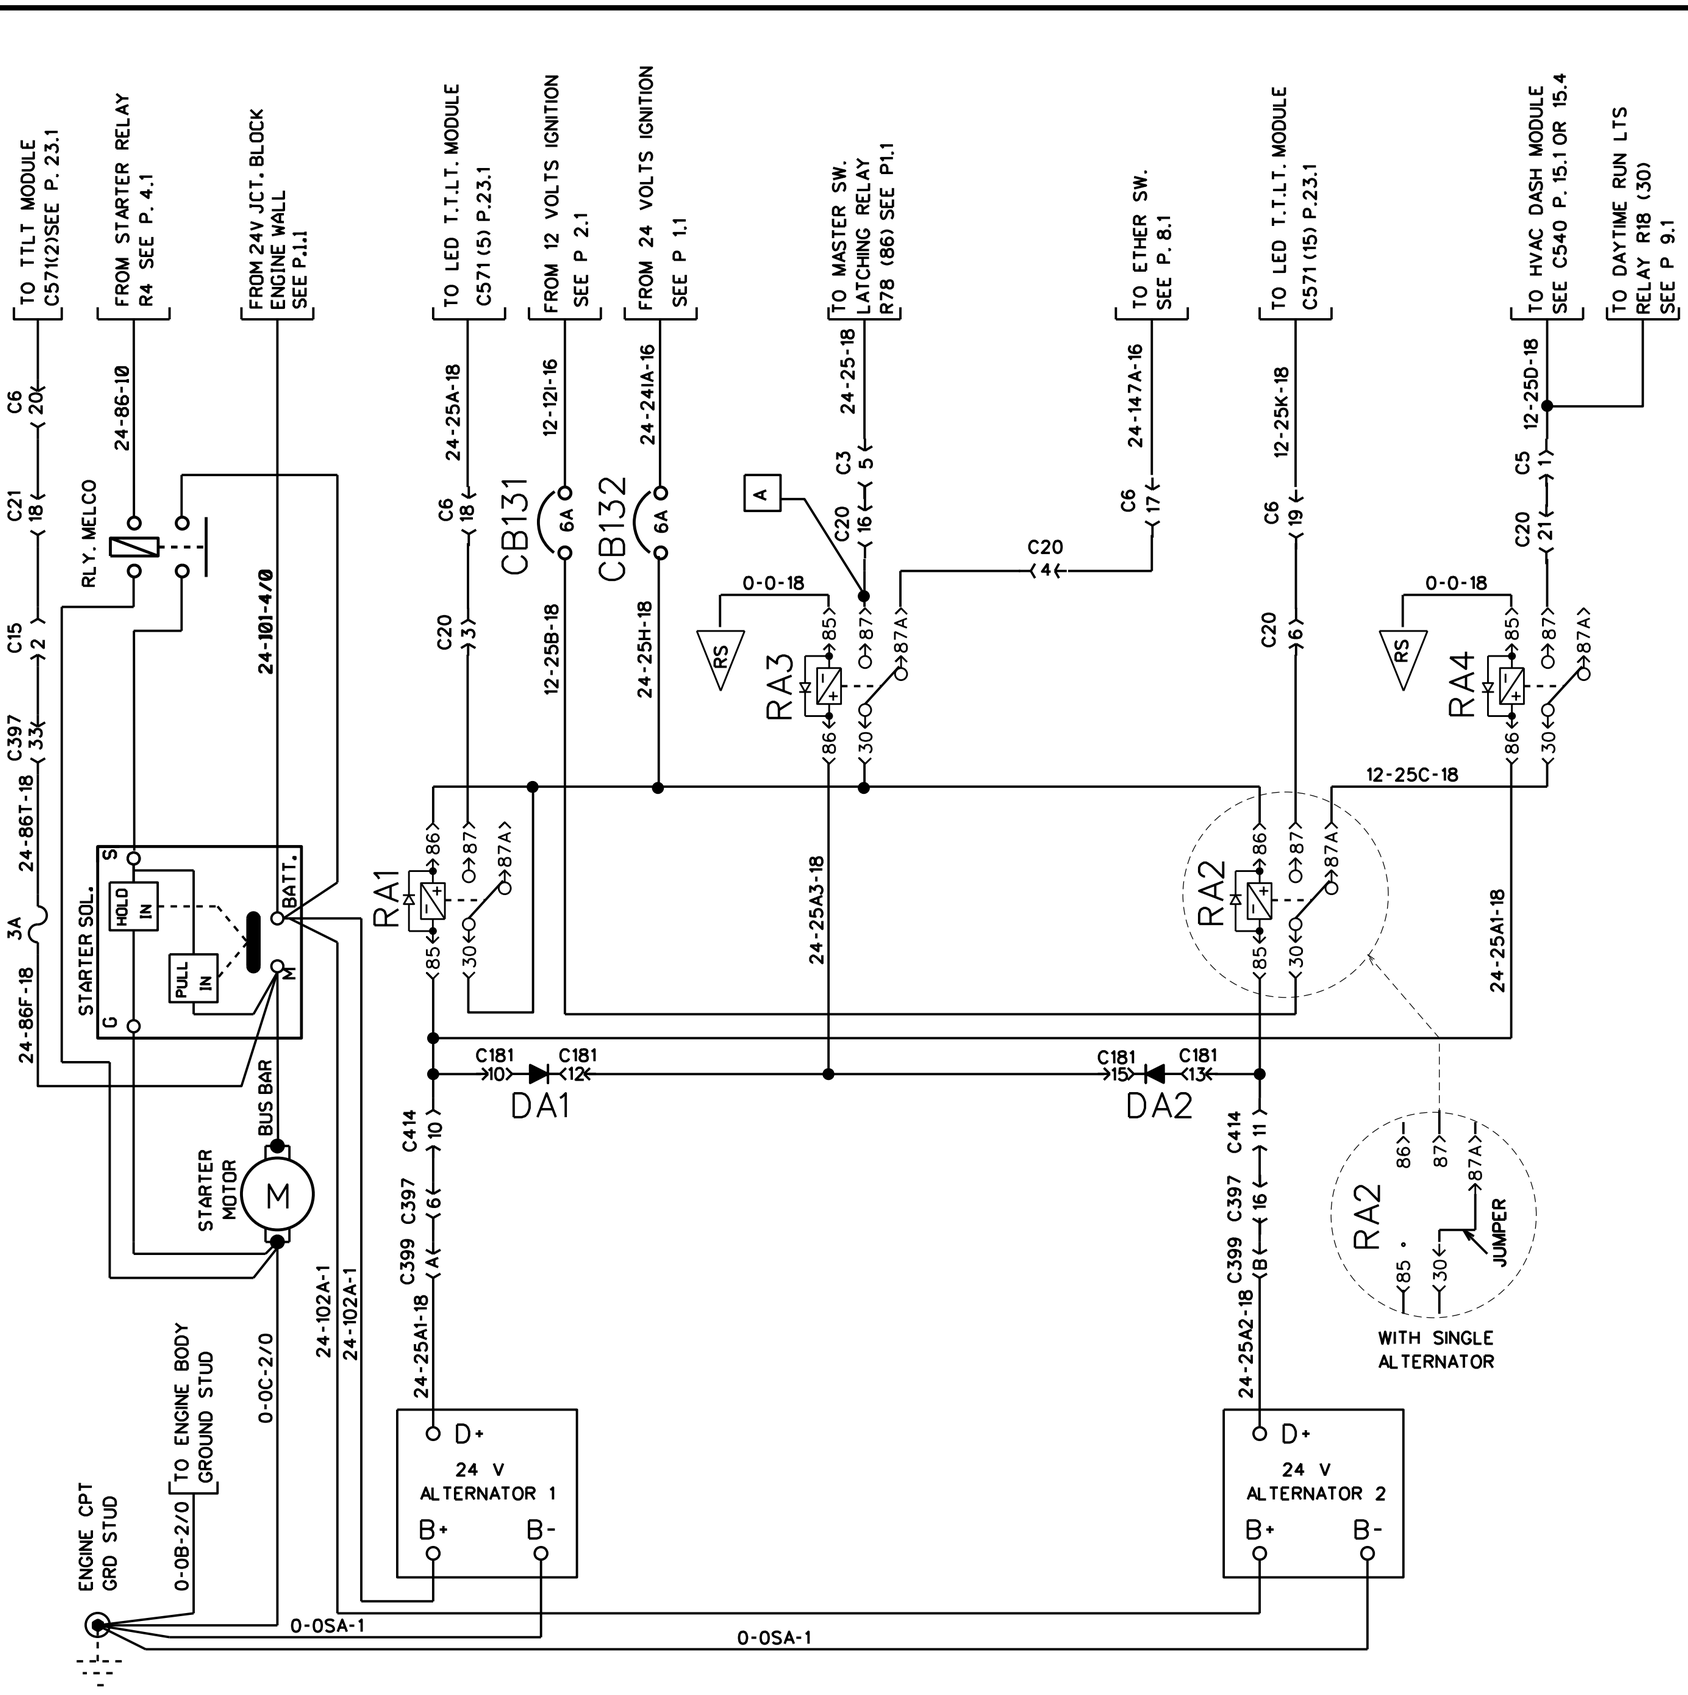

STARTER & ALTERNATOR BOSCH

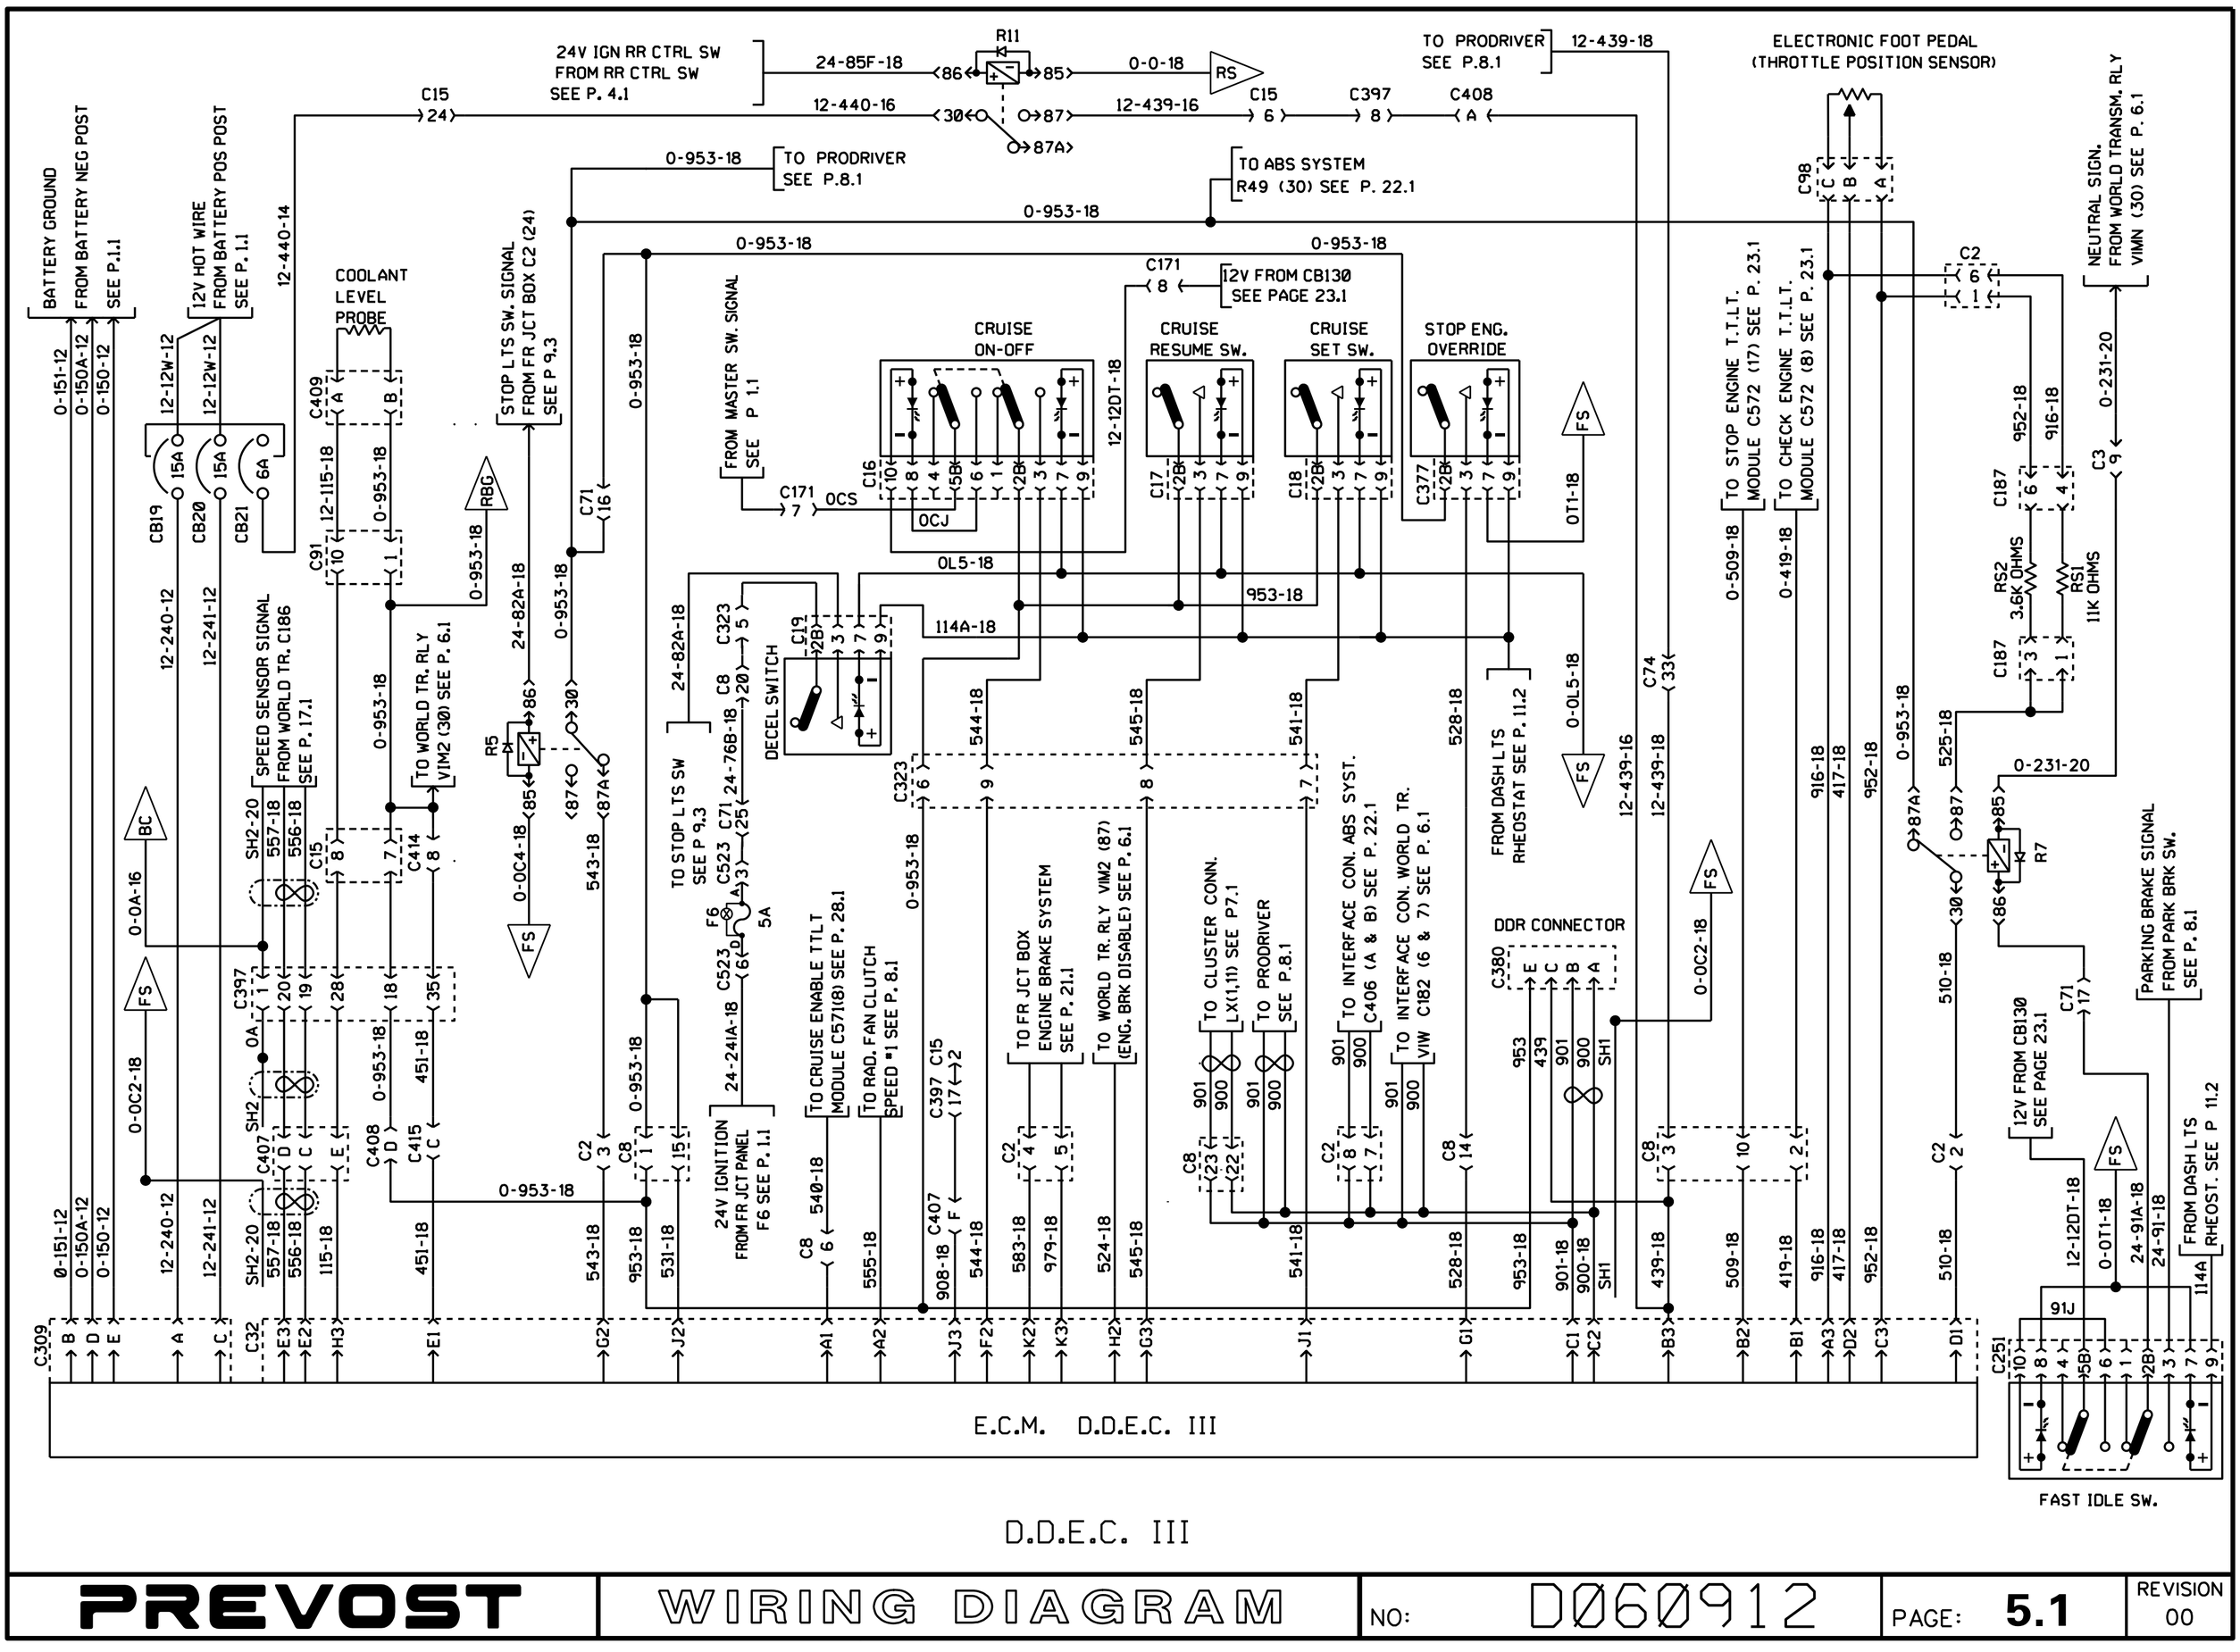

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 5.1	REVISION 00

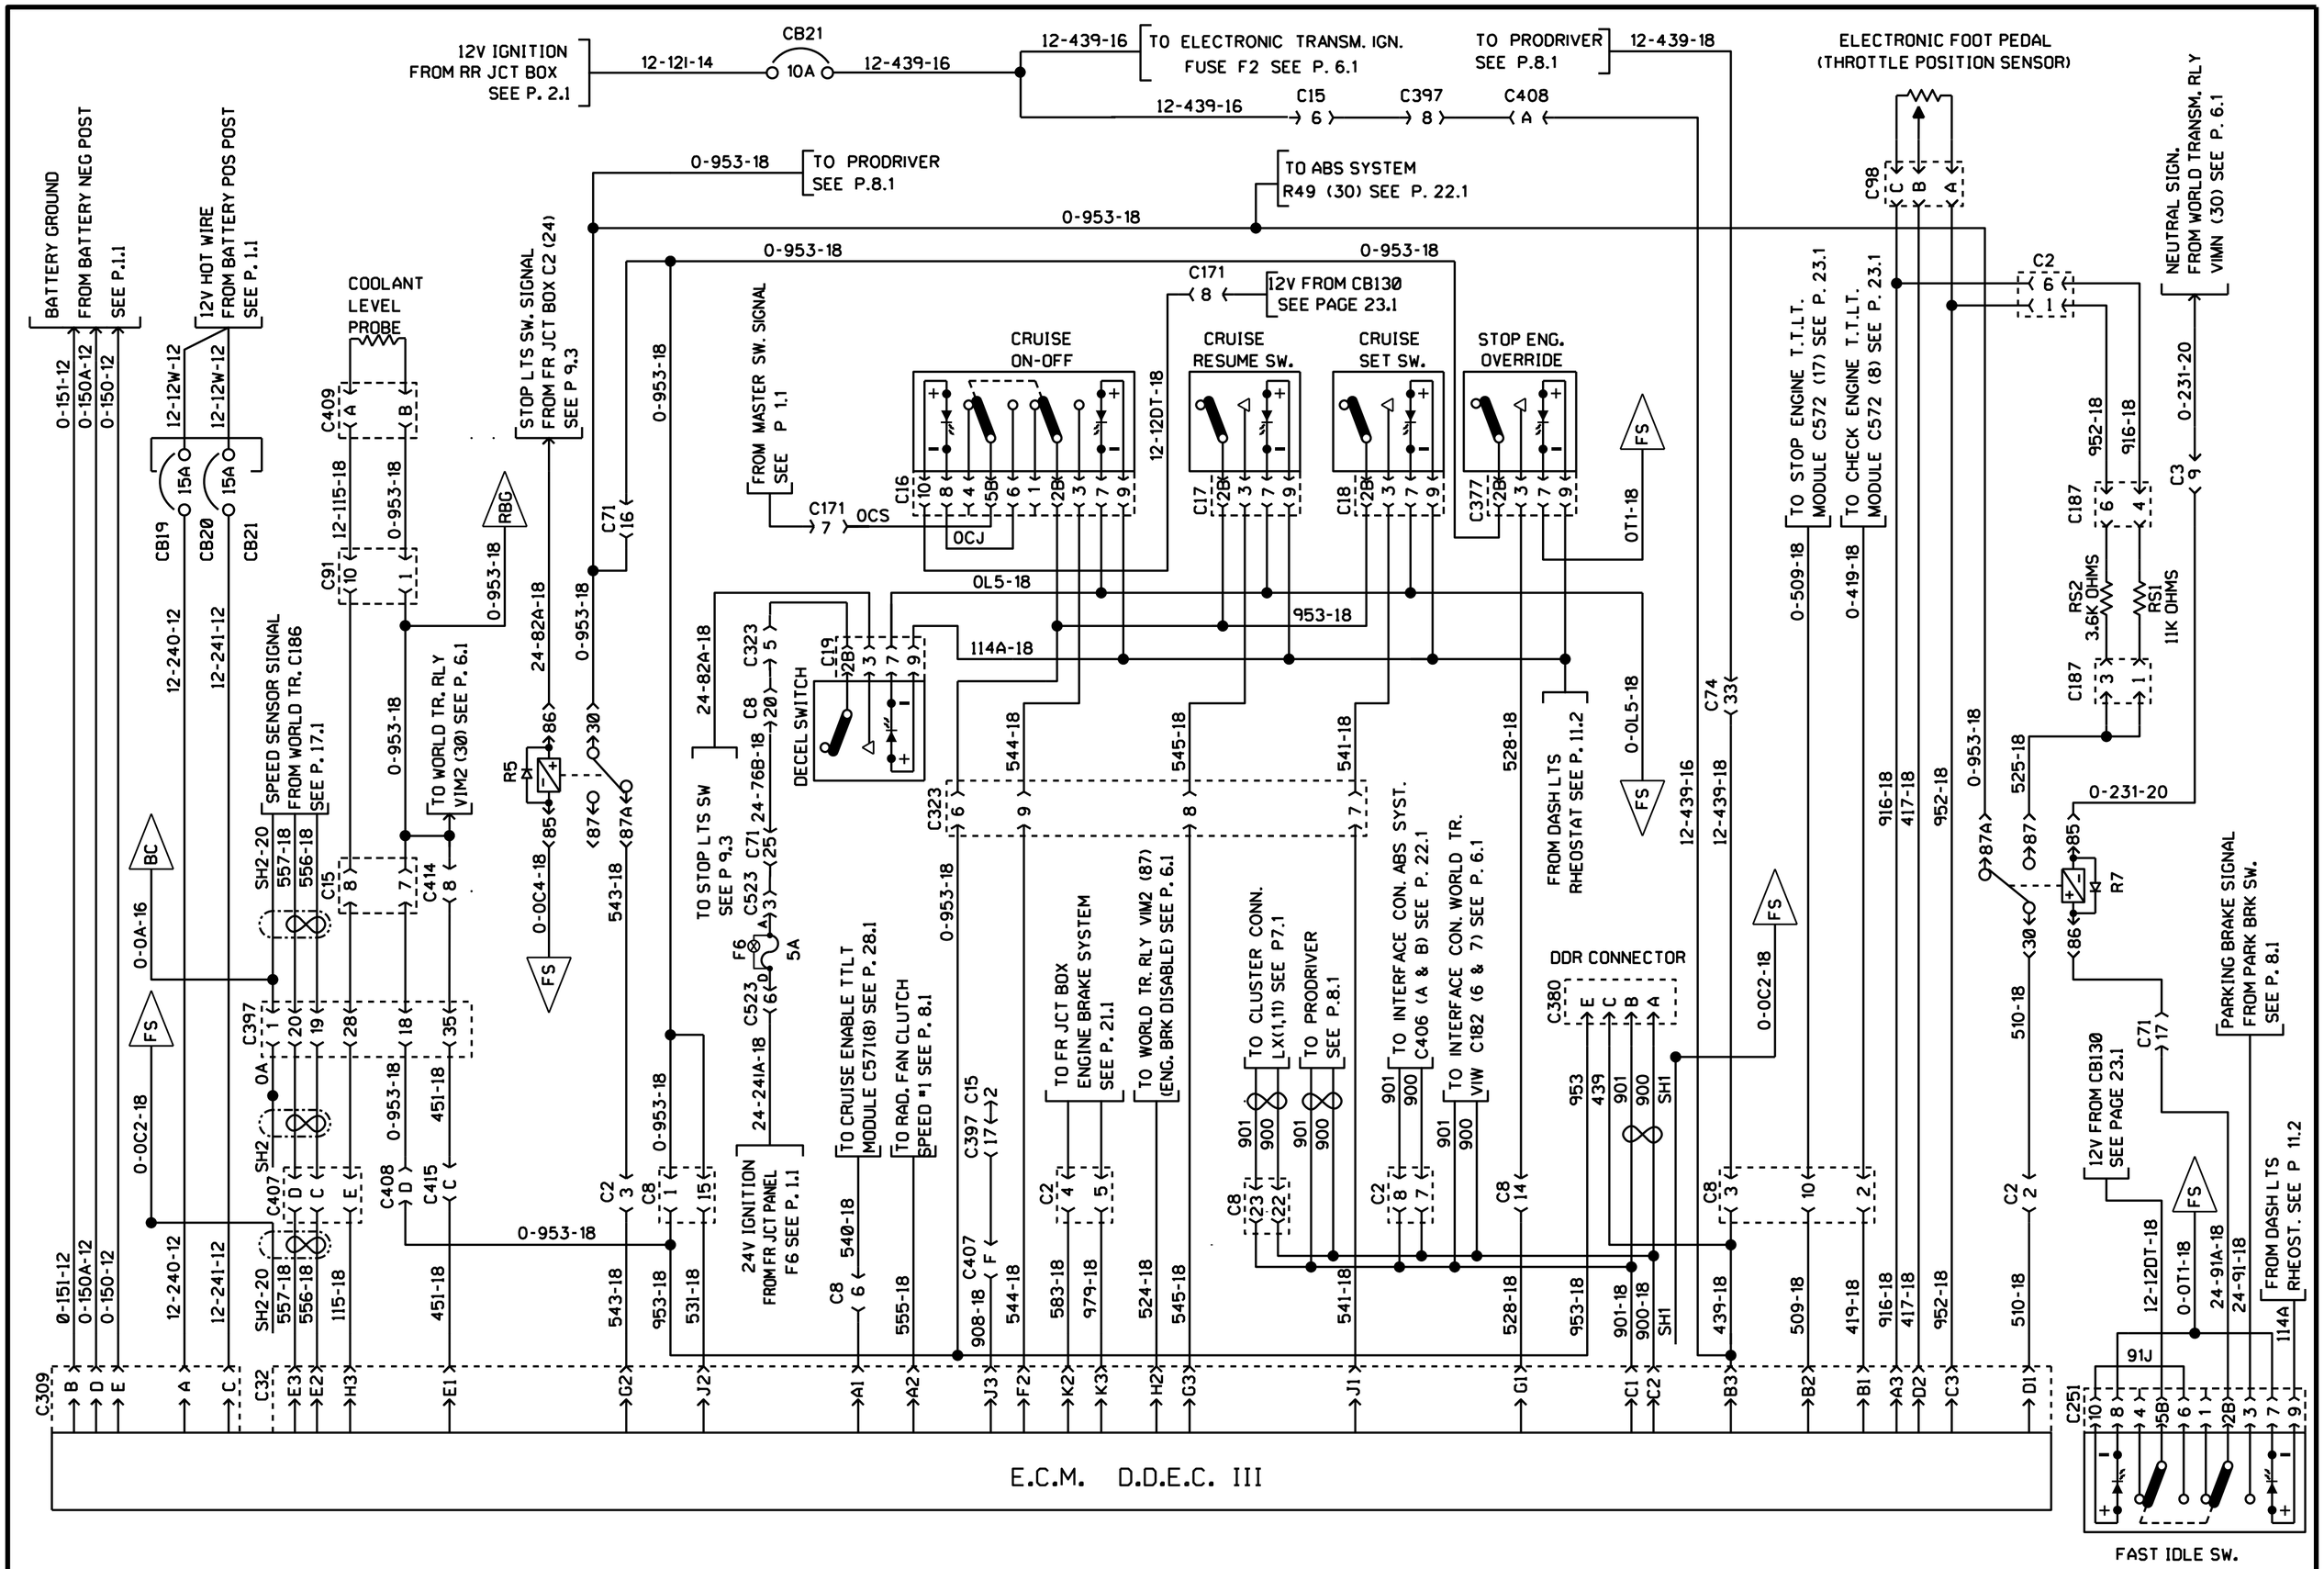

D.D.E.C. III

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 5.1	REVISION 02

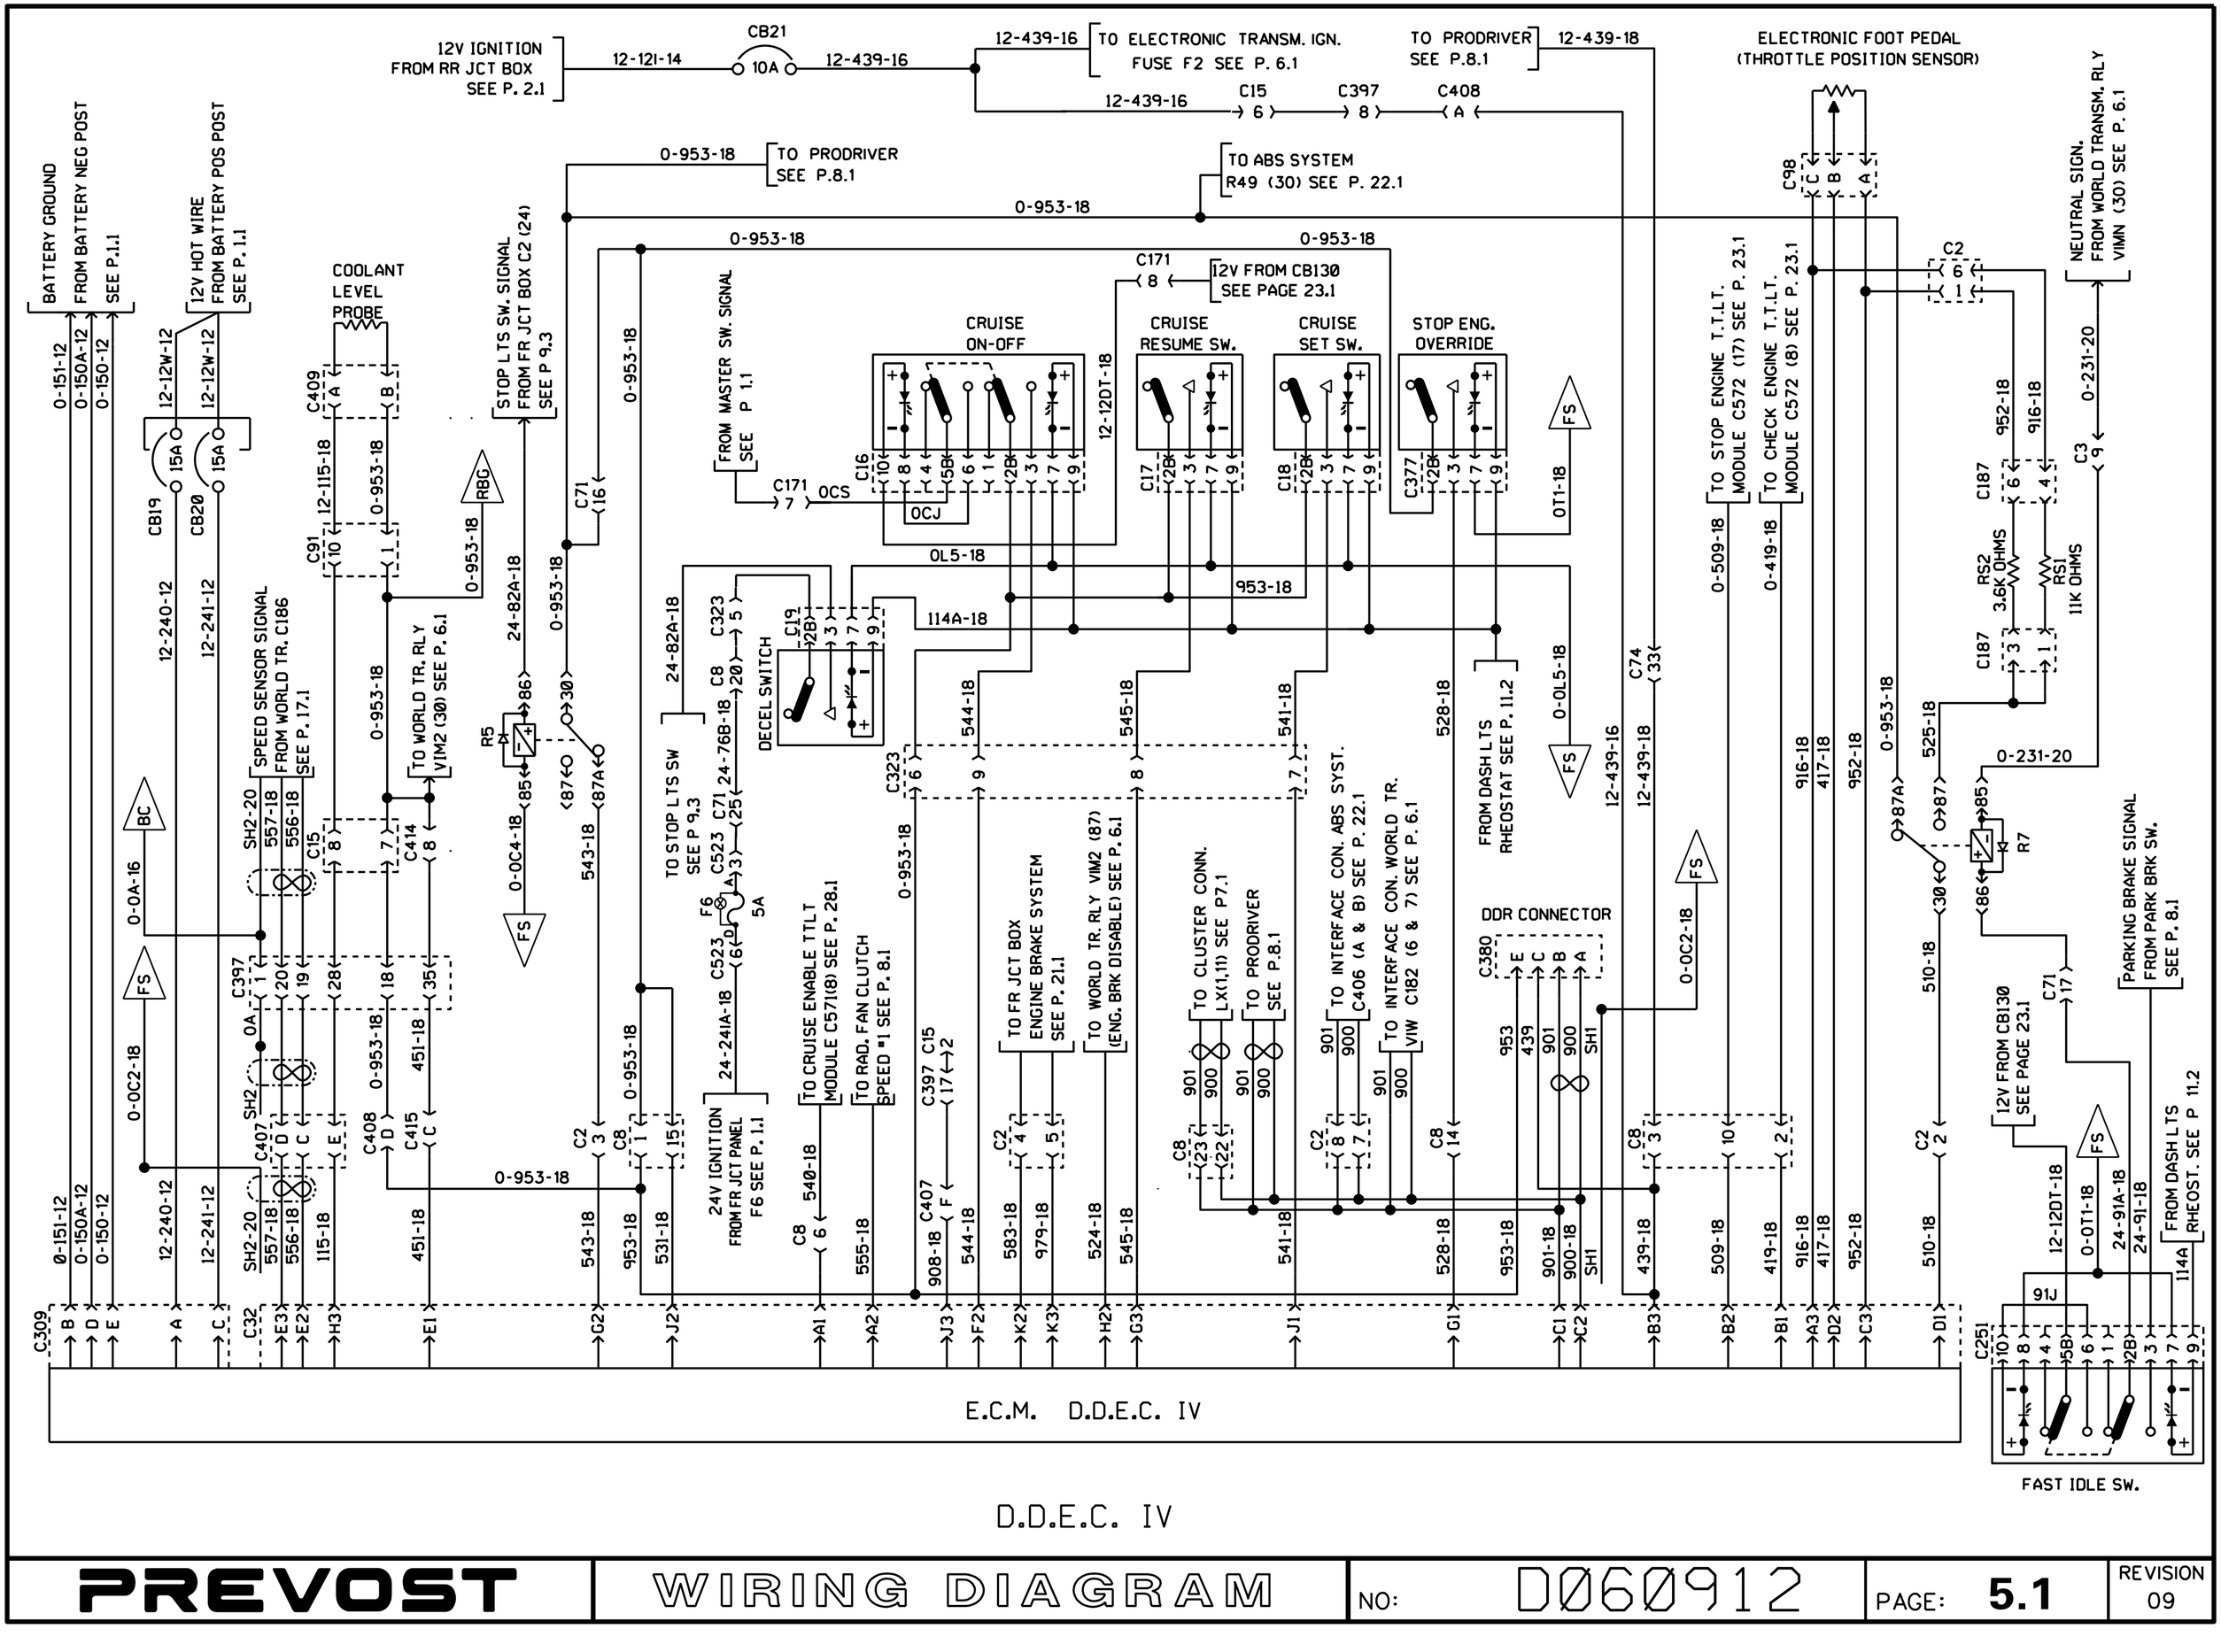
12V IGNITION FROM RR JCT BOX SEE P. 2.1
CB21
10A
TO ELECTRONIC TRANSM. IGN. FUSE F2 SEE P. 6.1
TO PRODRIVER SEE P.8.1
ELECTRONIC FOOT PEDAL (THROTTLE POSITION SENSOR)
BATTERY GROUND
FROM BATTERY NEG POST
SEE P.1.1
12V HOT WIRE FROM BATTERY POS POST
SEE P. 1.1
COOLANT LEVEL PROBE
STOP LTS SW. SIGNAL FROM FR JCT BOX C2 (24) SEE P 9.3
TO PRODRIVER SEE P.8.1
TO ABS SYSTEM R49 (30) SEE P. 22.1
FROM MASTER SW. SIGNAL SEE P 1.1
12V FROM CB130 SEE PAGE 23.1
CRUISE ON-OFF
CRUISE RESUME SW.
CRUISE SET SW.
STOP ENG. OVERRIDE
SPEED SENSOR SIGNAL FROM WORLD TR. C186 SEE P. 17.1
TO WORLD TR. RLY VIM2 (30) SEE P. 6.1
DECEL SWITCH
TO STOP LTS SW SEE P 9.3
TO CRUISE ENABLE TTLT MODULE C571(8) SEE P. 28.1
TO RAD. FAN CLUTCH SPEED "1 SEE P. 8.1
24V IGNITION FROM FR JCT PANEL F6 SEE P. 1.1
TO FR JCT BOX ENGINE BRAKE SYSTEM SEE P. 21.1
TO WORLD TR. RLY VIM2 (87) (ENG. BRK DISABLE) SEE P. 6.1
TO CLUSTER CONN. LX(1,11) SEE P7.1
TO PRODRIVER SEE P.8.1
TO INTERFACE CON. ABS SYST. C406 (A & B) SEE P. 22.1
TO INTERFACE CON. WORLD TR. VIW C182 (6 & 7) SEE P. 6.1
FROM DASH LTS RHEOSTAT SEE P. 11.2
DDR CONNECTOR
TO STOP ENGINE T.T.L.T. MODULE C572 (17) SEE P. 23.1
TO CHECK ENGINE T.T.L.T. MODULE C572 (8) SEE P. 23.1
NEUTRAL SIGN. FROM WORLD TRANSM. RLY VIMN (30) SEE P. 6.1
RS2 3.6K OHMS
RS1 11K OHMS
PARKING BRAKE SIGNAL FROM PARK BRK SW. SEE P. 8.1
FROM DASH LTS RHEOST. SEE P 11.2
FAST IDLE SW.
E.C.M. D.D.E.C. IV

D.D.E.C. IV

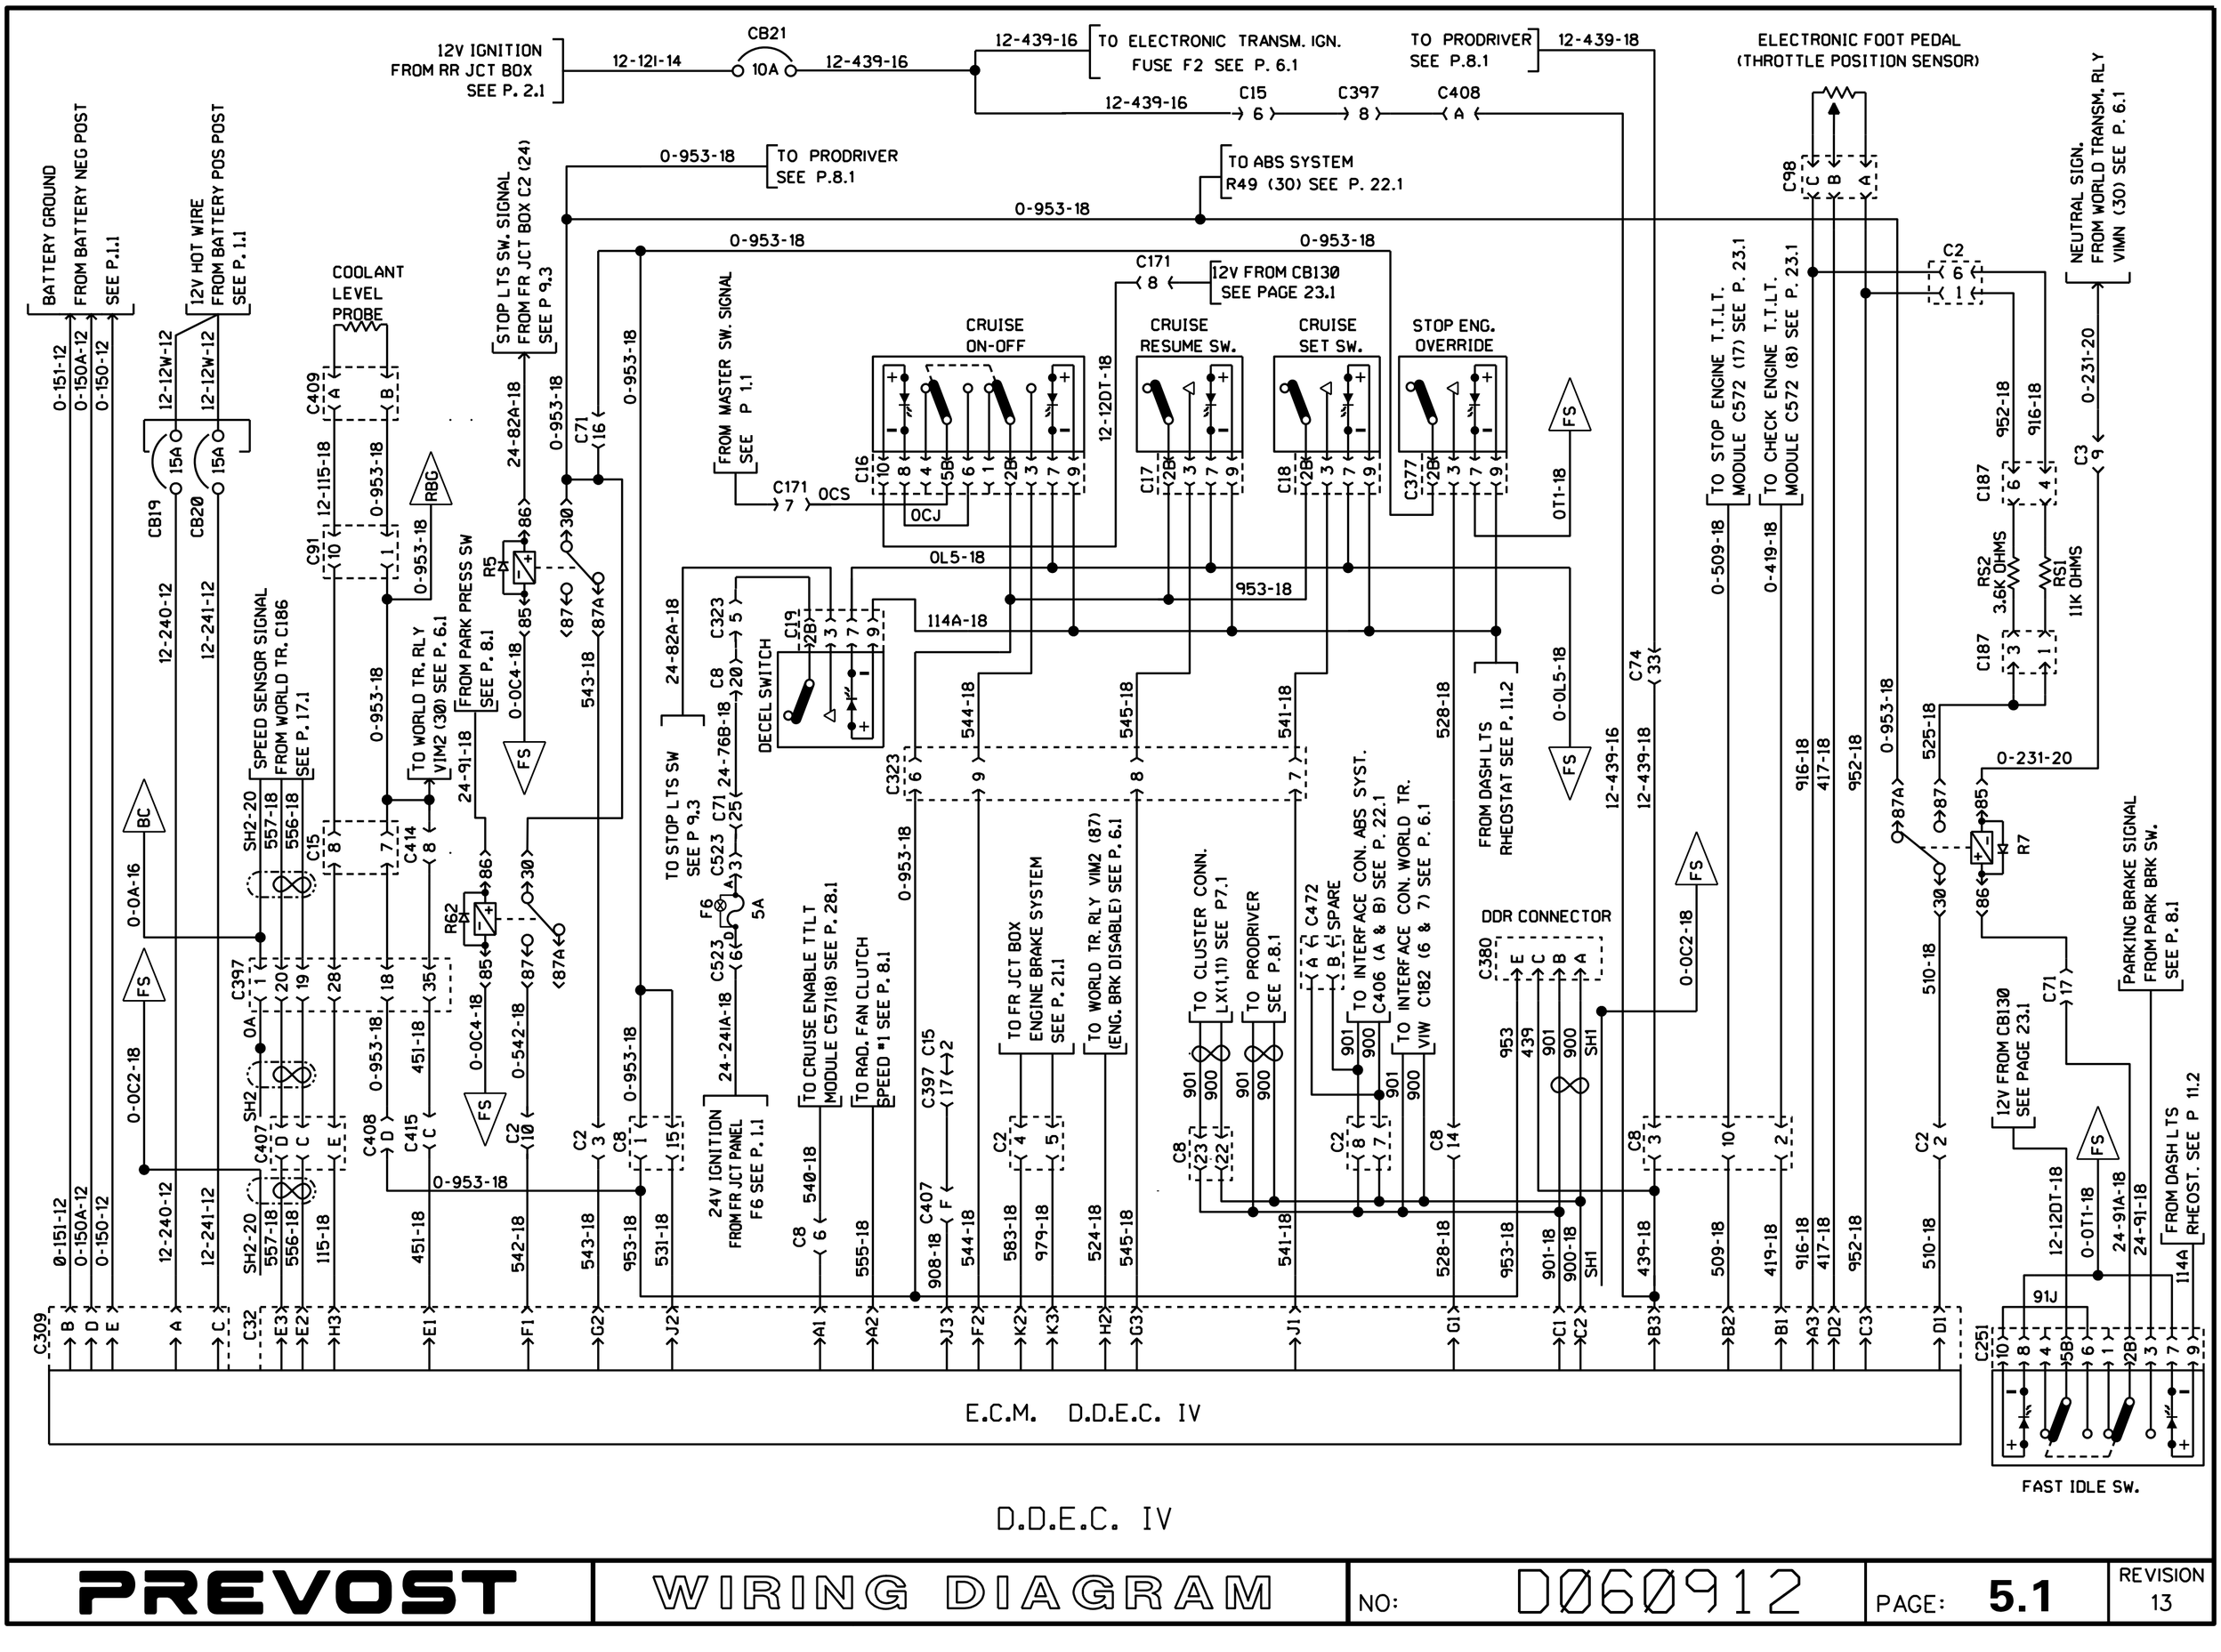

D.D.E.C. IV

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 5.1	REVISION 13

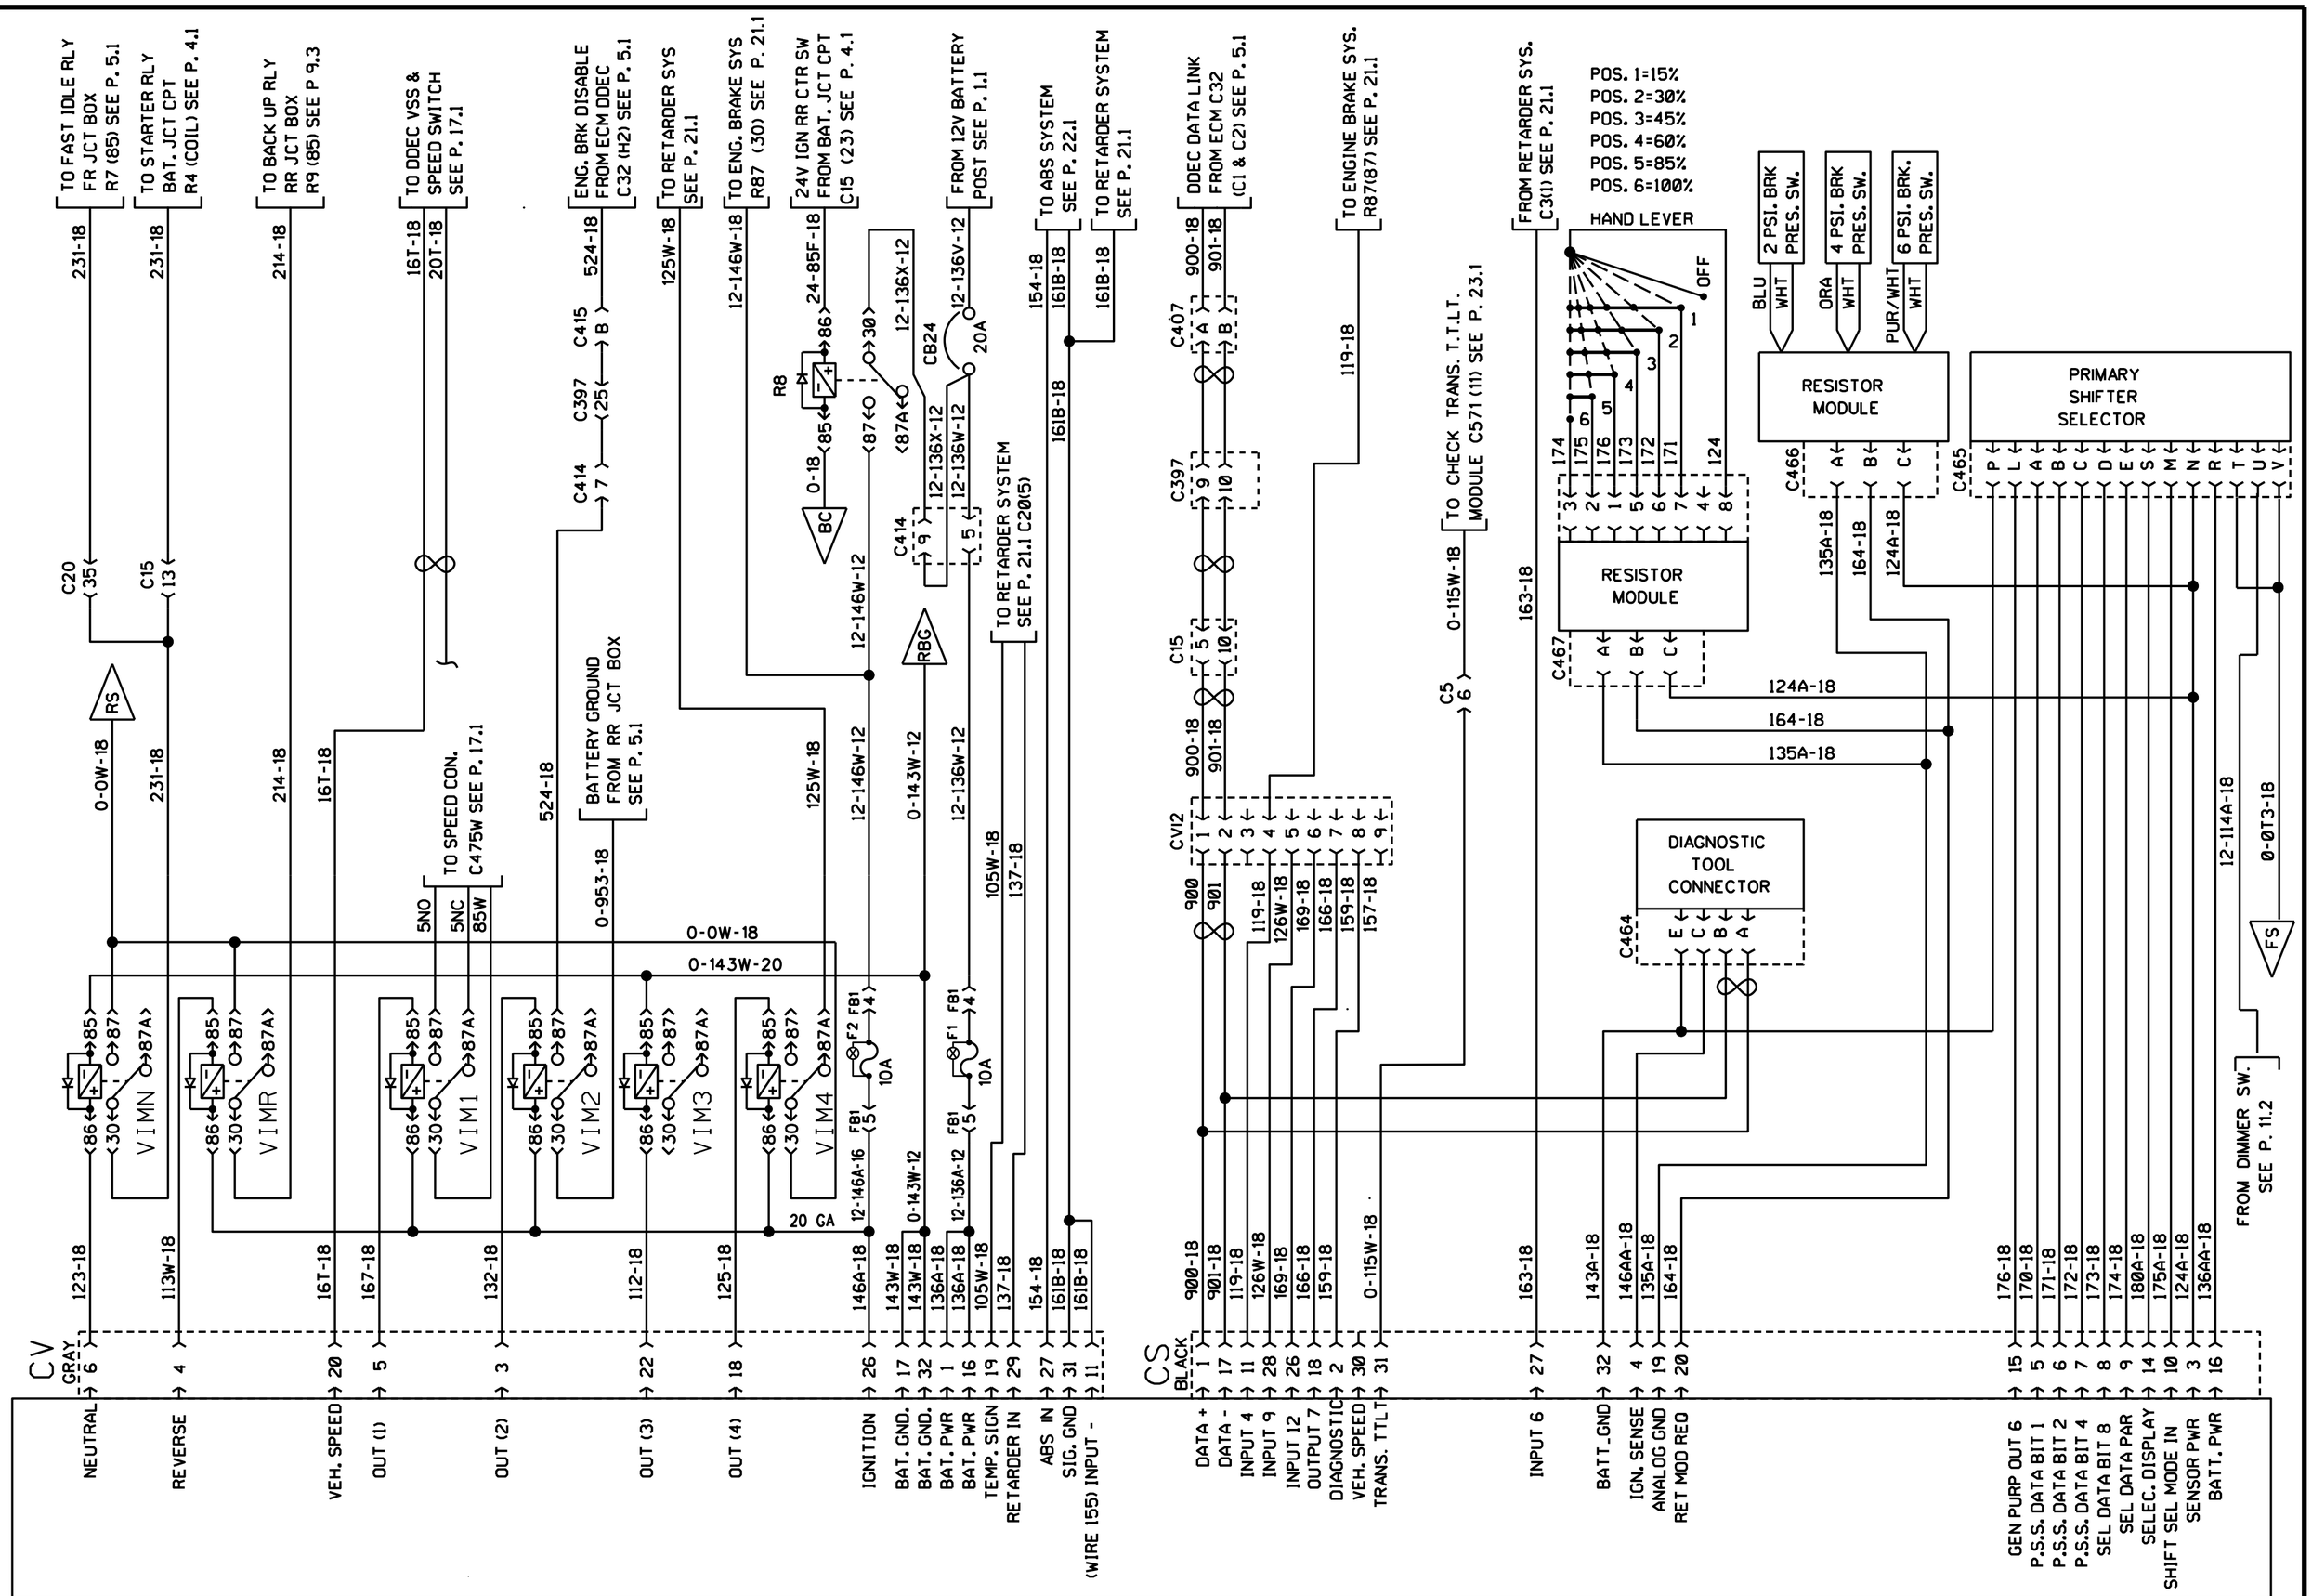

WORLD TRANSMISSION E.C.U.

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 6.1	REVISION 00

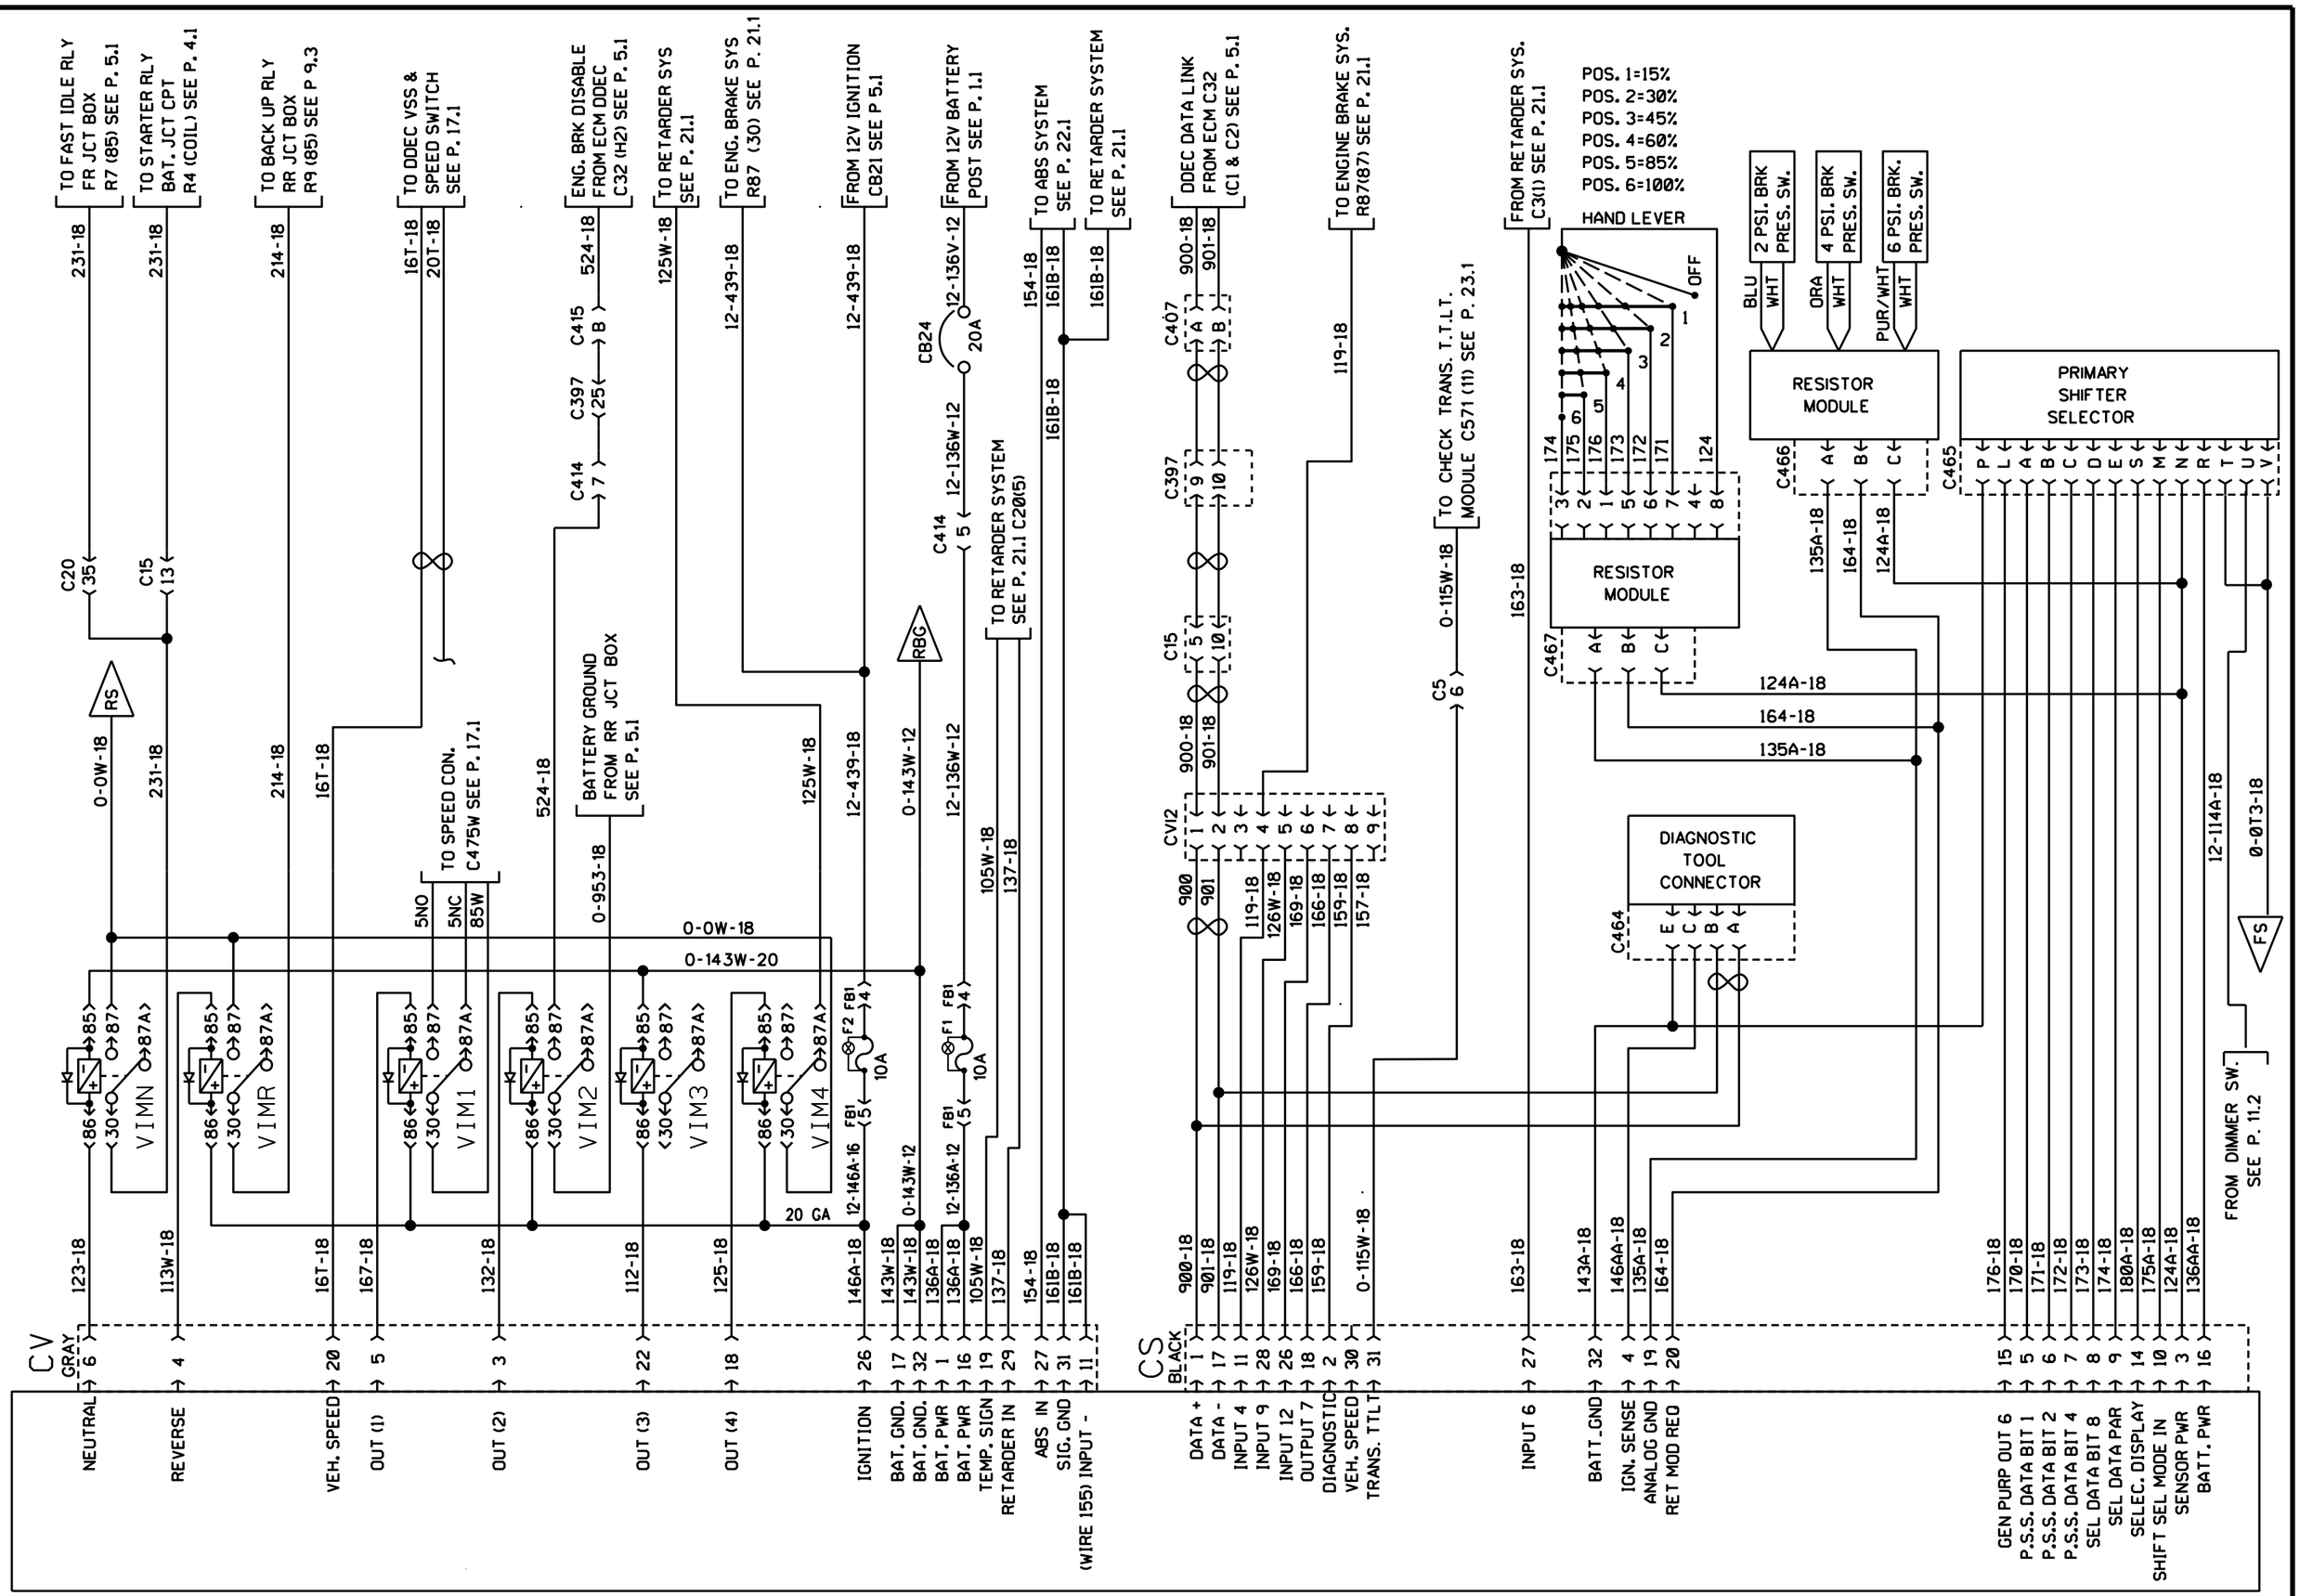

WORLD TRANSMISSION E.C.U.

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 6.1	REVISION 02

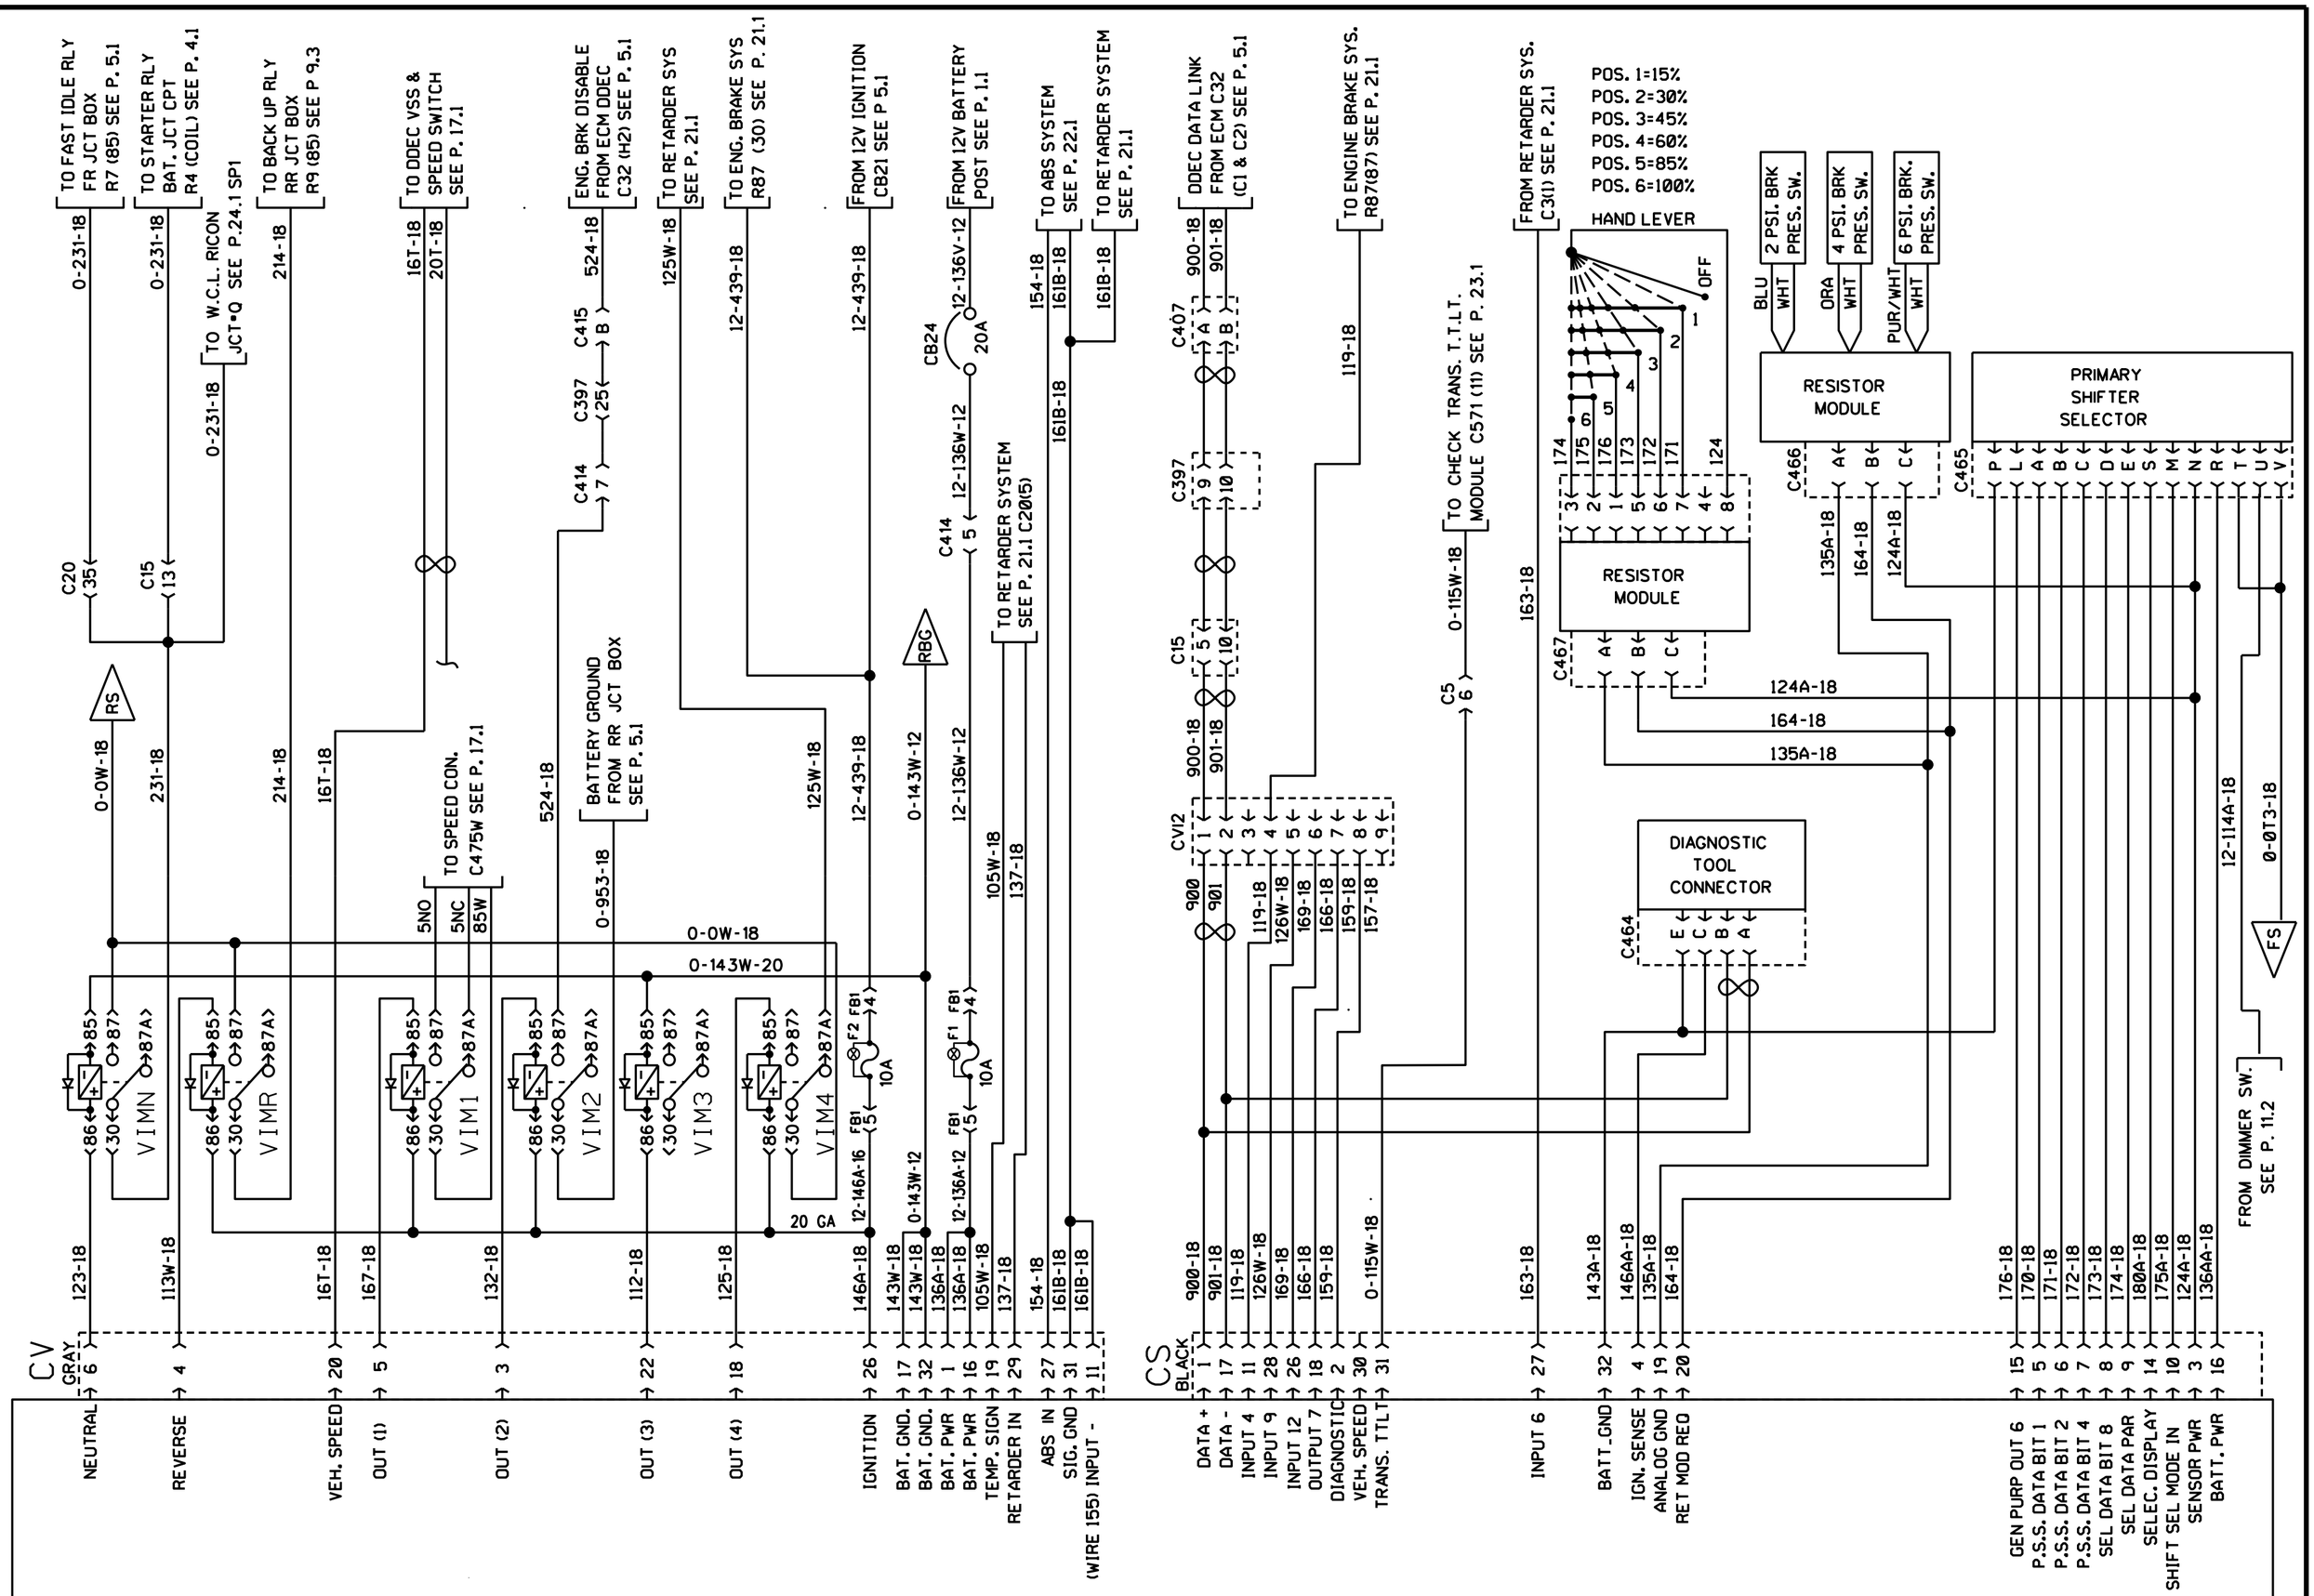

WORLD TRANSMISSION E.C.U.

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 6.1 SP1	REVISION 00

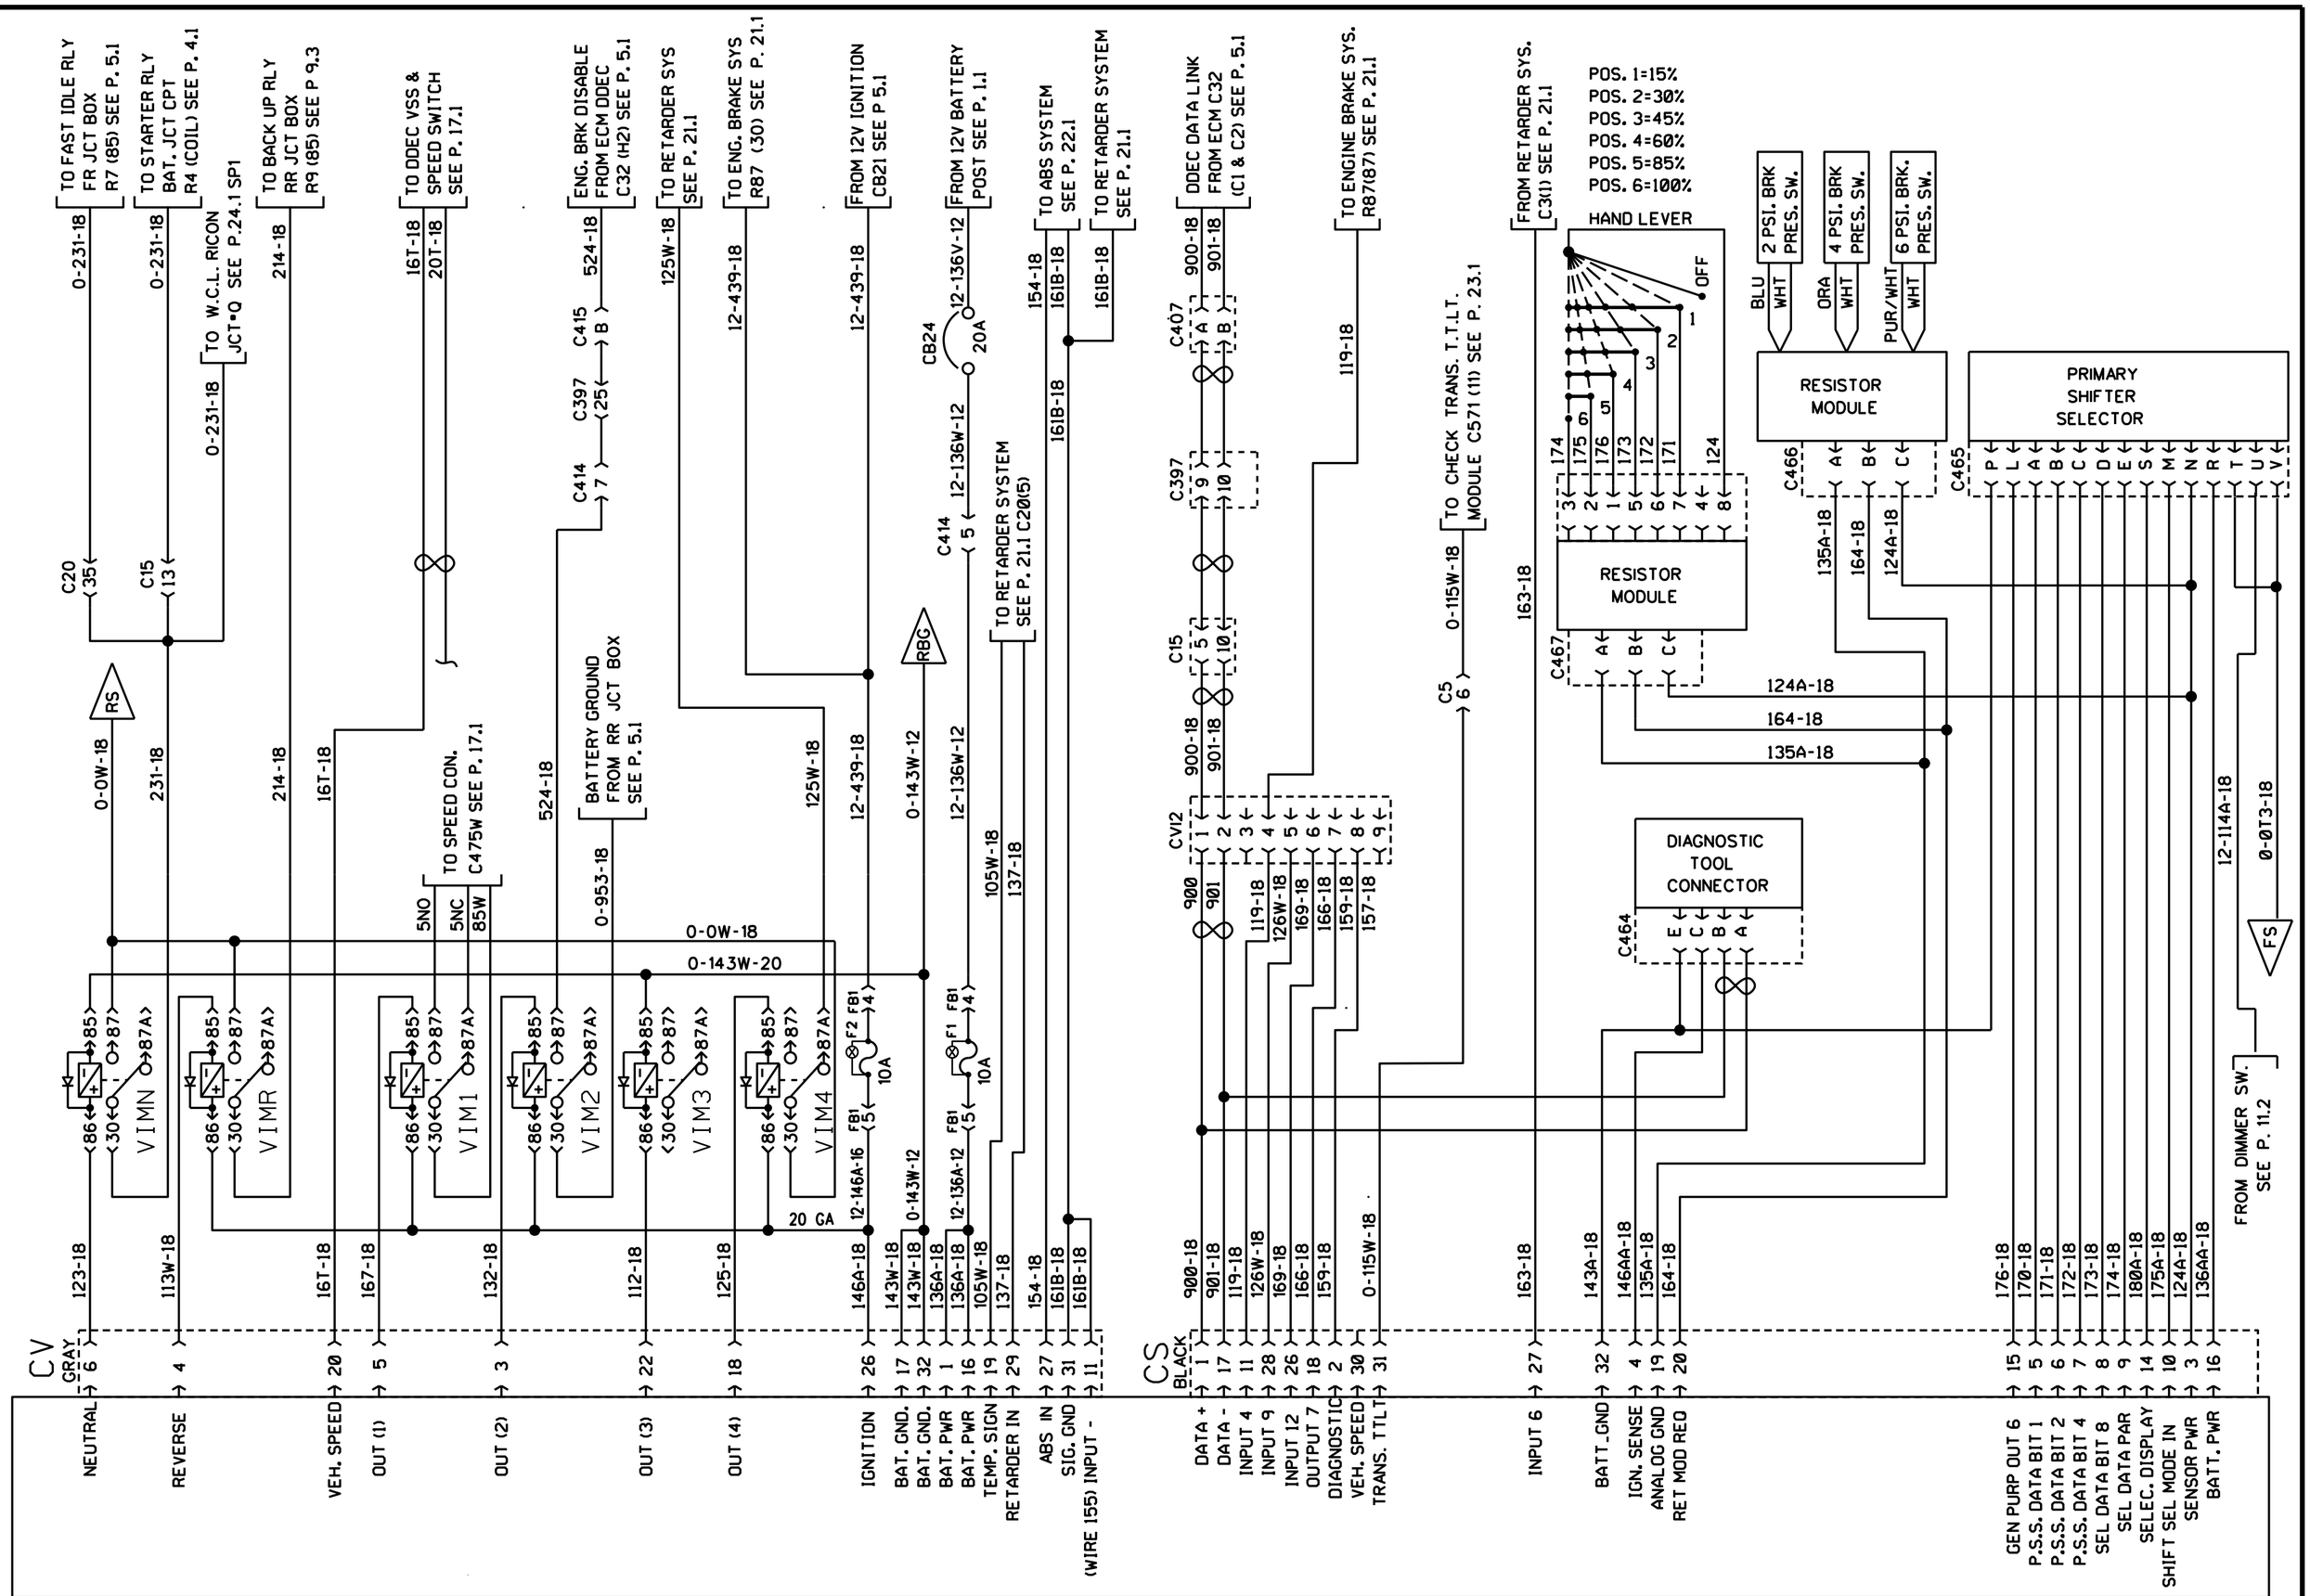

WORLD TRANSMISSION E.C.U. AVEC W.C.L.

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 6.1 SP1	REVISION 10

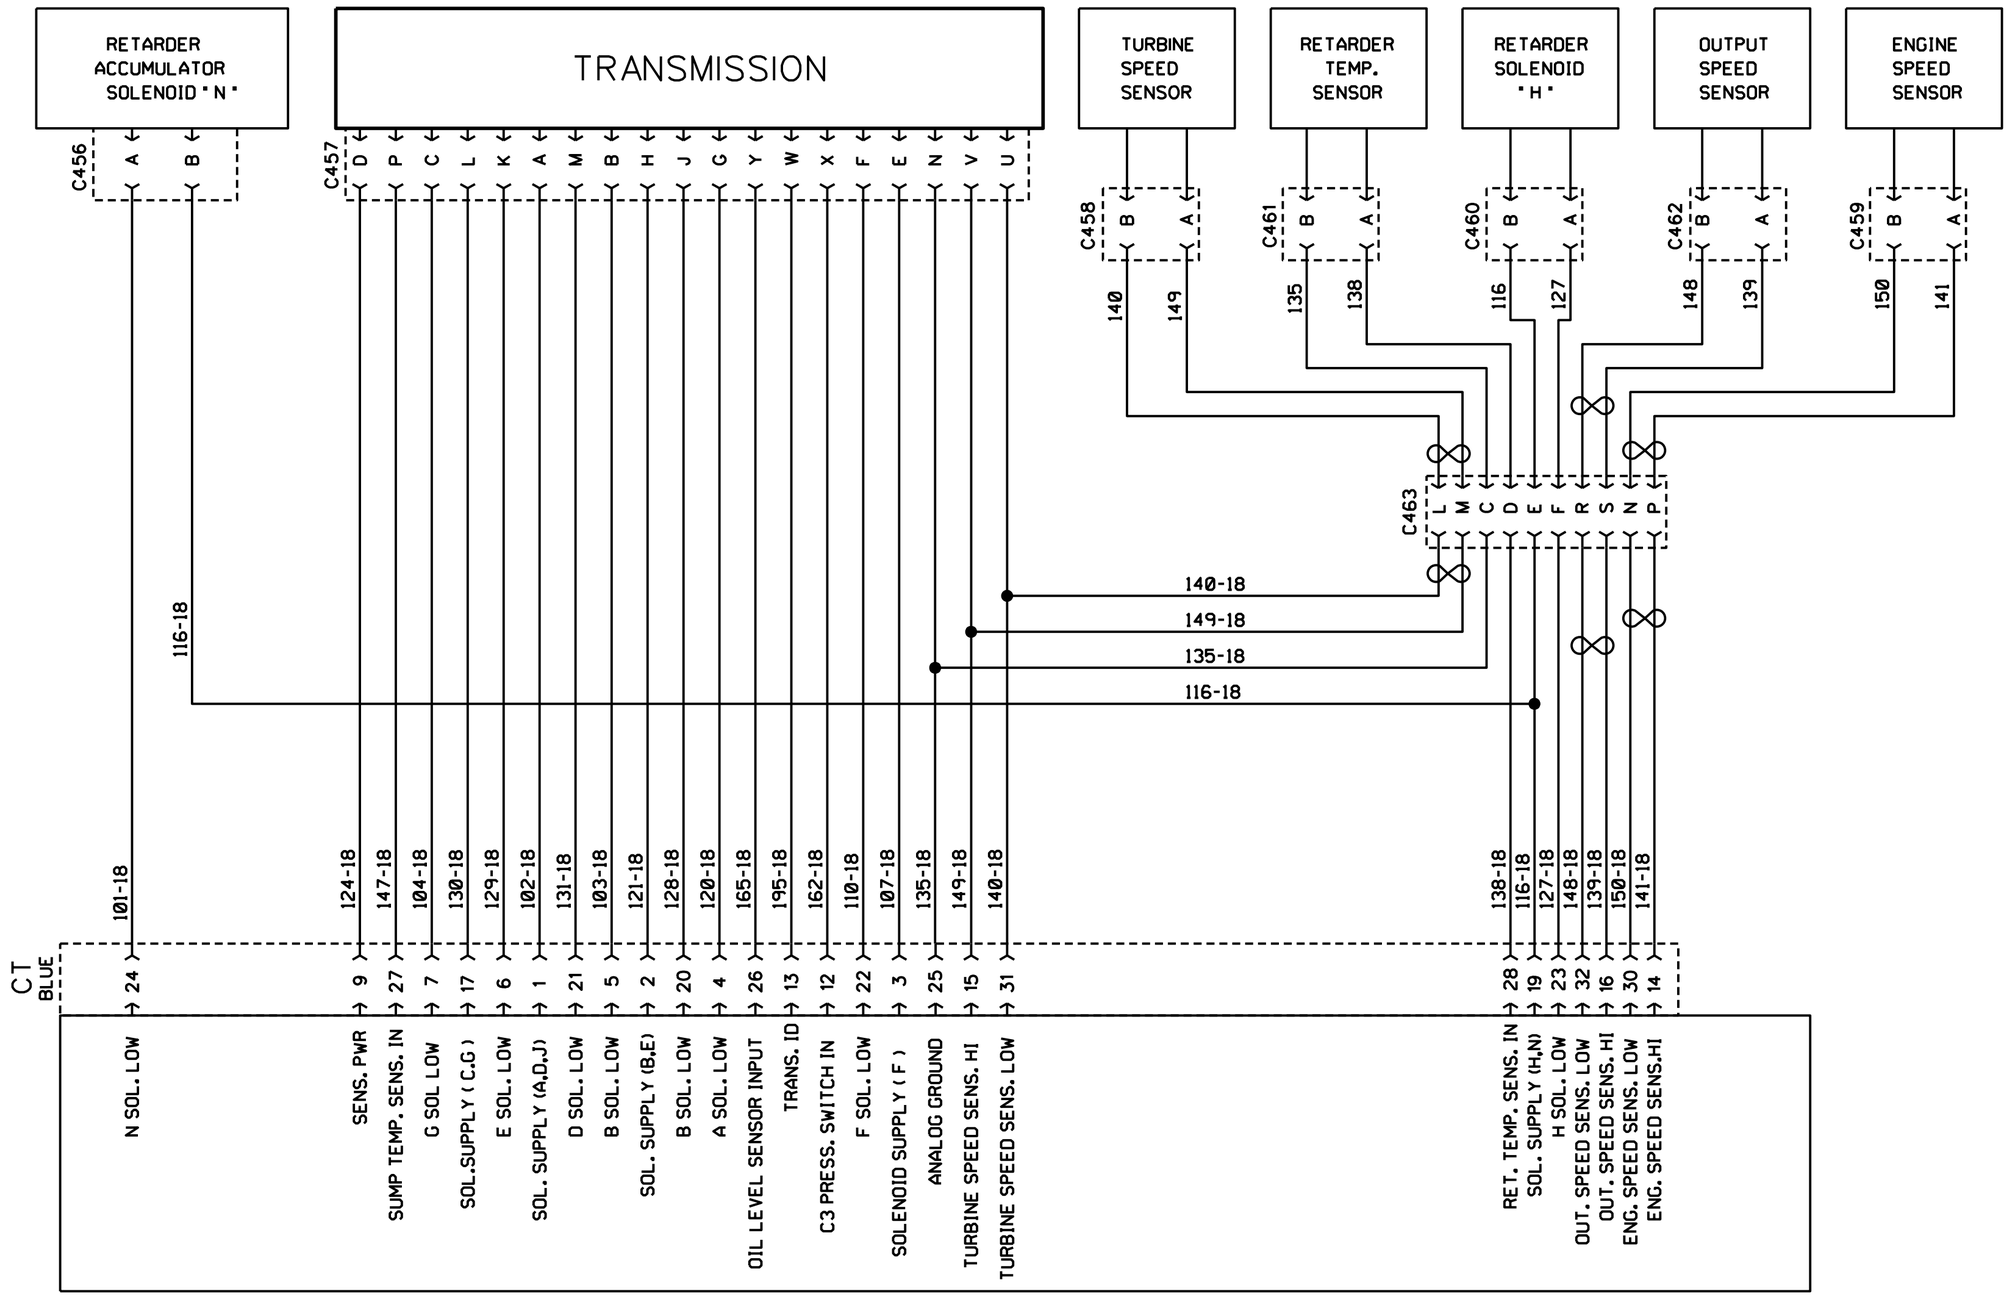

WORLD TRANSMISSION E.C.U. (SUITE)

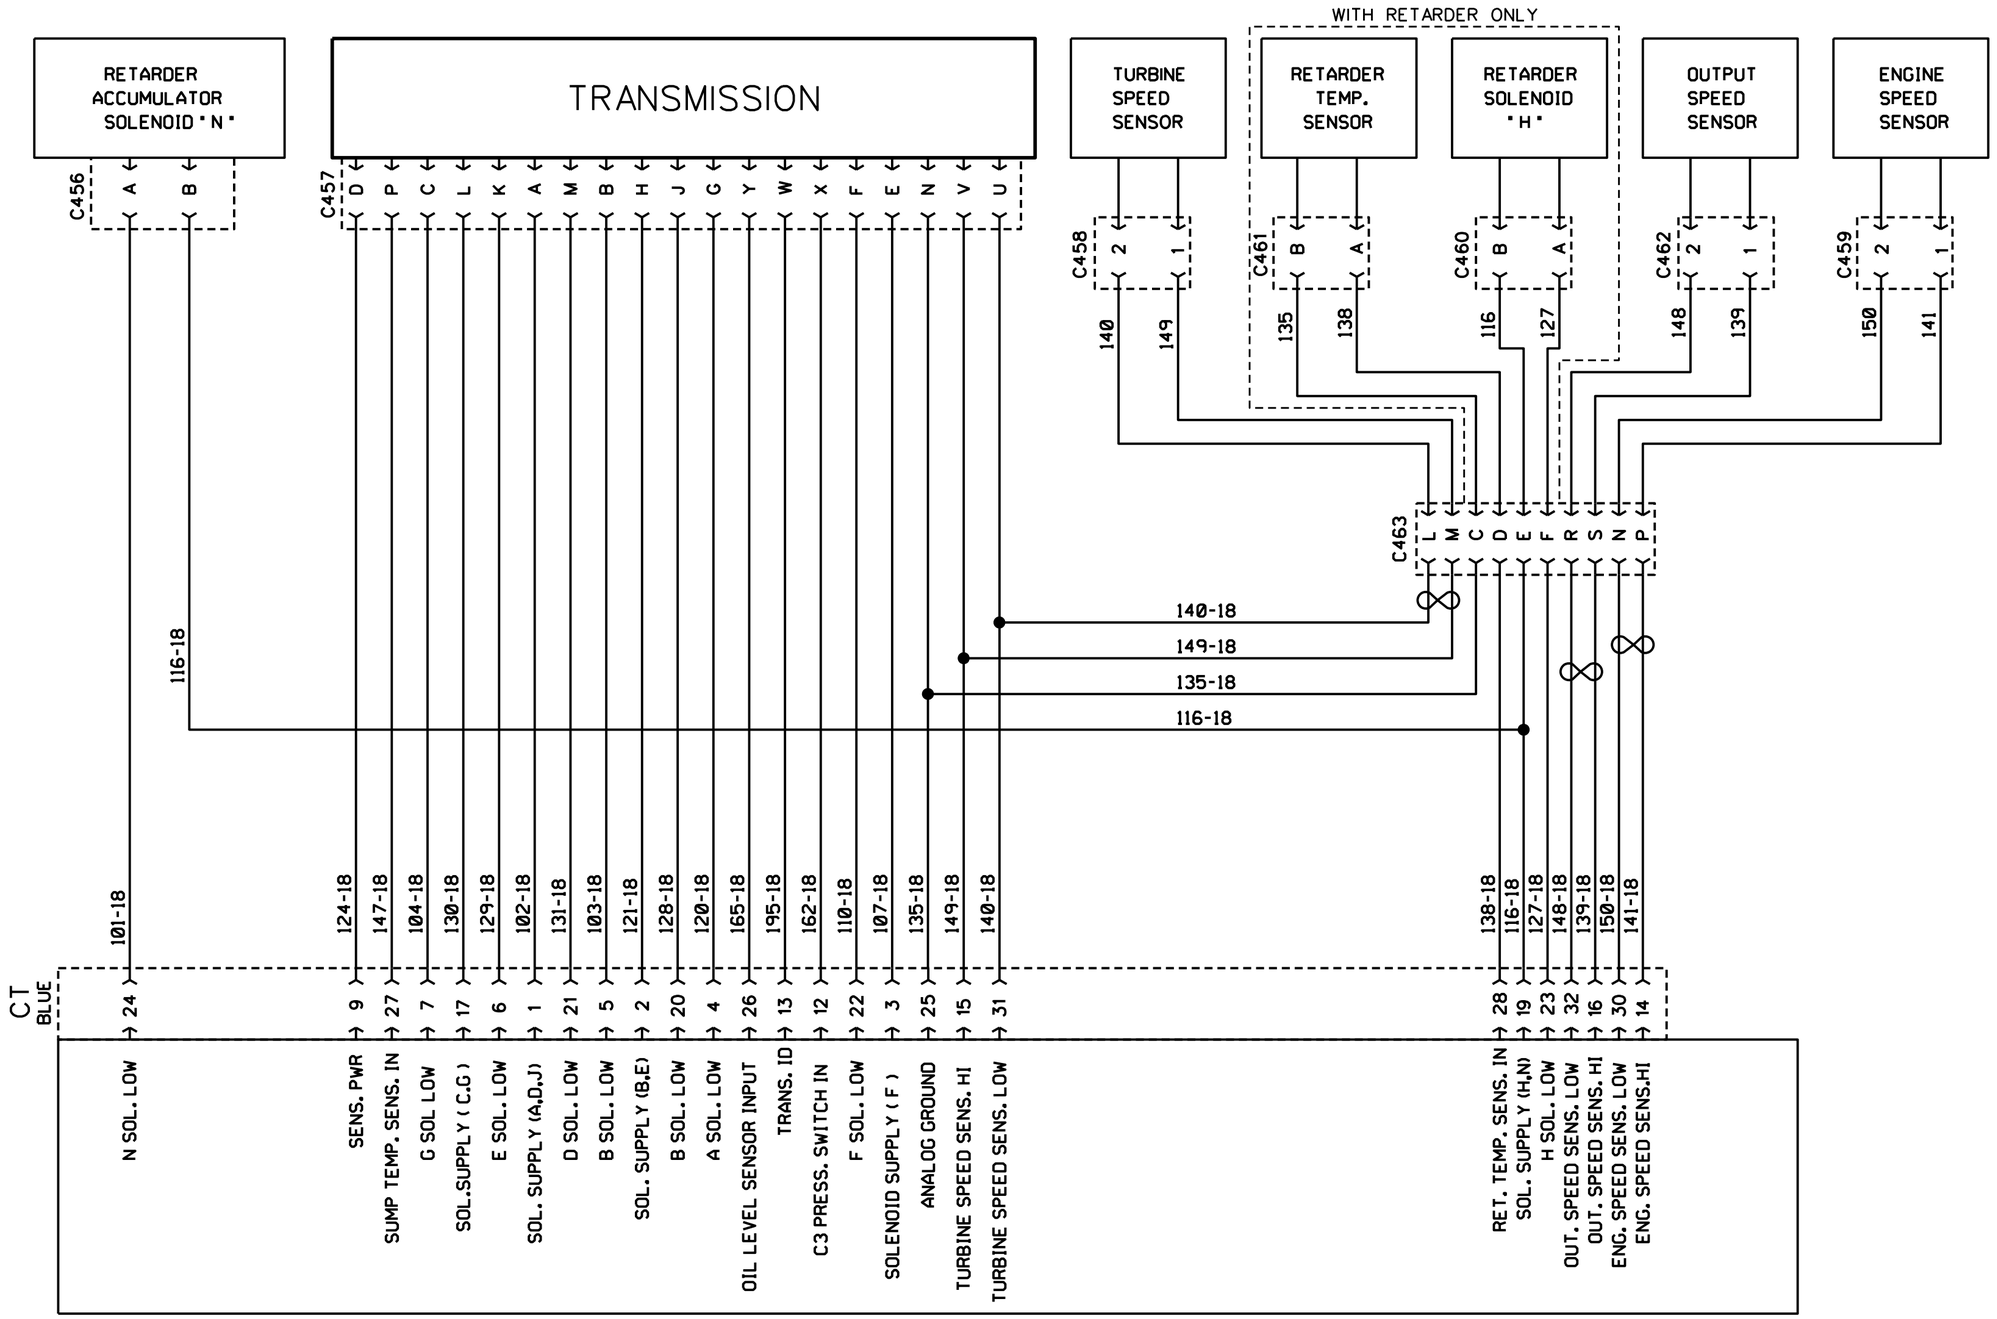

WORLD TRANSMISSION E.C.U. (SUITE)

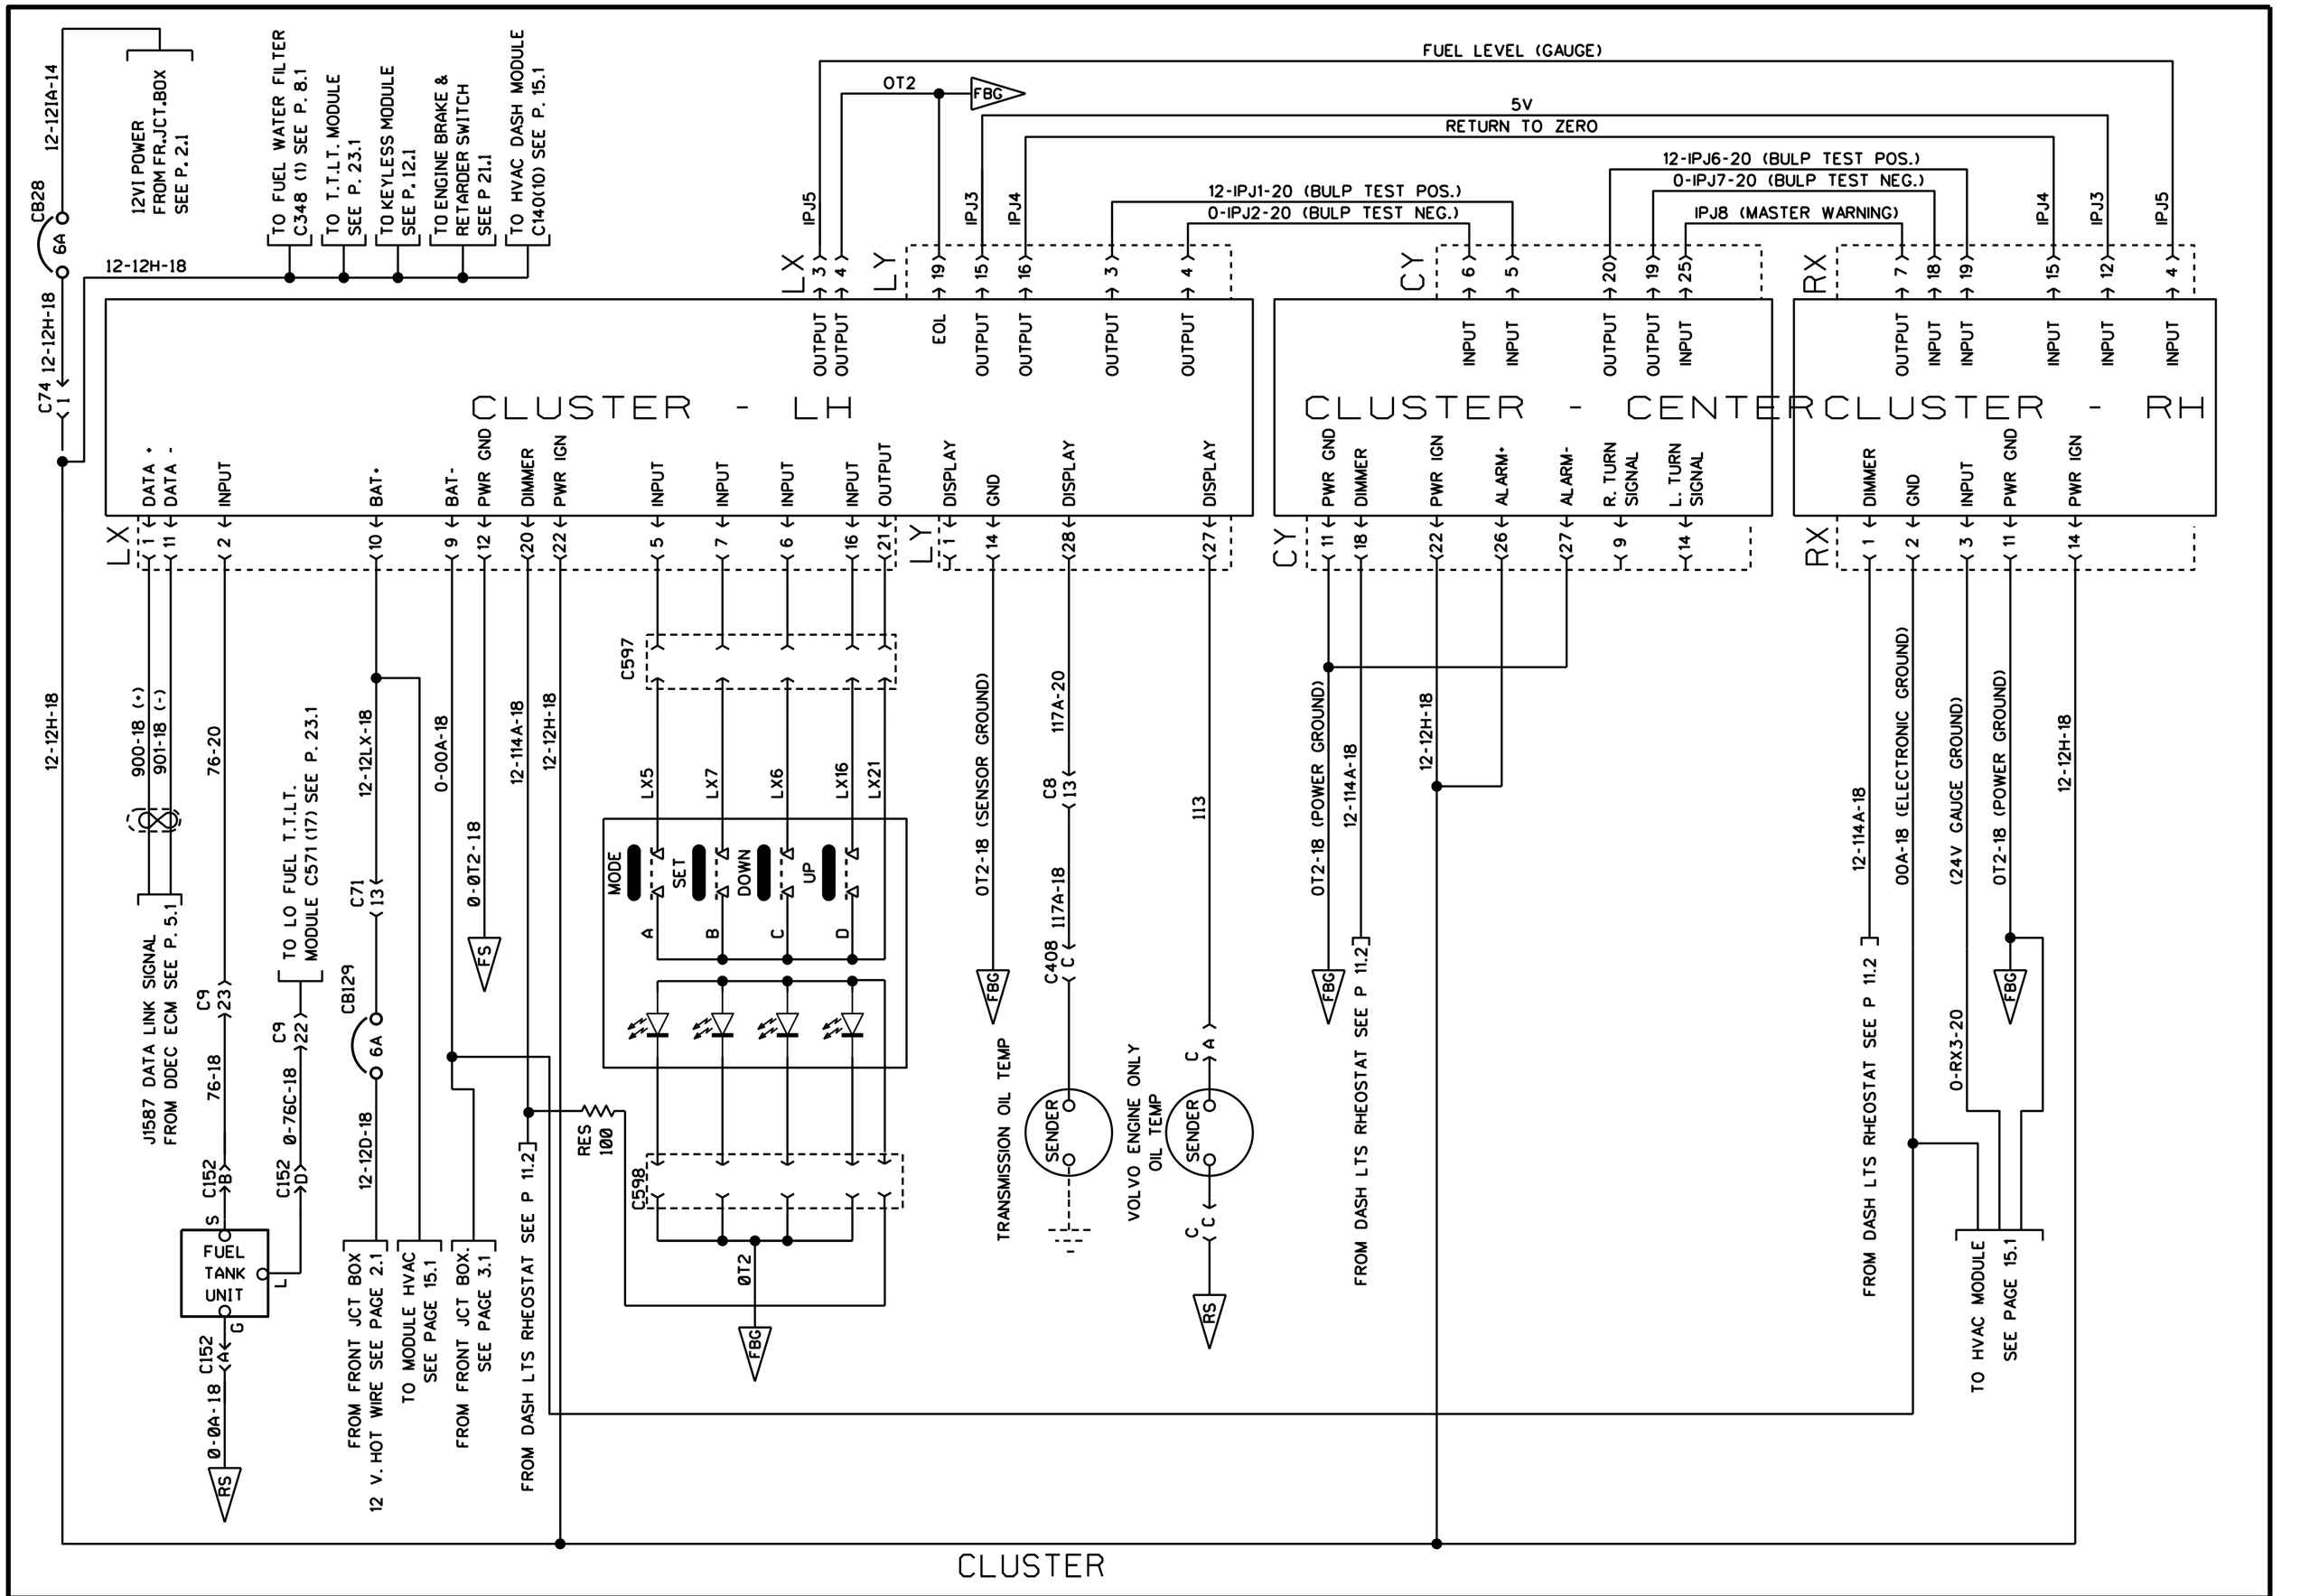

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 7.1	REVISION 00

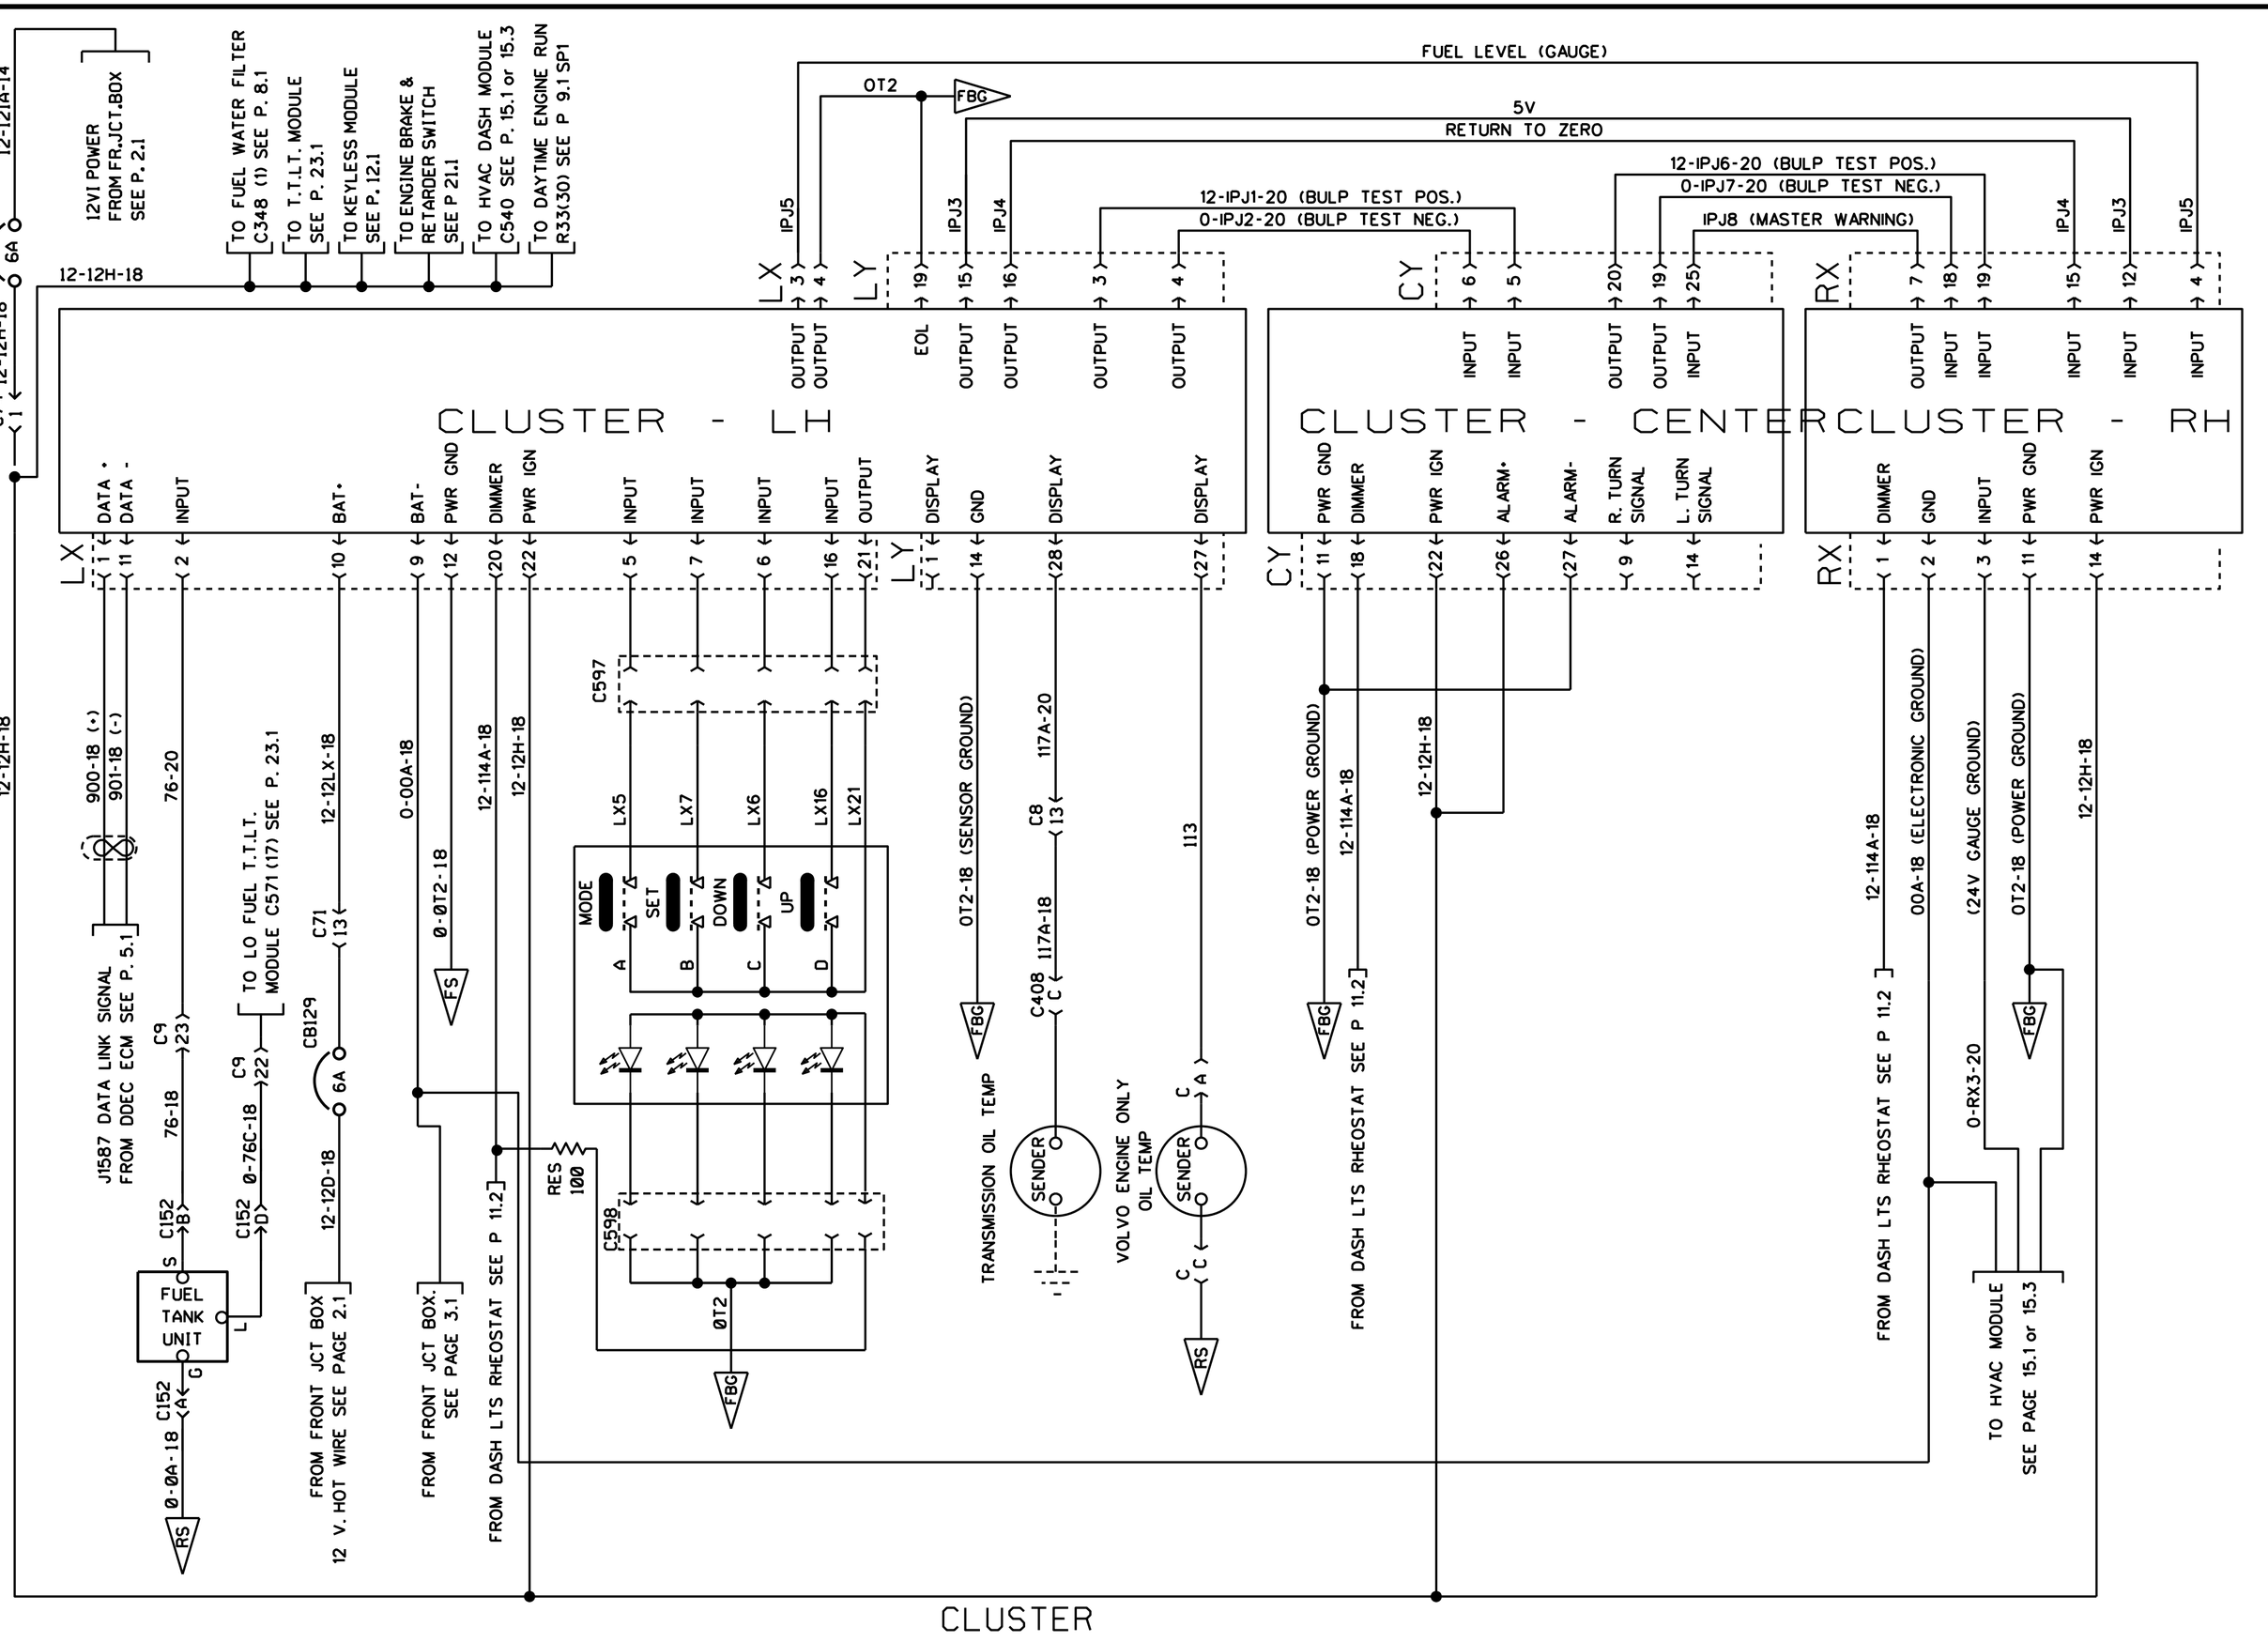
CLUSTER - LH
CLUSTER - CENTER
CLUSTER - RH
LX
LY
CY
RX
IPJ5
IPJ3
IPJ4
OUTPUT
EOL
INPUT
FUEL LEVEL (GAUGE)
OT2
FBG
5V
RETURN TO ZERO
12-IPJ6-20 (BULP TEST POS.)
0-IPJ7-20 (BULP TEST NEG.)
IPJ8 (MASTER WARNING)
12-IPJ1-20 (BULP TEST POS.)
0-IPJ2-20 (BULP TEST NEG.)
12-12H-18
CB28
6A
12-12IA-14
12VI POWER FROM FR.JCT.BOX SEE P. 2.1
TO FUEL WATER FILTER C348 (1) SEE P. 8.1
TO T.T.L.T. MODULE SEE P. 23.1
TO KEYLESS MODULE SEE P. 12.1
TO ENGINE BRAKE & RETARDER SWITCH SEE P 21.1
TO HVAC DASH MODULE C540 SEE P. 15.1 or 15.3
TO DAYTIME ENGINE RUN R33(30) SEE P 9.1 SP1
C74 12-12H-18
DATA +
DATA -
BAT+
BAT-
PWR GND
DIMMER
PWR IGN
DISPLAY
GND
ALARM+
ALARM-
R. TURN SIGNAL
L. TURN SIGNAL
C597
LX5
LX7
LX6
LX16
LX21
MODE
SET
DOWN
UP
RES 100
C598
ØT2
FS
RS
0-ØT2-18
0-ØA-18
0-00A-18
0-0T2-18
0-RX3-20
12-114A-18
12-12H-18
12-12LX-18
12-12D-18
76-20
76-18
0-76C-18
C152
C9
C71
CB129
C8
117A-18
C408
113
900-18 (+)
901-18 (-)
J1587 DATA LINK SIGNAL FROM DDEC ECM SEE P. 5.1
TO LO FUEL T.T.L.T. MODULE C571 (17) SEE P. 23.1
FUEL TANK UNIT
FROM FRONT JCT BOX 12 V. HOT WIRE SEE PAGE 2.1
FROM FRONT JCT BOX. SEE PAGE 3.1
FROM DASH LTS RHEOSTAT SEE P 11.2
TRANSMISSION OIL TEMP
SENDER
VOLVO ENGINE ONLY OIL TEMP
(POWER GROUND)
(SENSOR GROUND)
(ELECTRONIC GROUND)
(24V GAUGE GROUND)
TO HVAC MODULE SEE PAGE 15.1 or 15.3

CLUSTER

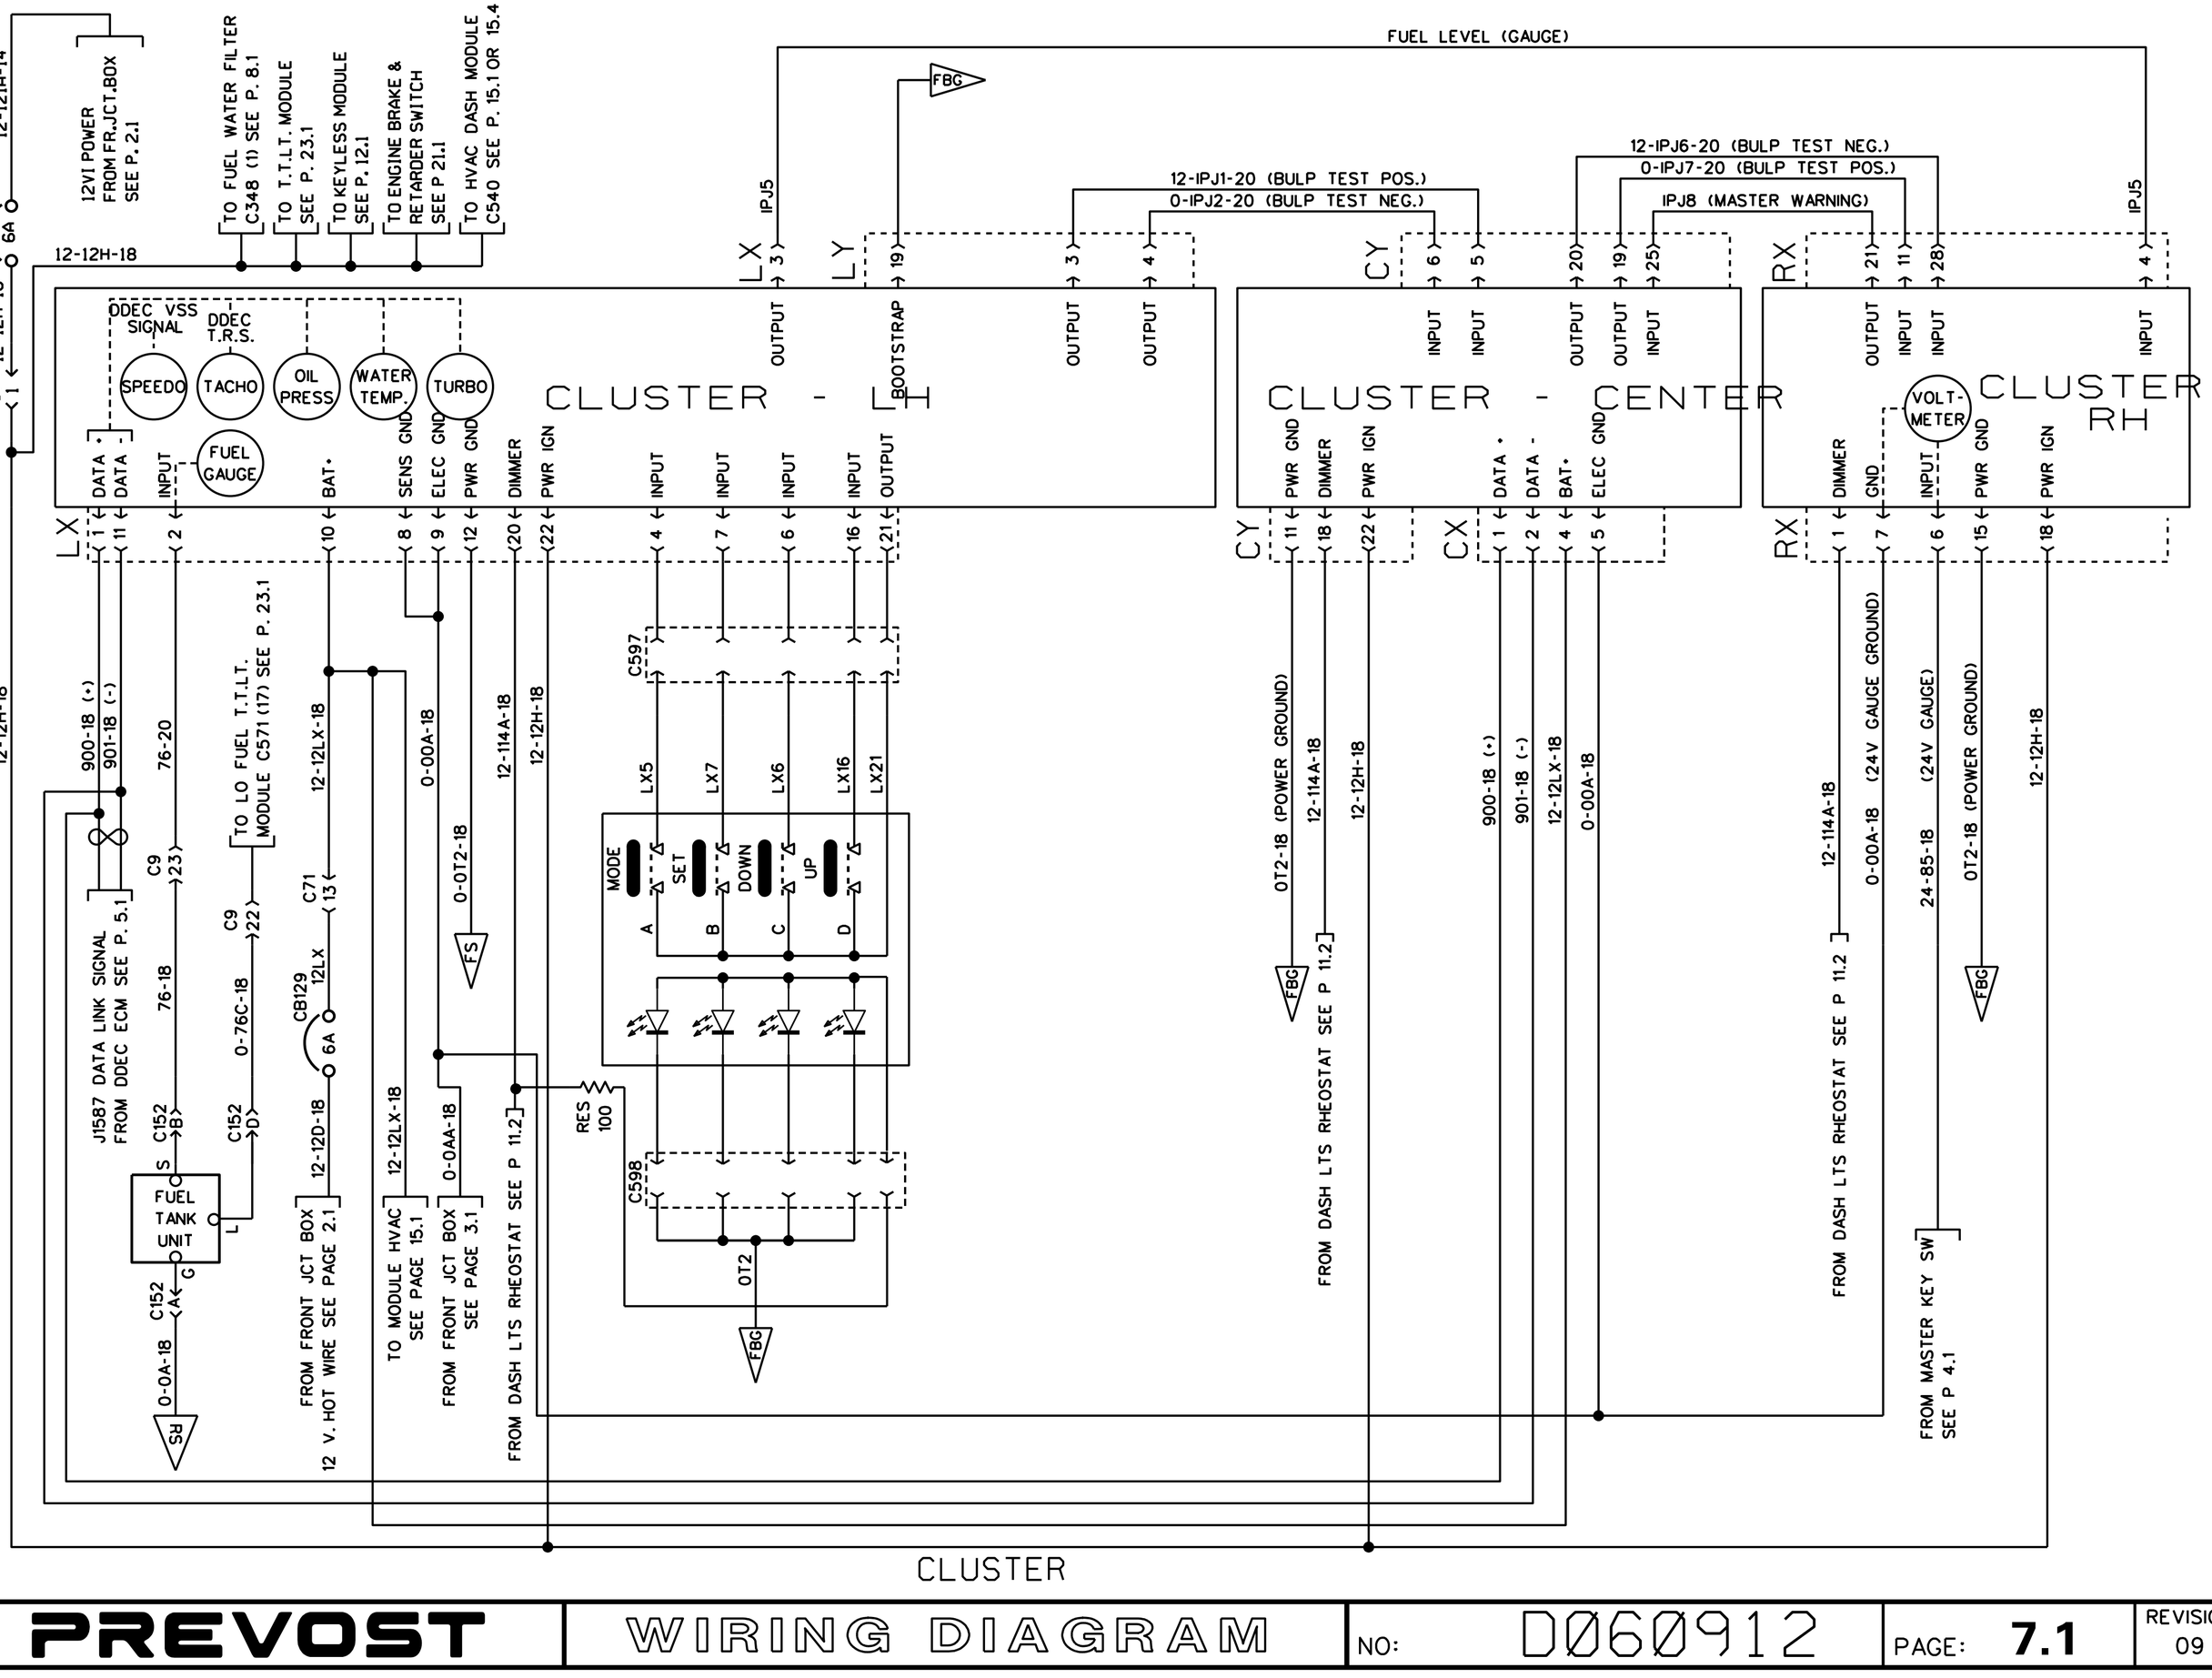
CLUSTER - LH
CLUSTER - CENTER
CLUSTER RH
CLUSTER
FUEL LEVEL (GAUGE)
12-IPJ1-20 (BULP TEST POS.)
0-IPJ2-20 (BULP TEST NEG.)
12-IPJ6-20 (BULP TEST NEG.)
0-IPJ7-20 (BULP TEST POS.)
IPJ8 (MASTER WARNING)
12VI POWER FROM FR.JCT.BOX SEE P. 2.1
TO FUEL WATER FILTER C348 (1) SEE P. 8.1
TO T.T.L.T. MODULE SEE P. 23.1
TO KEYLESS MODULE SEE P. 12.1
TO ENGINE BRAKE & RETARDER SWITCH SEE P 21.1
TO HVAC DASH MODULE C540 SEE P. 15.1 OR 15.4
ODEC VSS SIGNAL
DDEC T.R.S.
SPEEDO
TACHO
OIL PRESS
WATER TEMP.
TURBO
FUEL GAUGE
VOLT-METER
MODE
SET
DOWN
UP
RES 100
FUEL TANK UNIT
J1587 DATA LINK SIGNAL FROM DDEC ECM SEE P. 5.1
TO LO FUEL T.T.L.T. MODULE C571 (17) SEE P. 23.1
FROM FRONT JCT BOX 12 V. HOT WIRE SEE PAGE 2.1
TO MODULE HVAC SEE PAGE 15.1
FROM FRONT JCT BOX SEE PAGE 3.1
FROM DASH LTS RHEOSTAT SEE P 11.2
FROM MASTER KEY SW SEE P 4.1
C597
C598
OT2
FBG
FS
RS

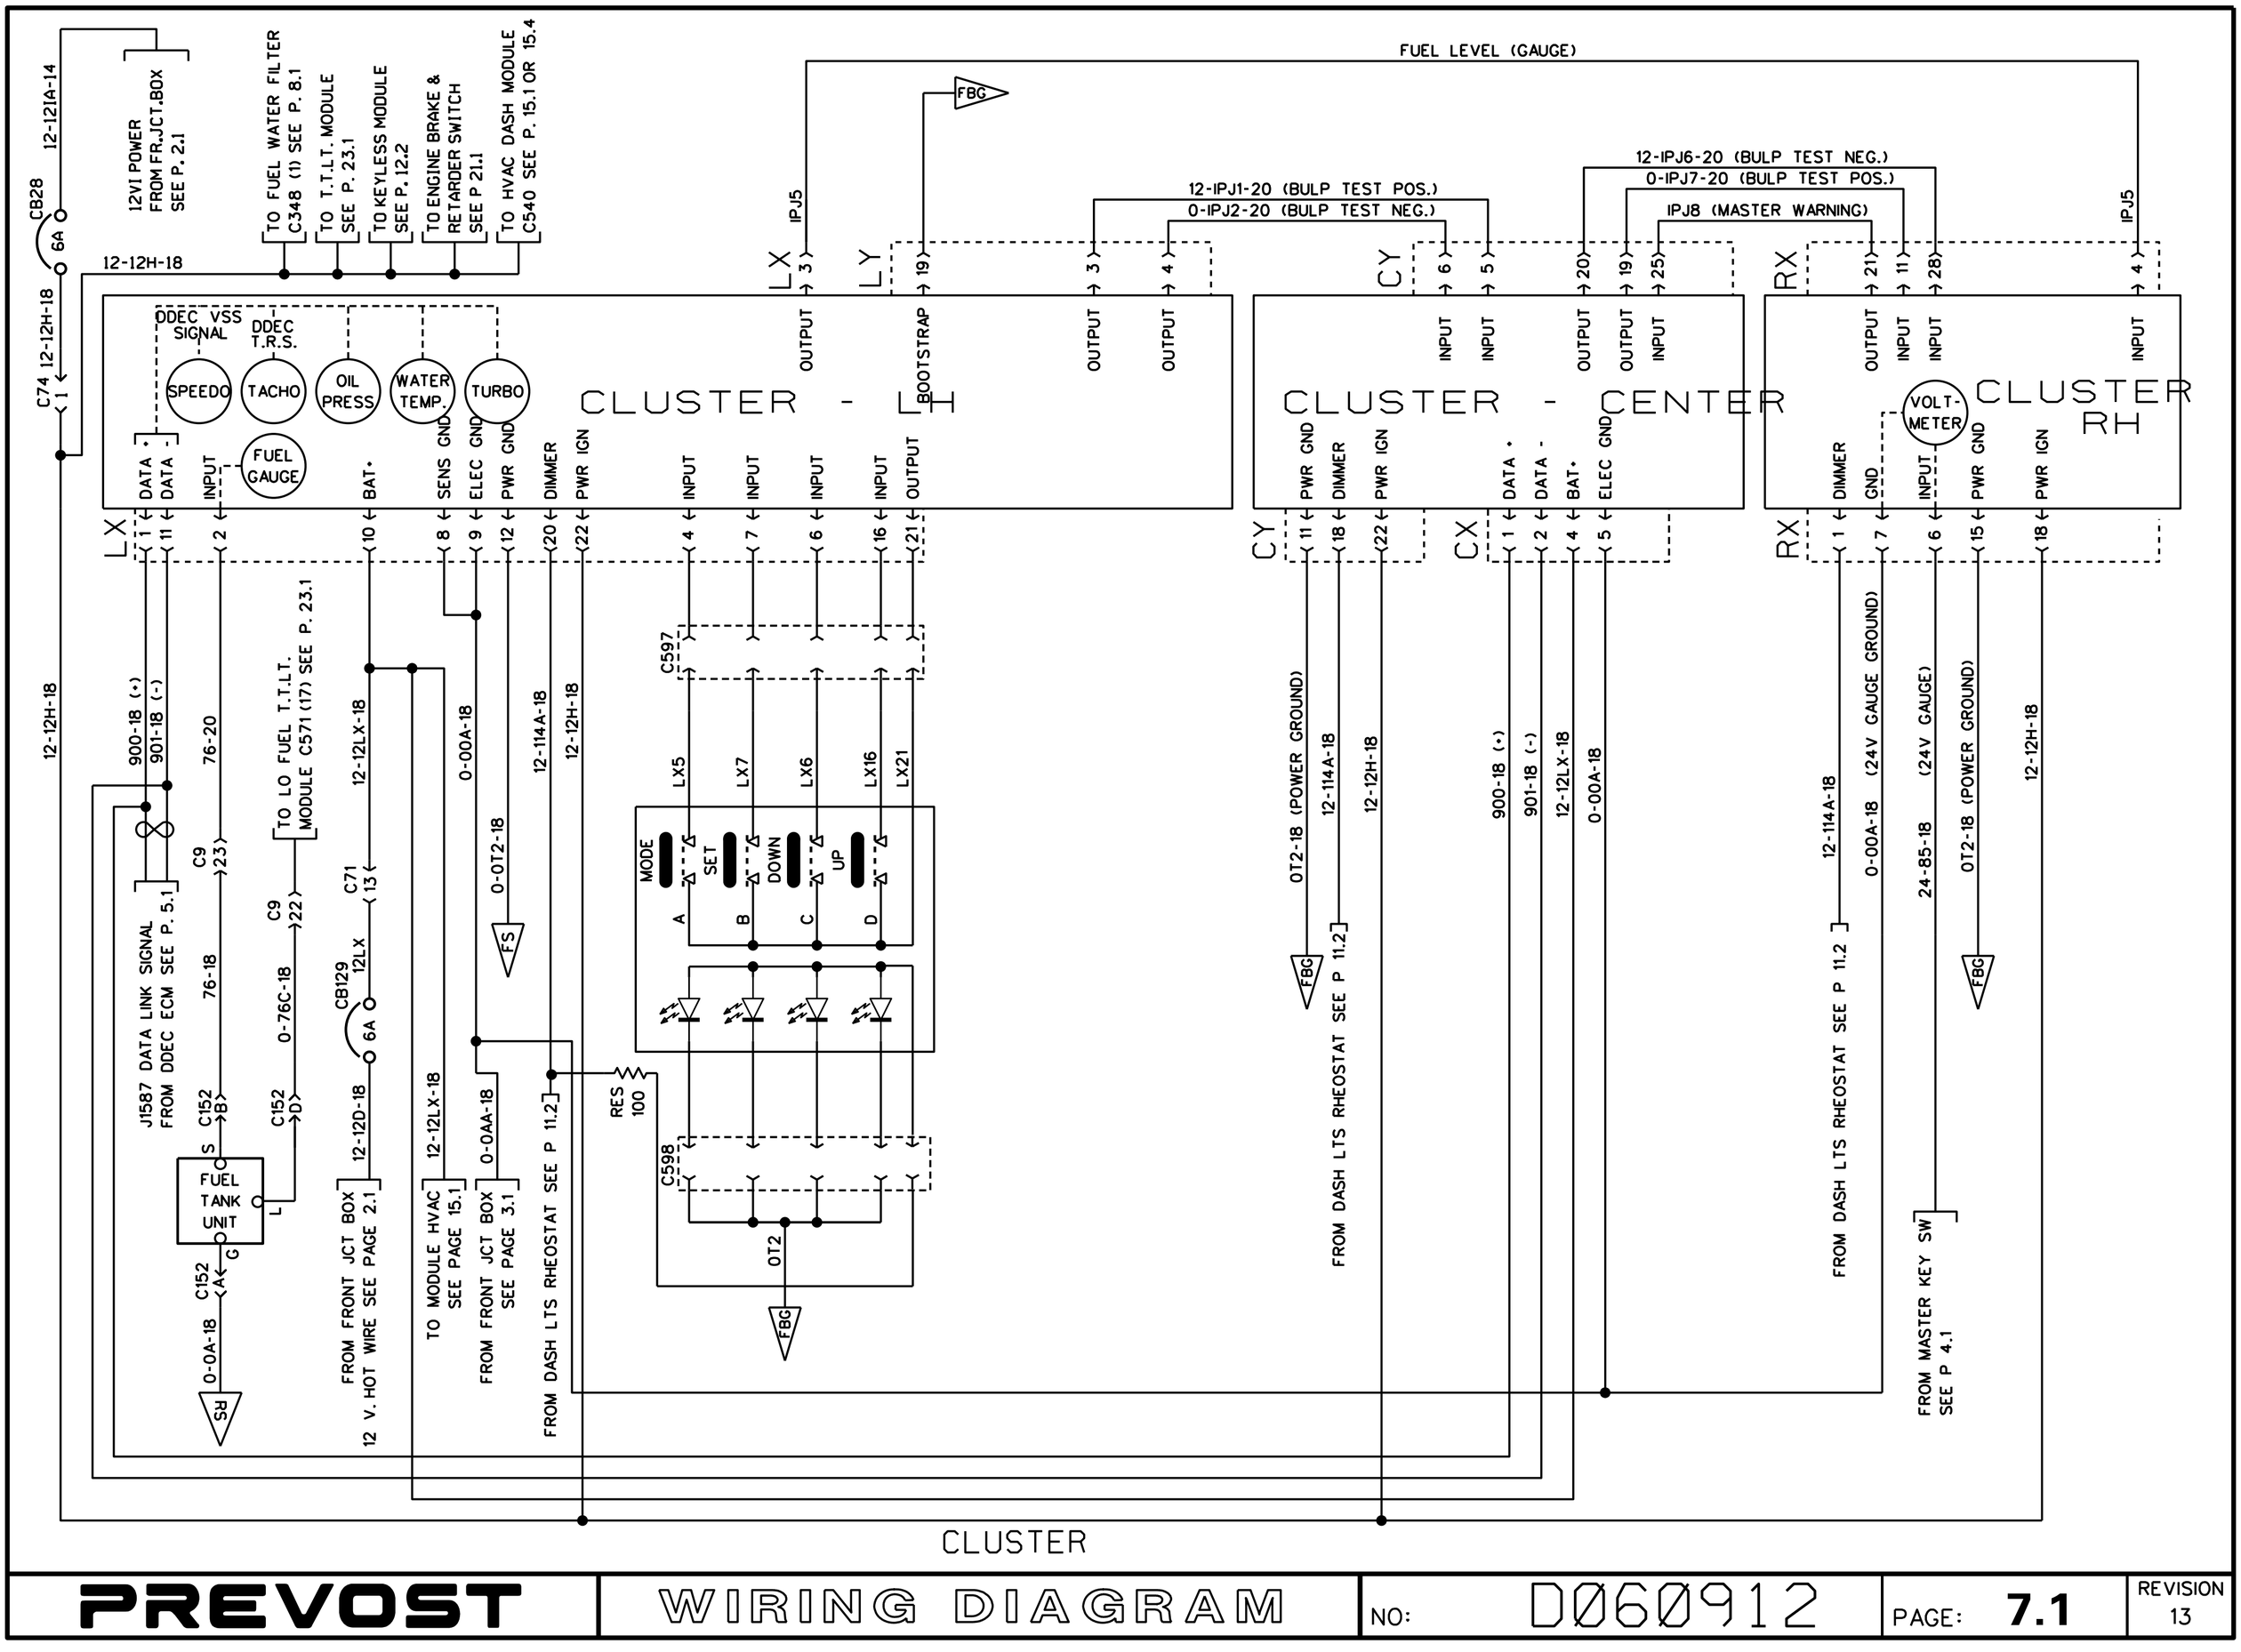

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 7.1	REVISION 13

PREVOST

WIRING DIAGRAM

CLUSTER

NO: D060912

PAGE: 7.1

REVISION 15

12-12H-18

C74 12-12H-18 1

CB28 6A 12-12IA-14

12-12H-18

12VI POWER FROM FR.JCT.BOX SEE P. 2.1

LX

J1587 DATA LINK SIGNAL FROM DDEC ECM SEE P. 5.1

900-18 (•) 1 DATA •

901-18 (-) 11 DATA -

DDEC VSS SIGNAL

SPEEDO

INPUT 2

RS 0-0A-18 C152 A G FUEL TANK UNIT S C152 B 76-18 C9 23 76-20

FUEL GAUGE

TACHO

DDEC T.R.S.

L C152 D 0-76C-18 C9 22 TO LO FUEL T.T.LT. MODULE C571 (17) SEE P. 23.1

OIL PRESS

FROM FRONT JCT BOX 12 V. HOT WIRE SEE PAGE 2.1 12-12D-18 CB129 6A 12LX C71 13 12-12LX-18

BAT• 10

WATER TEMP.

TO MODULE HVAC SEE PAGE 15.1, 15.4 12-12LX-18

SENS GND 8

0-00A-18

FROM FRONT JCT BOX SEE PAGE 3.1 0-0AA-18

ELEC GND 9

TURBO

FS 0-0T2-18

PWR GND 12

FROM DASH LTS RHEOSTAT SEE P 11.2 12-114A-18

DIMMER 20

12-12H-18

PWR IGN 22

TO FUEL WATER FILTER C348 (1) SEE P. 8.1

TO T.T.LT. MODULE SEE P. 23.1

TO KEYLESS MODULE SEE P. 12.2

TO ENGINE BRAKE & RETARDER SWITCH SEE P 21.1

TO HVAC DASH MODULE C540 SEE P. 15.1 OR 15.4

RES 100

C598

MODE A LX5

SET B LX7

DOWN C LX6

UP D LX16

LX21

C597

INPUT 4

INPUT 7

INPUT 6

INPUT 16

OUTPUT 21

CLUSTER - LH

FBG 0T2

LX OUTPUT 3 IPJ5

LY BOOTSTRAP 19 FBG

OUTPUT 3

OUTPUT 4

12-IPJ1-20 (BULP TEST POS.)

0-IPJ2-20 (BULP TEST NEG.)

FUEL LEVEL (GAUGE)

CY

FBG 0T2-18 (POWER GROUND) 11 PWR GND

FROM DASH LTS RHEOSTAT SEE P 11.2 12-114A-18 18 DIMMER

12-12H-18 22 PWR IGN

CLUSTER - CENTER

CY INPUT 6

CX INPUT 5

900-18 (•) 1 DATA •

901-18 (-) 2 DATA -

12-12LX-18 4 BAT•

0-00A-18 5 ELEC GND

OUTPUT 20

OUTPUT 19

INPUT 25

IPJ8 (MASTER WARNING)

12-IPJ6-20 (BULP TEST NEG.)

0-IPJ7-20 (BULP TEST POS.)

RX

FROM DASH LTS RHEOSTAT SEE P 11.2 12-114A-18 1 DIMMER

0-00A-18 (24V GAUGE GROUND) 7 GND

FROM MASTER KEY SW SEE P 4.1 24-85-18 (24V GAUGE) 6 INPUT

VOLT-METER

FBG 0T2-18 (POWER GROUND) 15 PWR GND

12-12H-18 18 PWR IGN

CLUSTER RH

RX OUTPUT 21

INPUT 11

INPUT 28

INPUT 4 IPJ5

PREVOST

WIRING DIAGRAM

CLUSTER

NO: D060912

PAGE: 7.1

REVISION 22

12-12H-18

C74 12-12H-18 CB28 6A 12-12IA-14

12VI POWER FROM FR.JCT.BOX SEE P. 2.1

12-12H-18

LX

J1587 DATA LINK SIGNAL FROM DDEC ECM SEE P. 5.1

900-18 (•)
901-18 (-)

1 DATA •
11 DATA -

DDEC VSS SIGNAL
DDEC T.R.S.

SPEEDO
TACHO
FUEL GAUGE
OIL PRESS
WATER TEMP.
TURBO

RS 0-0A-18 C152 A G FUEL TANK UNIT S C152 B 76-18 C9 23 76-20 2 INPUT

C152 D 0-76C-18 C9 22 TO LO FUEL T.T.LT. MODULE C571 (17) SEE P. 23.1

TO FUEL WATER FILTER C348 (1) SEE P. 8.1

TO T.T.LT. MODULE SEE P. 23.1

TO KEYLESS MODULE SEE P. 12.2

TO ENGINE BRAKE & RETARDER SWITCH SEE P 21.1

TO HVAC DASH MODULE C540 SEE P. 15.1 OR 15.4

FROM FRONT JCT BOX 12 V. HOT WIRE SEE PAGE 2.1 12-12D-18 CB129 6A 12LX C71 13 12-12LX-18 10 BAT•

TO MODULE HVAC SEE PAGE 15.1, 15.4 12-12LX-18

8 SENS GND

0-00A-18

FROM FRONT JCT BOX SEE PAGE 3.1 0-0AA-18

9 ELEC GND

FS 0-0T2-18 12 PWR GND

FROM DASH LTS RHEOSTAT SEE P 11.2 12-114A-18 20 DIMMER

12-12H-18 22 PWR IGN

RES 100

C598 C597

ESC. ENTER DOWN UP

A LX5 4 INPUT
B LX7 7 INPUT
C LX6 6 INPUT
D LX16 16 INPUT
LX21 21 OUTPUT

FBG OT2

CLUSTER - LH

LX OUTPUT 3 IPJ5

LY BOOTSTRAP 19 FBG

OUTPUT 3

OUTPUT 4

12-IPJ1-20 (BULP TEST POS.)
0-IPJ2-20 (BULP TEST NEG.)

CY

FBG 0T2-18 (POWER GROUND) 11 PWR GND

FROM DASH LTS RHEOSTAT SEE P 11.2 12-114A-18 18 DIMMER

12-12H-18 22 PWR IGN

CLUSTER - CENTER

CY INPUT 6
INPUT 5

CX

900-18 (•) 1 DATA •
901-18 (-) 2 DATA -
12-12LX-18 4 BAT•
0-00A-18 5 ELEC GND

OUTPUT 20
OUTPUT 19
INPUT 25

IPJ8 (MASTER WARNING)

12-IPJ6-20 (BULP TEST NEG.)
0-IPJ7-20 (BULP TEST POS.)

RX

FROM DASH LTS RHEOSTAT SEE P 11.2 12-114A-18 1 DIMMER

0-00A-18 (24V GAUGE GROUND) 7 GND

FROM MASTER KEY SW SEE P 4.1 24-85-18 (24V GAUGE) 6 INPUT

VOLT-METER

FBG 0T2-18 (POWER GROUND) 15 PWR GND

12-12H-18 18 PWR IGN

CLUSTER RH

RX OUTPUT 21
INPUT 11
INPUT 28

INPUT 4 IPJ5

FUEL LEVEL (GAUGE)

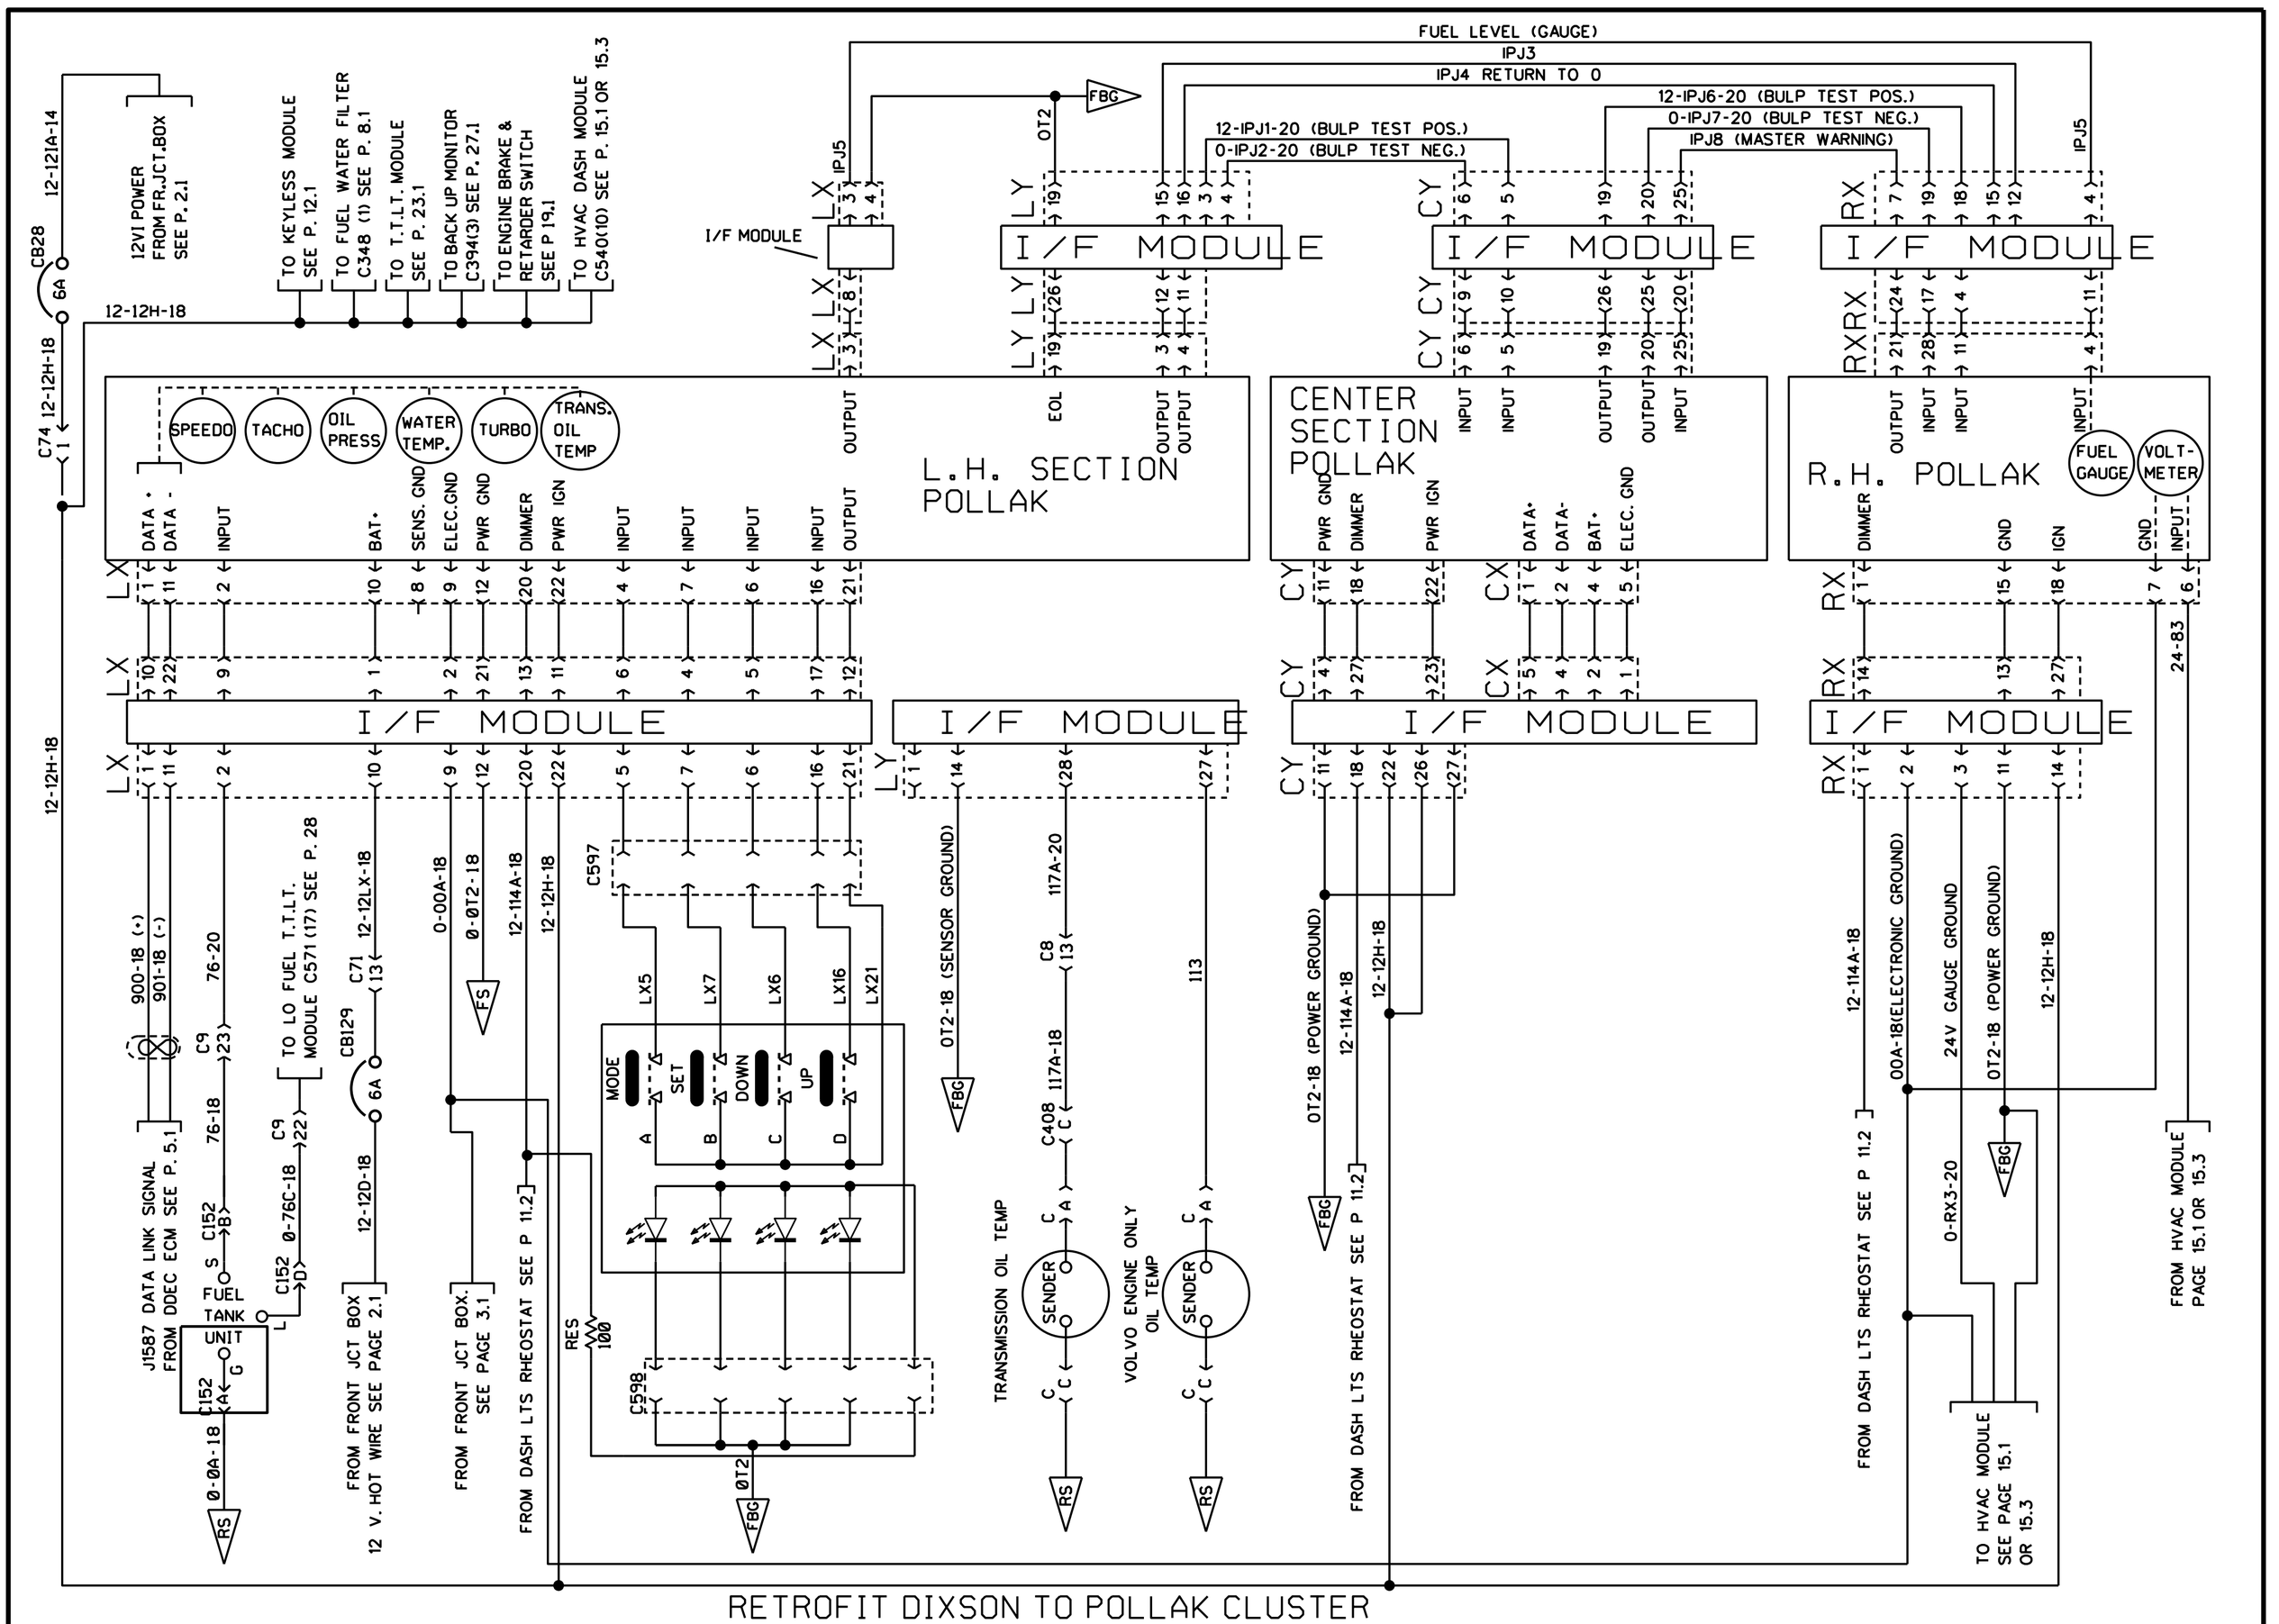

RETROFIT DIXSON TO POLLAK CLUSTER

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 7.1 SP1	REVISION 9

FUEL LEVEL (GAUGE)
IPJ3
IPJ4 RETURN TO 0
12-IPJ6-20 (BULP TEST POS.)
0-IPJ7-20 (BULP TEST NEG.)
IPJ8 (MASTER WARNING)
12-IPJ1-20 (BULP TEST POS.)
0-IPJ2-20 (BULP TEST NEG.)
FBG
0T2
IPJ5
I/F MODULE
L.H. SECTION POLLAK
CENTER SECTION POLLAK
R.H. POLLAK
SPEEDO
TACHO
OIL PRESS
WATER TEMP.
TURBO
TRANS. OIL TEMP
FUEL GAUGE
VOLT-METER
12-12IA-14
12VI POWER FROM FR.JCT.BOX SEE P. 2.1
CB28
6A
12-12H-18
C74
TO KEYLESS MODULE SEE P. 12.2
TO FUEL WATER FILTER C348 (1) SEE P. 8.1
TO T.T.L.T. MODULE SEE P. 23.1
TO BACK UP MONITOR C394(3) SEE P. 27.1
TO ENGINE BRAKE & RETARDER SWITCH SEE P 19.1
TO HVAC DASH MODULE C540(10) SEE P. 15.1 OR 15.3
J1587 DATA LINK SIGNAL FROM DDEC ECM SEE P. 5.1
900-18 (+)
901-18 (-)
FUEL TANK UNIT
0-0A-18
0-0T2-18
FROM FRONT JCT BOX 12 V. HOT WIRE SEE PAGE 2.1
TO LO FUEL T.T.L.T. MODULE C571 (17) SEE P. 28
FROM FRONT JCT BOX. SEE PAGE 3.1
FROM DASH LTS RHEOSTAT SEE P 11.2
RES 100
C597
C598
MODE
SET
DOWN
UP
TRANSMISSION OIL TEMP
VOLVO ENGINE ONLY OIL TEMP
SENDER
0T2-18 (SENSOR GROUND)
0T2-18 (POWER GROUND)
00A-18(ELECTRONIC GROUND)
24V GAUGE GROUND
0T2-18 (POWER GROUND)
0-RX3-20
TO HVAC MODULE SEE PAGE 15.1 OR 15.3
FROM HVAC MODULE PAGE 15.1 OR 15.3
24-83

RETROFIT DIXSON TO POLLAK CLUSTER

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 7.1 SP1	REVISION 13

RETROFIT DIXSON TO POLLAK CLUSTER

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 7.1 SP1	REVISION 15

PREVOST

WIRING DIAGRAM

ALARM AND SIGNAL

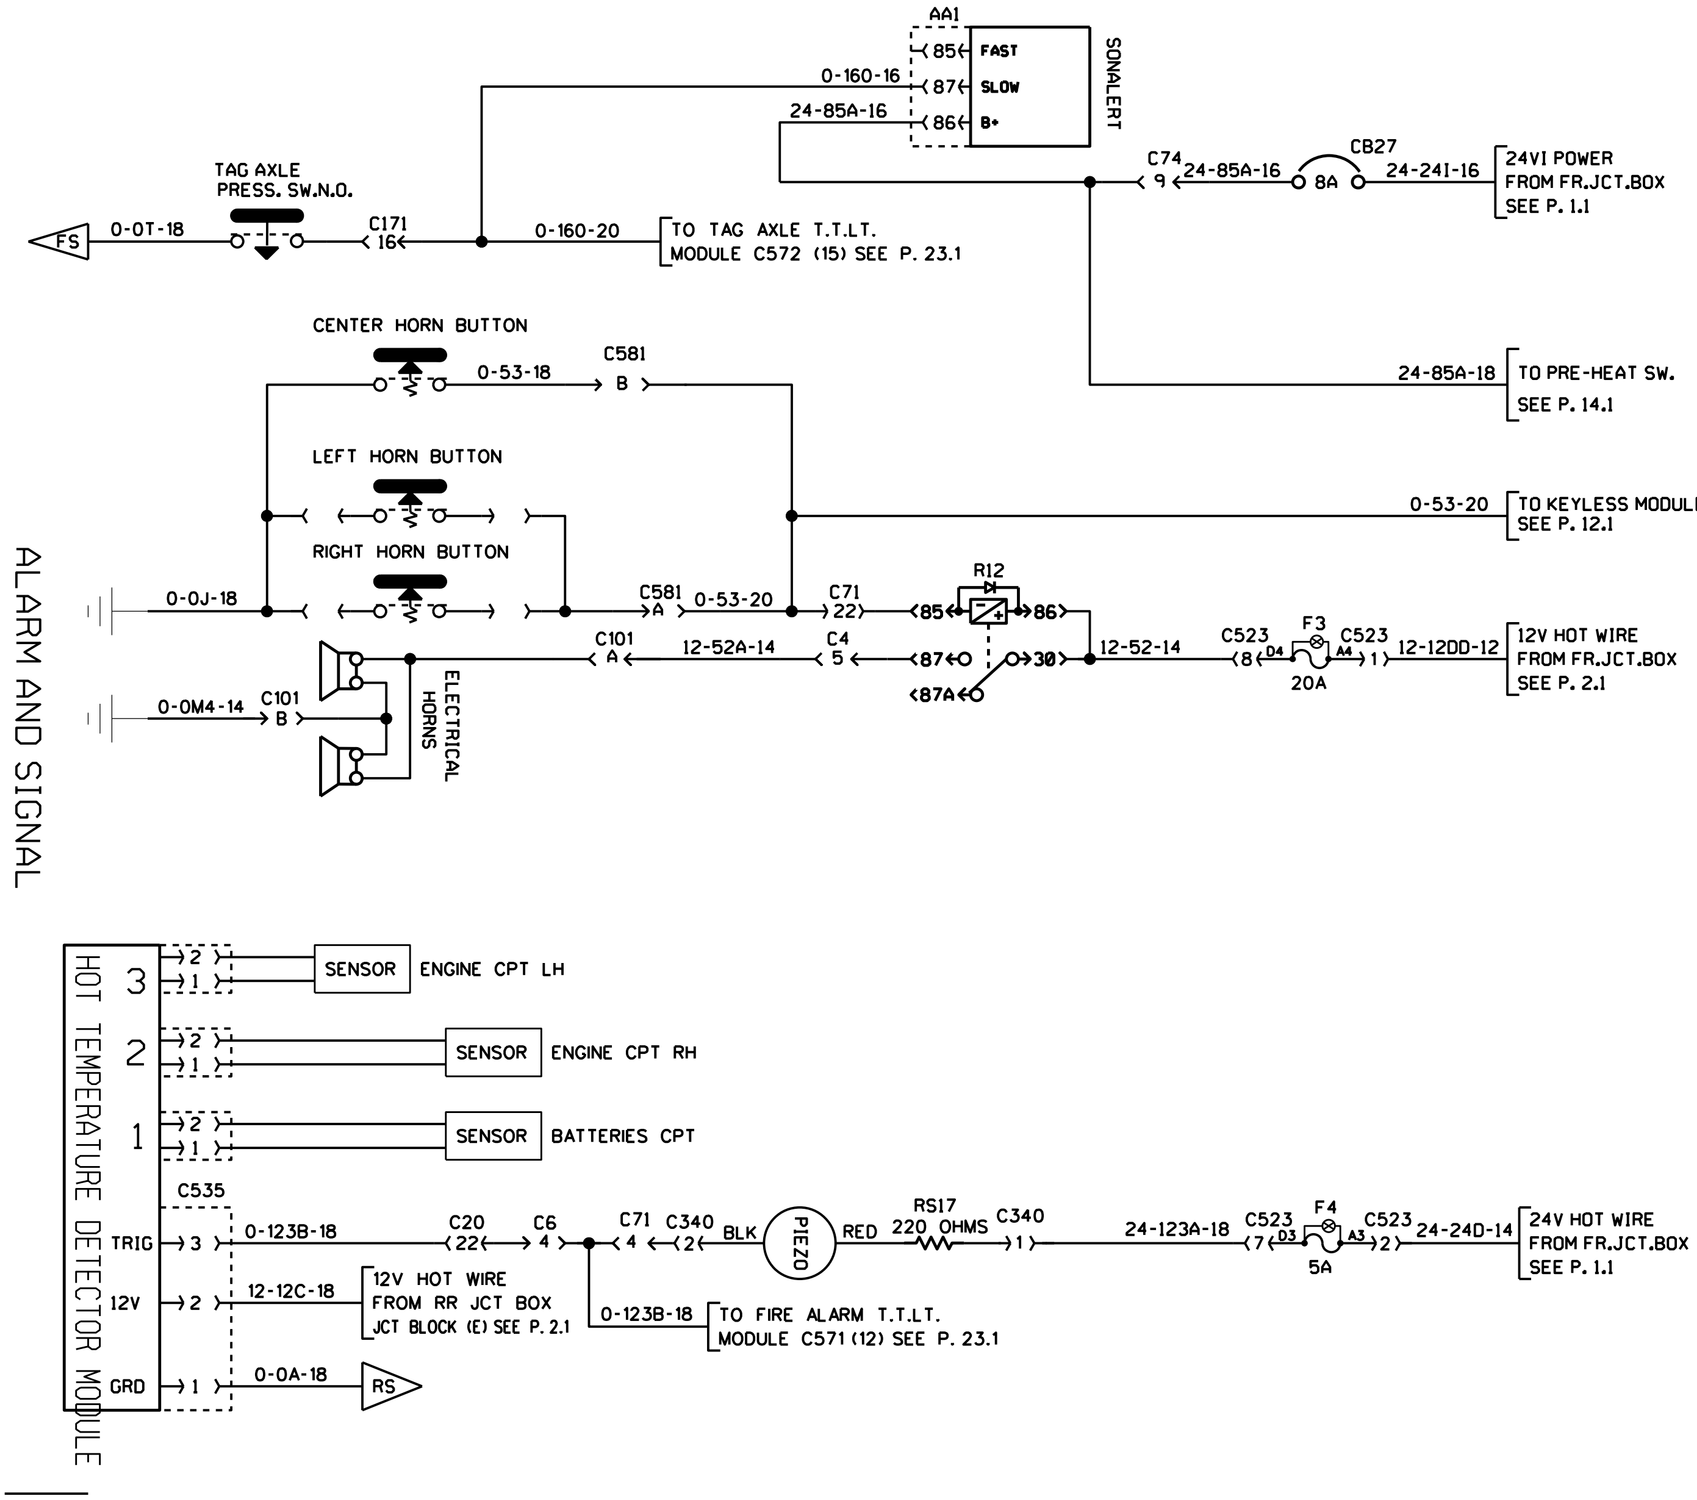

NO: D060912

PAGE: 7.2

REVISION 09

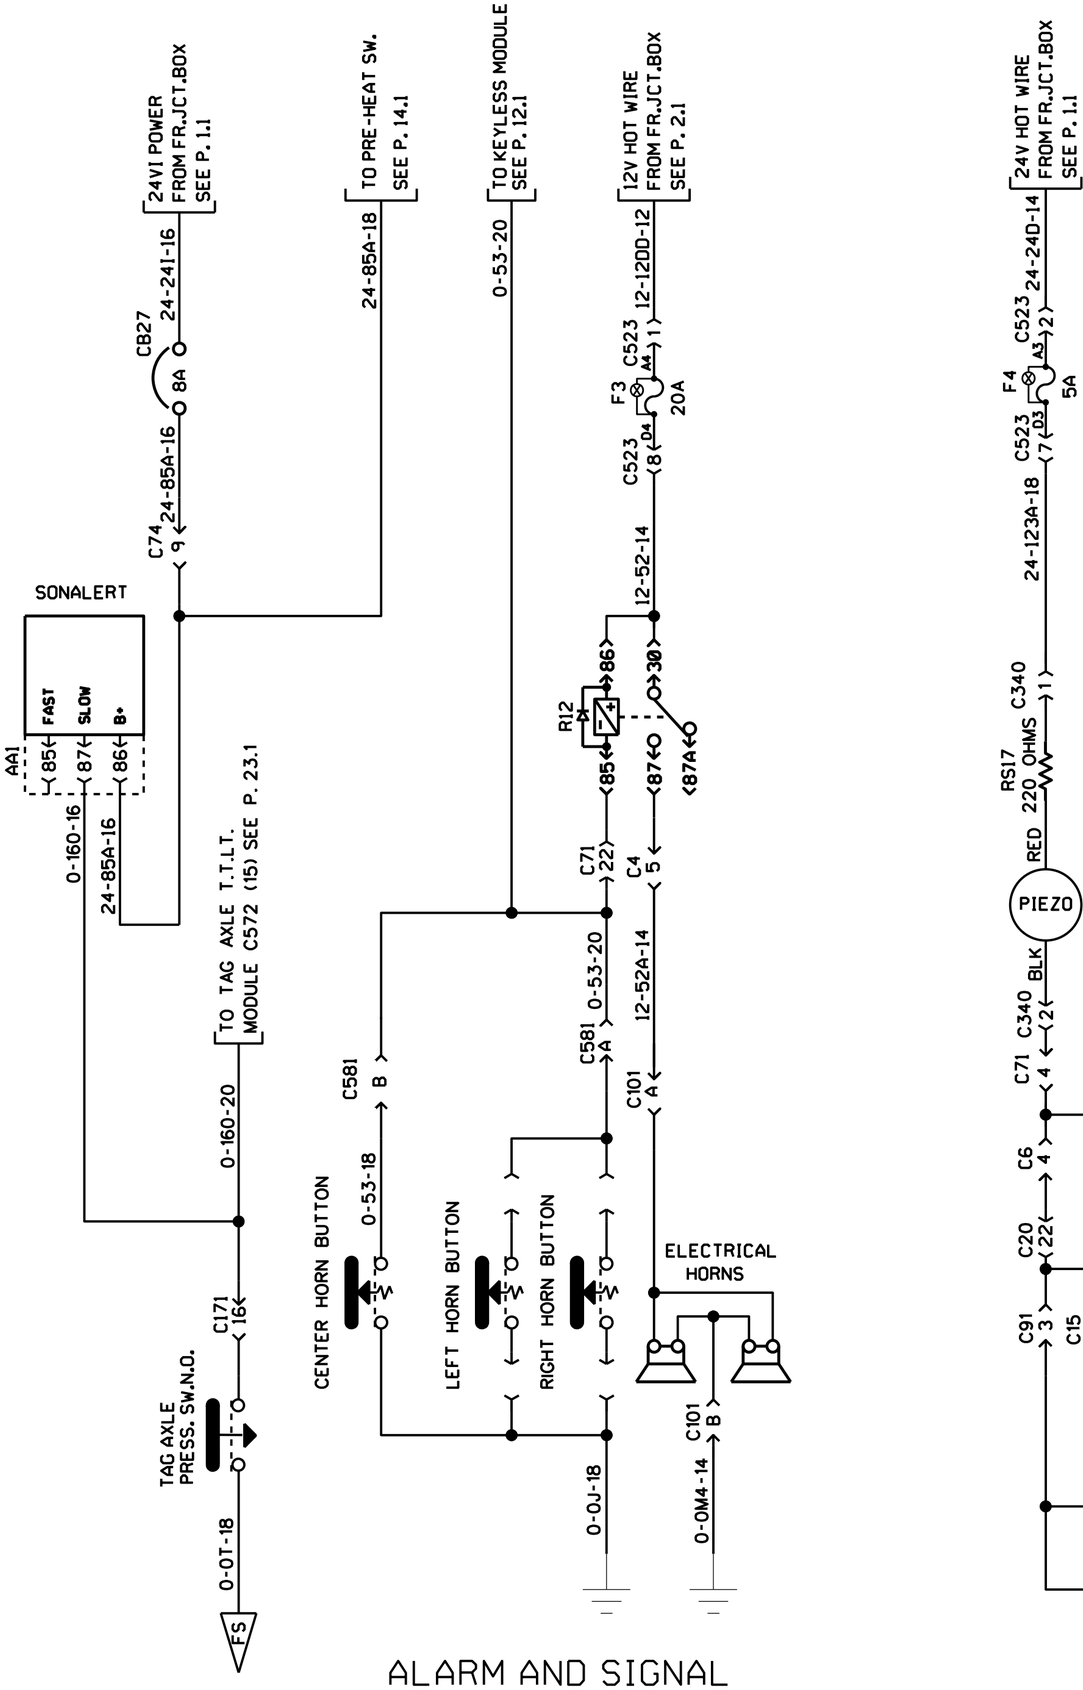
SONALERT
AA1
85
87
86
FAST
SLOW
B+
0-160-16
24-85A-16
0-160-20
TO TAG AXLE T.T.LT.
MODULE C572 (15) SEE P. 23.1
C74
24-85A-16
9
CB27
8A
24-24I-16
24VI POWER
FROM FR.JCT.BOX
SEE P. 1.1
24-85A-18
TO PRE-HEAT SW.
SEE P. 14.1
0-53-20
TO KEYLESS MODULE
SEE P. 12.1
R12
85
87
86
30
87A
12-52-14
C523
8
D4
F3
A4
C523
1
12-12DD-12
12V HOT WIRE
FROM FR.JCT.BOX
SEE P. 2.1
20A
C71
22
C4
5
C581
B
0-53-18
C581
A
0-53-20
12-52A-14
C101
A
CENTER HORN BUTTON
LEFT HORN BUTTON
RIGHT HORN BUTTON
ELECTRICAL
HORNS
C101
B
0-OM4-14
0-OJ-18
C171
16
TAG AXLE
PRESS. SW.N.O.
0-OT-18
FS
ALARM AND SIGNAL
RS17
220 OHMS
C340
1
24-123A-18
C523
7
D3
F4
A3
C523
2
24-24D-14
24V HOT WIRE
FROM FR.JCT.BOX
SEE P. 1.1
5A
RED
PIEZO
BLK
C340
2
0-123B-18
TO FIRE ALARM T.T.LT.
MODULE C571 (12) SEE P. 23.1
C71
4
C6
4
C20
22
C91
3
C15
24
BATT. CMPT.
0-123B-16
C221
1
SENSOR
C221
2
0A-16
FS
ENGINE CMPT.
0-123B-16
C222
1
SENSOR
C222
2
0P-16
0-123B-16
C223
1
SENSOR
C223
2
0P-16
FS
FIRE DETECTOR

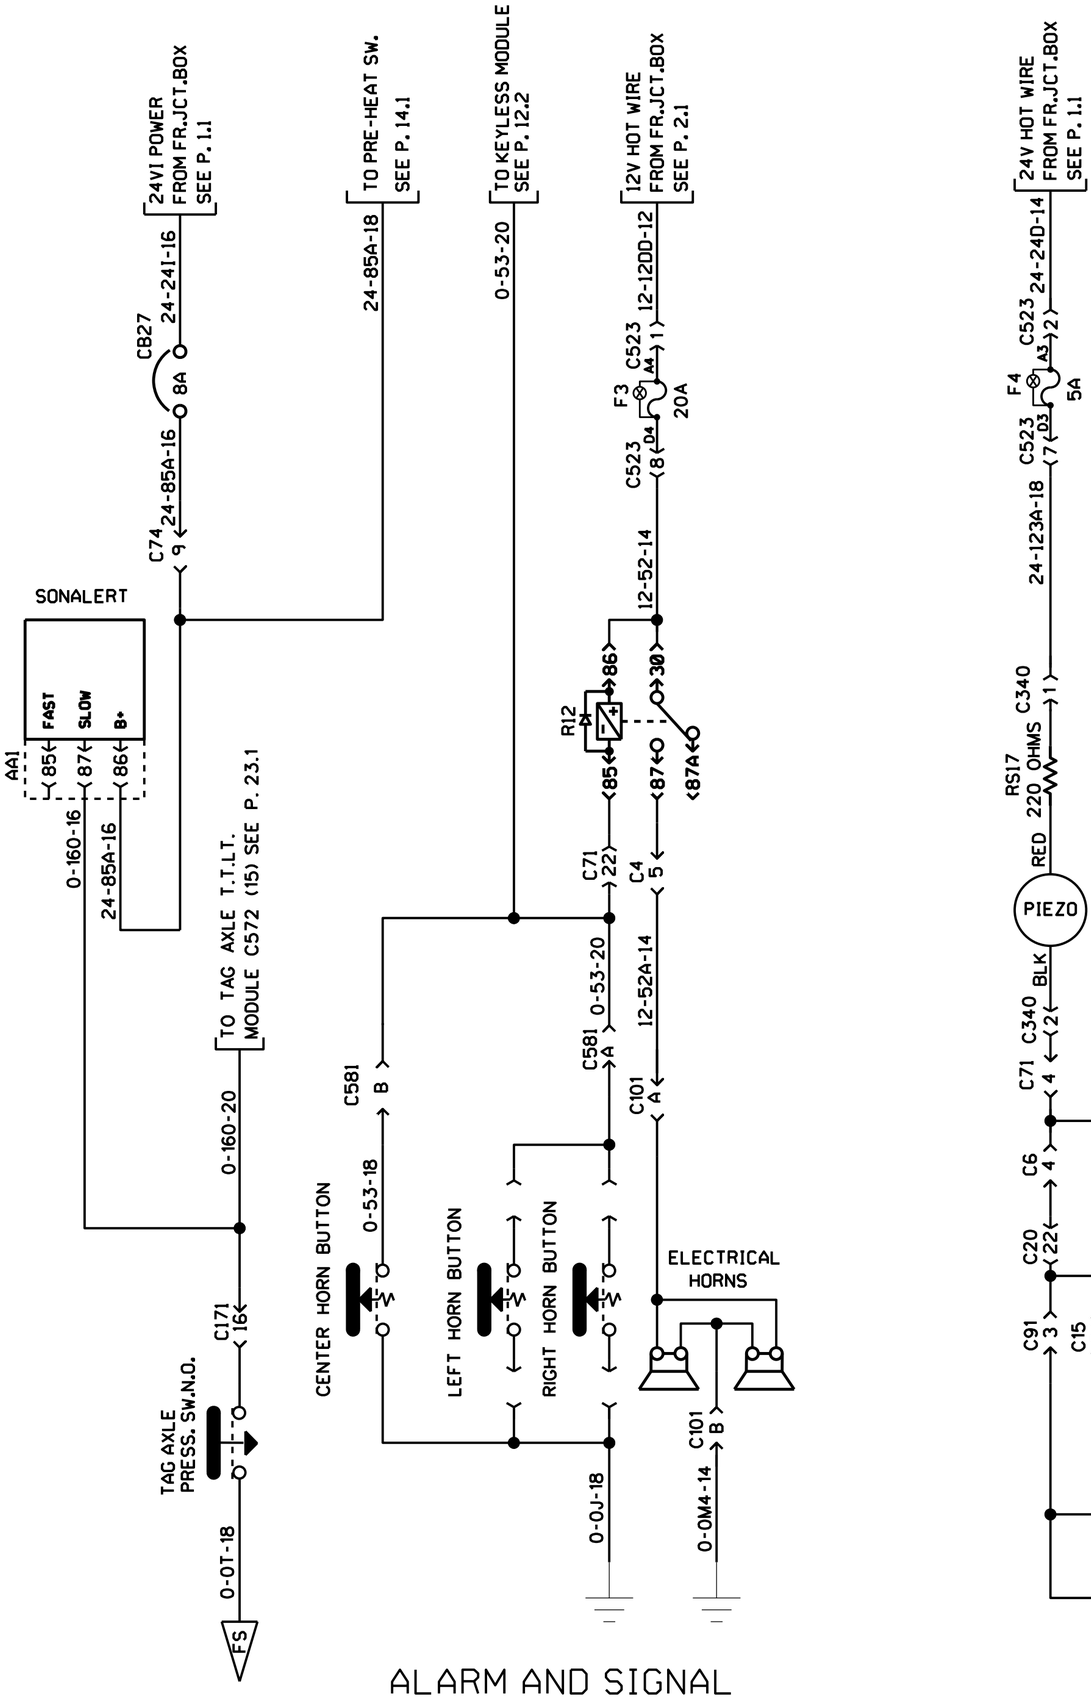
SONALERT
AA1
85
87
86
FAST
SLOW
B+
0-160-16
24-85A-16
0-160-16
TO TAG AXLE T.T.L.T.
MODULE C572 (15) SEE P. 23.1
0-160-20
C171
16
TAG AXLE
PRESS. SW.N.O.
0-0T-18
FS
C74
9
24-85A-16
CB27
8A
24-241-16
24VI POWER
FROM FR.JCT.BOX
SEE P. 1.1
24-85A-18
TO PRE-HEAT SW.
SEE P. 14.1
0-53-20
TO KEYLESS MODULE
SEE P. 12.2
C523
D4
8
12-52-14
F3
20A
C523
A4
1
12-12DD-12
12V HOT WIRE
FROM FR.JCT.BOX
SEE P. 2.1
R12
86
30
87A
C71
22
C4
5
C581
A
0-53-20
12-52A-14
C101
A
C581
B
0-53-18
CENTER HORN BUTTON
LEFT HORN BUTTON
RIGHT HORN BUTTON
ELECTRICAL
HORNS
0-0J-18
C101
B
0-0M4-14
ALARM AND SIGNAL
RS17
220 OHMS
C340
1
RED
PIEZO
BLK
2
C71 C340
4
0-123B-18
TO FIRE ALARM T.T.L.T.
MODULE C571 (12) SEE P. 23.1
C523
D3
7
24-123A-18
F4
5A
C523
A3
2
24-24D-14
24V HOT WIRE
FROM FR.JCT.BOX
SEE P. 1.1
C6
4
C20
22
C91
3
C15
24
BATT. CMPT.
0-123B-16
C221
1
SENSOR
C221
2
0A-16
FS
ENGINE CMPT.
0-123B-16
C222
1
SENSOR
C222
2
OP-16
0-123B-16
C223
1
SENSOR
C223
2
OP-16
FS
FIRE DETECTOR

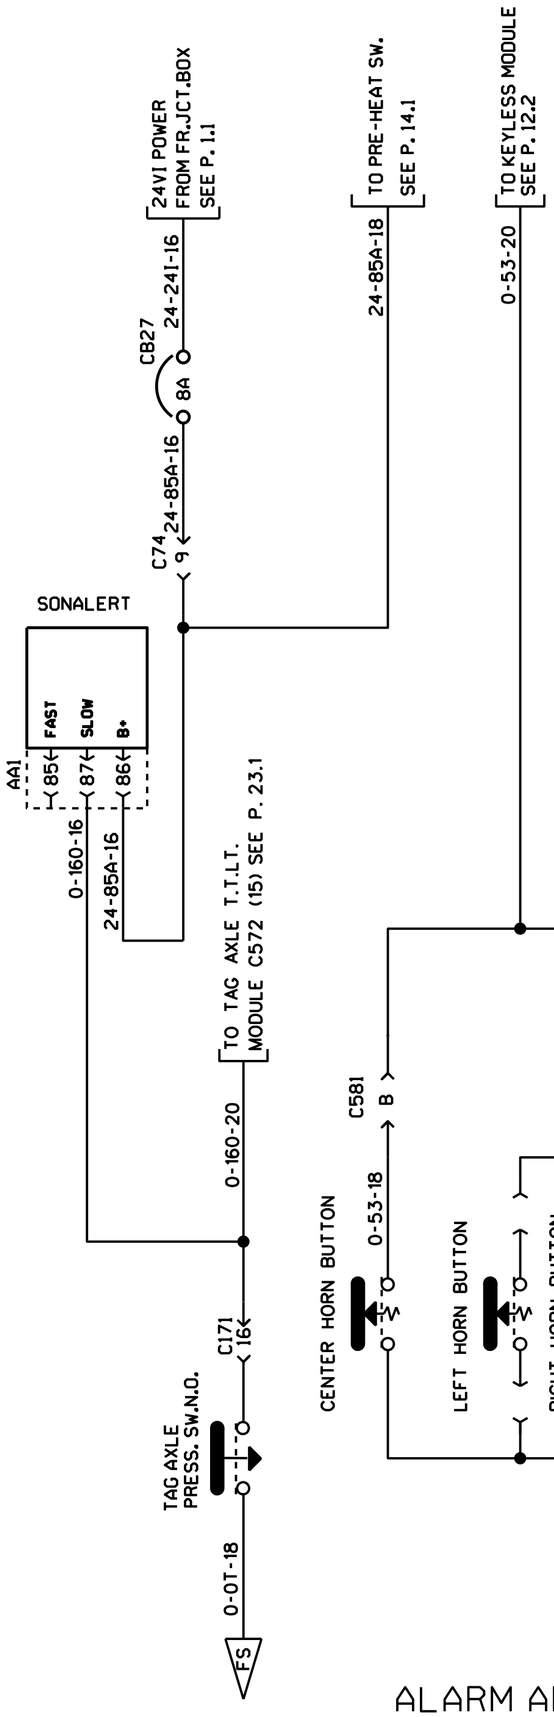

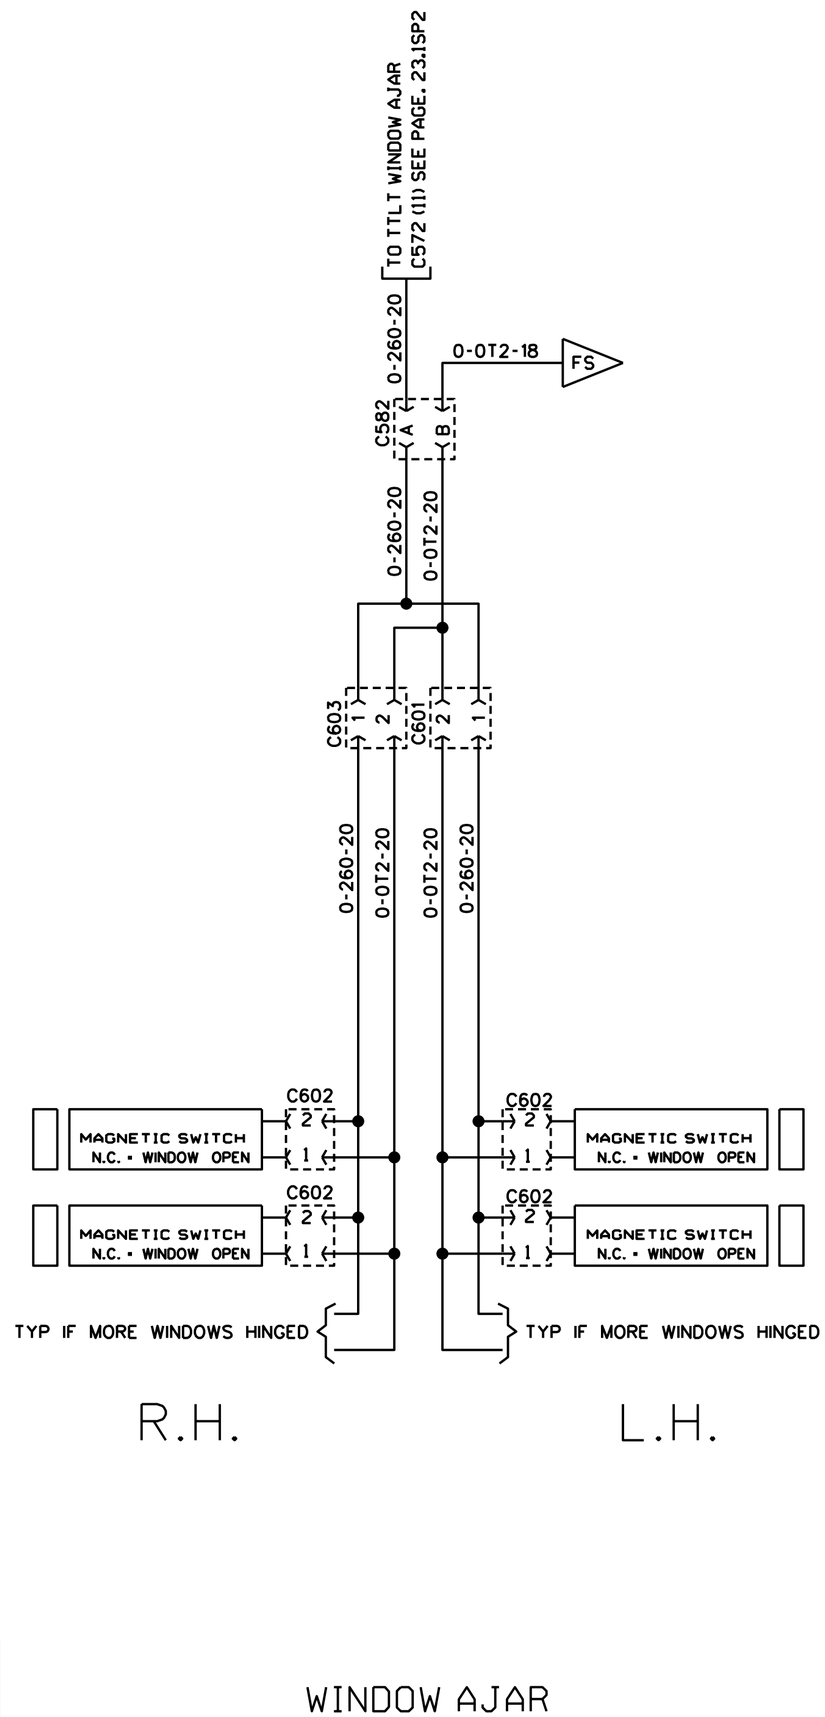

WINDOW AJAR SPECIAL

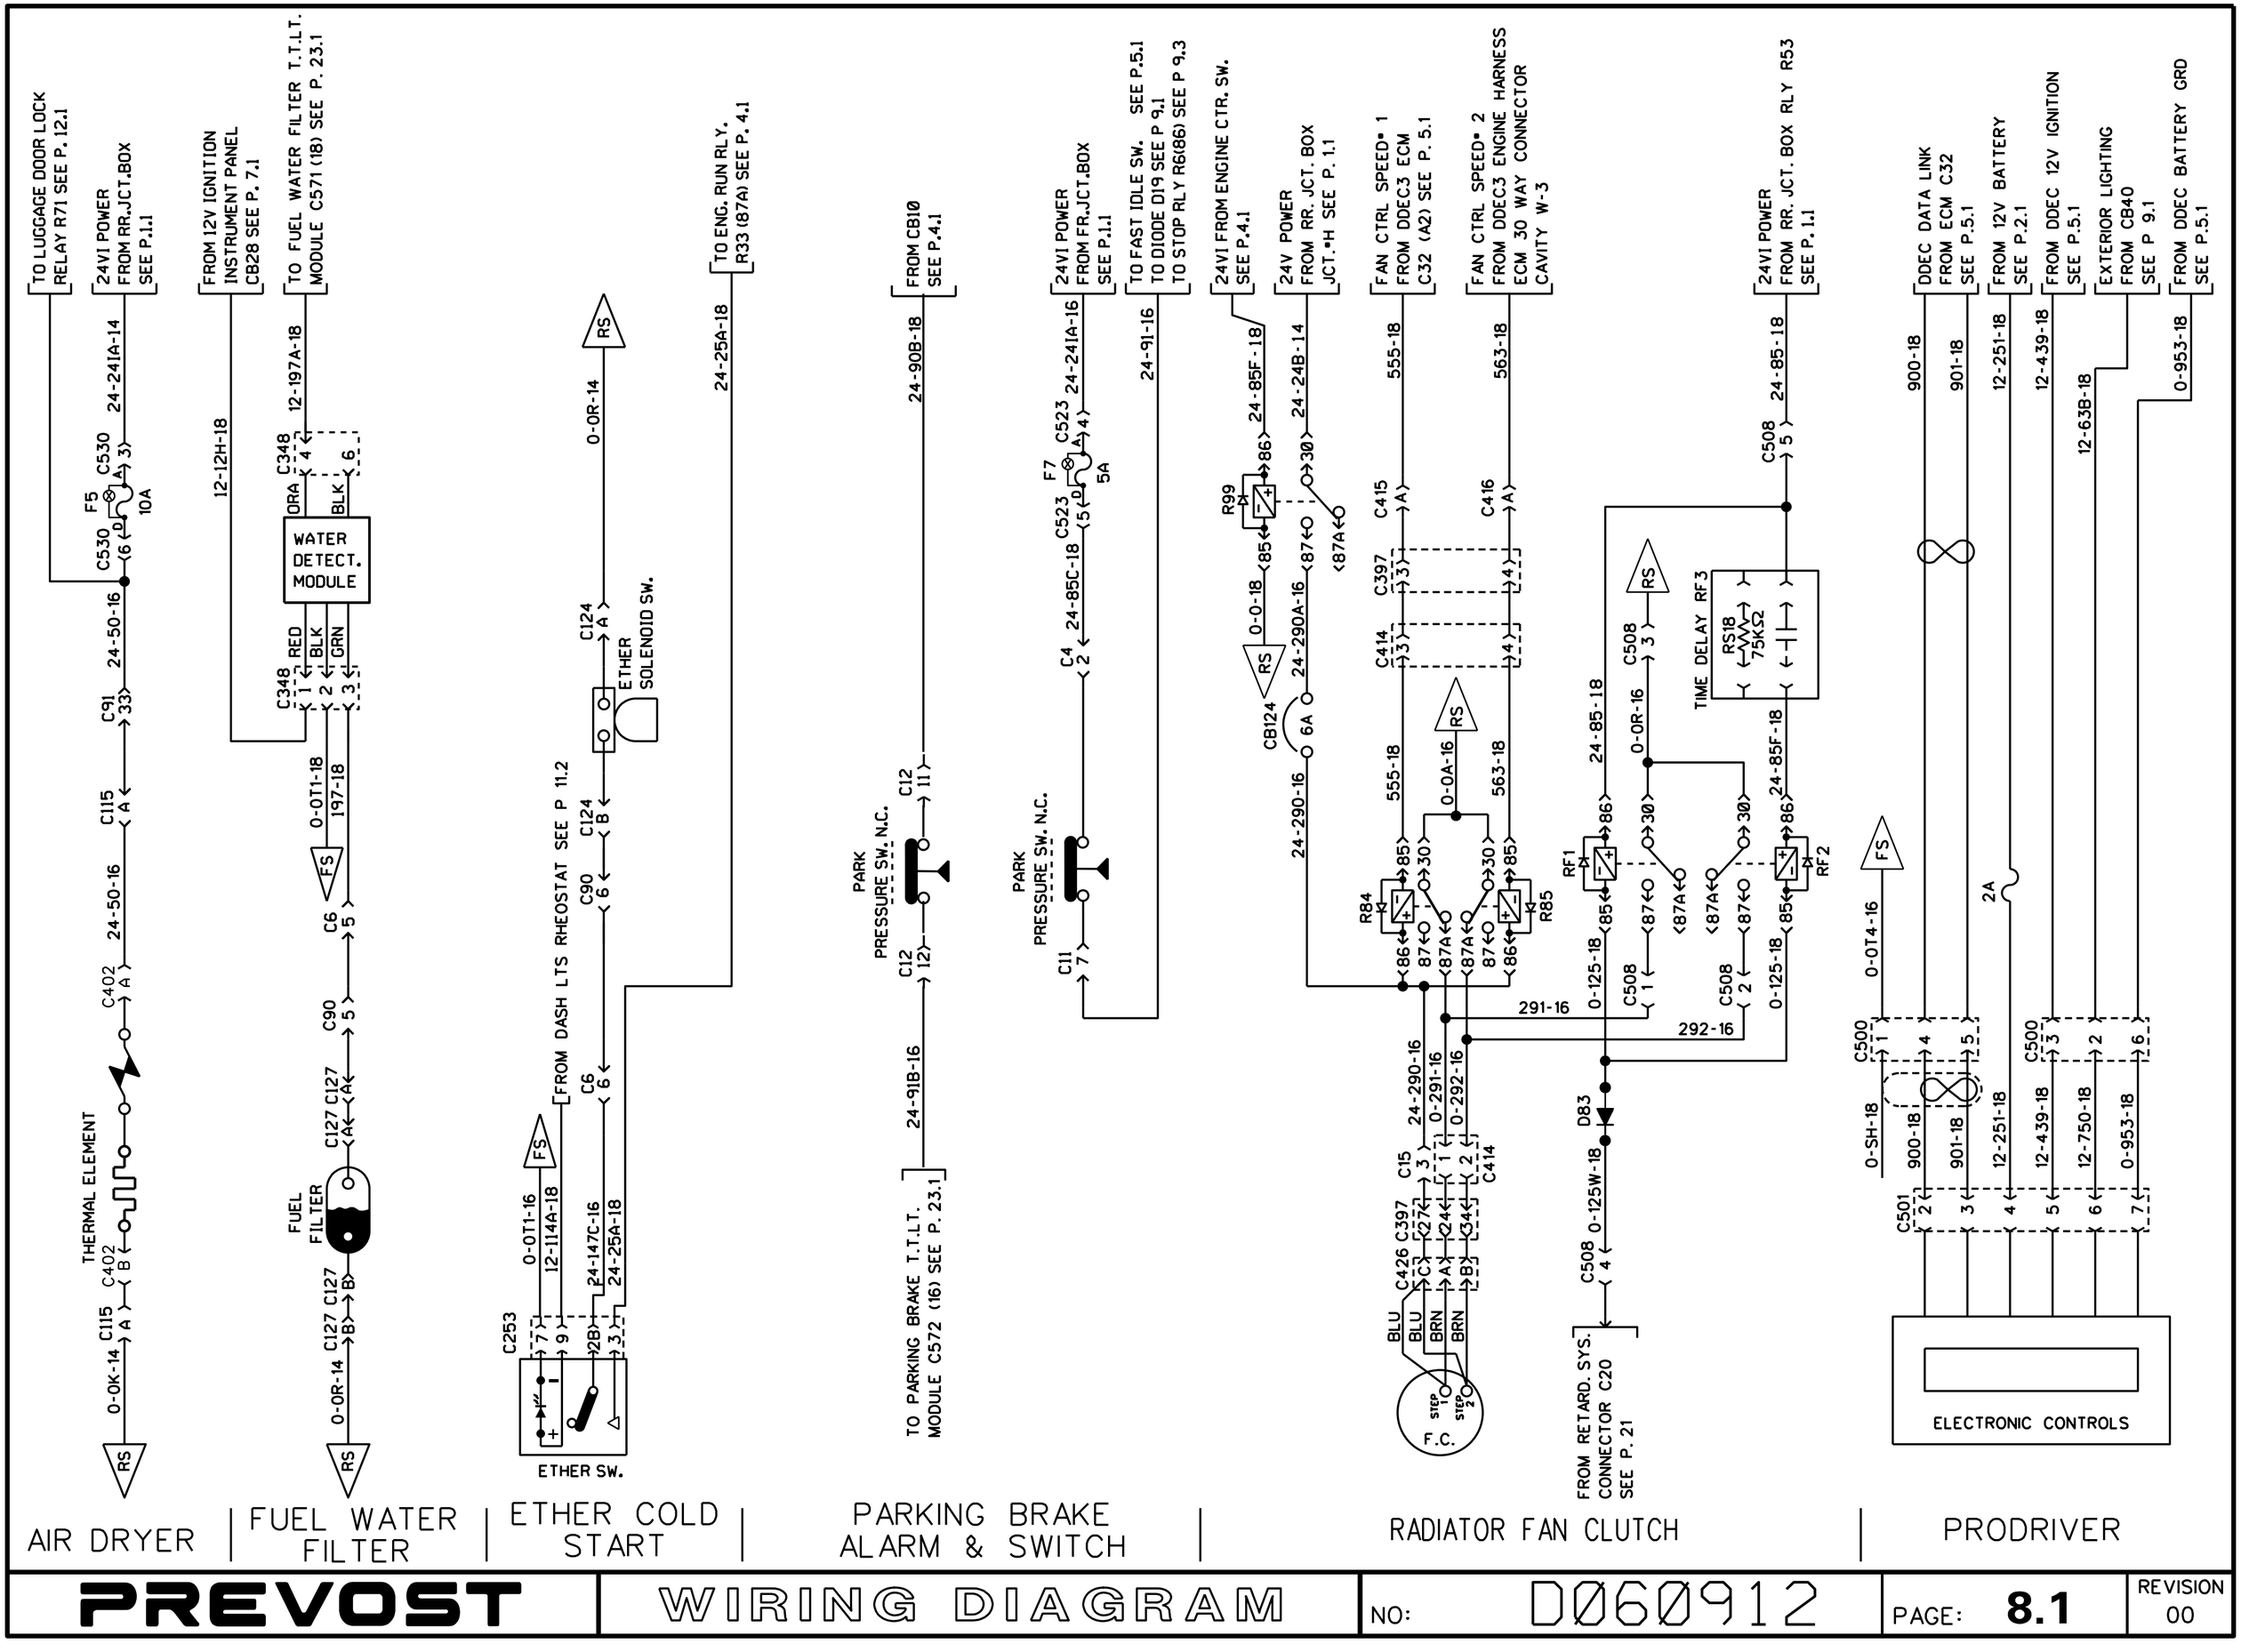
AIR DRYER
TO LUGGAGE DOOR LOCK RELAY R71 SEE P. 12.1
24VI POWER FROM RR.JCT.BOX SEE P.1.1
F5
10A
C530
24-241A-14
24-50-16
C91
C115
C402
THERMAL ELEMENT
0-0K-14
RS
FUEL WATER FILTER
FROM 12V IGNITION INSTRUMENT PANEL CB28 SEE P. 7.1
12-12H-18
TO FUEL WATER FILTER T.T.L.T. MODULE C571 (18) SEE P. 23.1
12-197A-18
C348
WATER DETECT. MODULE
RED
BLK
GRN
ORA
BLK
0-0T1-18
197-18
C90
C6
C127
FUEL FILTER
0-0R-14
FS
ETHER COLD START
0-0R-14
C124
ETHER SOLENOID SW.
TO ENG. RUN RLY. R33 (87A) SEE P. 4.1
24-25A-18
FROM DASH LTS RHEOSTAT SEE P 11.2
0-0T1-16
12-114A-18
24-147C-16
24-25A-18
C253
ETHER SW.
PARKING BRAKE ALARM & SWITCH
FROM CB10 SEE P.4.1
24-90B-18
PARK PRESSURE SW. N.C.
C12
24-91B-16
TO PARKING BRAKE T.T.L.T. MODULE C572 (16) SEE P. 23.1
PARK PRESSURE SW. N.C.
C11
RADIATOR FAN CLUTCH
24VI POWER FROM FR.JCT.BOX SEE P.1.1
F7
5A
C523
24-241A-16
TO FAST IDLE SW. SEE P.5.1
TO DIODE D19 SEE P 9.1
TO STOP RLY R6(86) SEE P 9.3
24-91-16
C4
24-85C-18
24VI FROM ENGINE CTR. SW. SEE P.4.1
24V POWER FROM RR. JCT. BOX JCT.*H SEE P. 1.1
R99
24-85F-18
24-24B-14
CB124
0-0-18
24-290A-16
24-290-16
FAN CTRL SPEED* 1 FROM DDEC3 ECM C32 (A2) SEE P. 5.1
555-18
C415
C397
C414
FAN CTRL SPEED* 2 FROM DDEC3 ENGINE HARNESS ECM 30 WAY CONNECTOR CAVITY W-3
563-18
C416
24VI POWER FROM RR. JCT. BOX RLY R53 SEE P. 1.1
C508
24-85-18
24-85-18
TIME DELAY RF3
RS18 75KΩ
0-0A-16
0-0R-16
R84
R85
RF1
RF2
291-16
292-16
0-125-18
0-125W-18
D83
C508
C508
C508
C508
C426
C397
C15
C414
BLU
BRN
24-290-16
0-291-16
0-292-16
STEP 1
STEP 2
F.C.
FROM RETARD. SYS. CONNECTOR C20 SEE P. 21
PRODRIVER
900-18
DDEC DATA LINK FROM ECM C32 SEE P.5.1
901-18
12-251-18
FROM 12V BATTERY SEE P.2.1
12-439-18
FROM DDEC 12V IGNITION SEE P.5.1
12-63B-18
EXTERIOR LIGHTING FROM CB40 SEE P 9.1
0-953-18
FROM DDEC BATTERY GRD SEE P.5.1
0-0T4-16
2A
0-SH-18
C500
C501
12-750-18
ELECTRONIC CONTROLS

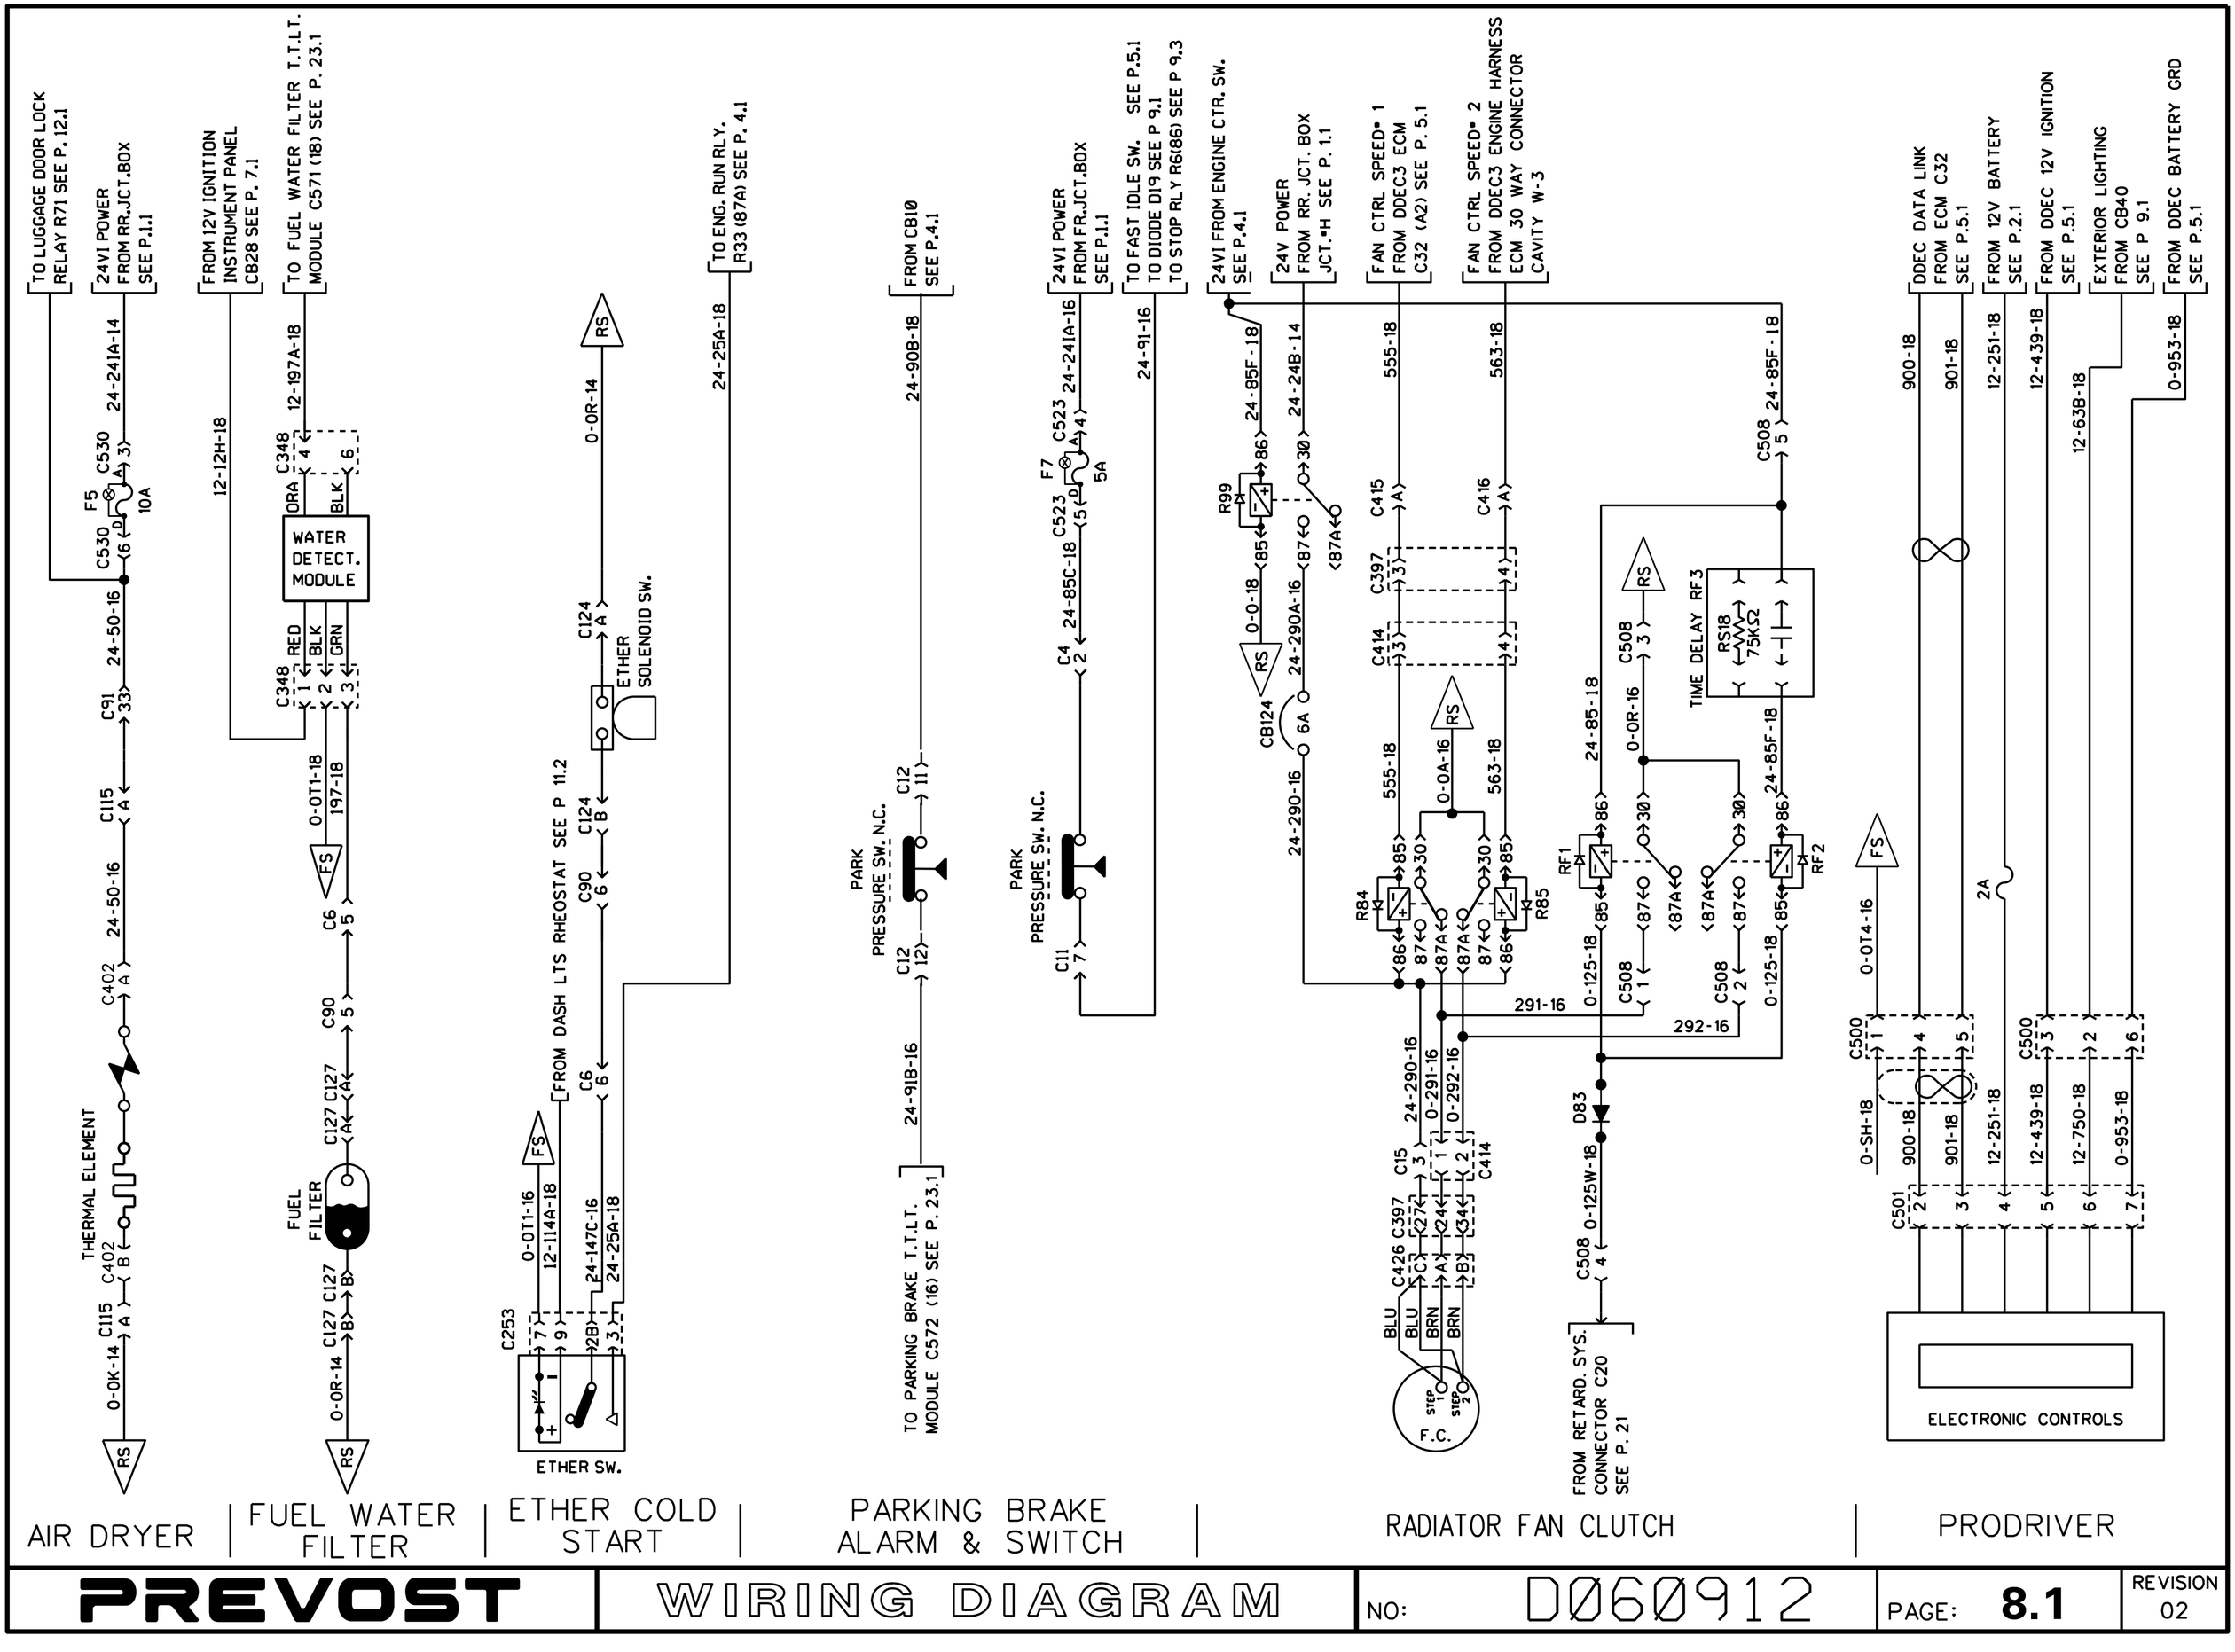

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 8.1	REVISION 02

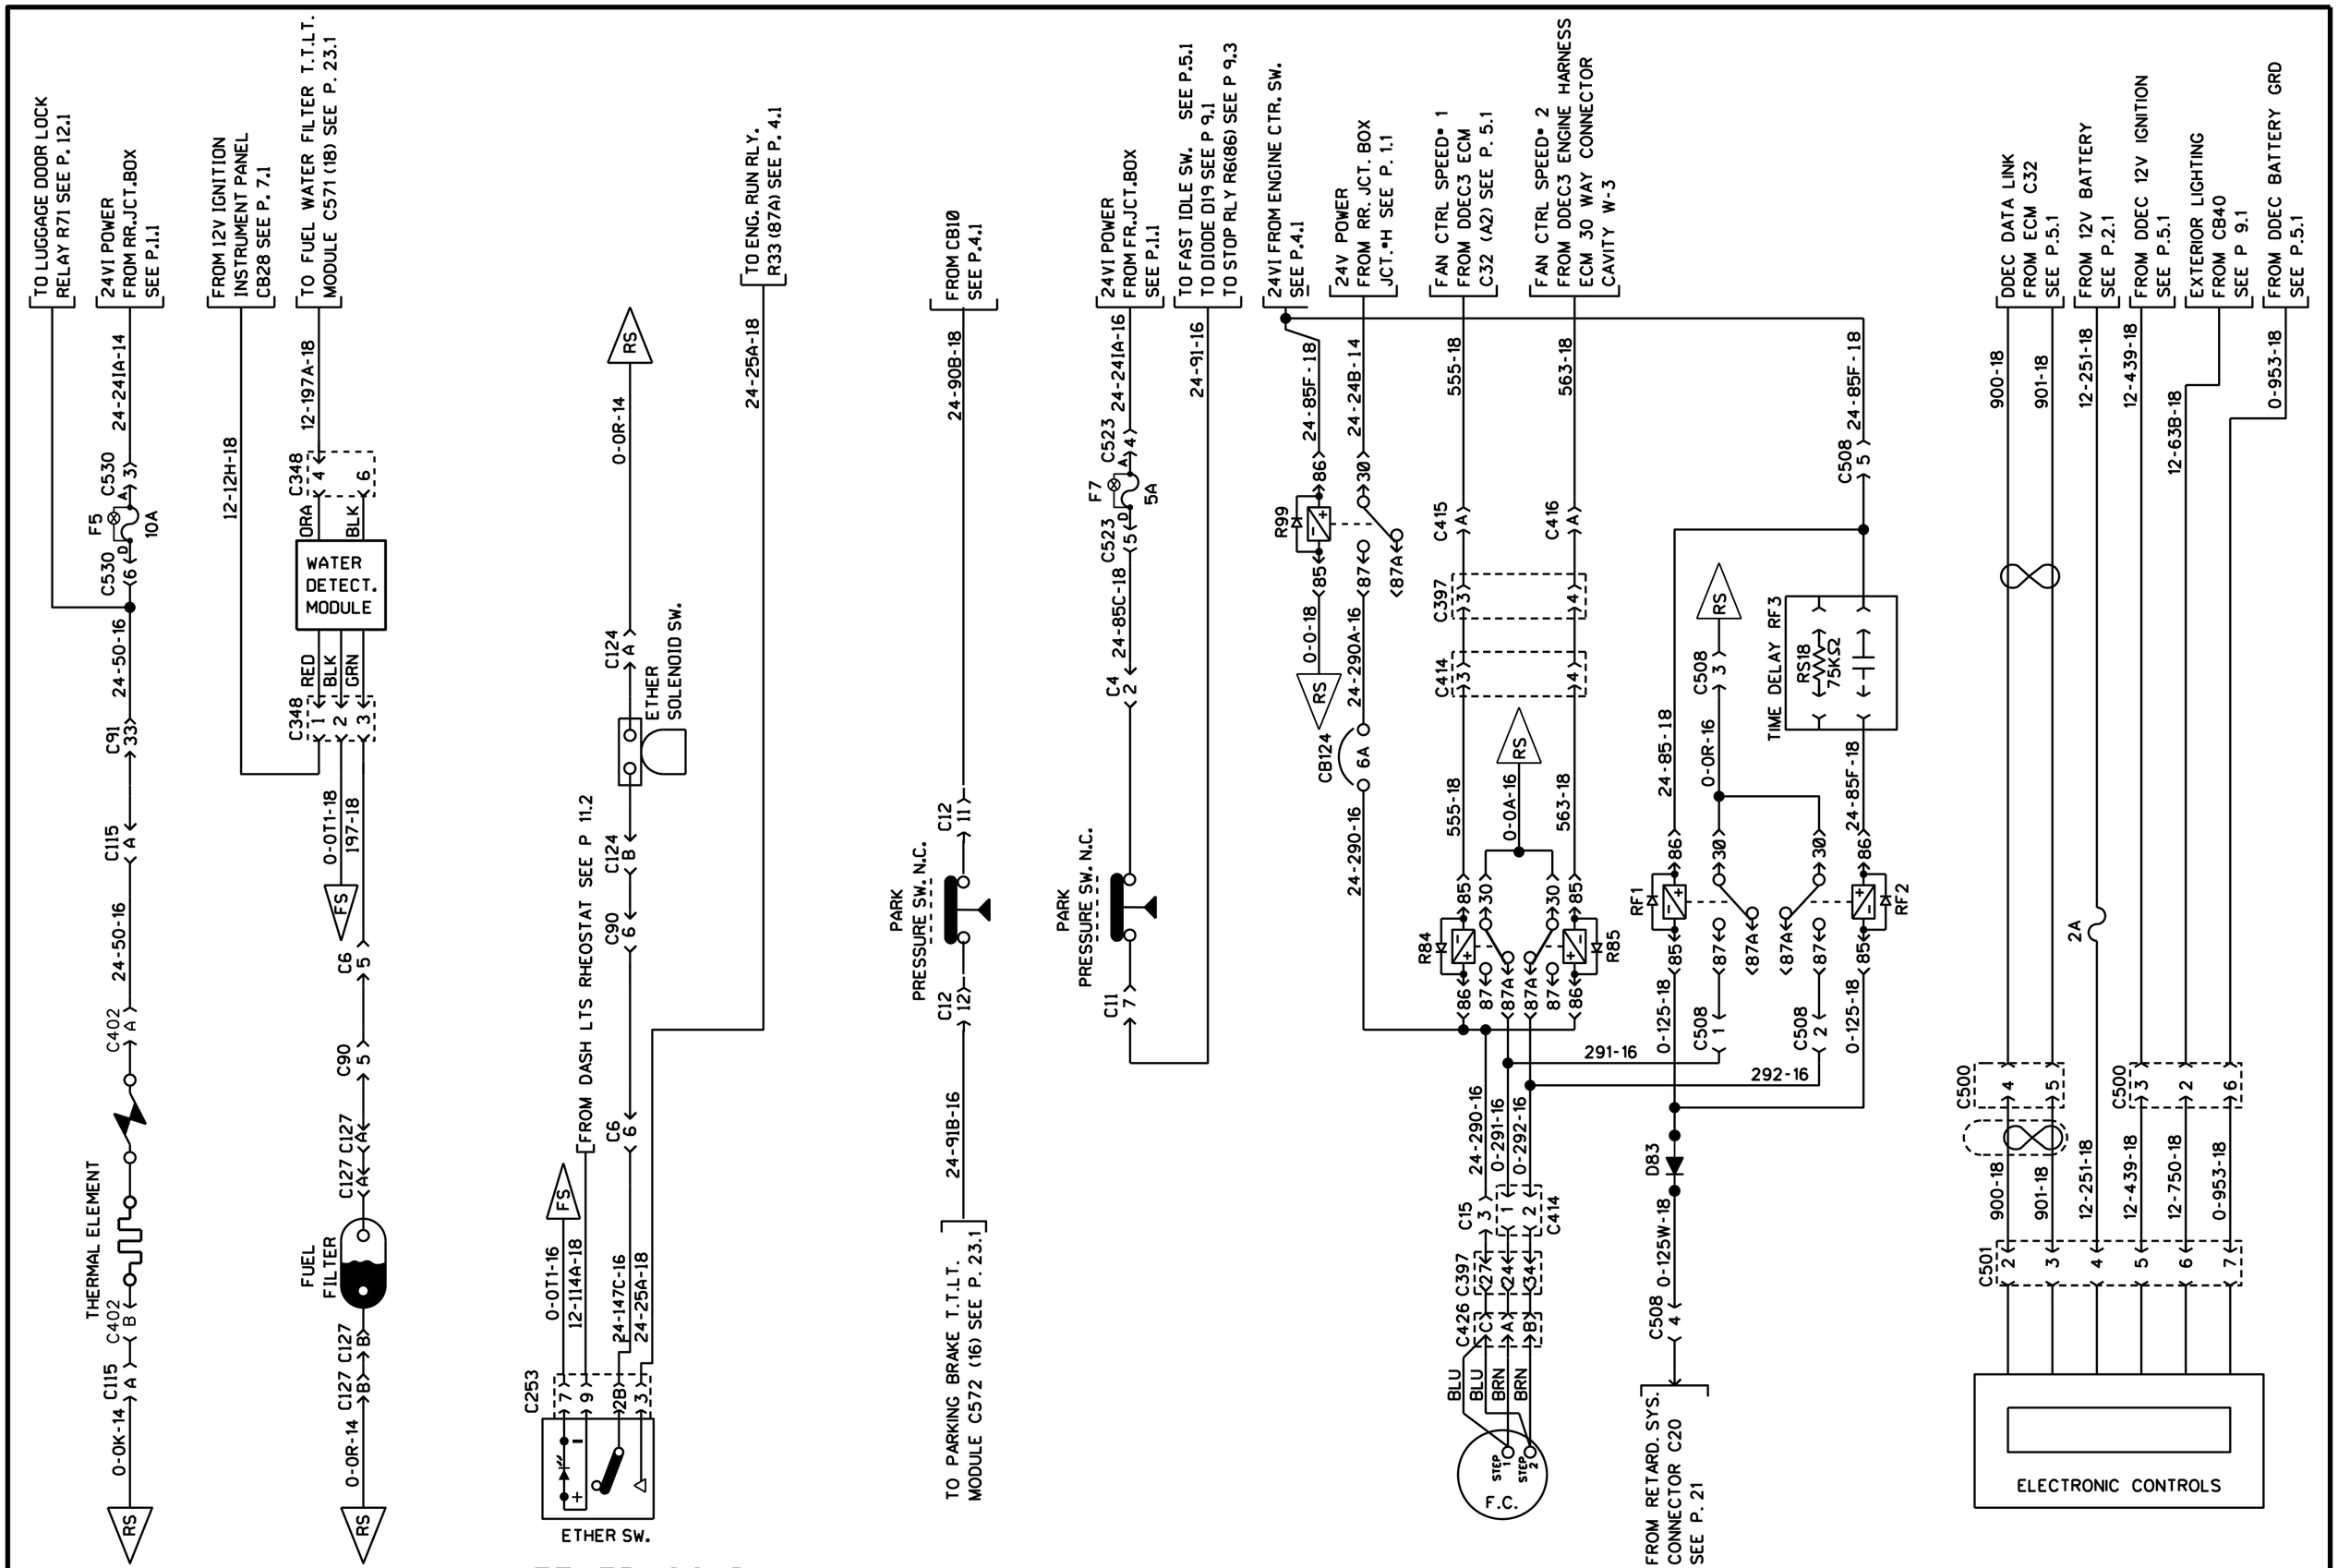
TO LUGGAGE DOOR LOCK RELAY R71 SEE P. 12.1
24VI POWER FROM RR.JCT.BOX SEE P.1.1
FROM 12V IGNITION INSTRUMENT PANEL CB28 SEE P. 7.1
TO FUEL WATER FILTER T.T.L.T. MODULE C571 (18) SEE P. 23.1
TO ENG. RUN RLY. R33 (87A) SEE P. 4.1
FROM CB10 SEE P.4.1
24VI POWER FROM FR.JCT.BOX SEE P.1.1
TO FAST IDLE SW. SEE P.5.1
TO DIODE D19 SEE P 9.1
TO STOP RLY R6(86) SEE P 9.3
24VI FROM ENGINE CTR. SW. SEE P.4.1
24V POWER FROM RR. JCT. BOX JCT.•H SEE P. 1.1
FAN CTRL SPEED• 1 FROM DDEC3 ECM C32 (A2) SEE P. 5.1
FAN CTRL SPEED• 2 FROM DDEC3 ENGINE HARNESS ECM 30 WAY CONNECTOR CAVITY W-3
DDEC DATA LINK FROM ECM C32 SEE P. 5.1
FROM 12V BATTERY SEE P. 2.1
FROM DDEC 12V IGNITION SEE P. 5.1
EXTERIOR LIGHTING FROM CB40 SEE P 9.1
FROM DDEC BATTERY GRD SEE P. 5.1
F5 10A
C530
24-241A-14
24-50-16
C91
C115
C402
THERMAL ELEMENT
0-OK-14
RS
12-12H-18
C348
WATER DETECT. MODULE
RED
BLK
GRN
ORA
BLK
12-197A-18
0-OT1-18
197-18
FS
C6
C90
C127
FUEL FILTER
0-OR-14
C124
ETHER SOLENOID SW.
FROM DASH LTS RHEOSTAT SEE P 11.2
C253
ETHER SW.
0-OT1-16
12-114A-18
24-147C-16
24-25A-18
PARK PRESSURE SW. N.C.
C12
24-91B-16
TO PARKING BRAKE T.T.L.T. MODULE C572 (16) SEE P. 23.1
C11
F7 5A
C523
C4
24-85C-18
24-241A-16
24-91-16
R99
24-85F-18
24-24B-14
0-0-18
24-290A-16
CB124 6A
24-290-16
C415
C397
C414
C416
555-18
563-18
0-0A-16
TIME DELAY RF3
RS18 75KΩ
C508
0-0R-16
24-85-18
R84
R85
RF1
RF2
0-125-18
291-16
292-16
C15
C426
C414
BLU
BRN
F.C.
D83
0-125W-18
FROM RETARD. SYS. CONNECTOR C20 SEE P. 21
900-18
901-18
12-251-18
12-439-18
12-63B-18
2A
C500
C501
12-750-18
0-953-18
ELECTRONIC CONTROLS
AIR DRYER
FUEL WATER FILTER
ETHER COLD START
PARKING BRAKE ALARM & SWITCH
RADIATOR FAN CLUTCH
PRODRIVER

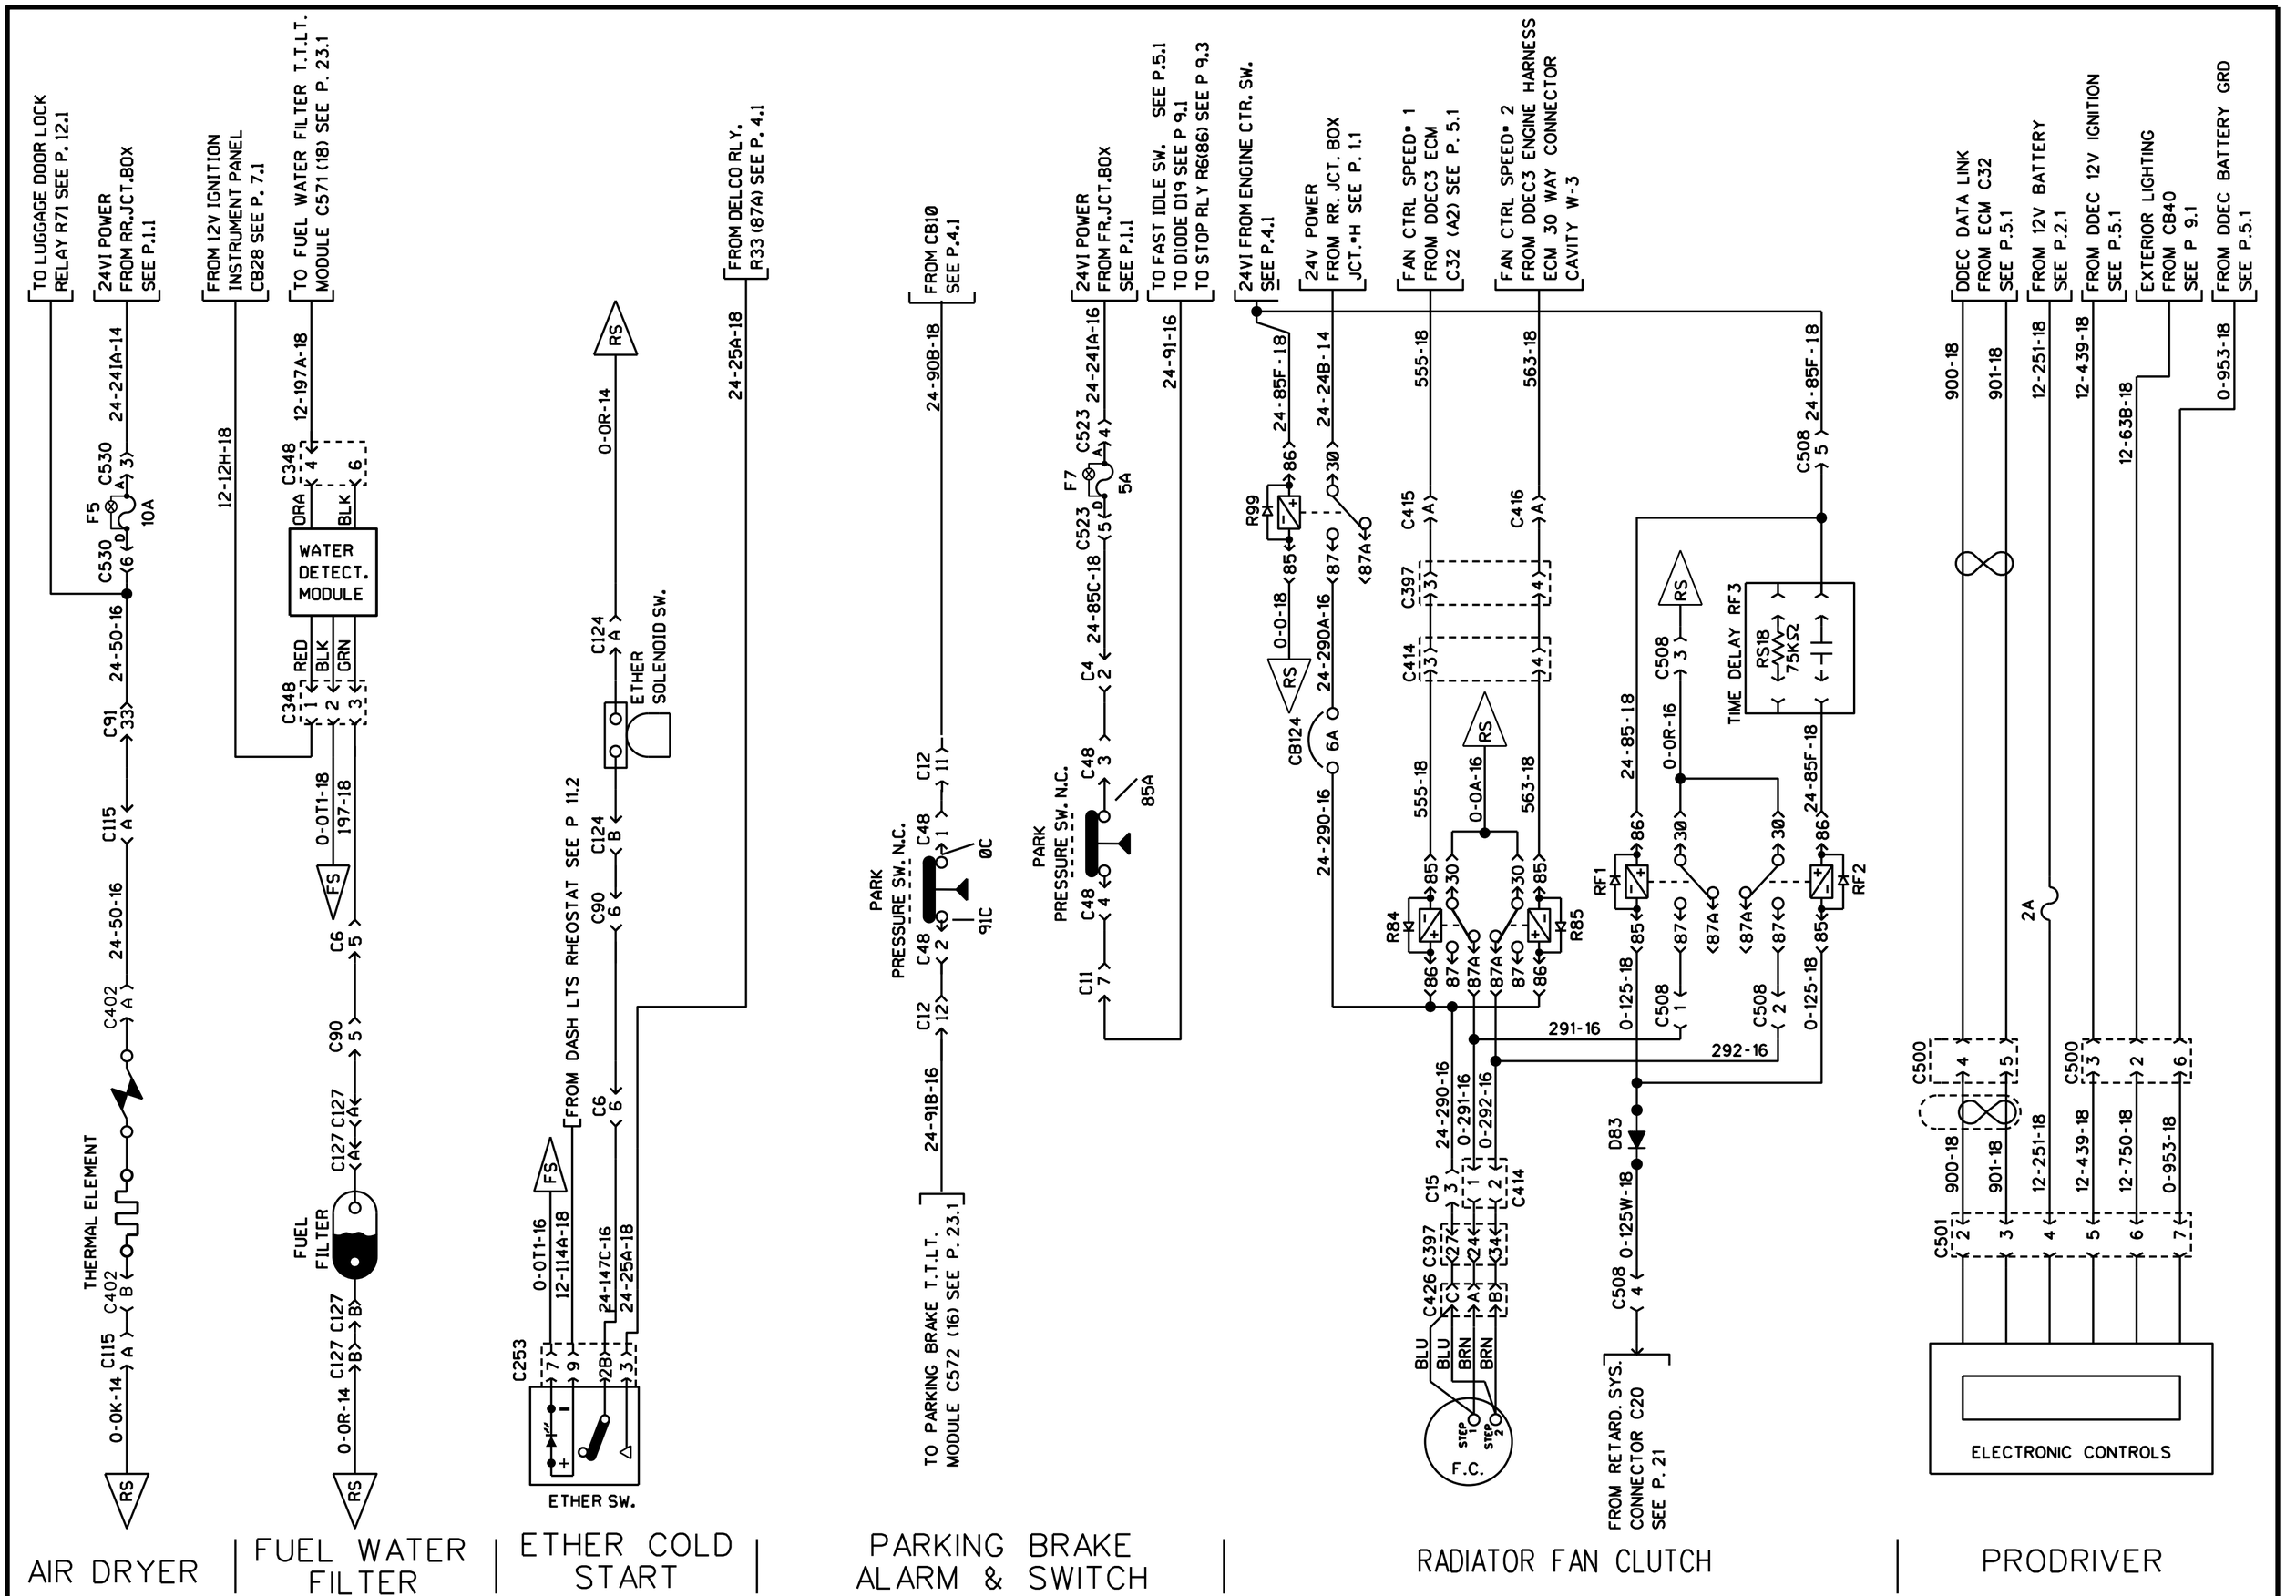

AIR DRYER | FUEL WATER FILTER | ETHER COLD START | PARKING BRAKE ALARM & SWITCH | RADIATOR FAN CLUTCH | PRODRIVER

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 8.1	REVISION 10

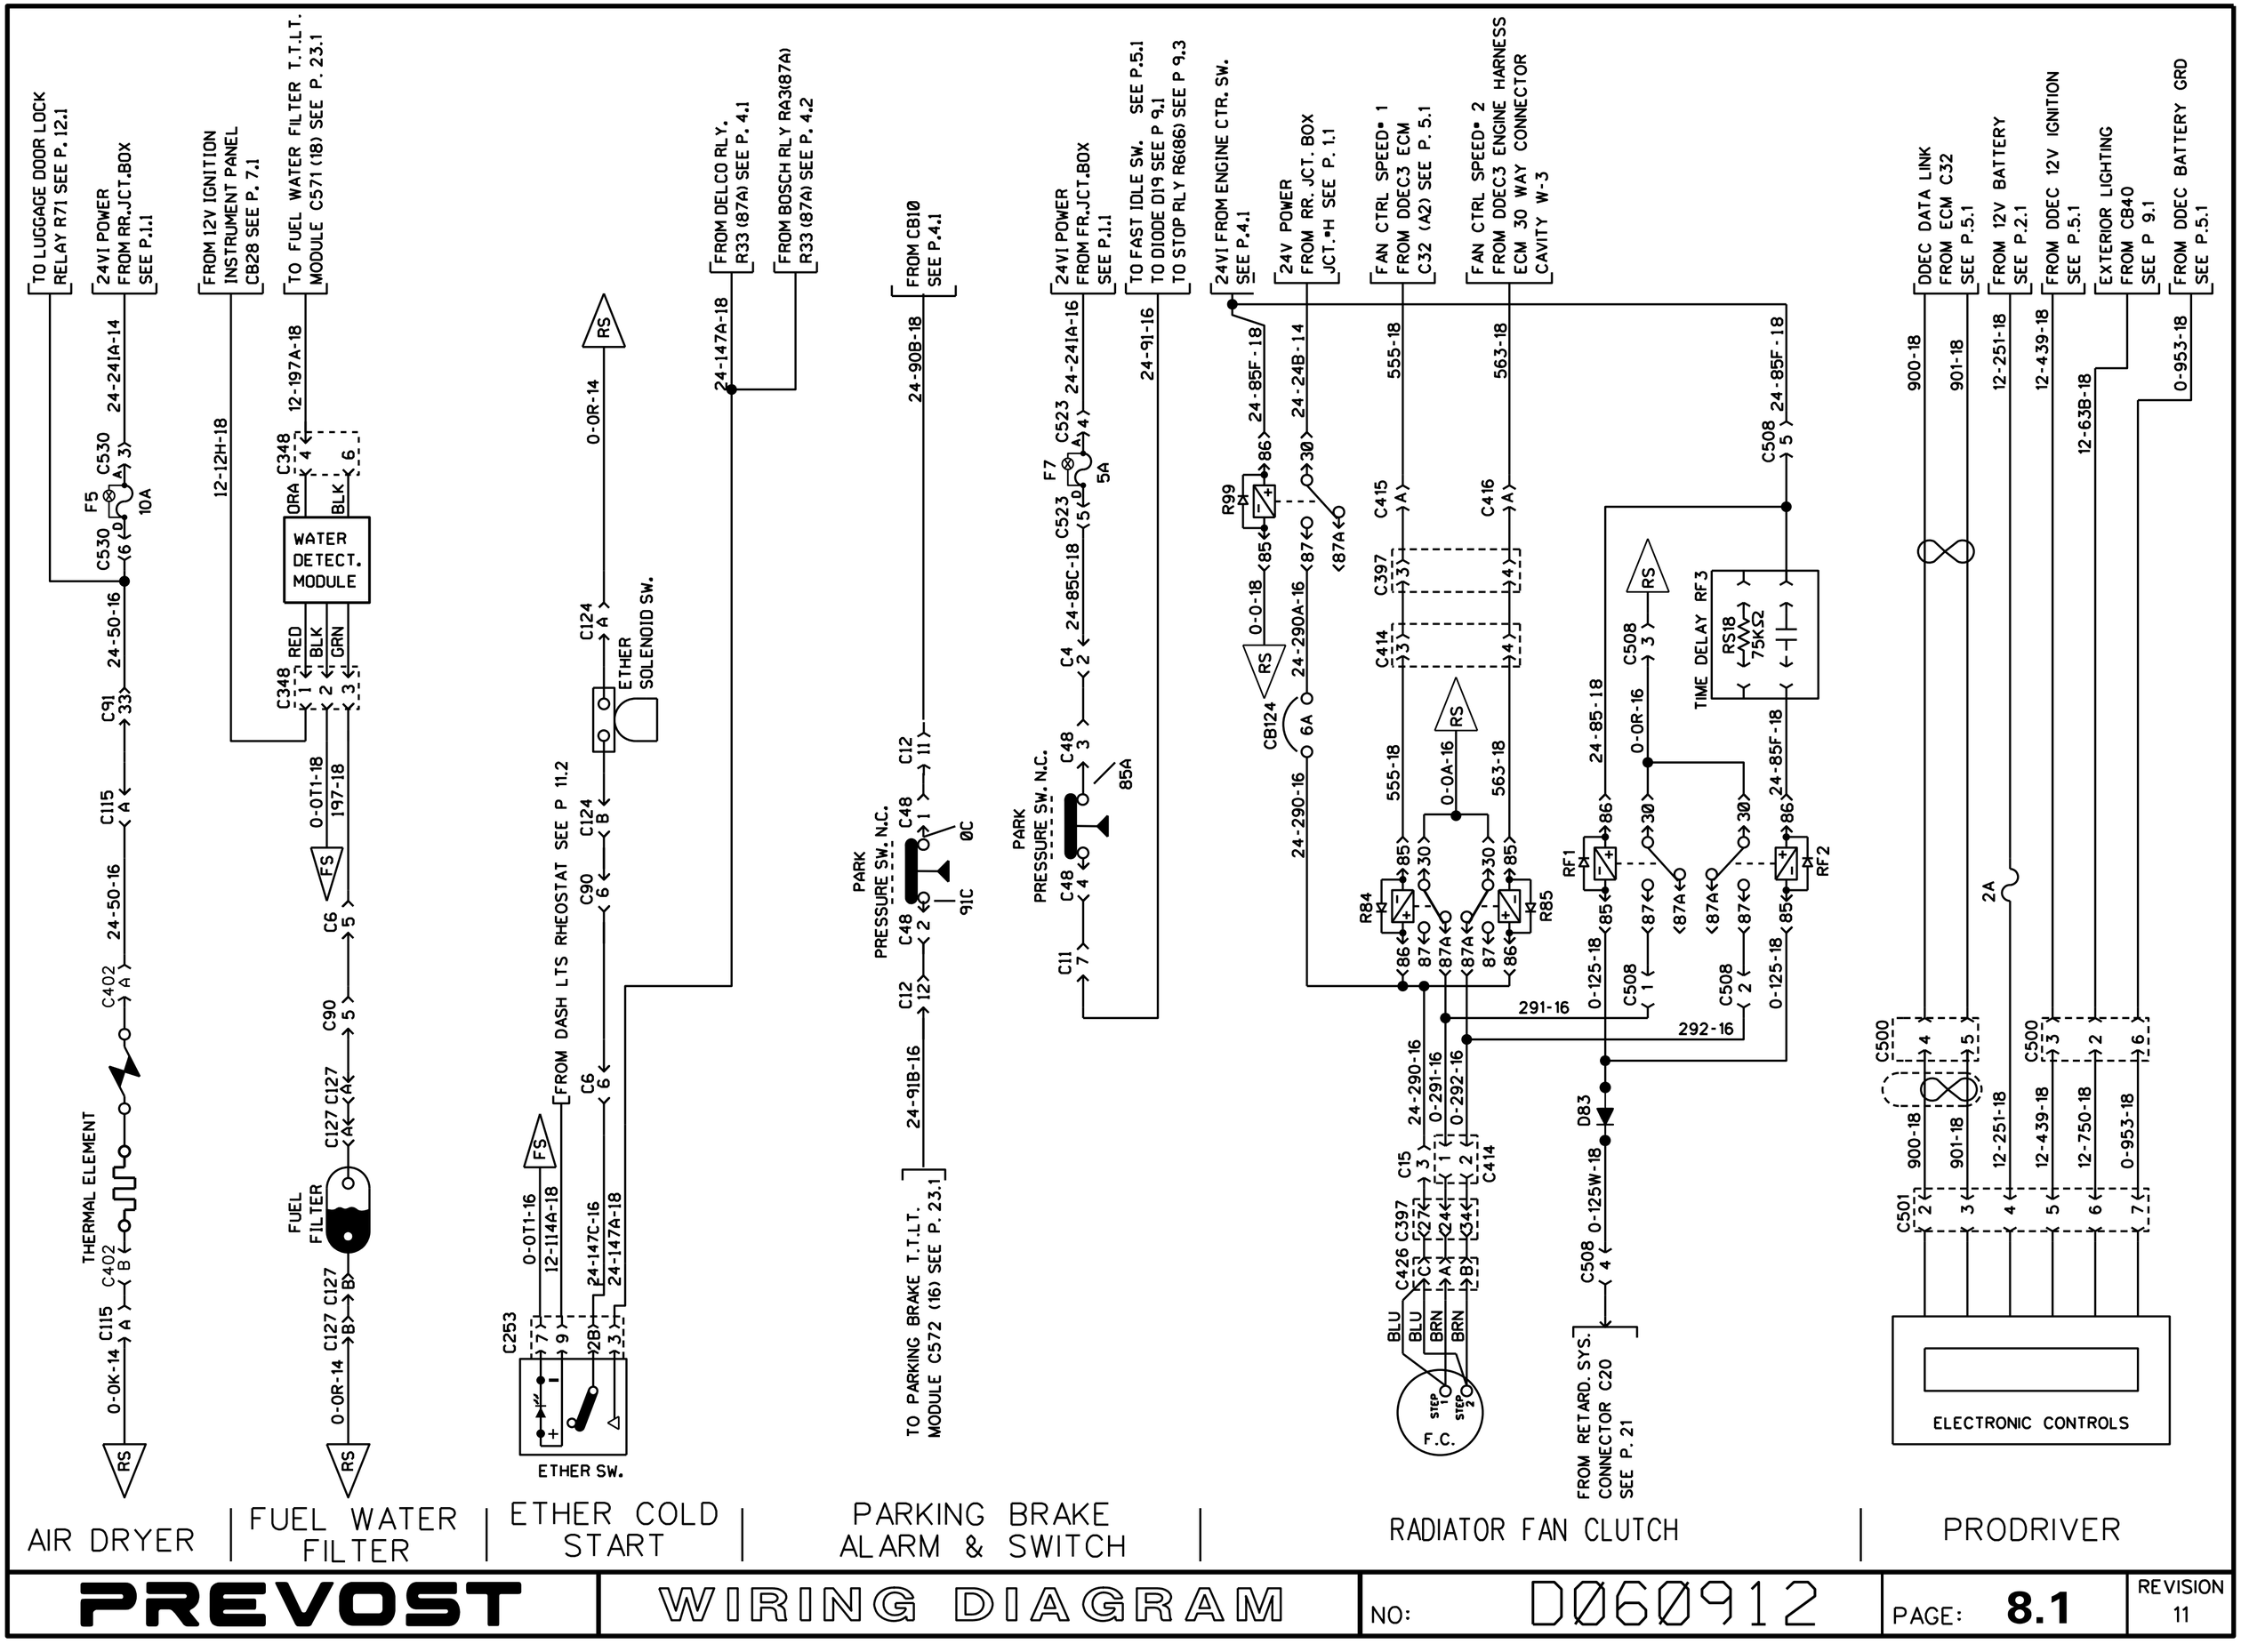
AIR DRYER
FUEL WATER FILTER
ETHER COLD START
PARKING BRAKE ALARM & SWITCH
RADIATOR FAN CLUTCH
PRODRIVER
TO LUGGAGE DOOR LOCK RELAY R71 SEE P. 12.1
24VI POWER FROM RR.JCT.BOX SEE P.1.1
FROM 12V IGNITION INSTRUMENT PANEL CB28 SEE P. 7.1
TO FUEL WATER FILTER T.T.L.T. MODULE C571 (18) SEE P. 23.1
WATER DETECT. MODULE
THERMAL ELEMENT
FUEL FILTER
FROM DELCO RLY. R33 (87A) SEE P. 4.1
FROM BOSCH RLY RA3(87A) R33 (87A) SEE P. 4.2
FROM CB10 SEE P.4.1
ETHER SOLENOID SW.
FROM DASH LTS RHEOSTAT SEE P 11.2
ETHER SW.
PARK PRESSURE SW. N.C.
TO PARKING BRAKE T.T.L.T. MODULE C572 (16) SEE P. 23.1
24VI POWER FROM FR.JCT.BOX SEE P.1.1
TO FAST IDLE SW. SEE P.5.1
TO DIODE D19 SEE P 9.1
TO STOP RLY R6(86) SEE P 9.3
24VI FROM ENGINE CTR. SW. SEE P.4.1
24V POWER FROM RR. JCT. BOX JCT. "H SEE P. 1.1
FAN CTRL SPEED" 1 FROM DDEC3 ECM C32 (A2) SEE P. 5.1
FAN CTRL SPEED" 2 FROM DDEC3 ENGINE HARNESS ECM 30 WAY CONNECTOR CAVITY W-3
TIME DELAY RF3
RS18 75KΩ
F.C.
FROM RETARD. SYS. CONNECTOR C20 SEE P. 21
DDEC DATA LINK FROM ECM C32 SEE P.5.1
FROM 12V BATTERY SEE P.2.1
FROM DDEC 12V IGNITION SEE P.5.1
EXTERIOR LIGHTING FROM CB40 SEE P 9.1
FROM DDEC BATTERY GRD SEE P.5.1
ELECTRONIC CONTROLS

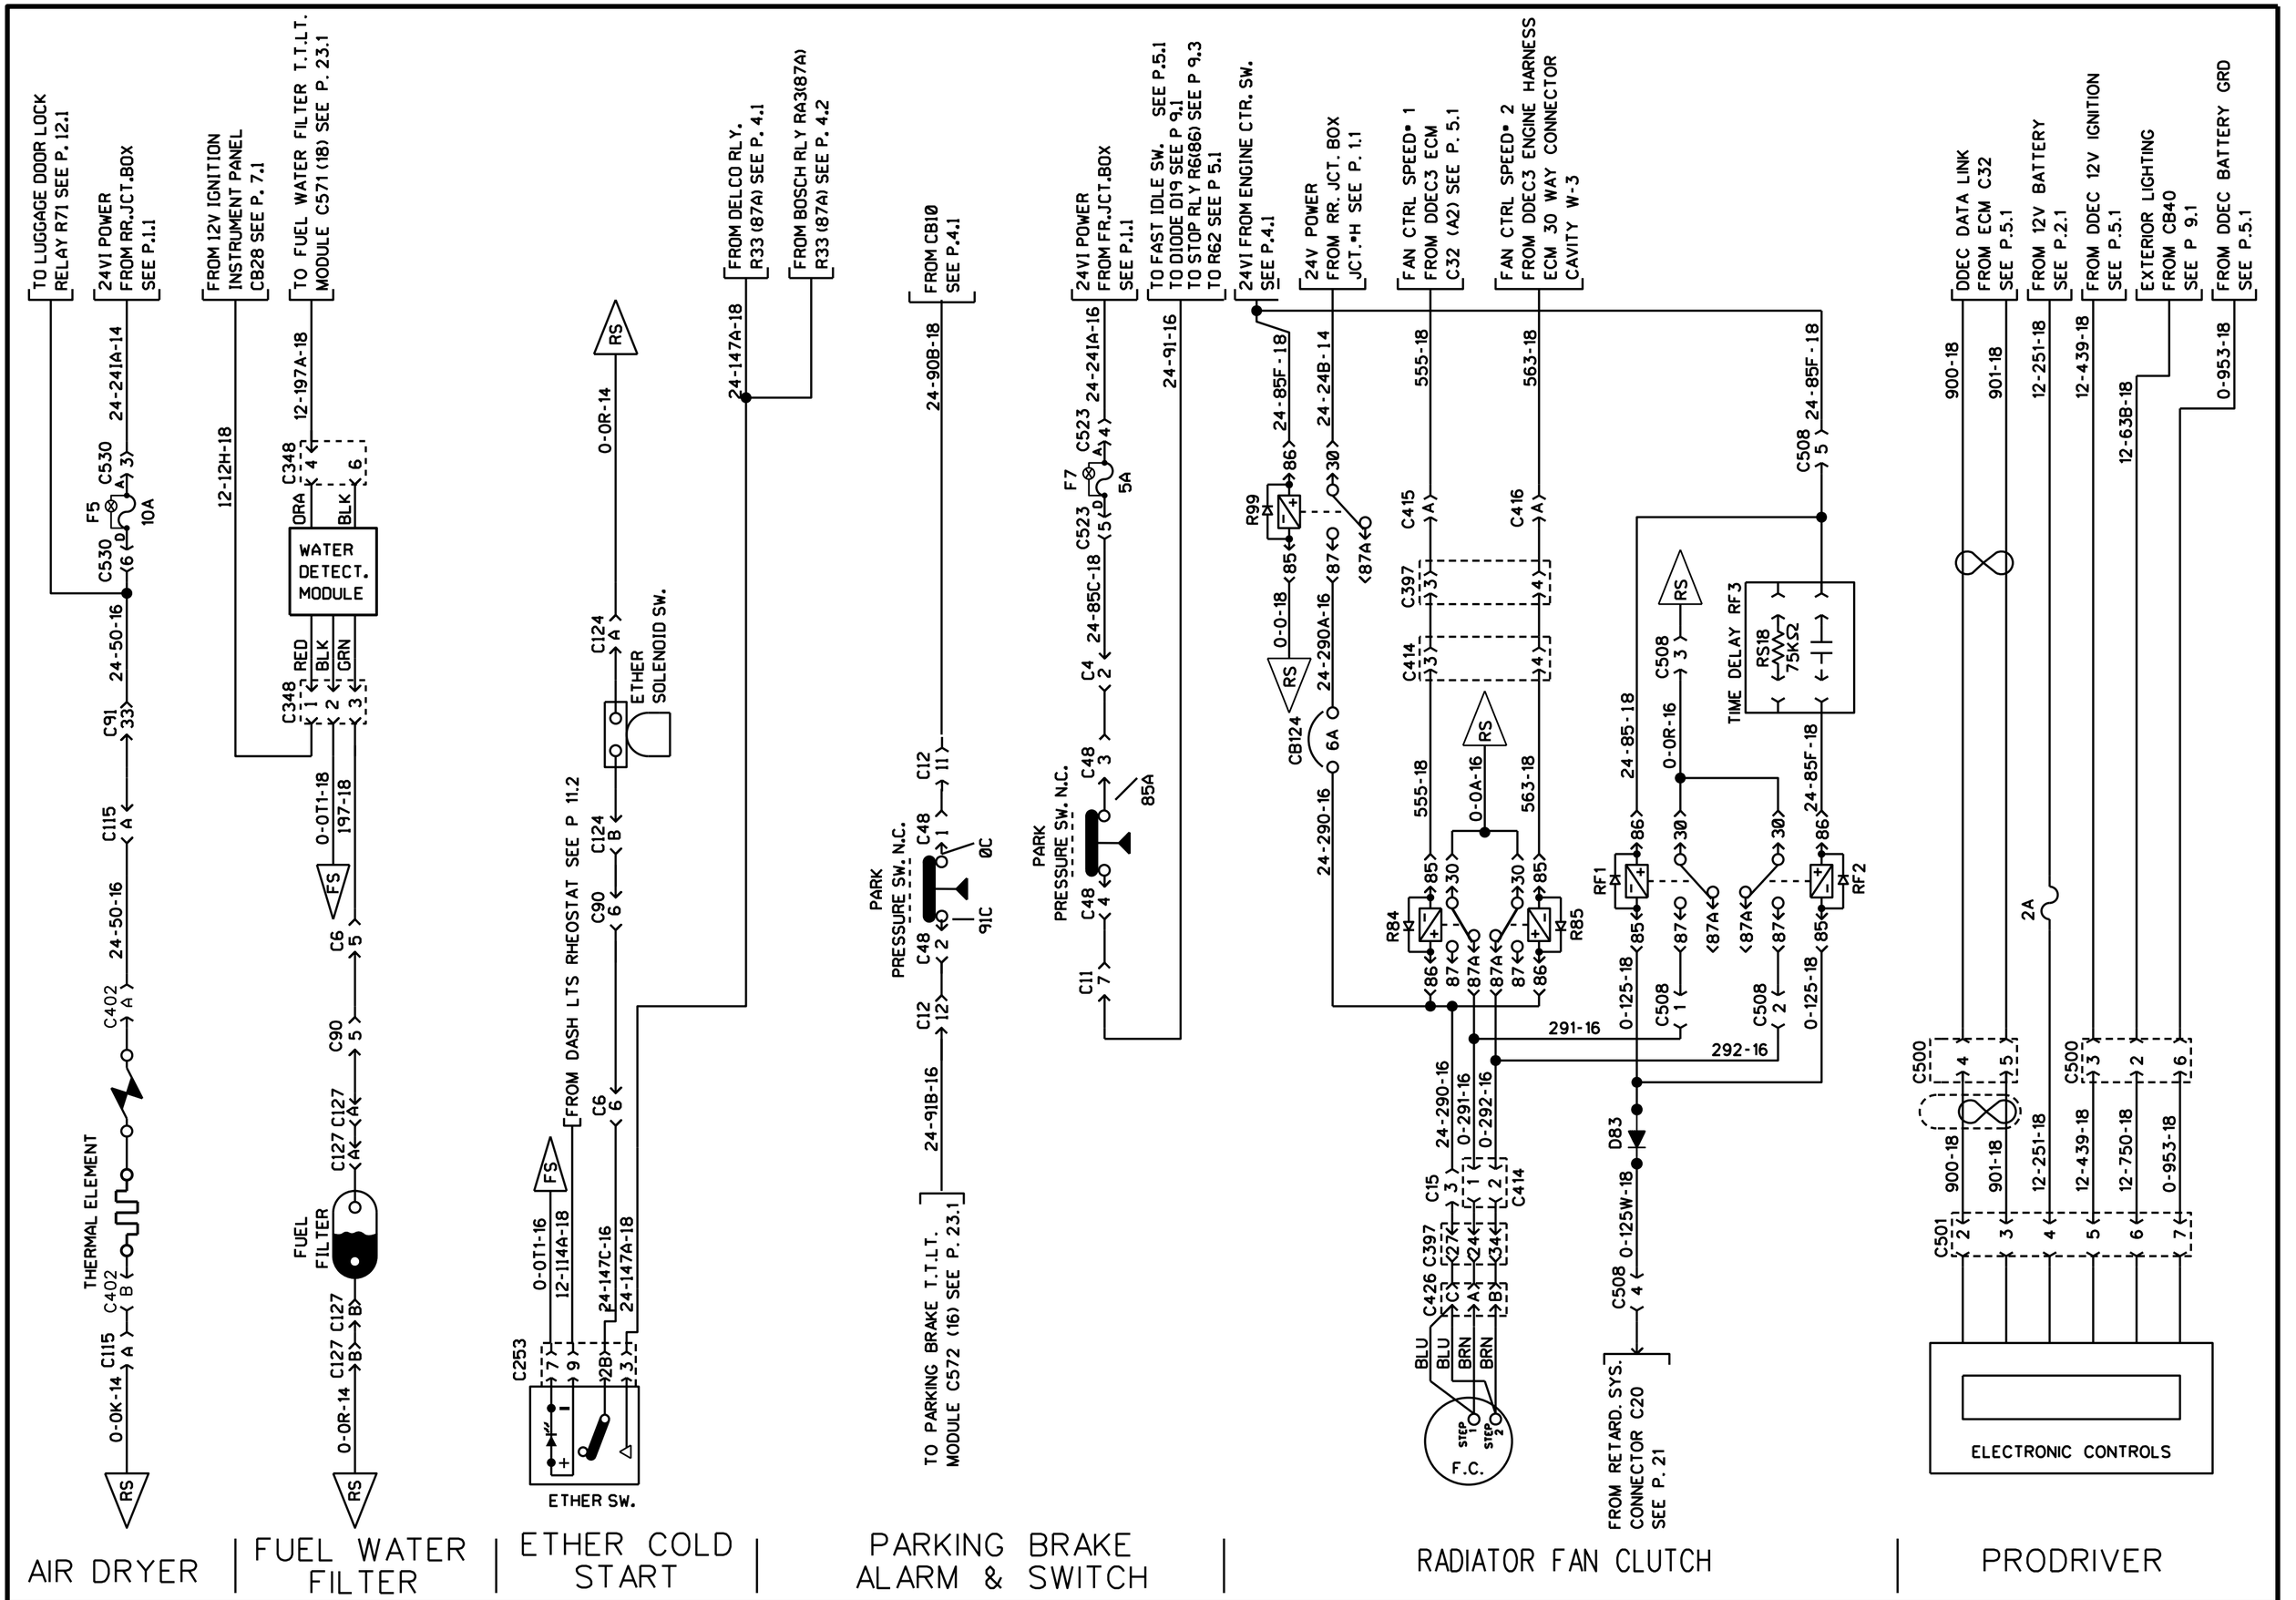

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 8.1	REVISION 13

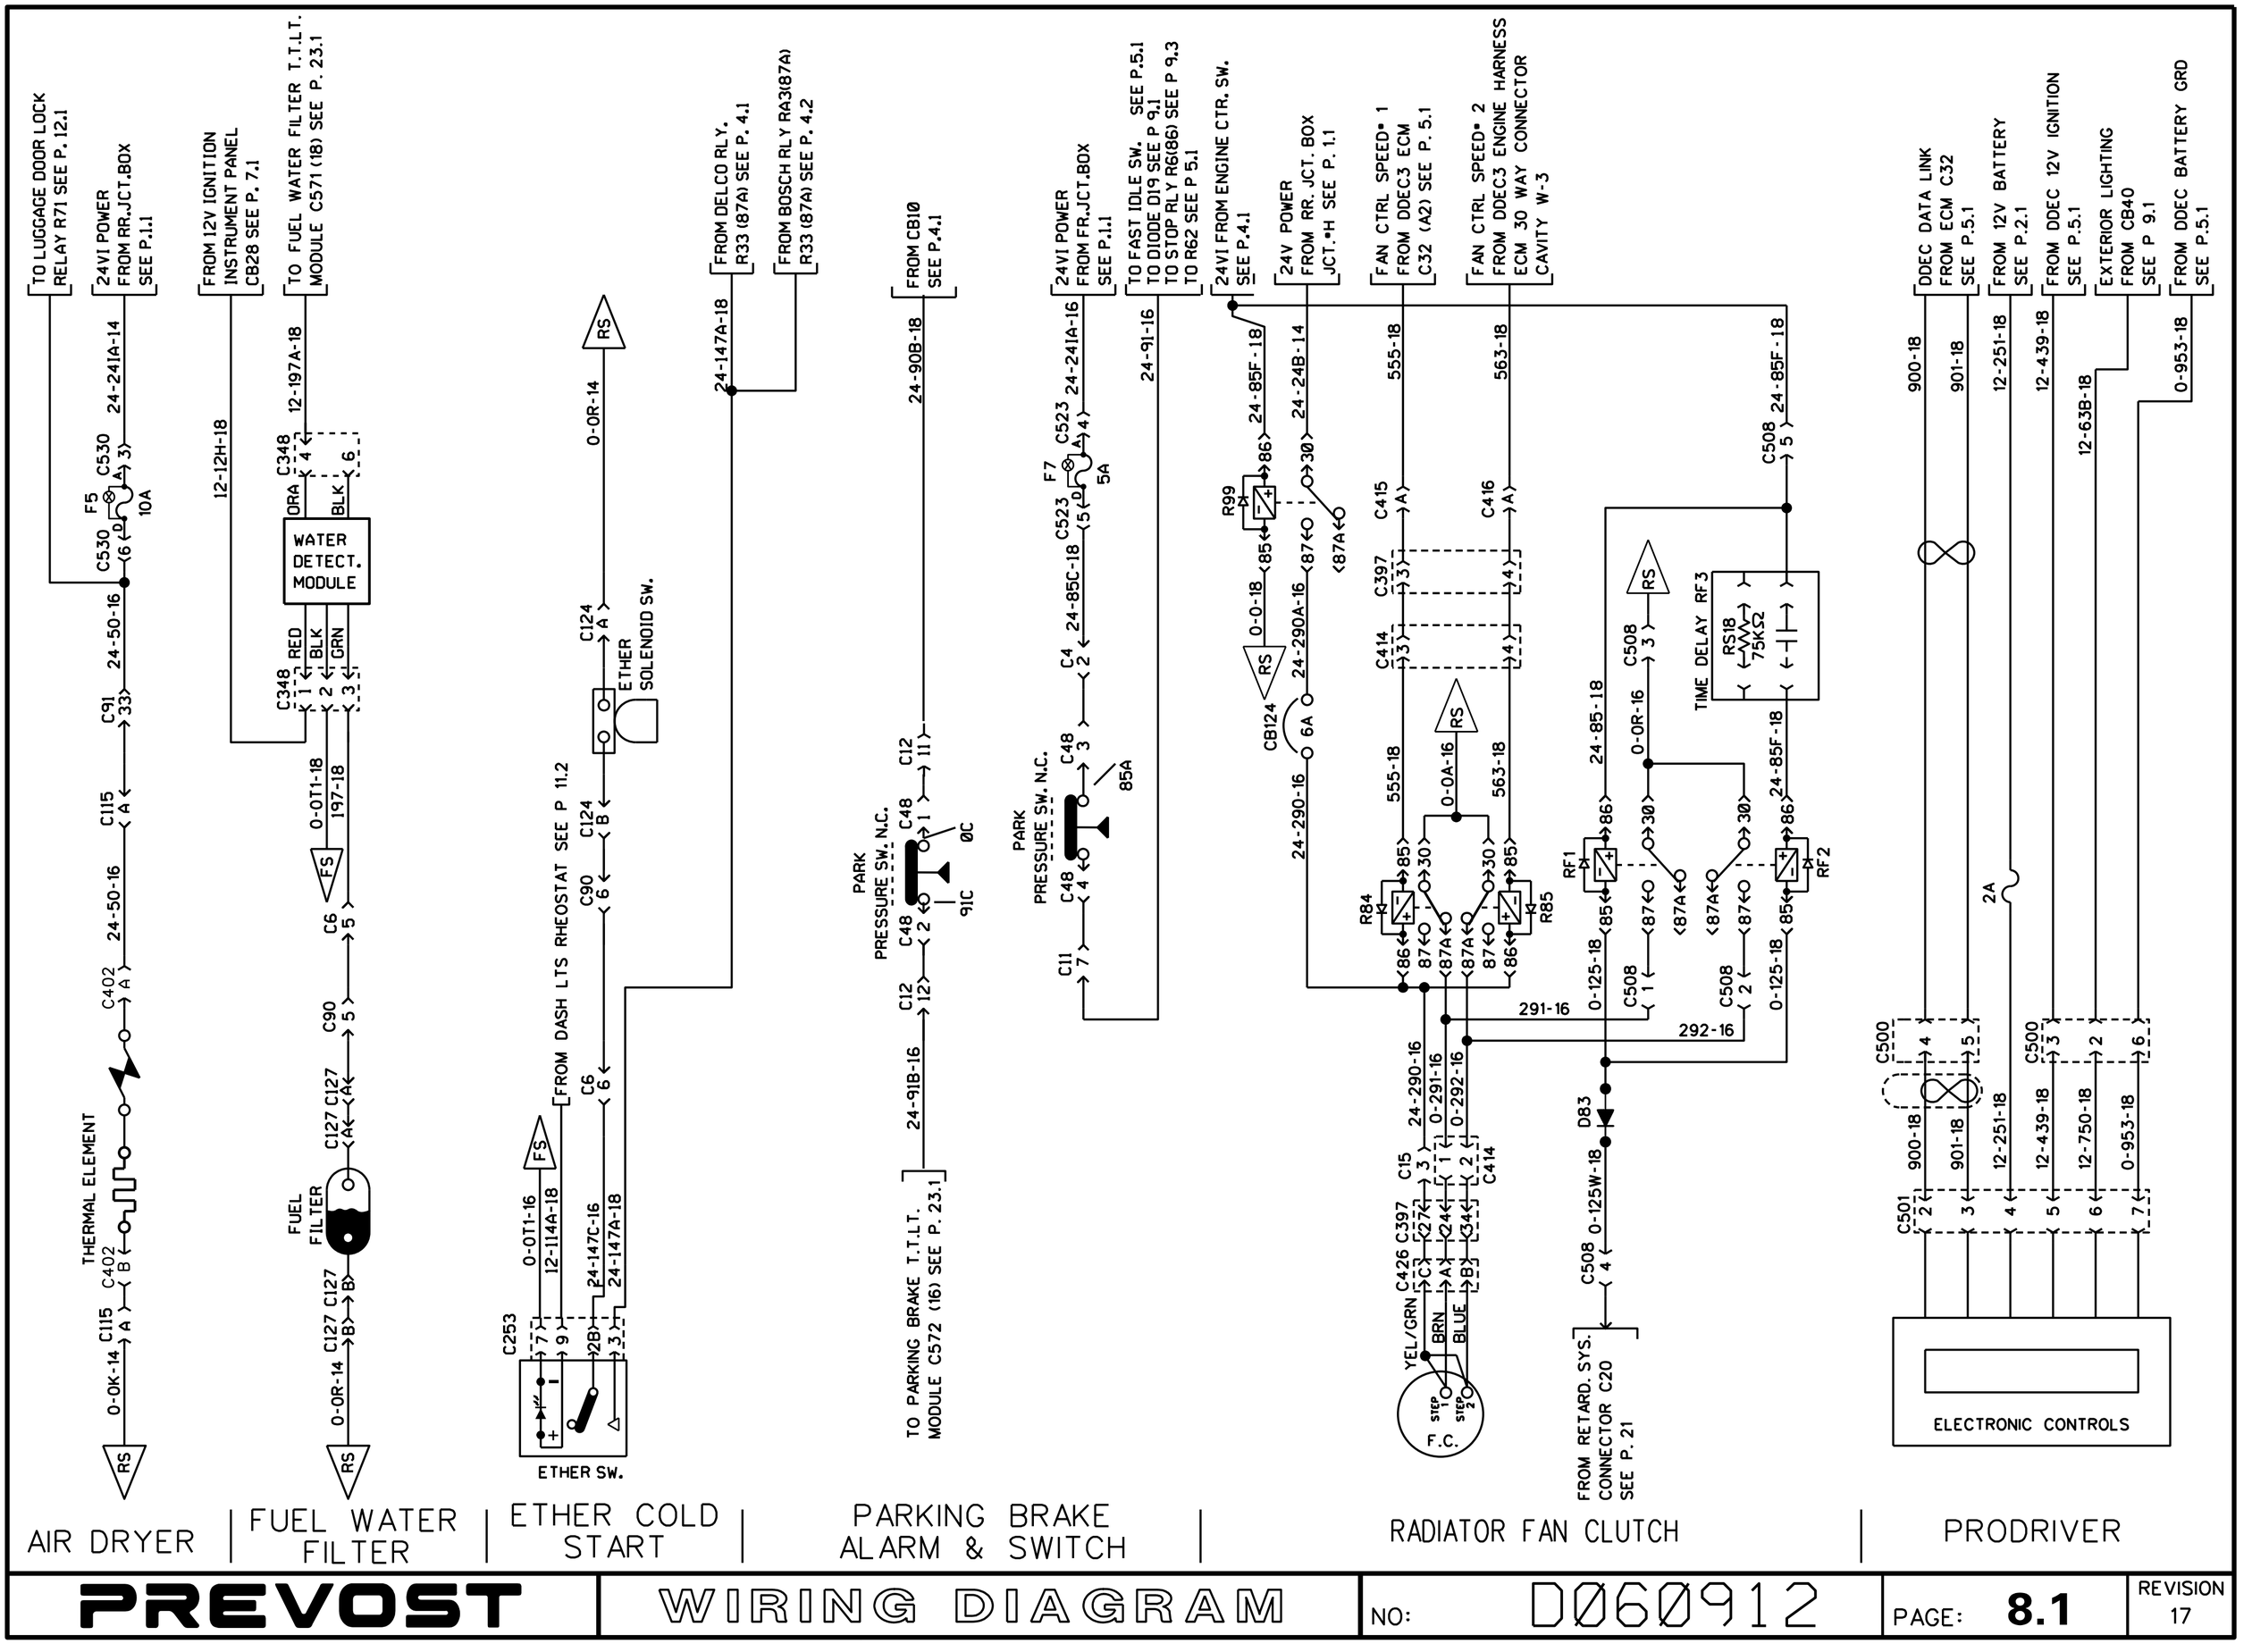

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 8.1	REVISION 17

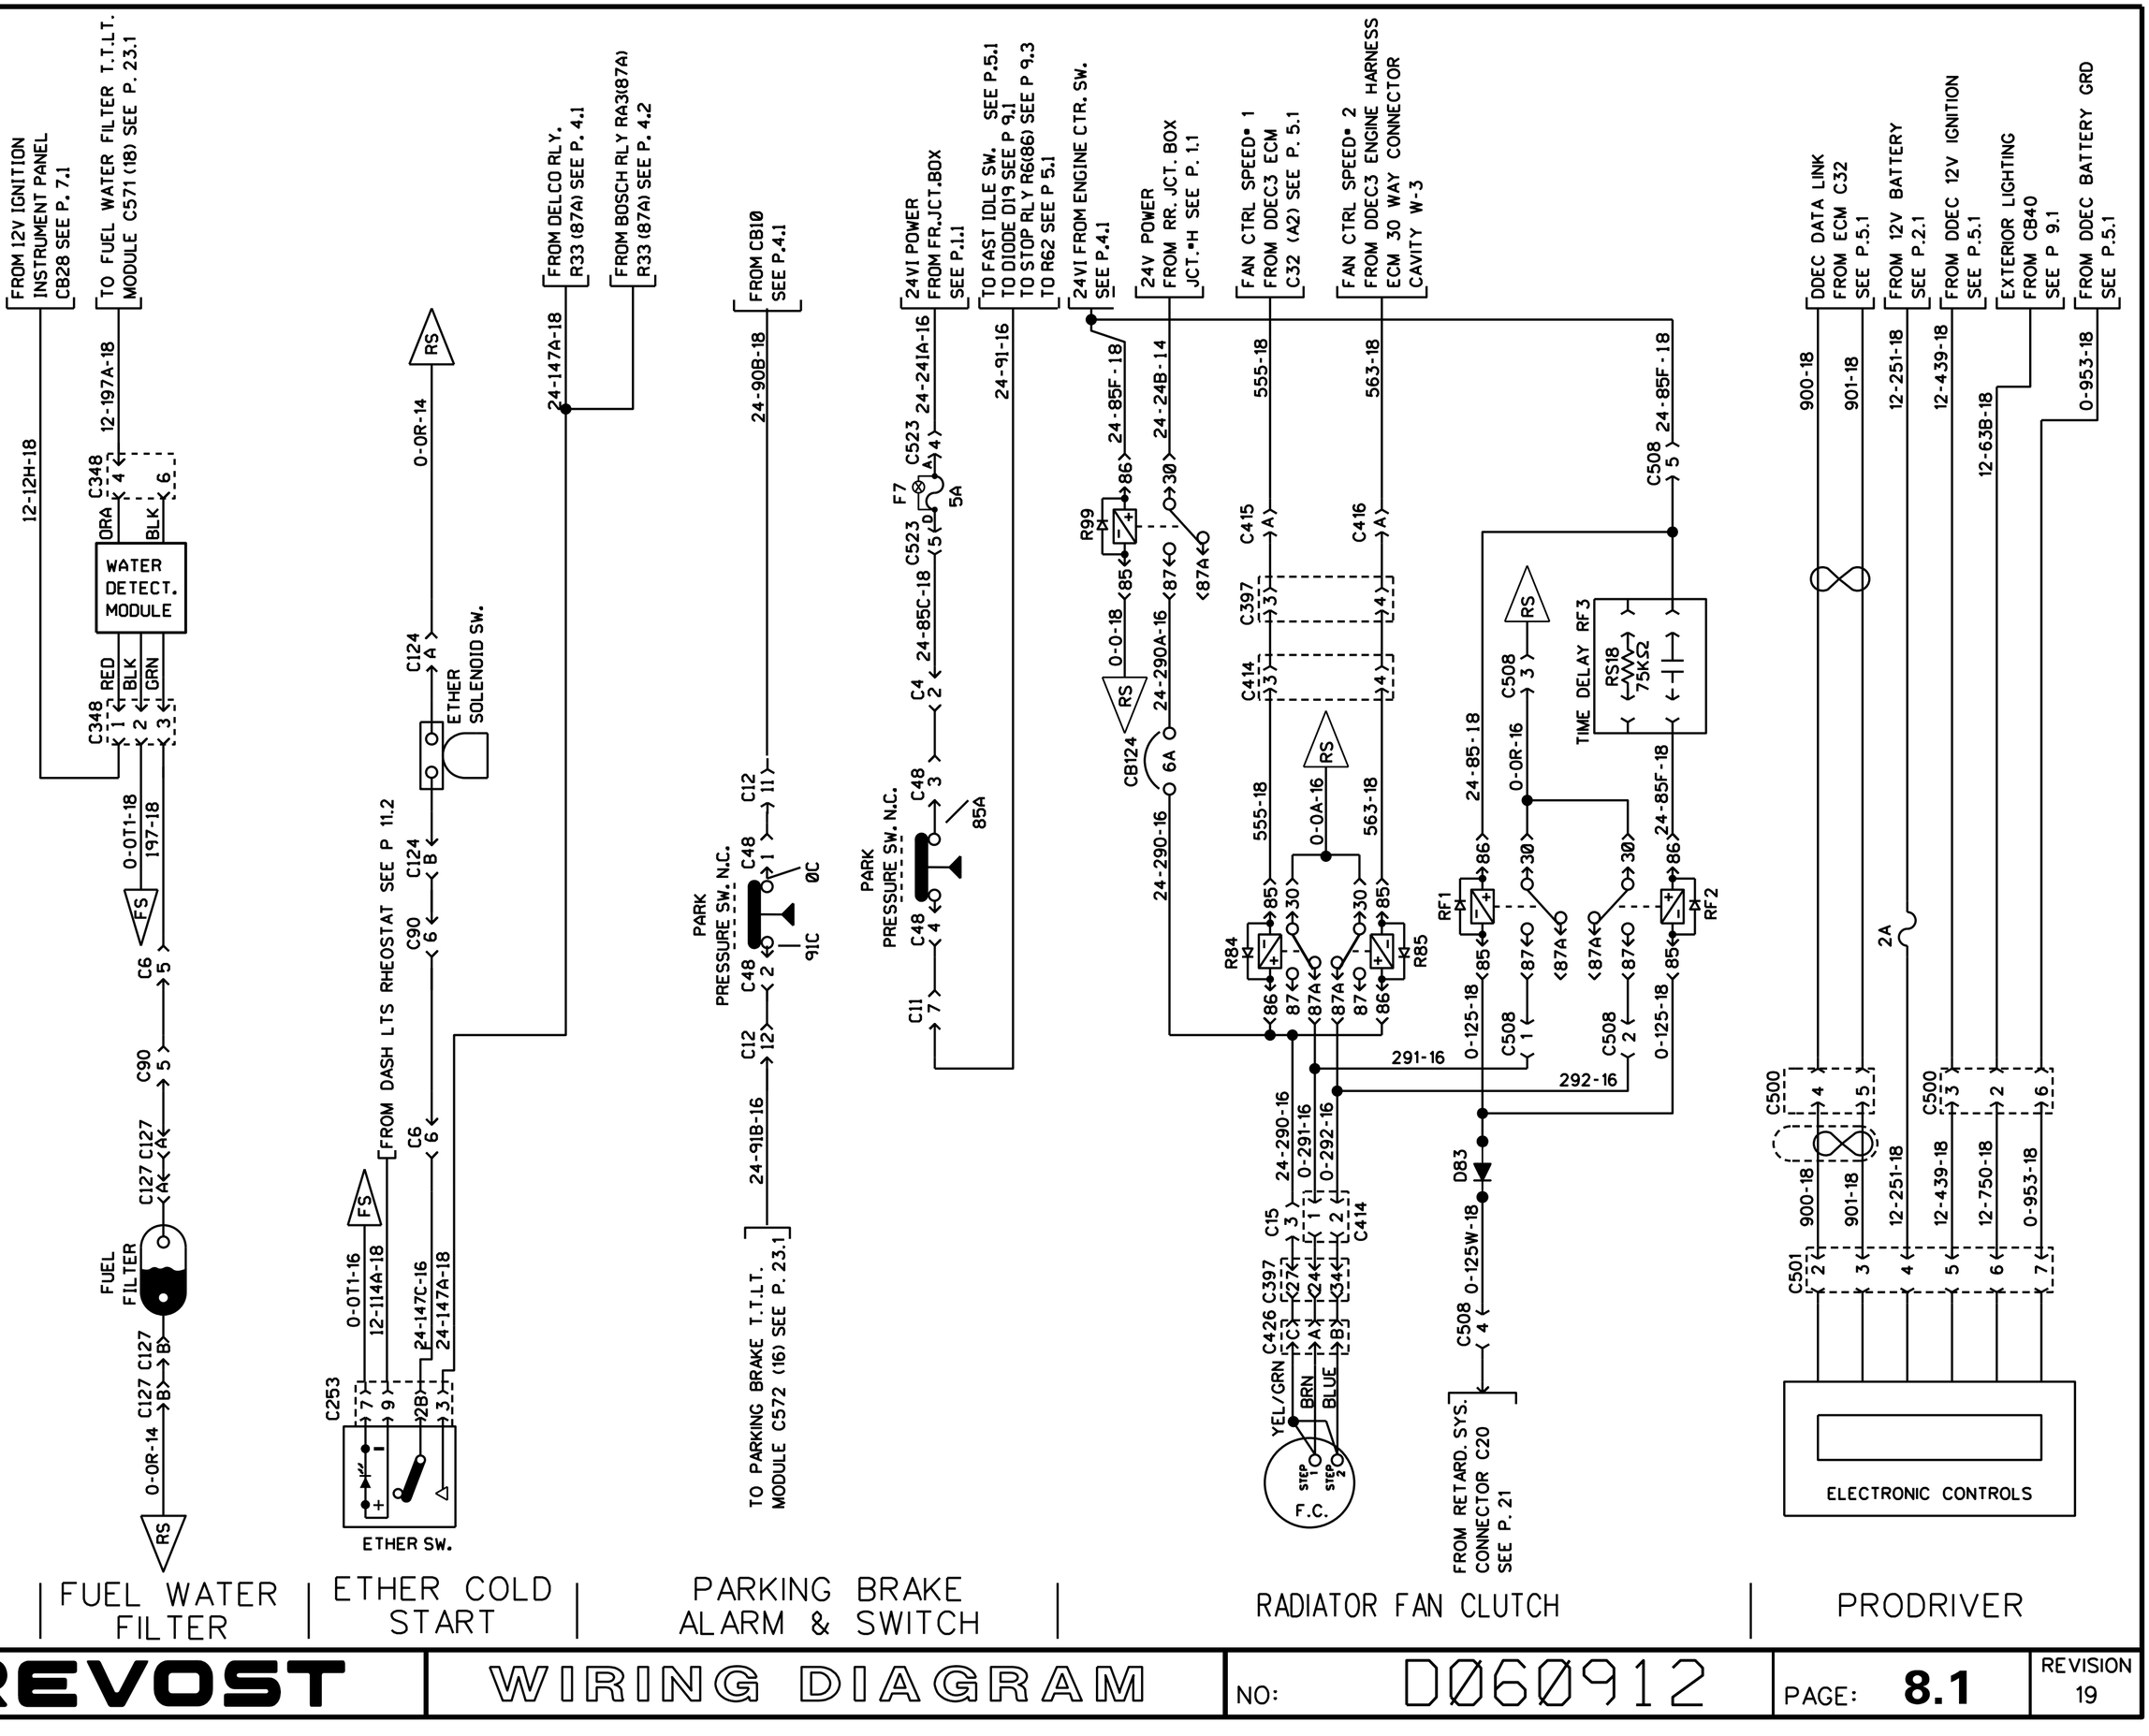
FROM 12V IGNITION INSTRUMENT PANEL CB28 SEE P. 7.1
12-12H-18
TO FUEL WATER FILTER T.T.L.T. MODULE C571 (18) SEE P. 23.1
12-197A-18
C348
ORA
BLK
WATER DETECT. MODULE
C348 RED BLK GRN
0-0T1-18
197-18
FS
C6
C90
C127 C127
FUEL FILTER
C127 C127
0-OR-14
RS
FROM DASH LTS RHEOSTAT SEE P 11.2
C124
C90
C6
0-OR-14
RS
ETHER SOLENOID SW.
C124
C253
0-0T1-16
12-114A-18
24-147C-16
24-147A-18
ETHER SW.
FROM DELCO RLY. R33 (87A) SEE P. 4.1
FROM BOSCH RLY RA3(87A) R33 (87A) SEE P. 4.2
24-147A-18
FROM CB10 SEE P.4.1
24-90B-18
C12
PARK PRESSURE SW. N.C.
C48
C12
24-91B-16
TO PARKING BRAKE T.T.L.T. MODULE C572 (16) SEE P. 23.1
91C
0C
PARK PRESSURE SW. N.C.
C48
C11
85A
24VI POWER FROM FR.JCT.BOX SEE P.1.1
24-241A-16
C523
F7
5A
C4
C48
24-85C-18
C523
24-91-16
TO FAST IDLE SW. SEE P.5.1
TO DIODE D19 SEE P 9.1
TO STOP RLY R6(86) SEE P 9.3
TO R62 SEE P 5.1
24VI FROM ENGINE CTR. SW. SEE P.4.1
24V POWER FROM RR. JCT. BOX JCT. "H SEE P. 1.1
R99
24-85F-18
24-24B-14
CB124
6A
24-290A-16
0-0-18
RS
24-290-16
FAN CTRL SPEED" 1 FROM DDEC3 ECM C32 (A2) SEE P. 5.1
FAN CTRL SPEED" 2 FROM DDEC3 ENGINE HARNESS ECM 30 WAY CONNECTOR CAVITY W-3
C414
C397
C415
C416
555-18
563-18
0-0A-16
RS
24-85-18
0-OR-16
C508
TIME DELAY RF3
RS18 75KΩ
24-85F-18
C508
24-85F-18
R84
R85
RF1
RF2
291-16
292-16
0-125-18
C508
D83
0-125W-18
C508
FROM RETARD. SYS. CONNECTOR C20 SEE P. 21
YEL/GRN
BRN
BLUE
C426 C397
C15
24-290-16
0-291-16
0-292-16
STEP 1
STEP 2
F.C.
DDEC DATA LINK FROM ECM C32 SEE P.5.1
900-18
901-18
FROM 12V BATTERY SEE P.2.1
12-251-18
FROM DDEC 12V IGNITION SEE P.5.1
12-439-18
EXTERIOR LIGHTING FROM CB40 SEE P 9.1
12-63B-18
FROM DDEC BATTERY GRD SEE P.5.1
0-953-18
2A
C500
C501
12-750-18
ELECTRONIC CONTROLS
FUEL WATER FILTER
ETHER COLD START
PARKING BRAKE ALARM & SWITCH
RADIATOR FAN CLUTCH
PRODRIVER

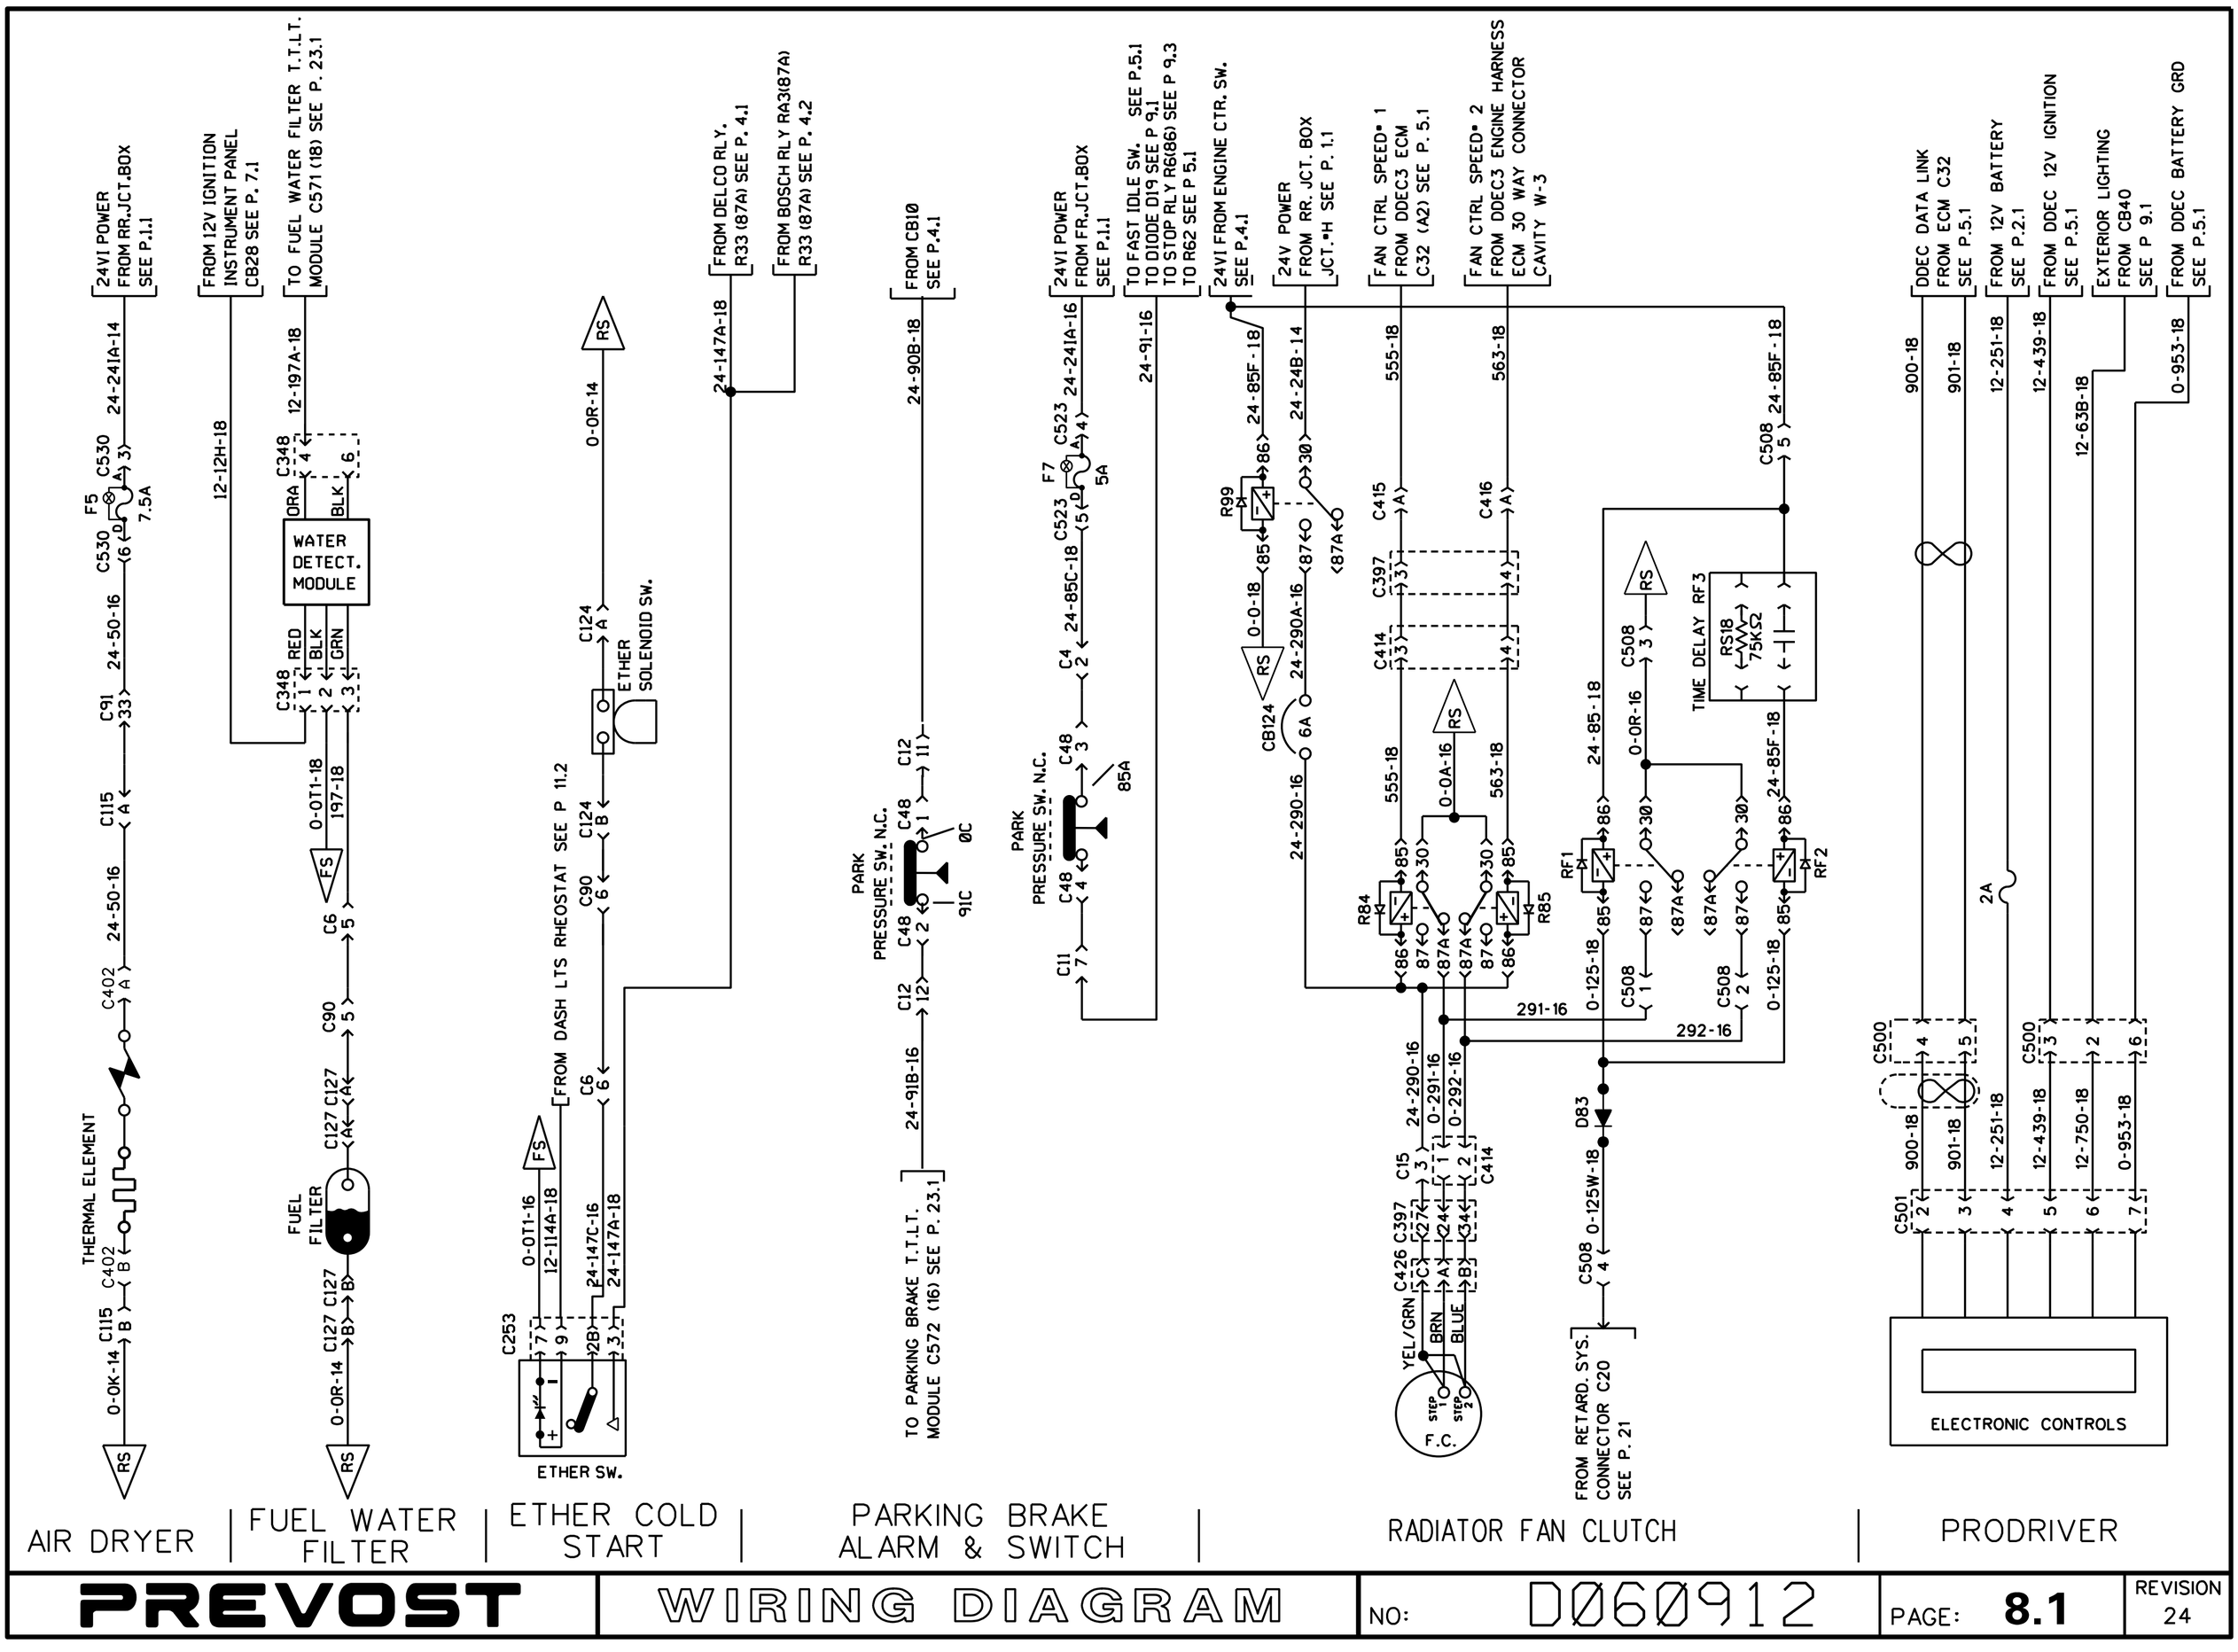
AIR DRYER
FUEL WATER FILTER
ETHER COLD START
PARKING BRAKE ALARM & SWITCH
RADIATOR FAN CLUTCH
PRODRIVER
24VI POWER FROM RR.JCT.BOX SEE P.1.1
FROM 12V IGNITION INSTRUMENT PANEL CB28 SEE P. 7.1
TO FUEL WATER FILTER T.T.L.T. MODULE C571 (18) SEE P. 23.1
WATER DETECT. MODULE
THERMAL ELEMENT
FUEL FILTER
ETHER SOLENOID SW.
FROM DASH LTS RHEOSTAT SEE P 11.2
ETHER SW.
FROM DELCO RLY. R33 (87A) SEE P. 4.1
FROM BOSCH RLY RA3(87A) R33 (87A) SEE P. 4.2
FROM CB10 SEE P.4.1
PARK PRESSURE SW. N.C.
TO PARKING BRAKE T.T.L.T. MODULE C572 (16) SEE P. 23.1
24VI POWER FROM FR.JCT.BOX SEE P.1.1
TO FAST IDLE SW. SEE P.5.1
TO DIODE D19 SEE P 9.1
TO STOP RLY R6(86) SEE P 9.3
TO R62 SEE P 5.1
24VI FROM ENGINE CTR. SW. SEE P.4.1
24V POWER FROM RR. JCT. BOX JCT.*H SEE P. 1.1
FAN CTRL SPEED* 1 FROM DDEC3 ECM C32 (A2) SEE P. 5.1
FAN CTRL SPEED* 2 FROM DDEC3 ENGINE HARNESS ECM 30 WAY CONNECTOR CAVITY W-3
TIME DELAY RF3
RS18 75KΩ
F.C.
FROM RETARD. SYS. CONNECTOR C20 SEE P. 21
DDEC DATA LINK FROM ECM C32 SEE P. 5.1
FROM 12V BATTERY SEE P. 2.1
FROM DDEC 12V IGNITION SEE P. 5.1
EXTERIOR LIGHTING FROM CB40 SEE P 9.1
FROM DDEC BATTERY GRD SEE P. 5.1
ELECTRONIC CONTROLS

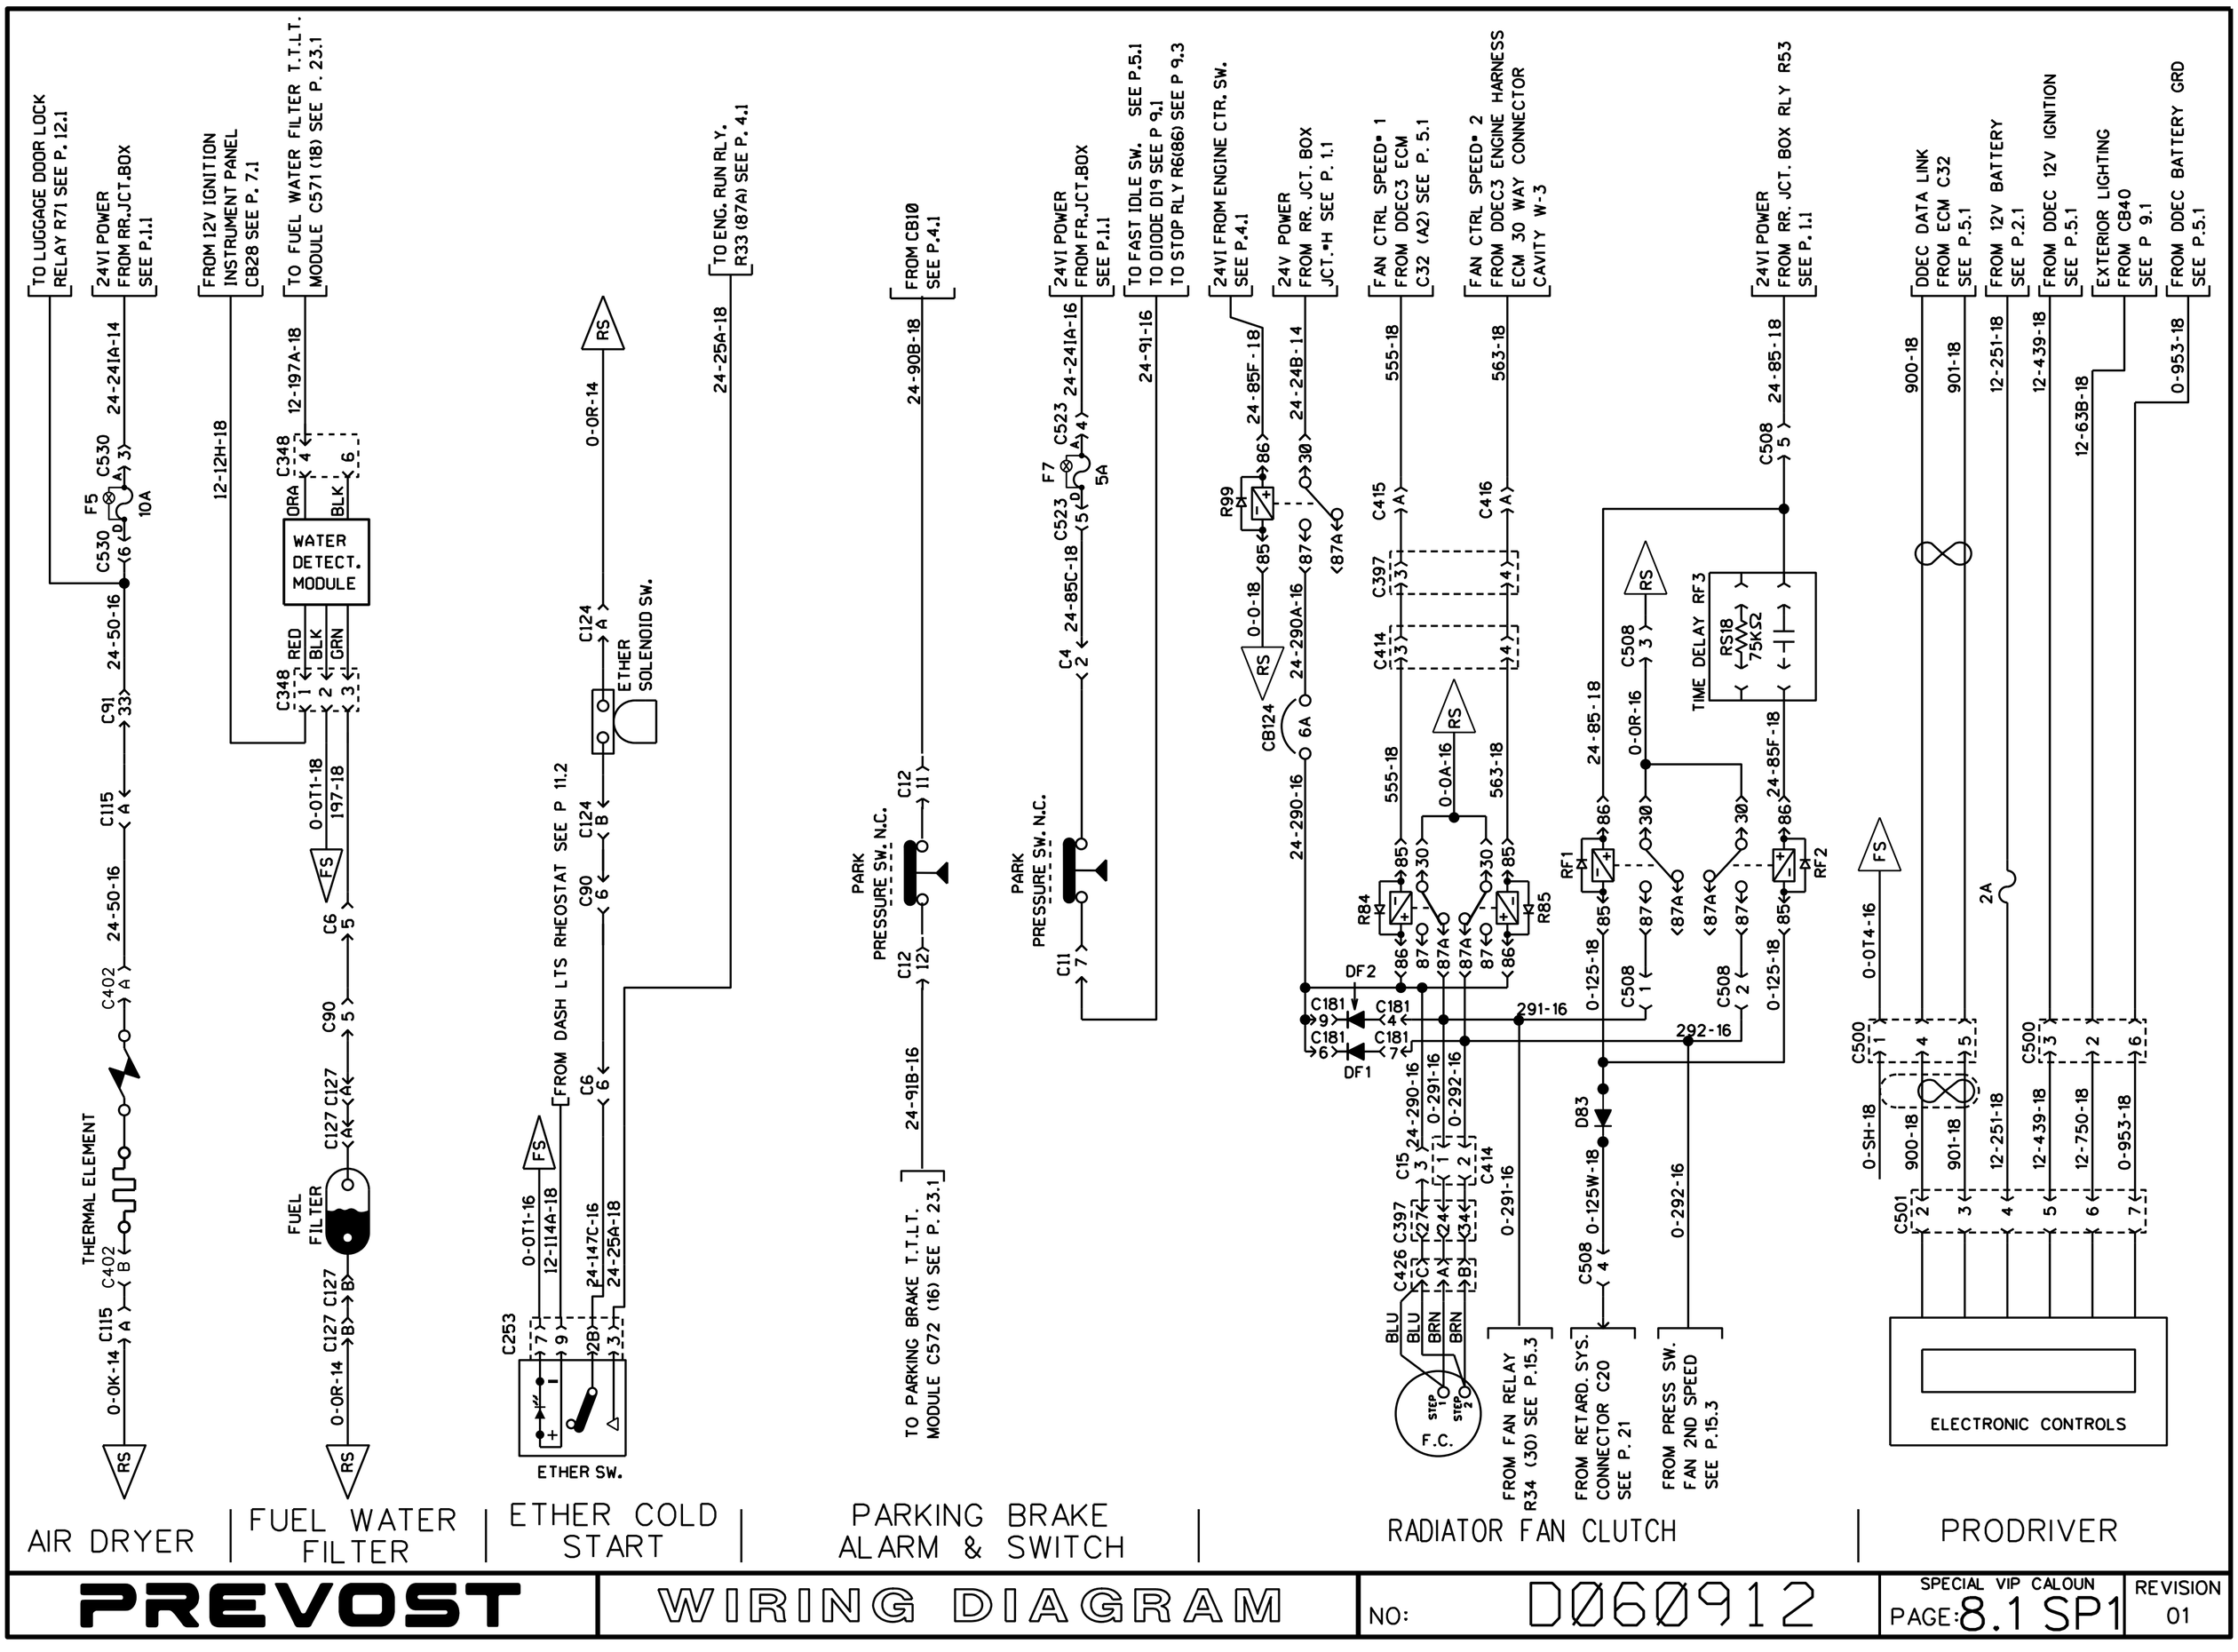
AIR DRYER
TO LUGGAGE DOOR LOCK RELAY R71 SEE P. 12.1
24VI POWER FROM RR.JCT.BOX SEE P.1.1
F5 10A
C530
24-241A-14
24-50-16
C91
C115
THERMAL ELEMENT
C402
0-0K-14
RS
FUEL WATER FILTER
FROM 12V IGNITION INSTRUMENT PANEL C828 SEE P. 7.1
12-12H-18
TO FUEL WATER FILTER T.T.L.T. MODULE C571 (18) SEE P. 23.1
12-197A-18
C348
WATER DETECT. MODULE
ORA
BLK
RED
GRN
0-0T1-18
197-18
C127
C90
C6
FUEL FILTER
0-OR-14
ETHER COLD START
SEE P 11.2
C124
ETHER SOLENOID SW.
0-OR-14
C253
0-0T1-16
12-114A-18
24-147C-16
24-25A-18
FROM DASH LTS RHEOSTAT SEE P 11.2
ETHER SW.
TO ENG. RUN RLY. R33 (87A) SEE P. 4.1
24-25A-18
PARKING BRAKE ALARM & SWITCH
FROM CB10 SEE P.4.1
24-90B-18
C12
PARK PRESSURE SW. N.C.
24-91B-16
TO PARKING BRAKE T.T.L.T. MODULE C572 (16) SEE P. 23.1
C11
RADIATOR FAN CLUTCH
24VI POWER FROM FR.JCT.BOX SEE P.1.1
24-241A-16
C523
F7 5A
C4
24-85C-18
TO FAST IDLE SW. SEE P.5.1
TO DIODE D19 SEE P 9.1
TO STOP RLY R6(86) SEE P 9.3
24-91-16
24VI FROM ENGINE CTR. SW. SEE P.4.1
R99
24-85F-18
0-0-18
CB124
6A
24-290A-16
24V POWER FROM RR. JCT. BOX JCT.*H SEE P. 1.1
24-24B-14
FAN CTRL SPEED* 1 FROM DDEC3 ECM C32 (A2) SEE P. 5.1
555-18
C415
C397
C414
0-0A-16
FAN CTRL SPEED* 2 FROM DDEC3 ENGINE HARNESS ECM 30 WAY CONNECTOR CAVITY W-3
563-18
C416
24VI POWER FROM RR. JCT. BOX RLY R53 SEE P. 1.1
C508
24-85-18
TIME DELAY RF3
RS18 75KΩ
R84
R85
RF1
RF2
DF1
DF2
C181
291-16
292-16
0-125-18
C508
C15
C426
C397
BLU
BRN
STEP 1
STEP 2
F.C.
0-291-16
0-292-16
D83
0-125W-18
FROM FAN RELAY R34 (30) SEE P.15.3
FROM RETARD. SYS. CONNECTOR C20 SEE P. 21
FROM PRESS SW. FAN 2ND SPEED SEE P.15.3
PRODRIVER
900-18
DDEC DATA LINK FROM ECM C32 SEE P.5.1
901-18
12-251-18
FROM 12V BATTERY SEE P.2.1
12-439-18
FROM DDEC 12V IGNITION SEE P.5.1
12-63B-18
EXTERIOR LIGHTING FROM CB40 SEE P 9.1
0-953-18
FROM DDEC BATTERY GRD SEE P.5.1
0-0T4-16
0-SH-18
C500
C501
2A
12-750-18
ELECTRONIC CONTROLS

PREVOST

WIRING DIAGRAM

NO: D060912

SPECIAL VIP CALOUN

PAGE: 8.1 SP1

REVISION 02

AIR DRYER

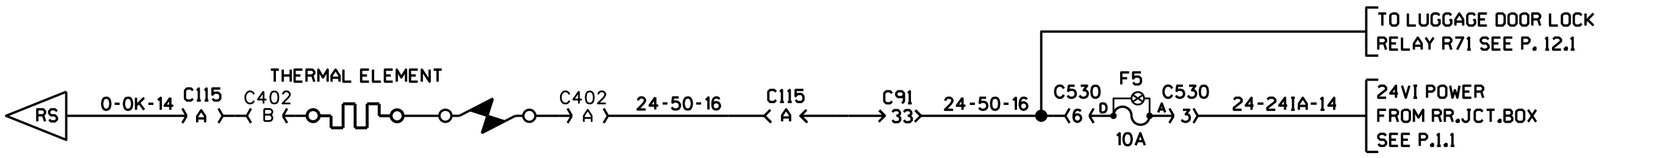

FUEL WATER FILTER

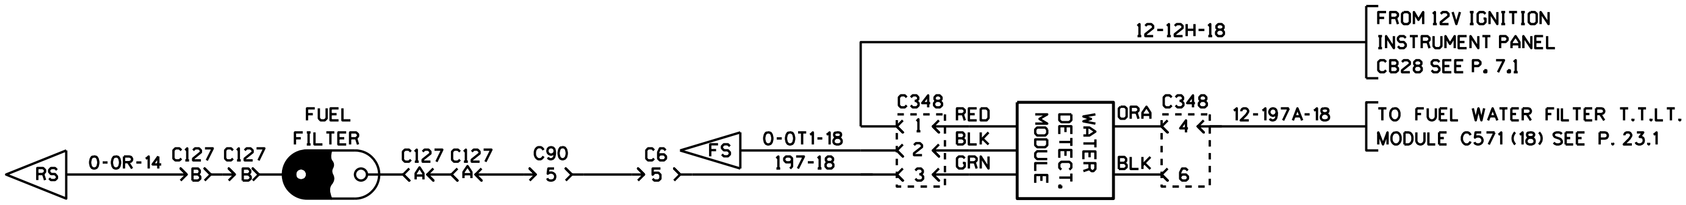

ETHER COLD START

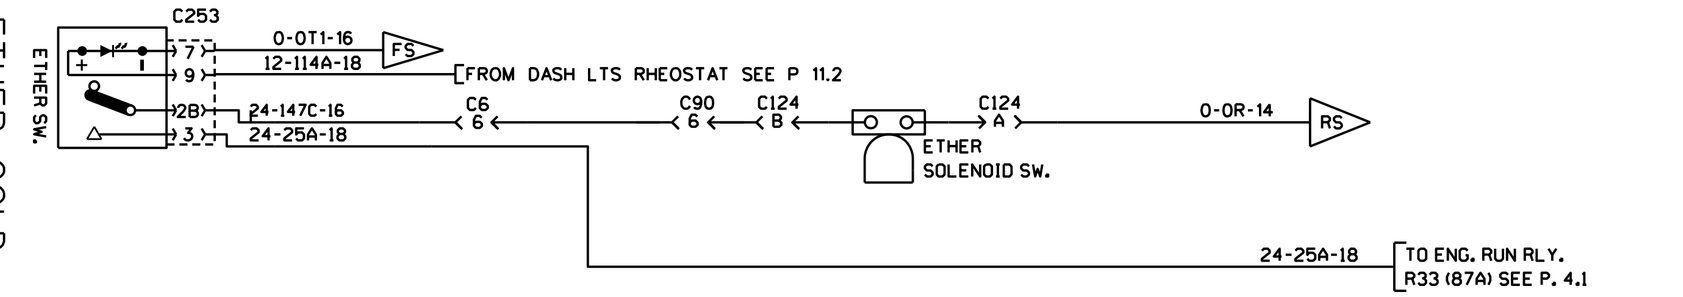

PARKING BRAKE SWITCH

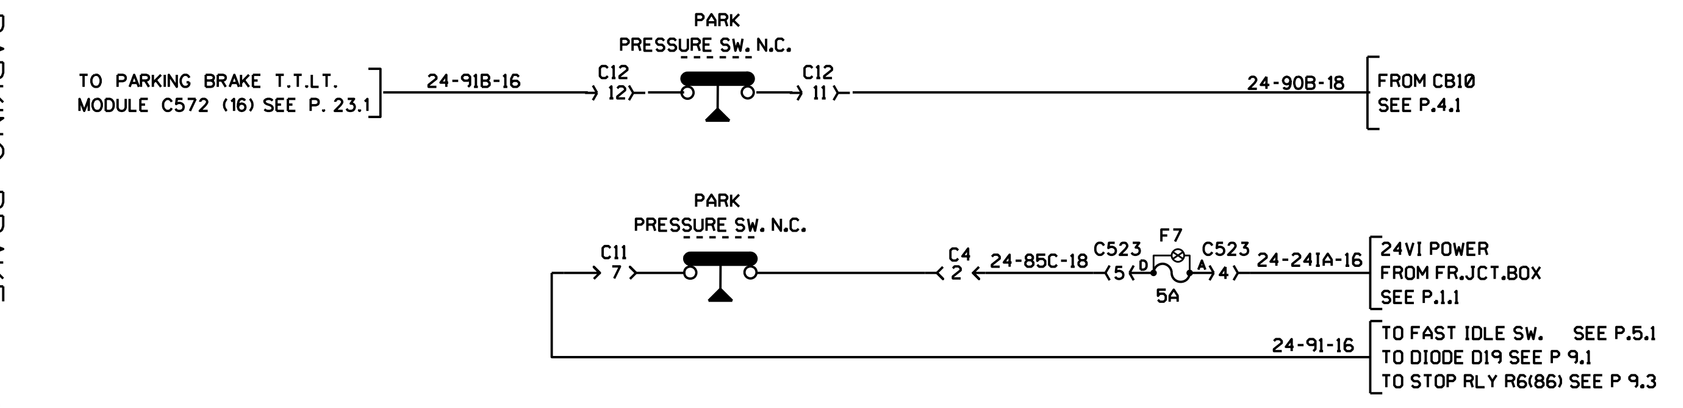

RADIATOR FAN CLUTCH

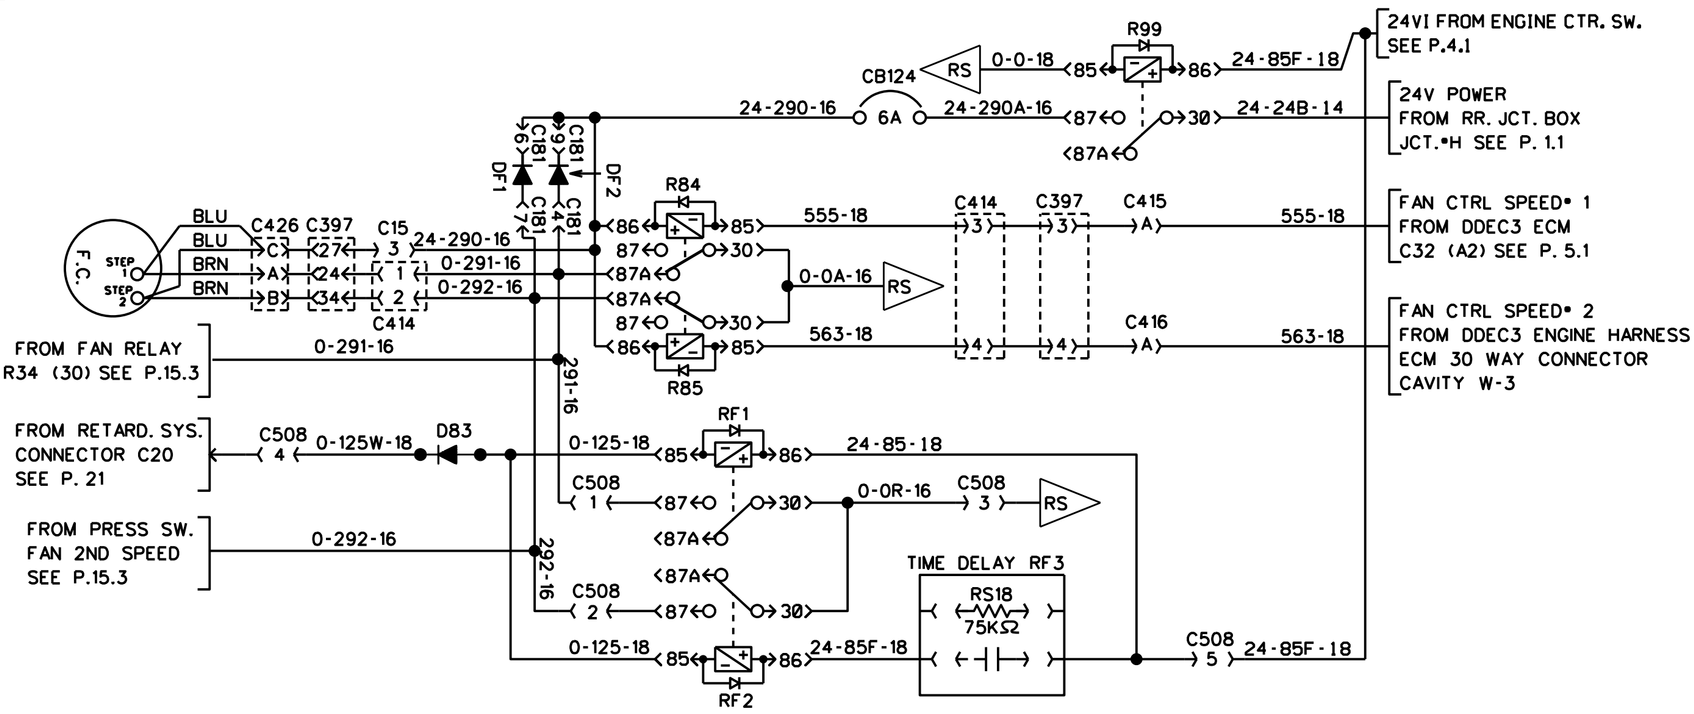

PRODRIVER

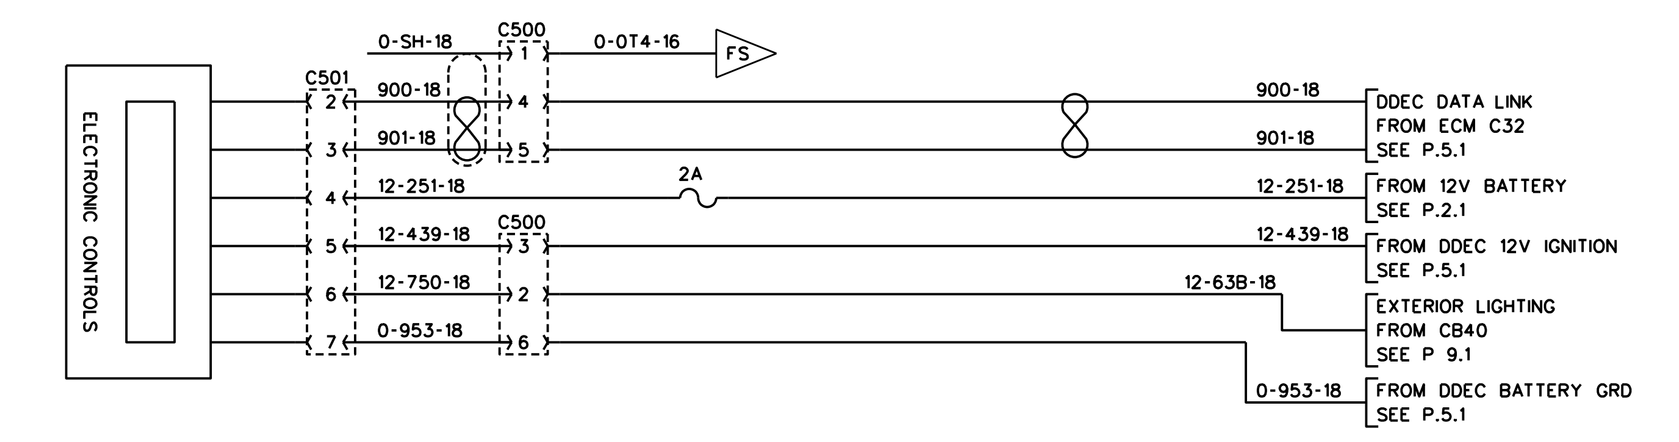

PREVOST

WIRING DIAGRAM

NO: D060912

SPECIAL VIP CALOUN

PAGE: 8.1 SP1

REVISION 09

AIR DRYER

FUEL WATER FILTER

ETHER COLD START

PARKING BRAKE & ALARM SWITCH

RADIATOR FAN CLUTCH

PRODRIVER

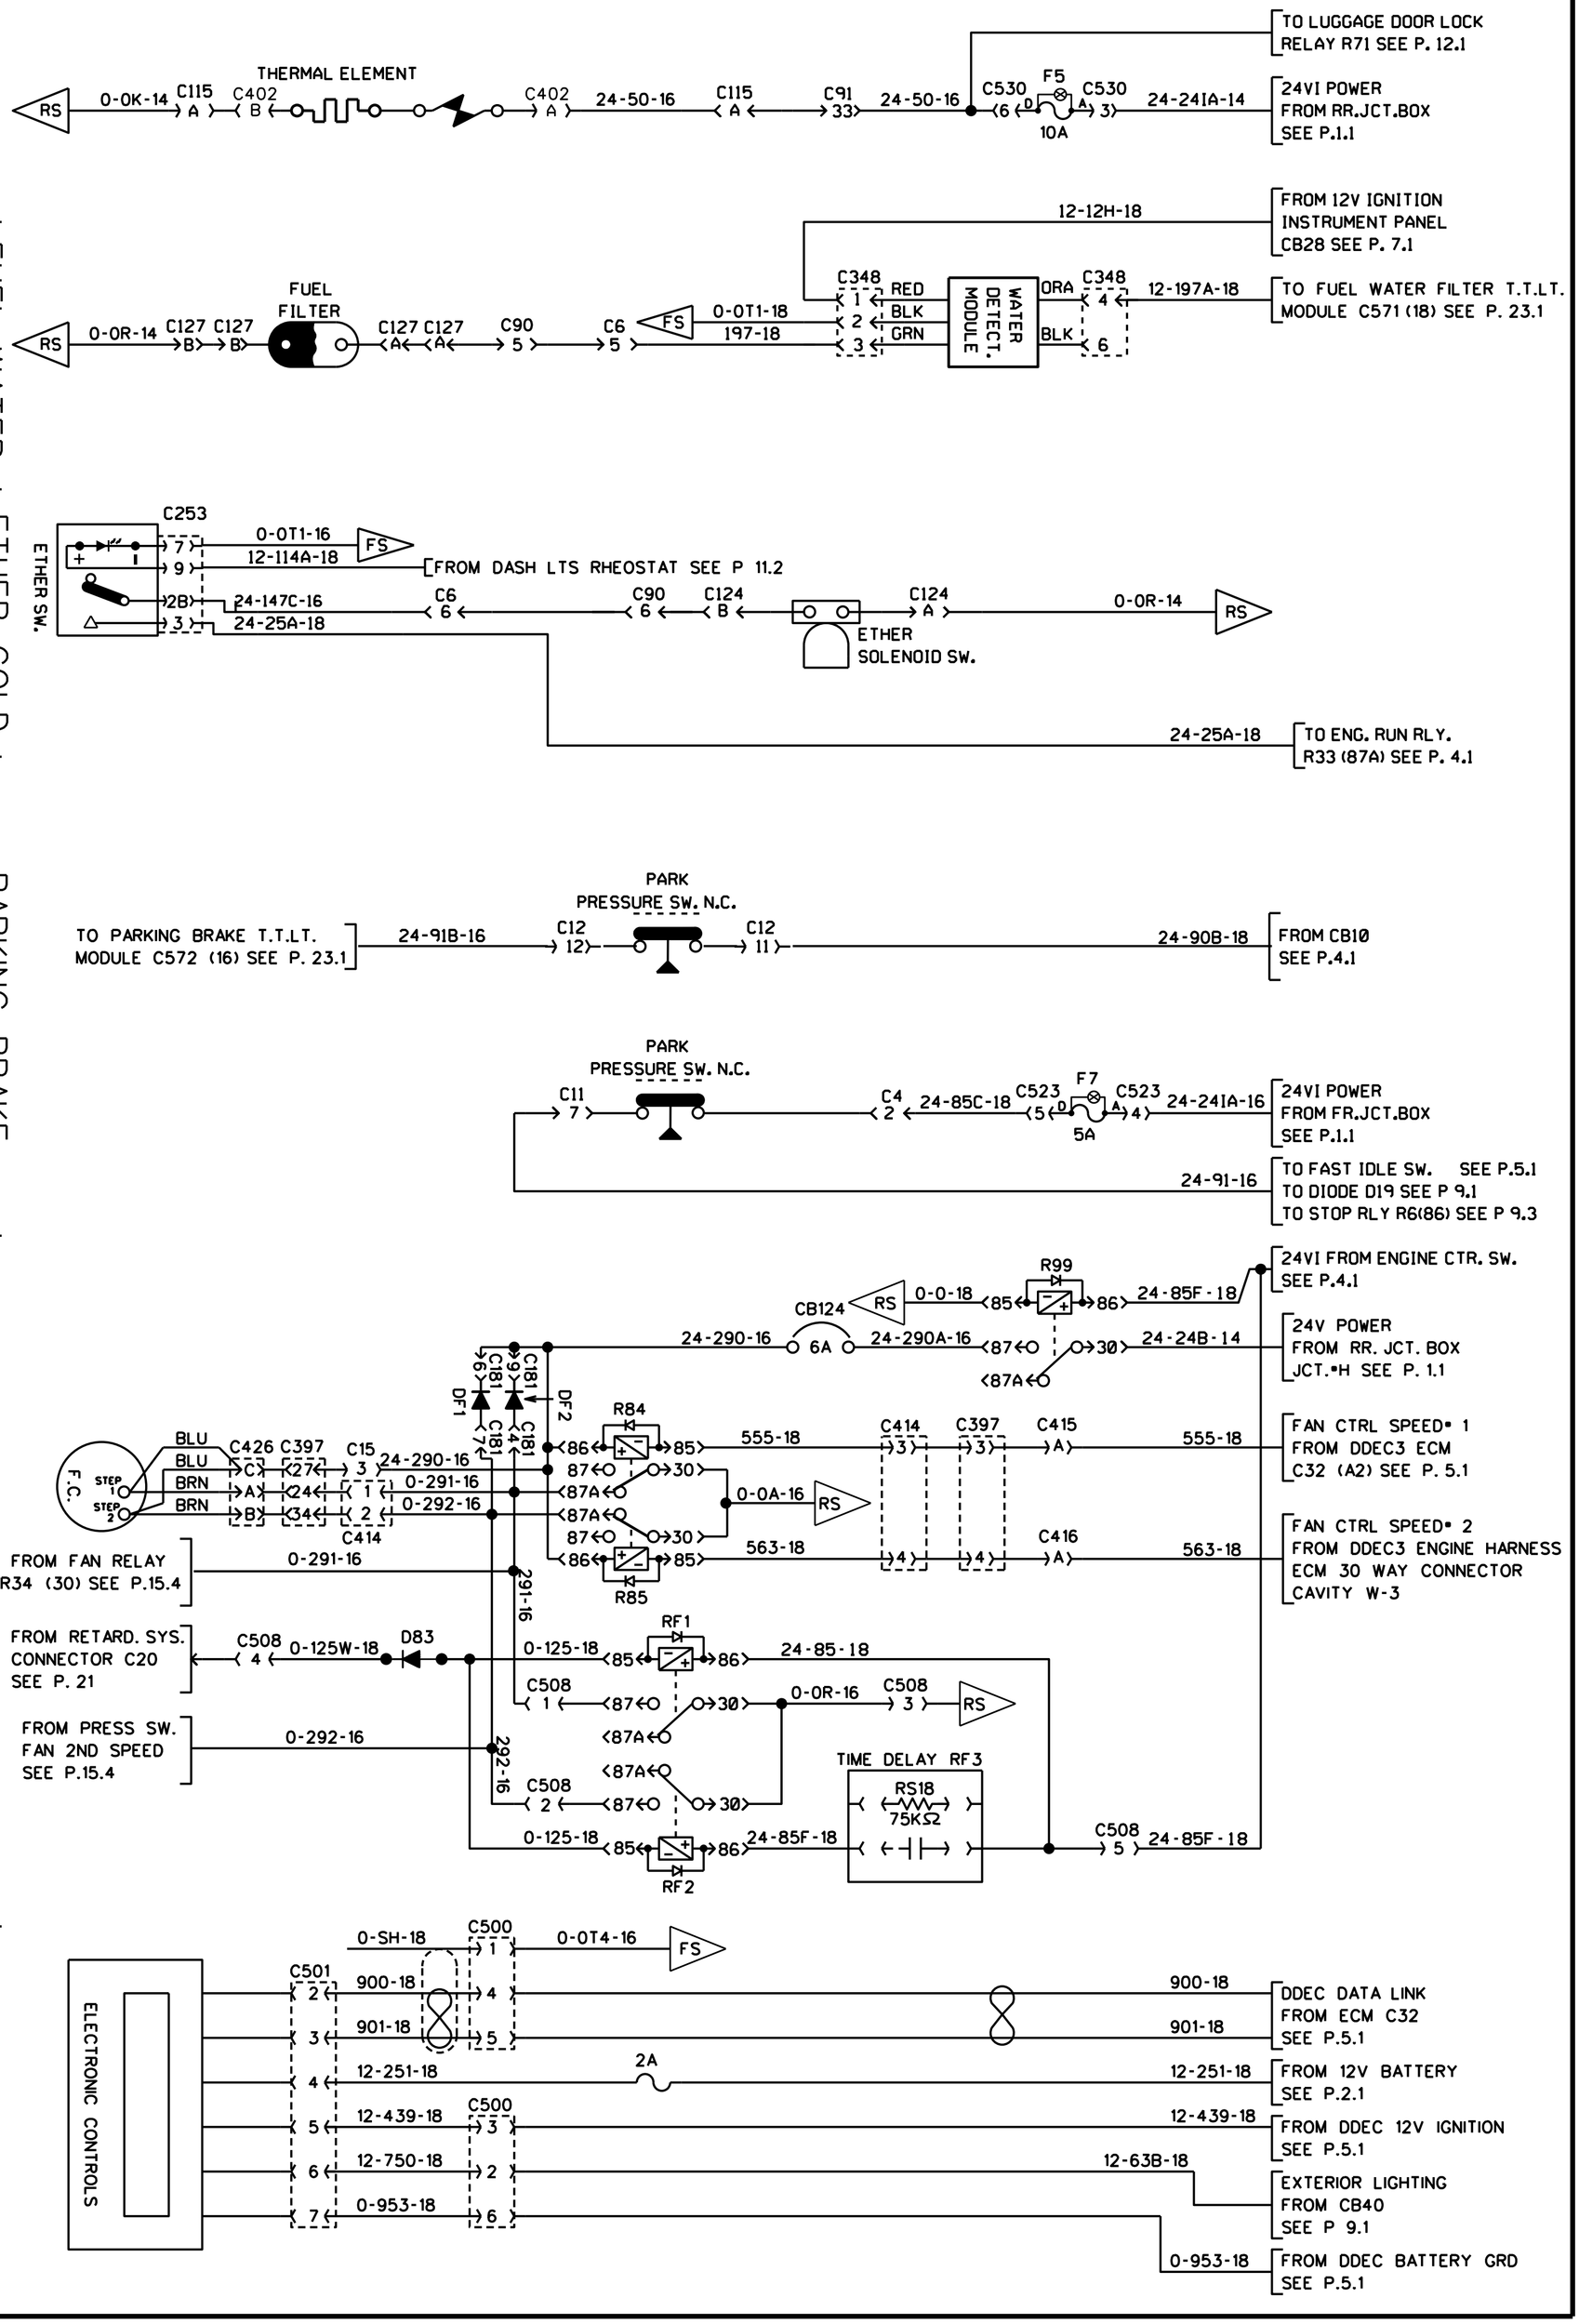

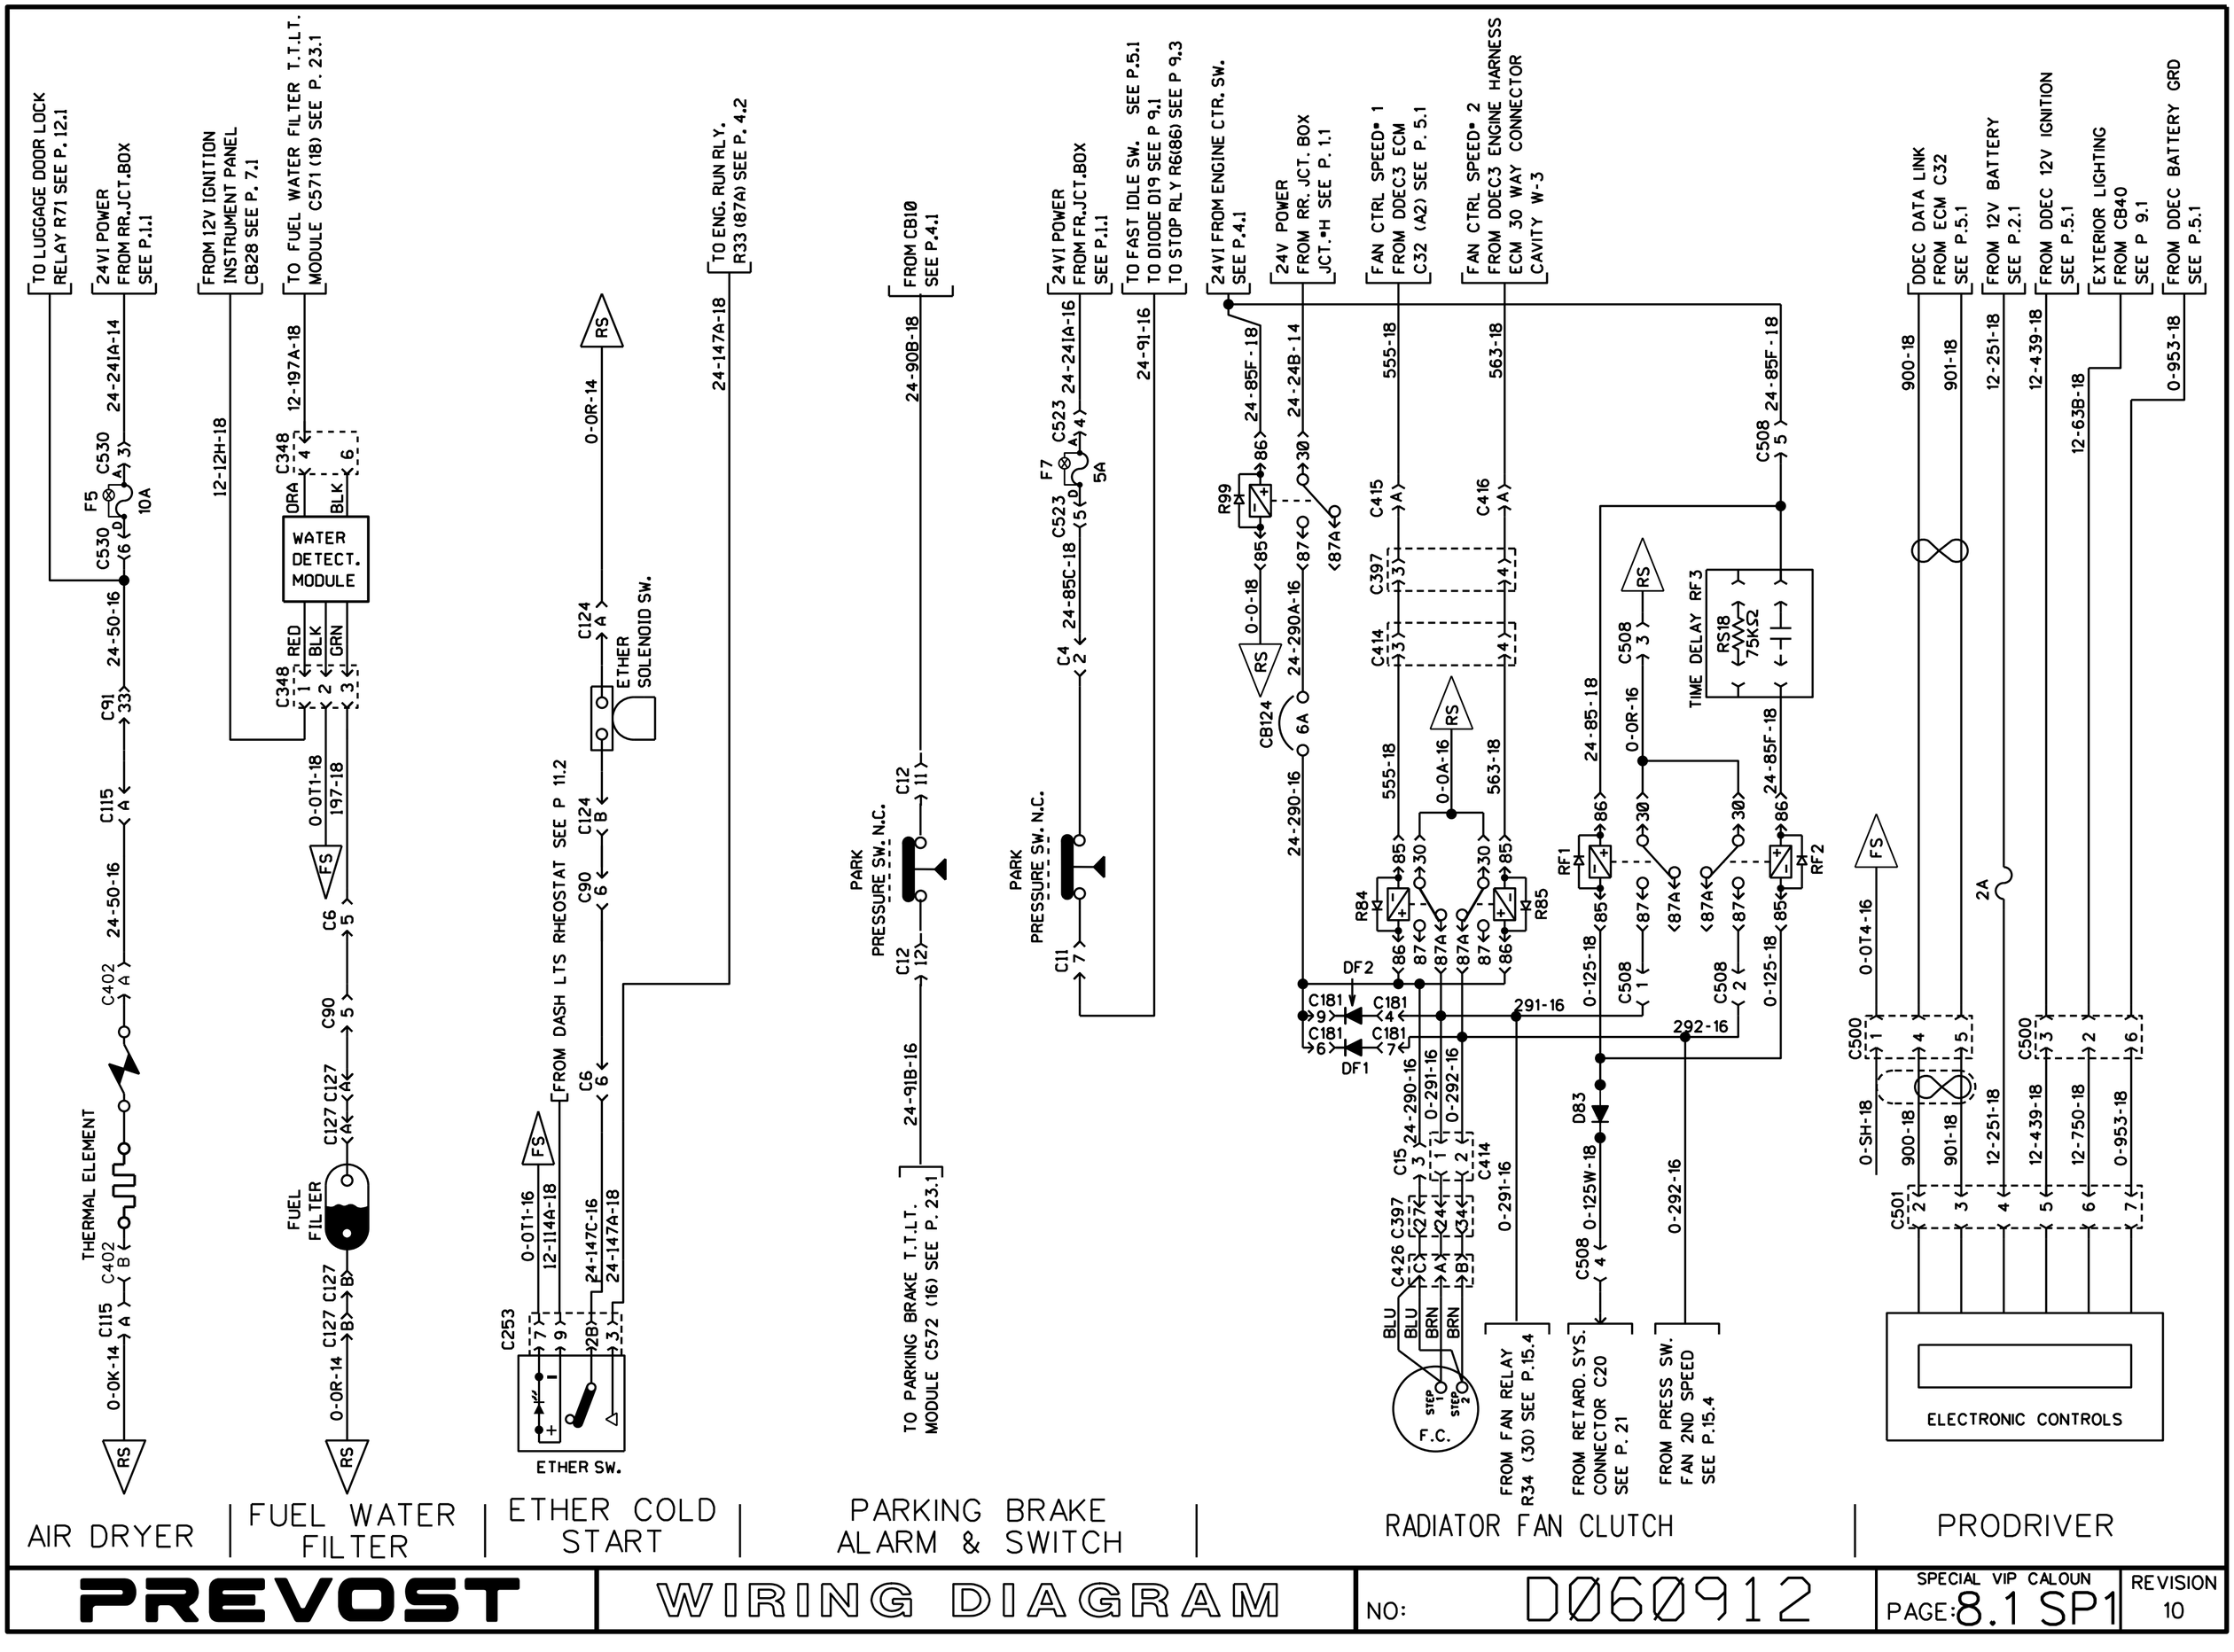

PREVOST	WIRING DIAGRAM	NO: D060912	SPECIAL VIP CALOUN PAGE: 8.1 SP1	REVISION 10

PREVOST

WIRING DIAGRAM

NO: D060912

SPECIAL VIP CALOUN

PAGE: 8.1 SP1

REVISION 13

AIR DRYER

FUEL WATER FILTER

ETHER COLD START

PARKING BRAKE SWITCH

RADIATOR FAN CLUTCH

PRODRIVER

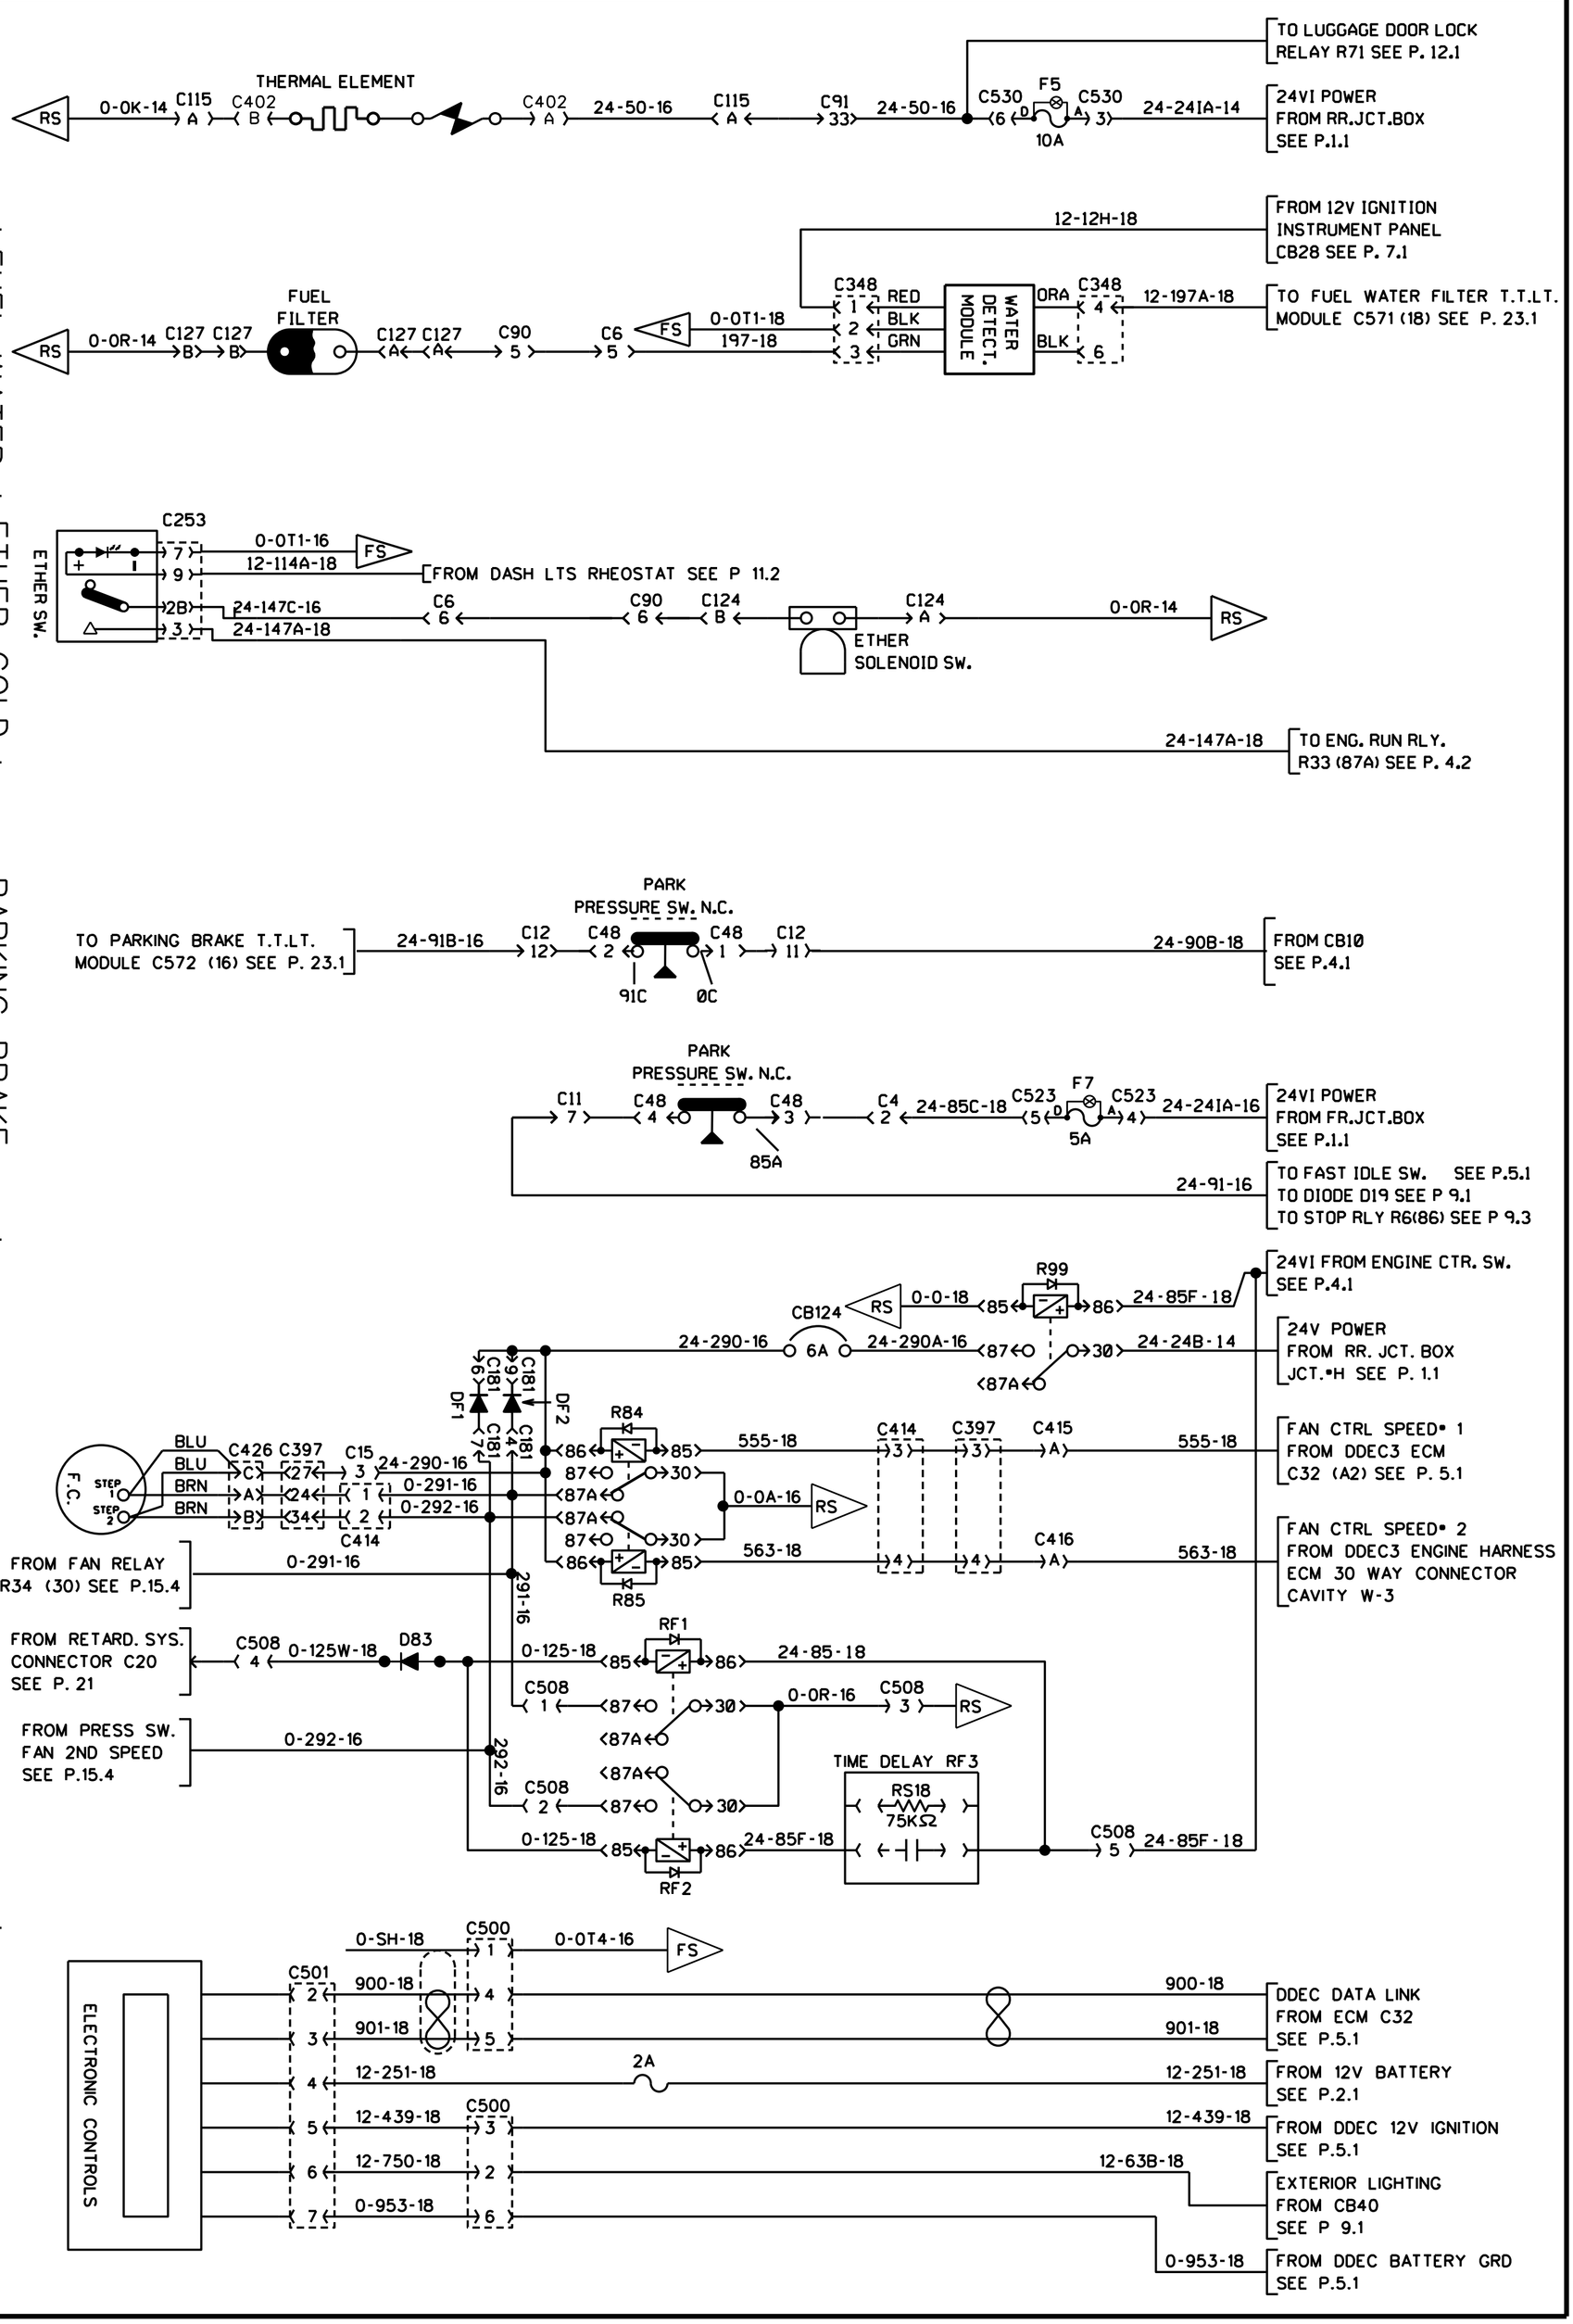

PREVOST

WIRING DIAGRAM

NO: D060912

SPECIAL VIP CALOUN
PAGE: 8.1 SP1

REVISION 17

AIR DRYER

FUEL WATER FILTER

ETHER COLD START

PARKING BRAKE ALARM & SWITCH

RADIATOR FAN CLUTCH

PRODRIVER

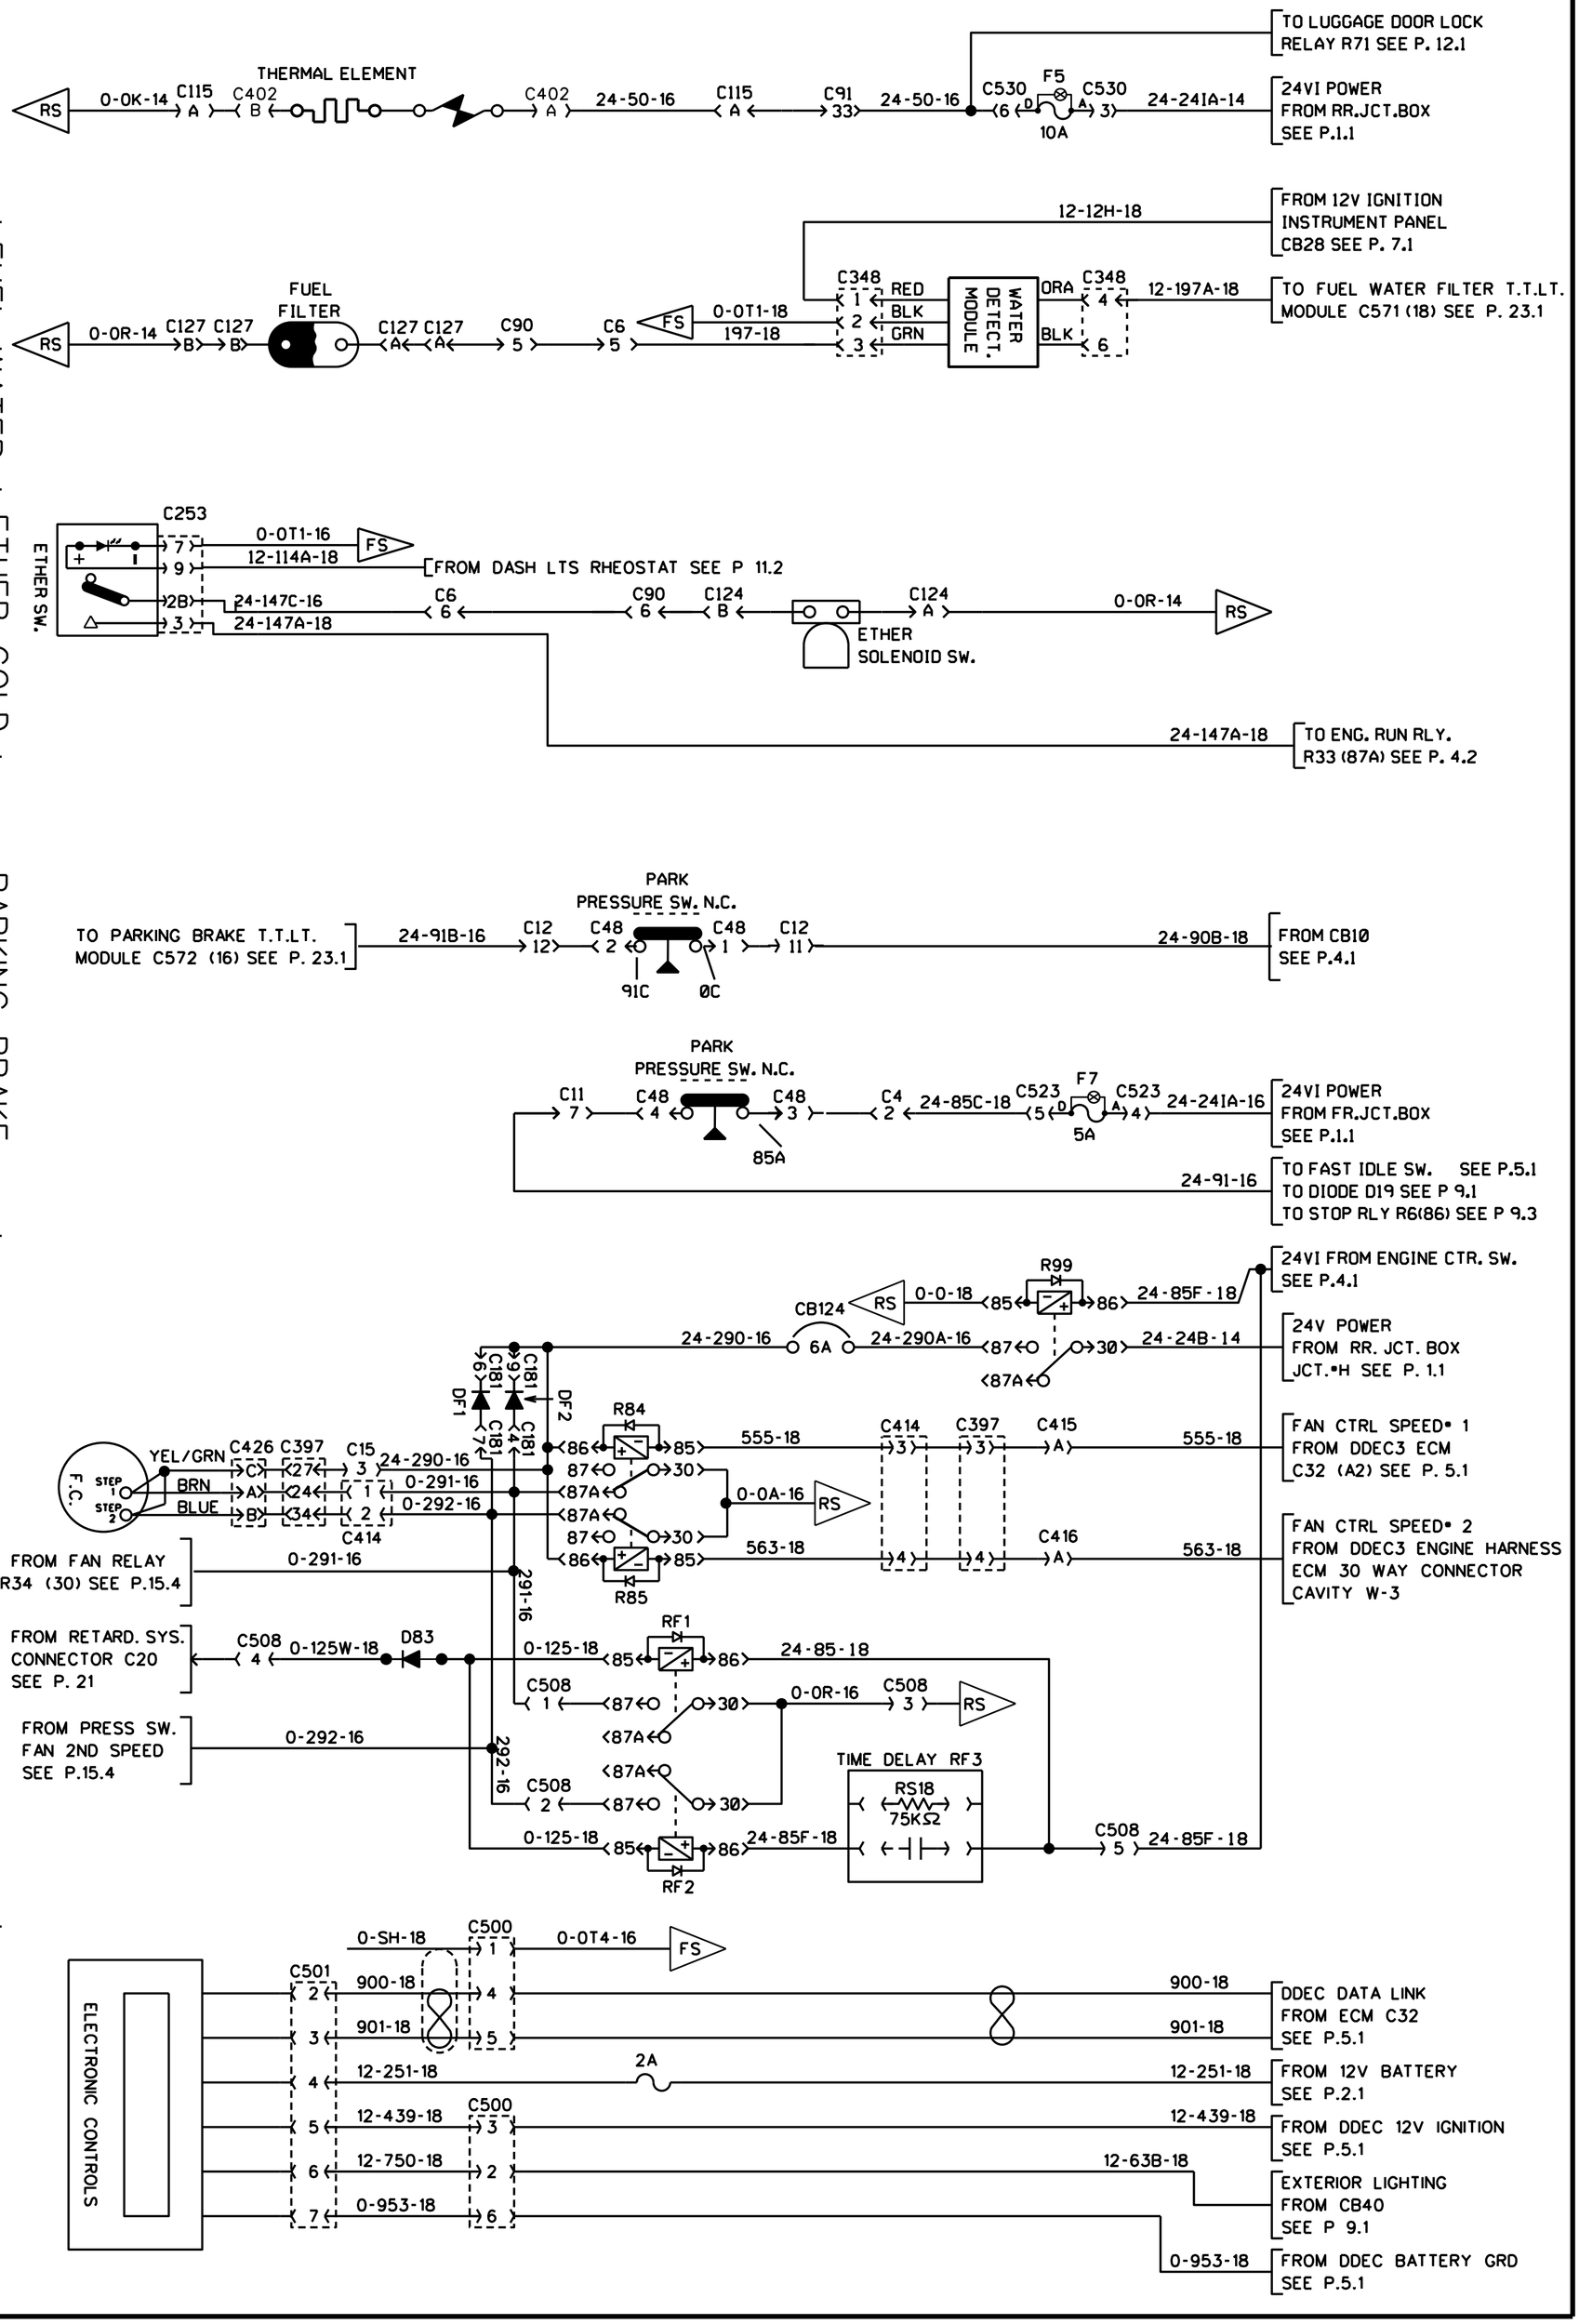

PREVOST

FUEL WATER FILTER | ETHER COLD START | PARKING BRAKE ALARM & SWITCH | WIRING DIAGRAM | RADIATOR FAN CLUTCH | PRODRIVER

NO: D06091 2

SPECIAL VIP CALOUN PAGE: 8.1 SP1

REVISION 19

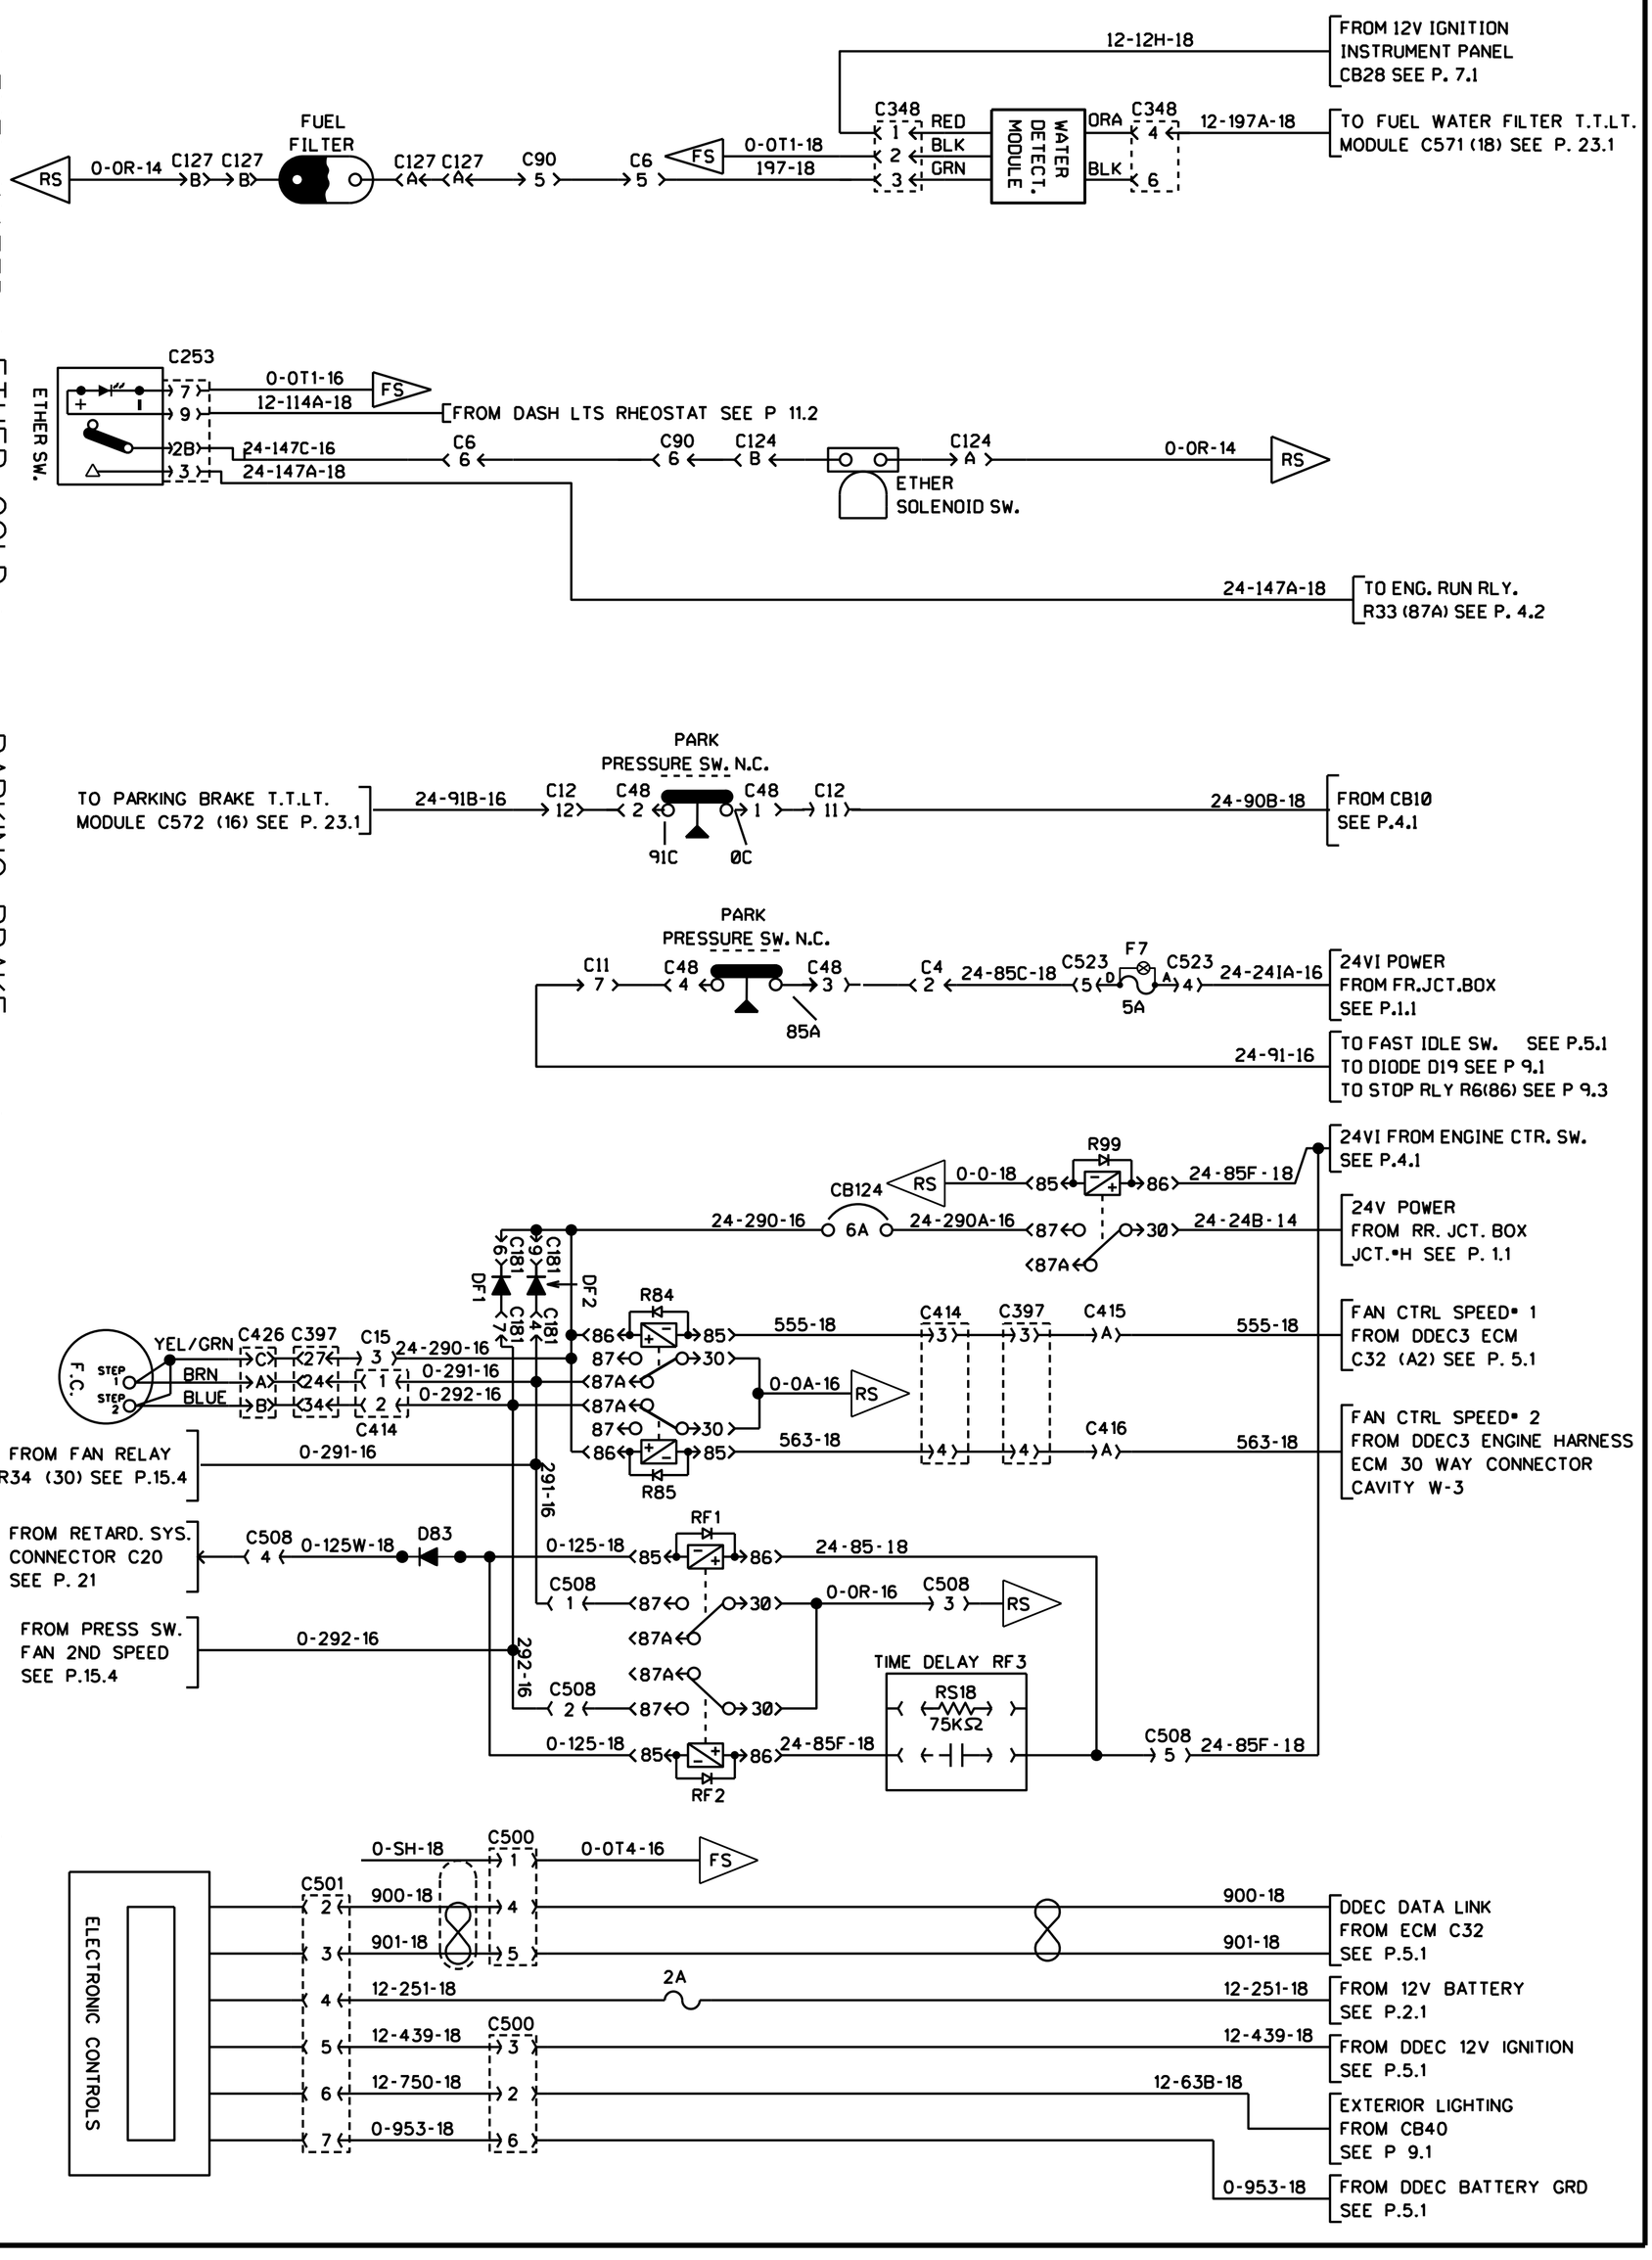

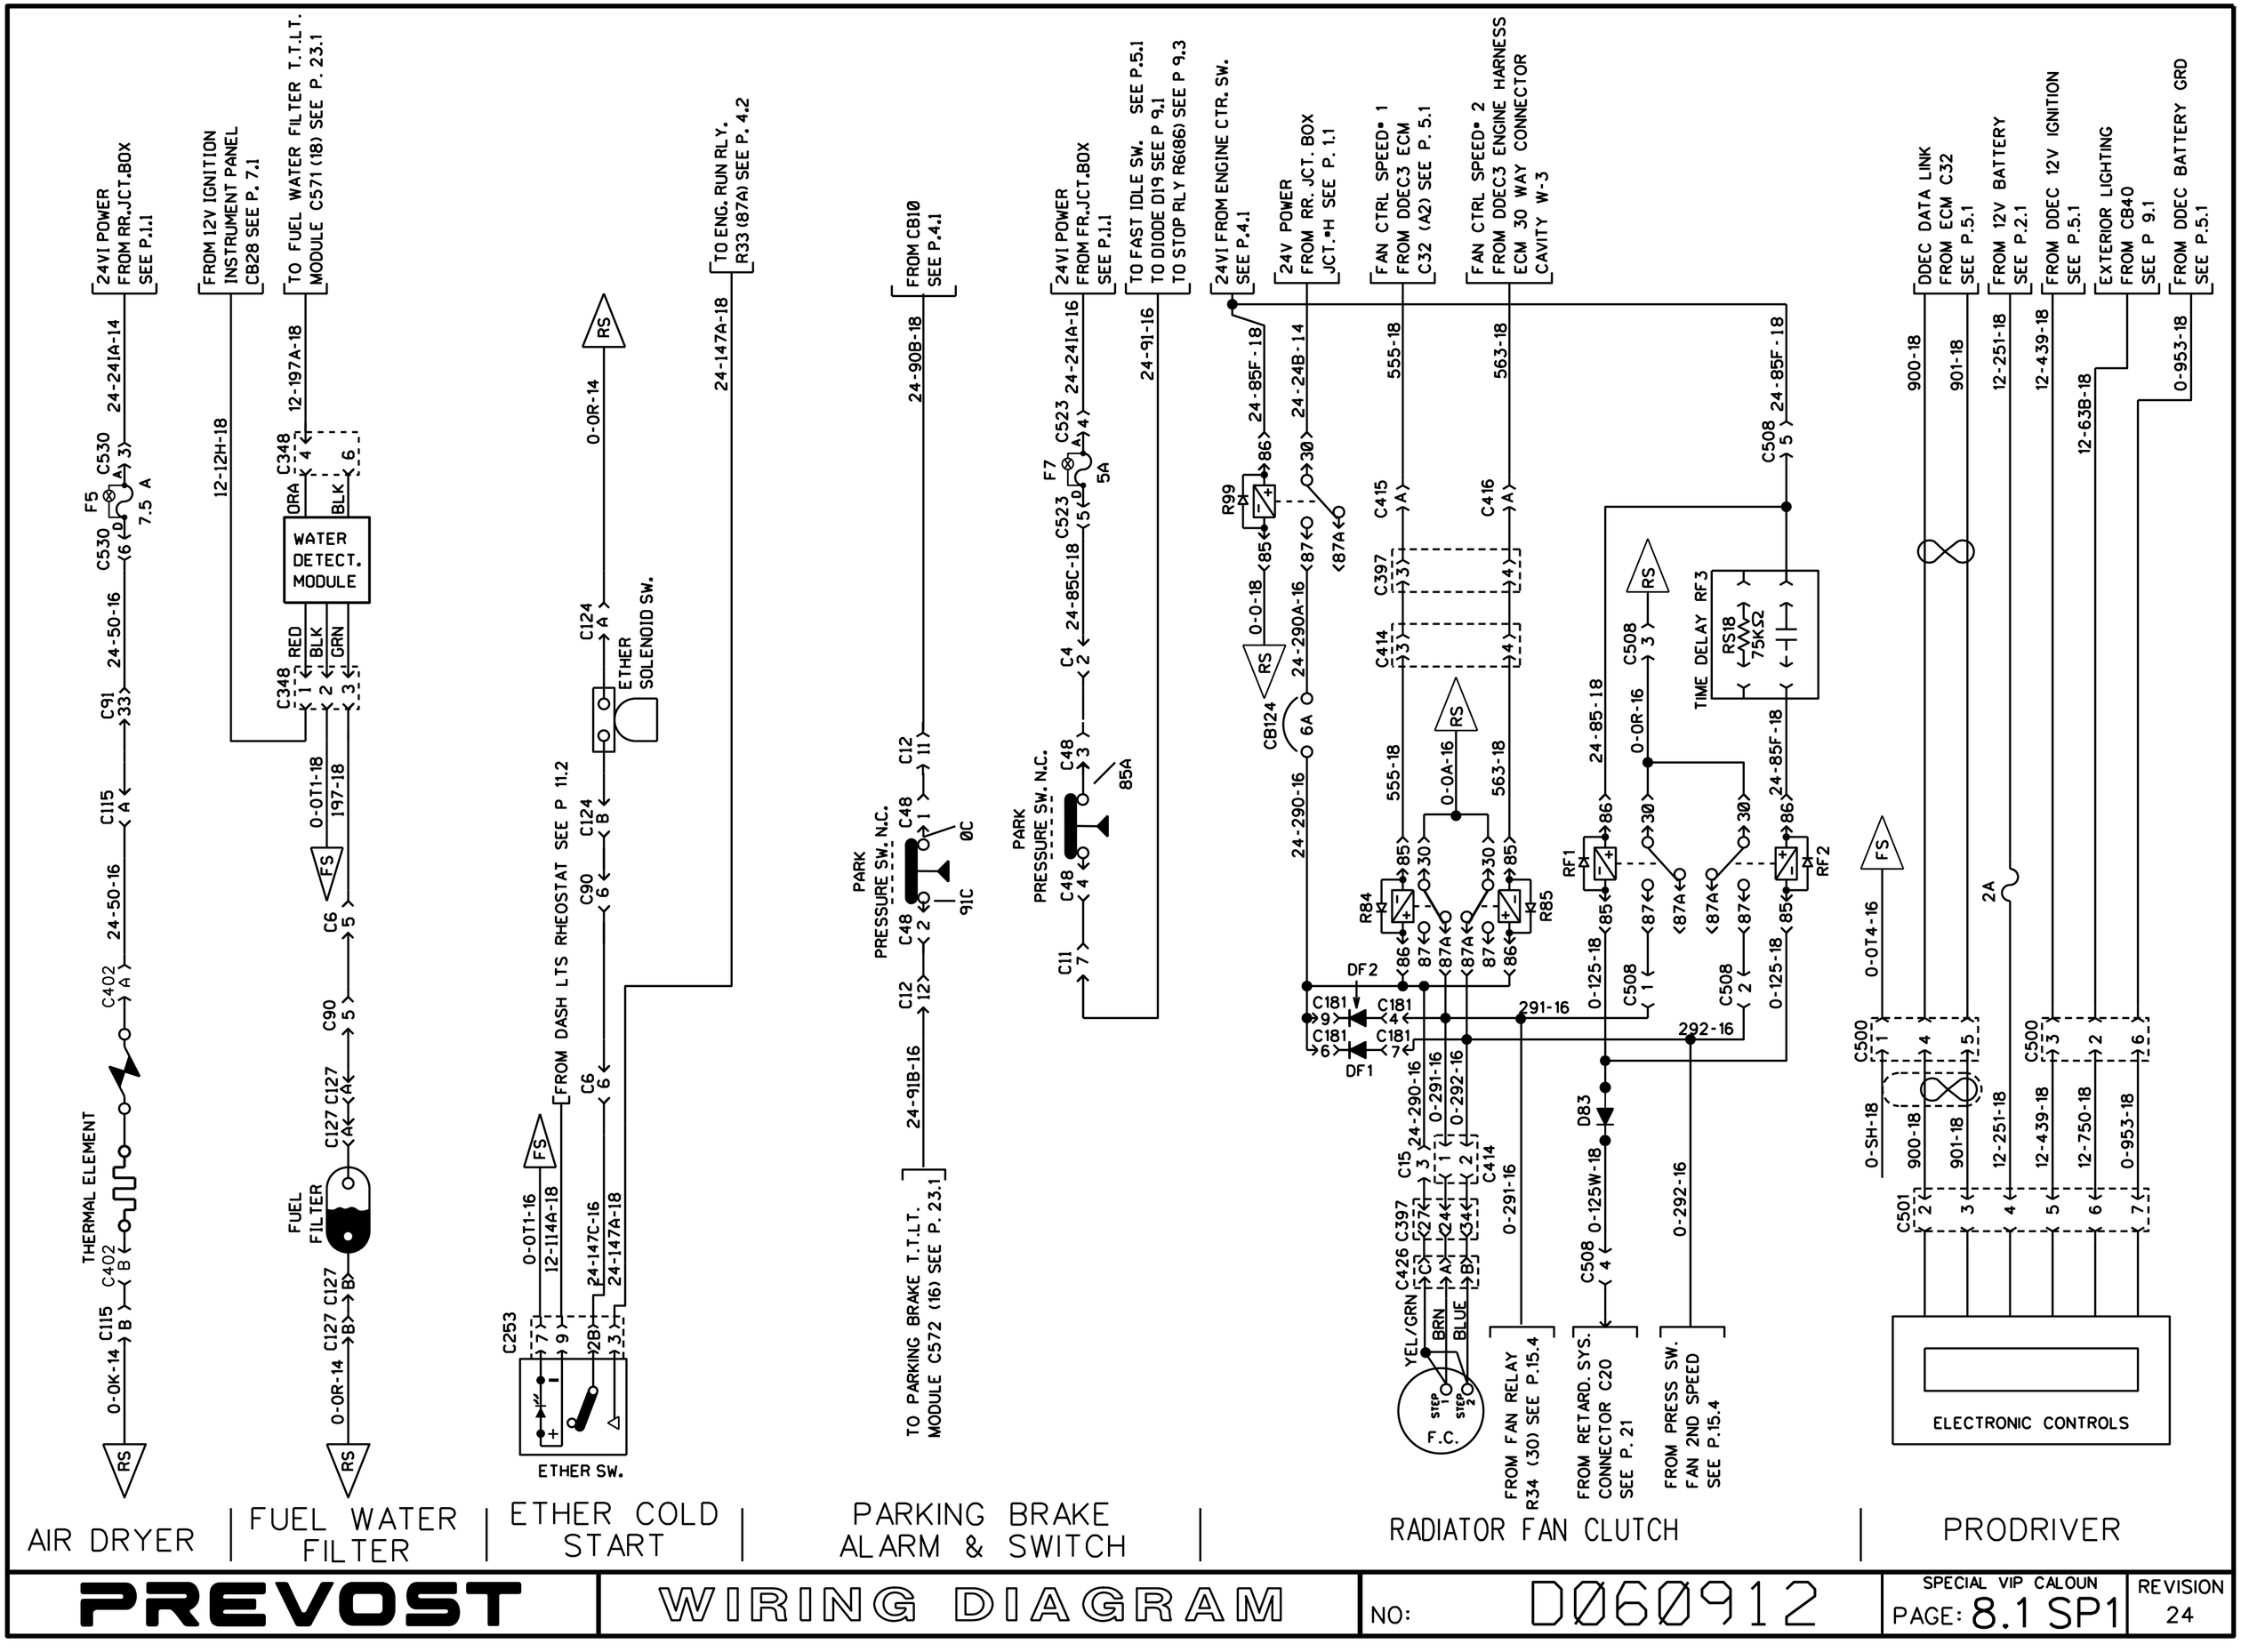

PREVOST	WIRING DIAGRAM	NO: D060912	SPECIAL VIP CALOUN PAGE: 8.1 SP1	REVISION 24

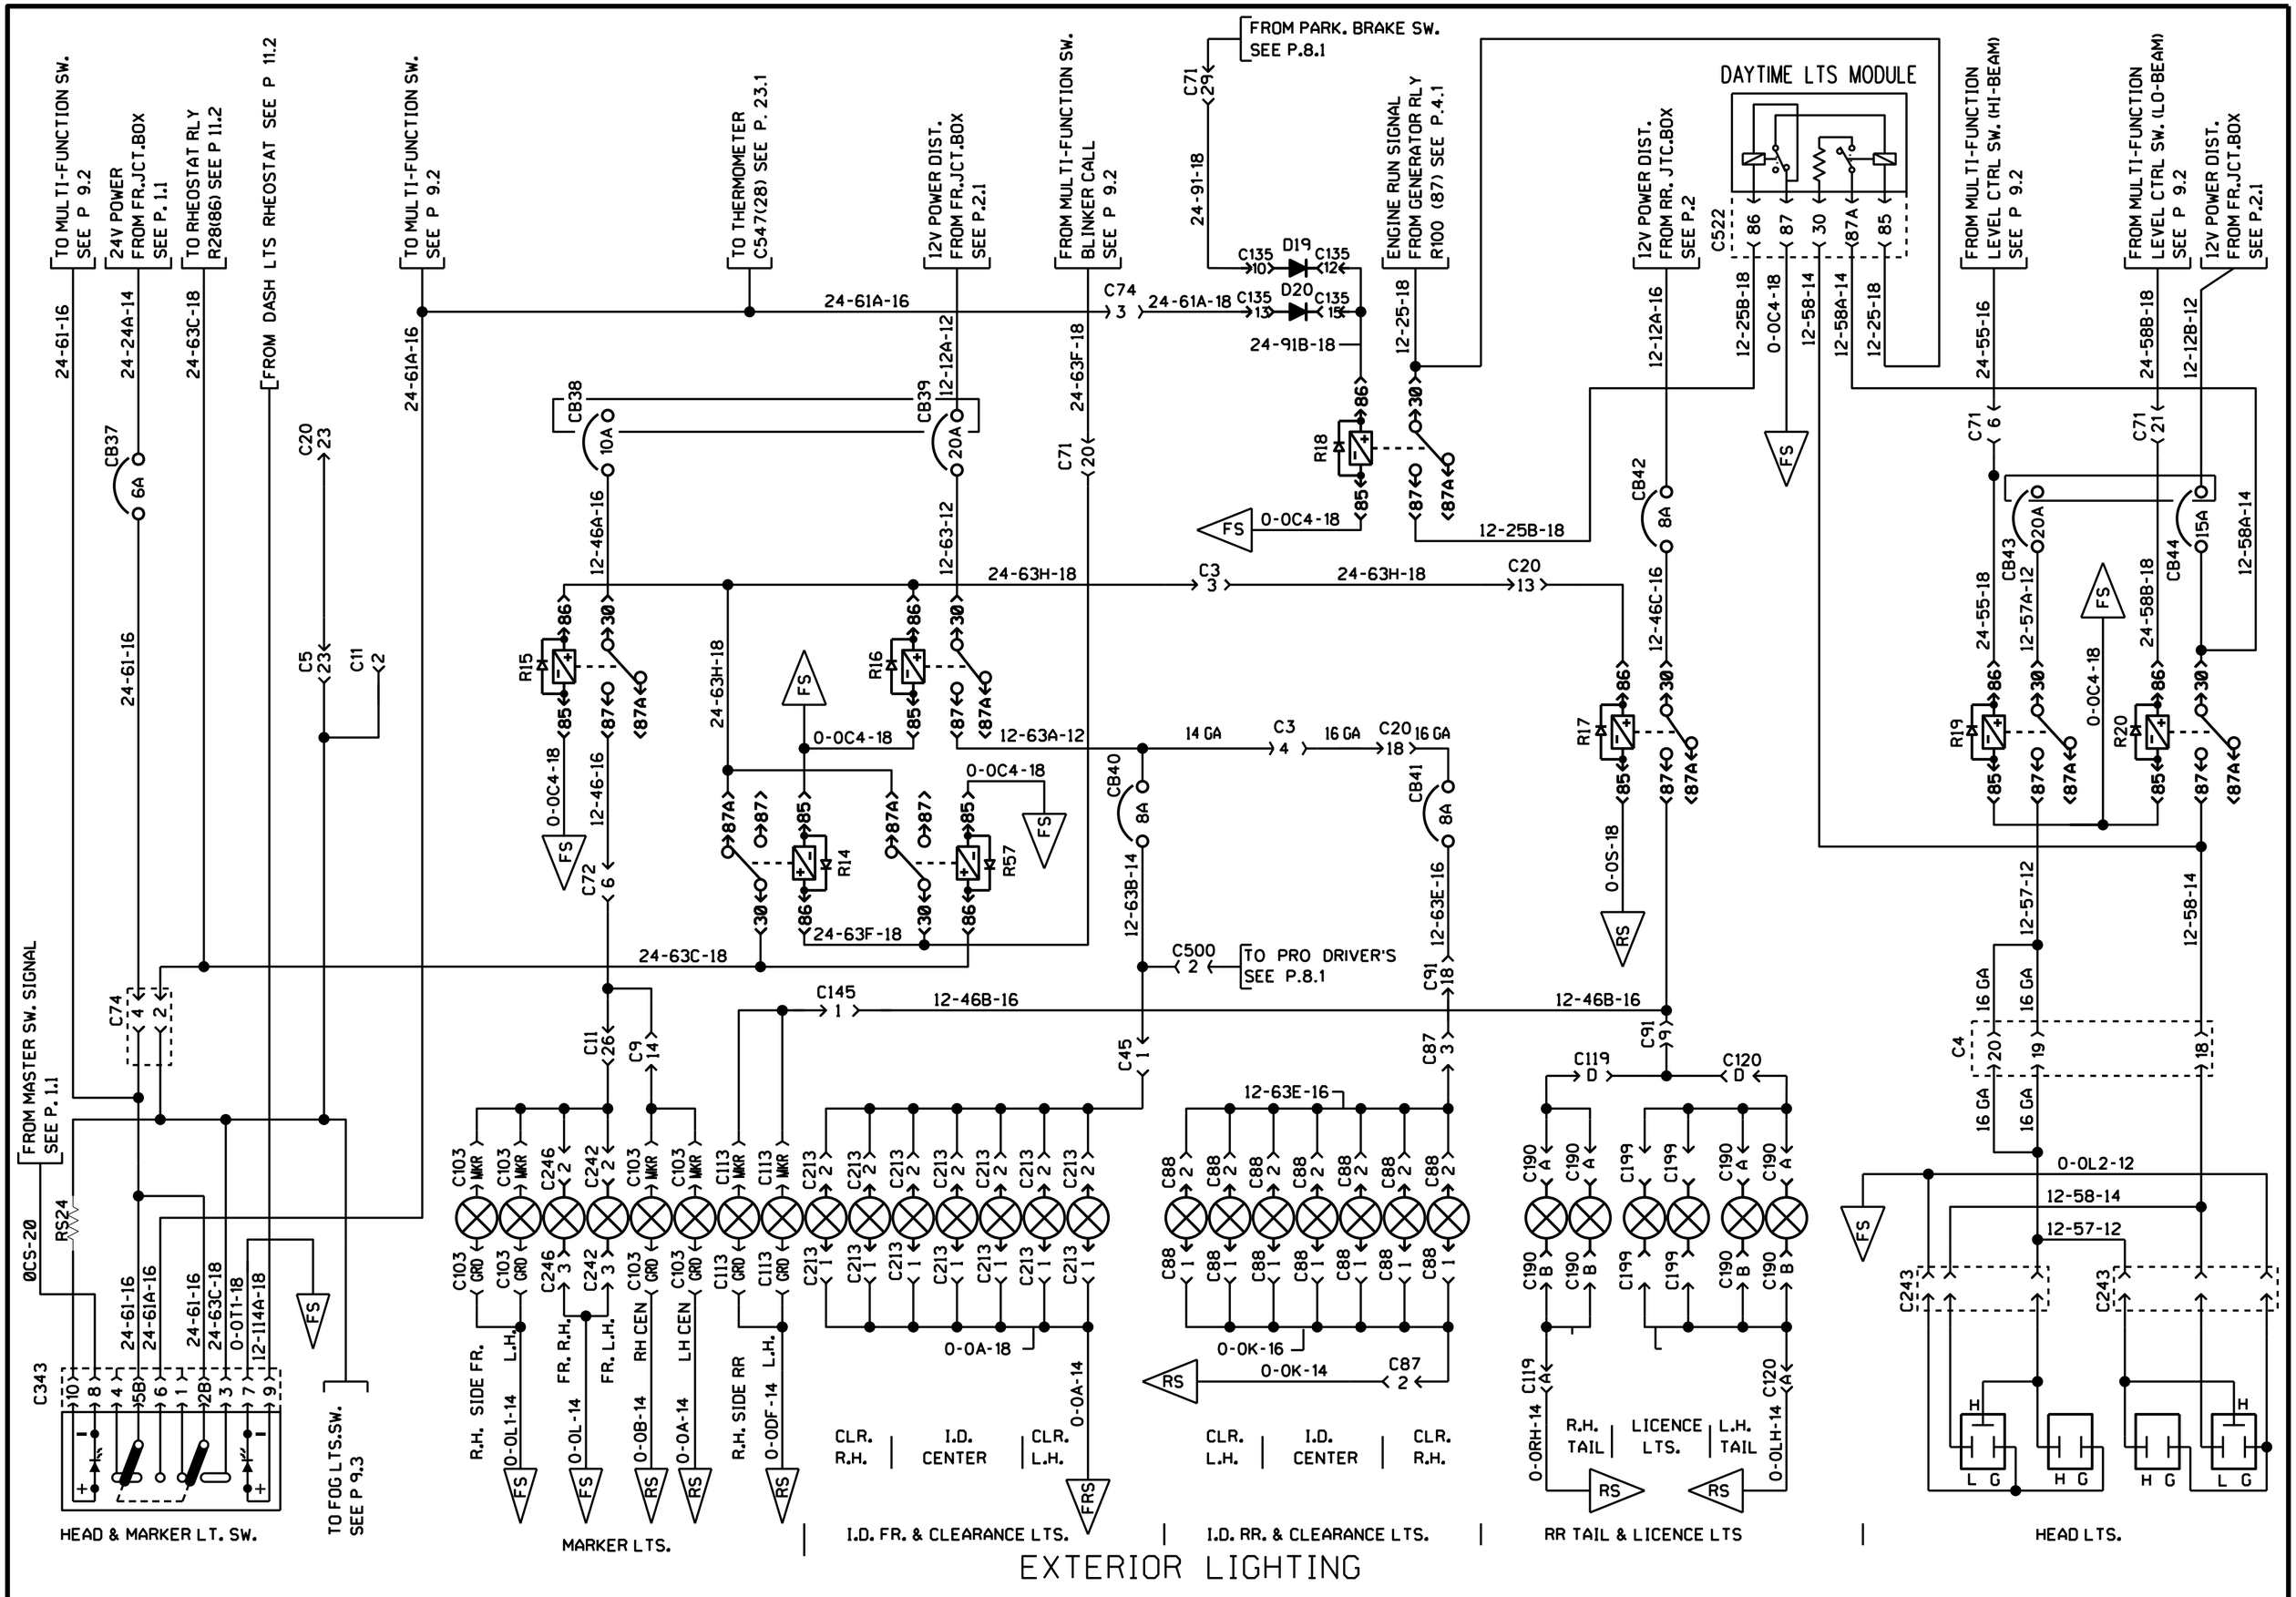

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 9.1	REVISION 00

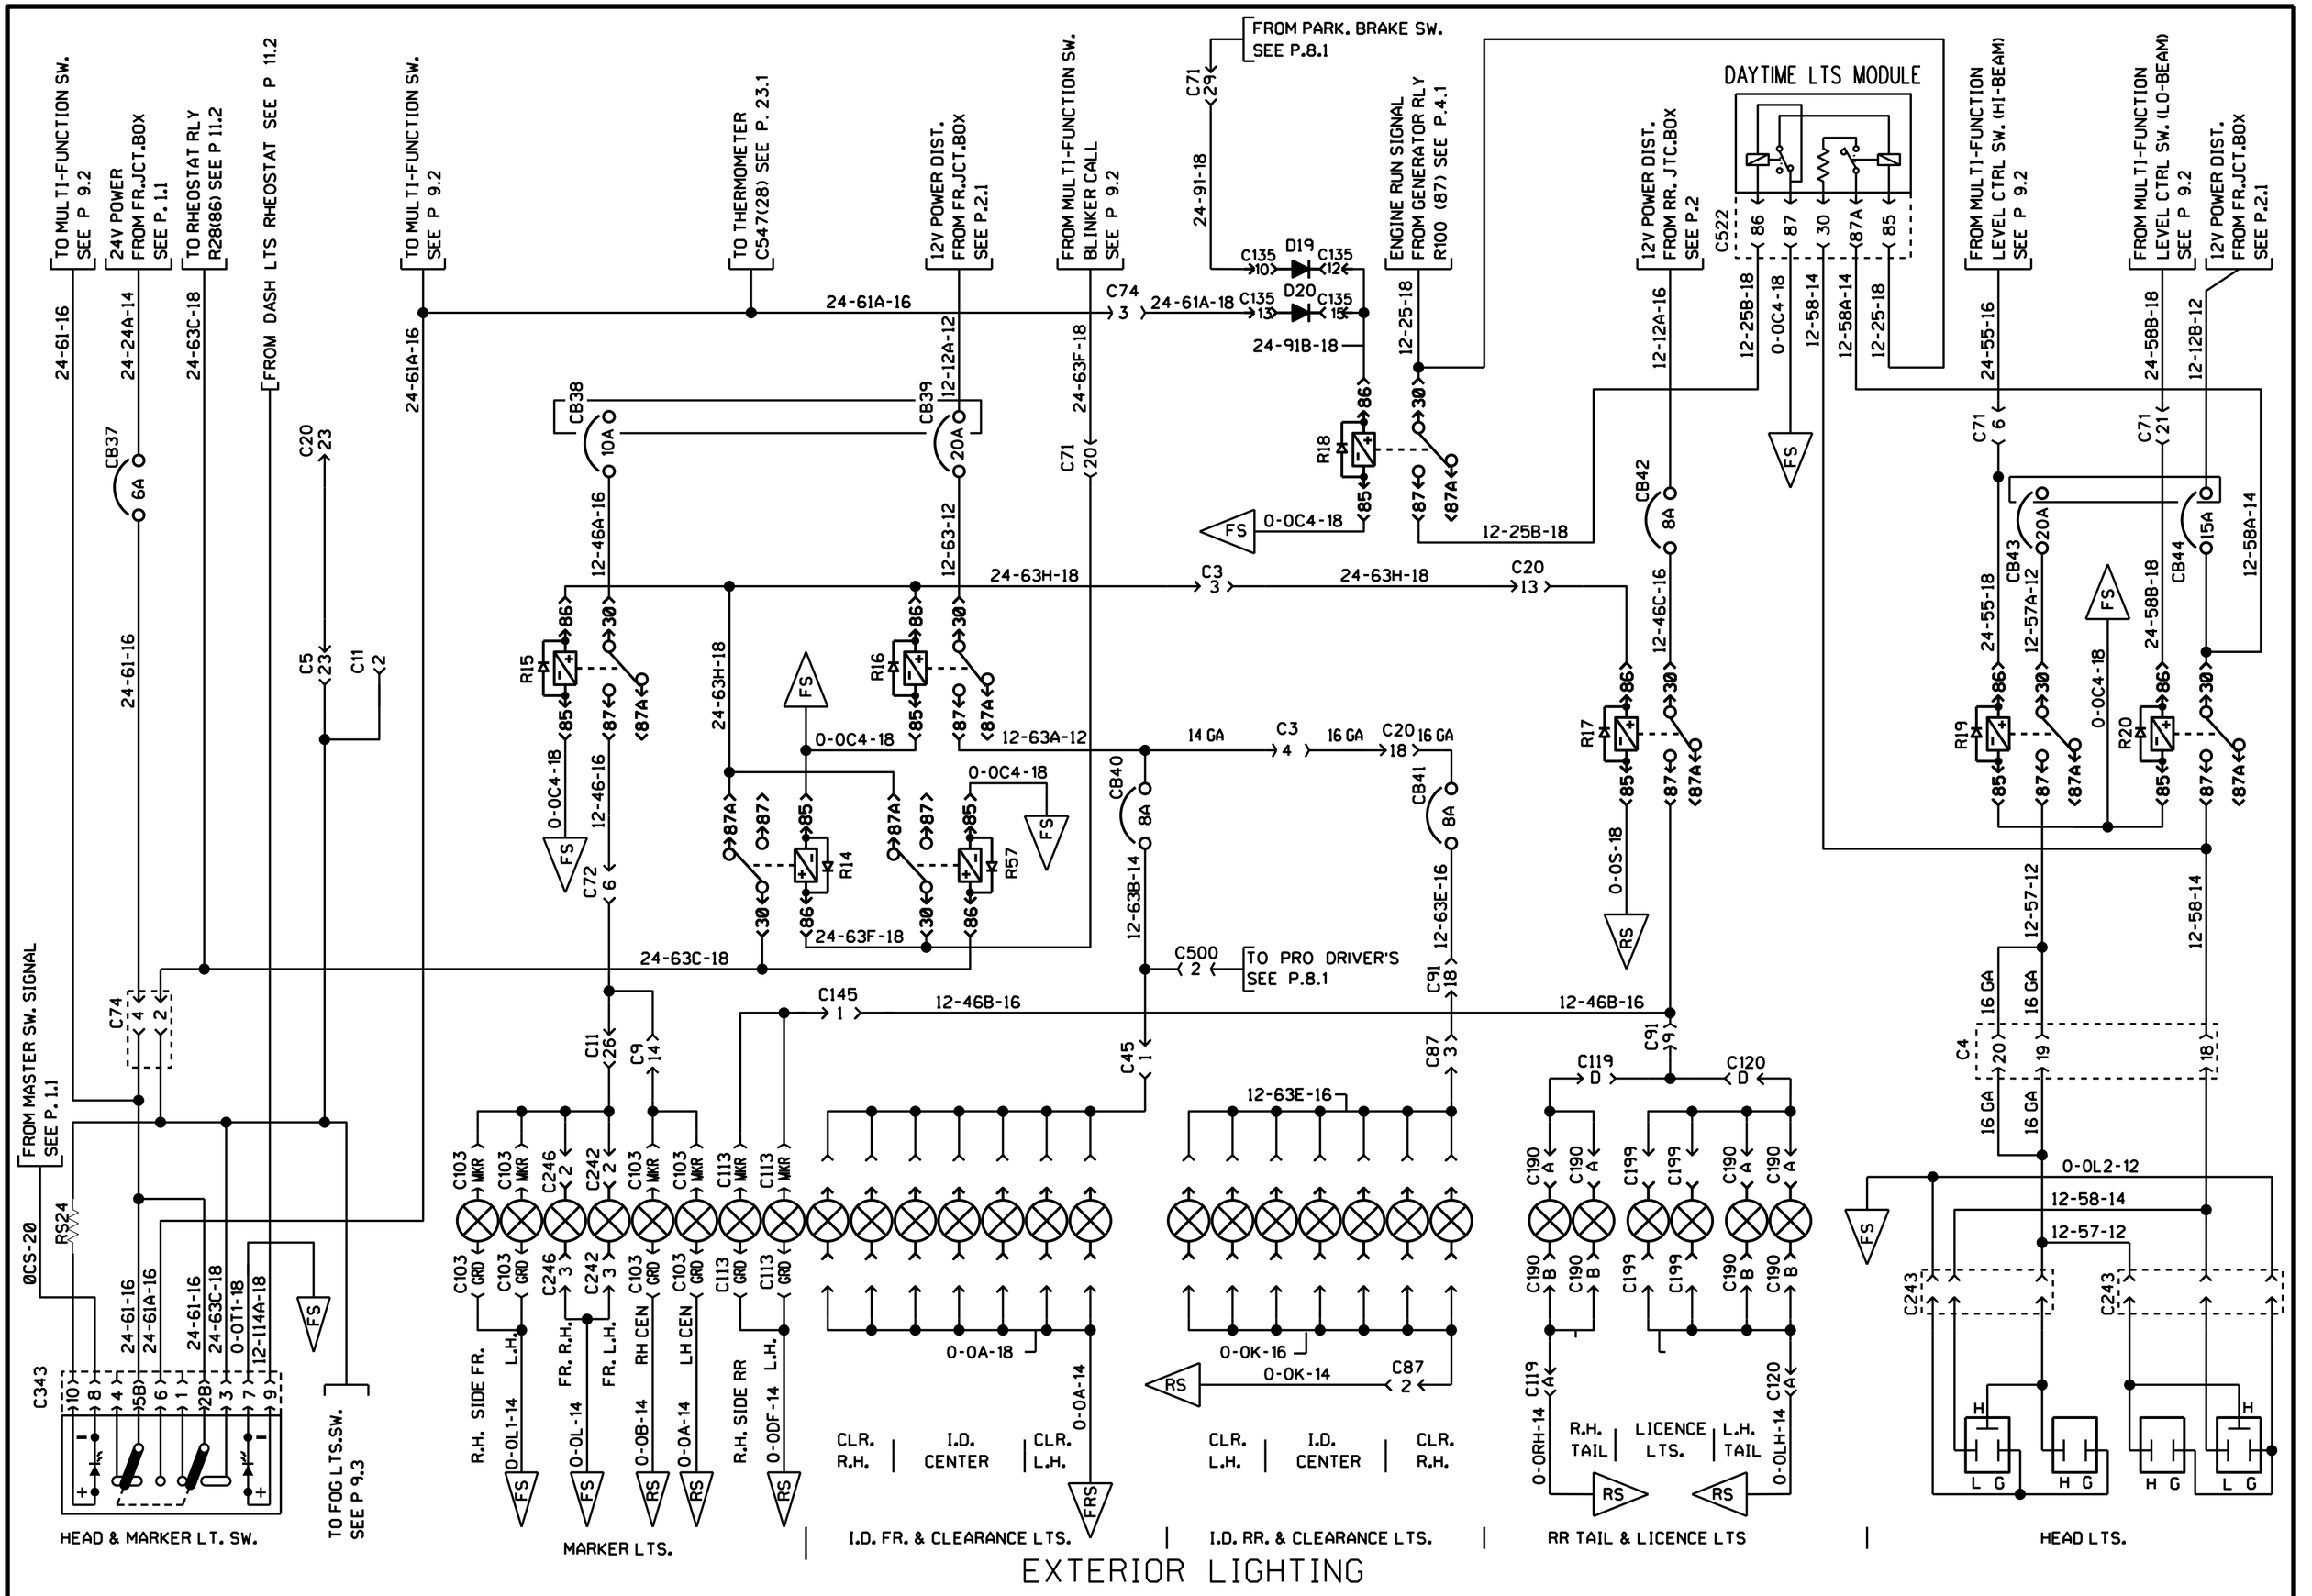

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 9.1	REVISION 09

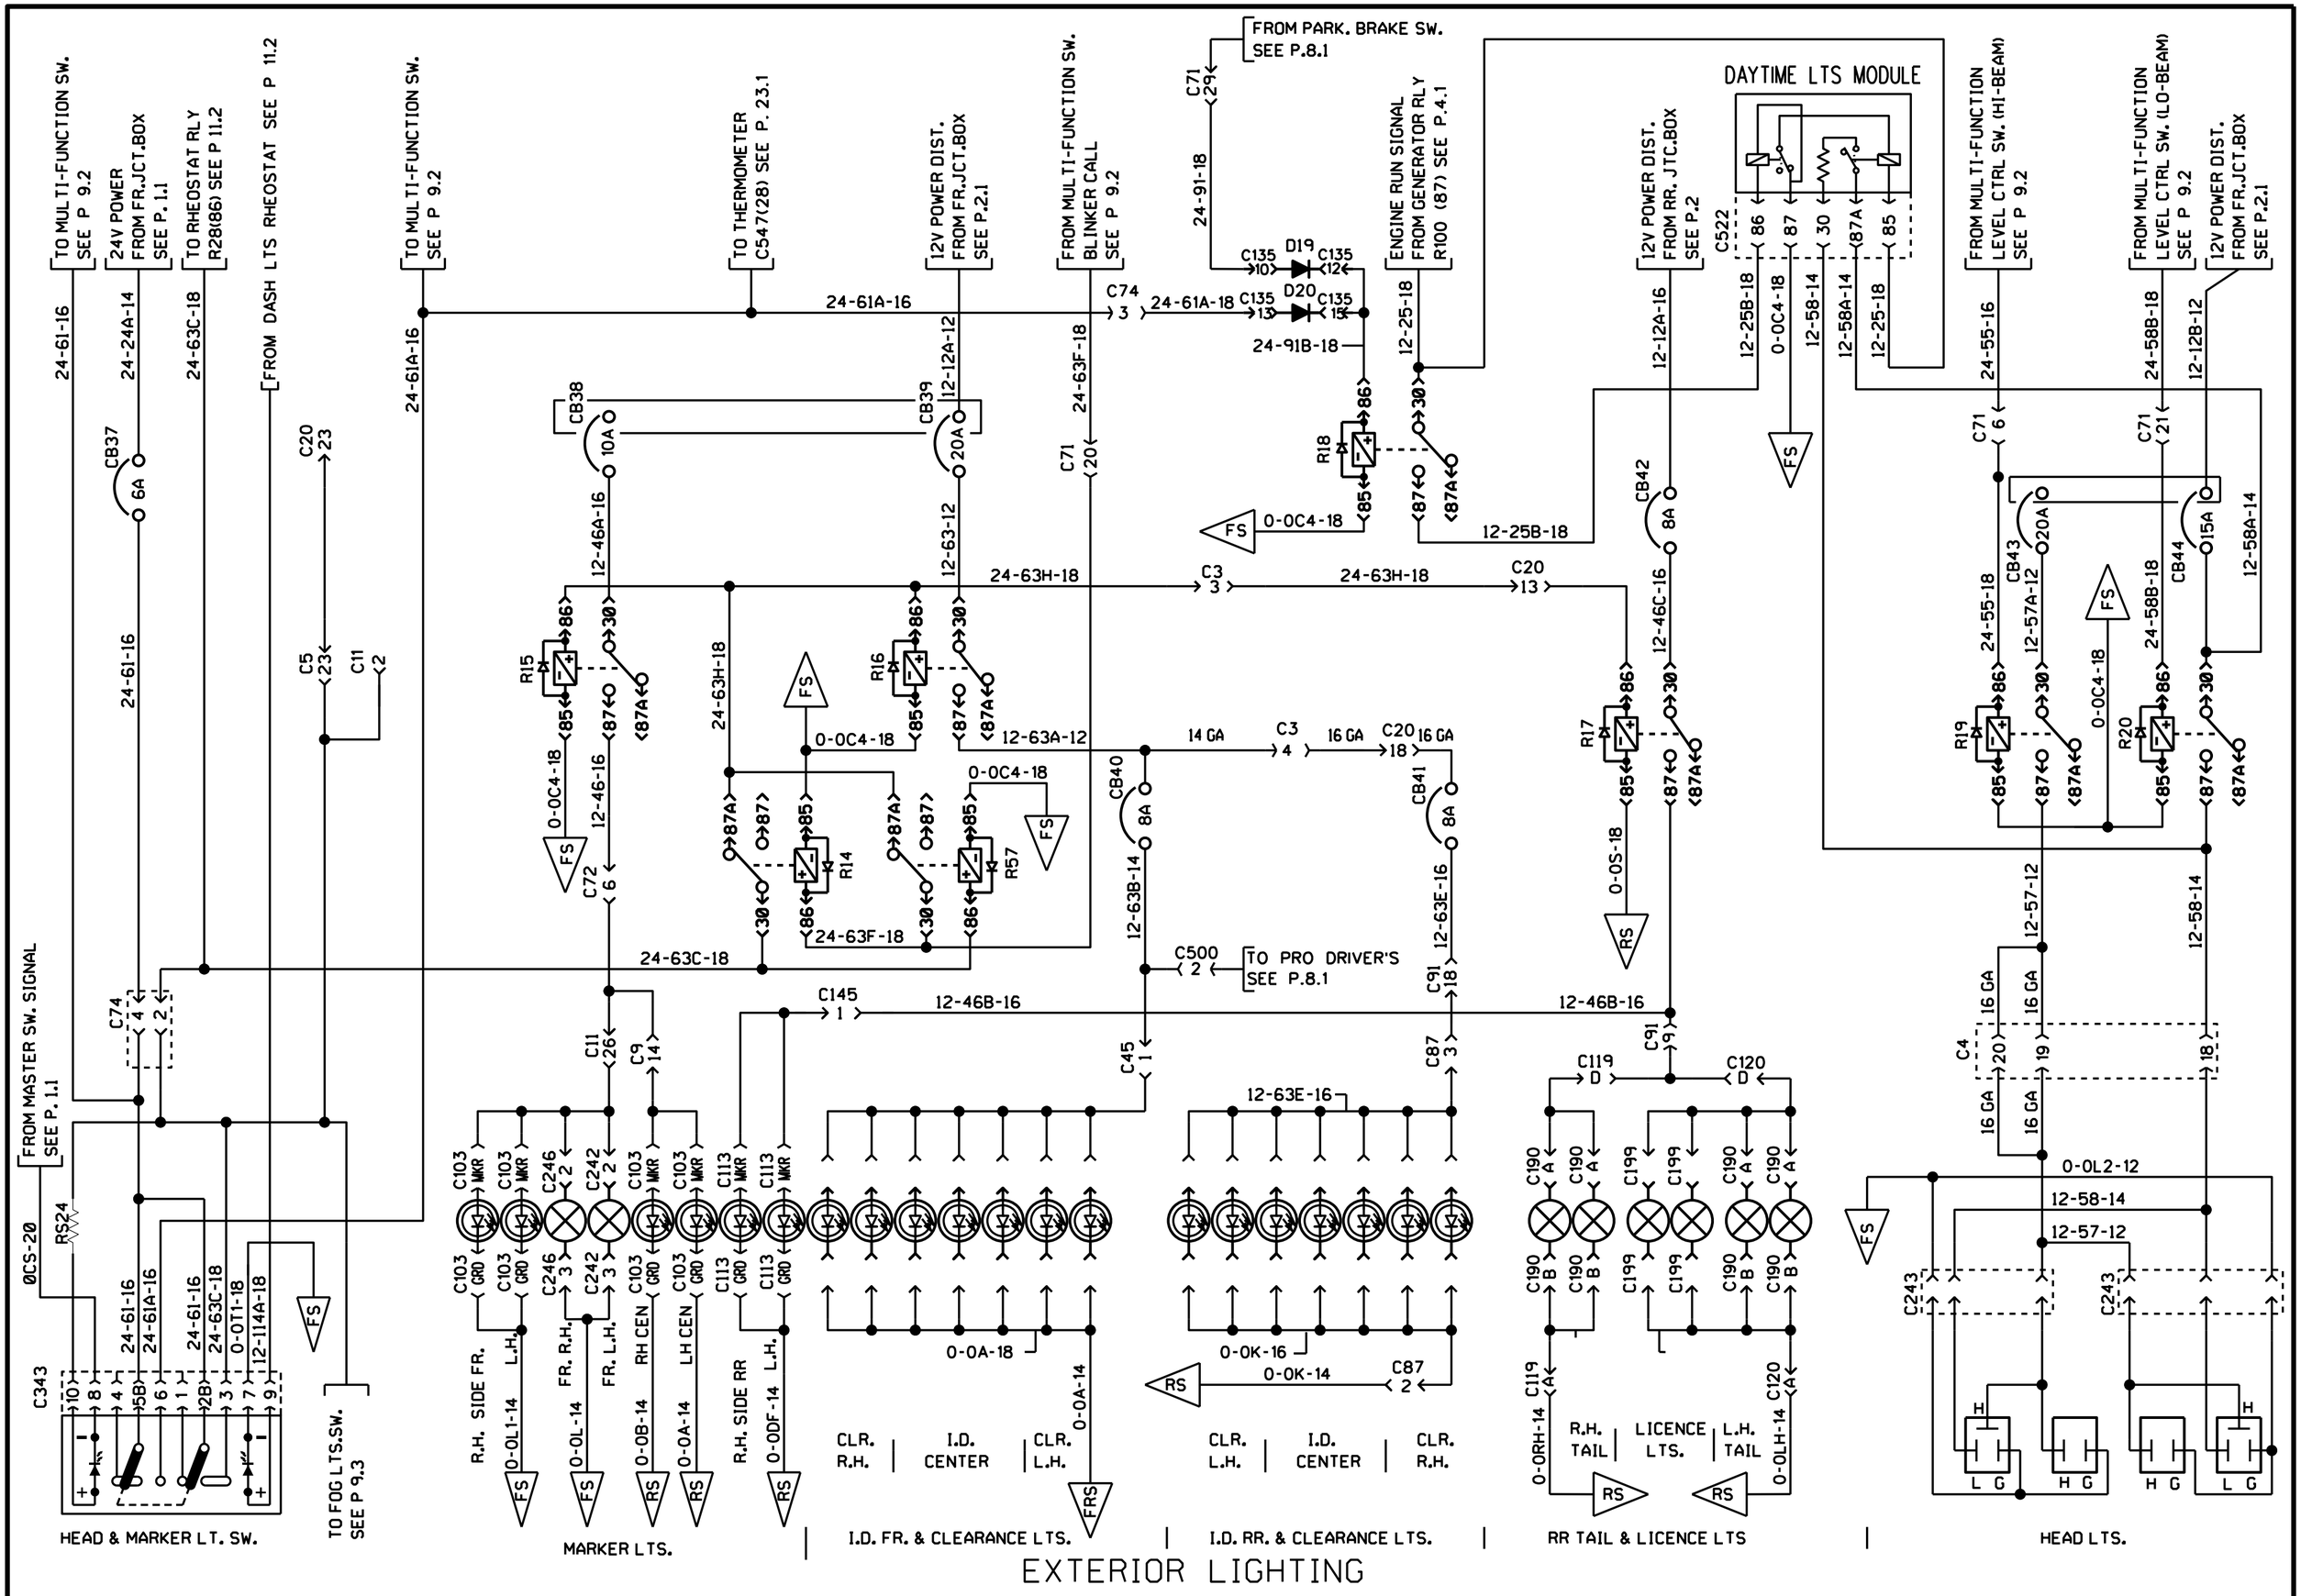

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 9.1	REVISION 11

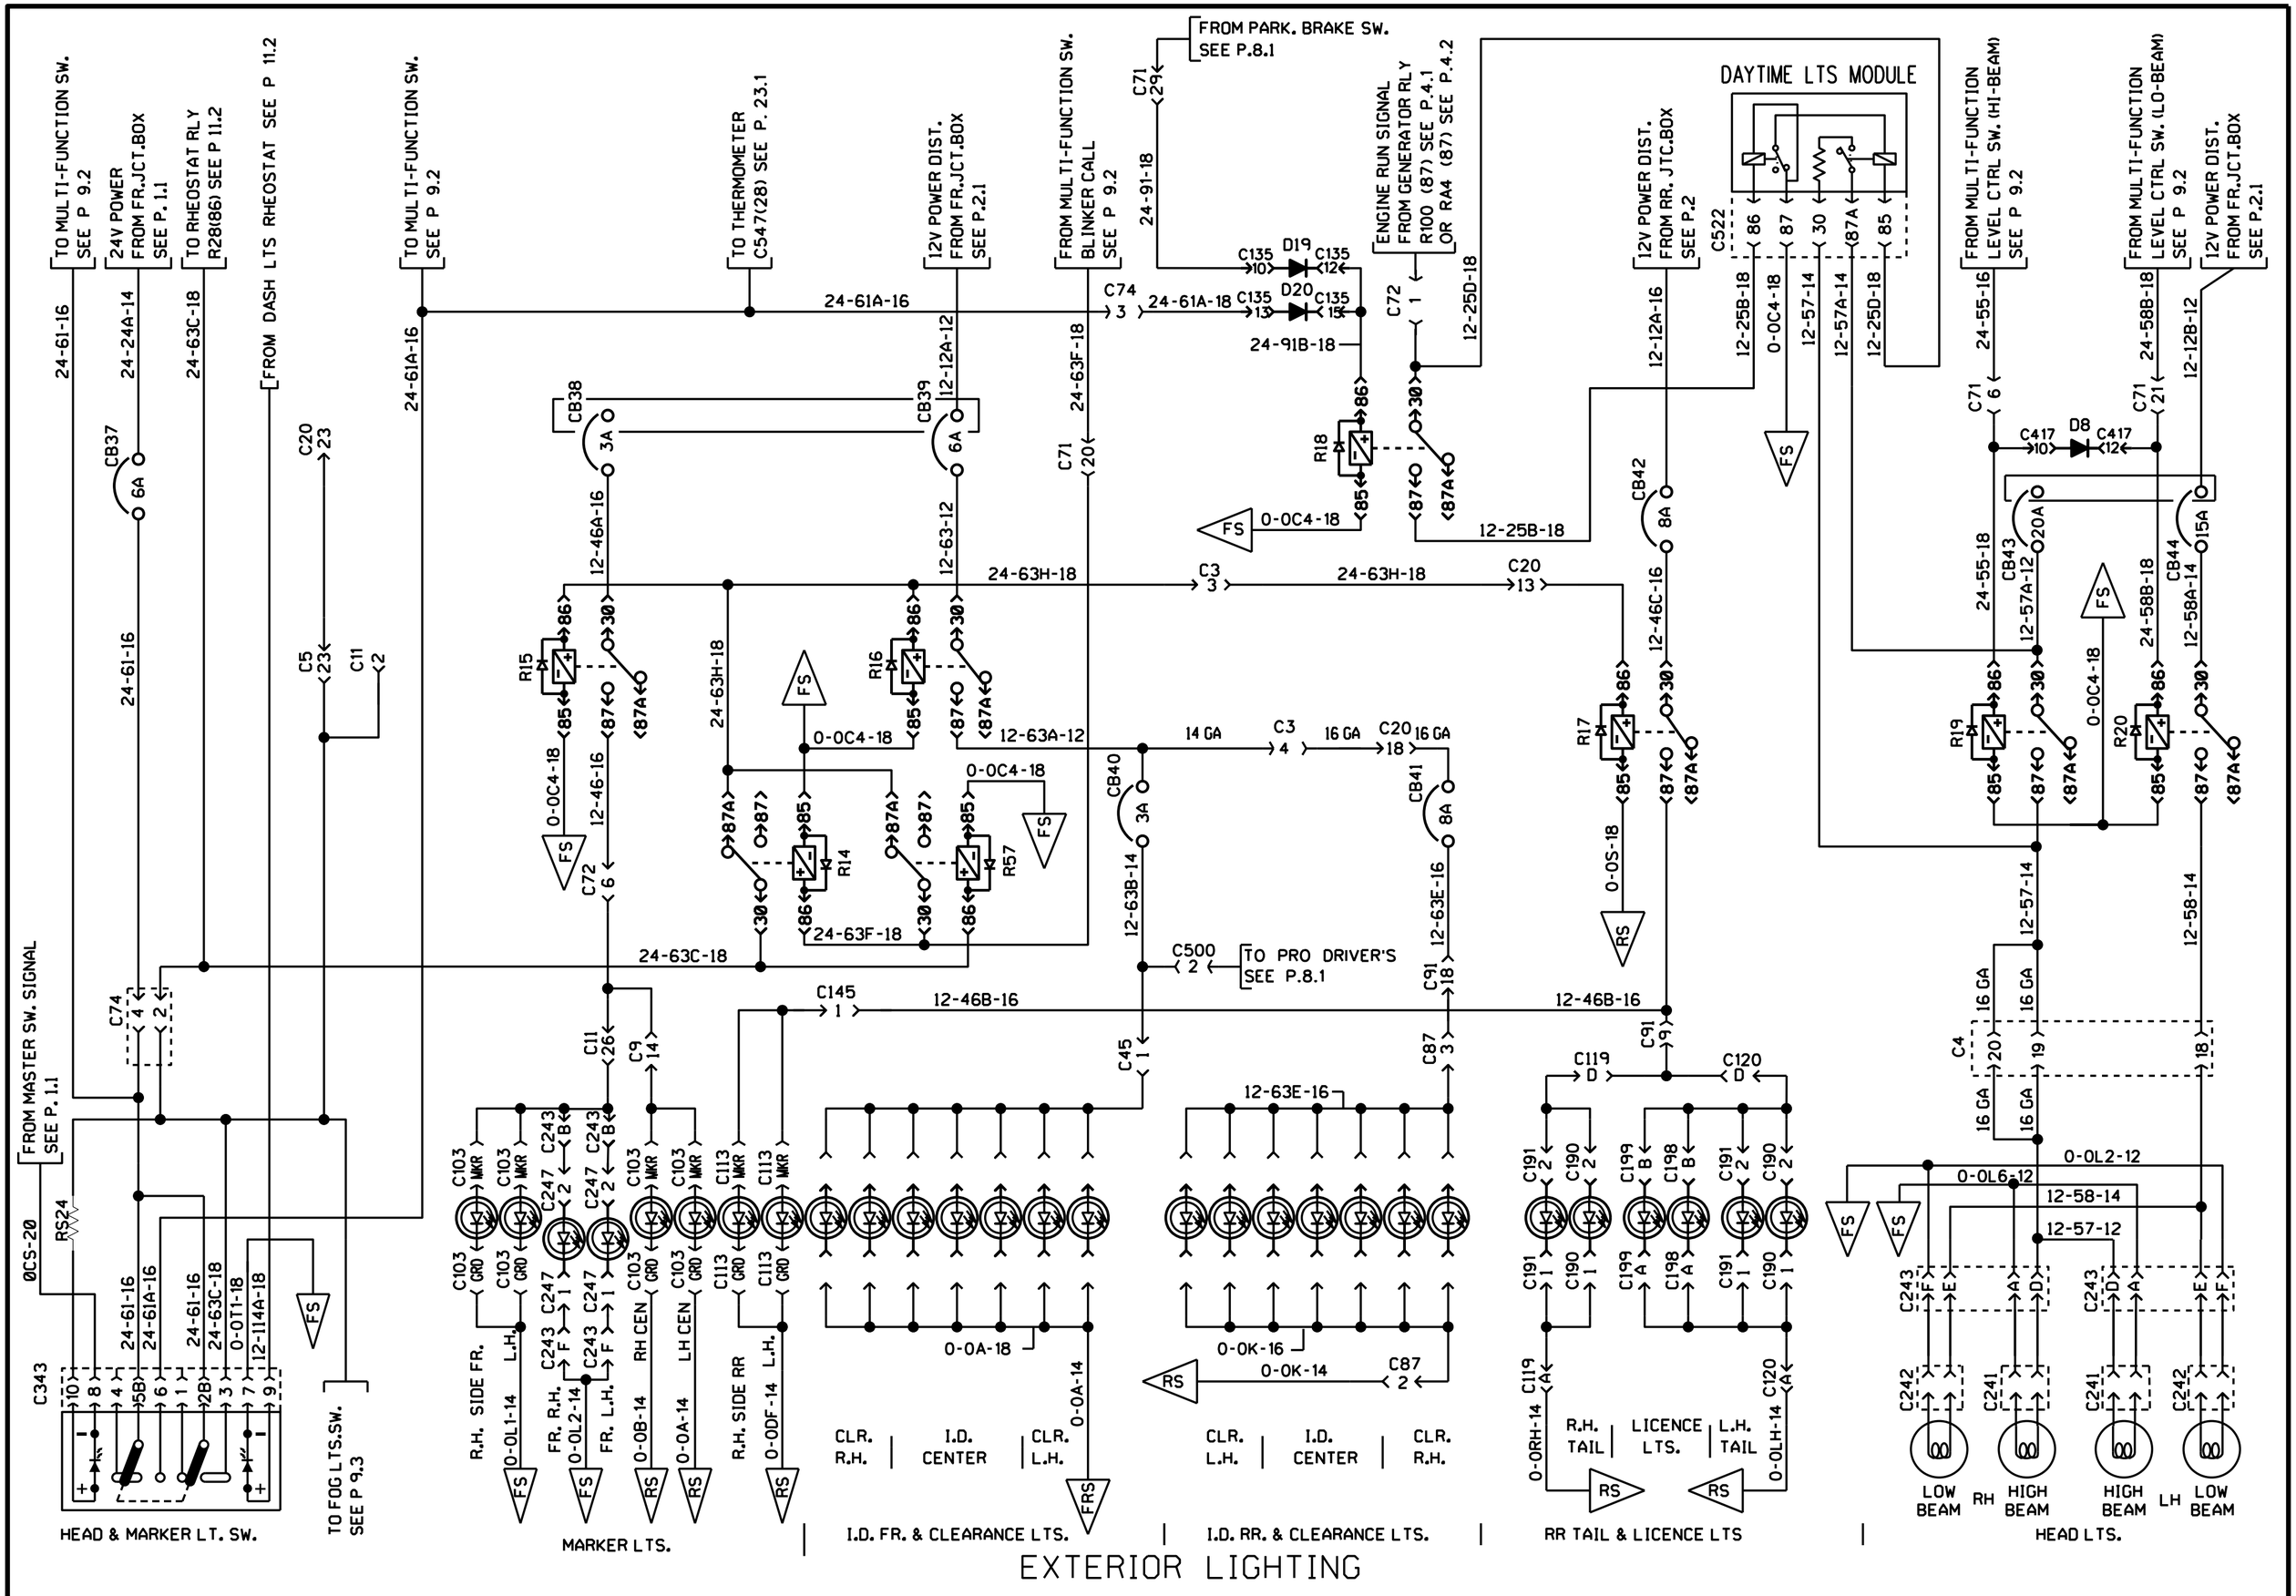

EXTERIOR LIGHTING

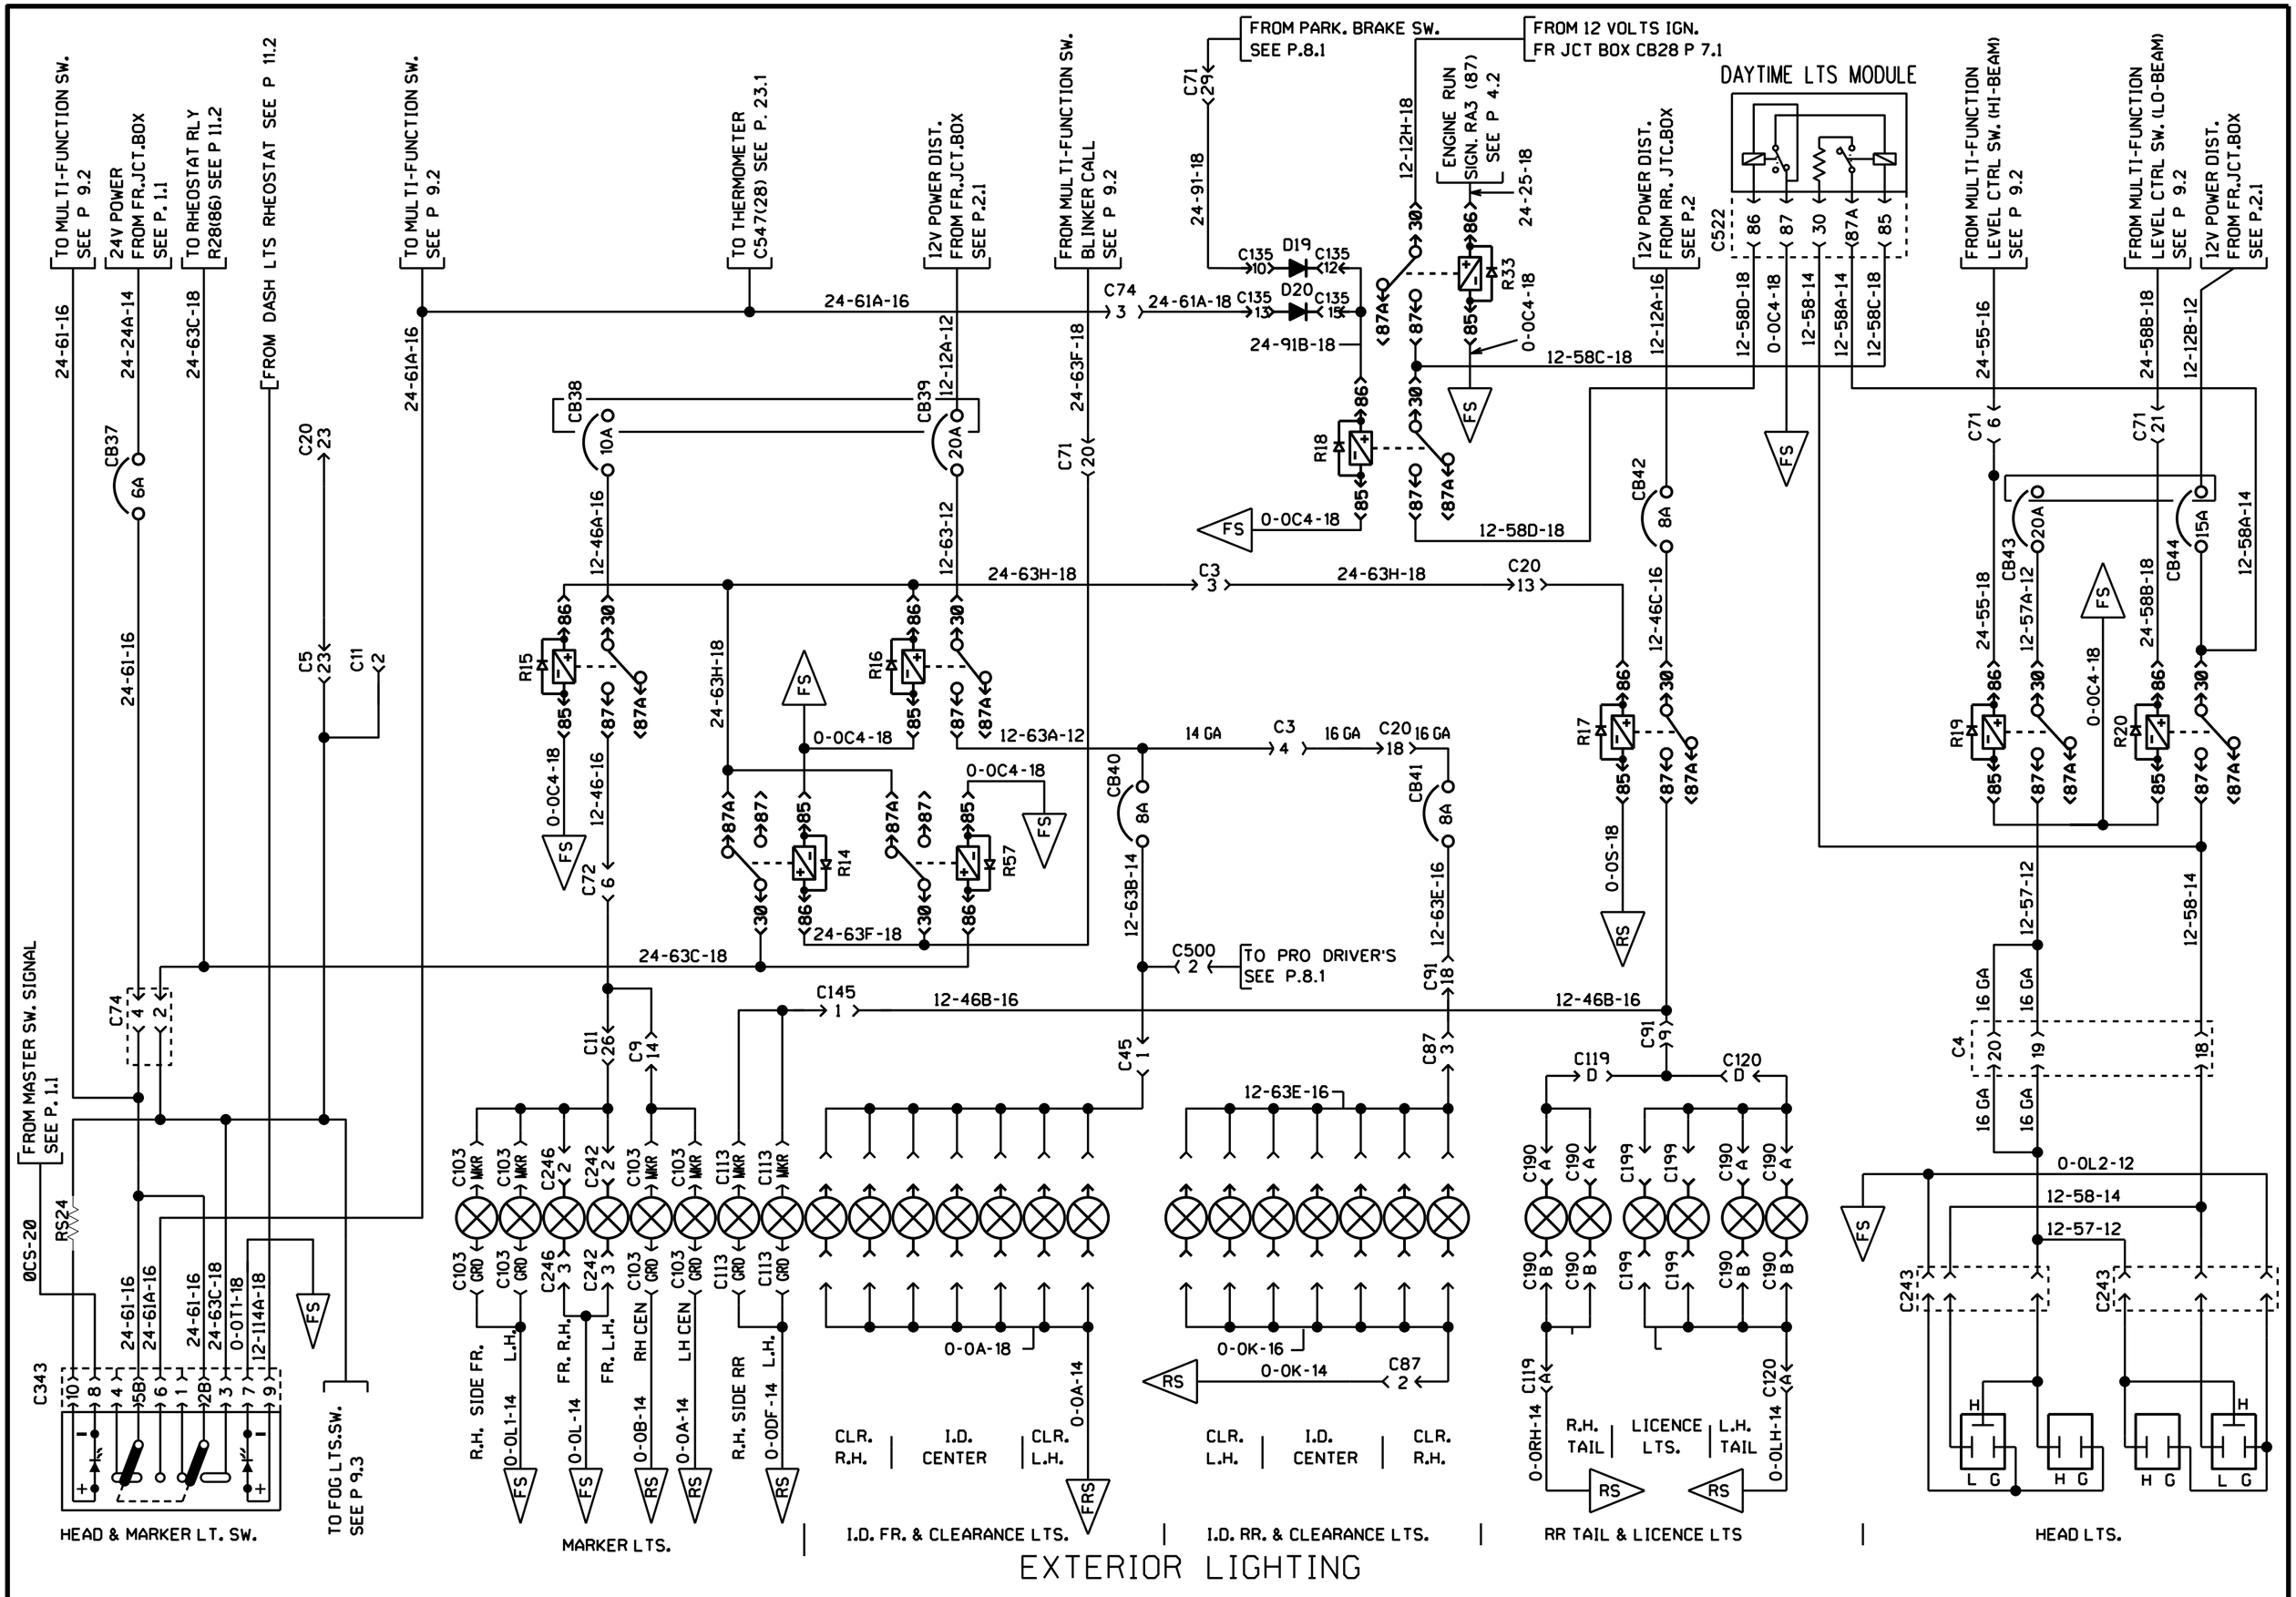

PREVOST	WIRING DIAGRAM	NO: D060912	SPECIAL VIP CALOUN PAGE: 9.1 SP1	REVISION 09

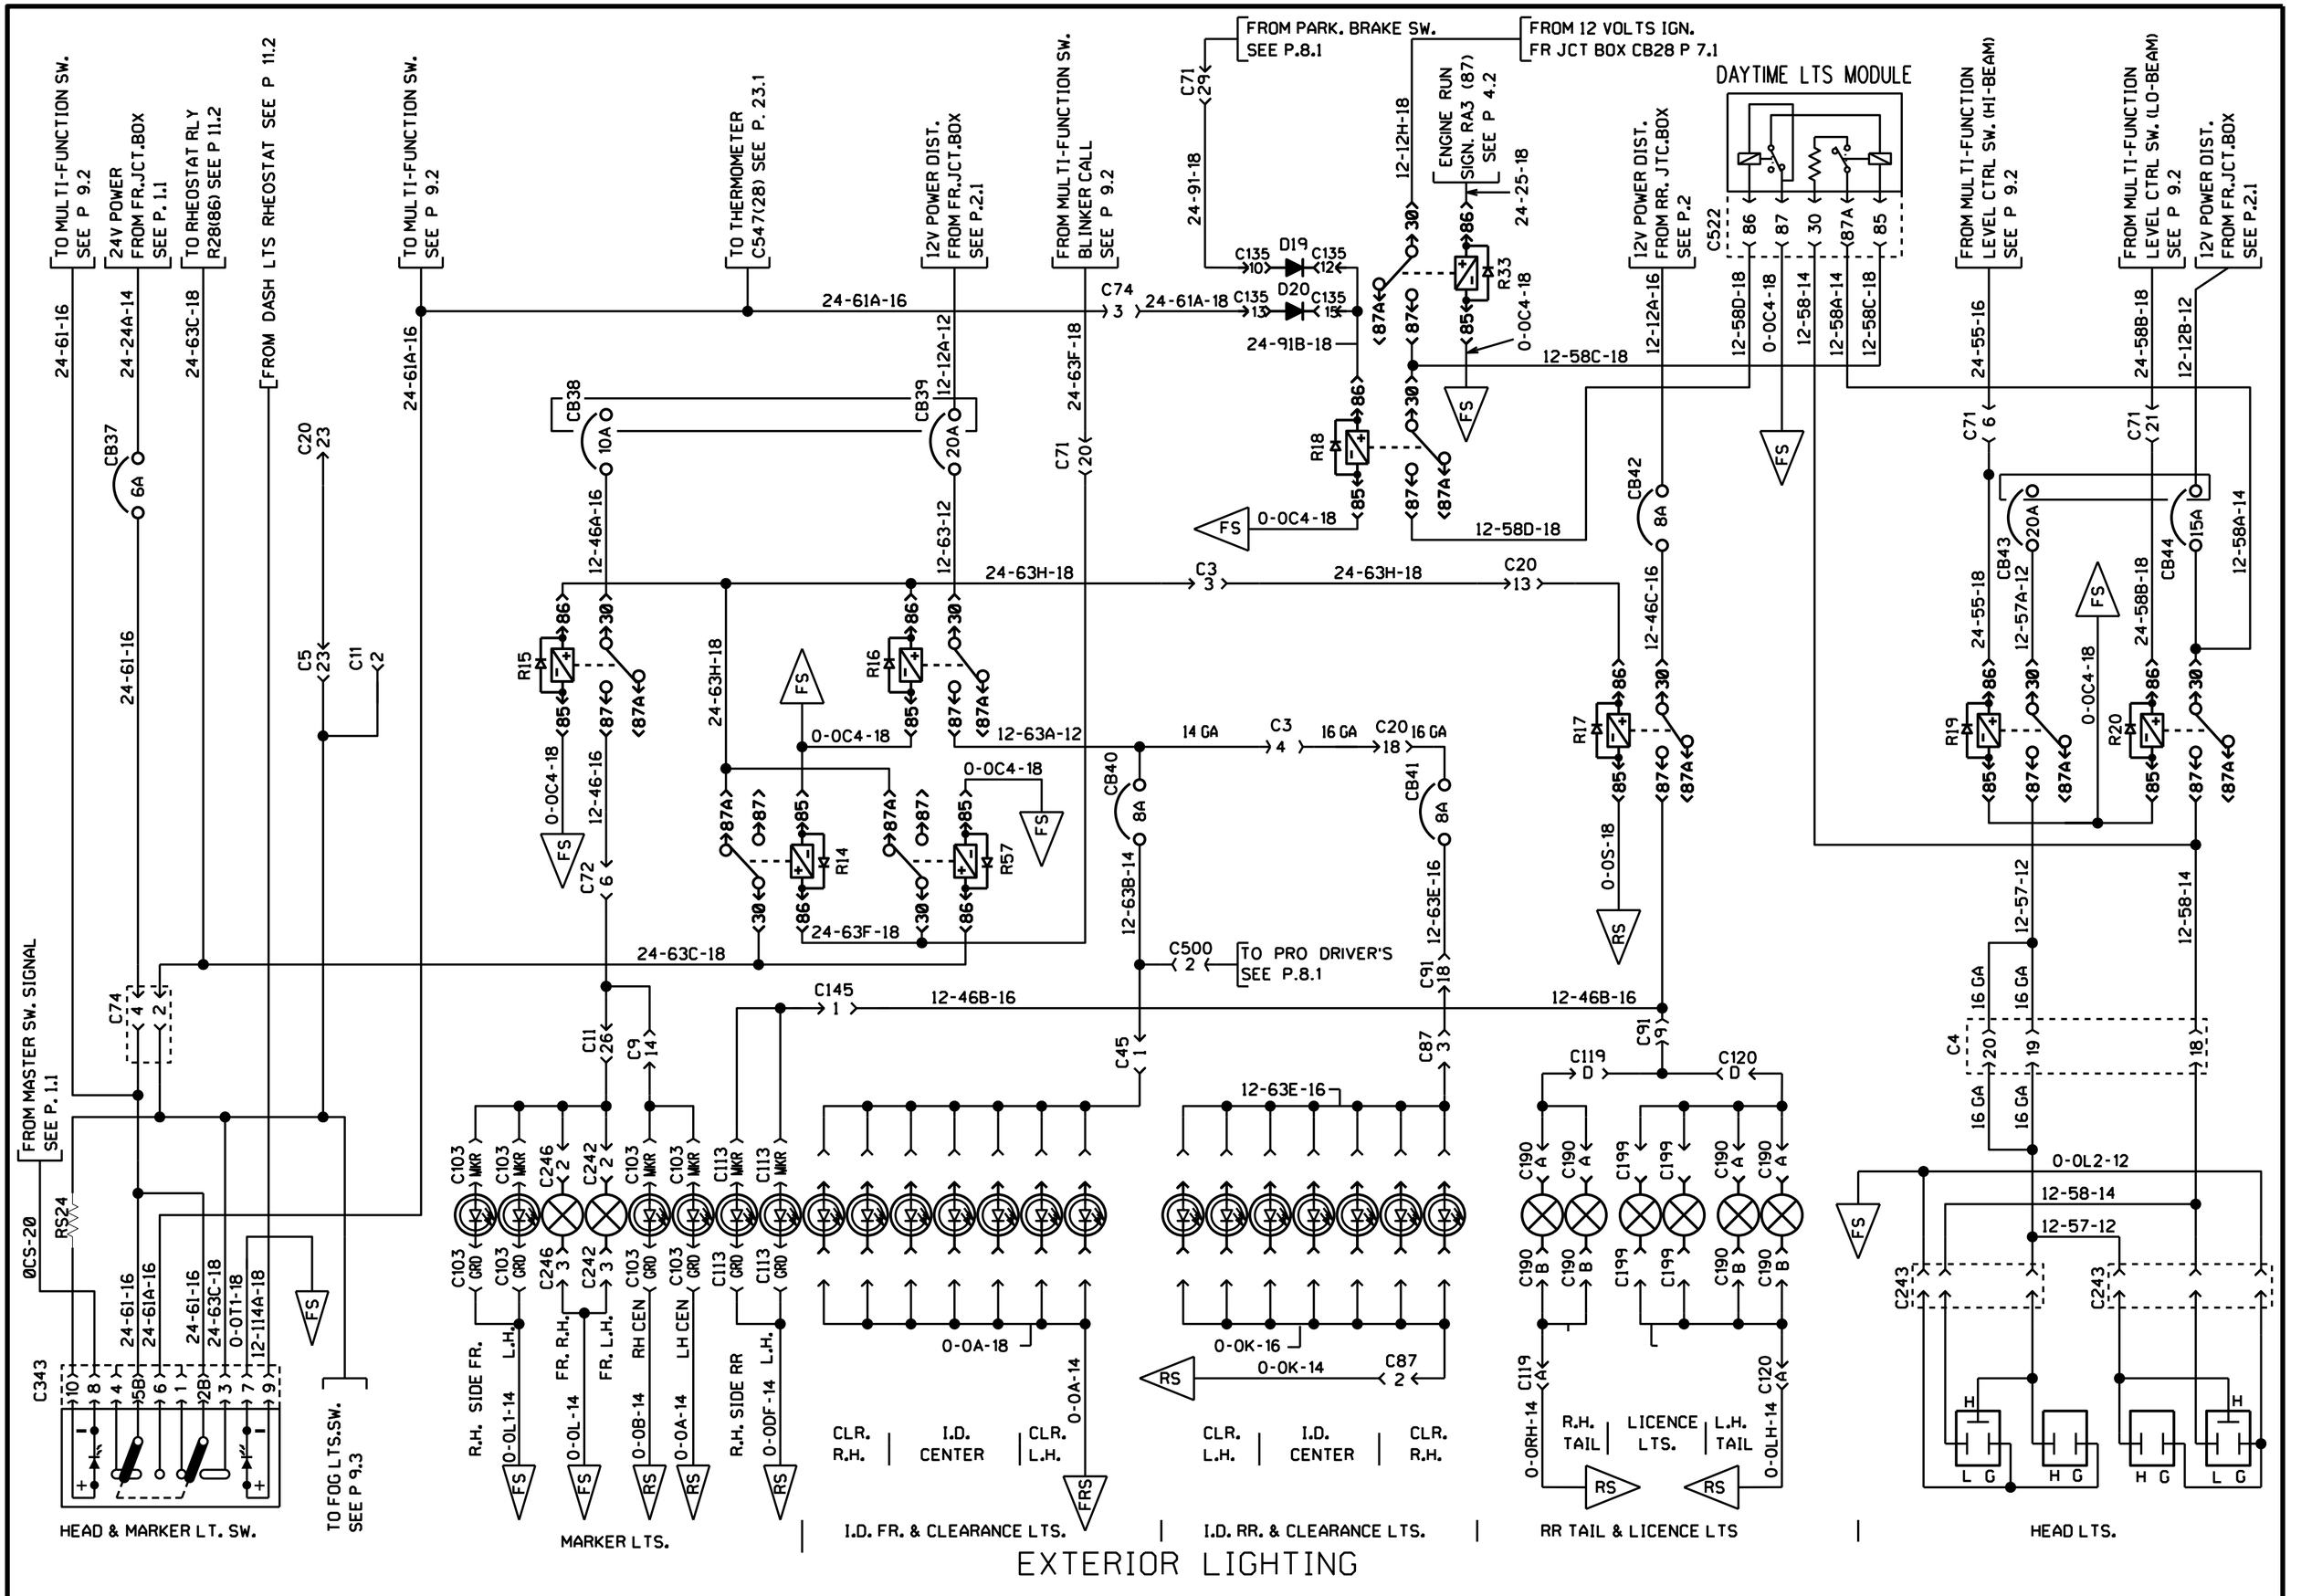

EXTERIOR LIGHTING

PREVOST	WIRING DIAGRAM	NO: D060912	SPECIAL VIP CALOUN PAGE: 9.1 SP1	REVISION 11

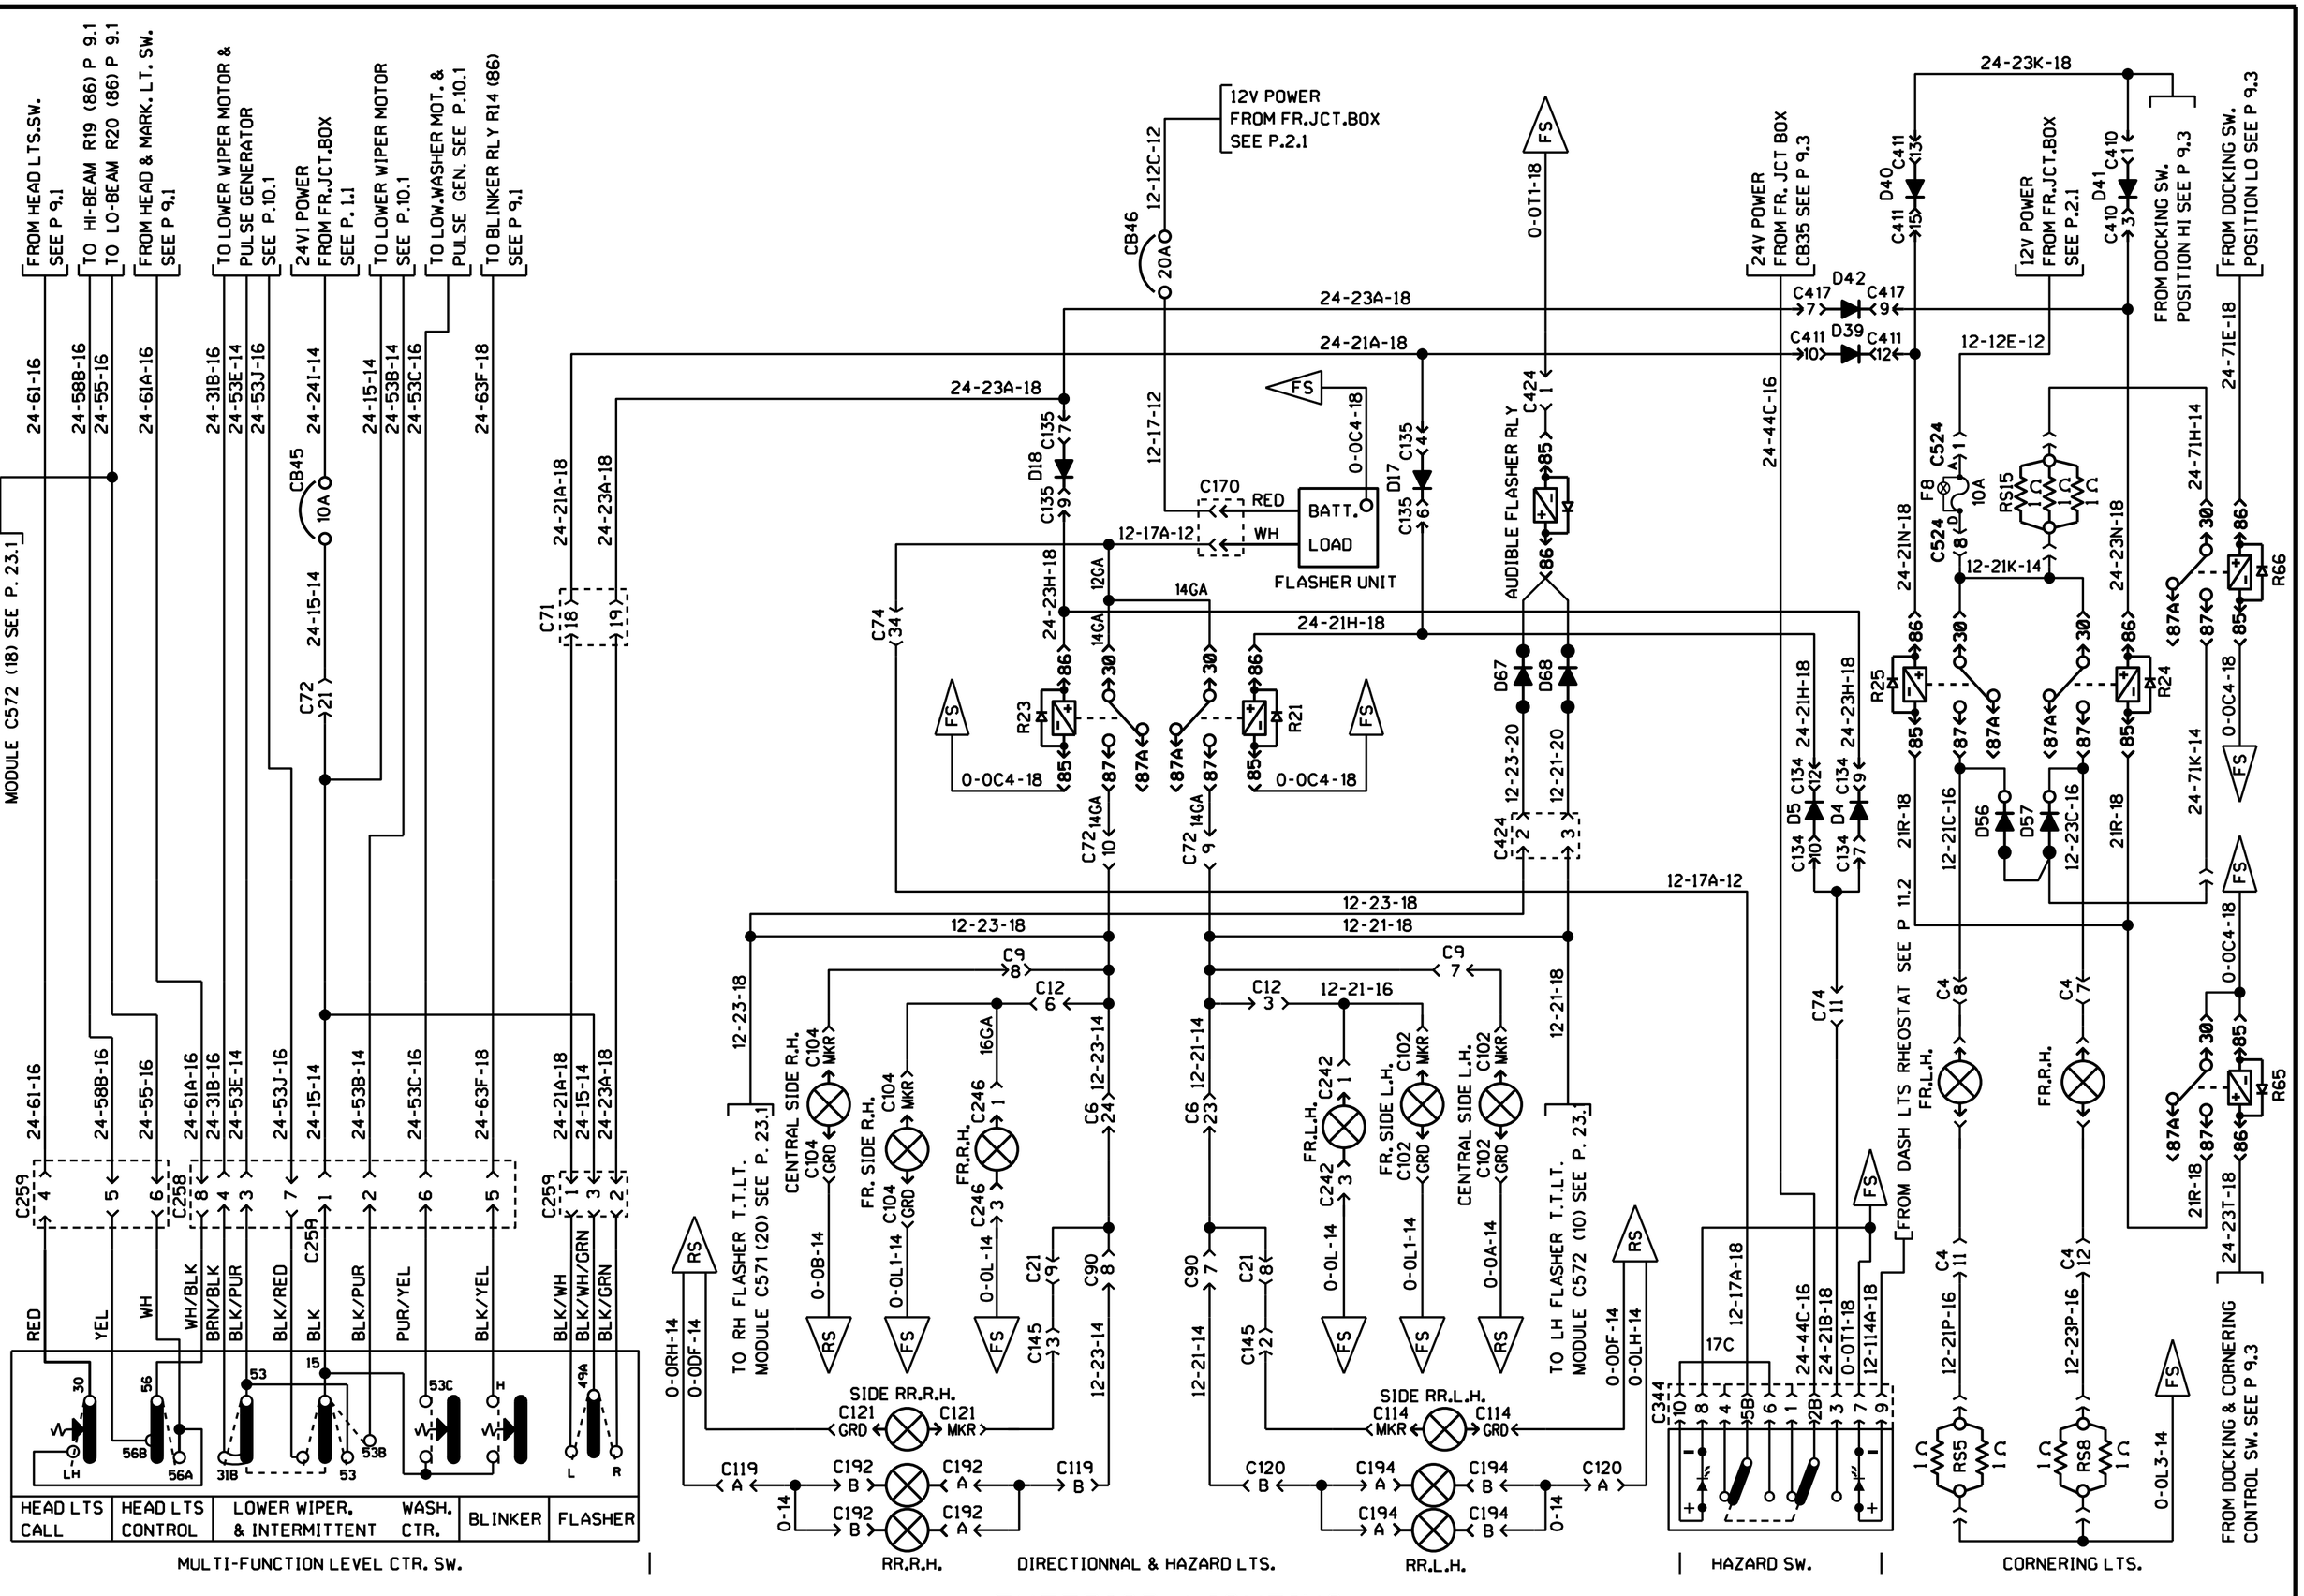

EXTERIOR LIGHTING

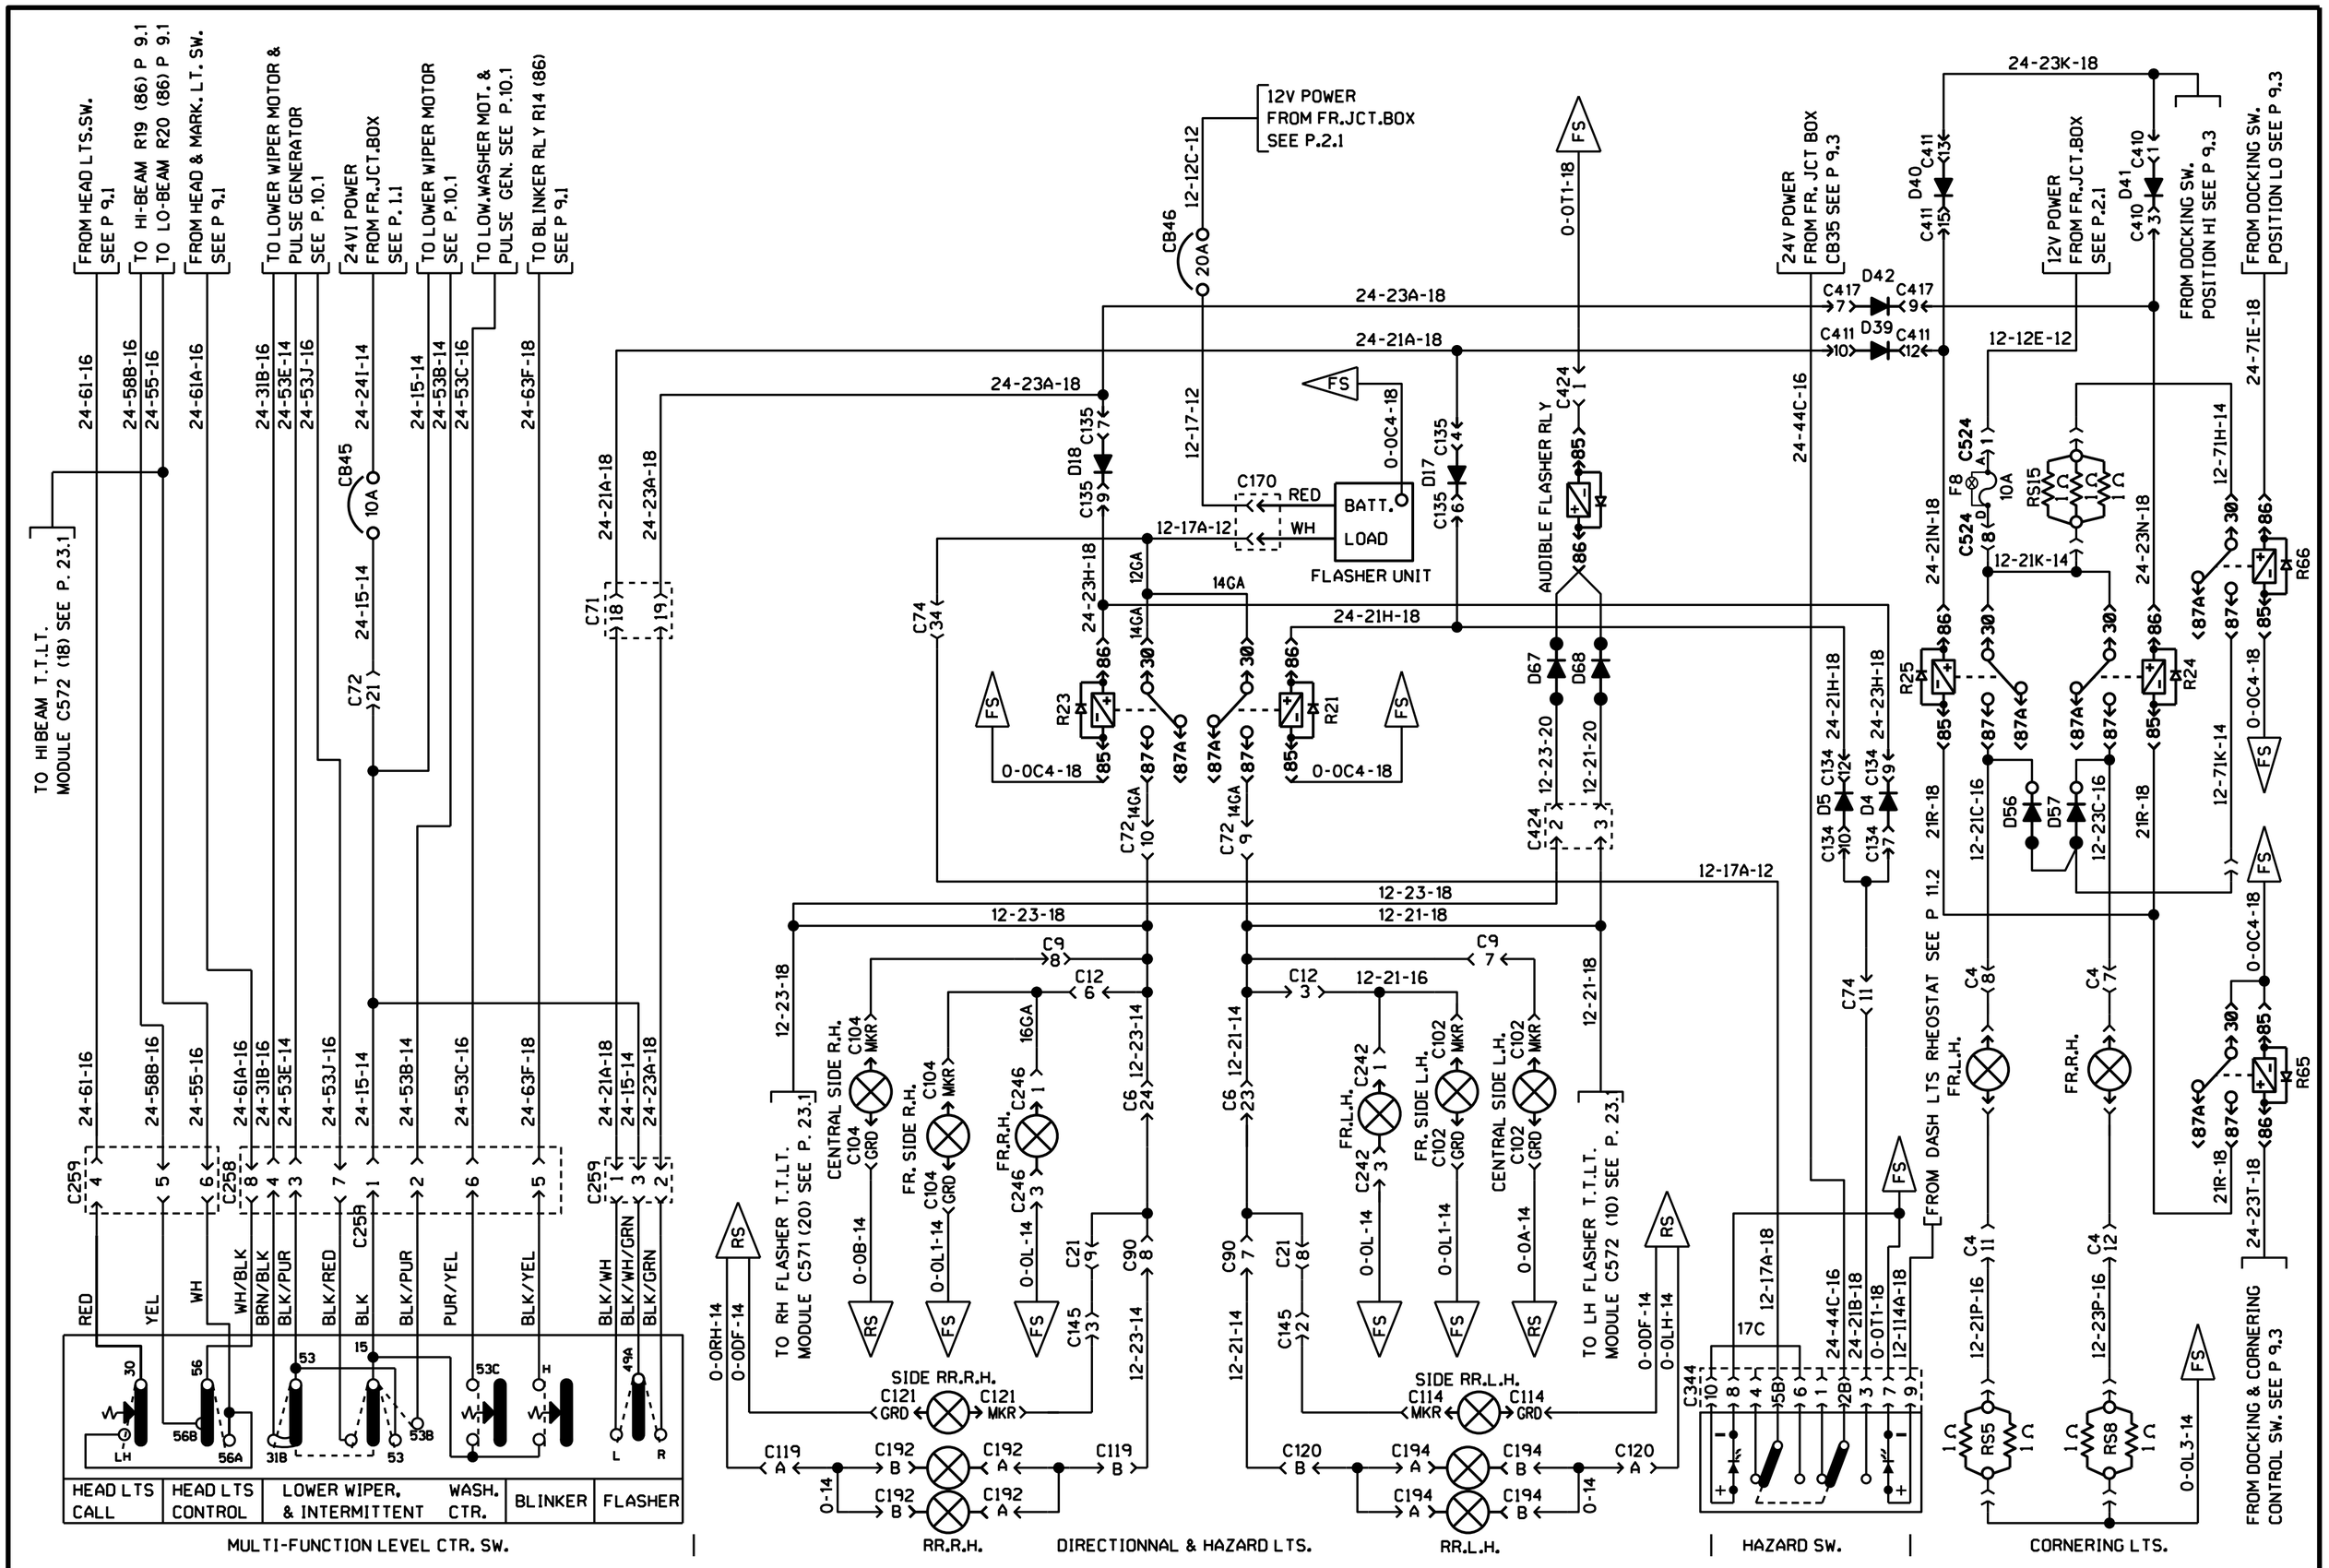

EXTERIOR LIGHTING

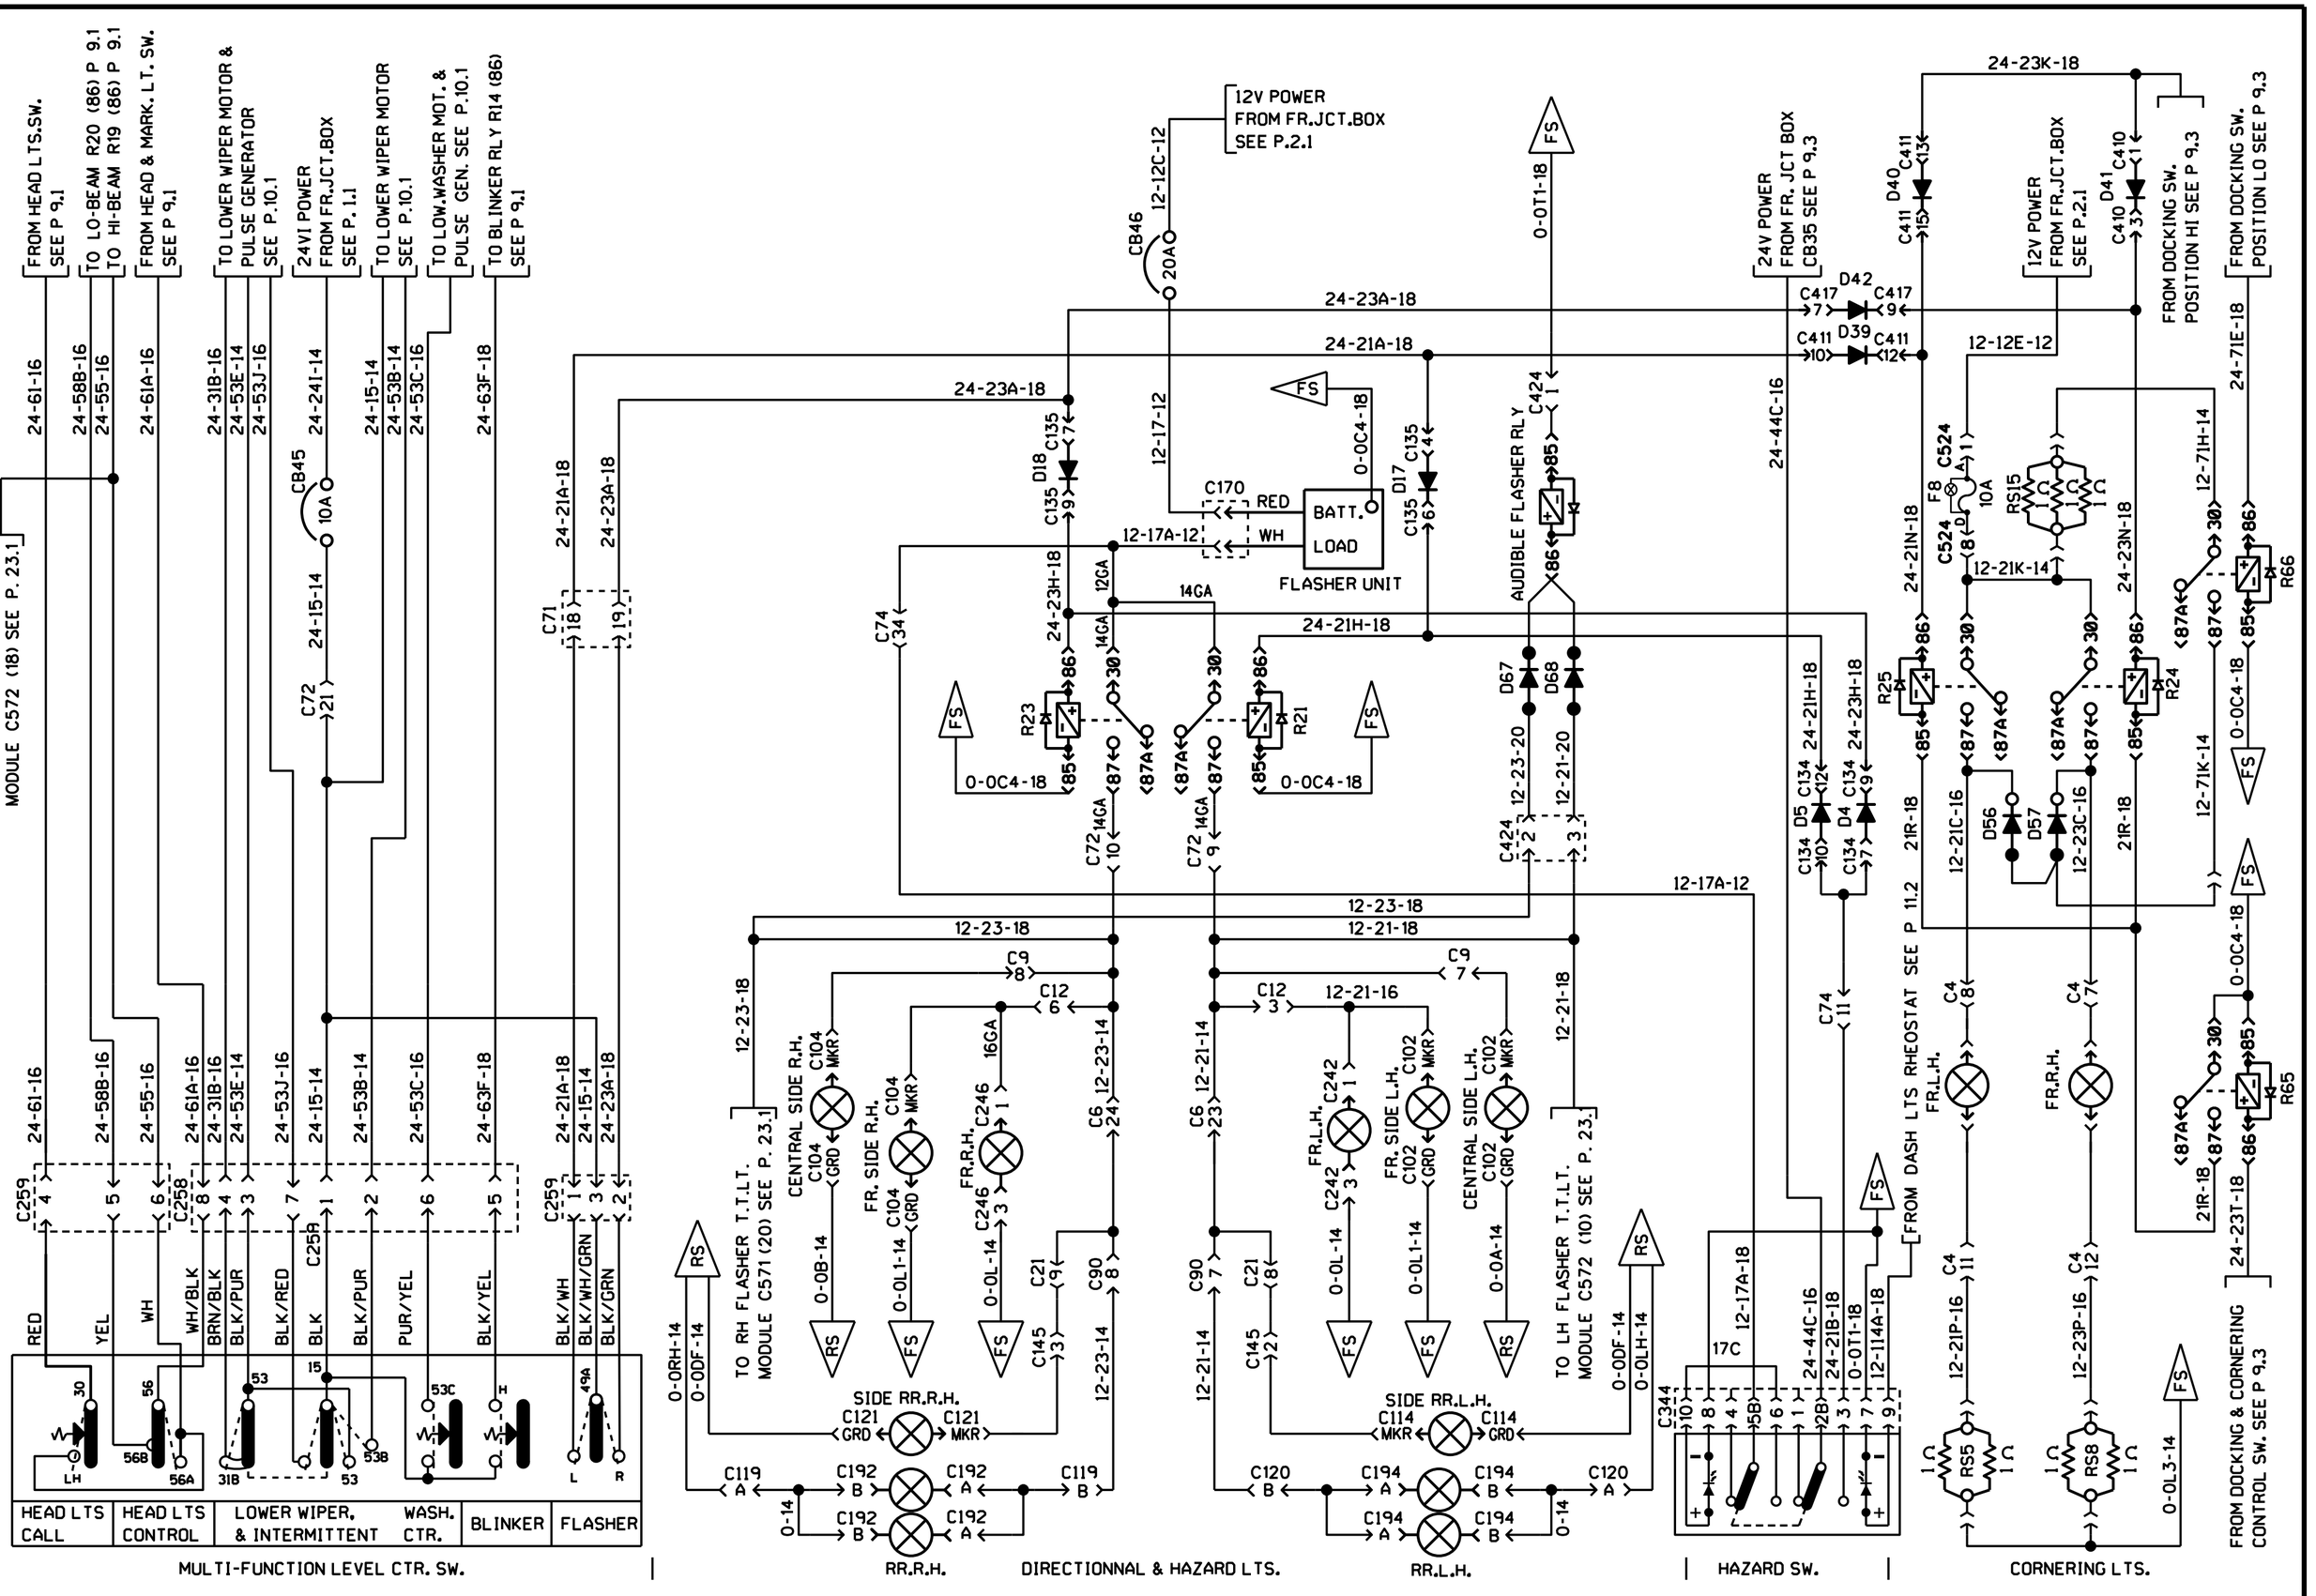

EXTERIOR LIGHTING

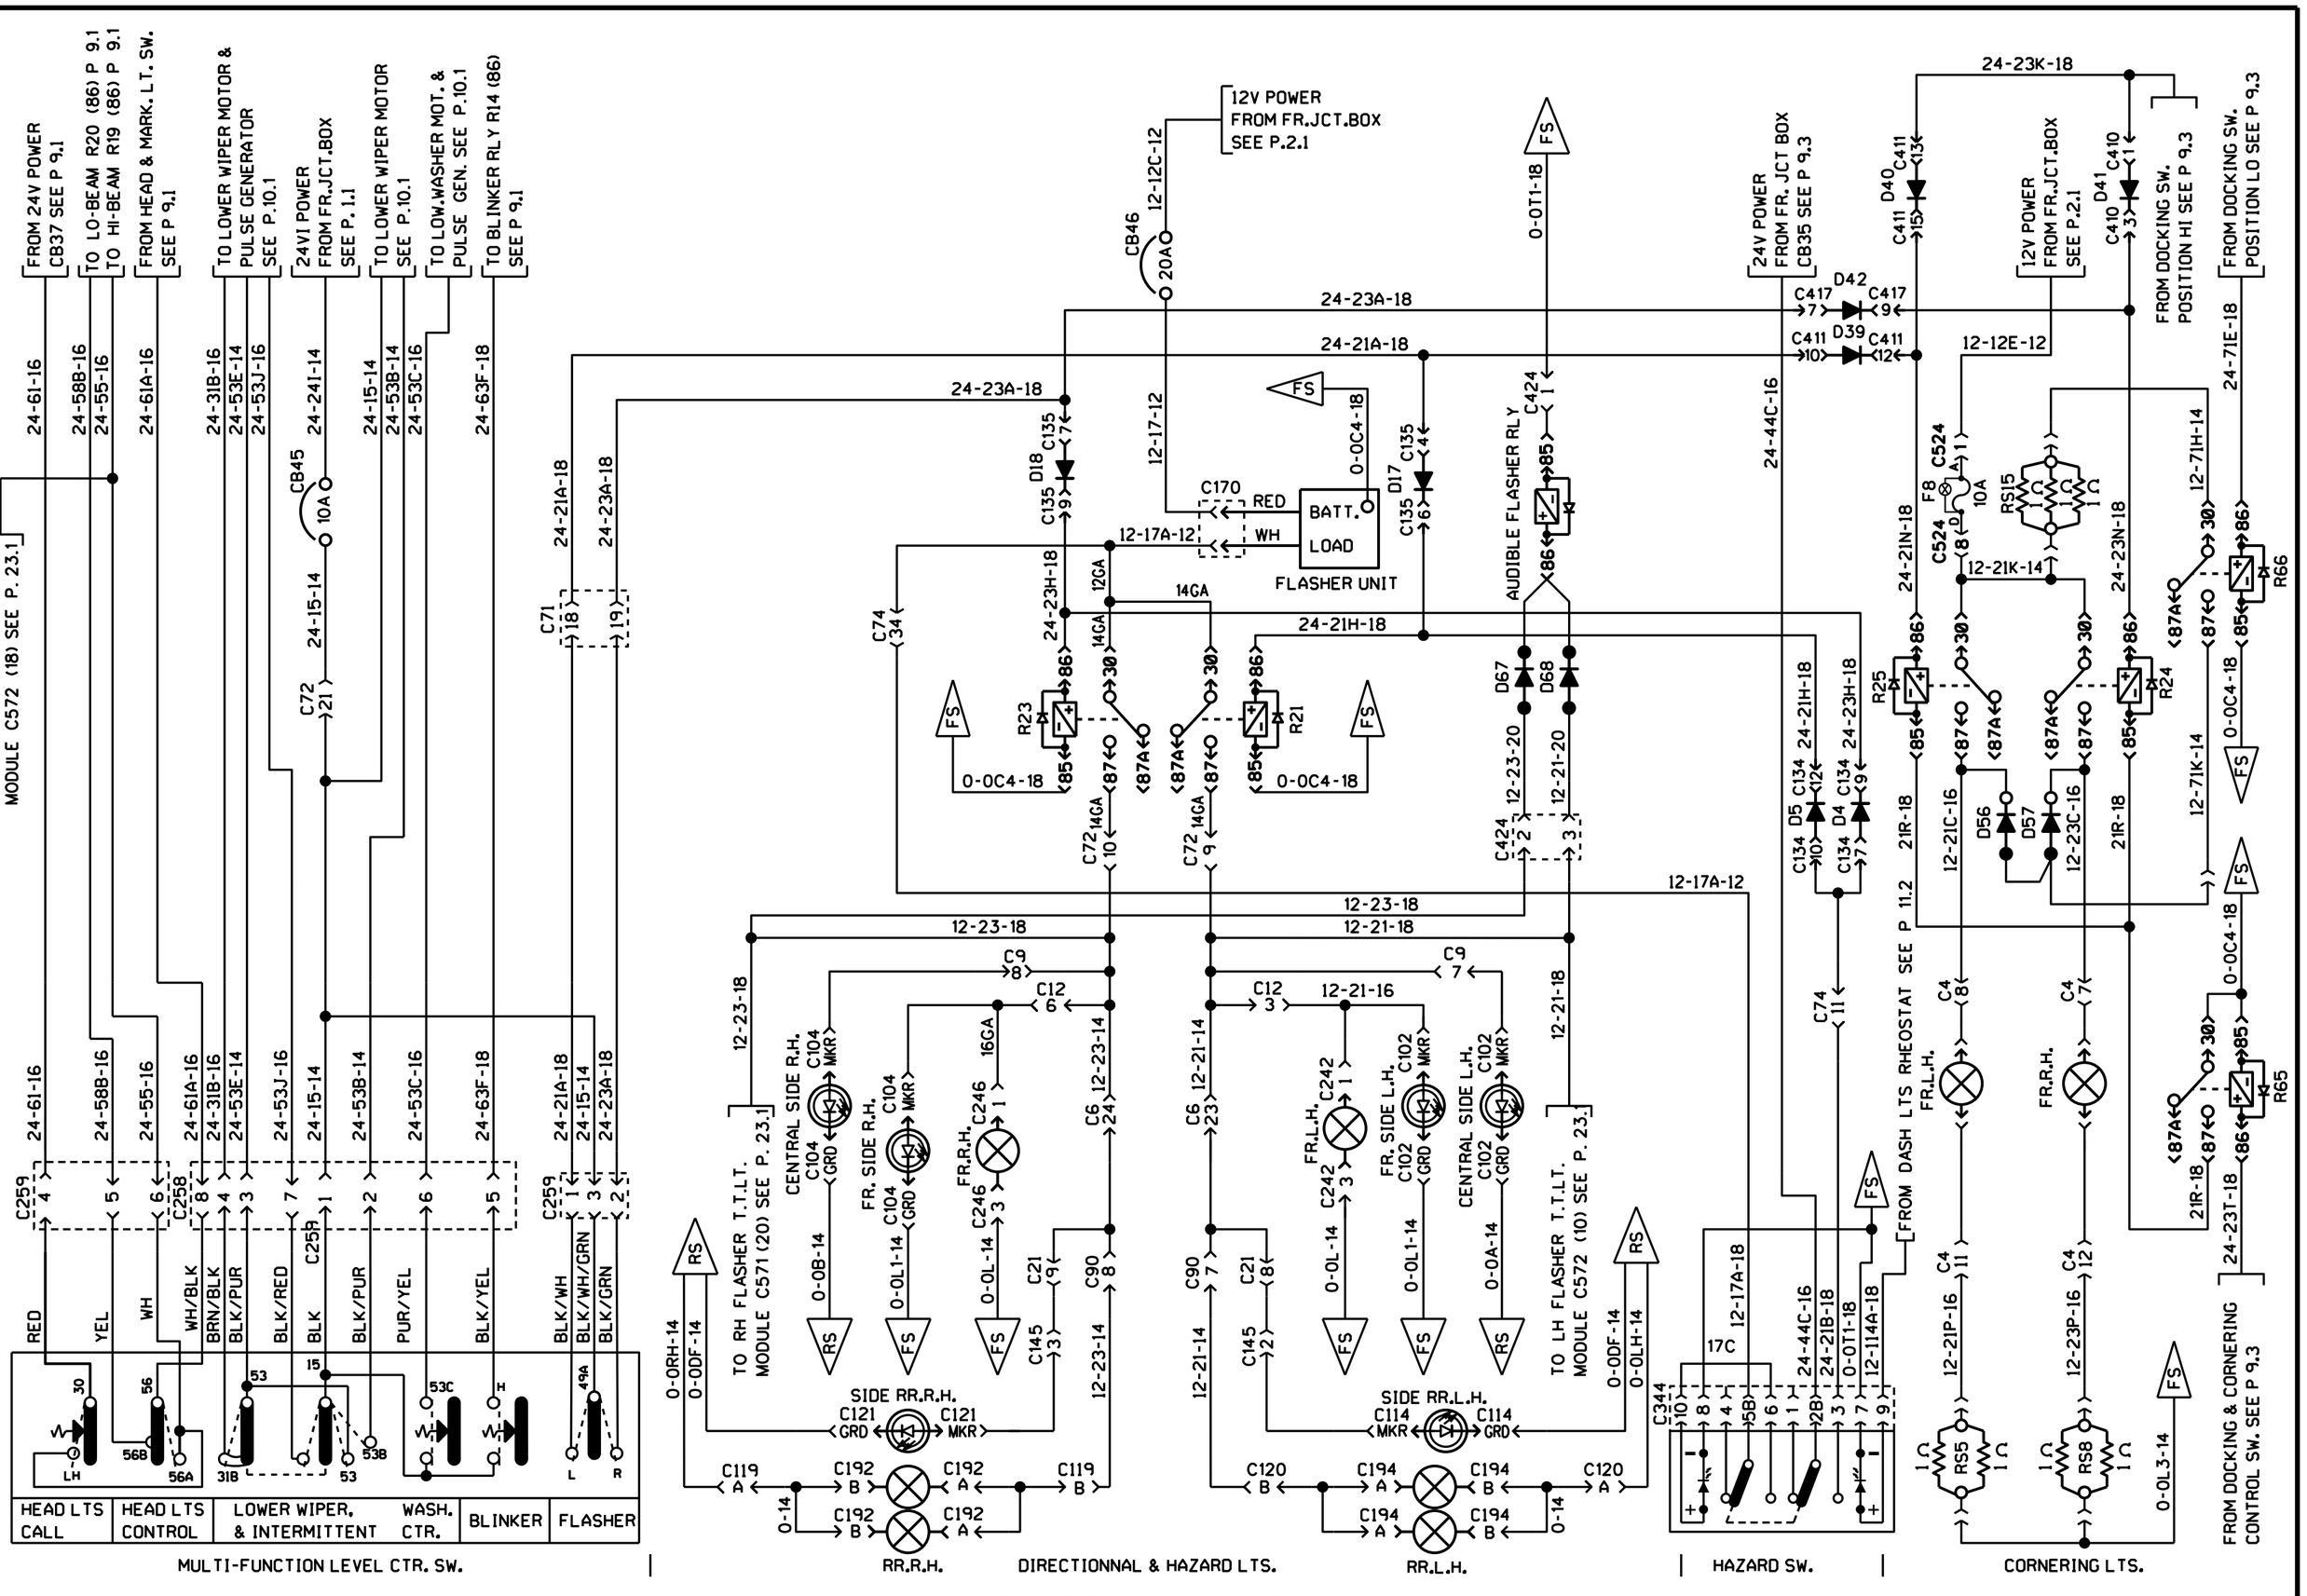

EXTERIOR LIGHTING

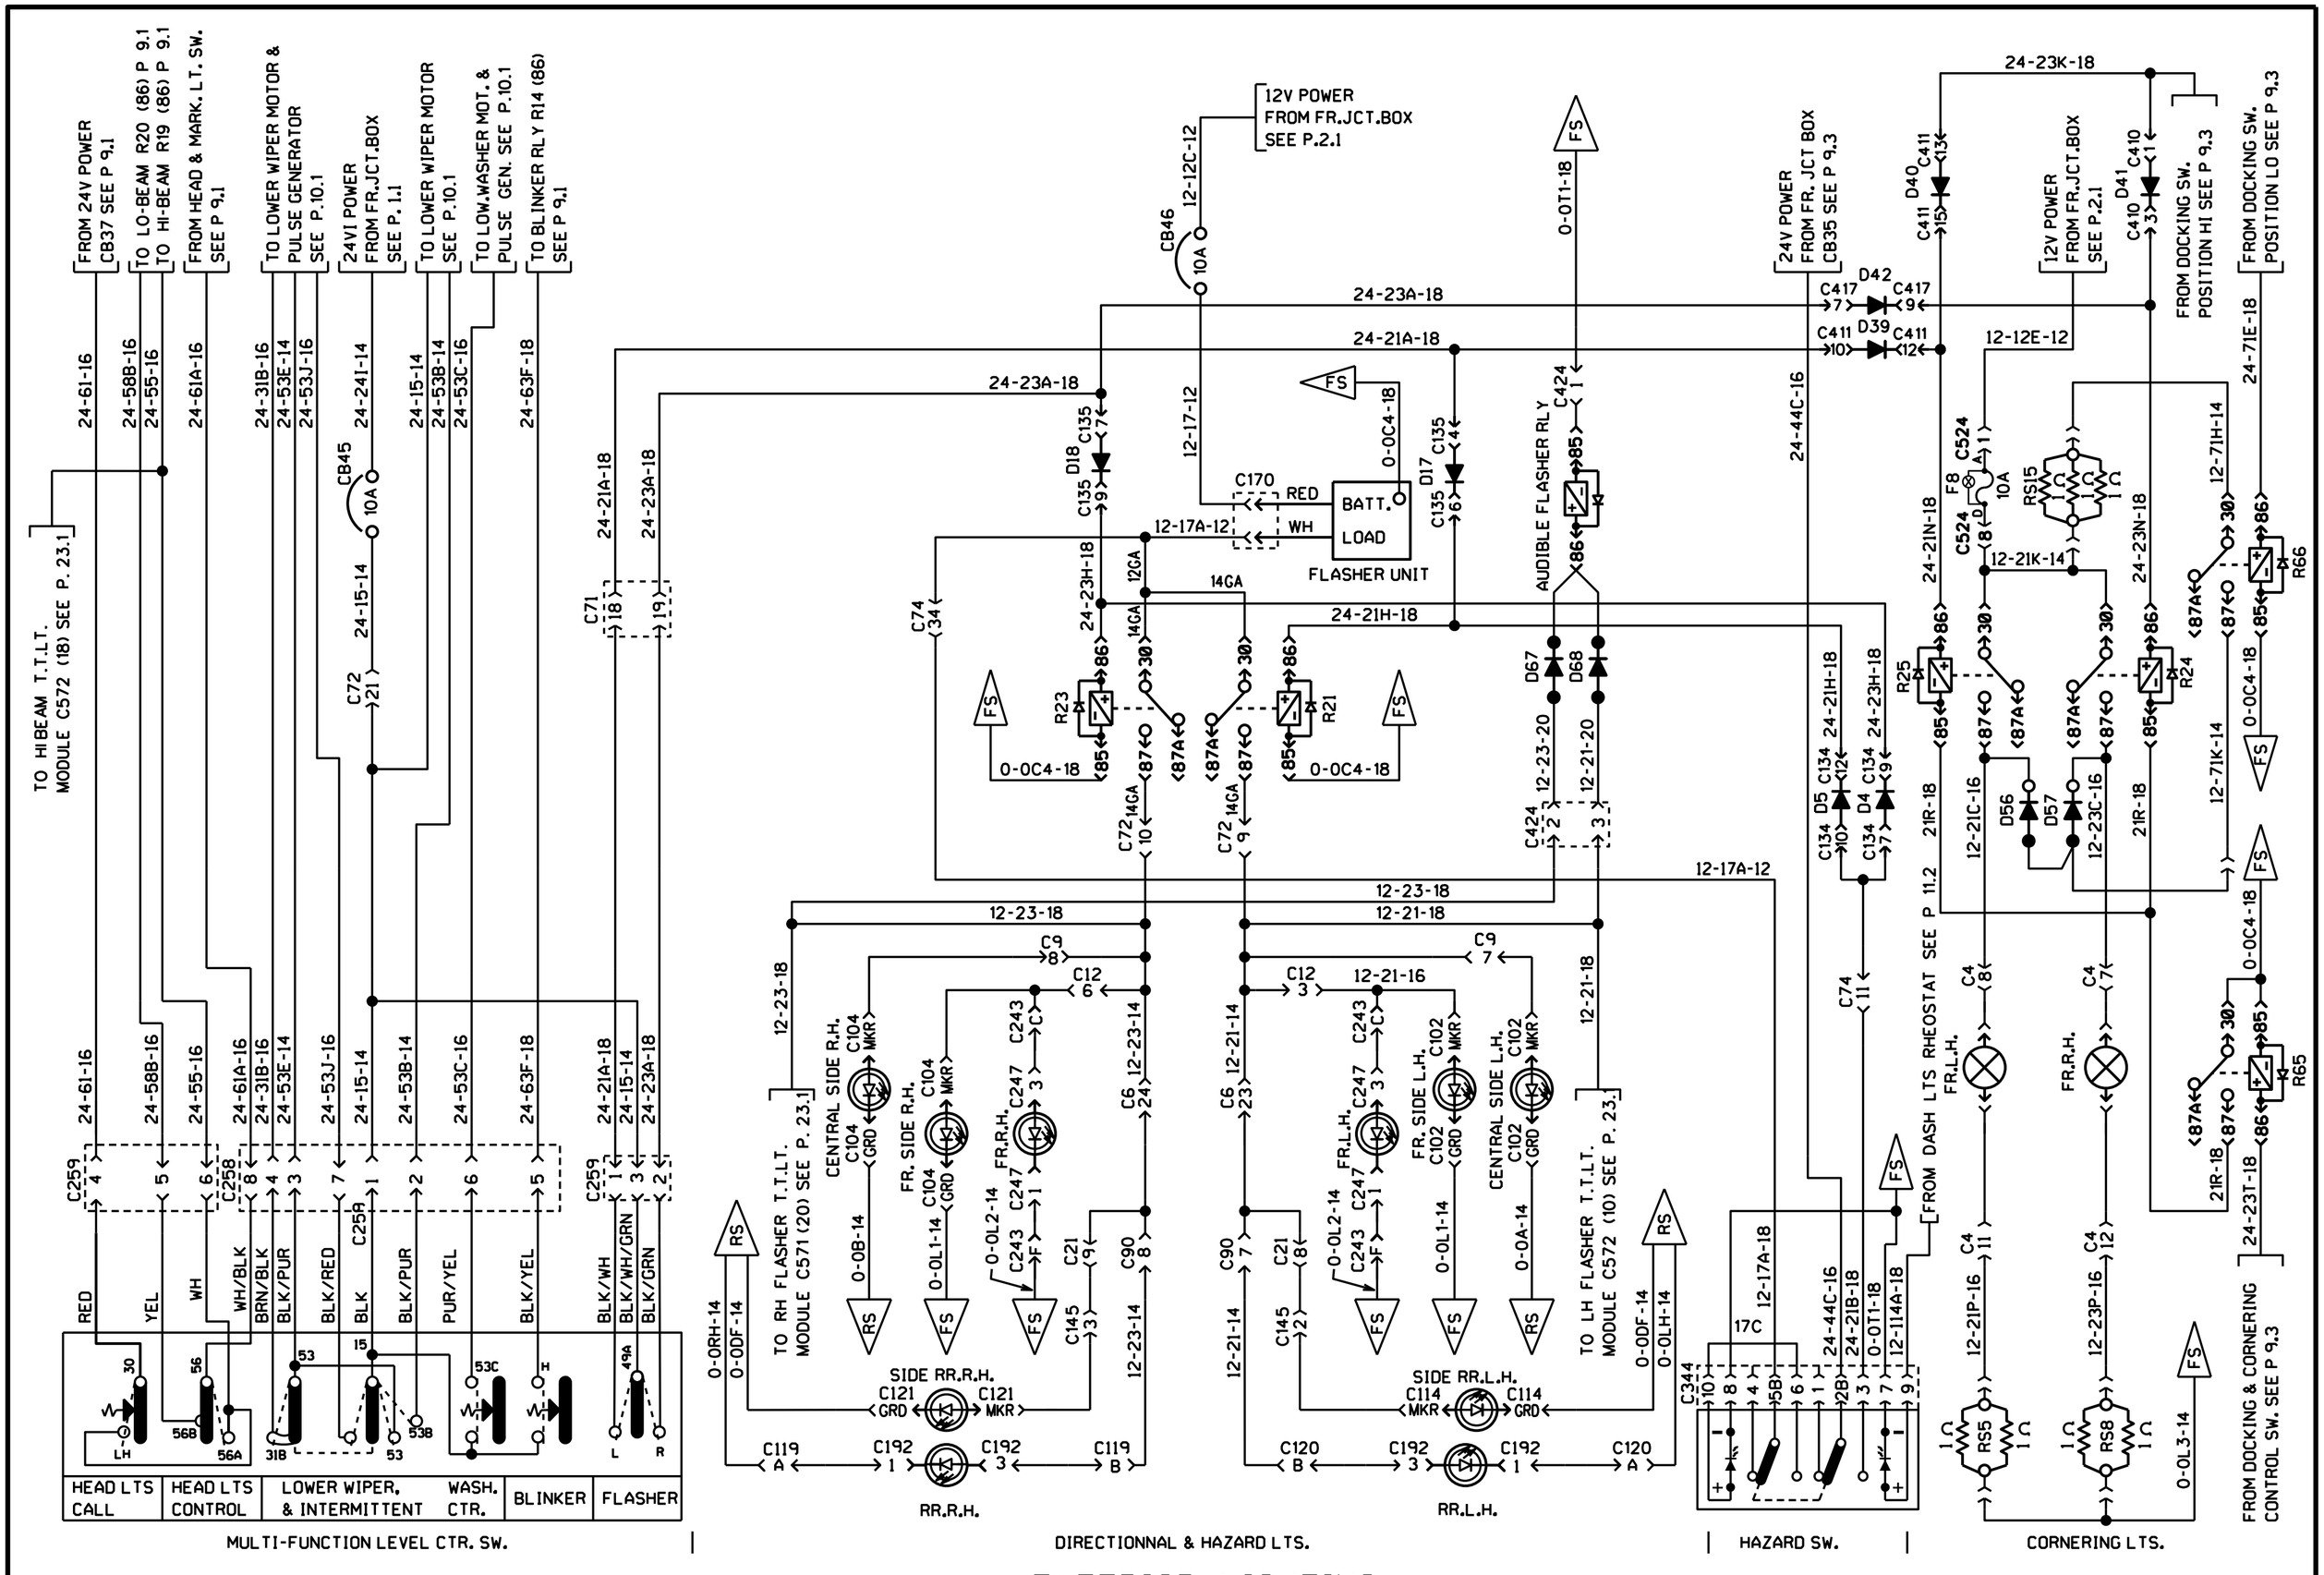

EXTERIOR LIGHTING

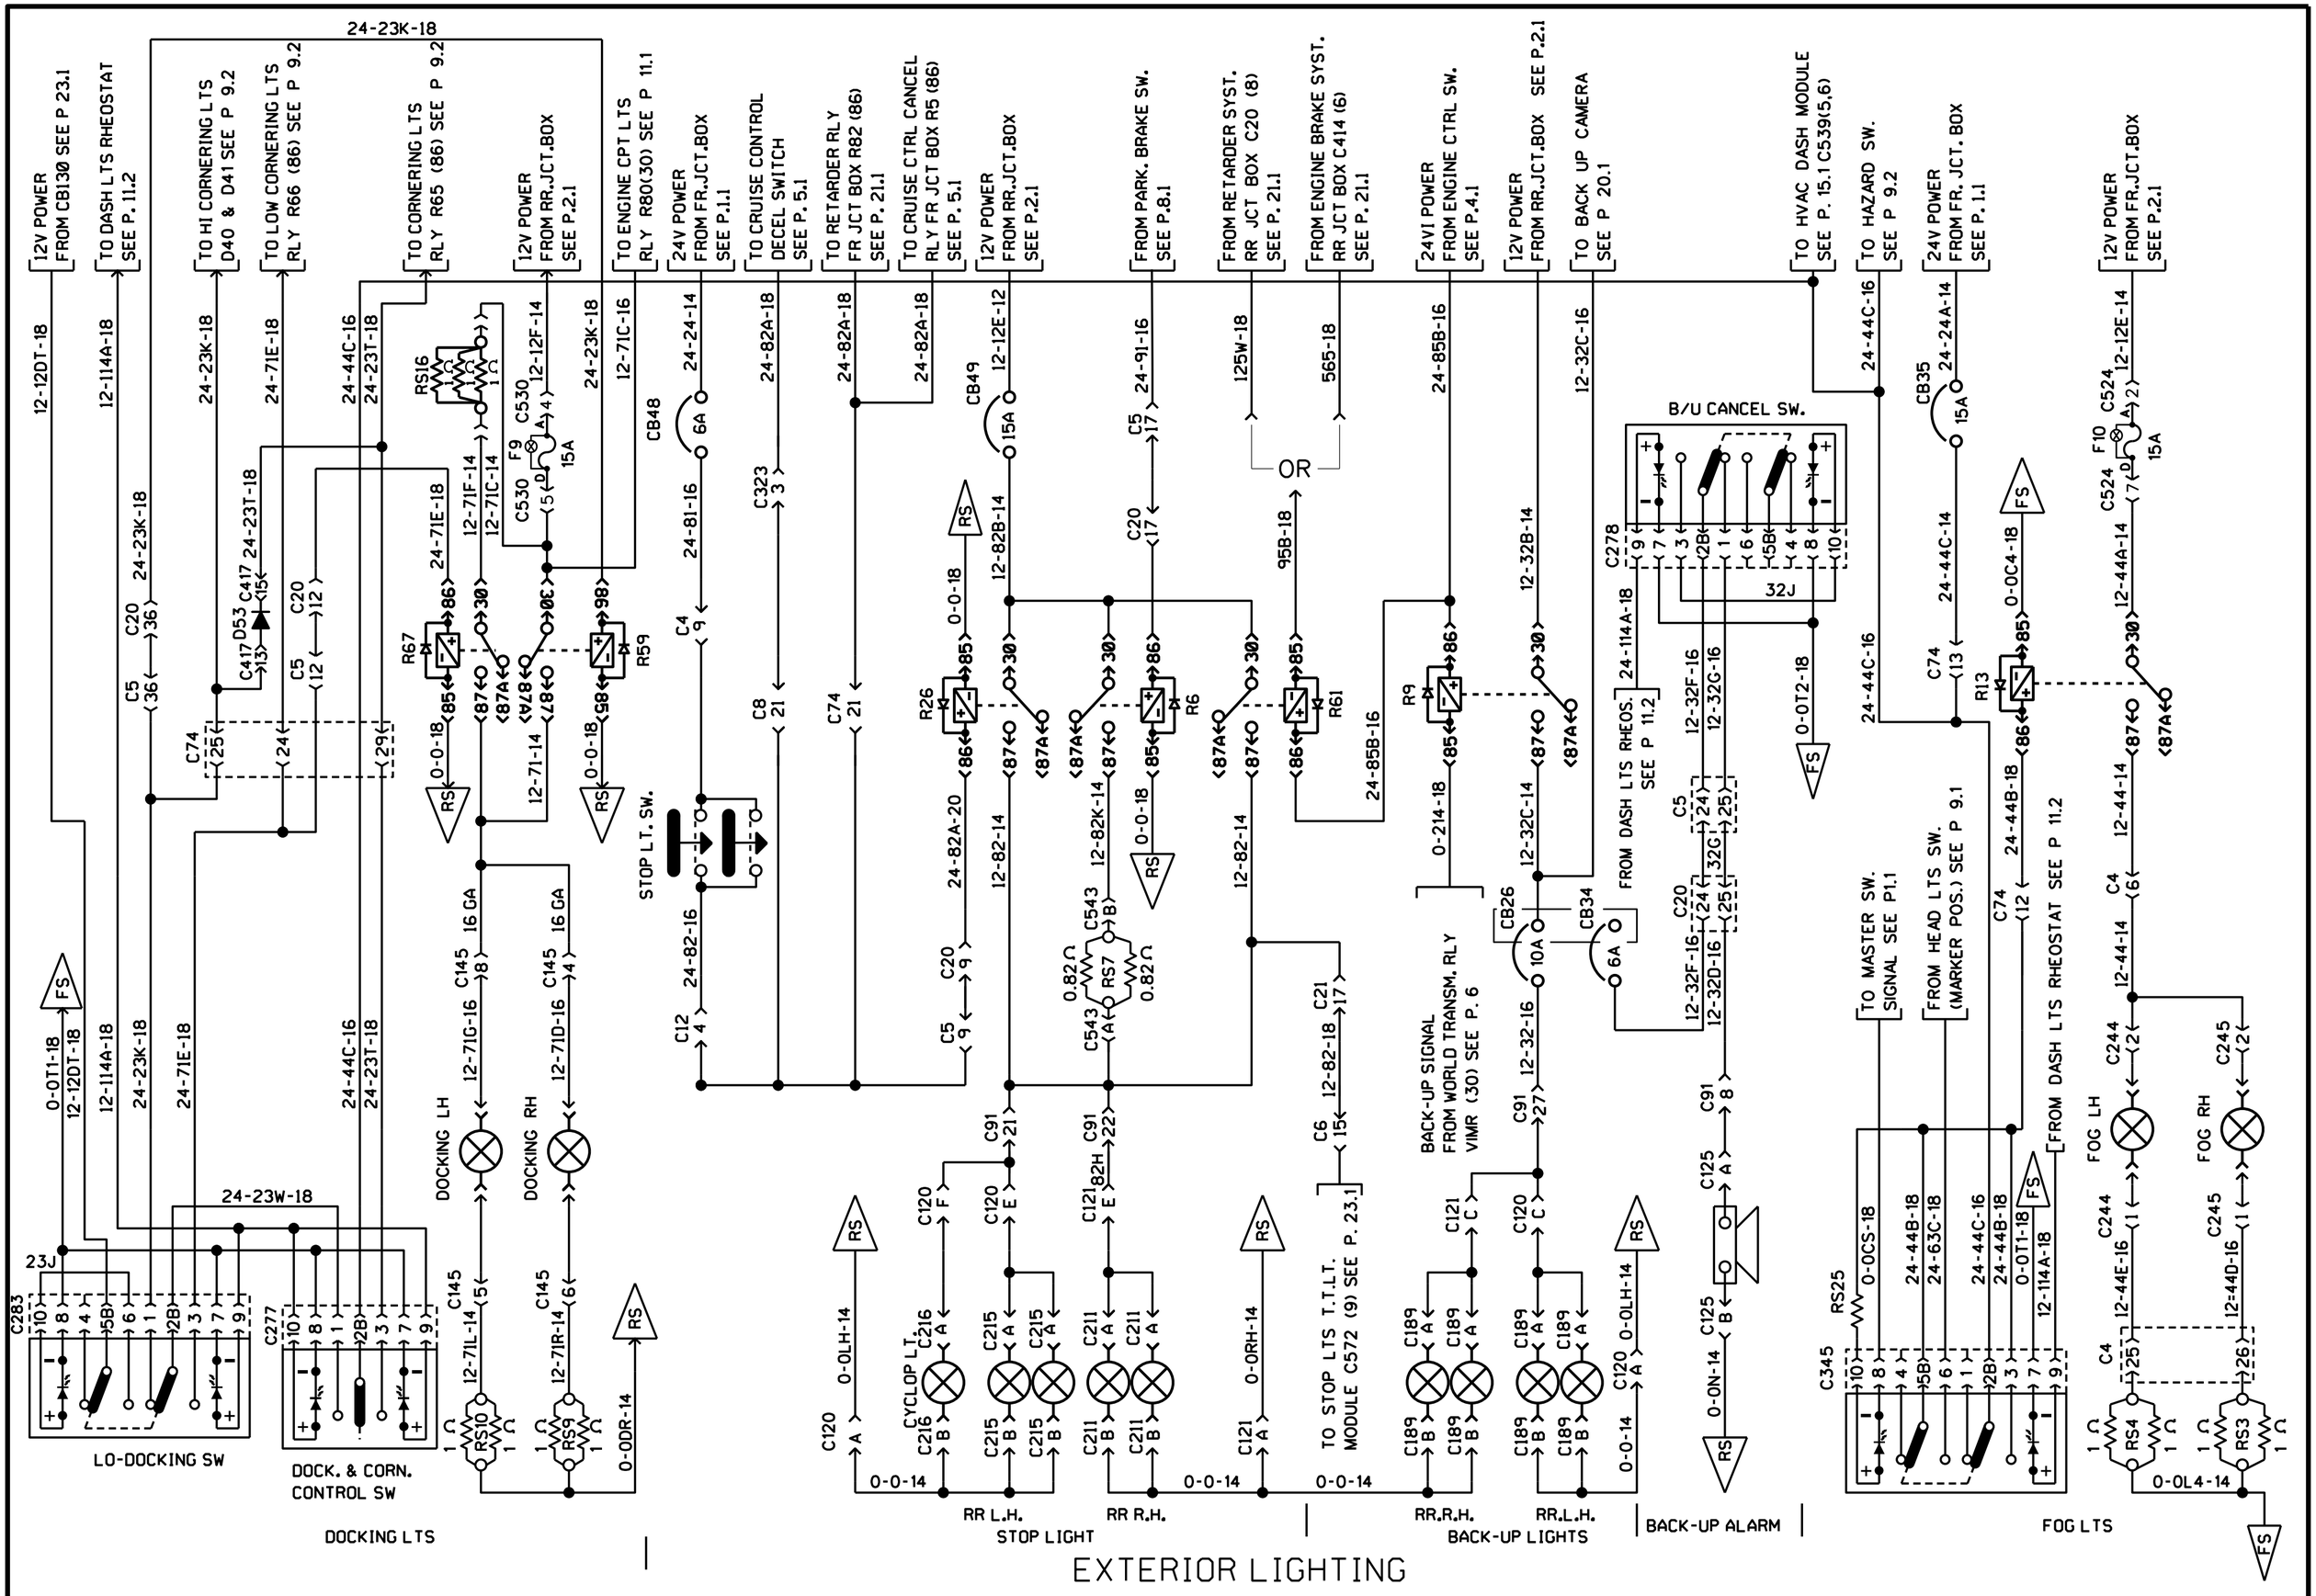
12V POWER FROM CB130 SEE P 23.1
TO DASH LTS RHEOSTAT SEE P. 11.2
TO HI CORNERING LTS D40 & D41 SEE P 9.2
TO LOW CORNERING LTS RLY R66 (86) SEE P 9.2
TO CORNERING LTS RLY R65 (86) SEE P 9.2
12V POWER FROM RR.JCT.BOX SEE P.2.1
TO ENGINE CPT LTS RLY R80(30) SEE P 11.1
24V POWER FROM FR.JCT.BOX SEE P.1.1
TO CRUISE CONTROL DECEL SWITCH SEE P. 5.1
TO RETARDER RLY FR JCT BOX R82 (86) SEE P. 21.1
TO CRUISE CTRL CANCEL RLY FR JCT BOX R5 (86) SEE P. 5.1
12V POWER FROM RR.JCT.BOX SEE P.2.1
FROM PARK. BRAKE SW. SEE P.8.1
FROM RETARDER SYST. RR JCT BOX C20 (8) SEE P. 21.1
FROM ENGINE BRAKE SYST. RR JCT BOX C414 (6) SEE P. 21.1
24VI POWER FROM ENGINE CTRL SW. SEE P.4.1
12V POWER FROM RR.JCT.BOX SEE P.2.1
TO BACK UP CAMERA SEE P 20.1
TO HVAC DASH MODULE SEE P. 15.1 C539(5,6)
TO HAZARD SW. SEE P 9.2
24V POWER FROM FR. JCT. BOX SEE P. 1.1
12V POWER FROM FR.JCT.BOX SEE P.2.1
24-23K-18
24-23W-18
B/U CANCEL SW.
OR
STOP LT. SW.
DOCKING LH
DOCKING RH
LO-DOCKING SW
DOCK. & CORN. CONTROL SW
DOCKING LTS
CYCLOP LT.
RR L.H. STOP LIGHT
RR R.H.
TO STOP LTS T.T.LT. MODULE C572 (9) SEE P. 23.1
BACK-UP SIGNAL FROM WORLD TRANSM. RLY VIMR (30) SEE P. 6
RR.R.H.
RR.L.H.
BACK-UP LIGHTS
BACK-UP ALARM
FROM DASH LTS RHEOS. SEE P 11.2
TO MASTER SW. SIGNAL SEE P1.1
FROM HEAD LTS SW. (MARKER POS.) SEE P 9.1
FROM DASH LTS RHEOSTAT SEE P 11.2
FOG LH
FOG RH
FOG LTS
EXTERIOR LIGHTING

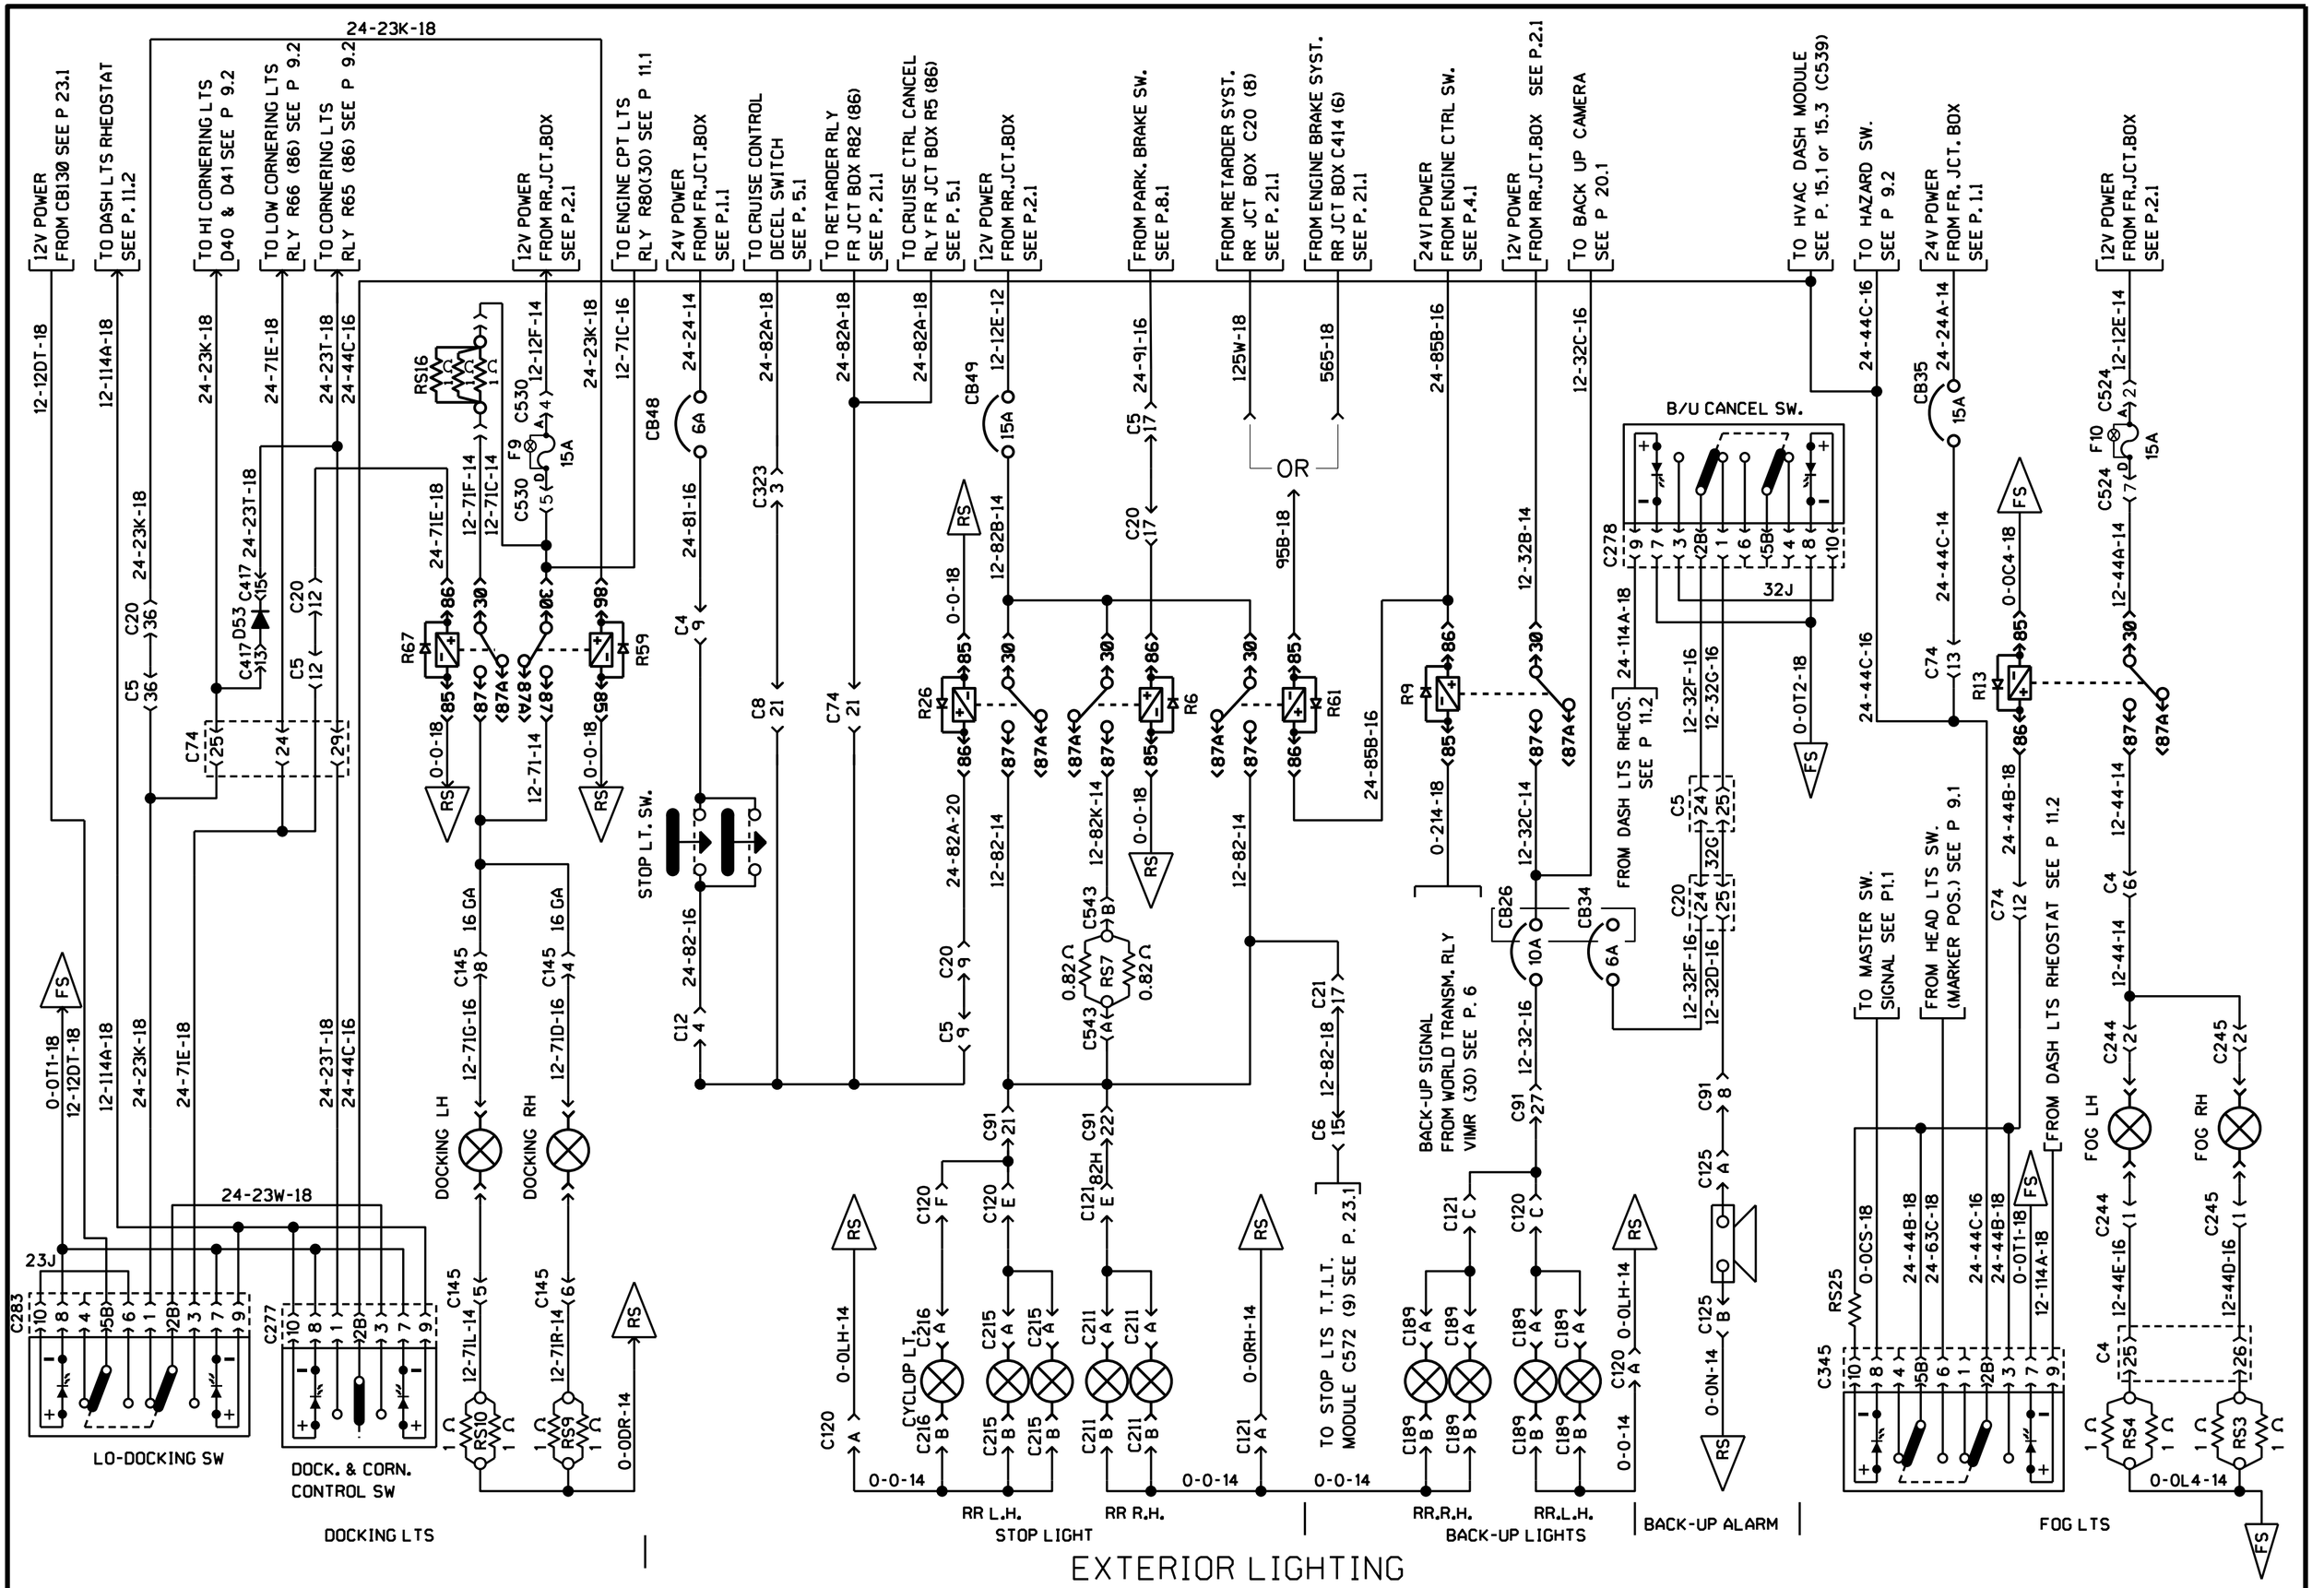
24-23K-18
12V POWER FROM CB130 SEE P 23.1
TO DASH LTS RHEOSTAT SEE P. 11.2
TO HI CORNERING LTS D40 & D41 SEE P 9.2
TO LOW CORNERING LTS RLY R66 (86) SEE P 9.2
TO CORNERING LTS RLY R65 (86) SEE P 9.2
12V POWER FROM RR.JCT.BOX SEE P.2.1
TO ENGINE CPT LTS RLY R80(30) SEE P 11.1
24V POWER FROM FR.JCT.BOX SEE P.1.1
TO CRUISE CONTROL DECEL SWITCH SEE P. 5.1
TO RETARDER RLY FR JCT BOX R82 (86) SEE P. 21.1
TO CRUISE CTRL CANCEL RLY FR JCT BOX R5 (86) SEE P. 5.1
12V POWER FROM RR.JCT.BOX SEE P.2.1
FROM PARK. BRAKE SW. SEE P.8.1
FROM RETARDER SYST. RR JCT BOX C20 (8) SEE P. 21.1
FROM ENGINE BRAKE SYST. RR JCT BOX C414 (6) SEE P. 21.1
24VI POWER FROM ENGINE CTRL SW. SEE P.4.1
12V POWER FROM RR.JCT.BOX SEE P.2.1
TO BACK UP CAMERA SEE P 20.1
TO HVAC DASH MODULE SEE P. 15.1 or 15.3 (C539)
TO HAZARD SW. SEE P 9.2
24V POWER FROM FR. JCT. BOX SEE P. 1.1
12V POWER FROM FR.JCT.BOX SEE P.2.1
B/U CANCEL SW.
FROM DASH LTS RHEOSTAT SEE P 11.2
TO MASTER SW. SIGNAL SEE P1.1
FROM HEAD LTS SW. (MARKER POS.) SEE P 9.1
FROM DASH LTS RHEOSTAT SEE P 11.2
STOP LT. SW.
DOCKING LH
DOCKING RH
LO-DOCKING SW
DOCK. & CORN. CONTROL SW
DOCKING LTS
RR L.H. STOP LIGHT
RR R.H.
TO STOP LTS T.T.L.T. MODULE C572 (9) SEE P. 23.1
RR.R.H.
RR.L.H.
BACK-UP LIGHTS
BACK-UP SIGNAL FROM WORLD TRANSM. RLY VIMR (30) SEE P. 6
BACK-UP ALARM
FOG LH
FOG RH
FOG LTS
OR
EXTERIOR LIGHTING

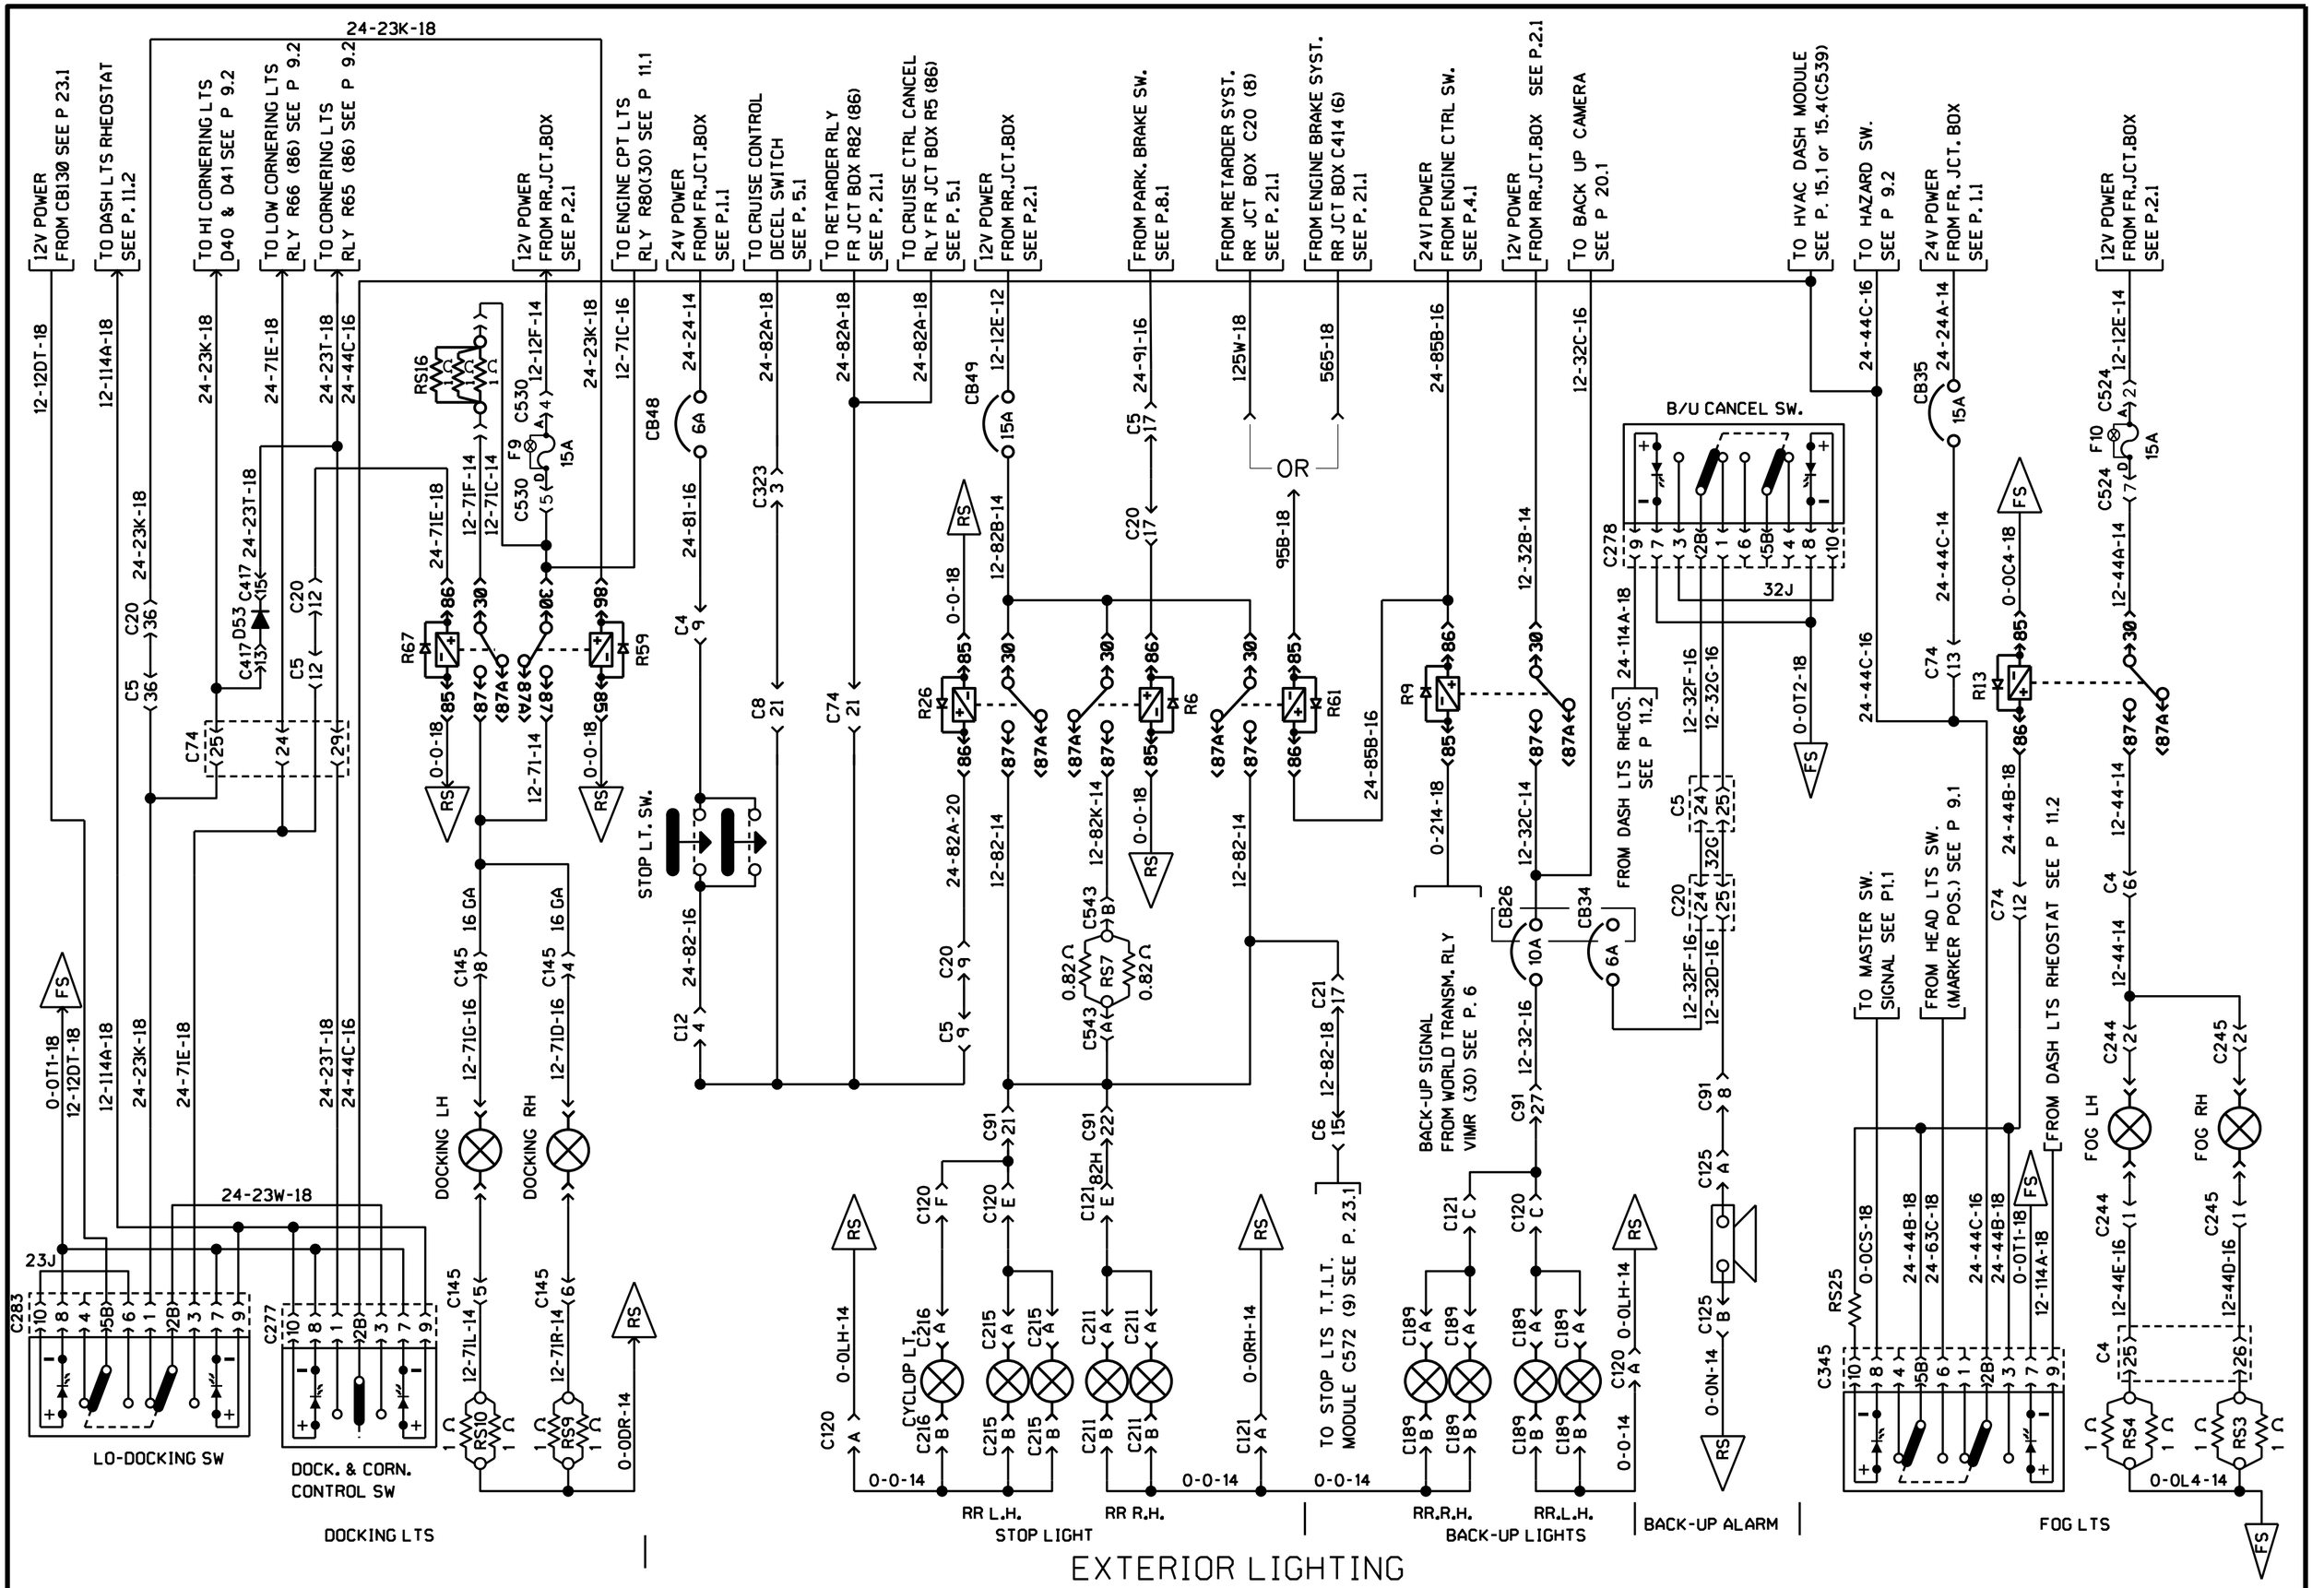
24-23K-18
12V POWER FROM CB130 SEE P 23.1
TO DASH LTS RHEOSTAT SEE P. 11.2
TO HI CORNERING LTS D40 & D41 SEE P 9.2
TO LOW CORNERING LTS RLY R66 (86) SEE P 9.2
TO CORNERING LTS RLY R65 (86) SEE P 9.2
12V POWER FROM RR.JCT.BOX SEE P.2.1
TO ENGINE CPT LTS RLY R80(30) SEE P 11.1
24V POWER FROM FR.JCT.BOX SEE P.1.1
TO CRUISE CONTROL DECEL SWITCH SEE P. 5.1
TO RETARDER RLY FR JCT BOX R82 (86) SEE P. 21.1
TO CRUISE CTRL CANCEL RLY FR JCT BOX R5 (86) SEE P. 5.1
FROM PARK. BRAKE SW. SEE P.8.1
FROM RETARDER SYST. RR JCT BOX C20 (8) SEE P. 21.1
FROM ENGINE BRAKE SYST. RR JCT BOX C414 (6) SEE P. 21.1
24VI POWER FROM ENGINE CTRL SW. SEE P.4.1
TO BACK UP CAMERA SEE P 20.1
TO HVAC DASH MODULE SEE P. 15.1 or 15.4(C539)
TO HAZARD SW. SEE P 9.2
B/U CANCEL SW.
OR
STOP LT. SW.
DOCKING LH
DOCKING RH
LO-DOCKING SW
DOCK. & CORN. CONTROL SW
DOCKING LTS
RR L.H. STOP LIGHT
RR R.H.
TO STOP LTS T.T.L.T. MODULE C572 (9) SEE P. 23.1
RR.R.H.
RR.L.H.
BACK-UP LIGHTS
BACK-UP SIGNAL FROM WORLD TRANSM. RLY VIMR (30) SEE P. 6
BACK-UP ALARM
TO MASTER SW. SIGNAL SEE P1.1
FROM HEAD LTS SW. (MARKER POS.) SEE P 9.1
FROM DASH LTS RHEOSTAT SEE P 11.2
FOG LTS
FOG LH
FOG RH
EXTERIOR LIGHTING

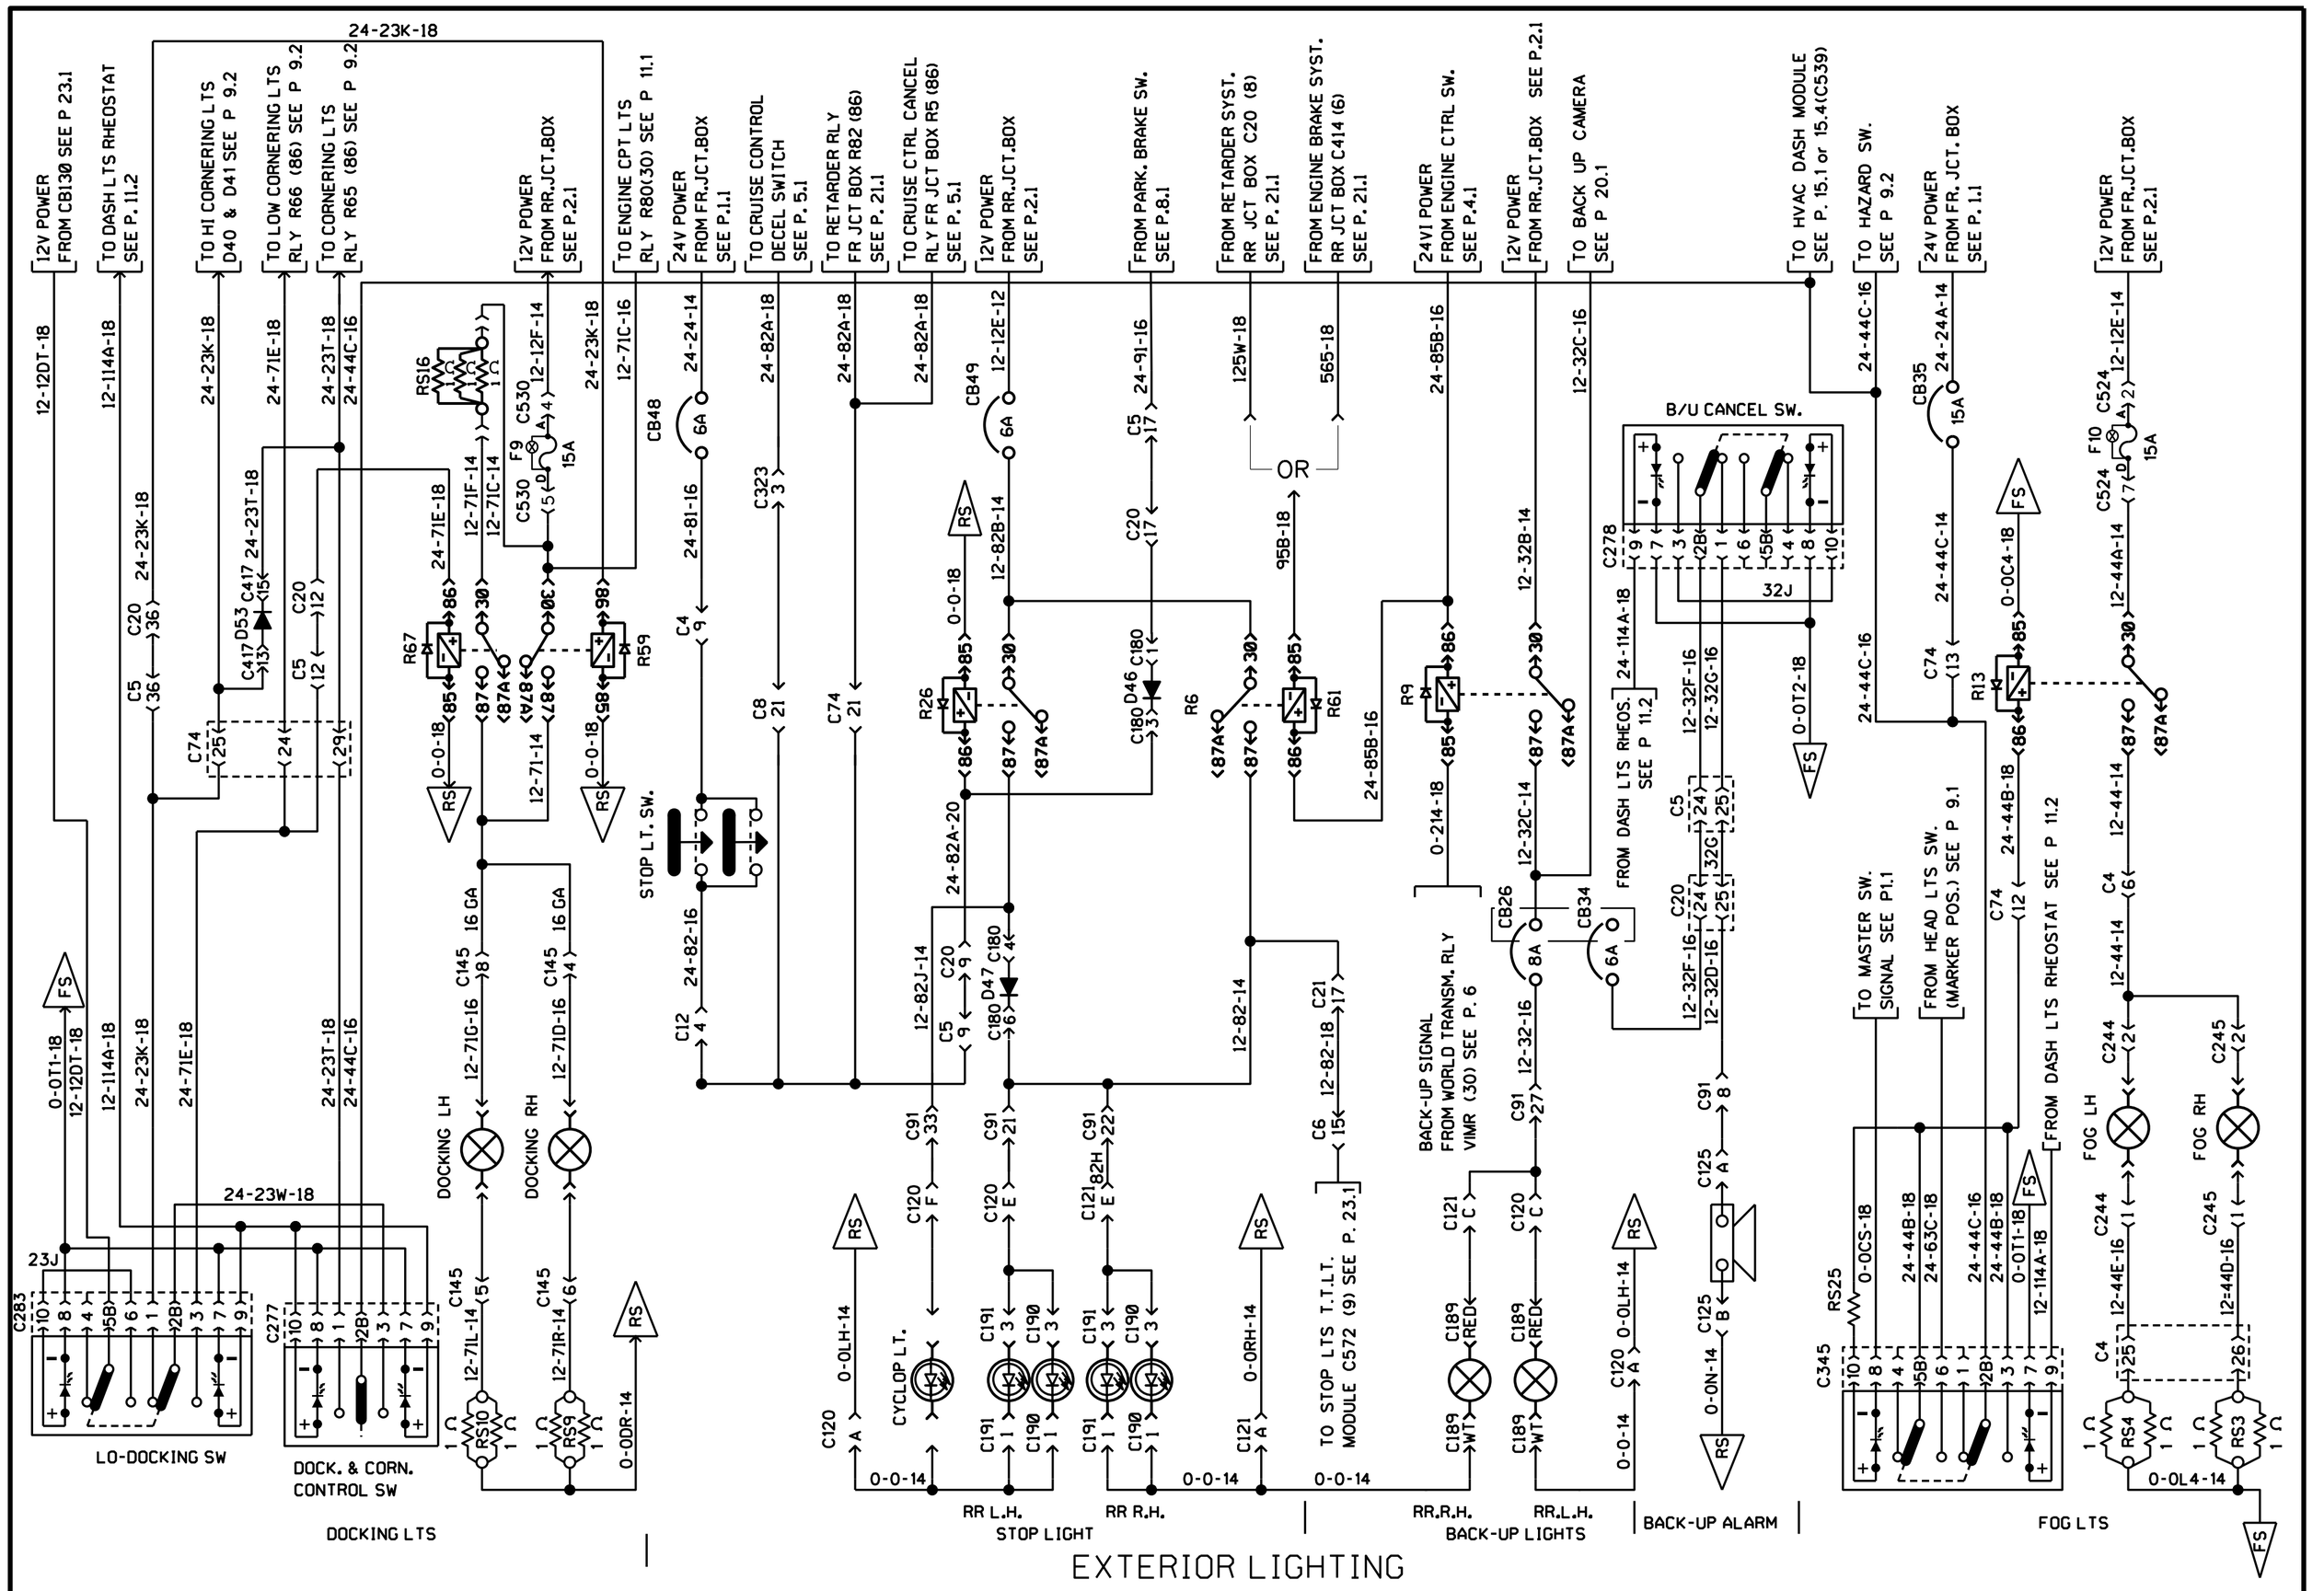

EXTERIOR LIGHTING

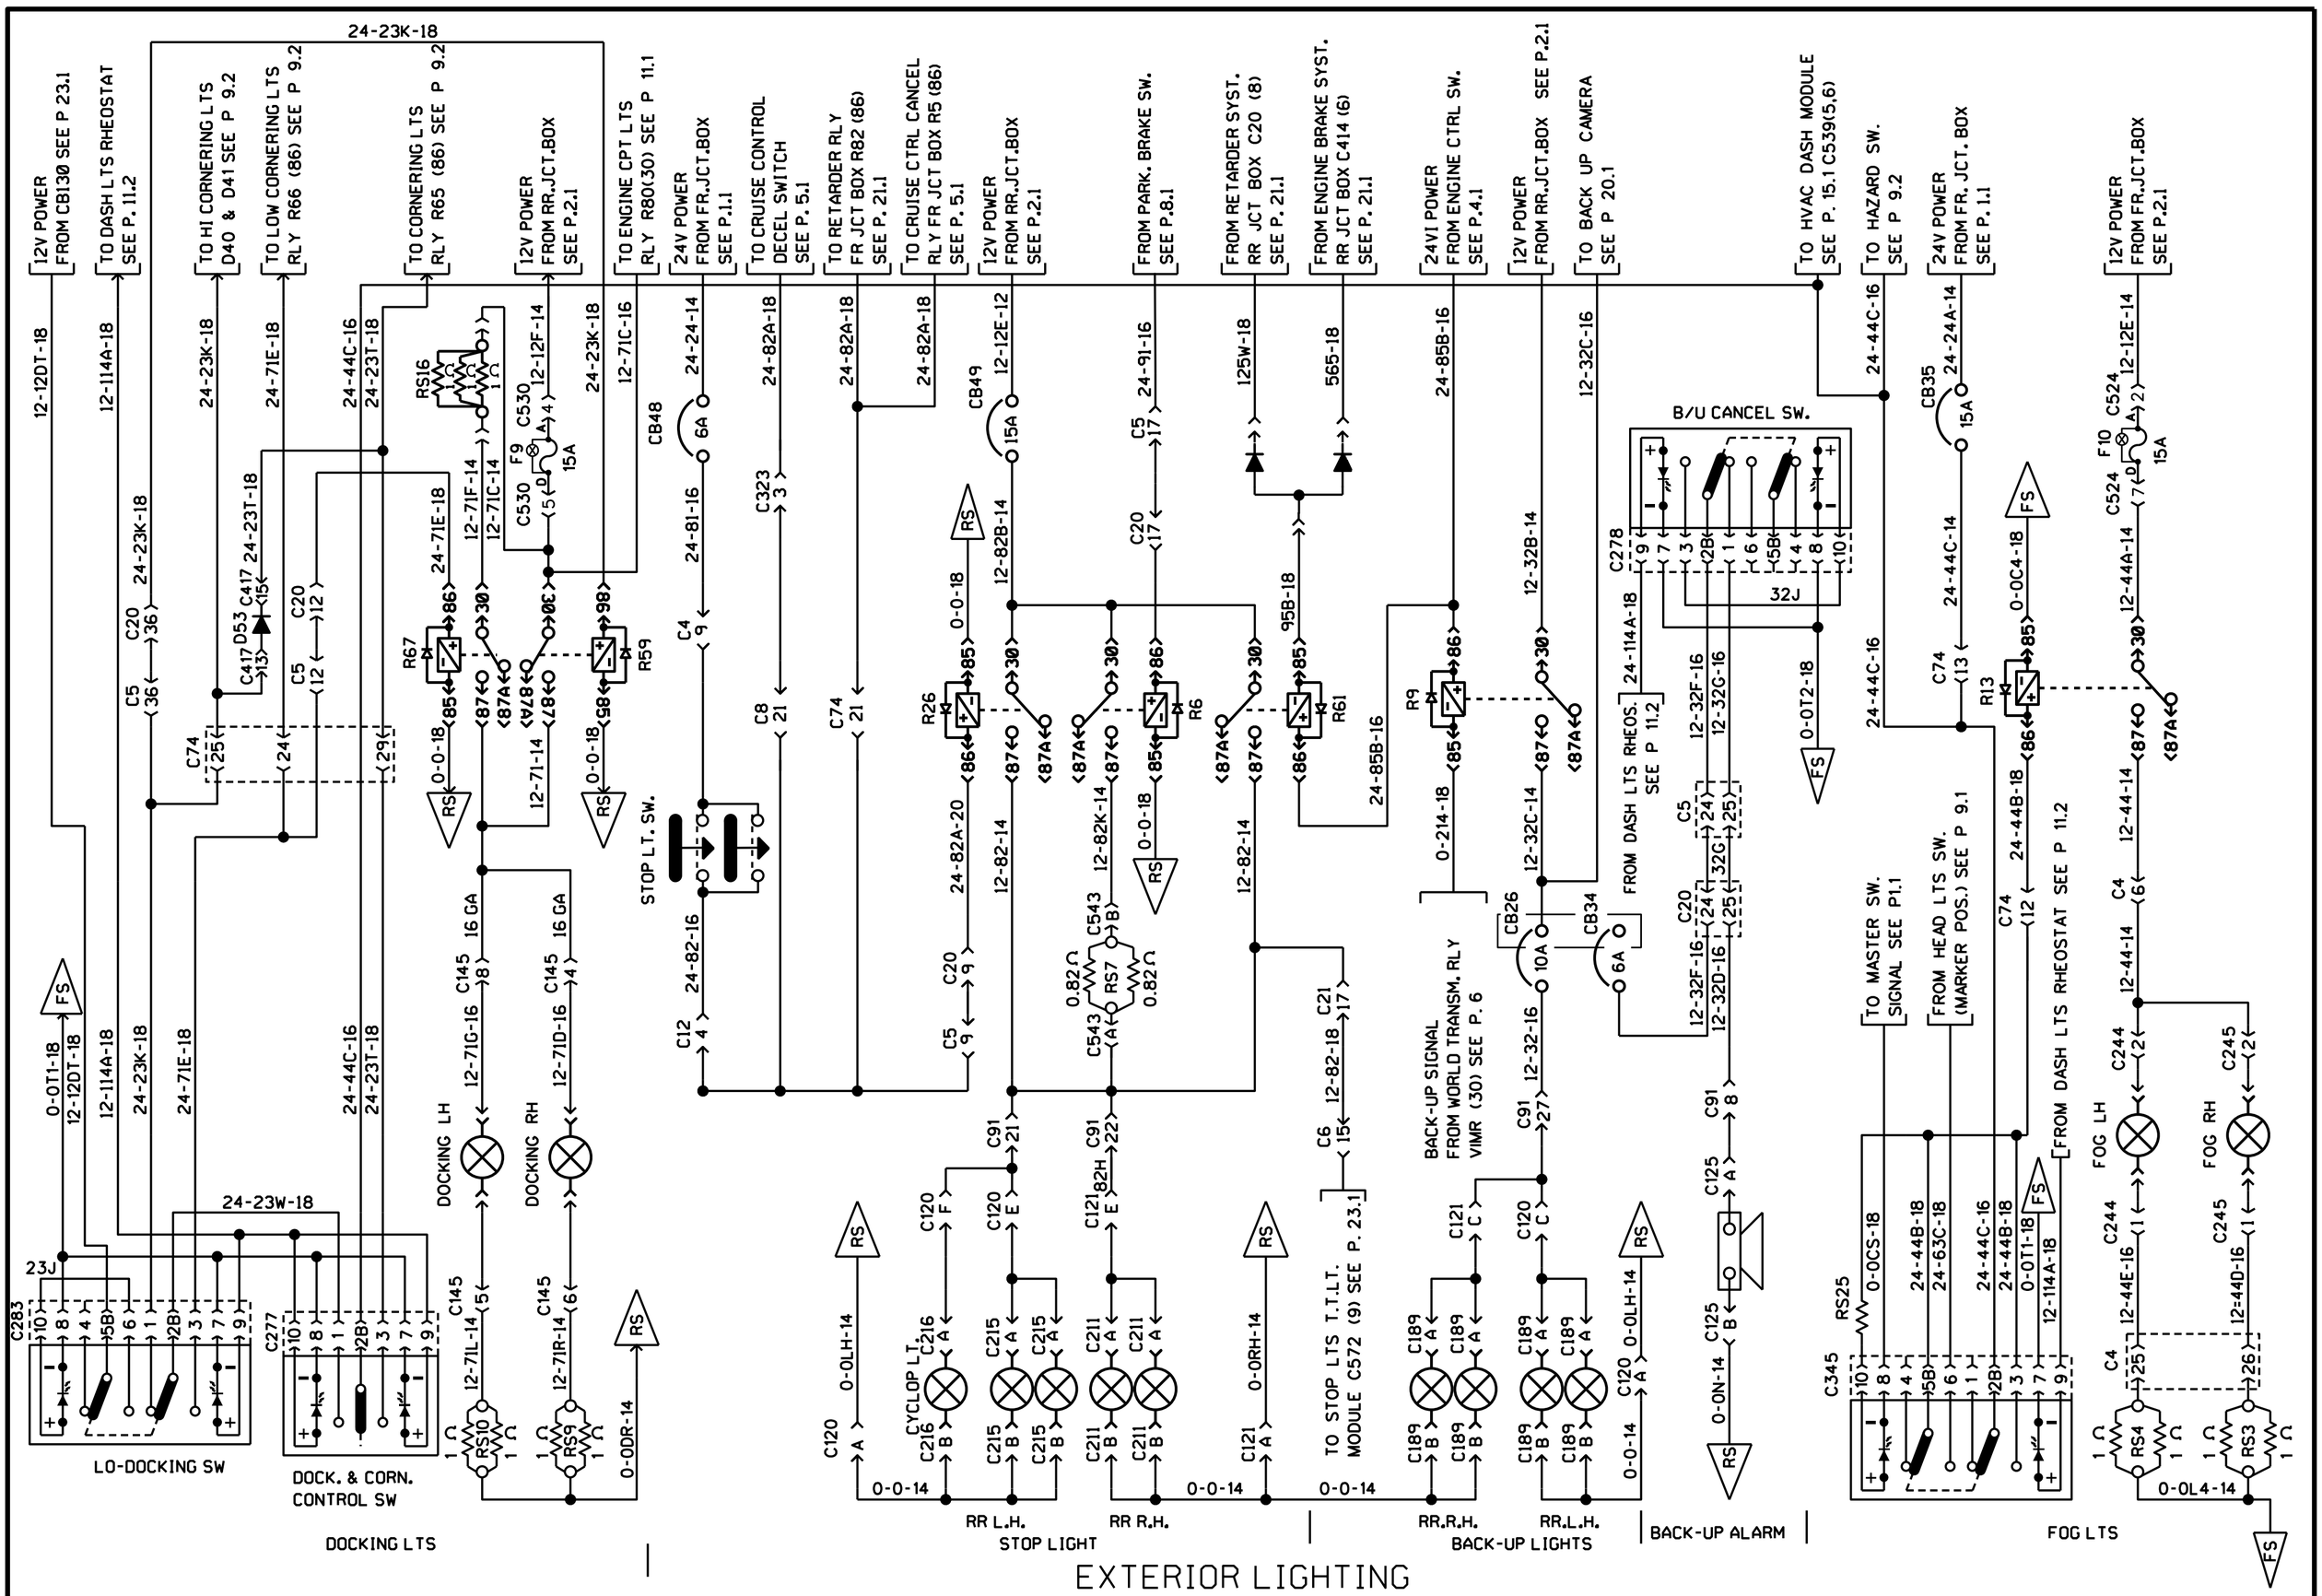
12V POWER FROM CB130 SEE P 23.1
TO DASH LTS RHEOSTAT SEE P. 11.2
TO HI CORNERING LTS D40 & D41 SEE P 9.2
TO LOW CORNERING LTS RLY R66 (86) SEE P 9.2
TO CORNERING LTS RLY R65 (86) SEE P 9.2
12V POWER FROM RR.JCT.BOX SEE P.2.1
TO ENGINE CPT LTS RLY R80(30) SEE P 11.1
24V POWER FROM FR.JCT.BOX SEE P.1.1
TO CRUISE CONTROL DECEL SWITCH SEE P. 5.1
TO RETARDER RLY FR JCT BOX R82 (86) SEE P. 21.1
TO CRUISE CTRL CANCEL RLY FR JCT BOX R5 (86) SEE P. 5.1
12V POWER FROM RR.JCT.BOX SEE P.2.1
FROM PARK. BRAKE SW. SEE P.8.1
FROM RETARDER SYST. RR JCT BOX C20 (8) SEE P. 21.1
FROM ENGINE BRAKE SYST. RR JCT BOX C414 (6) SEE P. 21.1
24VI POWER FROM ENGINE CTRL SW. SEE P.4.1
12V POWER FROM RR.JCT.BOX SEE P.2.1
TO BACK UP CAMERA SEE P 20.1
TO HVAC DASH MODULE SEE P. 15.1 C539(5,6)
TO HAZARD SW. SEE P 9.2
24V POWER FROM FR. JCT. BOX SEE P. 1.1
12V POWER FROM FR.JCT.BOX SEE P.2.1
24-23K-18
B/U CANCEL SW.
STOP LT. SW.
DOCKING LH
DOCKING RH
LO-DOCKING SW
DOCK. & CORN. CONTROL SW
DOCKING LTS
RR L.H. STOP LIGHT
RR R.H.
RR.R.H.
RR.L.H.
BACK-UP LIGHTS
BACK-UP ALARM
BACK-UP SIGNAL FROM WORLD TRANSM. VIMR (30) SEE P. 6
TO STOP LTS T.T.LT. MODULE C572 (9) SEE P. 23.1
FROM DASH LTS RHEOSTAT SEE P 11.2
TO MASTER SW. SIGNAL SEE P1.1
FROM HEAD LTS SW. (MARKER POS.) SEE P 9.1
FOG LH
FOG RH
FOG LTS
EXTERIOR LIGHTING

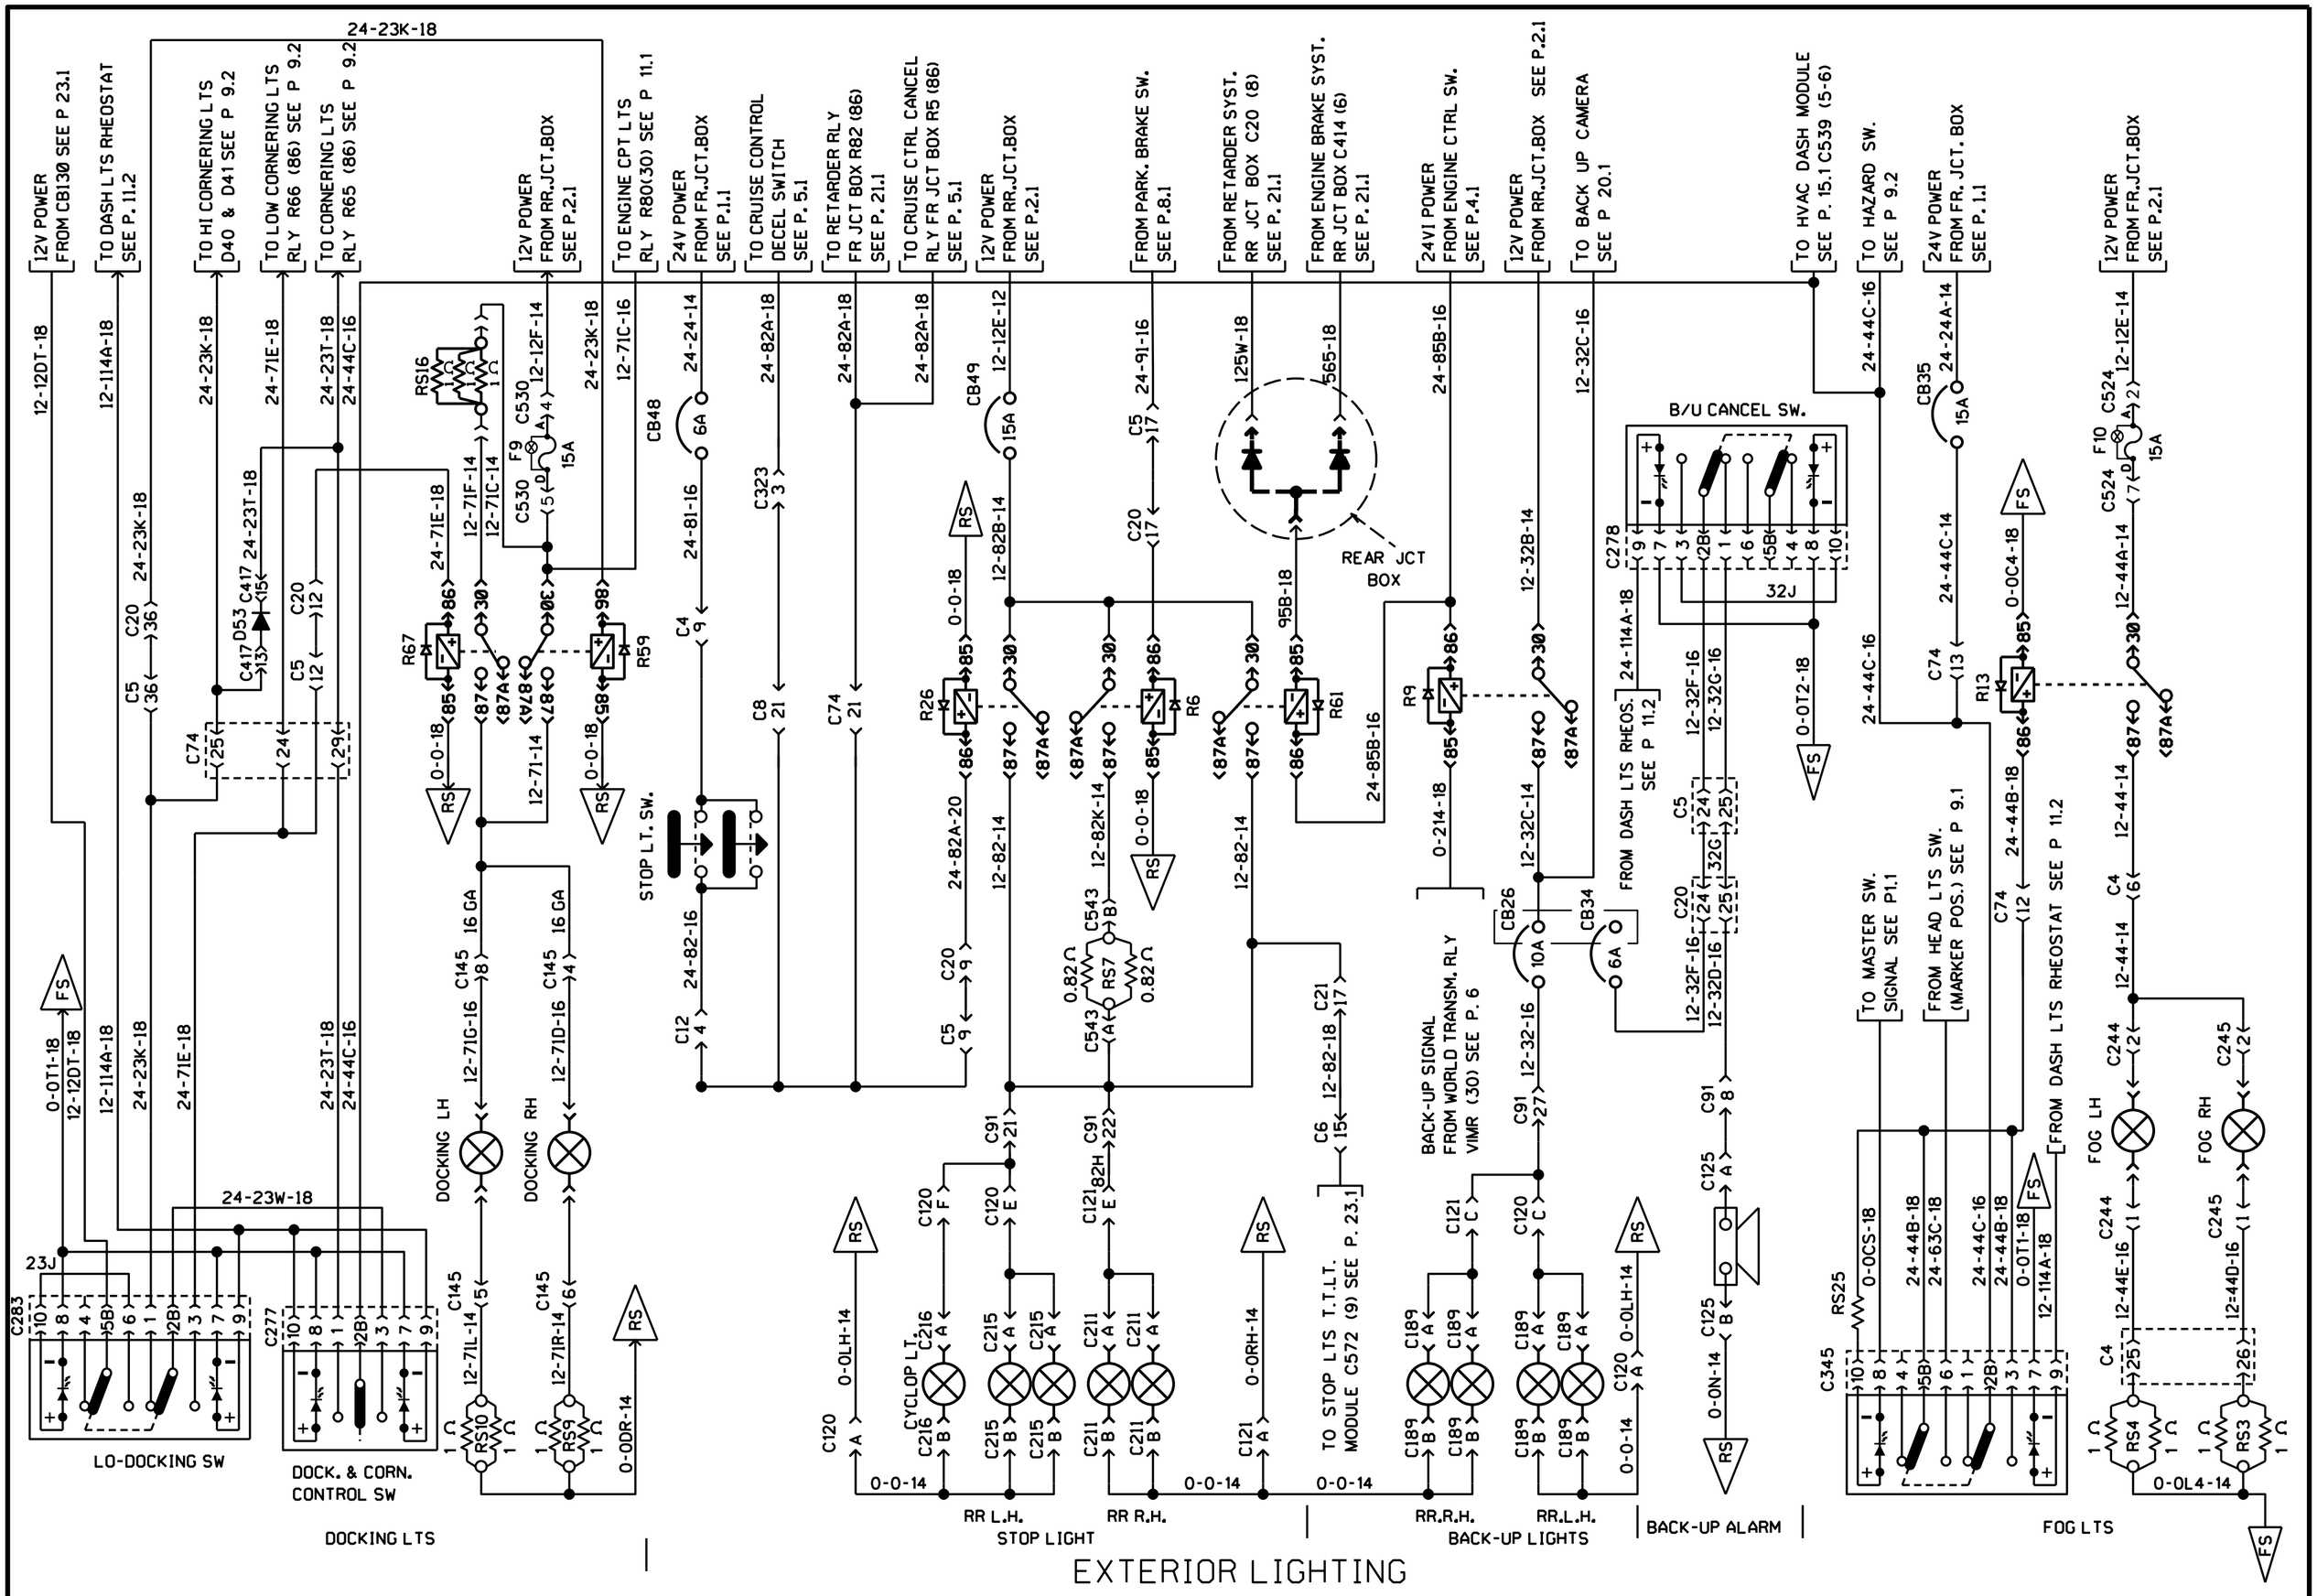

EXTERIOR LIGHTING

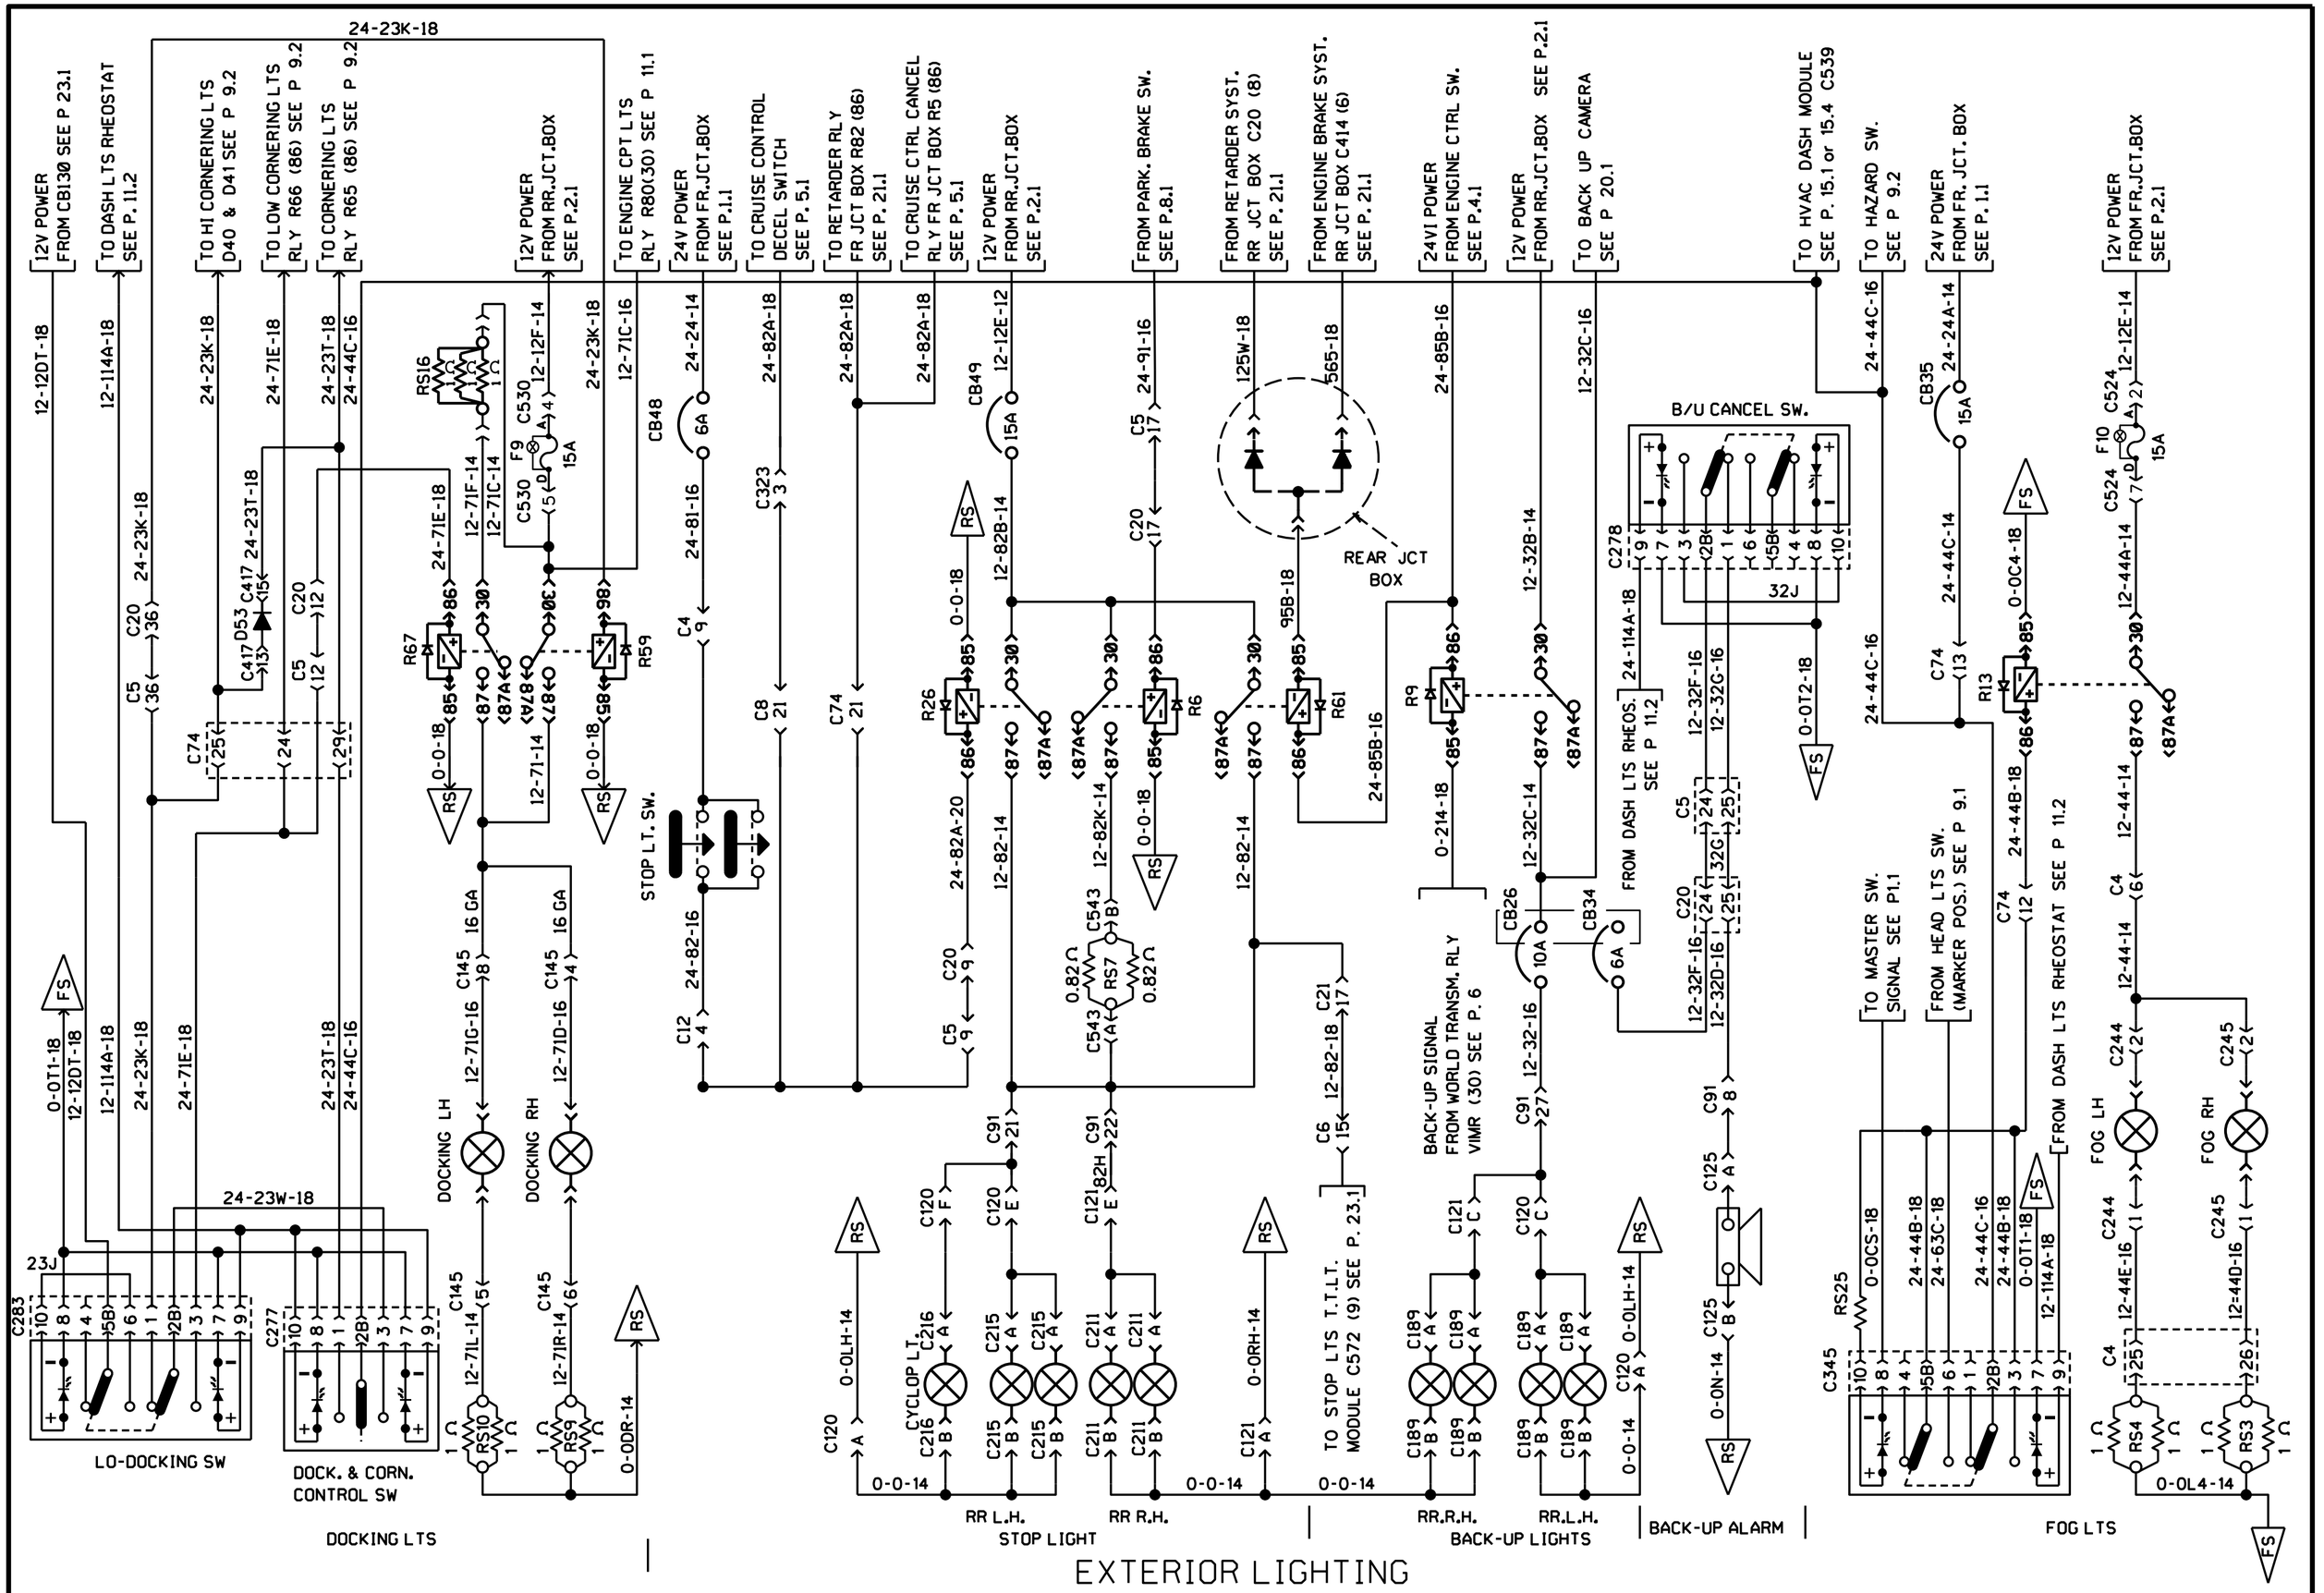

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 9.3 SP1	REVISION 15

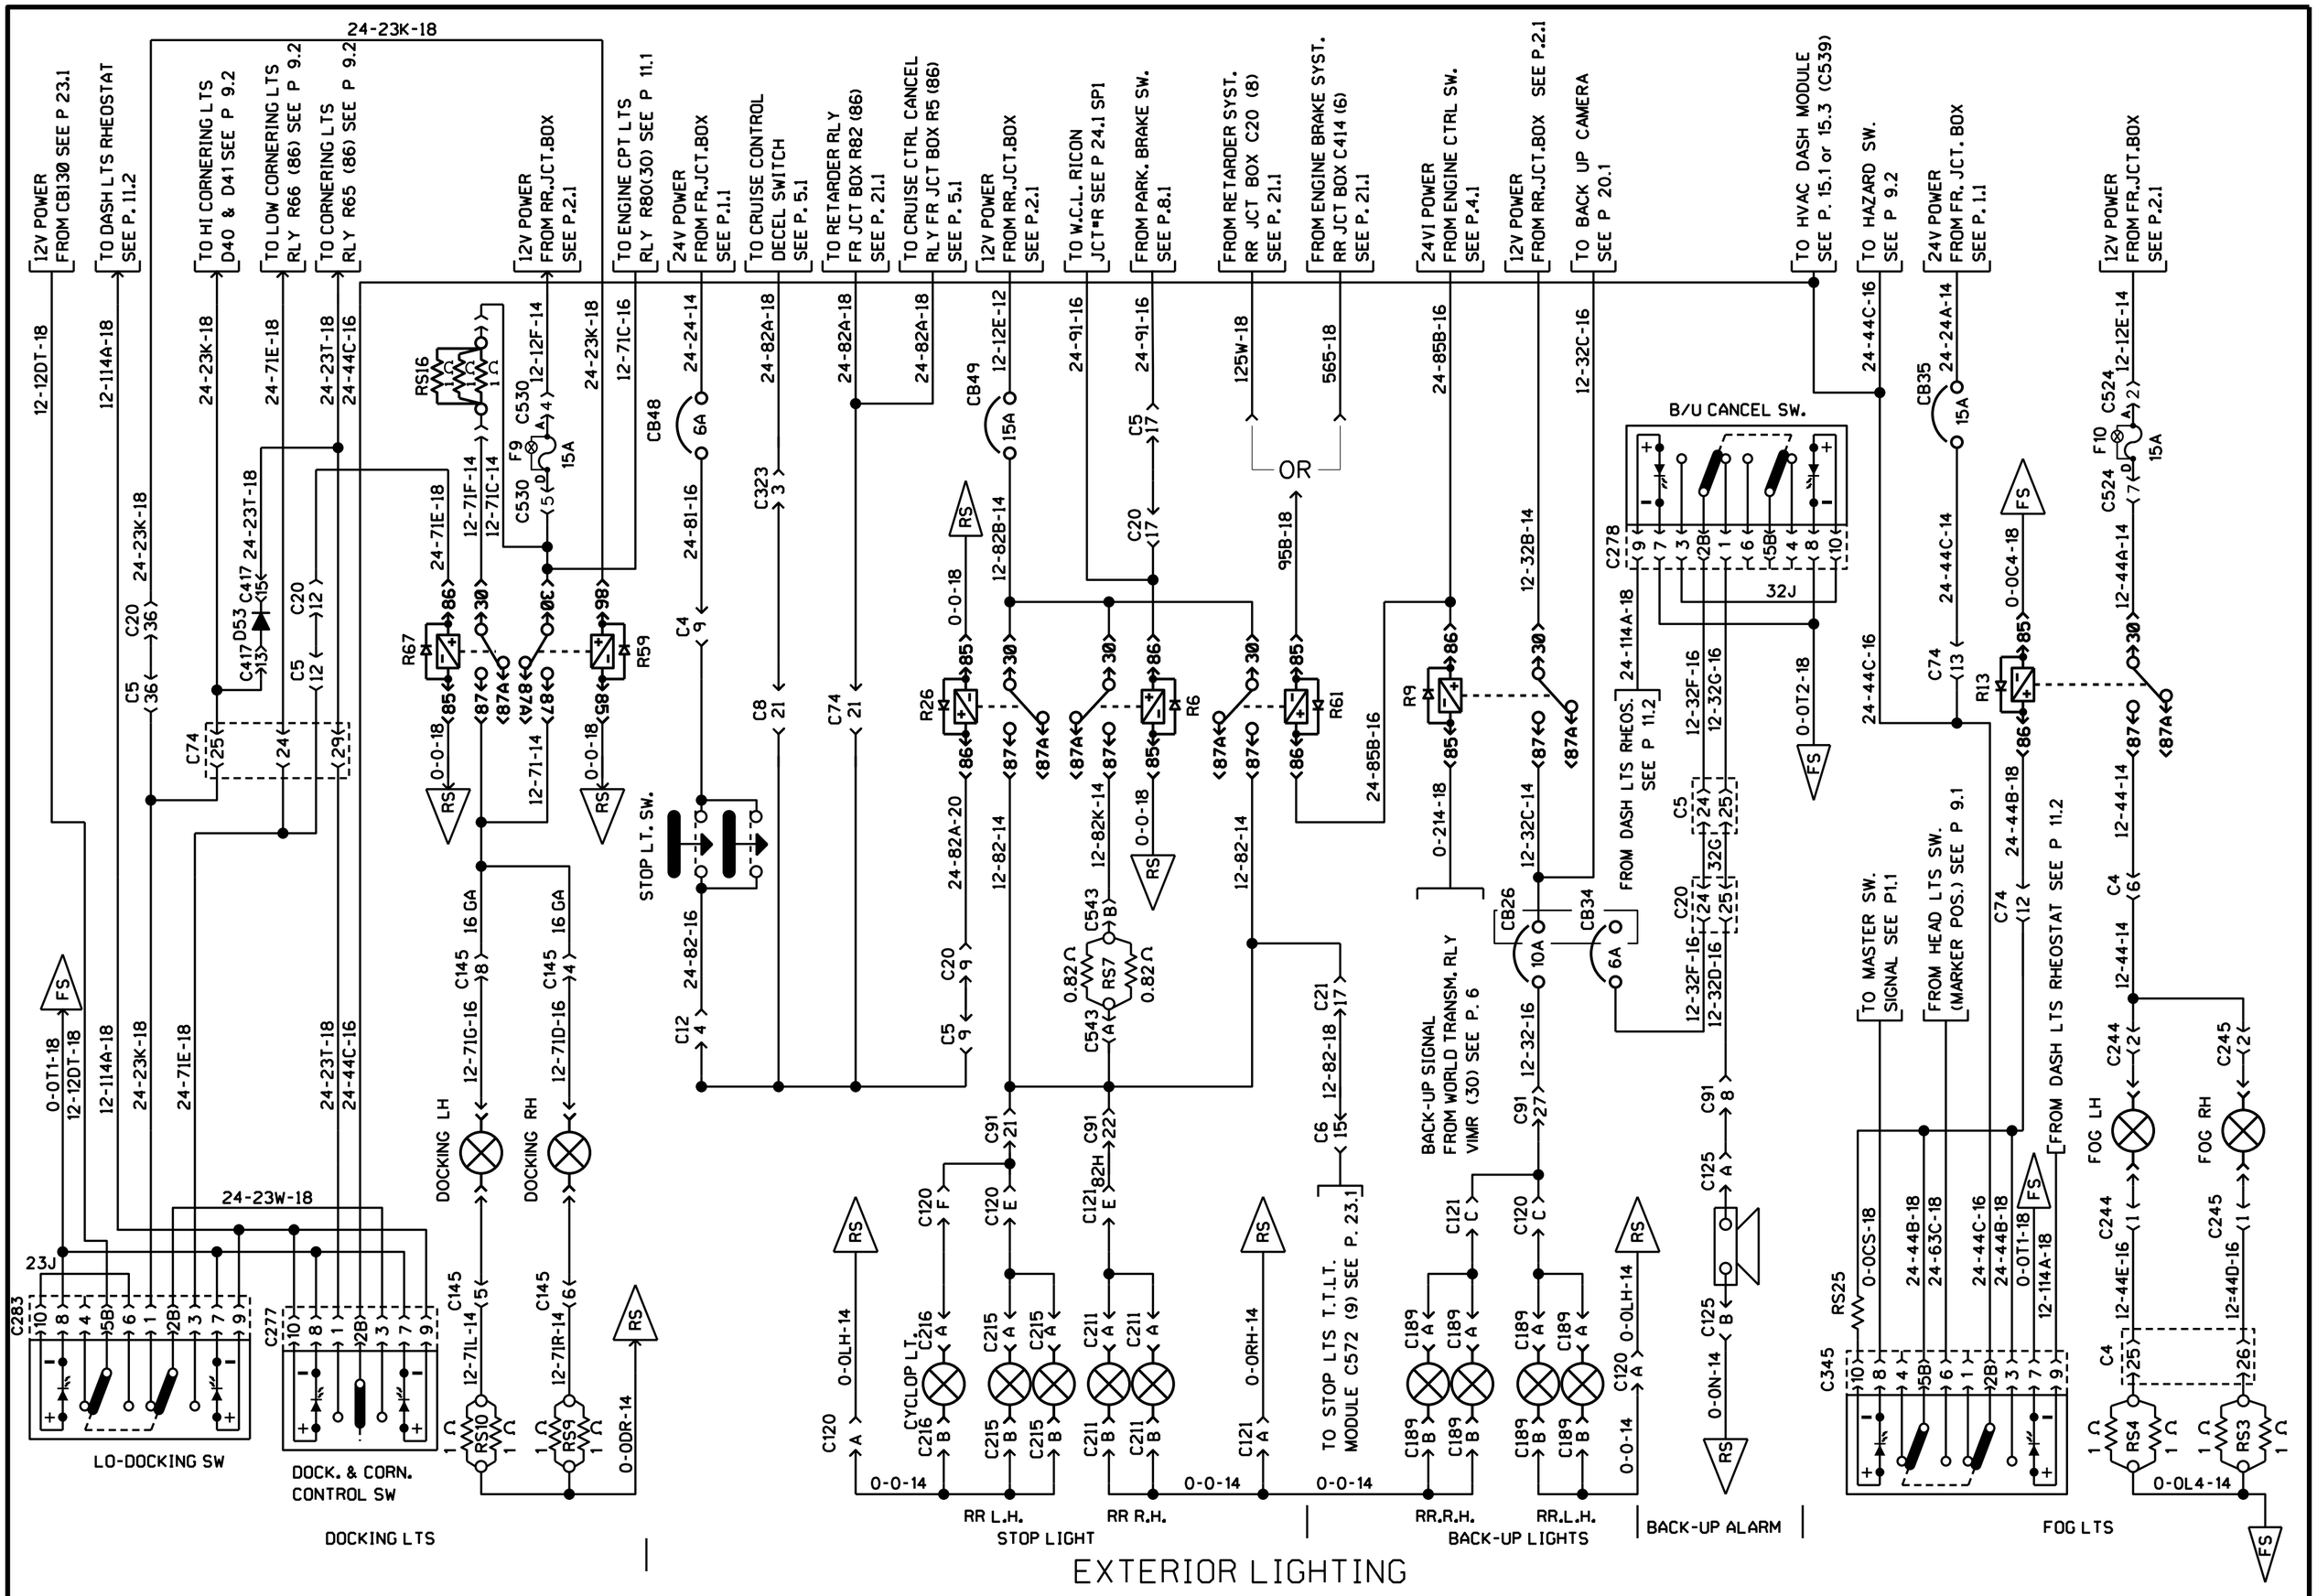

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 9.3 SP2	REVISION 00

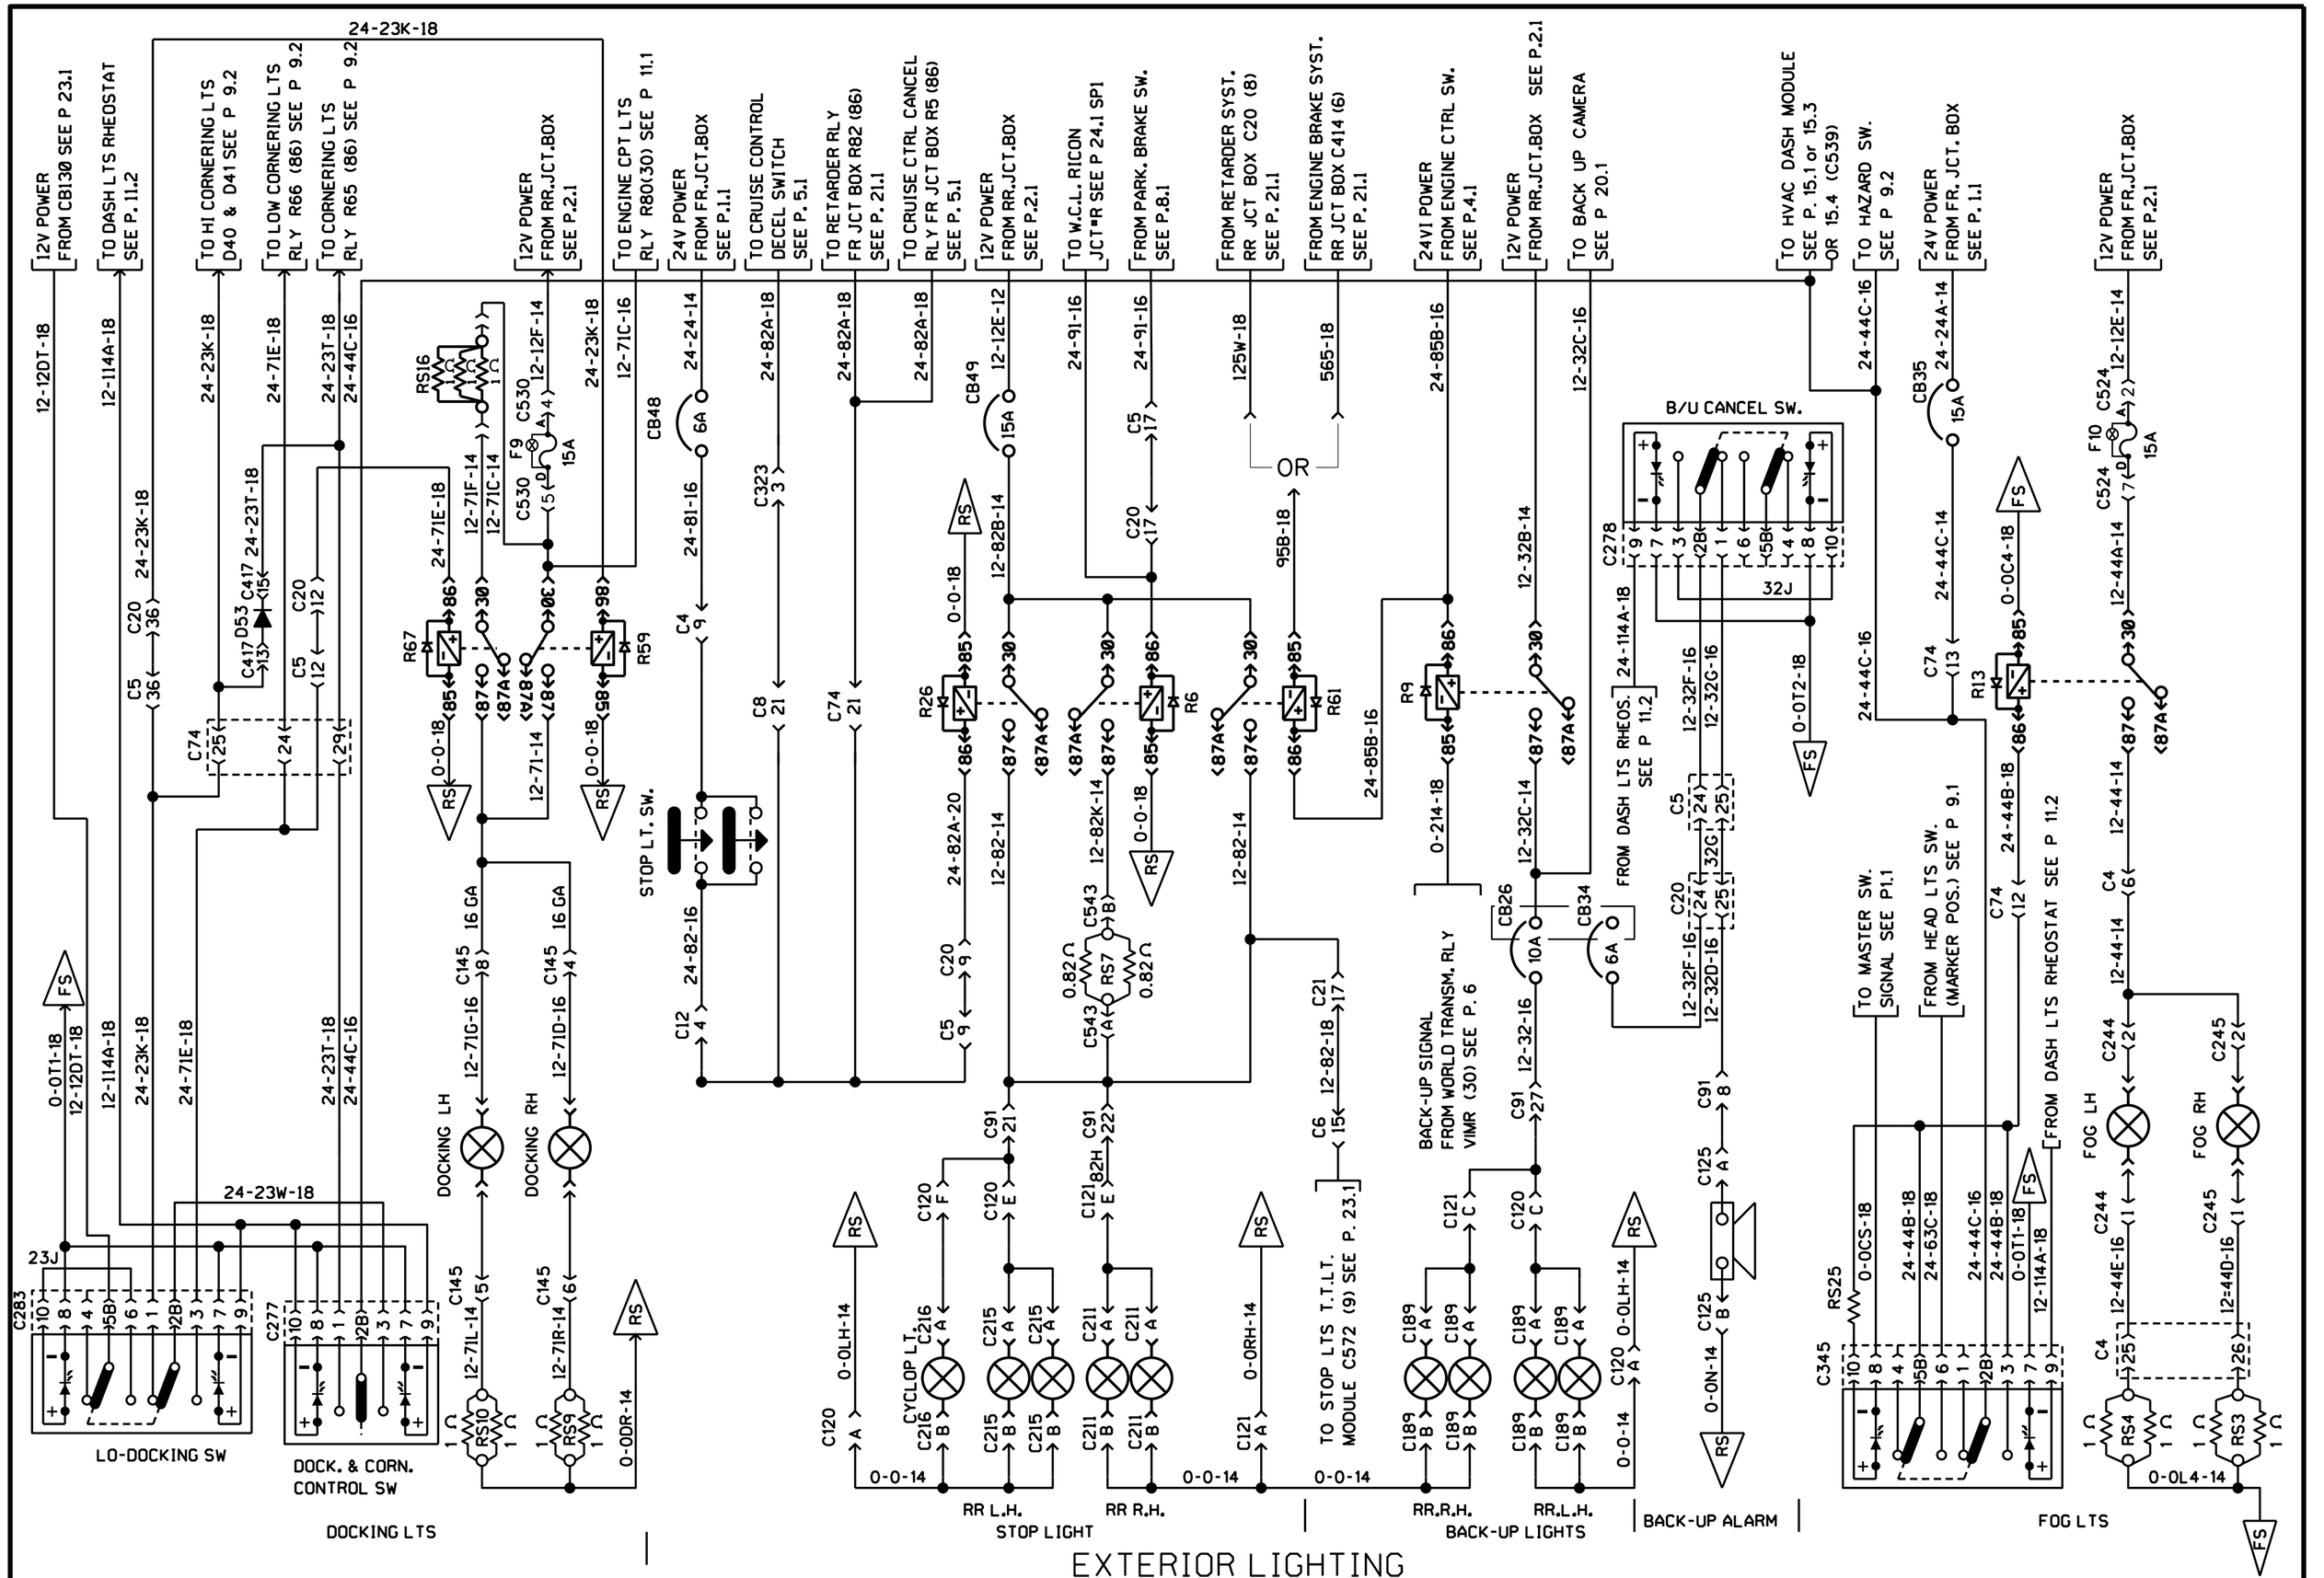
24-23K-18
12V POWER FROM CB130 SEE P 23.1
TO DASH LTS RHEOSTAT SEE P. 11.2
TO HI CORNERING LTS D40 & D41 SEE P 9.2
TO LOW CORNERING LTS RLY R66 (86) SEE P 9.2
TO CORNERING LTS RLY R65 (86) SEE P 9.2
12V POWER FROM RR.JCT.BOX SEE P.2.1
TO ENGINE CPT LTS RLY R80(30) SEE P 11.1
24V POWER FROM FR.JCT.BOX SEE P.1.1
TO CRUISE CONTROL DECEL SWITCH SEE P. 5.1
TO RETARDER RLY FR JCT BOX R82 (86) SEE P. 21.1
TO CRUISE CTRL CANCEL RLY FR JCT BOX R5 (86) SEE P. 5.1
12V POWER FROM RR.JCT.BOX SEE P.2.1
TO W.C.L. RICON JCT"R SEE P 24.1 SP1
FROM PARK. BRAKE SW. SEE P.8.1
FROM RETARDER SYST. RR JCT BOX C20 (8) SEE P. 21.1
FROM ENGINE BRAKE SYST. RR JCT BOX C414 (6) SEE P. 21.1
24VI POWER FROM ENGINE CTRL SW. SEE P.4.1
12V POWER FROM RR.JCT.BOX SEE P.2.1
TO BACK UP CAMERA SEE P 20.1
TO HVAC DASH MODULE SEE P. 15.1 or 15.3 OR 15.4 (C539)
TO HAZARD SW. SEE P 9.2
24V POWER FROM FR. JCT. BOX SEE P. 1.1
12V POWER FROM FR.JCT.BOX SEE P.2.1
B/U CANCEL SW.
STOP LT. SW.
OR
DOCKING LH
DOCKING RH
LO-DOCKING SW
DOCK. & CORN. CONTROL SW
DOCKING LTS
RR L.H. STOP LIGHT
RR R.H.
TO STOP LTS T.T.L.T. MODULE C572 (9) SEE P. 23.1
RR.R.H.
RR.L.H.
BACK-UP LIGHTS
BACK-UP SIGNAL FROM WORLD TRANSM. RLY VIMR (30) SEE P. 6
BACK-UP ALARM
TO MASTER SW. SIGNAL SEE P1.1
FROM HEAD LTS SW. (MARKER POS.) SEE P 9.1
FROM DASH LTS RHEOSTAT SEE P 11.2
FOG LTS
EXTERIOR LIGHTING

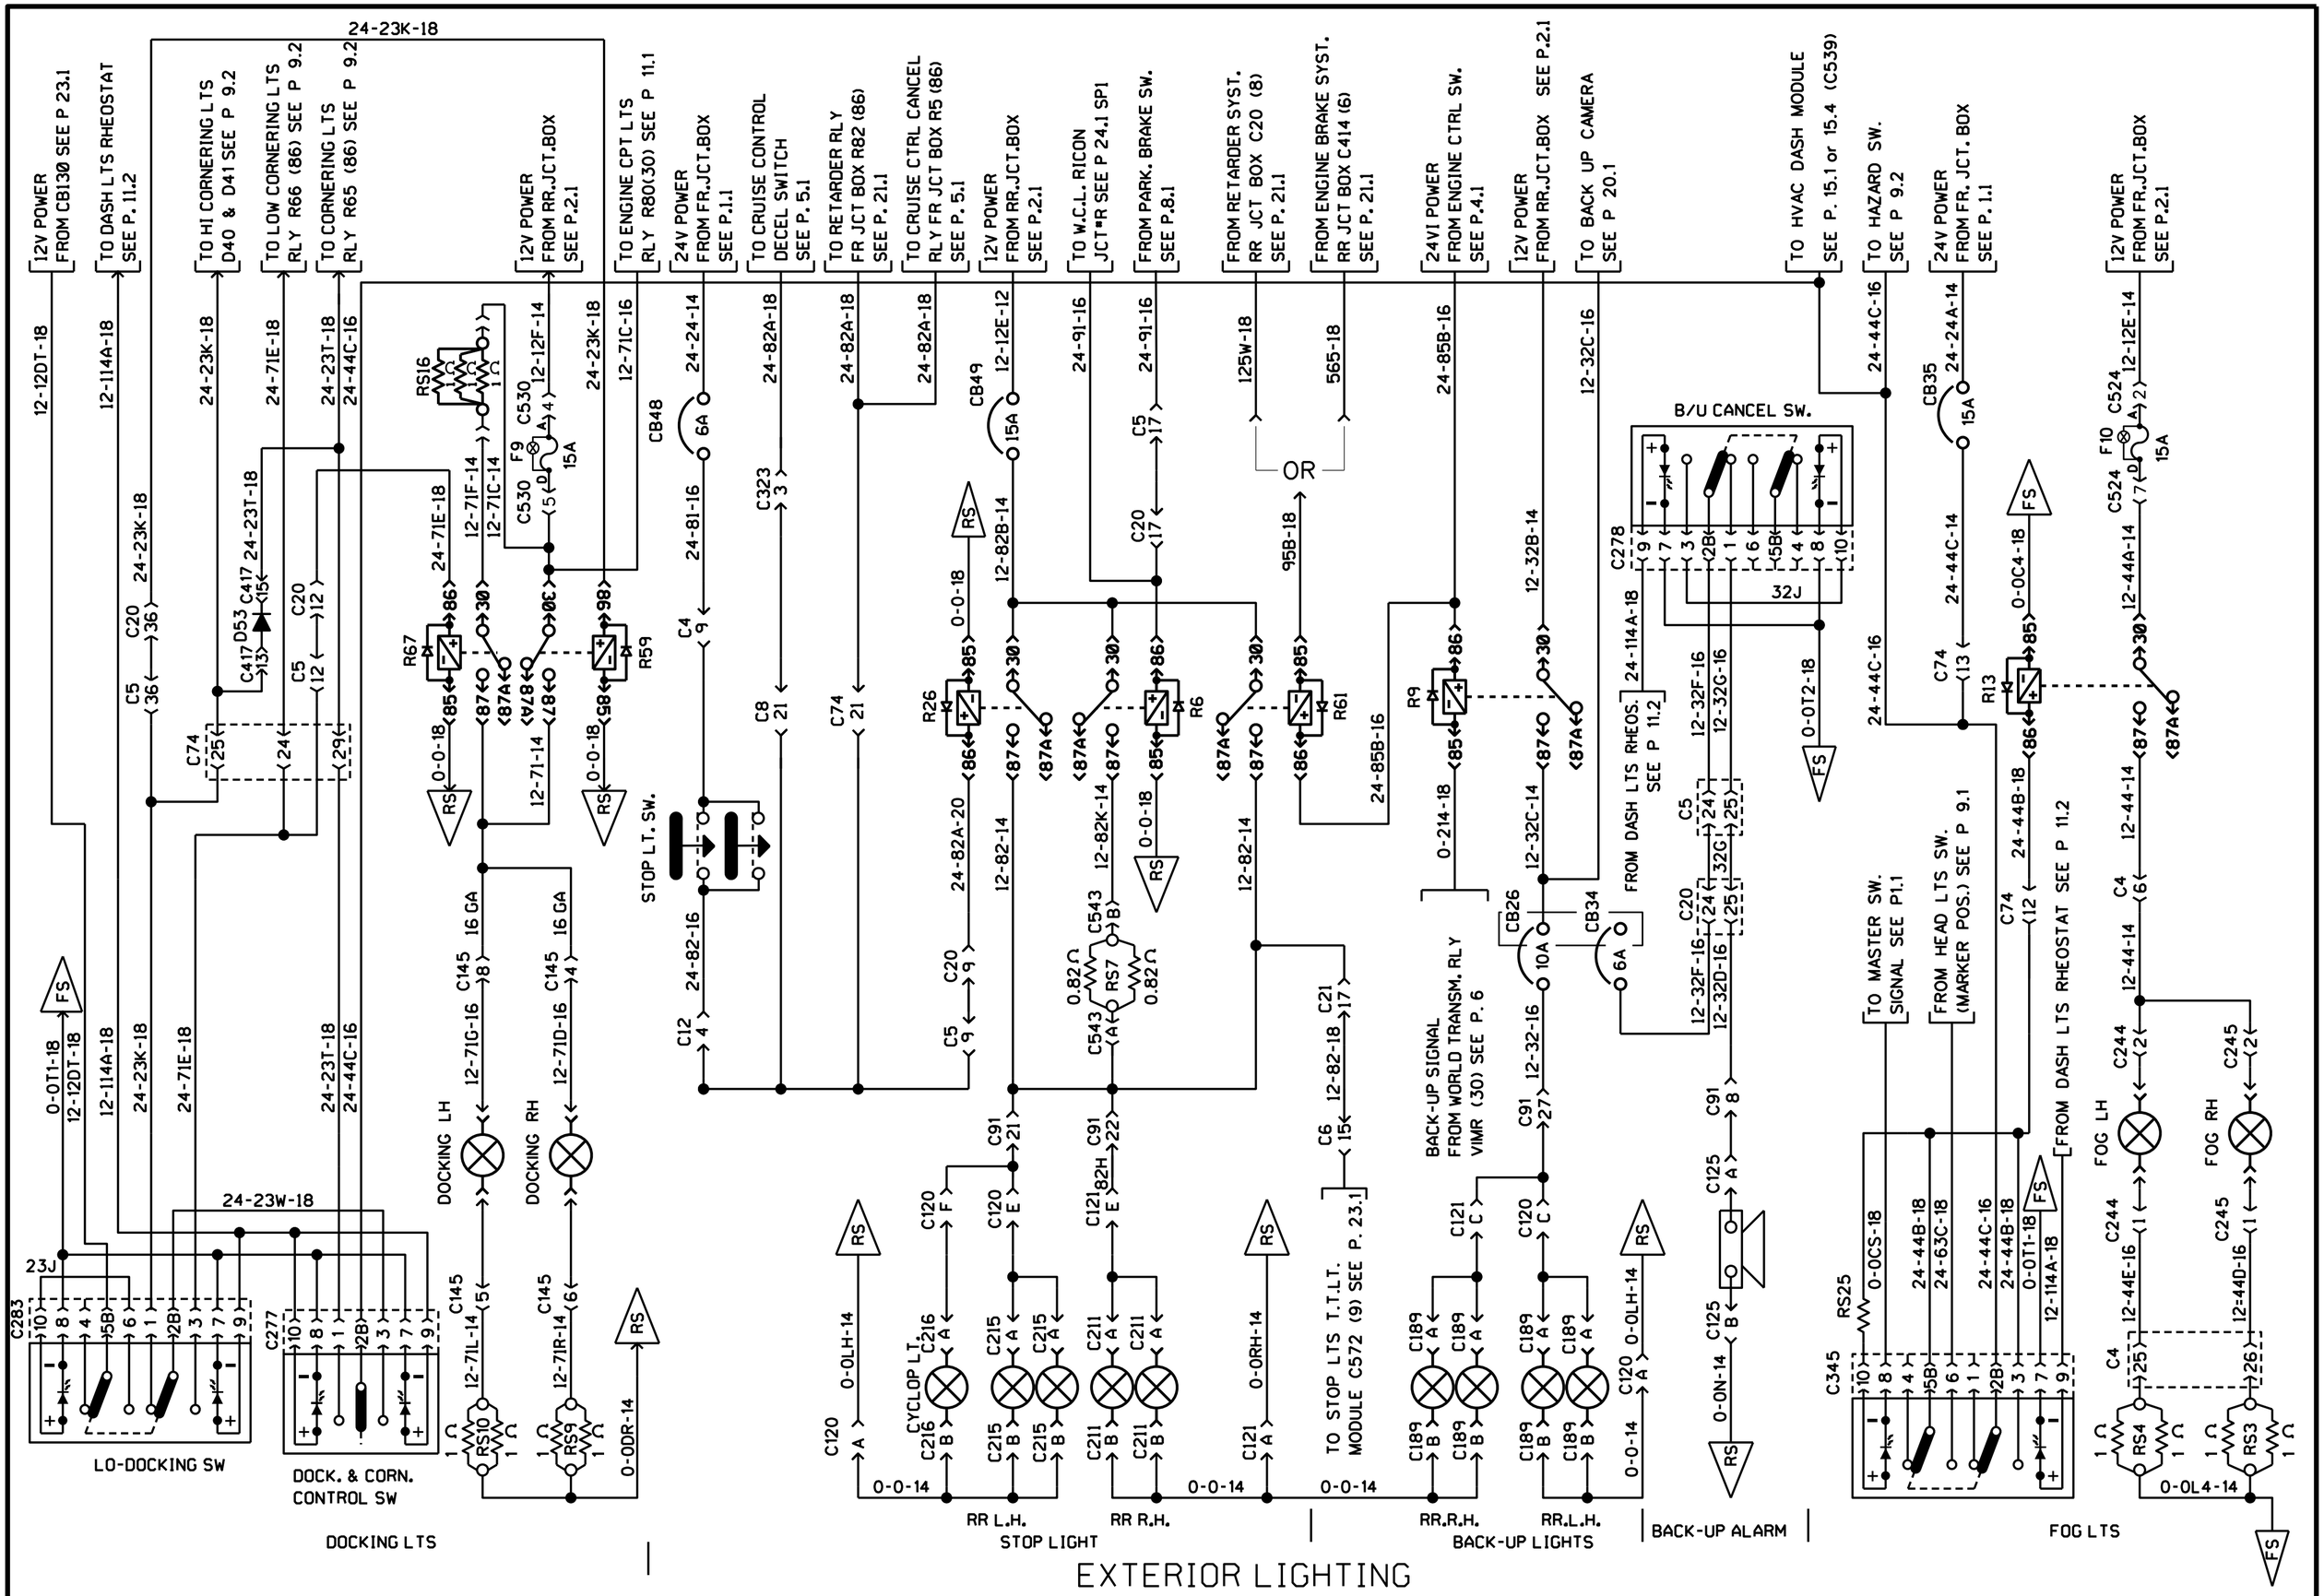
24-23K-18
12V POWER FROM CB130 SEE P 23.1
TO DASH LTS RHEOSTAT SEE P. 11.2
TO HI CORNERING LTS D40 & D41 SEE P 9.2
TO LOW CORNERING LTS RLY R66 (86) SEE P 9.2
TO CORNERING LTS RLY R65 (86) SEE P 9.2
12V POWER FROM RR.JCT.BOX SEE P.2.1
TO ENGINE CPT LTS RLY R80(30) SEE P 11.1
24V POWER FROM FR.JCT.BOX SEE P.1.1
TO CRUISE CONTROL DECEL SWITCH SEE P. 5.1
TO RETARDER RLY FR JCT BOX R82 (86) SEE P. 21.1
TO CRUISE CTRL CANCEL RLY FR JCT BOX R5 (86) SEE P. 5.1
12V POWER FROM RR.JCT.BOX SEE P.2.1
TO W.C.L. RICON JCT*R SEE P 24.1 SP1
FROM PARK. BRAKE SW. SEE P.8.1
FROM RETARDER SYST. RR JCT BOX C20 (8) SEE P. 21.1
FROM ENGINE BRAKE SYST. RR JCT BOX C414 (6) SEE P. 21.1
24VI POWER FROM ENGINE CTRL SW. SEE P.4.1
12V POWER FROM RR.JCT.BOX SEE P.2.1
TO BACK UP CAMERA SEE P 20.1
TO HVAC DASH MODULE SEE P. 15.1 or 15.4 (C539)
TO HAZARD SW. SEE P 9.2
24V POWER FROM FR. JCT. BOX SEE P. 1.1
12V POWER FROM FR.JCT.BOX SEE P.2.1
B/U CANCEL SW.
OR
STOP LT. SW.
DOCKING LH
DOCKING RH
LO-DOCKING SW
DOCK. & CORN. CONTROL SW
DOCKING LTS
BACK-UP SIGNAL FROM WORLD TRANSM. RLY VIMR (30) SEE P. 6
TO STOP LTS T.T.LT. MODULE C572 (9) SEE P. 23.1
RR L.H. STOP LIGHT
RR R.H.
RR.R.H.
RR.L.H.
BACK-UP LIGHTS
BACK-UP ALARM
TO MASTER SW. SIGNAL SEE P1.1
FROM HEAD LTS SW. (MARKER POS.) SEE P 9.1
FROM DASH LTS RHEOSTAT SEE P 11.2
FOG LH
FOG RH
FOG LTS
EXTERIOR LIGHTING

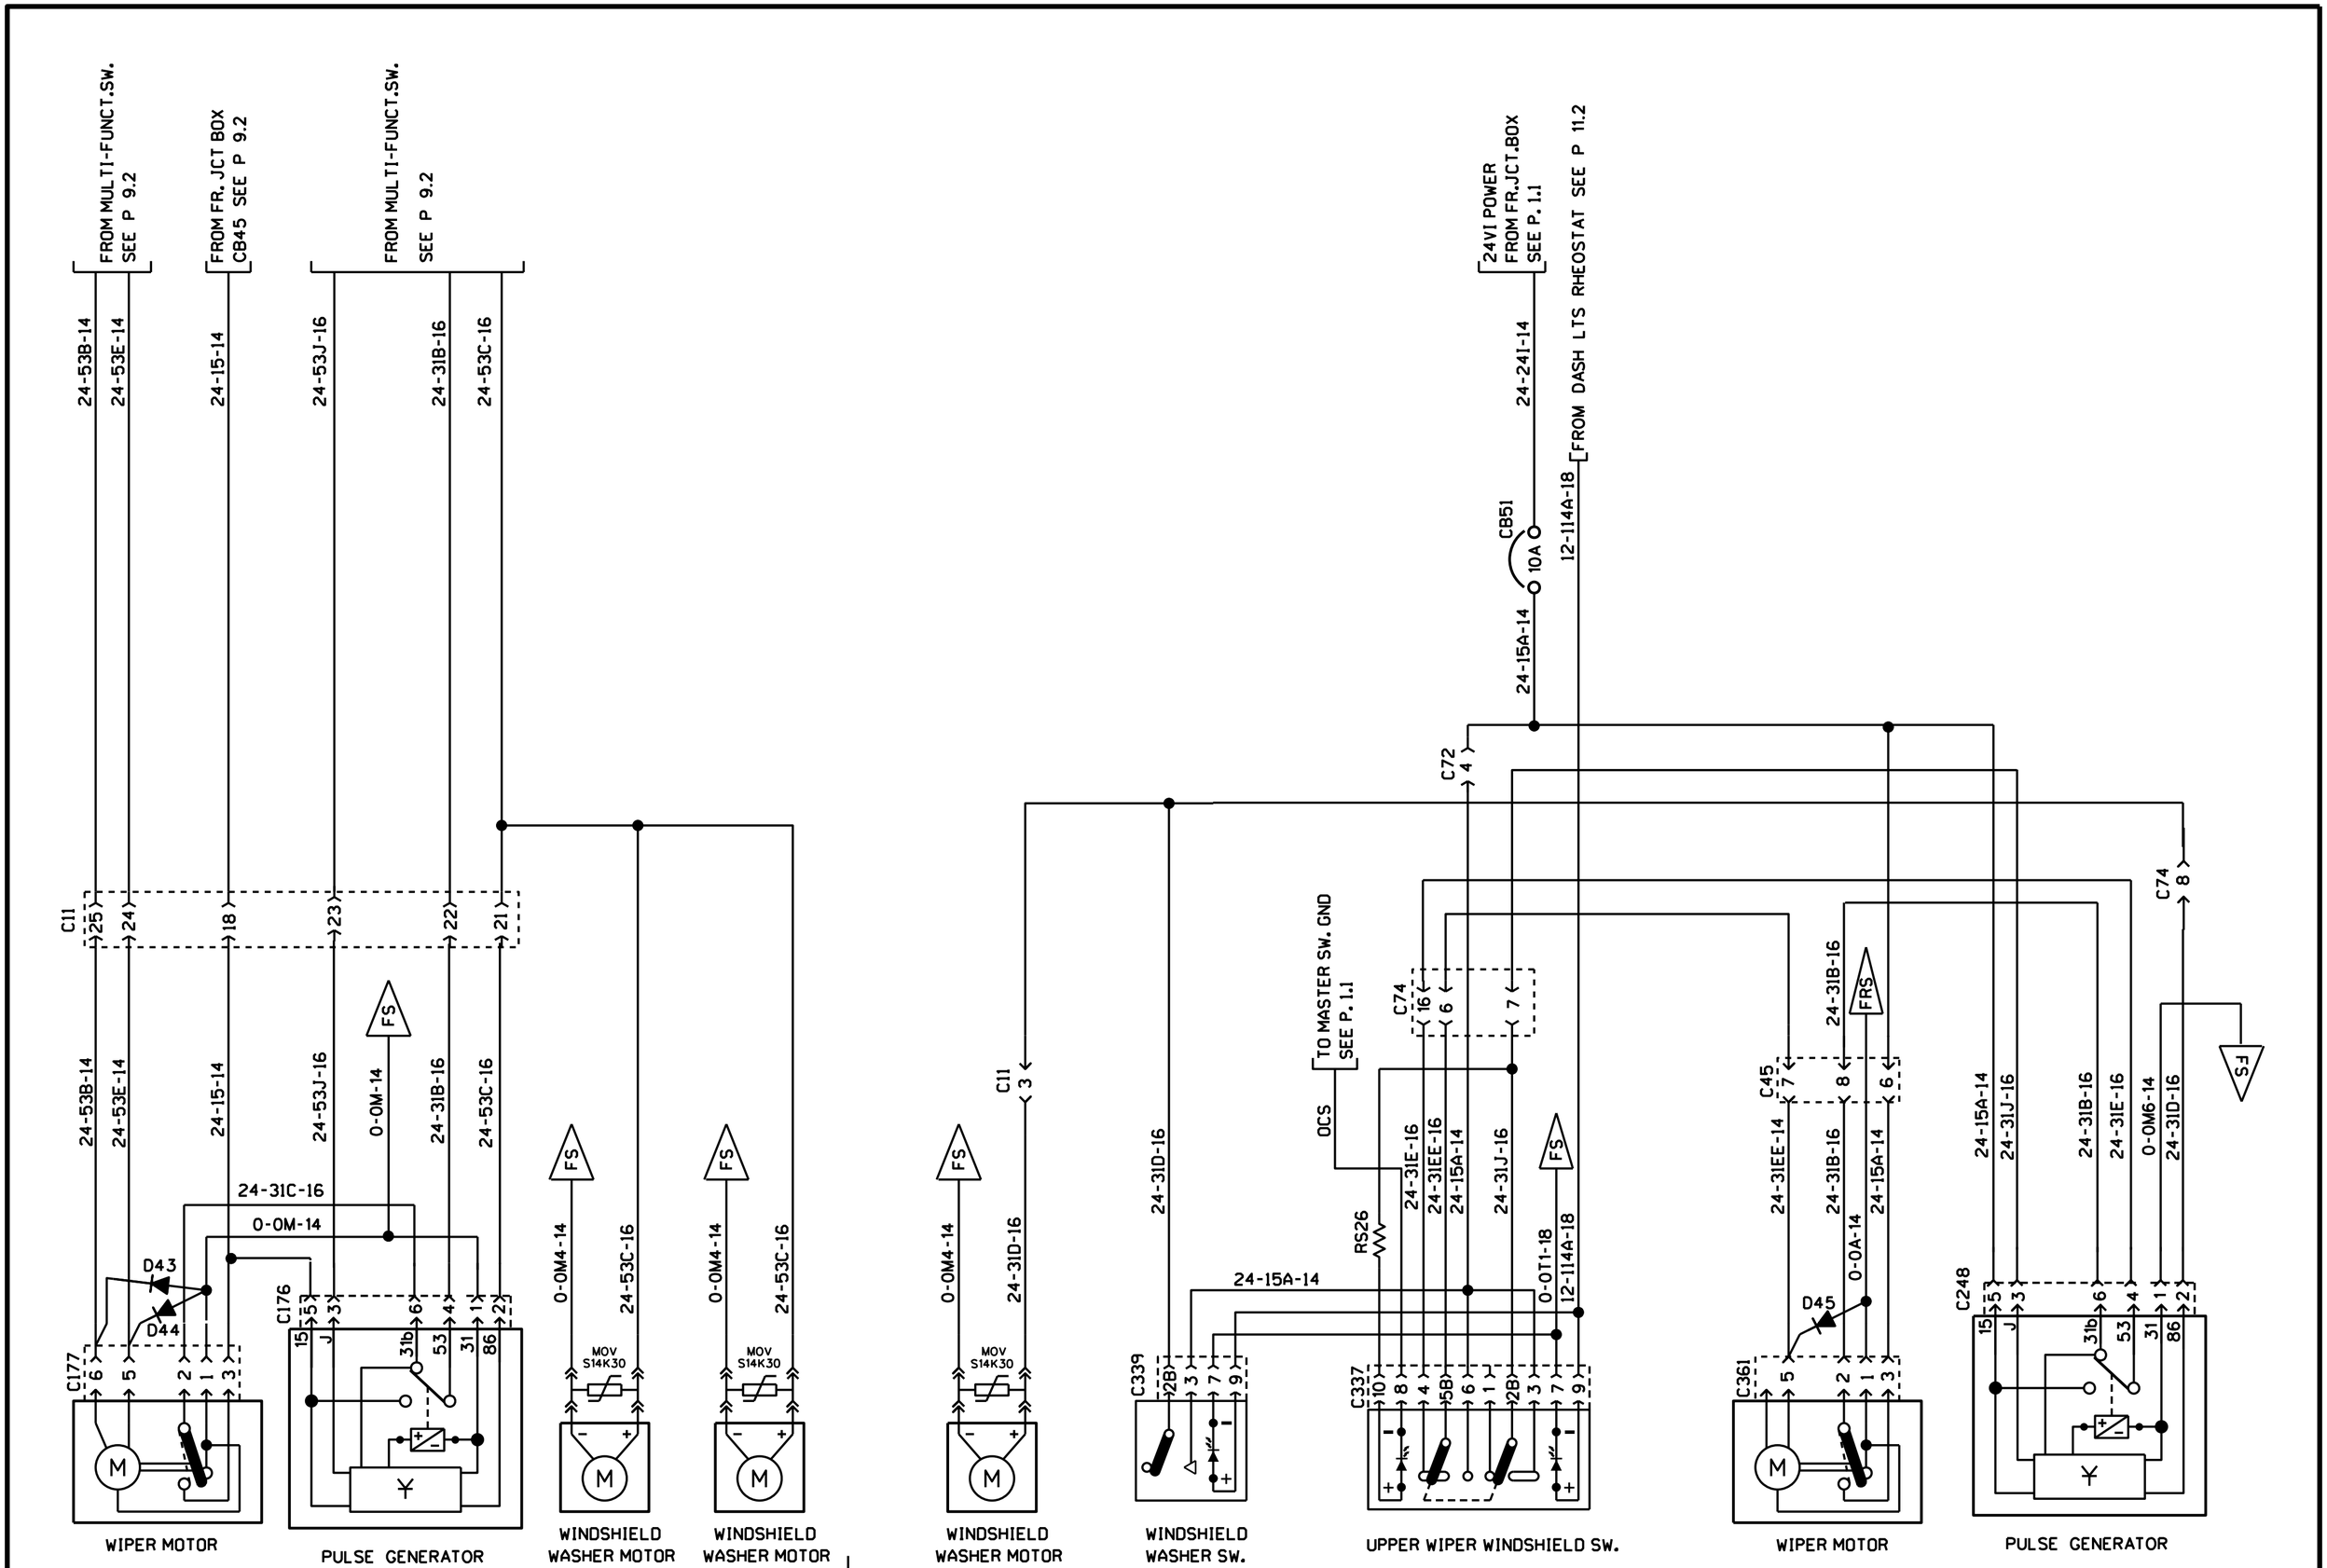

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 10.1	REVISION 00

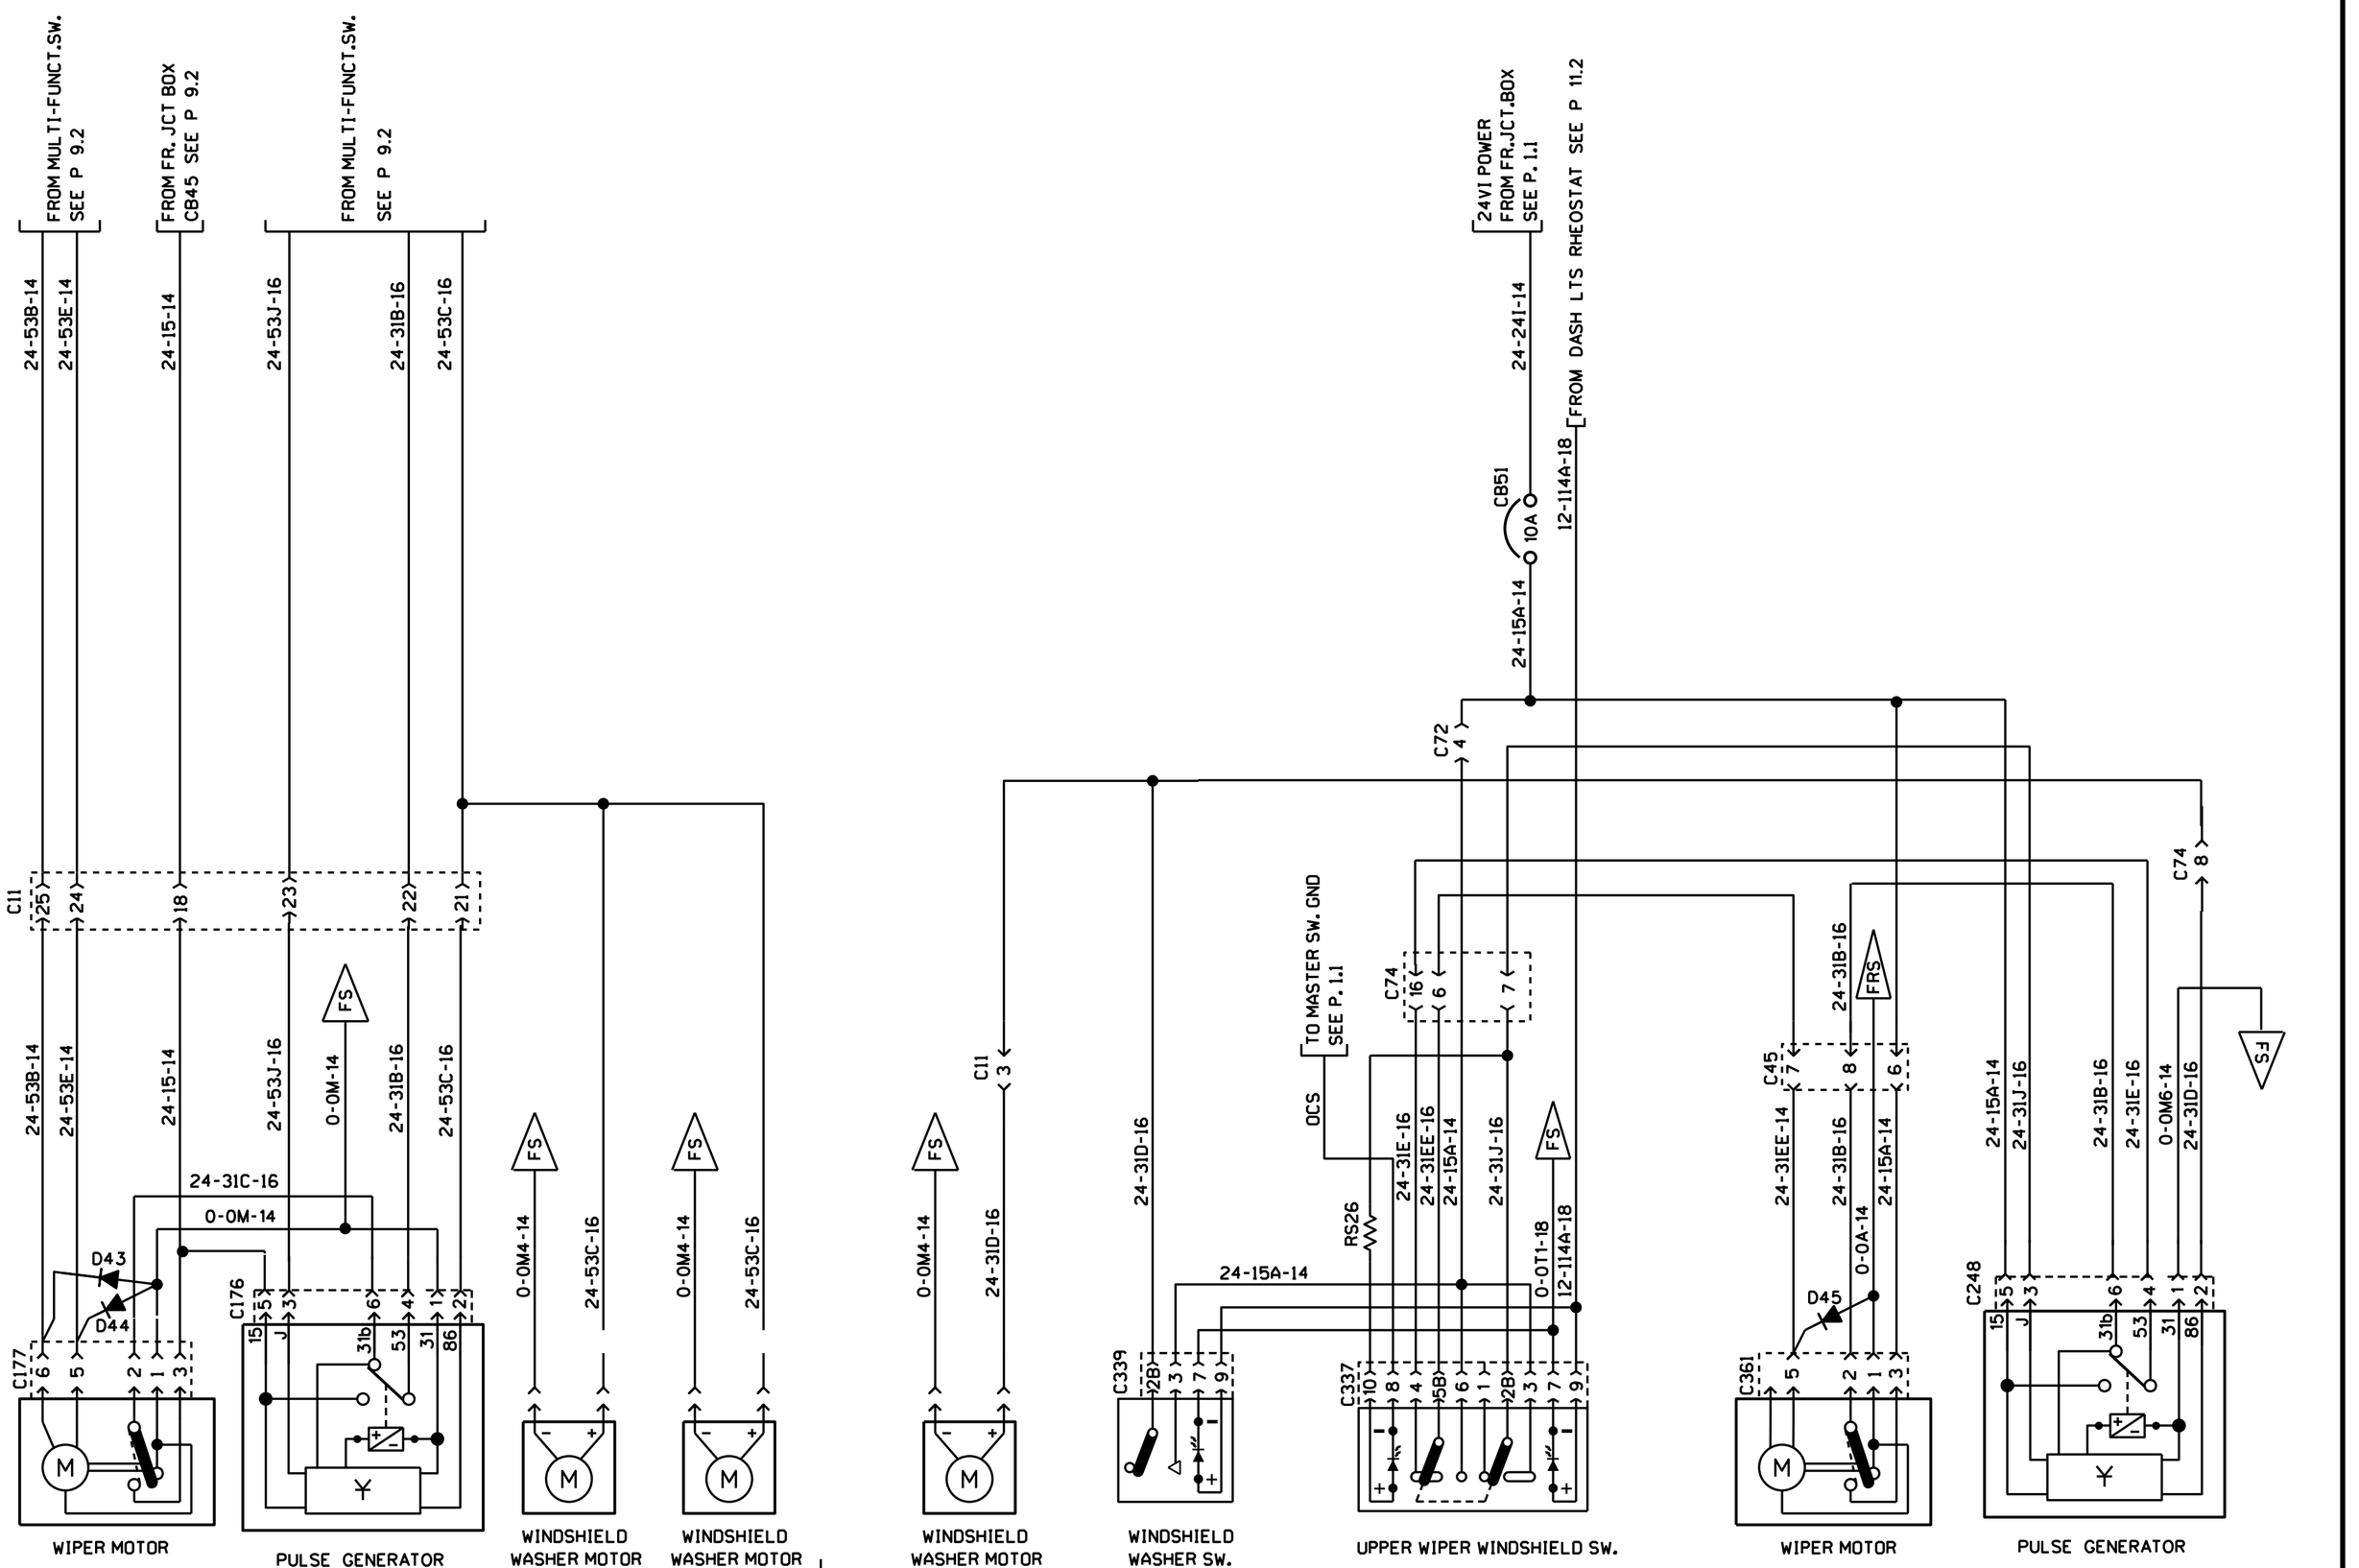

LOWER WINDSHIELD WIPER AND WASHER

UPPER WINDSHIELD WIPER AND WASHER

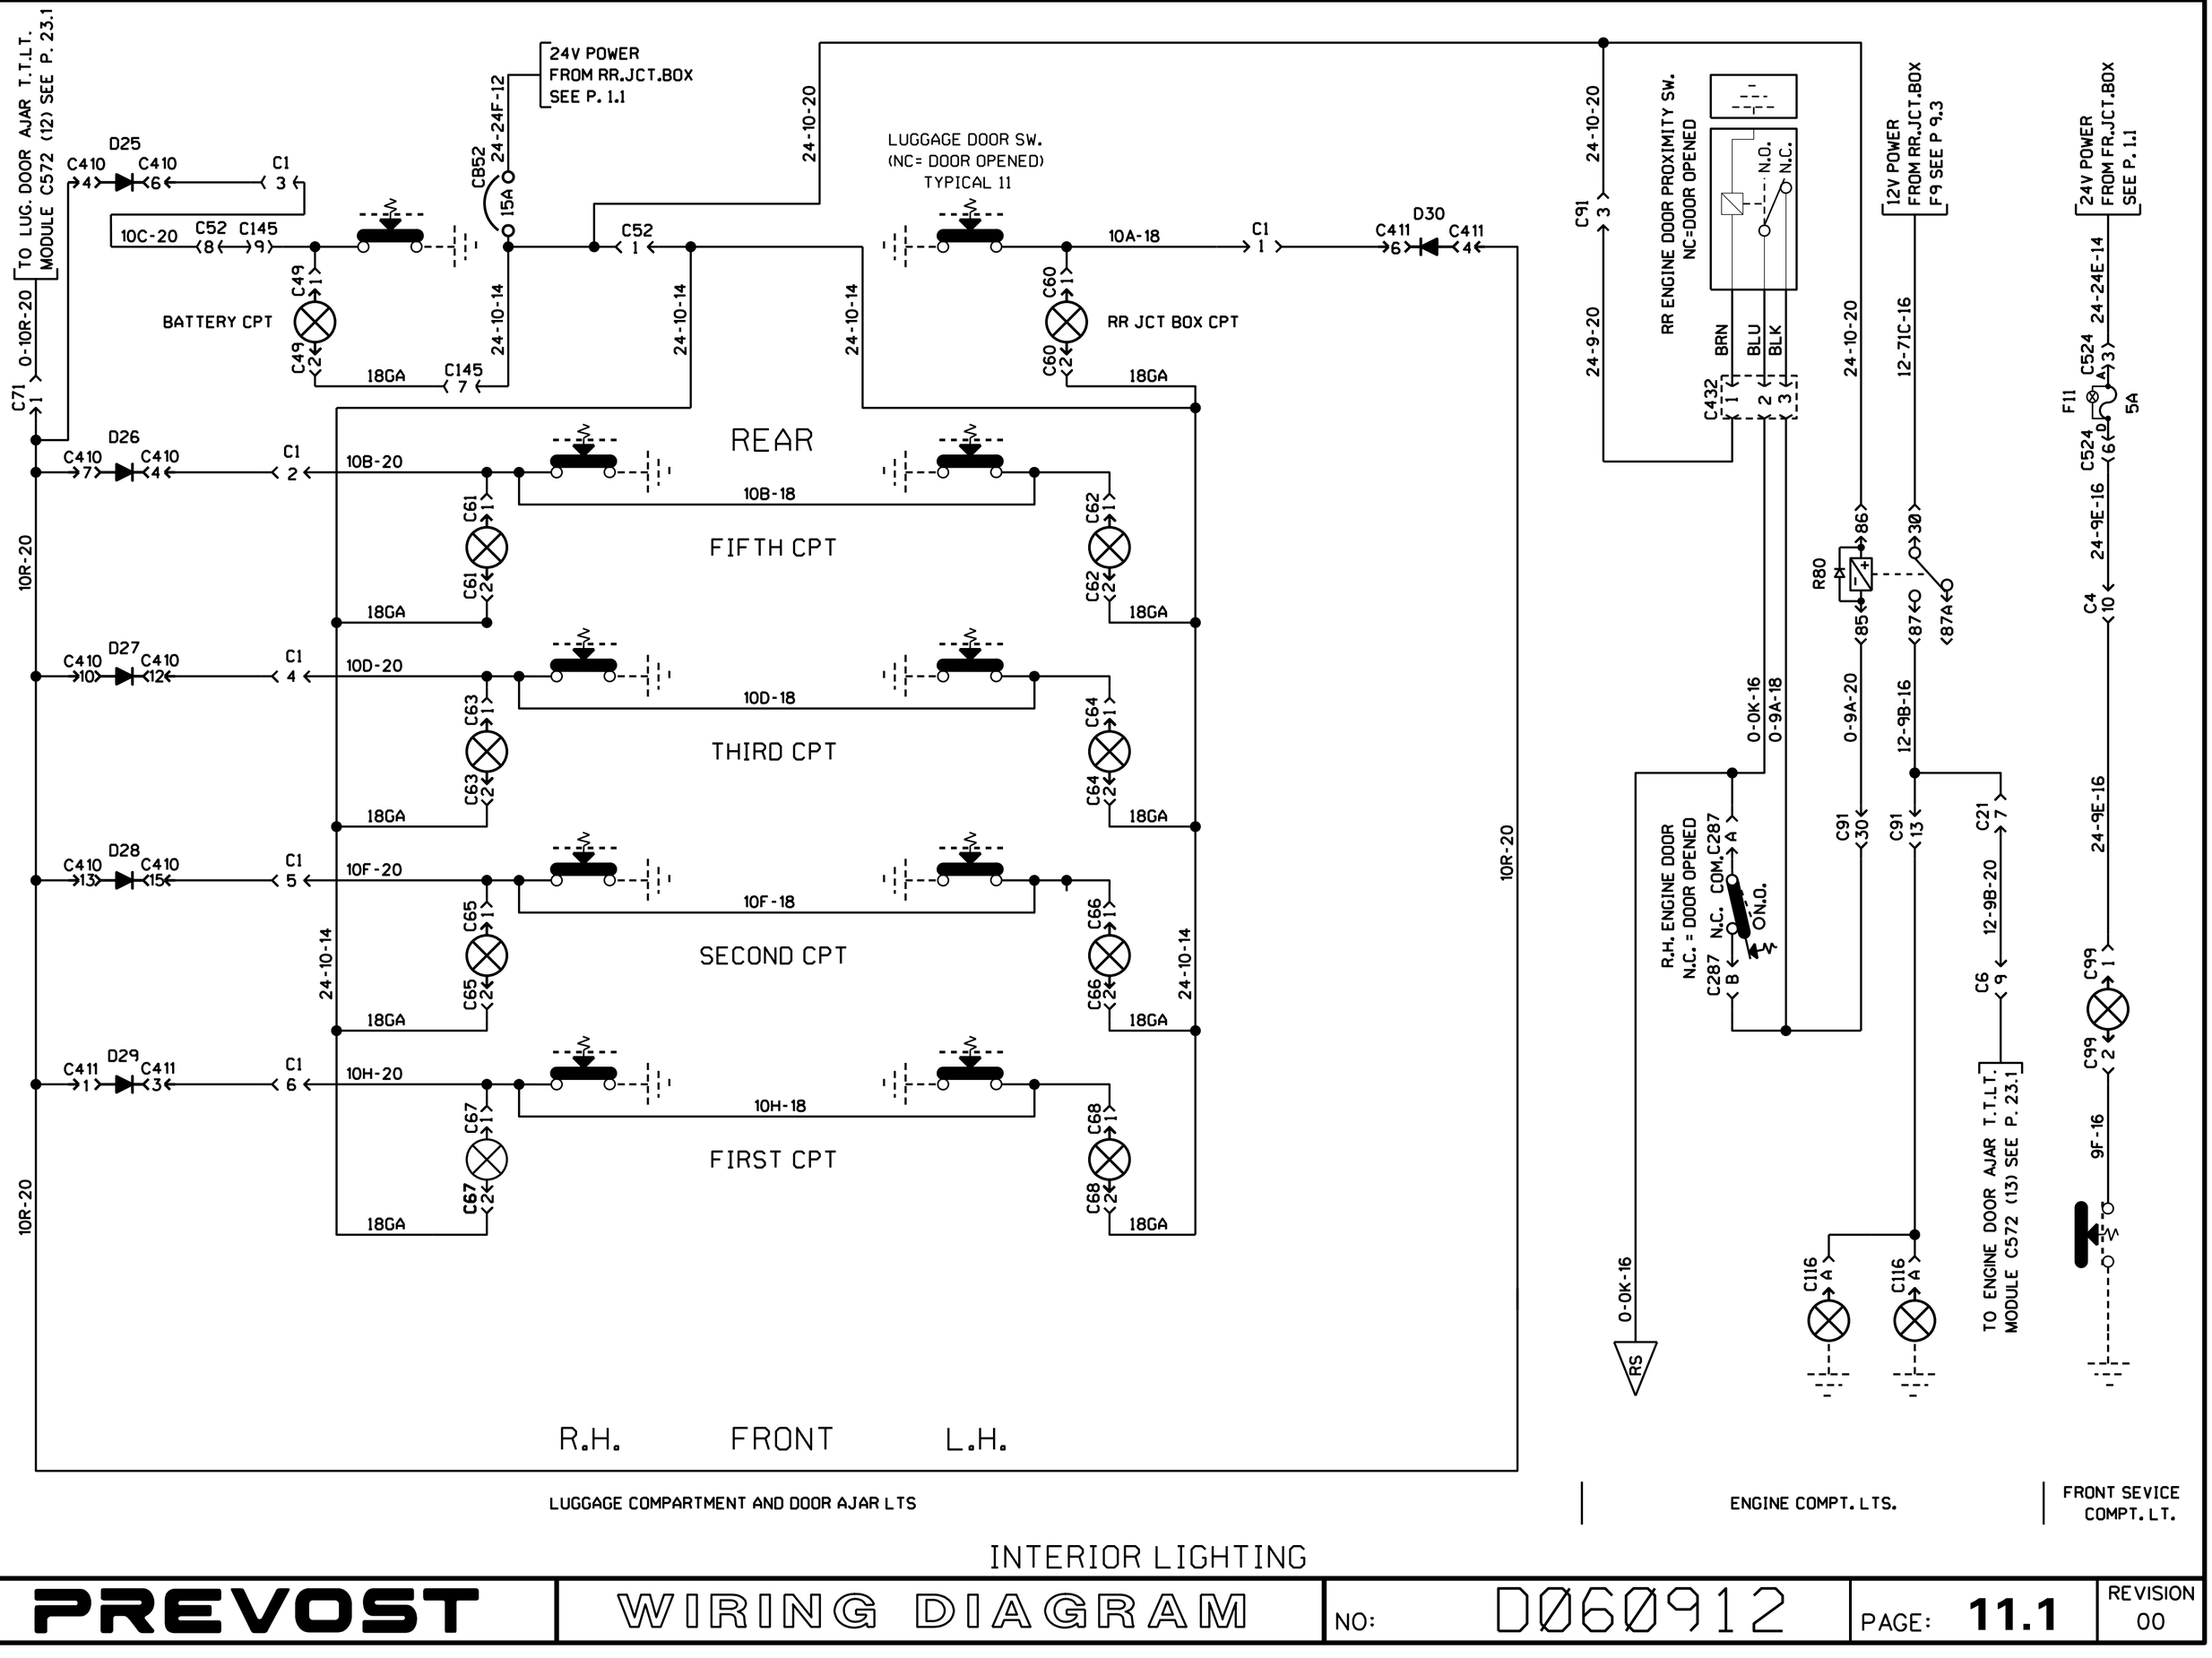

INTERIOR LIGHTING

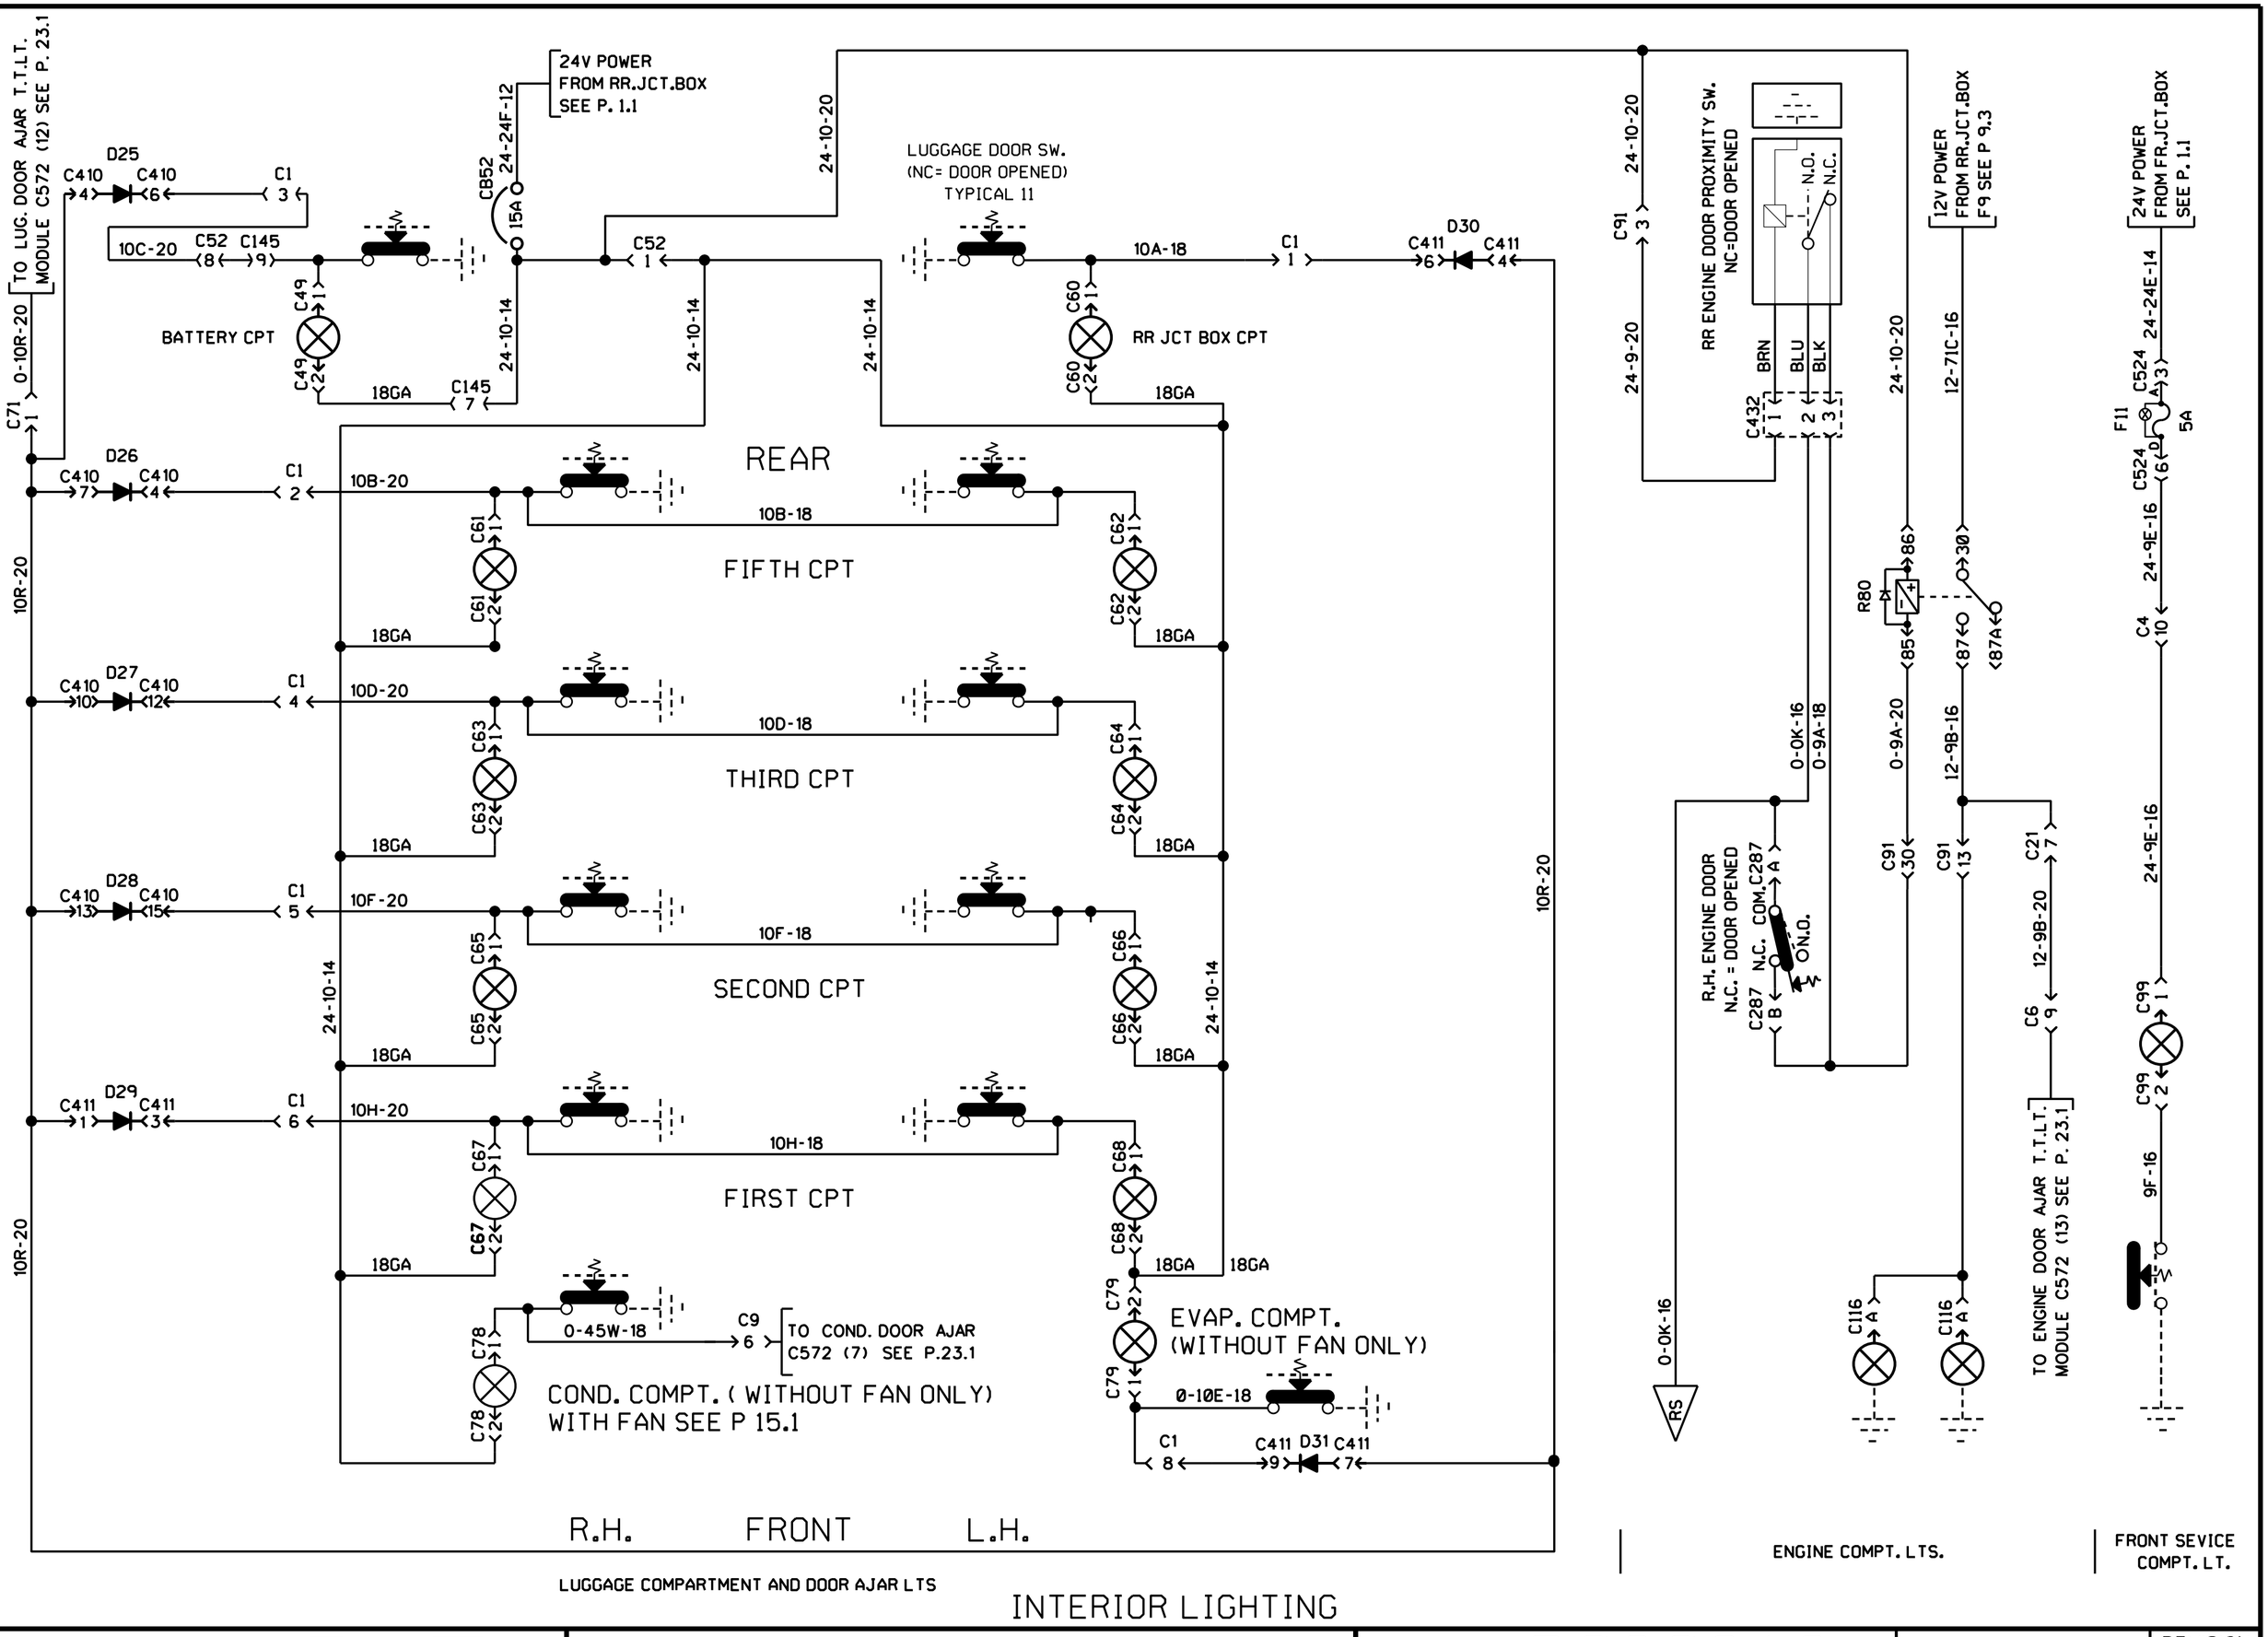

INTERIOR LIGHTING

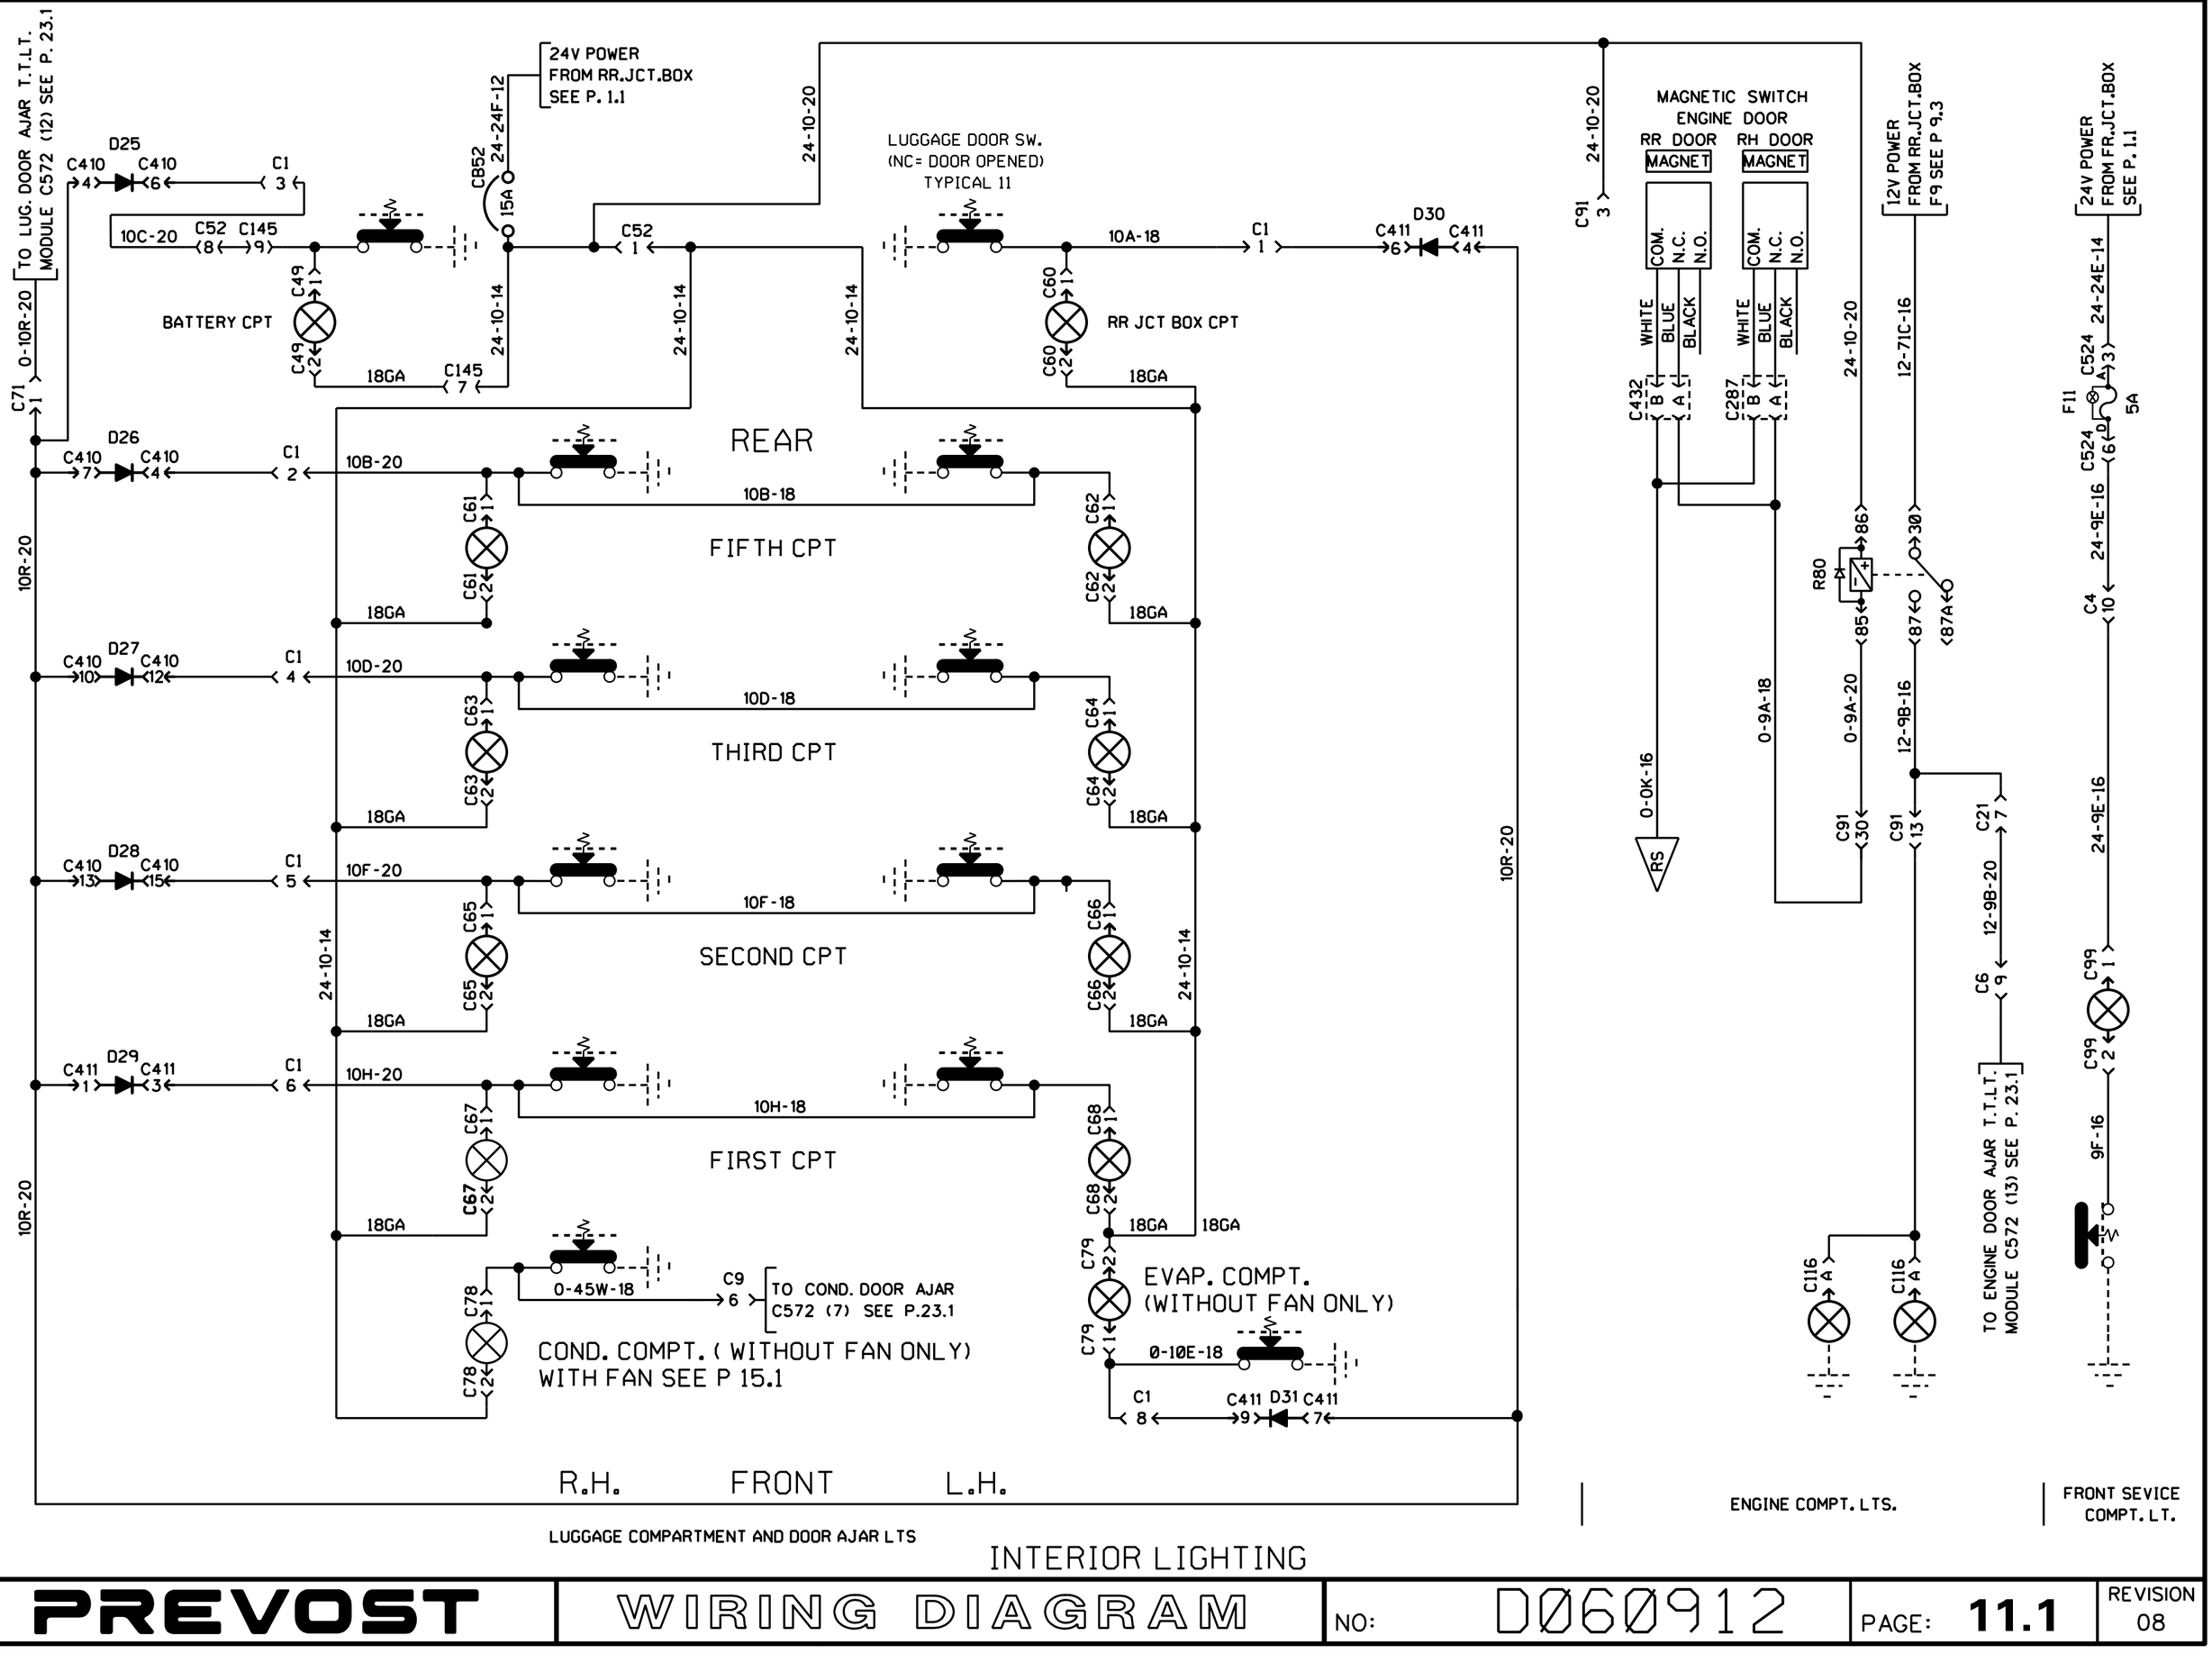

INTERIOR LIGHTING

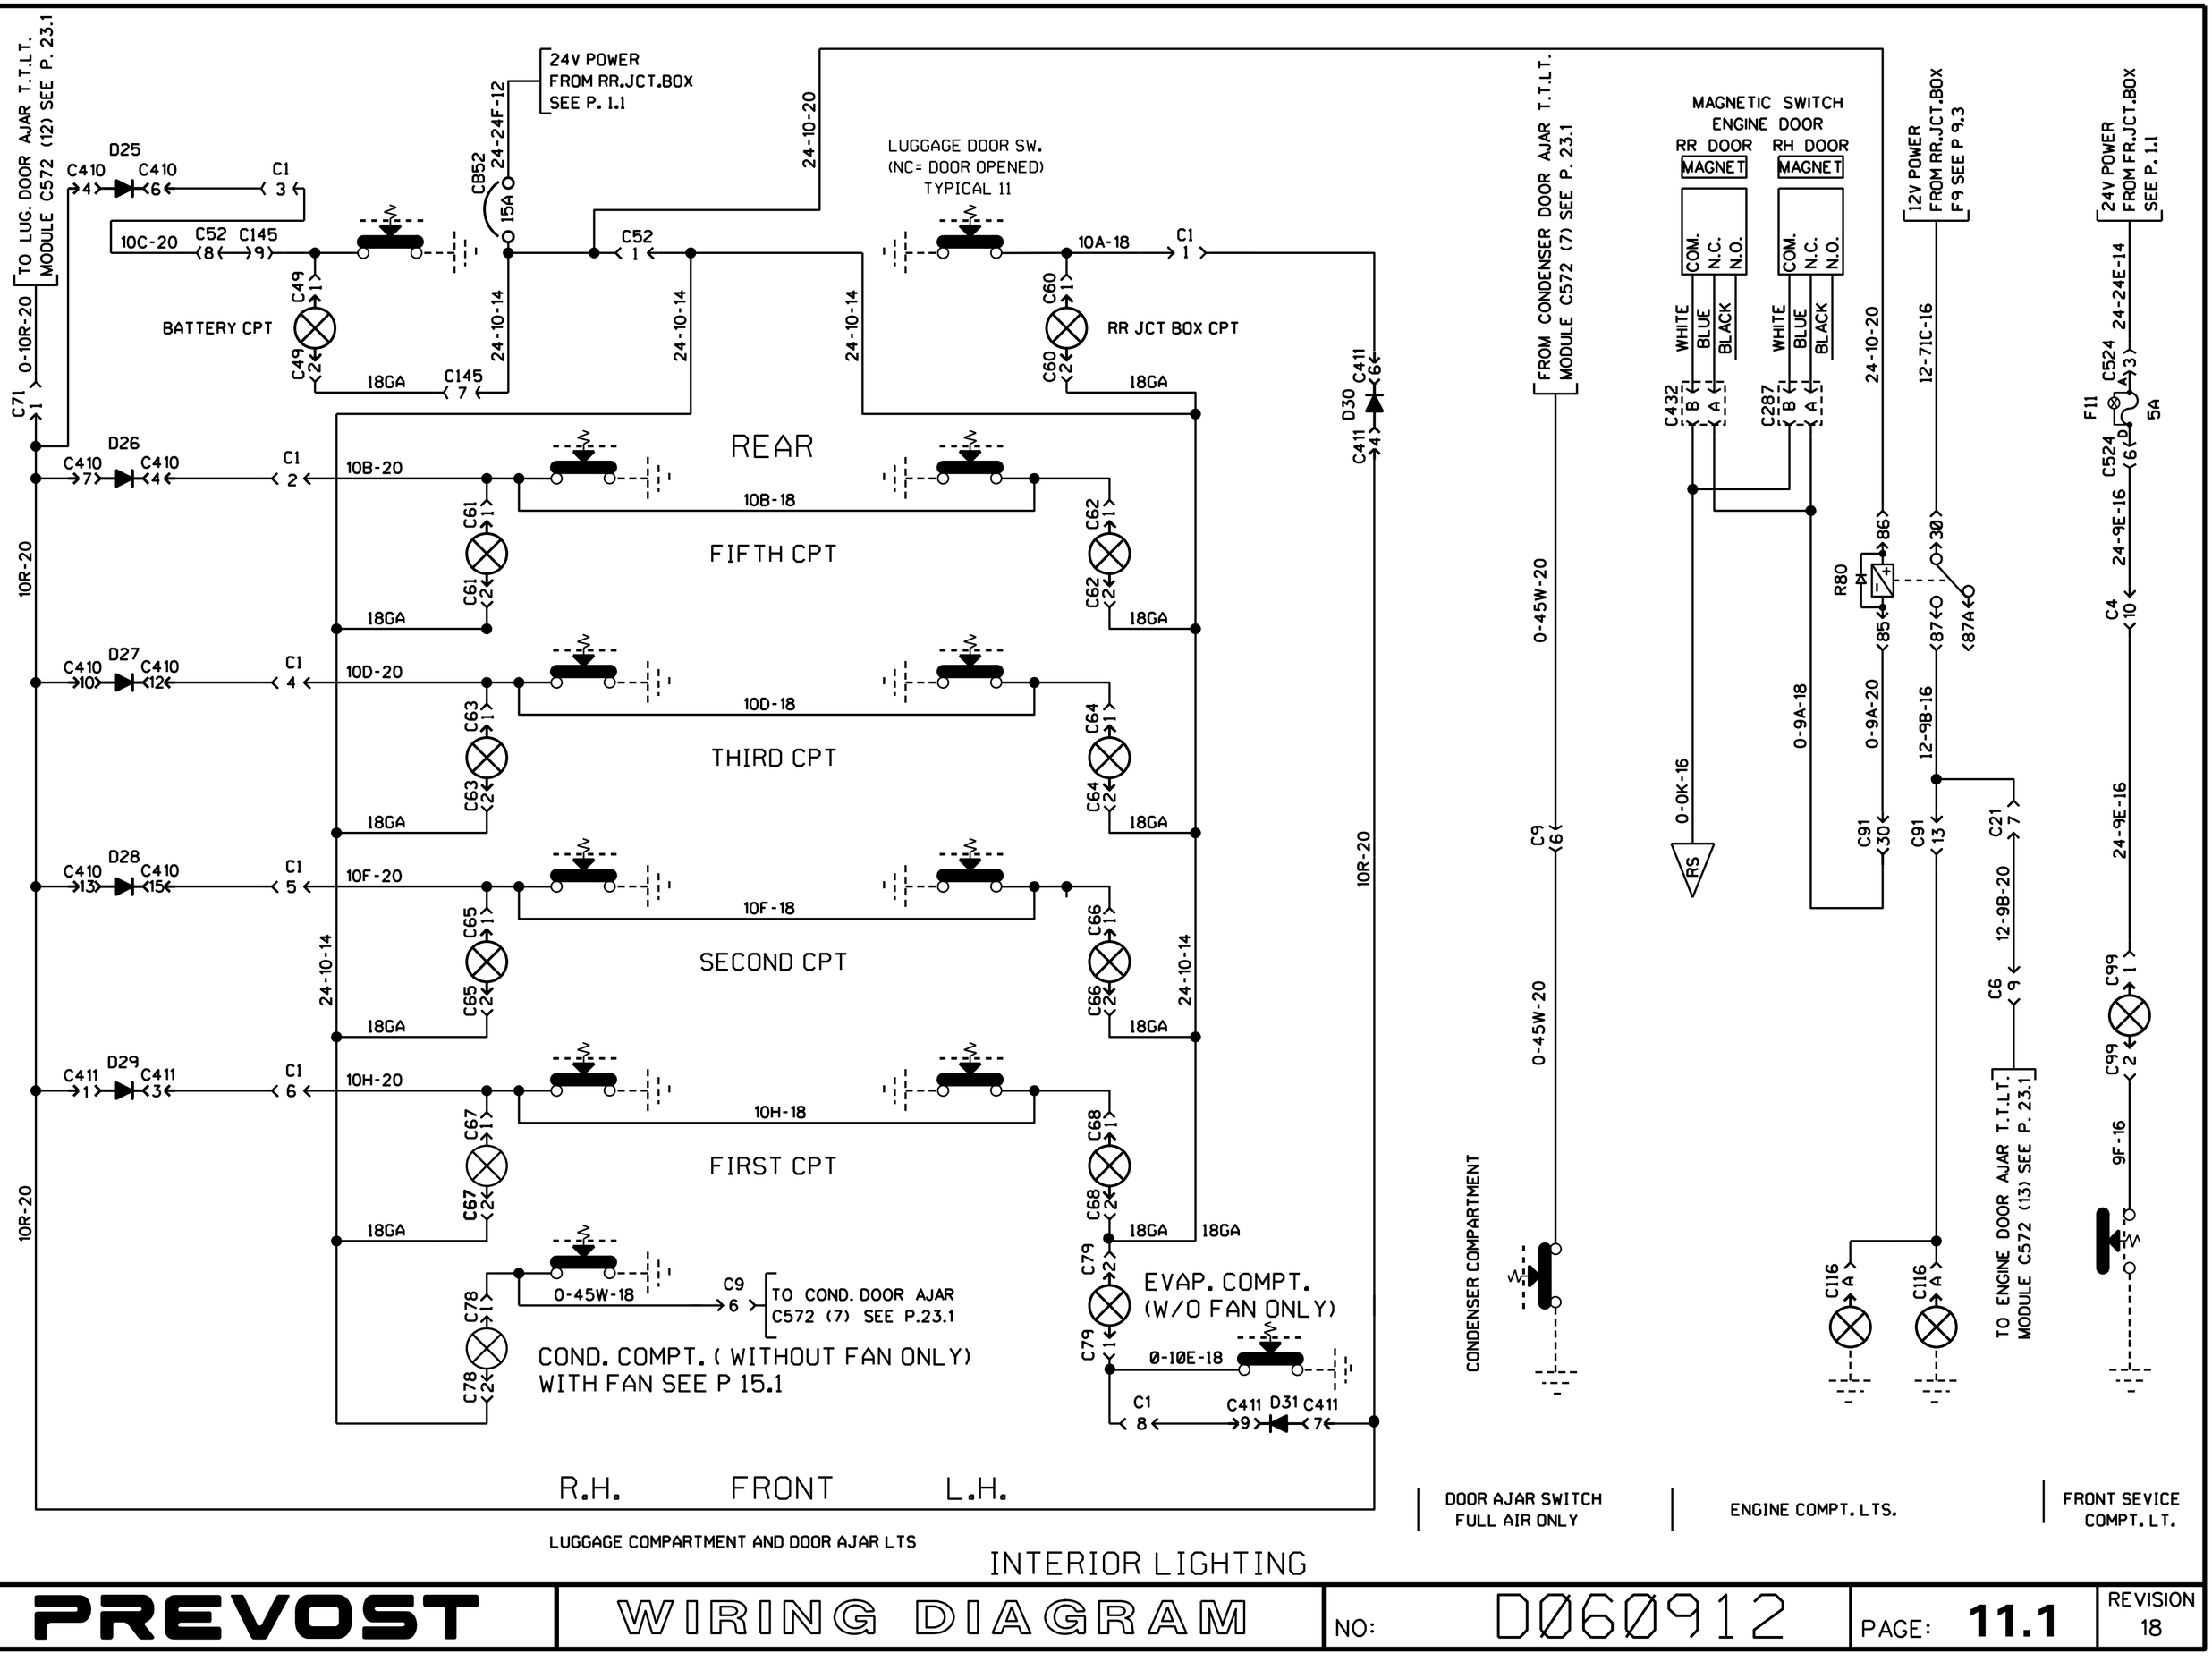

INTERIOR LIGHTING

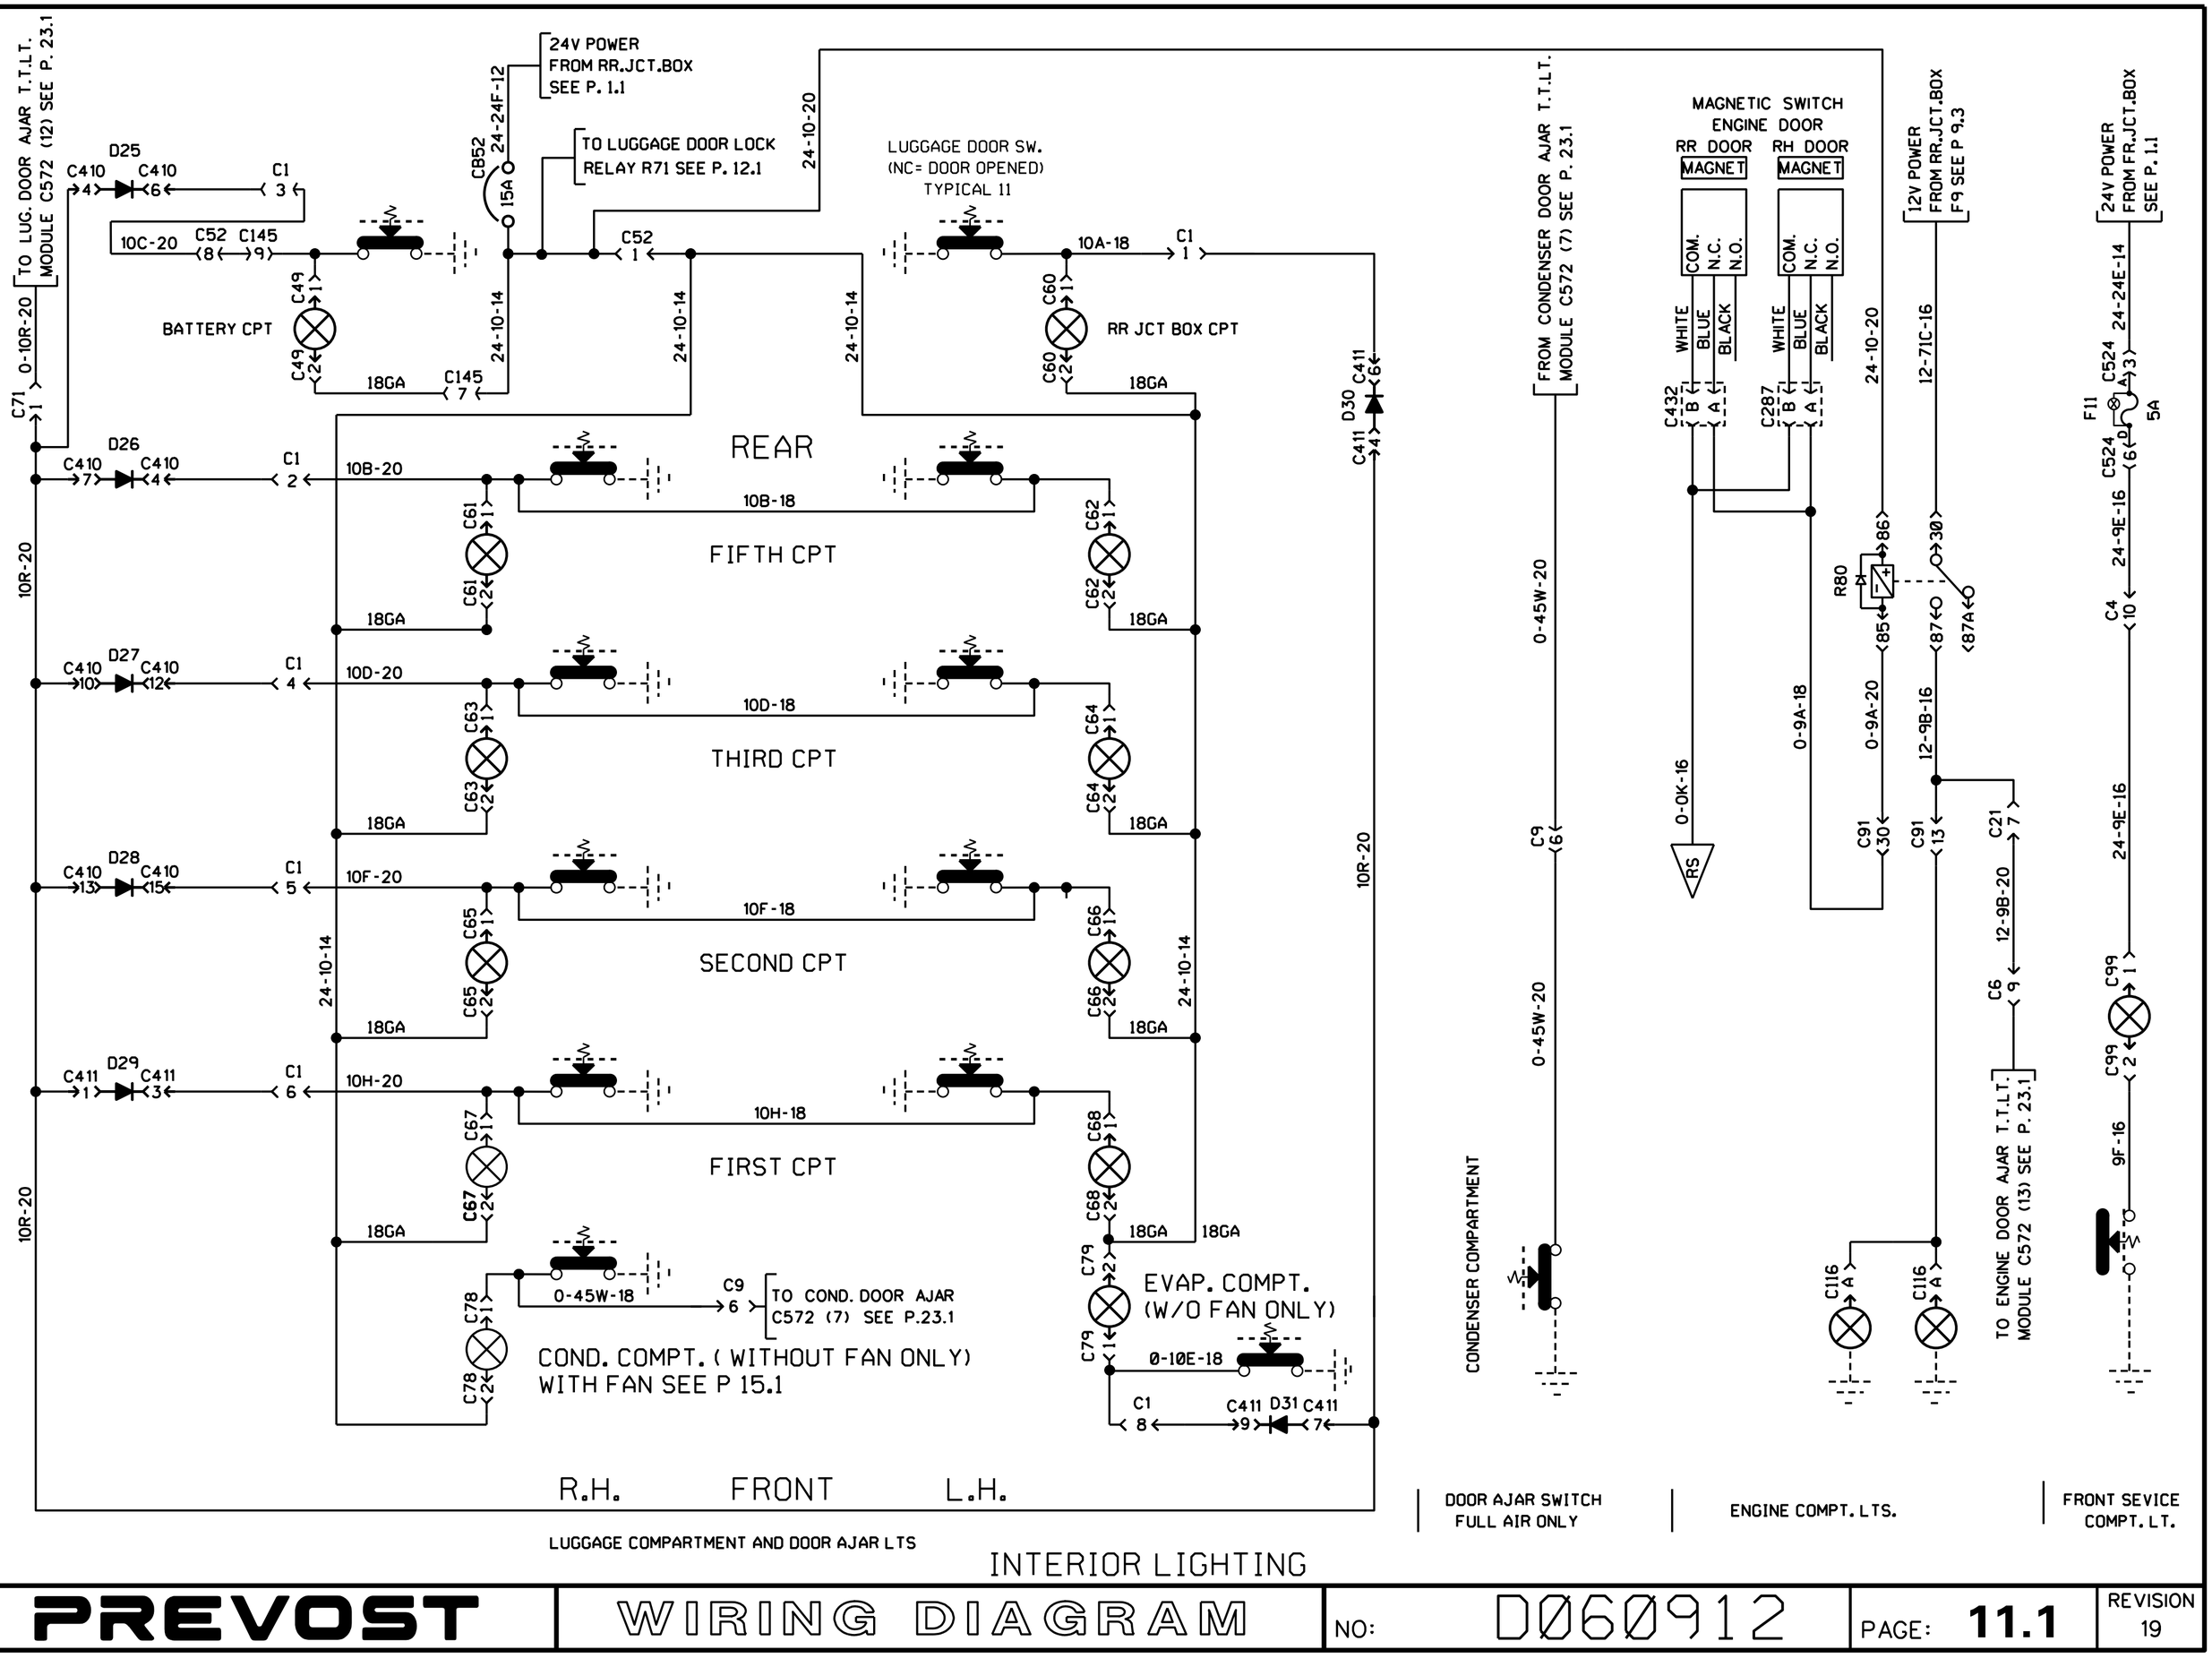

INTERIOR LIGHTING

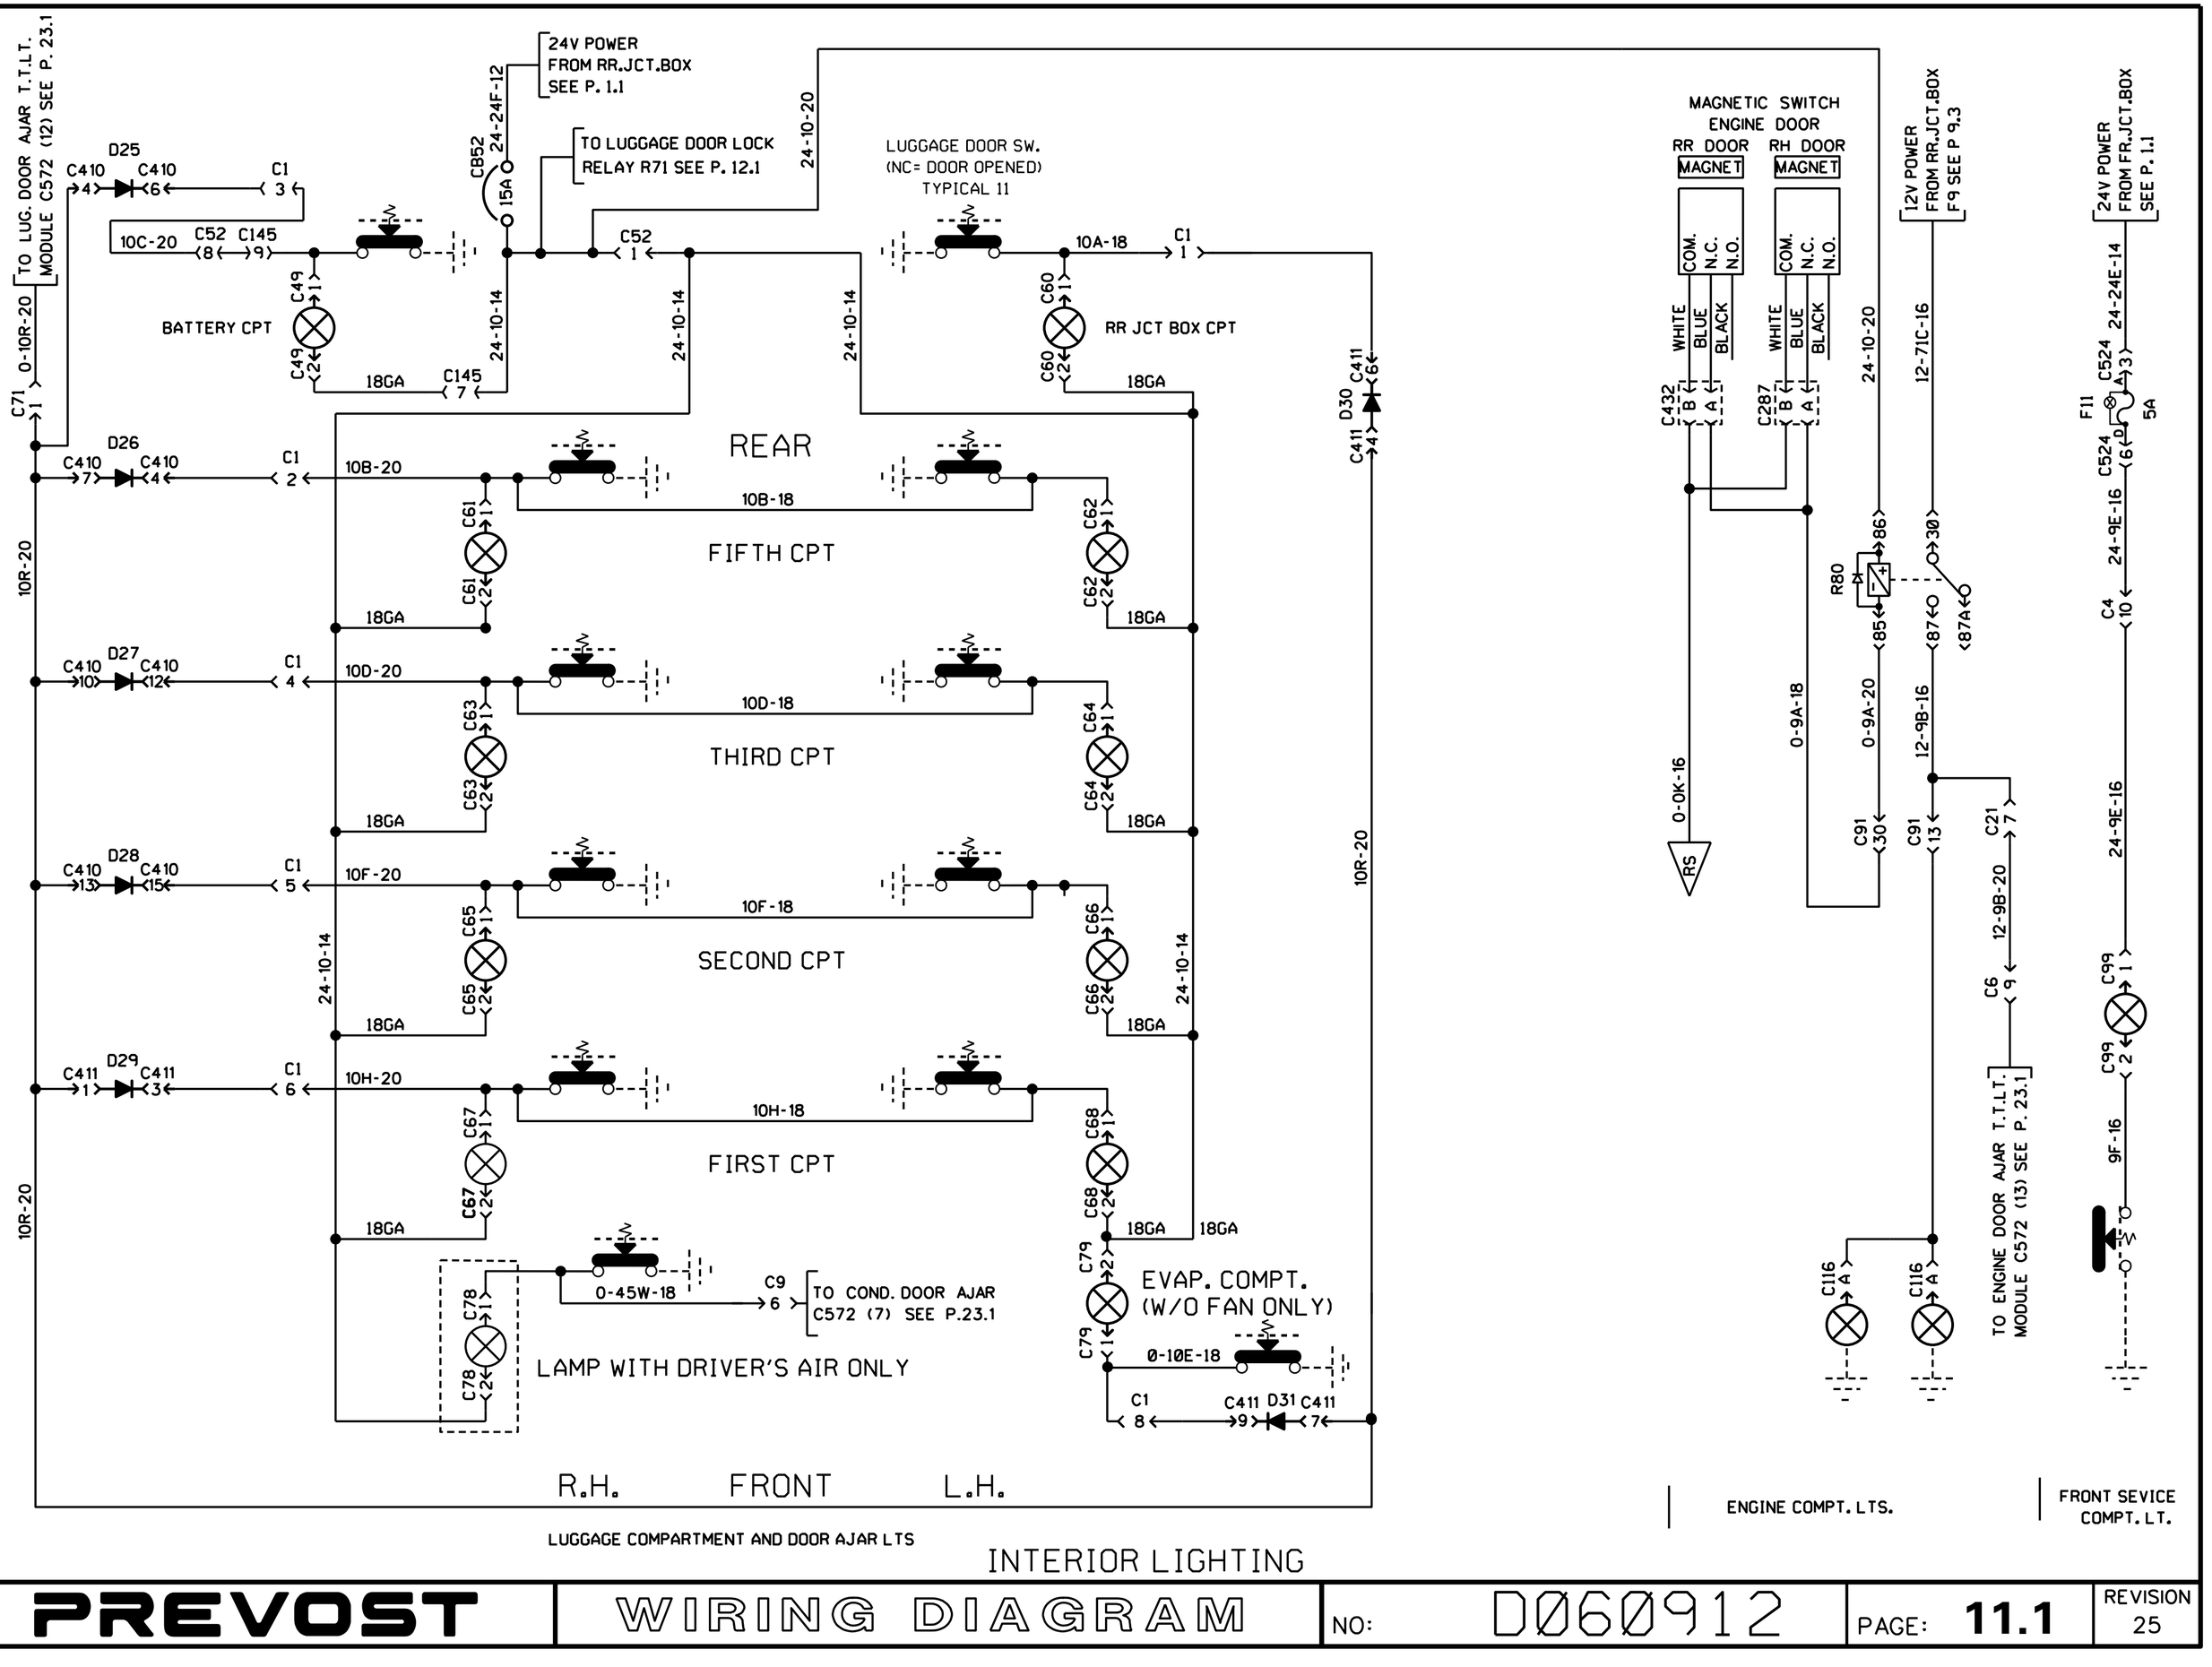

INTERIOR LIGHTING

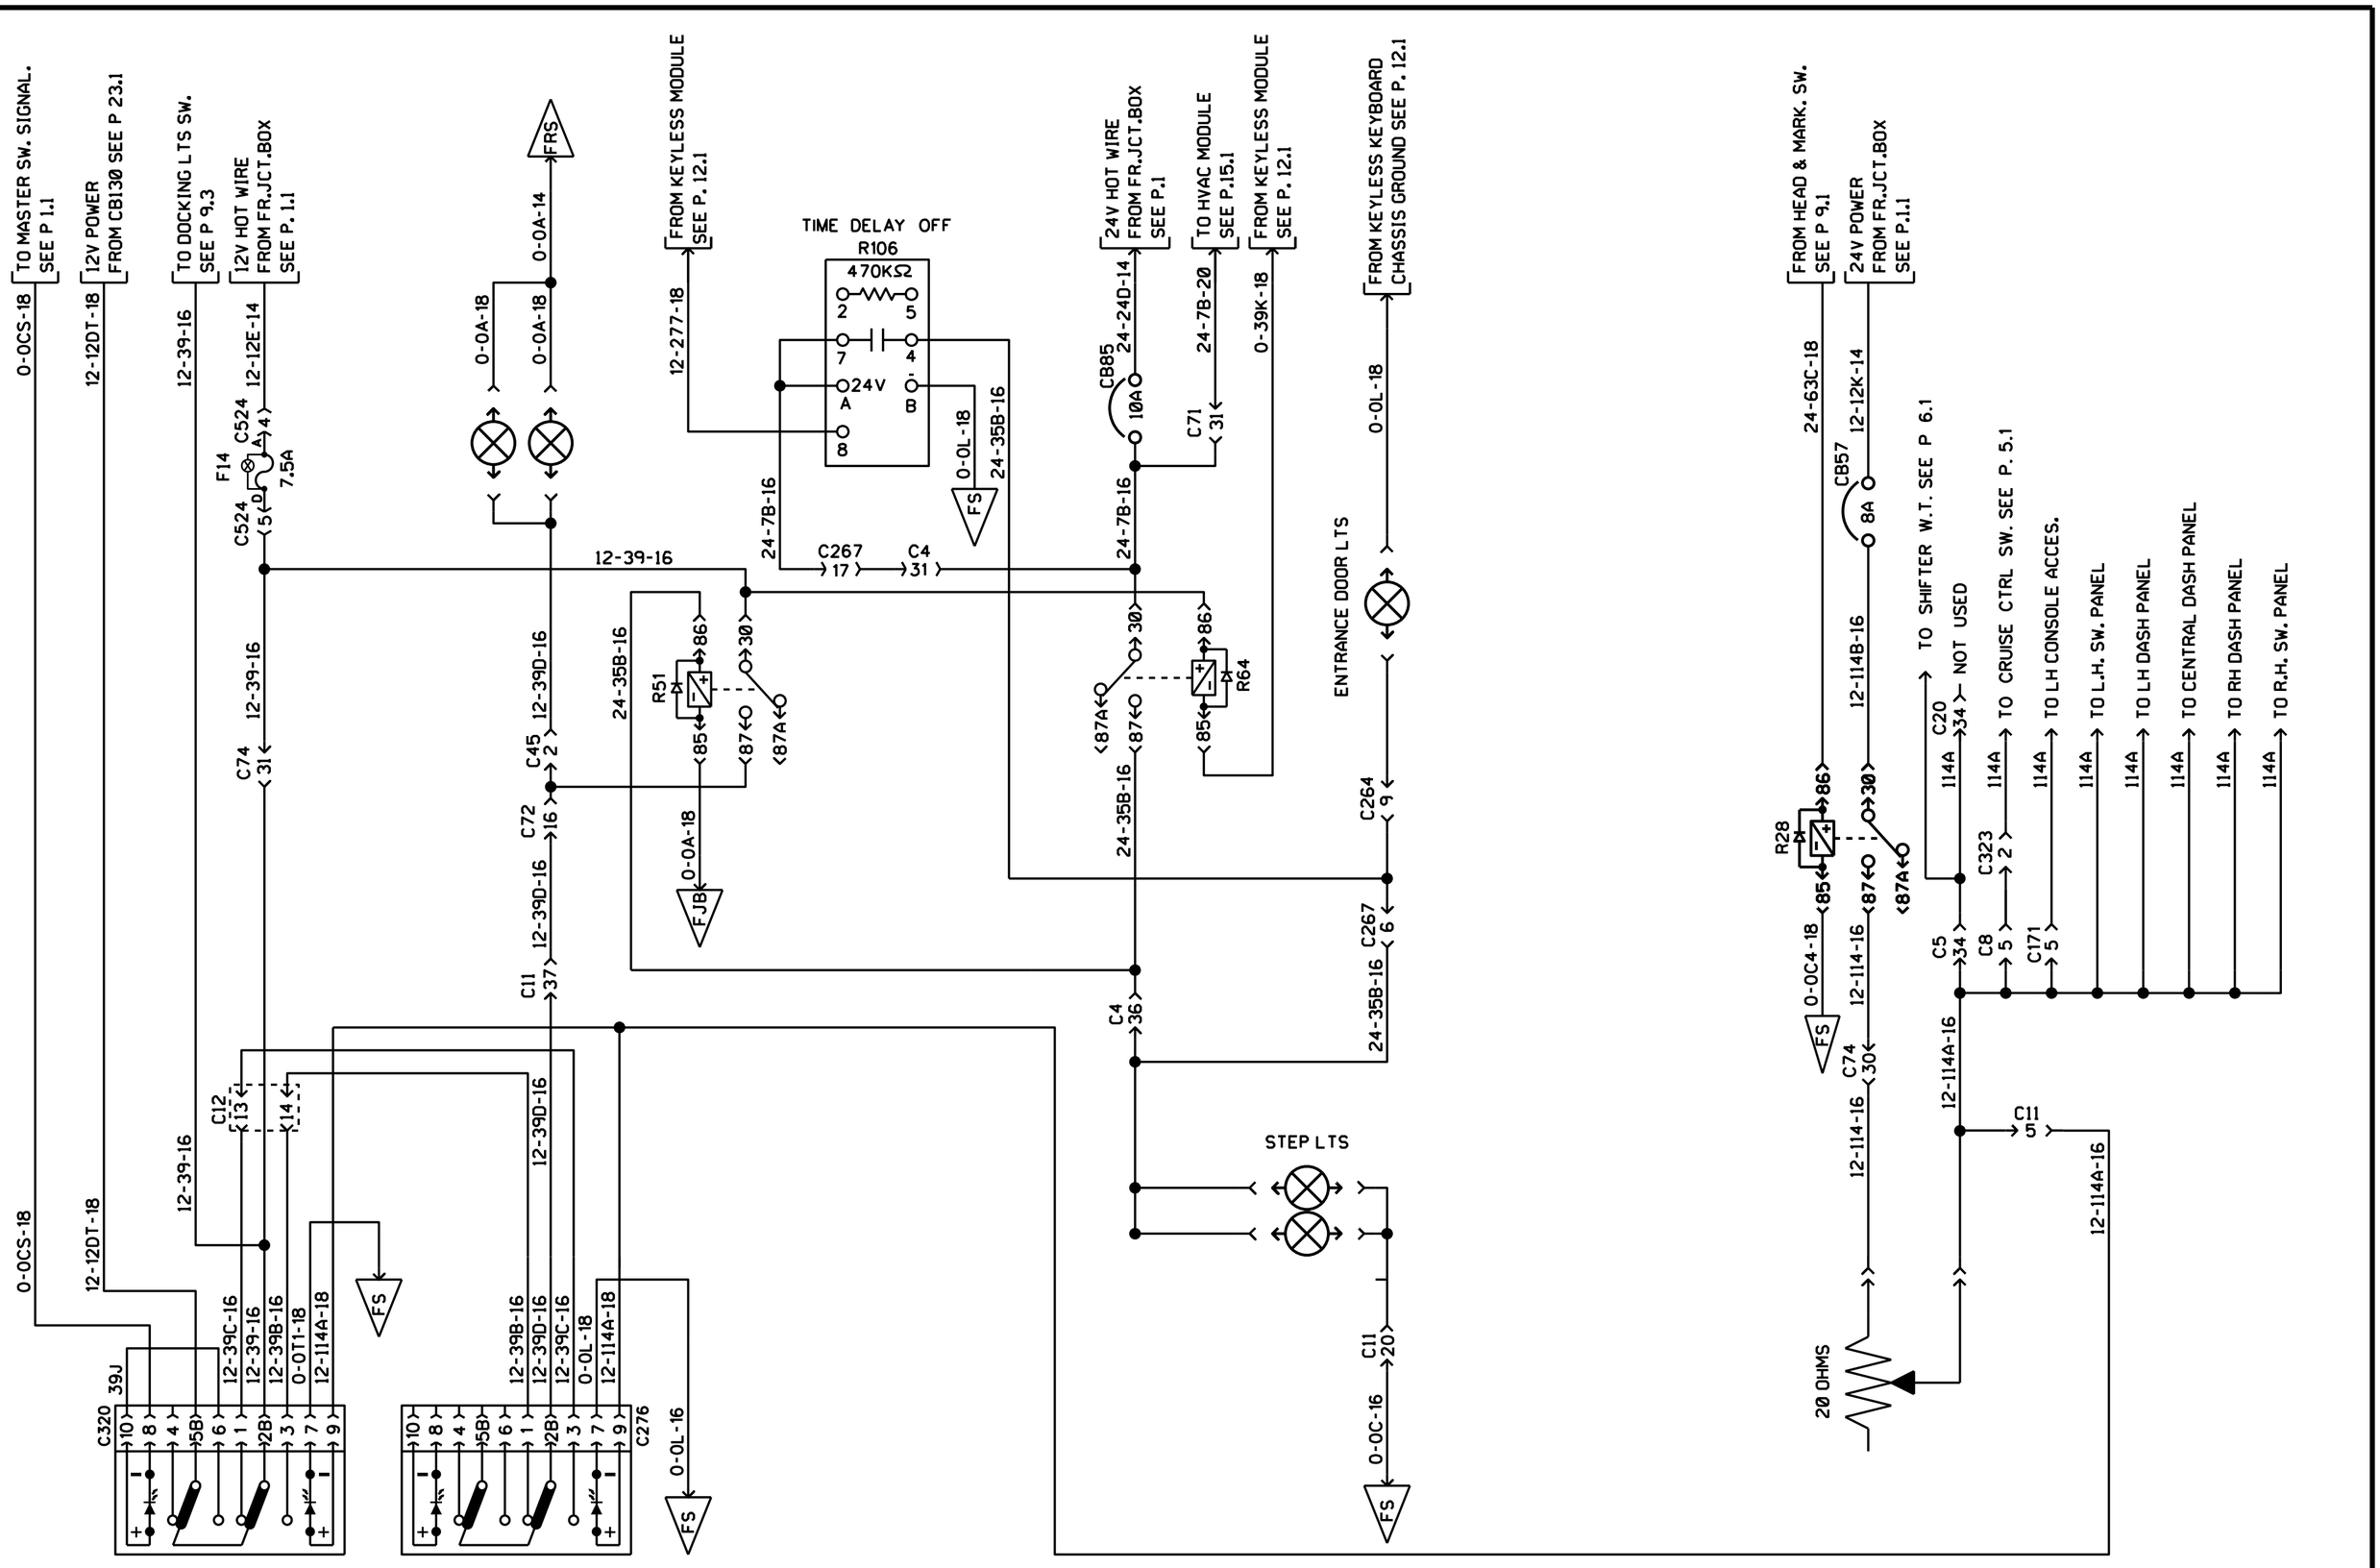

INTERIOR LIGHTING

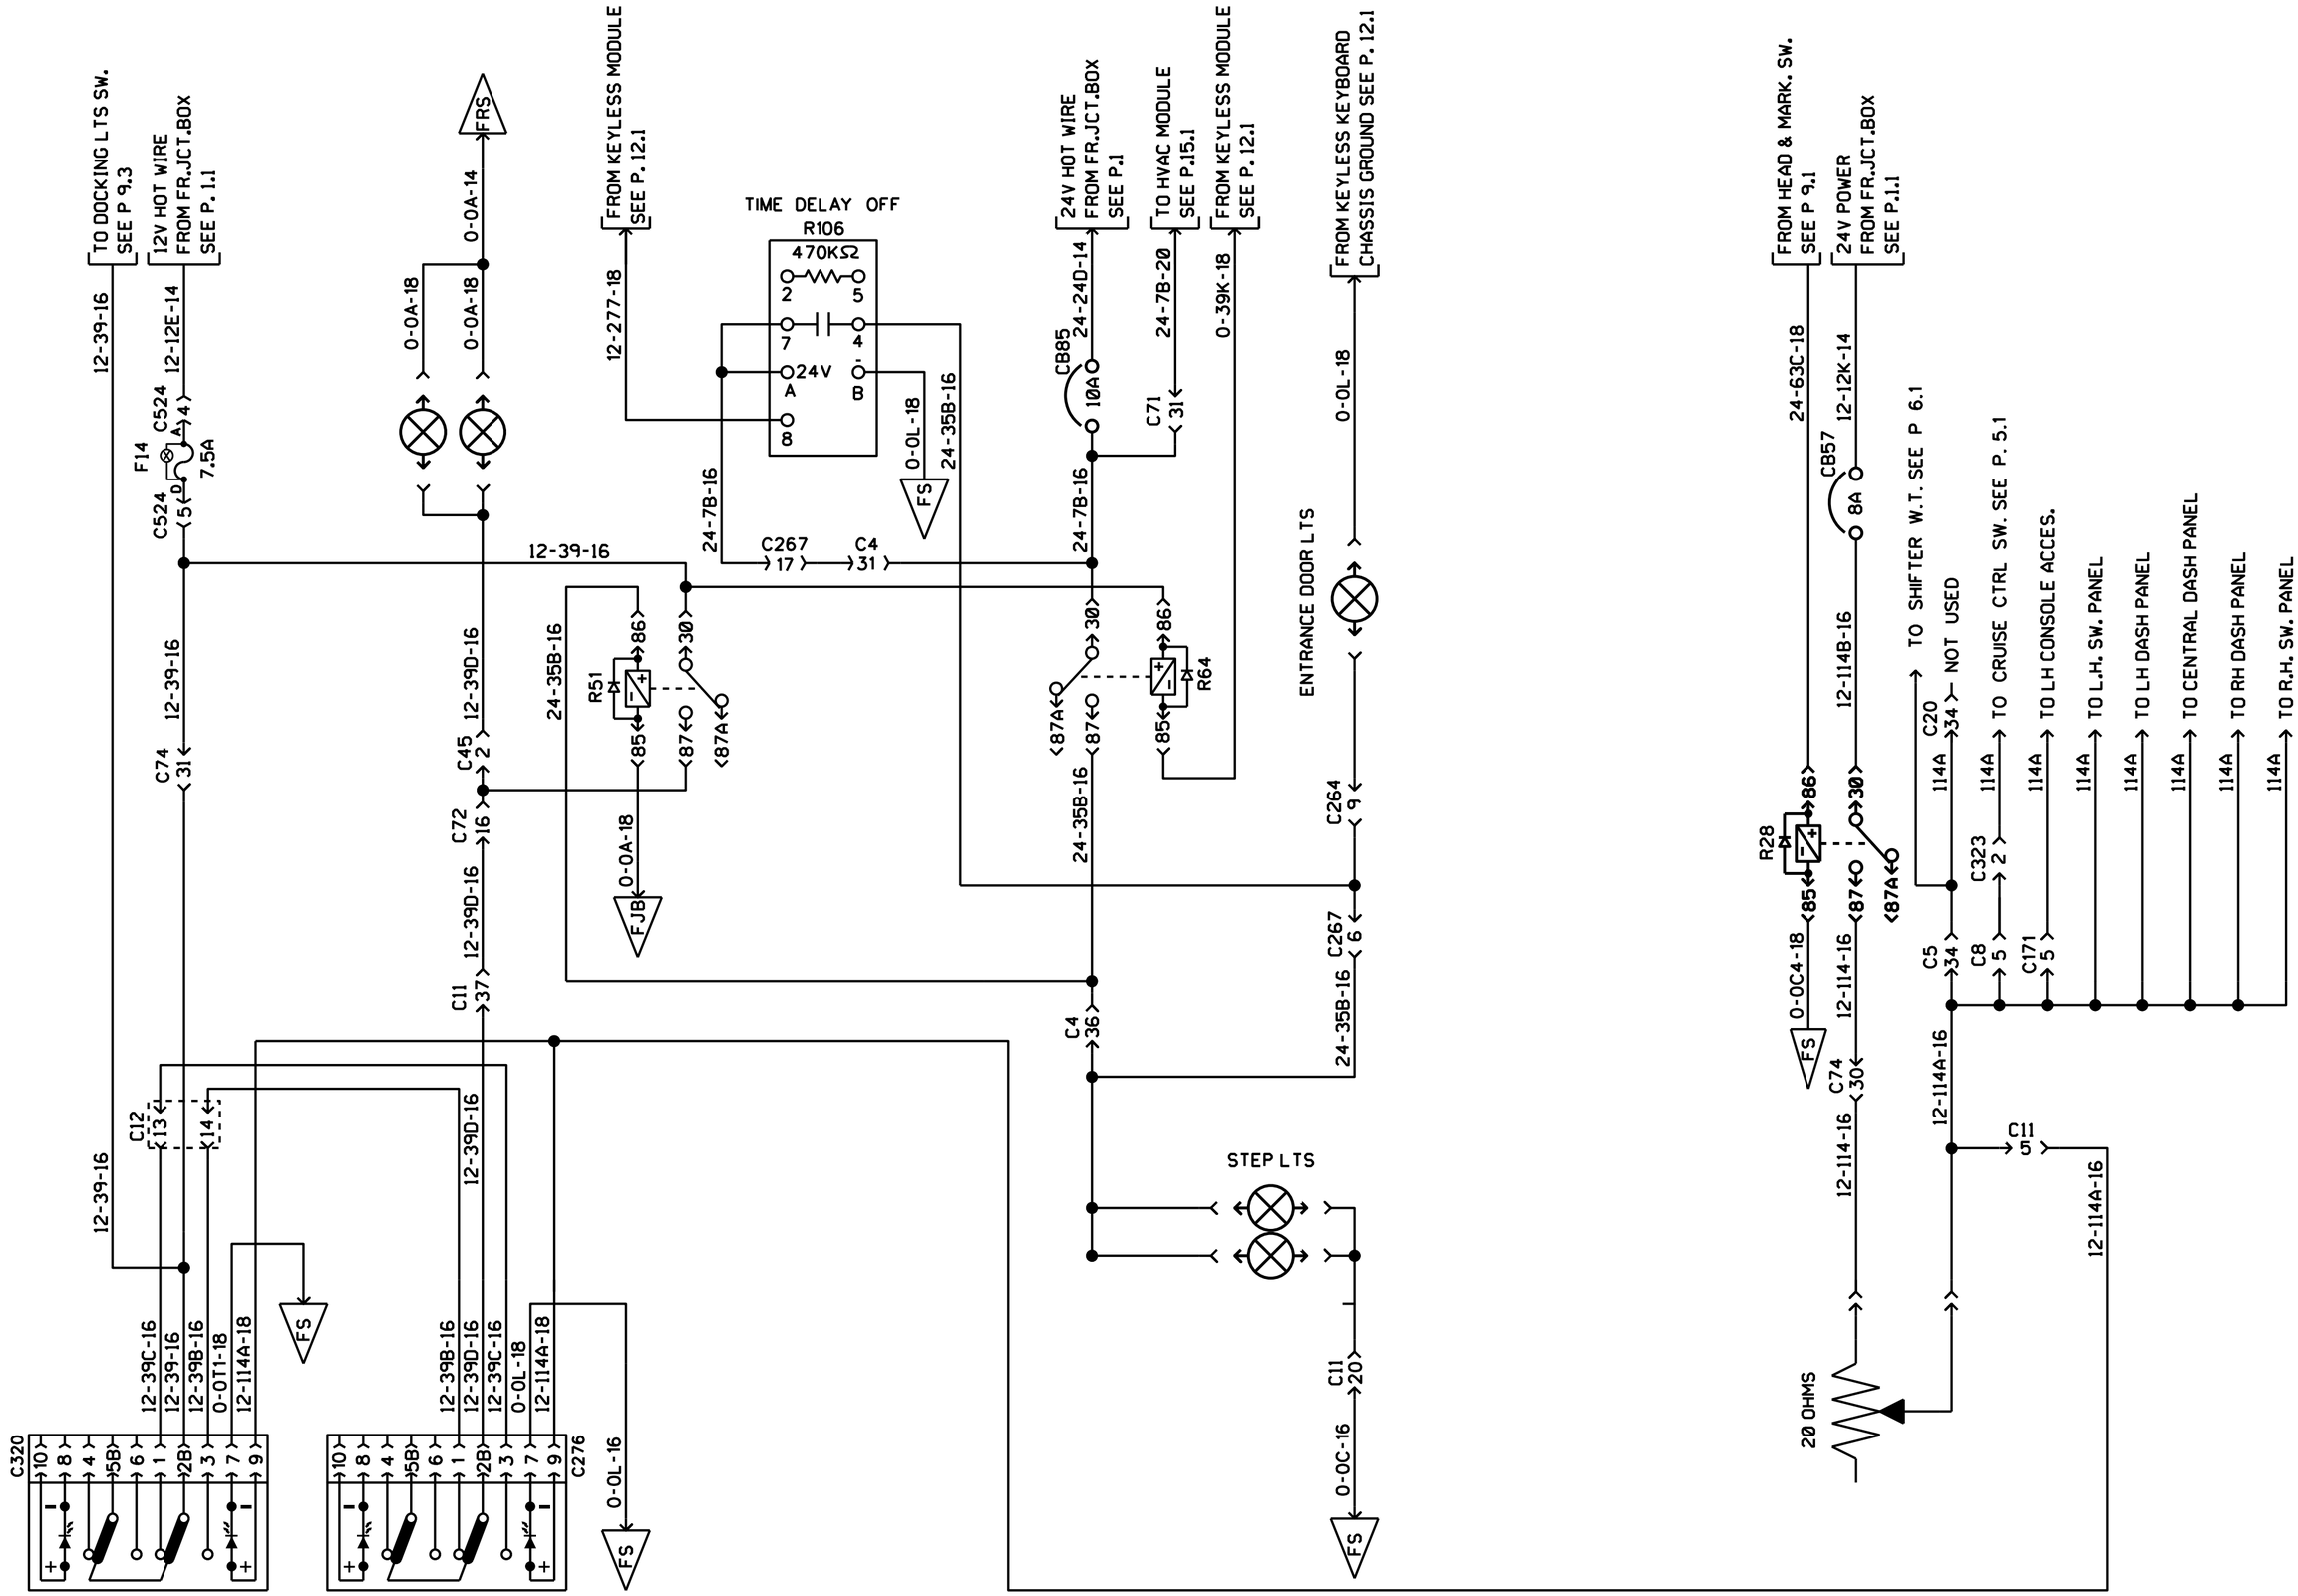
TO DOCKING LTS SW. SEE P 9.3
12V HOT WIRE FROM FR.JCT.BOX SEE P. 1.1
12-39-16
12-12E-14
F14
7.5A
C524
FRS
0-0A-14
0-0A-18
FROM KEYLESS MODULE SEE P. 12.1
12-277-18
TIME DELAY OFF
R106
470KΩ
24V
0-0L-18
24-35B-16
FS
24V HOT WIRE FROM FR.JCT.BOX SEE P.1
CB85
24-24D-14
10A
TO HVAC MODULE SEE P.15.1
24-7B-20
C71
31
FROM KEYLESS MODULE SEE P. 12.1
0-39K-18
24-7B-16
C267
17
C4
31
C74
30
C45
2
C72
16
C11
37
C12
13
14
R51
R64
R28
FJB
ENTRANCE DOOR LTS
FROM KEYLESS KEYBOARD CHASSIS GROUND SEE P. 12.1
0-0L-18
C264
9
C267
6
24-35B-16
C4
36
FROM HEAD & MARK. SW. SEE P 9.1
24-63C-18
24V POWER FROM FR.JCT.BOX SEE P.1.1
CB57
8A
12-12K-14
12-114B-16
TO SHIFTER W.T. SEE P 6.1
NOT USED
TO CRUISE CTRL SW. SEE P. 5.1
TO LH CONSOLE ACCES.
TO L.H. SW. PANEL
TO LH DASH PANEL
TO CENTRAL DASH PANEL
TO RH DASH PANEL
TO R.H. SW. PANEL
C20
34
C323
2
C5
34
C8
5
C171
5
C74
30
12-114-16
0-0C4-18
12-114A-16
C11
5
20 OHMS
STEP LTS
C11
20
0-0C-16
0-0L-16
C320
C276
DRIVER'S LTS SW.
3-WAY SW.
DRIVER'S LTS
ENTRANCE DOOR SW. & LTS
DASH LTS. RHEOSTAT
INTERIOR LIGHTING

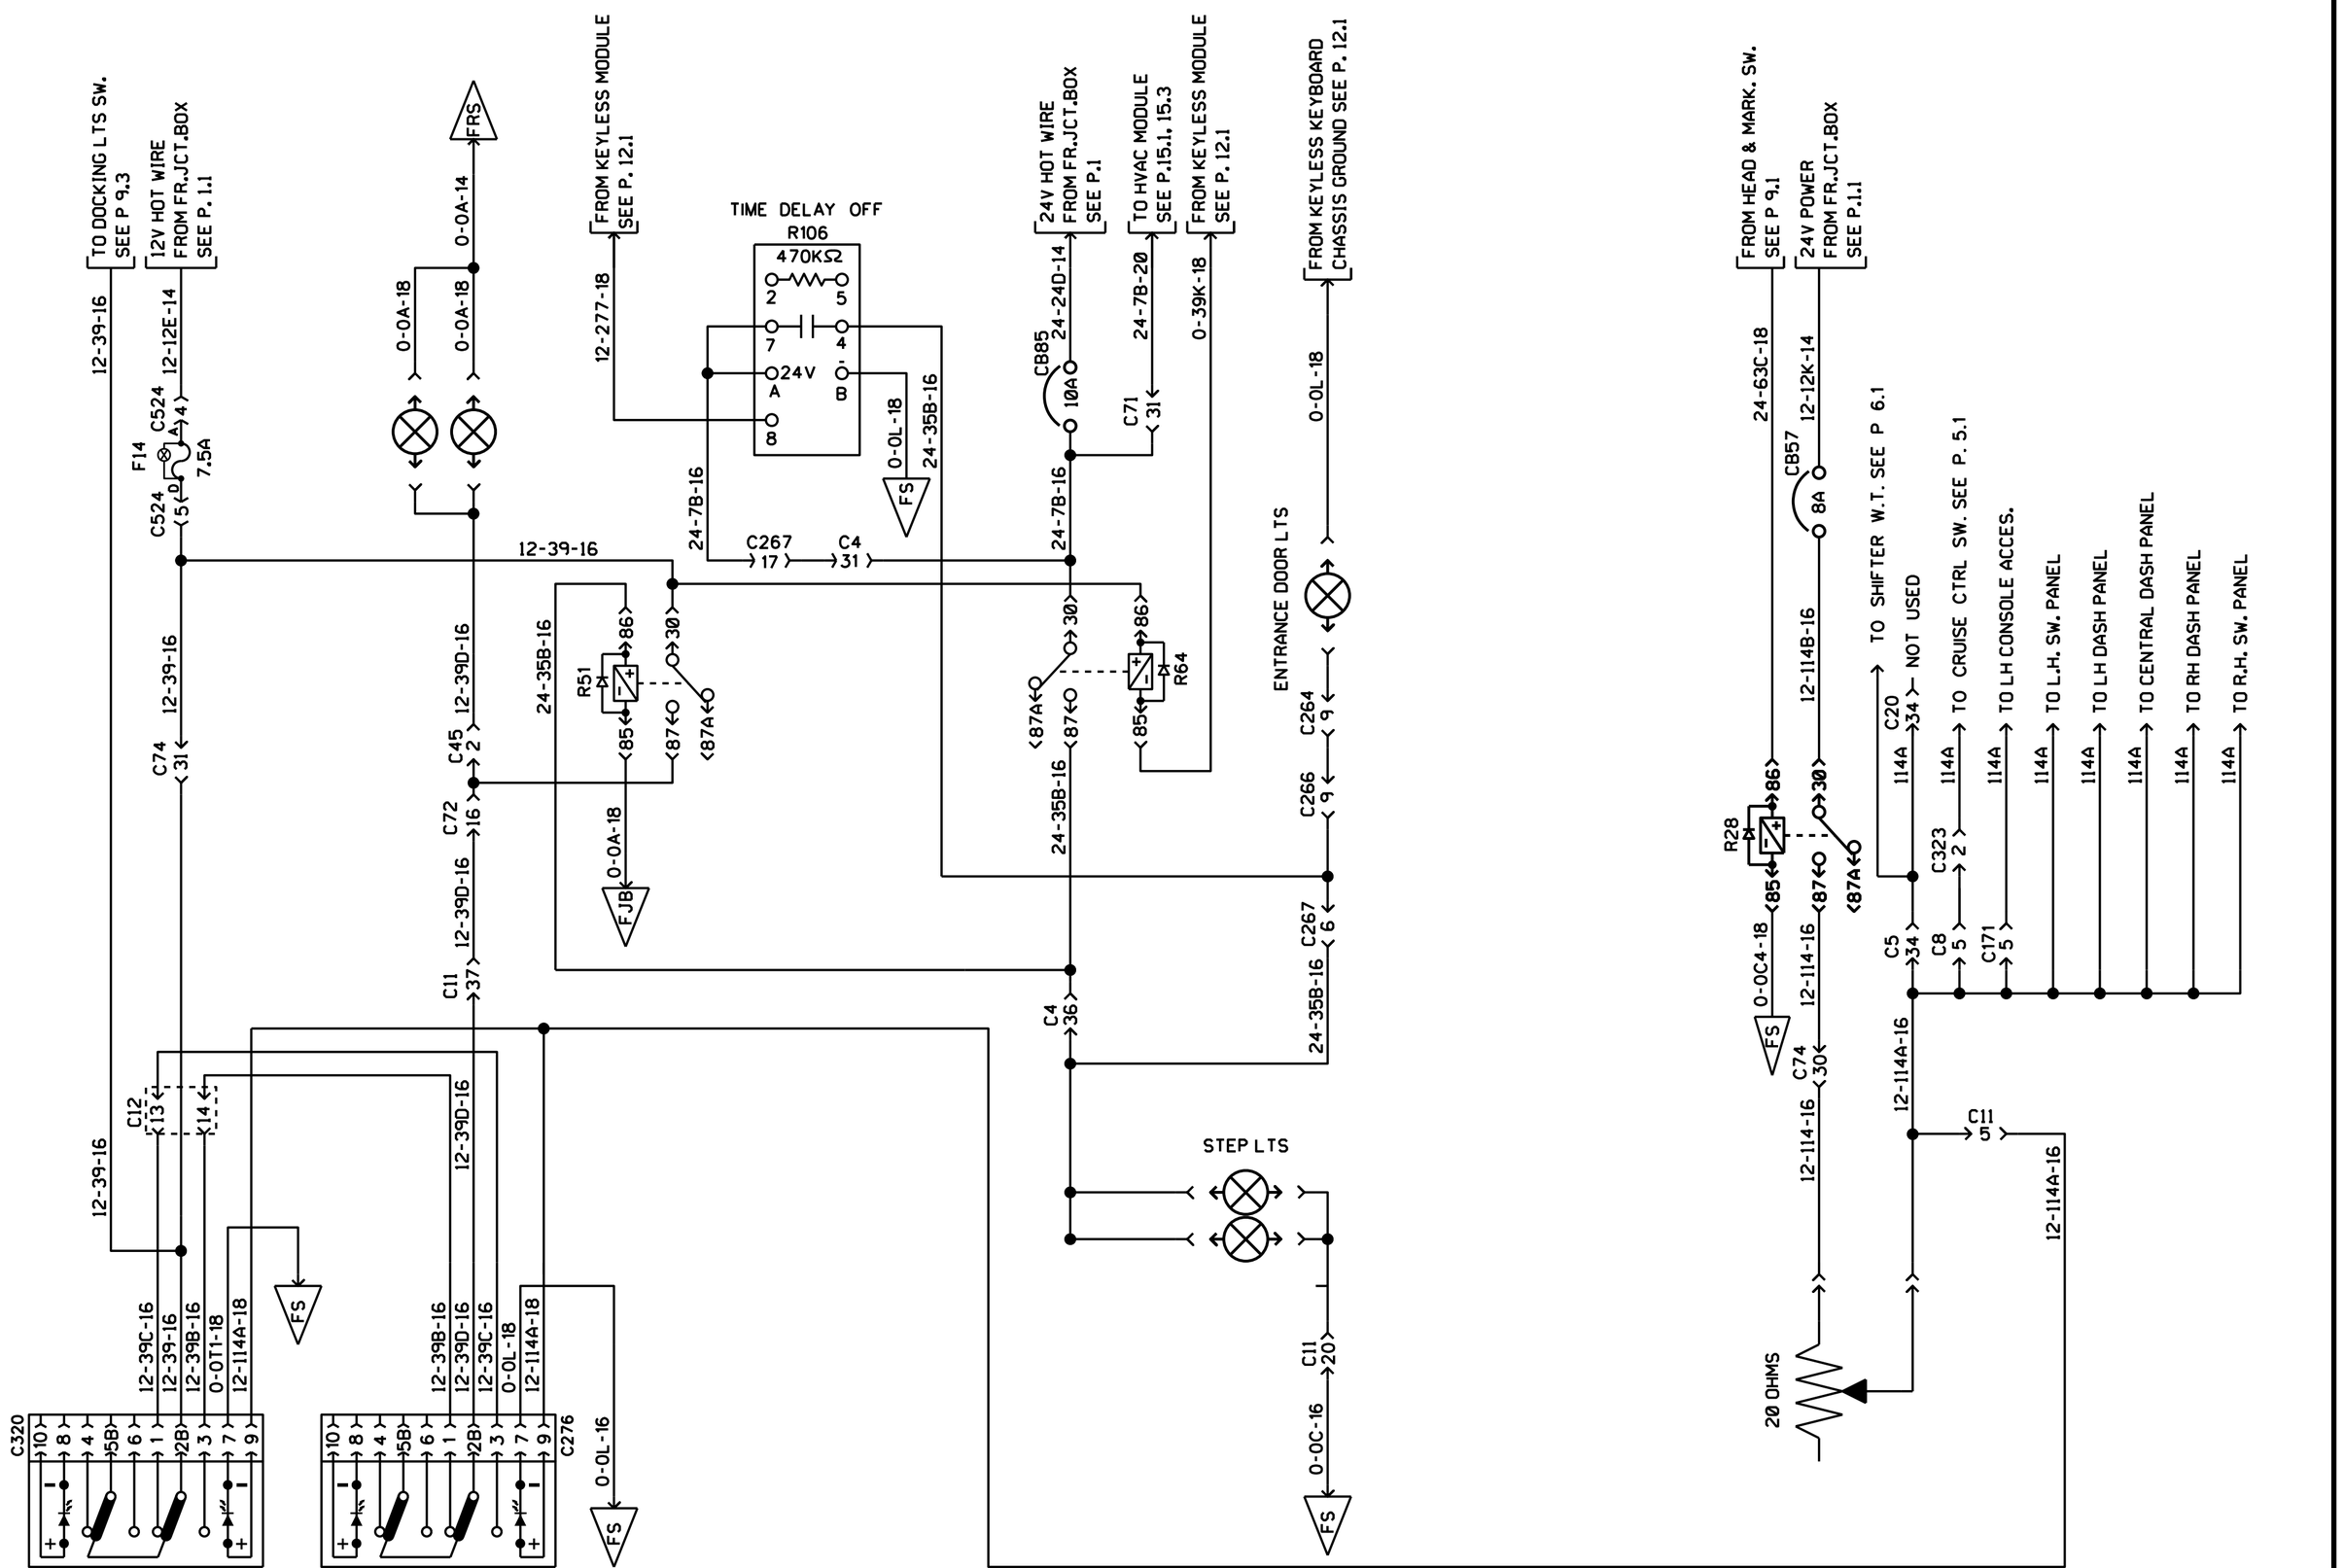

INTERIOR LIGHTING

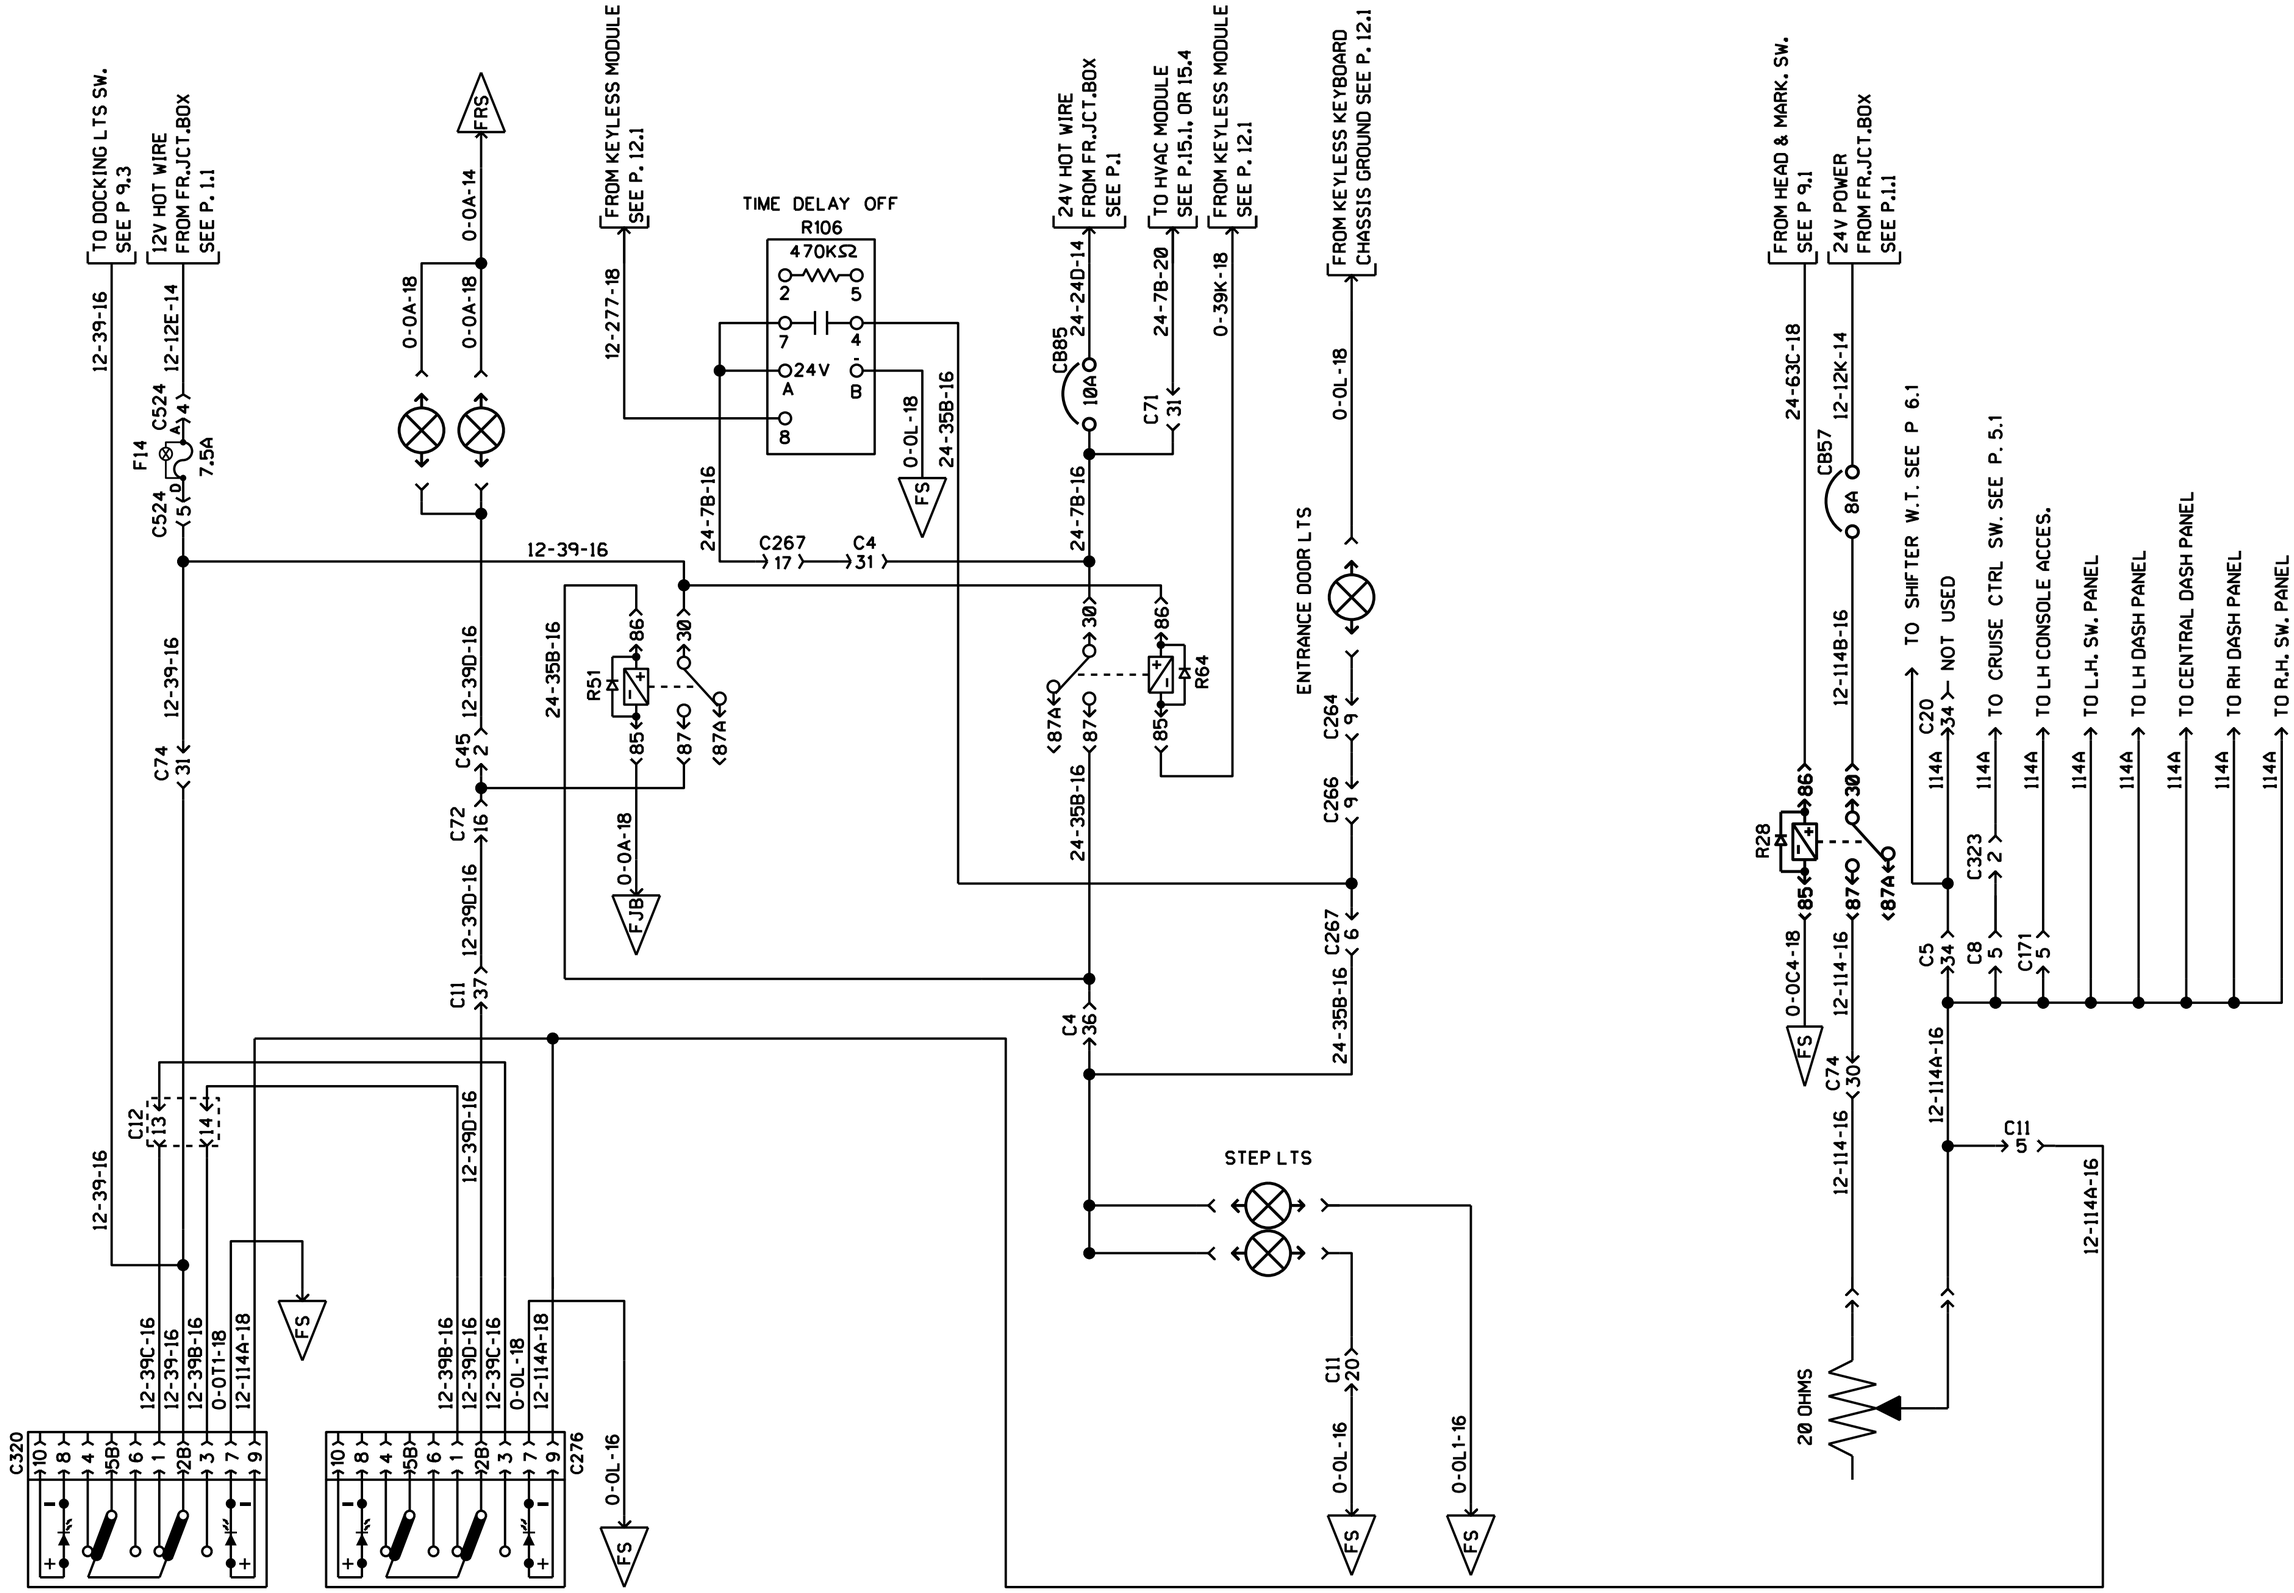

INTERIOR LIGHTING

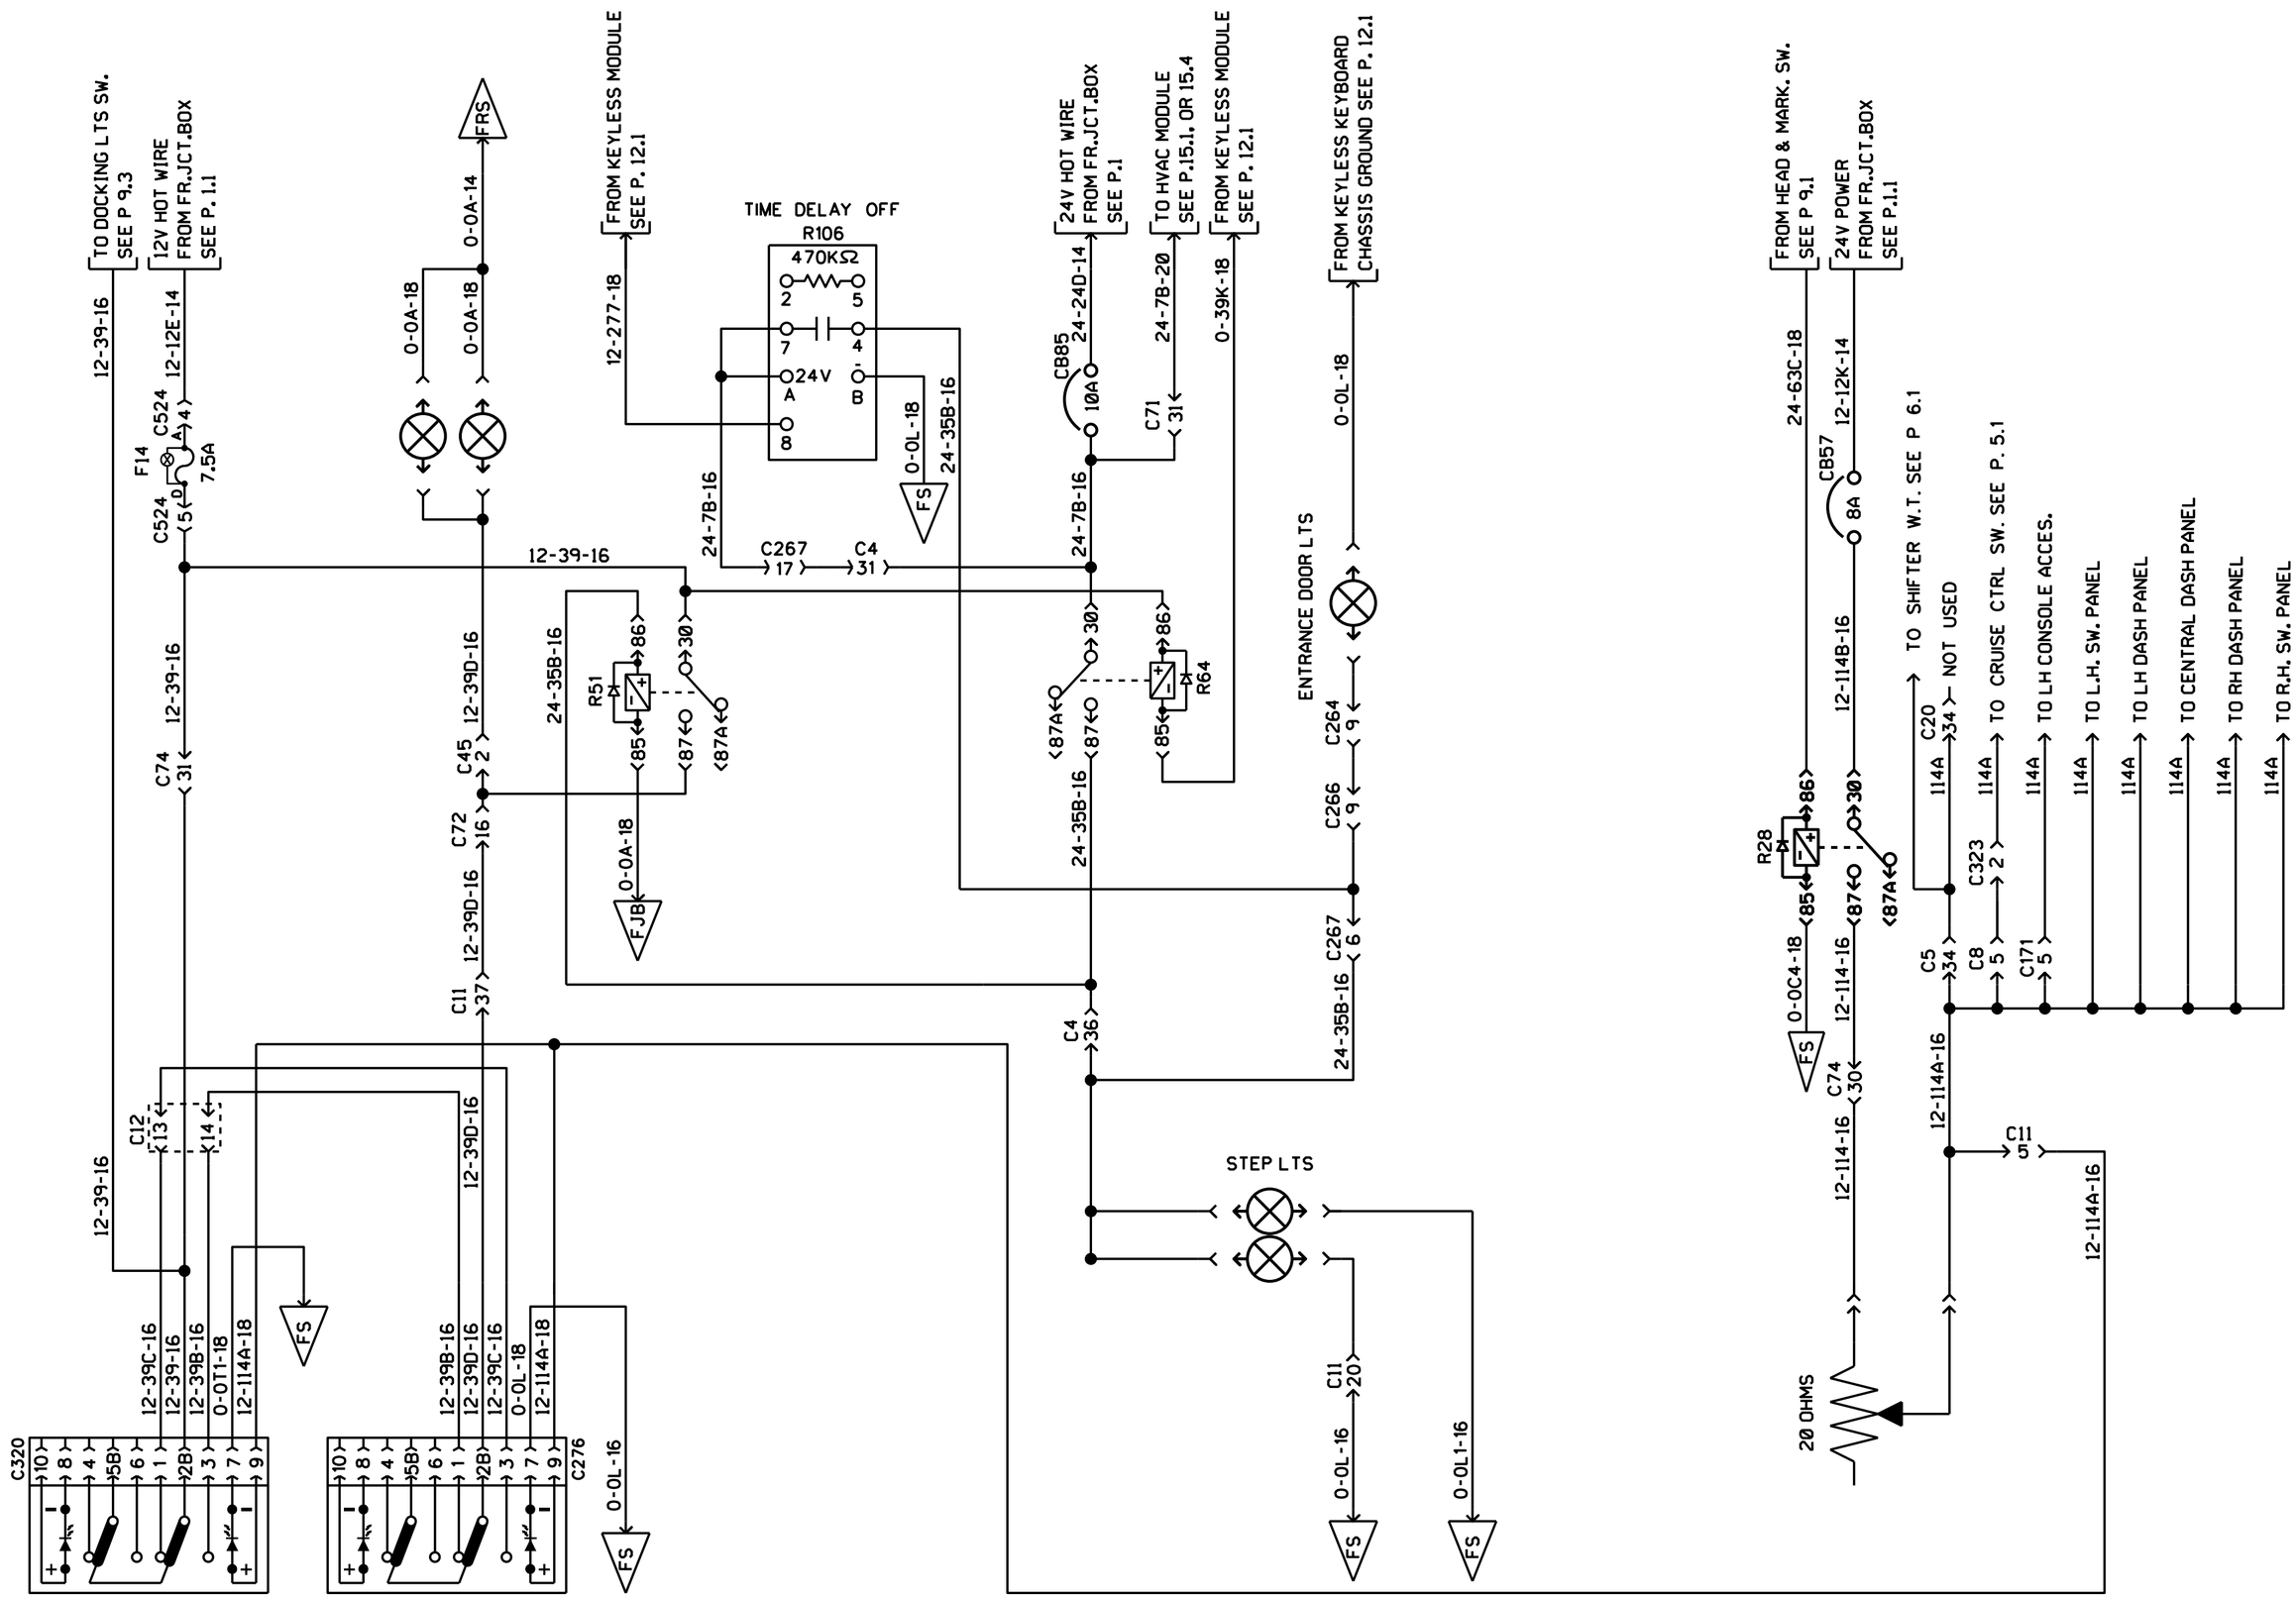

INTERIOR LIGHTING

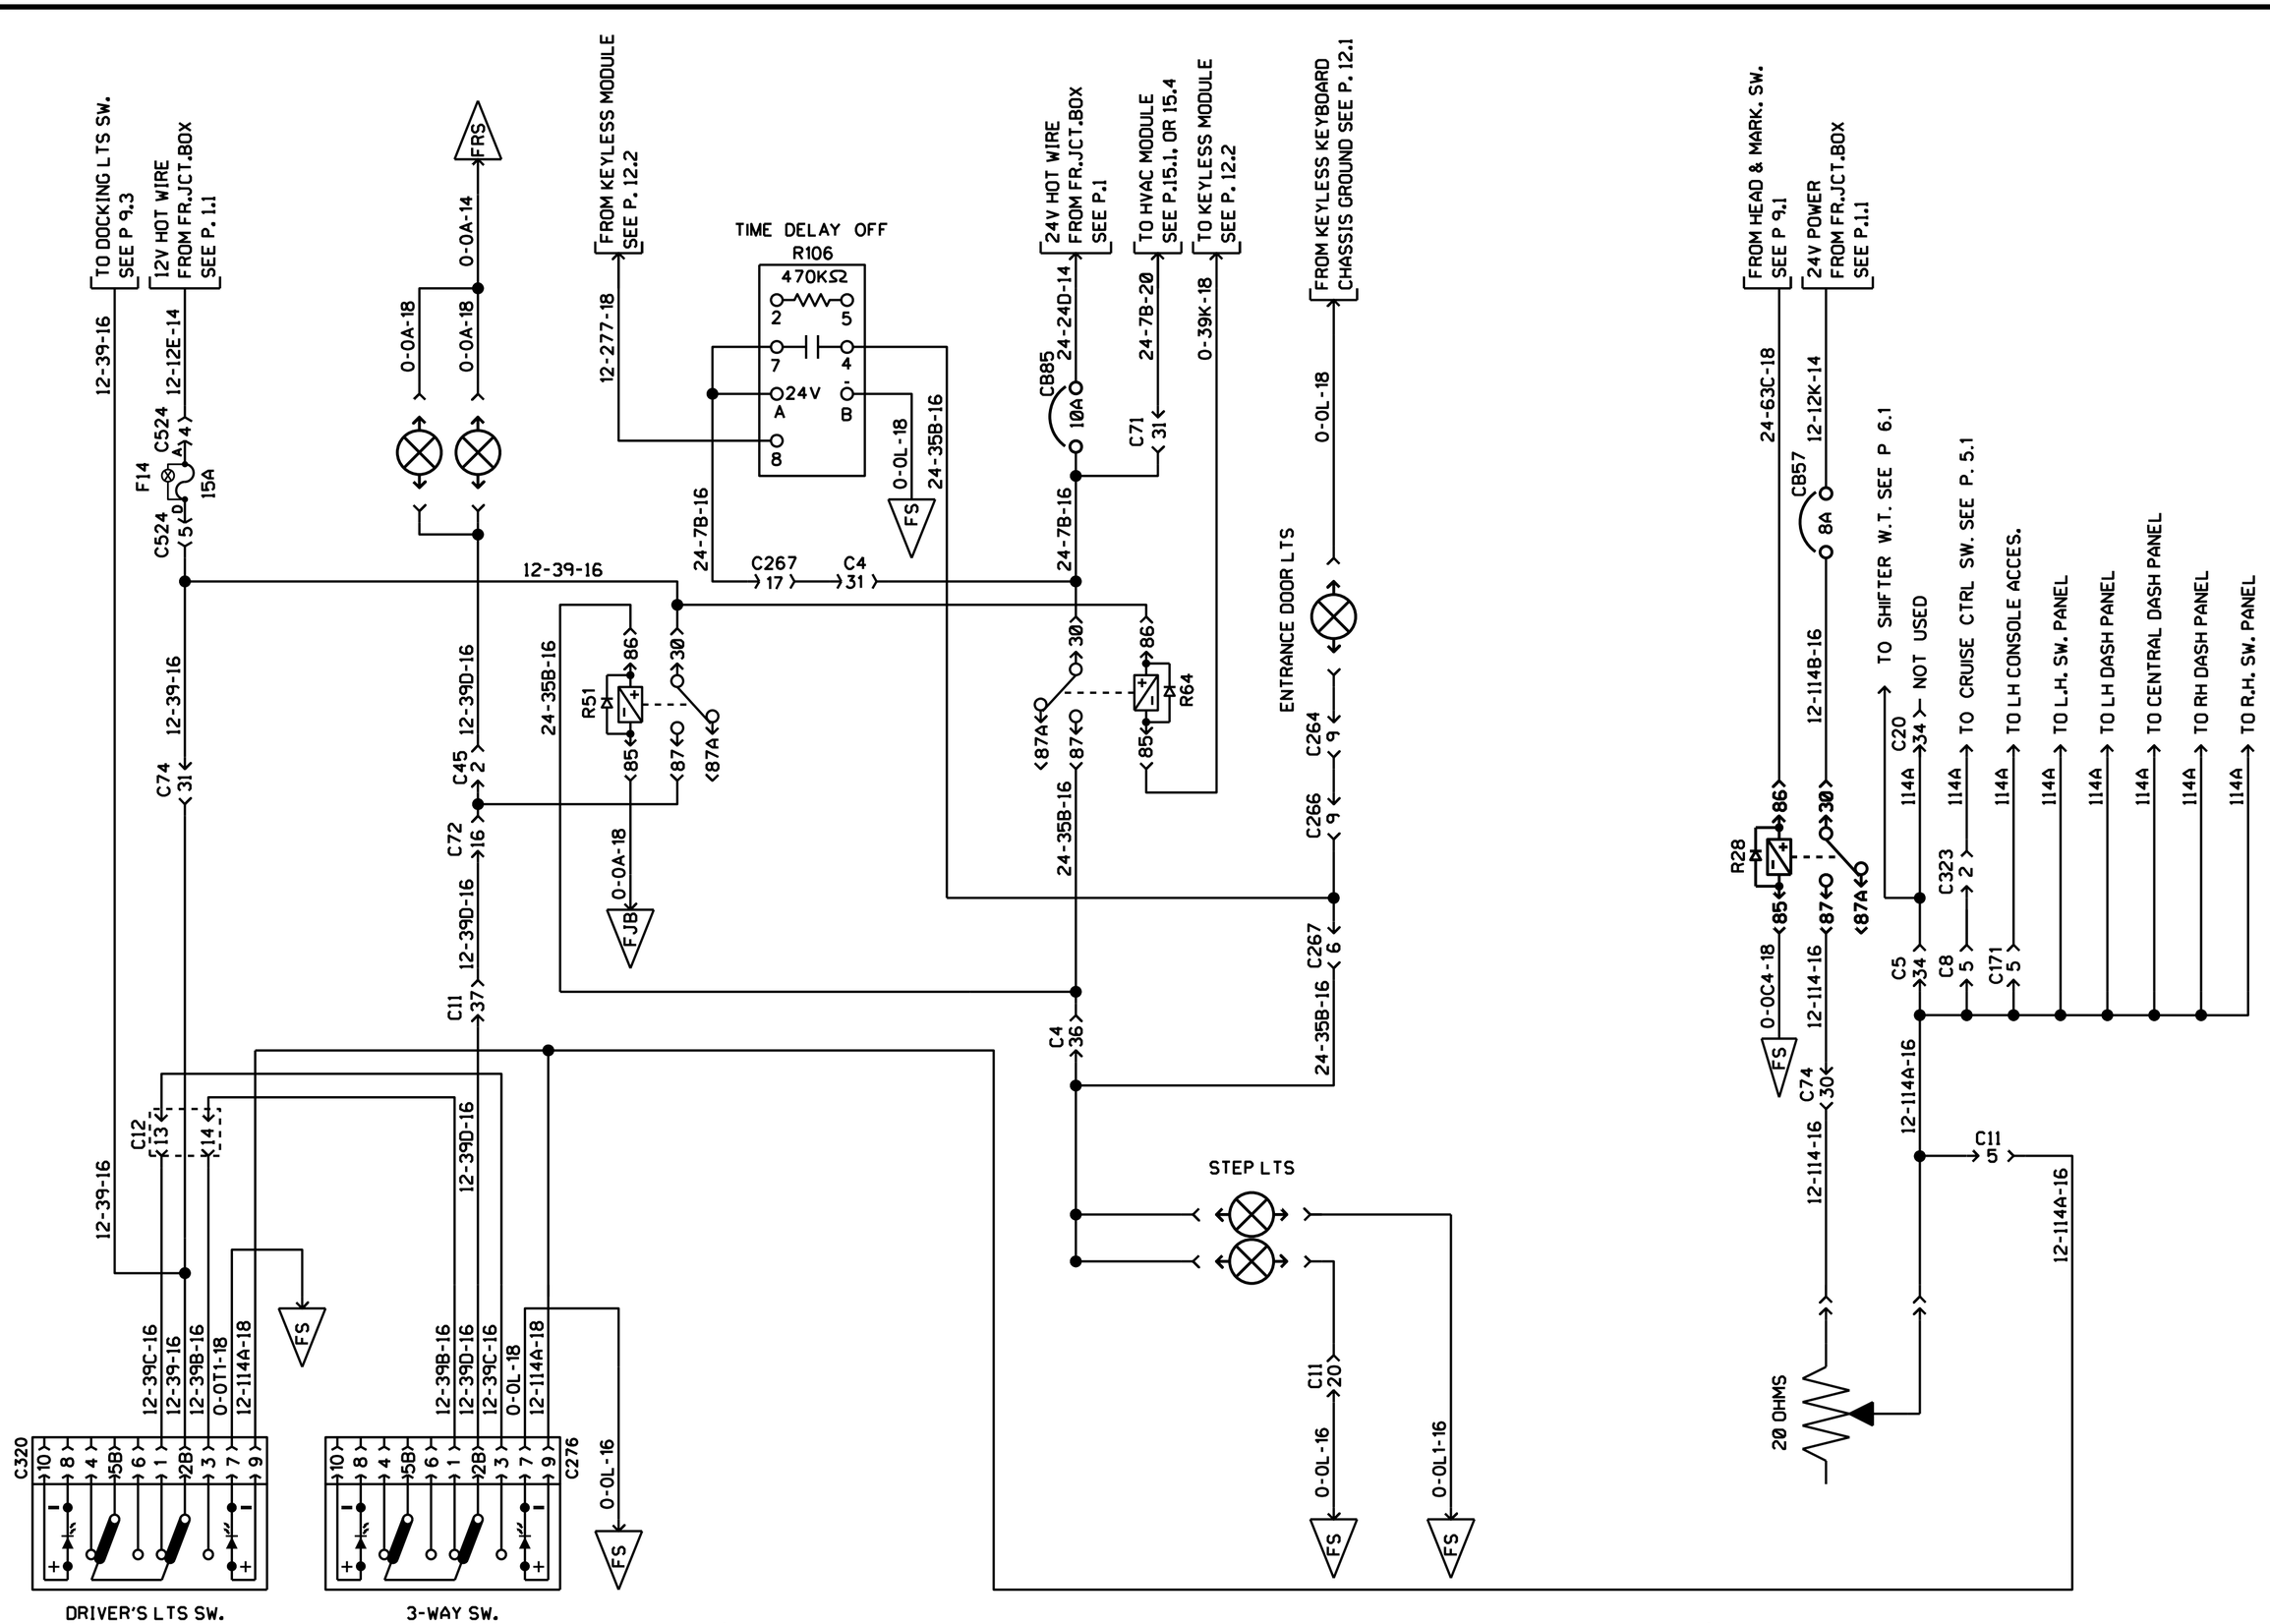
TO DOCKING LTS SW. SEE P 9.3
12V HOT WIRE FROM FR.JCT.BOX SEE P. 1.1
12-39-16
12-12E-14
F14
15A
C524
0-0A-18
0-0A-14
FRS
FROM KEYLESS MODULE SEE P. 12.2
12-277-18
TIME DELAY OFF
R106
470KΩ
24V
0-0L-18
24-35B-16
24V HOT WIRE FROM FR.JCT.BOX SEE P.1
TO HVAC MODULE SEE P.15.1, OR 15.4
TO KEYLESS MODULE SEE P. 12.2
C885
10A
24-24D-14
24-7B-20
24-7B-16
C71
31
0-39K-18
C267
17
C4
31
C74
C45
C72
C11
C12
C266
C264
C4
36
C267
6
24-35B-16
R51
R64
ENTRANCE DOOR LTS
FROM KEYLESS KEYBOARD CHASSIS GROUND SEE P. 12.1
0-0L-18
FJB
STEP LTS
C11
20
0-0L-16
0-0L1-16
FS
DRIVER'S LTS SW.
3-WAY SW.
C320
C276
12-39C-16
12-39B-16
0-0T1-18
12-114A-18
0-0L-18
DRIVER'S LTS
ENTRANCE DOOR SW. & LTS
INTERIOR LIGHTING
FROM HEAD & MARK. SW. SEE P 9.1
24V POWER FROM FR.JCT.BOX SEE P.1.1
24-63C-18
12-12K-14
CB57
8A
R28
12-114B-16
TO SHIFTER W.T. SEE P 6.1
NOT USED
TO CRUISE CTRL SW. SEE P. 5.1
TO L.H CONSOLE ACCES.
TO L.H. SW. PANEL
TO L.H DASH PANEL
TO CENTRAL DASH PANEL
TO RH DASH PANEL
TO R.H. SW. PANEL
C20
C323
C5
C8
C171
0-0C4-18
12-114-16
12-114A-16
20 OHMS
DASH LTS. RHEOSTAT

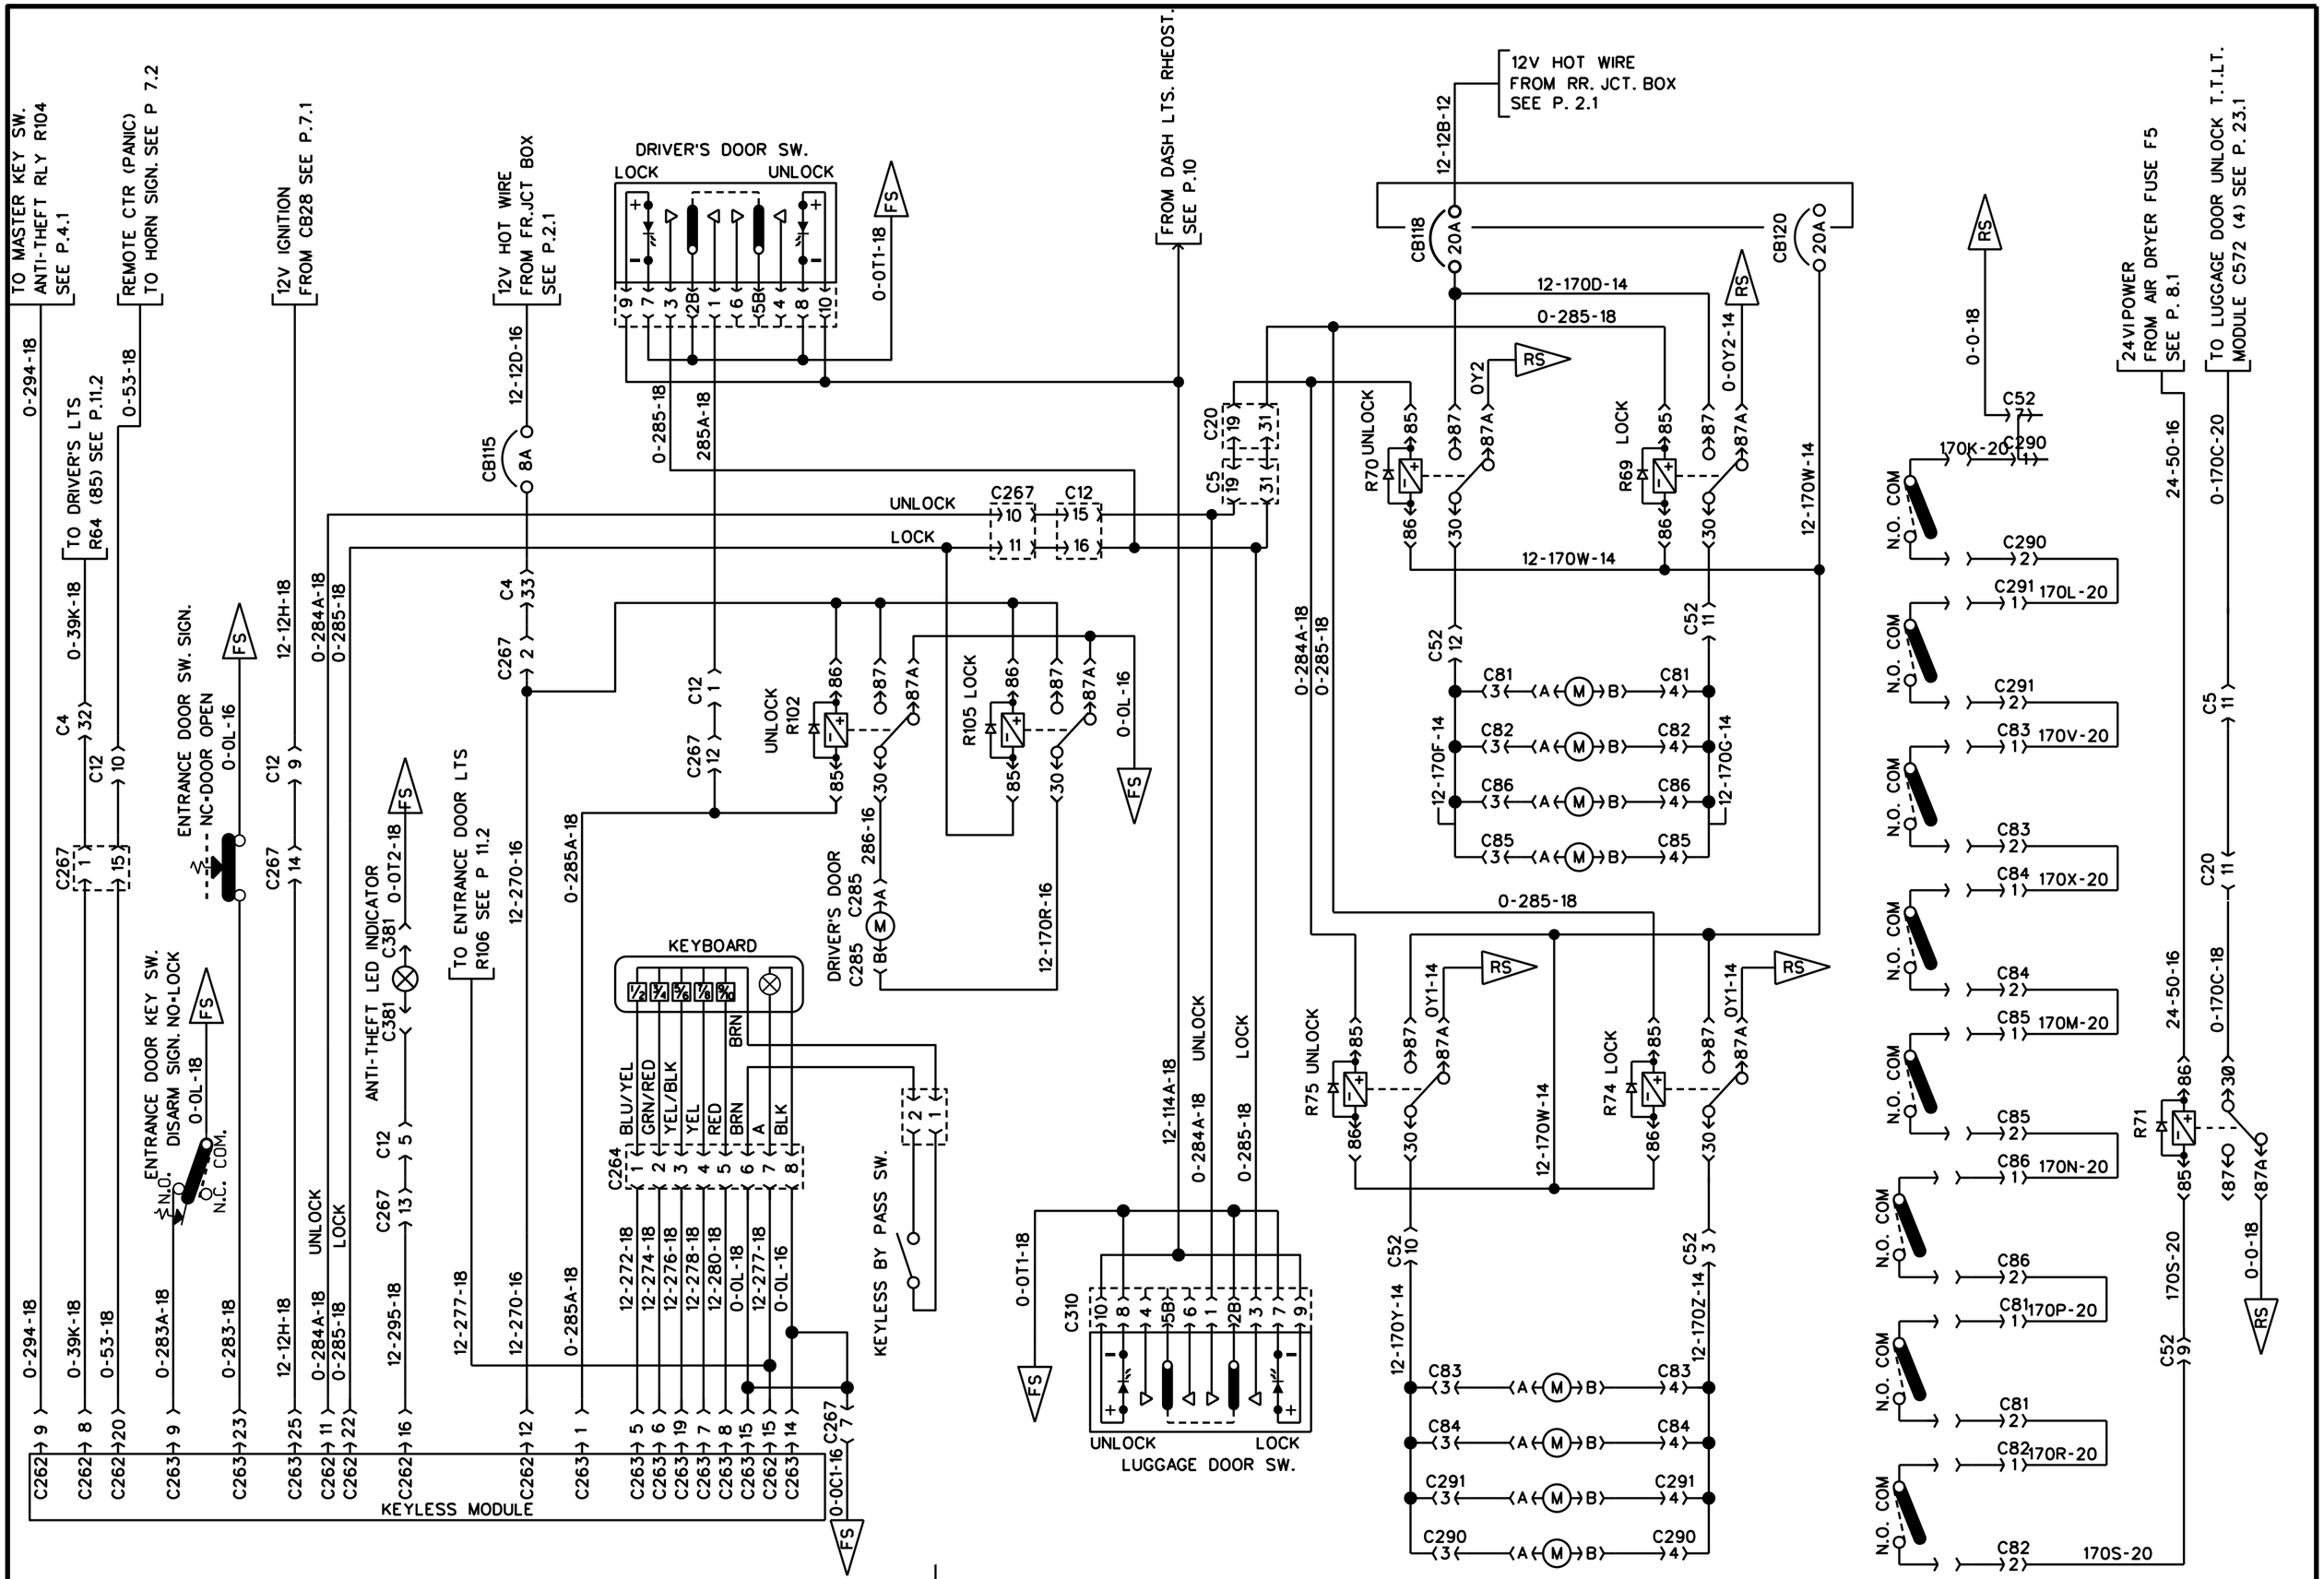
KEYLESS ENTRY SYSTEM
LUGGAGE DOOR LOCK
TO MASTER KEY SW. ANTI-THEFT RLY R104 SEE P.4.1
REMOTE CTR (PANIC) TO HORN SIGN. SEE P 7.2
12V IGNITION FROM CB28 SEE P.7.1
12V HOT WIRE FROM FR.JCT BOX SEE P.2.1
DRIVER'S DOOR SW.
LOCK
UNLOCK
FROM DASH LTS. RHEOST. SEE P.10
12V HOT WIRE FROM RR. JCT. BOX SEE P. 2.1
TO DRIVER'S LTS R64 (85) SEE P.11.2
ENTRANCE DOOR SW. SIGN. NC-DOOR OPEN
TO ENTRANCE DOOR LTS R106 SEE P 11.2
ANTI-THEFT LED INDICATOR
ENTRANCE DOOR KEY SW. DISARM SIGN. NO-LOCK
N.O.
N.C. COM.
KEYBOARD
KEYLESS BY PASS SW.
KEYLESS MODULE
UNLOCK R102
R105 LOCK
DRIVER'S DOOR
UNLOCK
LOCK
LUGGAGE DOOR SW.
R70 UNLOCK
R69 LOCK
R75 UNLOCK
R74 LOCK
R71
24VIPOWER FROM AIR DRYER FUSE F5 SEE P. 8.1
TO LUGGAGE DOOR UNLOCK T.T.L.T. MODULE C572 (4) SEE P. 23.1
N.O. COM
170K-20
170L-20
170V-20
170X-20
170M-20
170N-20
170P-20
170R-20
170S-20

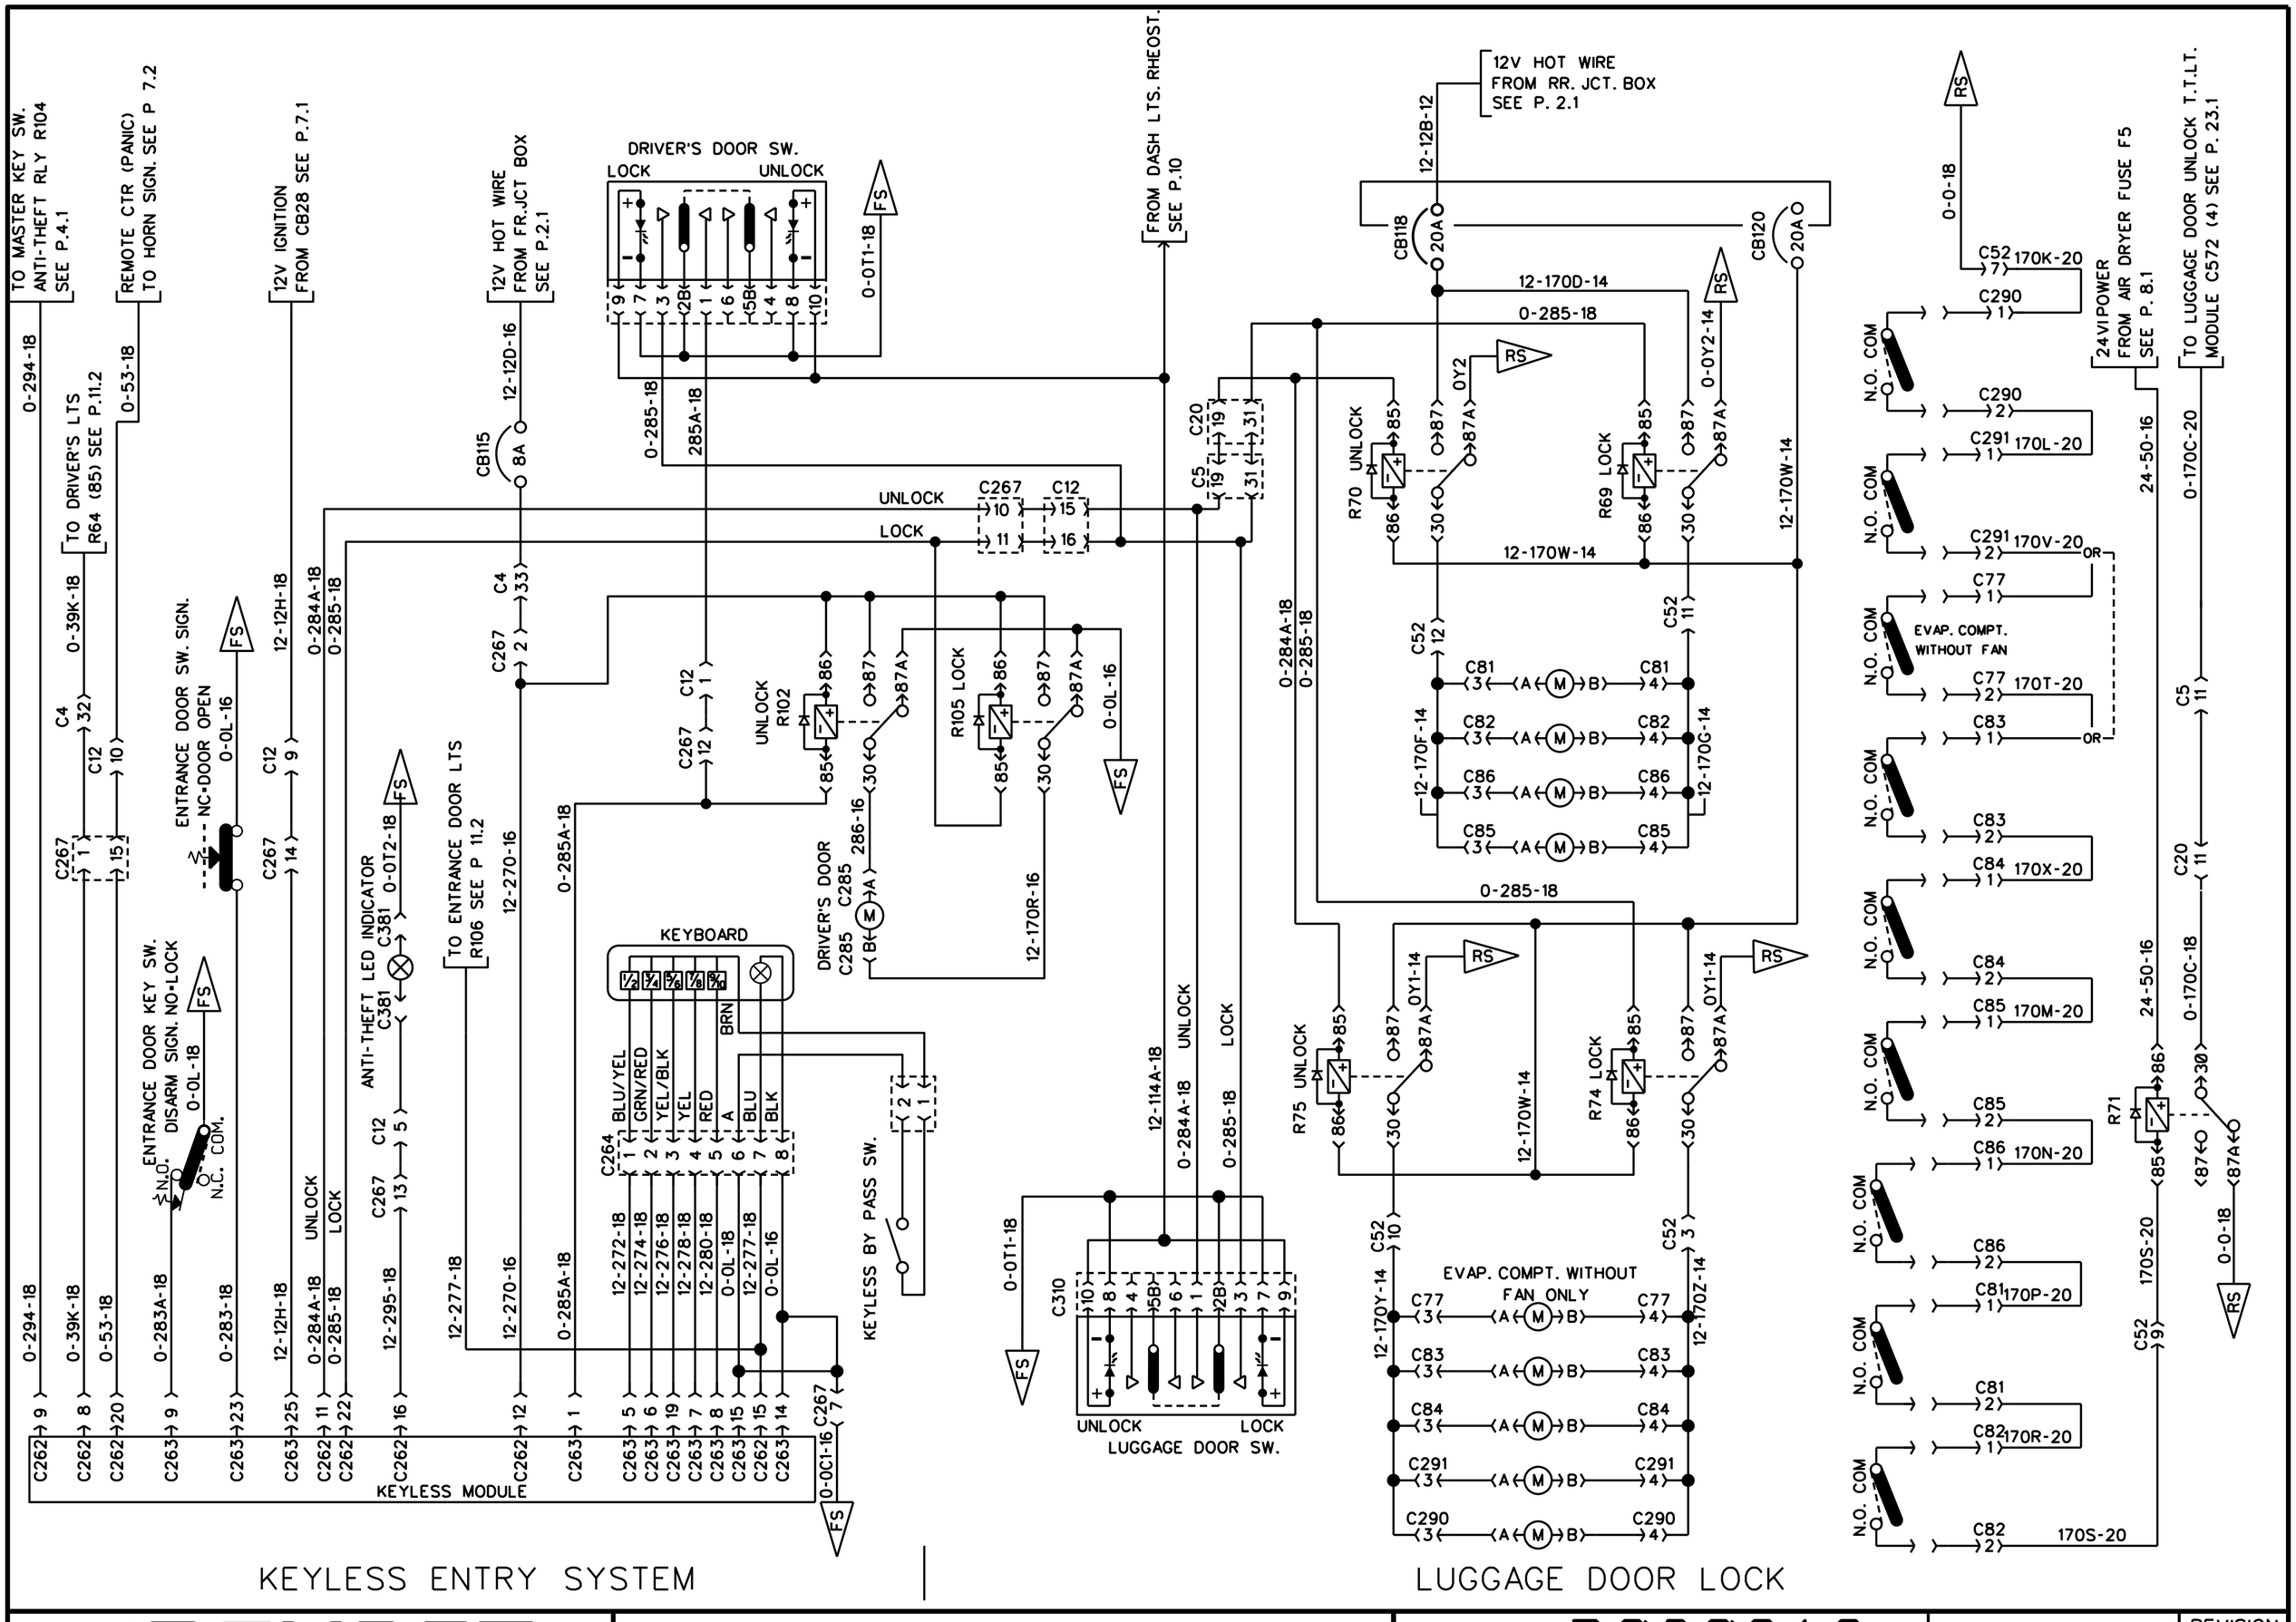
KEYLESS ENTRY SYSTEM
LUGGAGE DOOR LOCK
KEYLESS MODULE
KEYBOARD
DRIVER'S DOOR SW.
LOCK
UNLOCK
LUGGAGE DOOR SW.
KEYLESS BY PASS SW.
ENTRANCE DOOR KEY SW.
DISARM SIGN. NO-LOCK
ENTRANCE DOOR SW. SIGN.
NC-DOOR OPEN
ANTI-THEFT LED INDICATOR
TO ENTRANCE DOOR LTS
R106 SEE P 11.2
TO ENTRANCE DOOR LTS
TO MASTER KEY SW.
ANTI-THEFT RLY R104
SEE P.4.1
TO DRIVER'S LTS
R64 (85) SEE P.11.2
REMOTE CTR (PANIC)
TO HORN SIGN. SEE P 7.2
12V IGNITION
FROM CB28 SEE P.7.1
12V HOT WIRE
FROM FR.JCT BOX
SEE P.2.1
FROM DASH LTS. RHEOST.
SEE P.10
12V HOT WIRE
FROM RR. JCT. BOX
SEE P. 2.1
TO LUGGAGE DOOR UNLOCK T.T.L.T.
MODULE C572 (4) SEE P. 23.1
24VI POWER
FROM AIR DRYER FUSE F5
SEE P. 8.1
EVAP. COMPT.
WITHOUT FAN
EVAP. COMPT. WITHOUT
FAN ONLY
UNLOCK R102
R105 LOCK
R70 UNLOCK
R69 LOCK
R75 UNLOCK
R74 LOCK
R71
CB115
CB118
CB120
UNLOCK
LOCK

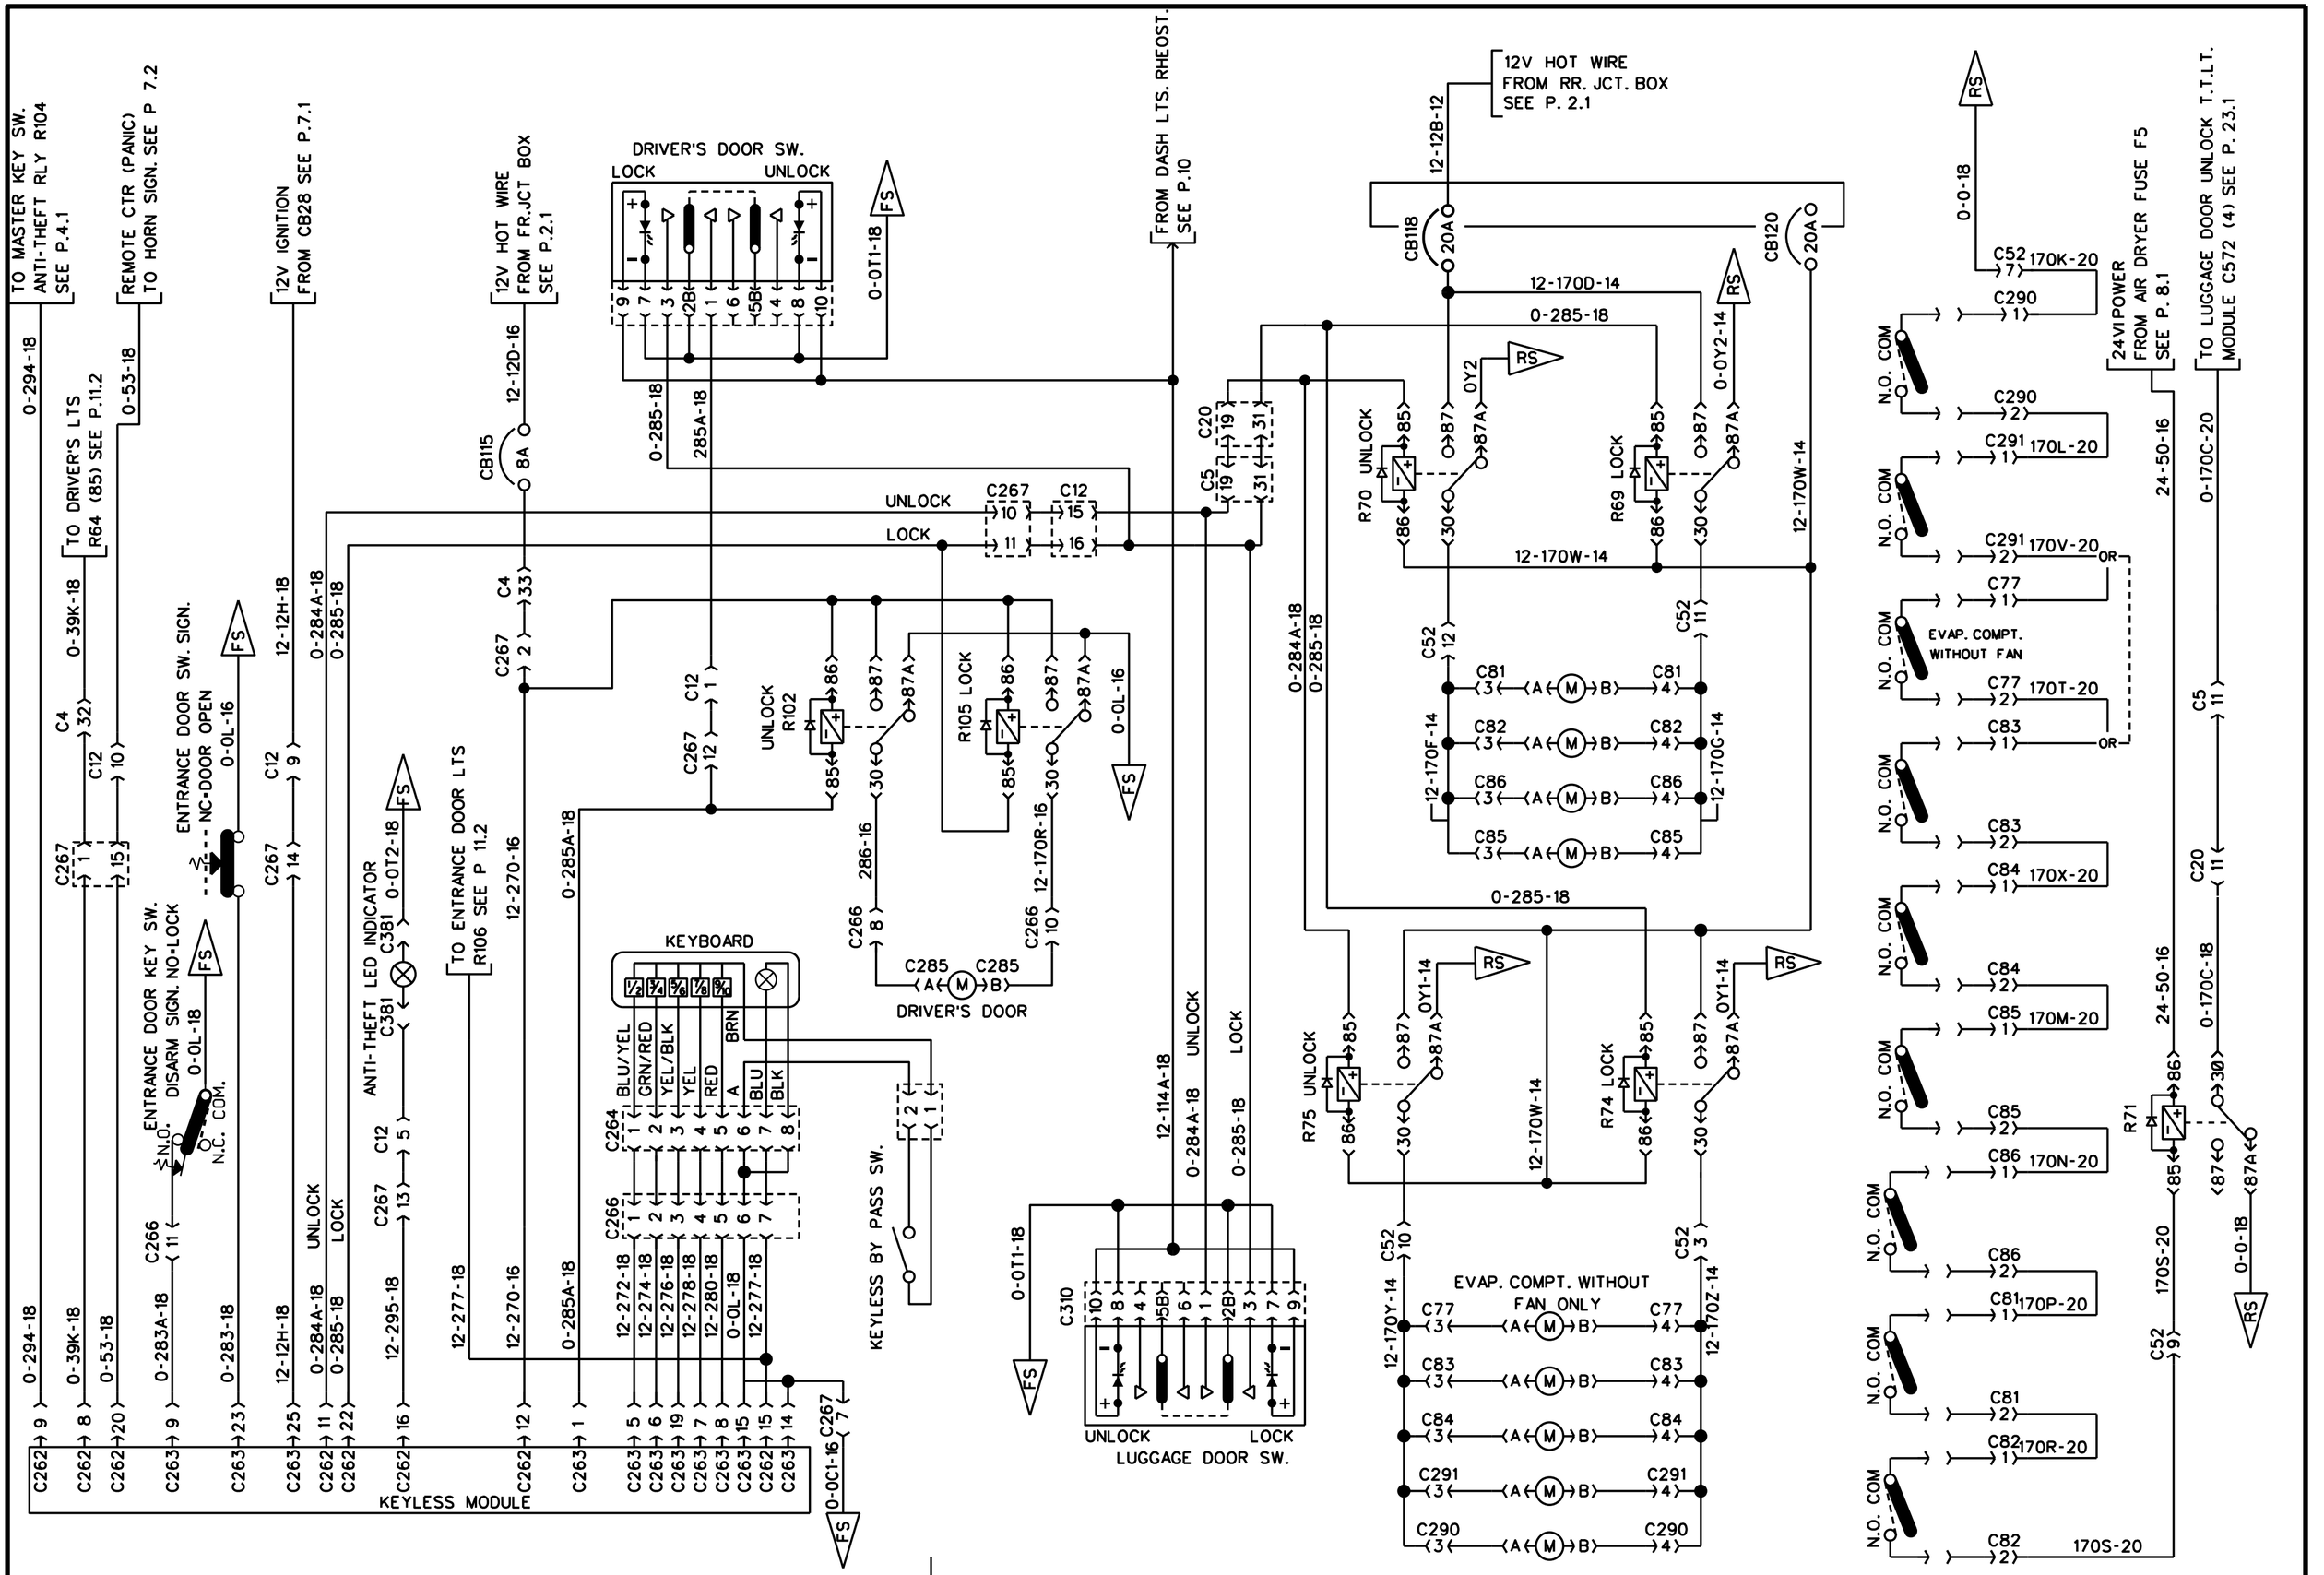
KEYLESS ENTRY SYSTEM
LUGGAGE DOOR LOCK
TO MASTER KEY SW. ANTI-THEFT RLY R104 SEE P.4.1
REMOTE CTR (PANIC) TO HORN SIGN. SEE P 7.2
12V IGNITION FROM CB28 SEE P.7.1
12V HOT WIRE FROM FR.JCT BOX SEE P.2.1
DRIVER'S DOOR SW.
LOCK
UNLOCK
FROM DASH LTS. RHEOST. SEE P.10
12V HOT WIRE FROM RR. JCT. BOX SEE P. 2.1
TO DRIVER'S LTS R64 (85) SEE P.11.2
ENTRANCE DOOR SW. SIGN. NO-DOOR OPEN
ENTRANCE DOOR KEY SW. DISARM SIGN. NO-LOCK
ANTI-THEFT LED INDICATOR
TO ENTRANCE DOOR LTS R106 SEE P 11.2
KEYBOARD
KEYLESS BY PASS SW.
KEYLESS MODULE
DRIVER'S DOOR
LUGGAGE DOOR SW.
UNLOCK R102
R105 LOCK
R70 UNLOCK
R69 LOCK
R75 UNLOCK
R74 LOCK
R71
EVAP. COMPT. WITHOUT FAN ONLY
EVAP. COMPT. WITHOUT FAN
EVAP. COMPT. WITH FAN
24VIPOWER FROM AIR DRYER FUSE F5 SEE P. 8.1
TO LUGGAGE DOOR UNLOCK T.T.L.T. MODULE C572 (4) SEE P. 23.1

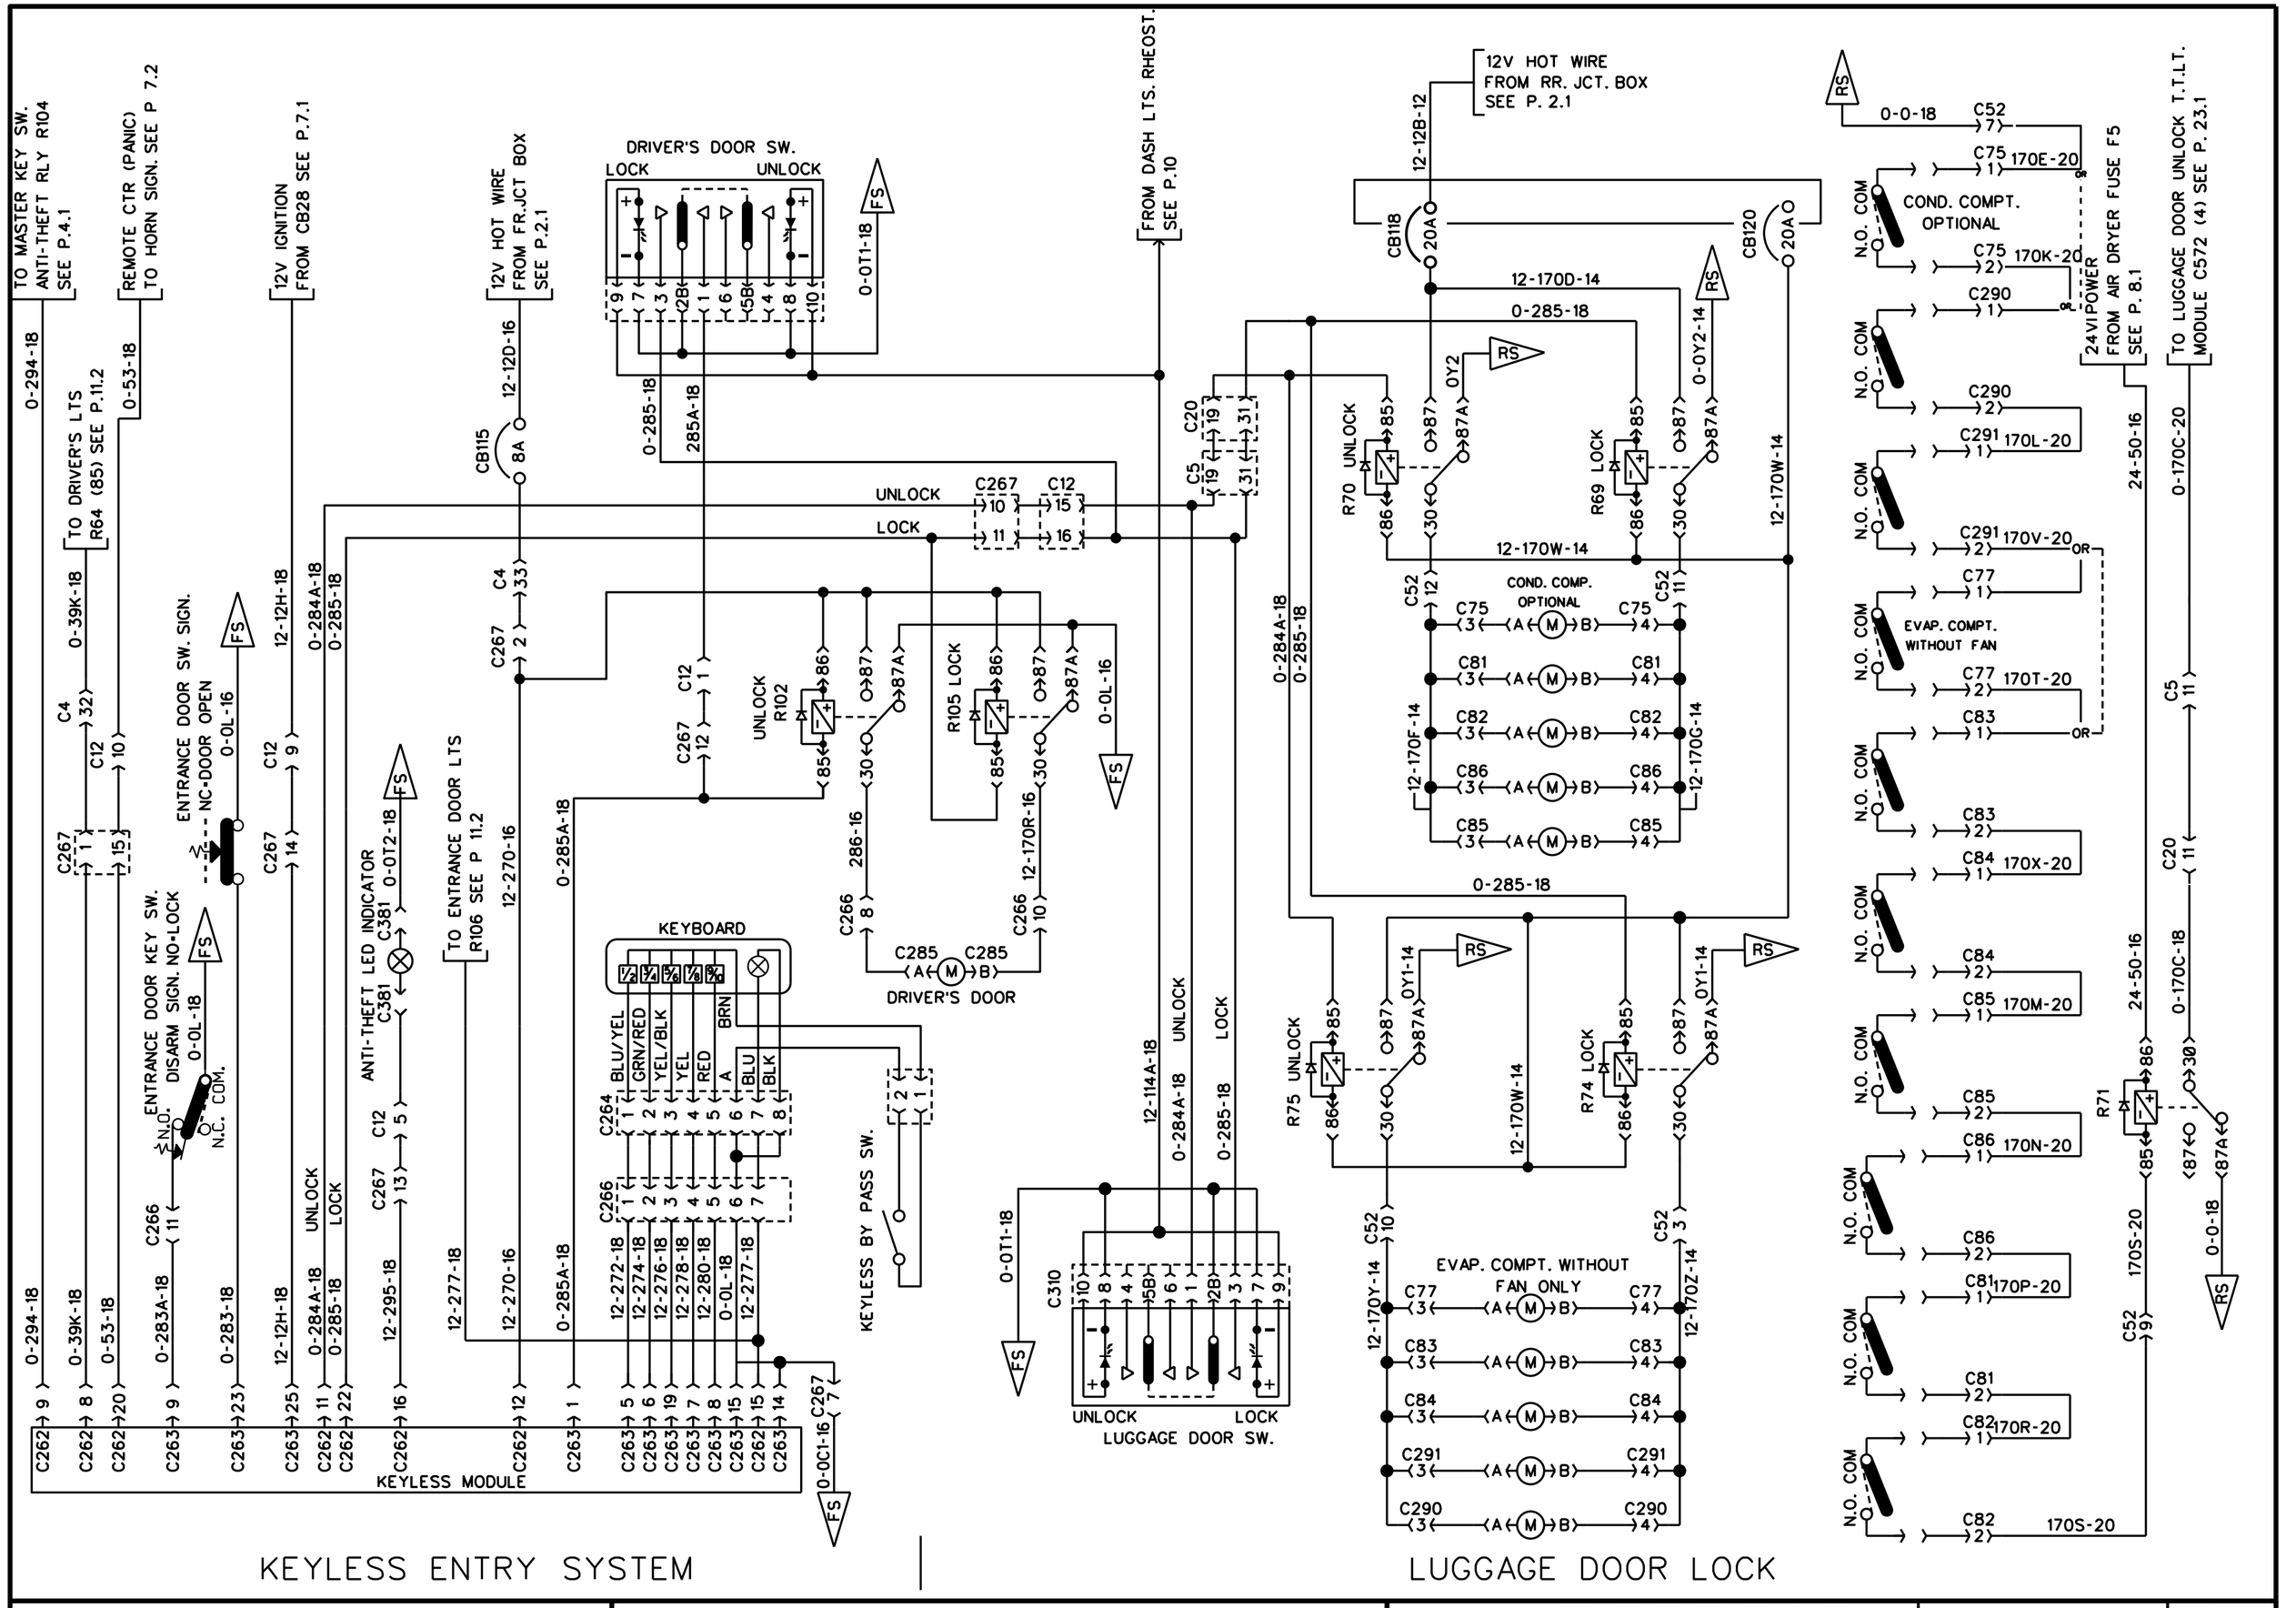
KEYLESS ENTRY SYSTEM
LUGGAGE DOOR LOCK
TO MASTER KEY SW. ANTI-THEFT RLY R104 SEE P.4.1
REMOTE CTR (PANIC) TO HORN SIGN. SEE P 7.2
12V IGNITION FROM CB28 SEE P.7.1
12V HOT WIRE FROM FR.JCT BOX SEE P.2.1
DRIVER'S DOOR SW.
LOCK
UNLOCK
FROM DASH LTS. RHEOST. SEE P.10
12V HOT WIRE FROM RR. JCT. BOX SEE P. 2.1
TO DRIVER'S LTS R64 (85) SEE P.11.2
ENTRANCE DOOR SW. SIGN.
NC-DOOR OPEN
ENTRANCE DOOR KEY SW.
DISARM SIGN. NO-LOCK
N.O.
N.C. COM.
ANTI-THEFT LED INDICATOR
TO ENTRANCE DOOR LTS
SEE P 11.2
KEYBOARD
KEYLESS BY PASS SW.
KEYLESS MODULE
UNLOCK R102
R105 LOCK
R70 UNLOCK
R69 LOCK
R75 UNLOCK
R74 LOCK
R71
COND. COMPT. OPTIONAL
EVAP. COMPT. WITHOUT FAN ONLY
EVAP. COMPT. WITHOUT FAN
DRIVER'S DOOR
LUGGAGE DOOR SW.
UNLOCK
LOCK
24VI POWER FROM AIR DRYER FUSE F5 SEE P. 8.1
TO LUGGAGE DOOR UNLOCK T.T.L.T. MODULE C572 (4) SEE P. 23.1
N.O. COM
CB115
CB118
CB120
FS
RS

KEYLESS ENTRY SYSTEM

LUGGAGE DOOR LOCK

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 12.1	REVISION 09

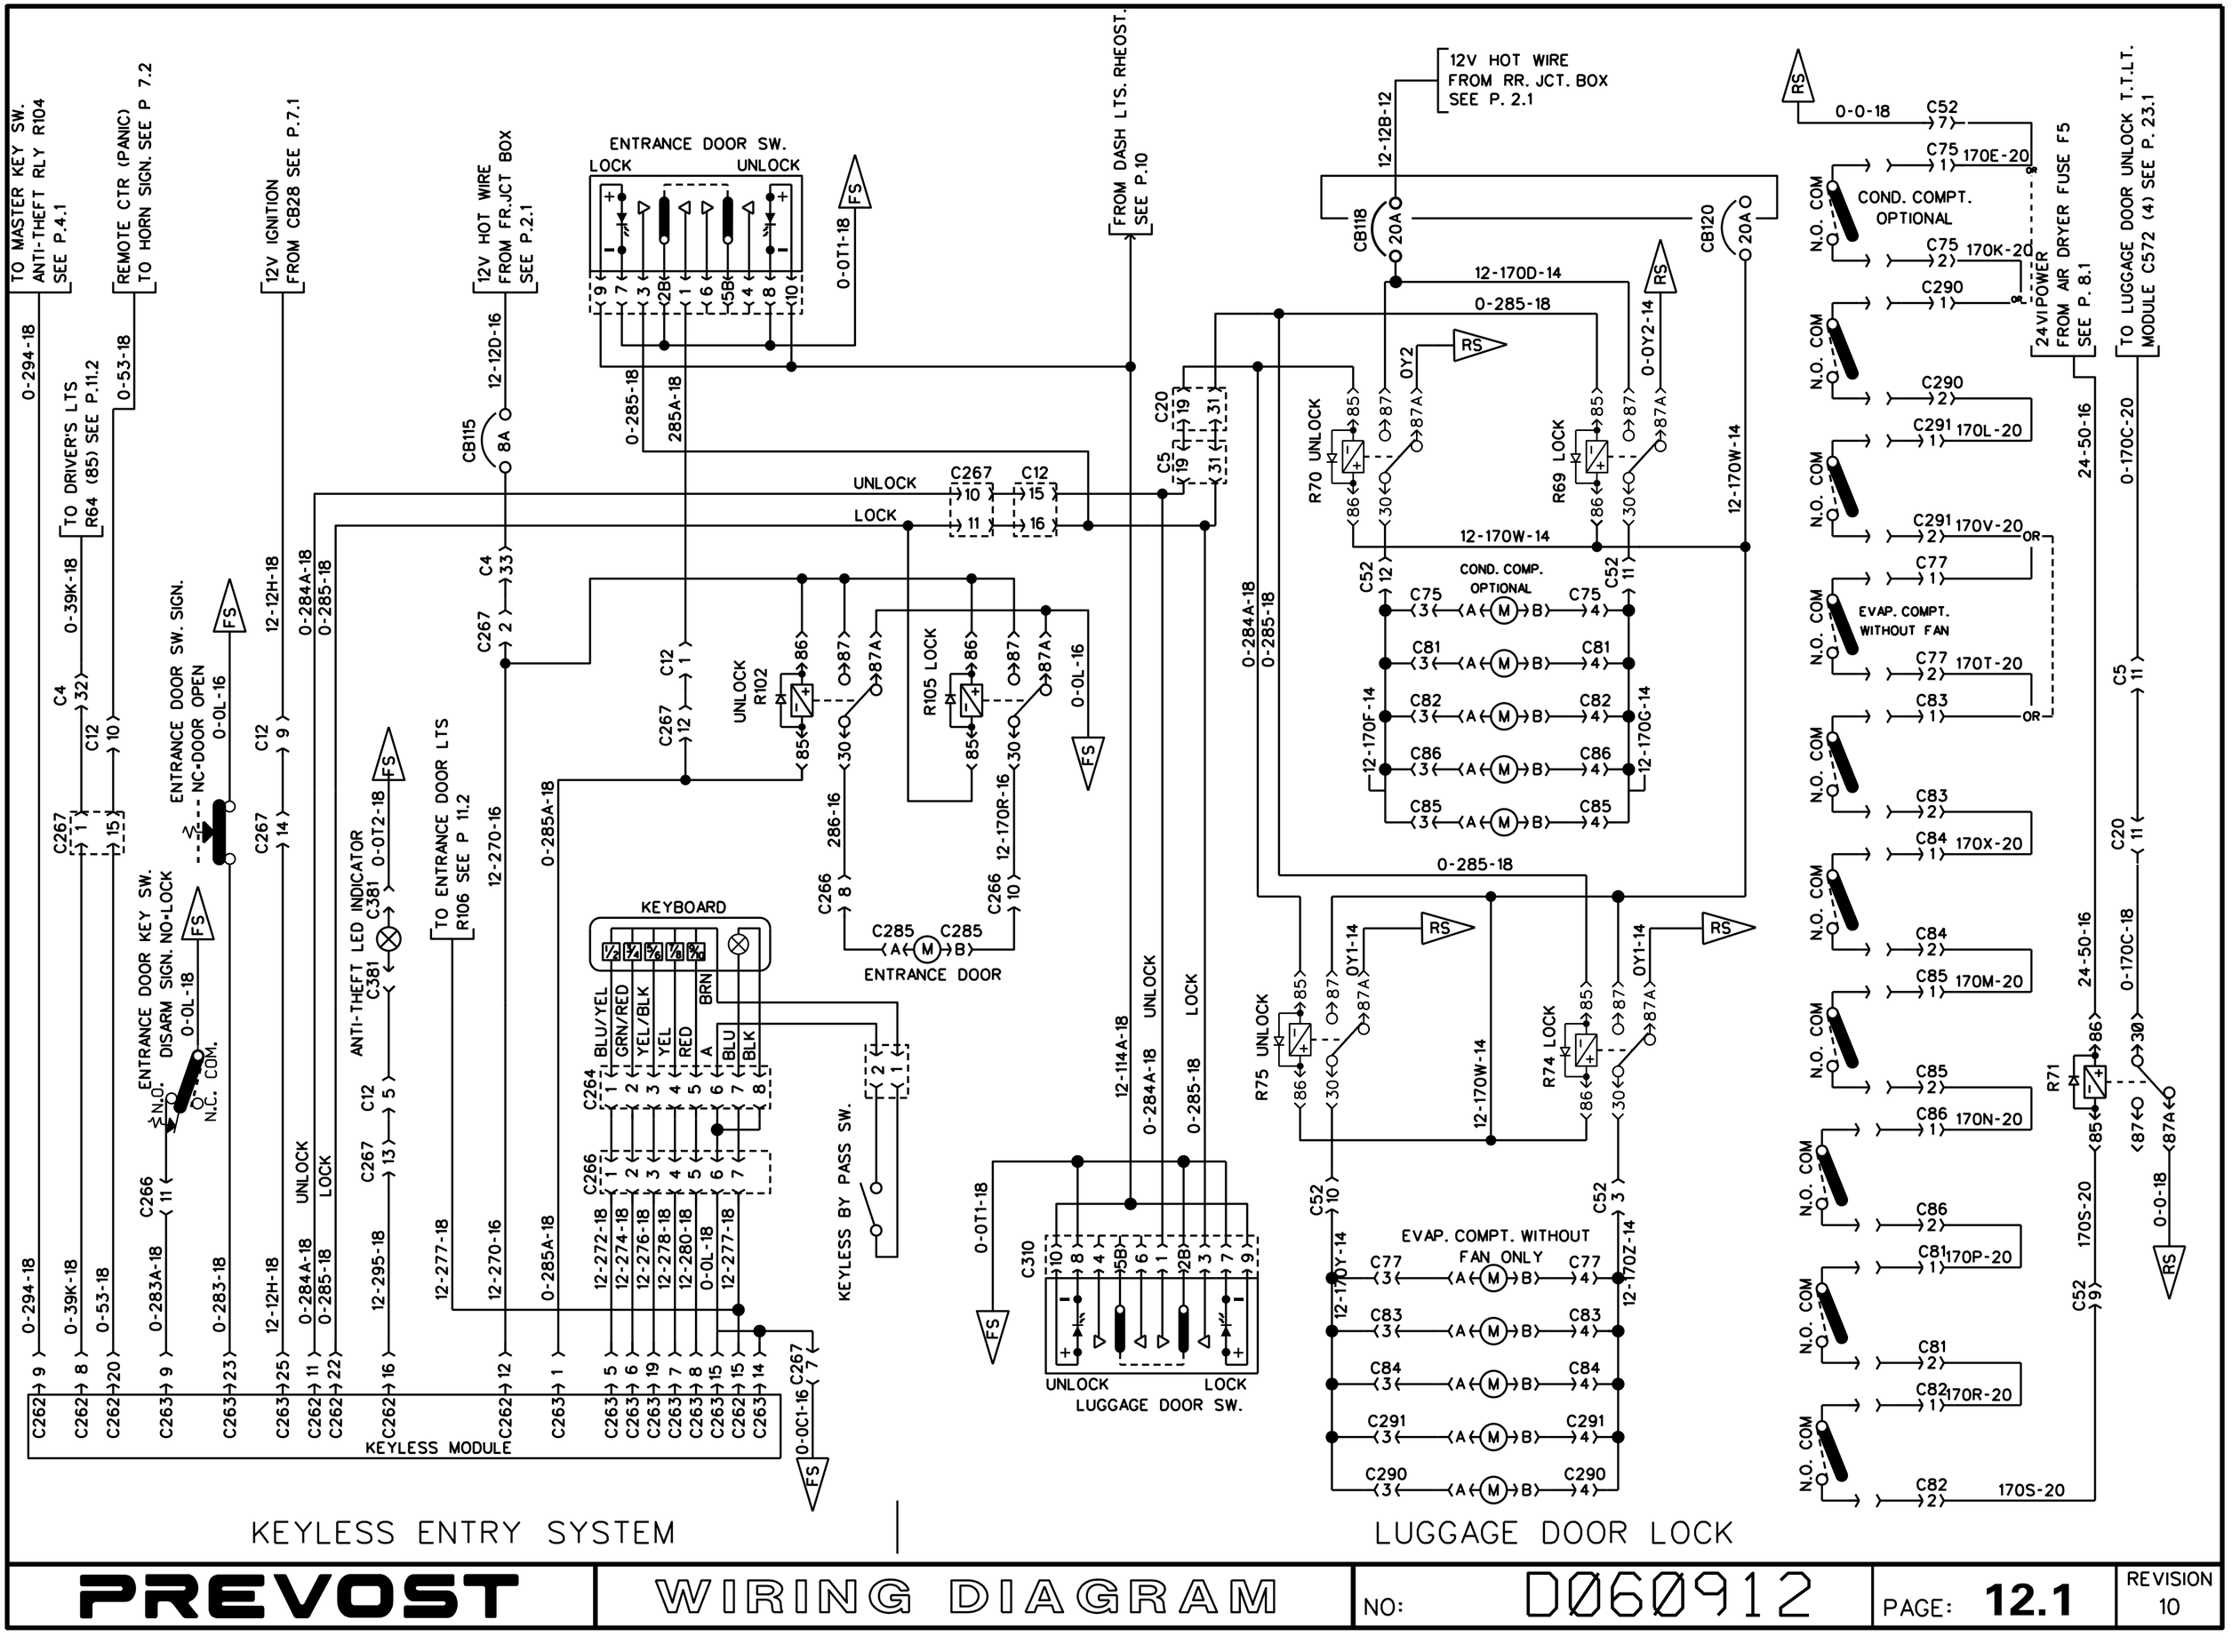

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 12.1	REVISION 10

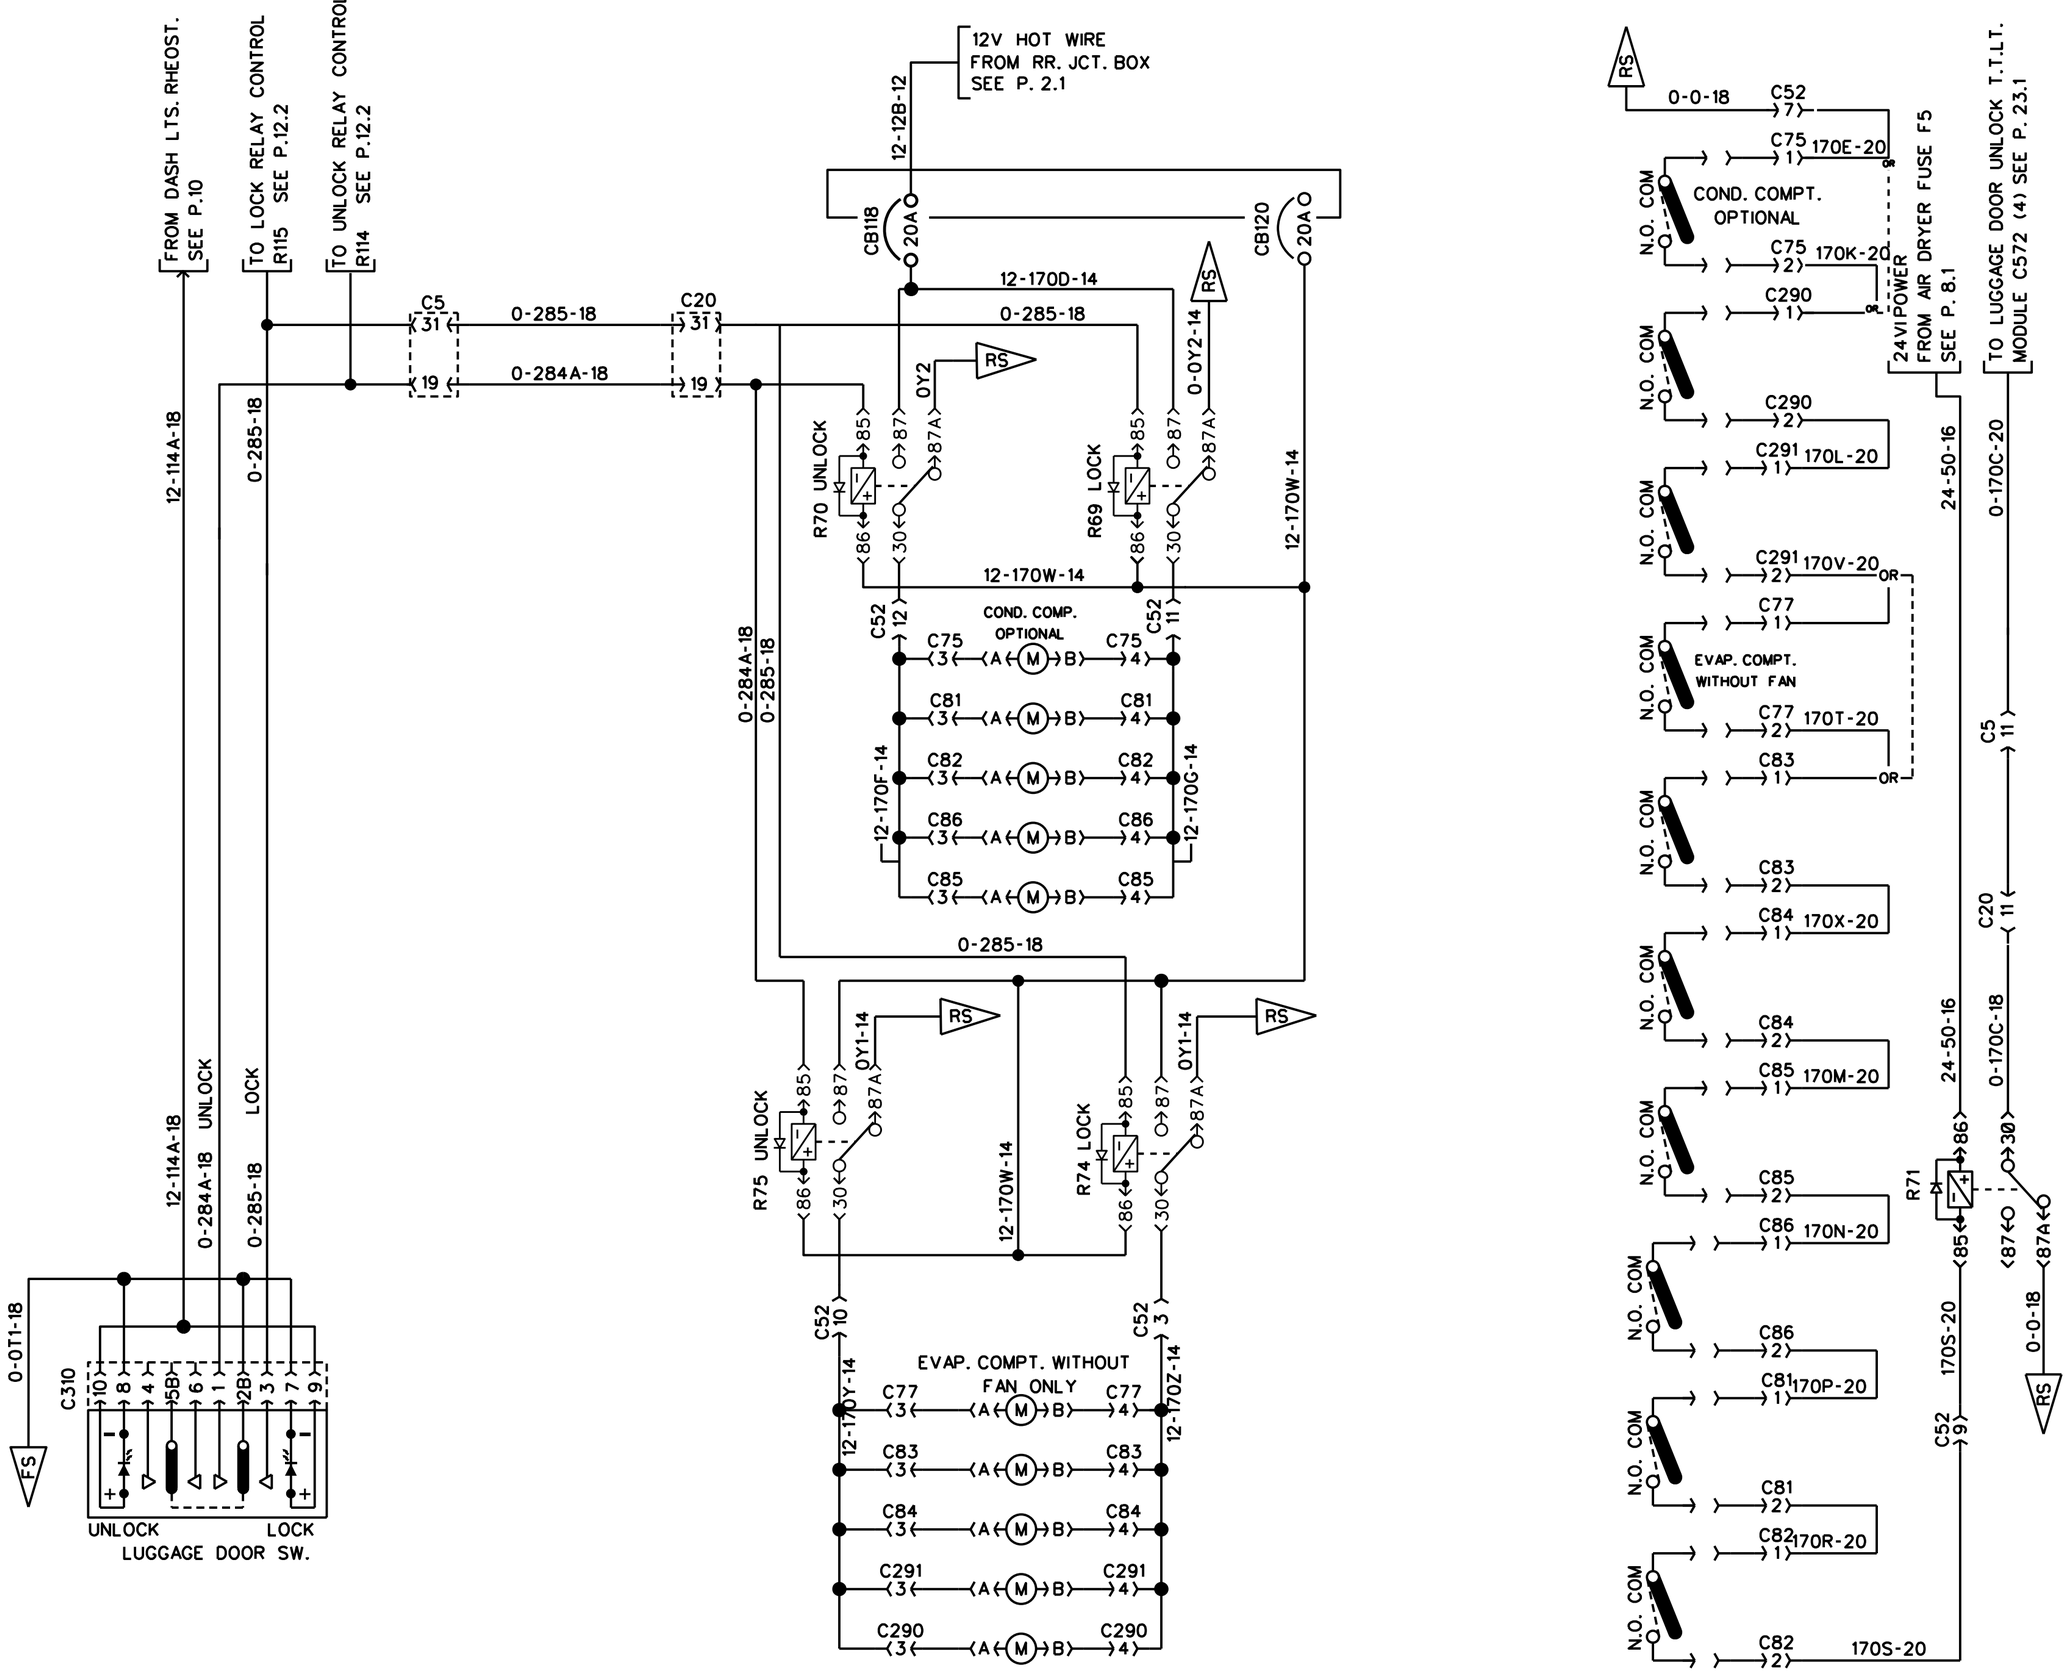
FROM DASH LTS. RHEOST. SEE P.10
TO LOCK RELAY CONTROL R115 SEE P.12.2
TO UNLOCK RELAY CONTROL R114 SEE P.12.2
12V HOT WIRE FROM RR. JCT. BOX SEE P. 2.1
12-12B-12
CB118 20A
CB120 20A
12-114A-18
0-285-18
0-284A-18
12-170D-14
0-0Y2-14
0Y2
R70 UNLOCK
R69 LOCK
12-170W-14
COND. COMPT. OPTIONAL
0-284A-18
0-285-18
12-170F-14
12-170G-14
0-285-18
0Y1-14
R75 UNLOCK
R74 LOCK
EVAP. COMPT. WITHOUT FAN ONLY
12-170Y-14
12-170Z-14
0-0T1-18
C310
UNLOCK
LOCK
LUGGAGE DOOR SW.
0-0-18
24VIPOWER FROM AIR DRYER FUSE F5 SEE P. 8.1
24-50-16
TO LUGGAGE DOOR UNLOCK T.T.L.T. MODULE C572 (4) SEE P. 23.1
0-170C-20
0-170C-18
170S-20
N.O. COM
EVAP. COMPT. WITHOUT FAN
170E-20
170K-20
170L-20
170V-20
170T-20
170X-20
170M-20
170N-20
170P-20
170R-20
LUGGAGE DOOR LOCK

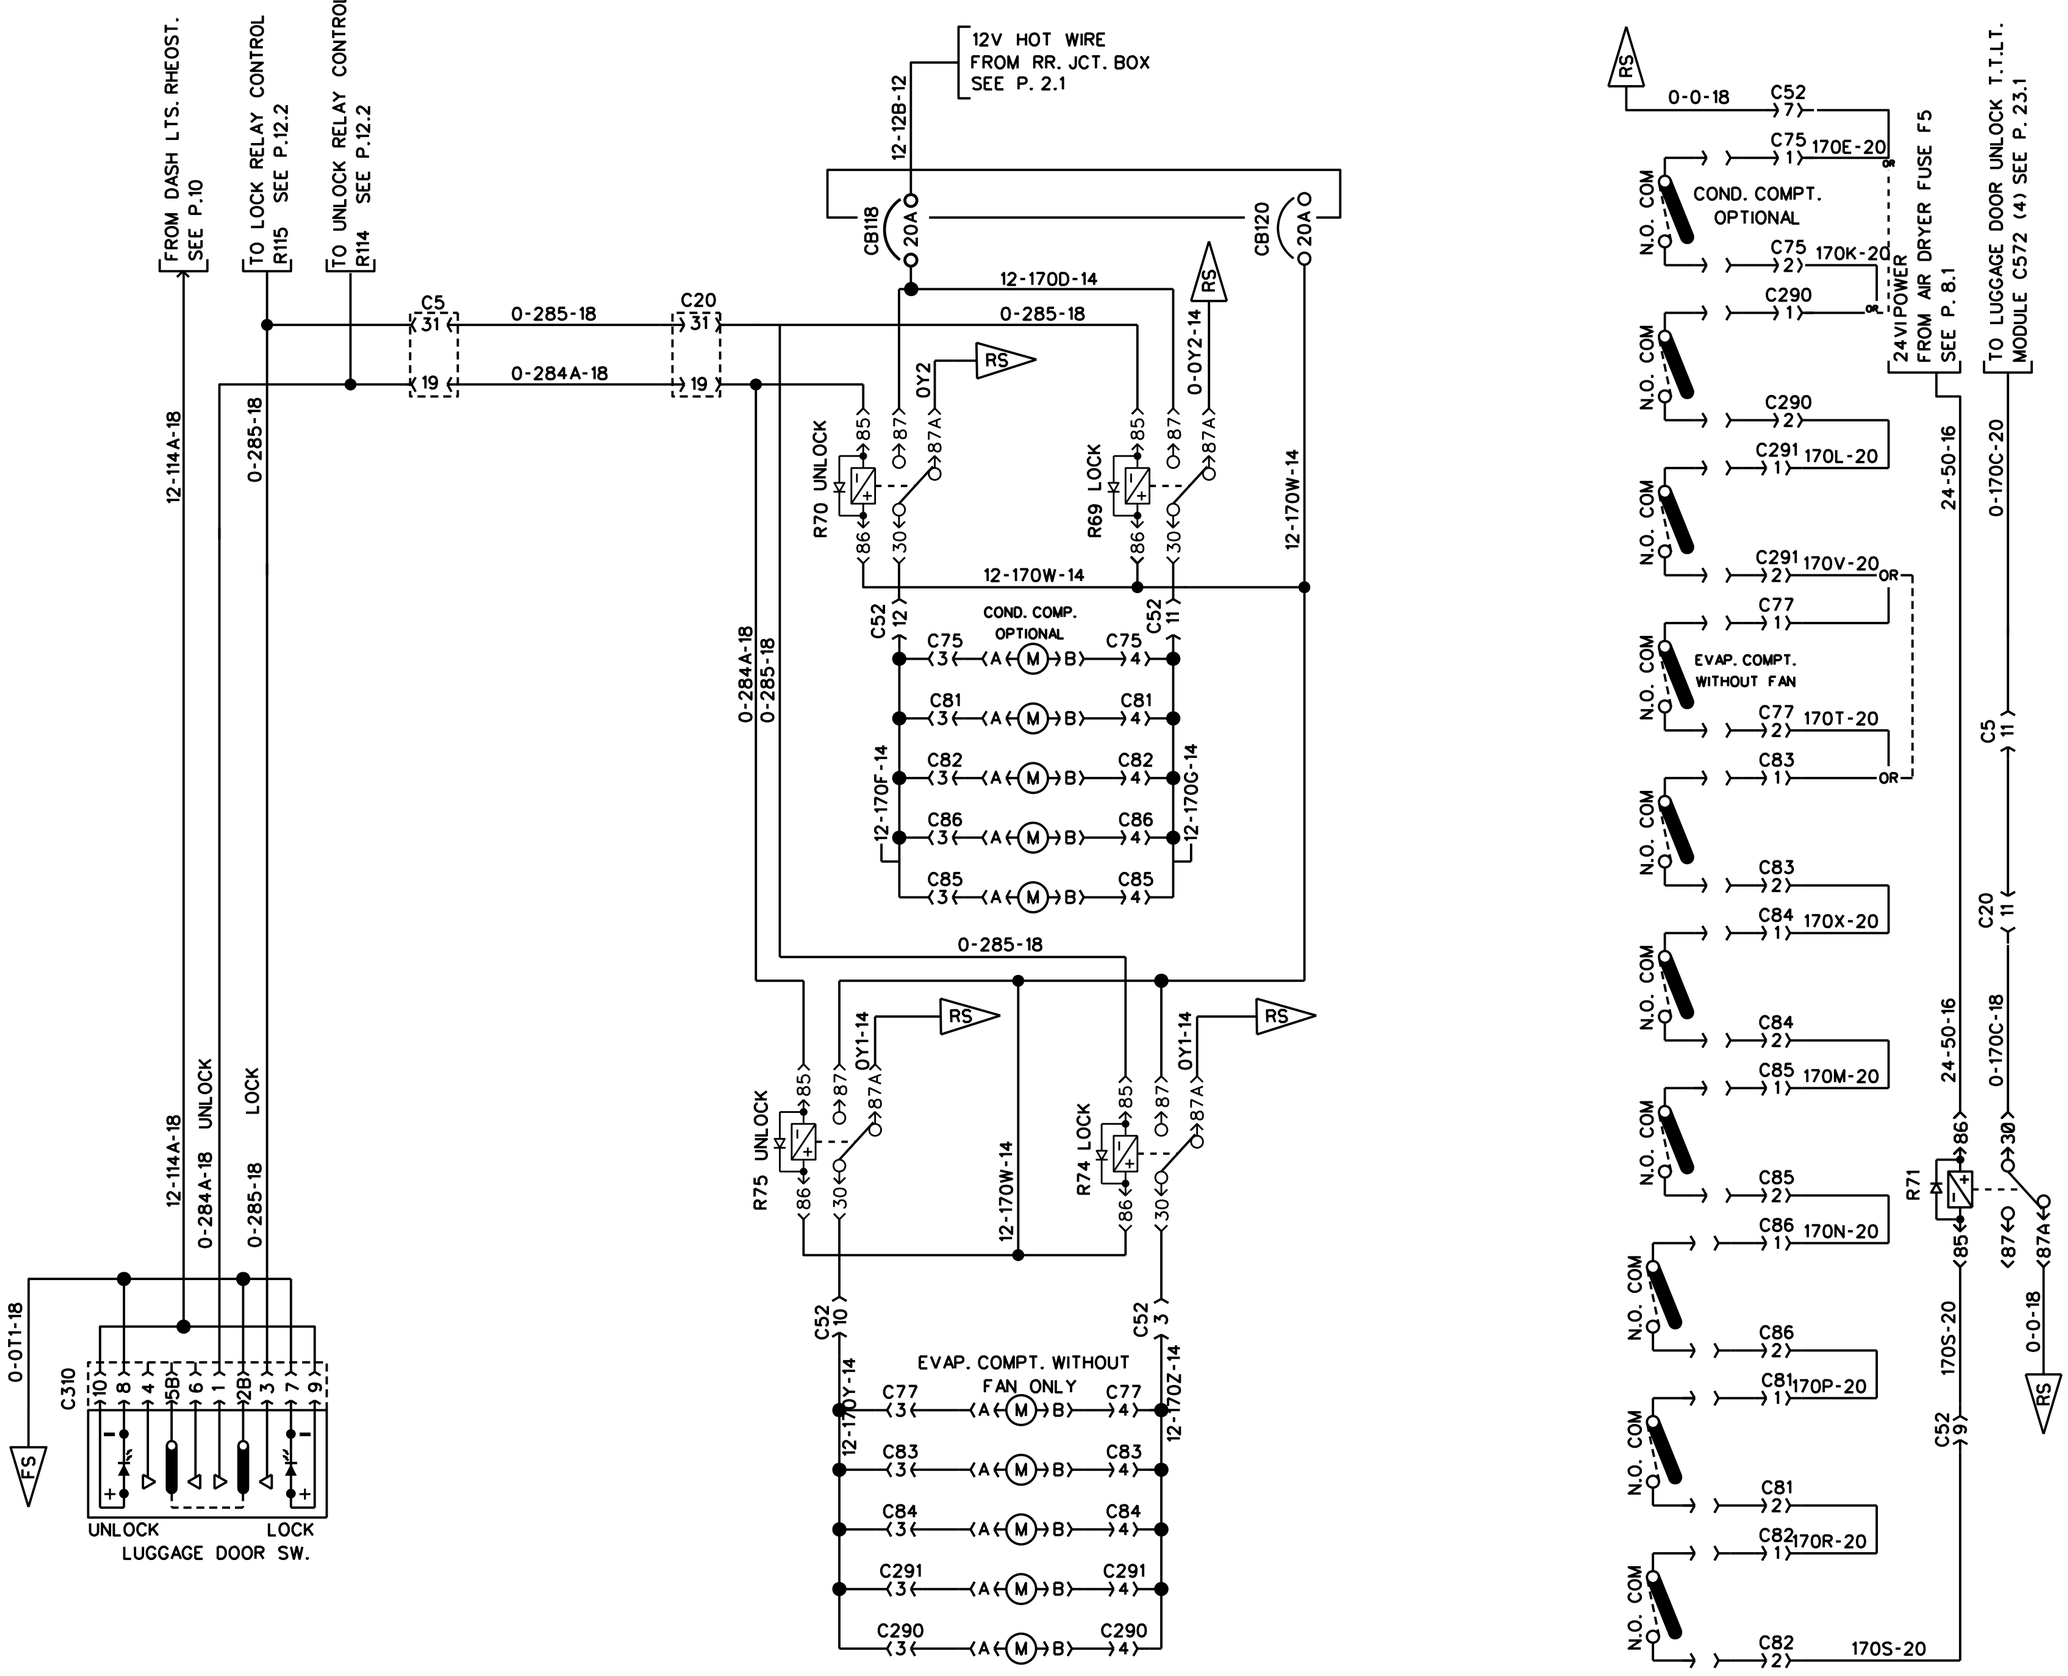
FROM DASH LTS. RHEOST. SEE P.10
TO LOCK RELAY CONTROL R115 SEE P.12.2
TO UNLOCK RELAY CONTROL R114 SEE P.12.2
12V HOT WIRE FROM RR. JCT. BOX SEE P. 2.1
12-12B-12
CB118 20A
CB120 20A
12-114A-18
0-285-18
0-284A-18
12-170D-14
0-0Y2-14
0Y2
R70 UNLOCK
R69 LOCK
12-170W-14
COND. COMPT. OPTIONAL
0-284A-18
0-285-18
12-170F-14
12-170G-14
0-285-18
0Y1-14
R75 UNLOCK
R74 LOCK
EVAP. COMPT. WITHOUT FAN ONLY
12-170Y-14
12-170Z-14
0-0T1-18
C310
UNLOCK
LOCK
LUGGAGE DOOR SW.
0-0-18
24VIPOWER FROM AIR DRYER FUSE F5 SEE P. 8.1
24-50-16
TO LUGGAGE DOOR UNLOCK T.T.L.T. MODULE C572 (4) SEE P. 23.1
0-170C-20
0-170C-18
170S-20
N.O. COM
EVAP. COMPT. WITHOUT FAN
170E-20
170K-20
170L-20
170V-20
170T-20
170X-20
170M-20
170N-20
170P-20
170R-20
LUGGAGE DOOR LOCK

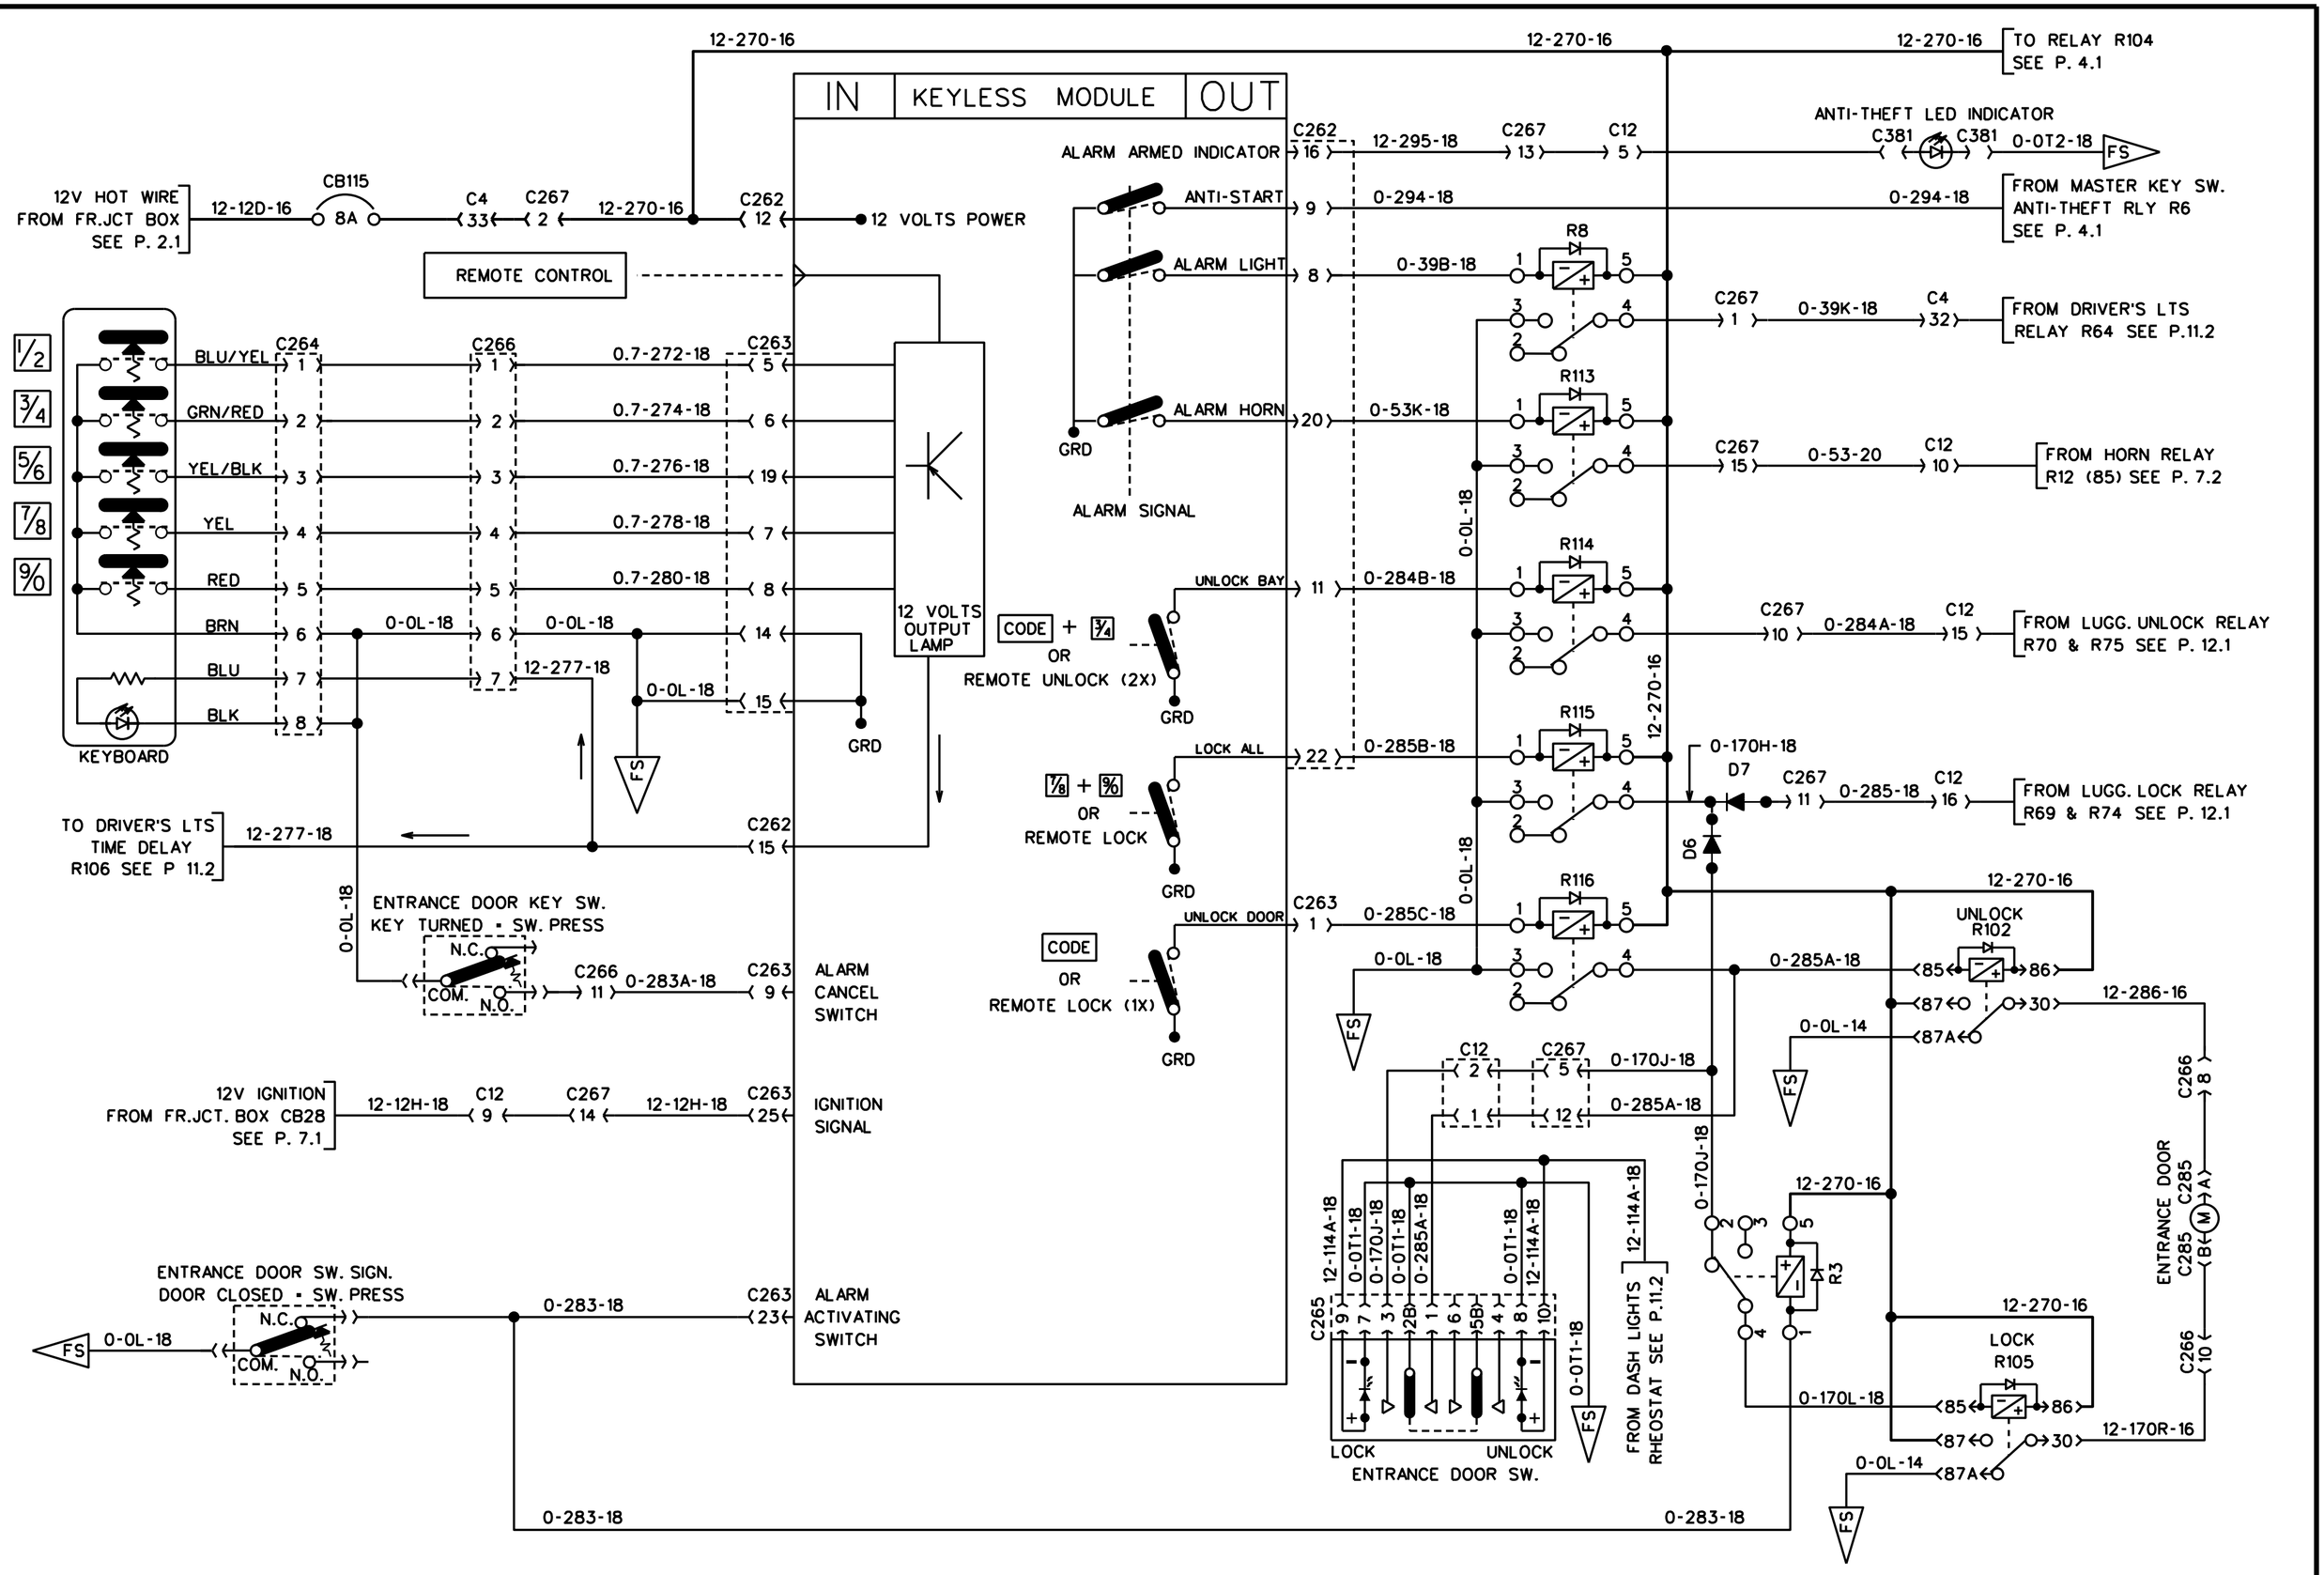

KEYLESS ENTRY SYSTEM

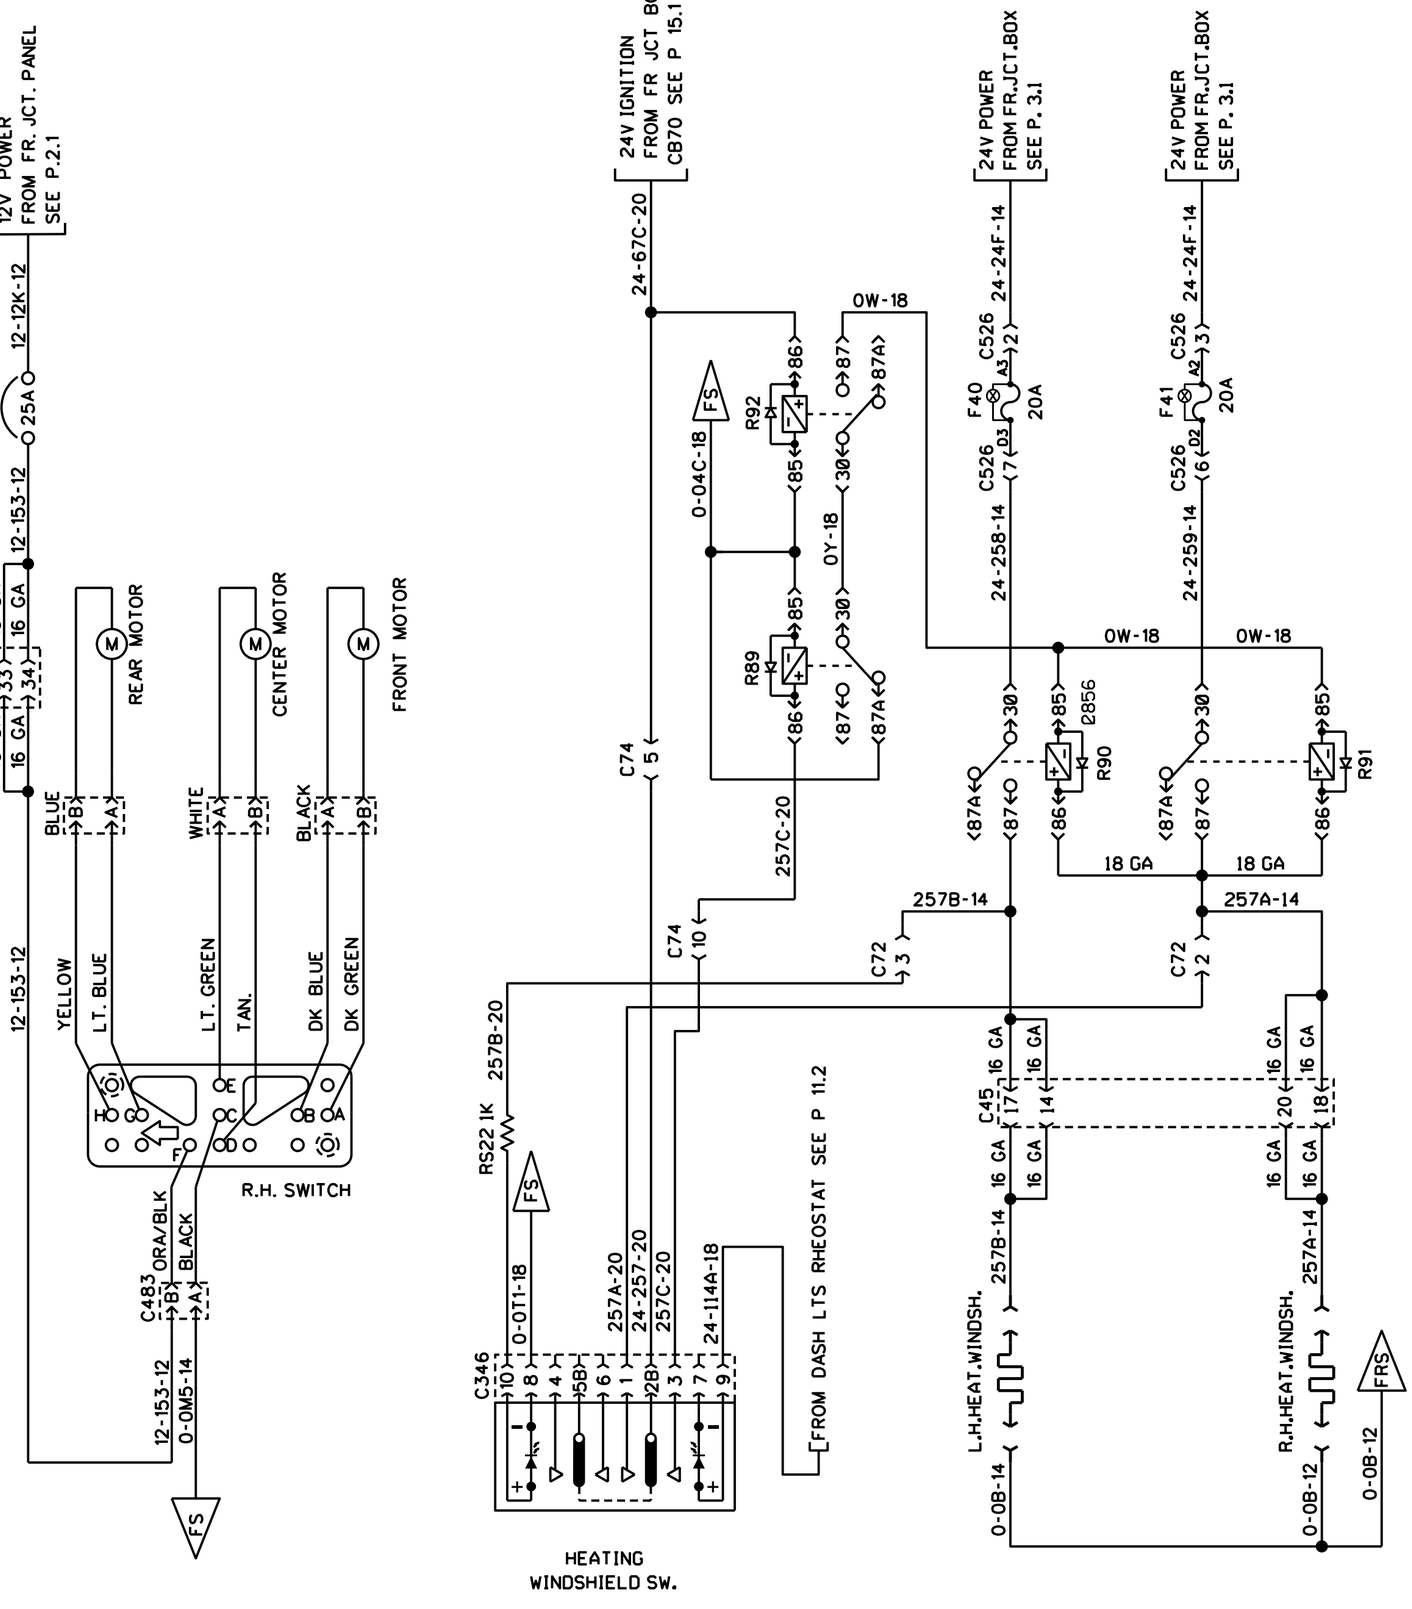

DRIVER'S SEAT ELECT. ADJ. | HEATED WINDSHIELD

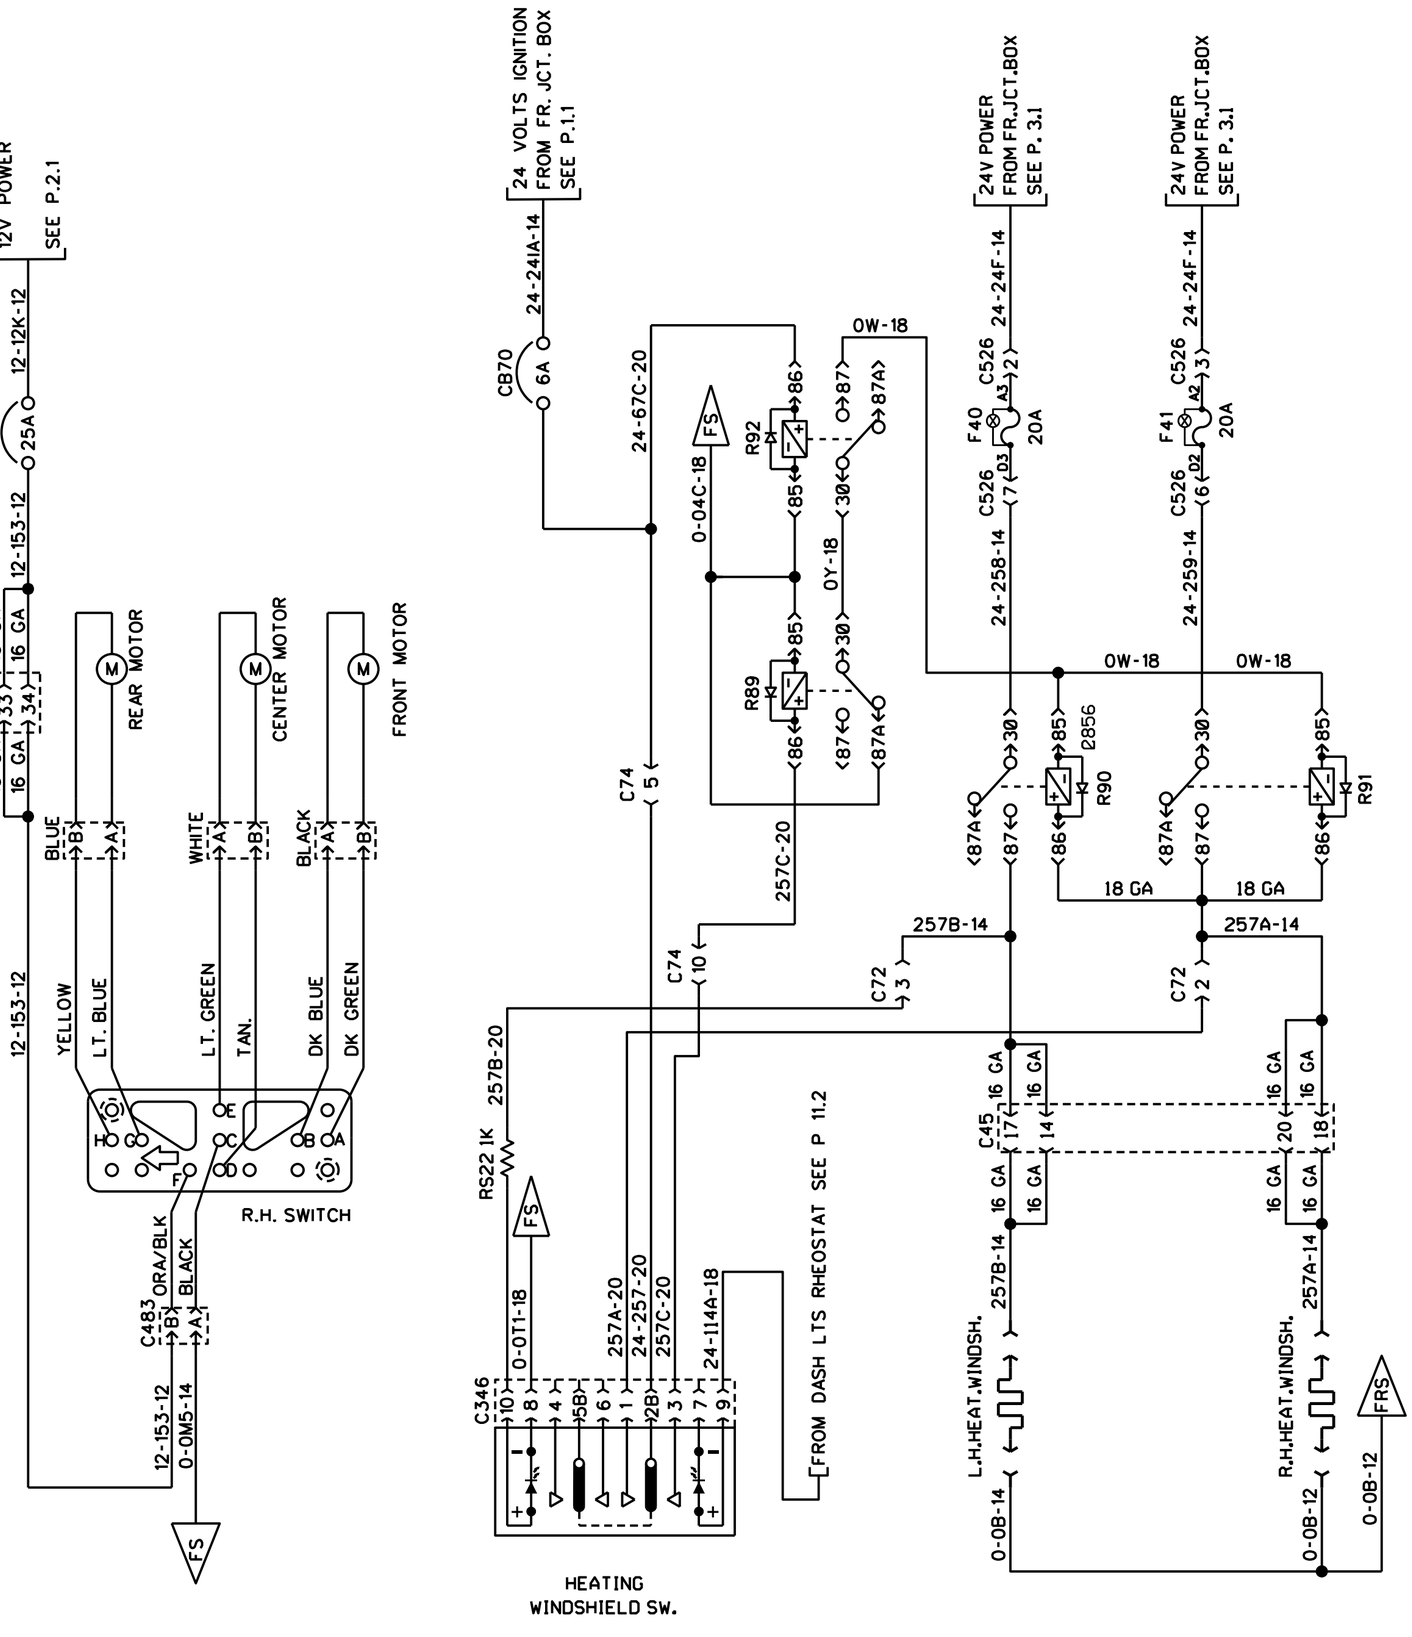

DRIVER'S SEAT ELECT. ADJ. | HEATED WINDSHIELD

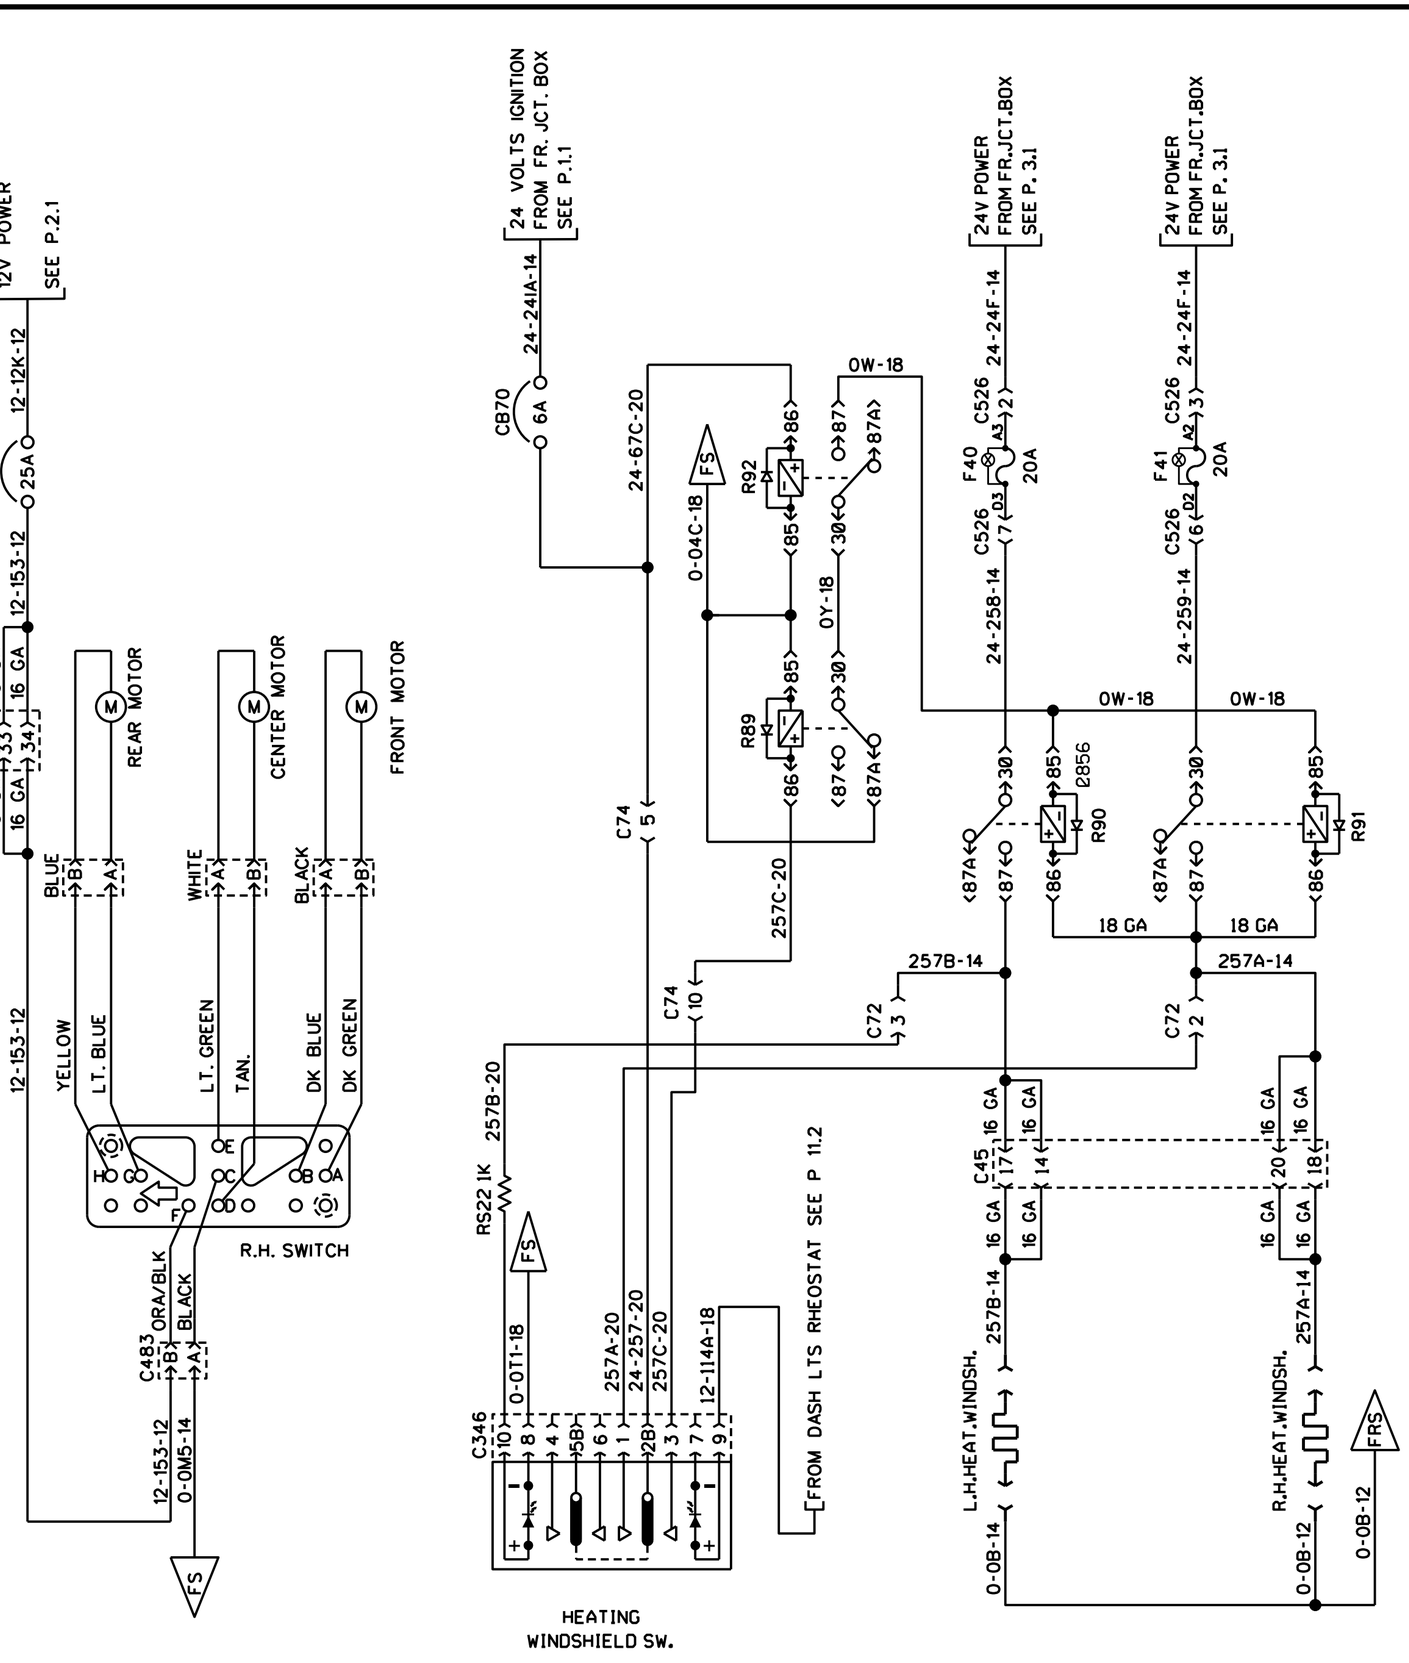

DRIVER'S SEAT ELECT. ADJ. | HEATED WINDSHIELD

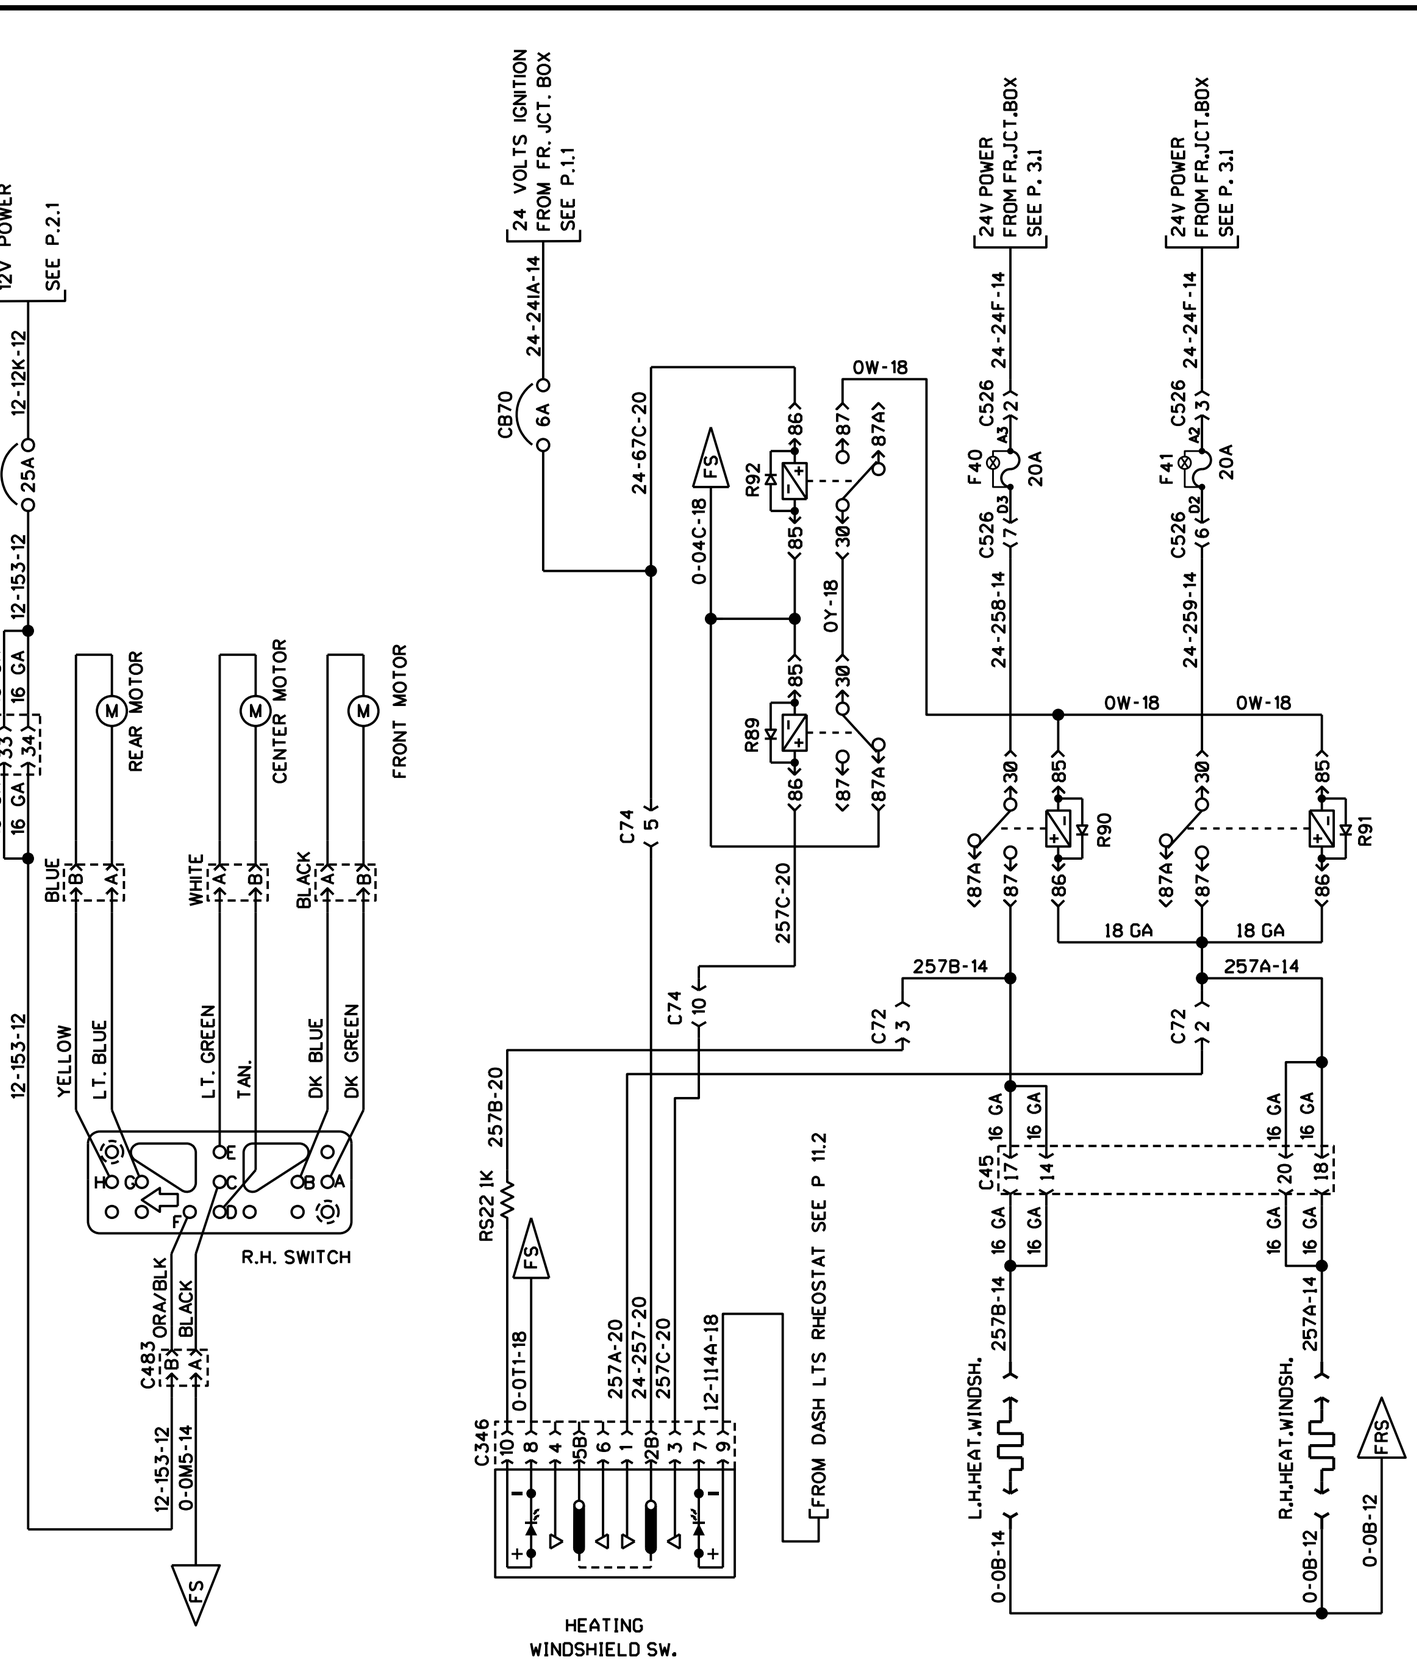

DRIVER'S SEAT ELECT. ADJ. | HEATED WINDSHIELD

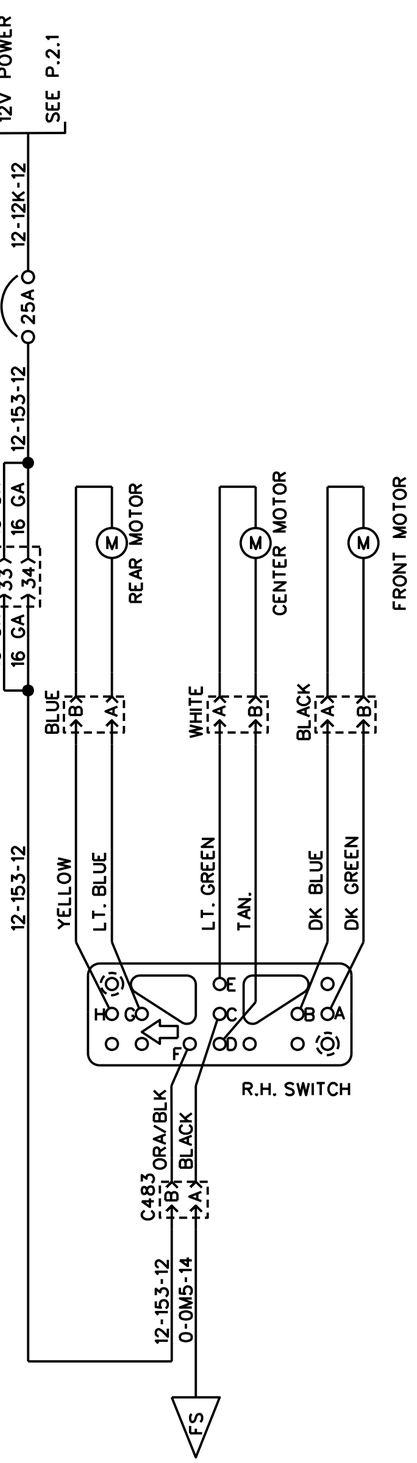

DRIVER'S SEAT ELECT. ADJ.

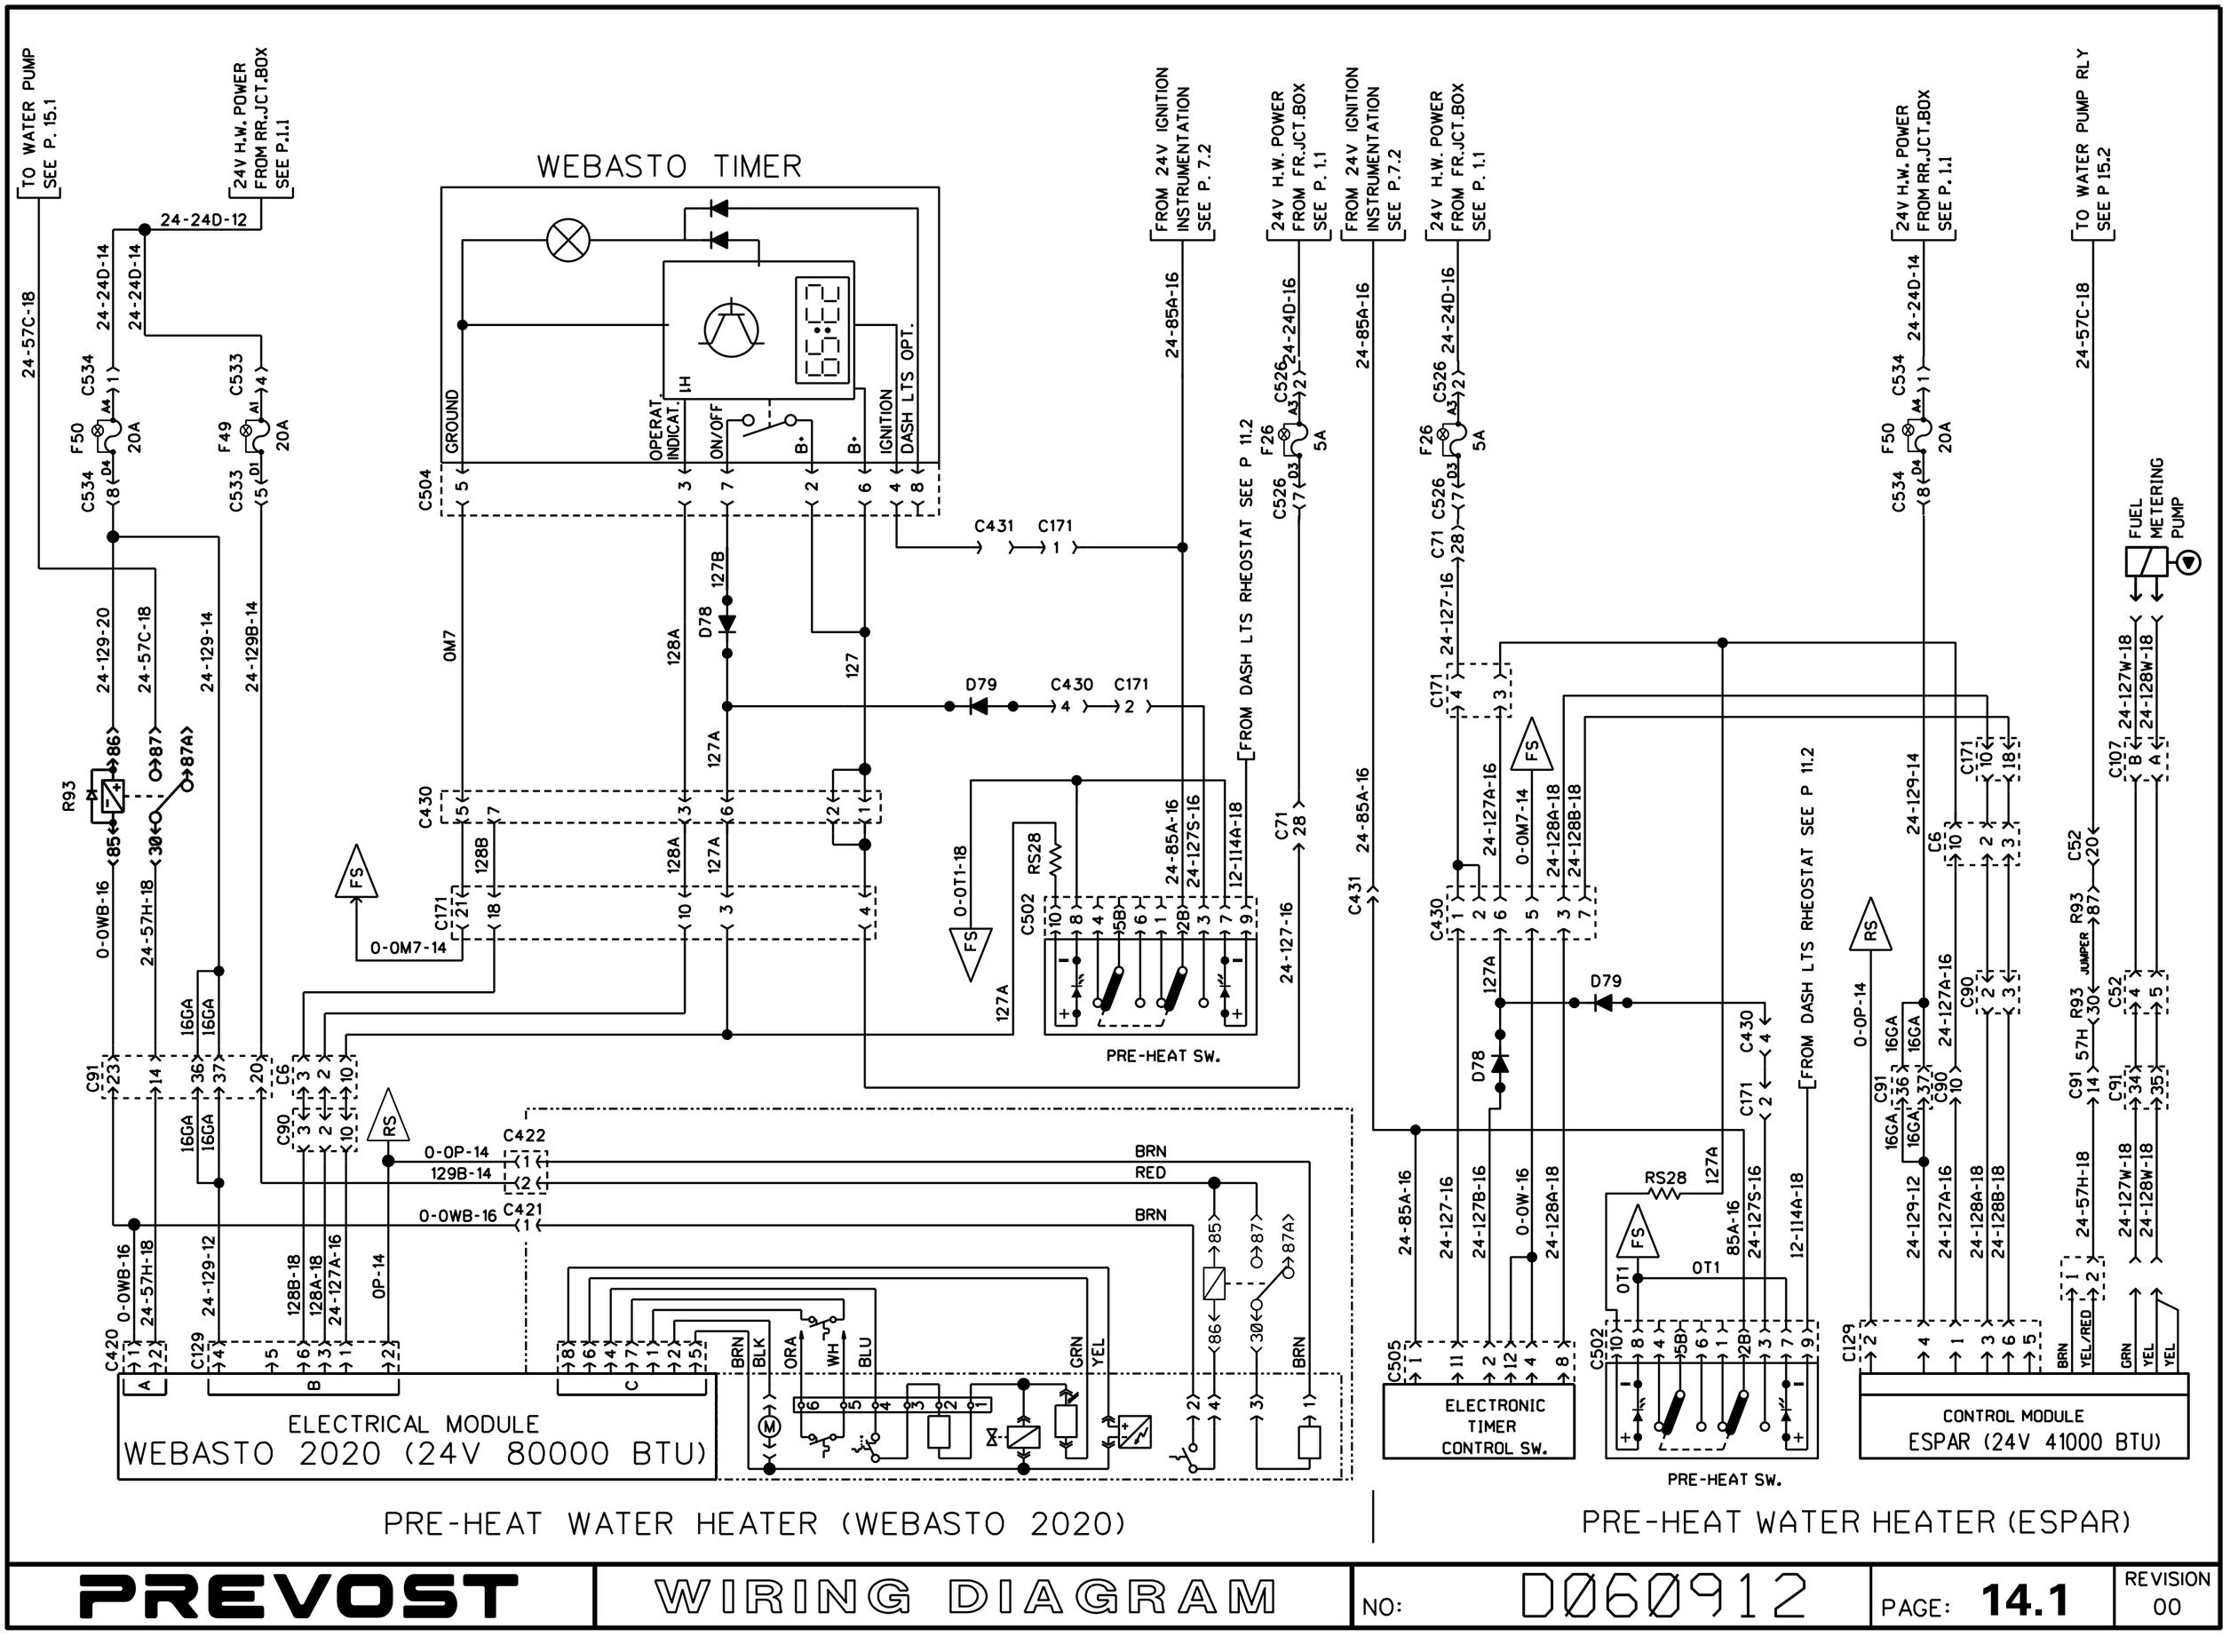

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 14.1	REVISION 00

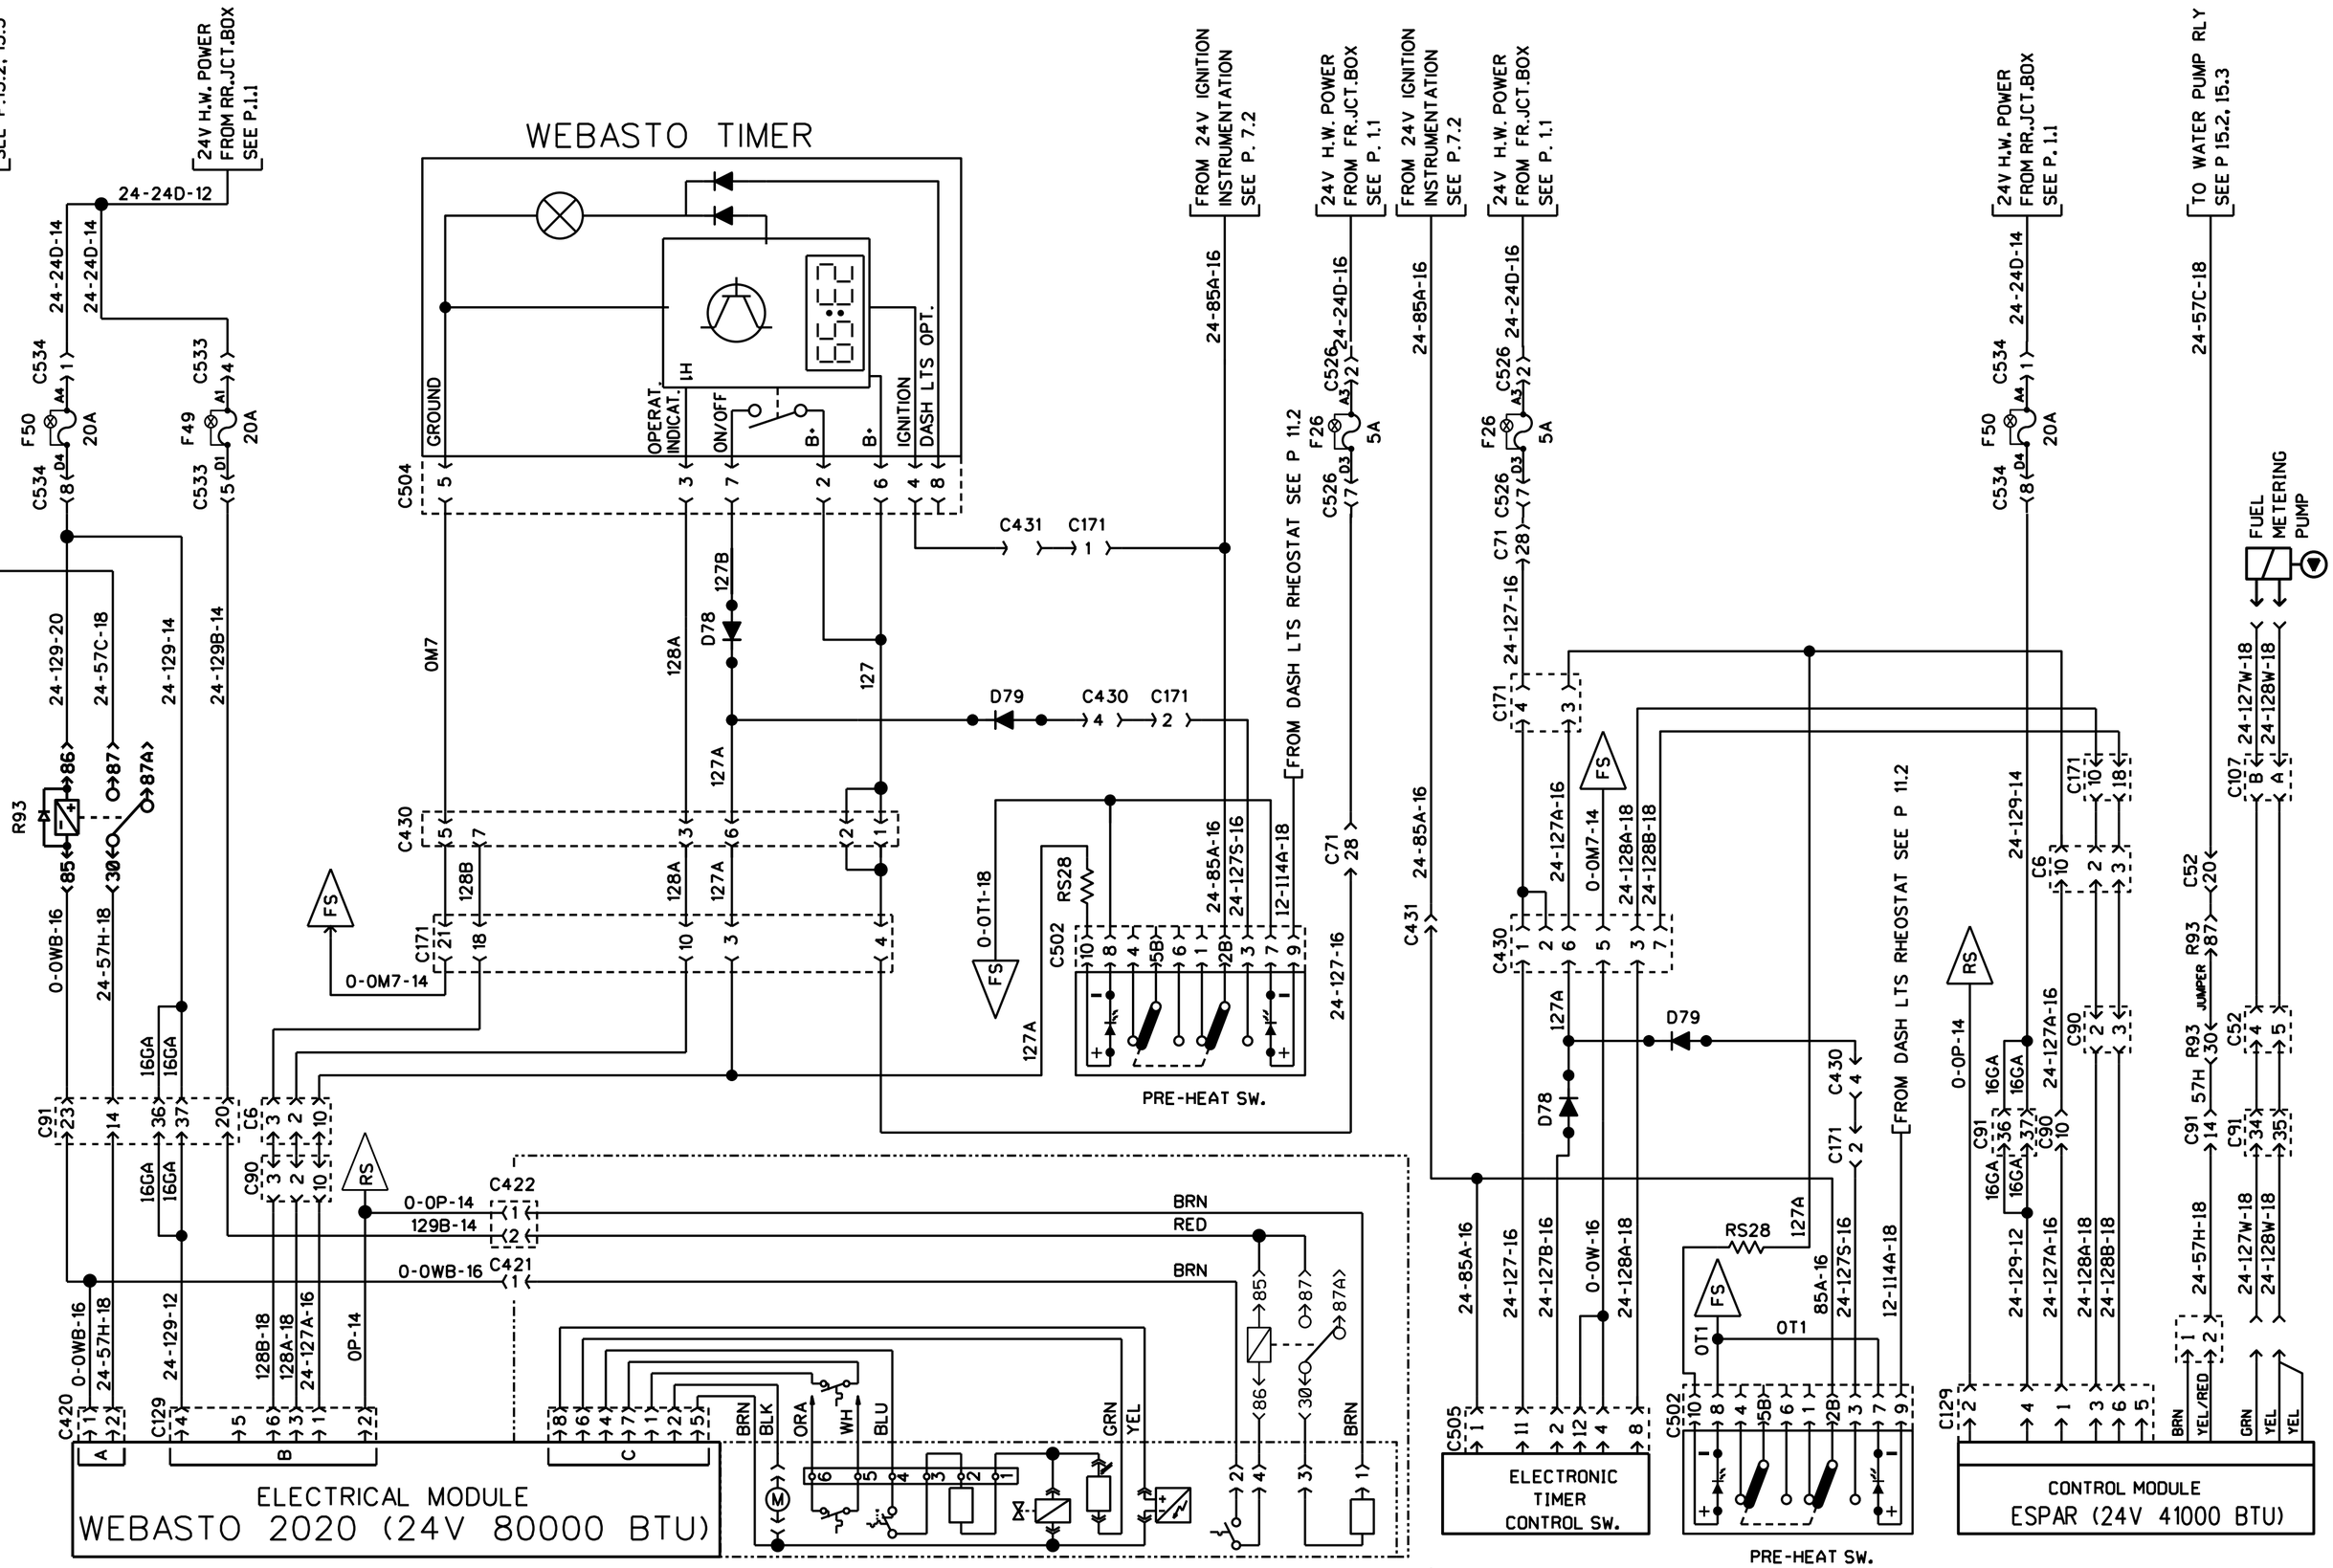

PRE-HEAT WATER HEATER (WEBASTO 2020)

PRE-HEAT WATER HEATER (ESPAR)

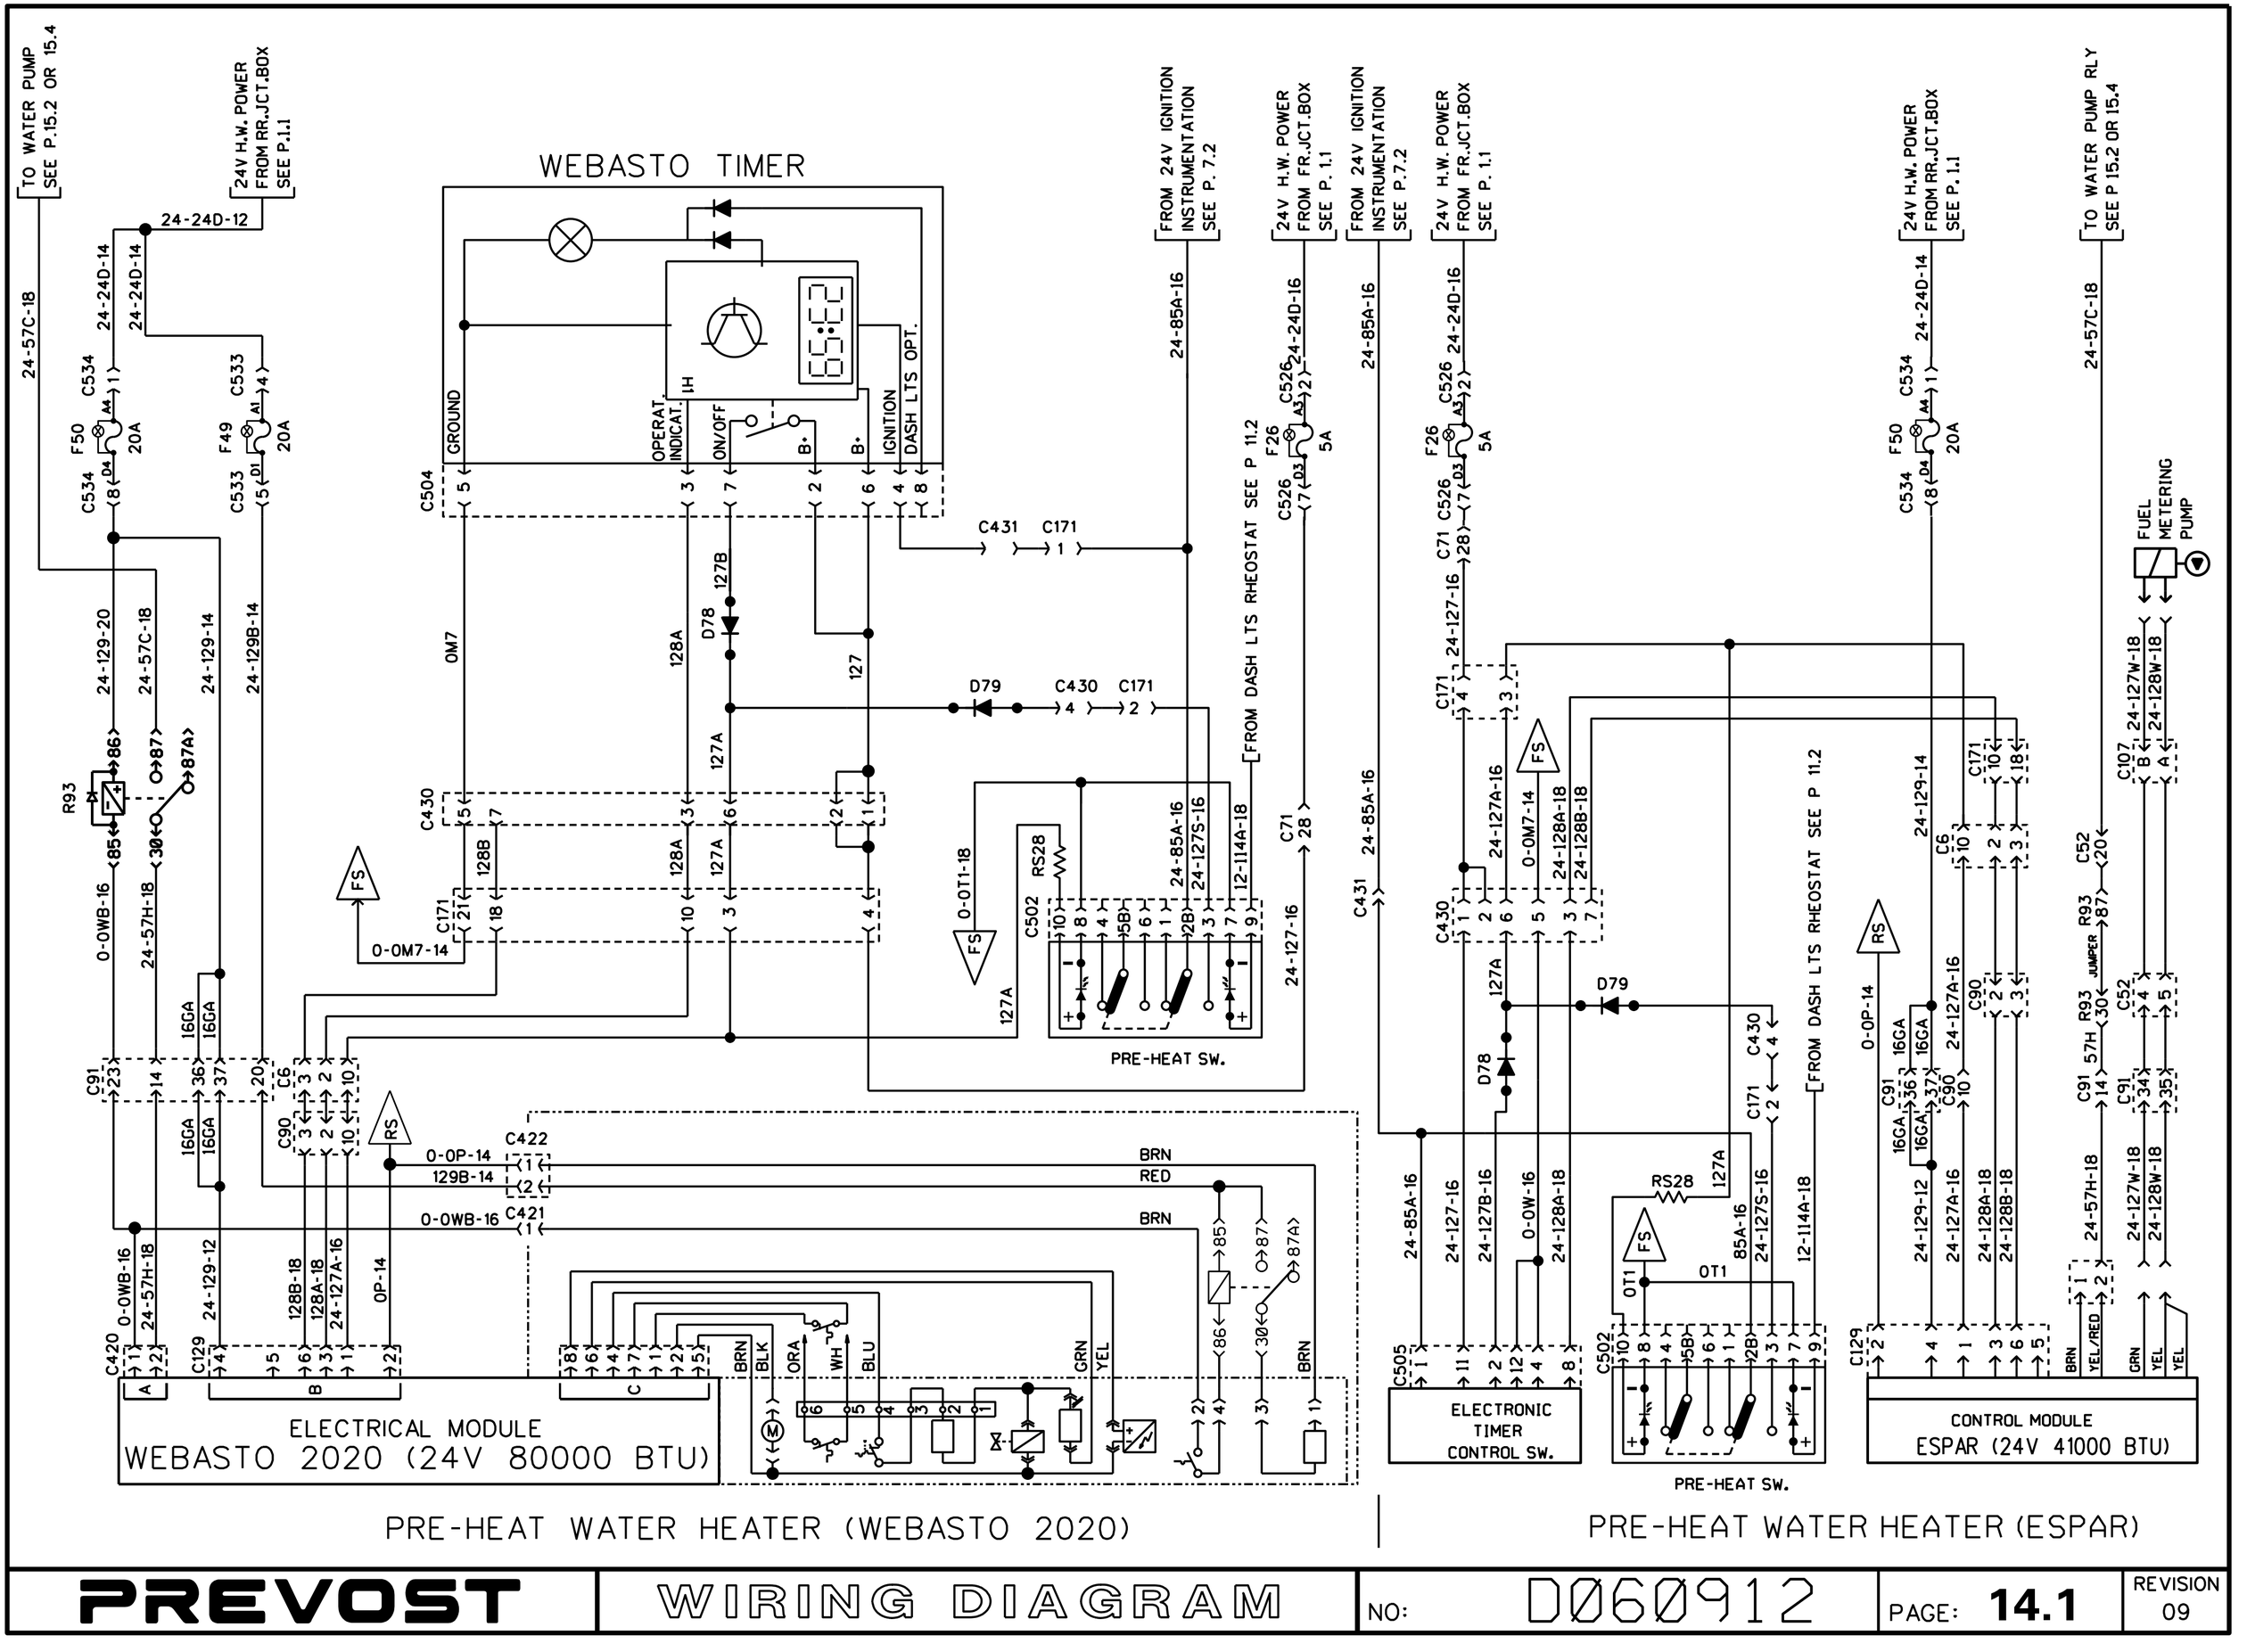

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 14.1	REVISION 09

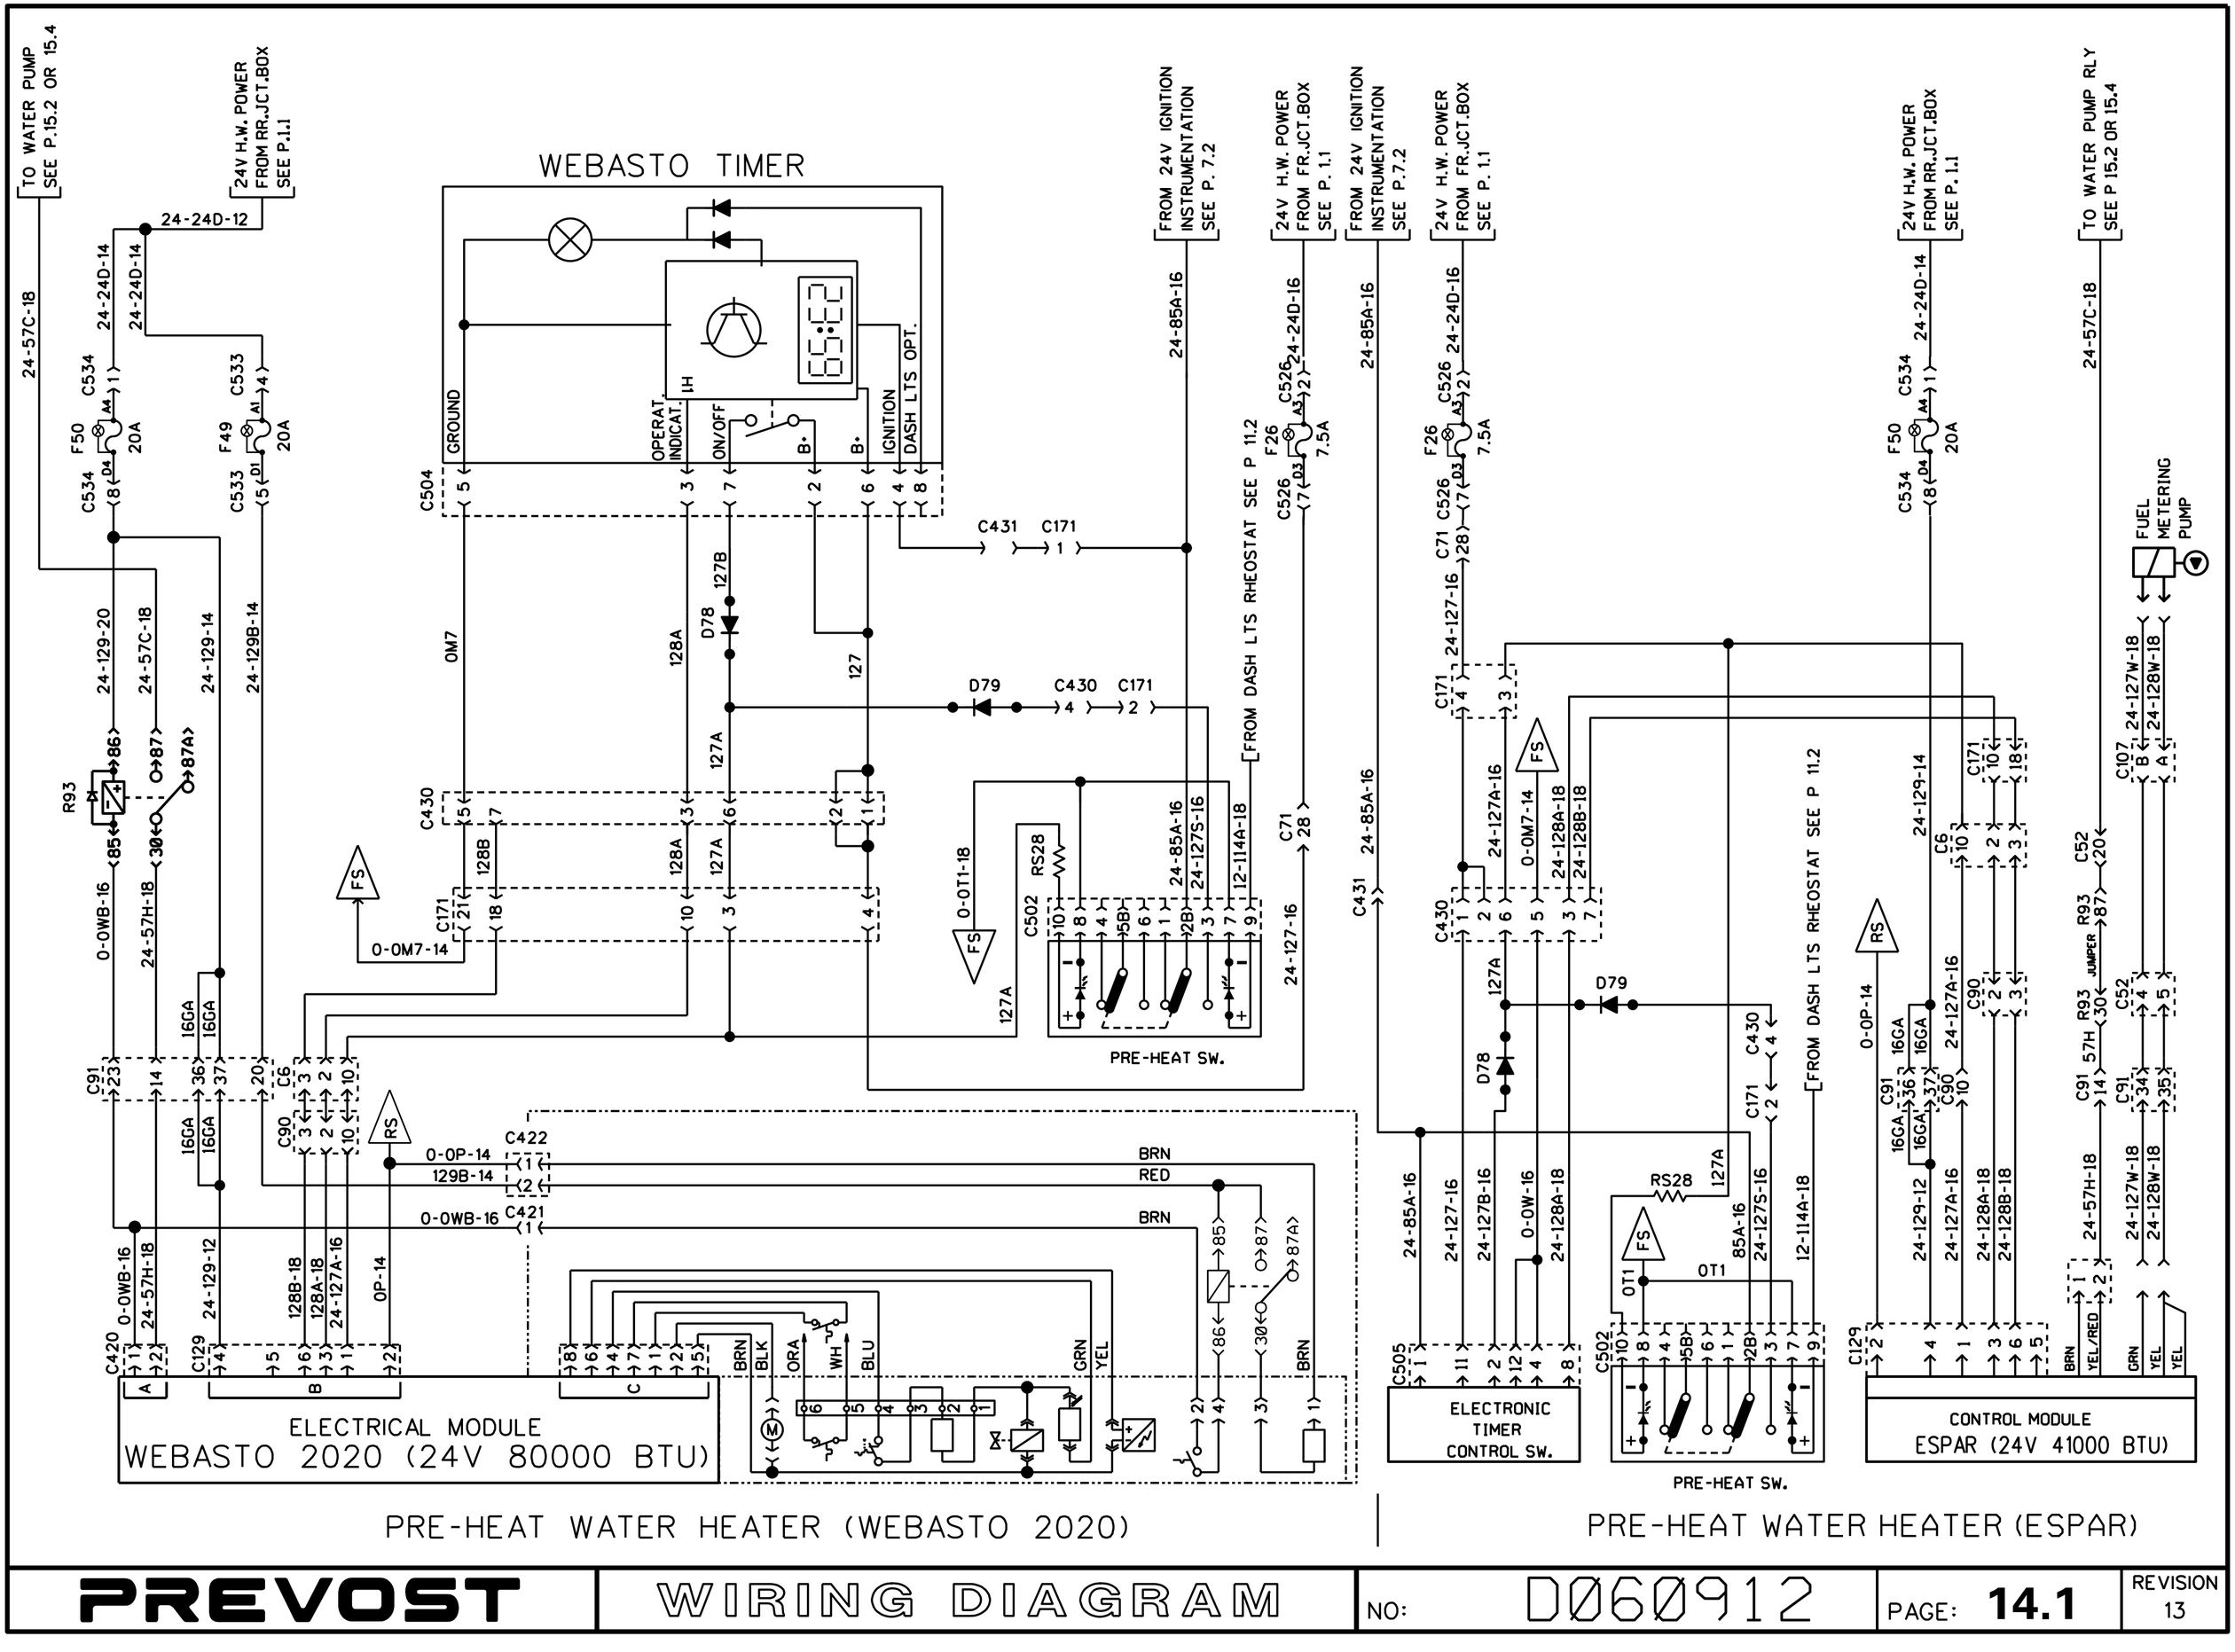

PRE-HEAT WATER HEATER (WEBASTO 2020)

PRE-HEAT WATER HEATER (ESPAR)

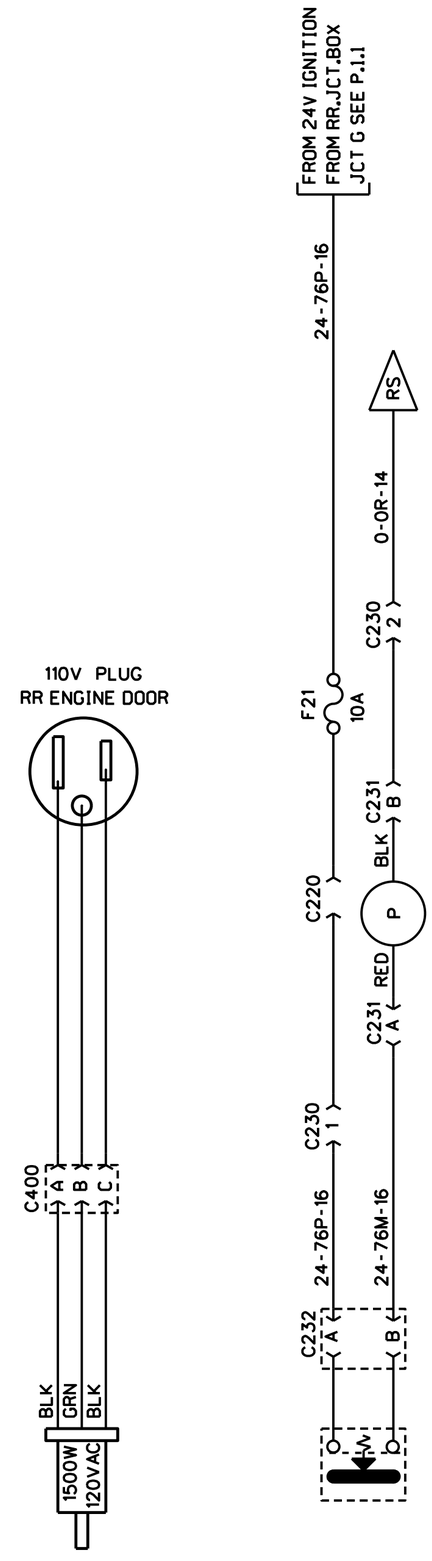

ENGINE BLOCK HEATER

FUEL PRIME PUMP

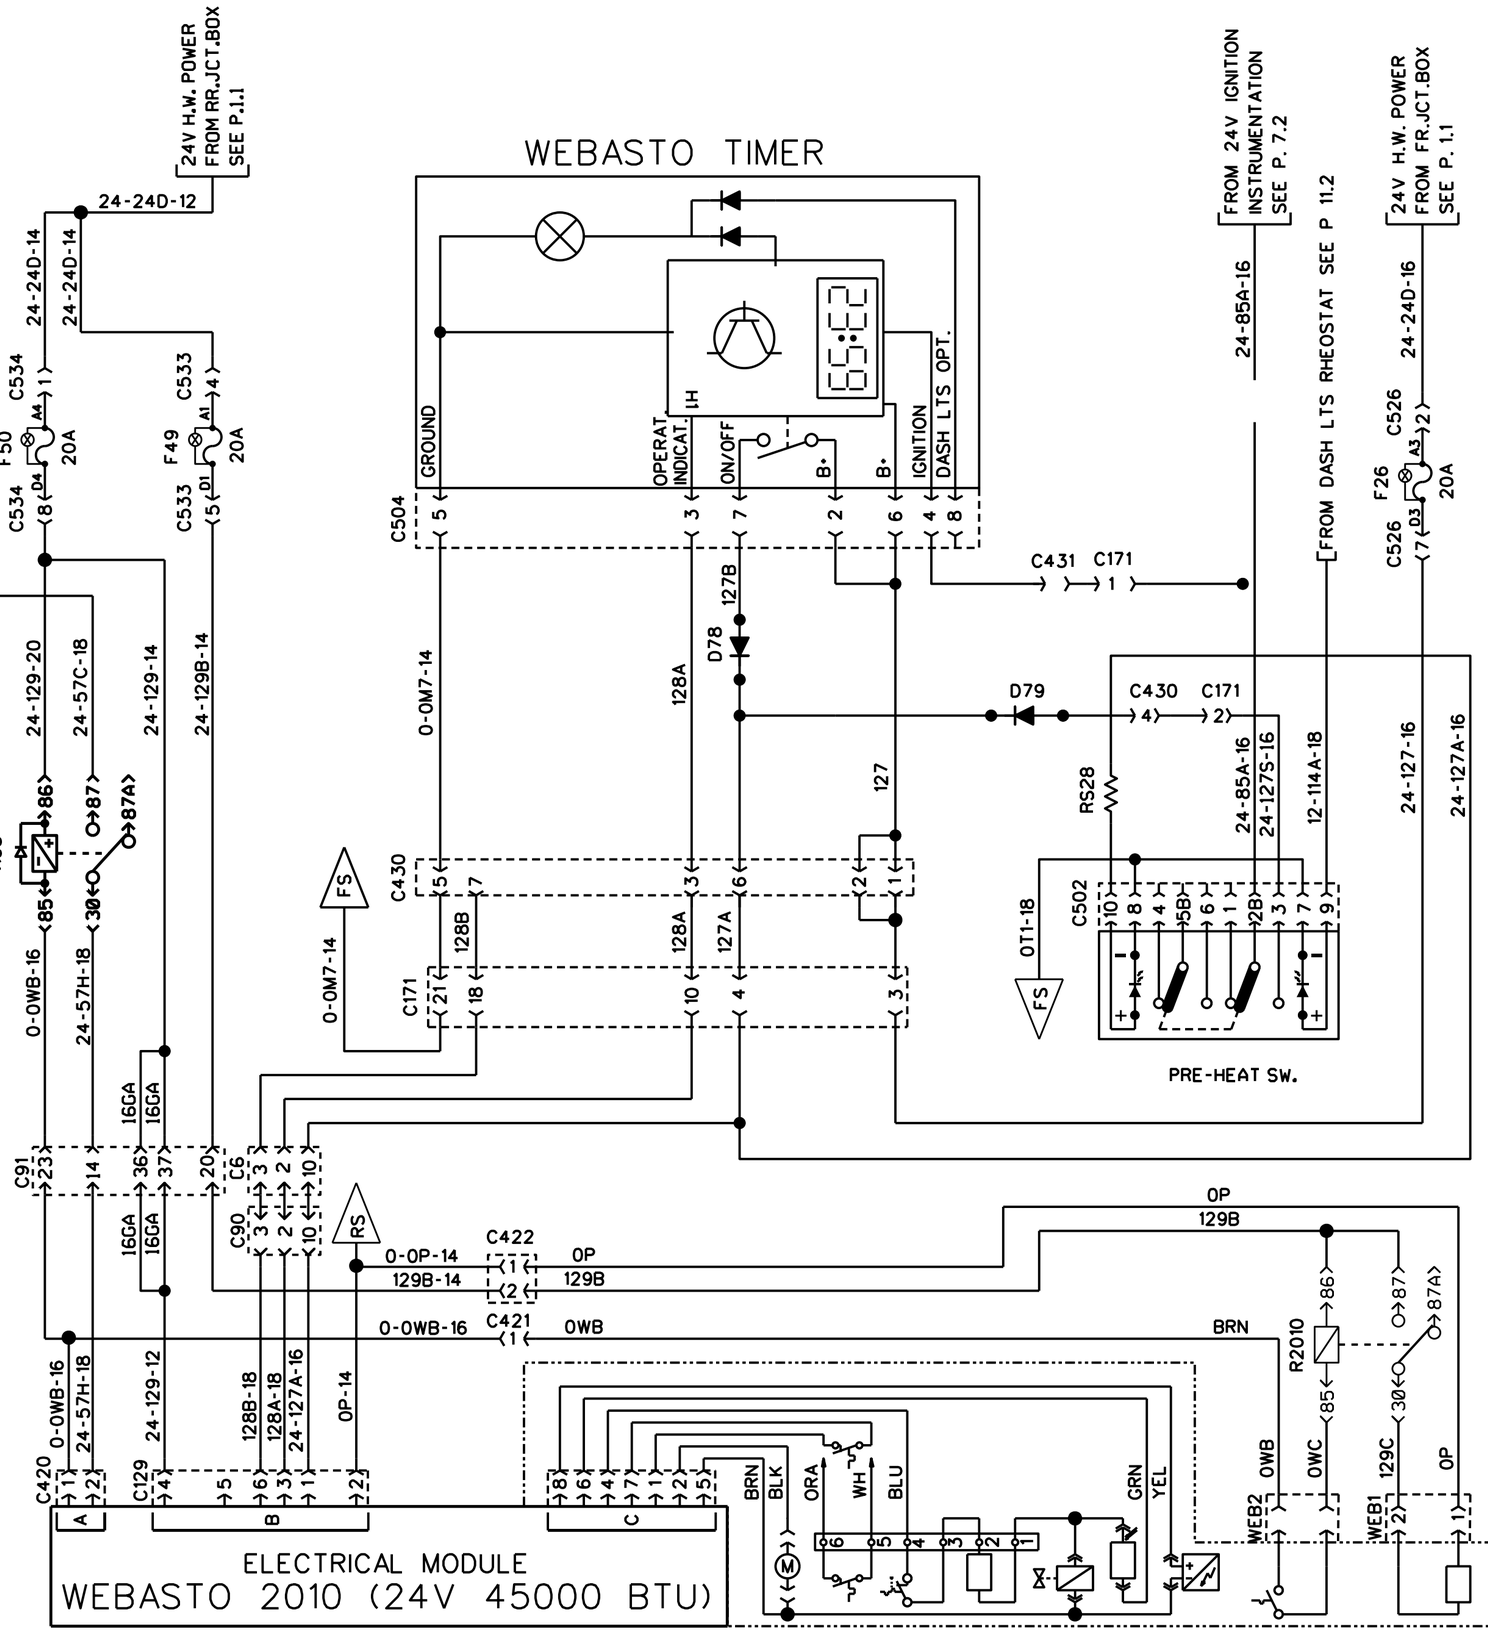

PRE-HEAT WATER HEATER (WEBASTO 2010)

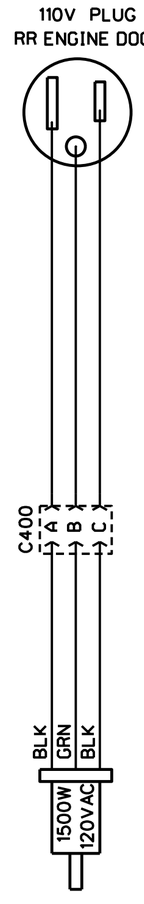

ENGINE BLOCK HEATER

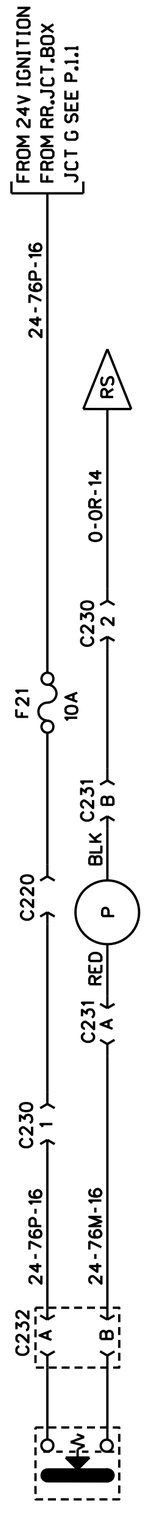

FUEL PRIME PUMP

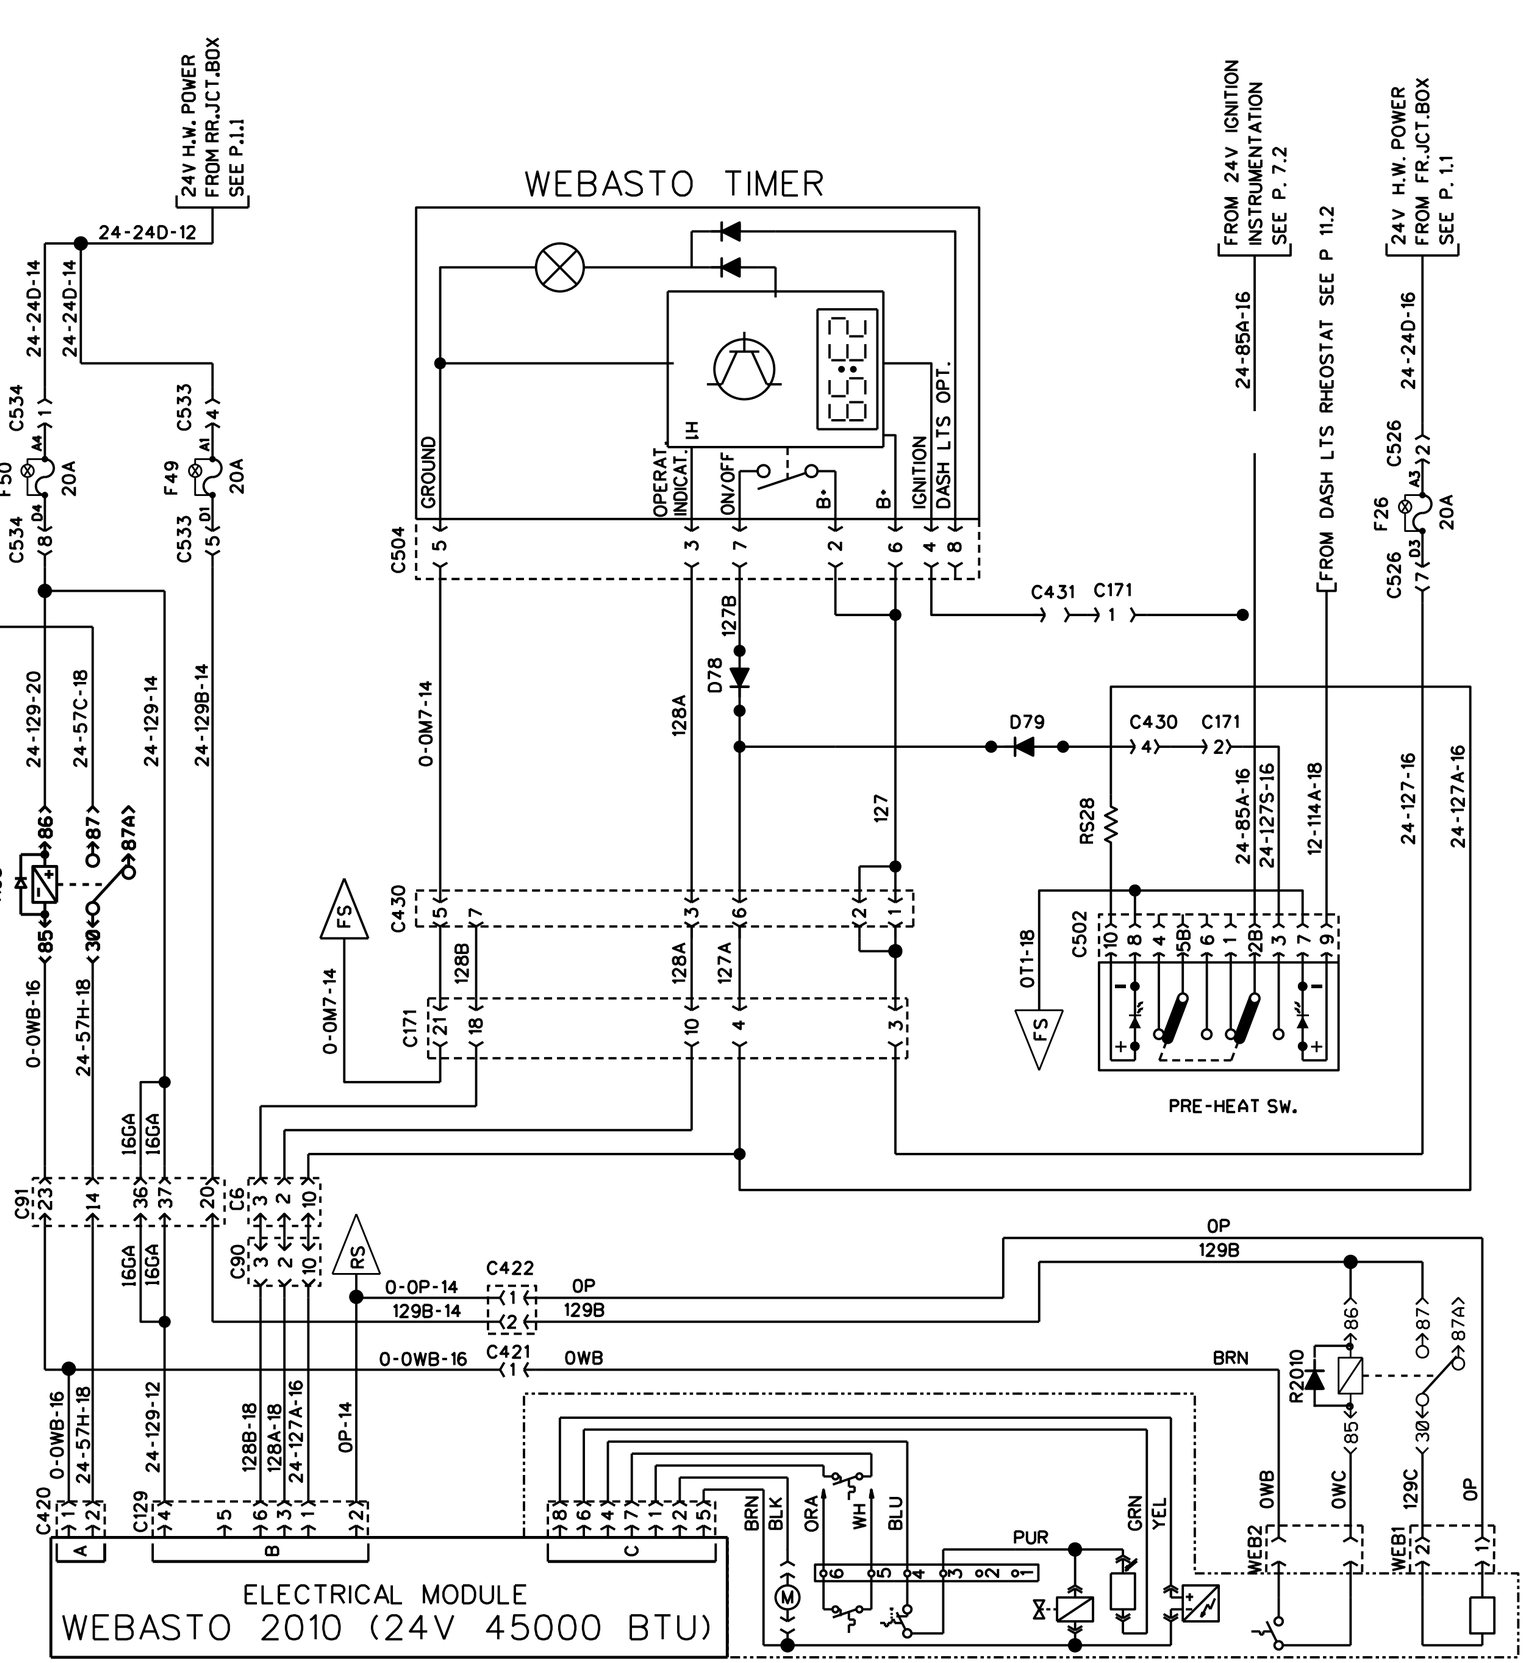

PRE-HEAT WATER HEATER (WEBASTO 2010)

ENGINE BLOCK HEATER

FUEL PRIME PUMP

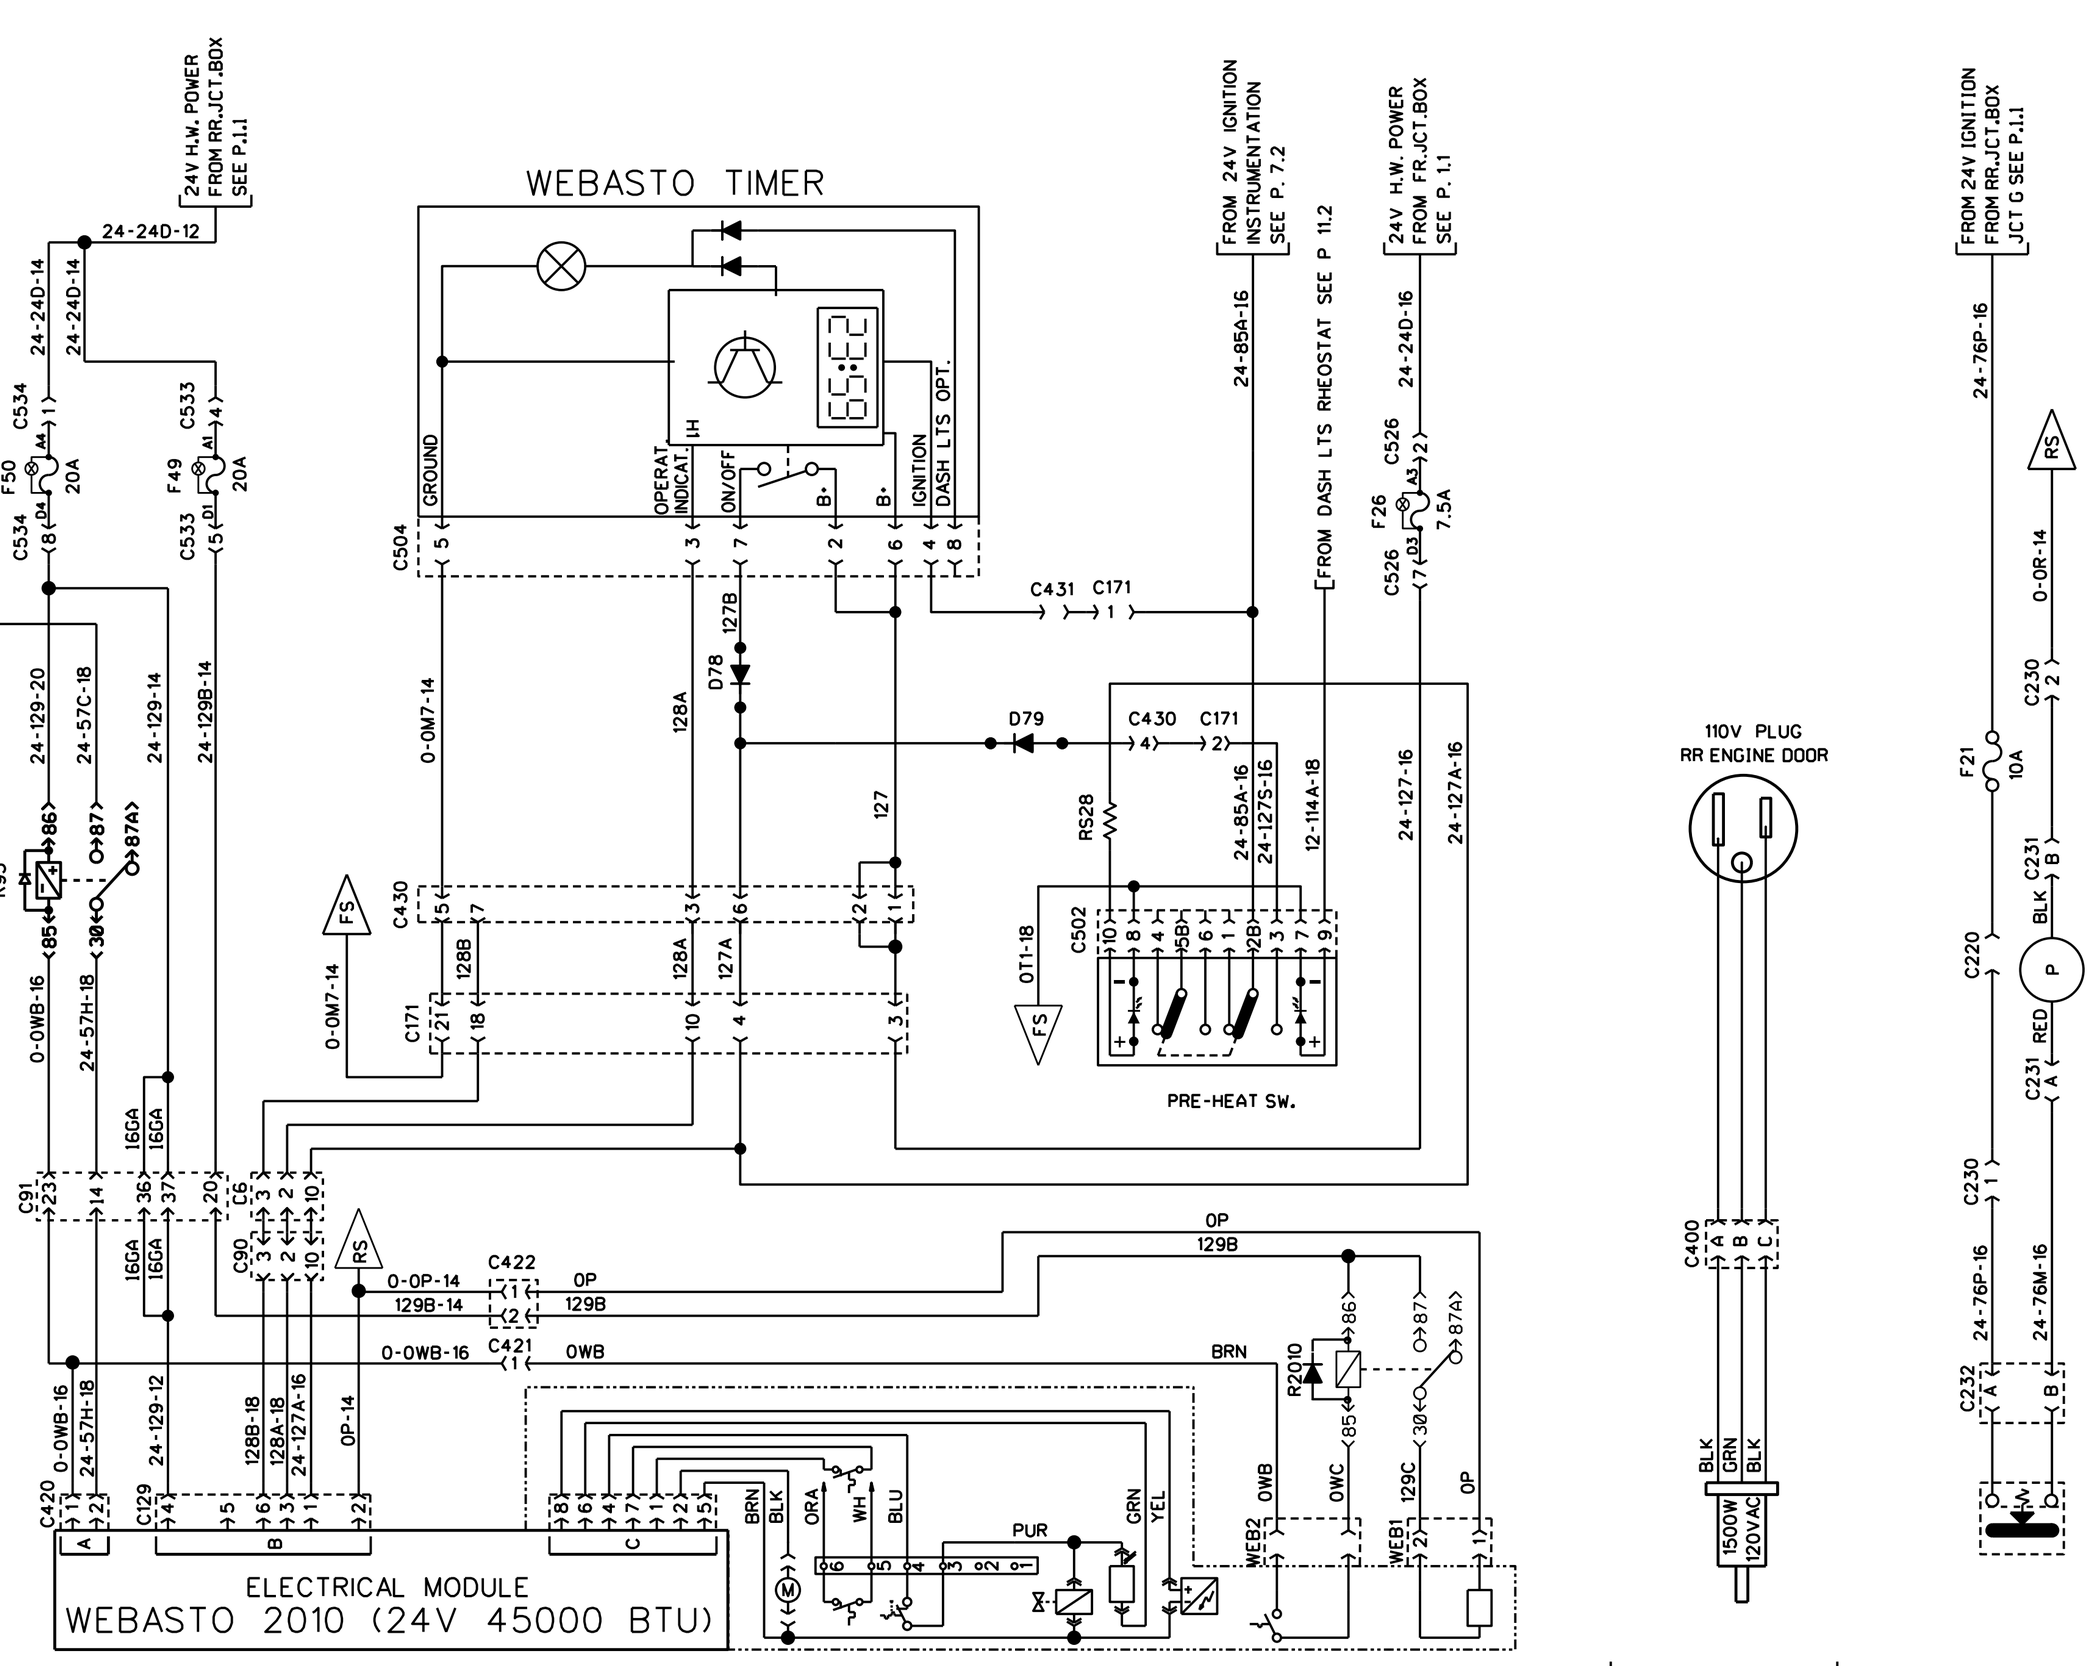
WEBASTO TIMER
GROUND
OPERAT INDICAT.
ON/OFF
IGNITION
DASH LTS OPT.
TO WATER PUMP SEE P. 15.2 OR 15.4
24V H.W. POWER FROM RR.JCT.BOX SEE P.1.1
FROM 24V IGNITION INSTRUMENTATION SEE P. 7.2
FROM DASH LTS RHEOSTAT SEE P 11.2
24V H.W. POWER FROM FR.JCT.BOX SEE P. 1.1
FROM 24V IGNITION FROM RR.JCT.BOX JCT G SEE P.1.1
PRE-HEAT SW.
ELECTRICAL MODULE
WEBASTO 2010 (24V 45000 BTU)
110V PLUG
RR ENGINE DOOR
1500W 120VAC
PRE-HEAT WATER HEATER (WEBASTO 2010)
ENGINE BLOCK HEATER
FUEL PRIME PUMP

PREVOST

WIRING DIAGRAM

HVAC SYSTEM

HVAC DASH MODULE

DRIVER'S FAN SPEED CTRL MODULE

12V POWER FROM FR JCT BOX SEE P. 2.1
12-12K-14
CB58
6A
C74
35
12-29H-16
C539
1
7
12
I_12V C.O. SW FEED
FS
0-0T2-16
2
I_CHASSIS GRD
FBG
0-00A-18
3
4
I_BATTERY GRD
24V POWER FROM FR JCT BOX CB35 SEE P. 9.3
24-44C-16
5
6
I_24V C.O. SW FEED
PASSENGER DAMPER REC
RS
0-0A-18
C111
2
GAZ CYLYNDER
C111
1
C9
5
24-65P-18
8
O_GRD PAS. FRESH AIR (TEST)
C11
C105
B
DR. LIQ.SOL.VAL.
C105
A
24-116B-18
28
10
O_ON/OFF (TEST) LIQ. SOL. VALVE
0-0C-14
FS
C106
B
DRIVER HTR WATER VALVE N.O.
C106
A
24-45G-18
4
11
O_DRIVER HEAT (TEST)
FOOT DAMPER MOTOR
C484
A
B
65-18
65A-18
14
13
O_DRIVER FOOT DAMPER (TEST)
DASH & DEFROST DAMPER MOTOR
RED
BLK
C485
1
3
68-18
68A-18
15
16
O_DRIVER DEFROST & DASH DAMPER (TEST)
CB79
15A
24-24IA-14
24VI POWER FROM FR.JCT.BOX SEE P.1.1
24-29-14
C4
23
BLU
RED
BATTERY
C480
A
24-29-14
REC DAMPER GAZ CYLINDER
RED
D
24-65D-18
17
9
O_DRIVER FRESH AIR DAMPER (TEST)
GROUND
B
0-0M3-12
FS
IGNITION
C
12-116C-18
8
23
O_ON/OFF DEFROST
CCW
WHIPPER
CW
C481
A
B
C
64A-18
64-18
64B-18
31
30
32
17
18
19
O_RESIS.(MCC POT 1)
INPUT(MCC POT 2)
O_RESIS.(MCC POT 3)
0-66-20
22
O_PAS. ON/ OFF (TEST)
TO OUTSIDE FREEZE T.T.LT. MODULE C572 (14) SEE P. 23.1
0-181-20
21
O_GROUND FREEZE TEMP
TO A/C MODULE C139 (15) SEE P. 15.2
24-77K-20
20
O_AC_MODULE COMPRESSOR EN.
24
O_GROUND PHOTOCEL
RS
0-0K-18
R38
FROM A/C MODULE C139(14) SEE P.13.2
24-2BB-18
86
85
C136 D1 C136
7
9
30
87
87A
24-67A-16
CONDENSER COMPARTMENT DOOR AJAR SWITCH
0-45W-20
C9
6
0-45W-20
TO CONDENSER DOOR AJAR T.T.LT. MODULE C572 (6) SEE P. 23.1
C140
I_OUTSIDE TEMP
4
3
181C-18 (BLK)
181D-18 (WHT)
SH
C538
1
2
BLK
YEL
TEMPERATURE SENSOR
OUTSIDE
I_DRIVER TEMP
2
1
181A-18 (BLK)
181B-18 (WHT)
SH
C474
1
2
BLK
YEL
TEMPERATURE SENSOR
DRIVER'S INSIDE
C479
I_PAS.TEMP
3
(BLK)
2
(YEL)
1
C540
I_24V BAT.
1
24-7B-20
24V HOT WIRE FROM CB85 SEE P. 11.2
I_RHEOSTAT
12
0@12-114A-20
FROM DASH LTS RHEOSTAT SEE P 11.2
I_12V BAT.
2
12-12LX-18
12V HOT WIRE FROM FR JCT BOX SEE P 7.1
OUTPUT
OUTPUT
OUTPUT
OUTPUT
13
3
14
4
180-20
180A-20
180B-20
180C-20
TO TELL TALE LTS MODULE OUTSIDE TEMP DISPLAY C573 (5,6,7,8) SEE P. 23.1
O_HEAT 520 OHMS RESISTOR (P1)
15
C9
19
0@1-167-18
C58
15
TO ELECT. TRANSMITTER C137 (8) SEE P. 15.2
O_COOL 500 OHMS RESISTOR (P2)
16
20
0@1-167A-18
14
TO ELECT. TRANSMITTER C137 (9) SEE P. 15.2
I_GRD REF. (P3)
5
18
0-165D-18
13
REFERENCE GROUND FROM ELECT. TRANSMITTER C137 (1) SEE P. 15.2
O_CLUSTER
6
RX3-20
TO 24V GAUGE RH PANEL CLUSTER RX(3) SEE P. 7.1
I_CLUSTER
17
0-0T2-20
RH PANEL GRD FROM CLUSTER SEE P. 7.1
I_BAT. GRD
7
0-00A-18
FBG
I_PAS. HEAT RED LED
18
24-45B-20
PASSENGER HEAT SIGNAL FROM A/C MODULE C139 (1) SEE P. 15.2
I_PAS. COOL GREEN LED
19
24-2B-20
I_ENTRANCE DOOR OPEN
20
I_DASH/DEFROST SW
8
I_IGN. SW.
10
12-12H-18
12V IGNITION FROM CB28 SEE P. 7.1
I_ENG. RUN
11
12-25-20
12V ENGINE RUN SIGNAL FROM R100 (87) SEE P. 4.1
I_ACCES.
22
24-83-20
24V KEY SW.ACCESSORIES SIGNAL FROM MASTER KEY SW. SEE P. 4.1
C58
10
C9
17
24-2B-20
C59
14
C91
32
FIRST SPEED PRESSURE 138-105
R39
CONDENSER FAN MOTOR R.H.
BC
0-0C-16
C537
2
C15
18
24-67K-18
C91
17
C158
2
C158
1
24-2B-18
CB77
40A
BAT
41A-10
24-41-10
24-90B-10
24V POWER FROM CB8 SEE P. 1.1
BC
0-0D-10
BAT
41B-10
CONDENSER FAN MOTOR L.H.
N.C.
N.O.
42A-10
RS
0-0A-18
C95
A
C95
B
24-2B-18
PASSENGER LIO. SOL. VALVE
CB78
40A
BAT
24-42-10
24-90C-10
24V POWER FROM CB8 SEE P. 1.1
BC
0-0D-10
BC
0-0C-16
R41
BC
0-0C-16
R40
C537
1
C15
17
24-67L-18
C91
19
C159
2
C159
1
24-67A-16
SECOND SPEED PRESSURE 195-150
24-67L-18
TO HUMIDISTAT SEE P. 15.2
TO EVAPORATOR CONTROL MODULE C112(B) SEE P. 15.2
24-67A-16
C58
19
24-67A-16
C59
9
C91
31
TO HVAC LOGIC PANEL P. 15.2
24-67A-16
24-67A-16
87A
87
30
C59
10
C9
1
0-66-20
C58
3
85
86
24-67D-20
R34
24-67D-16
CB71
10A
24-24C-12
24V POWER FROM RR JCT.BOX R39 (BAT) SEE P. 1.1

NO: D060912

PAGE: 15.1

REVISION 00

PREVOST

HVAC SYSTEM WIRING DIAGRAM

NO: D060912

PAGE: 15.1

REVISION 05

12V POWER FROM FR JCT BOX SEE P. 2.1 — 12-12K-14 — CB58 6A — C74 35 — 12-29H-16 — C539 1,7,12

FS — 0-0T2-16 — C539 2 — I_CHASSIS GRD

FBG — 0-00A-18 — C539 3,4 — I_BATTERY GRD

24V POWER FROM FR JCT BOX CB35 SEE P. 9.3 — 24-44C-16 — C539 5,6 — I_24V C.O. SW FEED

PASSENGER DAMPER REC

RS — 0-0A-18 — C111 2 — GAZ CYLINDER — C111 1 — C9 5 — 24-65P-18 — C539 8 — O_GRD PAS. FRESH AIR (TEST)

C105 B — DR. LIQ.SOL.VAL. — C105 A — 24-116B-18 — C11 28 — C539 10 — O_ON/OFF (TEST) LIQ. SOL. VALVE

0-0C-14

FS — C106 B — DRIVER HTR WATER VALVE N.O. — C106 A — 24-45G-18 — C539 4,11 — O_DRIVER HEAT (TEST)

FOOT DAMPER MOTOR — C484 A — 65-18 — C539 14 — O_DRIVER FOOT DAMPER (TEST)
C484 B — 65A-18 — C539 13

DASH & DEFROST DAMPER MOTOR — C485 RED 1 — 68-18 — C539 15 — O_DRIVER DEFROST & DASH DAMPER (TEST)
C485 BLK 3 — 68A-18 — C539 16

CB79 15A — 24-241A-14 — 24VI POWER FROM FR.JCT.BOX SEE P.1.1

24-29-14 — C4 23

HVAC SYSTEM

DRIVER'S FAN SPEED CTRL MODULE

BLU — BATTERY — C480 A — 24-29-14

RED — REC DAMPER GAZ CYLINDER — RED — D — 24-65D-18 — C11 17 — C539 9 — O_DRIVER FRESH AIR DAMPER (TEST)

GROUND — B — 0-0M3-12 — FS

IGNITION — C — 12-116C-18 — C11 8 — C539 23 — O_ON/OFF DEFROST

CCW — C481 A — 64A-18 — C11 31 — C539 17 — O_RESIS.(MCC POT 1)
WHIPPER — C481 B — 64-18 — C11 30 — C539 18 — INPUT(MCC POT 2)
CW — C481 C — 64B-18 — C11 32 — C539 19 — O_RESIS.(MCC POT 3)

0-66-20 — C539 22 — O_PAS. ON/OFF (TEST)

TO OUTSIDE FREEZE T.T.LT. MODULE C572 (14) SEE P. 23.1 — 0-181-20 — C539 21 — O_GROUND FREEZE TEMP

TO A/C MODULE C139 (15) SEE P. 15.2 — 24-77K-20 — C539 20 — O_AC_MODULE COMPRESSOR EN.

C539 24 — O_GROUND PHOTOCEL

HVAC DASH MODULE

C140 4 — I_OUTSIDE TEMP — 181C-18 (BLK) / 181D-18 (WHT) / SH — C538 1 BLK, 2 YEL — TEMPERATURE SENSOR — OUTSIDE
C140 3

C140 2 — I_DRIVER TEMP — 181A-18 (BLK) / 181B-18 (WHT) / SH — C474 1 BLK, 2 YEL — TEMPERATURE SENSOR — DRIVER'S INSIDE
C140 1

C479 3 — I_PAS.TEMP (BLK)
C479 2
C479 1 (YEL)

C540 1 — I_24V BAT. — 24-7B-20 — 24V HOT WIRE FROM CB85 SEE P. 11.2

C140 12 — I_RHEOSTAT — 0@12-114A-20 — FROM DASH LTS RHEOSTAT SEE P 11.2

C140 2 — I_12V BAT. — 12-12LX-18 — 12V HOT WIRE FROM FR JCT BOX SEE P 7.1

C140 13 — OUTPUT — 180-20
C140 3 — OUTPUT — 180A-20
C140 14 — OUTPUT — 180B-20
C140 4 — OUTPUT — 180C-20
TO TELL TALE LTS MODULE OUTSIDE TEMP DISPLAY C573 (5,6,7,8) SEE P. 23.1

C140 15 — O_HEAT 520 OHMS RESISTOR (P1) — C9 19 — 0@1-167-18 — C58 15 — TO ELECT. TRANSMITTER C137 (8) SEE P. 15.2

C140 16 — O_COOL 500 OHMS RESISTOR (P2) — C9 20 — 0@1-167A-18 — C58 14 — TO ELECT. TRANSMITTER C137 (9) SEE P. 15.2

C140 5 — I_GRD REF. (P3) — C9 18 — 0-165D-18 — C58 13 — REFERENCE GROUND FROM ELECT. TRANSMITTER C137 (1) SEE P. 15.2

C140 6 — O_CLUSTER — RX3-20 — TO 24V GAUGE RH PANEL CLUSTER RX(3) SEE P. 7.1

C140 17 — I_CLUSTER — 0-0T2-20 — RH PANEL GRD FROM CLUSTER SEE P. 7.1

C140 7 — I_BAT. GRD — 0-00A-18 — FBG

C140 18 — I_PAS. HEAT RED LED — 24-45B-20 — PASSENGER HEAT SIGNAL FROM A/C MODULE C139 (1) SEE P. 15.2

C140 19 — I_PAS. COOL GREEN LED — 24-2B-20
C140 20 — I_ENTRANCE DOOR OPEN

C140 8 — I_DASH/DEFROST SW

C140 10 — I_IGN. SW. — 12-12H-18 — 12V IGNITION FROM CB28 SEE P. 7.1

C140 11 — I_ENG. RUN — 12-25-20 — 12V ENGINE RUN SIGNAL FROM R100 (87) SEE P. 4.1

C140 22 — I_ACCES. — 24-83-20 — 24V KEY SW.ACCESSORIES SIGNAL FROM MASTER KEY SW. SEE P. 4.1

RS — 0-0K-18 — R38 — C136 D1 C136 — C58 10 — C9 17

FROM A/C MODULE C139(14) SEE P.13.2 — 24-2BB-18 — 86 / 85 — 30 / 87 / 87A

24-2B-20 — C59 14 — C91 32

24-67A-16

FIRST SPEED PRESSURE 138-105

CONDENSER FAN MOTOR R.H. — BC — 0-0C-16 — R39 — C537 2 — RS36 10Ω — C537 2 — C15 18 — 24-67K-18 — C91 17 — C158 2 — C158 1 — 24-2B-18

BC — 0-0D-10 — BAT — 41A-10 — BAT — CB77 40A — 24-41-10 — 24-90B-10 — 24V POWER FROM CB8 SEE P. 1.1

41B-10

RS — 0-0A-18 — C95 A — PASSENGER LIQ. SOL. VALVE — C95 B — 24-2B-18

CONDENSER FAN MOTOR L.H. — N.C. / N.O.

BC — 0-0D-10 — 42A-10 — BAT — CB78 40A — 24-42-10 — 24-90C-10 — 24V POWER FROM CB8 SEE P. 1.1

BC — 0-0C-16 — R41

BC — 0-0C-16 — R40 — C537 1 — RS37 5Ω — C537 1 — C15 17 — 24-67L-18 — C91 19 — C159 2 — C159 1 — 24-67A-16

SECOND SPEED PRESSURE 195-150

TO HUMIDISTAT SEE P. 15.2

24-67L-18

TO EVAPORATOR CONTROL MODULE C112(B) SEE P. 15.2 — 24-67A-16 — C58 19 — 24-67A-16 — C59 9 — C91 31

TO HVAC LOGIC PANEL P. 15.2 — 24-67A-16 — 24-67A-16 — 87A / 87 / 30 — C59 10

C9 1 — 0-66-20 — C58 3 — 85 / 86 — 24-67D-20 — R34

24-67D-16 — CB71 10A — 24-24C-12 — 24V POWER FROM RR JCT.BOX R39 (BAT) SEE P. 1.1

CONDENSER COMPARTMENT DOOR AJAR SWITCH — 0-45W-20 — C9 6 — 0-45W-20 — TO CONDENSER DOOR AJAR T.T.LT. MODULE C572 (6) SEE P. 23.1

HVAC DASH CONTROL (FULL AIR)

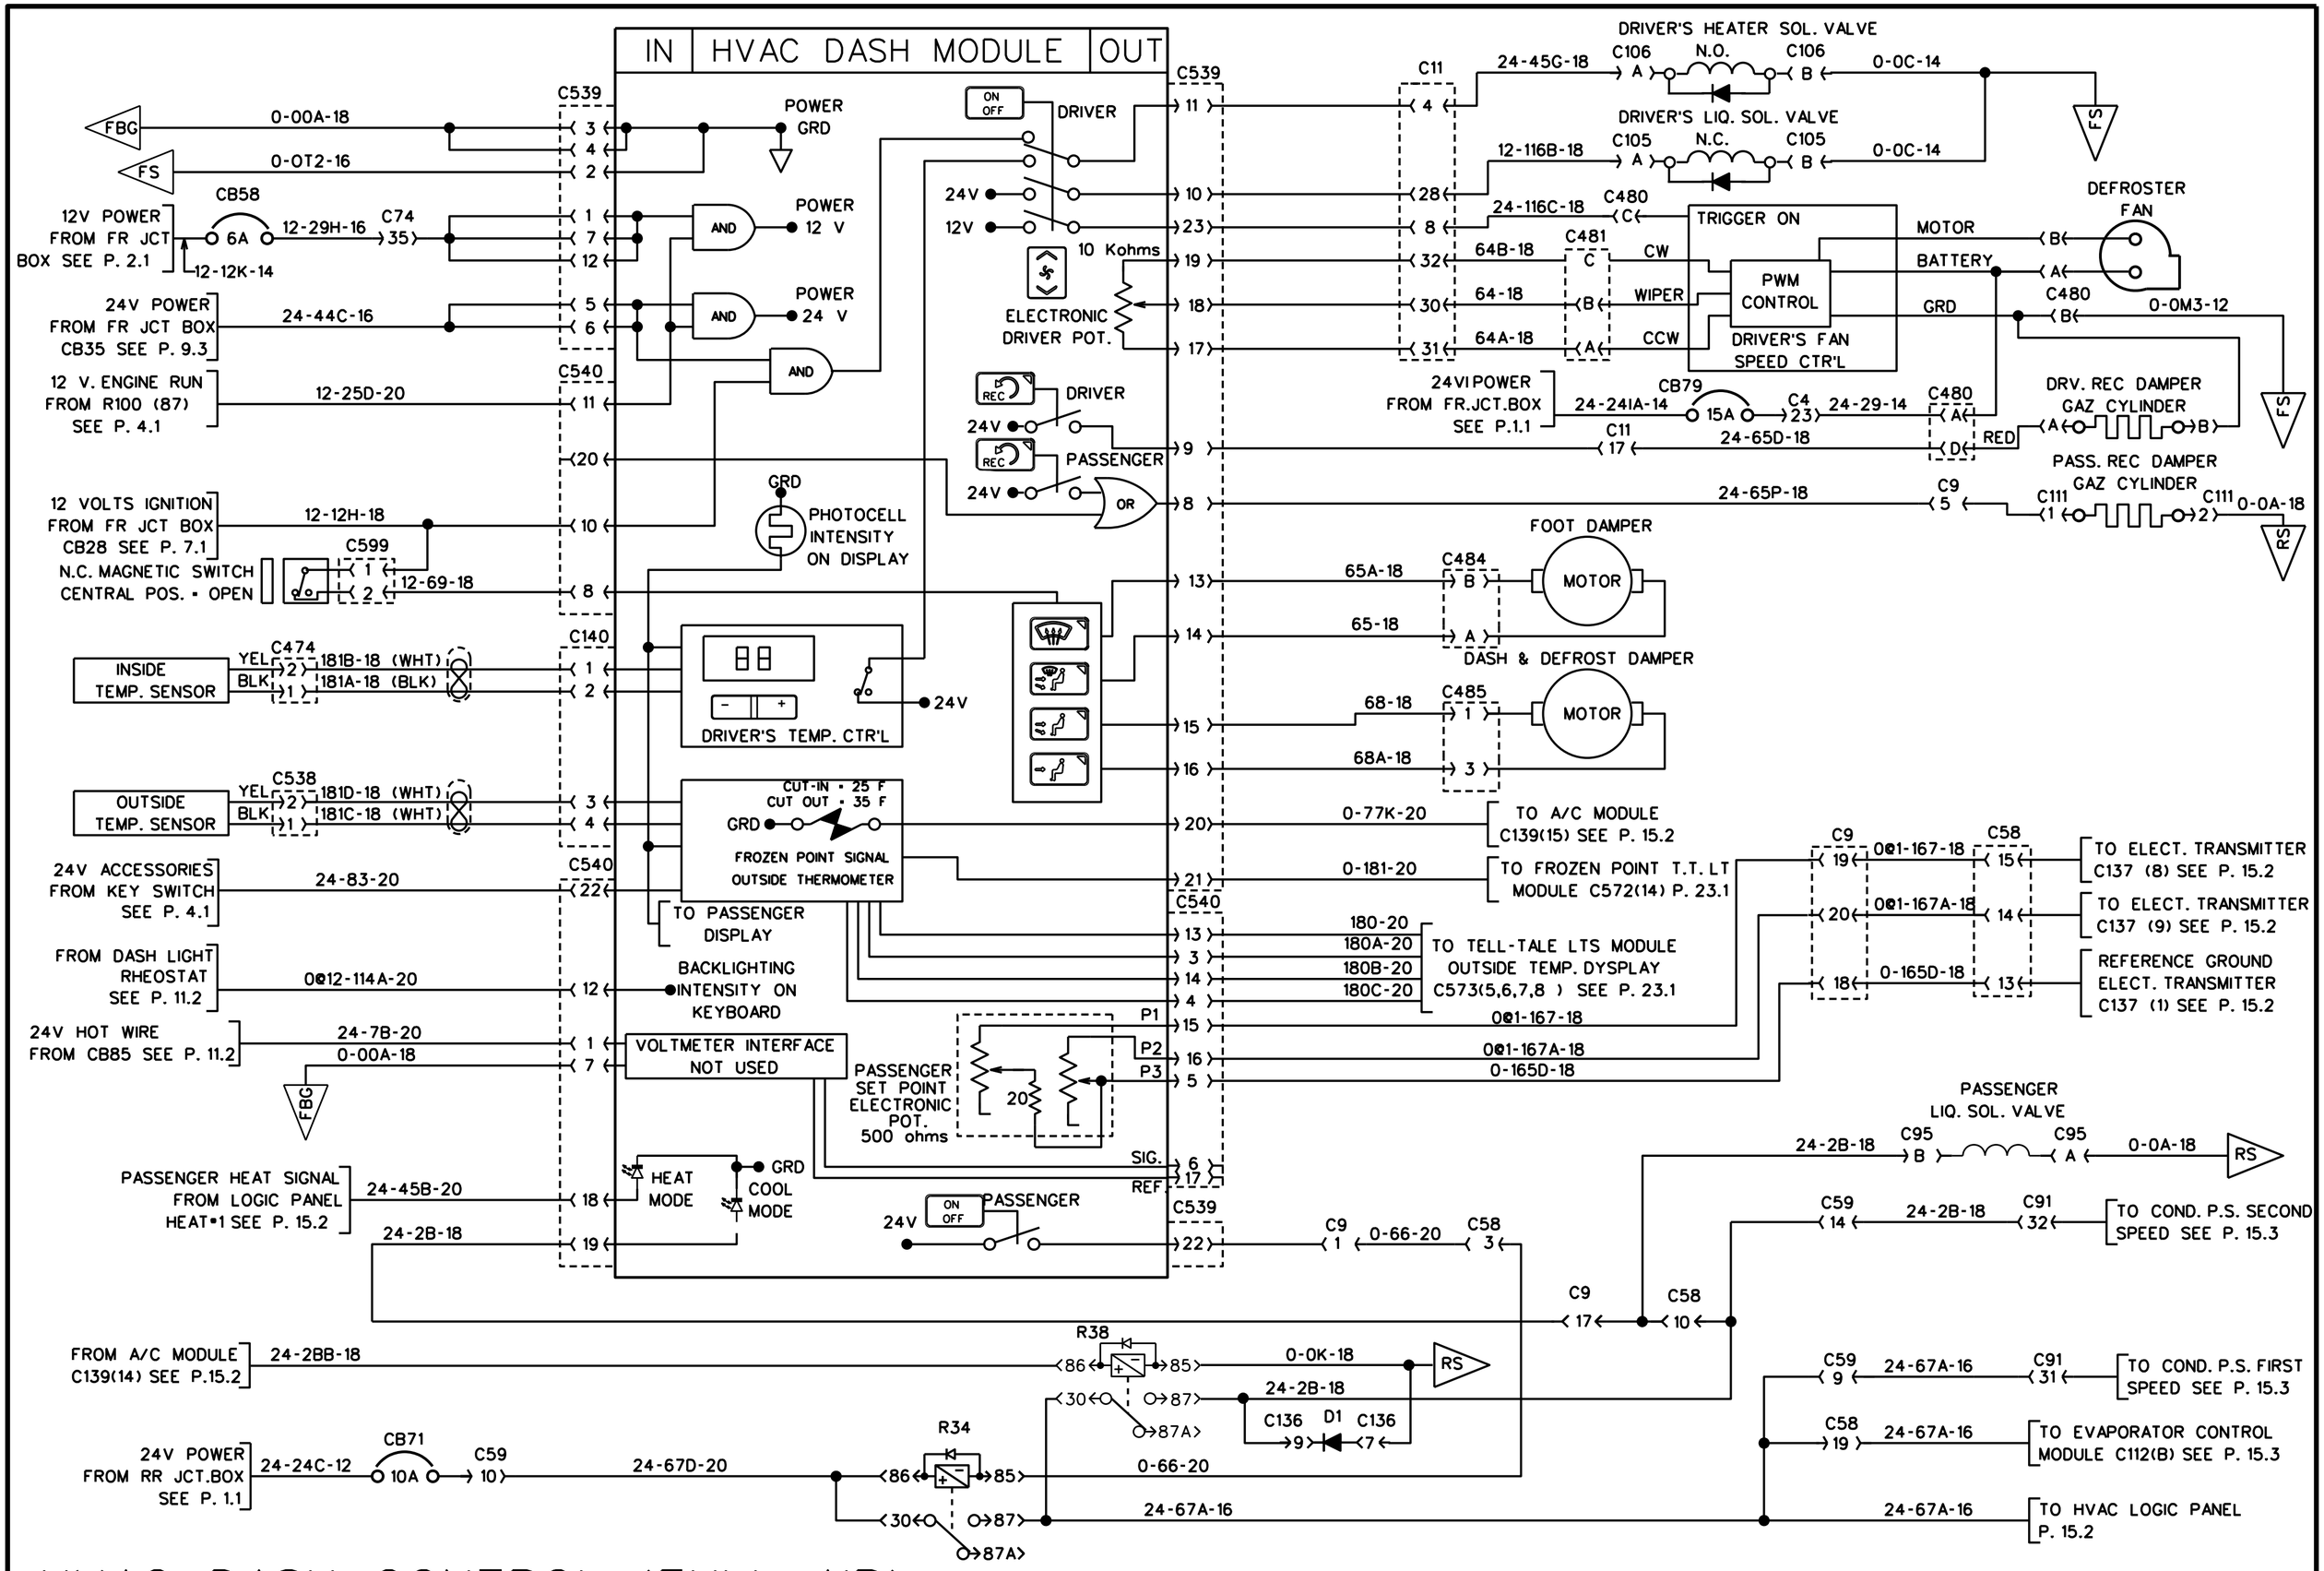

HVAC DASH CONTROL (BUS AIR)

IN | HVAC DASH MODULE | OUT

FBG 0-00A-18 → C539 (3, 4, 5) → GRD

12V HOT WIRE FROM CB 129 FR JCT BOX SEE P. 7.1 → 12-12LX-18 → C539 (10) → C.P.U. MEMORY

12V POWER FROM FR JCT BOX SEE P. 2.1 → CB58 6A → 12-29H-16 → C74 (35) → C539 (8, 9); 12-12K-14

24V POWER FROM FR JCT BOX CB35 SEE P. 9.3 → 24-44C-16 → C539 (7, 6)

12 V. ENGINE RUN FROM R100 (87) SEE P. 4.1 → 12-25D-20 → C540 (21)

12 VOLTS IGNITION FROM FR JCT BOX CB28 SEE P. 7.1 → 12-12H-18 → C539 (22)

N.C. MAGNETIC SWITCH CENTRAL POS. - OPEN → C599 (1, 2) → 12-69-18 → C539 (11)

C539 (8) → AND → C.P.U. PASSENGER

C539 (9) → AND → C.P.U. DRIVER

AND → 24VI

AND → 24VE

C539 (16) ← 24-45G-18 ← C11 (4) ← C106 A — N.O. — C106 B ← 0-0C-14 → FS
DRIVER'S HEATER SOL. VALVE

C539 (19) ← 24-116B-18 ← C11 (28) ← C105 A — N.C. — C105 B ← 0-0C-14 → FS
DRIVER'S LIQ. SOL. VALVE

C539 (22) ← 9.4-116C-18 ← C11 (8) ← C480 C ← TRIGGER ON
C539 (1) ← 64B-18 ← C11 (32) ← C481 C ← CW
C539 (2) ← 3.2Ø8.5-64-18 ← C11 (30) ← C481 B ← WIPER
C539 (13) ← 64A-18 ← C11 (31) ← C481 A ← CCW
PWM CONTROL → DRIVER'S FAN SPEED CTR'L

DEFROSTER FAN
MOTOR → C480 B
BATTERY → C480 A
GRD → C480 B → 0-0M3-12 → FS

24VI POWER FROM FR.JCT.BOX SEE P.1.1 → CB79 15A → C4 (23) → 24-29-14 → C480 A

C539 (15) ← 24-65D-18 ← C11 (17) ← 24-65D-18 ← C480 D ← RED
DRV. REC DAMPER GAZ CYLINDER A — B → FS

C539 (14) ← 24-65P-18 ← 24-65P-18 ← C9 (5)
PASS. REC DAMPER GAZ CYLINDER: C111 (1) — (2) C111 → 0-0A-18 → RS

DRIVER'S RETURN AIR SENSOR → C474 (2, 1) → C11 (19, 20) → 2Ø4-181B-18 (WHT), 0-181A-18 (BLK) → C140 (1, 2)

C140 (18) → DRIVER'S TEMP. CTR'L (Kp=3 Ki=15) ← 24V

C539 (11) ← 65A-18 ← C484 B ← MOTOR
C539 (12) ← 65-18 ← C484 A
FOOT DAMPER

C539 (23) ← 68-18 ← C485 1 ← MOTOR
C539 (24) ← 68A-18 ← C485 3
DASH & DEFROST DAMPER

C11 (1) → 0-77K-20 → NOT USED

C9 (10) → 0-77K-20 → TO A/C MODULE C139(15) SEE P. 15.2

OUTSIDE TEMP. SENSOR → C538 YEL (2), BLK (1) → 181D-18 (WHT), 181C-18 (WHT) → C140 (3, 4)

CUT-IN = 25 F
CUT OUT = 35 F
GRD → FROZEN POINT SIGNAL OUTSIDE THERMOMETER → C539 (21) ← 0-77K-20

24V ACCESSORIES FROM KEY SWITCH SEE P. 4.1 → 24-83-20 → C540 (20)

C539 (17) ← 0-181-20 ← TO FROZEN POINT T.T. LT MODULE C572(14) P. 23.1

C9 (19) ← 0Ø1-167-18 ← C58 (15) → TO ELECT. TRANSMITTER C137 (8) SEE P. 15.2
C9 (20) ← 0Ø1-167A-18 ← C58 (14) → TO ELECT. TRANSMITTER C137 (9) SEE P. 15.2
C9 (18) ← 0-165D-18 ← C58 (13) → REFERENCE GROUND ELECT. TRANSMITTER C137 (1) SEE P. 15.2

TO PASSENGER DISPLAY BACKLIGHTING KEYBOARD

C539 (18) ← GRD ← 180-20
C539 (6) ← DATA ← 180A-20
C539 (17) ← CLK ← 180B-20
C539 (7) ← ENABLE ← 180C-20
TO TELL-TALE LTS MODULE OUTSIDE TEMP. DYSPLAY C573(5,6,7,8) SEE P. 23.1

FROM DASH LIGHT RHEOSTAT SEE P. 11.2 → 0Ø12-114A-20 → C540 (19)

NOT USED: C540 (14, 10, 9, 4)

P1 → 1 ← 0Ø1-167-18
P2 → 2 ← 0Ø1-167A-18
P3 → 3 ← 0-165D-18
PASSENGER SET POINT ELECTRONIC POT. 500 ohms (20)

FBG 0-00A-18 → C540 (5) → ANALOG GROUND

PASSENGER HEAT SIGNAL FROM LOGIC PANEL HEAT•1 SEE P. 15.2 → 24-45B-18 → J2-18 → C540 (16) → HEAT LED
24-2B-18 → J1-18 → C540 (15) → COOL LED → GRD
C541B : C541

24VI → VOLTMETER INTERFACE → SIG. + → C539 (13); REF. - → C539 (12) → GRD

C479 (1) TX, (2) RX, (3) → SERIAL PORT

ON OFF PASSENGER → GRD

PASSENGER LIQ. SOL. VALVE
24-2B-18 → C95 B — C95 A → 0-0A-18 → RS

C59 (14) ← 24-2B-18 ← C91 (32) ← TO COND. P.S. SECOND SPEED SEE P. 15.3

C539 (20) ← C9 (1) ← 0-66-20 ← C58 (3)

C9 (17) ← C58 (10)

FROM A/C MODULE C139(14) SEE P.15.2 → 24-2BB-18 → R38 (86, 85) → 0-0K-18 → RS
R38 (30) → 24-2B-18 → C136 D1 C136 (9, 7) → C58 (10)
R38 (87, 87A)

C59 (9) ← 24-67A-16 ← C91 (31) ← TO COND. P.S. FIRST SPEED SEE P. 15.3

24V POWER FROM RR JCT.BOX SEE P. 1.1 → 24-24C-12 → CB71 10A → C59 (10) → 24-67D-20 → R34 (86, 85)
R34 (30) → 0-66-20 → C58 (19) → 24-67A-16 → TO EVAPORATOR CONTROL MODULE C112(B) SEE P. 15.3
R34 (87, 87A) → 24-67A-16 → C58 (19) → 24-67A-16 → TO HVAC LOGIC PANEL P. 15.2

HVAC DASH CONTROL (BUS AIR)

IN | HVAC DASH MODULE | OUT

C539 | C540 | C479

0-0T5-14 FS
0-0T5-18
12V HOT WIRE FROM CB 129 FR JCT BOX SEE P. 7.1
12-12LX-18
12V POWER FROM FR JCT BOX SEE P. 2.1
CB58 6A 12-29H-16 C74 35
12-12K-14
24V POWER FROM FR JCT BOX CB35 SEE P. 9.3
24-44C-16
12 V. ENGINE RUN FROM R100 (87) SEE P. 4.1
12-25D-20
12 VOLTS IGNITION FROM FR JCT BOX CB28 SEE P. 7.1
12-12H-18
N.C. MAGNETIC SWITCH CENTRAL POS. - OPEN
C599 1 2
12-69-18
DRIVER'S RETURN AIR SENSOR
C474 2 1
2@4-181B-18 (YEL)
0-181A-18 (YEL)
C140 1 2
OUTSIDE TEMP. SENSOR
YEL BLK C538 2 1
181D-18 (CLR)
181C-18 (BLK)
C540 3 4
24V ACCESSORIES FROM KEY SWITCH SEE P. 4.1
24-83-20
C540 20
FROM DASH LIGHT RHEOSTAT SEE P. 11.2
0@12-114A-20
19
14 10 9 4 NOT USED
FS 0-0T5-18
5 ANALOG GROUND
PASSENGER HEAT SIGNAL FROM LOGIC PANEL HEAT-1 SEE P. 15.2
24-45B-18 2 J2-18 16 HEAT LED
24-2B-18 1 J1-18 15 COOL LED
C541B C541
C479 1 2 3 TX RX SERIAL PORT

GRD
C.P.U. MEMORY
AND C.P.U. PASSENGER
AND C.P.U. DRIVER
AND 24VI
AND 24VE
8
GRD PHOTOCELL INTENSITY ON DISPLAY
22
18
11
12
23
24
21
17
PHOTOCELL
DRIVER'S TEMP. CTR'L
Kp=3 Ki=15
24V
CUT-IN - 25 F
CUT OUT - 35 F
GRD FROZEN POINT SIGNAL OUTSIDE THERMOMETER
TO PASSENGER DISPLAY BACKLIGHTING KEYBOARD
GRD 18
DATA 6
CLK 17
ENABLE 7
P1 1
P2 2
P3 3
PASSENGER SET POINT ELECTRONIC POT. 500 ohms
20
24VI
VOLTMETER INTERFACE
SIG. + 13
REF. - 12
GRD
SERIAL PORT
TX RX
GRD

ON OFF DRIVER
24VI
12VI
V.R. 9.4V
N/C 1
PWM CONTROL
2
DRIVER N/C 13
REC
24VI
REC
PASSENGER
24VE
OR
15
14

C539 16 19 22 1 2 13 15 14 18 11 12 23 24 21 17 18 20
C11 4 28 8 32 30 31
C481 C B A
C480 C B A D
C9 19 20 18 5 17 10
C58 15 14 13 10
C484 B A
C485 1 3
C111 1 2
C106 A N.O. B
C105 A N.C. B
C4 23
C91 32 31
C59 14 9
C136 9 7
C10 1 3
C95 B A
C2 1 2
C1 1 2
C3 1 2
C5 1 2
C6 1 2
C7 1 2
C8 1 2
C12 1 2
C13 1 2
C14 1 2
C15 1 2
C16 1 2
C17 1 2
C18 1 2
C19 1 2
C20 1 2
C21 1 2
C22 1 2
C23 1 2
C24 1 2
C25 1 2
C26 1 2
C27 1 2
C28 1 2
C29 1 2
C30 1 2
C31 1 2
C32 1 2
C33 1 2
C34 1 2
C35 1 2
C36 1 2
C37 1 2
C38 1 2
C39 1 2
C40 1 2
C41 1 2
C42 1 2
C43 1 2
C44 1 2
C45 1 2
C46 1 2
C47 1 2
C48 1 2
C49 1 2
C50 1 2
C51 1 2
C52 1 2
C53 1 2
C54 1 2
C55 1 2
C56 1 2
C57 1 2
C58 1 2
C59 1 2
C60 1 2
C61 1 2
C62 1 2
C63 1 2
C64 1 2
C65 1 2
C66 1 2
C67 1 2
C68 1 2
C69 1 2
C70 1 2
C71 1 2
C72 1 2
C73 1 2
C74 1 2
C75 1 2
C76 1 2
C77 1 2
C78 1 2
C79 1 2
C80 1 2
C81 1 2
C82 1 2
C83 1 2
C84 1 2
C85 1 2
C86 1 2
C87 1 2
C88 1 2
C89 1 2
C90 1 2
C91 1 2
C92 1 2
C93 1 2
C94 1 2
C95 1 2
C96 1 2
C97 1 2
C98 1 2
C99 1 2
C100 1 2
C101 1 2
C102 1 2
C103 1 2
C104 1 2
C105 1 2
C106 1 2
C107 1 2
C108 1 2
C109 1 2
C110 1 2
C111 1 2
C112 1 2
C113 1 2
C114 1 2
C115 1 2
C116 1 2
C117 1 2
C118 1 2
C119 1 2
C120 1 2
C121 1 2
C122 1 2
C123 1 2
C124 1 2
C125 1 2
C126 1 2
C127 1 2
C128 1 2
C129 1 2
C130 1 2
C131 1 2
C132 1 2
C133 1 2
C134 1 2
C135 1 2
C136 1 2
C137 1 2
C138 1 2
C139 1 2
C140 1 2
C141 1 2
C142 1 2
C143 1 2
C144 1 2
C145 1 2
C146 1 2
C147 1 2
C148 1 2
C149 1 2
C150 1 2
C151 1 2
C152 1 2
C153 1 2
C154 1 2
C155 1 2
C156 1 2
C157 1 2
C158 1 2
C159 1 2
C160 1 2
C161 1 2
C162 1 2
C163 1 2
C164 1 2
C165 1 2
C166 1 2
C167 1 2
C168 1 2
C169 1 2
C170 1 2
C171 1 2
C172 1 2
C173 1 2
C174 1 2
C175 1 2
C176 1 2
C177 1 2
C178 1 2
C179 1 2
C180 1 2
C181 1 2
C182 1 2
C183 1 2
C184 1 2
C185 1 2
C186 1 2
C187 1 2
C188 1 2
C189 1 2
C190 1 2
C191 1 2
C192 1 2
C193 1 2
C194 1 2
C195 1 2
C196 1 2
C197 1 2
C198 1 2
C199 1 2
C200 1 2
C201 1 2
C202 1 2
C203 1 2
C204 1 2
C205 1 2
C206 1 2
C207 1 2
C208 1 2
C209 1 2
C210 1 2
C211 1 2
C212 1 2
C213 1 2
C214 1 2
C215 1 2
C216 1 2
C217 1 2
C218 1 2
C219 1 2
C220 1 2
C221 1 2
C222 1 2
C223 1 2
C224 1 2
C225 1 2
C226 1 2
C227 1 2
C228 1 2
C229 1 2
C230 1 2
C231 1 2
C232 1 2
C233 1 2
C234 1 2
C235 1 2
C236 1 2
C237 1 2
C238 1 2
C239 1 2
C240 1 2
C241 1 2
C242 1 2
C243 1 2
C244 1 2
C245 1 2
C246 1 2
C247 1 2
C248 1 2
C249 1 2
C250 1 2
C251 1 2
C252 1 2
C253 1 2
C254 1 2
C255 1 2
C256 1 2
C257 1 2
C258 1 2
C259 1 2
C260 1 2
C261 1 2
C262 1 2
C263 1 2
C264 1 2
C265 1 2
C266 1 2
C267 1 2
C268 1 2
C269 1 2
C270 1 2
C271 1 2
C272 1 2
C273 1 2
C274 1 2
C275 1 2
C276 1 2
C277 1 2
C278 1 2
C279 1 2
C280 1 2
C281 1 2
C282 1 2
C283 1 2
C284 1 2
C285 1 2
C286 1 2
C287 1 2
C288 1 2
C289 1 2
C290 1 2
C291 1 2
C292 1 2
C293 1 2
C294 1 2
C295 1 2
C296 1 2
C297 1 2
C298 1 2
C299 1 2
C300 1 2
C301 1 2
C302 1 2
C303 1 2
C304 1 2
C305 1 2
C306 1 2
C307 1 2
C308 1 2
C309 1 2
C310 1 2
C311 1 2
C312 1 2
C313 1 2
C314 1 2
C315 1 2
C316 1 2
C317 1 2
C318 1 2
C319 1 2
C320 1 2
C321 1 2
C322 1 2
C323 1 2
C324 1 2
C325 1 2
C326 1 2
C327 1 2
C328 1 2
C329 1 2
C330 1 2
C331 1 2
C332 1 2
C333 1 2
C334 1 2
C335 1 2
C336 1 2
C337 1 2
C338 1 2
C339 1 2
C340 1 2
C341 1 2
C342 1 2
C343 1 2
C344 1 2
C345 1 2
C346 1 2
C347 1 2
C348 1 2
C349 1 2
C350 1 2
C351 1 2
C352 1 2
C353 1 2
C354 1 2
C355 1 2
C356 1 2
C357 1 2
C358 1 2
C359 1 2
C360 1 2
C361 1 2
C362 1 2
C363 1 2
C364 1 2
C365 1 2
C366 1 2
C367 1 2
C368 1 2
C369 1 2
C370 1 2
C371 1 2
C372 1 2
C373 1 2
C374 1 2
C375 1 2
C376 1 2
C377 1 2
C378 1 2
C379 1 2
C380 1 2
C381 1 2
C382 1 2
C383 1 2
C384 1 2
C385 1 2
C386 1 2
C387 1 2
C388 1 2
C389 1 2
C390 1 2
C391 1 2
C392 1 2
C393 1 2
C394 1 2
C395 1 2
C396 1 2
C397 1 2
C398 1 2
C399 1 2
C400 1 2
C401 1 2
C402 1 2
C403 1 2
C404 1 2
C405 1 2
C406 1 2
C407 1 2
C408 1 2
C409 1 2
C410 1 2
C411 1 2
C412 1 2
C413 1 2
C414 1 2
C415 1 2
C416 1 2
C417 1 2
C418 1 2
C419 1 2
C420 1 2
C421 1 2
C422 1 2
C423 1 2
C424 1 2
C425 1 2
C426 1 2
C427 1 2
C428 1 2
C429 1 2
C430 1 2
C431 1 2
C432 1 2
C433 1 2
C434 1 2
C435 1 2
C436 1 2
C437 1 2
C438 1 2
C439 1 2
C440 1 2
C441 1 2
C442 1 2
C443 1 2
C444 1 2
C445 1 2
C446 1 2
C447 1 2
C448 1 2
C449 1 2
C450 1 2
C451 1 2
C452 1 2
C453 1 2
C454 1 2
C455 1 2
C456 1 2
C457 1 2
C458 1 2
C459 1 2
C460 1 2
C461 1 2
C462 1 2
C463 1 2
C464 1 2
C465 1 2
C466 1 2
C467 1 2
C468 1 2
C469 1 2
C470 1 2
C471 1 2
C472 1 2
C473 1 2
C474 1 2
C475 1 2
C476 1 2
C477 1 2
C478 1 2
C479 1 2
C480 1 2
C481 1 2
C482 1 2
C483 1 2
C484 1 2
C485 1 2
C486 1 2
C487 1 2
C488 1 2
C489 1 2
C490 1 2
C491 1 2
C492 1 2
C493 1 2
C494 1 2
C495 1 2
C496 1 2
C497 1 2
C498 1 2
C499 1 2
C500 1 2
C501 1 2
C502 1 2
C503 1 2
C504 1 2
C505 1 2
C506 1 2
C507 1 2
C508 1 2
C509 1 2
C510 1 2
C511 1 2
C512 1 2
C513 1 2
C514 1 2
C515 1 2
C516 1 2
C517 1 2
C518 1 2
C519 1 2
C520 1 2
C521 1 2
C522 1 2
C523 1 2
C524 1 2
C525 1 2
C526 1 2
C527 1 2
C528 1 2
C529 1 2
C530 1 2
C531 1 2
C532 1 2
C533 1 2
C534 1 2
C535 1 2
C536 1 2
C537 1 2
C538 1 2
C539 1 2
C540 1 2
C541 1 2
C542 1 2
C543 1 2
C544 1 2
C545 1 2
C546 1 2
C547 1 2
C548 1 2
C549 1 2
C550 1 2
C551 1 2
C552 1 2
C553 1 2
C554 1 2
C555 1 2
C556 1 2
C557 1 2
C558 1 2
C559 1 2
C560 1 2
C561 1 2
C562 1 2
C563 1 2
C564 1 2
C565 1 2
C566 1 2
C567 1 2
C568 1 2
C569 1 2
C570 1 2
C571 1 2
C572 1 2
C573 1 2
C574 1 2
C575 1 2
C576 1 2
C577 1 2
C578 1 2
C579 1 2
C580 1 2
C581 1 2
C582 1 2
C583 1 2
C584 1 2
C585 1 2
C586 1 2
C587 1 2
C588 1 2
C589 1 2
C590 1 2
C591 1 2
C592 1 2
C593 1 2
C594 1 2
C595 1 2
C596 1 2
C597 1 2
C598 1 2
C599 1 2
C600 1 2
C601 1 2
C602 1 2
C603 1 2
C604 1 2
C605 1 2
C606 1 2
C607 1 2
C608 1 2
C609 1 2
C610 1 2
C611 1 2
C612 1 2
C613 1 2
C614 1 2
C615 1 2
C616 1 2
C617 1 2
C618 1 2
C619 1 2
C620 1 2
C621 1 2
C622 1 2
C623 1 2
C624 1 2
C625 1 2
C626 1 2
C627 1 2
C628 1 2
C629 1 2
C630 1 2
C631 1 2
C632 1 2
C633 1 2
C634 1 2
C635 1 2
C636 1 2
C637 1 2
C638 1 2
C639 1 2
C640 1 2
C641 1 2
C642 1 2
C643 1 2
C644 1 2
C645 1 2
C646 1 2
C647 1 2
C648 1 2
C649 1 2
C650 1 2
C651 1 2
C652 1 2
C653 1 2
C654 1 2
C655 1 2
C656 1 2
C657 1 2
C658 1 2
C659 1 2
C660 1 2
C661 1 2
C662 1 2
C663 1 2
C664 1 2
C665 1 2
C666 1 2
C667 1 2
C668 1 2
C669 1 2
C670 1 2
C671 1 2
C672 1 2
C673 1 2
C674 1 2
C675 1 2
C676 1 2
C677 1 2
C678 1 2
C679 1 2
C680 1 2
C681 1 2
C682 1 2
C683 1 2
C684 1 2
C685 1 2
C686 1 2
C687 1 2
C688 1 2
C689 1 2
C690 1 2
C691 1 2
C692 1 2
C693 1 2
C694 1 2
C695 1 2
C696 1 2
C697 1 2
C698 1 2
C699 1 2
C700 1 2
C701 1 2
C702 1 2
C703 1 2
C704 1 2
C705 1 2
C706 1 2
C707 1 2
C708 1 2
C709 1 2
C710 1 2
C711 1 2
C712 1 2
C713 1 2
C714 1 2
C715 1 2
C716 1 2
C717 1 2
C718 1 2
C719 1 2
C720 1 2
C721 1 2
C722 1 2
C723 1 2
C724 1 2
C725 1 2
C726 1 2
C727 1 2
C728 1 2
C729 1 2
C730 1 2
C731 1 2
C732 1 2
C733 1 2
C734 1 2
C735 1 2
C736 1 2
C737 1 2
C738 1 2
C739 1 2
C740 1 2
C741 1 2
C742 1 2
C743 1 2
C744 1 2
C745 1 2
C746 1 2
C747 1 2
C748 1 2
C749 1 2
C750 1 2
C751 1 2
C752 1 2
C753 1 2
C754 1 2
C755 1 2
C756 1 2
C757 1 2
C758 1 2
C759 1 2
C760 1 2
C761 1 2
C762 1 2
C763 1 2
C764 1 2
C765 1 2
C766 1 2
C767 1 2
C768 1 2
C769 1 2
C770 1 2
C771 1 2
C772 1 2
C773 1 2
C774 1 2
C775 1 2
C776 1 2
C777 1 2
C778 1 2
C779 1 2
C780 1 2
C781 1 2
C782 1 2
C783 1 2
C784 1 2
C785 1 2
C786 1 2
C787 1 2
C788 1 2
C789 1 2
C790 1 2
C791 1 2
C792 1 2
C793 1 2
C794 1 2
C795 1 2
C796 1 2
C797 1 2
C798 1 2
C799 1 2
C800 1 2
C801 1 2
C802 1 2
C803 1 2
C804 1 2
C805 1 2
C806 1 2
C807 1 2
C808 1 2
C809 1 2
C810 1 2
C811 1 2
C812 1 2
C813 1 2
C814 1 2
C815 1 2
C816 1 2
C817 1 2
C818 1 2
C819 1 2
C820 1 2
C821 1 2
C822 1 2
C823 1 2
C824 1 2
C825 1 2
C826 1 2
C827 1 2
C828 1 2
C829 1 2
C830 1 2
C831 1 2
C832 1 2
C833 1 2
C834 1 2
C835 1 2
C836 1 2
C837 1 2
C838 1 2
C839 1 2
C840 1 2
C841 1 2
C842 1 2
C843 1 2
C844 1 2
C845 1 2
C846 1 2
C847 1 2
C848 1 2
C849 1 2
C850 1 2
C851 1 2
C852 1 2
C853 1 2
C854 1 2
C855 1 2
C856 1 2
C857 1 2
C858 1 2
C859 1 2
C860 1 2
C861 1 2
C862 1 2
C863 1 2
C864 1 2
C865 1 2
C866 1 2
C867 1 2
C868 1 2
C869 1 2
C870 1 2
C871 1 2
C872 1 2
C873 1 2
C874 1 2
C875 1 2
C876 1 2
C877 1 2
C878 1 2
C879 1 2
C880 1 2
C881 1 2
C882 1 2
C883 1 2
C884 1 2
C885 1 2
C886 1 2
C887 1 2
C888 1 2
C889 1 2
C890 1 2
C891 1 2
C892 1 2
C893 1 2
C894 1 2
C895 1 2
C896 1 2
C897 1 2
C898 1 2
C899 1 2
C900 1 2
C901 1 2
C902 1 2
C903 1 2
C904 1 2
C905 1 2
C906 1 2
C907 1 2
C908 1 2
C909 1 2
C910 1 2
C911 1 2
C912 1 2
C913 1 2
C914 1 2
C915 1 2
C916 1 2
C917 1 2
C918 1 2
C919 1 2
C920 1 2
C921 1 2
C922 1 2
C923 1 2
C924 1 2
C925 1 2
C926 1 2
C927 1 2
C928 1 2
C929 1 2
C930 1 2
C931 1 2
C932 1 2
C933 1 2
C934 1 2
C935 1 2
C936 1 2
C937 1 2
C938 1 2
C939 1 2
C940 1 2
C941 1 2
C942 1 2
C943 1 2
C944 1 2
C945 1 2
C946 1 2
C947 1 2
C948 1 2
C949 1 2
C950 1 2
C951 1 2
C952 1 2
C953 1 2
C954 1 2
C955 1 2
C956 1 2
C957 1 2
C958 1 2
C959 1 2
C960 1 2
C961 1 2
C962 1 2
C963 1 2
C964 1 2
C965 1 2
C966 1 2
C967 1 2
C968 1 2
C969 1 2
C970 1 2
C971 1 2
C972 1 2
C973 1 2
C974 1 2
C975 1 2
C976 1 2
C977 1 2
C978 1 2
C979 1 2
C980 1 2
C981 1 2
C982 1 2
C983 1 2
C984 1 2
C985 1 2
C986 1 2
C987 1 2
C988 1 2
C989 1 2
C990 1 2
C991 1 2
C992 1 2
C993 1 2
C994 1 2
C995 1 2
C996 1 2
C997 1 2
C998 1 2
C999 1 2

DRIVER'S HEATER SOL. VALVE
C106 A N.O. C106 B 0-0C-14
DRIVER'S LIQ. SOL. VALVE
C105 A N.C. C105 B 0-0C-14
24-45G-18
24-116B-18
9.4-116C-18
64B-18
64-18
64A-18
3.2@8.5-64-18
TRIGGER ON
PWM CONTROL
DRIVER'S FAN SPEED CTR'L
MOTOR
BATTERY
GRD
CW
WIPER
CCW
DEFROSTER FAN
C480 B 0-0M3-12
24VI POWER FROM FR.JCT.BOX SEE P.1.1
CB79 15A C4 23 24-29-14 C480 A
24-24IA-14
C11 17 24-65D-18
RED
DRV. REC DAMPER GAZ CYLINDER
PASS. REC DAMPER GAZ CYLINDER
C111 1 2 0-0A-18
24-65P-18
C9 5
FOOT DAMPER
65A-18
65-18
MOTOR
DASH & DEFROST DAMPER
68-18
68A-18
C11 1 0-77K-20 NOT USED
C9 10 0-77K-20 TO A/C MODULE C139(15) SEE P. 15.2
0-181-20 TO FROZEN POINT T.T. LT MODULE C572(14) P. 23.1
C9 19 0@1-167-18 C58 15 TO ELECT. TRANSMITTER C137 (8) SEE P. 15.2
20 0@1-167A-18 14 TO ELECT. TRANSMITTER C137 (9) SEE P. 15.2
18 0-165D-18 13 REFERENCE GROUND ELECT. TRANSMITTER C137 (1) SEE P. 15.2
180-20 180A-20 180B-20 180C-20 TO TELL-TALE LTS MODULE OUTSIDE TEMP. DYSPLAY C573(5,6,7,8) SEE P. 23.1
0@1-167-18
0@1-167A-18
0-165D-18
PASSENGER LIQ. SOL. VALVE
24-2B-18 C95 B C95 A 0-0A-18 RS
C59 14 24-2B-18 C91 32 TO COND. P.S. SECOND SPEED SEE P. 15.3
C59 9 24-67A-16 C91 31 TO COND. P.S. FIRST SPEED SEE P. 15.3
C58 19 24-67A-16 TO EVAPORATOR CONTROL MODULE C112(B) SEE P. 15.3
24-67A-16 TO HVAC LOGIC PANEL P. 15.2
C9 17 C58 10
0-66-20 C58 3
ON OFF PASSENGER
GRD C539 20
FROM A/C MODULE C139(14) SEE P.15.2
24-2BB-18
R38 86 85 0-0K-18 RS
30 87 87A
24-2B-18
C136 D1 C136 9 7
R34 86 85 0-66-20
30 87 87A 24-67A-16
24V POWER FROM RR JCT.BOX SEE P. 1.1
24-24C-12 CB71 10A C59 10
24-67D-20

HVAC DASH CONTROL (BUS AIR)

IN | HVAC DASH MODULE | OUT

C539

0-0T5-14 FS
0-0T5-18
12V HOT WIRE FROM CB 129 FR JCT BOX SEE P. 7.1 — 12-12LX-18
12V POWER FROM FR JCT BOX SEE P. 2.1 — CB58 6A — 12-29H-16 — C74 35 — 12-12K-14
24V POWER FROM FR JCT BOX CB35 SEE P. 9.3 — 24-44C-16
12 V. ENGINE RUN FROM R100 (87) SEE P. 4.1 — 12-25D-20
12 VOLTS IGNITION FROM FR JCT BOX CB28 SEE P. 7.1 — 12-12H-18
N.C. MAGNETIC SWITCH CENTRAL POS. - OPEN — C599 — 12-69-18
DRIVER'S RETURN AIR SENSOR — C474 — 2@4-181B-18 (YEL) — 0-181A-18 (YEL)
OUTSIDE TEMP. SENSOR — C538 YEL BLK — 181D-18 (CLR) — 181C-18 (BLK)
24V ACCESSORIES FROM KEY SWITCH SEE P. 4.1 — 24-83-20
FROM DASH LIGHT RHEOSTAT SEE P. 11.2 — 0@12-114A-20
0-0T5-18 FS
PASSENGER HEAT SIGNAL FROM LOGIC PANEL HEAT-1 SEE P. 15.2 — 24-45B-18 — J2-18 — 24-2B-18 — J1-18 — C541B C541

C539 pins: 3, 4, 5, 10, 8, 9, 7, 6, 8, 22, 18, 11, 12, 23, 24, 21, 17, 18, 6, 17, 7, 1, 2, 3, 13, 12, 20

C540 pins: 21, 20, 19, 14, 10, 9, 4, 5, 16, 15

C140 pins: 1, 2, 3, 4

C479 pins: 1, 2, 3

GRD
C.P.U. MEMORY
C.P.U. PASSENGER
C.P.U. DRIVER
24VI
24VE
PHOTOCELL INTENSITY ON DISPLAY
DRIVER'S TEMP. CTR'L — Kp=3 Ki=15 — 24V
CUT-IN = 25 F
CUT OUT = 35 F
FROZEN POINT SIGNAL
OUTSIDE THERMOMETER
TO PASSENGER DISPLAY BACKLIGHTING KEYBOARD
NOT USED
ANALOG GROUND
HEAT LED
COOL LED
TX RX SERIAL PORT
ON OFF DRIVER
24VI 12VI V.R. 9.4V
PWM CONTROL
DRIVER N/C
REC
PASSENGER
OR
VOLTMETER INTERFACE — SIG. + — REF. -
PASSENGER SET POINT ELECTRONIC POT. 500 ohms — P1 P2 P3 — 20
ON OFF PASSENGER

C539 pins: 16, 19, 22, 1 N/C, 2, 13 DRIVER N/C, 15, 14, 18, 11, 12, 23, 24, 21, 17, 18, 6, 17, 7, 1, 2, 3, 13, 12, 20

C11 pins: 4, 28, 8, 32, 30, 31, 17

C480 pins: C, B, A, B, A, B, A, D

C481 pins: C, B, A

C484 pins: B, A

C485 pins: 1, 3

C9 pins: 5, 19, 20, 18, 10, 14, 17

C58 pins: 15, 14, 13, 3, 10

C59 pins: 14, 9, 19

C91 pins: 32, 31

C111 pins: 1, 2

C4 pins: 23

C105 pins: A, B

C106 pins: A, B

C95 pins: B, A

C136 pins: 9, 7

R38 pins: 86, 85, 30, 87, 87A

R34 pins: 86, 85, 30, 87, 87A

24-45G-18 — C106 N.O. C106 — DRIVER'S HEATER SOL. VALVE — 0-0C-14 — FS
24-116B-18 — C105 N.C. C105 — DRIVER'S LIQ. SOL. VALVE — 0-0C-14 — FS
24-116B-18
9.4-116C-18 — C480 C
64B-18 — C481 C — CW
64-18 — B — WIPER
64A-18 — A — CCW
TRIGGER ON
PWM CONTROL
DRIVER'S FAN SPEED CTR'L
MOTOR — B — DEFROSTER FAN
BATTERY — A
GRD — C480 B — 0-0M3-12 — FS
3.2@8.5-64-18
24VI POWER FROM FR.JCT.BOX SEE P.1.1 — CB79 15A — 24-24IA-14 — C4 23 — 24-29-14 — C480 A — DRV. REC DAMPER GAZ CYLINDER — RED
24-65D-18 — C11 17 — 24-65D-18 — C480 D
24-65P-18 — 24-65P-18 — C9 5 — PASS. REC DAMPER GAZ CYLINDER — C111 1 — C111 2 — 0-0A-18 — RS
FOOT DAMPER — MOTOR
65A-18 — C484 B — MOTOR
65-18 — A — DASH & DEFROST DAMPER
68-18 — C485 1 — MOTOR
68A-18 — 3
0-77K-20 — C11 1 — NOT USED
0-77K-20 — C9 10 — TO A/C MODULE C139(15) SEE P. 15.2
0-181-20 — TO FROZEN POINT T.T. LT MODULE C572(14) P. 23.1
GRD — 180-20
DATA — 180A-20
CLK — 180B-20
ENABLE — 180C-20
TO TELL-TALE LTS MODULE OUTSIDE TEMP. DYSPLAY C573(5,6,7,8) SEE P. 23.1
0@1-167-18 — C9 19 — C58 15 — TO ELECT. TRANSMITTER C137 (8) SEE P. 15.2
0@1-167A-18 — C9 20 — C58 14 — TO ELECT. TRANSMITTER C137 (9) SEE P. 15.2
0-165D-18 — C9 18 — C58 13 — REFERENCE GROUND ELECTRIC. TRANSMITTER C137 (1) SEE P. 15.2
0@1-167-18
0@1-167A-18
0-165D-18
PASSENGER LIQ. SOL. VALVE — 24-2B-18 — C95 B — C95 A — 0-0A-18 — RS
C59 14 — 24-2B-18 — C91 32 — TO COND. P.S. SECOND SPEED SEE P. 15.3
C59 9 — 24-67A-16 — C91 31 — TO COND. P.S. FIRST SPEED SEE P. 15.3
C58 19 — 24-67A-16 — TO EVAPORATOR CONTROL MODULE C112(B) SEE P. 15.3
24-67A-16 — TO HVAC LOGIC PANEL P. 15.2
C539 20 — C9 1 — 0-66-20 — C58 3
C9 17 — C58 10
FROM A/C MODULE C139(14) SEE P.15.2 — 24-2BB-18
0-0K-18 — RS
24-2B-18
C136 D1 C136 — 9 — 7
24V POWER FROM RR JCT.BOX SEE P. 1.1 — 24-24C-12 — CB71 10A — C59 10 — 24-67D-20
0-66-20
24-67A-16

HVAC DASH CONTROL (FULL AIR)

IN | HVAC DASH MODULE | OUT

C539 | C540 | C479 | C140 | C538 | C599 | C474 | C484 | C485 | C480 | C481 | C11 | C9 | C58 | C59 | C91 | C95 | C111 | C106 | C105 | C74 | C541 | C136

0-0T5-14 | 0-0T5-18 | 12V HOT WIRE FROM CB 129 FR JCT BOX SEE P. 7.1 | 12-12LX-18 | 12V POWER FROM FR JCT BOX SEE P. 2.1 | CB58 6A | 12-29H-16 | 12-12K-14 | 24V POWER FROM FR JCT BOX CB35 SEE P. 9.3 | 24-44C-16 | 12 V. ENGINE RUN FROM R100 (87) SEE P. 4.1 | 12-25D-20 | 12 VOLTS IGNITION FROM FR JCT BOX CB28 SEE P. 7.1 | 12-12H-18 | N.C. MAGNETIC SWITCH CENTRAL POS. - OPEN | 12-69-18 | DRIVER'S RETURN AIR SENSOR | 2@4-181B-18 (YEL) | 0-181A-18 (YEL) | OUTSIDE TEMP. SENSOR | YEL | BLK | 181D-18 (CLR) | 181C-18 (BLK) | 24V ACCESSORIES FROM KEY SWITCH SEE P. 4.1 | 24-83-20 | FROM DASH LIGHT RHEOSTAT SEE P. 11.2 | 0@12-114A-20 | NOT USED | PASSENGER HEAT SIGNAL FROM LOGIC PANEL HEAT-1 SEE P. 15.2 | 24-45B-18 | J2-18 | 24-2B-18 | J1-18 | C541B | C541 | TX | RX | SERIAL PORT

GRD | C.P.U. MEMORY | C.P.U. PASSENGER | C.P.U. DRIVER | 24VI | 24VE | AND | PHOTOCELL INTENSITY ON DISPLAY | DRIVER'S TEMP. CTR'L | Kp-3 Ki-15 | 24V | CUT IN - 35 F | CUT OUT- 25 F | FROZEN POINT SIGNAL | OUTSIDE THERMOMETER | TO PASSENGER DISPLAY | BACKLIGHTING KEYBOARD | NOT USED | ANALOG GROUND | HEAT LED | COOL LED | VOLTMETER INTERFACE | SIG. + | REF. - | SERIAL PORT | ON OFF | DRIVER | PASSENGER | PWM CONTROL | V.R. 9.4V | N/C | OR | REC | P1 | P2 | P3 | 20 | PASSENGER SET POINT ELECTRONIC POT. 500 ohms

DRIVER'S HEATER SOL. VALVE | C106 N.O. C106 | 24-45G-18 | 0-0C-14 | DRIVER'S LIQ. SOL. VALVE | C105 N.C. C105 | 24-116B-18 | 0-0C-14 | FS

DEFROSTER FAN | MOTOR | BATTERY | GRD | 0-0M3-12 | TRIGGER ON | PWM CONTROL | DRIVER'S FAN SPEED CTR'L | CW | WIPER | CCW | 9.4-116C-18 | 64B-18 | 64-18 | 64A-18 | 3.2@8.5-64-18

24VI POWER FROM FR.JCT.BOX SEE P.1.1 | CB79 15A | 24-24IA-14 | C4 23 | 24-29-14 | DRV. REC DAMPER GAZ CYLINDER | RED | 24-65D-18 | 24-65P-18 | PASS. REC DAMPER GAZ CYLINDER | 0-0A-18 | RS

FOOT DAMPER | MOTOR | 65A-18 | 65-18 | DASH & DEFROST DAMPER | 68-18 | 68A-18 | 0-77K-20 | NOT USED | TO A/C MODULE C139(15) SEE P. 15.2

TO FROZEN POINT T.T. LT MODULE C572(14) P. 23.1 | 0-181-20

TO TELL-TALE LTS MODULE OUTSIDE TEMP. DYSPLAY C573(5,6,7,8) SEE P. 23.1 | 180-20 | 180A-20 | 180B-20 | 180C-20 | GRD | DATA | CLK | ENABLE

TO ELECT. TRANSMITTER C137 (8) SEE P. 15.2 | 0@1-167-18
TO ELECT. TRANSMITTER C137 (9) SEE P. 15.2 | 0@1-167A-18
REFERENCE GROUND ELECT. TRANSMITTER C137 (1) SEE P. 15.2 | 0-165D-18

PASSENGER LIQ. SOL. VALVE | 24-2B-18 | 0-0A-18 | RS

TO COND. P.S. SECOND SPEED SEE P. 15.3 | 24-2B-18
TO COND. P.S. FIRST SPEED SEE P. 15.3 | 24-67A-16
TO EVAPORATOR RELAY R50 SEE P.15.3 | 24-67A-18
TO HVAC LOGIC PANEL P. 15.2 | 24-67A-18

FROM A/C MODULE C139(14) SEE P.15.2 | 24-2BB-18 | R38 | 0-0K-18 | 24-2B-20 | C136 D1 C136

24V POWER FROM RR JCT.BOX SEE P. 1.1 | CB71 10A | 24-24C-12 | 24-67D-20 | R34 | 0-66-20 | 24-67A-20

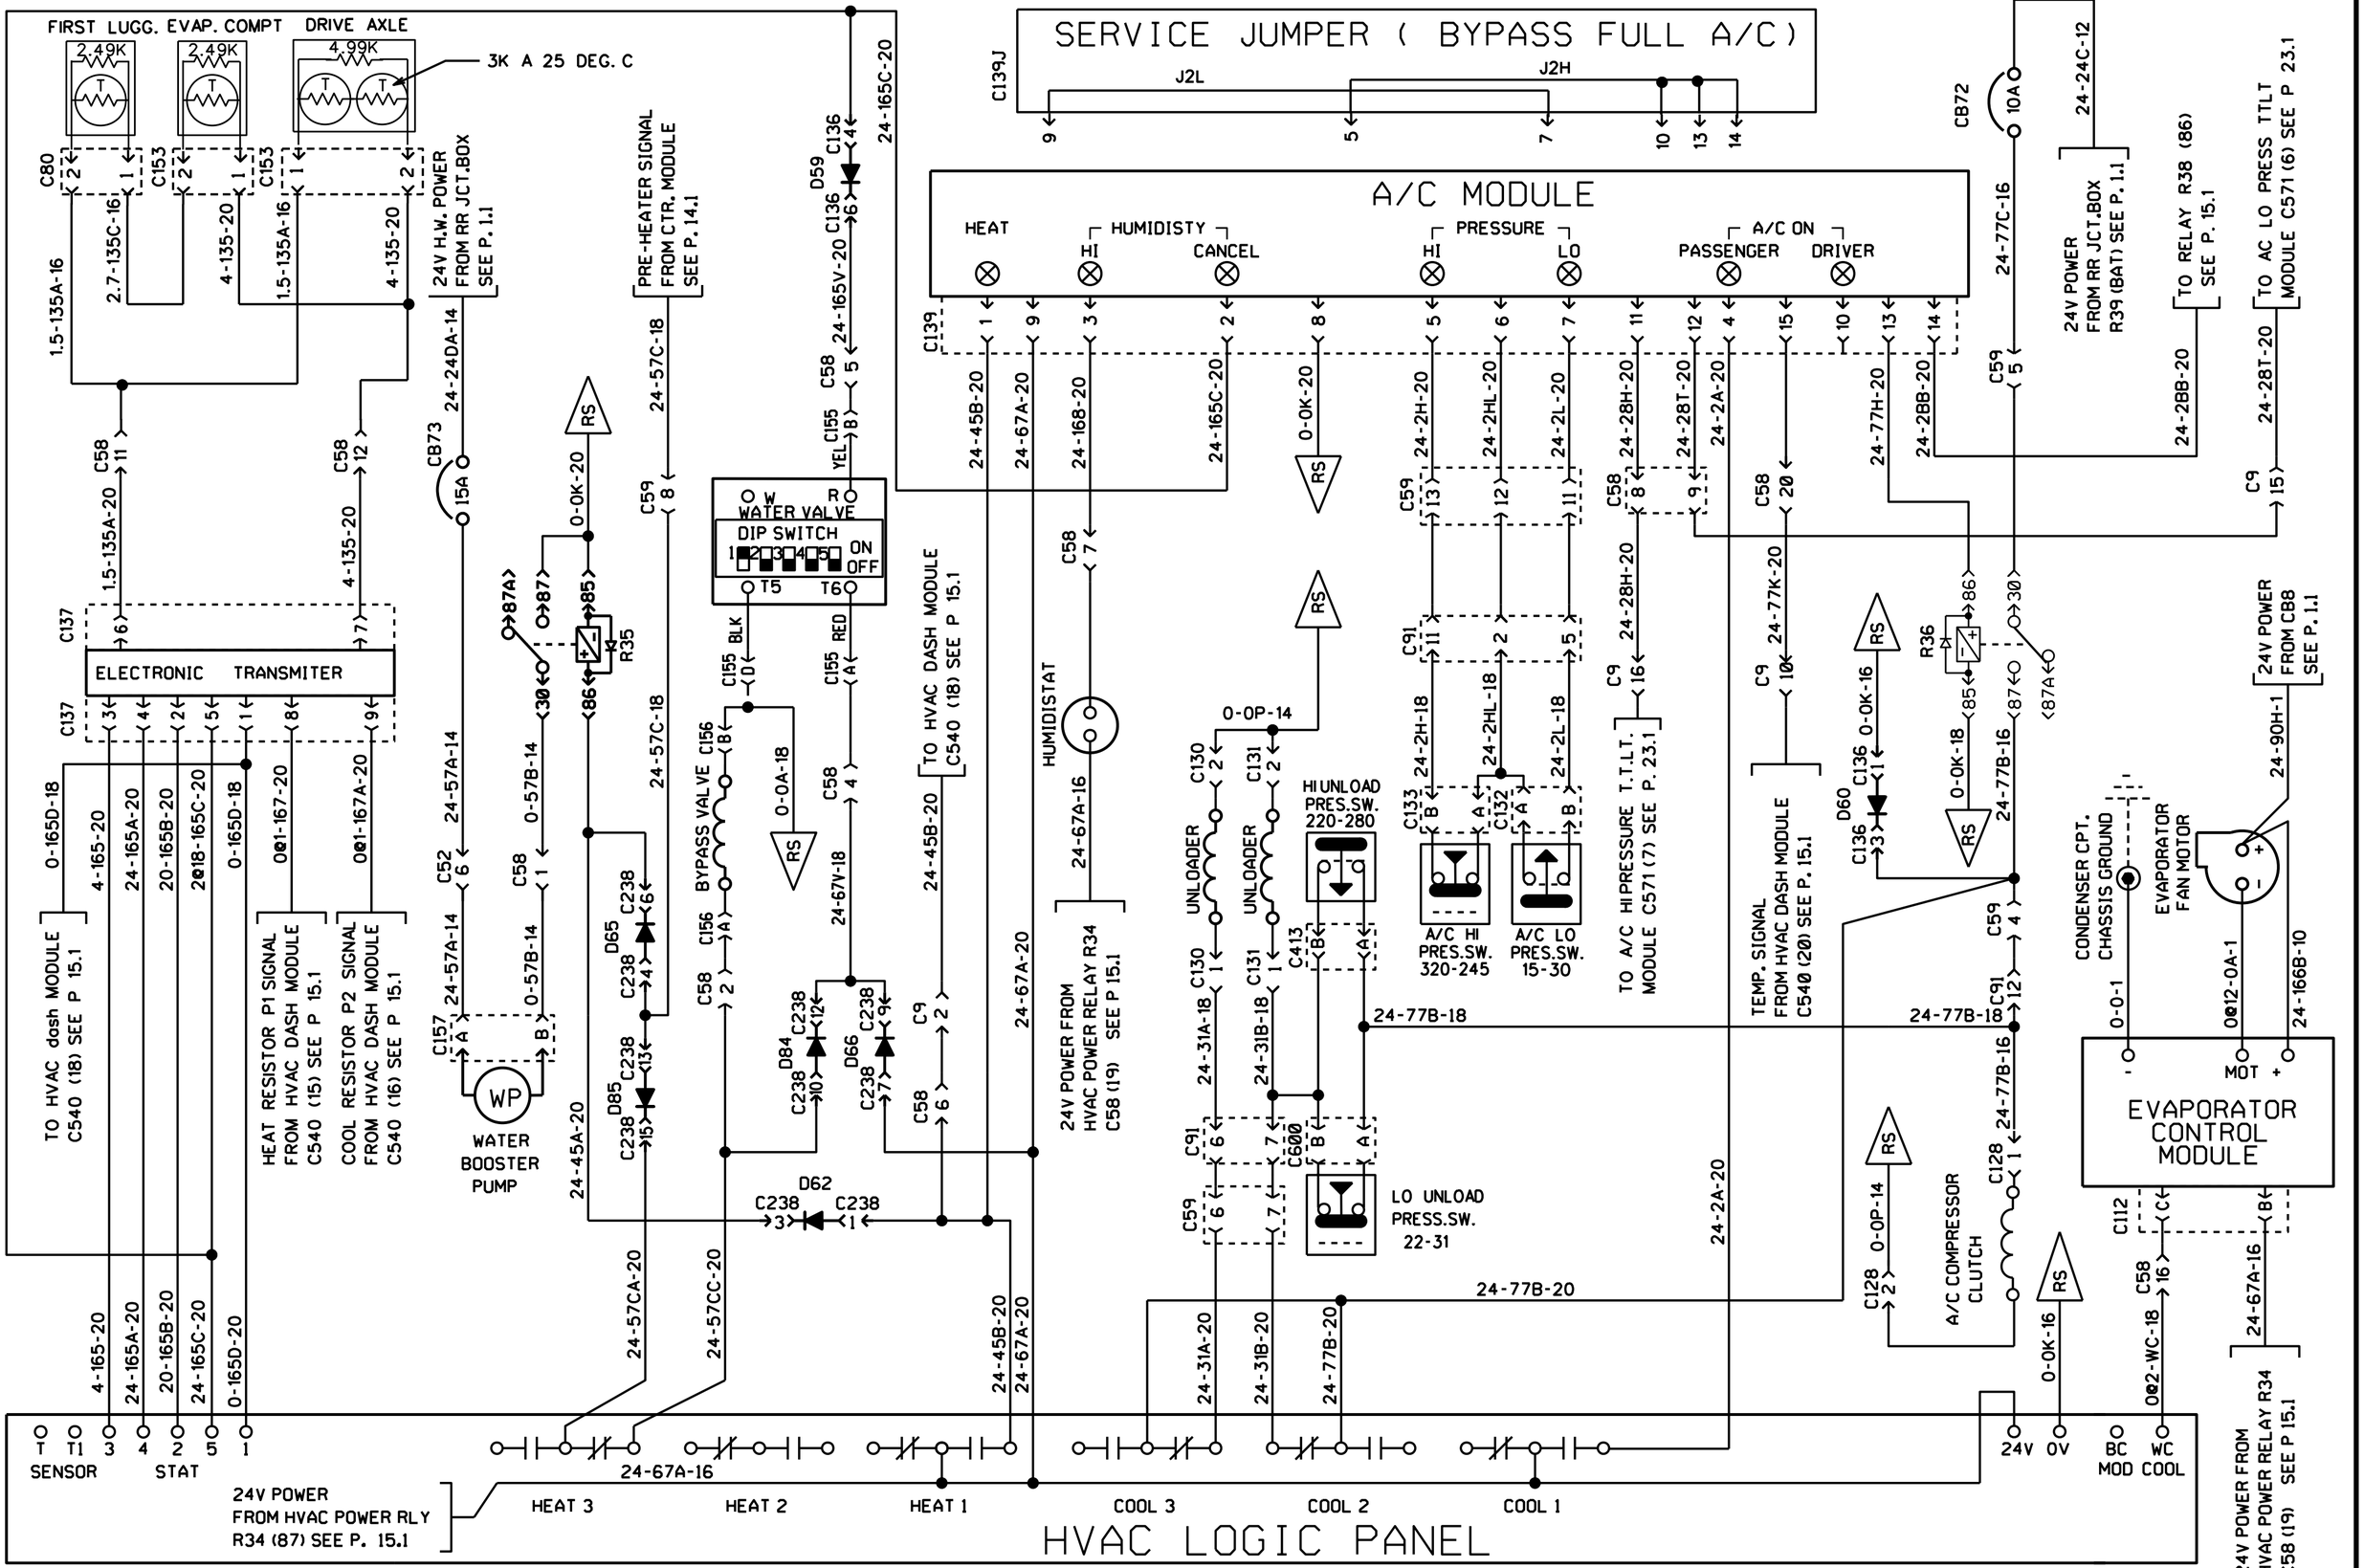
FIRST LUGG. EVAP. COMPT
DRIVE AXLE
2.49K
2.49K
4.99K
3K A 25 DEG. C
SERVICE JUMPER (BYPASS FULL A/C)
J2L
J2H
A/C MODULE
HEAT
HUMIDISTY
HI
CANCEL
PRESSURE
HI
LO
A/C ON
PASSENGER
DRIVER
ELECTRONIC TRANSMITER
WATER VALVE
DIP SWITCH
ON
OFF
T5
T6
HUMIDISTAT
WATER BOOSTER PUMP
BYPASS VALVE
HI UNLOAD PRES.SW. 220-280
A/C HI PRES.SW. 320-245
A/C LO PRES.SW. 15-30
LO UNLOAD PRESS.SW. 22-31
UNLOADER
UNLOADER
EVAPORATOR CONTROL MODULE
CONDENSER CPT. CHASSIS GROUND
EVAPORATOR FAN MOTOR
A/C COMPRESSOR CLUTCH
TO HVAC DASH MODULE C540 (18) SEE P 15.1
HEAT RESISTOR P1 SIGNAL FROM HVAC DASH MODULE C540 (15) SEE P 15.1
COOL RESISTOR P2 SIGNAL FROM HVAC DASH MODULE C540 (16) SEE P 15.1
24V H.W. POWER FROM RR JCT.BOX SEE P. 1.1
PRE-HEATER SIGNAL FROM CTR. MODULE SEE P. 14.1
24V POWER FROM HVAC POWER RELAY R34 C58 (19) SEE P 15.1
TO HVAC DASH MODULE C540 (18) SEE P 15.1
TEMP. SIGNAL FROM HVAC DASH MODULE C540 (20) SEE P. 15.1
TO A/C HIPRESSURE T.T.L.T. MODULE C571 (7) SEE P. 23.1
24V POWER FROM RR JCT.BOX R39 (BAT) SEE P. 1.1
TO RELAY R38 (86) SEE P. 15.1
TO AC LO PRESS TTLT MODULE C571 (6) SEE P 23.1
24V POWER FROM CB8 SEE P. 1.1
24V POWER FROM HVAC POWER RLY R34 (87) SEE P. 15.1
24V POWER FROM HVAC POWER RELAY R34 C58 (19) SEE P 15.1
SENSOR
STAT
HEAT 3
HEAT 2
HEAT 1
COOL 3
COOL 2
COOL 1
MOD COOL
HVAC LOGIC PANEL

HVAC SYSTEM

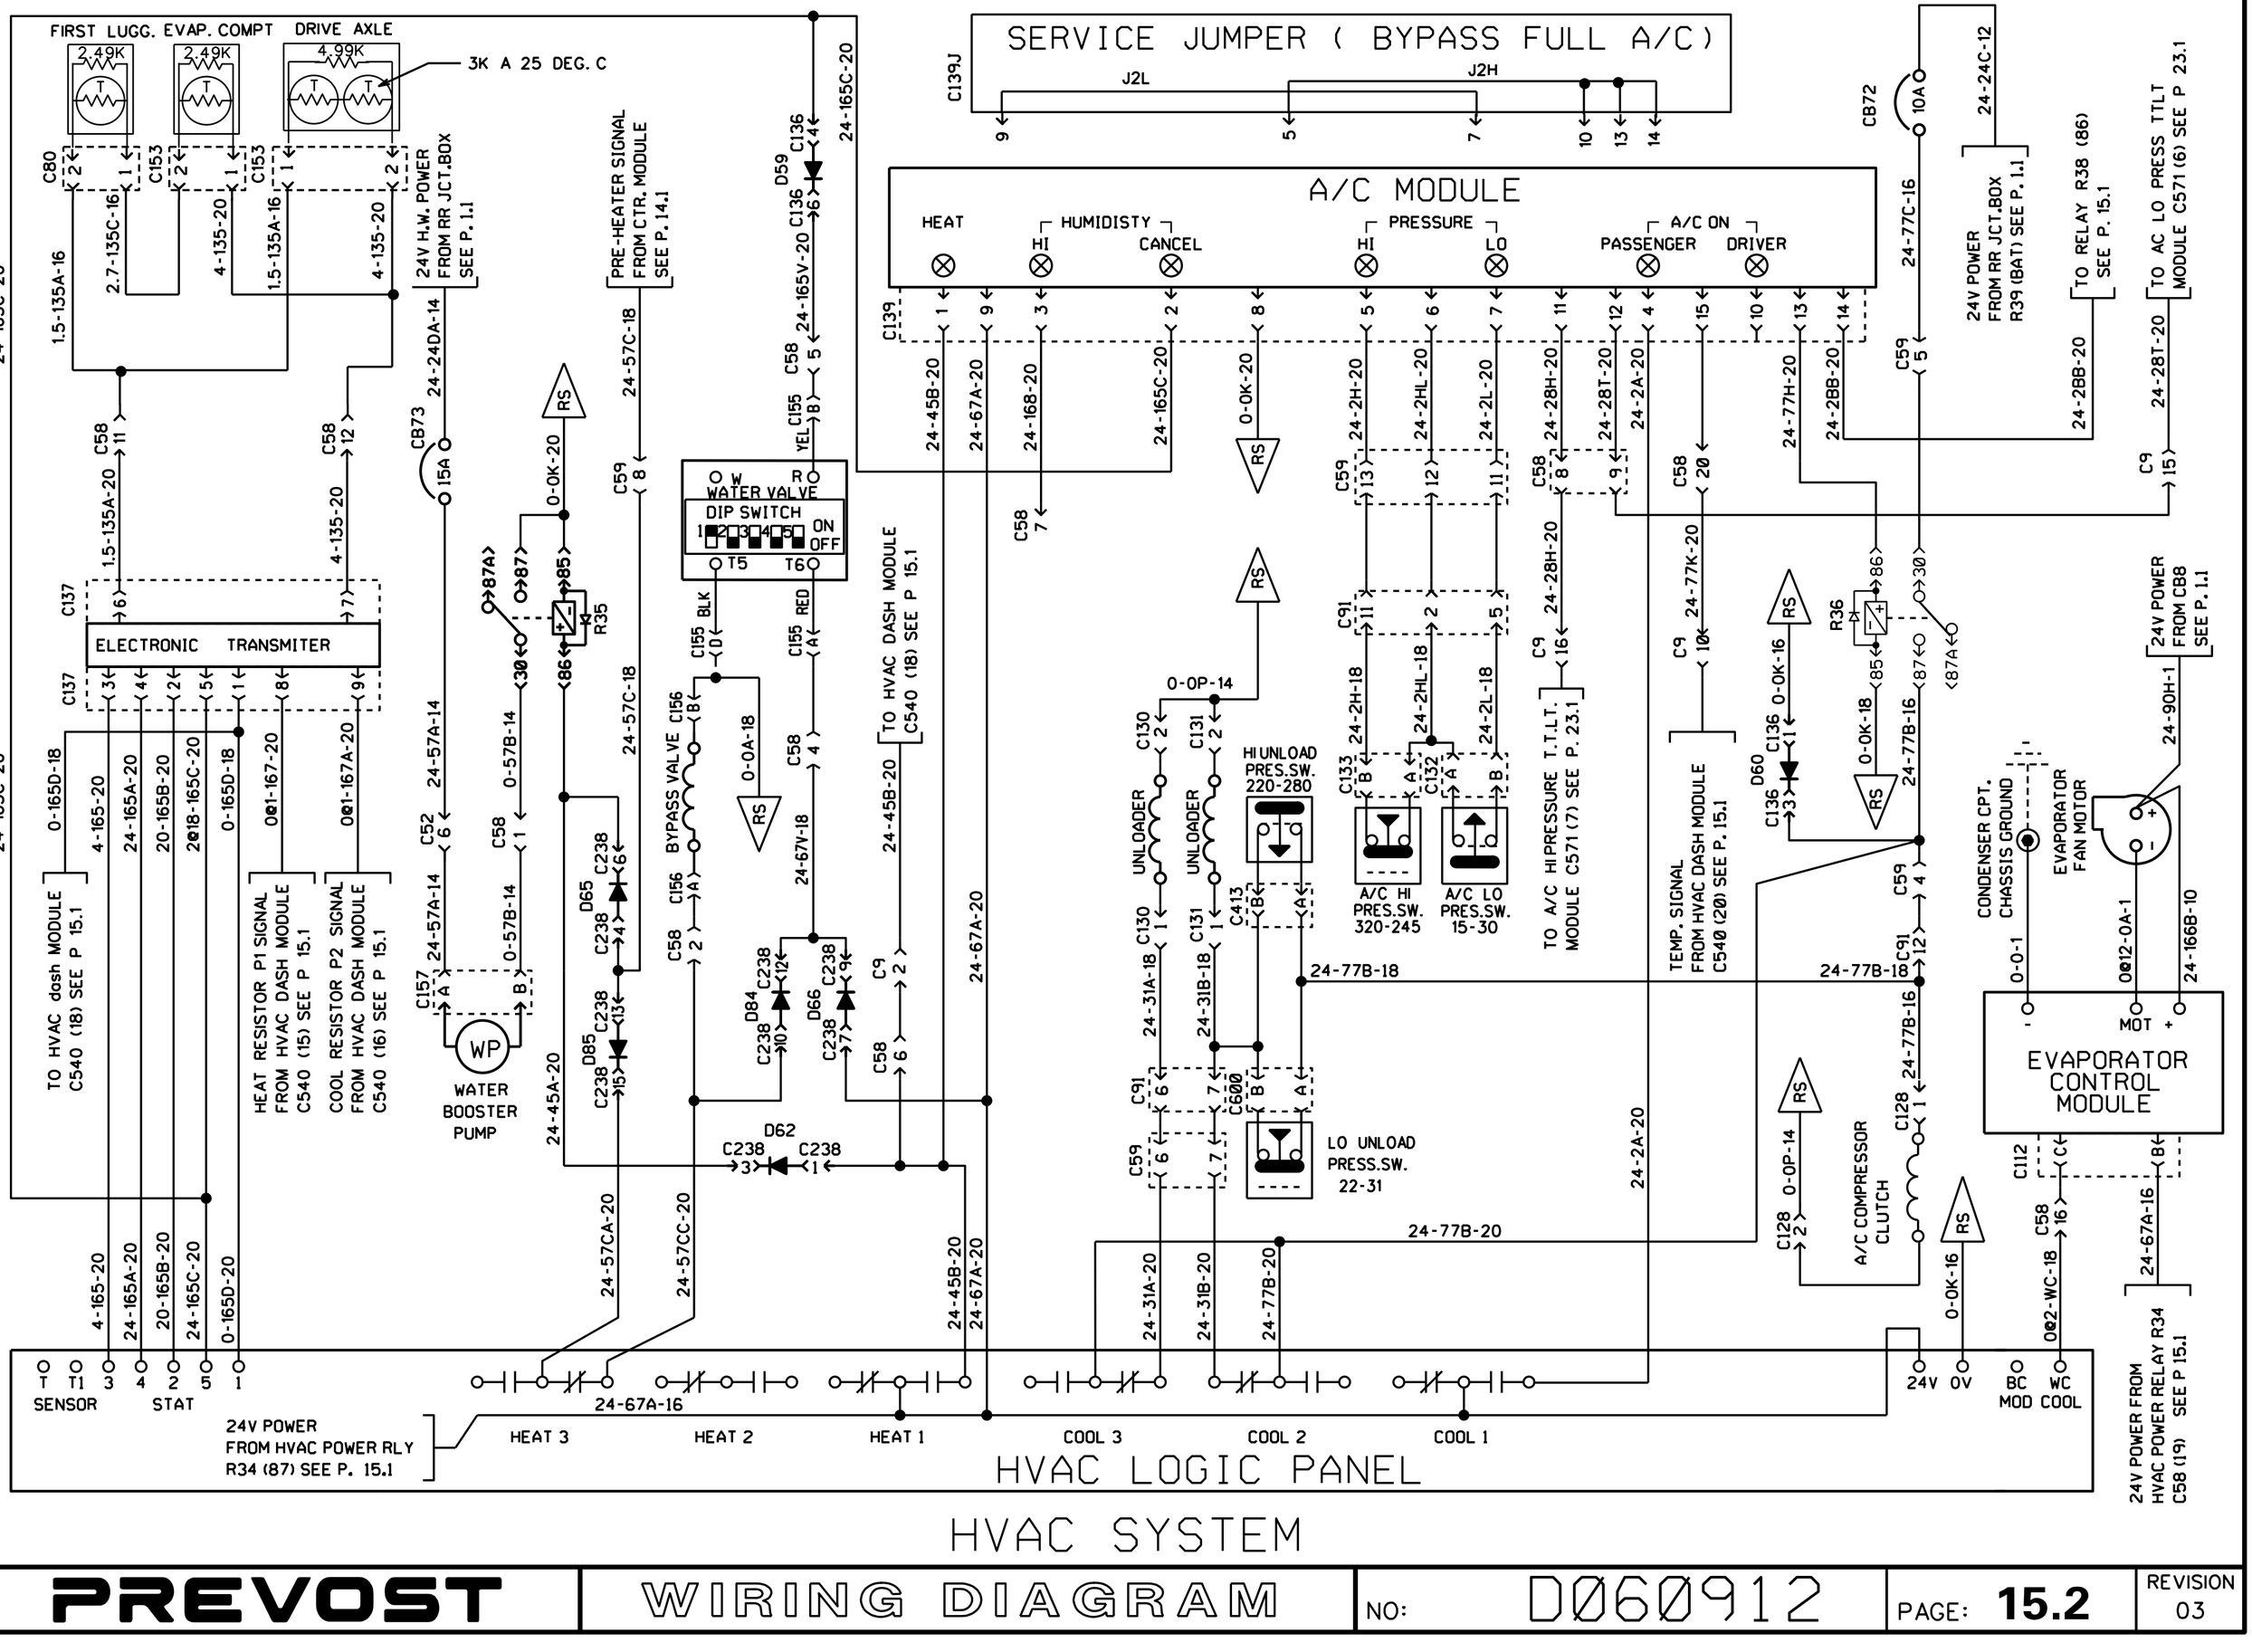
SERVICE JUMPER (BYPASS FULL A/C)
C139J
J2L
J2H
A/C MODULE
HEAT
HUMIDISTY
HI
CANCEL
PRESSURE
HI
LO
A/C ON
PASSENGER
DRIVER
C139
FIRST LUGG. EVAP. COMPT
DRIVE AXLE
2.49K
2.49K
4.99K
3K A 25 DEG. C
C80
C153
C153
24V H.W. POWER FROM RR JCT.BOX SEE P. 1.1
PRE-HEATER SIGNAL FROM CTR. MODULE SEE P. 14.1
D59
C136
24-165C-20
C58
24-165V-20
C155
YEL
WATER VALVE
DIP SWITCH
ON
OFF
T5
T6
W
R
BLK
RED
C155
C156
BYPASS VALVE
0-0A-18
0-OK-20
RS
R35
R4
C137
ELECTRONIC TRANSMITER
CB73
15A
24-24DA-14
24-57C-18
24-57A-14
0-57B-14
C52
C58
C157
WP
WATER BOOSTER PUMP
D65
D84
D66
D85
D62
C238
24-45A-20
24-67A-18
24-67A-20
24-45B-20
TO HVAC DASH MODULE C540 (18) SEE P 15.1
24-24B-20
24-67A-16
24-57CA-20
24-57CC-20
24-45B-20
24-67A-20
24-165C-20
0-165D-18
4-165-20
24-165A-20
20-165B-20
24-165C-20
0-165D-20
TO HVAC dash MODULE C540 (18) SEE P 15.1
HEAT RESISTOR P1 SIGNAL FROM HVAC DASH MODULE C540 (15) SEE P 15.1
COOL RESISTOR P2 SIGNAL FROM HVAC DASH MODULE C540 (16) SEE P 15.1
T
T1
SENSOR
STAT
24V POWER FROM HVAC POWER RLY R34 (87) SEE P. 15.1
HEAT 3
HEAT 2
HEAT 1
COOL 3
COOL 2
COOL 1
24V
0V
BC
MOD COOL
WC
HVAC LOGIC PANEL
24-45B-20
24-67A-20
24-168-20
24-165C-20
0-OK-20
24-2H-20
24-2HL-20
24-2L-20
24-28H-20
24-28T-20
24-2A-20
24-77H-20
24-77K-20
24-2BB-20
C59
C58
C9
C91
C130
C131
C133
C132
C413
C600
0-OP-14
HI UNLOAD PRES.SW. 220-280
UNLOADER
A/C HI PRESS.SW. 320-245
A/C LO PRES.SW. 15-30
LO UNLOAD PRESS.SW. 22-31
TO A/C HI PRESSURE T.T.L.T. MODULE C571 (7) SEE P. 23.1
TEMP. SIGNAL FROM HVAC DASH MODULE C540 (20) SEE P. 15.1
24-31A-18
24-31B-18
24-77B-18
24-77B-20
24-31A-20
24-31B-20
24-77B-16
24-2A-20
A/C COMPRESSOR CLUTCH
0-OK-16
C128
C112
EVAPORATOR CONTROL MODULE
CONDENSER CPT. CHASSIS GROUND
EVAPORATOR FAN MOTOR
0-0-1
0Ø12-0A-1
24-166B-10
MOT
24V POWER HVAC POWER RELAY R34 C58 (19) SEE P 15.1
0Ø2-WC-18
24-67A-16
CB72
10A
24-24C-12
24-77C-16
24V POWER FROM RR JCT.BOX R39 (BAT) SEE P. 1.1
TO RELAY R38 (86) SEE P. 15.1
TO AC LO PRESS TTLT MODULE C571 (6) SEE P 23.1
24V POWER FROM CB8 SEE P. 1.1
24-90H-1
R36
0-OK-18
24-77B-16
D60
C136
0-OK-16
RS
87
87A
30
85
86

HVAC SYSTEM

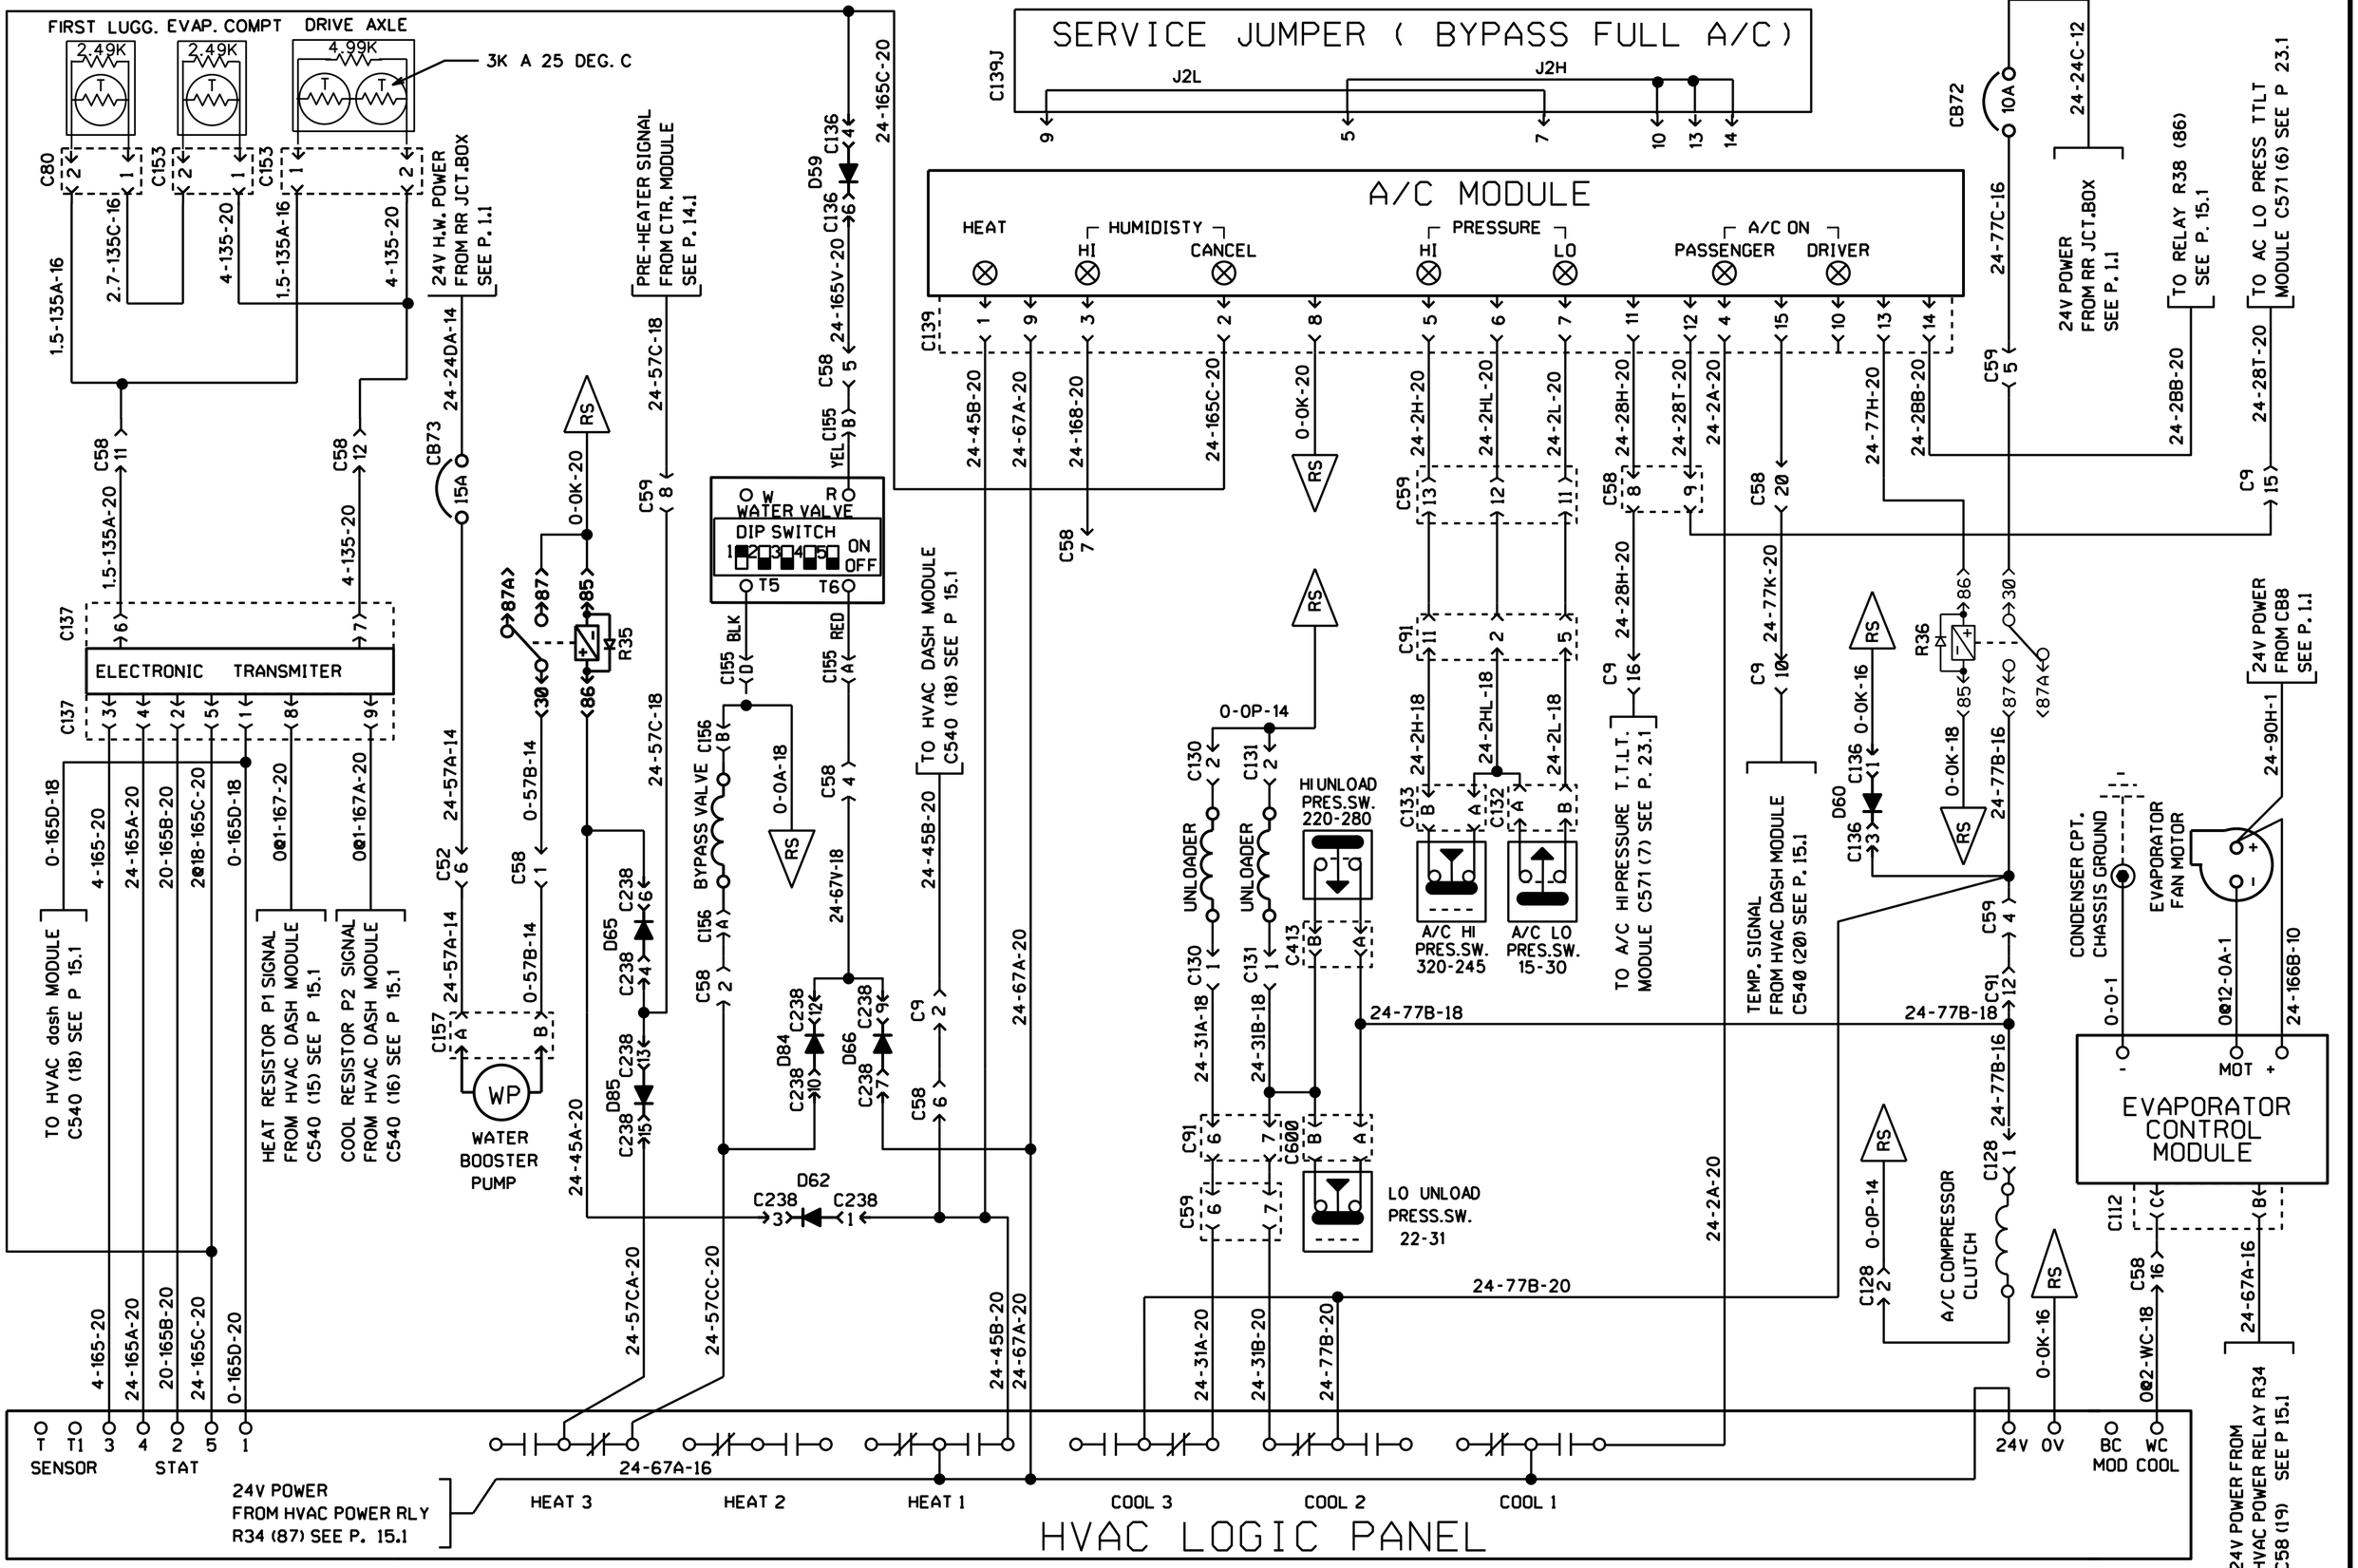
FIRST LUGG. EVAP. COMPT
DRIVE AXLE
2.49K
2.49K
4.99K
3K A 25 DEG. C
24-165C-20
1.5-135A-16
2.7-135C-16
4-135-20
1.5-135A-16
4-135-20
24V H.W. POWER FROM RR JCT.BOX SEE P. 1.1
24-24DA-14
CB73
15A
PRE-HEATER SIGNAL FROM CTR. MODULE SEE P. 14.1
24-57C-18
D59
24-165V-20
24-165C-20
SERVICE JUMPER (BYPASS FULL A/C)
J2L
J2H
A/C MODULE
HEAT
HUMIDISTY
HI
CANCEL
PRESSURE
HI
LO
A/C ON
PASSENGER
DRIVER
24-45B-20
24-67A-20
24-168-20
24-165C-20
0-0K-20
24-2H-20
24-2HL-20
24-2L-20
24-28H-20
24-28T-20
24-2A-20
24-77H-20
24-2BB-20
CB72
10A
24-77C-16
24-24C-12
24V POWER FROM RR JCT.BOX SEE P. 1.1
TO RELAY R38 (86) SEE P. 15.1
TO AC LO PRESS TTLT MODULE C571 (6) SEE P 23.1
24-28T-20
ELECTRONIC TRANSMITER
0-0K-20
R35
WATER VALVE
DIP SWITCH
ON
OFF
T5
T6
BLK
RED
TO HVAC DASH MODULE C540 (18) SEE P 15.1
0-0P-14
HI UNLOAD PRES.SW. 220-280
UNLOADER
A/C HI PRESS.SW. 320-245
A/C LO PRESS.SW. 15-30
TO A/C HI PRESSURE T.T.L.T. MODULE C571 (7) SEE P. 23.1
24-77B-18
24-77K-20
TEMP. SIGNAL FROM HVAC DASH MODULE C540 (20) SEE P. 15.1
0-0K-16
R36
0-0K-18
24-77B-16
24V POWER FROM CB8 SEE P. 1.1
24-90H-1
CONDENSER CPT. CHASSIS GROUND
EVAPORATOR FAN MOTOR
0-0-1
0@12-0A-1
24-166B-10
EVAPORATOR CONTROL MODULE
MOT
24-77B-20
24-2A-20
LO UNLOAD PRESS.SW. 22-31
A/C COMPRESSOR CLUTCH
0-0P-14
24-67A-16
24-67A-20
24-45B-20
24-57CA-20
24-57CC-20
24-45A-20
24-31A-20
24-31B-20
24-77B-20
0-0A-18
BYPASS VALVE
WATER BOOSTER PUMP
WP
D62
D84
D85
D65
D66
HEAT RESISTOR P1 SIGNAL FROM HVAC DASH MODULE C540 (15) SEE P 15.1
COOL RESISTOR P2 SIGNAL FROM HVAC DASH MODULE C540 (16) SEE P 15.1
TO HVAC dash MODULE C540 (18) SEE P 15.1
0@1-167-20
0@1-167A-20
0-165D-18
0-165D-20
4-165-20
24-165A-20
20-165B-20
24-165C-20
T
T1
SENSOR
STAT
24V POWER FROM HVAC POWER RLY R34 (87) SEE P. 15.1
HEAT 3
HEAT 2
HEAT 1
COOL 3
COOL 2
COOL 1
24V 0V
BC
WC
MOD COOL
0@2-WC-18
24-67A-16
24V POWER FROM HVAC POWER RELAY R34 C58 (19) SEE P 15.1
HVAC LOGIC PANEL

HVAC SYSTEM

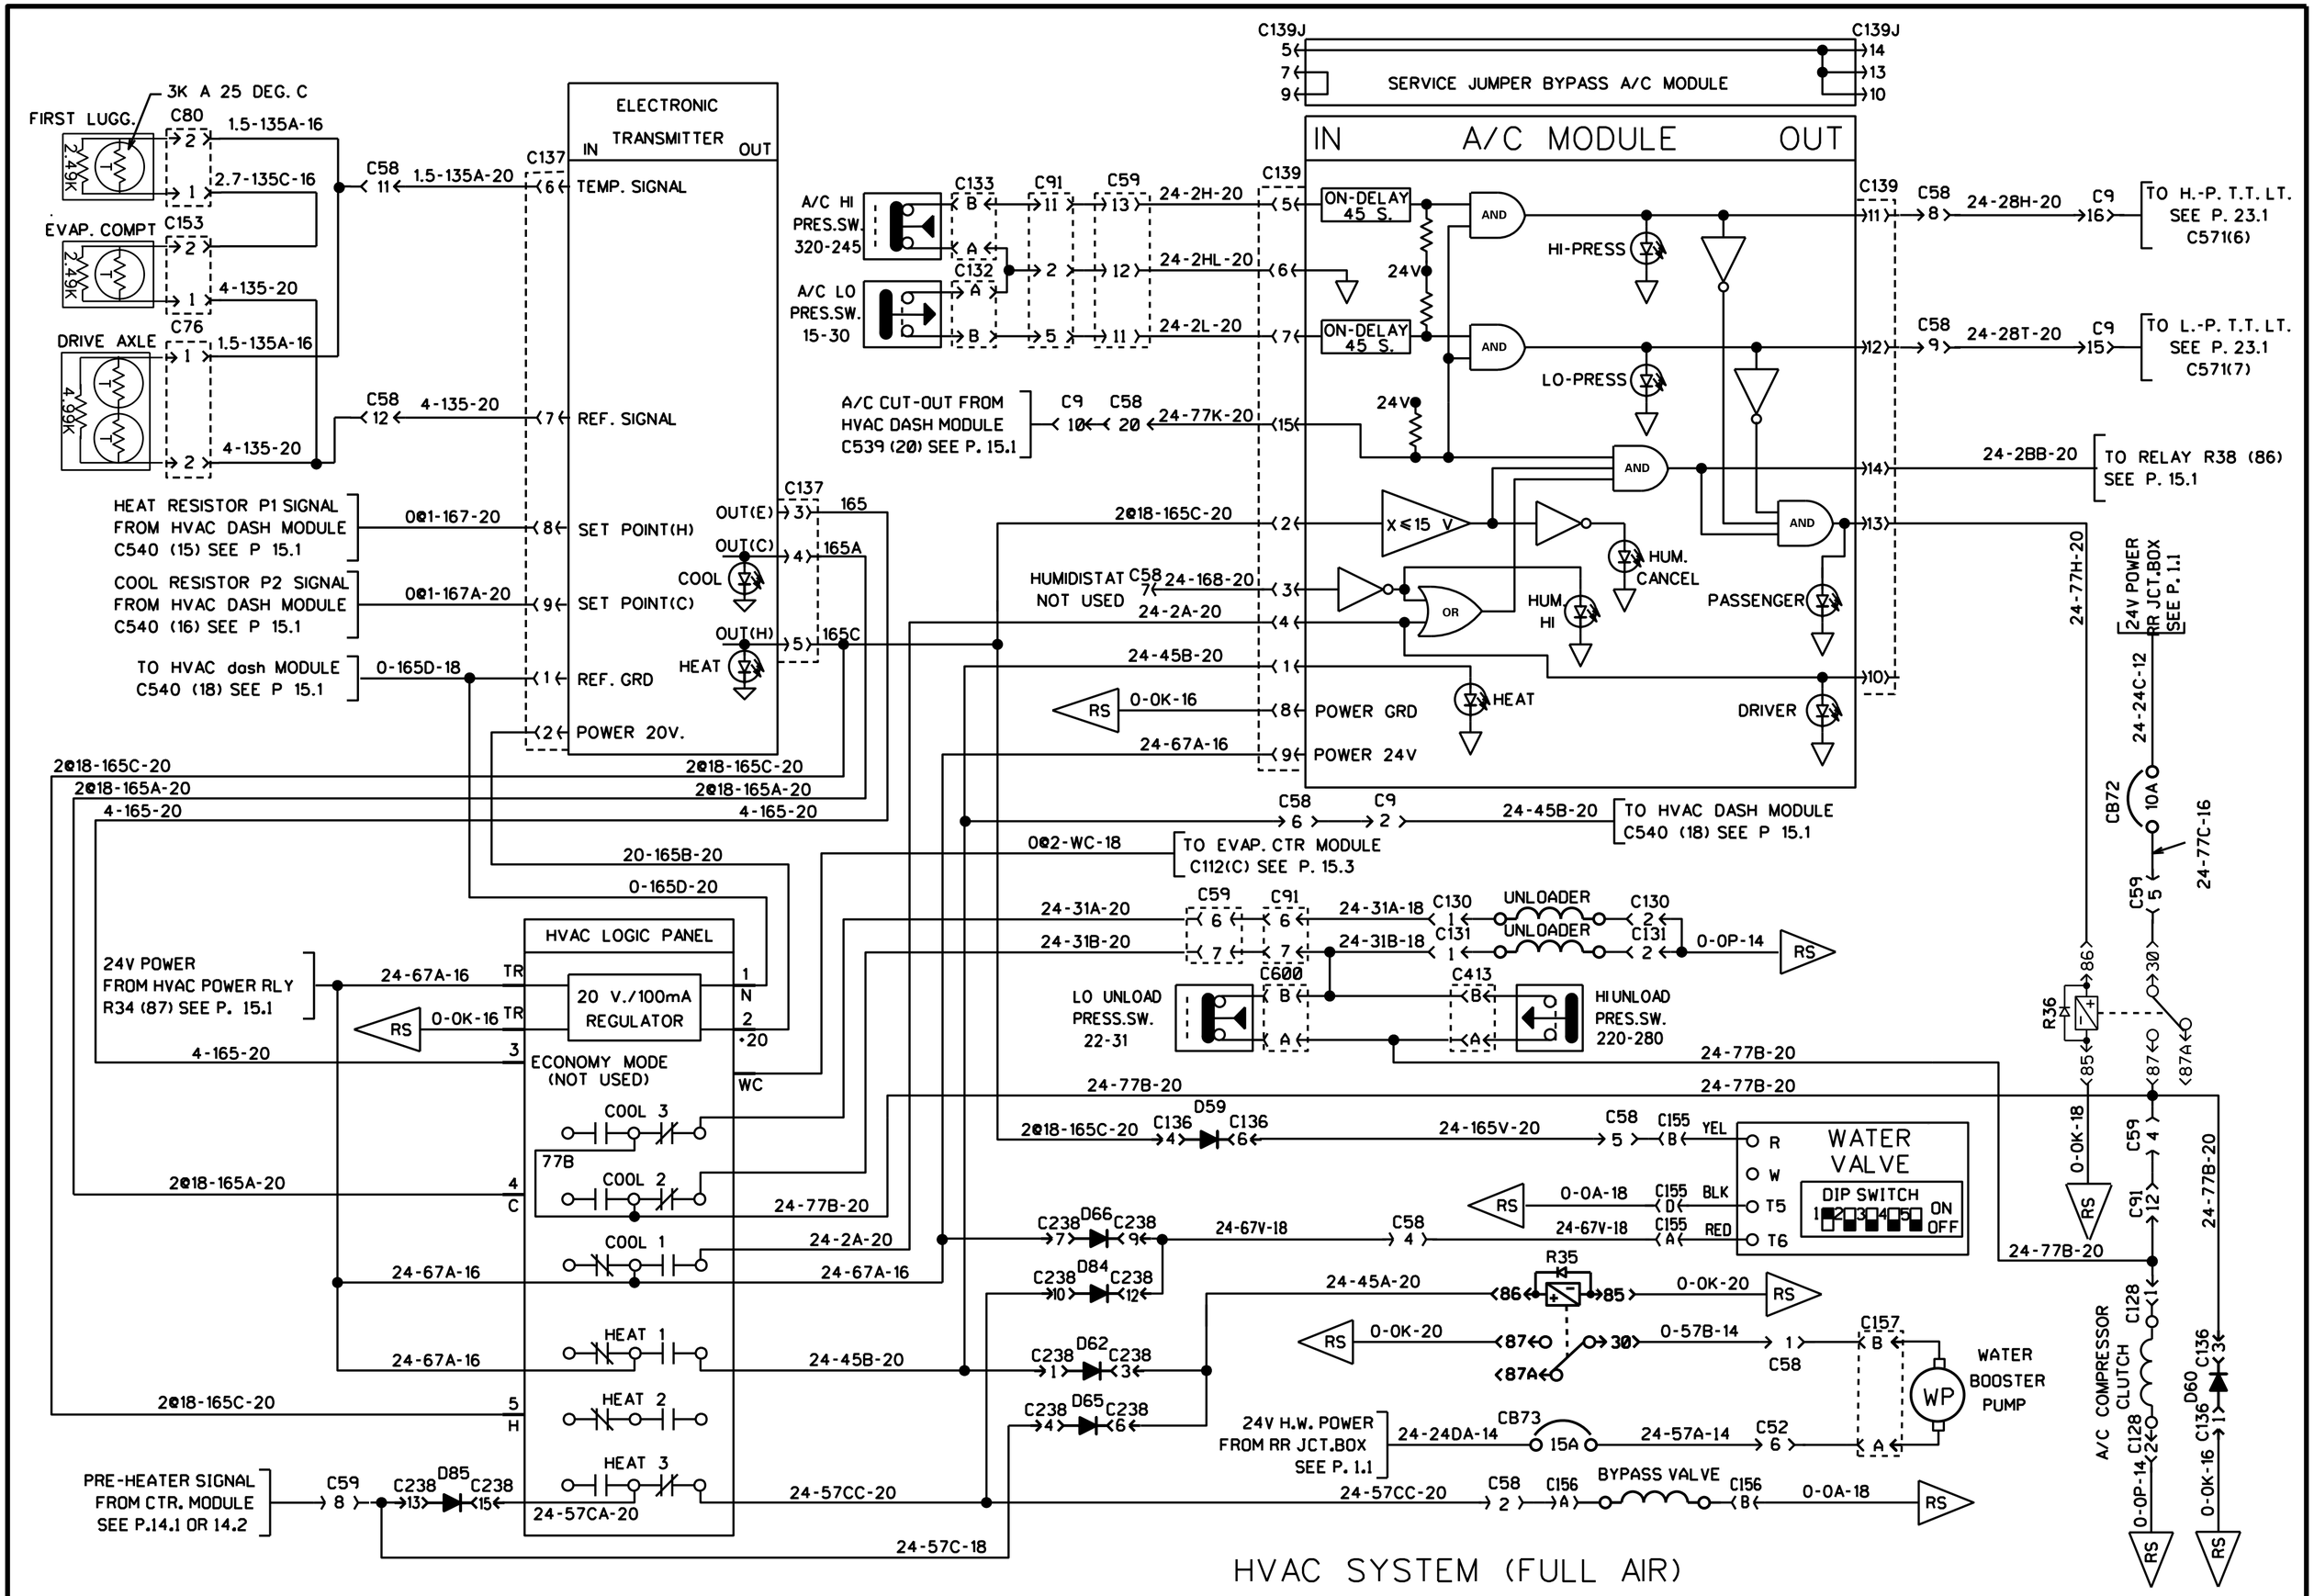

HVAC SYSTEM (FULL AIR)

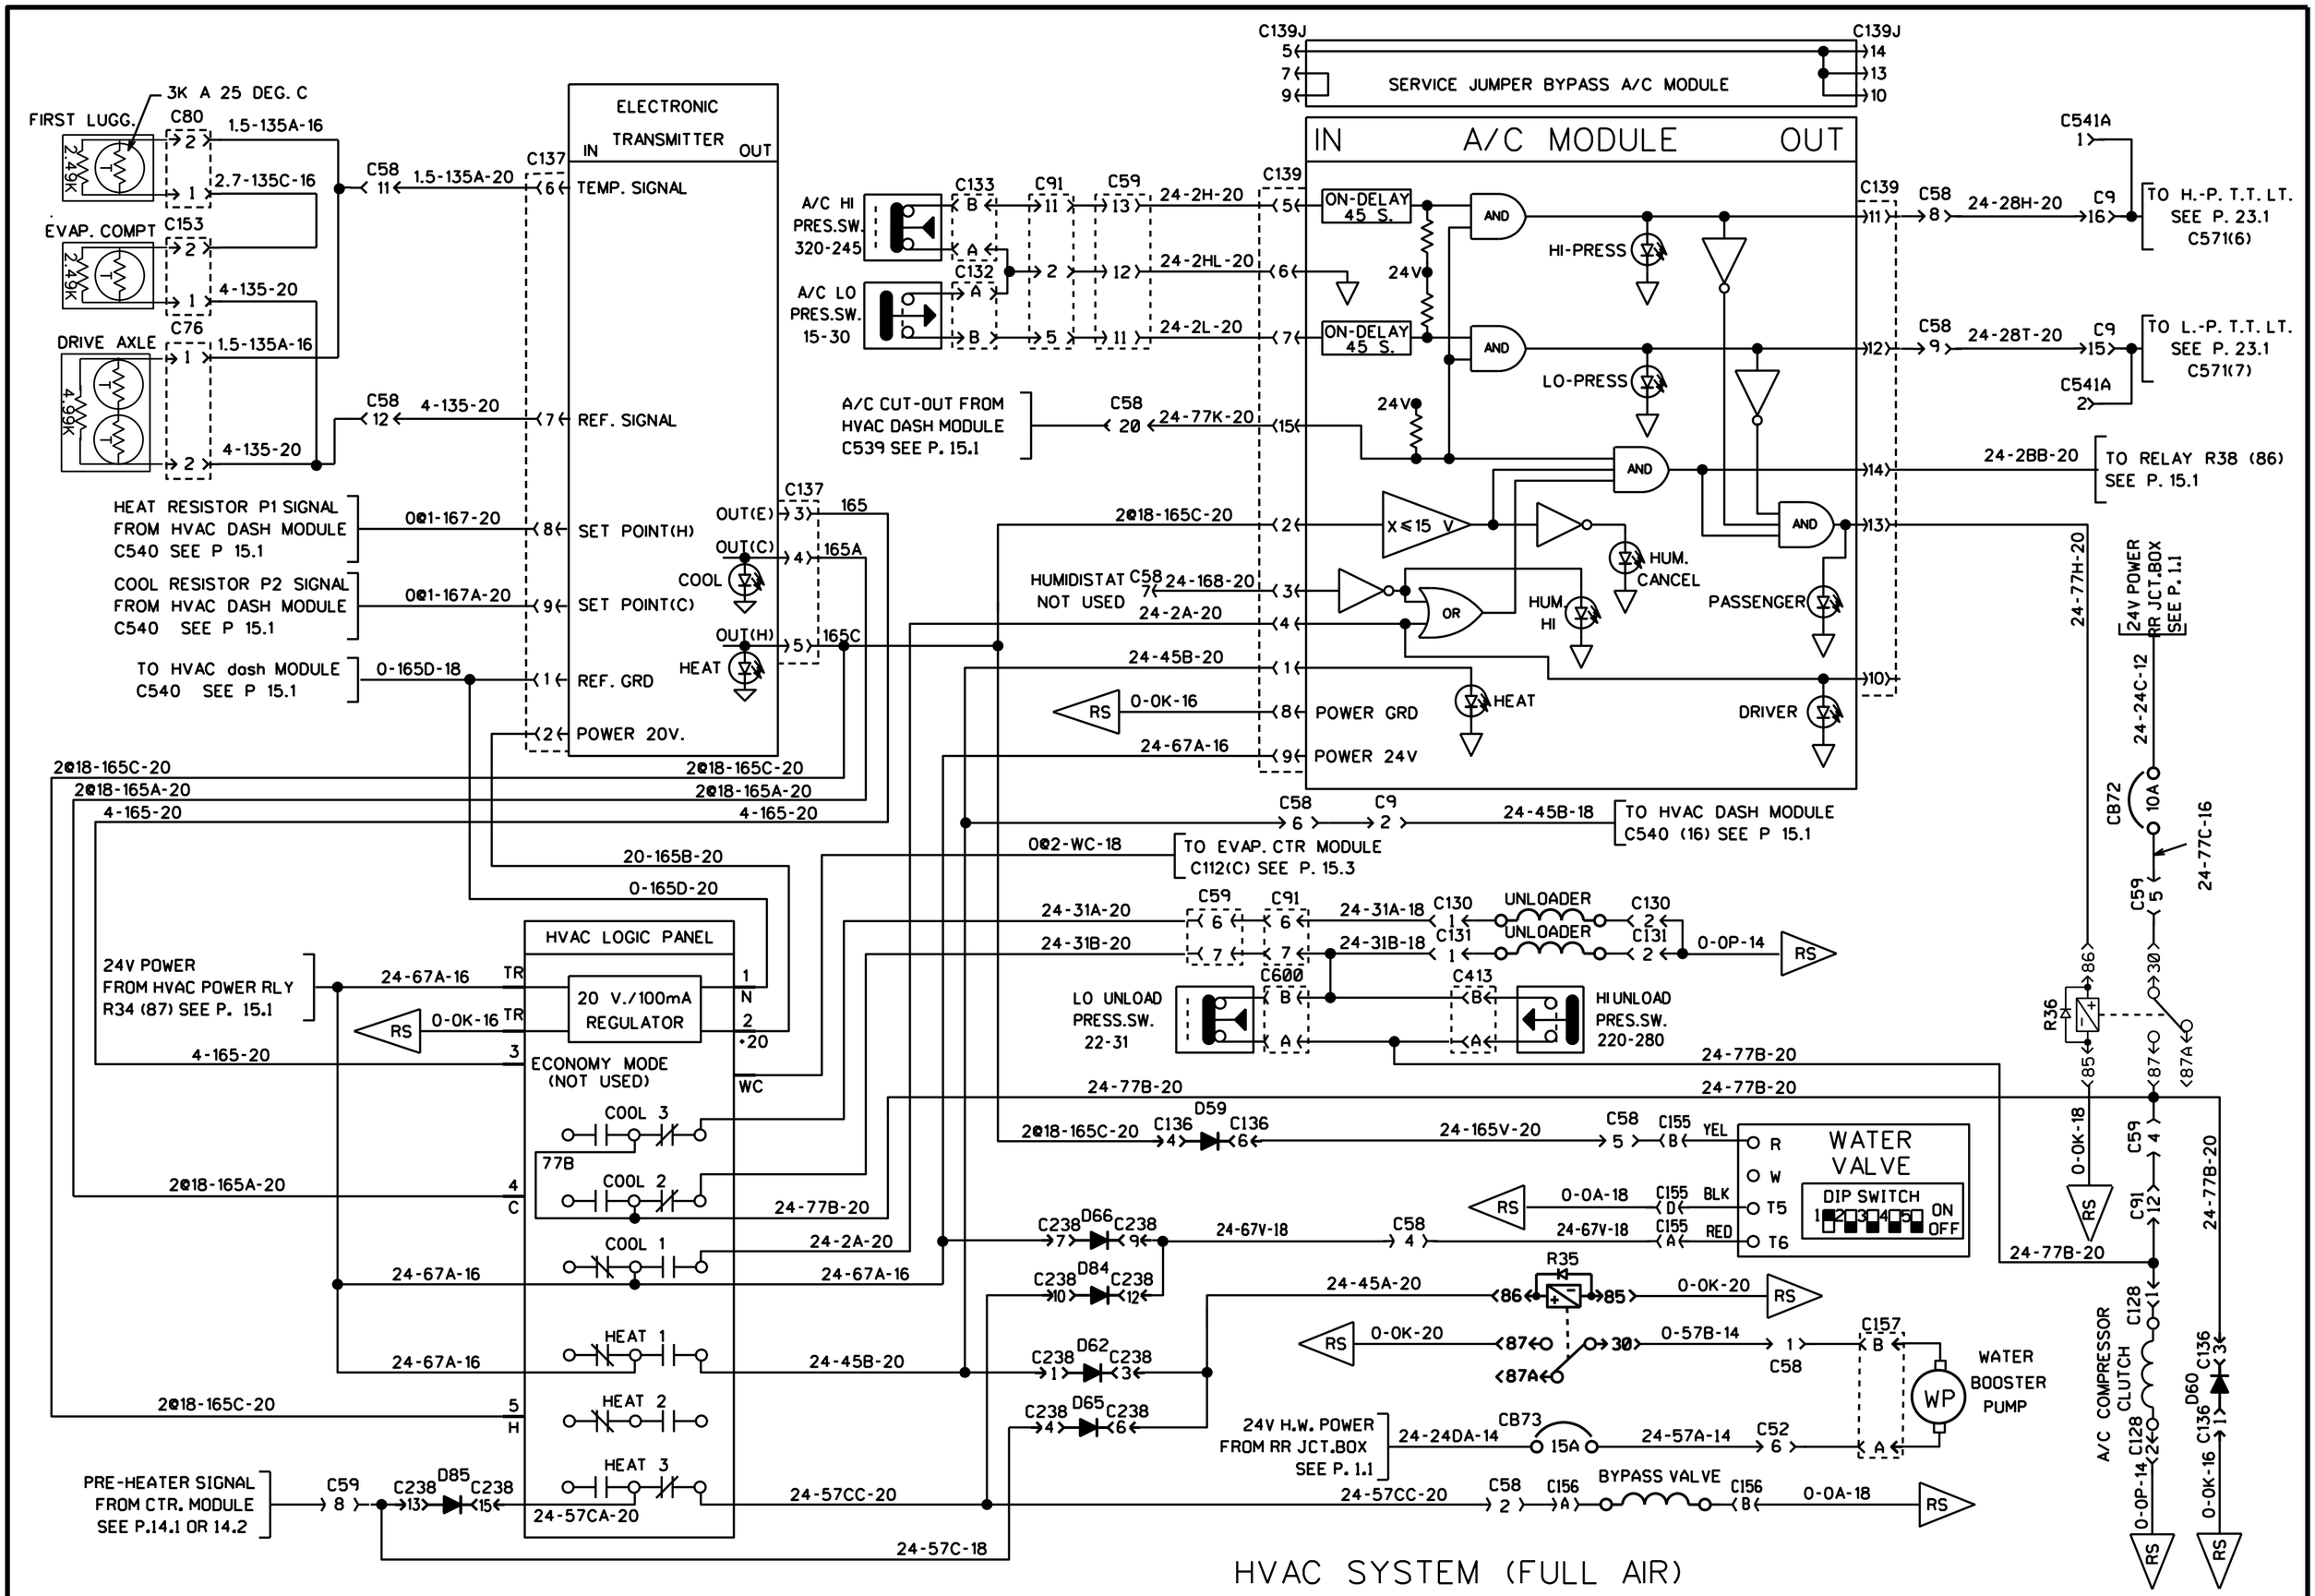

HVAC SYSTEM (FULL AIR)

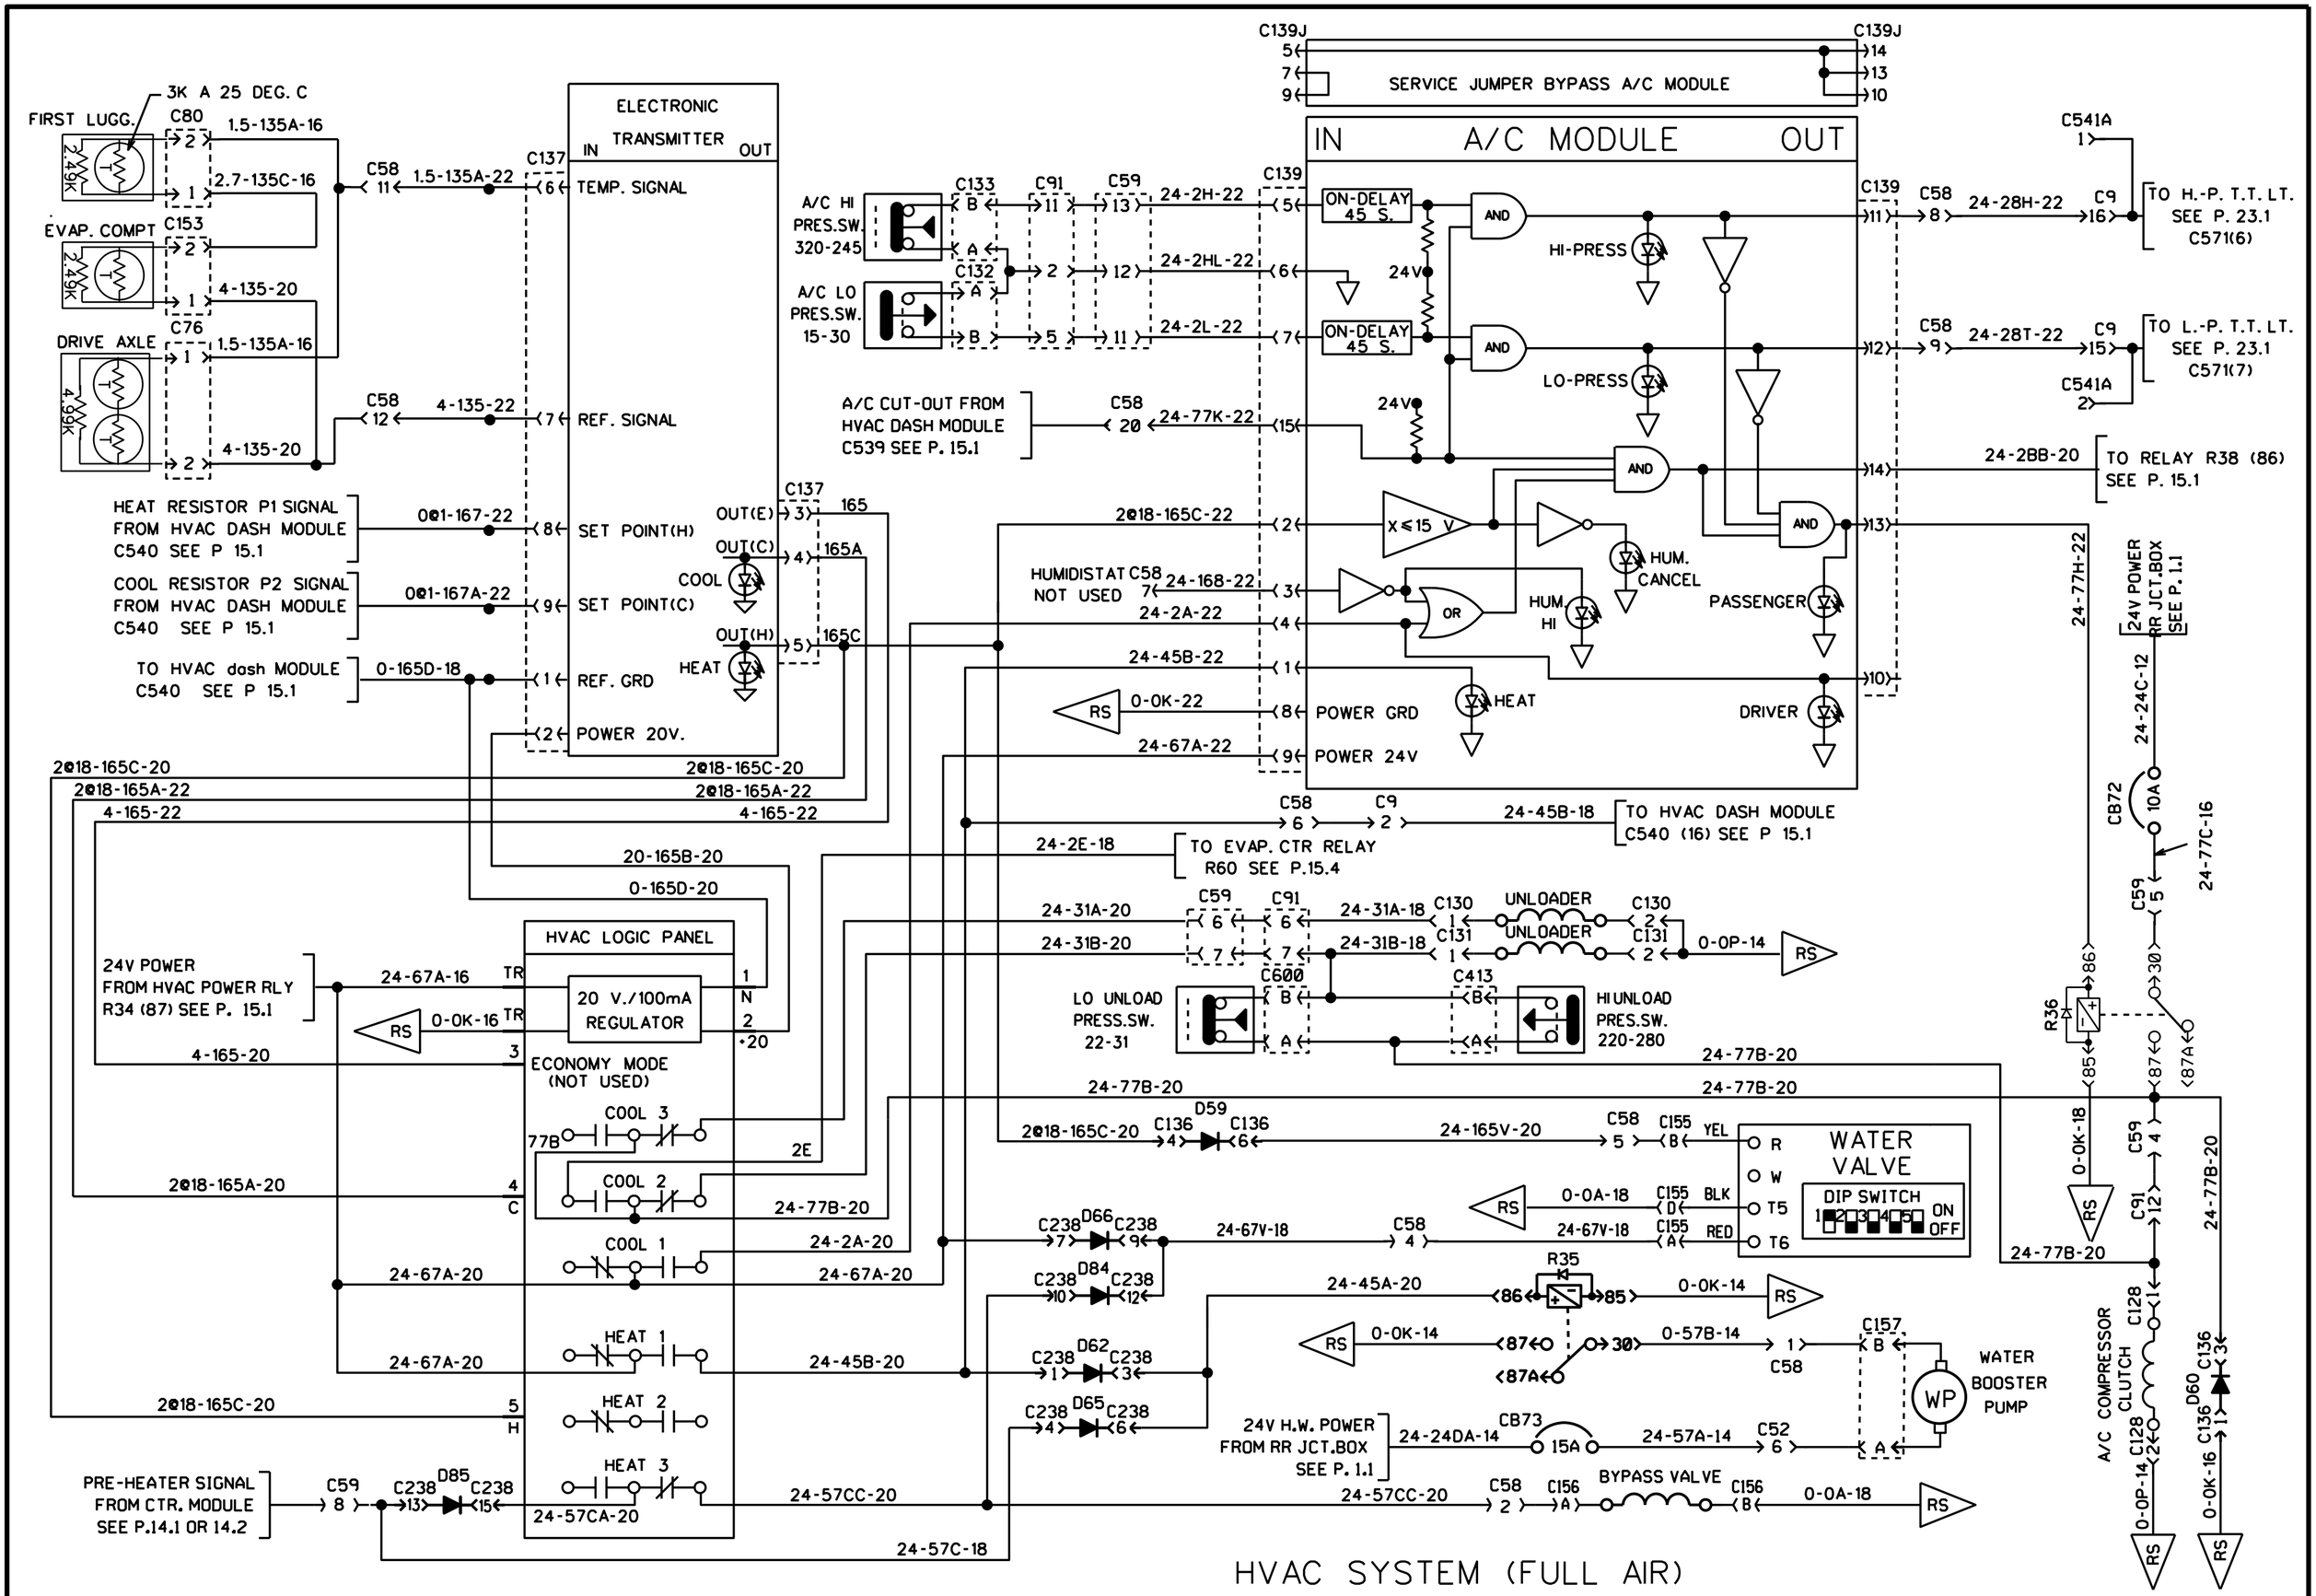

HVAC SYSTEM (FULL AIR)

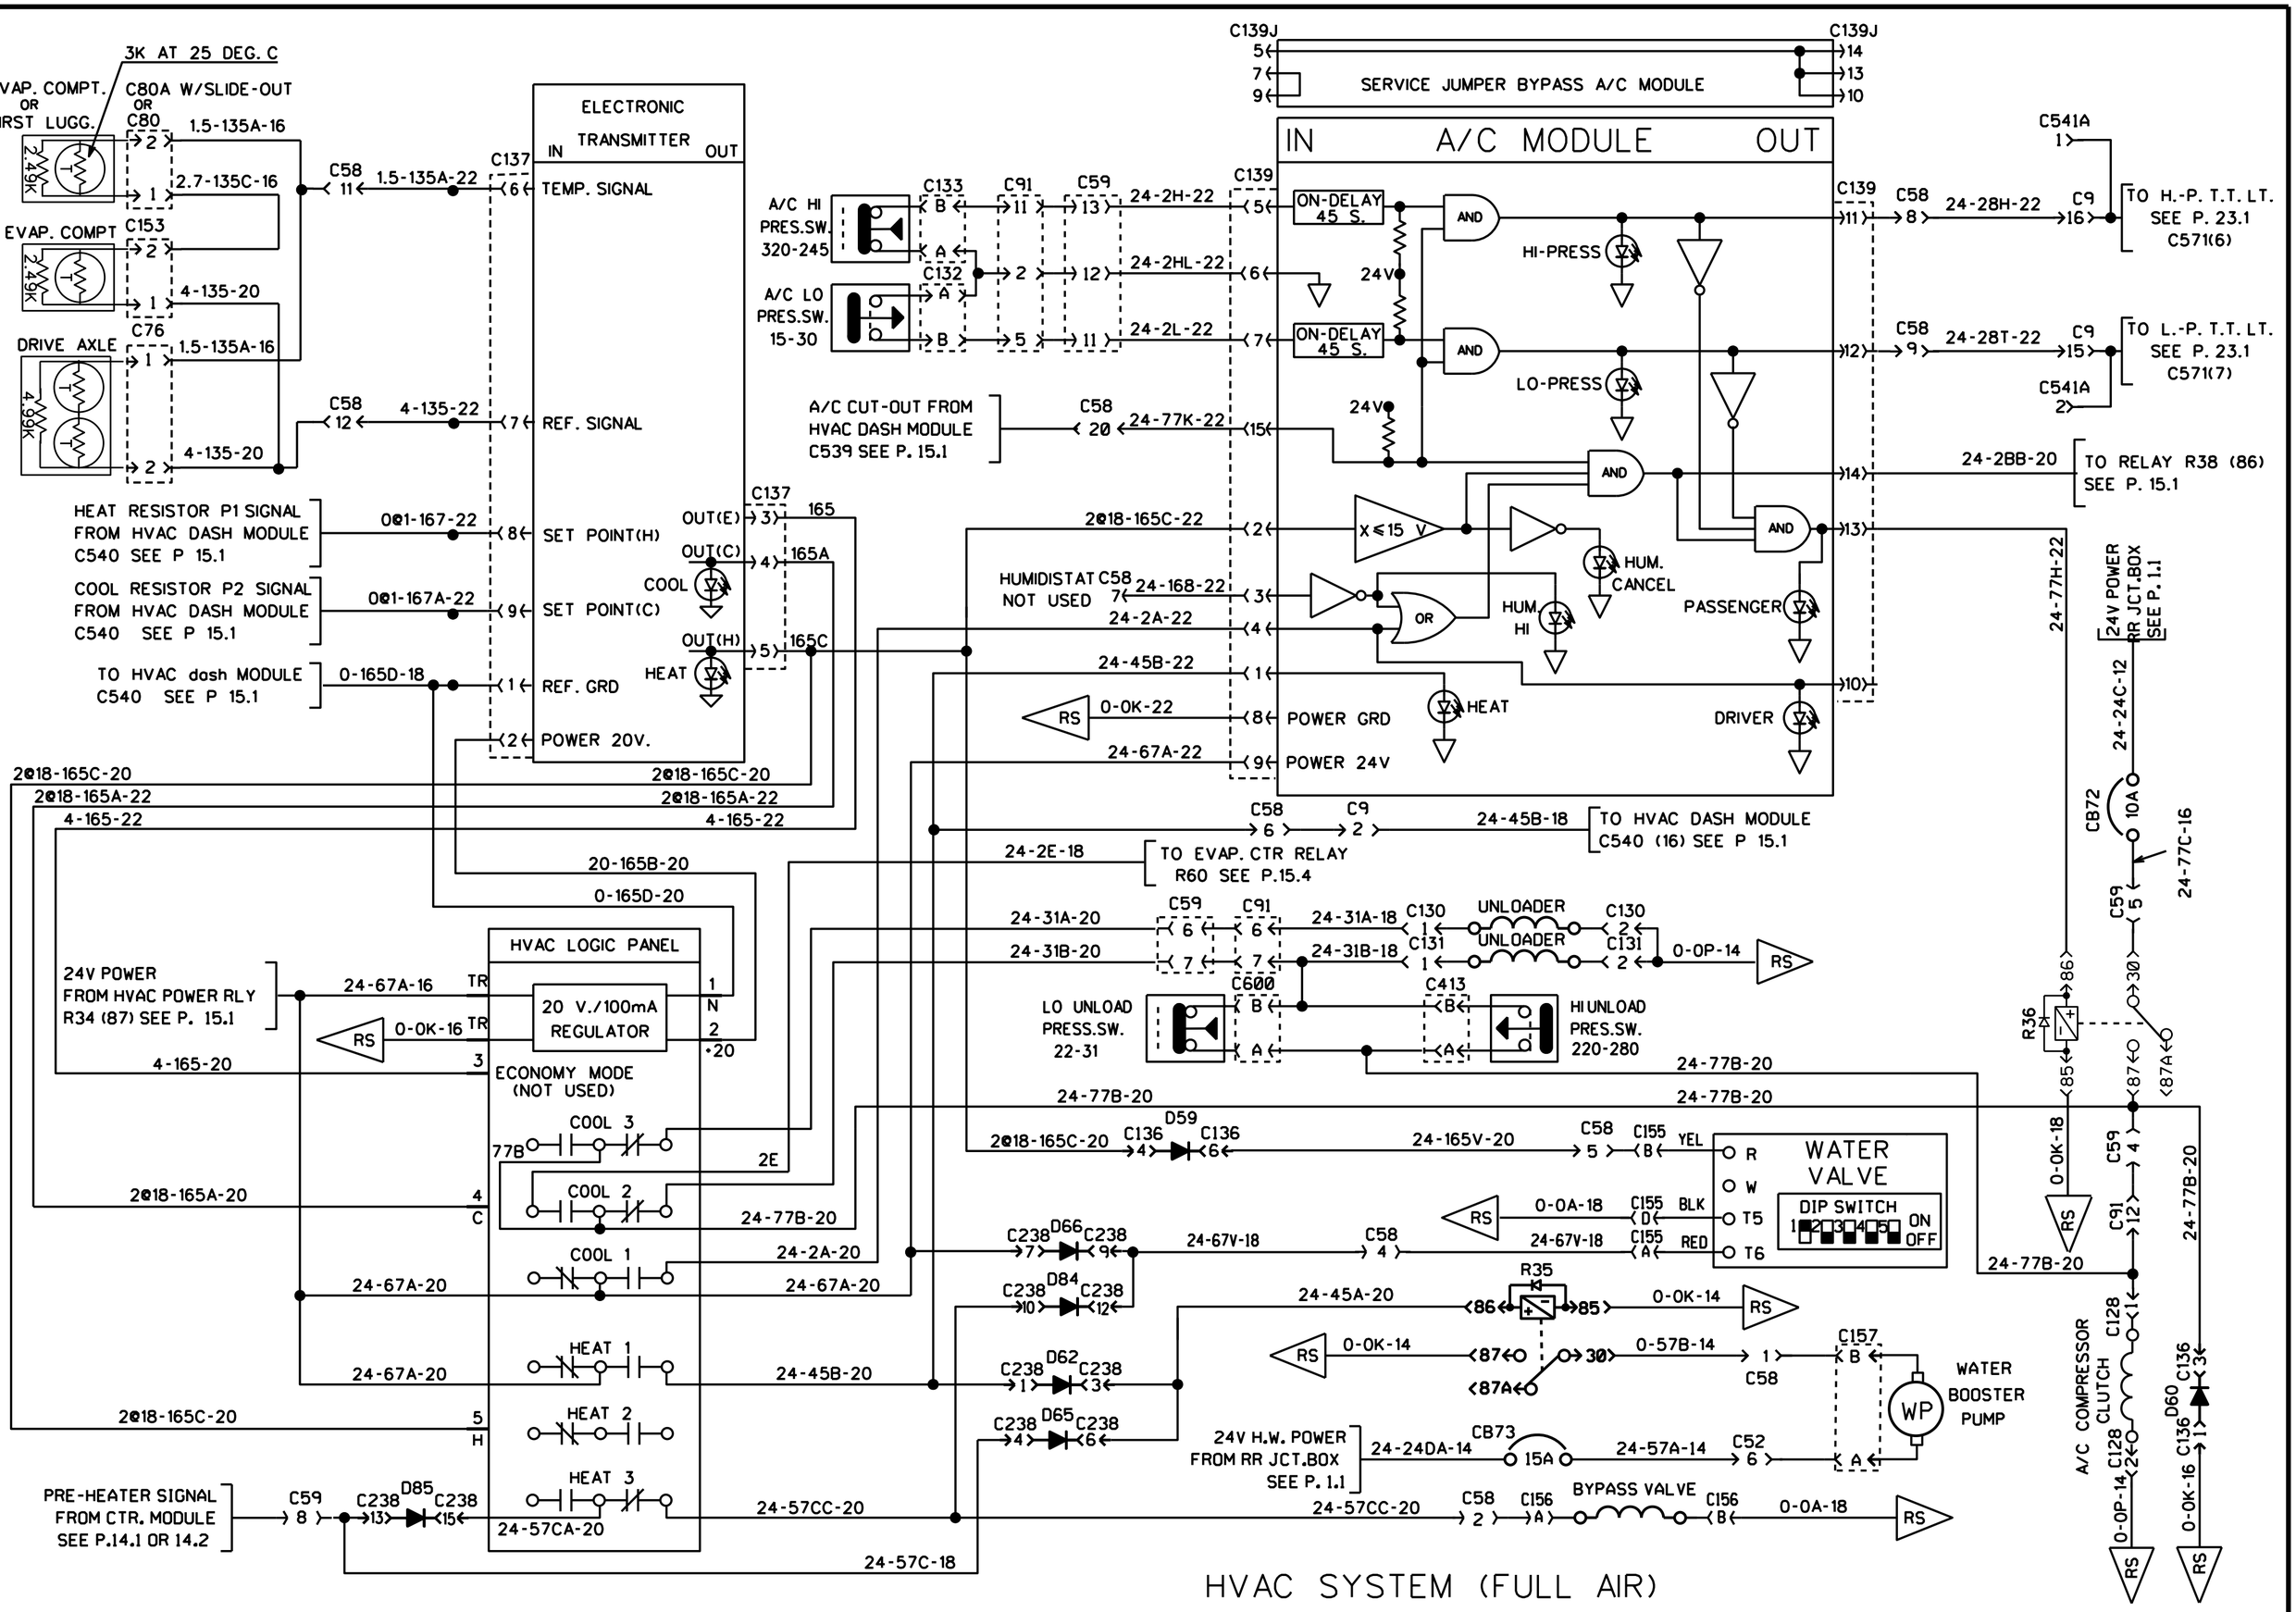

HVAC SYSTEM (FULL AIR)

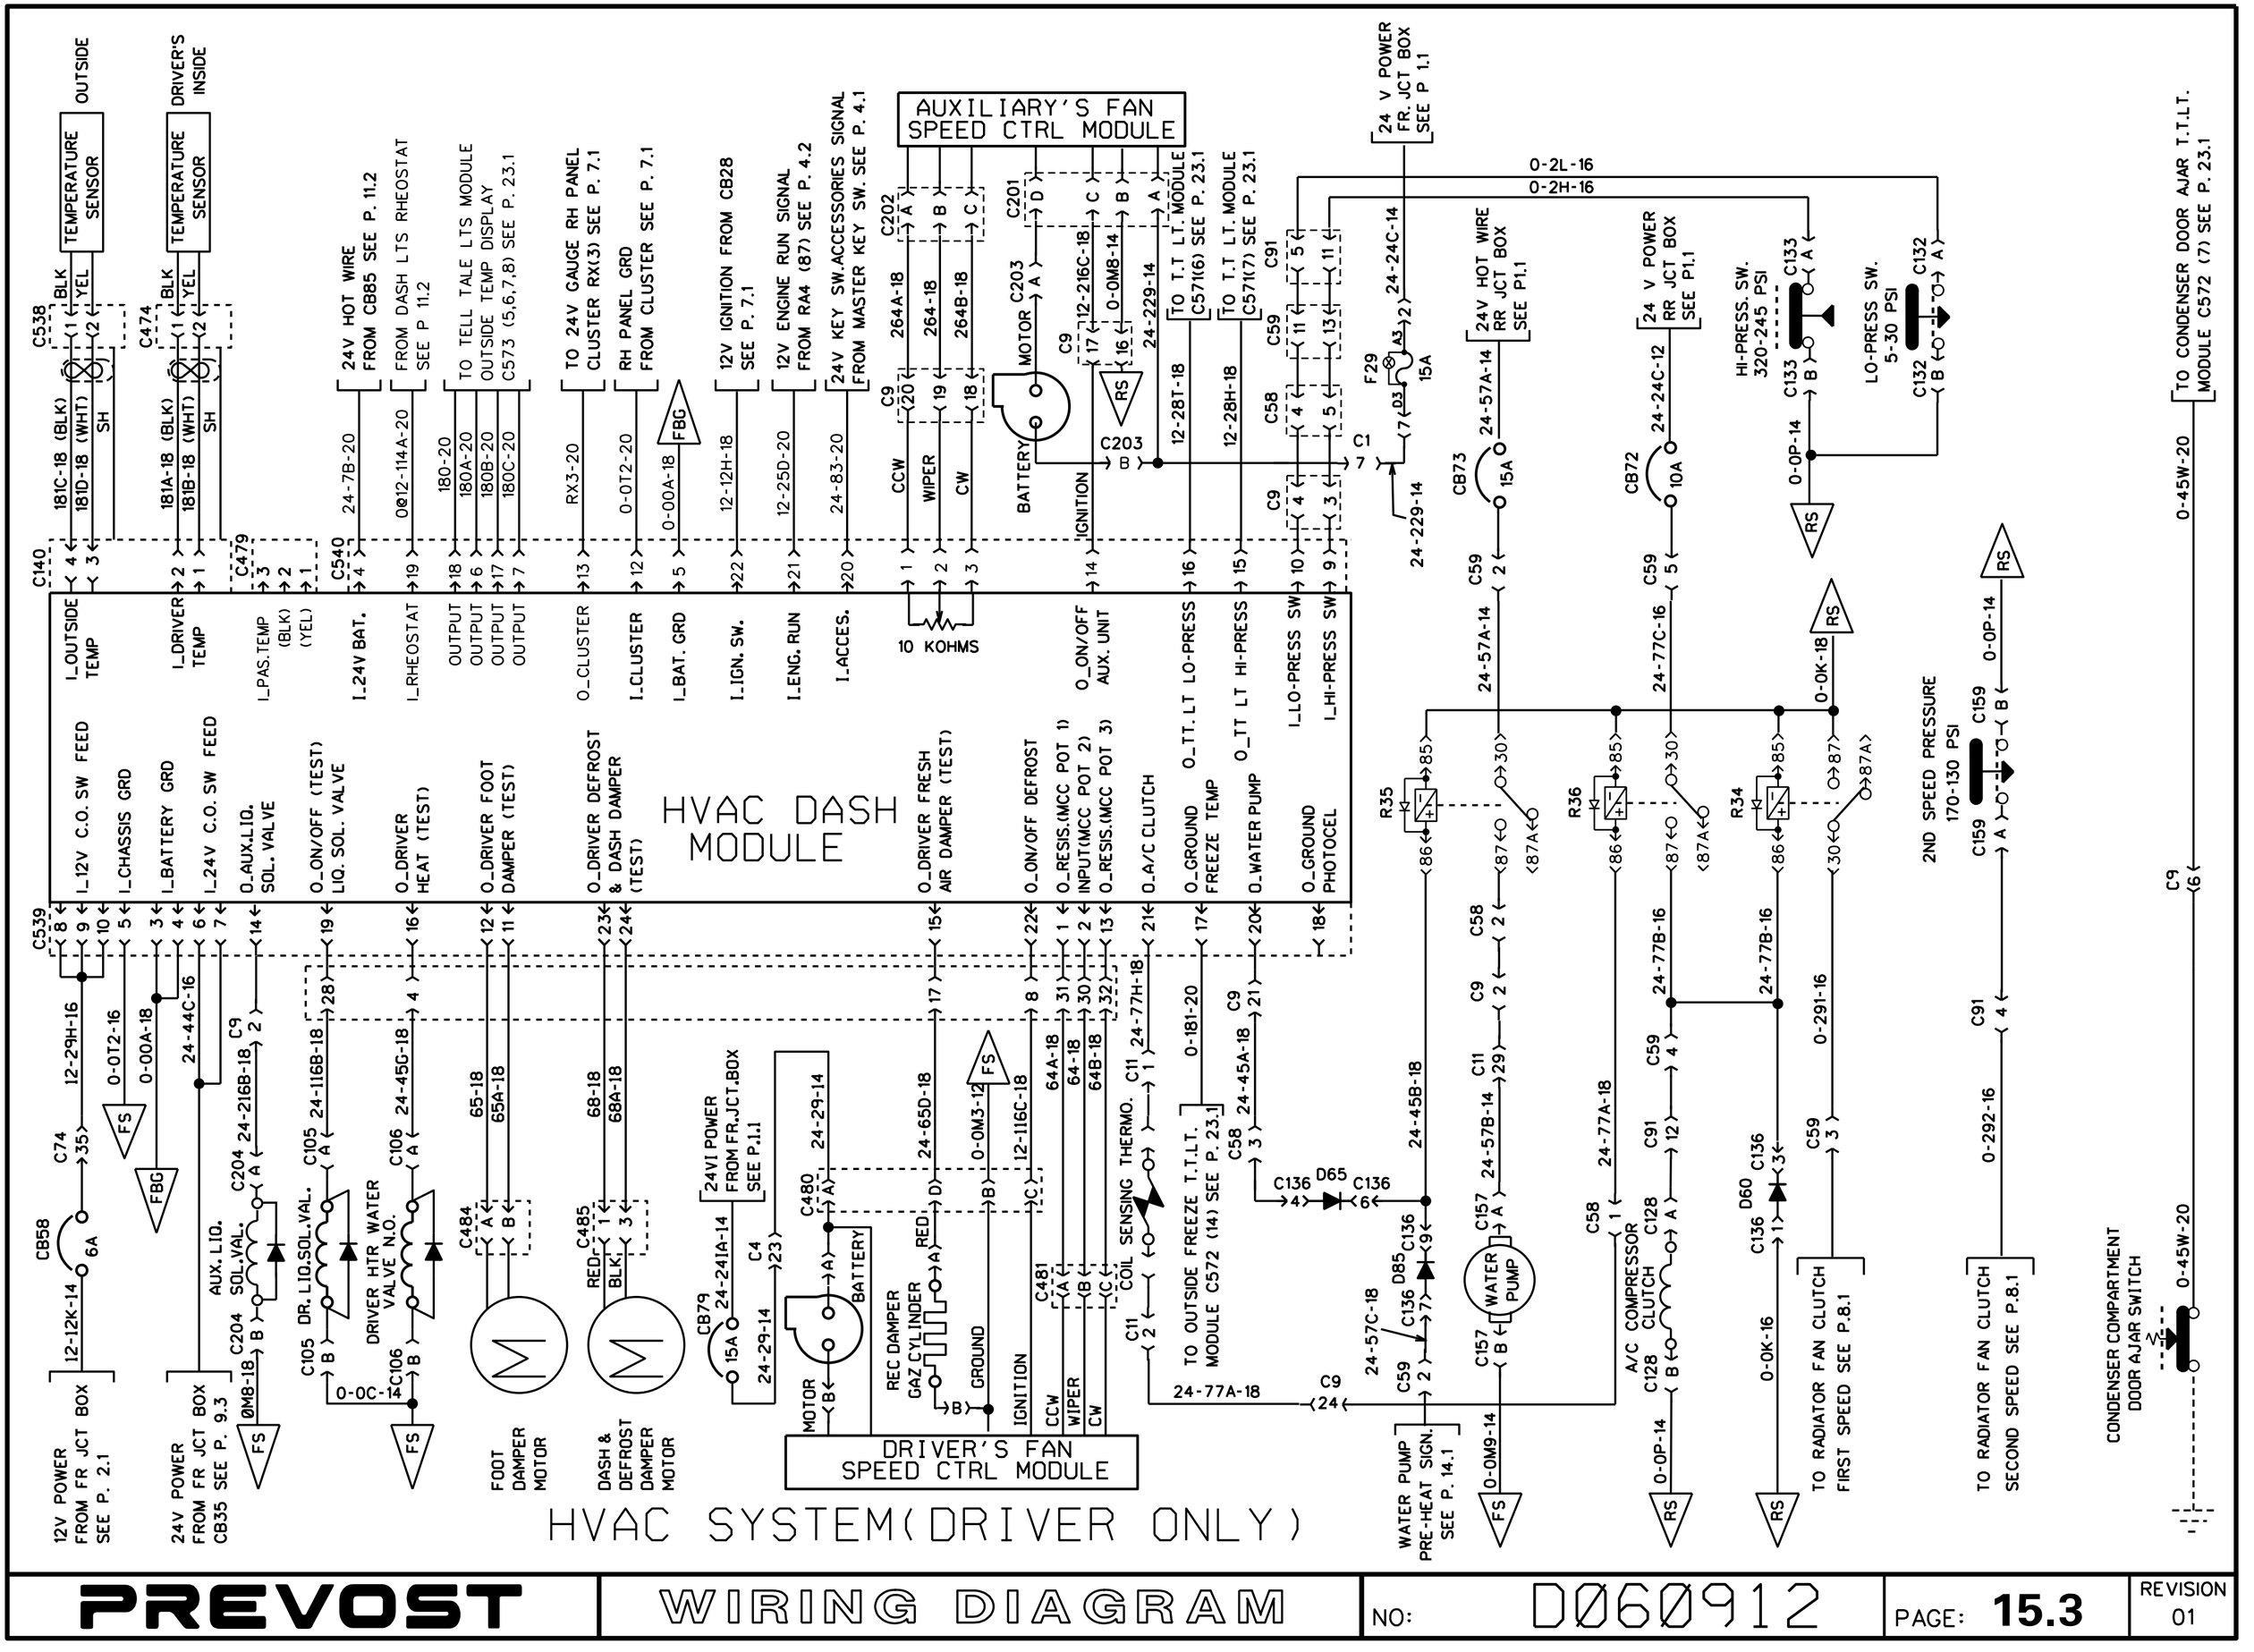
HVAC SYSTEM(DRIVER ONLY)
HVAC DASH MODULE
AUXILIARY'S FAN SPEED CTRL MODULE
DRIVER'S FAN SPEED CTRL MODULE
TEMPERATURE SENSOR
OUTSIDE
DRIVER'S INSIDE
24V HOT WIRE FROM CB85 SEE P. 11.2
FROM DASH LTS RHEOSTAT SEE P 11.2
TO TELL TALE LTS MODULE
OUTSIDE TEMP DISPLAY
C573 (5,6,7,8) SEE P. 23.1
TO 24V GAUGE RH PANEL CLUSTER RX(3) SEE P. 7.1
RH PANEL GRD FROM CLUSTER SEE P. 7.1
12V IGNITION FROM CB28 SEE P. 7.1
12V ENGINE RUN SIGNAL FROM RA4 (87) SEE P. 4.2
24V KEY SW.ACCESSORIES SIGNAL FROM MASTER KEY SW. SEE P. 4.1
10 KOHMS
BATTERY
IGNITION
TO T.T LT. MODULE C571(6) SEE P. 23.1
TO T.T LT. MODULE C571(7) SEE P. 23.1
24 V POWER FR. JCT BOX SEE P 1.1
24V HOT WIRE RR JCT BOX SEE P1.1
24 V POWER RR JCT BOX SEE P1.1
HI-PRESS. SW. 320-245 PSI
LO-PRESS SW. 5-30 PSI
2ND SPEED PRESSURE 170-130 PSI
TO CONDENSER DOOR AJAR T.T.LT. MODULE C572 (7) SEE P. 23.1
12V POWER FROM FR JCT BOX SEE P. 2.1
24V POWER FROM FR JCT BOX CB35 SEE P. 9.3
AUX. LIQ. SOL. VAL.
DR. LIQ.SOL.VAL.
DRIVER HTR WATER VALVE N.O.
FOOT DAMPER MOTOR
DASH & DEFROST DAMPER MOTOR
REC DAMPER GAZ CYLINDER
COIL SENSING THERMO.
TO OUTSIDE FREEZE T.T.LT. MODULE C572 (14) SEE P. 23.1
WATER PUMP PRE-HEAT SIGN. SEE P. 14.1
WATER PUMP
A/C COMPRESSOR CLUTCH
TO RADIATOR FAN CLUTCH FIRST SPEED SEE P.8.1
TO RADIATOR FAN CLUTCH SECOND SPEED SEE P.8.1
CONDENSER COMPARTMENT DOOR AJAR SWITCH

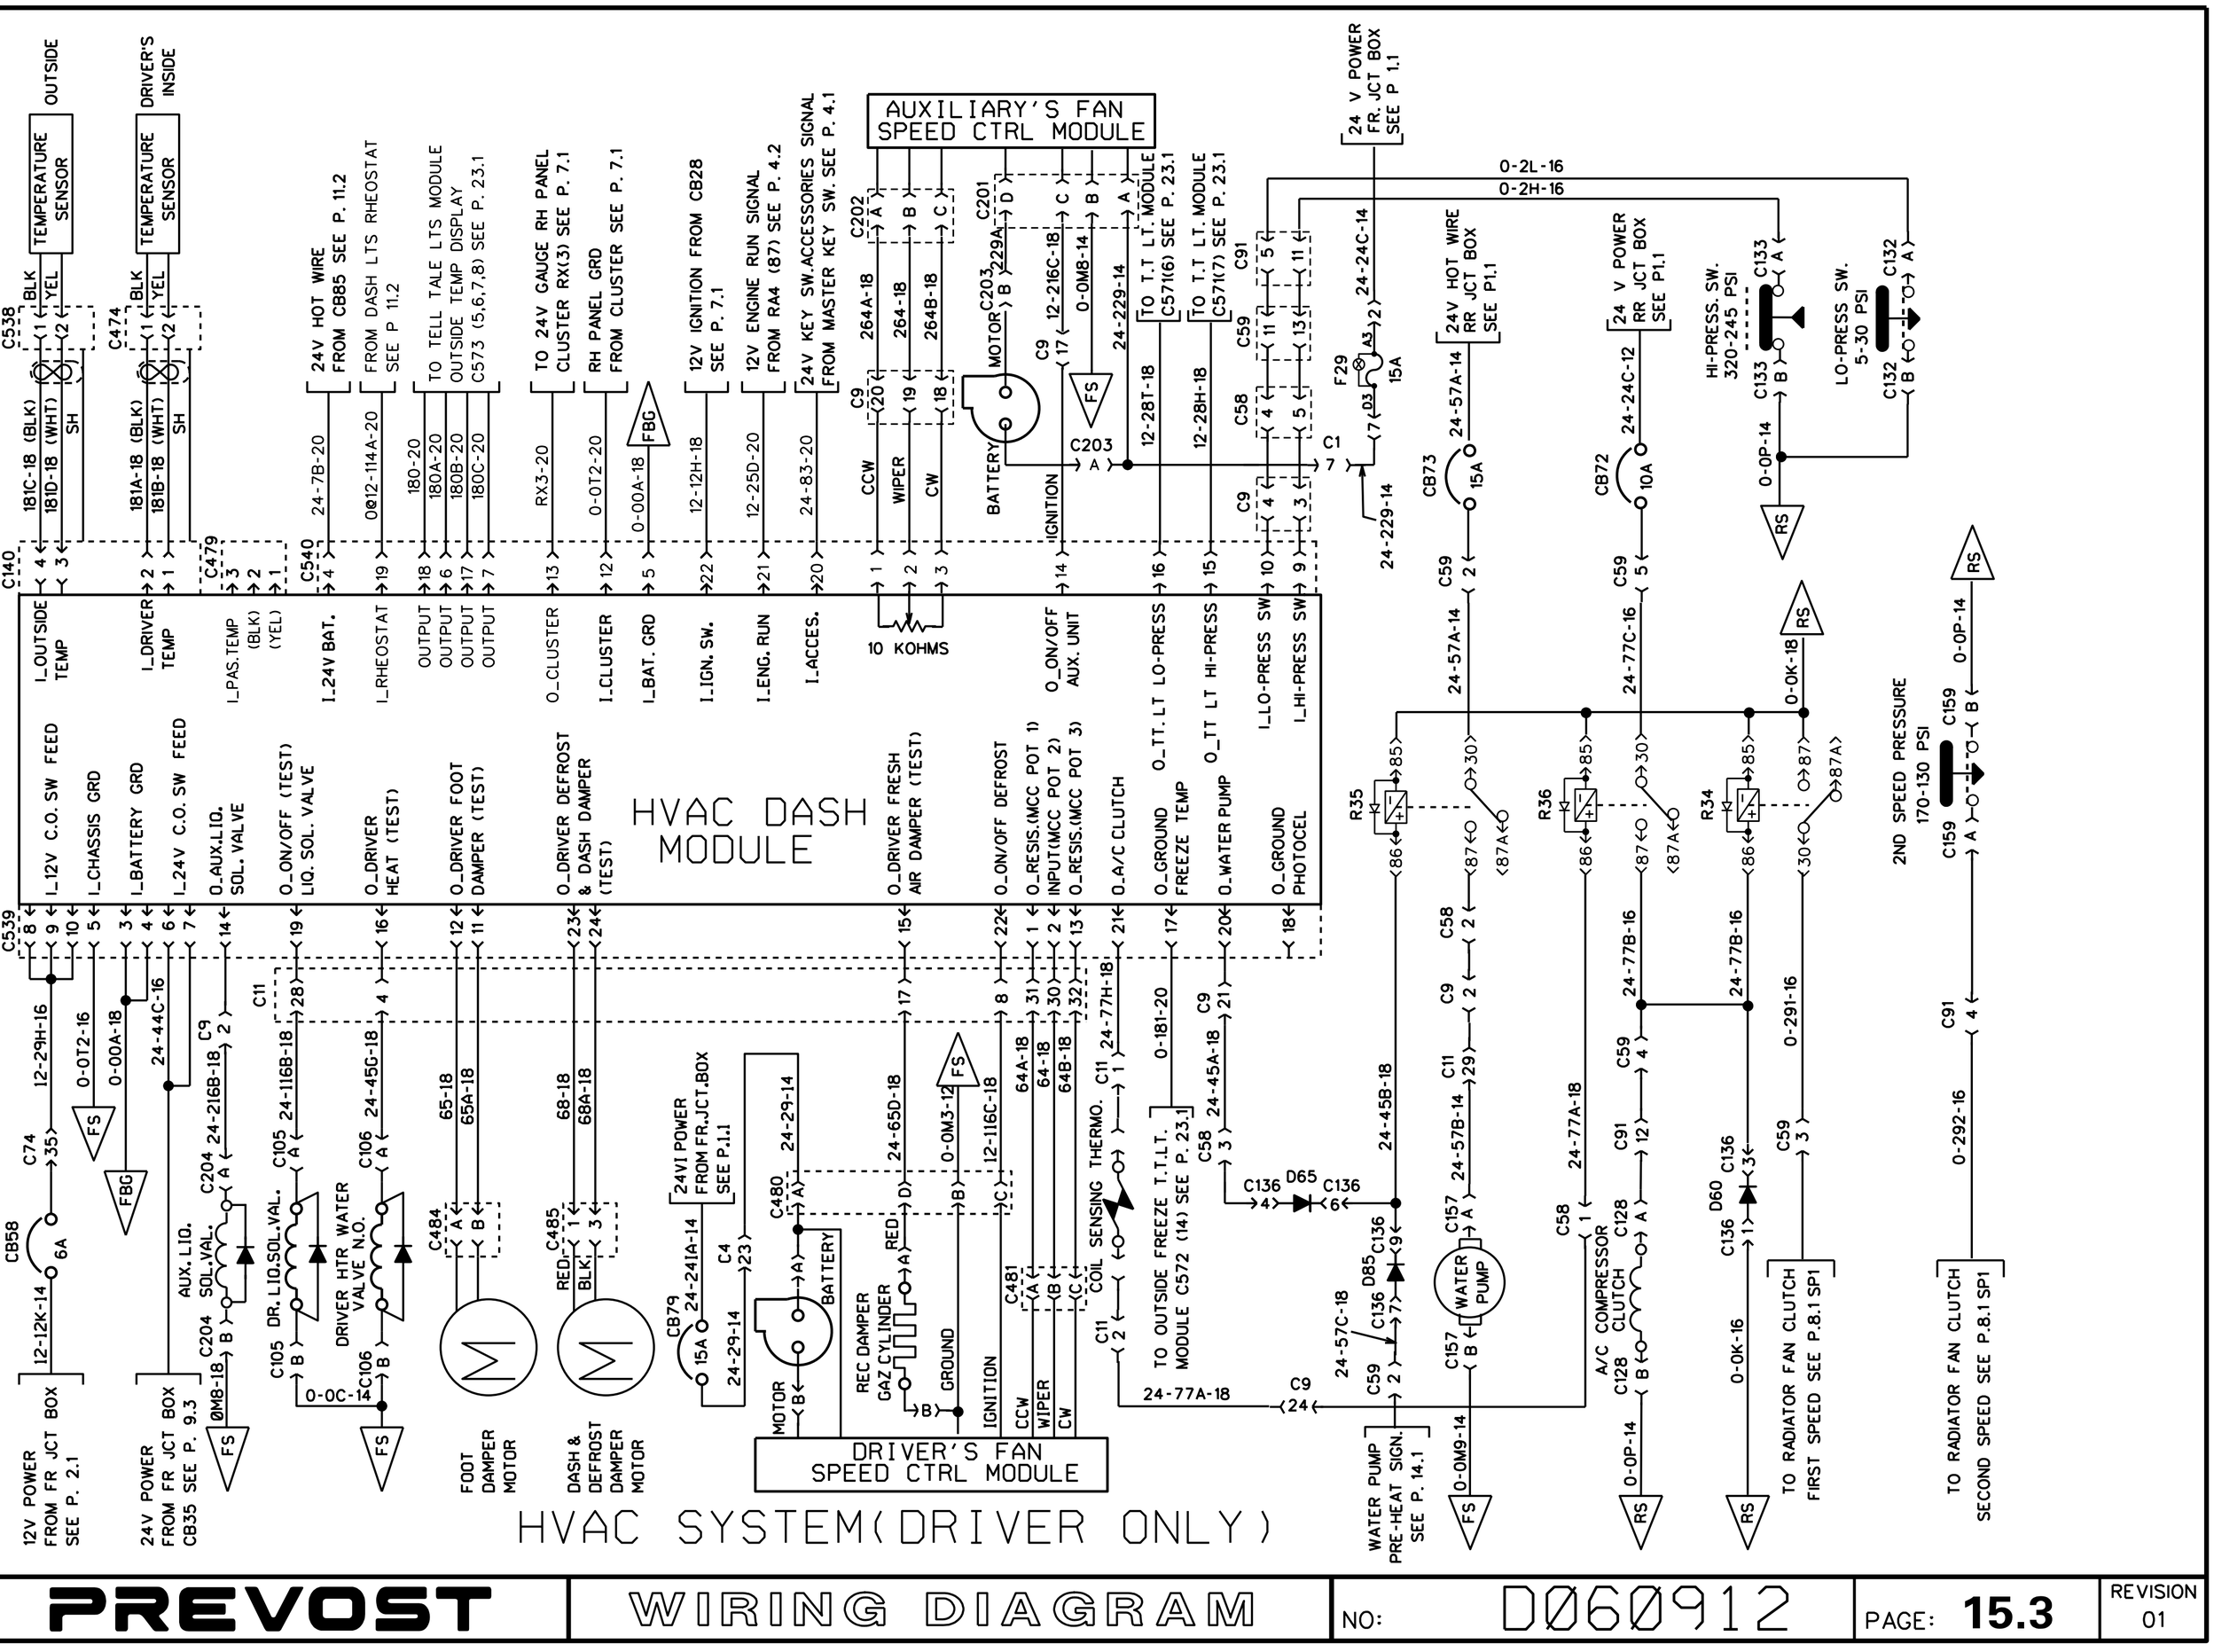
HVAC SYSTEM(DRIVER ONLY)
HVAC DASH MODULE
AUXILIARY'S FAN SPEED CTRL MODULE
DRIVER'S FAN SPEED CTRL MODULE
TEMPERATURE SENSOR
OUTSIDE
DRIVER'S INSIDE
10 KOHMS
FOOT DAMPER MOTOR
DASH & DEFROST DAMPER MOTOR
REC DAMPER GAZ CYLINDER
A/C COMPRESSOR CLUTCH
WATER PUMP
HI-PRESS. SW. 320-245 PSI
LO-PRESS SW. 5-30 PSI
2ND SPEED PRESSURE 170-130 PSI
TO RADIATOR FAN CLUTCH FIRST SPEED SEE P.8.1 SP1
TO RADIATOR FAN CLUTCH SECOND SPEED SEE P.8.1 SP1
12V POWER FROM FR JCT BOX SEE P. 2.1
24V POWER FROM FR JCT BOX CB35 SEE P. 9.3
24V POWER FR. JCT BOX SEE P 1.1
24V HOT WIRE RR JCT BOX SEE P1.1
24 V POWER RR JCT BOX SEE P1.1
WATER PUMP PRE-HEAT SIGN. SEE P. 14.1
TO OUTSIDE FREEZE T.T.L.T. MODULE C572 (14) SEE P. 23.1
TO T.T LT. MODULE C571(6) SEE P. 23.1
TO T.T LT. MODULE C571(7) SEE P. 23.1
24V HOT WIRE FROM CB85 SEE P. 11.2
FROM DASH LTS RHEOSTAT SEE P 11.2
TO TELL TALE LTS MODULE
OUTSIDE TEMP DISPLAY
C573 (5,6,7,8) SEE P. 23.1
TO 24V GAUGE RH PANEL CLUSTER RX(3) SEE P. 7.1
RH PANEL GRD FROM CLUSTER SEE P. 7.1
12V IGNITION FROM CB28 SEE P. 7.1
12V ENGINE RUN SIGNAL FROM RA4 (87) SEE P. 4.2
24V KEY SW.ACCESSORIES SIGNAL FROM MASTER KEY SW. SEE P. 4.1
24VI POWER FROM FR.JCT.BOX SEE P.1.1
I_OUTSIDE TEMP
I_DRIVER TEMP
I_PAS.TEMP (BLK) (YEL)
I.24V BAT.
I_RHEOSTAT
I_RHEOSTAT
I_RHEOSTAT
I_RHEOSTAT
O_CLUSTER
I.CLUSTER
I_BAT. GRD
I.IGN. SW.
I.ENG. RUN
I.ACCES.
O_ON/OFF AUX. UNIT
I_LO-PRESS SW
I_HI-PRESS SW
I_12V C.O. SW FEED
I_CHASSIS GRD
I_BATTERY GRD
I_24V C.O. SW FEED
O_AUX.LIQ. SOL. VALVE
O_ON/OFF (TEST) LIQ. SOL. VALVE
O_DRIVER HEAT (TEST)
O_DRIVER FOOT DAMPER (TEST)
O_DRIVER DEFROST & DASH DAMPER (TEST)
O_DRIVER FRESH AIR DAMPER (TEST)
O_ON/OFF DEFROST
O_RESIS.(MCC POT 1)
O_RESIS.(MCC POT 2)
O_RESIS.(MCC POT 3)
O.A/C CLUTCH
O_GROUND
O_TT. LT FREEZE TEMP
O_WATER PUMP
O_GROUND PHOTOCEL
C140
C538
C474
C479
C540
C539
C11
C9
C58
C59
C91
C1
C202
C203
C201
C480
C481
C484
C485
C105
C106
C204
C74
CB58
CB79
CB73
CB72
F29
C133
C132
C159
C136
C128
C157
C10
C4
R35
R36
R34
D85
D65
D60
181C-18 (BLK)
181D-18 (WHT)
SH
181A-18 (BLK)
181B-18 (WHT)
SH
24-7B-20
0@12-114A-20
180-20
180A-20
180B-20
180C-20
RX3-20
0-0T2-20
0-00A-18
12-12H-18
12-25D-20
24-83-20
CCW
WIPER
CW
264A-18
264-18
264B-18
BATTERY
IGNITION
MOTOR
229A
12-216C-18
0-0M8-14
24-229-14
12-28T-18
12-28H-18
24-24C-14
24-57A-14
24-24C-12
0-0P-14
0-0K-18
0-2L-16
0-2H-16
FBG
FS
RS
15A
10A
6A
0M8-18
0-0C-14
24-12K-14
12-29H-16
24-44C-16
24-216B-18
24-116B-18
24-45G-18
65-18
65A-18
68-18
68A-18
24-65D-18
0-0M3-12
12-116C-18
64A-18
64-18
64B-18
24-77H-18
0-181-20
24-45A-18
24-45B-18
24-57C-18
24-77A-18
24-57B-14
24-77B-16
0-291-16
0-292-16
0-0K-16
0-0M9-14
24-241A-14
24-29-14
RED
BLK
GROUND
COIL SENSING THERMO.
TO COIL
TO OUTSIDE FREEZE T.T.L.T. MODULE C572 (14) SEE P. 23.1
WATER PUMP
A/C COMPRESSOR CLUTCH
85
86
87
87A
30

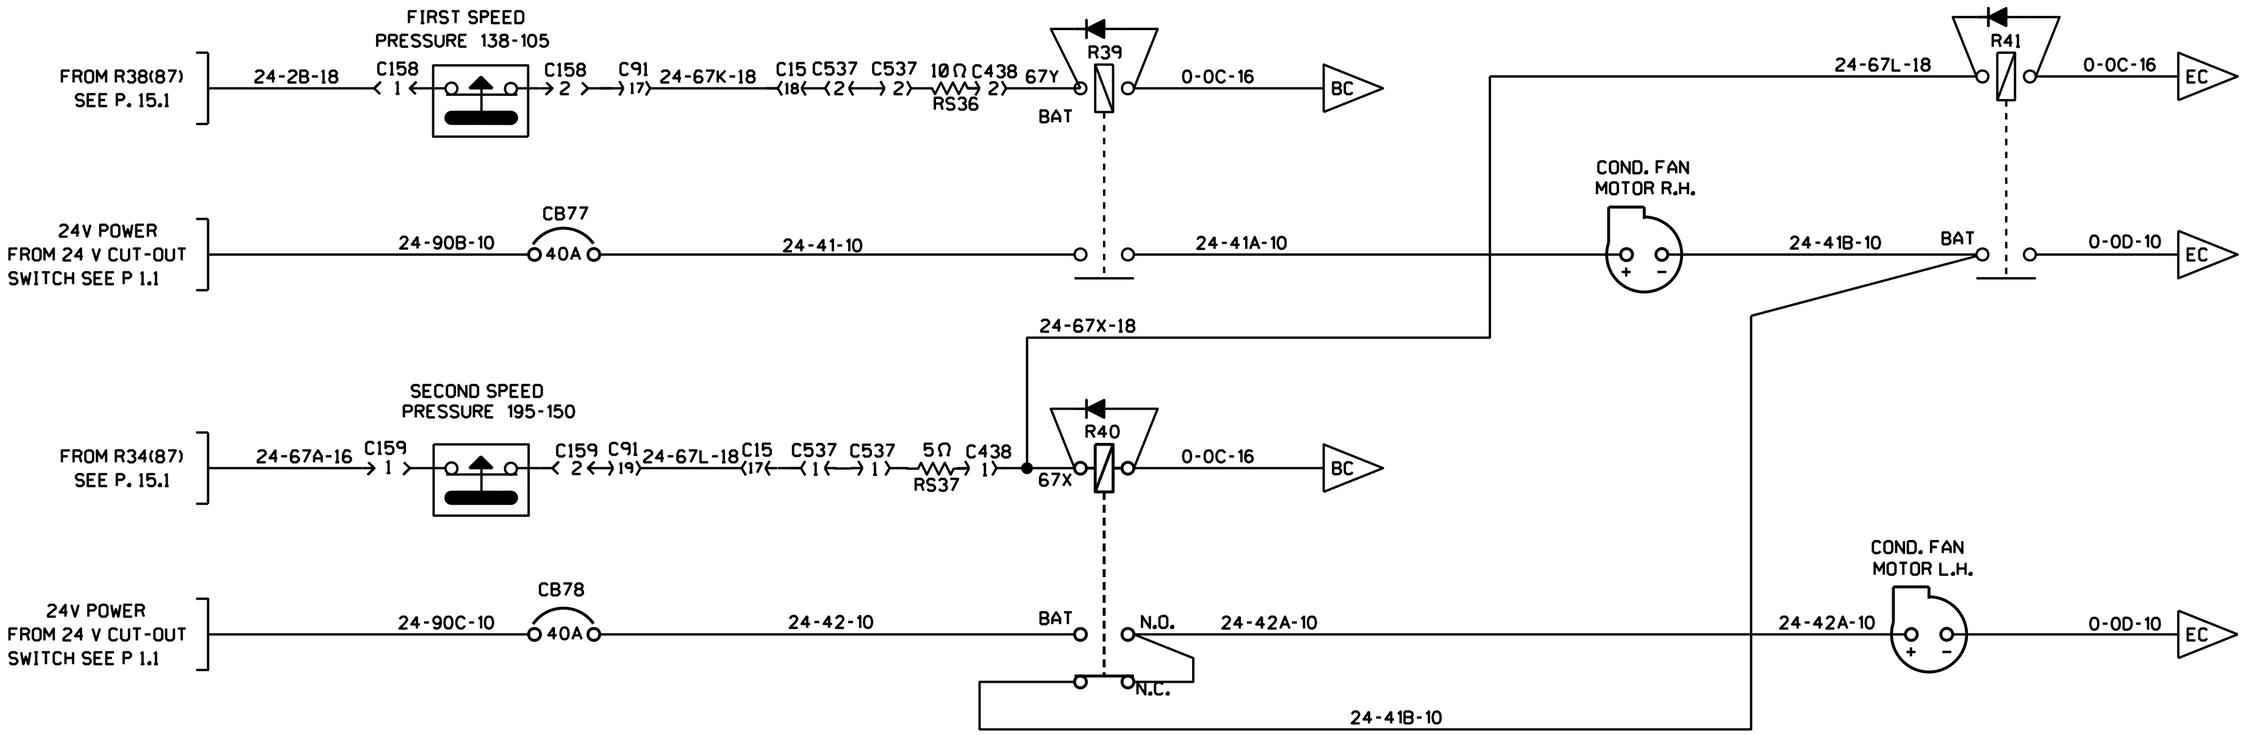

CONDENSER FAN

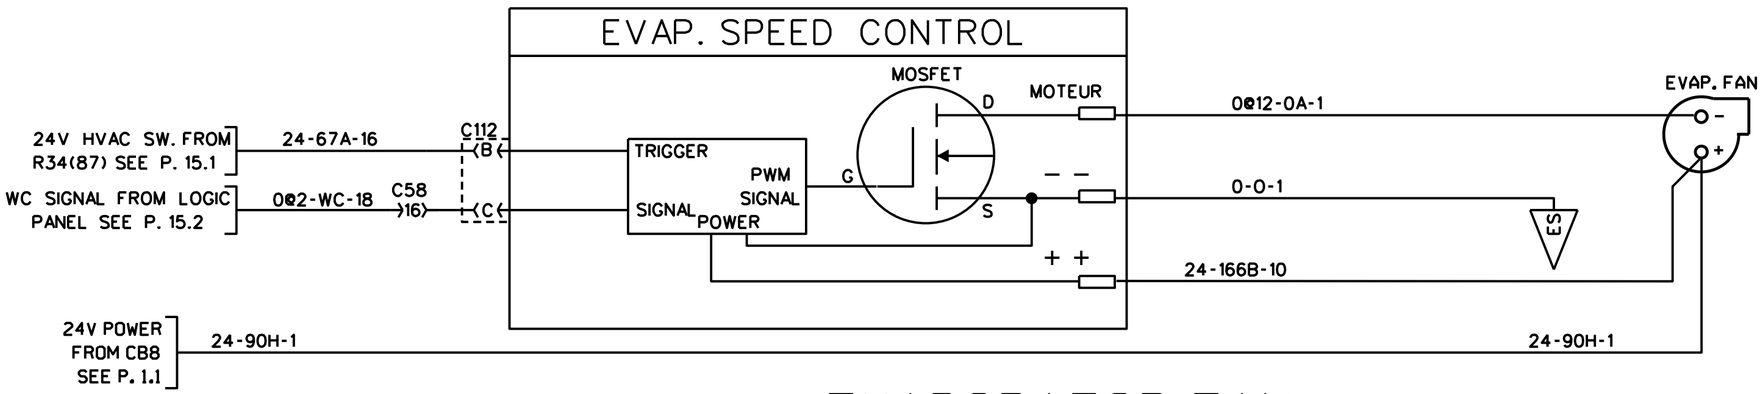

EVAPORATOR FAN



CONDENSER COMPT. DOOR AJAR (FULL AIR)

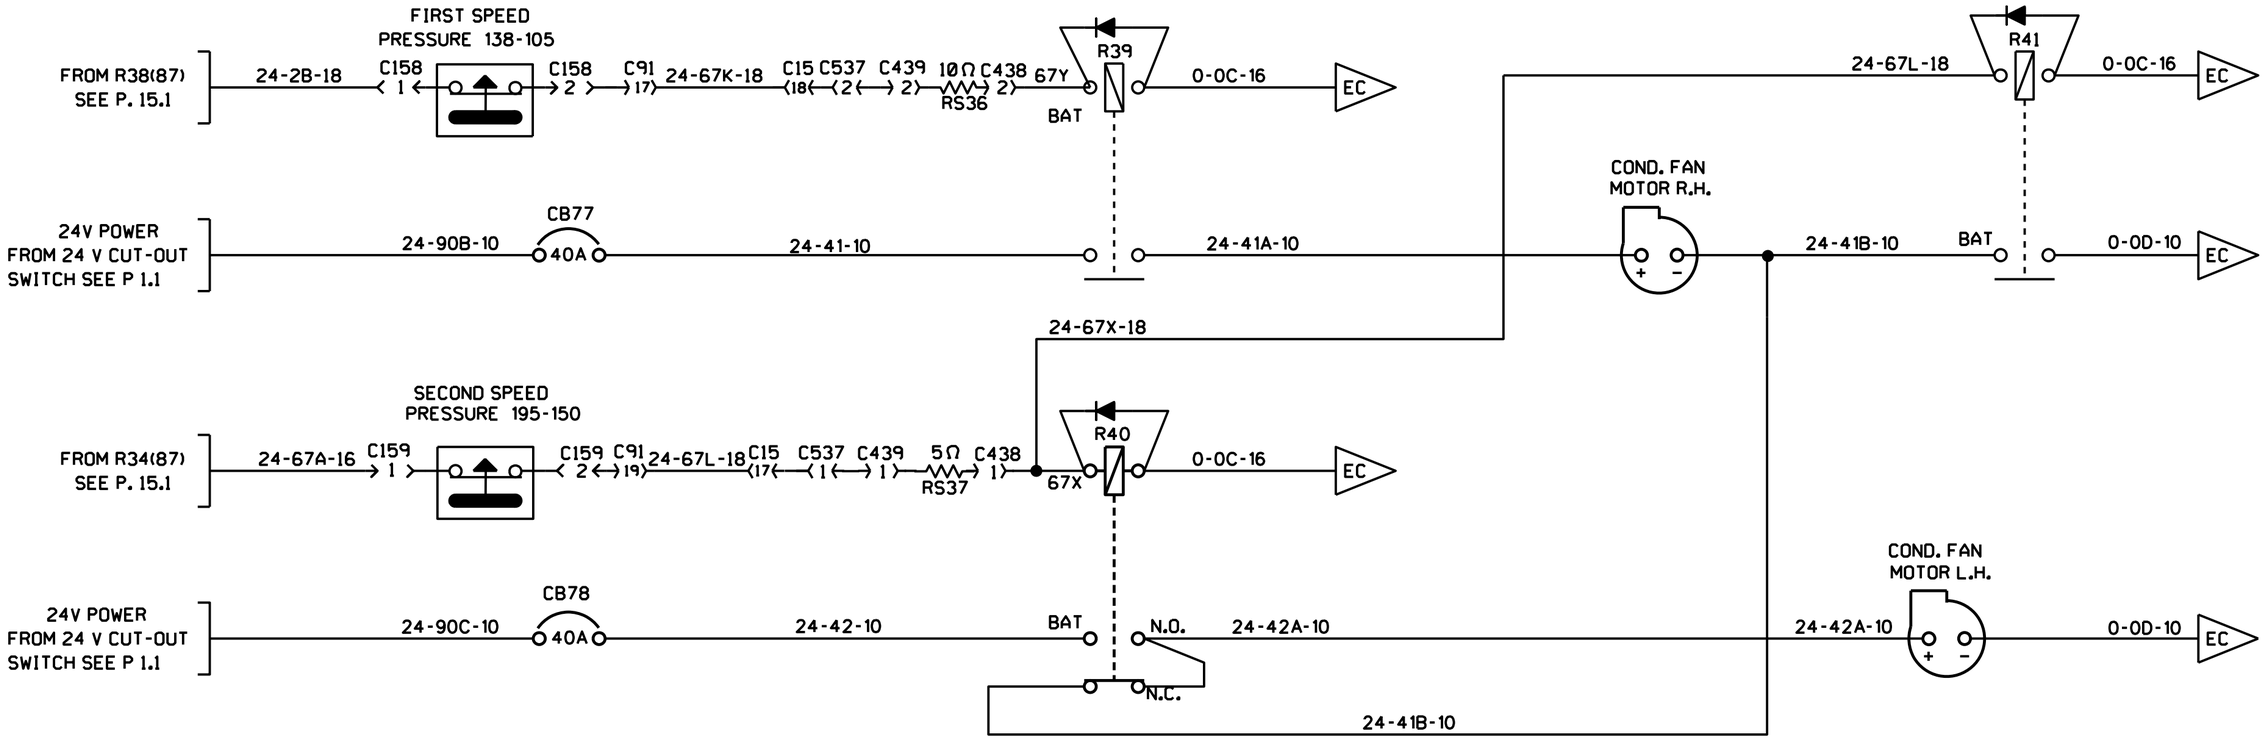

CONDENSER FAN

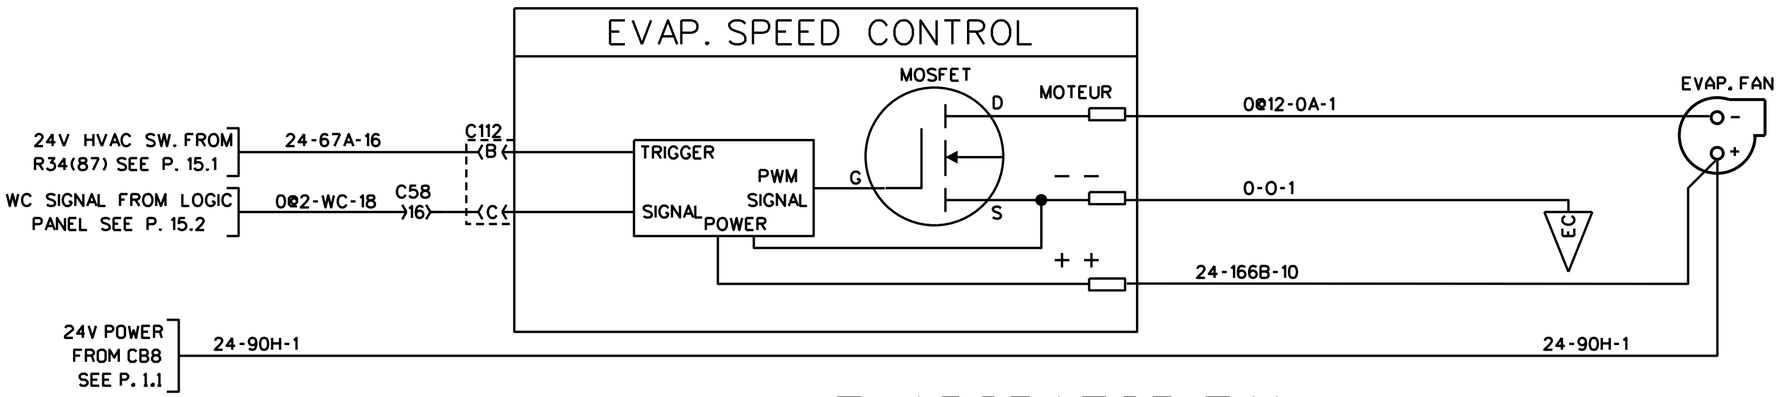

EVAPORATOR FAN



CONDENSER COMPT. DOOR AJAR (FULL AIR)

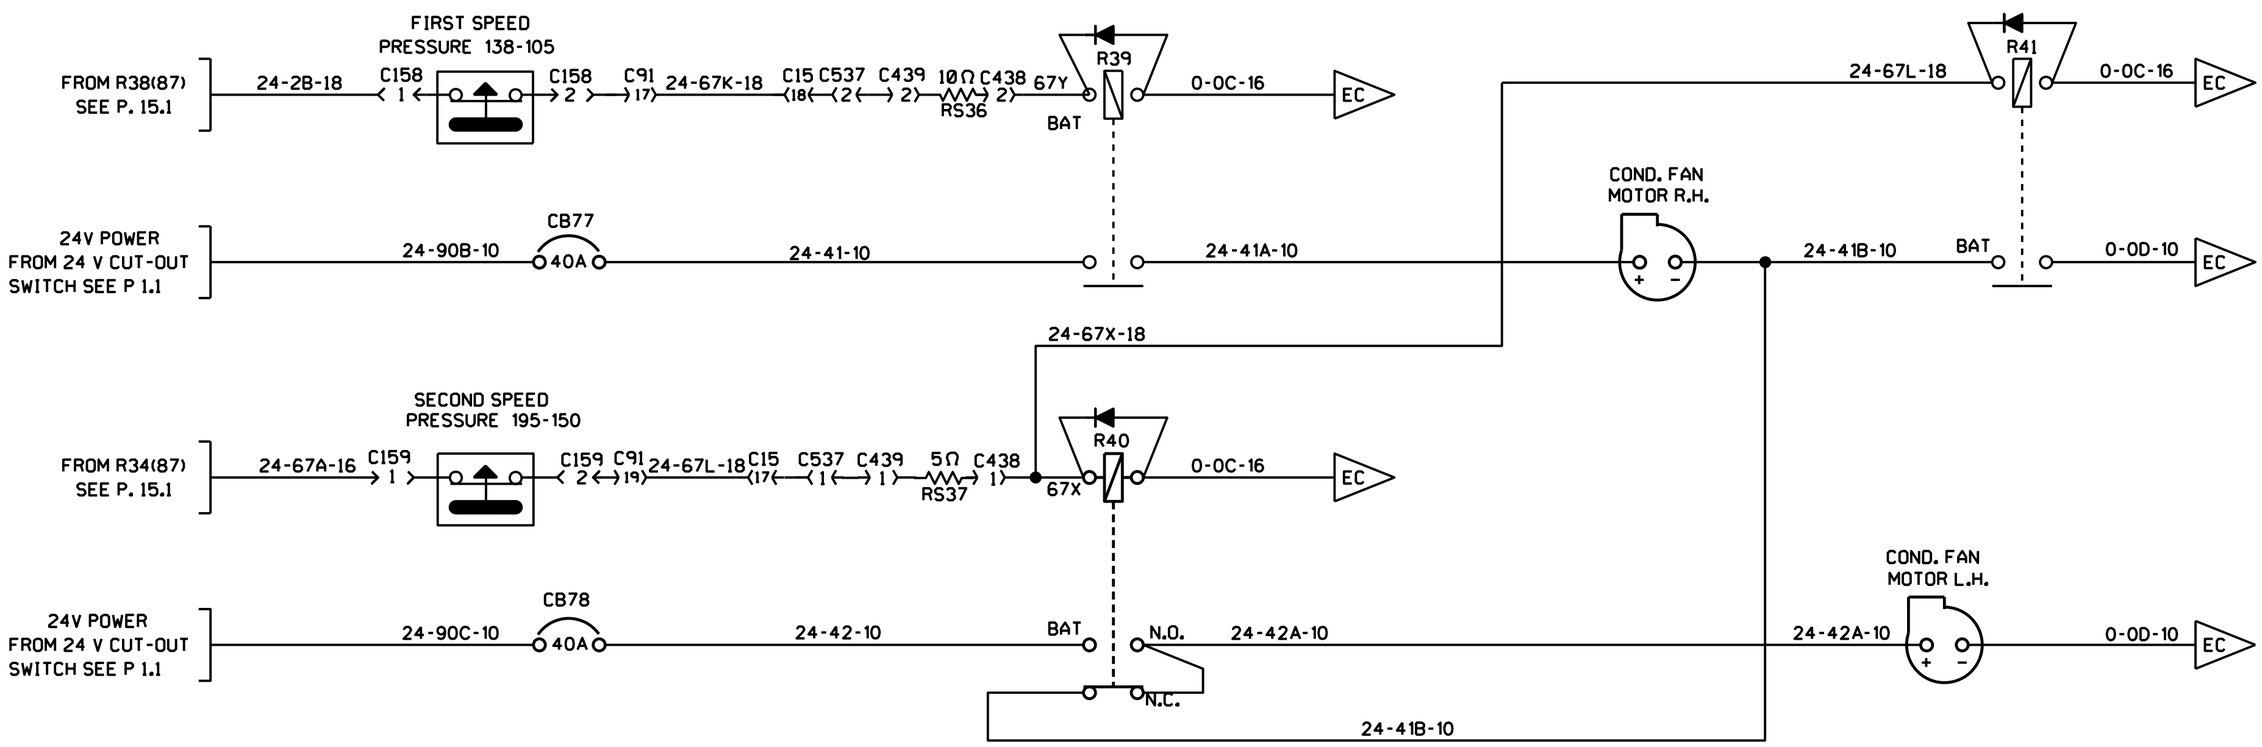

CONDENSER FAN (2 SPEED)

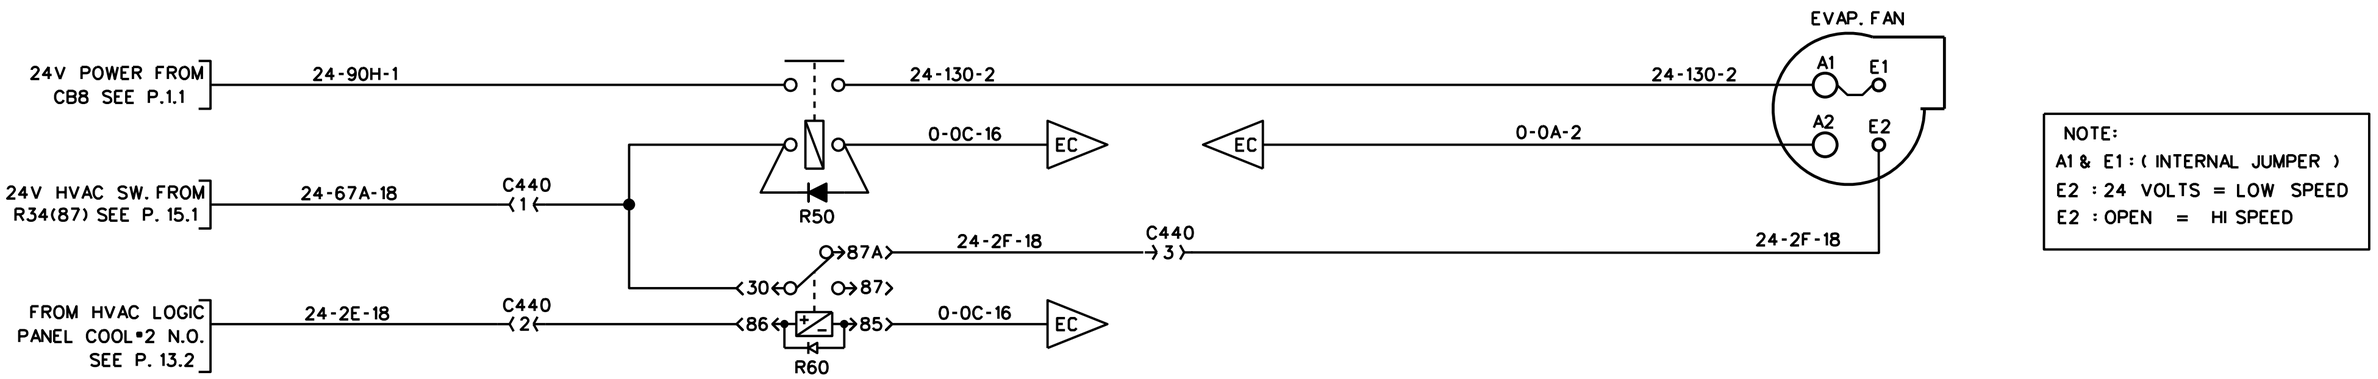

EVAPORATOR FAN (2 SPEED)

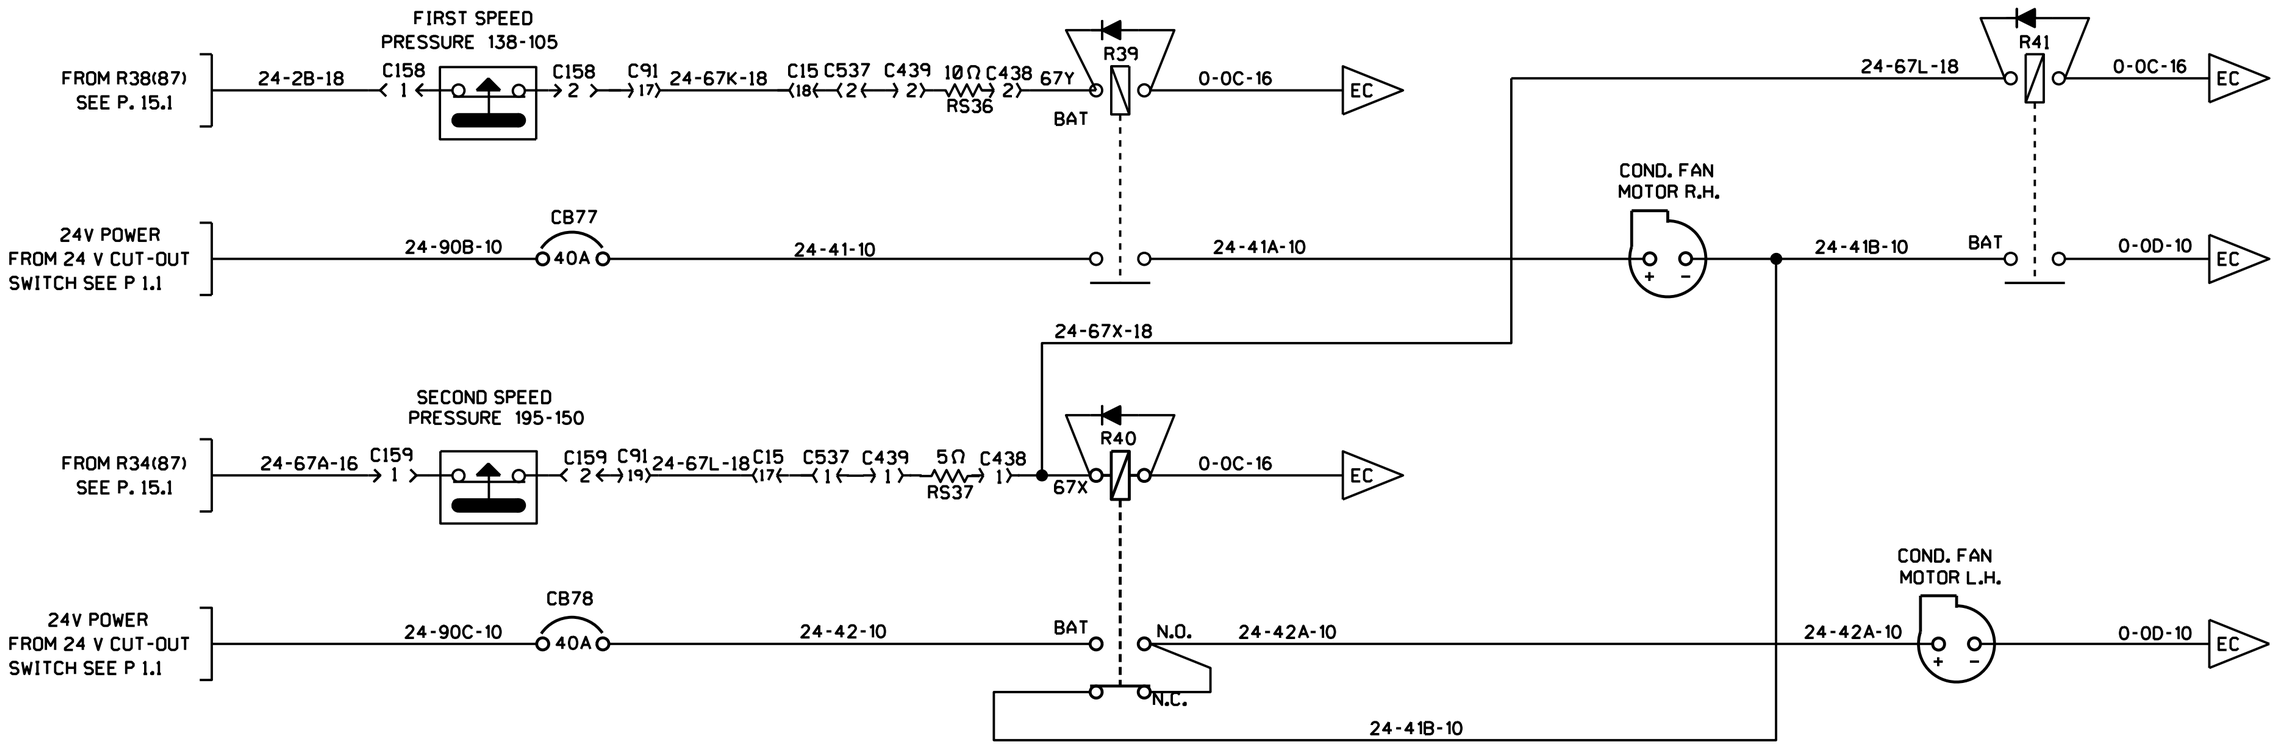

CONDENSER FAN (2 SPEED)

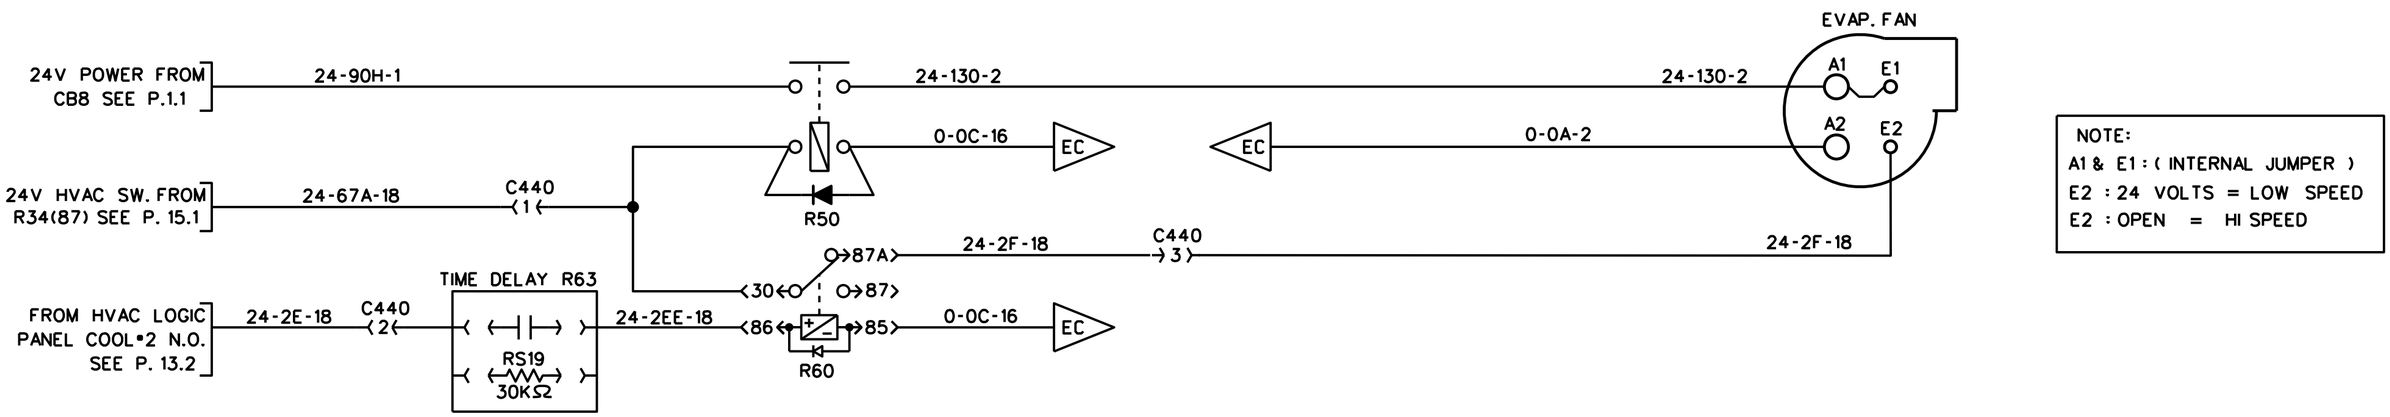

EVAPORATOR FAN (2 SPEED)

IN | HVAC DASH MODULE | OUT

DRIVER'S AIR ONLY

FBG 0-00A-16 → C539 3,4
FS 0-0T2-16 → C539 5
12V POWER FROM FR JCT BOX SEE P. 2.1 — CB58 6A — 12-29H-16 — C74 35 → C539 8,9,10; 12-12K-14
24V POWER FROM FR JCT BOX CB35 SEE P. 9.3 — 24-44C-16 → C539 6,7
12 V. ENGINE RUN FROM RA4(87) SEE P. 4.2 — 12-25D-20 → C540 21
12 VOLTS IGNITION FROM FR JCT BOX CB28 SEE P. 7.1 — 12-12H-18 → C540 22
N.C. MAGNETIC SWITCH CENTRAL POS. - OPEN — C599 1,2 — 12-69-18 → C539 11
DRIVER'S INSIDE TEMP. SENSOR — C474 YEL 2, BLK 1 — 181B-18 (WHT), 181A-18 (BLK) → C140 1,2
OUTSIDE TEMP. SENSOR — C538 YEL 2, BLK 1 — 181D-18 (WHT), 181C-18 (WHT) → C140 3,4
24V ACCESSORIES FROM KEY SWITCH SEE P. 4.1 — 24-83-20 → C540 20
FROM DASH LIGHT RHEOSTAT SEE P. 11.2 — 0@12-114A-20 → C540 19 → BACKLIGHTING INTENSITY ON KEYBOARD
24 VOLTS HOT WIRE FROM CB85 SEE P 11.2 — 24-7B-20 → C540 4 → VOLTMETER INTERFACE NOT USED
0-00A-18 → C540 5 → ELECTRONIC GROUND

POWER GRD
POWER 12 V (AND)
POWER 24 V (AND)
ON OFF DRIVER: 24V, 12V
10 Kohms ELECTRONIC DRIVER POT.
HEATING INDICATOR
REC DRIVER: 24V
PHOTOCELL INTENSITY ON DISPLAY
DRIVER'S TEMP. CTR'L — 24V
CUT OUT - 25 F, CUT-IN - 35 F — 24V — FROZEN POINT SIGNAL OUTSIDE THERMOMETER
ON OFF AUX: 12V
10 Kohms ELECTRONIC DRIVER POT.
24V A/C
HI-PRESS SW. 320-245 PSI — C133 B, A — C91 1 — C59 13 — C58 5 — C9 3 — 0-2H-16 → C540 9
LO-PRESS SW. 5-30 PSI — 0-2L-16 — C132 B, A — C91 5 — C59 11 — C58 4 — C9 4 → C540 10
0-0P-14 → RS
ON-DELAY 45 SEC. (x2)
AND (x3)

C539 16 → C11 4 — 24-45G-18 → DRIVER'S HEATER SOL. VALVE C106 A, N.O., C106 B — 0-0C-14
C539 19 → C11 28 — 24-116B-18 → DRIVER'S LIQ. SOL. VALVE C105 A, N.C., C105 B — 0-0C-14
C539 22 → C11 8 — 24-116C-18 → C480 C
C539 13 → C11 32 — 64B-18 → C481 C — CW — TRIGGER ON, PWM CONTROL, DRIVER'S FAN SPEED CTR'L — MOTOR → DEFROSTER FAN B; BATTERY → A; GRD → C480 B — 0-0M3-12 → FS
C539 2 → C11 30 — 64-18 → C481 B — WIPER
C539 1 → C11 31 — 64A-18 → C481 A — CCW
24VI POWER FROM FR.JCT.BOX C11 SEE P.1.1 — 24-24IA-14 — CB79 15A — C4 23 — 24-29-14 → C480 A
24-65D-18 → C480 D — RED → REC DAMPER GAZ CYLYNDER A, B
C539 15 → C11 17
C539 18
C539 11 → 65A-18 → C484 B — MOTOR — FOOT DAMPER A
C539 12 → 65-18
C539 23 → 68-18 → C485 1 — MOTOR — DASH & DEFROST DAMPER 3
C539 24 → 68A-18
C539 17 → 0-181-20 → TO FROZEN POINT T.T. LT MODULE C572(14) P. 23.1
C539 14 → 24-216B-18 → AUX. LIQ. SOL. VALVE C204 N.C., C9 2, C204 A, C204 B — 0M8-18 → FS
C9 7 → C1 7 — F29 15A — 2 → 24-24C-14 → FJB SEE P. 1.1 24V POWER
C203 A → 24-229-14
C540 14 → C9 17 — IGNITION — 12-216C-18 → C201 C — TRIGGER ON
C540 3 → C9 18 — CW — 264B-18 → C202 C — CW
C540 2 → C9 19 — WIPER — 264-18 → C202 B — WIPER — PWM CONTROL, AUX. FAN SPEED CTR'L — MOTOR → DEFROSTER FAN B; BATTERY → A; GRD → C480 B — 0-0M8-14 → FS
C540 1 → C9 20 — CCW — 264A-18 → C202 A — CCW
C539 18 → 180-20 → TO TELL-TALE LTS MODULE OUTSIDE TEMP. DYSPLAY C573(5,6,7,8) SEE P. 23.1
C539 6 → 180A-20
C539 17 → 180B-20
C539 7 → 180C-20
C539 13 → 24 V HOT WIRE RR JCT BOX P. 1.1 — 24-57A-14 — CB73 15A — C59 2 — 24-57A-14 → 30 — 87A; 87 → C58 2 — C9 2 — C11 29 — C157 A — WATER PUMP — C157 B — 24-57B-14 → 0-0M9-14 → FS
C539 12
24V — C539 20 — 24-45B-18 → C9 21 — 24-45A-18 → C58 3 — C136 4 — D65 — C136 6 → 86 — 85 → 0-0C4-18 → FS
FROM PRE-HEAT R83(87) SEE 14.1 — C59 2 — 24-57C-18 → C136 7 — D85 — C136 9 → 86
R35; R34 86 — 85 → 0-0K-18 → FS
C540 15 → 12-28H-18 → TO T.T. LT. MODULE C571 (7) SEE P. 23.1
C540 16 → COIL SENSING THERMOSTAT
FROM RADIATOR FAN CLUTCH 1ST SPEED SEE P. 8.1 SP1 — 0-291-16 → C59 3 → 30 — 87; 87A
C539 21 → 24-77H-18 → C11 1 — C11 2 — C9 24 — 24-77A-18 → C58 1 → 86 — 85
R36 86 — 85 → A/C COMPRESSOR CLUTCH C59 4 — C91 12 — C128 A, C128 B — 0-0P-14
24 V POWER FROM RR JCT BOX P. 1.1 — 24-24C-12 — CB72 10A — C59 5 — 24-77C-16 → 30 — 87; 87A
24-77B-18 → C136 3 — D60 — C136 1 — 0-0K-16 → RS
12-28T-18 → TO T.T. LT. MODULE C571 (6) SEE P. 23.1
FROM RADIATOR FAN CLUTCH 2ND SPEED SEE P. 8.1 SP1 — 0-292-16 → C91 4 — C159 A, C159 B — 2ND SPEED PRESS. SW. 170-130 PSI → RS

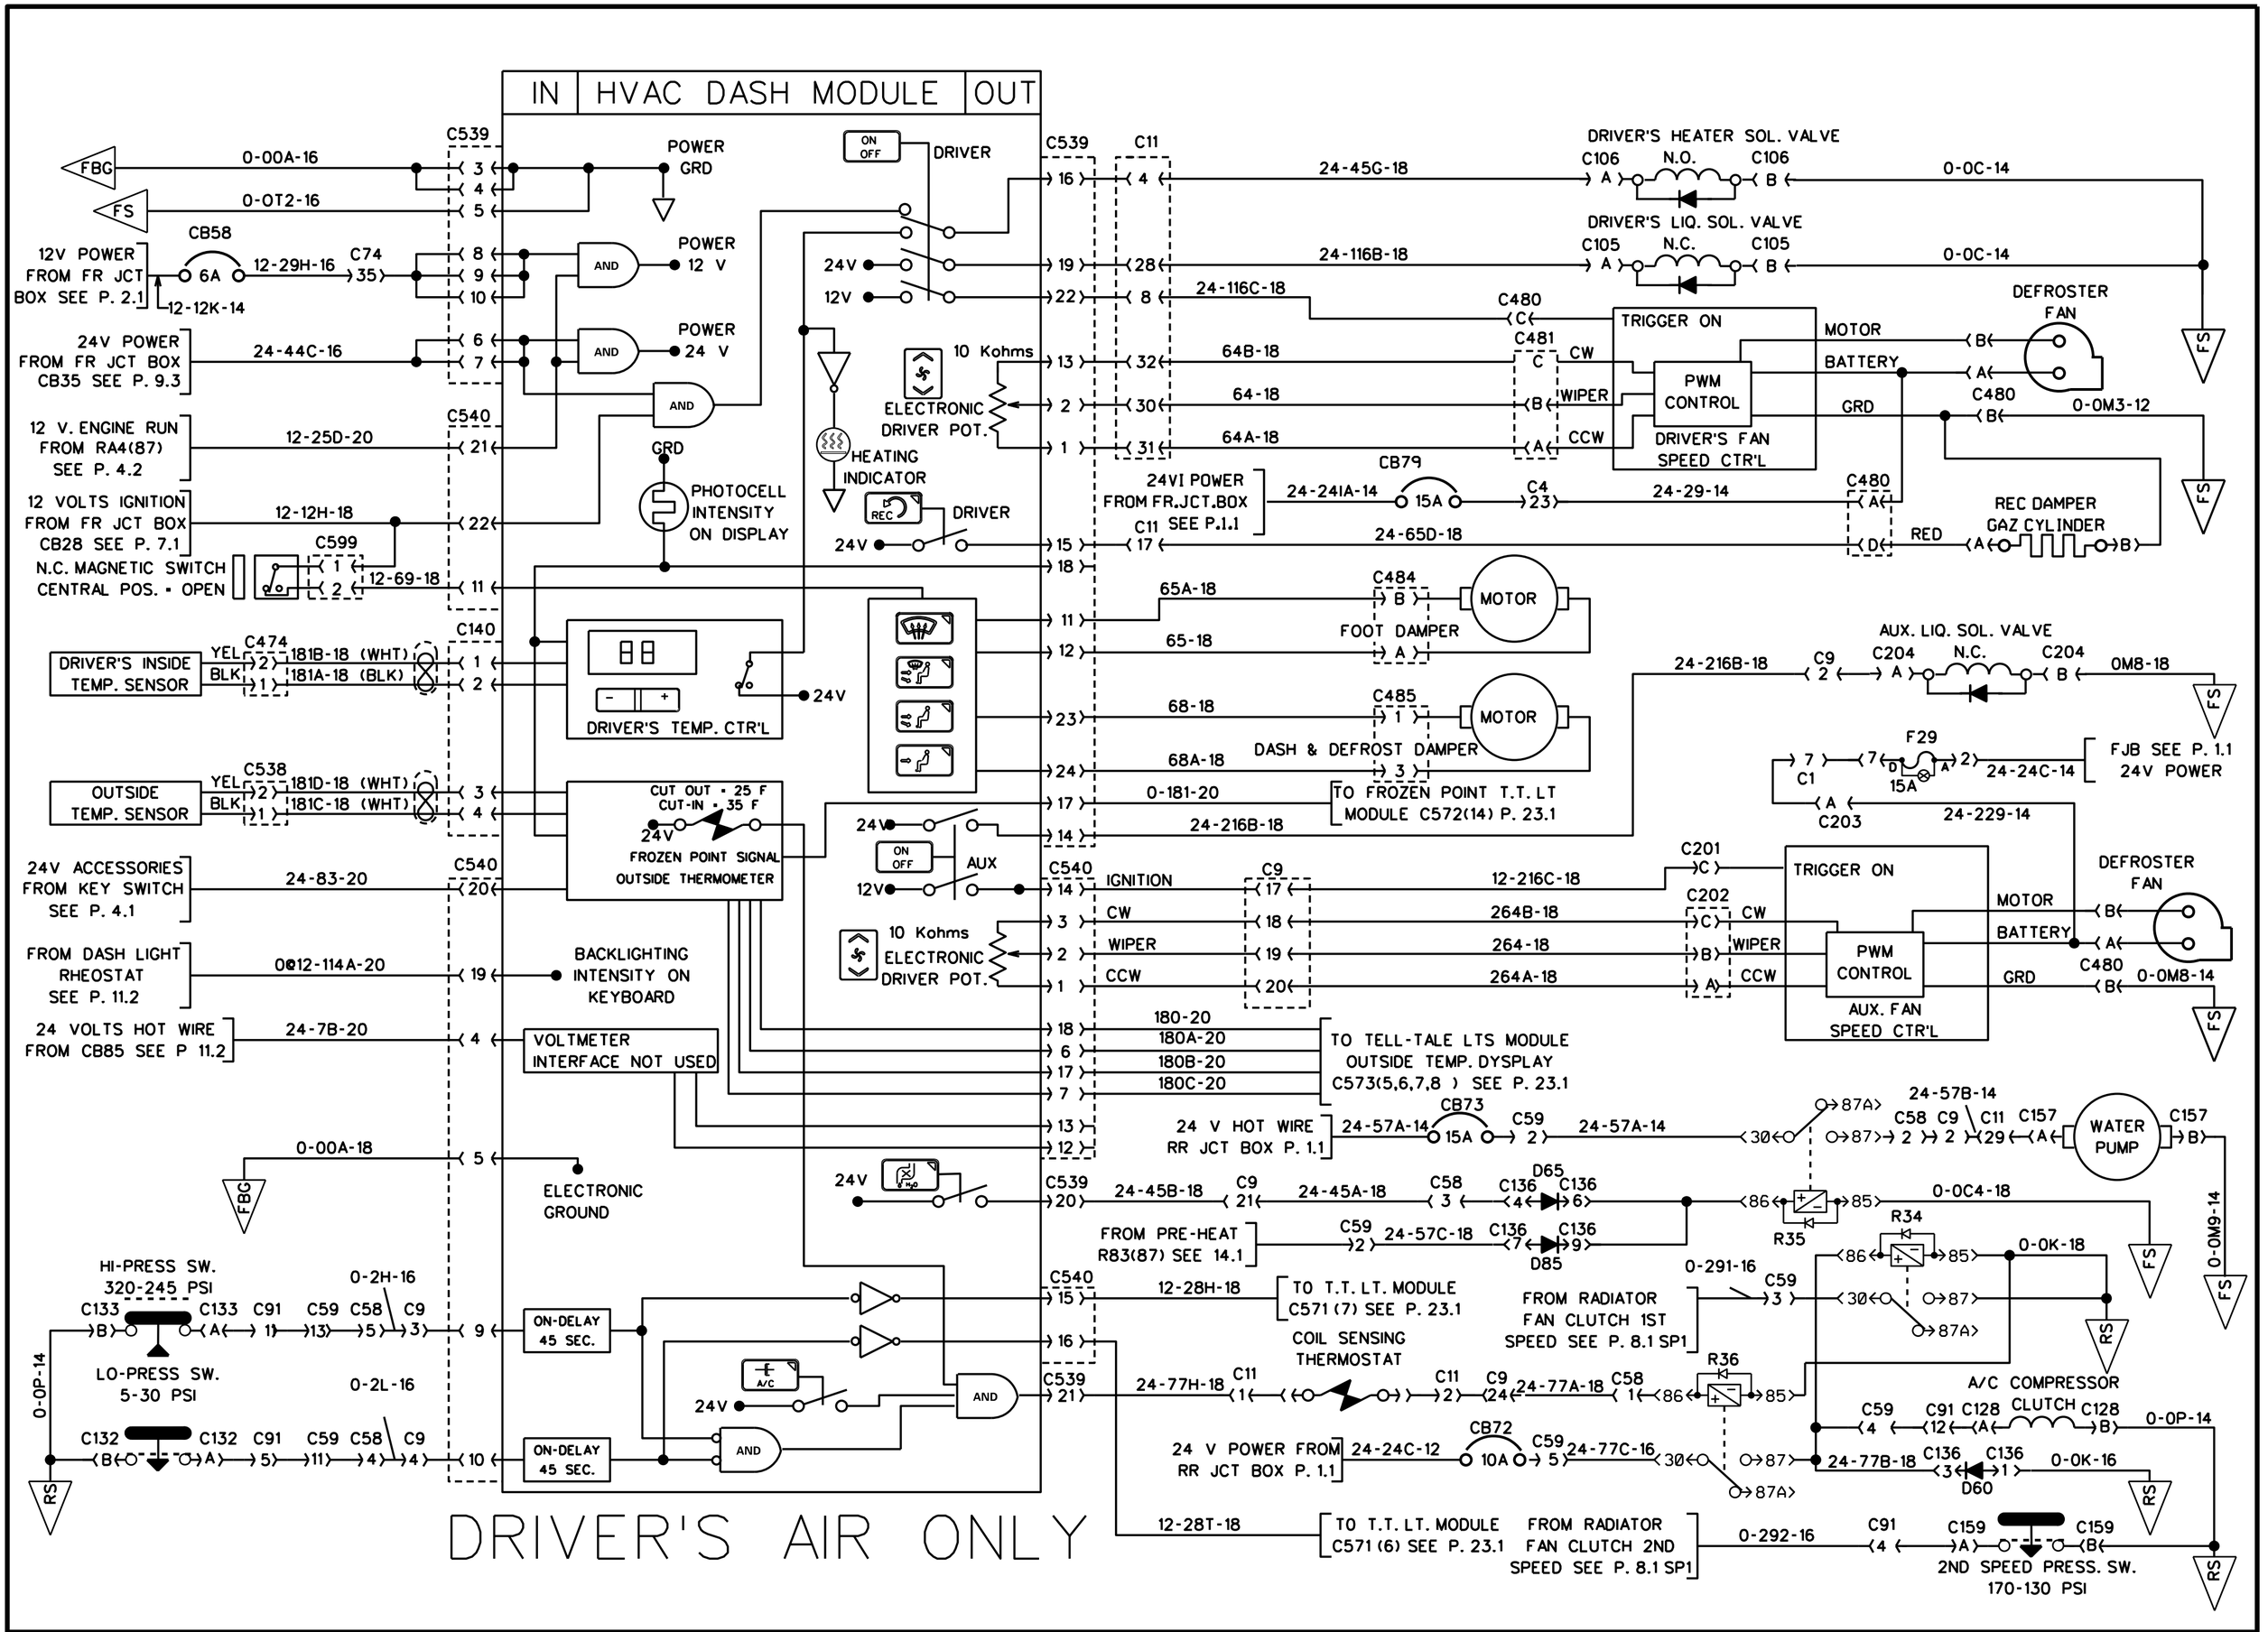
IN
HVAC DASH MODULE
OUT
C539
C11
C540
C140
C538
C474
C599
C480
C481
C484
C485
C201
C202
C203
C204
C9
C91
C128
C133
C132
C136
C159
F29
FBG
FS
RS
CB58
6A
12-29H-16
C74
35
12-12K-14
0-00A-16
0-0T2-16
POWER
GRD
AND
POWER
12 V
POWER
24 V
ON
OFF
DRIVER
24V
12V
10 Kohms
ELECTRONIC
DRIVER POT.
HEATING
INDICATOR
REC
DRIVER
24V POWER
FROM FR JCT BOX
CB35 SEE P. 9.3
24-44C-16
12 V. ENGINE RUN
FROM RA4(87)
SEE P. 4.2
12-25D-20
12 VOLTS IGNITION
FROM FR JCT BOX
CB28 SEE P. 7.1
12-12H-18
N.C. MAGNETIC SWITCH
CENTRAL POS. - OPEN
12-69-18
GRD
PHOTOCELL
INTENSITY
ON DISPLAY
DRIVER'S INSIDE
TEMP. SENSOR
YEL
BLK
181B-18 (WHT)
181A-18 (BLK)
DRIVER'S TEMP. CTR'L
OUTSIDE
TEMP. SENSOR
181D-18 (WHT)
181C-18 (WHT)
CUT OUT - 25 F
CUT-IN - 35 F
FROZEN POINT SIGNAL
OUTSIDE THERMOMETER
24V ACCESSORIES
FROM KEY SWITCH
SEE P. 4.1
24-83-20
FROM DASH LIGHT
RHEOSTAT
SEE P. 11.2
0@12-114A-20
BACKLIGHTING
INTENSITY ON
KEYBOARD
24 VOLTS HOT WIRE
FROM CB85 SEE P 11.2
24-7B-20
VOLTMETER
INTERFACE NOT USED
0-00A-18
ELECTRONIC
GROUND
HI-PRESS SW.
320-245 PSI
LO-PRESS SW.
5-30 PSI
0-2H-16
0-2L-16
0-0P-14
ON-DELAY
45 SEC.
A/C
IGNITION
CW
WIPER
CCW
180-20
180A-20
180B-20
180C-20
TO TELL-TALE LTS MODULE
OUTSIDE TEMP. DYSPLAY
C573(5,6,7,8) SEE P. 23.1
24 V HOT WIRE
RR JCT BOX P. 1.1
24-57A-14
CB73
15A
24-57B-14
WATER
PUMP
FROM PRE-HEAT
R83(87) SEE 14.1
24-57C-18
D65
D85
R35
R34
0-0C4-18
0-0K-18
0-291-16
FROM RADIATOR
FAN CLUTCH 1ST
SPEED SEE P. 8.1 SP1
TO T.T. LT. MODULE
C571 (7) SEE P. 23.1
12-28H-18
COIL SENSING
THERMOSTAT
24-77H-18
24-77A-18
R36
A/C COMPRESSOR
CLUTCH
24 V POWER FROM
RR JCT BOX P. 1.1
24-24C-12
CB72
10A
24-77C-16
24-77B-18
D60
0-0K-16
TO T.T. LT. MODULE
C571 (6) SEE P. 23.1
12-28T-18
FROM RADIATOR
FAN CLUTCH 2ND
SPEED SEE P. 8.1 SP1
0-292-16
2ND SPEED PRESS. SW.
170-130 PSI
24V POWER
FROM FR.JCT.BOX
C11 SEE P.1.1
24-24IA-14
CB79
15A
24-29-14
24-65D-18
DRIVER'S HEATER SOL. VALVE
C106
N.O.
0-0C-14
24-45G-18
DRIVER'S LIQ. SOL. VALVE
C105
N.C.
24-116B-18
24-116C-18
TRIGGER ON
PWM
CONTROL
DRIVER'S FAN
SPEED CTR'L
MOTOR
BATTERY
GRD
DEFROSTER
FAN
0-0M3-12
64B-18
64-18
64A-18
REC DAMPER
GAZ CYLINDER
RED
65A-18
65-18
FOOT DAMPER
68-18
68A-18
DASH & DEFROST DAMPER
0-181-20
TO FROZEN POINT T.T. LT
MODULE C572(14) P. 23.1
24-216B-18
AUX. LIQ. SOL. VALVE
0M8-18
FJB SEE P. 1.1
24V POWER
24-24C-14
24-229-14
AUX
12-216C-18
264B-18
264-18
264A-18
AUX. FAN
SPEED CTR'L
0-0M8-14
0-0M9-14
DRIVER'S AIR ONLY

IN | HVAC DASH MODULE | OUT

C539 3 4 5 — 0-0T5-14 — FS — 0-0T5-18 — POWER GRD

CB58 6A — 12V POWER FROM FR JCT BOX SEE P. 2.1 — 12-12K-14 — 12-29H-16 — C74 35 — C539 8 9 10 — AND — POWER 12 V

24V POWER FROM FR JCT BOX CB35 SEE P. 9.3 — 24-44C-16 — C539 6 7 — AND — POWER 24 V

12 V. ENGINE RUN FROM RA4(87) SEE P. 4.2 — 12-25D-20 — C540 21 — AND

12 VOLTS IGNITION FROM FR JCT BOX CB28 SEE P. 7.1 — 12-12H-18 — C539 22

N.C. MAGNETIC SWITCH CENTRAL POS. - OPEN — C599 1 2 — 12-69-18 — C540 11

DRIVER'S INSIDE TEMP. SENSOR — C474 YEL 2 BLK 1 — 181B-18 (YEL) 181A-18 (YEL) — C140 1 2

OUTSIDE TEMP. SENSOR — C538 YEL 2 BLK 1 — 181D-18 (CLR) 181C-18 (BLK) — C140 3 4

24V ACCESSORIES FROM KEY SWITCH SEE P. 4.1 — 24-83-20 — C540 20

FROM DASH LIGHT RHEOSTAT SEE P. 11.2 — 0@12-114A-20 — C539 19 — BACKLIGHTING INTENSITY ON KEYBOARD

24 VOLTS HOT WIRE FROM CB85 SEE P 11.2 — 24-7B-20 — C539 4 — VOLTMETER INTERFACE NOT USED

FBG — 0-00A-18 — C539 5 — ELECTRONIC GROUND

HI-PRESS SW. 320-245 PSI — C133 B A — C91 11 — C59 13 — C58 5 — C9 3 — 0-2H-16 — C539 9 — ON-DELAY 45 SEC.

LO-PRESS SW. 5-30 PSI — 0-0P-14 — RS

C132 B A — C91 5 — C59 11 — C58 4 — C9 4 — 0-2L-16 — C539 10 — ON-DELAY 45 SEC.

ON OFF — DRIVER — 24V — 12V — C539 16 19 22

10 Kohms — ELECTRONIC DRIVER POT. — C539 13 2 1

HEATING INDICATOR — REC — DRIVER — 24V — C539 15 18

GRD — PHOTOCELL INTENSITY ON DISPLAY

DRIVER'S TEMP. CTR'L — 24V

CUT OUT - 25 F CUT-IN - 35 F — 24V — FROZEN POINT SIGNAL OUTSIDE THERMOMETER — C539 11 12

ON OFF — AUX — 12V — C539 23 24

10 Kohms — ELECTRONIC DRIVER POT. — C539 17 14 3 2 1

FROZEN POINT SIGNAL OUTSIDE THERMOMETER — C539 18 6 17 7

24V — A/C — AND — C539 13 12

24V — C539 20 — 24-45B-18 — C9 21 — 24-45A-18 — C58 3 — C136 4 — D65 — C136 6

FROM PRE-HEAT R83(87) SEE 14.1 — C59 2 — 24-57C-18 — C136 7 — C136 9 — D85

C540 15 16

TO T.T. LT. MODULE C571 (7) SEE P. 23.1 — 12-28H-18

COIL SENSING THERMOSTAT

C539 21 — 24-77H-18 — C11 1 — C11 2 — C9 24 — 24-77A-18 — C58 1

24 V POWER FROM RR JCT BOX P. 1.1 — 24-24C-12 — CB72 10A — C59 5 — 24-77C-16

TO T.T. LT. MODULE C571 (6) SEE P. 23.1 — 12-28T-18

C11 4 — 24-45G-18 — DRIVER'S HEATER SOL. VALVE C106 N.O. C106 — 0-0C-14 — FS

C11 28 — 24-116B-18 — DRIVER'S LIQ. SOL. VALVE C105 N.C. C105 — 0-0C-14 — FS

C11 8 — 24-116C-18 — C480 C — TRIGGER ON — MOTOR — DEFROSTER FAN — BATTERY — GRD — C480 B — 0-0M3-12 — FS

C481 C — CW — C481 B — WIPER — C481 A — CCW — PWM CONTROL — DRIVER'S FAN SPEED CTR'L

C11 32 — 64B-18 — C481 C

C11 30 — 64-18 — C481 B

C11 31 — 64A-18 — C481 A

24VI POWER FROM FR.JCT.BOX C11 SEE P.1.1 — 24-241A-14 — CB79 15A — C4 23 — 24-29-14 — C480 A

C11 17 — 24-65D-18 — C480 D — RED — REC DAMPER GAZ CYLINDER

C539 11 — 65A-18 — C484 B — MOTOR — FOOT DAMPER — C484 A

C539 12 — 65-18

C539 23 — 68-18 — C485 1 — MOTOR — DASH & DEFROST DAMPER — C485 3

C539 24 — 68A-18

C539 17 — 0-181-20 — TO FROZEN POINT T.T. LT MODULE C572(14) P. 23.1

C539 14 — 24-216B-18 — C9 2 — 24-216B-18 — AUX. LIQ. SOL. VALVE C204 N.C. C204

C9 17 — 12-216C-18 — C201 A — 0-0M8-18 — C1 7 — 7 — F29 D A 2 — 15A — 24-24C-14 — FJB SEE P. 1.1 24V POWER

C9 18 — 264B-18 — C202 C — CW — C201 B — 24-229-14 — 0-0M8-18

C9 19 — 264-18 — C202 B — WIPER — C201 D — 24-229A-14

C9 20 — 264A-18 — C202 A — CCW — C201 C — 229A — TRIGGER ON — PWM CONTROL — GRD — MOT. — BATT. — AUX. FAN SPEED CTR'L — AUX. FAN DEFROSTER — C203 B A

C9 16 — 0-0M8-14 — FS

C539 18 — 180-20 — TO TELL-TALE LTS MODULE OUTSIDE TEMP. DYSPLAY C573(5,6,7,8) SEE P. 23.1

C539 6 — 180A-20

C539 17 — 180B-20

C539 7 — 180C-20

C539 13 — 180C-20

C539 12 — 24 V HOT WIRE RR JCT BOX P. 1.1 — 24-57A-14 — CB73 15A — C59 2 — 24-57A-14 — 30 — 87A — 87 — 24-57B-14 — C58 C9 C11 C157 — WATER PUMP — C157 — 0-0M9-14 — FS

C59 2 — 24-57A-14 — 30 — 87A — 87 — 2 2 — 29 — A — C157 — B

R35 — 86 — 85 — 0-0C4-18 — FS

R34 — 86 — 85 — 0-0K-18 — FS

0-291-16 — C59 3 — FROM RADIATOR FAN CLUTCH 1ST SPEED SEE P. 8.1 SP1 — 30 — 87 — 87A — RS

R36 — 86 — 85 — A/C COMPRESSOR CLUTCH — C59 4 — C91 12 — C128 A — C128 B — 0-0P-14

C59 5 — 24-77C-16 — 30 — 87 — 87A — 24-77B-18 — C136 3 — C136 1 — D60 — 0-0K-16 — RS

0-292-16 — C91 4 — C159 A — C159 B — 2ND SPEED PRESS. SW. 170-130 PSI — RS

DRIVER'S AIR ONLY

IN | HVAC DASH MODULE | OUT

DRIVER'S AIR ONLY

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 15.4 — REVISION 15

IN | HVAC DASH MODULE | OUT

C539 (IN)

3	0-0T5-14	FS
4	0-0T5-18	
5		
10	12-12LX-18	12V HOT WIRE FROM CB 129 FR JCT BOX SEE P. 7.1
8	12-29H-16 via CB58 6A, C74 35	12V POWER FROM FR JCT BOX SEE P. 2.1 (12-12K-14)
9		
6	24-44C-16	24V POWER FROM FR JCT BOX CB35 SEE P. 9.3
7		
21	12-25D-20	12 V. ENGINE RUN FROM RA4(87) SEE P. 4.2
22	12-12H-18	12 VOLTS IGNITION FROM FR JCT BOX CB28 SEE P. 7.1
11	12-69-18 via C599 1,2	N.C. MAGNETIC SWITCH CENTRAL POS. - OPEN
1	2@4-181B-18 (YEL)	C474 2
2	0-181A-18 (YEL)	C474 1 — DRIVER'S RETURN AIR SENSOR
3	181D-18 (WHT)	C538 YEL 2
4	181C-18 (WHT)	C538 BLK 1 — OUTSIDE TEMP. SENSOR
20	24-83-20	24V ACCESSORIES FROM KEY SWITCH SEE P. 4.1
19	0@12-114A-20	FROM DASH LIGHT RHEOSTAT SEE P. 11.2
4		NOT USED
13		
12		
8		
5	0-0T5-18	ANALOG GROUND
9	0-2H-16	HI-PRESS SW. 320-245 PSI / LO-PRESS SW. 5-30 PSI
10	0-2L-16	
16		
19		
22		
N/C 13		
2		
N/C 1		
15		
18		
11		
12		
23		
24		
17		
14		
3		
2		
1		
18		
6		
17		
7		
15		
16		
21		
C479 1	TX	
C479 2	RX	
C479 3		

C540 (IN)

21	12-25D-20	
22	12-12H-18	
11	12-69-18	
20	24-83-20	
19	0@12-114A-20	
9	0-2H-16	
10	0-2L-16	
14	12-216C-18	
3	165D	
2	3.2@8.5-167A-18	
1	167	
18	180-20	
6	180A-20	
17	180B-20	
7	180C-20	
15	24-66-18	
16		
21	24-77K-18	

C140 (IN)

1	2@4-181B-18 (YEL)
2	0-181A-18 (YEL)
3	181D-18 (WHT)
4	181C-18 (WHT)

C541A (IN)

1	12-28H-18
2	

C484 (OUT)

B	65A-18
A	65-18

FOOT DAMPER MOTOR

C485 (OUT)

1	68-18
3	68A-18

DASH & DEFROST DAMPER MOTOR

C11 (OUT)

4	24-45G-18
28	24-116B-18
8	9.4-116C-18
32	64B-18
30	3.2@8.5-64-18
31	64A-18
17	24-65D-18
1	24-65P-18
12	12-216C-18
18	264B-18
20	264-18
19	264A-18
12	0-0M8-14

C480 (OUT)

C	9.4-116C-18
B	3.2@8.5-64-18
A	64A-18
A	24-29-14
D	24-65D-18
B	0-0M3-12

C481 (OUT)

C	64B-18
B	3.2@8.5-64-18
A	64A-18

C9 (OUT)

5	24-65P-18
11	12-216C-18
18	264B-18
20	264-18
19	264A-18
12	0-0M8-14

C202 (OUT)

C	CW
B	WIPER
A	CCW

C59 (OUT)

23	24-29-14
3	0-291-16
4	24-77B-18
5	24-77C-16
2	24-57A-14
1	24-57C-18
2	24-57B-14

C136 (OUT)

4	D65
6	D65
7	D85
9	D85
3	D60
1	D60

C58 (OUT)

3	24-45A-18
1	24-77A-18

C10 (OUT)

1	24-24C-12

C157 (OUT)

A	24-57B-14
B	0-0M9-14

C159 (OUT)

A	0-292-16
B	

C204 (OUT)

A	24-65P-18
B	0-0M8-18

C201 (OUT)

A	24-229-14
B	0-0M8-18
D	24-229A-14
C	229A

C203 (OUT)

B	GRD
A	BATT.

C1 (OUT)

7	24-24C-14

C480 (OUT)

A	24-29-14
B	0-0M3-12
D	RED

C105 (OUT)

A	0-0C-14
B	0-0C-14

C106 (OUT)

A	0-0C-14
B	

C74 (OUT)

35	12-29H-16 via CB58 6A

C599 (OUT)

1	12-69-18
2	N.C. MAGNETIC SWITCH CENTRAL POS. - OPEN

C538 (OUT)

2	181D-18 (WHT)
1	181C-18 (WHT)

C132 (OUT)

B	0-2L-16
A	0-2L-16

C133 (OUT)

B	0-2H-16
A	0-2H-16

C91 (OUT)

1	0-2H-16
13	0-2H-16
5	0-2L-16
11	0-2L-16

C474 (OUT)

2	2@4-181B-18 (YEL)
1	0-181A-18 (YEL)

C479 (OUT)

1	TX
2	RX
3	

C140 (OUT)

1	2@4-181B-18 (YEL)
2	0-181A-18 (YEL)
3	181D-18 (WHT)
4	181C-18 (WHT)

C541A (OUT)

1	12-28H-18
2	

C10 (OUT)

1	24-24C-12

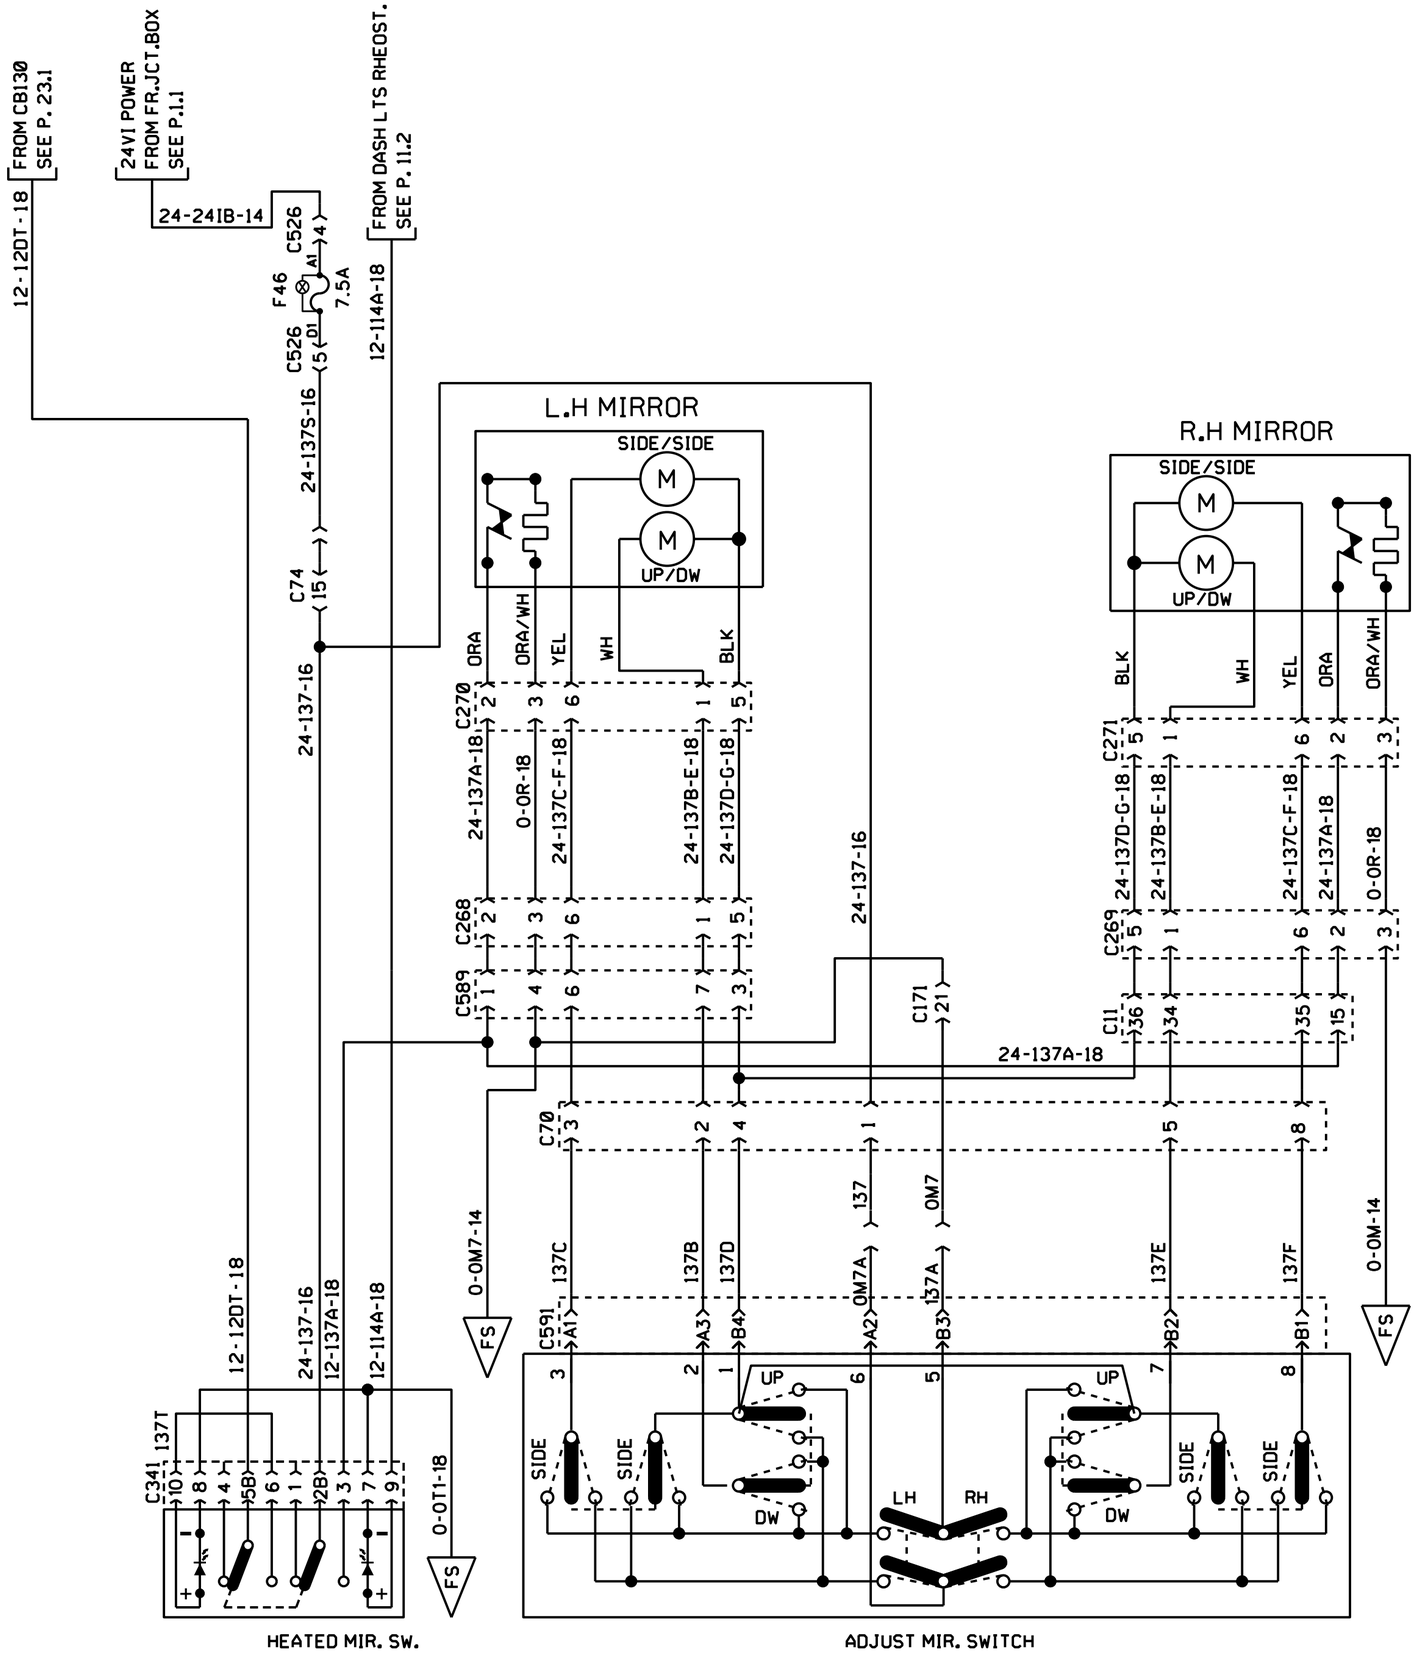

REAR VIEW MIRROR SPARTAN - 1 ADJUSTMENT SW. & 1 HEATED SW.

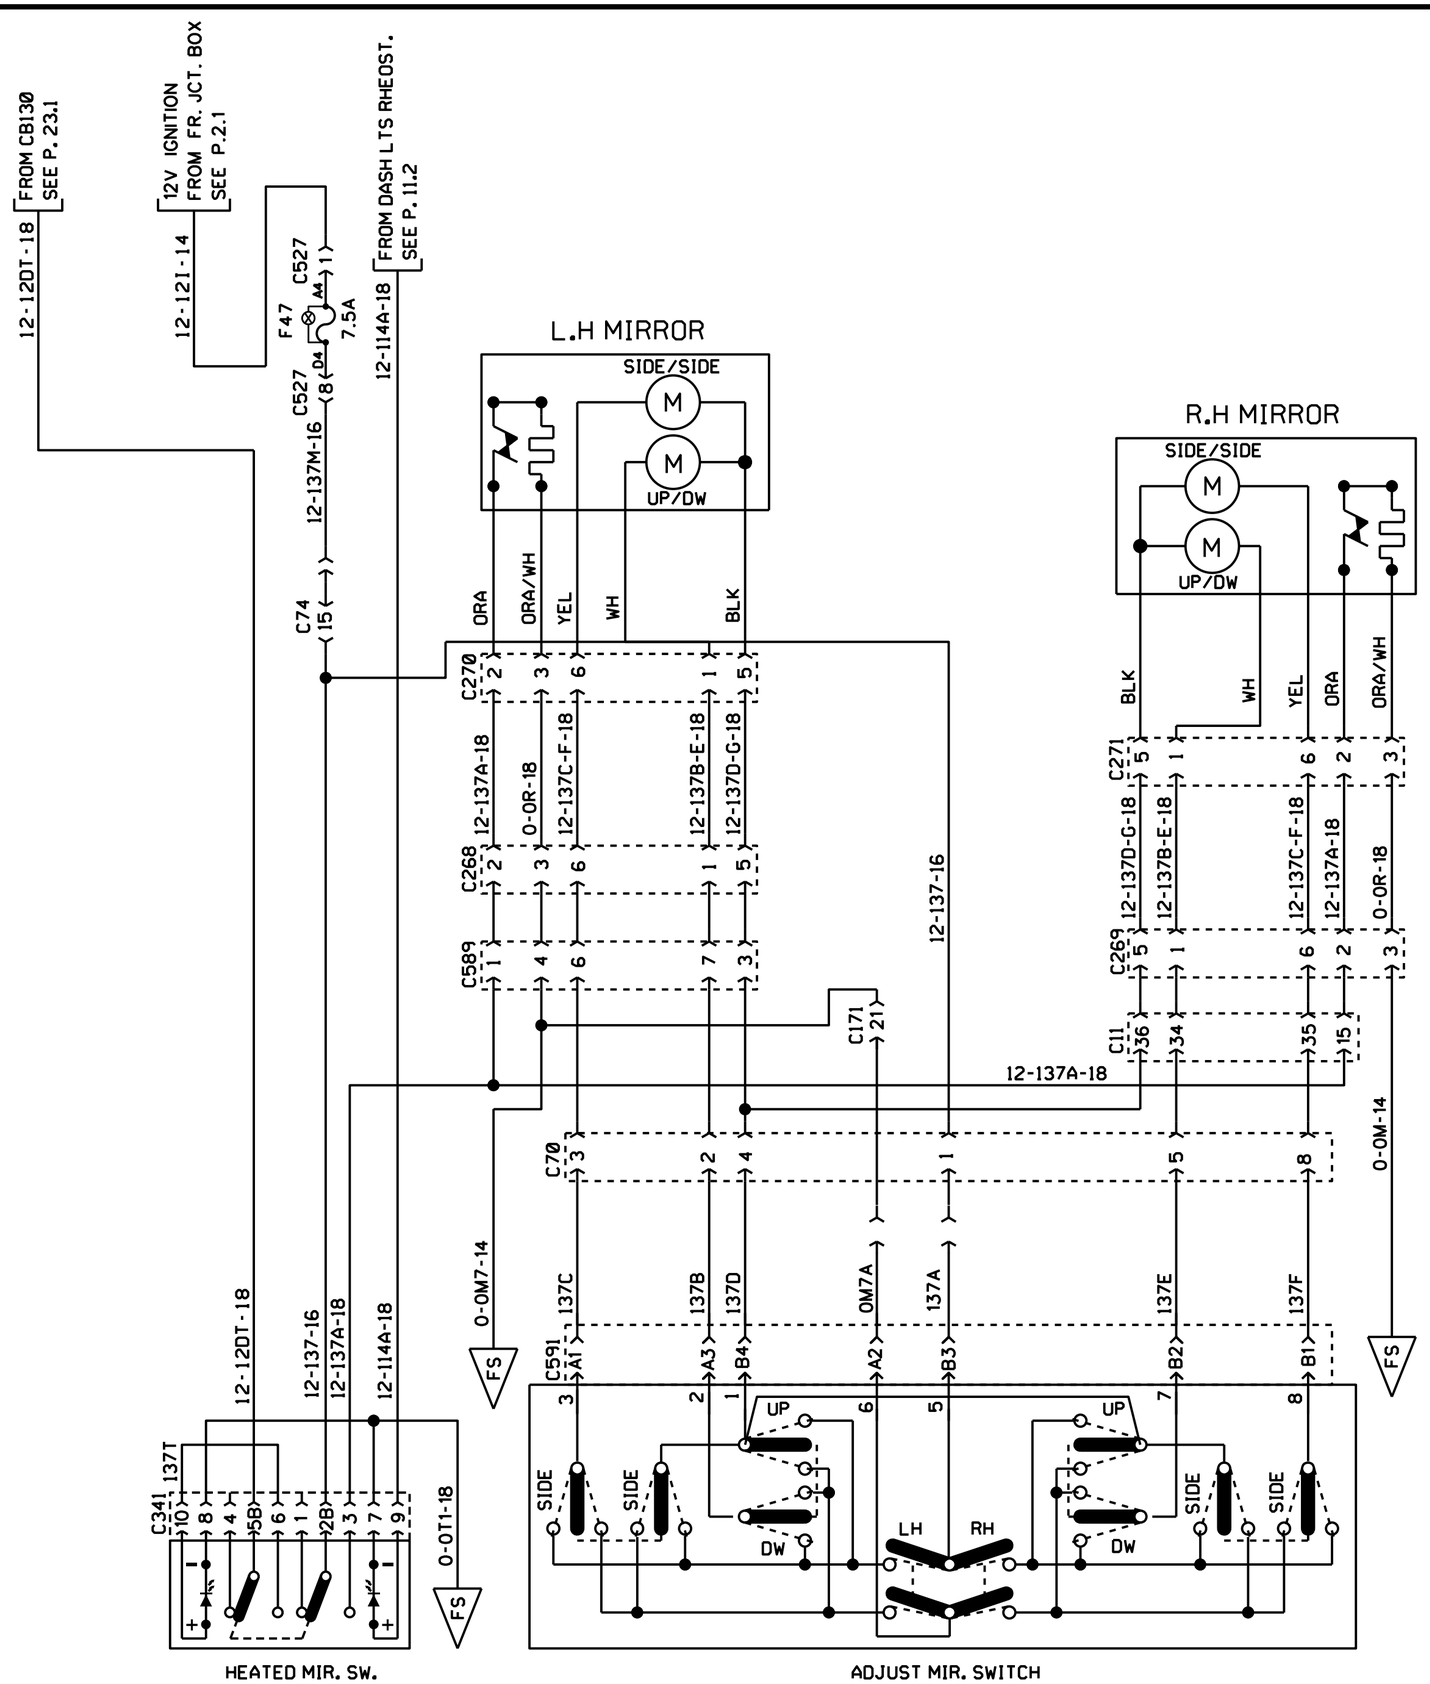

REAR VIEW MIRROR RAMCO FLAT - 1 ADJUSTMENT SW. & 1 HEATED SW.

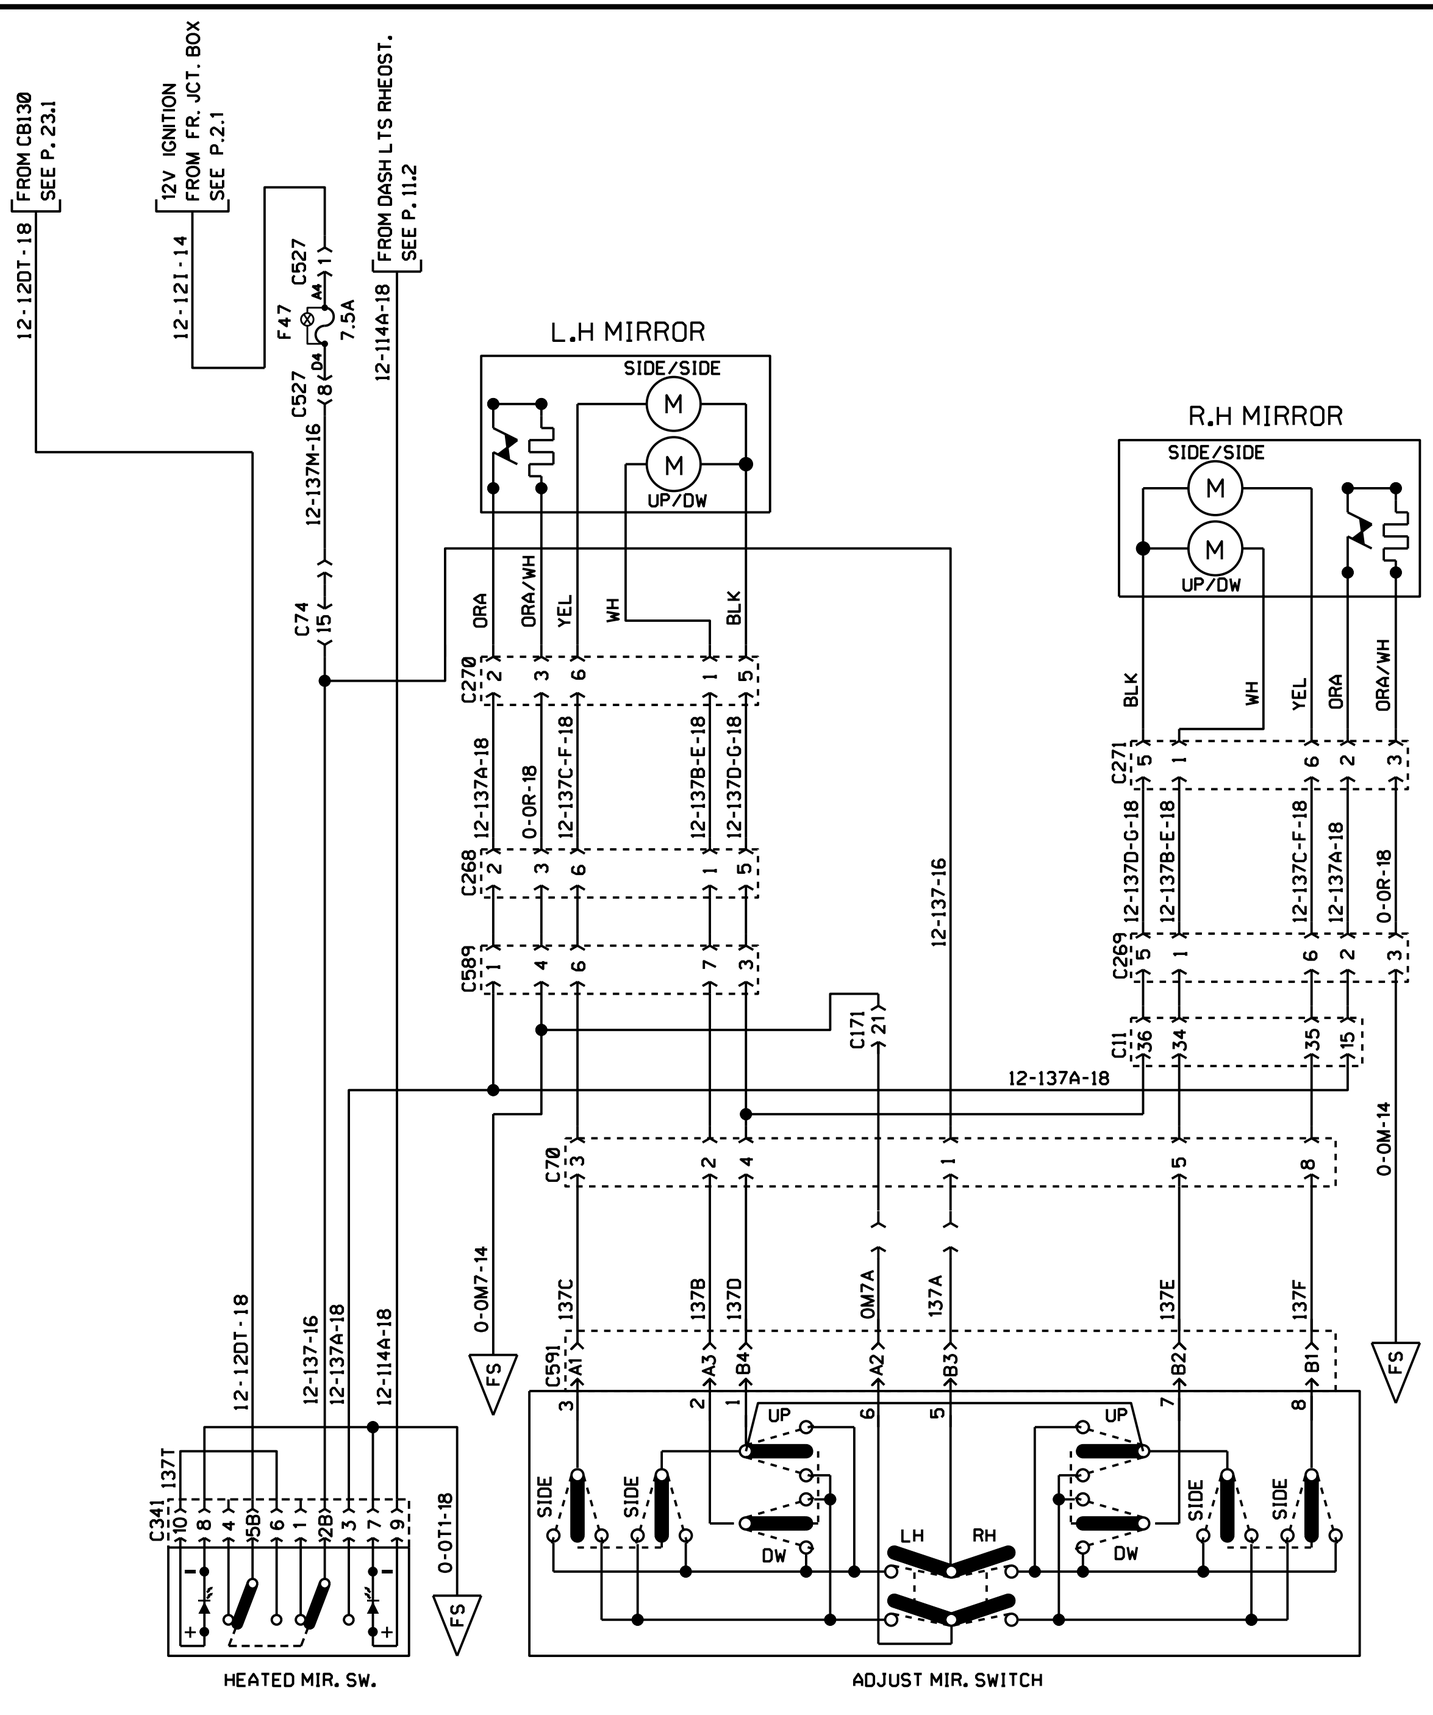

REAR VIEW MIRROR RAMCO FLAT - 1 ADJUSTMENT SW. & 1 HEATED SW.

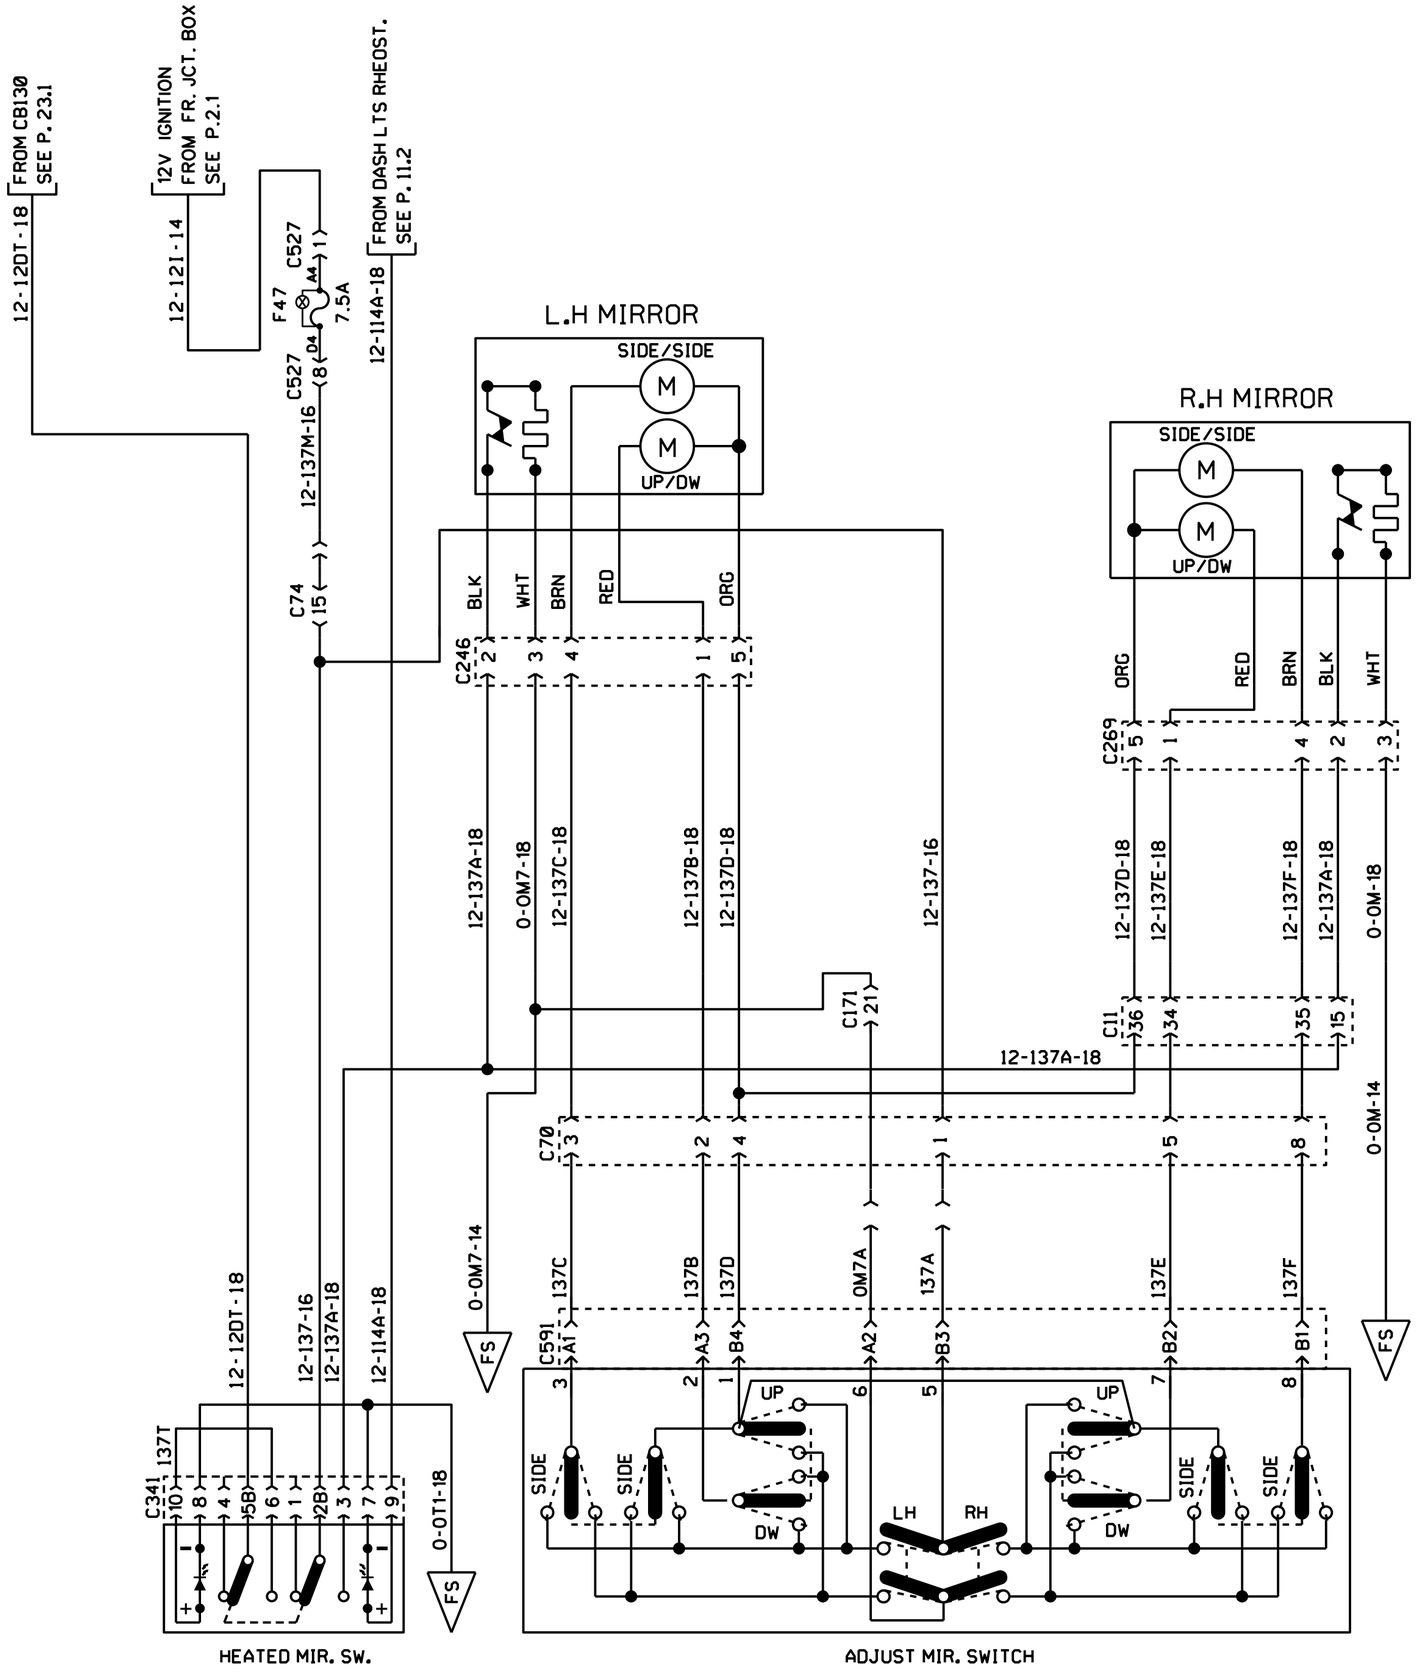

REAR VIEW MIRROR RAMCO FLAT - 1 ADJUSTMENT SW. & 1 HEATED SW.

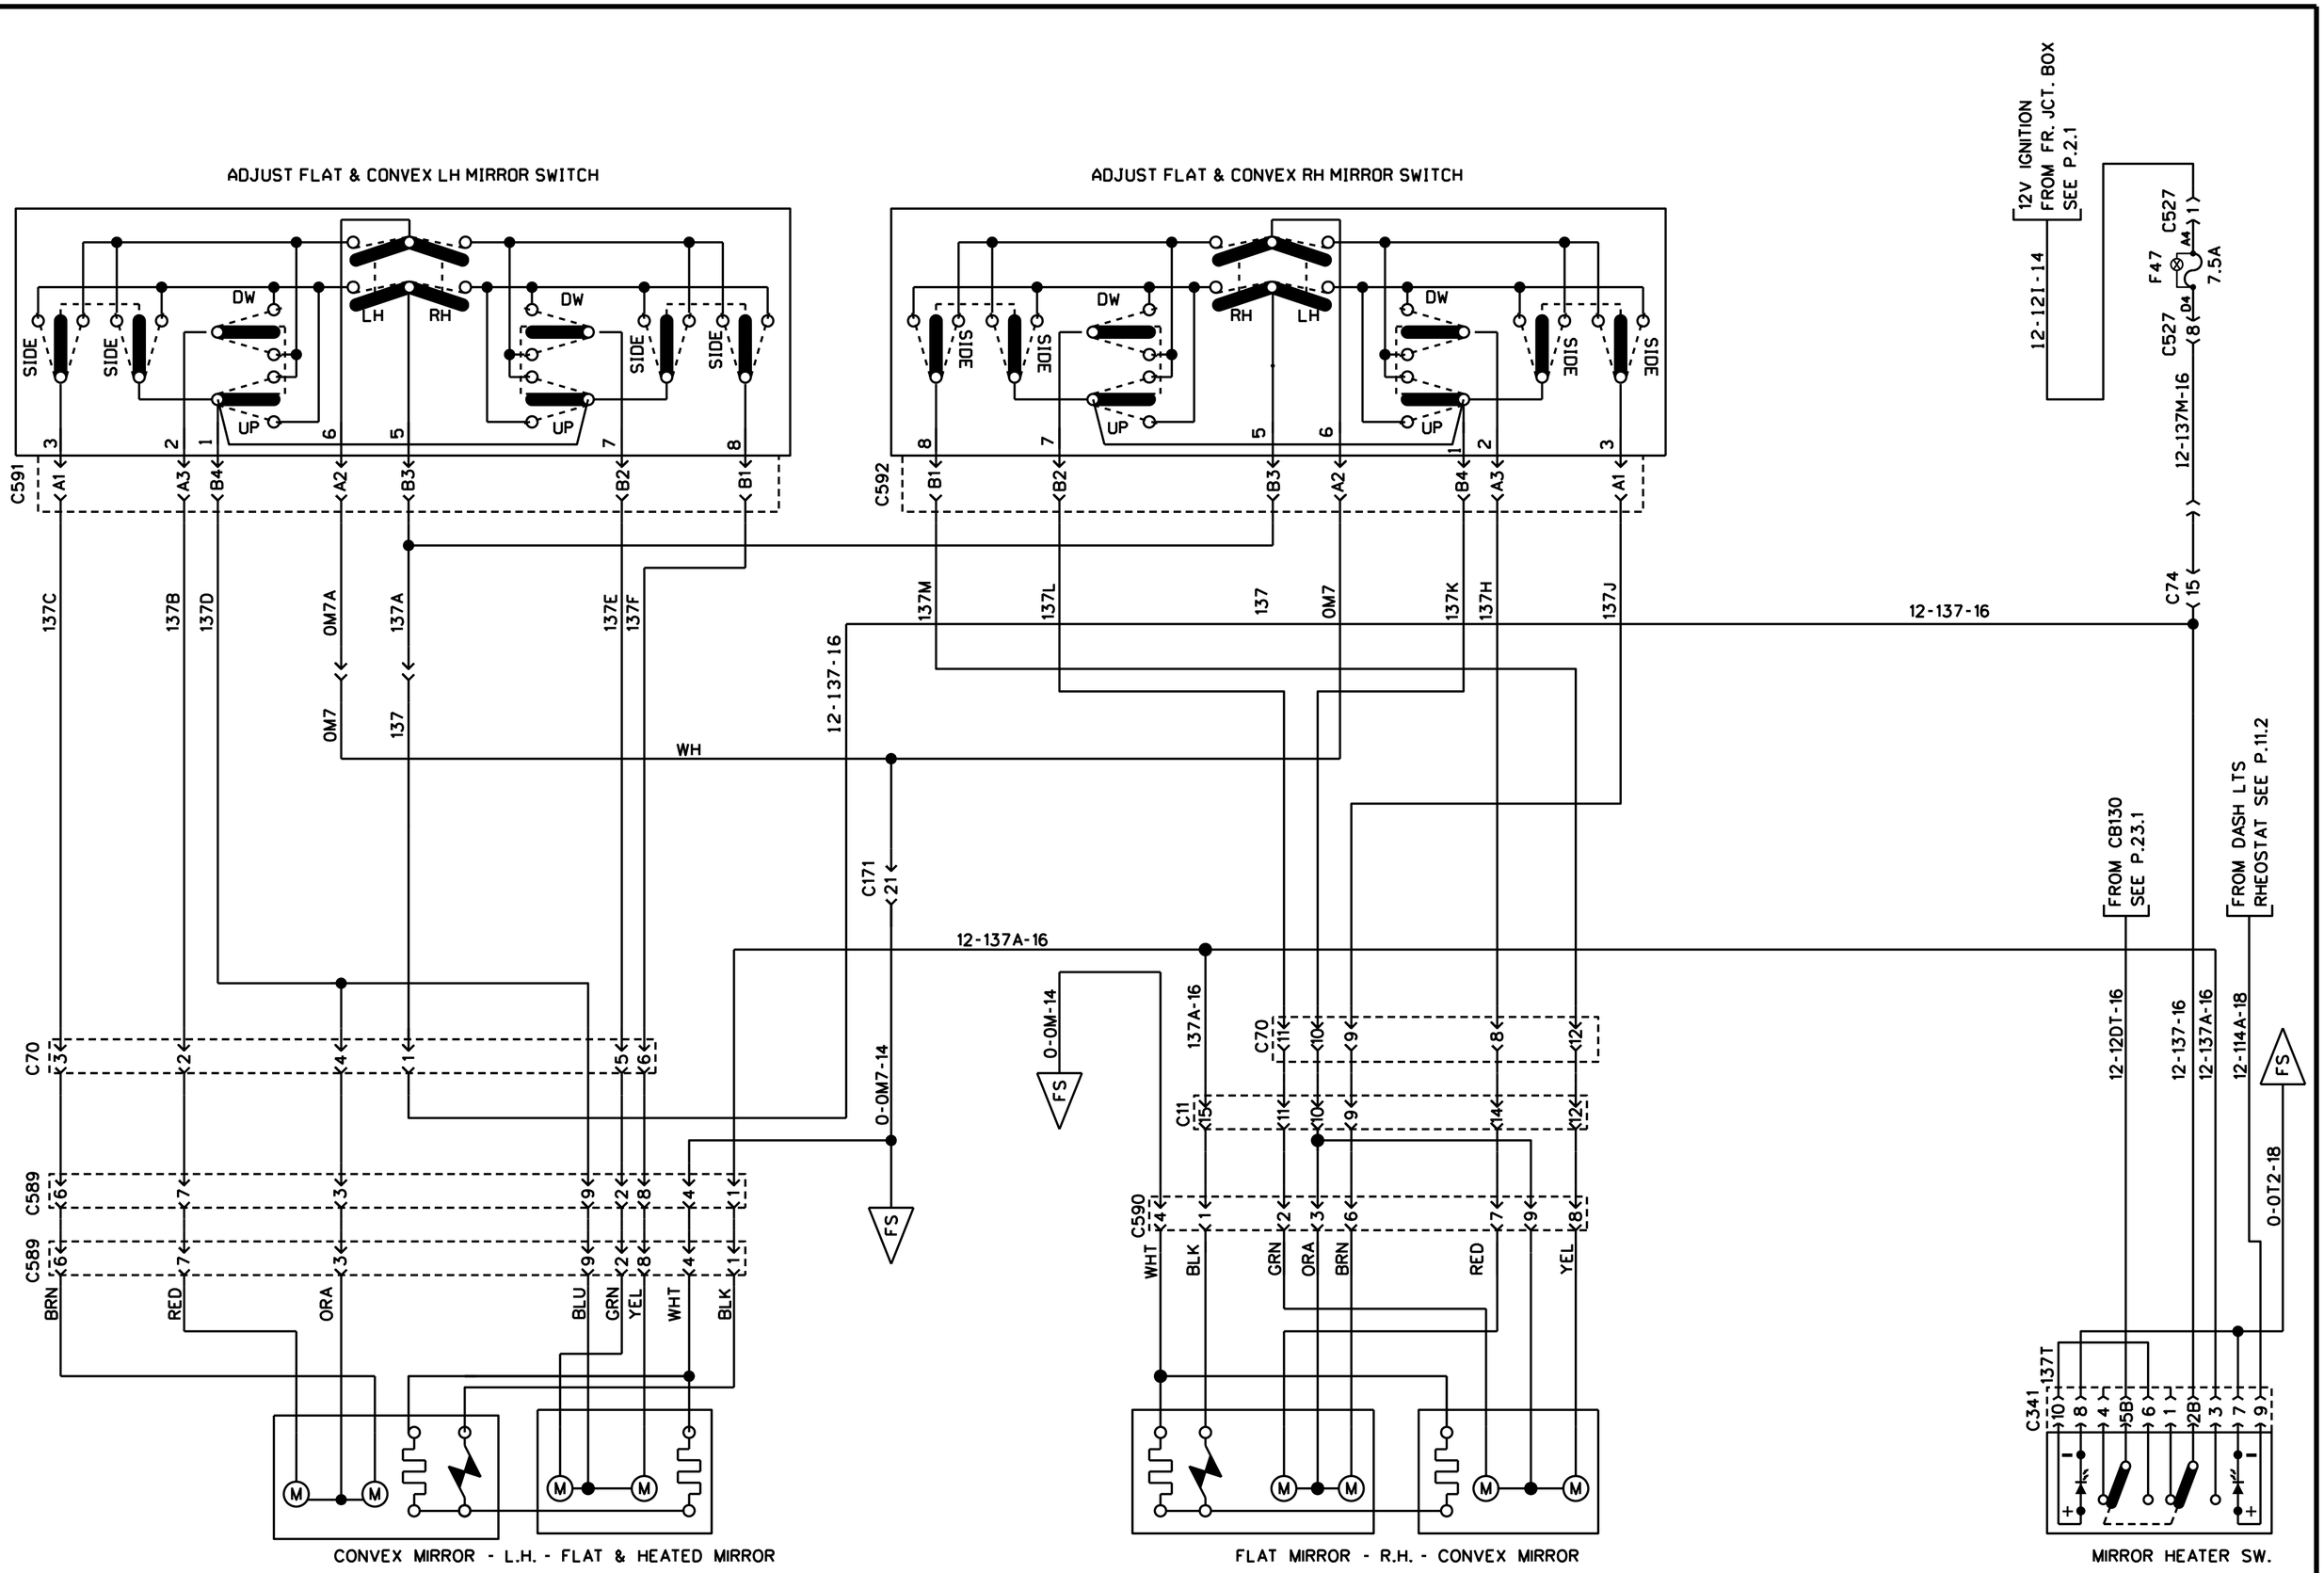

REAR VIEW MIRROR RAMCO FLAT & CONVEX - 2 ADJUSTMENT SW. & 1 HEATED SW.

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 16.3	REVISION 00

ADJUST FLAT & CONVEX LH MIRROR SWITCH

ADJUST FLAT & CONVEX RH MIRROR SWITCH

12V IGNITION
FROM FR. JCT. BOX
SEE P.2.1

12-121-14

F47 7.5A

C527 A4 1
C527 D4 8

12-137M-16

C74 15

12-137-16

C591 A1 137C
C591 A3 137B
C591 B4 137D
C591 A2 OM7A
C591 B3 137A
C591 B2 137E
C591 B1 137F

C592 B1 137M
C592 B2 137L
C592 B3 137
C592 A2 OM7
C592 B4 137K
C592 A3 137H
C592 A1 137J

OM7 WH 137

12-137-16

C171 21

12-137A-16

0-OM7-14

FS

0-OM-14

FS

137A-16

C70 3 2 4 1 5 6

C589 6 BRN
C589 7 RED
C589 3 ORA
C589 5 BLU
C589 2 GRN
C589 8 YEL
C589 4 WHT
C589 1 BLK

C70 11 10 9 8 12

C11 15 11 10 9 14 12

C590 4 WHT
C590 1 BLK
C590 2 GRN
C590 3 ORA
C590 6 BRN
C590 7 RED
C590 5 BLU
C590 8 YEL

FROM CB130
SEE P.23.1

FROM DASH LTS
RHEOSTAT SEE P.11.2

12-12DT-16

12-137-16

12-137A-16

12-114A-18

FS

0-0T2-18

C341 10 137T
C341 8
C341 4 5B
C341 6
C341 1
C341 2B
C341 3
C341 7
C341 9

CONVEX MIRROR - L.H. - FLAT & HEATED MIRROR

FLAT MIRROR - R.H. - CONVEX MIRROR

MIRROR HEATER SW.

REAR VIEW MIRROR RAMCO FLAT & CONVEX - 2 ADJUSTMENT SW. & 1 HEATED SW.

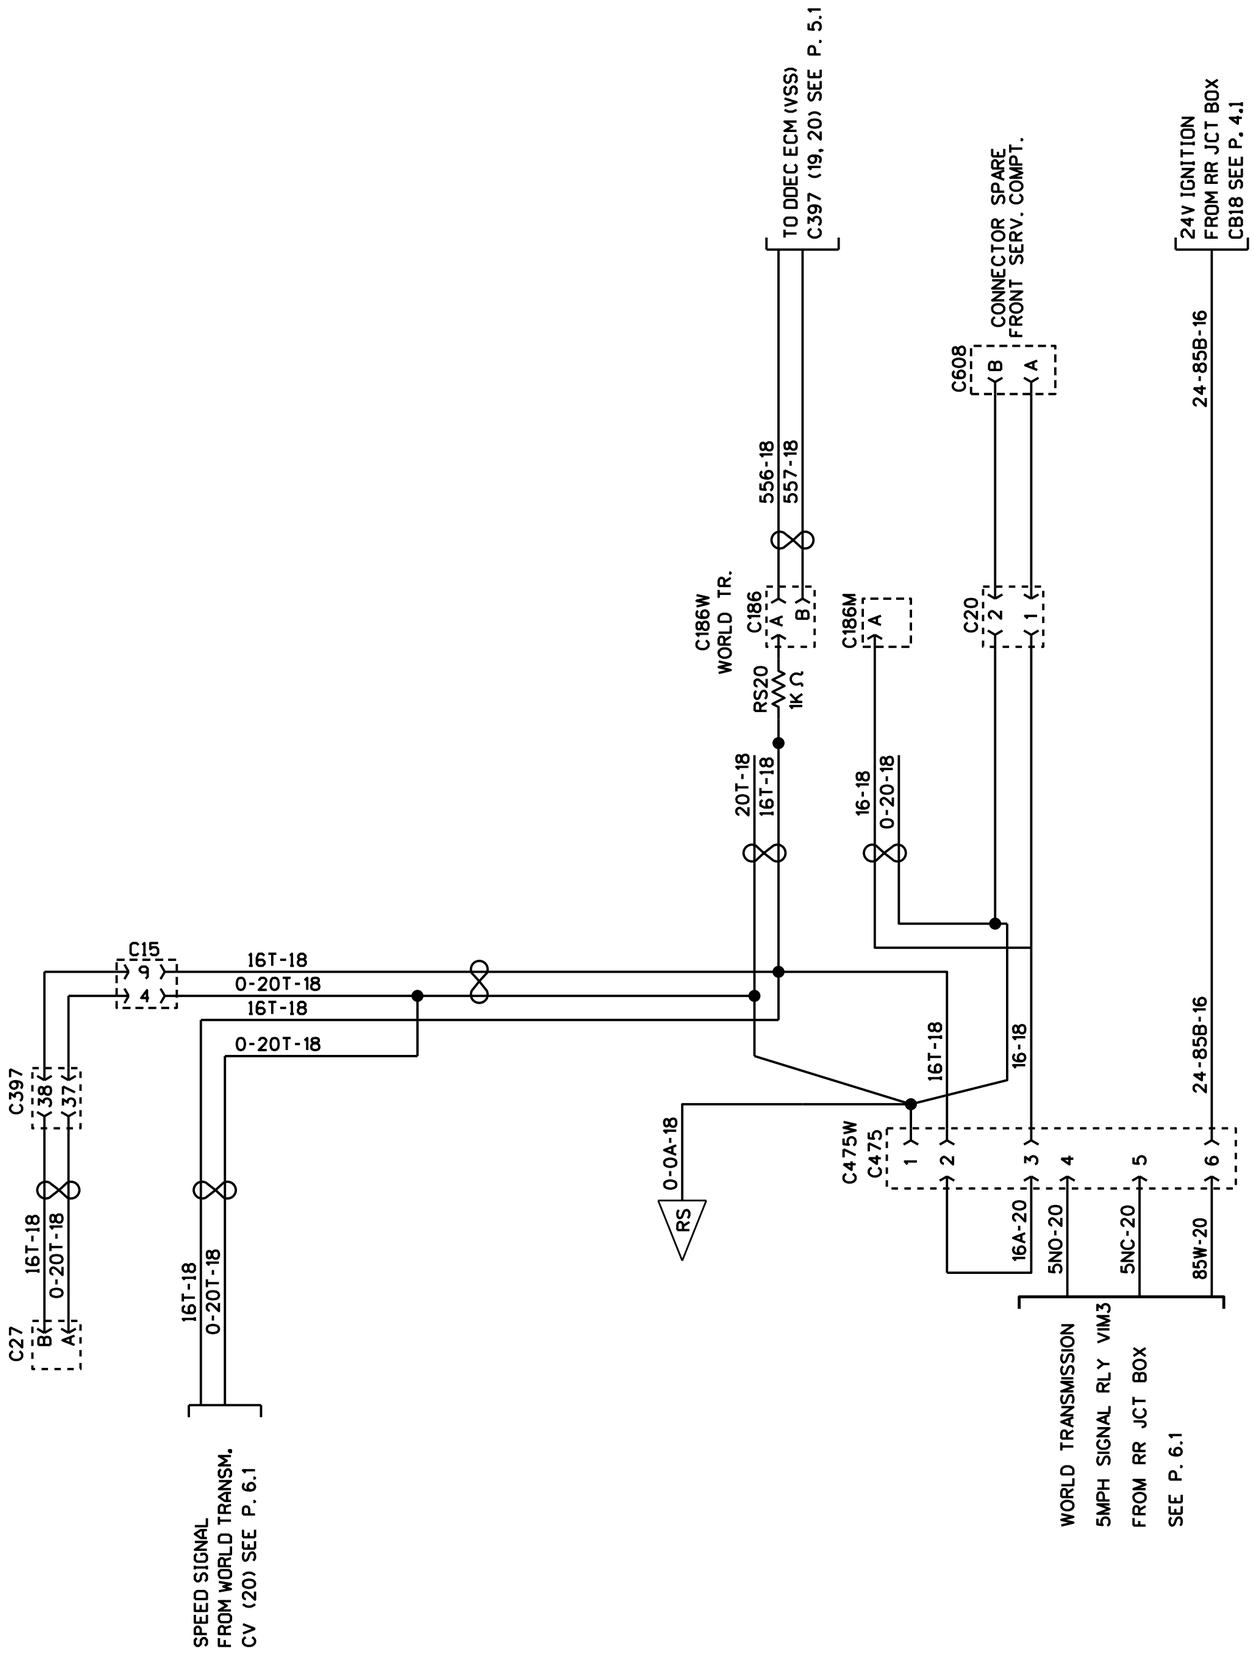

TRANSMISSION SPEED SIGNAL

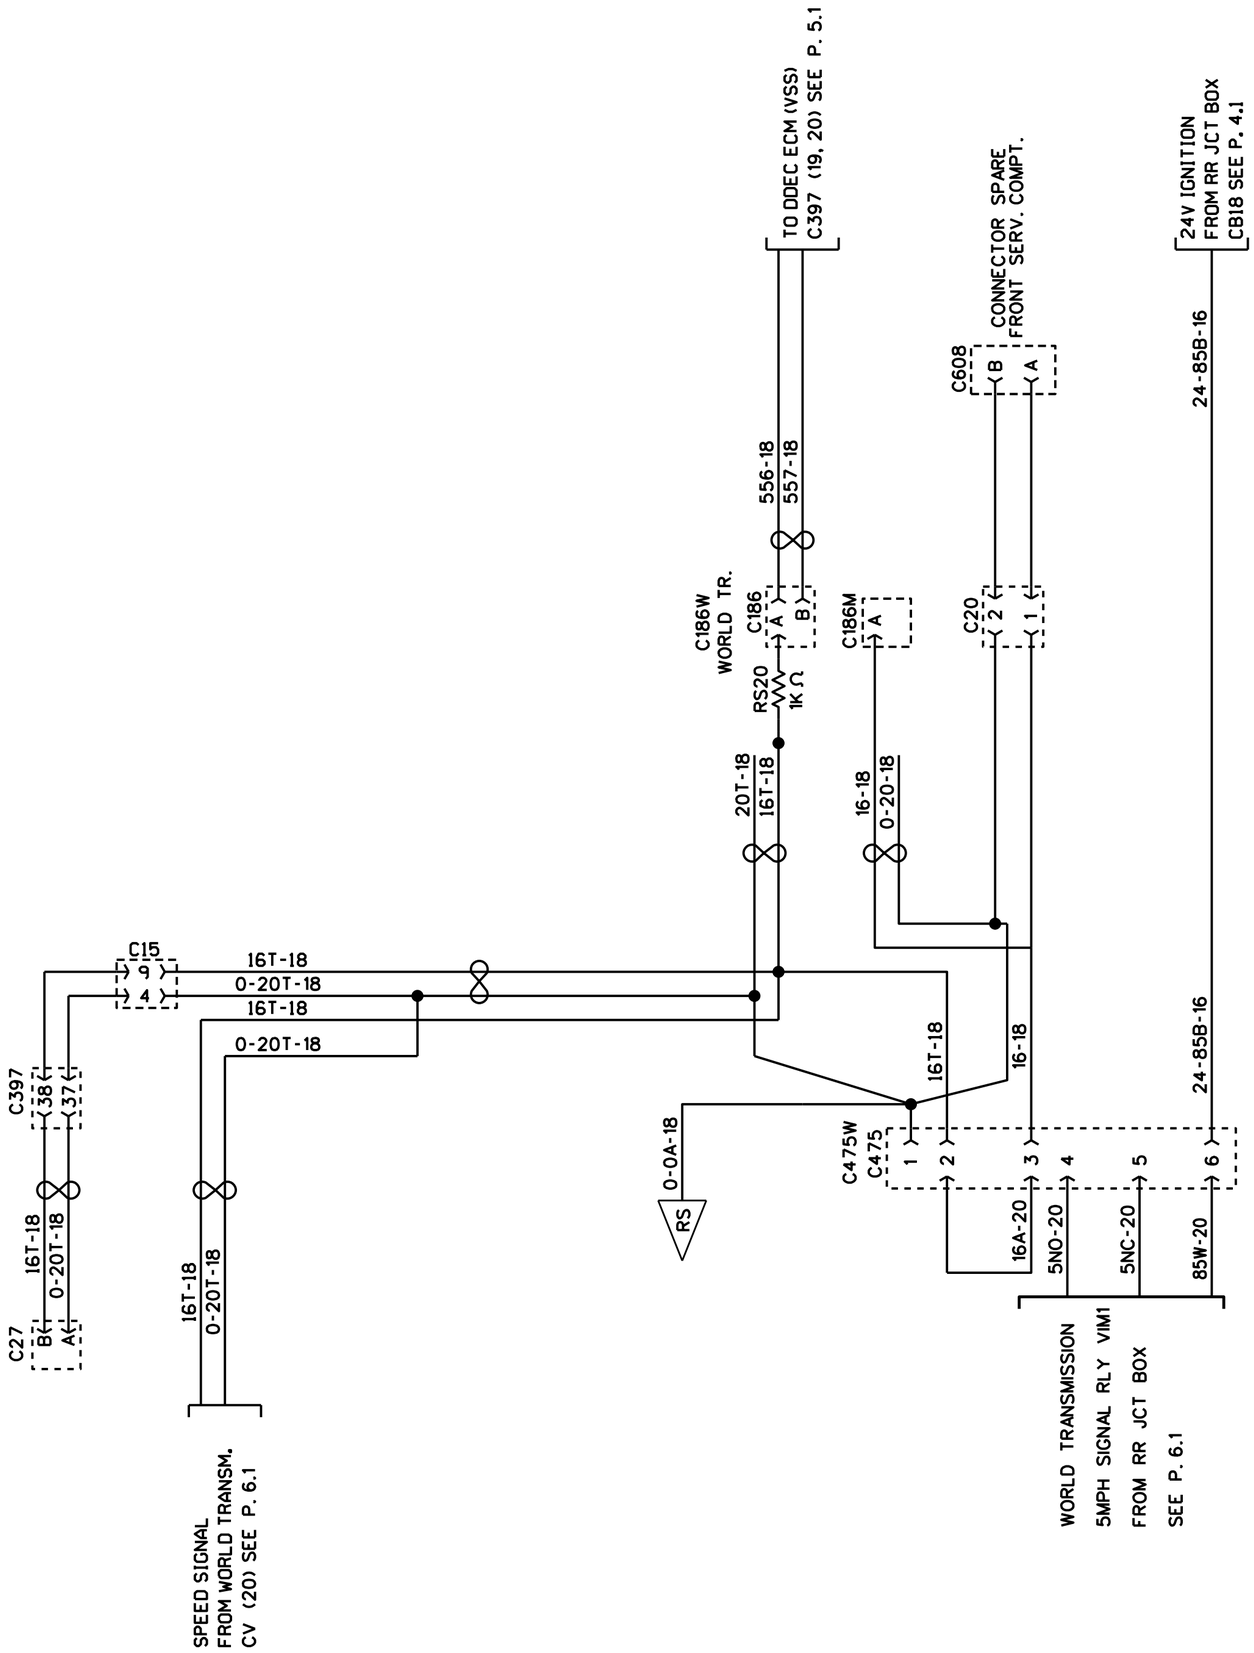

TRANSMISSION SPEED SIGNAL

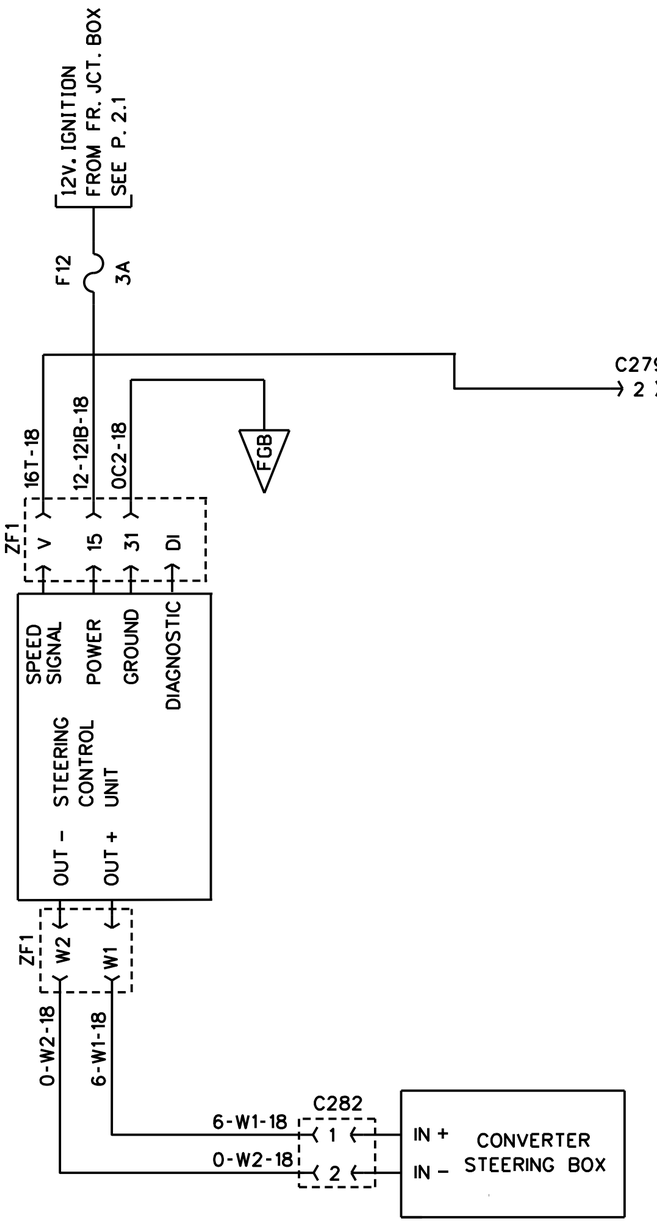

STEERING CONTROL ZF

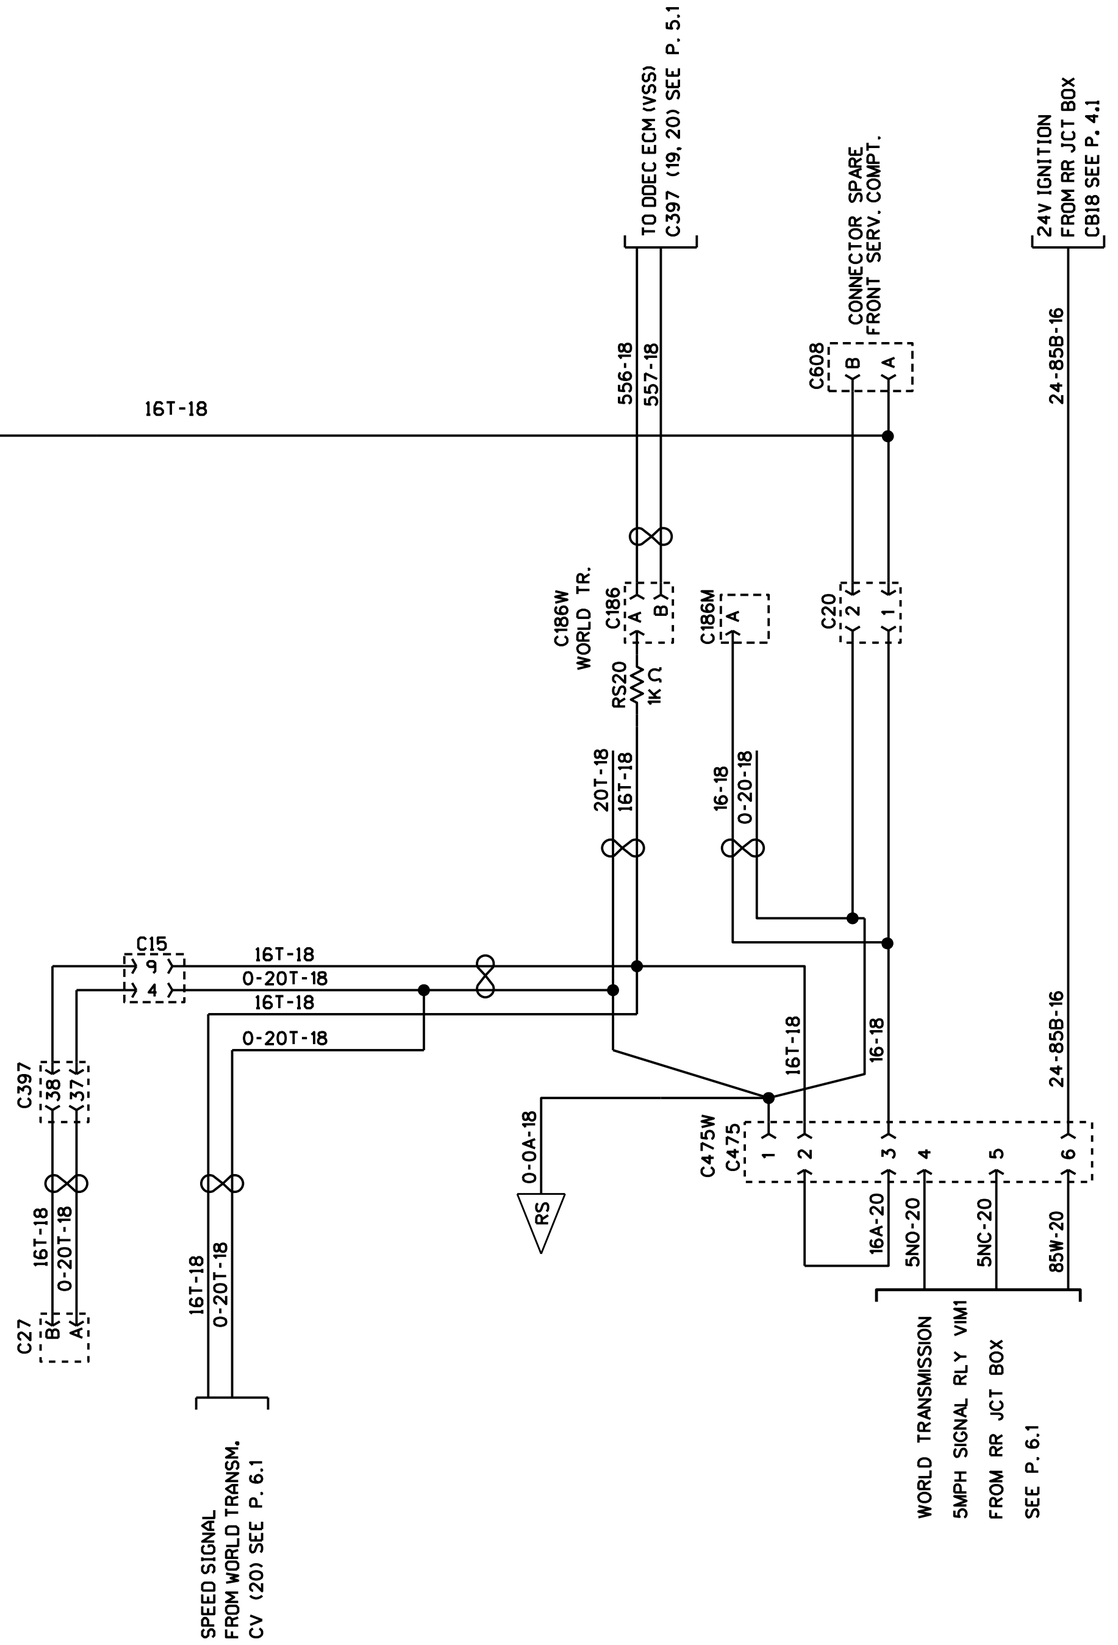

TRANSMISSION SPEED SIGNAL

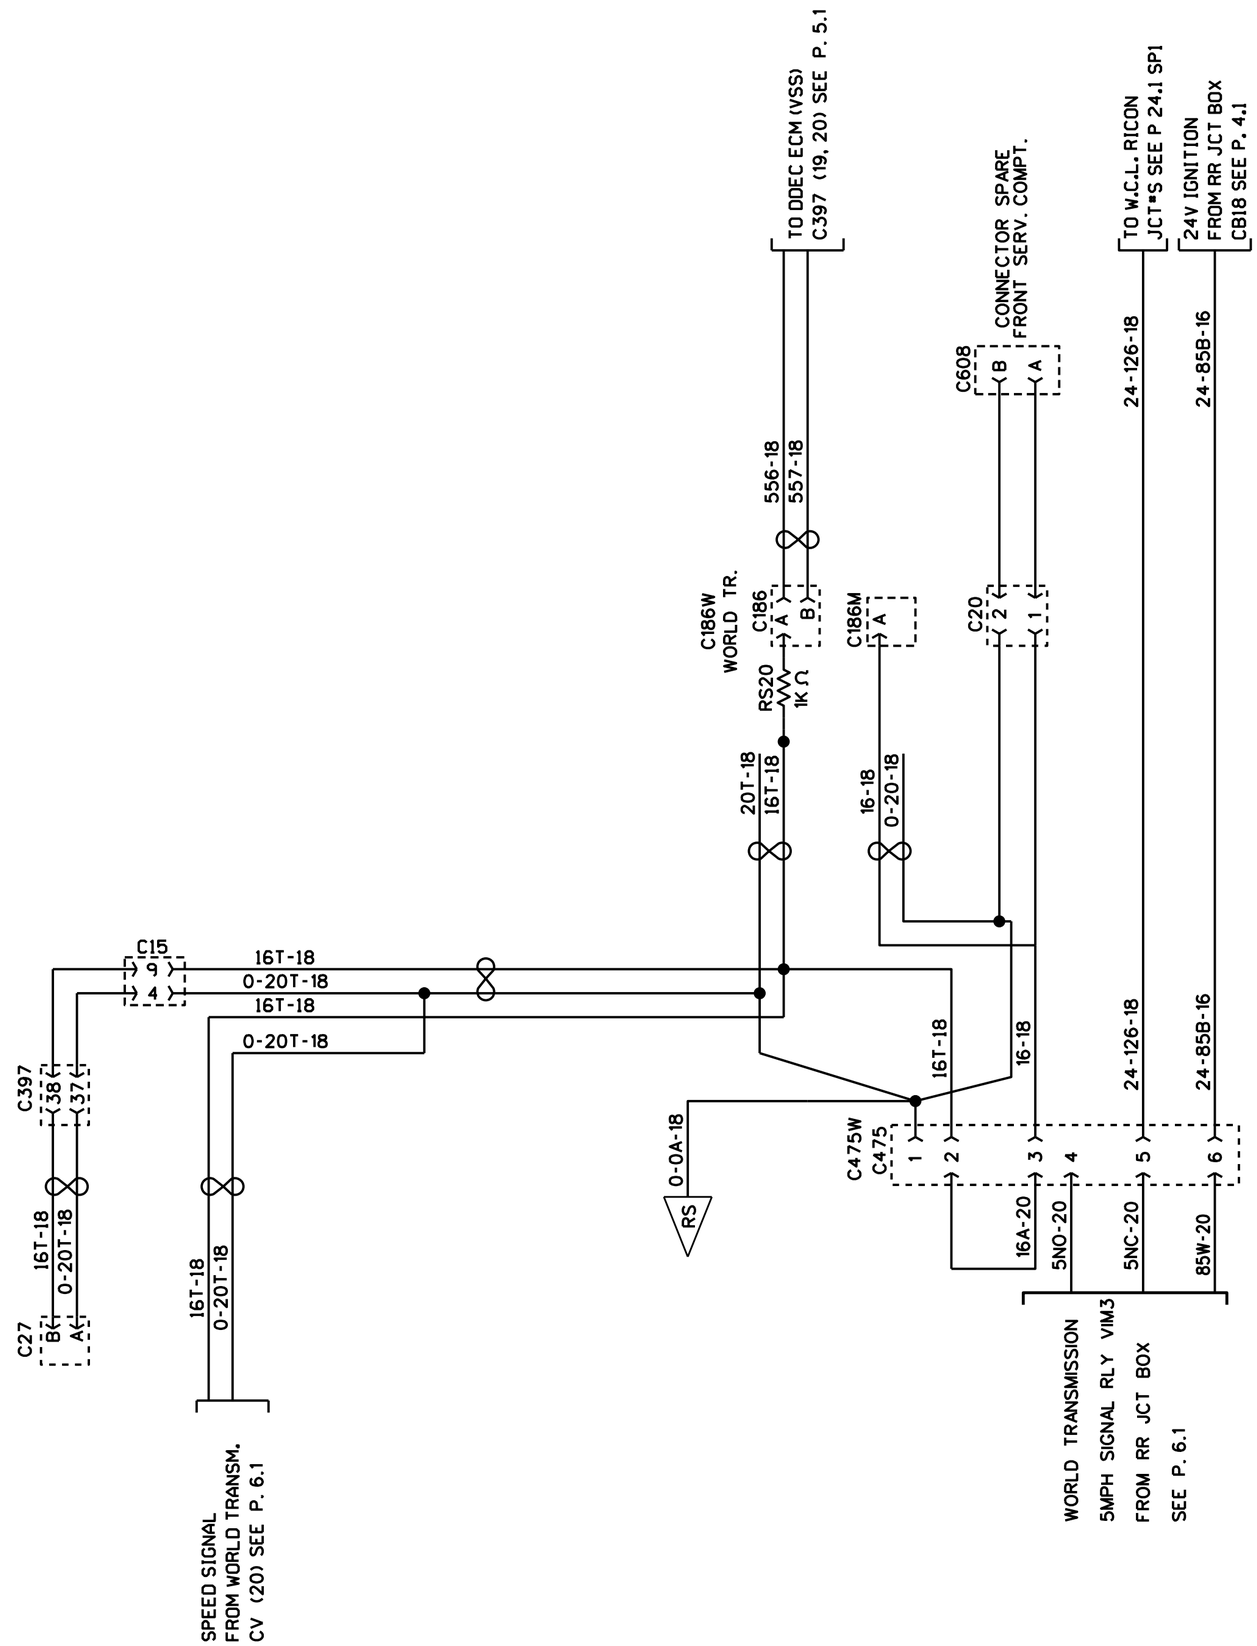

TRANSMISSION SPEED SIGNAL

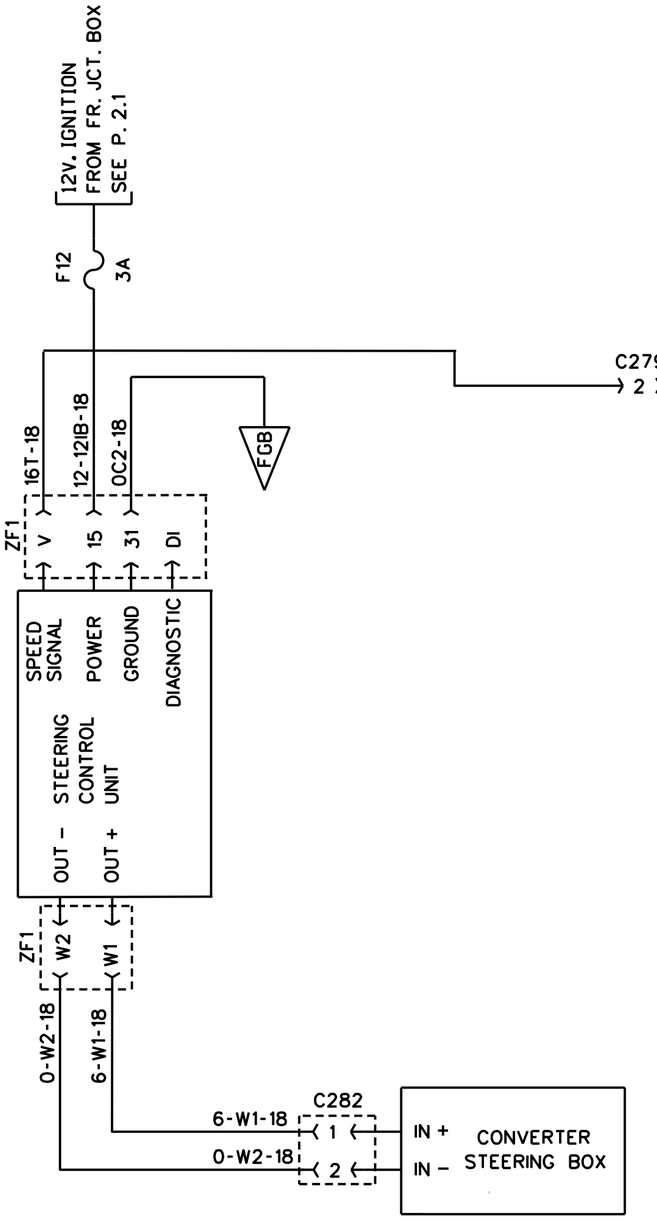

STEERING CONTROL ZF

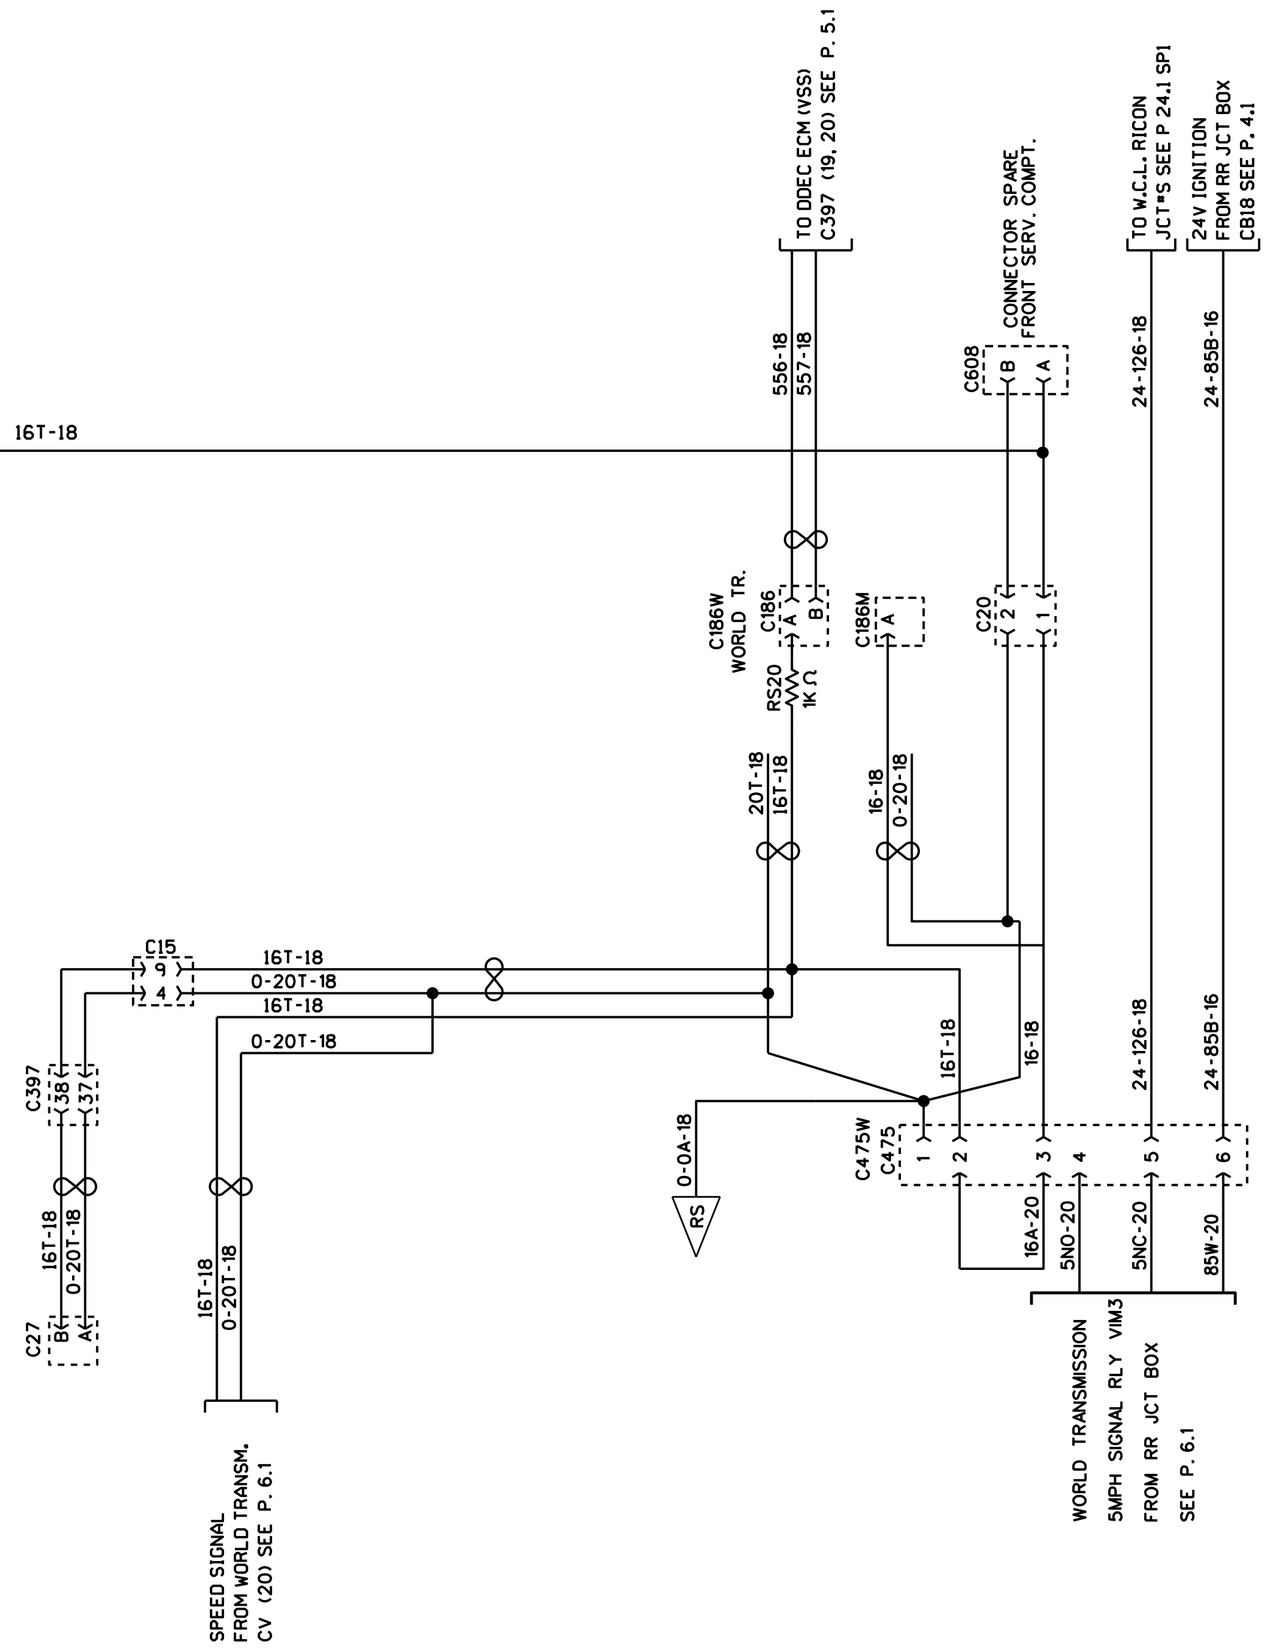

TRANSMISSION SPEED SIGNAL

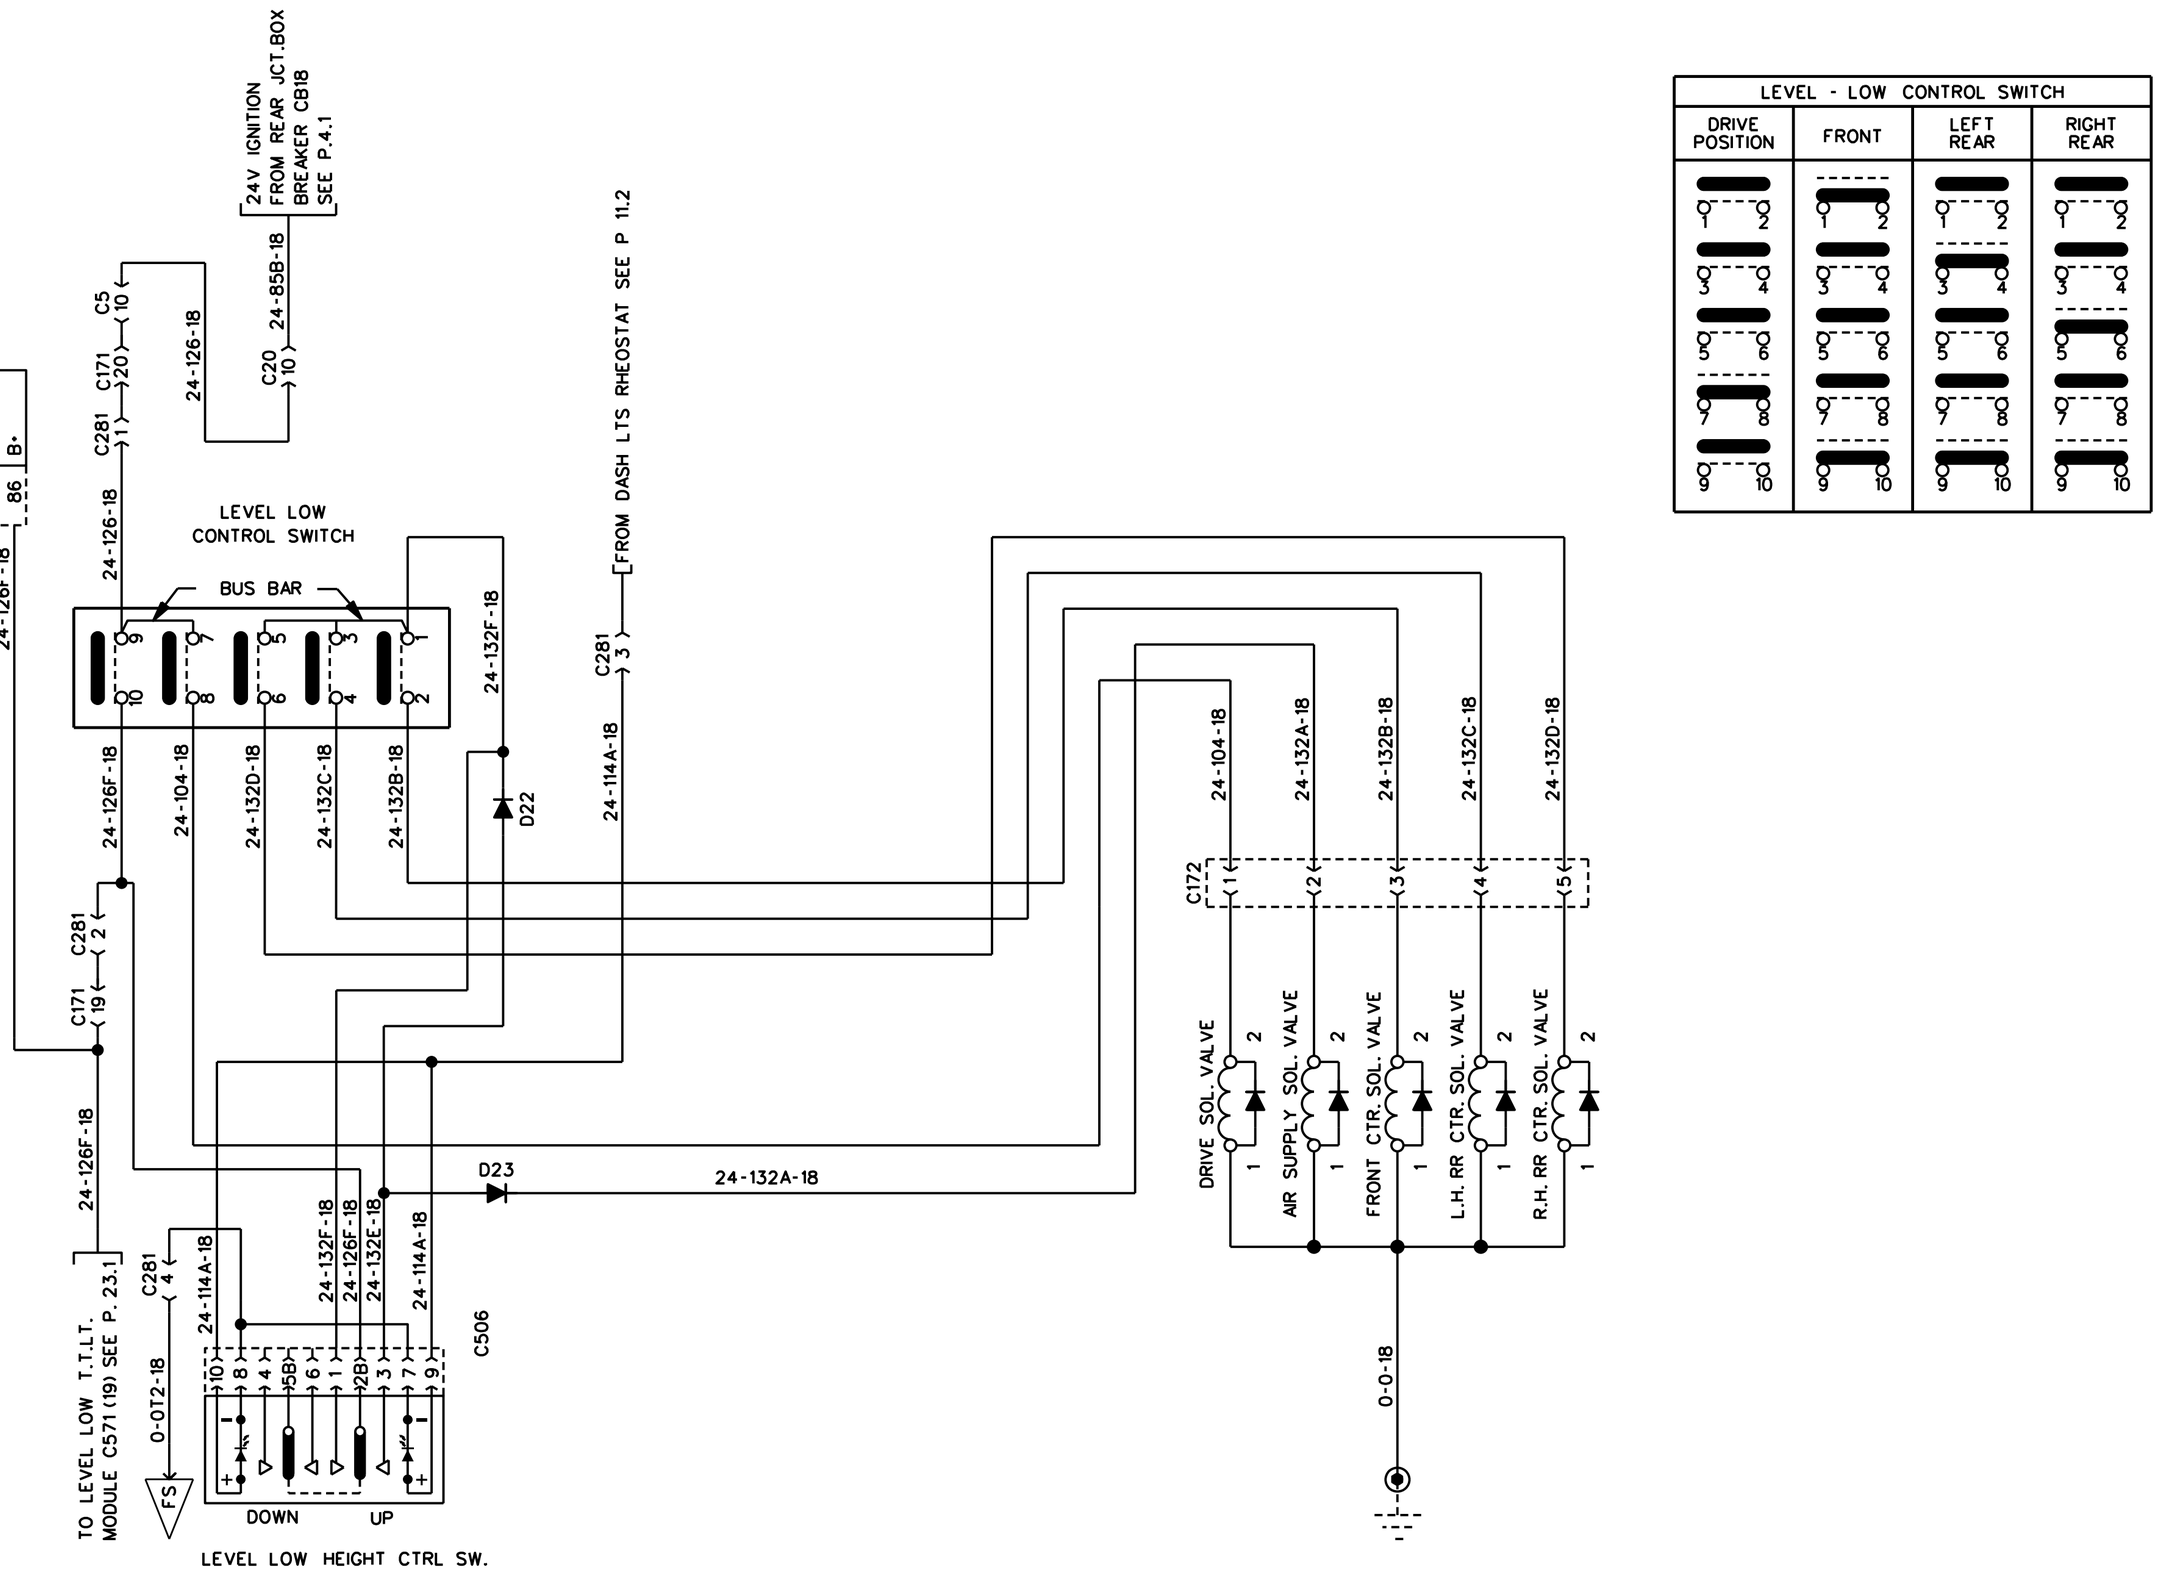

LEVEL - LOW SYSTEM

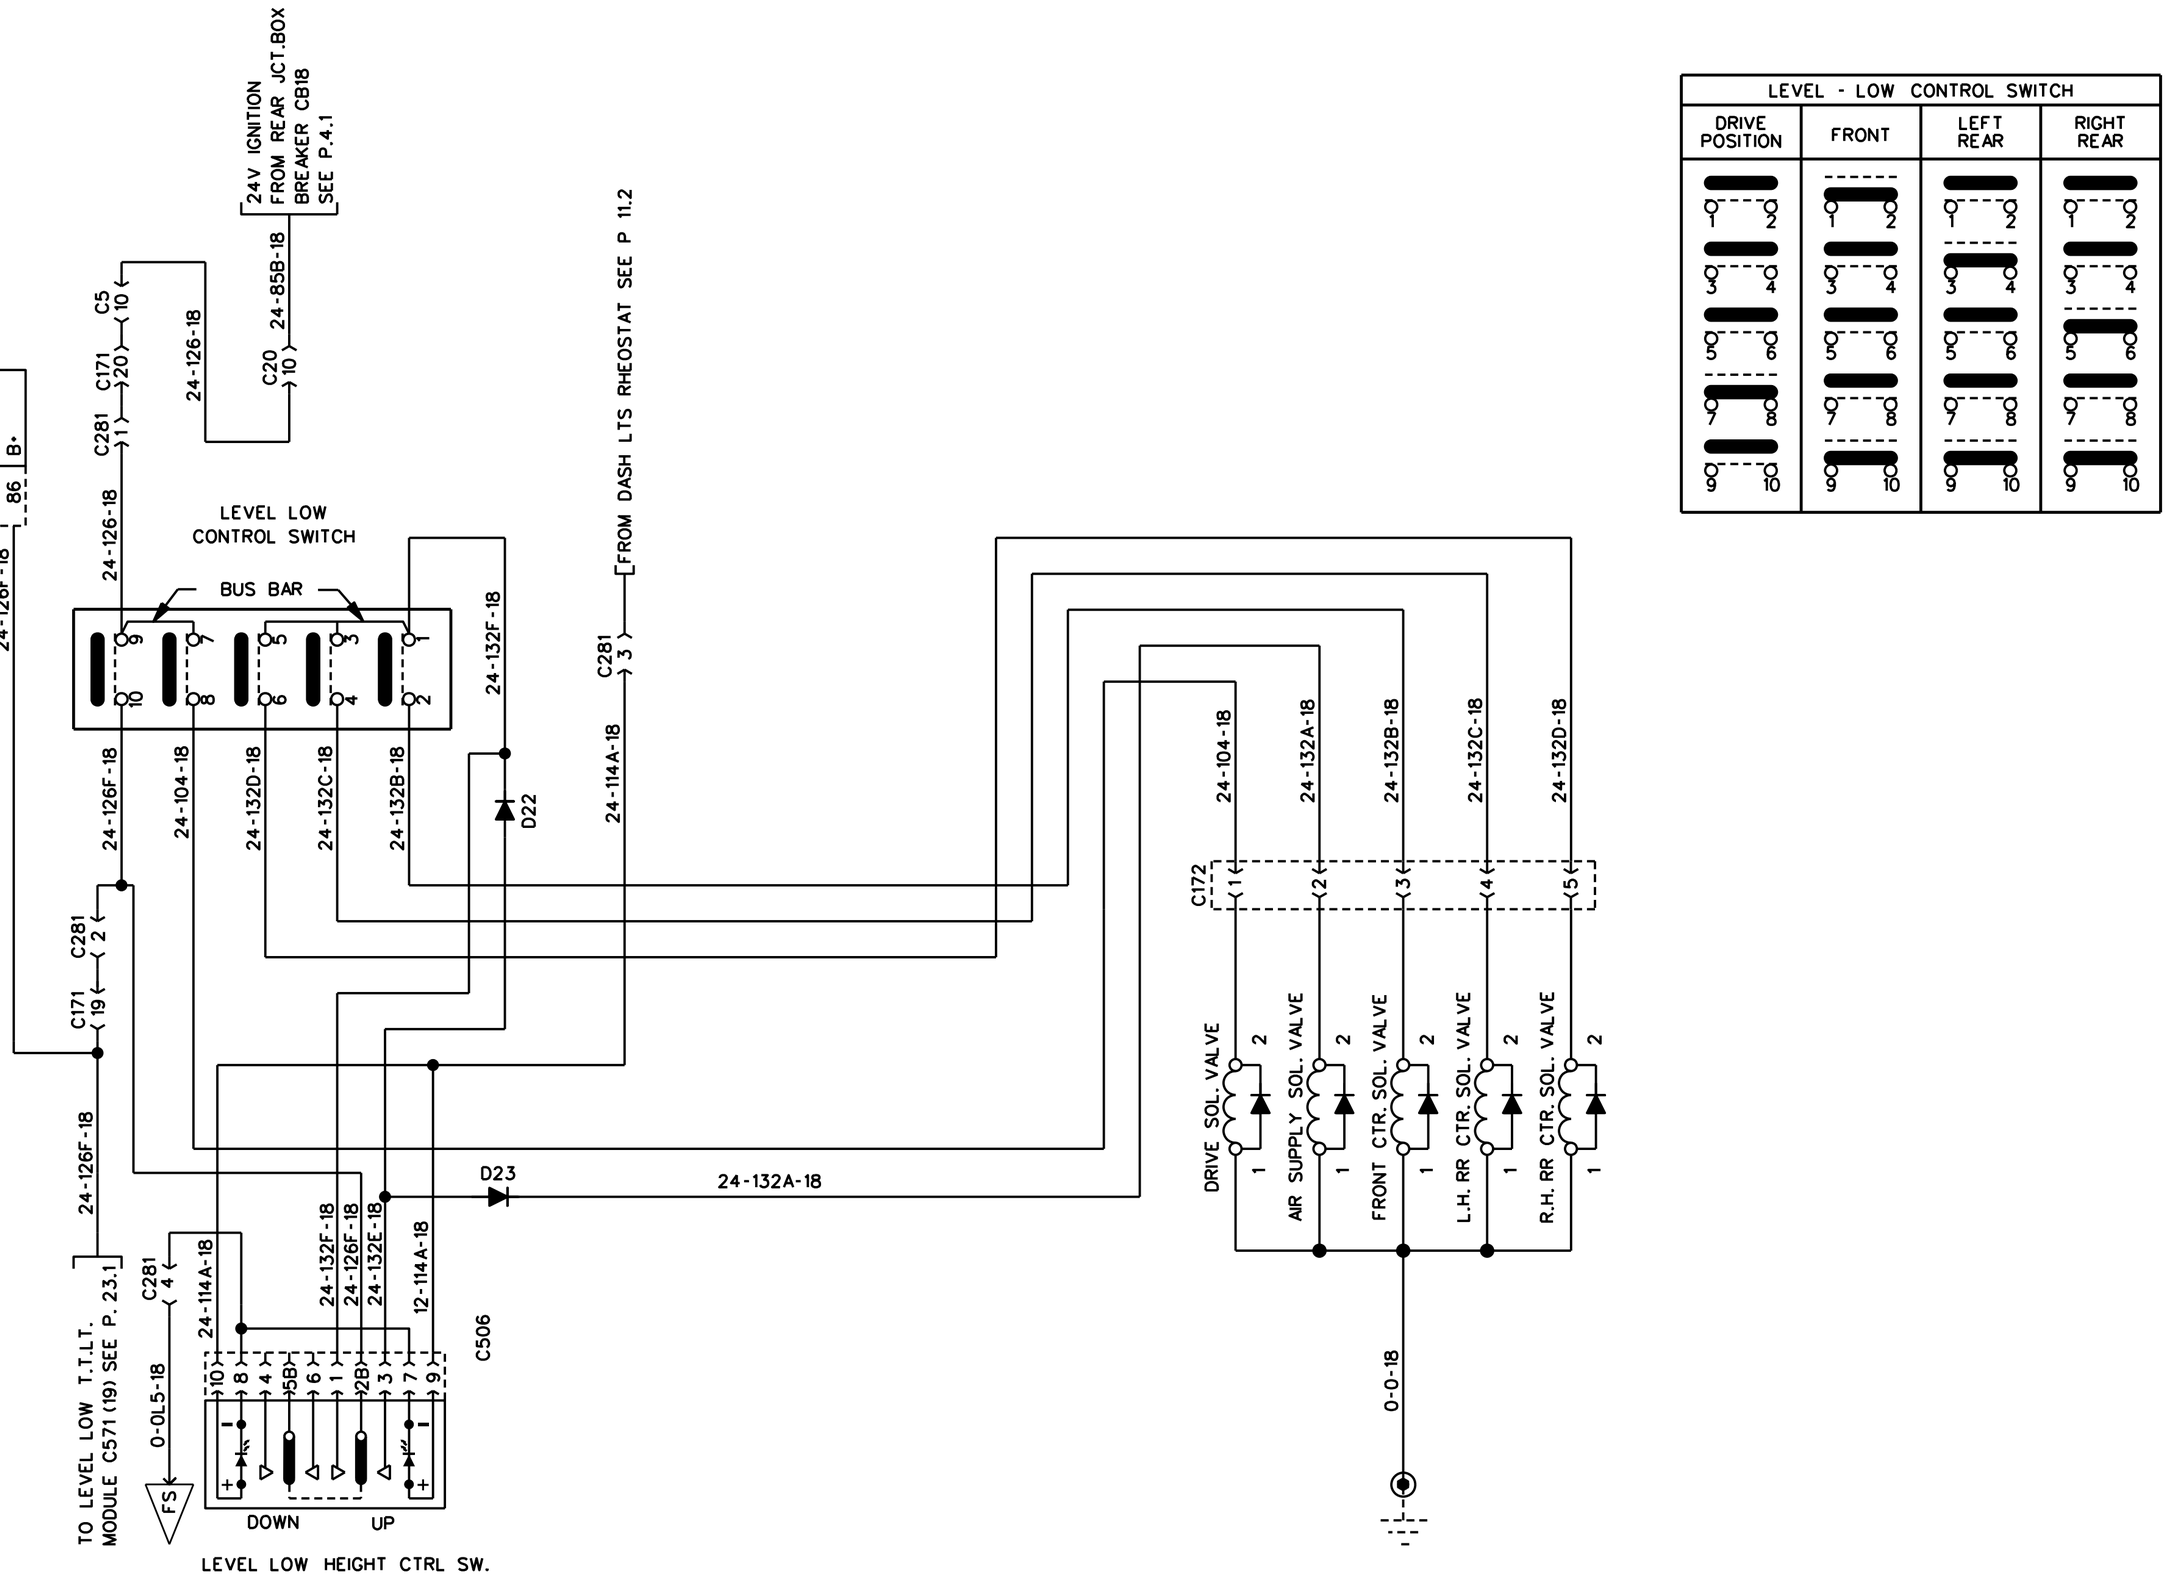

LEVEL - LOW SYSTEM

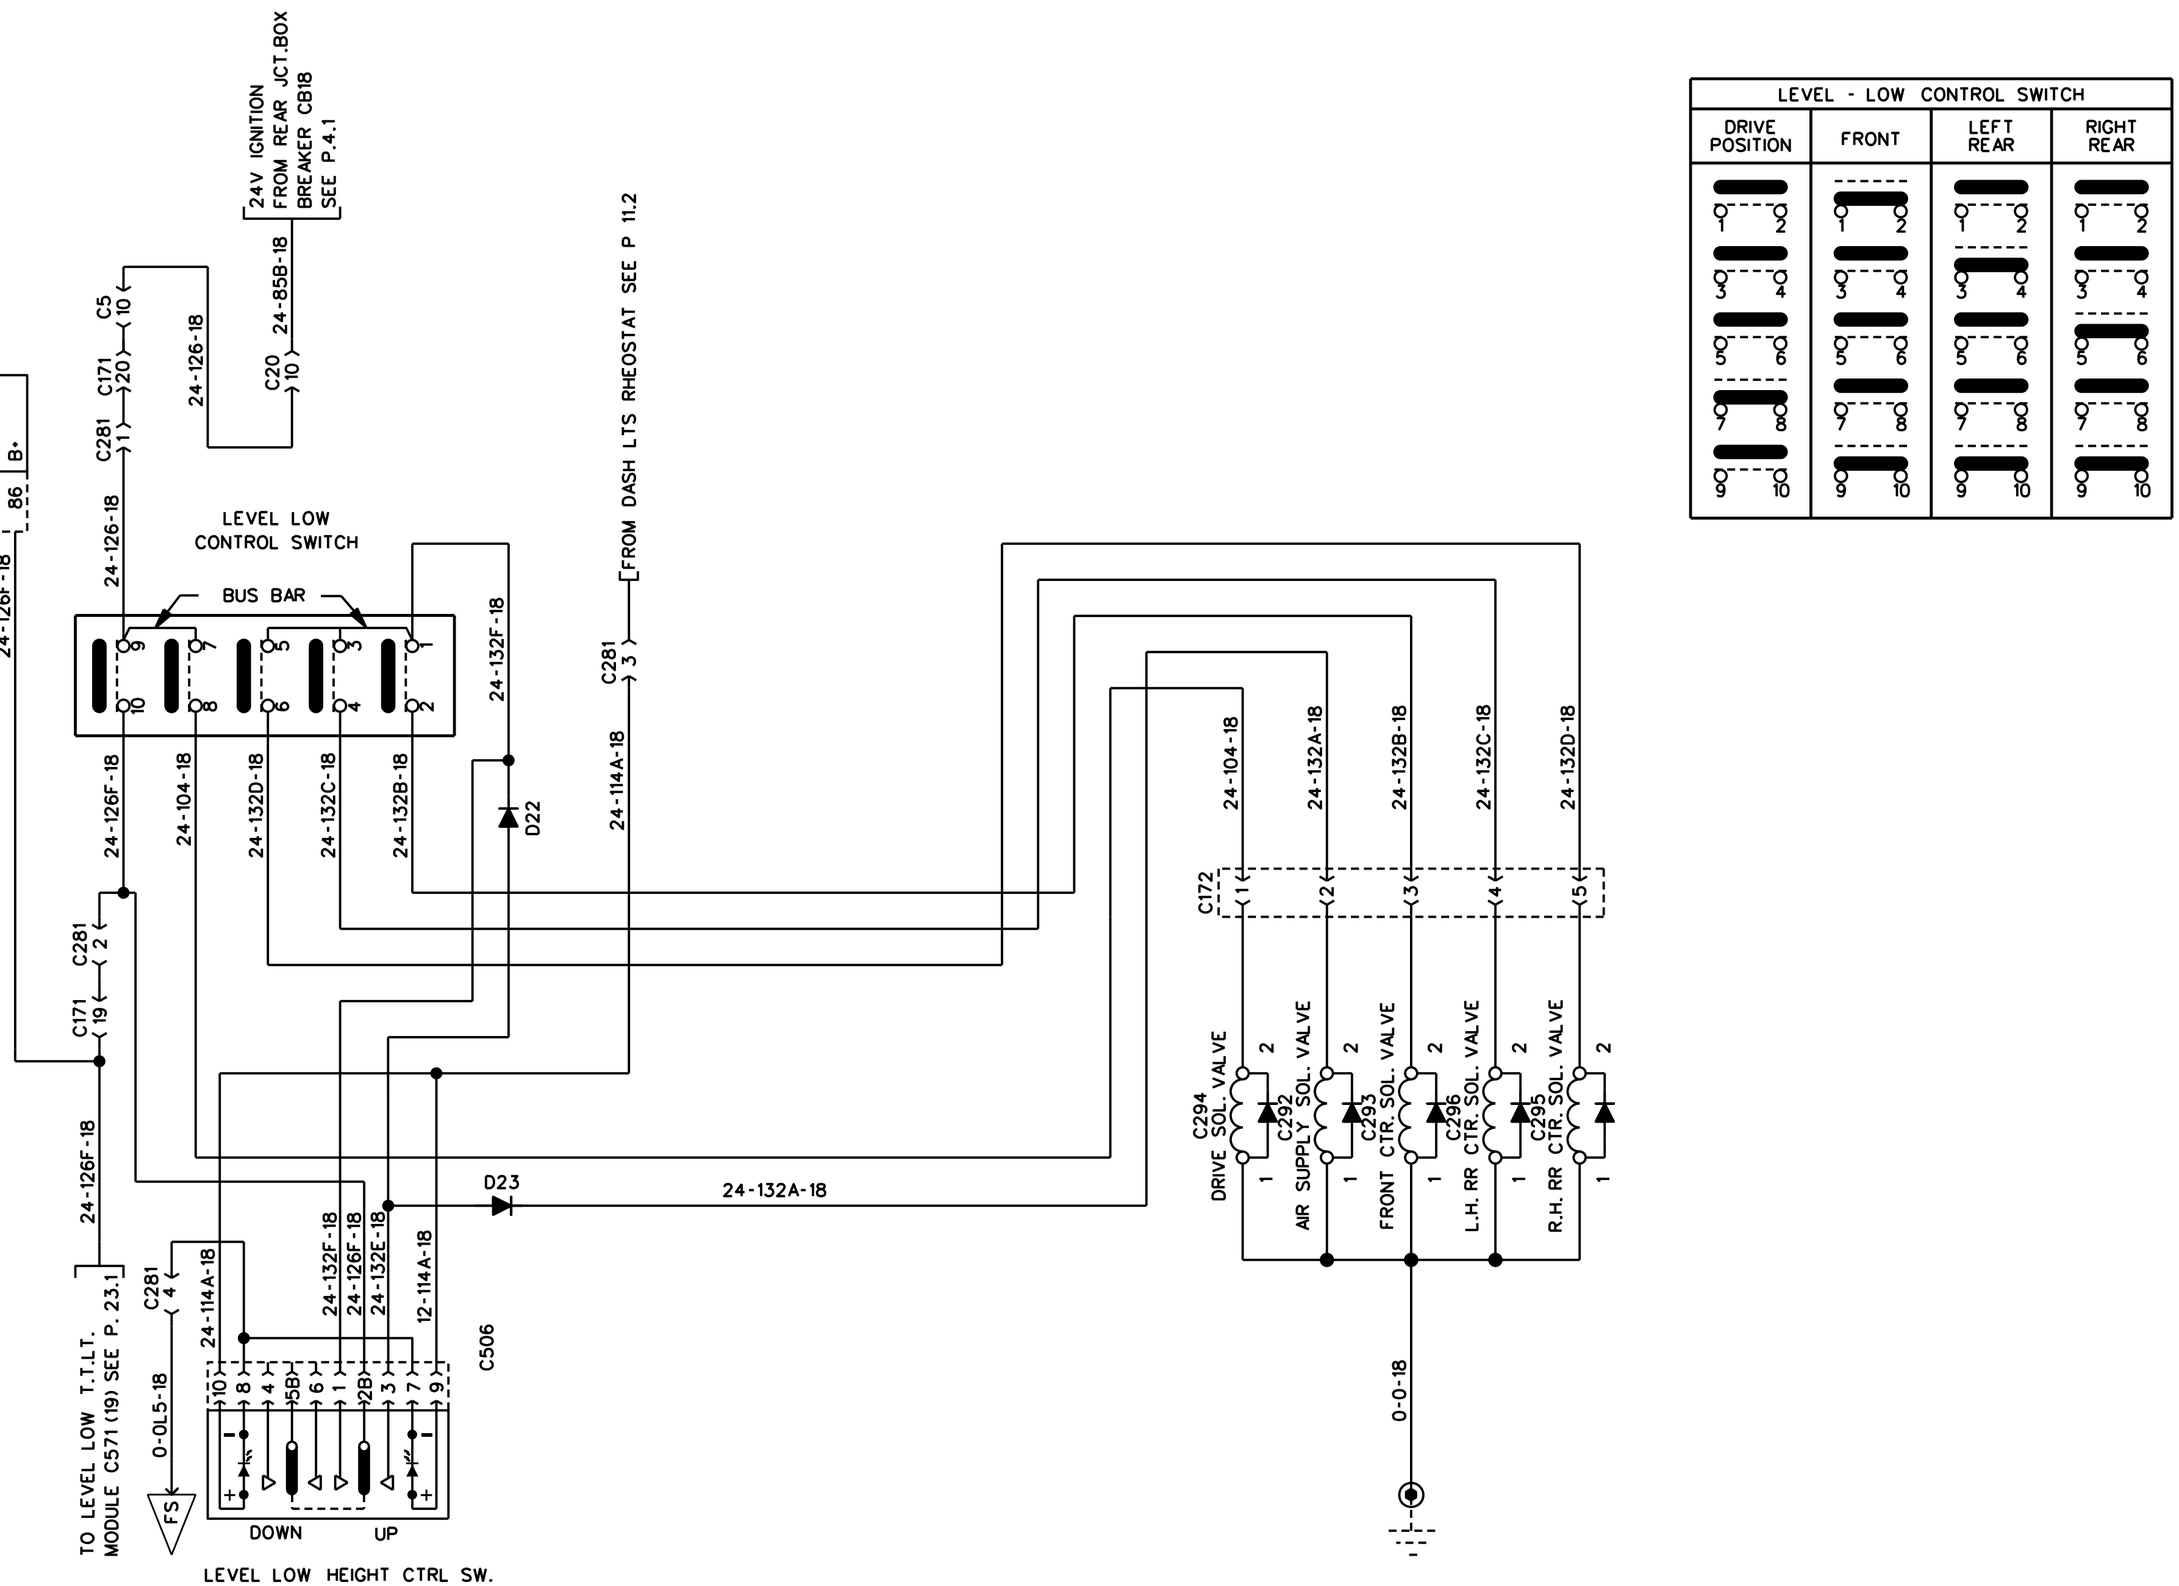

LEVEL - LOW SYSTEM

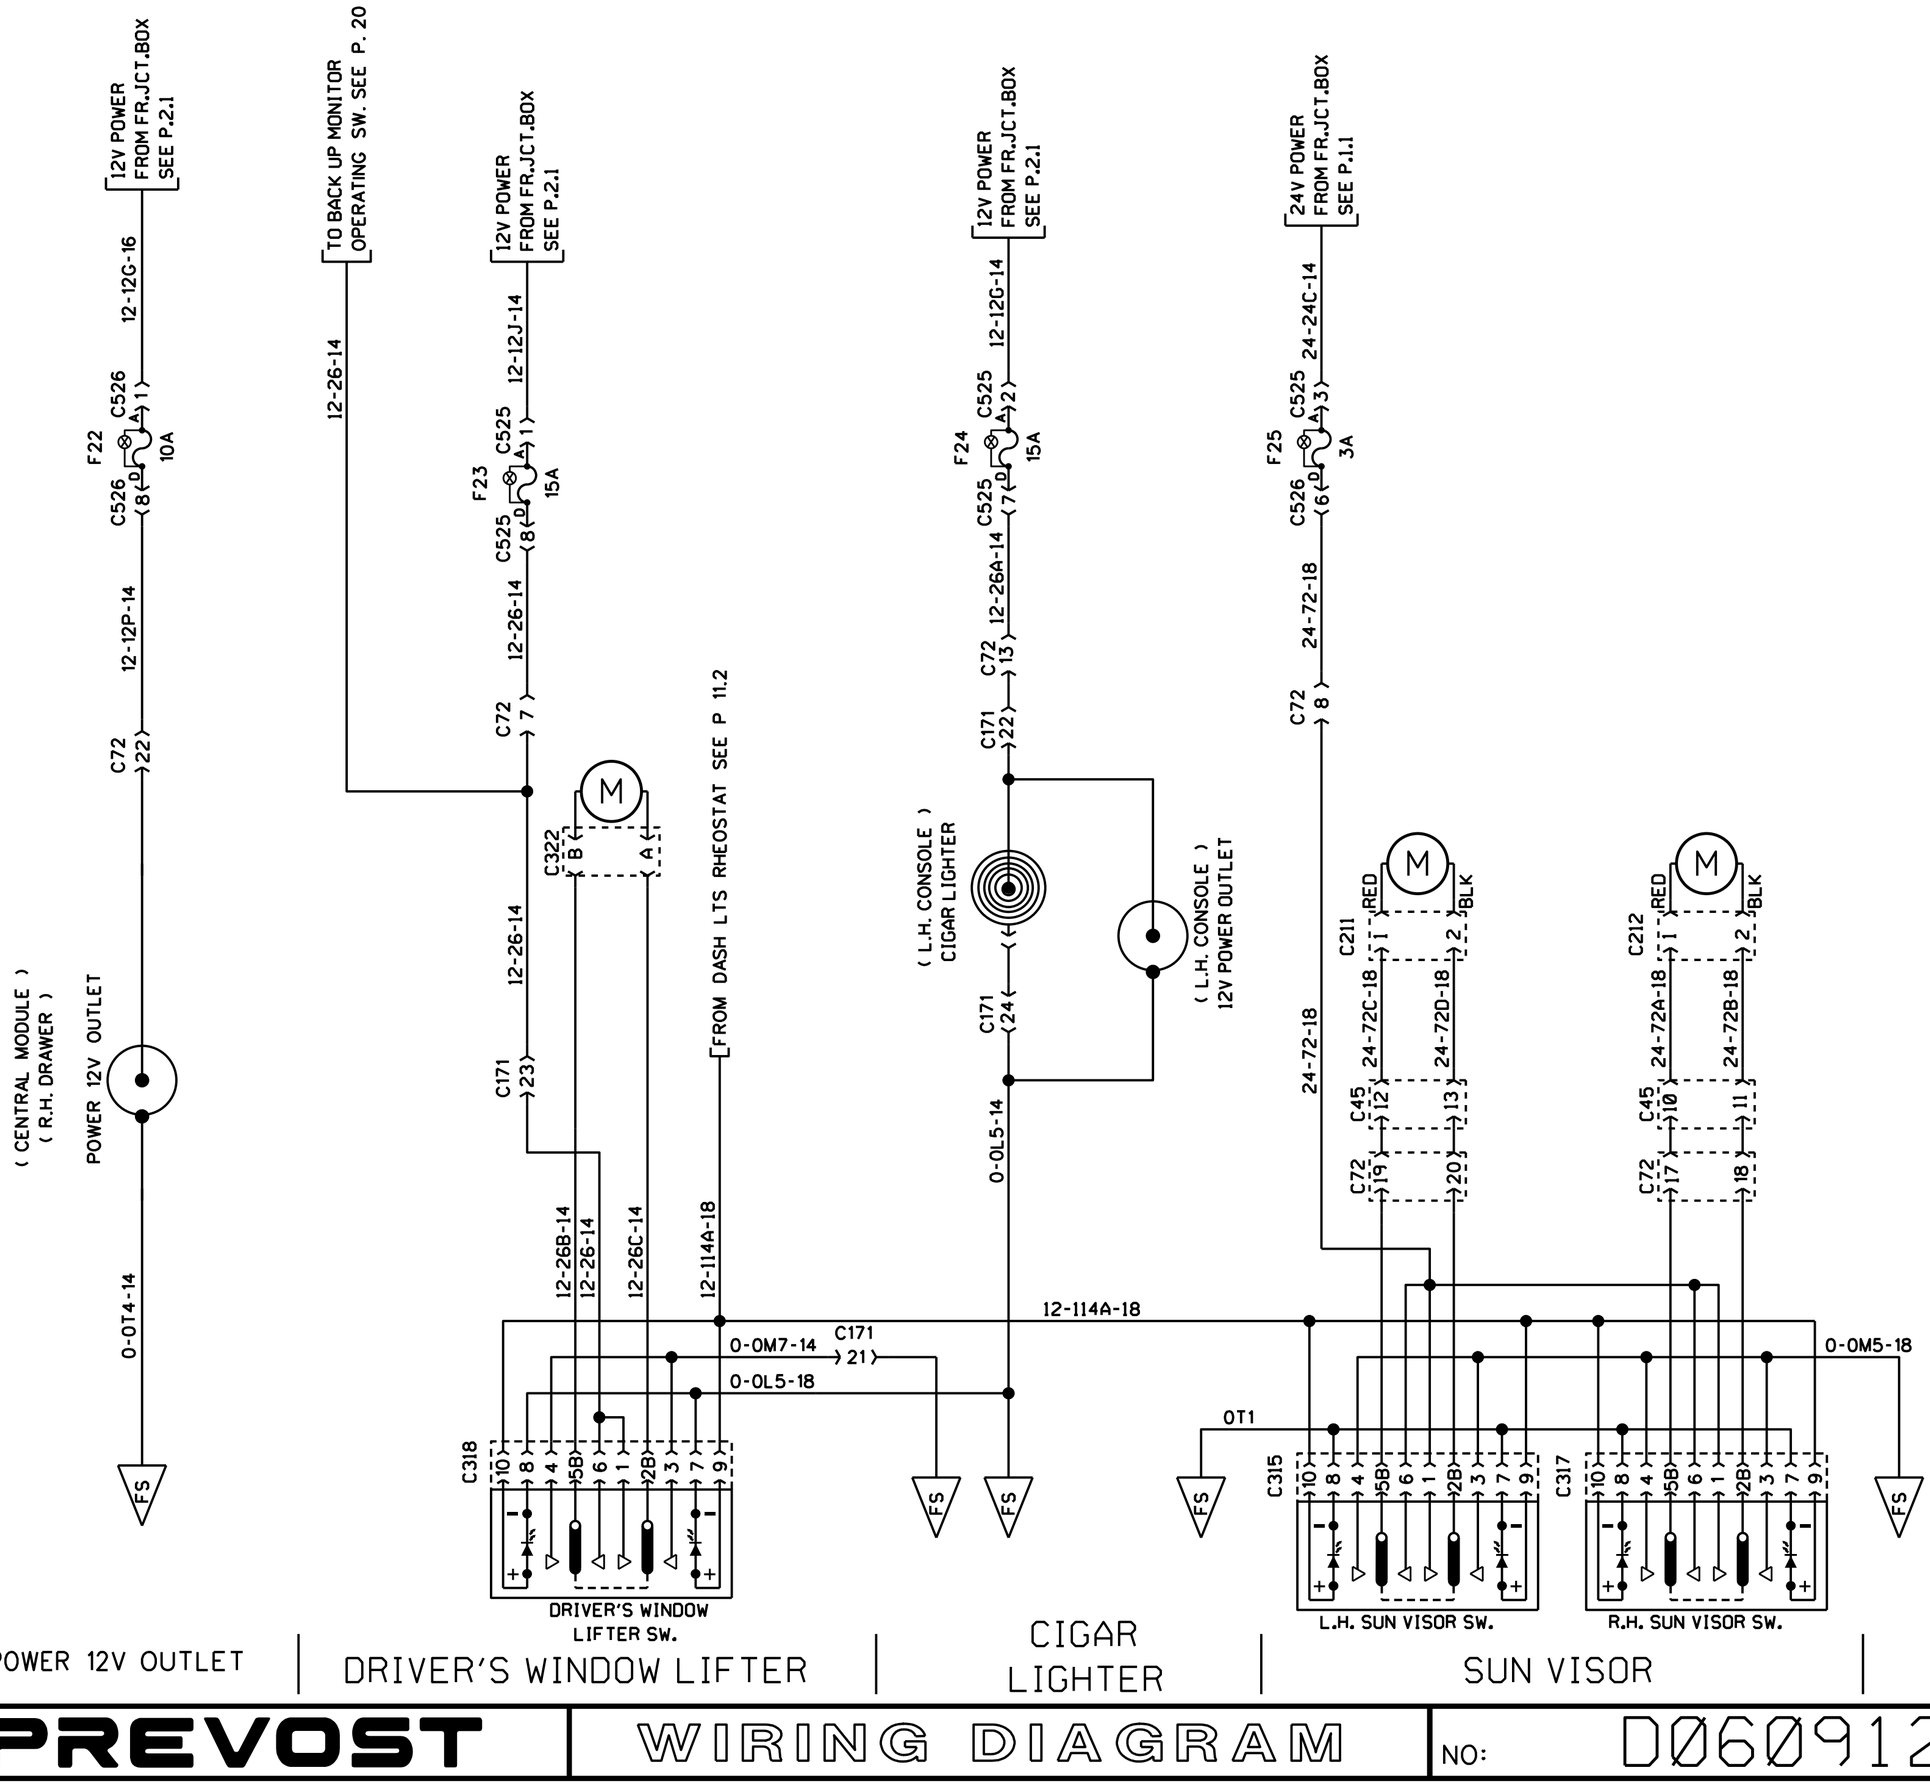
(CENTRAL MODULE)
(R.H. DRAWER)
POWER 12V OUTLET
0-0T4-14
FS
C72
22
12-12P-14
C526
8
F22
10A
C526
A
1
12-12G-16
12V POWER
FROM FR.JCT.BOX
SEE P.2.1
12-26-14
TO BACK UP MONITOR
OPERATING SW. SEE P. 20
C72
7
12-26-14
C525
8
F23
15A
C525
A
1
12-12J-14
12V POWER
FROM FR.JCT.BOX
SEE P.2.1
M
C322
B
A
12-26-14
C171
23
12-26B-14
12-26-14
12-26C-14
12-114A-18
FROM DASH LTS RHEOSTAT SEE P 11.2
C318
10
8
4
5B
6
1
2B
3
7
9
DRIVER'S WINDOW
LIFTER SW.
0-0M7-14
C171
21
0-0L5-18
(L.H. CONSOLE)
CIGAR LIGHTER
(L.H. CONSOLE)
12V POWER OUTLET
C171
24
0-0L5-14
C171
22
C72
13
12-26A-14
C525
7
F24
15A
C525
A
2
12-12G-14
12V POWER
FROM FR.JCT.BOX
SEE P.2.1
C72
8
24-72-18
C526
6
F25
3A
C525
A
3
24-24C-14
24V POWER
FROM FR.JCT.BOX
SEE P.1.1
24-72-18
C211
1
RED
2
BLK
24-72C-18
24-72D-18
C45
12
13
C72
19
20
C212
1
RED
2
BLK
24-72A-18
24-72B-18
C45
10
11
C72
17
18
12-114A-18
0-0M5-18
0T1
C315
C317
L.H. SUN VISOR SW.
R.H. SUN VISOR SW.
POWER 12V OUTLET
DRIVER'S WINDOW LIFTER
CIGAR LIGHTER
SUN VISOR

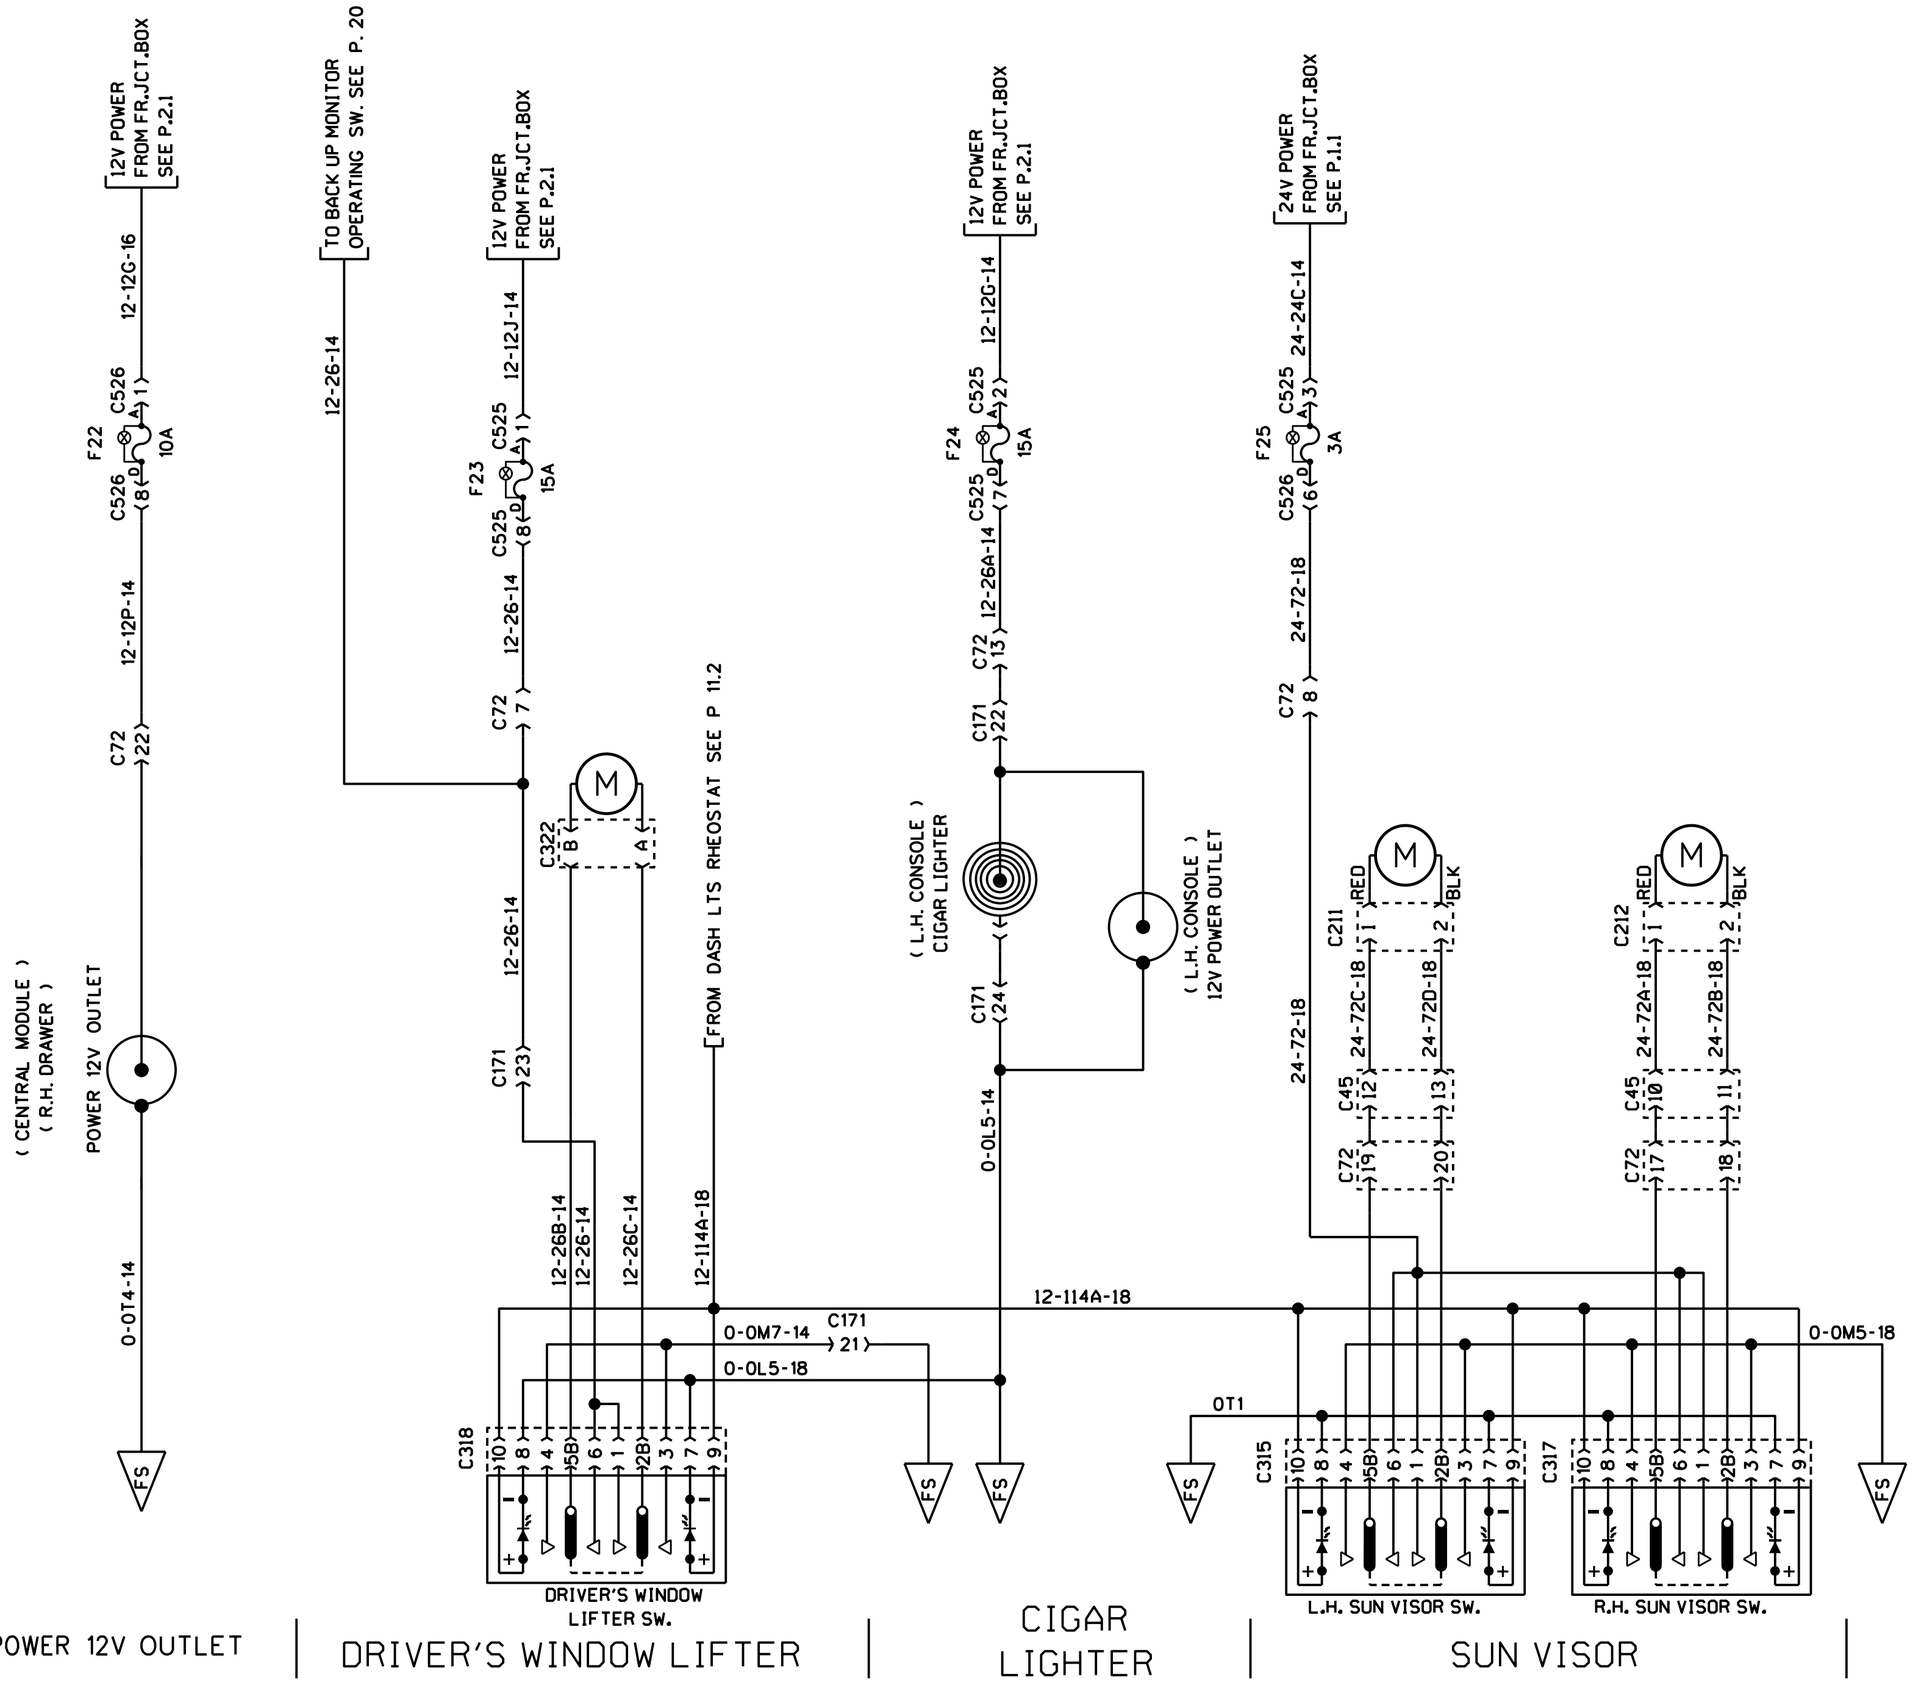

POWER 12V OUTLET | DRIVER'S WINDOW LIFTER | CIGAR LIGHTER | SUN VISOR

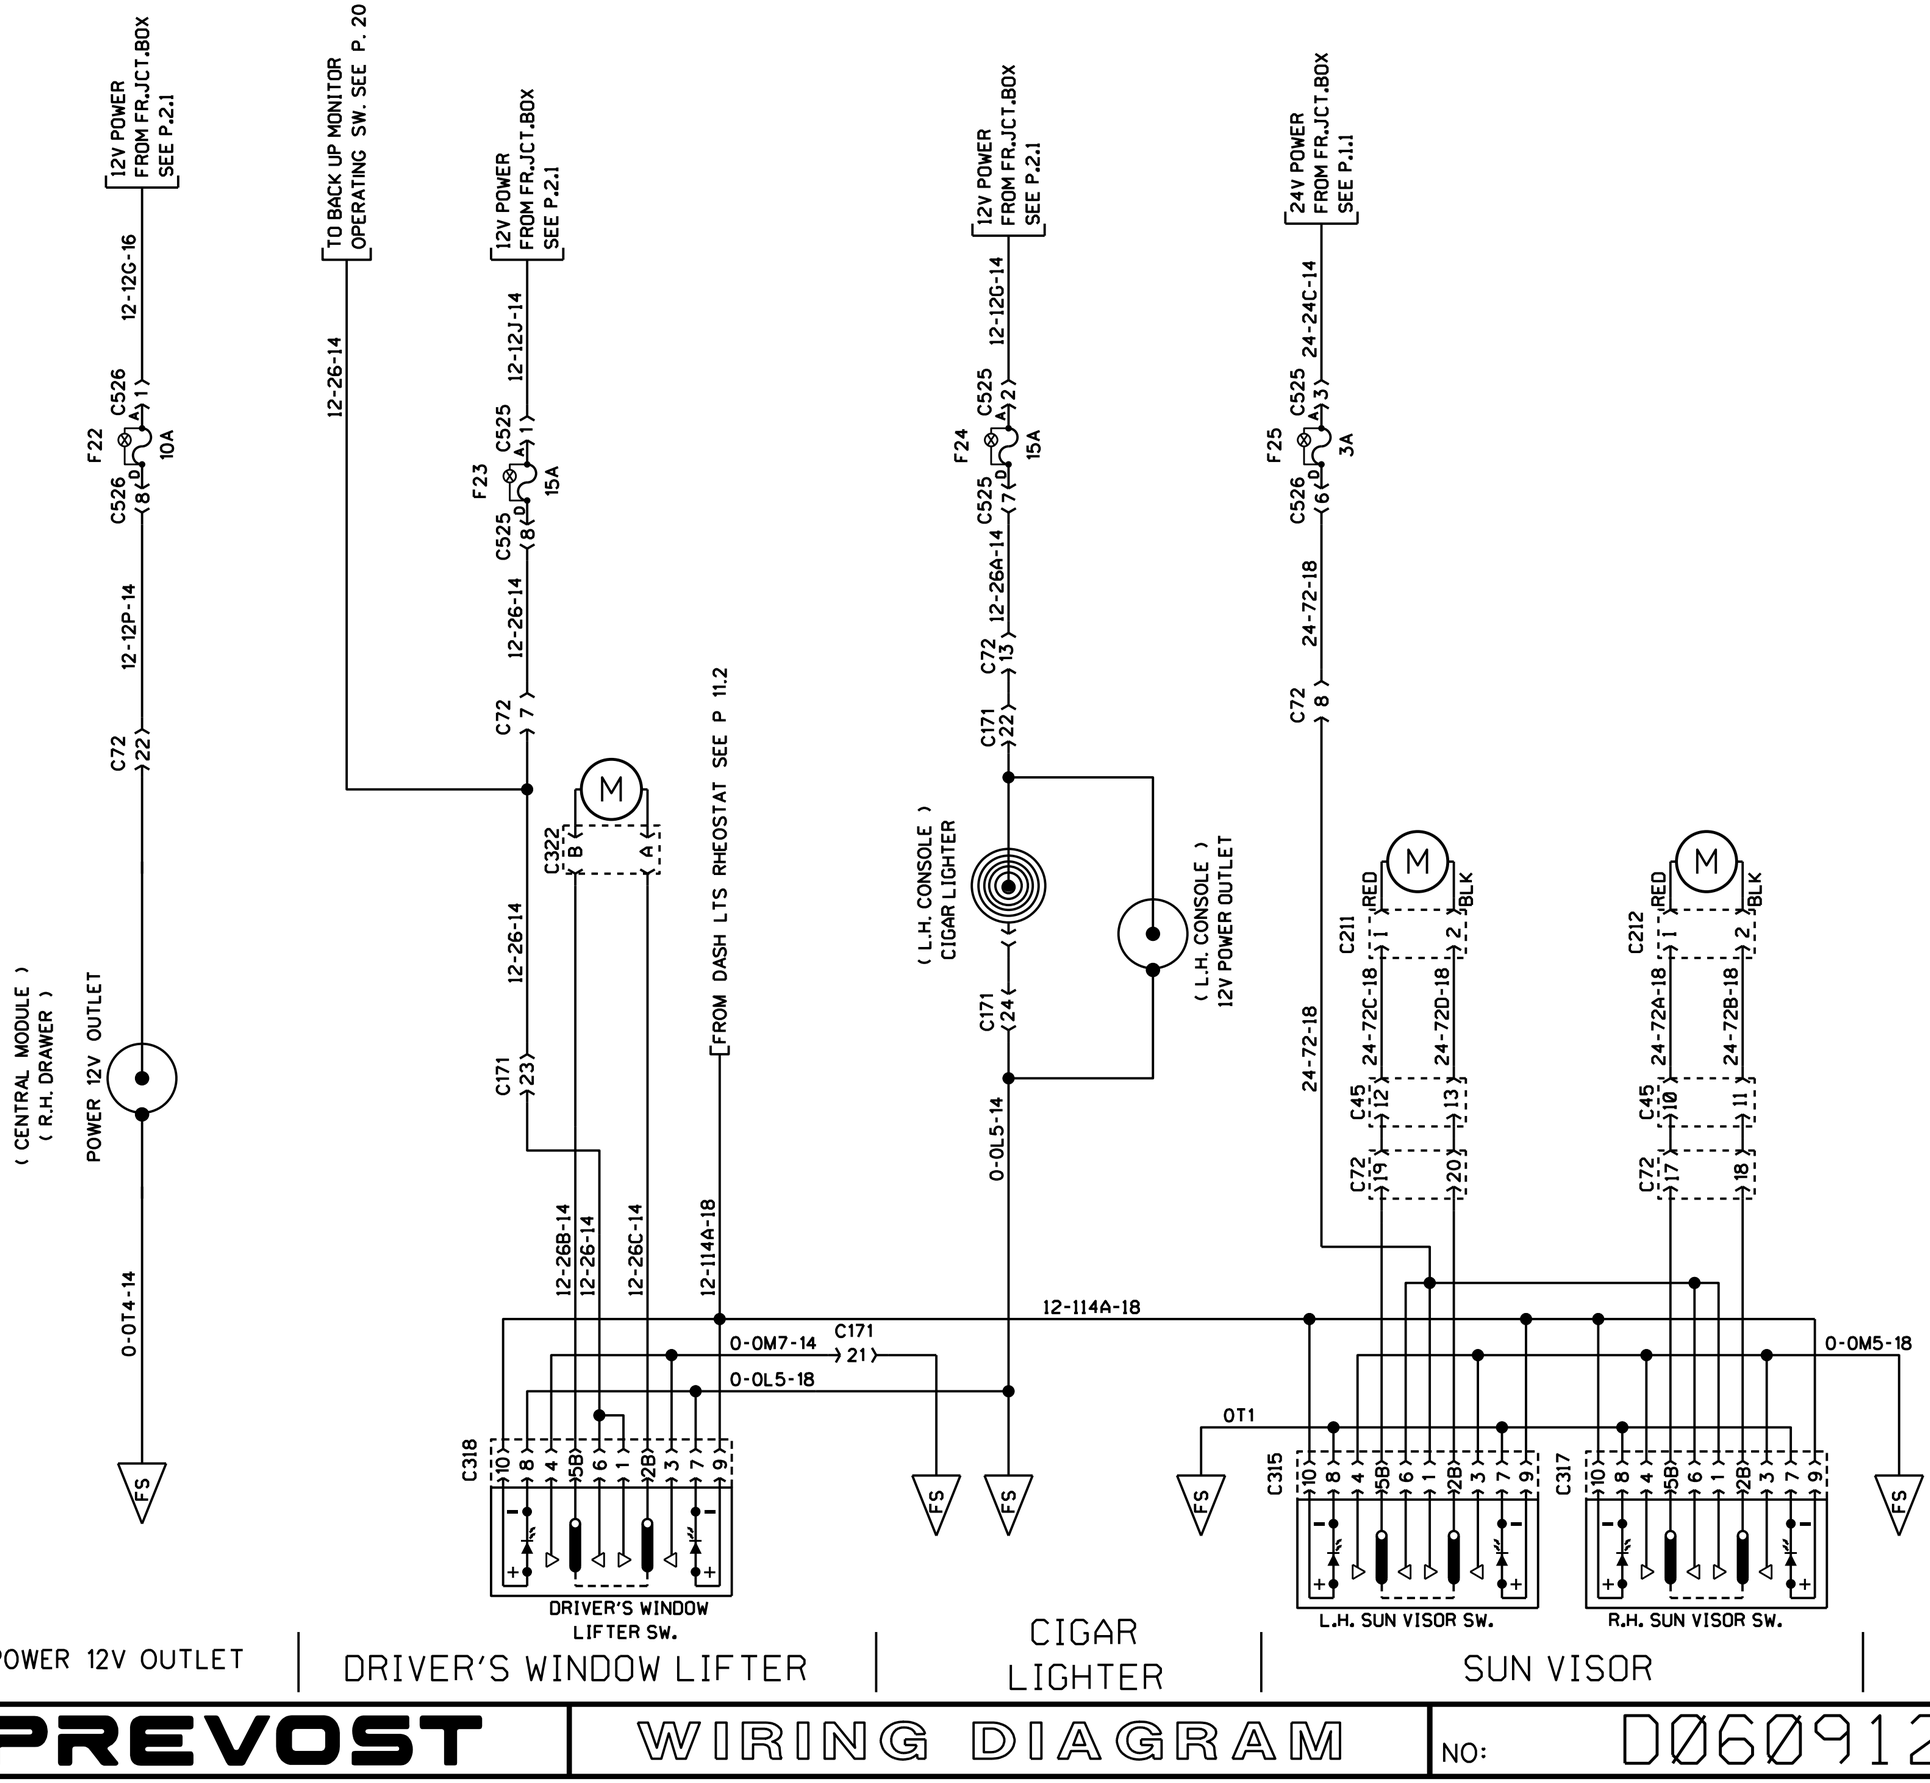
POWER 12V OUTLET
DRIVER'S WINDOW LIFTER
CIGAR LIGHTER
SUN VISOR
(CENTRAL MODULE)
(R.H. DRAWER)
POWER 12V OUTLET
0-0T4-14
FS
C72
22
12-12P-14
C526
8
D
F22
10A
A
C526
1
12-12G-16
12V POWER
FROM FR.JCT.BOX
SEE P.2.1
12-26-14
TO BACK UP MONITOR
OPERATING SW. SEE P. 20
C72
7
12-26-14
C525
8
D
F23
15A
A
C525
1
12-12J-14
12V POWER
FROM FR.JCT.BOX
SEE P.2.1
M
C322
B
A
12-26-14
C171
23
FROM DASH LTS RHEOSTAT SEE P 11.2
12-26B-14
12-26-14
12-26C-14
12-114A-18
C318
10
8
4
5B
6
1
2B
3
7
9
DRIVER'S WINDOW
LIFTER SW.
0-0M7-14
C171
21
0-0L5-18
FS
FS
C171
22
12-26A-14
C525
7
D
F24
15A
A
C525
2
12-12G-14
12V POWER
FROM FR.JCT.BOX
SEE P.2.1
(L.H. CONSOLE)
CIGAR LIGHTER
C171
24
0-0L5-14
(L.H. CONSOLE)
12V POWER OUTLET
C72
8
24-72-18
C526
6
D
F25
3A
A
C525
3
24-24C-14
24V POWER
FROM FR.JCT.BOX
SEE P.1.1
24-72-18
M
C211
1
RED
2
BLK
24-72C-18
24-72D-18
C45
12
13
C72
19
20
M
C212
1
RED
2
BLK
24-72A-18
24-72B-18
C45
10
11
C72
17
18
12-114A-18
0-0M5-18
0T1
C315
C317
L.H. SUN VISOR SW.
R.H. SUN VISOR SW.
FS
FS

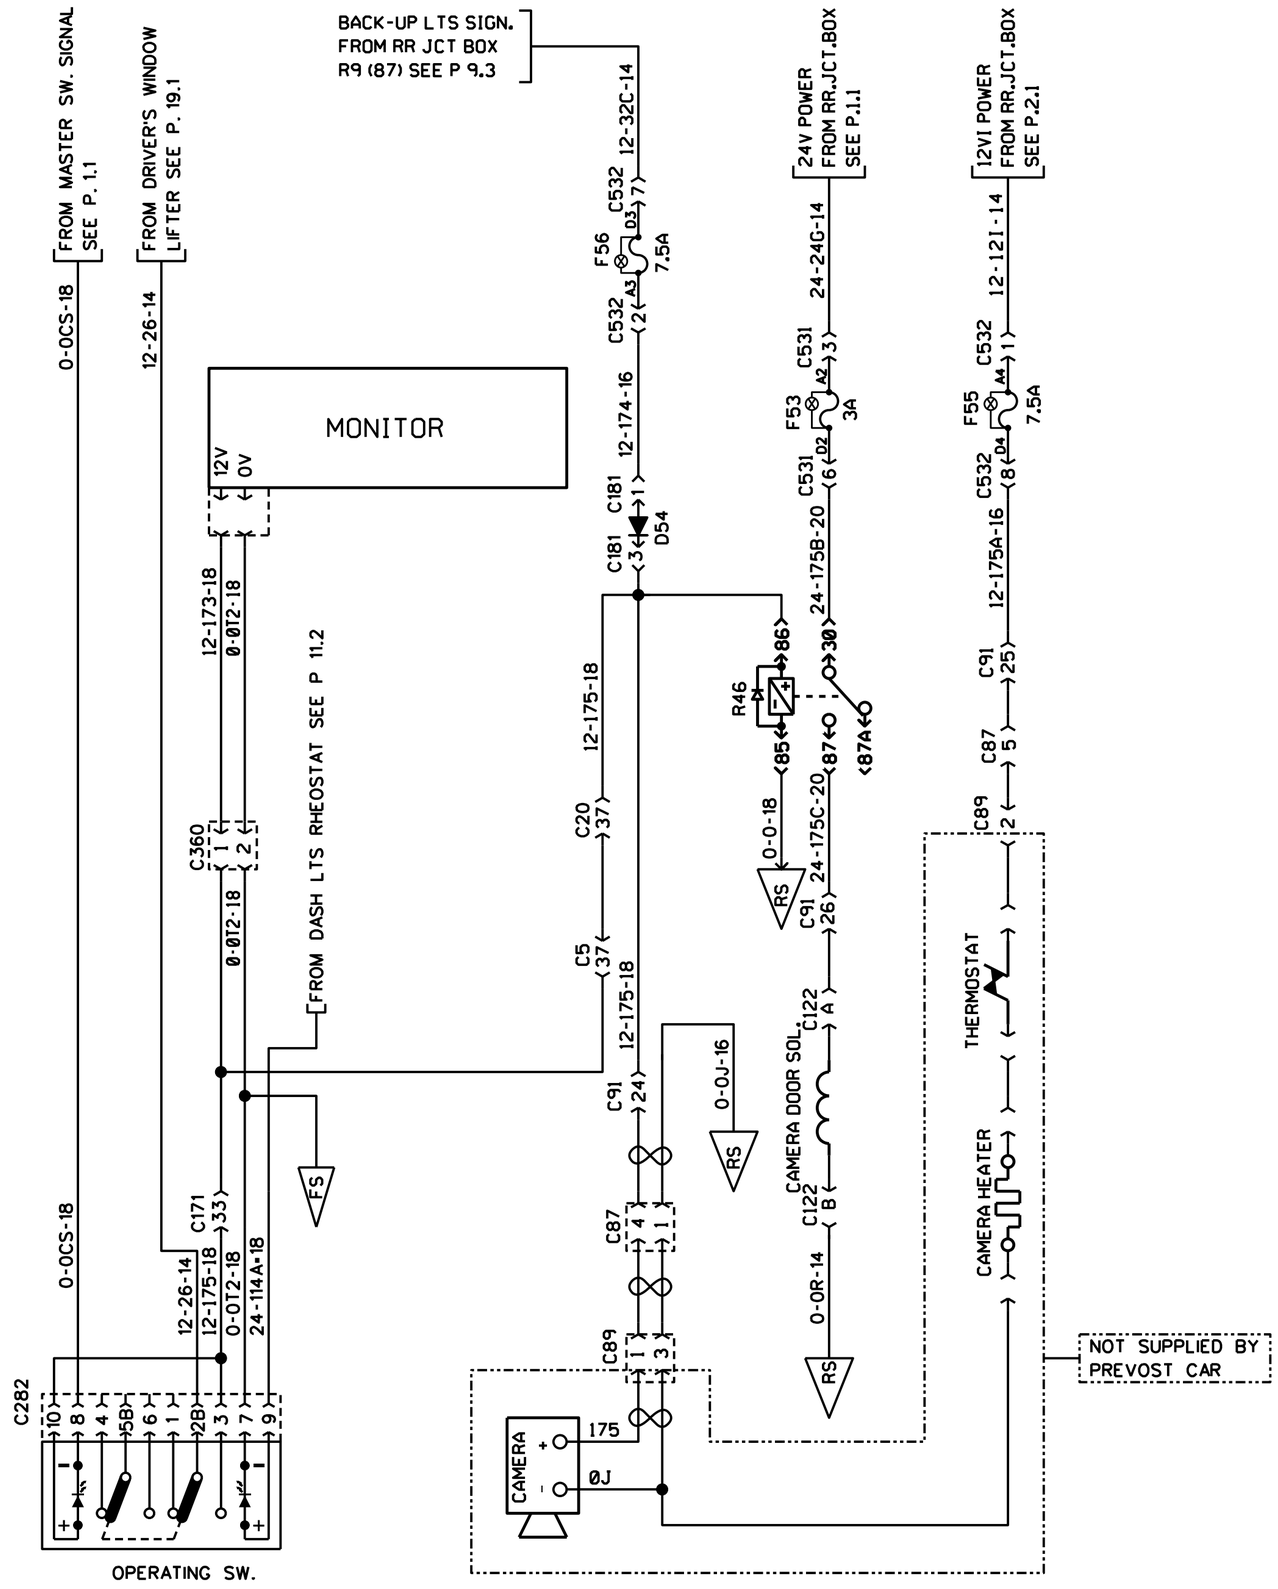

BACK-UP MONITOR

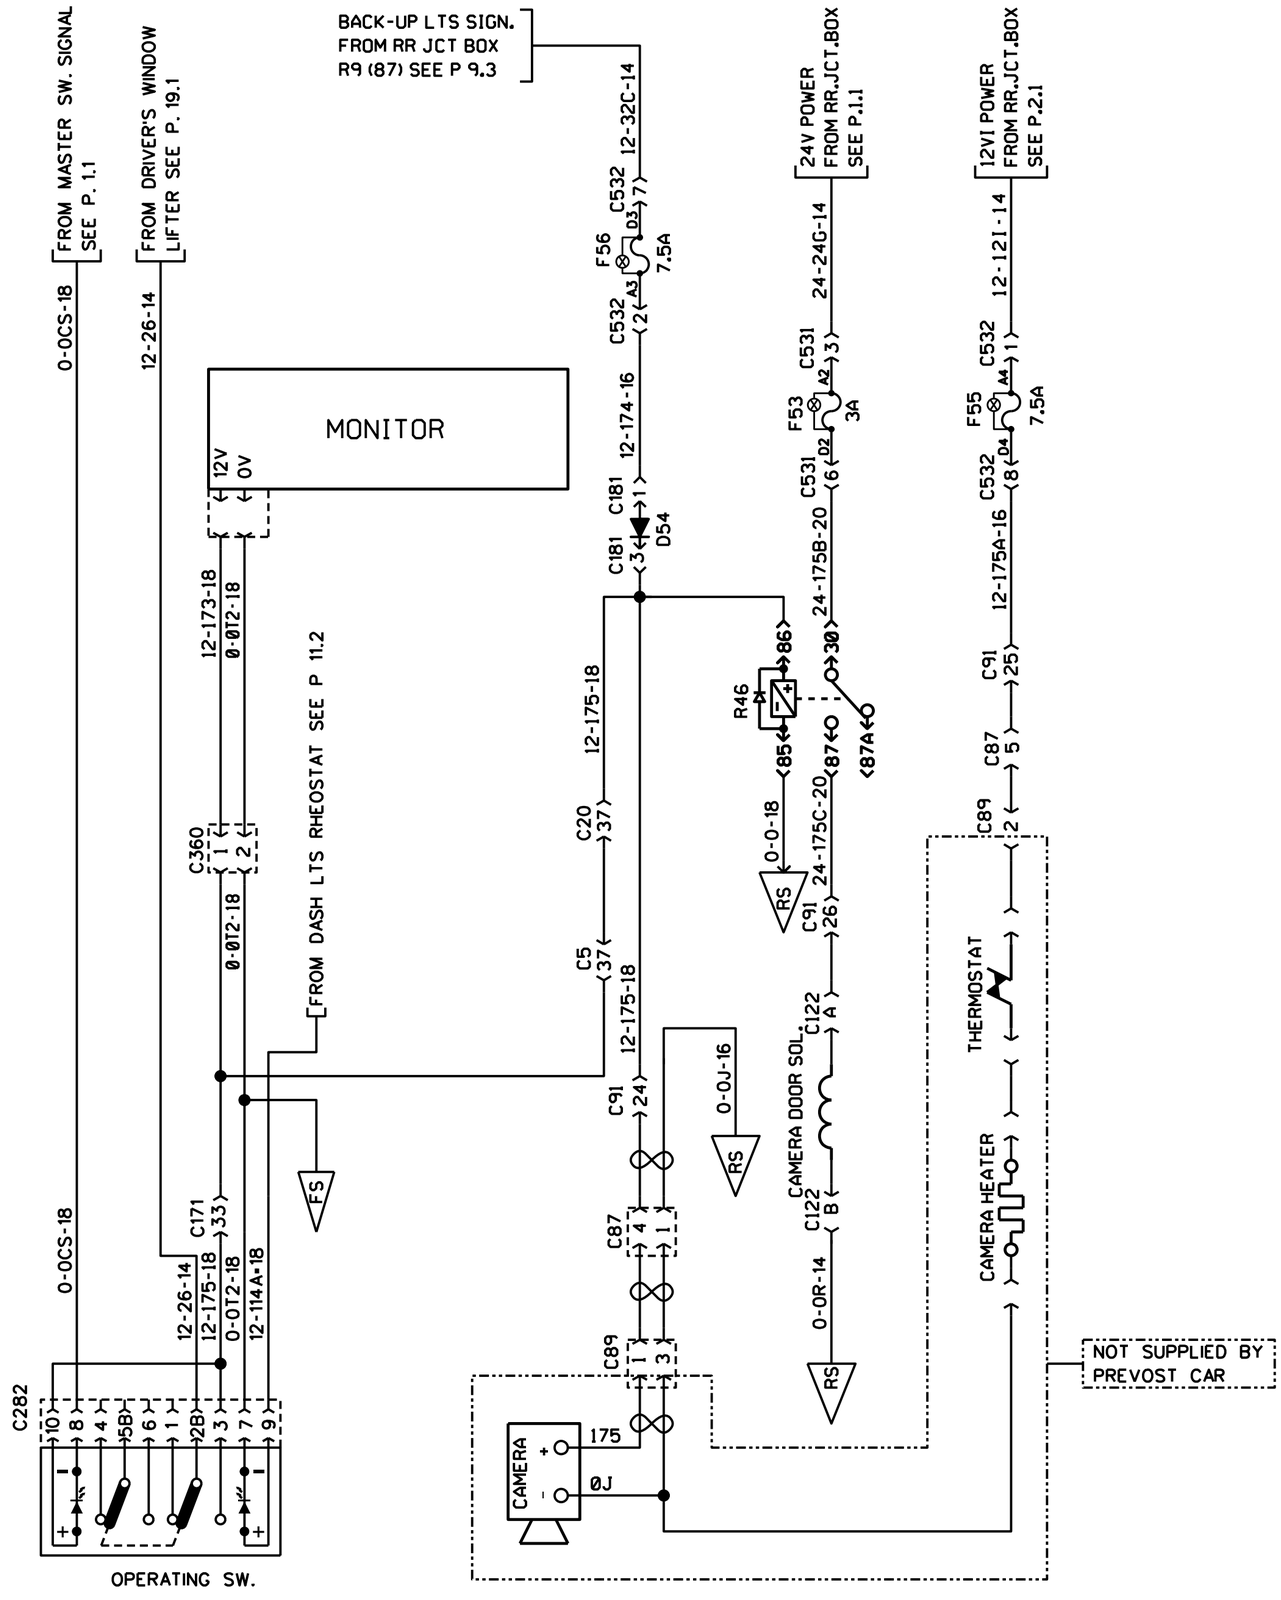

BACK-UP MONITOR

PREVOST

WIRING DIAGRAM

NO: D06091 2

PAGE: 21.1

REVISION 00

ENGINE BRAKE SYSTEM

ENGINE BRAKE SW.

C255

12-12H-18 → FROM CB28 SEE P. 7.1

10 — 12-12H-18

8 — 95B-20 — 565-20 — C5 21 — C21 16 — 979-18 → ENGINE BRAKE SIGN. FROM DDEC ECM (2 CYLINDERS CUT OUT) C2 (5) SEE P. 5.1

4

5B — 59A-18 — C74 26 — 59A-18 — ENGINE BRAKE C419 3 — 979-18

6

1

2B — 36A-18 — C74 28 — 36A-18 — C419 1 — 36-18 → BATTERY GRD FROM FR. JCT BOX R49 (87A) SEE P. 22.1

3 — 95A-18 — C74 27 — 95A-18 — C419 2 — 583-18 → ENGINE BRAKE SIGN. FROM DDEC ECM (4 CYLINDERS CUT OUT) C2 (4) SEE P. 5.1

7

9 — 12-114A-18 → FROM DASH LTS RHEOSTAT SEE P 11.2

FS — 0-0T1-18 — 95A-16

WITH WORLD TRANSMISSION ONLY

TO WORLD TRANSM. CONNECTOR CVI2(4) SEE P. 6.1 — 119-18 — 87 — 87A — 30 — 12-146W-18 → 12V IGNITION FROM WORLD TRANSM. RLY R8 (87) SEE P. 6.1

C5 14 — C20 14 — 85 — R87 — 86 — 24-85B-18 → 24V IGNITION FROM RR. JCT. BOX CB18 SEE P.4.1

TO DDEC ECM (Y3) ENGINE BRK ACTIVE DETROIT DIESEL CORP. ENGINE HARNESS — 565-18 — C416 C — 565-18 — C397 15 — C414 6 — 565-18 → 565-18 → TO STOP LTS. RLY. RR JCT BOX R61 (85) SEE P 9.3

RETARDER SYSTEM (WORLD TRANSMISSION)

RETARDER SW.

C255

12-12H-18 → FROM CB28 SEE P. 7.1

10 — 12-12H-18

8 — 95B-20 — 0-125W-18

4

5B — 36A-18 — C74 26 — 59A-18 — RETARDER C419 3

6 — 59A-18

1

2B — 36A-18 — C74 28 — 36A-18 — C419 1 — 161B-18 → C3 11 — C21 24 — 161B-18 → GROUND FROM WORLD TRANSM. CONNECTOR CV(11,31) SEE P. 6.1

3 — 95A-18 — C74 27 — 95A-18 — C419 2 — 163-18

7

9 — 12-114A-18 → 12-114A-18 → FROM DASH LTS RHEOSTAT SEE P 11.2

FS — 0-0T1-18

TO WORLD TRANSM. CONNECTOR CS(27) SEE P. 6.1 — 163-18 — C3 1

TO WORLD TRANSM. CONNECTOR CV(29) SEE P. 6.1 — 137-18 — C20 5 — 137R-18 — C3 2 — 87 — 87A — 30 — 161B-18

TO STOP LTS. RLY. R61 (85) SEE P 9.3 — 125W — C20 8 — C5 8

FS — 0-0C4-18 — 85 — R82 — 86 — 24-82A-18 → FROM STOP LTS. SW. SEE P 9.3

FROM WORLD TRANSM. RLY VIM4 (87) SEE P. 6.1

TO RADIATOR FAN CLUTCH CON. C508(4) SEE P. 8.1

FROM WORLD TRANSM. CONNECTOR CV(19) SEE P. 6.1 — 105W — C20 7 — C5 7 — 0-105W-18 → TO TRANSMISSION HOT OIL T.T.LT. MODULE C571 (13) SEE P. 23.1

PREVOST | WIRING DIAGRAM | NO: D06091 2 | PAGE: 21.1 | REVISION 02

ENGINE BRAKE SYSTEM

ENGINE BRAKE SW.

C255 10 12-12H-18 — FROM CB28 SEE P. 7.1
8 95B-20 — 565-20 — C5 21 — C21 16 — 979-18 — ENGINE BRAKE SIGN. FROM DDEC ECM (2 CYLINDERS CUT OUT) C2 (5) SEE P. 5.1
4
5B — C74 26 — 59A-18 — ENGINE BRAKE C419 3 — 979-18
6 59A-18
1
2B — 36A-18 — C74 28 — 36A-18 — C419 1 — 36-18 — 36-18 — BATTERY GRD FROM FR. JCT BOX R49 (87A) SEE P. 22.1
3 — 95A-18 — C74 27 — 95A-18 — C419 2 — 583-18 — 583-18 — ENGINE BRAKE SIGN. FROM DDEC ECM (4 CYLINDERS CUT OUT) C2 (4) SEE P. 5.1
7
9 — 12-114A-18 — FROM DASH LTS RHEOSTAT SEE P 11.2
FS — 0-0T1-18
95A-16

WITH WORLD TRANSMISSION ONLY

R87
C5 14 — C20 14 — 85 — 86 — 24-85B-18 — 24V IGNITION FROM RR. JCT. BOX CB18 SEE P.4.1

TO WORLD TRANSM. CONNECTOR CVI2(4) SEE P. 6.1 — 119-18 — 87 — 30 — 12-439-18 — 12-439-18 — 12V IGNITION FROM CB21 SEE P. 6.1
87A

TO DDEC ECM (Y3) ENGINE BRK ACTIVE DETROIT DIESEL CORP. ENGINE HARNESS — 565-18 — C416 C — 565-18 — C397 15 — C414 6 — 565-18 — 565-18 — TO STOP LTS. RLY. RR JCT BOX R61 (85) SEE P 9.3

RETARDER SYSTEM (WORLD TRANSMISSION)

RETARDER SW.

C255 10 12-12H-18 — FROM CB28 SEE P. 7.1
8 95B-20 — 0-125W-18 — TO ABS R52 SEE P. 22.1
4
5B — 36A-18 — C74 26 — 59A-18 — RETARDER C419 3
6 59A-18
1
2B — 36A-18 — C74 28 — 36A-18 — C419 1 — 161B-18 — C3 11 — C21 24 — 161B-18 — GROUND FROM WORLD TRANSM. CONNECTOR CV(11,31) SEE P. 6.1
3 — 95A-18 — C74 27 — 95A-18 — C419 2 — 163-18
7
9 — 12-114A-18 — 12-114A-18 — FROM DASH LTS RHEOSTAT SEE P 11.2
FS — 0-0T1-18

TO WORLD TRANSM. CONNECTOR CS(27) SEE P. 6.1 — 163-18 — C3 1
TO WORLD TRANSM. CONNECTOR CV(29) SEE P. 6.1 — 137-18 — C20 5 — 137R-18 — C3 2 — 87 — 30 — 161B-18
87A
TO STOP LTS. RLY. R61 (85) SEE P 9.3 — 125W — 8 — C5 8 — FS — 0-0C4-18 — 85 — 86 — 24-82A-18 — FROM STOP LTS. SW. SEE P 9.3
R82
FROM WORLD TRANSM. RLY VIM4 (87) SEE P. 6.1
TO RADIATOR FAN CLUTCH CON. C508(4) SEE P. 8.1
FROM WORLD TRANSM. CONNECTOR CV(19) SEE P. 6.1 — 105W — 7 — 7 — 0-105W-18 — TO TRANSMISSION HOT OIL T.T.LT. MODULE C571 (13) SEE P. 23.1

PREVOST | WIRING DIAGRAM | NO: D06091 2 | PAGE: 21.1 SP1 | REVISION 00

RETARDER SYSTEM
(WORLD TRANSMISSION)

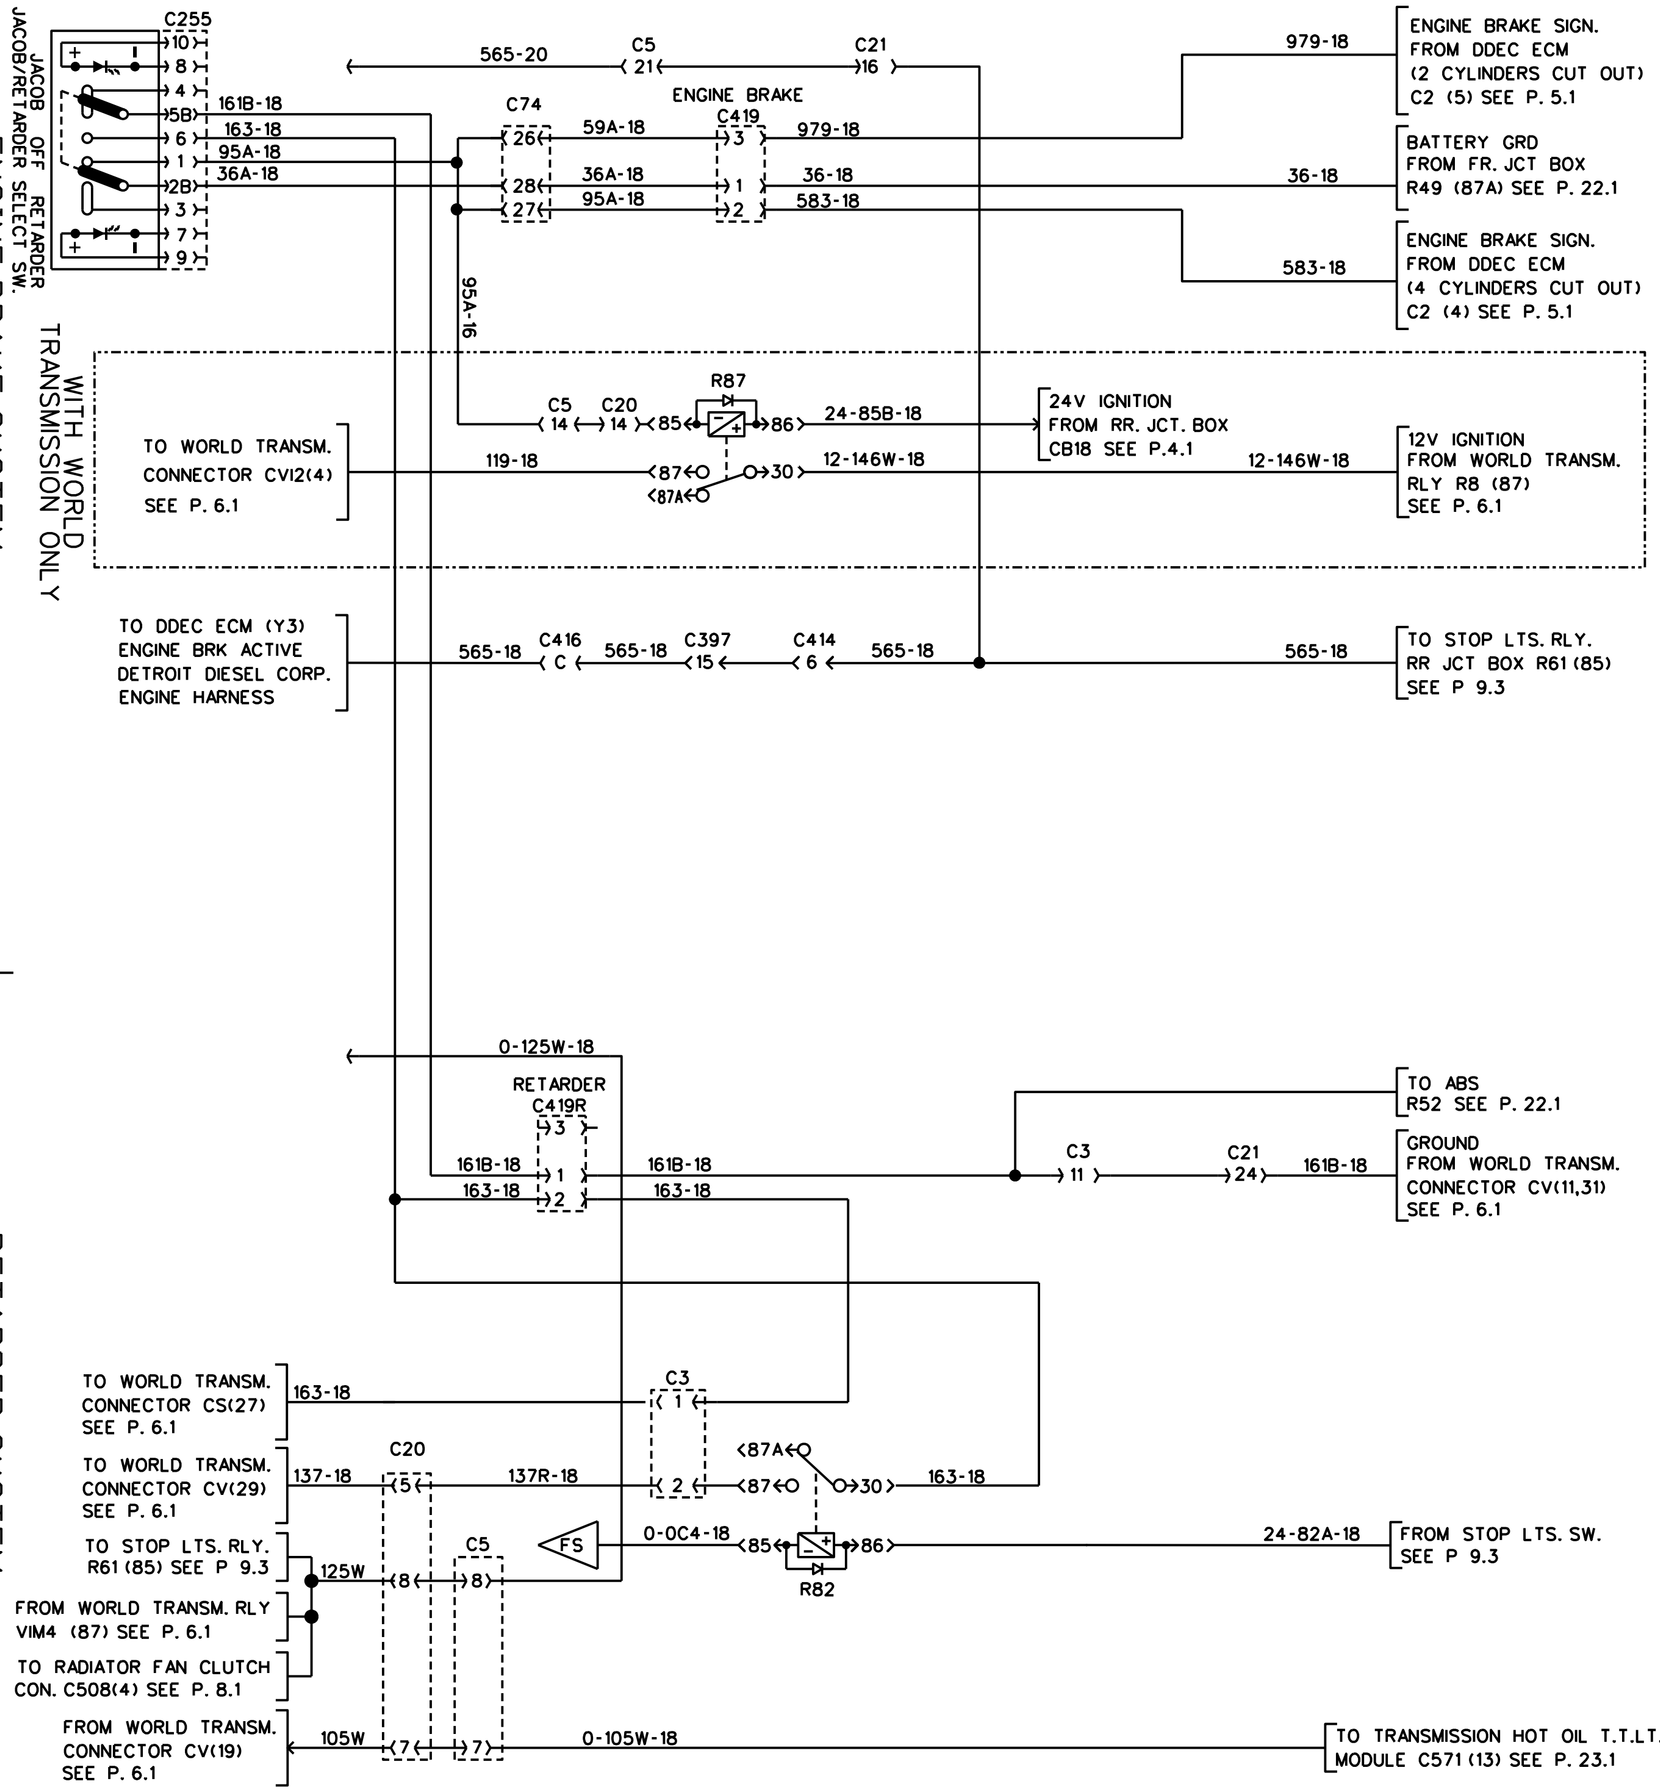

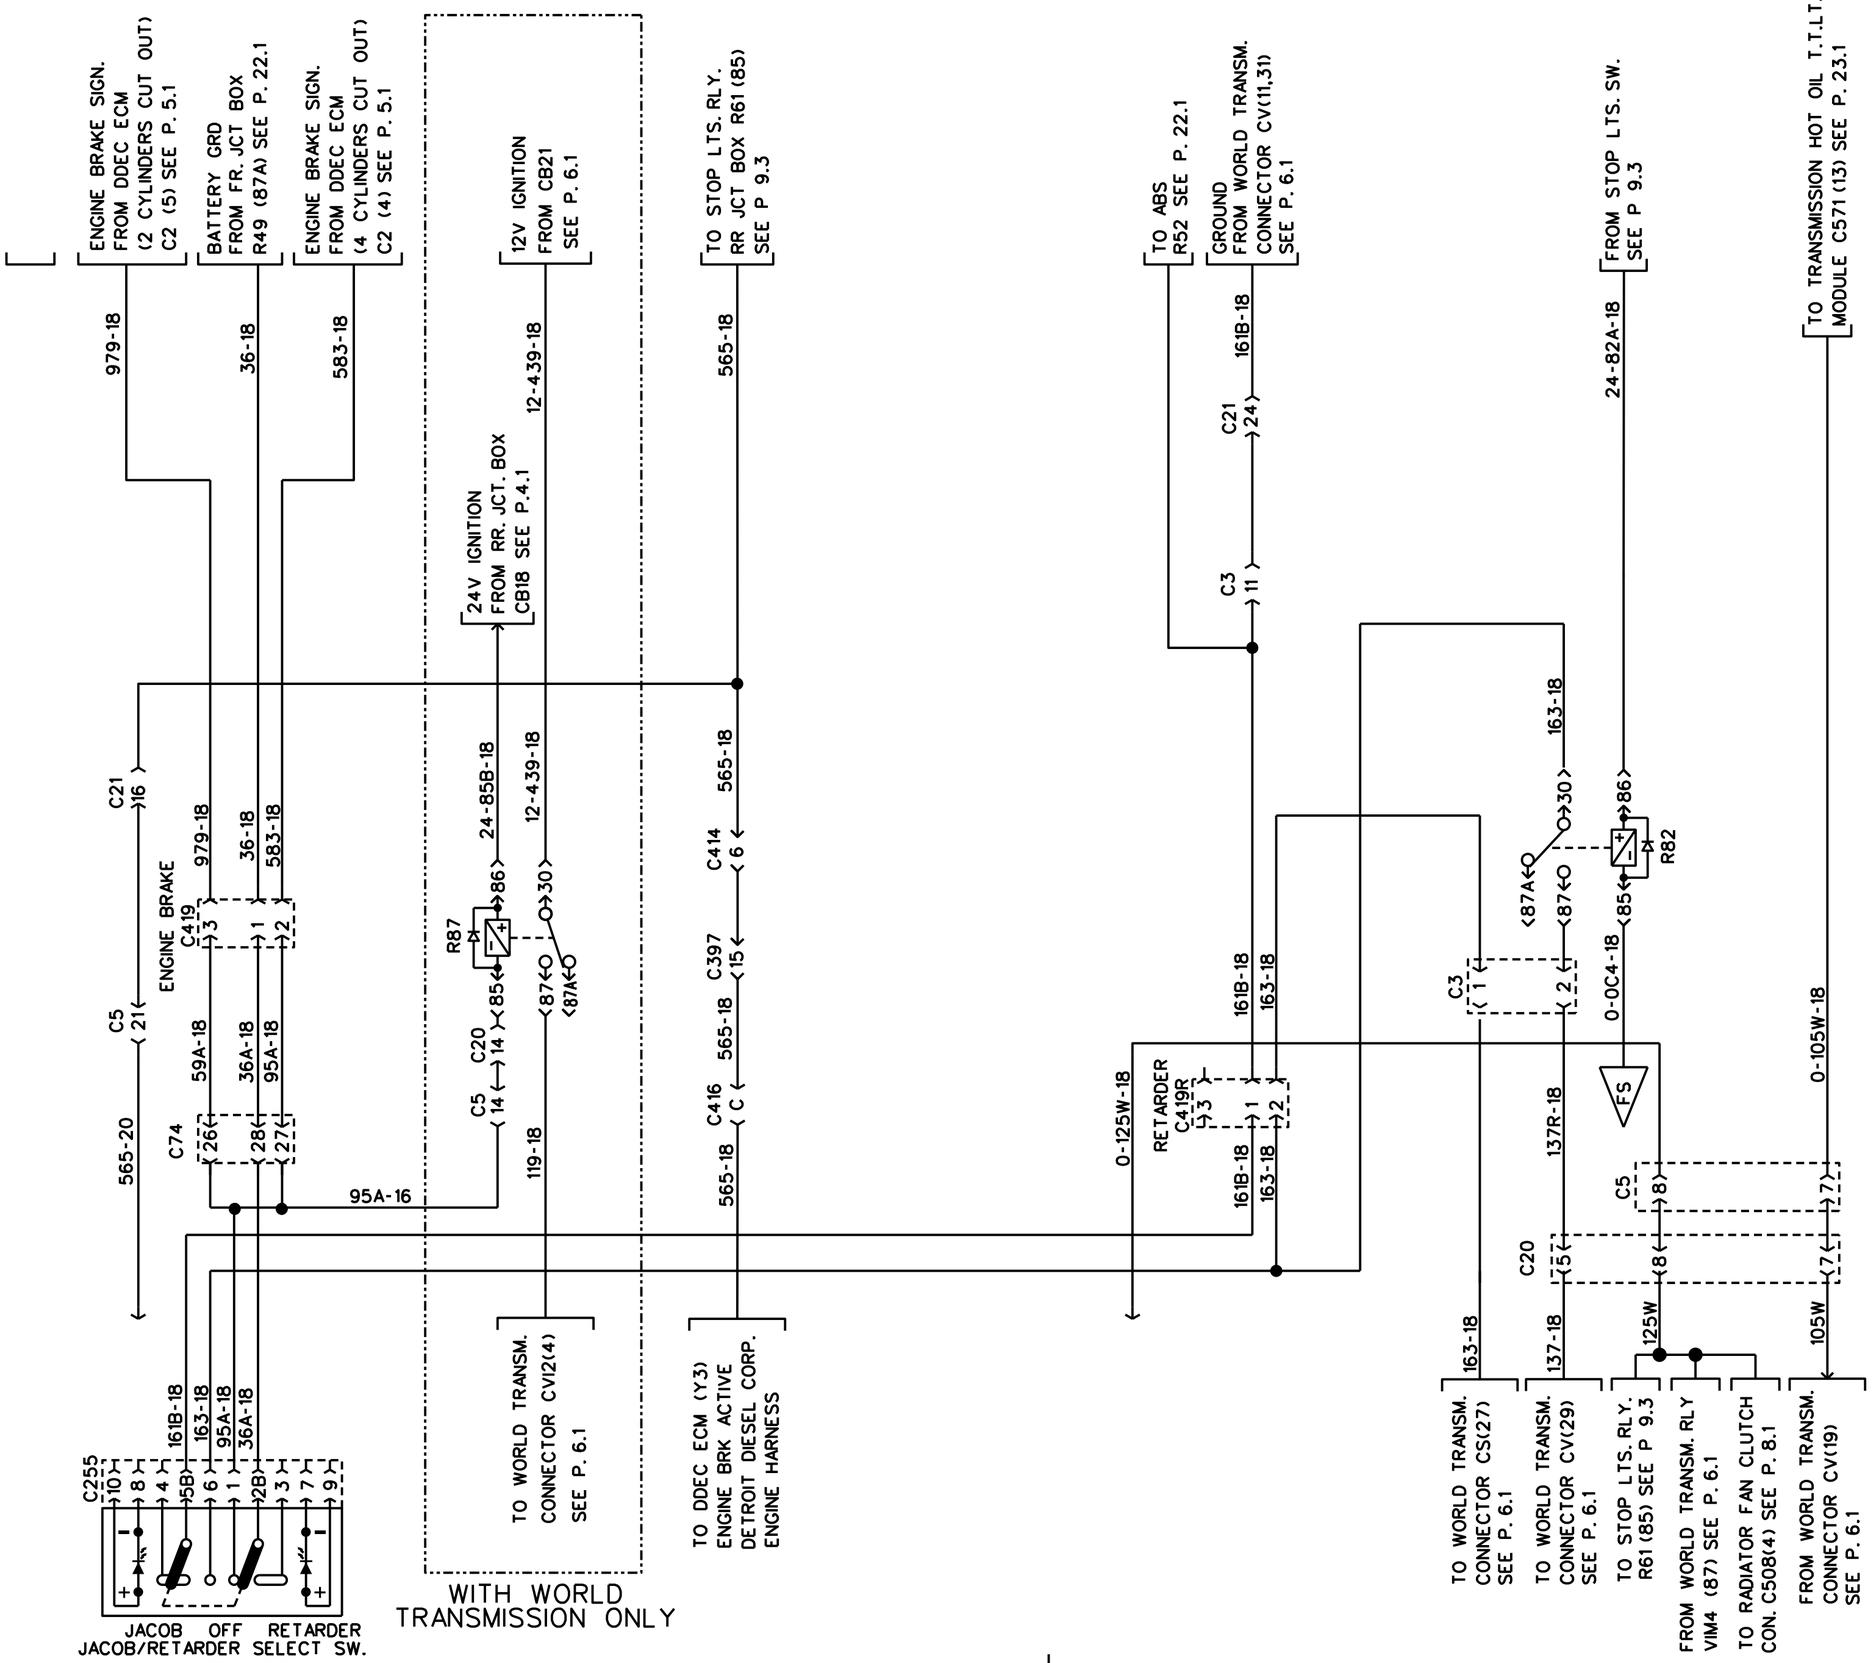
ENGINE BRAKE SIGN. FROM DDEC ECM (2 CYLINDERS CUT OUT) C2 (5) SEE P. 5.1
BATTERY GRD FROM FR. JCT BOX R49 (87A) SEE P. 22.1
ENGINE BRAKE SIGN. FROM DDEC ECM (4 CYLINDERS CUT OUT) C2 (4) SEE P. 5.1
24V IGNITION FROM RR. JCT. BOX CB18 SEE P.4.1
12V IGNITION FROM CB21 SEE P. 6.1
TO STOP LTS. RLY. RR JCT BOX R61 (85) SEE P 9.3
979-18
36-18
583-18
24-85B-18
12-439-18
565-18
C21
16
ENGINE BRAKE
C419
3
1
2
C5
21
565-20
59A-18
36A-18
95A-18
C74
26
28
27
95A-16
R87
86
30
87
87A
85
C20
14
119-18
C397
15
C416
C
565-18
C414
6
TO WORLD TRANSM. CONNECTOR CV12(4) SEE P. 6.1
TO DDEC ECM (Y3) ENGINE BRK ACTIVE DETROIT DIESEL CORP. ENGINE HARNESS
C255
10
8
4
5B
6
1
2B
3
7
9
161B-18
163-18
95A-18
36A-18
JACOB OFF RETARDER
JACOB/RETARDER SELECT SW.
WITH WORLD TRANSMISSION ONLY
ENGINE BRAKE SYSTEM
TO ABS R52 SEE P. 22.1
GROUND FROM WORLD TRANSM. CONNECTOR CV(11,31) SEE P. 6.1
C21
24
161B-18
C3
11
0-125W-18
RETARDER
C419R
3
1
2
161B-18
163-18
24-82A-18
FROM STOP LTS. SW. SEE P 9.3
163-18
R82
0-0C4-18
FS
137R-18
C5
8
7
C20
5
8
7
0-105W-18
C3
1
2
163-18
137-18
125W
105W
TO WORLD TRANSM. CONNECTOR CS(27) SEE P. 6.1
TO WORLD TRANSM. CONNECTOR CV(29) SEE P. 6.1
TO STOP LTS. RLY. R61(85) SEE P 9.3
FROM WORLD TRANSM. RLY VIM4 (87) SEE P. 6.1
TO RADIATOR FAN CLUTCH CON. C508(4) SEE P. 8.1
FROM WORLD TRANSM. CONNECTOR CV(19) SEE P. 6.1
TO TRANSMISSION HOT OIL T.T.L.T. MODULE C571(13) SEE P. 23.1
RETARDER SYSTEM
(WORLD TRANSMISSION)

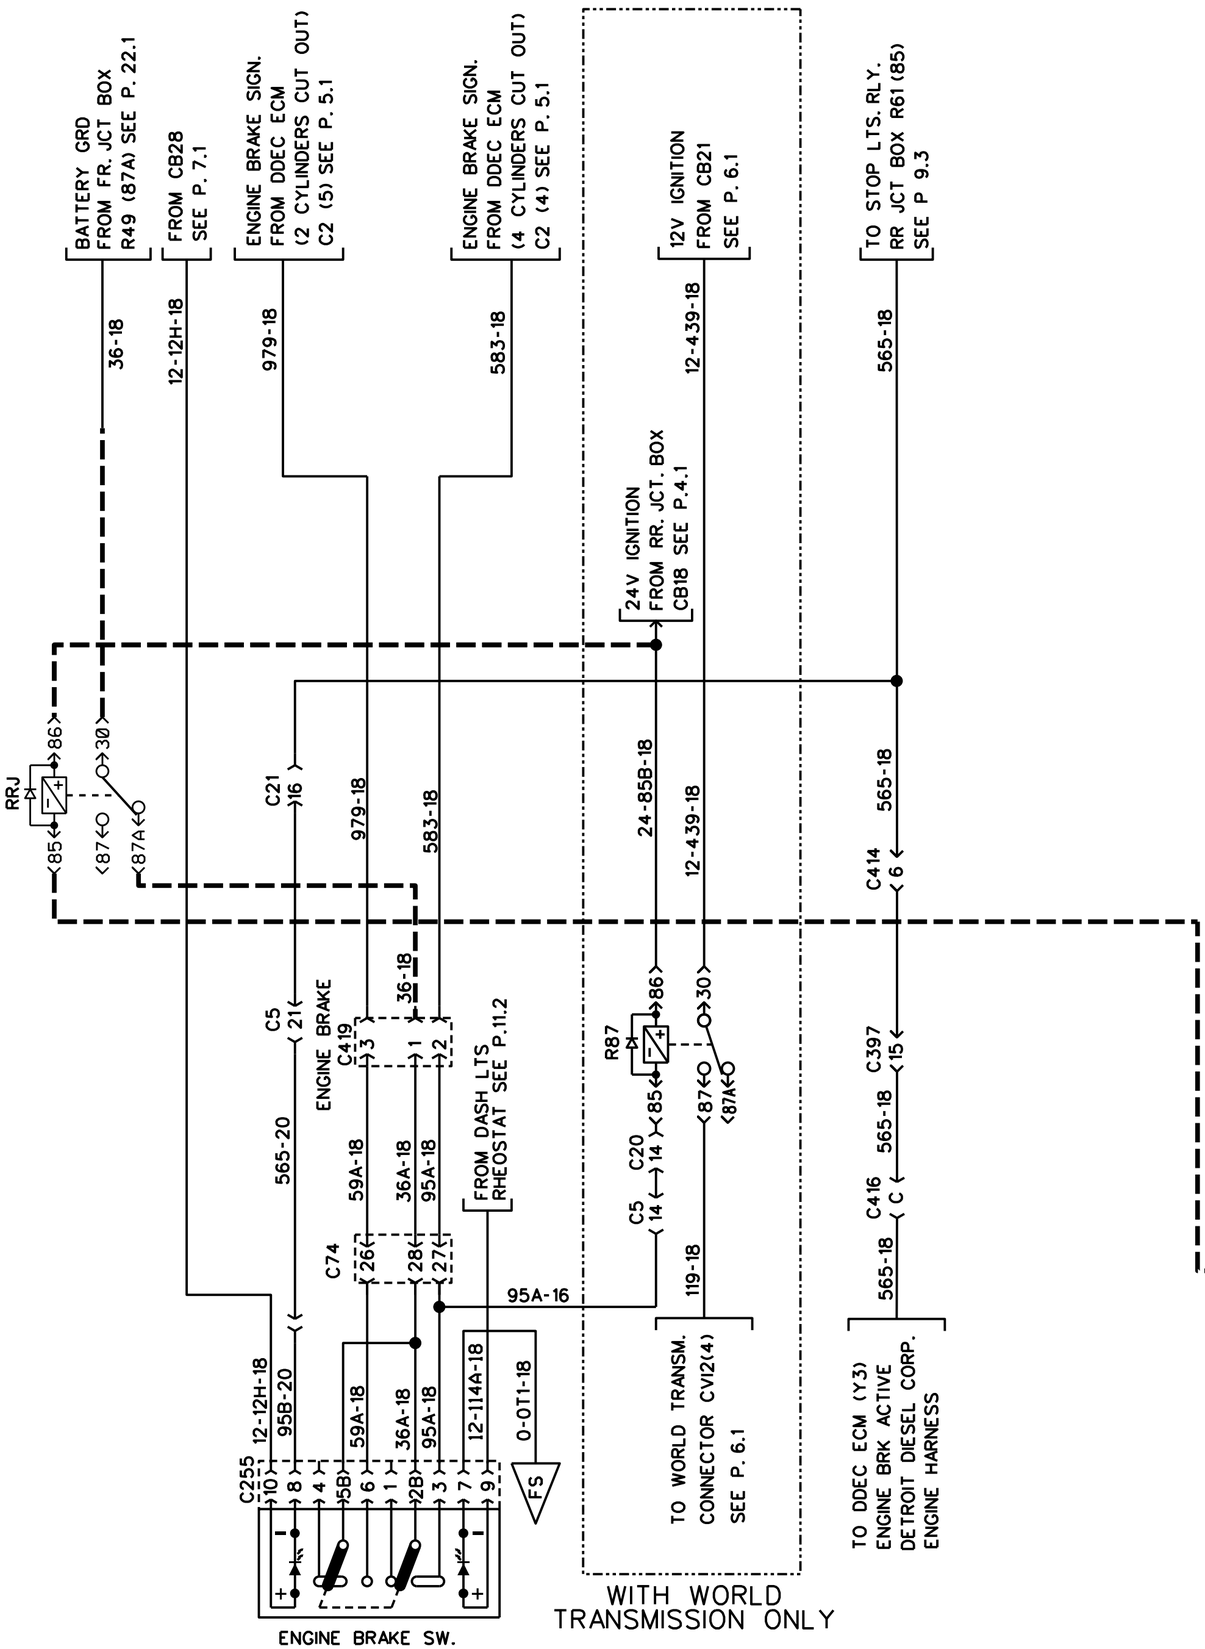
BATTERY GRD
FROM FR. JCT BOX
R49 (87A) SEE P. 22.1
36-18
FROM CB28
SEE P. 7.1
12-12H-18
ENGINE BRAKE SIGN.
FROM DDEC ECM
(2 CYLINDERS CUT OUT)
C2 (5) SEE P. 5.1
979-18
ENGINE BRAKE SIGN.
FROM DDEC ECM
(4 CYLINDERS CUT OUT)
C2 (4) SEE P. 5.1
583-18
12V IGNITION
FROM CB21
SEE P. 6.1
12-439-18
TO STOP LTS. RLY.
RR JCT BOX R61 (85)
SEE P 9.3
565-18
24V IGNITION
FROM RR. JCT. BOX
CB18 SEE P.4.1
24-85B-18
RRJ
85
87
87A
86
30
C21
16
C414
6
C5
21
565-20
ENGINE BRAKE
C419
3
1
2
36-18
59A-18
36A-18
95A-18
C74
26
28
27
FROM DASH LTS
RHEOSTAT SEE P.11.2
95A-16
C5
14
C20
14
R87
119-18
TO WORLD TRANSM.
CONNECTOR CVI2(4)
SEE P. 6.1
C416
C
565-18
C397
15
TO DDEC ECM (Y3)
ENGINE BRK ACTIVE
DETROIT DIESEL CORP.
ENGINE HARNESS
C255
10
8
4
5B
6
1
2B
3
7
9
12-12H-18
95B-20
12-114A-18
0-0T1-18
FS
ENGINE BRAKE SW.
WITH WORLD
TRANSMISSION ONLY
ENGINE BRAKE SYSTEM
FROM CB28
SEE P. 7.1
TO ABS
R52 SEE P. 22.1
GROUND
FROM WORLD TRANSM.
CONNECTOR CV(11,31)
SEE P. 6.1
161B-18
C21
24
C3
11
12-114A-18
FROM DASH LTS RHEOSTAT SEE P 11.2
FROM STOP LTS. SW.
SEE P 9.3
24-82A-18
R82
0-163-18
163-18
0-0C4-18
0-125W-18
RETARDER C419
1
2
3
0-161B-18
0-163-18
12-114A-18
C3
1
2
C20
5
137R-18
137-18
C5
8
7
125W
105W
0-105W-18
163-18
TO WORLD TRANSM.
CONNECTOR CS(27)
SEE P. 6.1
TO WORLD TRANSM.
CONNECTOR CV(29)
SEE P. 6.1
TO STOP LTS. RLY.
R61 (85) SEE P 9.3
FROM WORLD TRANSM. RLY
VIM4 (87) SEE P. 6.1
TO RADIATOR FAN CLUTCH
CON. C508(4) SEE P. 8.1
FROM WORLD TRANSM.
CONNECTOR CV(19)
SEE P. 6.1
TO TRANSMISSION HOT OIL T.T.L.T.
MODULE C571(13) SEE P. 23.1
RETARDER SW.
RETARDER SYSTEM
(WORLD TRANSMISSION)

PREVOST

WIRING DIAGRAM

E.C.U. - ABS (VERSION "D")

TO ENGINE BRAKE SW. SEE PAGE 21.1

36-18

87A / 87 / 30

154-18 C3 10 → C21 23 154-18 TO WORLD TRANSMISSION CV (27) SEE P. 6.1

0-953-18 BATTERY GROUND FROM FR. JCT BOX SEE P. 5.1

C21 24 161B-18 GND FROM WORLD TRANS. CONN. CV (11,31) SEE P. 6.1

CX1

17 157B-18 C92 1 — 85 / 86 R49 (ENGINE BRK)

8 24-156A-14 C92 2 — 24-156A-14 CB106 10A

12 0-0G-14

11 0-0Y1-14 — R52 (RETARDER) 85 / 86

10 0-0Y2-14 — 87 / 30 C3 11

7 24-85X-18 C92 5 — 24-85X-18 CB105 6A 24-24I-14 24V IGNITION FROM FR JCT BOX SEE P. 1.1

18 0-85Y-18 C92 6 — C74 22 0-85Y-18 TO ABS T.T.LT. MODULE C572 (6) SEE P. 23.1

0-7Y-16

9 24-157A-14 C92 7 — 24-157-16 CB107 10A 24-24B-14

24V POWER FROM FR JCT BOX SEE P. 1.1

ABS TTLT CPT

BLINK SW.

TWISTED 30/METER

13 901-18 C406 B 901-18

14 900-18 C406 A 900-18 J1587 DATA LINK SIGNAL FROM DDEC ECM SEE P. 5.1

CX2

TWISTED 30/METER

4 138-18 C96 3 BRN C163 SENSOR

5 138A-18 C96 2 BLK C163 SENSOR

C162

1 24-139-16 C96 1 BLU C162 2 OUTLET VALVE

2 24-140-16 C96 7 BRN C162 3 INLET VALVE

3 0-0Y3-16 C96 8 GRN/YEL C162 1 OUTLET VALVE

0-0Y4-16 C96 4 GRN/YEL C162 1 OUTLET VALVE

FRONT AXLE

LH WHEEL "L2"

RH WHEEL "L1"

CX3

7 24-141-16 C96 6 BLU C162 2 OUTLET VALVE

8 24-142-16 C96 5 BRN C162 3 INLET VALVE

C161

9 0-0Y4-16

TWISTED 30/METER

5 143A-18 C96 10 BLK C160 SENSOR

4 143-18 C96 11 BRN C160 SENSOR

CX4

7 151-16 151-16 C97 B C168 A

4 152-16 152-16 C97 A C168 B

TWISTED 30/METER

5 144-18 C69 F C164 2 SENSOR

6 144A-18 C69 E C164 1 SENSOR

C165

1 24-145-16 C69 D BLU C165 2 OUTLET VALVE

2 24-146-16 C69 C BRN C165 3 INLET VALVE

3 0-0Y5-16 C97 F GRN/YEL C165 1 OUTLET VALVE

12 0-0Y6-16 C97 C GRN/YEL C166 1 OUTLET VALVE

C166

10 24-147-16 C69 B BLU C166 2 OUTLET VALVE

11 24-148-16 C69 A BRN C166 3 INLET VALVE

LH WHEEL "A1"

RH WHEEL "A2"

DRIVE AXLE

TWISTED 30/METER

9 149A-18 C97 E C167 1 SENSOR

8 149-18 C97 D C167 2 SENSOR

NO: D060912

PAGE: 22.1

REVISION 00

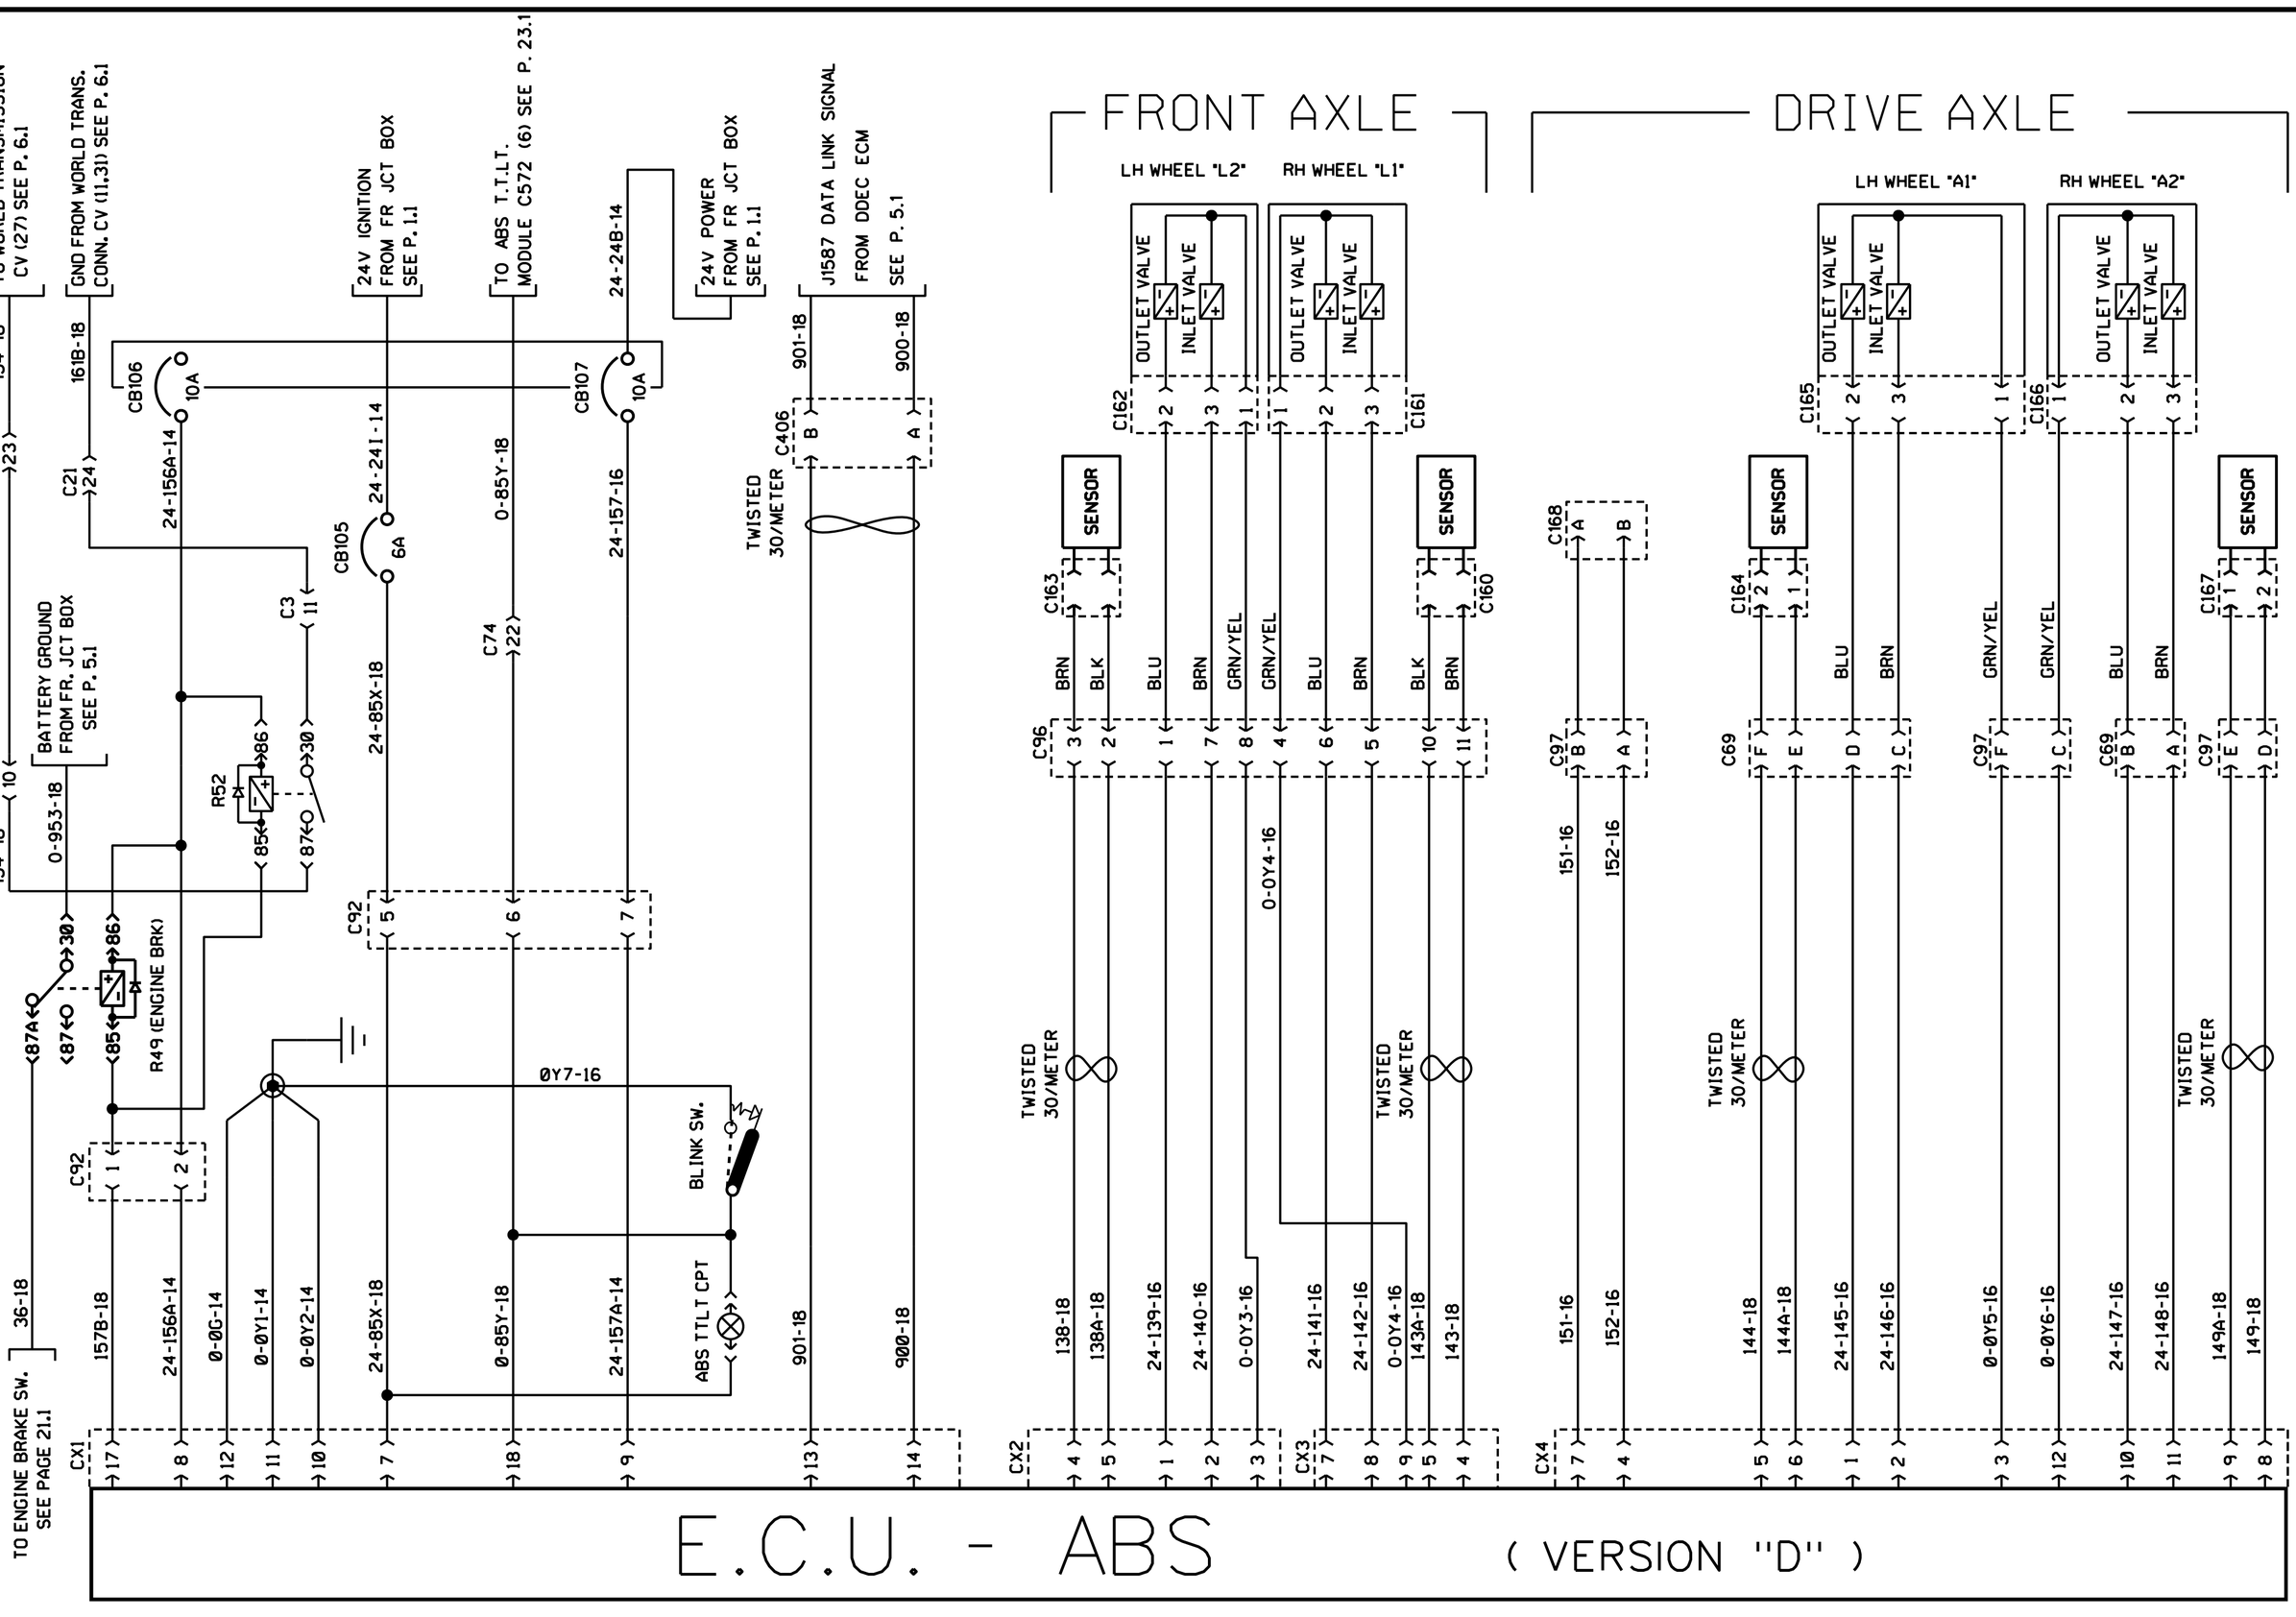

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 22.1	REVISION 04

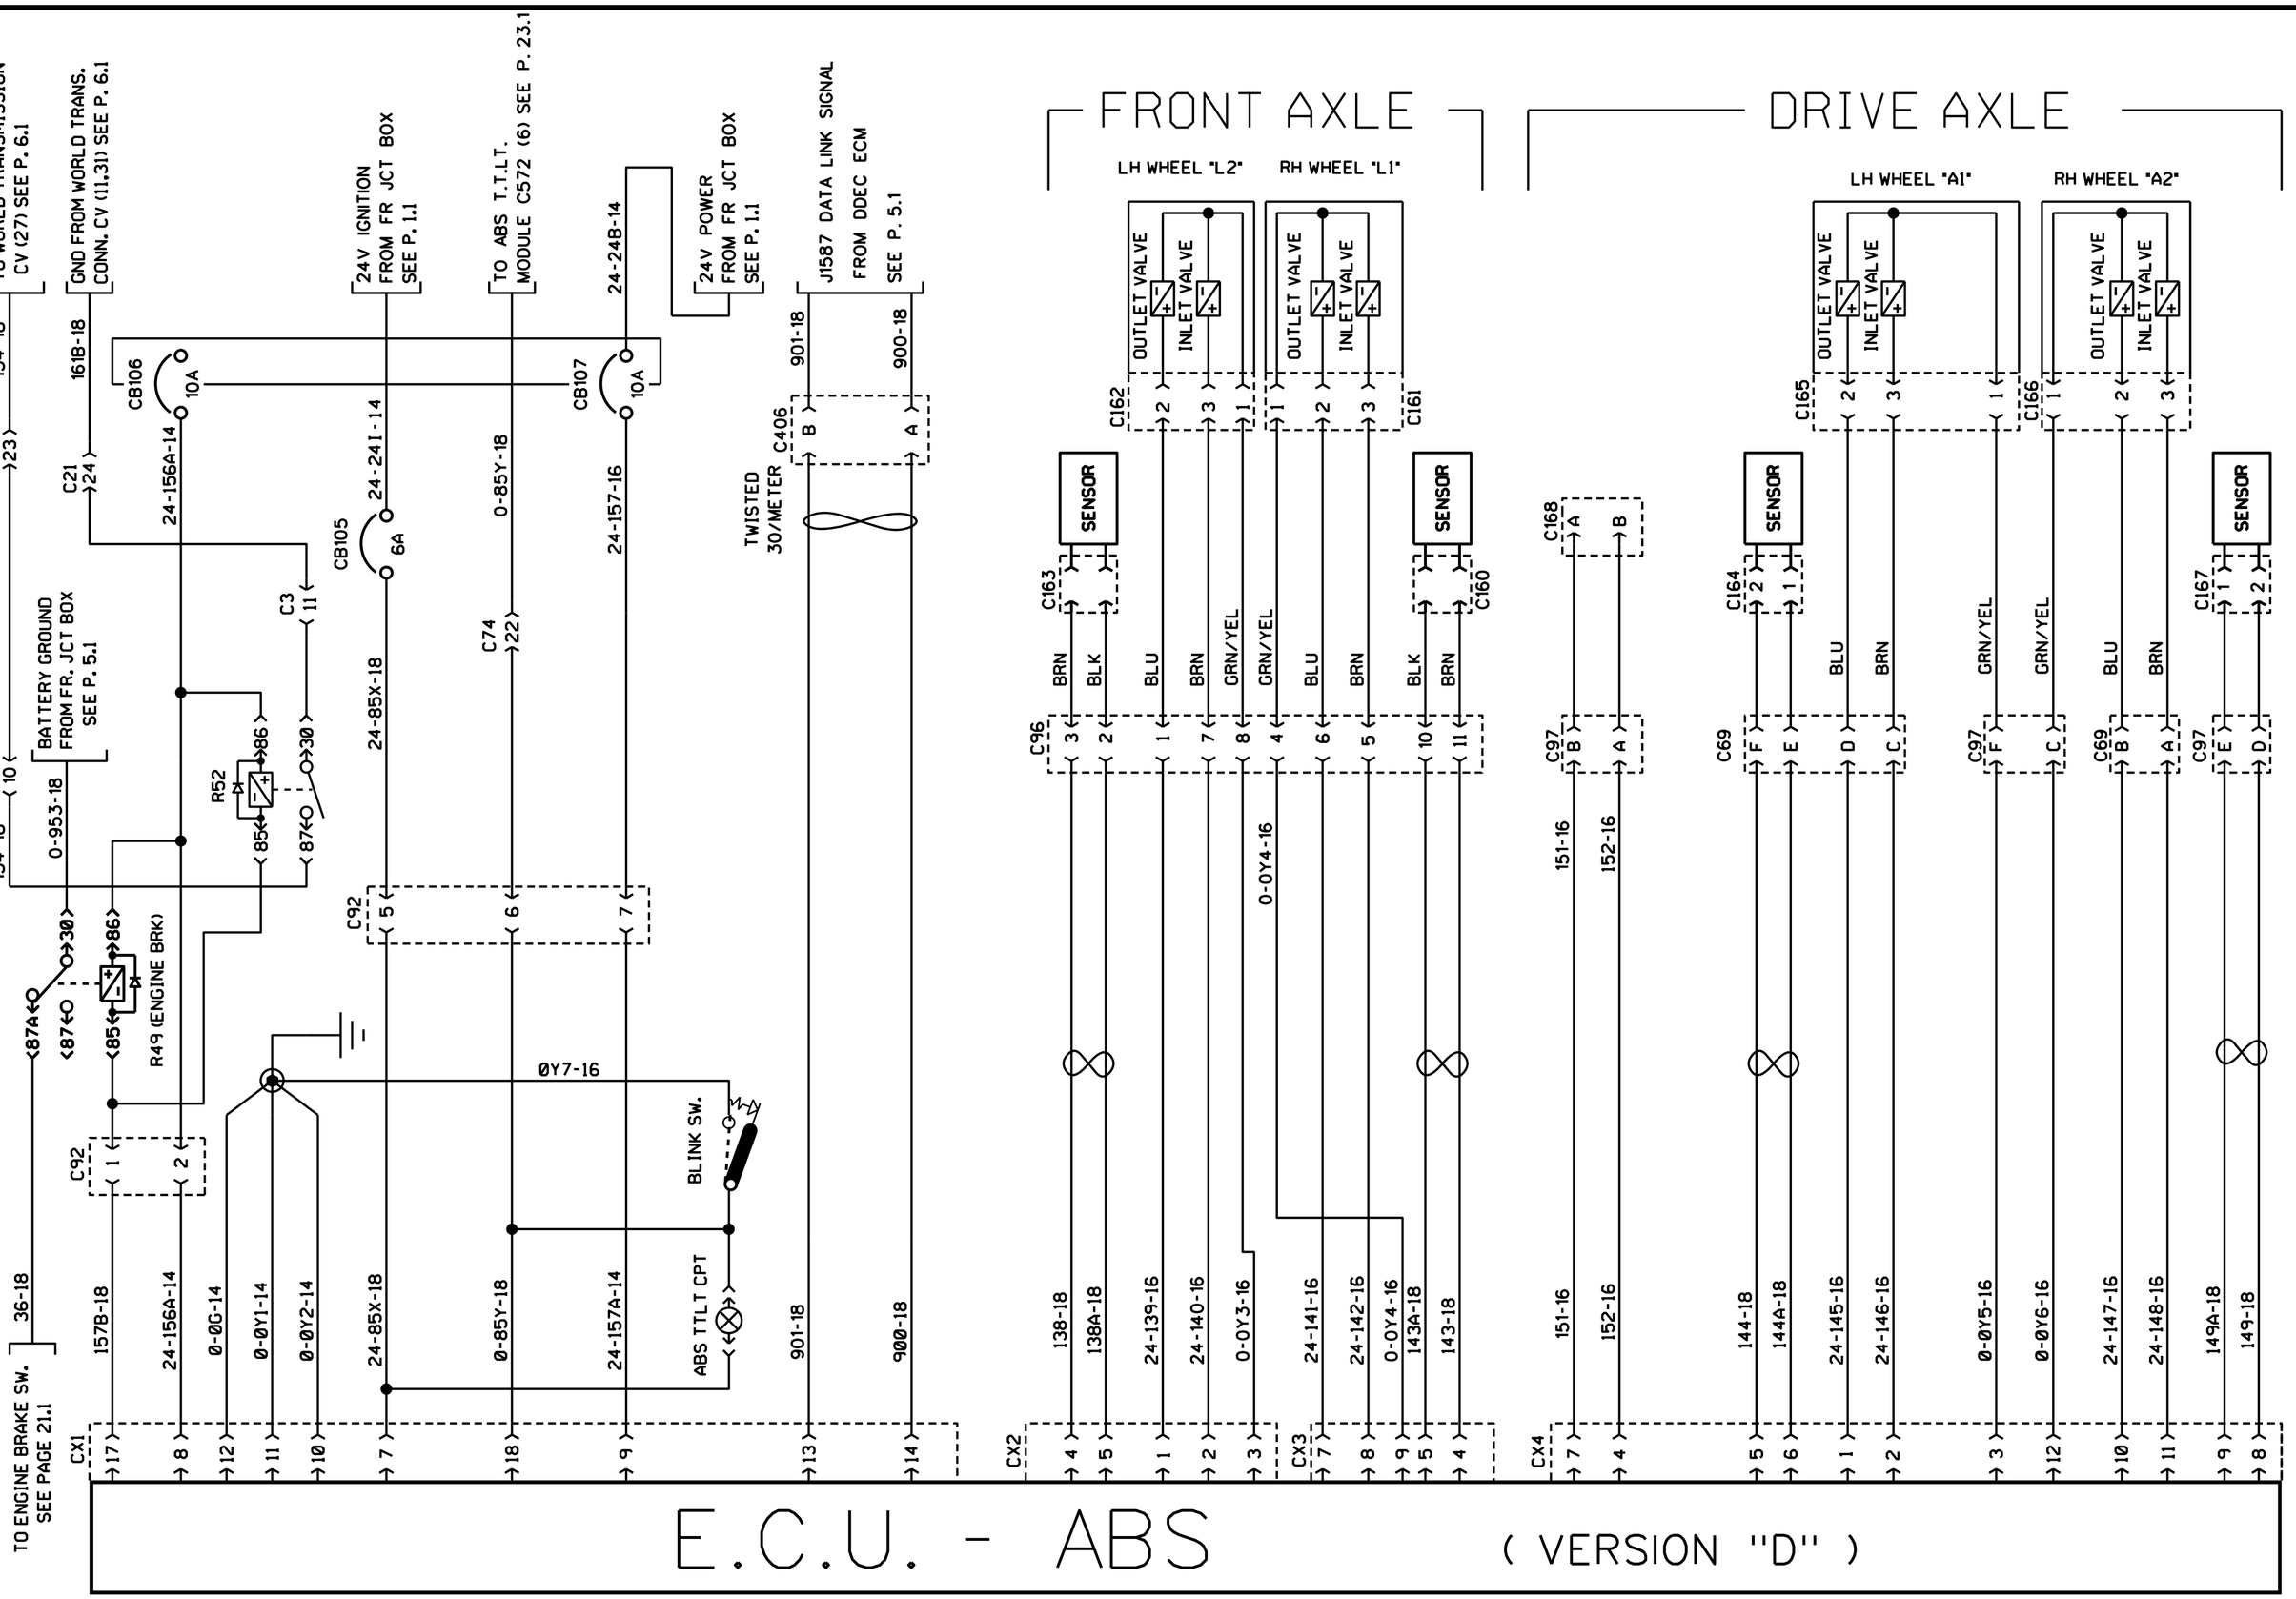

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 22.1	REVISION 13

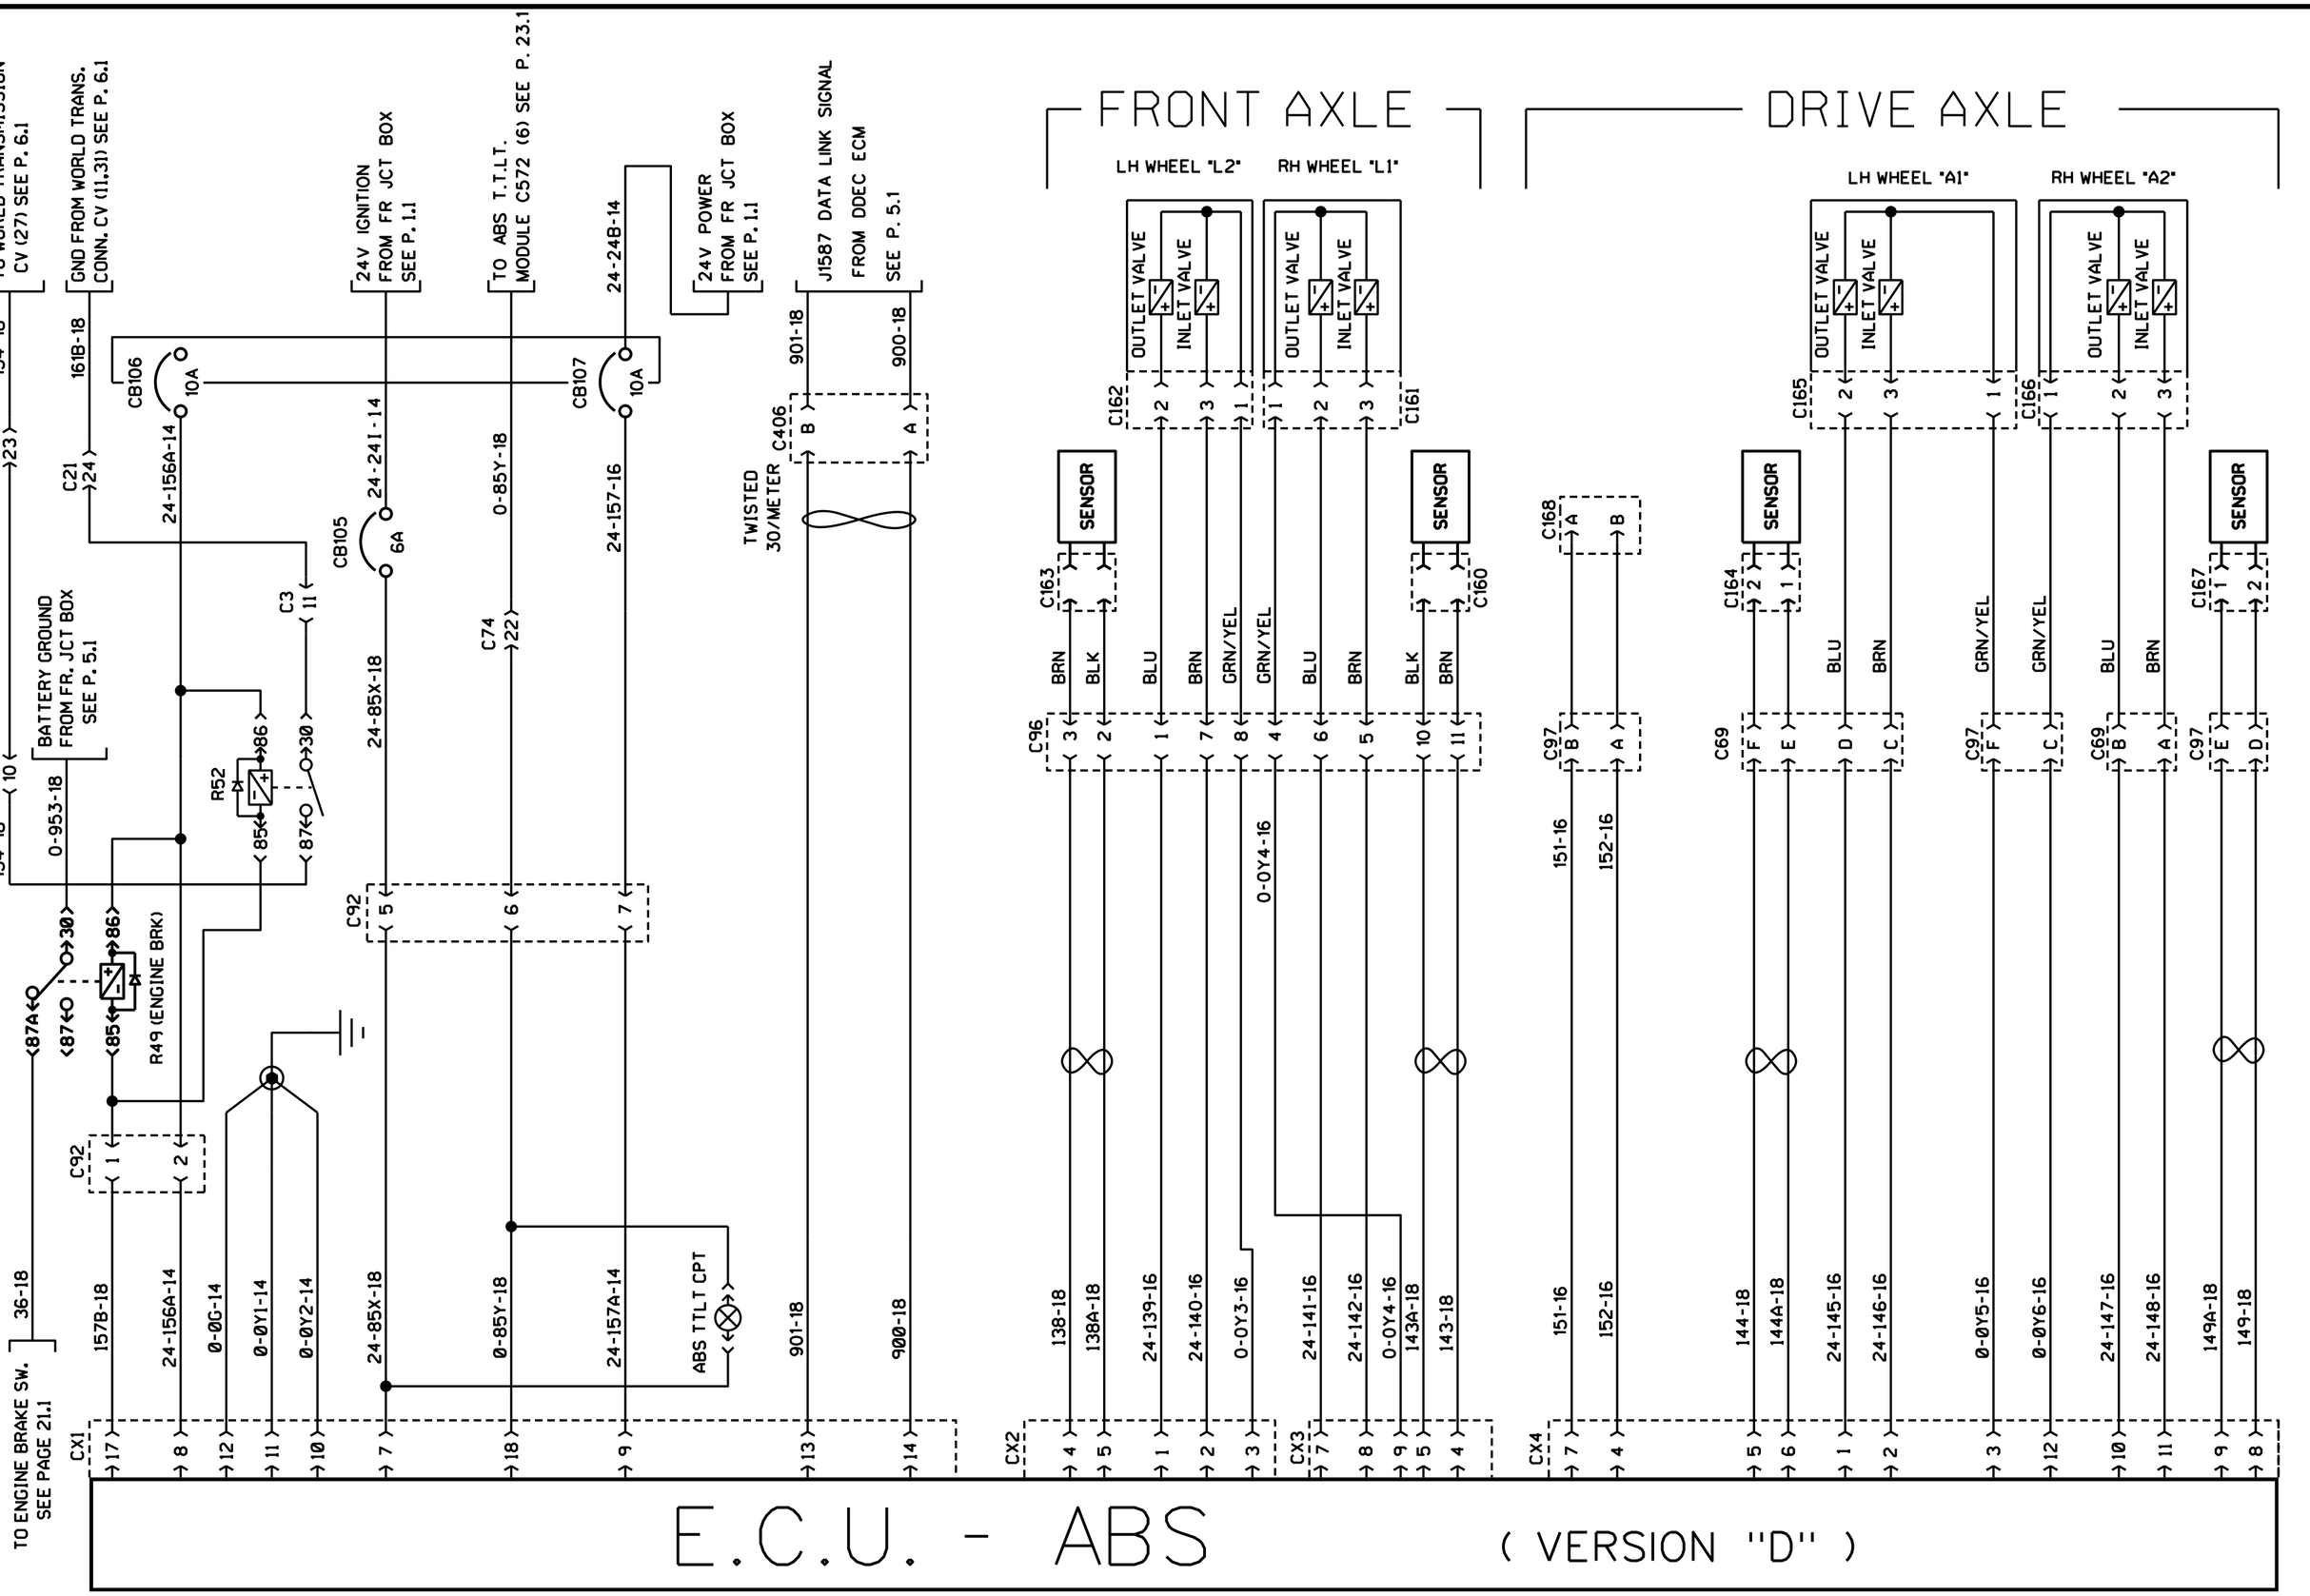

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 22.1	REVISION 17

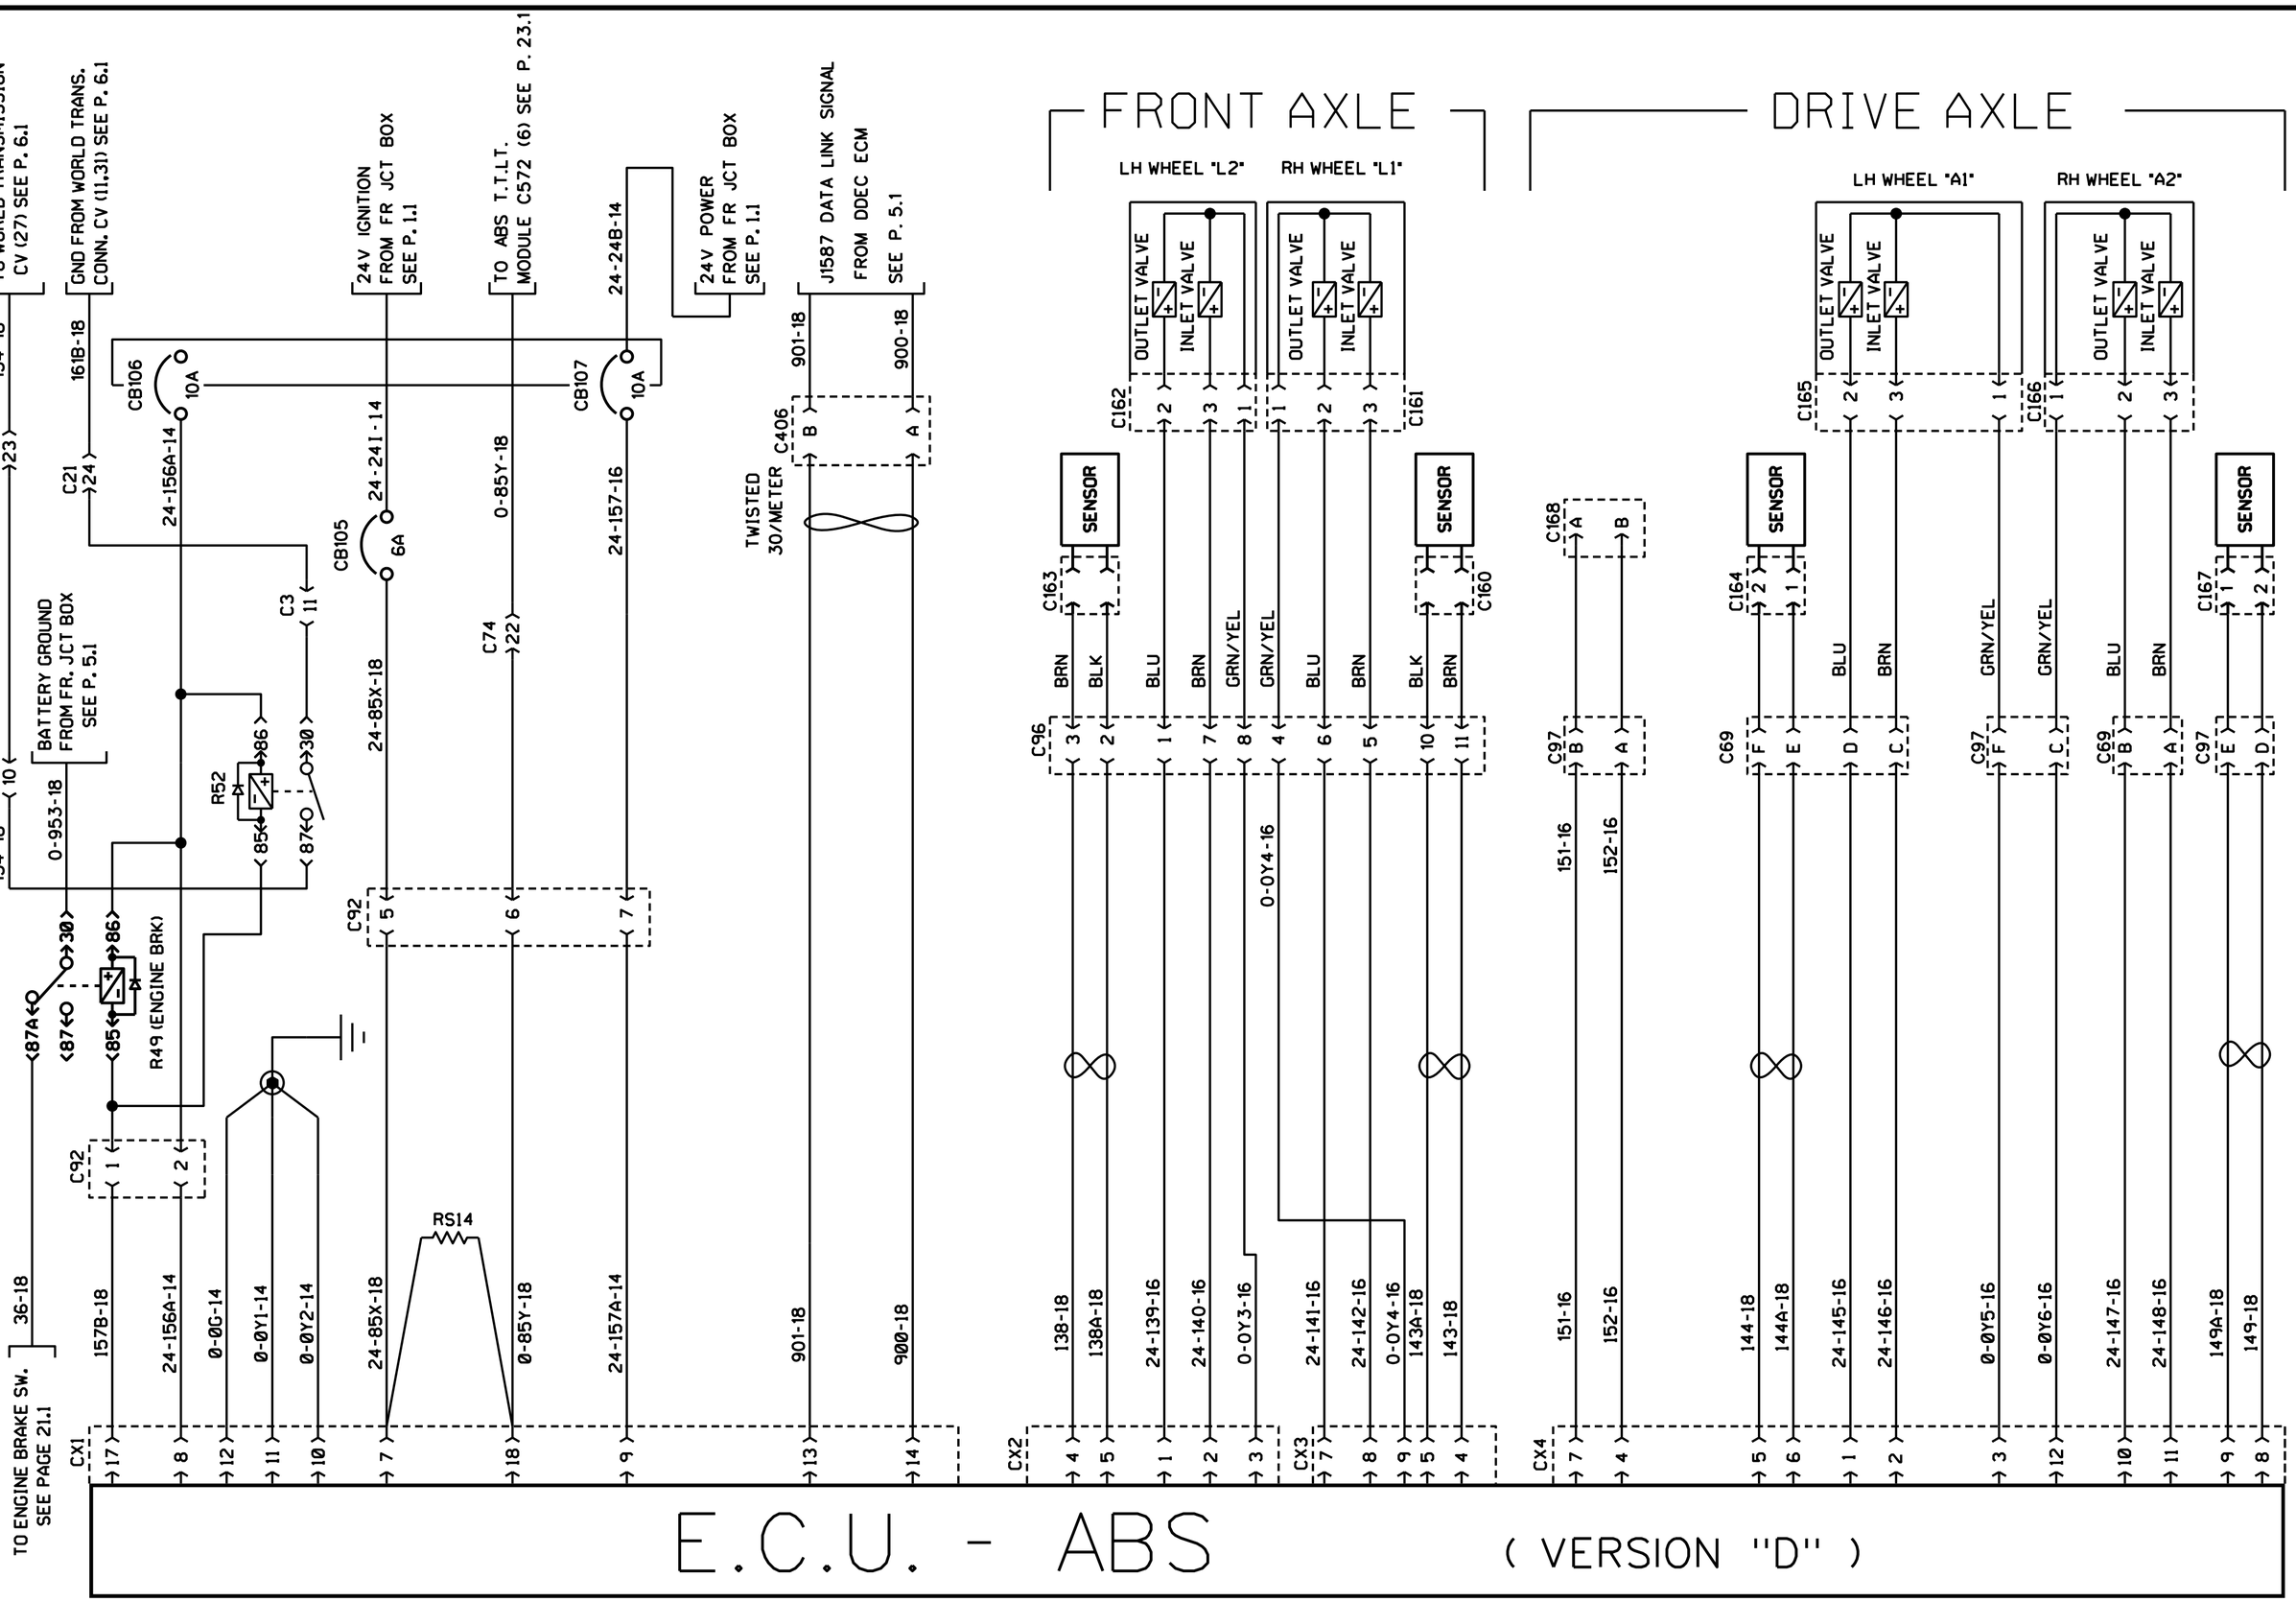

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 22.1	REVISION 19

PREVOST

WIRING DIAGRAM

E.C.U. - ABS

FROM ENGINE BRAKE SW.
SEE PAGE 21.1

36-18

CX1

C92

0-157B-18

12-156A-14

R49 (ENGINE BRK)

87A 87 30 85 86

0-953-18

BATTERY GROUND
TO FR. JCT BOX
SEE P. 5.1

0-154-18

FROM WORLD TRANSMISSION
CV (27) SEE P. 6.1

0-161B-18

GND FROM WORLD TRANS.
CONN. CV (11,31) SEE P. 6.1

CB106

12-156A-14 15A 12-12M-14

12V POWER
FROM FR JCT BOX
SEE P. 2.1

R52

0-0Y1-14

0-0Y2-14

CB105

12-85X-18 6A 12-12IE-16

12V IGNITION
FROM FR JCT BOX
SEE P. 2.1

RS38

RS39

0-85Y-18

0-85Z-18

C74

0-85Y-18

FROM ABS T.T. LT.
MODULE C572 (6) SEE P. 23.1

0-85Z-18

FROM TRAILER ABS T.T. LT.
MODULE C571 (10) SEE P. 23.1

TWISTED
30/METER

901-18

900-18

J1587 DATA LINK SIGNAL
FROM DDEC ECM
C249 SEE P. 5.1

CX2

C96

C163

SENSOR

138-18

138A-18

BRN

BLK

C162

OUTLET VALVE

INLET VALVE

12-139-16

12-140-16

0-0Y3-16

0-0Y4-16

GRN/YEL

12-141-16

12-142-16

BLU

BRN

C161

143A-18

143-18

C160

C97

C168

151-16

152-16

C69

C164

144-18

144A-18

C165

12-145-16

12-146-16

0-0Y5-16

0-0Y6-16

C166

12-147-16

12-148-16

149A-18

149-18

C167

FRONT AXLE

LH WHEEL "L2"

RH WHEEL "L1"

DRIVE AXLE

LH WHEEL "A1"

RH WHEEL "A2"

NO: D060912

PAGE: 22.1

REVISION 22

E.C.U. - ABS

FROM ENGINE BRAKE SW. SEE PAGE 21.1 — 36-18

CX1

C92

87A, 87, 30, 85, 86

R49 (ENGINE BRK)

0-953-18 — BATTERY GROUND TO FR. JCT BOX SEE P. 5.1

C3 10 — C21 23 — 0-154-18 — FROM WORLD TRANSMISSION CV (27) SEE P. 6.1

C21 24 — 0-161B-18 — GND FROM WORLD TRANS. CONN. CV (11,31) SEE P. 6.1

14 — 0-157B-18

8 — 12-156A-14

CB106 — 15A — 12-156A-14 — 12-12M-14 — 12V POWER FROM FR JCT BOX SEE P. 2.1

R52

9 — 0-0Y1-14

4 — 0-0Y2-14

C3 11

7 — 12-85X-18

CB105 — 6A — 12-85X-18 — 12-121E-16 — 12V IGNITION FROM FR JCT BOX SEE P. 2.1

RS38

RS39

15 — 0-85Y-18 — C74 22 — 0-85Y-18 — FROM ABS T.T. LT. MODULE C572 (6) SEE P. 23.1

2 — 0-85Z-18 — C74 14 — 0-85Z-18 — FROM TRAILER ABS T.T. LT. MODULE C571 (10) SEE P. 23.1

TWISTED 30/METER

10 — 901-18 — 901-18 — J1587 DATA LINK SIGNAL FROM DDEC ECM C249 SEE P. 5.1

11 — 900-18 — 900-18

CX2

C96

C163 — SENSOR

12 — 138-18 — 3 BRN

15 — 138A-18 — 2 BLK

C162

6 — 12-139-16 — 1 BLU — 1 OUTLET VALVE

3 — 12-140-16 — 7 BRN — 3 INLET VALVE

0-0Y3-16 — 8 GRN/YEL — 2

0-0Y4-16 — 4 GRN/YEL — 2 OUTLET VALVE

4 — 12-141-16 — 6 BLU — 1 INLET VALVE

1 — 12-142-16 — 5 BRN — 3

C161

10 — 143A-18 — 10 BLK

13 — 143-18 — 11 BRN

SENSOR — C160

7 — 151-16 — 151-16 — C97 B — C168 A

16 — 152-16 — 152-16 — A — B

C69 — C164 — SENSOR

11 — 144-18 — F — 2

14 — 144A-18 — E — 1

C165

5 — 12-145-16 — D — BLU — 1 OUTLET VALVE

2 — 12-146-16 — C — BRN — 3 INLET VALVE

C97

0-0Y5-16 — F — GRN/YEL — 2

0-0Y6-16 — C — GRN/YEL

C166

9 — 12-147-16 — C69 B — BLU — 1 OUTLET VALVE

8 — 12-148-16 — A — BRN — 3 INLET VALVE

17 — 149A-18 — C97 E — C167 1

18 — 149-18 — D — 2

SENSOR

FRONT AXLE

LH WHEEL "L2" RH WHEEL "L1"

DRIVE AXLE

LH WHEEL "A1" RH WHEEL "A2"

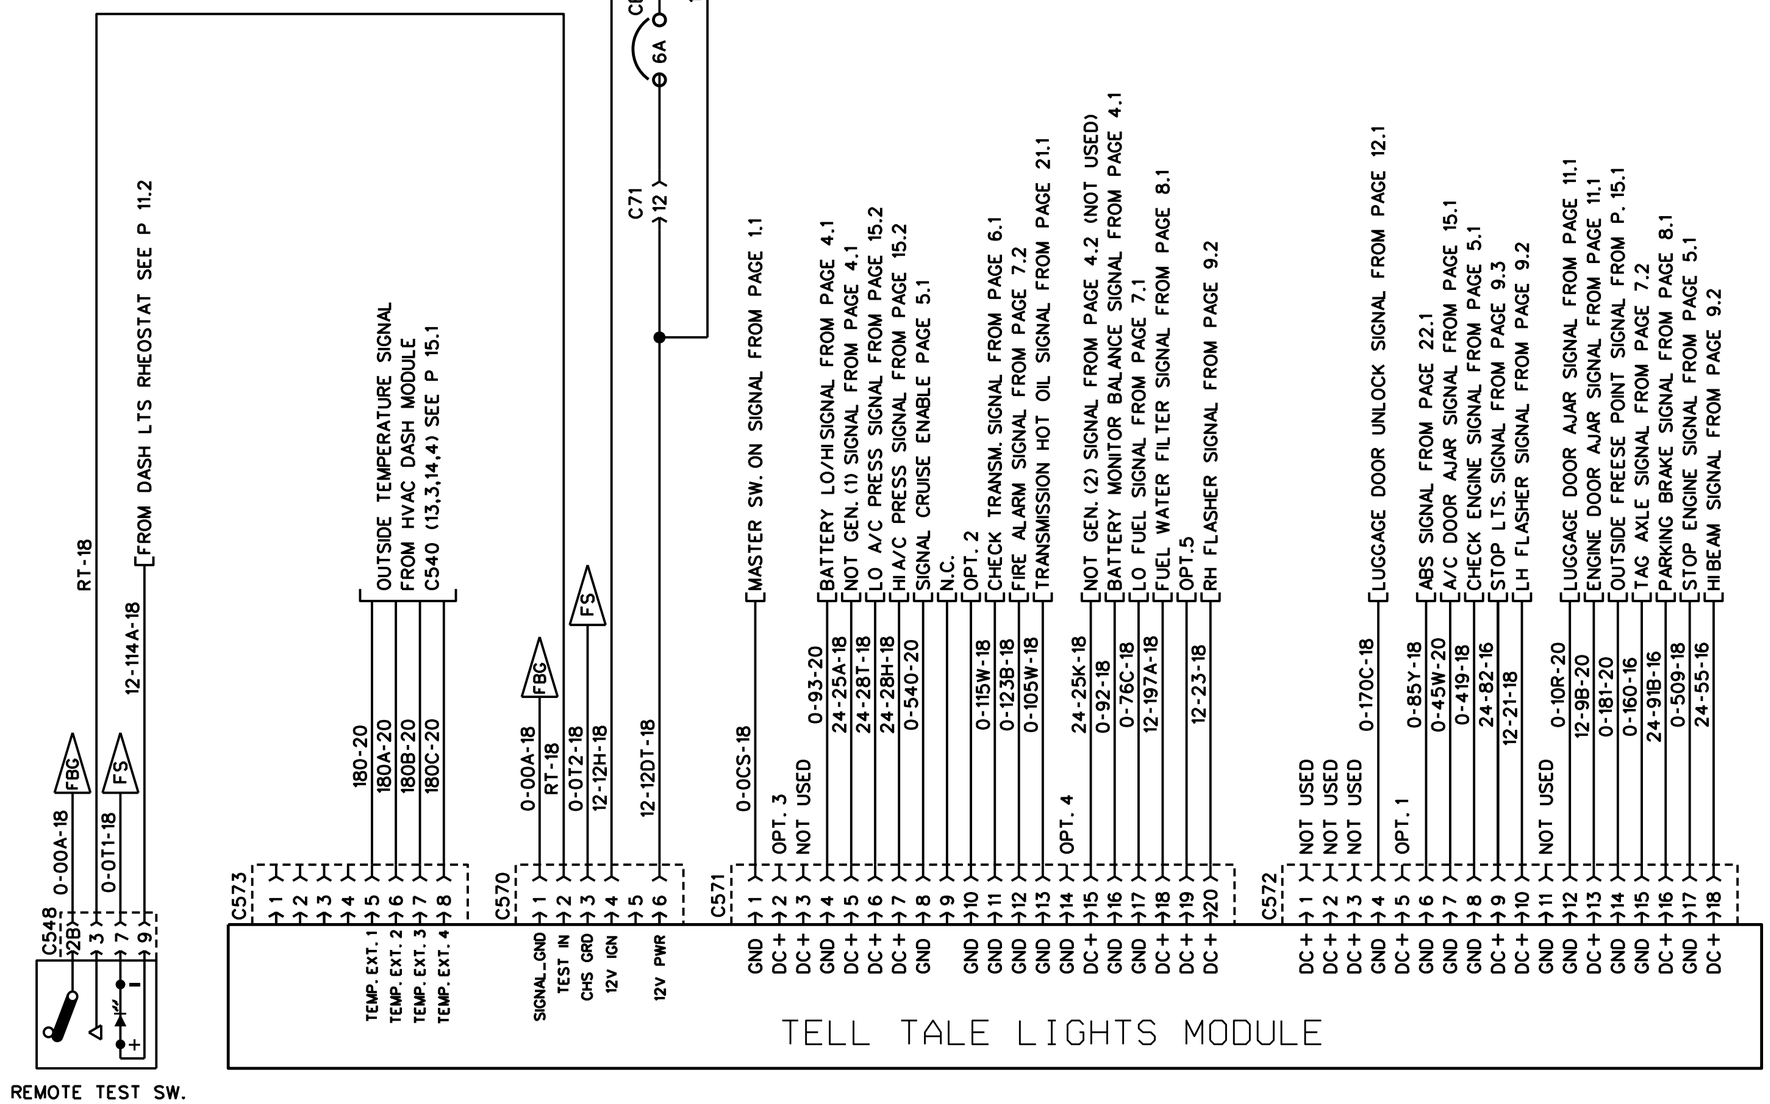

TELL TALE LIGHT MODULES

TELL TALE LIGHT MODULES

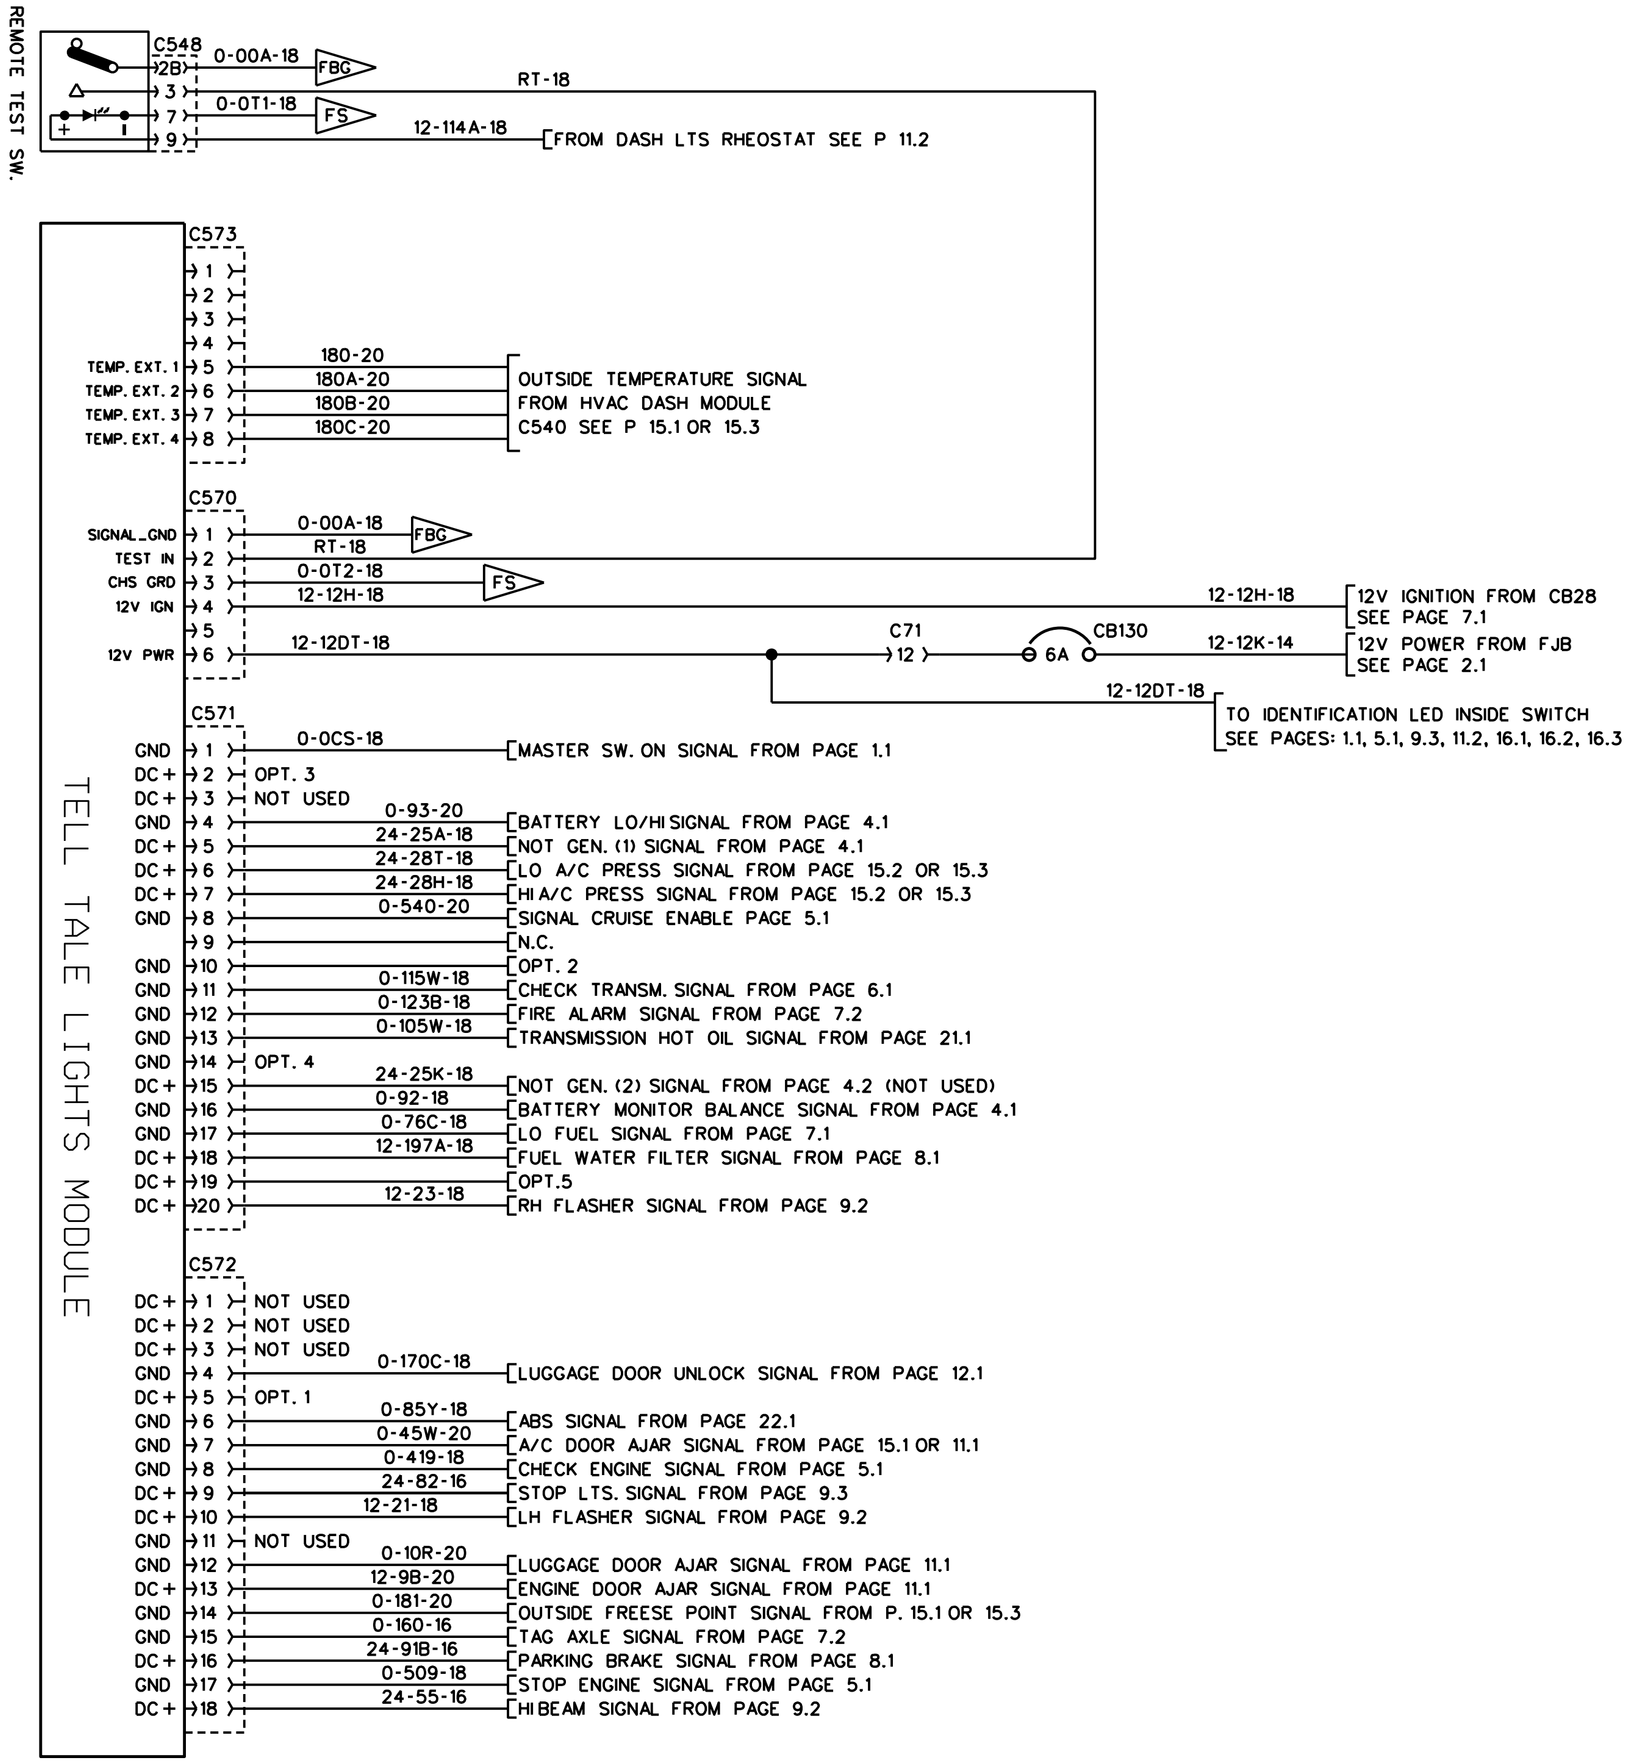

PREVOST | WIRING DIAGRAM | NO: D060912 | PAGE: 23.1 | REVISION 09

TELL TALE LIGHT MODULES

TELL TALE LIGHTS MODULE

REMOTE TEST SW.

C548
2B → 0-00A-18 → FBG
3 → RT-18
7 → 0-0T1-18 → FS
9 → 12-114A-18 → FROM DASH LTS RHEOSTAT SEE P 11.2

C573
TEMP. EXT. 1 → 5 → 180-20
TEMP. EXT. 2 → 6 → 180A-20
TEMP. EXT. 3 → 7 → 180B-20
TEMP. EXT. 4 → 8 → 180C-20
→ OUTSIDE TEMPERATURE SIGNAL FROM HVAC DASH MODULE C540 SEE P 15.1 OR 15.4

C570
SIGNAL_GND → 1 → 0-00A-18 → FBG
TEST IN → 2 → RT-18
CHS GRD → 3 → 0-0T2-18 → FS
12V IGN → 4 → 12-12H-18 → 12V IGNITION FROM CB28 SEE PAGE 7.1
5
12V PWR → 6 → 12-12DT-18 → C71 12 → CB130 6A → 12-12K-14 → 12V POWER FROM FJB SEE PAGE 2.1
12-12DT-18 → TO IDENTIFICATION LED INSIDE SWITCH SEE PAGES: 1.1, 5.1, 9.3, 11.2, 16.1, 16.2, 16.3

C571
GND → 1 → 0-0CS-18 → MASTER SW. ON SIGNAL FROM PAGE 1.1
DC+ → 2 → 24-86T-18 → STARTER SIGNAL FROM P. 4.1 OR 4.2
DC+ → 3 → NOT USED
GND → 4 → 0-93-20 → BATTERY LO/HI SIGNAL FROM PAGE 4.1
DC+ → 5 → 24-25A-18 → NOT GEN. (1) SIGNAL FROM PAGE 4.1
DC+ → 6 → 24-28T-18 → LO A/C PRESS SIGNAL FROM PAGE 15.2 OR 15.4
DC+ → 7 → 24-28H-18 → HI A/C PRESS SIGNAL FROM PAGE 15.2 OR 15.4
GND → 8 → 0-540-20 → SIGNAL CRUISE ENABLE PAGE 5.1
9 → N.C.
GND → 10 → OPT. 2
GND → 11 → 0-115W-18 → CHECK TRANSM. SIGNAL FROM PAGE 6.1
GND → 12 → 0-123B-18 → FIRE ALARM SIGNAL FROM PAGE 7.2
GND → 13 → 0-105W-18 → TRANSMISSION HOT OIL SIGNAL FROM PAGE 21.1
GND → 14 → OPT. 4
DC+ → 15 → 24-25K-18 → NOT GEN. (2) SIGNAL FROM PAGE 4.2 (NOT USED)
GND → 16 → 0-92-18 → BATTERY MONITOR BALANCE SIGNAL FROM PAGE 4.1
GND → 17 → 0-76C-18 → LO FUEL SIGNAL FROM PAGE 7.1
DC+ → 18 → 12-197A-18 → FUEL WATER FILTER SIGNAL FROM PAGE 8.1
DC+ → 19 → 24-126F-18 → LEVEL-LO SIGNAL FROM P. 18.1
DC+ → 20 → 12-23-18 → RH FLASHER SIGNAL FROM PAGE 9.2

C572
DC+ → 1 → NOT USED
DC+ → 2 → NOT USED
DC+ → 3 → NOT USED
GND → 4 → 0-170C-18 → LUGGAGE DOOR UNLOCK SIGNAL FROM PAGE 12.1
DC+ → 5 → OPT. 1
GND → 6 → 0-85Y-18 → ABS SIGNAL FROM PAGE 22.1
GND → 7 → 0-45W-20 → A/C DOOR AJAR SIGNAL FROM PAGE 15.3 OR 11.1
GND → 8 → 0-419-18 → CHECK ENGINE SIGNAL FROM PAGE 5.1
DC+ → 9 → 24-82-16 → STOP LTS. SIGNAL FROM PAGE 9.3
DC+ → 10 → 12-21-18 → LH FLASHER SIGNAL FROM PAGE 9.2
GND → 11 → NOT USED
GND → 12 → 0-10R-20 → LUGGAGE DOOR AJAR SIGNAL FROM PAGE 11.1
DC+ → 13 → 12-9B-20 → ENGINE DOOR AJAR SIGNAL FROM PAGE 11.1
GND → 14 → 0-181-20 → OUTSIDE FREESE POINT SIGNAL FROM P. 15.1 OR 15.4
GND → 15 → 0-160-16 → TAG AXLE SIGNAL FROM PAGE 7.2
DC+ → 16 → 24-91B-16 → PARKING BRAKE SIGNAL FROM PAGE 8.1
GND → 17 → 0-509-18 → STOP ENGINE SIGNAL FROM PAGE 5.1
DC+ → 18 → 24-55-16 → HI BEAM SIGNAL FROM PAGE 9.2

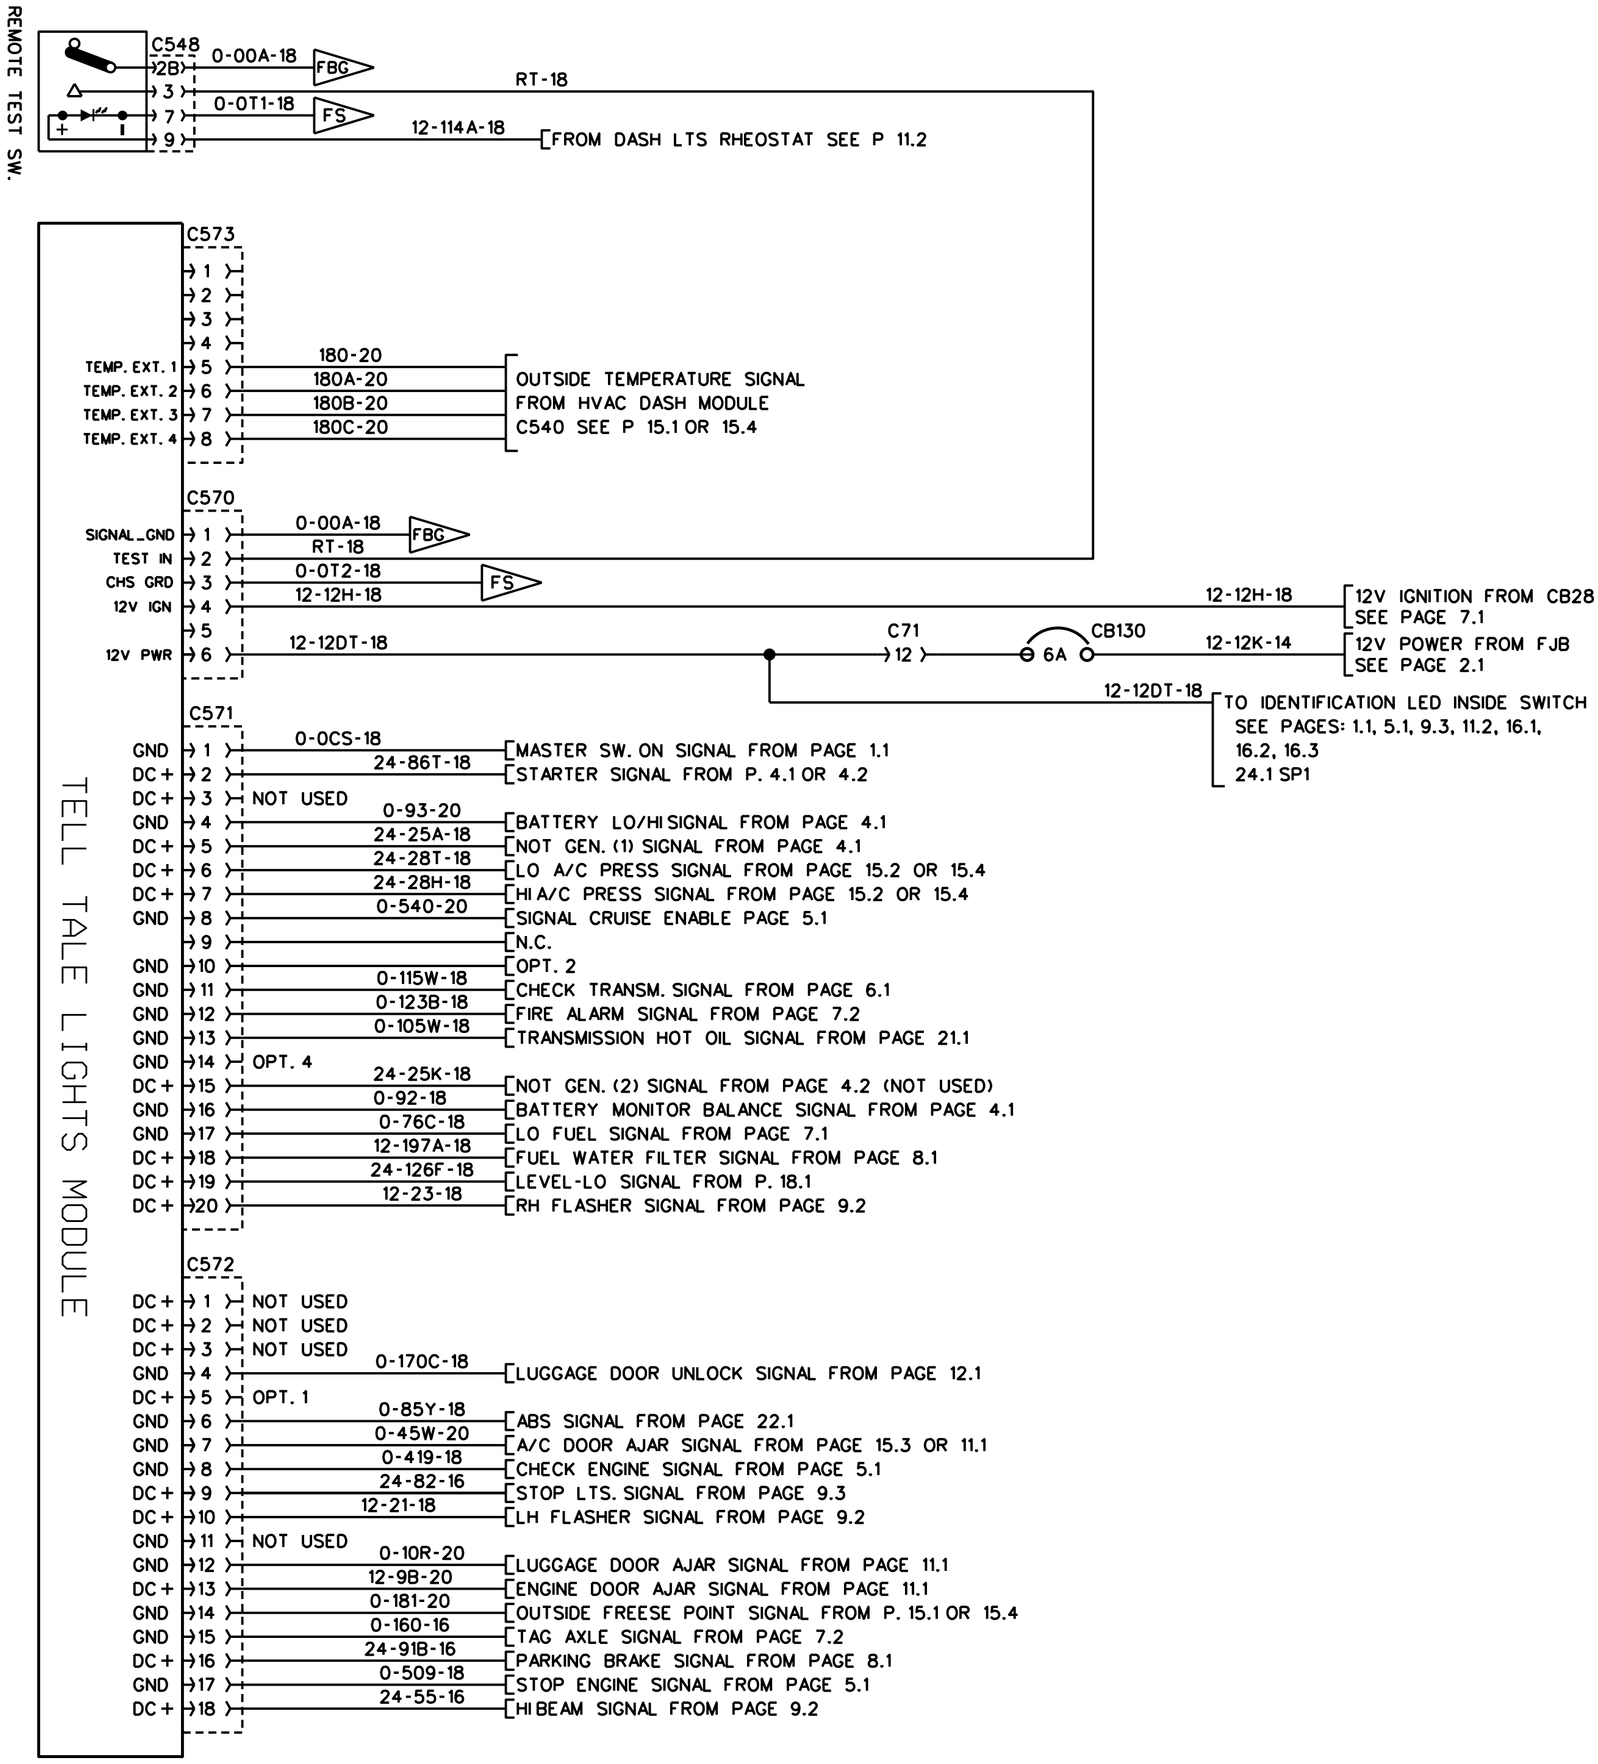
REMOTE TEST SW.
C548
2B
3
7
9
0-00A-18
FBG
0-0T1-18
FS
RT-18
12-114A-18
FROM DASH LTS RHEOSTAT SEE P 11.2
TELL TALE LIGHTS MODULE
C573
TEMP. EXT. 1 5
TEMP. EXT. 2 6
TEMP. EXT. 3 7
TEMP. EXT. 4 8
180-20
180A-20
180B-20
180C-20
OUTSIDE TEMPERATURE SIGNAL
FROM HVAC DASH MODULE
C540 SEE P 15.1 OR 15.4
C570
SIGNAL_GND 1
TEST IN 2
CHS GRD 3
12V IGN 4
12V PWR 6
0-00A-18
RT-18
FBG
0-0T2-18
12-12H-18
FS
12-12H-18
12V IGNITION FROM CB28
SEE PAGE 7.1
C71
12
CB130
6A
12-12DT-18
12-12K-14
12V POWER FROM FJB
SEE PAGE 2.1
12-12DT-18
TO IDENTIFICATION LED INSIDE SWITCH
SEE PAGES: 1.1, 5.1, 9.3, 11.2, 16.1,
16.2, 16.3
24.1 SP1
C571
GND 1
DC+ 2
DC+ 3
GND 4
DC+ 5
DC+ 6
DC+ 7
GND 8
9
GND 10
GND 11
GND 12
GND 13
GND 14
DC+ 15
GND 16
GND 17
DC+ 18
DC+ 19
DC+ 20
0-0CS-18
24-86T-18
MASTER SW. ON SIGNAL FROM PAGE 1.1
STARTER SIGNAL FROM P. 4.1 OR 4.2
NOT USED
0-93-20
24-25A-18
24-28T-18
24-28H-18
0-540-20
BATTERY LO/HI SIGNAL FROM PAGE 4.1
NOT GEN. (1) SIGNAL FROM PAGE 4.1
LO A/C PRESS SIGNAL FROM PAGE 15.2 OR 15.4
HI A/C PRESS SIGNAL FROM PAGE 15.2 OR 15.4
SIGNAL CRUISE ENABLE PAGE 5.1
N.C.
OPT. 2
0-115W-18
0-123B-18
0-105W-18
CHECK TRANSM. SIGNAL FROM PAGE 6.1
FIRE ALARM SIGNAL FROM PAGE 7.2
TRANSMISSION HOT OIL SIGNAL FROM PAGE 21.1
OPT. 4
24-25K-18
0-92-18
0-76C-18
12-197A-18
24-126F-18
12-23-18
NOT GEN. (2) SIGNAL FROM PAGE 4.2 (NOT USED)
BATTERY MONITOR BALANCE SIGNAL FROM PAGE 4.1
LO FUEL SIGNAL FROM PAGE 7.1
FUEL WATER FILTER SIGNAL FROM PAGE 8.1
LEVEL-LO SIGNAL FROM P. 18.1
RH FLASHER SIGNAL FROM PAGE 9.2
C572
DC+ 1
DC+ 2
DC+ 3
GND 4
DC+ 5
GND 6
GND 7
GND 8
DC+ 9
DC+ 10
GND 11
GND 12
DC+ 13
GND 14
GND 15
DC+ 16
GND 17
DC+ 18
NOT USED
NOT USED
NOT USED
0-170C-18
OPT. 1
0-85Y-18
0-45W-20
0-419-18
24-82-16
12-21-18
NOT USED
0-10R-20
12-9B-20
0-181-20
0-160-16
24-91B-16
0-509-18
24-55-16
LUGGAGE DOOR UNLOCK SIGNAL FROM PAGE 12.1
ABS SIGNAL FROM PAGE 22.1
A/C DOOR AJAR SIGNAL FROM PAGE 15.3 OR 11.1
CHECK ENGINE SIGNAL FROM PAGE 5.1
STOP LTS. SIGNAL FROM PAGE 9.3
LH FLASHER SIGNAL FROM PAGE 9.2
LUGGAGE DOOR AJAR SIGNAL FROM PAGE 11.1
ENGINE DOOR AJAR SIGNAL FROM PAGE 11.1
OUTSIDE FREESE POINT SIGNAL FROM P. 15.1 OR 15.4
TAG AXLE SIGNAL FROM PAGE 7.2
PARKING BRAKE SIGNAL FROM PAGE 8.1
STOP ENGINE SIGNAL FROM PAGE 5.1
HI BEAM SIGNAL FROM PAGE 9.2

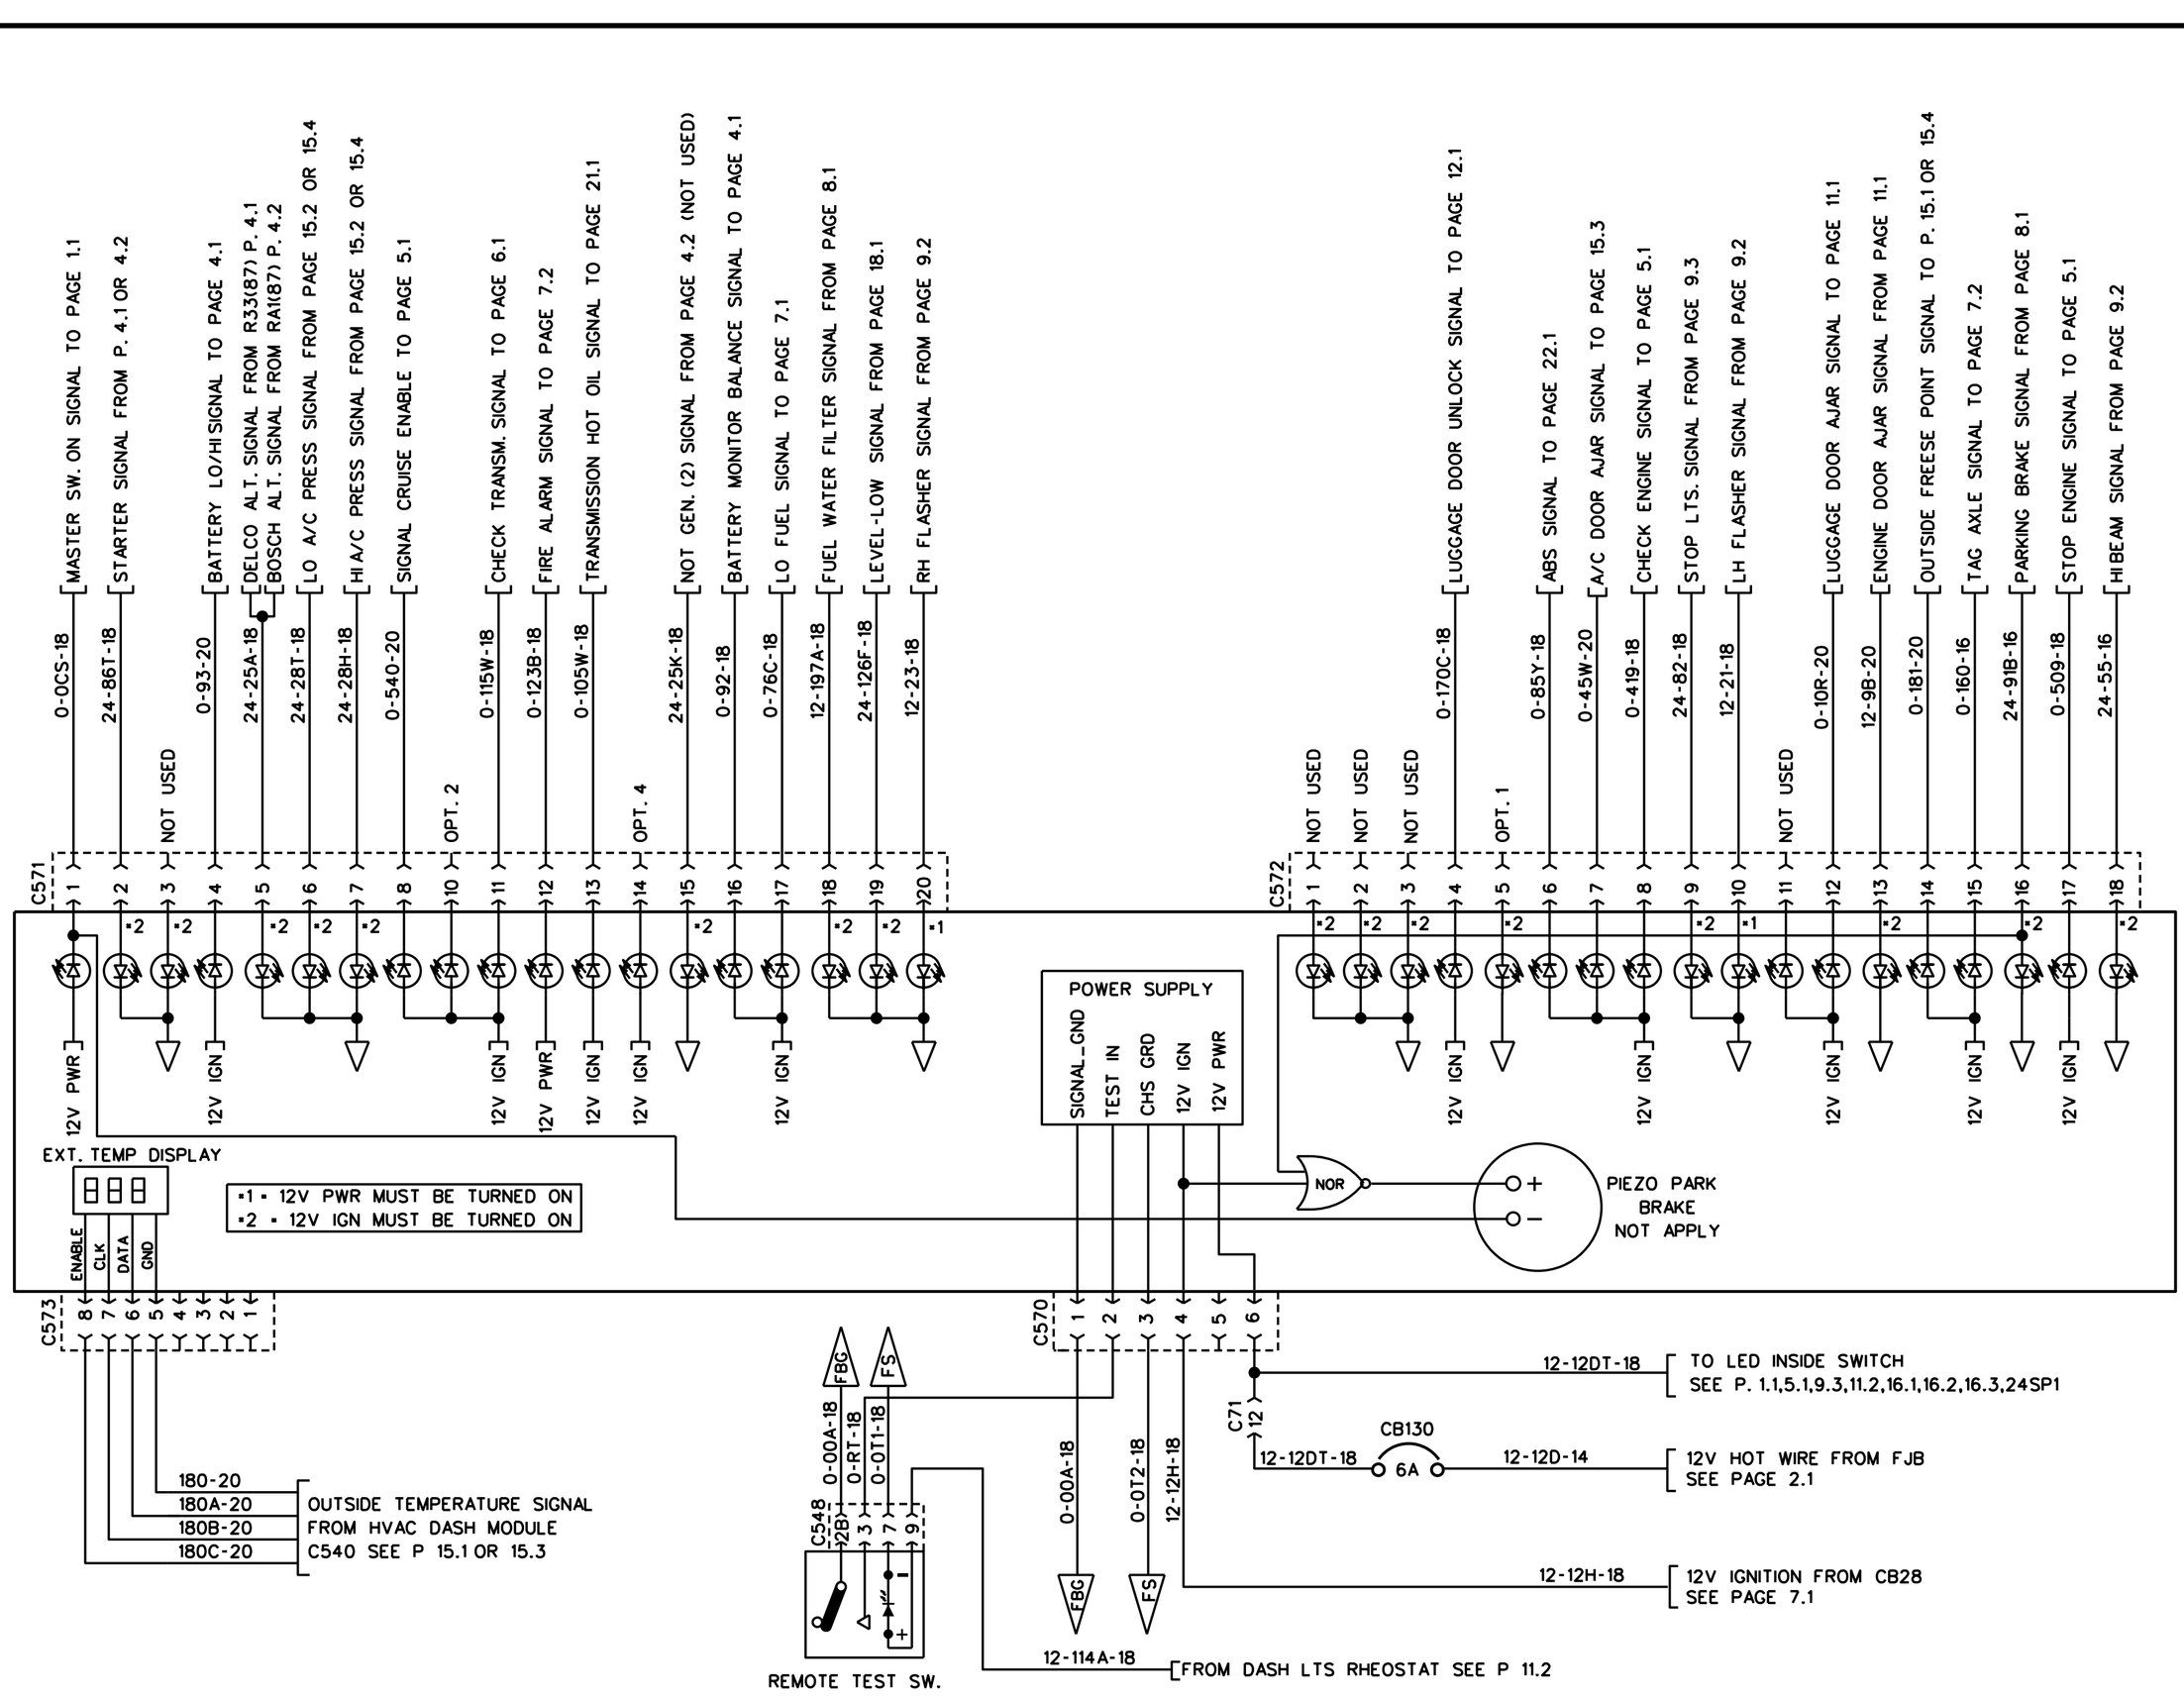

TELL TALE LIGHTS MODULE

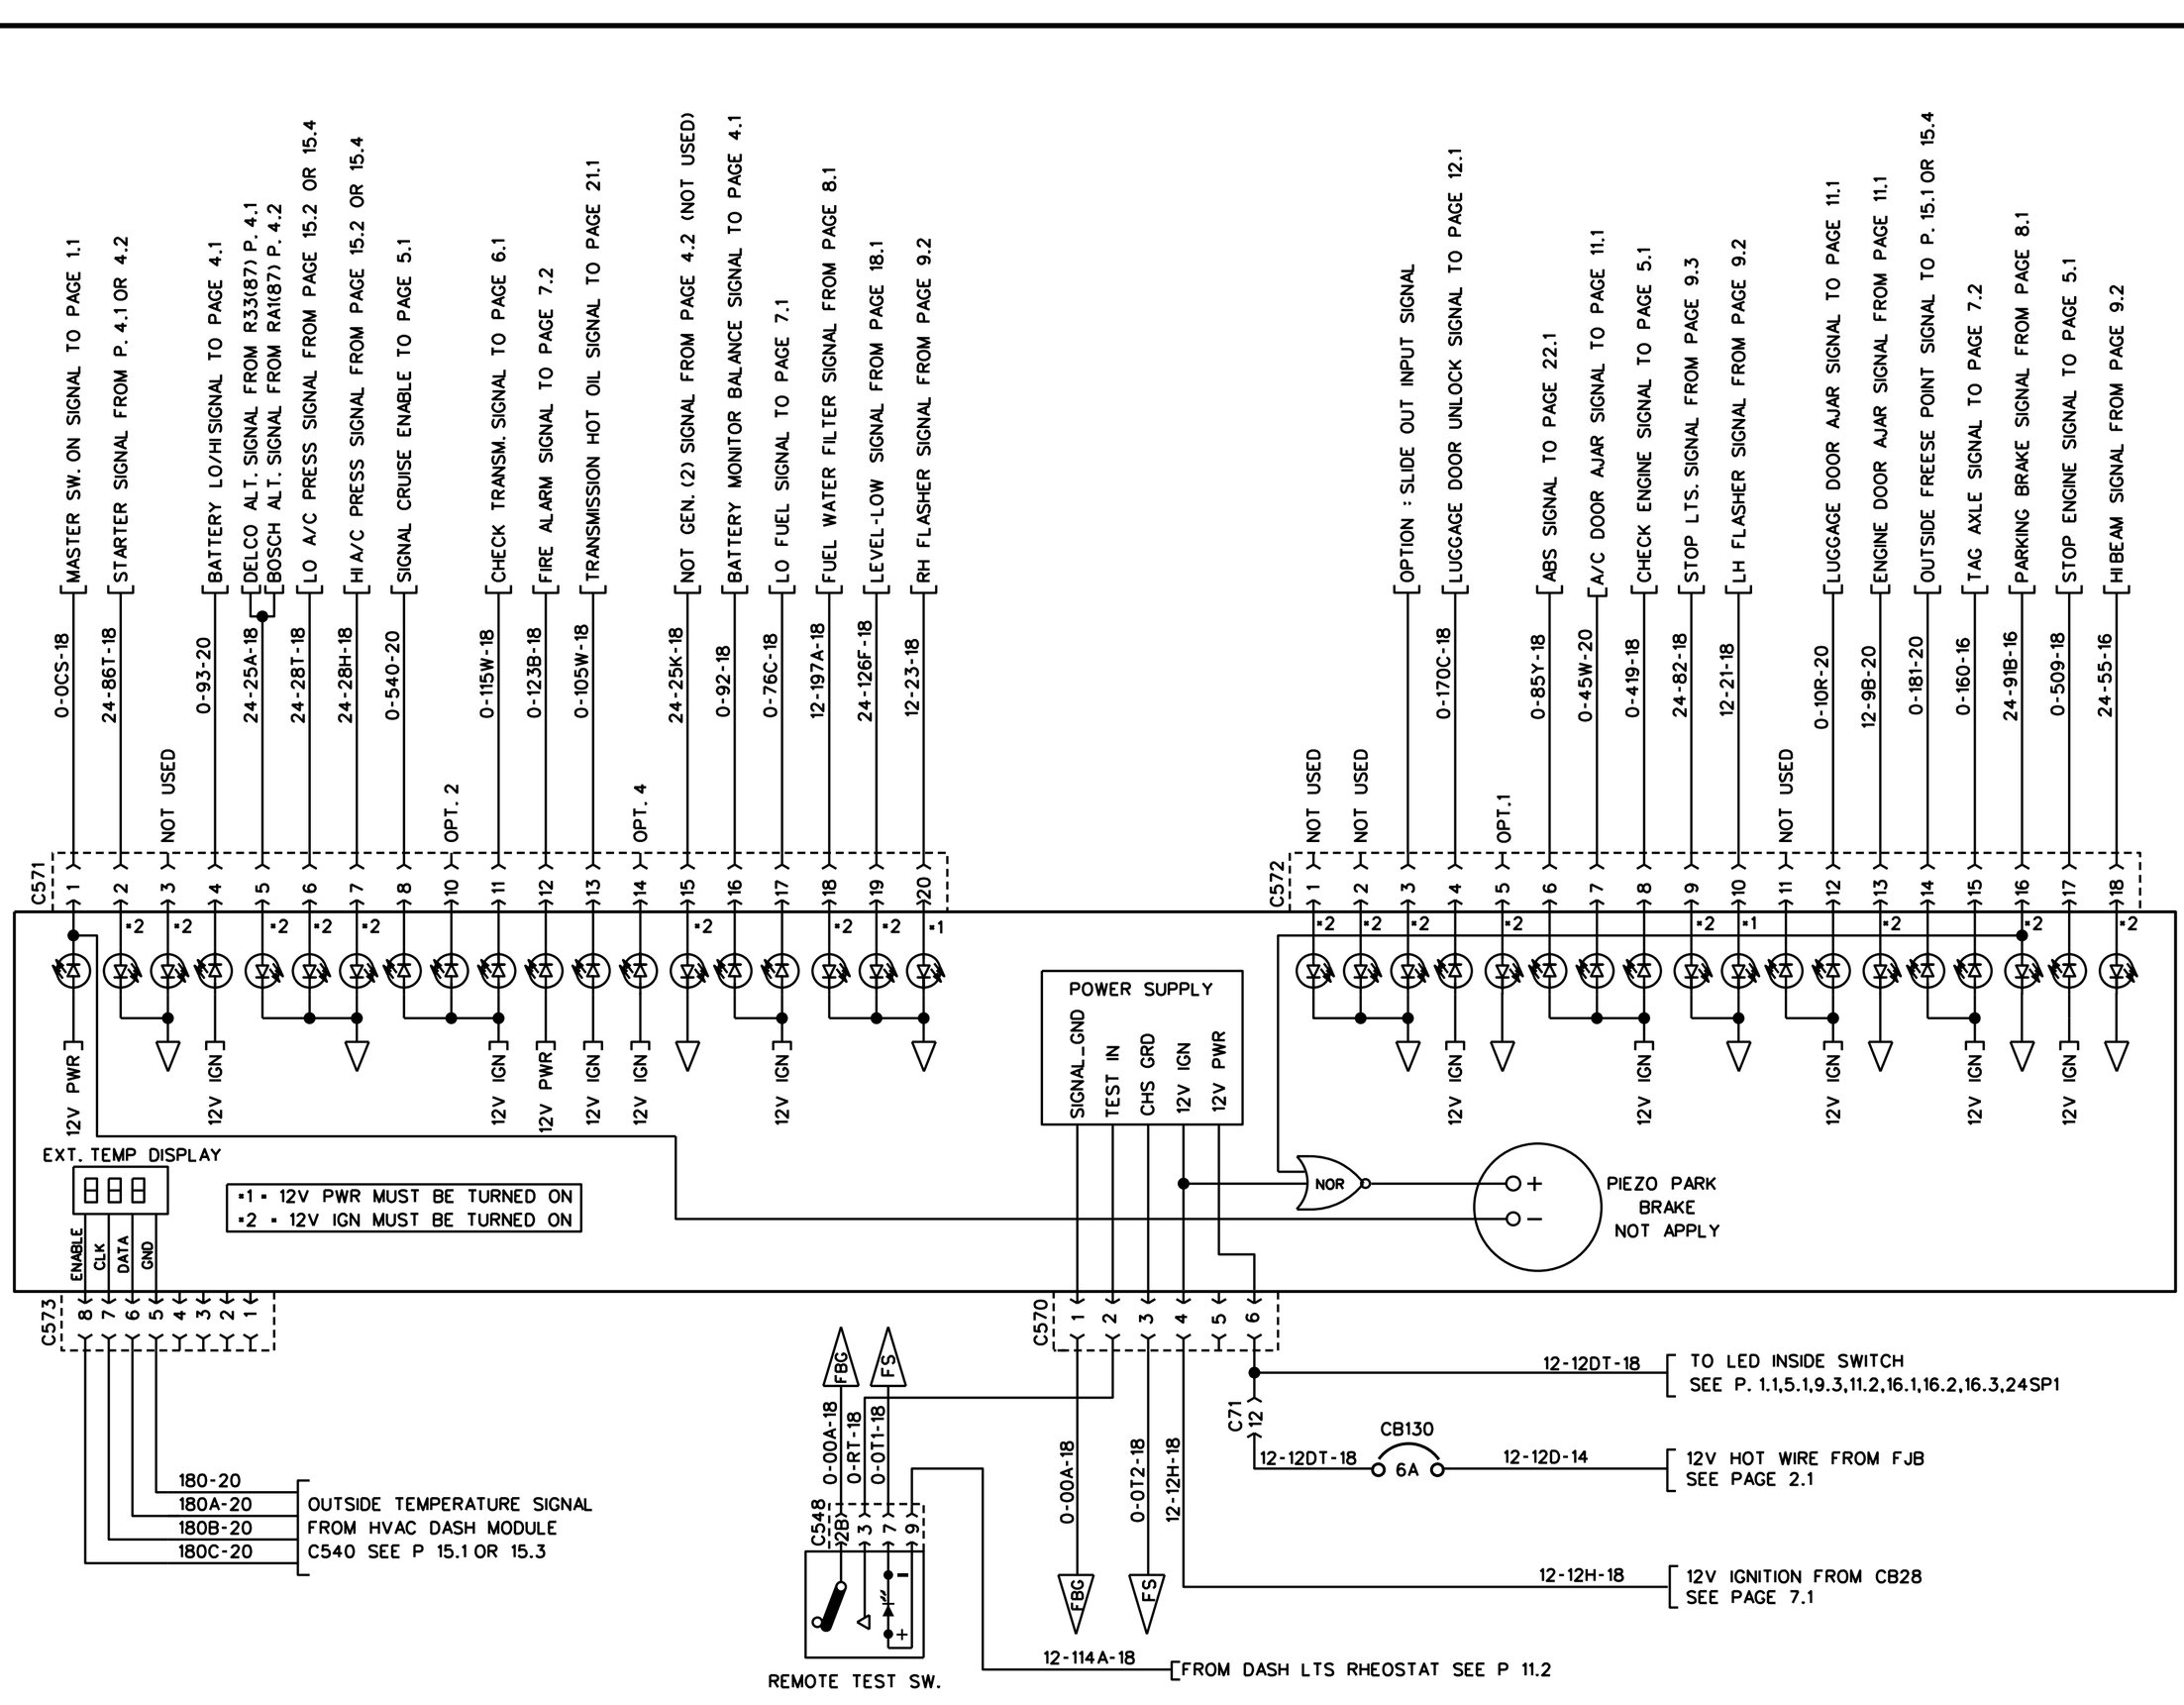

TELL TALE LIGHTS MODULE

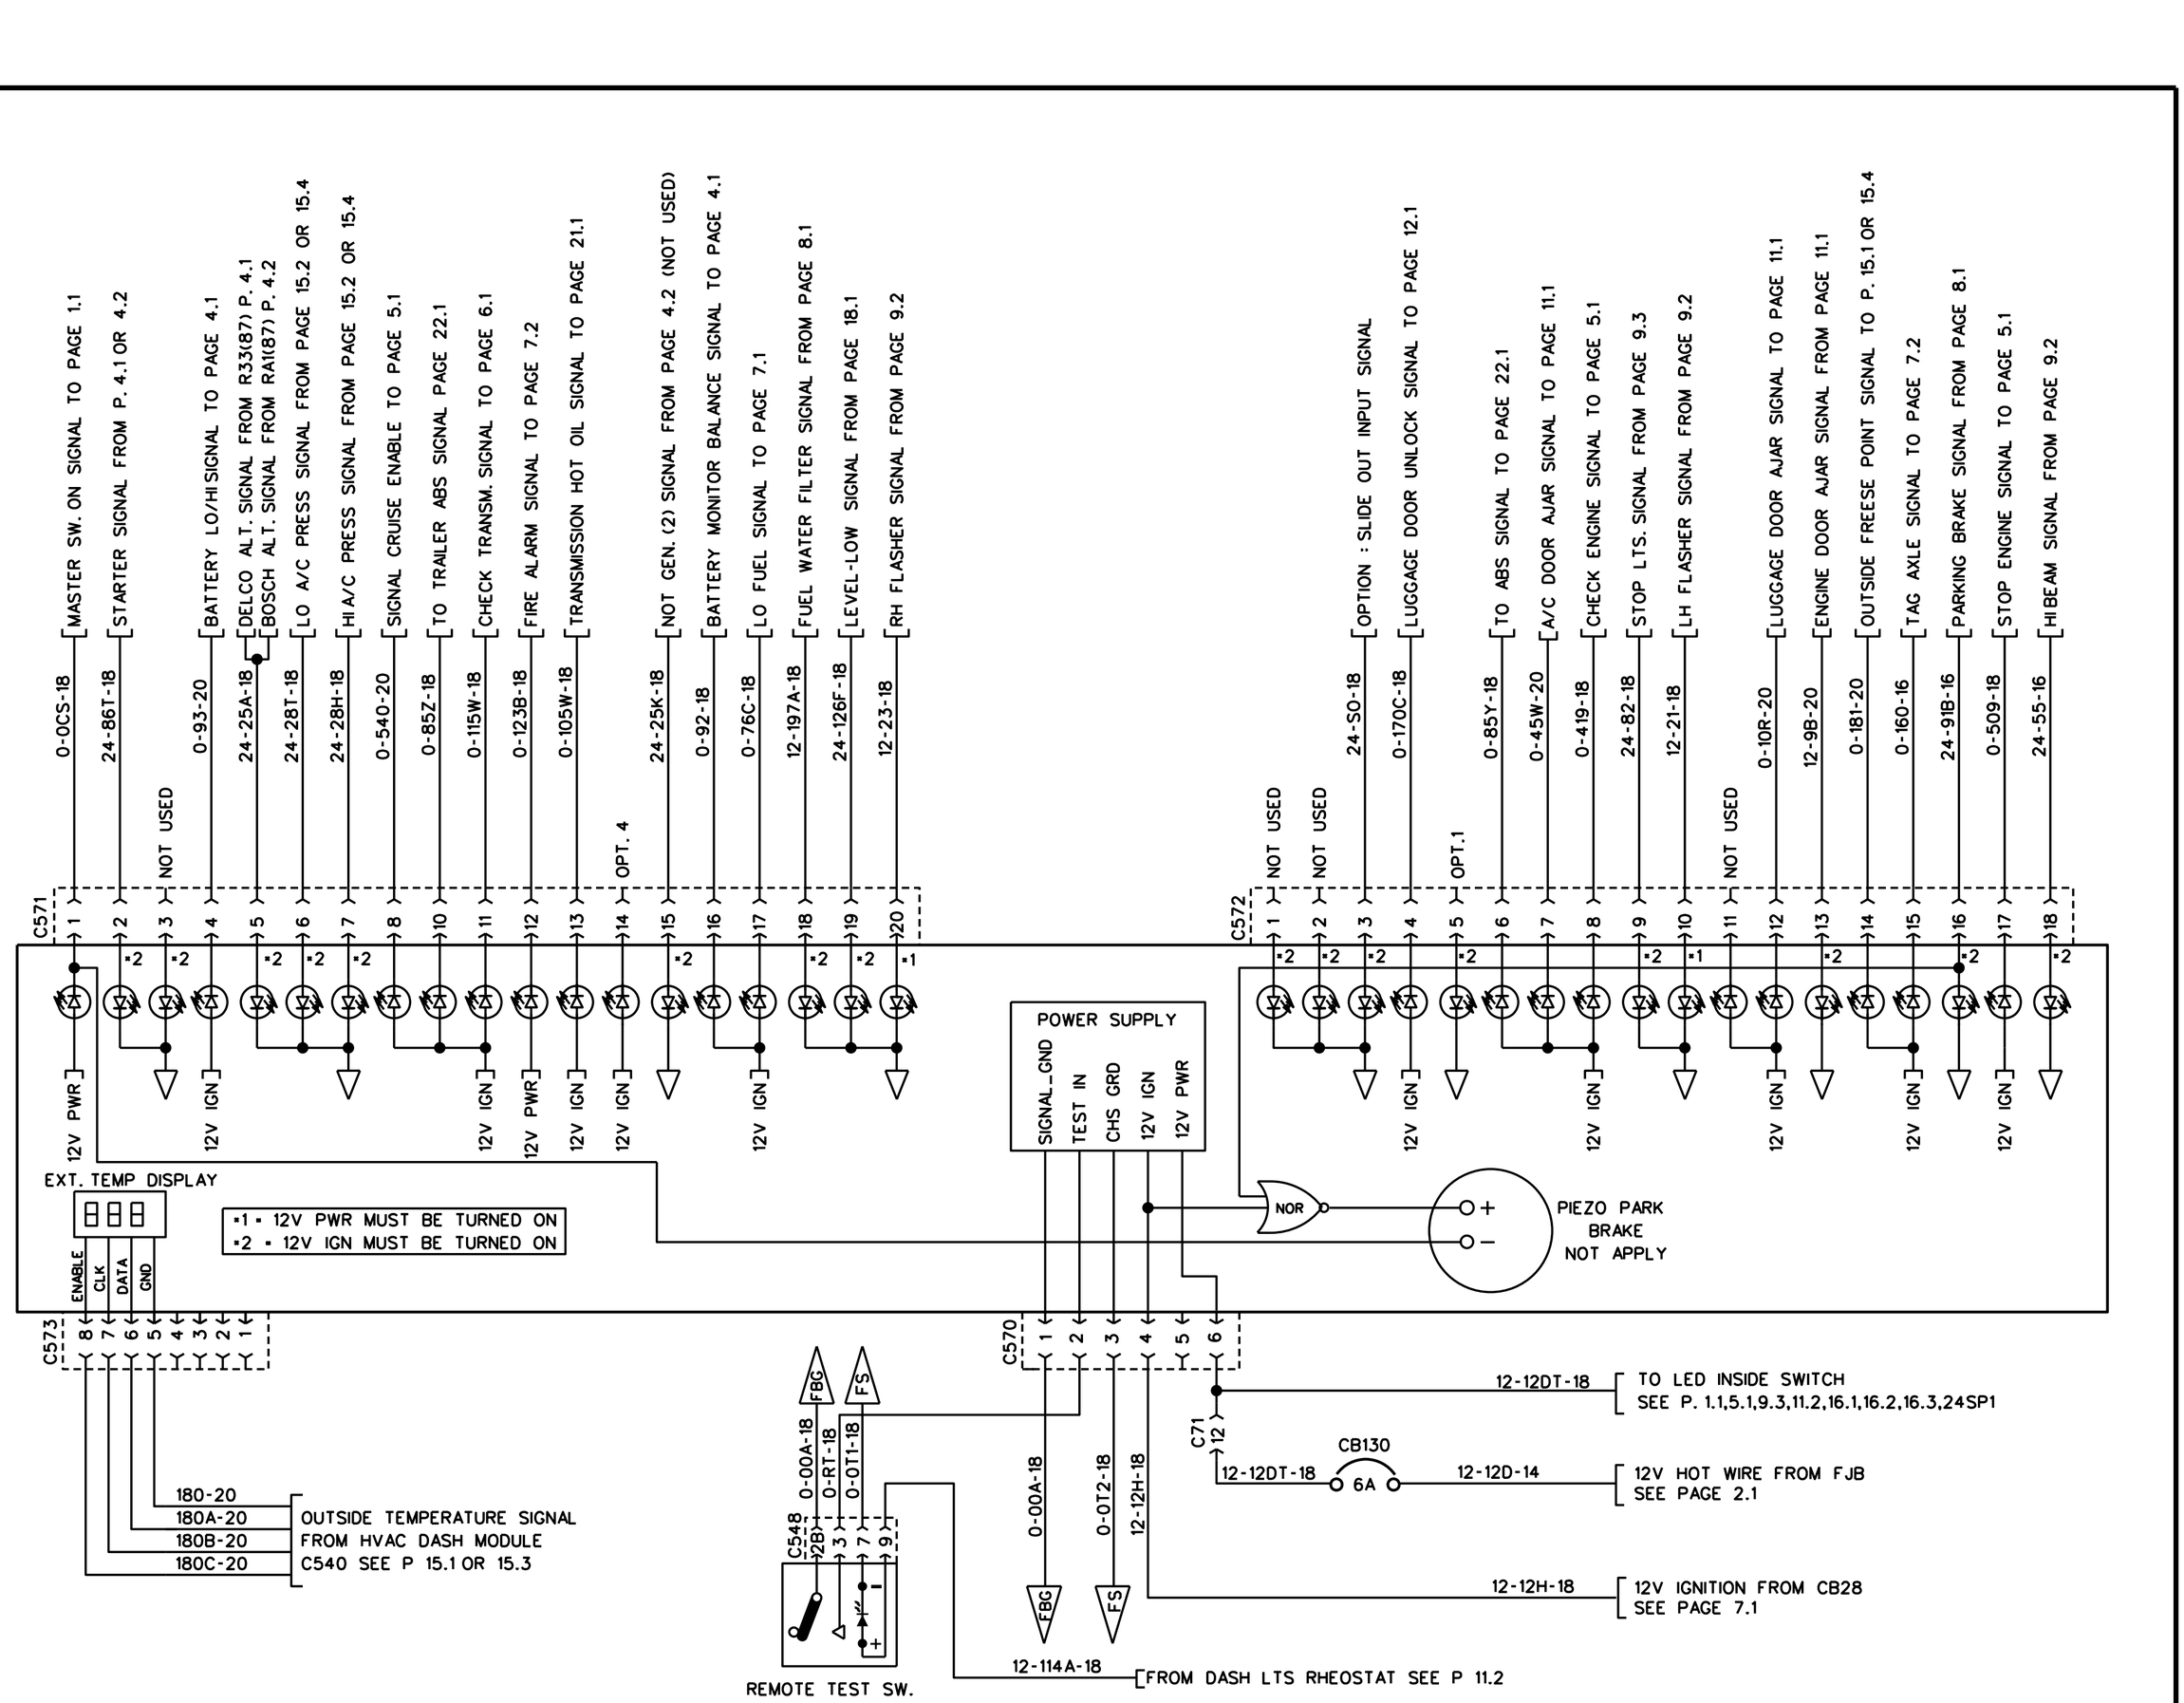

TELL TALE LIGHTS MODULE

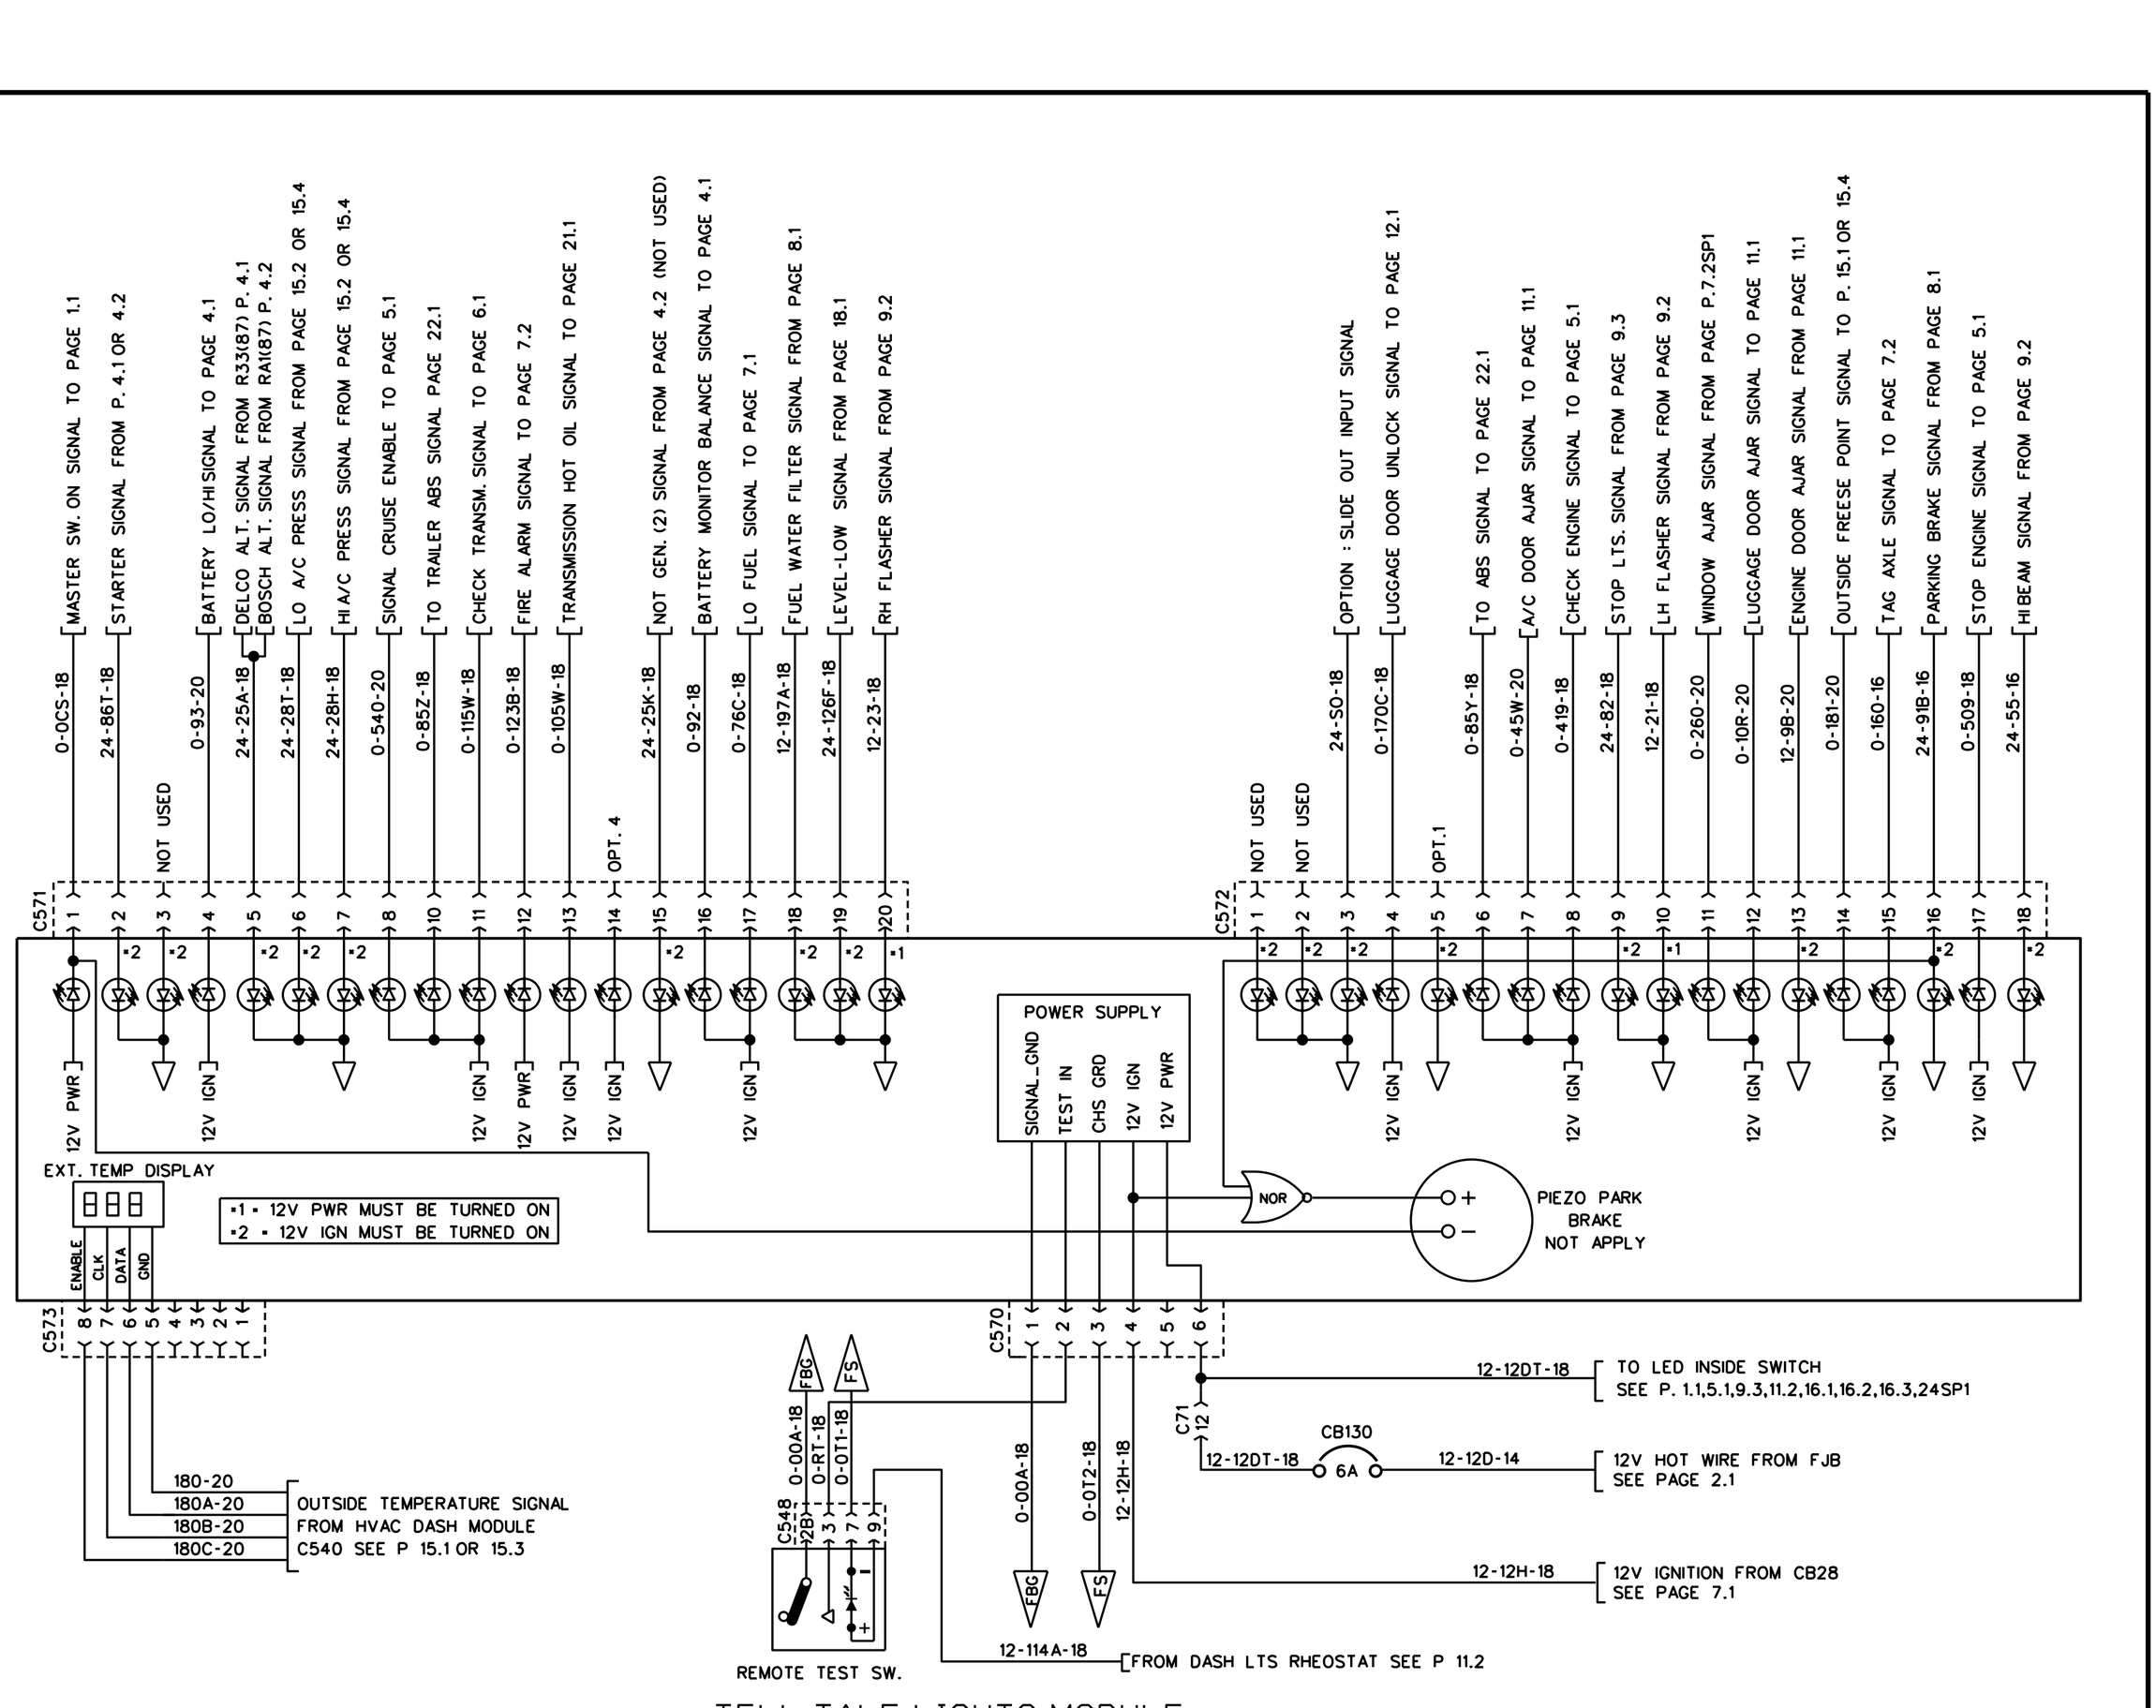

TELL TALE LIGHTS MODULE

WINDOW AJAR SPECIAL

W.C.L. SYSTEM RICON 9

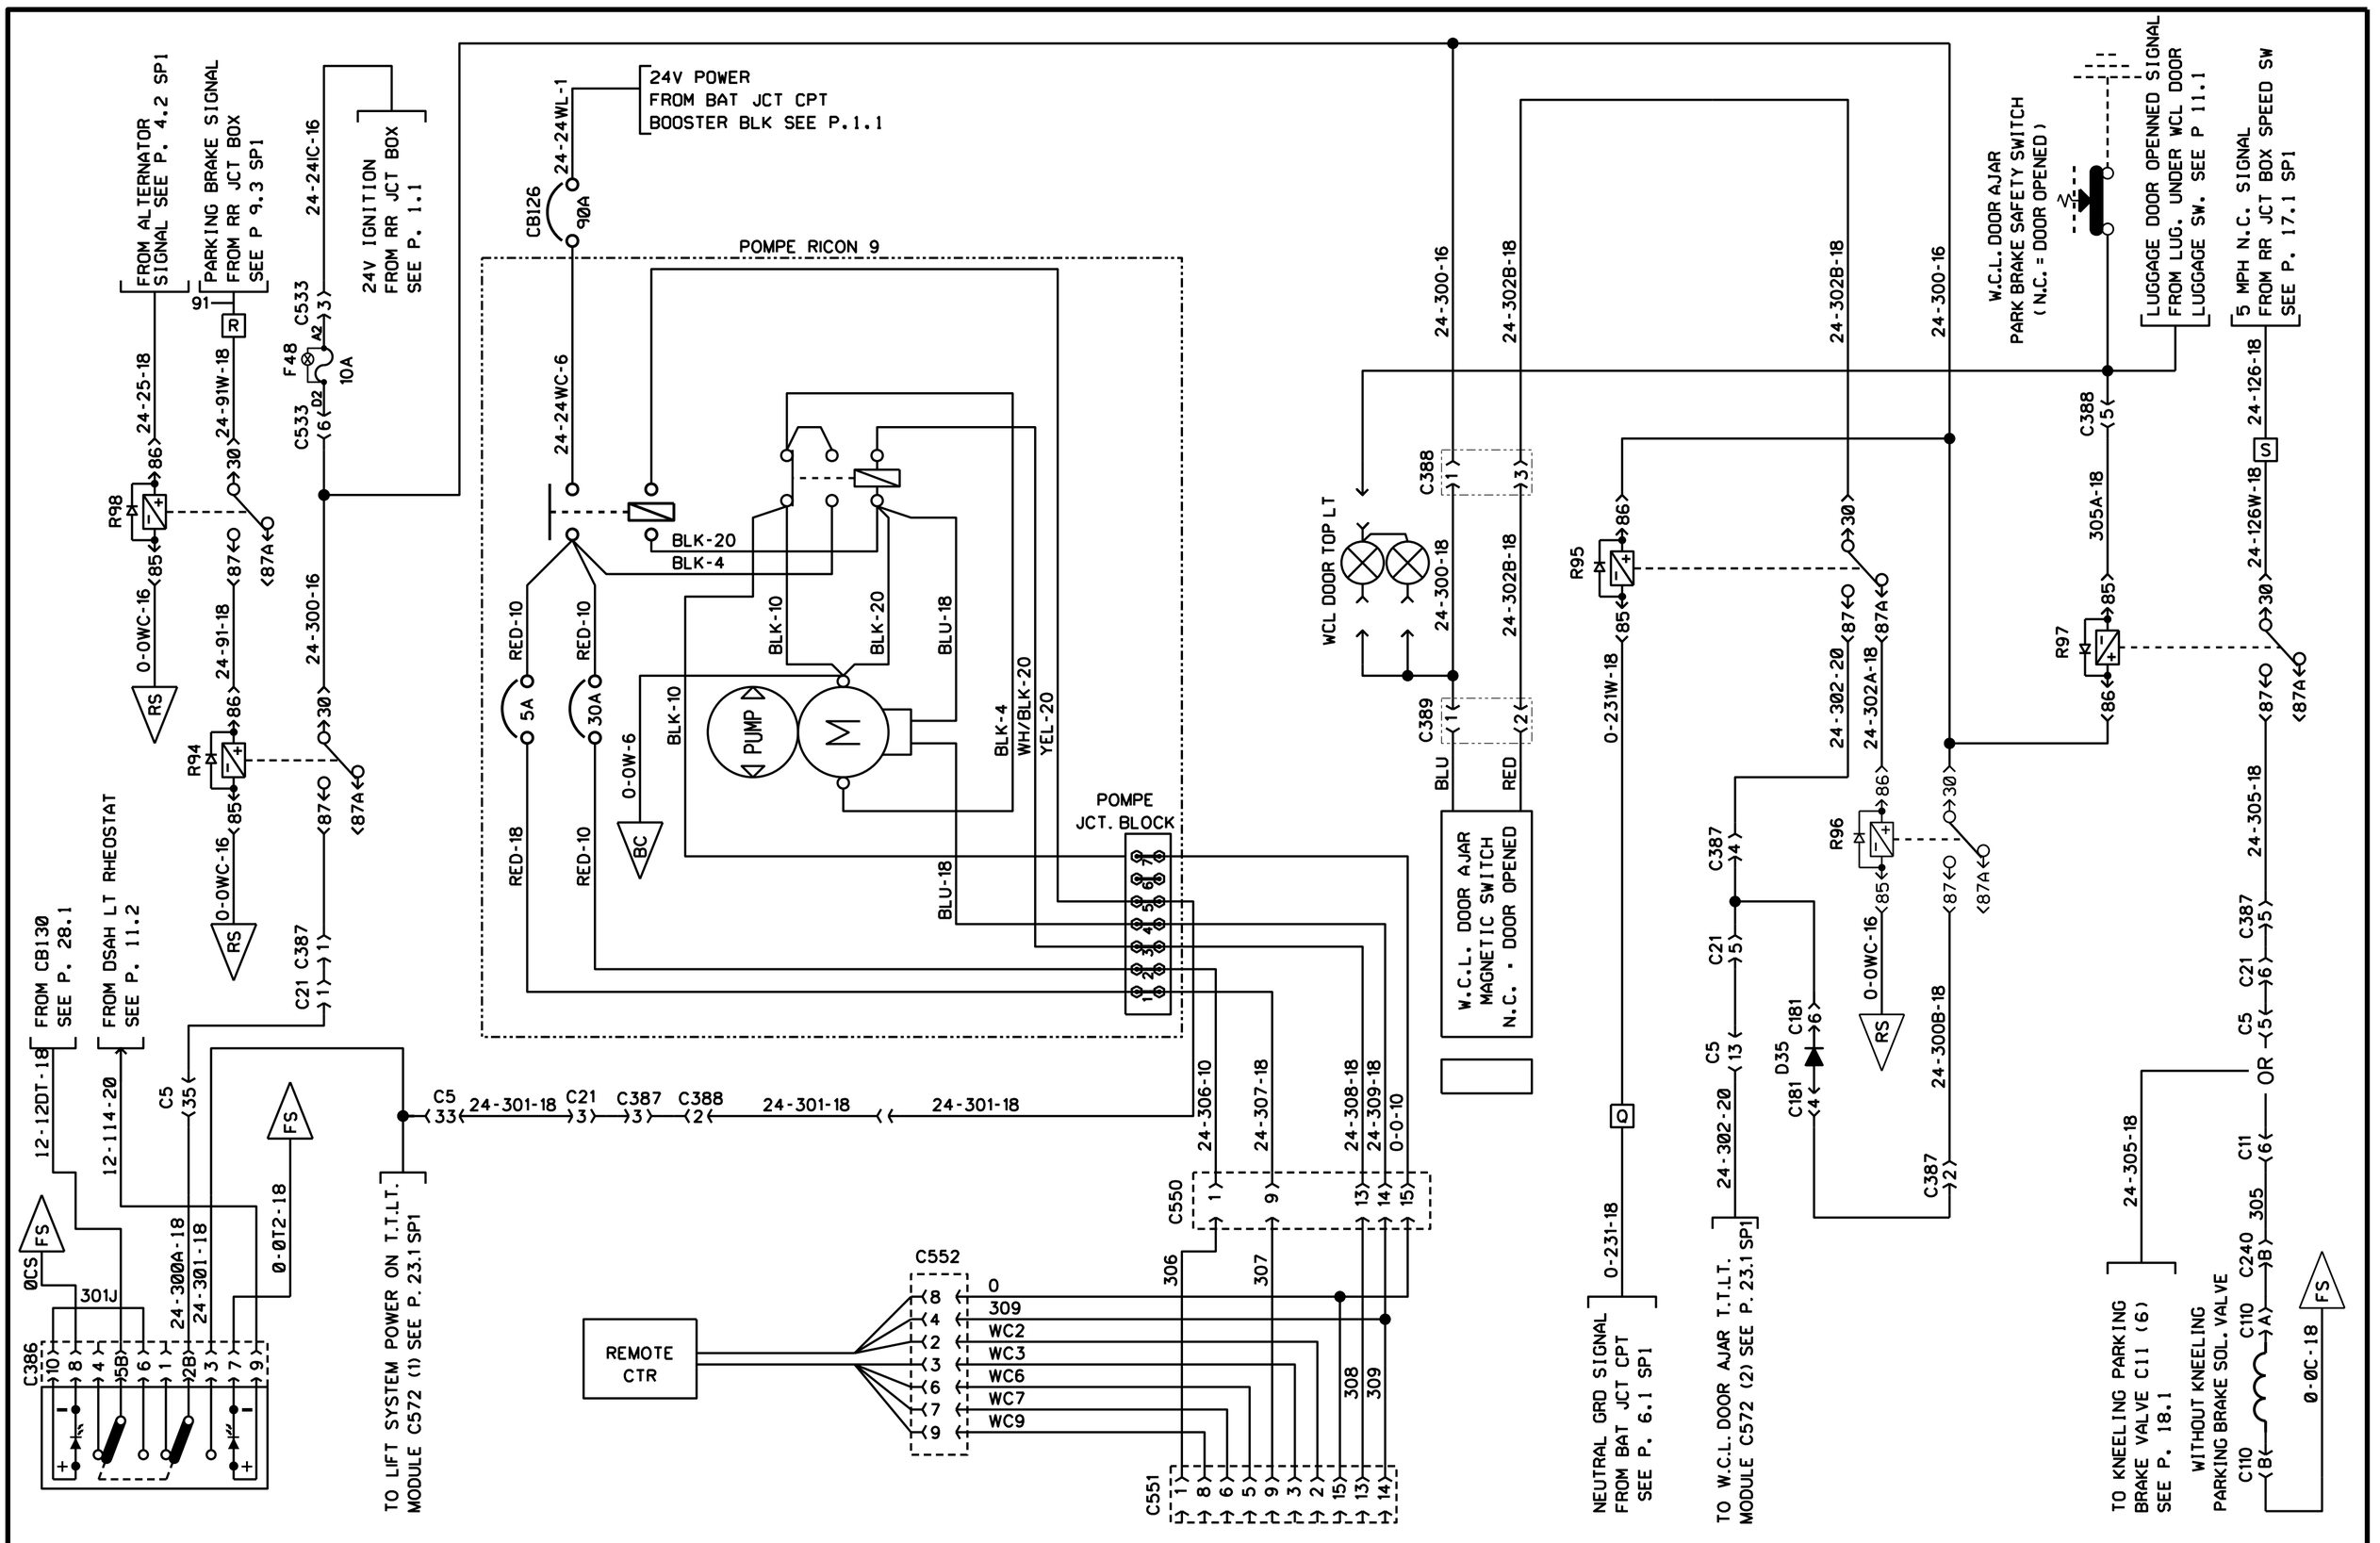

PREVOST	WIRING DIAGRAM	NO: D060912	PAGE: 24.1SP1	REVISION 00

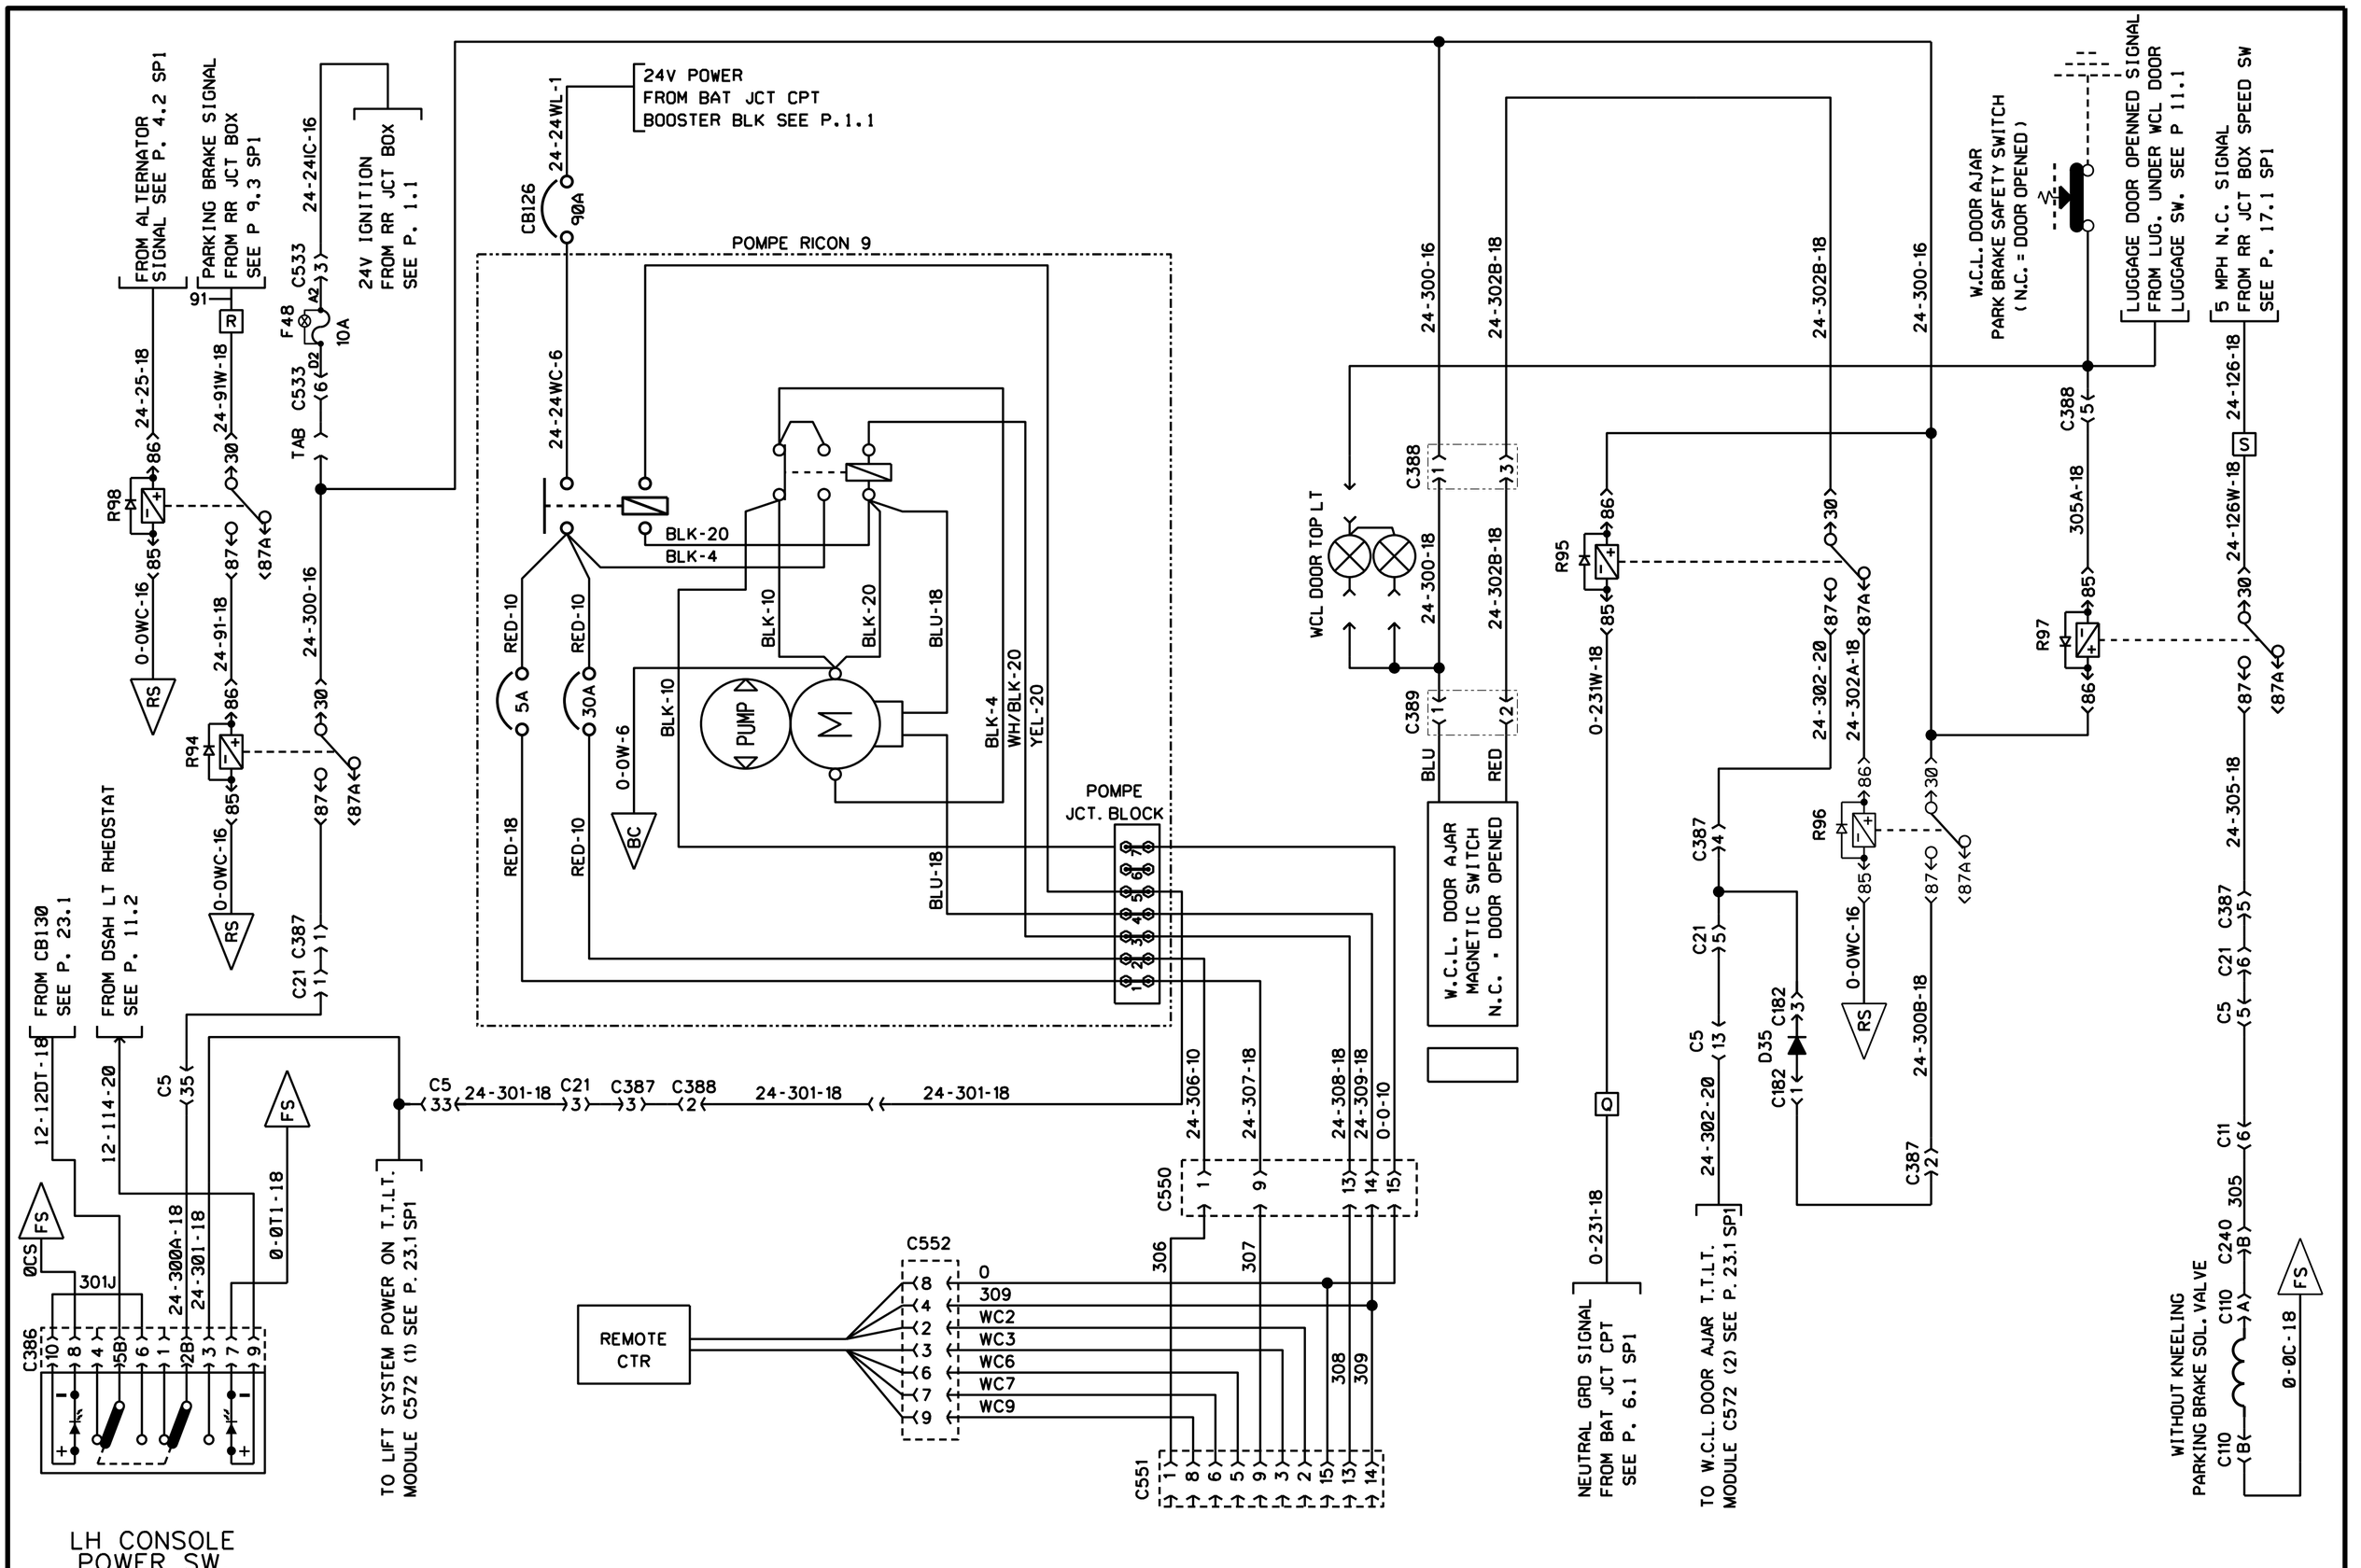

W.C.L. SYSTEM RICON 9