WIRING DIAGRAM

PREVOST CAR INC. H3-40 BUS

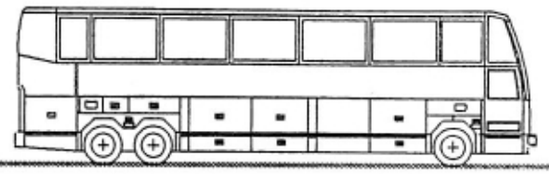

REFERENCE: STANDARD	NO: D060783

EFF. W/ OC# 92022	PRIOR TO / OC# 92043	DR. MARTIN LAFLAMME	DATE: 92-10-30
EFF. W/ VEH.# P300	PRIOR TO / VEH.# P316	CK. ROCH CHAMPAGNE	APPR. ROLAND LAPOINTE

REVISION DATE	DESCRIPTION	PAGE	BY	CK.	APPR.
93-01-14	RADIO PHOENIX PRIOR TO/VEH. *P313	26	MLAF		
93-01-14	RADIO DAYTONA EFF. W/VEH. *P313	26A	MLAF		
94-04-05	UPDATE PAGES: B,C,14,19,28,30	← SEE	S.G.		
94-04-05	WATER HEATER OPERABLE EFF.W/P300 PRIOR TO P316 OC*94050	18A	S.G.		
94-02-22	ENTRANCE DOOR (RLY MODULE) RETROFIT ON REQUEST VEH. P300 TO P316 OC*94068	22A	R.C.		

INDEX

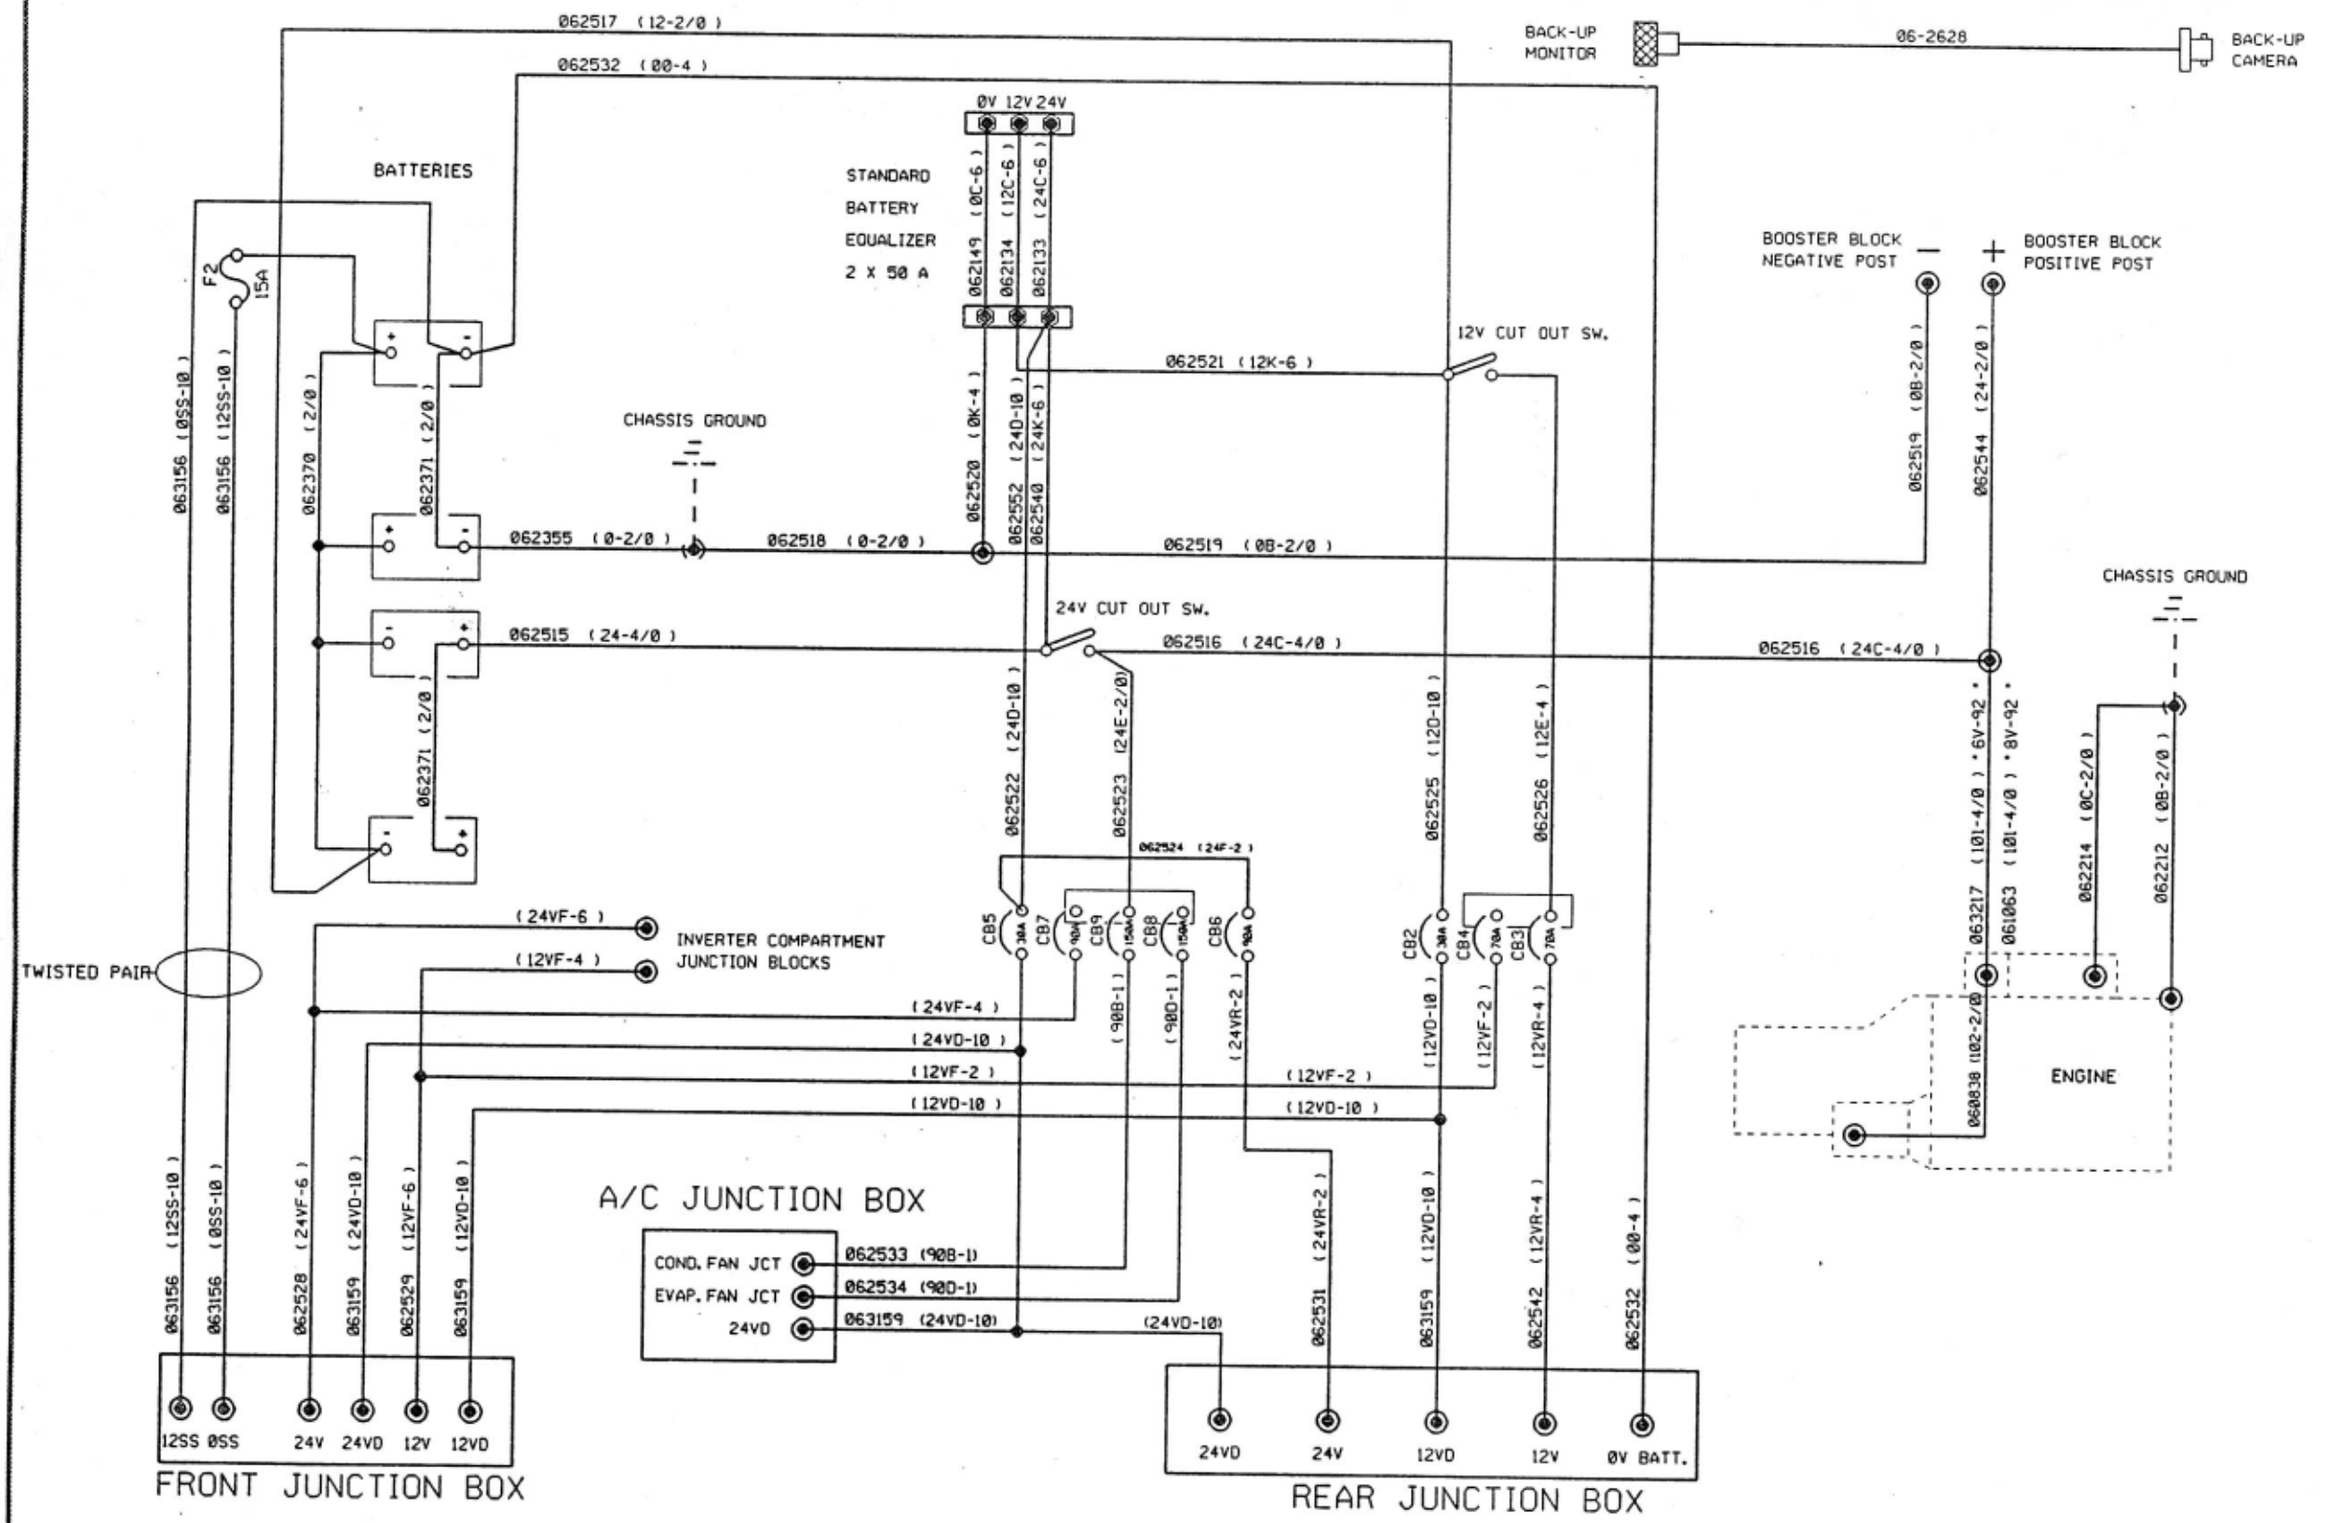

PREVOST CAR inc.	WIRING DIAGRAM	NO: D060783	REVISION DATE 94-04-05	P. B

INDEX

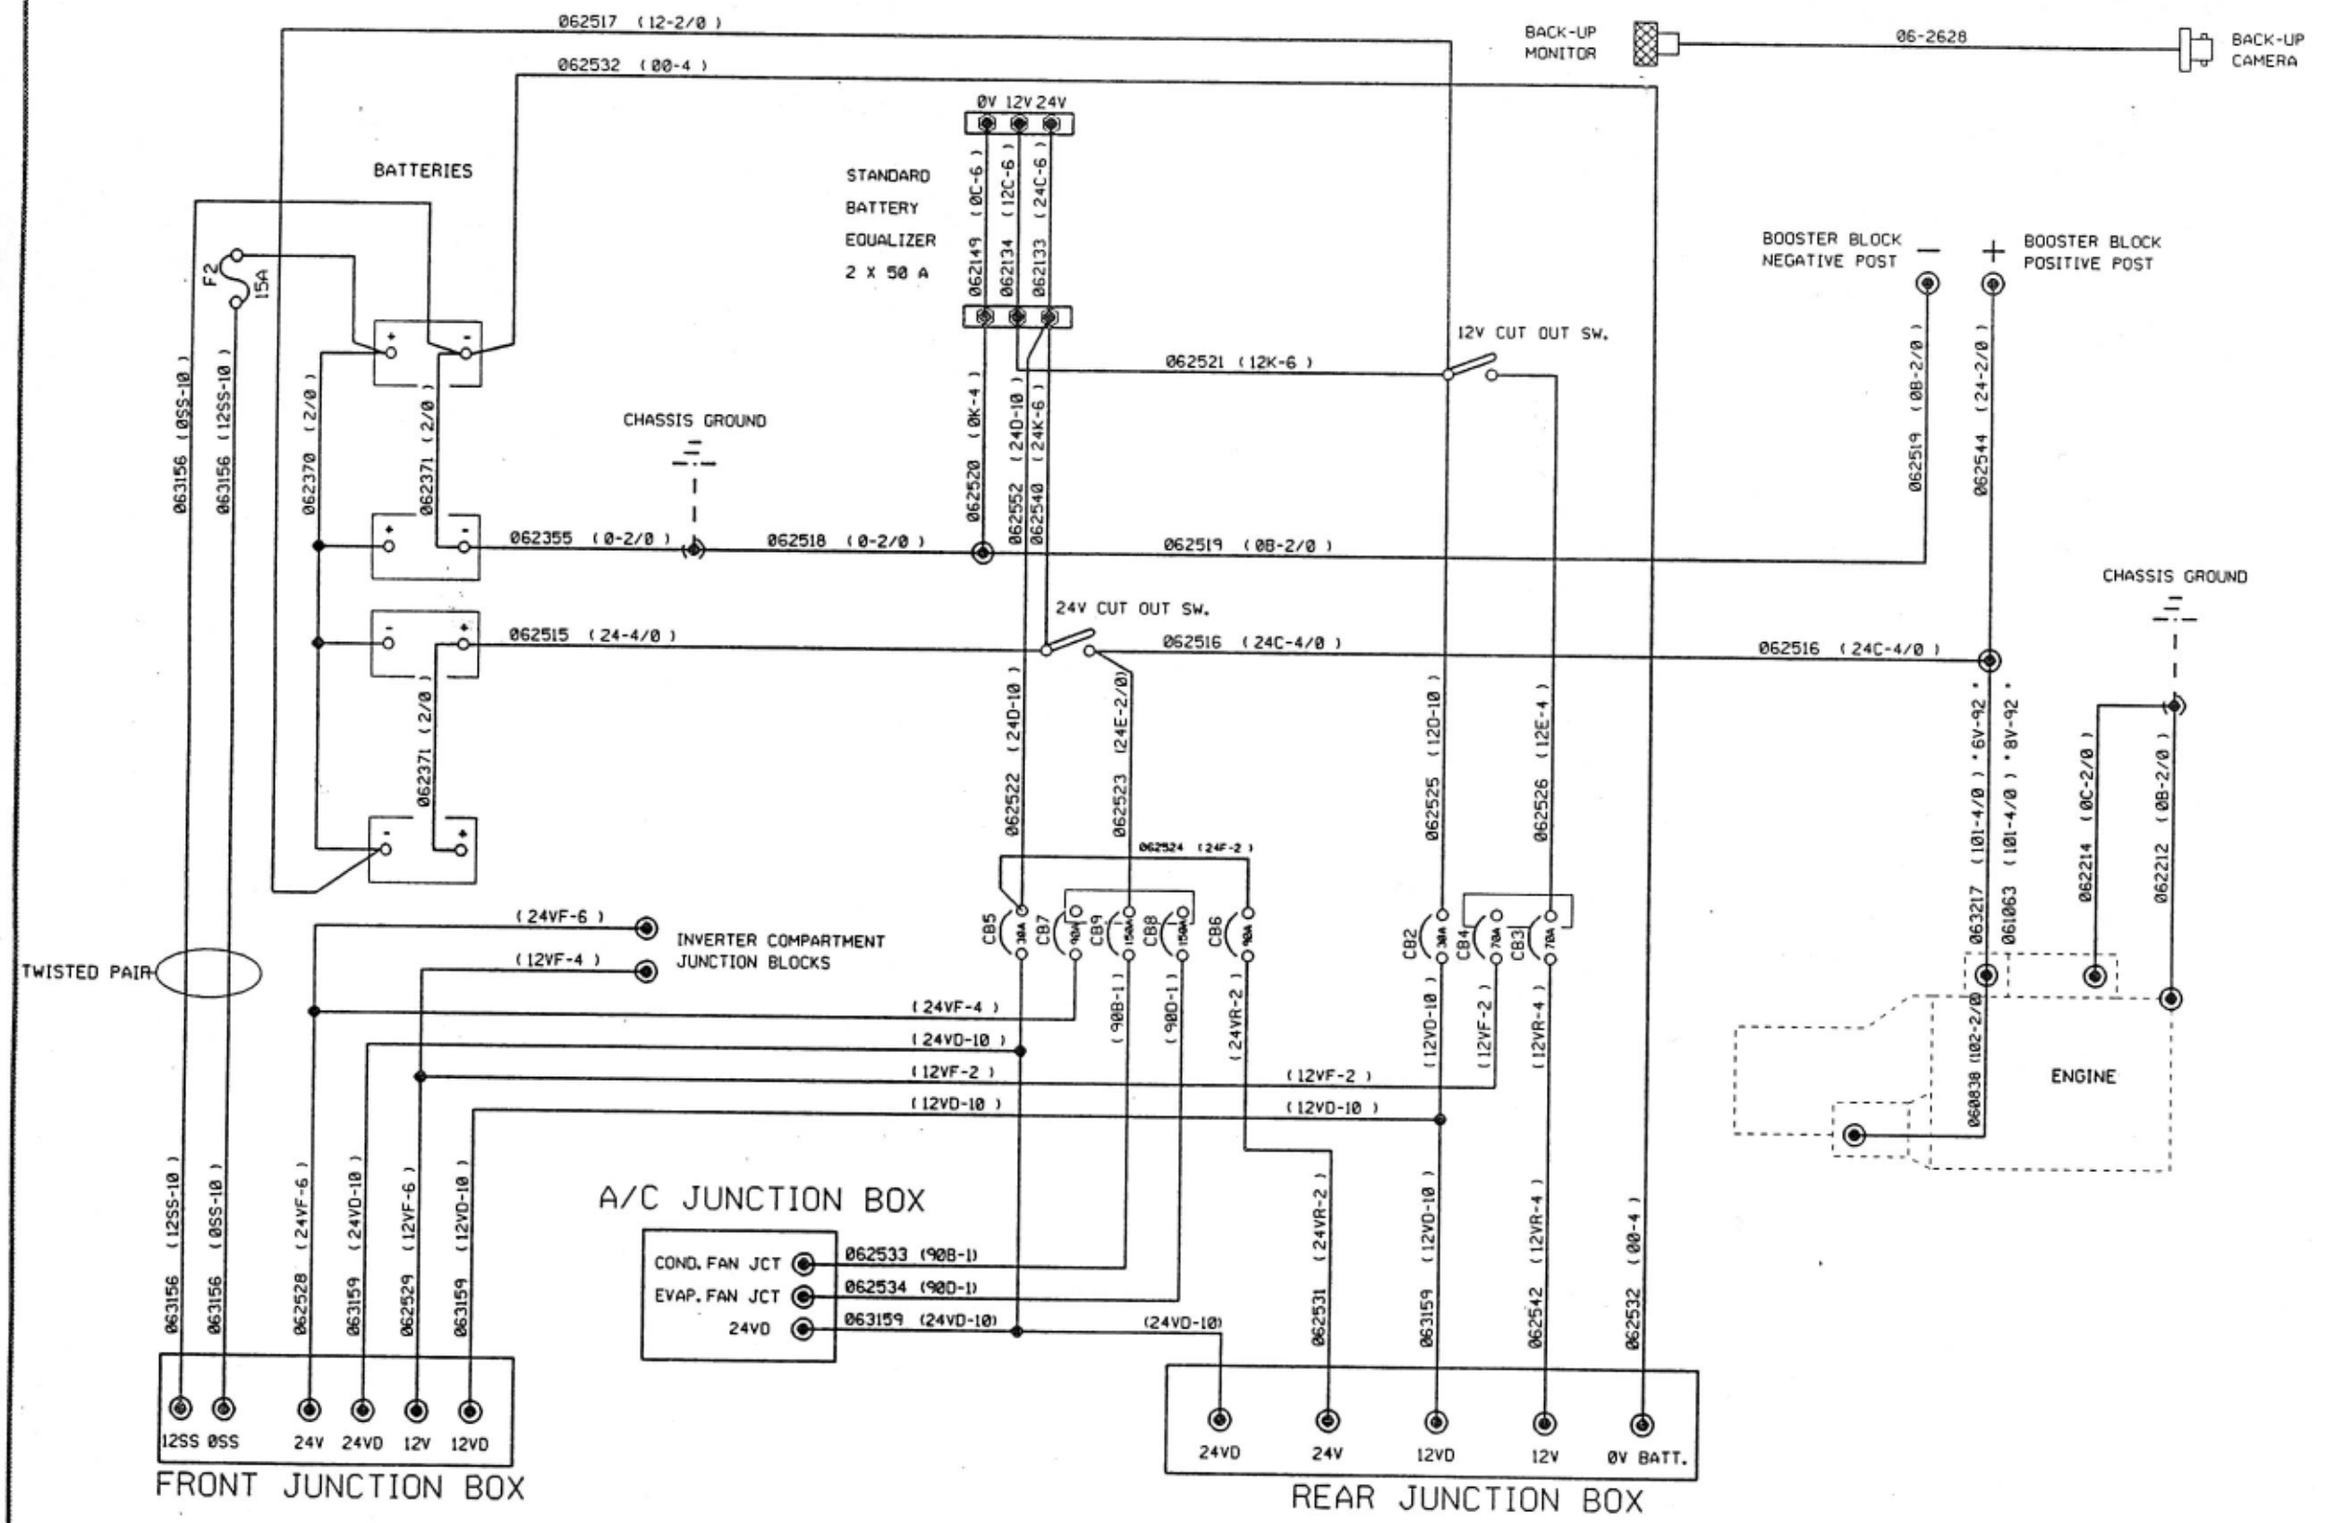

PREVOST CAR inc.	WIRING DIAGRAM	NO: D060783	REVISION DATE 94-04-05	P. B

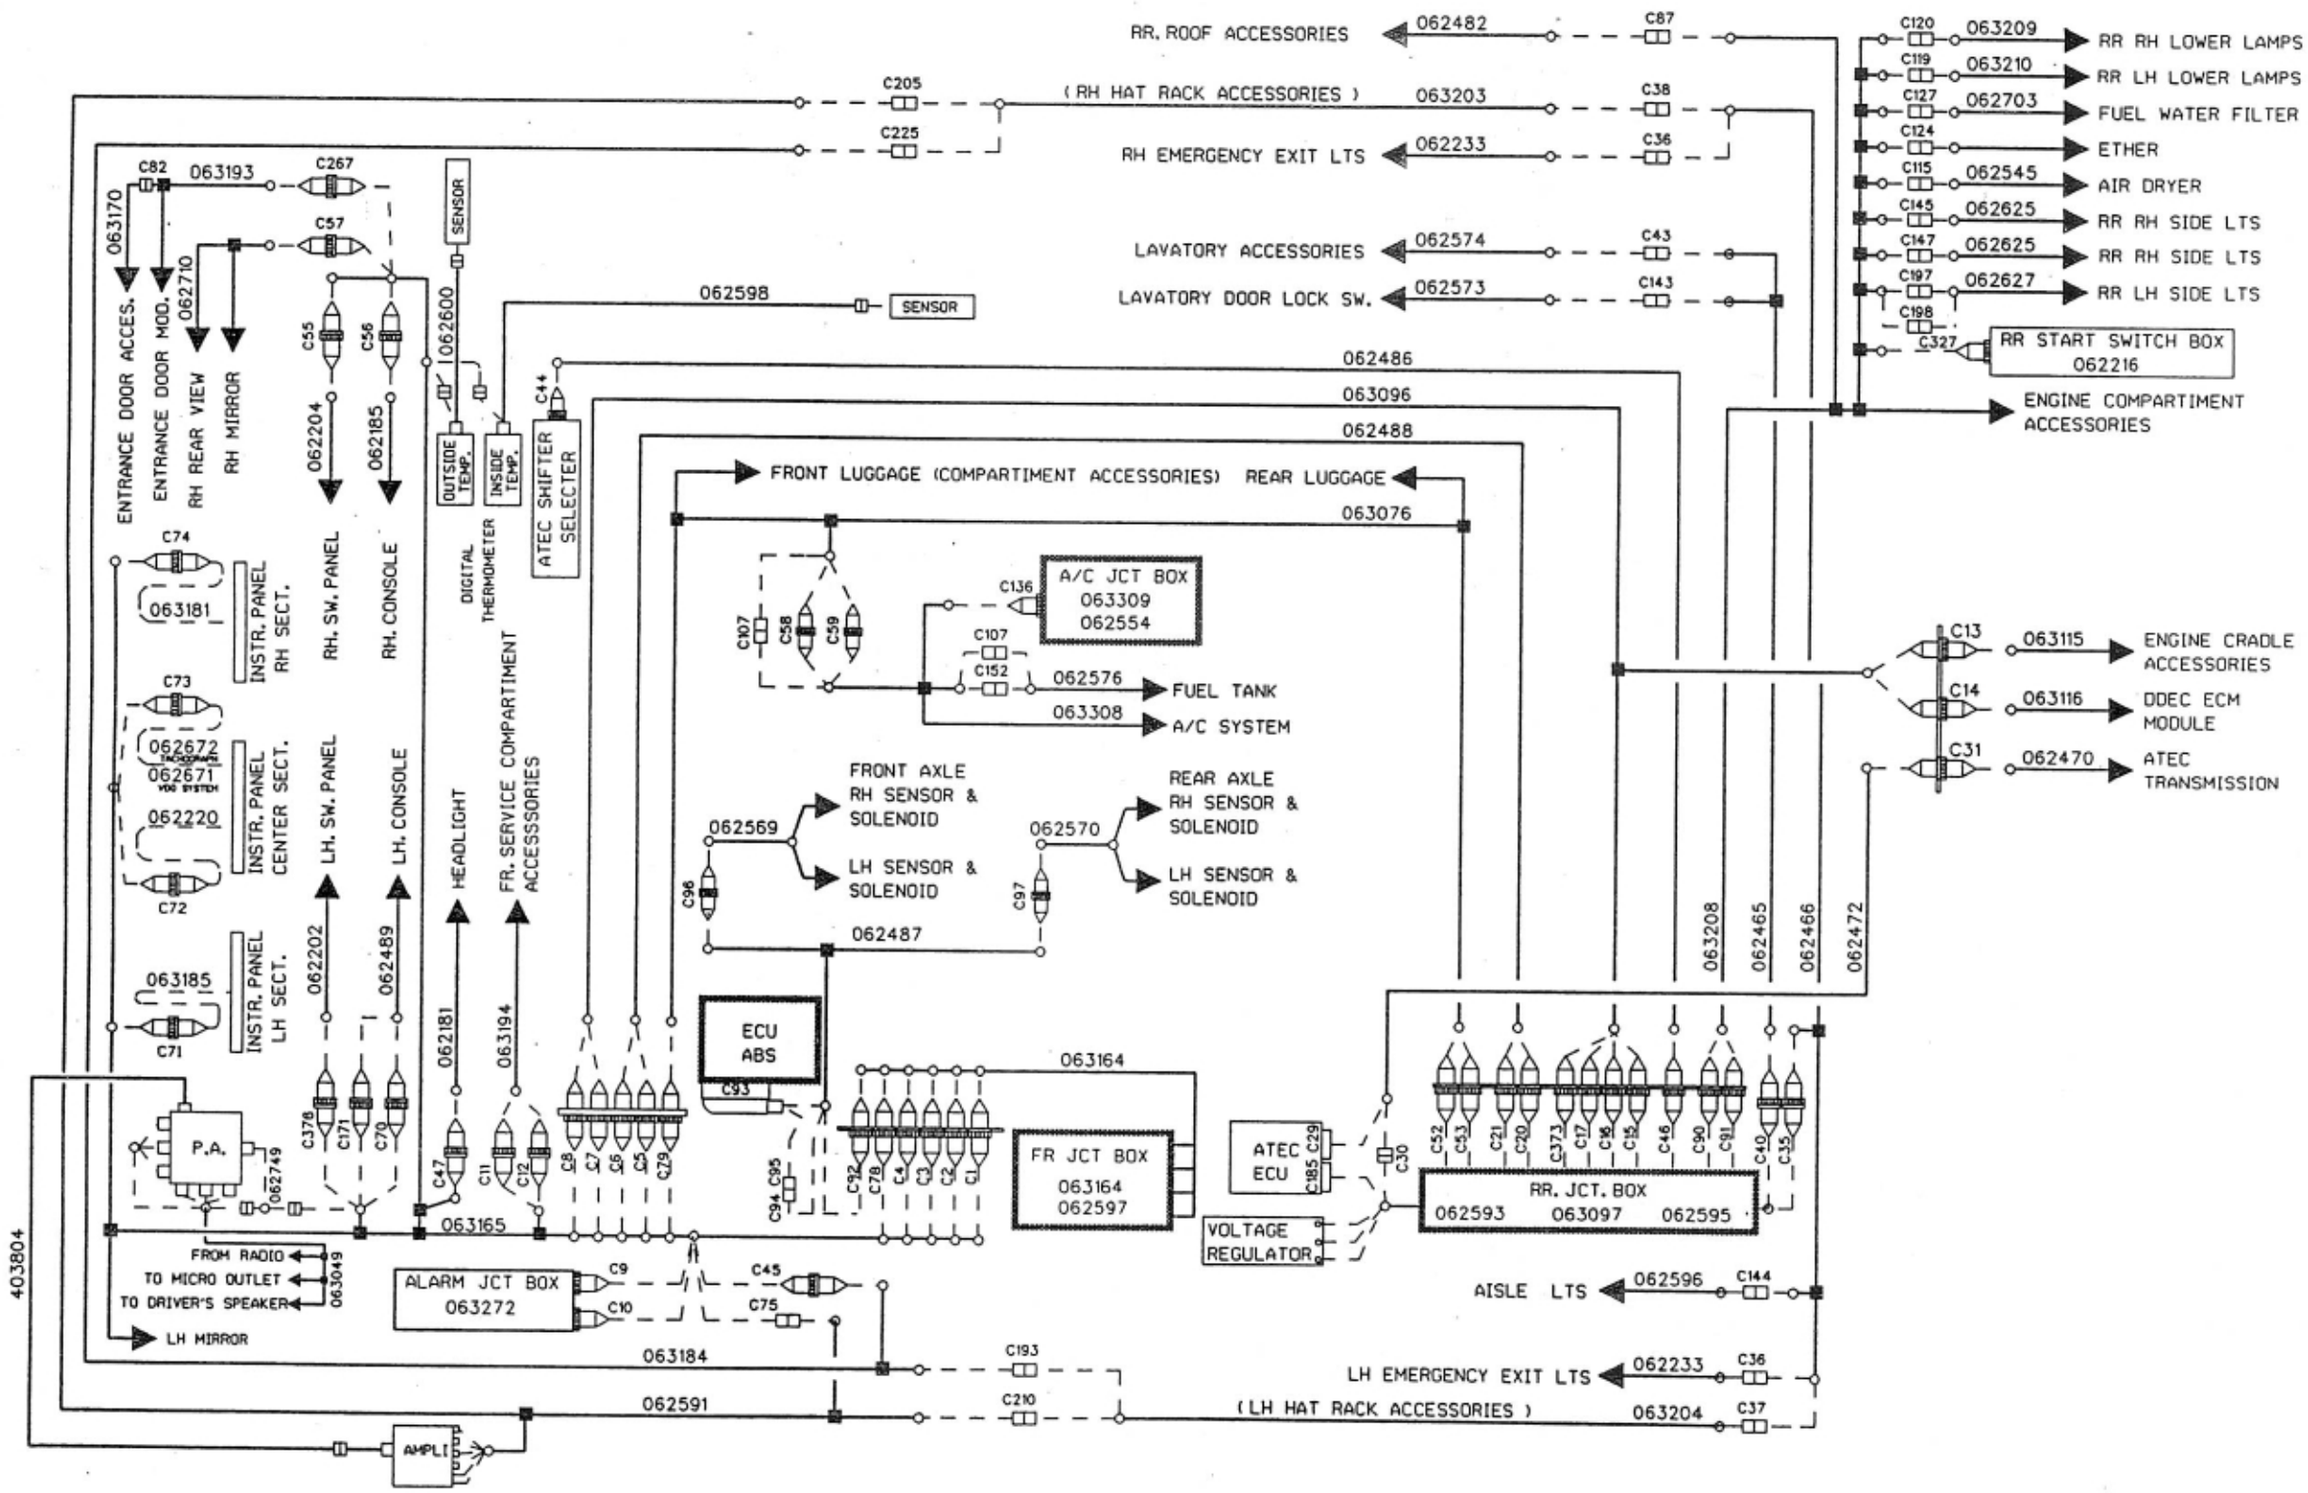

PREVOST CAR inc.	WIRING DIAGRAM	NO: D060783	REVISION DATE 94-04-05	P. C

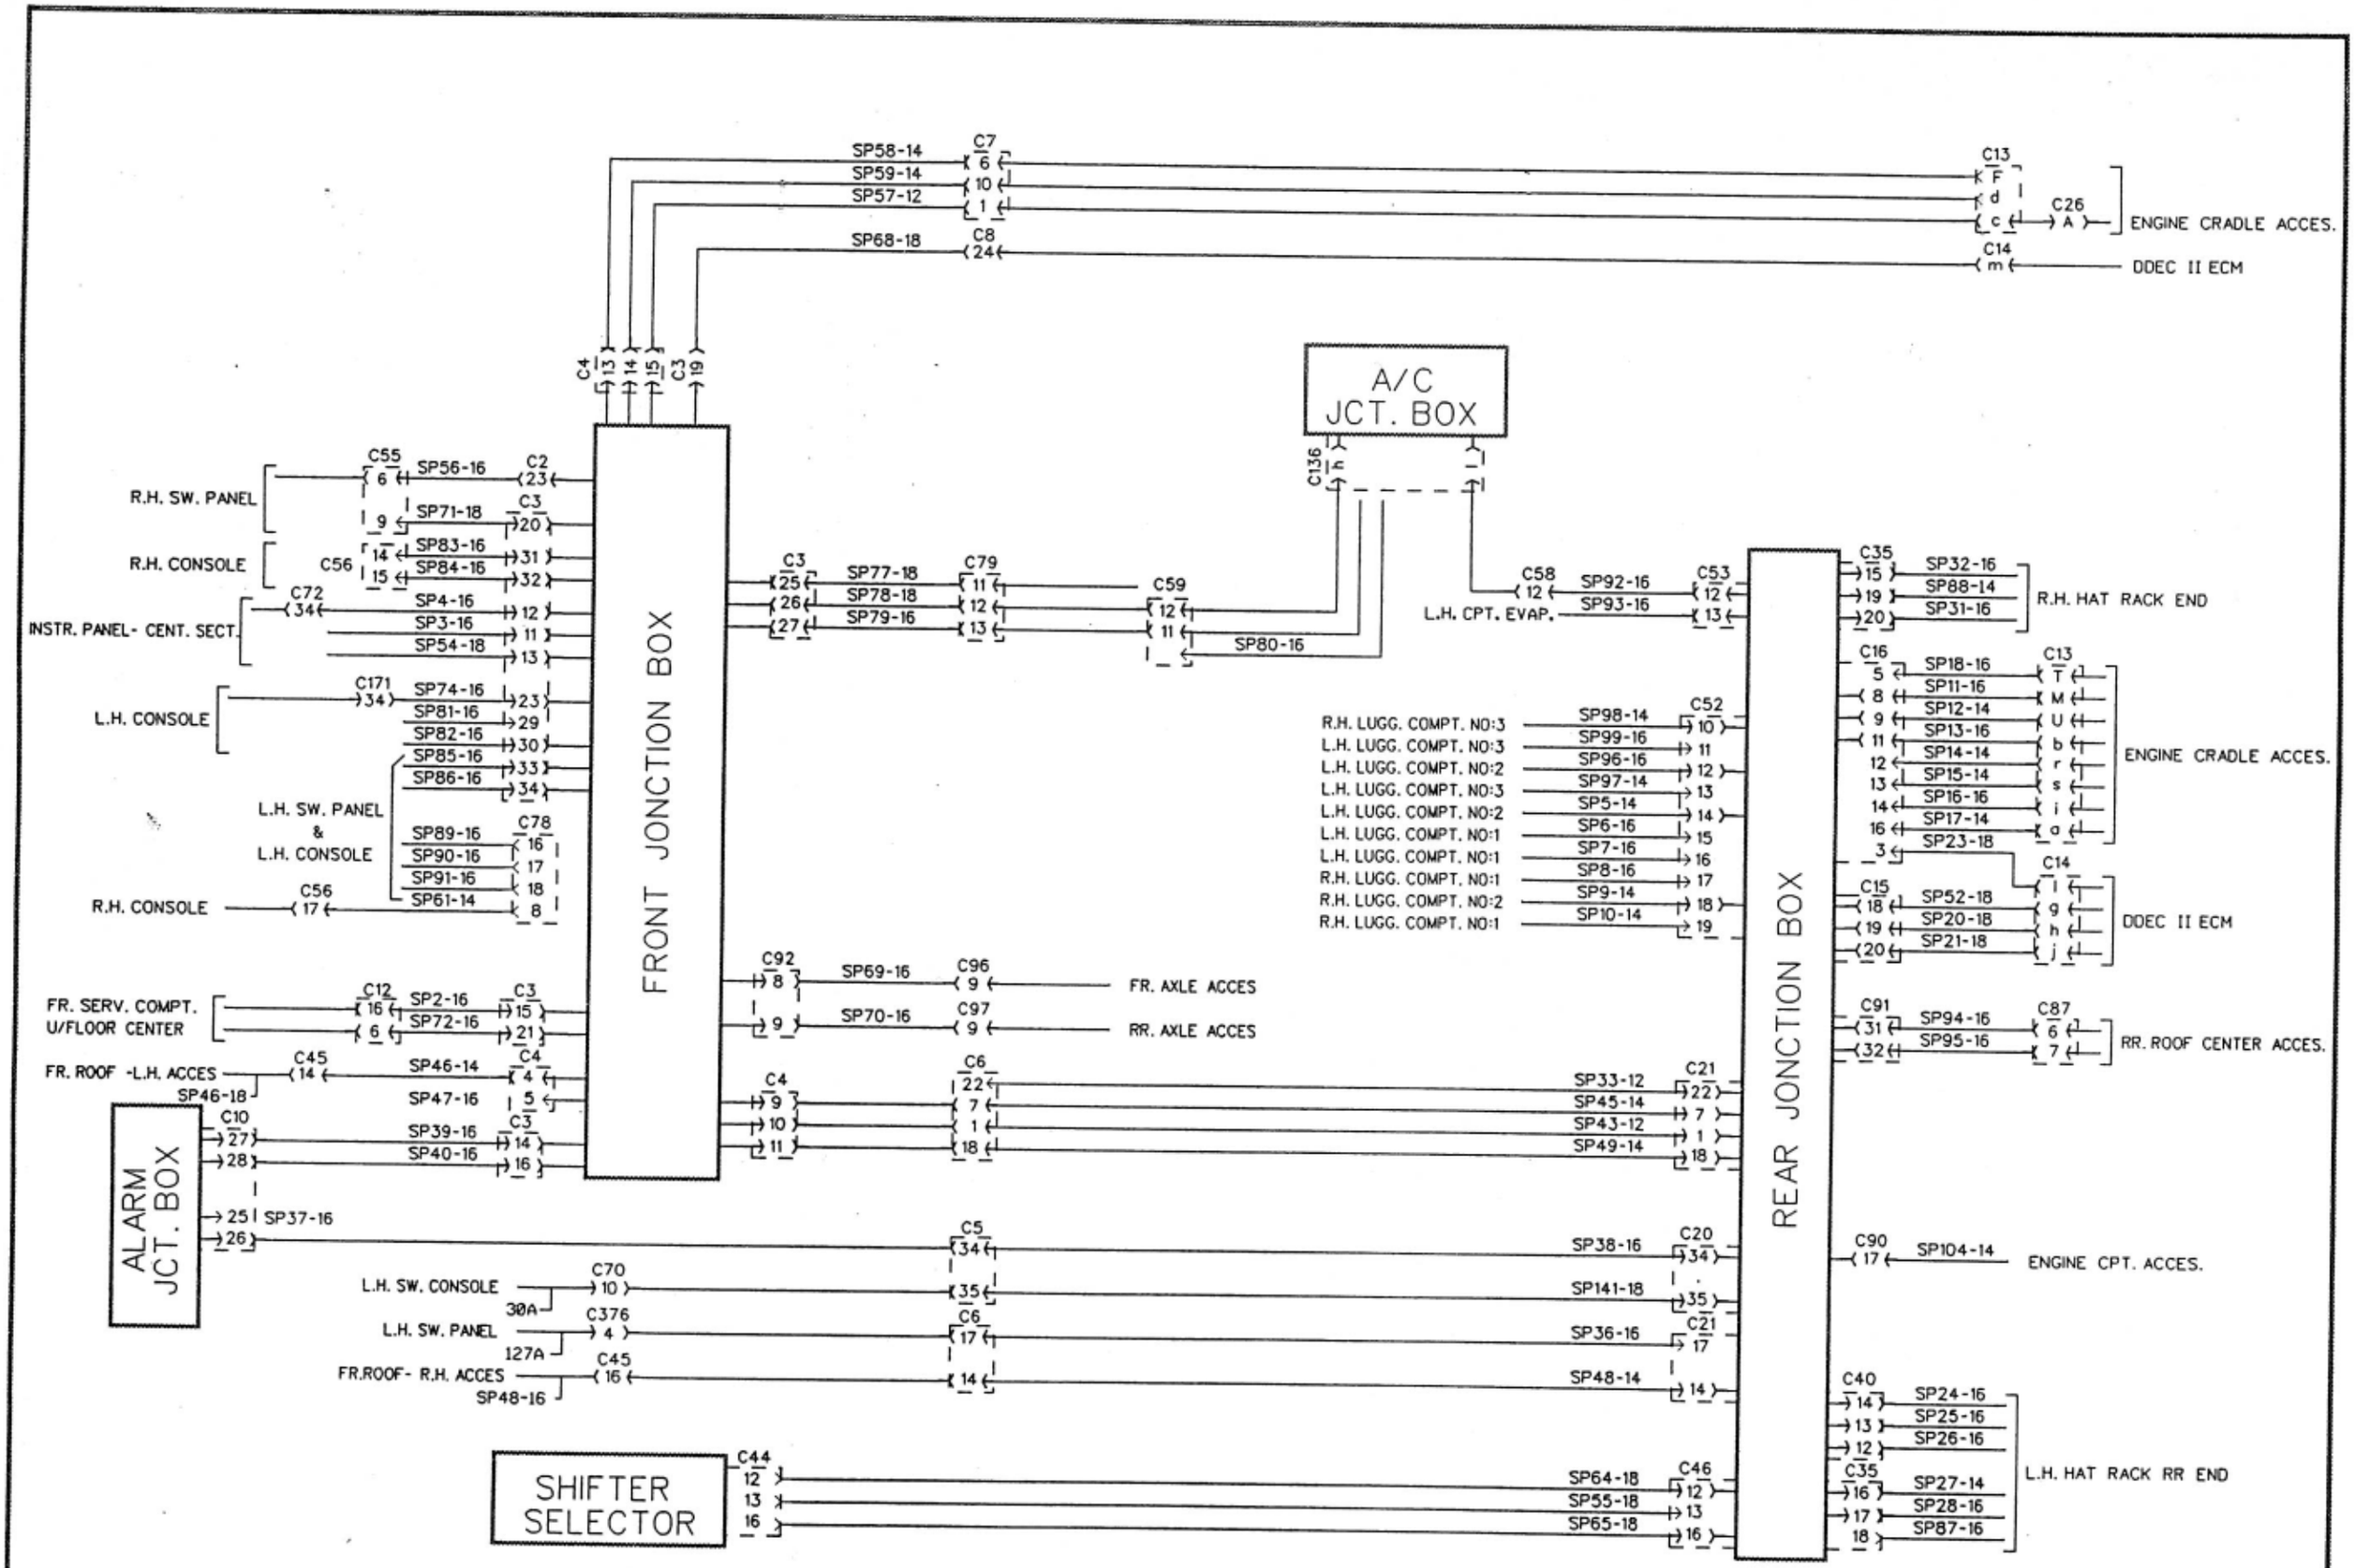

PREVOST CAR inc.	WIRING DIAGRAM	NO: D060783	REVISION DATE 92/10/30	P. D

CIRCUIT NUMBER CODE

No.	SYSTEM
0	IC - INVERTER CPT GRD
0	GALLEY GRD
0	PB - POWER BOX GRD
0	CONDENSER CPT GRD
0	RS - LUG. CPT ACCES. GRD
0	A/C - A/C JCT BOX GRD
0	GALLEY GRD
0	FJB - FR JCT BOX GRD
0	GALLEY GRD
0	VIDEO GRD
0A	A/C - A/C JCT BOX GRD
0A	FRS - FR ROOF ACCES. GRD
0A	RS - LUG. CPT ACCES. GRD
0A	AJB - ALARM JCT BOX GRD
0A	FJB - FR JCT BOX GRD
0AA	RS - VOLTAGE REGULATOR GRD
0AB	RS - RR JCT BOX GRD
0B	EC - ENGINE GRD
0B	FRS - FR ROOF HEAT WIND GRD
0B	FS - FR ROOF ACCES. GRD
0B	RS - LUG. CPT ACCES. GRD
0B	A/C - A/C JCT BOX GRD
0B	FJB - FR JCT BOX GRD
0BE	RJB - BAT. EQUAL. BAT GRD
0C	EC - STARTER MOTOR GRD
0C	BAT. EQUALIZER GRD
0C	FS - SERV. CPT ACCES. GRD
0C	RS - ENGINE ACCES. GRD
0C	RJB - SPEED SW. BATT. GRD
0D	FS - SERV. CPT ACCES. GRD
0D	RS - HAT RACK ACCES. LH GRD
0E	FS - FR LAMPS GRD
0E	RS - HAT RACK ACCES. LH GRD
0F	RS - HAT RACK ACCES. RH GRD
0G	RS - HAT RACK ACCES. RH GRD
0G	FS - INSTR. PANEL LH GRD
0H	FS - INSTR. PANEL CENT GRD
0H	RS - LAVATORY ACCES. GRD
0I	FS - INSTR. PANEL RH GRD
0J	FS - SW CONSOLE LH GRD
0J	RS - RR ROOF ACCES. GRD
0K	BAT. EQUALIZER GRD GRD
0K	RS - RR ROOF ACCES. GRD
0L	RS - ENGINE CPT ACCES. GRD
0L	FS - UNDER DASH RH GRD
0LA	ENTRANCE DOOR (SEDAN) GRD
0M	RS - ENGINE CPT ACCES. GRD
0M	FS - UNDER DASH RH GRD
0N	FS - UNDER DASH RH GRD
0N	RS - ENGINE CPT ACCES. GRD
0P	FS - ALARM JCT BOX GRD
0P	RS - ENGINE CPT ACCES. GRD
0R	FS - UNDER DASH LH GRD
0R	RS - ENGINE CPT ACCES. GRD
0S	RS - RR JCT BOX GRD
0SS	SOUNS SYSTEM BATT. GRD
0ST	RS - START. SUPPRESSOR GRD
0SA	SOUND SYSTEM BATT. GRD
0T	FS - LUG. CPT ACCES. GRD
0T	RS - RR JCT BOX GRD
0U	RR JCT BOX CPT GRD STUD
0V	RR JCT BOX CPT GRD STUD
0V1	RR JCT BOX CPT GRD STUD
0W	FS - UNDER DASH CENT GRD
0W	DDEC-COOL LEVEL PROBE GRD
0X	FR JCT BOX CPT GRD STUD
0X	RJB - COOL. LVL BATT. GRD
0Y	RS - RR JCT BOX GRD
0Y	RS - DRIVE AXLE ACCES. GRD
0Z	FR JCT BOX CPT GRD STUD
0Z	RR JCT BOX CPT GRD STUD
0Z1	RR JCT BOX CPT GRD STUD
00	RR JCT BOX CPT BATT. GRD
00	RJB - CRUISE CTR BATT. GRD
1	TACHO SYSTEM
2B	A/C & HEAT SYSTEM-COOL 1 SIGN
2C	A/C & HEAT SYSTEM-LO PRESS SW
2D	A/C & HEAT SYSTEM-LO PRESS TT LT
4	HOSTESS & PASSENGER CHIME
4A	HOSTESS & PASSENGER CHIME
4B	PASSENGER CHIME
4C	HOSTESS CHIME
5	INTERIOR LTS-AISLE & EMERG. EXIT
5	UPPER WINDSHIELD DEFROSTER
5D	UPPER WINDSHIELD DEFROSTER
5E	UPPER WINDSHIELD DEFROSTER
5N	INTERIOR LTS-EMERGENCY EXIT
6	INTERIOR LTS-AISLE
7A	SPEED SW 5 MPH N/O
7B	ENTRANCE DOOR (SEDAN)
7C	ENTRANCE DOOR (SEDAN)
7D	ENTRANCE DOOR (SEDAN)
7DA	ENTRANCE DOOR (SEDAN)
7DB	ENTRANCE DOOR (SEDAN)
8	TACHOMETER GRD SHIELD
9	INTERIOR LTS-ENGINE CPT
9A	INTERIOR LTS-ENGINE CPT
9E	INTERIOR LTS-FR SERVICE CPT
9F	INTERIOR LTS-FR SERVICE CPT
10	INTERIOR LTS-LUGGAGE CPT
10A	INTERIOR LTS-LUGGAGE CPT
10B	INTERIOR LTS-LUGGAGE CPT
10D	INTERIOR LTS-LUGGAGE CPT
10F	INTERIOR LTS-LUGGAGE CPT
10H	INTERIOR LTS-LUGGAGE CPT
10K	INTERIOR LTS-LUGGAGE CPT
10R	INTERIOR LTS-LUGGAGE DOOR AJAR
11	FR DESTINATION SIGN
11A	FR DESTINATION SIGN
11B	FR DESTINATION SIGN
11C	FR DESTINATION SIGN
11D	FR DESTINATION SIGN
11E	FR DESTINATION SIGN
11K	FR DESTINATION SIGN
12	BAT DRAWER 12V BATTERY
12	FR JCT BOX 12V DISC SW
12A	FR JCT BOX 12V DISC SW
12A	RR JCT BOX 12V DISC SW
12B	FR JCT BOX 12V DISC SW
12BE	BAT. EQUALIZER MONITOR
12C	12V BAT. EQUALIZER
12C	FR JCT BOX 12V DISC SW
12C	RR JCT BOX 12V DISC SW
12D	RR JCT BOX 12V DISC SW
12D	FR JCT BOX 12V HOT WIRE
12D	PWR DRAWER 12V BATTERY
12E	PWR DRAWER 12V DISC SW
12E	FR JCT BOX 12V DISC SW
12E	RR JCT BOX 12V DISC SW
12F	FR JCT BOX 12V DISC SW
12F	RR JCT BOX 12V DISC SW
12G	RR JCT BOX 12V DISC SW
12I	RR JCT BOX 12V IGNITION
12I	FR JCT BOX 12V IGNITION
12IA	FR JCT BOX 12V IGNITION
12K	12V BAT. EQUALIZER
12P	FR JCT BOX 12V IGNITION
12PV	INVERTER CPT 12V DISC SW
12SS	FJB TO BAT 12V HOT WIRE
12T	RR JCT BOX 12V DISC SW
12V	RR JCT BOX 12V DISC SW
12V2	RR JCT BOX 12V DISC SW
12V3	RR JCT BOX 12V DISC SW
12VD	FJB TO BAT 12V HOT WIRE
12VF	PWR DRAWER 12V FJB & IC
12VIR	RR JCT BOX 12V IGNITION
12VR	PWR DRAWER 12V TO RJB
12W	ENTRANCE DOOR (SEDAN)
12WA	ENTRANCE DOOR (SEDAN)
12X	FR JCT BOX 12V DISC SW
12X1	FR JCT BOX 12V DISC SW
12Y	FR JCT BOX 12V DISC SW
13A	ALARM & SIGNAL-LO AIR PRIM.
13B	ALARM & SIGNAL-LO AIR SEC.
14	LAVATORY-FLUSHING PUMP
14A	LAVATORY-FLUSHING PUMP
15	EXTERIOR LTS-MULTI FUNC LEVEL
15A	WIPER & WASHER UPPER WINDSHIELD
16	SPEEDO - SIGN
16S	SPEEDO - TRANSMITTER
16T	SPEEDO - TRANSMITTER
17	EXTERIOR LTS-FLASHER UNIT
17A	EXTERIOR LTS-FLASHER UNIT
19	DIFFERENTIAL OIL TEMP
20	SPEEDO - NEGATIVE SIGN
20T	SPEEDO - NEGATIVE SIGN
21	EXTERIOR LTS-DIRECTIONNAL LH
21A	EXTERIOR LTS-DIRECTIONNAL LH
21B	EXTERIOR LTS-HAZARD
21C	EXTERIOR LTS-CORNERING LH
21H	EXTERIOR LTS-DIRECTIONNAL LH
21K	EXTERIOR LTS-CORNERING
21N	EXTERIOR LTS-CORNERING LH
21P	EXTERIOR LTS-CORNERING LH
23	EXTERIOR LTS-DIRECTIONNAL RH
23	EXTERIOR LTS-DIRECTIONNAL RH
23A	EXTERIOR LTS-DIRECTIONNAL RH
23B	EXTERIOR LTS-DIRECTIONNAL RH
23C	EXTERIOR LTS-CORNERING RH
23N	EXTERIOR LTS-CORNERING RH
23P	EXTERIOR LTS-CORNERING RH
24	BAT DRAWER 24V BATTERY
24	BOOSTER BLOCK 24V DISC SW
24	ENGINE WALL 24V DISC SW
24	FR JCT BOX 24V DISC SW
24A	RR JCT BOX 24V DISC SW
24A	FR JCT BOX 24V DISC SW
24B	RR JCT BOX 24V DISC SW
24B	FR JCT BOX 24V DISC SW
24BE	RJB CPT-BAT EQ MONITOR HOT WIRE
24C	RR JCT BOX 24V DISC SW
24C	FR JCT BOX 24V DISC SW
24C	24V BAT. EQUALIZER
24D	BAT DRAWER 24V HOT WIRE
24D	FR JCT BOX 24V HOT WIRE
24D	RR JCT BOX 24V DISC SW
24DP	A/C JCT BOX 24V HOT WIRE
24E	BAT DRAWER 24V DISC SW
24E	FR JCT BOX 24V DISC SW
24E	RR JCT BOX 24V DISC SW
24F	BAT DRAWER 24V DISC SW
24F	FR JCT BOX 24V DISC SW
24G	FR JCT BOX 24V DISC SW
24G	RR JCT BOX 24V DISC SW
24H	FR JCT BOX 24V DISC SW
24H	RR JCT BOX 24V DISC SW
24H	STARTER SOL. 24V DISC SW
24I	FR JCT BOX 24V IGNITION
24I	RR JCT BOX 24V IGNITION
24IA	FR JCT BOX 24V IGNITION
24IA	RR JCT BOX 24V IGNITION
24IB	FR JCT BOX 24V IGNITION
24IB	RR JCT BOX 24V IGNITION
24IC	FR JCT BOX 24V IGNITION
24ID	FR JCT BOX 24V IGNITION
24IF	FR JCT BOX 24V IGNITION
24J	FR JCT BOX 24V DISC SW
24K	FR JCT BOX 24V DISC SW
24K	24V BAT. EQUALIZER
24P	FR JCT BOX 24V DISC SW
24PS	GALLEY FRIGO 24V HOT WIRE
24PV	INVERTER CPT 24V DISC SW
24T	RR JCT BOX 24V DISC SW
24V	RR JCT BOX 24V DISC SW
24V1	RR JCT BOX 24V DISC SW
24V2	RR JCT BOX 24V DISC SW
24V3	RR JCT BOX 24V DISC SW
24V4	RR JCT BOX 24V DISC SW
24VF	BAT DRAWER 24V SW TO FJB & IC
24VF	INVERTER CPT 24V DISC SW
24VR	BAT DRAWER 24V DISC SW TO RJB
25	12VAC GEN RLY ON SIGNAL
25A	NOT GENERATOR-WARNING LT
25B	EXTERIOR LTS-DAYTIME RUN LTS
26	DRIVER'S WINDOW LIFTER
26	CIGAR LIGHTER

CIRCUIT NUMBER CODE Page E : 1

CIRCUIT NUMBER CODE Page E : 2

No.	SYSTEM
26B	DRIVER'S WINDOW LIFTER
26C	DRIVER'S WINDOW LIFTER
27	LAVATORY-EMERGENCY SONALERT
28A	A/C & HEAT SYSTEM-HI PRESSURE
29	A/C & HEAT SYSTEM-DRIVER'S HTR
29A	A/C & HEAT SYSTEM-DRIVER'S HTR
29B	A/C & HEAT SYSTEM-DRIVER'S HTR
30A	GALLEY
31A	A/C & HEAT SYSTEM-UNLOADER
31B	A/C & HEAT SYSTEM-UNLOADER
31B	WIPER & WASHER SYSTEM
31C	WIPER & WASHER SYSTEM
31D	WIPER & WASHER SYSTEM
31E	WIPER & WASHER SYSTEM
31J	WIPER & WASHER SYSTEM
31X	WIPER & WASHER SYSTEM
32	EXTERIOR LTS-BACK-UP
32B	EXTERIOR LTS-BACK-UP
32C	BACK-UP PWR & SIGNAL
32D	BACK-UP ALARM
32E	BACK-UP ALARM
32F	BACK-UP MONITOR
35	ENTRANCE DOOR (SEDAN)
35B	ENTRANCE DOOR (SEDAN)
35BB	ENTRANCE DOOR (SEDAN)
35D	ENTRANCE DOOR (SEDAN)
36	JACOB BRAKE SYSREM
36A	JACOB BRAKE SYSREM
38	INTERIOR LTS-24V FLUORESCENT
38A	INTERIOR LTS-24V FLUORESCENT
38C	INTERIOR LTS-24V FLUORESCENT
38D	INTERIOR LTS-24V FLUORESCENT
39	INTERIOR LTS-24V LH CONSOLE SW
39A	INTERIOR LTS-DRIVER"S LTS
41	A/C & HEAT SYSTEM-COND FAN MOT
41A	A/C & HEAT SYSTEM-COND FAN MOT
41B	A/C & HEAT SYSTEM-COND FAN MOT
42	A/C & HEAT SYSTEM-COND FAN MOT
42A	A/C & HEAT SYSTEM-COND FAN MOT
44	EXTERIOR LTS-FOG
44A	EXTERIOR LTS-FOG
44B	EXTERIOR LTS-FOG
44C	EXTERIOR LTS-FOG & HAZARD
45B	A/C & HEAT SYSTEM-HEAT 3 SIGN
45D	A/C & HEAT SYSTEM-WATER VALVE
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN
45G	A/C & HEAT SYSTEM-DRIVER'S HTR
45H	A/C & HEAT SYSTEM-DRIVER'S HTR
45W	A/C & HEAT SYSTEM-DRIVER'S HTR
46	EXTERIOR LTS-MARKER
46A	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46B	EXTERIOR LTS-MARKER
46C	EXTERIOR LTS-MARKER
47	A/C & HEAT SYSTEM-DRIVER'S HTR
48	ENTRANCE DOOR (SEDAN)
49	ENTRANCE DOOR (SEDAN)
50	AIR DRYER
52	ALARM & SIGNAL-ELEC. HORN
52A	ALARM & SIGNAL-ELEC. HORN
53	ALARM & SIGNAL-ELEC. HORN
53A	WIPER & WASHER SYSTEM
53B	WIPER & WASHER SYSTEM
53C	WIPER & WASHER SYSTEM
53E	WIPER & WASHER SYSTEM
53J	WIPER & WASHER SYSTEM
55	EXTERIOR LTS-HI BEAM
57	EXTERIOR LTS-HI BEAM
57A	EXTERIOR LTS-HI BEAM
57A	A/C & HEAT SYSTEM-WATER PUMP
57B	A/C & HEAT SYSTEM-WATER PUMP
57C	PRE-HEAT WATER HEATER
58	EXTERIOR LTS-LO BEAM
58A	EXTERIOR LTS-LO BEAM
58B	EXTERIOR LTS-LO BEAM
58E	EXTERIOR LTS-LO BEAM
59A	JACOB BRAKE SYSTEM
61	EXTERIOR LTS-24V FEED SW
61A	EXTERIOR LTS-HEAD SIGNAL
62	LAVATORY-OCCUPIED LT
62A	LAVATORY-FLUOR LT
62B	LAVATORY-FLUOR LT
62E	LAVATORY-OCCUP & FLUOR LT
63	EXTERIOR LTS-CLEARANCE
63A	EXTERIOR LTS-CLEARANCE
63B	EXTERIOR LTS-CLEARANCE
63C	EXTERIOR LTS-MARKER SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL
63E	EXTERIOR LTS-CLEARANCE
63F	EXTERIOR LTS-MARKER BLINKER
63H	EXTERIOR LTS-TAIL
67	A/C & HEAT SYSTEM
67A	A/C & HEAT SYSTEM
67B	A/C & HEAT SYSTEM
67C	A/C & HEAT SYSTEM & HEAT WINDS.
67K	A/C & HEAT SYSTEM-COND FAN CTR
67L	A/C & HEAT SYSTEM-COND FAN CTR
67V	A/C & HEAT SYSTEM-WATER VALVE
68	DDEC-COOLANT LEVEL PROBE
70	INTERIOR LTS-HAT RACK & RR RUN.
72	SUN VISOR-FEEDING
72A	SUN VISOR-RH
72B	SUN VISOR-RH
72C	SUN VISOR-LH
72D	SUN VISOR-LH
73	LAVATORY-FEEDING
74	INTERIOR LTS-READING RH
74A	INTERIOR LTS-READING RH
74D	INTERIOR LTS-READING SIGNAL
75	INTERIOR LTS-READING LH
75A	INTERIOR LTS-READING LH
76	FUEL TANK GAUGE
76B	LOW FUEL LT & ETHER COLD START
76C	LOW FUEL LT
77	A/C & HEAT SYSTEM-HI PRESSURE
77A	A/C & HEAT SYSTEM-DRIVER'S HTR
77B	A/C & HEAT SYSTEM-COMPRESSOR
77C	A/C & HEAT SYSTEM-COMPRESSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR
81	EXTERIOR LTS-STOP SW
81A	EXTERIOR LTS-STOP & ABS
82	EXTERIOR LTS-STOP SIGNAL
82A	EXTERIOR LTS-STOP SIGNAL
82B	EXTERIOR LTS-STOP LTS
82C	EXTERIOR LTS-STOP & ABS
82D	EXTERIOR LTS-STOP SW
82E	EXTERIOR LTS-STOP & ABS
82H	EXTERIOR LTS-STOP LTS
82J	EXTERIOR LTS-STOP LTS
82K	EXTERIOR LTS-STOP PARK BRK
82W	EXTERIOR LTS-STOP & ABS
83	ENGINE CTR-KEY SW ACCES SIGN
84	ENGINE CTR-KEY SW START SIGN
85	ENGINE CTR-KEY SW IGNITION SIGN
85	24V IGNITION SIGNAL
85A	24V IGN DASH INSTRUMENTATION
85B	ENGINE CTR-24V IGNITION
85C	PARKING BRAKE SWITCH
85F	LO AIR SONALERT
85W	24V IGN ANTI SKID
85X	24V IGN ANTI SKID
85Y	ANTI SKID-WARNING LT
86	ENGINE CTR-STARTER SOL SIGN
86A	ENGINE CTR-STARTER SOL SIGN
88	ENGINE CTR-RR START SIGNAL
89	ENGINE CTR-RR START SIGNAL
90A	A/C & HEAT SYSTEM-COND FAN MOT
90B	A/C & HEAT SYSTEM-COND FAN MOT
90B	ENGINE CTR-MAST KEY SW FEED
90C	A/C & HEAT SYSTEM-COND FAN MOT
90D	A/C & HEAT SYSTEM-EVAP FAN MOT
90F	CHARG SYST-VOLTAGE REGUL. "B"
90G	A/C & HEAT SYSTEM-COND FAN MOT
90H	A/C & HEAT SYSTEM-EVAP FAN MOT
90J	A/C & HEAT SYSTEM-COND FAN MOT
91	PARKING BRAKE SW SIGNAL
91A	DDEC-FAST IDLE SIGNAL
92	BATTERY EQUALIZER-CHECK BALANCE
93	BATTERY EQUALIZER-CHECK LO/HI
95A	JACOB BRAKE SYSTEM
97	TACHOMETER-NOT USE
100	INTERIOR LTS-GENERAL
100A	INTERIOR LTS-GENERAL
100B	INTERIOR LTS-GENERAL
101	ATEC TRANSM-TO ECU
103	LOW BUOY
104	ATEC DDEC INTERFACE
105	ATEC TRANSM-TO ECU
106A	ATEC DDEC INTERFACE
107	ATEC TRANSM-TO ECU
107	CHARG SYST-VOLTAGE REGUL. "F"
108	ATEC TRANSM-TO ECU
109	ATEC TRANSM-TO ECU
110	ATEC TRANSM-TO ECU
110	ALARM & SIGNAL-WATER TEMP
111	ATEC TRANSM-TO ECU
112	ATEC TRANSM-SPEED SENSOR
113	ATEC TRANSM-SPEED SENSOR
113	ALARM & SIGNAL-OIL PRESS
114	ATEC TRANSM-TO ECU
114	INTERIOR LTS-DASH LT REGUL.
114A	INTERIOR LTS-DASH LT
114B	INTERIOR LTS-DASH LT REGUL.
114D	INTERIOR LTS-DASH LT REGUL.
114E	INTERIOR LTS-DASH LT REGUL.
115	ATEC TRANSM-TO ECU
115	DDEC-COOLANT LEVEL MODULE
116	ATEC TRANSM-TO ECU
116B	A/C & HEAT SYSTEM-DRIVER'S HTR
117	ATEC TRANSM-TO ECU
117A	ALARM & SIGNAL-TRANSM OIL TEMP
118	ATEC TRANSM-TO ECU
119	ATEC TRANSM-TO ECU
120	ATEC TRANSM-TO ECU
121	ATEC TRANSM-TO ECU
122	ATEC TRANSM-TO ECU
122	A/C & HEAT SYSTEM-DRIVER'S HTR
122	A/C & HEAT SYSTEM-FRESH AIR
122A	A/C & HEAT SYSTEM-FRESH AIR
123	ATEC TRANSM-TO ECU
123A	ALARM & SIGNAL-FIRE DETECTOR
123B	ALARM & SIGNAL-FIRE DETECTOR
124	ATEC DDEC INTERFACE
125	LAVATORY-FAN
125	GALLEY-LAMP
126	KNEELING SYSTEM
126A	KNEELING SYSTEM
126B	KNEELING SYSTEM
126C	KNEELING SYSTEM
126D	KNEELING SYSTEM
126F	KNEELING SYSTEM
126G	KNEELING SYSTEM
126K	KNEELING SYSTEM
126R	KNEELING SYSTEM
126T	KNEELING SYSTEM
127	PRE-HEAT WATER HEATER
127A	PRE-HEAT WATER HEATER
127W	PRE-HEAT WATER HEATER
128	PRE-HEAT WATER HEATER
128A	PRE-HEAT WATER HEATER
128B	PRE-HEAT WATER HEATER
128W	PRE-HEAT WATER HEATER
129	PRE-HEAT WATER HEATER
133	GALLEY-HEAT CONTAINERS
133A	GALLEY-HEAT CONTAINERS
133B	GALLEY-HEAT CONTAINERS
133C	GALLEY-HEAT CONTAINERS
134	GALLEY-HEAT CONTAINERS
134A	GALLEY-HEAT CONTAINERS
135	A/C & HEAT SYSTEM-AIR SENSOR
135A	A/C & HEAT SYSTEM-AIR SENSOR
135C	A/C & HEAT SYSTEM-AIR SENSOR
135D	A/C & HEAT SYSTEM-AIR SENSOR
136	GALLEY-ACCESSORIES
137	RR VIEW MIRROR (SPARTAN)

CIRCUIT NUMBER CODE Page E : 2

No.	SYSTEM
137A	RR VIEW MIRROR (SPARTAN)
137B	RR VIEW MIRROR (SPARTAN)
137C	RR VIEW MIRROR (SPARTAN)
137D	RR VIEW MIRROR (SPARTAN)
137E	RR VIEW MIRROR (SPARTAN)
137F	RR VIEW MIRROR (SPARTAN)
137G	RR VIEW MIRROR (SPARTAN)
138	ABS SYSTEM
138A	ABS SYSTEM
139	ABS SYSTEM
140	ABS SYSTEM
141	ABS SYSTEM
142	ABS SYSTEM
143	ABS SYSTEM
143A	ABS SYSTEM
144	ABS SYSTEM
144A	ABS SYSTEM
145	ABS SYSTEM
146	ABS SYSTEM
147	ABS SYSTEM
147	ETHER COLD START
147C	ETHER COLD START
148	ABS SYSTEM
149	ABS SYSTEM
149A	ABS SYSTEM
150	DDEC ECM BATTERY GRD
150A	DDEC ECM BATTERY GRD
151	ABS SYSTEM
151A	ABS SYSTEM
152	ABS SYSTEM
152A	ABS SYSTEM
153	ABS SYSTEM
154	ABS SYSTEM
156	ABS SYSTEM
156A	ABS SYSTEM
157	ABS SYSTEM
157A	ABS SYSTEM
157B	ABS SYSTEM
160	ALARM & SIGNAL-TAG PRESS SW
161	ATEC TRANSM-RETARDER
161A	ATEC TRANSM-RETARDER
161B	ATEC TRANSM-RETARDER
165	A/C & HEAT SYSTEM-TRANSMITER
165A	A/C & HEAT SYSTEM-TRANSMITER
165B	A/C & HEAT SYSTEM-TRANSMITER
165C	A/C & HEAT SYSTEM-TRANSMITER
165D	A/C & HEAT SYSTEM-TRANSMITER
166B	A/C & HEAT SYSTEM-EVAP. MOD.
167	A/C & HEAT SYSTEM-TEMP. CTR
167A	A/C & HEAT SYSTEM-TEMP. CTR
168	A/C & HEAT SYSTEM-HUMIDISTAT
168A	A/C & HEAT SYSTEM-HUMIDISTAT
170	LUGGAGE DOOR LOCK
170C	LUGGAGE DOOR LOCK
170E	LUGGAGE DOOR LOCK
170H	LUGGAGE DOOR LOCK
173	BACK-UP MONITOR
175	BACK-UP MONITOR
175A	BACK-UP MONITOR
175B	BACK-UP MONITOR
175C	BACK-UP MONITOR
180	DRIVER'S SEAT HEATER
180	DIGITAL THERMOMETER
180A	DRIVER'S SEAT HEATER
181	DIGITAL THERMOMETER
182	TWIN PYROMETER
182A	TWIN PYROMETER
183	TWIN PYROMETER
183A	TWIN PYROMETER
197	FUEL WATER FILTER
197A	FUEL WATER FILTER
197B	FUEL WATER FILTER
201	ATEC TRANSM-CHASSIS GRD
202	12V HOT WIRE
203	ATEC TRANSM-MEMORY
204	ATEC TRANSM-TO SHIFTER
205	ATEC TRANSM-SPEED SIGNAL
206	ATEC TRANSM-TO SHIFTER
207	ATEC TRANSM-TO DDL DATA
208	ATEC TRANSM-BATT GRD
209	ATEC TRANSM-BATT GRD
210	ATEC TRANSM-TO DDL GRD
211	ATEC TRANSM-RETARDER
211A	ATEC TRANSM-RETARDER
211B	ATEC RET. & DDEC CRUISE-24V IGN
211C	ATEC RET. & DDEC CRUISE-24V IGN
212	ATEC TRANSM-TO SHIFTER
213	ATEC RETARDER SIGNAL GRD
214	ATEC OR SW-BACK UP SIGNAL GRD
215	ATEC WARNING SIGNAL GRD
215A	ATEC CHECK TRANSM T.T.LT.
216	ATEC TRANSM-TO DDL TEST
218	ATEC TRANSM-TO SHIFTER
219	ATEC TRANSM-TO SHIFTER
220	ATEC TRANSM-TO SHIFTER
221	ATEC TRANSM-TO SHIFTER
222	ATEC DDEC-THROTTLE INTERFACE
231	ATEC OR SW-NEUTRAL SIGNAL GRD
235	ATEC TRANSM-24V IGNITION
240	DDEC-ECM 12V FEEDING
241	DDEC-ECM 12V FEEDING
250	VIDEO SYSTEM & TV RECEIVER
251	VIDEO SYSTEM & TV RECEIVER
252	VIDEO SYSTEM & TV RECEIVER
253	GALLEY-MICROWAVE
254	GALLEY-12V FRIGO NORCOLD
254A	GALLEY-FRIGO
255	GALLEY-COFEEMAKER
255A	GALLEY-COFEEMAKER
257	WINDSHIELD HEATED
257A	WINDSHIELD HEATED
257B	WINDSHIELD HEATED
258	WINDSHIELD HEATED
258A	WINDSHIELD HEATED
259	WINDSHIELD HEATED
259A	WINDSHIELD HEATED
417	DDEC-PEDAL LIMIT. SPEED
419	DDEC-CHECK ENG T.T.LT.
439	DDEC-12V IGNITION
451	DDEC-DDL
505	DDEC-TACHO DRIVE SIGNAL
508	DDEC-JACOB SIGNAL GRD
508A	DDEC-JACOB SIGNAL GRD CLUTCH
509	DDEC-STOP ENG T.T.LT.
510	DDEC-FAST IDLE SIGNAL
523	DDEC-SPEED GOVERNOR SIGN POS
524	DDEC-ACCEL.ENABL SIGN GRD
525	DDEC-FAST IDLE SIGNAL
528	DDEC-STOP ENG OVERRIDE
531	DDEC-CRUISE CUT OUT
538	DDEC-CRUISE MAINE
538A	DDEC-CRUISE CANCEL SIGN
538B	DDEC-CRUISE CANCEL SIGN
541	DDEC-CRUISE SET SW
542	DDEC-CRUISE SET SW
543	DDEC-CRUISE CUT IN
544	DDEC-CRUISE RESUME SW
545	DDEC-CRUISE RESUME SW
555	DDEC-CRUISE ANABLE T.T.LT.
556	DDEC-SPEED SIGNAL POS
557	DDEC-SPEED SIGNAL NEG
900	DDEC-DDL SERIAL DATA LINK POS
901	DDEC-DDL SERIAL DATA LINK NEG
902	DDEC-DDL CRANK POSITION SIGNAL
903	DDEC-CRUISE SPEED SIGNAL
908	ATEC DDEC-THROTTLE INTERFACE
908A	DDEC-HYD. MODULATOR SOL. VALVE
908W	DDEC-HYD. MODULATOR SOL. VALVE
916	DDEC-PEDAL SENSOR SUPPLY 5V
952	DDEC-PEDAL SENSOR RETURN
953	DDEC-SPEED GOVERNOR BATT GRD
972	DDEC-TACHOMETER #2
B00	RR JCT BOX CPT BATT GRD
B000	RR JCT BOX CPT BATT GRD
BA	INTERIOR LTS-110V FLUORESCENT
BB	INTERIOR LTS-110V FLUORESCENT
D1	SOUND SYSTEM-FR RH SPEAKER
D2	SOUND SYSTEM-FR RH SPEAKER
D3	SOUND SYSTEM-FR RH SPEAKER
D4	SOUND SYSTEM-RR RH SPEAKER
D5	SOUND SYSTEM-RR RH SPEAKER
D6	SOUND SYSTEM-RR RH SPEAKER
D9	SOUND SYSTEM-DRIVER SPEAKER
D10	SOUND SYSTEM-DRIVER SPEAKER
G1	SOUND SYSTEM-FR LH SPEAKER
G2	SOUND SYSTEM-FR LH SPEAKER
G3	SOUND SYSTEM-FR LH SPEAKER
G4	SOUND SYSTEM-RR LH SPEAKER
G5	SOUND SYSTEM-RR LH SPEAKER
G6	SOUND SYSTEM-RR LH SPEAKER
G9	SOUND SYSTEM-DRIVER SPEAKER
G10	SOUND SYSTEM-DRIVER SPEAKER
L0	RS - ENGINE ACCES GRD.
L0A	RS - LAVATORY ACCES GRD.
L1	VIDEO SYSTEM-110V INVERTER
L1A	INTERIOR LTS-110V FLUORESCENT
L1B	INTERIOR LTS-110V FLUORESCENT
L2	INTERIOR LTS-110V FLUORESCENT
L2A	INTERIOR LTS-110V FLUORESCENT
L2B	INTERIOR LTS-110V FLUORESCENT
L3A	GALLEY-110V FRIGO
L4	GALLEY-110V FRIGO
LL0	110V RECEPTACLE
LL1	110V RECEPTACLE
LL2	110V RECEPTACLE
LL3	GALLEY-110V FRIGO
L7	GALLEY-110V MICROWAVE OVEN
L8	ENG. BLK & WATER TANK-HEATER
L9	ENG. BLK & WATER TANK-HEATER
N1	VIDEO SYSTEM-110V INVERTER
N7	GALLEY-110V MICROWAVE OVEN
M1	SOUND SYSTEM-RADIO
M2	SOUND SYSTEM-RADIO
M3	SOUND SYSTEM-RADIO
M4	SOUND SYSTEM-SPEAKER CTR SW
M5	SOUND SYSTEM-SPEAKER CTR SW
M6	SOUND SYSTEM-RADIO
M7	SOUND SYSTEM-RADIO
M8	SOUND SYSTEM-RADIO
M9	SOUND SYSTEM-RADIO
M10	SOUND SYSTEM-MICRO OUTLET
M11	SOUND SYSTEM-MICRO OUTLET
M12	SOUND SYSTEM-MICRO OUTLET
M13	SOUND SYSTEM-P.A. VOLUME
M14	SOUND SYSTEM-P.A. VOLUME
M15	SOUND SYSTEM-P.A. VOLUME
M20	SOUND SYSTEM-RADIO
M21	SOUND SYSTEM-RADIO
M23	SOUND SYSTEM-RADIO
M24	SOUND SYSTEM-RADIO
M25	SOUND SYSTEM-RADIO
RA	INTERIOR LTS-110V FLUORESCENT
RB	INTERIOR LTS-110V FLUORESCENT
YC	INTERIOR LTS-110V FLUORESCENT
YD	INTERIOR LTS-110V FLUORESCENT
WC	A/C & HEAT SYSTEM-EVAP CTR SIGN
SH	VIDEO & TV RECEIVER-SHIELD GRD
SH	SOUND SYSTEM-SHIELD GRD
SH2	SPEEDOMETER-SHIELD GRD
SH4	SPEEDOMETER-SHIELD GRD
SP2	SPARE-FJB TO FR SERV CPT
SP3	SPARE-FJB TO CENTER DASH
SP4	SPARE-FJB TO CENTER DASH
SP5	SPARE-RJB TO LUGG CPT #2
SP6	SPARE-RJB TO LUGG CPT #1
SP7	SPARE-RJB TO LUGG CPT #1
SP8	SPARE-RJB TO LUGG CPT #1
SP9	SPARE-RJB TO LUGG CPT #2
SP10	SPARE-RJB TO LUGG CPT #1
SP11	SPARE-RJB TO ENGINE
SP12	SPARE-RJB TO ENGINE
SP13	SPARE-RJB TO ENGINE
SP14	SPARE-RJB TO ENGINE
SP15	SPARE-RJB TO ENGINE
SP16	SPARE-RJB TO ENGINE
SP17	SPARE-RJB TO ENGINE

CIRCUIT NUMBER CODE Page E : 3

No.	SYSTEM
SP18	SPARE-RJB TO ENGINE
SP20	SPARE-RJB TO ENGINE ECM
SP21	SPARE-RJB TO ENGINE ECM
SP23	SPARE-RJB TO ENGINE ECM
SP24	SPARE-RJB TO LH HAT RACK
SP25	SPARE-RJB TO LH HAT RACK
SP26	SPARE-RJB TO LH HAT RACK
SP27	SPARE-RJB TO LH HAT RACK
SP28	SPARE-RJB TO LH HAT RACK
SP31	SPARE-RJB TO RH HAT RACK
SP32	SPARE-RJB TO RH HAT RACK
SP33	SPARE-FJB TO RJB
SP36	SPARE-RJB TO LH SW PANEL
SP37	SPARE-ALARM JCT BOX
SP38	SPARE-ALARM JCT BOX TO RJB
SP39	SPARE-ALARM JCT BOX TO FJB
SP40	SPARE-ALARM JCT BOX TO FJB
SP43	SPARE-FJB TO RJB
SP45	SPARE-FJB TO RJB
SP46	SPARE-RJB TO LH FR ROOF
SP47	SPARE-FR JCT BOX
SP48	SPARE-RJB TO RH FR ROOF
SP49	SPARE-FJB TO RJB
SP52	SPARE-RJB TO ENGINE ECM
SP54	SPARE-FJB TO CENTER DASH
SP55	SPARE-RJB TO ATEC SHIFTER
SP56	SPARE-FJB TO RH SW PANEL
SP57	SPARE-FJB TO ENGINE
SP58	SPARE-FJB TO ENGINE
SP59	SPARE-FJB TO ENGINE
SP61	SPARE-FJB TO RH CONSOLE
SP64	SPARE-RJB TO ATEC SHIFTER
SP65	SPARE-RJB TO ATEC SHIFTER
SP68	SPARE-FJB TO ENGINE ECM
SP69	SPARE-FJB TO FR AXLE
SP70	SPARE-FJB TO FR AXLE
SP71	SPARE-FJB TO RH SW PANEL
SP72	SPARE-FJB TO FR SERV CPT
SP74	SPARE-FJB TO LH CONSOLE
SP77	SPARE-FJB TO A/C JB CPT
SP78	SPARE-FJB TO A/C JCT BOX
SP79	SPARE-FJB TO A/C JCT BOX
SP80	SPARE-TO A/C JCT BOX CPT
SP81	SPARE-FJB TO LH CONSOLE
SP82	SPARE-FJB TO LH CONSOLE
SP83	SPARE-FJB TO RH CONSOLE
SP84	SPARE-FJB TO RH CONSOLE
SP85	SPARE-FJB TO LH CONS & SW PAN
SP86	SPARE-FJB TO LH CONS & SW PAN
SP87	SPARE-RJB TO LH HAT RACK
SP88	SPARE-RJB TO RH HAT RACK
SP89	SPARE-FJB TO LH CONS & SW PAN
SP90	SPARE-FJB TO LH CONS & SW PAN
SP91	SPARE-FJB TO LH CONS & SW PAN
SP92	SPARE-RJB TO A/C JCT BOX
SP93	SPARE-RJB TO EVAPORATOR CPT
SP94	SPARE-RJB TO RR ROOF
SP95	SPARE-RJB TO RR ROOF
SP96	SPARE-RJB TO LUGG CPT #2
SP97	SPARE-RJB TO LUGG CPT #3
SP98	SPARE-RJB TO LUGG CPT #3
SP99	SPARE-RJB TO LUGG CPT #3
SP104	SPARE-RJB TO ENGINE CPT
SP141	SPARE-RJB TO LH CONSOLE

CIRCUIT NUMBER CODE Page E : 4

No.	LOCATION	TYPE	(NB) CAVITY	#PIN HOUSING	#SOCKET HOUSING
C1	FR JCT BOX COMPARTMENT	AMP CPC	37	561644	561646
C2	FR JCT BOX COMPARTMENT	AMP CPC	24	561641	561643
C3	FR JCT BOX COMPARTMENT	AMP CPC	37	561714	561713
C4	FR JCT BOX COMPARTMENT	AMP CPC	16	561693	561695
C5	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C6	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	22	561709	561710
C7	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	16	561693	561695
C8	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	24	561641	561643
C9	ALARM JCT BOX	AMP CPC	16	561693	561695
C10	ALARM JCT BOX	AMP CPC	37	561644	561646
C11	FR SERVICE COMPARTMENT	AMP CPC	24	561642	561643
C12	FR SERVICE COMPARTMENT	AMP CPC	16	561639	561640
C13	ENGINE COMPARTMENT	VEAM	47	561741	561742
C14	ENGINE COMPARTMENT	VEAM	35	561743	561744
C15	RR JCT BOX	AMP CPC	22	561709	561710
C16	RR JCT BOX	AMP CPC	16	561693	561695
C17	RR JCT BOX	AMP CPC	3	561924	561847
C18	ATEC TRANSMISSION-SPD SENSOR	PED WP	2	561566	561690
C19	ATEC TRANSMISSION	DEUTSCH	23	------	561609
C20	RR JCT BOX	AMP CPC	37	561644	561646
C21	RR JCT BOX	AMP CPC	22	561709	561710
C22	DDEC ENGINE-ECM POWER CON.	PED WP	6	------	561962
C23	ENGINE-RH JACOB BANKS BRAKE	PED WP	1	561605	561577
C24	ENGINE-LH JACOB BANKS BRAKE	PED WP	1	561605	561577
C25	ENGINE-BLOCK HEATER	TEMRO	3	------	561975
C26	HYD & MAN TRANSM.-NEUT.& B/U	PED WP	4	561610	561611
C27	HYD & MAN TRANSM.-SPD SENSOR	PED WP	2	561566	561690
C29	RR JCT BOX COMPT.-ECU ATEC	PED	30	------	561603
C30	RR JCT BOX COMPARTMENT	PED WP	3	561782	561781
C31	ENGINE COMPARTMENT	VEAM	26	561745	561746
C32	DDEC ENGINE-ECM	PED	30	------	561600
C33	DDEC ENGINE-2 SPD GOVERNOR	PED WP	2	561566	561690
C34	DDEC ENGINE-SPD SIGNAL	PED WP	2	561566	561690
C35	RR JCT BOX	AMP CPC	24	561641	561643
C36	EMERGENCY EXIT LTS	AMP MNL	2	560900	560898
C37	RR SECTION-LH HAT RACK	AMP MNL	9	561661	561662
C38	RR SECTION-RH HAT RACK	AMP MNL	9	561661	561662
C40	RR JCT BOX	AMP CPC	16	561638	561640
C41	LAVATORY ROOF FLUORESCENT	AMP MNL	2	560900	560898
C42	LAVATORY BACK WALL-WTR TANK	AMP MNL	2	560900	560898
C43	LAVATORY BACK WALL-ACCES.	AMP MNL	9	561661	561662
C44	LH CONSOLE-ATEC SHIFTER SEL.	AMP CPC	16	------	561640
C45	ALARM JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C46	RR JCT BOX	AMP CPC	16	561638	561640
C47	FR SERVICE COMPARTMENT	AMP CPC	7	562004	561773
C48	LH CONSOLE-ATEC SHIFTER LTS	AMP MNL	2	560900	560898
C52	RR JCT BOX	AMP CPC	22	561709	561710
C53	RR JCT BOX	AMP CPC	14	561585	561584
C54	UNDER DASH-PA UNIT	AMP MNL	3	561667	561550
C55	UNDER DASH-RH SW PANEL	AMP CPC	9	561636	561637
C56	UNDER DASH-RH CONSOLE	AMP CPC	24	561642	561643
C57	UNDER DASH-RH ACCESSORIES	AMP CPC	22	561989	561710
C58	EVAPORATOR COMPARTMENT	AMP CPC	14	561585	561583
C59	EVAPORATOR COMPARTMENT	AMP CPC	16	561639	561640
C60	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C61	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C62	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C63	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247

CONNECTORS CODE (C) Page G : 1

No.	LOCATION	TYPE	(NB) CAVITY	#PIN HOUSING	#SOCKET HOUSING
C64	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C65	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C66	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C67	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C68	LUGGAGE COMPARTMENT LTS	AMP MNL	2	561248	561247
C70	ALARM JCT BOX COMPARTMENT	AMP CPC	24	561642	561643
C71	UNDER INSTRUMENT PANEL-LH	AMP CPC	37	561645	561646
C72	UNDER INSTRUMENT PANEL-CENT.	AMP CPC	37	561645	561646
C73	UNDER INSTRUMENT PANEL-CENT.	AMP CPC	16	561639	561640
C74	UNDER INSTRUMENT PANEL-RH	AMP CPC	24	561642	561643
C75	ALARM JCT BOX COMPARTMENT	PED WP	2	561566	561690
C76	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C77	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C78	FR JCT BOX COMPARTMENT	AMP CPC	22	561709	561710
C79	FR SERVICE COMPT.-UNDERNEATH	AMP CPC	37	561644	561646
C80	LUGGAGE COMPT.-AIR RET.SENS.	AMP MNL	2	561248	561247
C81	UNDER INSTRUMENT PANEL CENT.	AMP MNL	2	561248	561247
C82	ENTRANCE DOOR	MOLEX	6	562070	562069
C83	ENTRANCE DOOR-PROIMITY SW	MOLEX	4	561477	561476
C84	ENTRANCE DOOR-PRESSURE SW	PED WP	2	561566	561690
C85	UNDER INSTRUMENT PANEL LH	AMP MTA-100	8	------	562248
C86	UNDER DASH	AMP CPC	2	561636	561637
C87	RR END ROOF	AMP CPC	9	561636	561637
C88	RR END ROOF-CLEARANCE LTS	AMP MNL	2	560900	560898
C89	RR END ROOF-B/U NONITOR	AMP CPC	4	561582	561581
C90	RR JCT BOX	AMP CPC	24	561641	561643
C91	RR JCT BOX	AMP CPC	37	561714	561713
C92	FR JCT BOX COMPT-ANTI SKID	AMP CPC	9	561635	561637
C93	FR JCT BOX COMPT-ANTI SKID	WABCO	35	------	641094
C94	FR JCT BOX COMPT-ANTI SKID	AMP MNL	3	------	561550
C96	FR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C97	RR AXLE ACCESSORIES	AMP CPC	14	561585	561585
C98	FR SERVICE COMPT-EL.FT.PEDAL	PED WP	3	561782	561781
C99	FR SERVICE COMPT LTS	AMP MNL	2	561248	561247
C100	FR SERVICE COMPT-CORNERING LT	PED WP	2	561566	561690
C101	FR SERVICE COMPT-ELEC. HORNS	PED WP	2	561566	561690
C102	FR SERVICE COMPT-FLASHER LH	ITT SS	2	561813	561812
C103	FR SERVICE COMPT-FLASHER RH	ITT SS	2	561813	561812
C104	FR SERVICE COMPT-SIDE MARKER	ITT SS	2	561813	561812
C105	FR SERVICE COMPT-LIQ.S.VALVE	PED WP	2	561566	561690
C106	FR SERVICE COMPT-WATER VALVE	PED WP	2	561566	561690
C107	EVAPORATOR COMPT-DAMPER	PED WP	2	561566	561690
C108	LH CONSOLE-TIMER SW P-HEATER	AMP FF	3	------	562034
C109	FR SERVICE COMPT-PARK PAN.LT	AMP MNL	2	560900	560898
C111	EVAPORATOR COMPT-DAMPER	ITT SS	2	561813	561812
C112	FR SERVICE COMPT	AMP MNL	2	560900	560898
C113	ENGINE CPT RR DOOR MARKER LT	ITT SS	2	561813	561812
C114	ENGINE CPT RR DOOR DIR LT LH	ITT SS	2	561813	561812
C115	ENGINE COMPT-AIR DRYER	PED WP	1	561605	561577
C116	ENGINE COMPT. LTS	PED WP	2	561566	561690
C117	ENGINE COMPT. LTS	PED WP	2	930210	------
C118	ENGINE COMPT-LAVATORY FAN	TC	2	561030	560997
C119	ENGINE CPT RR DOOR RH LO LAMP	PED WP	6	561606	561607
C120	ENGINE CPT RR DOOR LH LO LAMP	PED WP	6	561606	561607
C121	ENGINE CPT RR DOOR DIR LT RH	ITT SS	2	561813	561812
C122	ENGINE CPT-CAMERA DOOR VALVE	PED WP	2	561566	561690
C123	ENGINE CPT-RETARDER VALVE	AMPHENOL	2	------	560412
C124	ENGINE CPT-ETHER SW	PED WP	2	561566	561690

No.	LOCATION	TYPE	(NB) CAVITY	#PIN HOUSING	#SOCKET HOUSING
C125	ENGINE CPT-B/U ALARM	PED WP	2	561566	561690
C126	ENGINE CPT-FLUSHING PUMP	PED WP	2	561566	561690
C127	ENGINE CPT-FUEL FILTER	PED WP	2	561566	561690
C128	ENGINE CPT-A/C COMPR.CLUTCH	ITT SS	2	561813	561812
C129	ENGINE CPT-PRE-HEAT WATER	AMP FF	6	561672	561186
C130	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C131	ENGINE CPT-UNLOADER	ITT SS	2	561813	561812
C132	ENGINE CPT-A/C LO PRESS SW	PED WP	2	561566	561690
C133	ENGINE CPT-A/C HI PRESS SW	PED WP	2	561566	561690
C134	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C135	FR JCT BOX-LUGGAGE DIODE CON.	AMP MNL	15	561987	561986
C136	A/C JCT BOX	VEAM	37	561743	561744
C137	A/C JCT BOX-TRANSMITTER	AMP MNL	2	560900	560898
C138	A/C JCT BOX-CONTROL MODULE	AMP HDP	15	------	562012
C139	A/C JCT BOX-LOGIC MODULE	AMP HDP	15	562011	------
C140	FR ROOF-AMPLIFIER	BLAUPUNKT	2	561988	------
C141	FR ROOF-AMPLIFIER	BLAUPUNKT	2	561988	------
C142	LAVATORY DOOR WALL	AMP MNL	2	561248	561247
C143	LAVATORY DOOR WALL	AMP MNL	3	560908	562006
C144	UNDER LH SEAT-AISLE LTS	AMP MNL	4	560851	560852
C145	ENGINE CPT-RH SIDE LTS	ITT SS	4	561998	561999
C146	ENGINE CPT-MODULATOR VALVE	AMPHENOL	2	------	560412
C147	ENGINE CPT-LH SIDE LTS	ITT SS	4	561998	561999
C148	LUGGAGE COMPT. LTS	AMP MNL	2	561248	561247
C149	CONDENSER CPT-FAN MOTOR	ORDNANCE	3	562555	562001
C152	CONDENSER CPT-FUEL GAUGE	PED WP	4	561610	561611
C153	EVAPORATOR CPT-AIR AMB. SENS	AMP MNL	2	561248	561247
C154	EVAPORATOR CPT-FRESH AIR SENS	ITT SS	2	561813	561812
C157	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561690
C158	CONDENSER CPT-A/C LO TEMP.	PED WP	2	561566	561690
C159	CONDENSER CPT-A/C HI TEMP.	PED WP	2	561566	561690
C160	FR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C161	FR AXLE-ABS RH VALVE	WABCO	3	------	641098
C162	FR AXLE-ABS LH VALVE	WABCO	3	------	641098
C163	FR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C164	RR AXLE-ABS LH SENSOR	WABCO	2	641132	------
C165	RR AXLE-ABS LH VALVE	WABCO	3	------	641098
C166	RR AXLE-ABS RH VALVE	WABCO	3	------	641098
C167	RR AXLE-ABS RH SENSOR	WABCO	2	641132	------
C168	RR AXLE-ABS OPT ATC	PED WP	4	561610	561611
C169	RR JCT BOX-SPEED SW	AMP HDP	15	------	562012
C170	FR JCT BOX-FLASHER UNIT	TC	2	------	561940
C171	ALARM JCT BOX CPT-LH CONSOLE	AMP CPC	37	561645	561646
C174	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561669
C176	UNDER DASH RH-WIPER PULSE	AMP FF	6	------	561186
C177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	------	561186
C178	UNDER DASH RH-LH FAN	TC	2	561030	560997
C179	UNDER DASH RH-RH FAN	TC	2	561030	560997
C180	RR JCT BOX-CTR THROTTLE MOD.	PED WP	1	561605	561577
C181	RR JCT BOX-CTR THROTTLE MOD.	PED WP	2	561566	561690
C182	RR JCT BOX-CTR THROTTLE MOD.	PED WP	6	------	561946
C183	FR SERVICE CPT-KNEELING PAN.	PED WP	4	561610	561611
C184	FR SERVICE CPT-KNEELING SW	ITT SS	3	561111	561080
C185	RR JCT BOX CPT-ECU ATEC	PED	30	------	561602
C186	RR JCT BOX-LO COOLANT MOD.	PED WP	6	------	561946
C187	RR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515
C188	RR JCT BOX	AMP CPC	37	561645	561646

CONNECTORS CODE (C) Page G : 2

No.	LOCATION	TYPE	(NB) CAVITY	#PIN HOUSING	#SOCKET HOUSING
C189	ENGINE CPT RR DOOR B/U LT	PED WP	2	561566	561690
C190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690
C191	ENGINE CPT RR DOOR RH STOP LT	PED WP	2	561566	561690
C192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561690
C193	FR SECT. LH HAT RACK-FLUOR.	AMP MNL	2	561248	561247
C194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690
C195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690
C196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690
C197	ENGINE CPT-A/C COMPRESSOR	PED WP	4	561889	561890
C198	ENGINE CPT-A/C COMPRESSOR	PED WP	4	561889	561890
C199	ENGINE CPT RR DOOR LICENCE LT	DOM AUTO	2	930210	------
C200	RH HAT RACK-FLUORESCENT	AMP MNL	4	561551	561668
C201	RH HAT RACK-FLUORESCENT	AMP MNL	4	561551	561668
C202	RH HAT RACK-BALLAST	AMP MNL	4	560851	560852
C203	RH HAT RACK-BALLAST	AMP MNL	6	561552	561515
C204	RH HAT RACK-GENERAL LT	AMP MNL	3	561667	561550
C205	FR SECT.-RH HAT RACK SPEAKER	AMP MNL	4	561659	561660
C206	RH HAT RACK-READING LT	AMP MNL	2	560900	560898
C207	LH HAT RACK-READING LT	AMP MNL	2	560900	560898
C208	LH HAT RACK-BALLAST	AMP MNL	4	560851	560852
C210	FR SECT.-LH HAT RACK SPEAKER	AMP MNL	4	561659	561660
C211	FR ROOF-STORE LH	AMP MNL	2	560900	560898
C212	FR ROOF-STORE RH	AMP MNL	2	560900	560898
C213	FR ROOF-CLEARANCE LT	AMP MNL	2	560900	560898
C214	FR ROOF-AMPLIFIER	BLAUPUNKT	2	561988	------
C215	FR ROOF-AMPLIFIER	BLAUPUNKT	2	561988	------
C216	UNDER DASH LH-P.A.	AMP MNL	9	561670	561669
C217	UNDER DASH LH-P.A.	AMP MNL	3	------	561550
C218	UNDER DASH LH-P.A.	AMP MNL	3	------	561550
C219	UNDER DASH LH-P.A.	AMP MNL	4	------	561668
C220	UNDER DASH LH-P.A.	BLAUPUNKT	7	900626	------
C221	UNDER DASH LH-P.A.	BLAUPUNKT	7	------	900625
C222	ALARM JCT BOX CPT-MICRO	MOLEX	4	561477	561476
C223	ALARM JCT BOX CPT	AMP MNL	4	561551	561668
C225	FR SECT. RH HAT RACK-FLUOR.	AMP MNL	2	561248	561247
C226	FR ROOF-AMPLIFIER	BLAUPUNKT	8	900624	------
C227	RH SW PANEL-SPEAKER	SWF	8	------	561107
C228	RH SW PANEL-MICRO OUTLET	MOLEX	4	561477	561476
C229	RH SW PANEL-PA VOLUME	MOLEX	4	561477	561476
C233	INSTRUMENT PANEL CENTER	V.D.O.	8	------	562043
C234	INSTRUMENT PANEL CENTER	V.D.O.	4	------	562044
C235	INSTRUMENT PANEL CENTER	V.D.O.	8	------	562041
C236	INSTRUMENT PANEL CENTER	AMP MNL	4	560851	560852
C237	UNDER DASH LH-JACOB CLUTCH SW	ITT SS	3	561111	561080
C238	A/C JCT BOX-DIODE CONNECTOR	AMP MNL	9	561670	561669
C239	FR SERVICE CPT-HI BUOY VALVE	PED WP	2	561566	561690
C240	FR SERVICE CPT-KNEEL PROX SW	PED WP	1	561605	561577
C241	FR SERVICE CPT-FOG RESISTOR	AMP CPC	3	561847	561862
C242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C243	FR SERVICE CPT-HEADLAMPS	TC	3	------	561071
C244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812
C245	FR SERVICE CPT-RH FOG LAMP	ITT SS	2	561813	561812
C246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080
C248	ALARM JCT BOX-WIPER PULSE GEN	AMP FF	6	------	561108
C249	ALARM JCT BOX-CONV. 12V TO 5V	AMP MNL	3	561667	561550
C250	ALARM JCT BOX-DASH LTS REGUL.	AMP MNL	6	561552	561515
C251	LH SW PANEL-FAST IDLE	SWF	8	------	561107
C252	LH SW PANEL-SWITCH LT	SWF	2	------	561837

No.	LOCATION	TYPE	(NB) CAVITY	#PIN HOUSING	#SOCKET HOUSING
C253	LH SW PANEL-ETHER	SWF	8	------	561107
C255	LH SW PANEL-JACOB	SWF	8	------	561107
C256	LH SW PANEL-RETARDER	SWF	8	------	561107
C257	INSTRUMENT PANEL CENT-SPEEDO	AMP MNL	4	560851	560852
C258	LH SW PANEL-MULTI FUNC. SW	AMP FF	8	561188	------
C259	LH SW PANEL-MULTI FUNC. SW	AMP FF	6	------	561108
C260	FR SERVICE CPT-LUG DOOR LCK	PED WP	6	561606	561607
C262	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561551	561668
C263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C264	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561667	561550
C265	UNDER DASH RH-DOOR MODULE	AMP HDP-20	15	562011	562012
C267	UNDER DASH RH	AMP CPC	16	561642	561643
C268	UNDER DASH LH-MIRROR	AMP MNL	6	561552	561515
C269	UNDER DASH RH-MIRROR	AMP MNL	6	561552	561515
C270	LH MIRROR POST	MOLEX	6	562070	562069
C271	RH MIRROR POST	MOLEX	6	562070	562069
C272	LH MIRROR	SPARTAN	6	------	990158
C273	RH MIRROR	SPARTAN	6	------	990158
C274	RADIO	AMP MNL	9	561670	561669
C275	UNDER DASH LH-CLUTCH SW	PED WP	2	561566	561690
C276	UNDER DASH RH-LOCK SOL.VALVE	AMP MNL	2	561248	561247
C286	RH SW PANEL-A/C & HEAT	SWF	8	------	561107
C287	ENGINE COMPT-LTS SW	PED WP	2	561566	561690
C288	RH SW PANEL-FRESH AIR	SWF	8	------	561107
C289	RH SW PANEL-SWITCH LT	SWF	2	------	561837
C290	ALARM JCT BOX-DIODES	AMP MNL	9	561670	561669
C292	LH CONSOLE COMPT-VIDEO SYST.	AMP MNL	4	561671	561668
C293	LH CONSOLE SW-VIDEO SYST.	SWF	8	------	561107
C298	LH CONSOLE COMPT-VIDEO SYST.	AMP MNL	9	561670	561669
C299	LH CONSOLE SW-GALLEY	SWF	8	------	561107
C300	INVERTER COMPT.	AMP CPC	16	561639	561640
C301	INSTRUMENT PANEL CENT-TACHO	AMP MNL	4	560851	560852
C302	INVERTER COMPT-FRIGO PW SUP.	AMP MNL	9	561670	561669
C303	INVERTER COMPT-GALLEY CTR	AMP MNL	9	561661	561662
C304	INVERTER COMPT-VIDEO CTR	AMP MNL	2	560900	560898
C305	GALLEY	AMP CPC	3	561862	561847
C306	GALLEY	AMP MNL	9	561661	561662
C307	LH CONSOLE DRV SEAT HEATER	AMP CPC	4	561686	561687
C308	LH CONSOLE SW-RHEOSTAT	AMP MNL	2	561248	561247
C310	LH CONSOLE SW-LUG. DOOR LCK	SWF	8	------	561107
C311	LH CONSOLE SW-HOS & PAS CHIME	SWF	8	------	561107
C312	LH CONSOLE SW-READING LTS	SWF	8	------	561107
C313	LH CONSOLE SW-GEN & FLUOR LTS	SWF	8	------	561107
C314	LH CONSOLE SW-FR DEST. SIGN	SWF	8	------	561107
C315	LH CONSOLE SW-LH STORE	SWF	8	------	561107
C316	LH CONSOLE SPARE SWITCH	SWF	8	------	561107
C317	LH CONSOLE SW-RH STORE	SWF	8	------	561107
C318	LH CONSOLE SW-DRV WINDOW LIFT	SWF	8	------	561107
C319	LH CONSOLE SW-DRV SEAT HEATER	SWF	8	------	561107
C320	LH CONSOLE SW-DRIVER'S LTS	SWF	8	------	561107
C322	LH CONSOLE DRV WIND LIFT MOT	PED PO	2	------	561848
C323	LH CONSOLE CRUISE CTR SW PAN.	AMP CPC	14	561585	561583
C324	GALLEY-REFRIGERATOR	AMP MNL	2	561247	561248
C325	LH CONSOLE SW-KNEELING	SWF	8	------	561107
C327	ENGINE COMPT-RR START SW BOX	AMP CPC	9	561635	561637
C328	GALLEY-LAMP	AMP MNL	2	561248	561247
C329	ENGINE TACHO SIGNAL	PED WP	3	561781	561789
C330	GALLEY MICROWAVE SW LT	SWF	2	------	561837

CONNECTORS CODE (C) Page G : 3

No.	LOCATION	TYPE	(NB) CAVITY	#PIN HOUSING	#SOCKET HOUSING
C331	GALLEY MICROWAVE SW	SWF	8	------	561107
C332	GALLEY RH CONTAINER SW LT	SWF	2	------	561837
C333	GALLEY RH CONTAINER SW	SWF	8	------	561107
C334	GALLEY LH CONTAINER SW	SWF	8	------	561107
C335	GALLEY LH CONTAINER SW LT	SWF	2	------	561837
C336	INSTRUMENT PANEL RH-DIF OIL T	AMP MNL	3	561667	561550
C337	INSTR PANEL LH-UP WIPER SW	SWF	8	------	561107
C338	INSTR PANEL LH-UP DEFROST SW	SWF	8	------	561107
C339	INSTR PANEL LH-UP WASHER SW	SWF	8	------	561107
C341	INSTR PANEL LH-HEAT MIRROR SW	SWF	8	------	561107
C343	INSTR PANEL LH-HEADLAMP SW	SWF	8	------	561107
C344	INSTR PANEL LH-HAZARD LT SW	SWF	8	------	561107
C345	INSTR PANEL LH-FOG LT SW	SWF	8	------	561107
C346	INSTR PANEL LH-SWITCH LTS	SWF	2	------	561837
C347	INSTR PANEL LH-DASH LT SW	AMP MNL	2	560900	560898
C348	INSTR PANEL CENT-RACOR MODULE	AMP MNL	3	561667	561550
C349	RH CONSOLE-RED LED HTR	AMP MNL	2	561248	561247
C350	RH CONSOLE-THERMOMETER	AMP MNL	3	561667	561550
C351	LH HAT RACK-FLUOR 110V	MOLEX	4	561477	561476
C352	RH CONSOLE-DRV TEMP SENSOR	BURNDY	4	------	561104
C353	INSTR PANEL RH-DRV FAN RHEOST	AMP MNL	6	561552	561515
C354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515
C355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	3	561667	561550
C356	FR JCT BOX-HEAT WINDSH MODULE	AMP MNL	9	------	561669
C357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550
C358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550
C359	INSTR PANEL CENT-TAC & SPD LT	AMP MNL	2	560900	560898
C360	INSTR PANEL RH-B/U MONITOR	AMP MNL	2	561248	561247
C361	FR ROOF-WIPER MOTOR	AMP FF	6	------	561186
C362	FR ROOF-LAVATORY OCCUPIED LT	AMP MNL	2	561248	561247
C363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247
C364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C365	FR ROOF-UP WINDSHIELD DEFROST	AMP MNL	3	561667	561550
C366	RH CONSOLE-GRN LED	AMP MNL	2	561248	561247
C367	ENGINE COMPT-DIF OIL T SENSOR	PED WP	2	561566	561690
C368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C369	FR ROOF-DEST. SIGN OPER. SW	TORRIX	5	------	562110
C370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C372	FR ROOF-DEST. SIGN SPEED SW	MOLEX	4	561477	561476
C373	RR JCT BOX	AMP CPC	16	561639	561640
C374	ALARM JCT BOX COMPT-MASTER SW	AMP MNL	6	561552	561515
C376	ALARM JCT BOX COMPT-LH CONS.	AMP CPC	37	561714	562005
C380	ALARM JCT BOX-DDL CONNECTOR	PED MP	12	------	561817
C418	INSTR. PANEL LH-HTR WINDSH. SW	SWF	8	------	561107
C424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550
C425	ALARM JCT BOX-DIODES	AMP MNL	15	561987	561986

NO.	PAGE	AMP	#PREVOST	LOCATION	FUNCTION
D1	7	3A	561740	ALARM JCT BOX	LO-AIR SONALERT-PRIMARY
D2	7	3A	561740	ALARM JCT BOX	LO-AIR SONALERT-SECONDARY
D4	10	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D5	10	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D7	11	3A	561740	RR JCT BOX	STOP LTS-PARKING BRAKE
D9	17	3A	561740	ALARM JCT BOX	HOSTESS & PASSENGER CHIME
D10	18	3A	561740	A/C JCT BOX	PRE-HEAT WATER PUMP SIGNAL
D11	23	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D12	23	3A	561740	RR JCT BOX	LAVATORY OCCUPIED SIGN
D13	23	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D14	23	3A	561740	FR DEST. SIGN	FR DESTINATION SIGN
D15	24	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-UP
D16	24	3A	561740	FR JCT BOX	KNEELING SYSTEM CTR-DOWN
D17	10	3A	561740	FR JCT BOX	WARNING HAZARD-LH
D18	10	3A	561740	FR JCT BOX	WARNING HAZARD-RH
D19	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-PARK BRK
D20	9	3A	561740	FR JCT BOX	DAYTIME RUN LTS-HEAD LT SW
D23	11	3A	561740	FR JCT BOX	RETARDER STOP SIGNAL
D24	5	3A	561740	RR JCT BOX	DECEL SW. -DDEC CRUISE CTR
D25	5	3A	561740	RR JCT BOX	STOP SW. -DDEC CRUISE CTR
D26	13	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D27	13	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D28	13	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D29	13	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D30	13	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D35	13	3A	561740	FR JCT BOX	LUGGAGE DOOR AJAR T.T.LT.
D38	28	3A	561740	RR JCT BOX	HYD.TR.SOL.VALVE SUPPRESSOR
D43	7	3A	561740	ALARM JCT BOX	TAG AXLE SONALERT
D44	5	3A	561740	FR JCT BOX	RETARDER & DECEL IGN.FEED
D46	6	3A	561740	RR JCT BOX	STOP LTS RLY-RETARDER SIGN
D47	11	3A	561740	RR JCT BOX	STOP LTS RLY-STOP SW SIGN
D58	24	3A	561740	FR JCT BOX	RR HIGH BUOY
D60	18	3A	561740	RR JCT BOX	A/C COMPR.CLUTCH SUPPRESSOR
D63	23	3A	561740	ALARM JCT BOX	LAVATORY SONALERT
D64	24	3A	561740	ALARM JCT BOX	KNEELING SONALERT
D65	18	3A	561740	A/C JCT BOX	WATER VALVE - HEAT SW FEED
D66	18	3A	561740	A/C JCT BOX	WATER VALVE - PRE-HEAT FEED
D67	10	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - RH
D68	10	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY - LH

DIODE CODE (D) Page H : 1

NO.	PAGE	AMP	#PREVOST	LOCATION	FUNCTION

RELAYS CODE (R)

NO.	PAGE	COIL V	#PREVOST	LOCATION	FUNCTION
R1	1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R2	2	24V	561991	FR JCT BOX	ENGINE RUN (12) FR
R3	4	24V	561707	RR JCT BOX	FIELD RELAY
R4	4	24V	561005	RR JCT BOX	STARTING MOTOR
R6	11	24V	561707	RR JCT BOX	STOP LTS-PARKING BRAKE
R7	5	24V	561707	RR JCT BOX	FAST IDLE
R8	6	24V	561707	RR JCT BOX	RETARDER
R9	11	24V	561707	RR JCT BOX	BACK-UP LTS
R10	6	24V	561707	RR JCT BOX	CHECK TRANSM ATEC
R11	6	24V	561707	RR JCT BOX	12V IGNITION ATEC & DDEC
R12	7	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R13	8	24V	561707	FR JCT BOX	FOG LTS
R14	9	24V	561707	FR JCT BOX	BLINKER
R15	9	24V	561707	FR JCT BOX	FR MARKER LTS
R16	9	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R17	9	24V	561707	RR JCT BOX	TAIL.LICENCE.MARKER-RR LTS
R18	9	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-IN
R19	9	24V	561707	FR JCT BOX	HEADLAMPS (HI)
R20	9	24V	561707	FR JCT BOX	HEADLAMPS (LO)
R21	10	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT
R23	10	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT
R24	10	24V	561707	FR JCT BOX	R.H. CORNERING LT
R25	10	24V	561707	FR JCT BOX	L.H. CORNERING LT
R26	11	24V	561707	RR JCT BOX	STOP LTS
R27	14	24V	561707	RR JCT BOX	AISLE & EMERG.EXIT - LTS
R28	14	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R29	15	24V	561707	RR JCT BOX	READING LTS R.H.
R30	15	24V	561707	RR JCT BOX	READING LTS L.H.
R31	15	24V	561707	RR JCT BOX	GENERAL LTS
R32	16	24V	561707	RR JCT BOX	24V FLUORESCENT
R33	18	12V	562092	FR JCT BOX	BLOWER & GALLEY CUT-IN
R34	18	24V	561707	A/C JCT BOX	A/C LOGIC PANEL
R35	18	24V	561707	A/C JCT BOX	WATER PUMP
R36	18	24V	561707	A/C JCT BOX	A/C COMPRESSOR CLUTCH
R37	10	24V	561707	FR JCT BOX	KNEELING LT
R38	19	24V	560407	A/C JCT BOX	EVAPORATOR FAN MOTOR
R39	19	24V	560407	A/C JCT BOX	CONDENSER FAN MOTOR
R40	19	24V	561014	A/C JCT BOX	CONDENSER SPEED CTR HI
R41	19	24V	560407	A/C JCT BOX	CONDENSER SPEED CTR HI
R42	23	24V	561707	RR JCT BOX	LAVATORY FLUORESCENT
R43	24	24V	561707	FR JCT BOX	KNEELING SYSTEM
R44	24	24V	561707	FR JCT BOX	KNEELING SYSTEM
R45	29	24V	561707	INVERTER COMPT	V.C.R. INVERTER CUT-IN
R46	24	12V	562092	RR JCT BOX	CAMERA DOOR
R47	30	24V	561707	INVERTER COMPT	GALLEY-LIQUID CONTAINERS
R48	30	24V	561707	INVERTER COMPT	COFFEE MAKER
R49	27	24V	561707	FR JCT BOX	ABS - SEC. BREAK RLY
R50	27	24V	561707	FR JCT BOX	ABS - VR2 RLY
R51	27	24V	561707	FR JCT BOX	ABS - WARNING RLY
R52	27	24V	561707	FR JCT BOX	ABS - VR1 RLY
R53	1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR
R54	2	24V	561991	RR JCT BOX	ENGINE RUN (12) RR
R56	25	12V	562092	FR JCT BOX	JACOB BRAKE SYSTEM
R57	9	24V	561707	FR JCT BOX	DAY'S BLINKER
R58	28	12V	562092	RR JCT BOX	HYD. TRANSM. MODULATOR CTR
R60	9	12V	562092	FR JCT BOX	DAYTIME RUN LTS
R61	25	12V	562092	RR JCT BOX	STOP LTS-JACOB SIGNAL
R68	26	24V	561707	FR JCT BOX	SOUND SYSTEM CUT IN

RELAYS CODE (R)

Page I : 1

NO.	PAGE	COIL V	#PREVOST	LOCATION	FUNCTION
R72	18	24V	561707	A/C JCT BOX	DAMPER CONTROL-A/C
R77	18	24V	561707	A/C JCT BOX	WATER VALVE-A/C

RESISTOR CODE (RS)

NO.	PAGE	OHM(S)	#PREVOST	LOCATION	FUNCTION
RS1	5	11 K	561898	RR JCT BOX	FAST IDLE DDEC CONTROL
RS2	5	3.6 K	561897	RR JCT BOX	FAST IDLE DDEC CONTROL
RS3	8	1 (2)	561537	FR SERV. COMPT.	FOG LT - RH
RS4	8	1 (2)	561537	FR SERV. COMPT.	FOG LT - LH
RS5	10	1 (2)	561537	FR JCT BOX	CORNERING LT - LH
RS7	11	.82 (2)	560822	RR JCT BOX	PARKING BRAKE STOP LTS
RS8	10	1 (2)	561537	FR JCT BOX	CORNERING LT - RH
RS11	20	12	561191	FR TOP	DEFROSTER SPEED
RS12	20	12	561191	FR TOP	DEFROSTER SPEED
RS13	23	80	562108	FR TOP	FR DESTINATION SIGN
RS14	9	.82 (2)	560822	FR JCT BOX	DAYTIME RUN LTS
RS15	23	2	561884	ENGINE COMPT.	LAVATORY FAN

RESISTOR CODE (RS)

Page J : 1

NO.	PAGE	OHM(S)	#PREVOST	LOCATION	FUNCTION

WIRING DIAGRAM KEYS




WIRE CROSSING


WIRE SOLDERING JOINT


SHIELDED WIRES


TWISTED WIRES


STUD TERMINAL

JUNCTION BLOCK

DUMMY




CHASSIS GROUND


ACCESSORY CHASSIS GROUND

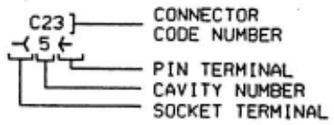


TELL-TALE LAMP


ILLUMINATING LAMP


FLUORESCENT LAMP





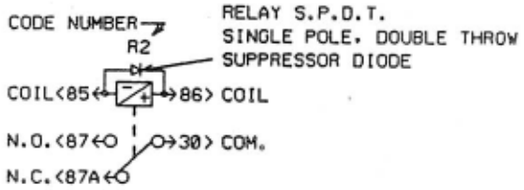

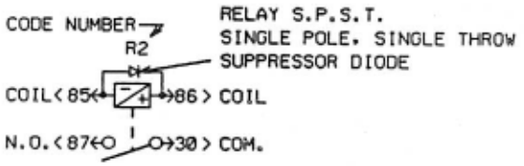

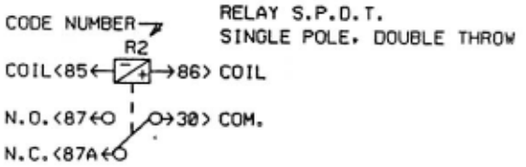

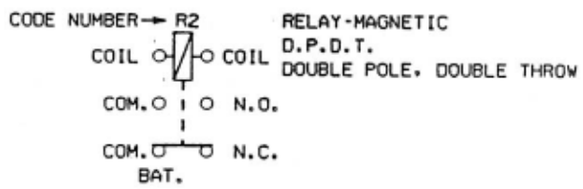

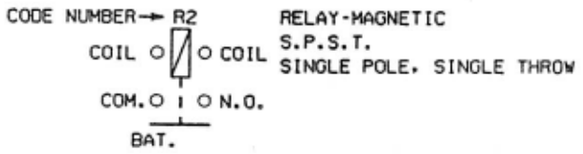



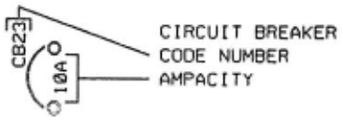


PRESSURE SWITCH N.C.


PRESSURE SWITCH N.O.


SWITCH MOMENTARY CONTACT


SWITCH PUSH BUTTON




110V EXTERIOR PLUG RECEPTACLE


ELECTRIC HORN


THERMOSTAT


HEATER


SOLENOID VALVE


BATTERY

BLK	BLACK
YEL	YELLOW
RED	RED
WH	WHITE
GRY	GREY
ORA	ORANGE
BLU	BLUE
GRN	GREEN
BRN	BROWN
PUR	PURPLE
PK	PINK

PREVOST CAR inc.	WIRING DIAGRAM	NO: D060783	REVISION DATE 92-10-30	P. K

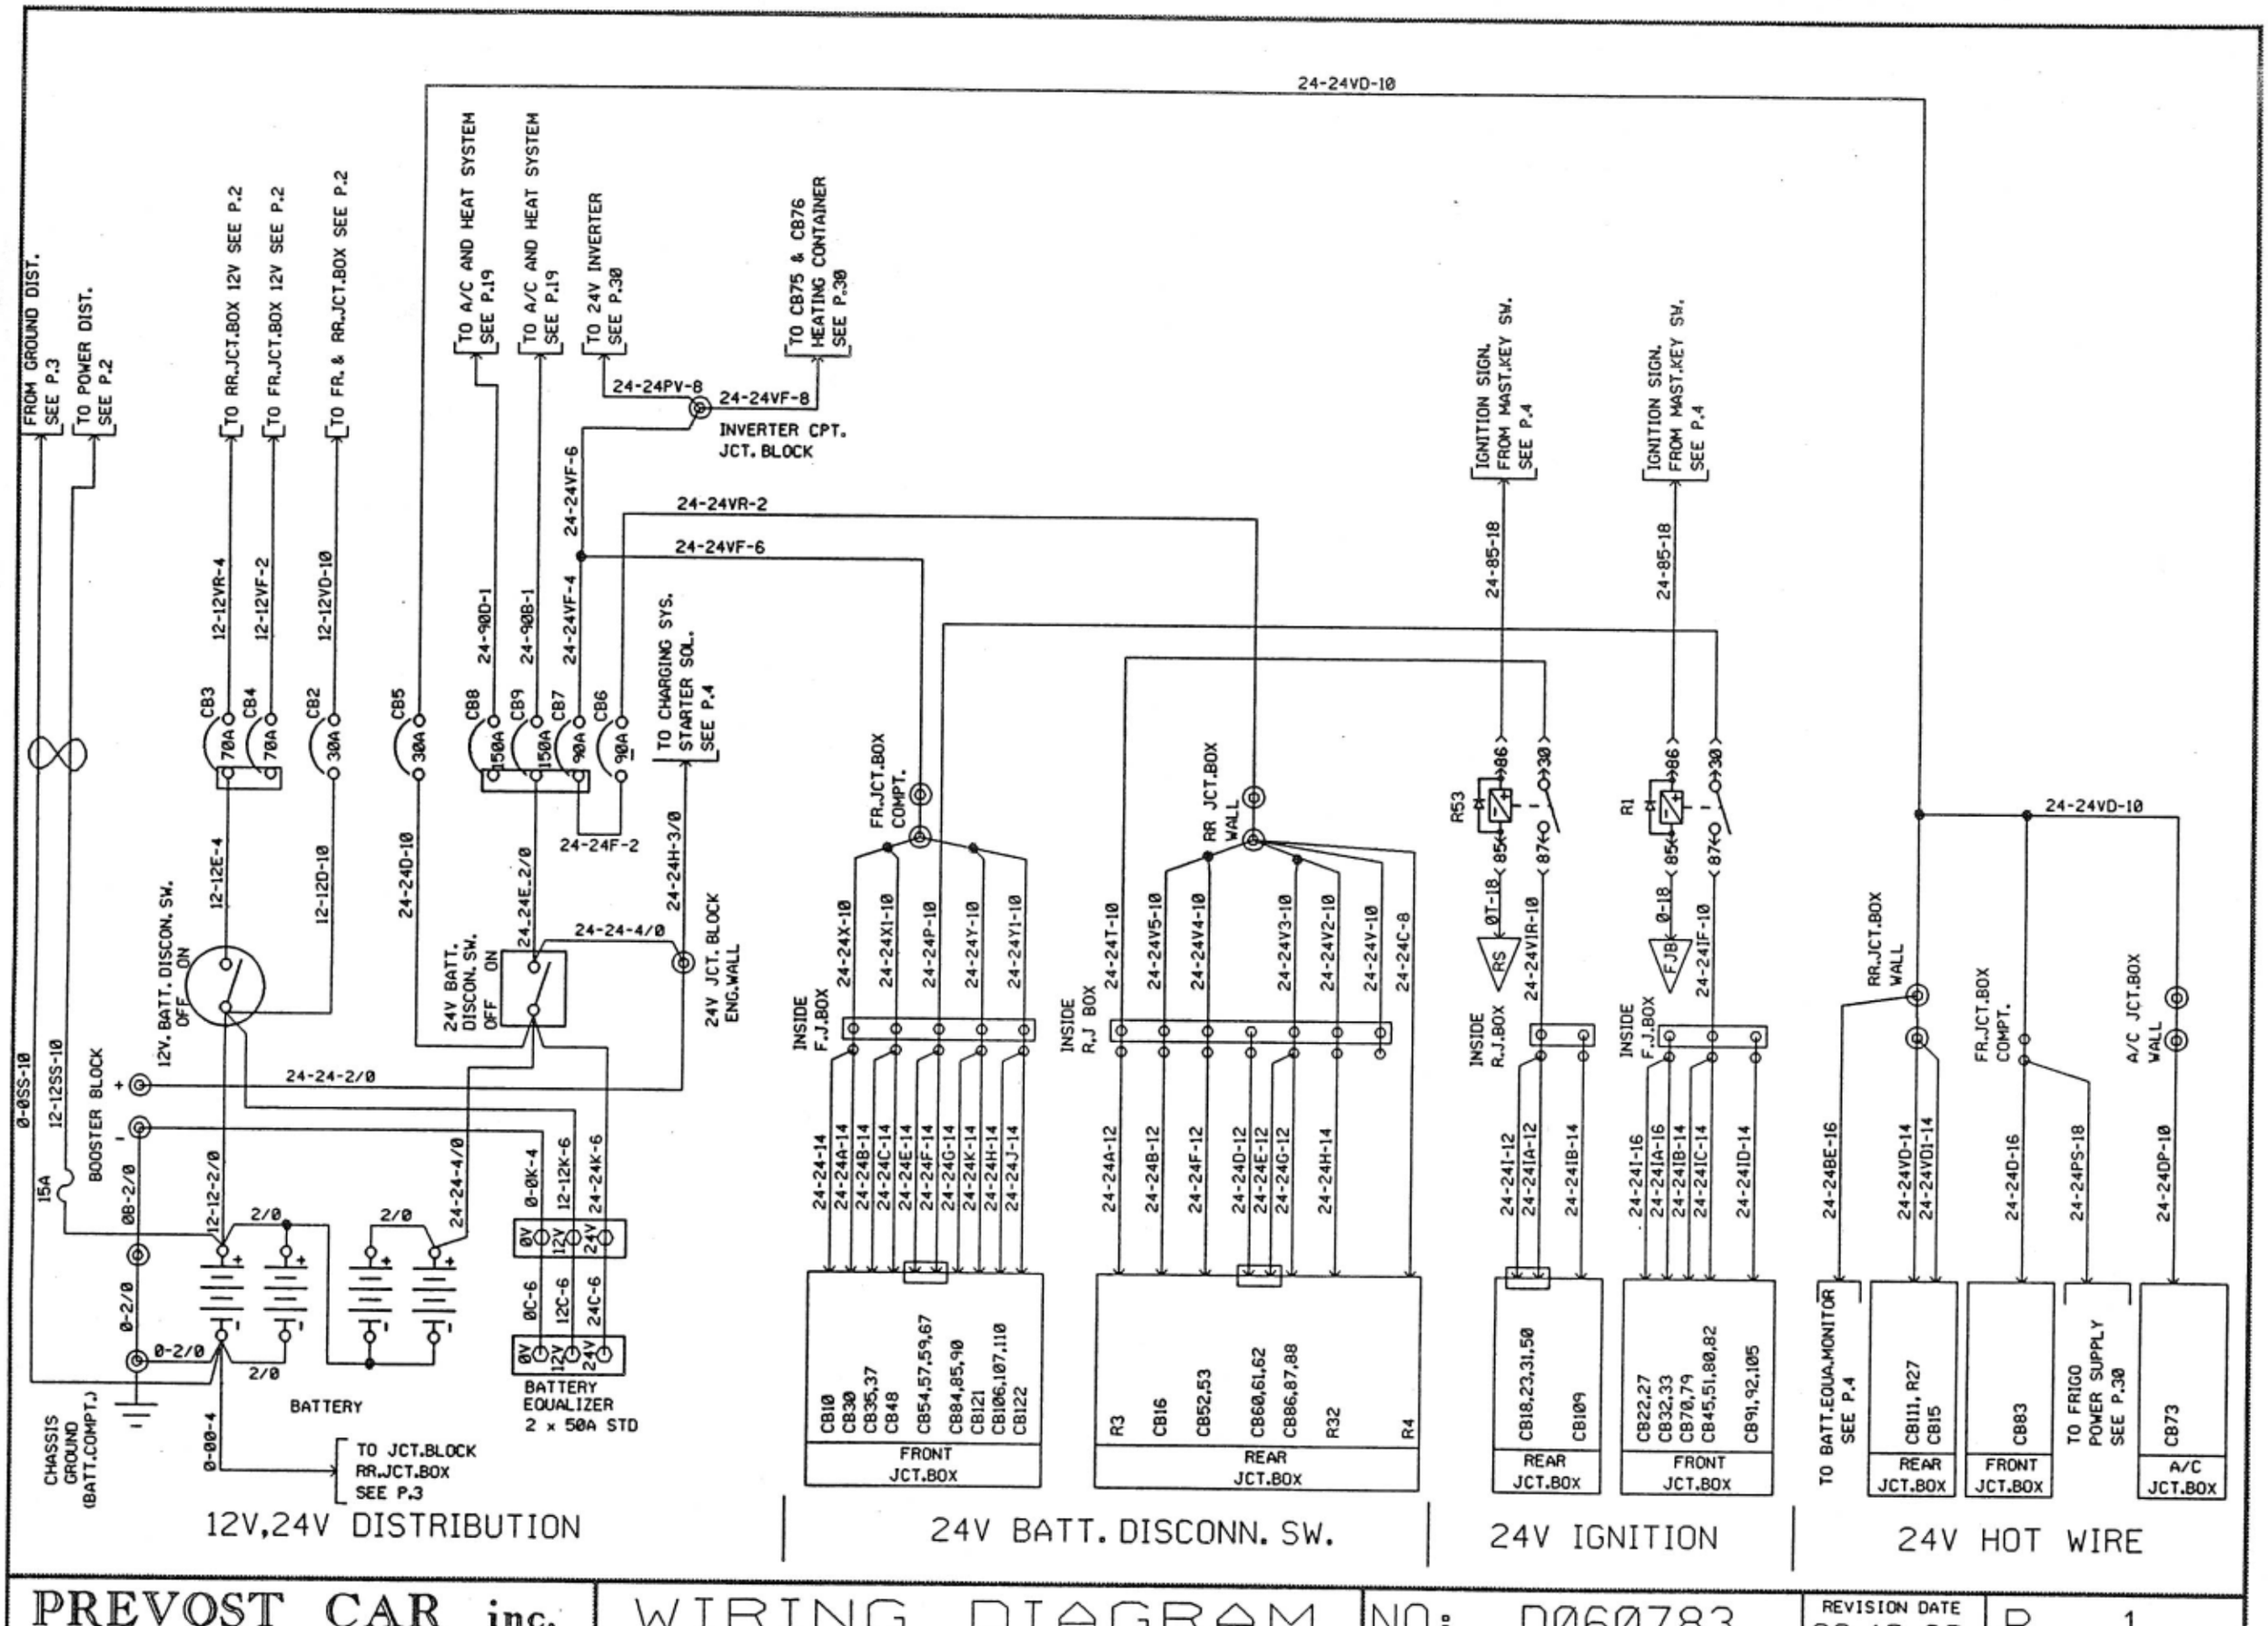

PREVOST CAR inc.	WIRING DIAGRAM	NO: D060783	REVISION DATE 92-10-30	P. 1

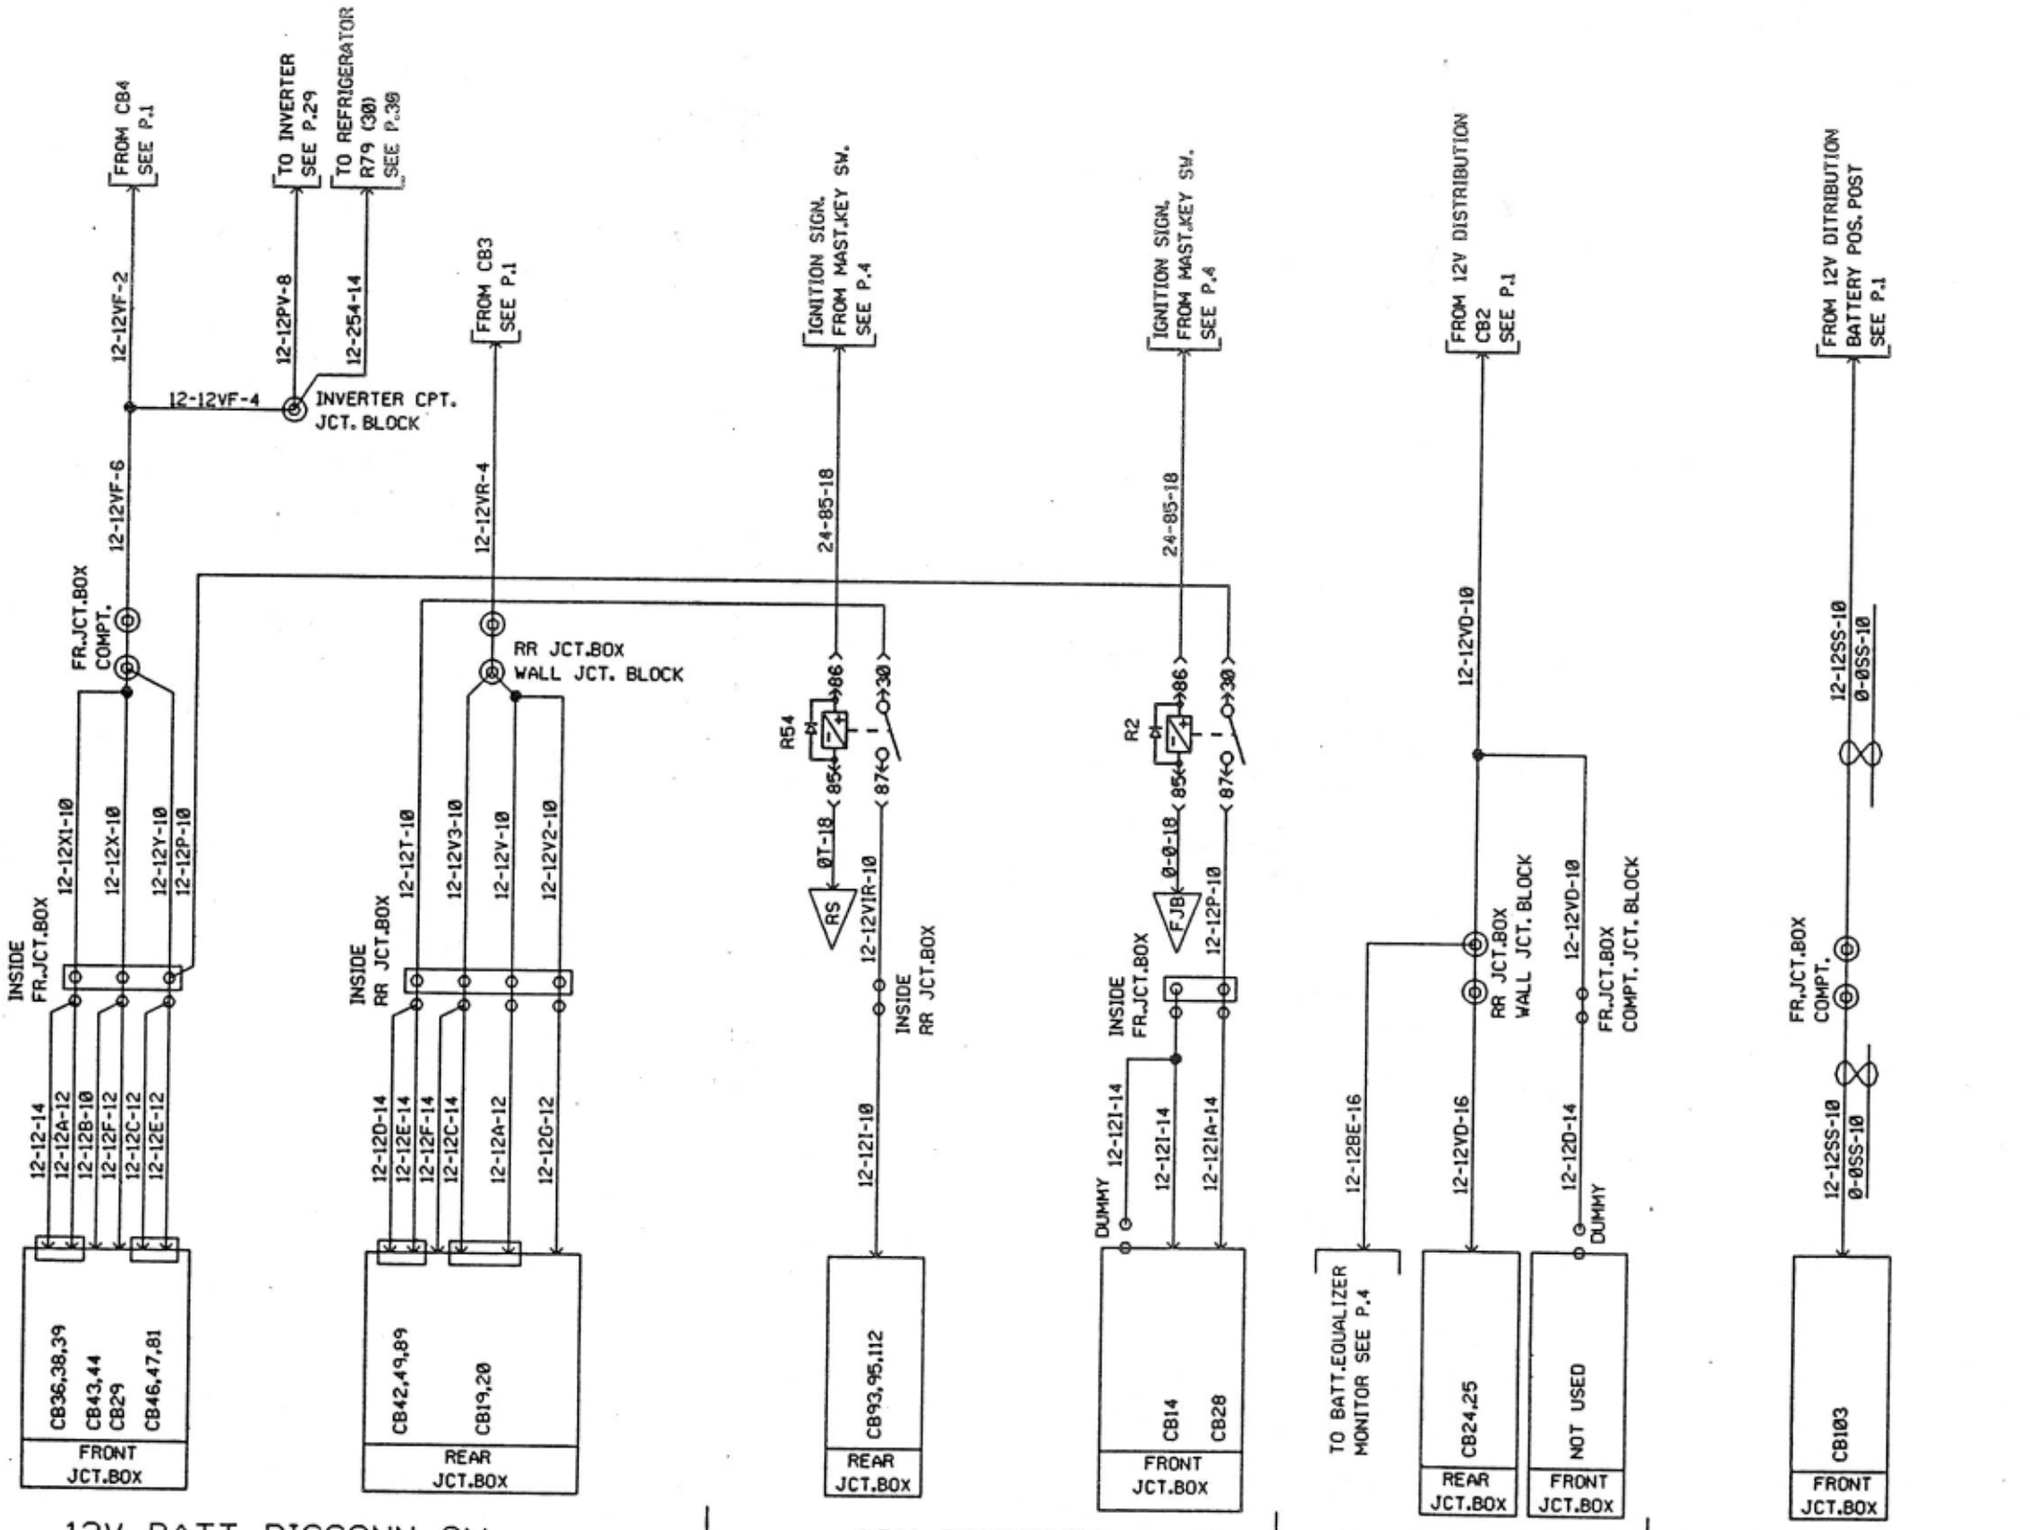
FROM CB4
SEE P.1
TO INVERTER
SEE P.29
TO REFRIGERATOR
R79 (30)
SEE P.38
12-12VF-2
12-12PV-8
12-254-14
12-12VF-4
INVERTER CPT.
JCT. BLOCK
FROM CB3
SEE P.1
IGNITION SIGN.
FROM MAST.KEY SW.
SEE P.4
IGNITION SIGN.
FROM MAST.KEY SW.
SEE P.4
FROM 12V DISTRIBUTION
CB2
SEE P.1
FROM 12V DITRIBUTION
BATTERY POS. POST
SEE P.1
12-12VF-6
12-12VR-4
24-85-18
24-85-18
12-12VD-10
12-12SS-10
0-0SS-10
FR.JCT.BOX
COMPT.
RR JCT.BOX
WALL JCT. BLOCK
12-12X1-10
12-12X-10
12-12Y-10
12-12P-10
12-12T-10
12-12V3-10
12-12V-10
12-12V2-10
R54
86
85
87
30
0T-18
RS
12-12VIR-10
INSIDE
RR JCT.BOX
R2
0-0-18
FJB
12-12P-10
INSIDE
FR.JCT.BOX
12-12I-10
12-12I-14
12-12IA-14
DUMMY
12-12BE-16
12-12VD-16
12-12VD-10
12-12D-14
DUMMY
INSIDE
FR.JCT.BOX
12-12-14
12-12A-12
12-12B-10
12-12F-12
12-12C-12
12-12E-12
INSIDE
RR JCT.BOX
12-12D-14
12-12E-14
12-12F-14
12-12C-14
12-12A-12
12-12G-12
CB36,38,39
CB43,44
CB29
CB46,47,81
FRONT
JCT.BOX
CB42,49,89
CB19,20
REAR
JCT.BOX
CB93,95,112
REAR
JCT.BOX
CB14
CB28
FRONT
JCT.BOX
TO BATT.EQUALIZER
MONITOR SEE P.4
CB24,25
REAR
JCT.BOX
NOT USED
FRONT
JCT.BOX
FR.JCT.BOX
COMPT.
CB103
FRONT
JCT.BOX
12V BATT. DISCONN. SW.
12V IGNITION
12V HOT WIRE
12V SOUND SYSTEM

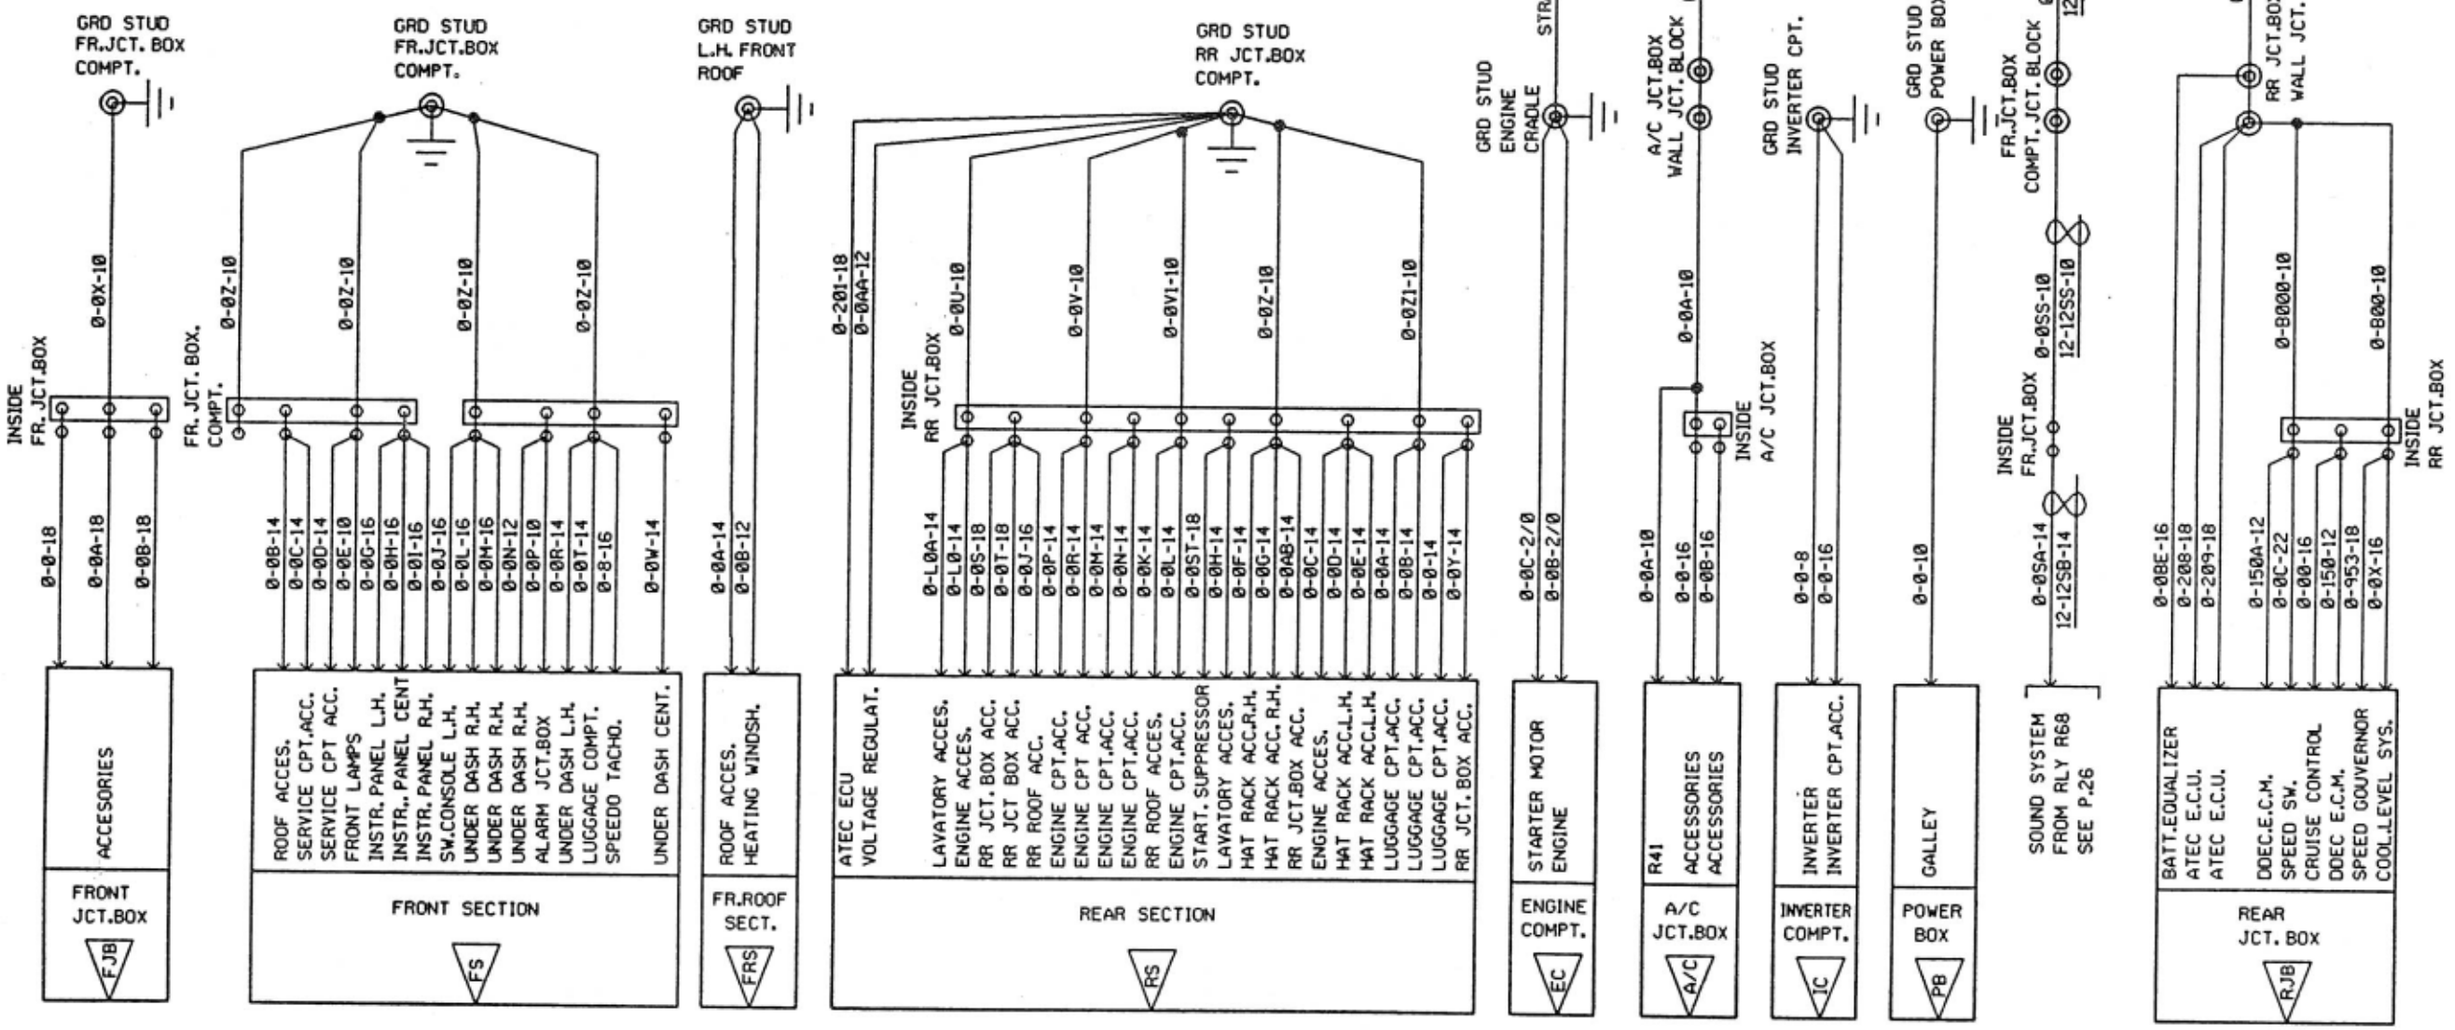
GRD STUD FR.JCT. BOX COMPT.
GRD STUD FR.JCT.BOX COMPT.
GRD STUD L.H. FRONT ROOF
GRD STUD RR JCT.BOX COMPT.
GRD STUD ENGINE COMPT.
STRAP
GRD STUD ENGINE CRADLE
GRD STUD CONDENSER COMPT.
TO COND. FAN MOTOR L.H. SEE P.19
A/C JCT.BOX WALL JCT. BLOCK
0-0-10
GRD STUD INVERTER CPT.
GRD STUD POWER BOX CPT.
TO BATT. NEG. POST SEE P.1
FR.JCT.BOX COMPT.JCT.BLOCK
0-0SS-10
12-12SS-10
FROM BATT. NEG. POST SEE P.1
0-00-4
RR JCT.BOX WALL JCT. BLOCK
INSIDE FR. JCT.BOX
0-0-18
0-0A-18
0-0B-18
0-0X-10
ACCESORIES
FRONT JCT.BOX
FJB
FR. JCT. BOX. COMPT.
0-0Z-10
0-0B-14
0-0C-14
0-0D-14
0-0E-10
0-0G-16
0-0H-16
0-0I-16
0-0J-16
0-0L-16
0-0M-16
0-0N-12
0-0P-10
0-0R-14
0-0T-14
0-8-16
0-0W-14
ROOF ACCES.
SERVICE CPT.ACC.
SERVICE CPT ACC.
FRONT LAMPS
INSTR. PANEL L.H.
INSTR.. PANEL CENT
INSTR. PANEL R.H.
SW.CONSOLE L.H.
UNDER DASH R.H.
UNDER DASH R.H.
UNDER DASH R.H.
ALARM JCT.BOX
UNDER DASH L.H.
LUGGAGE COMPT.
SPEEDO TACHO.
UNDER DASH CENT.
FRONT SECTION
FS
0-0A-14
0-0B-12
ROOF ACCES.
HEATING WINDSH.
FR.ROOF SECT.
FRS
0-201-18
0-0AA-12
INSIDE RR JCT.BOX
0-0U-10
0-0V-10
0-0VI-10
0-0Z-10
0-0ZI-10
0-L0A-14
0-L0-14
0-0S-18
0-0T-18
0-0J-16
0-0P-14
0-0R-14
0-0N-14
0-0N-14
0-0K-14
0-0L-14
0-0ST-18
0-0H-14
0-0F-14
0-0G-14
0-0AB-14
0-0C-14
0-0D-14
0-0E-14
0-0A-14
0-0B-14
0-0-14
0-0Y-14
ATEC ECU
VOLTAGE REGULAT.
LAVATORY ACCES.
ENGINE ACCES.
RR JCT. BOX ACC.
RR JCT BOX ACC.
RR ROOF ACC.
ENGINE CPT.ACC.
ENGINE CPT ACC.
ENGINE CPT.ACC.
ENGINE CPT.ACC.
RR ROOF ACCES.
ENGINE CPT.ACC.
START. SUPPRESSOR
LAVATORY ACCES.
HAT RACK ACC.R.H.
HAT RACK ACC. R.H.
RR JCT.BOX ACC.
ENGINE ACCES.
HAT RACK ACC.L.H.
HAT RACK ACC.L.H.
LUGGAGE CPT.ACC.
LUGGAGE CPT.ACC.
LUGGAGE CPT.ACC.
RR JCT.BOX ACC.
REAR SECTION
RS
0-0C-2/0
0-0B-2/0
STARTER MOTOR ENGINE
ENGINE COMPT.
EC
0-0A-10
0-0-16
0-0B-16
R41 ACCESSORIES ACCESSORIES
A/C JCT.BOX
A/C
INSIDE A/C JCT.BOX
0-0-8
0-0-16
INVERTER INVERTER CPT.ACC.
INVERTER COMPT.
IC
0-0-10
GALLEY
POWER BOX
PB
INSIDE FR.JCT.BOX
0-0SA-14
12-12SB-14
SOUND SYSTEM FROM RLY R68 SEE P.26
0-08E-16
0-208-18
0-209-18
0-150A-12
0-0C-22
0-00-16
0-150-12
0-953-18
0-0X-16
0-8000-10
0-800-10
BATT.EQUALIZER
ATEC E.C.U.
ATEC E.C.U.
DDEC.E.C.M.
SPEED SW.
CRUISE CONTROL
DDEC E.C.M.
SPEED GOUVERNOR
COOL.LEVEL SYS.
REAR JCT. BOX
RJB
INSIDE RR JCT.BOX
CHASSIS GROUND
BATTERY GROUND

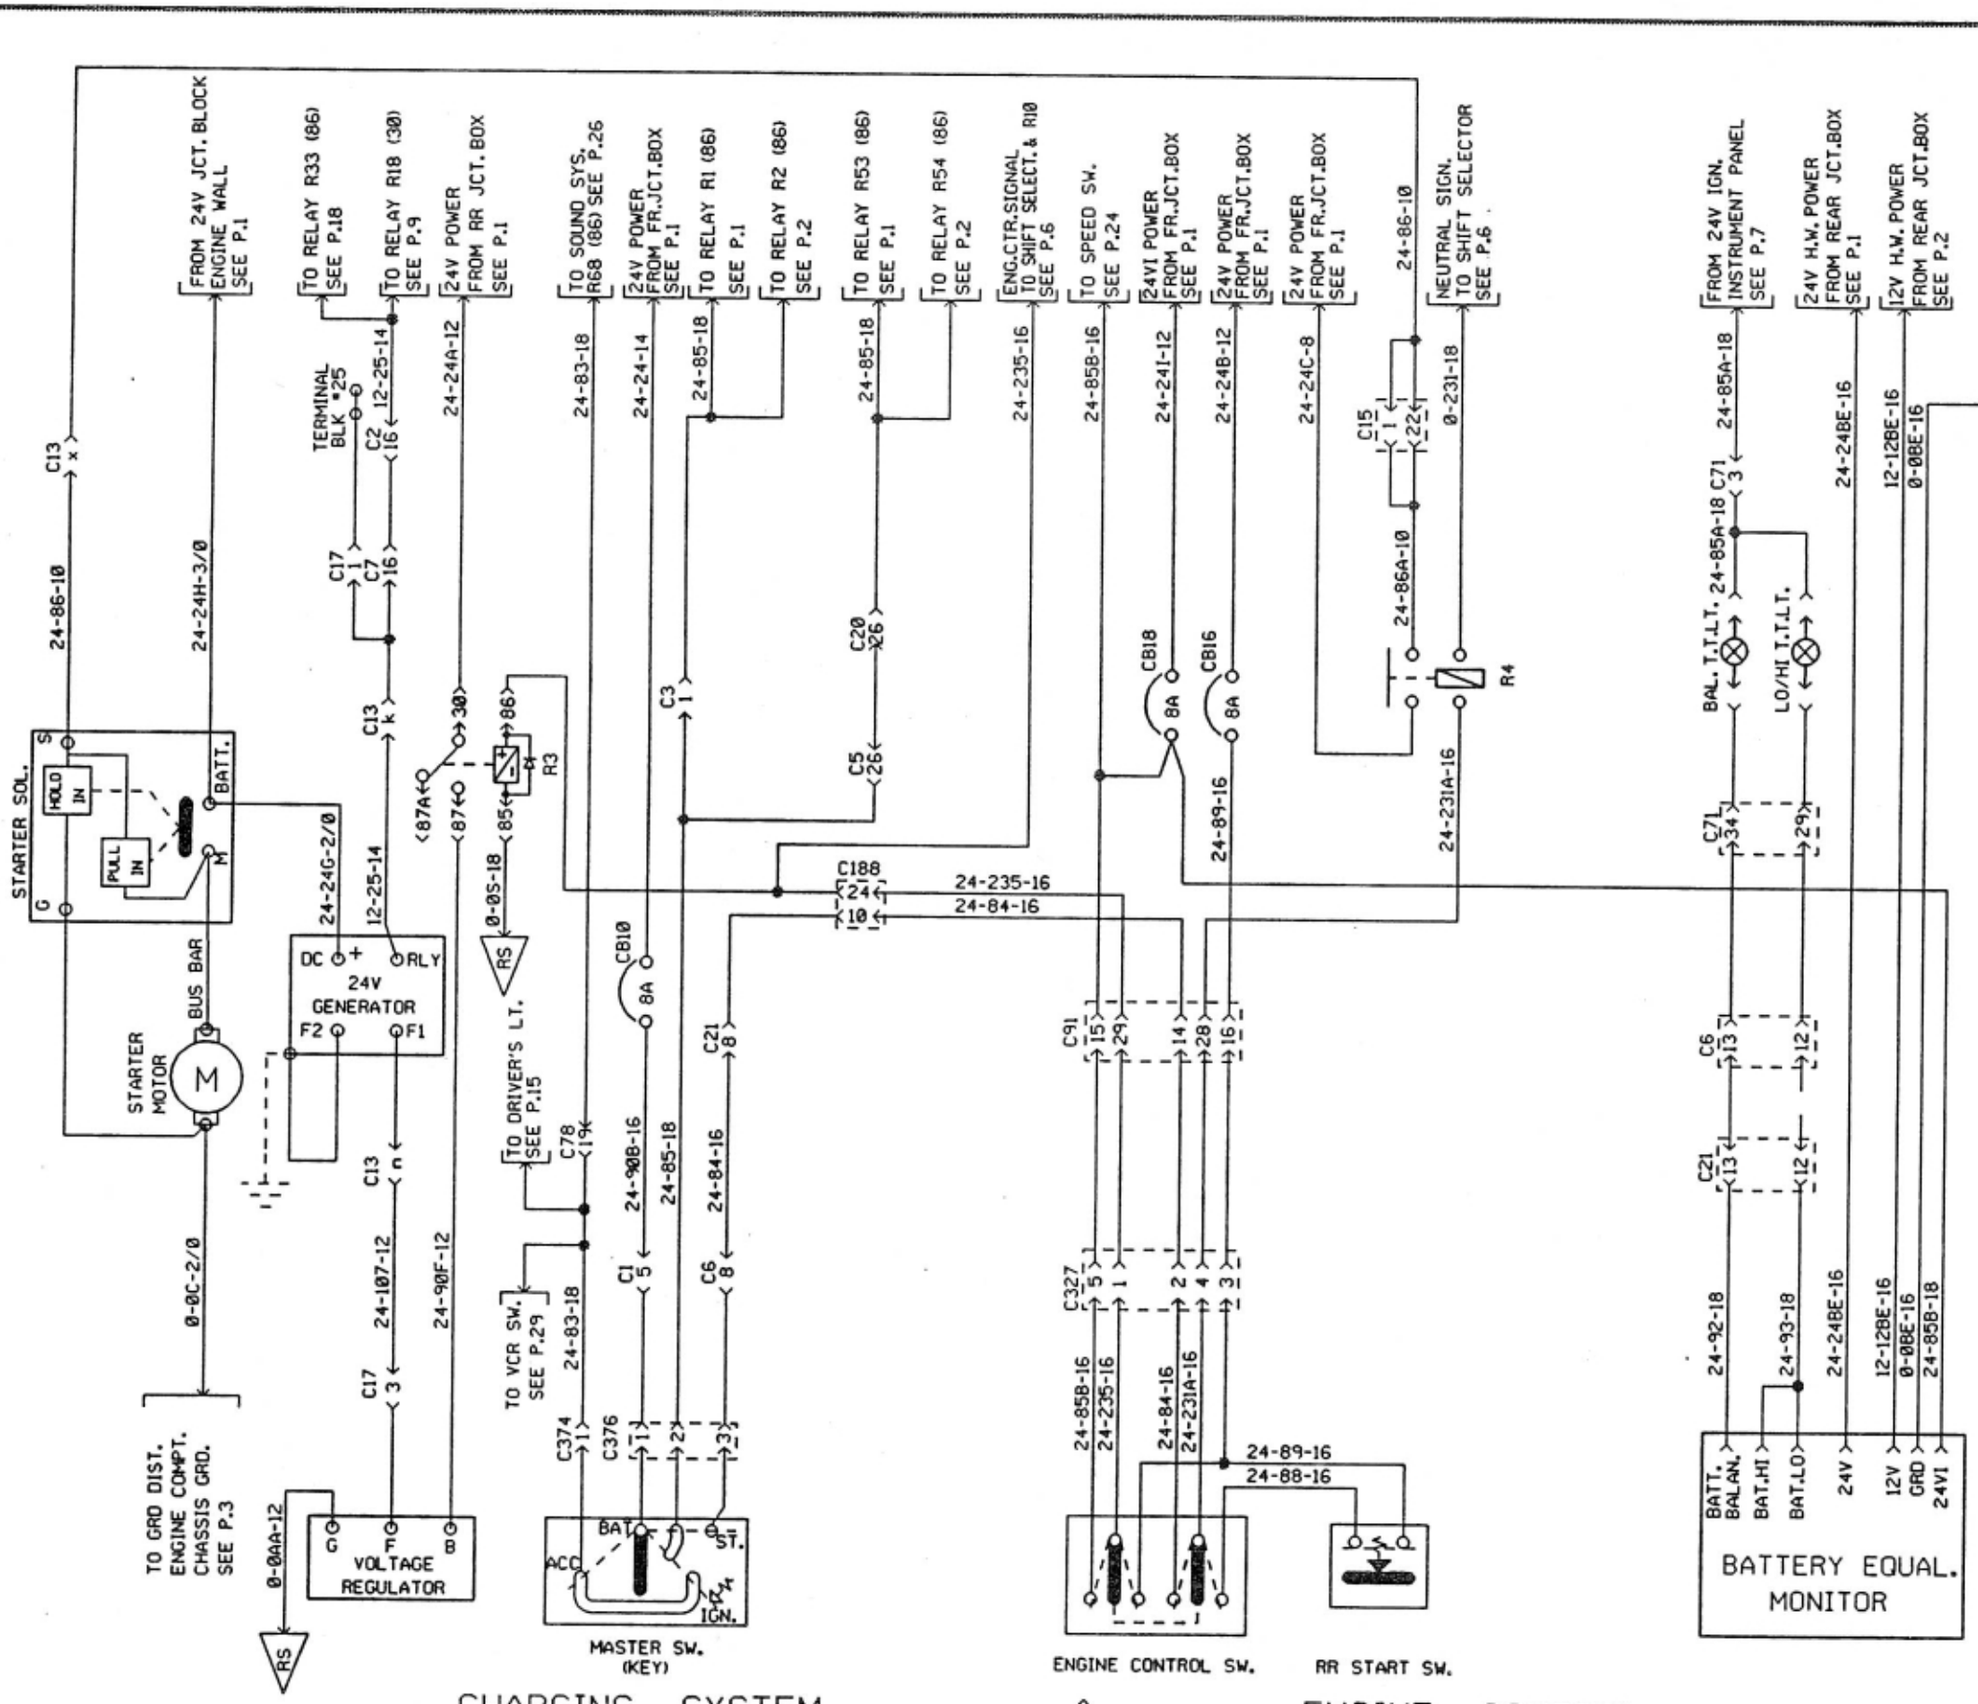

CHARGING SYSTEM & ENGINE CONTROL

PREVOST CAR inc.	WIRING DIAGRAM	NO: D060783	REVISION DATE 93-01-14	P. 4

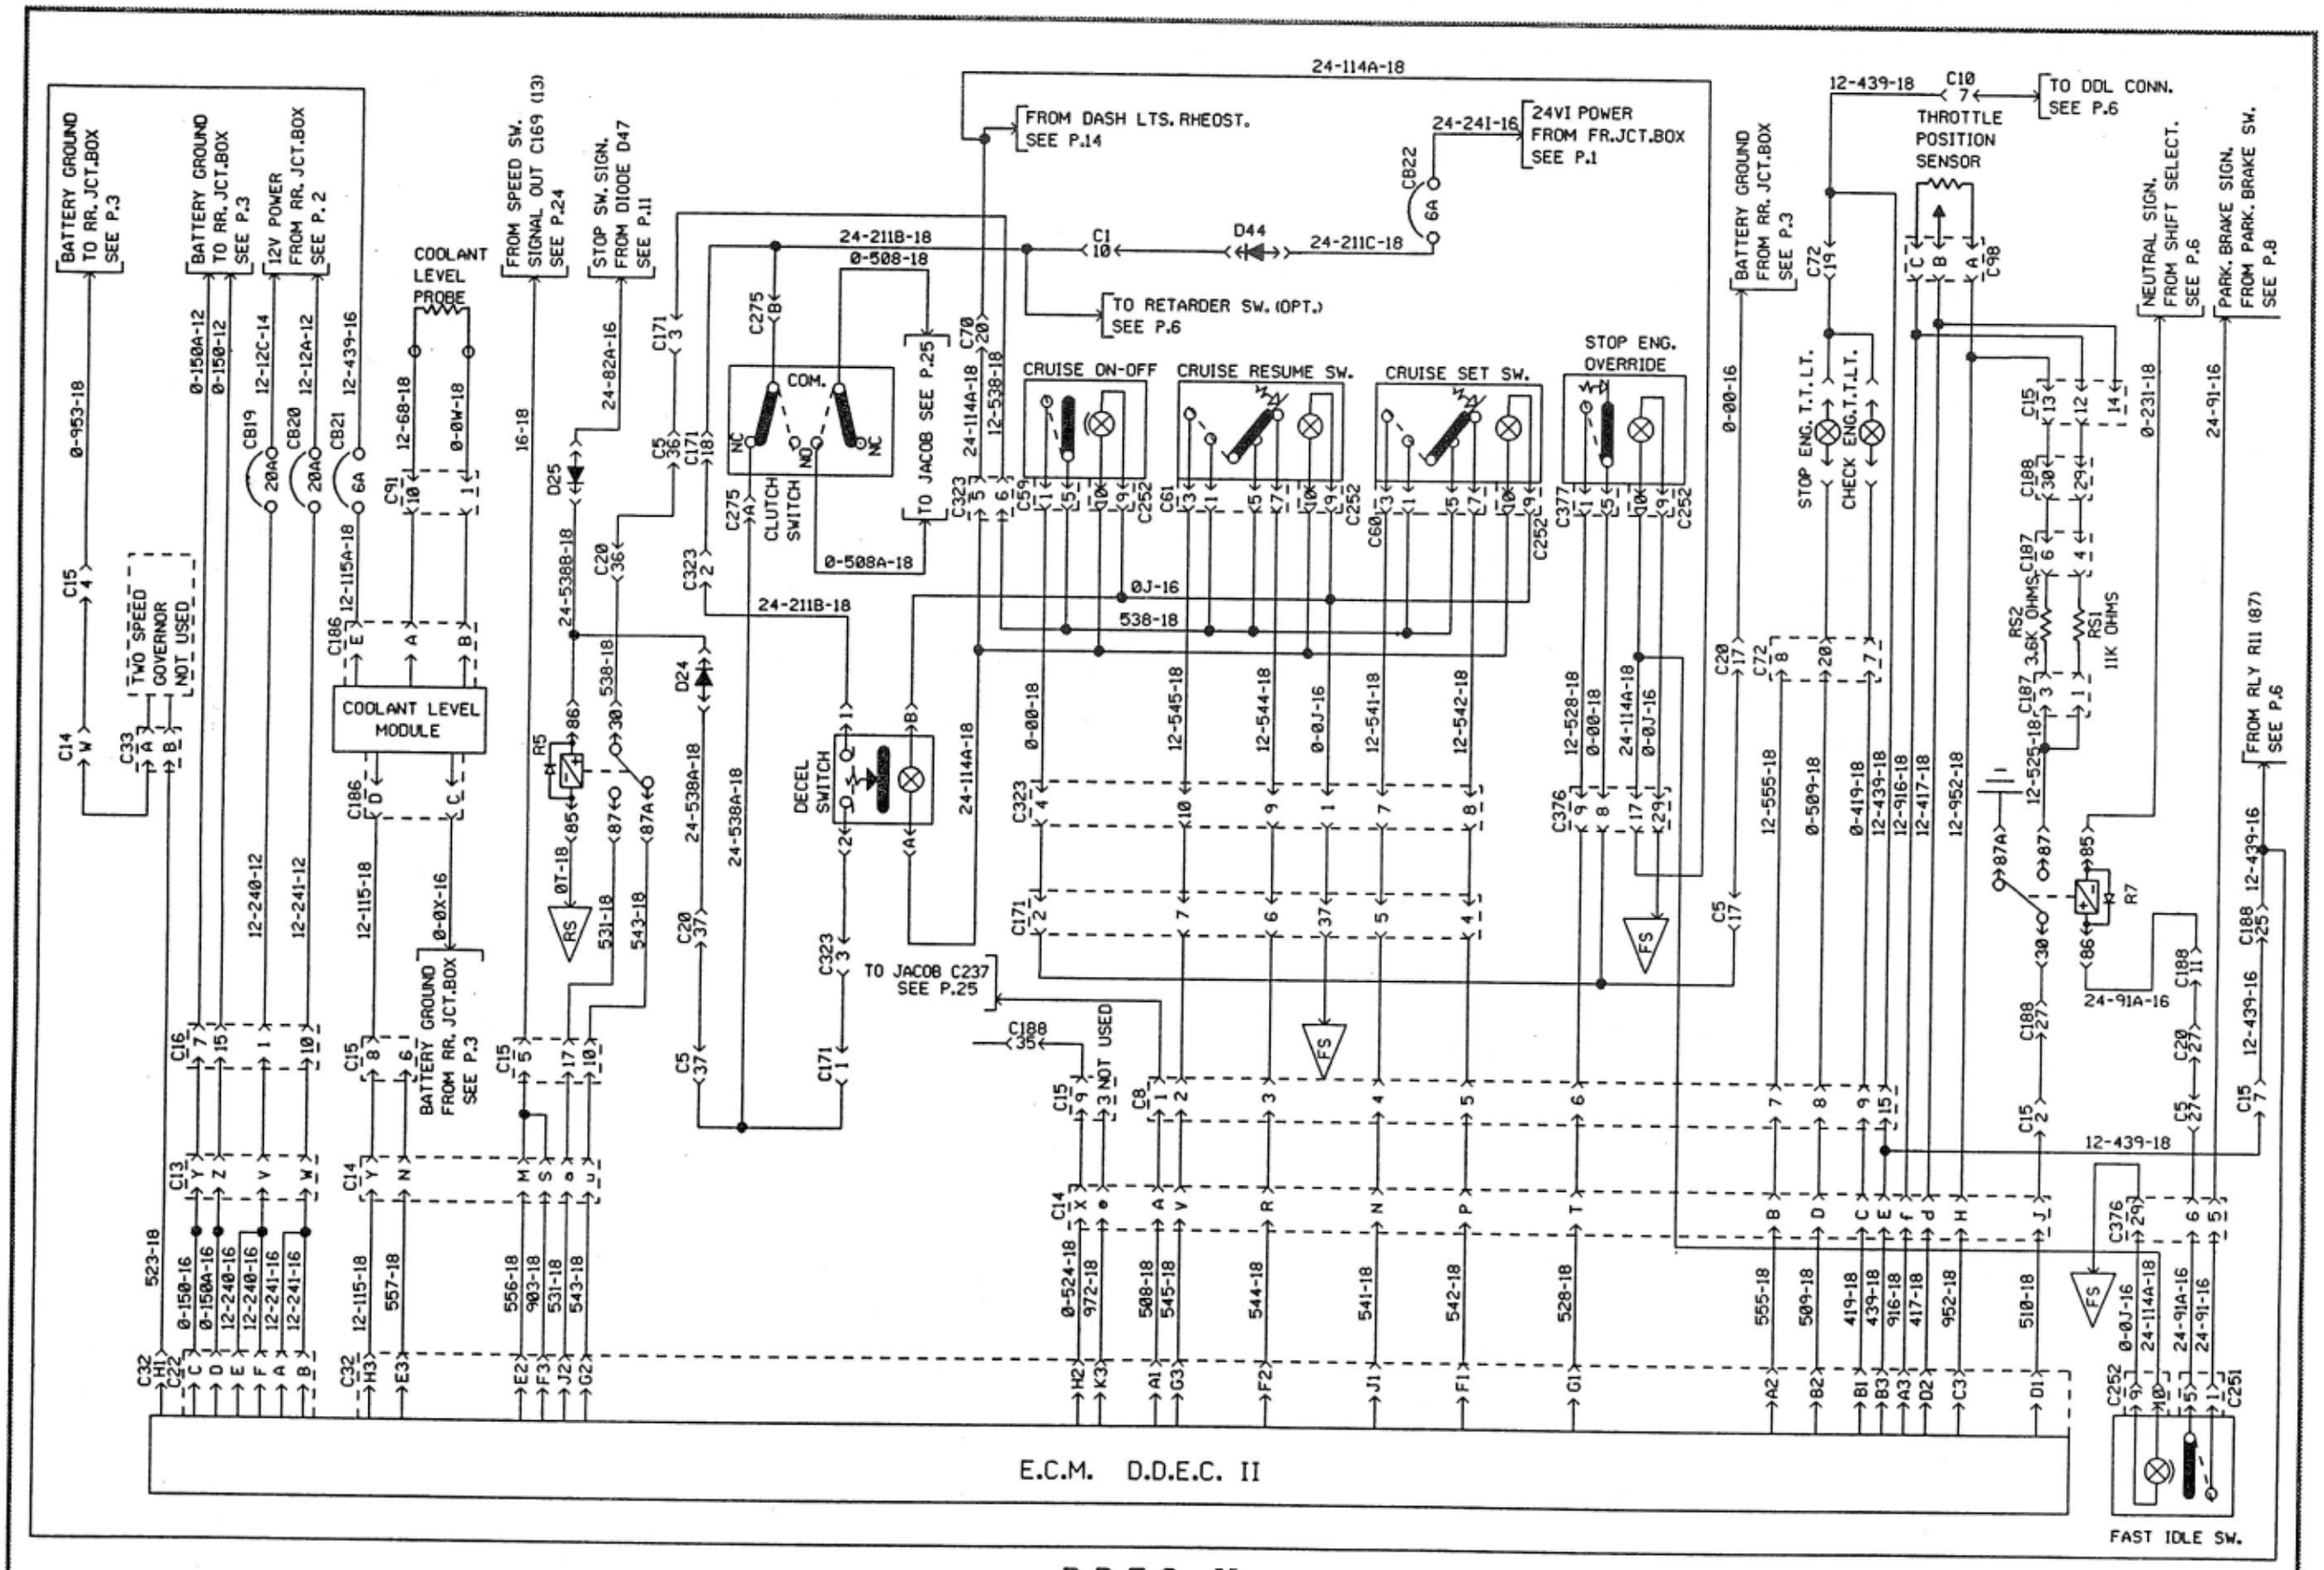

D.D.E.C. II

PREVOST CAR inc.	WIRING DIAGRAM	NO: D060783	REVISION DATE 92-10-30	P. 5

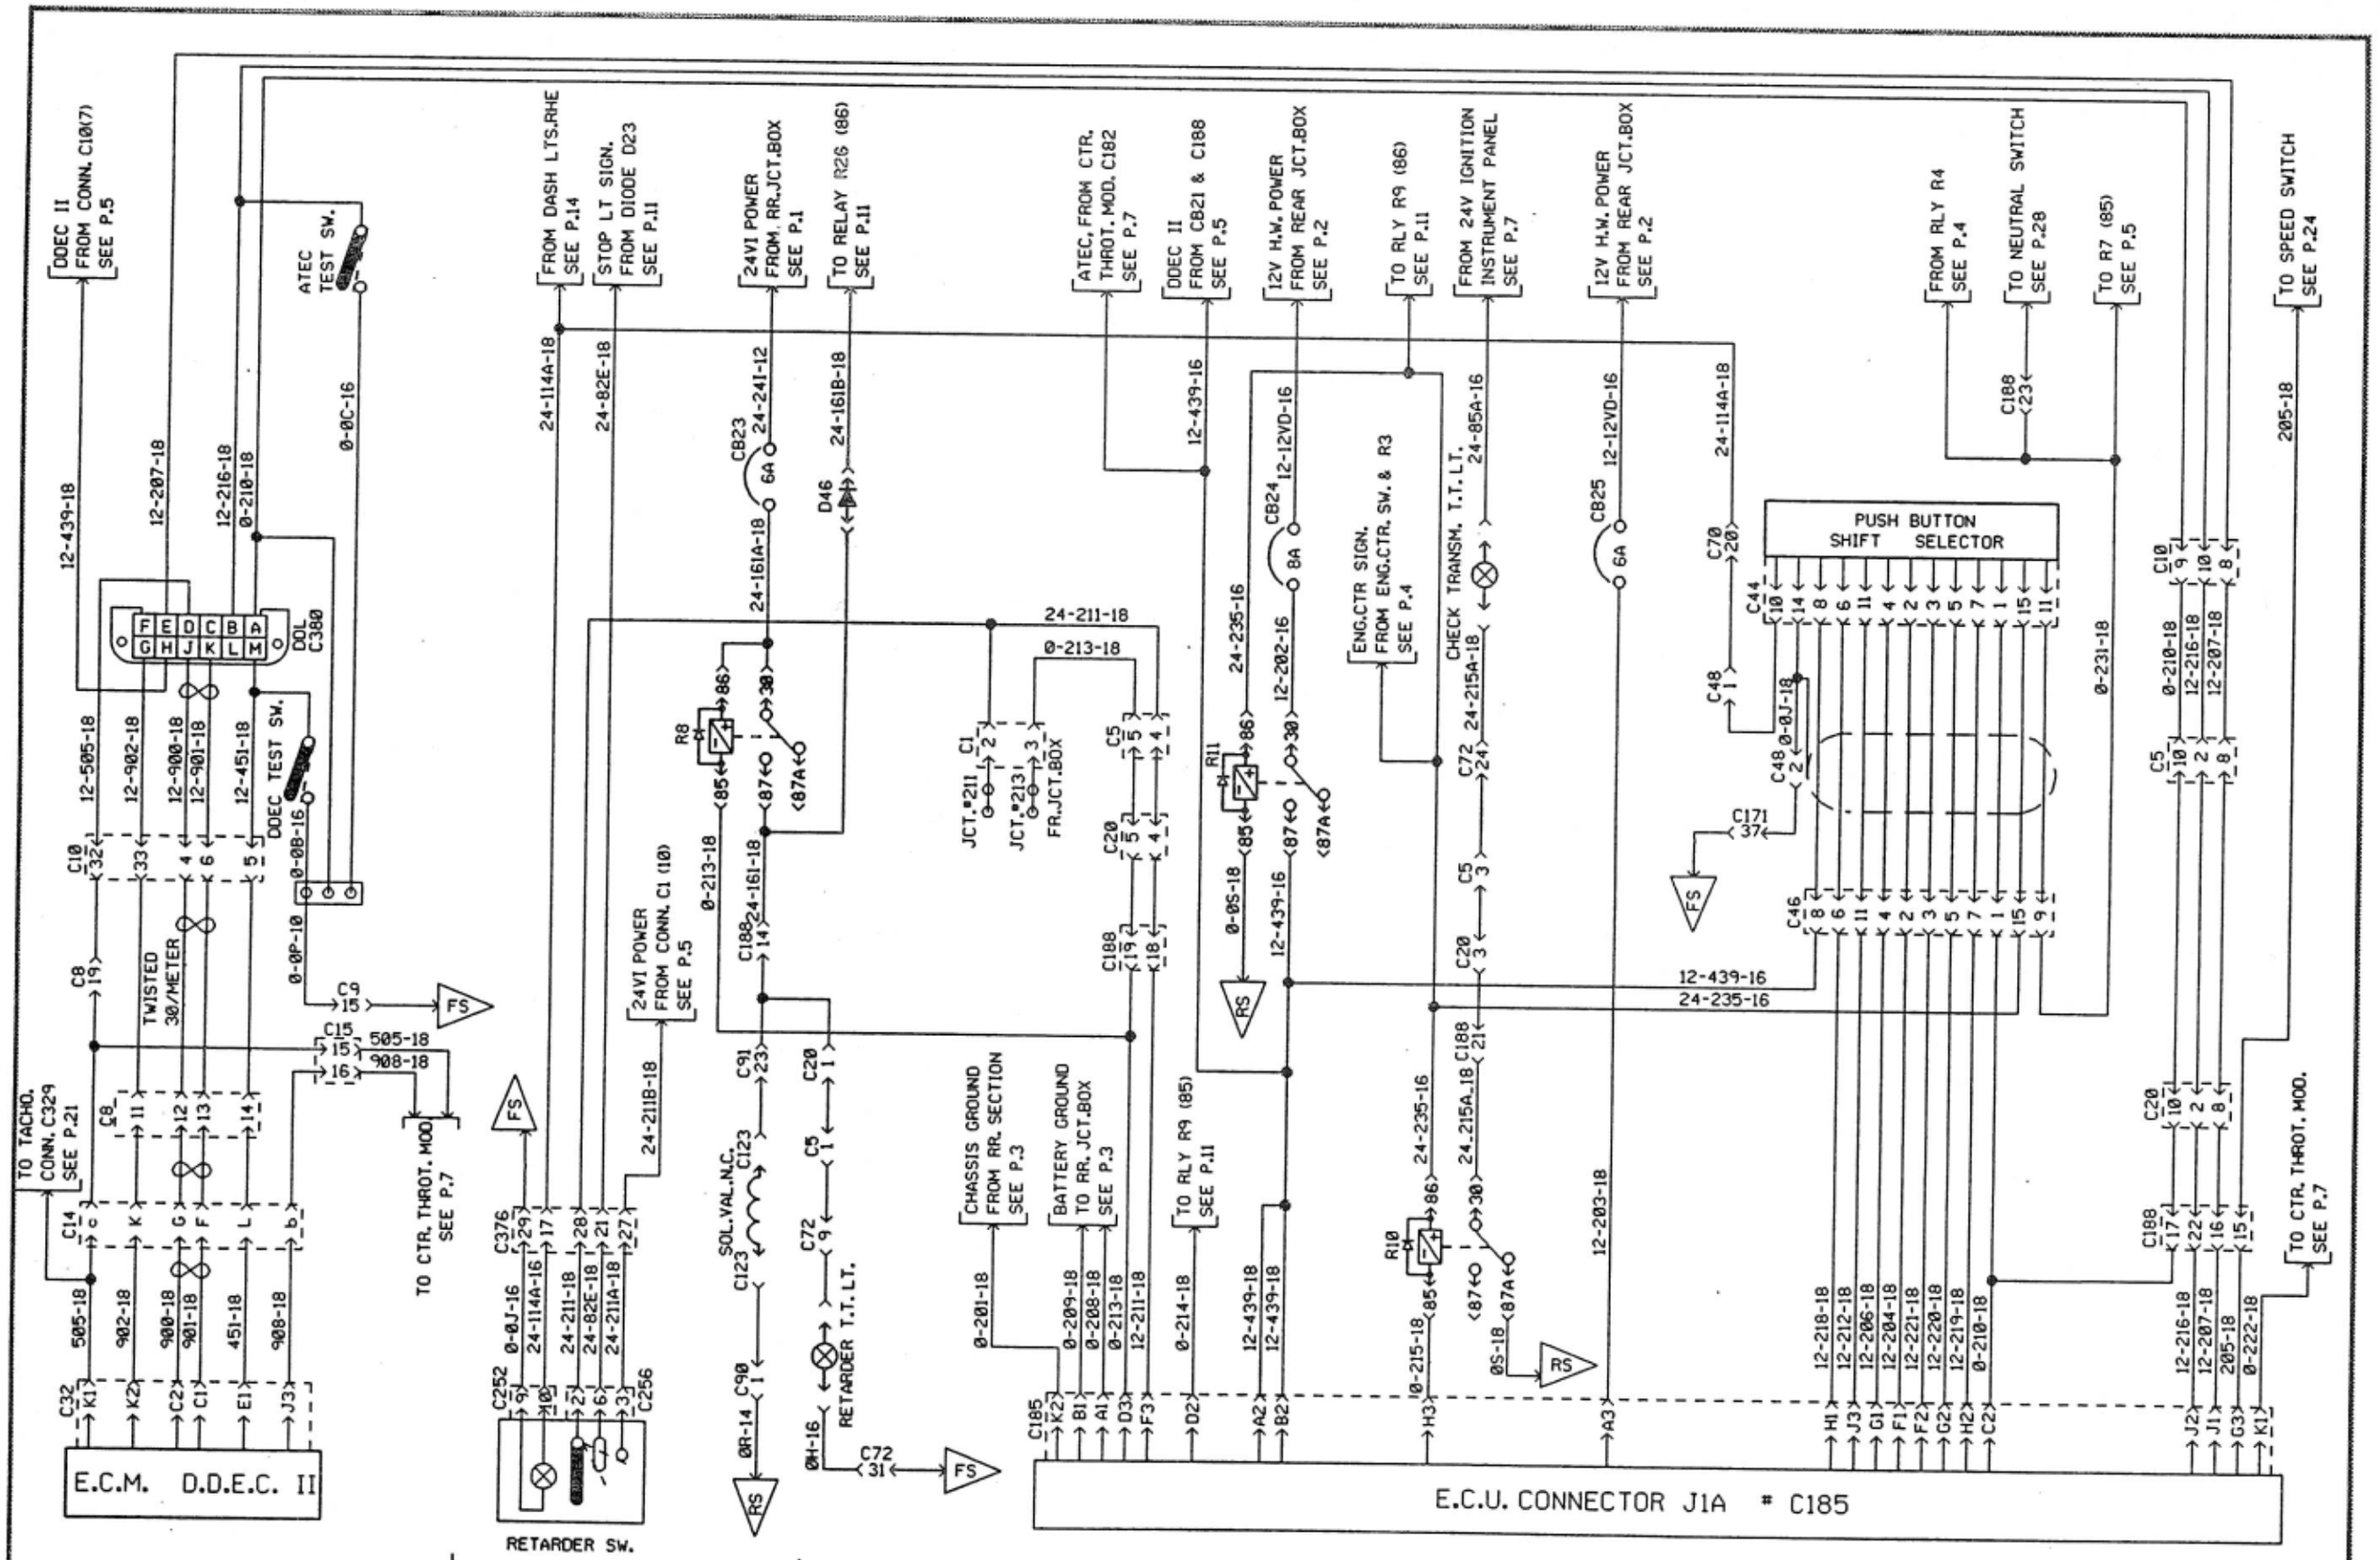

PREVOST CAR inc.	WIRING DIAGRAM	NO: D060783	REVISION DATE 92-10-30	P. 6

ATEC
FROM ECU MOD. C185 (K1)
SEE P.6

TO RLY R58 POS.85
SEE P.28

DDEC
FROM ECM CON. C32
SEE P.6

JCT.BLOCK
R.JCT.BOX

0-222-18

908-18

908-18

C188
28
26

12-505-18

C180 GREEN
C181 YELLOW
WHITE

THROTTLE
INTERFACE
MODULE
ATEC/DDEC

PURP.
PINK
GREEN
BROWN
GREEN

C182

FROM ECU MOD. C185
SEE P.6

12-439-18

BATTERY GROUND
TO RR. JCT.BOX
SEE P.3

0-208-18

24VI POWER
FROM FR.JCT.BOX
SEE P.1

24-241-16

CB27
8A

24-85A-16

C2
5

24V IGNITION
INSTRUMENT
PANEL

C71
3
C72
24
C73
16
C74
20

24-85A-16

C10
13

FROM DASH LTS. RHEOST.
SEE P.14

24-114A-18

24-85A-16
24-85A-16
24-85A-16

C74
2

C357
1

C358
1

C73
5

C71
25

12VI POWER
FROM FR.JCT.BOX
SEE P.2

TO TACHO. & SPEEDO
SEE P.21

12-12H-18

CB28
6A

12-121A-14

C1
7

12-12H-18

C71
2

24V
VOLTMETER

12V
VOLTMETER

0-0-16

24V POWER
FROM FR.JCT.BOX
SEE P.1

12V POWER
FROM FR.JCT.BOX
SEE P .2

12-12F-12

CB29
20A

12-52-14

R12

86
30
85
87
87A

24-24A-14

CB30
6A

C1
11

24-123A-18

C72
18

C10
16

FIRE T.T.L.T.

C72
17

C10
15

C71
37

0-0G-16

FS

C1
8

0-53-18

C376
22

C11
5

12-52A-14

C2
6

C101
A

ELECTRICAL
HORNS

HORN
BUTTON

C376
29

0-0J-16

FS

C11
21

0-0D-14

C101
B

FS

C90
1

0-0R-14

RS

C91
18

C20
13

12-123B-18

C5
13

C10
16

FIRE
DETECTOR

TRANSMISSION MAIN CONNECTOR

C19
N L O M U C V T D K W B A G F H E P

BLACK
BLUE
RED

C30
C B A

SPEED
SENSOR

C18
A B

12-106A-18
12-104-18
12-124-18

SHEILD

C31
M K N L U C V P D J W B A G F H E R

C30
C B A

C31
S T

SHEILD

12-117-18
12-109-18
12-107-18
12-119-18
12-105-18
12-121-18
12-120-18
12-115-18
12-111-18
12-108-18
12-110-18
12-114-18
12-123-18
12-116-18
12-118-18
12-122-18
12-101-18
12-106A-18

C29
Y3 Y2 Y1 W2 W1 T3 T2 T1 M3 M2 S1 L3 L2 R1 P3 N3 N2 N1

12-104-18
12-124-18

113-18
112-18

P2 P1 M1 L1

E.C.U. CONNECTOR J1B # C29

A.T.E.C.

SONALERT
86
85
FAST
SLO
87

24-85F-18

C425
D1
D2

C10
31
30
29

C72
25

24-160-16

TAG AXLE T.T.L.T.

C72
27

24-13A-18

LO-AIR PRIM. T.T.L.T.

C72
12

24-138-18

LO-AIR SEC. T.T.L.T.

C12
5

TAG AXLE
PRESS. SW.N.C.

C11
2

LO-AIR PRIM.
PRESS. SW.N.C.

C11
3

LO-AIR SEC.
PRESS. SW.N.C.

0-0D-14

C11
21

FS

C74
1

0-01-16

FS

C7
8

24-110-18

C13
F

WATER
TEMP.
SENSOR

C357
2
3

C74
24

C7
9

24-117A-18

C13
0

TRANSM.
OIL TEMP
SENSOR

C358
2
3

C59
8

24-76-18

C79
23

C152
8

FUEL
TANK
UNIT

C152
A

C136
m

0-0-16

A/C

C73
15
3

24-85A-18

0-0H-16

FS

C71
1

TO LOW BUOY T.T.L.T.
SEE P.28

C20
14

24-113-18

C5
14

C91
17

OIL
PRESSURE
SENSOR

ALARM AND SIGNAL

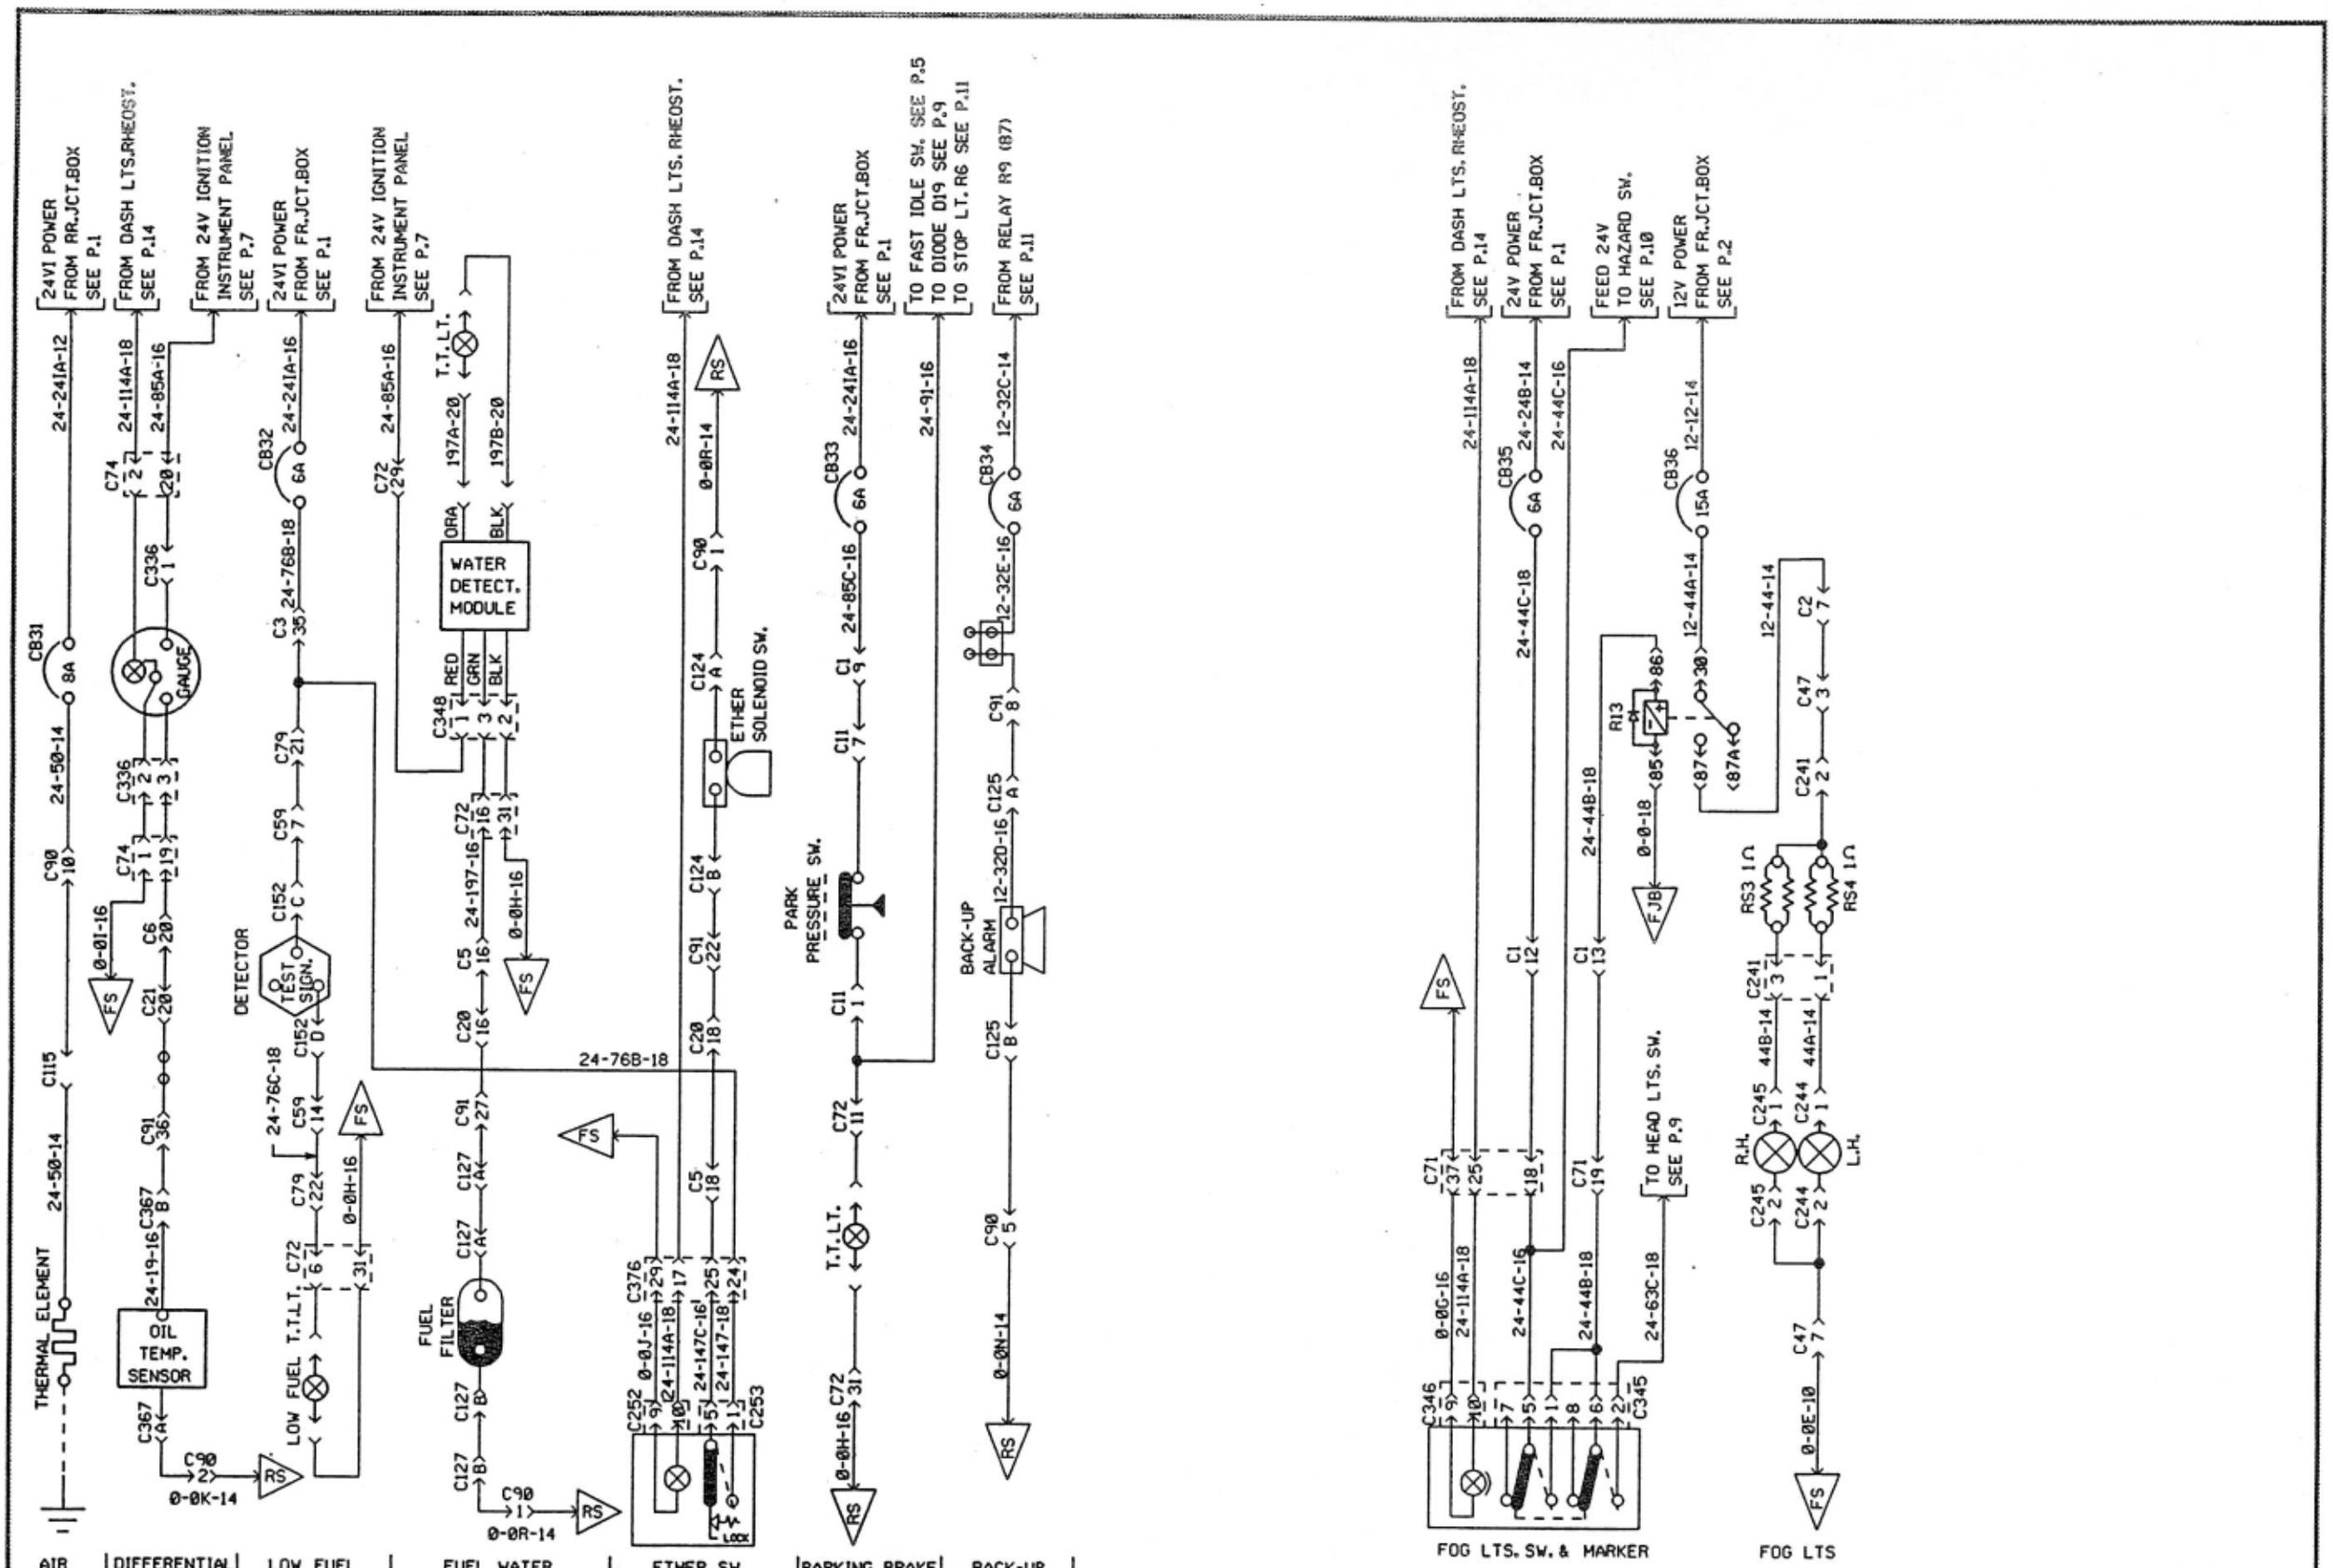
24VI POWER FROM RR.JCT.BOX SEE P.1
FROM DASH LTS.RHEOST. SEE P.14
FROM 24V IGNITION INSTRUMENT PANEL SEE P.7
24VI POWER FROM FR.JCT.BOX SEE P.1
FROM 24V IGNITION INSTRUMENT PANEL SEE P.7
FROM DASH LTS. RHEOST. SEE P.14
24VI POWER FROM FR.JCT.BOX SEE P.1
TO FAST IDLE SW. SEE P.5
TO DIODE D19 SEE P.9
TO STOP LT. R6 SEE P.11
FROM RELAY R9 (87) SEE P.11
WATER DETECT. MODULE
T.T.LT.
ETHER SOLENOID SW.
DETECTOR
TEST SIGN.
OIL TEMP. SENSOR
THERMAL ELEMENT
LOW FUEL T.T.LT.
FUEL FILTER
PARK PRESSURE SW.
BACK-UP ALARM
AIR DRYER
DIFFERENTIAL OIL TEMP.
LOW FUEL LIGHT
FUEL WATER FILTER
ETHER SW. ETHER COLD START
PARKING BRAKE SWITCH
BACK-UP ALARM
FROM DASH LTS. RHEOST. SEE P.14
24V POWER FROM FR.JCT.BOX SEE P.1
FEED 24V TO HAZARD SW. SEE P.10
12V POWER FROM FR.JCT.BOX SEE P.2
TO HEAD LTS. SW. SEE P.9
R.H.
L.H.
FOG LTS. SW. & MARKER
FOG LTS
EXTERIOR LIGHTING

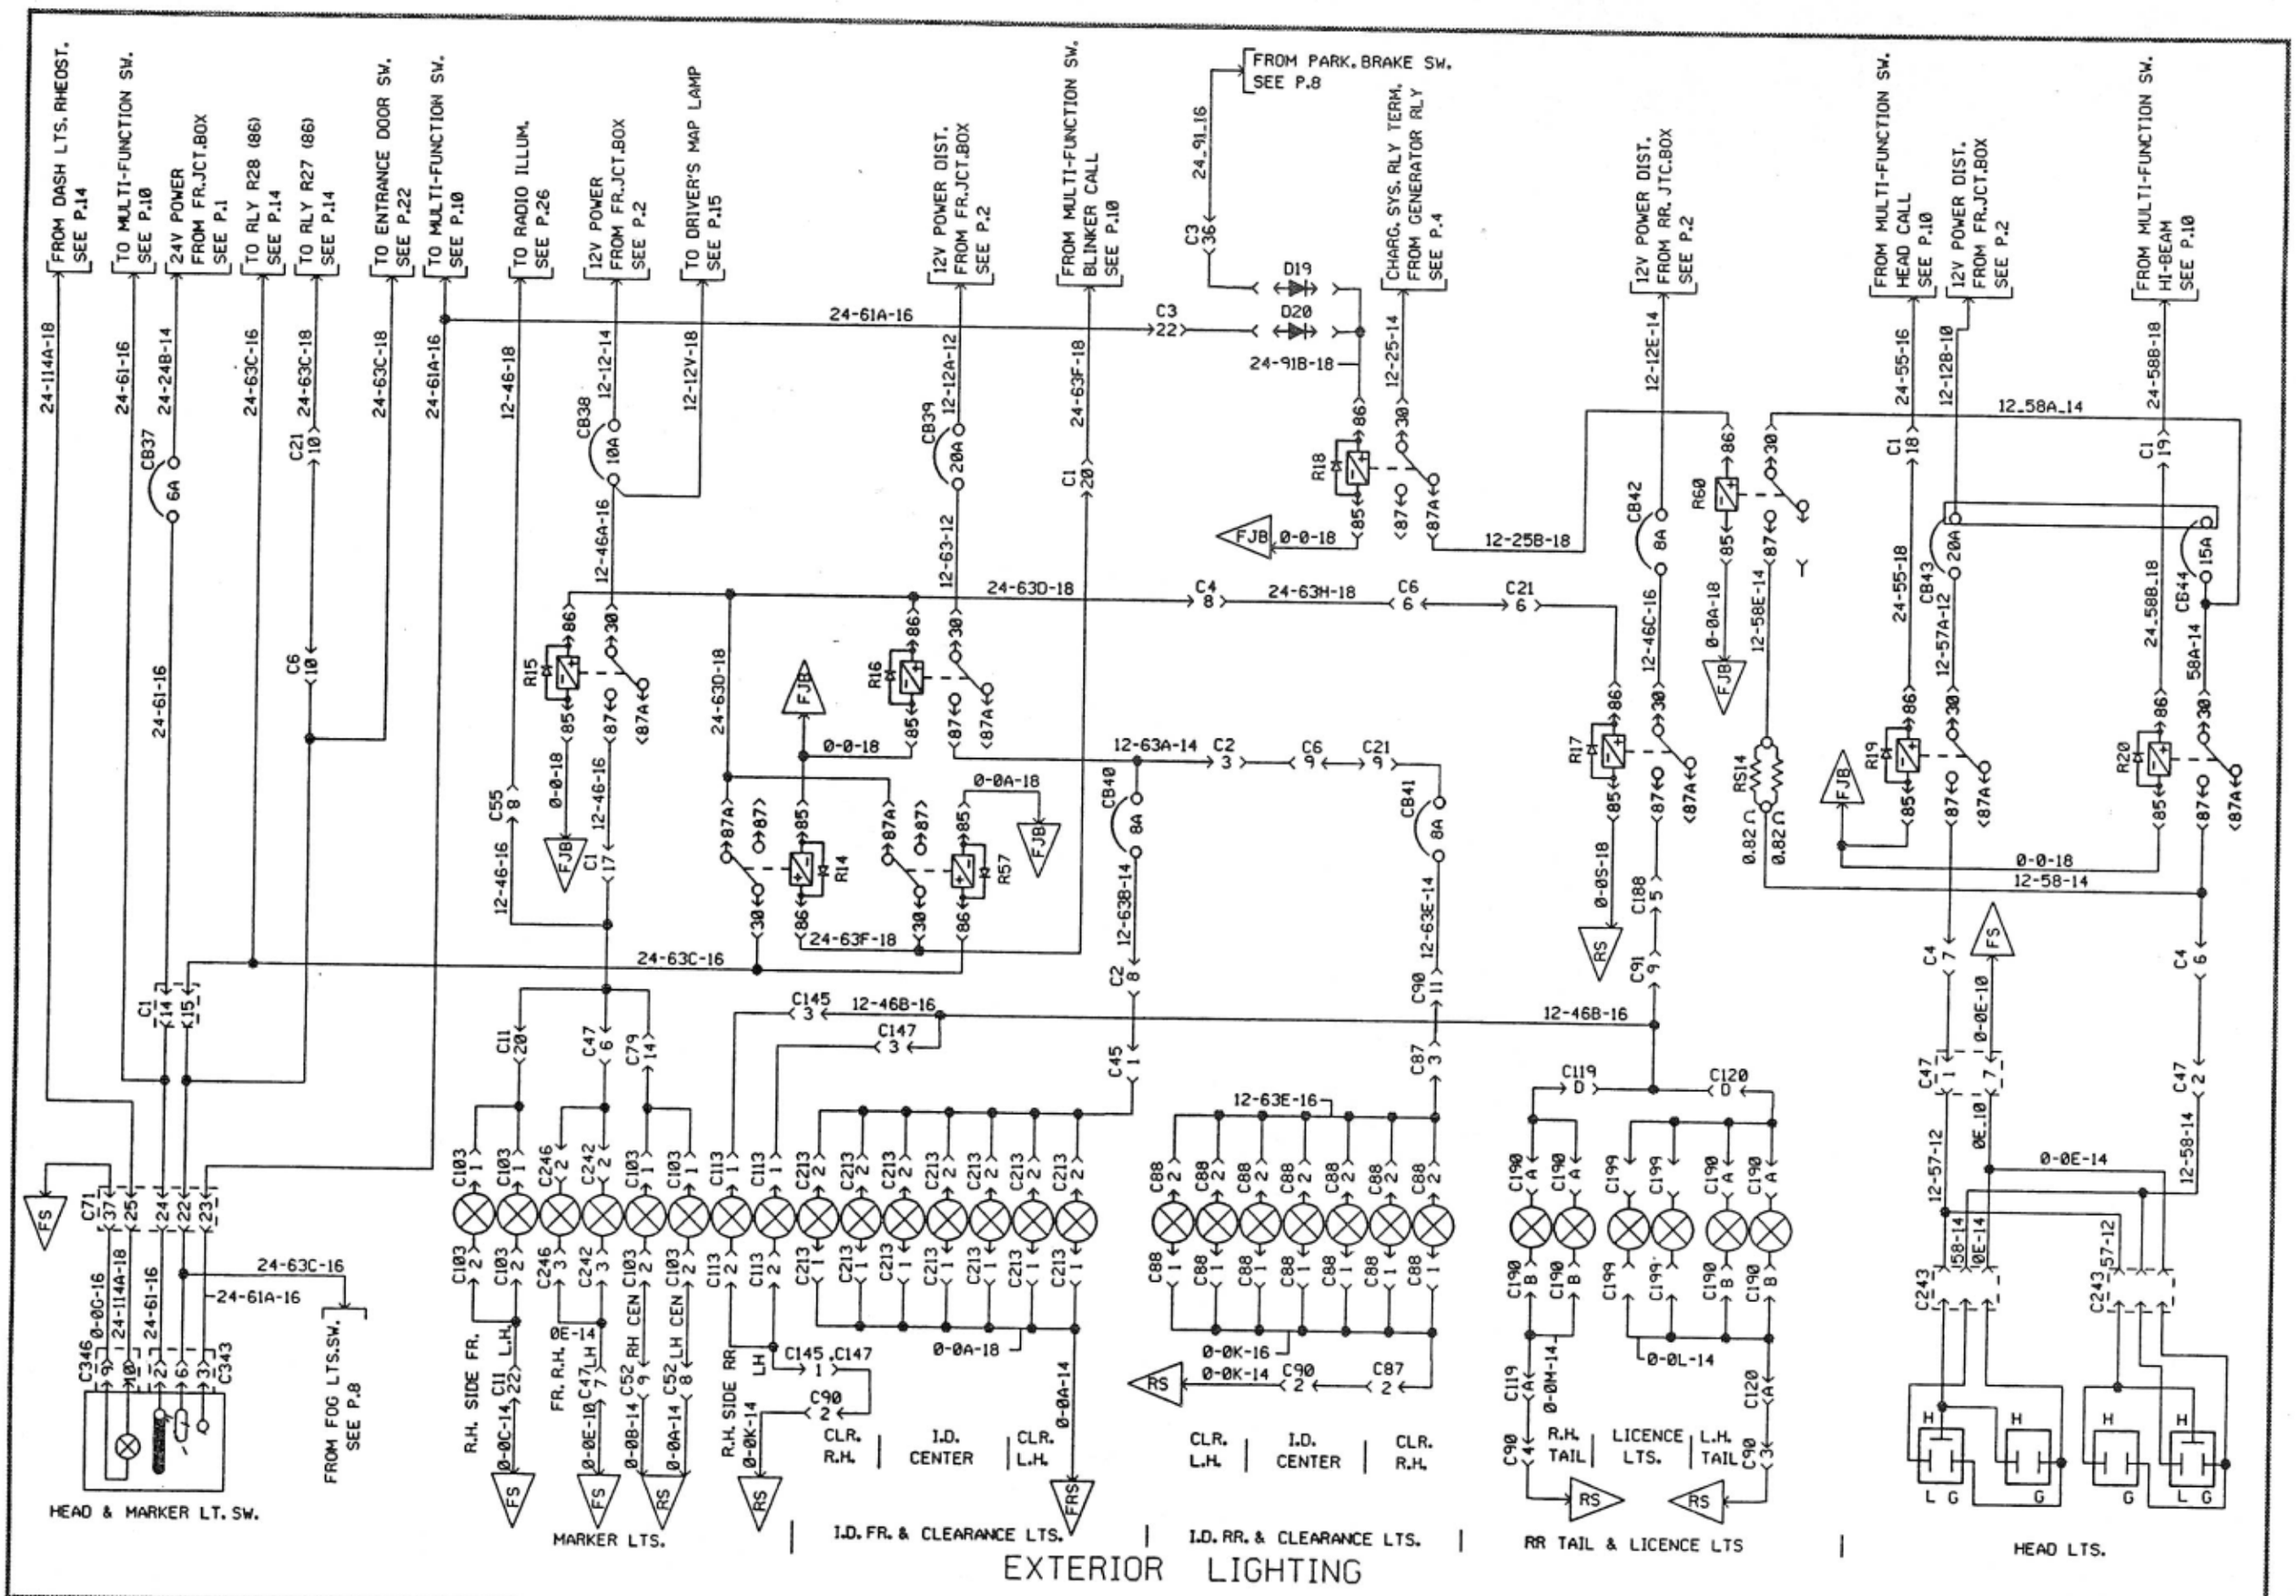

PREVOST CAR inc.	WIRING DIAGRAM	NO: D060783	REVISION DATE 93-01-14	P. 9

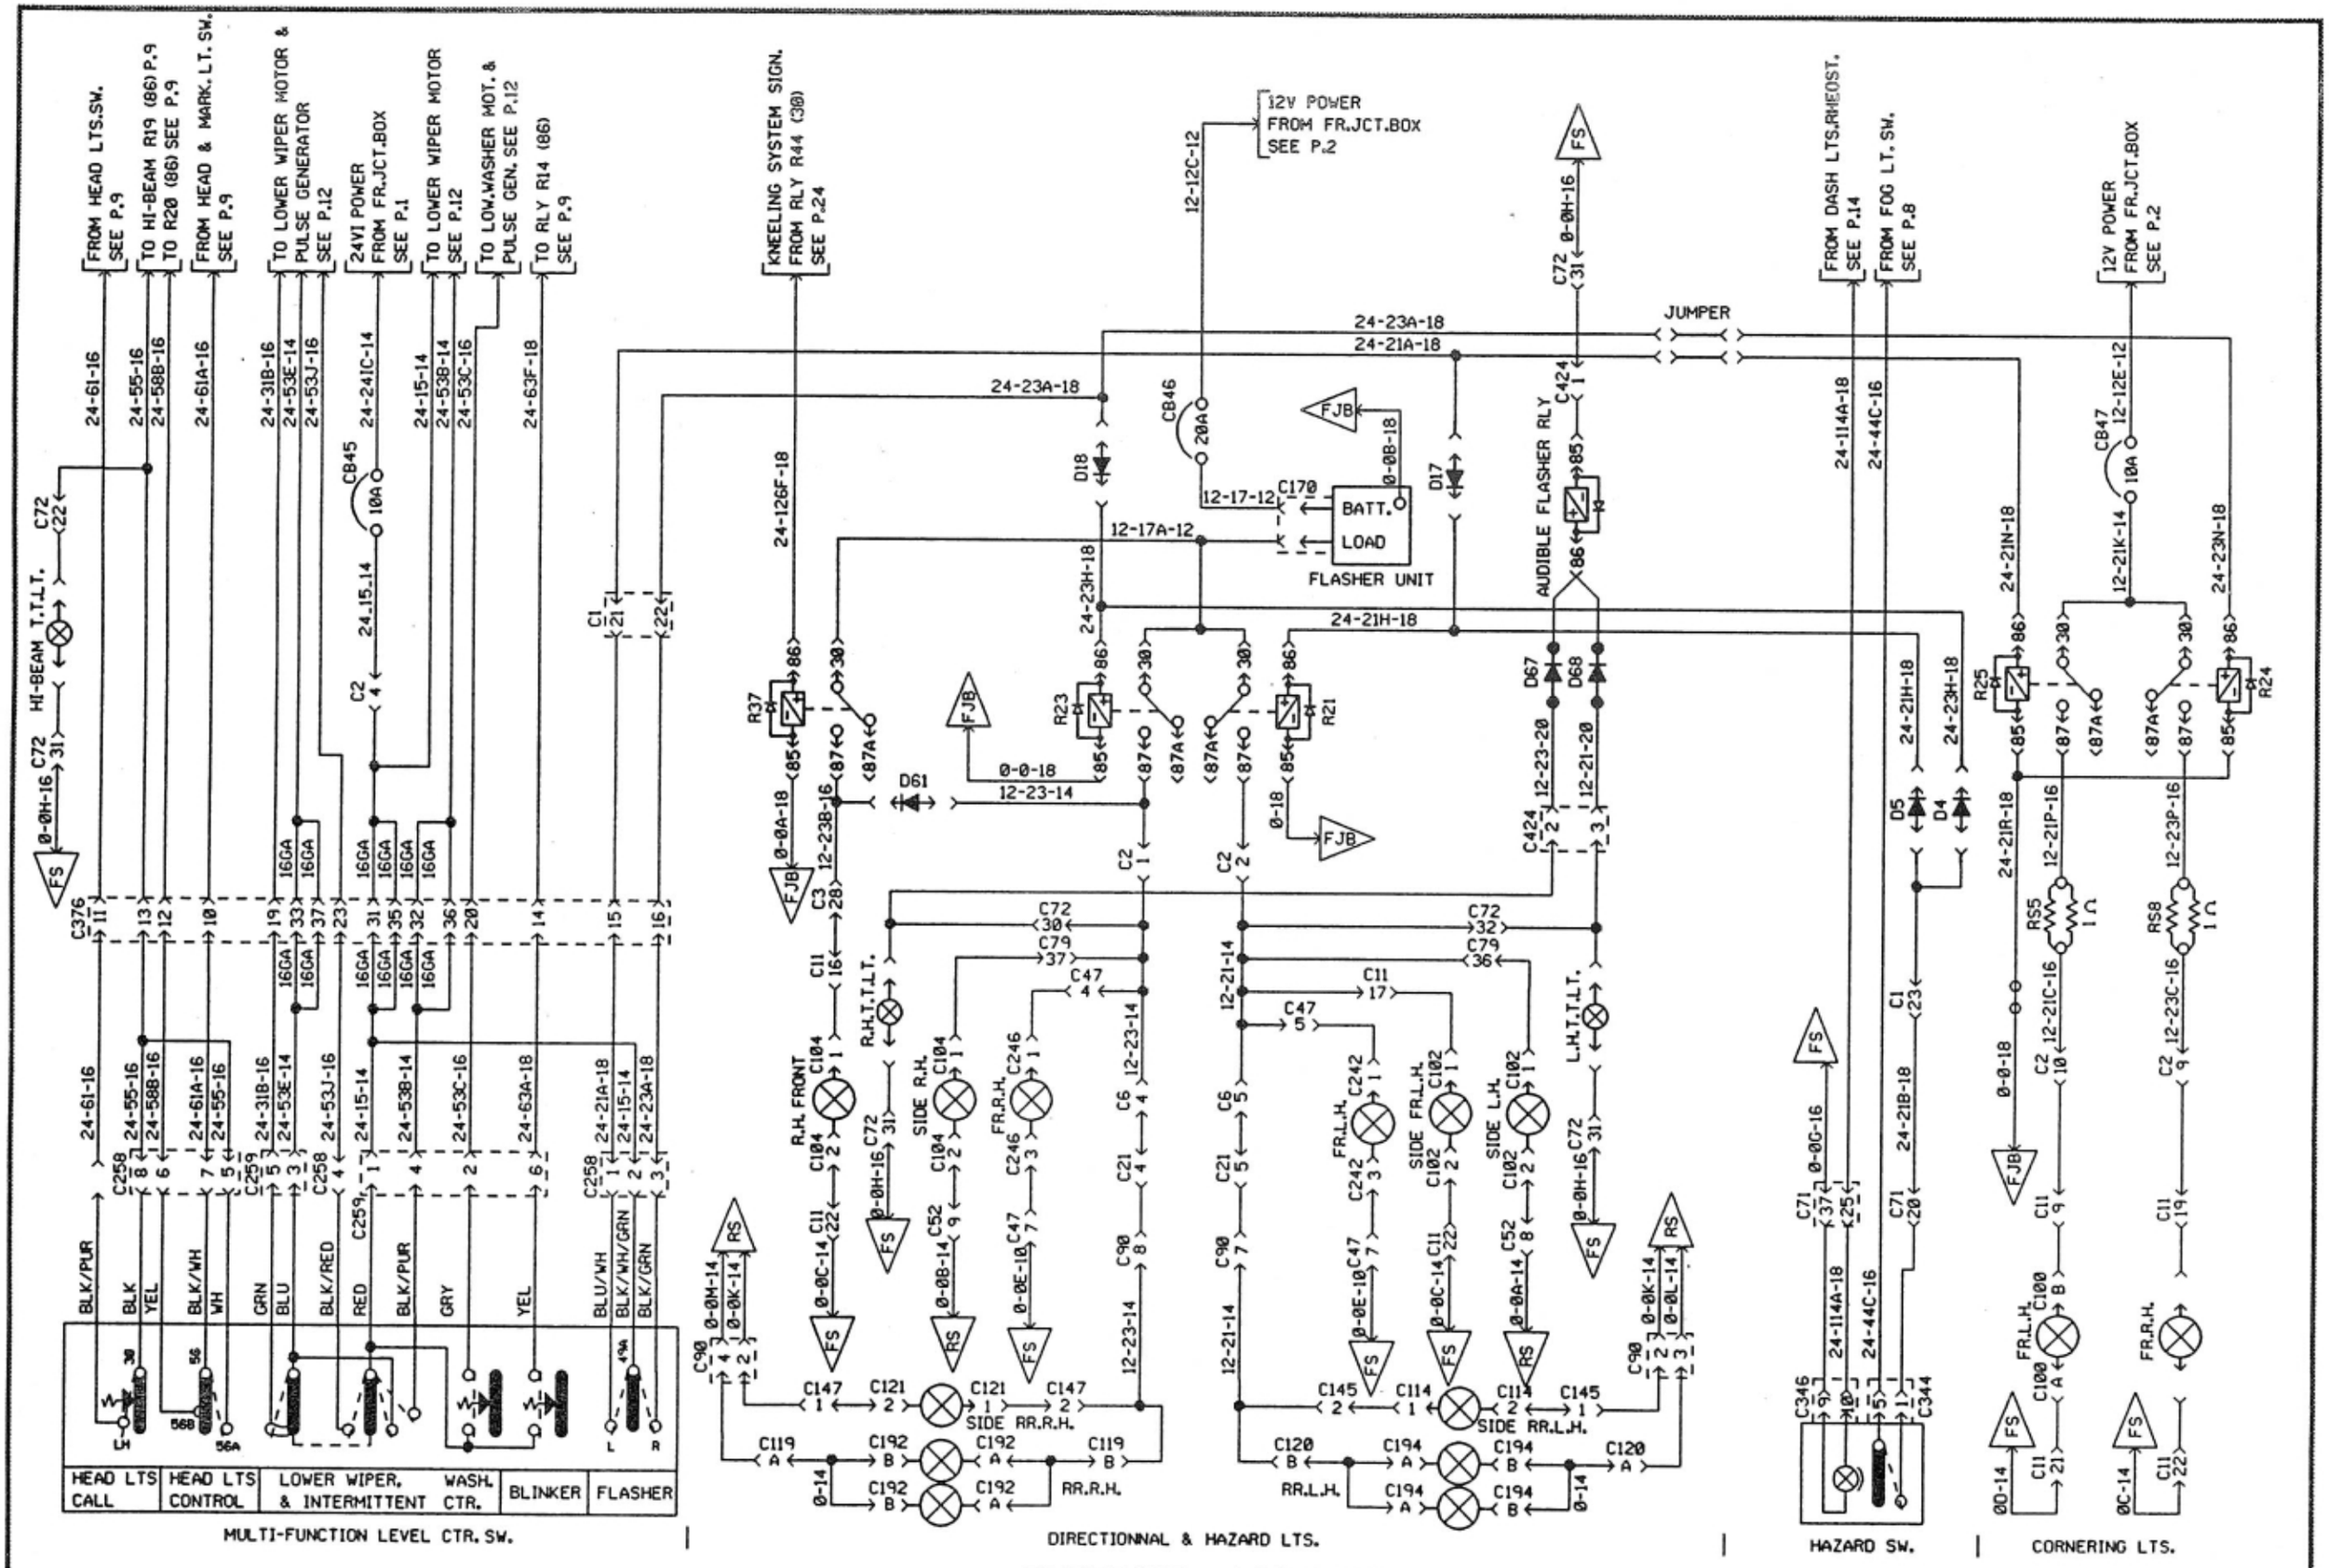

EXTERIOR LIGHTING

PREVOST CAR inc.	WIRING DIAGRAM	NO: D060783	REVISION DATE 92-10-30	P. 10

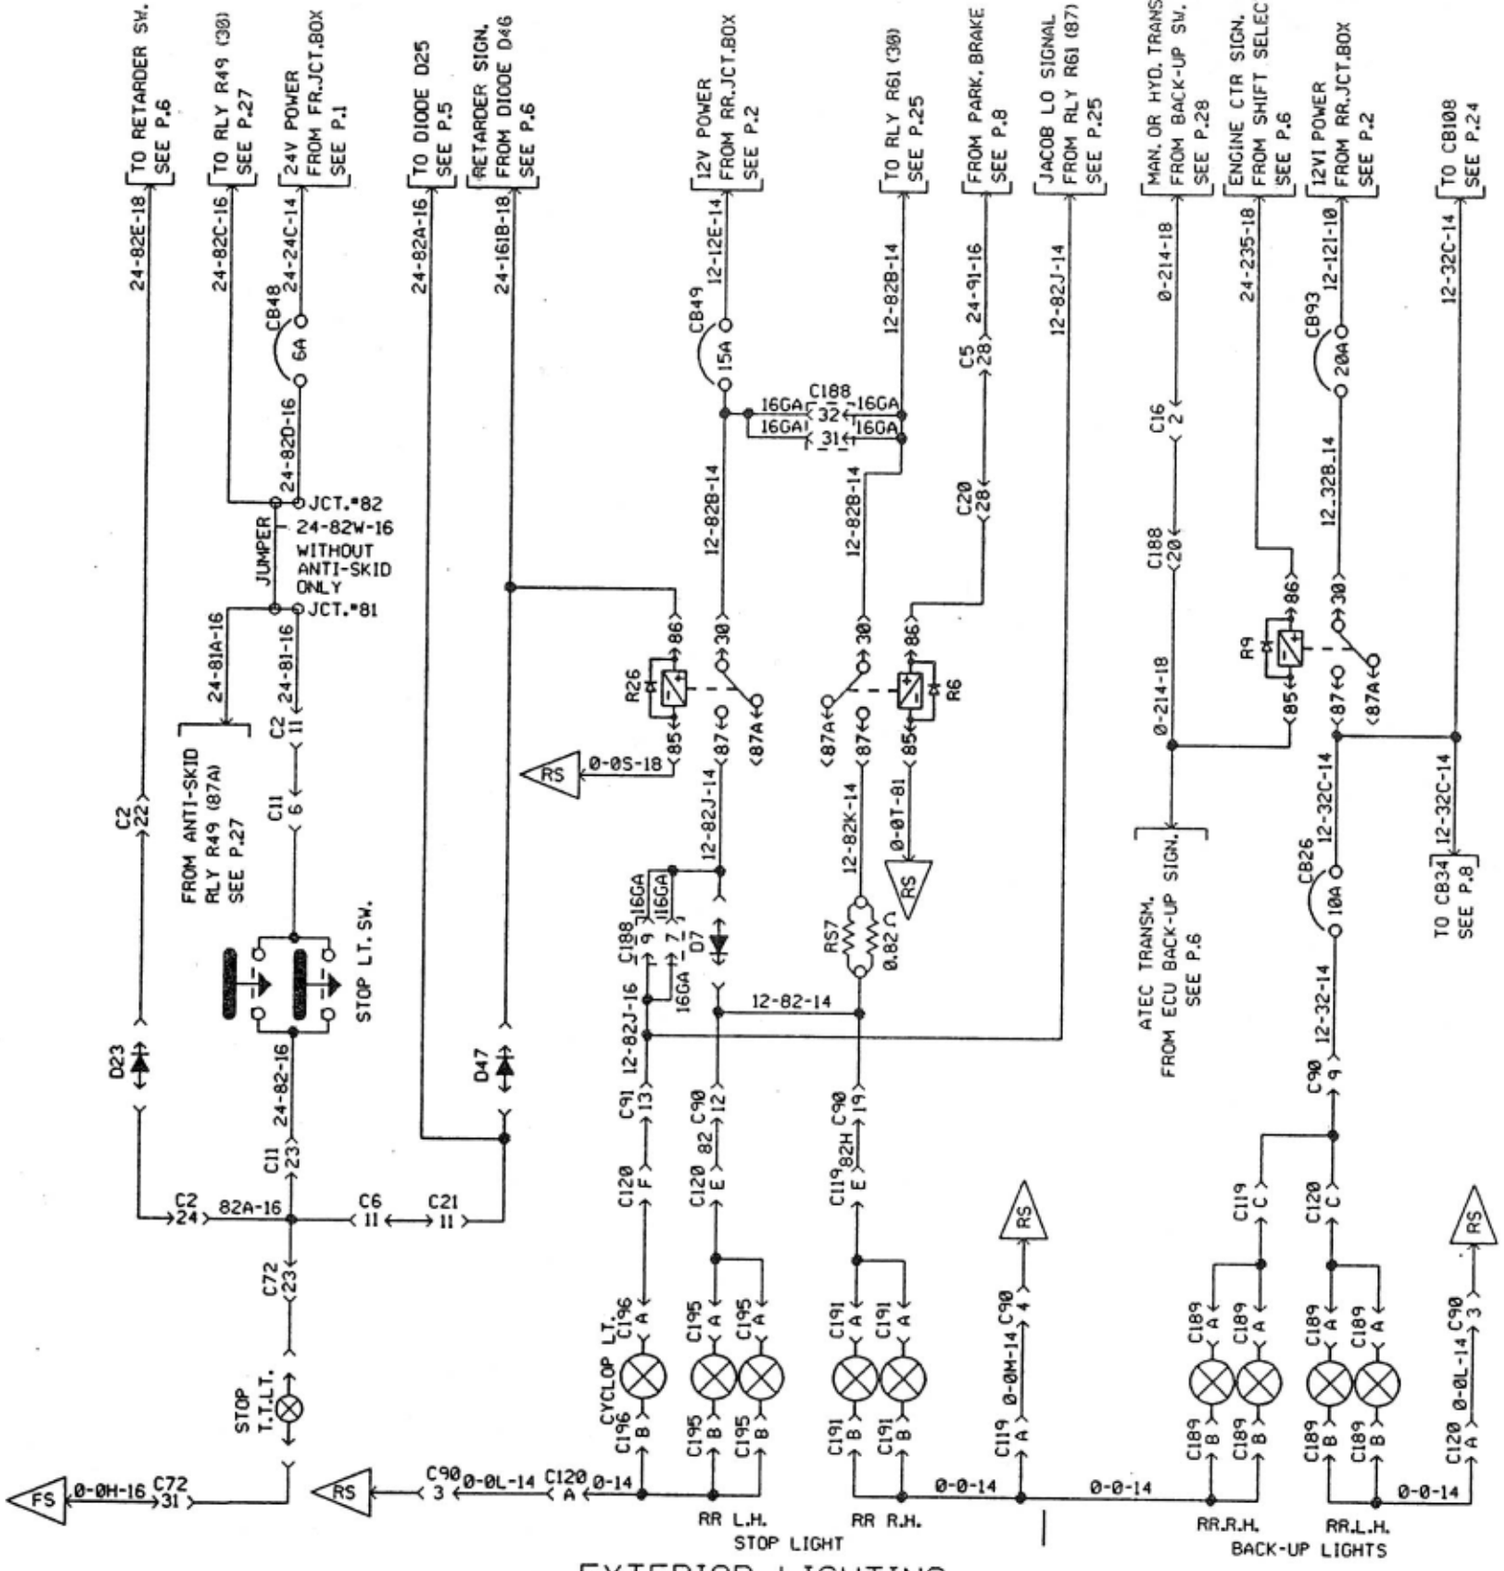

EXTERIOR LIGHTING

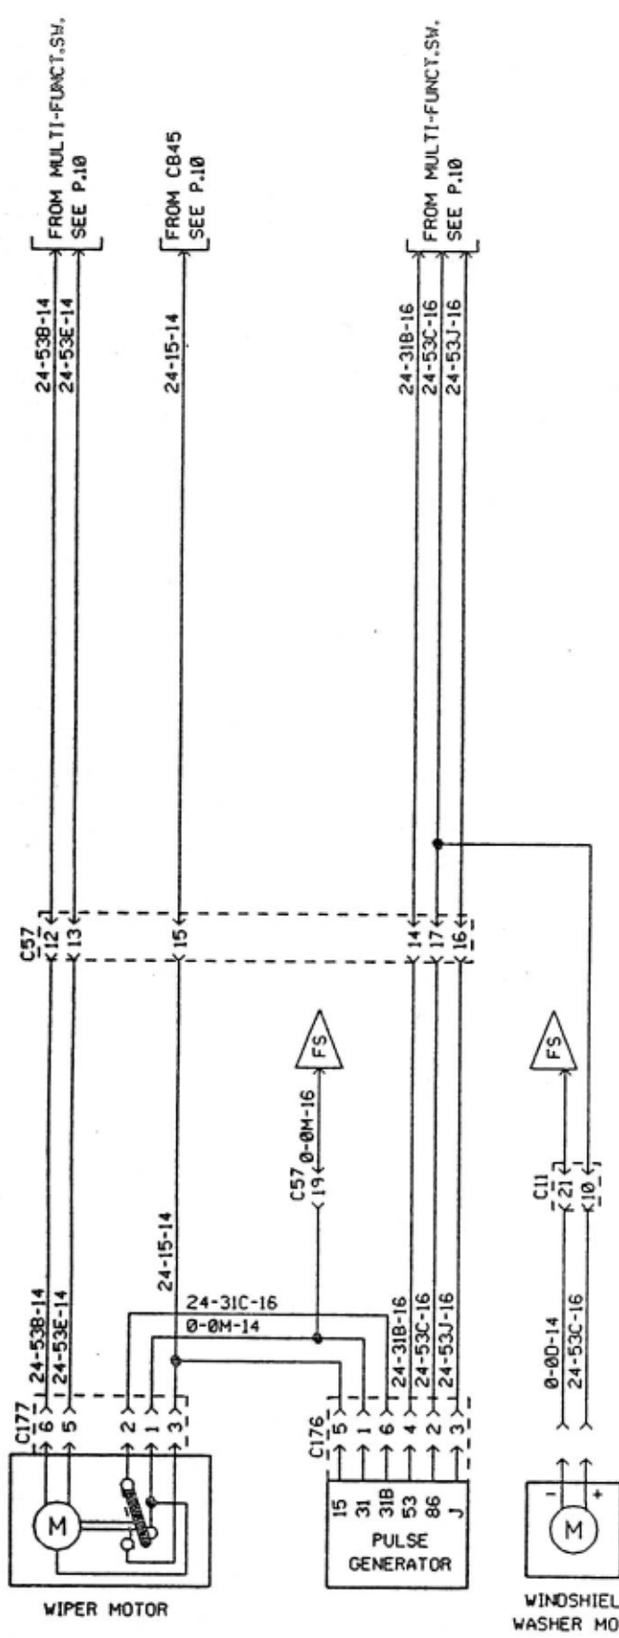

LOWER WINDSHIELD WIPER AND WASHER

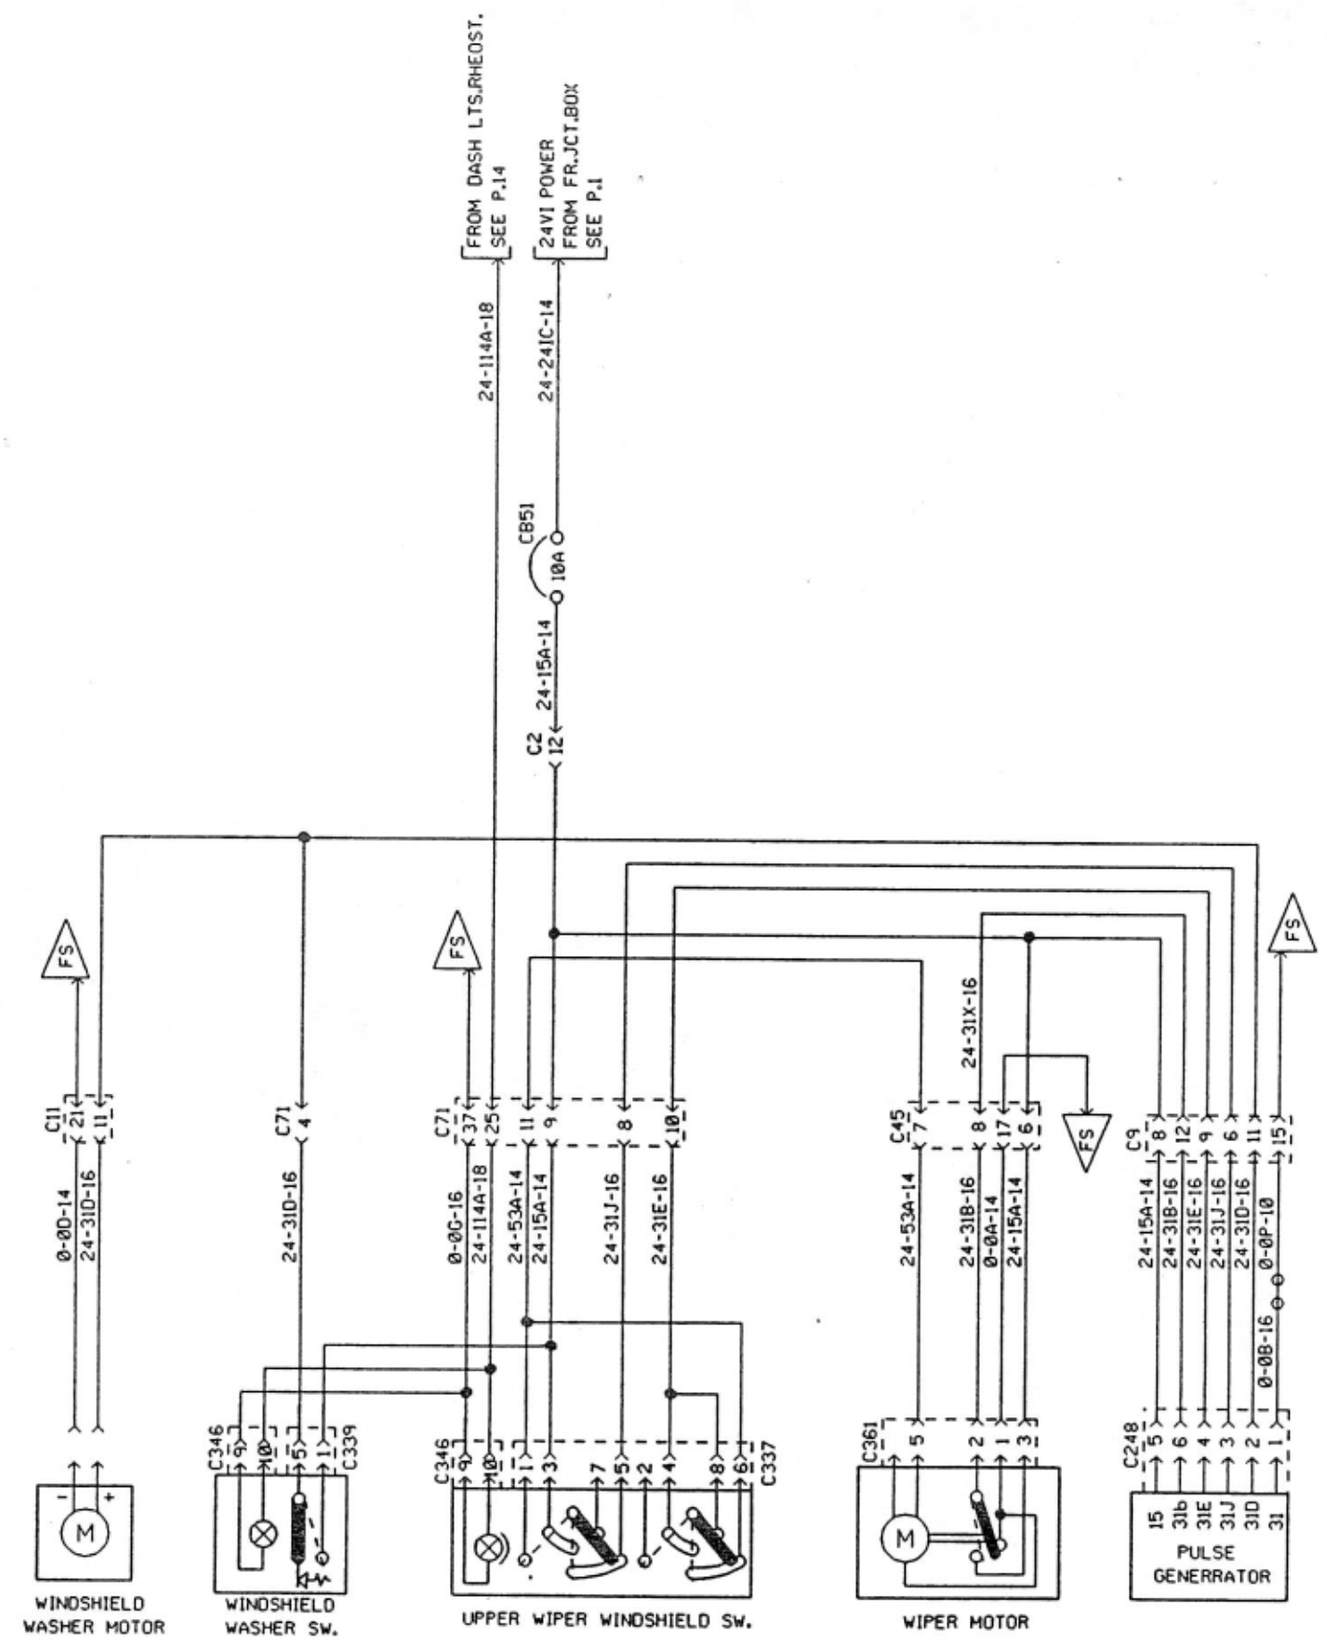

UPPER WINDSHIELD WIPER AND WASHER

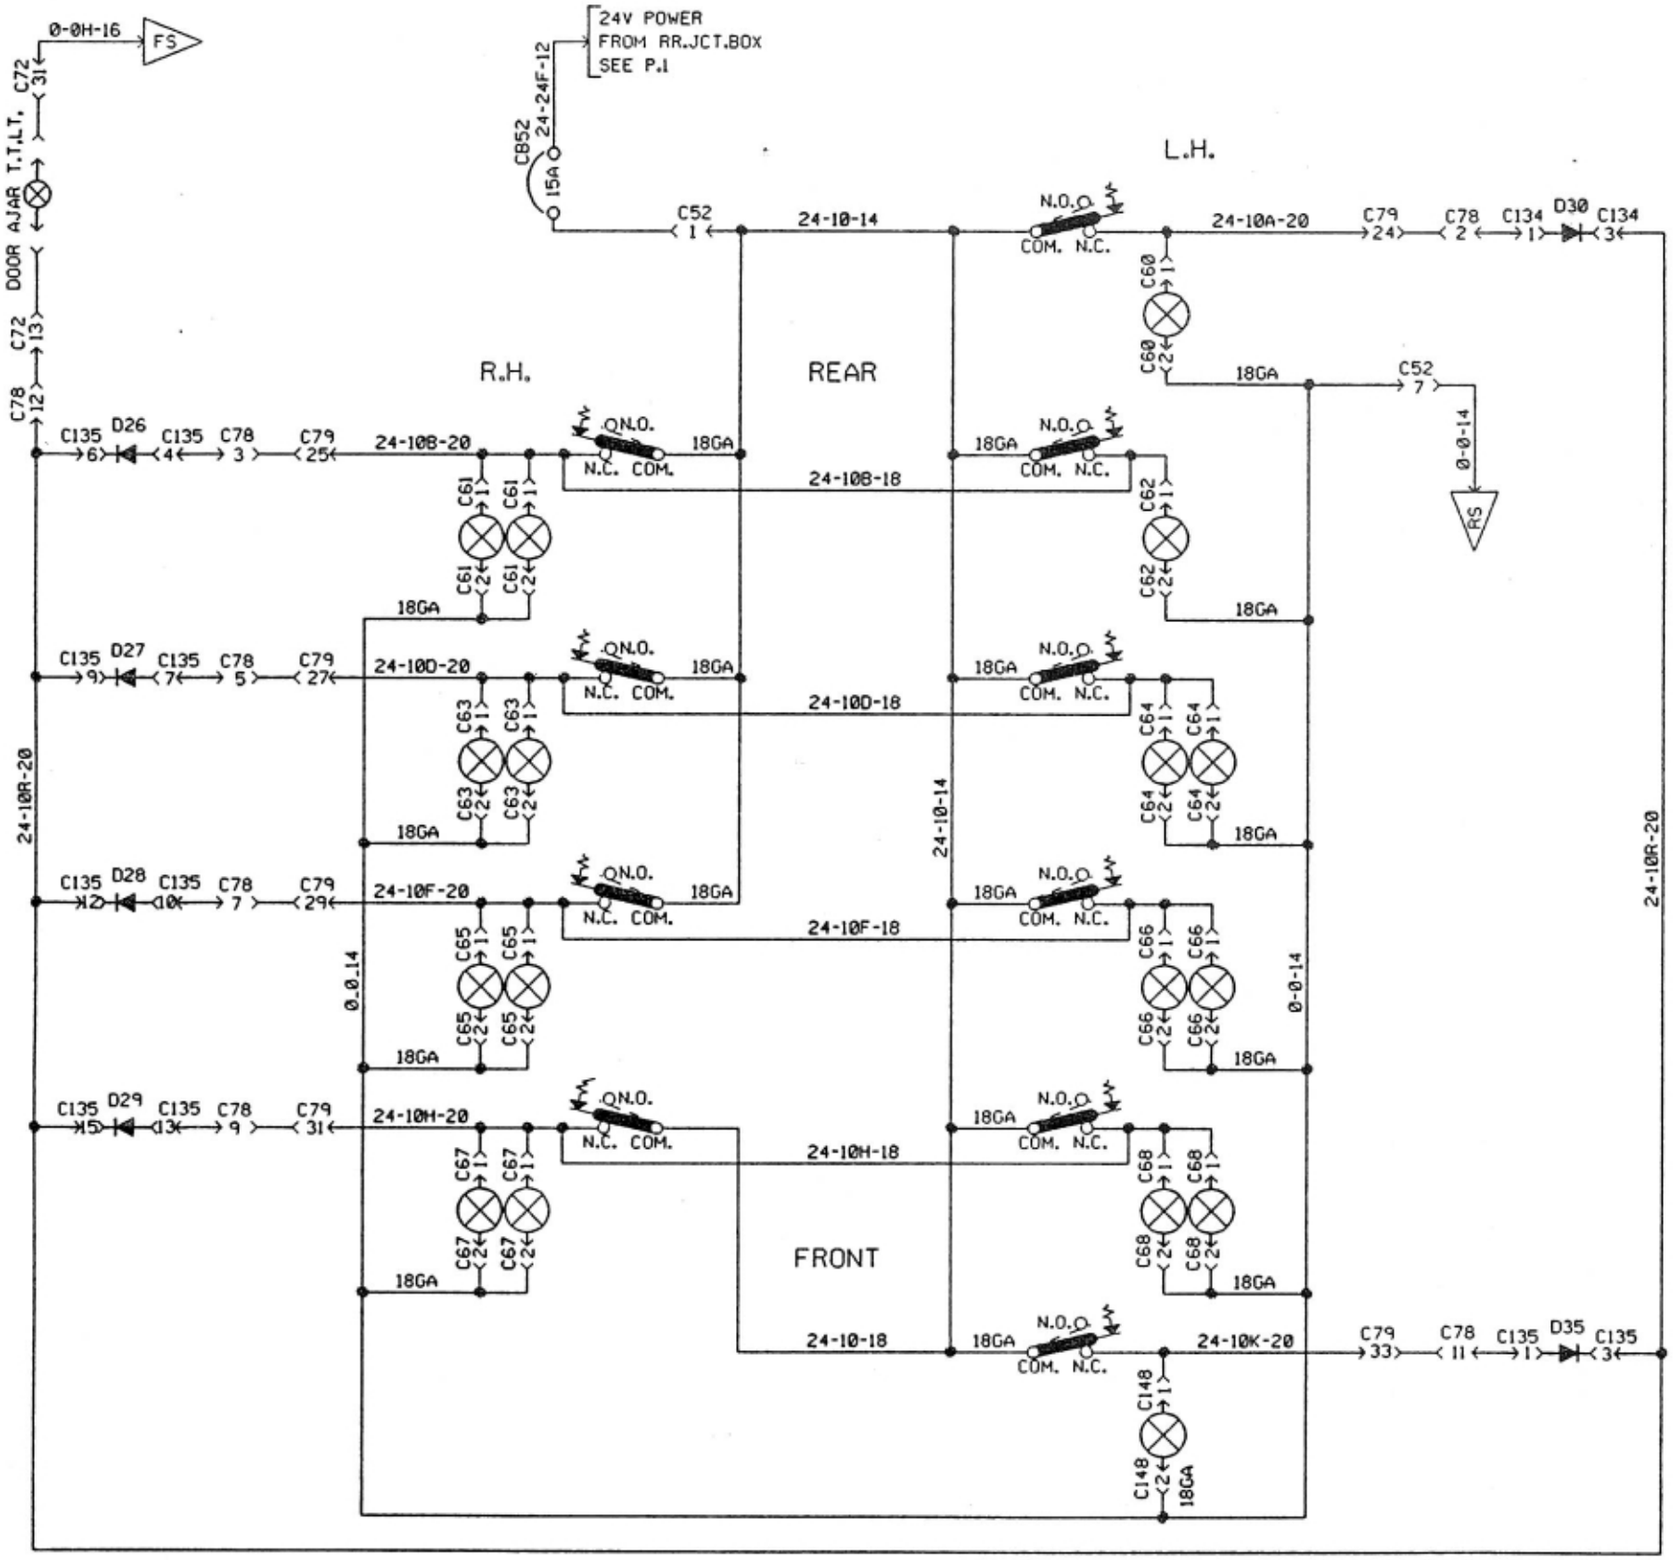

INTERIOR LIGHTING

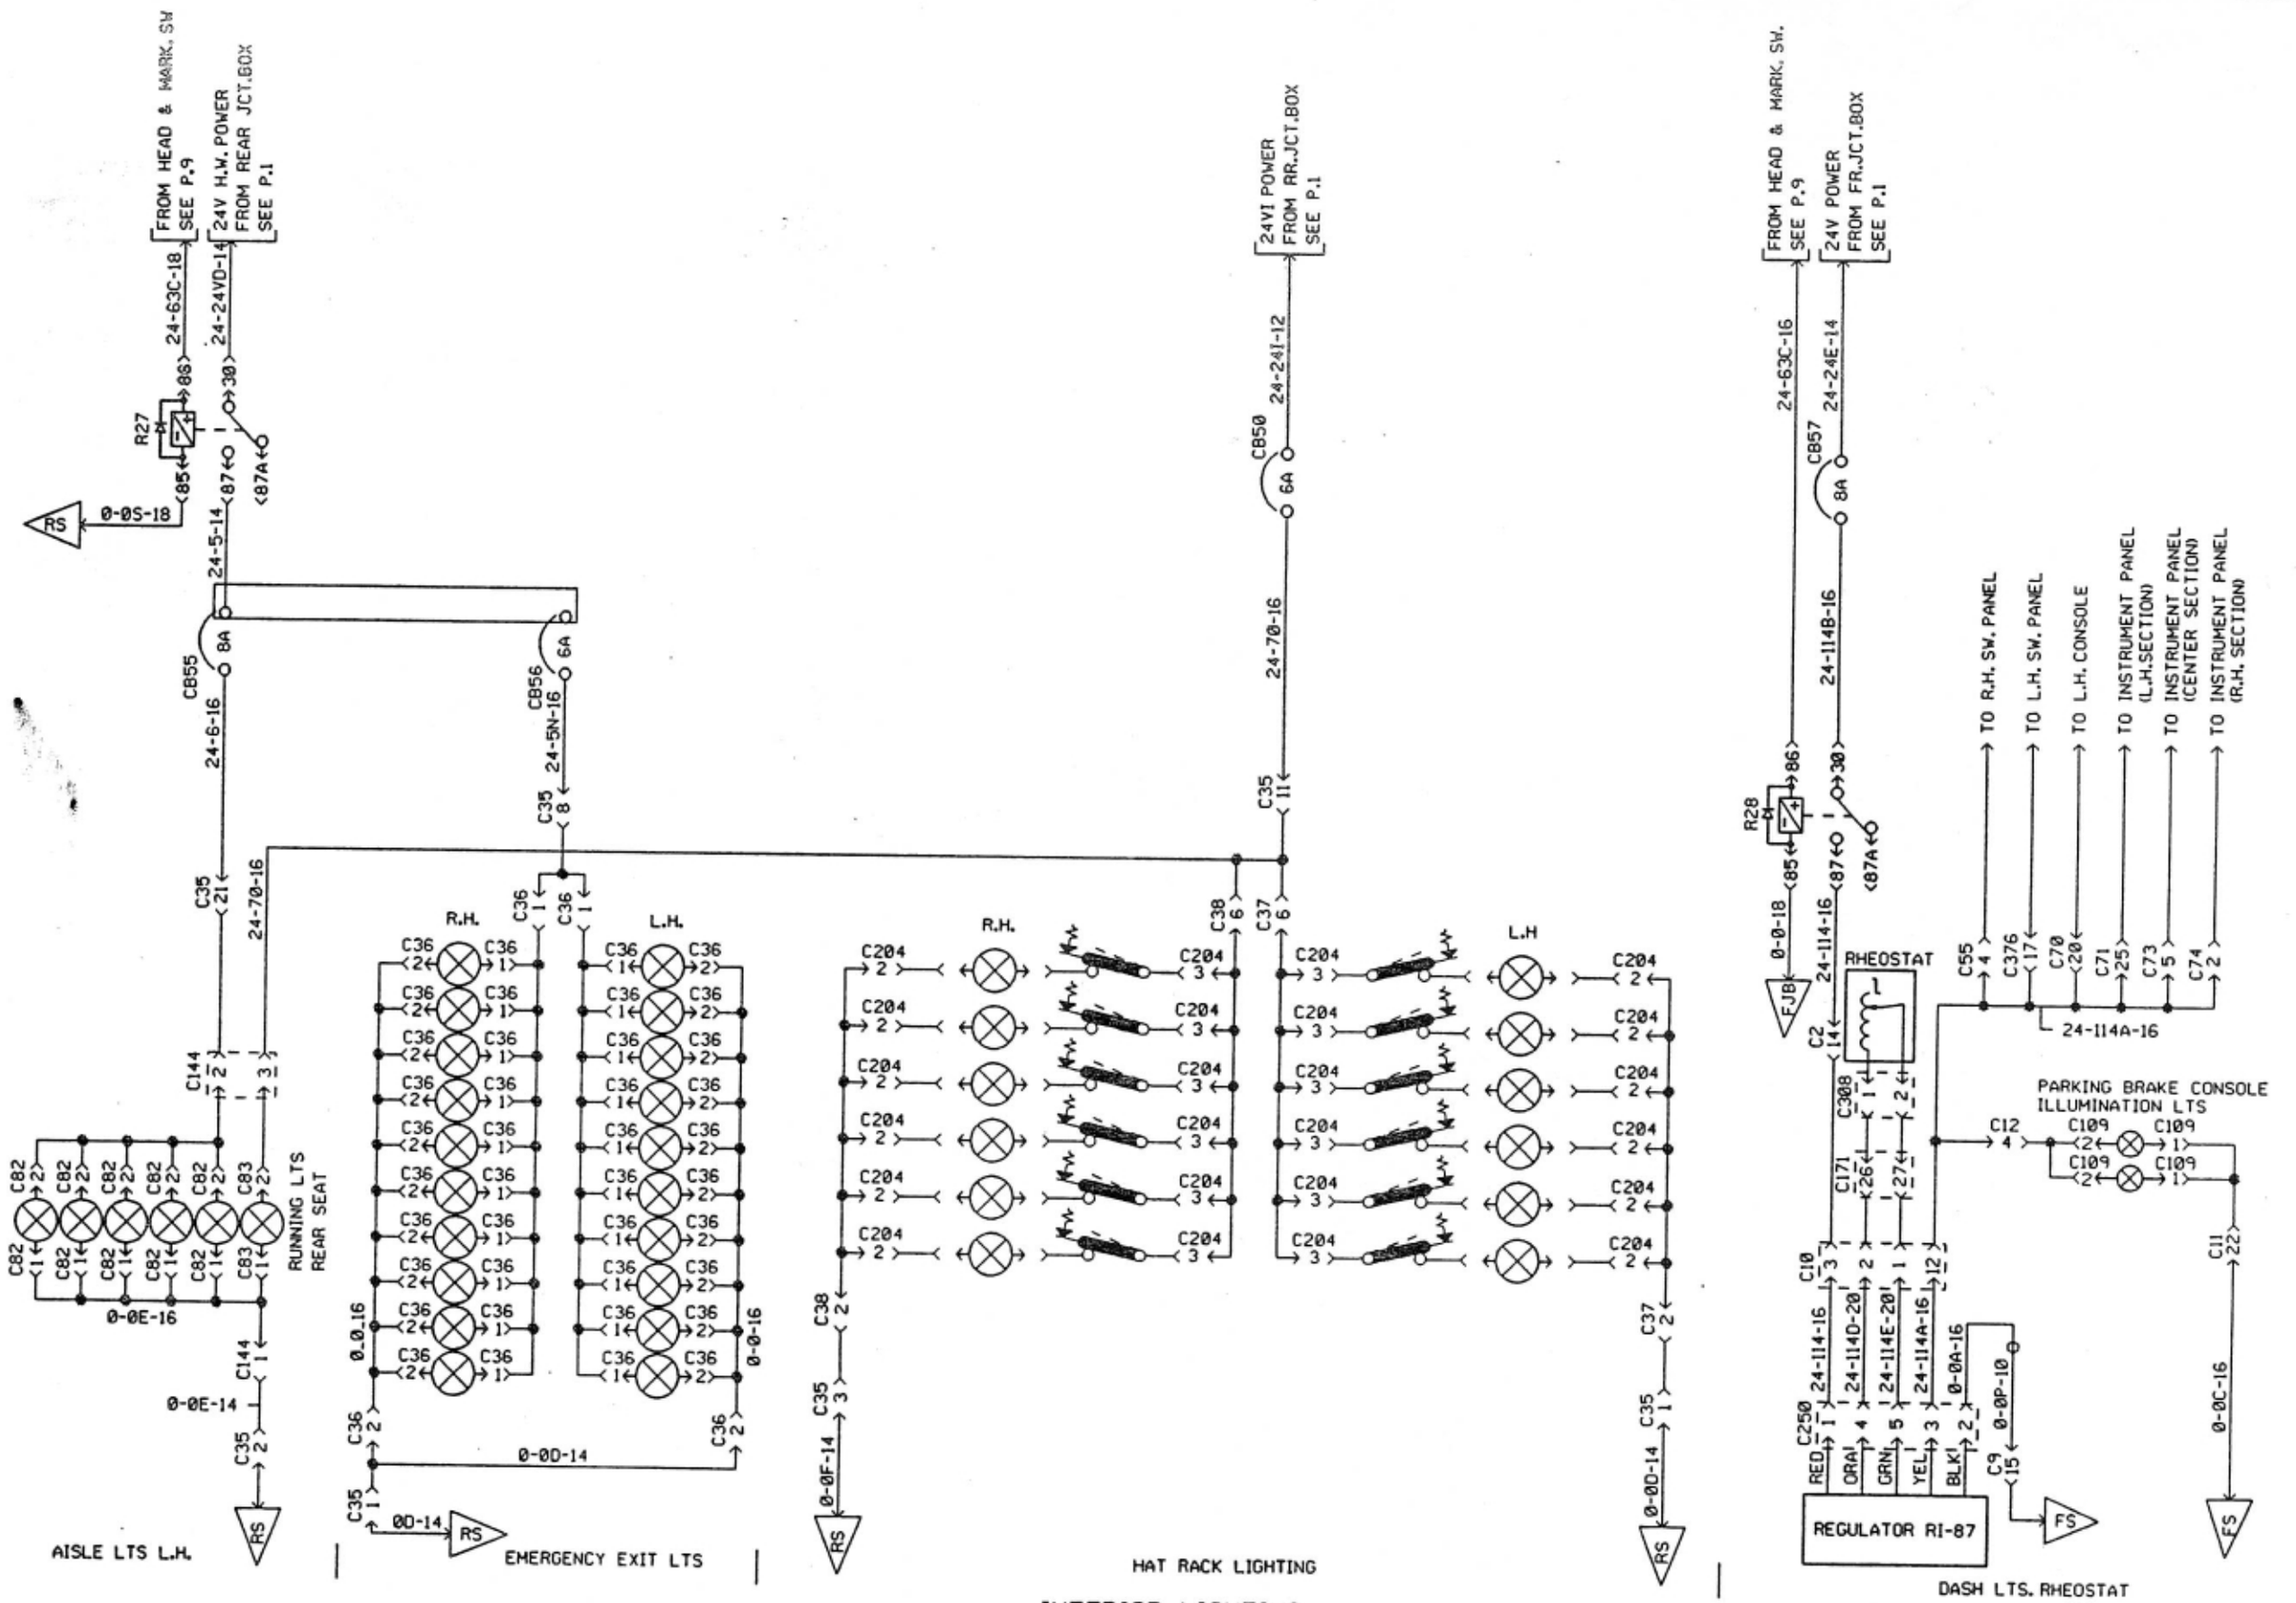

INTERIOR LIGHTING

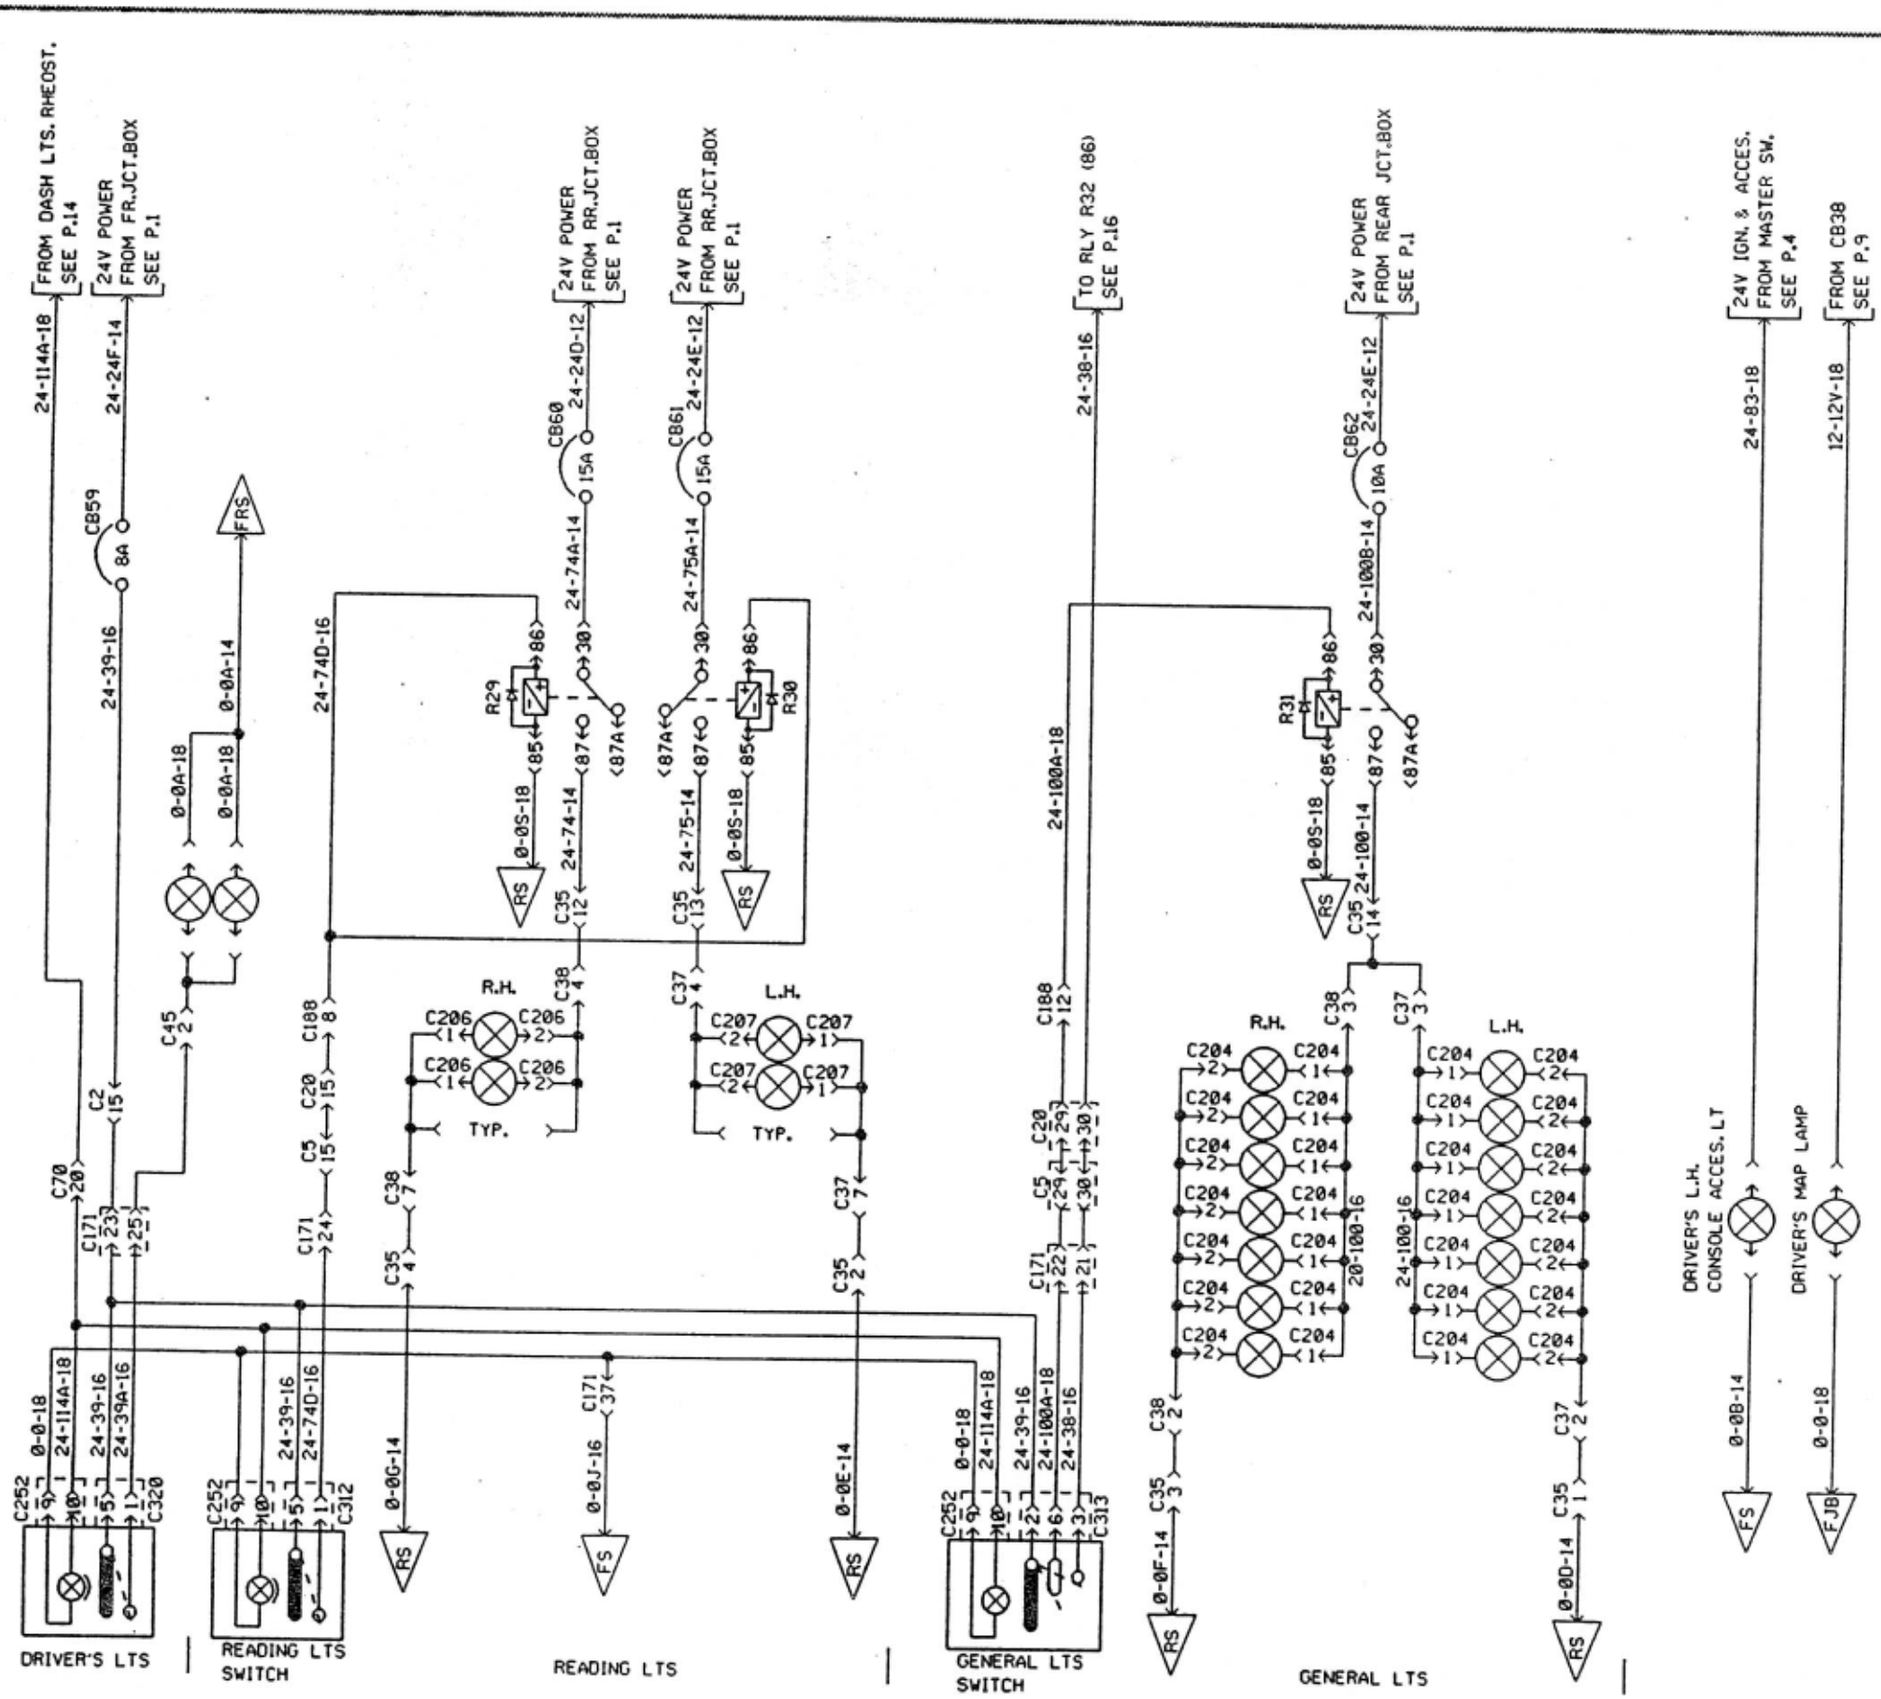

INTERIOR LIGHTING

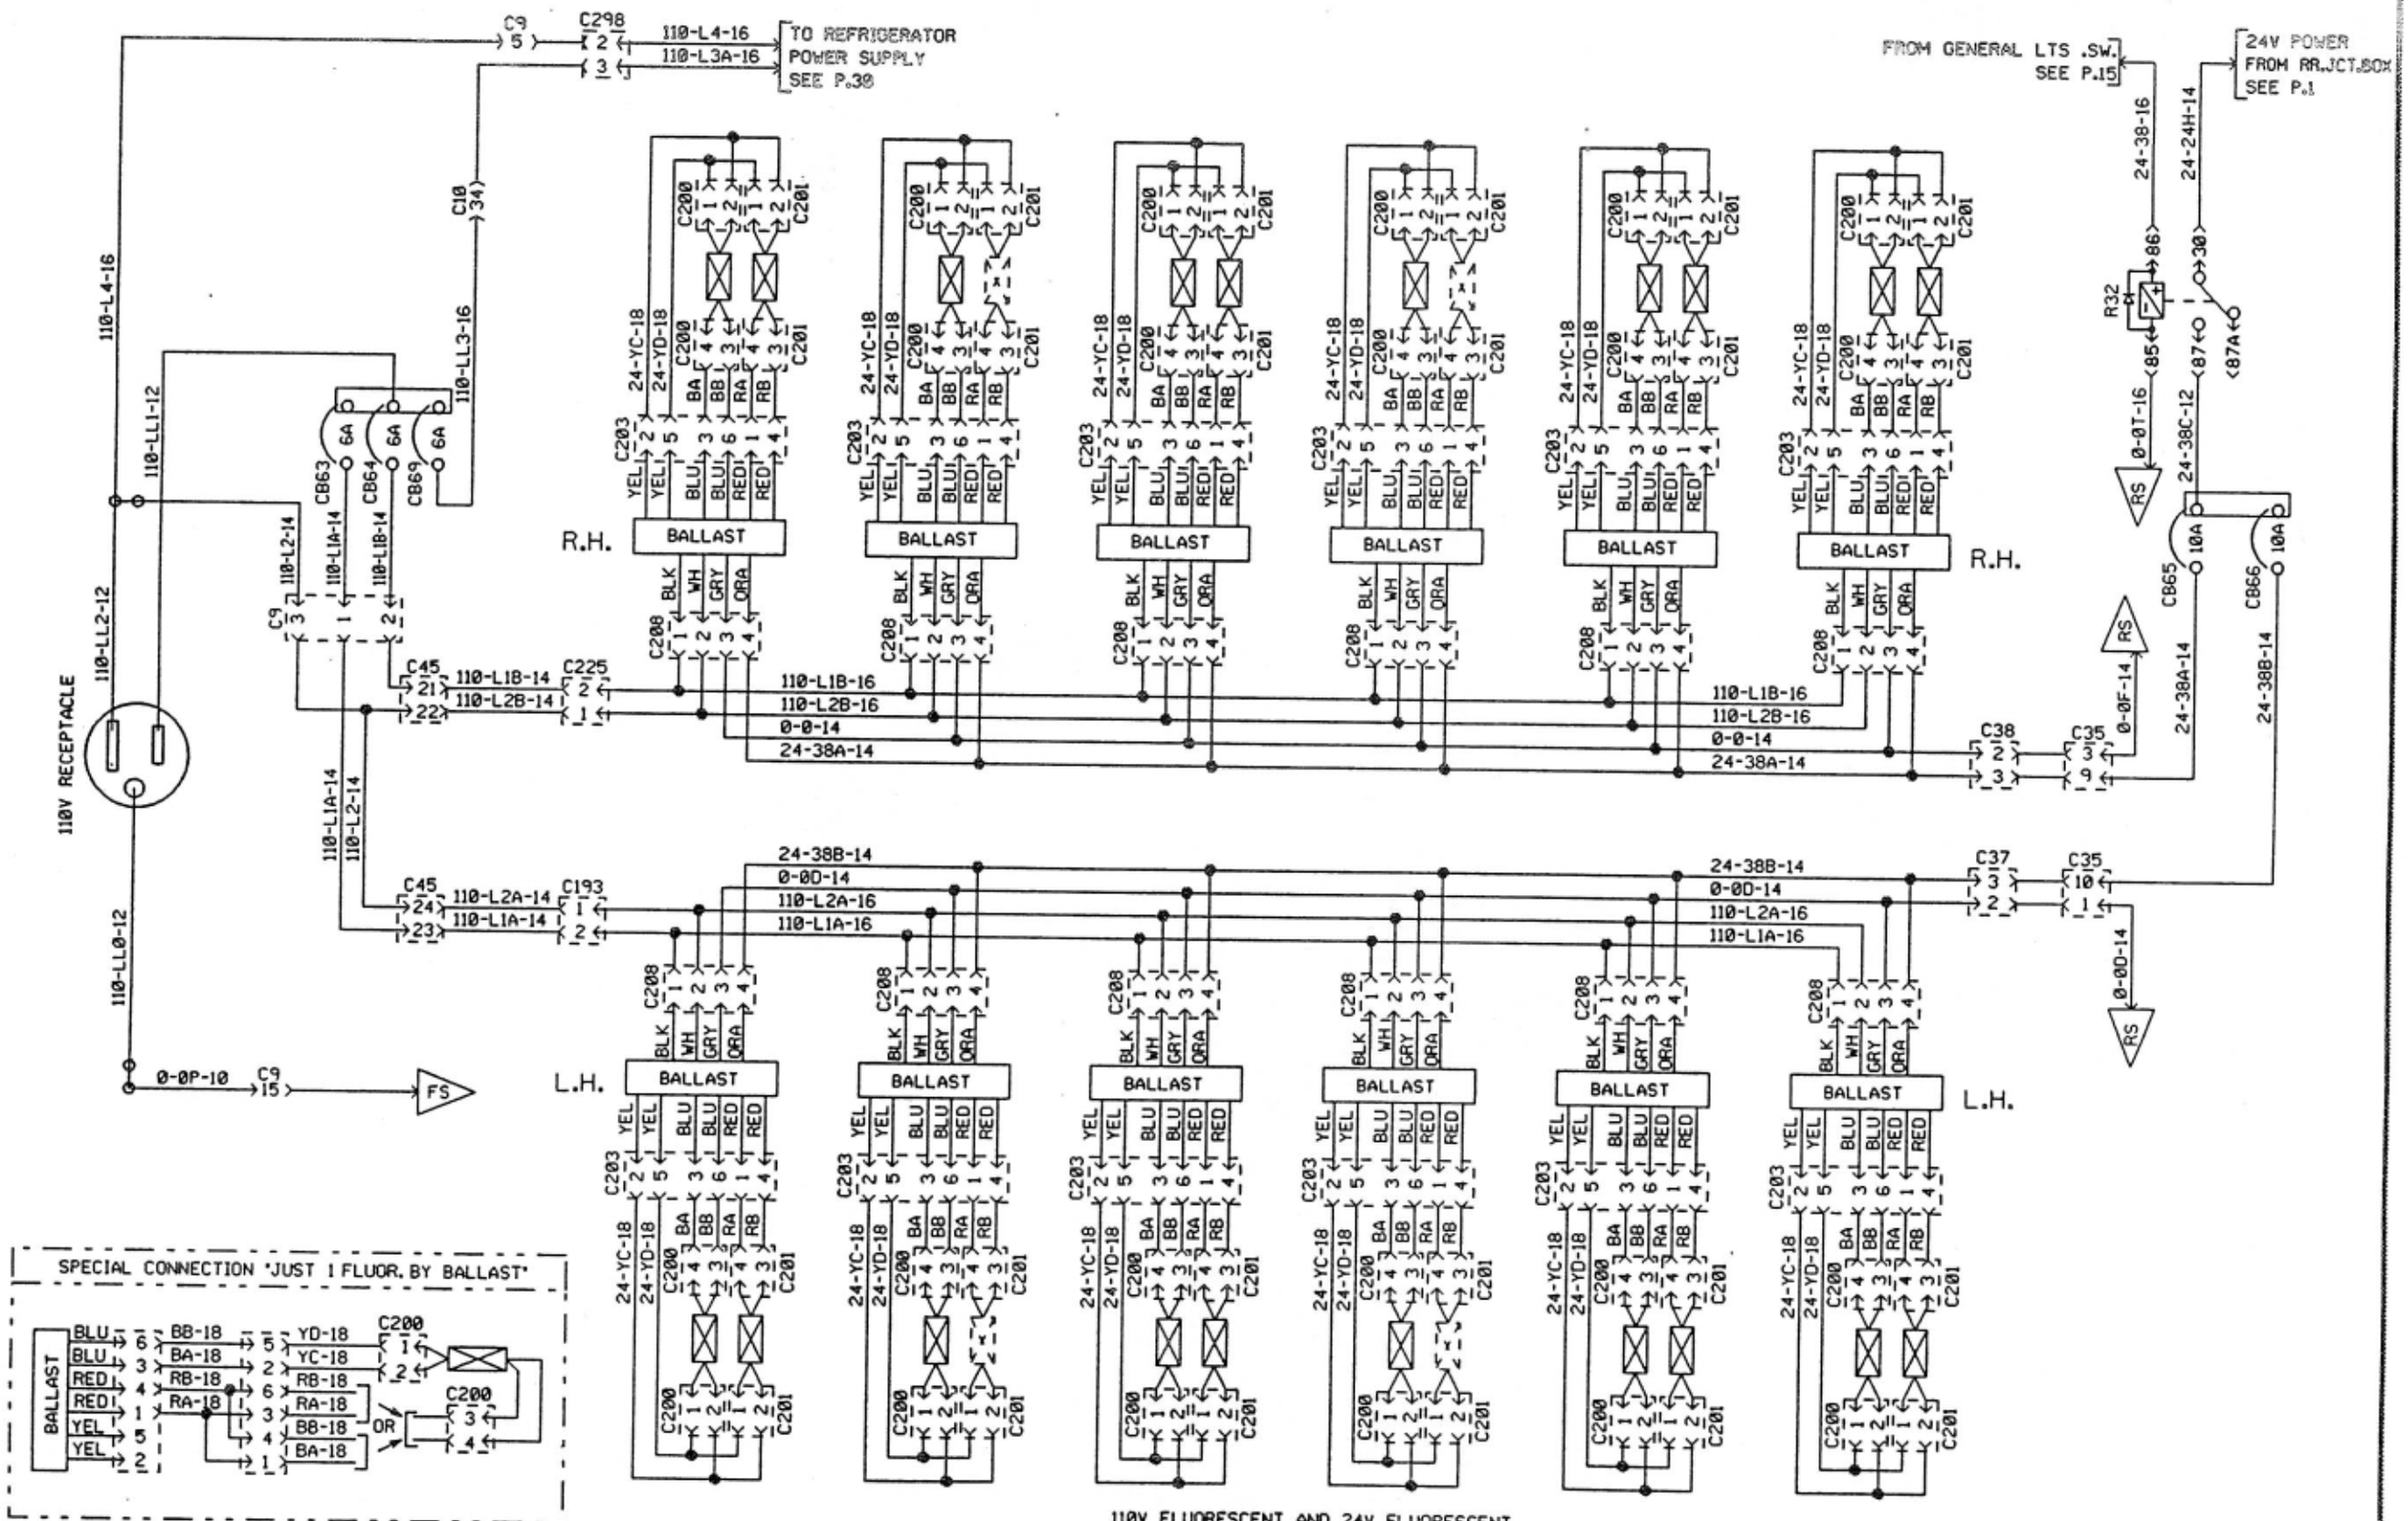

INTERIOR LIGHTING

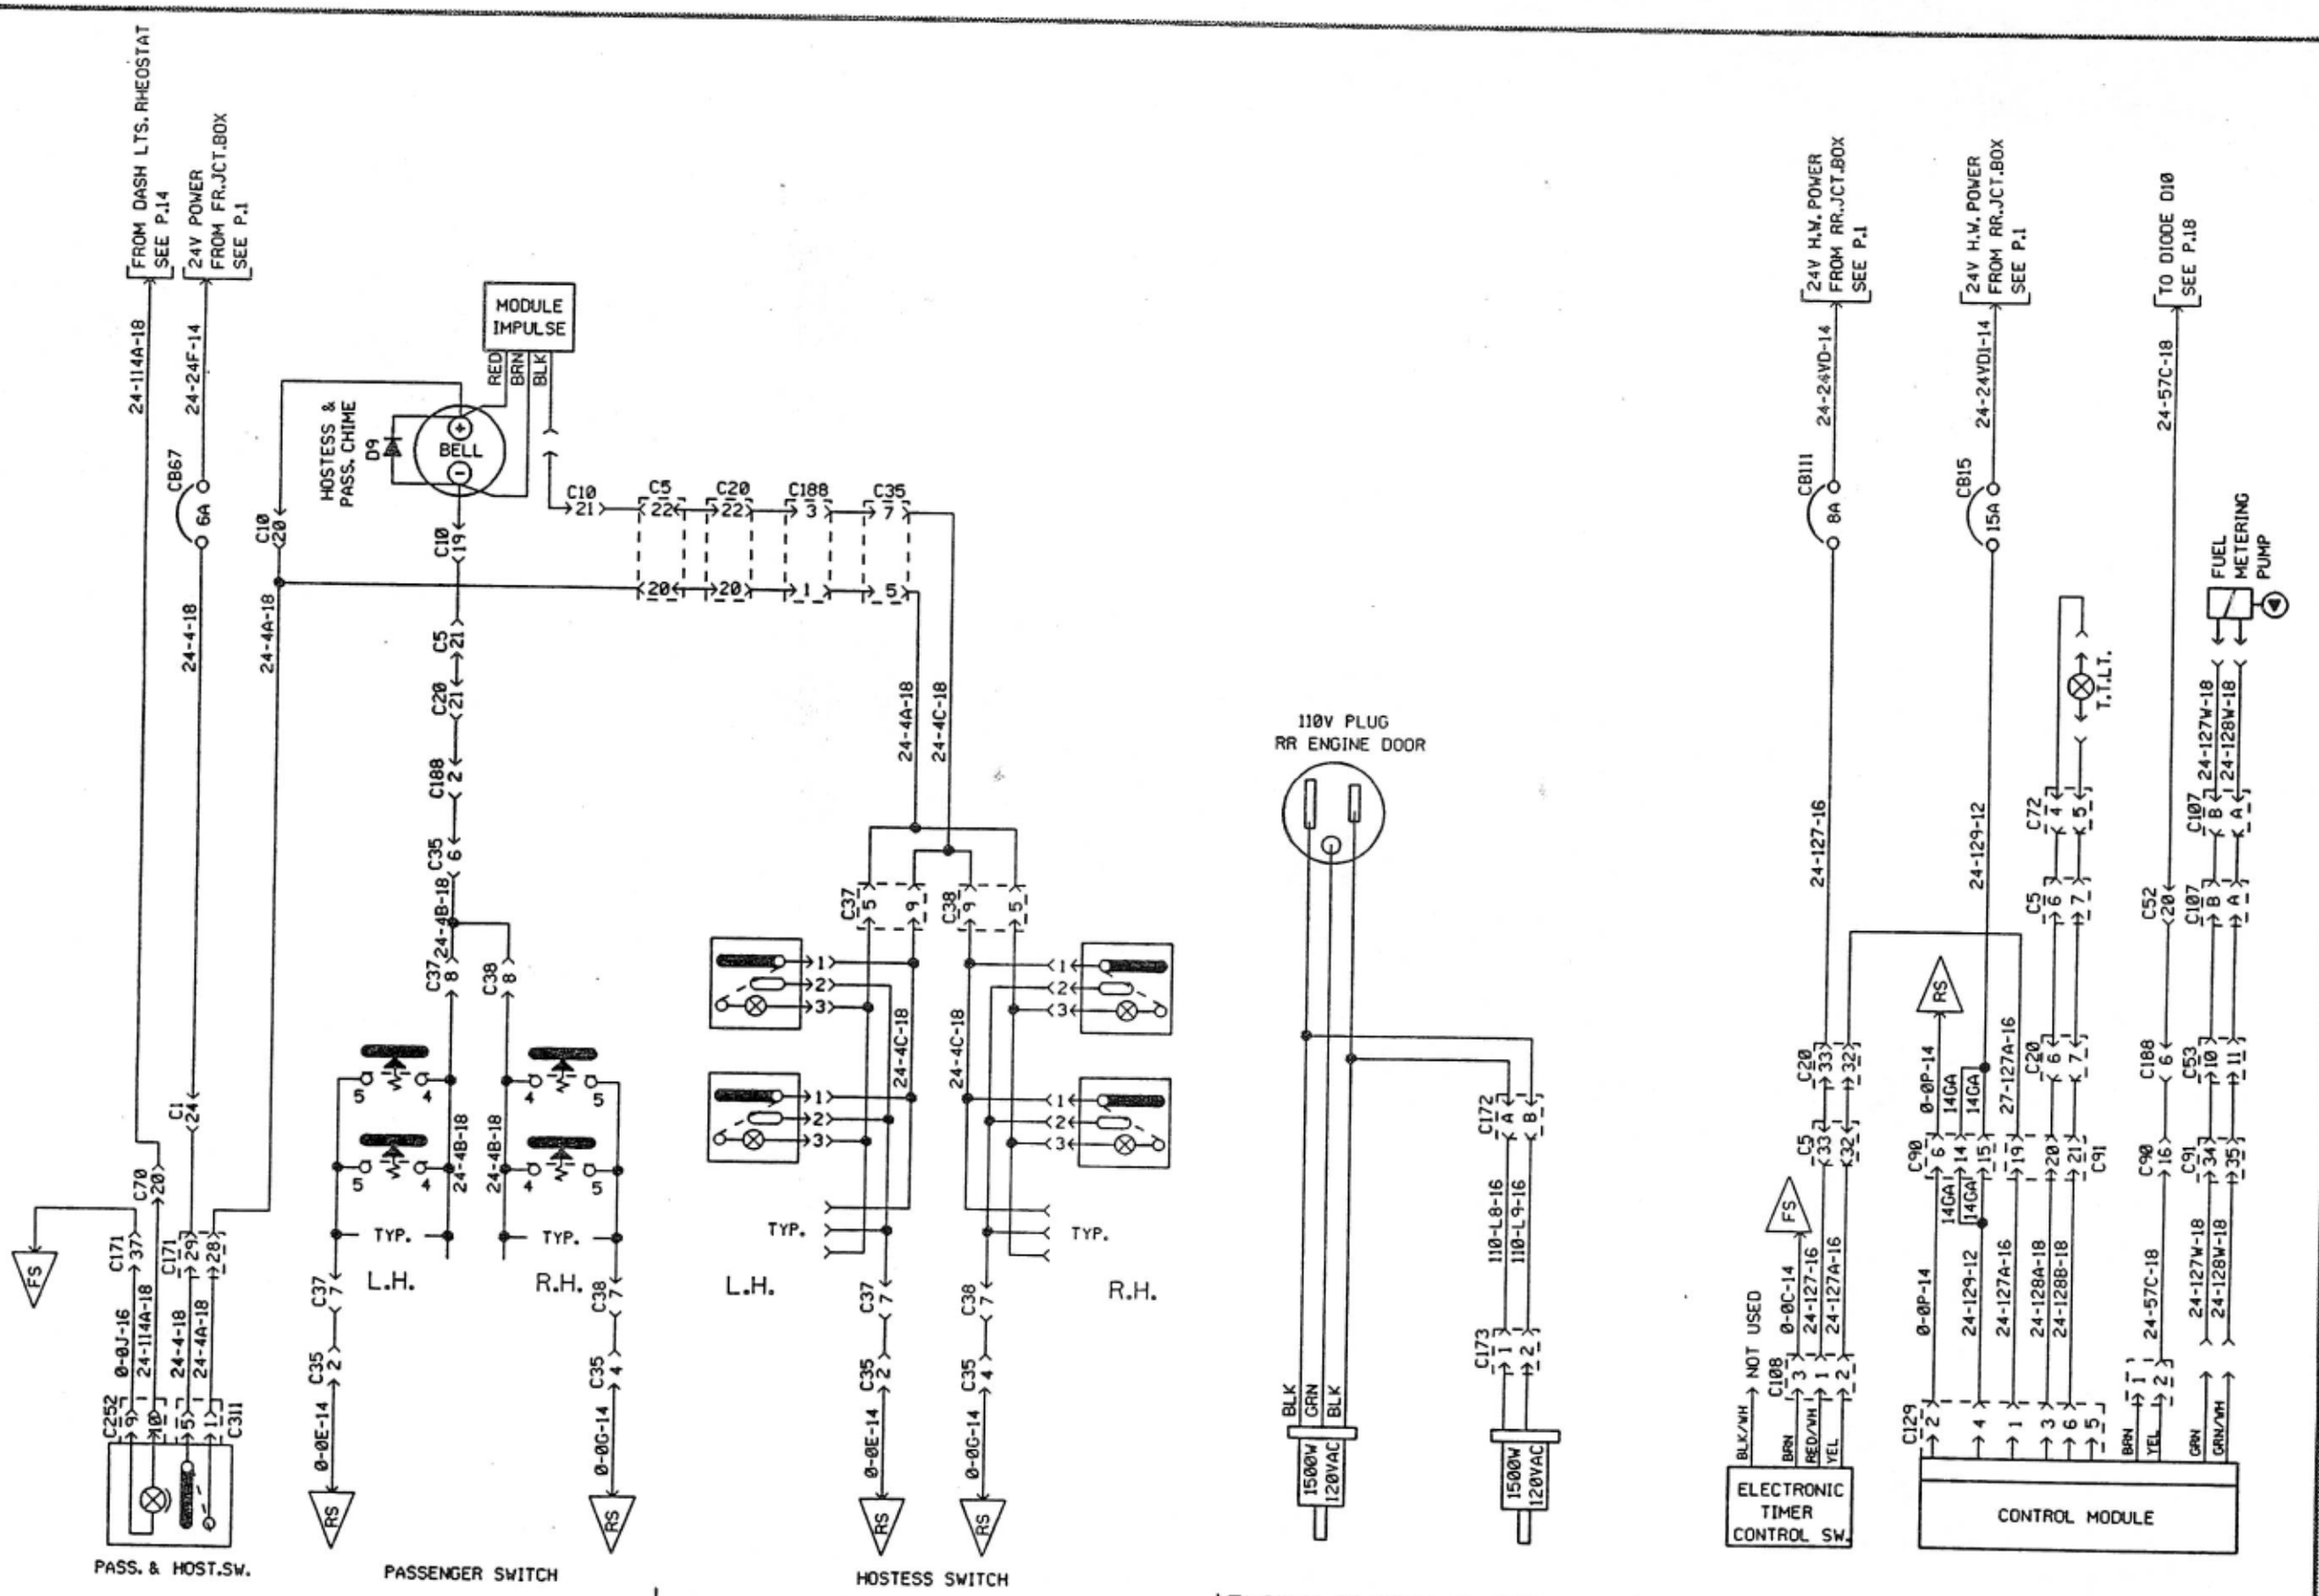

PASSENGER CHIME | HOSTESS CHIME | ENGINE BLOCK HEATER | WATER TANK HEATER | PRE-HEAT WATER HEATER

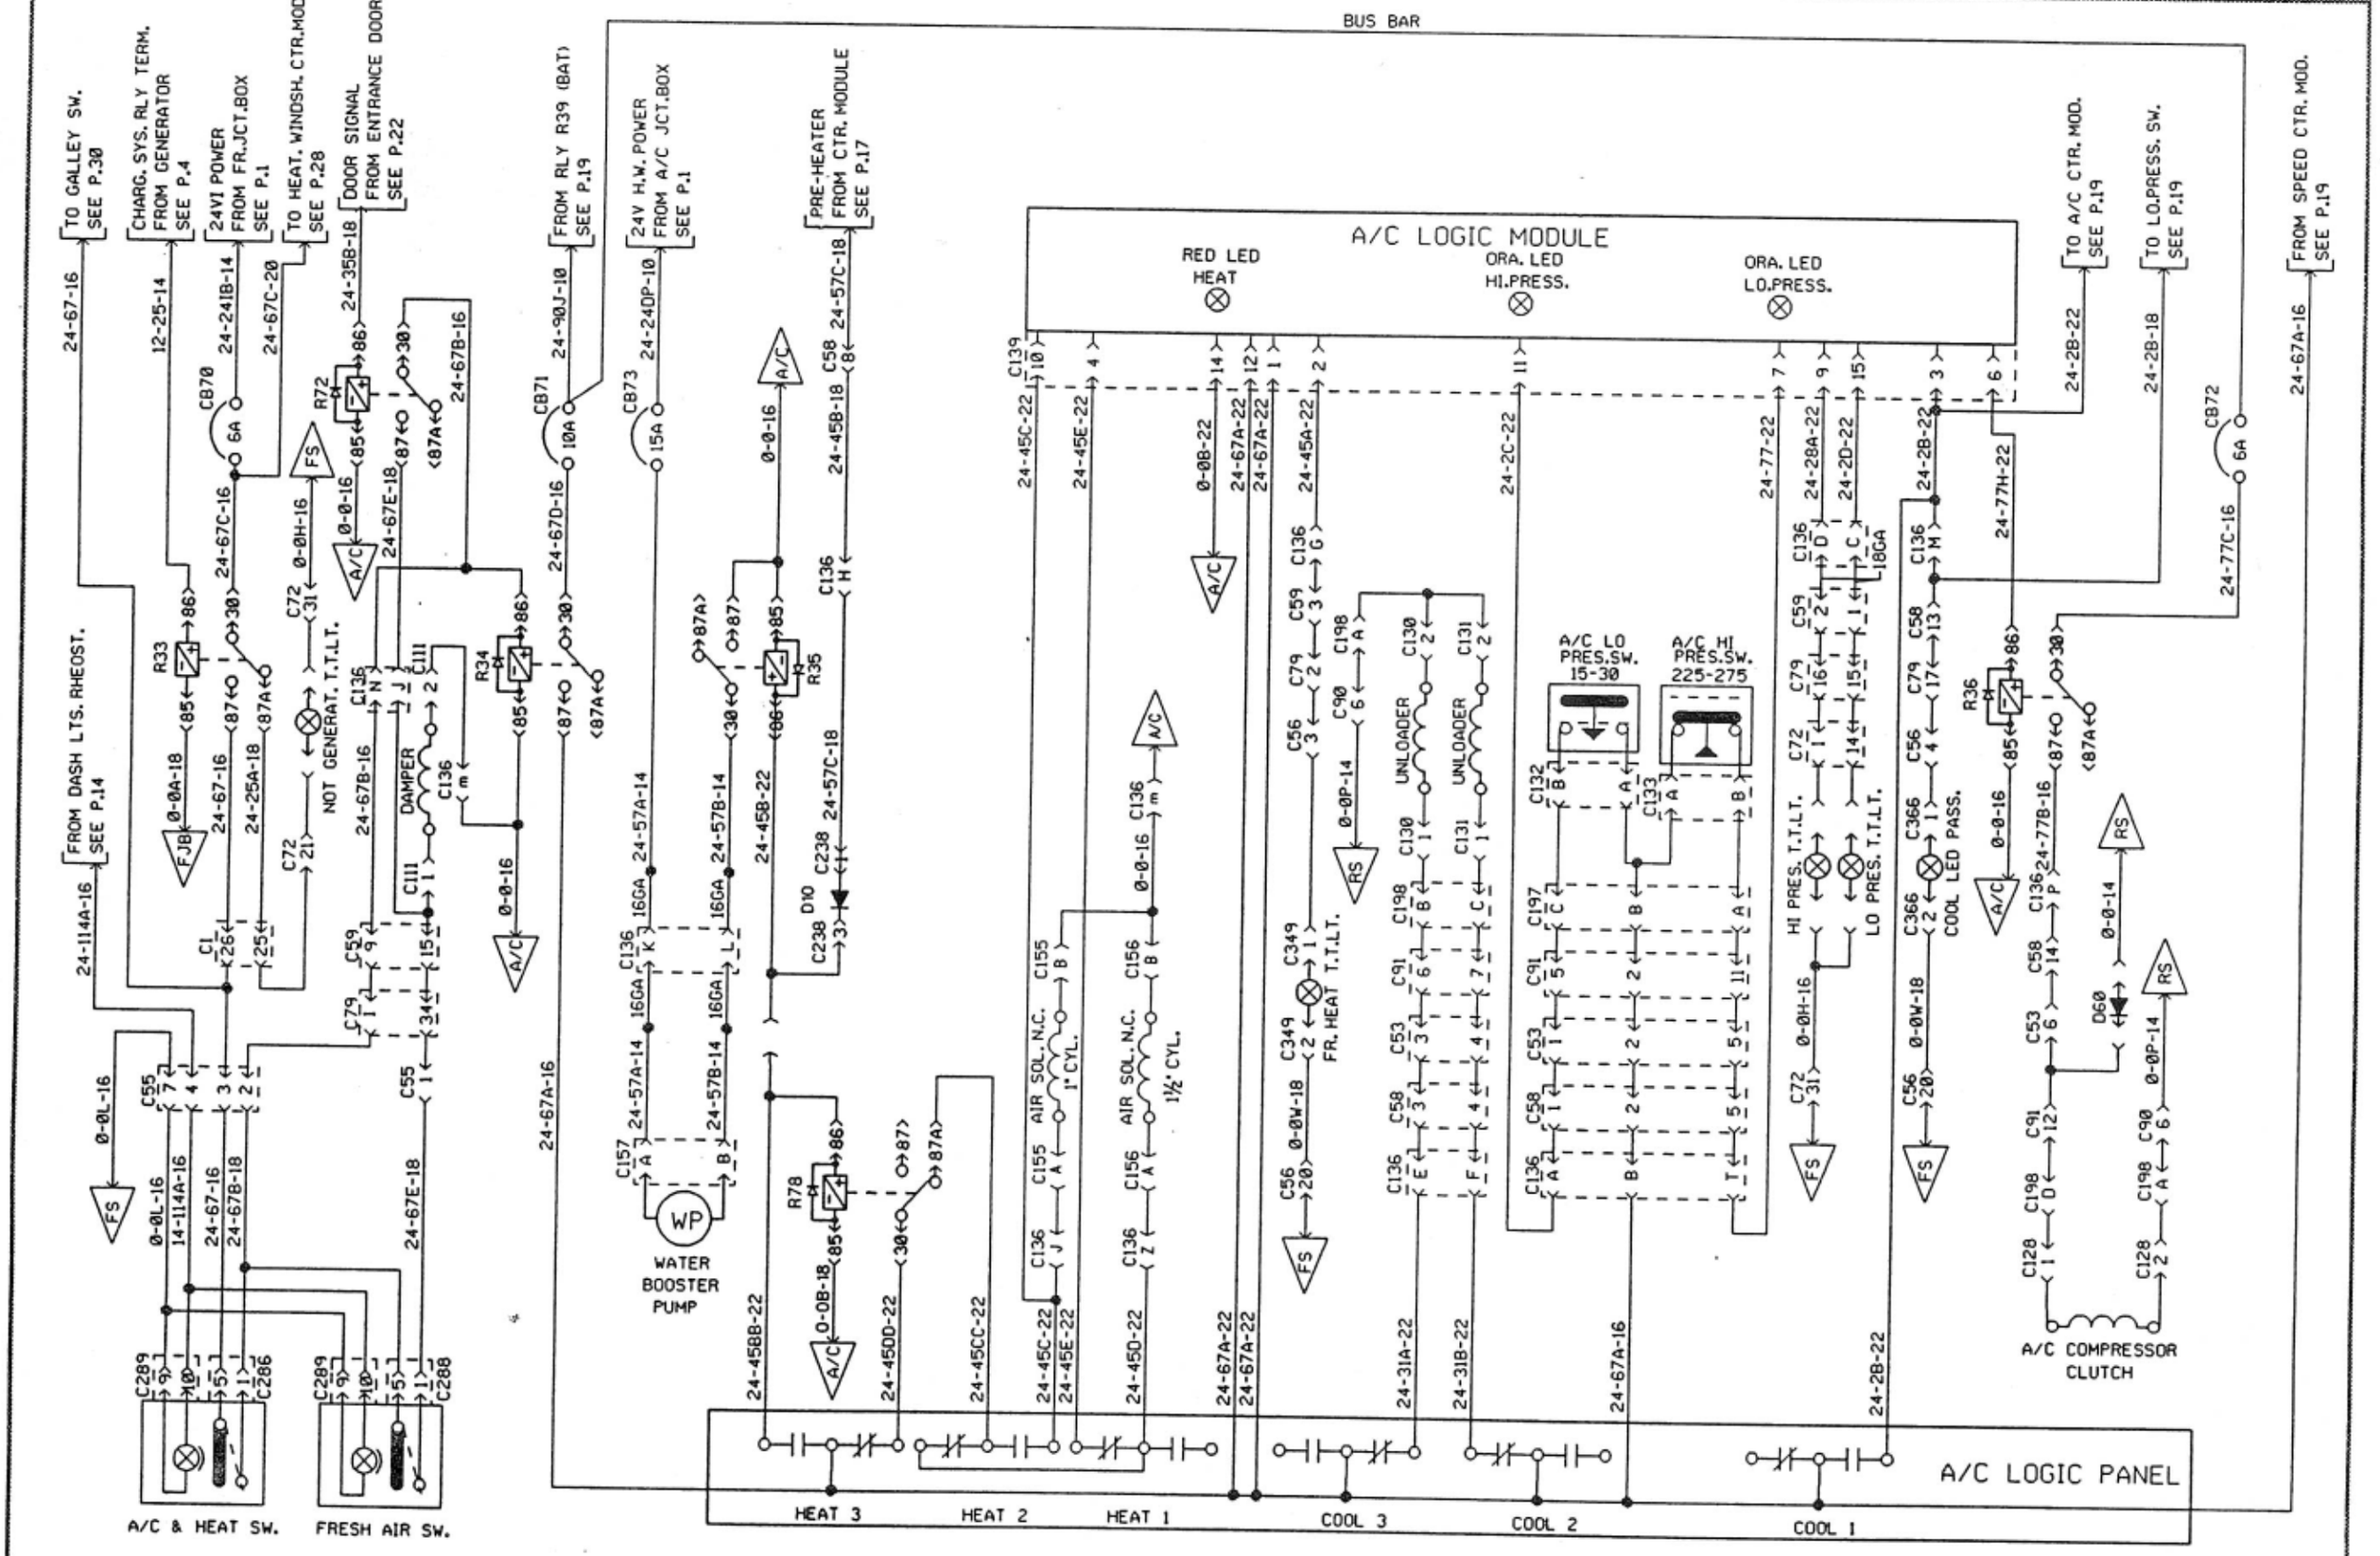

A/C AND HEAT SYSTEM

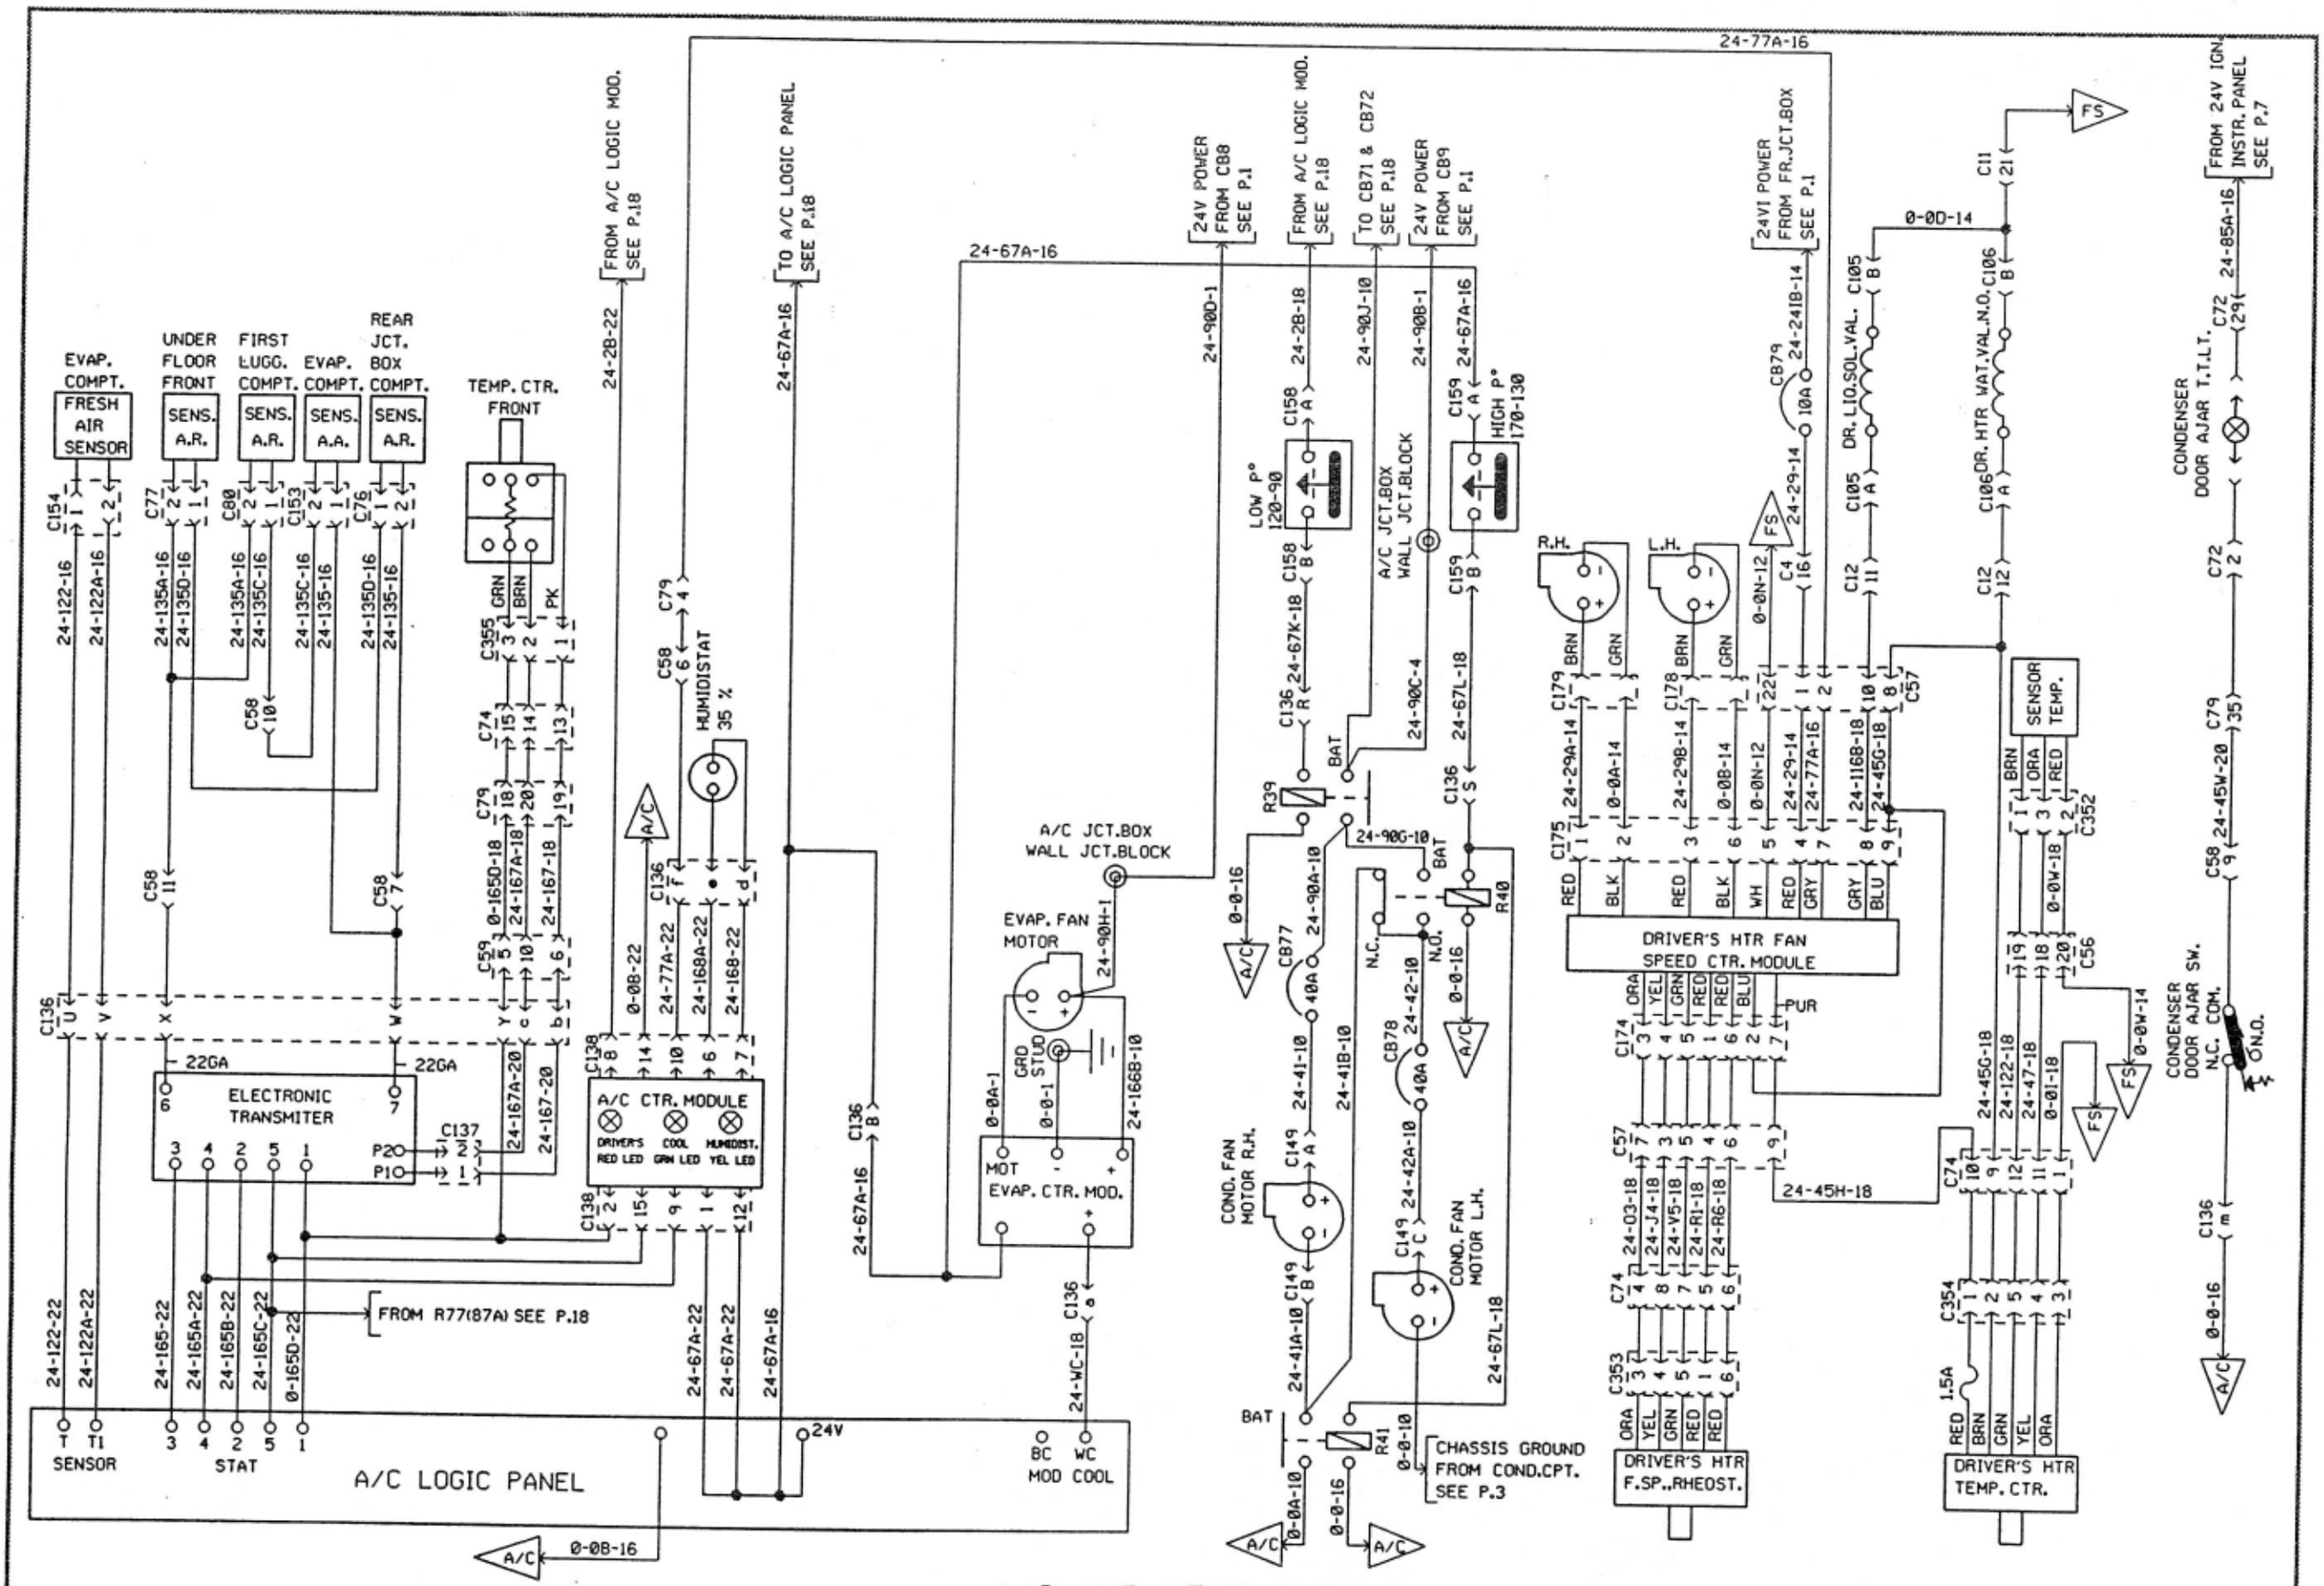

A/C AND HEAT SYSTEM

FROM DASH LTS RHEOST. SEE P.14

24VI POWER FROM FR.JCT.BOX SEE P.1

C880 8A 24-24IC-14

C2 17

24-114A-18

24-137-16

L.H MIRROR

SIDE/SIDE M

UP/DW M

C272 RED BLK YEL BRN GRN ORA

C270 24-137A-18 0-0R-18 24-137C-F-18 24-137B-E-18 24-137D-G-18

C268

24-137A-18

FS

0-0G-16

C71 37 25 15 14

C346 C341

HEATED MIR. SW.

C171 14 15 13 9 21 20

137C 137B 137D 137 0T 114A

UP SIDE SIDE DW LH RH UP DW SIDE SIDE

ADJUST MIR. SWITCH

FROM DASH LTS RHEOST. SEE P.14

0-0T-14

24-114A-18

24-137A-18

R.H MIRROR

SIDE/SIDE M

UP/DW M

C273 ORA GRN BRN YEL RED BLK

C271 24-137D-G-18 24-137B-E-18 24-137C-F-18 24-137A-18 0-0R-18

C269

C57 21 20 18 11 19

C171 11 12 20

137G 137E 137F

0-0M-16

FS

REAR VIEW - ADJUSTMENT & HEATED SW. (SPARTAN)

FROM DASH LTS RHEOST. SEE P.14

12V POWER FROM FR.JCT.BOX SEE P.2

24-114A-18

C881 15A 12-12C-12

C2 18 12-26-14

C56 5 19 C2

12-26A-14

CIGAR LIGHTER

M

A B C322

C56 20

0-0V-14

FS

0-0J-16

C171 37

C70 20 23

12-26-14 12-26C-14 12-26B-14

24-114A-18

0-0J-16

0-0T-14

C252 9 10 1 3 7 2 4 8 C318

DRIVER'S WINDOW LIFTER SW.

DRIVER'S WINDOW LIFTER

CIGAR LIGHTER

24V POWER FROM FR.JCT.BOX SEE P.1

C884 10A 24-24G-14

C2 20 24-72-18

24-72-18

TO DRIVER'S GALLEY SW. SEE P.30

24-72-18

M

C211 BLK RED

C70 22 15 14

24-72-18 24-72D-18 24-72C-18

C45 13 12

C252 9 10 1 3 7 2 4 8 C315

L.H. SUN VISOR SW.

M

C212 BLK RED

C70 13 12 21

C45 11 10

24-72B-18 24-72A-18

0-0T-14

FS

C252 9 10 1 3 7 2 4 8 C317

R.H. SUN VISOR SW.

SUN VISOR

FROM DASH LTS RHEOST. SEE P.14

24-114A-18

24VI POWER FROM FR.JCT.BOX SEE P.1

C882 10A 24-24IC-14

C2 21

FAN MOTOR

RS11 RS12

C71 37 25

C346 9 10 2 6 3 C338

24-5-14

24-5E-16 24-5D-16

C45 7 5 6 4 3

C365 1 2 3

0-0B-14

0-0G-16

FS

DEFROSTER SW.

UPPER WINDSHIELD DEFROST

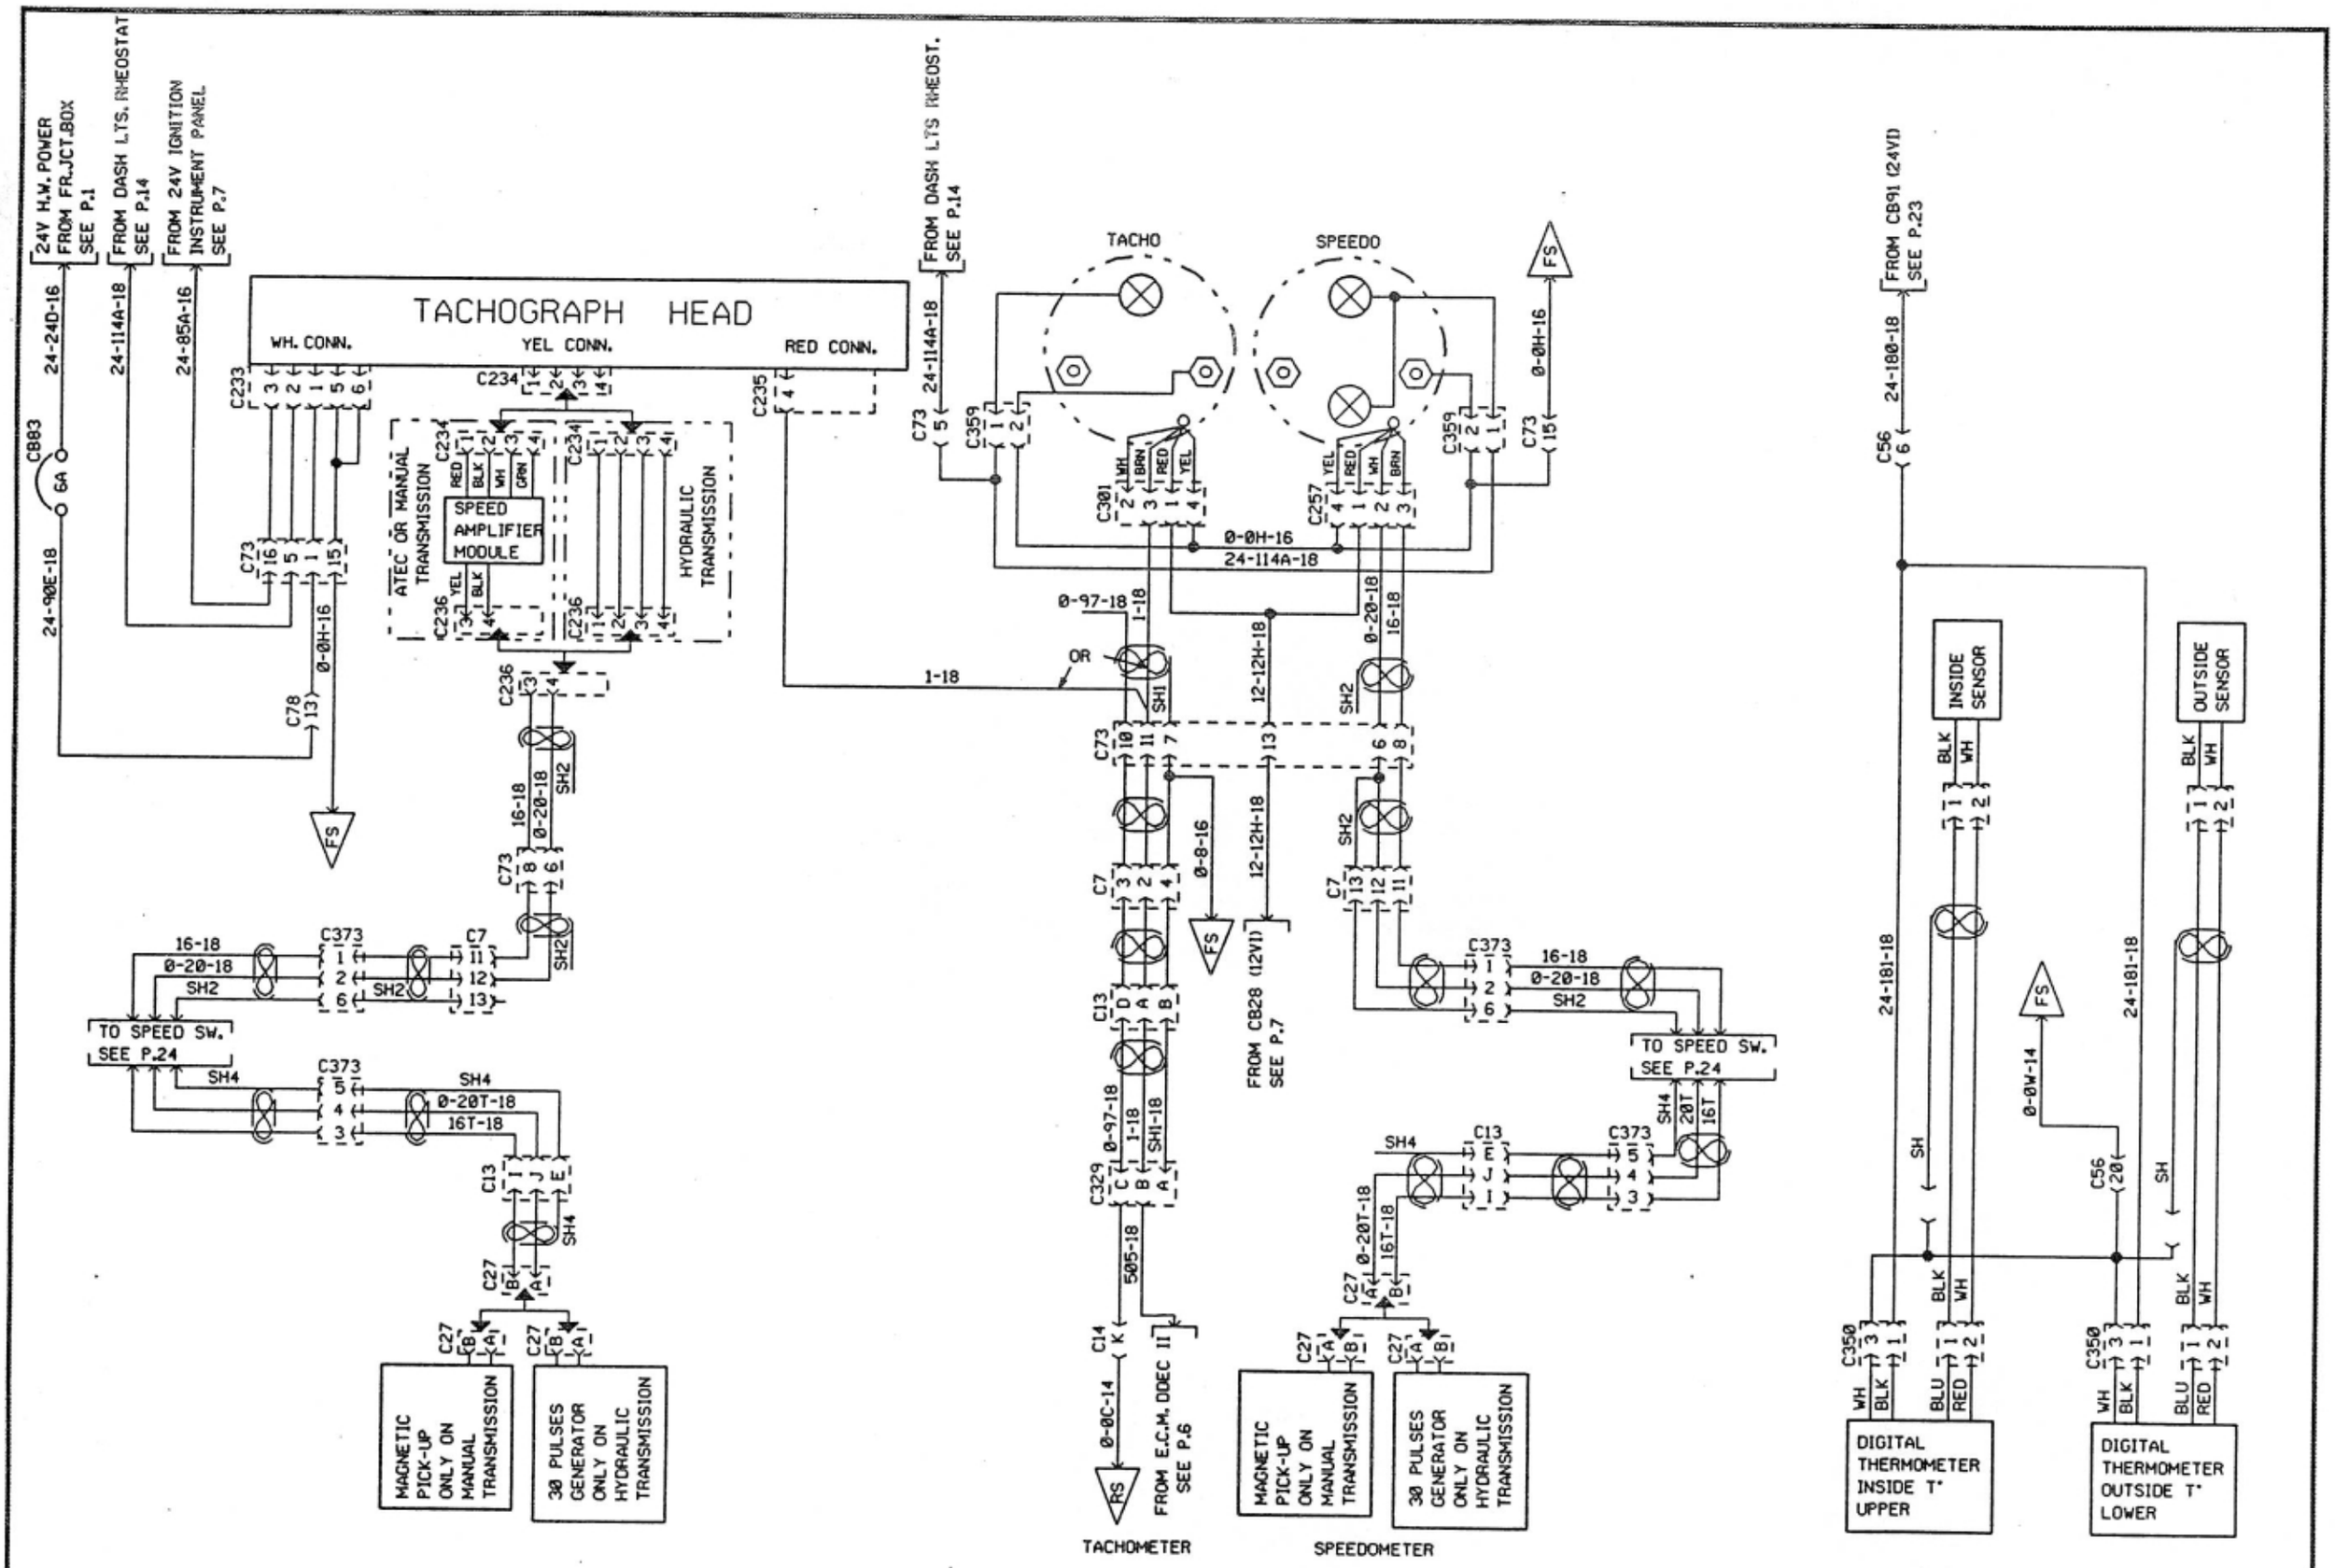

ELECTRONIC TACHOGRAPH | TACHO. & SPEEDO. -VDO | DIGITAL THERMOMETER

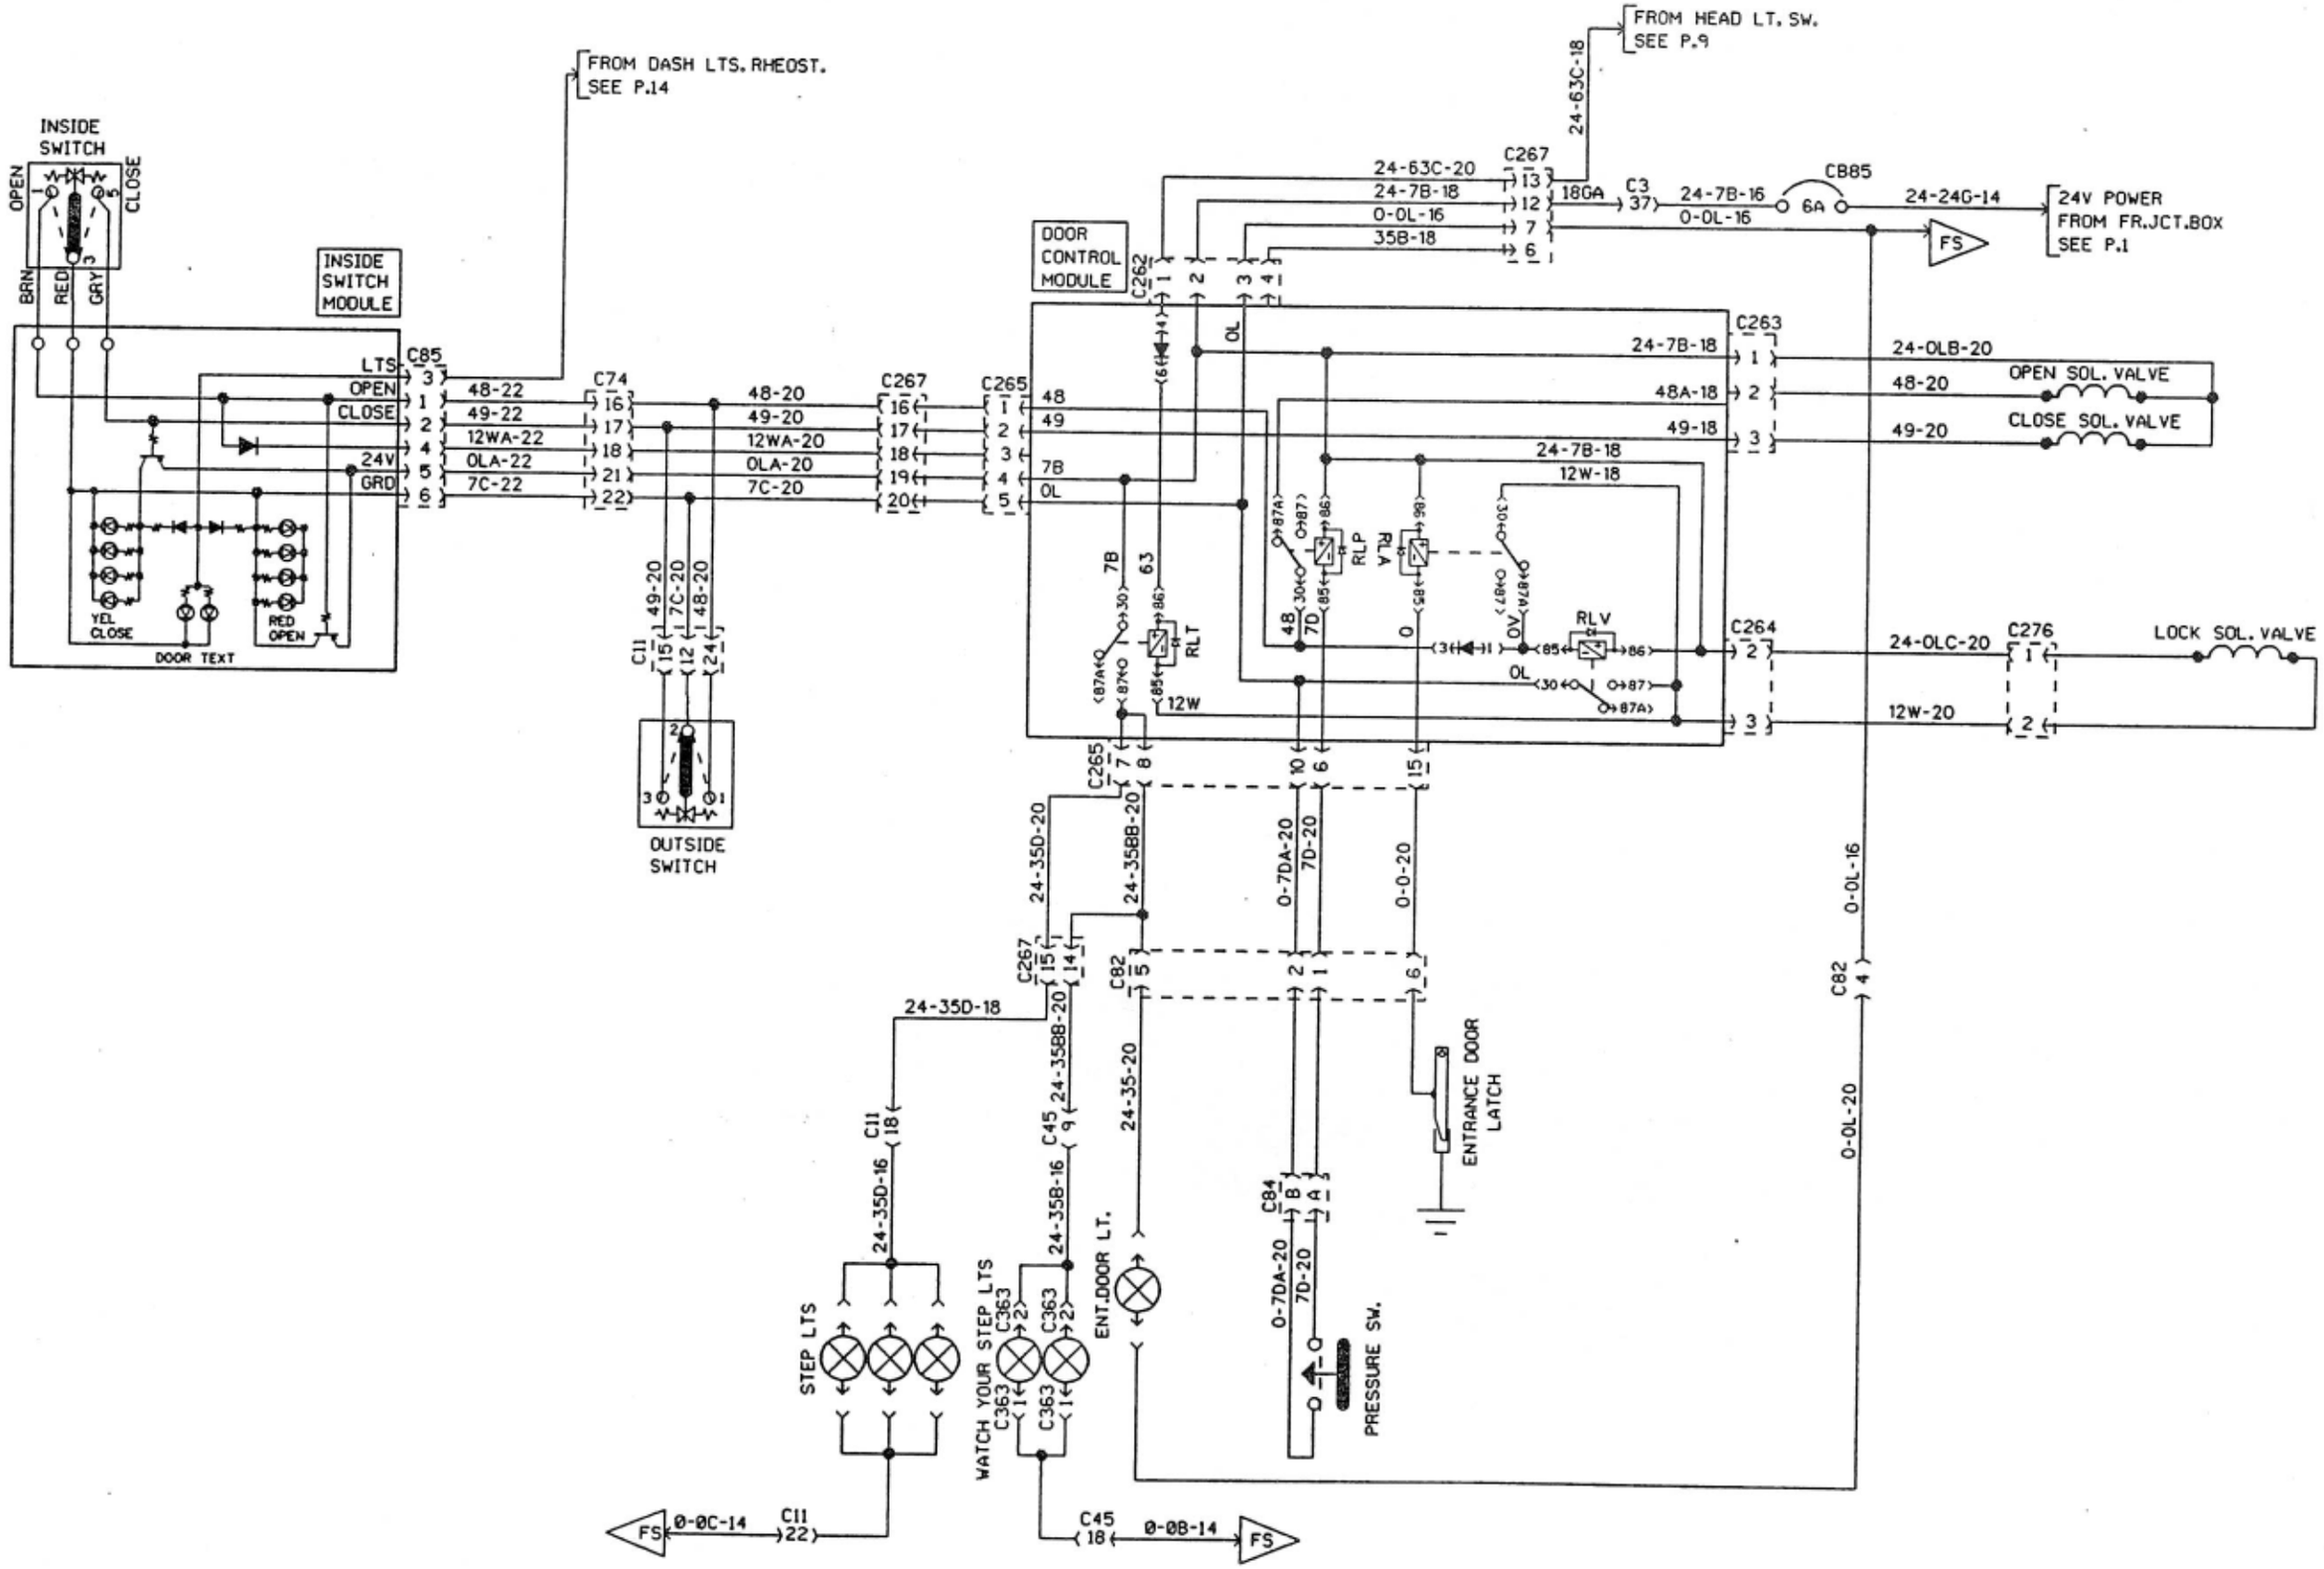

ENTRANCE DOOR (SEDAN) - RELAYS MODULE - RETROFIT H340

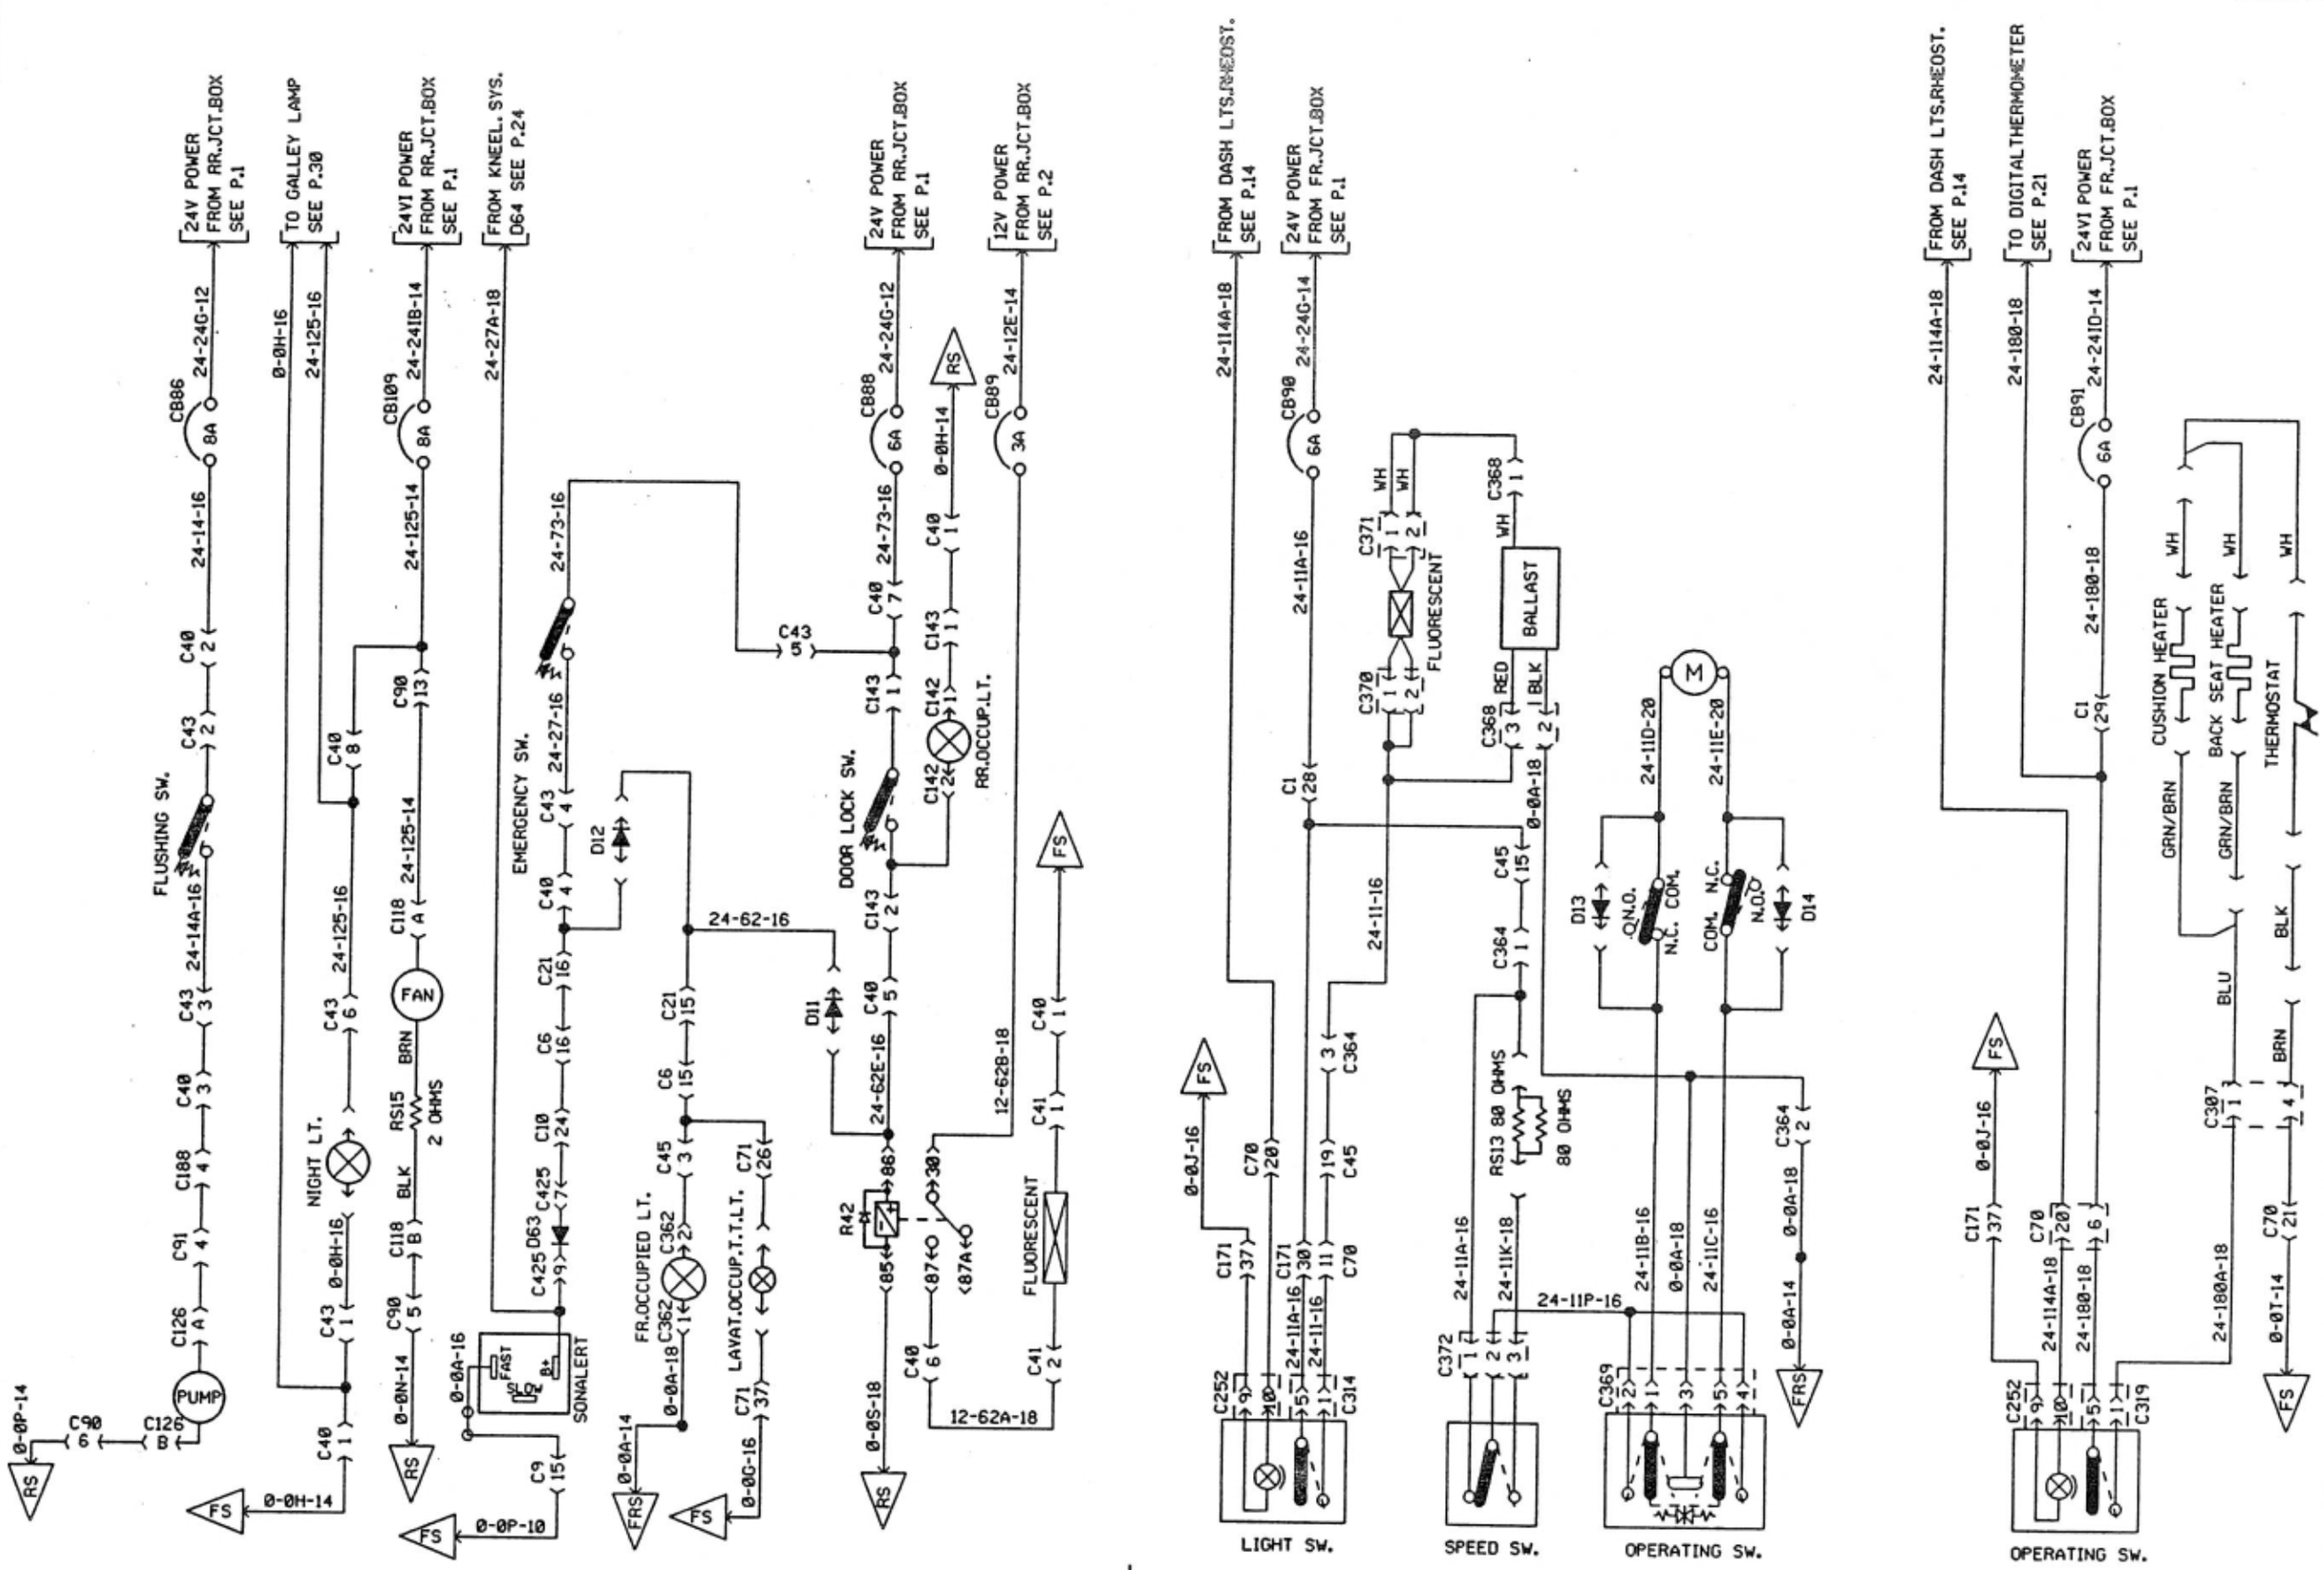
LAVATORY
FLUSHING SW.
PUMP
NIGHT LT.
FAN
EMERGENCY SW.
SONALERT
FR.OCCUPIED LT.
LAVAT.OCCUP.T.T.LT.
DOOR LOCK SW.
RR.OCCUP.LT.
FLUORESCENT
24V POWER FROM RR.JCT.BOX SEE P.1
TO GALLEY LAMP SEE P.30
24VI POWER FROM RR.JCT.BOX SEE P.1
FROM KNEEL.SYS. D64 SEE P.24
12V POWER FROM RR.JCT.BOX SEE P.2
FRONT DESTINATION SIGN
FROM DASH LTS.RHEOST. SEE P.14
24V POWER FROM FR.JCT.BOX SEE P.1
LIGHT SW.
SPEED SW.
OPERATING SW.
TO DIGITAL THERMOMETER SEE P.21
24VI POWER FROM FR.JCT.BOX SEE P.1
DRIVER'S SEAT HEATER
CUSHION HEATER
BACK SEAT HEATER
THERMOSTAT
OPERATING SW.

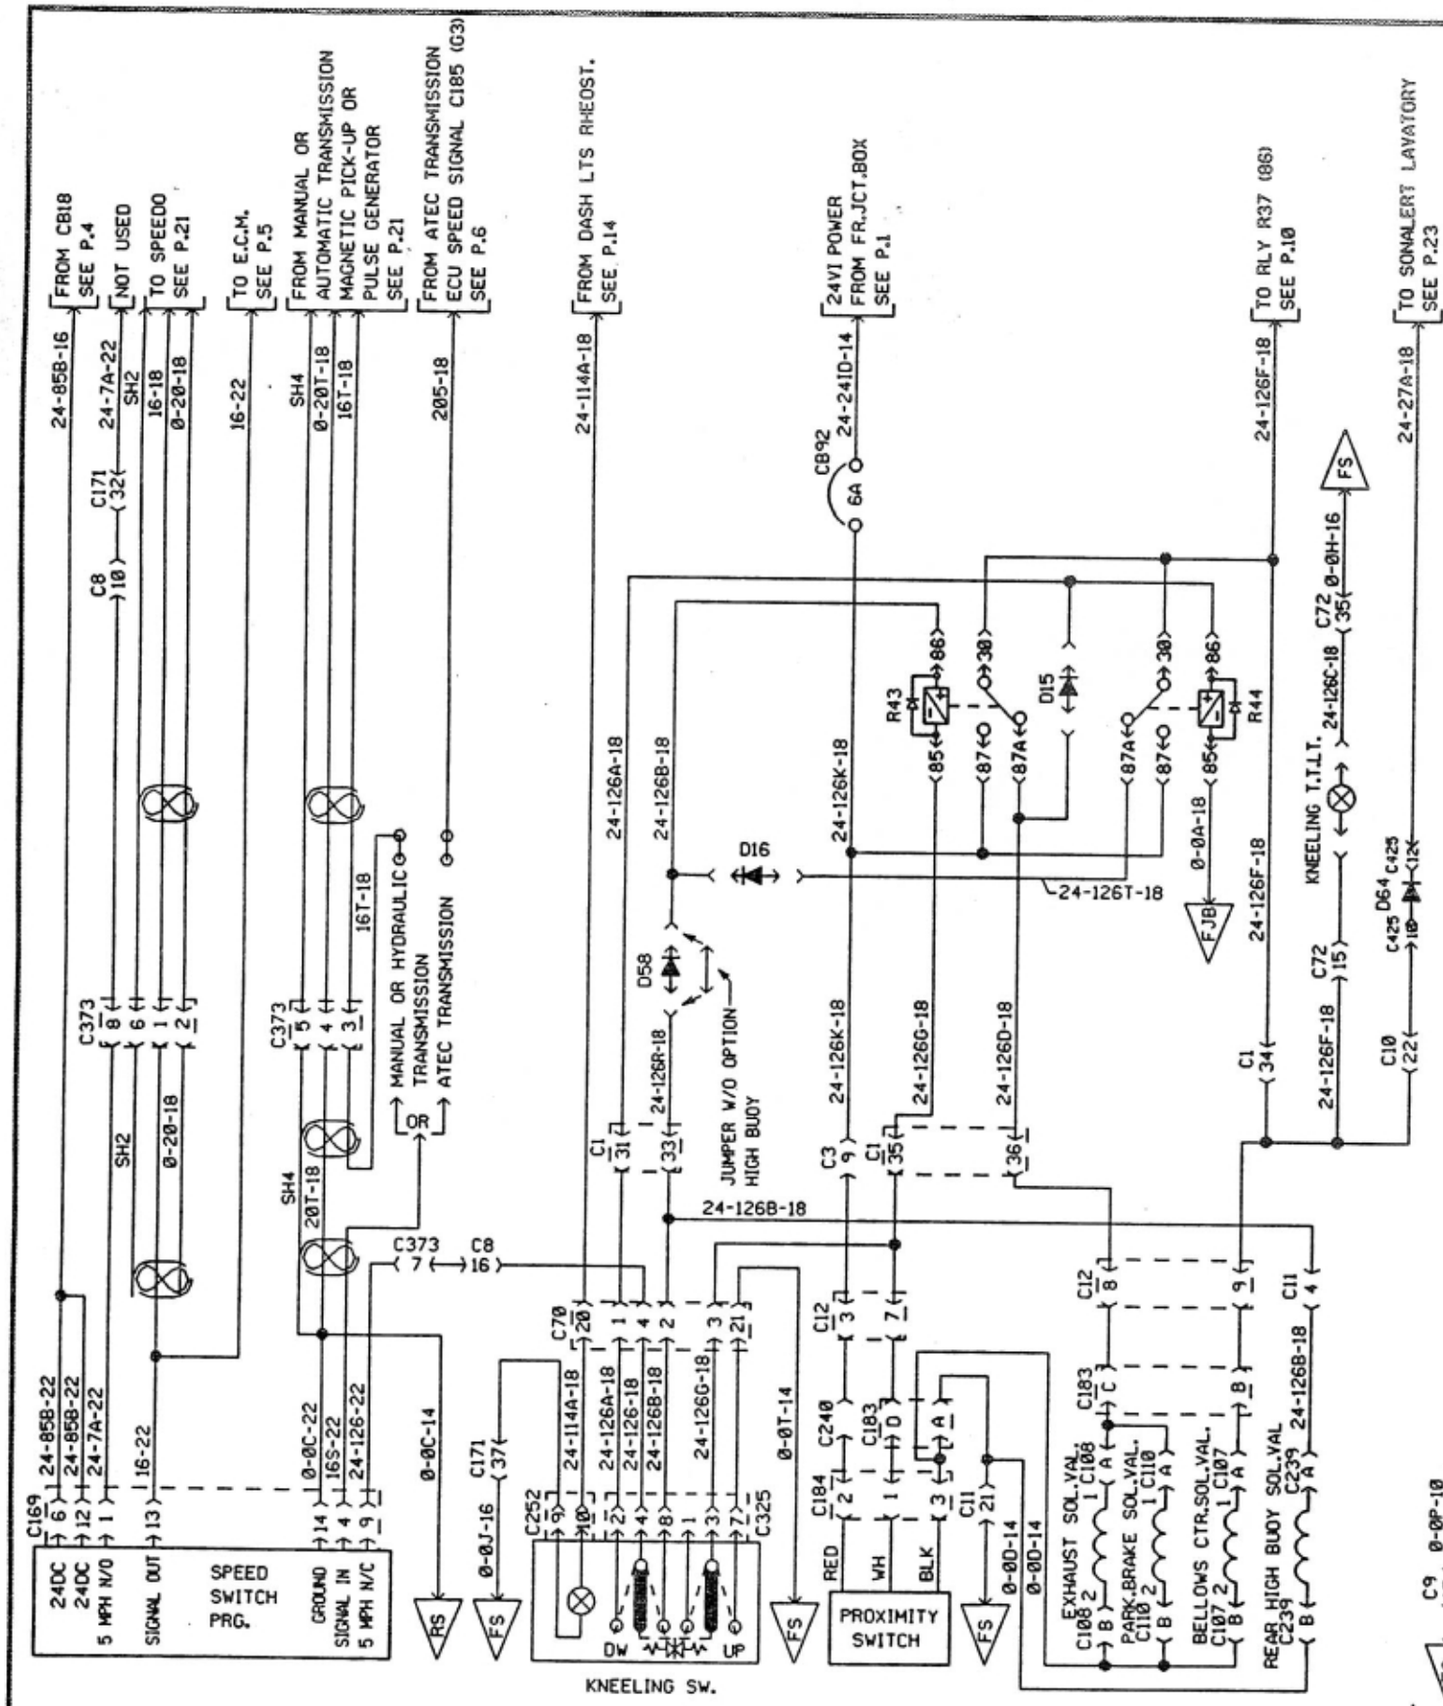
24-85B-16
FROM CB18
SEE P.4
C171
32
24-7A-22
NOT USED
SH2
C8
10
16-18
TO SPEEDO
0-20-18
SEE P.21
16-22
TO E.C.M.
SEE P.5
SH4
0-20T-18
FROM MANUAL OR
AUTOMATIC TRANSMISSION
MAGNETIC PICK-UP OR
16T-18
PULSE GENERATOR
SEE P.21
205-18
FROM ATEC TRANSMISSION
ECU SPEED SIGNAL C185 (G3)
SEE P.6
24-114A-18
FROM DASH LTS RHEOST.
SEE P.14
CB92
6A
24-241D-14
24VI POWER
FROM FR.JCT.BOX
SEE P.1
24-126F-18
TO RLY R37 (86)
SEE P.10
24-27A-18
TO SONALERT LAVATORY
SEE P.23
24-126A-18
24-126B-18
24-126K-18
24-126T-18
D16
R43
R44
D15
0-0A-18
FJB
C72
0-0H-16
FS
24-126C-18
KNEELING T.T.LT.
D64
C425
D58
JUMPER W/O OPTION
HIGH BUDDY
24-126R-18
24-126K-18
24-126G-18
24-126D-18
C1
C3
C12
C183
C184
C240
C70
C252
C325
C171
0-0J-16
0-0C-14
RS
FS
0-0T-14
0-0D-14
RED
WH
BLK
PROXIMITY
SWITCH
DW
UP
KNEELING SW.
EXHAUST SOL.VAL.
C108
PARK.BRAKE SOL.VAL.
C110
BELLOWS CTR.SOL.VAL.
C107
REAR HIGH BUDDY SOL.VAL
C239
C373
SH2
SH4
20T-18
16T-18
0-20-18
MANUAL OR HYDRAULIC
TRANSMISSION
OR
ATEC TRANSMISSION
C169
24DC
24DC
5 MPH N/O
SIGNAL OUT
SPEED
SWITCH
PRG.
GROUND
SIGNAL IN
5 MPH N/C
24-85B-22
24-85B-22
24-7A-22
16-22
0-0C-22
16S-22
24-126-22
0-0C-14
KNEELING SYSTEM
CB108
6A
12-32F-18
C6
19
C4
12
C21
19
12-32C-14
FROM BACK-UP LTS SIGN.
RLY R9 (87)
SEE P.11
MONITOR
5-173-18
0-01-16
C360
68 K
330
BRIGHTNESS
CONTROL
CONTRAST
CONTROL
JUMPER
C74
0-01-16
C20
9
12-175-18
C5
9
C91
24
30
0-0J-16
RS
C87
4
1
C89
1
3
CAMERA
175
0J
TWIST
30/METER
TYP.3
CB87
3A
24-24G-12
24V POWER
FROM RR.JCT.BOX
SEE P.1
24-175B-18
R46
86
85
87
87A
30
0-0T-18
24-175C-18
CAMERA SERVICE SW.
C91
26
C122
A
B
CAMERA DOOR SOL.
C90
1
0-0R-14
CB95
6A
12-121-10
12VI POWER
FROM RR.JCT.BOX
SEE P.2
12-175A-16
C89
2
C87
5
C91
25
THERMOSTAT
CAMERA HEATER
C9
15
0-0P-10
C249
2
0-0B-16
GRN
RED
BLK
CONVERTER
12V-5V
C10
18
17
12-175-18
5-173-18
C1
1
JUMPER
0-01-16
BACK-UP MONITOR

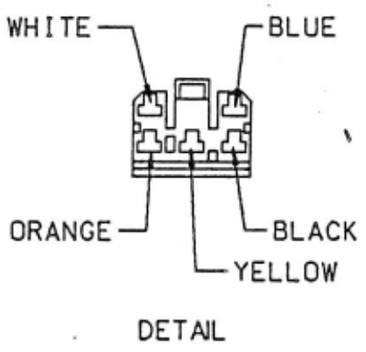

DETAIL

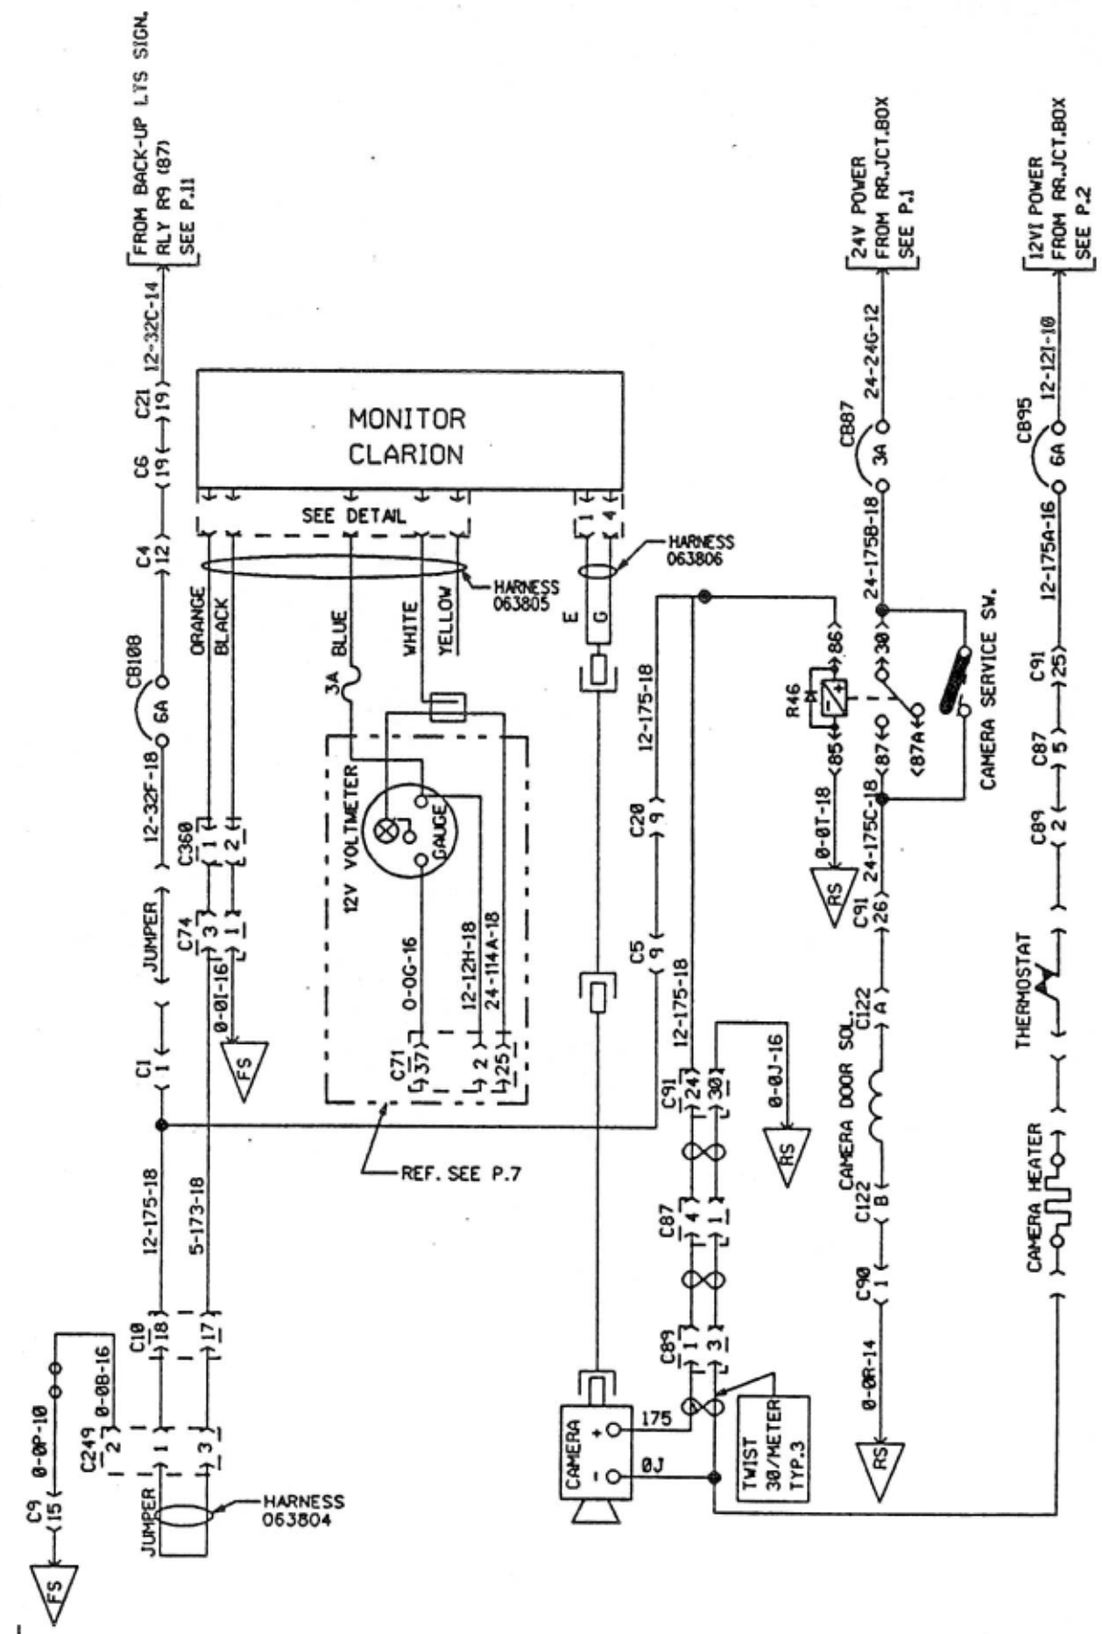

BACK-UP MONITOR (CLARION) (RETROFIT O.C.#94079)

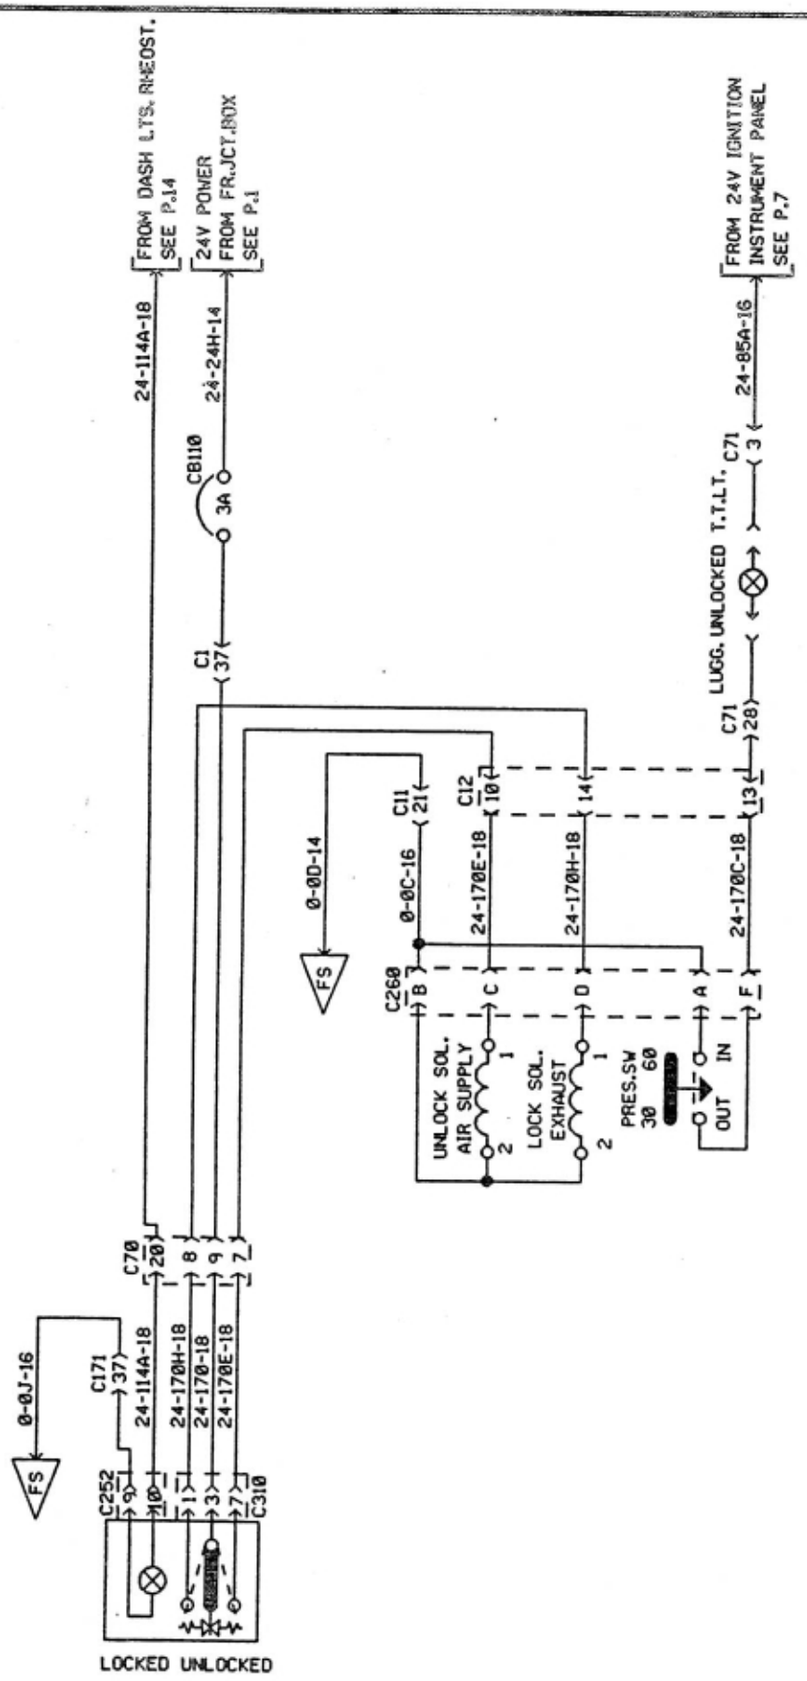

LUGGAGE DOOR LOCK

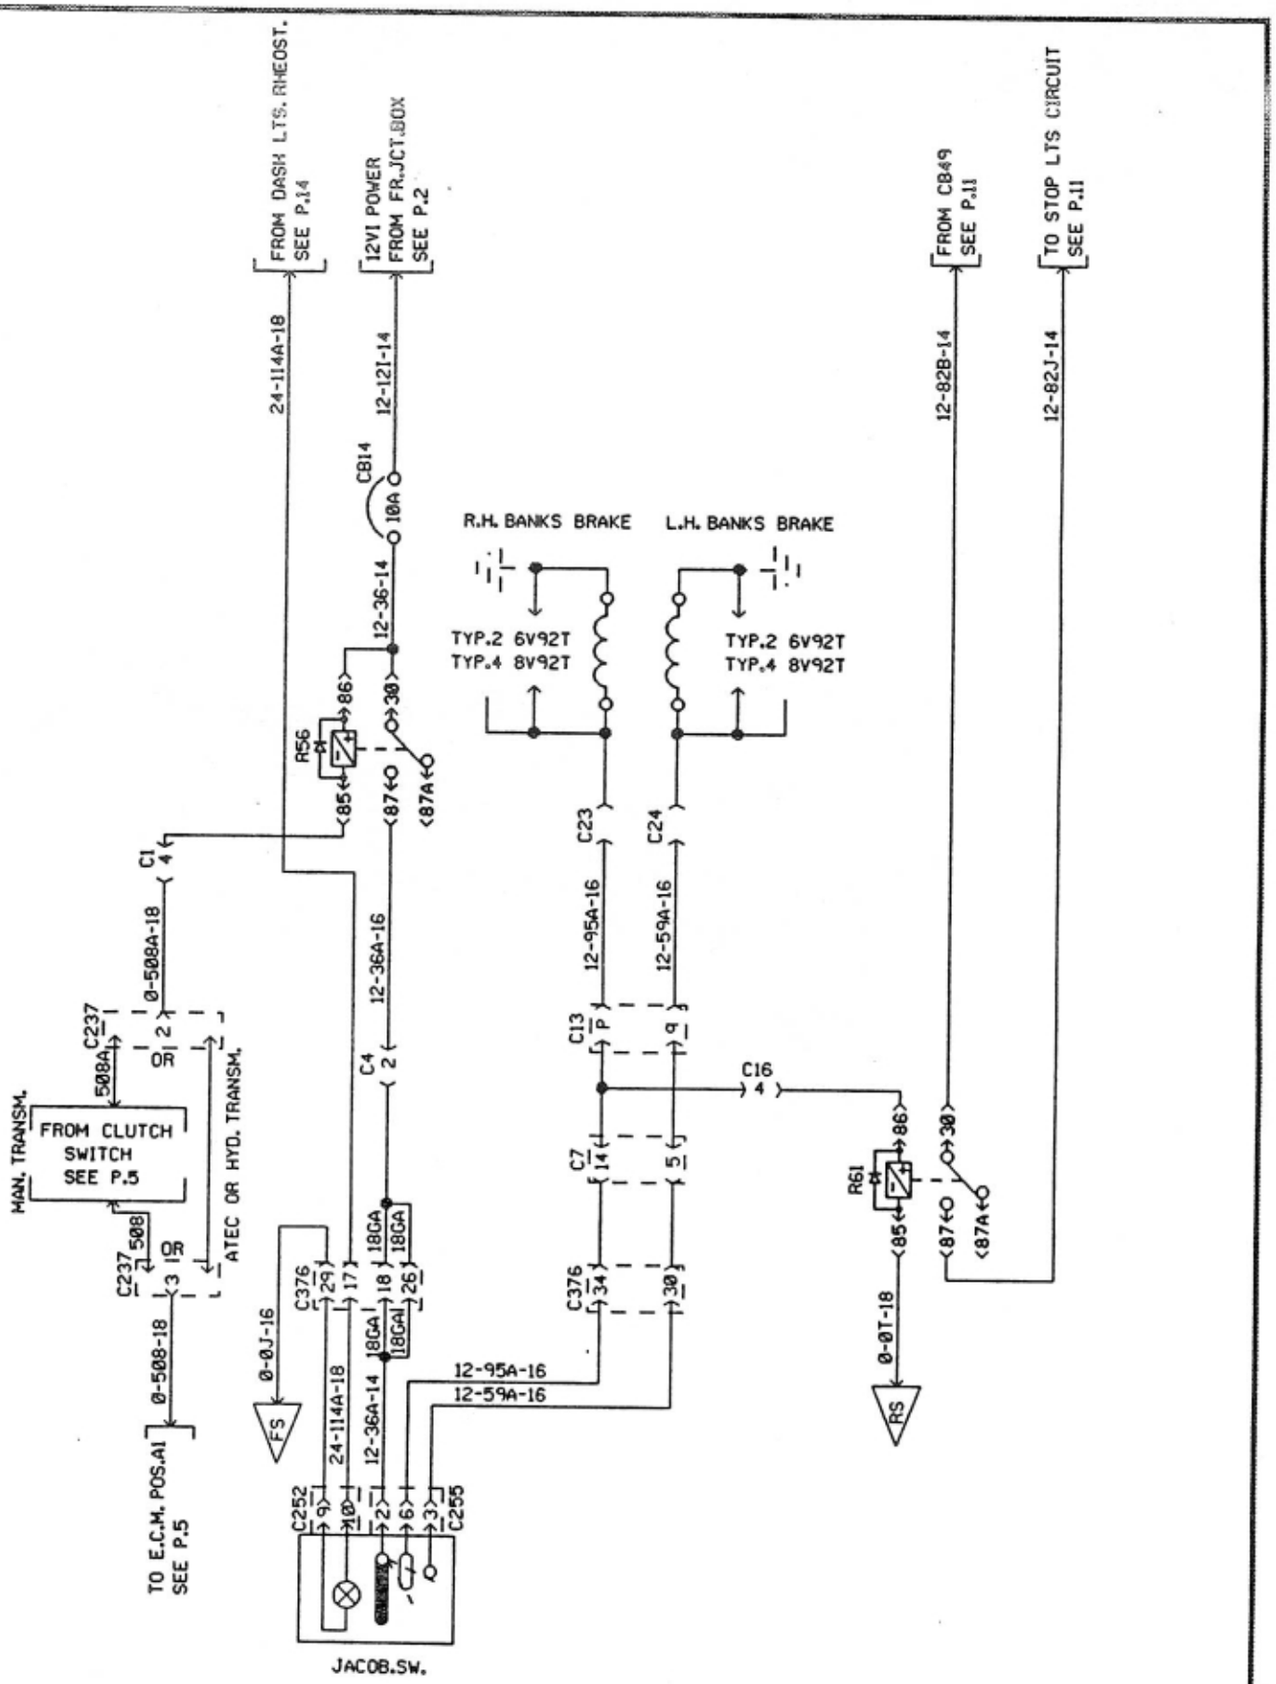

JACOB BRAKE SYSTEM

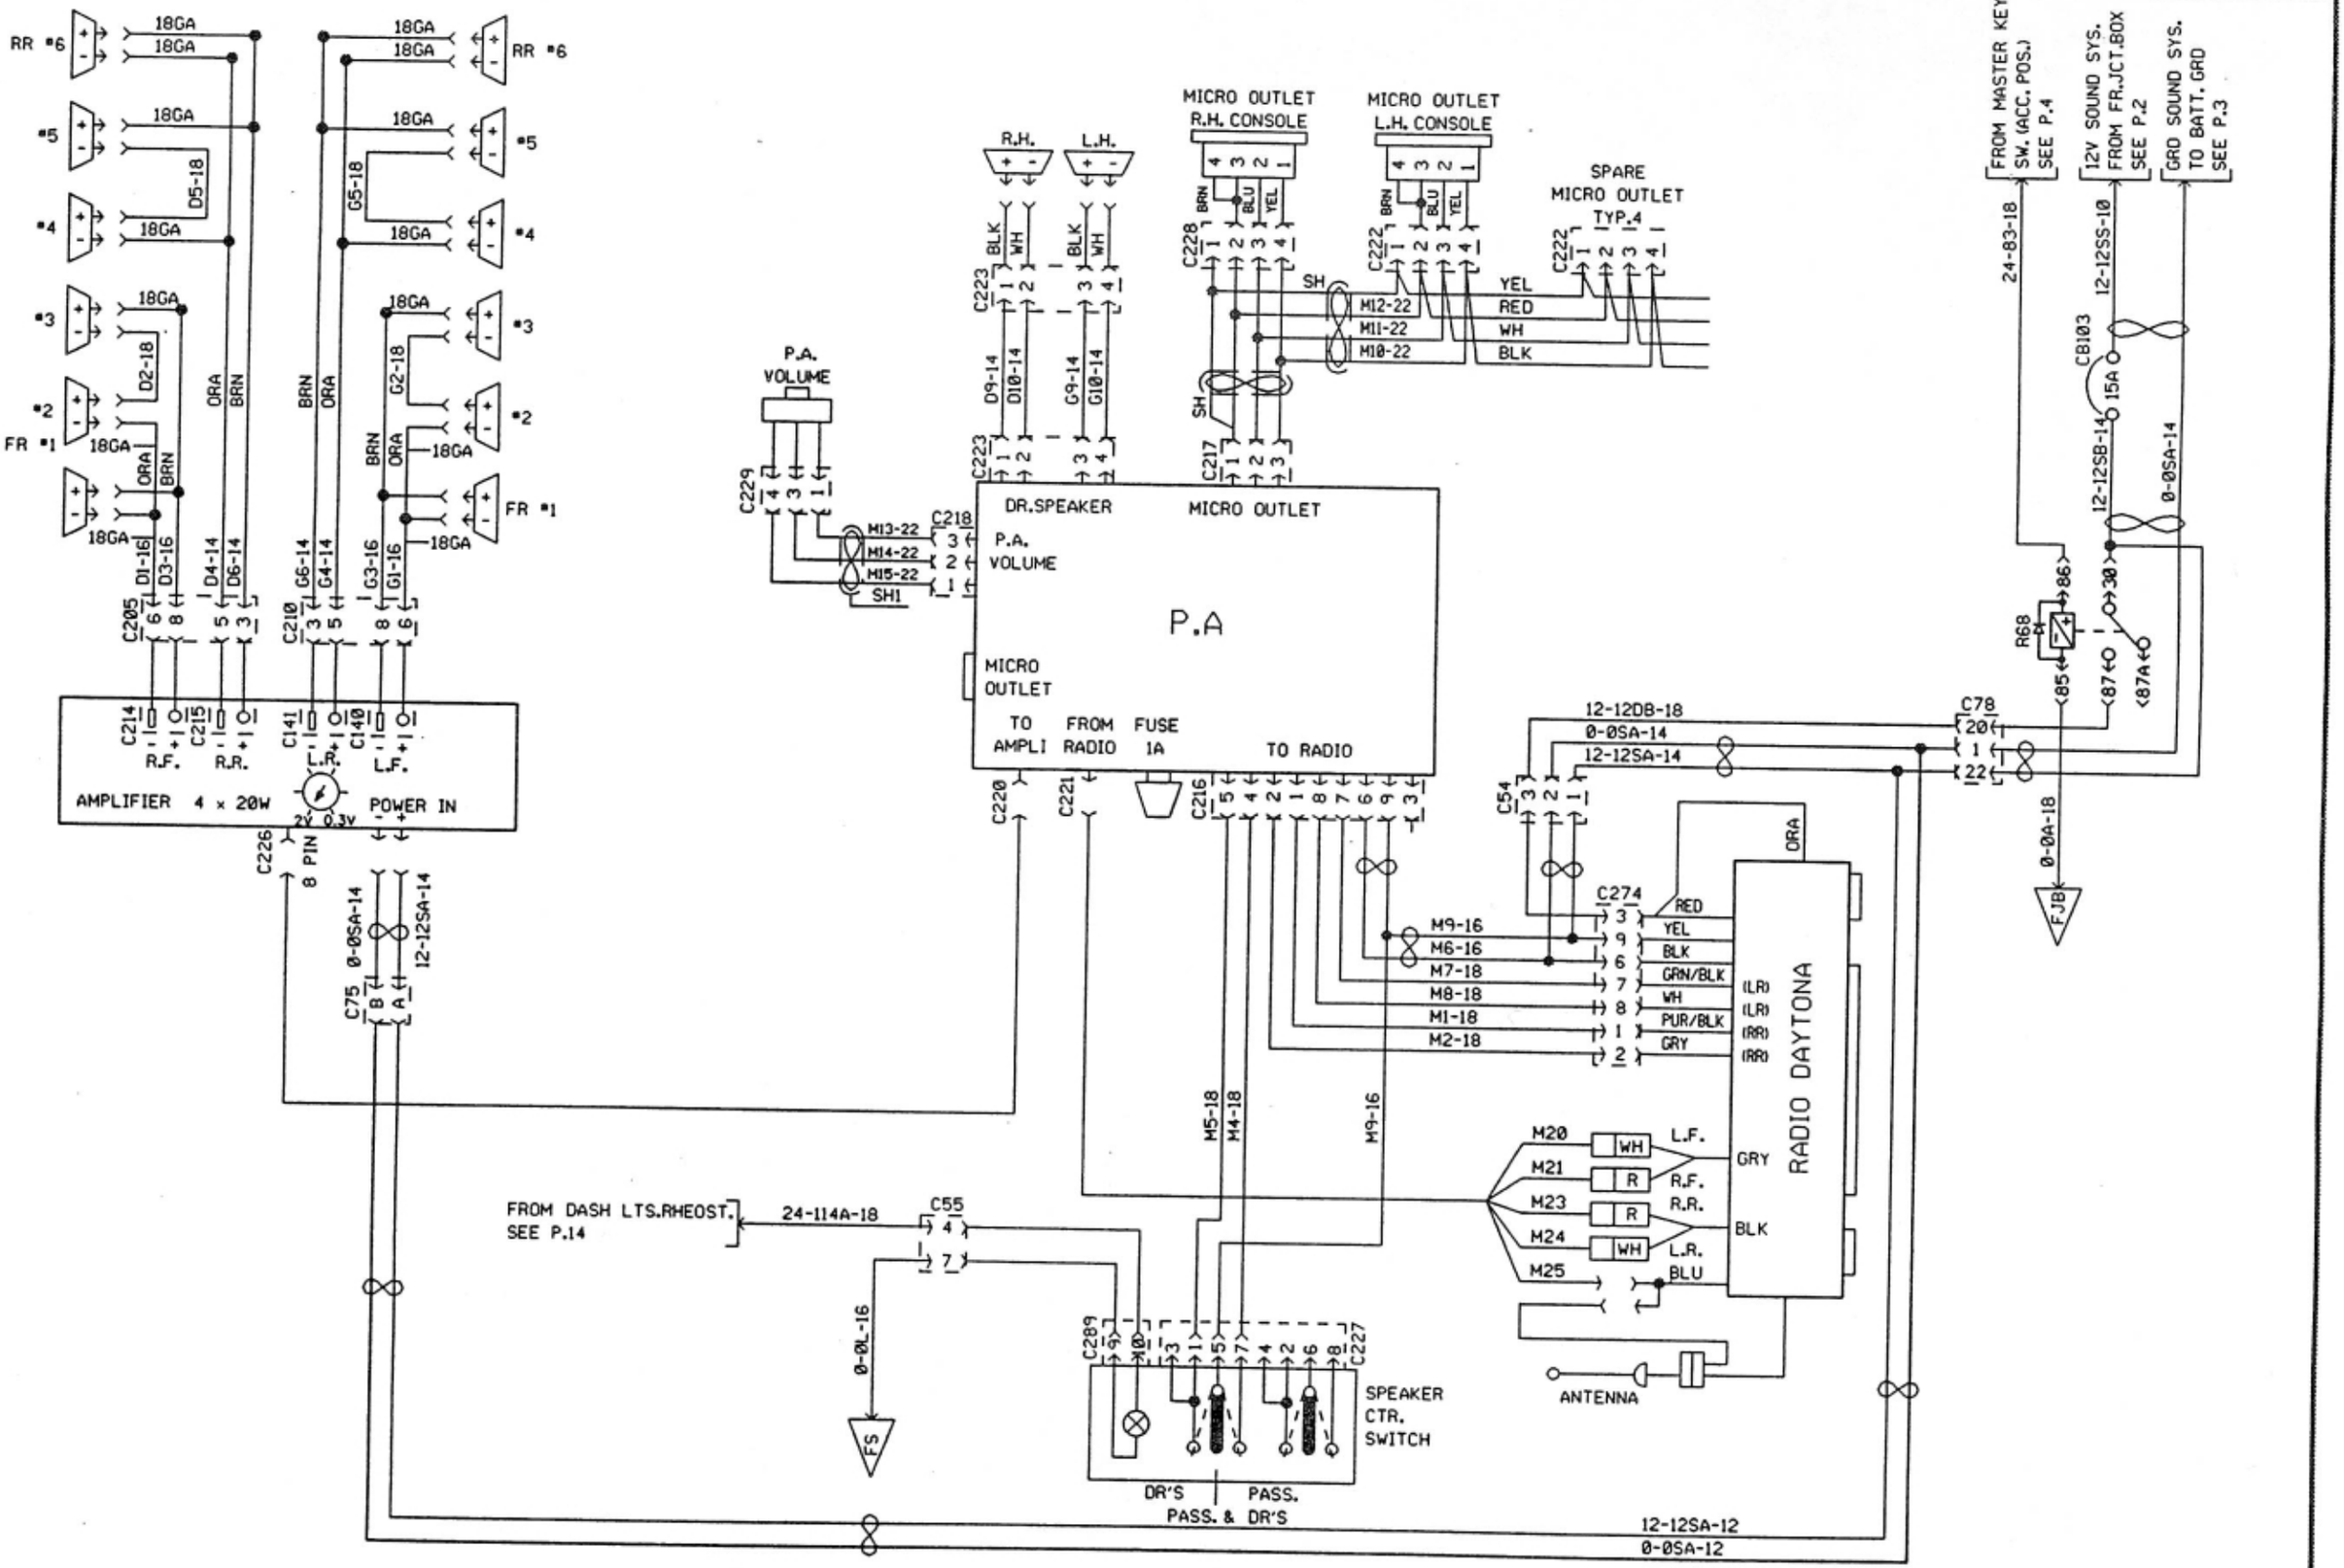

SOUND SYSTEM

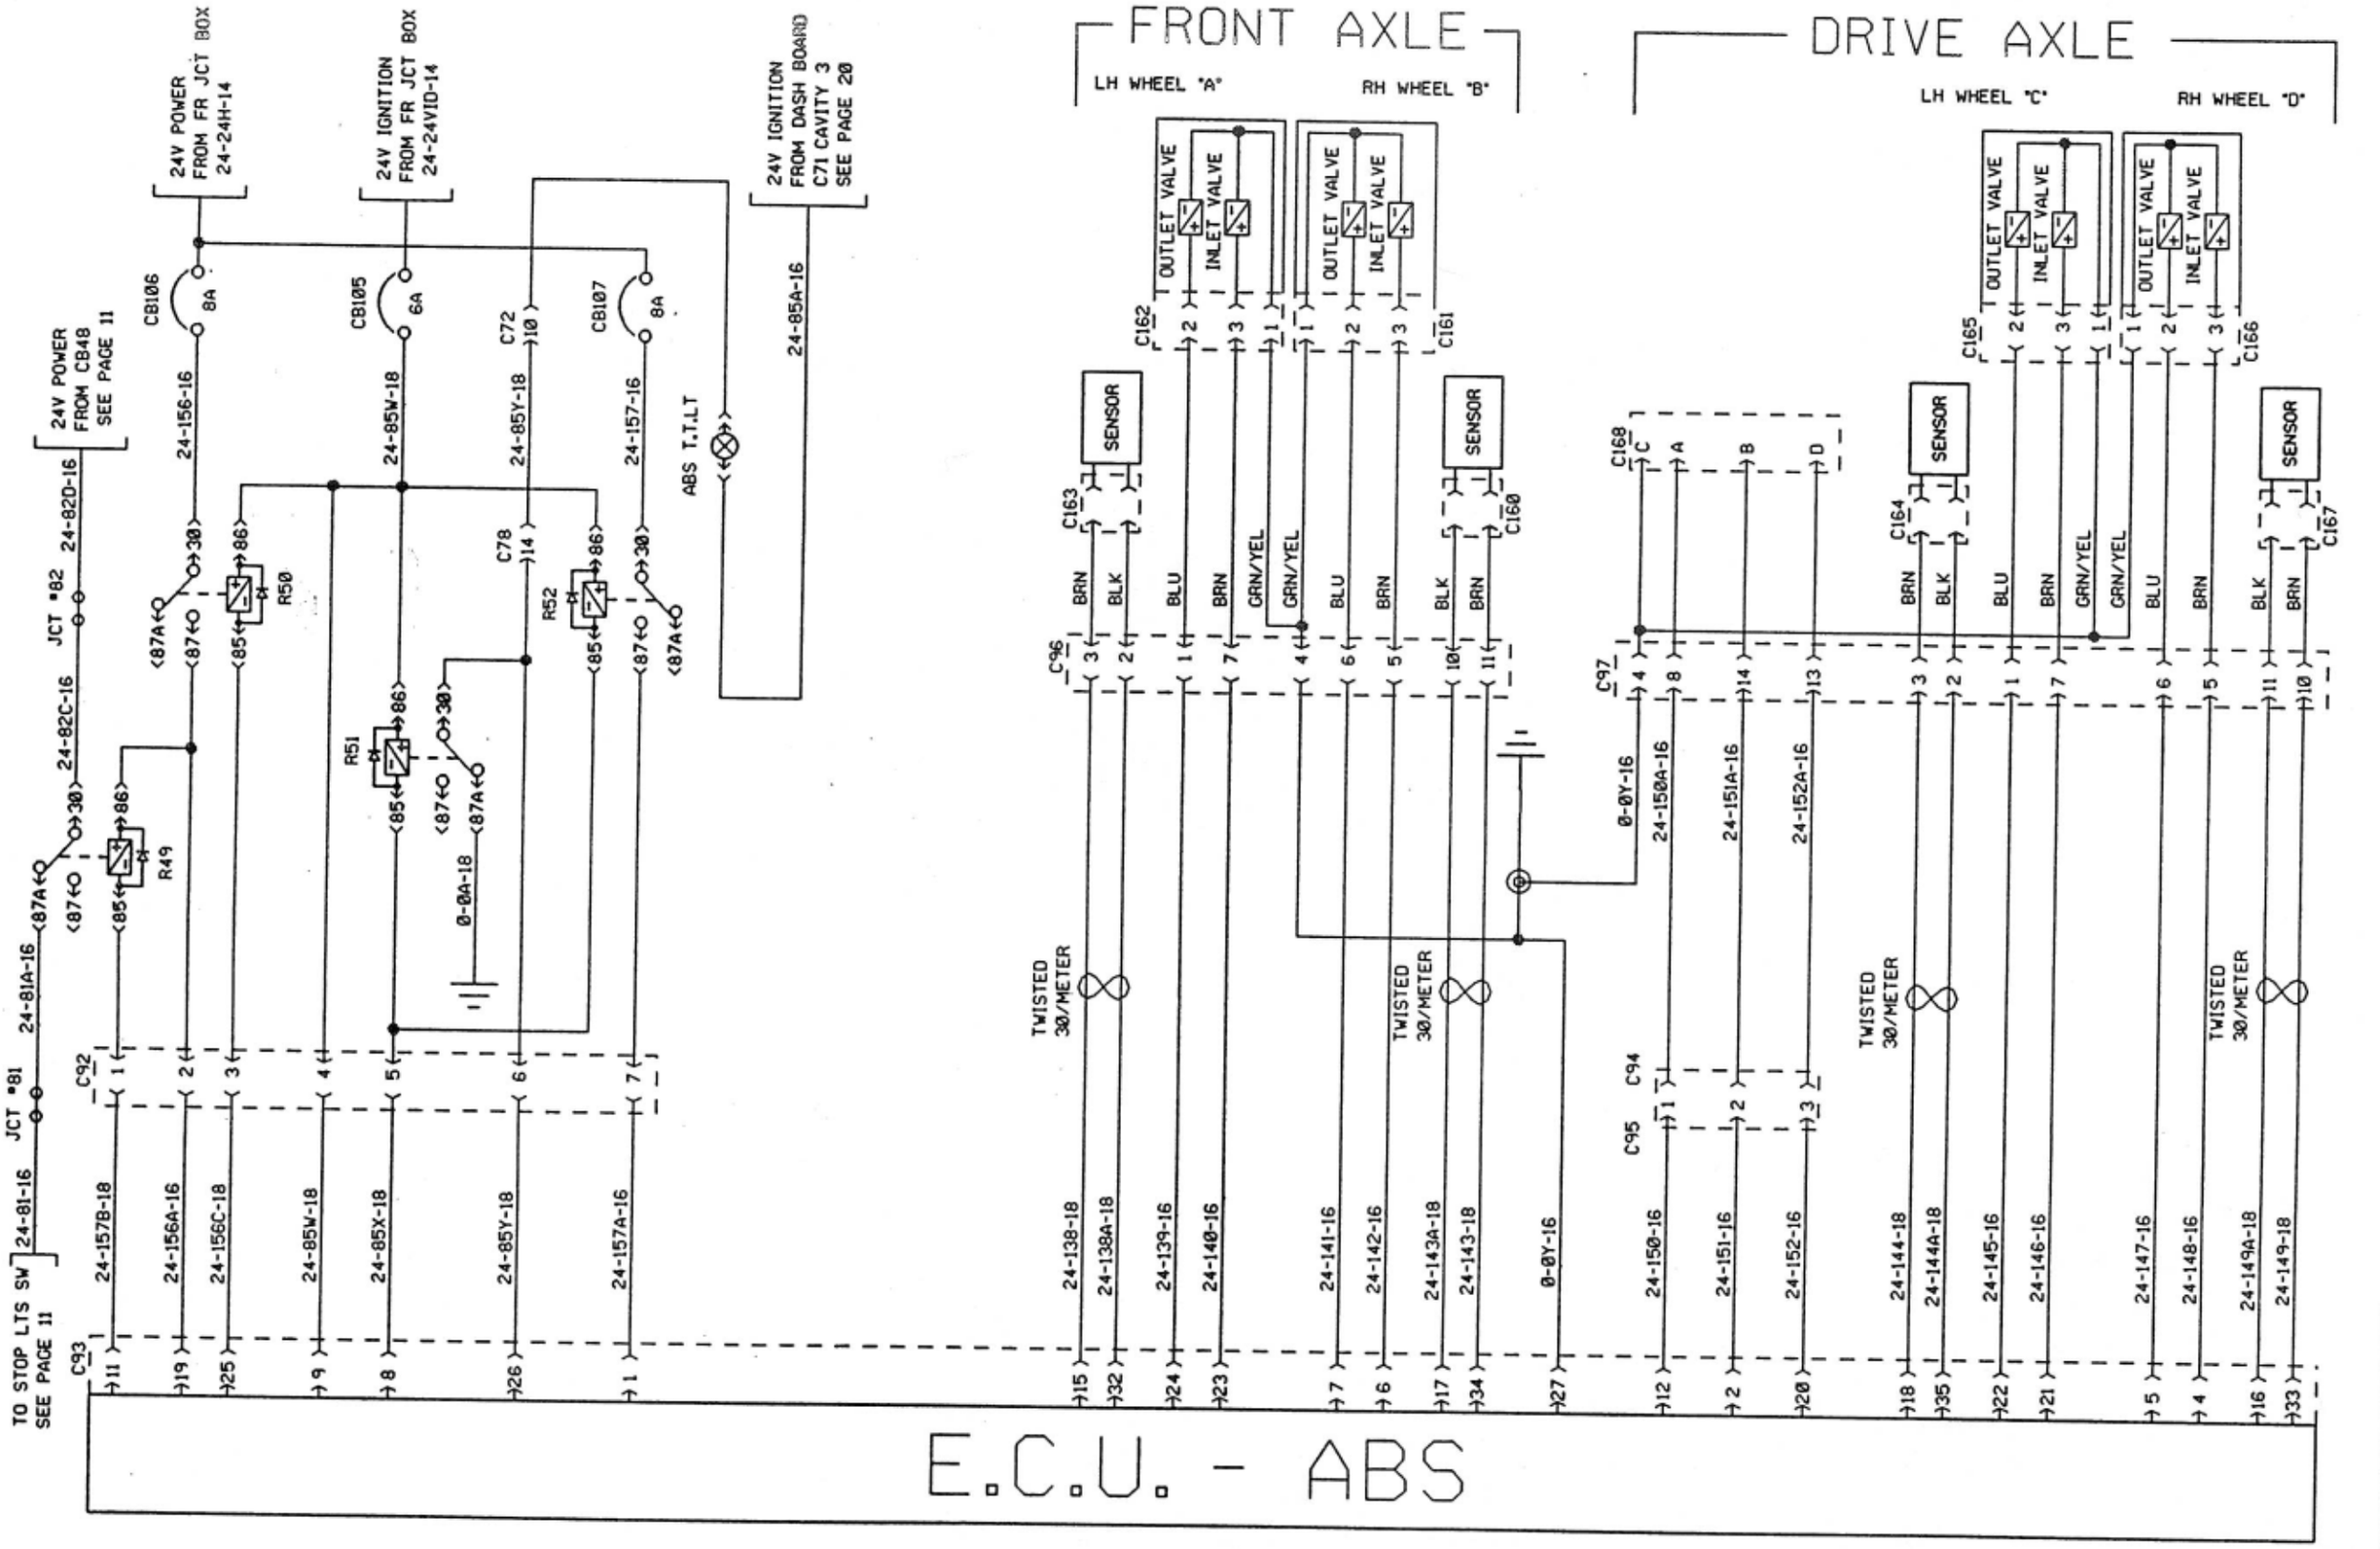

PREVOST CAR inc.	WIRING DIAGRAM	NO: D060783	REVISION DATE 92-10-30	P. 27

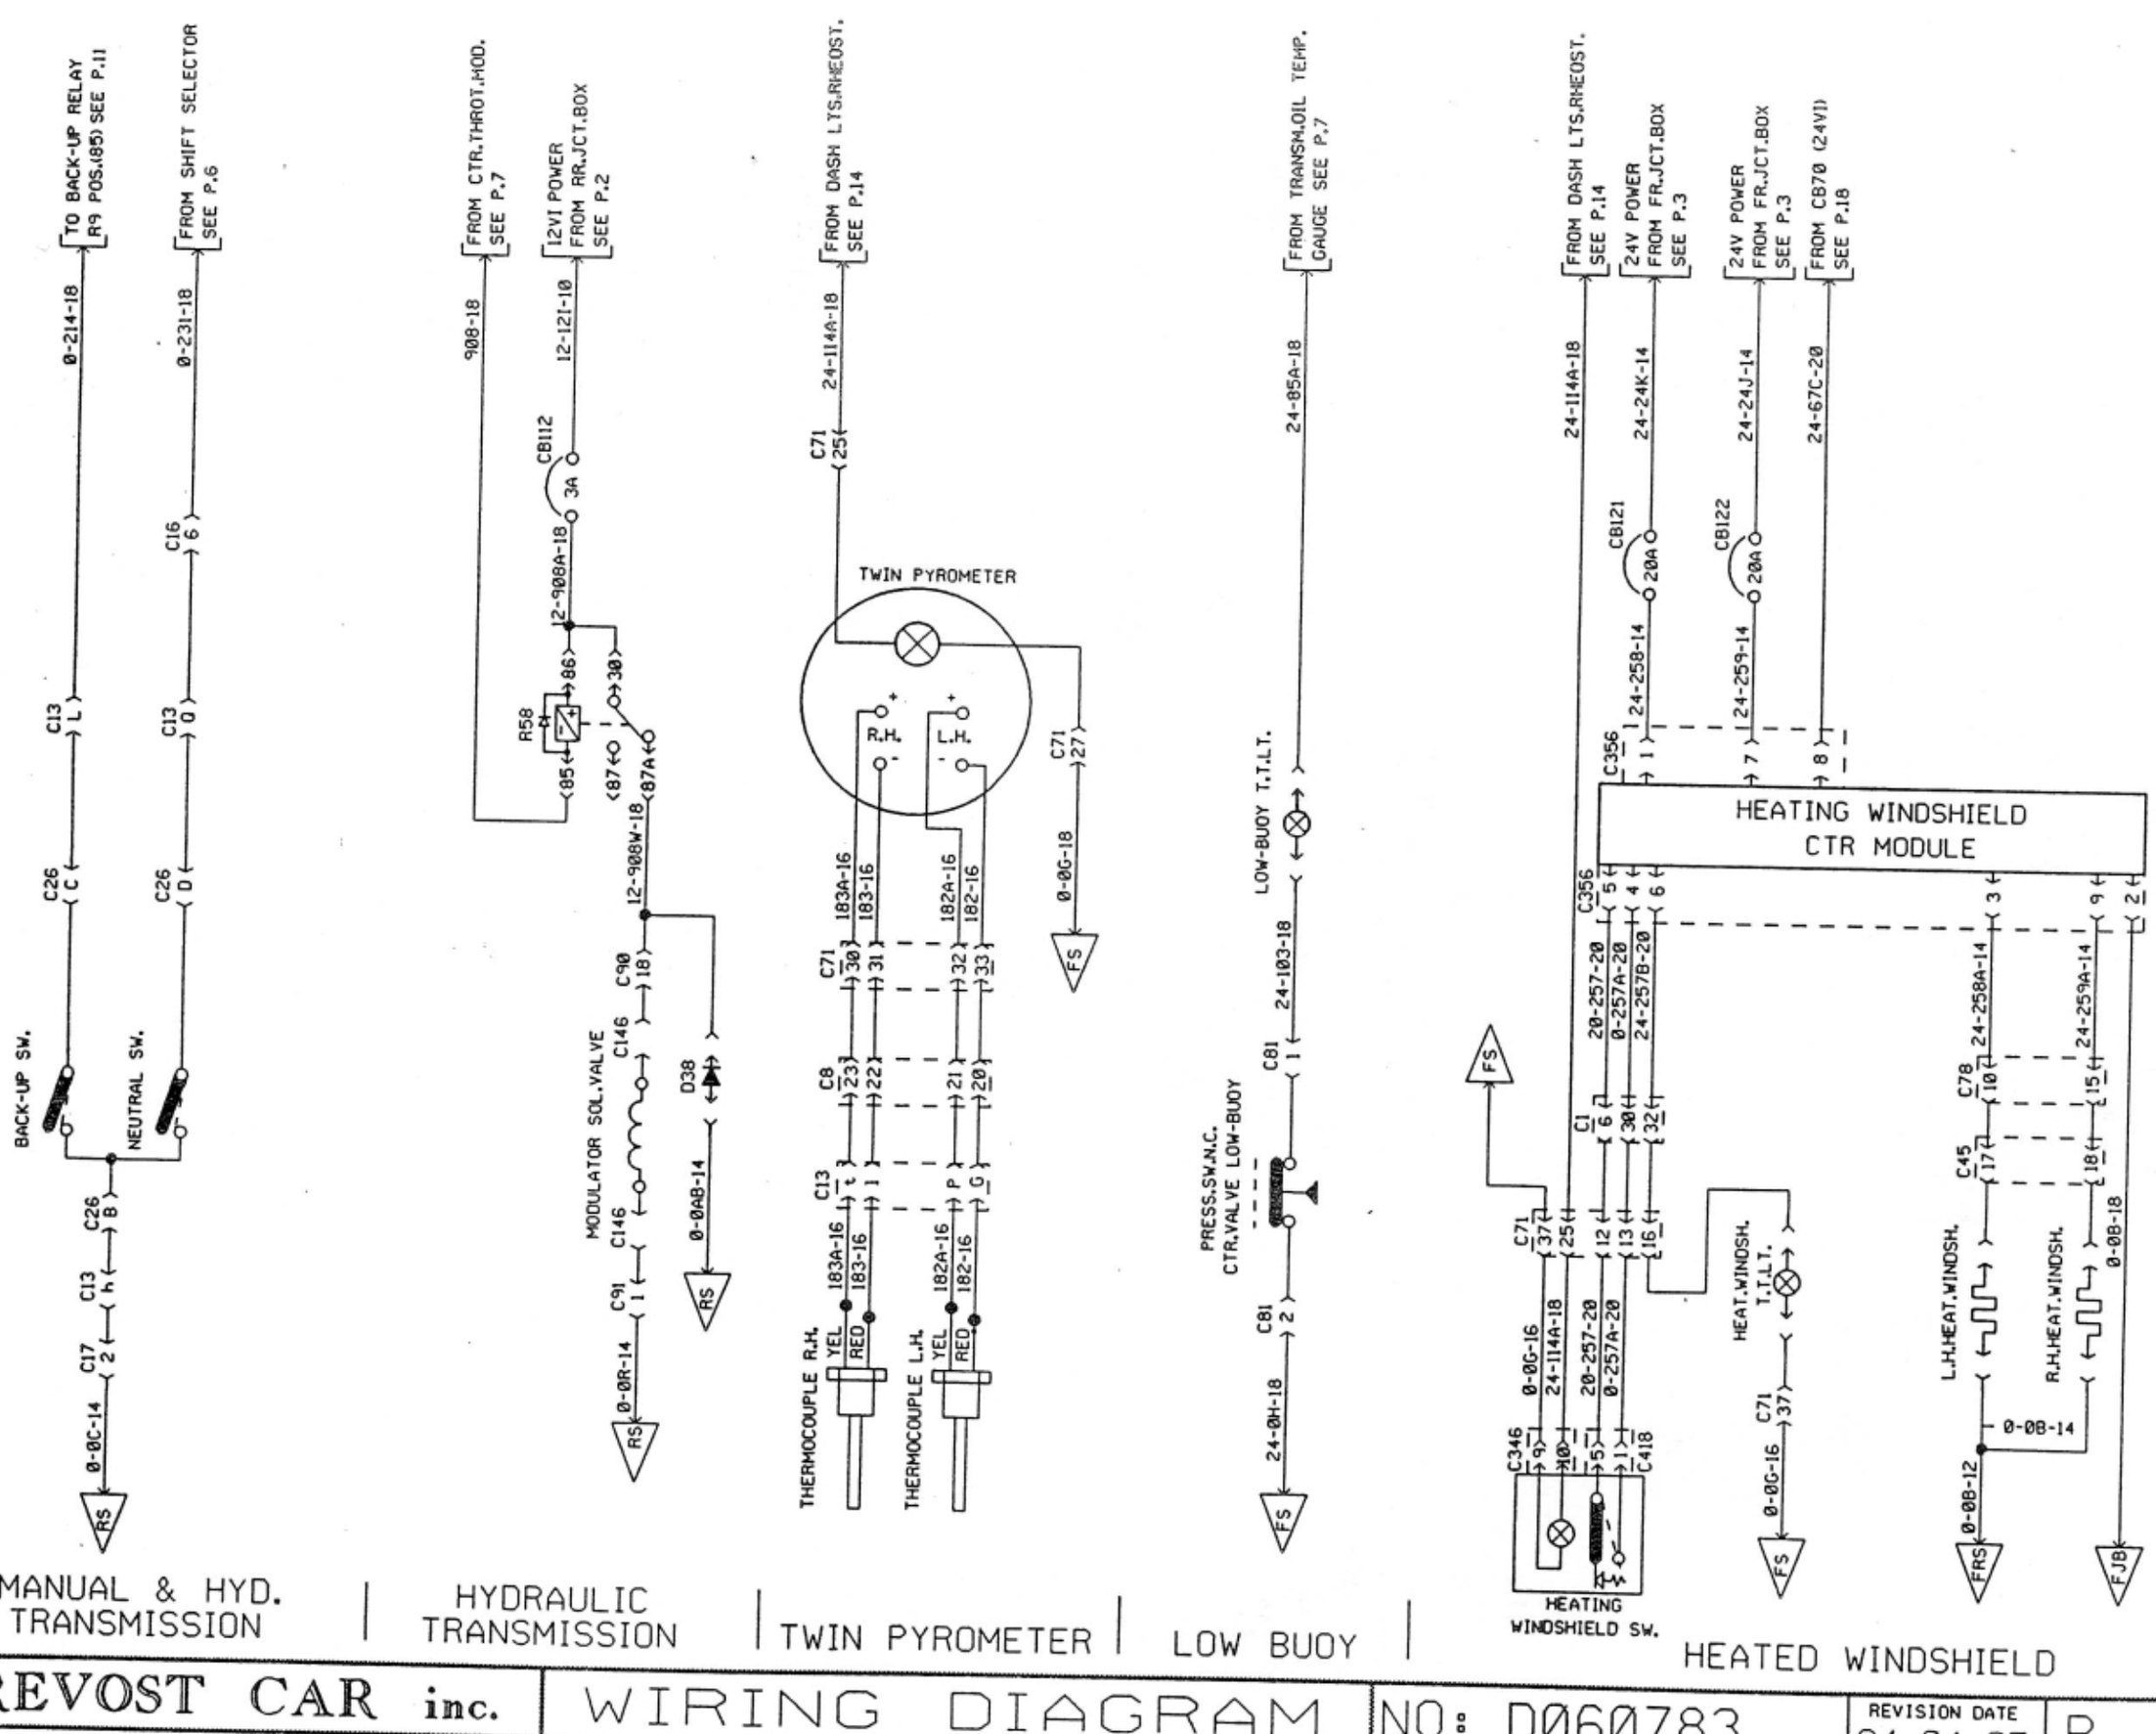

MANUAL & HYD. TRANSMISSION | HYDRAULIC TRANSMISSION | TWIN PYROMETER | LOW BUOY | HEATED WINDSHIELD

12V BATT.DISCONN.SW. SEE P.2
FROM MASTER KEY SW.(ACC.) SEE P.4
FROM DASH LTS. RHEOST. SEE P.14
12-12PV-8
24-83-18
24-114A-18

VCR SWITCH
C252 9 10 7 5 1 8 6 2 C293
FS
0-0J-18
24-114A-18
24-83-20
24-251-20
24-252-18
C298 9 7 1
C300 3
C304 2
R45
0-0-18
85 86
87 30
87A
C304 1
IC
12-250-20
INVERTER
12V
110V
0-0-8
12-12PV-8
IC
IC

P.A. & VCR AMPLIFIER
RED 1
WH 3
GRY 4
VCR IN
RCA CONNECTOR
VCR VOLUME CONTROL

ADAPTOR (TYP.2)
ADAPTOR (TYP.3)
REMOTE CTR. VCR ONLY
REMOTE CTR. TV & VCR
8 PIN-DIN M F
OR
TV ANTENNA
TV RECEIVER
ANTENNA 110V IN AUDIO VIDEO REMOTE CTR.
4 PIN-DIN M F
VCR
VIDEO IN AUDIO IN 110V IN VIDEO OUT AUDIO OUT
MONITOR #2 110V
MONITOR #1 110V
MONITOR #3 110V
C351 2 1 3 4
110-NI-18
110-LI-18
SP140-18
0-SH-18
C351 4 3 1 2
C292 2 1 3 4
C300 5 6 8 1
110-NI-18
110-LI-18
SP140-18
0-0-18
0-SH-18

VCR REAR VIEW
AUDIO IN VIDEO IN AUDIO OUT VIDEO OUT INPUT SELECT LINE TAP AUTO PLAY OFF ON AUTO REPEAT OFF ON TIMER PLAY OFF ON
LINE OFF OFF ON
SWITCH POSITION
TO AC OUTLET

VIDEO SYSTEM & TV RECEIVER

PREVOST CAR inc.	WIRING DIAGRAM	NO: D060783	REVISION DATE 92-10-30	P. 29

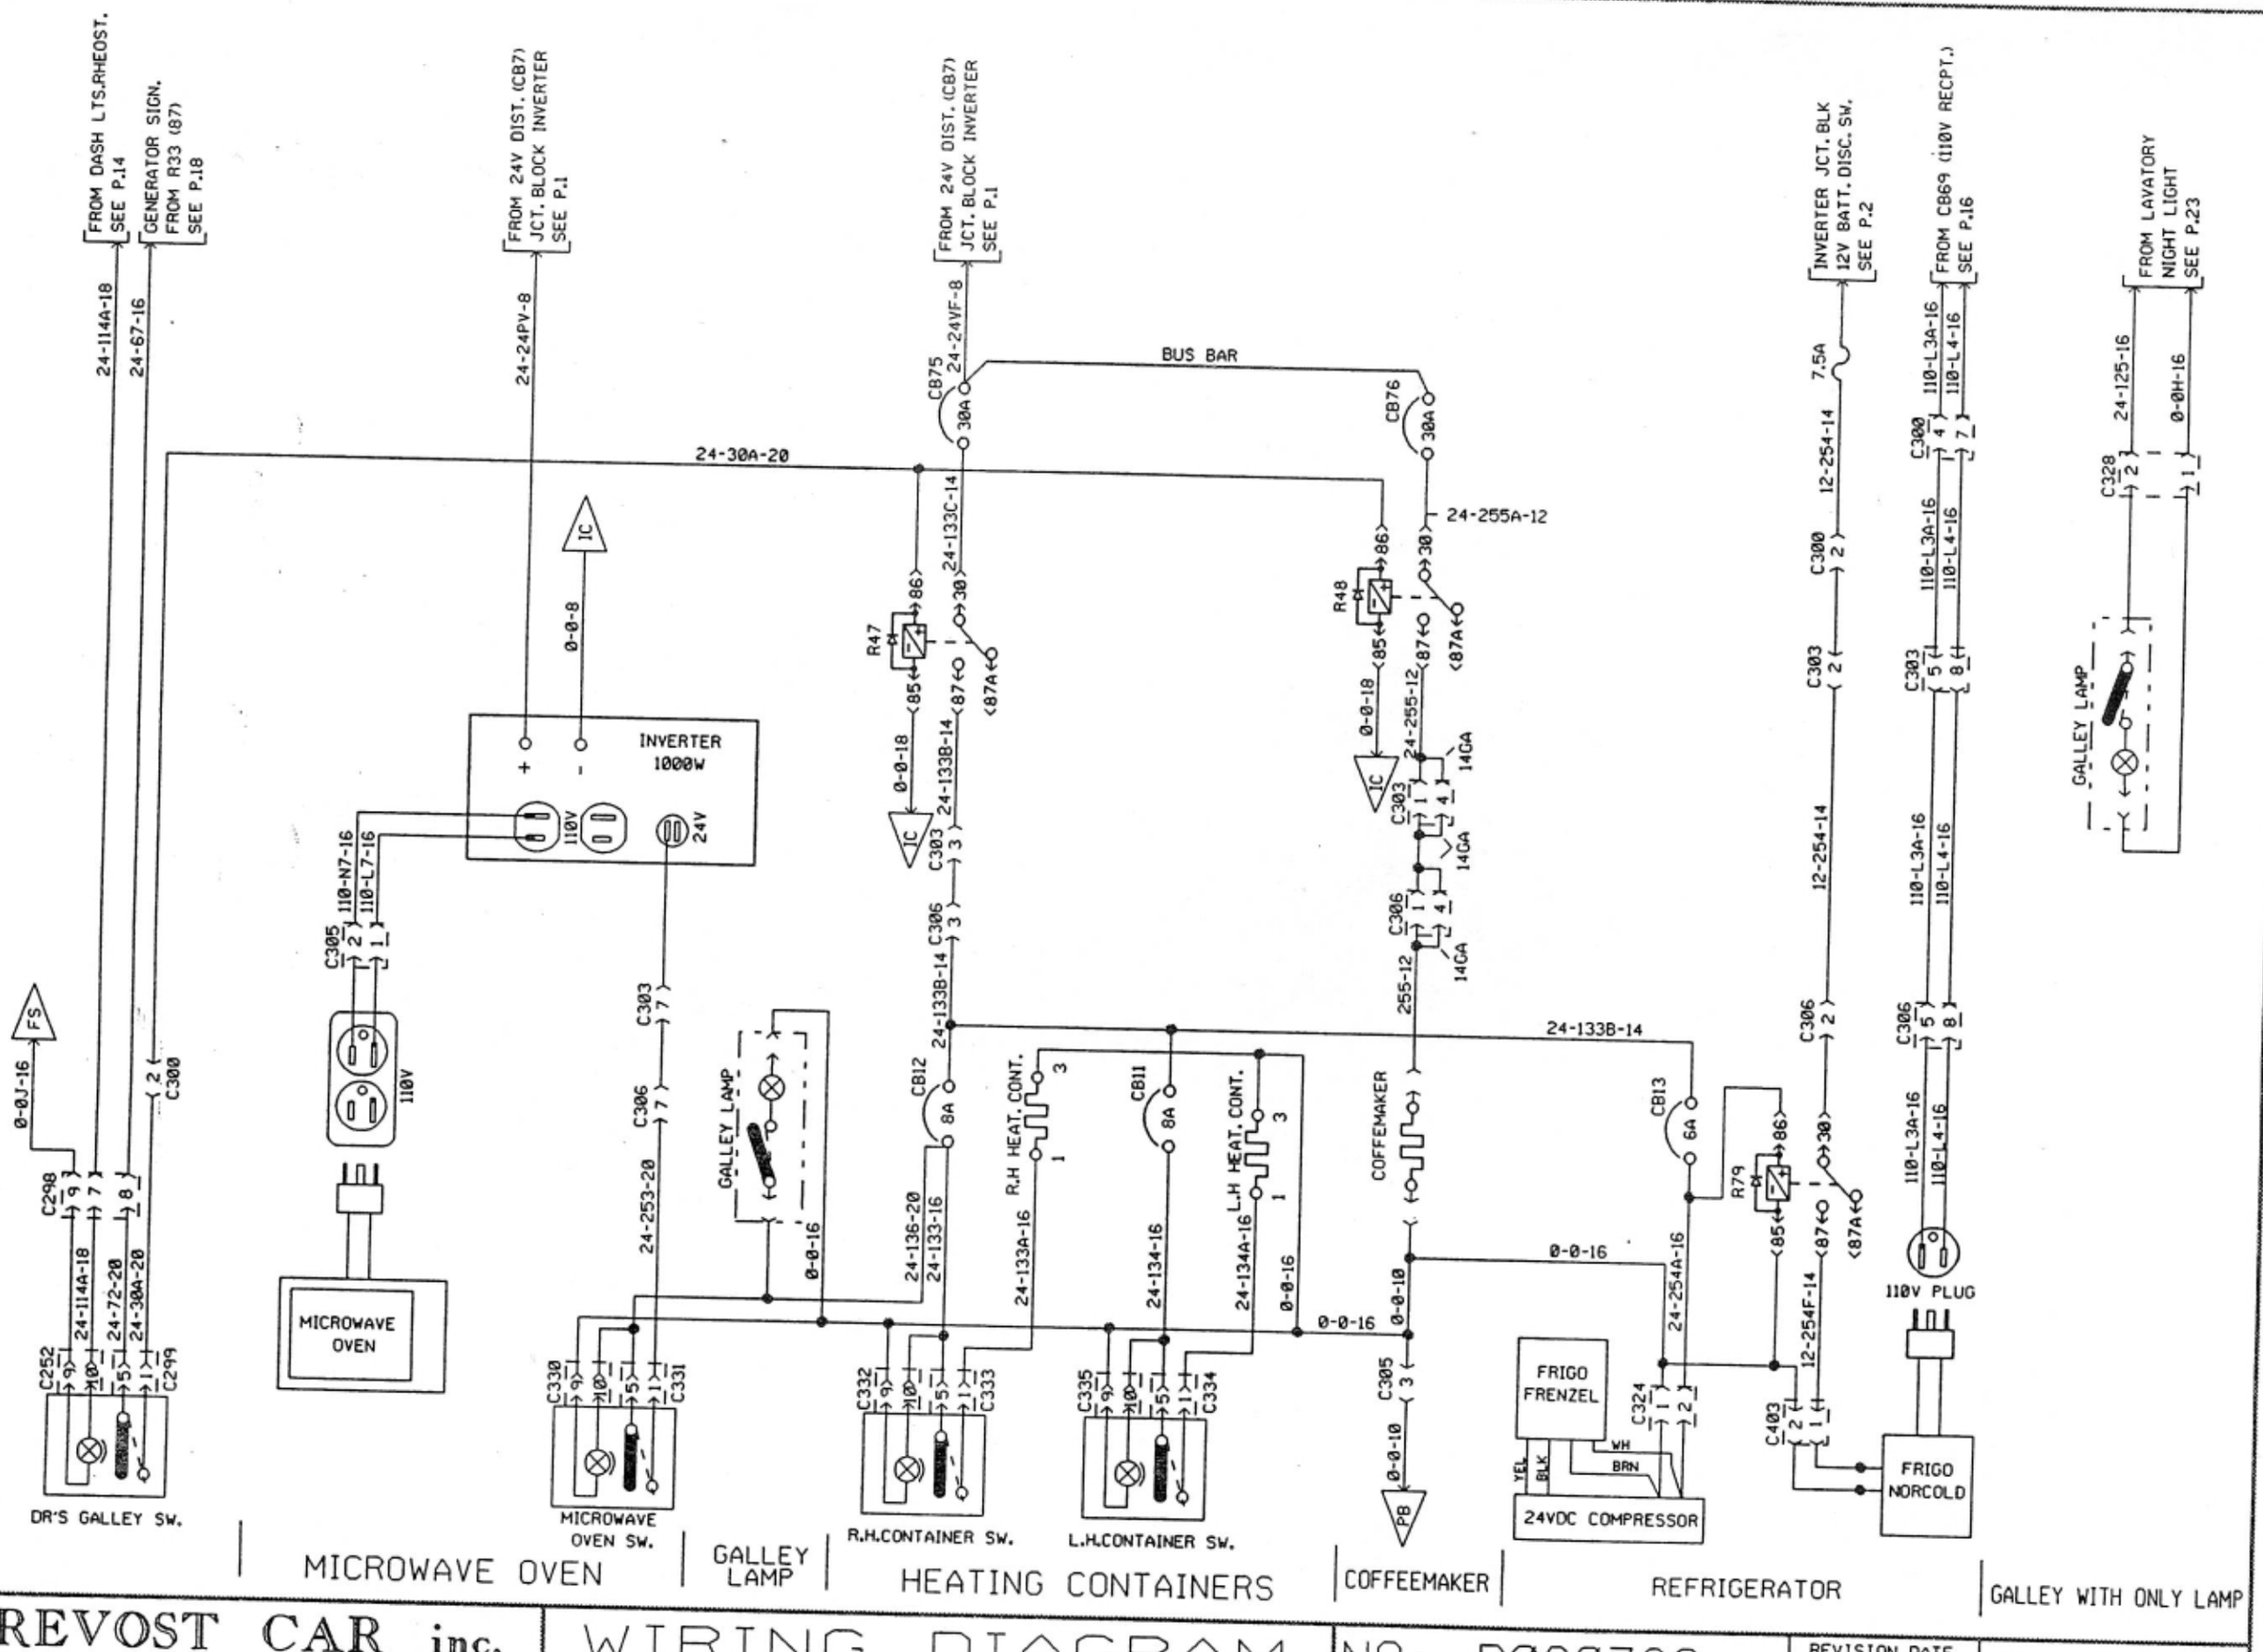

PREVOST CAR inc.	WIRING DIAGRAM	NO: D060783	REVISION DATE 94-04-25	P. 30