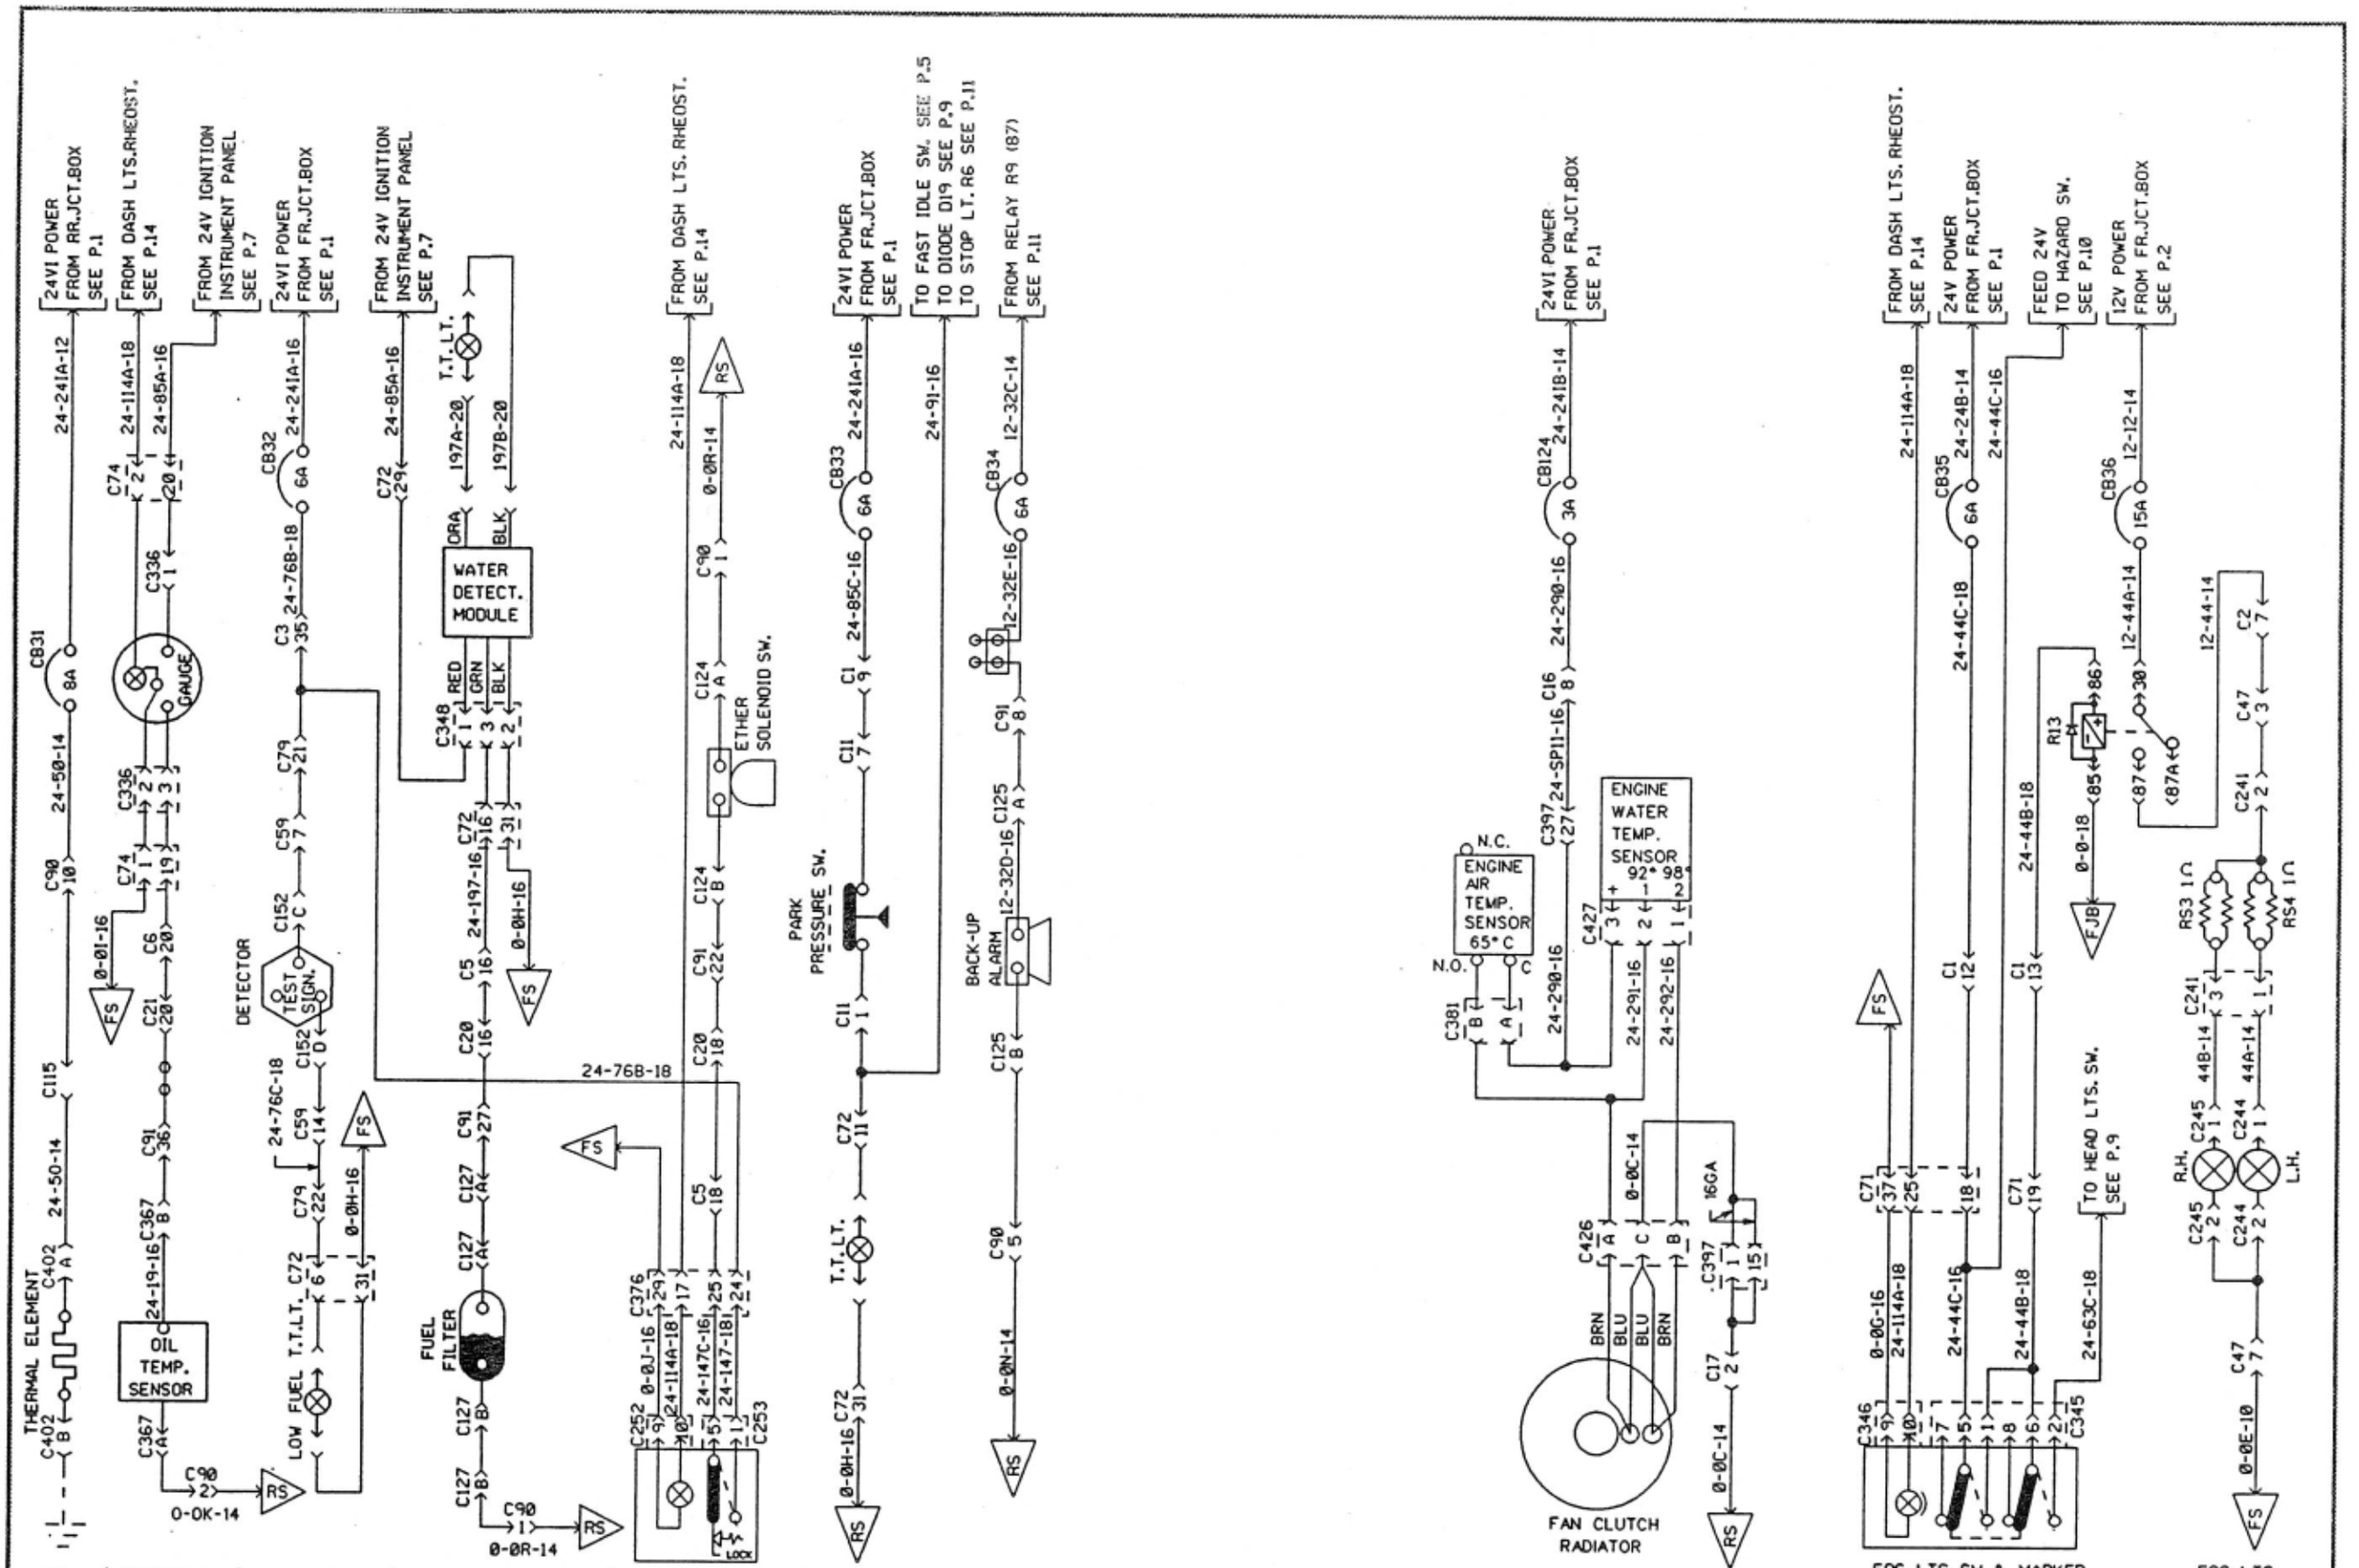
AIR DRYER
DIFFERENTIAL OIL TEMP.
LOW FUEL LIGHT
FUEL WATER FILTER
ETHER SW. ETHER COLD START
PARKING BRAKE SWITCH
BACK-UP ALARM
FAN CLUTCH
EXTERIOR LIGHTING
THERMAL ELEMENT
OIL TEMP. SENSOR
LOW FUEL T.T.LT.
FUEL FILTER
DETECTOR
TEST SIGN.
WATER DETECT. MODULE
T.T.LT.
ETHER SOLENOID SW.
PARK PRESSURE SW.
BACK-UP ALARM
N.C.
ENGINE AIR TEMP. SENSOR 65° C
N.O.
ENGINE WATER TEMP. SENSOR 92° 98°
FAN CLUTCH RADIATOR
FOG LTS. SW. & MARKER
FOG LTS
R.H.
L.H.
24VI POWER FROM RR.JCT.BOX SEE P.1
FROM DASH LTS. RHEOST. SEE P.14
FROM 24V IGNITION INSTRUMENT PANEL SEE P.7
24VI POWER FROM FR.JCT.BOX SEE P.1
TO FAST IDLE SW. SEE P.5
TO DIODE D19 SEE P.9
TO STOP LT. R6 SEE P.11
FROM RELAY R9 (87) SEE P.11
24V POWER FROM FR.JCT.BOX SEE P.1
FEED 24V TO HAZARD SW. SEE P.10
12V POWER FROM FR.JCT.BOX SEE P.2
TO HEAD LTS. SW. SEE P.9