Ground Distribution

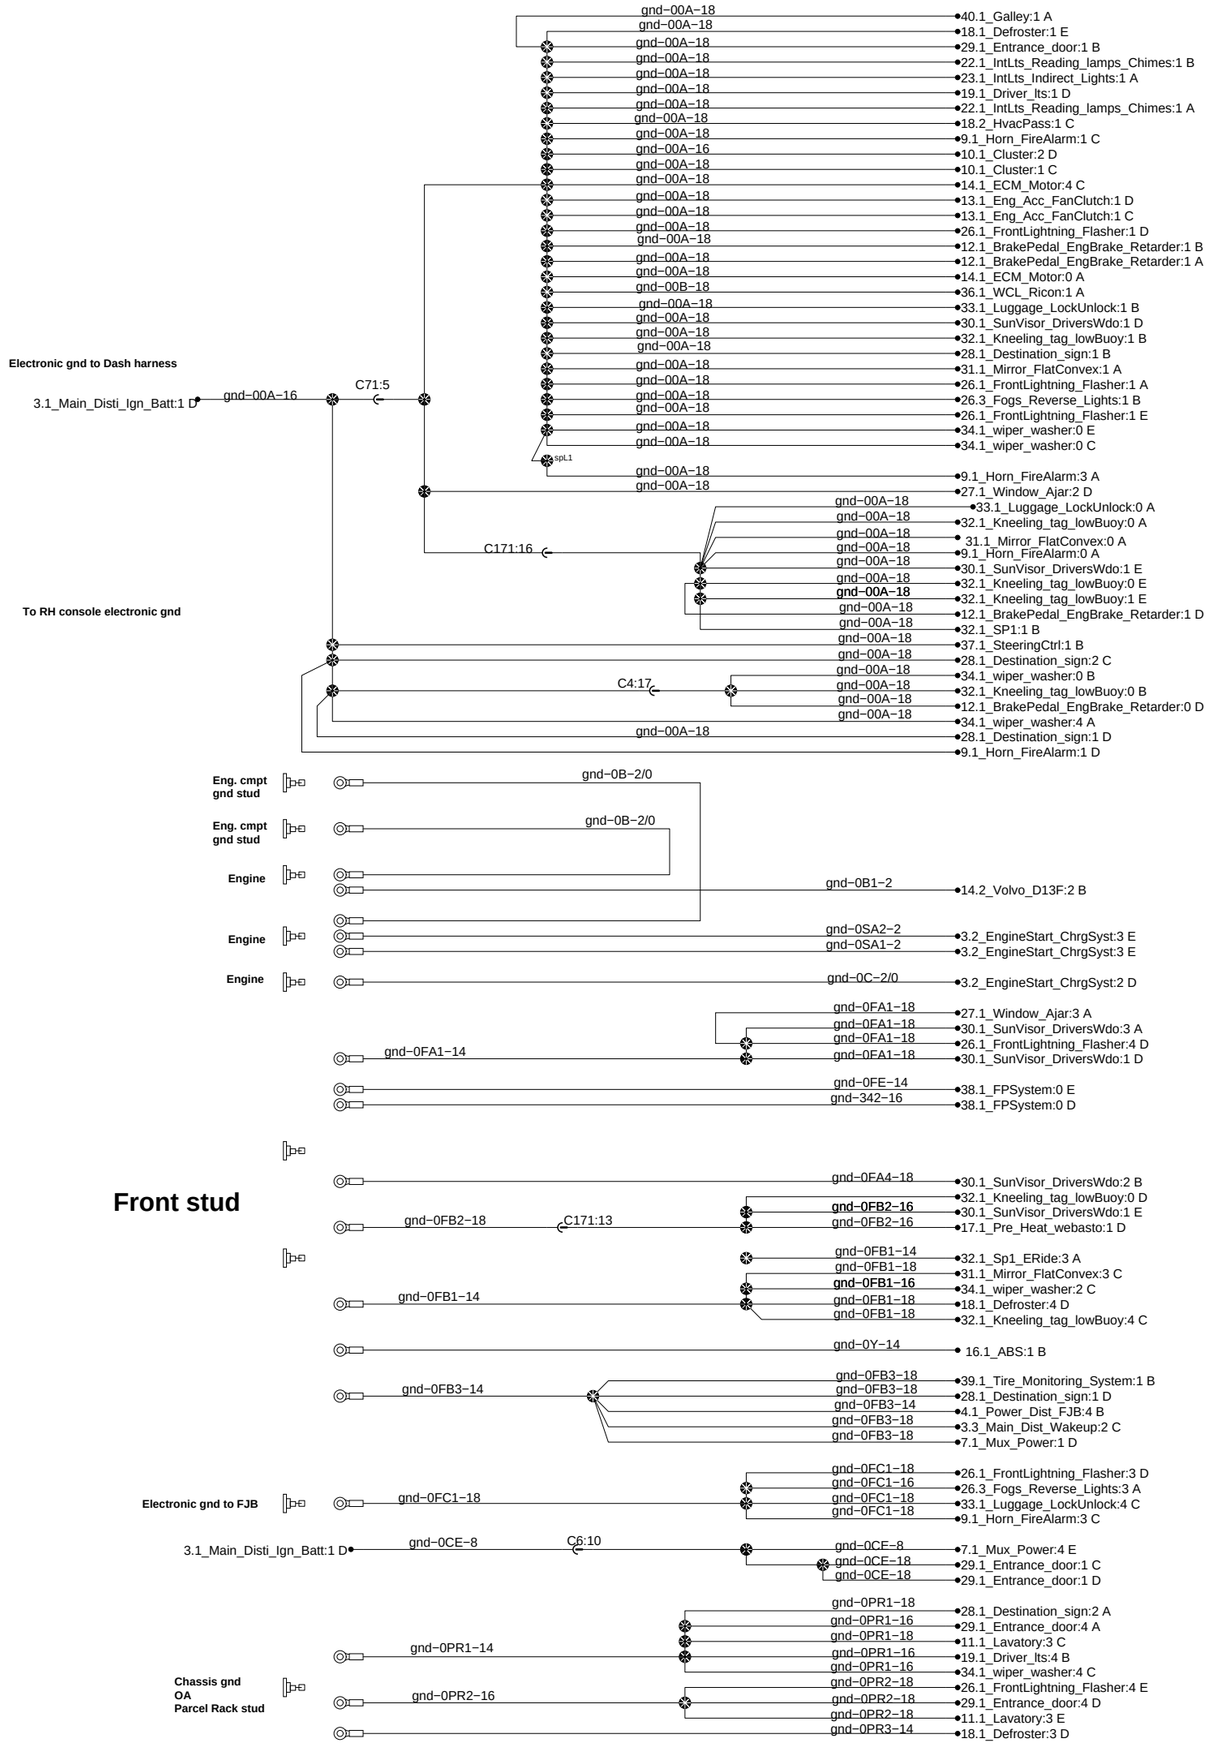

Rev:0

Page:2.1 sp2

No:D061020

WIRING DIAGRAM

PREVOST®