# MAIN DISTRIBUTION Batteries & Ignition

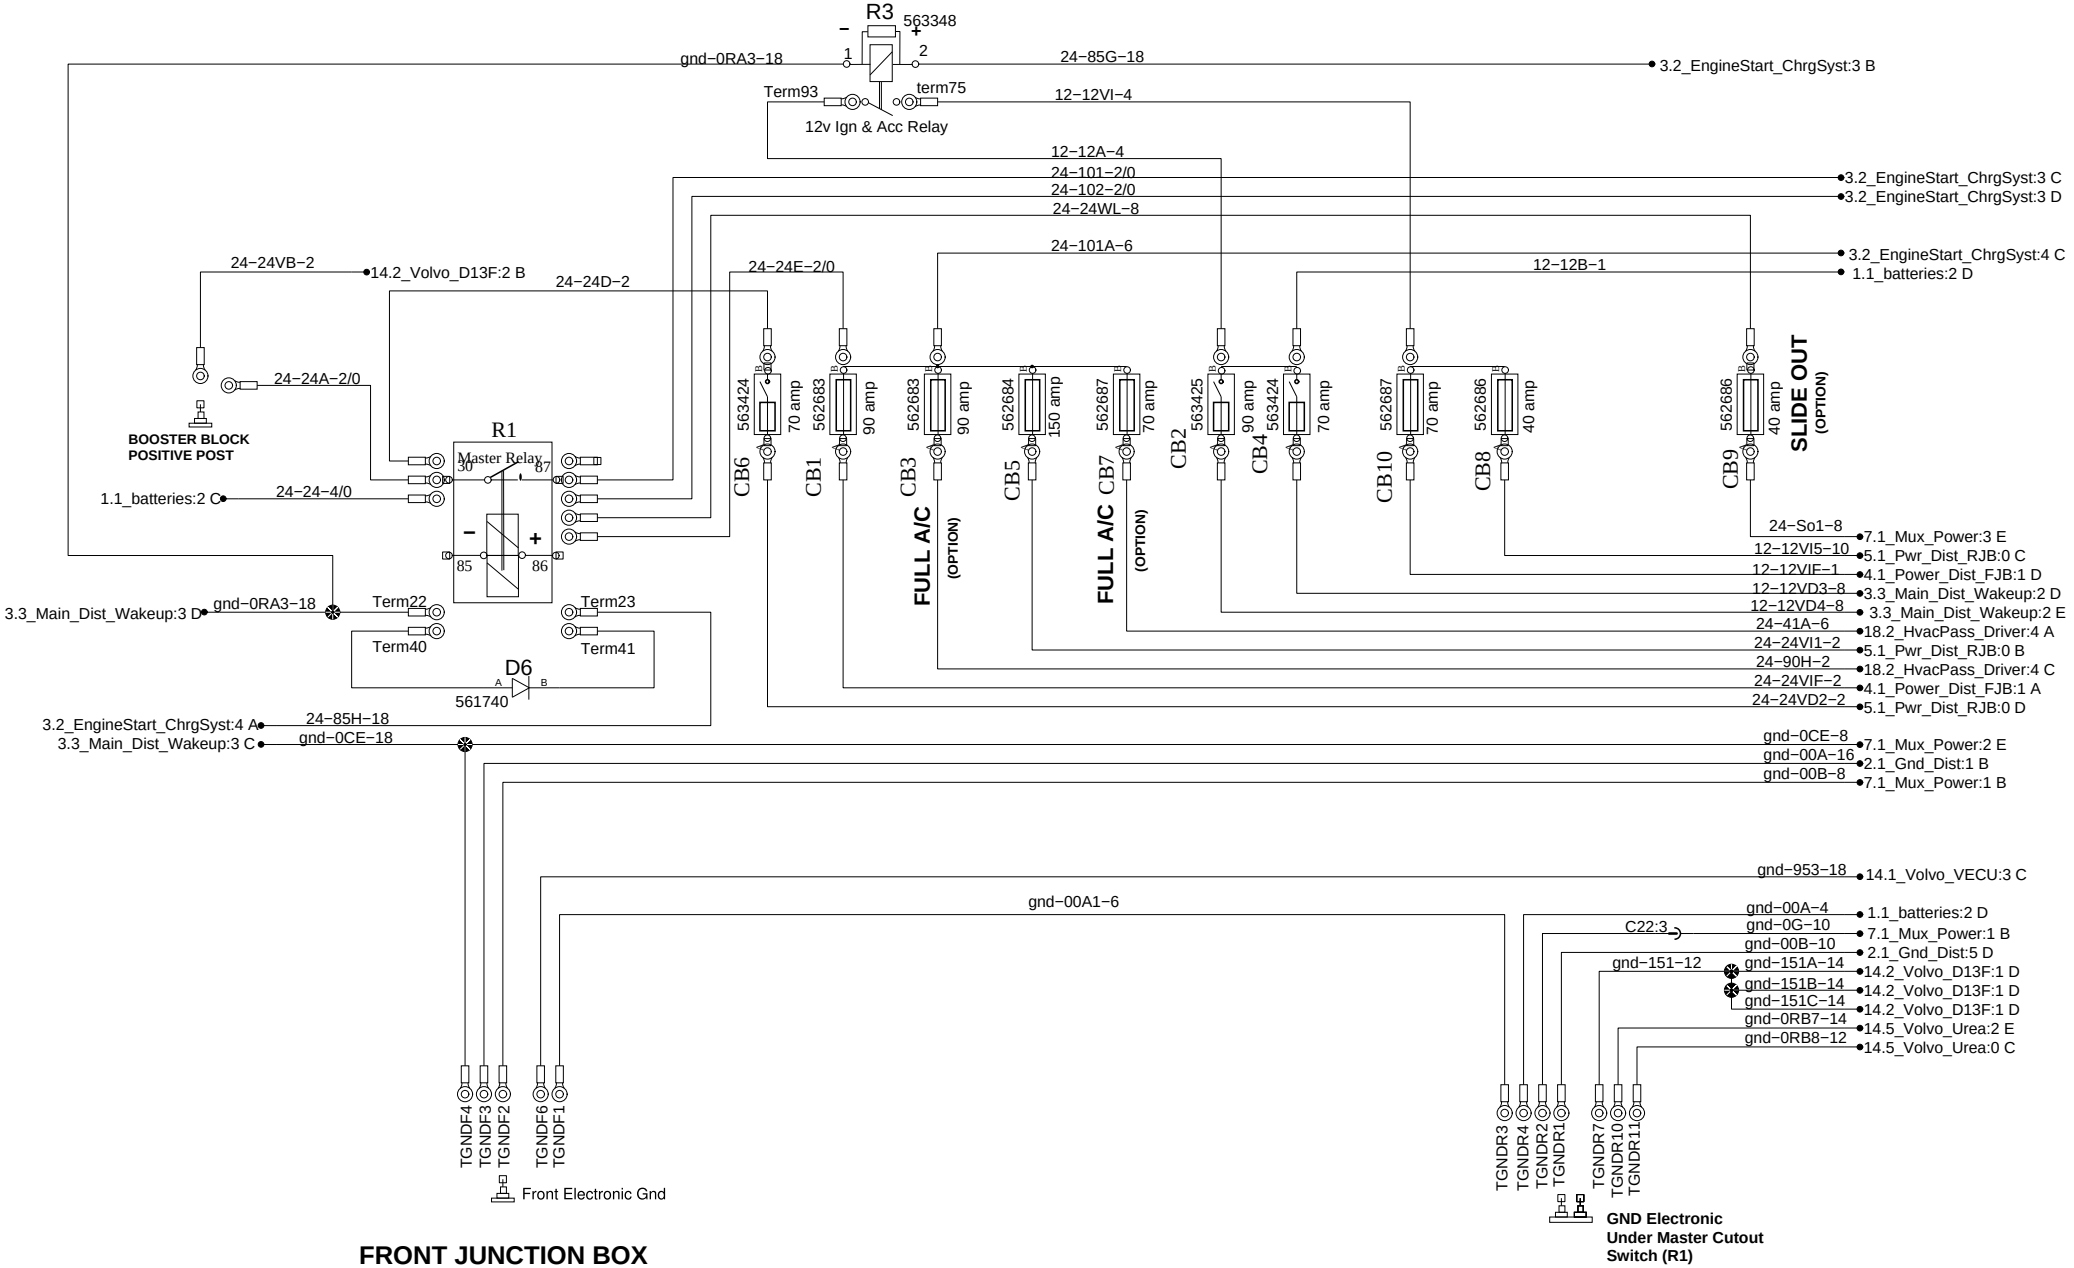


**FRONT JUNCTION BOX**

**REAR JUNCTION BOX**