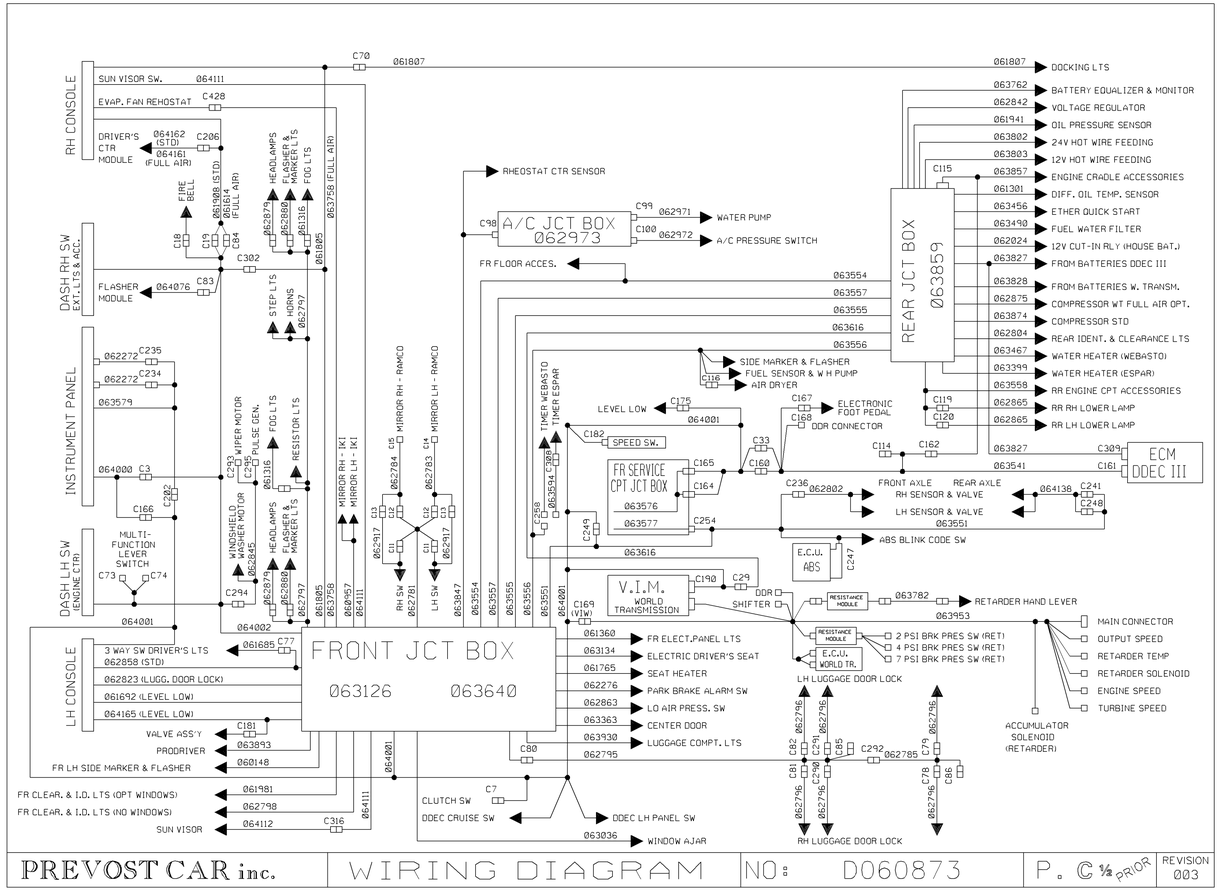
RH CONSOLE
SUN VISOR SW. 064111
EVAP. FAN REHOSTAT C428
DRIVER'S CTR MODULE 064162 (STD) 064161 (FULL AIR) C206
FIRE BELL
061908 (STD) 061614 (FULL AIR)
HEADLAMPS 062879 062880
FLASHER & MARKER LTS 061316
FOG LTS
063758 (FULL AIR)
061805
C70 061807
C18 C19 C84 C302
DASH RH SW EXT. LTS & ACC.
FLASHER MODULE 064076 C83
STEP LTS
HORNS 062797
INSTRUMENT PANEL
062272 C235
062272 C234
063579
064000 C3
C282
C166
MULTI-FUNCTION LEVER SWITCH
C73 C74
DASH LH SW (ENGINE CTR)
064001
WINDSHIELD WIPER MOTOR 062845
C233 C295
PULSE GEN.
C294
064002
LH CONSOLE
061685 C77
FRONT JCT BOX
063126 063640
3 WAY SW DRIVER'S LTS 062858 (STD)
062823 (LUGG. DOOR LOCK)
061692 (LEVEL LOW)
064165 (LEVEL LOW)
VALVE ASS'Y C181
PRODRIVER 063893
FR LH SIDE MARKER & FLASHER 060148
FR CLEAR. & I.D. LTS (OPT WINDOWS) 061981
FR CLEAR. & I.D. LTS (NO WINDOWS) 062798
SUN VISOR 064112 C316
064111
MIRROR RH - IKI
MIRROR LH - IKI
C15 062784
C14 062783
C13 C12 C11
062917
RH SW 062781
LH SW 063847
063554 063557 063555 063556
RHEOSTAT CTR SENSOR
C98 A/C JCT BOX 062973
C99 062971 WATER PUMP
C100 062972 A/C PRESSURE SWITCH
FR FLOOR ACCES.
TIMER WEBASTO C258 063594
TIMER ESPAR C257
LEVEL LOW C175 064001
SPEED SW. C182
FR SERVICE CPT JCT BOX 063576 063577
C165 C164 C254
063616
C33 C160
C167 C168
ELECTRONIC FOOT PEDAL
DDR CONNECTOR
SIDE MARKER & FLASHER
FUEL SENSOR & W H PUMP
AIR DRYER C116
REAR JCT BOX 063859
C115 C119 C120
063554 063557 063555 063556 063616 063556
063827 063541
C114 C162
C309 C161
ECM DDEC III
C236 062802
FRONT AXLE RH SENSOR & VALVE
REAR AXLE LH SENSOR & VALVE 063551
064138 C241 C248
ABS BLINK CODE SW
E.C.U. ABS C247
V.I.M. WORLD TRANSMISSION
C190 C29
DDR SHIFTER
RESISTANCE MODULE 063782
RETARDER HAND LEVER 063953
2 PSI BRK PRES SW (RET)
4 PSI BRK PRES SW (RET)
7 PSI BRK PRES SW (RET)
E.C.U. WORLD TR.
LH LUGGAGE DOOR LOCK
RH LUGGAGE DOOR LOCK
C82 C81 C231 C290 C85 C292 062785 C79 C78 C86 062796
ACCUMULATOR SOLENOID (RETARDER)
MAIN CONNECTOR
OUTPUT SPEED
RETARDER TEMP
RETARDER SOLENOID
ENGINE SPEED
TURBINE SPEED
061360 FR ELECT.PANEL LTS
063134 ELECTRIC DRIVER'S SEAT
061765 SEAT HEATER
062276 PARK BRAKE ALARM SW
062863 LO AIR PRESS. SW
063363 CENTER DOOR
063930 LUGGAGE COMPT. LTS
062795
C80 062785
C7
CLUTCH SW
DDEC CRUISE SW
DDEC LH PANEL SW
063036 WINDOW AJAR
061360 DOCKING LTS
063762 BATTERY EQUALIZER & MONITOR
062842 VOLTAGE REGULATOR
061941 OIL PRESSURE SENSOR
063802 24V HOT WIRE FEEDING
063803 12V HOT WIRE FEEDING
063857 ENGINE CRADLE ACCESSORIES
061301 DIFF. OIL TEMP. SENSOR
063456 ETHER QUICK START
063490 FUEL WATER FILTER
062024 12V CUT-IN RLY (HOUSE BAT.)
063827 FROM BATTERIES DDEC III
063828 FROM BATTERIES W. TRANSM.
062875 COMPRESSOR WT FULL AIR OPT.
063874 COMPRESSOR STD
062804 REAR IDENT. & CLEARANCE LTS
063467 WATER HEATER (WEBASTO)
063399 WATER HEATER (ESPAR)
063558 RR ENGINE CPT ACCESSORIES
062865 RR RH LOWER LAMP
062865 RR LH LOWER LAMP
063827 063541
PREVOST CAR inc.
WIRING DIAGRAM
NO: D060873
P. C ½ PRIOR
REVISION 003

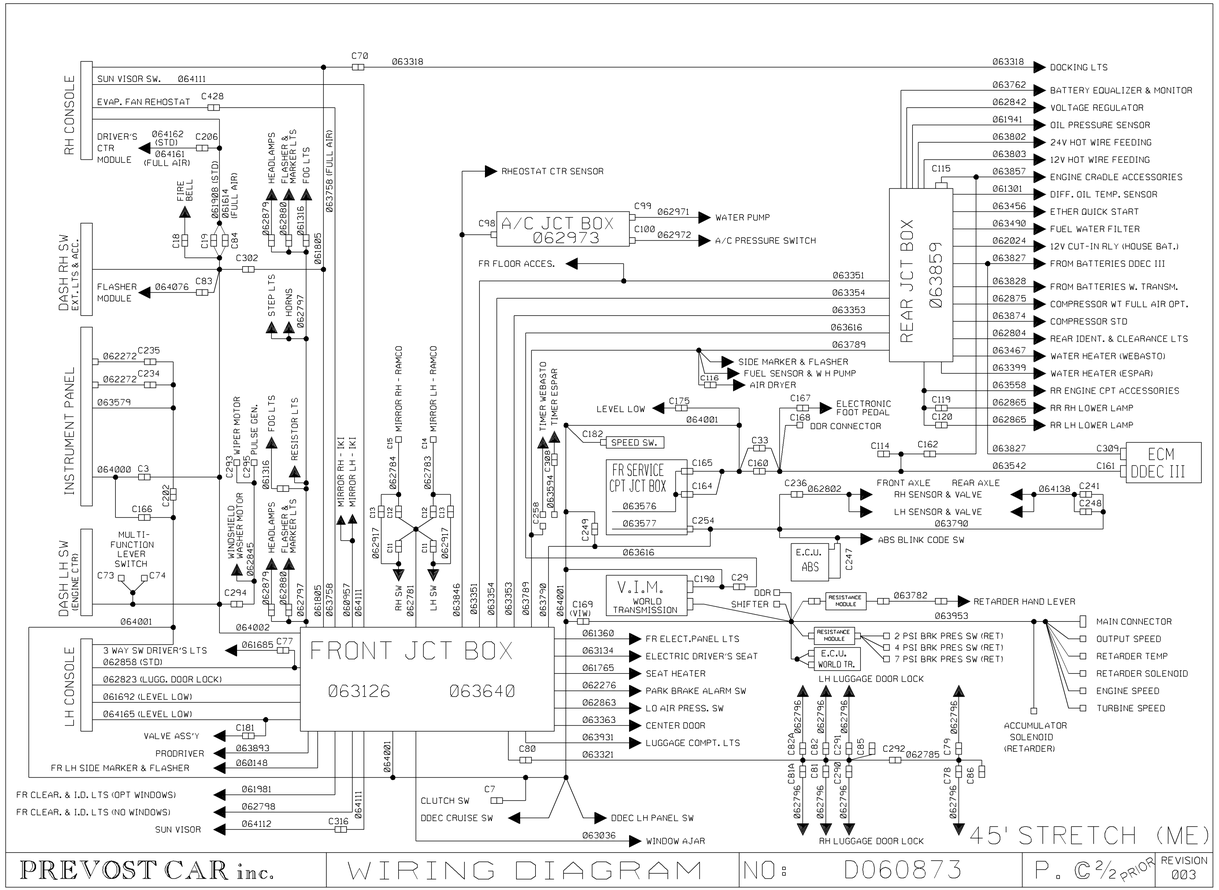
RH CONSOLE
SUN VISOR SW. 064111
EVAP. FAN REHOSTAT C428
DRIVER'S CTR MODULE 064162 (STD) 064161 (FULL AIR) C206
FIRE BELL
061908 (STD) 061614 (FULL AIR)
HEADLAMPS 062879 062880
FLASHER & MARKER LTS 061316
FOG LTS
063758 (FULL AIR)
061805
C70 063318
C18 C19 C84 C302
DASH RH SW EXT. LTS & ACC.
FLASHER MODULE 064076 C83
STEP LTS
HORNS 062797
INSTRUMENT PANEL
062272 C235
062272 C234
063579
064000 C3
C282
C166
MULTI-FUNCTION LEVER SWITCH
C73 C74
DASH LH SW (ENGINE CTR)
064001
WINDSHIELD WIPER MOTOR 062845
C233 C295
PULSE GEN.
C294
064002
LH CONSOLE
061685 C77
FRONT JCT BOX
063126 063640
3 WAY SW DRIVER'S LTS 062858 (STD)
062823 (LUGG. DOOR LOCK)
061692 (LEVEL LOW)
064165 (LEVEL LOW)
VALVE ASS'Y C181
PRODRIVER 063893
FR LH SIDE MARKER & FLASHER 060148
FR CLEAR. & I.D. LTS (OPT WINDOWS) 061981
FR CLEAR. & I.D. LTS (NO WINDOWS) 062798
SUN VISOR 064112 C316
064111
MIRROR RH - IKI
MIRROR LH - IKI
C15 062784
C14 062783
C13 C12 C11
062917
RH SW 062781
LH SW 063846
063351 063354 063353 063789 063790
RHEOSTAT CTR SENSOR
C98 A/C JCT BOX 062973
C99 062971 WATER PUMP
C100 062972 A/C PRESSURE SWITCH
FR FLOOR ACCES.
TIMER WEBASTO C258 063594
TIMER ESPAR C257
LEVEL LOW C175 064001
SPEED SW. C182
FR SERVICE CPT JCT BOX 063576 063577
C165 C164 C254
063616
C33 C160
C167 C168
ELECTRONIC FOOT PEDAL
DDR CONNECTOR
SIDE MARKER & FLASHER
FUEL SENSOR & W H PUMP
AIR DRYER C116
REAR JCT BOX 063859
C115 C119 C120
063351 063354 063353 063789 063616
063827 063542
C114 C162
C309 C161
ECM DDEC III
C236 062802
FRONT AXLE RH SENSOR & VALVE
REAR AXLE LH SENSOR & VALVE 063790
064138 C241 C248
ABS BLINK CODE SW
E.C.U. ABS C247
V.I.M. WORLD TRANSMISSION
C190 C29
DDR SHIFTER
RESISTANCE MODULE 063782
RETARDER HAND LEVER 063953
2 PSI BRK PRES SW (RET)
4 PSI BRK PRES SW (RET)
7 PSI BRK PRES SW (RET)
E.C.U. WORLD TR.
LH LUGGAGE DOOR LOCK
RH LUGGAGE DOOR LOCK
C82A C81A C81 C82 C231 C290 C85 C292 062785 C79 C78 C86 062796
ACCUMULATOR SOLENOID (RETARDER)
MAIN CONNECTOR
OUTPUT SPEED
RETARDER TEMP
RETARDER SOLENOID
ENGINE SPEED
TURBINE SPEED
061360 FR ELECT.PANEL LTS
063134 ELECTRIC DRIVER'S SEAT
061765 SEAT HEATER
062276 PARK BRAKE ALARM SW
062863 LO AIR PRESS. SW
063363 CENTER DOOR
063931 LUGGAGE COMPT. LTS
063321
C80 062785
C7
CLUTCH SW
DDEC CRUISE SW
DDEC LH PANEL SW
063036 WINDOW AJAR
063318 DOCKING LTS
063762 BATTERY EQUALIZER & MONITOR
062842 VOLTAGE REGULATOR
061941 OIL PRESSURE SENSOR
063802 24V HOT WIRE FEEDING
063803 12V HOT WIRE FEEDING
063857 ENGINE CRADLE ACCESSORIES
061301 DIFF. OIL TEMP. SENSOR
063456 ETHER QUICK START
063490 FUEL WATER FILTER
062024 12V CUT-IN RLY (HOUSE BAT.)
063827 FROM BATTERIES DDEC III
063828 FROM BATTERIES W. TRANSM.
062875 COMPRESSOR WT FULL AIR OPT.
063874 COMPRESSOR STD
062804 REAR IDENT. & CLEARANCE LTS
063467 WATER HEATER (WEBASTO)
063399 WATER HEATER (ESPAR)
063558 RR ENGINE CPT ACCESSORIES
062865 RR RH LOWER LAMP
062865 RR LH LOWER LAMP
063827 063542
45' STRETCH (ME)
PREVOST CAR inc.
WIRING DIAGRAM
NO: D060873
P. C 2/2 PRIOR
REVISION 003