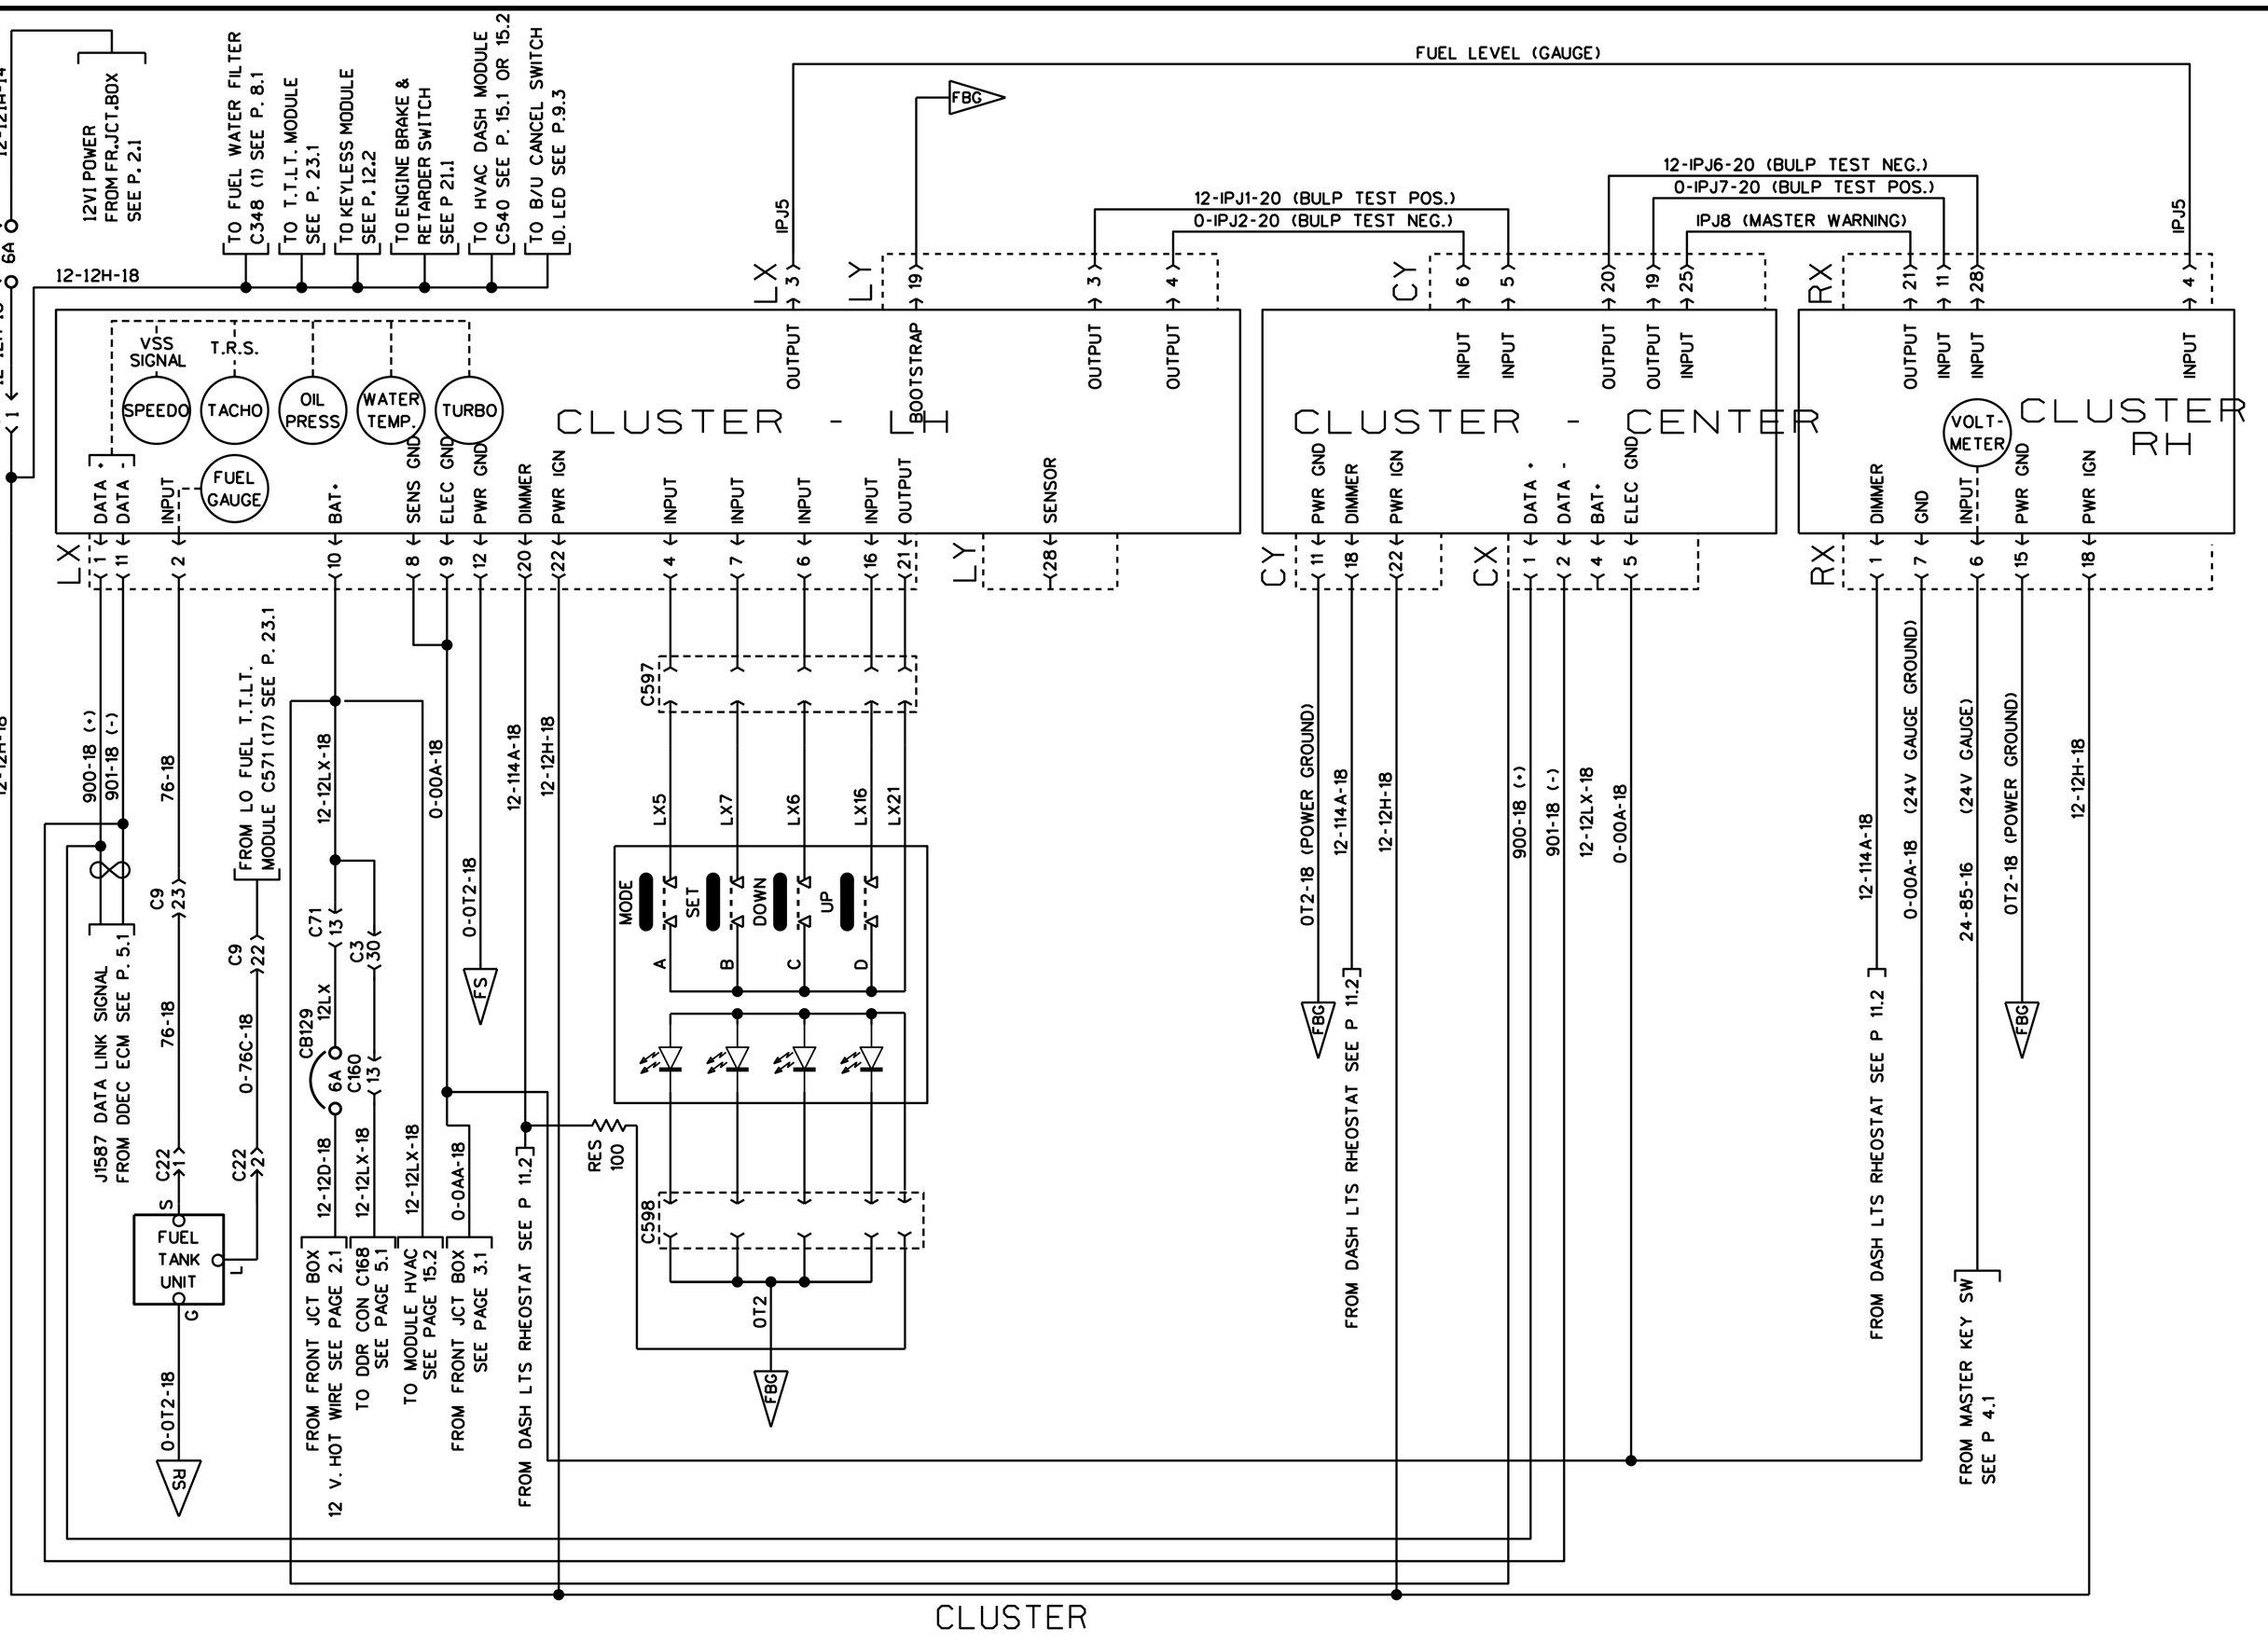
FUEL LEVEL (GAUGE)
12-IPJ6-20 (BULP TEST NEG.)
0-IPJ7-20 (BULP TEST POS.)
IPJ8 (MASTER WARNING)
12-IPJ1-20 (BULP TEST POS.)
0-IPJ2-20 (BULP TEST NEG.)
IPJ5
FBG
12-121A-14
CB28
6A
12VI POWER FROM FR.JCT.BOX SEE P. 2.1
TO FUEL WATER FILTER C348 (1) SEE P. 8.1
TO T.T.L.T. MODULE SEE P. 23.1
TO KEYLESS MODULE SEE P. 12.2
TO ENGINE BRAKE & RETARDER SWITCH SEE P 21.1
TO HVAC DASH MODULE C540 SEE P. 15.1 OR 15.2
TO B/U CANCEL SWITCH ID. LED SEE P.9.3
12-12H-18
C74
VSS SIGNAL
T.R.S.
SPEEDO
TACHO
OIL PRESS
WATER TEMP.
TURBO
FUEL GAUGE
CLUSTER - LH
CLUSTER - CENTER
CLUSTER RH
VOLT-METER
LX
LY
CY
CX
RX
DATA +
DATA -
INPUT
BAT+
SENS GND
ELEC GND
PWR GND
DIMMER
PWR IGN
OUTPUT
BOOTSTRAP
SENSOR
GND
C597
C598
LX5
LX7
LX6
LX16
LX21
MODE
SET
DOWN
UP
A
B
C
D
RES 100
0T2
FS
RS
900-18 (+)
901-18 (-)
76-18
0-00A-18
12-114A-18
12-12H-18
12-12LX-18
0-0T2-18
0-0AA-18
0-76C-18
12-12D-18
C9
C22
C71
C3
C160
CB129
12LX
FUEL TANK UNIT
J1587 DATA LINK SIGNAL FROM DDEC ECM SEE P. 5.1
FROM LO FUEL T.T.L.T. MODULE C571 (17) SEE P. 23.1
FROM FRONT JCT BOX 12 V. HOT WIRE SEE PAGE 2.1
TO DDR CON C168 SEE PAGE 5.1
TO MODULE HVAC SEE PAGE 15.2
FROM FRONT JCT BOX SEE PAGE 3.1
FROM DASH LTS RHEOSTAT SEE P 11.2
FROM MASTER KEY SW SEE P 4.1
24-85-16
(POWER GROUND)
(24V GAUGE GROUND)
(24V GAUGE)

CLUSTER