Ground Distribution

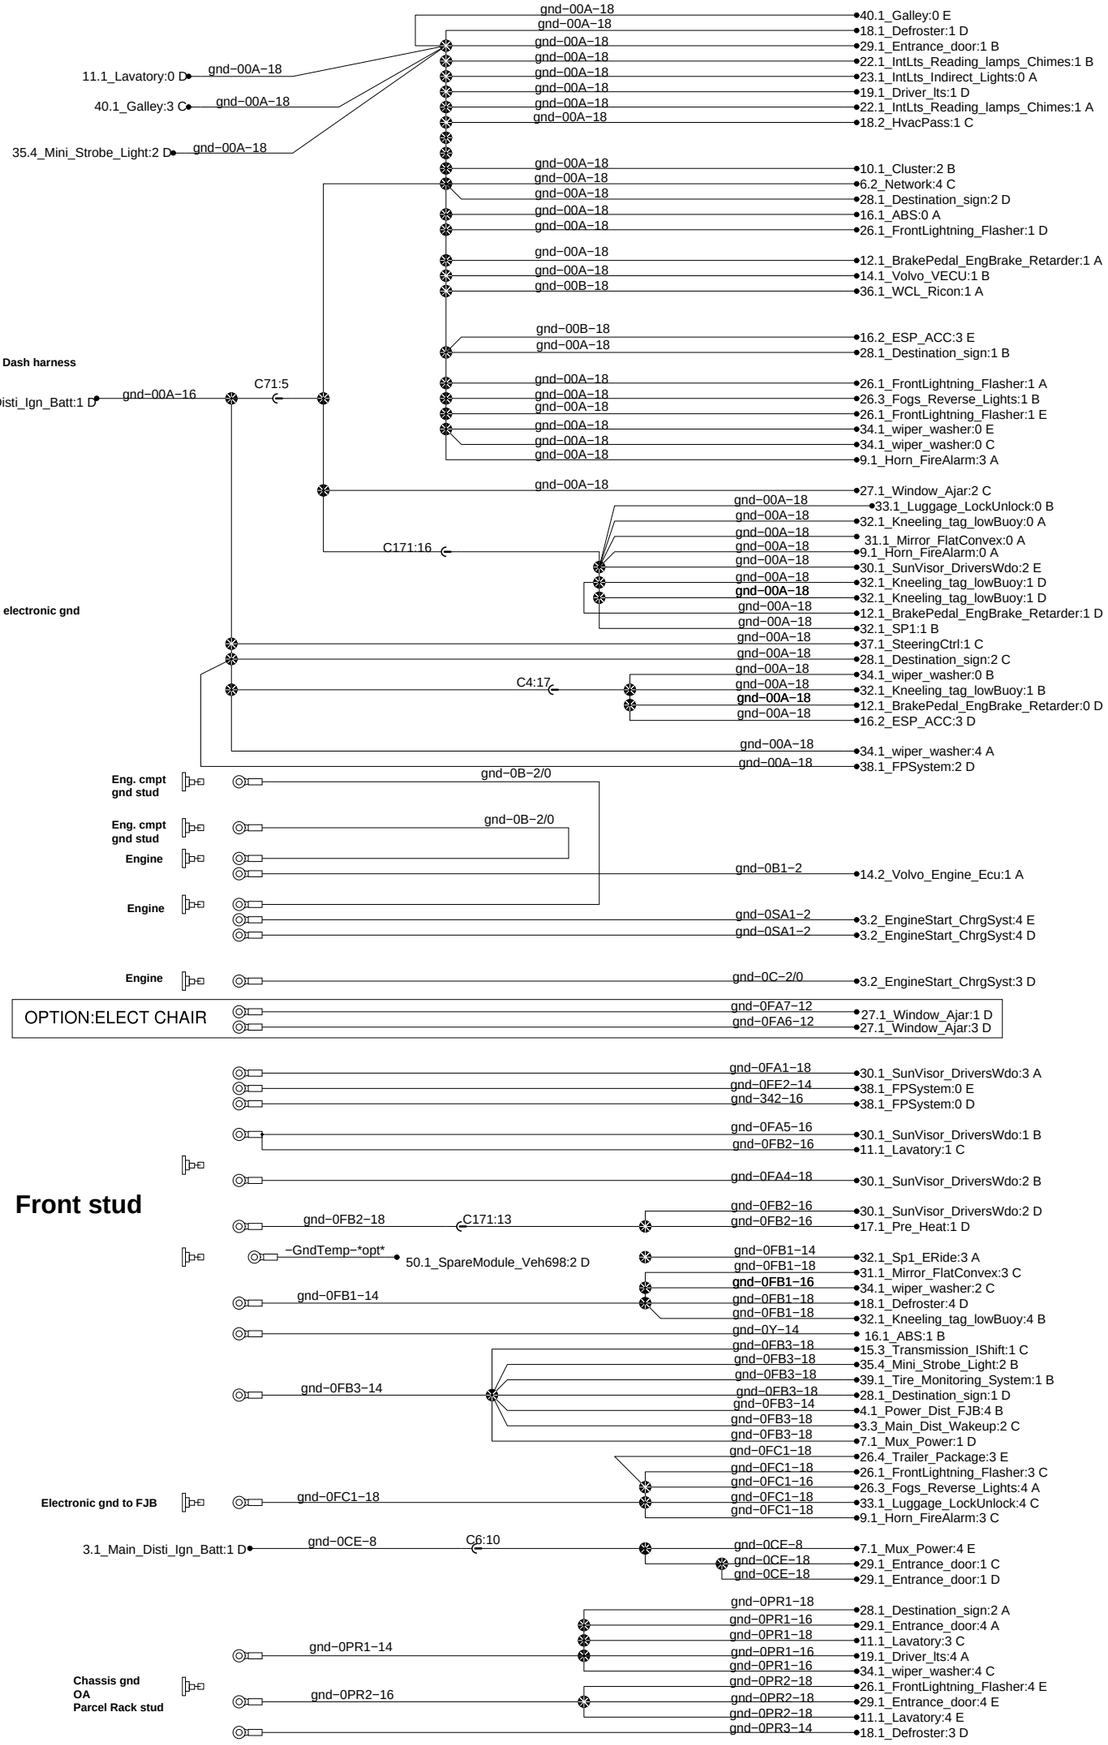

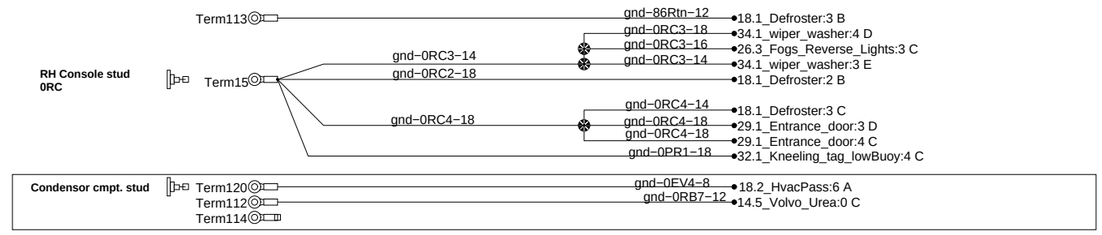

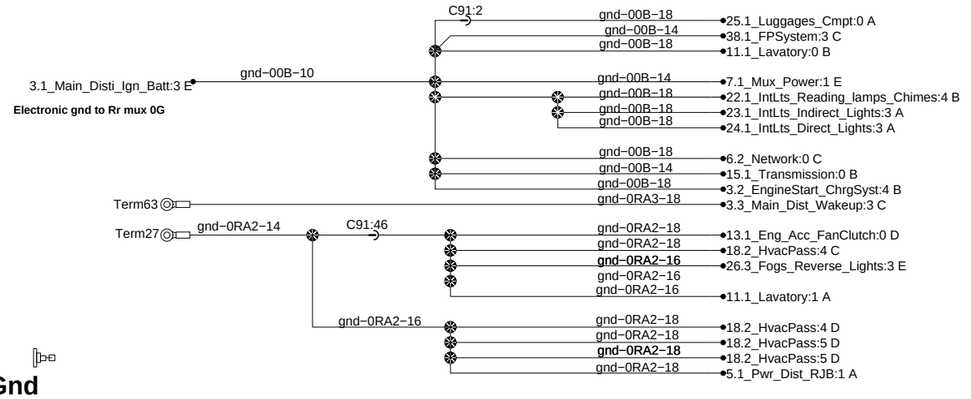

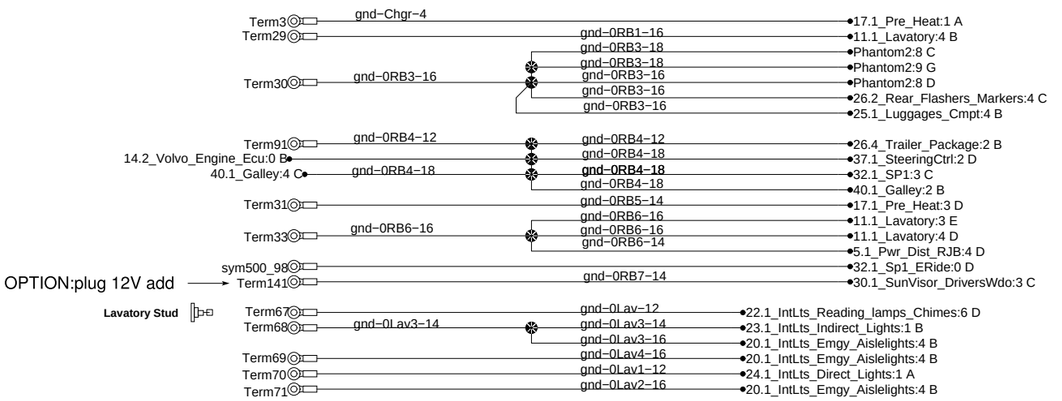

Rev:0

Page:2.1

No:D061140

WIRING DIAGRAM

PREVOST