Electronic ground distribution

Ground distribution:
0-Electric gnd
00- Electronic Gnd

A-Dash - Lh console harness
F-Front junction box harness
FH-Front harness
R-Rear junction box harness
FR-Front to rear

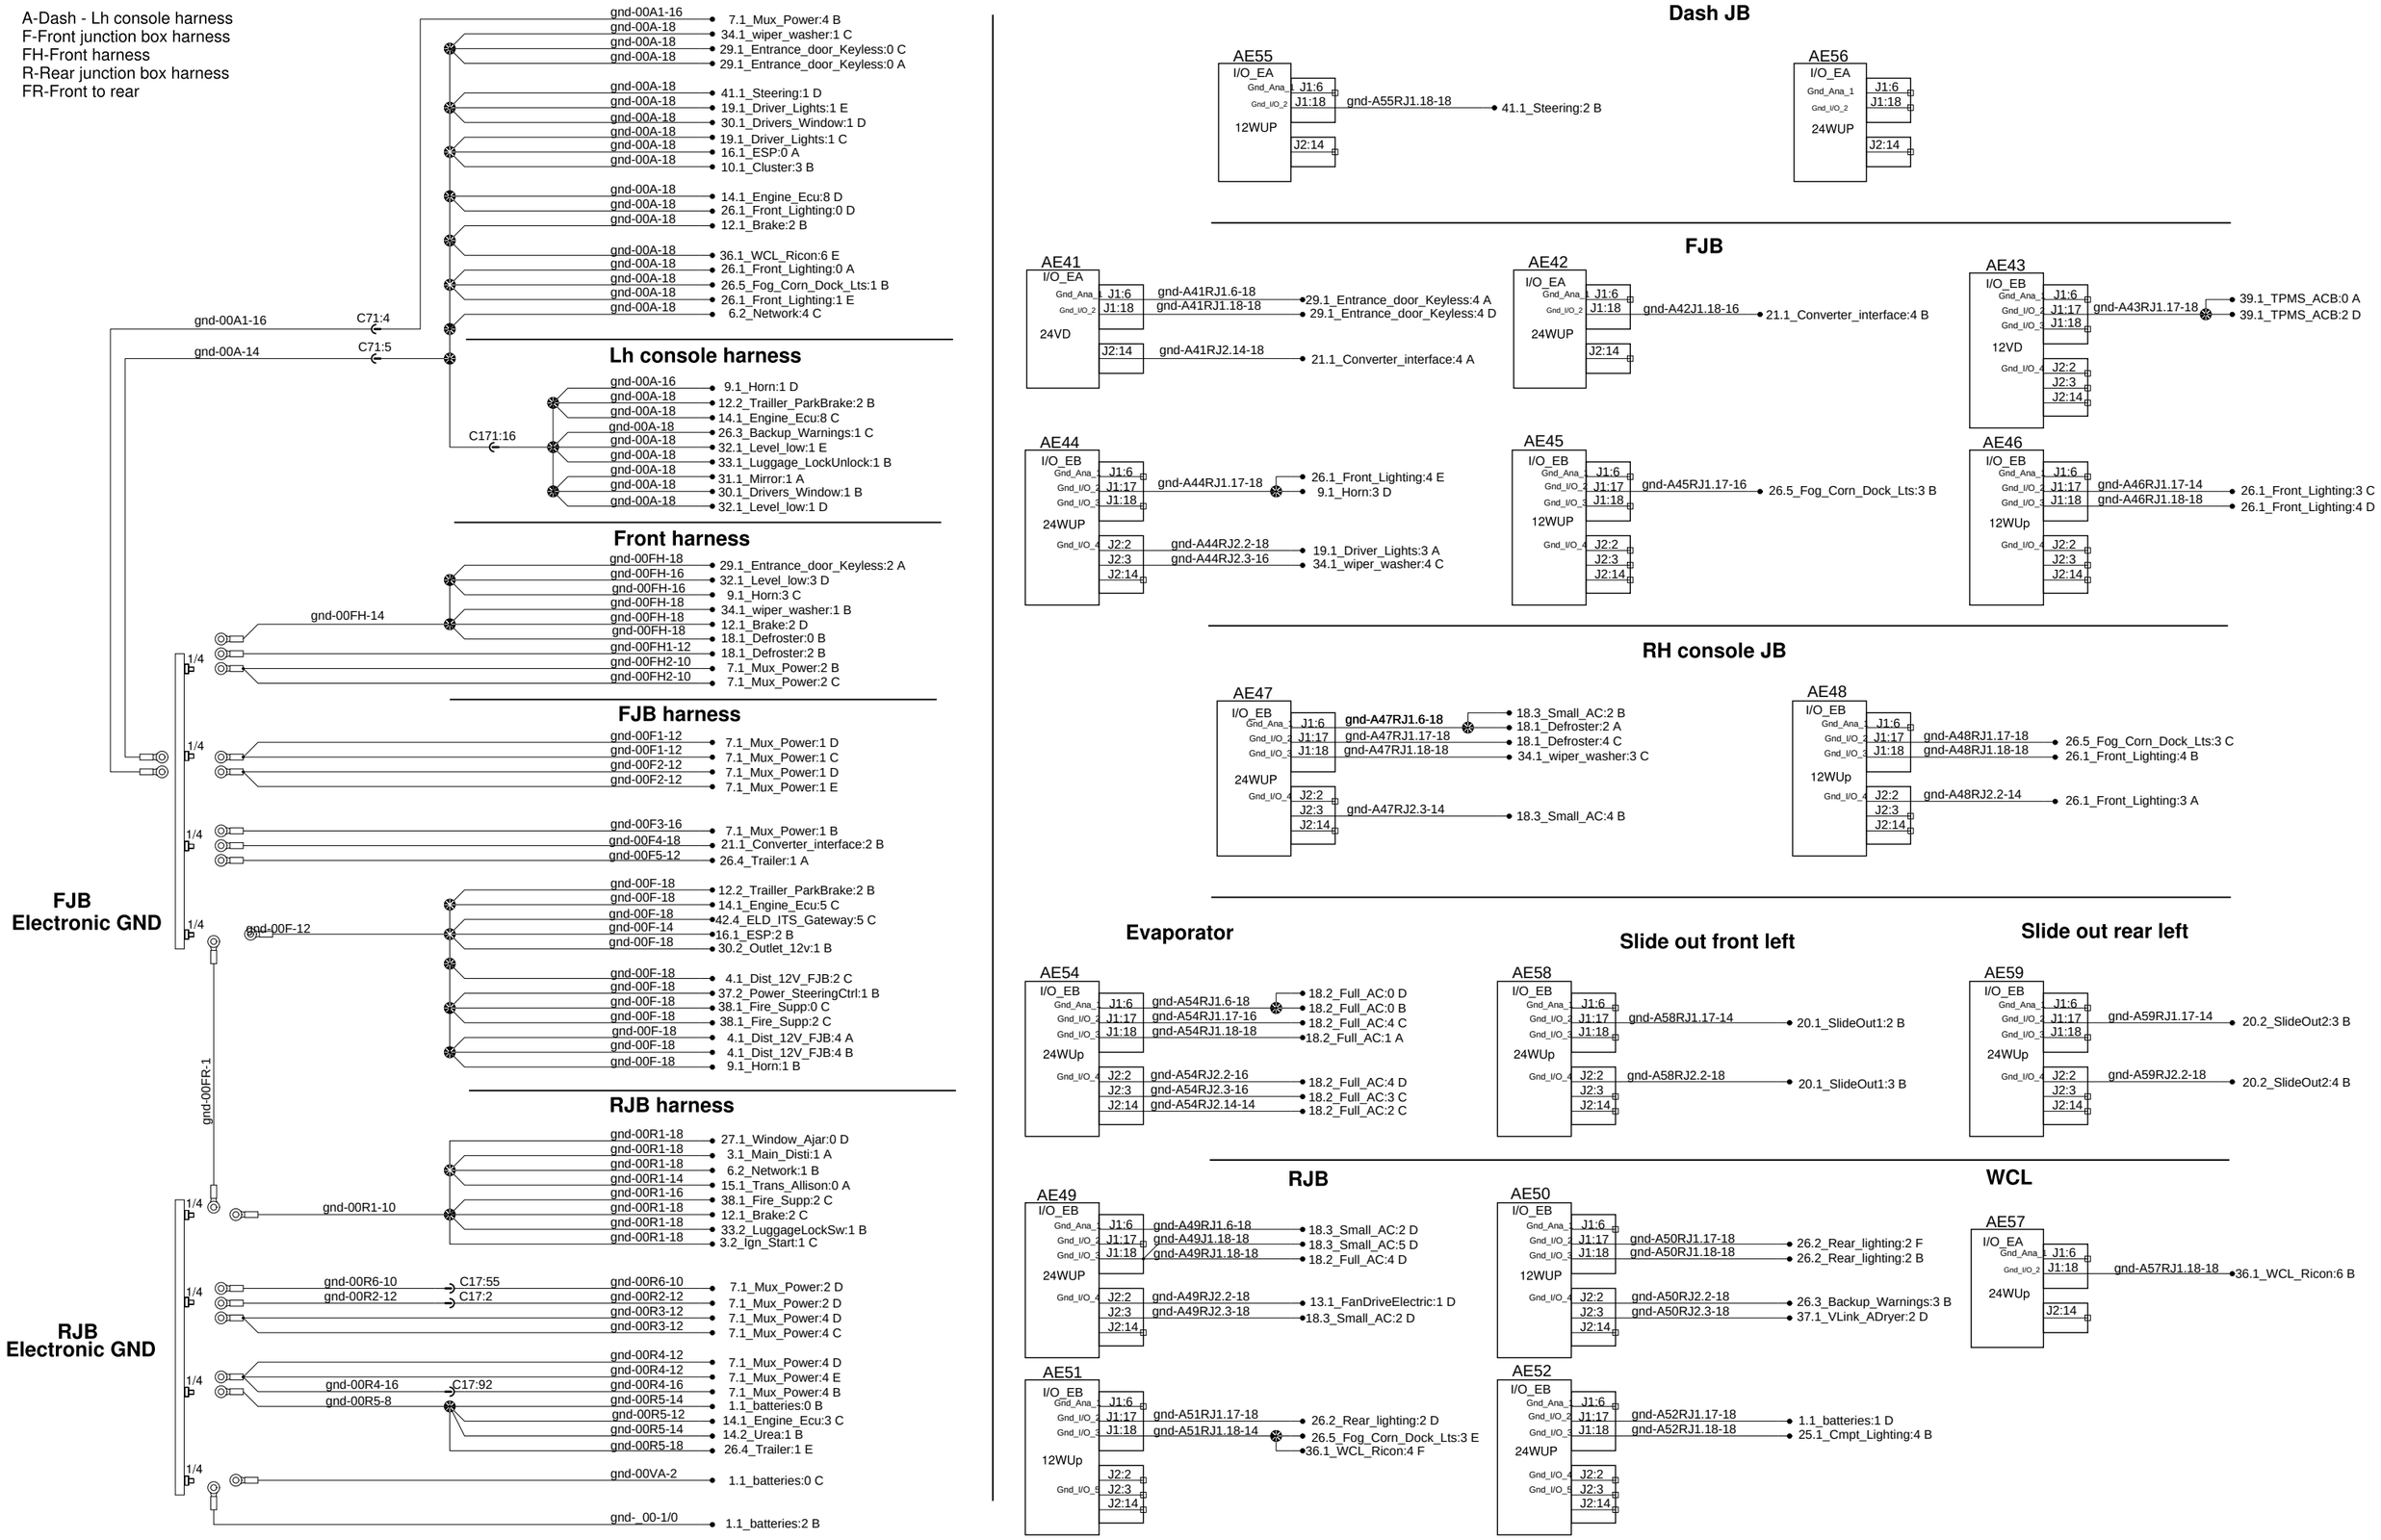

PREVOST®	WIRING DIAGRAM	No:D061670	Page:2.1	Rev:11