Electronic ground distribution

Ground distribution:
0-Electric gnd
00- Electronic Gnd

A-Dash - Lh console harness
F-Front junction box harness
FH-Front harness
R-Rear junction box harness
FR-Front to rear

Dash harness

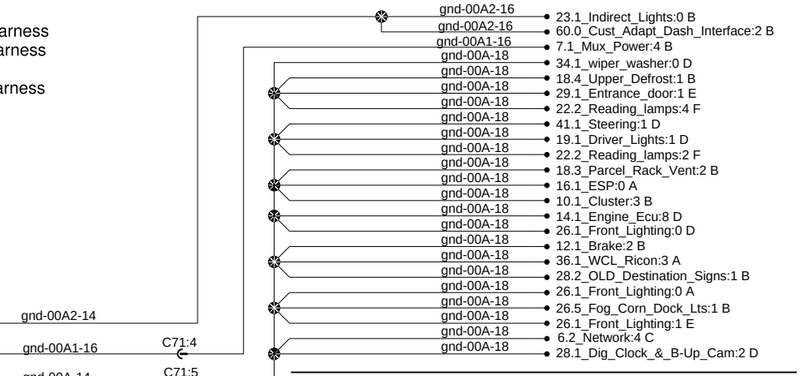

Lh console harness

Front harness

FJB harness

FJB Electronic GND

RJB harness

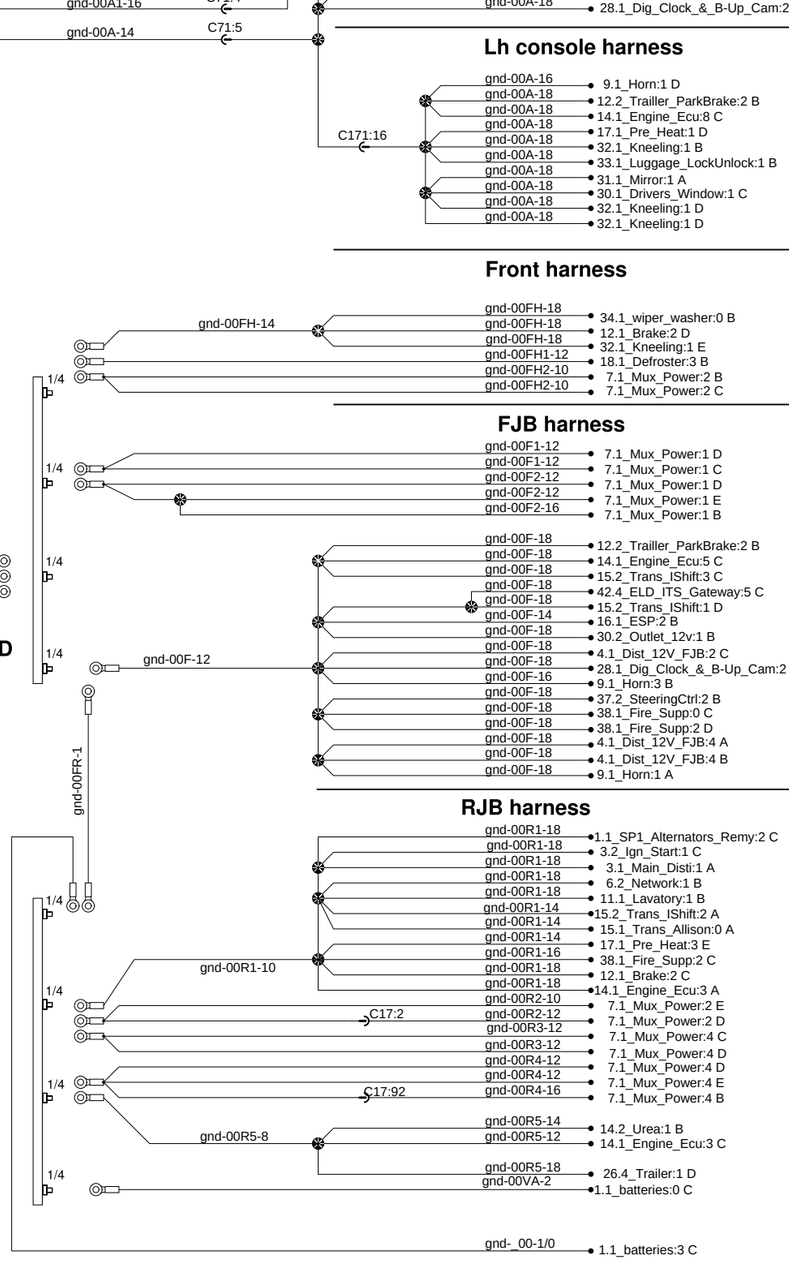

RJB Electronic GND

Dash JB

FJB

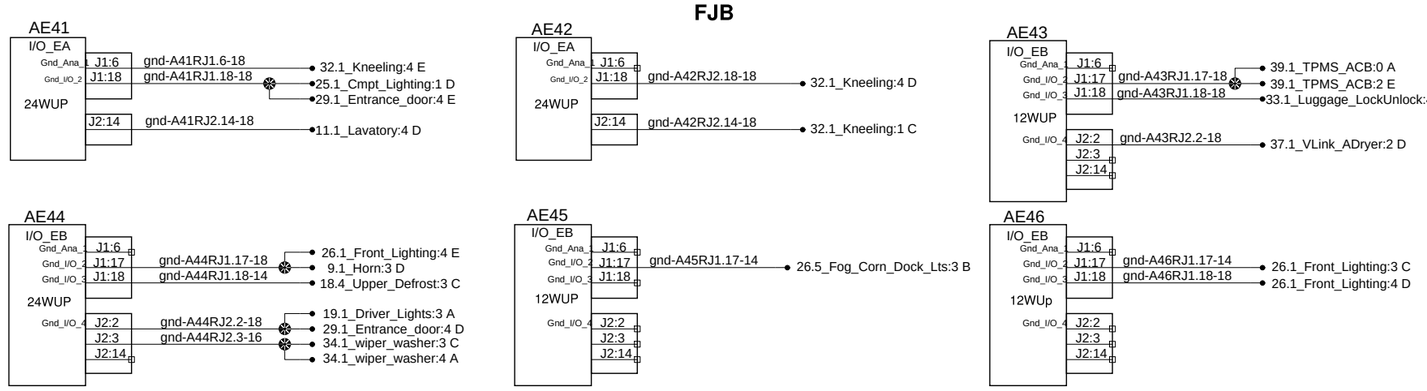

RH console JB

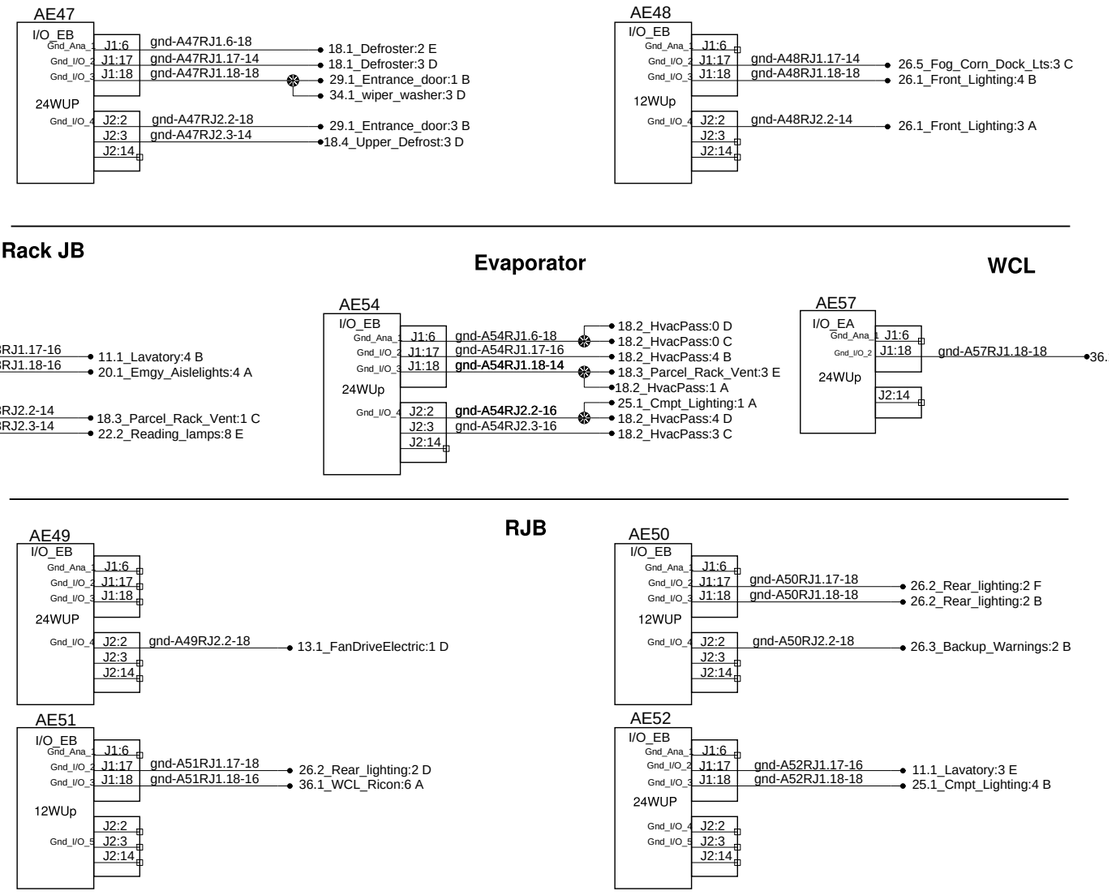

Parcel Rack JB

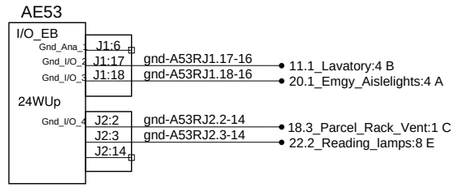

Evaporator

WCL

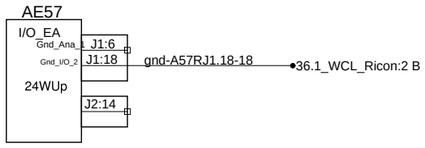

RJB