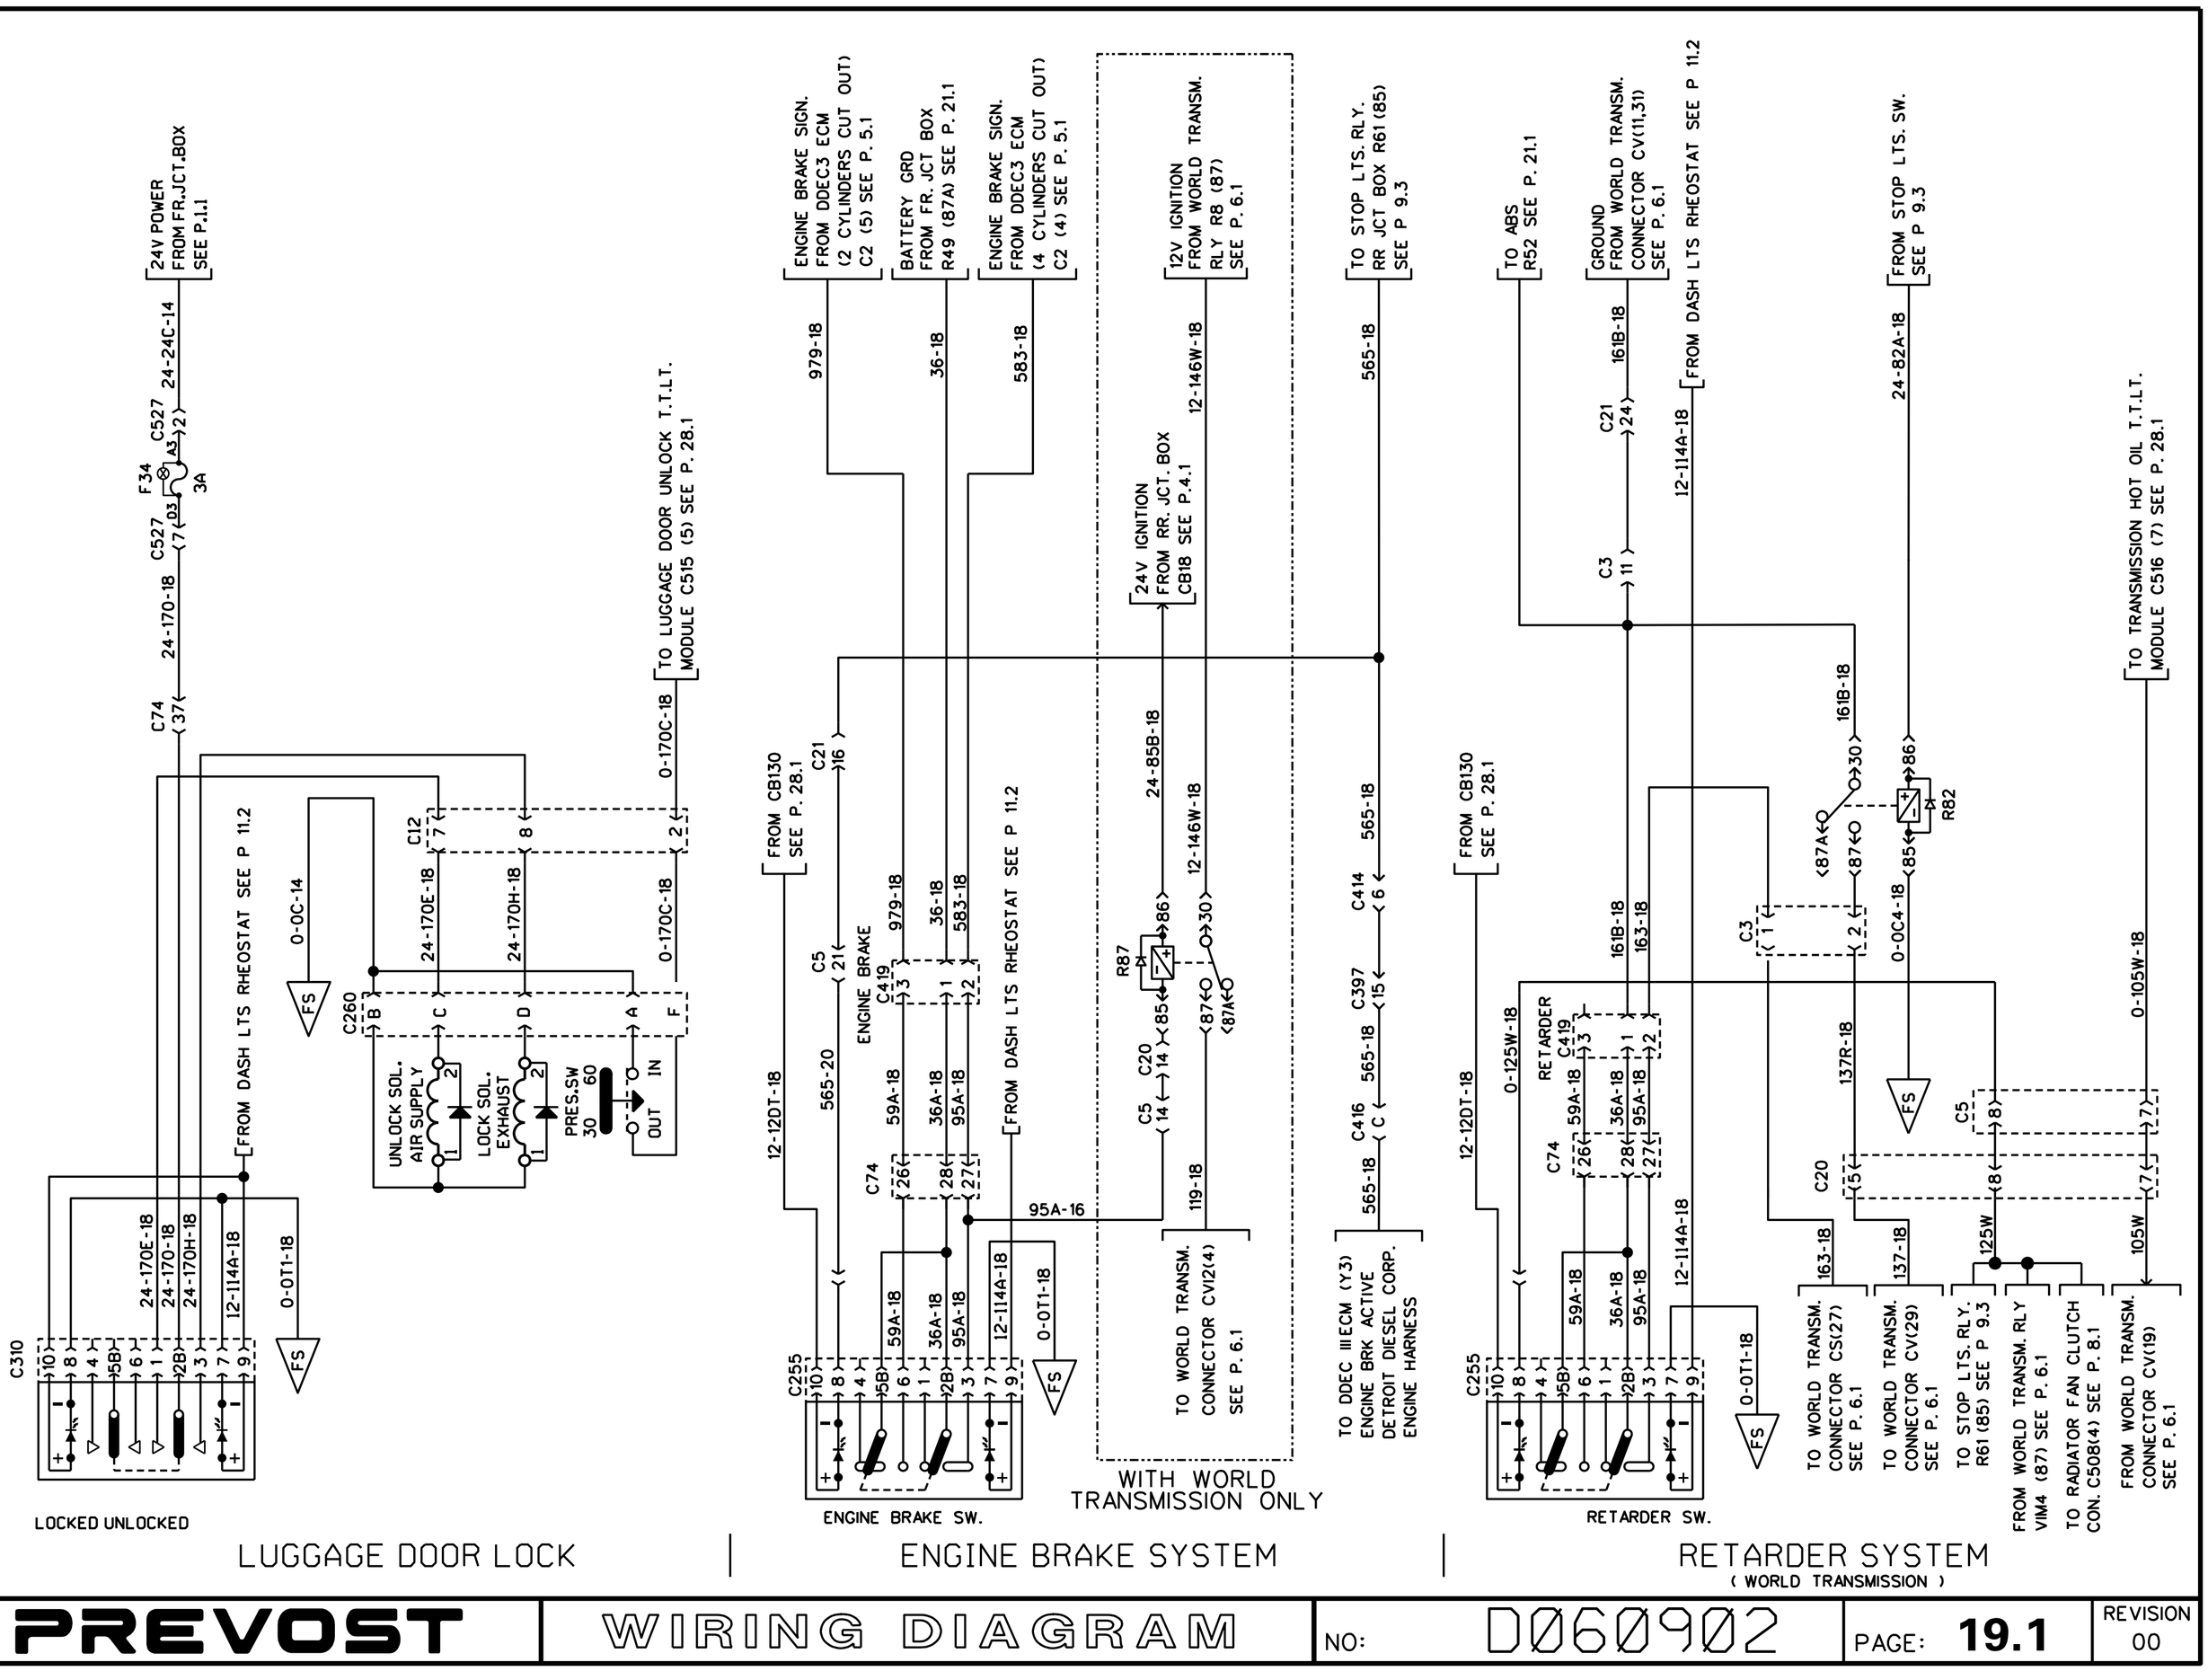
24V POWER
FROM FR.JCT.BOX
SEE P.1.1
24-24C-14
C527
F34
3A
24-170-18
C74
FROM DASH LTS RHEOSTAT SEE P 11.2
0-0C-14
C12
24-170E-18
24-170H-18
0-170C-18
C260
UNLOCK SOL. AIR SUPPLY
LOCK SOL. EXHAUST
PRES.SW 30 60
OUT IN
0-0T1-18
12-114A-18
C310
LOCKED UNLOCKED
LUGGAGE DOOR LOCK
TO LUGGAGE DOOR UNLOCK T.T.LT. MODULE C515 (5) SEE P. 28.1
ENGINE BRAKE SIGN. FROM DDEC3 ECM (2 CYLINDERS CUT OUT) C2 (5) SEE P. 5.1
BATTERY GRD FROM FR. JCT BOX R49 (87A) SEE P. 21.1
ENGINE BRAKE SIGN. FROM DDEC3 ECM (4 CYLINDERS CUT OUT) C2 (4) SEE P. 5.1
12V IGNITION FROM WORLD TRANSM. RLY R8 (87) SEE P. 6.1
24V IGNITION FROM RR. JCT. BOX CB18 SEE P.4.1
TO STOP LTS. RLY. RR JCT BOX R61(85) SEE P 9.3
FROM CB130 SEE P. 28.1
565-20
979-18
36-18
583-18
12-146W-18
24-85B-18
565-18
C5
C21
C419
ENGINE BRAKE
59A-18
36A-18
95A-18
95A-16
119-18
R87
C20
C255
ENGINE BRAKE SW.
TO WORLD TRANSM. CONNECTOR CVI2(4) SEE P. 6.1
WITH WORLD TRANSMISSION ONLY
TO DDEC IIIECM (Y3) ENGINE BRK ACTIVE DETROIT DIESEL CORP. ENGINE HARNESS
C416
C397
C414
565-18
ENGINE BRAKE SYSTEM
TO ABS R52 SEE P. 21.1
GROUND FROM WORLD TRANSM. CONNECTOR CV(11,31) SEE P. 6.1
FROM DASH LTS RHEOSTAT SEE P 11.2
FROM STOP LTS. SW. SEE P 9.3
161B-18
24-82A-18
C3
RETARDER
0-125W-18
RETARDER SW.
TO WORLD TRANSM. CONNECTOR CS(27) SEE P. 6.1
TO WORLD TRANSM. CONNECTOR CV(29) SEE P. 6.1
TO STOP LTS. RLY. R61(85) SEE P 9.3
FROM WORLD TRANSM. RLY VIM4 (87) SEE P. 6.1
TO RADIATOR FAN CLUTCH CON. C508(4) SEE P. 8.1
FROM WORLD TRANSM. CONNECTOR CV(19) SEE P. 6.1
TO TRANSMISSION HOT OIL T.T.LT. MODULE C516 (7) SEE P. 28.1
163-18
137R-18
137-18
125W
105W
0-0C4-18
0-105W-18
R82
RETARDER SYSTEM
(WORLD TRANSMISSION)