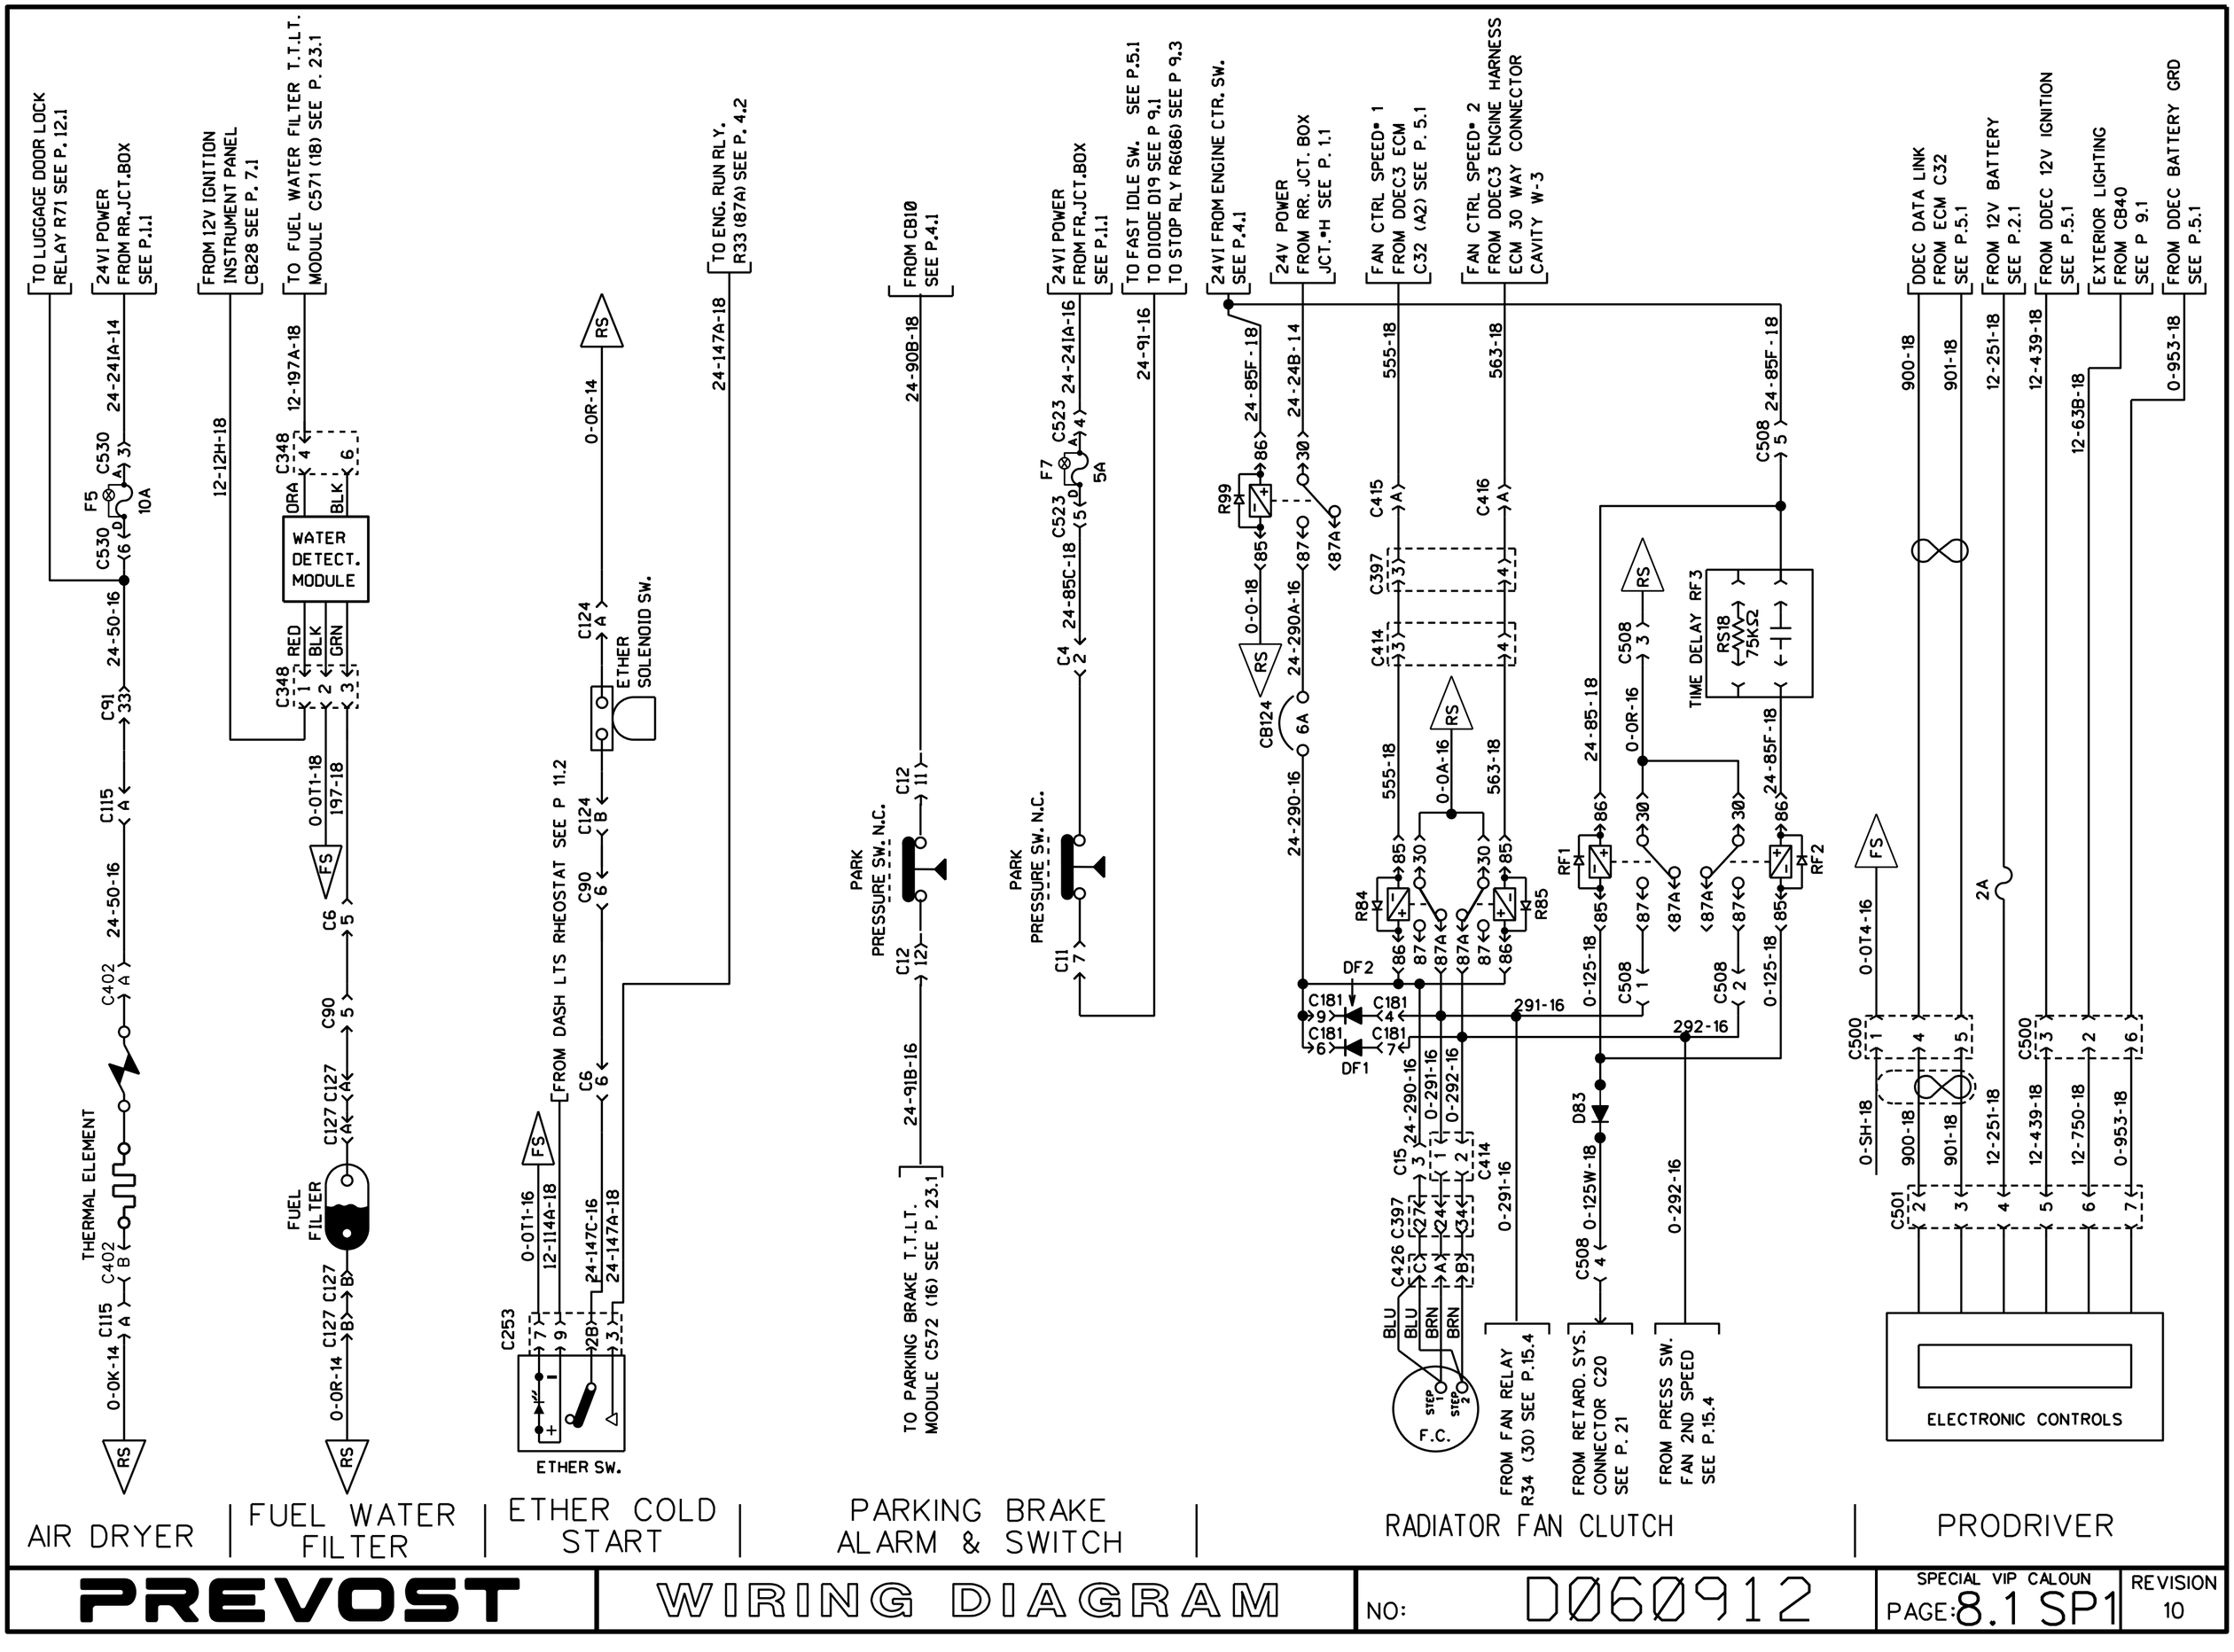
AIR DRYER
TO LUGGAGE DOOR LOCK RELAY R71 SEE P. 12.1
24VI POWER FROM RR.JCT.BOX SEE P.1.1
F5
10A
C530
C91
24-50-16
24-241A-14
C115
0-0K-14
THERMAL ELEMENT
C402
RS
FUEL WATER FILTER
FROM 12V IGNITION INSTRUMENT PANEL CB28 SEE P. 7.1
12-12H-18
TO FUEL WATER FILTER T.T.L.T. MODULE C571 (18) SEE P. 23.1
12-197A-18
C348
WATER DETECT. MODULE
RED
BLK
GRN
ORA
BLK
0-0T1-18
197-18
FS
FUEL FILTER
C127
C6
C90
0-OR-14
ETHER COLD START
0-OR-14
C124
ETHER SOLENOID SW.
P 11.2
FROM DASH LTS RHEOSTAT SEE P 11.2
0-0T1-16
12-114A-18
24-147C-16
24-147A-18
C253
ETHER SW.
PARKING BRAKE ALARM & SWITCH
TO ENG. RUN RLY. R33 (87A) SEE P. 4.2
24-147A-18
FROM CB10 SEE P.4.1
24-90B-18
PARK PRESSURE SW. N.C.
C12
24-91B-16
TO PARKING BRAKE T.T.L.T. MODULE C572 (16) SEE P. 23.1
C11
RADIATOR FAN CLUTCH
24VI POWER FROM FR.JCT.BOX SEE P.1.1
24-241A-16
C523
F7
5A
C4
24-85C-18
TO FAST IDLE SW. SEE P.5.1
TO DIODE D19 SEE P 9.1
TO STOP RLY R6(86) SEE P 9.3
24-91-16
24VI FROM ENGINE CTR. SW. SEE P.4.1
24V POWER FROM RR. JCT. BOX JCT.#H SEE P. 1.1
R99
24-85F-18
24-24B-14
0-0-18
CB124
24-290A-16
24-290-16
FAN CTRL SPEED# 1 FROM DDEC3 ECM C32 (A2) SEE P. 5.1
FAN CTRL SPEED# 2 FROM DDEC3 ENGINE HARNESS ECM 30 WAY CONNECTOR CAVITY W-3
C415
C414
C397
555-18
563-18
0-0A-16
TIME DELAY RF3
RS18
75KΩ
C508
24-85-18
0-OR-16
R84
R85
DF2
DF1
C181
C15
C426
C397
C414
0-291-16
0-292-16
0-125-18
0-125W-18
D83
RF1
RF2
BLU
BRN
STEP 1
STEP 2
F.C.
FROM FAN RELAY R34 (30) SEE P.15.4
FROM RETARD. SYS. CONNECTOR C20 SEE P. 21
FROM PRESS SW. FAN 2ND SPEED SEE P.15.4
PRODRIVER
900-18
DDEC DATA LINK FROM ECM C32 SEE P.5.1
901-18
12-251-18
FROM 12V BATTERY SEE P.2.1
12-439-18
FROM DDEC 12V IGNITION SEE P.5.1
12-63B-18
EXTERIOR LIGHTING FROM CB40 SEE P 9.1
0-953-18
FROM DDEC BATTERY GRD SEE P.5.1
0-0T4-16
0-SH-18
C500
C501
2A
12-750-18
ELECTRONIC CONTROLS