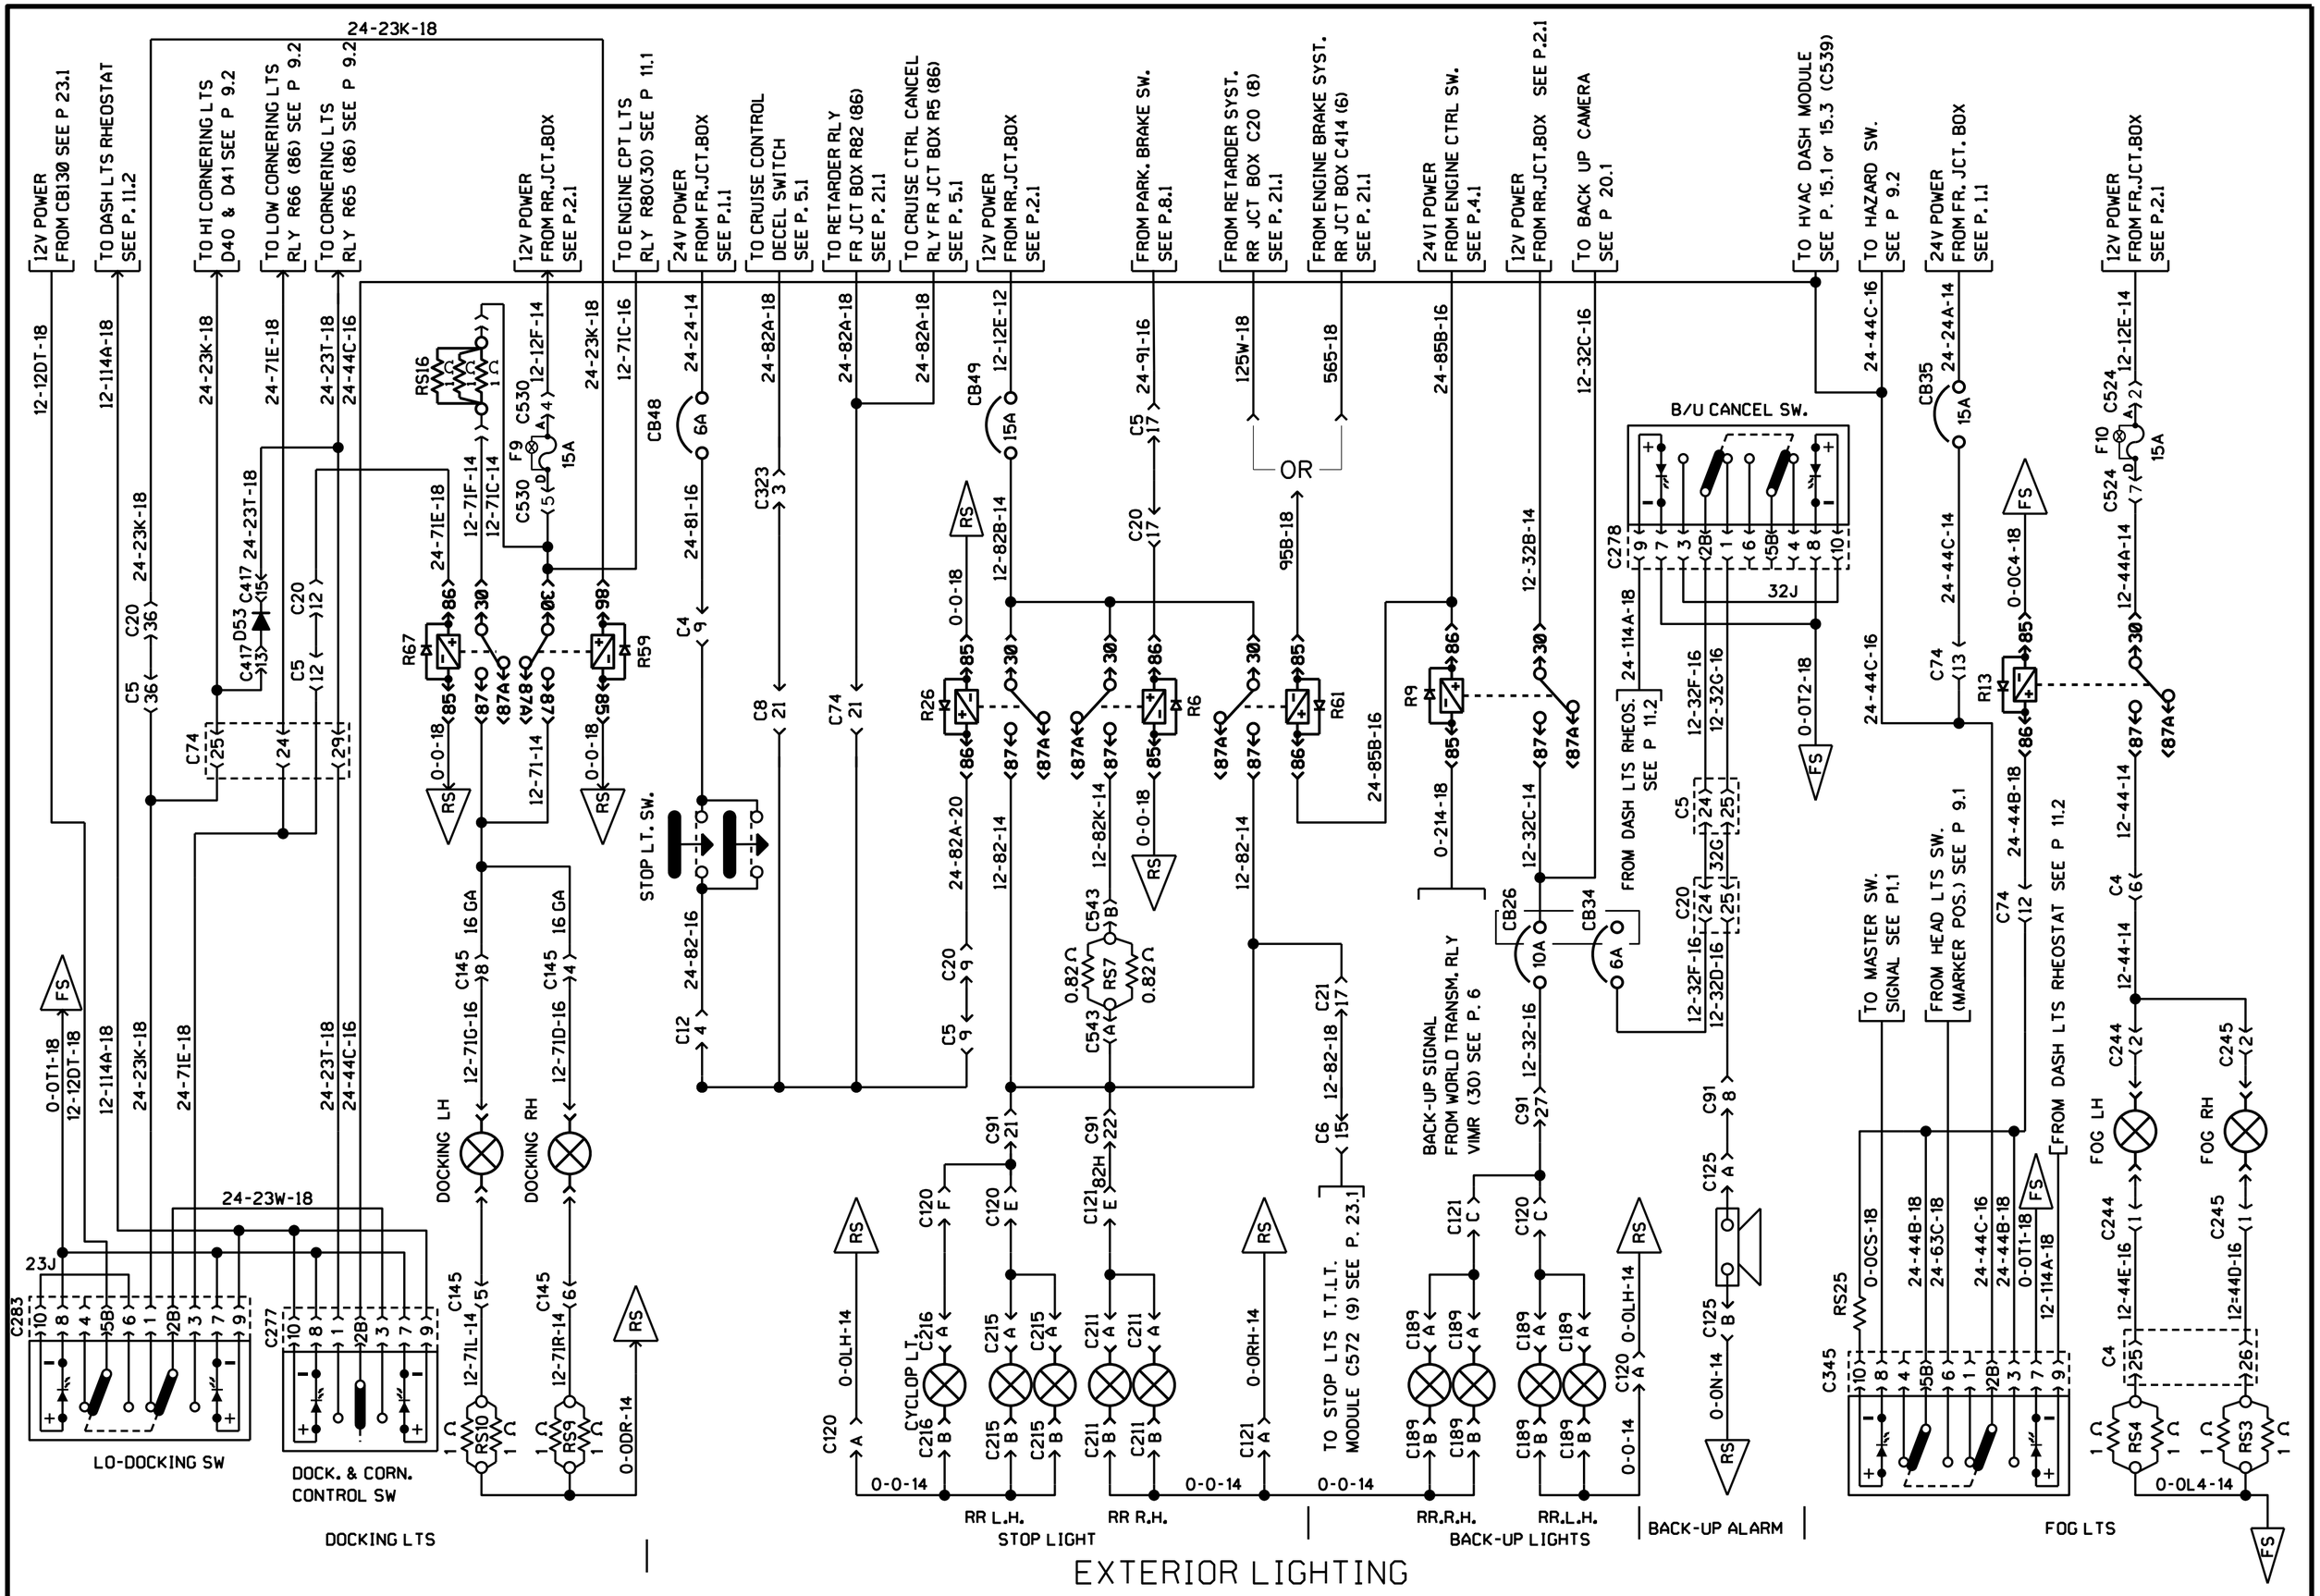
12V POWER FROM CB130 SEE P 23.1
TO DASH LTS RHEOSTAT SEE P. 11.2
TO HI CORNERING LTS D40 & D41 SEE P 9.2
TO LOW CORNERING LTS RLY R66 (86) SEE P 9.2
TO CORNERING LTS RLY R65 (86) SEE P 9.2
12V POWER FROM RR.JCT.BOX SEE P.2.1
TO ENGINE CPT LTS RLY R80(30) SEE P 11.1
24V POWER FROM FR.JCT.BOX SEE P.1.1
TO CRUISE CONTROL DECEL SWITCH SEE P. 5.1
TO RETARDER RLY FR JCT BOX R82 (86)
SEE P. 21.1
TO CRUISE CTRL CANCEL RLY FR JCT BOX R5 (86)
SEE P. 5.1
12V POWER FROM RR.JCT.BOX SEE P.2.1
FROM PARK. BRAKE SW. SEE P.8.1
FROM RETARDER SYST. RR JCT BOX C20 (8) SEE P. 21.1
FROM ENGINE BRAKE SYST. RR JCT BOX C414 (6) SEE P. 21.1
24VI POWER FROM ENGINE CTRL SW. SEE P.4.1
12V POWER FROM RR.JCT.BOX SEE P.2.1
TO BACK UP CAMERA SEE P 20.1
TO HVAC DASH MODULE SEE P. 15.1 or 15.3 (C539)
TO HAZARD SW. SEE P 9.2
24V POWER FROM FR. JCT. BOX SEE P. 1.1
12V POWER FROM FR.JCT.BOX SEE P.2.1
24-23K-18
OR
B/U CANCEL SW.
STOP LT. SW.
DOCKING LH
DOCKING RH
LO-DOCKING SW
DOCK. & CORN. CONTROL SW
DOCKING LTS
RR L.H. STOP LIGHT
RR R.H.
TO STOP LTS T.T.L.T. MODULE C572 (9) SEE P. 23.1
BACK-UP SIGNAL FROM WORLD TRANSM. RLY VIMR (30) SEE P. 6
RR.R.H.
RR.L.H.
BACK-UP LIGHTS
BACK-UP ALARM
FROM DASH LTS RHEOS. SEE P 11.2
TO MASTER SW. SIGNAL SEE P1.1
FROM HEAD LTS SW. (MARKER POS.) SEE P 9.1
FROM DASH LTS RHEOSTAT SEE P 11.2
FOG LH
FOG RH
FOG LTS
EXTERIOR LIGHTING