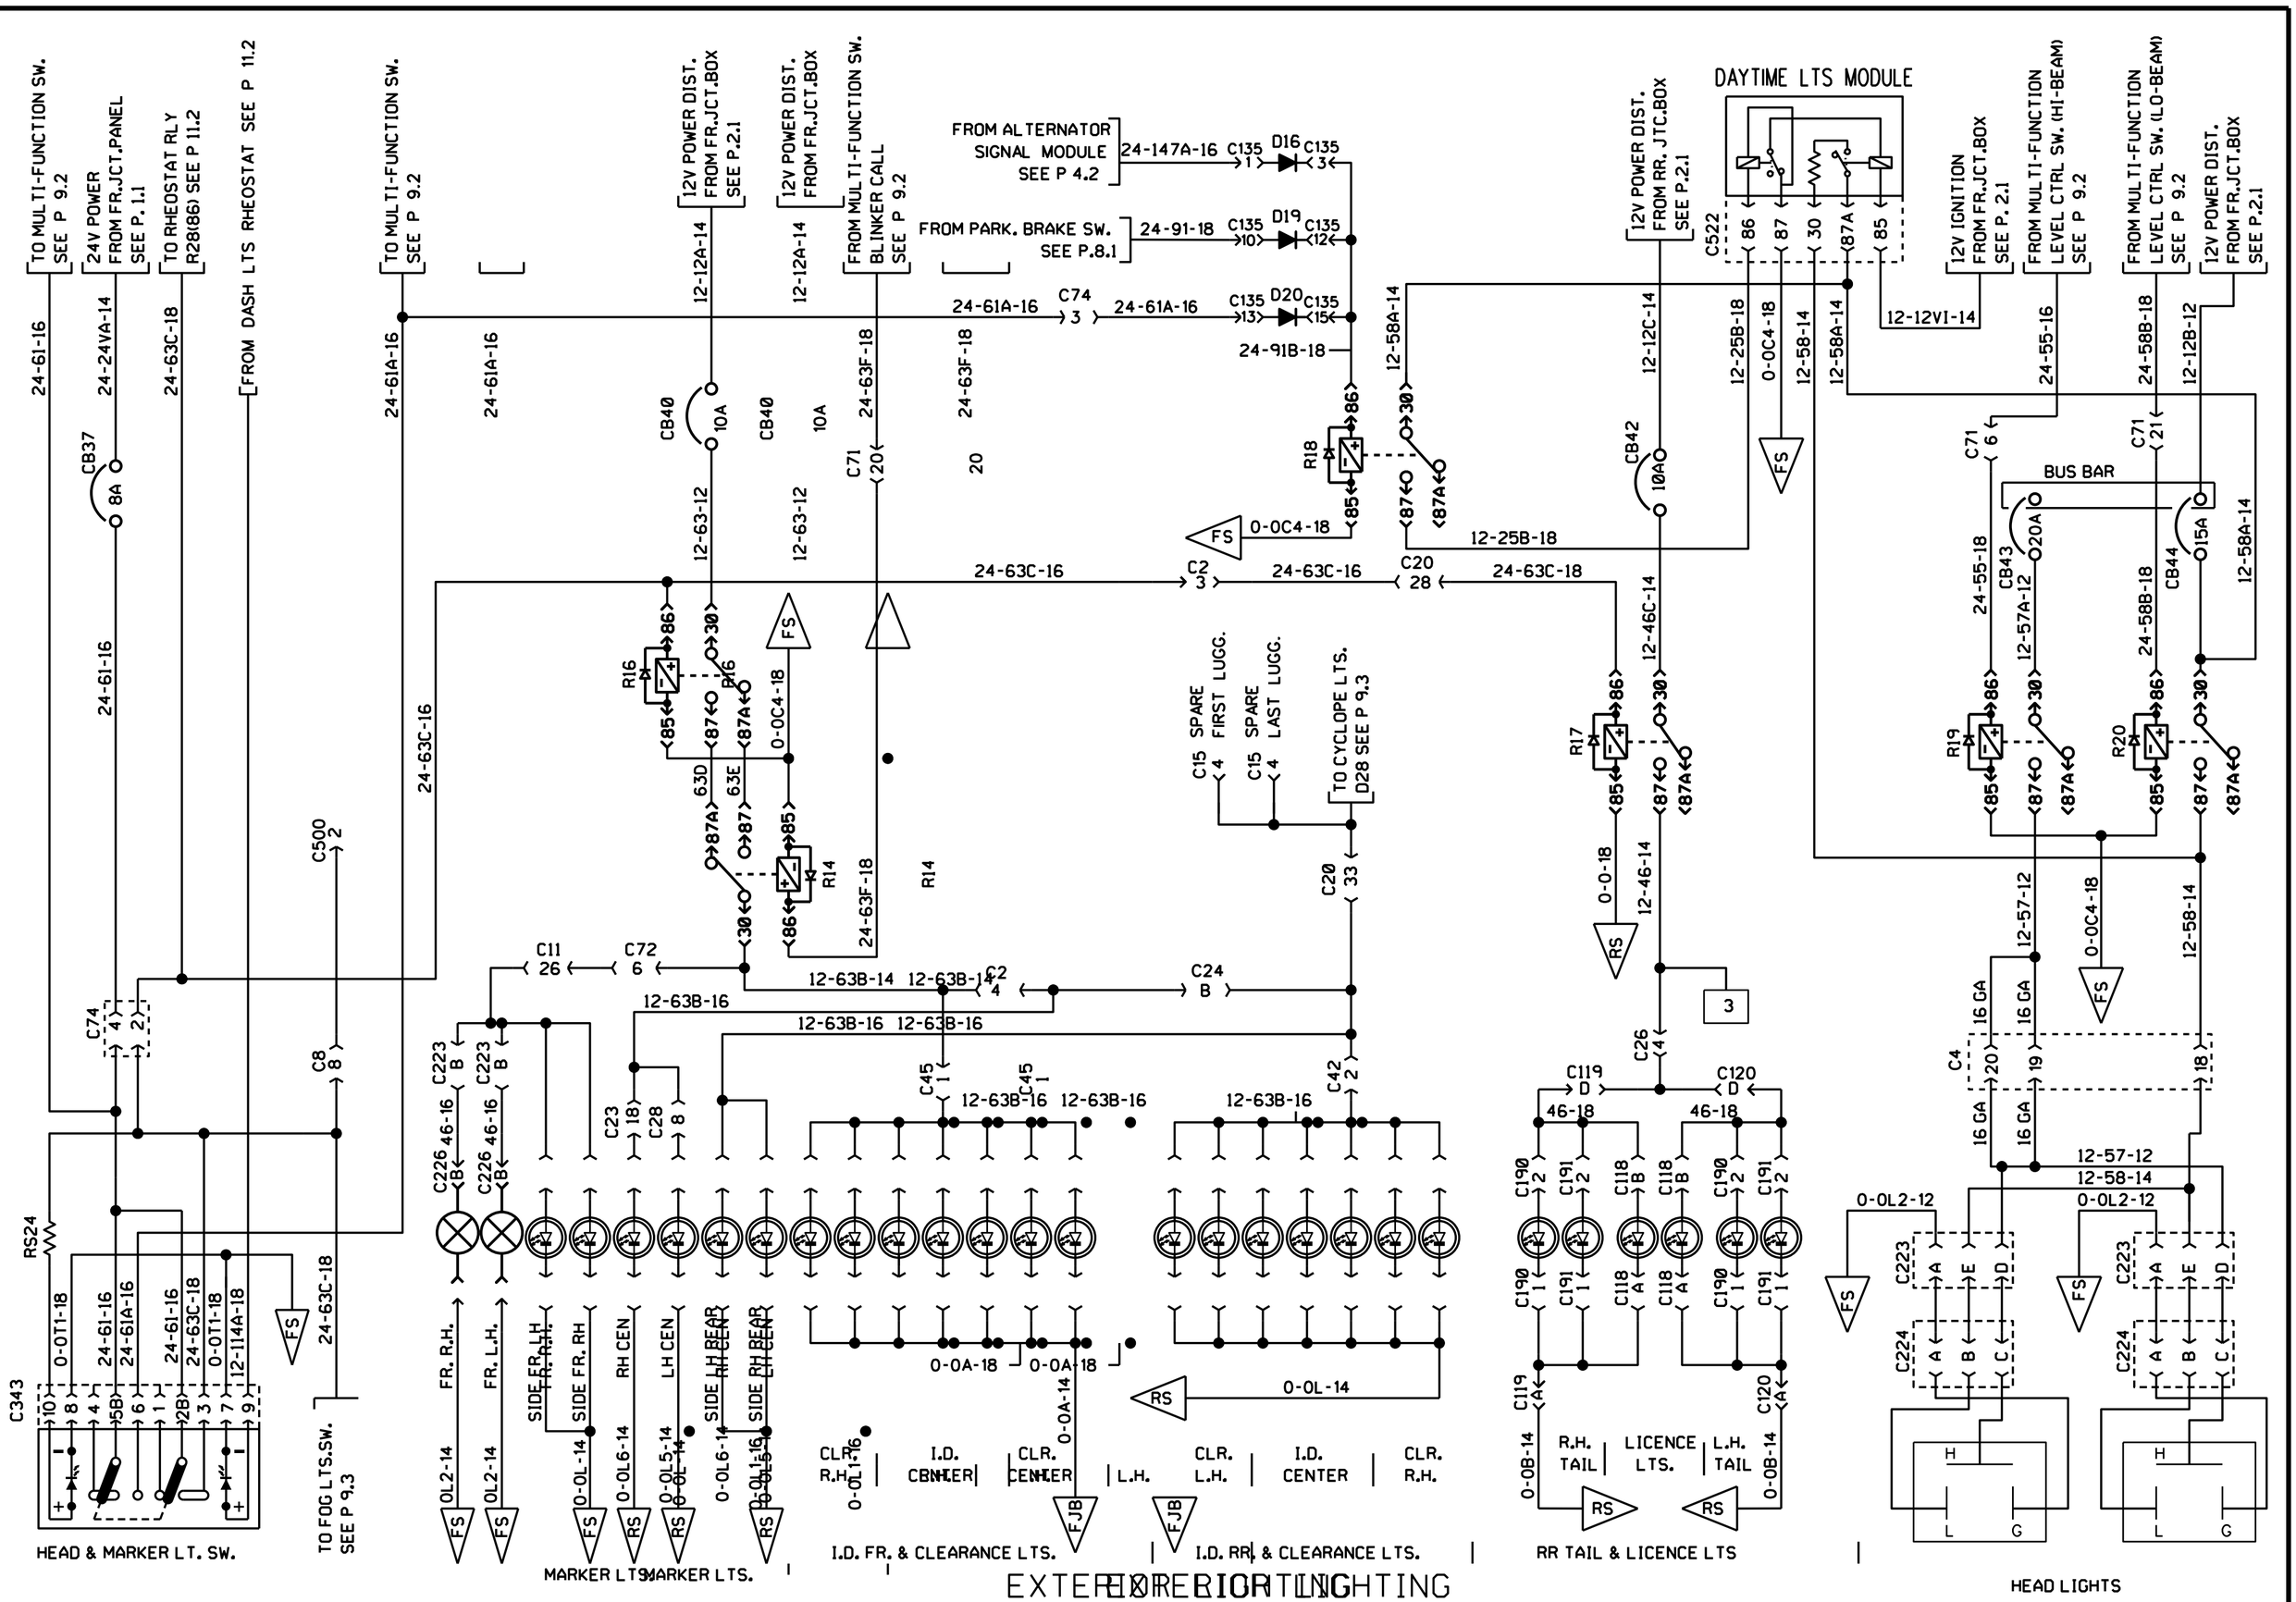
TO MULTI-FUNCTION SW. SEE P 9.2
24V POWER FROM FR.JCT.PANEL SEE P. 1.1
TO RHEOSTAT RLY R28(86) SEE P 11.2
FROM DASH LTS RHEOSTAT SEE P 11.2
12V POWER DIST. FROM FR.JCT.BOX SEE P.2.1
FROM MULTI-FUNCTION SW. BLINKER CALL SEE P 9.2
FROM ALTERNATOR SIGNAL MODULE SEE P 4.2
FROM PARK. BRAKE SW. SEE P.8.1
12V POWER DIST. FROM RR. JTC.BOX SEE P.2.1
DAYTIME LTS MODULE
12V IGNITION FROM FR.JCT.BOX SEE P. 2.1
FROM MULTI-FUNCTION LEVEL CTRL SW. (HI-BEAM) SEE P 9.2
FROM MULTI-FUNCTION LEVEL CTRL SW. (LO-BEAM) SEE P 9.2
BUS BAR
TO CYCLOPE LTS. D28 SEE P 9.3
SPARE FIRST LUGG.
SPARE LAST LUGG.
HEAD & MARKER LT. SW.
TO FOG LTS.SW. SEE P 9.3
MARKER LTS.
I.D. FR. & CLEARANCE LTS.
I.D. RR. & CLEARANCE LTS.
RR TAIL & LICENCE LTS
HEAD LIGHTS
EXTERIOR LIGHTING