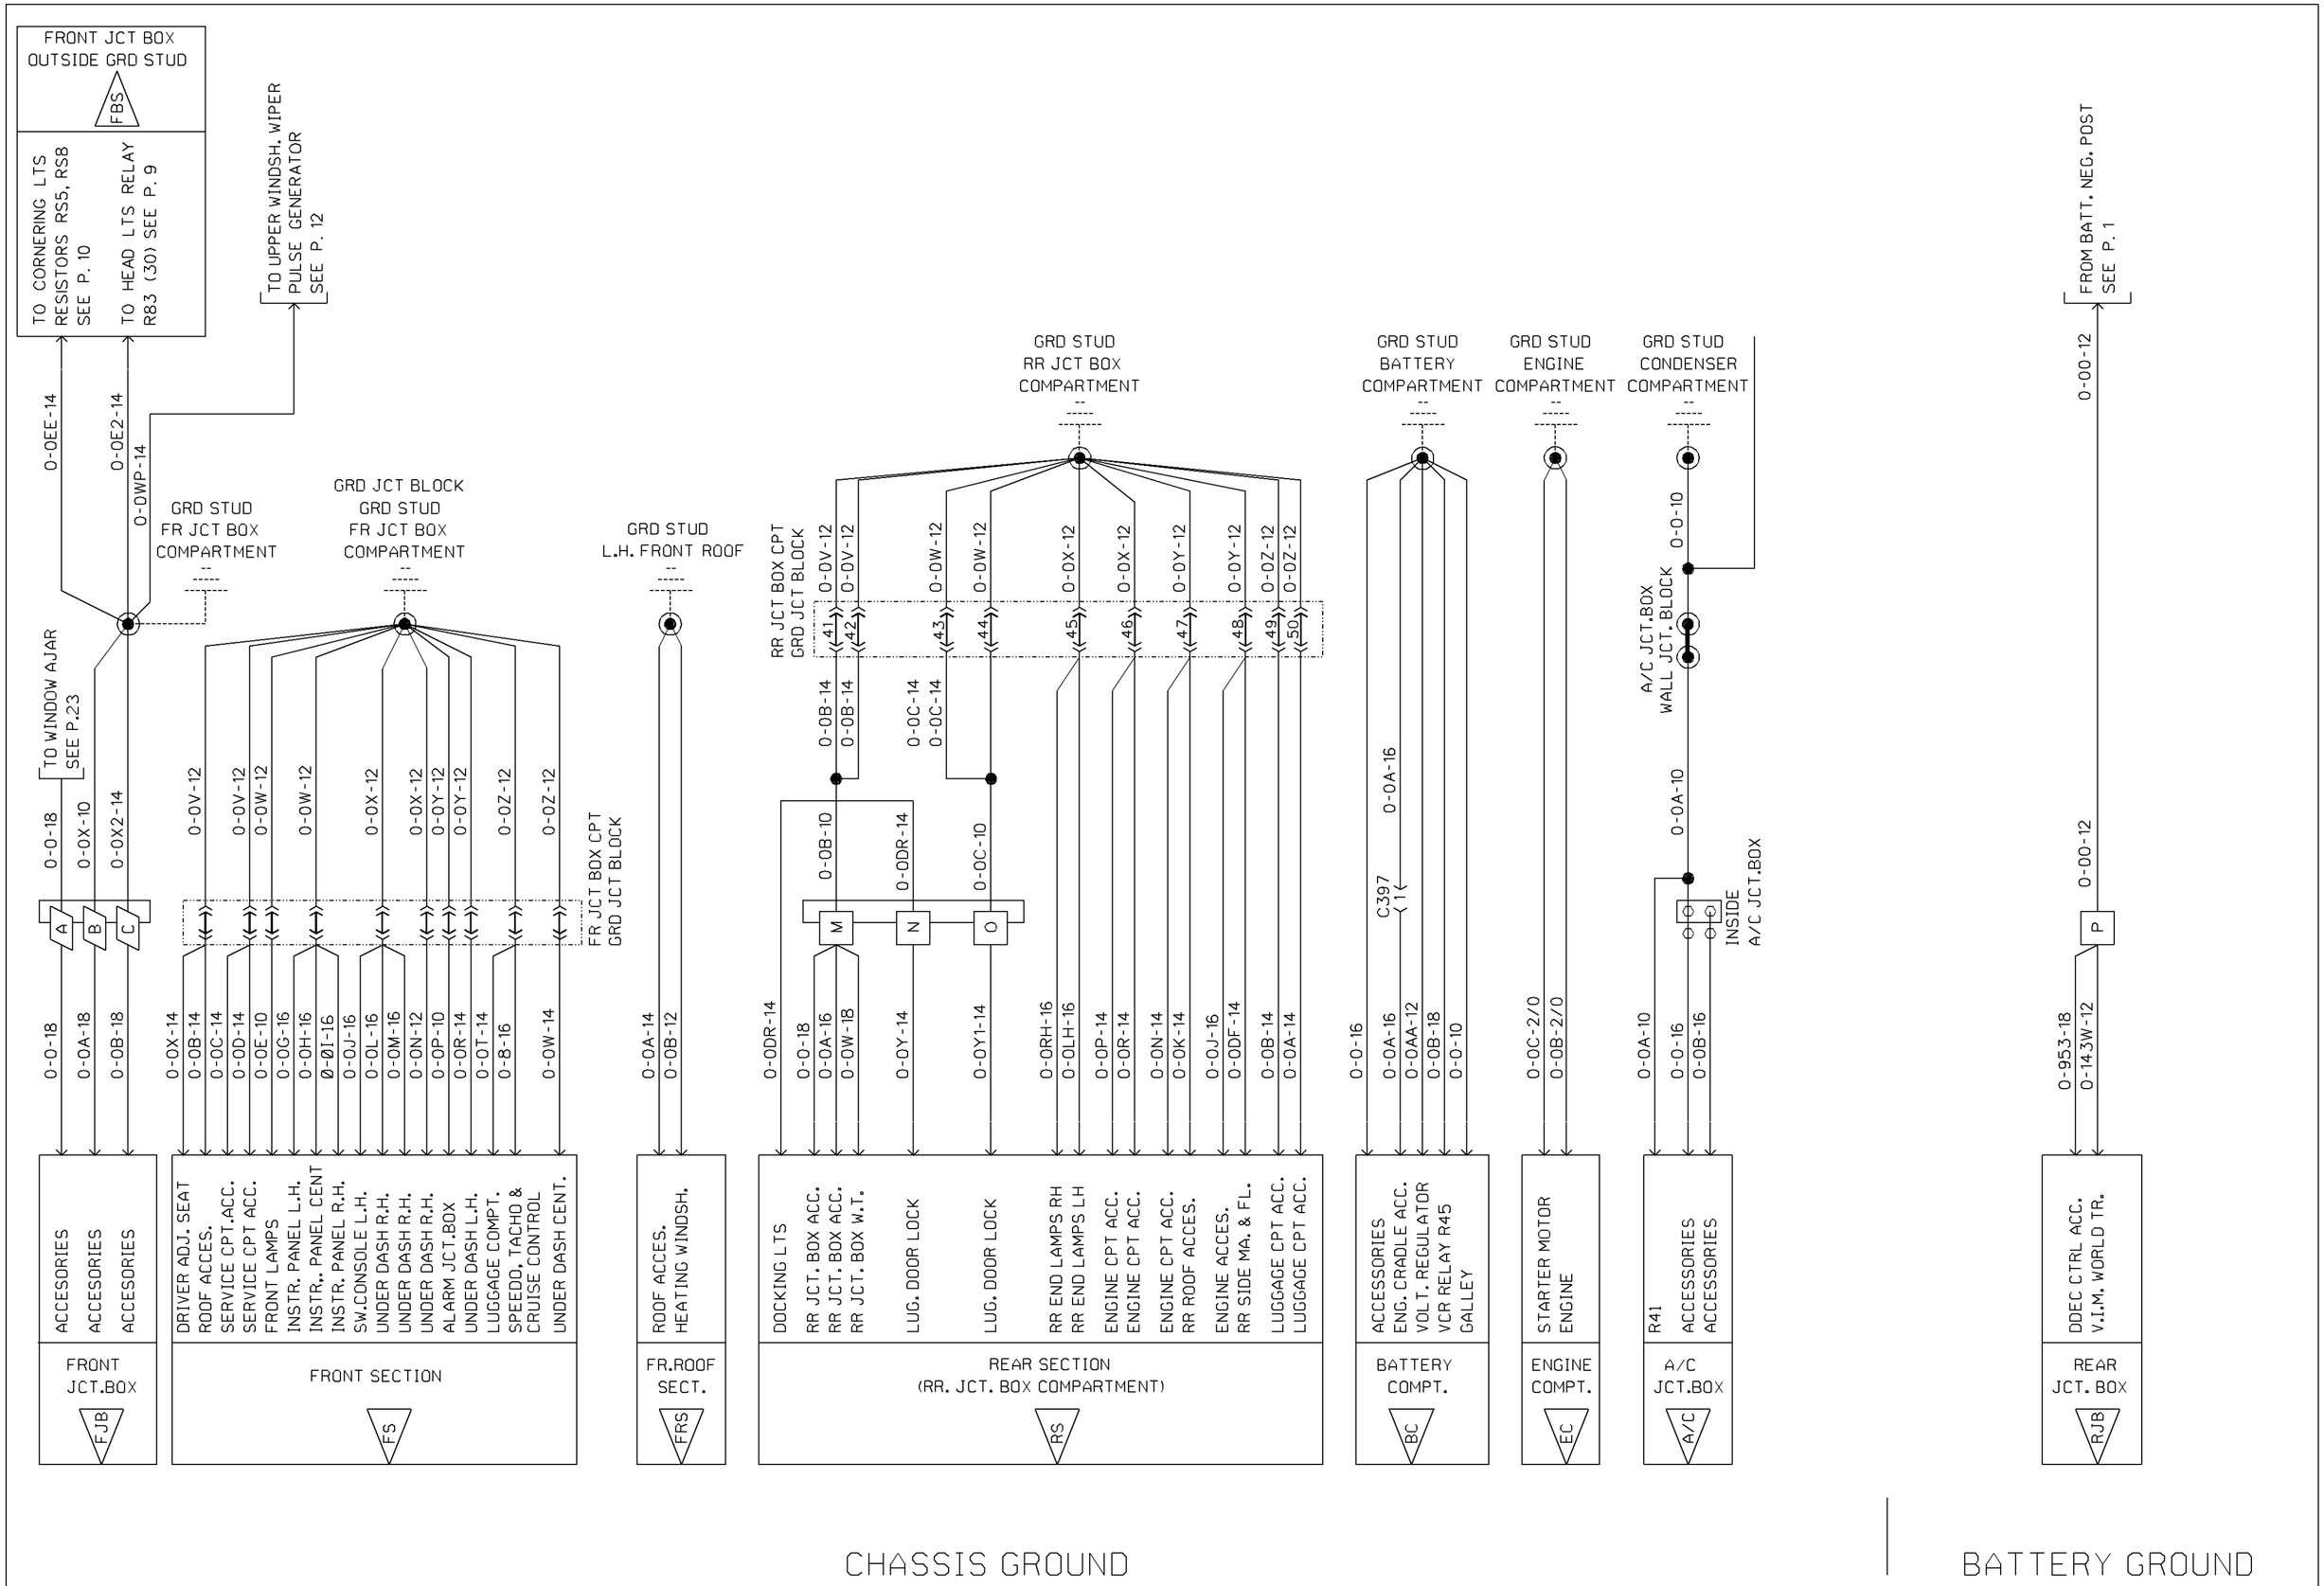
FRONT JCT BOX
OUTSIDE GRD STUD
FBS
TO CORNERING LTS RESISTORS RS5, RS8 SEE P. 10
TO HEAD LTS RELAY R83 (30) SEE P. 9
TO UPPER WINDSH. WIPER PULSE GENERATOR SEE P. 12
FROM BATT. NEG. POST SEE P. 1
O-OEE-14
O-OE2-14
O-OWP-14
GRD STUD FR JCT BOX COMPARTMENT
GRD JCT BLOCK GRD STUD FR JCT BOX COMPARTMENT
GRD STUD L.H. FRONT ROOF
GRD STUD RR JCT BOX COMPARTMENT
GRD STUD BATTERY COMPARTMENT
GRD STUD ENGINE COMPARTMENT
GRD STUD CONDENSER COMPARTMENT
TO WINDOW AJAR SEE P.23
O-0-18
O-0X-10
O-0X2-14
FR JCT BOX CPT GRD JCT BLOCK
RR JCT BOX CPT GRD JCT BLOCK
A/C JCT.BOX WALL JCT. BLOCK
INSIDE A/C JCT.BOX
O-0-10
O-00-12
O-0A-10
O-0A-16
C397
O-953-18
O-143W-12
ACCESORIES
DRIVER ADJ. SEAT
ROOF ACCES.
SERVICE CPT.ACC.
FRONT LAMPS
INSTR. PANEL L.H.
INSTR. PANEL CENT
INSTR. PANEL R.H.
SW.CONSOLE L.H.
UNDER DASH R.H.
ALARM JCT.BOX
LUGGAGE COMPT.
SPEEDO, TACHO & CRUISE CONTROL
UNDER DASH CENT.
HEATING WINDSH.
DOCKING LTS
RR JCT. BOX ACC.
RR JCT. BOX W.T.
LUG. DOOR LOCK
RR END LAMPS RH
RR END LAMPS LH
ENGINE CPT ACC.
RR ROOF ACCES.
ENGINE ACCES.
RR SIDE MA. & FL.
ACCESSORIES
ENG. CRADLE ACC.
VOLT. REGULATOR
VCR RELAY R45
GALLEY
STARTER MOTOR
ENGINE
R41
DDEC CTRL ACC.
V.I.M. WORLD TR.
FRONT JCT.BOX
FJB
FRONT SECTION
FS
FR.ROOF SECT.
FRS
REAR SECTION (RR. JCT. BOX COMPARTMENT)
RS
BATTERY COMPT.
BC
ENGINE COMPT.
EC
A/C JCT.BOX
A/C
REAR JCT. BOX
RJB
CHASSIS GROUND
BATTERY GROUND