

### REDUCTION OF ENTRANCE DOOR UNLOCKING TIME

#### MATERIAL

Kit #287243 includes the following parts :

Part No.	Description	Qty
641092	Tee	1
503402	Tube, nylon black	1
IS-00117	Instruction Sheet	1
FI-00117	Feuille d'instructions	1

#### PROCEDURE

**Warning** : Park vehicle safely, apply parking brake, stop engine and set battery master switch(es) to the OFF position prior to working on the vehicle.

1. Remove dashboard finishing panel.

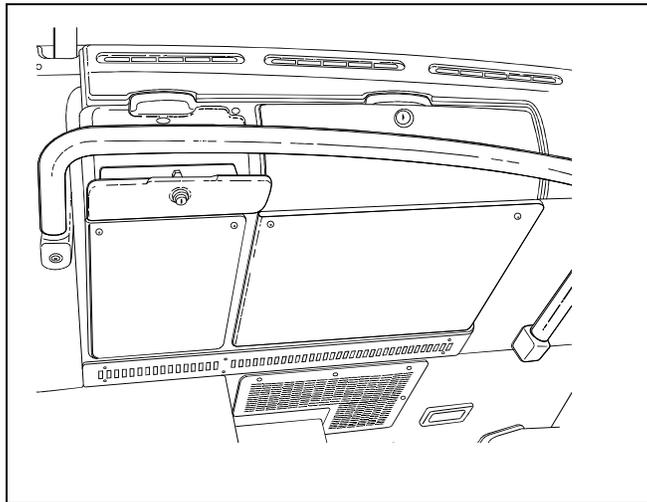


FIGURE 1: DASHBOARD FINISHING PANEL

18389

2. Locate entrance door manifold. Cut black nylon tube from C519A fitting. Connect a tee (Prévost #641092) between both ends of the black nylon tube.

3. Connect one end of the black nylon tube (Prévost #503402) to the tee then route the tube down towards the spare wheel compartment under the entrance steps.

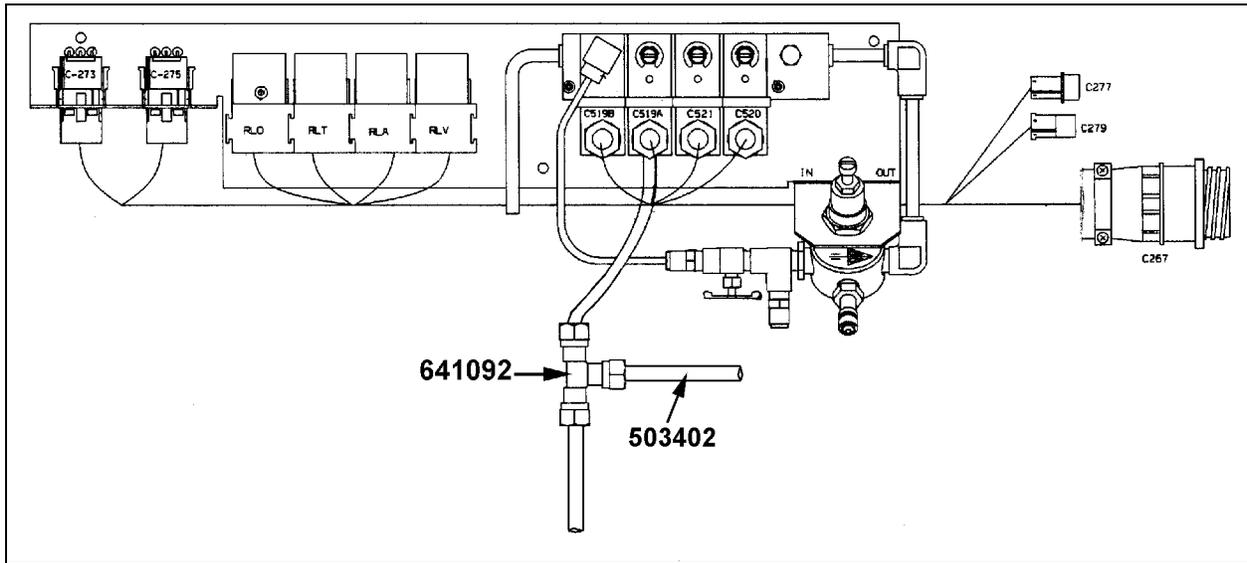


FIGURE 2: LOCATION OF MANIFOLD BEHIND DASHBOARD FINISHING PANEL

4. Remove finishing panel covering entrance door locking cylinder. Disconnect small tubing from cylinder exhaust elbow. Connect black nylon tube routed underneath the steps to the cylinder exhaust elbow.

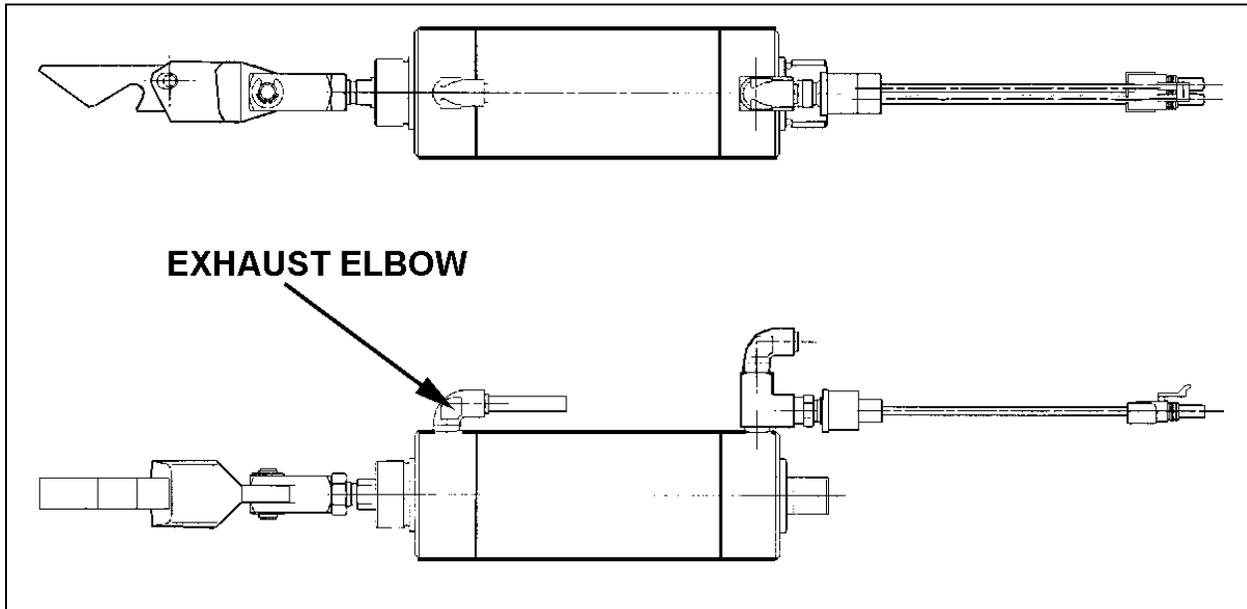


FIGURE 3: ENTRANCE DOOR LOCKING CYLINDER

5. Reinstall finishing panels.