



# MAINTENANCE INFORMATION

**MI20-85**

DATE : 01	September 2020	SECTION : 06 GENERAL
SUBJECT :	<b>OBD CONNECTOR USCAN</b>	

First Release

09-01-2020

## APPLICATION

Model
Volvo 9700 Model Year : 2013 - 2020

## DESCRIPTION

On the vehicles affected by this bulletin, the ODB plug is not properly fixed; this problem may not be present in all buses.

**This information only applies whenever needed.**

## MATERIAL

No parts needed for this bulletin

Other parts that may be required:

Part No.	Description	Qty
N/A	Cutting plyers	1

## PROCEDURE



### DANGER

Park vehicle safely, apply parking brake, stop engine. In the battery box, set the battery cut-off switch to the OFF position prior to working on the vehicle.

Lock out & Tag out (LOTO) must be performed during set-up, maintenance or repair activities. Refer to your local procedure for detailed information regarding the control of hazardous energy..

1. Locate the OBD connector under the dashboard, next to the steering column.

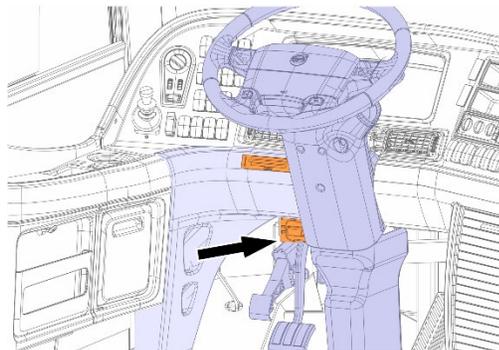


FIGURE 1

2. Remove the connector from its bracket.

Carefully press the locks and push the connector

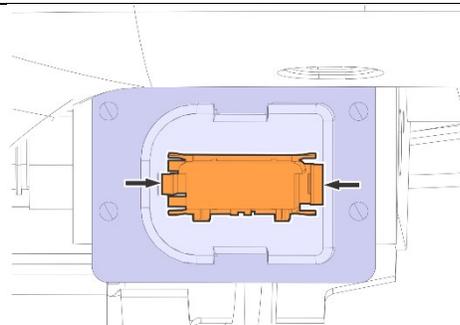


FIGURE 2

3. Cut excess of plastic from the connector.


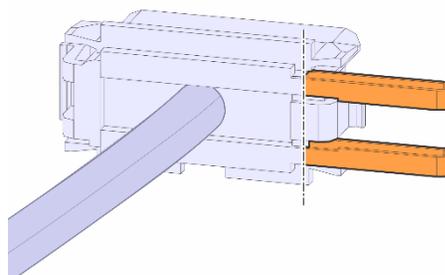


FIGURE 3

4. Install the connector back to its support.

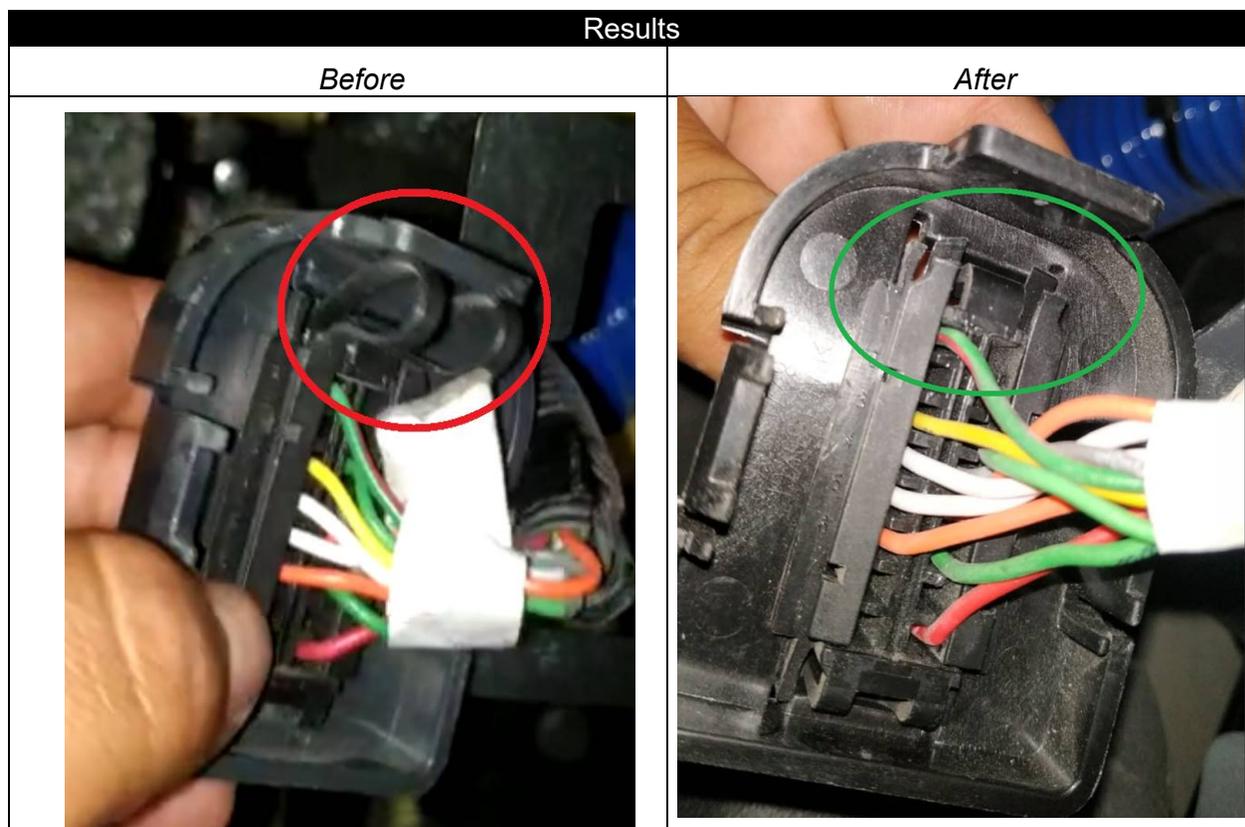

## PARTS / WASTE DISPOSAL

Discard according to applicable environmental regulations (Municipal/State[Prov.]/ Federal)