

# PREVOST

## Instruction Sheet

## IS-23516


### INSTALLATION OF MUDGUARDS BETWEEN REAR WHEELS

First Release

09-14-2023

#### MATERIAL

Kit #IS23516 includes the following parts:

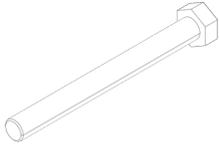Part No	Description		Qty
460566P	MUDGUARD ASSEMBLY CURBSIDE		1
460565P	MUDGUARD ASSEMBLY STREET SIDE		1
5001185	SCREW HEX SS NSS M8X80 PT		8
500270	WASHER FLAT SS .406X1.000X.063		16
5001787	NUT HEX NYRT SS M8-1.25X9.5		8
IS-23516	Instruction Sheet		1
FI-23516	Feuille d'instructions		1

#### **NOTE**

Material can be obtained through regular channels.

## SAFETY PRECAUTIONS

- Eye protection should always be worn when working in a shop.
- Rules for Personal Protection Equipment should always be respected. Wear your PPE including but not limited to the following:



# Safety First!



## PROCEDURE




### DANGER

Park vehicle safely, apply parking brake, stop engine. Prior to working on the vehicle, set the ignition switch to the OFF position and trip the main circuit breakers equipped with a trip button. On Commuter type vehicles, set the battery master switch (master cut-out) to the OFF position.


Lock out & Tag out (LOTO) must be performed during set-up, maintenance or repair activities. Refer to your local procedure for detailed information regarding the control of hazardous energy.

## MUDGARD CURBSIDE


1. Remove right fender.

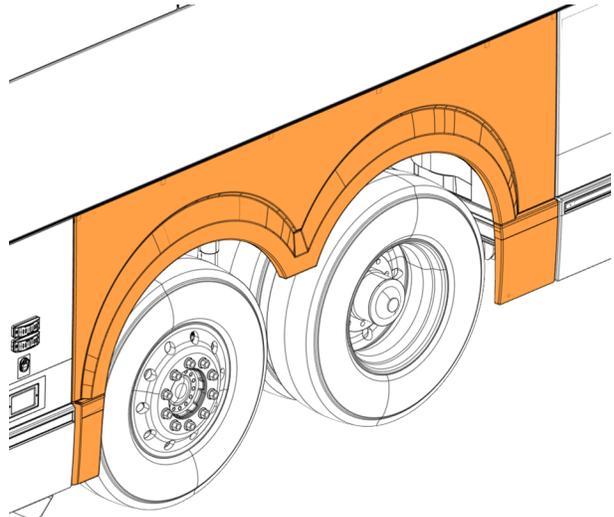


2. Clean the structure supporting the mudguard.

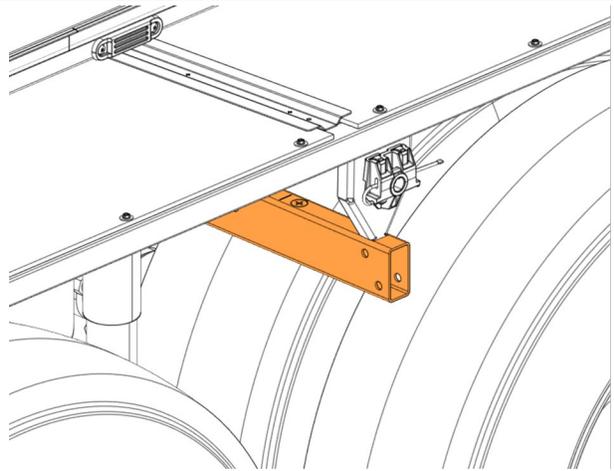

3. Secure the mudguard 460566P with screws 5001185(4x), washers 500270(8x) and nuts 5001787(4x).

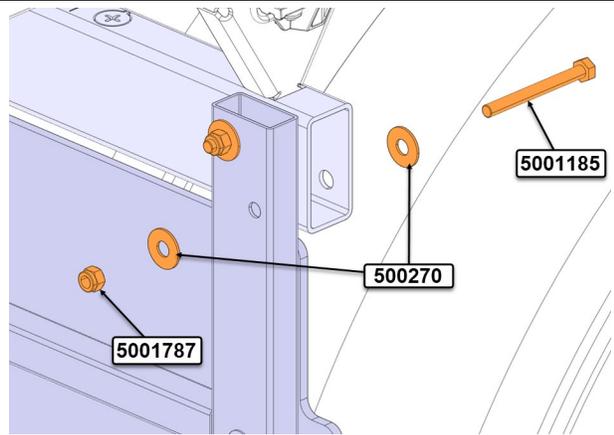


4. Reinstall right fender.

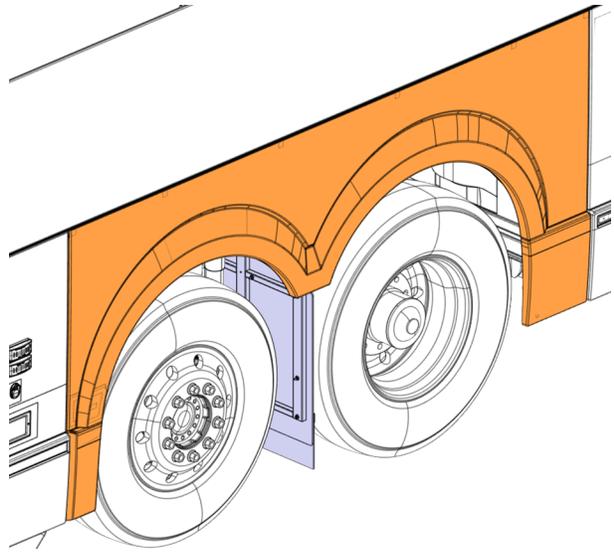


### MUDGUARD STREET SIDE


1. Remove left fender.

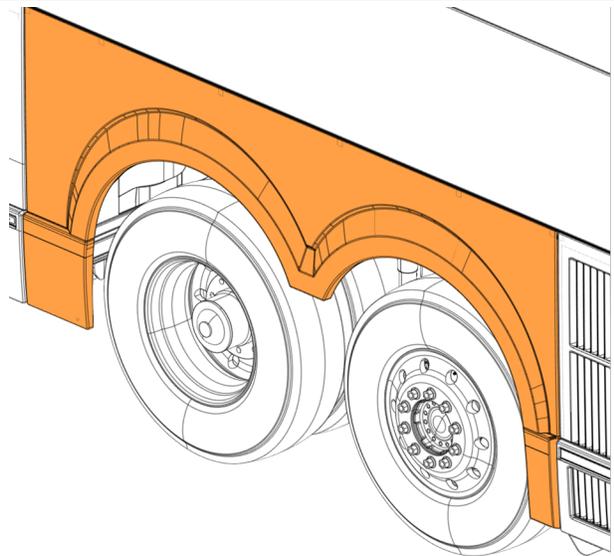


2. Clean the structure supporting the mudguard.

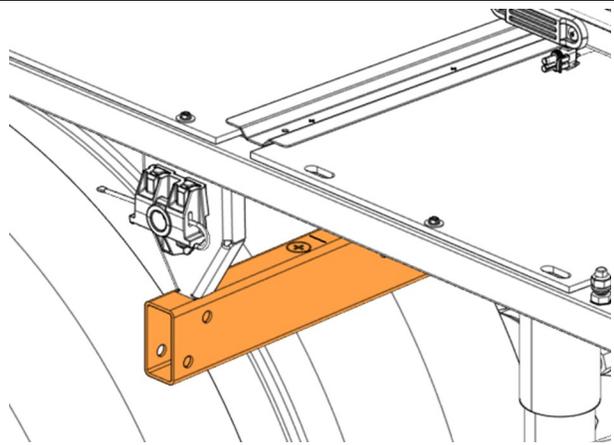

3. Secure the mudguard 460565P with screws 5001185(4x), washers 500270(8x) and nuts 5001787(4x).

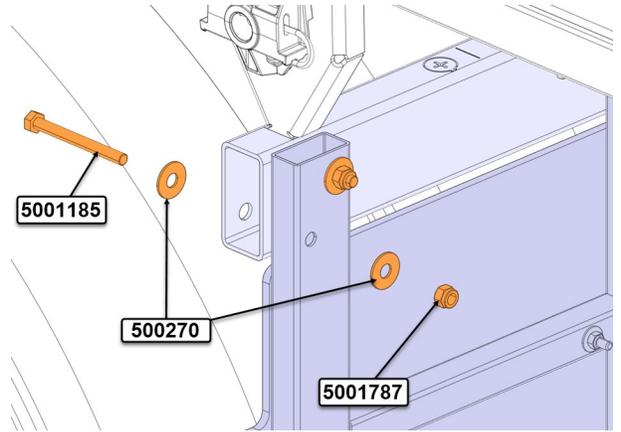

4. Reinstall left fender.

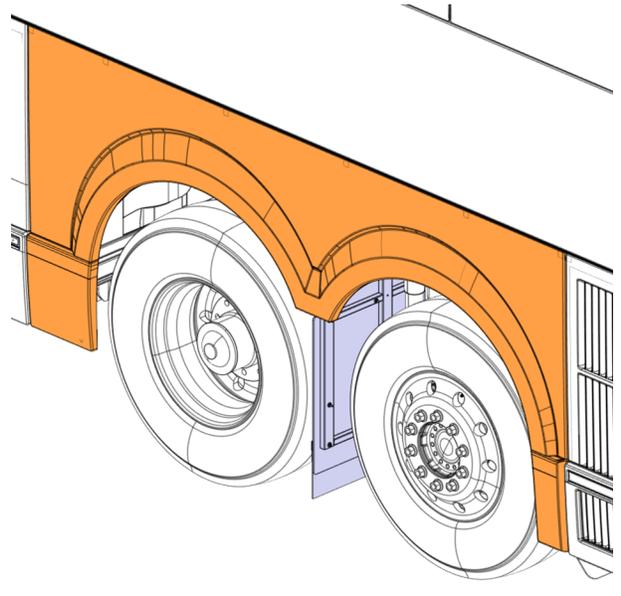

## PARTS / WASTE DISPOSAL

Discard waste according to applicable environmental regulations (Municipal/State[Prov.]/ Federal)