

### INSTALLATION GUIDE FOR FRESH AIR DAMPER CONTROL ON CENTRAL A/C SYSTEM

#### MATERIAL

Kit #065394 includes the following parts :

Part No.	Description	Qty
065393	Harness + heat shrinking sleeve	1
IS-00061	Instruction Sheet	1
FI-00061	Feuille d'instructions	1

#### PROCEDURE

**Warning :** Park vehicle safely, apply parking brake, stop engine and set battery master switch(es) to the OFF position prior to working on the vehicle.

1. Open front electric and service compartment door (figure 1).
2. Locate relay R101. Remove wire 12W from port 87 of relay R101 and isolate its extremities with a small piece of heat shrinking sleeve (figure 1).
3. Plug one end of harness #065393 to port 87 of relay R101 (figure 1).
4. Route harness #065393 into the lower part of the compartment.
5. Locate wire 67B among connector C9 wiring. Cut it and remove a part of isolating sleeve on each end.
6. Place a piece of heat shrinking sleeve on each end and crimp to the remaining ends of harness #065393. Heat the sleeves.
7. Secure all wires with nylon ties.
8. The installation is now completed.

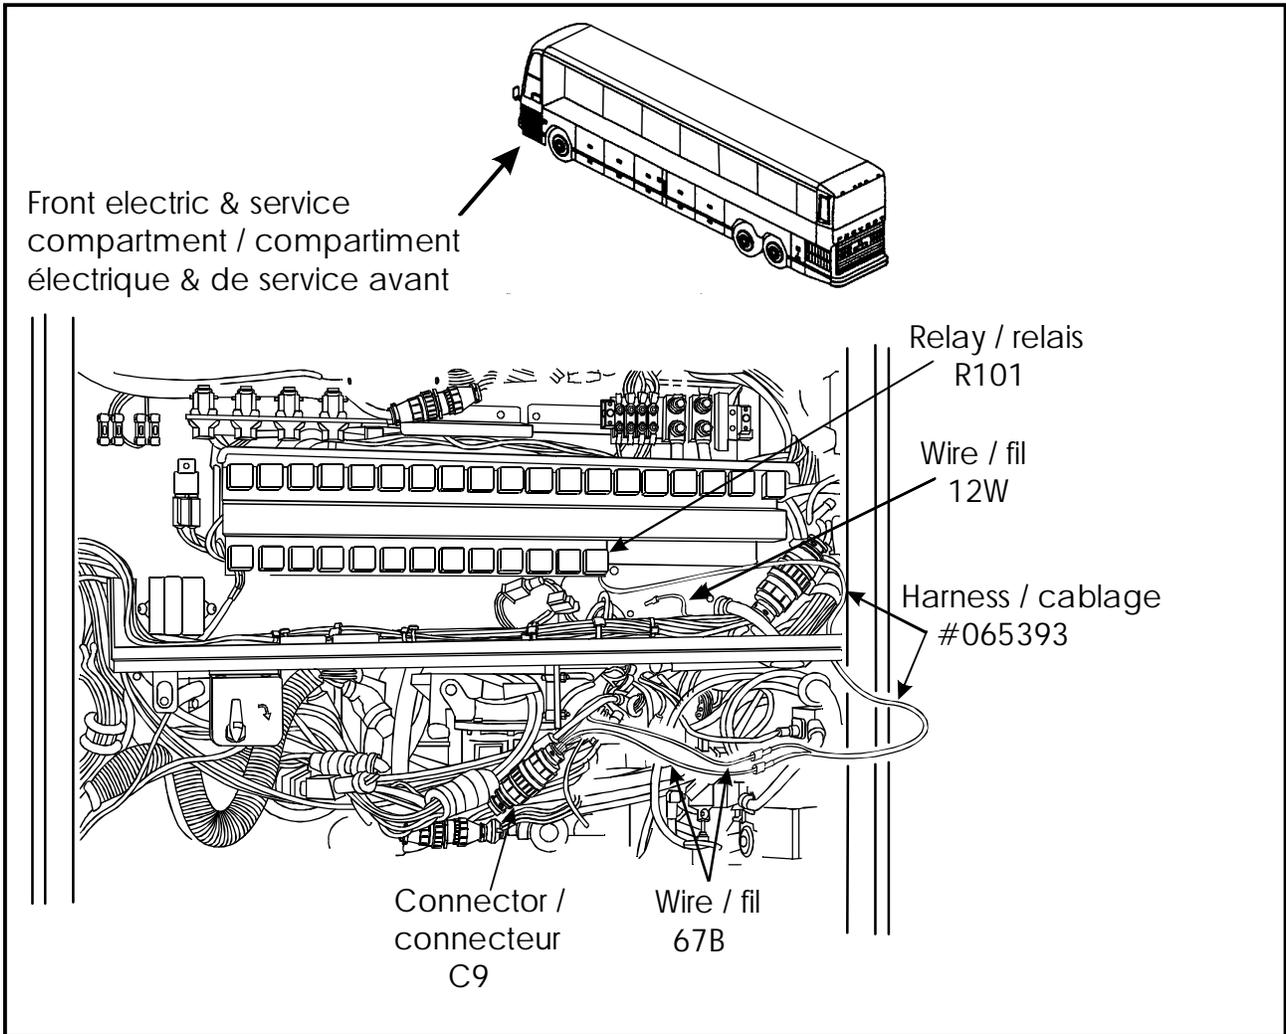


FIGURE 1 : FRONT ELECTRIC AND SERVICE COMPARTMENT