



PREVOST.
THE ULTIMATE EXPERIENCE

Wiring Schematic Aftermarket Electric Fan Drive KIT

EFD X345 US10 to OBD16

EFD with Bosch Alternator KIT # IS19901

EFD with Remy Alternator KIT # IS19912


Apply to All X3 model from B-5002 up to H-6180/H-7417

March 2019


Fan Shroud installation



LH alternator

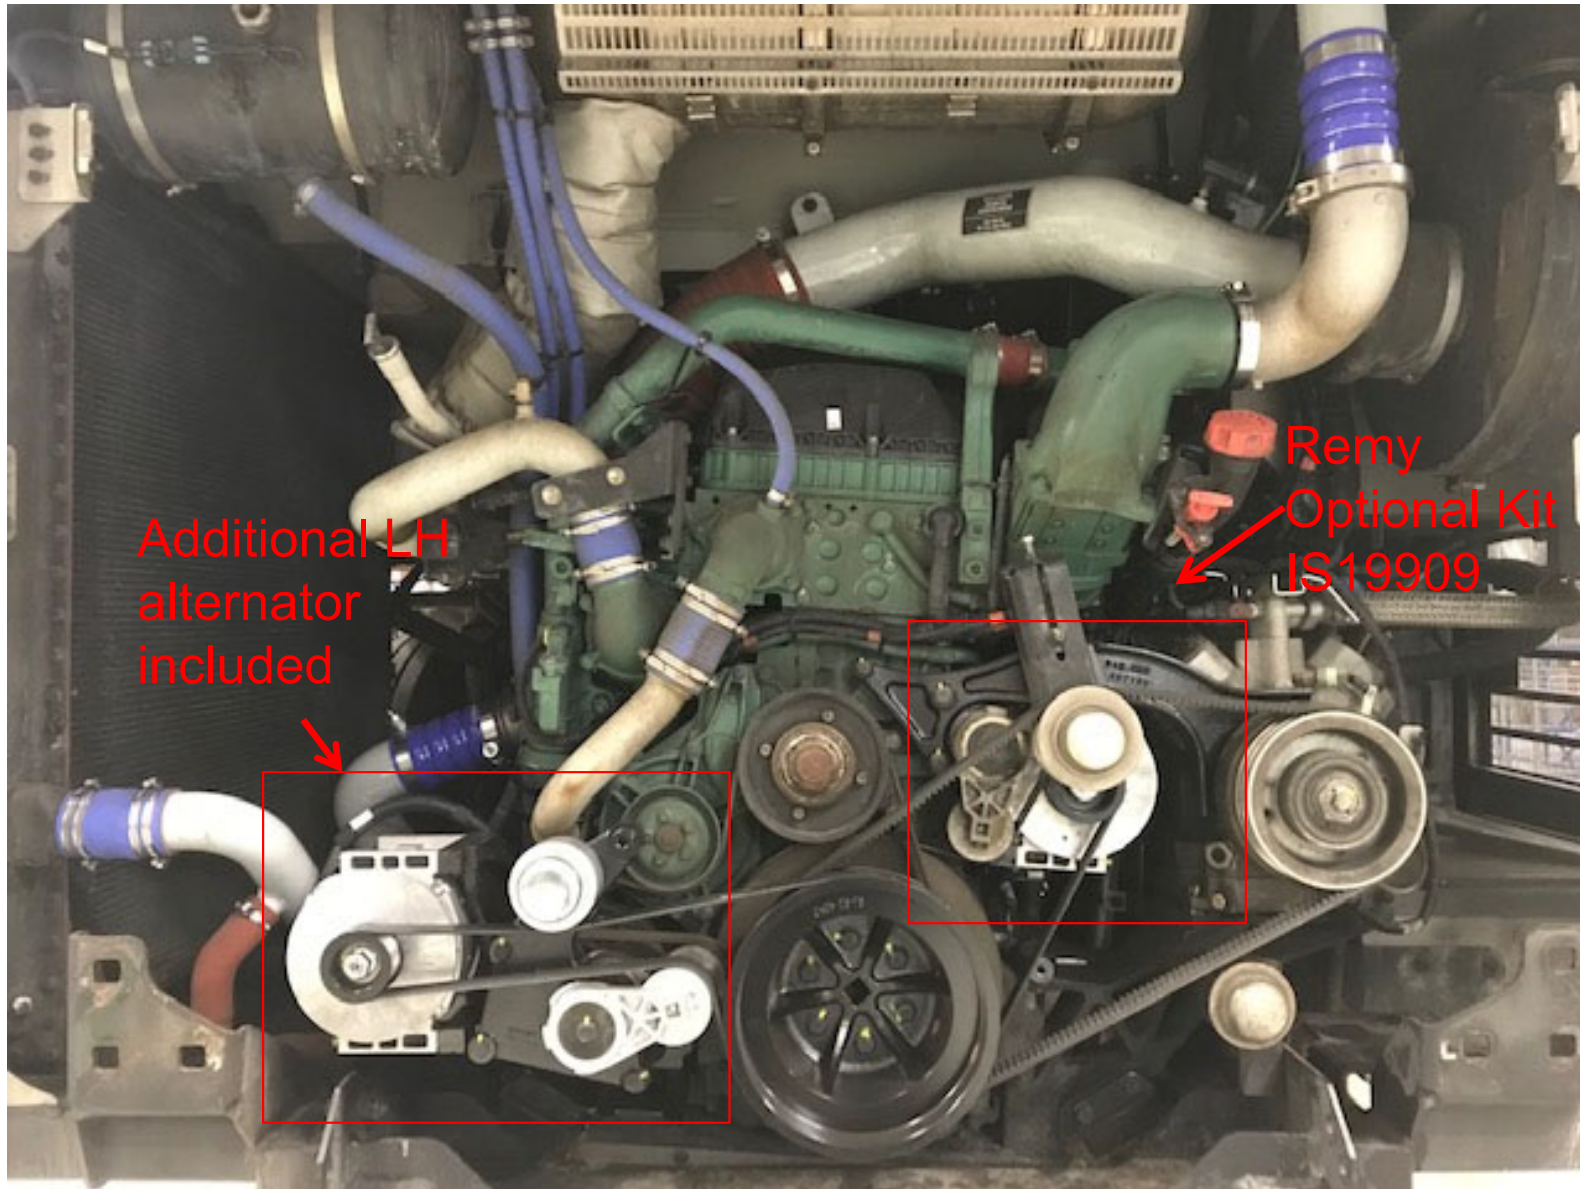


Control in RJB

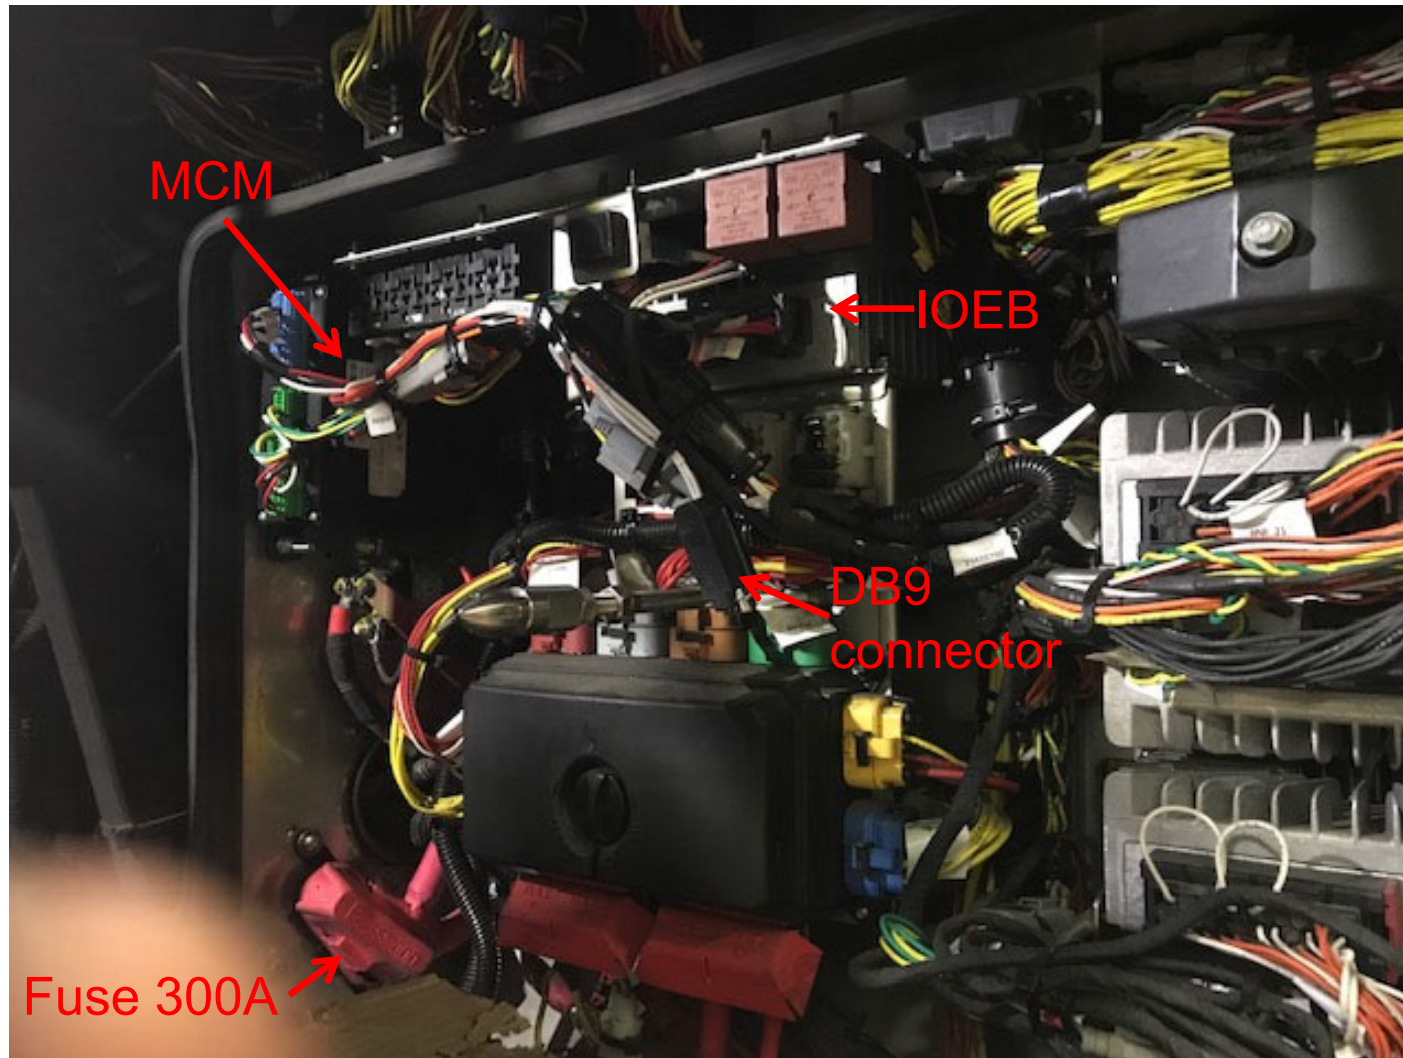


MCM programmed



Fuse 300A

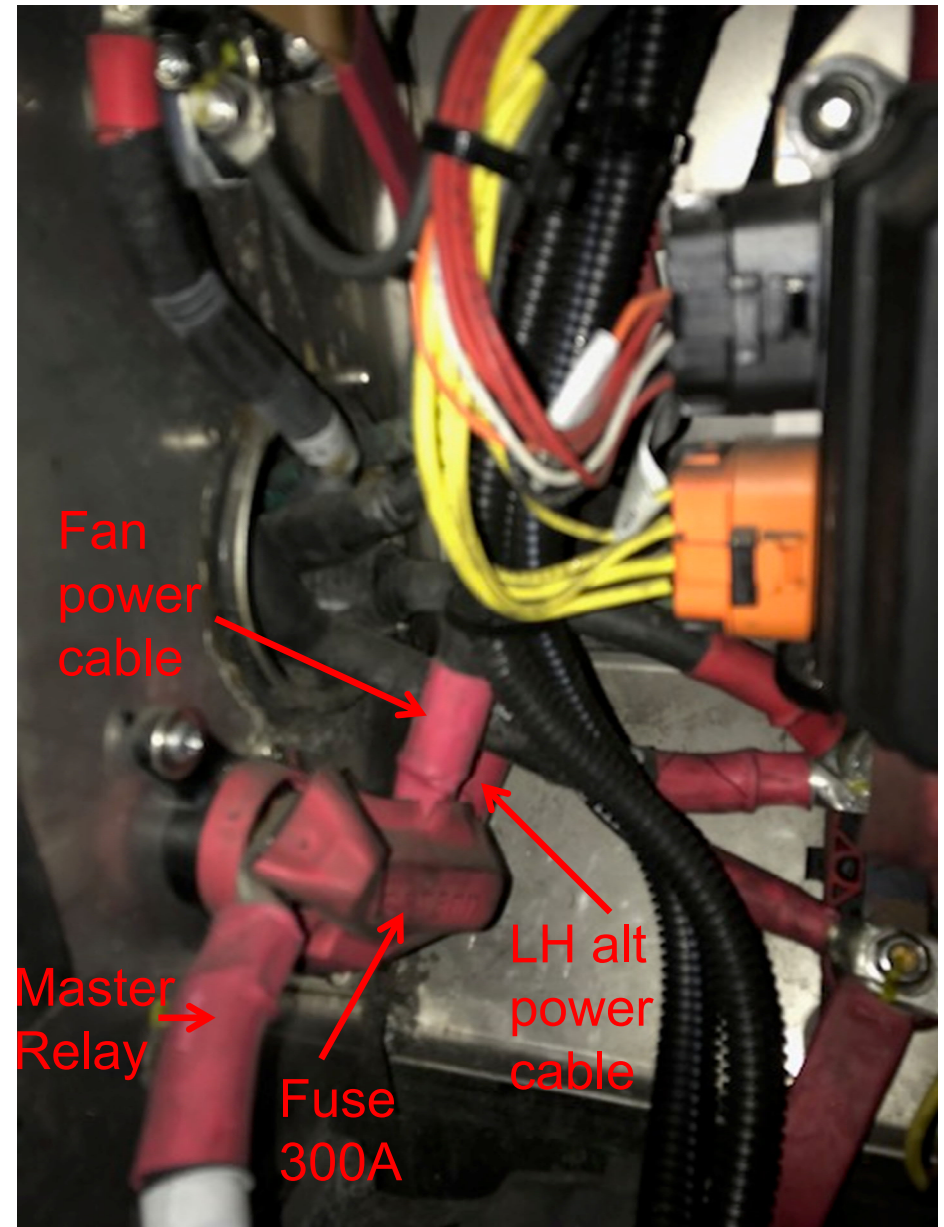


LH Alternator cable

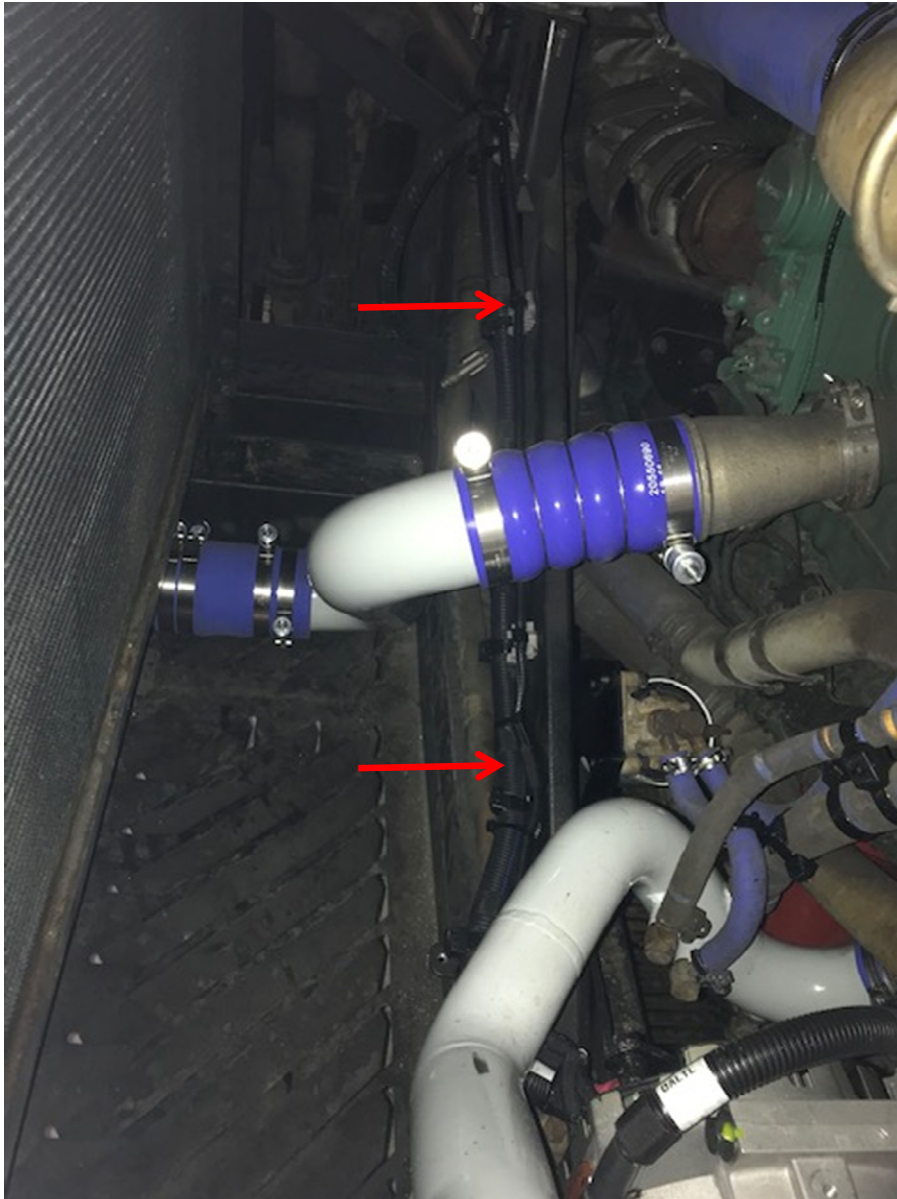


CAC & RAD Pipe



WIRING HARNESS AND BATTERY CABLE

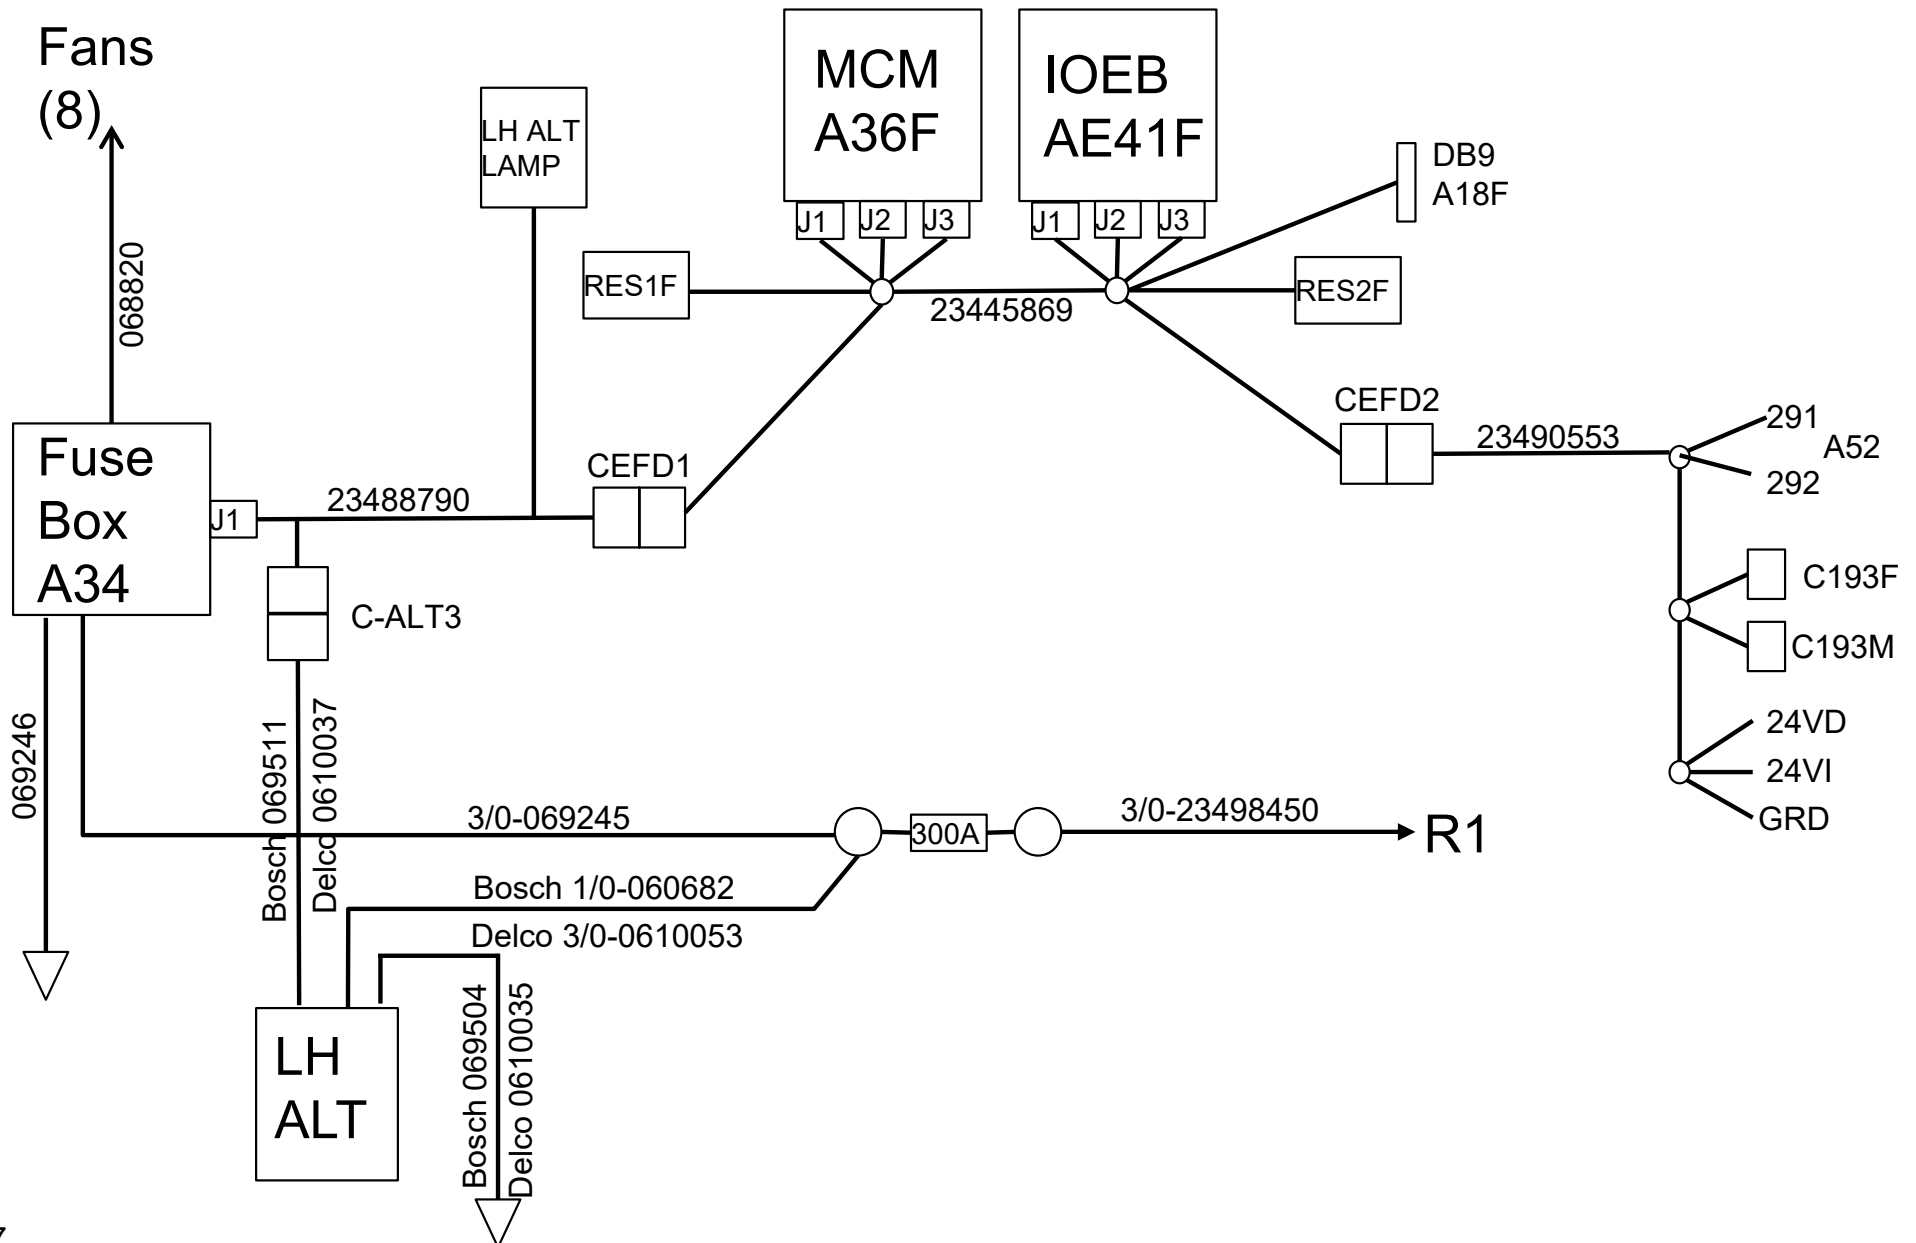


WIRING DIAGRAM MCM

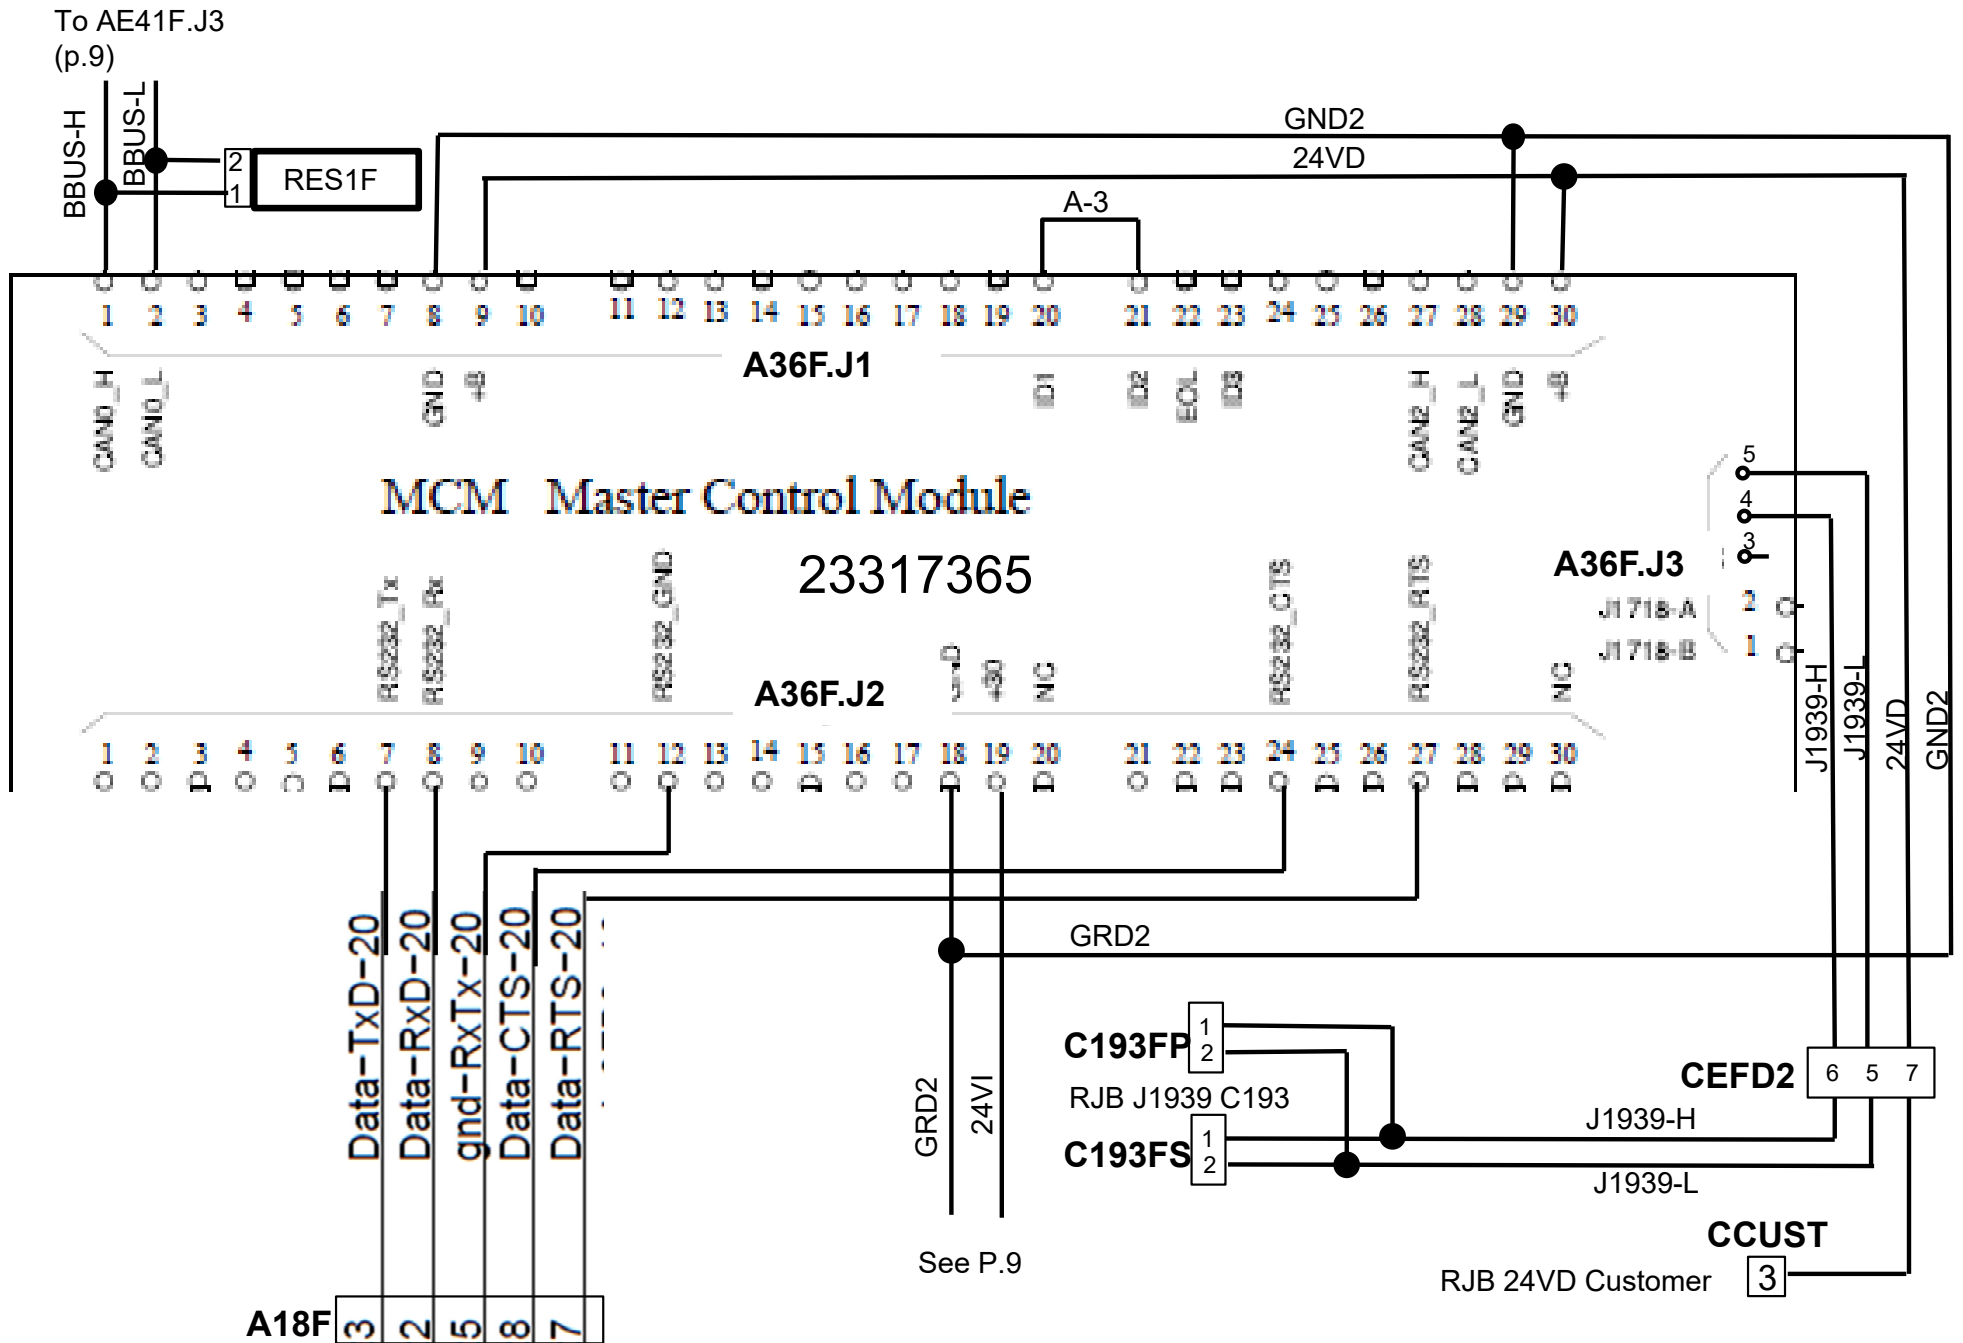


WIRING DIAGRAM I-O module


IO-EB (22722850)

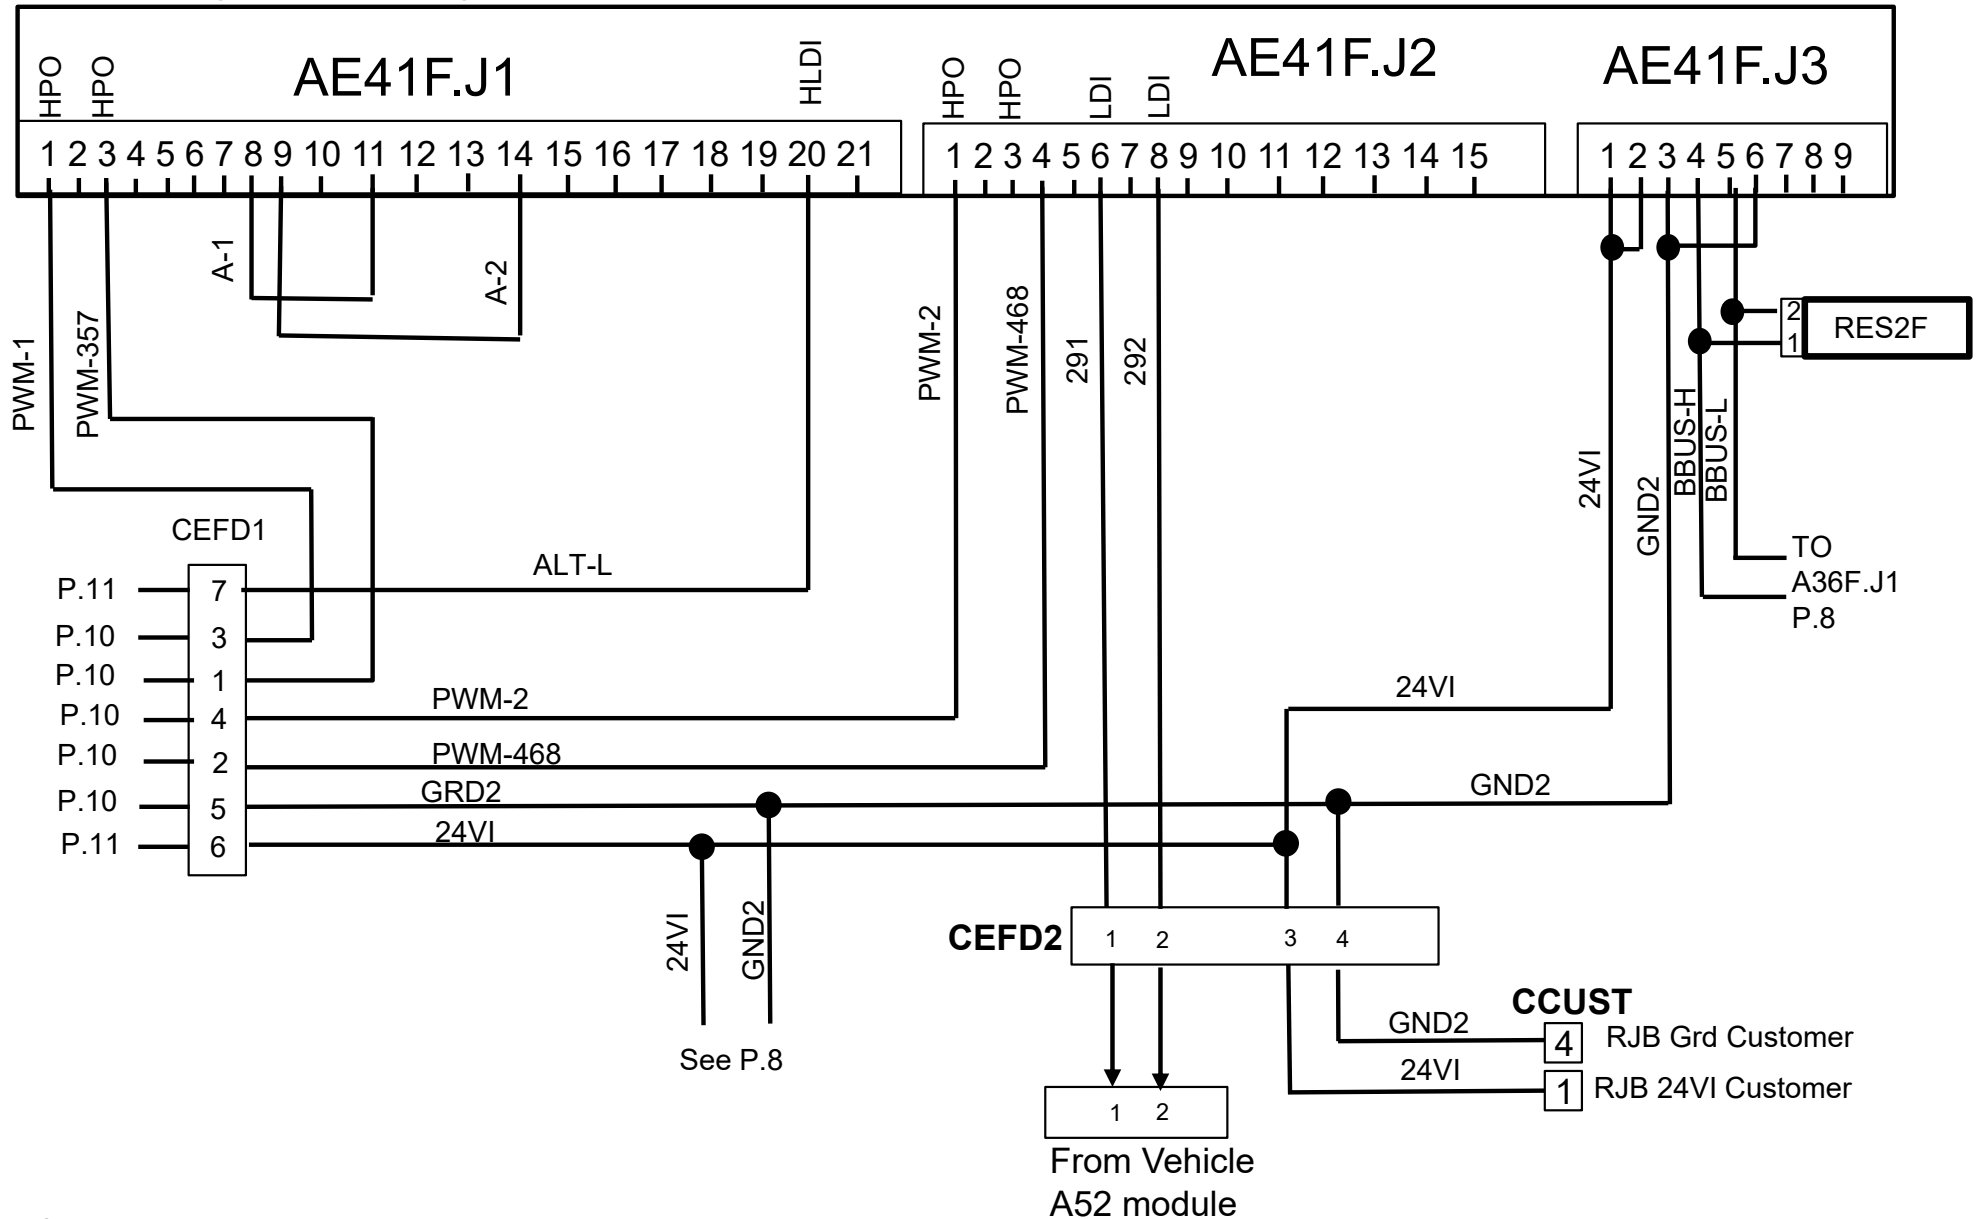


WIRING DIAGRAM FAN

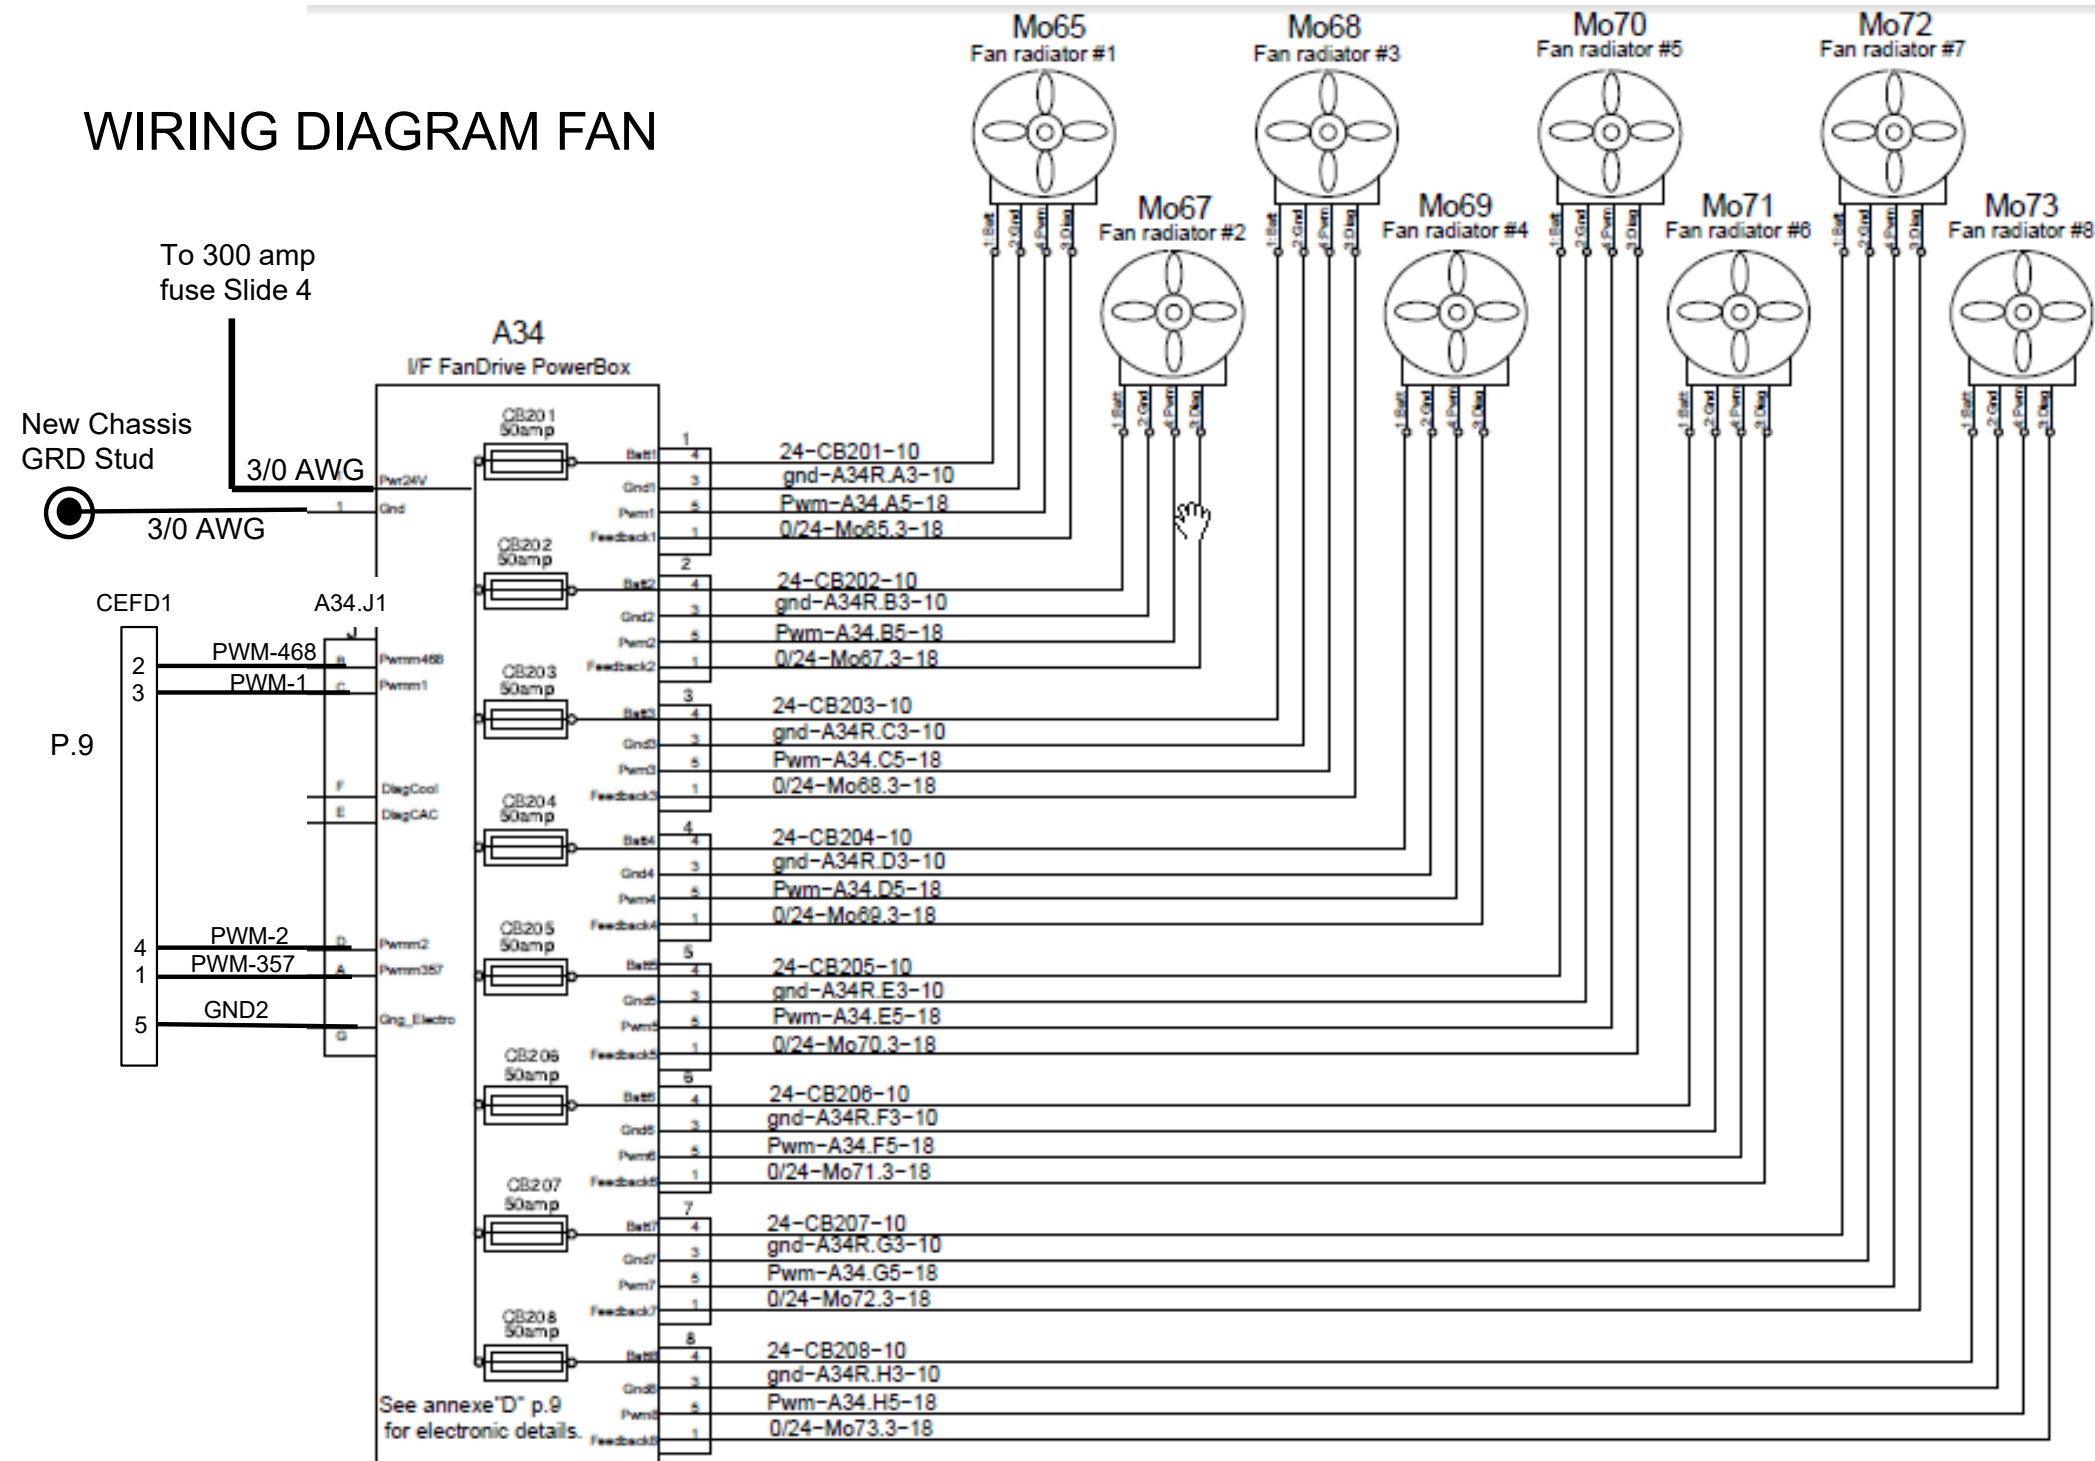


3RD BOSCH ALT WIRING DIAGRAM

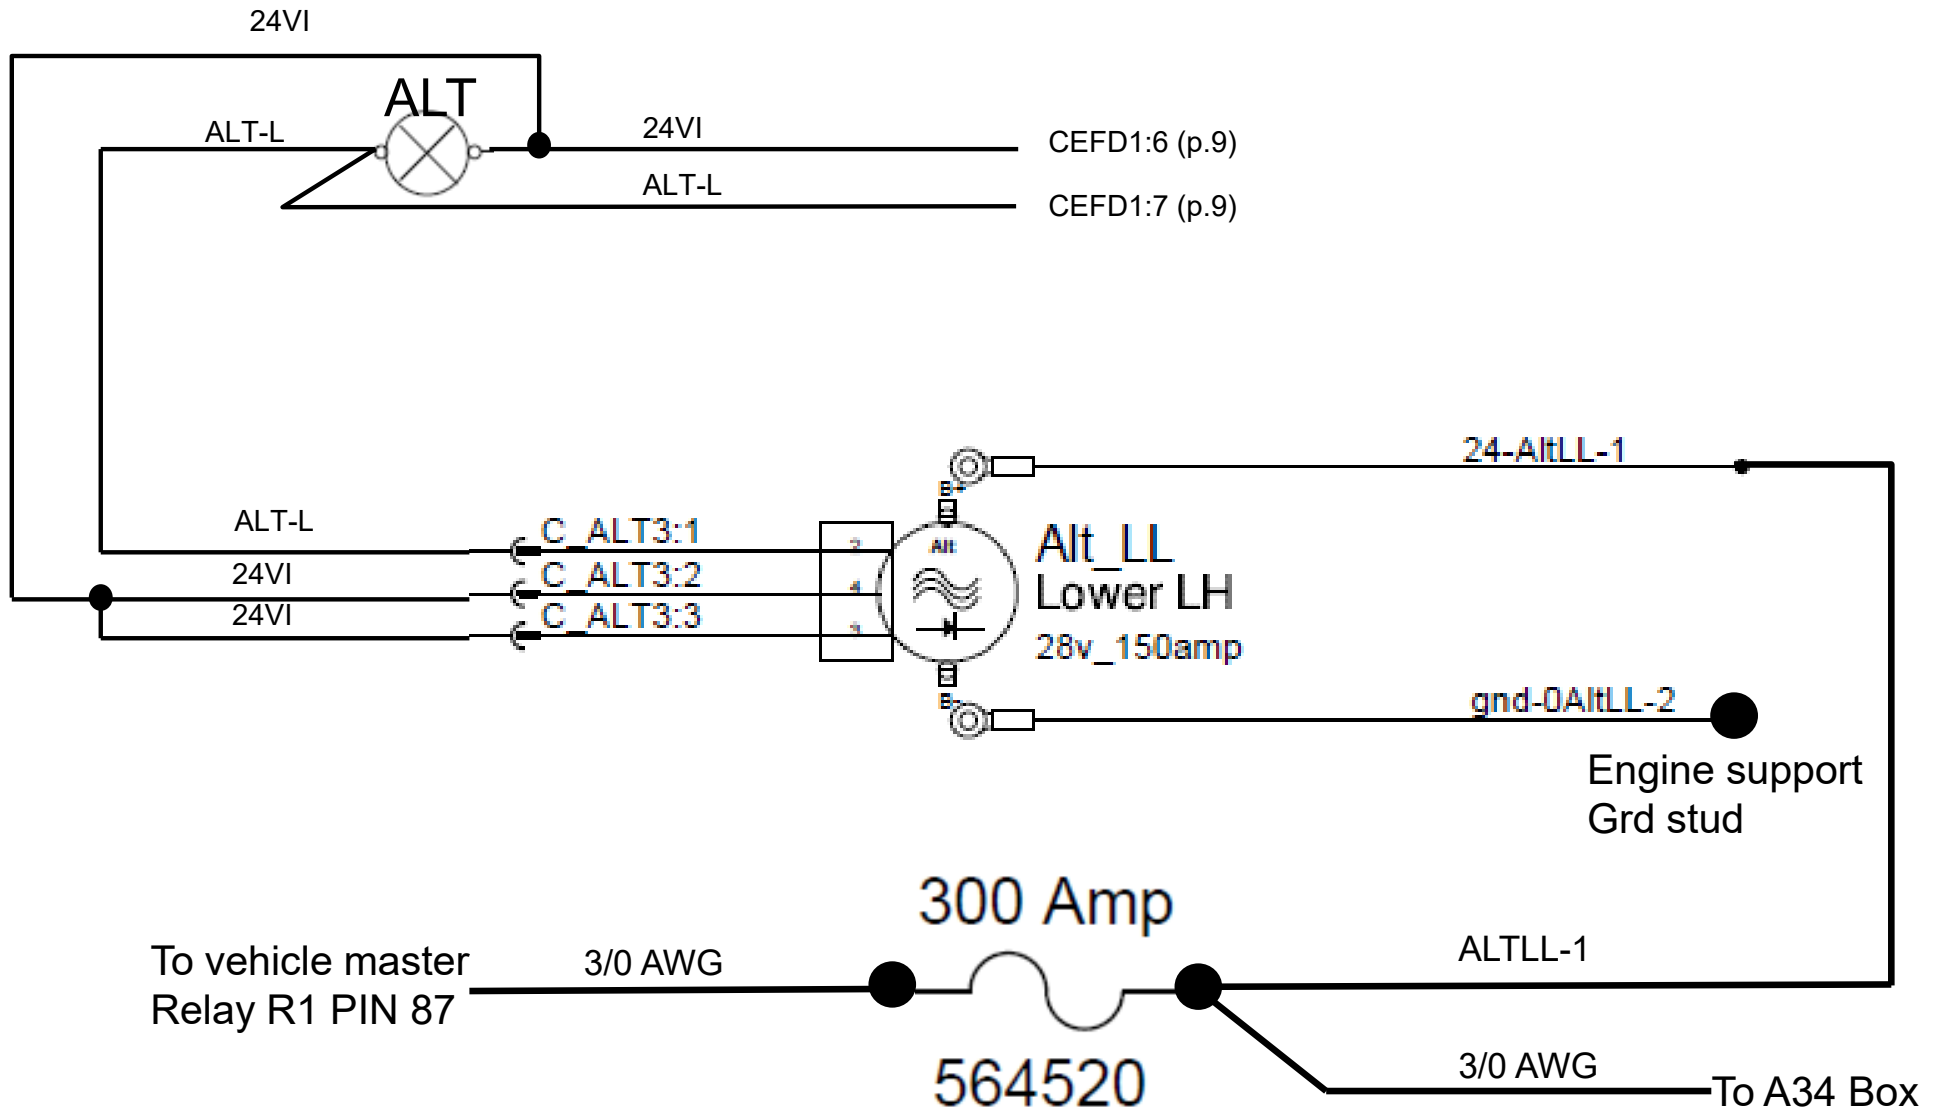

2ND DELCO ALT WIRING DIAGRAM

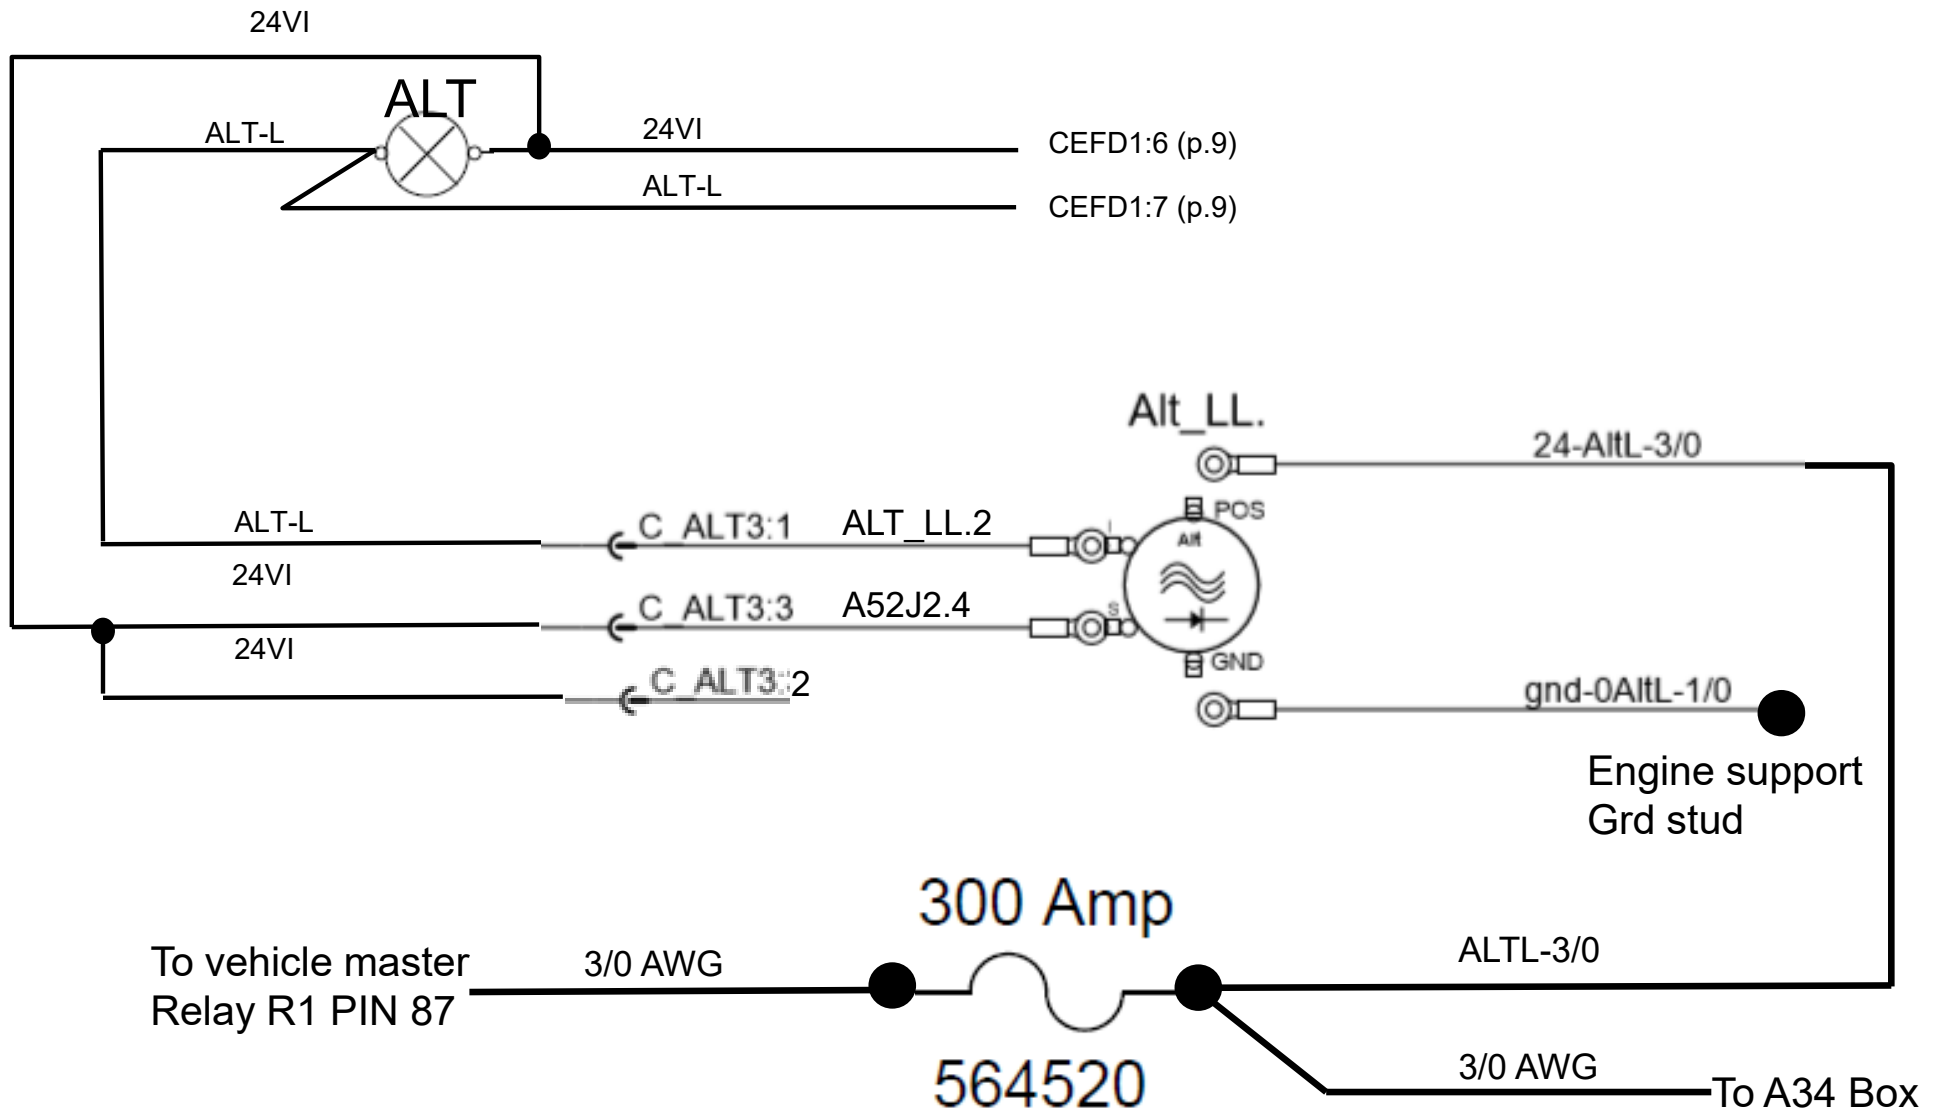

X345 with Driver's AC only

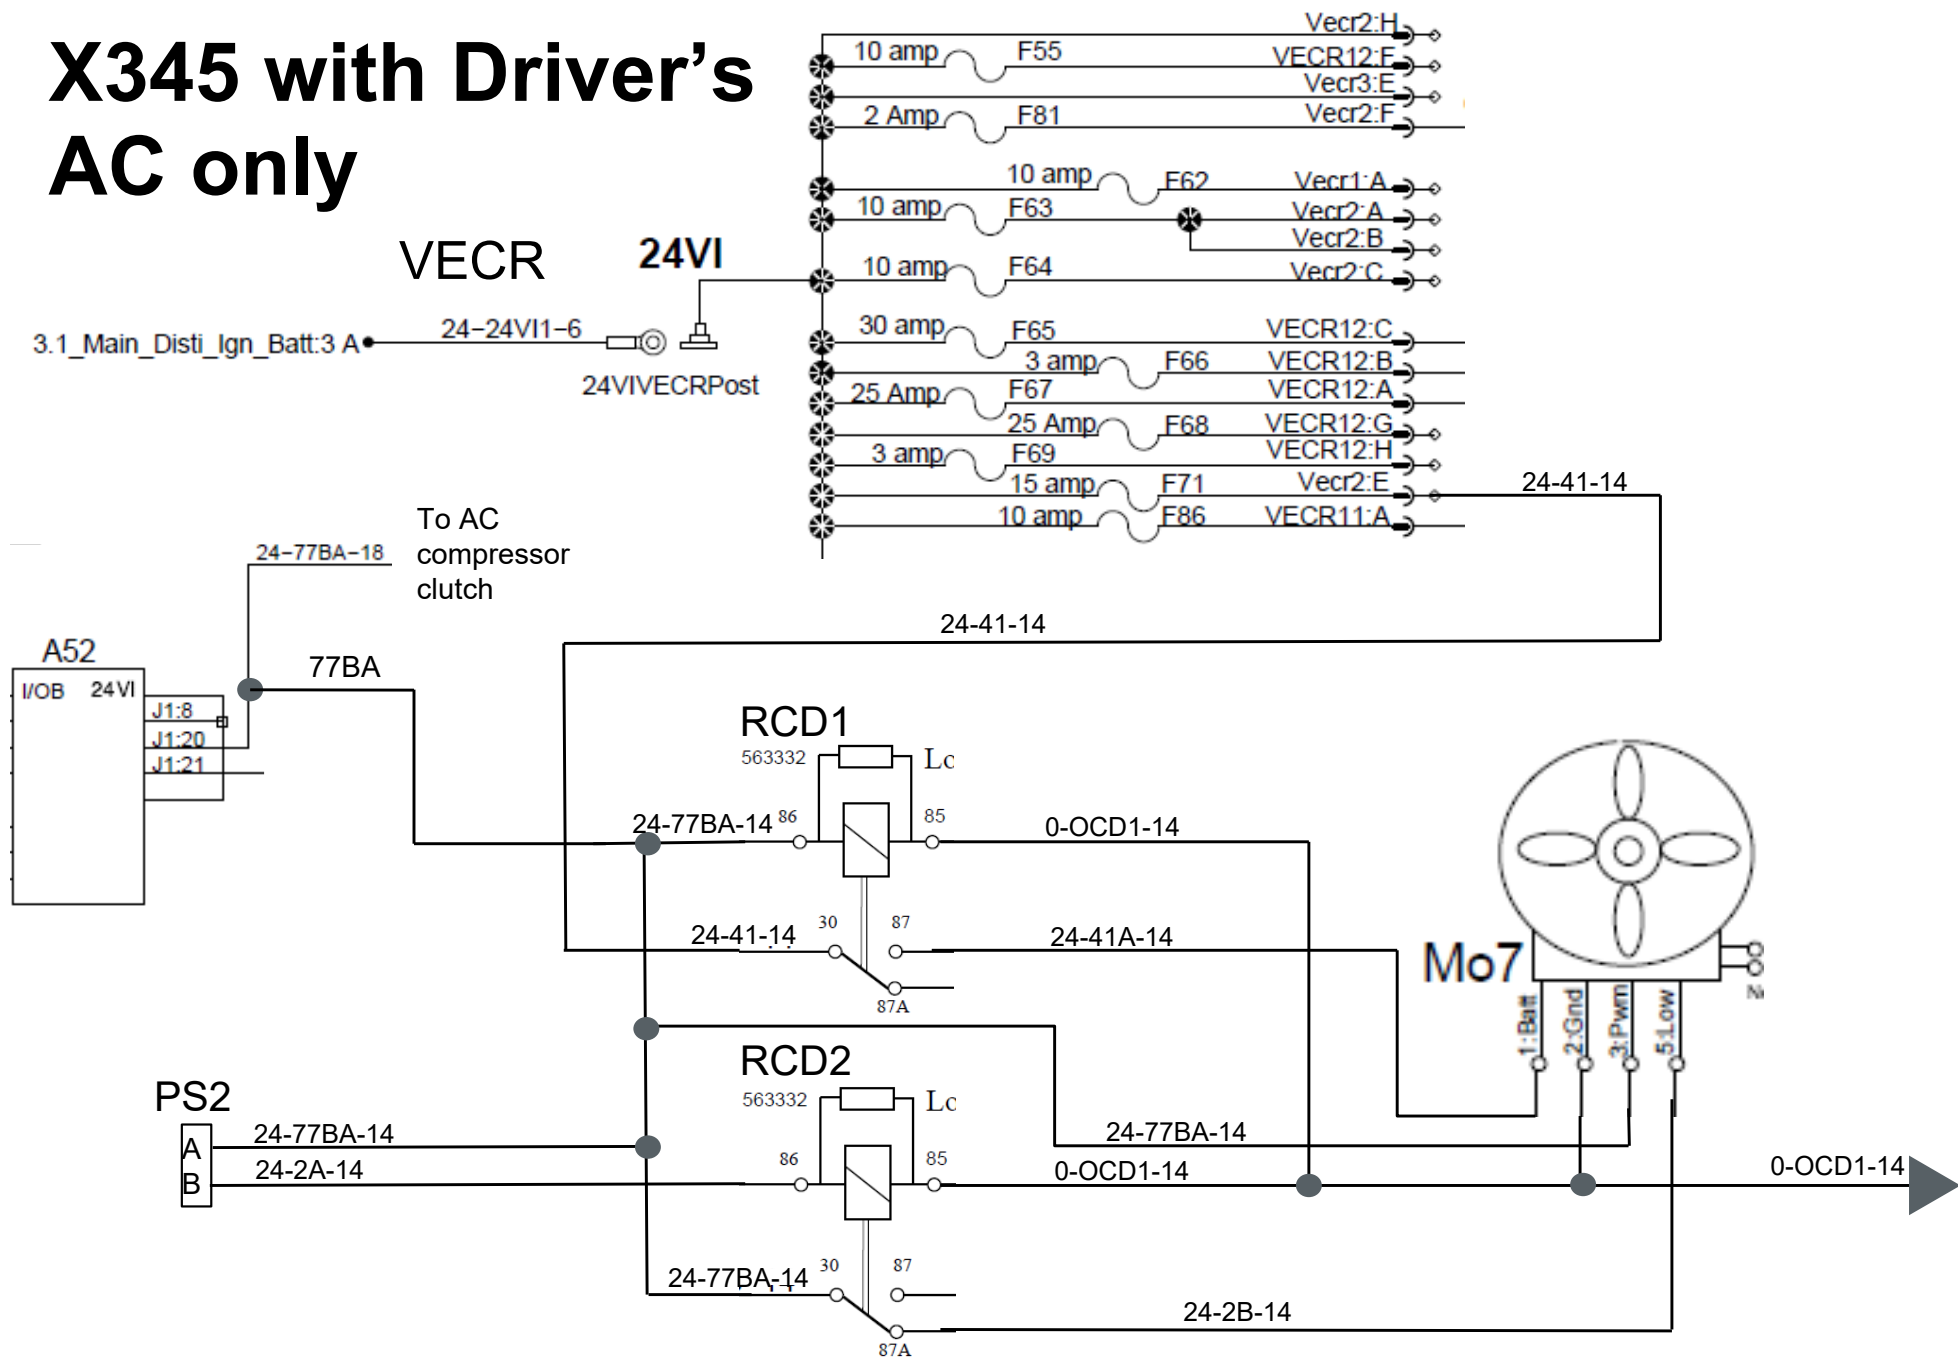

**THE ULTIMATE
EXPERIENCE**



PREVOST.