

### MIRROR UPPER SUPPORT RETROFIT KIT

#### APPLICATION

X3-45 coaches

#### MATERIAL

Kit #409347 includes the following parts:


Part No.	Description	Qty
409348	Molding, plastic	1
409349	Molding, steel	1
409350	Support, mirror	1
506236	Foam tape, self-adhesive 1/16"x1/2"x23"	1
IS-10057	Instruction Sheet	1
FI-10057	Feuille d'instructions	1

#### PROCEDURE



#### DANGER

Park vehicle safely, apply parking brake, stop engine and set battery master switch(es) to the OFF position prior to working on the vehicle.

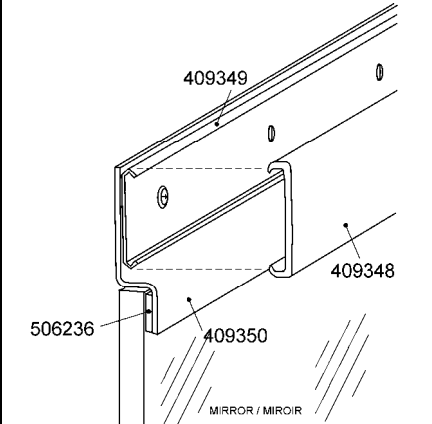

1. Apply the foam tape #506236 as shown along mirror support #409350.
2. Fix the mirror support and the steel molding #409349 with appropriate screws.
3. Finally, snap the plastic molding #409348 in place.