

PREVOST

ENREGISTRÉ - REGISTERED
ISO 9001 & ISO 14001

**WARRANTY
BULLETIN**

Wb99-06



DATE: March 1999	SECTION : 18 - Body
EXPIRATION: March 2000	
SUBJECT: ADDITION OF A MOULDING TO THE DOOR-LESS PARCEL RACKS	

APPLICATION

Model	VIN
H3 Coaches with RICON-9000 wheelchair lift system Model year: 1999	2PCH33491X1012760
H3-41 Coaches Model year: 1998 - 1999	2PCH33416W1012469, 2PCH33413X1012768 and 2PCH33412X1012826
H3-45 Coaches* Model year: 1998 - 1999	From 2PCH33497W1012292 up to 2PCH33492X1012881 incl.

* Only vehicles with a majority of door-less parcel racks are affected.

DESCRIPTION

On the above-mentioned vehicles, it is necessary to add a moulding to the **door-less** parcel racks in order to reduce the risks of injuries.

MATERIAL

- H3 Coaches with RICON-9000 wheelchair lift system: Order kit **#312997**.
- H3-41 Coaches: Order kit **#312995**.
- H3-45 Coaches: Order kit **#312977**.

Note: Material can be obtained through regular channels.

PROCEDURE

Warning: Park vehicle safely, apply parking brake, stop engine and set battery master switch(es) to the OFF position prior to working on the vehicle.

1. Locate the bottom of the door-less parcel racks and the location of the new moulding to be installed (figure 1). Using alcohol, clean the area of each door-less parcel racks where the new moulding will be installed.
2. Remove the tape underneath one moulding.
3. Install the new moulding on the parcel rack, as shown on figure 2, item 2. Make sure that each moulding is located symmetrically between two vertical supports (figure 2, item 1). Press the moulding firmly in place to be sure it is flat.
4. Using the moulding holes as a guide, drill holes into the parcel rack and fix the moulding using the screws included in the kit.

Note: It is recommended to use a bit smaller than 0,4 in (10 mm) otherwise when drilling, its contact inside the parcel rack might break it.

5. Affix and screw the moulding on to every door-less parcel rack.

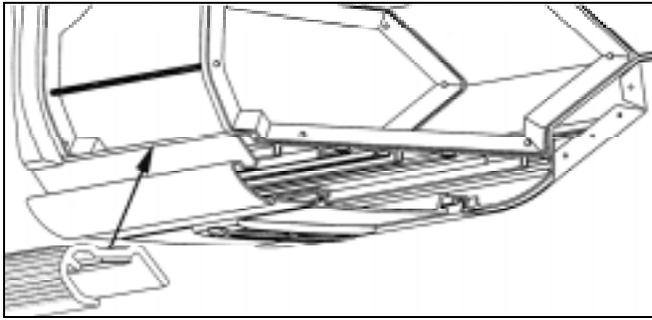


Figure 1: Door-less parcel racks and the new moulding.

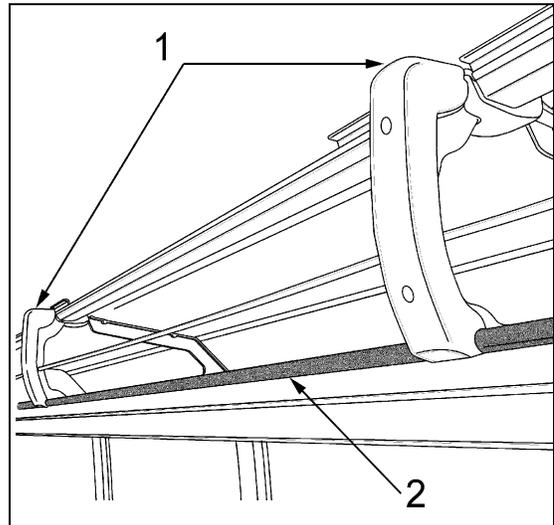


Figure 2: Door-less parcel racks. (1) Vertical supports; (2) New moulding.

WARRANTY

This modification is covered by Prévost Car's normal warranty. We will reimburse you the parts and 45 minutes of labor upon receipt of a completed A.F.A. form on which you must specify as per "Warranty Bulletin 99-06".

Parts disposition:

- Discard according to applicable environmental regulations (Municipal/State[Prov.]/ Federal)