

PREVOST

Instruction Sheet

IS-19071

WHEELCHAIR LIFT (WCL) HANDLE CLAMPS REPLACEMENT

First Release

09-26-2019

MATERIAL

Kit #IS19071 includes the following parts:

Part No.	Description	Qty
504201	LOC CLAMP WITH TREE	2
502768	WASHER FLAT RUBBER .312X.625X.125 (M8, 5/16)	2
IS-19071	INSTRUCTION SHEET (EN)	1
FI-19071	INSTRUCTION SHEET (FR)	1

NOTE

Material can be obtained through regular channels.

PROCEDURE




DANGER

Park vehicle safely, apply parking brake, stop engine. Prior to working on the vehicle, set the ignition switch to the OFF position and trip the main circuit breakers equipped with a trip button. On Commuter type vehicles, set the battery master switch (master cut-out) to the OFF position.

Lock out & Tag out (LOTO) must be performed during set-up, maintenance or repair activities. Refer to your local procedure for detailed information regarding the control of hazardous energy.

1. Install the new wheelchair lift (WCL) handle clamps.
 - Drill the head of the old clamps center rivets.
 - Remove & discard the old clamps.
 - Remove & discard the old rubber washers.
 - Re-drill the mounting holes in the door to 6.5mm (1/4in).
 - Press in place the 2 new **504201** clamps (install 2 new **502768** rubber washers under the clamps).

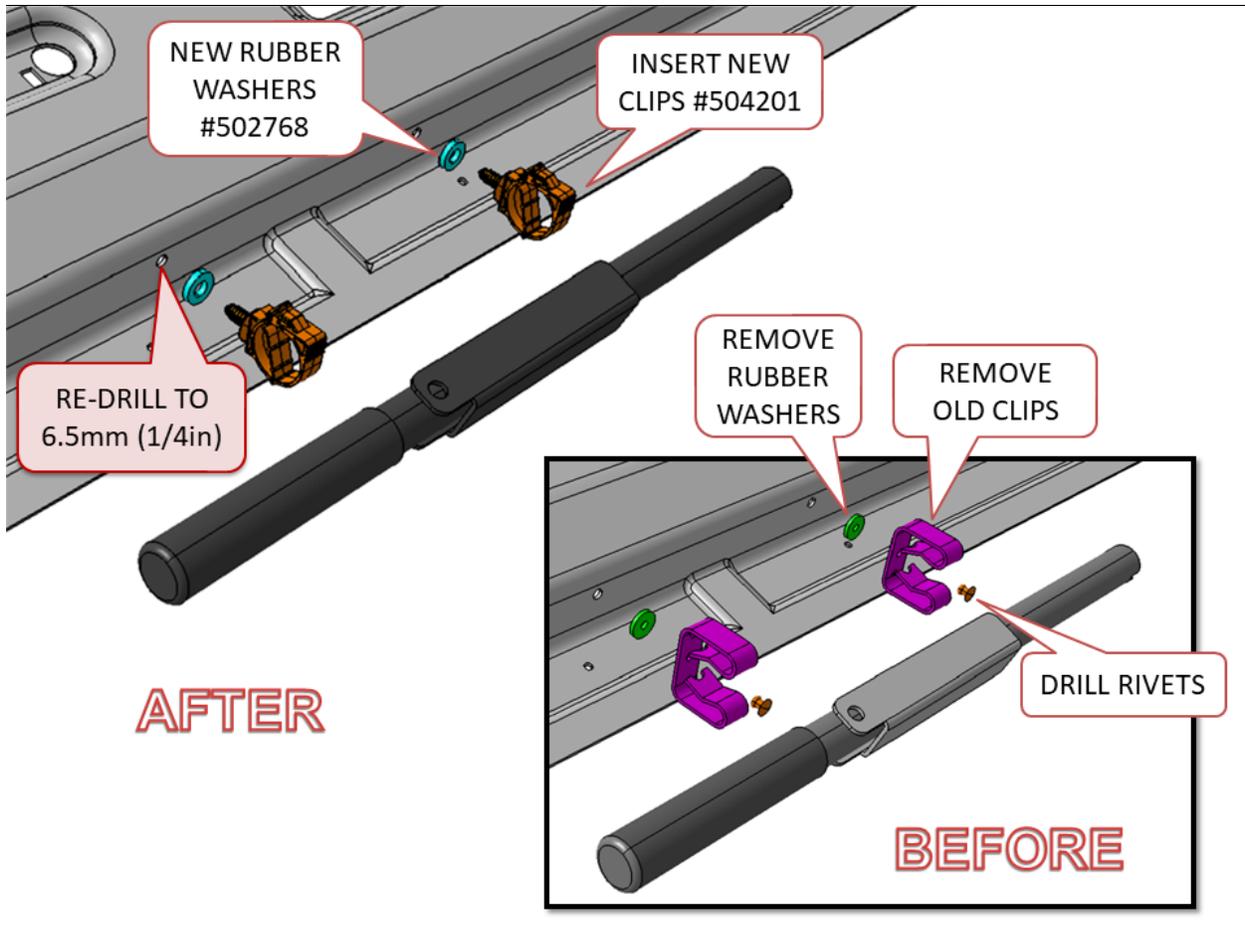

PARTS / WASTE DISPOSAL

Discard waste according to applicable environmental regulations (Municipal/State[Prov.]/ Federal)