

PREVOST

Instruction Sheet

IS-23506

H3 DVD PLAYER INSTALLATION

First Release

09-14-2023

MATERIAL

Kit #IS23506 includes the following parts:

Part No.	Description	Qty
901436	DVD PLAYER	1
901157	CABLE COAXIAL	1
N25187	VELCRO TAPE 1"X25V (6" LONG)	.5
506268	TAPE AD1 URE OP GY 3/8"X1/2"X25' (6" LONG)	.02
504273	CABLE TIE, NYLON BLACK (SMALL)	2
504637	CABLE TIE, NYLON BLACK (STD)	7
IS-23506	Instruction Sheet	1
FI-23506	Feuille d'instructions	1

Other parts that may be required:

Part No.	Description	Qty
564099	CLOTH TAPE, PROTECT. 150°C - BLACK	As required

NOTE

Material can be obtained through regular channels.

SAFETY PRECAUTIONS

- Eye protection should always be worn when working in a shop.
- Rules for Personal Protection Equipment should always be respected. Wear your PPE including but not limited to the following:



Safety First!



PROCEDURE



DANGER


Park vehicle safely, apply parking brake, stop engine. Prior to working on the vehicle, set the ignition switch to the OFF position and trip the main circuit breakers equipped with a trip button. On Commuter type vehicles, set the battery master switch (master cut-out) to the OFF position.

Lock out & Tag out (LOTO) must be performed during set-up, maintenance or repair activities. Refer to your local procedure for detailed information regarding the control of hazardous energy.

1. Install the interface support on the Radio/DVD support. The interface bracket is supplied with the DVD player.
2. Fold a tab on each side of the interface support to lock it in place.

NOTE

The interface support may be a little difficult to insert. Use a little force to insert it.

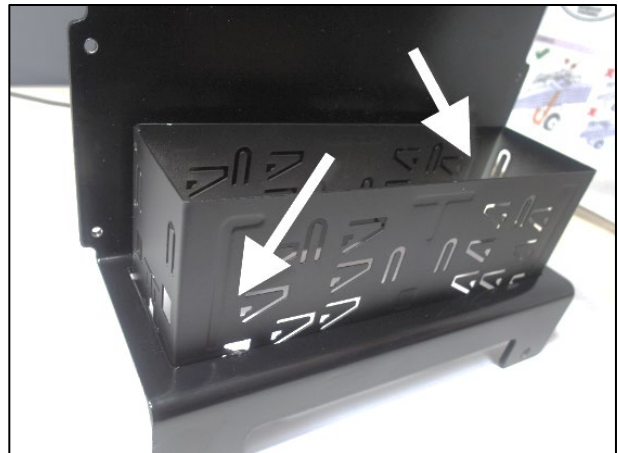


3. Connect the interface cable to the DVD player's "OUT" video cable.



4. Secure the connection with cloth tape.



5. Install the DVD player on the bracket and use the lock washer and nut supplied with the player to secure it in place.
6. Use a small cable tie to secure the Video/Audio "IN" connectors to the bracket. These connectors are not used in this installation.

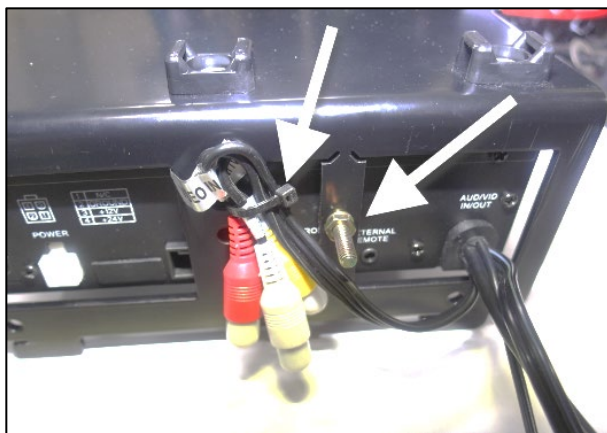

7. Install the finishing moulding on the front of the DVD player.




8. Install the antenna on the windshield center pillar.
9. Run the cable inside the finishing mouldings.
10. Connect antenna cable to DVD player.
11. Secure the antenna cable along its entire length.




12. Locate the 4 existing connectors for the DVD player in the first driver-side hand luggage compartment.




13. Connect the existing red connector to the red connector (Audio "OUT") on the DVD player.
14. Connect the existing white connector to the white connector (Audio "OUT") on the DVD player.
15. Connect the A60.A connector and the black male connector behind the DVD player.

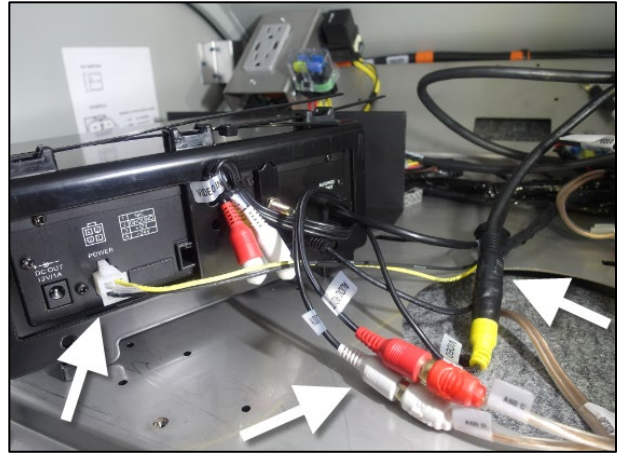


16. Secure all connections with cloth tape.

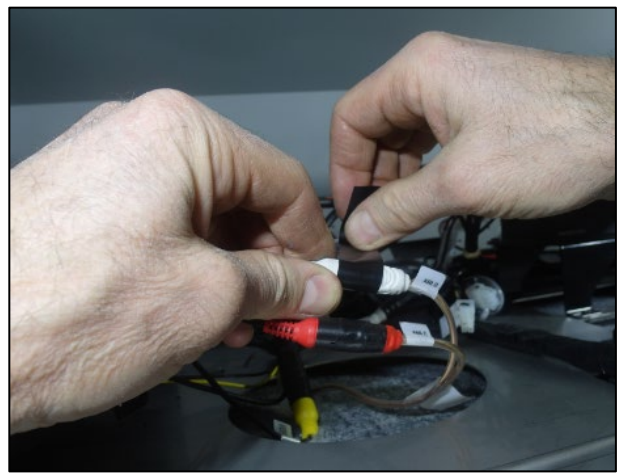

17. Connect the Video "OUT" connector of the interface cable to the INPUT 1/DVD port of the HDMI selector.
18. Secure cable with cable ties.

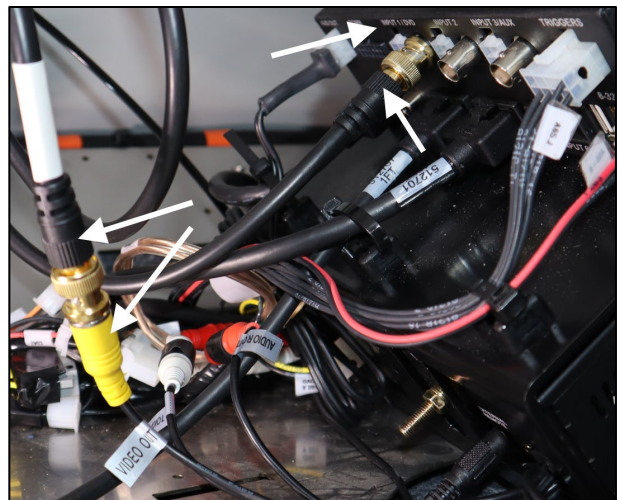

19. Install 3" Velcro strip N25187 on selector.

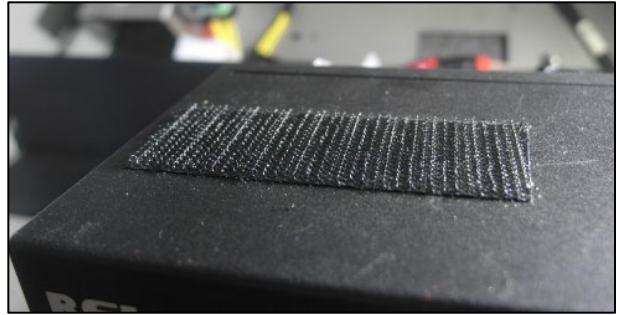

20. Install 3" Velcro strip 506268 under remote control (opposite Velcro).

21. Check DVD player operation on monitors.



PARTS / WASTE DISPOSAL

Discard waste according to applicable environmental regulations (Municipal/State[Prov.]/ Federal)