

PREVOST

Instruction Sheet

IS-96070

THE FRESH AIR SENSOR (PRÉVOST # 451699) BECOME UNSERVICEABLE AND REPLACED BY A 3.32 k RESISTANCE (H3 VEHICLES ONLY)

MATERIAL

Kit #064321 includes the following parts.

Part No.	Description	Qty
562617	Resistance (3.32 k)	1
561626	Terminal	2
504524	Cable tie	1
IS-96070	Instruction Sheet	1
FI-96070	Feuille d'instructions	1

PROCEDURE

Warning: Park vehicle safely, apply parking brake, stop engine and set battery master switch(es) to the OFF position prior to working on the vehicle.

1. Open baggage compartment door located on R.H. side A/C compartment.
2. Locate sliding drawer on R.H. side wall of baggage compartment.
3. Unscrew the quarter turn screw and slide open the drawer.
4. Locate terminals T and T1 on HVAC logic panel.
5. Disconnect wires 122 and 122A from terminals T and T1 and attach them with cable tie (Prévost #504273) (Fig. 1).
6. Connect resistance (Prévost # 362617) to terminal T and T1.

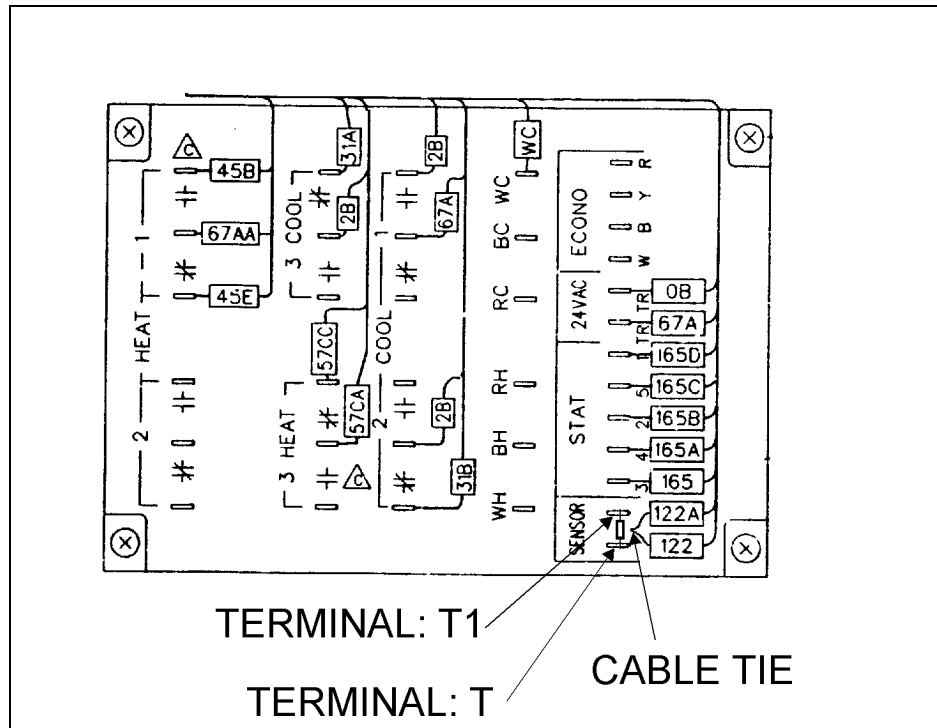


FIGURE 1: HVAC LOGIC PANEL