

PREVOST

ENREGISTRÉ - REGISTERED
ISO 9001 & ISO 14001

**WARRANTY
BULLETIN**

Wb00-07A



DATE : NOVEMBER 2000	SECTION : 06 - Electrical
EXPIRATION: NOVEMBER 2001	
SUBJECT : KEYLESS ENTRY KEYPAD REPLACEMENT	

REVISION : A

ADDITION OF PARTS LIST SPECIFIC TO RETROFITTING XL MODELS

APPLICATION

Model	VIN
H3-45 VIP Bus Shells Model Year: 1998 - 2000	<div style="text-align: center;"> </div> From 2PCV33497W1012294 up to 2PCV33495Y1013897 incl. EXCEPT 2PCV33499X101306 2PCV33493Y1013588 2PCV33495Y1013835 2PCV33495X1013218 2PCV33492Y1013808
XL Bus Shells WITH KEYLESS ENTRY Model Year: 1998 - 2000	From 2PCM3340XW1026302 up to 2PCE33492Y1027028 incl.

DESCRIPTION

The keyless entry keypad on the above-mentioned vehicles must be replaced. Order parts from the correct list and follow the instructions below to perform the modification.

MATERIAL

For H3-45 VIP private coaches only, order the following parts:

Part No.	Description	Qty
065303	Keypad	1
780637	Retaining clip	1
780482	Door lever trim (interior)	1
283769	Decal "LOCK" (1 spare)	2
065422	Decal, black (1 spare)	2

Note : Material can be obtained through regular channels.

For **XL private coaches only**, order the following parts:

Part No.	Description	Qty
065301	Keypad	1
780637	Retaining clip	1
780482	Door lever trim (interior)	1
283769	Decal "LOCK" (1 spare)	2
065483	Decal, black (1 spare)	2

Note : Material can be obtained through regular channels.

PROCEDURE

Warning : Park vehicle safely, apply parking brake, stop engine and set battery master switch(es) to the OFF position prior to working on the vehicle.

1. Open the entrance door;
2. Remove the interior door panel and lock mechanism;
3. Disconnect the wires leading from the keypad (including one at the light on the bottom of the door). Remove the existent keypad;
4. Try fit the new keypad in place of the old one. Enlarge the hole if necessary;

ON H3-45 VIP MODELS ONLY

Refer to figure 1.

- ❖ Remove the door handle;
- ❖ Mask the paint surrounding the keypad hole and sand down the paint edges so they don't show behind the decal (use sandpaper grit of about 250);
- ❖ Clean the door surface with a degreasing agent such as a mixture of water and alcohol;
- ❖ Apply decal #065422 in position (refer to figure 1 and to the instructions below for proper installation):
 - Remove the white bottom layer;
 - Apply the upper portion (straight edge, no rounded corners) along the edge of the hole in the plate where the handle assembly sits;
 - Apply the decal by smoothing downward to avoid trapping air bubbles;
 - Remove the translucent top layer;

5. If installing the keypad on an XL model, sand smooth the material surrounding the keypad hole not more than ¼ inch (about 5 mm) away from the hole using 250 grit sandpaper. Clean the surface using a mixture of water and alcohol, dry thoroughly and apply the decal;
6. Install the new keypad using the new retaining clip (#780637) and plug to existent connectors. Fasten the wires securely using cable ties;

Note: The keypad cancellation switch will no longer operate after this modification;

7. Install the door handle;
8. Install the locking mechanism and interior door panel;
9. Install the new interior door lever trim and "LOCK" decal.

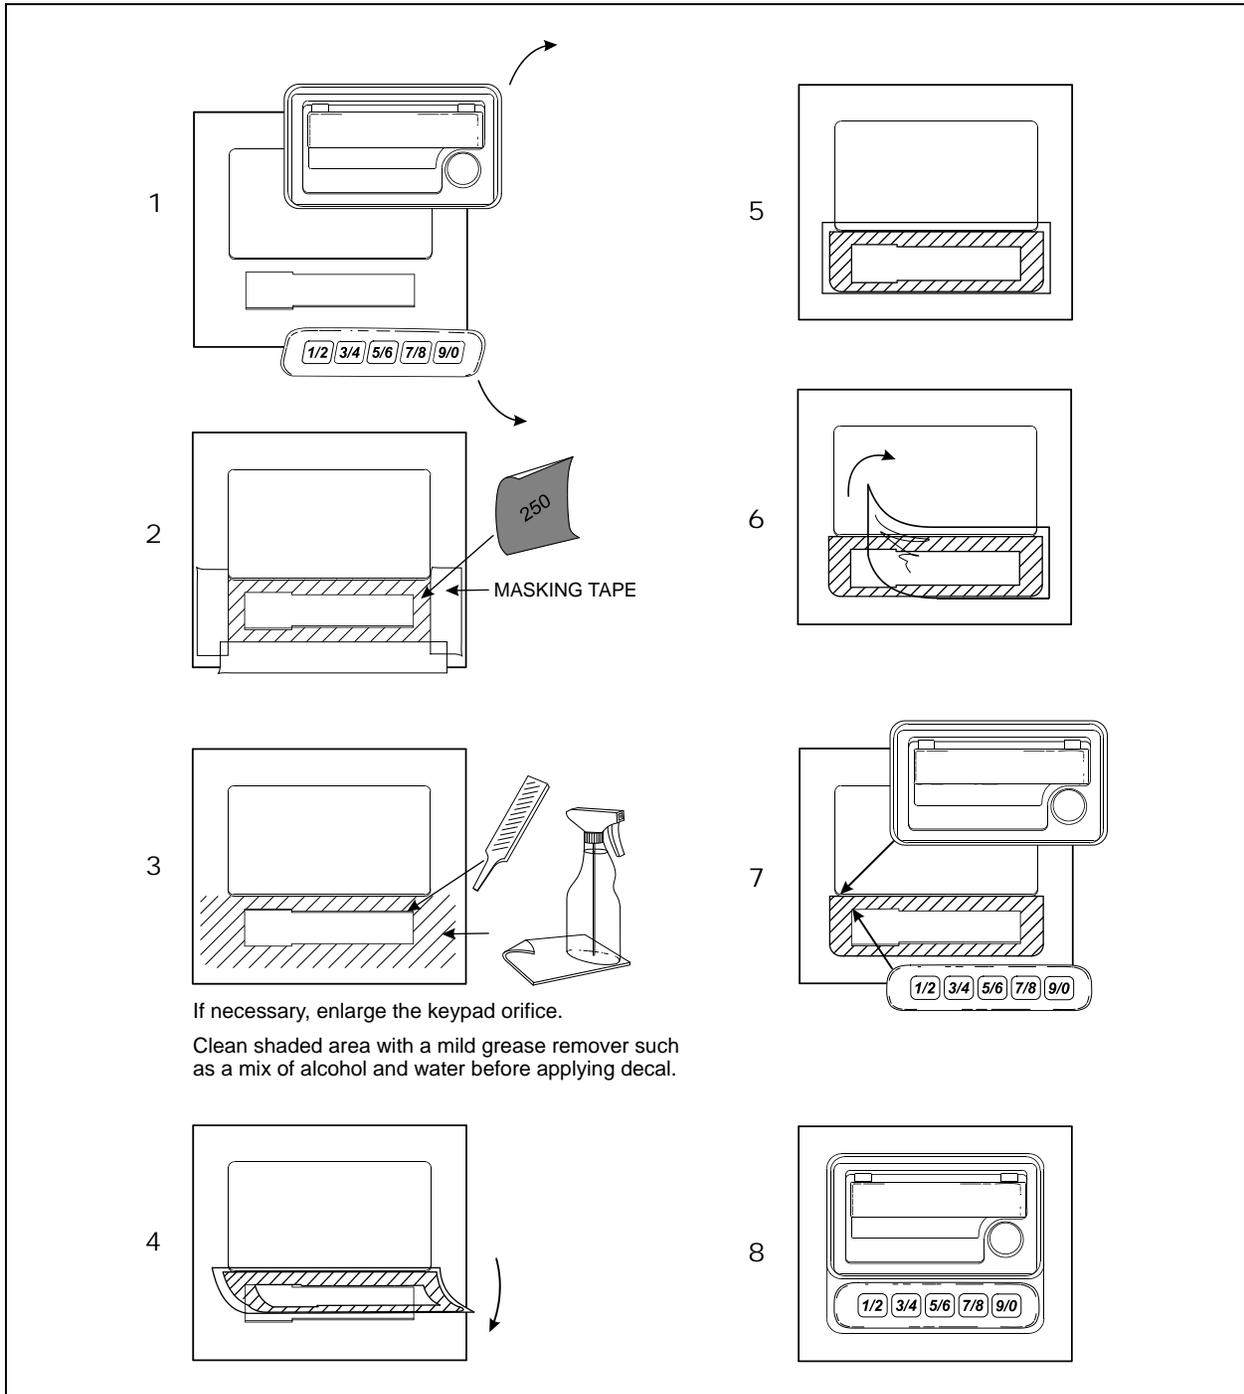


FIGURE 1: INSTALLATION OF THE DECAL AND KEYPAD ON H3-45 VIP

18429

WARRANTY

This modification is covered by PrevoSt Car's normal warranty. We will reimburse you the parts and one hour (1.0) of labor upon receipt of the replaced parts and a completed A.F.A. form on which you must specify as per "Warranty Bulletin 00-07A".

Parts / Waste disposal:

Return replaced parts to Prévost Car with A.F.A. for full reimbursement.