


PREVOST

Warranty Bulletin

95-18

Date: **May 1995**
Section: **6**
Subject: **DIODE INSTALLATION IN BATTERY COMPARTMENT**
Application:

Model	VIN	
XL-40' Coach Model year: 1994, 1995	de 2P9L33408R1001775 à 2P9L33409R1001994 inclusivement et de 2P9L33408S1001409 à 2P9L33403S1001558 inclusivement	

DESCRIPTION

In order to eliminate the possible interference in the P.A. system, occurring when central heating system's valve discharges itself, the Prévost Car engineering department have recently made a modification that you can perform on your own vehicle. Perform this modification according to the following procedure.

MATERIAL

Part No	Description	Qty
-----	Diode assembly (included with this bulletin)	1

PROCEDURE

Warning: Park vehicle safely, apply parking brake, stop engine and set battery master switch(es) to the OFF position prior to working on the vehicle.

1. In last baggage compartment, open battery compartment.
2. Unscrew nuts from #4 and #20 terminals (Fig. 1), install diode assembly between these two terminals and reinstall nuts.

Note: In some vehicles, wire assembly could be already installed, in this case, don't perform the installation described in step 2.

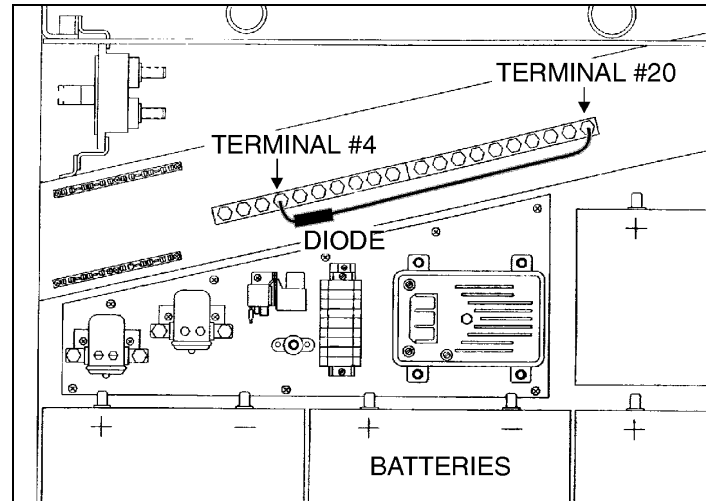


FIGURE 1

Caution: Wire extremity with diode should be installed on terminal #4.