



MAINTENANCE INFORMATION

MI20-14

| | | |
|-----------|--|--------------------------|
| DATE : | October 2020 | SECTION : 23 ACCESSORIES |
| SUBJECT : | PREVOST DRIVER ASSIST™ - WINDSHIELD REPLACEMENT EQUIPPED WITH CAMERA | |

First Release

October 2020

Table of content

MATERIAL 2

 Required parts: 2

 Other parts or material that may be required: 2

PROCEDURE 2

PARTS / WASTE DISPOSAL 5



MATERIAL

Required parts:

| Part No. | Description | Qty |
|--|--------------------------|-----|
| 300720 (H3 Series) or 300723 (X3 Series) | CURBSIDE WINDSHIELD R.H. | 1 |
| 880060 | BRACKET, CAMERA | 1 |

Other parts or material that may be required:

| Part No. | Description | Qty |
|--|--|-----|
| G37362 (H3 Series) G37276 (X3 Series) | TEMPLATE, CAMERA POSITION MARKINGS (if windshield doesn't already have position markings)  | 1 |

PROCEDURE




DANGER



Park vehicle safely, apply parking brake, stop the engine. Prior to working on the vehicle, set the ignition switch to the OFF position and trip the main circuit breakers equipped with a trip button. On Commuter type vehicles, set the battery master switch (master cut-out) to the OFF position.

Lock out & Tag out (LOTO) must be performed during set-up, maintenance or repair activities. Refer to your local procedure for detailed information regarding the control of hazardous energy.



1. Unscrew the two screws at the lower end of the Prevost Driver Assist system camera housing and then remove the cable holder.

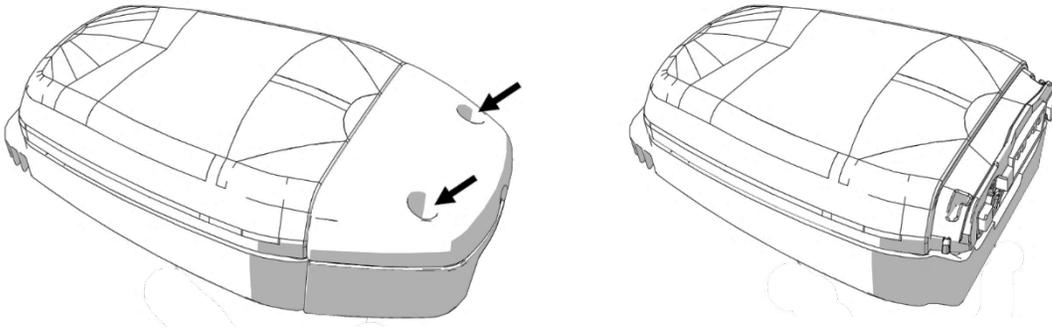


2. On both sides of the camera, insert a small flat blade screwdriver in the opening.

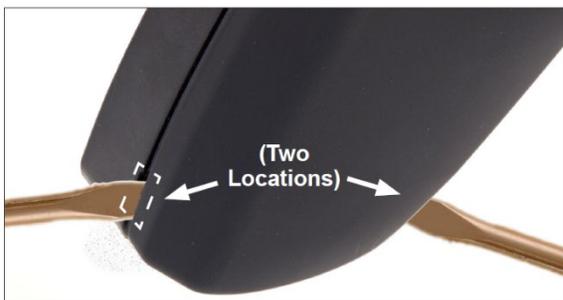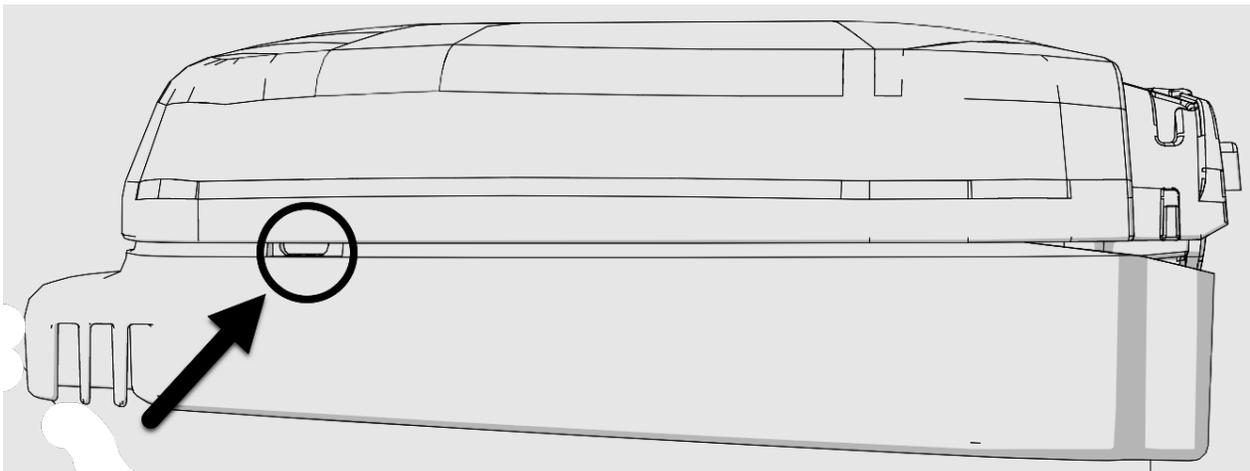

3. Gently prying by moving the screwdriver handles away from the windshield a small amount – push against the retaining clips to release the camera (see image below with the camera hidden to show the mechanism).

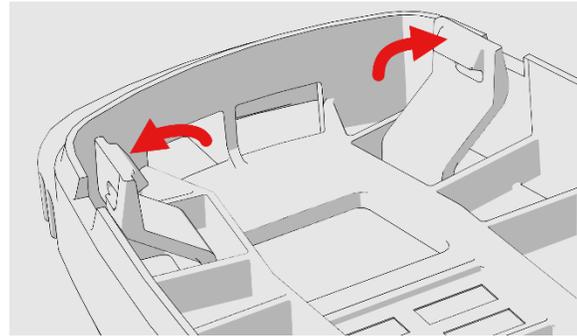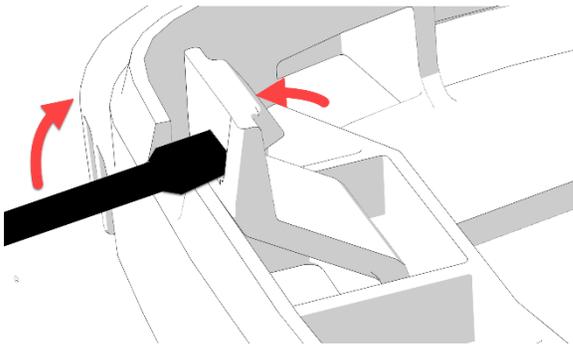

4. Detach the camera and set aside.
5. Remove and discard the broken windshield with existing camera bracket glued to it.
6. Install the new windshield.
7. If the new windshield came without camera position markings: Use template **G37362** (H3) or **G37276** (X3) to draw the position markings shown in red on the image below.

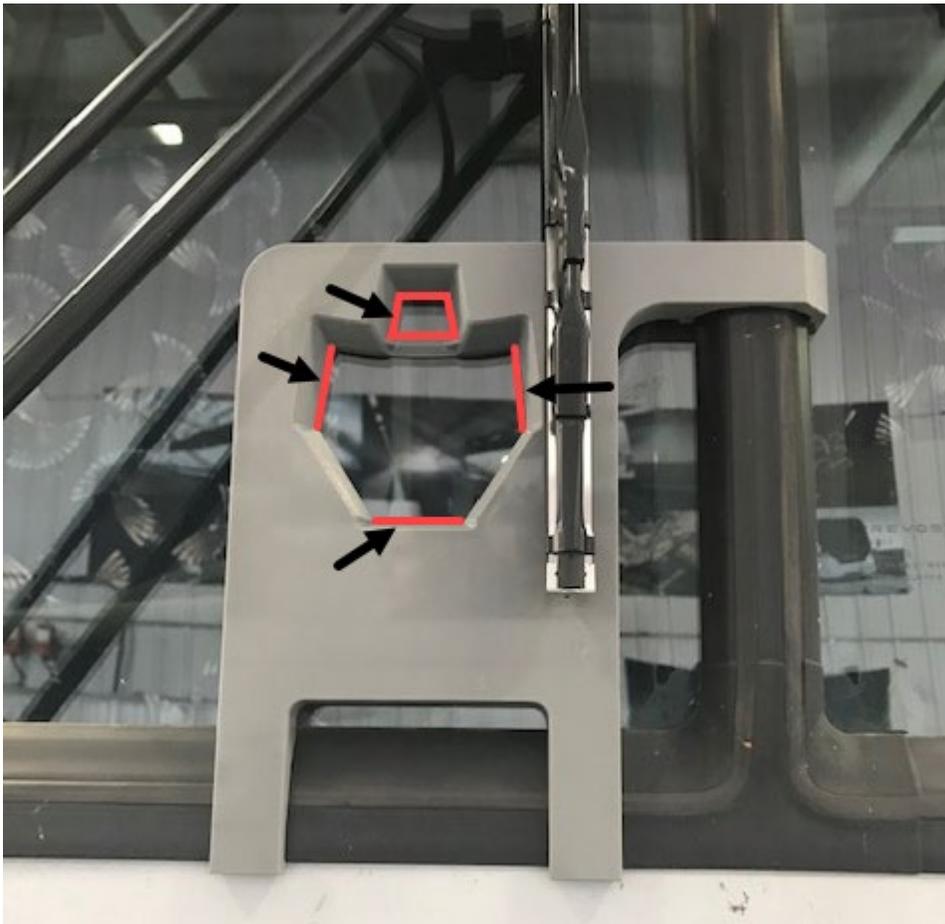

8. Peel off double-side tape and line up the new bracket with markings.
9. Reinstall the camera onto the new bracket.

PARTS / WASTE DISPOSAL

Discard according to applicable environmental regulations (Municipal/State[Prov.]/ Federal)

Access all our Service Bulletins on <http://techpub.prevostcar.com/en/>

Or scan the QR-Code with your smart phone

Are you a Vehicle owner?
E-mail us at technicalpublications_prev@volvo.com and type "ADD" in the subject to receive warranty bulletins applicable to your vehicle(s) by e-mail.

