

Replacement of front kneeling electronic module

MATERIAL

Kit #064813 includes the following parts :

Part No.	Description	Qty
064814	Cable assembly	1
561707	Relay	3
560230	Flasher unit	1
IS-98057	Instruction Sheet	1
FI-98057	Feuille d'instructions	1

PROCEDURE

Warning: Park vehicle safely, apply parking brake, stop engine and set battery master switch(es) to the OFF position prior to working on the vehicle.

1. Open steering compartment door. Locate front kneeling electronic control module (refer to figures 1 and 2). Electronic module is located on the wall adjacent to the wheel housing.

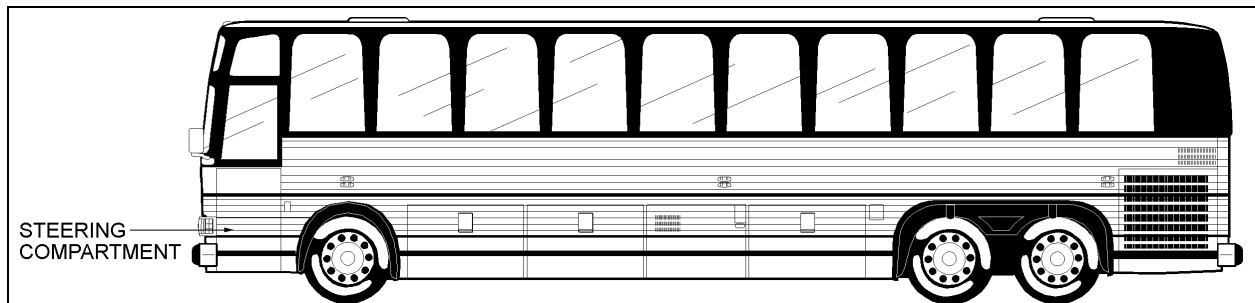


FIGURE 1 : STEERING COMPARTMENT

2. Remove C181, C184, C185 and C187 connectors from electronic module. Separate electronic module from its support plate. Fasten cable assembly (Prévost #064814) relay brackets and flasher unit bracket to support plate one beside another using screws.


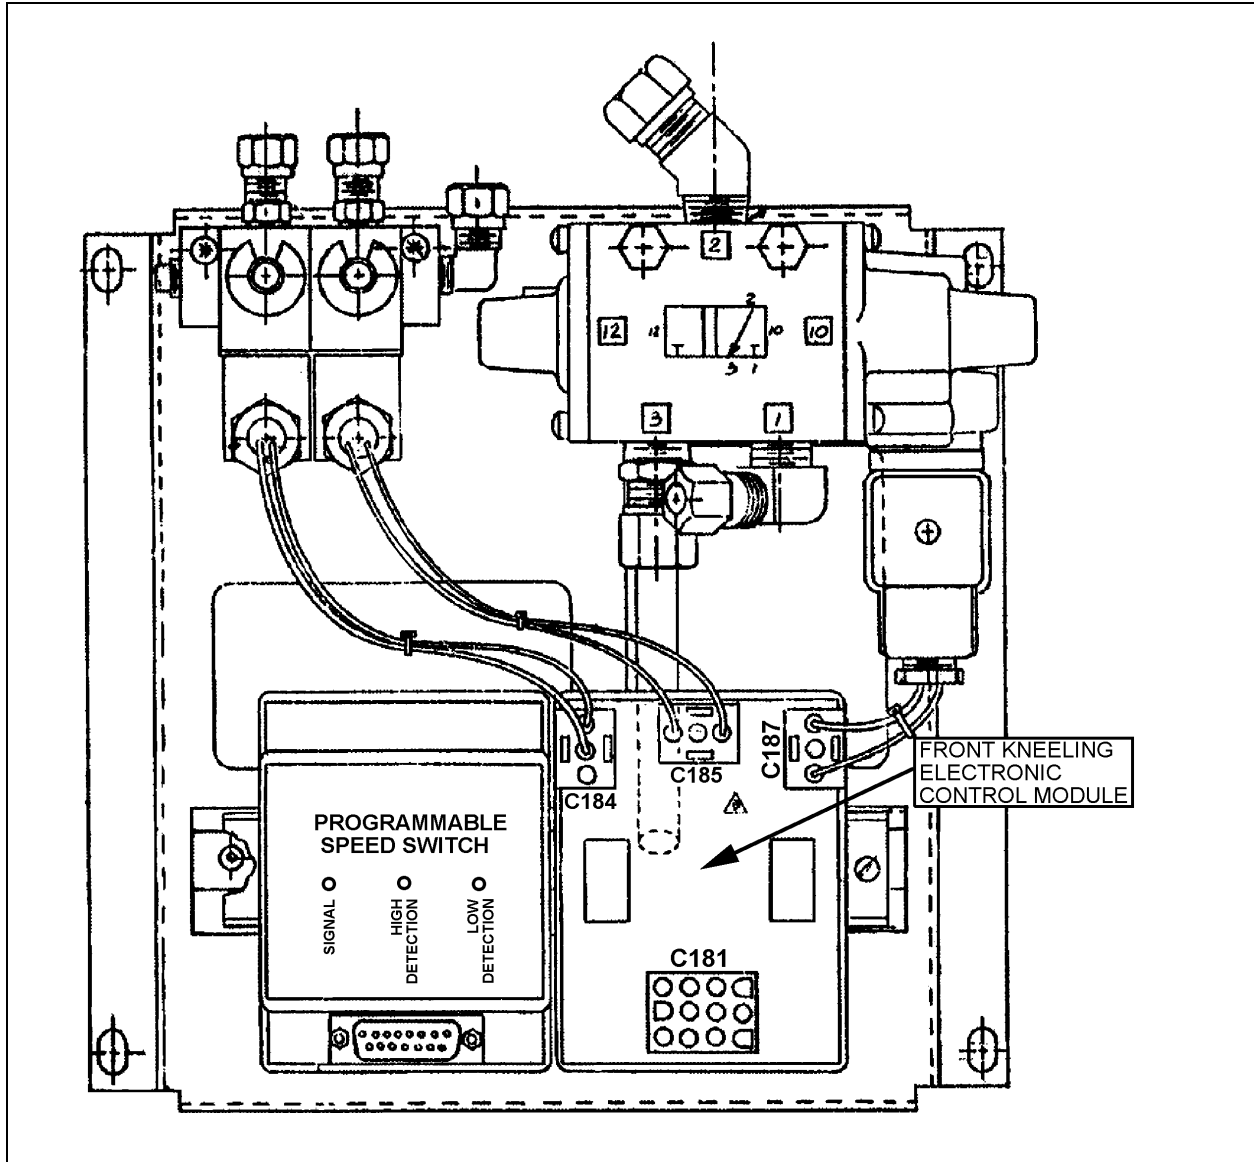


FIGURE 2 FRONT KNEELING ELECTRONIC CONTROL MODULE LOCATION

3. Connect cable assembly (Prévost #064814) C181, C184, C185 and C187 connectors with matching connectors previously fixed onto module.
4. Connect flasher unit (Prévost #560230) with its bracket and three relays (Prévost #561707) with their respective bracket.
5. Close steering compartment door.

Note : Programmable speed switch may be absent or at a different location than the one shown on figure 2.

Note : Use wiring diagram D060811 P. 21 as a reference if needed then add it to the wiring diagrams that you already have.

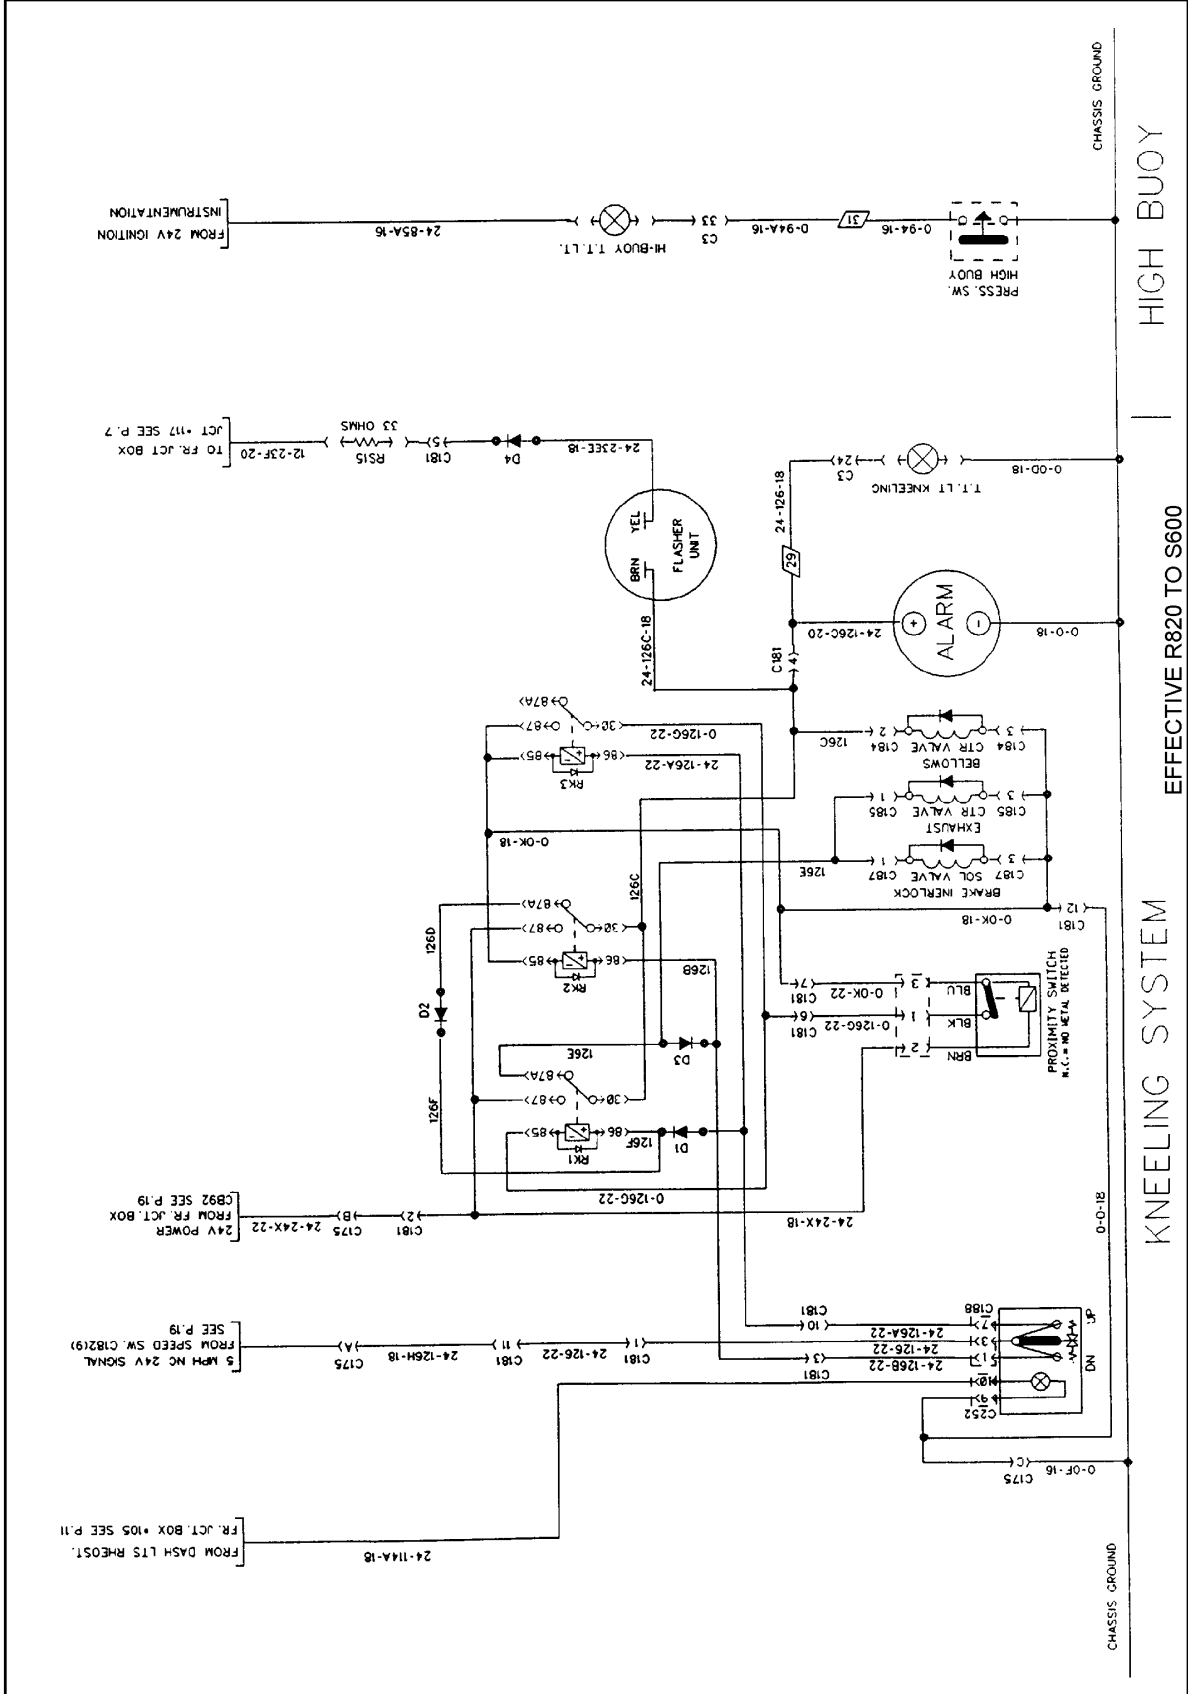

EFFECTIVE R820 TO S600

KNEELING SYSTEM | HIGH BUOY

PREVOST CAR inc. WIRING DIAGRAM NO: D060811 P.21

REVISION 98-04