

**PREVOST**

**WARRANTY  
BULLETIN**

Wb98-09



<b>DATE :</b> September 1998	<b>SECTION :</b> 06
<b>SUBJECT :</b> PARCEL RACK FAN SPEED CONTROL MODULE BYPASS	

**APPLICATION**

Model	VIN	VIN
"H3" series coaches Model year: 1998	2PCH33494W1012234	2PCH33491W1012319
	2PCH3349XW1012285	2PCH33494W1012333
	2PCH33419W1012286	2PCH33490W1012344
	2PCH33412W1012288	2PCH33499W1012388
	2PCH33497W1012289	2PCH33492W1012393
	2PCH33493W1012290	2PCH33494W1012394
	2PCH33495W1012291	2PCH33496W1012400
	2PCH33499W1012293	2PCH3349XW1012402
	2PCH3341XW1012295	2PCH33493W1012404
	2PCH33411W1012296	2PCH33497W1012406
	2PCH33492W1012300	2PCH33494W1012413
	2PCH33498W1012303	2PCH33496W1012414
	2PCH33491W1012305	2PCH33498W1012415
	2PCH33493W1012306	2PCH3349XW1012416
	2PCH33499W1012309	2PCH33491W1012417
	2PCH33499W1012312	2PCH33493W1012418
	2PCH33490W1012313	2PCH33491W1012420
	2PCH33413W1012316	2PCH33497W1012423
	2PCH3349XW1012318	2PCH33418W1012425
		2PCH3341XW1012426

**DESCRIPTION**

The parcel rack fan speed module proving unstable and difficult to calibrate, a we recommend the installation of jumper to bypass the module.

**MATERIAL**

Part No.	Description	Qty
064855	Jumper	2
504637	Cable tie	2

**Note :** Material can be obtained through regular channels.

## PROCEDURE

**Warning :** Park vehicle safely, apply parking brake, stop engine and set battery master switch(es) to the OFF position prior to working on the vehicle.

1. Remove the plastic lens on fluorescent lighting adjacent to blower motor. Start by pulling out the bottom corner of the lens then delicately peeling it out of it's seat;

**Caution :** The lens is fragile. Use care while removing and handling.

2. Remove air filter to access motor assembly;
3. If the parcel rack is an "open" type, remove the right motor cowling;
4. Cut the nylon cable tie and disconnect the motor from the electronic control module;
5. Disconnect the control module from it's power source then connect the jumper to the now unused power source;
6. Remove the electronic control module or cut the wires at the base of the module;
7. Pass the jumper through the parcel rack wall;
8. Connect the jumper to the blower motor. Be careful to match wire colors;
9. Tie down the wire using a cable tie;
10. Put the air filter, the plastic lens and the cowling back in place;
11. Repeat this procedure on the opposite parcel rack.

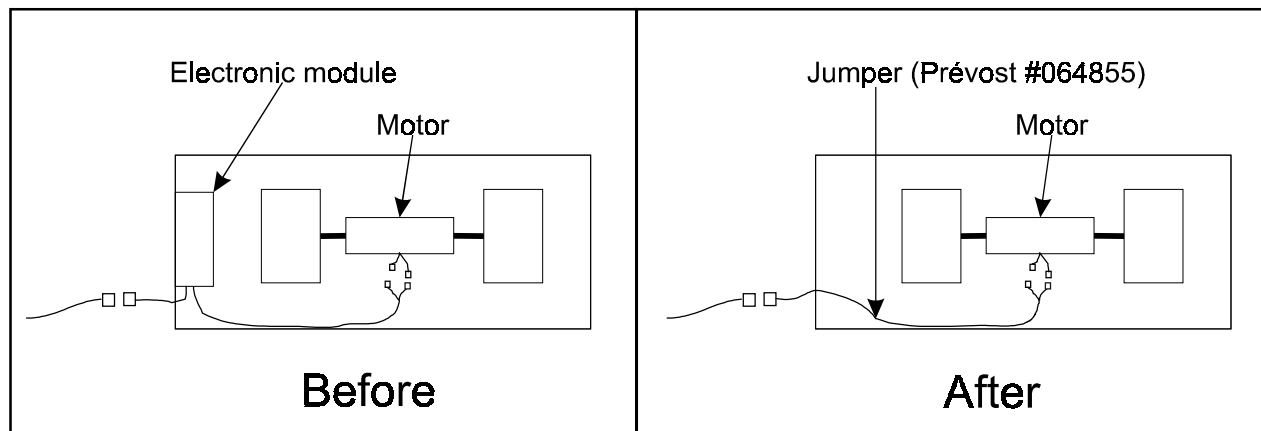


FIGURE 1 : PARCEL RACK FAN

## WARRANTY

This modification is covered by Prévost Car's normal warranty. We will reimburse you the parts and one half hour (0.5) of labor upon receipt of a completed A.F.A. form on which you must specify as per "Warranty Bulletin 98-09".

### Parts disposition :

- Discard according to applicable environmental regulations (Municipal/State[Prov.]/ Federal)

**Expiration date : September 1999**