

**PREVOST**

**WARRANTY  
BULLETIN**

Wb98-24



DATE : June 1998	SECTION : 06
SUBJECT : INSTALLATION OF A DIODE ON R-4 RELAY	

**APPLICATION**

Model	VIN
XL Vehicles EXCEPT 45' Coaches Model Year: 1998	 From 2PCM33406W1026491 up to 2PCM3349XW1026556 incl.

**DESCRIPTION :**

Without the addition of a diode on R-4 relay, the starter motor might activate twice with a single turn of the key.

**MATERIAL**

Part No.	Description	Qty
060798	Diode Assembly	1

**Note :** Material can be obtained through regular channels.

**PROCEDURE**

**Warning :** Park vehicle safely, apply parking brake, stop engine and set battery master switch(es) to the OFF position prior to working on the vehicle.

1. Locate and open the rear junction box in the engine compartment.
2. Locate the R-4 relay in the upper right area of the junction box.
3. Secure the diode (Fig. 2) to the front terminals of the relay (Fig. 1) using the existent nuts.

**Note :** Ensure the diode is installed properly (gray indicating band to the red 24-86A-18 wire, the other side to the black 231-18 wire) (Fig. 1).

4. Close the rear junction box and engine compartment doors.

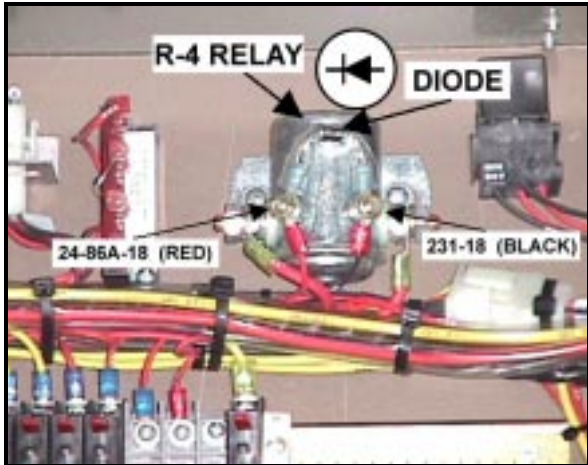


FIGURE 1, REAR JUNCTION BOX

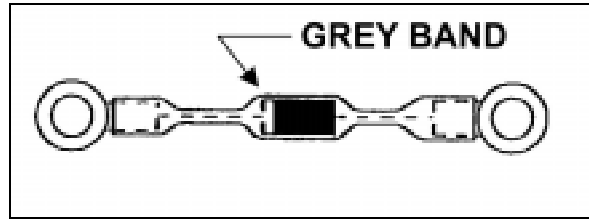


FIGURE 2, DIODE ASSEMBLY

## WARRANTY

This modification is covered by Prévost Car's normal warranty. We will reimburse you the parts and one quarter of an hour (0,25) of labor upon receipt of a completed A.F.A. form on which you must specify as per "Warranty Bulletin 98-24".

**Expiration date : June 1999**