

WIRING DIAGRAM H5-60

CODE

HARNESS ARRANGEMENT
CABLE ARRANGEMENT
SPARE WIRE
CIRCUIT BREAKER CODE
RELAY CODE
DIODE CODE
RESISTOR CODE
CONNECTOR CODE
WIRING DIAGRAM KEY

INDEX

P.A A/C AND HEAT SYSTEM
P.B AIR DRYER
P.C ALARM & SIGNAL
P.D ANTI-SKID
P.E ARTICULATION BRAKE
P.F ARTICULATION SWITCH & ACCELEROMETER
P.G ATEC.
P.H BACK-UP MONITOR
P.I CHARGING SYSTEM
CIGAR LIGHTER
CRUISE CONTROL
DDEC-II
DIFFERENTIAL LOCK
DIGITAL THERMOMETER
DRIVER'S SEAT HEATER
DRIVER'S WINDOW
ENGINE BLOCK HEATER
ENGINE CONTROL
ENTRANCE DOOR CTR. (FRONT & REAR)
EXTERIOR LIGHTING
FRONT DESTINATION SIGN
GALLEY (OPTION)
HOSTESS CHIME
INTERCOM (OPTION)
INTERIOR LIGHTING
KNEELING
LAVATORY
LOWER WINDSHIELD (WIPER & WASHER)
C.B. MOTOROLA SYSTEM (OPTION)

P. 11 TO 13
P. 22
P. 4
P. 19, 20
P. 22
P. 21
P. 3
P. 22
P. 1
P. 14
P. 2
P. 2
P. 16
P. 23
P. 22
P. 14
P. 23
P. 1
P. 18
P. 4 TO 7
P. 15
P. 26
P. 10
P. 25
P. 7 TO 10
P. 21
P. 16
P. 17
P. 27
LOW FUEL
LUGGAGE DOOR LOCK
MIRROR-RA VIEW ADJUST. & HEATED
PASSENGER CHIME
PRE-HEAT WATER HEATER
QUICK START
RACOR FUEL FILTER
RETARDER
SOUND SYSTEM
SPEEDOMETER
STORE
TACHOGRAPH
TACHOMETER
UPPER WINDSHIELD DEFROST
UPPER WINDSHIELD (WIPER & WASHER)
WATER TANK HEATER
VIDEO SYSTEM

P. 16
P. 23
P. 14
P. 10
P. 1
P. 21
P. 21
P. 3
P. 24, P. 24A
P. 16
P. 15
P. 16
P. 16
P. 17
P. 17
P. 23
P. 28


DESCRIPTION:

WIRING DIAGRAM

DR.- M
CK -
DATE- 90-01
APPR-
NO: D-060732
C

APPL: EFF W/ L027 L033... PRIOR TO:

REF: H5-60

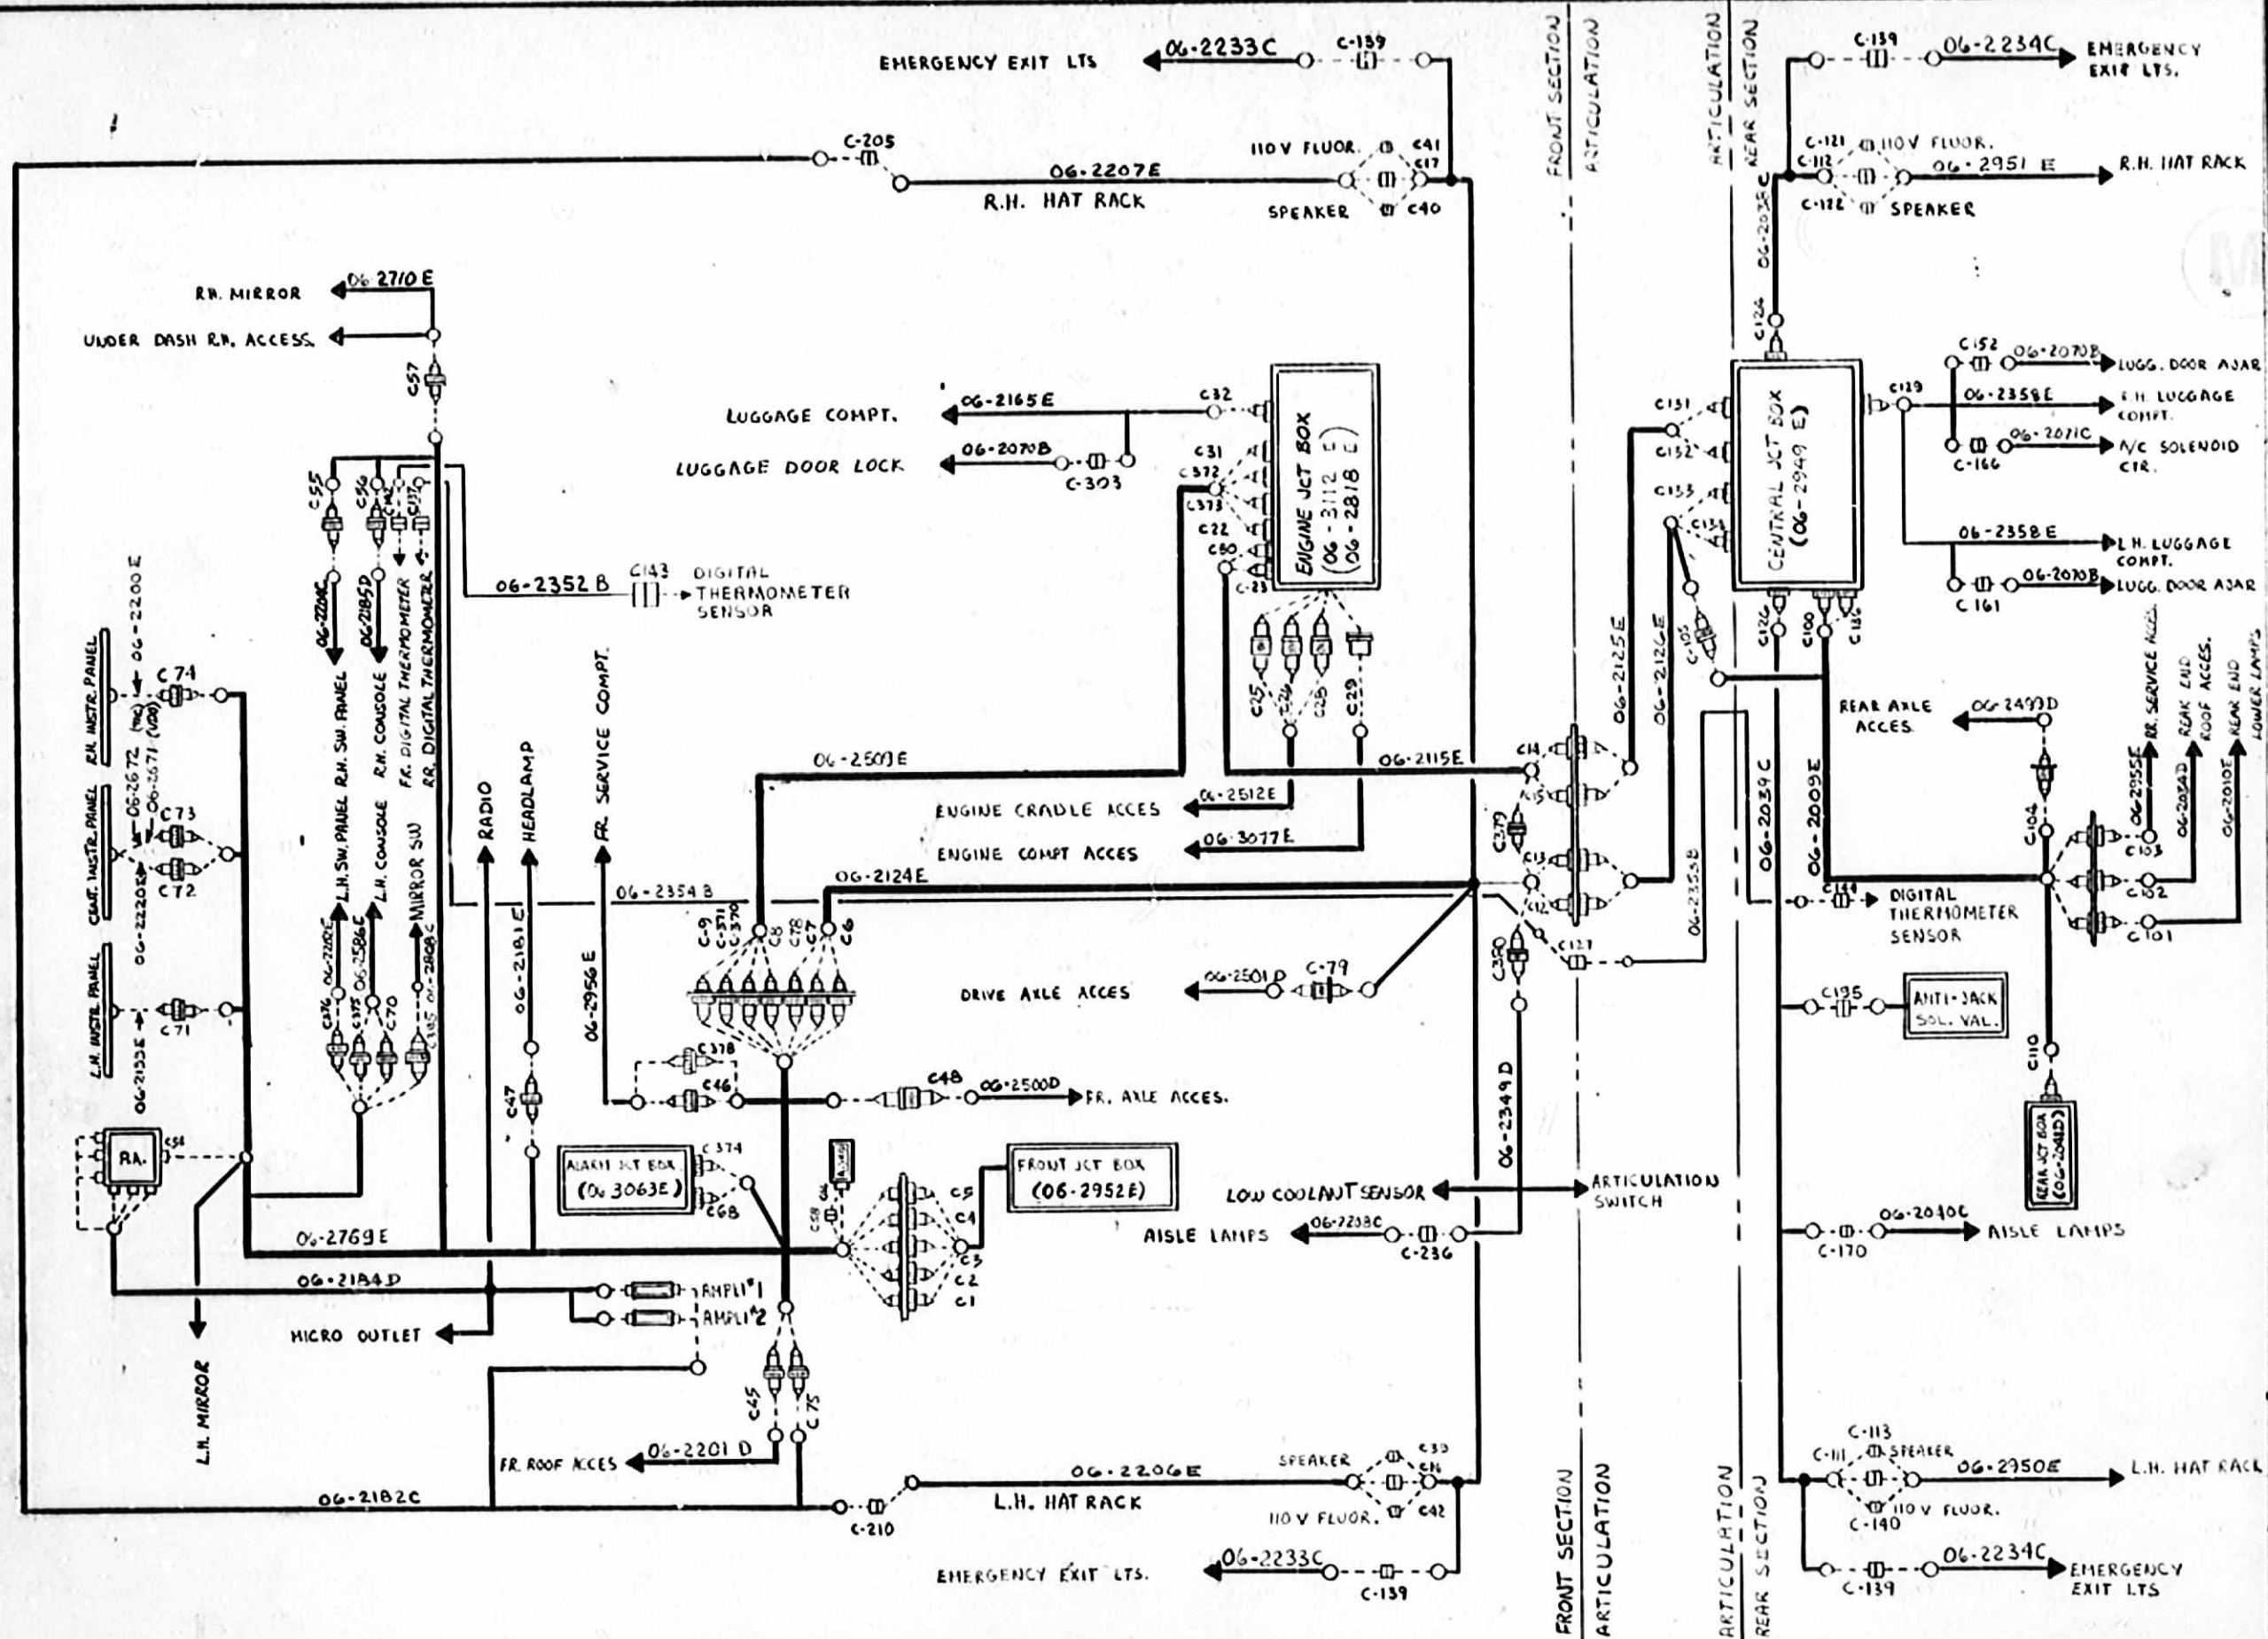

DESC :

HARNESS ARRANGEMENT


DESS: *ML* DATE- 90-06

VER.- *LC* APPR.- *ML*

ITEM	DATE	REVISION	PAR
C	91-02	06-3112A 06-3112 REHARNESS 06-2510	DT
B	91-01	06-3112B 06-3112B REHARNESS 06-2510	AB
A	91-10	06-3112C 06-3112C REHARNESS 06-2510	ML


APPL: EFF. W/ L-027, L-033, L-034, L-035
M-095 & M-104

REF: H5-60 "WESTON" NO: D-060732 P.A.A C

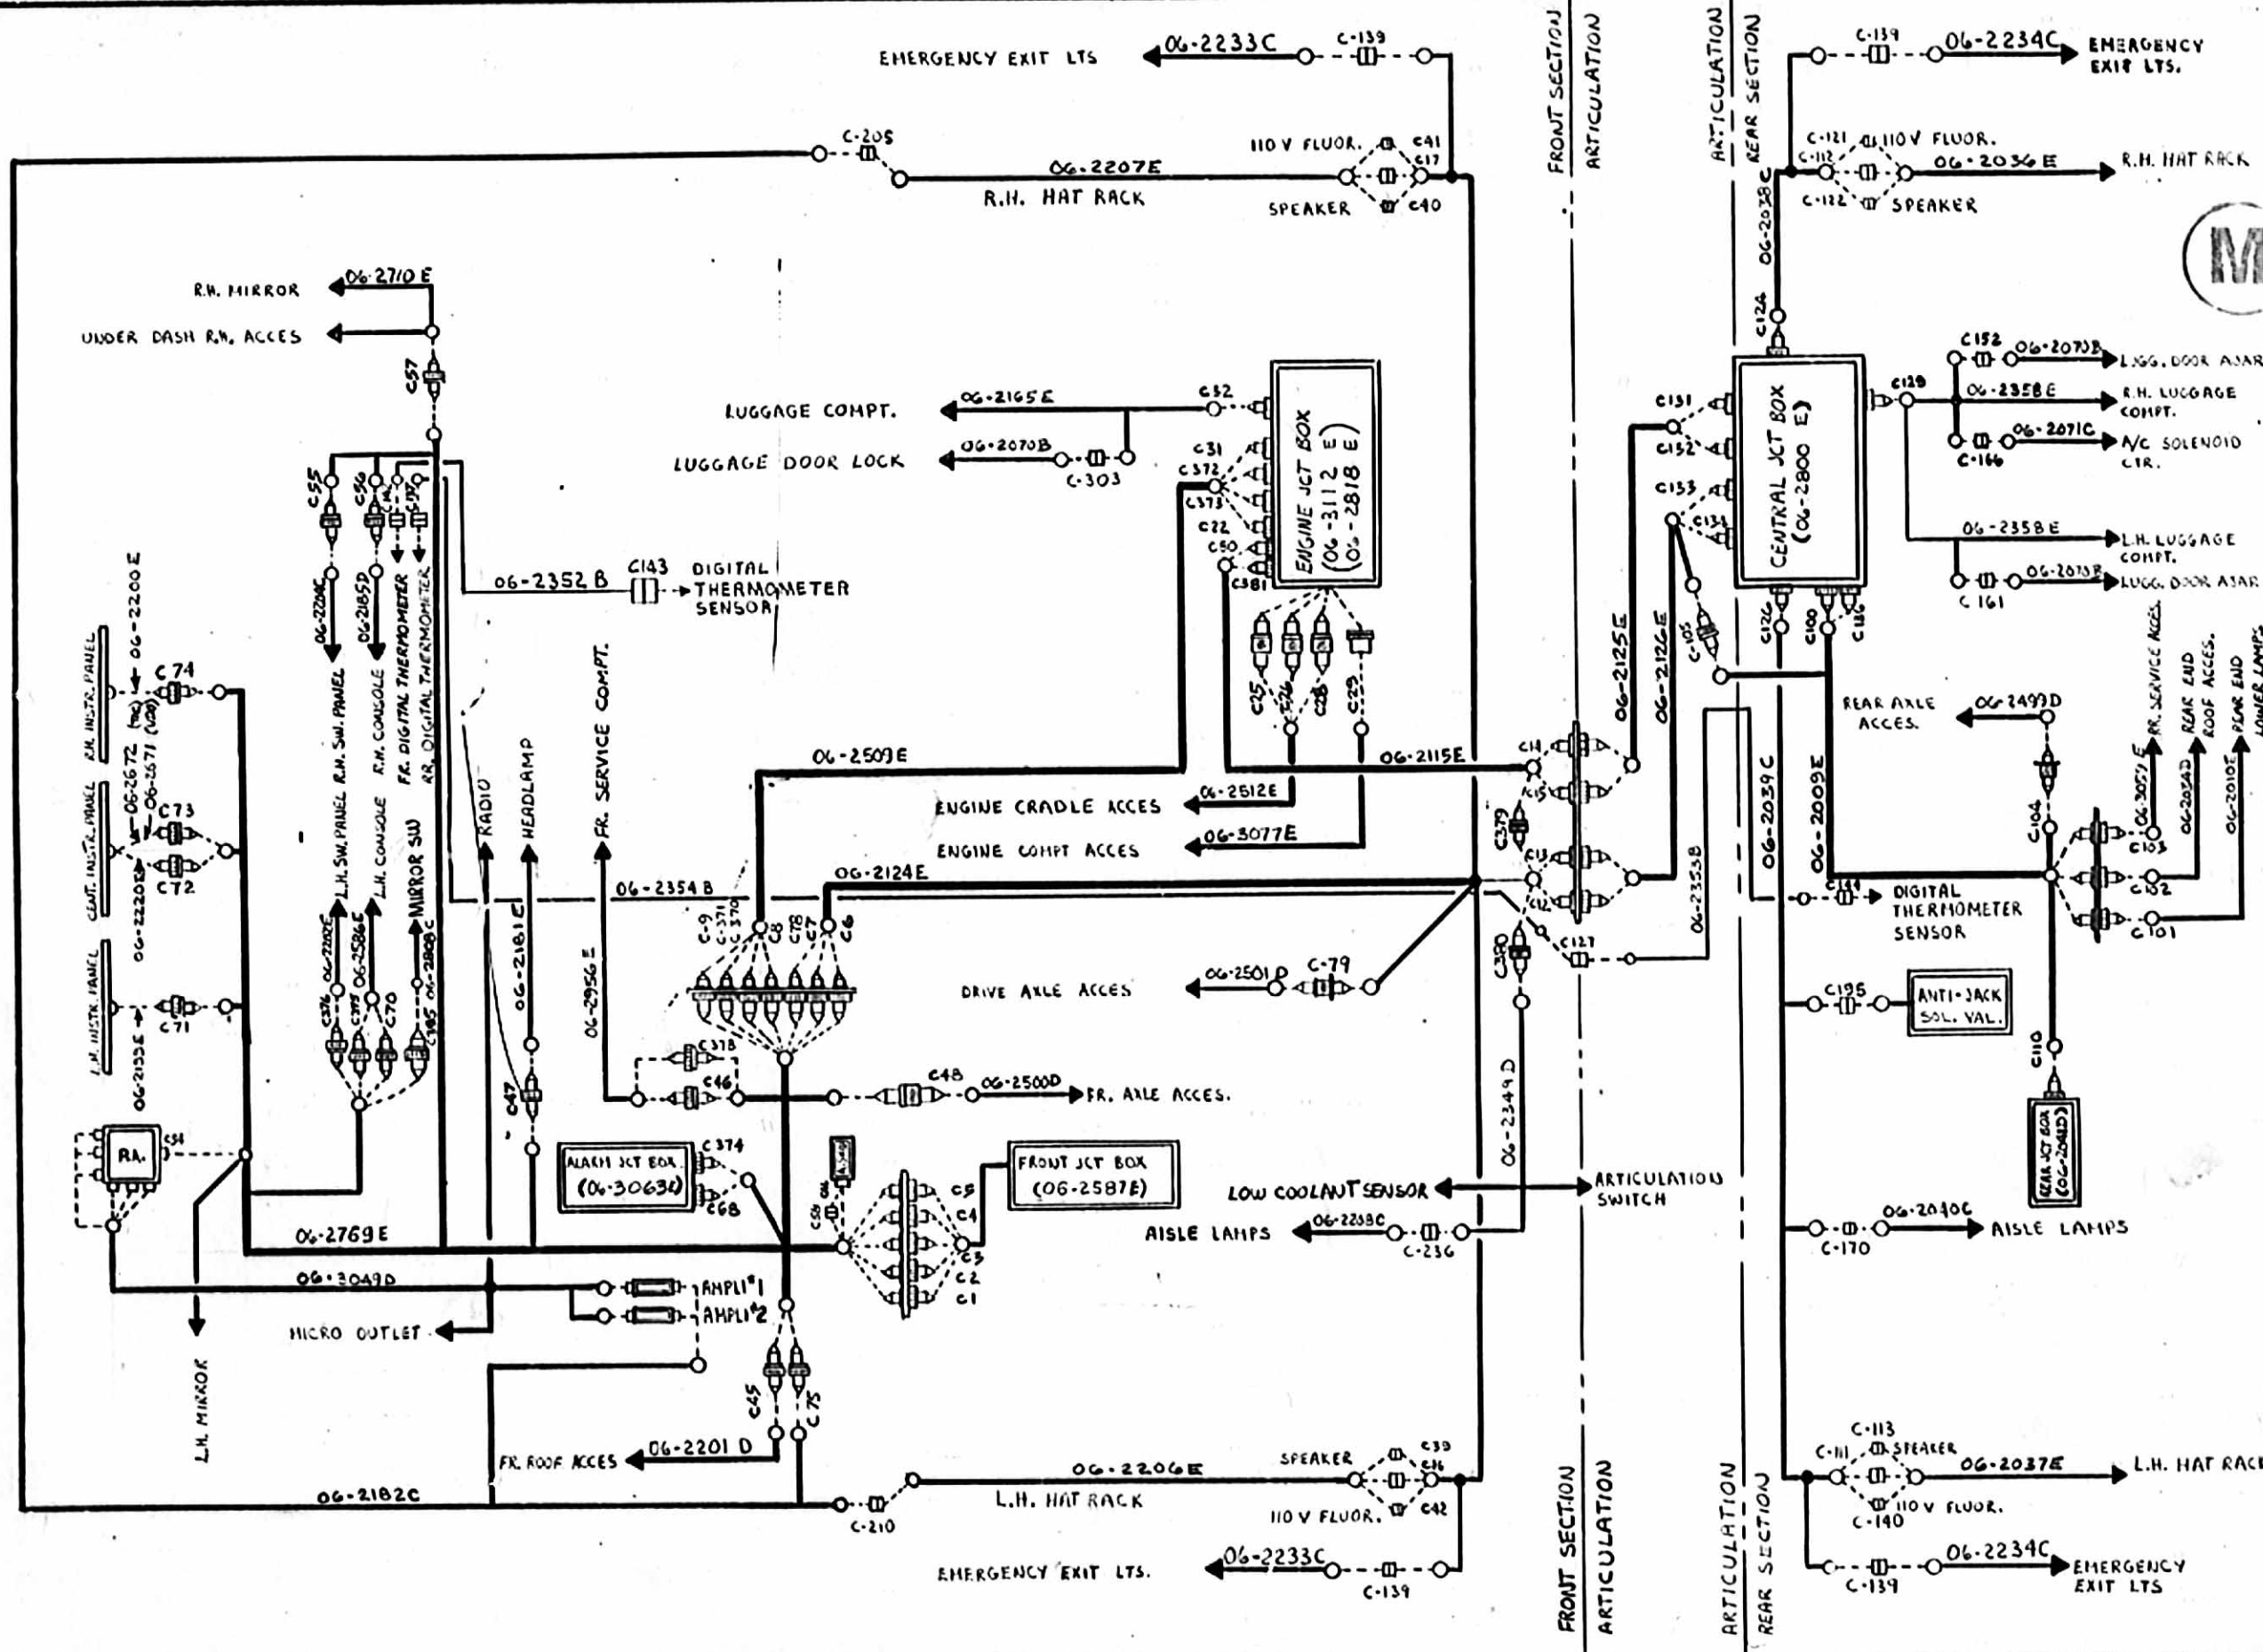


				DESC: HARNESS ARRANGEMENT				DESS: DV	DATE: 90-08
				APPL: W/L-028				VER: LC	APPR: [Signature]
				REF: H15-60				NO: D-060732 P.A	
								C	

ITEM	DATE	REVISION	PAR
C	90/11	06-3077 ETAT 06-2821 (06-2821)	MJ
B	90/10	06-3059 ETAT 06-2955 (06-2955)	DT
A	90/06	06-3077 ETAT 06-2718 (06-2718)	MJ
E	91-02	06-40201A	LV
D	91-01	06-40002	LB
	91-01	06-40002	LB

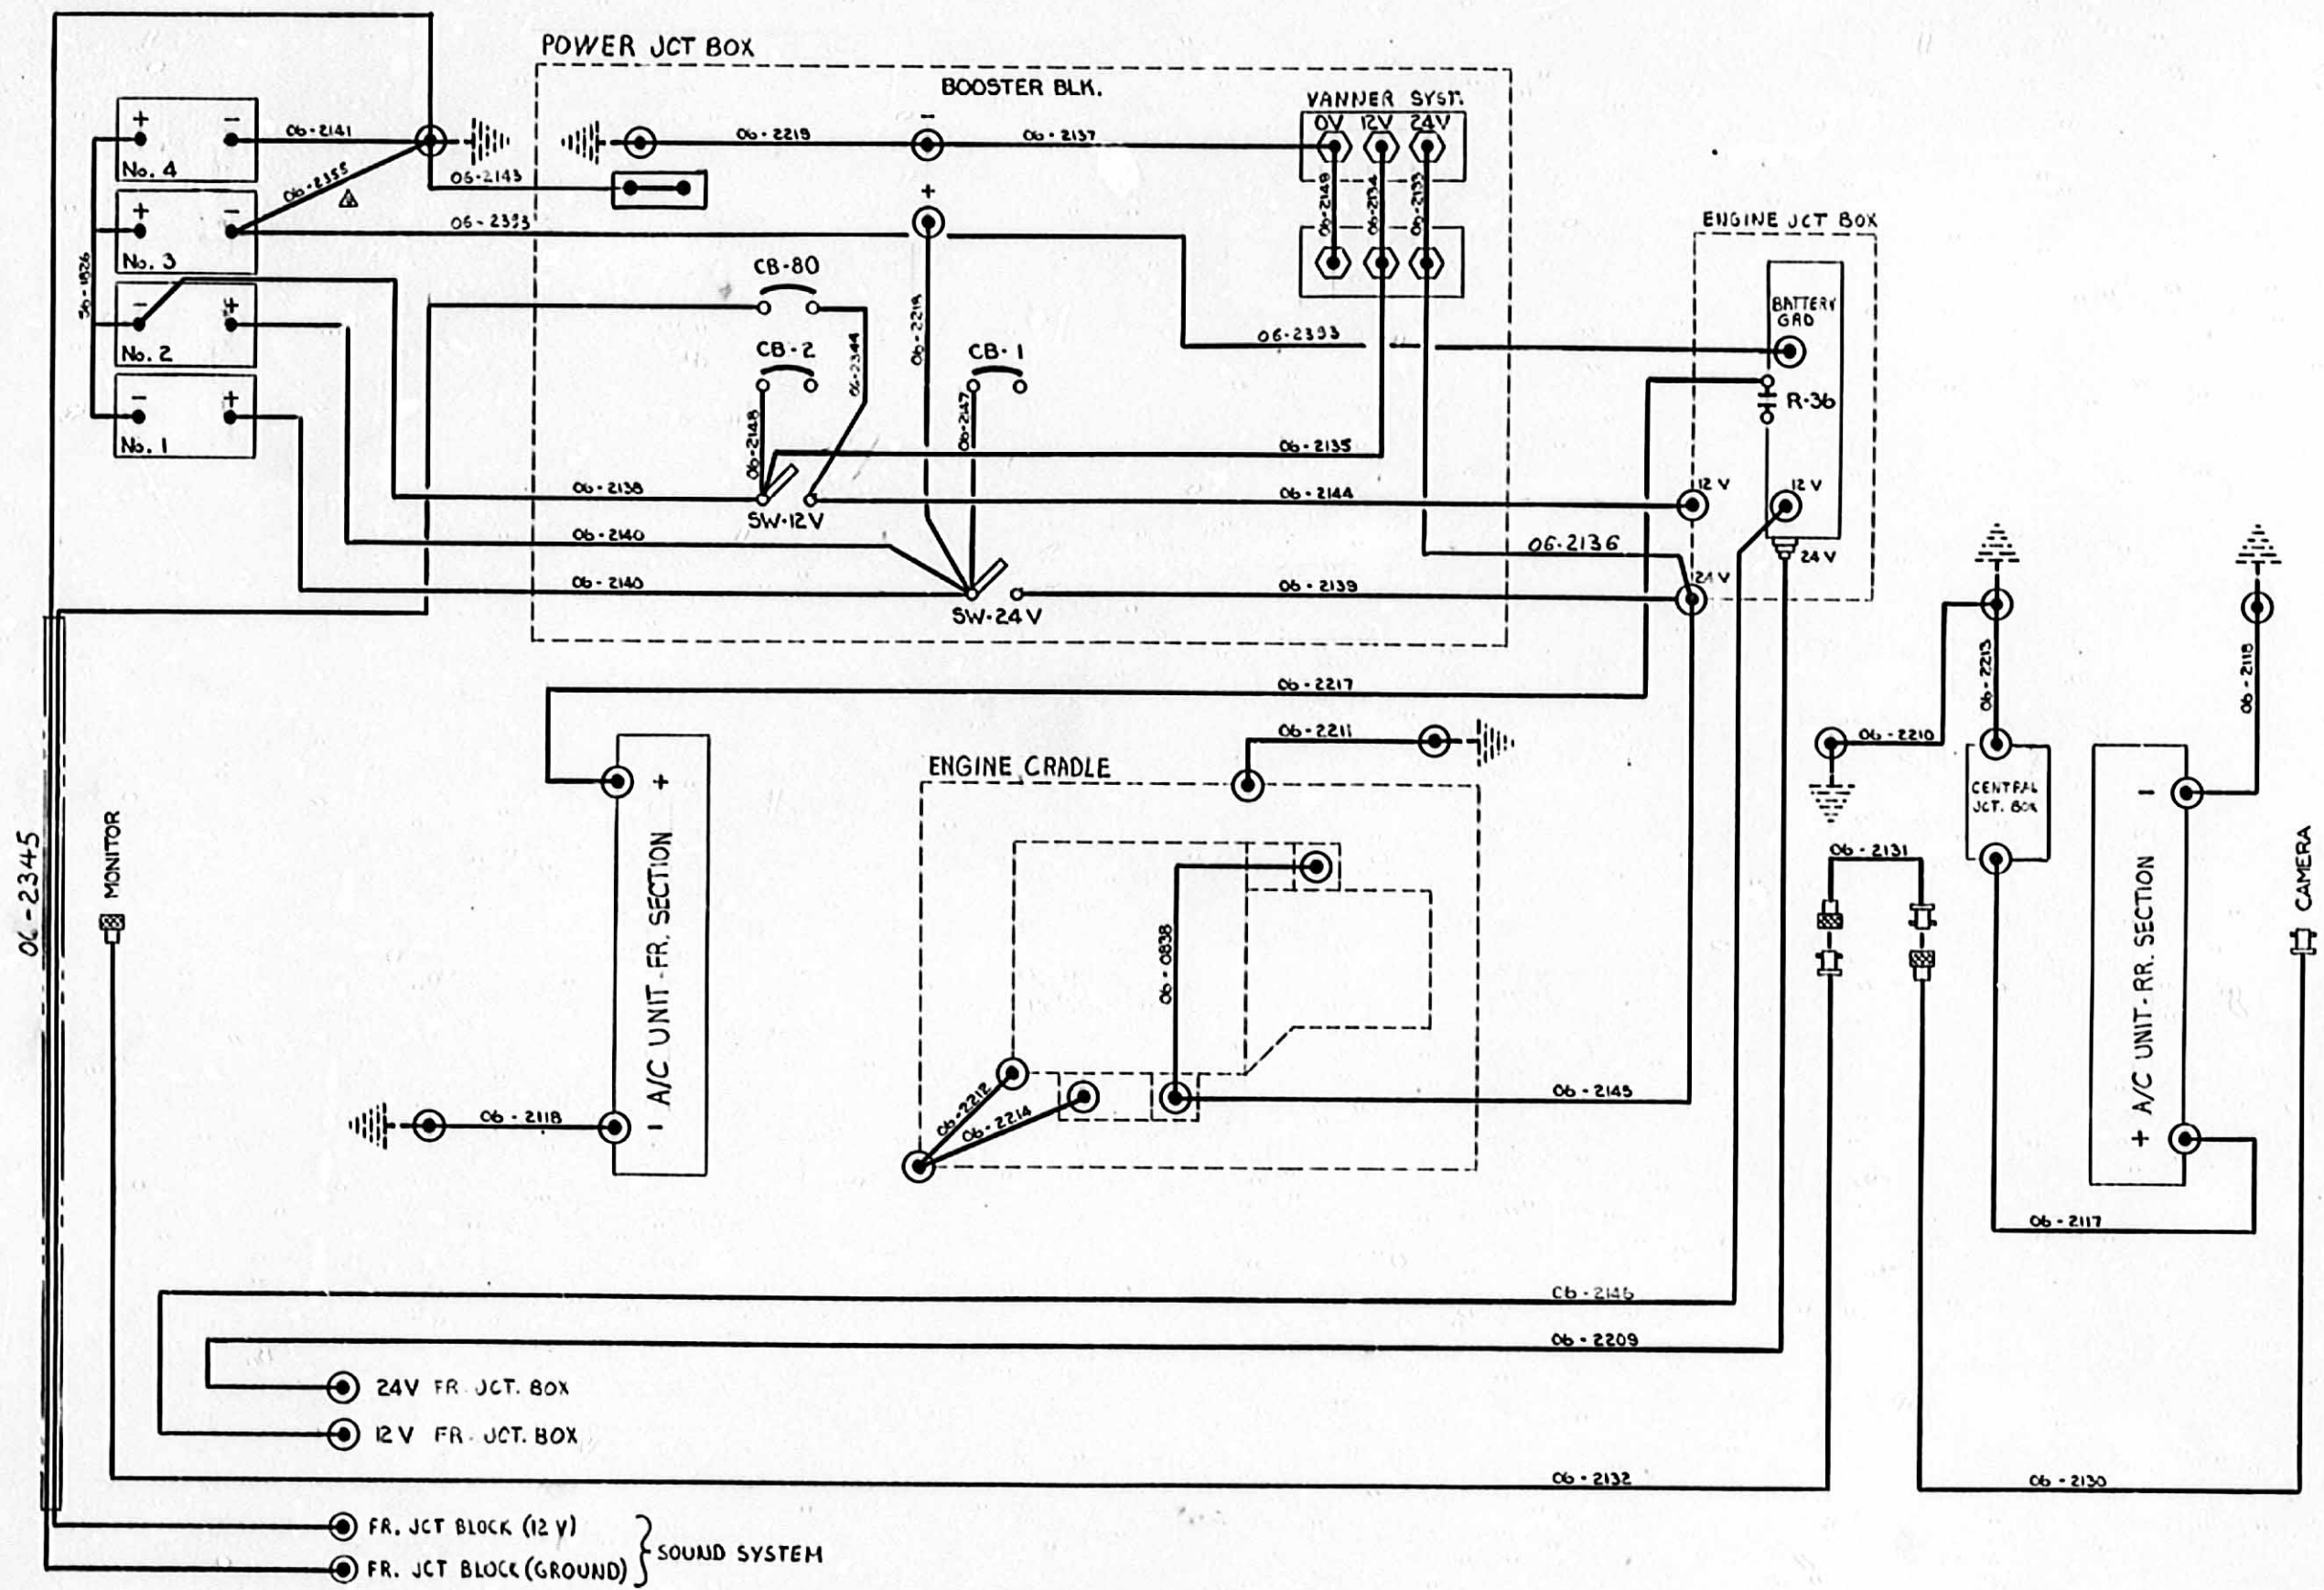

				DESC :				DESS:	DATE- 90-01
				CABLE ARRANGEMENT				VER.-	APPR.-
				APPL: W/ L-027 L-033				REF: H5-60	NO: D-060732 p. B C
ITEM	DATE	REVISION	PAR						
A	91-02	MISE A JOUR	MA						

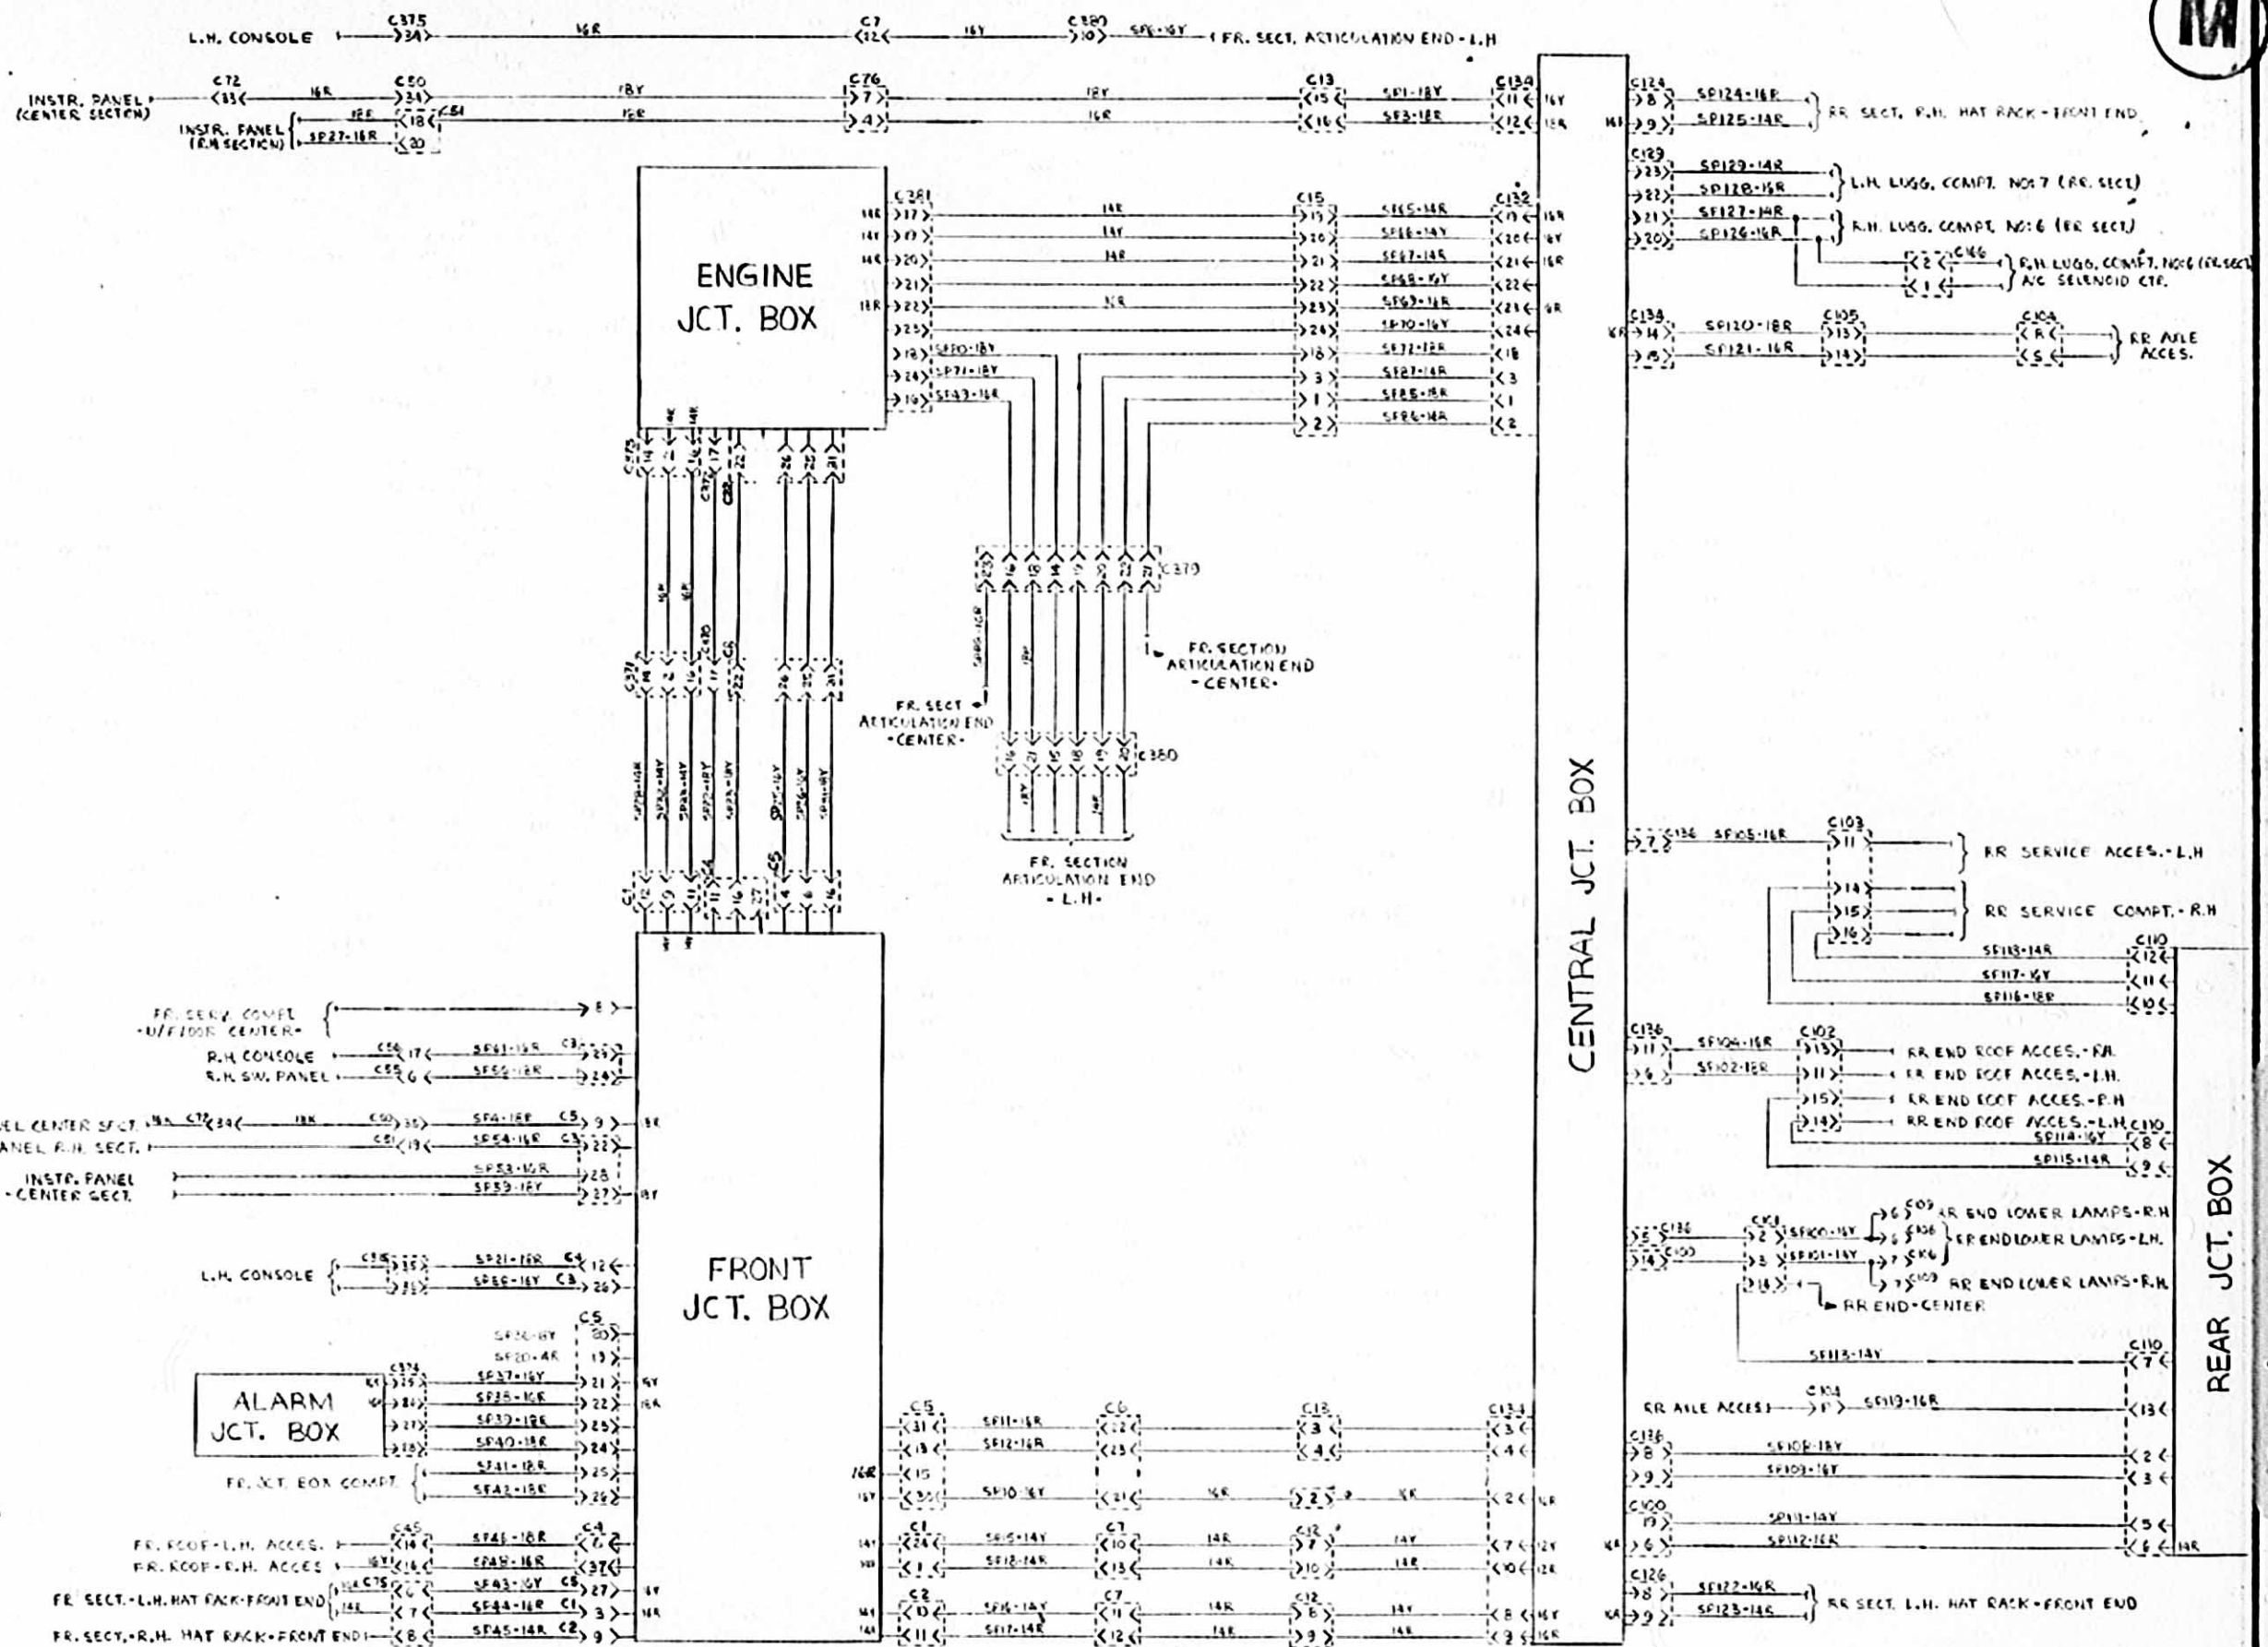

DESCRIPTION:

SPARE WIRES

DR. - B, C

DATE- 90-017

CK. -

APPR.- 119

APPL: EFF. W/L-027
L-023...

REF: H5-60

NO: D-060732 P.C	C
------------------	---

[illegible]

CIRCUIT BREAKER CODE

CIRCUIT BREAKER					
CB#	AMP	VOLT.	DIAG. PAGE	LOCATION	FUNCTION
69	6	24H	16	FR. JCT. BOX	TACHOGRAPH CLOCK
70	3	24i	16	"	LOW FUEL SENSOR & TT LT
71	8	24	16	CENT. JCT. BOX	TOILET PUMP
72	8	"	"	"	TOILET LTS
73	"	"	"	"	TOILET FAN
74	10	24i	17	FR. JCT. BOX	UPPER WIND. DEFROST
75	10	24	15	"	L.H. CONSOLE SWITCH
76	10	24i	17	"	UPPER WIND. WIPER & WASHER
77	8	24	18	"	RR & FR DOOR CONTROL
78	3	12i	3	"	RETARDER SW.
79	8	24	18	CENT. JCT. BOX	RR CTR DOOR
80	30	12	24	POWER JCT. BOX	SOUND SYSTEM
81	16	24	19	FR. JCT. BOX	FR E.C.U. ANTI SKID
82	16	"	19	"	" " "
83	6	24i	19	"	" " "
84	70	12	1	ENG. JCT. BOX	CENTRAL JCT BOX
85	8	24i	8	ENG. JCT. BOX	HATRACK COMPT. LT.
86	6	24	21	FR. JCT. BOX	FEED KNEELING SYSTEM
87	6	24i	21	ENG. JCT. BOX	ARTICULATION SW
88	8	24	22	FR. JCT. BOX	ARTICULATION BRAKE
89	8	24i	"	ENG. JCT. BOX	AIR DRYER
90	6	"	22	FR. JCT. BOX	BACK UP MONITOR CONVERTER
91	8	24i	18	FR. JCT. BOX	SPEED LIMITER SW.
92	6	24i	22	FR. JCT BOX	DRIVER'S SEAT HEATER (DG. THOM)
94	10	12	23	FR. JCT. BOX	LUGGAGE DOOR LOCK
95	15	12	24	"	RADIL
97	6	24	16	CENT. JCT. BOX	aisle LTS.
98	10	12	7	"	BACK-UP LIGHT & BACK-UP ALARM
99	"	"	7	"	BACK-UP LT
100	8	24	9	"	GENERAL LT - REAR SECTION
101	6	"	9	"	24V FLUOR LT - REAR SECTION
102	6	12i	22	"	CAMERA HEATER
103	6	12	16	"	LAV. NIGHT LIGHT
105	6	110	9	REAR JCT. BOX	110-V FLUORESCENT - FR. L.H.

CIRCUIT BREAKER					
CB#	AMP	VOLT.	DIAG. PAGE	LOCATION	FUNCTION
106	6	110	23	ALPH. JCT. BOX	WATER HEATER TANK
107	20	110	23	"	ENGINE BLOCK HEATER
108	3	24	3	ENG. JCT. BOX	RETARDER ATEC CTR
109	10	12	6	FR. JCT. BOX	CORNERING LTS
110	15	12	24	"	AUDIO. AMPLI - FR. SECT.
111	15	12	24	"	" - RR SECT.
112	6	24	15	FR. JCT. BOX	FR. DESTINATION SIGN
113	20	24	23	CENT. JCT. BOX	LH LUGGAGE DOOR LOCK - RR
114	20	24	23	"	RH LUGGAGE DOOR LOCK - RR
115	25	24	23	ENG. JCT. BOX	FR. LUGGAGE DOOR LOCK
116	6	12	2	"	LOW COOLANT MODULE
117	8	24	26	GALLEY	HEATING CONTAINER #1
118	8	24	26	"	" " " " #2
119	8	24	26	"	" " " " #3
120	6	24	26	"	GALLEY LAMPS
121	70	24	26	POWER AT BOX	GALLEY (MICROWAVE OVEN)
122	25	24	26	"	GALLEY (HEATING CONT. & LAMPS)
123	6	12	26	"	GALLEY WATER PUMP
124	70	12	28	"	VIDEO SYSTEM

B	91-02	MISE A JOUR	MY
A	90-10	CB76 ETAT SUR 24V → 24V	MY
	90-09	BREWER GA ETAT SA 063082	MC
TEM	DATE	REVISION	24

DESC:

CIRCUIT BREAKER CODE

APPL: EFF. W/ L-027
L-033...

REF: H5-60

DESS: D.V.

DATE: 90-01

VER: 16

APPR: 10

NO: D-060732 P.01 C

CIRCUIT BREAKER CODE



CIRCUIT BREAKER					
CB#	AMP.	VOLT.	DIAG. PAGE	LOCATION	FUNCTION
1	30	24	1	FR. JCT. BOX	24 V HOT WIRE
2	30	12	1	"	12 V HOT WIRE
3	90	24	1	ENG. JCT. BOX	24 V FEED FRONT JCT. BOX
4	70	24	1	"	24 V FEED CENTRAL JCT. BOX
5	70	12	1	"	12 V FEED FRONT JCT. BOX
6	8	24	1	FR. JCT. BOX	FEED MASTER SWITCH
7	8	24	1	ENG. JCT. BOX	ENGINE - RR START SW. & SERV. LT.
8	8	24	1	"	RR ENGINE CTR SW
9	8	24	1	FR. JCT. BOX	WEBASTO SW.
10	15	24	1	ENG. JCT. BOX	WEBASTO
11	20	12	2	"	ECM (DDEC II)
12	20	12	2	"	ECM (DDEC II)
13	6	12	3	"	ECU (ATEC)
14	8	12	3	"	ATEC CTR
15	10	12	3	"	BACK-UP ATEC CTR
16	8	24	4	FR. JCT. BOX	ALARM BUZZER & INSTRUMENT
17	10	24	4	"	ELECT. HORN
18	6	24	4	"	FIRE ALARM
19	6	12	4	"	12V VOLT METER
20	6	24	4	"	FOG LT SW
21	15	12	4	"	FOG LT
22	20	12	4	"	HEADLAMP (HI)
23	15	12	4	"	HEADLAMP (LO)
24	6	24	5	"	HEAD LAMP SW & MULTI-FUNC SW
25	10	24	17	"	MULTI-FUNC SW. (WIPER, WASHER)
26	20	12	6	"	FLASHER & HAZARD UNIT
27	15	24	7	ENG. JCT. BOX	FRONT BAGGAGE LT.
28	15	12	5	CENT. JCT. BOX	REAR ID TAIL & LICENCE LT
29	8	12	5	"	REAR CLEARANCE LT
30	8	12	5	"	REAR TAIL & MARKER LT
31	6	12	5	"	LICENCE PLATE LT
32	15	12	5	"	STOP LT
33	6	24	7	FR. JCT. BOX	STOP LT SW
34	6	24	7	"	PARK BRAKE SW.

CIRCUIT BREAKER					
CB#	AMP.	VOLT.	DIAG. PAGE	LOCATION	FUNCTION
35	8	12	7	FR. JCT. BOX	FR. CLEARANCE LT.
36	6	24	8	CENT. JCT. BOX	EXIT LAMP
37	8	12	7	FR. JCT. BOX	FR. SECTION MARKER LT.
38	15	24	7	CENT. JCT. BOX	RR BAG. COMPT LT.
39	6	24	8	FR. JCT. BOX	FR. SERV. COMP LT
40	6	110	9	ALARM JCT. BOX	110V. FLUOR - RR
41	6	"	"	"	110V. FLUOR. - FR. RH
42	15	24	"	ENG. JCT. BOX	FRONT FLUORESCENT (24V)
43	8	24	"	FR. JCT. BOX	HAT RACK LTS SW
44	15	"	"	ENG. JCT. BOX	FRONT READING LTS - RH.
45	15	"	"	"	" " " - LH.
46	8	"	"	CENT. JCT. BOX	REAR " " - RH.
47	8	"	"	"	" " " - LH.
48	10	"	9	ENG. JCT. BOX	FRONT GENERAL LTS
50	8	24	10	FR. JCT. BOX	DASH LT REOSTAT
51	10	"	"	"	U/SEAT LT
52	6	"	"	"	PASS & HOSTESS CHIME SW
53	8	24	"	"	A/C & HEAT SW.
54	8	24	"	ENG. JCT. BOX	A/C LOGIC PANEL.
55	6	24	13	FR. JCT. BOX	LEVER'S HTR FAN SW. IGN. CTR.
56	15	24	"	ENG. JCT. BOX	REAR WATER PUMP
57	15	"	"	"	FRONT WATER PUMP
58	8	"	"	"	A/C COMP. CLUTCH & COND. FAN SOL.
59	90	"	"	"	FRONT EVAP. FAN MOTOR
60	40	"	"	F.E.F.M.	" " " " RH
61	40	"	"	"	" " " " LH
62	90	"	"	ENG. JCT. BOX	REAR EVAP. FAN MOTOR
63	40	"	"	R.E.F.M.	" " " " RH
64	40	"	"	"	" " " " LH
65	6	"	"	ENG. JCT. BOX	HUMIDISTAT CTR.
66	10	"	"	FR. JCT. BOX	DRIVER'S HTR FAN SW
67	10	24	14	"	REAR VIEW MIRROR
68	15	12	14	"	DRIV. WINDOW LIFTER & CIGAR LIG
69	40	24	12	POWER JCT. BOX	AUX. CONDENSER

				DESC: CIRCUIT BREAKER CODE				CLASS: D.T.	DATE: 90-01
								VER: KC	APPR: [Signature]
90-11 CB25 ETAT SUR ZAV -> ZAVI 90-09 CC 2182 LES BREAKERS 90-06 MISE A JOUR				REVISION DATE PAR				APPR: EFF. W/L 027 L-033...	
				REF: H5-60				NO: D-060732 p. D 'C	

RELAYS CODE

R*	SIG. P&E		AMP	CATEGORY	VOLUME CAL.	LOCALIZATION	FUNCTION
	COIL	SWT					
74	5	5	20	CUBIC N.O.	24	FR. JCT. BOX	BACK-UP CORNERING SPECIAL VOYAGEUR
75	5	5	"	"	12	"	" " "
76	7	5	20	"	24	CENT. BOX	PARK BRAKE STP LTS
77	4	4	20/10	CUBIC N.O.	11	F. J. BOX	DAYTIME RUN LTS CUT-IN
78	4	4	30	CUBIC N.O.	12	" " "	DAYTIME RUN LTS
79	18	18	20	" "	24	" " "	THROTTLE SW - OPEN DOOR SIGN
80	12	12	20	" "	24	ENG. J. BOX	COMPRESSOR PRESSURE SW
81	24	12	10	" N.C.	24	FR. J. BOX	DAY BLINKER
82	22A	5A	30	CUBIC N.O.	12	FR. J. BOX	EMERGENCY FLASHER (WESTGORE) ON REVERSE
83	10	18	20	" "	24	FR. J. BOX	FRONT STEP LTS
84	10	18	20	" "	24	CENT. BOX	REAR STEP LTS
85	26A	26A	20	" "	24	GALLEY	HEATING CONTAINER # 1
86	26A	26A	20	" "	24	"	" " " " # 2
87	26A	26A	20	" "	24	"	" " " " # 3
88	26A	26A	20	" "	24	"	GALLEY COMPS
89	12	12	30	MAGN. N.C.	24	POWER X-3. BOX	AUX. CONDENSER
90	12	12	70	SPR. CIRCUIT	24	" "	" "
91	18	18	20	CUBIC N.O.	24	CENT. BOX	REAR DOOR ALARM
92	24C	24C	10	CUBIC N.C.	24	FR. J. BOX	AMPLIFIER FOR REAR SECT. SPEAKER
93	26	26	20	CUBIC N.O.	24	GALLEY	GALLEY WATER PUMP
94	3	3	20	CUBIC N.O.	24	ENG. J. B.	RETARDER ENABLE-ABS CTRL

RELAYS CODE

[illegible]

C	92-04	R94 ADJUTE 06*92030
B	91-02	MISE A JOUR
A	90/06	MISE A JOUR
TEV	DATE	REVISION

TITRE :

RELAYS CODE

DT SS:	B.C
--------	-----

DATE - 90/01

VER. -

APPR. - *VS*

APPL: W/L-027
L-033...

REF: H5-60

no: D-060732	p F1	C
--------------	------	---

RELAYS CODE

RELAYS									
R#	DIAG. PAGE	AMP	CATEGORY	VOLT.	LOCATION	FUNCTION			
	COIL	COIL		COIL					
1	1	4	200	MAGNETIC NO	24	FR. JCT. BOX	ENGINE RUN (24V)		
2	1	1	20	CUBIC NO	"	ENG. JCT. BOX	" " (24V)		
3	1	16	10	" DC	"	ENG. JCT. BOX	" " (24V)		
4	1	1	200	MAGNETIC NO	"	ENG. JCT. BOX	STARTING MOTOR		
5	1	11	20	CUBIC NO	12	FR. JCT. BOX	BLOWER CUT IN		
6	2	2	20	" NO	24	ENG. JCT. BOX	BRAKE SW CRUISE CTR.		
7	2	2	10	" DC	"	"	FAST IDLE DEEC CTR		
8	3	3	10	" "	"	"	CUT IN 12V ATEC		
9	3	3	20	" NO	"	"	CHECK TRANSM ATEC		
10	3	3	20	" "	"	"	BACK UP ATEC SIGNAL		
11	3	3	20	" "	"	"	RETARDER ATEC		
12	4	4	20	" "	12	FR. JCT. BOX	ELECTRICAL HORN		
13	4	4	20	" "	"	"	FRONT FOG LT		
15	5	4	20	CUBIC NO	24	FR. JCT. BOX	HEADLAMPS (HI)		
16	5	4	20	" "	"	"	" (Lo)		
17	5	7	20	" "	"	"	FRONT CLEARANCE LT		
18	5	10	20	" "	"	"	U/SEAT LT & DASH RHEOSTAT		
19	5	6	20	" "	"	"	RH. DIRECTIONAL LT		
20	5	6	20	" "	24	"	LH. " "		
21	5	5	10	" DC	"	"	NIGHT BLINKER		
22	5	5	20	" NO	"	ENG. JCT. BOX	RR CLEAR MARKER & LIC. LT		
23	7	5	20	" "	"	"	STOP LT		
24	9	9	20	" "	12	ENG. JCT. BOX	FRONT FLUORESCENT (24V)		
25	9	9	20	" "	"	"	FRONT READING LTS		
26	9	9	20	" "	"	ENG. JCT. BOX	REAR " "		
27	9	9	20	" "	"	ENG. JCT. BOX	GENERAL LTS		
28	9	9	20	" "	24	"	A/C LOGIC PANEL		
29	11	13	20	" "	"	"	REAR WATER PUMP		
30	13	11	20	" "	"	"	REAR HUMIDISTAT CTR		
31	12	13	10	" NO	"	"	FRONT WATER PUMP		
32	13	12	20	" NO	"	"	FRONT HUMIDISTAT CTR		
33									
34	12	13	20	CUBIC NO	"	ENG. JCT. BOX	A/C COMPRESSOR CLUTCH		
35	12	13	20	" "	"	"	COND. FAN SOL. VALVE		
1A	1	22	20	" "	24	FR. JCT. BOX	12V IGNITION - FR.		
2A	1	1	20	" "	"	ENG. JCT. BOX	12V IGNITION - ENG.		
3A	1	22	20	" "	"	ENG. JCT. BOX	12V IGNITION - CENT		

RELAYS									
R#	DIAG. PAGE	AMP	CATEGORY	VOLT.	LOCATION	FUNCTION			
	COIL	COIL		COIL					
36	13	13	200	MAGNETIC NO	24	ENG. JCT. BOX	EVAP. FAN MOTOR - FR.		
37	13	13	200	" "	"	"	" " " - RR		
38	13	13	20	CUBIC NO	"	FR. JCT. BOX	DEFROSTER CTR		
39	8	8	20	" "	"	"	DOOR AJAR		
40	18	18	20	" "	"	"	RR & FR DOOR SPEED SW CTR.		
41	19	19	20	" "	"	"	ANTI SKID CTR		
42	19	19	20	" "	"	"	" " "		
43	19	19	20	" "	"	"	" " "		
44	19	7	10	" NO	"	"	" " "		
45	21	21	20	" NO	"	"	KNEELING CTR		
46	21	21	10	" DC	"	"	" " "		
47	21	21	20	" NO	12	ENG. JCT. BOX	ARTICULATION SW		
48	6	6	20	" "	24	FR. JCT. BOX	DOOR AJAR IGNITION		
49	23	23	20	" "	12	"	RADIO & AMPLI.		
50	23	23	20	" "	12	"	" " "		
51	2	2	20	" "	24	ENG. JCT. BOX	"KILL SW" CRUISE CTR		
52									
53	7	7	20	CUBIC NO	12	ENG. JCT. BOX	BACK-UP LT		
54	9	9	20	" "	24	"	GENERAL LT (REAR SECTION)		
55	9	9	20	" "	24	"	24V FLOOR (REAR SECTION)		
56	5	5	20	" "	24	ENG. JCT. BOX	SIDE MARKER, TAIL / LICENSE LT.		
57	1	1	20	" "	"	ENG. JCT. BOX	VOLTAGE REGULATOR - IGN		
58	16	16	20	" "	"	ENG. JCT. BOX	TOILET FLUORESCENT		
59	5	6	20	" "	"	FR. JCT. BOX	CORNERING LT RH		
60	5	6	20	" "	"	"	" " LH		
61	5	5	20	" "	"	"	" " CUT-OUT		
62	5	7	20	" "	"	"	MARKER LT-FR SECTION		
63	5	8	20	" "	"	ENG. JCT. BOX	EXIT LT		
64	22	22	20	" "	12	ENG. JCT. BOX	CAMERA DOOR SYST. - SERVICE		
65	23	23	50	" "	"	ENG. JCT. BOX	LUGGAGE DOOR LOCK - FR		
66	23	23	50	" "	"	"	" " " " "		
67	23	23	20	CUBIC NO	24	ENG. JCT. BOX	LH LUGGAGE DOOR LOCK - RR		
68	23	23	20	" "	"	"	" " " " "		
69	23	23	20	" "	"	"	RH LUGGAGE DOOR LOCK - RR		
70	23	23	20	" "	"	"	" " " " "		
71	22	22	30	" "	12	FR. JCT. BOX	BACK-UP MONITOR		
72									
73	1	24	20	CUBIC NO	24	FR. JCT. BOX	RADIO AMPL. CUT-IN		

				TITRE: RELAYS CODE				DESS: BC		DATE: 90.01	
								VER: /		APPR: /	
				APP: W/1-037 L-033...				REF: HS-60		NO: D-060732 p. E C	
				B 40/01 (C990-B4) R12 VOLT. COIL ETAT 24							
				A 90/06 MISE A JOUR							
				REV DATE REVISION							

DIODE CODE

DIODE					
D ^o	AMP.	VOLT	DIFF. PAGE	LOCATION	FUNCTION
1		24	4	FR. JCT. BOX	LO. AIR SEC.
2		24	4	"	LO. AIR PRIM.
4		24	1	ENG. JCT. BOX	NEUTRAL GROUND
5		"	9	ENG. JCT. BOX	RR ELECTRONIC TRANSMITTER
6		"	12	"	A/C CTR MODUL - REAR
7		"	10	"	FR ELECTRONIC TRANSMITTER
8		"	12	"	A/C CTR MODUL - REAR
9		"	12	"	" " " "
10		"	11	"	A/C CTR
11		"	11	FR. JCT. BOX	" "
12		"	11	"	" "
13		"	16	CENT. JCT. BOX	TOILET
14		"	18	FR. JCT. BOX	REAR & FRONT CTR DOOR
15		"	18	"	" " " "
16		"	18	"	" " " "
17		"	21	"	KNEELING CTR
18		"	21	"	" "
19		"	21	"	" "
20		12	21	ENG. JCT. BOX	ARTICULATION SW # 3
21		24	13	"	FAN A/C ONLY
22		24	5	FR. JCT. BOX	HAZARD - FLASHER RH.
23		24	5	"	" " LH
24		24	5	"	(BRAKE TT LT) SW.
25		24	5	"	(FASTIDLE SW) STOP SW.
26		24	13	ENG. JCT. BOX	FAN A/C ONLY
29		24	22	CENT. JCT. BOX	ARTICULATION BRAKE SYSTEM
31		24	22	CENT. JCT. BOX	ARTICULATION BRAKE SYSTEM
32	20	24	23	ENG. JCT. BOX	LUGGAGE DOOR LOCK FR.
33	20	24	23	"	" " " "
34	20	24	23	CENT. JCT. BOX	LUGGAGE DOOR LOCK RR
35	20	24	23	"	" " " "
36	20	24	23	"	" " " "
37	20	24	23	"	" " " "
38	3	24	5	FR. JCT. BOX	BACK-UP CORNERING " SPECIAL VOYAGEUR "

DIODE					
D ^o	AMP.	VOLT	DIFF. PAGE	LOCATION	FUNCTION
39	3	12	5	FR. JCT. BOX	BACK-UP CORNERING " SPECIAL VOYAGEUR "
40	3	12	5	"	" " " "
41	3	24	5	"	" " " "
42	3	24	4	FR. JCT. BOX	DAYTIME CUT-IN - PARK BRAK
43	3	24	4	" " "	DAYTIME CUT-IN - TAIL LTS
44	3	24	7	ENG. JCT. BOX	STOP LTS - RETARDER
45	3	24	13	" " "	A/C COMPR CLUTCH - DIODE RECTIFIER
46	3	24	16	CENT. JCT. BOX	TOILET EMERG BUZZER
47					
48	3	24	13	ENG. J. B	A/C COMPRESSOR CLUTCH
49	3	24	18	F. J. B	THROTTLE INHABIT - RR DOOR
50	3	24	18	F. J. B	THROTTLE INHABIT - FR DOOR
51	3	24	18	F. J. B	DAMPER ON - FR & RR DOOR OPEN
52	3	24	11	R.H. SW. PANEL	FRESH AIR CONTROL
53	3	24	11	ENG. J. B	CONSTANT A/C & HEAT
54	3	24	13	ENG. J. B	CONSTANT A/C & HEAT

M

DESC :		DIODE CODE		DESS: B.C.	DATE: 90-01
B 92-04 D53 & D54 AINTÉ 062030				VER.:	APPR.:
A 93/06 MISE A JOUR					
TEM DATE	REVISION	APPL: W/L-027 L-033...	REF: H5-60	NO: D-060732 P.F C	

[illegible][illegible]

										TITRE:		DESS: B.C.		DATE- 90-01	
										RESISTOR CODE		VER.-		APPR.- <i>W</i>	
										APPL: W/L-034		REF: H5-60		NO: D-060732 P.G	
										ITEM DATE		REVISION		PAR C	

CONNECTOR CODE

CONNECTOR			
C#	LOCATION	DESIGNATION	NO. CAVITY
C77	FR. SERVICE COMPT.	FEED FR. SERVICE COMPT. ACCESSORIES	16
C78			
C79	DRIVE AXLE	FEED DRIVE AXLE ACCESSORIES	22
C80	ENGINE JCT BOX COMPT.	FROM ARTICULATION TO ENGINE JCT. BOX	14
C81	" " " "	ELECTRONIC CONTROL MODULE ENGINE	30
C82	" " " "	" " " "	30
C83	" " " "	ELECTRONIC CONTROL UNIT (TRANSMISSION)	30
C84	" " " "	" " " "	30
C85	FR. JCT BOX COMPT.	SPEED LIMITE SW.	9
C86	FR. SERVICE COMPT.	SIDE FLASHER RH	2
C87	" " " "	SIDE MARKER	2
C88	" " " "	DRIVER'S LIQUID SOL. VALVE	2
C89	" " " "	DRIVER'S WATER VALVE	2
C90	" " " "	THROTTLE POSITION SENSOR	3
C91	" " " "	INSTRUMENT PANEL RHEOSTAT	2
C92	" " " "	AIR RETURN SENSOR	2
C93	" " " "	SIDE FLASHER LH	2
C94	" " " "	BRAKE INTERLOCK SOL. VALVE	2
C95	" " " "	FRESH AIR DAMPER SOL. VALVE	2
C96	" " " "	ELECTRICAL HORN	2
C97	" " " "	BELLOWS CTR. VALVE	2
C98	" " " "	EXHAUST CTR. SOL. VALVE	2
C99	" " " "	STEERING COMPT. LTS	2
C100	CENTRAL JCT. BOX	CENTRAL JCT BOX TO RR SERVICE COMPT.	22
C101	RR SERVICE COMPT.	FEED RR LOWER LAMP	16
C102	" " " "	FEED RR ROOF ACCESSORIES	22
C103	" " " "	FEED RR SERVICE COMPT. ACCESSORIES	24
C104	RR AXLE ACCESSORIES	FEED RR AXLE ACCESSORIES	22
C105	ARTICULATION	FROM ARTICULATION TO RR SERVICE COMPT.	14
C106	RR END LH SIDE	RR LH LOWER LAMP	9
C107	RR END CENTER	CYCLOP LT.	2
C108	" " " "	LICENSE PLATE LT.	2
C109	RR END RH SIDE	RR RH LOWER LAMP	9
C110	RR SERVICE COMPT.	RR JCT BOX	24
C111	RR SECT. LH HAT RACK - FR.	FEED LH HAT RACK ACCESSORIES	9
C112	RR SECT. RH HAT RACK - FR.	FEED RH HAT RACK ACCESSORIES	9
C113	RR SECT. LH HAT RACK - FR.	FEED LH SPEAKER	4
C114	RR & FR LH HAT RACK	FOR READING LTS	2

CONNECTOR			
C#	LOCATION	DESIGNATION	NO. CAVITY
C115	HAT RACK	FLUORESCENT	4
C116	" " " "	BALLAST DISTRIBUTION	6
C117	" " " "	BALLAST FEEDING	4
C118	" " " "	FEED GENERAL & HAT RACK LTS	3
C119	" " " "	FLUORESCENT	4
C120	" " " "	BALLAST DISTRIBUTION	6
C121	RR SECT. RH HAT RACK - FR.	FEED 110-V FLUOR.	2
C122	" " " "	FEED SPEAKER	4
C123	RR & FR RH HAT RACK	READING LTS	2
C124	CENTRAL JCT. BOX	FROM CENTRAL JCT. BOX TO RR RH HAT RACK	24
C125			
C126	CENTRAL JCT. BOX	FROM CENTRAL JCT. BOX TO RR LH HAT RACK	24
C127	ARTICULATION	RR DIGITAL THERMOMETER FEEDING	3
C128			
C129	CENTRAL JCT. BOX	FROM CENTRAL JCT. BOX TO LUGGAGE COMPT.	24
C130			
C131	CENTRAL JCT. BOX	FROM CENTRAL JCT. BOX TO ARTICUL. HARN.	6
C132	" " " "	" " " "	24
C133	" " " "	" " " "	37
C134	" " " "	" " " "	16
C135			
C136	CENTRAL JCT. BOX	FROM CENTRAL JCT. BOX TO RR SERVICE COMPT.	16
C137	RR CONSOLE	RR DIGITAL THERMOMETER	2
C138	aisle RR STEP WELL	AIR RETURN SENSOR	2
C139	LH & RH ROOF ARTICULATION	FEED EMERGENCY EXIT LTS	2
C140	RR SECT. LH HAT RACK - FR.	FEED 110-V FLUOR.	2
C141	FR. SERVICE COMPT.	KNEELING LT	2
C142	RH CONSOLE	FR. DIGITAL THERMOMETER	2
C143	FR LUGGAGE COMPT.	" " " " SENSOR	2
C144	ARTICULATION - LH	RR DIGITAL THERMOMETER SENSOR	2
C145	RR SECT. LUGGAGE COMPT. - RH	LUGGAGE LTS	2
C146	" " " " " "	" " " "	2
C147	" " " " " "	FEED LUGGAGE DOOR LOCK	6
C148	" " " " " "	LUGGAGE LTS	2
C149	" " " " " "	FEED LUGGAGE DOOR LOCK	6
C150	" " " " " "	LUGGAGE LTS	2
C151	" " " " " "	AIR RETURN SENSOR	2
C152	" " " " " "	FEED LUGGAGE DOOR LOCK	6

DESC:

CONNECTOR CODE

DESS:

DATE - 90-01

VER. -

APPR. -

ITEM DATE

REVISION

PAR

APPL: EFF. W/L034

REF: H5-60

NO: D-060732 p. H2 C

CONNECTOR CODE

CONNECTOR			
C #	LOCATION	DESIGNATION	NO. CAVITY
C153	RR SECT. LUGGAGE COMPT. LH	LUGGAGE LTS	2
C154	" " " " " "	AIR AMBIENT SENSOR	2
C155	" " " " " "	LUGGAGE LTS	2
C156	" " " " " "	FEED LUGGAGE DOOR LOCK	6
C157	" " " " " "	LUGGAGE LTS	2
C158	" " " " " "	FEED LUGGAGE DOOR LOCK	6
C159	" " " " " "	LUGGAGE LTS	2
C160	" " " " " "	AIR RETURN SENSOR	2
C161	" " " " " "	LUGGAGE DOOR LOCK	6
C162	RR SECT. LUGGAGE COMPT.	ST1 WATER VALVE	2
C163	" " " " " "	ST2 WATER VALVE	2
C164	" " " " " "	ST3 WATER VALVE	2
C165	" " " " " "	LIQUID SOLENOID VALVE	2
C166	" " " " " "	FEED WATER VALVE	9
C167	RR END ROOF	CLEARANCE LTS	2
C168	" " " " " "	WATCH YOUR STEP	2
C169	" " " " " "	LAVATORY OCCUPIED SW.	2
C170	RR SECT. UNDER LH SEAT	FEED. LH UNDER SEAT ACCESSORIES	4
C171	" " " " " "	ACCELEROMETER	2
C172	" " " " " "	aisle LTS	2
C173	" " " " " "	RUNNING LTS	2
C174	UNDER DASH - RH	DRIVERS HTR SPEED CTR MODULE	9
C175	" " " " " "	" " " " " "	9
C176	" " " " " "	LOWER WIND. WIPER PULSE GENERATOR	6
C177	" " " " " "	LOWER WINDSHIELD WIPER MOTOR	6
C178	" " " " " "	DRIVER'S HTR & DEFROSTER LH FAN	2
C179	" " " " " "	" " " " " RH "	2
C180	RR END ROOF - CENTER	CAMERA	4
C181	" " " " " - LH	LAVATORY FLUORESCENT	2
C182	" " " " " - LH	WATER TANK HEATER	3
C183	RR SERVICE COMPT.	SIDE MARKER	2
C184	" " " " " "	SIDE DIRECTIONAL LTS LH	2
C185	" " " " " "	FRESH AIR DAMPER SOL. VALVE	2
C186	" " " " " "	FRESH AIR SENSOR	2
C187	" " " " " "	CAMERA DOOR SOLENOID	2
C188	" " " " " "	CAMERA DOOR CTR. SW.	4
C189	" " " " " "	LAVATORY PUMP	2
C190	" " " " " "	BACK-UP ALARM	2

CONNECTOR			
C #	LOCATION	DESIGNATION	NO. CAVITY
C191	RR SERVICE COMPT	TOILET VENTILATION	2
C192	" " " " " "	SIDE DIRECTIONAL LTS - RH	2
C193	" " " " " "	" " " " " "	
C194	" " " " " "	" " " " " "	
C195	ARTICULATION	ANTI-JACK SYSTEM	2
C196	ENGINE JCT BOX	RED LED INDICATOR - FR. SECT. (HTR)	2
C197	" " " " " "	" " " " " - RR. SECT. (HTR)	2
C198	" " " " " "	GREEN LED INDICATOR - FR. SECT. (A/C)	2
C199	" " " " " "	" " " " " - RR. SECT. (A/C)	2
C200	FR. SECT. HAT RACK	FLUORESCENT	4
C201	" " " " " "	" " " " " "	4
C202	" " " " " "	BALLAST FEEDING	4
C203	" " " " " "	BALLAST DISTRIBUTION	6
C204	" " " " " "	FEED GENERAL & HAT RACK LTS	3
C205	FR. SECT. RH HAT RACK - FR.	SPEAKER	4
C206	L.H. CONSOLE	GOOSE NECK MICROPHONE	4
C207	L.H. CONSOLE	GOOSE NECK MICRO. SWITCH	8
C208	FR. SECT. LH HAT RACK	BALLAST FEEDING	4
C209	" " " " " "	READING LTS	2
C210	FR. SECT. LH HAT RACK - FR.	SPEAKER	4
C211	FRONT ROOF	DRIVER'S STORE - LH	2
C212	" " " " " "	DRIVER'S STORE - RH	2
C213	" " " " " "	CLEARANCE LTS	2
C214	" " " " " "	AMPLIFIER RH SPEAKER CONNECTION	2
C215	" " " " " "	" " LH " " "	2
C216	UNDER DASH - LH CORNER	P.A. DISTRIBUTION	9
C217	" " " " " "	P.A. MICRO OUTLET	3
C218	" " " " " "	P.A. VOLUME	3
C219	" " " " " "	P.A. DRIVER'S SPEAKERS CONNECTION	4
C220	" " " " " "	P.A. AMPLIFIER CONNECTION	7
C221	" " " " " "	P.A. RADIO CONNECTION	7
C222	ALARM JCT BOX COMPT.	MICRO OUTLET	4
C223	" " " " " "	DRIVER'S SPEAKERS FEEDING	4
C224	RH SWITCH PANEL	RADIO	7
C225	" " " " " "	" " " " " "	
C226	FR. ROOF - LH	AMPLIFIER	7
C227	RH SWITCH PANEL	SPEAKER SELECTOR SW.	8
C228	" " " " " "	MICRO OUTLET	4

DESC:

CONNECTOR CODE

DESS:

D.V.

DATE: 90-01

VER:

APPR:

H

A 91-02
ITEM DATEMISE A JOUR
REVISIONM
PARAPPL: EFF W/L-021
L-033

REF: H5-60

W/D-060732 P.H3

C

CONNECTOR CODE



CONNECTOR			
C#	LOCATION	DESIGNATION	NO. CAVITY
C229	RH SWITCH PANEL	P.A. VOLUME CONTROL	4
C230	" " "	LH DRIVER'S SPEAKER	2
C231	" " "	RADIO FEEDING	4
C232	" " "	RH DRIVER'S SPEAKER	2
C233	FR. SECTION ARTICULATION	ARTICULATION VERTICAL SAFETY SW.	2
C234	" " "	ARTICULATION HORIZONTAL SAFETY SW.	6
C235	" " "	LOW COOLANT SENSOR	3
C236	" " "	" " "	"
C237	FR. SECT. UNDER SEAT - LH	aisle LTS FEEDING	2
C238	" " " " "	aisle LTS	2
C239	FR. AXLE	FUEL TANK LEVEL GAUGE	4
C240	" " "	KNEELING SW.	2
C241	FR. SERVICE COMPT.	FOG RESISTOR BOX	3
C242	" " "	FR. L.H. MARKER & DIRECT. LT.	3
C243	" " "	HEADLAMPS	3
C244	" " "	L.H. FOG LAMP	2
C245	" " "	R.H. FOG LAMP	2
C246	" " "	FR. RH. MARKER & DIRECT. LT.	3
C247	" " "	" " "	"
C248	ALARM XT. BOX	UPPER WIND. WIPER PULSE GENERATOR	12
C249	" " "	CONVERTER 12V TO 5V (BU MONITOR)	3
C250	" " "	DASH LTS REGULATOR CTR	6
C251	LT SWITCH PANEL	FAST IDLE SW.	8
C252	" " "	SWITCH LTS.	2
C253	" " "	ETHER SW.	8
C254	" " "	WEBASTO SW.	8
C255	" " "	RETARDER SW.	8
C256	RR SECT RH HAT RACK	RR SECT AMPLIFIER CUT OUT SW	4
C257	" " "	" " "	"
C258	LT SWITCH PANEL	MULTI-FUNCTION SW.	8
C259	" " "	MULTI-FUNCTION SW.	6
C260	INSTR. PANEL - CENTER PLATE	TACHOGRAPH HEAD RPM	4
C261	" " " " "	TACHOGRAPH HEAD ANTI-JACK	4
C262	" " " " "	TACHOGRAPH HEAD FEEDING	4
C263	" " " " "	TACHOGRAPH HEAD SPEEDO	4
C264	" " " " "	ENGLE TACHO HEAD	6
C265	" " " " "	ENGLE SPEEDO HEAD	6
C266	ENGINE CRADLE	HANUAL TRANSMISSION ACCES.	4

CONNECTOR			
C#	LOCATION	DESIGNATION	NO. CAVITY
C267	ENGINE CRADLE	SPEED SENSOR	3
C268	" " "	RPM SENSOR	3
C269	" " "	JACOB L.H. BANK BRAKE	1
C270	" " "	" " "	"
C271	ENGINE CRADLE	JACOB R.H. BANK BRAKE	1
C272	" " "	" " "	"
C273	ENGINE CRADLE	MOTOR BLOCK HEATER	3
C274	RADIO	RADIO FEEDING	9
C275	ENGINE CRADLE	ODEC OPTION	4
C276	" " "	CONDENSER FAN SOL. VALVE	2
C277	ENGINE CRADLE	RACOR FUEL FILTER	2
C278	" " "	WEBASTO	6
C279	" " "	FR. WATER PUMP	2
C280	" " "	FR. ST3 WATER VALVE	2
C281	" " "	FR. ST2 WATER VALVE	2
C282	" " "	FR. ST1 WATER VALVE	2
C283	" " "	ATEC SPEED SENSOR	2
C284	" " "	ATEC THROTTLE SENSOR N/A	3
C285	" " "	ATEC TRANSMISSION	23
C286	RH SWITCH PANEL	A/C & HEAT SW.	1
C287	" " "	A/C FAN ONLY	1
C288	" " "	FRESH AIR SW.	1
C289	" " "	SWITCH LTS	2
C290	" " "	" " "	"
C291	FR. SECTION LUGGAGE COMPT.	LUGGAGE LTS	2
C292	" " " " "	" " "	2
C293	" " " " "	" " "	2
C294	" " " " "	" " "	2
C295	" " " " "	AIR AMBIENT SENSOR	2
C296	" " " " "	LUGGAGE LTS	2
C297	FR SECTION LUGGAGE COMPT.	AIR RETURN SENSOR	2
C298	" " " " "	" " "	2
C299	" " " " "	LUGGAGE LTS	2
C300	" " " " "	FRESH AIR SENSOR	2
C301	" " " " "	" " "	2
C302	FR. SECTION LUGGAGE COMPT.	LIQUID SOLENOID VALVE	2
C303	" " " " "	LUGGAGE DOOR LOCK FEEDING	6
C304	" " " " "	" " " " "	6

				DESC: CONNECTOR CODE				DESS: D.T.		DATE: 90-01	
								VER: <i>EC</i>		APPR: <i>EC</i>	
				APPL: EFF. W/ L-027 L-033...				REF: H5-60		ID: D-060732 P.H4 C	
				A 90/08 C274 ADJUST OC# 90151							
				ITEM DATE REVISION							

CONNECTOR CODE

CONNECTOR			
C#	LOCATION	DESIGNATION	NO. CAVITY
C 305	FR SECTION LUGGAGE COMPT.	LUGGAGE DOOR LOCK FEEDING	6
C 306	" " " "	" " " "	6
C 307	L.H. CONSOLE	DRIVER'S SEAT HEATER	4
C 308	" "	DASH LT. RHEOSTAT	
C 309	" "	GALLEY SW.	8
C 310	" "	LUGGAGE DOOR LOCK SW.	8
C 311	" "	HOTNESS & PASS. CHIME SW.	8
C 312	" "	READING LT. SW.	8
C 313	" "	GENERAL LT. & 24V FLOOR SW.	8
C 314	" "	FR. DESTINATION SIGN SW.	8
C 315	" "	L.H. STORE SW.	8
C 316	" "	ARTICULATION BRAKE SW	8
C 317	" "	R.H. STORE SW.	8
C 318	" "	DRIVER'S WINDOW LIFTER	
C 319	" "	DRIVER'S SEAT HEATER SW.	8
C 320	" "	DRIVER'S LT. SW.	8
C 321	" "	SHIFTER SELECTOR	16
C 322	" "	DRIVER'S WINDOW LIFTER MOTOR	2
C 323	" "	CRUISE CONTROL SW. PANEL	14
C 324	" "	RR ENTRANCE DOOR SW	8
C 325	" "	KNEELING SW.	8
C 326	" "	FR. ENTRANCE DOOR SW.	8
C 327	ENGINE COMPT.	ENGINE CONTROL SWITCHES	9
C 328	" "	WATER PUMP	2
C 329	" "	SERVICE LTS.	2
C 330	ENGINE COMPT. - AT A/C COMPR.	UNDER LOADER SOL. VALVE	2
C 331	" " " "	" " " "	2
C 332	" " " "	A/C COMPR. CLUTCH	2
C 333	" " " "	A/C LO-PRESSURE SW.	2
C 334	" " " "	A/C HI-PRESSURE SW.	2
C 335	ENGINE COMPT.	RETARDER SOL. VALVE	2
C 336	INSTRUMENT PANEL - LH SECT.	INSTRUMENT & SW. LTS	
C 337	" " " "	UPPER WIND. WIPER MOTOR CONTROL SW.	8
C 338	" " " "	UPPER WINDSHIELD DEFROST SW.	8
C 339	" " " "	UPPER WINDSHIELD WASHER CTR. SW.	8
C 340	" " " "	L.H. MIRROR ADJUSTING SW.	8
C 341	" " " "	HEATED MIRROR SW.	8
C 342	" " " "	R.H. MIRROR ADJUSTING SW.	8

CONNECTOR			
C#	LOCATION	DESIGNATION	NO. CAVITY
C 343	INSTRUMENT PANEL - LH. SECT.	HEADLAMP SW.	8
C 344	" " " "	HAZARD WARNING LTS SW.	8
C 345	" " " "	FOG LT. SW.	8
C 346	" " " "	SWITCH LTS.	2
C 347	" " " "	DASH LT. SW.	2
C 348	INSTRUMENT PANEL - CENTER	RACOR FILTER T.T. LT. MODULE	6
C 349	R.H. CONSOLE	RED LED INDICATOR - FR. SECT. (HTR)	2
C 350	" "	DIGITAL THERMOMETER	3
C 351	" "	RED LED INDICATOR - RR. SECT. (HTR)	2
C 352	" "	DRIVER'S TEMP. CONTROL SENSOR	3
C 353	INSTRUMENT PANEL - RH	DRIVER'S HTR. FAN SPEED CTR. RHEOSTAT	6
C 354	" " " "	DRIVER'S TEMP. CONTROL	6
C 355	" " " "	FRONT TEMP. CONTROL	3
C 356	" " " "	REAR TEMP. CONTROL	3
C 357	" " " "	WATER TEMP. GAUGE	3
C 358	" " " "	FUEL LEVEL GAUGE	3
C 359	" " " "	INSTRUMENT PANEL LIGHTING	2
C 360	" " " "	B/U MONITOR	2
C 361	FR. ROOF	UPPER WIPER MOTOR	6
C 362	" "	LAVATORY OCCUPIED SIGN	2
C 363	" "	WATCH YOUR STEP SIGN	2
C 364	" "	FR. DESTINATION SIGN	3
C 365	" "	UPPER WINDSHIELD DEFROST	3
C 366	R.H. CONSOLE	GREEN LED INDICATOR - FR. SECT. (A/C)	2
C 367	" "	GREEN LED INDICATOR - RR. SECT. (A/C)	2
C 368	ENGINE COMPT.	ETHER QUICK START SW	8
C 369	ALARM JCT BOX COMPT	FEED LH SW PANEL	6
C 370	FR. SERVICE COMPT. - UNDERNEATH	FROM ARTICULATION TO INTERFACE HARNESS	37
C 371	FR. SERVICE COMPT.	FROM ENGINE JCT. BOX TO INTERFACE HARNESS	16
C 372	ENGINE JCT. BOX	FROM FR. SERVICE COMPT. TO ENGINE JCT. BOX	37
C 373	" " " "	" " " "	16
C 374	ALARM JCT. BOX	ALARM JCT. BOX TO INTERFACE HARNESS	37
C 375	ALARM JCT. BOX COMPT.	FEED LH CONSOLE	37
C 376	" " " "	FEED LH SW. PANEL	37
C 377	LT. SWITCH PANEL	STOP ENGINE OVERRIDE SW.	8
C 378	FR. SERVICE COMPT.	FEED FR. SERVICE COMPT. ACCES.	16
C 379	ARTICULATION	FR. COMPT. TO ENGINE COMPT.	24
C 380	"	FEED ARTICULATION ACCES.	22

DESC:

CONNECTOR CODE

DESS: B.C.

ATE: 90-01

VER: *MC*APPR: *W*A 90/10
REV DATEC329 ALARM 1 CAVITY 90189
REVISION

APPL: W/L-027, L-033...

REF: HS-60

D-060732

pH5 C

CONNECTOR			
C #	LOCATION	DESIGNATION	NO CAVITY
C 381	ENGINE JCT BOX	FROM ARTICULATION TO ENGINE JCT. BOX	24
C 382	ALARM JCT BOX	DIAGNOSTIC DDEC II & ATEC	12
C 383	ENGINE JCT BOX	ATEC & DDEC II - INTERFACE MODULE	3
C 384	" " "	" " " "	1
C 385	" " "	HARNESS No 1 TO No 2	37
C 386	" " "	LOW COOLANT MODULE	6
C 387	" " "	ATEC & DDEC II - INTERFACE MODULE	6
C 388	" " "	" " " "	2
C 389	INSTR. PANEL - CENTER PLATE	TACHO. & SPEEDO. DASH LTS	2
C 390	ENGINE CRADLE	RPM SENSOR	2
C 391	FR SERVICE COMPT	FR LUG DOOR LOCK SOL.	6
C 392	ARTICULATION RR PART	FR. LUG DOOR LOCK SOL.	6
C 393	ENG. COMP AT A/C COMP	A/C PRESS. SW.	3
C 394	ARTICULATION	ANTI-JACK PRESS. SW	2
C 395	ALARM JCT. BOX COMPT	FEEDMIRROR HEATED & ADJUST SW	8
C 396	" " " "	L H. MIRROR	6
C 397	UNDER DASH R.H.	R H MIRROR	6
C 398	POWER JCT BOX	COMPRESSOR PRESSURE SW	3
C 399	RR HAT RACK	FLUORESCENT SW	8
C 400	" "	SWITCH LT	2
C 401	LH CONSOLE	MASTER INTERCOM SUPPLY	4
C 402	LH CONSOLE	MASTER INTERCOM	6
C 403	ARTICULATION	FROM MASTER INTERCOM TO SEC. INTER.	6
C 404	REAR HOSTESS AREA	SECONDARY INTERCOM	6
C 405	ARTICULATION	GALLEY SUPPLY	9
C 406	ARTICULATION	" " " "	2
C 407	UNDER GALLEY	" " " "	9
C 408	UNDER GALLEY	" " " "	3
C 409	GALLEY	GALLEY RELAYS & BREAKERS	9
C 410	"	FROM GALLEY RELAYS TO GALLEY SW	6
C 411	"	FROM GALLEY RELAYS TO GALLEY LEDS	6
C 412	"	GALLEY SWITCHES	6
C 413	"	GALLEY LEDS	6
C 414	A/C COMPRESSOR	AUX. COND. PRESS. SW.	2
C 415	"	AUX. COND. SOL. VALVE	2
C 416	GALLEY	GALLEY WATER PUMP	4

[illegible]

										DESC :		CONNECTOR CODE		DESS: <i>D.V.</i>	DATE: 90-01
														VER: <i>LC</i>	APPR: <i>10</i>
										MISE A JOUR					
										REVISION					
										APPL: EFF. W/ <i>L-027</i>		REF: H5-60		NO: D-060732 p. H6	
										PAR				C	

CONNECTOR CODE

CONNECTOR			
C#	LOCATION	DESIGNATION	NO. CAVITY
C1	FR. JCT. BOX COMPT.	FR. JCT. BOX TO INTERFACE HARNESS	24
C2	" " " "	" " " "	22
C3	" " " "	" " " "	37
C4	" " " "	" " " "	37
C5	" " " "	" " " "	37
C6	FR. SERVICE COMPT. - UNDERNEATH	FROM ARTICULATION TO INTERFACE HARNESS	37
C7	" " " "	" " " "	24
C8	" " " "	FROM ENGINE JCT BOX TO INTERFACE HARNESS	37
C9	" " " "	" " " "	16
C10			
C11			
C12	ARTICULATION	FROM FR. SERVICE COMPT. TO ARTICULATION HARN.	24
C13	" " " "	" " " "	37
C14	" " " "	FROM ENG. JCT BOX TO ARTICULATION HARN.	6
C15	" " " "	" " " "	24
C16	FR. SECT. LH HAT RACK - RR	FEED LH HAT RACK ACCESSORIES	9
C17	FR. SECT. RH HAT RACK - RR	FEED RH HAT RACK ACCESSORIES	9
C18			
C19			
C20			
C21			
C22	ENGINE JCT BOX - ENGINE COMPT.	FROM FR. SERVICE COMPT. TO ENGINE JCT BOX	37
C23			
C24			
C25	ENGINE JCT. BOX - ENGINE COMPT.	ENG. JCT. BOX TO ENGINE CRADLE HARNESS	35
C26	" " " " " "	" " " " " "	47
C27			
C28	ENGINE JCT. BOX - ENGINE COMPT.	ENG. JCT. BOX TO ENGINE CRADLE HARNESS	26
C29	" " " " " "	ENG. JCT. BOX TO ENGINE COMPT. HARNESS	22
C30			
C31	ENGINE JCT. BOX	FROM FR. SERVICE COMPT. TO ENGINE JCT. BOX	16
C32	" " " "	ENG. JCT. BOX TO LUGGAGE COMPT. LTS.	22
C33	ENGINE CRADLE	DDC POWER COMM. E.C.M.	6
C34	ENGINE CRADLE	DDC E.C.M.	30
C35			
C36			
C37			
C38			

-CONNECTOR			
C#	LOCATION	DESIGNATION	NO. CAVITY
C39	FR. SECT. LH HAT RACK - RR	FEED LH SPEAKER	2
C40	FR. SECT. RH HAT RACK - RR	FEED RH SPEAKER	2
C41	FR. SECT. RH HAT RACK - RR	FEED RH 110V FLUORESCENT	2
C42	FR. SECT. LH HAT RACK - RR	FEED LH 110V FLUORESCENT	2
C43			
C44	FR. JCT BOX COMPT.	ANTI-SKID E.C.U. MODULE	54
C45	ALARM JCT BOX COMPT.	FEED FR. ROOF ACCESSORIES	24
C46	FR. SERVICE COMPT.	FEED FR. SERVICE COMPT. ACCESSORIES	24
C47	FR. SERVICE COMPT.	FEED HEAD & FOG LAMP	7
C48	FR. AXLE	FEED FR. AXLE ACCESSORIES	22
C49			
C50			
C51			
C52			
C53			
C54	UNDER DASH - LH CORNER	FEED P.A. UNIT	3
C55	UNDER DASH - CENTER	FEED RH SW. PANEL	9
C56	" " " "	FEED RH CONSOLE	24
C57	" " " "	FEED UNDER DASH ACCESSORIES - RH	22
C58	FR. JCT BOX COMPT.	OPTION SLIP DRIVE CONTROL	3
C59	LH CONSOLE	CRUISE ON OFF SW.	8
C60	" " " "	CRUISE SET SW.	8
C61	" " " "	CRUISE RESUME SW.	8
C62			
C63			
C64			
C65			
C66			
C67			
C68	ALARM JCT BOX	ALARM JCT BOX TO INTERFACE HARNESS	16
C69			
C70	ALARM JCT BOX	FEED LH CONSOLE	24
C71	UNDER INSTRUMENT PANEL - LH	FEED INSTRUMENT PANEL - LH	37
C72	UNDER INSTRUMENT PANEL	FEED CENTRAL INSTRUMENT PANEL	37
C73	" " " "	" " " "	16
C74	" " " " RH	FEED INSTRUMENT PANEL RH	24
C75	ALARM JCT BOX COMPT.	FEED FR. ROOF ACCESSORIES	22
C76	FR. SERVICE COMPT.	FROM ENGINE JCT. BOX TO INTERFACE HARNESS	14

DESC:

CONNECTOR CODE

DESS:

D.T.

DATE:

90-01

VER.:

APPR.:

10

A 92-04

C44 CAVITY WAS 35 06 92030

REV

DATE

REVISION

PAR

APPL: EFF. W/L034

REF: H5-60

NO: D-060732 P.H

C

WIRING DIAGRAM CODE H5-60

			BATTERY		CIRCUIT BREAKER		
			GROUND		FUSE		
			METER GAUGE		DIODE		
			MOMENTARY CONTACT PUSH BUTTON SWITCH		JUNCTION TERMINAL BLOCK		
			BUZZER		THERMOSTAT		
			SOLENOID		PUMP		
			BELL		LIGHT		
			VALVE		FLASHER		
			HEATER				
			MAGNETIC SWITCH RELAY				
			MINI-RELAY N.O.				
			MINI-RELAY N.O. (87) AND N.C. (87A)				
			MINI-RELAY N.C.				
			WIRES CROSSING				
			WIRES CONNECTED				
	CONNECTOR SOCKET PIN						

DESC :

WIRING DIAGRAM

DESS: D.V.

DATE: 90-01

VER: C

APPR: [Signature]

ITEM DATE


REVISION

PAR


APPL: EFF. W/ L034

REF: H5-60

NO: D-060732 P.I C

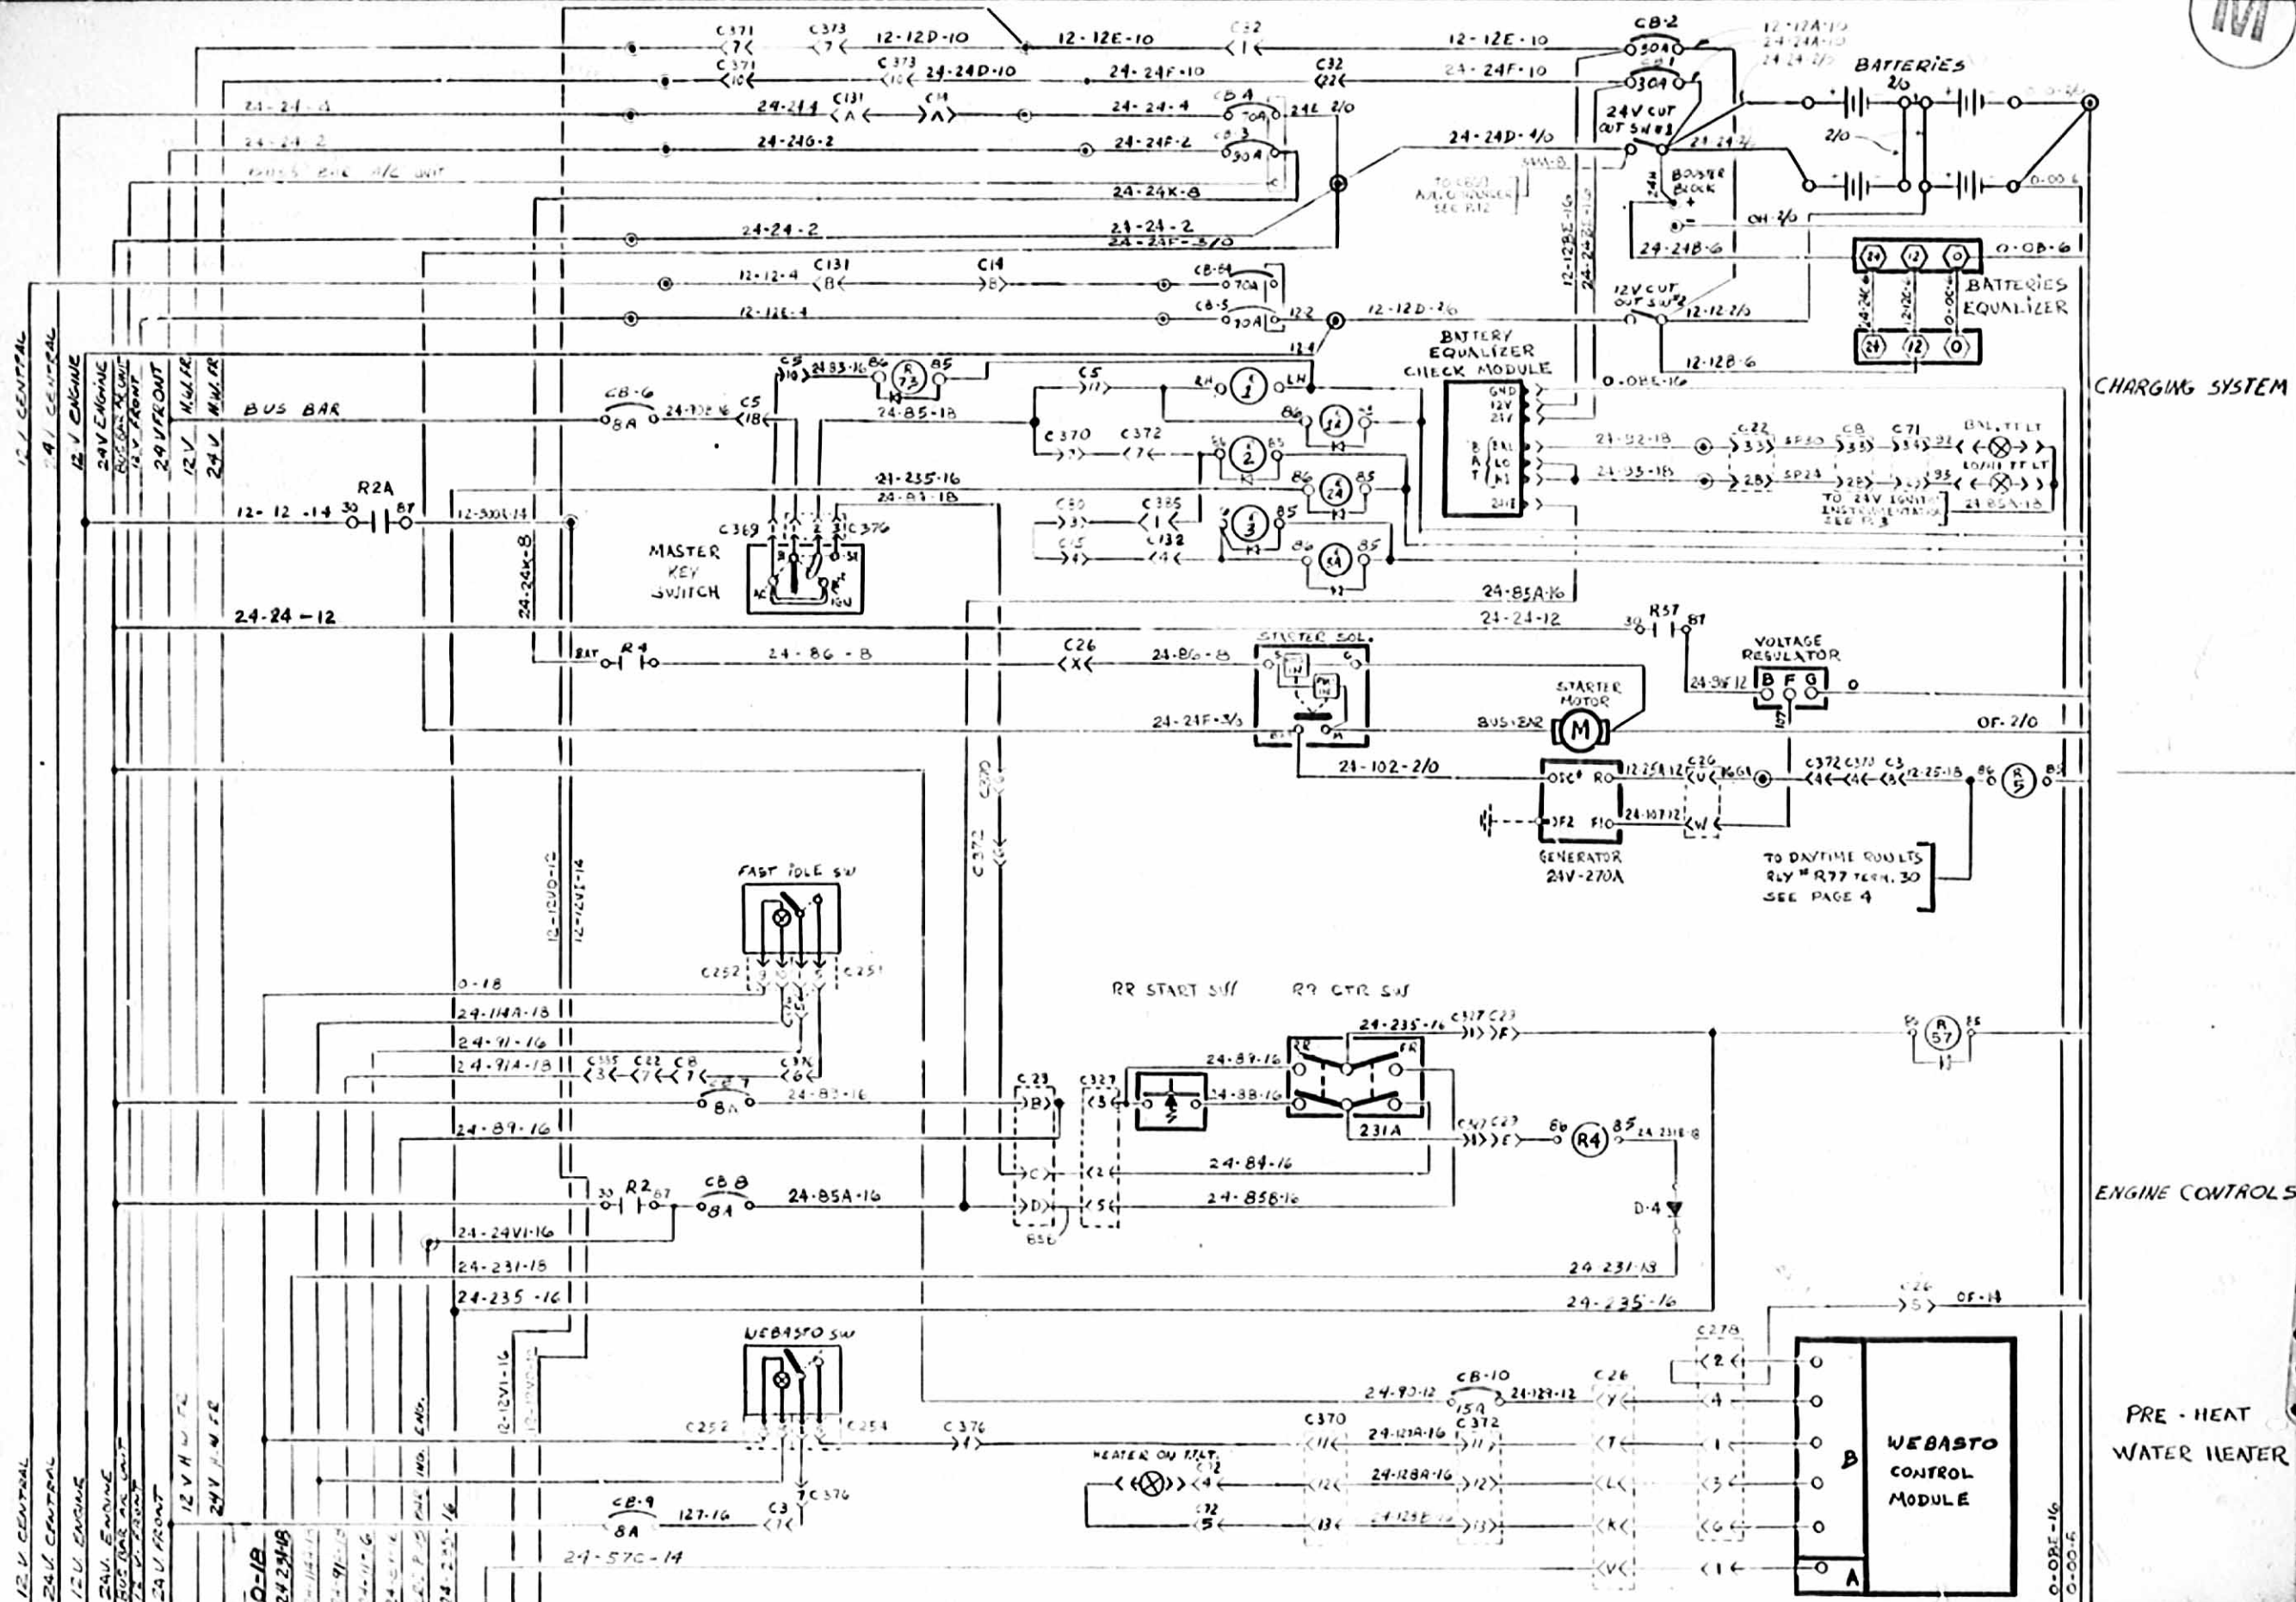

				DESC:		DESS:	DATE:
				WIRING DIAGRAM		D.T.	90-01
						VER.:	APPR.:
ITEM	DATE	REVISION	PAR	APPL: EFF. W/L-021 L-023...		REF: H5-60	NO: D-060732 R1 C

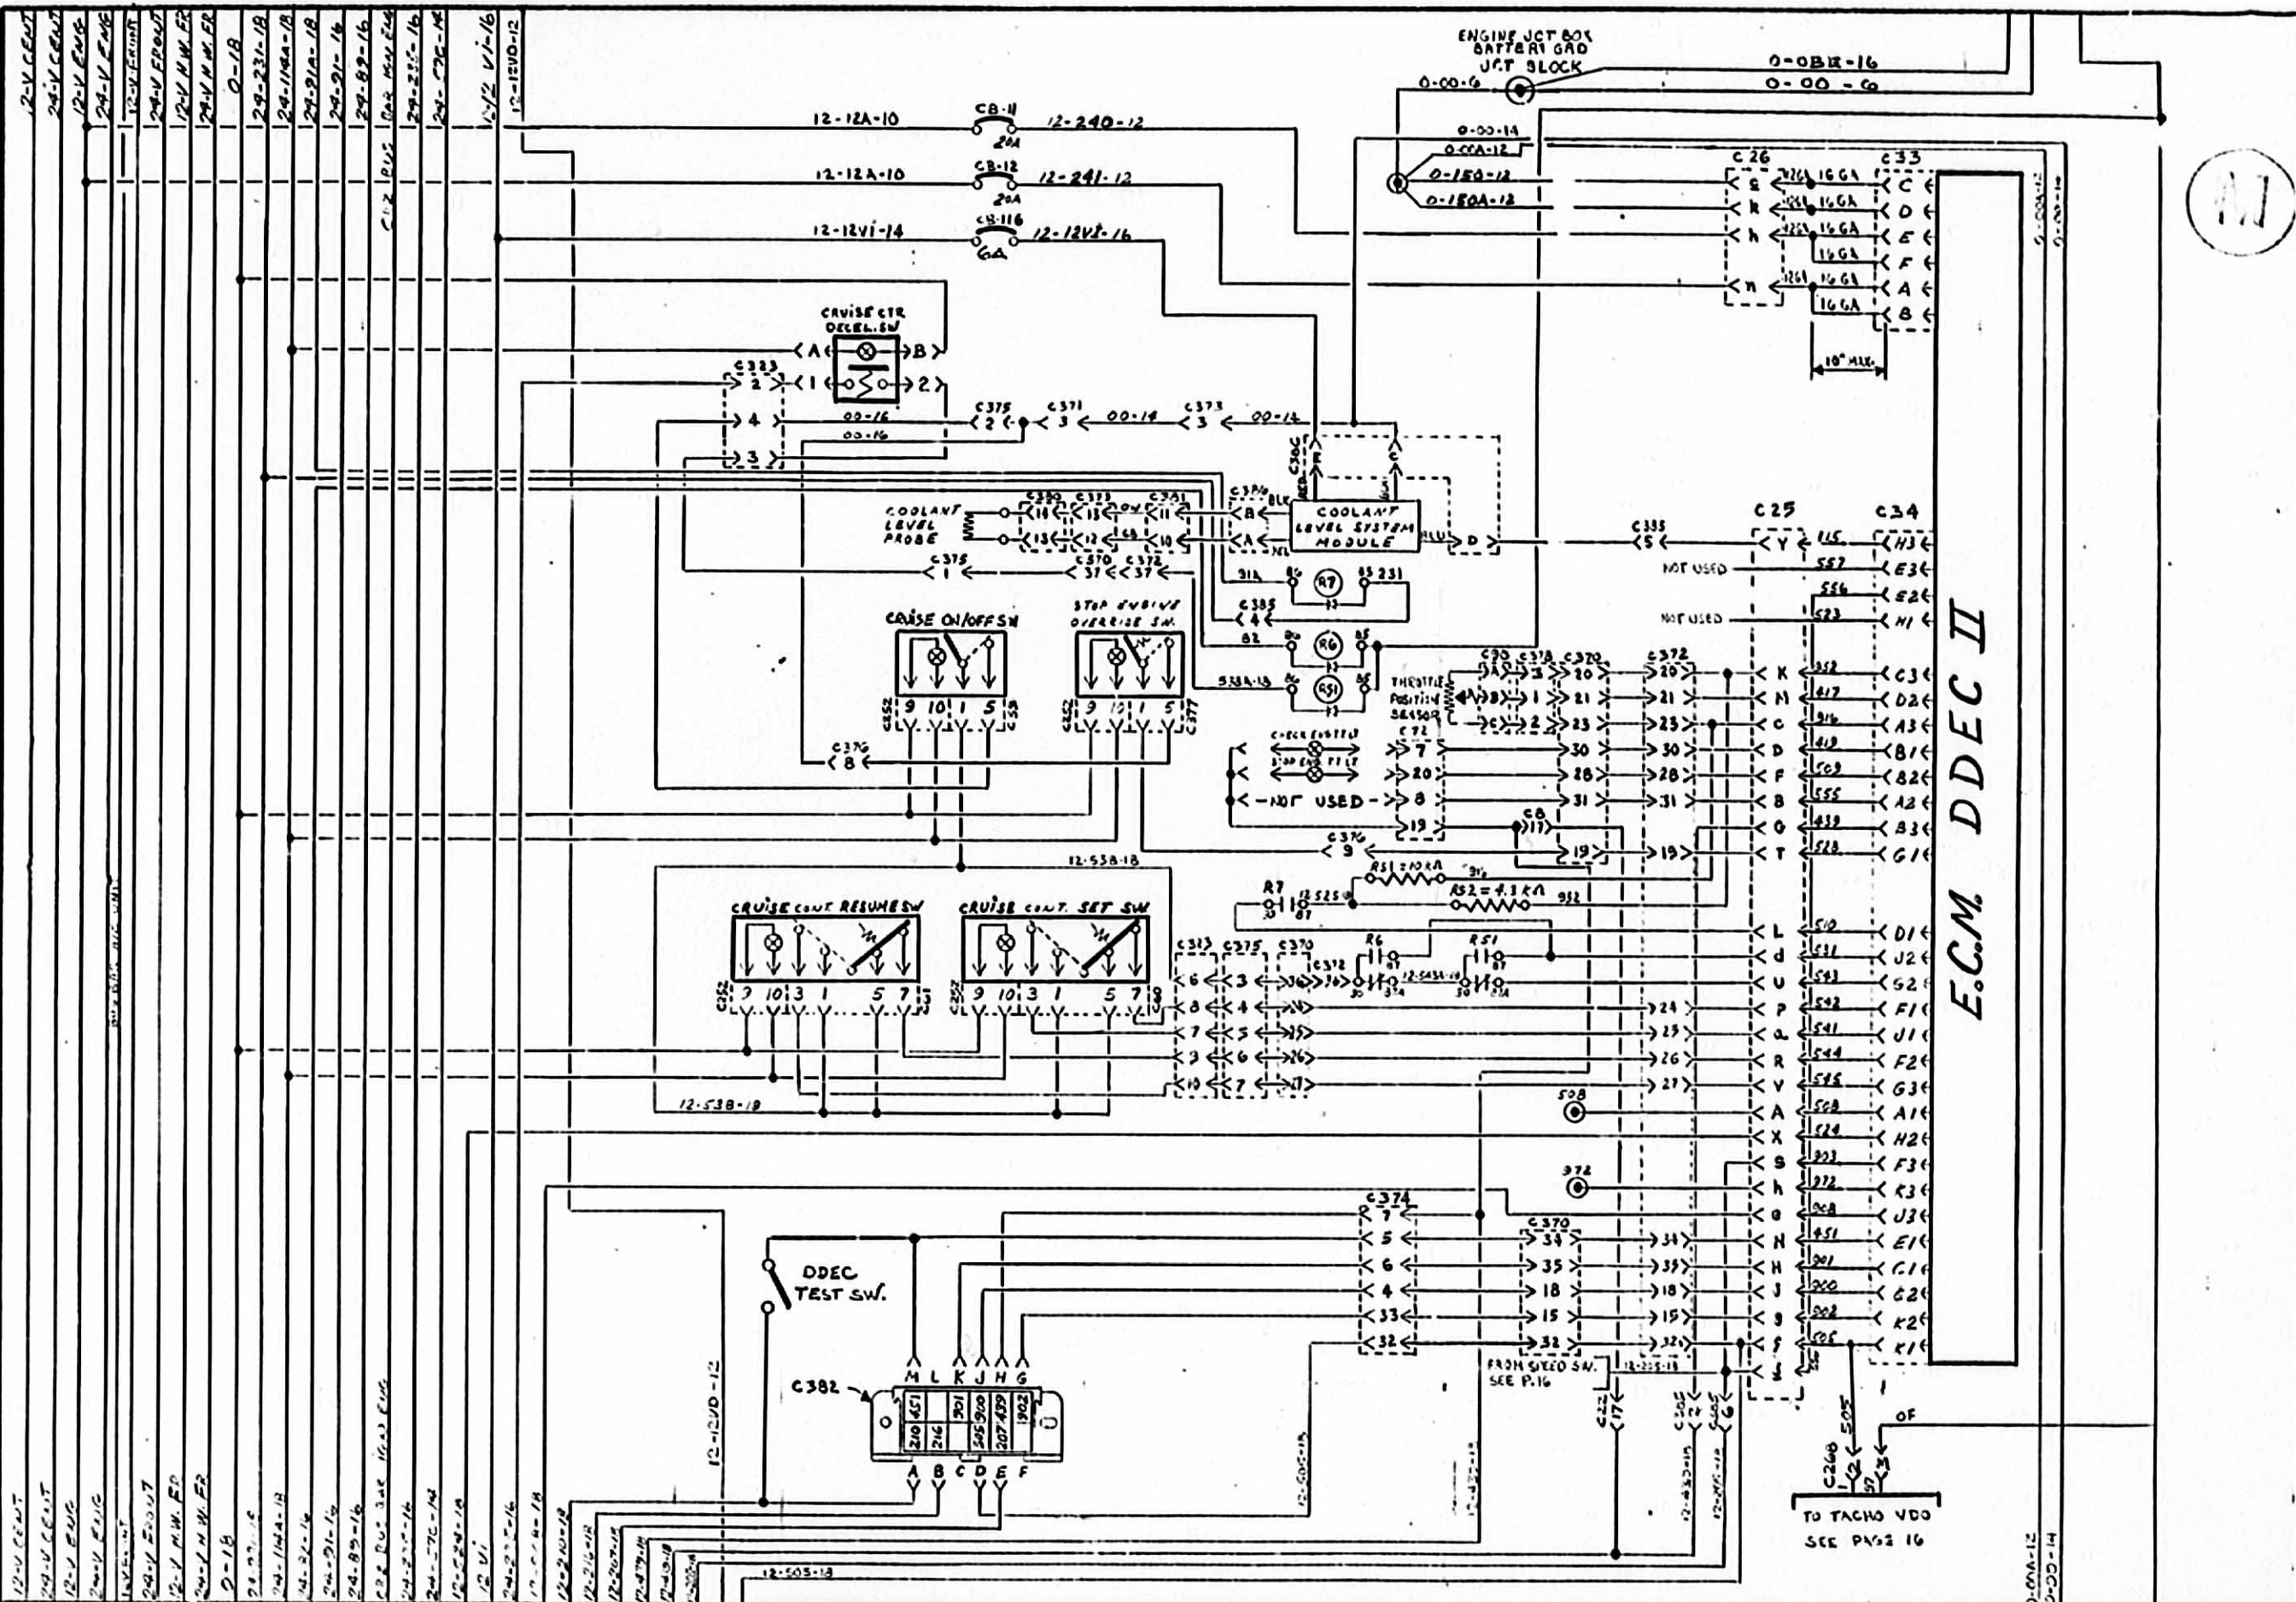


DDEC II WIRING DIAGRAM


A	92-04	PRIOR N-208 WIRE
DATE	9/1/01	LAWS 00491034
REVISION		

APPL: VER. EFF. 01/01/03 PRR N-208 REF: 45-60

DESS:	M.11	DATE:	91-06
VER.:	C	APPR.:	
ID:	D-060732	20/24	C

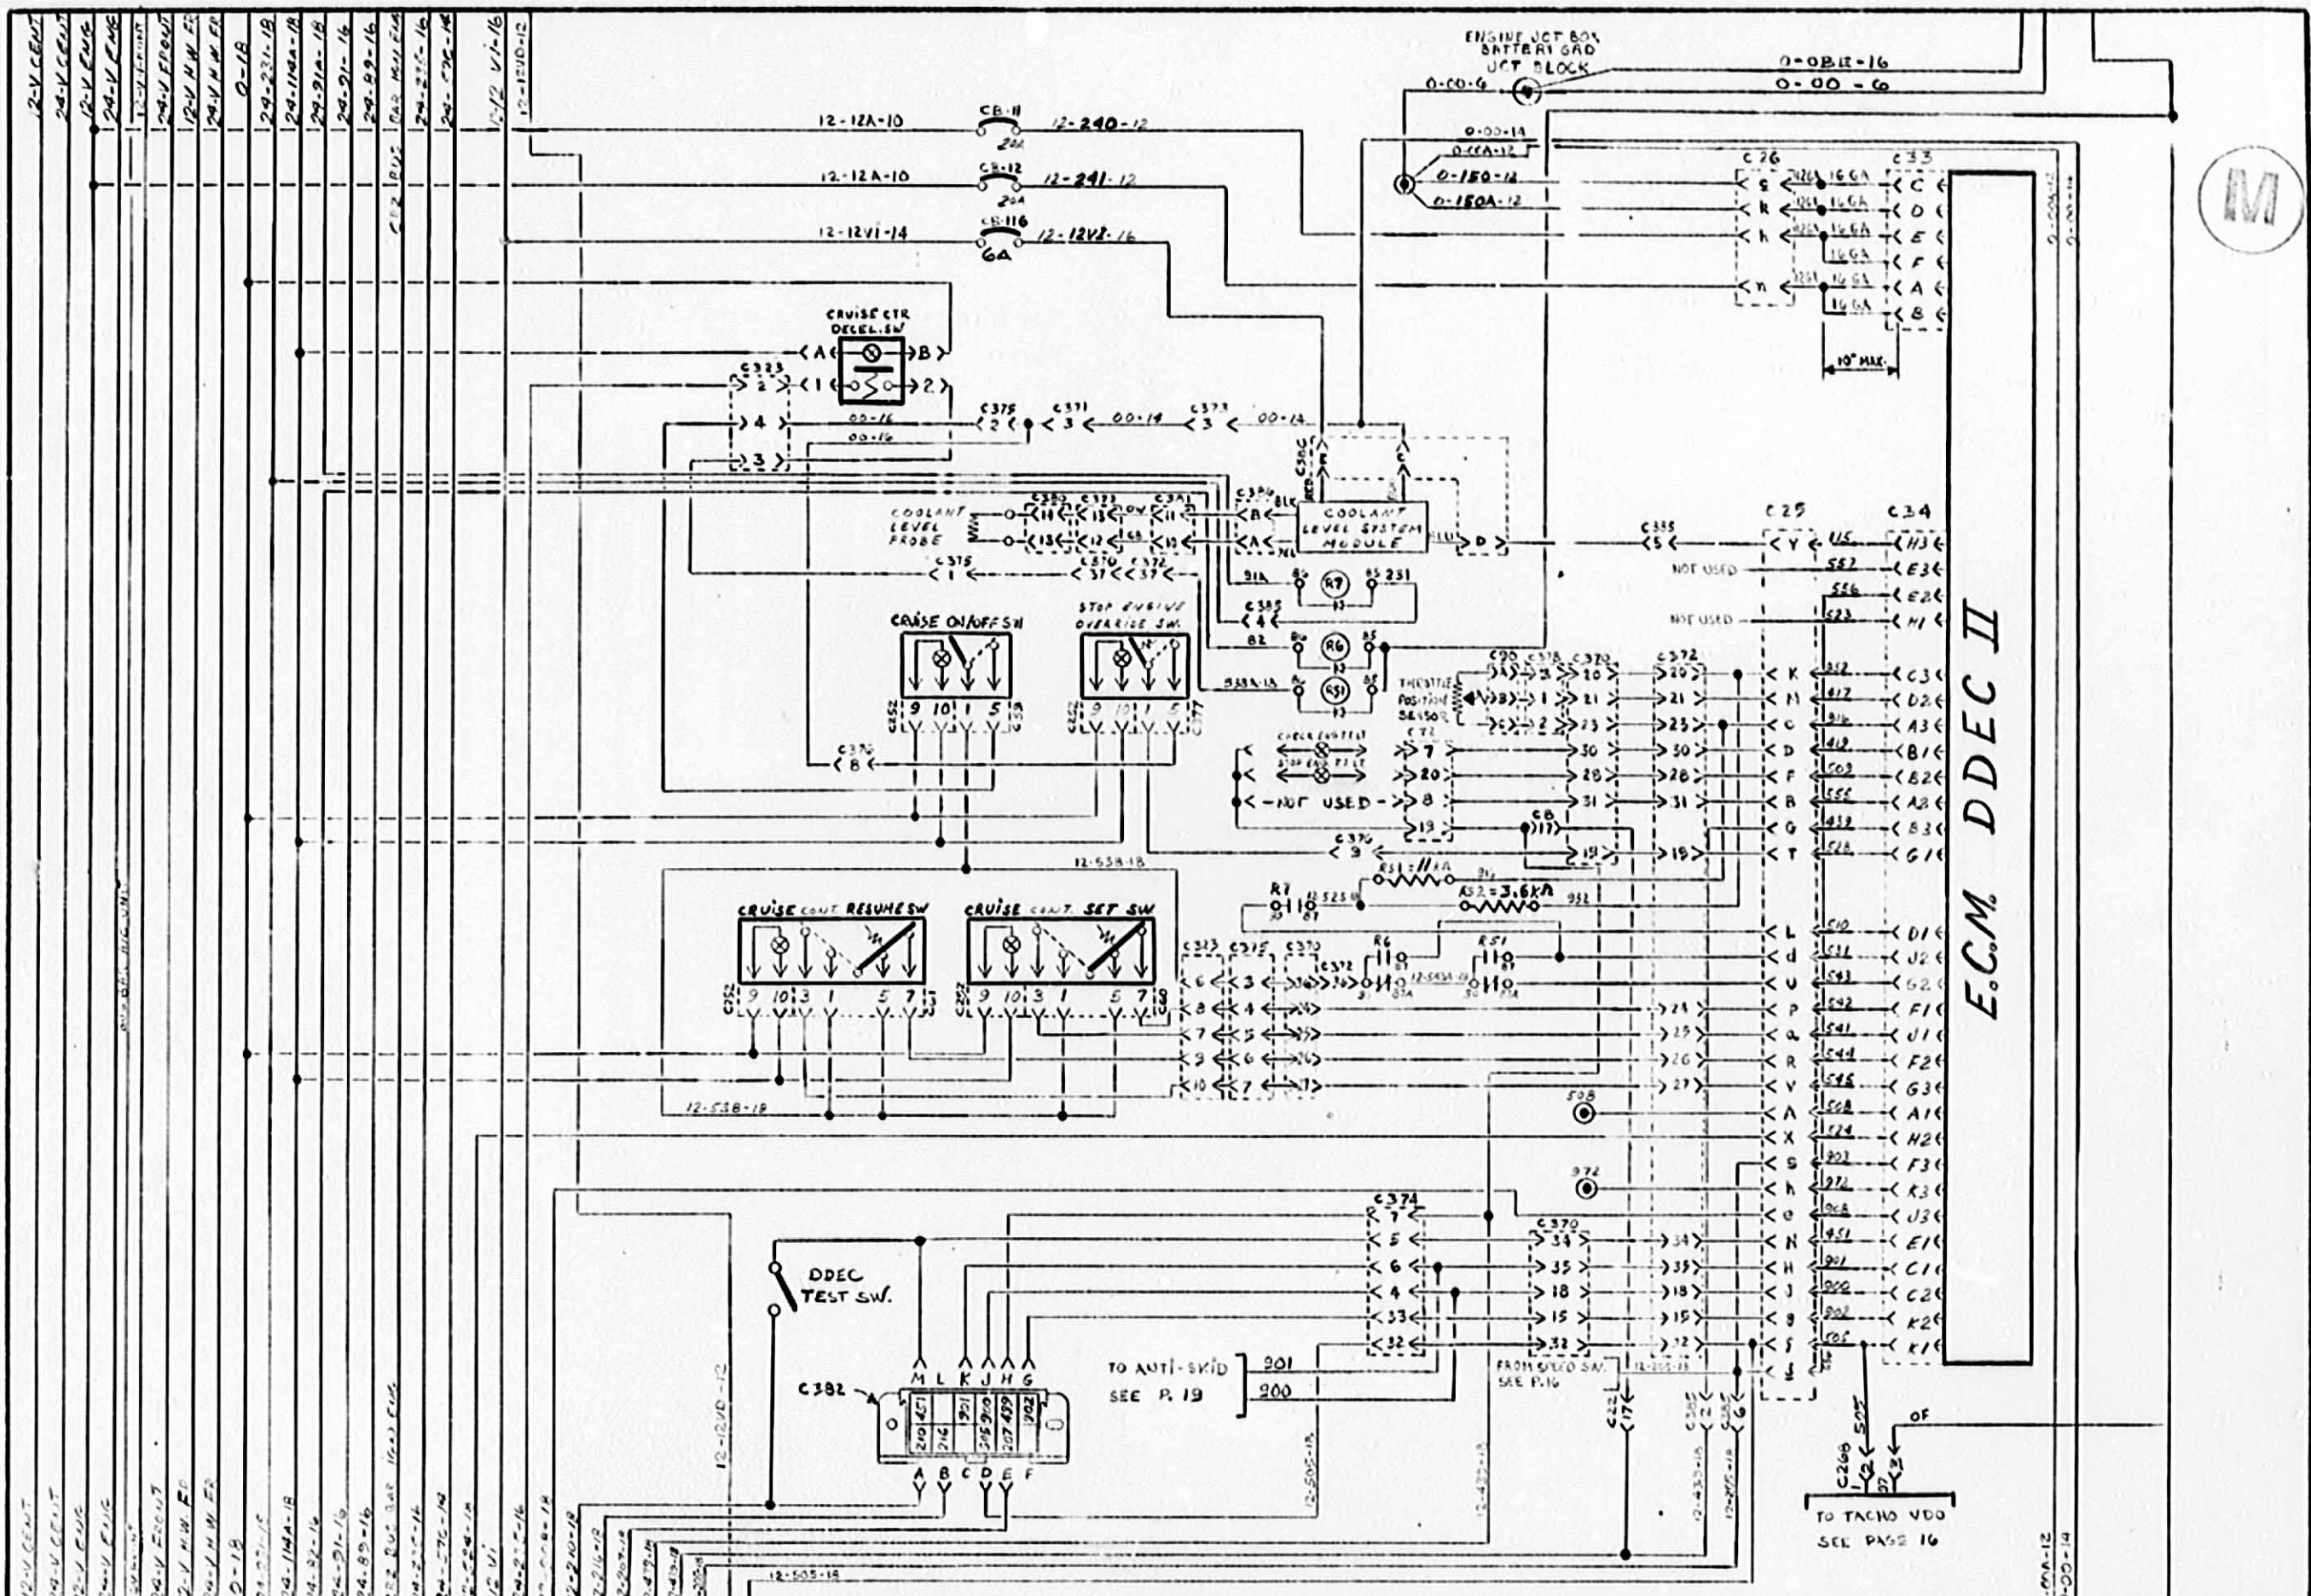

DDEC II WIRING DIAGRAM

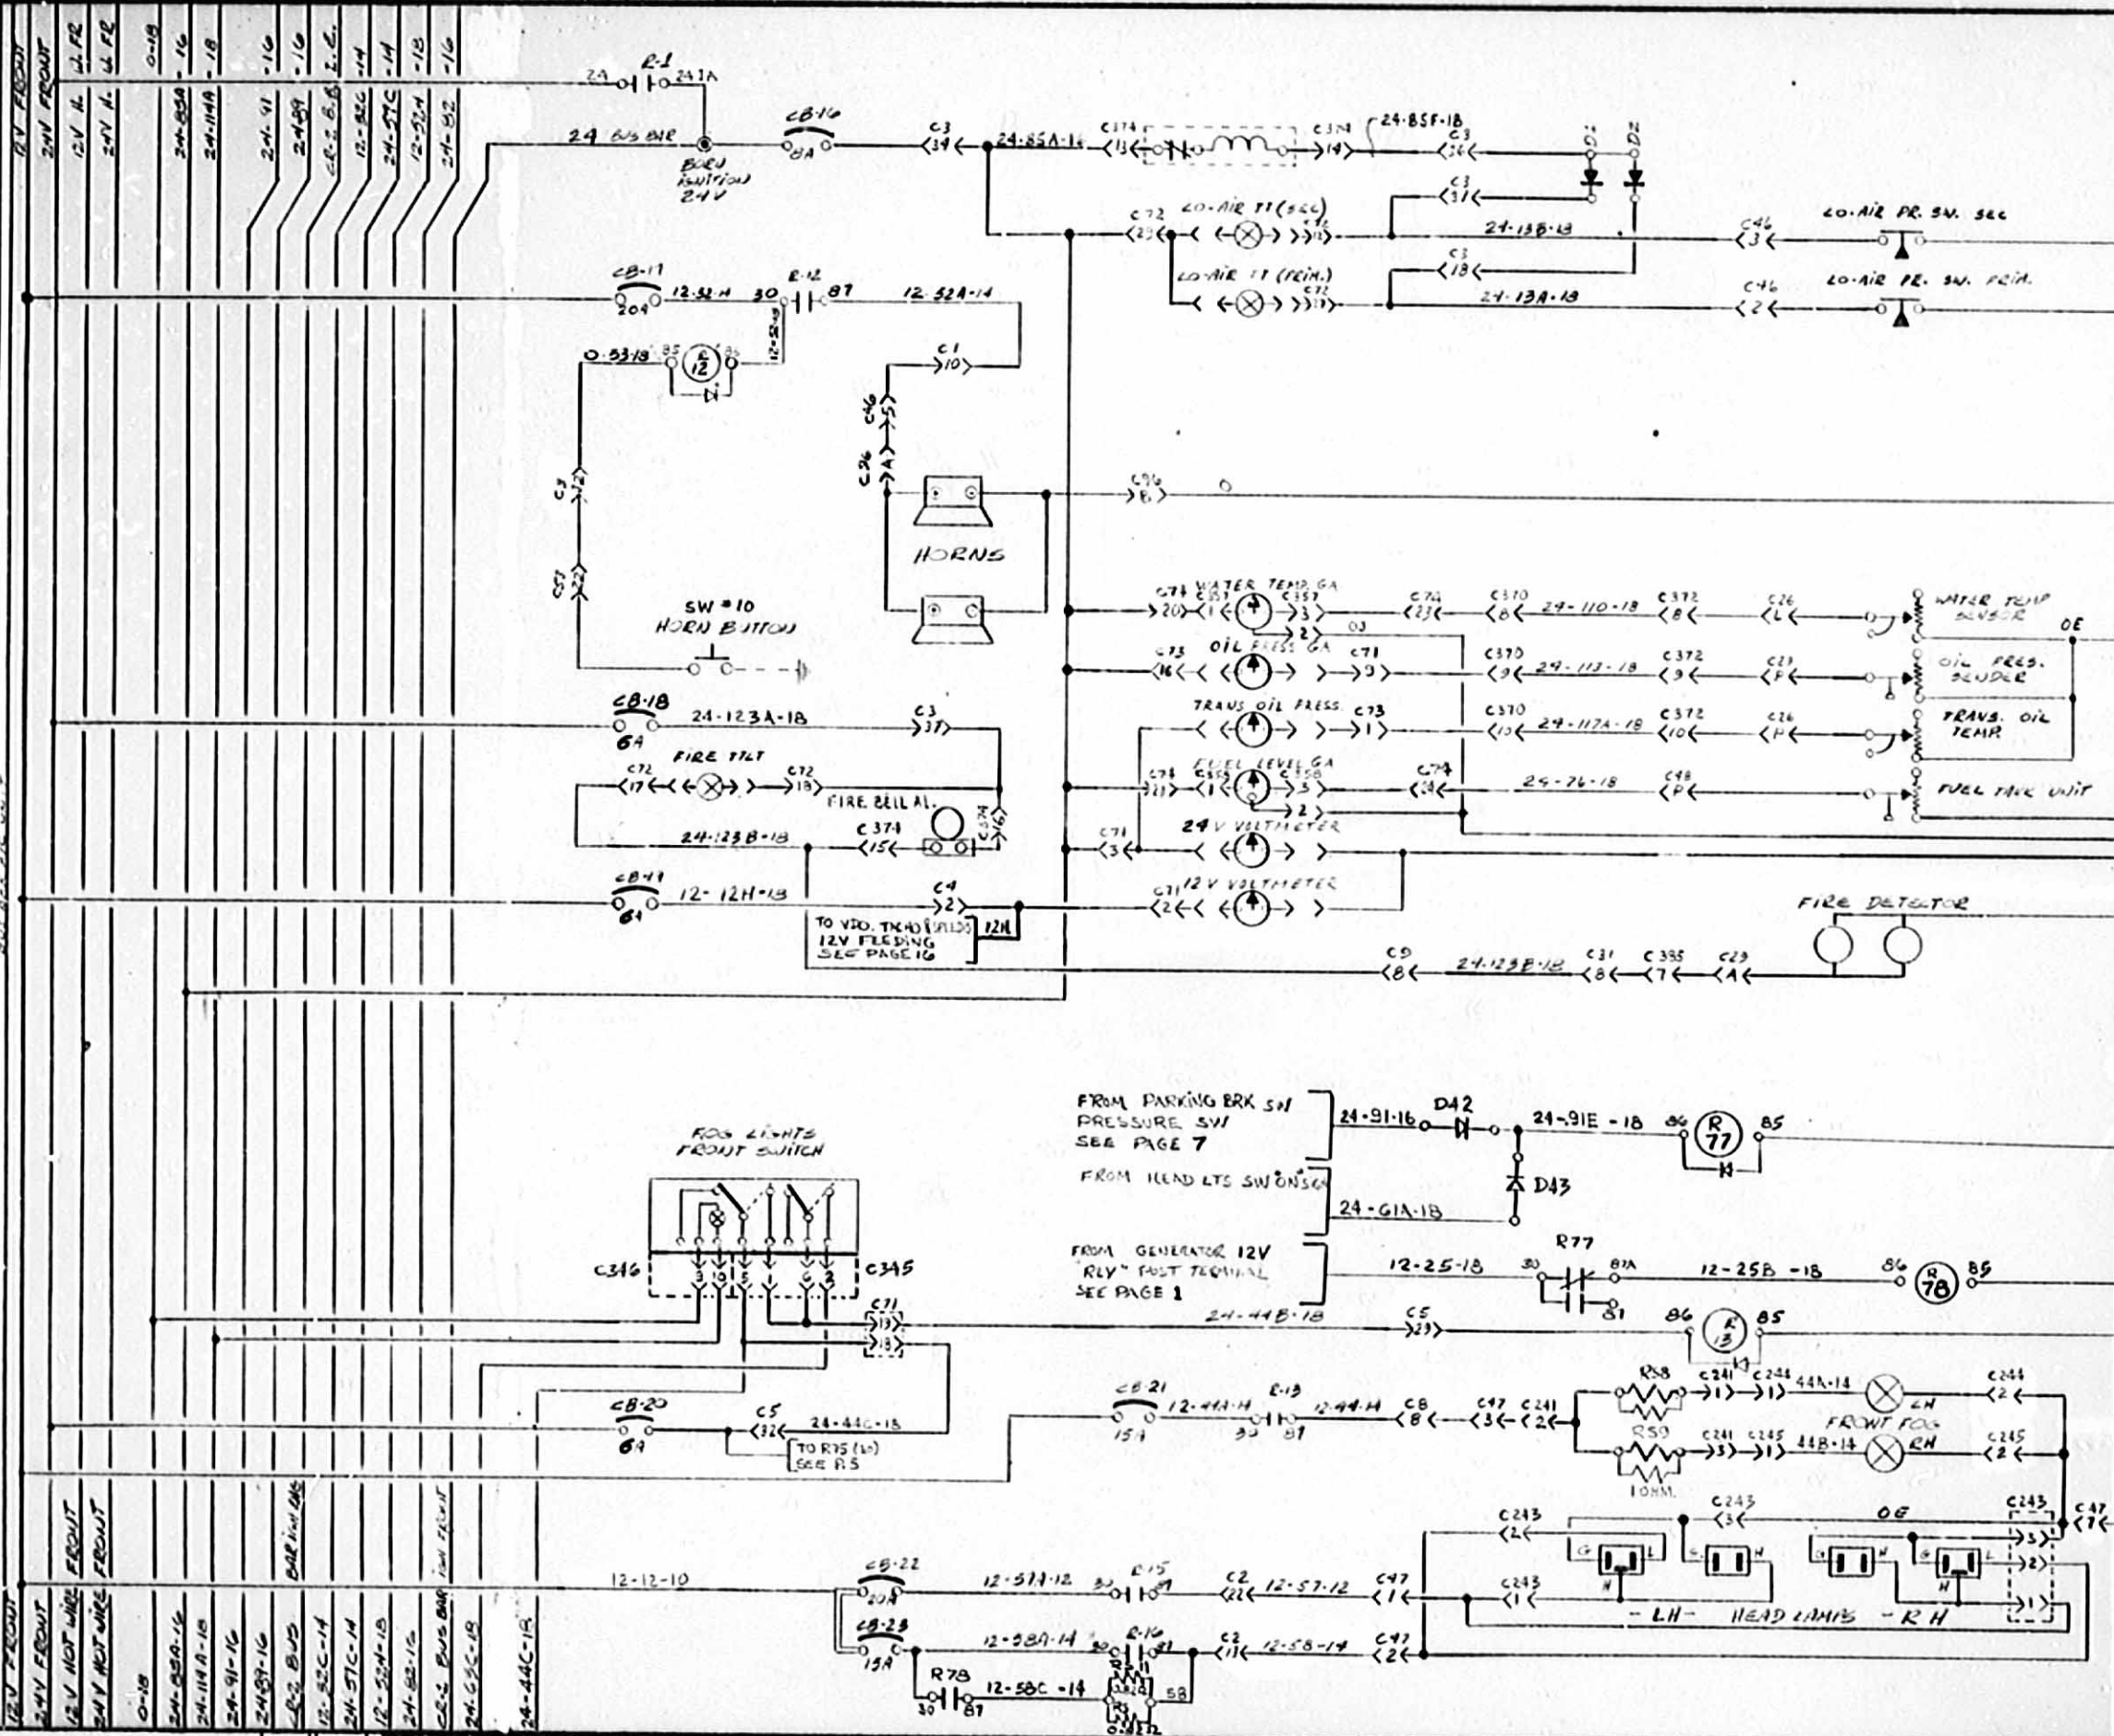

ALARM & SIGNAL


FOG LTS

EXTERIOR
LIGHTING

HEAD LTS

WIRING DIAGRAM

B	90-09	00900152 LES BTVAERS EBIB CB7, C020 AVAIENT SA	SL	WIRING DIAGRAM	DESS: D.T.	DATE: 90-01
	90-09	00900154 LE BREAKER AVAIT 10A É ALIMENT. 24 VOLT	SL		VER: <i>EC</i>	APPR: <i>EC</i>
A	90/06	MISE A JOUR	MF			
ITEM	DATE	REVISION	PAR	APPL: EFF. W/ <i>L-067</i> <i>L-033.4</i>	REF: H5-60	NO: D-060732 P.4

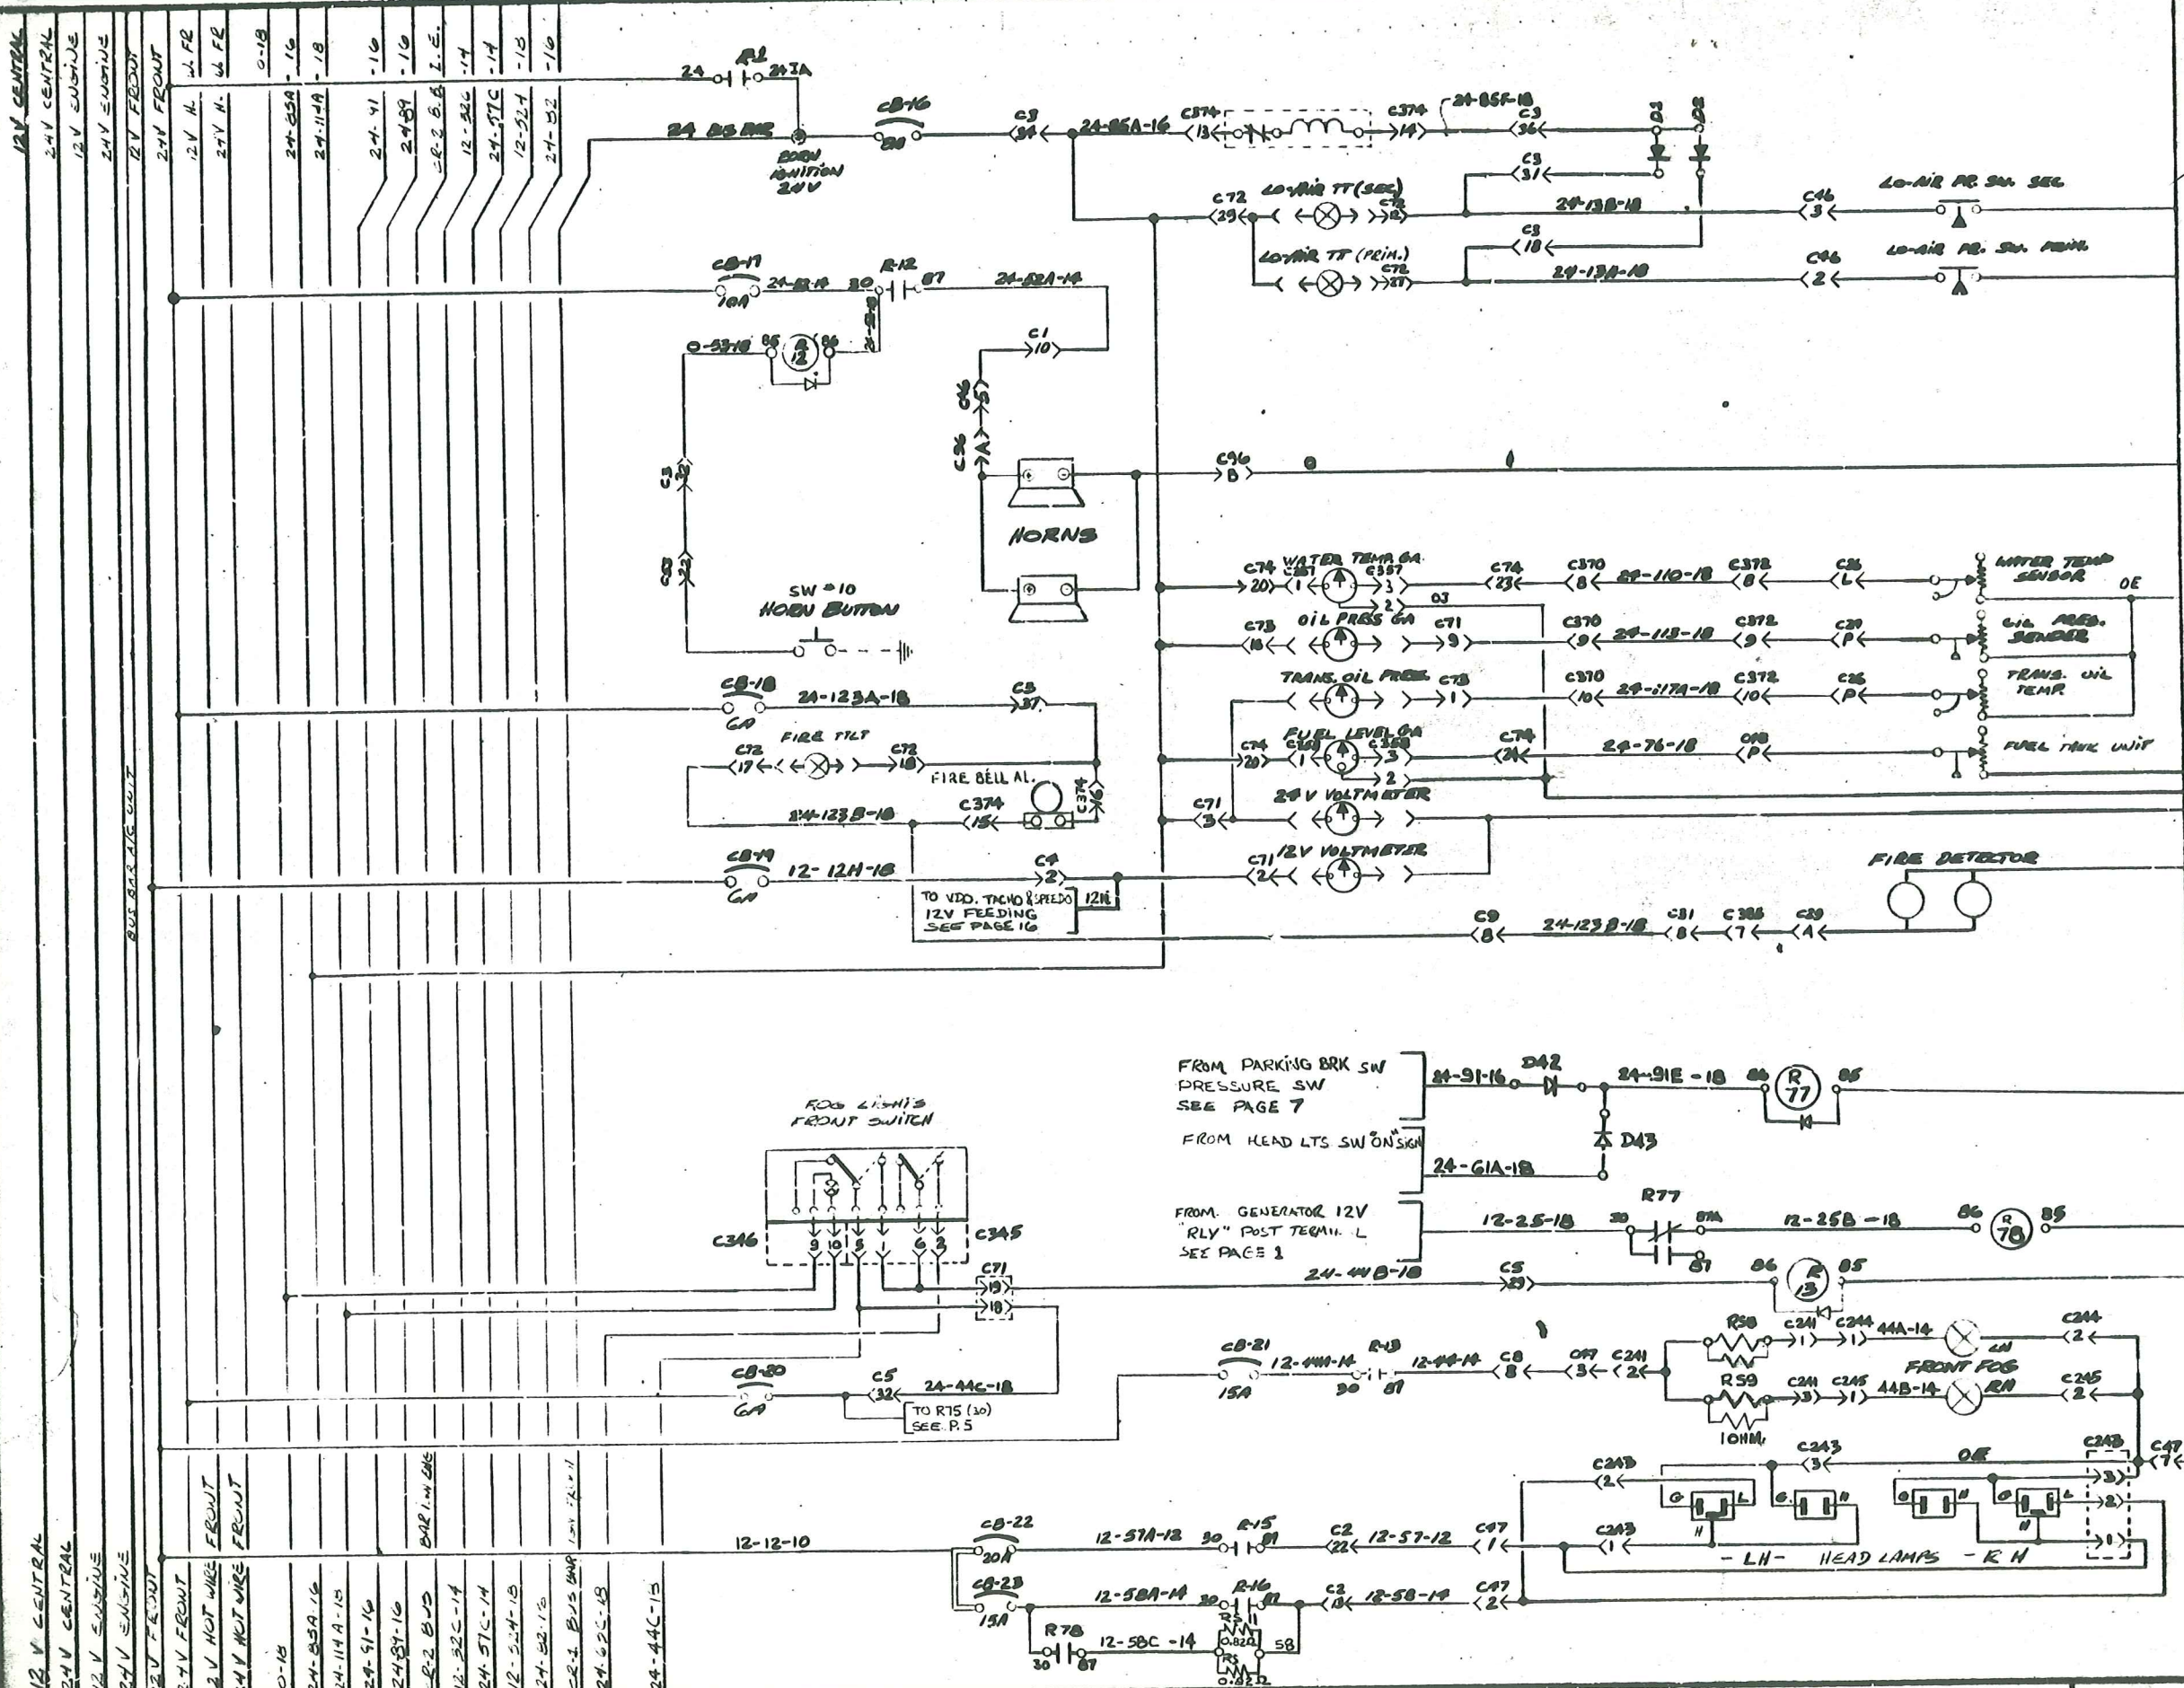

ALARM & SIGNAL

FOG LTS

EXTERIOR LIGHTING

HEAD LTS

ITEM	DATE	REVISION	PAR
C	90/11	Prior 0*90184	SL
B	90/09	(00*90132) LES BREAKERS CB18, 19, 20 AVALANT 5A	SL
A	90/06	MISE A JOUR	M/L
		REVISION	

WIRING DIAGRAM

APPL: EFF. W/ L-027 PRIOR TO: M-170 REF: HS-60


DESSI	D.T.	DATE	90-01
VER.	10	APPR.	10
NO: D-060732		P.4	

11

58

8.5"

11"

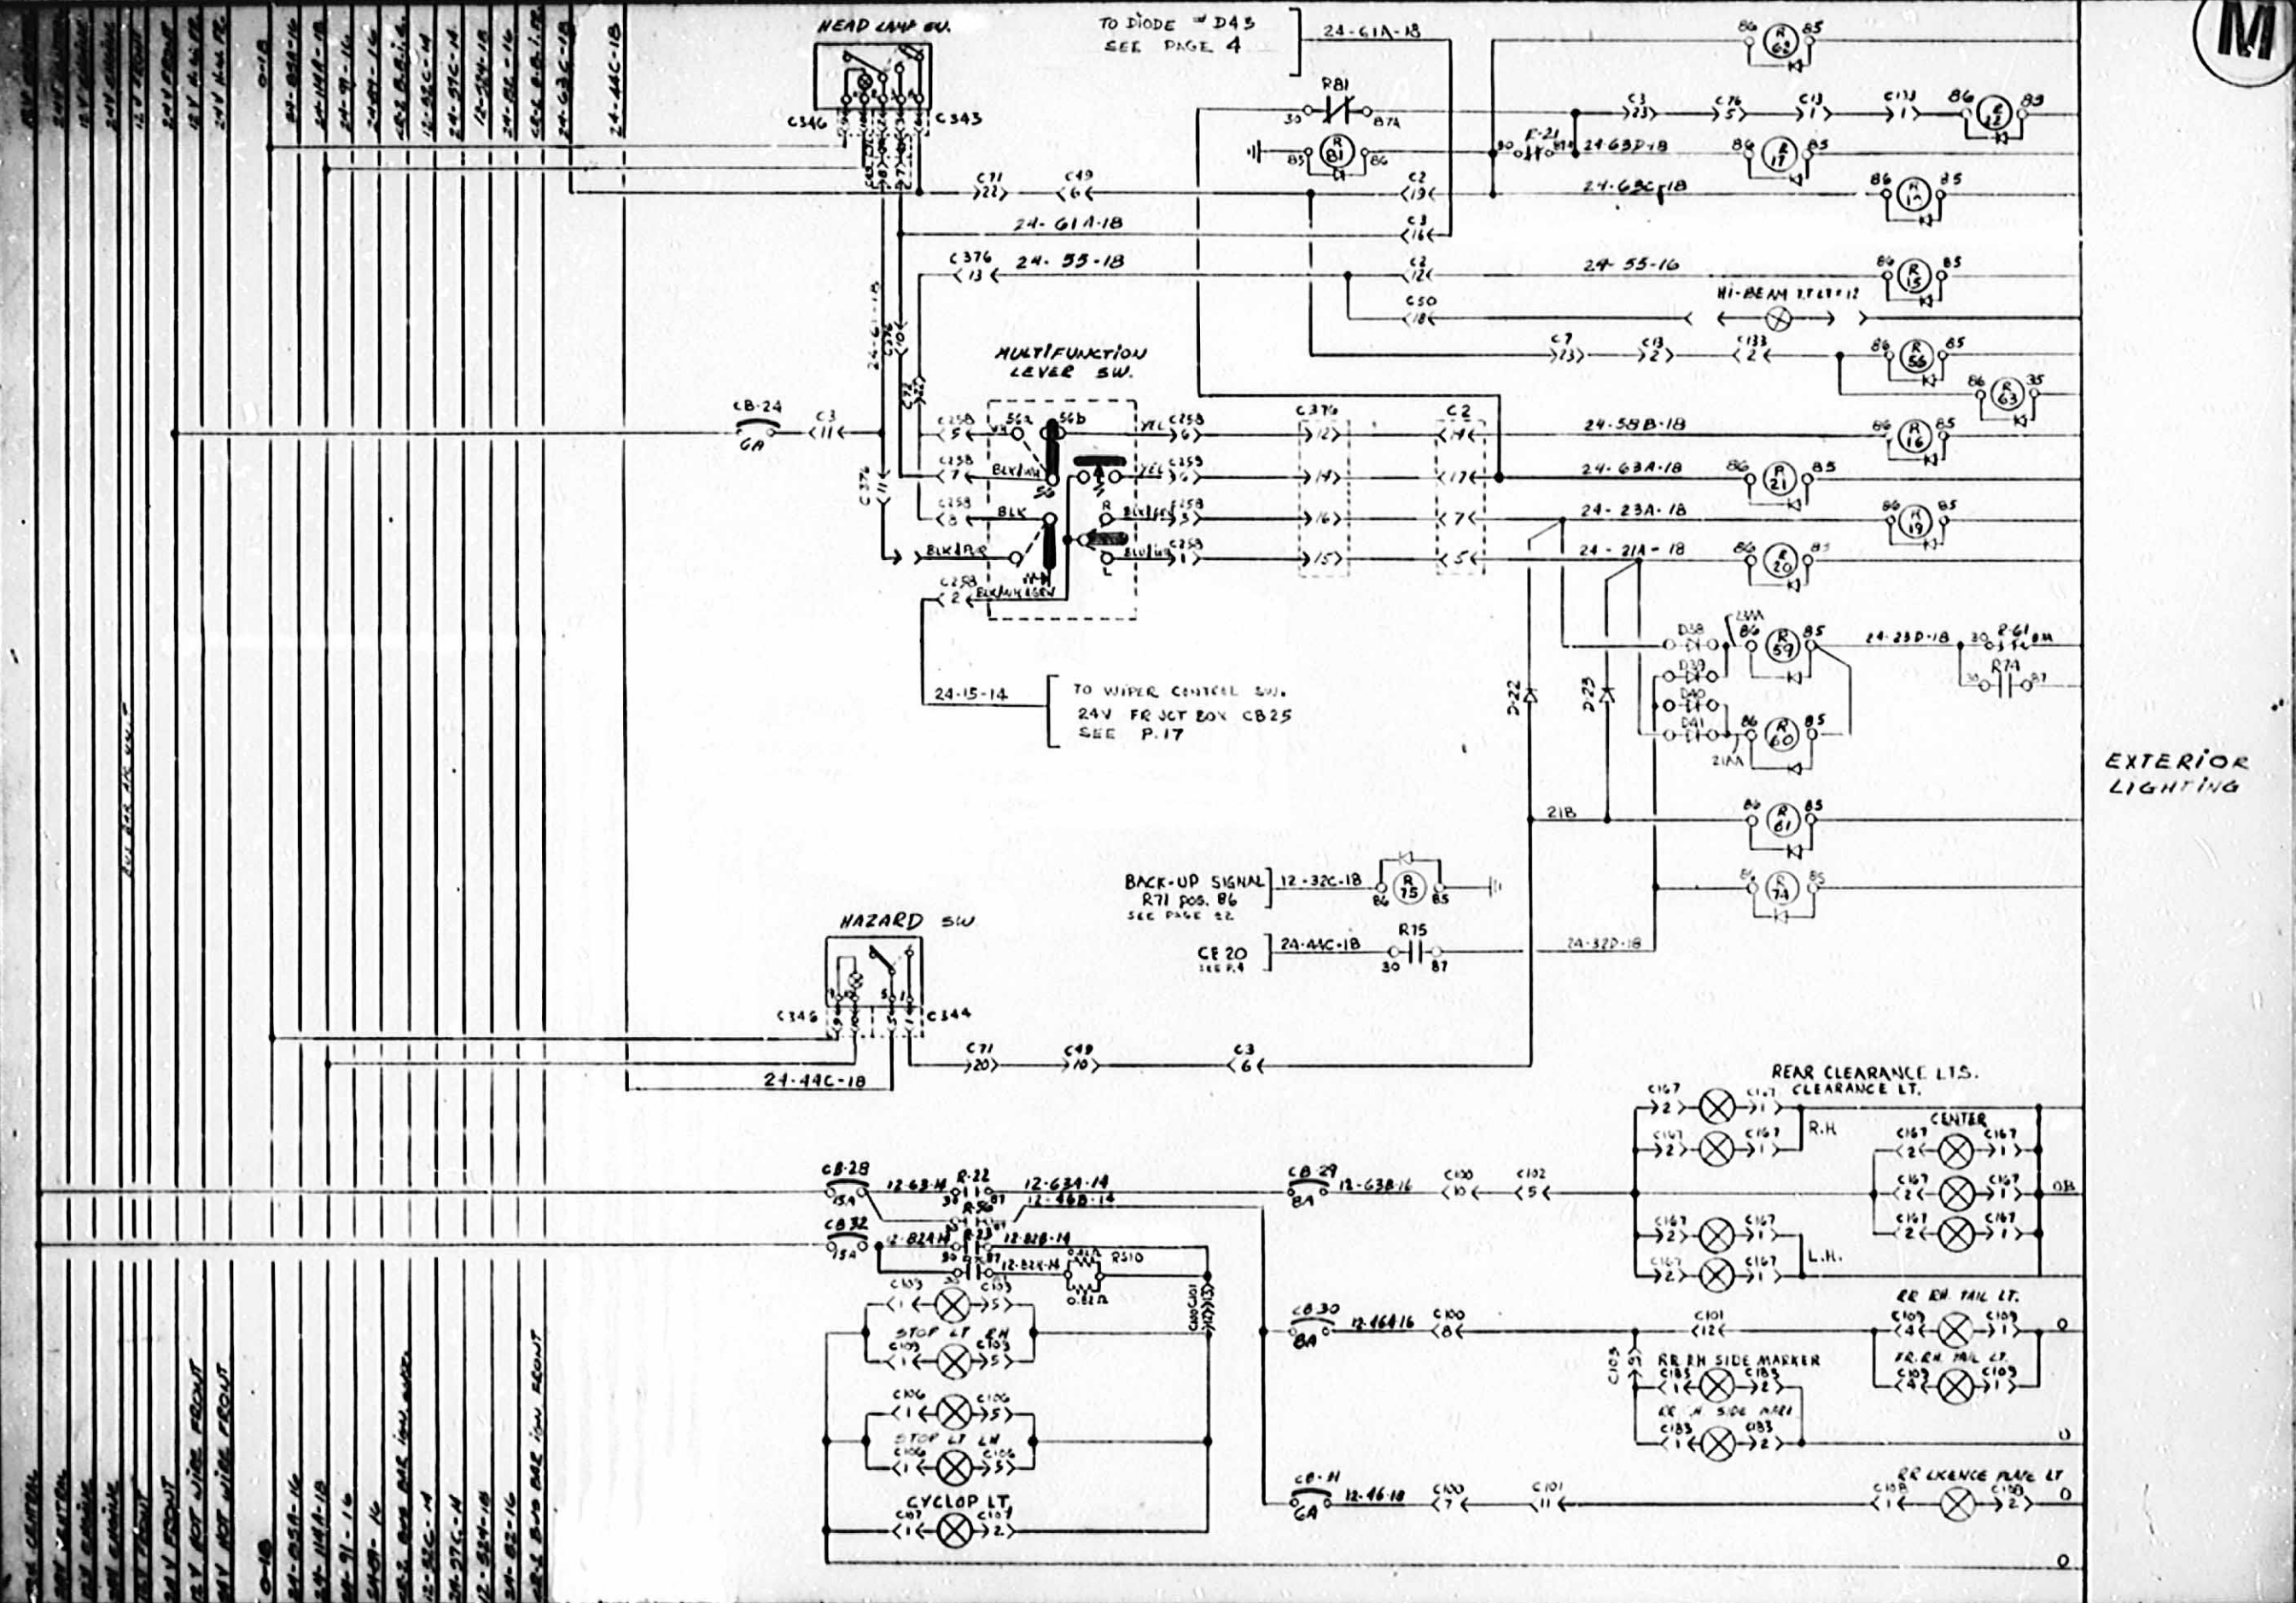

DESC: WIRING DIAGRAM		DESS: M. J.	DATE: 30-01
VER: K		APP: M	
90-04	CC 90152 LES BRENNERS		
90106	MISE A JOUR		
ITEM DATE	REVISION	APPL: EFF. W/L: 027	REF: H5-60
		NO: D-060732	P5 C



WIRING DIAGRAM

DESS:

DATE- 20.06

VER. -

APPR.- *Re*

A	90-09	BREXER GACIT SA 009052
---	-------	------------------------


APPL: EFF. W/ L-027, L-033, L-034, L-035
M-095 & M-104

REF: H5-60 "WESTOURS"

NO: D-060732 P.5A C



12V CENTRAL	12V CENTRAL
24V CENTRAL	24V CENTRAL
12V ENGINE	12V ENGINE
24V ENGINE	24V ENGINE
12V FRONT	12V FRONT
24V FRONT	24V FRONT
12V NOT WIRE FRONT	12V NOT WIRE FRONT
24V NOT WIRE FRONT	24V NOT WIRE FRONT
0-18	0-18
24-85A-16	24-85A-16
24-114A-13	24-114A-13
24-91-16	24-91-16
24-89-16	24-89-16
CR2 BUS BAR ION ENG	CR2 BUS BAR ION ENG
12-32C-14	12-32C-14
24-57C-14	24-57C-14
12-52A-15	12-52A-15
24-52-16	24-52-16
CR1 BUS BAR ION ENG	CR1 BUS BAR ION ENG

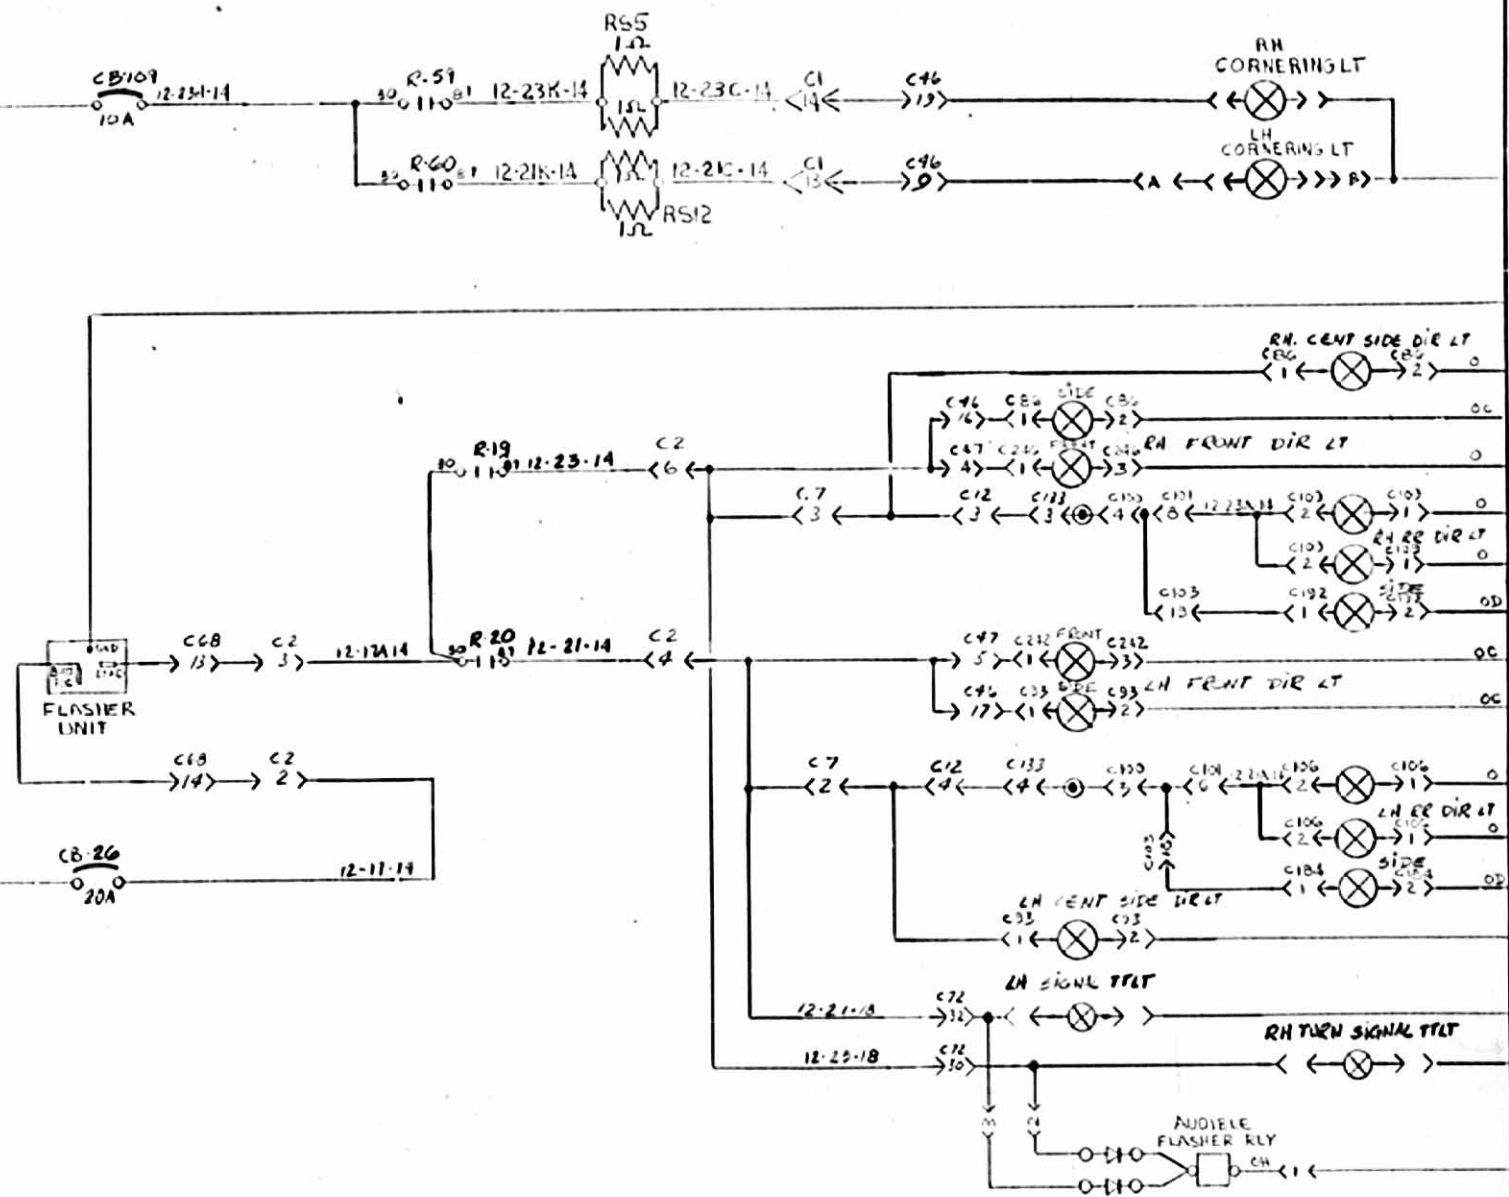

CORNERING LTS
RH FLASHER LTS
LH FLASHER LTS

EXTERIOR
LIGHTING

DESC:

WIRING DIAGRAM

DESS: B.C.

DATE: 90-01

VER: *HC*

APPR: *HC*

ITEM DATE

REVISION

PAR

APPL: W/L027, L033...


REF: H5-60

NO: D-060732

44 C



12V CENTRAL	12V CENTRAL
24V CENTRAL	24V CENTRAL
12V ENGINE	12V ENGINE
24V ENGINE	24V ENGINE
12V FRONT	12V FRONT
24V FRONT	24V FRONT
12V HOT WIRE FRONT	12V HOT WIRE FRONT
24V HOT WIRE FRONT	24V HOT WIRE FRONT
0-18	0-18
24-85A-16	24-85A-16
24-114A-18	24-114A-18
CR-2 BUD BAR 104L. FUSE.	CR-2 BUD BAR 104L. FUSE.
12-32C-14	12-32C-14
24-51C-14	24-51C-14
12-524-18	12-524-18
CR-1 B.B.I.F.	CR-1 B.B.I.F.
24-52E-14	24-52E-14
24-147W-13	24-147W-13
24-107-13	24-107-13
24-82-13	24-82-13
24-52E-14	24-52E-14
24-147W-13	24-147W-13
24-82-13	24-82-13

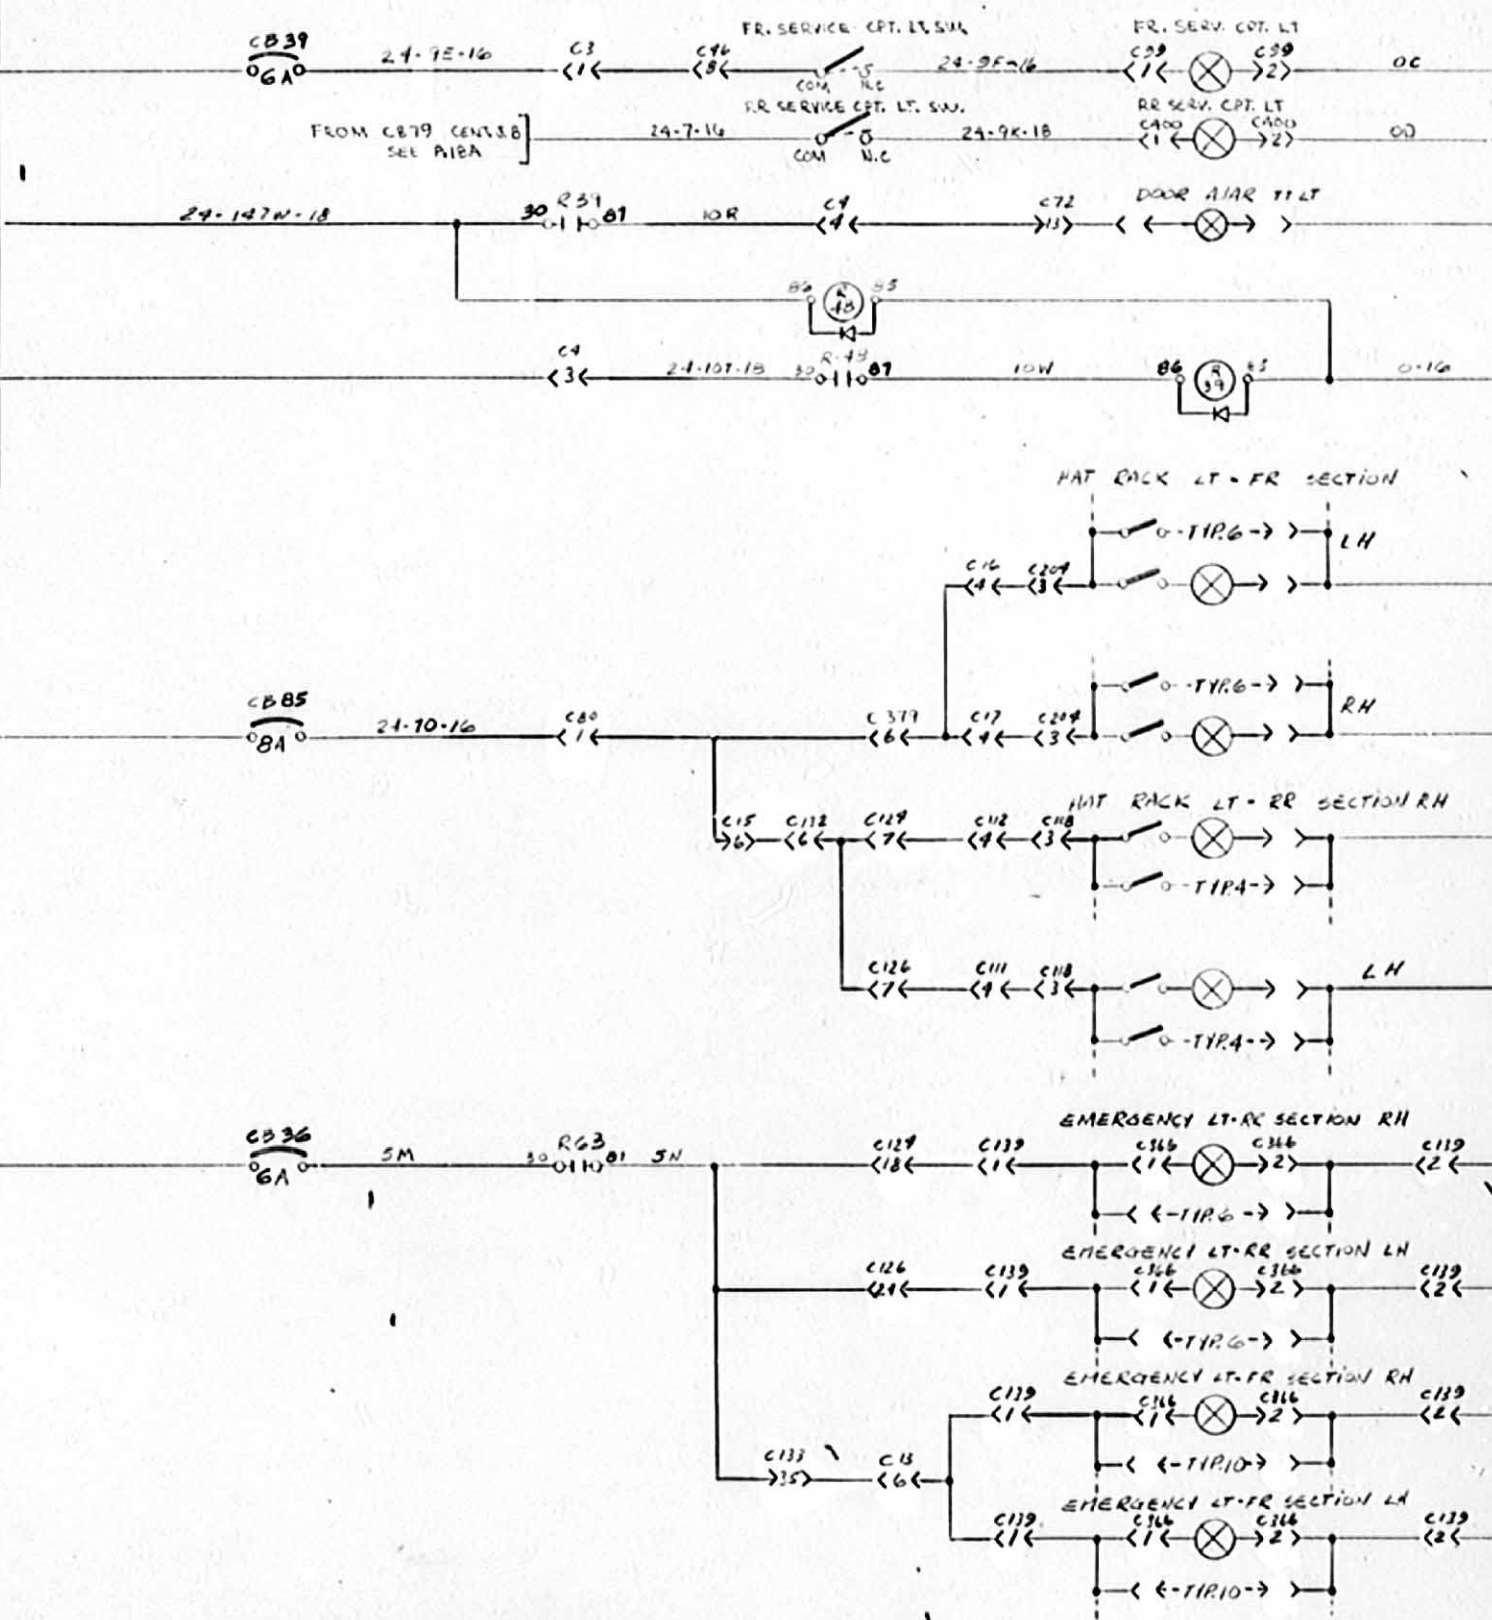


RR 2 FR. SERVICE CPT. LTS
DOOR ADJAR
HAT RACK LIGHTING
EMERGENCY LTS

INTERIOR LIGHTING

DESC:	WIRING DIAGRAM			DESS: S.B.	DATE: 90/01
VER.:				APPR.:	
APPL: EFF. W/	L-027	REF: H5-60	NO: D-060732	8/24	C
ITEM	DATE	REVISION	PAR		
A	90/10	RR SERV. CPT. LT. DC 90159	SL		
	70/09	ADDUTE	SL		
		CC 90152 LES BREAKERS	SL		
		CS 26 39 ADJUT 5A	PAR		



2.8A.C

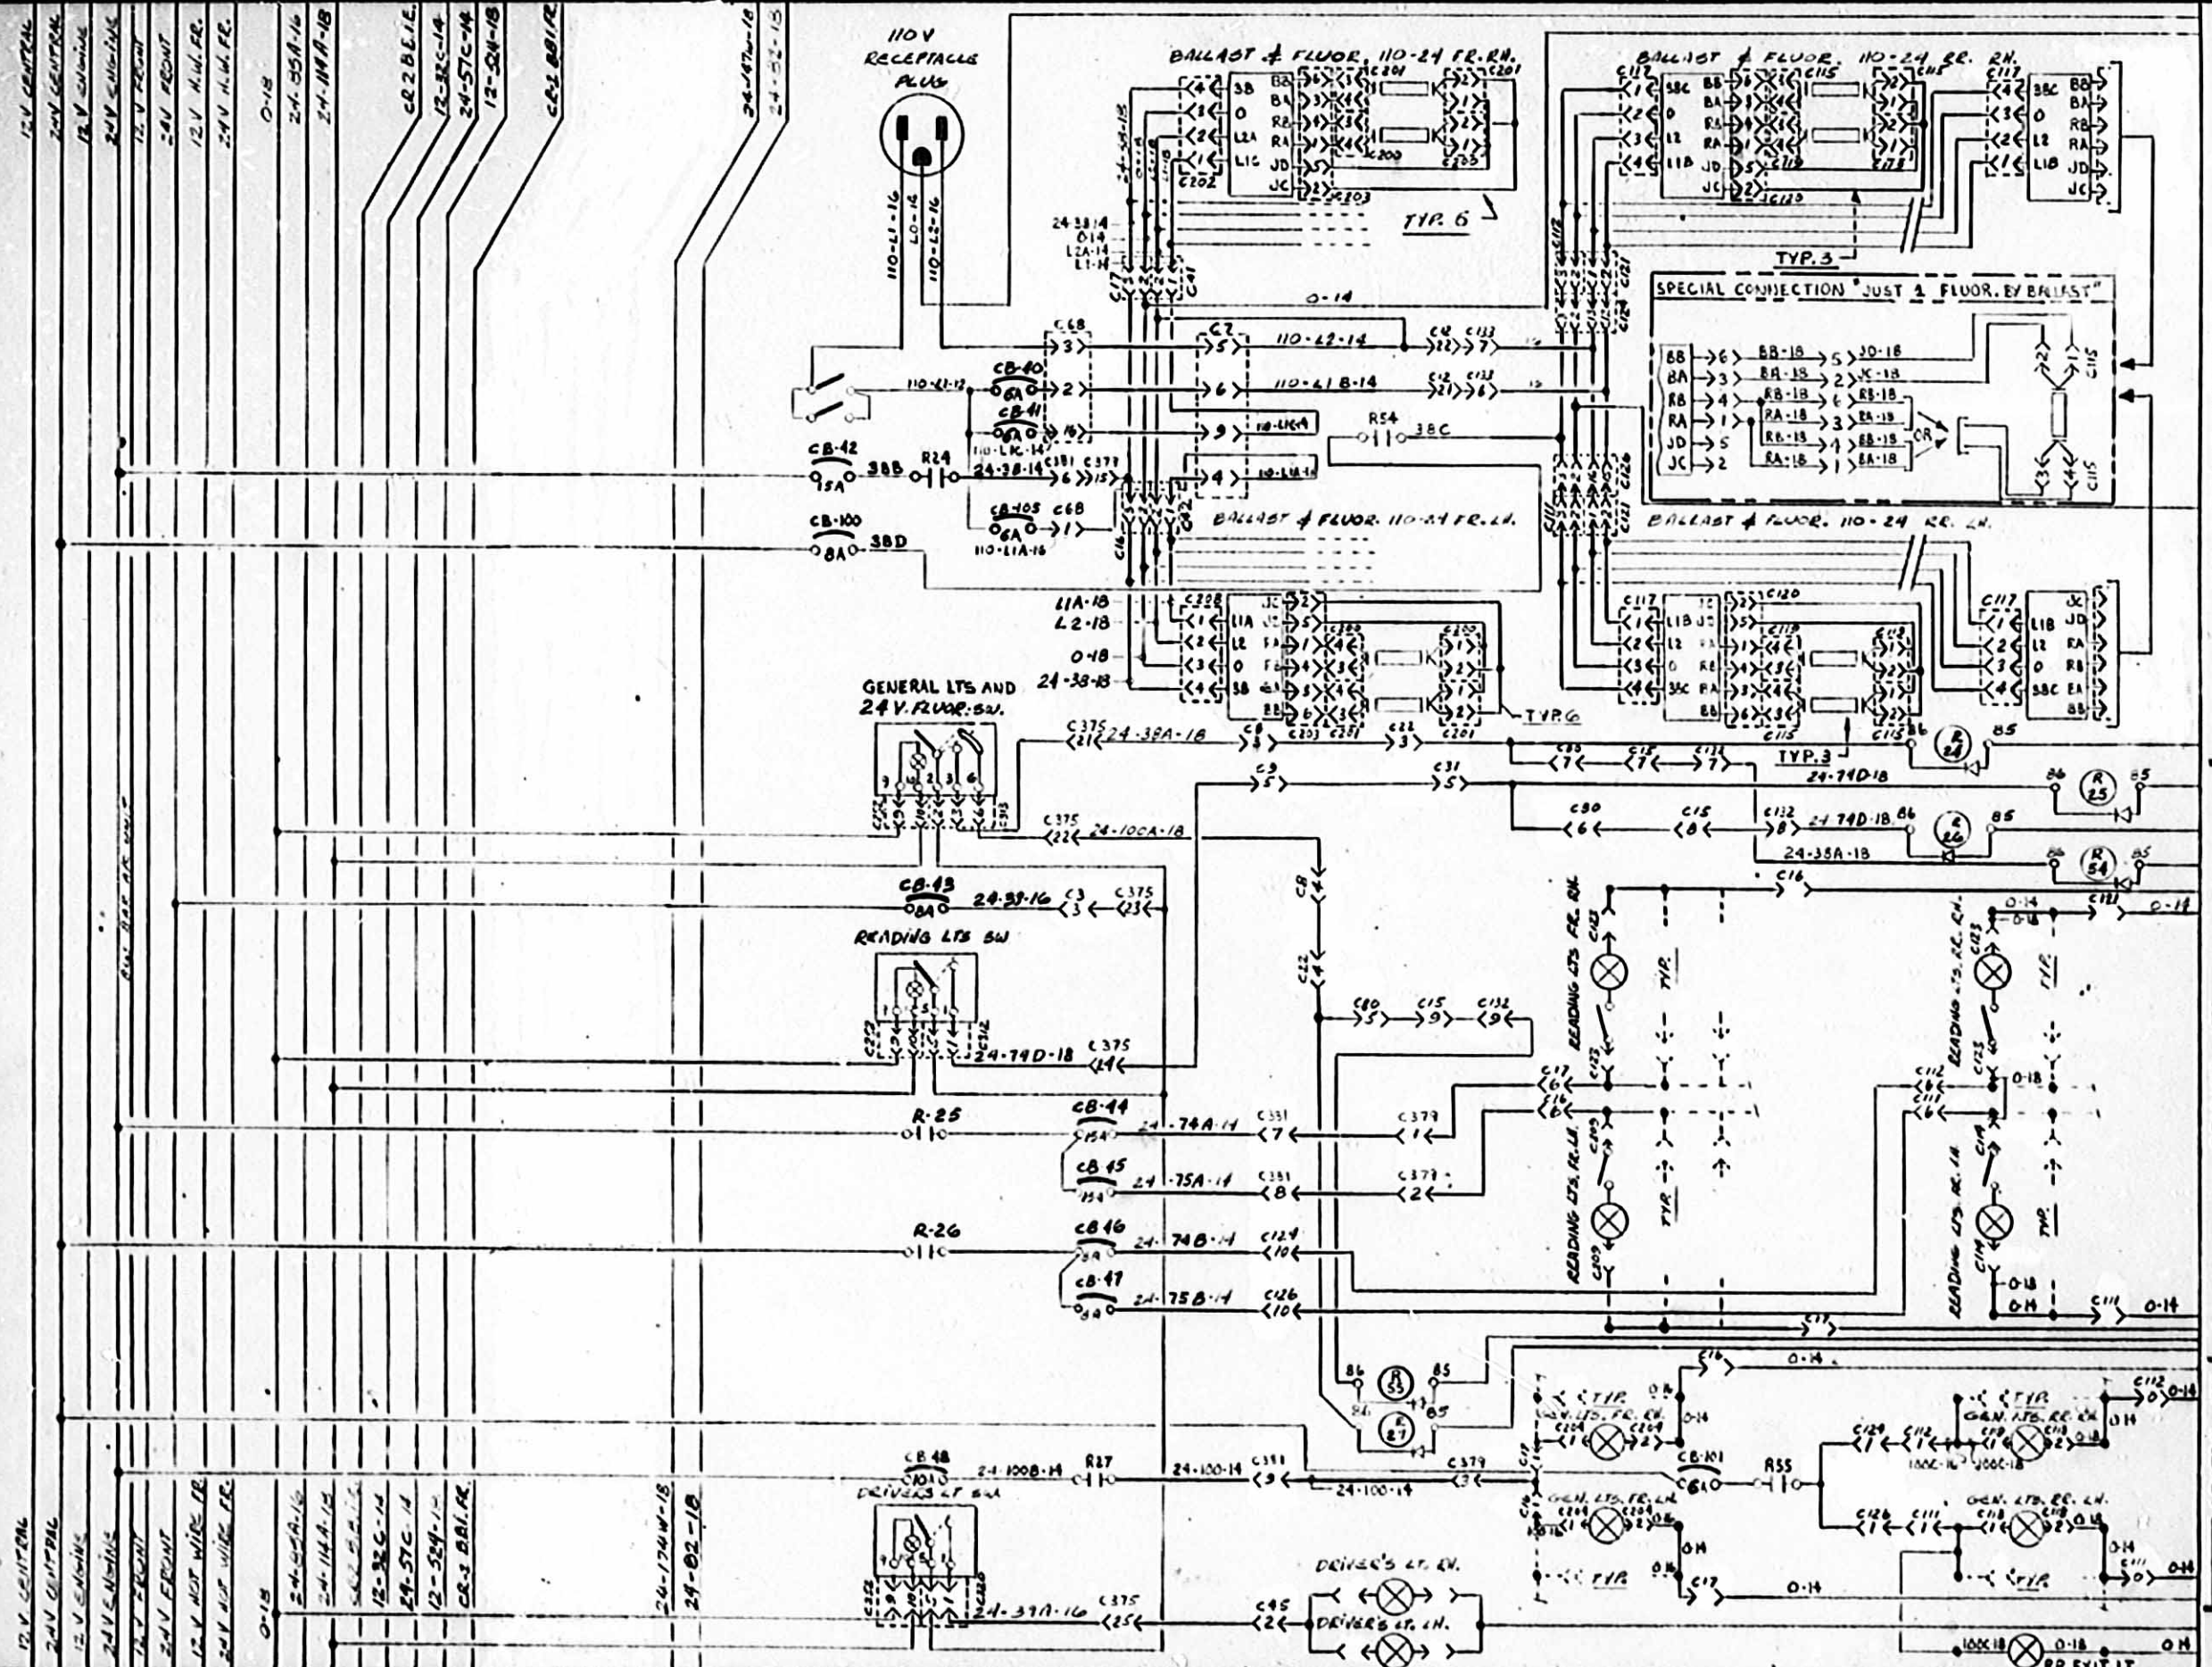

110V & 24V FLUORESCENT LTS.

INTERIOR
LIGHTING


READING LTS.

DRIVER'S [] GENERAL [] LTS.

				DESC :		DESS :	S.B.	DATE -	90/01
					WIRING DIAGRAM	VER. -	1/C	APPR. -	1/C
H	90/09	CCW70152 LES BRASSERES							
	90/06	CE40, 41, 101, 102 AUMENT 50							
		MISE A JOUR	1/1						
ITEM	DATE	REVISION	PAR	APPL: EFF. W/	L-027 L-033...	REF: HS-60	NO: D-060732	P. 9	C



IC

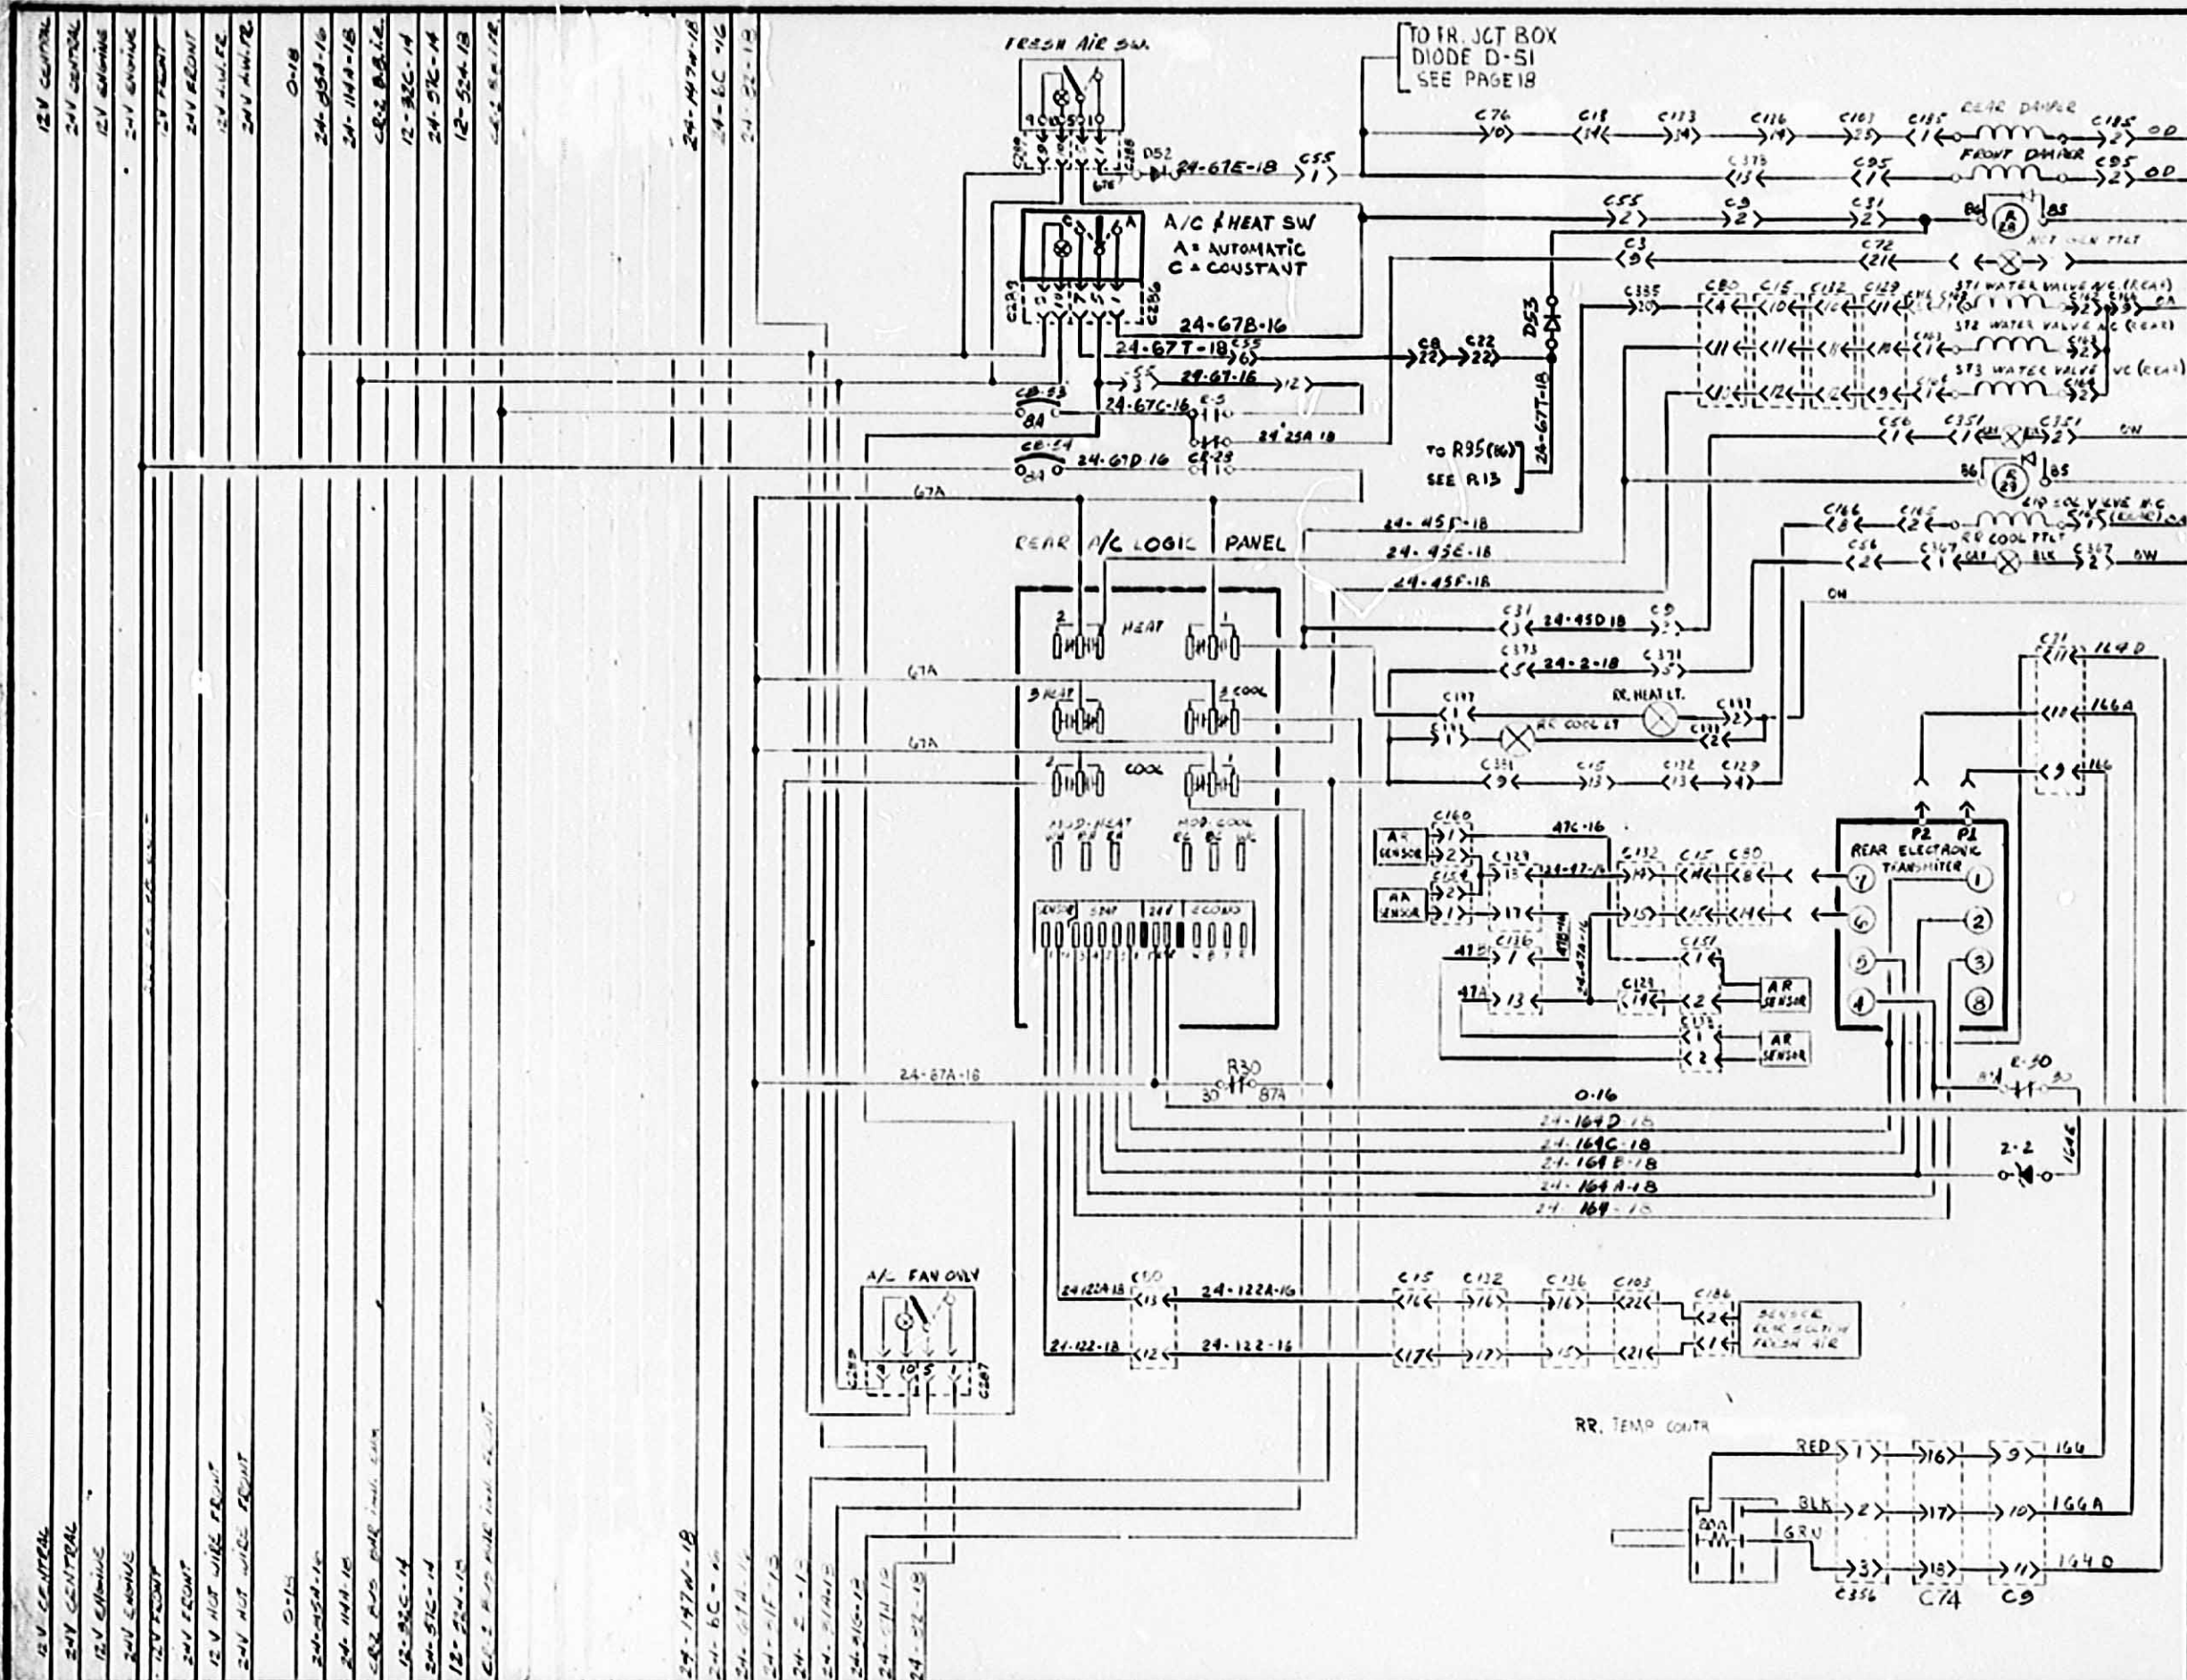


A/C & HEAT
SYSTEM

DESC:				DESS: <i>LC</i>		DATE: 92-04	
WIRING DIAGRAM				VER: <i>LC</i>		APPR: <i>RL</i>	
92-04 LANCE OC# 92030				REF: H5-60		IN: D-060732 P. 11a	
ITEM	DATE	REVISION	PAR	APPL: <i>W</i> / N-208		C	



AUX. CONDENSER

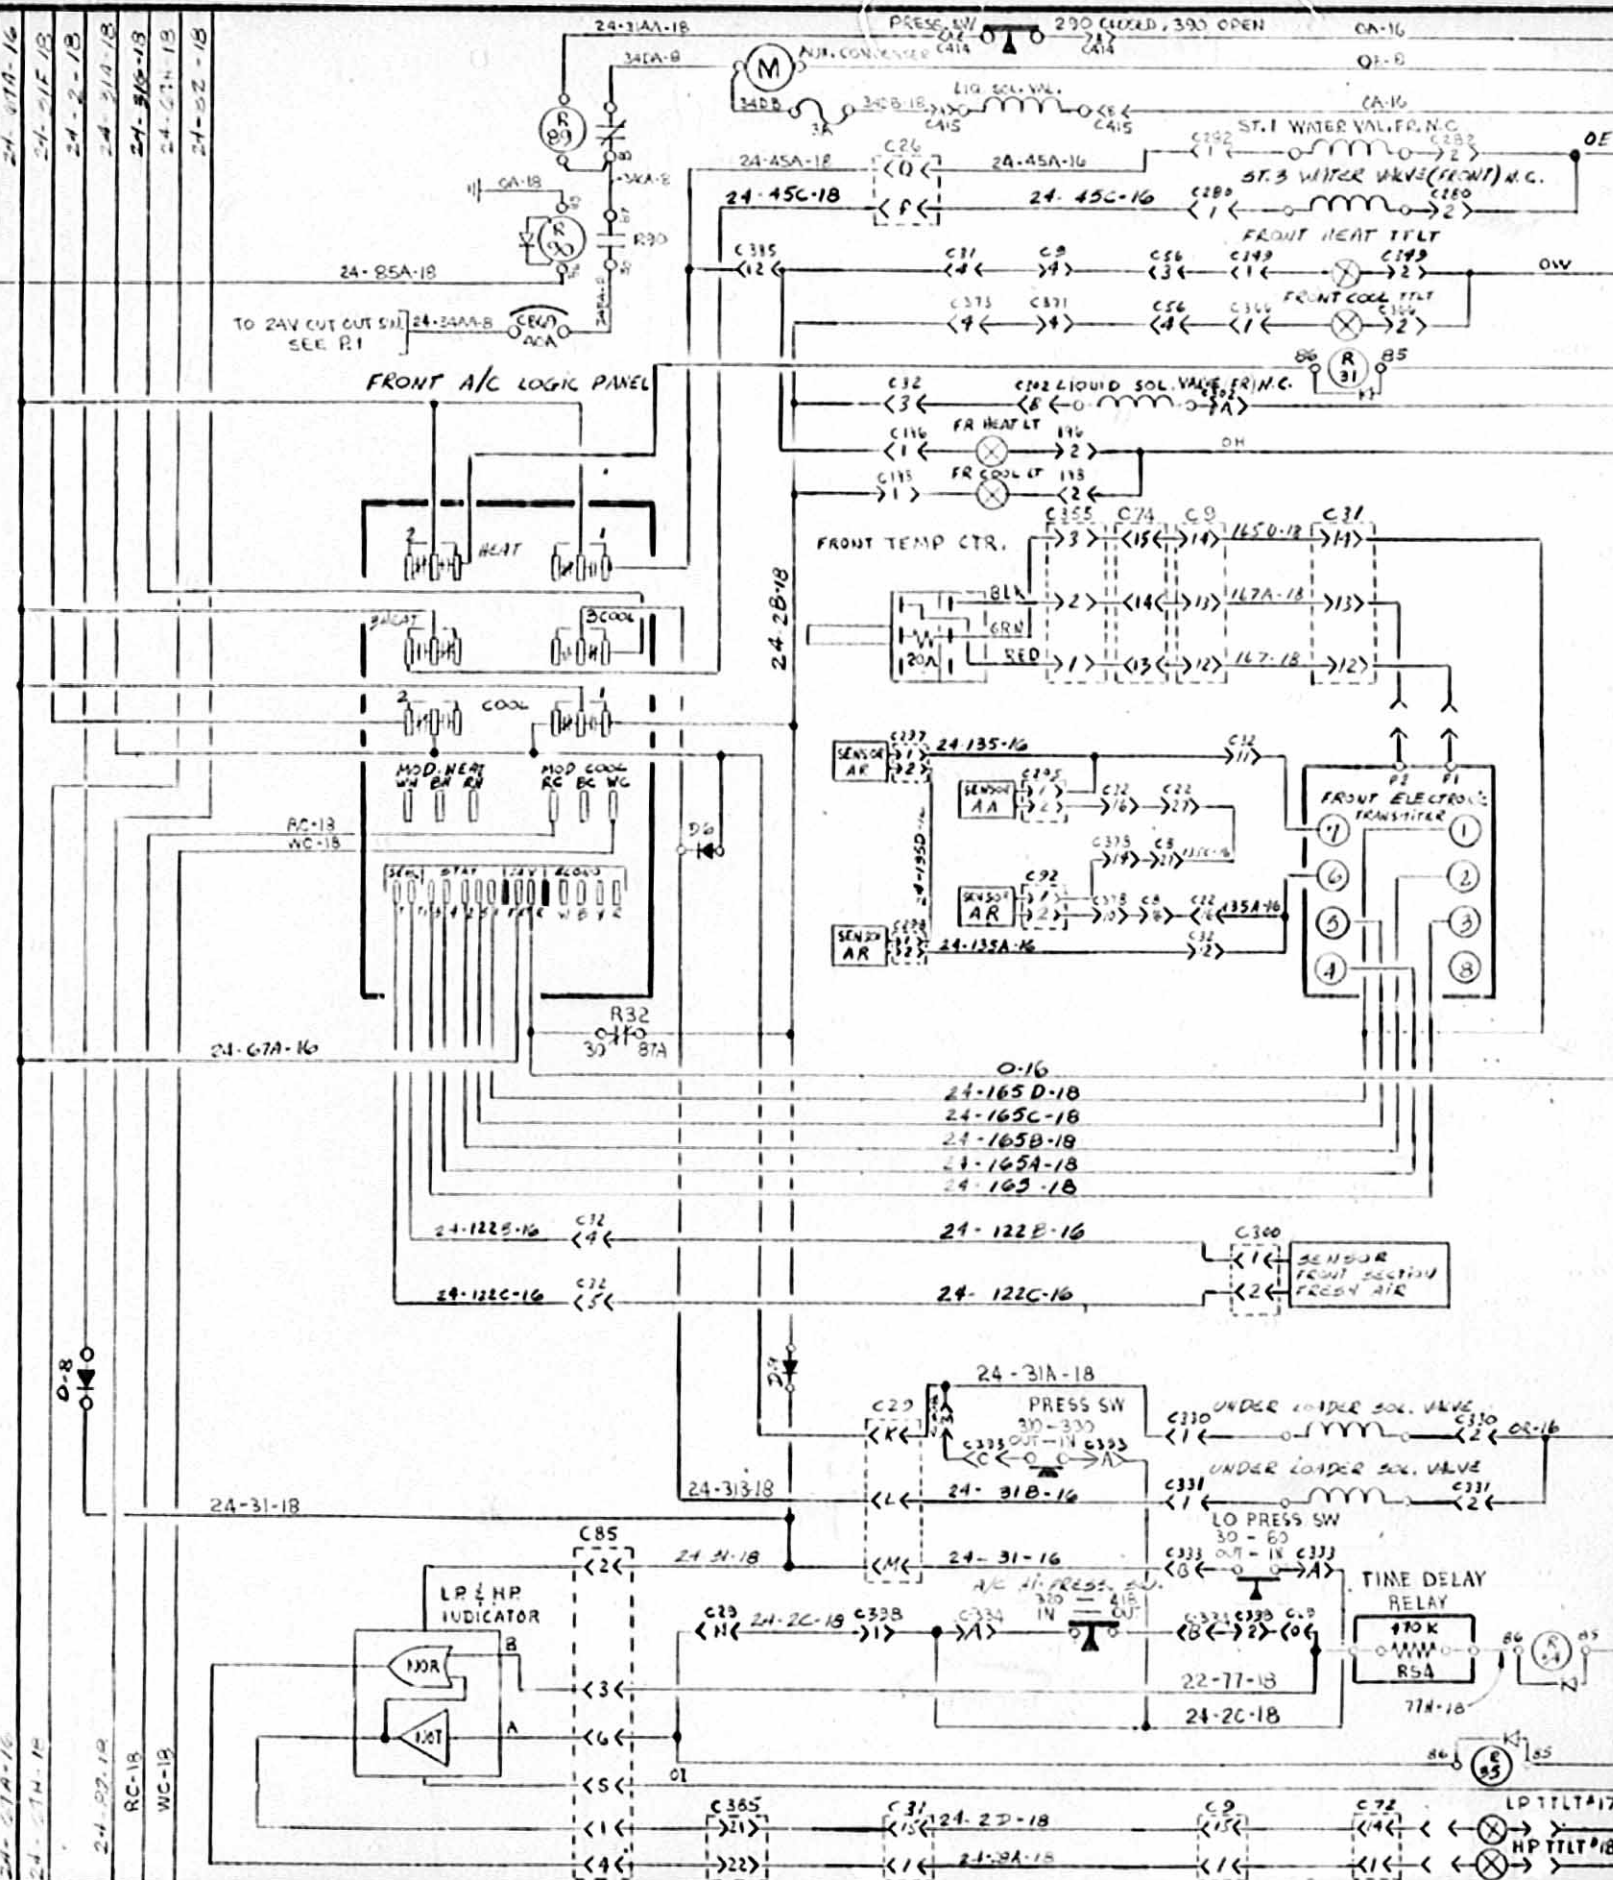A/C & HEAT
SYSTEM

DESC:

WIRING DIAGRAM

DESS:

BC

DATE:

90-01

VER.:

C

APPR.:

12/24

NO: D-060732

C

A 90/100

OC 9 90149

M

APPL: W/L-027

REF: HS-60


ITEM DATE

REVISION

PAR



121

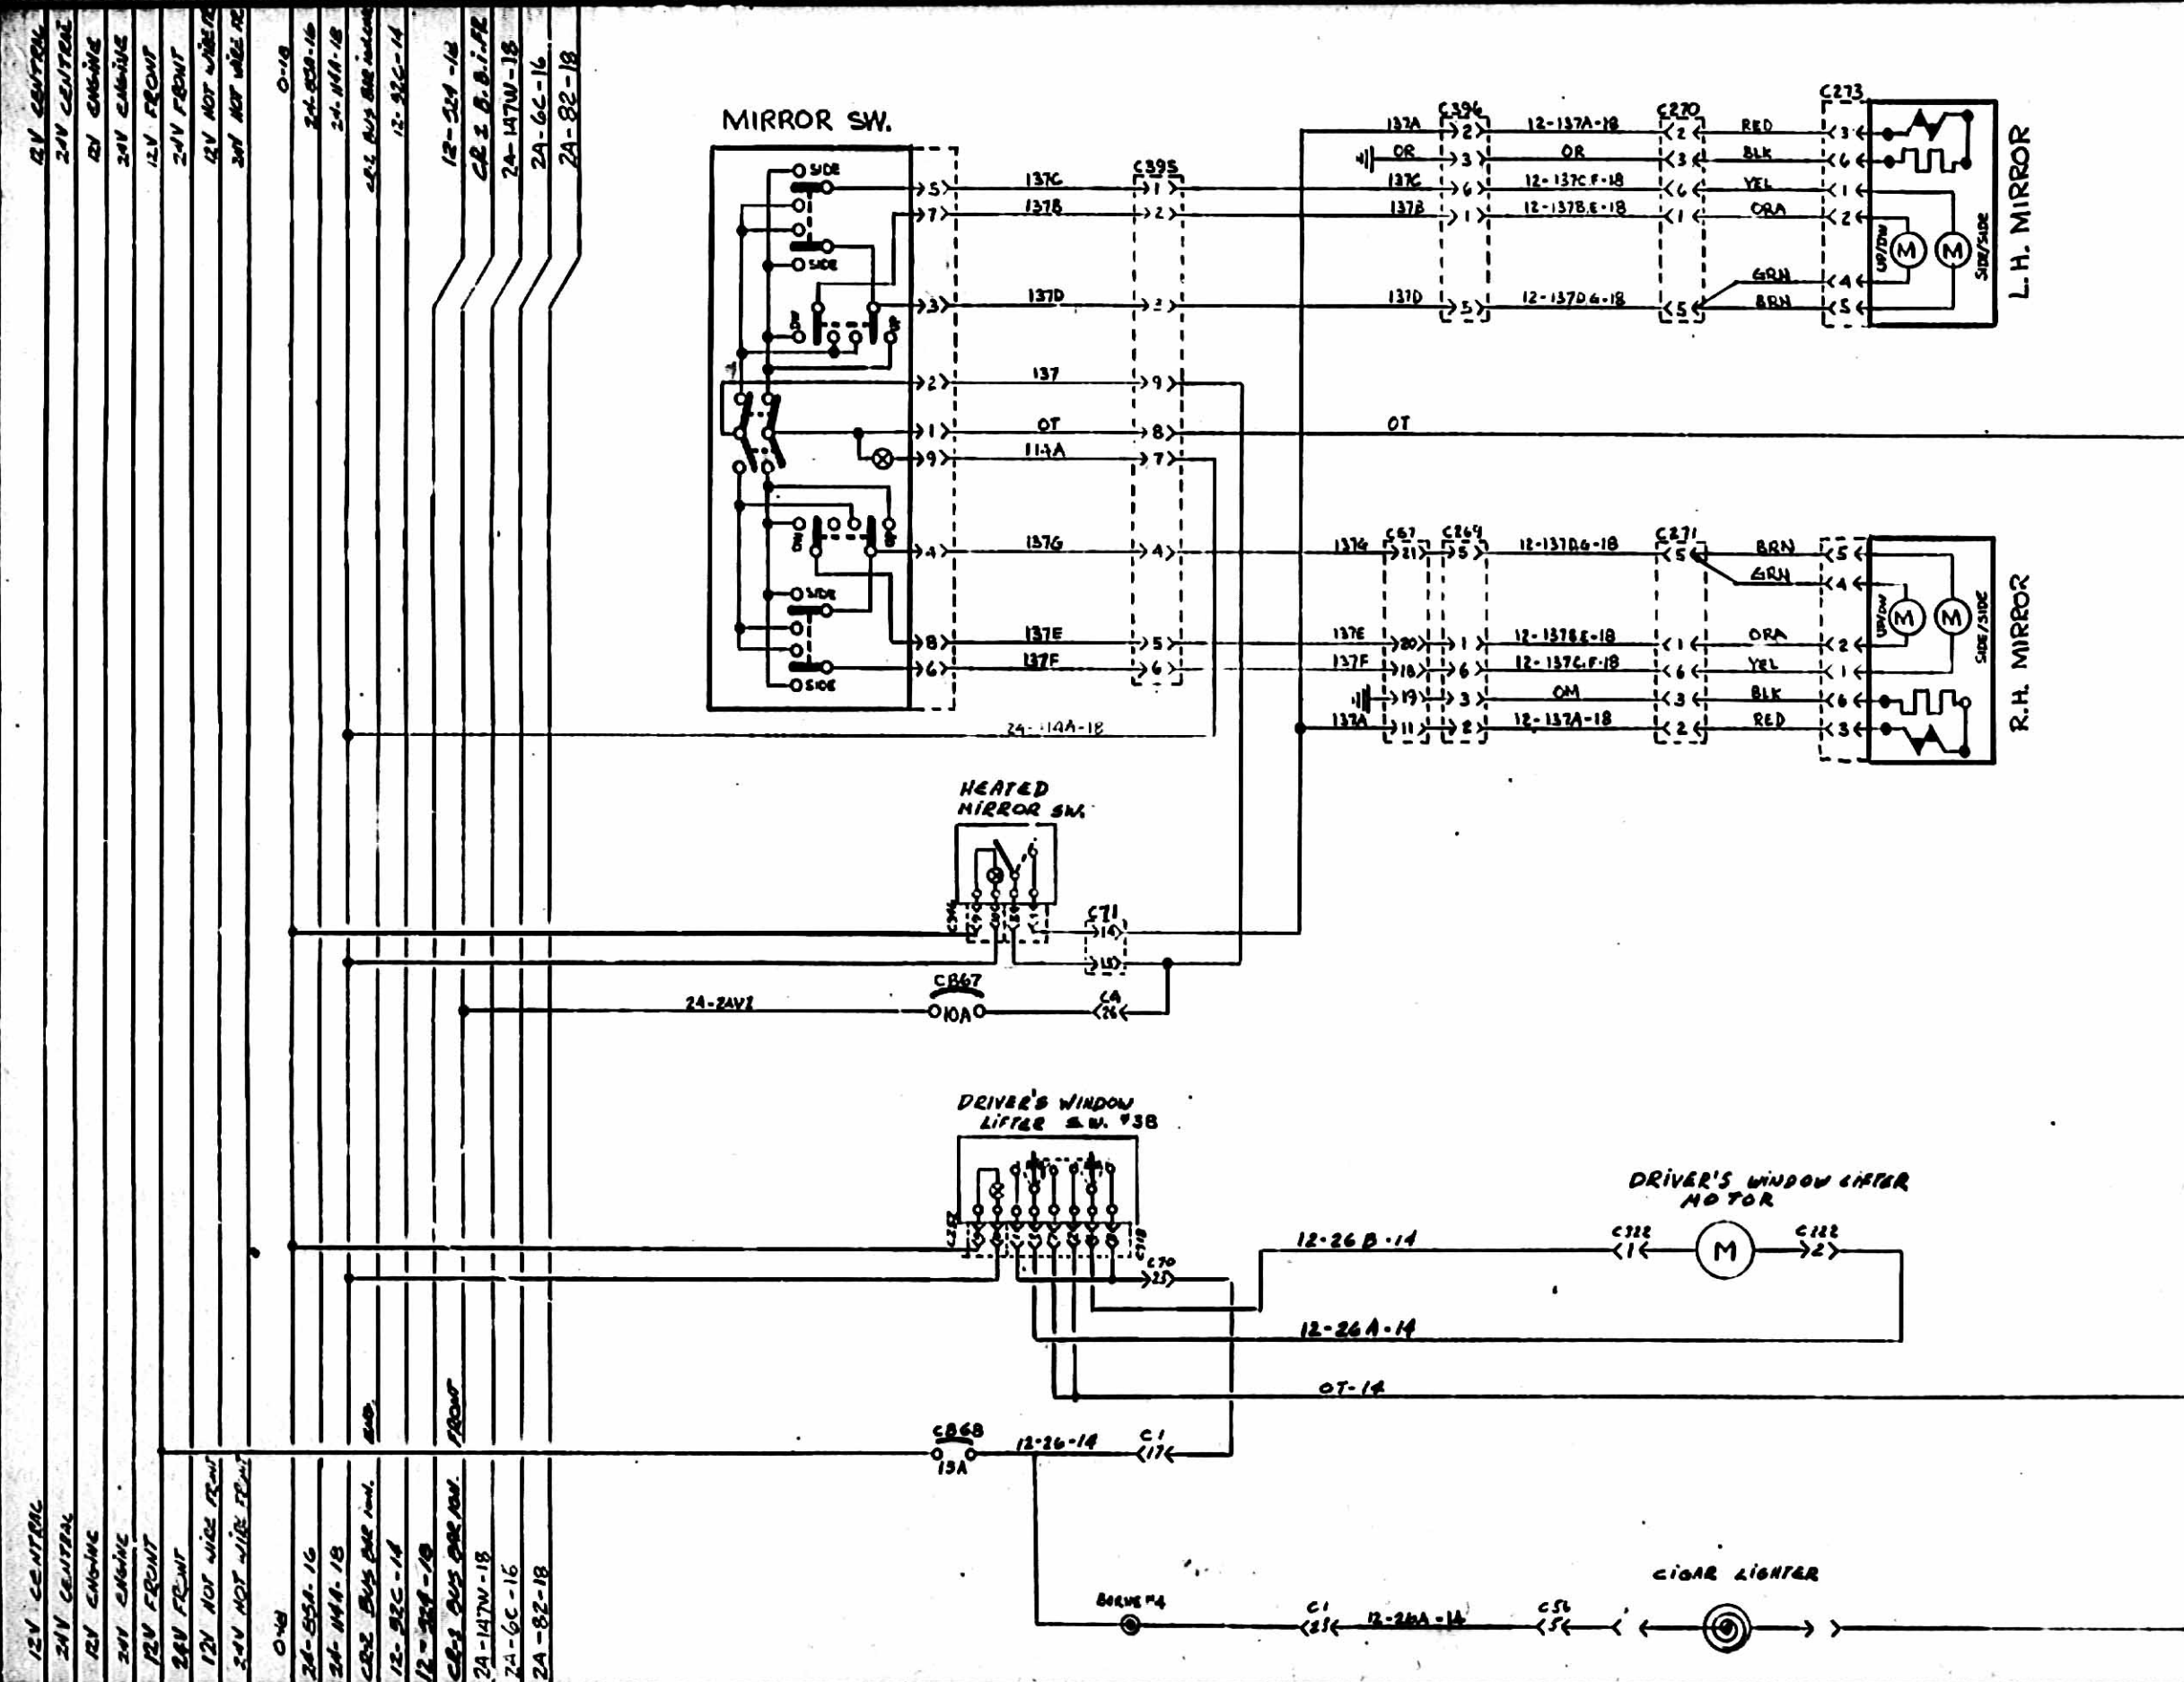


REAR VIEW
ADJUST
&
HEATED
MIRROR

DRIVER'S WINDOW

CIGAR LIGHTER

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

M

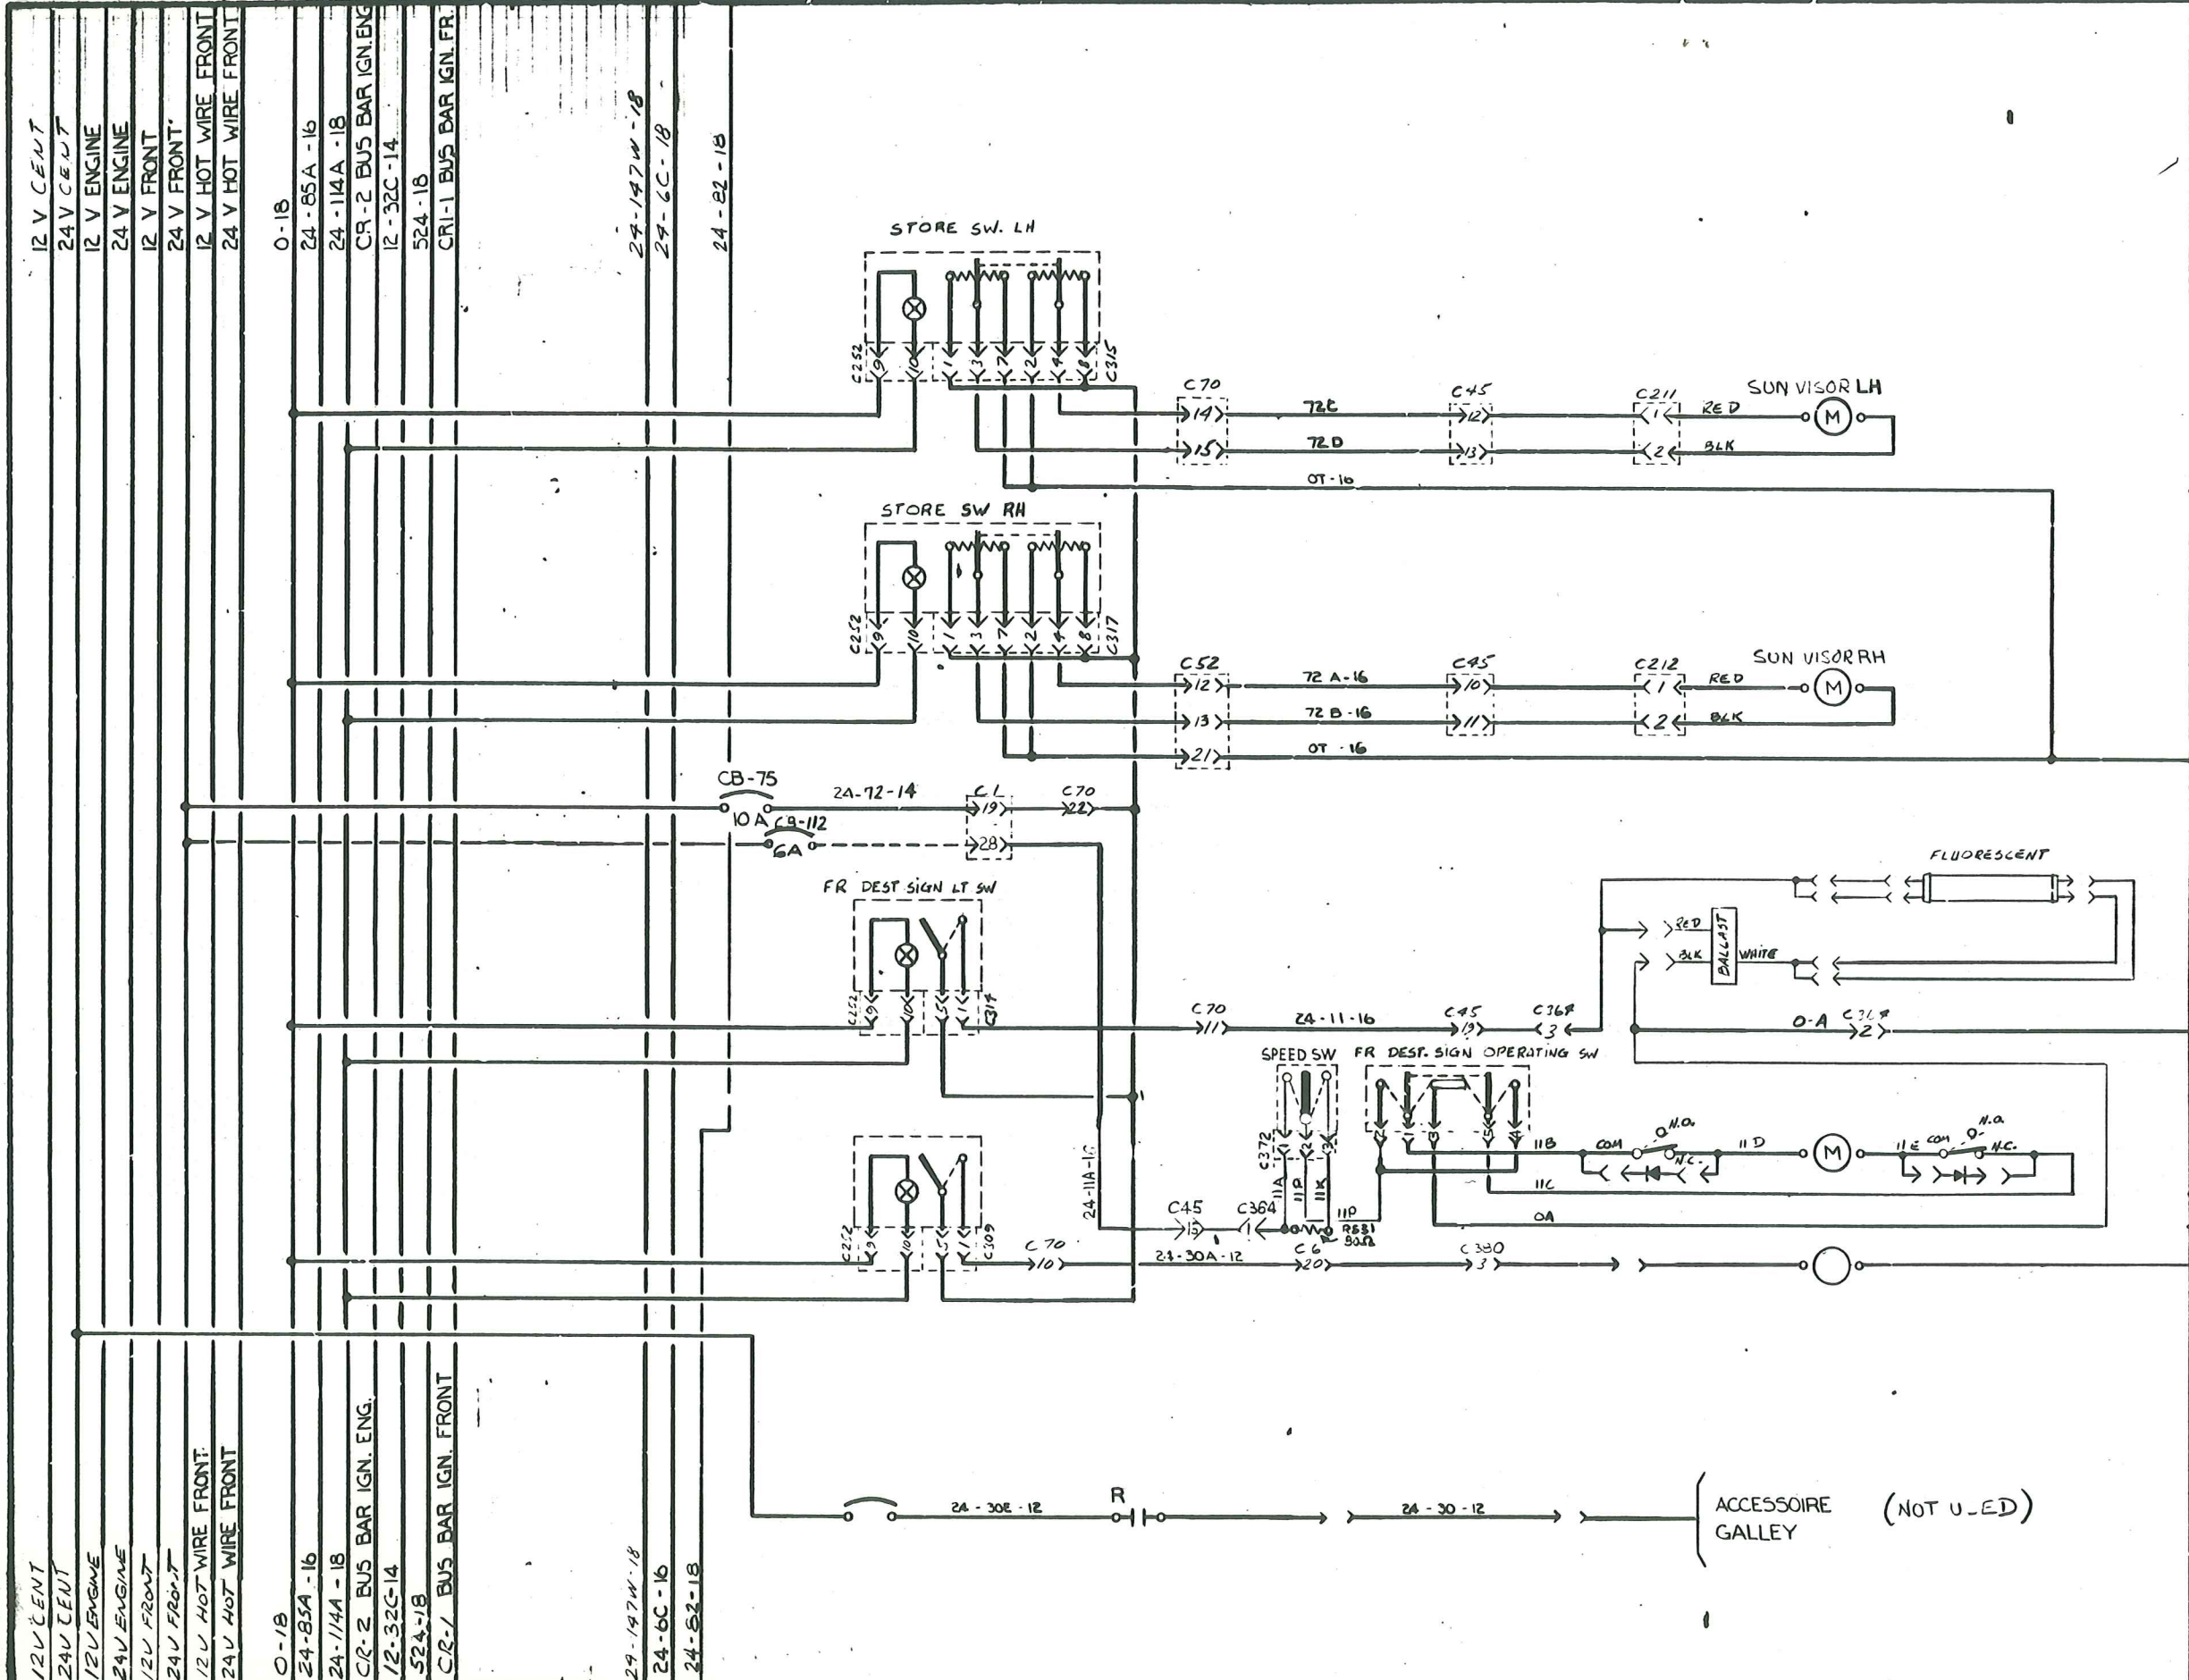

SUN
VISOR

FRONT DESTINATION
SIGN

OPTION
GALLEY


ACCESSOIRE
GALLEY (NOT U-ED)

DESC:	WIRING DIAGRAM		DESS:	BC	DATE:	30-01
VER.:			APPR.:			
NO:	D-060732	15/24	C			

15/24
D-060732



- | | | | | | | | |
|-------------|-------------|------------|------------|-----------|-----------|-----------------|-----------------|
| 12V CENTRAL | 24V CENTRAL | 12V ENGINE | 24V ENGINE | 12V FRONT | 24V FRONT | 12V NOT WIRE FE | 24V NOT WIRE FE |
| 12V CENTRAL | 24V CENTRAL | 12V ENGINE | 24V ENGINE | 12V FRONT | 24V FRONT | 12V NOT WIRE FE | 24V NOT WIRE FE |

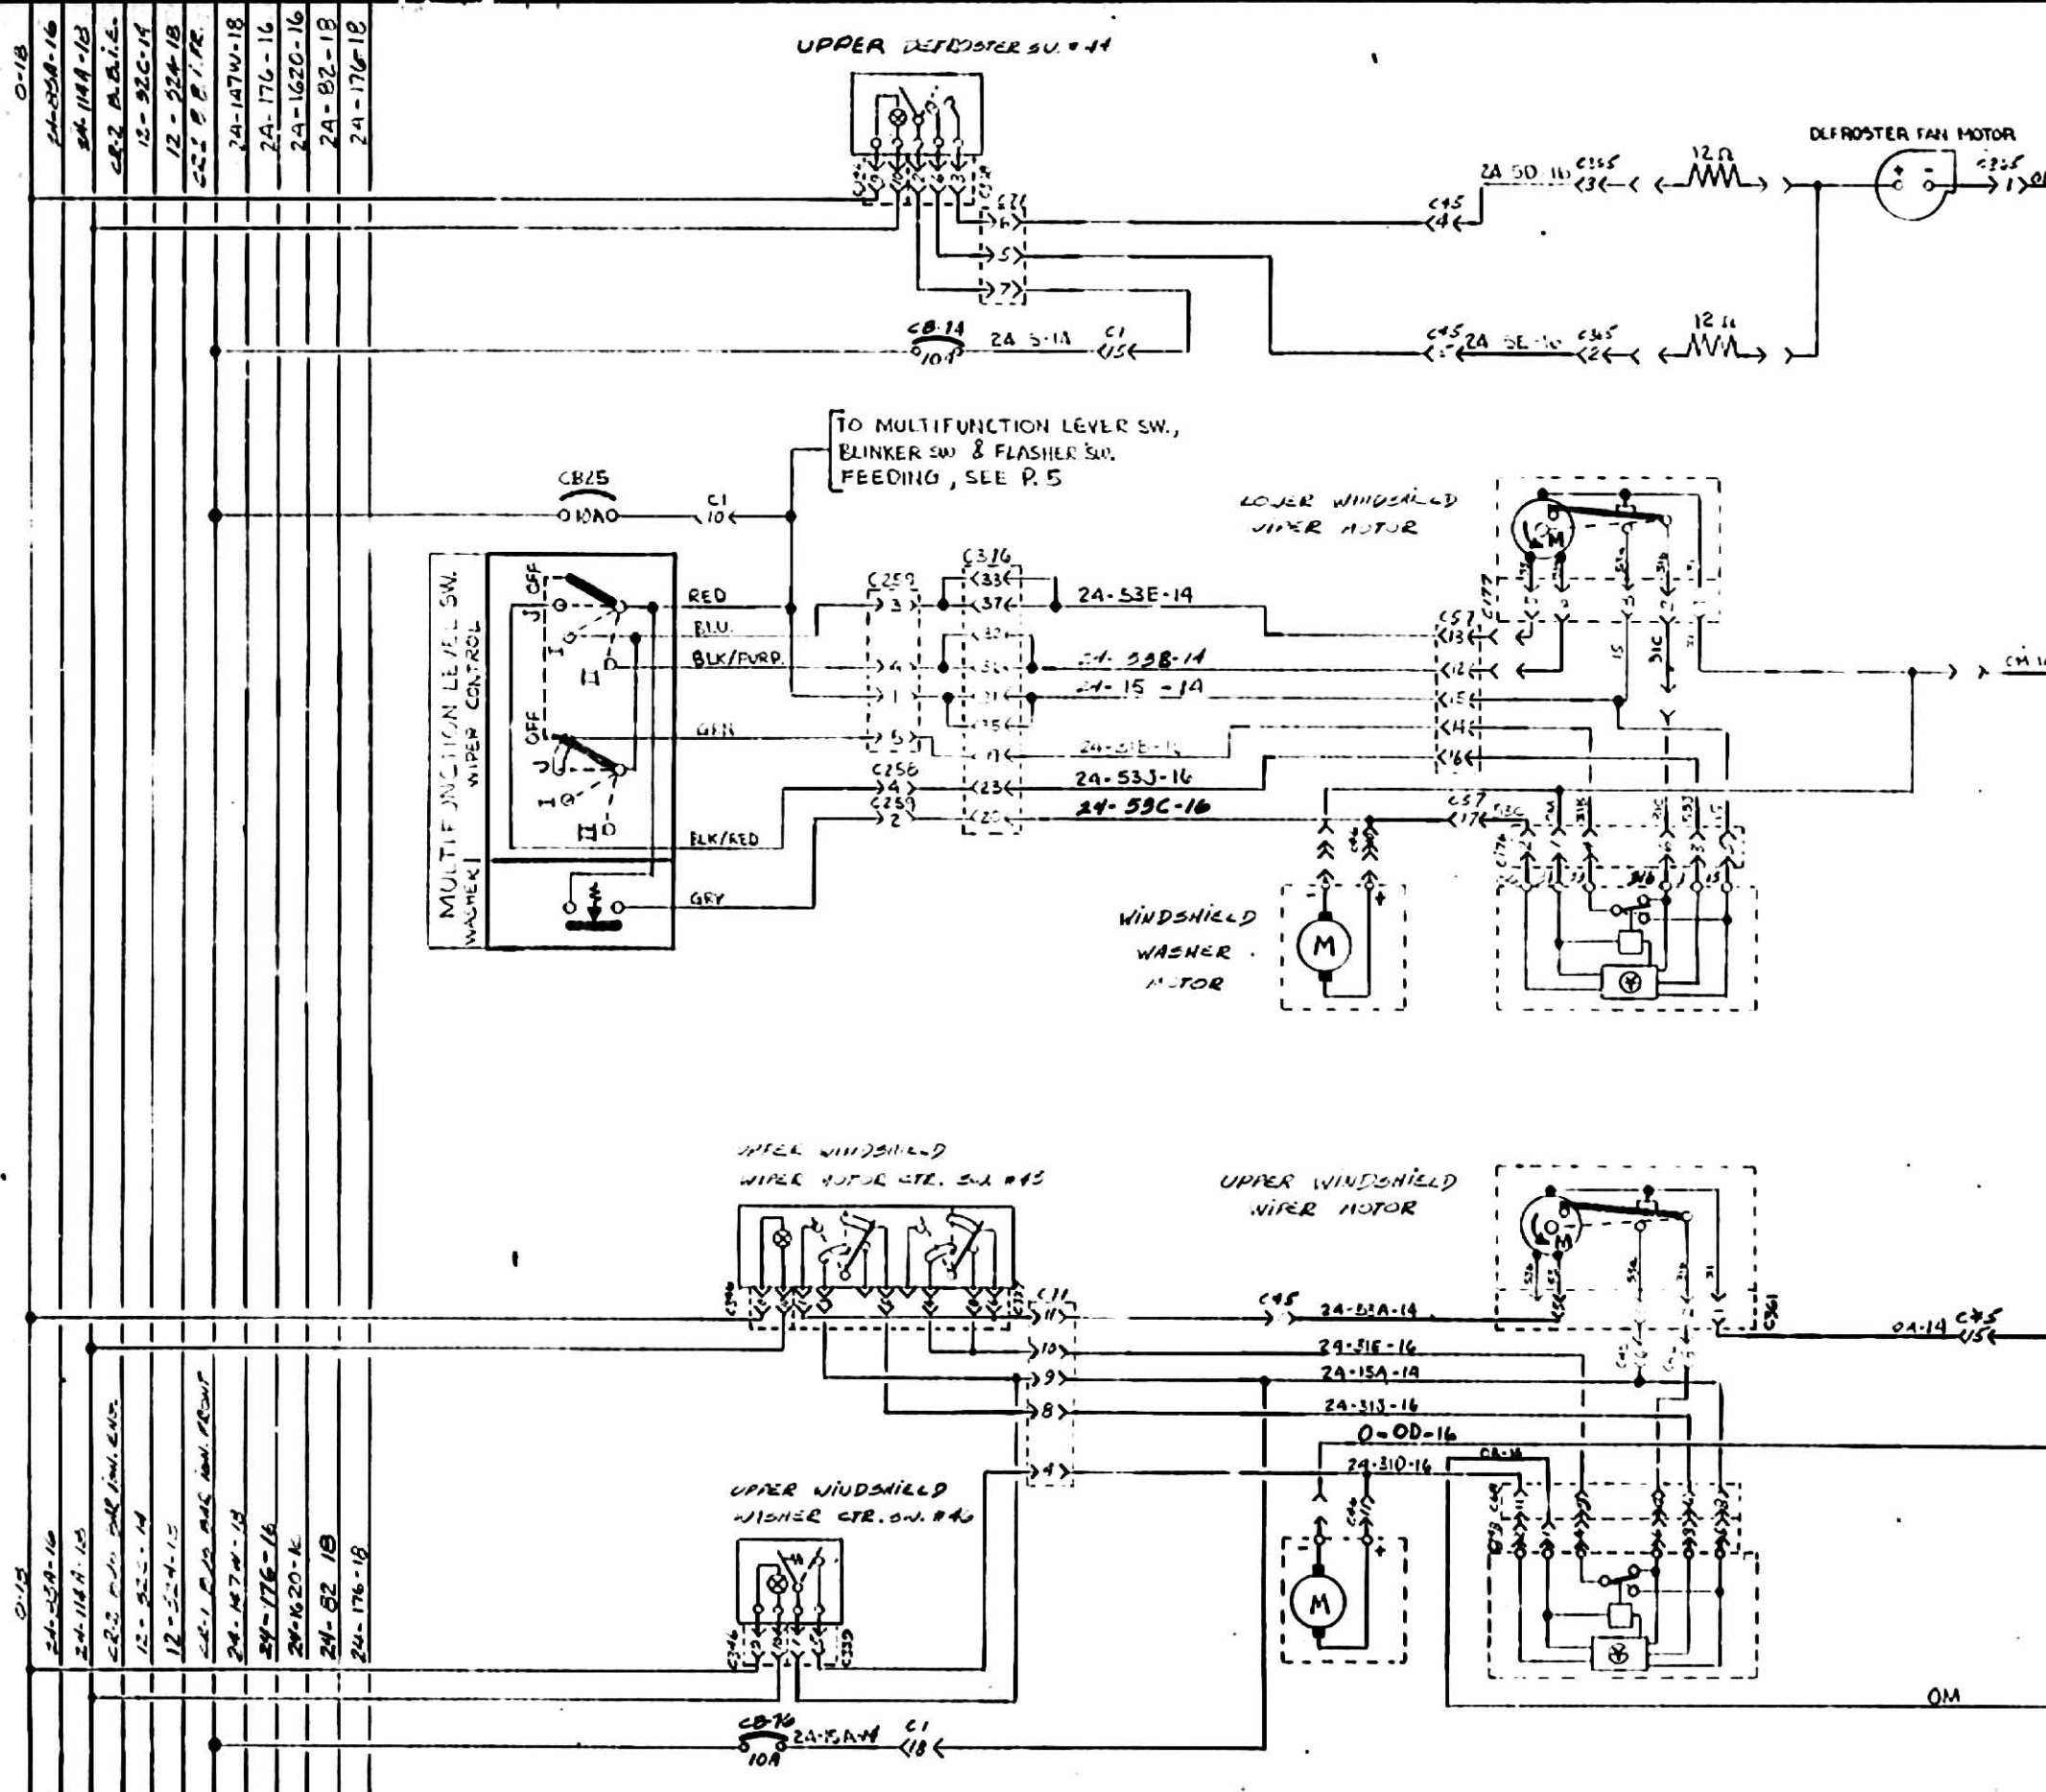

UPPER WINDSHIELD DEFROST

LOWER WINDSHIELD WIPER & WASHER

UPPER WINDSHIELD WIPER & WASHER

DESC :

WIRING DIAGRAM

DESS: M/ DATE: 90-01


VER: K/

A 90/11 CB76 & CB25 EMT SUR 24V - 24V1 M/


APPL: EFF. W/ L027, L033...

REF: H5-60

NO: D-060732 7/24

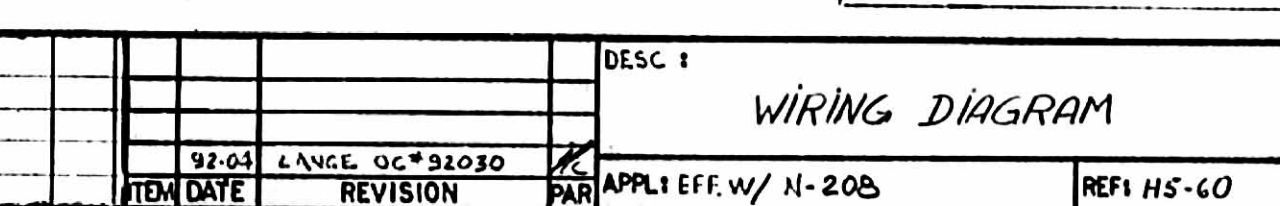[illegible]

DESS: <i>D.T.</i>	DATE- 92-04
VER.- <i>ke</i>	APPR.- <i>ke</i>
NO: D-060732 ^{20a} <i>6/10</i>	

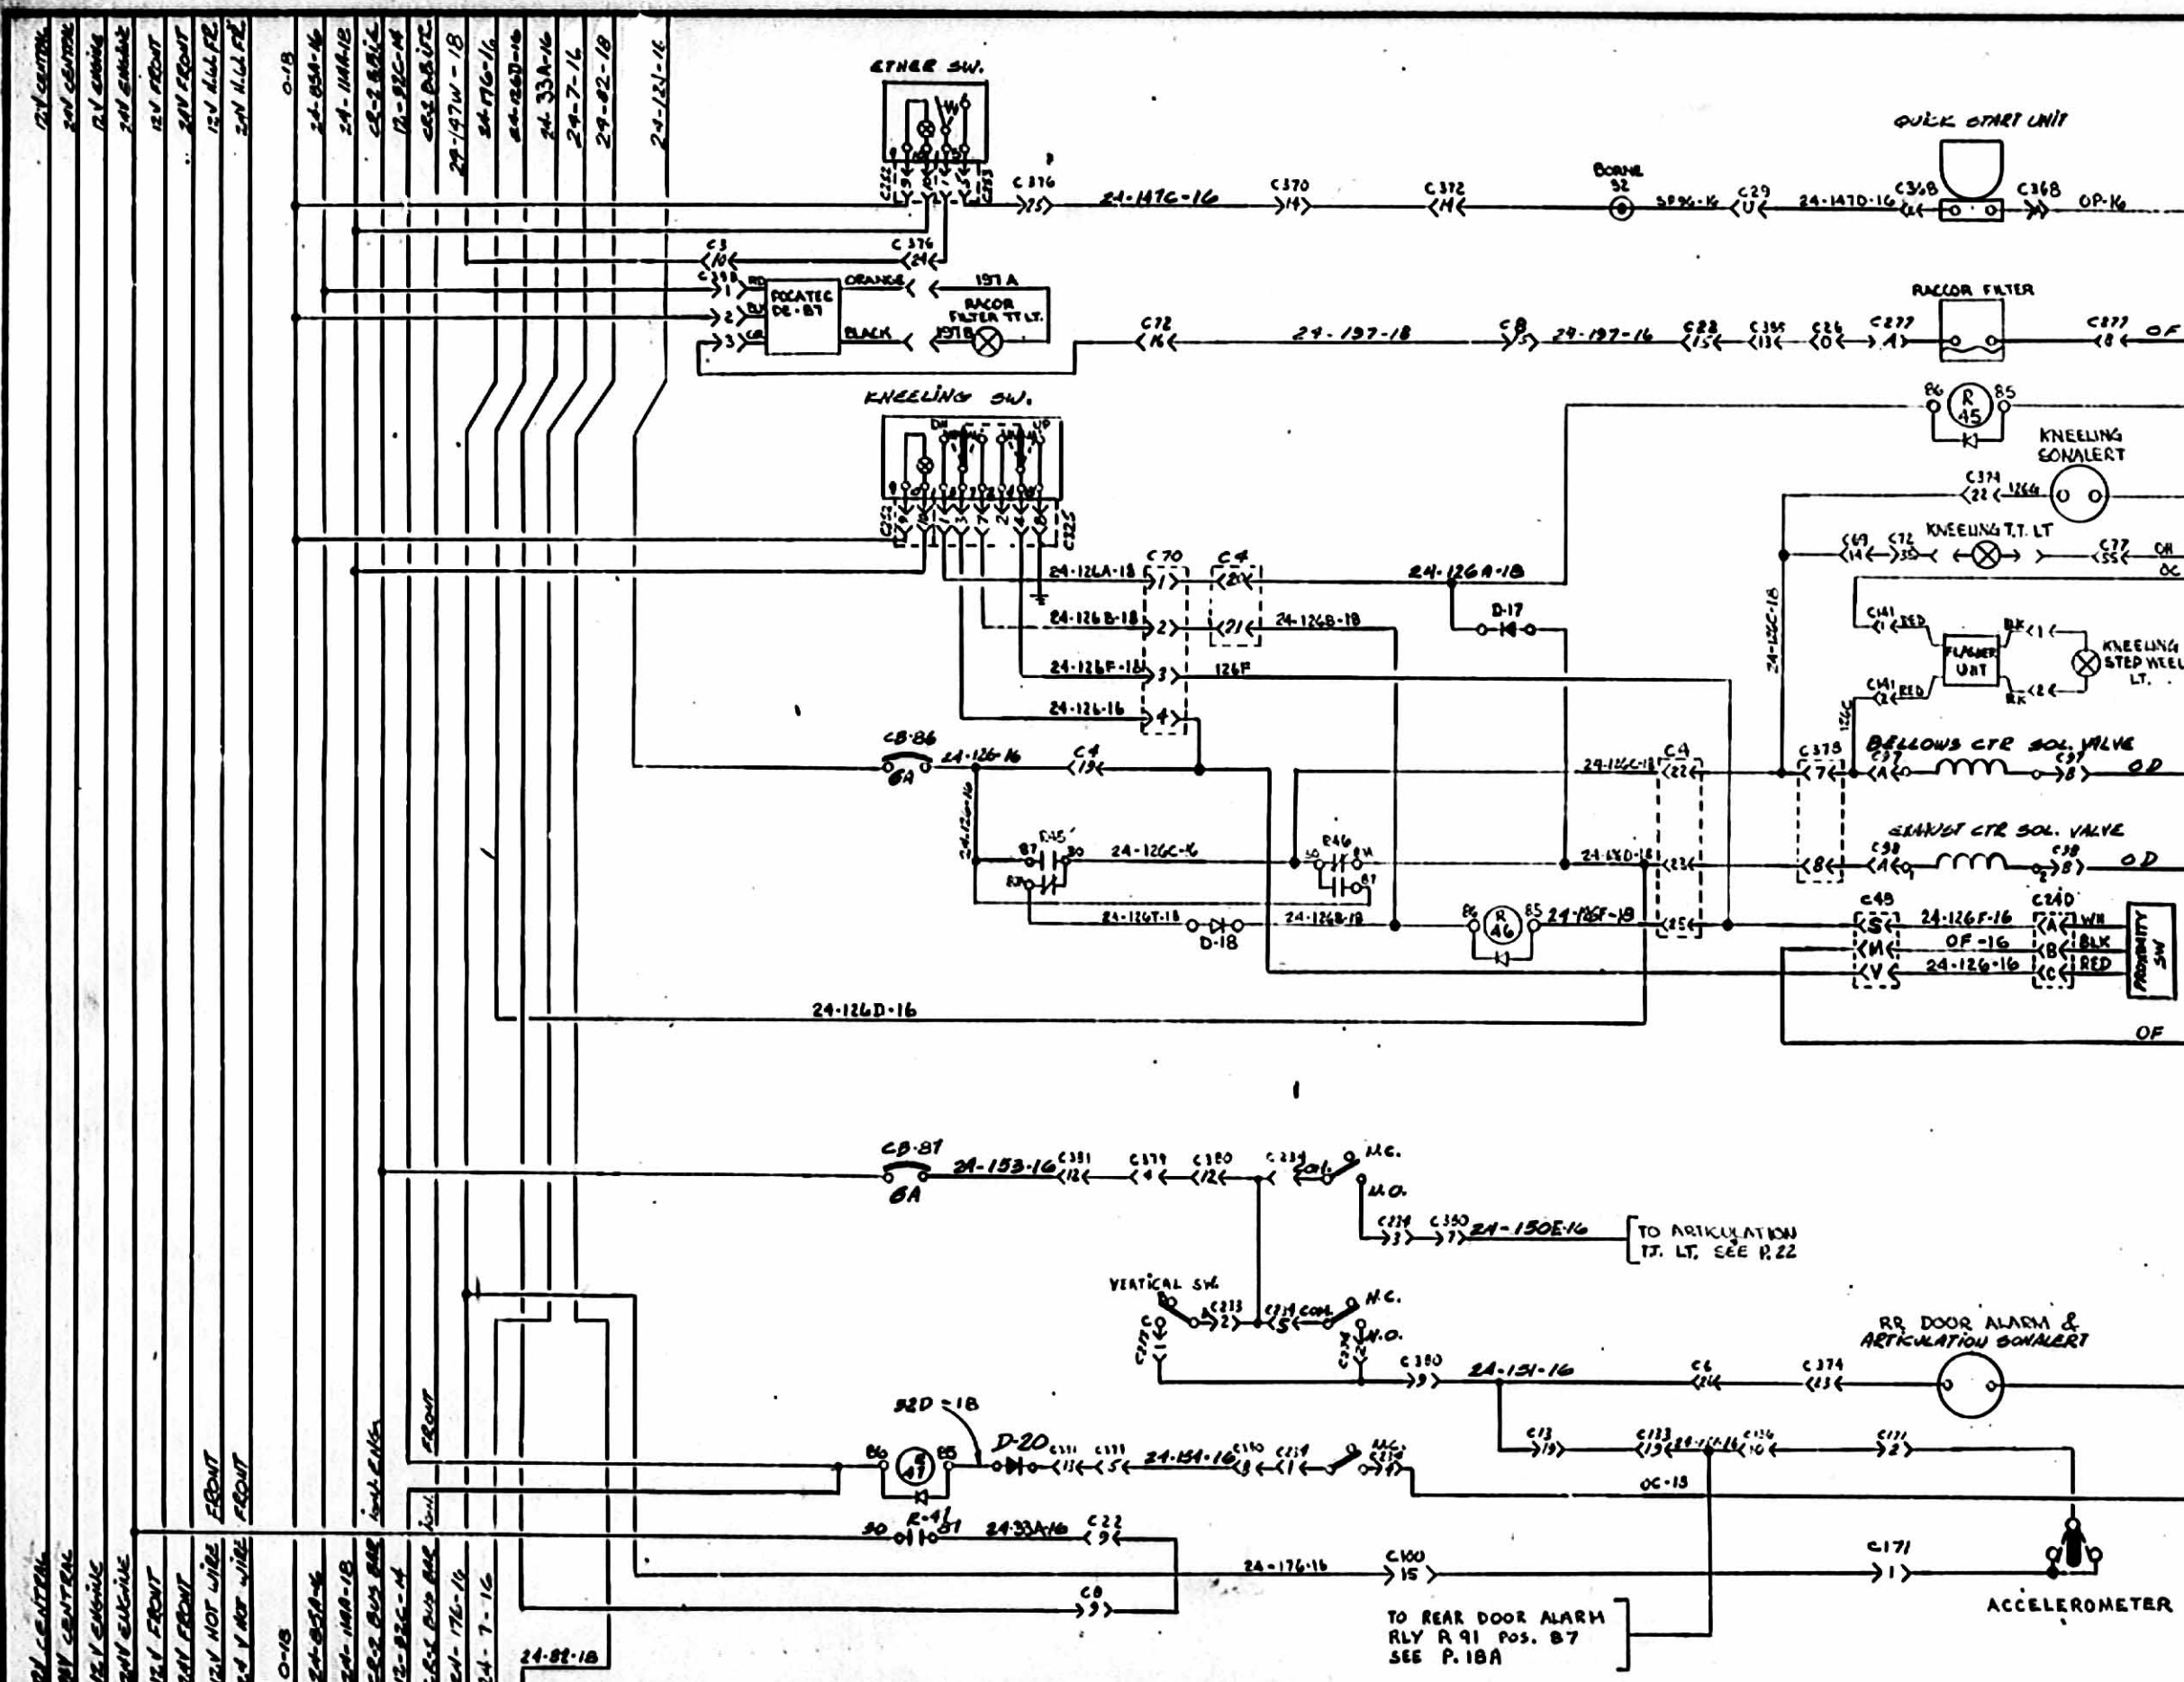

QUICK START

FUEL WATER
FILTER

KNEELING

ARTICULATION
SWITCH

ACCELEROMETER

DESC :

WIRING DIAGRAM

DESS: D.V. DATE: 90-08


VER: APPR:

DATE: 9/08 LMXE EFF. 00000153


APPL: EFF. W/M110

REF: H5-60

NO: D-060732 P.21a C

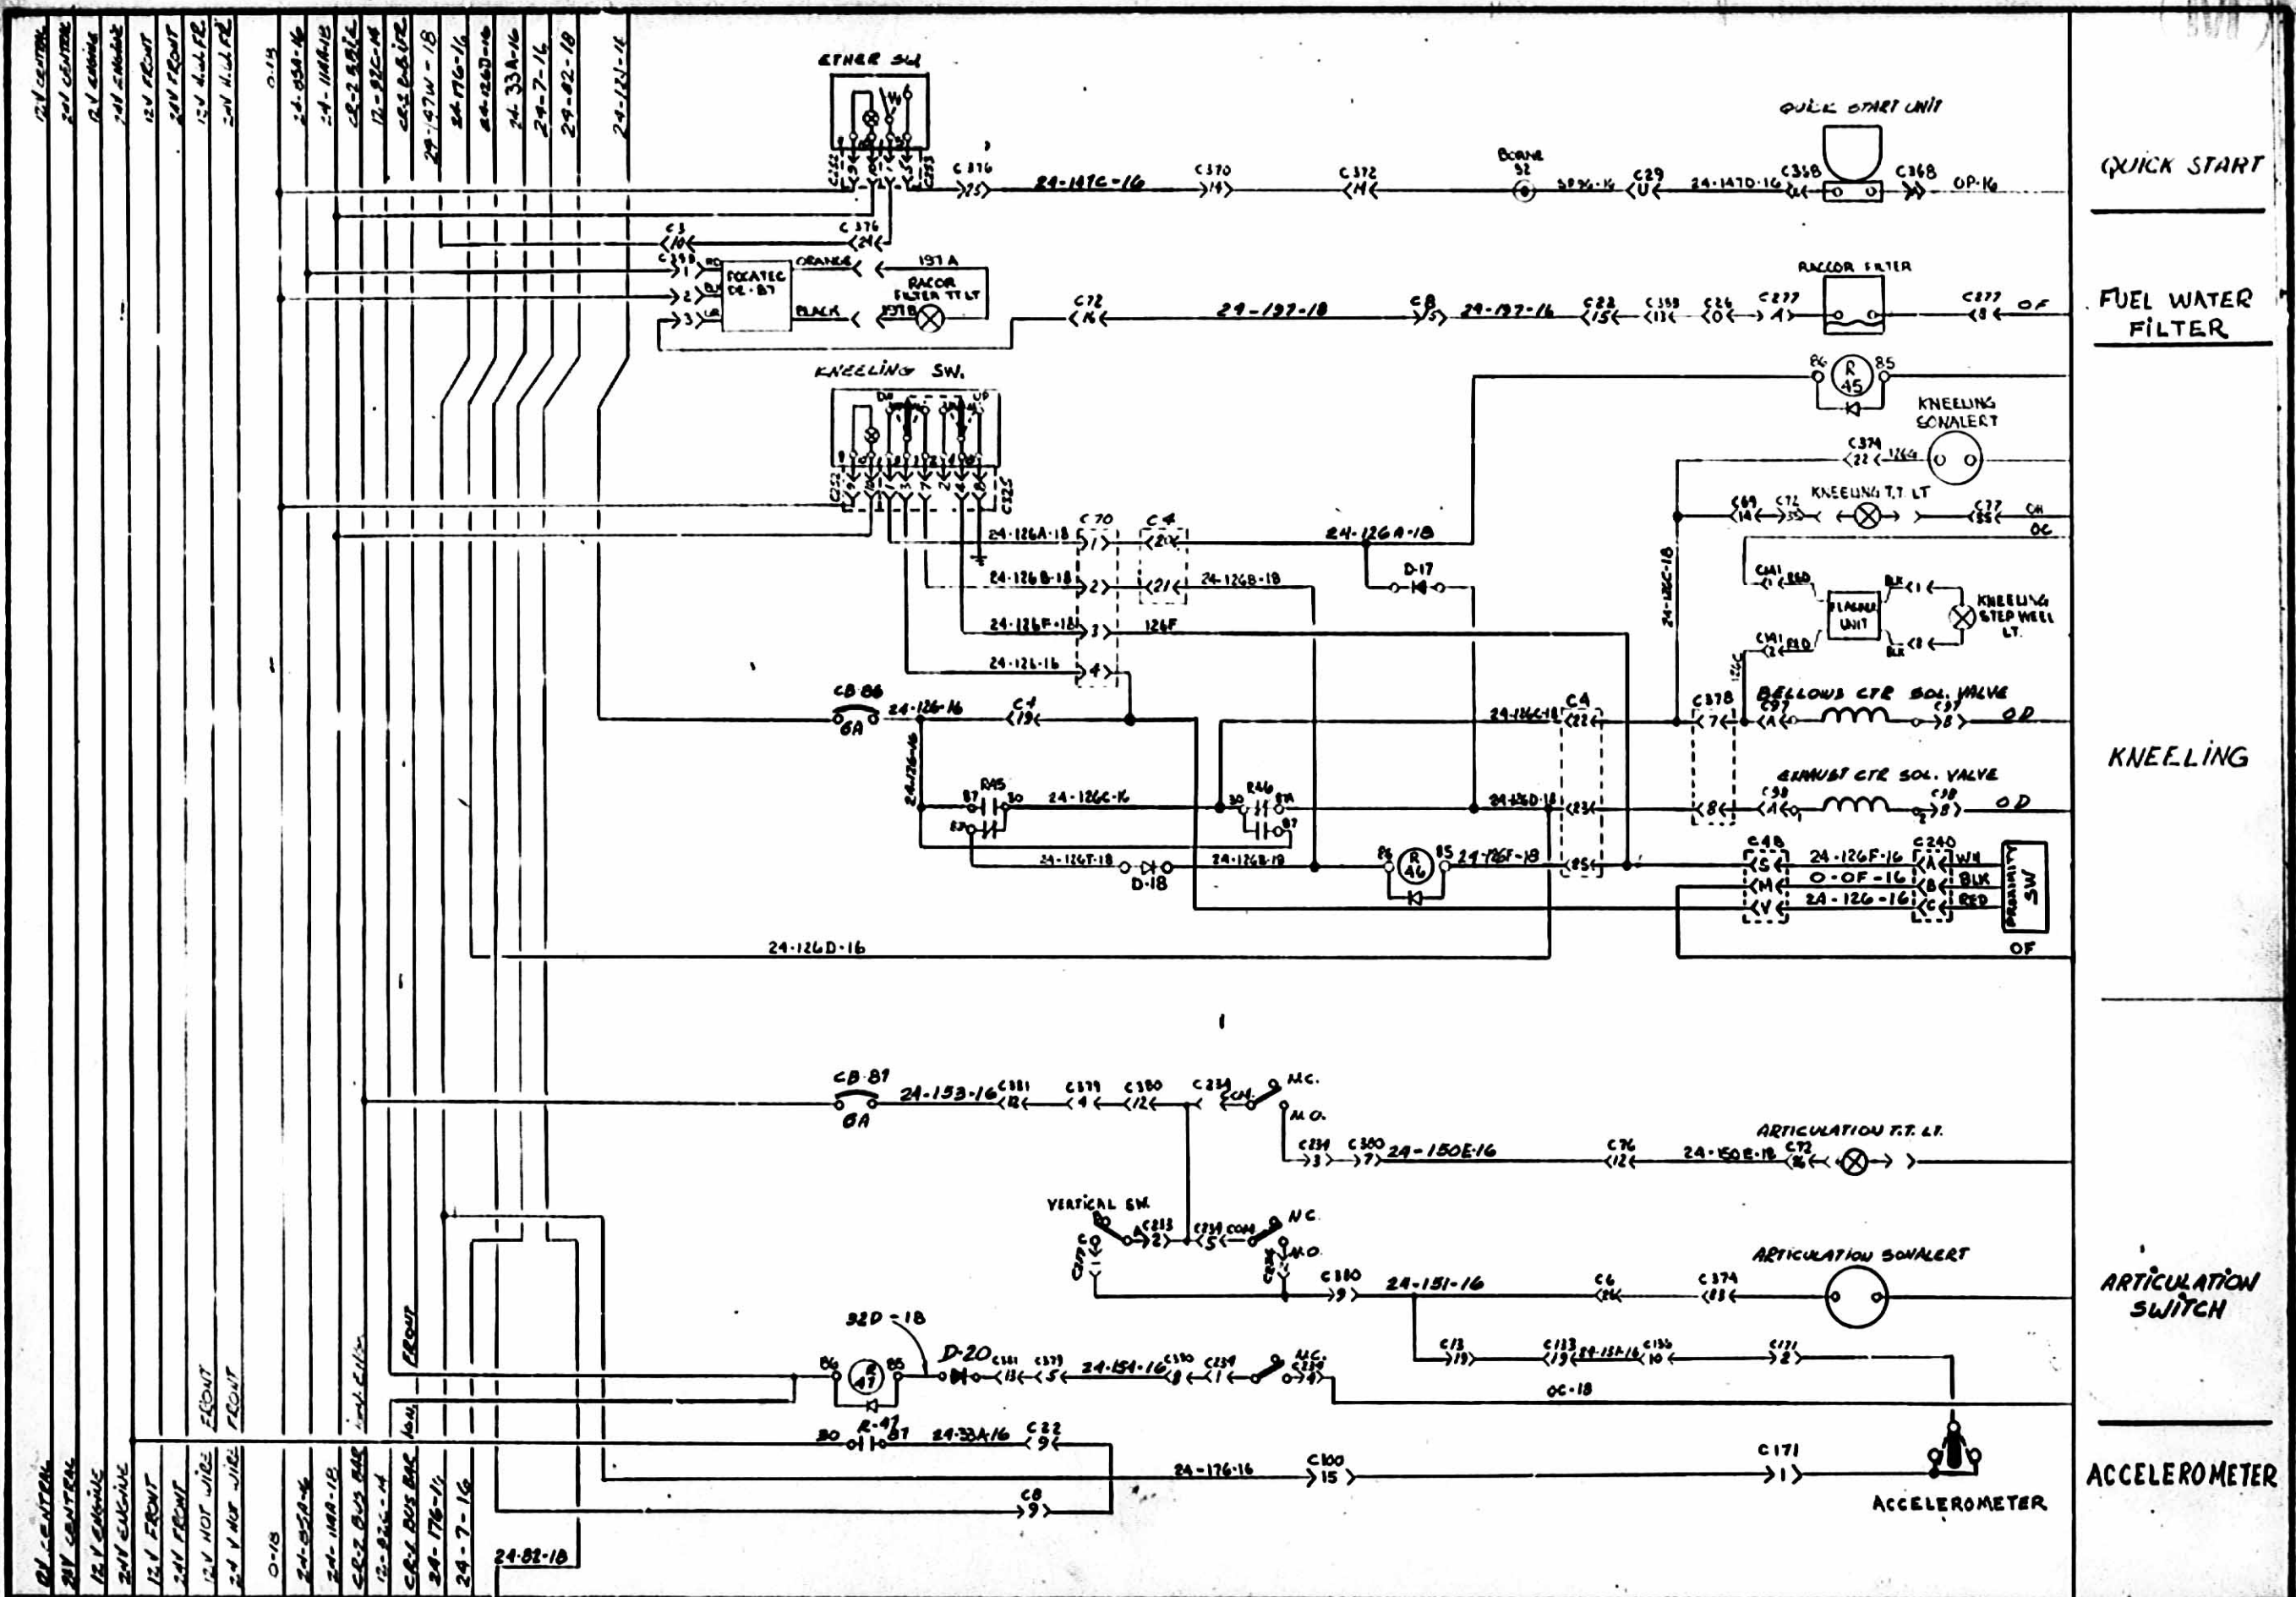

DESC :				WIRING DIAGRAM				DESS: M	DATE- 90-01
B 90/11				PRIOR O.C. # 90159				VER.- K	APPR.-
A 20/06				MISE D JOUR					
ITEM	DATE	REVISION		PAR	APPL: EFF. W/ L-033... PRIOR TO M109 REF: H5-60				NO: D-060732 P.21 C

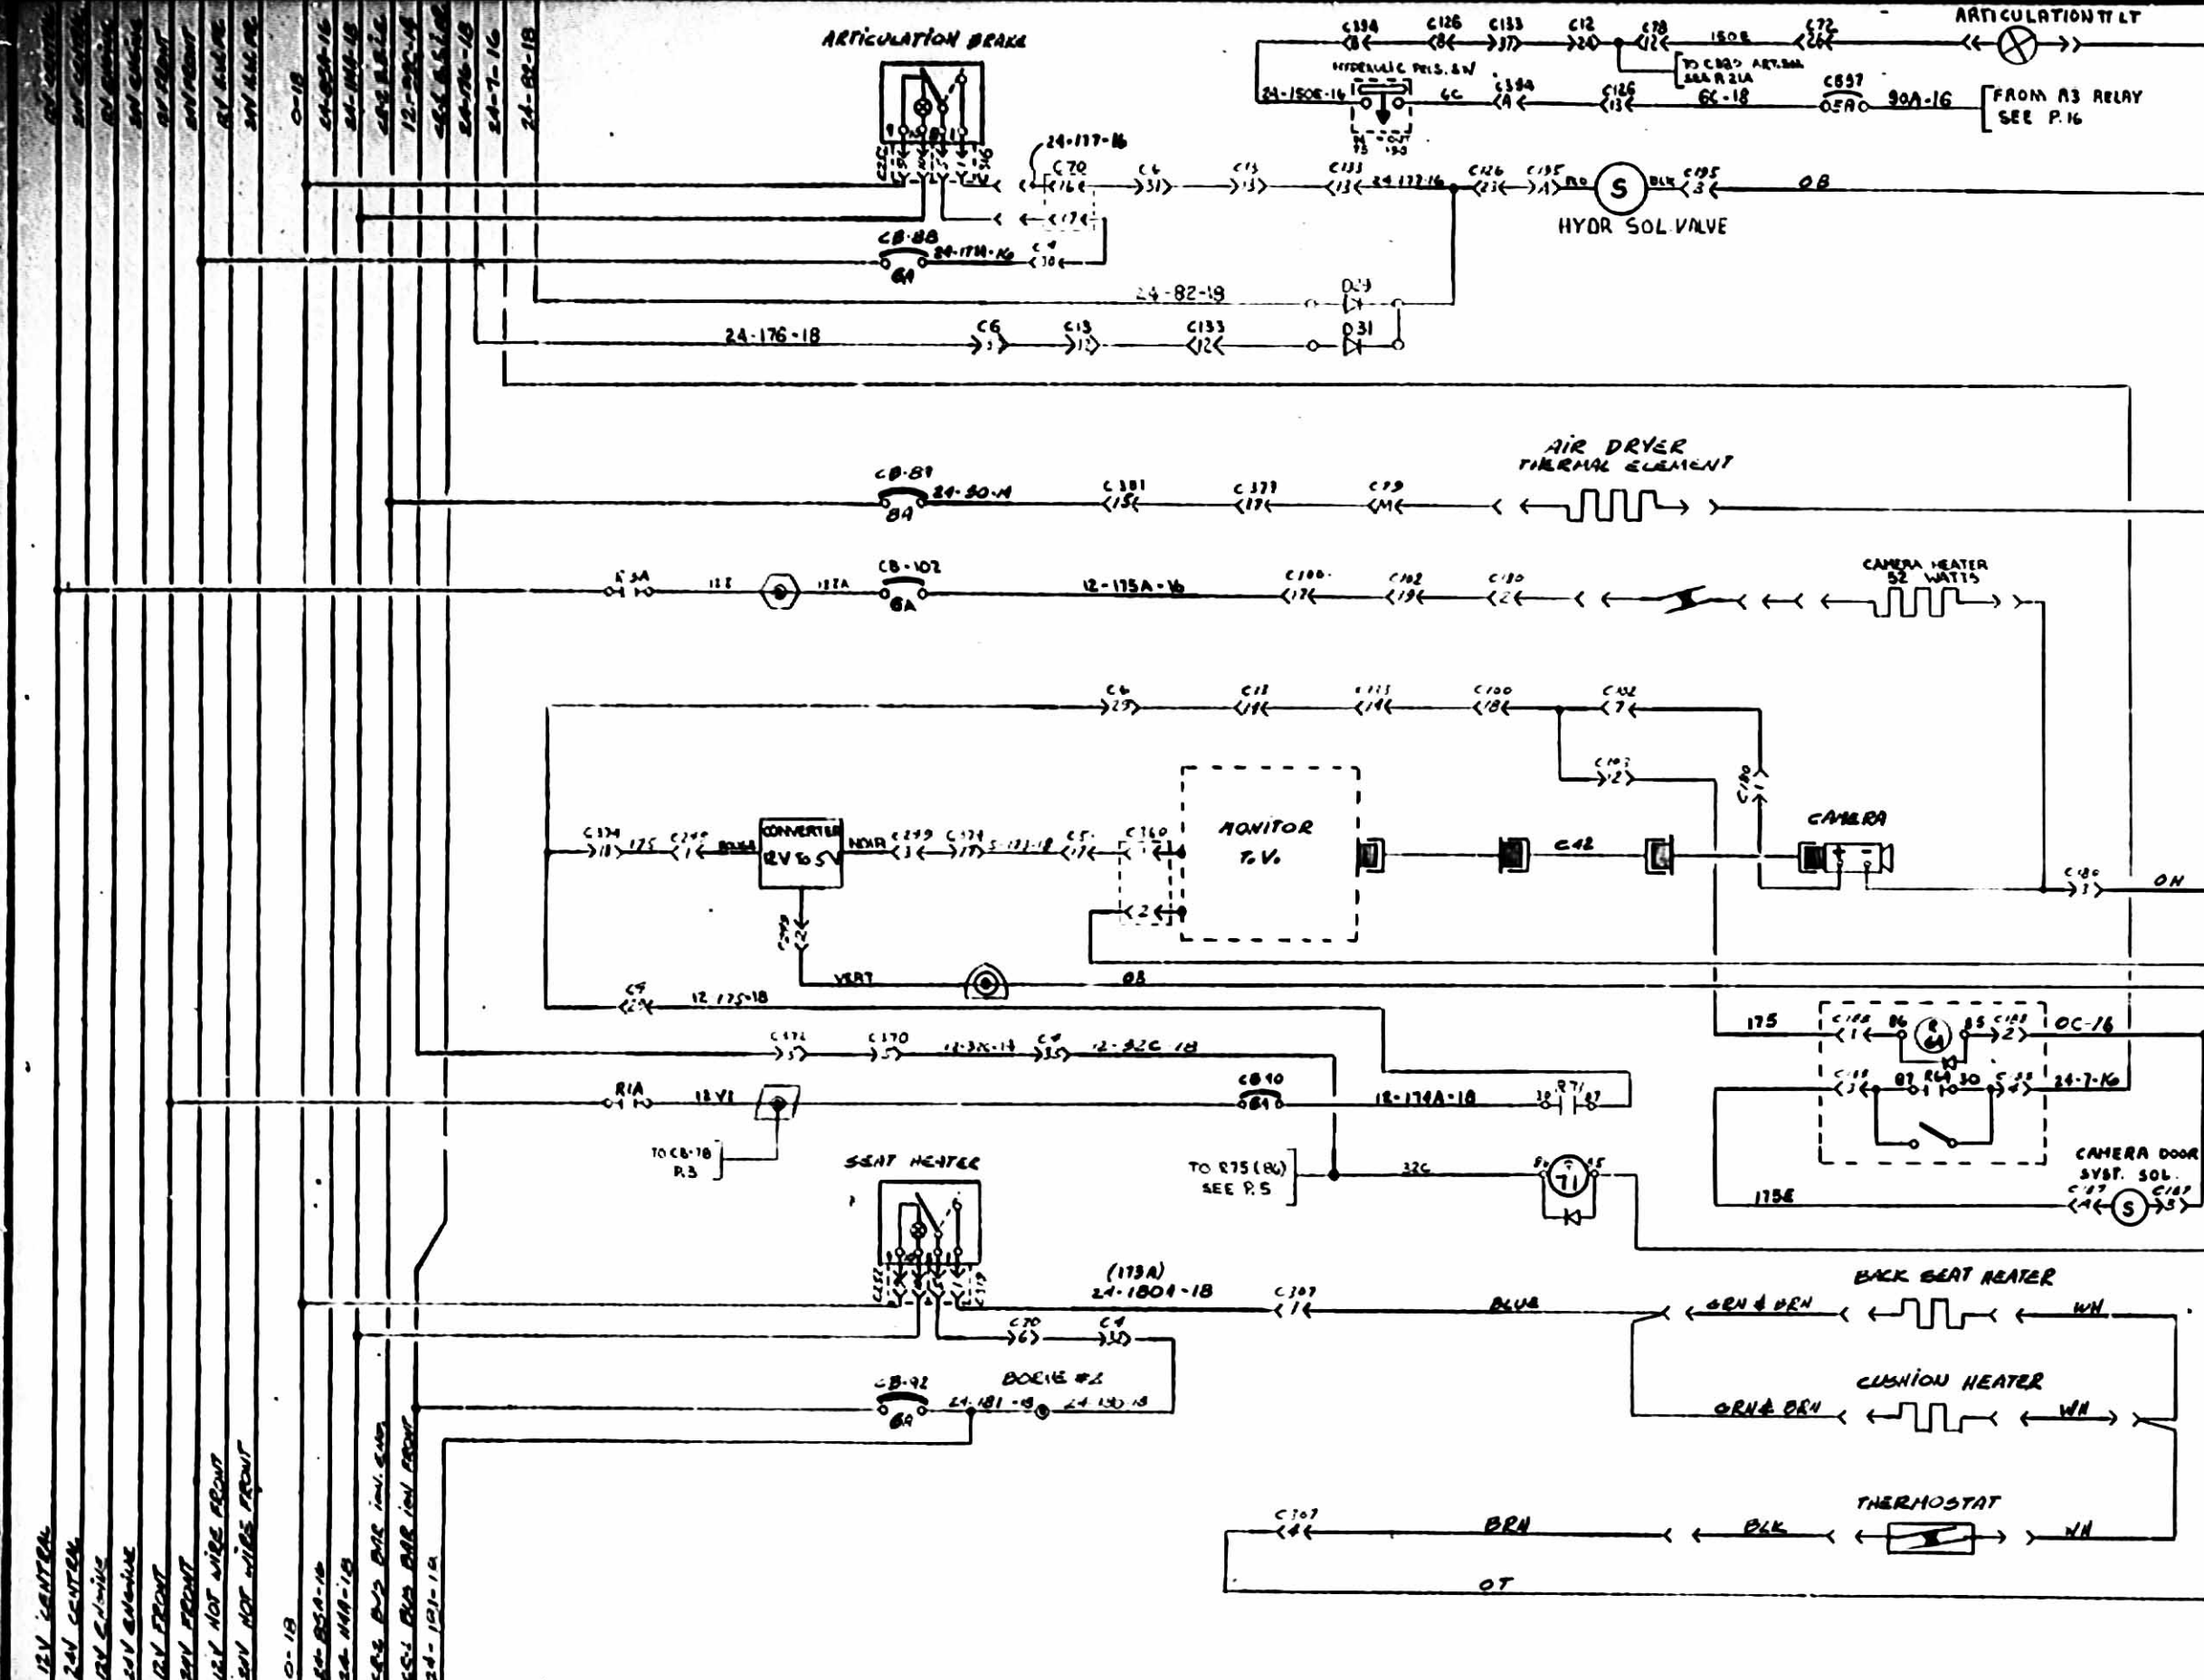


ARTICULATION
BRAKE

AIR DRYER

BACK-UP
MONITOR

DRIVER'S
SEAT HEATER

DESC :				WIRING DIAGRAM		DESS: B.C	DATE: 90-01
VER. -				APPR. -		VER. -	APPR. -
APPL: W/L-027				REF: H5-60		NO: D-060732 P.22	
REVISION				PAR		C	

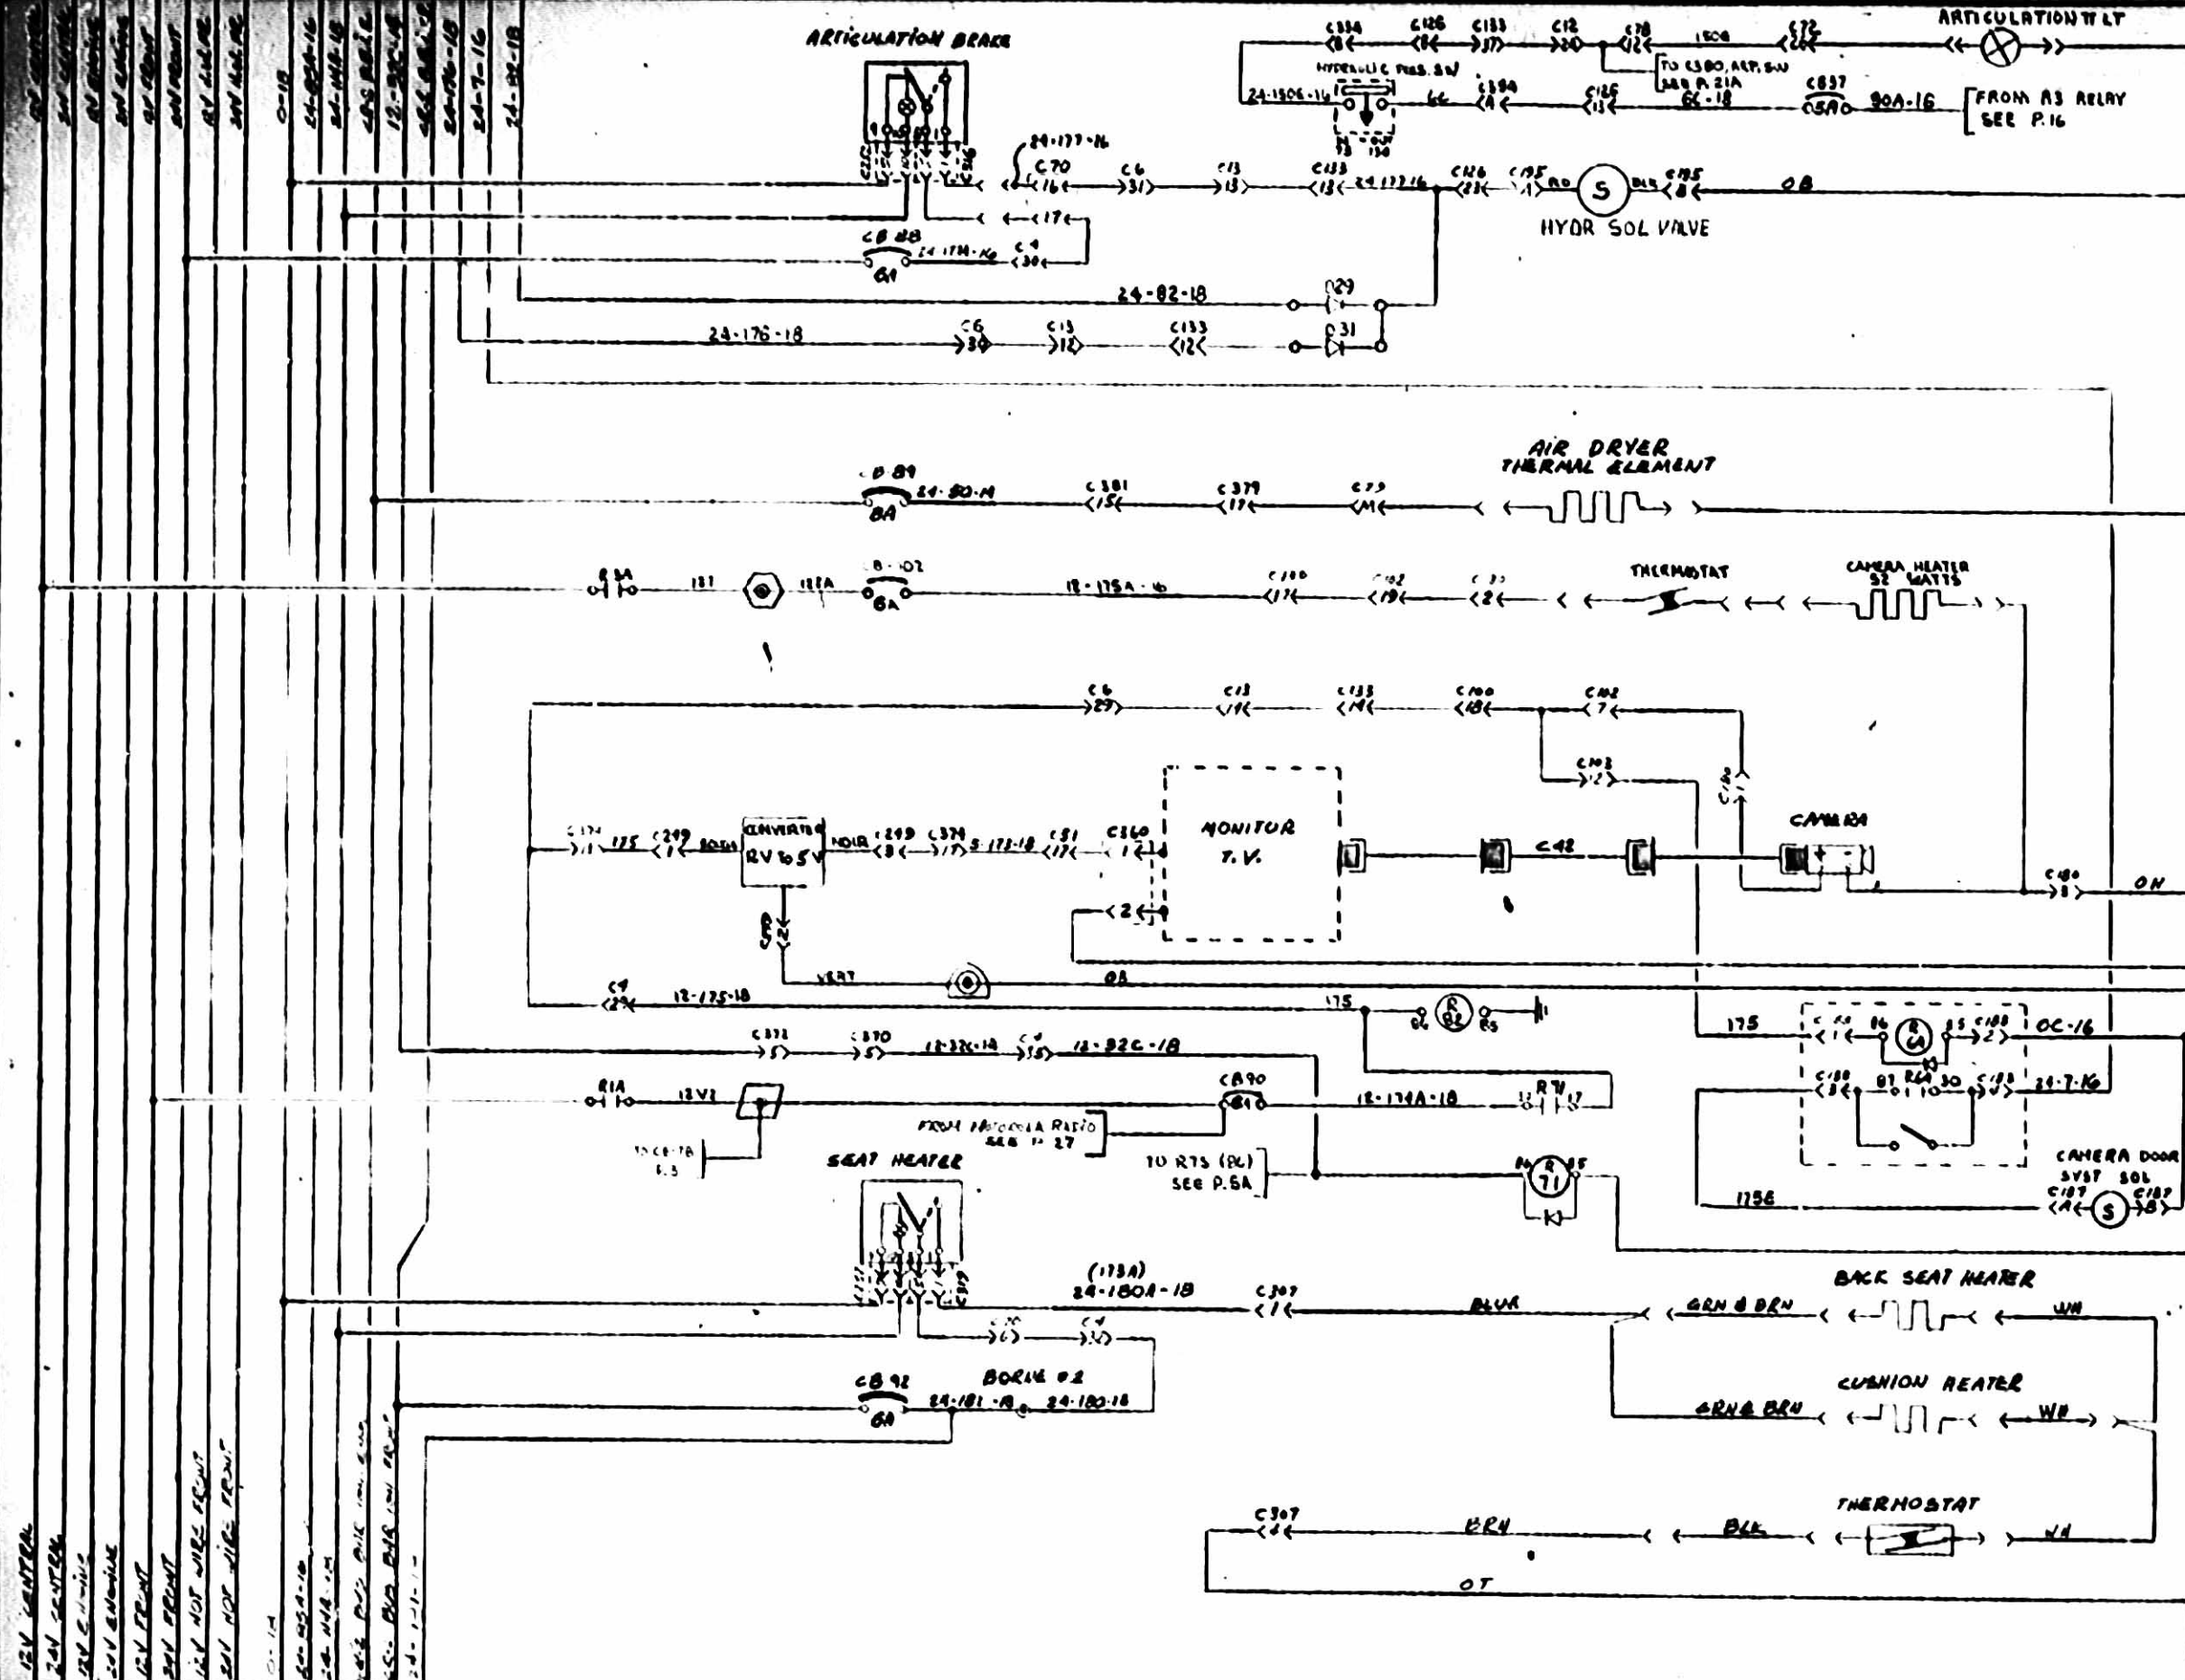


ARTICULATION
BRAKE

AIR DRYER


BACK-UP
MONITOR

DRIVER'S
SEAT HEATER

DESC 1		DESS1 M1	DATE- 90-06
WIRING DIAGRAM		VER. - 10	APR- 10
APPL: W/ L-027, L-033, L-03A, L-035	REF: H5-60 "WESTOURS"	NOID-060732 P.22A C	
ITEM DATE	REVISION	PAR	
A 30-09	BREXER 6A EMT SA 00062		




				DESC :		DESS: S. G.		DATE: 97-02	
				WIRING DIAGRAM		VER. -		APPR. -	
				APPL: KIT SERVICE O.C. # 24079		REF: H5-60		NO: D-060732 R22B C	
				ITEM DATE		REVISION		PAR	

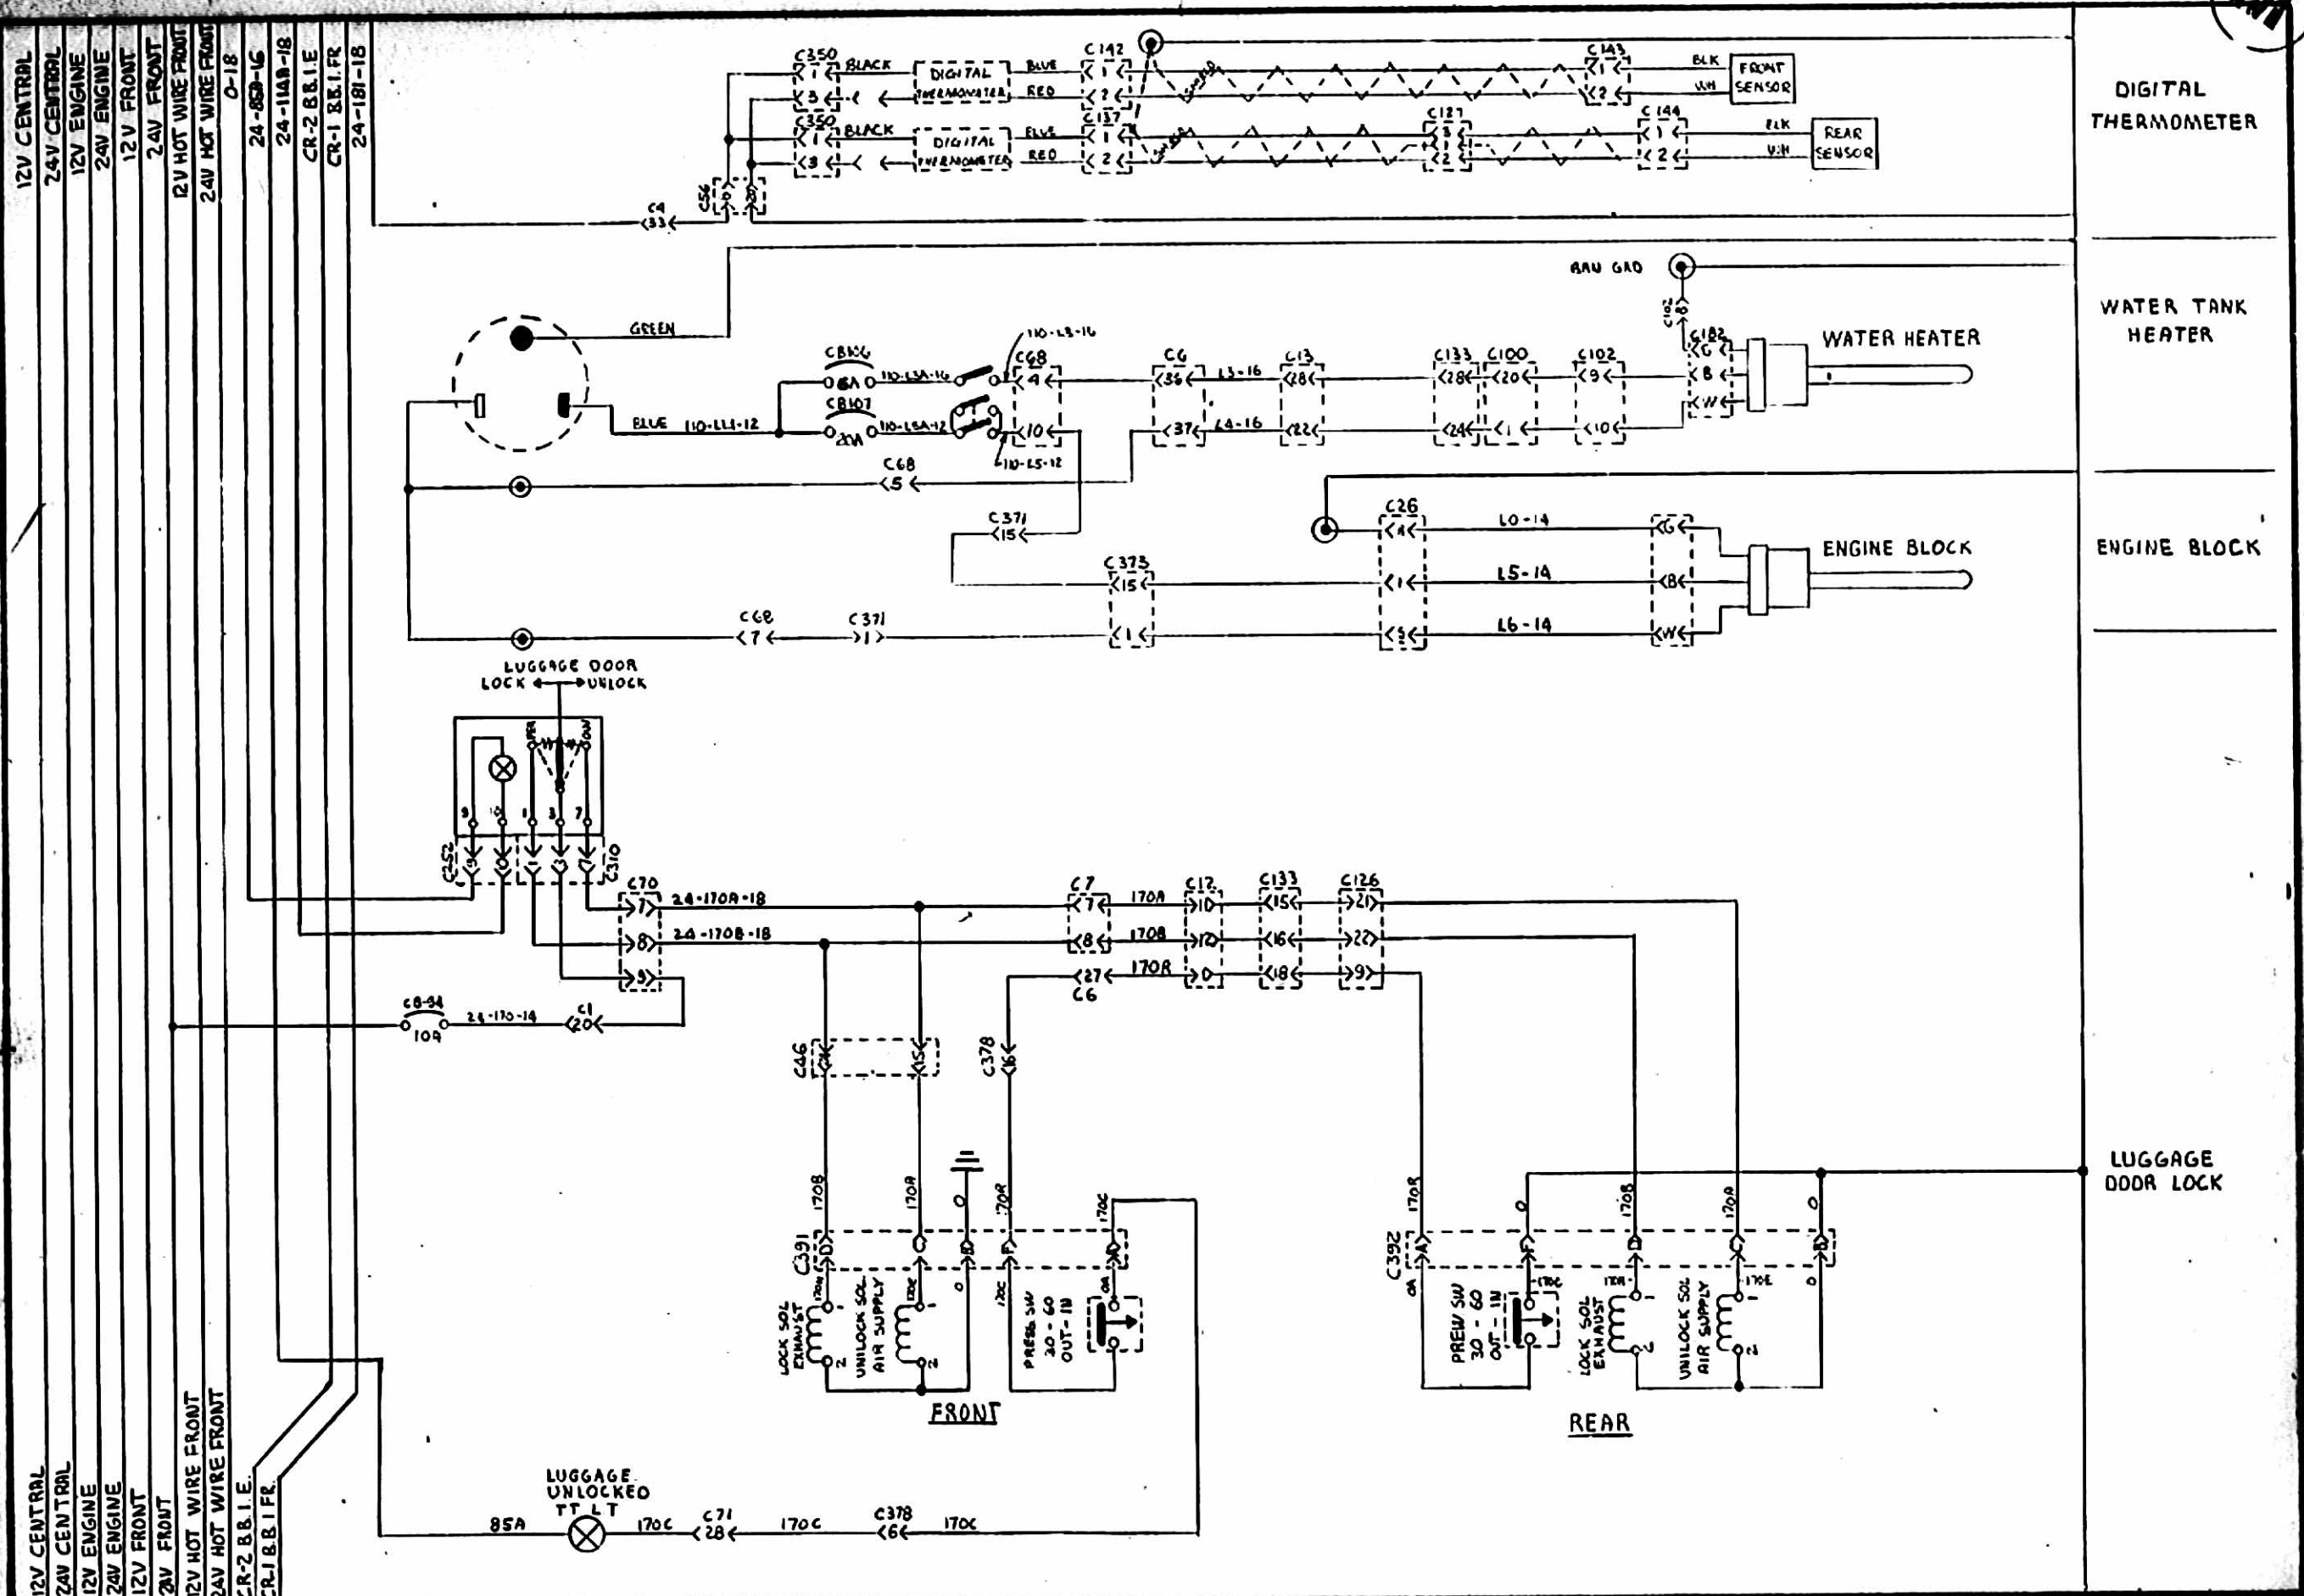

										DESCRIPTION: WIRING DIAGRAM.		DR.- B C		DATE- 90-05			
												CK.- 		APPR.- 			
										APPL: EFF. W/ L-027		REF: HS-60		NO: D-660732 R23		C	
										L-025...							


- | | |
|--------------------|---------------|
| 12V CENTRAL | 12V CENTRAL |
| 24V CENTRAL | 24V CENTRAL |
| 12V ENGINE | 12V ENGINE |
| 24V ENGINE | 24V ENGINE |
| 12V FRONT | 12V FRONT |
| 24V FRONT | 24V FRONT |
| 12V HOT WIRE FRONT | 12V H.W.FR. |
| 24V HOT WIRE FR. | 24V H.W. FR. |
| CR-2 BUS BAR | CR-2 B.B. 1/2 |
| CR-1 BUS BAR | CR-1 B.B. 1/2 |

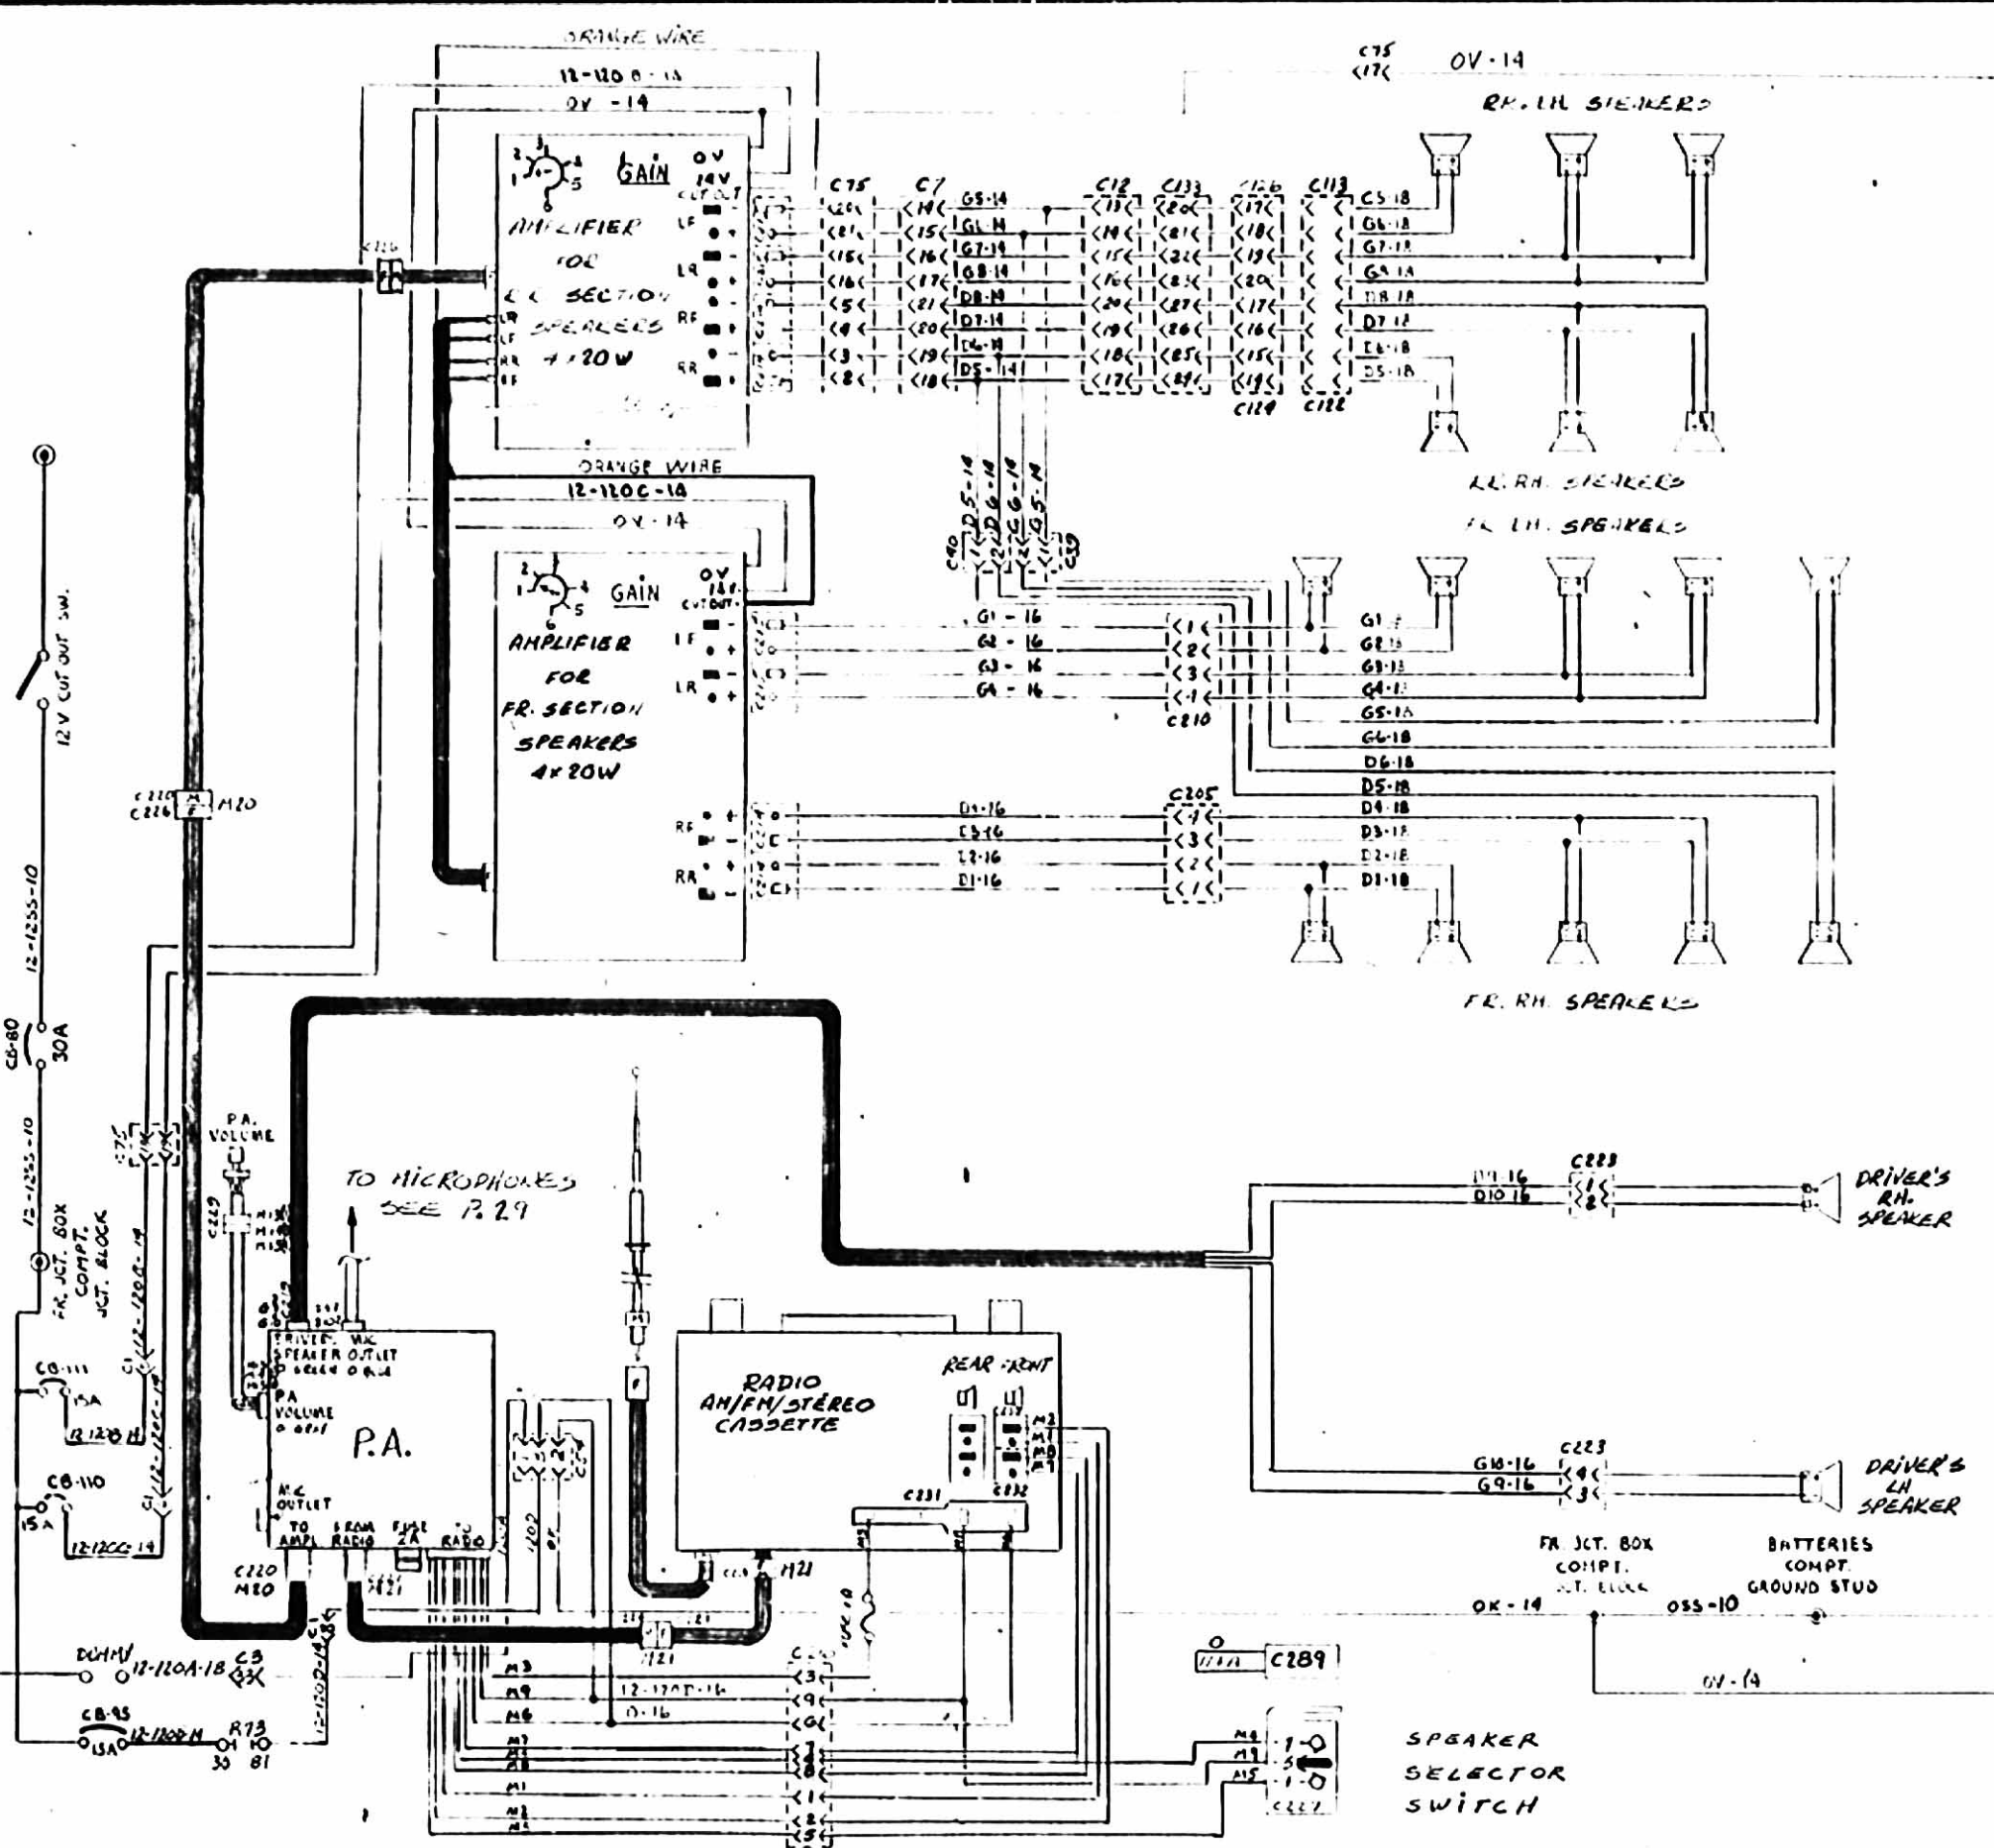

SOUND
SYSTEM

EATON
NUGGET


[illegible]



DESC: WIRING DIAGRAM		DESS: AB	DATE: 90-01
		VER: KC	APPR: ✓
APPL: TEFF.	REF: HS-60	NO: D-060732	P24 C

12V CENTRAL
24V CENTRAL
12V ENGINE
24V ENGINE
12V FRONT
24V FRONT
12V HOT WIRE FRONT
24V HOT WIRE FRONT
CR-2 BUS BAR IGN. ENGINE
CR-1 BUS BAR IGN. FRONT


12V CENTRAL
24V CENTRAL
12V ENGINE
24V ENGINE
12V FRONT
24V FRONT
12V HOT WIRE FRONT
24V HOT WIRE FRONT
CR-2 BUS BAR IGN. ENGINE
CR-1 BUS BAR IGN. FRONT

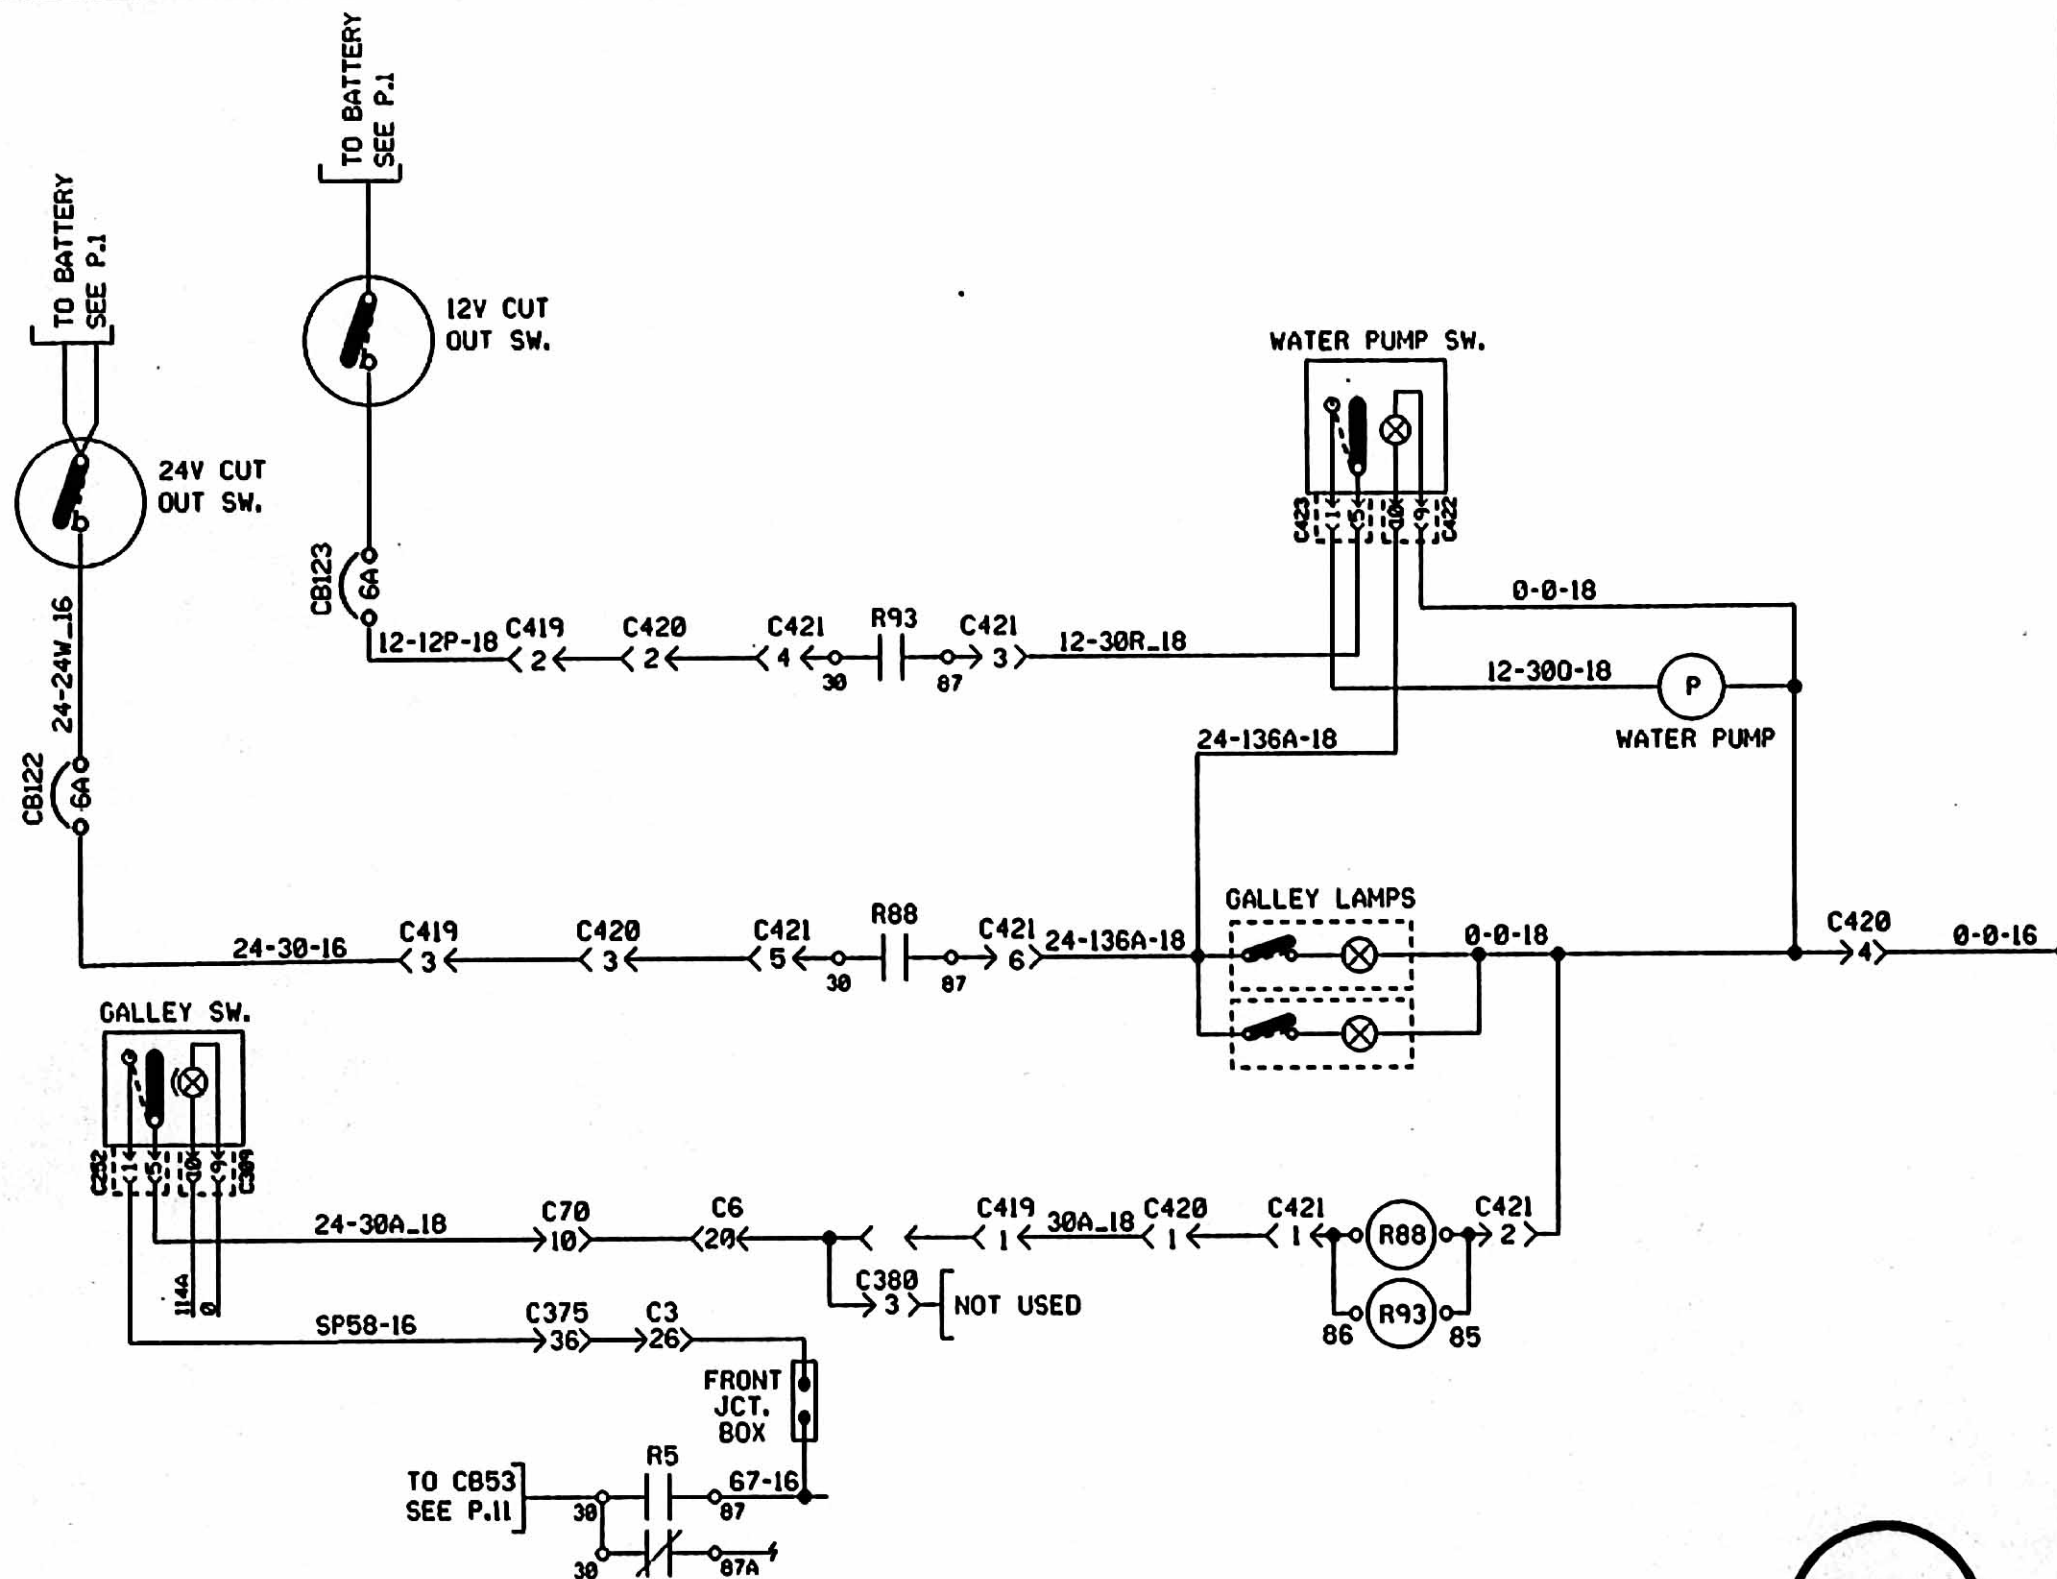


OPTION
GALLEY
W/O
HEAT
CONTAINER



										DESCRIPTION	WIRING DIAGRAM	PREVOST CAR inc.
										REF	H5-60 WESTOURS	dr. HMF date. 92/01 ck. oppr. 11/11
										EFF. W/ OC	prior to/ oc	
										EFF. W/ VEH.	N200.211.214 prior to/ veh.	NO: D060732 p. 26A
no	date	revision	per	no	date	revision	per	no	date	revision	per	

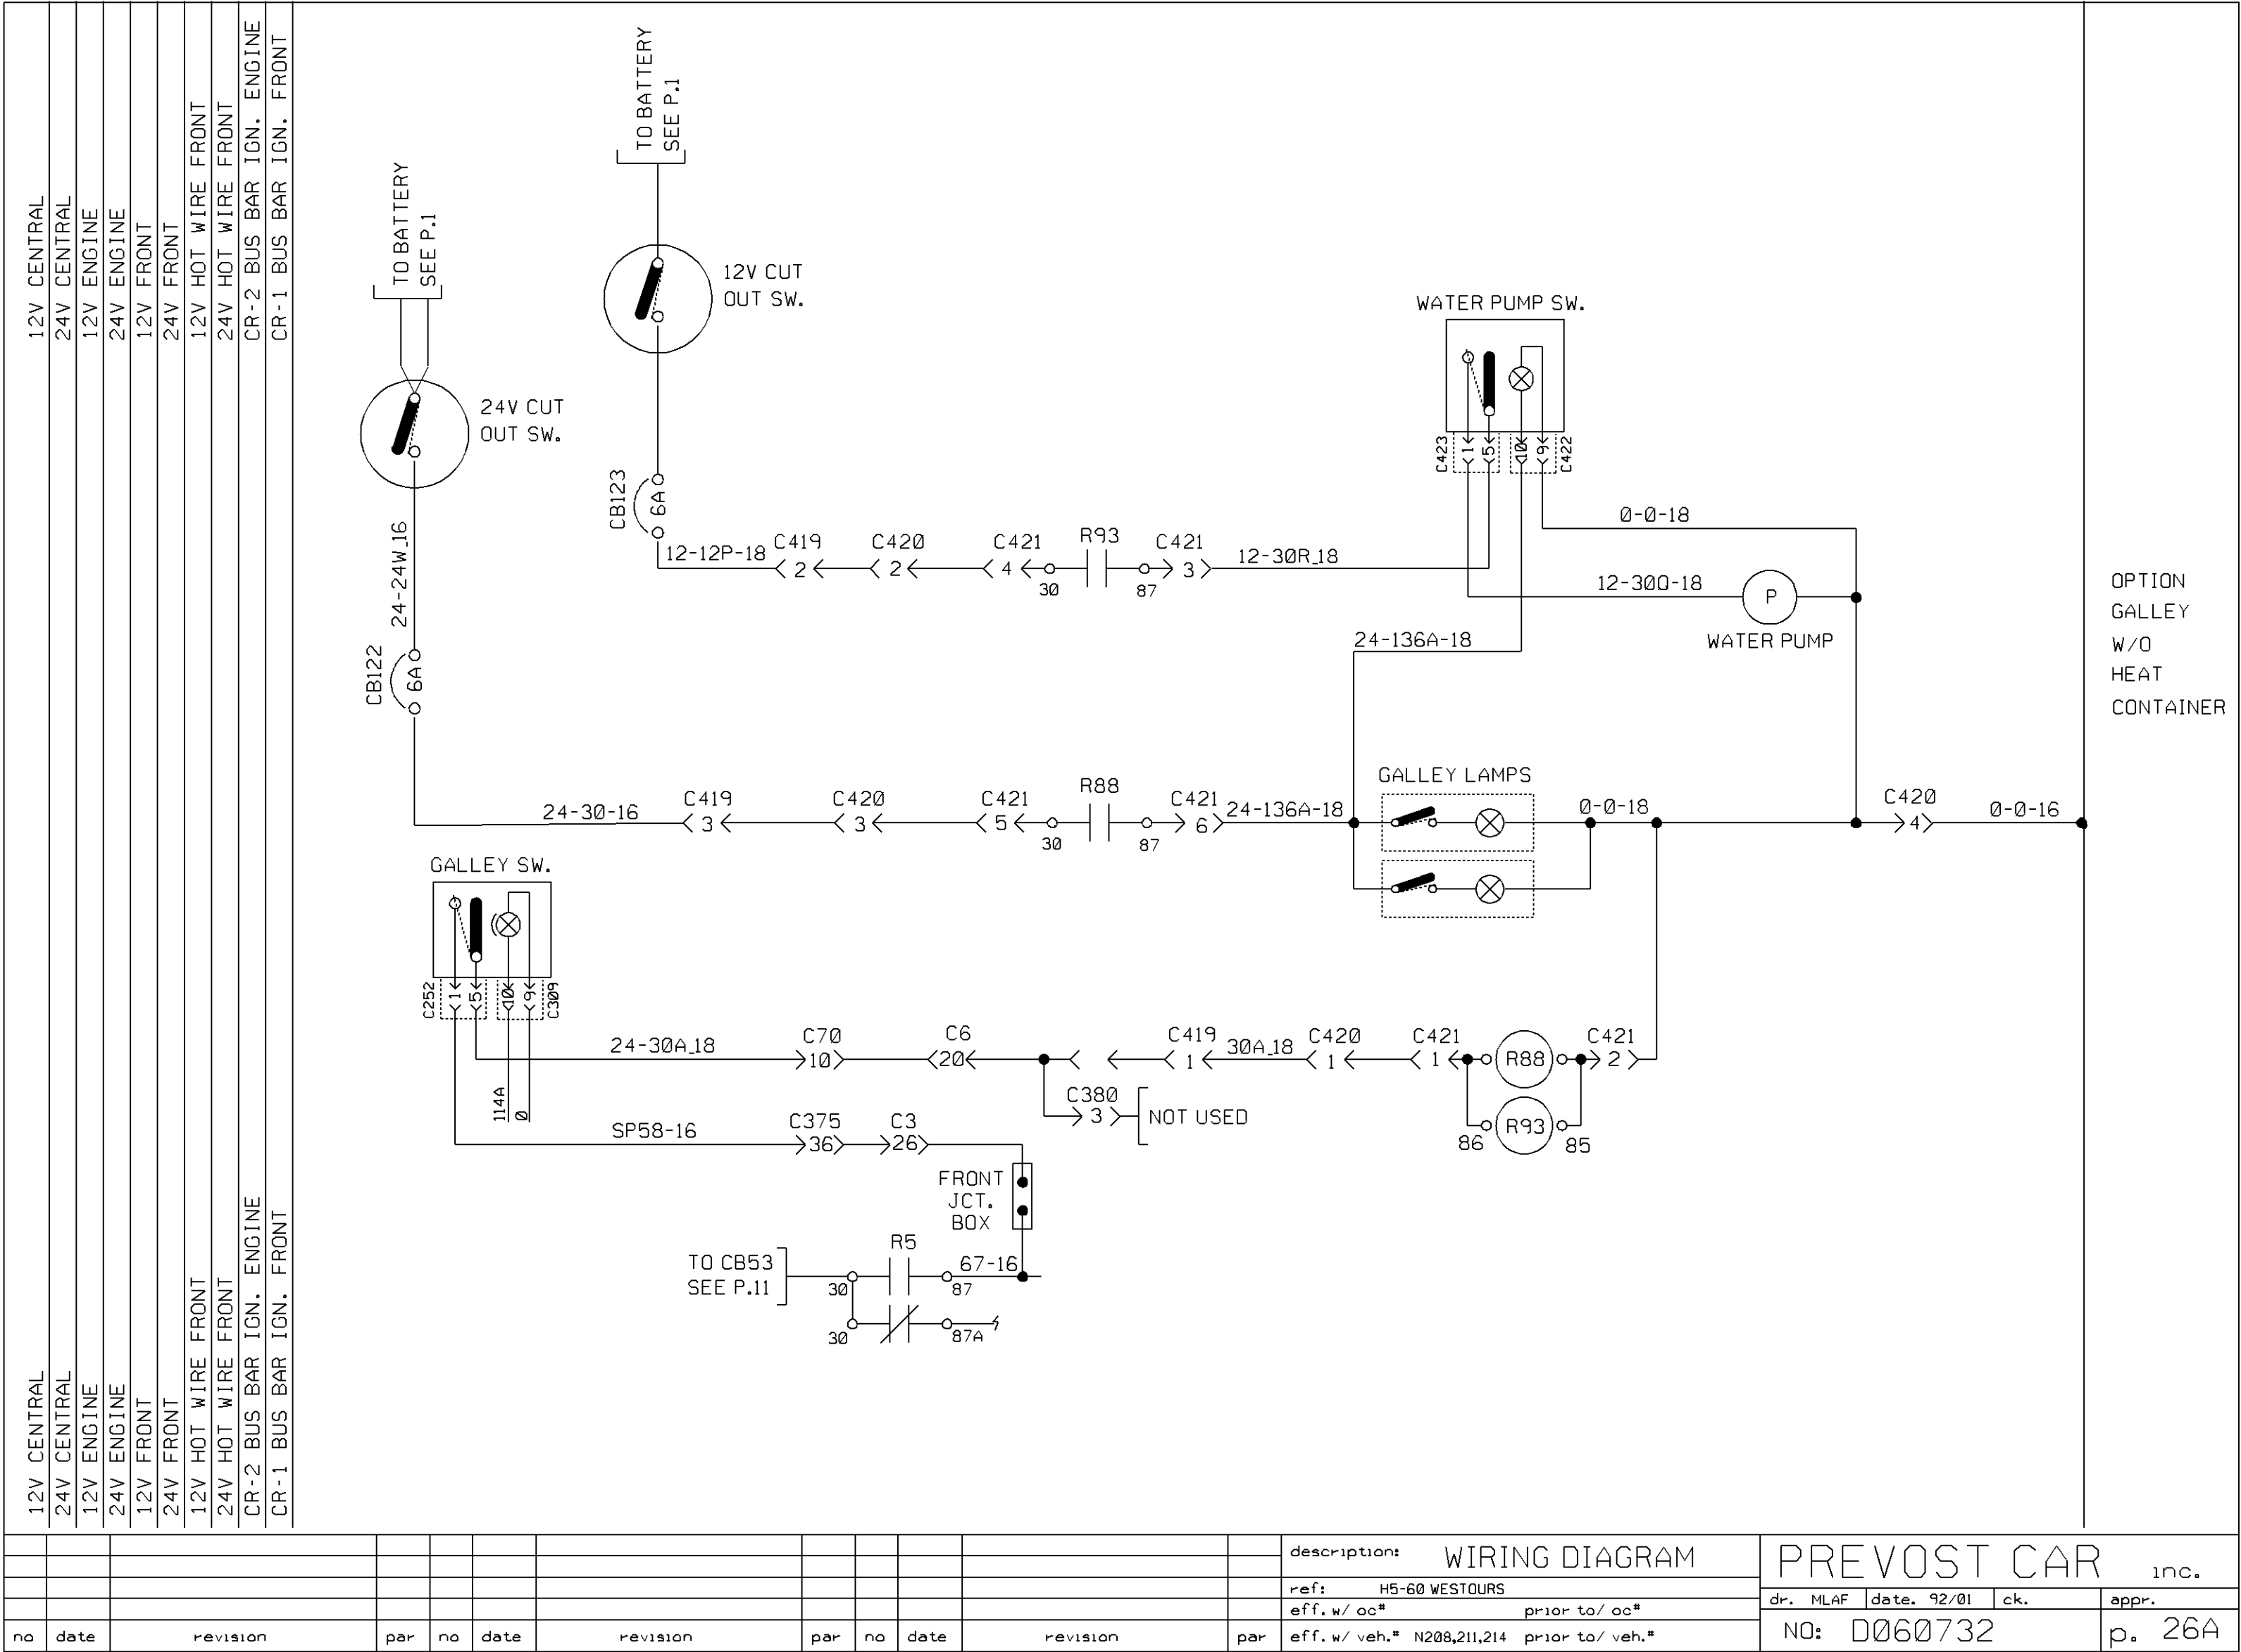

12V CENTRAL
 24V CENTRAL
 12V ENGINE
 24V ENGINE
 12V FRONT
 24V FRONT
 12V H.W.FR
 24V H.W.FR
 CR-2 B.B.I.E.
 CR-1 B.B.I.E.
 CR-2 BUS BAR 12V ENGINE
 CR-1 BUS BAR 12V FRONT
 12V CENTRAL
 24V CENTRAL
 12V ENGINE
 24V ENGINE
 12V FRONT
 24V FRONT
 12V HOT WIRE FRONT
 24V HOT WIRE FRONT

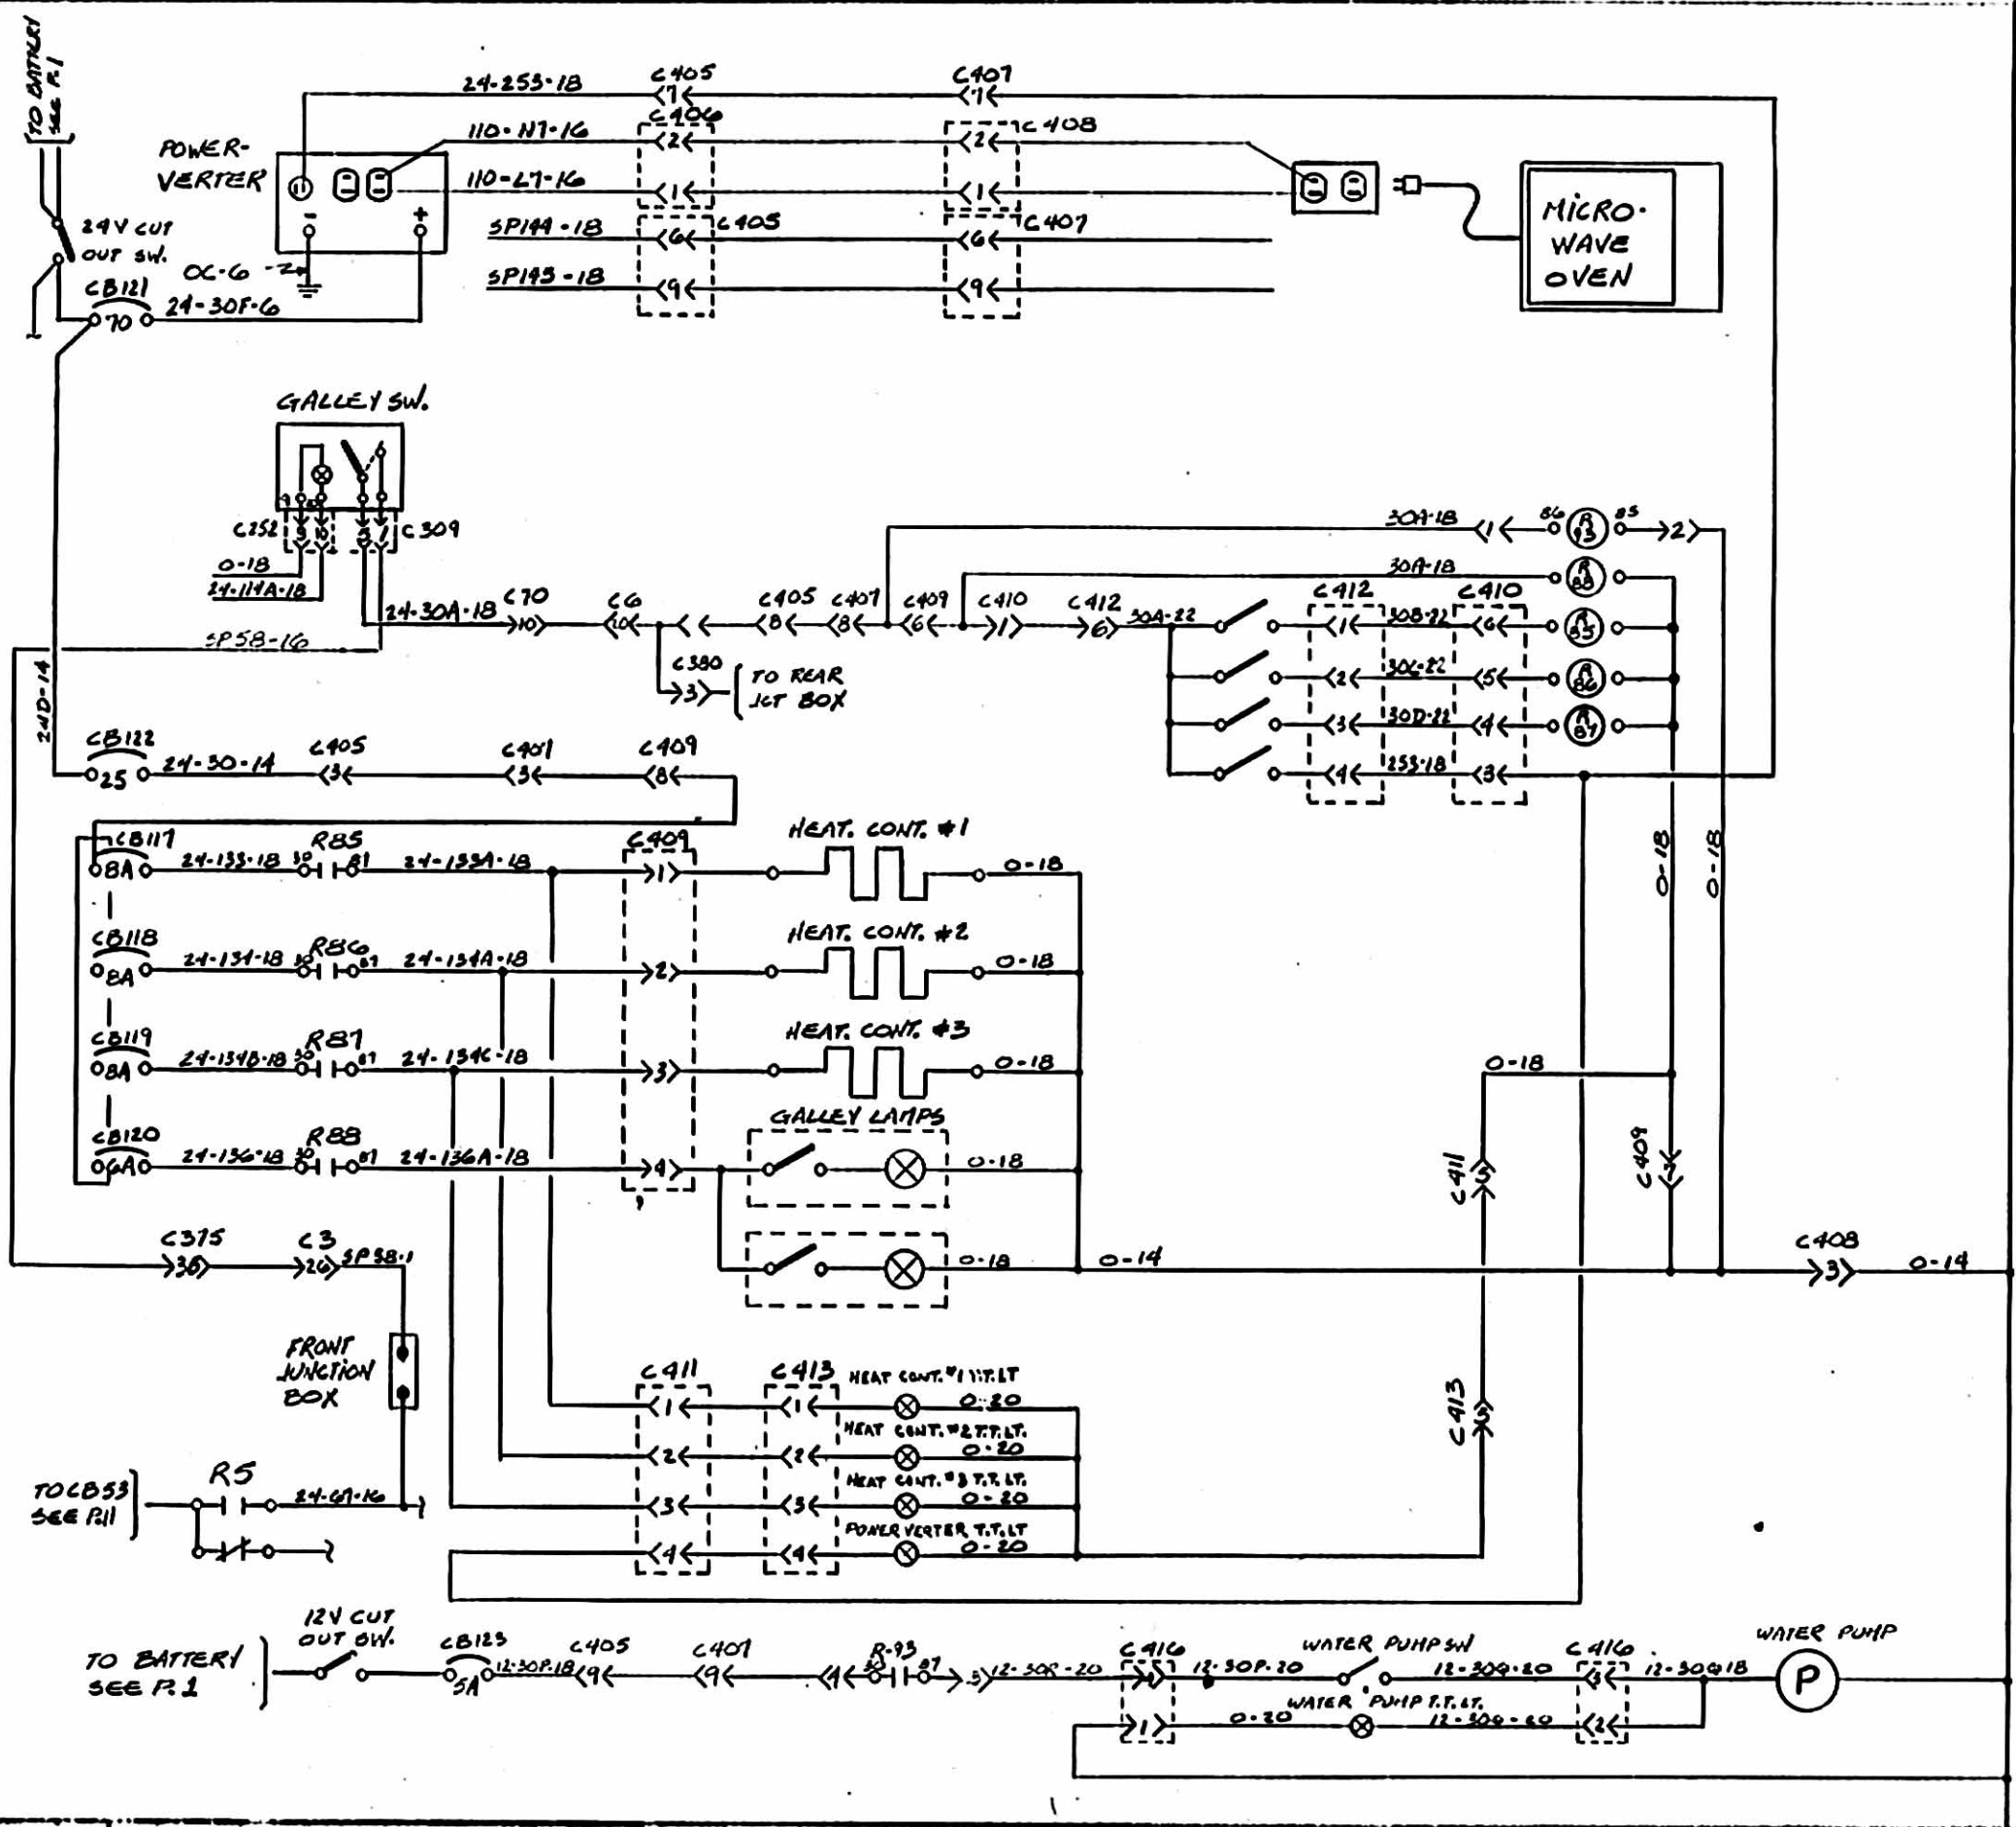


OPTION GALLEY

DESCRIPTION:				DR.- AB	DATE-90-06
WIRING DIAGRAM				CK- <i>[Signature]</i>	APPR- <i>[Signature]</i>
APPL: EFF W/L-027 PRIOR TO: N208 REF: H5-60, WESTAIRS NO: D-060732 R26				C	
ITEM	DATE	REVISION	BY		
C	91-01	MISC. A JOUR	AB		
B	90-10	MISC. A JOUR	AB		
A	90-09	MISC. A JOUR	AB		






TITRE: WIRING DIAGRAM		CLASS: AB	DATE: 70-12
		VER.:	APPR. <i>DA</i>
APPL: EFF. W/MO 95 PRIOR TO: N/A	REF: H5-60 WESTOURS	ID: D-060732, P28	C

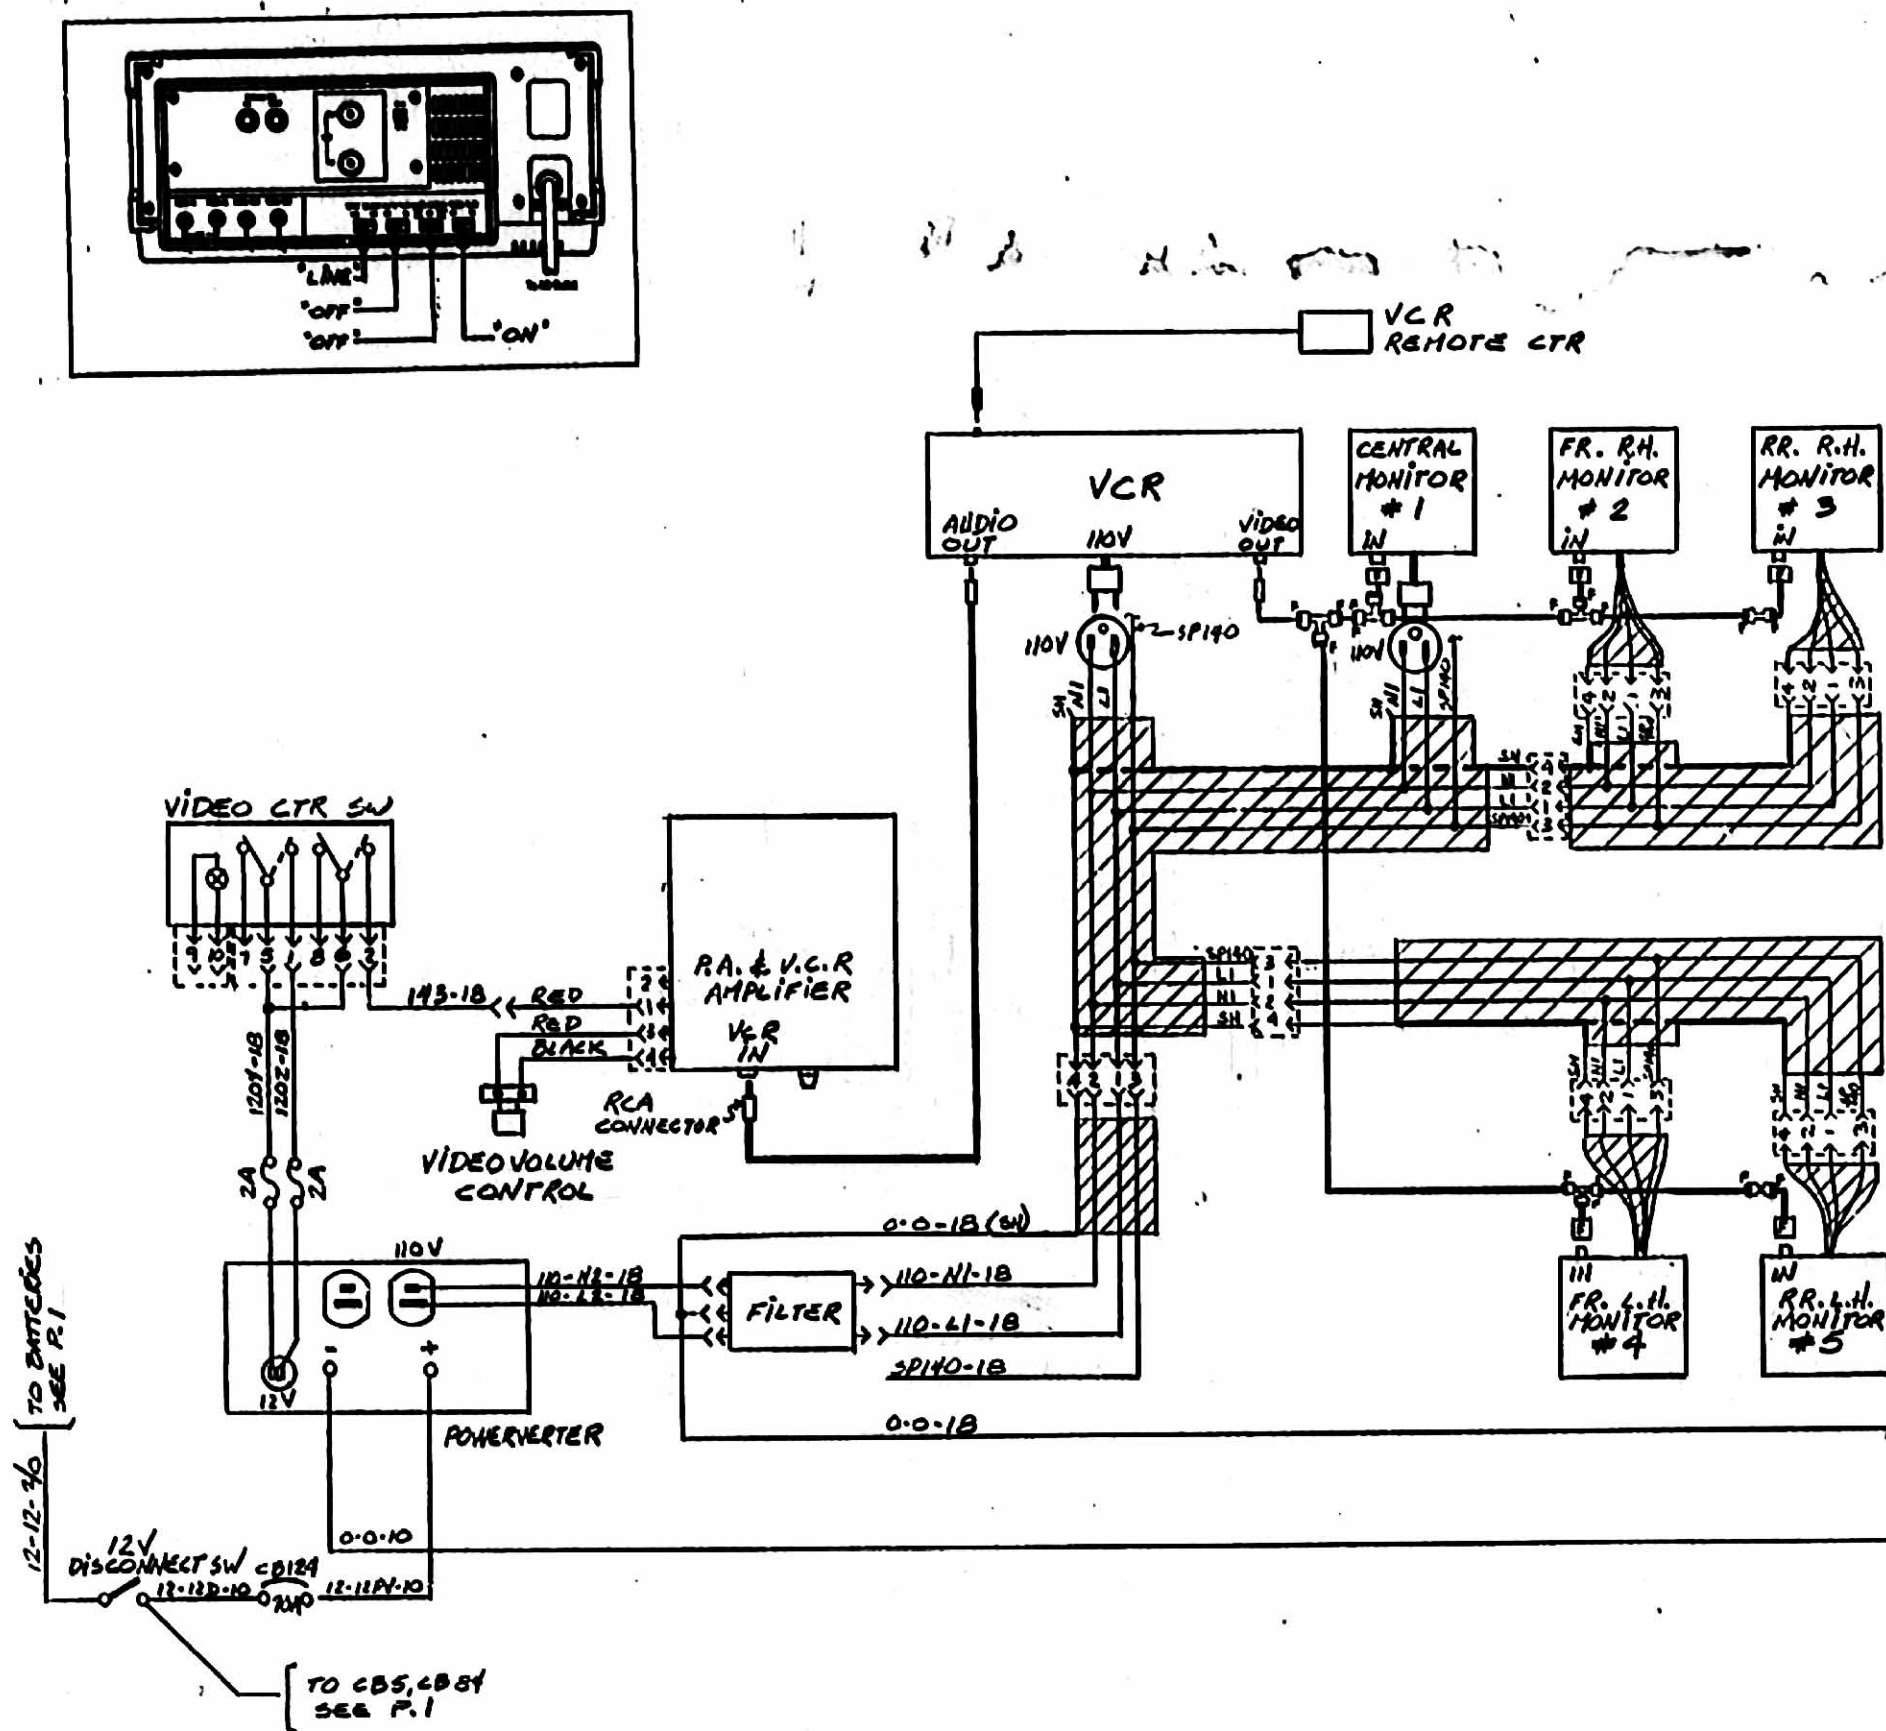

VIDEO SYSTEM

										TITRE:		CLASS: <i>M.4</i>		DATE: <i>92-01</i>	
										WIRING DIAGRAM		VER.:		APPR. <i>12</i>	
										APPL: EFF. W/M104 PRIOR TO:		REF: H5-60 WESTGORE		ID: D-060732 P.28a C	
										ITEM DATE		REVISION		PAR	

12V CENTRAL	12V CENTRAL
24V CENTRAL	24V CENTRAL
12V ENGINE	12V ENGINE
24V ENGINE	24V ENGINE
12V FRONT	12V FRONT
24V FRONT	24V FRONT
12V HOT WIRE FR	12V HOT WIRE FR
24V HOT WIRE FR	24V HOT WIRE FR
CR-2 BUS BAR I.E.	CR-2 BUS BAR I.E.
CR-1 BUS BAR I.E.	CR-1 BUS BAR I.E.

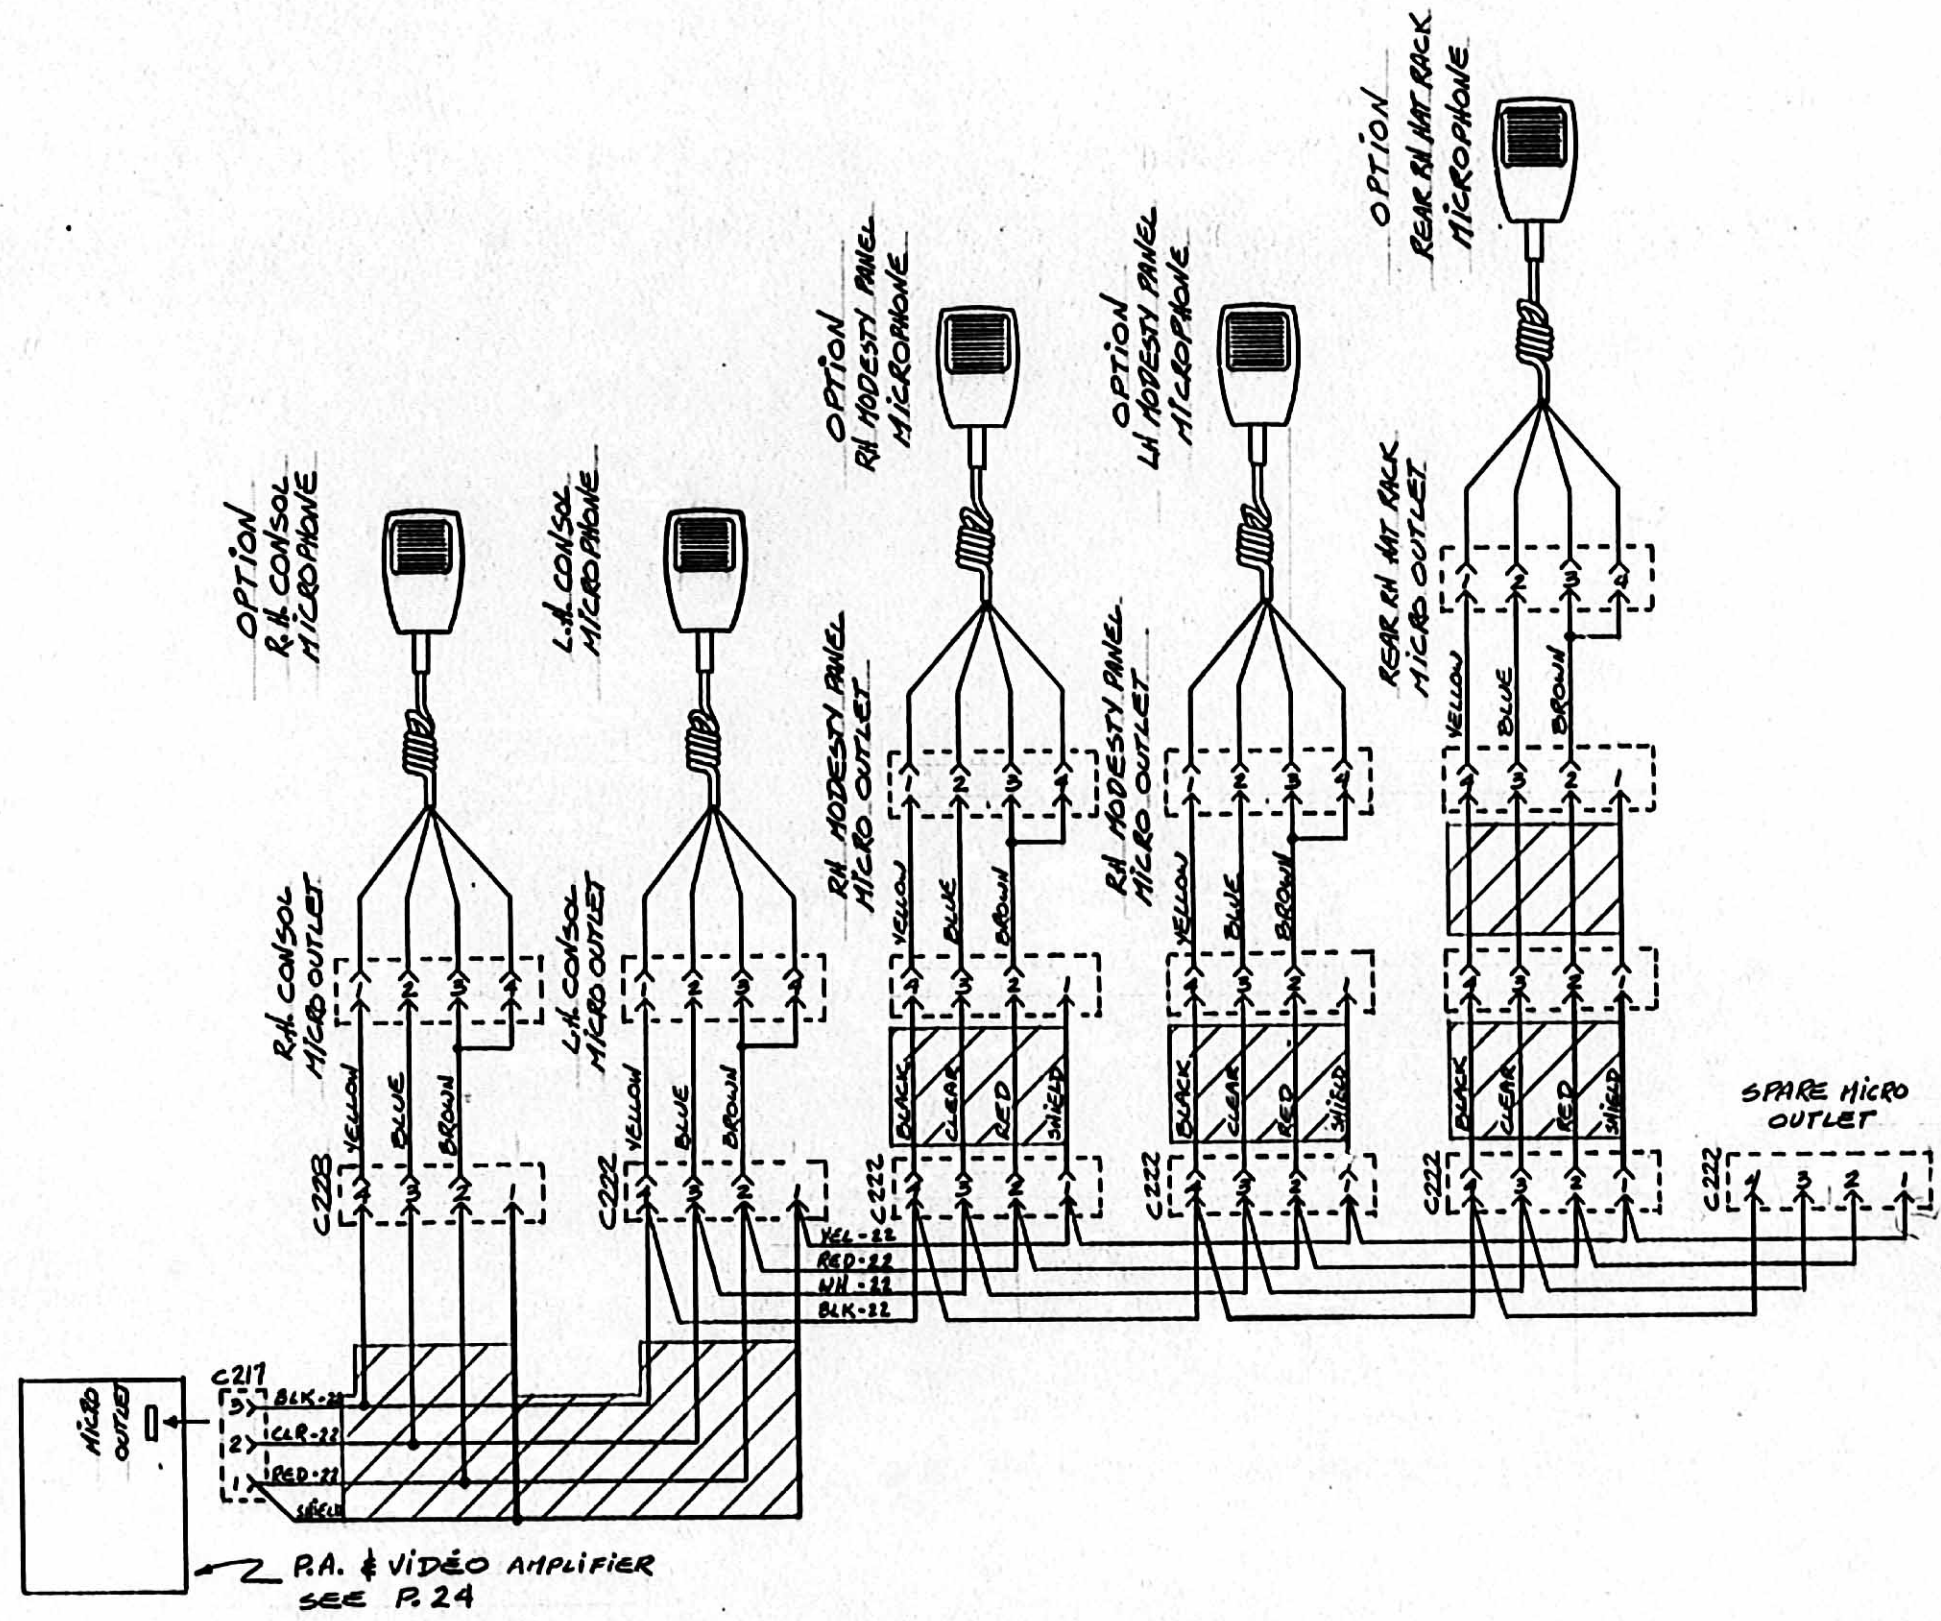

MICROPHONE
OUTLET

				DESCRIPTION:		DR.- AB	DATE- 91-04
				WIRING DIAGRAM		CK.-	APPR.-
				APPL: EFF. W/N-221 PRIOR TO:		REF: H5-60	NO: D-060732 P.29a C
A	91-04	EFF. 06 91051	AB				
ITEM	DATE	REVISION	BY				

11


11

8.5

8.5

11

12V CENTRAL	12V CENTRAL
24V CENTRAL	24V CENTRAL
12V ENGINE	12V ENGINE
24V ENGINE	24V ENGINE
12V FRONT	12V FRONT
24V FRONT	24V FRONT
12V HOT WIRE FR	12V HOT WIRE FR
24V HOT WIRE FR	24V HOT WIRE FR
CR-2 BUS BAR I.G.E.	CR-2 BUS BAR I.G.E.
CR-1 BUS BAR I.G.E.	CR-1 BUS BAR I.G.E.

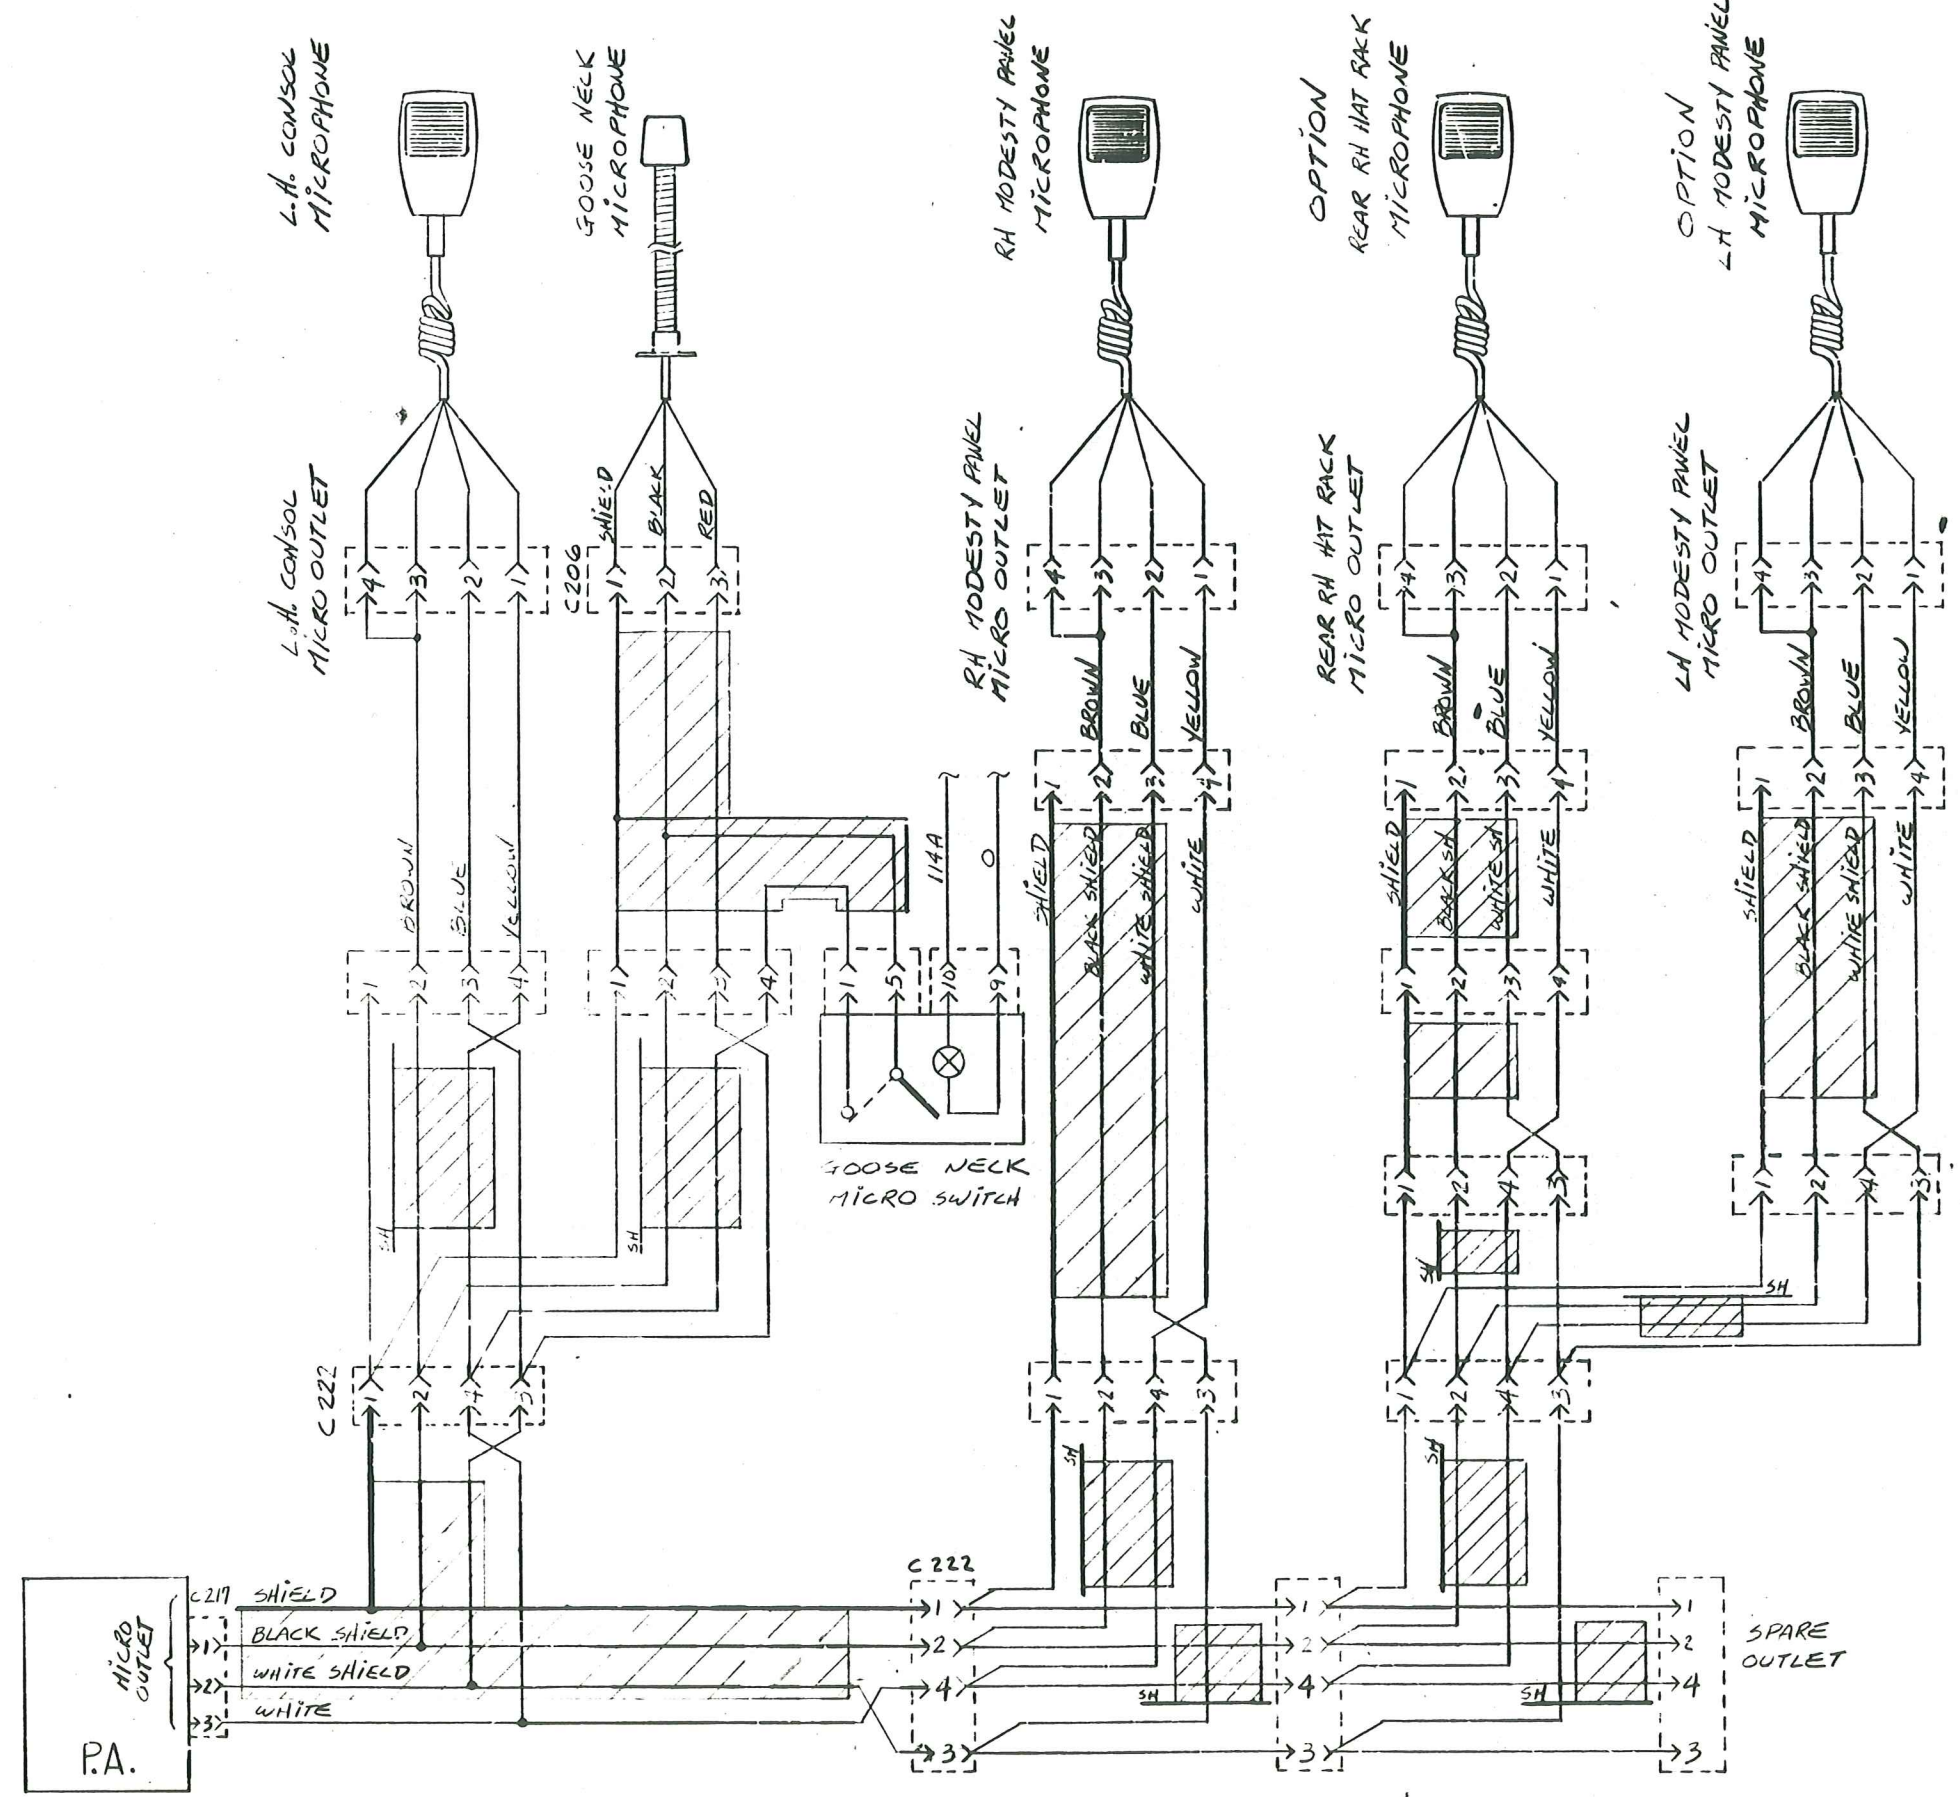

MICROPHONE
OUTLET

DESCRIPTION:

WIRING DIAGRAM

DR. - AB

DATE - 90-09

CK. -

APPR. - D. R.

18 dec 90

APPL: EFF. W/ L-027 PRIOR TO:

REF: H5-60 WESTOURS NO: D-060732 P.29A C

11


11

8.5

8.5

11

12V CENTRAL	CR2 BUS BAR IGN. ENGINE
24V CENTRAL	CR2 BUS BAR IGN. FRONT
12V ENGINE	
24V ENGINE	
12V FRONT	
24V FRONT	
12V HOT WIRE FR	
24V HOT WIRE FR	
CR2 BUS BAR IGN. ENGINE	
CR2 BUS BAR IGN. FRONT	

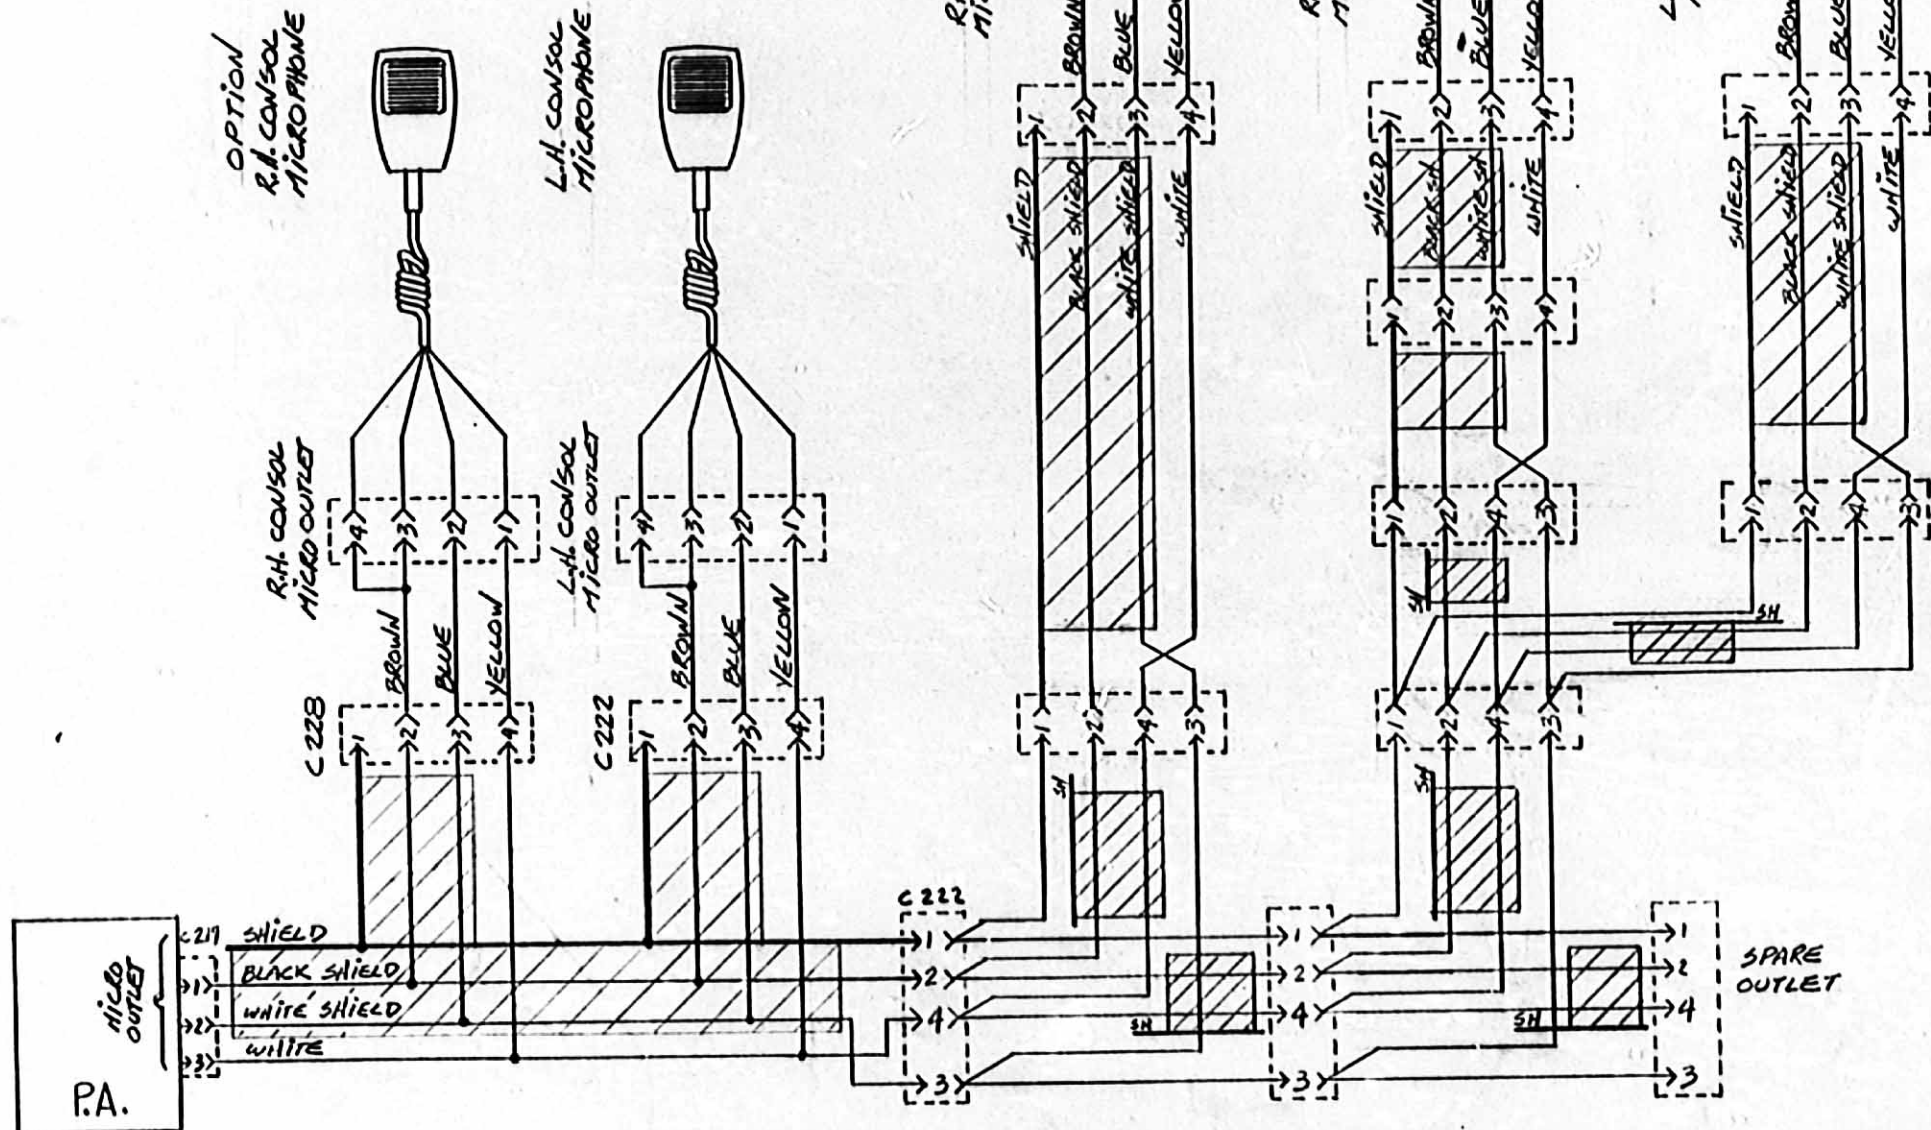

MICROPHONE
OUTLET

M

DESCRIPTION:				DR. - AB	DATE - 90-09
WIRING DIAGRAM				CK. -	APPR. - 87.2.
APPL: EFF. W/ L-027 L-033... PRIOR TO: N-221 REF: H5-60				NO: D-560732 P29	C
ITEM	DATE	REVISION	BY		
B	91-04	PRIOR OC 91051	AB		
A	90-09	MIX A 102R	AB		