



Volvo Bus Corporation

VOLVO 9700

US/CAN

**CHASSIS WIRING
DIAGRAMS**

**Chassis number
B13R_179960-179968_ENG**

Engineering Release Notice (ERN)	Location	Change Description	A = Added D = Deleted	W = Was	Document Release Status RELEASED
		See DCN			Date Modification Count

WIRING DIAGRAM INDEX


VOLUME 1

NAME	PAGE
INSTRUCTIONS	2
ABBREVIATION LIST, 24V	6


VOLUME 2

NAME	DESCRIPTION	PAGE	NAME	DESCRIPTION	PAGE
AA	IGNITION AND STARTING SYSTEM	1	FA	AIR SUSPENSION ECS	25
AB	POWER SUPPLY	2	FB	AIR SUSPENSION ECS	26
AB2	NVPDUF & NVPDUR	3	GA	LCM	27
AB3	STARTER BATTERY	4	GB	LCM	28
AB4	CONSUMER BATTERY	5	GE	LCM	29
AB5	PRE HEATER	6	GM	WIPER, WASHER	30
AC	I-START SYSTEM	7	IS	HORN, SWM	31
AF	STARTER MOTOR AND ALTERNATORS	8	IU	AUDIO	32
BA	VECU	9	NA	BUS INSTRUMENT CLUSTER BIC2	33
BB	BBM	10	NA2	OBD, ON BOARD DIAGNOSTICS	34
BC	BBM	11	NB	TACHOGRAPH	35
CL	BIO	12	NC	TGW II	36
CS	ENGINE INTERFACE D13	13	ND	ALCOLOCK	37
CU	DNOX2 FOR EURO 5	14	NE	FMS GATEWAY	38
CX	ACM 2.0	15	XC	CAN SAE 1939	39
CZ	RETARDER I-SHIFT	16	XD	CAN SAE1587	40
DN	I-SHIFT	17	XE	DBUS	41
DN2	I-SHIFT	18	XF	CAN 1939_7	42
DN3	I-SHIFT	19	XG	CAN J2284	43
DN4	I-SHIFT AND RETARDER	20	XH	CAN ENGINE SUBNET	44
DN5	ALLISON	21	XJ	CAN1939 - 2/3	45
DN6	I-SHIFT	22	ZC	GROUND	46
EO	EBS	23			
EP	EBS	24			


Example of Wiring Diagram

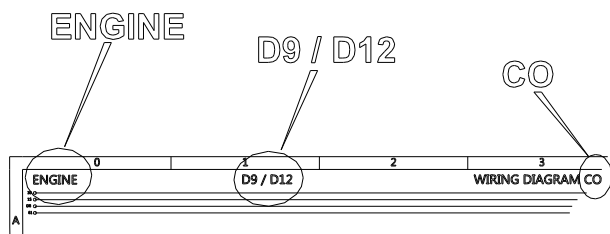


Component wiring diagram title, variant/subtitle and sheet number.

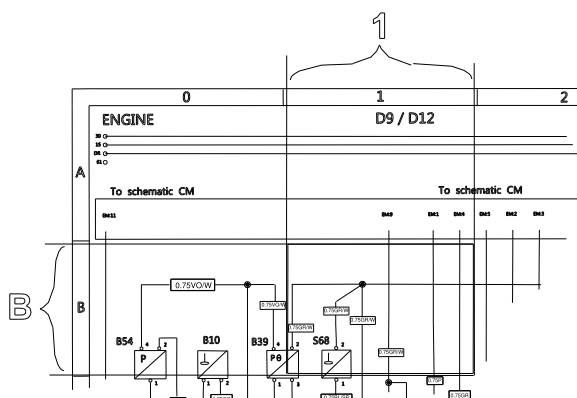


Coordinates (B 1).

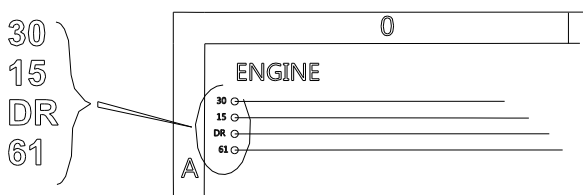


B+ Voltage battery with switch in ON position.
30 Voltage battery with main switch on, kl.30.
15 Voltage with starter key in drive position, kl.15.
DR Voltage with starter key in drive position, preheat position and start position, kl.DR.

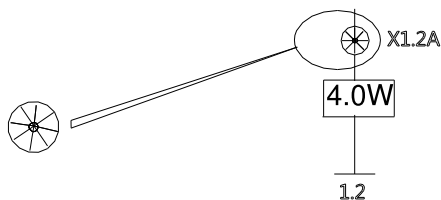

Splice.

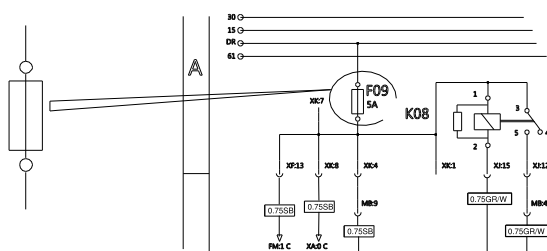

Fuse.

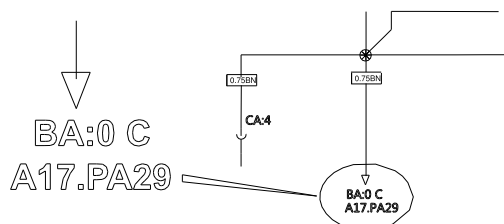

Reference arrow, for Diagram BA, coordinates 0 C, component A17, connector PA pin 29.

VOLVO

Volvo Bus Corporation

Document title
WIRING DIAGRAM


Document type
PRODUCT SCHEMATICS

Document No
22610880


Issue
02

Volume
01(03)


Sheet No
2(7)

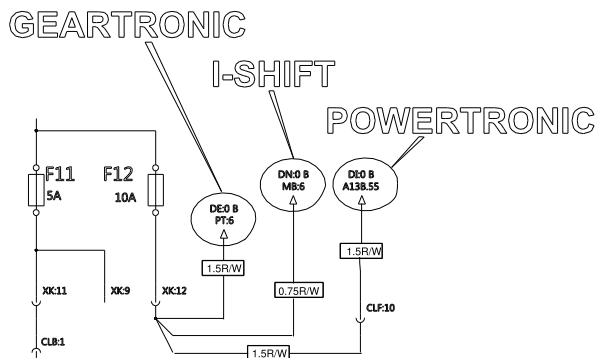


The maximum of variants are drawn, think about that all wires and components are not standard for all markets or vehicle models.

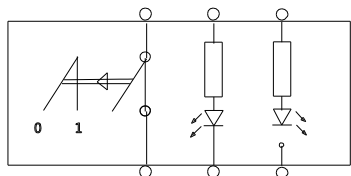


Switch.

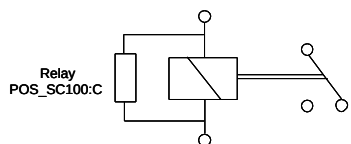


Relay with position.

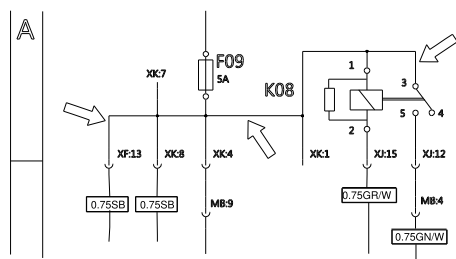

Conductor on circuit card.

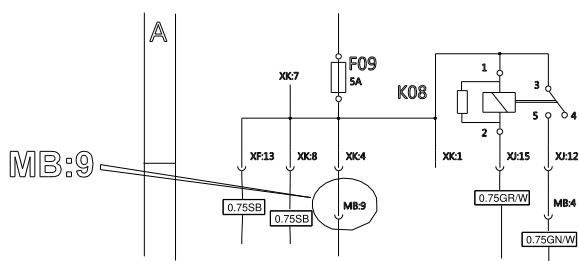

Connector MB terminal 9.

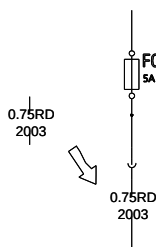

Wire area, colour and equipotencial.

VOLVO

Volvo Bus Corporation

Document title
WIRING DIAGRAM


Document type
PRODUCT SCHEMATICS

Document No
22610880


Issue
02

Volume
01(03)


Sheet No
3(7)

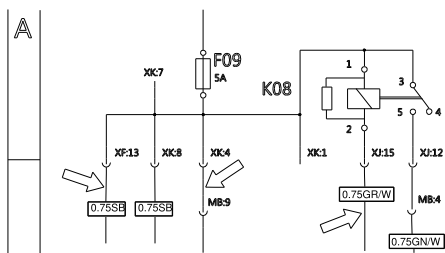


Thin lines, wires.

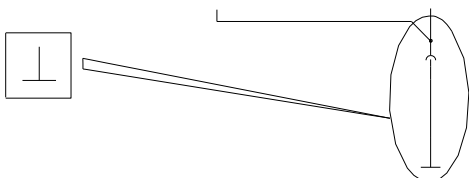


Earth connection to circuit card.

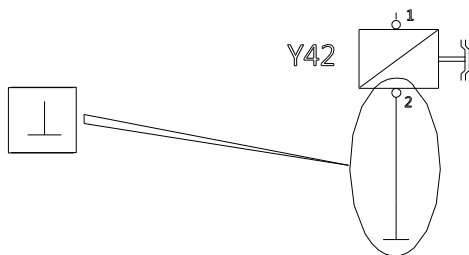

Earth connection without wire.

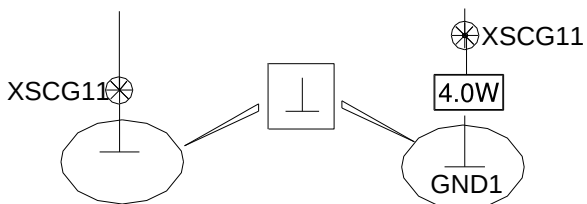

Same splice can be drawn on several diagrams. The wire from the splice to the earth connection point will only be drawn and coded on one diagram. On the other diagrams will only the earth connection point be written besides the splice.



An ECU symbol with a dashed box describes that the ECU exists in several different sheets.

VOLVO

Volvo Bus Corporation

Document title
WIRING DIAGRAM


Document type
PRODUCT SCHEMATICS

Document No
22610880


Issue
02

Volume
01(03)


Sheet No
4(7)

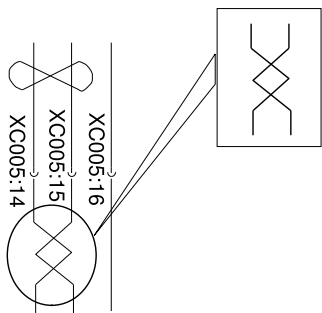


Twisted wires.

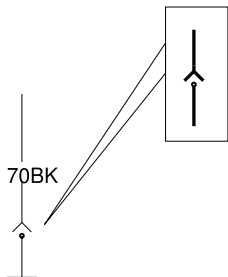


inline connector symbol for power cable ring terminal.



Interface symbol.

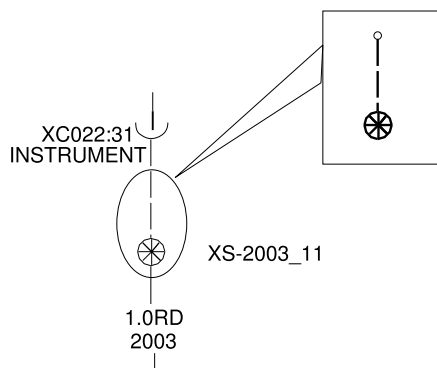

Splice with dotted line indicates that wire already exists in some other sheet and splice is shared.

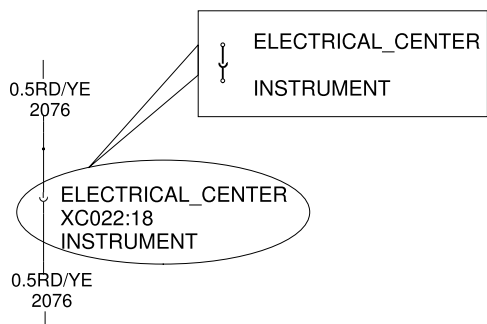

The text on either side of the inline incates that wire belongs to stated harness.

VOLVO

Volvo Bus Corporation

Document title
WIRING DIAGRAM

Document type
PRODUCT SCHEMATICS

Document No
22610880

Issue
02

Volume
01(03)

Sheet No
5(7)

ABBREVIATION LIST, 24V

SHELL_CAVITY_HARNESSES	
+15	VOLTAGE WITH STARTER KEY IN DRIVE POSITION
+30	VOLTAGE BATTERY WITH MAIN SWITCH ON
+30C	VOLTAGE BATTERY WITH MAIN SWITCH_ON
AC	AIR_CONDITION
Acp	ACCELERATOR PEDAL
AI	ANALOG INPUT
AIC	ADVANCED_INFORMATION_CENTER
Amb	AMBIENT
An.IN	ANALOGUE INPUT
AO	ANALOG OUTPUT
APBE	AUTOMATIC PARKING BRAKE EVACUATION
ARC	AIR REGENERATION CONTROL
ARMS	AUTOMATIC RESET MAIN SWITCH
B+	VOLTAGE BATTERY WITH SWITCH IN ON POSITION
BB	BODY_BUILDER
BBM	BODY_BUILDER_MODULE
BHSA	BRAKE HILL START AID
Bpole	BATTERY POSITIVE BEFORE MAIN SWITCH
Brk	BRAKE
Buf	BUFFERED
C	CLOSING
CampL	CAMPIGN LIGHTS
Cent	CENTERING
CICU	Charging
Ctrl	CONTROL
Cyl	CYLINDER
Dash	DASHBOARD
Deliv	DELIVERY
DI	DIGITAL INPUT
Diag	DIAGNOSTIC
Diq.OUT	DIGITAL OUTPUT
Dir	DIRECTION
Dis	DISABLE
DO	DIGITAL OUTPUT
DRL_RMC	DAYTIME RUNNING LIGTH/REDUCED MODE_CONTROL
EACC	ELECTRIC AIR COMPRESSOR CONTROL
EBS	ELECTRONIC BRAKE SYSTEM
ECB	VBC ENGINE COMPRESSOR BRAKE
ECU	ELECTRONIC CONTROL UNIT
ECU_GND	EXTERNAL GROUND
EGR	EXHAUST REDIRECTION VALVE
ELC	ELECTRICAL CENTER
EMT	EXHAUST MANIFOLD TEMPERATURE
Eng	ENGINE
EPG	EXHAUST PRESSURE GOVERNOR
ES	ENGINE SYNCHRONIZATION
ESS	ENERGY STORAGE SYSTEM
ETCC	EXHAUST TEMPERATURE_CATALYTIC_CONVERTER
Ext	EXTERNAL
FRC	FRONT RELAY CENTER
GECU	GEAR SELECTOR ELECTRONIC_CONTROL_UNIT
GND	SIGNAL GROUND
H	HIGH
Haz	HAZARD
HDI	HIGH DIGITAL INPUT
HDO	HIGH DIGITAL OUTPUT
HLa	HEADLAMPS
HPCU	HYBRID POWER TRAIN_CONTROL_UNIT
HS	HIGH SIDE
HSA	HILL START AID
HSD	HIGH SIDE DRIVER
HVAC	HEATING VENTILATION AIR_CONDITION_SYSTEM
Hyd	HYDRAULIC
IJ	INLET JET
Ind	INDICATOR
Inj	INJECTION
JK	JACK KNIFE
KL	KEY LINE
L	LOW
LCM	LIGHT CONTROL MODULE
LCP	LIGHT CONTROL PANEL
LDI	LOW DIGITAL INPUT
LDO	LOW DIGITAL OUTPUT
LS	LOW_SIDE
Nd	NEEDLE
O	OUTPUT
OBD	ON_BOARD_DIAGNOSTIC

VOLVO

Volvo Bus Corporation

Document title
WIRING DIAGRAM

Document type
PRODUCT SCHEMATICS

Document No	Issue	Volume	Sheet No
22610880	02	01(03)	6(7)

SHELL_CAVITY HARNESSES	
OLS	OIL_LEVEL_SENSOR
OP	OPENING
OV	OVERFLOW
PCM	POWER_TRAIN_CONTROL_MODULE
PCS	PRESSURE_CONTROL_SOLENOID
PCV	PRESSURE_CONTROL_VALVE
Plo	PLOUGH
Pos	POSITION
PR	PRESSURE_REGULATOR
Pres	PRESSURE
PS	PRESSURE
PWM	PULSE_WIDTH_MODULATION
Rad	RADIATOR
RAI	RESISTANCE_ANALOGUE_INPUT
Red	REDUCTOR
Rel	RELAY
Req	REQUEST
RES	INPUT_FOR_SENSORS_WITH_VARIABLE_RESISTANCE
Ret	RETARDER
RX	SIGNAL_RECEIVER
Sen	SENSOR
Sign	SIGNAL
Sno	SNOW
Sp	SPEED
SS	SENSOR_SUPPLY
St	START
Stp	STOP
SV	SUPPLY_VOLTAGE
Sw	SWITCH
TCC	TORQUE_CONVERTER_CLUTCH
Temp	TEMPERATURE
Tor	TORQUE
TX	SIGNAL_TRANSMITTER
UBat	FEED_DIRECTLY_FROM_BATTERY
VEB	VOLVO_ENGINE_BRAKE
Veh	VEHICLE

VOLVO

Volvo Bus Corporation


Document title
WIRING DIAGRAM

Document type
PRODUCT SCHEMATICS

Document No	Issue	Volume	Sheet No
22610880	02	01(03)	7(7)


IGNITION AND STARTING SYSTEM


WIRING DIAGRAM AA

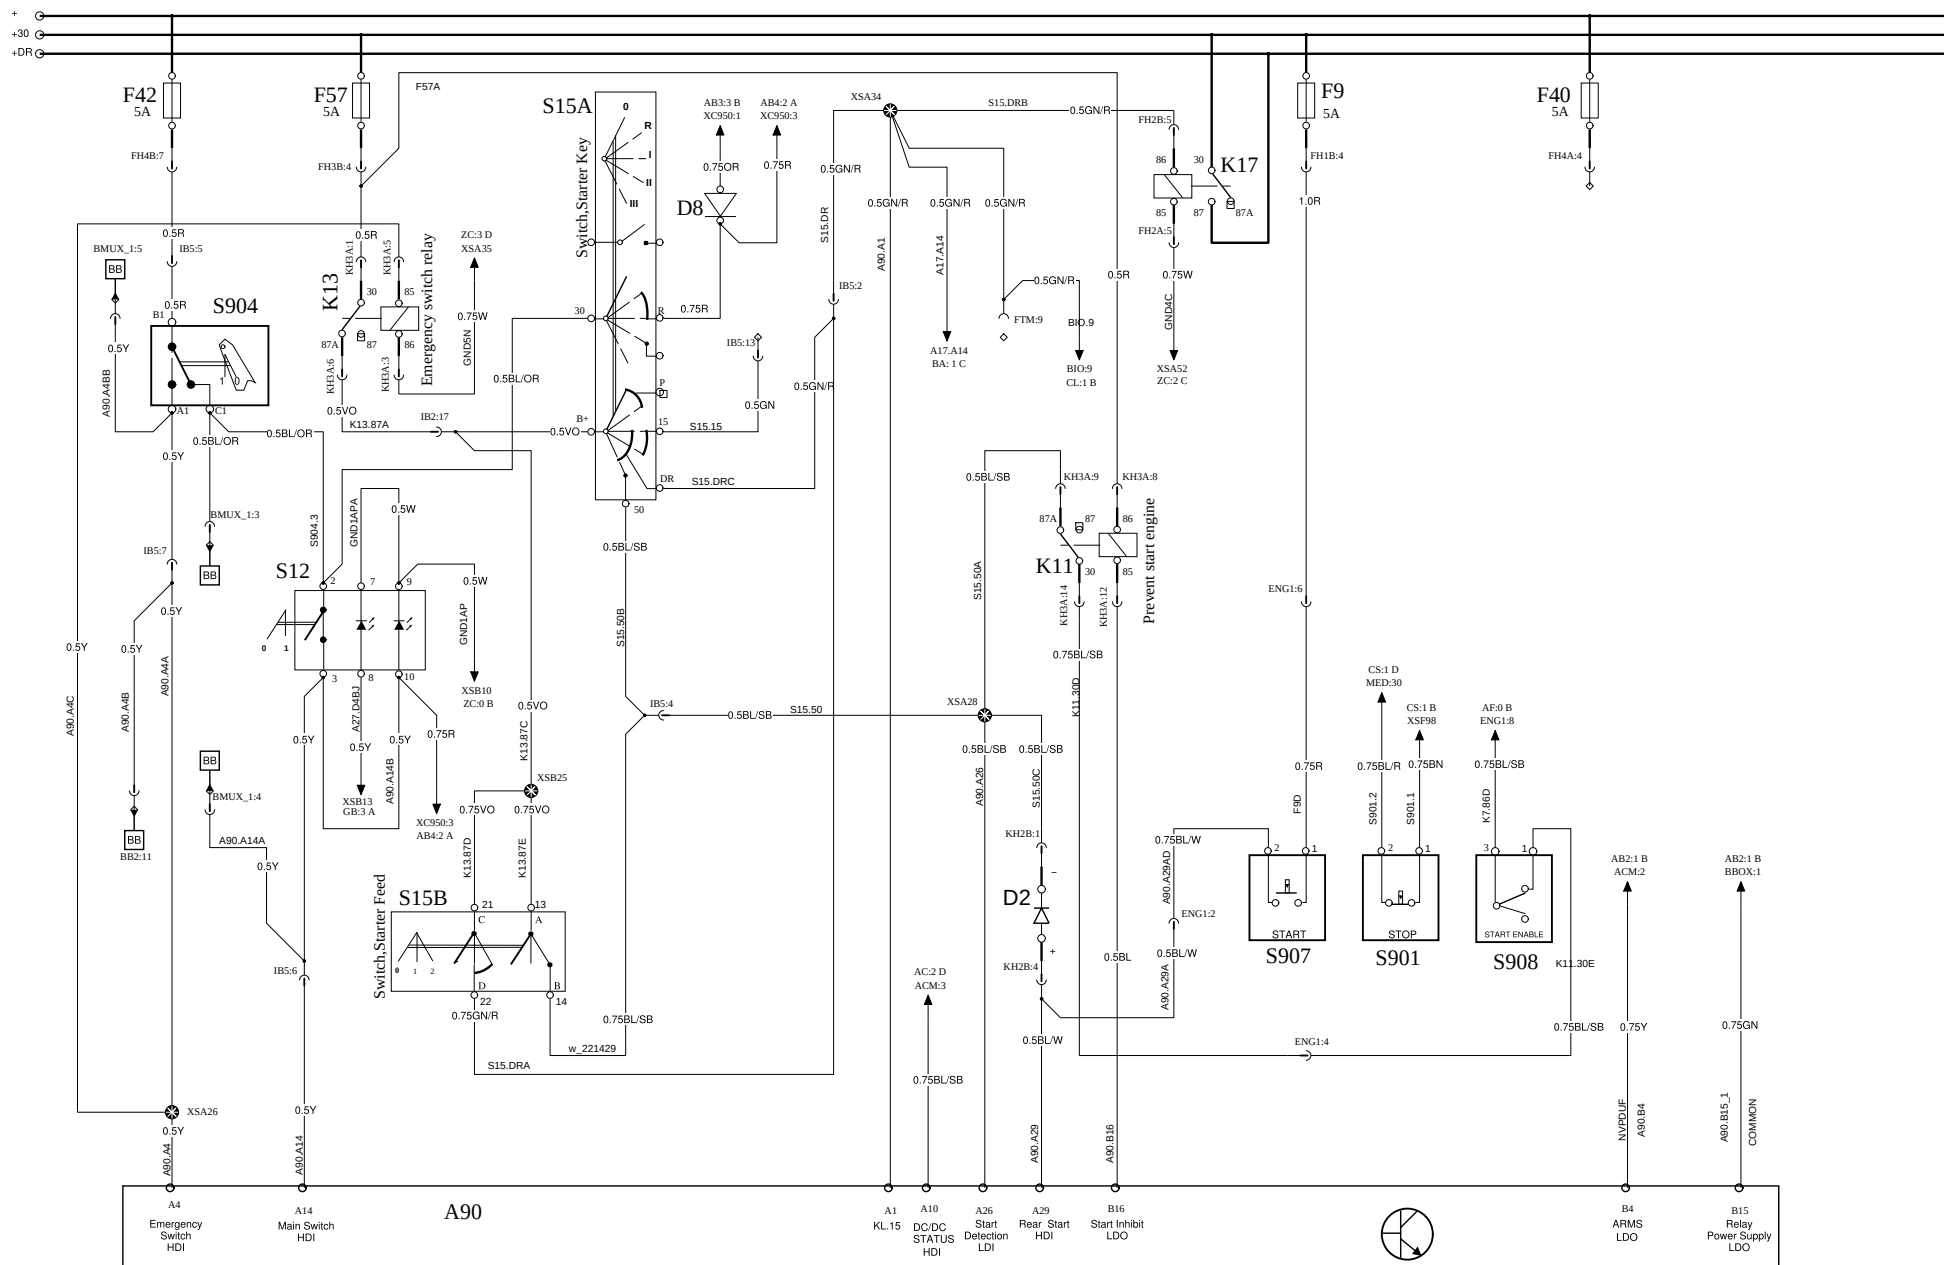

POWER SUPPLY

WIRING DIAGRAM AB

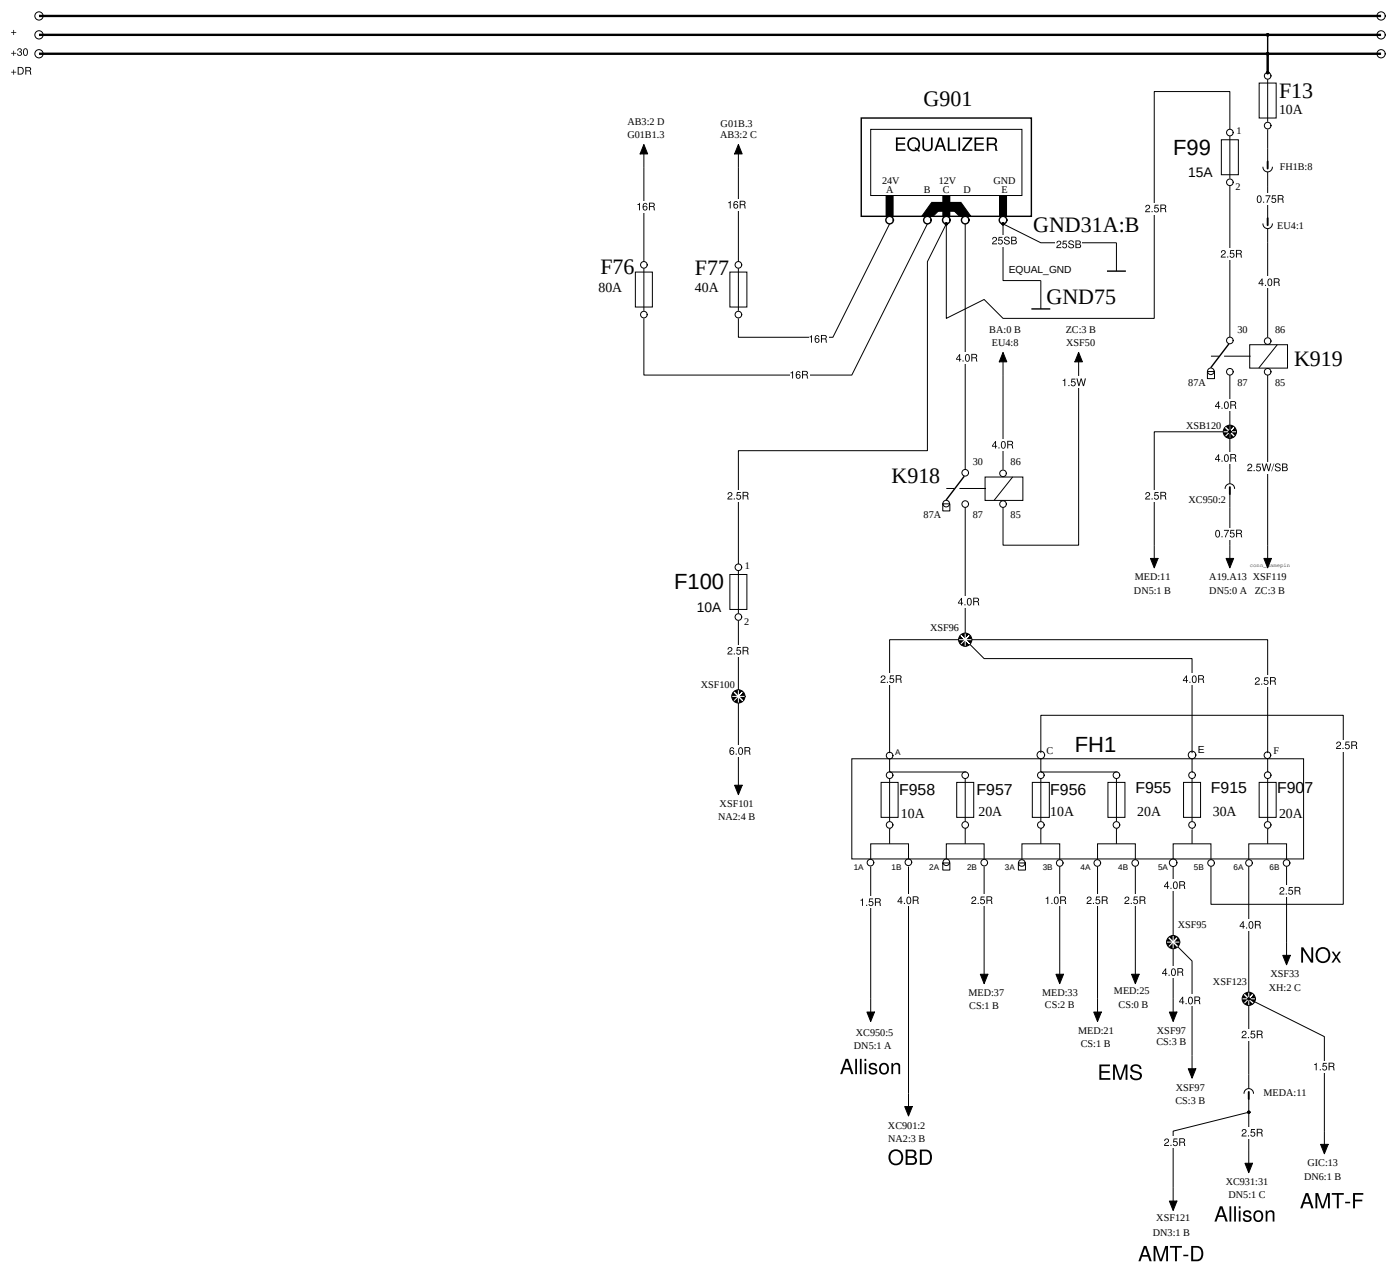


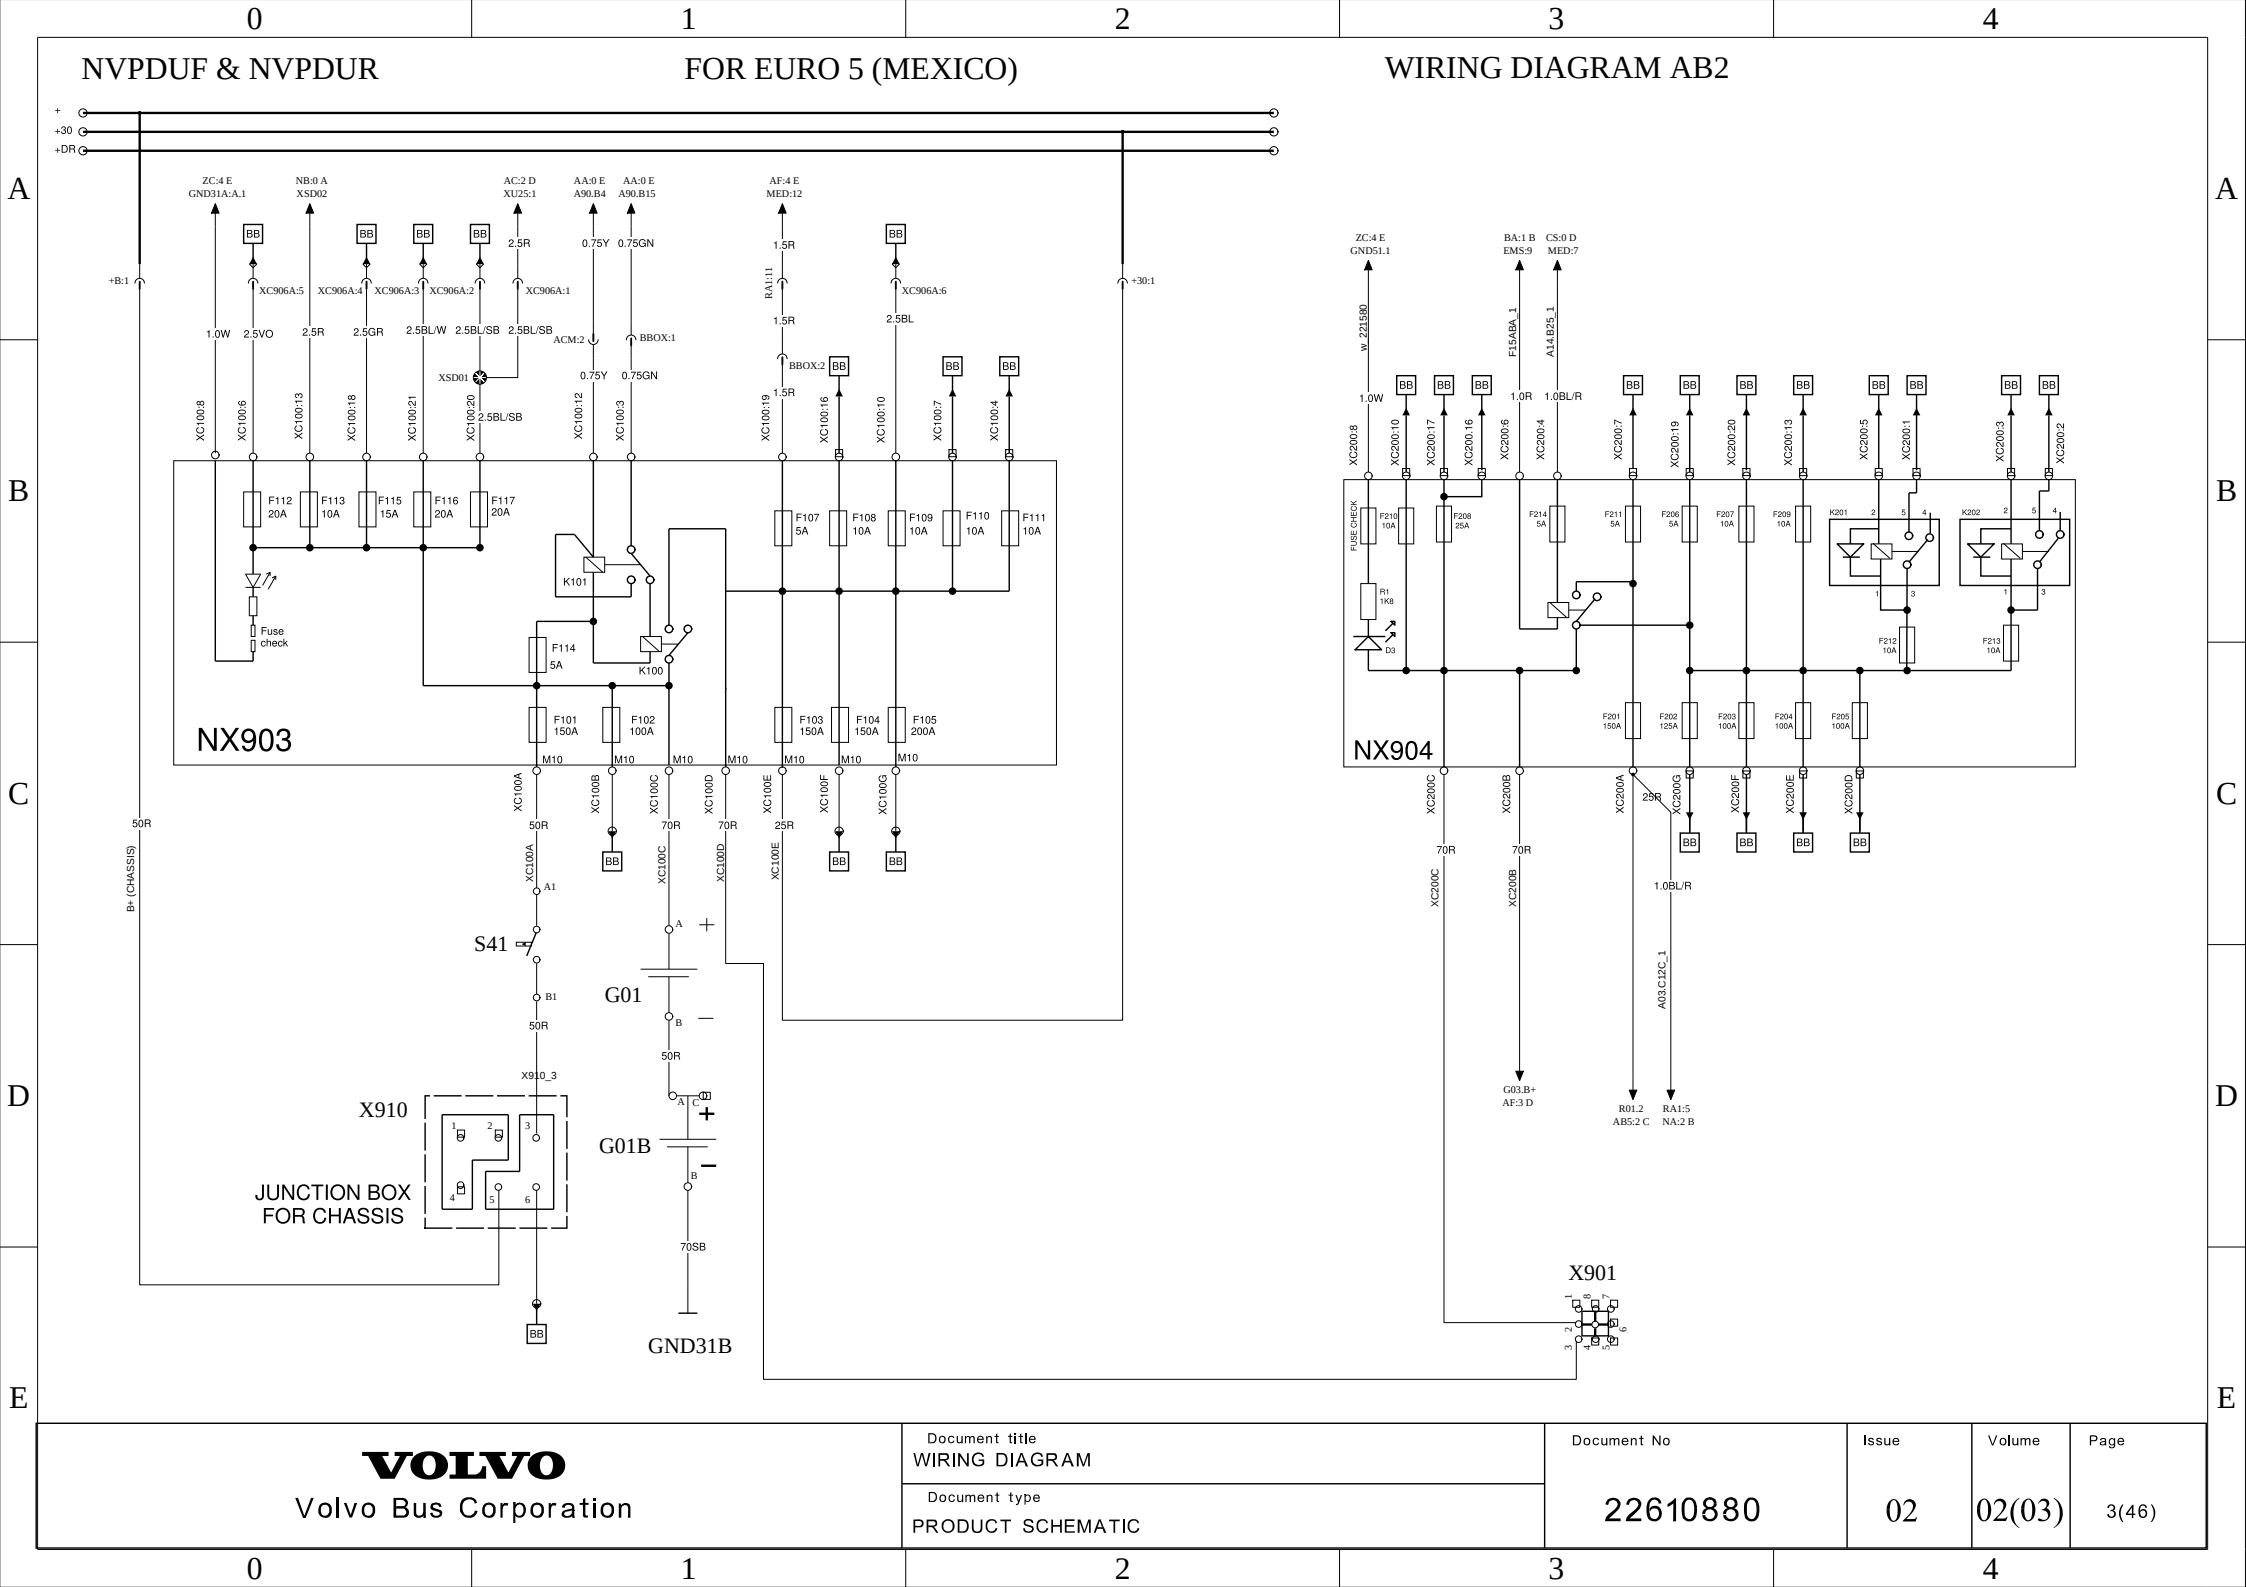

STARTER BATTERY

US/CAN


WIRING DIAGRAM AB3

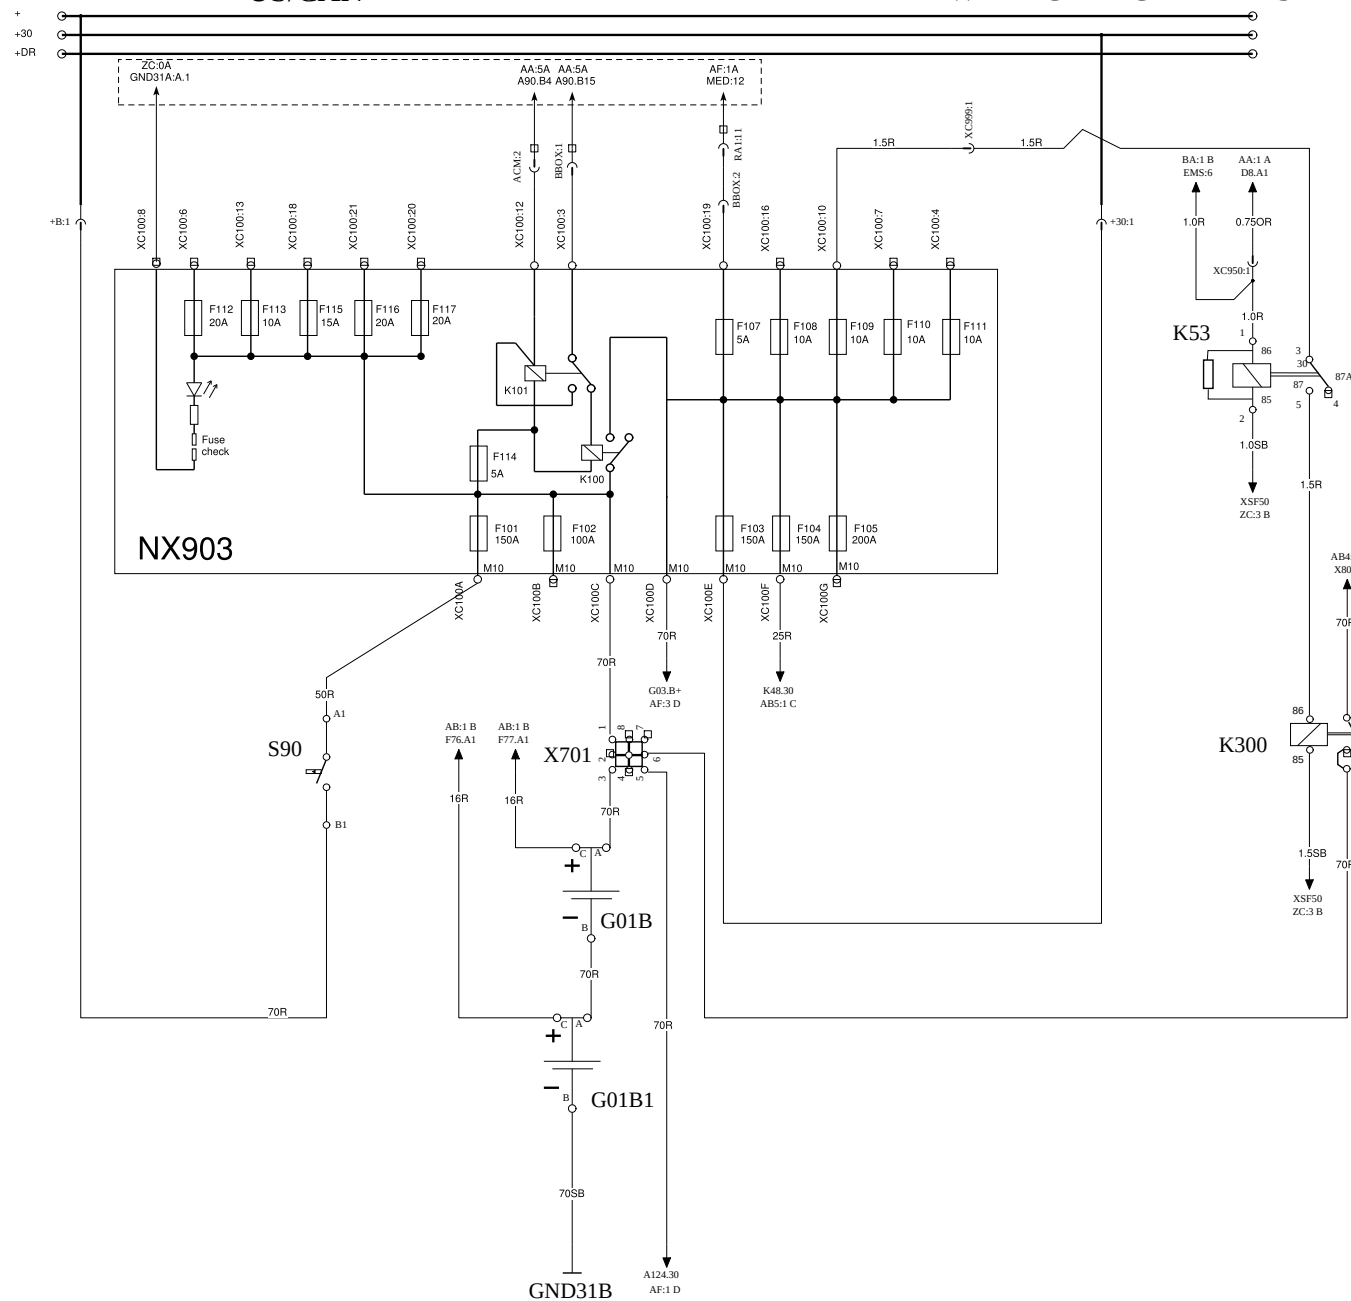


CONSUMER BATTERY

US/CAN


WIRING DIAGRAM AB4

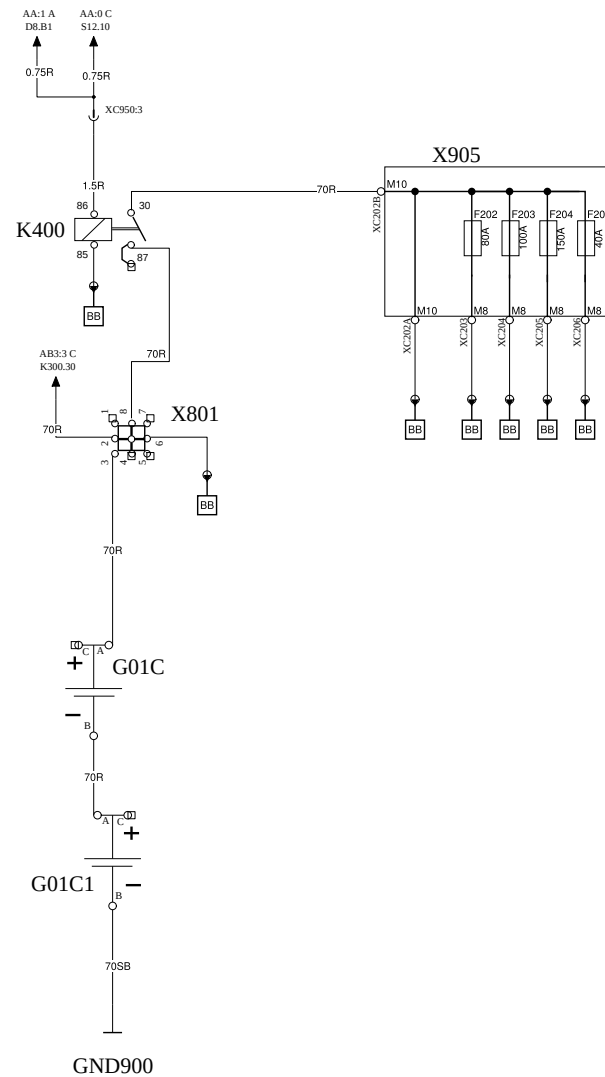

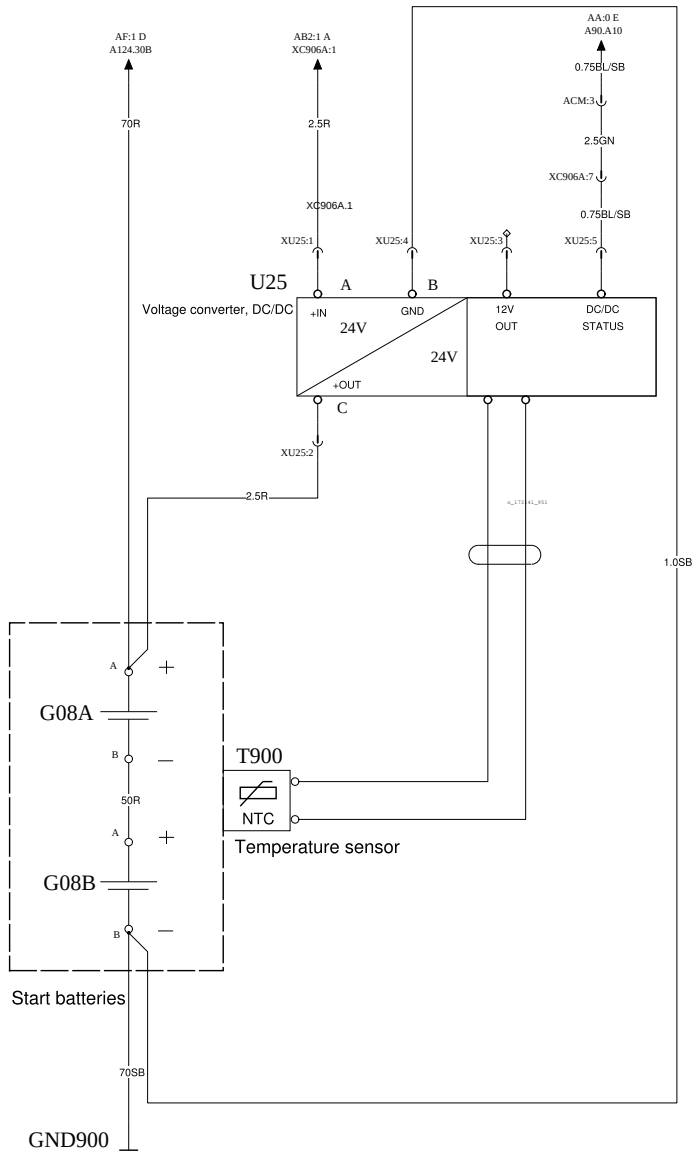

STARTER MOTOR AND ALTERNATORS


WIRING DIAGRAM AF

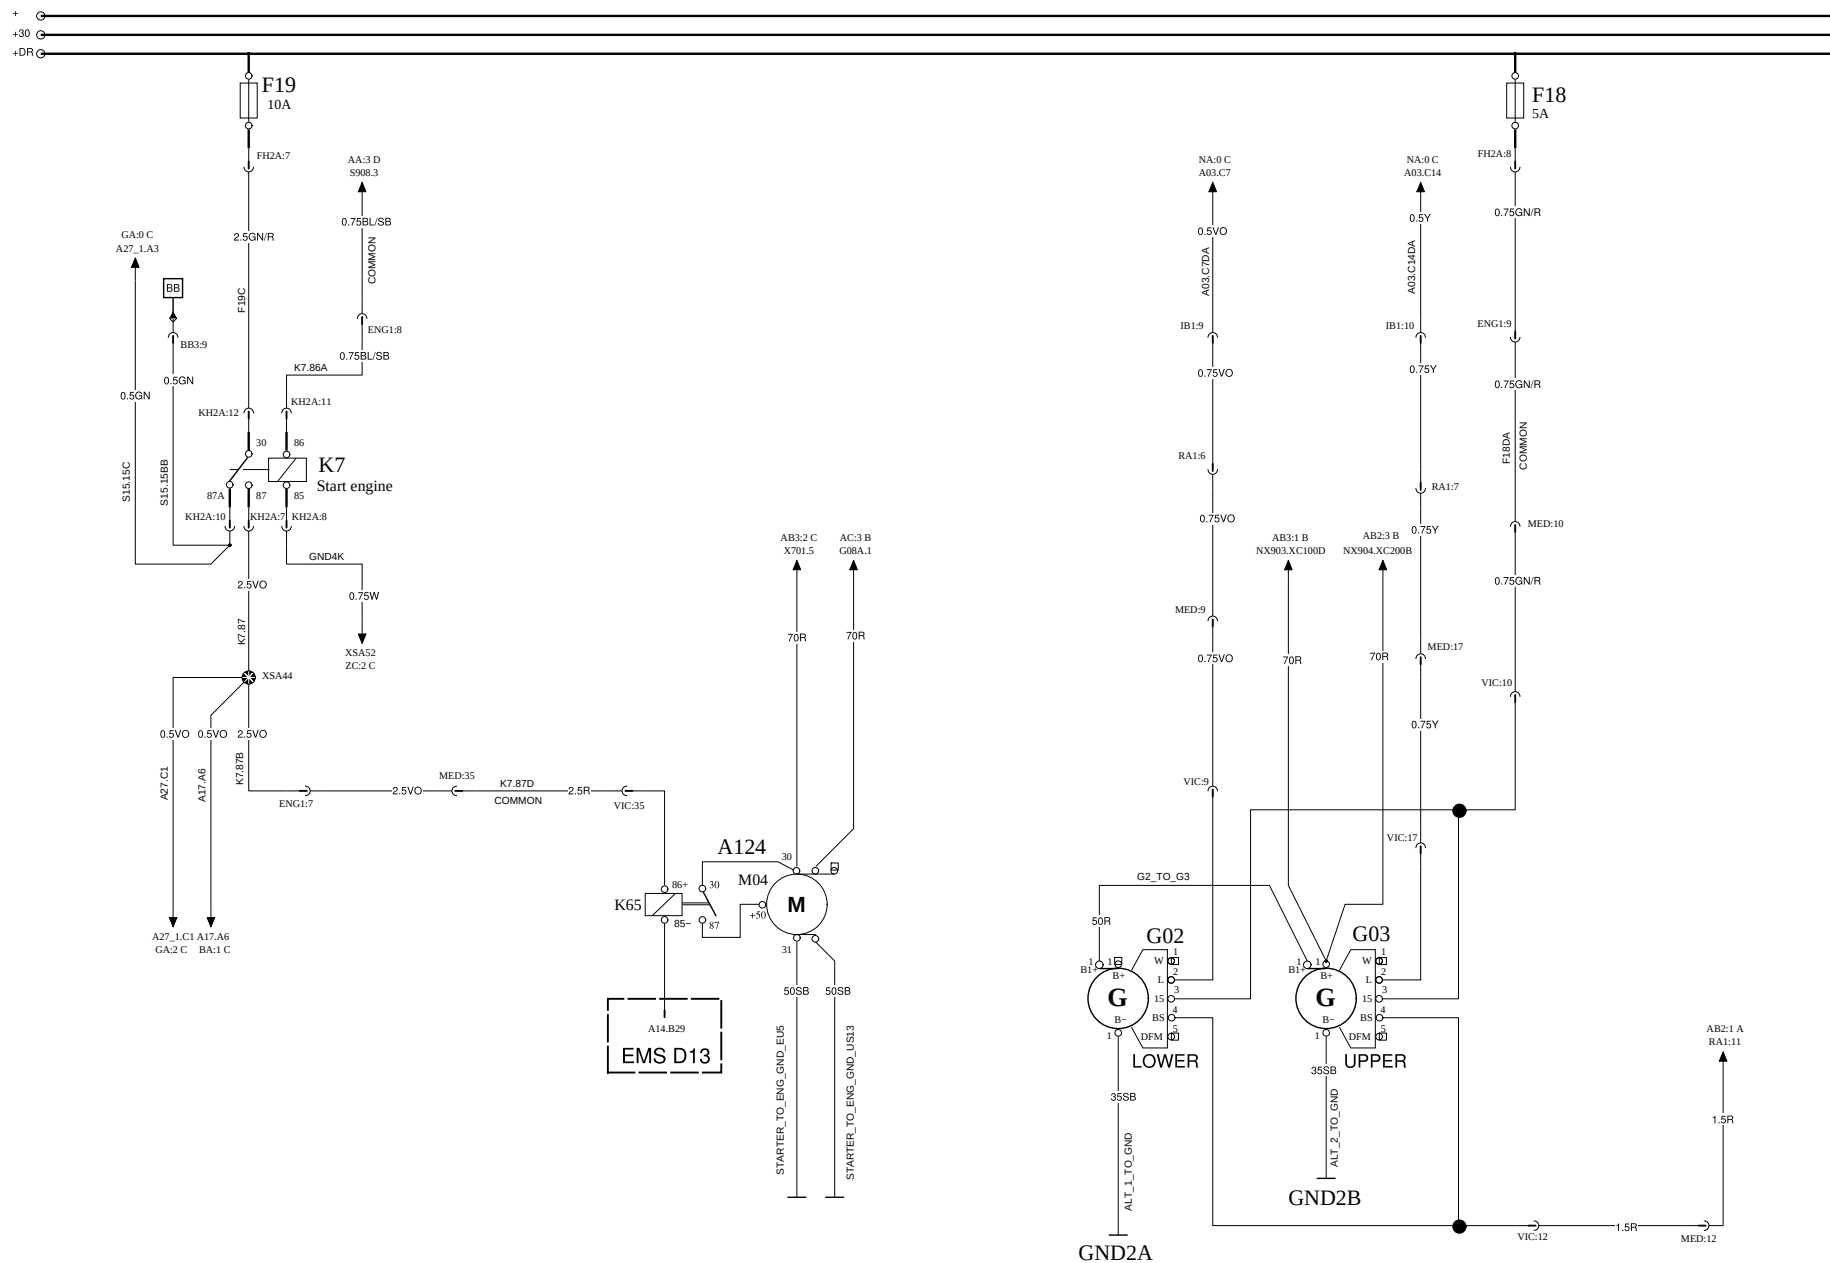

VECU

VEHICLE ECU


WIRING DIAGRAM BA

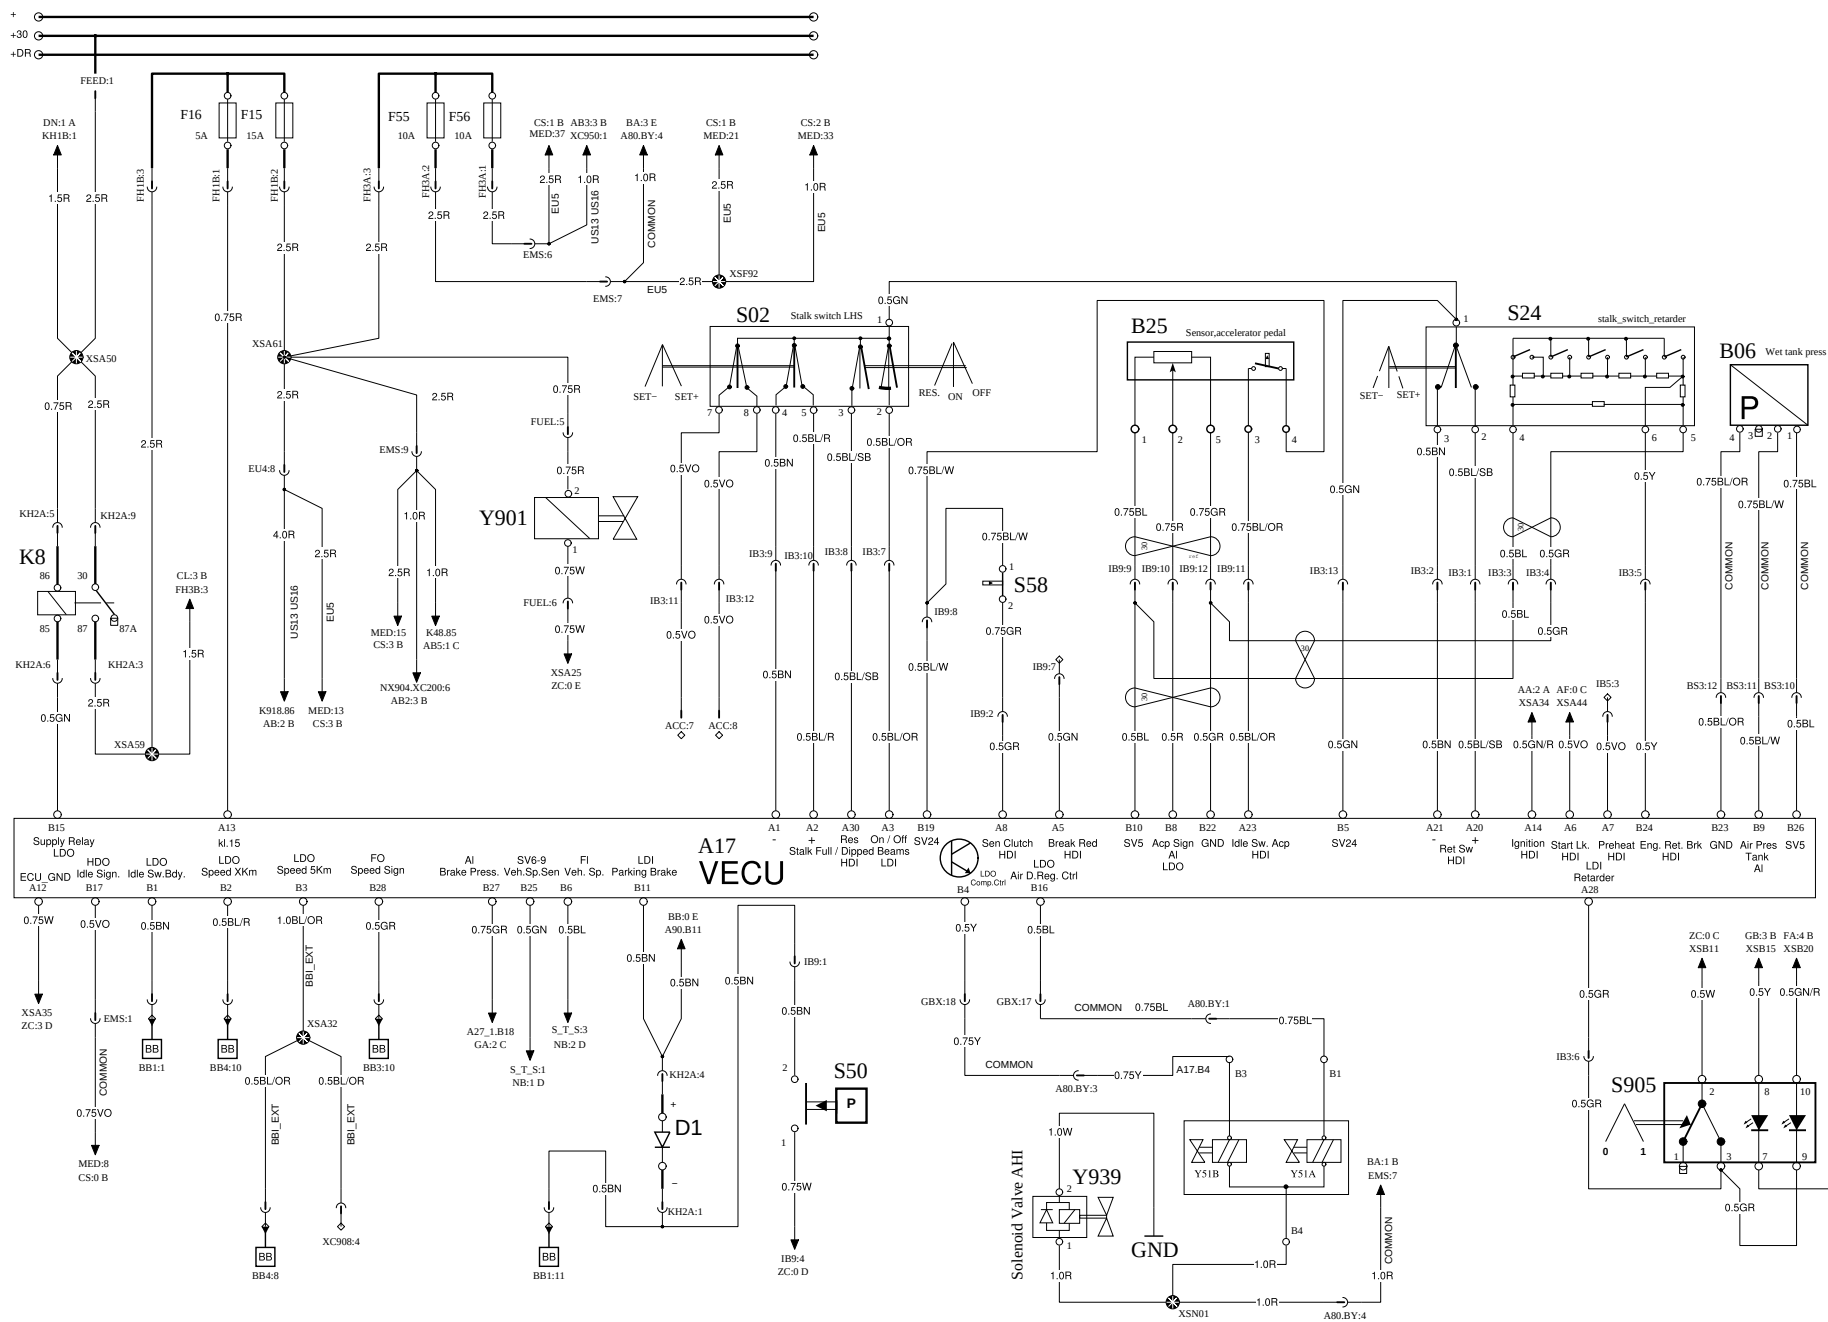


BBM


BODY BUILDER MODULE

WIRING DIAGRAM BB

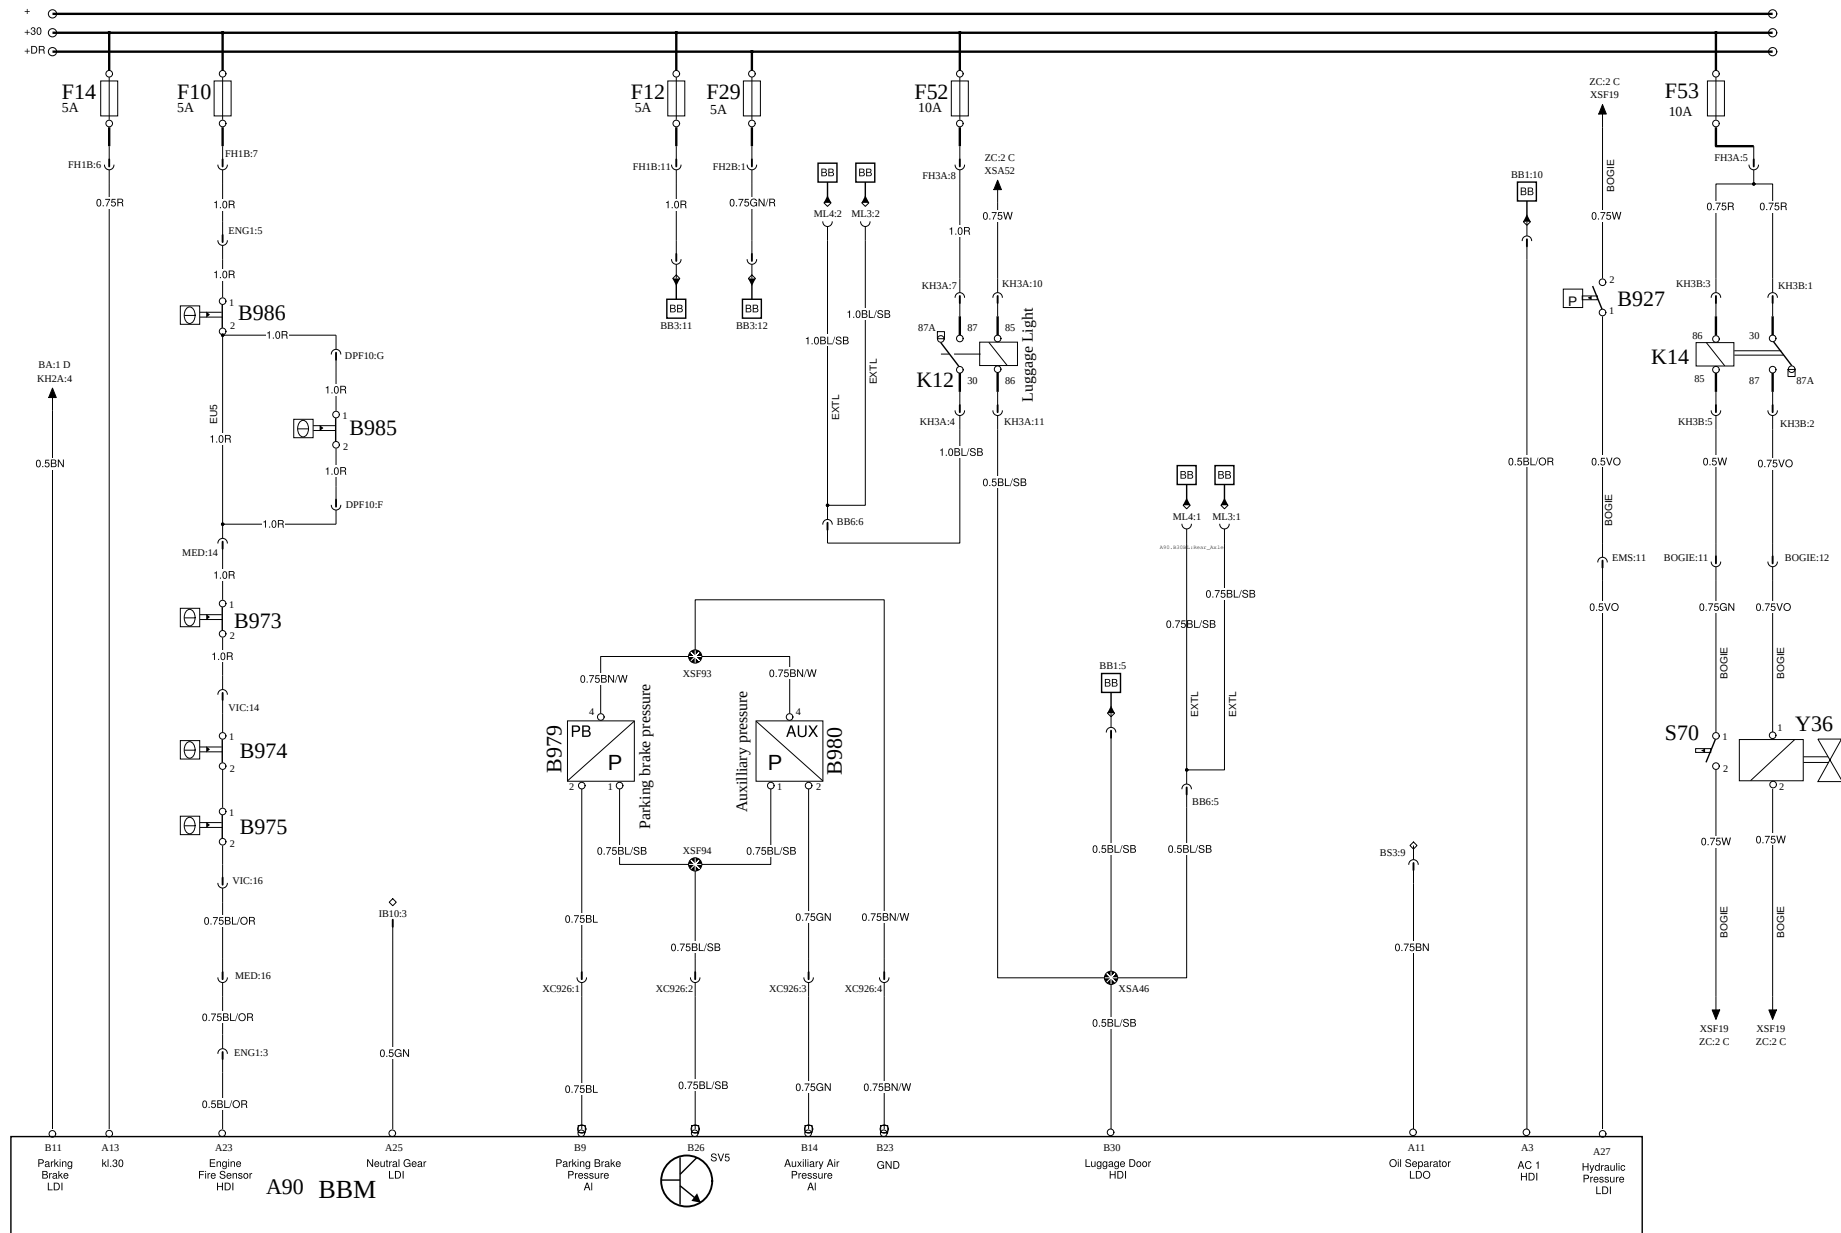


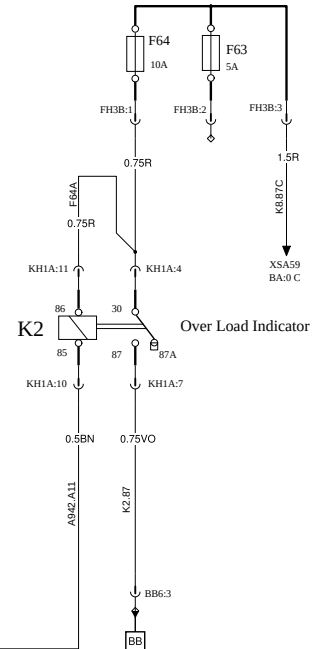


Document title		Document No	Issue	Volume	Page
WIRING DIAGRAM		22610880	02	02(03)	13(46)
Document type					
PRODUCT SCHEMATIC					

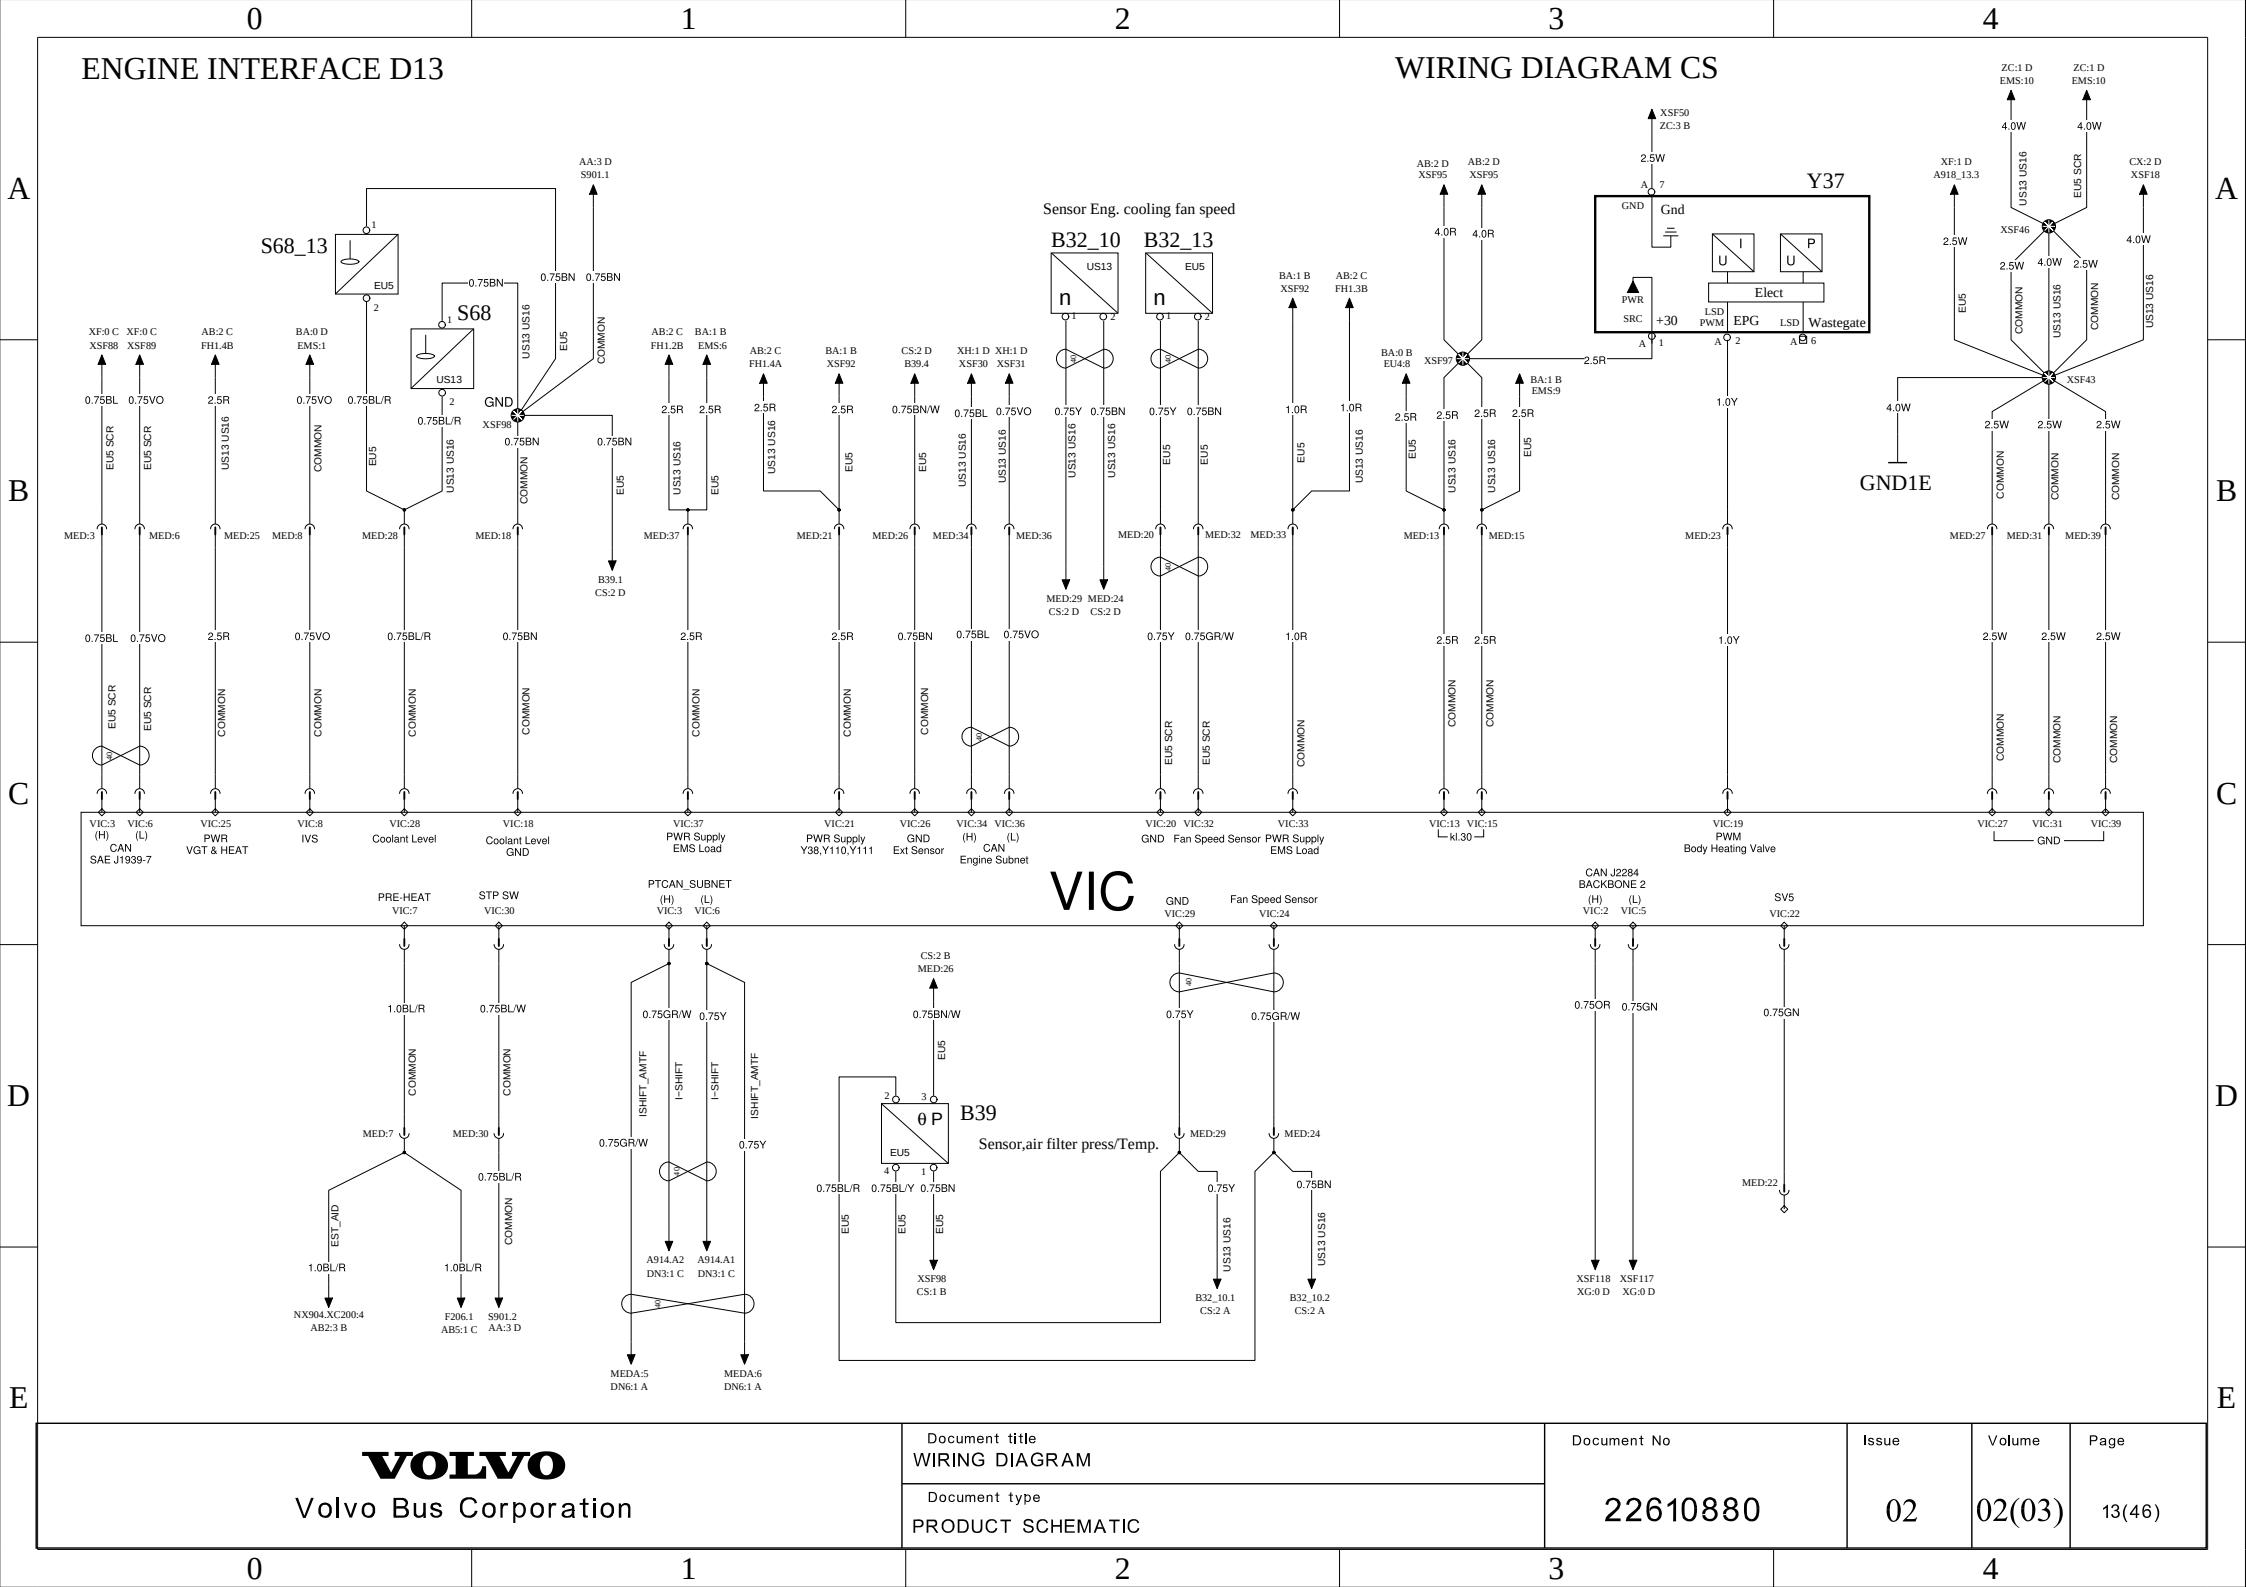

E

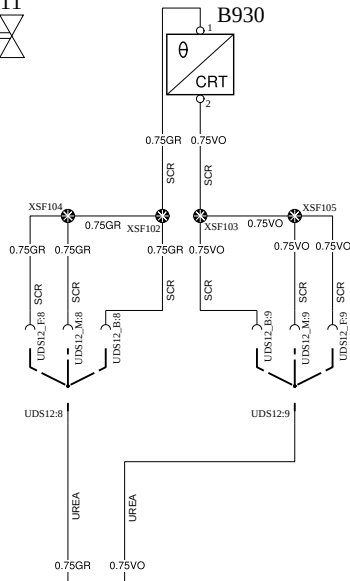


F

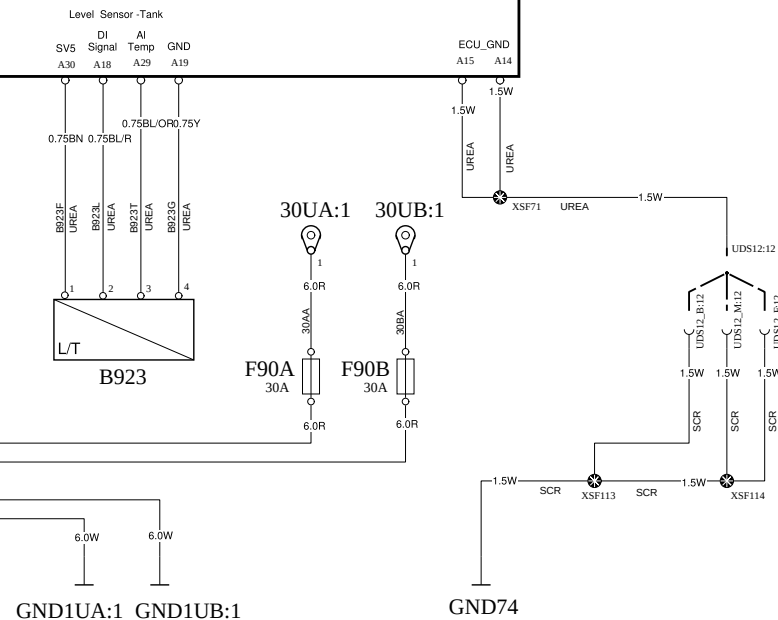





CONNECTIONS FOR AMT-D

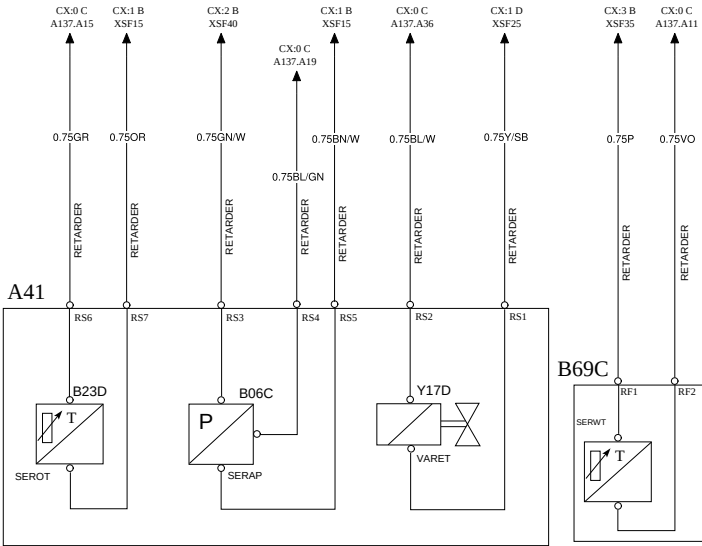

CONNECTIONS FOR AMT-F

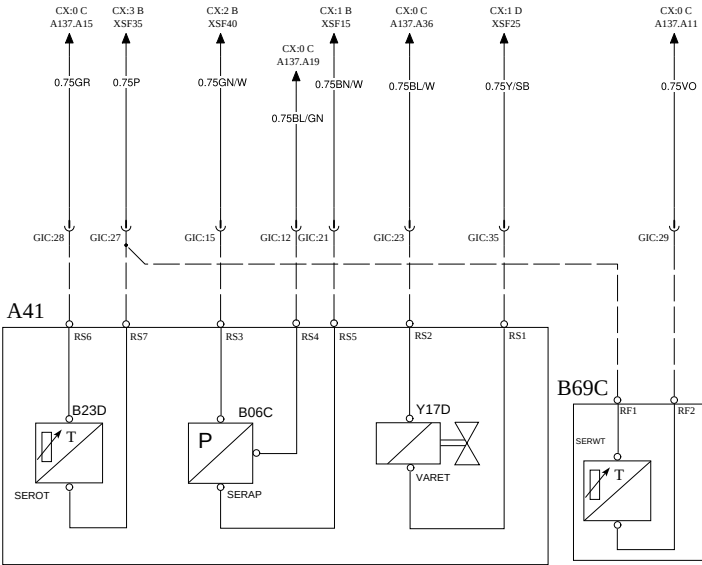

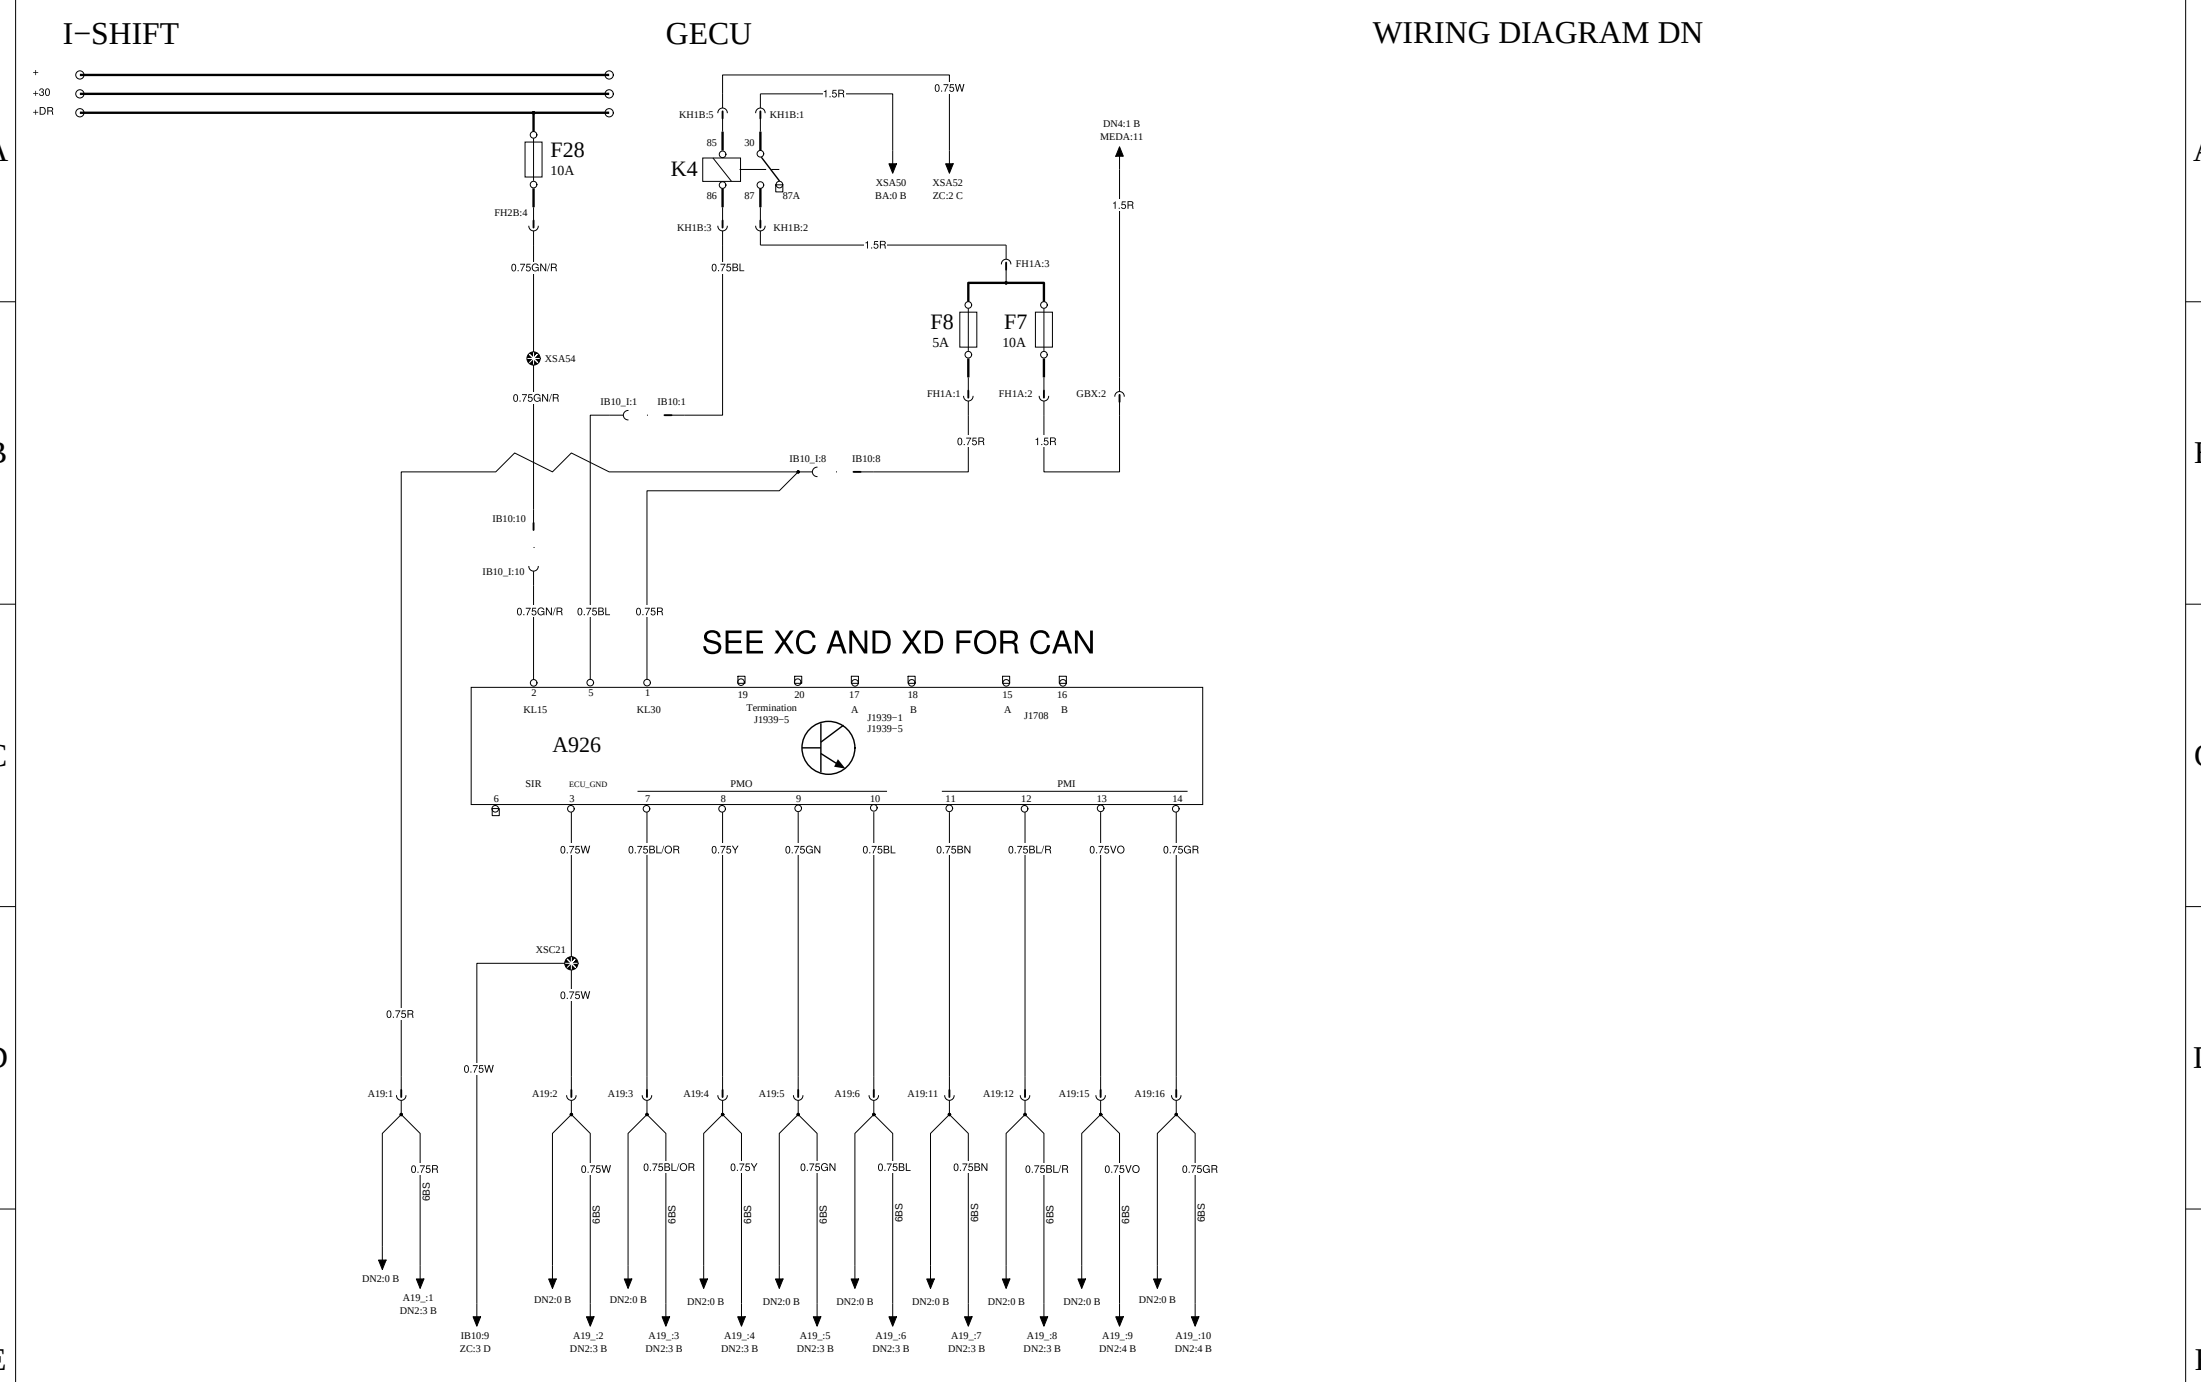



I-SHIFT

GEAR LEVER

WIRING DIAGRAM DN2

GEAR LEVER GSS-STD, GSS-PRO AND GSS-4BS

GEAR LEVER GSS-6BS

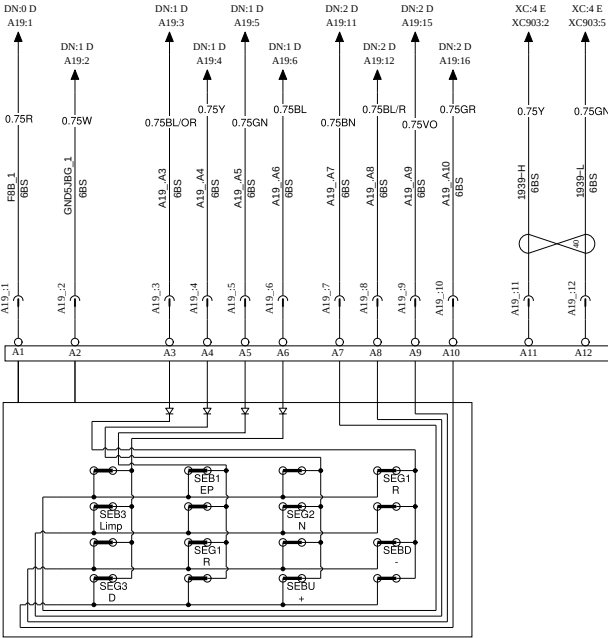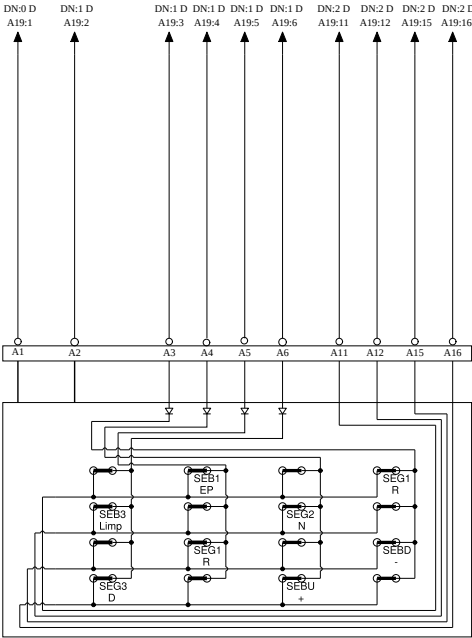

CONNECTIONS

PIN	SIGNAL NAME	ASSIGNMENT
1	UBATT	MAIN SUPPLY
2	GND	MAIN GROUND
3	INP1	MATRIX INPUT 1
4	INP2	MATRIX INPUT 2
5	INP3	MATRIX INPUT 3
6	INP4	MATRIX INPUT 4
11	OUP1	MATRIX OUTPUT 1
12	OUP2	MATRIX OUTPUT 2
15	OUP3	MATRIX OUTPUT 3
16	OUP4	MATRIX OUTPUT 4


CONNECTIONS

PIN	SIGNAL NAME	ASSIGNMENT	PIN	SIGNAL NAME
1	UBATT	MAIN SUPPLY	11	J1939-H
2	GND	MAIN GROUND	12	J1939-L
3	INP1	MATRIX INPUT 1		
4	INP2	MATRIX INPUT 2		
5	INP3	MATRIX INPUT 3		
6	INP4	MATRIX INPUT 4		
7	OUP1	MATRIX OUTPUT 1		
8	OUP2	MATRIX OUTPUT 2		
9	OUP3	MATRIX OUTPUT 3		
10	OUP4	MATRIX OUTPUT 4		

I-SHIFT

AMT-D FOR US/CAN


WIRING DIAGRAM DN3

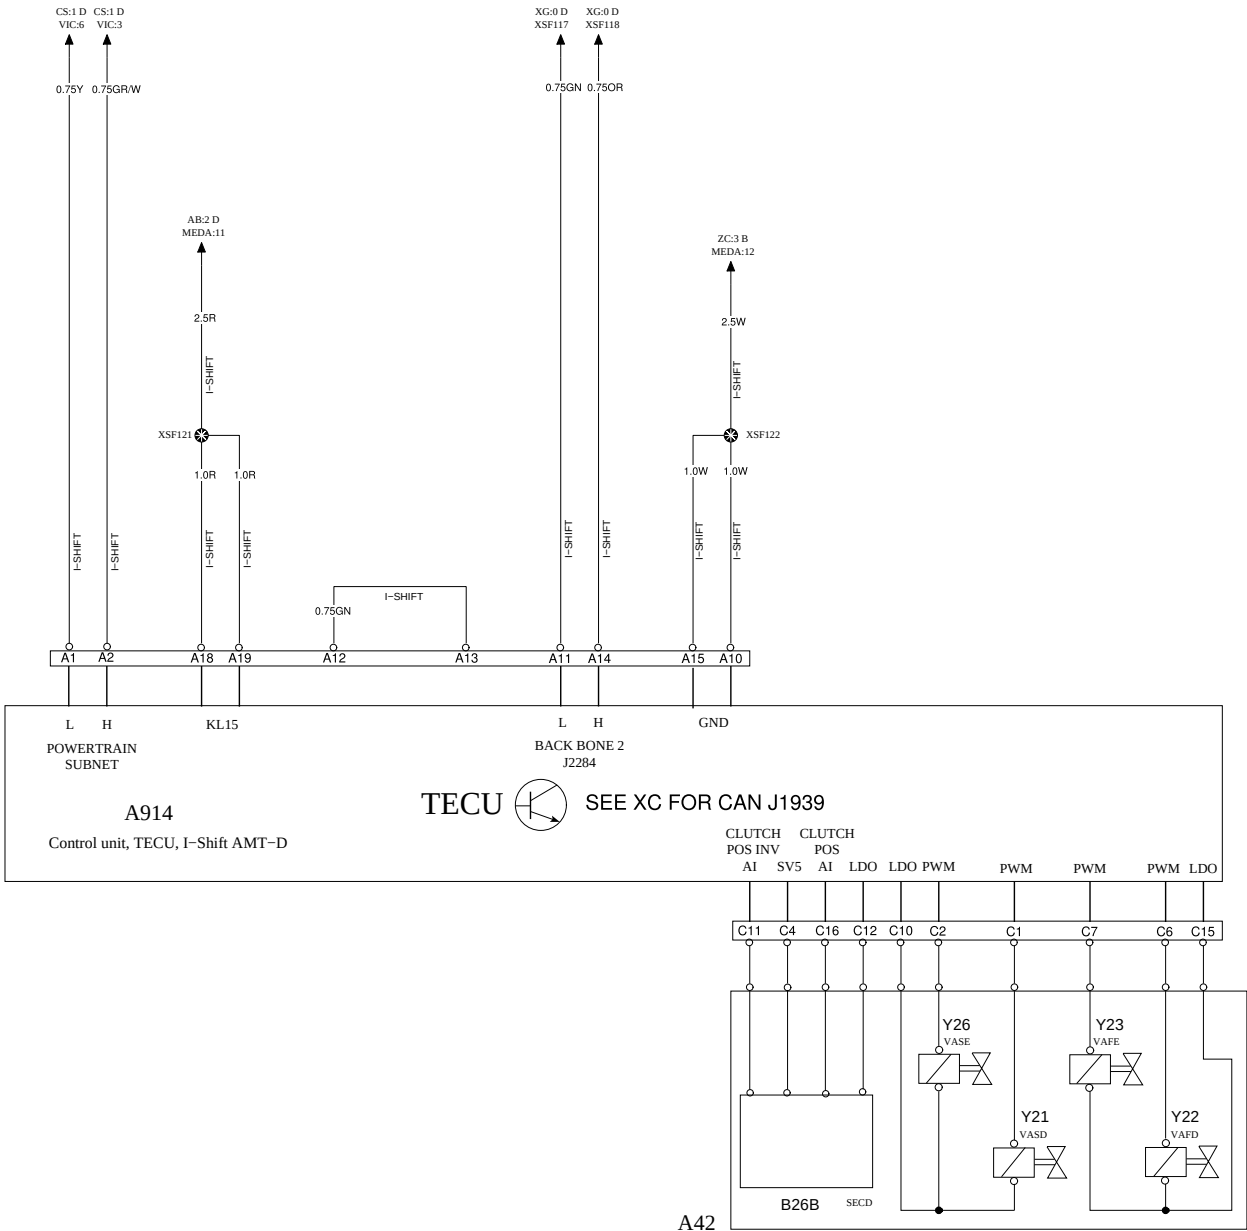

I-SHIFT AND RETARDER

AMT-D FOR EURO 5

WIRING DIAGRAM DN4

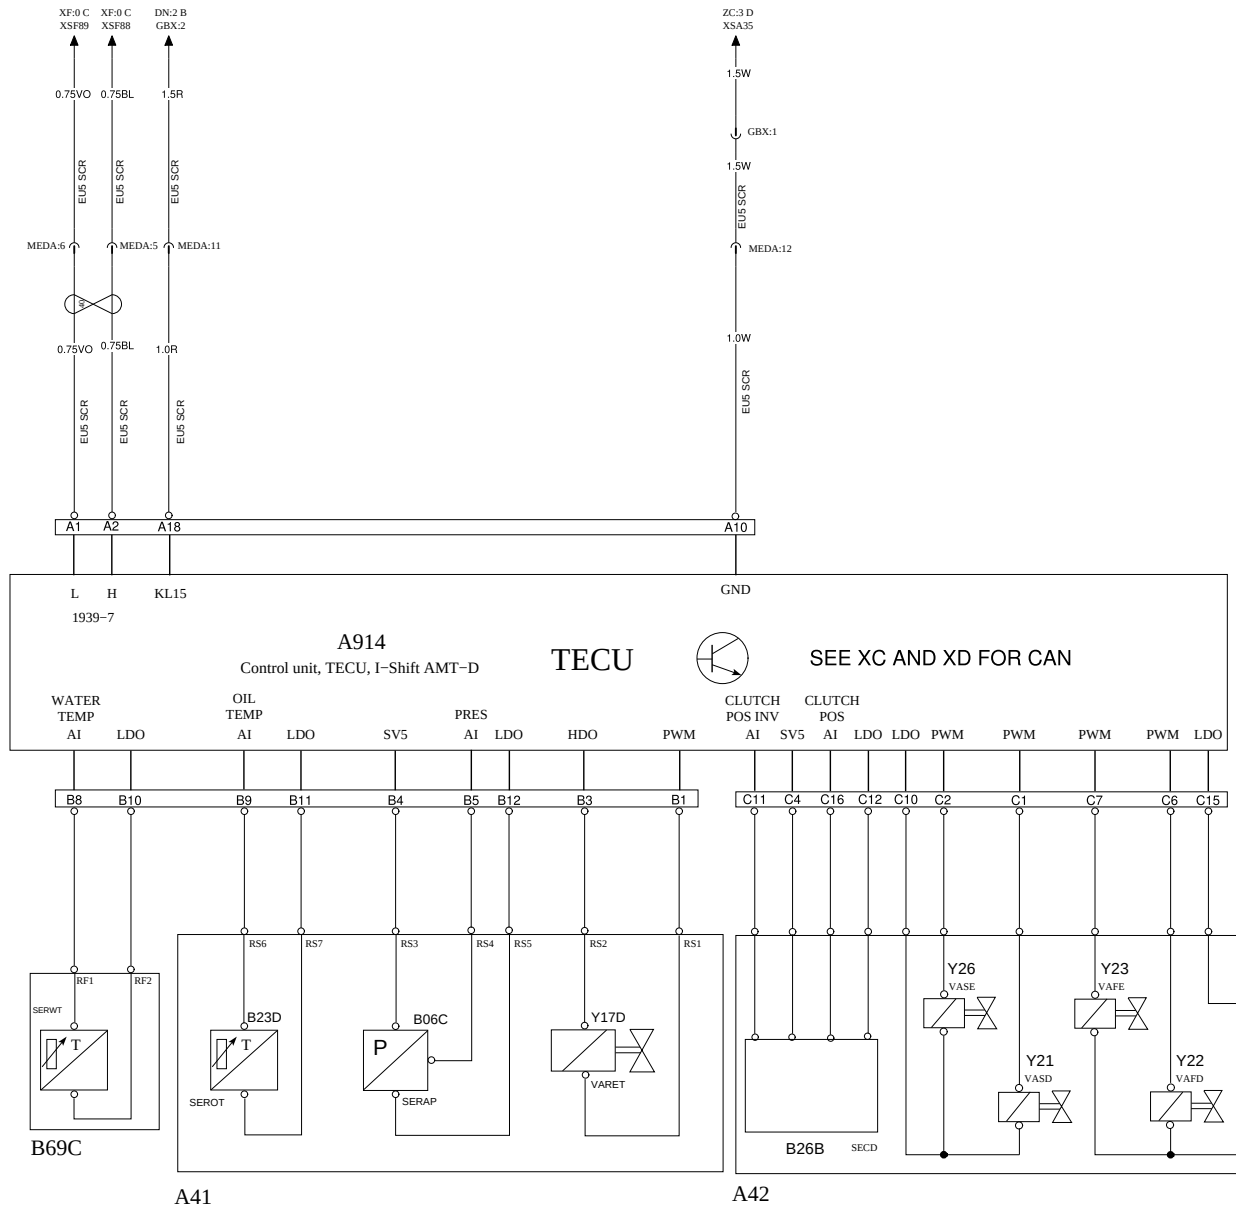




I-SHIFT


AMT-F FOR US/CAN


WIRING DIAGRAM DN6

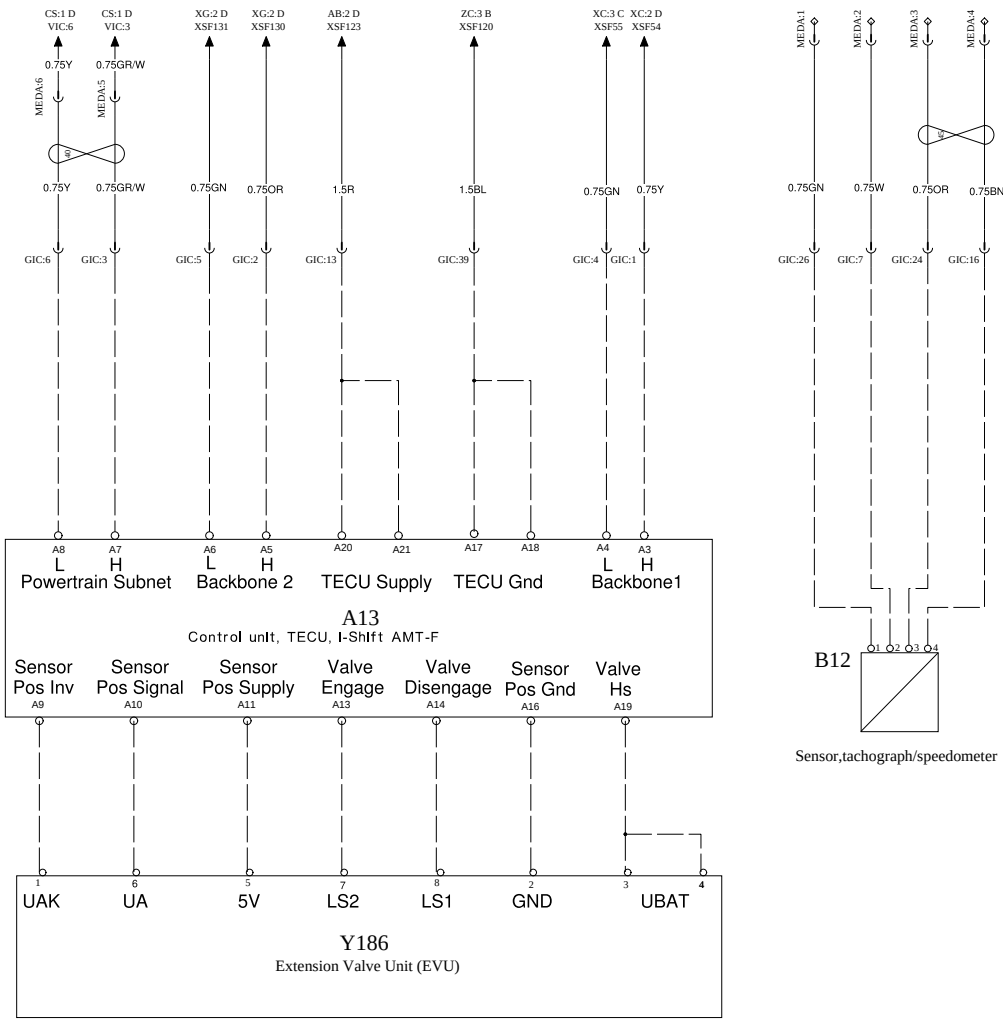

EBS


WIRING DIAGRAM EO

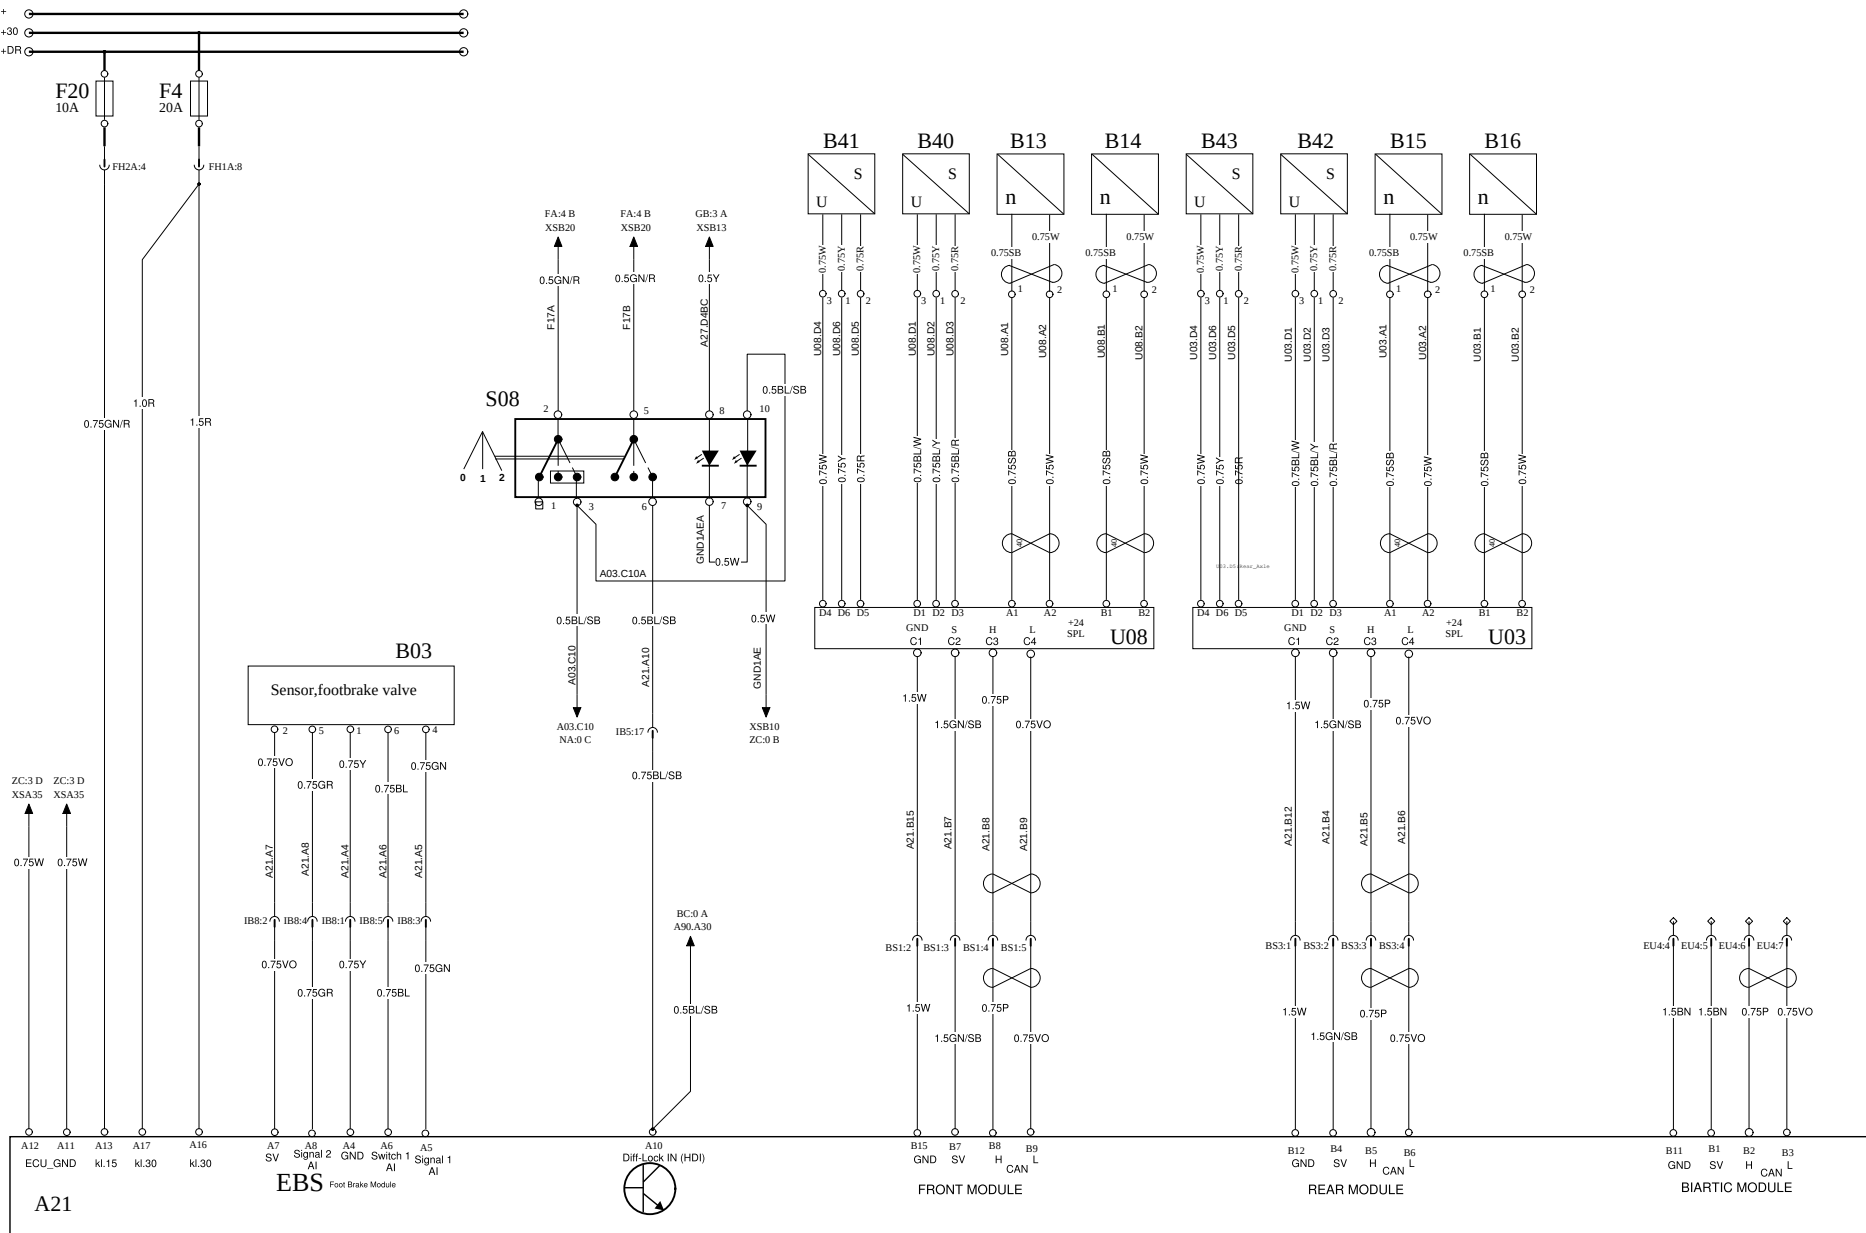

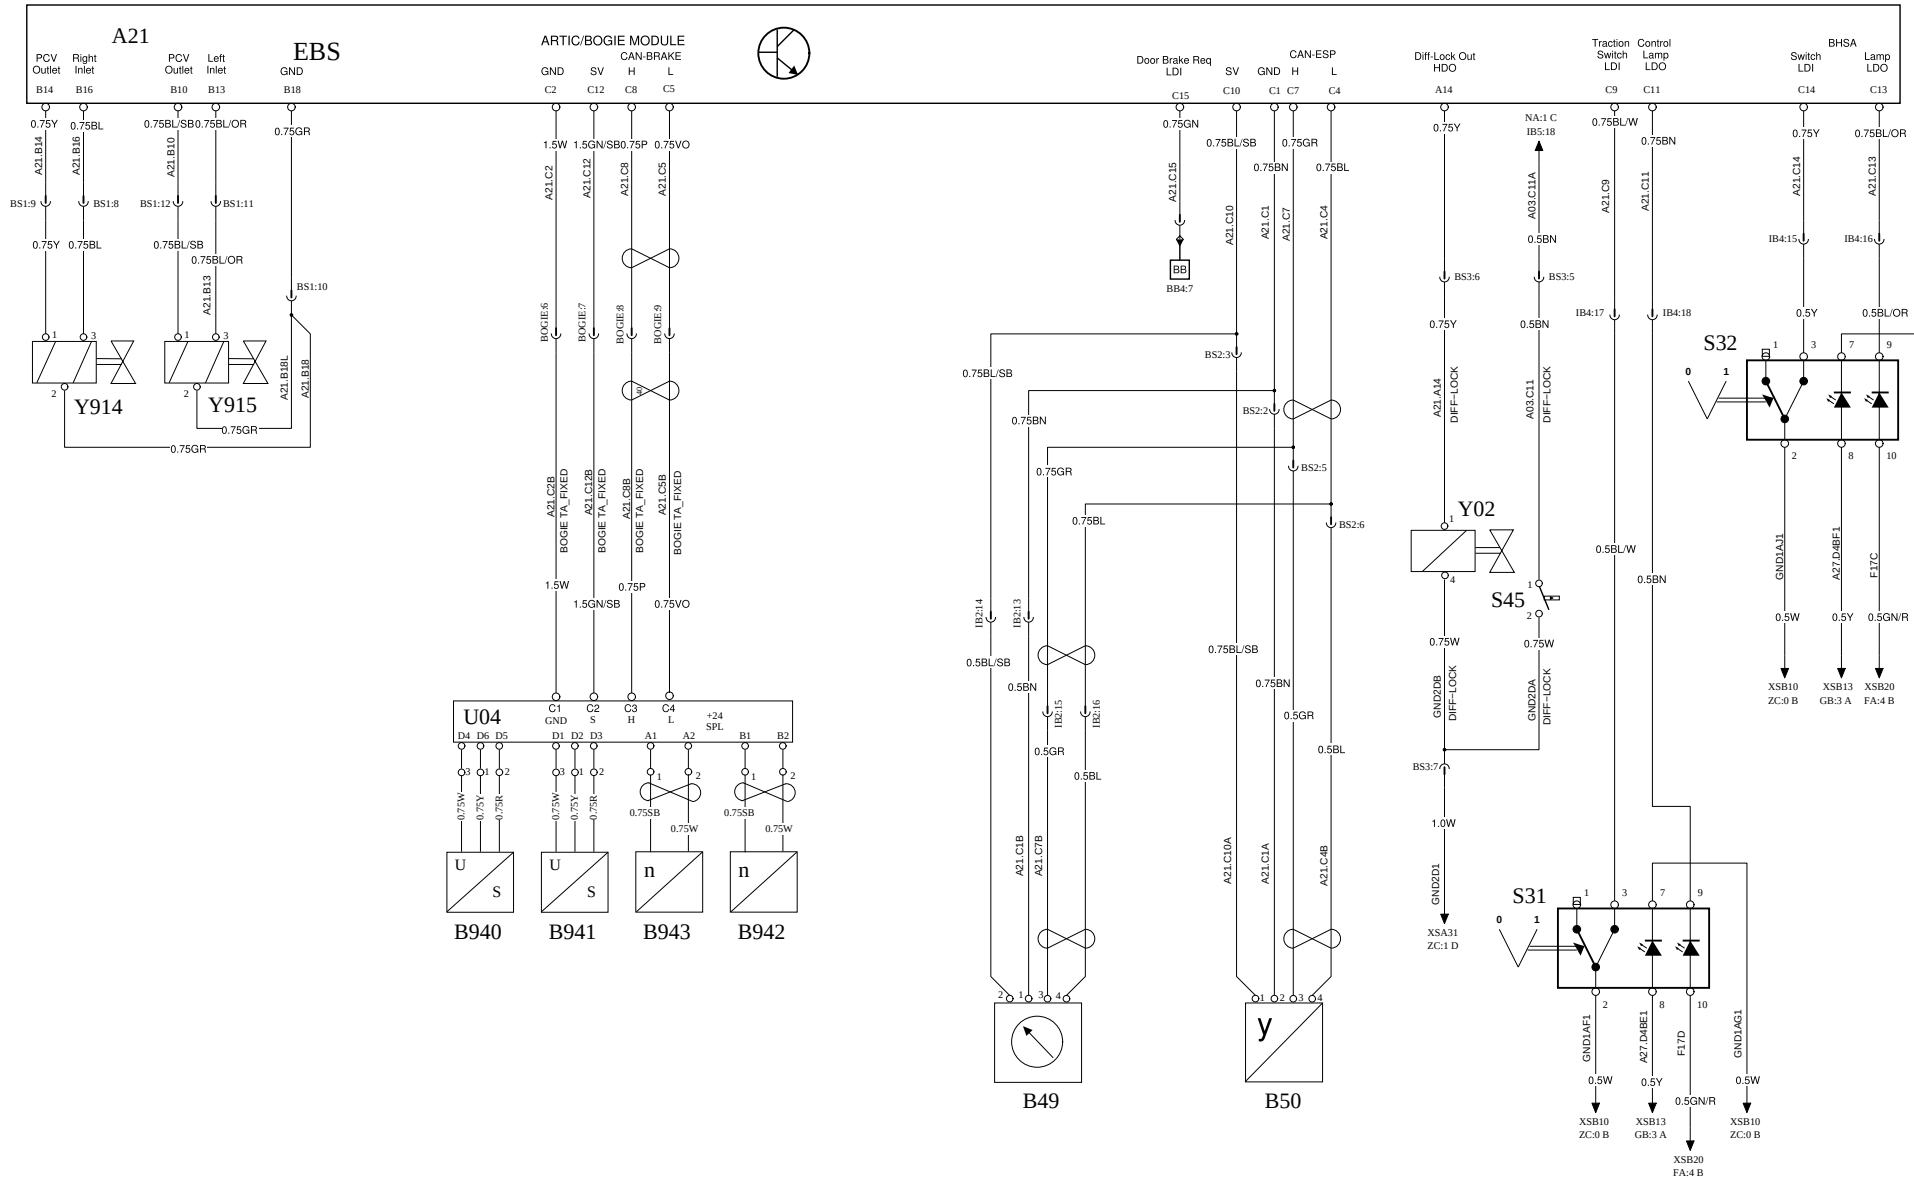


AIR SUSPENSION ECS


WIRING DIAGRAM FA

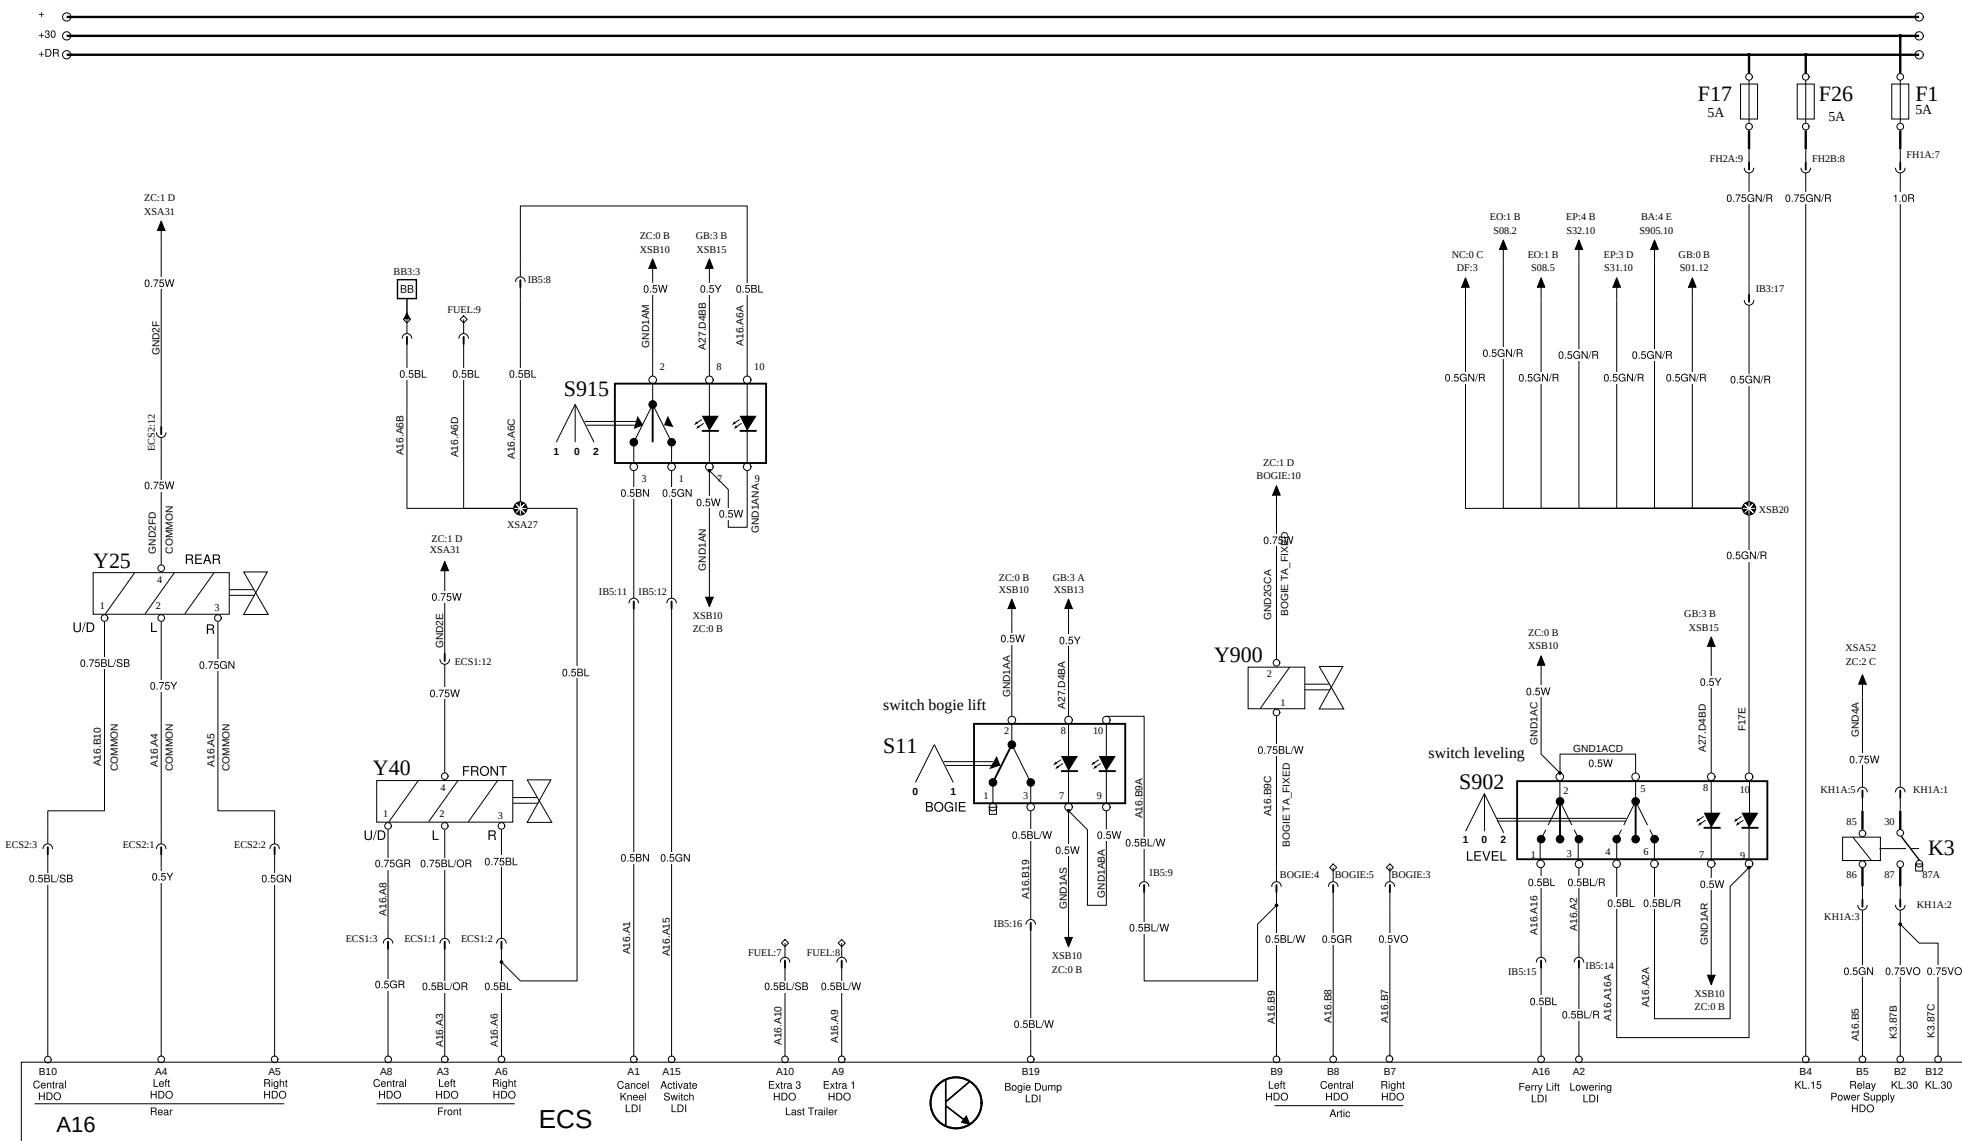

AIR SUSPENSION ECS

WIRING DIAGRAM FB

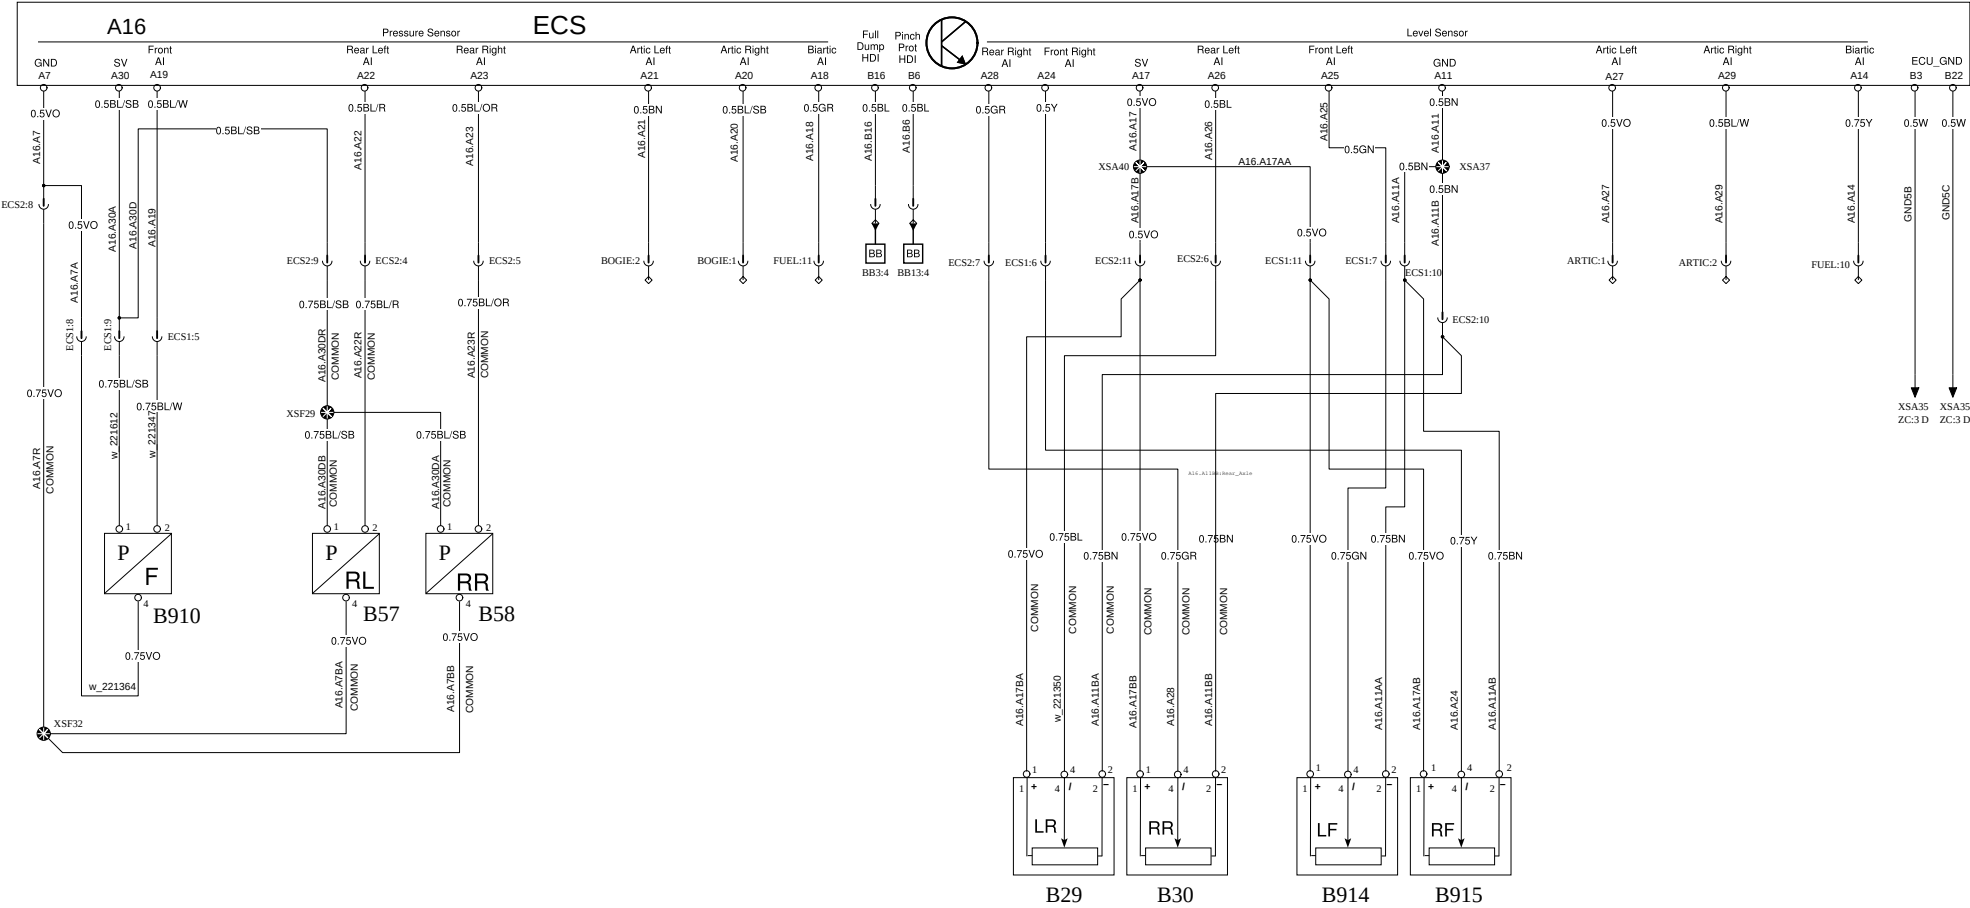


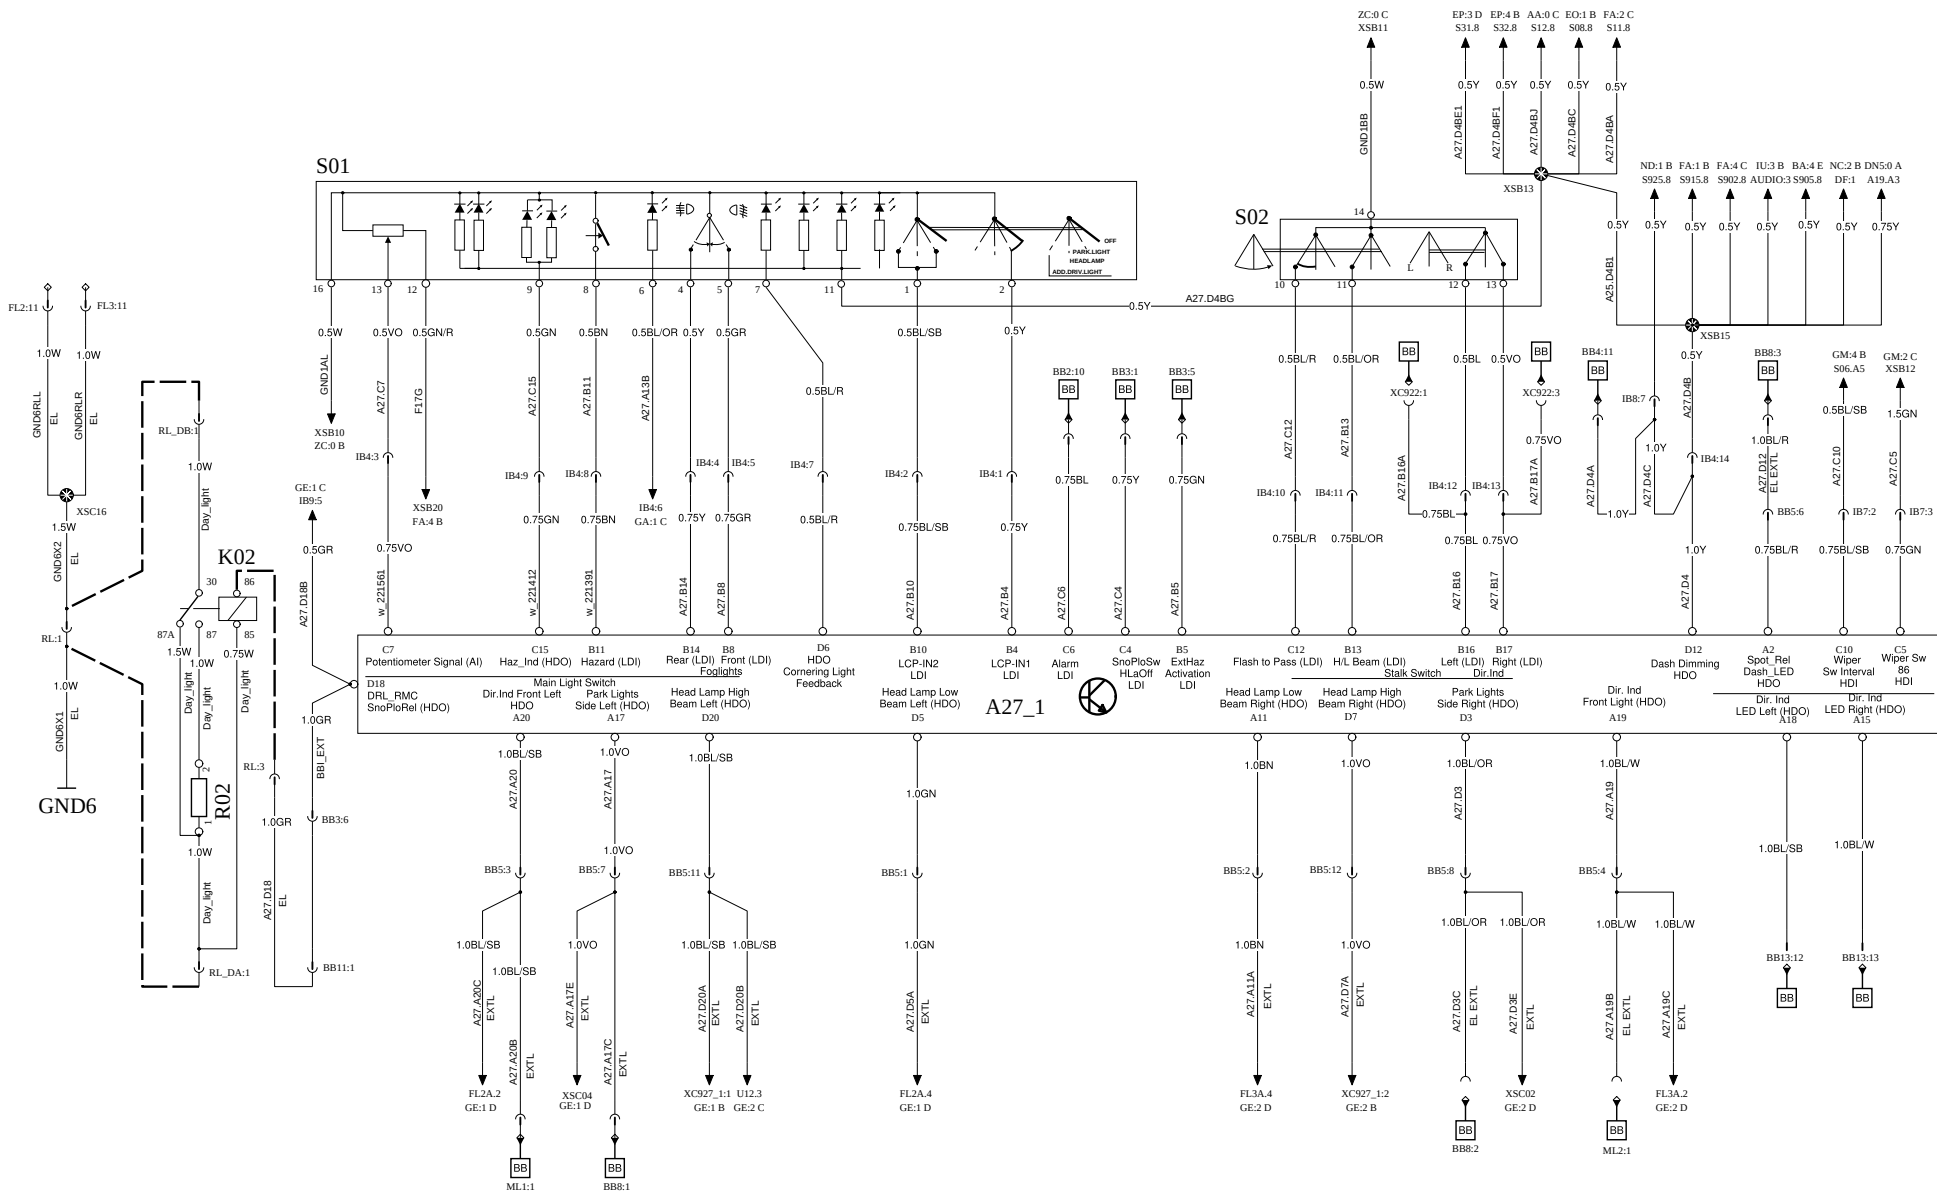




WIPER, WASHER

WIRING DIAGRAM GM

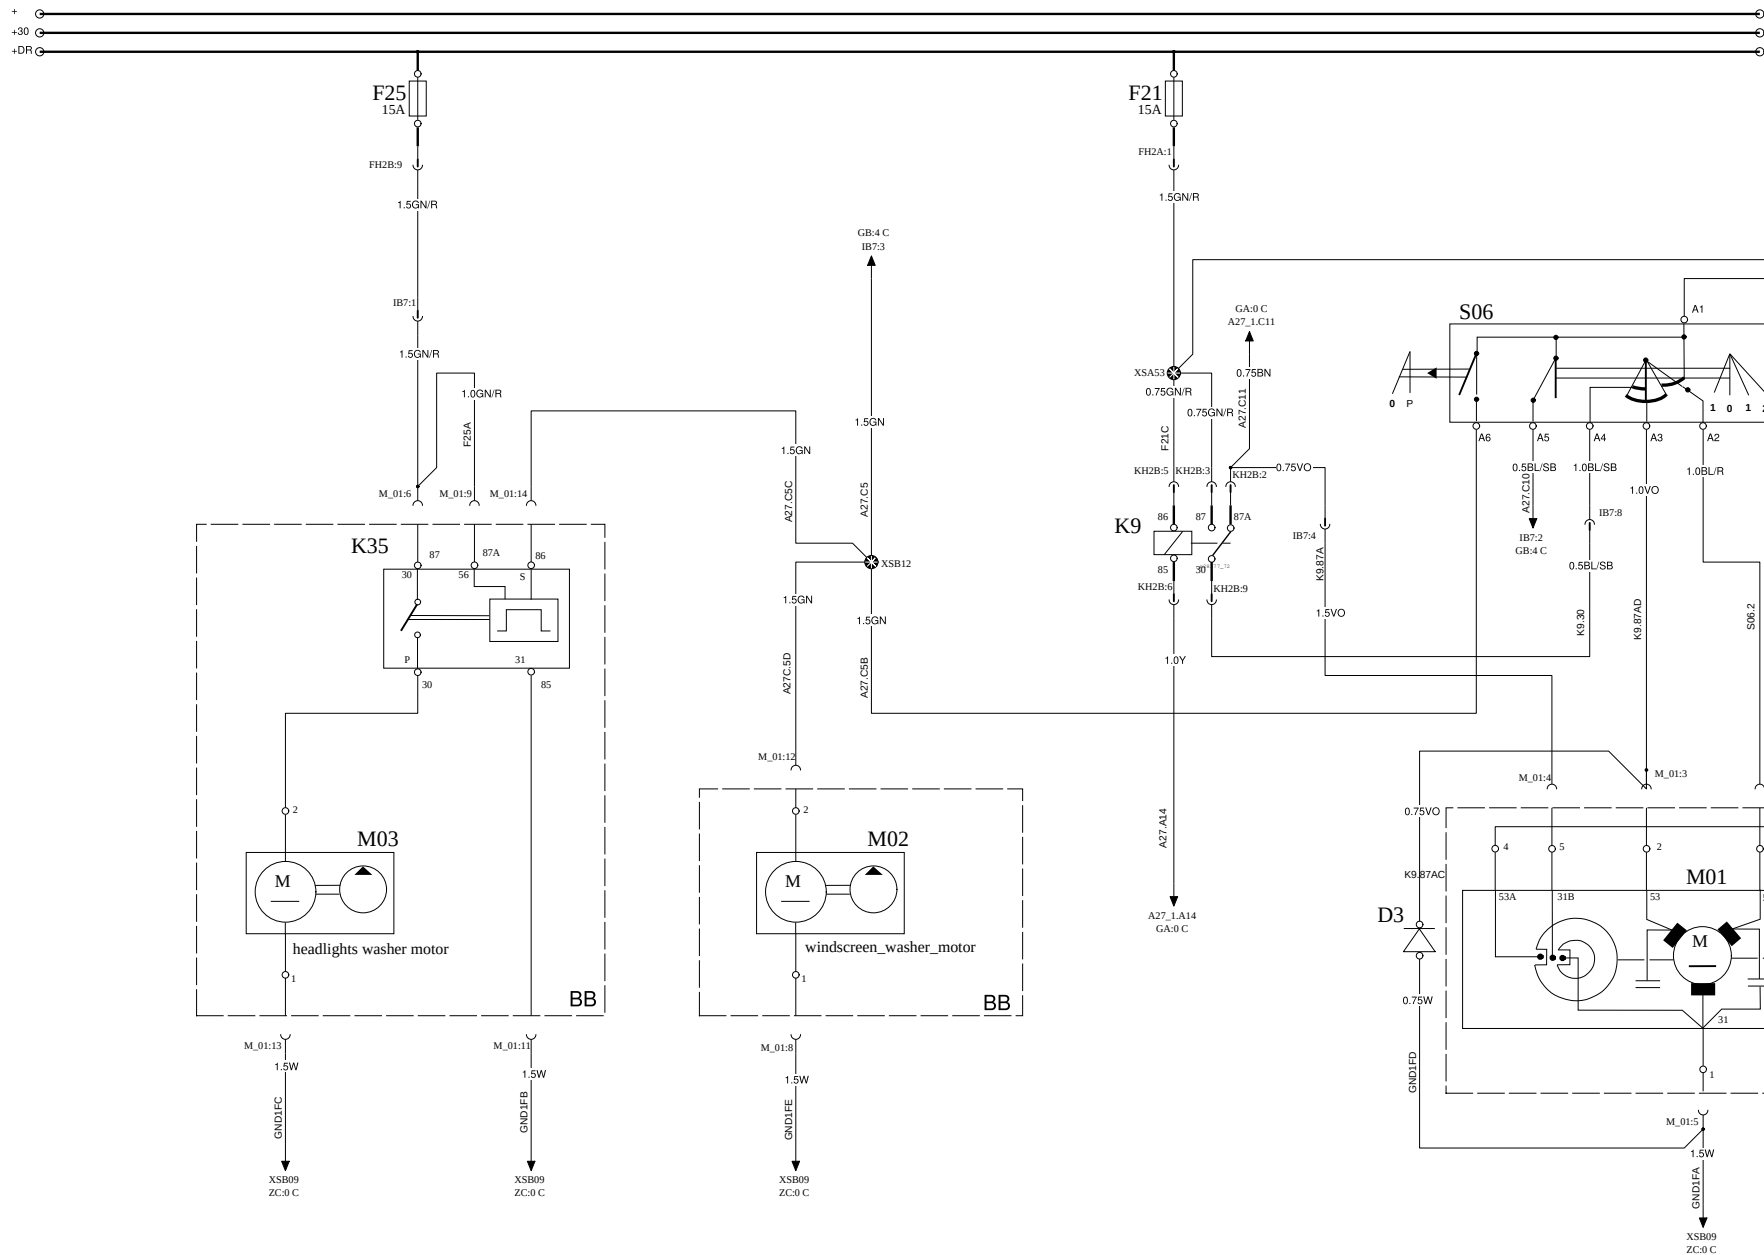


HORN, SWM

WIRING DIAGRAM IS

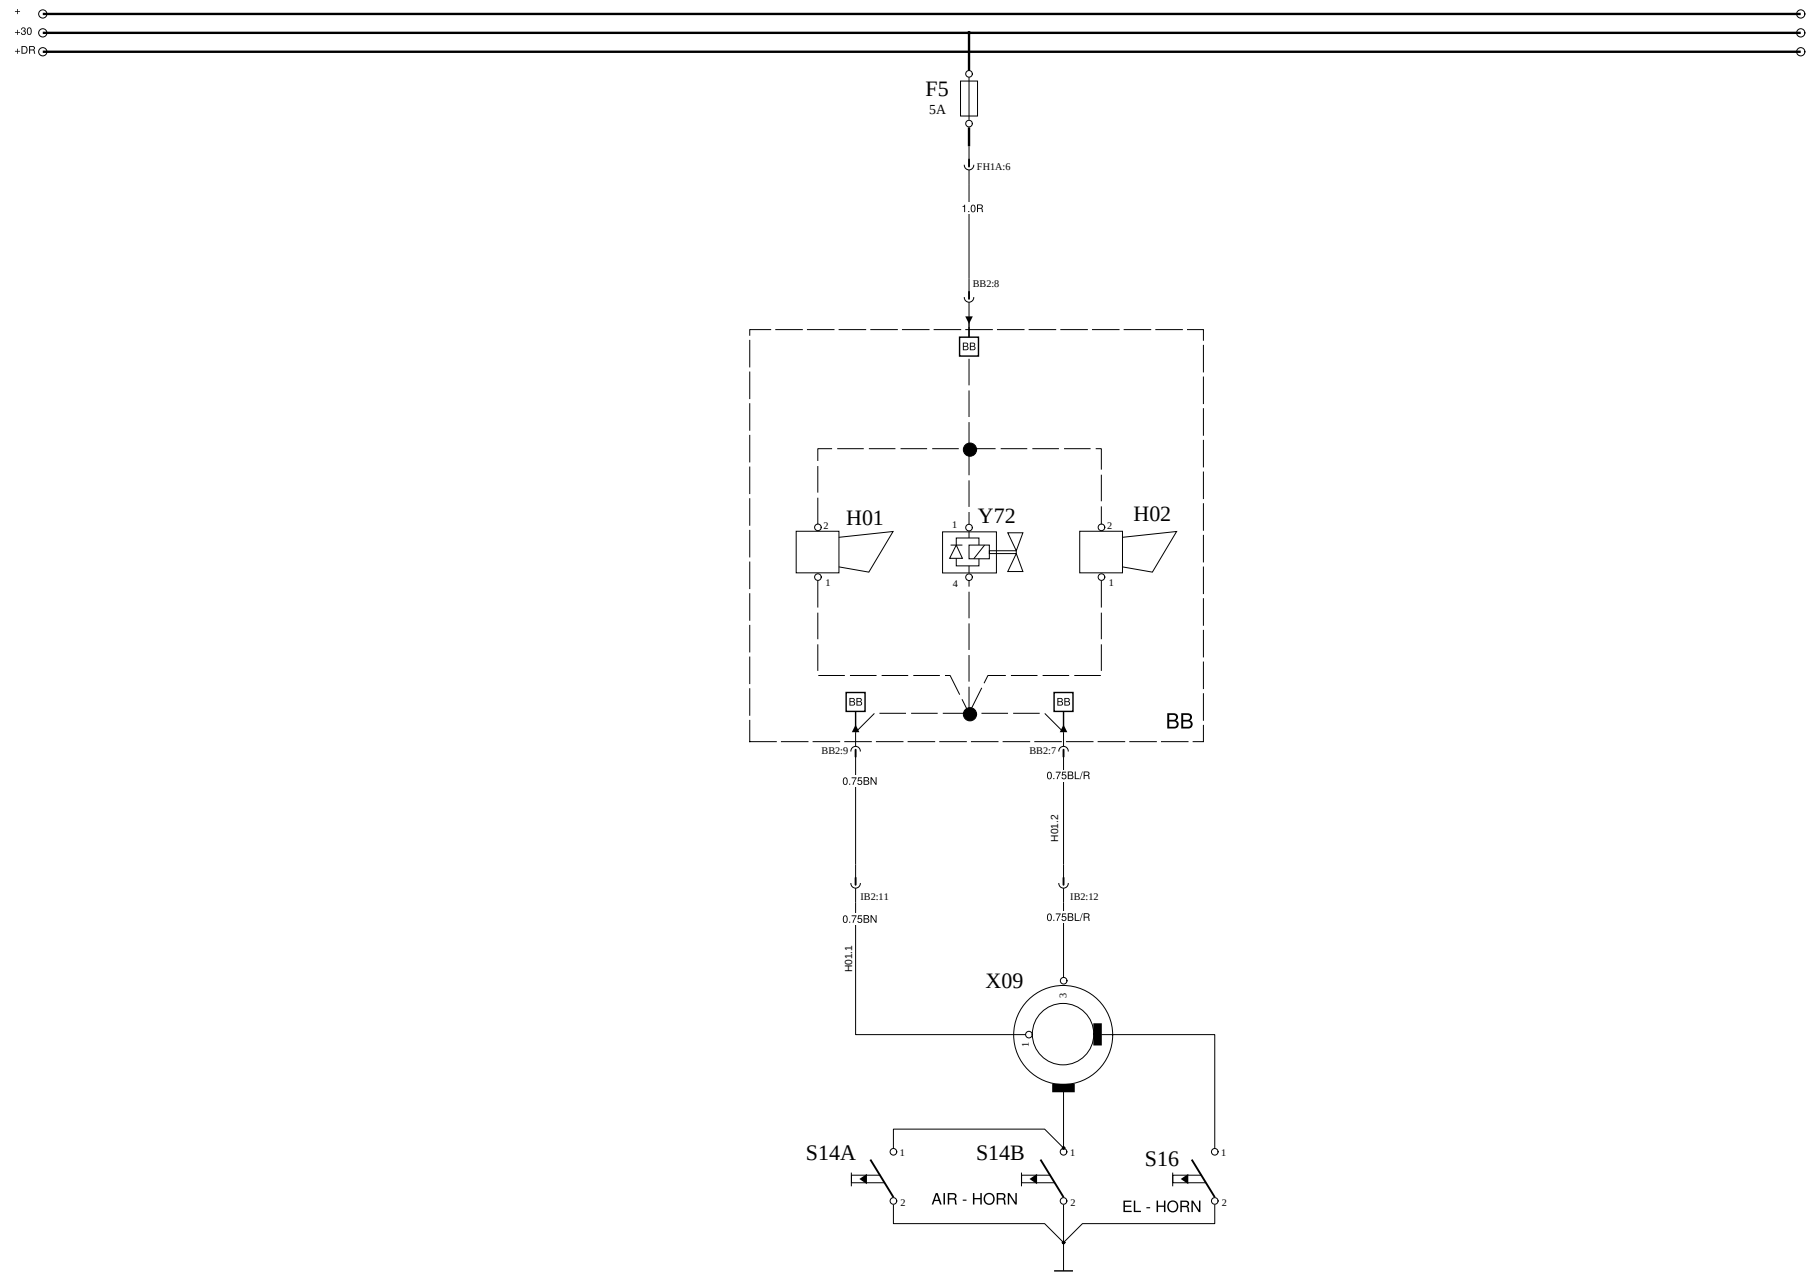


AUDIO

WIRING DIAGRAM IU

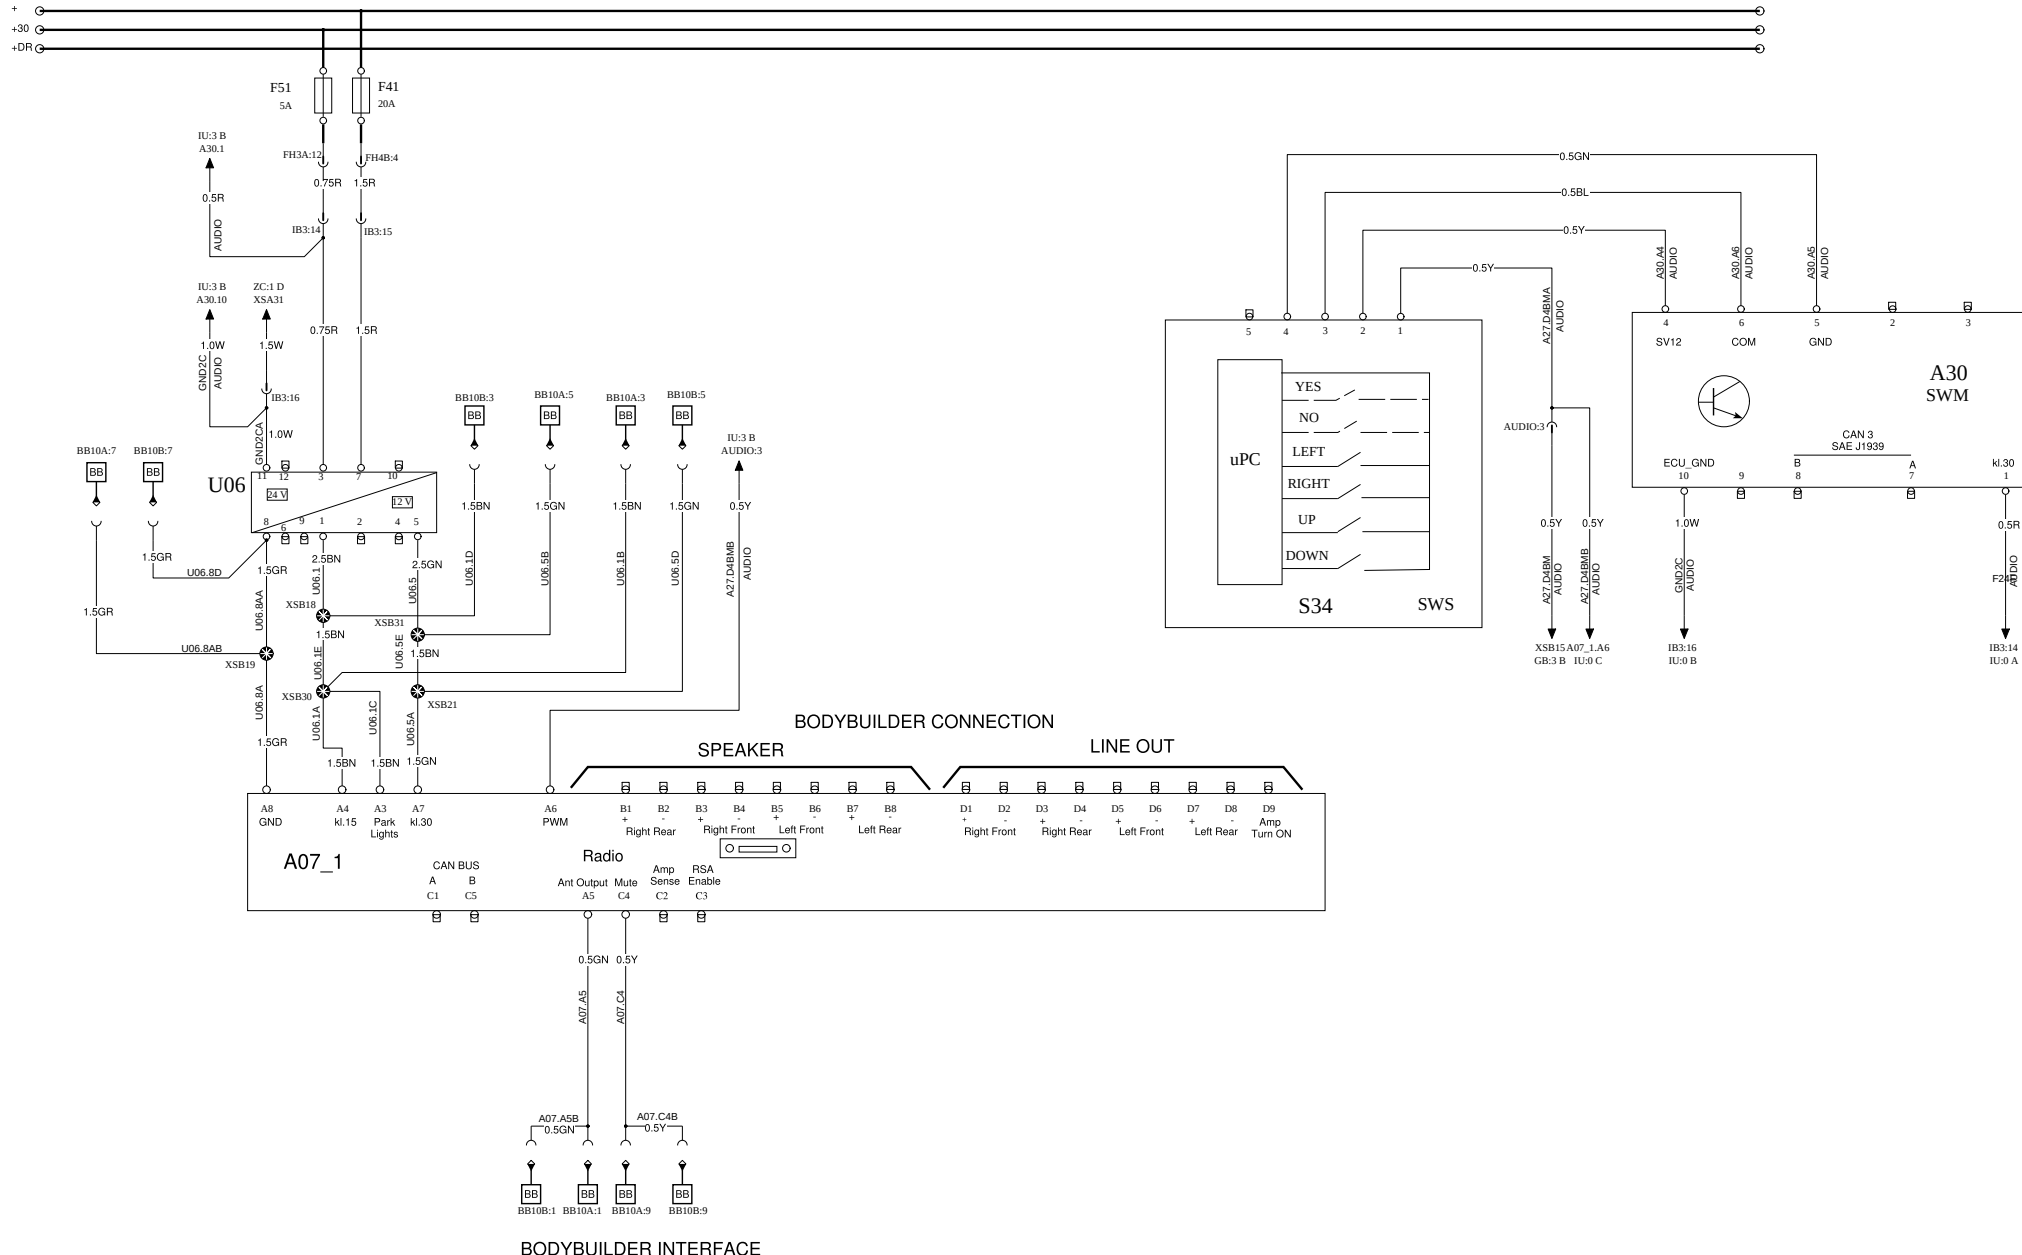

BUS INSTRUMENT CLUSTER BIC2


WIRING DIAGRAM NA

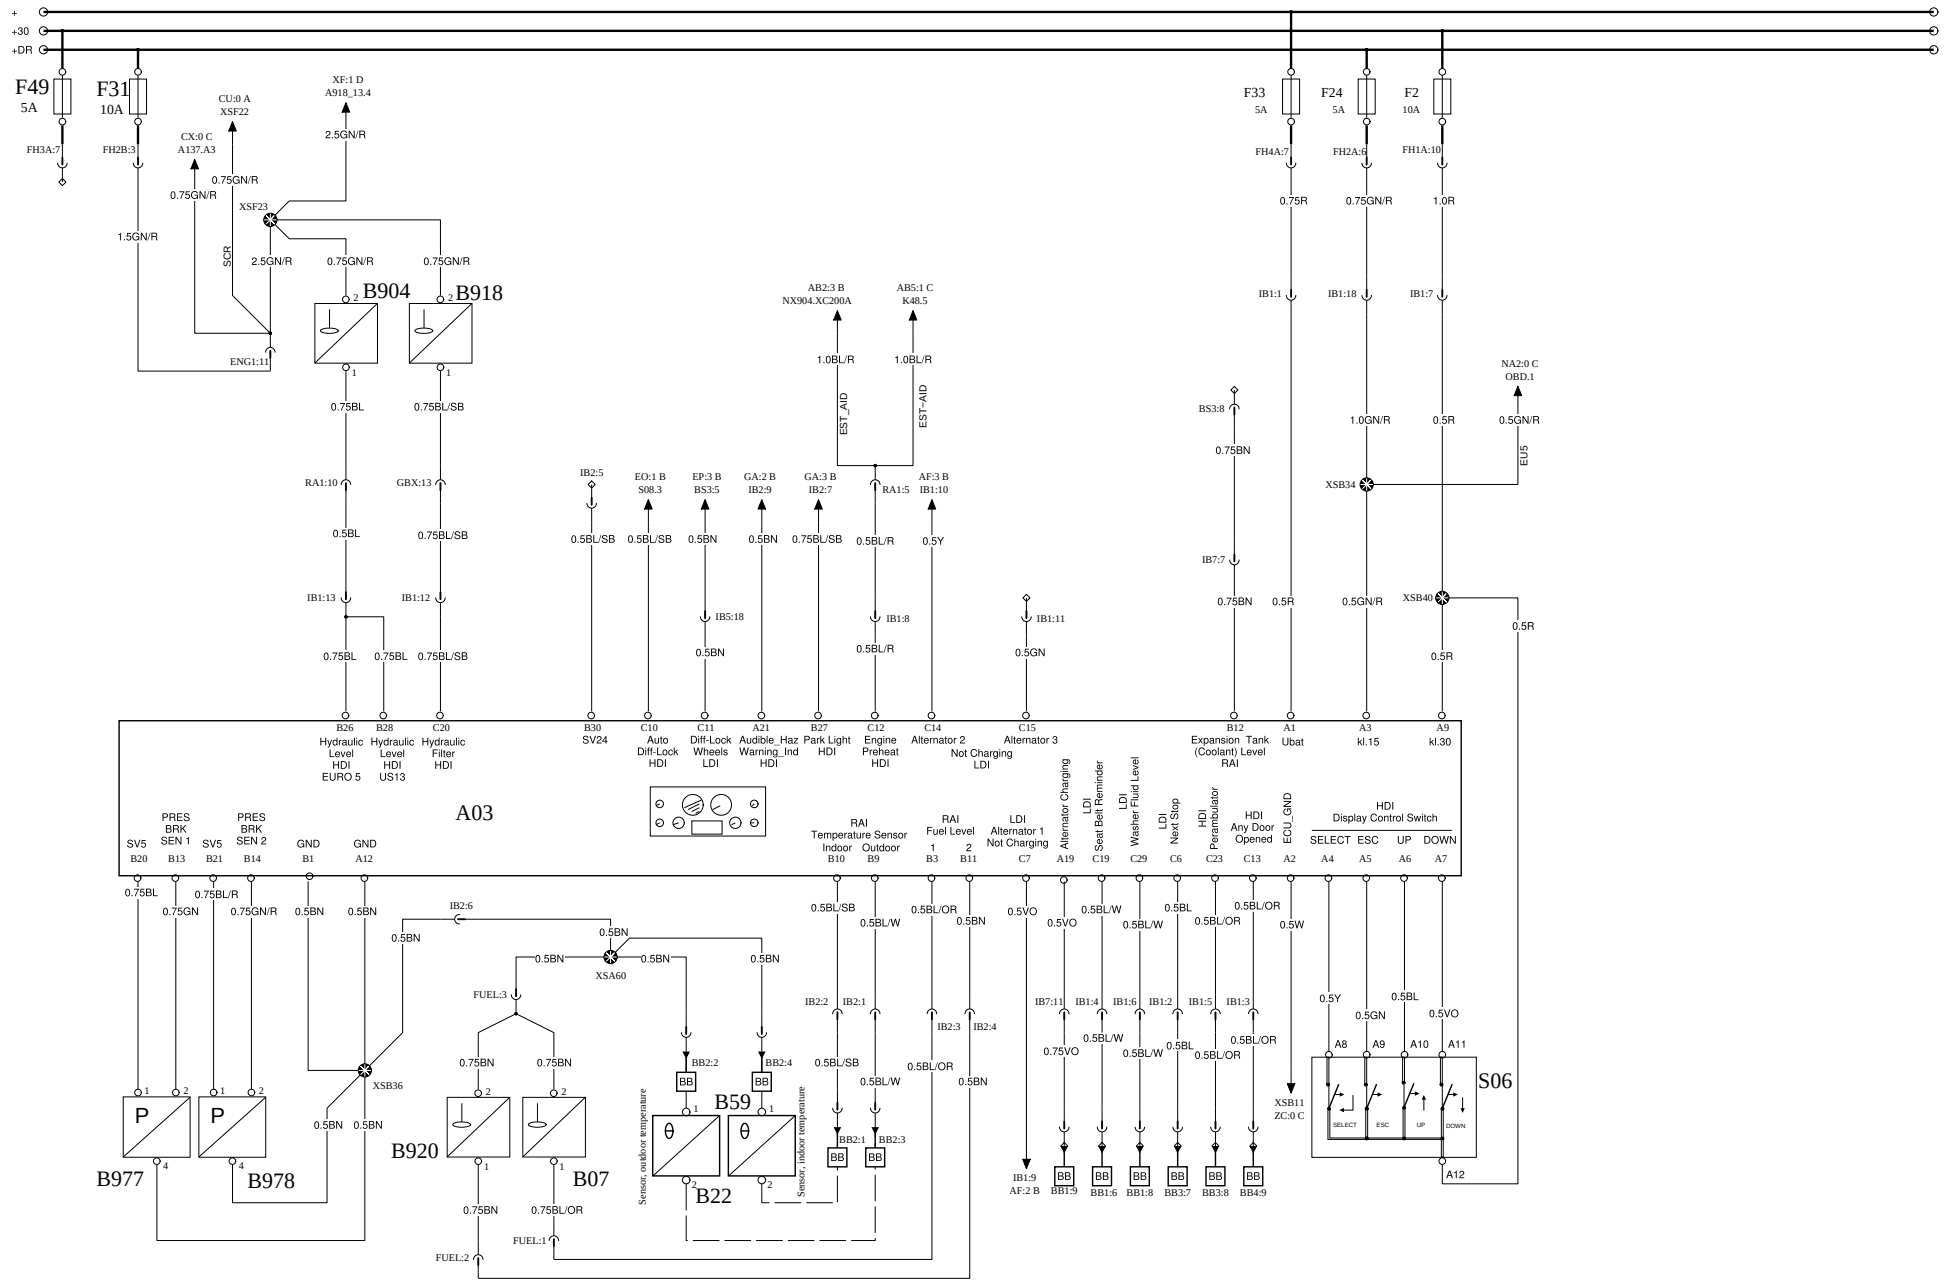


OBD, ON BOARD DIAGNOSTICS

WIRING DIAGRAM NA2


CONNECTIONS FOR EURO 5

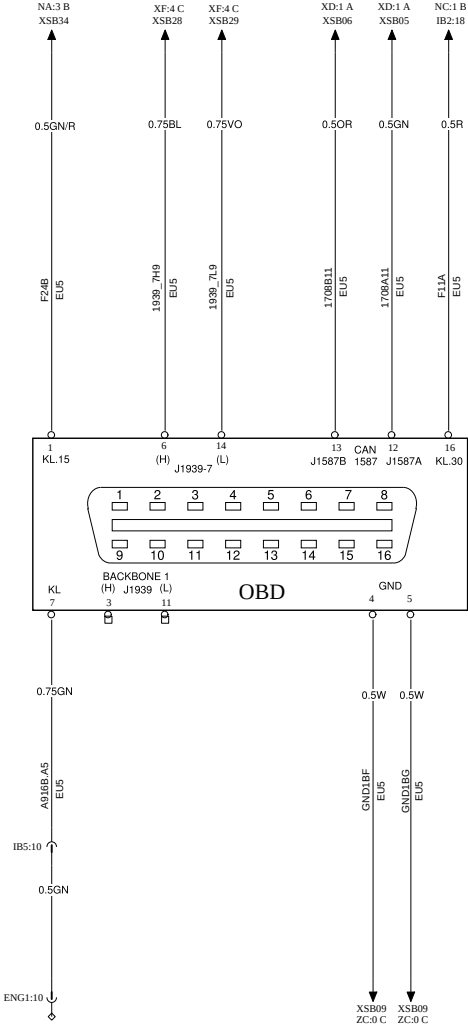



CONNECTIONS FOR US/CAN

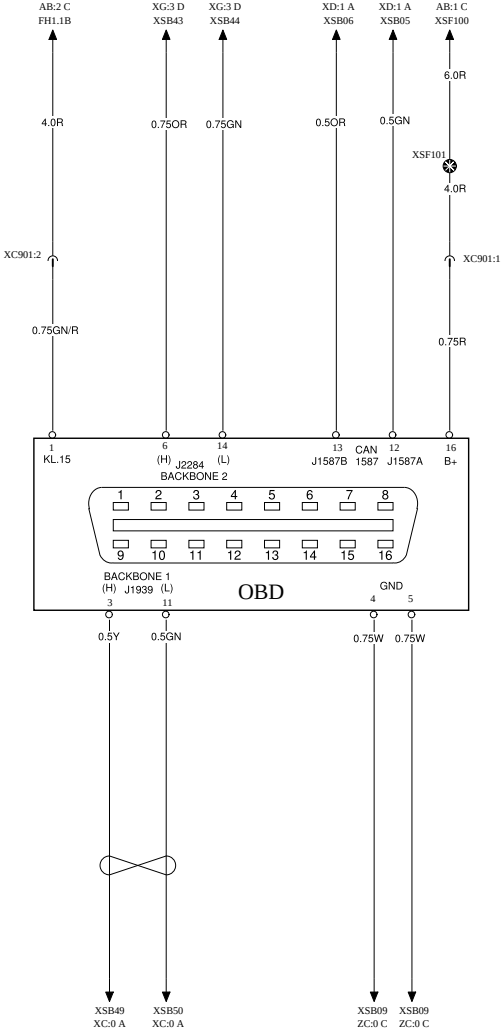


TGW IIVOLVO LINKWIRING DIAGRAM NC

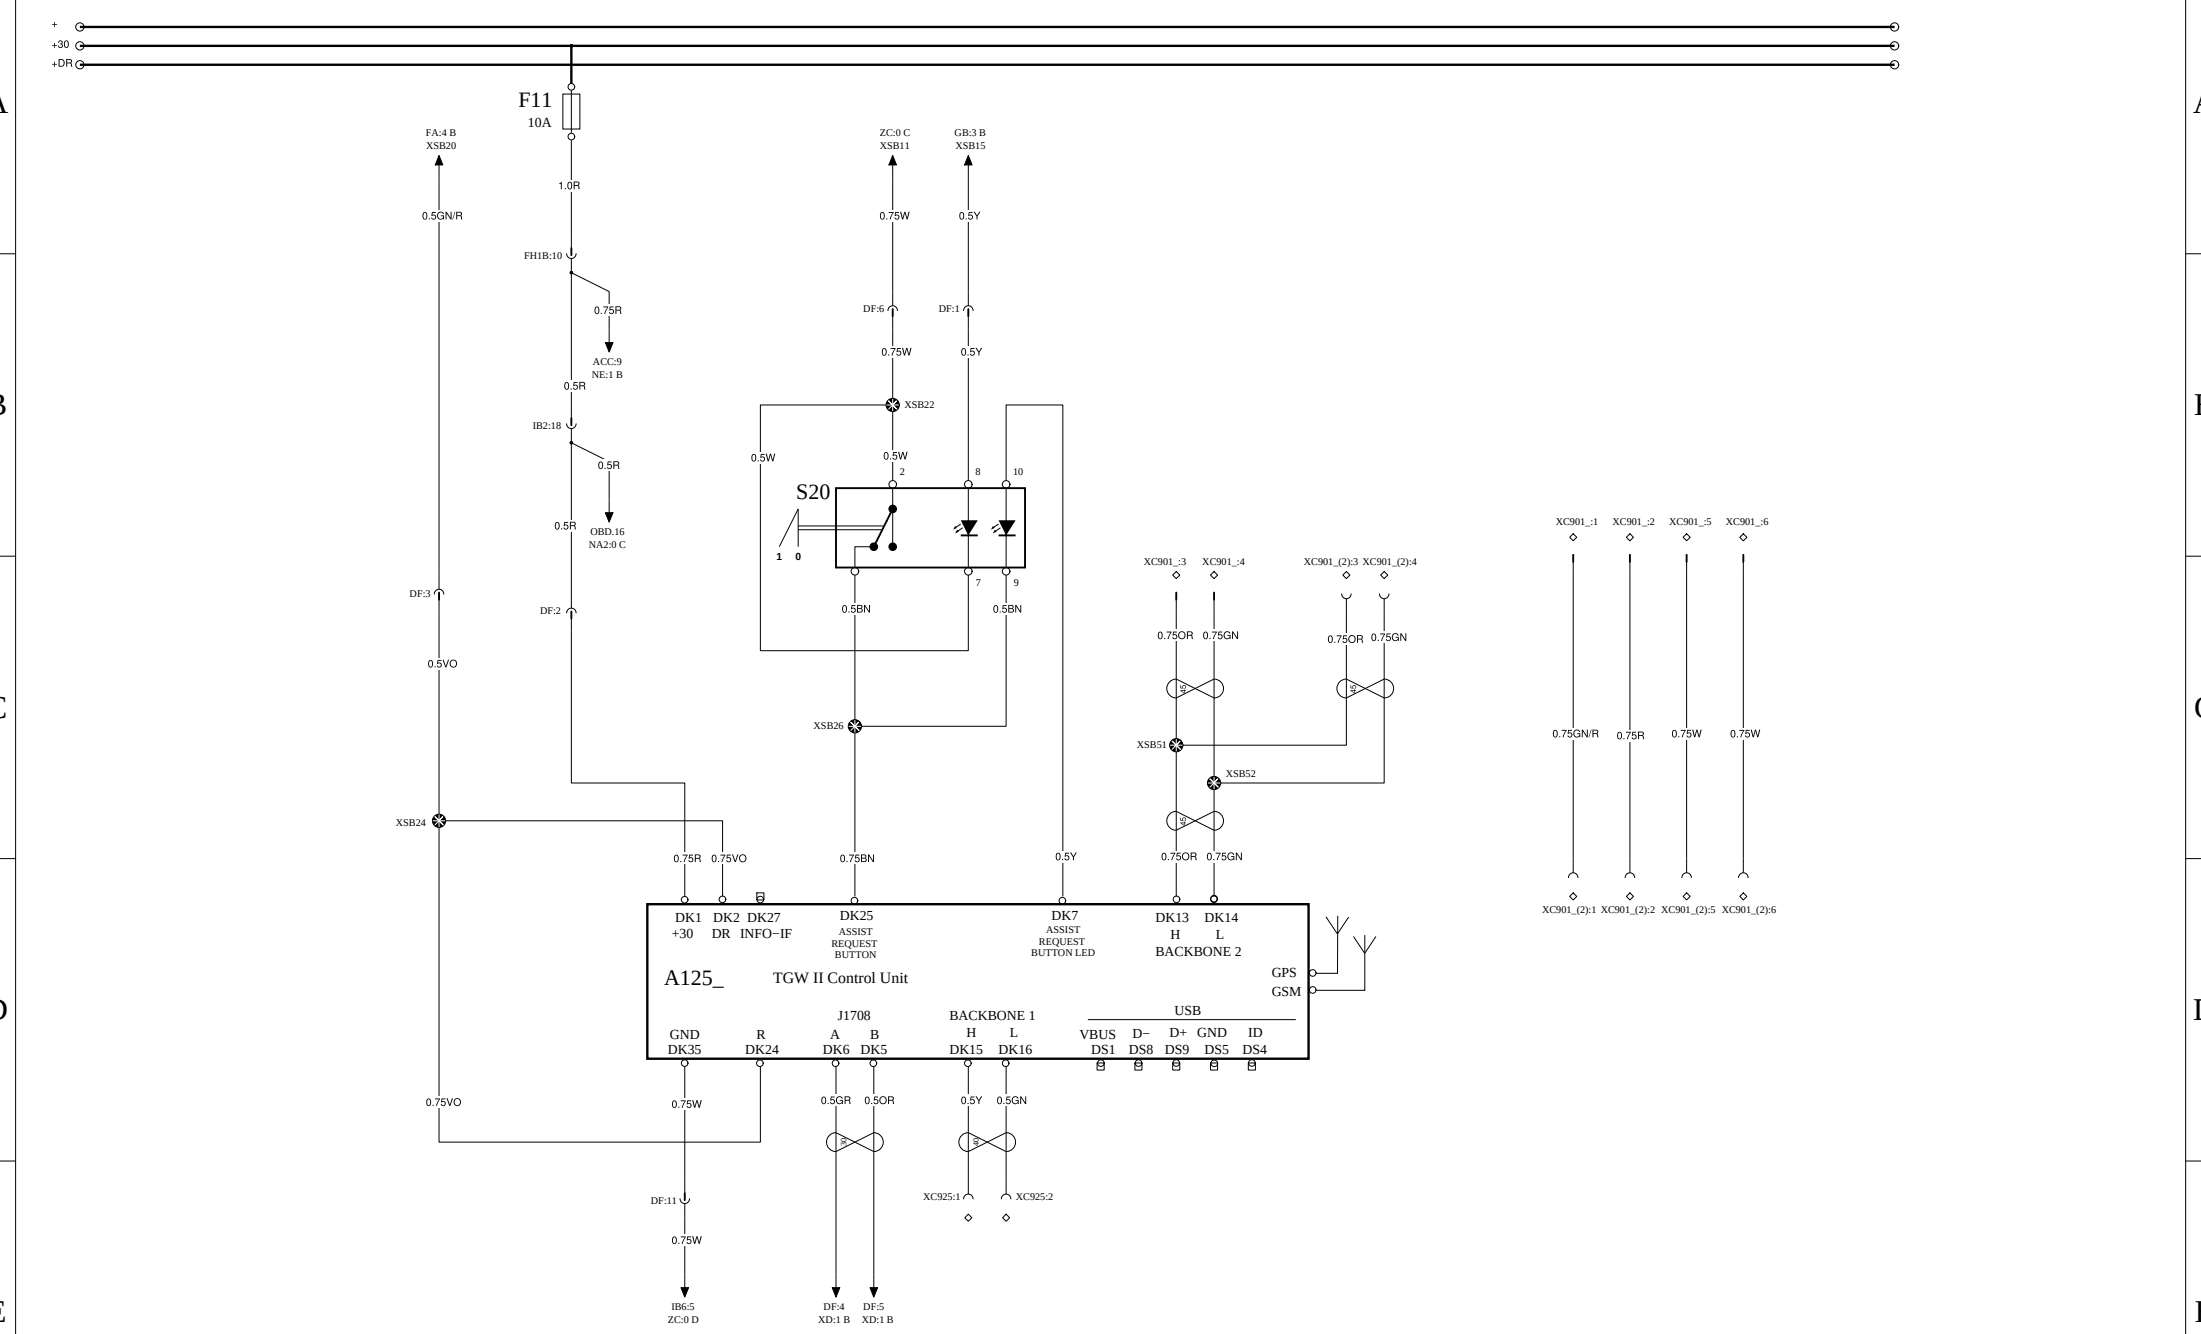

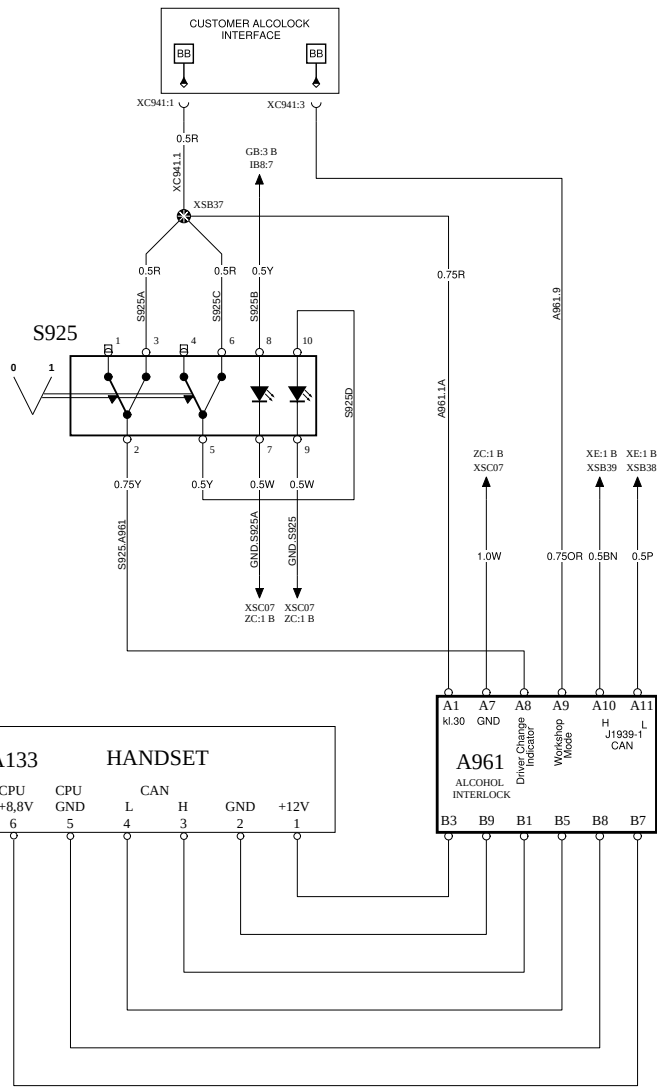


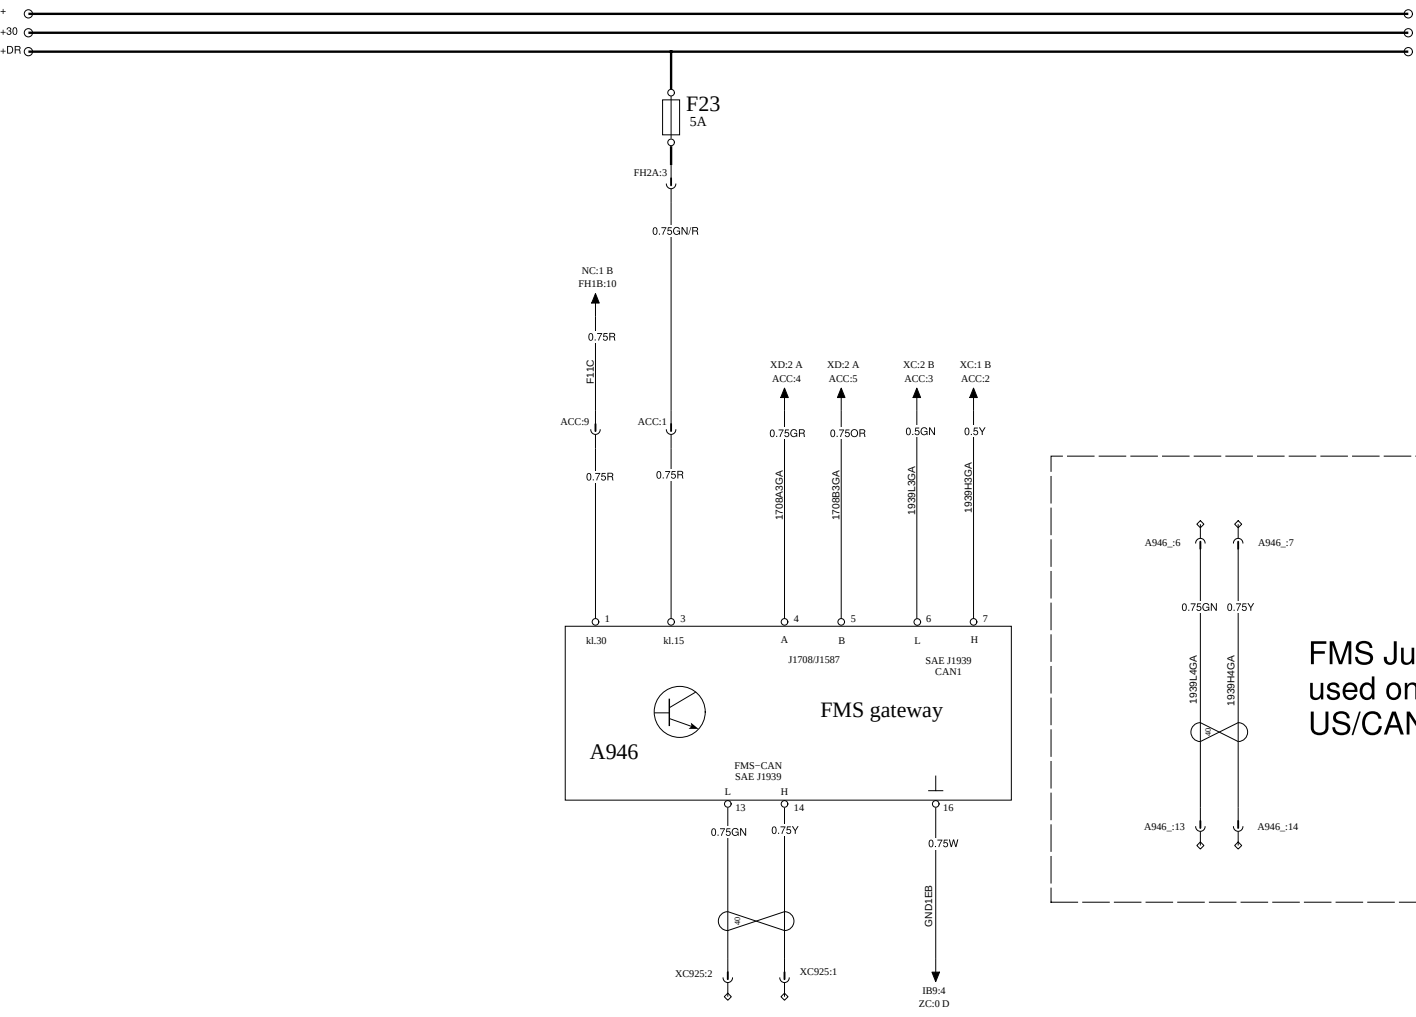

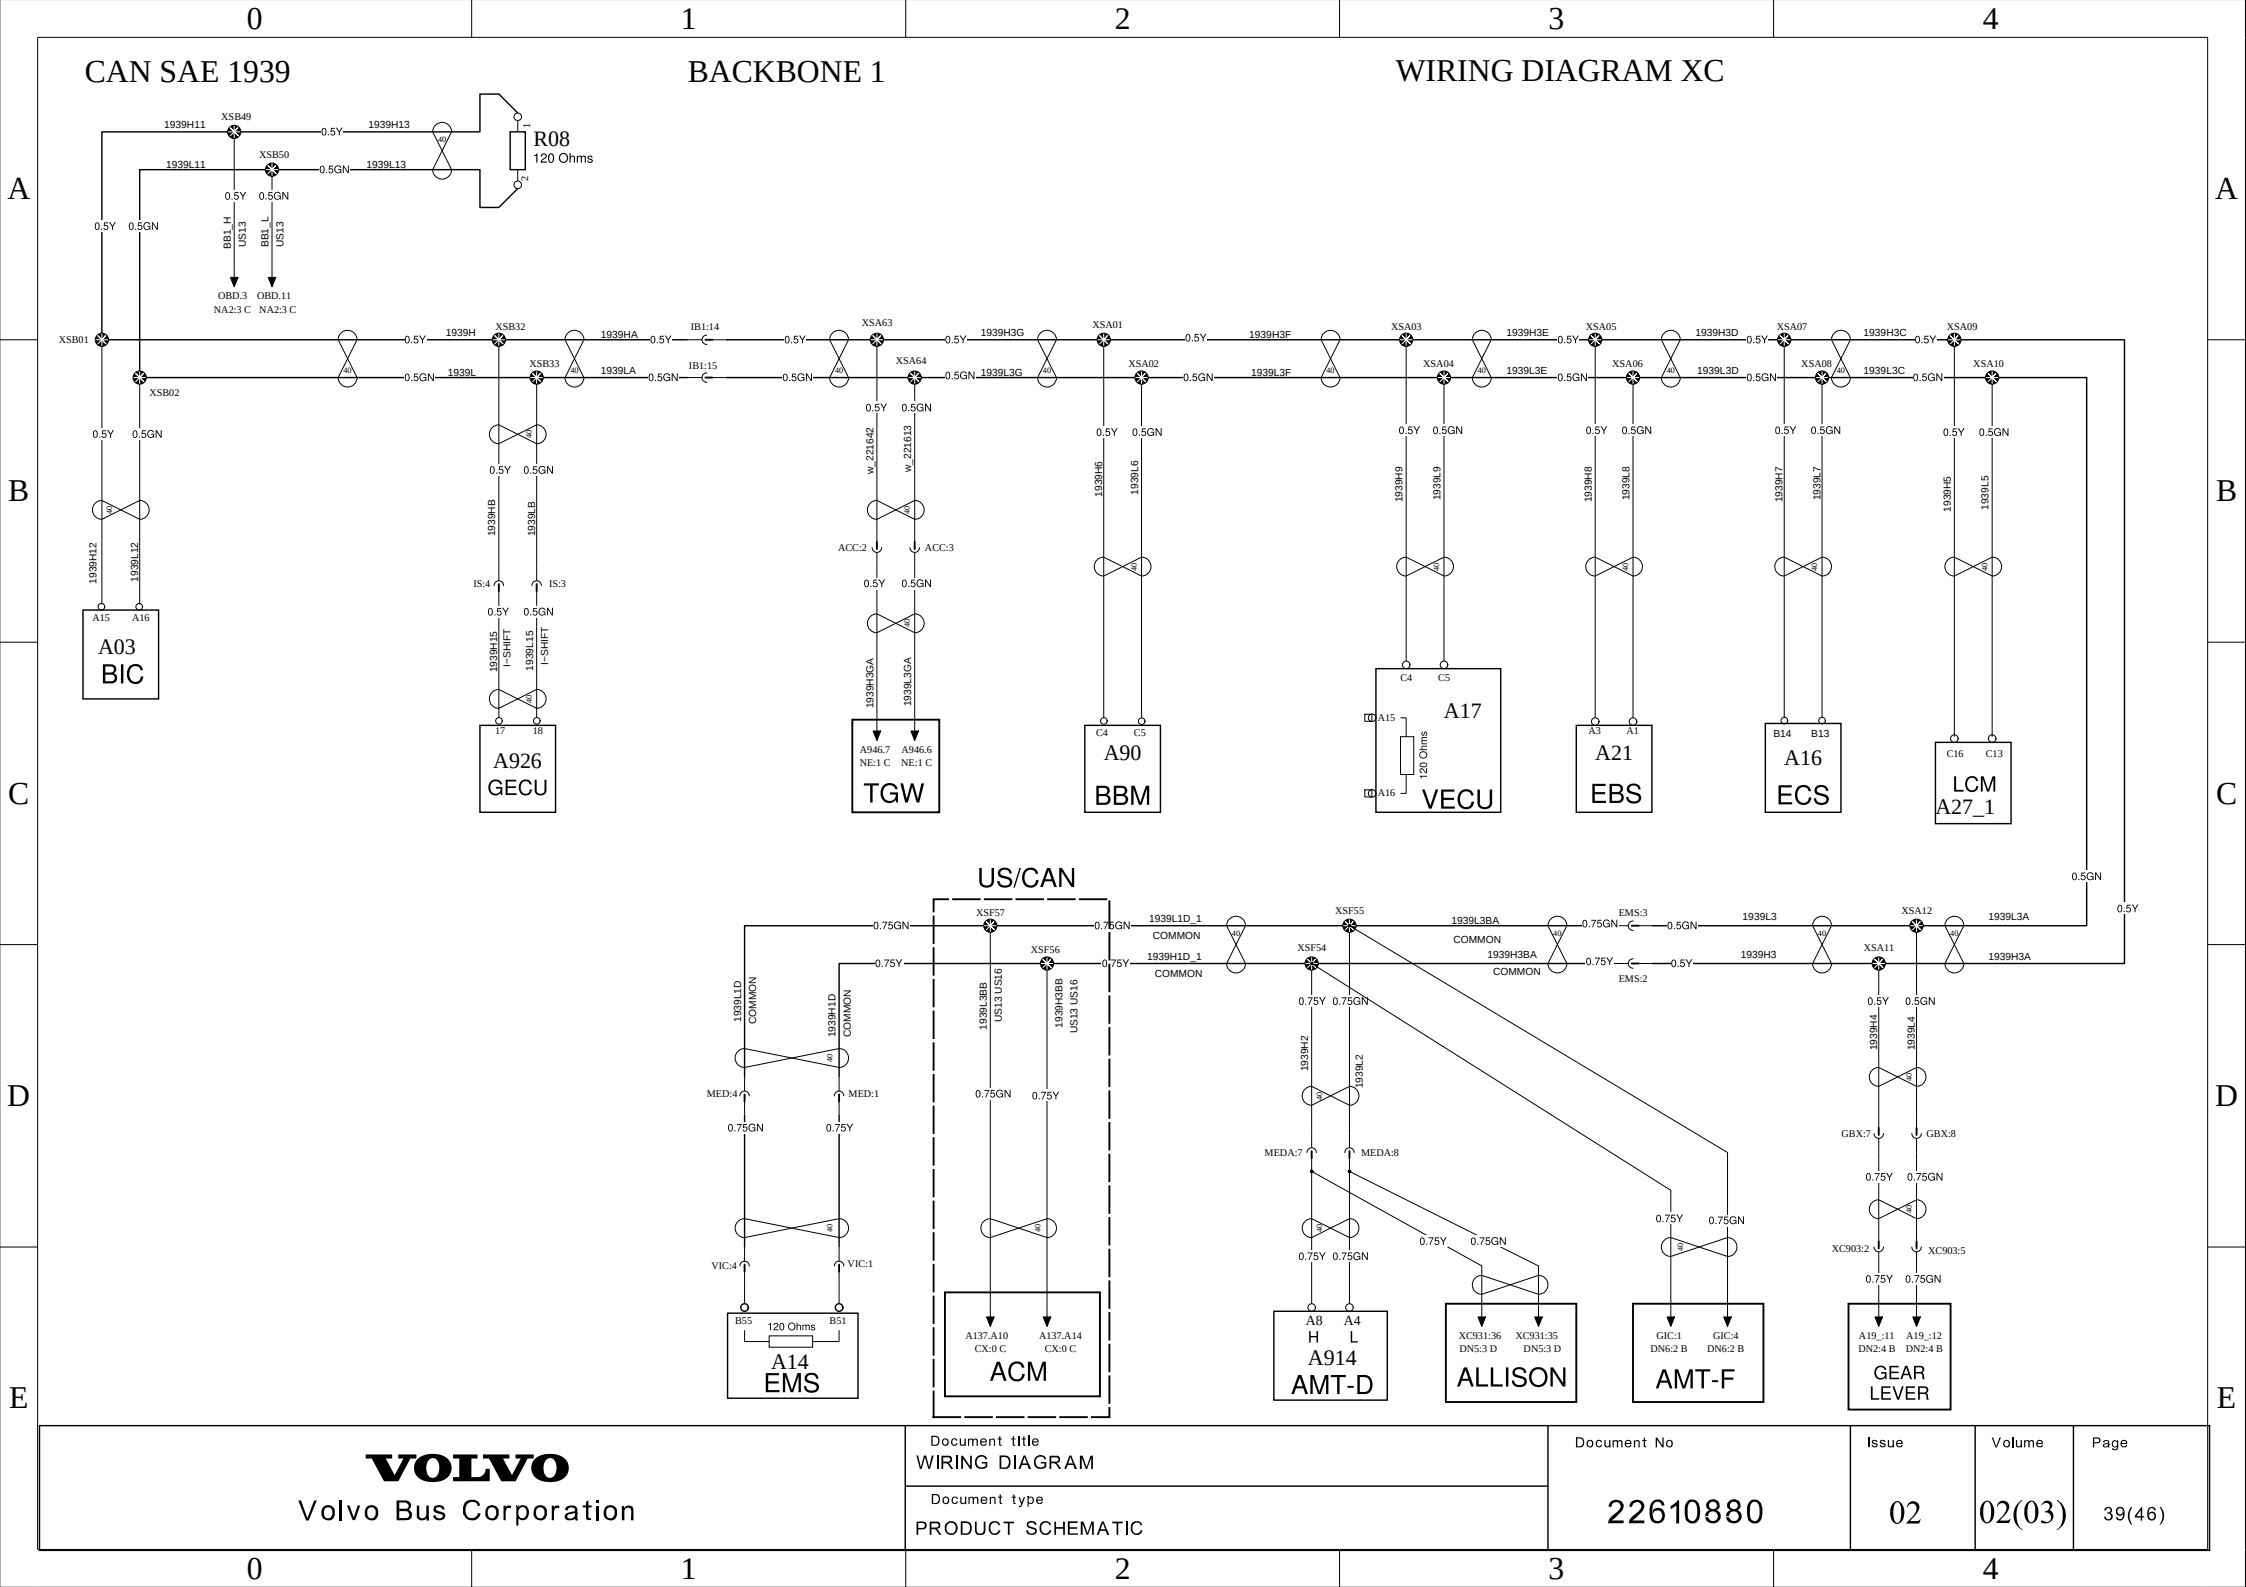



CAN SAE1587

WIRING DIAGRAM XD

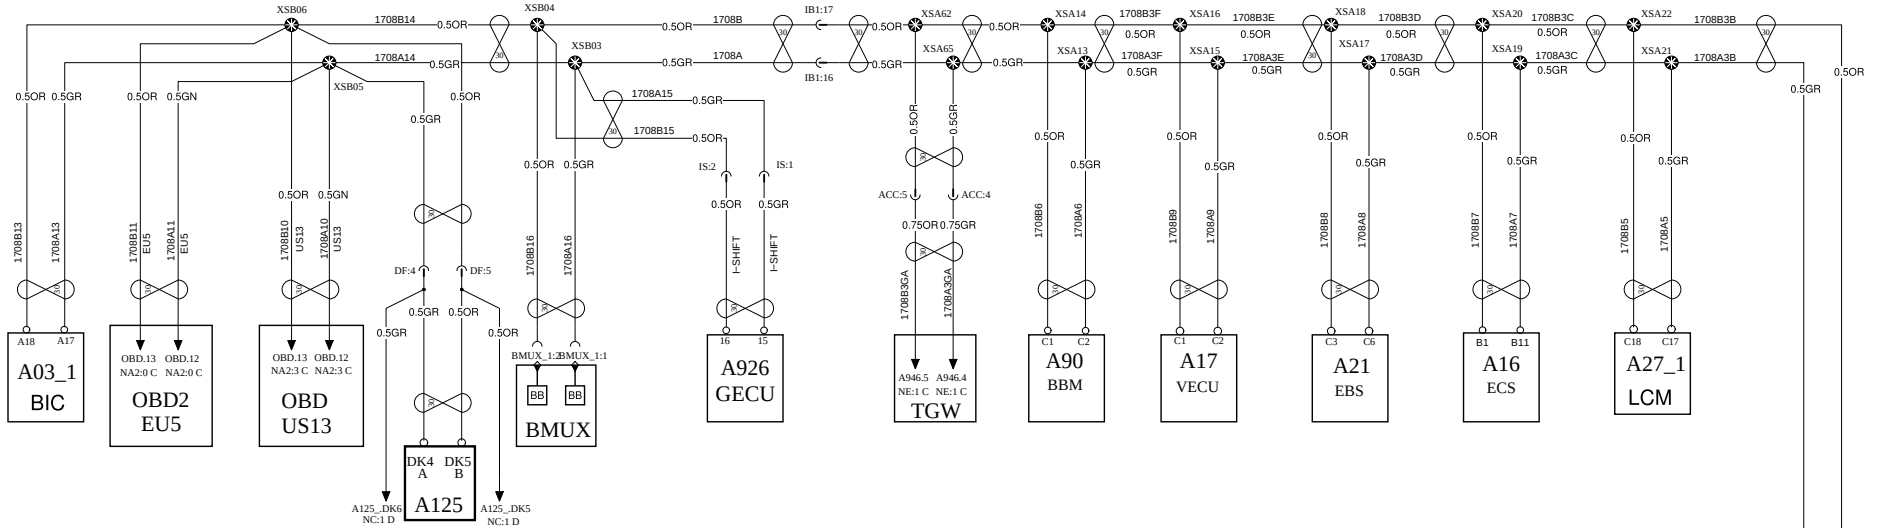

EURO 5

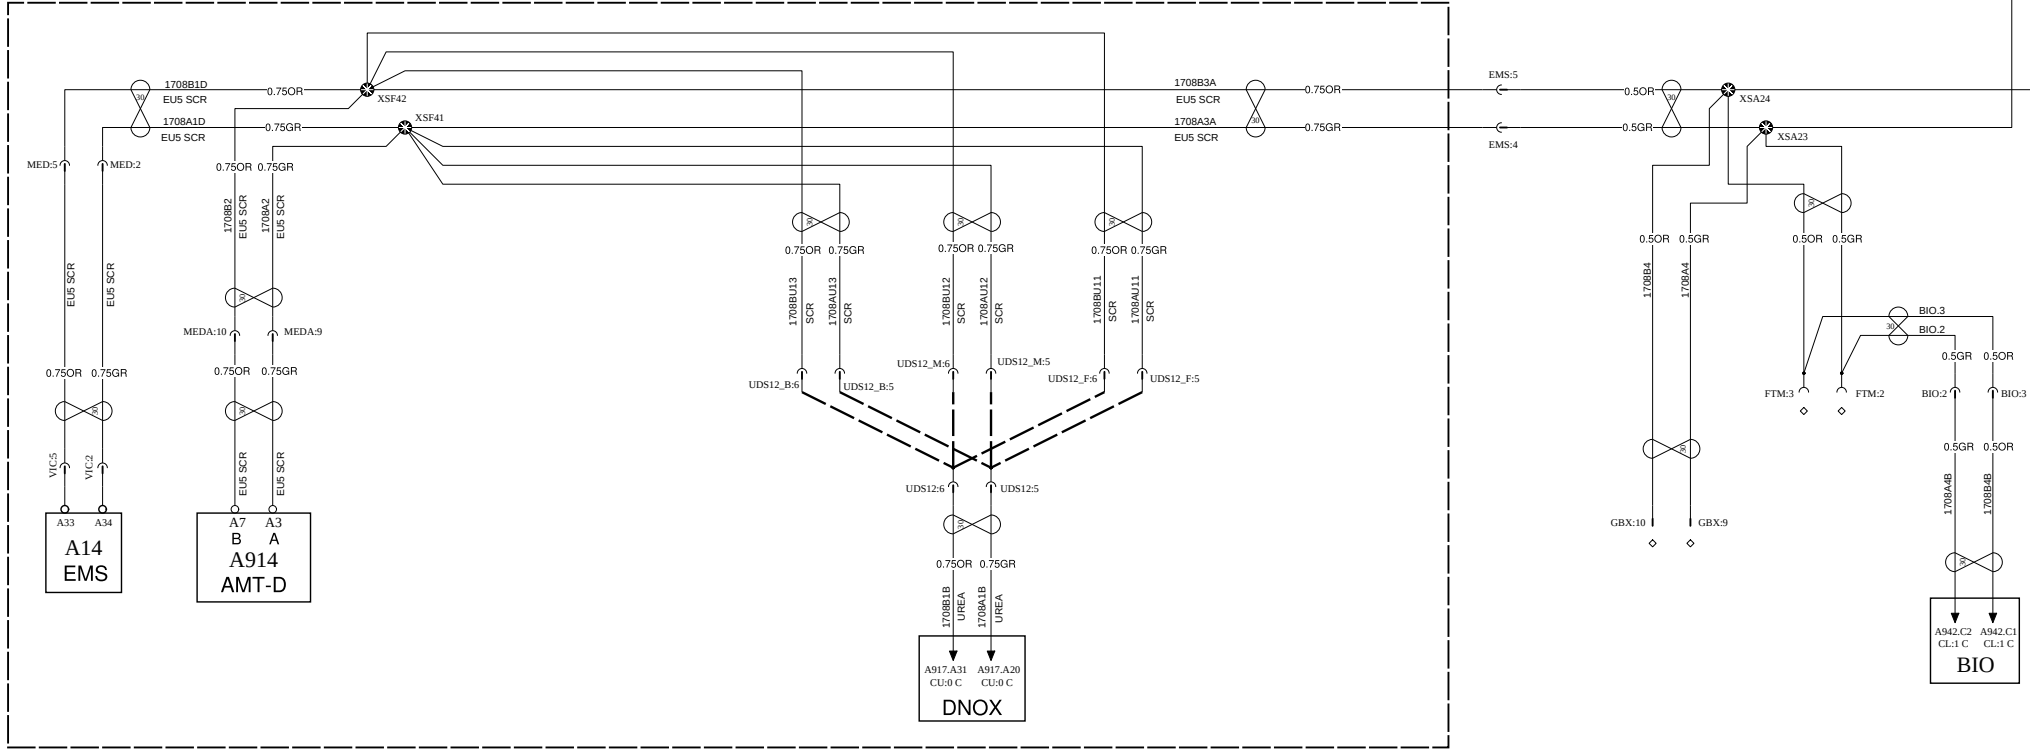

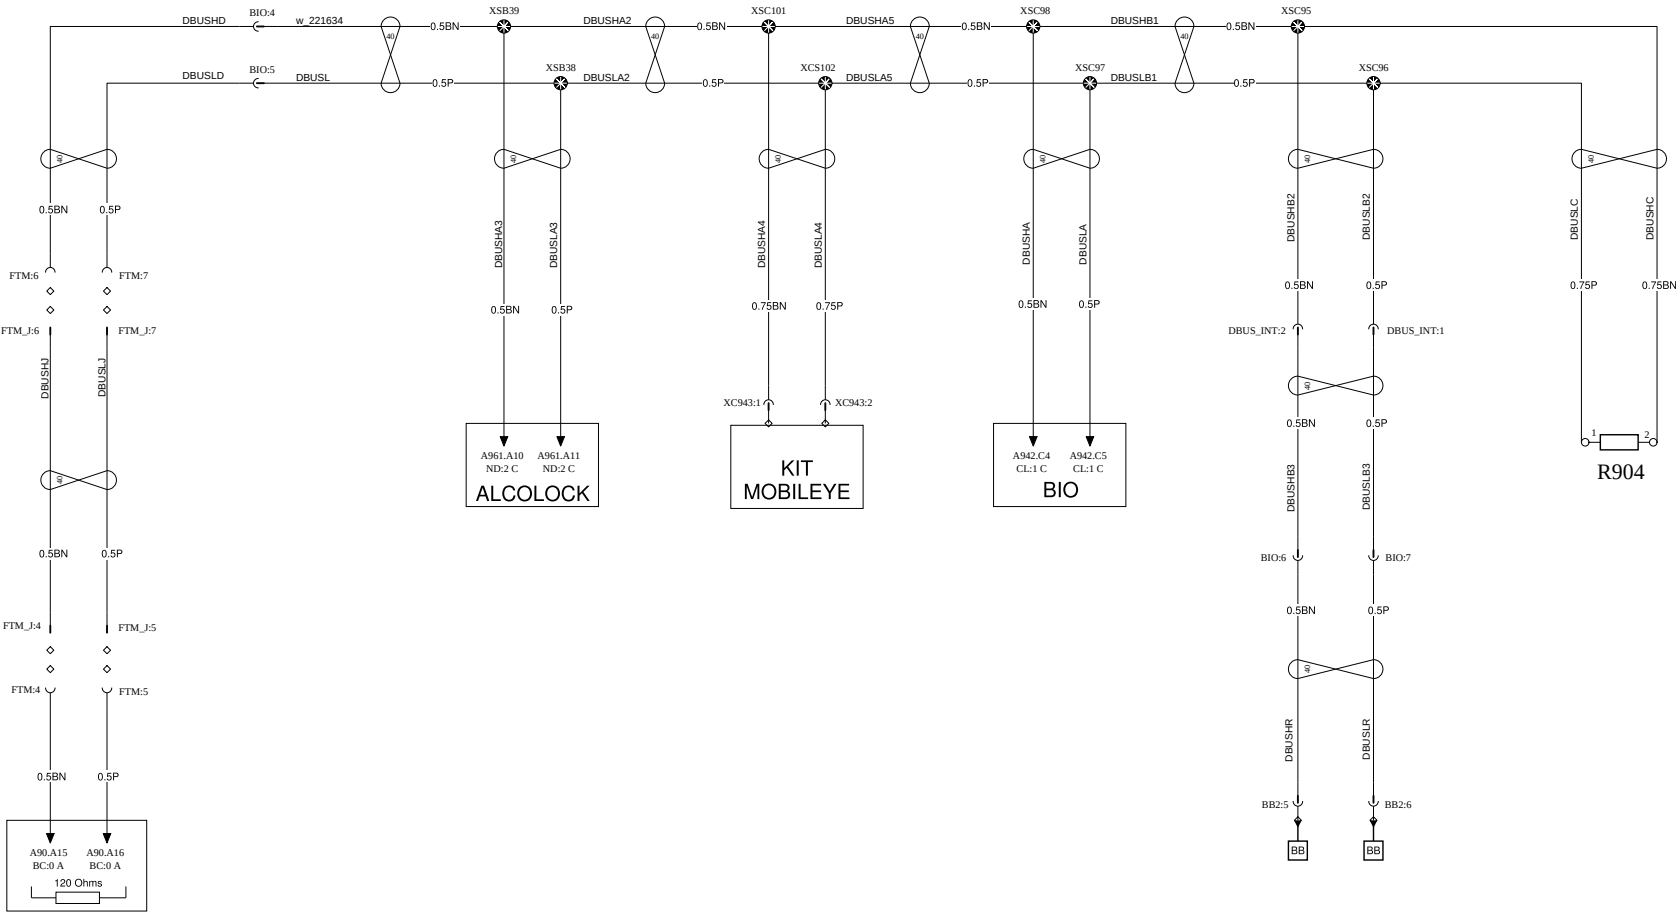

VOLVO

Volvo Bus Corporation

Document title
WIRING DIAGRAM

Document type
PRODUCT SCHEMATIC

Document No

22610880

Issue

02


Volume


02(03)

Page

41(46)



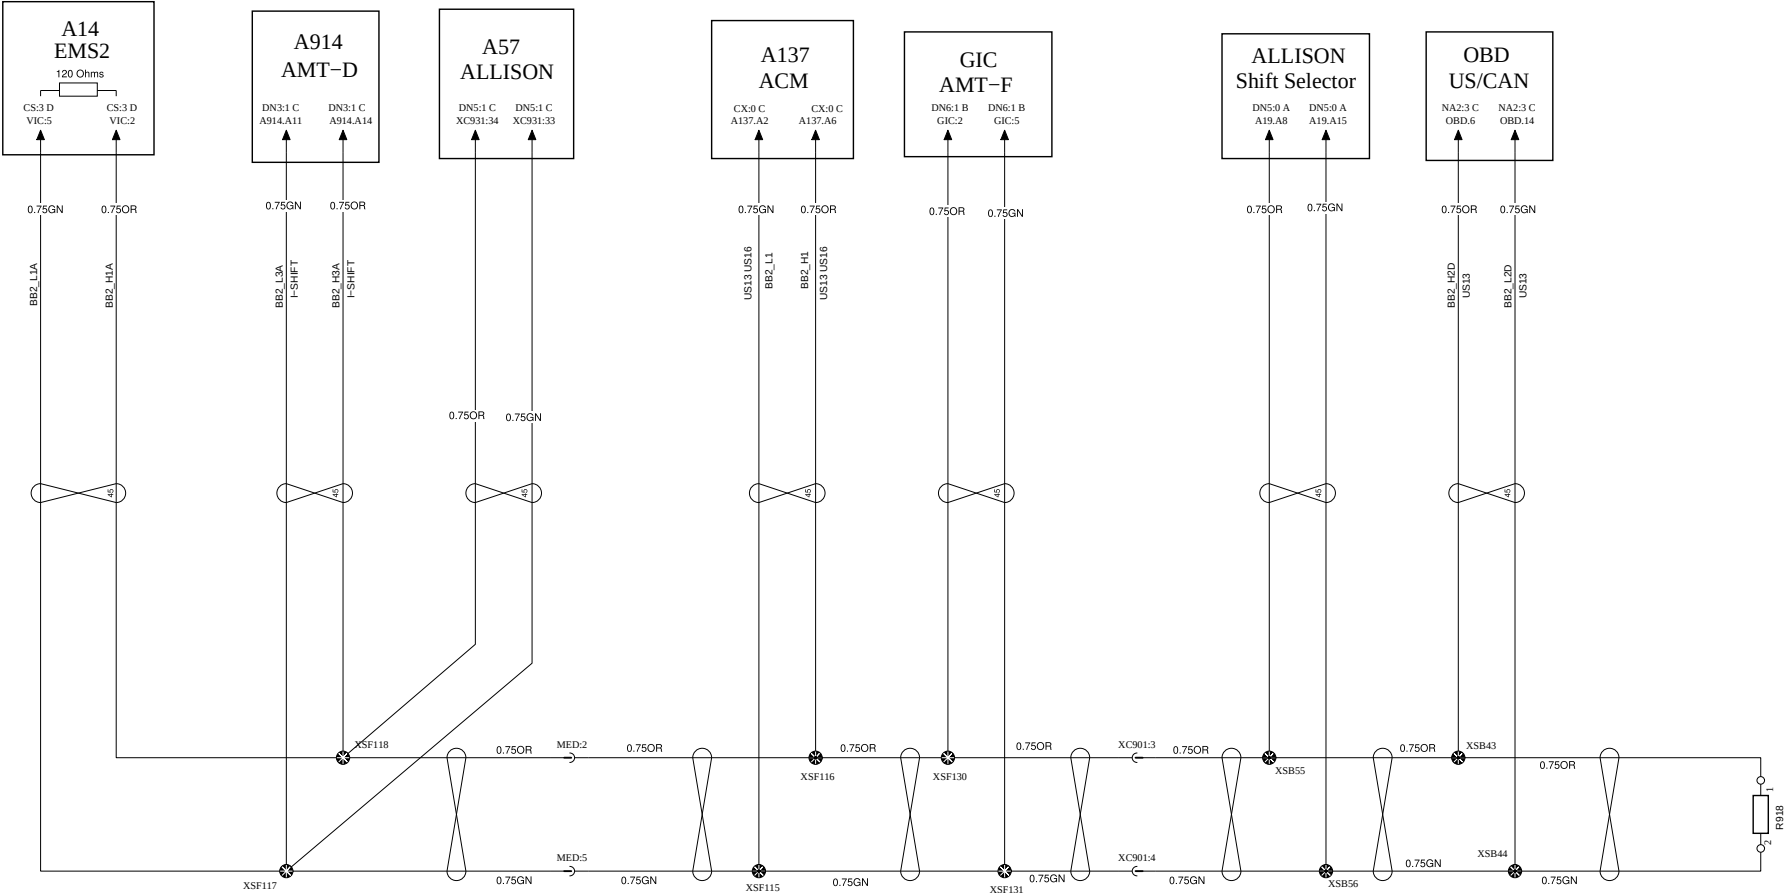

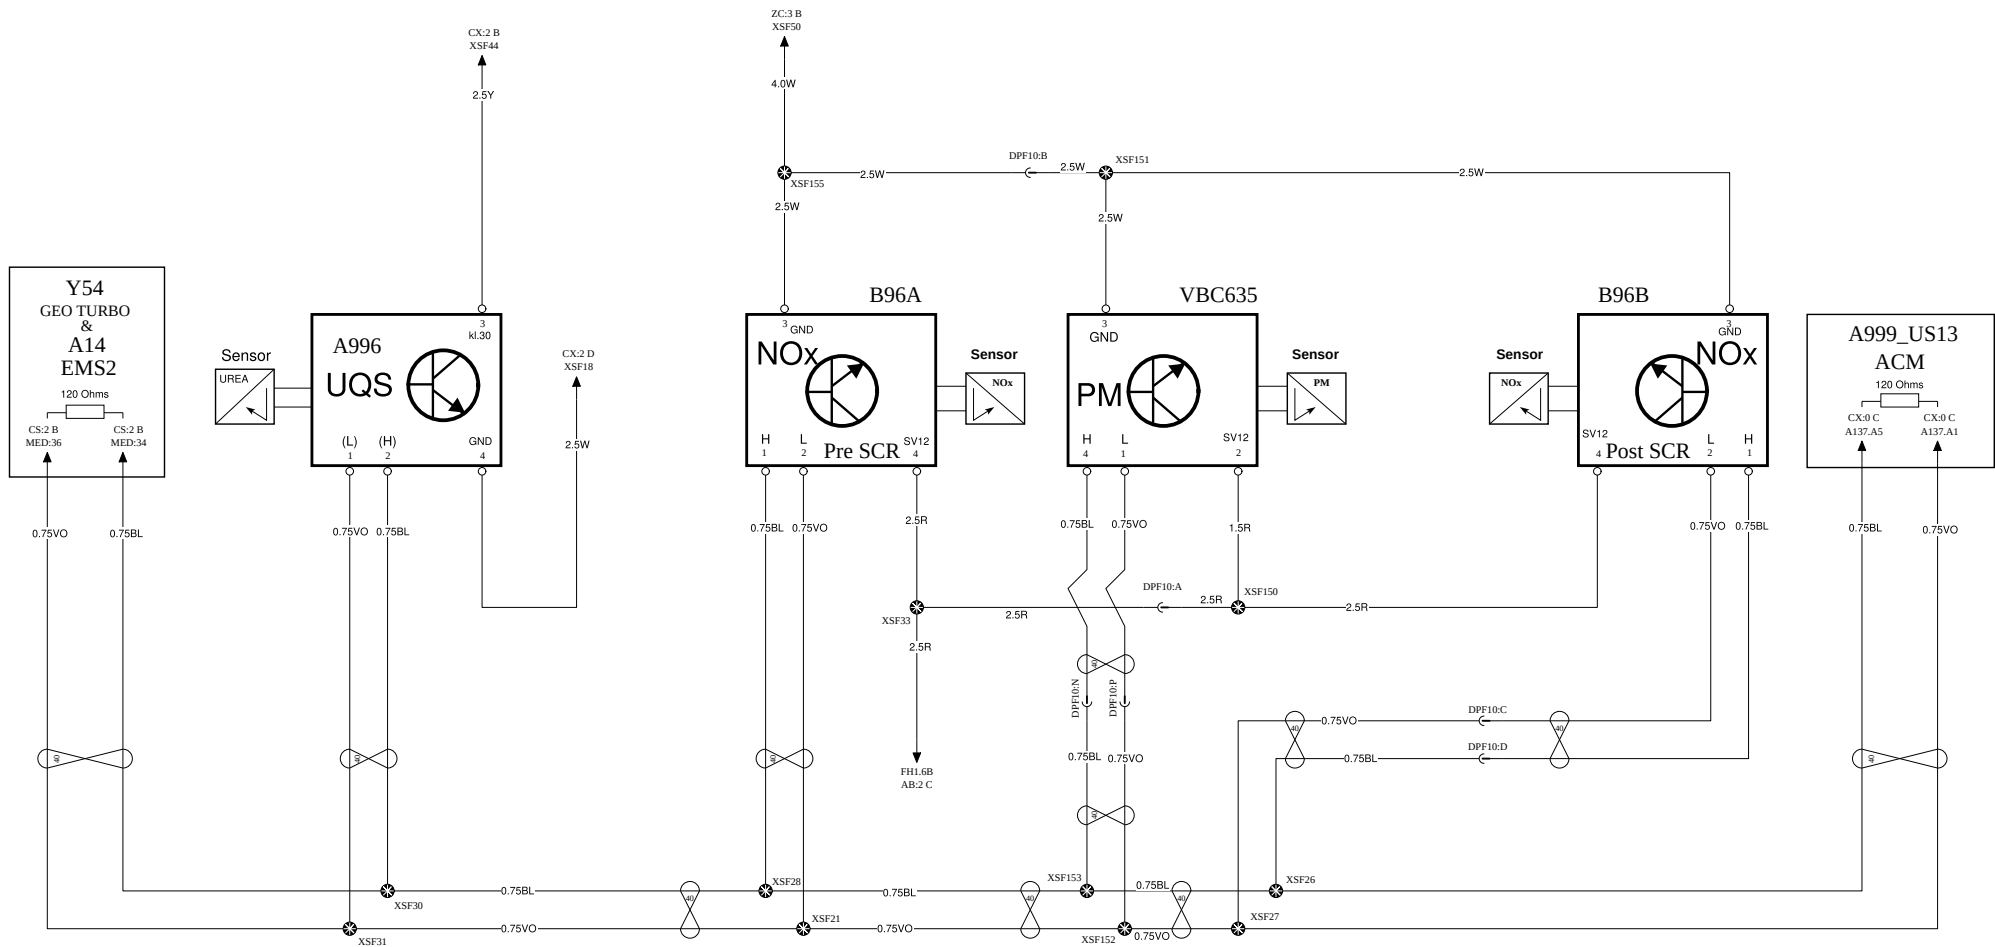

VOLVO

Volvo Bus Corporation

Document title
WIRING DIAGRAM

Document type
PRODUCT SCHEMATIC

Document No

22610880

Issue


02

Volume

02(03)

Page

44(46)

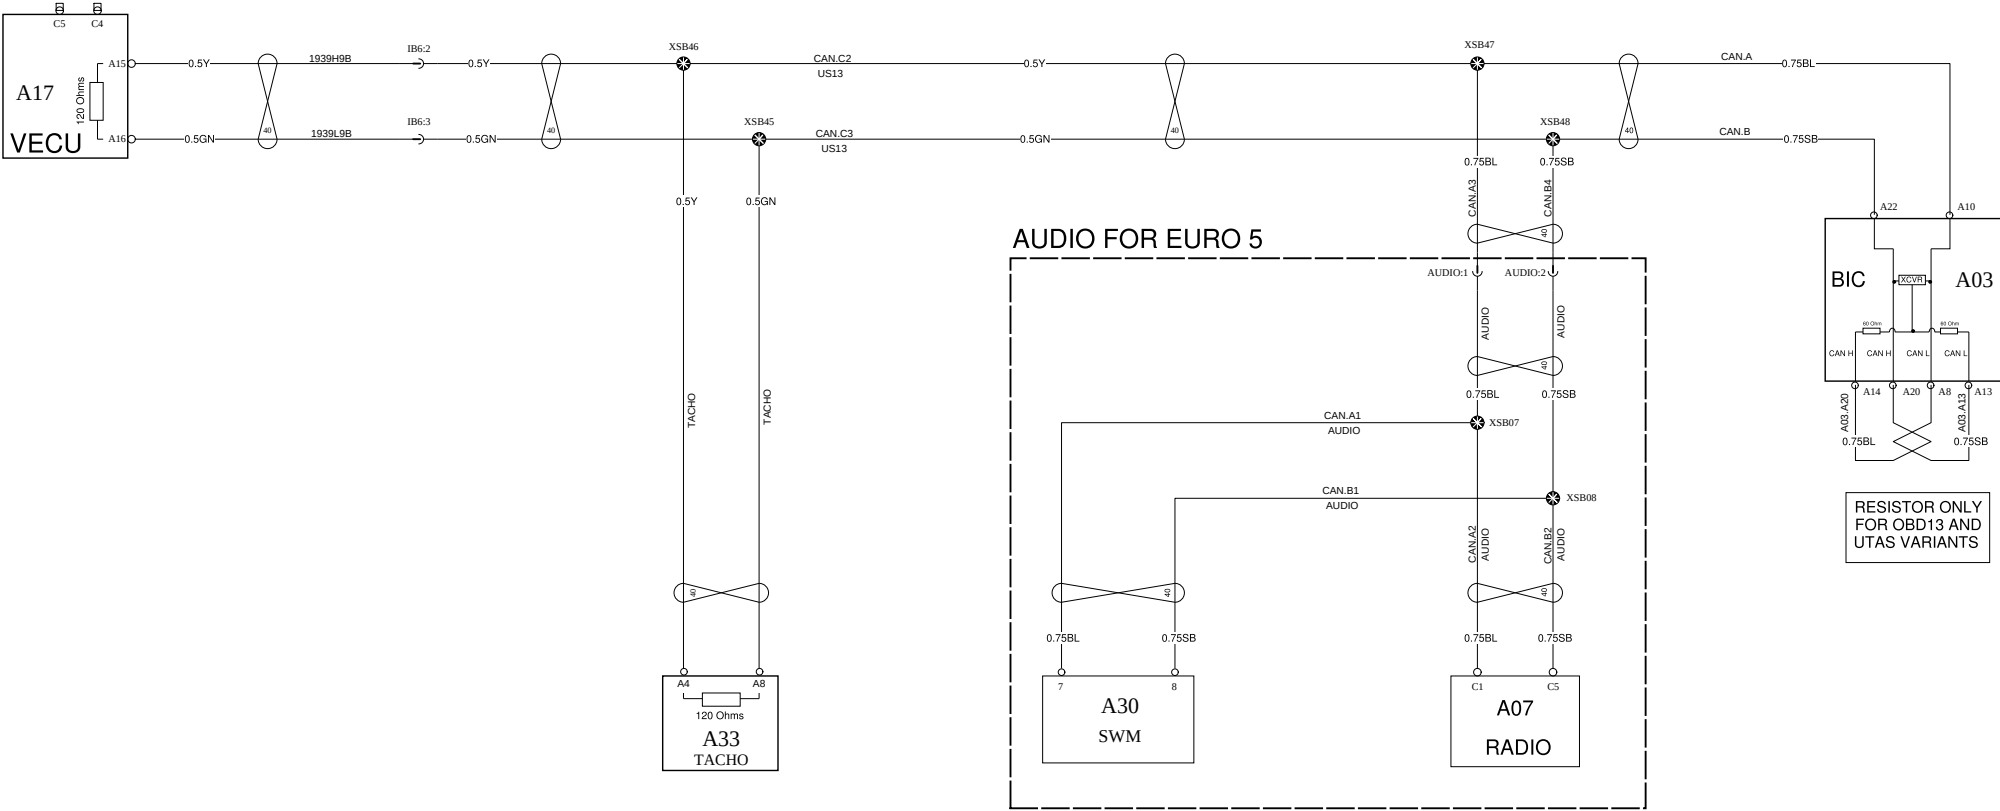

01234

A

B

C

D

E

GROUND

WIRING DIAGRAM ZC

GROUND1B

GROUND1A

GROUND1C

GROUND31A

GROUND31A:A

GROUND51

GROUND1D

GROUND1X

GROUND6B

GROUND31F

GROUND31R

GROUND1

GROUND2

GROUND3

GROUND4

GROUND5

GROUND6

GROUND7

GROUND8

GROUND9

GROUND10

GROUND11

GROUND12

GROUND13

GROUND14

GROUND15

GROUND16

GROUND17

GROUND18

GROUND19

GROUND20

GROUND21

GROUND22

GROUND23

GROUND24

GROUND25

GROUND26

GROUND27

GROUND28

GROUND29

GROUND30

GROUND31

GROUND32

GROUND33

GROUND34

GROUND35

GROUND36

GROUND37

GROUND38

GROUND39

GROUND40

GROUND41

GROUND42

GROUND43

GROUND44

GROUND45

GROUND46

GROUND47

GROUND48

GROUND49

GROUND50

GROUND51

GROUND52

GROUND53

GROUND54

GROUND55

GROUND56

GROUND57

GROUND58

GROUND59

GROUND60

GROUND61

GROUND62

GROUND63

GROUND64

GROUND65

GROUND66

GROUND67

GROUND68

GROUND69

GROUND70

GROUND71

GROUND72

GROUND73

GROUND74

GROUND75

GROUND76

GROUND77

GROUND78

GROUND79

GROUND80

GROUND81

GROUND82

GROUND83

GROUND84

GROUND85

GROUND86

GROUND87

GROUND88

GROUND89

GROUND90

GROUND91

GROUND92

GROUND93

GROUND94

GROUND95

GROUND96

GROUND97

GROUND98

GROUND99

GROUND100

GROUND101

GROUND102

GROUND103

GROUND104

GROUND105

GROUND106

GROUND107

GROUND108

GROUND109

GROUND110

GROUND111

GROUND112

GROUND113

GROUND114

GROUND115

GROUND116

GROUND117

GROUND118

GROUND119

GROUND120

GROUND121

GROUND122

GROUND123

GROUND124

GROUND125

GROUND126

GROUND127

GROUND128

GROUND129

GROUND130

GROUND131

GROUND132

GROUND133

GROUND134

GROUND135

GROUND136

GROUND137

GROUND138

GROUND139

GROUND140

GROUND141

GROUND142

GROUND143

GROUND144

GROUND145

GROUND146

GROUND147

GROUND148

GROUND149

GROUND150

GROUND151

GROUND152

GROUND153

GROUND154

GROUND155

GROUND156

GROUND157

GROUND158

GROUND159

GROUND160

GROUND161

GROUND162

GROUND163

GROUND164

GROUND165

GROUND166

GROUND167

GROUND168

GROUND169

GROUND170

GROUND171

GROUND172

GROUND173

GROUND174

GROUND175

GROUND176

GROUND177

GROUND178

GROUND179

GROUND180

GROUND181

GROUND182

GROUND183

GROUND184

GROUND185

GROUND186

GROUND187

GROUND188

GROUND189

GROUND190

GROUND191

GROUND192

GROUND193

GROUND194

GROUND195

GROUND196

GROUND197

GROUND198

GROUND199

GROUND200

GROUND201

GROUND202

GROUND203

GROUND204

GROUND205

GROUND206

GROUND207

GROUND208

GROUND209

GROUND210

GROUND211

GROUND212

GROUND213

GROUND214

GROUND215

GROUND216

GROUND217

GROUND218

GROUND219

GROUND220

GROUND221

GROUND222

GROUND223

GROUND224

GROUND225

GROUND226

GROUND227

GROUND228

GROUND229

GROUND230

GROUND231

GROUND232

GROUND233

GROUND234

GROUND235

GROUND236

GROUND237

GROUND238

GROUND239

GROUND240

GROUND241

GROUND242

GROUND243

GROUND244

GROUND245

GROUND246

GROUND247

GROUND248

GROUND249

GROUND250

GROUND251

GROUND252

GROUND253

GROUND254

GROUND255

GROUND256

GROUND257

GROUND258

GROUND259

GROUND260

GROUND261

GROUND262

GROUND263

GROUND264

GROUND265

GROUND266

GROUND267

GROUND268

GROUND269

GROUND270

GROUND271

GROUND272

GROUND273

GROUND274

GROUND275

GROUND276

GROUND277

GROUND278

GROUND279

GROUND280

GROUND281

GROUND282

GROUND283

GROUND284

GROUND285

GROUND286

GROUND287

GROUND288

GROUND289

GROUND290

GROUND291

GROUND292

GROUND293

GROUND294

GROUND295

GROUND296

GROUND297

GROUND298

GROUND299

GROUND300

GROUND301

GROUND302

GROUND303

GROUND304

GROUND305

GROUND306

GROUND307

GROUND308

GROUND309

GROUND310

GROUND311

GROUND312

GROUND313

GROUND314

GROUND315

GROUND316

GROUND317

GROUND318

GROUND319

GROUND320

GROUND321

GROUND322

GROUND323

GROUND324

GROUND325

GROUND326

GROUND327

GROUND328

GROUND329

GROUND330

GROUND331

GROUND332

GROUND333

GROUND334

GROUND335

GROUND336

GROUND337

GROUND338

GROUND339

GROUND340

GROUND341

GROUND342

GROUND343

GROUND344

GROUND345

GROUND346

GROUND347

GROUND348

GROUND349

GROUND350

GROUND351

GROUND352

GROUND353

GROUND354

GROUND355

GROUND356

GROUND357

GROUND358

GROUND359

GROUND360

GROUND361

GROUND362

GROUND363

GROUND364

GROUND365

GROUND366

GROUND367

GROUND368

GROUND369

GROUND370

GROUND371

GROUND372

GROUND373

GROUND374

GROUND375

GROUND376

GROUND377

GROUND378

GROUND379

GROUND380

GROUND381

GROUND382

GROUND383

GROUND384

GROUND385

GROUND386

GROUND387

GROUND388

GROUND389

GROUND390

GROUND391

GROUND392

GROUND393

GROUND394

GROUND395

GROUND396

GROUND397

GROUND398

GROUND399

GROUND400

GROUND401

GROUND402

GROUND403

GROUND404

GROUND405

GROUND406

GROUND407

GROUND408

GROUND409

GROUND410

GROUND411

GROUND412

GROUND413

GROUND414

GROUND415

GROUND416

GROUND417

GROUND418

GROUND419

GROUND420

GROUND421

GROUND422

GROUND423

GROUND424

GROUND425

GROUND426

GROUND427

GROUND428

GROUND429

GROUND430

GROUND431

GROUND432

GROUND433

GROUND434

GROUND435

GROUND436

GROUND437

GROUND438

GROUND439

GROUND440

GROUND441

GROUND442

GROUND443

GROUND444

GROUND445

GROUND446

GROUND447

GROUND448

0 1 2 3 4

A

B

C

D

E

GROUND

WIRING DIAGRAM ZC

GROUND1B

GROUND1A

GROUND1C

GROUND31A

GROUND31F

GROUND31R

GROUND51

GROUND31A:A

GROUNDX

Document title
WIRING DIAGRAM


Document type
PRODUCT SCHEMATIC

Document No
22610880

Issue
02

Volume
02(03)

Page
46(46)

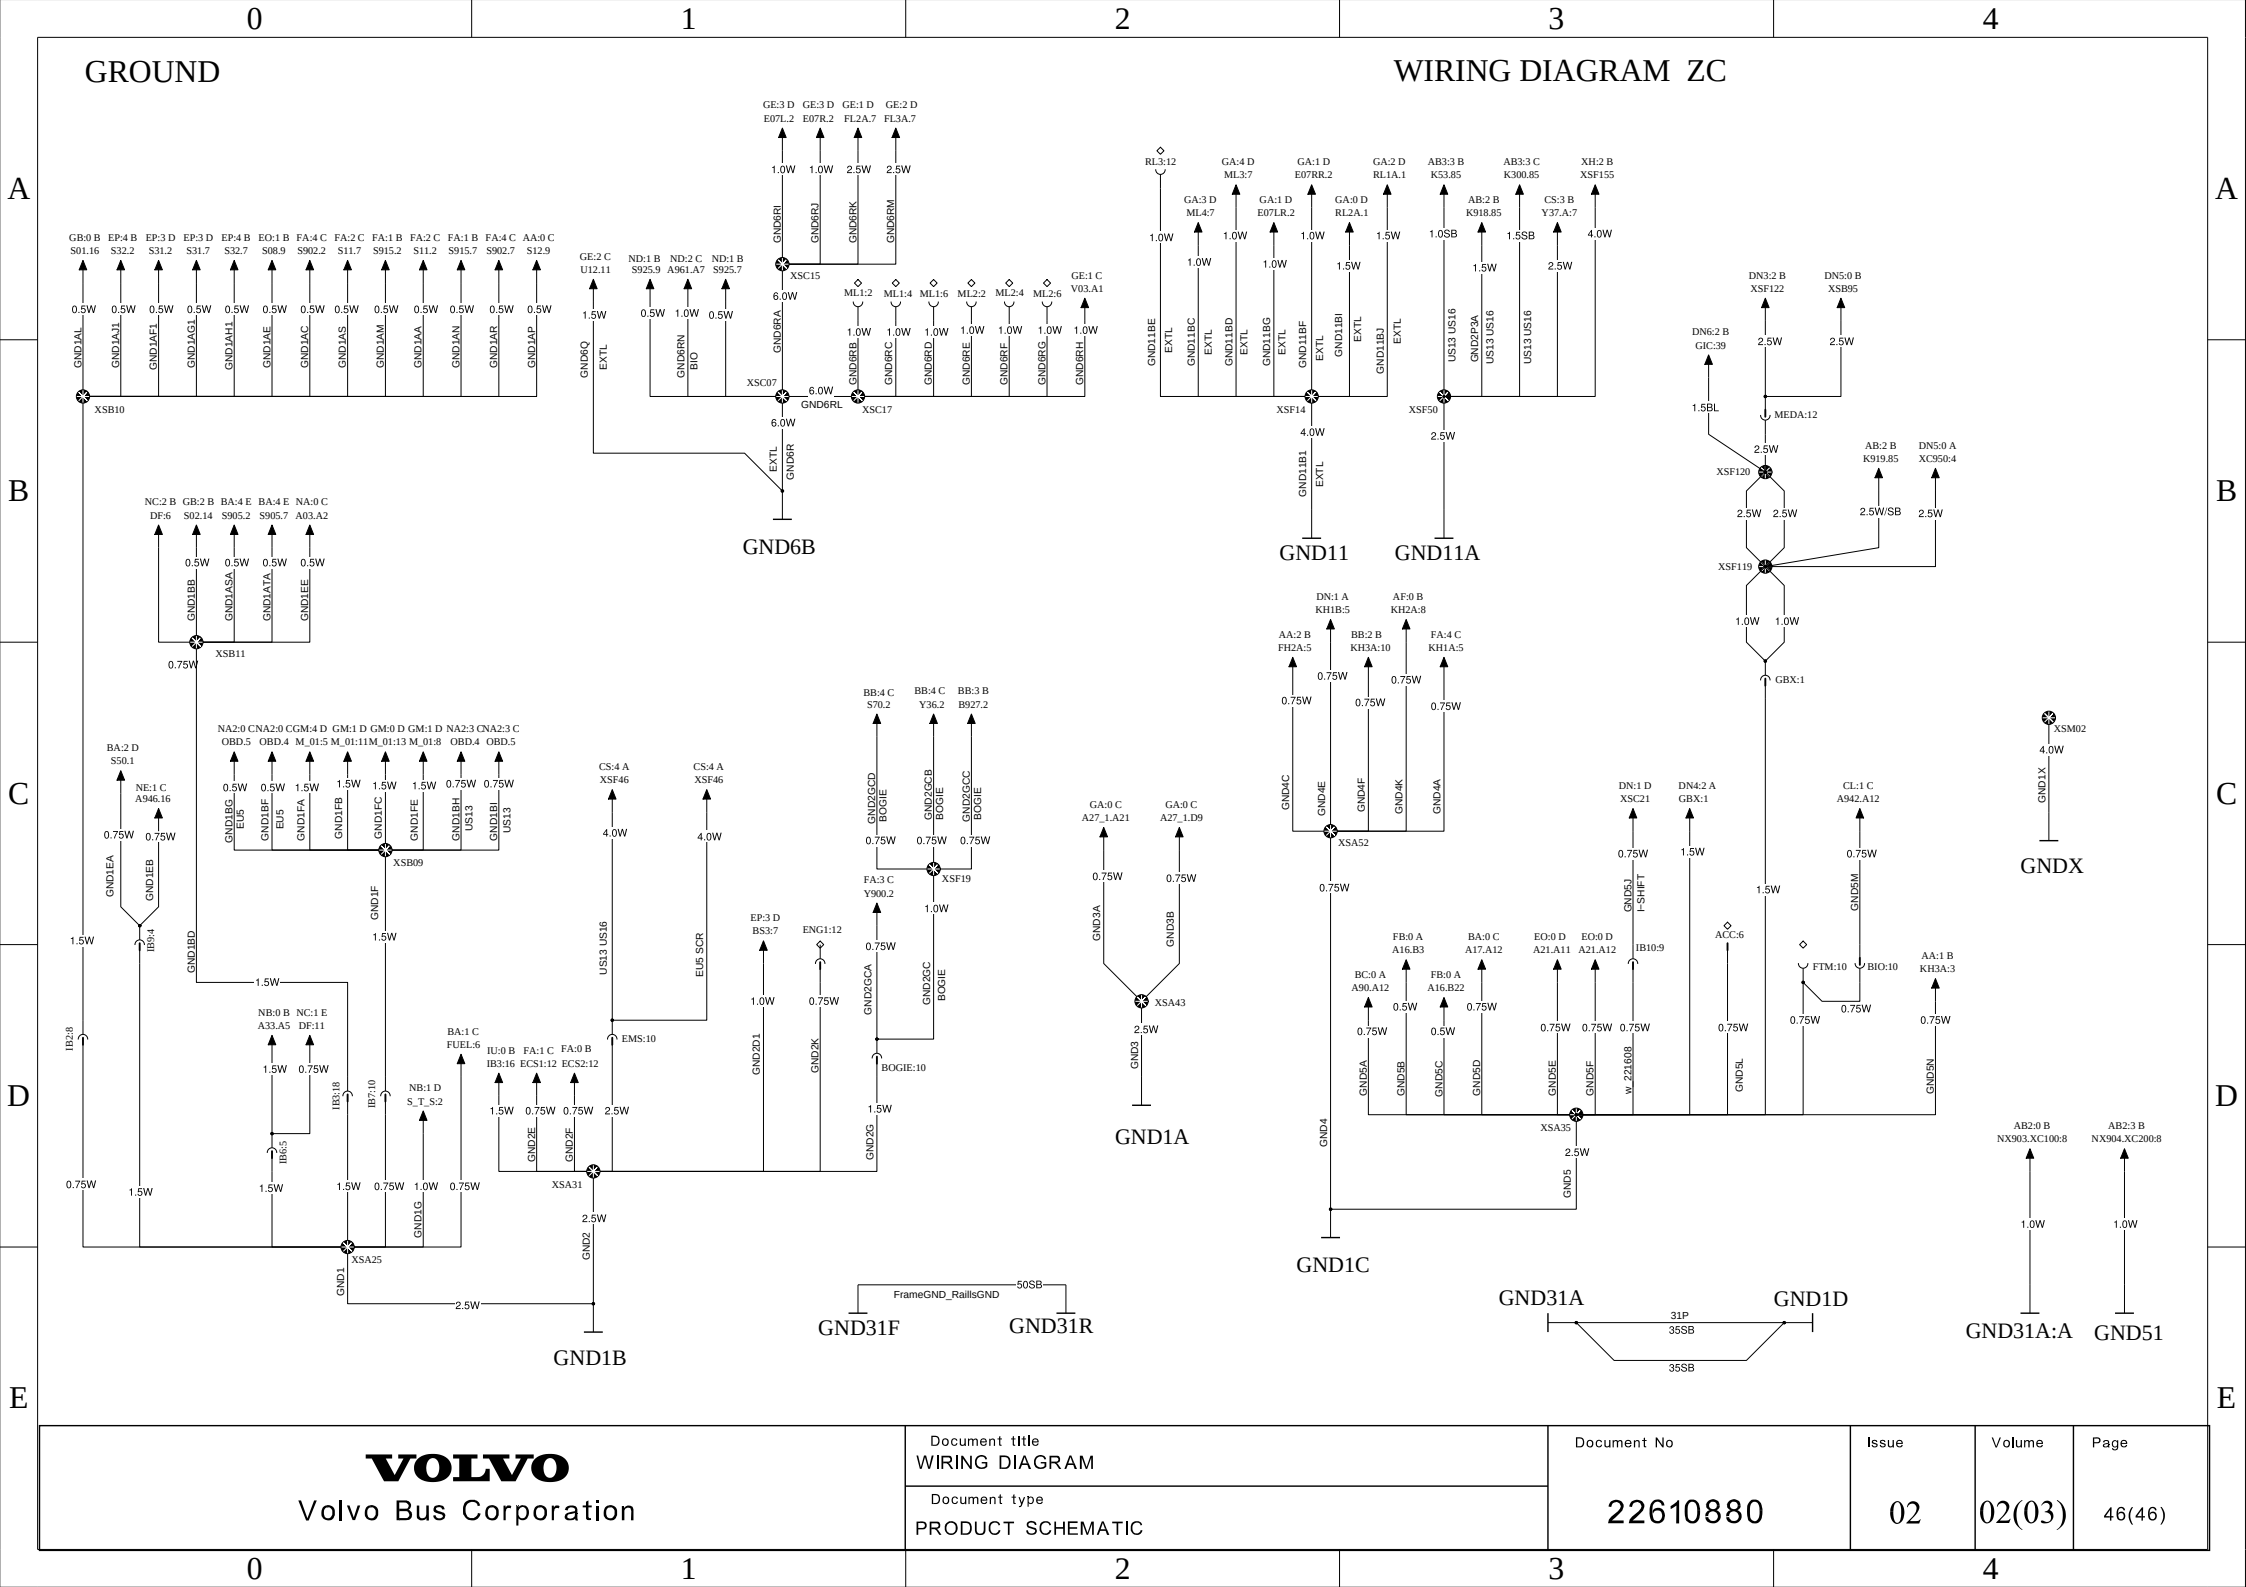

0

1

2

3

4

BILL OF MATERIALS INDEX (VOL 3)

NAME	PAGE
GROUNDS	2
FUSES AND CIRCUIT BREAKERS	3
COMPONENTS	4
INLINES	9
SPLICES	12



Volvo Bus Corporation

Document title			
WIRING DIAGRAM			
Document type			
PRODUCT SCHEMATICS			
Document No	Issue	Volume	Sheet No
22610880	02	03(03)	1(12)

GROUNDS

NAME	PAGE	NAME	PAGE
GND	BA 2 E	GND31B	AB2 1 E
GND1A	ZC 2 D	GND31B	AB3 2 E
GND1B	ZC 1 E	GND31F	ZC 1 E
GND1C	ZC 2 D	GND31R	ZC 2 E
GND1D	ZC 4 E	GND40	AF 1 E
GND1E	CS 4 B	GND41	AF 2 E
GND1UA:1	CU 3 E	GND51	ZC 4 E
GND1UB:1	CU 3 E	GND74	CU 4 E
GND2A	AF 2 E	GND75	AB 2 B
GND2B	AF 3 E	GND900	AB4 2 D
GND6	GB 0 C	GND900	AC 3 A
GND6B	ZC 1 B	GND PH	AB5 2 D
GND11	ZC 2 B	GNDX	ZC 4 C
GND11A	ZC 3 B		
GND31A	ZC 3 E		
GND31A:A	ZC 4 E		
GND31A:B	AB 2 B		

VOLVO

Volvo Bus Corporation

Document title			
WIRING DIAGRAM			
Document type			
PRODUCT SCHEMATICS			
Document No	Issue	Volume	Sheet No
22610880	02	03(03)	2(12)

FUSES AND CIRCUIT BREAKERS

FUSE	DESCRIPTION	PAGE
F1 (5A)	ECS, 5A	FA 4 A
F2 (10A)	BIC2,10A	NA 3 A
F4 (20A)	EBS,20A	EO 0 A
F5 (5A)	Horn,5A	IS 2 A
F7 (10A)	Gearbox ECU I-shift, 10A	DN 2 B
F8 (5A)	Gear selector ,I-Shift,5A	DN 2 B
F9 (5A)	Switchbox start/stop rear, 5A	AA 3 A
F10 (5A)	Fire Alarm,5A	BB 0 A
F11 (10A)	Dyna fleet, FMS, 10A	NC 1 A
F12 (5A)	Body +30,5A	BB 1 A
F13 (10A)	Spare	AB 2 A
F14 (5A)	BBM,5A	BB 0 A
F15 (15A)	EECU,15A	BA 0 A
F16 (5A)	VECU,5A	BA 0 A
F17 (5A)	Switch feed, 5A	FA 4 A
F18 (5A)	Alternator, 5A	AF 3 A
F19 (10A)	Hymmer, 10A	AF 0 A
F20 (10A)	EBS,10A	EO 0 A
F21 (15A)	Wiper,Washer,15A	GM 2 A
F23 (5A)	ACC, FMS,5A	NE 1 A
F24 (5A)	BIC 2,5A	NA 3 A
F25 (15A)	Washer motor, 15A	GM 1 A
F26 (5A)	ECS,5A	FA 4 A
F28 (10A)	Retarder, 10A	DN 1 A
F29 (5A)	Body +DR, 5A	BB 1 A
F31 (10A)	Hydraulic oil, DNOx2, 10A	NA 0 A
F32 (5A)	Tachograph,5A	NB 0 A
F33 (5A)	BIC 2,5A	NA 3 A
F35 (25A)	LCM ,25A	GA 0 A
F36 (25A)	LCM,25A	GA 1 A
F37 (25A)	LCM,25A	GA 1 A
F39 (25A)	DNOx2, 25A	CU 0 A
F40 (5A)	Voltage guard, 5A	AA 3 A
F41 (20A)	Radio,20A	IU 0 A
F42 (5A)	Maine Switch,5A	AA 0 A
F44 (25A)	LCM,25A	GA 0 A
F45 (25A)	LCM,25A	GA 1 A
F46 (25A)	LCM,25A	GA 0 A
F47 (5A)	Side marker L, 5A	GA 3 B
F48 (5A)	Side marker R, 5A	GA 3 B
F49 (5A)	Fuel cut off valve, 5A	NA 0 A
F51 (5A)	Radio,5A	IU 0 A
F52 (10A)	Luggage Light,10A	BB 2 A
F53 (10A)	Bogie Valve, Heater waterseperator, 5A	BB 4 A
F54 (5A)	Engine/Luggage hatch,5A	GA 2 A
F55 (10A)	Engine brake valve, Preheat relay, Fan sp	BA 1 A
F56 (10A)	Engine brake, 10A	BA 1 A
F57 (5A)	Key switch,5A	AA 0 A
F58 (5A)	FTM, 5A	CL 1 A
F61 (10A)	Light, luggageroom,10A	GA 1 A
F62 (20A)	Light sleeping compartment, 20A	GA 2 A
F63 (5A)		CL 3 B
F64 (10A)	Load Indicator	CL 3 B
F76 (80A)	FUSE, 12V Equalizer	AB 1 B
F77 (40A)	FUSE, 24V Equalizer	AB 1 B
F90A (30A)	FUSE - DNOX2RA	CU 3 D
F90B (30A)	FUSE - DNOX2RB	CU 3 D
F99 (15A)	Fuse, Allison +30 power supply	AB 2 A
F100 (10A)	10A Fuse, OBD connection to B+	AB 1 C
F206 (5A)	External Pre-Heater, 5A	AB5 1 C
F907 (20A)	Fuse 12V I-shift	AB 2 C
F915 (30A)	Fuse 12V EMS2	AB 2 C
F955 (20A)	Fuse 12V Act. EMS2	AB 2 C
F956 (10A)	Fuse 12V Fuel Pump	AB 2 C
F957 (20A)	Fuse 12V Cool Fan	AB 2 C
F958 (10A)	FUSE 12V Allison, GBX and OBD connector	AB 2 C

VOLVO

Volvo Bus Corporation

Document title

WIRING DIAGRAM

Document type

PRODUCT SCHEMATICS

Document No

22610880

Issue

02

Volume

03(03)

Sheet No

3(12)

COMPONENTS

COMPONENT	DESCRIPTION	PAGE
30UA:1	Terminal - Power for heated hose	CU 3 D
30UB:1	Terminal - Power for heated hose	CU 3 D
A03	Instrument cluster	NA 0 C
A03	Instrument cluster	XC 0 B
A03	Instrument cluster	XJ 4 B
A03_1	Instrument cluster	XD 0 B
A07	Radio	XJ 3 D
A07_1	Radio	IU 0 C
A13	Control unit, TECU, I-Shift AMT-F	DN6 1 C
A14	Control unit EMS	XC 1 E
A14	Control unit EMS	XD 0 D
A16	ECS	FA 0 D
A16	ECS	FB 0 A
A16	ECS	XC 4 C
A16	ECS	XD 3 B
A17	VECU	BA 0 C
A17	VECU	XC 3 C
A17	VECU	XD 3 B
A17	VECU	XJ 0 A
A19	Control unit,GECU(gear selector ECU)	DN5 0 A
A19_1	Control unit,GECU(gear selector ECU)	DN2 0 B
A19_2	Control unit,GECU(gear selector ECU)	DN2 3 B
A21	EBS	EO 0 D
A21	EBS	EP 0 A
A21	EBS	XC 3 C
A21	EBS	XD 3 B
A27_1	Control unite,LCM(Light Control Module)	GA 0 C
A27_1	Control unite,LCM(Light Control Module)	GB 0 C
A27_1	Control unite,LCM(Light Control Module)	GE 2 A
A27_1	Control unite,LCM(Light Control Module)	XC 4 C
A27_1	Control unite,LCM(Light Control Module)	XD 3 B
A30	Control unite,SWM(Steering Wheel Module)	IU 3 B
A30	Control unite,SWM(Steering Wheel Module)	XJ 3 D
A33	TACHO	NB 0 B
A33	TACHO	XJ 1 D
A41	Body I/O Module 41	CZ 0 C
A41	Body I/O Module 41	DN4 1 D
A42	Component group transmission.Contains B26	DN3 2 D
A42	Component group transmission.Contains B26	DN4 2 D
A57	Control unit, Body	DN5 0 C
A58	Control unit, Body	DN5 1 D
A80	Air Dryer	BA 2 E
A90	BBM	AA 0 E
A90	BBM	BB 0 E
A90	BBM	BC 0 A
A90	BBM	XC 2 C
A90	BBM	XD 2 B
A124	Starter motor with relay	AF 1 D
A125	Control unit, TGW	XD 1 B
A125_	TGW II Control Unit	NC 1 D
A133	Handset	ND 1 D
A137	DEF CONTROL MODULE	CX 0 C
A914	Control unit, TECU, I-Shift AMT-D	DN3 1 C
A914	Control unit, TECU, I-Shift AMT-D	DN4 1 C
A914	Control unit, TECU, I-Shift AMT-D	XC 2 E
A914	Control unit, TECU, I-Shift AMT-D	XD 0 D
A917	DNOX2 ECU	CU 0 C
A917	DNOX2 ECU	XF 2 D
A918_13	NOx-sensor	XF 1 D
A926	GearShift ECU	DN 1 C
A926	GearShift ECU	XC 1 C
A926	GearShift ECU	XD 2 B
A942	BIO - Bus I/O	CL 1 C
A946	FMS GATEWAY	NE 1 C
A961	Control unit, Alcolock Interlock	ND 2 C
A996	UQS	XH 1 B
A998	DEF Pump	CX 1 B
B03	Sensor,footbrake valve	EO 0 C
B06	Wet tank press	BA 4 B
B07	Sensor,fuel level front axle	NA 1 E
B12	Sensor,tachograph/speedometer	DN6 3 C
B12	Sensor,tachograph/speedometer	NB 1 E
B13	Sensor,wheel speed, lhs. 1:st front axle	EO 2 B
B14	Sensor,wheel speed, rhs. 1:st front axle	EO 2 B
B15	Sensor,Wheel speed, lhs. 1:st driven rear	EO 3 B
B16	Sensor,Wheel speed, rhs. 1:st driven rear	EO 3 B
B22	Sensor, outdoor temperature	NA 1 D

VOLVO

Volvo Bus Corporation

Document title

WIRING DIAGRAM

Document type

PRODUCT SCHEMATICS

Document No

22610880

Issue

02

Volume

03(03)

Sheet No

4(12)

COMPONENT	DESCRIPTION	PAGE
B25	Sensor,accelerator pedal	BA 2 B
B29	sensor chassis level rear axle LHS	FB 2 D
B30	sensor chassis level rear axle RHS	FB 2 D
B32_10	Sensor Eng. cooling fan Speed	CS 2 A
B32_13	Sensor Eng. cooling fan speed	CS 2 A
B39	Sensor,air filter press/Temp.	CS 2 D
B40	Sensor,brake lining wear indicator,lhs. 1	EO 2 B
B41	Sensor,brake lining wear indicator,rhs. 1	EO 1 B
B42	Sensor,brake lining wear indicator,lhs. 1	EO 3 B
B43	Sensor,brake lining wear indicator,rhs.1:	EO 2 B
B49	Sensor,steering angle	EP 2 D
B50	Sensor,yaw-rate	EP 2 D
B57	Sensor,air pressure, suspension bellows,1	FB 0 C
B58	Sensor,air perssure,suspension bellow,rhs	FB 1 C
B59	Sensor, indoor temperature	NA 1 D
B69C	Sensor,coolant temperature, retarder	CZ 1 C
B69C	Sensor,coolant temperature, retarder	DN4 1 D
B96A	Pre-Sensor, NOx	XH 2 C
B96B	Pos Sensor, NOx	XH 4 C
B904	hydr oil level sens	NA 1 B
B906	Sensor,Brake Press (6*2)	BC 1 C
B910	sensor air press. ECS port 21	FB 0 C
B914	sensor chassis level front axle LHS	FB 3 D
B915	sensor chassis level front axle RHS	FB 3 D
B918	Hydraulic oil level sensor 2	NA 1 B
B920	Sensor,fuel level 2 front axle	NA 1 E
B923	Sensor temp/level adblue tank SCRT DNOX2	CU 3 D
B927	Sensor Hydr.oil press	BB 3 B
B930	Sensor temp upstream scrt DNOX2	CU 2 A
B940	Sensor brake lining wear indicator,A/B R	EP 1 D
B941	Sensor brake lining wear indicator,A/B L	EP 1 D
B942	sensor wheel speed A/B R	EP 1 D
B943	sensor wheel speed A/B L	EP 1 D
B973	Fire Sensor, 150°C	BB 0 C
B974	Fire sensor	BB 0 C
B975	Fire sensor	BB 0 C
B977	Sensor, brake pressure	NA 0 D
B978	Sensor, brake pressure	NA 0 D
B979	Parking brake pressure	BB 1 C
B980	Auxilliary pressure	BB 1 C
B985	Fire sensor 4, D13	BB 0 B
B986	Fire sensor 5, D13	BB 0 B
B991_10	temp. DPF	CX 3 B
B992_10	temp. DPF	CX 3 B
B993_10	temp. DPF	CX 3 B
B995_13	SENSOR, DPF PRESSURE	CX 2 B
BB1	BodyBuilder Interface Connector	AA 0 C
BB1	BodyBuilder Interface Connector	AB2 1 C
BB1	BodyBuilder Interface Connector	AB4 2 B
BB1	BodyBuilder Interface Connector	AF 0 B
BB1	BodyBuilder Interface Connector	BA 0 D
BB1	BodyBuilder Interface Connector	BB 2 C
BB1	BodyBuilder Interface Connector	BC 3 B
BB1	BodyBuilder Interface Connector	CL 1 B
BB1	BodyBuilder Interface Connector	EP 2 B
BB1	BodyBuilder Interface Connector	FA 1 B
BB1	BodyBuilder Interface Connector	FB 2 B
BB1	BodyBuilder Interface Connector	GA 1 B
BB1	BodyBuilder Interface Connector	GB 3 B
BB1	BodyBuilder Interface Connector	IS 2 C
BB1	BodyBuilder Interface Connector	IU 1 E
BB1	BodyBuilder Interface Connector	NA 2 D
BB1	BodyBuilder Interface Connector	NB 1 A
BB1	BodyBuilder Interface Connector	ND 1 A
BB1	BodyBuilder Interface Connector	XD 1 B
BB1	BodyBuilder Interface Connector	XE 3 D
D1	Diod	BA 1 E
D2	Diod	AA 2 D
D3	Diode - Wiper motor	GM 3 D
D8	Diode for UMAIN module	AA 1 A
E07L	Fog light left	GE 3 D
E07LR	Fog light left rear	GA 1 D
E07R	Fog light right	GE 3 D
E07RR	Fog light right rear	GA 1 D
E09	Lamp,brake light	GA 0 D
E11LA	Side marker light left	GA 3 D
E11LF	Side marker light left front	GA 3 D

VOLVO

Volvo Bus Corporation

Document title

WIRING DIAGRAM

Document type

PRODUCT SCHEMATICS

Document No

22610880

Issue

02

Volume

03(03)

Sheet No

5(12)

COMPONENT	DESCRIPTION	PAGE
E11LR	Side marker light left rear	GA 3 D
E11ML	Side marker light middle left	GA 3 D
E11MR	Side marker light middle right	GA 4 D
E11RA	Side marker light right	GA 4 D
E11RF	Side marker light right front	GA 3 D
E11RR	Side marker light right rear	GA 4 D
E11TL	Position Light,Left(Trailer)	GA 3 D
E11TR	Position Light,Right(Trailer)	GA 3 D
E13L	Dir. ind. left	GA 1 D
E13LA	Dir.indicator left	GA 1 D
E13R	Dir. ind. right	GA 1 D
E13RB	Dir.indicator right	GA 1 D
FH1	FuseHolder 12V	AB 2 C
FL2A	Front light, L	GE 1 D
FL3A	Front light, R	GE 2 D
G01	Battery	AB2 1 C
G01B	Battery	AB2 1 D
G01B	Battery	AB3 2 C
G01B1	I-Start Starter Battery	AB3 2 D
G01C	I-Start Consumer Battery	AB4 2 C
G01C1	I-Start Consumer Battery	AB4 2 D
G02	Alternator 1	AF 2 D
G03	Alternator 2	AF 3 D
G08A	Battery	AC 3 B
G08B	Battery	AC 3 B
G901	Battery Equalizer	AB 2 A
GND	GDN - Adapter_AHI	BA 2 E
GND1A	GND - Electrical Center	ZC 2 D
GND1B	GND - Electrical Center	ZC 1 E
GND1C	GND4/GND5 - Electrical Center	ZC 2 D
GND1D	GND - Batt_Box_NVPDUF	ZC 4 E
GND1E	GND - US13	CS 4 B
GND1UA:1	GND - DNOX2RA	CU 3 E
GND1UB:1	GND - DNOX2RB	CU 3 E
GND2A	GND - ALT_1	AF 2 E
GND2B	GND - ALT_2	AF 3 E
GND6	GND - Driver Location	GB 0 C
GND6B	GND6Q/GND6R - Driver Location	ZC 1 B
GND11	GND - Rear Axle	ZC 2 B
GND11A	Ground	ZC 3 B
GND31A	GND - Batt_Box_NVPDUF	ZC 3 E
GND31A:A	GND - Batt_Boxx_NVPDUF	ZC 4 E
GND31A:B	Ground	AB 2 B
GND31B	GND - Battery	AB2 1 E
GND31B	GND - Battery	AB3 2 E
GND31F	GND - Frame	ZC 1 E
GND31R	GND - Raills	ZC 2 E
GND40	GND - STARTER_ENG	AF 1 E
GND41	GND - STARTER_ENG_US	AF 2 E
GND51	Ground	ZC 4 E
GND74	GND - SCR	CU 4 E
GND75	GND - Equalizer	AB 2 B
GND900	GND - Starter Batteries	AB4 2 D
GND900	GND - Starter Batteries	AC 3 A
GND_PH	GND - Pre heater	AB5 2 D
GNDX	GND - Xenon Lights	ZC 4 C
H01	Air,Operated	IS 1 B
H02	Diaphragm horn	IS 2 B
K2	Over Load Indicator	CL 3 C
K02	Relay - Day Light	GB 0 C
K3	ECS	FA 4 C
K4	I-Shift/Voith	DN 1 A
K7	Start engine	AF 0 B
K8	VECU/EMS	BA 0 C
K9	Wiper/Washer	GM 2 C
K11	Prevent start engine	AA 2 C
K12	Luggage Light	BB 2 B
K13	Emergency switch relay	AA 0 B
K14	Bogie	BB 4 B
K17	Ignition +15	AA 2 A
K35	relay disconn headlight_wash	GM 1 C
K48	Relay Engine Preheating	AB5 1 C
K53	Relay	AB3 3 B
K300	I-Start Main Relay	AB3 3 C
K400	I-Start +30 Relay (Body)	AB4 2 B
K902	Relay heated hose pressure line	CU 1 D
K903	Relay heated hose backflow to pump line	CU 2 D

VOLVO

Volvo Bus Corporation

Document title

WIRING DIAGRAM

Document type

PRODUCT SCHEMATICS

Document No

22610880

Issue

02

Volume

03(03)

Sheet No

6(12)

COMPONENT	DESCRIPTION	PAGE
K908	Relay heated hose suction line	CU 1 D
K909	Relay heated hose backflow to tank line	CU 2 D
K911	Relay, DRL Light	GE 1 B
K918	Relay 12V EMS2	AB 2 B
K919	Relay 12V IVS	AB 2 B
M01	Motor, windscreen wiper	GM 3 D
M02	windscreen washer motor	GM 1 C
M03	headlights washer motor	GM 0 C
NX903	I-Start Front Fuse Box	AB2 0 B
NX903	I-Start Front Fuse Box	AB3 1 B
NX904	I-Start Rear Fuse BOX	AB2 3 B
OBD	ON BOARD DIAGNOSTIC CONNECTOR	NA2 3 C
R01	Heater, engine preheat	AB5 2 C
R02	Heater, rear view mirror	GB 0 C
R08	Termination resistor,CAN-bus	XC 1 A
R904	Resistor,DBUS	XE 4 C
R905	Heated Hose Suction Line	CU 1 D
R905 US	suction line	CX 1 E
R906	Heated Hose Pressure Line	CU 1 D
R906 US	Pressure line	CX 1 E
R907	1939-7 resistor	XF 4 D
R908	Heated Hose Backflow to tank	CU 2 D
R909	Heated Filter	CU 0 D
R910	Heated Hose Backflow to pump	CU 2 D
R918	Termination resistor 120ohm	XG 4 D
RL1A	Rear light, R	GA 2 D
RL2A	Rear light, L	GA 0 D
S01	Switch,main lighting,selector type	GB 0 B
S02	Stalk switch LHS	BA 2 B
S02	Stalk switch LHS	GB 2 B
S06	Stalk switch , windscreen wiper, selector	GM 4 B
S06	Stalk switch , windscreen wiper, selector	NA 2 D
S08	Switch,differential gear lock,rear wheels	EO 1 B
S11	switch bogie lift	FA 2 C
S12	Main switch	AA 0 C
S14A	Switch, push button, Air horn	IS 2 E
S14B	Switch, push button, Air horn	IS 2 E
S15A	Switch,Starter Key	AA 1 B
S15B	Switch,Starter Feed	AA 1 D
S16	Switch, push button, El. horn	IS 2 E
S20	Dynafleet Switch	NC 1 C
S24	stalk switch retarder	BA 3 B
S31	Switch, TCS (Traction Control System)	EP 3 D
S32	Brake hold	EP 4 B
S34	Switch unit, steering wheel push buttons	IU 3 B
S41	Switch, battery main switch control	AB2 1 C
S45	Position switch,differential gear lock in	EP 3 C
S50	Switch, pressure parking brake indicator,	BA 2 D
S58	clutch switch	BA 2 C
S68	Sensor coolant level	CS 0 A
S68_13	Sensor Coolant level	CS 0 A
S70	Switch Hydr.oil ,Flow sensor	BB 4 C
S90	Battery Switch	AB3 1 C
S901	eng_stop rear	AA 3 D
S902	switch leveling	FA 4 C
S904	Switch,emergency cut-out	AA 0 B
S905	Switch,Retarder	BA 4 E
S907	eng_start rear	AA 3 D
S908	eng_start enable rear	AA 3 D
S915	Switch,kneeling	FA 1 B
S925	Switch, Alcolock	ND 1 B
Se32	Allison Turbine Speed Sensor	DN5 0 E
Se34	Allison Output Speed Sensor	DN5 1 E
Se35	Allison Output Speed Sensor	DN5 1 E
T900	DC converter temperature sensor	AC 3 B
U03	Modulator,EBS,rear axle(drive axle)	EO 3 C
U04	Modulator EBS, bogie	EP 1 C
U06	Voltage converter	IU 0 B
U08	Modulator,EBS,front	EO 2 C
U12	Voltage converter, Bi-xenon	GE 2 C
U25	Voltage converter, DC/DC	AC 2 C
V03	Diod, Light	GE 1 C
V04	Diod, Light	GE 2 C
VBC635	Sensor, PM	XH 2 C
X701	I-Start Media Bracket (Chassis)	AB3 2 C
X801	I-Start Media Bracket (Body)	AB4 2 B
X901	Connector Battery +	AB2 3 E

VOLVO

Volvo Bus Corporation

Document title

WIRING DIAGRAM

Document type

PRODUCT SCHEMATICS

Document No

22610880

Issue

02

Volume

03(03)

Sheet No

7(12)

COMPONENT	DESCRIPTION	PAGE
X905	VPDU Rear without preheat relay	AB4 2 B
X910	Junction Box for Chassis	AB2 0 D
Y02	Solenoid valve,Differential lock,rear whe	EP 3 C
Y25	Solenoid valve unit, ECS, Rear axle	FA 0 C
Y36	Solenid valve,Steerable axle,Bogie	BB 4 C
Y37	Solenoid valve AVU, engine brake / EPG (E	CS 3 B
Y40	Solenoid valve unit, ECS, Front axle	FA 1 C
Y72	Valve, Horn	IS 2 B
Y186	Extension Valve Unit (EVU)	DN6 1 D
Y900	solenoid valve unit, ECS, Bogie axle	FA 3 C
Y901	Fuel cut off valve front axle	BA 1 C
Y911	sol valve inj SCRT DNOX2	CU 2 A
Y911_10	sol valve DEF inj.	CX 2 E
Y912	sol valve adblue tank heating SCRT DNOX2	CU 0 D
Y912 US	Sol Valve Heating Urea Tank	CX 2 D
Y914	Pressure control valve(PCU/R)	EP 0 B
Y915	Pressure controll valve (PCU/R)	EP 0 B
Y939	Solenoid Valve AHI	BA 2 E

VOLVO

Volvo Bus Corporation

Document title
WIRING DIAGRAM

Document type
PRODUCT SCHEMATICS

Document No	Issue	Volume	Sheet No
22610880	02	03(03)	8(12)

INLINES

INLINE	PAGE	INLINE	PAGE	INLINE	PAGE	INLINE	PAGE	INLINE	PAGE
+30:1	AB2 2 A	BB2:9	IS 2 C	BB13:5	BC 0 B	DPF10:K	CX 2 B	FH2A:4	EO 0 A
+30:1	AB3 3 A	BB2:10	GB 2 B	BB13:6	CL 2 D	DPF10:L	CX 2 D	FH2A:5	AA 2 B
+B:1	AB2 0 A	BB2:11	AA 0 C	BB13:7	CL 2 D	DPF10:M	CX 2 D	FH2A:6	NA 3 A
+B:1	AB3 1 A	BB2:12	NB 1 A	BB13:12	GB 4 D	DPF10:N	XH 2 C	FH2A:7	AF 0 A
A19:1	DN 0 D	BB3:1	GB 2 B	BB13:13	GB 4 D	DPF10:P	XH 2 C	FH2A:8	AF 3 A
A19:2	DN 1 D	BB3:2	BC 3 B	BBOX:1	AB2 1 B	ECS1:1	FA 1 D	FH2A:9	FA 4 A
A19:3	DN 1 D	BB3:3	FA 1 B	BBOX:2	AB2 1 B	ECS1:2	FA 1 D	FH2B:1	BB 1 A
A19:4	DN 1 D	BB3:4	FB 2 B	BBOX:3	NB 0 A	ECS1:3	FA 0 D	FH2B:3	NA 0 A
A19:5	DN 1 D	BB3:5	GB 2 B	BFEED:1	CU 0 A	ECS1:5	FB 0 B	FH2B:4	DN 1 A
A19:6	DN 1 D	BB3:6	GB 0 D	BIO:1	CL 1 B	ECS1:6	FB 2 B	FH2B:5	AA 2 A
A19:11	DN 2 D	BB3:7	NA 2 D	BIO:2	XD 4 D	ECS1:7	FB 3 B	FH2B:6	NB 0 A
A19:12	DN 2 D	BB3:8	NA 3 D	BIO:3	XD 4 D	ECS1:8	FB 0 B	FH2B:8	FA 4 A
A19:15	DN 2 D	BB3:9	AF 0 B	BIO:4	XE 0 B	ECS1:9	FB 0 B	FH2B:9	GM 1 A
A19:16	DN 2 D	BB3:10	BA 1 D	BIO:5	XE 0 B	ECS1:10	FB 3 B	FH3A:1	BA 1 A
A19 :1	DN2 3 B	BB3:11	BB 1 B	BIO:6	XE 3 C	ECS1:11	FB 3 B	FH3A:2	BA 1 A
A19 :2	DN2 3 B	BB3:12	BB 1 B	BIO:7	XE 3 C	ECS1:12	FA 1 C	FH3A:3	BA 1 A
A19 :3	DN2 3 B	BB4:1	BC 3 B	BIO:9	CL 1 B	ECS2:1	FA 0 D	FH3A:4	GA 2 A
A19 :4	DN2 3 B	BB4:2	BC 3 B	BIO:10	ZC 4 D	ECS2:2	FA 0 D	FH3A:5	BB 4 A
A19 :5	DN2 3 B	BB4:3	BC 3 B	BMUX 1:1	XD 1 B	ECS2:3	FA 0 D	FH3A:7	NA 0 A
A19 :6	DN2 3 B	BB4:4	BC 3 B	BMUX 1:2	XD 1 B	ECS2:4	FB 0 B	FH3A:8	BB 2 A
A19 :7	DN2 3 B	BB4:5	BC 3 B	BMUX 1:3	AA 0 B	ECS2:5	FB 1 B	FH3A:12	IU 0 A
A19 :8	DN2 3 B	BB4:6	BC 2 B	BMUX 1:4	AA 0 C	ECS2:6	FB 2 B	FH3B:1	CL 3 B
A19 :9	DN2 4 B	BB4:7	EP 2 B	BMUX 1:5	AA 0 B	ECS2:7	FB 2 B	FH3B:2	CL 3 B
A19 :10	DN2 4 B	BB4:8	BA 0 E	BOGIE:1	FB 1 B	ECS2:8	FB 0 B	FH3B:3	CL 3 B
A19 :11	DN2 4 B	BB4:9	NA 3 D	BOGIE:2	FB 1 B	ECS2:9	FB 0 B	FH3B:4	AA 0 A
A19 :12	DN2 4 B	BB4:10	BA 0 D	BOGIE:3	FA 3 D	ECS2:10	FB 3 B	FH3B:5	GA 2 A
A80.BY:1	BA 2 D	BB4:11	GB 3 B	BOGIE:4	FA 3 D	ECS2:11	FB 2 B	FH3B:7	CL 1 A
A80.BY:3	BA 2 D	BB5:1	GB 2 D	BOGIE:5	FA 3 D	ECS2:12	FA 0 B	FH3B:9	GA 1 A
A80.BY:4	BA 3 E	BB5:2	GB 2 D	BOGIE:6	EP 1 B	EMS:1	BA 0 D	FH4A:2	CU 0 B
A946 :6	NE 3 C	BB5:3	GB 1 D	BOGIE:7	EP 1 B	EMS:2	XC 3 D	FH4A:3	CU 0 A
A946 :7	NE 3 C	BB5:4	GB 3 D	BOGIE:8	EP 1 B	EMS:3	XC 3 C	FH4A:4	AA 3 A
A946 :13	NE 3 D	BB5:6	GB 4 C	BOGIE:9	EP 1 B	EMS:4	XD 3 C	FH4A:5	GA 1 A
A946 :14	NE 3 D	BB5:7	GB 1 D	BOGIE:10	ZC 1 D	EMS:5	XD 3 C	FH4A:7	NA 3 A
ACC:1	NE 1 B	BB5:8	GB 3 D	BOGIE:11	BB 4 C	EMS:6	BA 1 B	FH4A:8	GA 1 A
ACC:2	XC 1 B	BB5:9	GE 1 B	BOGIE:12	BB 4 C	EMS:7	BA 1 B	FH4A:12	GA 0 A
ACC:3	XC 2 B	BB5:10	GE 2 B	BS1:2	EO 2 D	EMS:9	BA 1 B	FH4B:1	GA 3 B
ACC:4	XD 2 A	BB5:11	GB 1 D	BS1:3	EO 2 D	EMS:10	ZC 1 D	FH4B:2	GA 3 B
ACC:5	XD 2 A	BB5:12	GB 3 D	BS1:4	EO 2 D	EMS:11	BB 3 C	FH4B:3	GA 3 B
ACC:6	ZC 3 D	BB6:1	BC 2 B	BS1:5	EO 2 D	ENG1:2	AA 2 D	FH4B:4	IU 0 A
ACC:7	BA 1 C	BB6:2	GA 1 B	BS1:8	EP 0 B	ENG1:3	BB 0 D	FH4B:5	GA 0 A
ACC:8	BA 1 C	BB6:3	CL 3 D	BS1:9	EP 0 B	ENG1:4	AA 3 D	FH4B:7	AA 0 A
ACC:9	NE 1 B	BB6:4	GA 2 A	BS1:10	EP 0 B	ENG1:5	BB 0 B	FH4B:8	GA 1 A
ACM:1	NB 0 B	BB6:5	BB 2 C	BS1:11	EP 0 B	ENG1:6	AA 3 C	FH4B:12	GA 0 A
ACM:2	AB2 1 B	BB6:6	BB 2 C	BS1:12	EP 0 B	ENG1:7	AF 0 C	FL2:11	GB 0 B
ACM:3	AC 2 D	BB6:12	GA 1 C	BS2:2	EP 3 B	ENG1:8	AF 0 B	FL3:11	GB 0 B
ARTIC:1	FB 3 B	BB7:1	GA 2 C	BS2:3	EP 2 B	ENG1:9	AF 3 B	FTM:1	CL 1 B
ARTIC:2	FB 4 B	BB7:2	GA 0 C	BS2:5	EP 3 C	ENG1:10	NA2 0 E	FTM:2	XD 4 D
ARTIC:5	BC 1 B	BB7:3	GA 0 C	BS2:6	EP 3 C	ENG1:11	NA 0 B	FTM:3	XD 4 D
ARTIC:6	BC 1 B	BB7:4	GA 2 C	BS3:1	EO 3 D	ENG1:12	ZC 1 D	FTM:4	XE 0 D
ARTIC:7	BC 1 B	BB7:5	GA 1 C	BS3:2	EO 3 D	EU4:1	AB 2 A	FTM:5	XE 0 D
ARTIC:8	BC 1 B	BB7:6	GA 1 D	BS3:3	EO 3 D	EU4:4	EO 3 D	FTM:6	XE 0 C
ARTIC:9	BC 2 B	BB7:7	GA 0 C	BS3:4	EO 3 D	EU4:5	EO 4 D	FTM:7	XE 0 C
ARTIC:10	BC 0 B	BB7:8	GA 2 C	BS3:5	EP 3 B	EU4:6	EO 4 D	FTM:9	AA 2 B
ARTIC:11	BC 2 B	BB7:9	GA 3 C	BS3:6	EP 3 B	EU4:7	EO 4 D	FTM:10	ZC 4 D
ARTIC:12	BC 2 B	BB7:10	GA 3 C	BS3:7	EP 3 D	EU4:8	BA 0 B	FTM J:4	XE 0 D
AUDIO:1	XJ 3 B	BB7:11	GA 0 C	BS3:8	NA 3 B	EU4:10	CU 0 B	FTM J:5	XE 0 D
AUDIO:2	XJ 3 B	BB7:12	GA 1 C	BS3:9	BB 3 D	EU4:11	XF 3 C	FTM J:6	XE 0 C
AUDIO:3	IU 3 B	BB8:1	GB 1 E	BS3:10	BA 4 C	EU4:12	XF 3 C	FTM J:7	XE 0 C
BB1:1	BA 0 D	BB8:2	GB 3 D	BS3:11	BA 4 C	FEED:1	BA 0 A	FUEL:1	NA 1 E
BB1:2	BC 3 B	BB8:3	GB 4 B	BS3:12	BA 4 C	FH1A:1	DN 2 B	FUEL:2	NA 1 E
BB1:3	BC 3 B	BB10A:1	IU 1 E	DBUS_INT:1	XE 3 C	FH1A:2	DN 2 B	FUEL:3	NA 1 D
BB1:4	BC 2 B	BB10A:3	IU 1 B	DBUS_INT:2	XE 3 C	FH1A:3	DN 2 A	FUEL:5	BA 1 B
BB1:5	BB 2 C	BB10A:5	IU 1 B	DF:1	NC 2 B	FH1A:6	IS 2 A	FUEL:6	BA 1 C
BB1:6	NA 2 D	BB10A:7	IU 0 B	DF:2	NC 1 C	FH1A:7	FA 4 A	FUEL:7	FA 1 D
BB1:8	NA 2 D	BB10A:9	IU 1 E	DF:3	NC 0 C	FH1A:8	EO 0 A	FUEL:8	FA 2 D
BB1:9	NA 2 D	BB10B:1	IU 1 E	DF:4	XD 1 B	FH1A:10	NA 3 A	FUEL:9	FA 1 B
BB1:10	BB 3 B	BB10B:3	IU 1 B	DF:5	XD 1 B	FH1B:1	BA 0 A	FUEL:10	FB 4 B
BB1:11	BA 1 E	BB10B:5	IU 1 B	DF:6	NC 2 B	FH1B:2	BA 0 A	FUEL:11	FB 2 B
BB1:12	BC 3 B	BB10B:7	IU 0 B	DF:11	NC 1 E	FH1B:3	BA 0 A	GBX:1	DN4 2 A
BB2:1	NA 2 D	BB10B:9	IU 1 E	DPF10:A	XH 2 C	FH1B:4	AA 3 A	GBX:1	ZC 3 C
BB2:2	NA 1 D	BB11:1	GB 0 D	DPF10:B	XH 2 B	FH1B:6	BB 0 A	GBX:2	DN 2 B
BB2:3	NA 2 D	BB12:1	GE 3 C	DPF10:C	XH 3 C	FH1B:7	BB 0 A	GBX:7	XC 4 D
BB2:4	NA 1 D	BB12:2	GE 3 C	DPF10:D	XH 3 D	FH1B:8	AB 2 A	GBX:8	XC 4 D
BB2:5	XE 3 D	BB13:1	BC 0 B	DPF10:E	CX 2 A	FH1B:10	NC 1 B	GBX:9	XD 3 D
BB2:6	XE 3 D	BB13:2	CL 1 B	DPF10:F	BB 0 B	FH1B:11	BB 1 A	GBX:10	XD 3 D
BB2:7	IS 2 C	BB13:3	CL 1 B	DPF10:G	BB 0 B	FH2A:1	GM 2 A	GBX:13	NA 1 B
BB2:8	IS 2 B	BB13:4	FB 2 B	DPF10:J	CX 2 B	FH2A:3	NE 1 A	GBX:17	BA 2 D

VOLVO

Volvo Bus Corporation

Document title

WIRING DIAGRAM

Document type

PRODUCT SCHEMATICS

Document No

22610880

Issue

02

Volume

03(03)

Sheet No

9(12)

INLINE	PAGE	INLINE	PAGE	INLINE	PAGE	INLINE	PAGE	INLINE	PAGE
GBX:18	BA 2 D	IB4:4	GB 1 B	IB10:1	DN 1 B	MED:5	XG 1 D	ML4:3	GA 3 D
GIC:1	DN6 2 B	IB4:5	GB 1 B	IB10:2	GA 3 B	MED:6	CS 0 B	ML4:4	GA 3 D
GIC:2	DN6 1 B	IB4:6	GA 1 C	IB10:3	BB 1 D	MED:7	CS 0 D	ML4:5	GA 3 D
GIC:3	DN6 1 B	IB4:7	GB 1 B	IB10:8	DN 1 B	MED:8	CS 0 B	ML4:6	GA 2 B
GIC:4	DN6 2 B	IB4:8	GB 1 B	IB10:9	ZC 3 D	MED:9	AF 2 C	ML4:7	GA 3 D
GIC:5	DN6 1 B	IB4:9	GB 1 B	IB10:10	DN 1 B	MED:10	AF 3 B	R905A:1	CU 1 D
GIC:6	DN6 1 B	IB4:10	GB 3 C	IB10 I:1	DN 1 B	MED:11	DN5 1 B	R905A:2	CU 1 D
GIC:7	DN6 3 B	IB4:11	GB 3 C	IB10 I:8	DN 1 B	MED:12	AF 4 E	R905B:1	CU 1 D
GIC:12	CZ 3 B	IB4:12	GB 3 C	IB10 I:10	DN 1 B	MED:13	CS 3 B	R905B:2	CU 1 D
GIC:13	DN6 1 B	IB4:13	GB 3 C	IS:1	XD 2 A	MED:14	BB 0 C	R905C:1	CU 1 C
GIC:15	CZ 3 B	IB4:14	GB 3 B	IS:2	XD 2 A	MED:15	CS 3 B	R905C:2	CU 1 D
GIC:16	DN6 3 B	IB4:15	EP 4 B	IS:3	XC 1 B	MED:16	BB 0 D	R906A:1	CU 1 D
GIC:21	CZ 3 B	IB4:16	EP 4 B	IS:4	XC 1 B	MED:17	AF 3 C	R906A:2	CU 1 D
GIC:23	CZ 3 B	IB4:17	EP 3 B	KH1A:1	FA 4 C	MED:18	CS 1 B	R906B:1	CU 1 D
GIC:24	DN6 3 B	IB4:18	EP 3 B	KH1A:2	FA 4 D	MED:19	DN5 1 B	R906B:2	CU 1 D
GIC:26	DN6 3 B	IB5:2	AA 2 B	KH1A:3	FA 4 D	MED:20	CS 2 B	R906C:1	CU 1 C
GIC:27	CZ 3 B	IB5:3	BA 3 C	KH1A:4	CL 3 C	MED:21	CS 1 B	R906C:2	CU 1 D
GIC:28	CZ 3 B	IB5:4	AA 1 C	KH1A:5	FA 4 C	MED:22	CS 4 D	R908A:1	CU 2 D
GIC:29	CZ 4 B	IB5:5	AA 0 B	KH1A:7	CL 3 C	MED:23	CS 3 B	R908A:2	CU 2 D
GIC:35	CZ 4 B	IB5:6	AA 0 D	KH1A:10	CL 2 C	MED:24	CS 2 D	R908B:1	CU 2 D
GIC:39	DN6 2 B	IB5:7	AA 0 C	KH1A:11	CL 2 C	MED:25	CS 0 B	R908B:2	CU 2 D
IB1:1	NA 3 B	IB5:8	FA 1 B	KH1B:1	DN 1 A	MED:26	CS 2 B	R908C:1	CU 2 C
IB1:2	NA 2 D	IB5:9	FA 2 D	KH1B:2	DN 1 A	MED:27	CS 4 B	R908C:2	CU 2 D
IB1:3	NA 3 D	IB5:10	NA2 0 D	KH1B:3	DN 1 A	MED:28	CS 0 B	R910A:1	CU 2 D
IB1:4	NA 2 D	IB5:11	FA 1 C	KH1B:5	DN 1 A	MED:29	CS 2 D	R910A:2	CU 2 D
IB1:5	NA 3 D	IB5:12	FA 1 C	KH2A:1	BA 1 E	MED:30	CS 1 D	R910B:1	CU 2 D
IB1:6	NA 2 D	IB5:13	AA 1 B	KH2A:3	BA 0 C	MED:31	CS 4 B	R910B:2	CU 2 D
IB1:7	NA 3 B	IB5:14	FA 3 D	KH2A:4	BA 1 D	MED:32	CS 2 B	R910C:1	CU 2 C
IB1:8	NA 2 C	IB5:15	FA 3 D	KH2A:5	BA 0 B	MED:33	CS 2 B	R910C:2	CU 2 D
IB1:9	AF 2 B	IB5:16	FA 2 D	KH2A:6	BA 0 C	MED:34	CS 2 B	RA1:1	NB 1 C
IB1:10	AF 3 B	IB5:17	EO 1 C	KH2A:7	AF 0 B	MED:35	AF 1 C	RA1:2	NB 1 C
IB1:11	NA 2 C	IB5:18	NA 1 C	KH2A:8	AF 0 B	MED:36	CS 2 B	RA1:3	NB 1 C
IB1:12	NA 1 C	IB6:1	NB 0 B	KH2A:9	BA 0 B	MED:37	CS 1 B	RA1:4	NB 1 C
IB1:13	NA 1 C	IB6:2	XJ 1 B	KH2A:10	AF 0 B	MED:39	CS 4 B	RA1:5	NA 2 B
IB1:14	XC 1 B	IB6:3	XJ 1 B	KH2A:11	AF 0 B	MEDA:1	DN6 3 A	RA1:6	AF 2 B
IB1:15	XC 1 B	IB6:4	NB 0 B	KH2A:12	AF 0 B	MEDA:1	NB 1 D	RA1:7	AF 3 B
IB1:16	XD 2 A	IB6:5	ZC 0 D	KH2B:1	AA 2 D	MEDA:2	DN6 3 A	RA1:10	NA 1 B
IB1:17	XD 2 A	IB6:6	NB 1 B	KH2B:2	GM 2 B	MEDA:2	NB 1 D	RA1:11	AB2 1 A
IB1:18	NA 3 B	IB6:7	NB 1 C	KH2B:3	GM 2 B	MEDA:3	DN6 3 A	RL3:1	GA 3 D
IB2:1	NA 2 D	IB6:8	NB 1 C	KH2B:4	AA 2 D	MEDA:3	NB 1 D	RL3:2	GA 3 D
IB2:2	NA 2 D	IB6:9	NB 1 C	KH2B:5	GM 2 B	MEDA:4	DN6 3 A	RL3:3	GA 1 D
IB2:3	NA 2 D	IB6:10	NB 1 C	KH2B:6	GM 2 C	MEDA:4	NB 1 D	RL3:4	GA 1 D
IB2:4	NA 2 D	IB6:12	NB 2 C	KH2B:9	GM 2 C	MEDA:5	DN4 1 B	RL3:5	GA 1 B
IB2:5	NA 1 B	IB7:1	GM 1 B	KH3A:1	AA 0 B	MEDA:5	DN6 1 A	RL3:6	GA 0 D
IB2:6	NA 1 D	IB7:2	GB 4 C	KH3A:3	AA 1 B	MEDA:6	DN4 1 B	RL3:7	GA 2 D
IB2:7	GA 3 B	IB7:3	GB 4 C	KH3A:4	BB 2 B	MEDA:6	DN6 1 A	RL3:8	BC 2 C
IB2:8	ZC 0 D	IB7:4	GM 3 B	KH3A:5	AA 1 B	MEDA:7	XC 2 D	RL3:10	GA 1 D
IB2:9	GA 2 B	IB7:5	XF 4 C	KH3A:6	AA 0 B	MEDA:8	XC 3 D	RL3:11	GA 2 B
IB2:11	IS 2 D	IB7:6	XF 4 C	KH3A:7	BB 2 B	MEDA:9	XD 0 D	RL3:12	ZC 2 A
IB2:12	IS 2 D	IB7:7	NA 3 C	KH3A:8	AA 2 B	MEDA:10	XD 0 D	RL4:1	GA 1 D
IB2:13	EP 2 C	IB7:8	GM 3 B	KH3A:9	AA 2 B	MEDA:11	AB 2 B	RL4:2	GA 1 D
IB2:14	EP 2 C	IB7:10	ZC 0 D	KH3A:10	BB 2 B	MEDA:11	DN4 1 B	RL4:3	GA 3 D
IB2:15	EP 2 C	IB7:11	NA 2 D	KH3A:11	BB 2 B	MEDA:12	DN4 2 B	RL4:4	GA 4 D
IB2:16	EP 2 C	IB7:12	GM 4 B	KH3A:12	AA 2 C	MEDA:12	ZC 3 B	RL4:5	GA 0 D
IB2:17	AA 1 B	IB8:1	EO 0 D	KH3A:14	AA 2 C	ML1:1	GB 1 E	RL4:7	GA 1 D
IB2:18	NC 1 B	IB8:2	EO 0 D	KH3B:1	BB 4 B	ML1:2	ZC 1 A	RL:1	GB 0 C
IB3:1	BA 3 C	IB8:3	EO 1 D	KH3B:2	BB 4 B	ML1:3	GE 1 D	RL:3	GB 0 C
IB3:2	BA 3 C	IB8:4	EO 0 D	KH3B:3	BB 4 B	ML1:4	ZC 1 A	RL DA:1	GB 0 D
IB3:3	BA 3 C	IB8:5	EO 0 D	KH3B:5	BB 4 B	ML1:5	GE 1 D	RL DB:1	GB 0 B
IB3:4	BA 3 C	IB8:7	GB 3 B	M 01:1	GM 4 C	ML1:6	ZC 2 A	S T S:1	NB 1 D
IB3:5	BA 3 C	IB8:8	CL 2 D	M 01:2	GM 4 C	ML1:7	GE 1 D	S T S:2	NB 1 D
IB3:6	BA 3 D	IB8:9	CL 2 D	M 01:3	GM 3 C	ML2:1	GB 3 D	S T S:3	NB 2 D
IB3:7	BA 2 C	IB8:10	CL 2 D	M 01:4	GM 3 C	ML2:2	ZC 2 A	S T T:3	NB 2 D
IB3:8	BA 2 C	IB8:11	CL 1 B	M 01:5	GM 4 D	ML2:3	GE 2 D	UDS12:1	XF 2 D
IB3:9	BA 1 C	IB8:12	CL 1 B	M 01:6	GM 1 B	ML2:4	ZC 2 A	UDS12:2	XF 2 D
IB3:10	BA 2 C	IB9:1	BA 2 D	M 01:8	GM 1 D	ML2:5	GE 2 D	UDS12:3	CU 1 B
IB3:11	BA 1 C	IB9:2	BA 2 C	M 01:9	GM 1 B	ML2:6	ZC 2 A	UDS12:4	CU 1 B
IB3:12	BA 1 C	IB9:3	GE 2 B	M 01:11	GM 1 D	ML2:7	GE 2 D	UDS12:5	XD 2 D
IB3:13	BA 3 C	IB9:4	ZC 0 D	M 01:12	GM 1 C	ML3:1	BB 3 C	UDS12:6	XD 2 D
IB3:14	IU 0 A	IB9:5	GE 1 C	M 01:13	GM 0 D	ML3:2	BB 2 B	UDS12:7	CU 0 B
IB3:15	IU 0 A	IB9:6	GA 1 D	M 01:14	GM 1 B	ML3:3	GA 3 D	UDS12:8	CU 2 B
IB3:16	IU 0 B	IB9:7	BA 2 C	MED:1	XC 1 D	ML3:4	GA 4 D	UDS12:9	CU 2 B
IB3:17	FA 4 B	IB9:8	BA 2 C	MED:2	XD 0 C	ML3:5	GA 4 D	UDS12:11	CU 0 B
IB3:18	ZC 0 D	IB9:9	BA 2 C	MED:2	XG 1 D	ML3:6	GA 1 B	UDS12:12	CU 4 D
IB4:1	GB 2 B	IB9:10	BA 2 C	MED:3	CS 0 B	ML3:7	GA 4 D	UDS12 B:1	XF 1 D
IB4:2	GB 2 B	IB9:11	BA 3 C	MED:4	XC 1 D	ML4:1	BB 2 C	UDS12 B:2	XF 1 D
IB4:3	GB 0 B	IB9:12	BA 2 C	MED:5	XD 0 C	ML4:2	BB 2 B	UDS12 B:3	CU 1 B

VOLVO

Volvo Bus Corporation

Document title

WIRING DIAGRAM

Document type

PRODUCT SCHEMATICS

Document No

22610880

Issue

02

Volume

03(03)

Sheet No

10(12)

INLINE	PAGE
UDS12 B:4	CU 1 B
UDS12 B:5	XD 1 D
UDS12 B:6	XD 1 D
UDS12 B:7	CU 0 B
UDS12 B:8	CU 2 B
UDS12 B:9	CU 2 B
UDS12 B:11	CU 0 B
UDS12 B:12	CU 4 D
UDS12 F:1	XF 3 D
UDS12 F:2	XF 3 D
UDS12 F:3	CU 1 B
UDS12 F:4	CU 1 B
UDS12 F:5	XD 2 D
UDS12 F:6	XD 2 D
UDS12 F:7	CU 0 B
UDS12 F:8	CU 2 B
UDS12 F:9	CU 2 B
UDS12 F:11	CU 0 B
UDS12 F:12	CU 4 D
UDS12 M:1	XF 2 D
UDS12 M:2	XF 2 D
UDS12 M:3	CU 1 B
UDS12 M:4	CU 1 B
UDS12 M:5	XD 2 D
UDS12 M:6	XD 2 D
UDS12 M:7	CU 0 B
UDS12 M:8	CU 2 B
UDS12 M:9	CU 2 B
UDS12 M:11	CU 0 B
UDS12 M:12	CU 4 D
VIC:1	XC 1 E
VIC:2	CS 3 D
VIC:2	XD 0 D
VIC:3	CS 0 C
VIC:3	CS 1 D
VIC:4	XC 1 E
VIC:5	CS 3 D
VIC:5	XD 0 D
VIC:6	CS 0 C
VIC:6	CS 1 D
VIC:7	CS 0 D
VIC:8	CS 0 C
VIC:9	AF 2 C
VIC:10	AF 3 C
VIC:12	AF 3 E
VIC:13	CS 3 C
VIC:14	BB 0 C

INLINE	PAGE
VIC:15	CS 3 C
VIC:16	BB 0 D
VIC:17	AF 3 D
VIC:18	CS 1 C
VIC:19	CS 3 C
VIC:20	CS 2 C
VIC:21	CS 1 C
VIC:22	CS 4 D
VIC:24	CS 2 D
VIC:25	CS 0 C
VIC:26	CS 2 C
VIC:27	CS 4 C
VIC:28	CS 0 C
VIC:29	CS 2 D
VIC:30	CS 1 D
VIC:31	CS 4 C
VIC:32	CS 2 C
VIC:33	CS 2 C
VIC:34	CS 2 C
VIC:35	AF 1 C
VIC:36	CS 2 C
VIC:37	CS 1 C
VIC:39	CS 4 C
XC901:1	NA2 4 B
XC901:2	NA2 3 B
XC901:3	XG 2 D
XC901:4	XG 2 D
XC901 (2):1	NC 3 D
XC901 (2):2	NC 3 D
XC901 (2):3	NC 3 C
XC901 (2):4	NC 3 C
XC901 (2):5	NC 3 D
XC901 (2):6	NC 3 D
XC901 :1	NC 3 C
XC901 :2	NC 3 C
XC901 :3	NC 2 C
XC901 :4	NC 2 C
XC901 :5	NC 3 C
XC901 :6	NC 3 C
XC903:2	XC 4 E
XC903:5	XC 4 E
XC906A:1	AB2 1 A
XC906A:2	AB2 1 A
XC906A:3	AB2 0 A
XC906A:4	AB2 0 A
XC906A:5	AB2 0 A
XC906A:6	AB2 1 A

INLINE	PAGE
XC906A:7	AC 2 D
XC908:4	BA 0 E
XC917:1	CL 1 D
XC917:2	CL 1 D
XC917:3	CL 0 D
XC917:4	CL 1 D
XC921:1	CL 1 D
XC921:2	CL 2 D
XC921:3	CL 2 D
XC922:1	GB 3 B
XC922:3	GB 3 B
XC925:1	NC 2 E
XC925:1	NE 2 D
XC925:2	NC 2 E
XC925:2	NE 1 D
XC926:1	BB 1 D
XC926:2	BB 1 D
XC926:3	BB 2 D
XC926:4	BB 2 D
XC927 1/2:1	GE 1 C
XC927 1/2:2	GE 2 C
XC927 1:1	GE 1 B
XC927 1:2	GE 2 B
XC927 2:1	GE 1 B
XC927 2:2	GE 2 B
XC931:1	DN5 0 D
XC931:2	DN5 1 D
XC931:3	DN5 1 D
XC931:4	DN5 1 D
XC931:5	DN5 1 D
XC931:6	DN5 1 D
XC931:7	DN5 1 D
XC931:8	DN5 1 D
XC931:9	DN5 1 D
XC931:10	DN5 1 D
XC931:11	DN5 2 D
XC931:12	DN5 2 D
XC931:13	DN5 2 D
XC931:14	DN5 2 D
XC931:15	DN5 2 D
XC931:16	DN5 2 D
XC931:17	DN5 2 D
XC931:18	DN5 2 D
XC931:19	DN5 2 D
XC931:20	DN5 2 D
XC931:21	DN5 2 D
XC931:22	DN5 3 D

INLINE	PAGE
XC931:27	DN5 0 C
XC931:28	DN5 1 C
XC931:29	DN5 1 C
XC931:30	DN5 1 C
XC931:31	DN5 1 C
XC931:32	DN5 1 C
XC931:33	DN5 1 C
XC931:34	DN5 1 C
XC931:35	DN5 3 D
XC931:36	DN5 3 D
XC932:11	DN5 1 D
XC932:12	DN5 1 D
XC932:13	DN5 1 D
XC932:14	DN5 0 D
XC932:15	DN5 1 D
XC932:16	DN5 1 D
XC941:1	ND 1 B
XC941:3	ND 2 B
XC943:1	XE 2 C
XC943:2	XE 2 C
XC950:1	AB3 3 B
XC950:2	AB 2 B
XC950:3	AB4 2 A
XC950:4	DN5 0 A
XC950:5	DN5 1 A
XC950:6	DN5 1 A
XC999:1	AB3 3 A
XU25:1	AC 2 D
XU25:2	AC 2 C
XU25:3	AC 2 D
XU25:4	AC 2 D
XU25:5	AC 2 D

VOLVO

Volvo Bus Corporation

Document title

WIRING DIAGRAM

Document type

PRODUCT SCHEMATICS

Document No

22610880

Issue

02

Volume

03(03)

Sheet No

11(12)

SPLICES

SPLICE	PAGE	SPLICE	PAGE	SPLICE	PAGE	SPLICE	PAGE
XC85 ()	GE 1 A	XSB05 ()	XD 1 A	XSC96 ()	XE 3 B	XSF86 ()	XF 1 C
XCS102 ()	XE 2 B	XSB06 ()	XD 1 A	XSC97 ()	XE 2 B	XSF87 ()	XF 1 C
XSA01 ()	XC 2 B	XSB07 ()	XJ 3 C	XSC98 ()	XE 2 B	XSF88 ()	XF 0 C
XSA02 ()	XC 2 B	XSB08 ()	XJ 3 C	XSC99 ()	CL 1 C	XSF89 ()	XF 0 C
XSA03 ()	XC 3 B	XSB09 ()	ZC 0 C	XSC101 ()	XE 2 B	XSF92 ()	BA 1 B
XSA04 ()	XC 3 B	XSB10 ()	ZC 0 B	XSD01 ()	AB2 1 B	XSF93 ()	BB 1 C
XSA05 ()	XC 3 B	XSB11 ()	ZC 0 C	XSD02 ()	NB 0 A	XSF94 ()	BB 1 D
XSA06 ()	XC 3 B	XSB12 ()	GM 2 C	XSF01 ()	GA 0 D	XSF95 ()	AB 2 D
XSA07 ()	XC 4 B	XSB13 ()	GB 3 A	XSF09 ()	GA 3 C	XSF96 ()	AB 2 C
XSA08 ()	XC 4 B	XSB15 ()	GB 3 B	XSF10 ()	GA 3 C	XSF97 ()	CS 3 B
XSA09 ()	XC 4 B	XSB18 ()	IU 0 C	XSF11 ()	GA 2 D	XSF98 ()	CS 1 B
XSA10 ()	XC 4 B	XSB19 ()	IU 0 C	XSF12 ()	GA 2 B	XSF100 ()	AB 1 C
XSA11 ()	XC 4 D	XSB20 ()	FA 4 B	XSF13 ()	GA 1 D	XSF101 ()	NA2 4 B
XSA12 ()	XC 4 C	XSB21 ()	IU 1 C	XSF14 ()	ZC 2 B	XSF102 ()	CU 2 A
XSA13 ()	XD 3 A	XSB22 ()	NC 2 B	XSF15 ()	CX 1 B	XSF103 ()	CU 2 A
XSA14 ()	XD 2 A	XSB24 ()	NC 0 C	XSF17 ()	CX 0 B	XSF104 ()	CU 2 A
XSA15 ()	XD 3 A	XSB25 ()	AA 1 C	XSF18 ()	CX 2 D	XSF105 ()	CU 2 A
XSA16 ()	XD 3 A	XSB26 ()	NC 1 C	XSF19 ()	ZC 2 C	XSF106 ()	CU 1 A
XSA17 ()	XD 3 A	XSB28 ()	XF 4 C	XSF21 ()	XH 2 D	XSF107 ()	CU 1 A
XSA18 ()	XD 3 A	XSB29 ()	XF 4 C	XSF22 ()	CU 0 A	XSF108 ()	CU 1 A
XSA19 ()	XD 4 A	XSB30 ()	IU 0 C	XSF23 ()	NA 0 A	XSF109 ()	CU 1 B
XSA20 ()	XD 3 A	XSB31 ()	IU 1 C	XSF24 ()	CX 1 D	XSF110 ()	CU 0 A
XSA21 ()	XD 4 A	XSB32 ()	XC 1 B	XSF25 ()	CX 1 D	XSF111 ()	CU 0 A
XSA22 ()	XD 4 A	XSB33 ()	XC 1 B	XSF26 ()	XH 3 D	XSF112 ()	CU 0 A
XSA23 ()	XD 4 C	XSB34 ()	NA 3 B	XSF27 ()	XH 3 D	XSF113 ()	CU 4 E
XSA24 ()	XD 4 C	XSB36 ()	NA 1 D	XSF28 ()	XH 2 D	XSF114 ()	CU 4 E
XSA25 ()	ZC 0 E	XSB37 ()	ND 1 B	XSF29 ()	FB 0 B	XSF115 ()	XG 1 D
XSA26 ()	AA 0 D	XSB38 ()	XE 1 B	XSF30 ()	XH 1 D	XSF116 ()	XG 2 D
XSA27 ()	FA 1 B	XSB39 ()	XE 1 B	XSF31 ()	XH 1 D	XSF117 ()	XG 0 D
XSA28 ()	AA 2 C	XSB40 ()	NA 3 C	XSF32 ()	FB 0 C	XSF118 ()	XG 0 D
XSA31 ()	ZC 1 D	XSB43 ()	XG 3 D	XSF33 ()	XH 2 C	XSF119 ()	ZC 3 B
XSA32 ()	BA 0 D	XSB44 ()	XG 3 D	XSF35 ()	CX 3 B	XSF120 ()	ZC 3 B
XSA34 ()	AA 2 A	XSB45 ()	XJ 1 B	XSF39 ()	CX 1 D	XSF121 ()	DN3 1 B
XSA35 ()	ZC 3 C	XSB46 ()	XJ 1 B	XSF40 ()	CX 2 B	XSF122 ()	DN3 2 B
XSA37 ()	FB 3 B	XSB47 ()	XJ 3 B	XSF41 ()	XD 0 C	XSF123 ()	AB 2 D
XSA40 ()	FB 2 B	XSB48 ()	XJ 3 B	XSF42 ()	XD 0 C	XSF130 ()	XG 2 D
XSA43 ()	ZC 2 D	XSB49 ()	XC 0 A	XSF43 ()	CS 4 B	XSF131 ()	XG 2 D
XSA44 ()	AF 0 C	XSB50 ()	XC 0 A	XSF44 ()	CX 2 B	XSF150 ()	XH 3 C
XSA46 ()	BB 2 D	XSB51 ()	NC 2 C	XSF46 ()	CS 4 A	XSF151 ()	XH 2 B
XSA50 ()	BA 0 B	XSB52 ()	NC 2 C	XSF50 ()	ZC 3 B	XSF152 ()	XH 2 D
XSA52 ()	ZC 2 C	XSB55 ()	XG 3 D	XSF54 ()	XC 2 D	XSF153 ()	XH 2 D
XSA53 ()	GM 2 B	XSB56 ()	XG 3 D	XSF55 ()	XC 3 C	XSF155 ()	XH 2 B
XSA54 ()	DN 1 B	XSB95 ()	DN5 0 B	XSF56 ()	XC 2 D	XSL10 ()	CU 2 D
XSA59 ()	BA 0 C	XSB112 ()	DN5 1 B	XSF57 ()	XC 2 C	XSL11 ()	CU 2 E
XSA60 ()	NA 1 D	XSB120 ()	AB 2 B	XSF71 ()	CU 4 D	XSL12 ()	CU 2 E
XSA61 ()	BA 0 B	XSC02 ()	GE 2 D	XSF72 ()	CU 0 E	XSL13 ()	CU 2 E
XSA62 ()	XD 2 A	XSC04 ()	GE 1 D	XSF73 ()	CU 0 E	XSM02 ()	ZC 4 C
XSA63 ()	XC 1 B	XSC05 ()	GE 1 D	XSF76 ()	CU 0 B	XSN01 ()	BA 2 E
XSA64 ()	XC 2 B	XSC07 ()	ZC 1 B	XSF80 ()	XF 3 C		
XSA65 ()	XD 2 A	XSC15 ()	ZC 1 A	XSF81 ()	XF 3 C		
XSB01 ()	XC 0 B	XSC16 ()	GB 0 C	XSF82 ()	XF 2 C		
XSB02 ()	XC 0 B	XSC17 ()	ZC 1 B	XSF83 ()	XF 2 C		
XSB03 ()	XD 1 A	XSC21 ()	DN 1 D	XSF84 ()	XF 1 C		
XSB04 ()	XD 1 A	XSC95 ()	XE 3 B	XSF85 ()	XF 1 C		

VOLVO

Volvo Bus Corporation

Document title
WIRING DIAGRAM

Document type
PRODUCT SCHEMATICS

Document No	Issue	Volume	Sheet No
22610880	02	03(03)	12(12)