

Ground distribution:

0-Electric gnd
00- Electronic Gnd

A-Dash - Lh console harness
F-Front junction box harness
FH-Front harness
R-Rear junction box harness
FR-Front to rear

Electronic ground distribution

Dash harness

- gnd-00A2-16 ● 23.1_Indirect_Lights:0 B
- gnd-00A2-16 ● 60.0_Cust_Adapt_Dash_Interface:2 B
- gnd-00A1-16 ● 7.1_Mux_Power:4 B
- gnd-00A-18 ● 34.1_wiper_washer:0 D
- gnd-00A-18 ● 18.4_Upper_Defrost:1 B
- gnd-00A-18 ● 29.1_Entrance_door:1 E
- gnd-00A-18 ● 22.2_Reading_lamps:4 F
- gnd-00A-18 ● 41.1_Steering:1 D
- gnd-00A-18 ● 19.1_Driver_Lights:1 D
- gnd-00A-18 ● 22.2_Reading_lamps:2 F
- gnd-00A-18 ● 18.3_Parcel_Rack_Vent:2 B
- gnd-00A-18 ● 16.1_ESP:0 A
- gnd-00A-18 ● 10.1_Cluster:3 B
- gnd-00A-18 ● 14.1_Engine_Ecu:8 D
- gnd-00A-18 ● 26.1_Front_Lighting:0 D
- gnd-00A-18 ● 12.1_Brake:2 B
- gnd-00A-18 ● 36.1_WCL_Ricon:3 A
- gnd-00A-18 ● 28.2_ULD_Destination_Signs:1 B
- gnd-00A-18 ● 26.1_Front_Lighting:0 A
- gnd-00A-18 ● 26.5_Fog_Corn_Dock_Lts:1 B
- gnd-00A-18 ● 26.1_Front_Lighting:1 E
- gnd-00A-18 ● 6.2_Network:4 C
- gnd-00A-18 ● 28.1_Dig_Clock_&_B-Up_Cam:2 D

Lh console harness

- gnd-00A-16 ● 9.1_Horn:1 D
- gnd-00A-18 ● 12.2_Trailler_ParkBrake:2 B
- gnd-00A-18 ● 14.1_Engine_Ecu:8 C
- gnd-00A-18 ● 17.1_Pre_Heat:1 D
- gnd-00A-18 ● 32.1_Kneeling:1 B
- gnd-00A-18 ● 33.1_Luggage_LockUnlock:1 B
- gnd-00A-18 ● 31.1_Mirror:1 A
- gnd-00A-18 ● 30.1_Drivers_Window:1 C
- gnd-00A-18 ● 32.1_Kneeling:1 D
- gnd-00A-18 ● 32.1_Kneeling:1 D

Front harness

- gnd-00FH-18 ● 34.1_wiper_washer:0 B
- gnd-00FH-18 ● 12.1_Brake:2 D
- gnd-00FH-18 ● 32.1_Kneeling:1 E
- gnd-00FH1-12 ● 18.1_Defroster:3 B
- gnd-00FH2-10 ● 7.1_Mux_Power:2 B
- gnd-00FH2-10 ● 7.1_Mux_Power:2 C

FJB harness



- gnd-00F1-12 ● 7.1_Mux_Power:1 D
- gnd-00F1-12 ● 7.1_Mux_Power:1 C
- gnd-00F2-12 ● 7.1_Mux_Power:1 D
- gnd-00F2-12 ● 7.1_Mux_Power:1 E
- gnd-00F2-16 ● 7.1_Mux_Power:1 B
- gnd-00F-18 ● 12.2_Trailler_ParkBrake:2 B
- gnd-00F-18 ● 14.1_Engine_Ecu:5 C
- gnd-00F-18 ● 15.2_Trans_IShift:3 C
- gnd-00F-18 ● 42.4_ELD_ITS_Gateway:5 C
- gnd-00F-18 ● 15.2_Trans_IShift:1 D
- gnd-00F-14 ● 16.1_ESP:2 B
- gnd-00F-18 ● 30.2_Outlet_12v:1 B
- gnd-00F-18 ● 4.1_Dist_12V_FJB:2 C
- gnd-00F-16 ● 28.1_Dig_Clock_&_B-Up_Cam:2 B
- gnd-00F-18 ● 9.1_Horn:3 B
- gnd-00F-18 ● 37.2_SteeringCtrl:2 B
- gnd-00F-18 ● 38.1_Fire_Supp:0 C
- gnd-00F-18 ● 38.1_Fire_Supp:2 D
- gnd-00F-18 ● 4.1_Dist_12V_FJB:4 A
- gnd-00F-18 ● 4.1_Dist_12V_FJB:4 B
- gnd-00F-18 ● 9.1_Horn:1 A

RJB harness






- gnd-00R1-18 ● 1.2_Alternators:2 D
- gnd-00R1-18 ● 3.2_Ign_Start:1 C
- gnd-00R1-18 ● 3.1_Main_Disti:2 A
- gnd-00R1-18 ● 6.2_Network:1 B
- gnd-00R1-18 ● 11.1_Lavatory:1 B
- gnd-00R1-14 ● 15.2_Trans_IShift:2 A
- gnd-00R1-14 ● 15.1_Trans_Allison:0 A
- gnd-00R1-16 ● 17.1_Pre_Heat:3 E
- gnd-00R1-18 ● 38.1_Fire_Supp:2 C
- gnd-00R1-18 ● 12.1_Brake:2 C
- gnd-00R1-18 ● 14.1_Engine_Ecu:3 A
- gnd-00R2-10 ● 7.1_Mux_Power:2 E
- gnd-00R2-12 ● 7.1_Mux_Power:2 D
- gnd-00R3-12 ● 7.1_Mux_Power:4 C
- gnd-00R4-12 ● 7.1_Mux_Power:4 D
- gnd-00R4-12 ● 7.1_Mux_Power:4 E
- gnd-00R4-16 ● 7.1_Mux_Power:4 B
- gnd-00R5-14 ● 14.2_Urea:1 B
- gnd-00R5-12 ● 14.1_Engine_Ecu:3 C
- gnd-00R5-18 ● 26.4_Trailer:1 D
- gnd-00VA-2 ● 1.1_batteries:0 C

gnd- 00-1/0 ● 1.1_batteries:2 C



Dash JB

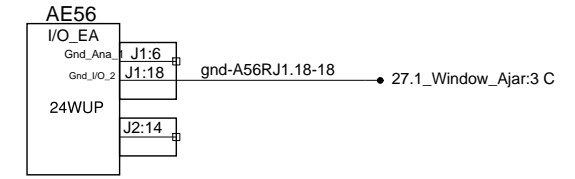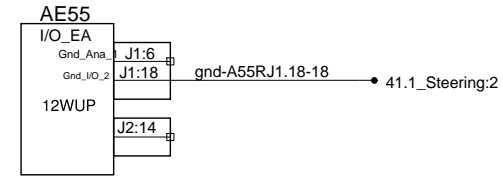


FJB

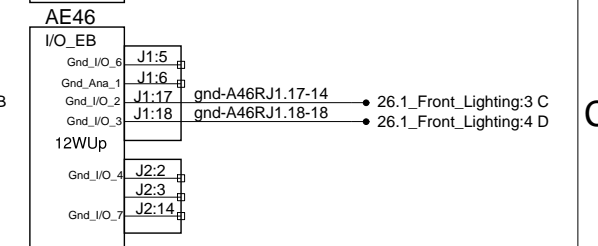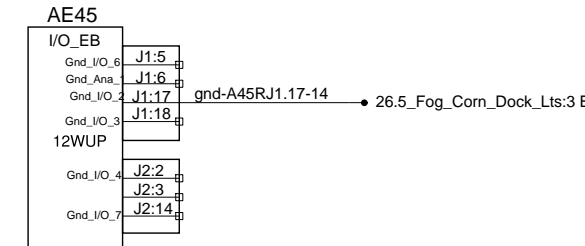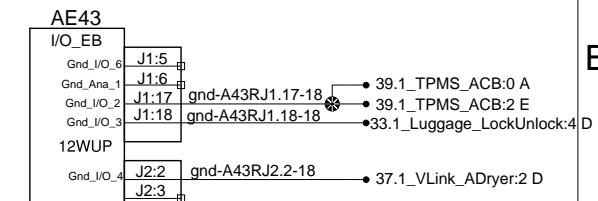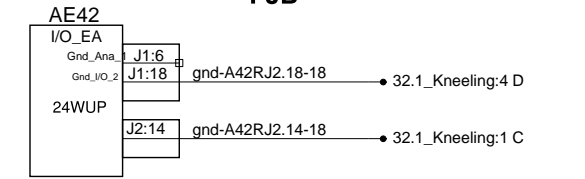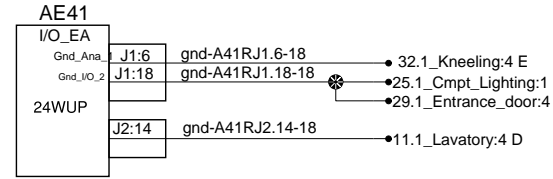


RH console JB

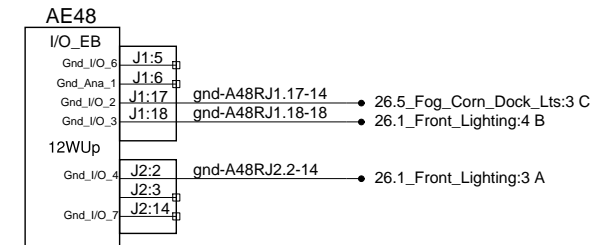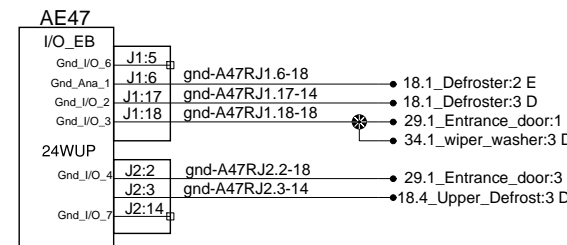


Parcel Rack JB

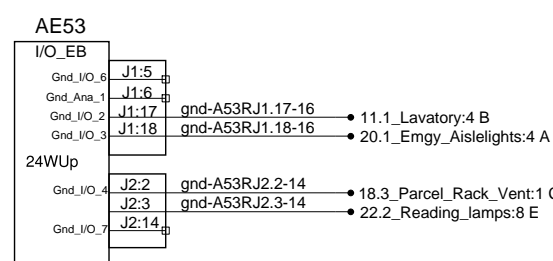





Evaporator

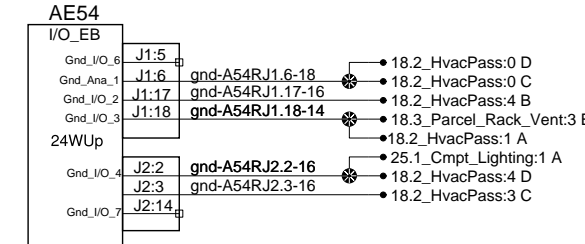

WCL

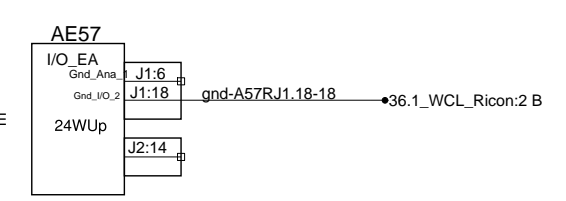

RJB

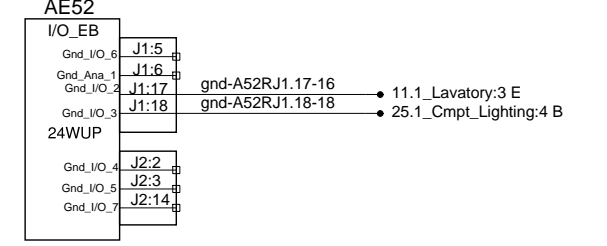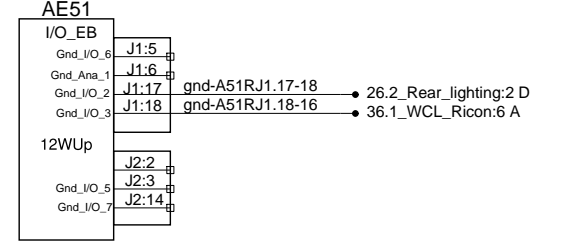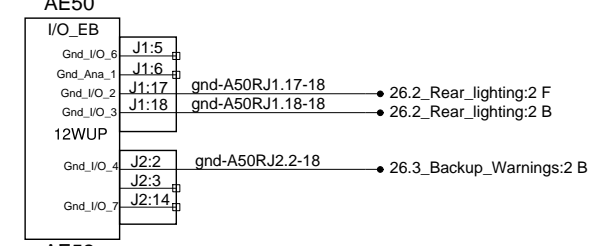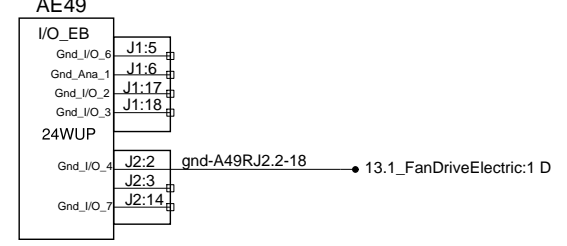

FJB Electronic GND

RJB Electronic GND