

PREVOST

Instruction Sheet



IS-09048

DVD PLAYER REPLACEMENT

This instruction sheet is applicable for the replacement of #901198 VD-404 DVD player

MATERIAL

Kit #430669 includes the following parts:

Part No.	Description	Qty
406358	Bracket, DVD REI 	1
409294	Cable, interface 12-volts supply 	1
502653	Screw, machine PAN PH SS M5-0.8x16	2
502841	Nut, hex NYRT N500 M5-0.8	2
901339	DVD player, REI	1
901347	BNC cable 1foot M-M	1
IS-09048	Instruction Sheet	1
FI-09048	Feuille d'instructions	1


PROCEDURE



DANGER


Park vehicle safely, apply parking brake, stop engine and set battery master switch(es) to the OFF position prior to working on the vehicle.

1. Remove the existing DVD player. To do so :
 - Unscrew the nut securing the DVD player at its back panel.
 - Disconnect the remote control IR sensor wire.
 - Disconnect the video output cable **video out** and the cable leading to the video switcher.
 - Disconnect the audio output cables **audio out left**, **audio out right**.
 - Disconnect the 12-volts supply white connector.

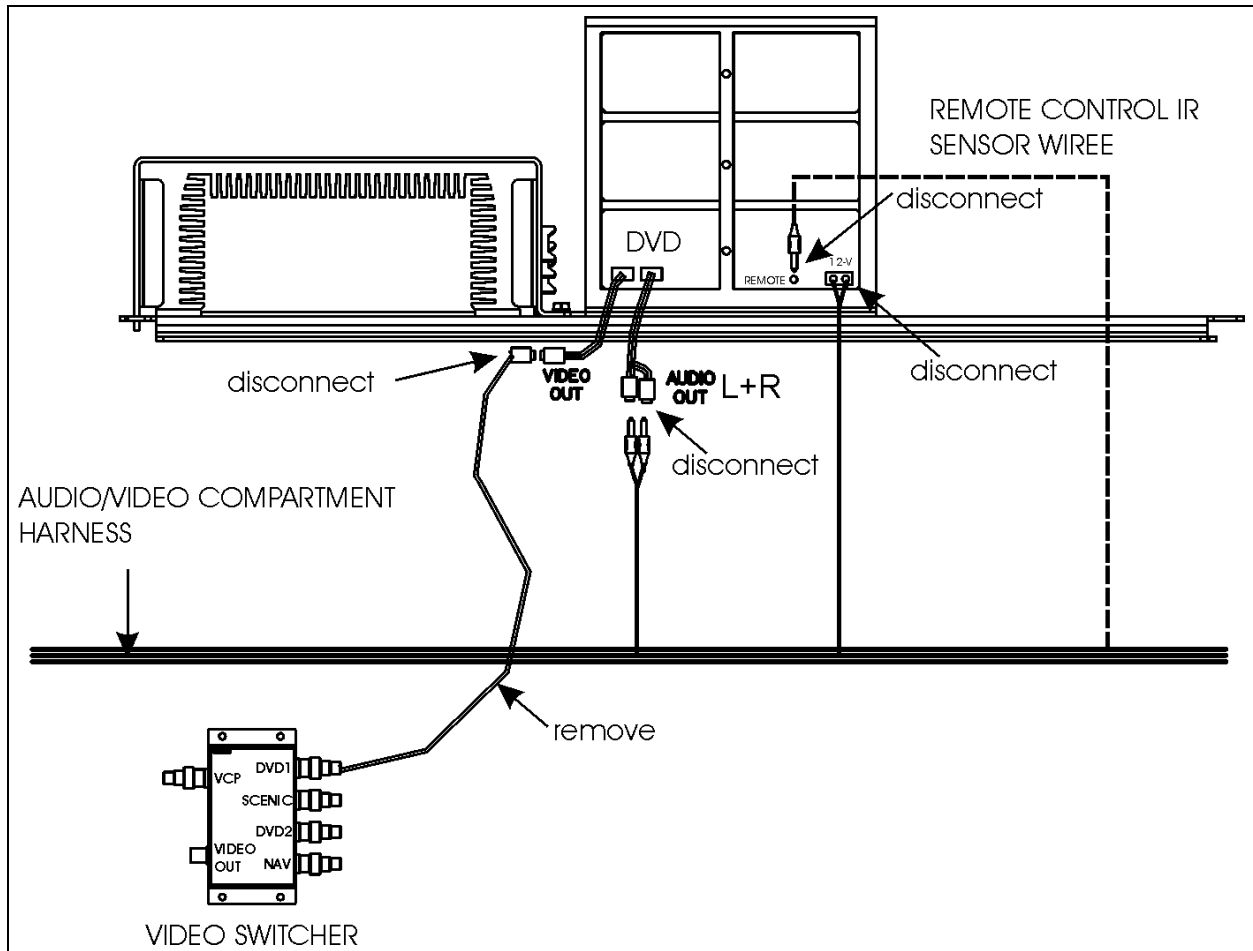

REMOVAL OF THE EXISTING DVD PLAYER

2. Insert the DIN cage into the DIN rectangular opening and bend tabs behind the opening to secure the DIN cage to the audio/video components support.

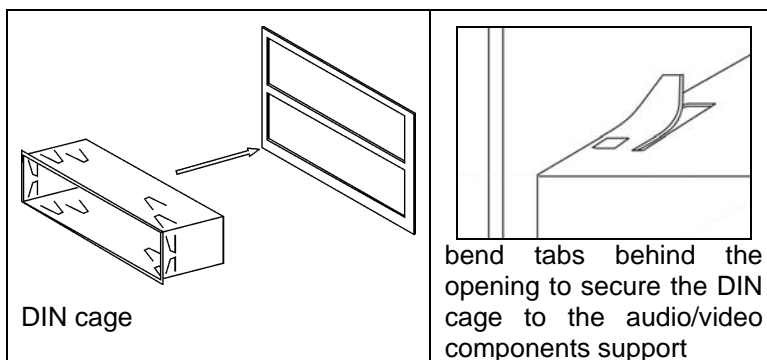


3. Slide the DVD player into the DIN cage and attach trim frame as described in the DVD player owner's manual.
4. Fix the DVD player using the mounting stud located at the back of the unit. Because the mounting stud is not located at the same place than the previous DVD player, use bracket #406358. Drill a second hole in the audio/video components support and use the included hardware.

5. Connect the 12-volts supply to the DVD player using the interface cable #409294.
6. Connect the remote control IR sensor wire to the DVD player.

REMARQUE

The first installations have proven that the remote control IR sensor already installed in the coach functions properly with the new DVD player. Once the installation completed, check proper functioning of the remote control IR sensor. Only if the IR sensor doesn't function properly, replace it with the new remote control IR sensor included with the new DVD player.

7. Connect the white RCA plug **audio out Left** and the red RCA plug **audio out Right** to the audio/video compartment harness like the previous installation.
8. Connect the yellow BNC plug **video out** to the video switcher using BNC cable #901347.

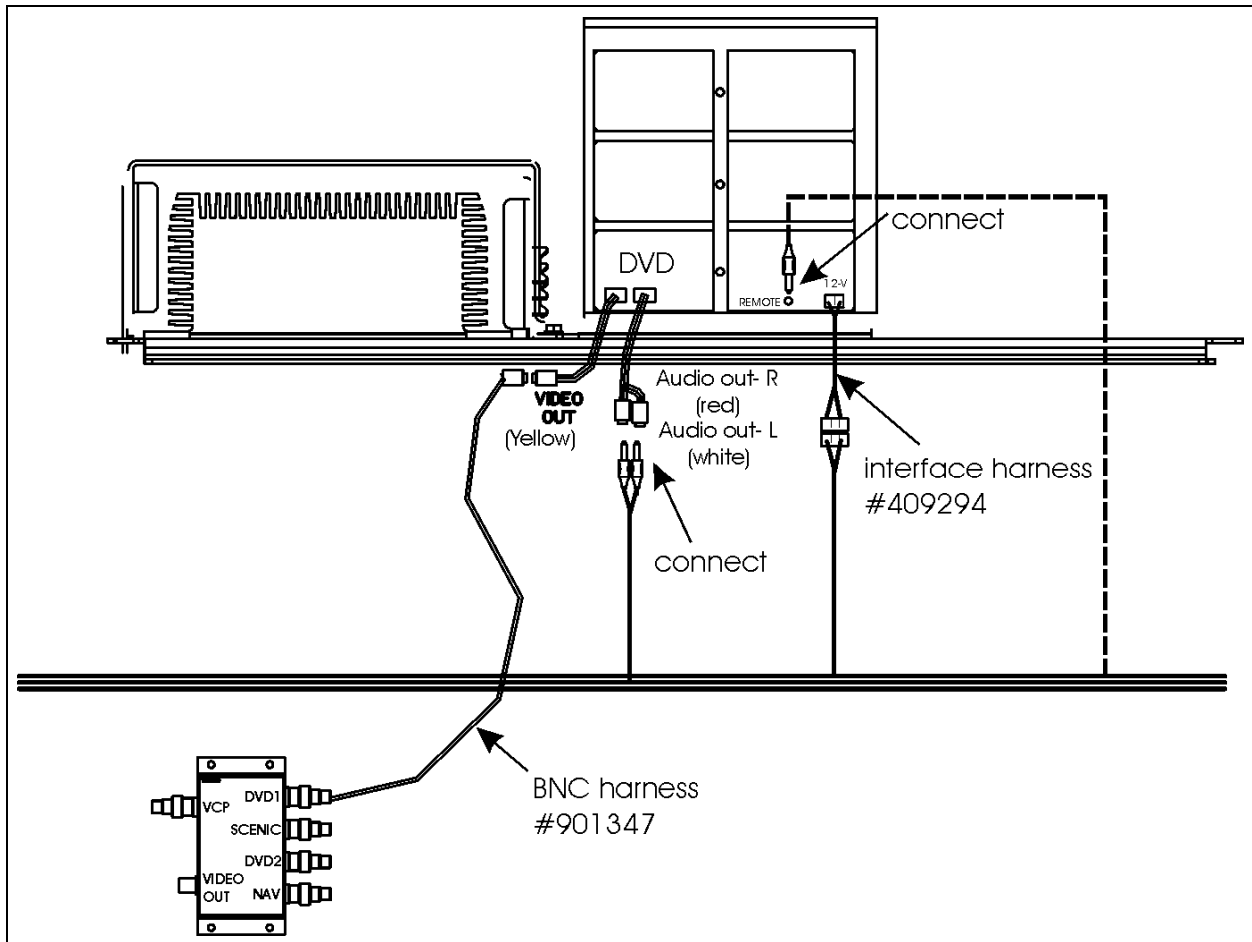

REMOVAL OF THE EXISTING DVD PLAYER