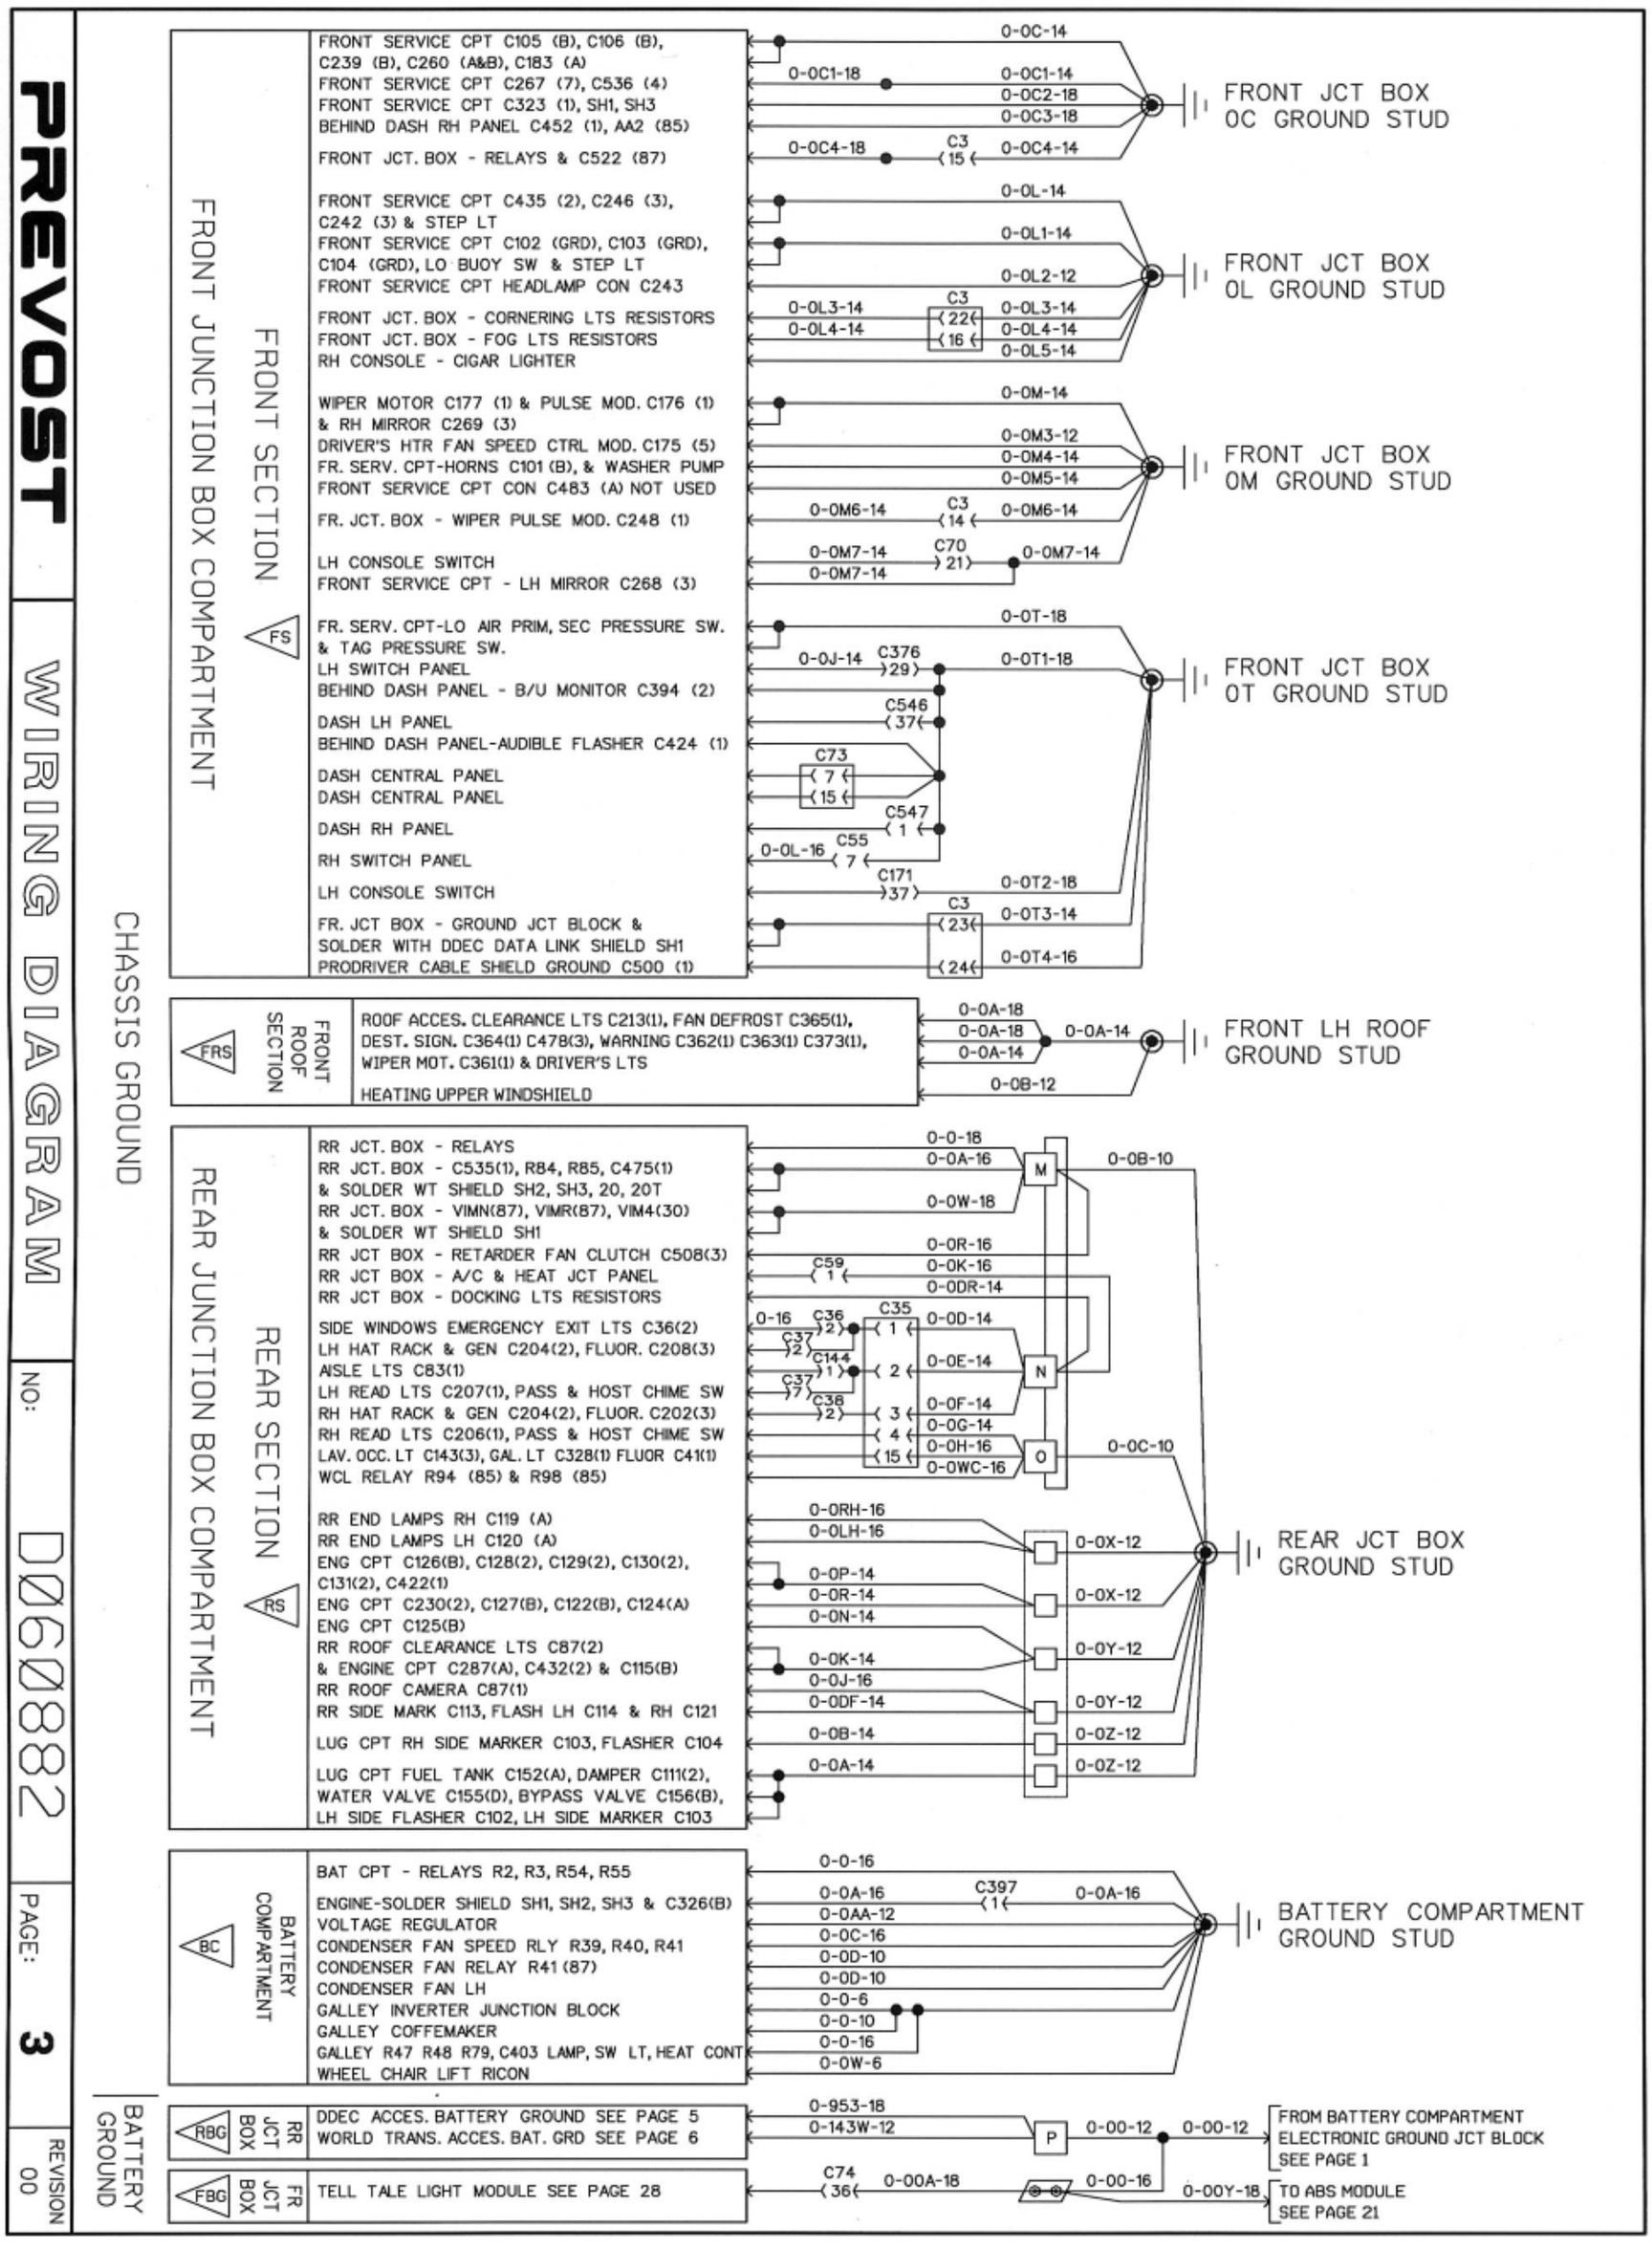
PREVOST
WIRING DIAGRAM
CHASSIS GROUND
FRONT JUNCTION BOX COMPARTMENT
FRONT SECTION
FS
FRONT SERVICE CPT C105 (B), C106 (B), C239 (B), C260 (A&B), C183 (A)
FRONT SERVICE CPT C267 (7), C536 (4)
FRONT SERVICE CPT C323 (1), SH1, SH3
BEHIND DASH RH PANEL C452 (1), AA2 (85)
FRONT JCT. BOX - RELAYS & C522 (87)
FRONT SERVICE CPT C435 (2), C246 (3), C242 (3) & STEP LT
FRONT SERVICE CPT C102 (GRD), C103 (GRD), C104 (GRD), LO BUOY SW & STEP LT
FRONT SERVICE CPT HEADLAMP CON C243
FRONT JCT. BOX - CORNERING LTS RESISTORS
FRONT JCT. BOX - FOG LTS RESISTORS
RH CONSOLE - CIGAR LIGHTER
WIPER MOTOR C177 (1) & PULSE MOD. C176 (1) & RH MIRROR C269 (3)
DRIVER'S HTR FAN SPEED CTRL MOD. C175 (5)
FR. SERV. CPT-HORNS C101 (B), & WASHER PUMP
FRONT SERVICE CPT CON C483 (A) NOT USED
FR. JCT. BOX - WIPER PULSE MOD. C248 (1)
LH CONSOLE SWITCH
FRONT SERVICE CPT - LH MIRROR C268 (3)
FR. SERV. CPT-LO AIR PRIM, SEC PRESSURE SW. & TAG PRESSURE SW.
LH SWITCH PANEL
BEHIND DASH PANEL - B/U MONITOR C394 (2)
DASH LH PANEL
BEHIND DASH PANEL-AUDIBLE FLASHER C424 (1)
DASH CENTRAL PANEL
DASH CENTRAL PANEL
DASH RH PANEL
RH SWITCH PANEL
LH CONSOLE SWITCH
FR. JCT BOX - GROUND JCT BLOCK & SOLDER WITH DDEC DATA LINK SHIELD SH1
PRODRIVER CABLE SHIELD GROUND C500 (1)
FRONT JCT BOX 0C GROUND STUD
FRONT JCT BOX 0L GROUND STUD
FRONT JCT BOX 0M GROUND STUD
FRONT JCT BOX 0T GROUND STUD
FRONT ROOF SECTION
FRS
ROOF ACCES. CLEARANCE LTS C213(1), FAN DEFROST C365(1), DEST. SIGN. C364(1) C478(3), WARNING C362(1) C363(1) C373(1), WIPER MOT. C361(1) & DRIVER'S LTS
HEATING UPPER WINDSHIELD
FRONT LH ROOF GROUND STUD
REAR JUNCTION BOX COMPARTMENT
REAR SECTION
RS
RR JCT. BOX - RELAYS
RR JCT. BOX - C535(1), R84, R85, C475(1) & SOLDER WT SHIELD SH2, SH3, 20, 20T
RR JCT. BOX - VIMN(87), VIMR(87), VIM4(30) & SOLDER WT SHIELD SH1
RR JCT BOX - RETARDER FAN CLUTCH C508(3)
RR JCT BOX - A/C & HEAT JCT PANEL
RR JCT BOX - DOCKING LTS RESISTORS
SIDE WINDOWS EMERGENCY EXIT LTS C36(2)
LH HAT RACK & GEN C204(2), FLUOR. C208(3)
AISLE LTS C83(1)
LH READ LTS C207(1), PASS & HOST CHIME SW
RH HAT RACK & GEN C204(2), FLUOR. C202(3)
RH READ LTS C206(1), PASS & HOST CHIME SW
LAV. OCC. LT C143(3), GAL. LT C328(1) FLUOR C41(1)
WCL RELAY R94 (85) & R98 (85)
RR END LAMPS RH C119 (A)
RR END LAMPS LH C120 (A)
ENG CPT C126(B), C128(2), C129(2), C130(2), C131(2), C422(1)
ENG CPT C230(2), C127(B), C122(B), C124(A)
ENG CPT C125(B)
RR ROOF CLEARANCE LTS C87(2) & ENGINE CPT C287(A), C432(2) & C115(B)
RR ROOF CAMERA C87(1)
RR SIDE MARK C113, FLASH LH C114 & RH C121
LUG CPT RH SIDE MARKER C103, FLASHER C104
LUG CPT FUEL TANK C152(A), DAMPER C111(2), WATER VALVE C155(D), BYPASS VALVE C156(B), LH SIDE FLASHER C102, LH SIDE MARKER C103
REAR JCT BOX GROUND STUD
BATTERY COMPARTMENT
BC
BAT CPT - RELAYS R2, R3, R54, R55
ENGINE-SOLDER SHIELD SH1, SH2, SH3 & C326(B)
VOLTAGE REGULATOR
CONDENSER FAN SPEED RLY R39, R40, R41
CONDENSER FAN RELAY R41 (87)
CONDENSER FAN LH
GALLEY INVERTER JUNCTION BLOCK
GALLEY COFFEMAKER
GALLEY R47 R48 R79, C403 LAMP, SW LT, HEAT CONT
WHEEL CHAIR LIFT RICON
BATTERY COMPARTMENT GROUND STUD
BATTERY GROUND
RBG
RR JCT BOX
DDEC ACCES. BATTERY GROUND SEE PAGE 5
WORLD TRANS. ACCES. BAT. GRD SEE PAGE 6
FROM BATTERY COMPARTMENT ELECTRONIC GROUND JCT BLOCK SEE PAGE 1
FBG
FR JCT BOX
TELL TALE LIGHT MODULE SEE PAGE 28
TO ABS MODULE SEE PAGE 21
NO: D060882
PAGE: 3
REVISION 00