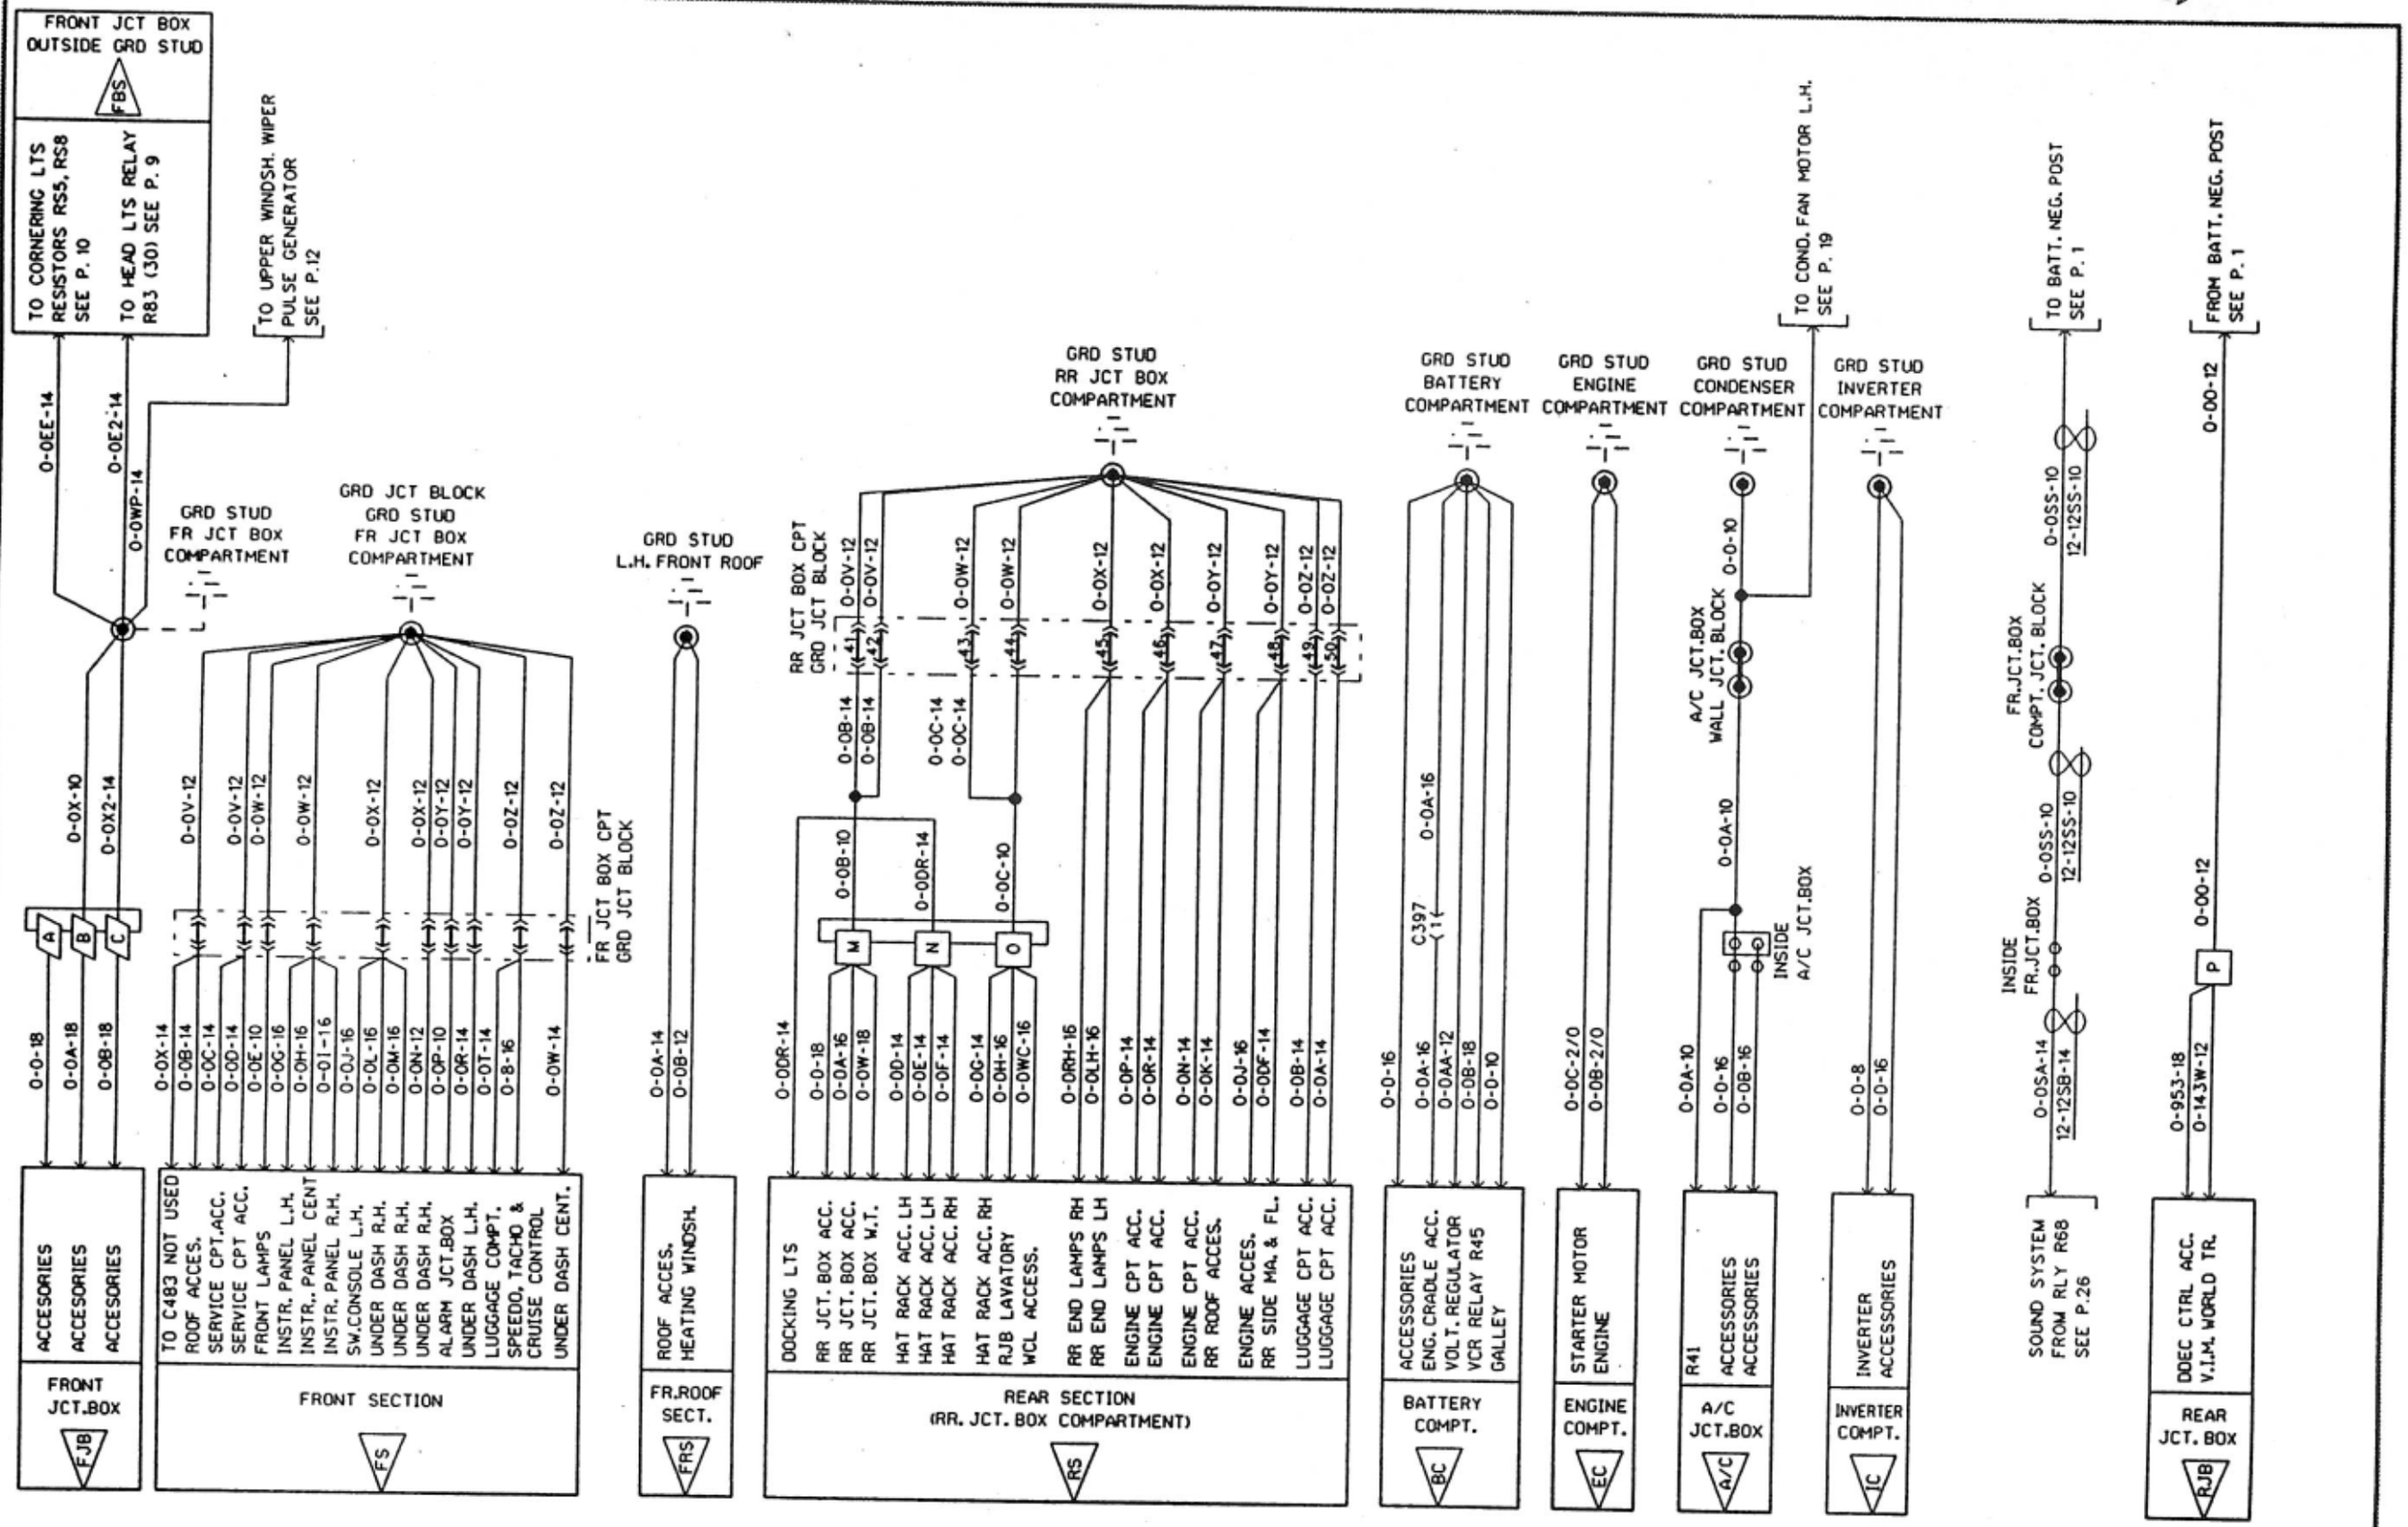
FRONT JCT BOX OUTSIDE GRD STUD
FBS
TO CORNERING LTS RESISTORS RS5, RS8 SEE P. 10
TO HEAD LTS RELAY R83 (30) SEE P. 9
TO UPPER WINDSH. WIPER PULSE GENERATOR SEE P.12
0-0EE-14
0-0E2-14
0-0WP-14
GRD STUD FR JCT BOX COMPARTMENT
GRD JCT BLOCK GRD STUD FR JCT BOX COMPARTMENT
GRD STUD L.H. FRONT ROOF
GRD STUD RR JCT BOX COMPARTMENT
GRD STUD BATTERY COMPARTMENT
GRD STUD ENGINE COMPARTMENT
GRD STUD CONDENSER COMPARTMENT
GRD STUD INVERTER COMPARTMENT
TO COND. FAN MOTOR L.H. SEE P. 19
TO BATT. NEG. POST SEE P. 1
FROM BATT. NEG. POST SEE P. 1
0-00-12
0-0SS-10
12-12SS-10
A/C JCT.BOX WALL JCT. BLOCK
FR.JCT.BOX COMPT. JCT. BLOCK
INSIDE A/C JCT.BOX
INSIDE FR.JCT.BOX
0-0X-10
0-0X2-14
0-0V-12
0-0W-12
0-0X-12
0-0Y-12
0-0Z-12
FR JCT BOX CPT GRD JCT BLOCK
0-0B-14
0-0C-14
0-0B-10
0-0DR-14
0-0C-10
0-0A-16
0-0A-10
0-0-10
0-0-16
0-0B-16
0-0-8
0-0C-2/0
0-0B-2/0
0-0A-12
0-0B-18
0-953-18
0-143W-12
C397
0-0A-14
0-0B-12
0-0DR-14
0-0-18
0-0A-18
0-0B-18
0-0-16
0-0A-16
0-0W-18
0-0D-14
0-0E-14
0-0F-14
0-0G-14
0-0H-16
0-0WC-16
0-0RH-16
0-0LH-16
0-0P-14
0-0R-14
0-0N-14
0-0K-14
0-0J-16
0-0DF-14
0-0B-14
0-0A-14
0-0-0-18
0-0A-18
0-0B-18
0-0X-14
0-0B-14
0-0C-14
0-0D-14
0-0E-10
0-0G-16
0-0H-16
0-0I-16
0-0J-16
0-0L-16
0-0M-16
0-0N-12
0-0P-10
0-0R-14
0-0T-14
0-8-16
0-0W-14
0-0A-14
0-0B-12
ACCESORIES ACCESORIES ACCESORIES
FRONT JCT.BOX
FJB
TO C483 NOT USED
ROOF ACCES.
SERVICE CPT.ACC.
SERVICE CPT ACC.
FRONT LAMPS
INSTR. PANEL L.H.
INSTR.. PANEL CENT
INSTR. PANEL R.H.
SW.CONSOLE L.H.
UNDER DASH R.H.
UNDER DASH R.H.
UNDER DASH R.H.
ALARM JCT.BOX
UNDER DASH L.H.
LUGGAGE COMPT.
SPEEDO, TACHO & CRUISE CONTROL
UNDER DASH CENT.
FRONT SECTION
FS
ROOF ACCES.
HEATING WINDSH.
FR.ROOF SECT.
FRS
DOCKING LTS
RR JCT. BOX ACC.
RR JCT. BOX ACC.
RR JCT. BOX W.T.
HAT RACK ACC. LH
HAT RACK ACC. LH
HAT RACK ACC. RH
HAT RACK ACC. RH
RJB LAVATORY
WCL ACCESS.
RR END LAMPS RH
RR END LAMPS LH
ENGINE CPT ACC.
ENGINE CPT ACC.
ENGINE CPT ACC.
RR ROOF ACCES.
ENGINE ACCES.
RR SIDE MA. & FL.
LUGGAGE CPT ACC.
LUGGAGE CPT ACC.
REAR SECTION (RR. JCT. BOX COMPARTMENT)
RS
ACCESSORIES
ENG. CRADLE ACC.
VOLT. REGULATOR
VCR RELAY R45
GALLEY
BATTERY COMPT.
BC
STARTER MOTOR
ENGINE
ENGINE COMPT.
EC
R41
ACCESSORIES
ACCESSORIES
A/C JCT.BOX
A/C
INVERTER ACCESSORIES
INVERTER COMPT.
IC
SOUND SYSTEM FROM RLY R68 SEE P.26
DOEC CTRL ACC.
V.I.M. WORLD TR.
REAR JCT. BOX
RJB
CHASSIS GROUND
BATTERY GROUND