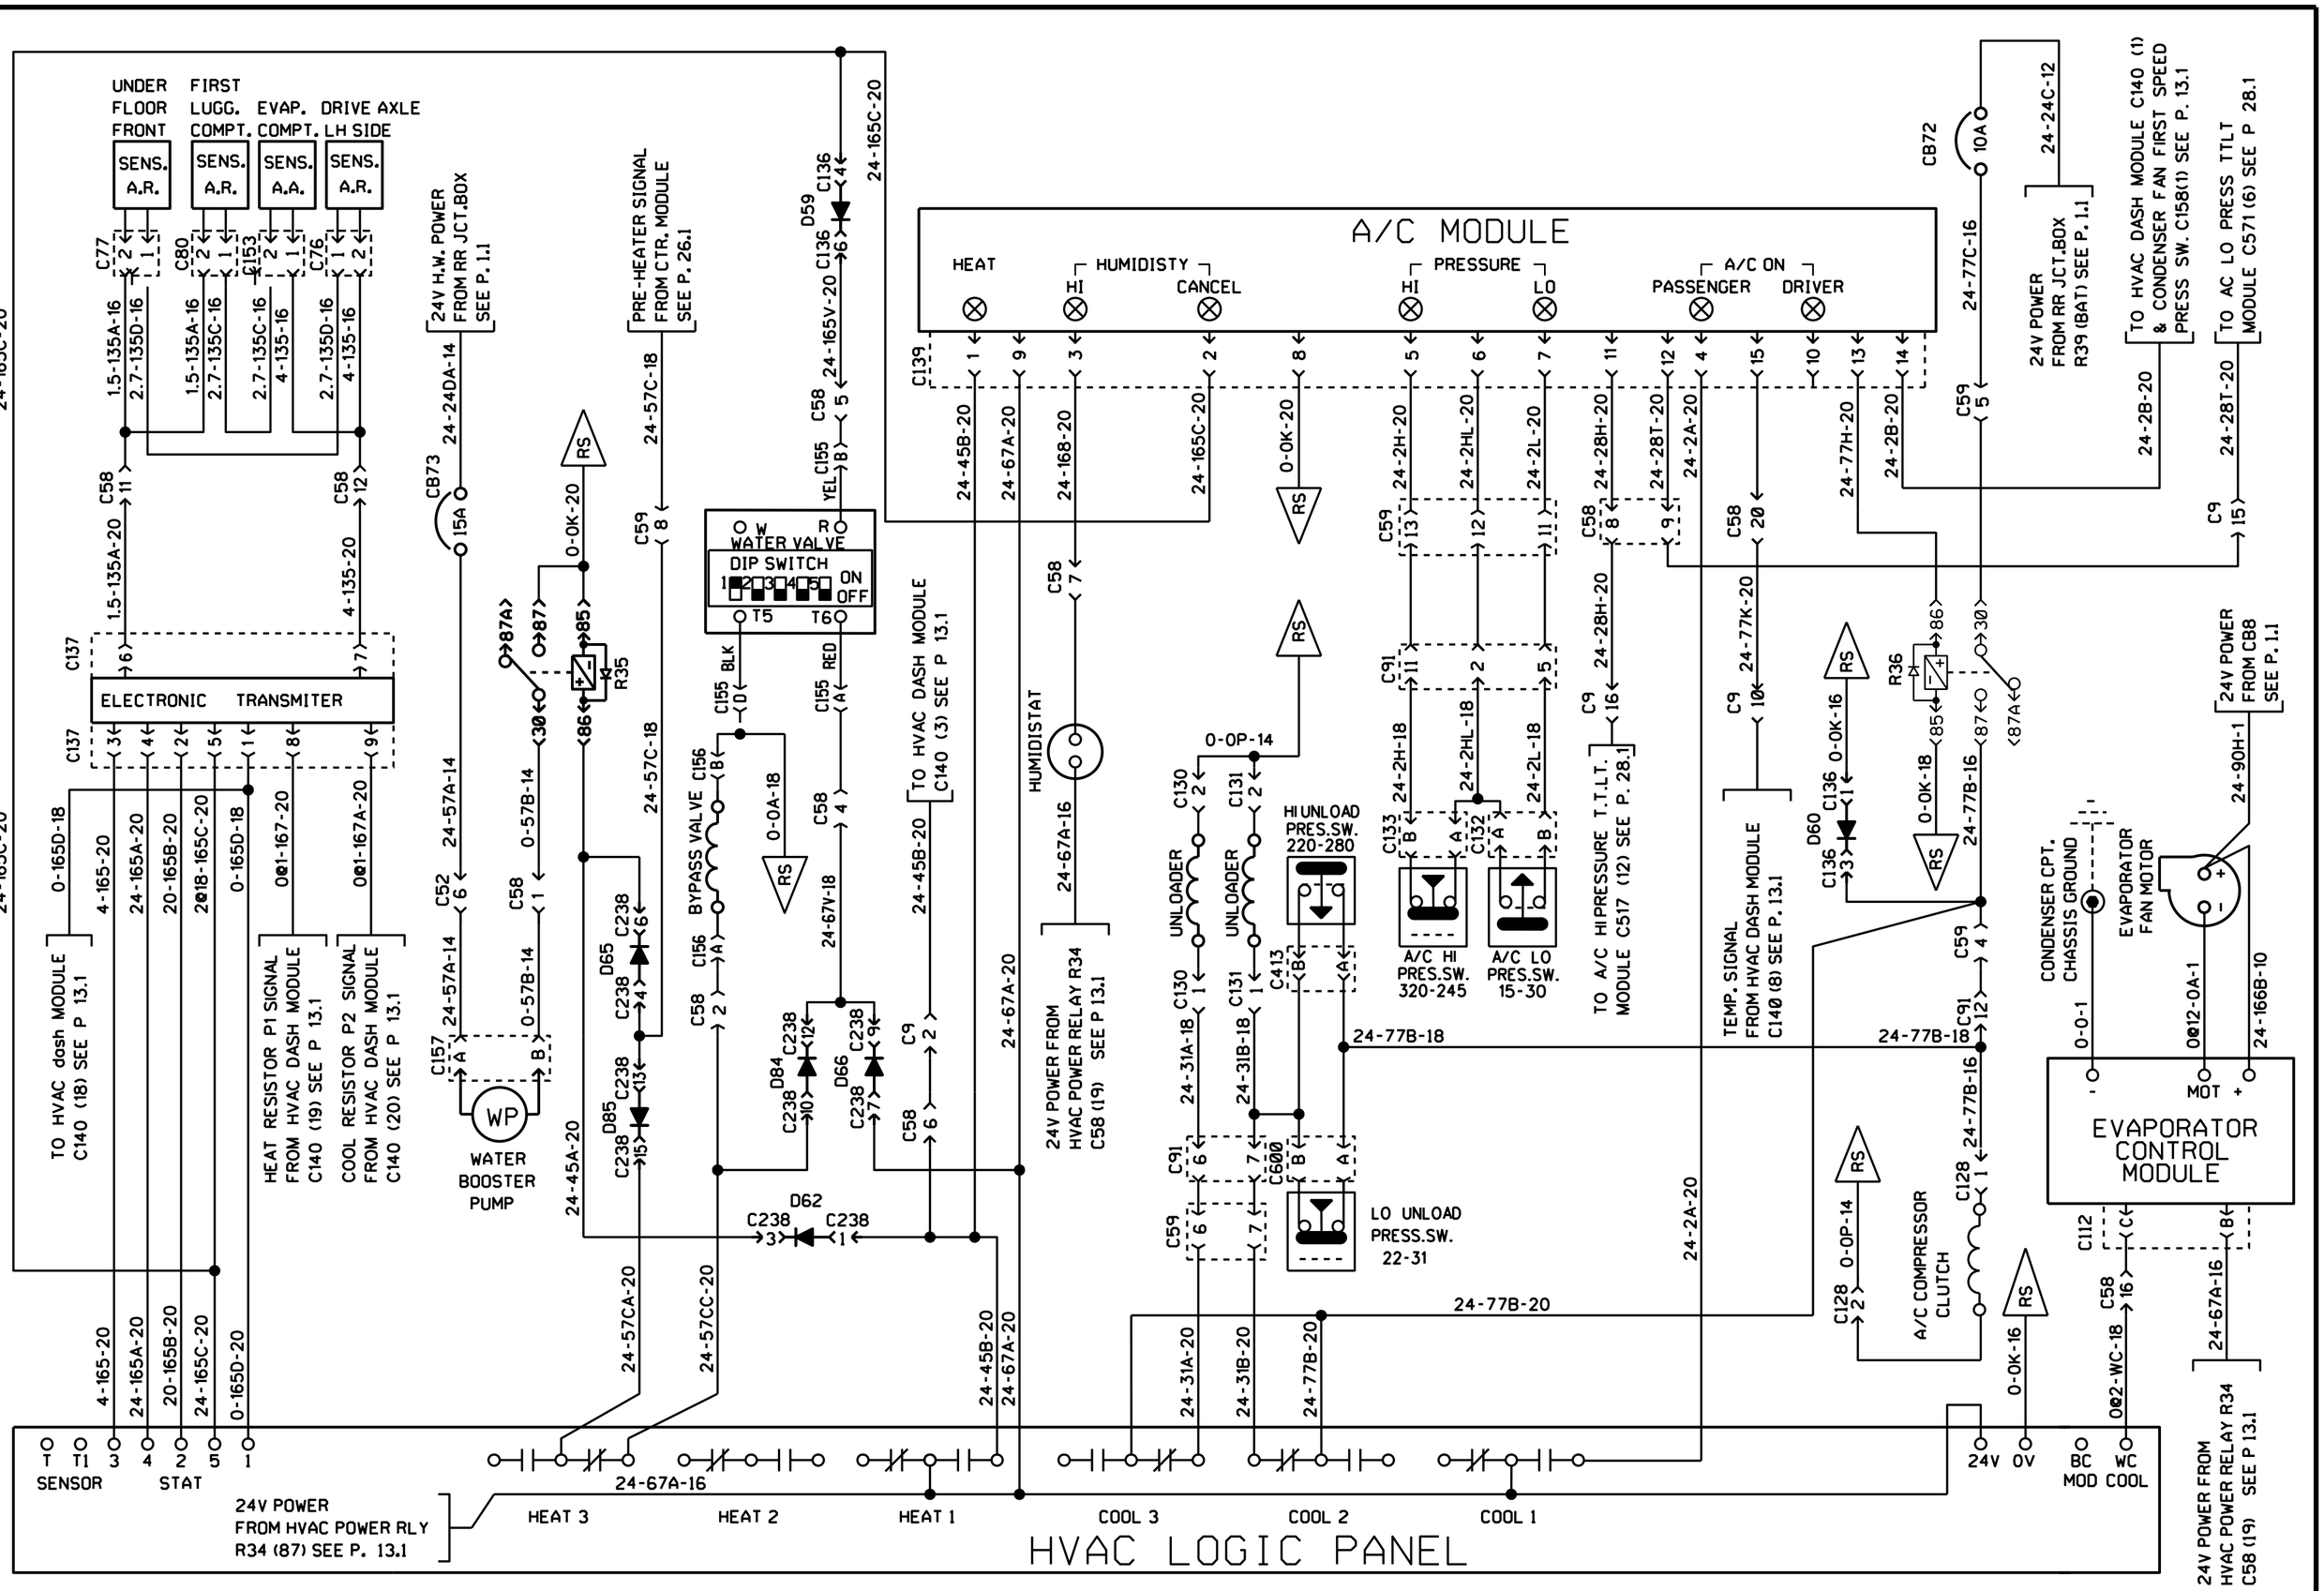
A/C MODULE
HEAT
HUMIDISTY
HI
CANCEL
PRESSURE
HI
LO
A/C ON
PASSENGER
DRIVER
UNDER FLOOR FRONT SENS. A.R.
FIRST LUGG. COMPT. SENS. A.R.
EVAP. COMPT. SENS. A.A.
DRIVE AXLE LH SIDE SENS. A.R.
ELECTRONIC TRANSMITER
WATER VALVE
DIP SWITCH
HUMIDISTAT
BYPASS VALVE
WATER BOOSTER PUMP
HI UNLOAD PRES.SW. 220-280
A/C HI PRES.SW. 320-245
A/C LO PRES.SW. 15-30
LO UNLOAD PRESS.SW. 22-31
A/C COMPRESSOR CLUTCH
EVAPORATOR CONTROL MODULE
EVAPORATOR FAN MOTOR
CONDENSER CPT. CHASSIS GROUND
TO HVAC DASH MODULE C140 (3) SEE P 13.1
TO HVAC dash MODULE C140 (18) SEE P 13.1
HEAT RESISTOR P1 SIGNAL FROM HVAC DASH MODULE C140 (19) SEE P 13.1
COOL RESISTOR P2 SIGNAL FROM HVAC DASH MODULE C140 (20) SEE P 13.1
24V H.W. POWER FROM RR JCT.BOX SEE P. 1.1
PRE-HEATER SIGNAL FROM CTR. MODULE SEE P. 26.1
24V POWER FROM HVAC POWER RELAY R34 C58 (19) SEE P 13.1
TO HVAC DASH MODULE C140 (1) & CONDENSER FAN FIRST SPEED PRESS SW. C158(1) SEE P. 13.1
TO AC LO PRESS TTLT MODULE C571 (6) SEE P 28.1
24V POWER FROM CB8 SEE P. 1.1
TEMP. SIGNAL FROM HVAC DASH MODULE C140 (8) SEE P. 13.1
TO A/C HIPRESSURE T.T.LT. MODULE C517 (12) SEE P. 28.1
T SENSOR
T1
STAT
24V POWER FROM HVAC POWER RLY R34 (87) SEE P. 13.1
HEAT 3
HEAT 2
HEAT 1
COOL 3
COOL 2
COOL 1
24V
0V
BC MOD COOL
WC
24V POWER FROM HVAC POWER RELAY R34 C58 (19) SEE P 13.1

HVAC SYSTEM