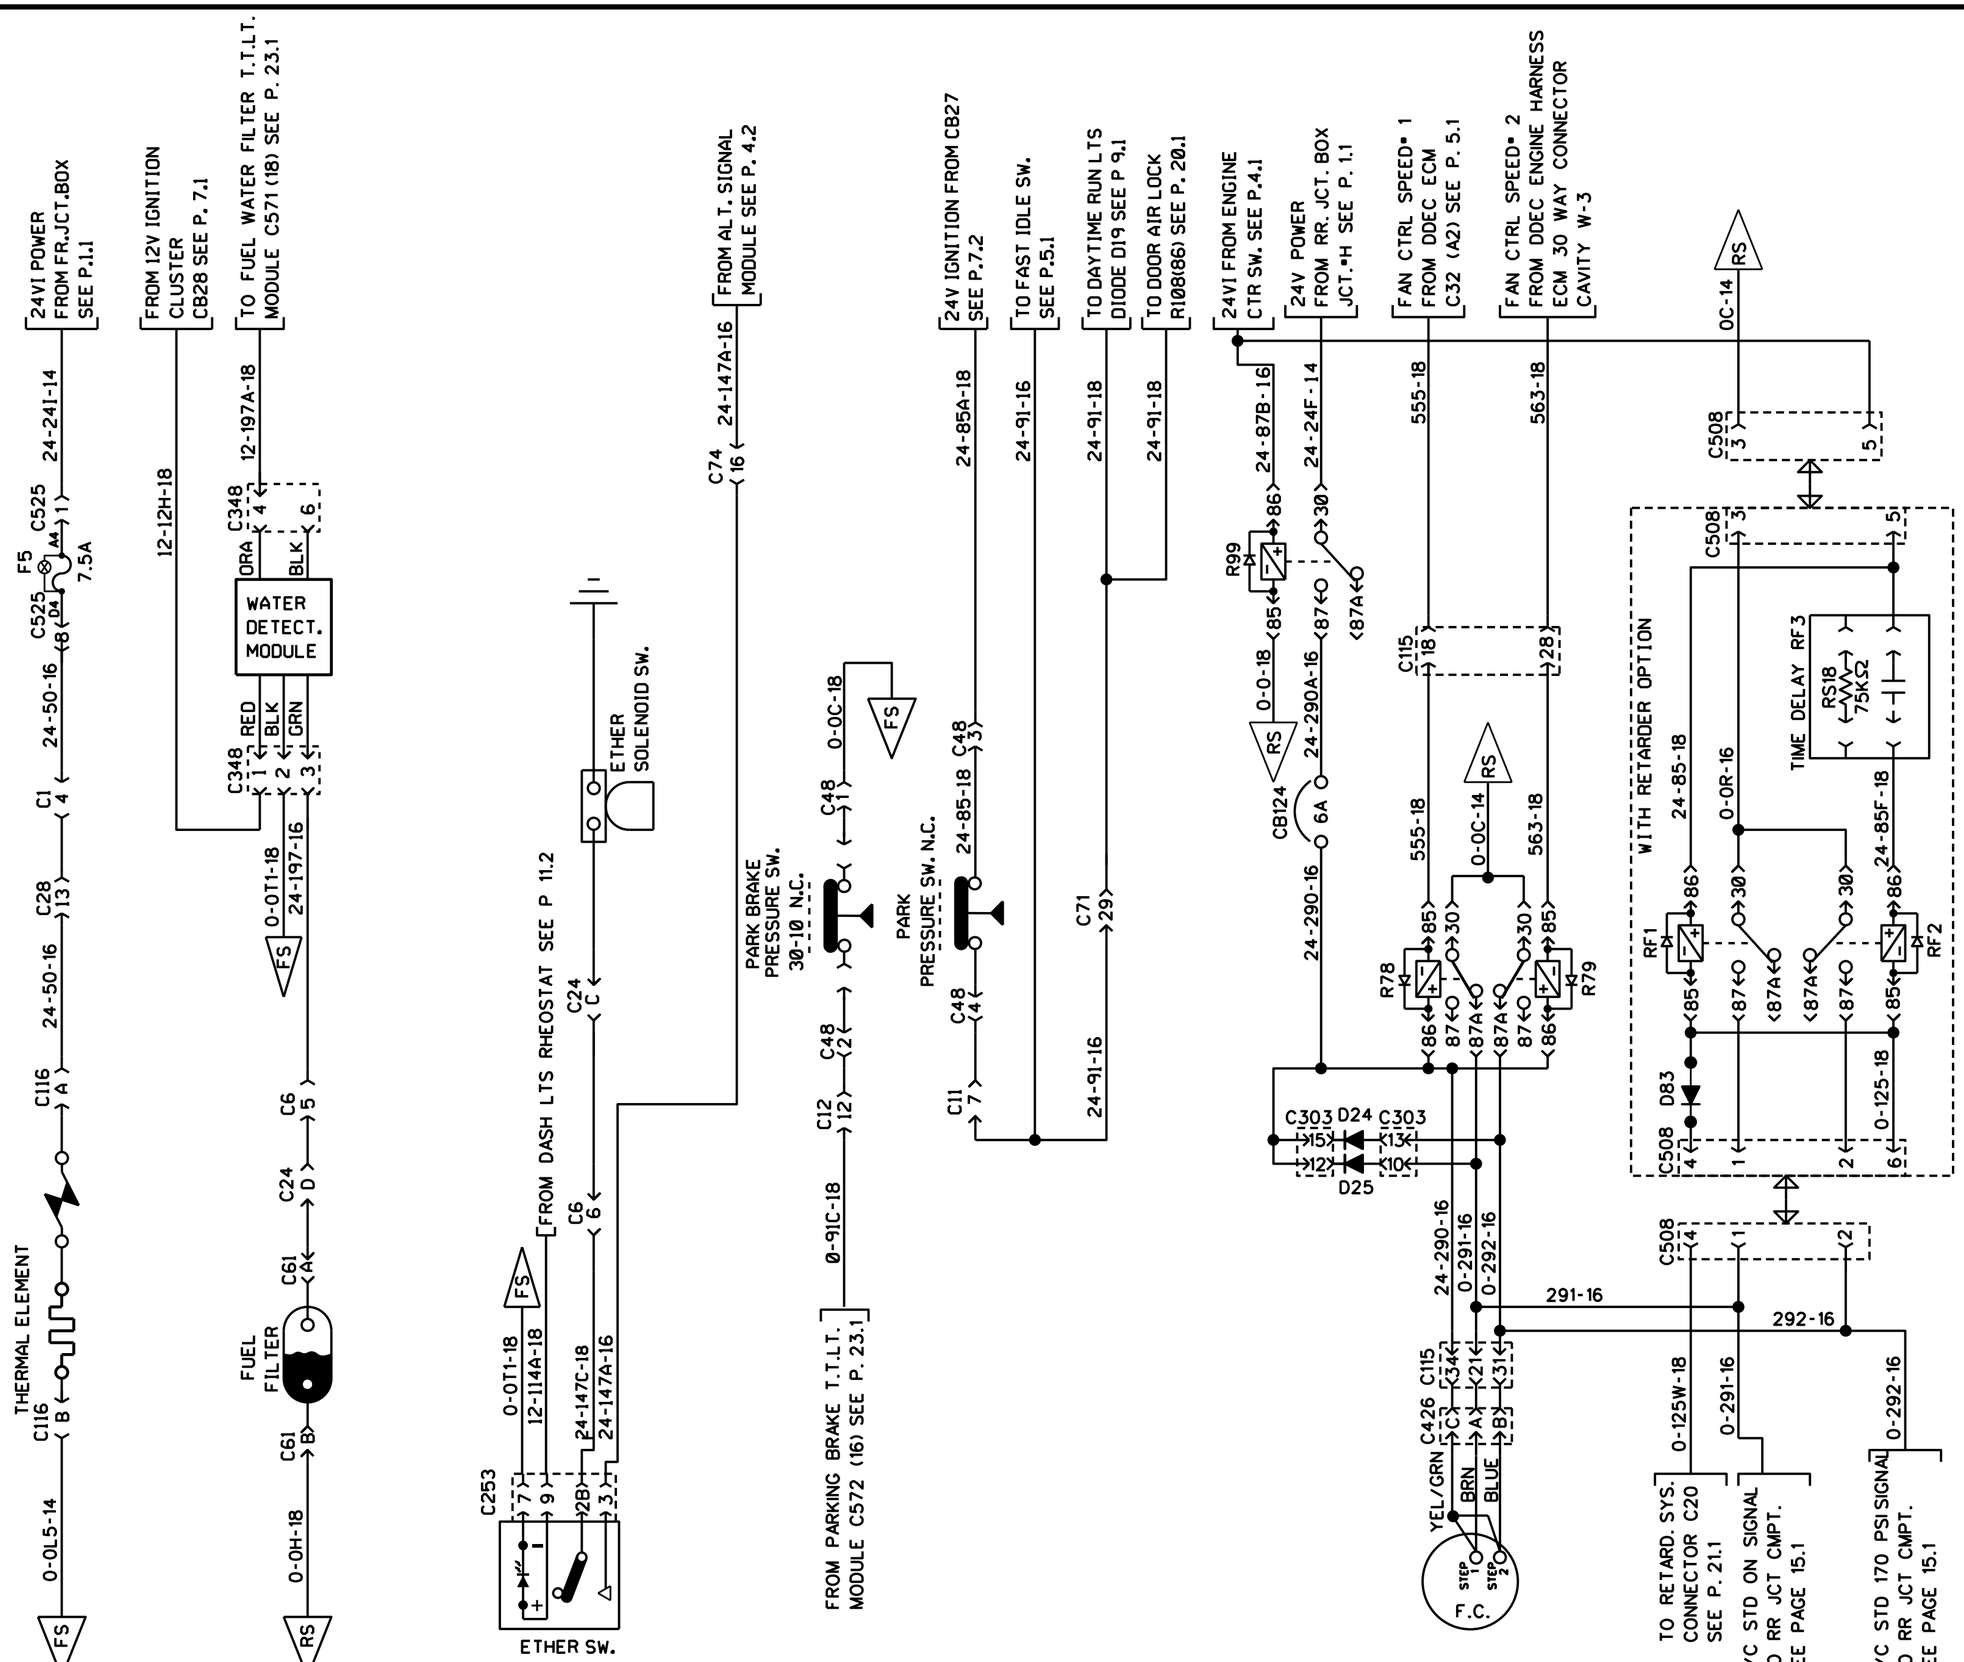
AIR DRYER
FUEL WATER FILTER
ETHER COLD START
PARKING BRAKE ALARM & SWITCH
RADIATOR FAN CLUTCH
F5
7.5A
C525
24VI POWER FROM FR.JCT.BOX SEE P.1.1
24-241-14
FROM 12V IGNITION CLUSTER CB28 SEE P. 7.1
12-12H-18
TO FUEL WATER FILTER T.T.L.T. MODULE C571 (18) SEE P. 23.1
12-197A-18
C348
WATER DETECT. MODULE
ORA
BLK
RED
BLK
GRN
24-50-16
C1
C28
C116
THERMAL ELEMENT
0-0L5-14
0-0H-18
C61
FUEL FILTER
C24
C6
0-0T1-18
24-197-16
ETHER SOLENOID SW.
ETHER SW.
C253
12-114A-18
24-147C-18
24-147A-16
FROM DASH LTS RHEOSTAT SEE P 11.2
FROM ALT. SIGNAL MODULE SEE P. 4.2
C74
24-147A-16
0-0C-18
C48
PARK BRAKE PRESSURE SW. 30-10 N.C.
0-91C-18
C12
FROM PARKING BRAKE T.T.L.T. MODULE C572 (16) SEE P. 23.1
PARK PRESSURE SW. N.C.
C11
C71
24-91-16
24V IGNITION FROM CB27 SEE P.7.2
24-85A-18
24-85-18
TO FAST IDLE SW. SEE P.5.1
TO DAYTIME RUN LTS DIODE D19 SEE P 9.1
TO DOOR AIR LOCK R108(86) SEE P. 20.1
24VI FROM ENGINE CTR SW. SEE P.4.1
24V POWER FROM RR. JCT. BOX JCT.•H SEE P. 1.1
FAN CTRL SPEED• 1 FROM DDEC ECM C32 (A2) SEE P. 5.1
FAN CTRL SPEED• 2 FROM DDEC ENGINE HARNESS ECM 30 WAY CONNECTOR CAVITY W-3
R99
24-87B-16
24-24F-14
CB124
24-290A-16
0-0-18
555-18
563-18
C115
0-0C-14
R78
R79
C303
D24
D25
24-290-16
0-291-16
0-292-16
291-16
292-16
C426
YEL/GRN
BRN
BLUE
STEP 1
STEP 2
F.C.
WITH RETARDER OPTION
TIME DELAY RF3
RS18
75KΩ
RF1
RF2
D83
C508
0-0R-16
24-85F-18
0-125-18
0-125W-18
TO RETARD. SYS. CONNECTOR C20 SEE P. 21.1
A/C STD ON SIGNAL TO RR JCT CMPT. SEE PAGE 15.1
A/C STD 170 PSI SIGNAL TO RR JCT CMPT. SEE PAGE 15.1