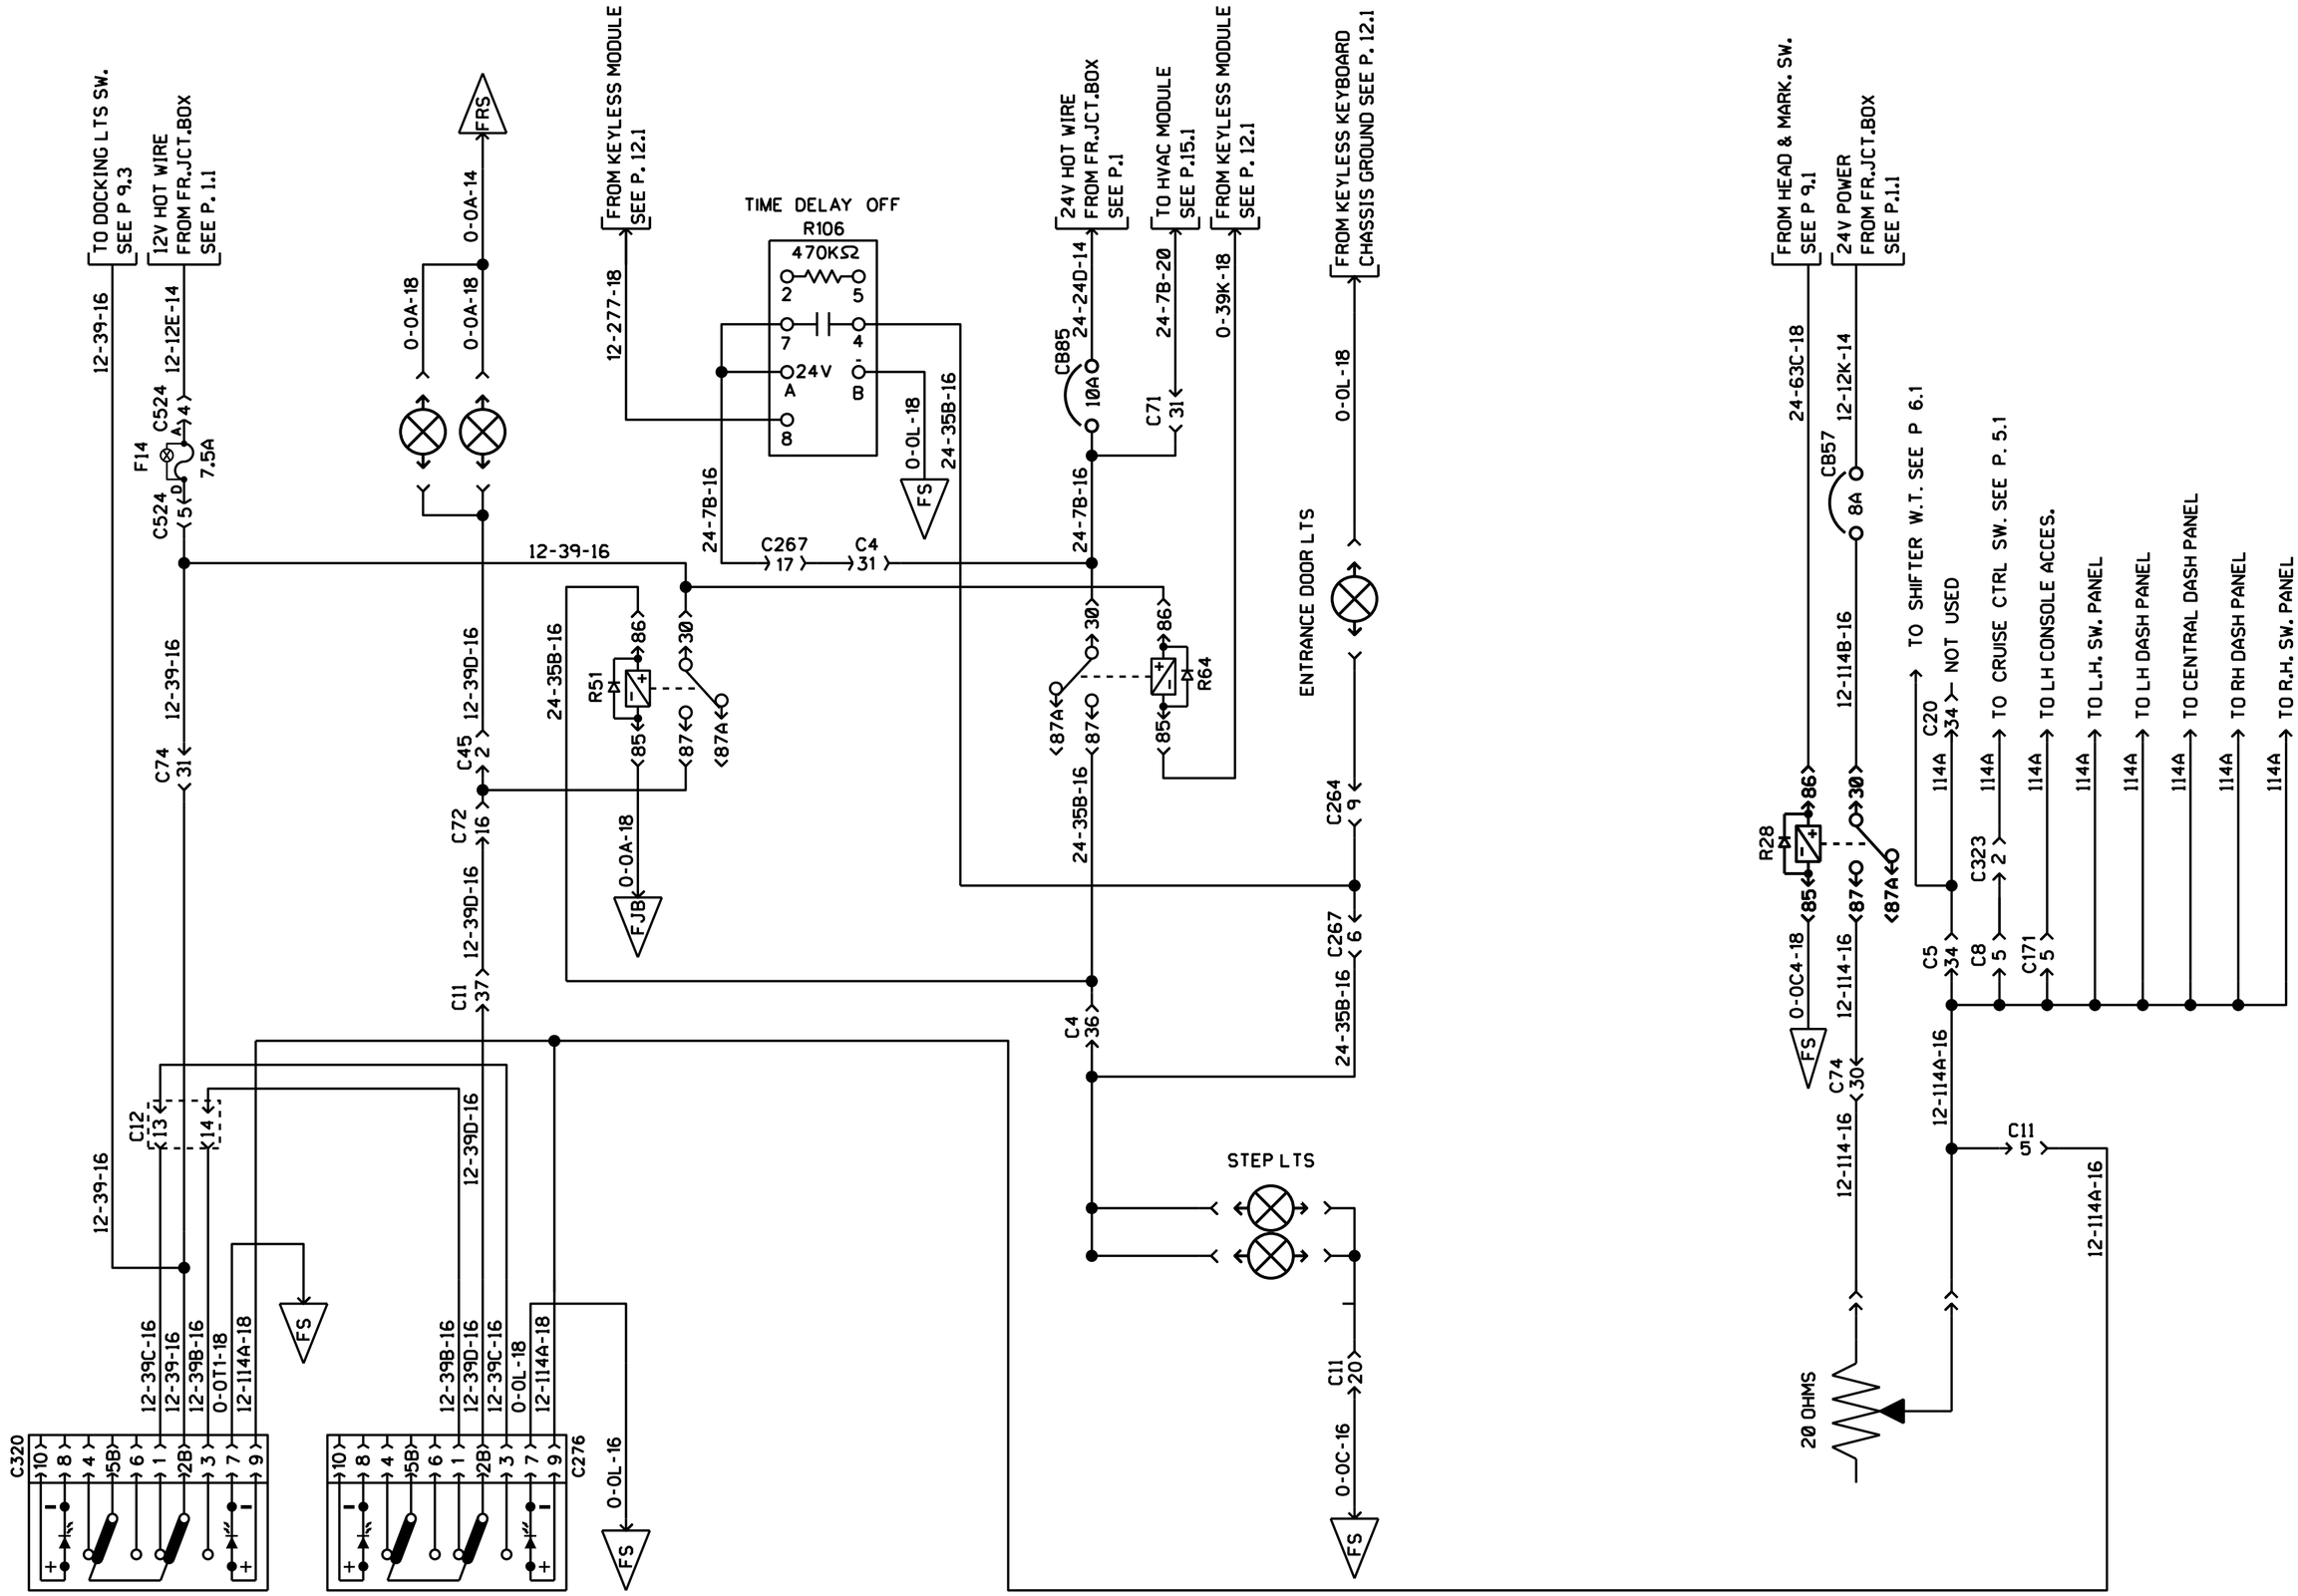
TO DOCKING LTS SW.
SEE P 9.3
12V HOT WIRE
FROM FR.JCT.BOX
SEE P. 1.1
12-39-16
12-12E-14
F14
7.5A
C524
FRS
0-0A-14
0-0A-18
FROM KEYLESS MODULE
SEE P. 12.1
12-277-18
TIME DELAY OFF
R106
470KΩ
24V
24V HOT WIRE
FROM FR.JCT.BOX
SEE P.1
CB85
24-24D-14
10A
TO HVAC MODULE
SEE P.15.1
C71
24-7B-20
FROM KEYLESS MODULE
SEE P. 12.1
0-39K-18
24-7B-16
C267
C4
0-0L-18
24-35B-16
FS
FROM KEYLESS KEYBOARD
CHASSIS GROUND SEE P. 12.1
ENTRANCE DOOR LTS
C264
C267
24-35B-16
C74
C45
C72
C11
12-39D-16
24-35B-16
R51
R64
R28
0-0A-18
FJB
FROM HEAD & MARK. SW.
SEE P 9.1
24-63C-18
24V POWER
FROM FR.JCT.BOX
SEE P.1.1
CB57
12-12K-14
8A
12-114B-16
TO SHIFTER W.T. SEE P 6.1
NOT USED
TO CRUISE CTRL SW. SEE P. 5.1
TO LH CONSOLE ACCES.
TO L.H. SW. PANEL
TO LH DASH PANEL
TO CENTRAL DASH PANEL
TO RH DASH PANEL
TO R.H. SW. PANEL
C20
C323
C5
C8
C171
0-0C4-18
12-114-16
C74
12-114A-16
C11
20 OHMS
STEP LTS
C12
12-39C-16
12-39-16
12-39B-16
0-0T1-18
12-114A-18
0-0L-18
C320
C276
0-0C-16
DRIVER'S LTS SW.
3-WAY SW.
DRIVER'S LTS
ENTRANCE DOOR SW. & LTS
DASH LTS. RHEOSTAT
INTERIOR LIGHTING