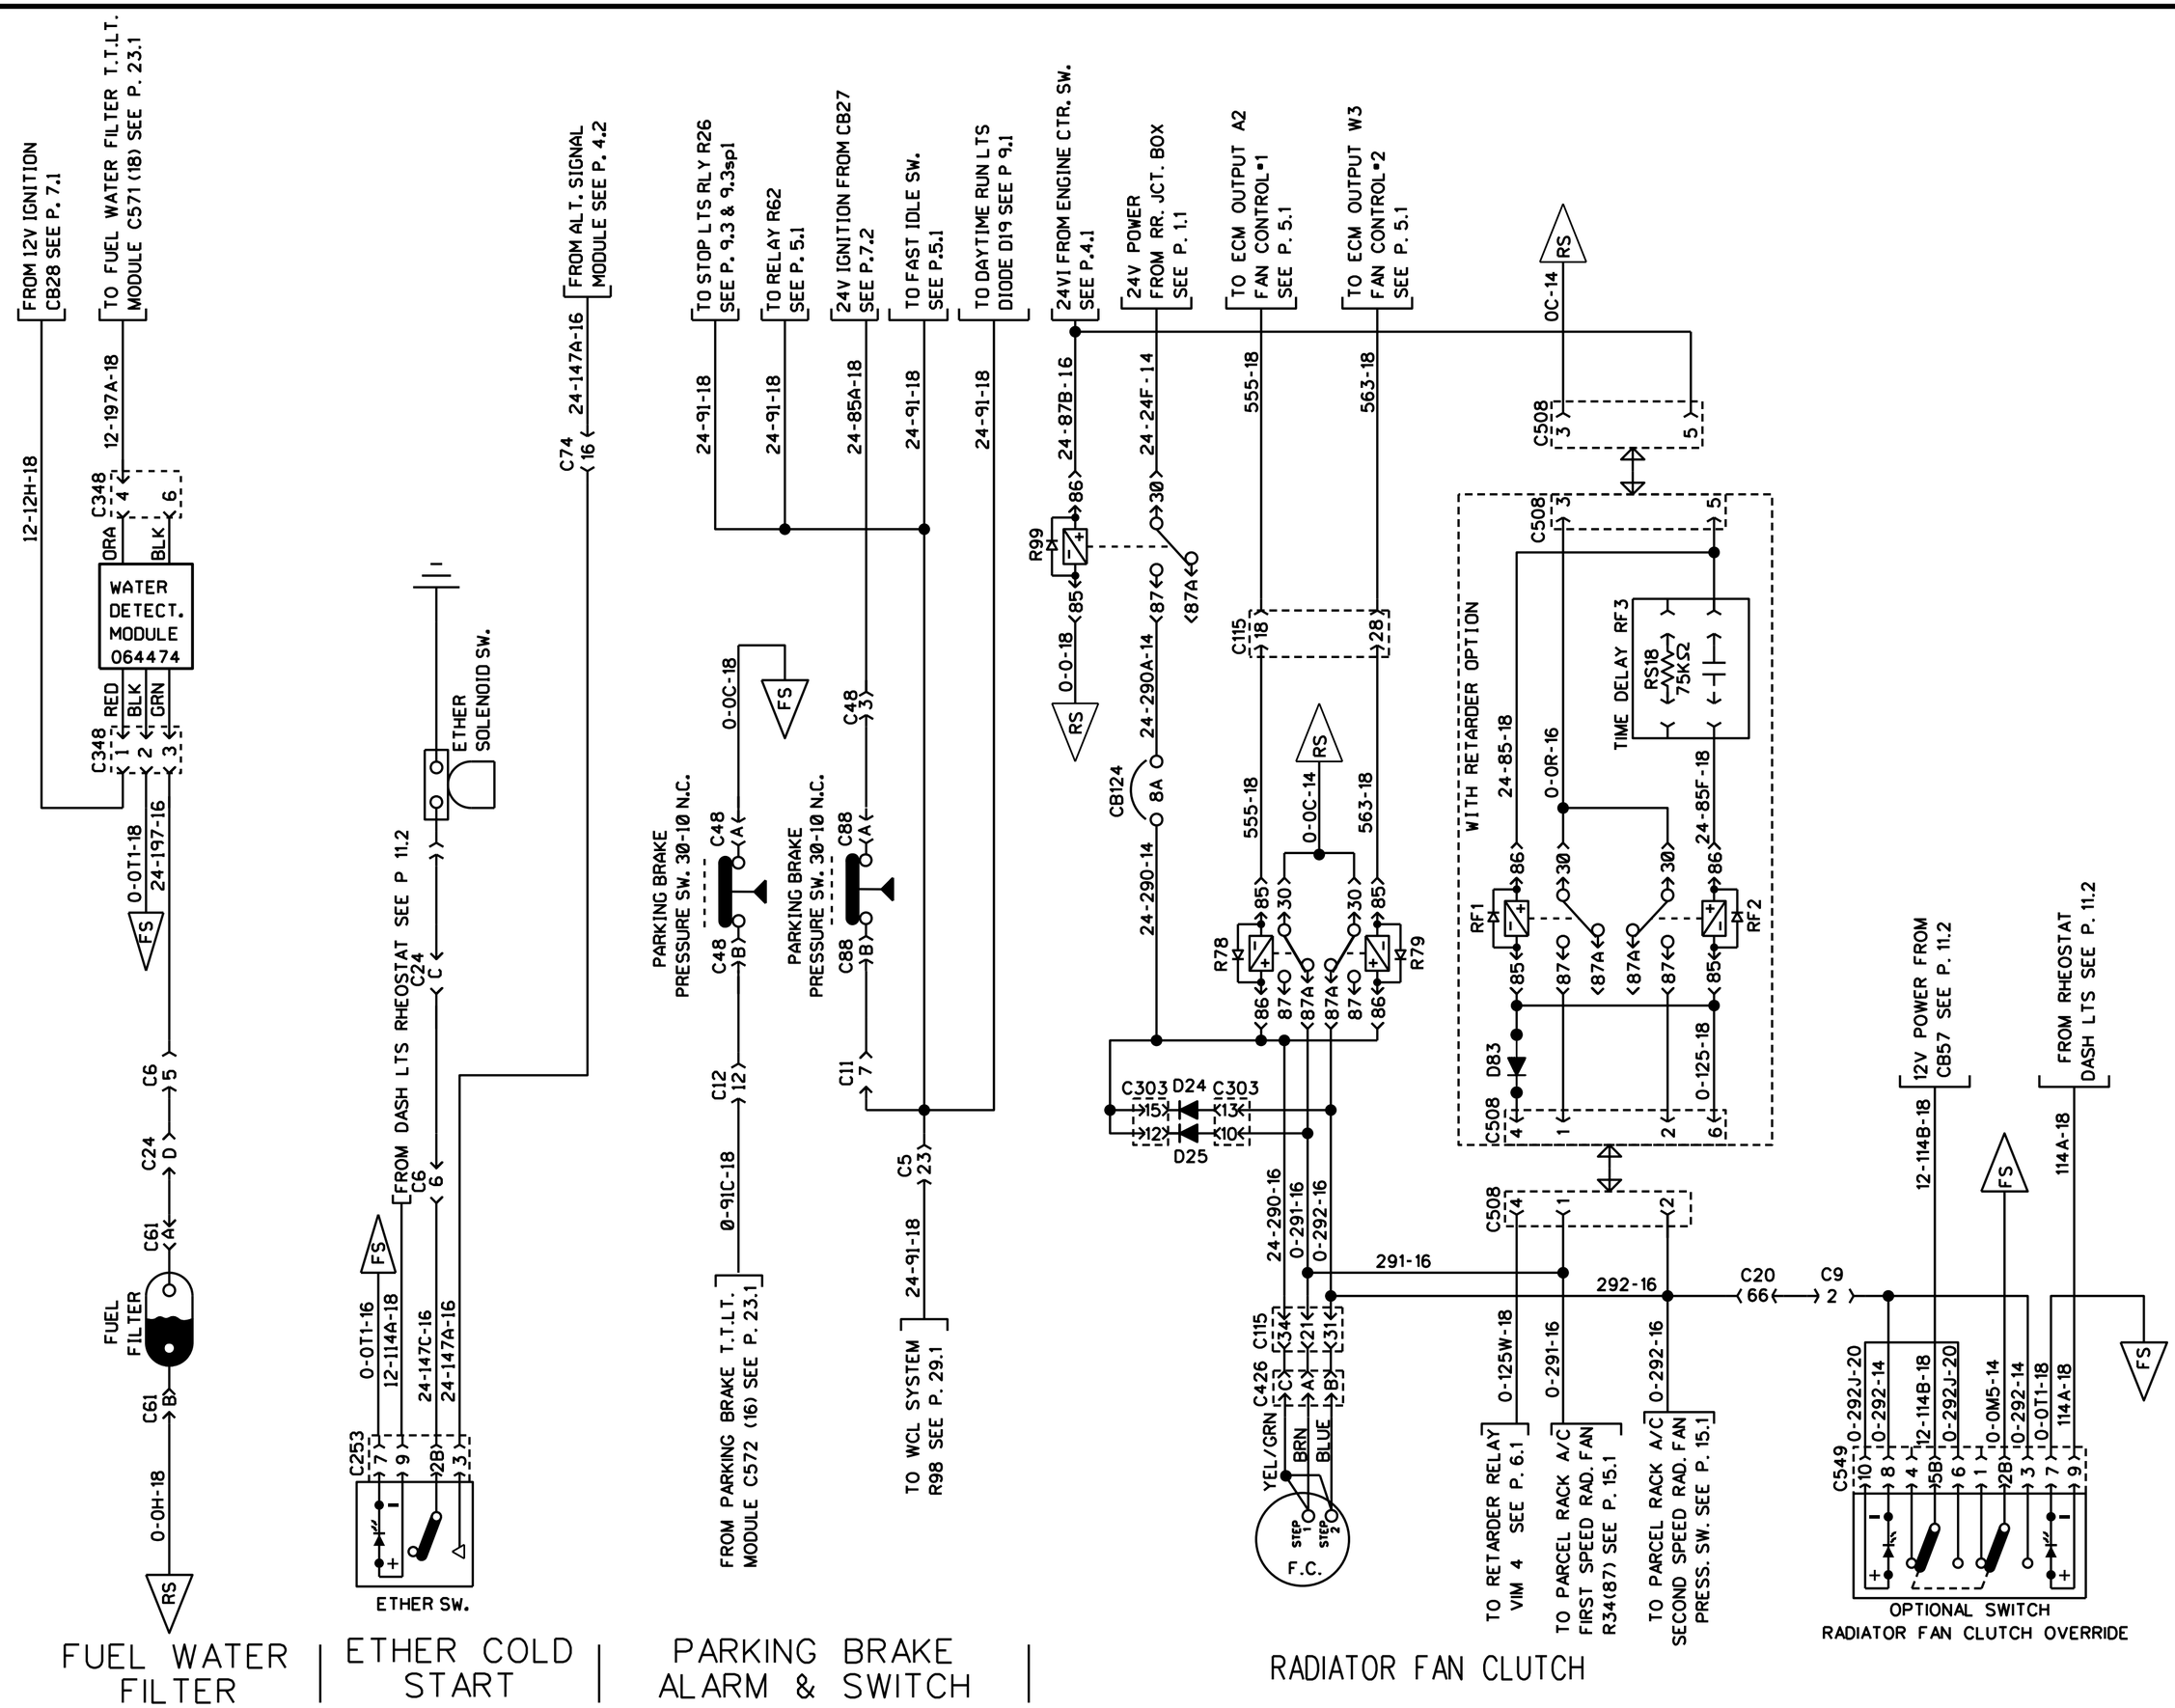
FROM 12V IGNITION
CB28 SEE P. 7.1
12-12H-18
TO FUEL WATER FILTER T.T.L.T.
MODULE C571 (18) SEE P. 23.1
12-197A-18
C348
ORA 4
BLK 6
WATER DETECT. MODULE 064474
C348
1 RED
2 BLK
3 GRN
0-0T1-18
24-197-16
FS
C6 5
C24 D
C61 A
FUEL FILTER
C61 B
0-0H-18
RS
FROM ALT. SIGNAL
MODULE SEE P. 4.2
C74 16
24-147A-16
ETHER SOLENOID SW.
FROM DASH LTS RHEOSTAT SEE P 11.2
C24 C
C6 6
FS
0-0T1-16
12-114A-18
24-147C-16
24-147A-16
C253
7
9
2B
3
ETHER SW.
TO STOP LTS RLY R26
SEE P. 9.3 & 9.3sp1
24-91-18
TO RELAY R62
SEE P. 5.1
24V IGNITION FROM CB27
SEE P.7.2
24-85A-18
TO FAST IDLE SW.
SEE P.5.1
TO DAYTIME RUN LTS
DIODE D19 SEE P 9.1
PARKING BRAKE
PRESSURE SW. 30-10 N.C.
C48 A
C48 B
0-0C-18
FS
0-91C-18
C12 12
FROM PARKING BRAKE T.T.L.T.
MODULE C572 (16) SEE P. 23.1
C48 3
PARKING BRAKE
PRESSURE SW. 30-10 N.C.
C88 A
C88 B
C11 7
C5 23
24-91-18
TO WCL SYSTEM
R98 SEE P. 29.1
24VI FROM ENGINE CTR. SW.
SEE P.4.1
24V POWER
FROM RR. JCT. BOX
SEE P. 1.1
TO ECM OUTPUT A2
FAN CONTROL*1
SEE P. 5.1
TO ECM OUTPUT W3
FAN CONTROL*2
SEE P. 5.1
24-87B-16
24-24F-14
555-18
563-18
R99
86
85
30
87
87A
0-0-18
RS
24-290A-14
CB124
8A
24-290-14
C115
18
28
0-0C-14
RS
OC-14
RS
C508 3
5
WITH RETARDER OPTION
24-85-18
0-0R-16
TIME DELAY RF3
RS18
75KΩ
24-85F-18
RF1
RF2
D83
C508
4
1
2
6
0-125-18
R78
R79
C303 D24 C303
15
12
13
10
D25
24-290-16
0-291-16
0-292-16
291-16
292-16
C115
C426
C3
A3
B3
C34
A1
B1
YEL/GRN
BRN
BLUE
STEP 1
STEP 2
F.C.
C508
4
1
2
0-125W-18
0-291-16
0-292-16
TO RETARDER RELAY
VIM 4 SEE P. 6.1
TO PARCEL RACK A/C
FIRST SPEED RAD. FAN
R34(87) SEE P. 15.1
TO PARCEL RACK A/C
SECOND SPEED RAD. FAN
PRESS. SW. SEE P. 15.1
C20 66
C9 2
12V POWER FROM
CB57 SEE P. 11.2
12-114B-18
FS
FROM RHEOSTAT
DASH LTS SEE P. 11.2
114A-18
C549
10
8
4
5B
6
1
2B
3
7
9
0-292J-20
0-292-14
12-114B-18
0-292J-20
0-0M5-14
0-292-14
0-0T1-18
114A-18
OPTIONAL SWITCH
RADIATOR FAN CLUTCH OVERRIDE
FUEL WATER FILTER
ETHER COLD START
PARKING BRAKE ALARM & SWITCH
RADIATOR FAN CLUTCH