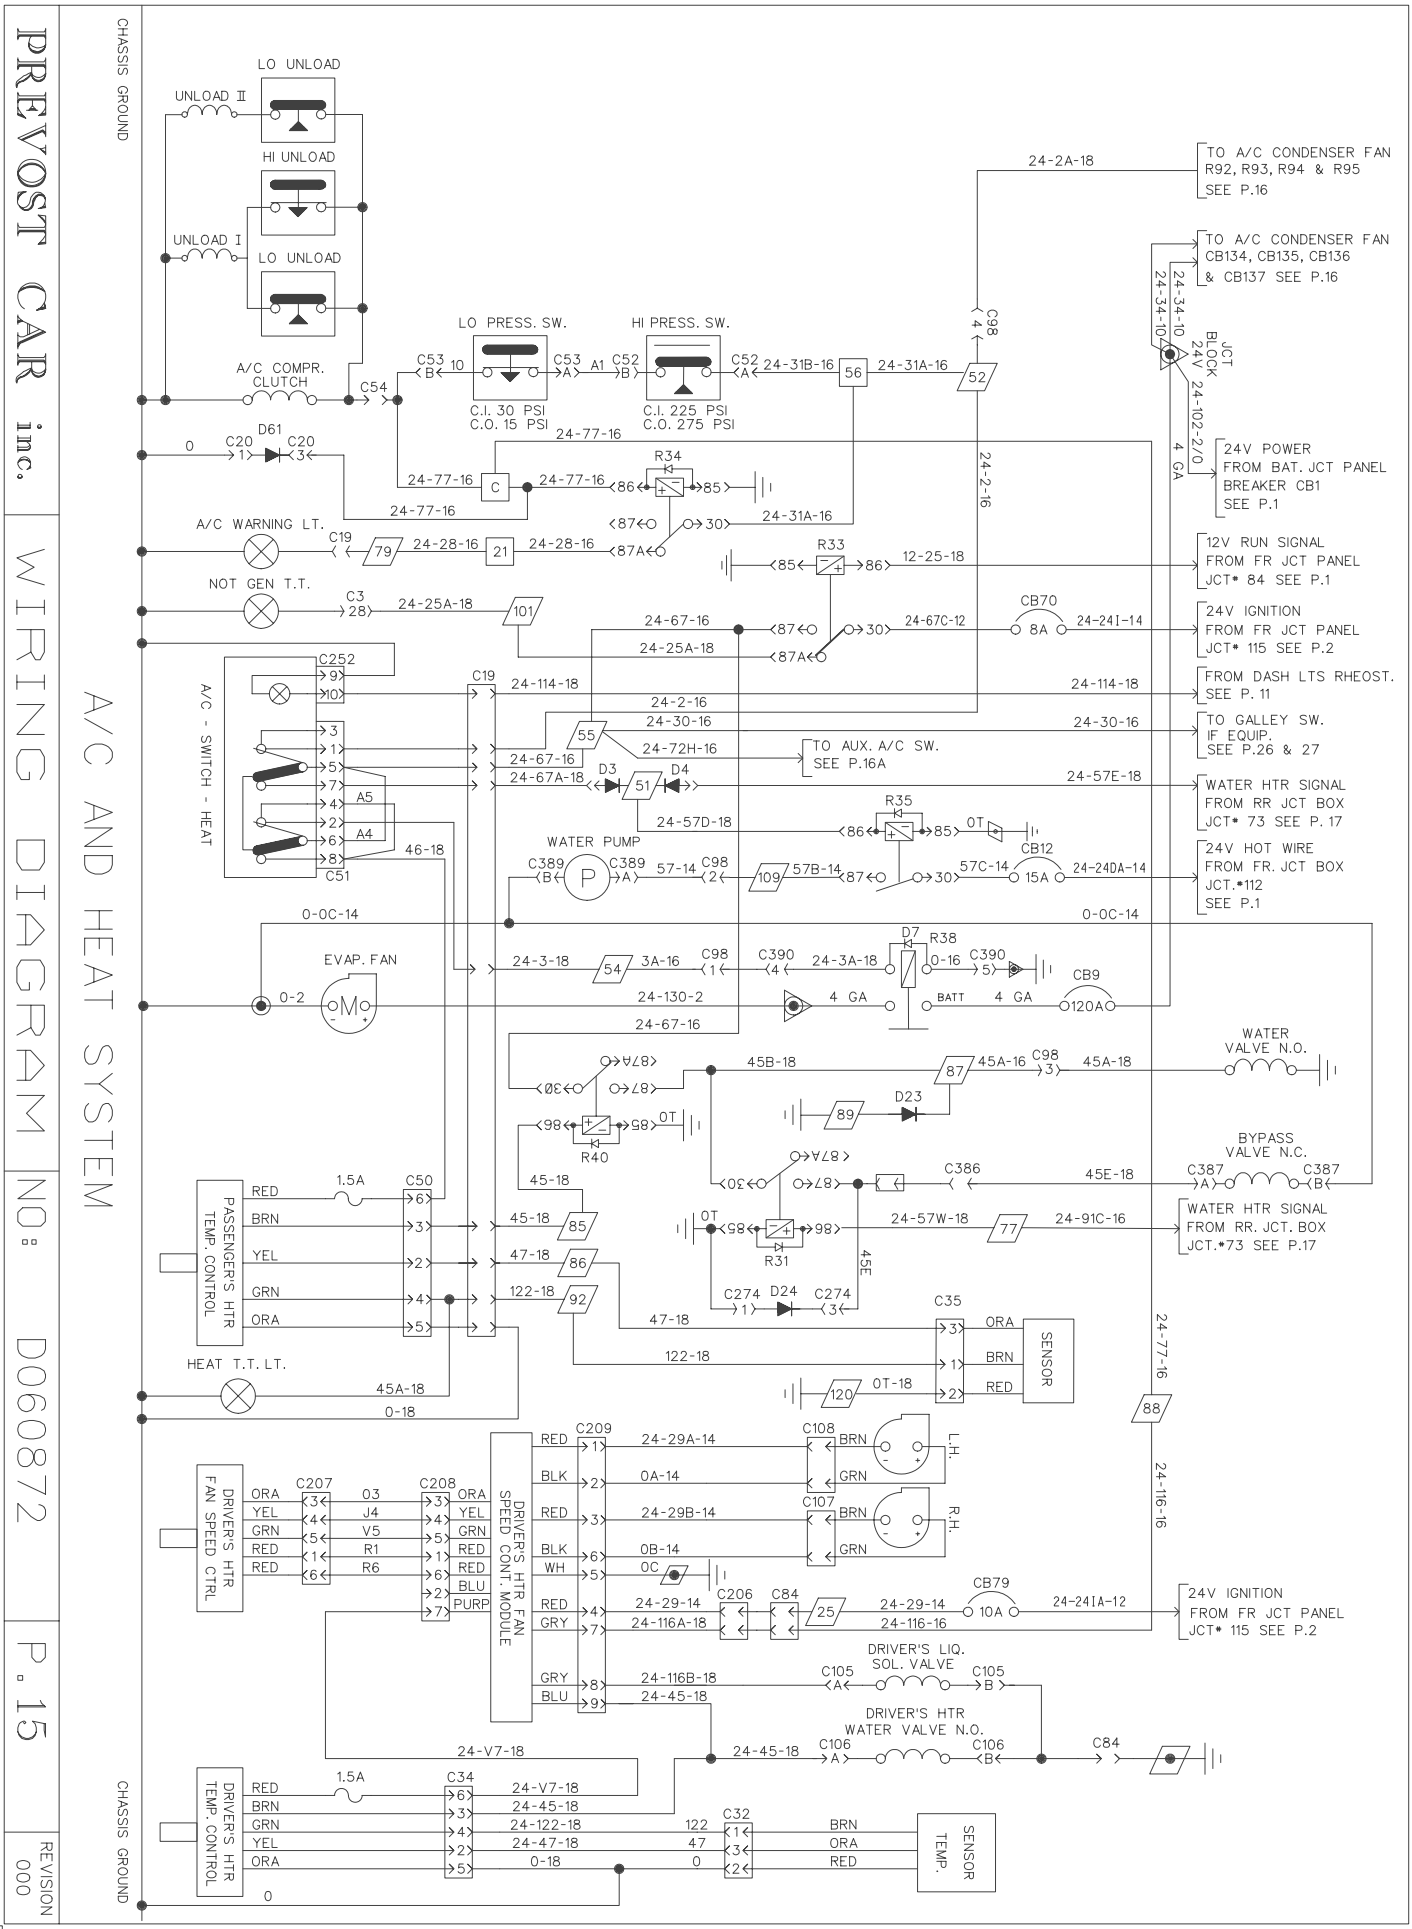
PREVOST CAR inc.
WIRING DIAGRAM NO. D060872 P. 15
REVISION 000
A/C AND HEAT SYSTEM
CHASSIS GROUND
LO UNLOAD
UNLOAD II
HI UNLOAD
UNLOAD I
LO UNLOAD
A/C COMPR. CLUTCH
LO PRESS. SW.
C.I. 30 PSI
C.O. 15 PSI
HI PRESS. SW.
C.I. 225 PSI
C.O. 275 PSI
TO A/C CONDENSER FAN R92, R93, R94 & R95 SEE P.16
TO A/C CONDENSER FAN CB134, CB135, CB136 & CB137 SEE P.16
JCT BLOCK 24V
24V POWER FROM BAT. JCT PANEL BREAKER CB1 SEE P.1
A/C WARNING LT.
NOT GEN T.T.
12V RUN SIGNAL FROM FR JCT PANEL JCT* 84 SEE P.1
24V IGNITION FROM FR JCT PANEL JCT* 115 SEE P.2
FROM DASH LTS RHEOST. SEE P. 11
TO GALLEY SW. IF EQUIP. SEE P.26 & 27
A/C - SWITCH - HEAT
TO AUX. A/C SW. SEE P.16A
WATER HTR SIGNAL FROM RR JCT BOX JCT* 73 SEE P. 17
WATER PUMP
24V HOT WIRE FROM FR. JCT BOX JCT.*112 SEE P.1
EVAP. FAN
WATER VALVE N.O.
BYPASS VALVE N.C.
WATER HTR SIGNAL FROM RR. JCT. BOX JCT.*73 SEE P.17
PASSENGER'S HTR TEMP. CONTROL
HEAT T.T. LT.
DRIVER'S HTR FAN SPEED CTRL
DRIVER'S HTR FAN SPEED CONT. MODULE
L.H.
R.H.
24V IGNITION FROM FR JCT PANEL JCT* 115 SEE P.2
DRIVER'S LIQ. SOL. VALVE
DRIVER'S HTR WATER VALVE N.O.
DRIVER'S HTR TEMP. CONTROL
SENSOR TEMP.
SENSOR
CHASSIS GROUND