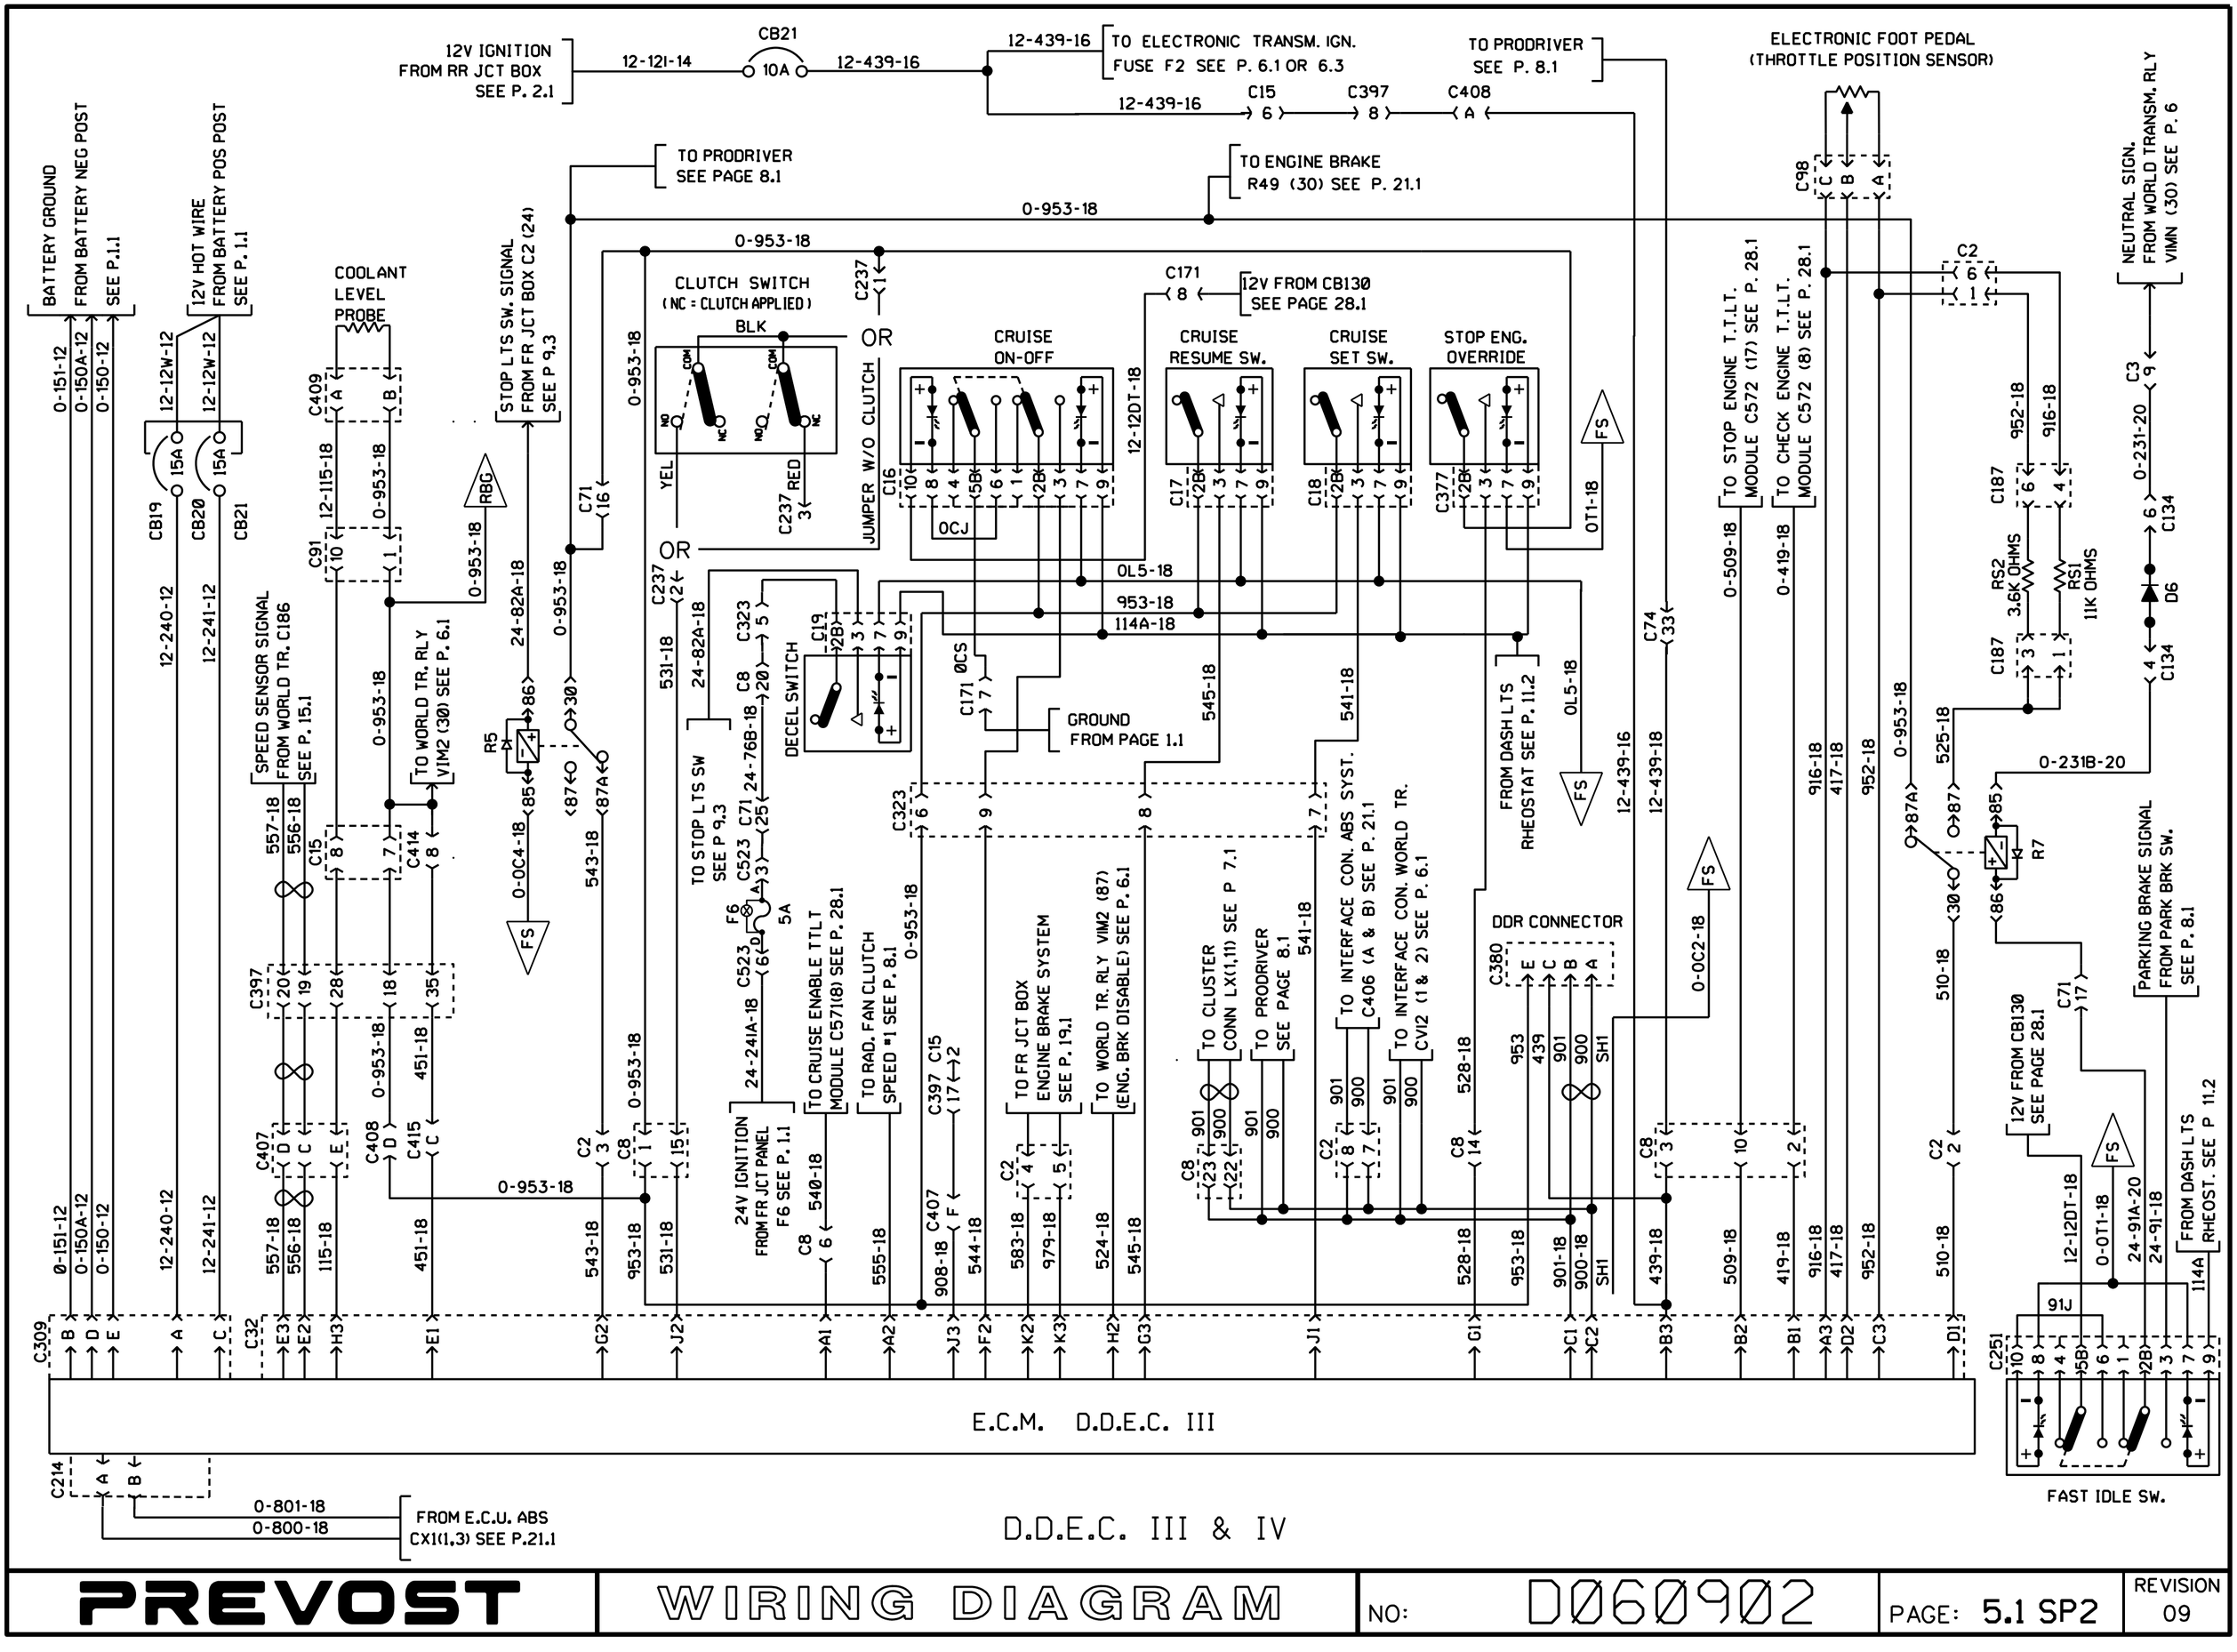
BATTERY GROUND
FROM BATTERY NEG POST
SEE P.1.1
0-151-12
0-150A-12
0-150-12
12V HOT WIRE
FROM BATTERY POS POST
SEE P. 1.1
12-12W-12
12-240-12
12-241-12
CB19
CB20
CB21
15A
12V IGNITION
FROM RR JCT BOX
SEE P. 2.1
12-121-14
CB21
10A
12-439-16
TO ELECTRONIC TRANSM. IGN.
FUSE F2 SEE P. 6.1 OR 6.3
TO PRODRIVER
SEE P. 8.1
C15
C397
C408
TO PRODRIVER
SEE PAGE 8.1
TO ENGINE BRAKE
R49 (30) SEE P. 21.1
0-953-18
ELECTRONIC FOOT PEDAL
(THROTTLE POSITION SENSOR)
C98
COOLANT
LEVEL
PROBE
C409
C91
12-115-18
CLUTCH SWITCH
(NC = CLUTCH APPLIED)
BLK
YEL
RED
C237
C71
C16
JUMPER W/O CLUTCH
OR
CRUISE
ON-OFF
CRUISE
RESUME SW.
CRUISE
SET SW.
STOP ENG.
OVERRIDE
C171
12V FROM CB130
SEE PAGE 28.1
C17
C18
C377
12-12DT-18
OT1-18
FS
TO STOP ENGINE T.T.L.T.
MODULE C572 (17) SEE P. 28.1
TO CHECK ENGINE T.T.L.T.
MODULE C572 (8) SEE P. 28.1
0-509-18
0-419-18
C2
NEUTRAL SIGN.
FROM WORLD TRANSM. RLY
VIMN (30) SEE P. 6
C3
0-231-20
C134
D6
STOP LTS SW. SIGNAL
FROM FR JCT BOX C2 (24)
SEE P 9.3
RBG
24-82A-18
R5
86
85
30
87
87A
0-953-18
TO WORLD TR. RLY
VIM2 (30) SEE P. 6.1
SPEED SENSOR SIGNAL
FROM WORLD TR. C186
SEE P. 15.1
557-18
556-18
C414
C407
C415
C408
451-18
115-18
543-18
953-18
531-18
555-18
908-18
544-18
583-18
979-18
524-18
545-18
0L5-18
953-18
114A-18
DECEL SWITCH
C19
C323
C8
20
5
24-76B-18
C71
25
531-18
0CS
GROUND
FROM PAGE 1.1
545-18
541-18
ABS SYST.
SEE P. 21.1
WORLD TR.
FROM DASH LTS
RHEOSTAT SEE P. 11.2
C74
33
12-439-18
12-439-16
916-18
417-18
952-18
525-18
RS2
3.6K OHMS
RS1
11K OHMS
C187
952-18
916-18
0-231B-20
R7
0-0C4-18
0-0C2-18
FS
TO STOP LT SW
SEE P 9.3
C523
F6
5A
24-241A-18
24V IGNITION
FROM FR JCT PANEL
F6 SEE P. 1.1
TO CRUISE ENABLE TTLT
MODULE C571(8) SEE P. 28.1
540-18
TO RAD. FAN CLUTCH
SPEED "1 SEE P. 8.1
C397 C15
17
2
TO FR JCT BOX
ENGINE BRAKE SYSTEM
SEE P. 19.1
TO WORLD TR. RLY VIM2 (87)
(ENG. BRK DISABLE) SEE P. 6.1
TO CLUSTER
CONN LX(1,11) SEE P 7.1
TO PRODRIVER
SEE PAGE 8.1
541-18
TO INTERFACE CON. ABS SYST.
C406 (A & B) SEE P. 21.1
TO INTERFACE CON. WORLD TR.
CVI2 (1 & 2) SEE P. 6.1
DDR CONNECTOR
C380
953
439
901
900
SH1
528-18
509-18
419-18
510-18
439-18
12V FROM CB130
SEE PAGE 28.1
C71
17
PARKING BRAKE SIGNAL
FROM PARK BRK SW.
SEE P. 8.1
FROM DASH LTS
RHEOST. SEE P 11.2
12-12DT-18
0-0T1-18
24-91A-20
24-91-18
91J
114A
FAST IDLE SW.
C251
C309
C32
E.C.M. D.D.E.C. III
C214
0-801-18
0-800-18
FROM E.C.U. ABS
CX1(1,3) SEE P.21.1
D.D.E.C. III & IV