

PREVOST

95-01

Warranty Bulletin

Date: **January 1995**
Section: **12**
Subject: **INSTALLATION OF A PARKING BRAKE BUTTON PROTECTOR**
Application:

Models	VINs
Prestige, Le Mirage and Marathon Coaches	All from P-363-937-68
Le Mirage XL, Prévost XL and Astral XL Coaches	All up to 2P9L33403R1001991 inclusively
H3-40, H3-41 and H3-45 Coaches	All up to 2P9H33495R1001088 inclusively
H5-60 Coaches	All up to 2P9H33460N1001211 inclusively

DESCRIPTION

On the above mentioned vehicles, a protector must be installed over the parking brake button in order to prevent its accidental release while vehicle is parked. Perform this modification according to the following procedure.

MATERIAL

Part No	Description	Qty
39-1727	Parking Brake Button Protector	1
64-1149 (if applicable)	Square Parking Brake Button	1

Note: Material can be obtained through regular channels.

Note: Square parking brake button should be ordered for all coaches equipped with circular button. These vehicles are all Prestige, Le Mirage, Marathon, Prévost XL and Astral XL Coaches; and Le Mirage XL Coaches up to 2P9L33408L1001587 inclusively.

SAFETY RECALL

PROCEDURE

Warning: Park vehicle safely, apply parking brake, stop engine and set battery master switch(es) to the "OFF" position prior to working on the vehicle.

Warning: The vehicle must be on a plane surface, and the wheels must be blocked by means other than brakes.

1. Drive the button roll-pin out with a punch and remove the parking brake button.

Note: The parking brake is located on the right-hand console, right of driver's seat. See figure 1.

2. With parking brake button in protector oriented so roll pin can be installed (the new yellow button for vehicles equipped with the black one), put protector in place. Secure it by installing the roll pin.

Note: The operation of the parking brake will be modified by the addition of the protector. To apply parking brake, lift protector clw button; to release parking brake, open protector cover and push yellow button.

Note: The parking brake button and its protector are completely pivoting.

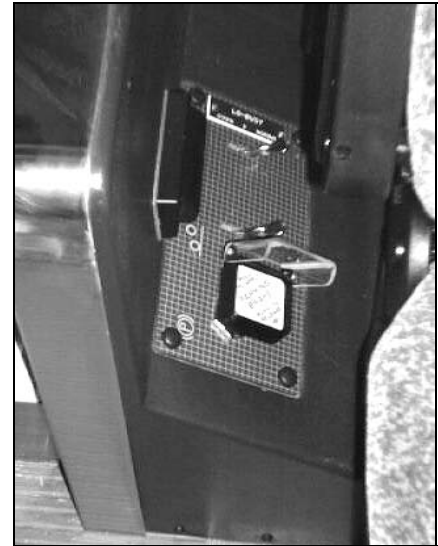


Figure 1

12013

WARRANTY

This modification is covered by manufacturer's normal warranty. We will reimburse you the parts and one quarter of an hour (0.25) of labor upon receipt of a completed A.F.A. form on which you must specify as per "Warranty Bulletin 95-01".



PREVOST

**Safety Recall
Certification Sheet
(Ref: Sr95-01)**

ENREGISTRÉ - REGISTERED
ISO 9001 & ISO 14001



SERIAL NUMBER: _____

PERFORMED BY		OWNER/OPERATOR	
We hereby certify that Safety Recall Instructions with regard to Safety Recall #95-01 have been performed.			
Name: _____		Name: _____	
Addr: _____		Addr: _____	
Phone: _____		Phone: _____	
Fax: _____		Fax: _____	
Signature :	_____	Signature :	_____
Date:	_____	Date:	_____

If the information mentioned above is incorrect or you are not the owner of this vehicle anymore, please fill this section and return to sender..

NEW OWNER: _____

BUSINESS: _____

ADDRESS (including County): _____

TELEPHONE: _____ **FAX:** _____

**Please return this completed document with your
A.F.A. form**